 
 
 



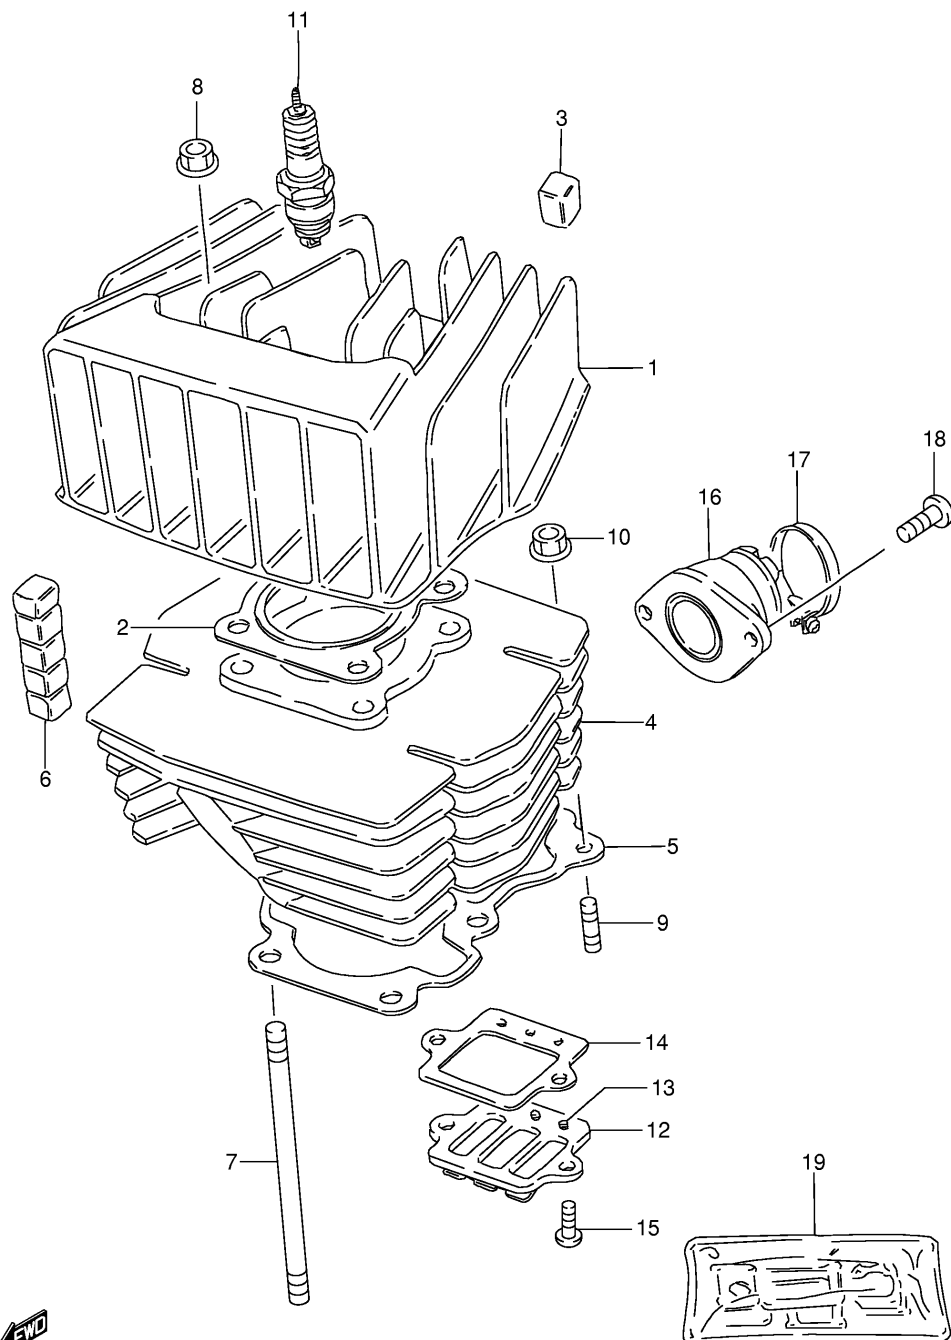


Ref No	Part No	Description
1	11111-23402	Cylinder Head
2	11141-23450	Gasket, Cylinder Head
3	11151-40900	Rubber Pad
4	11210-23450-0F0	Cylinder
5	11241-23411	Gasket, Cylinder
6	11251-36500	Rubber Pad (n9->6)
7	09108-08056	Stud Bolt (l:120)
8	08316-10083	Nut
9	01421-06208	Stud Bolt (white)
9	01421-06203	Stud Bolt (green)
10	08316-10063	Nut
11	09482-00239	Spark Plug (ngk,bpr8es)
11	09482-00240-111	Spark Plug (denso,w24epr)
11	09482-00091	Spark Plug (ngk,b8es)
11	09482-00092	Spark Plug (denso,w24es)
12	13150-23400	Valve Assy, Reed
13	02112-03083	• . Screw, Reed Valve
14	13156-23411	Gasket
15	02112-06123	Screw
16	13110-23401	Pipe, Intake
17	09402-36208	Clamp
18	02112-36163	Screw
19	11400-23860	Gasket Set

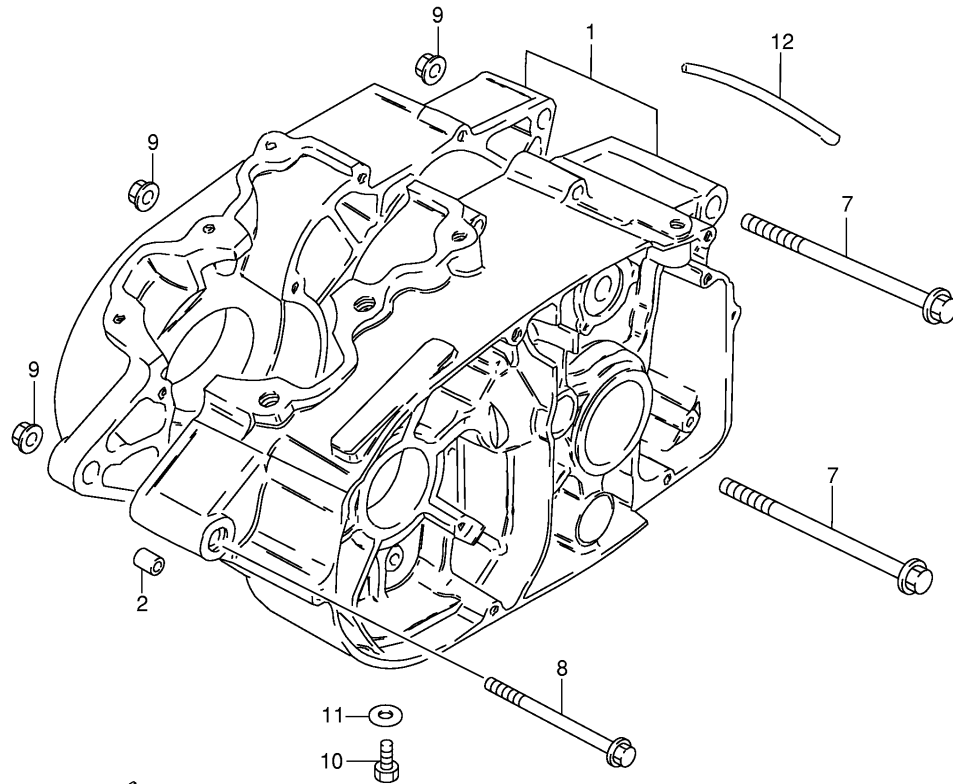

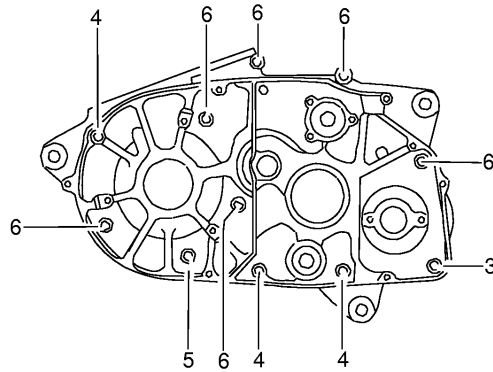

Ref No	Part No	Description
1	11300-23860	Crankcase Set
2	04211-09129	• . Pin
3	02112-06653	• . Screw
4	02112-06603	• . Screw
5	02112-06553	• . Screw
6	02112-06453	• . Screw
7	09103-08098	Bolt, Engine Mounting (8x115)
8	09103-08158	Bolt, Engine Mounting (8x75)
9	08319-31087	Nut
10	09247-10001	Plug, Oil Drain
11	09168-10002	Gasket
12	13680-35000	Hose, Breather

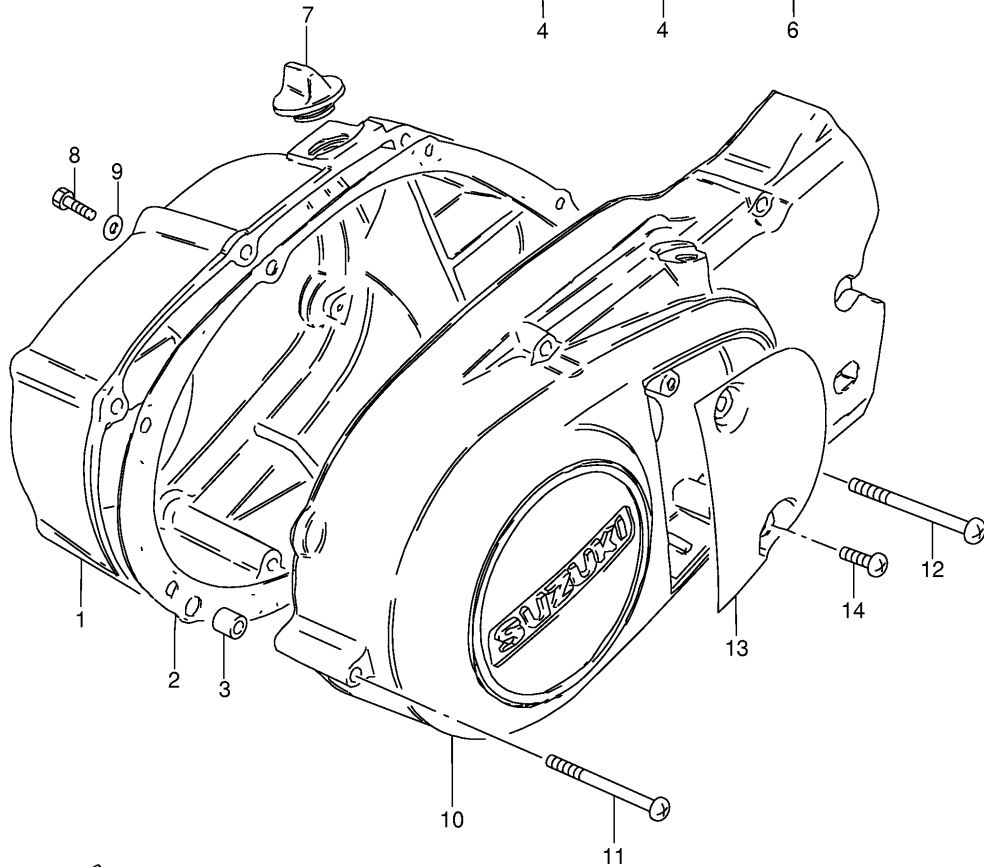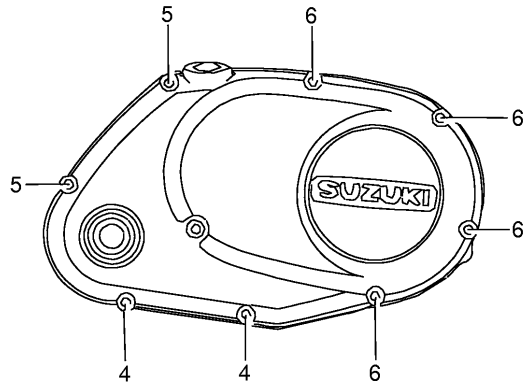  



Ref No	Part No	Description
1	11341-23402	Cover, Clutch
2	11482-23410	Gasket
3	04211-09129	Pin
4	02112-06307	Screw
5	02112-06357	Screw
6	02112-06807	Screw
7	09200-20810	Plug, Oil Filler
8	09128-06044	Plug, Oil Level
9	09168-06004	Gasket (6.2x11x1.2)
10	11351-23403	Cover, Magneto
11	02112-05457	Screw
12	02112-05557	Screw
13	11387-23403	Cap, Clutch Release
14	02122-05123	Screw

Ref No Part No

Description


1	12110-23460-0F0	Piston (std)
2	12140-234A0	Ring Set, Piston (std)
2	12140-234A0-050	Ring Set, Piston (os:0.5)
2	12140-234A0-100	Ring Set, Piston (os:1.0)
3	12151-23400	Pin, Piston
4	09381-14001	Circlip
5	09263-14022	Bearing
6	12200-23460	Crankshaft Assy
7	12161-05B00	• . Rod, Connecting
8	09160-22010	• . Washer (22x35x1)
9	12211-05B00	• . Pin, Crank
10	09263-22046	• . Bearing (14x18x19.8)
11	12221-23460	• . Crankshaft, Rh
12	12261-23460-0A0	• . Crankshaft, Lh
13	09283-20034	Oil Seal, Lh
14	09262-25070-0A0	Bearing, Lh
15	09262-20073	Bearing, Rh
16	09283-26007	Oil Seal, Rh
17	21111-07001-0A0	Gear, Primary Drive (nt:16)
18	09180-20037	Spacer
19	09140-14002	Nut
20	09166-14008	Washer
21	09420-04008	Key
22	12100-23460-050	Piston Set (os:0.5)
22	12100-23460-100	Piston Set (os:1.0)
23	12105-23820	Con Rod Set (including Ref.no.5,7,8,9,10)

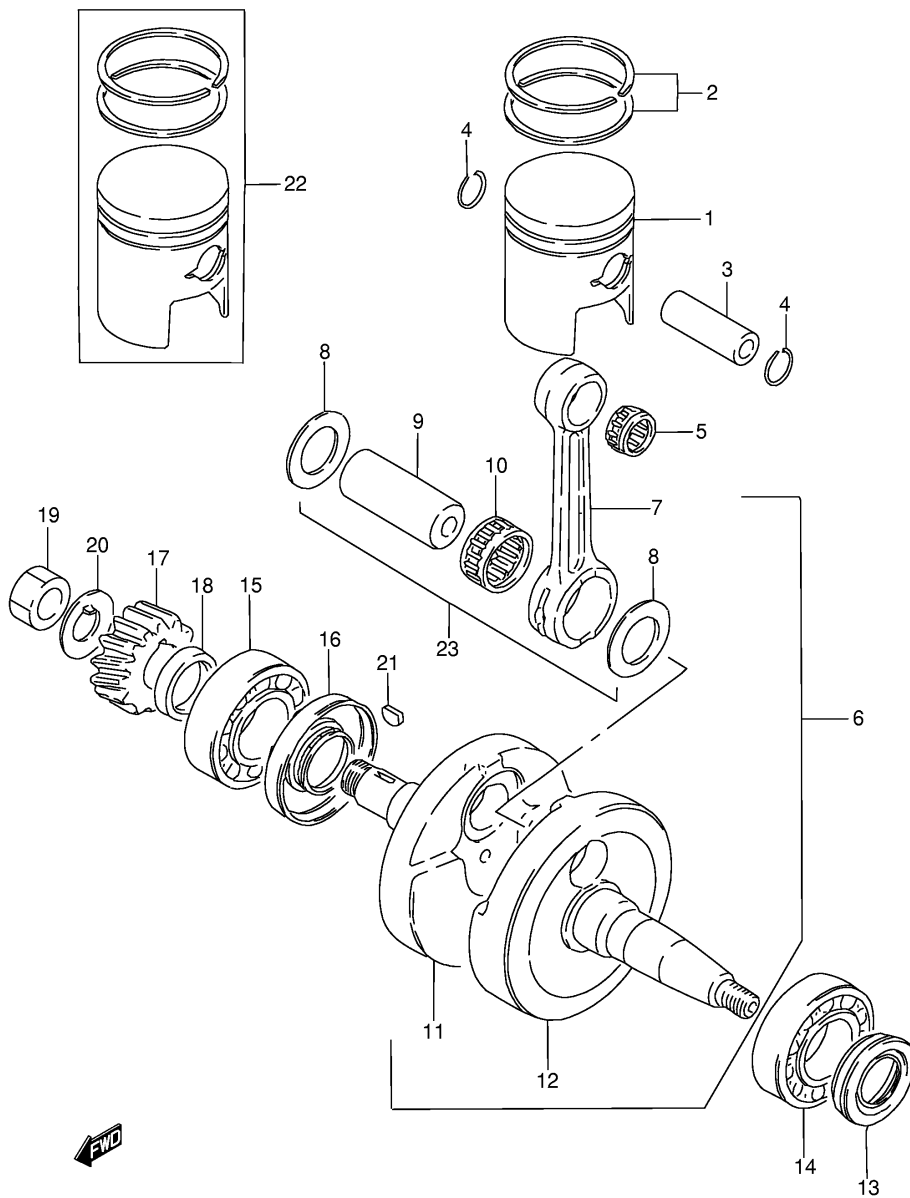 


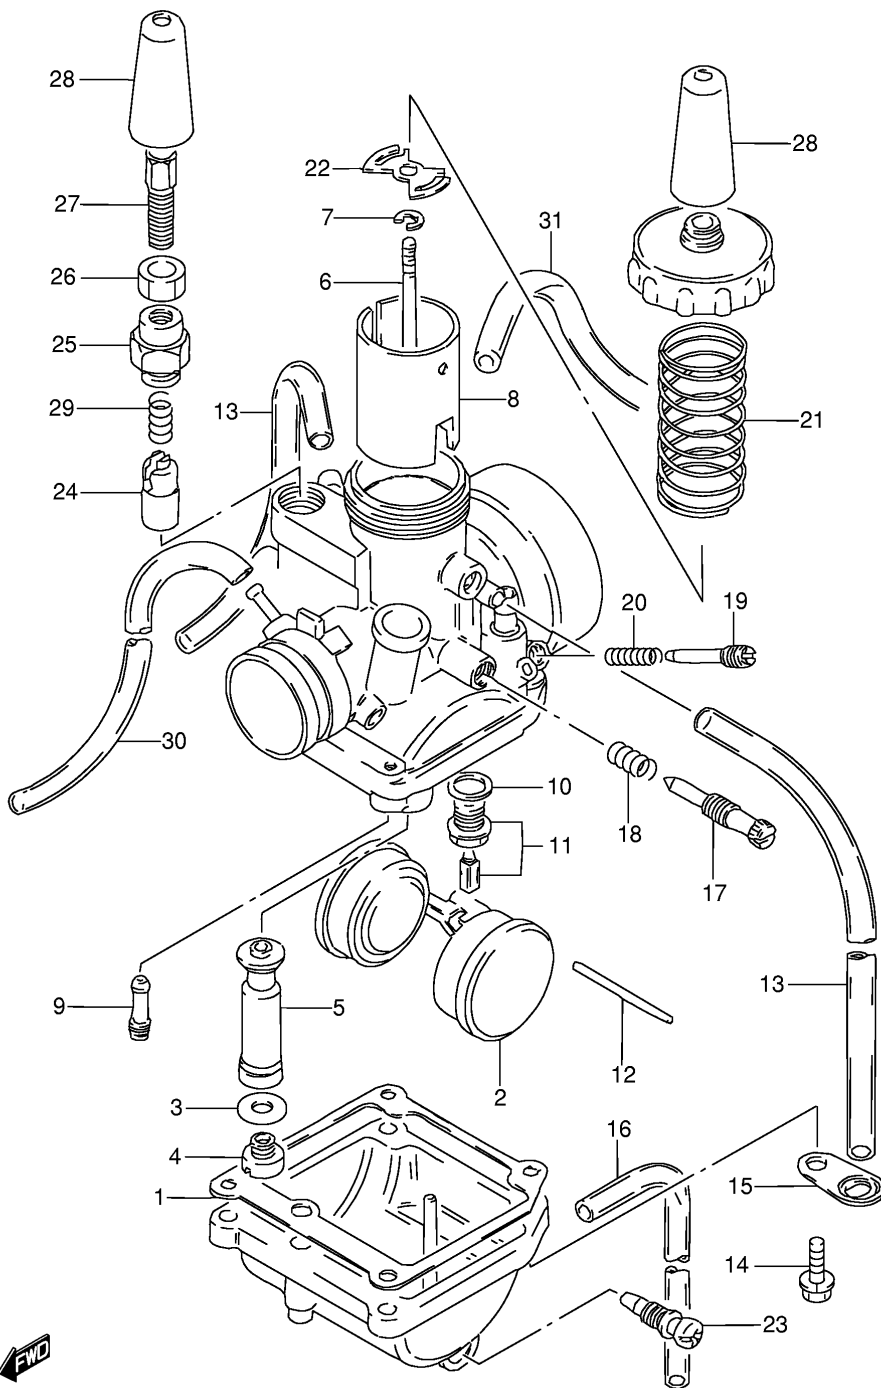 

Ref No	Part No	Description
	13200-23490	Carburetor Assy
	13200-23491	Carburetor Assy
	13200-234B0	Carburetor Assy
1	13251-23010	. . Gasket
2	13250-04700	. . Float
3	13382-03110	. . Washer
4	09491-97003	. . Jet, Main (97.5)
5	09494-00418	. . Jet, Needle (o-8)
5	09494-00924	. . Jet, Needle (o-9)
6	13383-23400	. . Needle, Jet (4d01-2)
7	13394-10010	. . E Ring
8	13551-23400	. . Throttle Valve (ca:1.5)
9	09492-20008	. . Jet, Pilot (20)
10	13392-01010	. . Washer
11	13370-23420	. . Valve Assy, Needle
11	13370-23010	. . Valve Assy, Needle
12	13254-01010	. . Pin
13	09352-30503-600	. . Hose, Air Vent (3x5x600)
14	13601-04148	. . Screw
15	13693-30010	. . Plate, Hose Clip
16	13684-40A00	. . Hose, Over Flow (3x5x650)
17	13267-95110	. . Screw, Throttle Stop
18	13268-48700	. . Spring
19	13269-95110	. . Screw, Air (1,1/2)
20	13268-01010	. . Spring
21	13573-36110	. . Spring, Throttle Valve Return
22	13581-09210	. . Plate
23	13247-02340	. . Screw, Drain
24	13411-01010	. . Valve, Starter
25	13418-03110	. . Cap, Starter
26	13661-16600	. . Nut
27	13577-22600	. . Adjuster, Cable
28	13681-33010	. . Cap
29	13417-01010	. . Spring, Starter
30	09355-25705-600	. . Hose (2.5x7x600)
31	09355-35755-600	. . Hose (3.5x7.5x600)


Ref No	Part No	Description
1	13700-23400	Cleaner Assy, Air
2	13780-23401	• . Filter
3	13740-23400	• . Cap
4	02142-05257	• . Screw
5	13881-23400	• . Tube, Outlet
6	13826-23400	• . Clamp, Cleaner Side
7	09402-50306	• . Clamp, Carburetor Side
8	09136-06017	Screw (6x16)
9	15770-23401	Compensator Assy, Altitude
10	01570-06163	Bolt

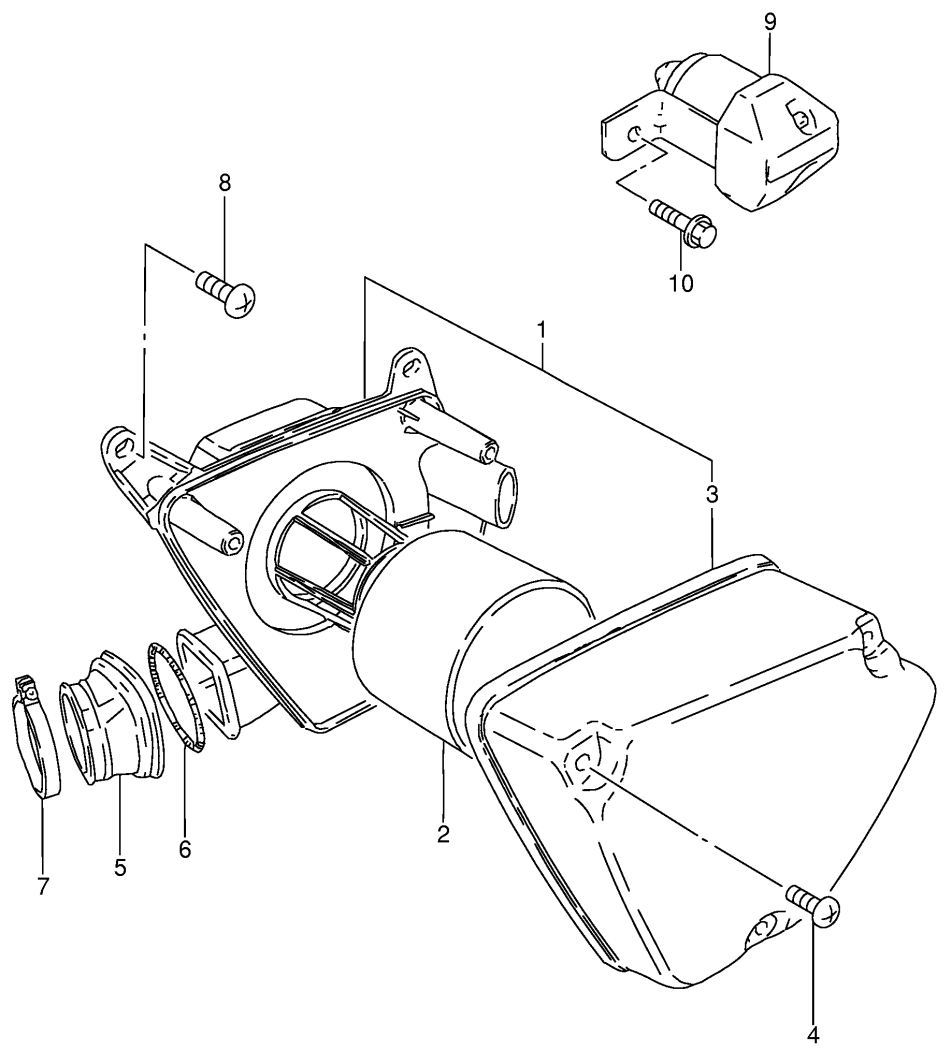 


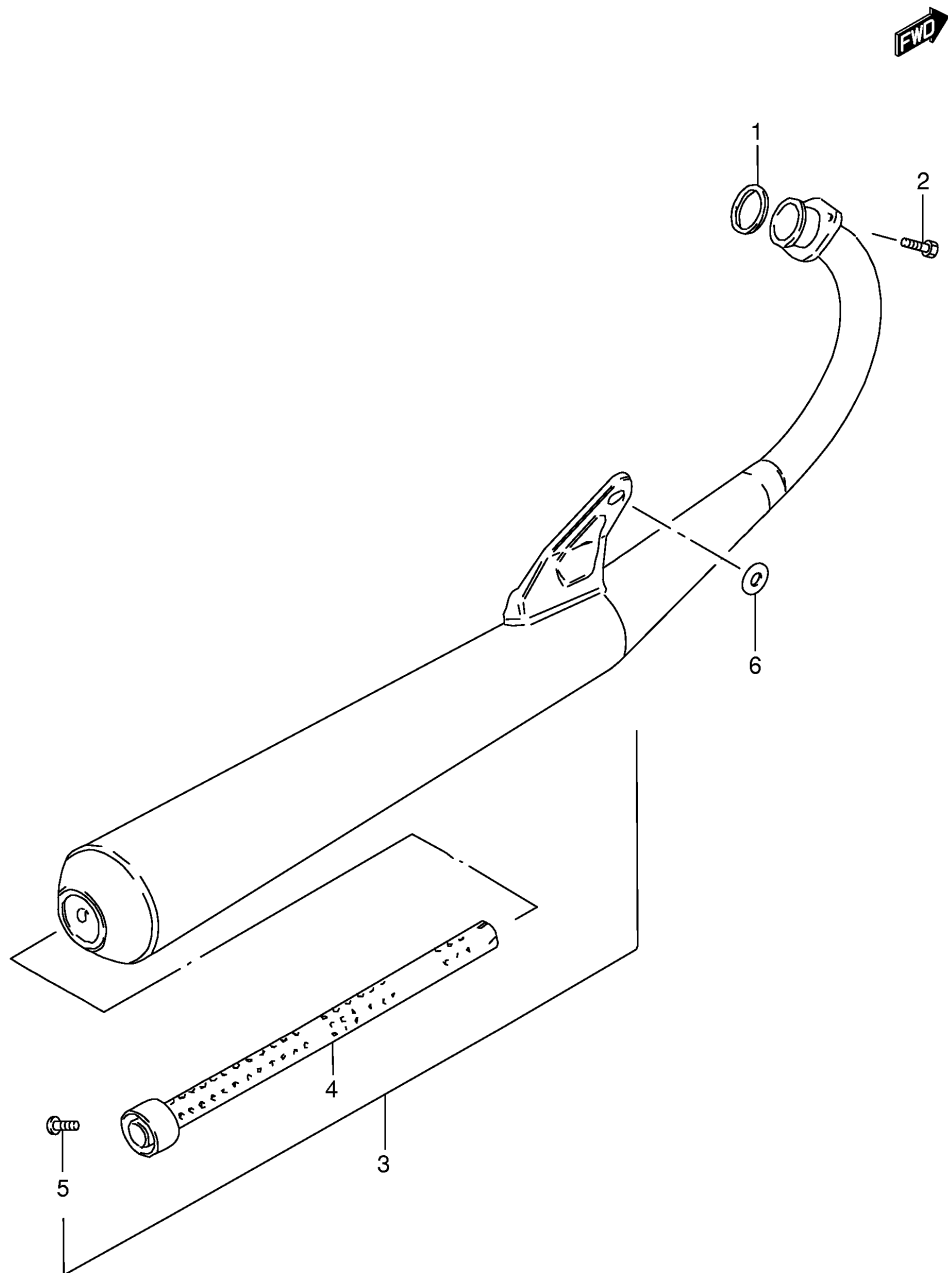 


Ref No	Part No	Description
1	14181-01D00	Gasket
2	01570-08257	Bolt
3	14301-23411	Muffler Assy
4	14510-39150	• . Pipe, Baffle
5	02112-35083	• . Screw
6	09160-12082	Washer

Ref No	Part No	Description
1	11385-23403	Cap, Oil Pump, Inspection
2	02112-05083	Screw
3	16100-23404	Pump Assy, Oil
4	16292-03112	Terminal, Cable
5	16731-03101	Gasket, Oil Pump
6	16391-05031	Piece, Drive
7	02112-35163	Screw
8	02112-35303	Screw
9	09404-06432	Clamp (l:60)
10	09119-08014	Bolt
11	08310-00083	Nut
12	16820-23404	Hose (l:440->50)
13	09401-04401	Clip
14	09401-08401	Clip

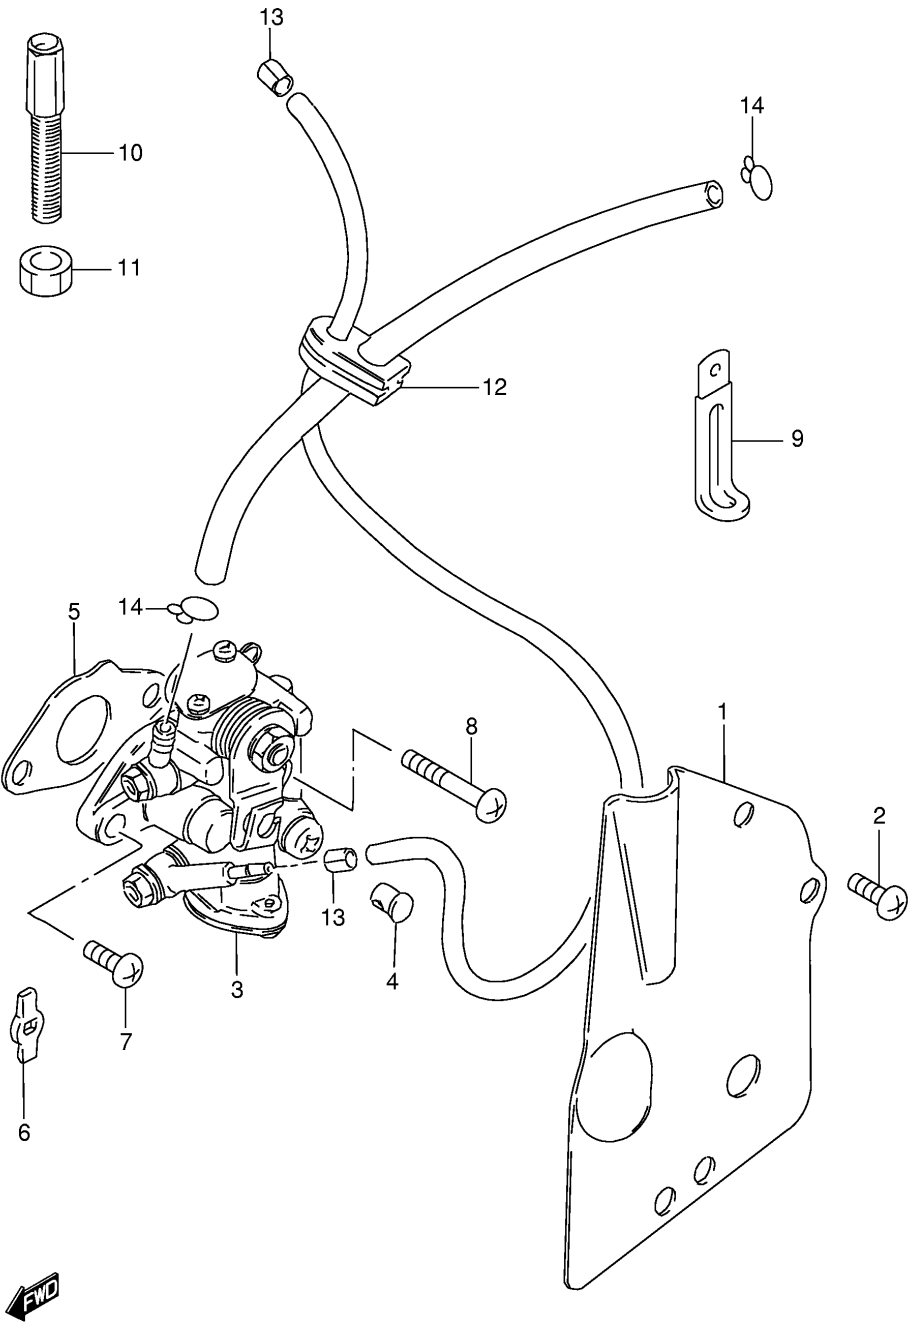 


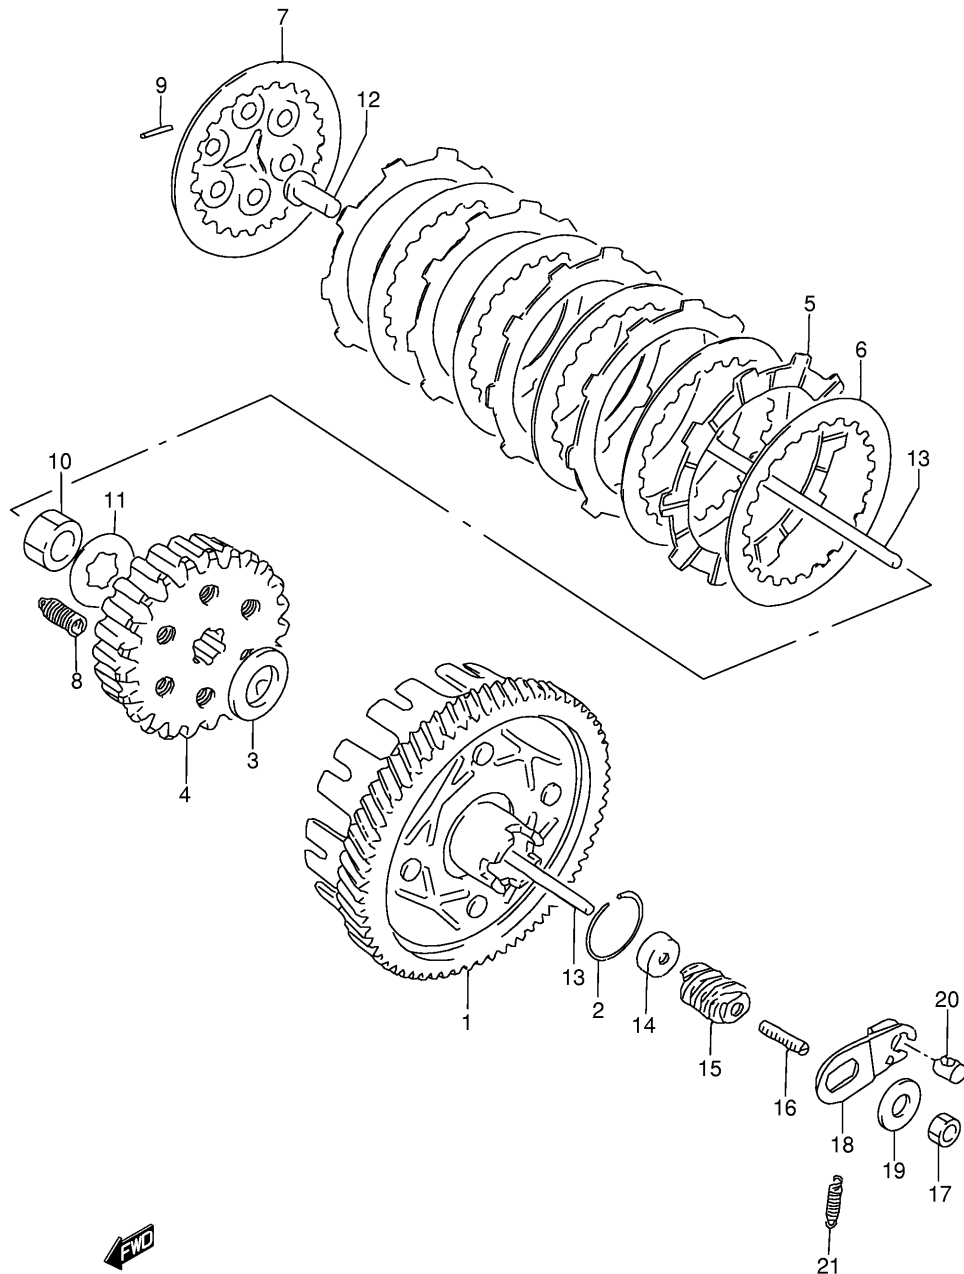 


Ref No	Part No	Description
1	21200-12012	Gear Assy, Primary Driven
2	09380-30005	Clip
3	08211-17282	Washer
4	21411-23010	Hub, Clutch
5	21441-12020	Plate, Clutch Drive
6	21451-23000	Plate, Clutch Driven
7	21460-23000	Plate, Clutch Pressure
8	09443-12010	Spring, Clutch
9	09261-02001	Pin
10	09140-16005	Nut
11	09167-17002	Washer
12	23121-09210	Piece, Clutch Release
13	23111-12000	Rod, Clutch Push
14	09285-05004	Oil Seal (5.5x16x8)
15	23211-36200	Screw ,clutch Release
16	09134-06010	Screw
17	09140-06023	Nut
18	23212-07202	Arm, Release
19	09160-06066	Washer (6.5x20x1.6)
20	23222-36A00	Piece, Arm End
21	09443-08001	Spring

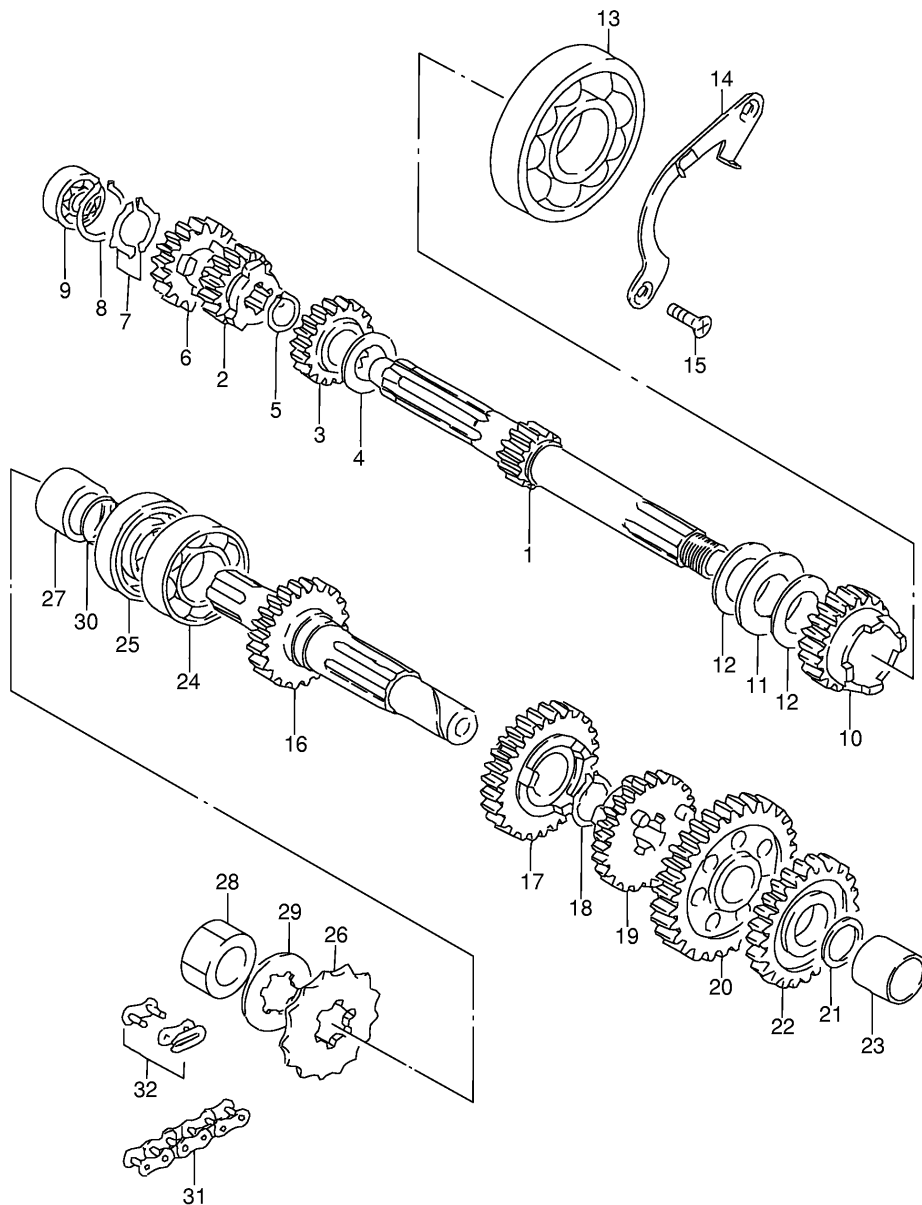 

Ref No	Part No	Description
1	24121-12003	Countershaft (nt:11)
2	24221-23001	Gear, 2nd Drive (nt:15)
3	24231-12021	Gear, 3rd Drive (nt:18)
4	09181-17139	Washer (17x24x1.0)
5	09380-17001	Circlip
6	24241-12021	Gear, 4th Drive (nt:22)
7	09399-14001	Ring, 4th Drive Gear
8	09380-26001	Circlip
9	09262-12001	Bearing, Countershaft Lh
10	26280-23010	Gear, Kick Starter Driven
11	09263-21007	Bearing (21x32x2)
12	09160-21007	Washer (21x30x0.8)
13	09262-30003	Bearing, Countershaft Rh
14	24741-12010	Plate, Countershaft Bearing
15	02122-06123	Screw
16	24131-12022	Driveshaft (nt:21)
17	24321-12021	Gear, 2nd Driven (nt:27)
18	08331-31206	Circlip
19	24331-12021	Gear, 3rd Driven (nt:23)
20	24310-12021	Gear 1st Driven (nt:32)
21	08211-15301	Washer
22	26260-23010	Gear, Kick Starter Idle
23	09303-15004	Bushing, Driveshaft
24	09262-20069	Bearing (20x47x14)
25	09283-25003	Oil Seal (25x40x9)
26	27511-08720	Sprocket, Engine (nt:14)
27	09180-20016	Spacer (20x25x15.5)
28	09140-20012	Nut
29	09167-20009	Lock Washer
30	09280-20001	O Ring (d:1 ,id:19.5)
31	27600-20910-126	Chain, Drive (did 428)
31	27600-20910-112	Chain, Drive (did 428)
32	27620-20910	• . Joint (did)

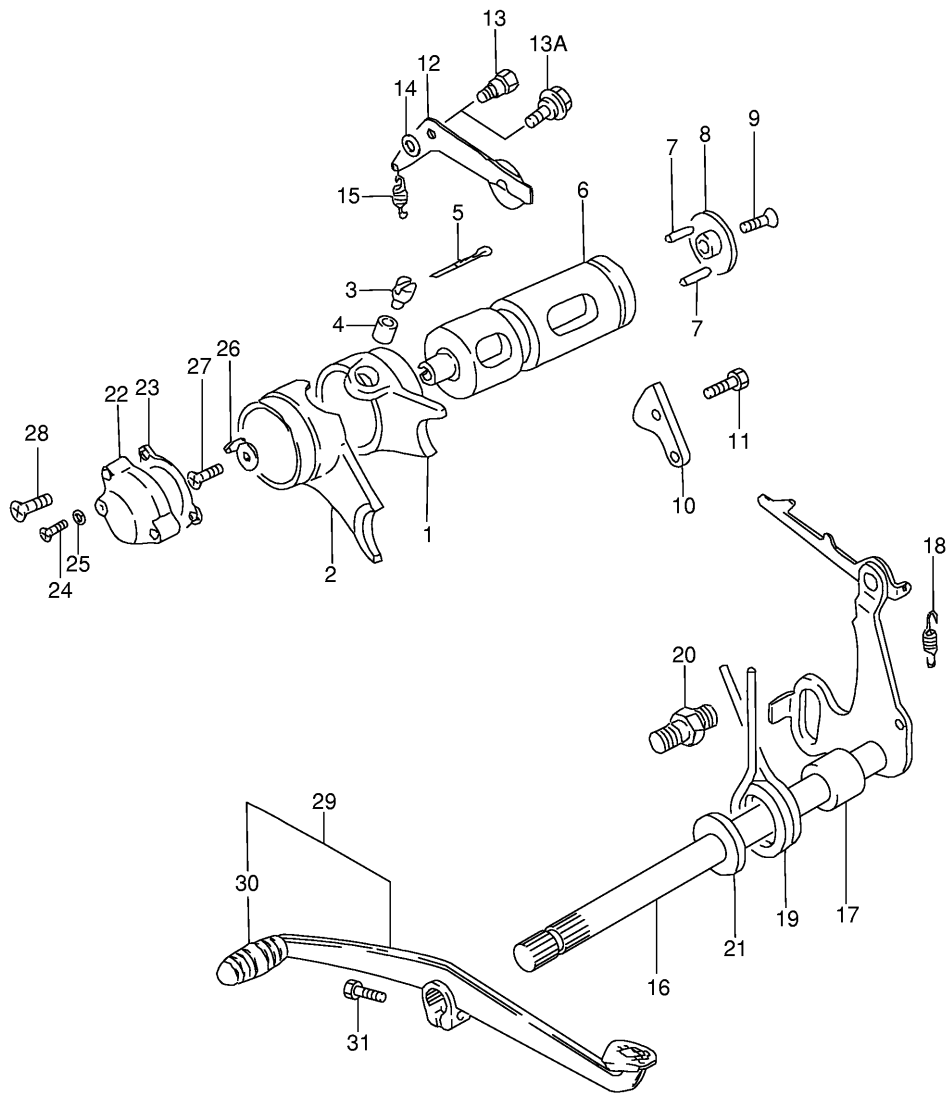 


Ref No	Part No	Description
1	25211-23001	Fork, Gear Shifting No.1
2	25221-03601	Fork, Gear Shifting No.2
3	09209-10002	Pin (I:19.5)
3	09209-10017	Pin (I:22.5)
4	09180-06086	Roller
5	04111-25208	Cotter Pin
6	25311-03602	Cam, Gear Shifting
7	09261-04003	Pin
8	25322-46000	Retainer, Drive Pin
9	02122-06203	Screw
10	25341-03000	Guide, Gear Shifting Cam
11	01500-06163	Bolt
12	25350-12000	Stopper, Cam
13a	09111-06054	Bolt (6x14.6)
14	08322-01063	Washer
15	09443-07014	Spring
16	25510-12102	Shaft, Gear Shifting
17	09180-12083	Spacer, Gear Shift
18	09443-06008	Spring
19	09444-26008	Spring
20	25671-19000	Stopper, Gear Shifting Arm
21	09285-12002	Oil Seal (12x22x9)
22	37721-05101	Body, Switch
23	37712-01000	Gasket
24	02112-03047	Screw
25	08322-01037	Washer
26	37711-05101	Contact
27	02122-06123	Screw
28	02112-74203	Screw
29	25600-23400	Lever Assy, Gear Shifting
30	25652-16500	• . Rubber
31	01500-06203	Bolt

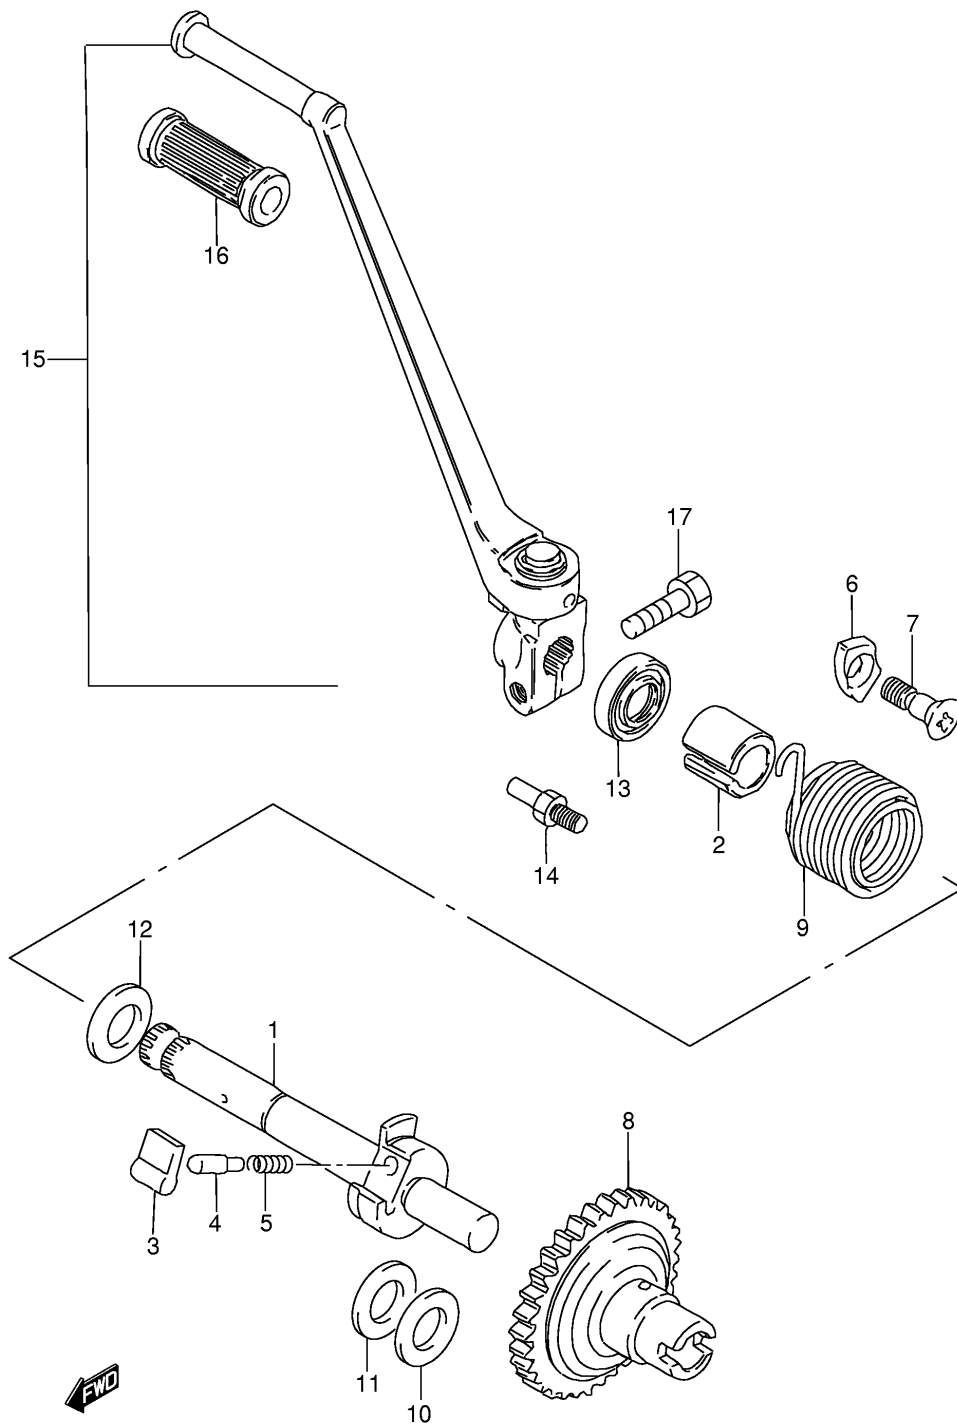 


Ref No	Part No	Description
--------	---------	-------------

1	26211-23401	Shaft, Kick Starter
2	26221-46000	Guide, Spring
3	26231-20000	Pawl, Kick Starter
4	09209-05011	Pin, Pawl
5	09440-04010	Spring
6	26232-01000	Stopper, Kick Starter
7	02122-06163	Screw
8	26241-12010	Gear, Kick Starter Drive
9	09448-41003	Spring
10	09164-12024	Washer, Wave
11	08211-12302	Washer (12x30x1.5)
12	09160-16016	Washer (16x30.5x0.5)
13	09285-16002	Oil Seal (16x30x8)
14	26237-20400	Hook
15	26300-23401	Lever Assy, Kick Starter
16	26352-01000	• . Rubber
17	01500-08253	Bolt


Ref No	Part No	Description
1	32101-23410	Stator Assy
2	32120-48710	• . Coil, Lighting
3	09125-04023	• . Screw (4x30)
4	08321-01043	• . Lock Washer
5	32140-35410	• . Coil, Primary
6	02112-04163	• . Screw
7	08321-01043	• . Lock Washer
8	32102-35330	Rotor Assy
9	02142-05123	Screw
10	08316-10103	Nut
11	08341-31039	Key

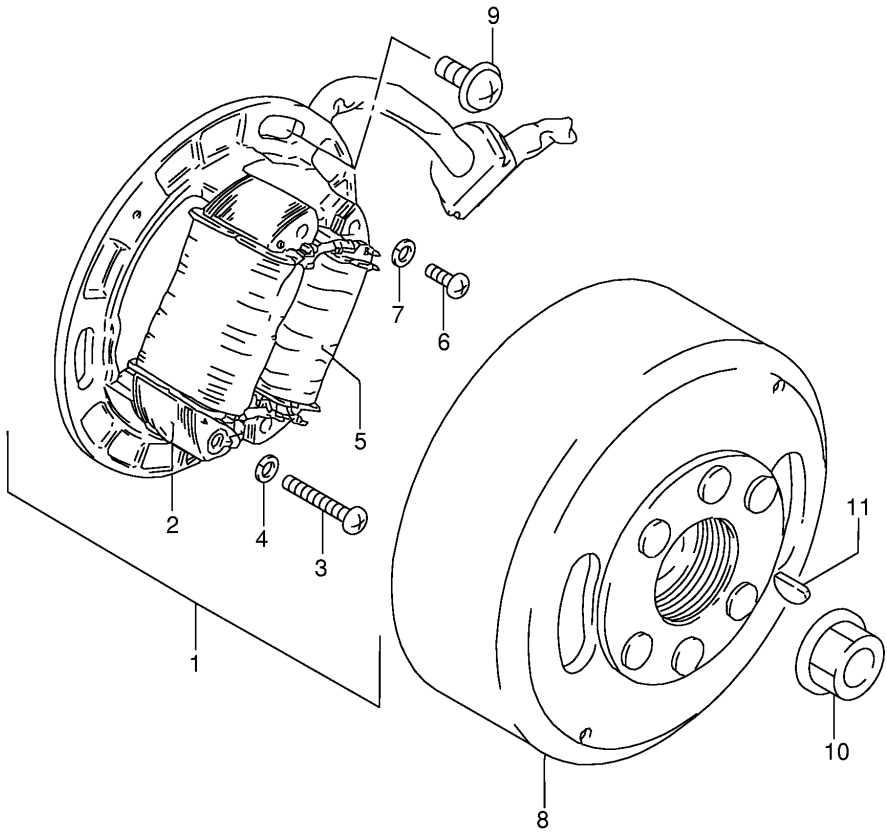 


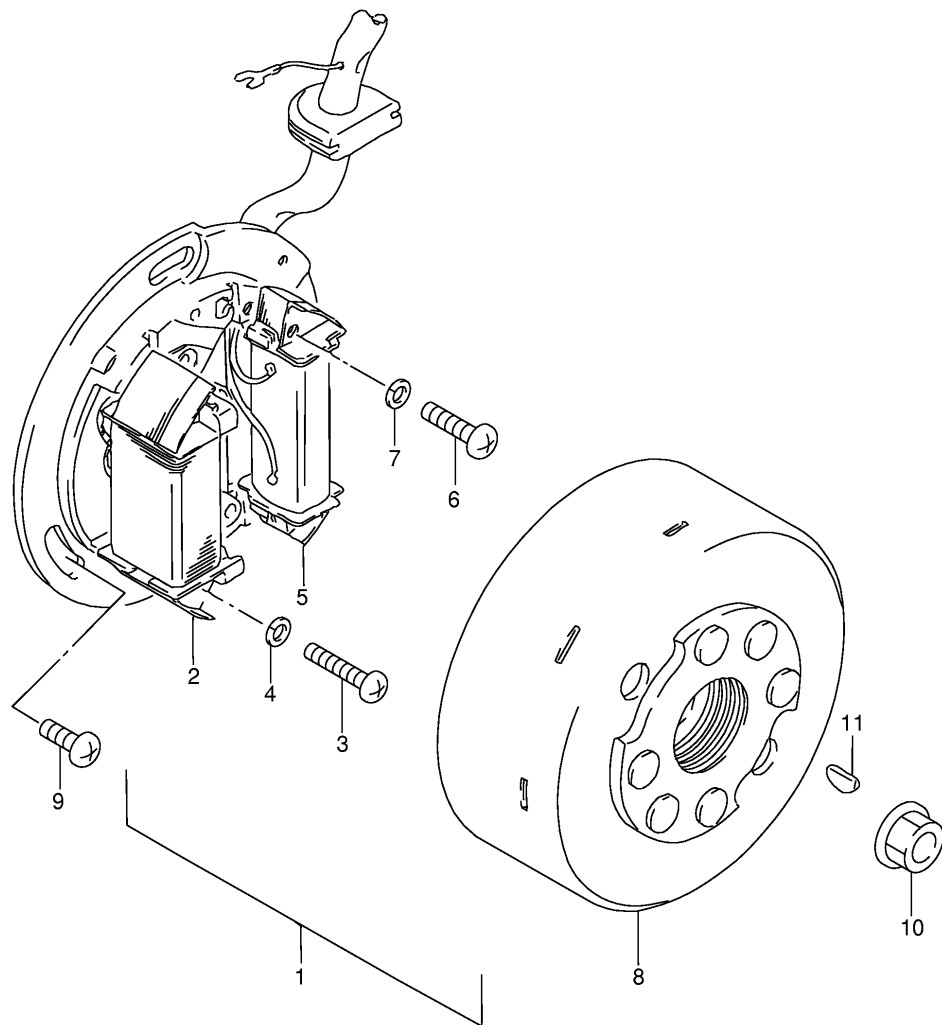 

Ref No	Part No	Description
1	32101-23420	Stator Assy
2	32120-23420	• . Coil, Lighting
3	02112-04253	• . Screw
4	08321-01043	• . Lock Washer
5	32140-23420	• . Coil, Primary
6	02112-04203	• . Screw
7	08321-01043	• . Lock Washer
8	32102-23420	Rotor Assy
9	02142-05123	Screw
10	08316-10103	Nut
11	08341-31039	Key


Ref No	Part No	Description
1	33410-48710	Unit & Coil Assy, Ignition
2	02112-06203	Screw
3	08321-01067	Lock Washer
4	33510-22010	Cap, Spark Plug
5	33541-69010	Seal, Spark Plug
6	33542-38B00	Seal, Hightension Cord
7	33610-03010	Battery (6v,4ah)
8	33651-43200	Band, Battery
9	32800-16A00	Rectifier
10	02112-05207	Screw
11	08321-01057	Lock Washer
12	08322-01057	Washer
13	41540-23451	Holder, Battery
14	01550-06123	Bolt
15	33651-37000	Protector (170x95x3.0)

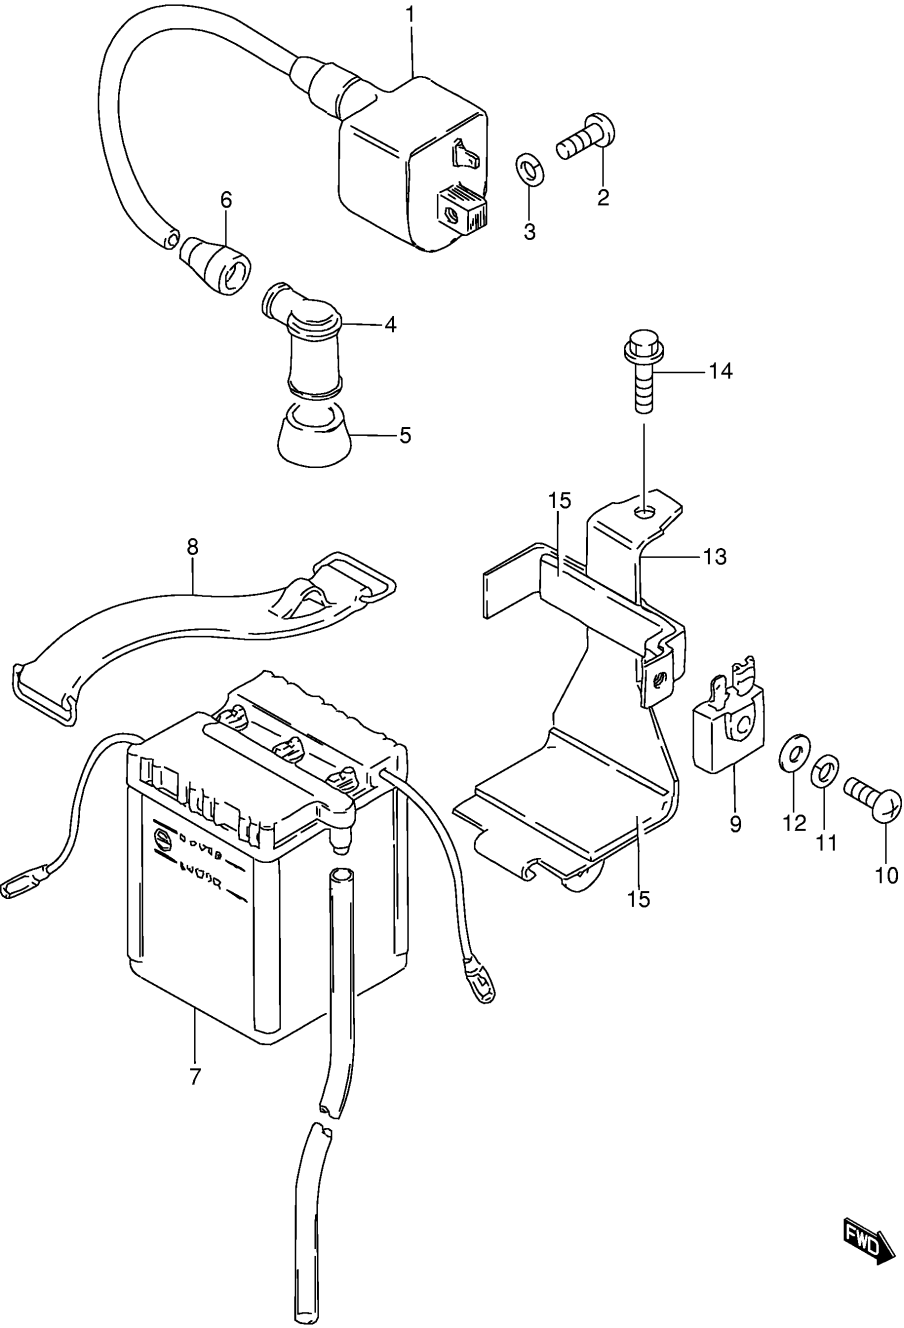 

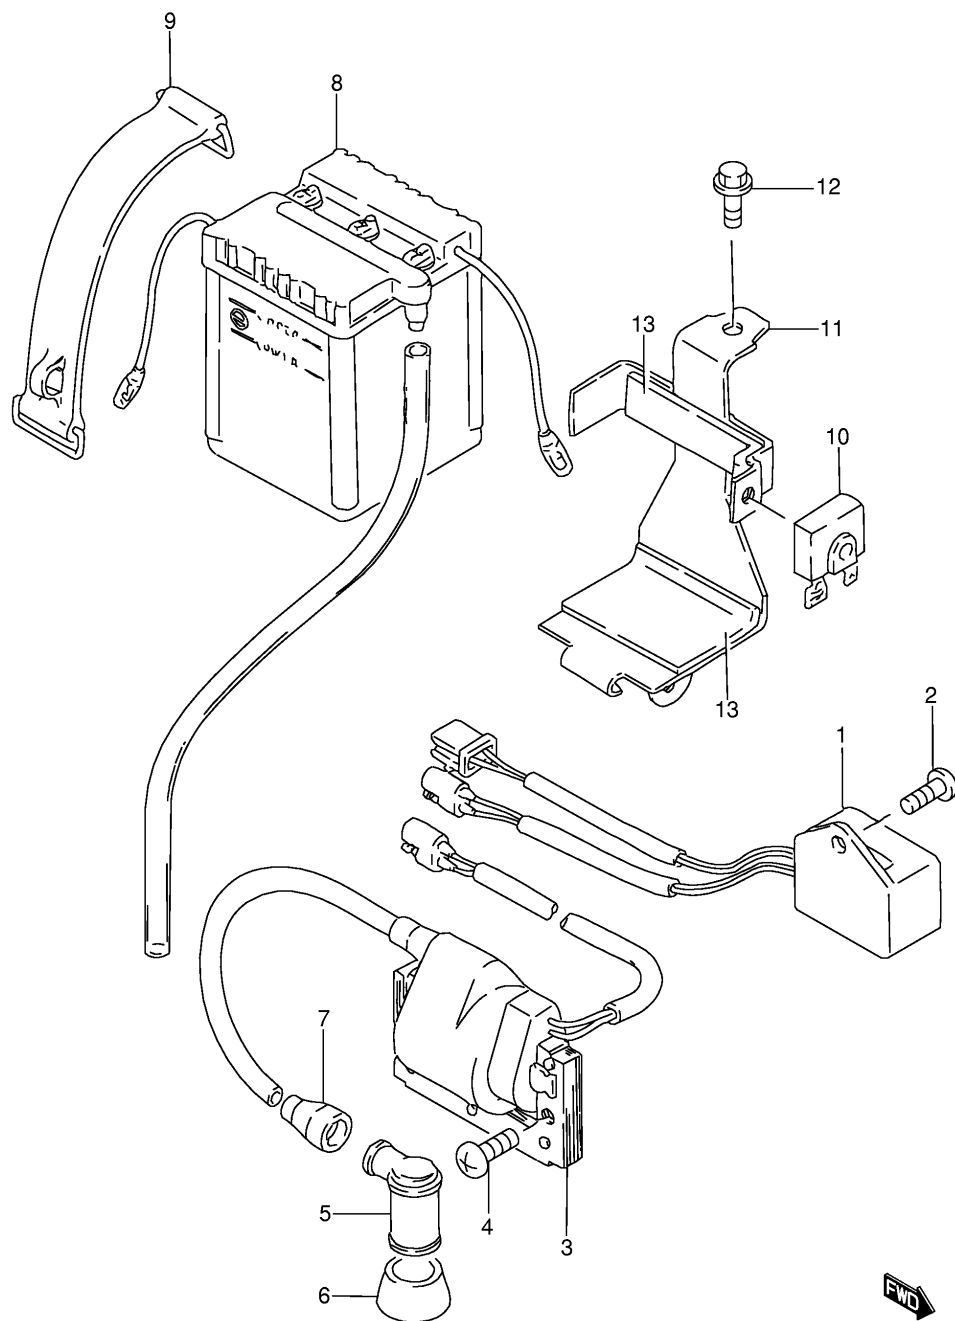 


Ref No	Part No	Description
1	32900-23420	Cdi Unit Assy
2	02112-06123	Screw
3	33410-23420	Coil Assy, Ignition
4	09129-06003	Screw
5	33510-22010	Cap, Spark Plug
6	33541-69010	Seal, Spark Plug
7	33542-38B00	Seal, Hightension Cord
8	33610-03010	Battery (6v,4ah)
9	33651-43200	Band, Battery
10	32800-16A00	Rectifier
11	41540-23451	Holder, Battery
12	01550-06123	Bolt
13	33651-37000	Protector (170x95x3)




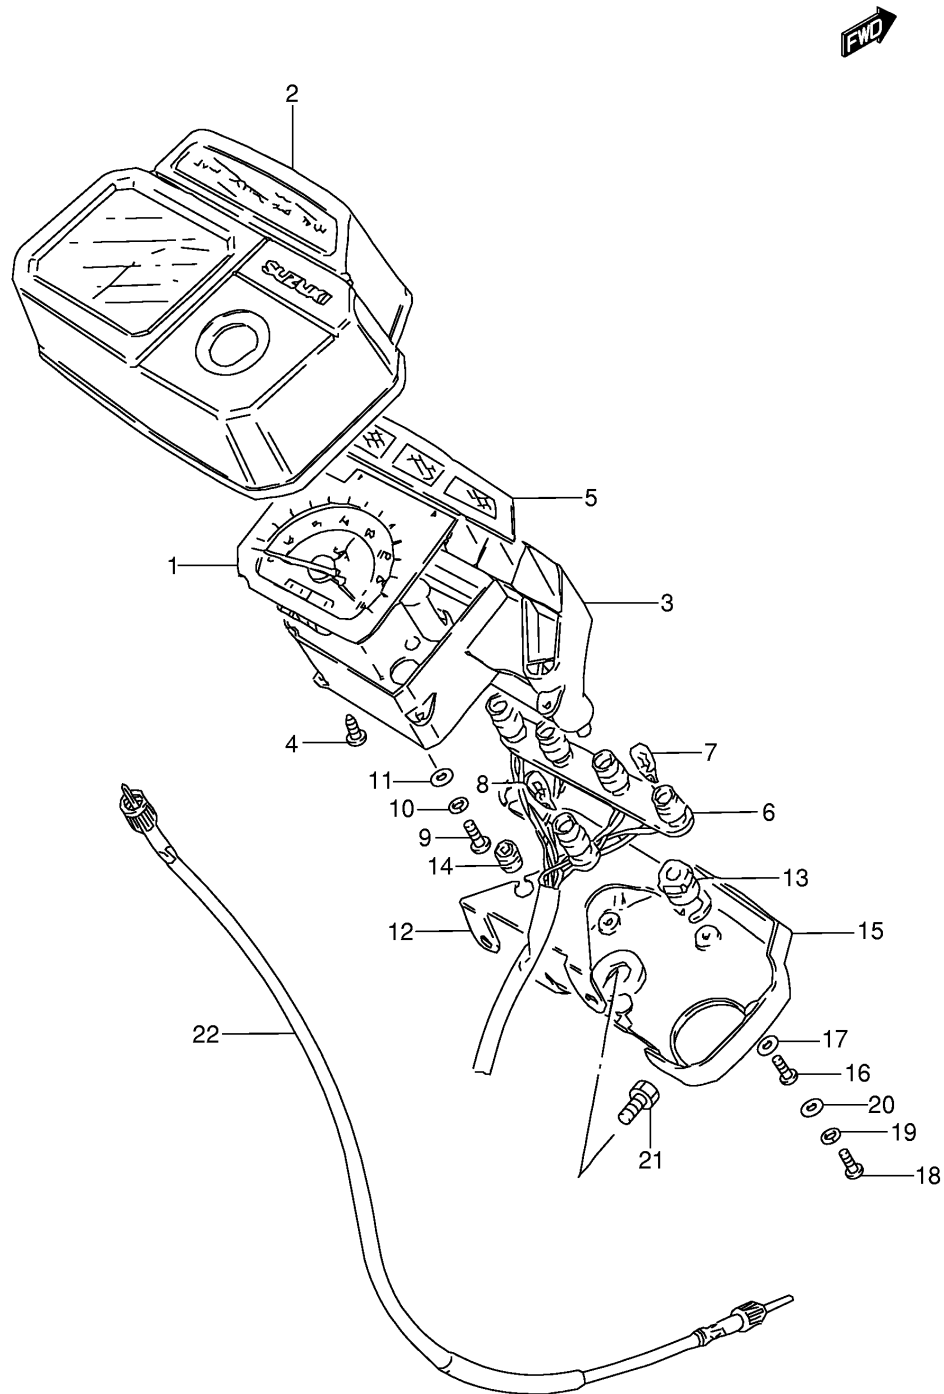 

Ref No	Part No	Description
1	34110-23440	Speedometer
2	34150-23410	Hood, Meter
3	34111-23410	Case, Meter
4	03212-04169	Screw
5	36386-23410	Plate, Pilot Lens
6	34173-23410	Socket
7	09471-06053	Bulb (6v,3w)
8	09471-06052	Bulb (6v,1.7w)
9	02112-03103	Screw
10	08321-21033	Lock Washer
11	08322-01033	Washer
12	34950-23411	Bracket, Meter
13	34189-28310	Cushion
14	36384-34510	Cushion
15	34193-23410	Cover, Lower
16	03212-04169	Screw
17	08322-01043	Washer
18	02112-04203	Screw
19	08321-01043	Lock Washer
20	08322-01043	Washer
21	01560-06123	Bolt
22	34910-48990	Cable, Speedometer

Ref No	Part No	Description
1	35100-23400-999	Headlamp Assy
2	35111-23400	• . Rim
3	35121-23400	• . Unit
4	35171-48700	• . Socket
5	35172-33630	• . Spring, Support
6	09471-06072	Bulb (6v,25/25w)
7	02112-75123	Screw

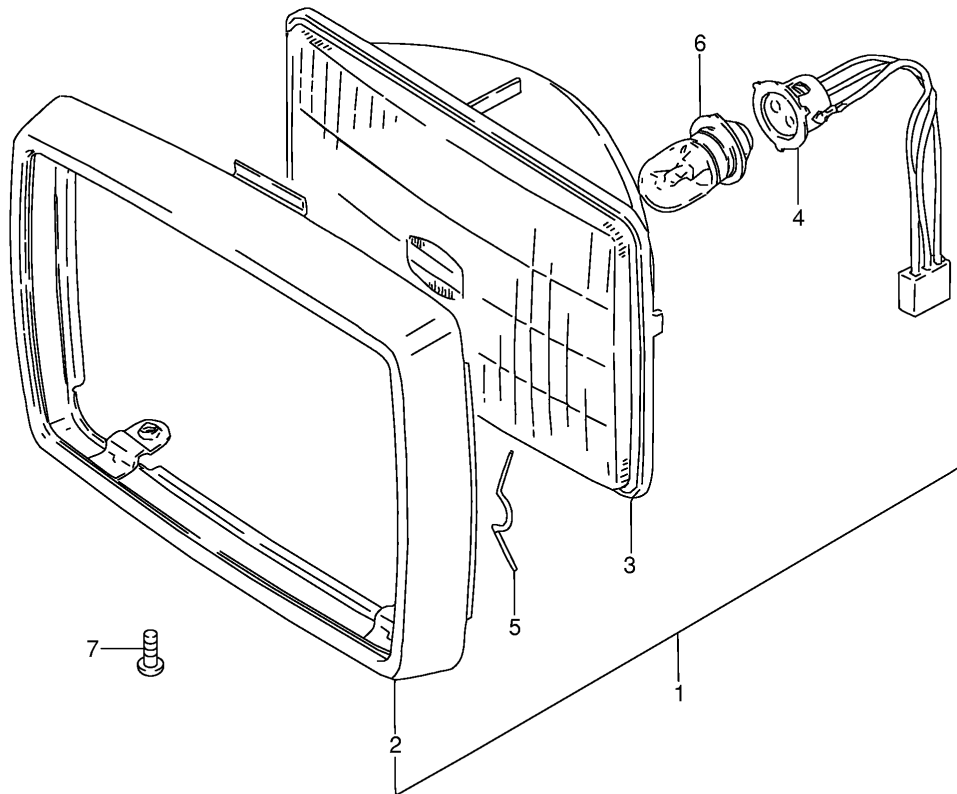 


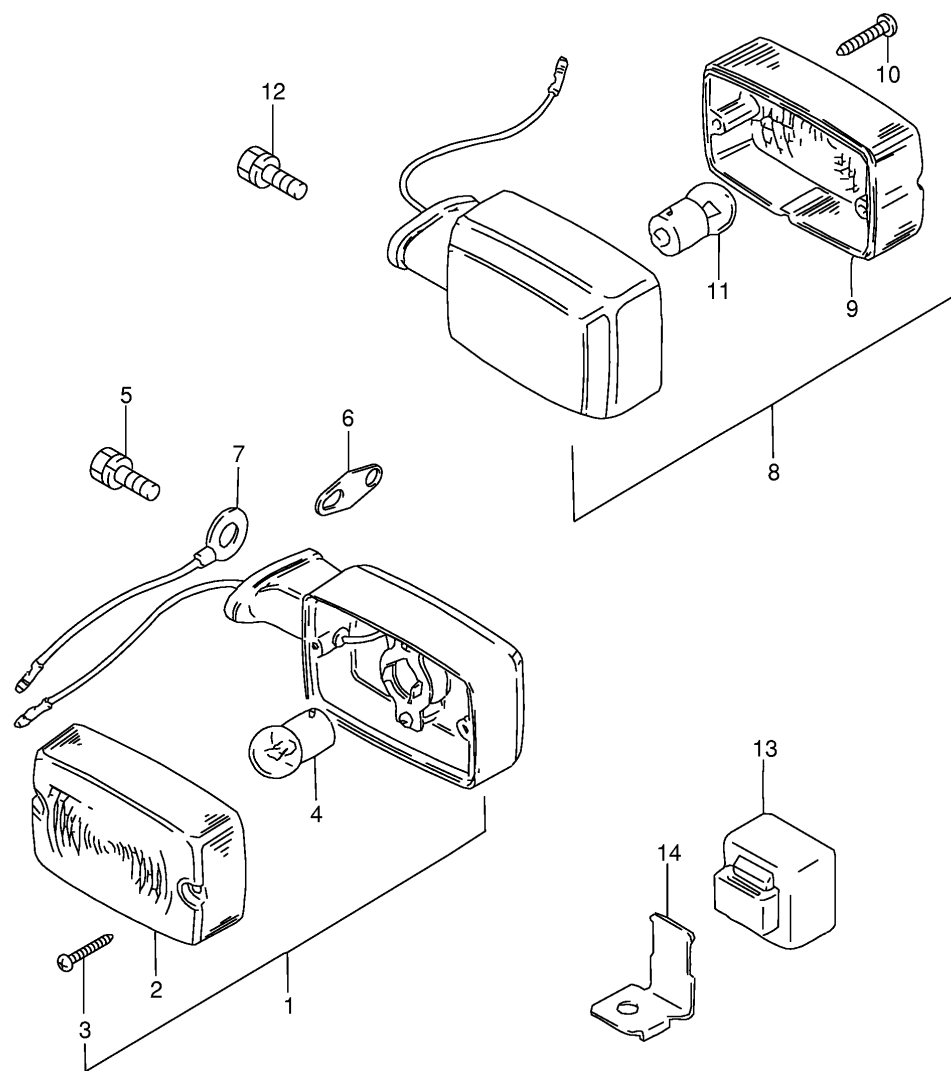 


Ref No	Part No	Description
1	35601-23460	Lamp Assy, Front Turnsignal Rh
1	35602-23460	Lamp Assy, Front Turnsignal Lh
2	35612-35300	• . Lens
3	02112-03258	• . Screw
4	09471-06021	• . Bulb (6v,8w)
5	01570-08163	Bolt
6	35628-23400	Spacer, Front Turnsignal
7	36660-33000	Lead Wire, Earth
8	35603-23460	Lamp Assy, Rear Turnsignal Rh
8	35604-23460	Lamp Assy, Rear Turnsignal Lh
9	35612-35300	• . Lens
10	02112-03258	• . Screw
11	09471-06021	• . Bulb (6v,8w)
12	01570-08163	Bolt
13	38610-09400	Relay, Turn Signal
14	38621-23400	Bracket, Relay




Ref No	Part No	Description
1	35601-26401	Lamp Assy, Front Turnsignal Rh
2	35602-26401	Lamp Assy, Front Turnsignal Lh
3	35612-35300	• . Lens
4	35623-35300	• . Screw (3x28)
5	09471-06021	• . Bulb (6v,8w)
6	09103-06064	Bolt (6x60)
7	35603-39201	Lamp Assy, Rear Turnsignal Rh
7	35604-39201	Lamp Assy, Rear Turnsignal Lh
8	35612-35300	• . Lens
9	35623-35300	• . Screw (3x28)
10	09471-06021	• . Bulb (6v,8w)
11	09103-06064	Bolt (6x60)
12	38610-09400	Relay Assy, Turnsignal
13	38621-23400	Bracket, Turnsignal Relay
14	36660-33000	Lead Wire, Turnsignal Earth

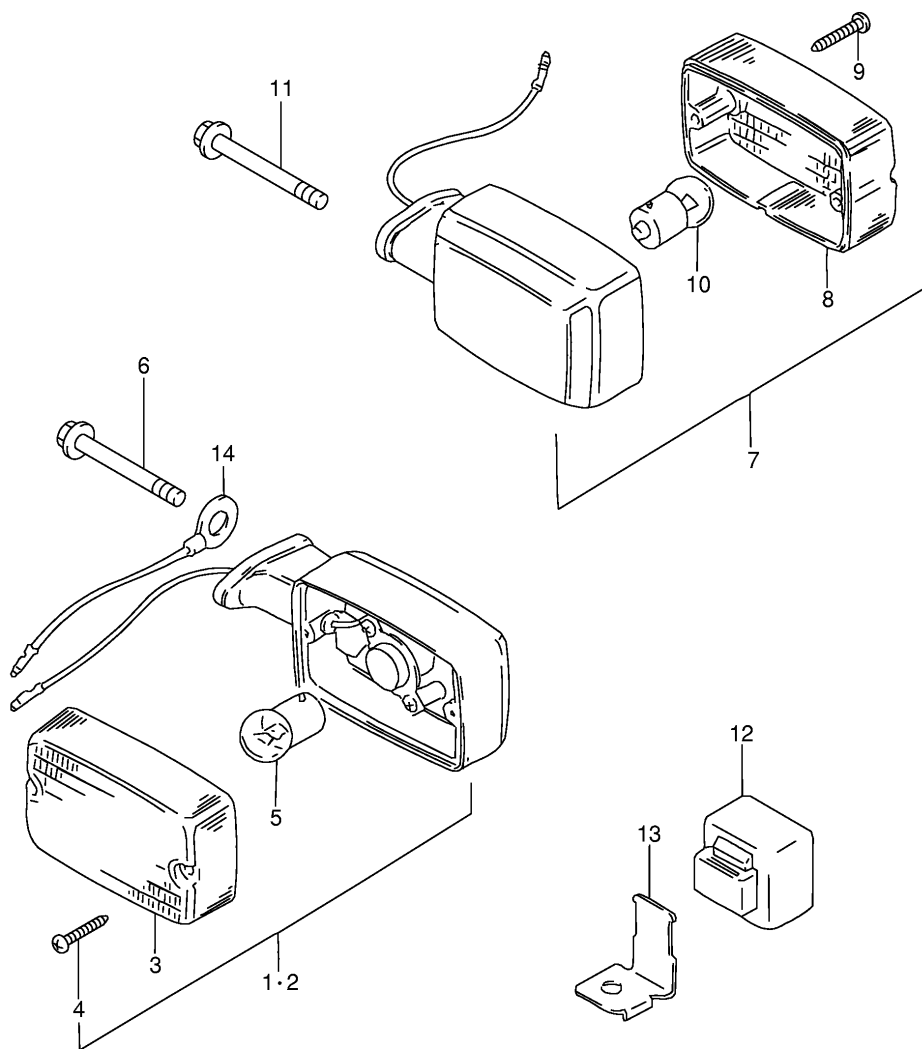 

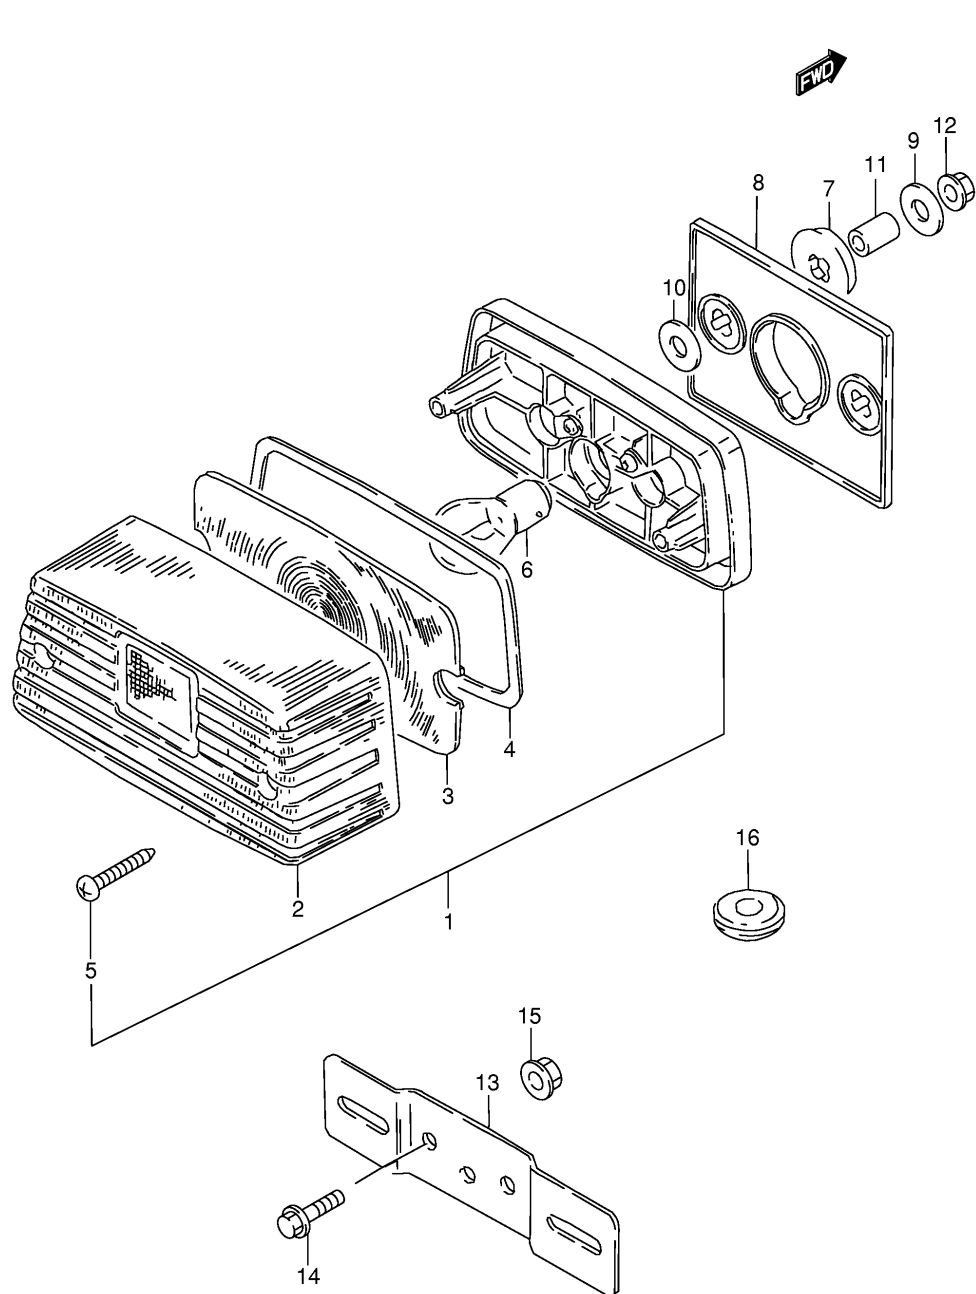 



Ref No	Part No	Description
1	35710-23430	Lamp Assy, Rear Combination
2	35712-35350	• . Lens
3	35719-35340	• . Under Lens
4	35713-35300	• . Gasket
5	03212-04359	• . Screw
6	09471-06008	• . Bulb (6v,10/3w)
7	35764-26451	Cushion
8	35765-05300	Cushion
9	09160-05501	Washer (5.5x20x1.2)
10	09160-05037	Washer (5.5x16x1.2)
11	09180-06263	Spacer (6.5x9x9)
12	08316-20053	Nut
13	35927-36510	Bracket
14	01550-06163	Bolt
15	08316-20063	Nut
16	09308-09004	Grommet, Lead Wire

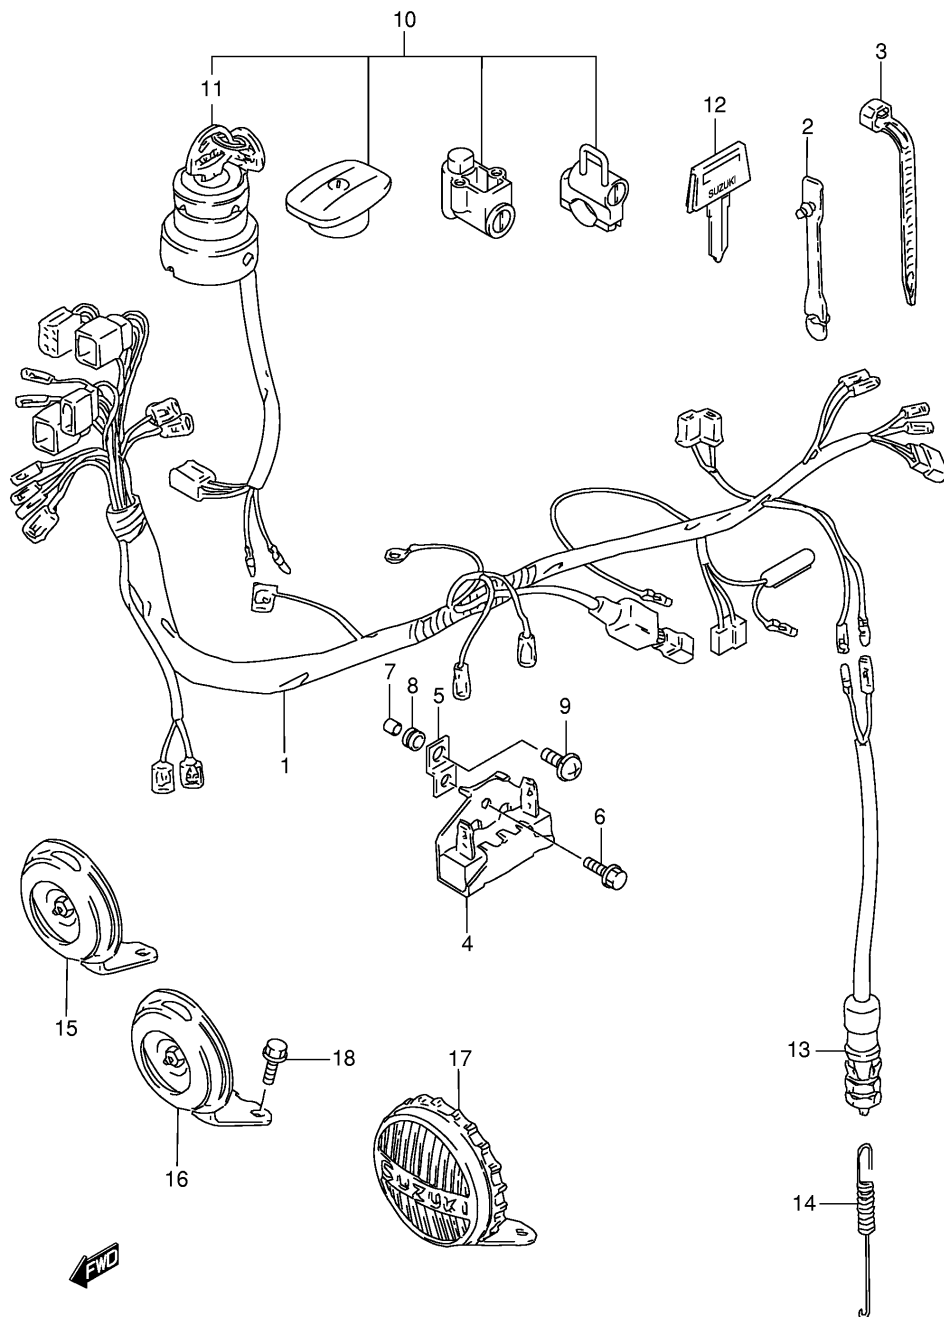 

Ref No	Part No	Description
1	36610-234E0	Wiring Harness
1a	09481-10001	• . Fuse (10a)
2	09407-05403	Clamp
3	09407-18402	Clamp (l:165)
3	09407-14403	Clamp (l:125)
4	36510-30600	Resistor Assy
5	36512-48500	Bracket, Resistor
6	09116-06011	Bolt (6x20)
7	09180-06286	Spacer (6.5x10x9.4)
8	09320-10015	Cushion
9	02112-06103	Screw, Resistor
10	37102-46810	Lock Set
11	37110-46122	• . Switch Assy, Ignition
12	37146-49300	Key, Blank
13	37740-48071	Switch, Stop Lamp
14	09443-06016	Spring
16	38500-23412	Horn Assy
17	38500-39371	Horn Assy
18	01560-06103	Bolt



Ref No	Part No	Description
1	41100-23452-01	Frame (black)
1	41100-23470-01	Frame (black)
2	47430-23401	Holder, Tool
3	09320-04006	Cushion
4	47435-23400	Band, Tool
5	09800-21031	Tool Set
6	46310-23451	Carrier, Sport
7	01580-08163	Bolt

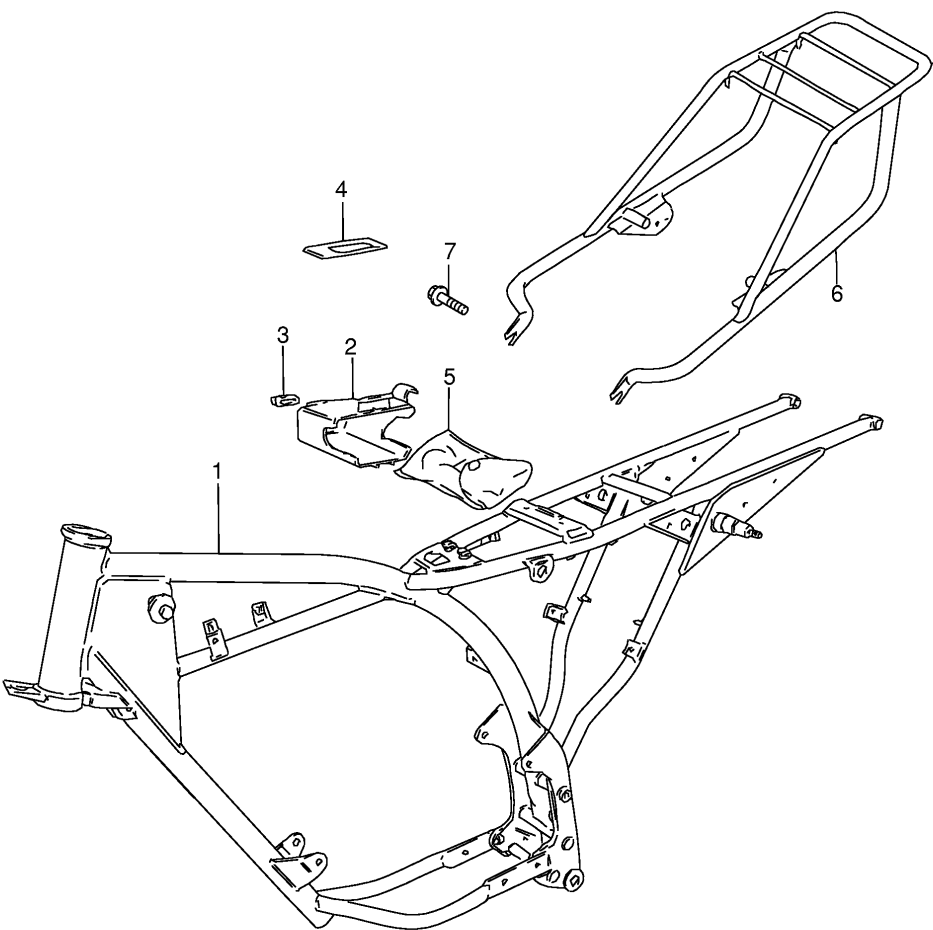 


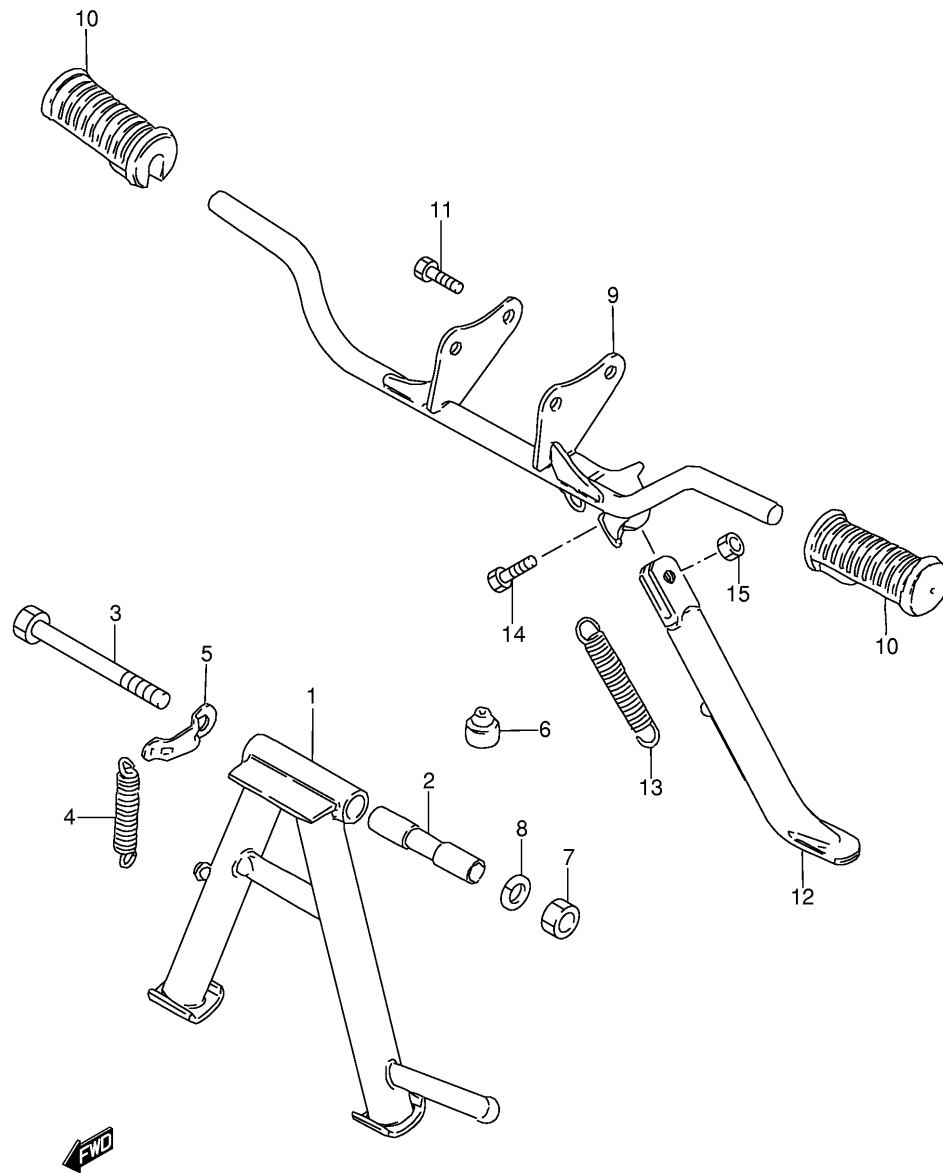 

Ref No	Part No	Description
1	42100-39311	Stand, Center
2	42211-03001	Spacer
3	09103-10148	Bolt
4	09443-16007	Spring
5	42251-39000	Hook, Spring
6	09321-10001	Cushion
7	08310-00103	Nut
8	08321-01103	Lock Washer
9	43510-23455	Bar, Front Footrest
10	43551-39100	Rubber
11	01570-08163	Bolt
12	42310-23450	Stand, Prop
13	09443-14017	Spring
14	09100-10287	Bolt (10x27)
15	09140-10043	Nut


Ref No	Part No	Description
1	43110-23453	Pedal, Brake
2	09448-31026	Spring
3	09160-15002	Washer
4	04111-30308	Cotter Pin
5	43610-03001	Bar, Pillion Footrest
6	43612-03001	Rubber
7	09160-19024	Washer
8	09200-06033	Pin
9	04111-20208	Cotter Pin

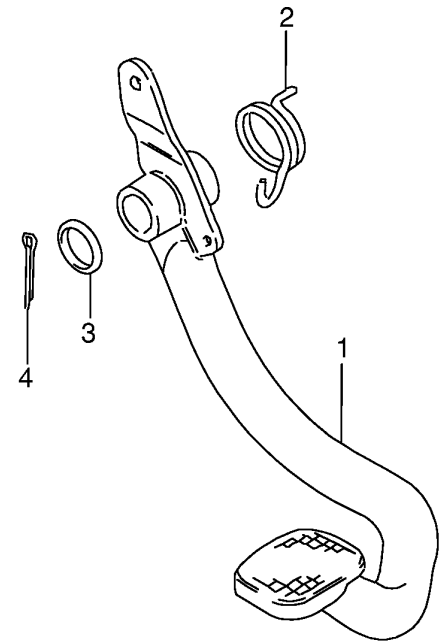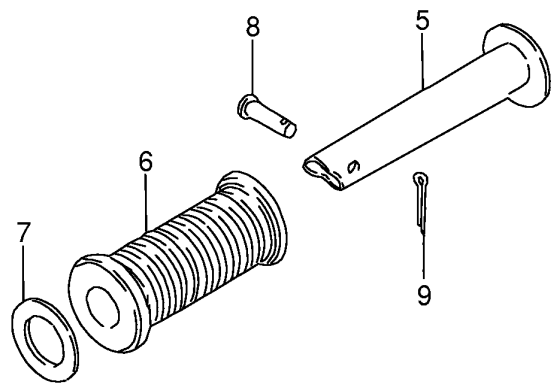  

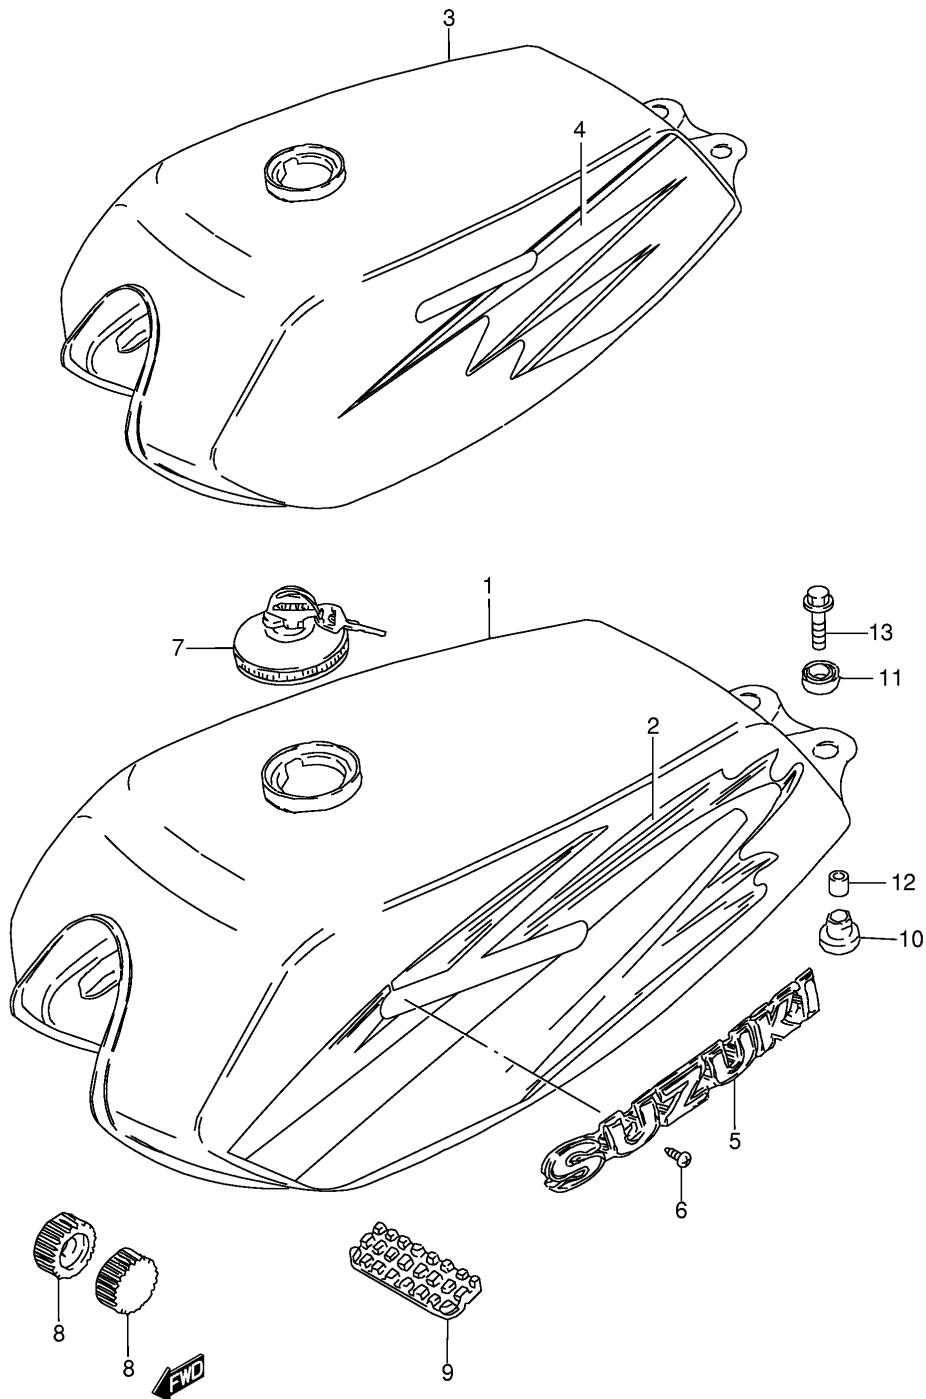 



Ref No	Part No	Description
1	44100-23590-019	Tank Assy, Fuel (black)
1	44100-23590-20F	Tank Assy, Fuel (maroon)
1	44100-23590-1ZV	Tank Assy, Fuel (green)
1	44100-23590-Y0P	Tank Assy, Fuel (blue)
2	68110-23590-K6N	• . Tape Set
2	68110-23590-K6P	• . Tape Set
2	68110-23590-K6R	• . Tape Set
2	68110-23590-L5F	• . Tape Set
3	44100-235A0-20F	Tank Assy, Fuel (maroon)
3	44100-235A0-Y98	Tank Assy, Fuel (green)
3	44100-235A0-019	Tank Assy, Fuel (black)
4	68110-23580-K6V	• . Tape Set
4	68110-23580-K6W	• . Tape Set
4	68110-23580-K6U	• . Tape Set
5	68111-11400	Emblem
6	02122-03063	Screw
7	44200-49810	Cap Assy, Fuel Tank
8	09329-10016	Cushion, Front
9	44541-47000	Cushion, Center
10	09320-10020	Cushion, Rear Lower
11	09320-14013	Cushion, Rear Upper
12	09180-06271	Spacer
13	09116-06172	Bolt (6x30)

Ref No	Part No	Description
1	44100-23590-28V	Tank Assy, Fuel (red)
1	44100-23590-1ZV	Tank Assy, Fuel (green)
1	44100-23590-Y0P	Tank Assy, Fuel (blue)
2	68110-23590-L5E	• . Tape Set
2	68110-23590-K6R	• . Tape Set
2	68110-23590-L5F	• . Tape Set
3	44100-235D0-28V	Tank Assy, Fuel (red)
3	44100-235D0-1ZV	Tank Assy, Fuel (green)
3	44100-235D0-Y0P	Tank Assy, Fuel (blue)
4	68111-11400	Emblem
5	02122-03063	Screw
6	44200-49810	Cap Assy, Fuel Tank
6	44200-36702	Cap Assy, Fuel Tank
7	09329-10016	Cushion, Front
8	44541-47000	Cushion, Center
9	09320-10020	Cushion, Rear Lower
10	09320-14013	Cushion, Rear Upper
11	09180-06271	Spacer
12	09116-06172	Bolt (6x30)

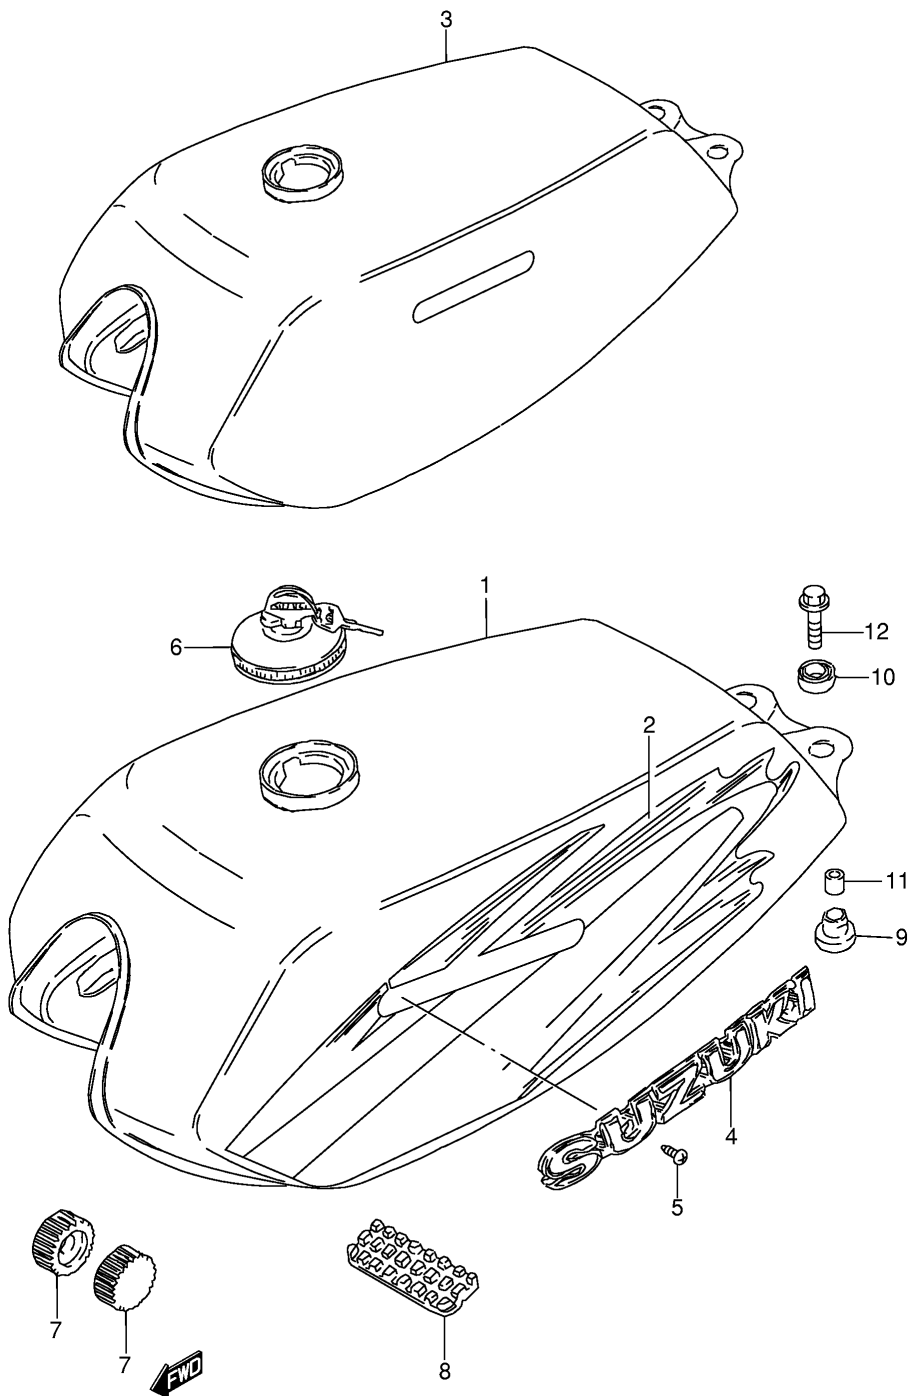 


Ref No	Part No	Description
1	44300-13273	Cock Assy, Fuel
2	44348-28070	. . O Ring, Joint
3	44347-28071	. . Cup
4	44346-28070	. . Gasket, Cup
5	44357-32470	. . Spring
6	44353-12C01	. . Gasket, Lever
7	44343-41370	. . Screw
8	09352-50823-600	Hose, Fuel
9	09401-08401	Clip, Fuel Hose
10	09128-06057	Bolt (6x20)
11	09168-06026	Gasket

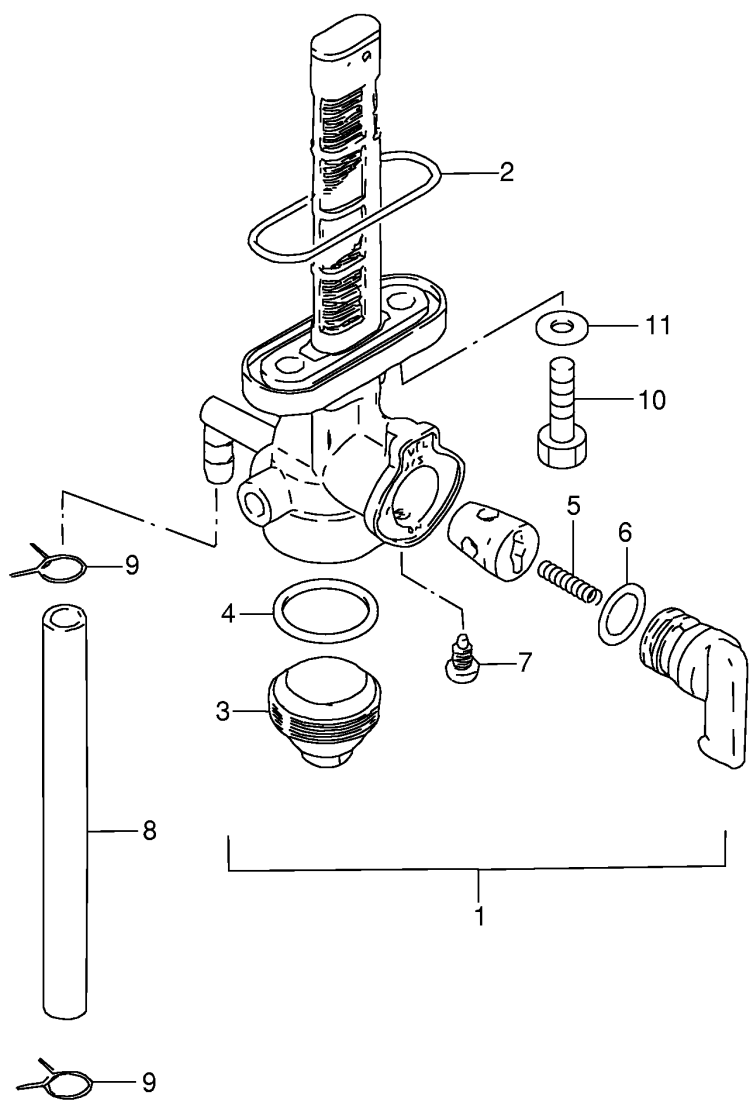 

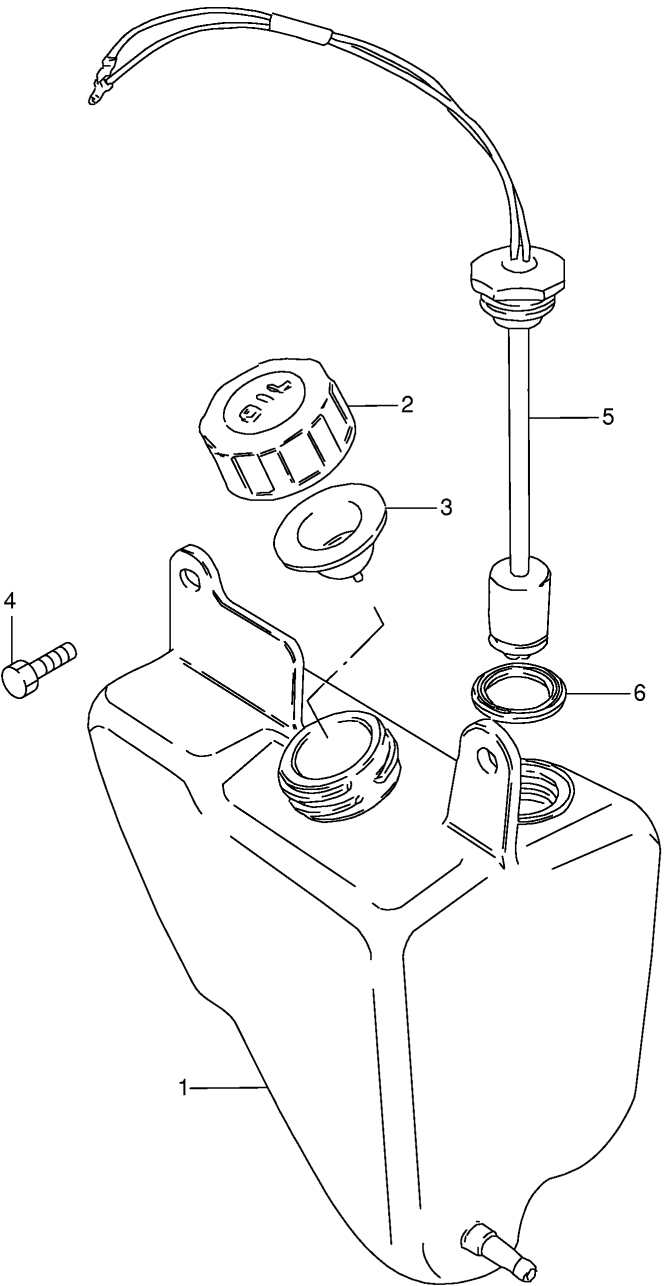 

Ref No	Part No	Description
1	44611-23400	Oil Tank
2	44651-05003	Cap, Oil Tank
3	44600-30832	Gasket Set, Oil Tank Cap
4	09116-06006	Bolt
5	37880-43002	Guage Assy, Oil Level
6	44643-31000	Gasket



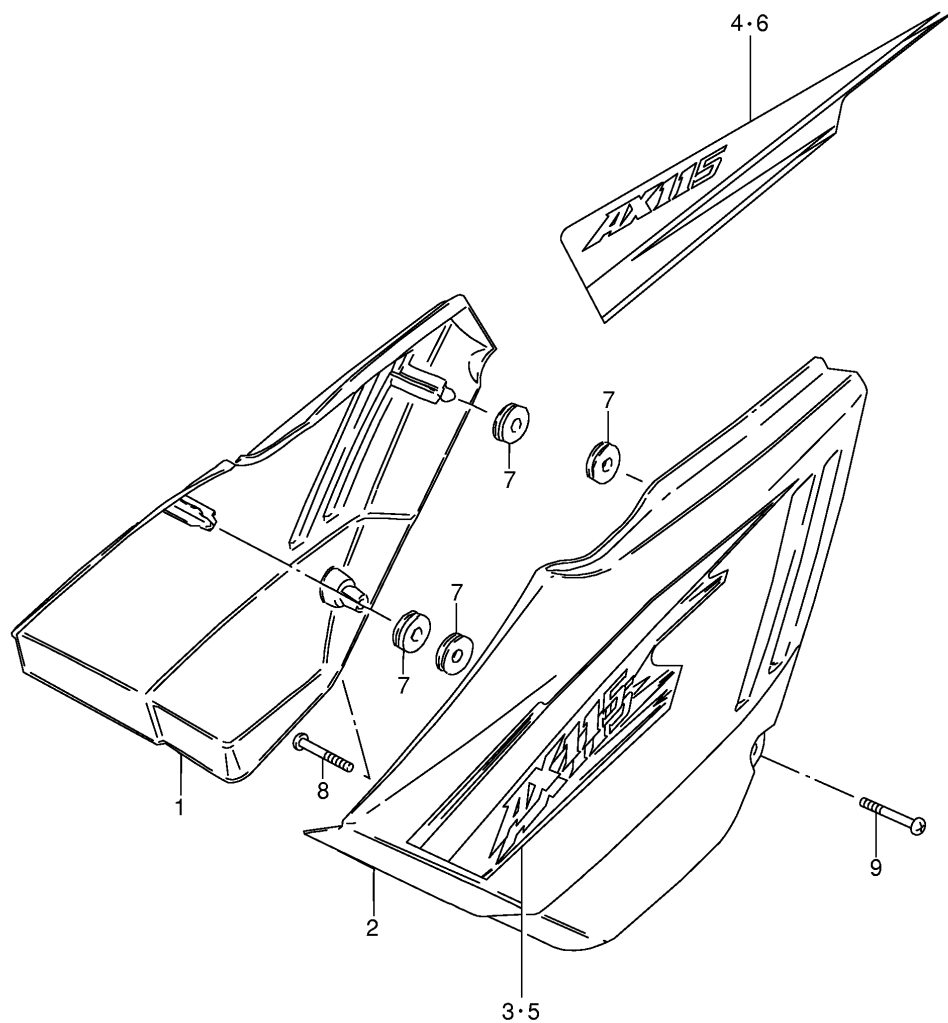 



Ref No	Part No	Description
1	47111-23400-019	Cover, Frame Rh (black)
1	47111-23400-20F	Cover, Frame Rh (maroon)
1	47111-23400-1ZV	Cover, Frame Rh (green)
1	47111-23400-1ZZ	Cover, Frame Rh (gray)
1	47111-23400-17U	Cover, Frame Rh (gray)
1	47111-23400-Y0P	Cover, Frame Rh (blue)
2	47211-23400-019	Cover, Frame Rh (black)
2	47211-23400-20F	Cover, Frame Rh (maroon)
2	47211-23400-1ZV	Cover, Frame Rh (green)
2	47211-23400-1ZZ	Cover, Frame Rh (gray)
2	47211-23400-17U	Cover, Frame Rh (gray)
2	47211-23400-Y0P	Cover, Frame Rh (blue)
3	68135-23570-Z3K	Tape, Rh
3	68135-23570-Z3L	Tape, Rh
3	68135-23570-Z3M	Tape, Rh
3	68135-23570-Y8T	Tape, Rh
4	68135-23560-Z3P	Tape, Rh
4	68135-23560-Z3R	Tape, Rh
4	68135-23560-Z3N	Tape, Rh
5	68145-23570-Z3K	Tape, Lh
5	68145-23570-Z3L	Tape, Lh
5	68145-23570-Z3M	Tape, Lh
5	68145-23570-Y8T	Tape, Lh
6	68145-23560-Z3P	Tape, Lh
6	68145-23560-Z3R	Tape, Lh
6	68145-23560-Z3N	Tape, Lh
7	09320-08018	Cushion
8	02142-06453	Screw, Rh
9	09125-06042	Screw, Lh




Ref No	Part No	Description
--------	---------	-------------


1	47111-23400-28V	Cover, Frame Rh (red)
1	47111-23400-1ZV	Cover, Frame Rh (green)
1	47111-23400-Y0P	Cover, Frame Rh (blue)
2	47211-23400-28V	Cover, Frame Rh (red)
2	47211-23400-1ZV	Cover, Frame Rh (green)
2	47211-23400-Y0P	Cover, Frame Rh (blue)
3	68135-23570-Y8S	Tape, Rh
3	68135-23570-Z3M	Tape, Rh
3	68135-23570-Y8T	Tape, Rh
4	68145-23570-Y8S	Tape, Lh
4	68145-23570-Z3M	Tape, Lh
4	68145-23570-Y8T	Tape, Lh
5	09320-08018	Cushion
6	02142-06453	Screw, Rh
7	09125-06042	Screw, Lh

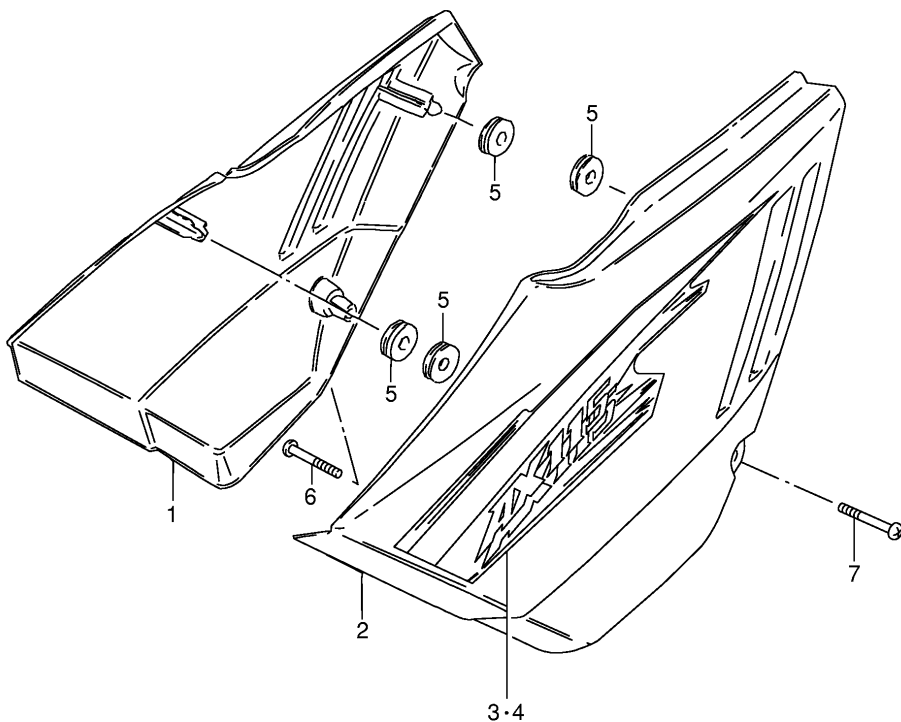 

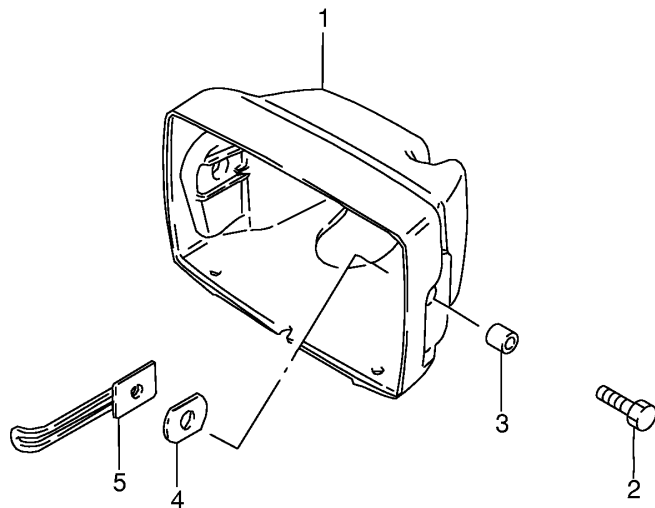 


Ref No	Part No	Description
1	51811-23451	Housing, Headlamp
2	01264-08307	Bolt
3	09180-08187	Spacer
4	09329-12002	Cushion
5	51860-45000	Plate, Housing
6	53110-23490	Fender, Front
7	01570-06103	Bolt

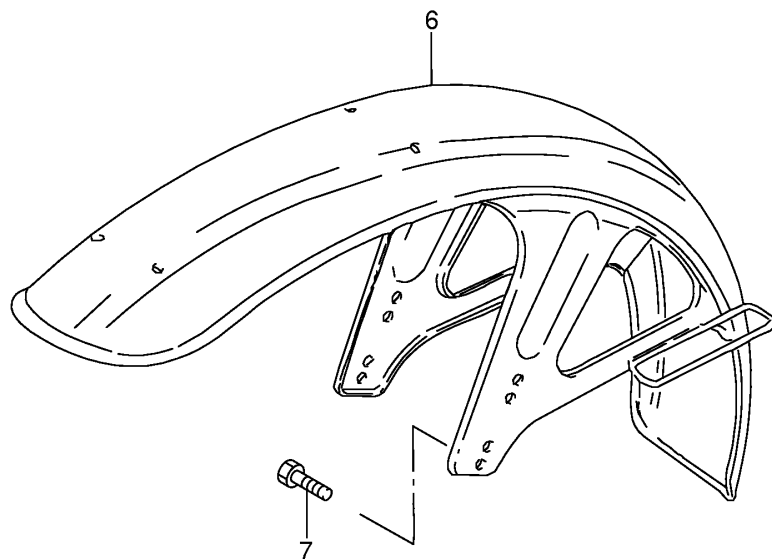 


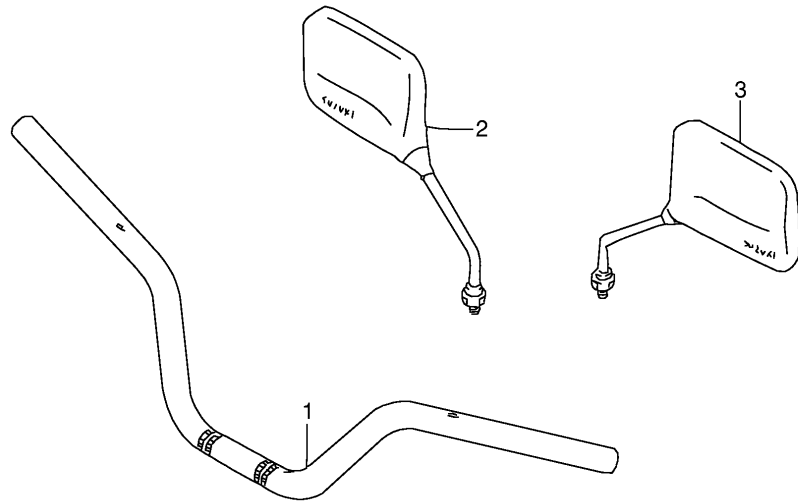 


Ref No	Part No	Description
1	56110-23450	Handlebar
2	56500-04710	Mirror Assy, Rear View Rh
3	56600-04710	Mirror Assy, Rear View Lh
4	58110-23480	Cable Assy, Front Brake
5	09287-07001	Dust Seal
6	09440-06003	Spring
7	09209-10001	Pin
8	09150-05101	Nut
9	58200-23480	Cable Assy, Clutch
10	58300-23480	Cable Assy, Throttle
11	09287-07002	Dust Seal
12	09407-14403	Clamp, Throttle Cable
13	58410-23480	Cable, Starter
14	09408-00025	Clip, Cable
15	09408-00002	Clip, Cable
16	95700-04113	Lock Assy, Helmet

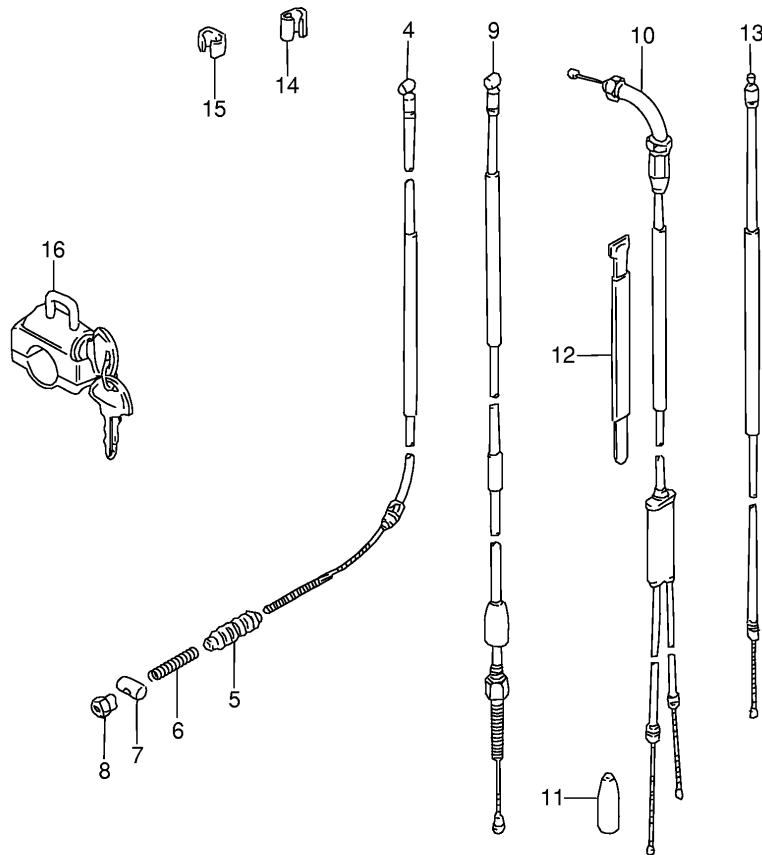 


Ref No	Part No	Description
1	57110-13610	Grip, Throttle
2	57100-13601	Case Assy, Throttle
3	57122-13600	• . Piece, Guide
4	57129-13601	• . Cover
5	02122-04103	• . Screw
6	02112-05167	• . Screw
7	57300-23480	Brake Lever / Switch Assy
8	57420-48700	• . Lever, Brake
9	57431-11013	• . Bolt
10	08319-21068	• . Nut
11	57441-26010	• . Adjuster, Cable
12	57442-11010	• . Nut, Cable Adjuster Lock
13	02112-06207	• . Screw
14	57460-10400	• . Stop Switch
15	57341-25601	Dust Seal
16	09407-12402	Clamp

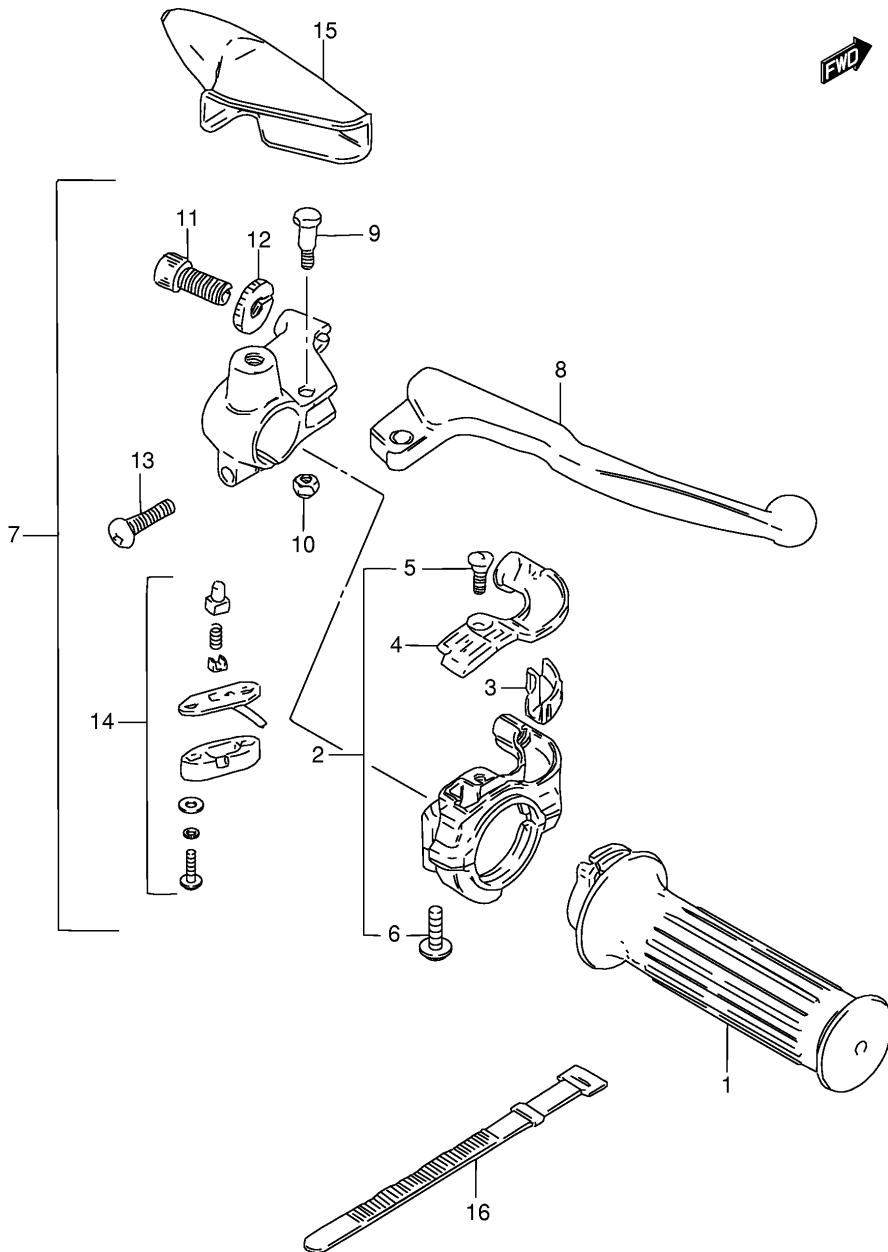 


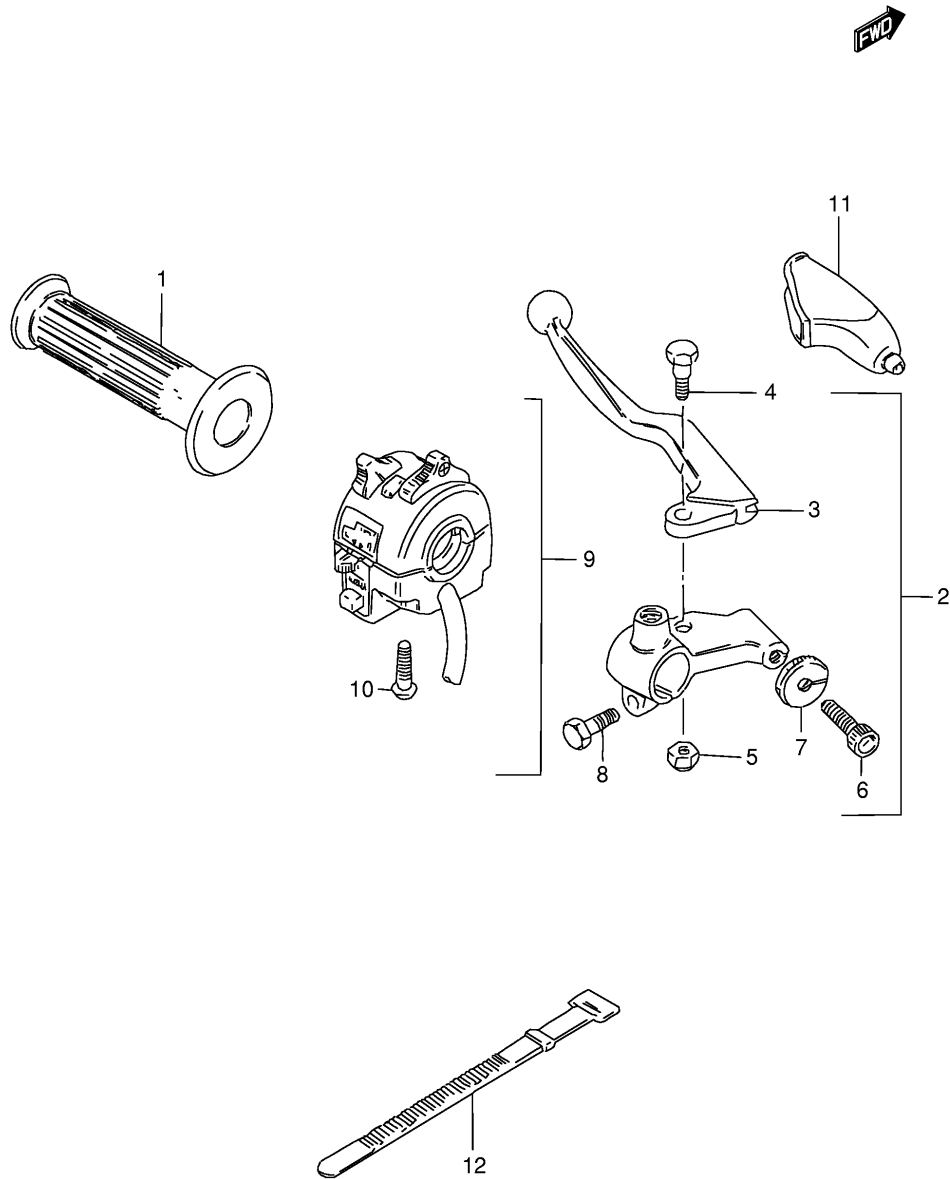 

Ref No	Part No	Description
1	57211-46111	Grip, Lh
2	57500-48701	Lever Assy, Clutch
3	57620-48701	• . Lever, Clutch
4	57431-11013	• . Bolt
5	08319-21068	• . Nut
6	57441-26010	• . Adjuster, Cable
7	57442-11010	• . Nut, Cable Adjuster Lock
8	01500-06207	• . Bolt
9	37400-01D30	Switch, Handle Lh
10	02112-05455	• . Screw
11	57341-40001	Cover, Brake/clutch Lever Dust
12	09407-12402	Clamp

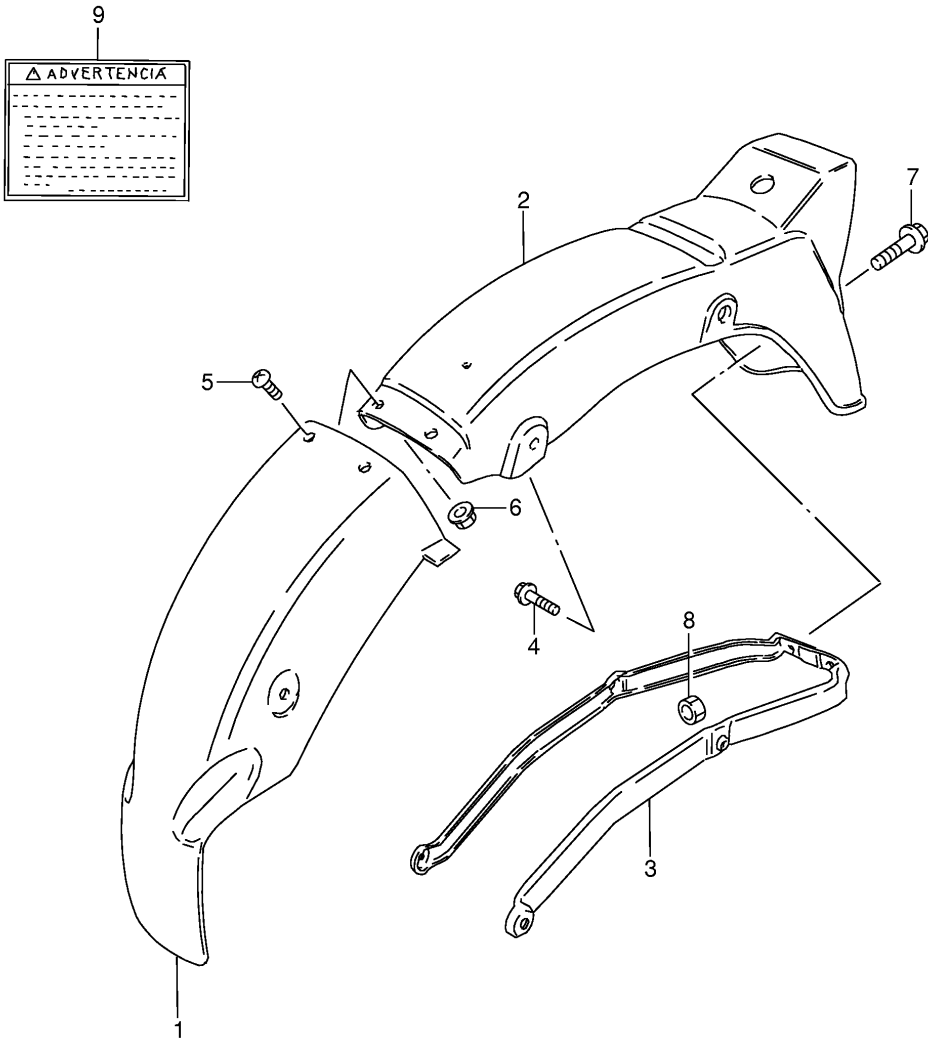 


Ref No	Part No	Description
1	63112-23450	Body, Rear Fender Front
2	63113-23451	Fender, Rear
3	63120-23450	Reinforcement
4	01580-06163	Bolt
5	02142-06163	Screw
6	08319-31067	Nut
7	01550-08503	Bolt
8	08316-10083	Nut
9	68319-33E50	Label, General Warning
9	68319-33E01	Label, General Warning
10	99011-04645-01S	Manual, Owner's
10	99011-04650-01P	Manual, Owner's

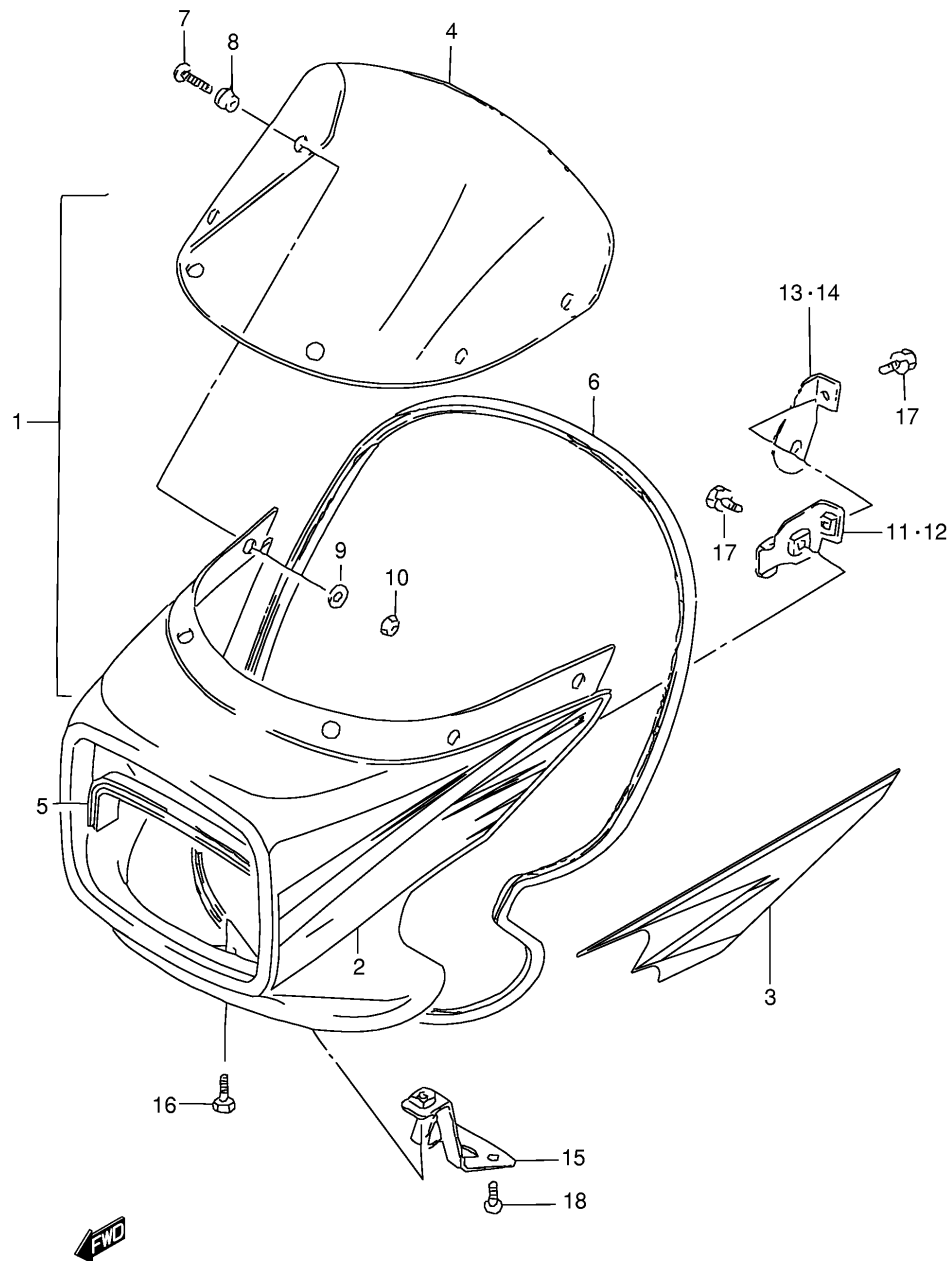 



Ref No	Part No	Description
1	94400-23500-019	Cowling Assy (black)
1	94400-23500-20F	Cowling Assy (maroon)
1	94400-23500-1ZV	Cowling Assy (green)
1	94400-23501-Y0P	Cowling Assy (blue)
1	94400-23450-20F	Cowling Assy (maroon)
1	94400-23450-Y98	Cowling Assy (green)
1	94400-23450-019	Cowling Assy (black)
2	68270-23510-K6N	. . Tape Set
2	68270-23510-K6P	. . Tape Set
2	68270-23510-K6R	. . Tape Set
2	68270-23510-L5F	. . Tape Set
3	68270-23500-K6V	. . Tape Set
3	68270-23500-K6W	. . Tape Set
3	68270-23500-K6U	. . Tape Set
4	94611-36500	. . Window, Cowling
5	94591-23E00	. . Molding
6	94631-44110	. . Molding
7	09139-05021	. . Screw
8	09320-05008	. . Cushion
9	08322-01053	. . Washer
10	08310-00053	. . Nut
11	94510-05310	Brace, Cowling Rh
12	94530-05310	Brace, Cowling Lh
13	94521-23450	Bracket, Cowling Rh
14	94561-23450	Bracket, Cowling Lh
15	94550-23450	Bracket, Cowling Lower
16	09118-06067	Bolt
17	01570-06123	Bolt
18	02142-06163	Screw

Ref No	Part No	Description
1	45100-23451-48H	Seat Assy (black)
2	09321-10002	• . Cushion

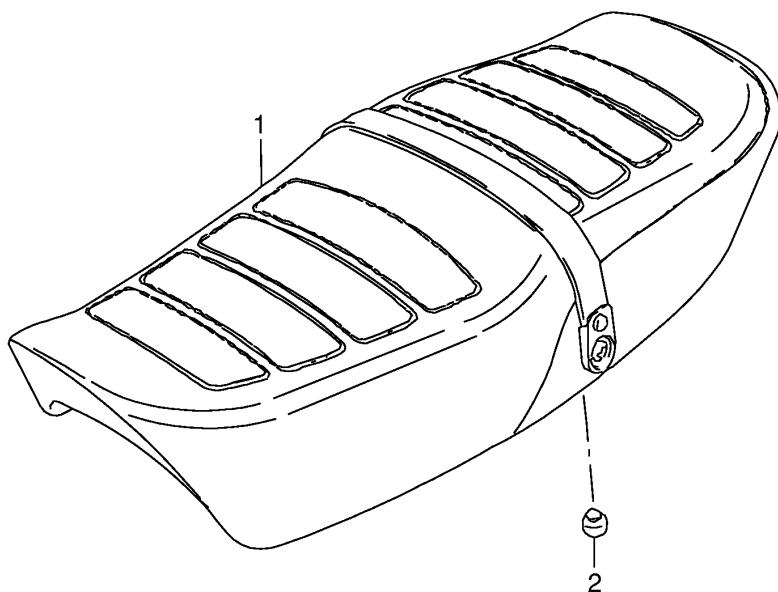 


Ref No	Part No	Description
--------	---------	-------------


1	45510-23500-1ZZ	Cover, Seat Tail (gray)
1	45510-23500-3NX	Cover, Seat Tail (gray)
1	45510-23500-17U	Cover, Seat Tail (gray)
2	68160-23500-K6V	• . Tape Set, Seat Tail Cover
2	68160-23500-K6W	• . Tape Set, Seat Tail Cover
2	68160-23500-K6U	• . Tape Set, Seat Tail Cover
3	45510-23510-019	Cover, Seat Tail (black)
3	45510-23510-20F	Cover, Seat Tail (maroon)
3	45510-23510-1ZV	Cover, Seat Tail (green)
3	45510-23510-28V	Cover, Seat Tail (red)
3	45510-23510-1ZV	Cover, Seat Tail (green)
3	45510-23510-Y0P	Cover, Seat Tail (blue)
4	68160-23510-2YP	• . Tape Set, Seat Tail Cover
4	68160-23510-K6S	• . Tape Set, Seat Tail Cover
4	68160-23510-K6T	• . Tape Set, Seat Tail Cover
4	68160-23510-L5G	• . Tape Set, Seat Tail Cover
4	68160-23510-K6T	• . Tape Set, Seat Tail Cover
4	68160-23510-L5H	• . Tape Set, Seat Tail Cover
5	45512-23450	Lid, Seat Tail Cover
6	03111-15123	Screw
7	09409-06306	Clip
8	45513-23450	Cushion, Seat Tail Cover

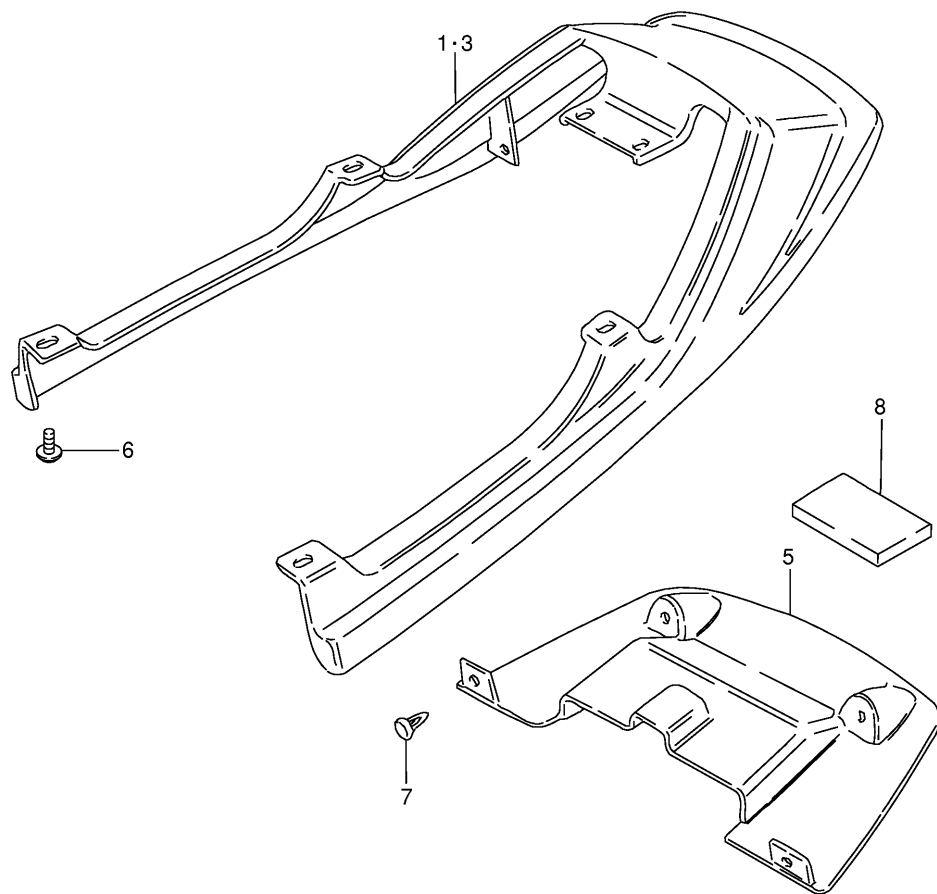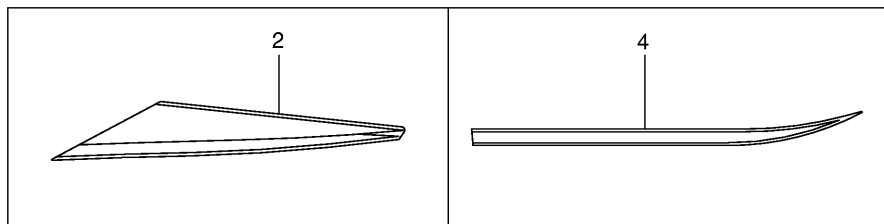  


Ref No	Part No	Description
	51103-234B0	Damper Assy, Front Fork Rh
	51104-234B0	Damper Assy, Front Fork Lh
1	51130-234B0	. . Tube, Outer Rh
2	51140-234B0	. . Tube, Outer Lh
3	51110-23451	. . Tube, Inner
4	51153-39140	. . Oil Seal
5	51156-39140	. . Stopper Ring, Oil Seal
6	51158-23720	. . Washer
7	51181-22011	. . O Ring
8	51152-23490	. . Slide Metal
9	51171-234B0	. . Spring
10	51172-234B0	. . Guide, Spring Upper
11	51178-23720	. . Guide, Spring Lower
12	51351-29400	. . Bolt
13	51356-07010	. . Washer

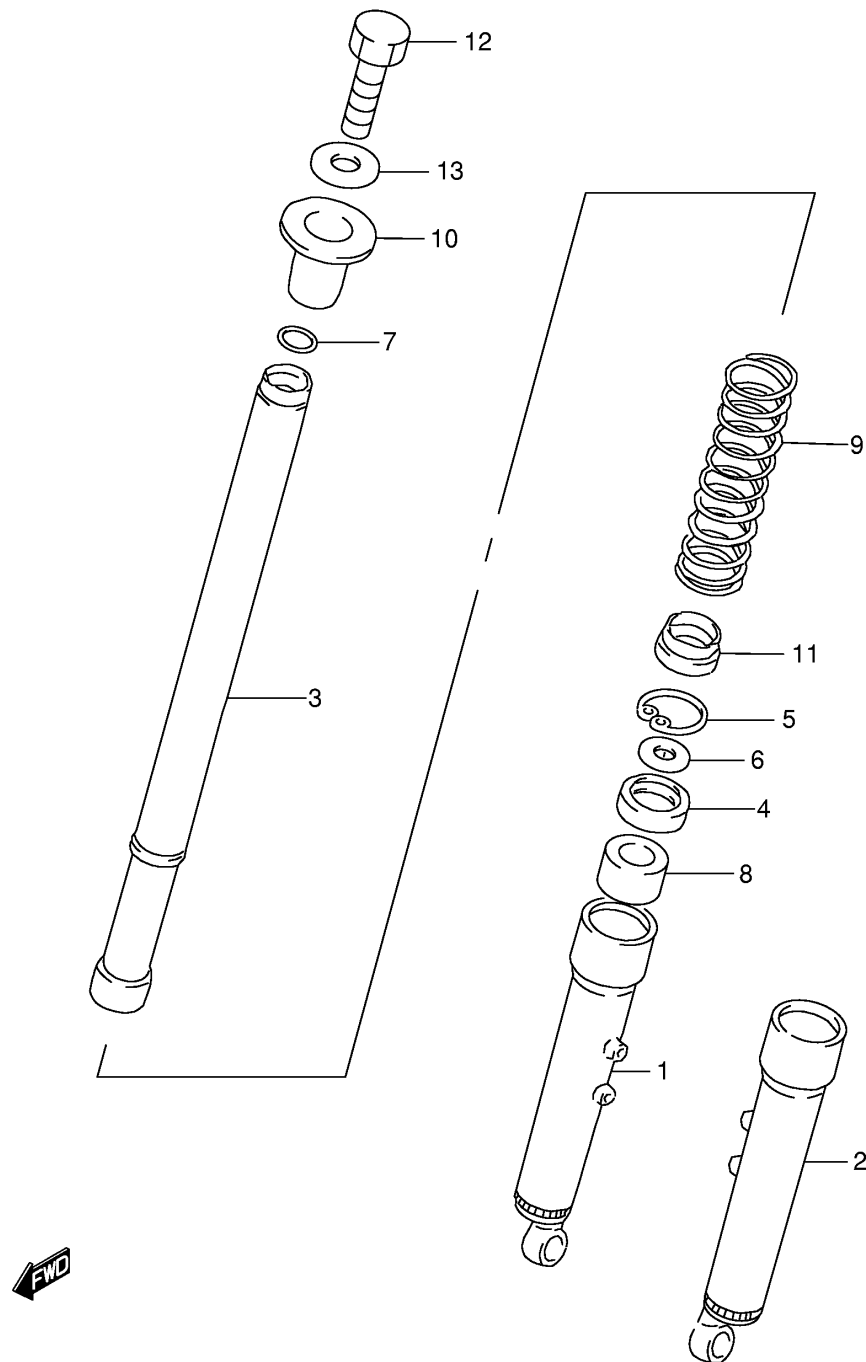 


Ref No	Part No	Description
	51103-234C0	Damper Assy, Front Fork Rh
	51104-234C0	Damper Assy, Front Fork Lh
1	51130-23451	. . Tube, Outer Rh
2	51140-23451	. . Tube, Outer Lh
3	51110-23451	. . Tube, Inner
4	51153-39140	. . Oil Seal
5	51156-39140	. . Stopper Ring, Oil Seal
6	51158-23720	. . Washer
7	51181-22011	. . O Ring
8	51152-23490	. . Slide Metal
9	51171-234C0	. . Spring
10	51172-23721	. . Guide, Spring Upper
11	51178-23720	. . Guide, Spring Lower
12	51351-29400	. . Bolt
13	51356-07010	. . Washer
14	51179-234C0	. . Guide, Spring Lower

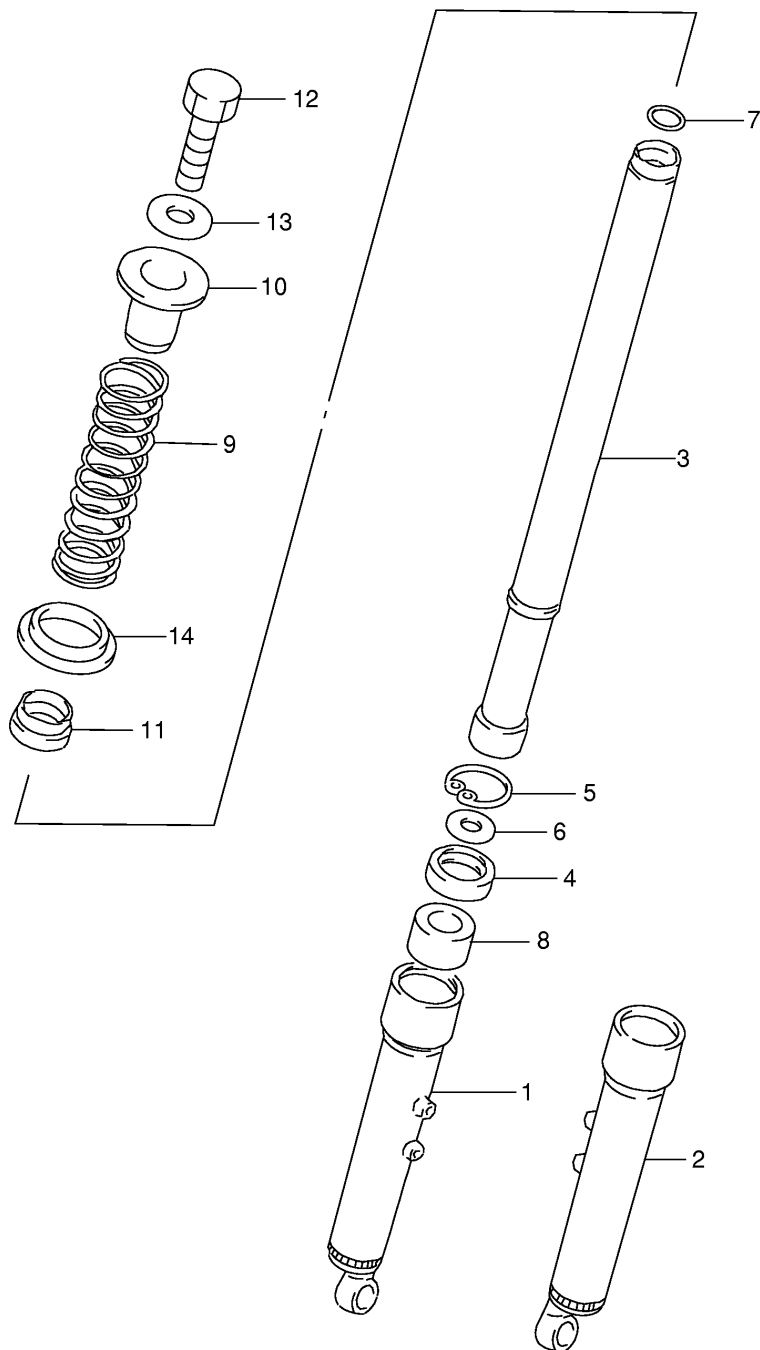 


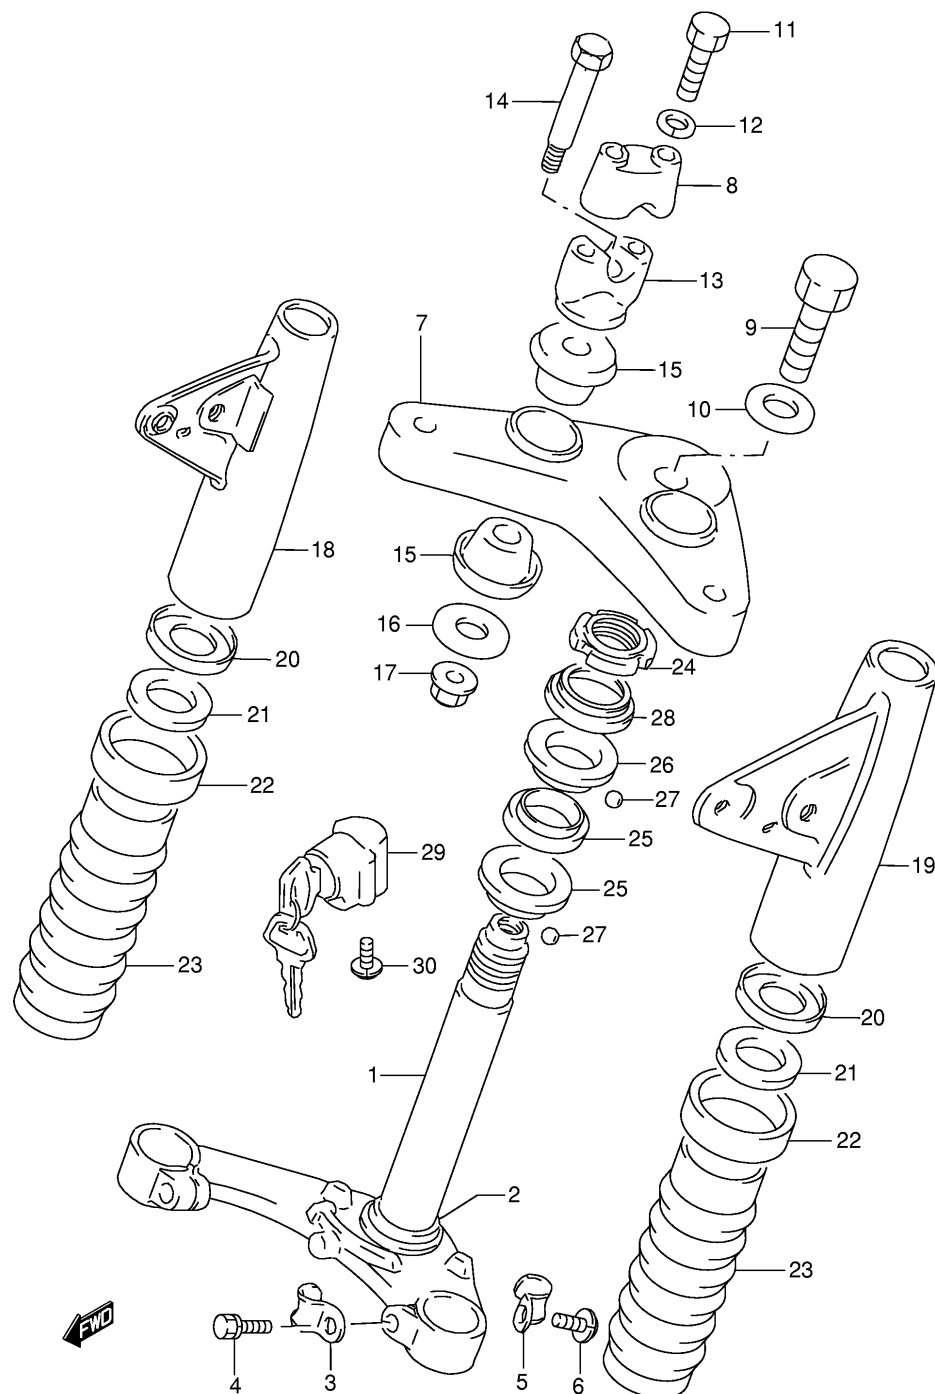 

Ref No	Part No	Description
1	51410-23410	Stem, Steering
2	51622-20001	• Race, Steering Outer Lower
3	51452-08010	Clip
4	01570-10303	Bolt
5	51453-05110	Clip
6	02112-36107	Screw
7	51311-23450	Head, Steering Stem
8	56211-27100	Holder, Handle Upper
9	51351-29400	Bolt
10	51356-22012	Washer
11	01204-08357	Bolt
12	08321-01087	Lock Washer
13	56221-23450	Holder, Handle Lower
14	51321-05380	Bolt
15	56241-23450	Damper, Rubber
16	51356-26920	Washer
17	08319-31087	Nut
18	51530-234B0-799	Bracket, Headlamp Rh
19	51540-234B0-799	Bracket, Headlamp Lh
20	51551-21010	Guede, Cover
21	51553-20610	Gasket
22	51511-234B0	Cover, Outer
23	51571-234B0	Boot (black)
24	51631-28000	Nut, Steering Stem
25	51611-20002	Race, Steering Inner
26	51621-28000	Race, Outer Upper
27	06111-06003	Ball, Steel
28	51643-25001	Dust Seal, Upper
29	51910-25311	Lock Assy, Steering
30	02112-35123	Screw


Ref No	Part No	Description
1	51410-23410	Stem, Steering
2	51622-20001	• Race, Steering Outer Lower
3	51452-08010	Clip
4	01570-10303	Bolt
5	51453-05110	Clip
6	02112-36107	Screw
7	51311-23450	Head, Steering Stem
8	56211-27100	Holder, Handle Upper
9	51351-29400	Bolt
10	51356-22012	Washer
11	01204-08357	Bolt
12	08321-01087	Lock Washer
13	56221-23450	Holder, Handle Lower
14	51321-05380	Bolt
15	56241-23450	Damper, Rubber
16	51356-26920	Washer
17	08319-31087	Nut
18	51530-23461-13L	Bracket, Headlamp Rh (silver)
19	51540-23461-13L	Bracket, Headlamp Lh (silver)
20	51551-21010	Guede, Cover
21	51553-20610	Gasket
22	51511-23510	Cover, Outer
23	51631-28000	Nut, Steering Stem
24	51611-20002	Race, Steering Inner
25	51621-28000	Race, Outer Upper
26	06111-06003	Ball, Steel
27	51643-25001	Dust Seal, Upper
28	51910-25311	Lock Assy, Steering
29	02112-35123	Screw

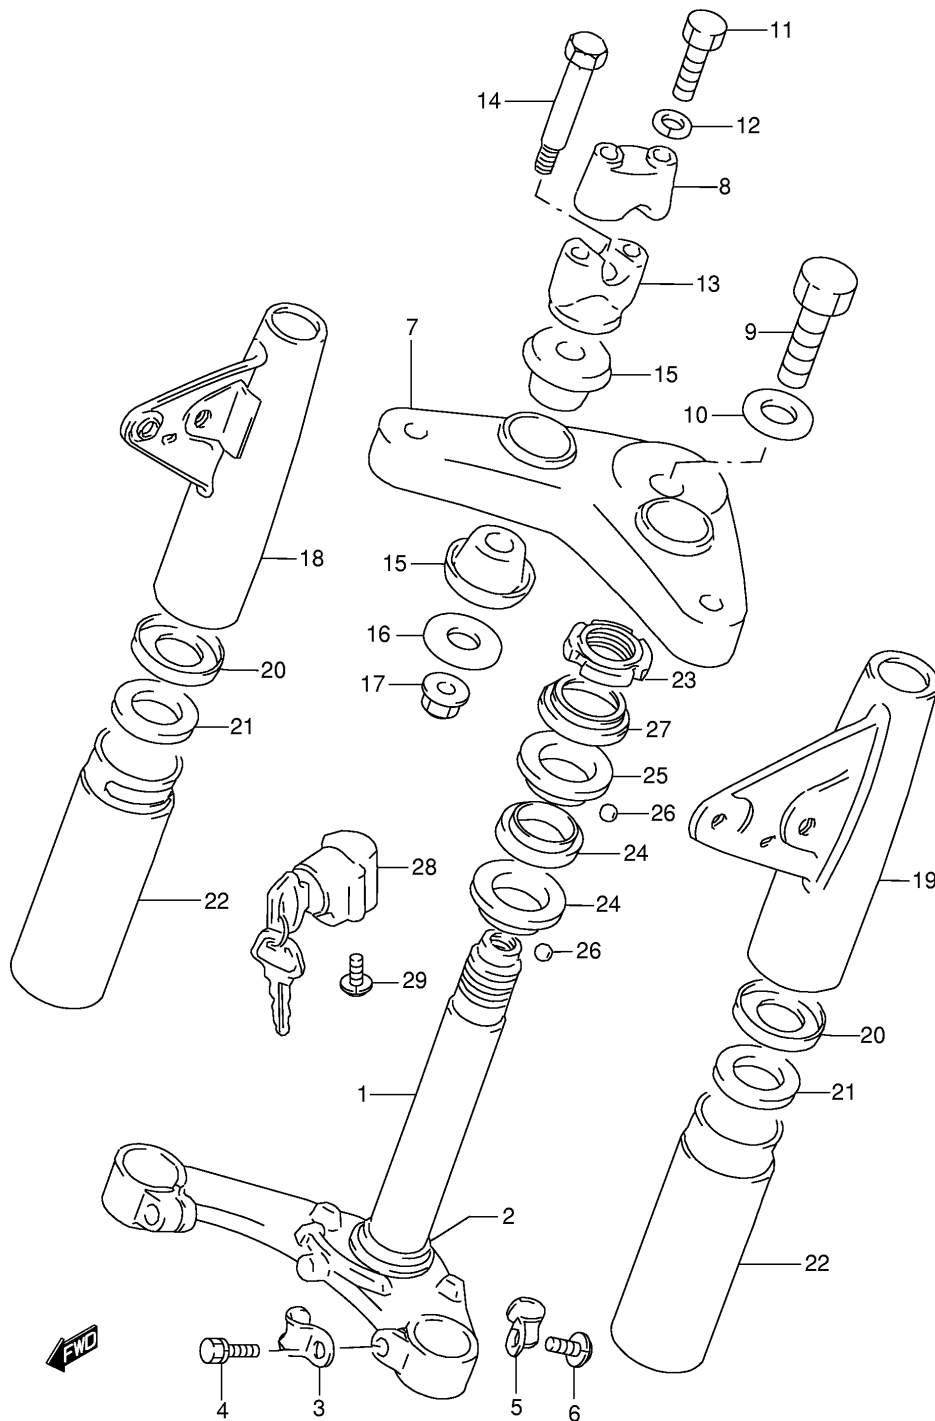 

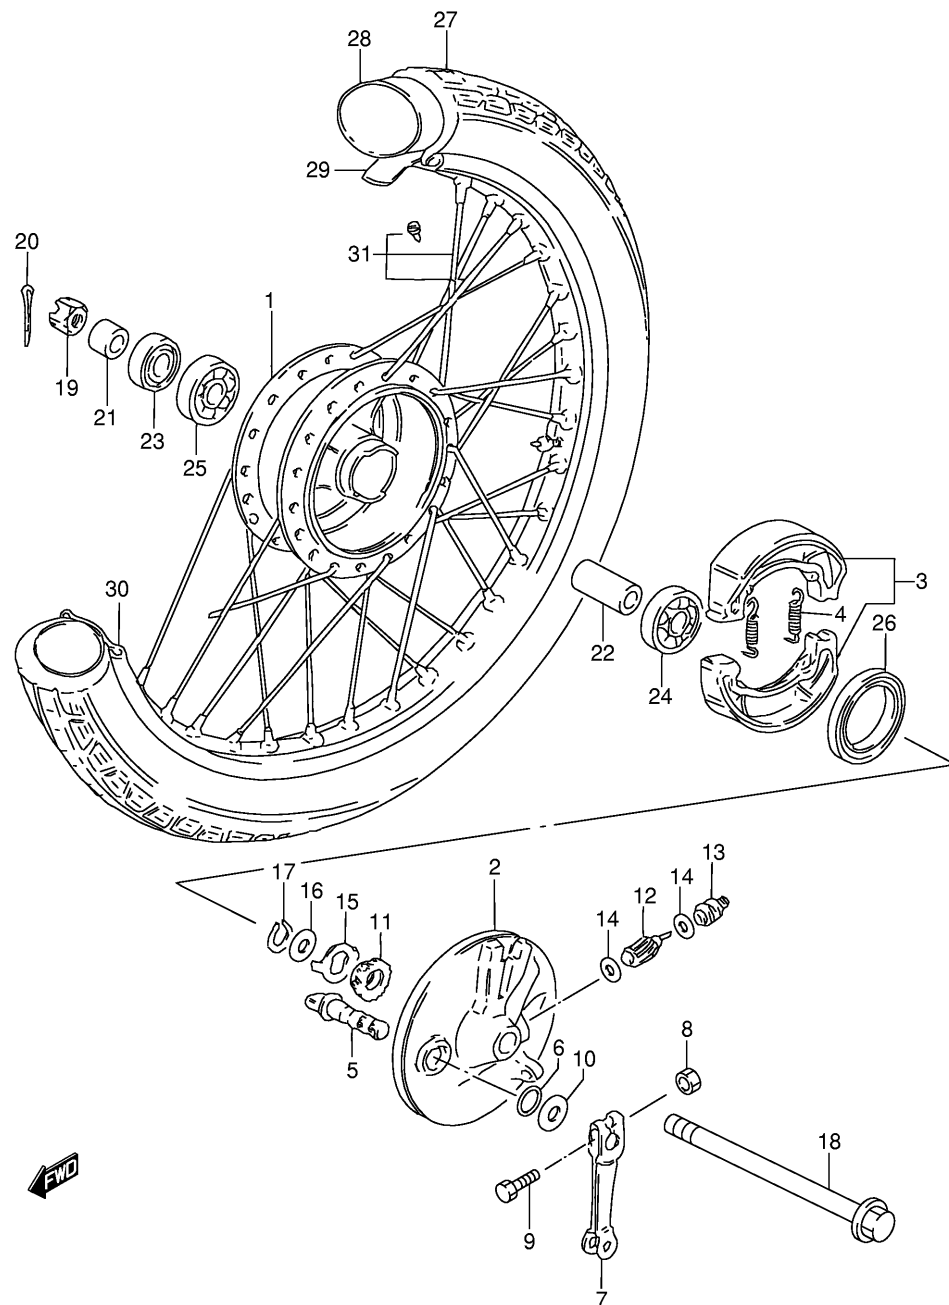 


Ref No	Part No	Description
1	54110-46002	Drum, Front Wheel Hub
2	54210-23452	Panel, Front Brake Anchor
3	54401-35880	Shoe Set, Brake
4	09443-07044	• . Spring (l:37.8)
5	54441-29305	Shaft, Brake Cam
6	09280-14011	Dust Seal (id:13.8,dd:2.50)
7	54451-46110	Lever, Brake Cam
8	08316-10063	Nut
9	09103-06045	Bolt (6x32)
10	09160-14055	Washer, Dust Seal (14.5x22x1.6)
11	54611-23202	Gear, Speedometer (nt:26)
12	54621-23201	Pinion, Speedometer
13	54632-02201	Bushing, Pinion Outer
14	09160-05001	Thrust Washer (5.1x9x0.4)
15	54661-03000	Driver, Speedometer
16	09160-16005	Thrust Washer (16x22x1)
17	08331-31156	Circlip
18	54711-03602	Axle, Front
19	09141-10006	Nut
20	04111-20208	Cotter Pin
21	54751-22C00	Spacer, Axle (10x15x13)
22	09180-10148	Spacer, Hub (10.2x16x51)
23	09284-15001	Oil Seal (15x31x9.50)
24	08143-63007	Bearing, Lh
25	08113-62007	Bearing, Rh
26	09285-43001	Oil Seal (43x58x7)
27	55100-14012	Tire, Front (2.50-18 40I Nf2) (irc)
28	55200-14010	Tube Assy, Wheel Inner
29	55261-11010	Protector, Inner Tube
30	55311-12120	Rim, Wheel (1.40x18)
31	55320-21200	Spoke Set, Front Wheel

Ref No	Part No	Description
1	61100-23824-019	Swinging Arm Set, Rear (black)
2	09319-12018	• . Bushing (12x24x44)
3	61211-39002	Shaft, Pivot
4	09160-12073	Washer, Lh
5	08322-01127	Washer
6	08319-21128	Nut
7	61273-23400	Buffer, Chain Touch Defense
8	64310-23450-019	Torque Link, Rear (black)
9	09111-08012	Bolt, Front (8x22.5)
10	09111-08057	Bolt, Rear (8x22.5)
11	09162-08008	Lock Washer
12	09140-08008	Nut
13	04111-20208	Cotter Pin

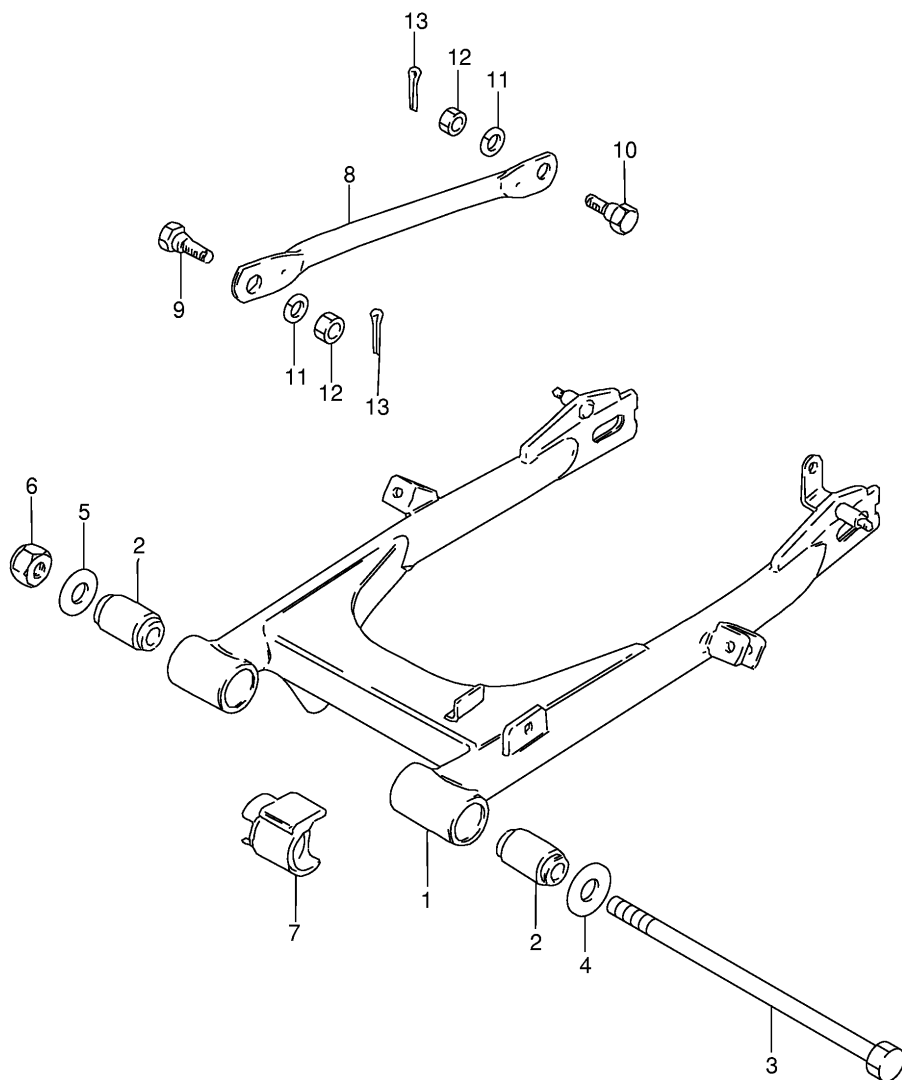 



Ref No	Part No	Description
--------	---------	-------------

1	61100-23833-019	Swinging Arm Set (black)
2	09319-12018	• . Bushing (12x24x44)
3	61211-39002	Shaft, Pivot
4	09160-12073	Washer, Lh
5	08322-01127	Washer
6	08319-21128	Nut
7	61273-23400	Buffer, Chain Touch Defense
8	64310-23450-019	Torque Link, Rear (black)
9	09111-08012	Bolt, Front (8x22.5)
10	09111-08057	Bolt, Rear (8x22.5)
11	09162-08008	Lock Washer
12	09140-08008	Nut
13	04111-20208	Cotter Pin

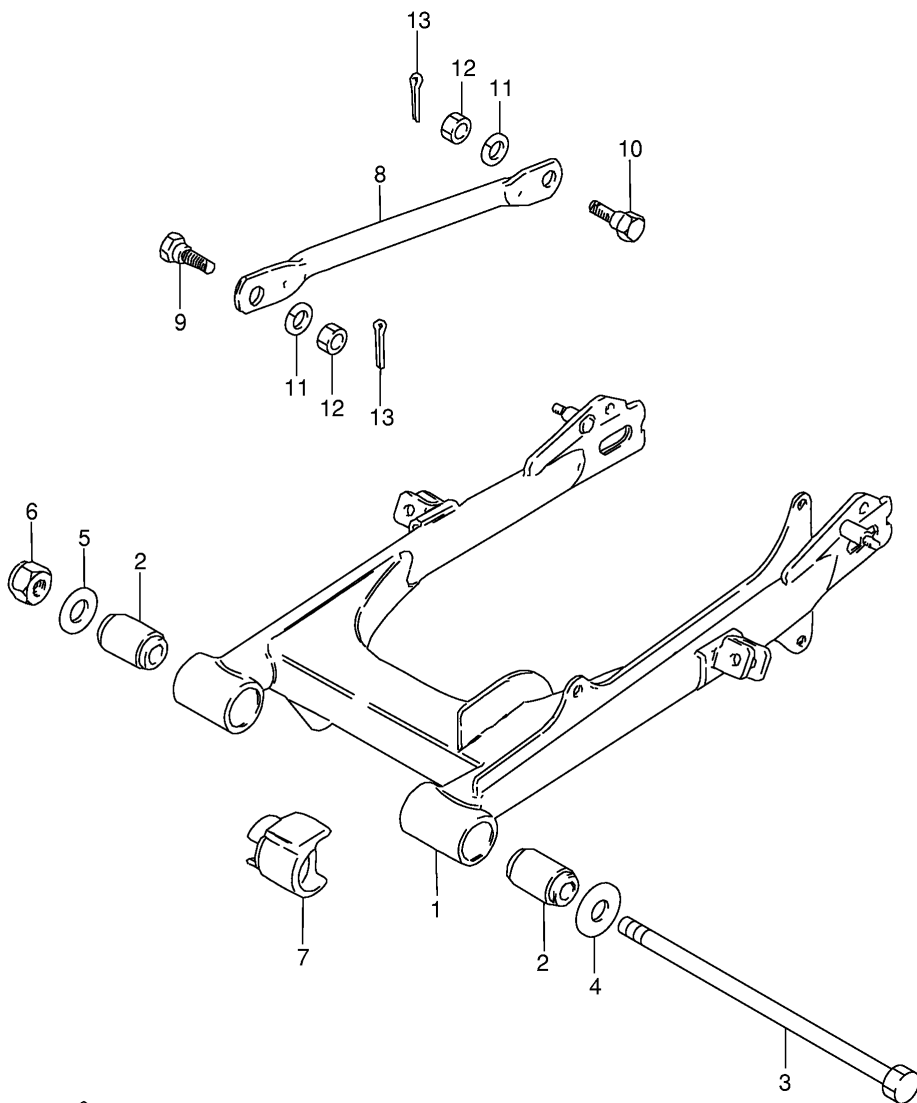 


Ref No	Part No	Description
1	61310-23461-13L	Chain Case (silver)
2	09116-06019	Bolt, Front (6x8)
3	09116-06019	Bolt, Rear (6x8)
4	62100-234B0-799	Absorber Assy, Rear Shock
4	62100-234C0	Absorber Assy, Rear Shock
5	09160-10127	Washer, Upper (10.5x24x2.30)
6	09160-10112	Washer, Upper (10.5x24x3.20)
7	08322-01127	Washer, Upper Inner
8	08313-10107	Nut
9	09160-10112	Washer, Lower (10.5x24x3.20)

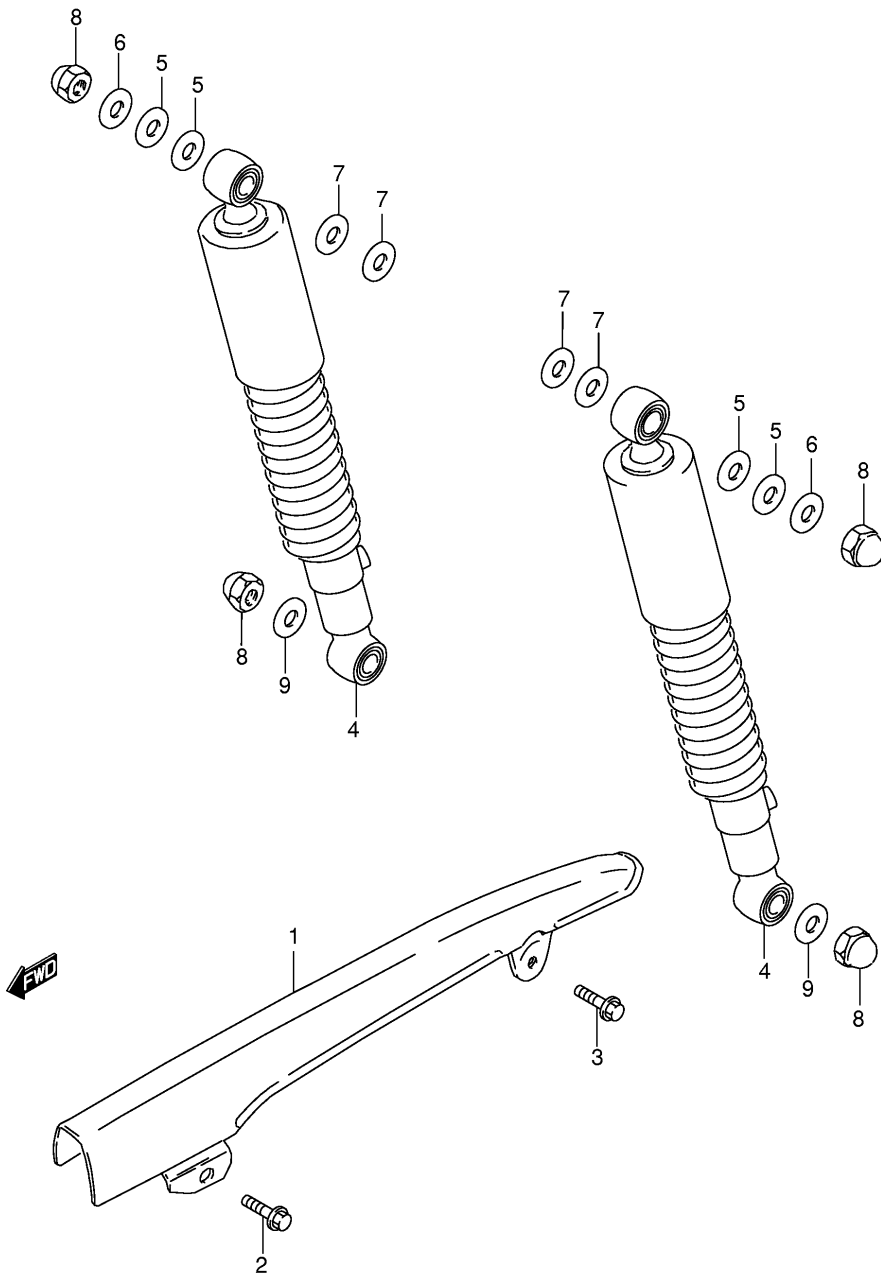 

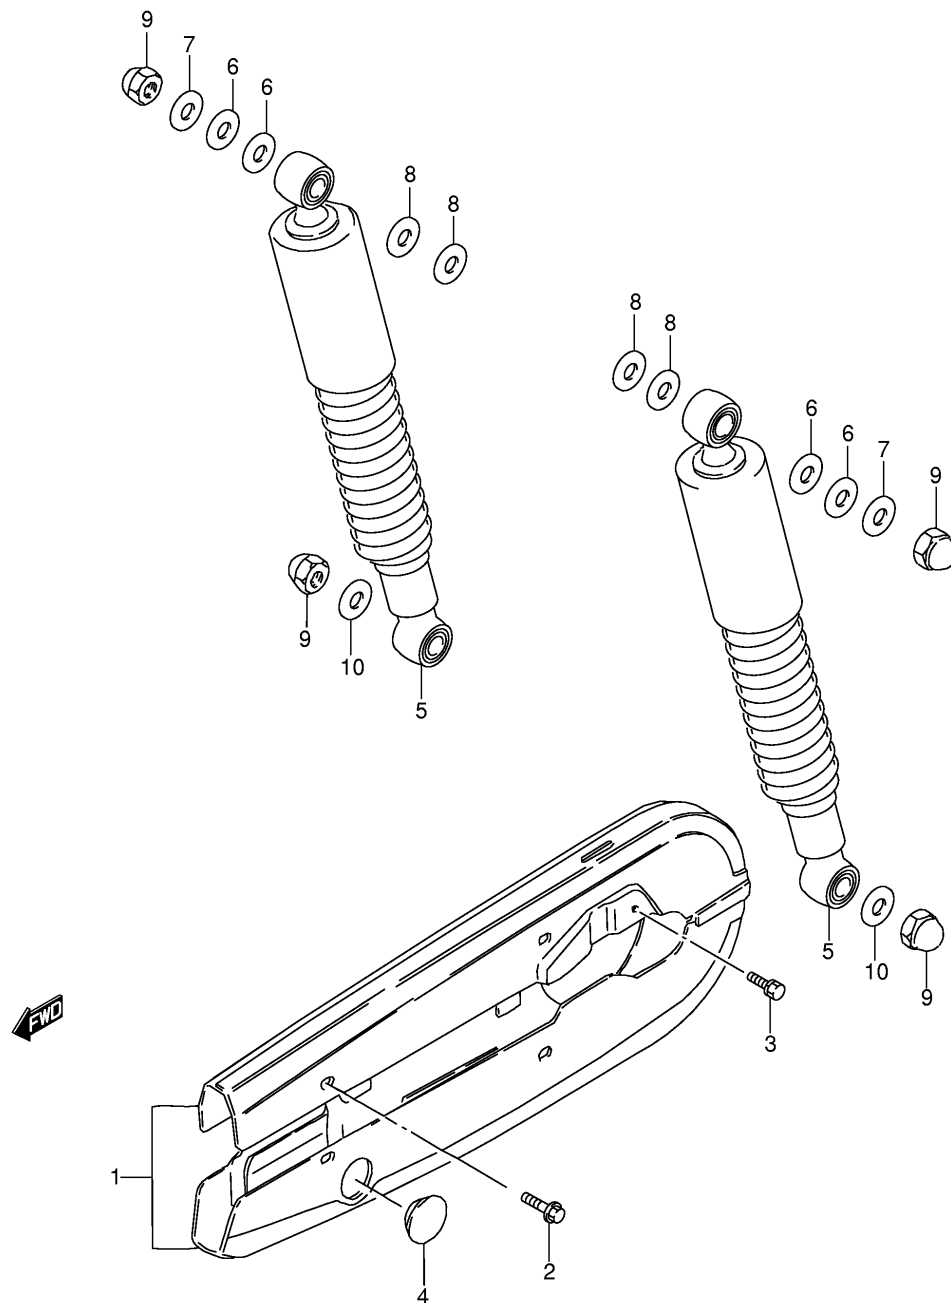 


Ref No	Part No	Description
1	61300-23811-13L	Case Set, Chain (silver)
2	09116-06019	Bolt (6x8)
3	09117-06002	Bolt (6x14)
4	09250-30001	Cap
5	62100-234C0	Absorber Assy, Rear Shock
6	09160-10127	Washer, Upper (10.5x24x2.30)
7	09160-10112	Washer, Upper (10.5x24x3.20)
8	08322-01127	Washer, Upper
9	08313-10107	Nut
10	09160-10112	Washer, Lower (10.5x24x3.20)

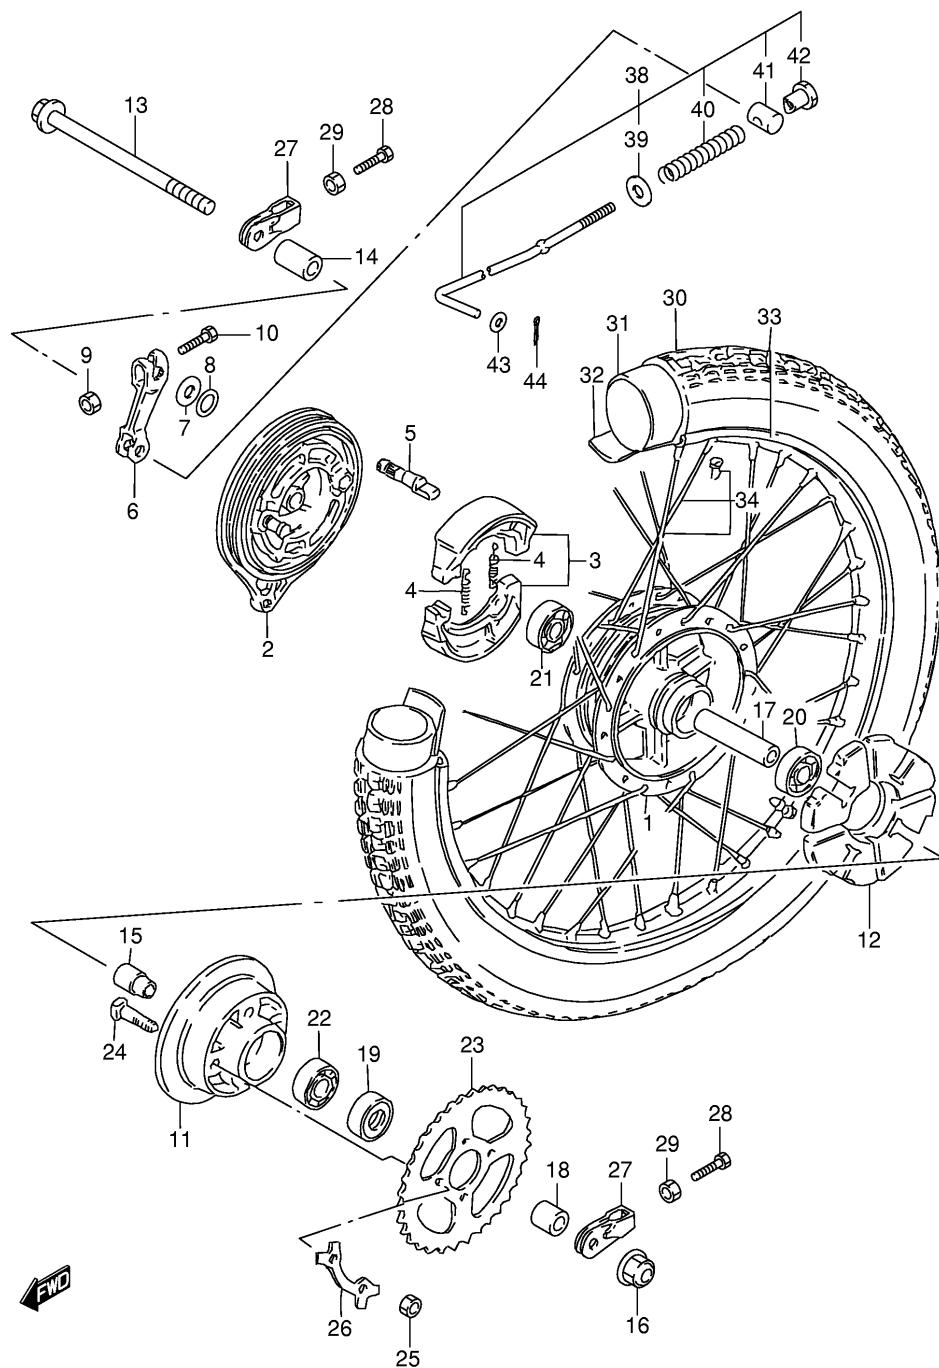 

Ref No	Part No	Description
1	64110-35002	Drum, Rear Wheel Hub
2	64210-46013	Panel, Rear Brake Anchor
3	54401-35880	Shoe Set, Brake
4	09443-07044	• . Spring (l:37.8)
5	54441-29305	Cam, Brake
6	64451-39100	Lever, Cam
7	09160-14055	Washer (14.5x22x1.60)
8	09280-14011	Dust Seal (id:13.8,dd:2.50)
9	08316-10063	Nut
10	09103-06045	Bolt (6x32)
11	64611-39200	Drum, Rear Sprocket
12	64651-010B1	Cushion, Hub Shock
13	64711-39201	Axle, Rear
14	09180-12065	Spacer, Rh (12.2x22x39)
15	64733-43000	Shaft, Sprocket, Drum
16	08319-31128	Nut
17	09180-12145	Spacer, Hub Bearing (12.5x19x58)
18	09180-12131	Spacer, Lh (12x25x25)
19	09285-25003	Oil Ael (25x40x6)
20	08143-62017	Bearing, Lh
21	08143-63017	Bearing, Rh
22	08113-62037	Bearing, Sprocket Drum
23	64511-23472	Sprocket, Rear (nt:44)
24	09105-08001	Bolt (8x33.5)
25	08310-00083	Nut
26	09169-08011	Lock Washer
27	61410-23450	Adjuster, Chain
28	09104-08034	Bolt (8x50)
29	08310-00083	Nut
30	65100-36011	Tire, Rear (2.75-18 42p) Irc
31	55200-11601	Tube Assy, Wheel Inner
32	55261-11010	Proector, Inner Tube
33	55311-12120	Rim, Wheel (1.40x18)
34	65320-12121	Spoke Set, Rear Wheel
35	43300-23450	Rod Assy, Rear Brake
36	08322-01063	• . Washer
37	09440-09004	• . Spring
38	09150-06014	• . Nut
39	09209-11002	• . Pin
40	08322-01053	• . Washer
41	04111-20208	• . Cotter Pin

Ref No	Part No	Description
1	64110-35002	Drum, Rear Wheel Hub
2	64210-46013	Panel, Rear Brake Anchor
3	54401-35880	Shoe Set, Brake
4	09443-07044	• . Spring (l:37.8)
5	54441-29305	Cam, Brake
6	64451-39100	Lever, Cam
7	09160-14055	Washer (14.5x22x1.60)
8	09280-14011	Dust Seal (id:13.8,dd:2.50)
9	08316-10063	Nut
10	09103-06045	Bolt (6x32)
11	64611-39200	Drum, Rear Sprocket
12	64651-010B1	Cushion, Hub Shock
13	64711-39001	Axle, Rear
14	09180-12065	Spacer, Rh (12.2x22x39)
15	64761-39000	Shaft, Sprocket, Drum
16	09141-10006	Nut
17	09180-12145	Spacer, Hub Bearing (12.5x19x58)
18	09140-16005	Nut, Lh
19	09180-17041	Spacer, Lh (12x25x25)
20	09285-25003	Oil Seal (25x40x6)
21	08143-62017	Bearing, Lh
22	08143-63017	Bearing, Rh
23	08113-62037	Bearing, Sprocket Drum
24	04111-20208	Cotter Pin
25	64511-23472	Sprocket, Rear (nt:44)
26	09105-08001	Bolt (8x33.5)
27	08310-00083	Nut
28	09169-08011	Lock Washer
29	61410-23450	Adjuster, Chain Rh
30	61420-23450	Adjuster, Chain Lh
31	09104-08034	Bolt (8x50)
32	08310-00083	Nut
33	65100-36011	Tire, Rear (2.75-18 42p) Irc
34	55200-11601	Tube Assy, Wheel Inner
35	55261-11010	Proector, Inner Tube
36	55311-05300	Rim, Wheel (1.60x18)
37	65320-12121	Spoke Set, Rear Wheel
38	43300-23450	Rod Assy, Rear Brake
39	08322-01063	• . Washer
40	09440-09004	• . Spring
41	09150-06014	• . Nut
42	09209-11002	• . Pin
43	08322-01053	• . Washer
44	04111-20208	• . Cotter Pin

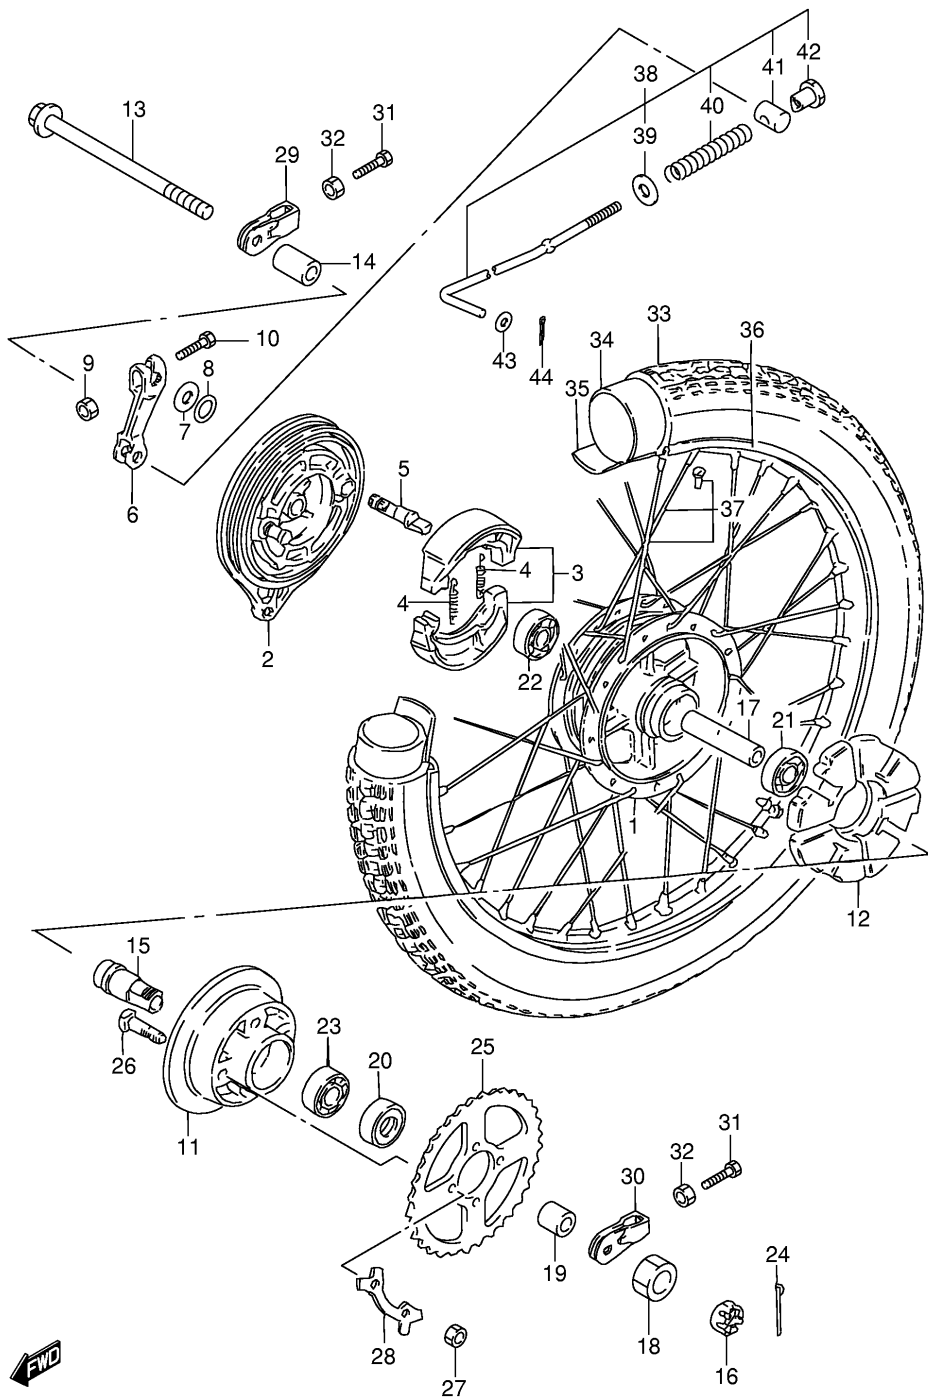 

Ref No	Part No	Description
1	99000-31030	Suzuki Bond, No.4
2	99000-32040	Cement, Thread Lock
3	99000-32030	Thread Lock, Super (1303b)
3	99000-32020	Thread Lock, Super (1333b)
3	99000-32050	Thread Lock, Super (1342)
3	99000-32110	Thread Lock, Super (1322)
3	99000-32120	Thread Lock, Super (1324)
4	99000-25030	Grease, Super
5	99000-10109-019	Paint (black)
5	99000-10209-13L	Paint (blight Silver)
5	99000-10209-1ZV	Paint (candy Teal Blueish
5	99000-10209-28V	Paint (marble Italian Red)
5	99000-10209-Y0P	Paint (candy Moon Shadow Blue)
6	99000-21145	Cci Oil (1lx24)
6	99000-21460	Cci Oil (1lx24)
6	99000-21021	Cci Oil (4lx6)
6	99000-21150	Cci Oil (200l)
6	99000-21250	Cci Super Oil (1lx24)
6	99000-21260	Cci Super Oil (4lx6)

