


MAZDA 626 1993-97

REAR LAMPS Cont'd


HIGH MOUNT STOP LAMP ON PACKAGE TRAY 4 DOOR Cont'd

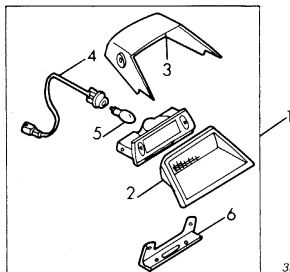

35-1044

- 4 Socket (a) GJ29-51-584A
5 Bulb (a) 0000-11-1156
6 Bracket, Lamp (a) GJ29-51-598
(a) Included w/Stop Lamp Assy


HIGH MOUNT STOP LAMP ON LIFTGATE 5 DOOR

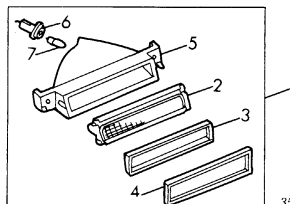

35-1045

- 1 Lamp Assy, Stop GJ37-51-580
2 Lens† GJ37-51-583
3 Protector† GJ37-51-589
4 Gasket† GJ37-51-582
5 Body† GJ37-51-585
6 Socket† BJ38-51-584
7 Bulb† 0000-11-1156
(†) Included w/Stop Lamp Assy

LICENSE LAMP 4 DOOR 1988-89

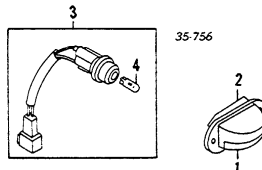


35-756

- 1 Lens R/L GJ21-51-281A
2 Gasket, Lens R/L G030-51-282
3 Socket w/Bulb Assy R/L GJ83-51-290
4 Bulb† R/L 0000-11-0194
(†) Included w/Socket w/Bulb Assy

LICENSE LAMP 4 DOOR 1990-91

Illustration Located in Next Column


- 1 Lamp Assy, License R/L 88G5-51-270A
2 Lens† R/L GJ21-51-281A
3 Gasket Lens† R/L G030-51-282
4 Holder Assy, Bulb† R/L GJ83-51-290
5 Bulb† (a) R/L 0000-11-0194

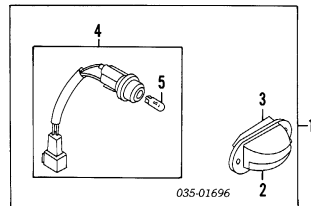

035-01696

- (†) Included w/License Lamp Assy
(a) Included w/Bulb Holder Assy


LICENSE LAMP 5 DOOR

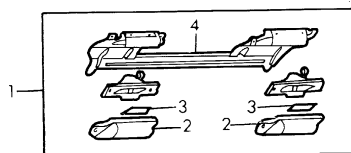

35-759

- 1 Lamp Assy, License G225-51-270C
2 Lens† R/L G225-51-274B
3 Gasket, Lens† R/L G225-51-273
4 Bulb† R/L 0000-11-0168
5 Bracket, Lamp† R/L G225-51-277
(†) Included w/License Lamp Assy

REAR BUMPER

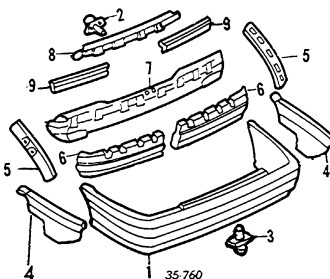

35-760

- 1 Cover, Rear Paint to Match
USA G215-50-221
Canada N.A.
Leather Pkg 91-92 G215-50-221
Tape, Stripe Bumper G215-50-222-5G
Leather Pkg L G215-50-228-5G
2 Fastener BF67-50-235
3 Upper (10) BF67-50-033
4 Lower (10) R/L G215-50-253-4
5 Support, Slide R/L G211-50-357-8
6 Seal, Side R G215-50-223
7 Absorber, Impact L G215-50-224
8 Bar, Reinforcement GJY0-50-26XA
9 Retainer, Bumper
Center G215-50-229
Outer Lower R G215-50-201
L G215-50-251

MAZDA 626 1993-97

SECTION INDEX

A/C /HEATER	158
A/C REFRIGERANT CAPACITIES.....	158
ABS/BRAKES.....	160
AIR BAG SYSTEM.....	160
AIR CLEANER.....	163
BACK WINDOW.....	170
CENTER CONSOLE.....	165
CLEAR COAT IDENTIFICATION.....	156
COOLING.....	158
COWL & DASH.....	165
CRUISE CONTROL SYSTEM.....	160
ELECTRICAL.....	164
EMISSION SYSTEM.....	164
ENGINE.....	162
ENGINE/TRANS MOUNTS.....	163
EXHAUST.....	163
FRONT BUMPER.....	157
FRONT DOOR.....	167
FRONT DRIVE AXLE.....	161
FRONT FENDER.....	159
FRONT INNER STRUCTURE.....	159
FRONT LAMPS.....	157
FRONT SEAT.....	166
FRONT STEERING LINKAGE/GEAR.....	161
FRONT SUSPENSION.....	161
FUEL TANK.....	172
GRILLE.....	157
HOOD.....	158
INFORMATION LABELS.....	156
INSTRUMENT PANEL.....	165
LUGGAGE LID.....	171
PAINT CODE LOCATION.....	156
QUARTER PANEL.....	170
REAR BODY.....	172
REAR BUMPER.....	173
REAR DOOR.....	169
REAR LAMPS.....	172
REAR SEAT.....	167
REAR SUSPENSION.....	171
ROCKER/PILLARS/FLOOR.....	166
ROOF.....	170
SEAT BELTS.....	167
SPECIAL CAUTIONS.....	156
STEERING PUMP.....	162
STEERING WHEEL/COLUMN.....	162
SUNROOF.....	170
UNDERHOOD DIMENSIONS.....	159
WHEEL.....	160
WINDSHIELD.....	164

SPECIAL CAUTIONS

SUPPLEMENTAL RESTRAINT SYSTEM

Refer to Procedure Explanation 29 for Supplemental Restraint/Air Bag Special Cautions.

SUSPENSION

Manufacturer advises that some new fasteners must be used whenever old fasteners are loosened or removed.

PAINT CODE LOCATION

Paint code located on left lock pillar.

CLEAR COAT IDENTIFICATION


All metallic colors and Code PD are clear coat.

INFORMATION LABELS

Illustration Located in Next Column

- 1 Fan Caution KL01-15-031
To VIN 504908 FS16-15-031
From VIN 504908
2 Logo K805-13-307
6 Cyl

MAZDA 626 1993-97

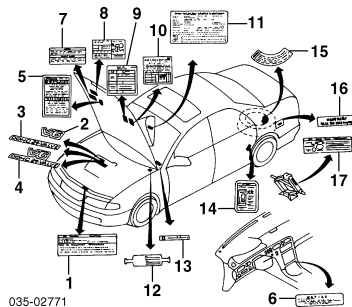


035-02771

- 3 DOHC 24 Valve K805-13-309
- 4 6 Cyl DOHC 24 Valve K805-13-309A
- 5 **Caution**
A/C Lifting Point
Air Bag Caution
On Dash
On Hood
- 6 Emission Info
USA
4 Cyl
w/Calif Emission
1993-94
1995-96
Man Trans
Auto Trans
1997
w/o Calif Emission
1993-94
1995-96
1997
Man Trans
Auto Trans
6 Cyl
w/Calif Emission
93-94
95-96
w/o Calif Emission
Canada
4 Cyl
Man Trans
Auto Trans
6 Cyl
*Order by Application
- 9 Oil Info
- 10 Bolt Caution
4 Cyl
6 Cyl
To VIN 539404
From VIN 539404
- 11 Tire Pressure
4 Cyl
6 Cyl
- 12 Air Bag Caution
- 13 VIN Plate
Caution Plate
Rivet Caution
- 14 Child Proof
To 7-10-96
From 7-10-96
- 15 Temporary Tire
To 6-13-96
From 6-13-96
- 16 Unleaded Fuel
- 17 Jack Caution

FRONT BUMPER


Illustration Located in Next Column

- 1 Cover, Front (P)
(P) Paint to Match
- 2 Reinforcement Assy
- 3 Retainer, Cover
- 4 Clip, Retainer (5/Side)
- 5 Screw (17/Side)
- 6 Plate, Junction
*Included w/Reinforcement Assy
- 7 Fastener, Cover (3)
- 8 Retainer, Cover Side
- 9 Bracket, Cover Side
- 10 Plate, Cover Side

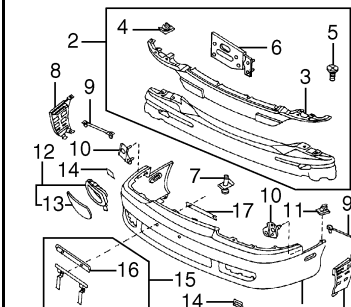

035-02505

- 11 Grommet
- 12 Cover Assy, Lamp
1993-95 (P)
1996-97
Black
Dark Gray
(P) Paint to Match
- 13 Cover, Lamp Hole
1993-95
1996-97-Serviced w/Lamp Cover Assy
*Included w/Lamp Cover Assy
- 14 Clip, Lamp Cover (2/Side)
- 15 Frame Assy, License
- 16 Retainer, Frame Front
*Included w/License Frame Assy
- 17 Retainer, Frame Rear

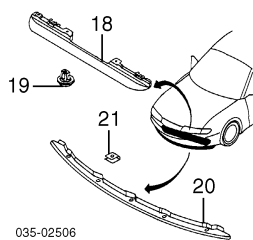


035-02506

- 18 Spoiler, Upper Air
- 19 Grommet, Upper Spoiler (2)
- 20 Spoiler, Lower Air
- 21 Nut, Clip (5)

GRILLE


1993-95

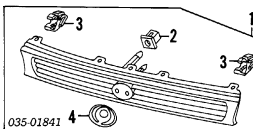

035-01841

- 1 Grille Assy
1993 (P)
1994-95
Body Color (P)
Bright
(P) Paint to Match
- 2 Fastener, Grille (2)
- 3 Clip, Grille (4)
- 4 Emblem
Clip, Emblem (2)
*Included w/Grille Assy

1996-97

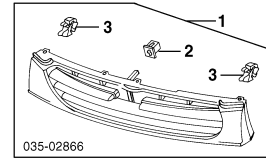


035-02866

- 1 Grille Assy (P)
(P) Paint to Match
- 2 Fastener, Grille (a) (2)
- 3 Clip, Grille (a) (4)
(a) Included w/Grille Assy

FRONT LAMPS


COMBINATION LAMP

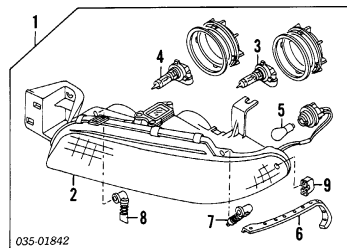

035-01842

- 1 Lamp Assy
- 2 Lens & Body
- 3 Bulb, Headlamp Outer
- 4 Bulb, Headlamp Inner
- 5 Bulb, Signal
- 6 Protector
- 7 Hose, Headlamp Outer
- 8 Hose, Headlamp Inner
- 9 Hose, Signal
*Included w/Lamp Assy

 
SIDE MARKER LAMP



035-01792

- 1 Lamp Assy
- 2 Lens & Body
- 3 Bulb
- 4 Socket
*Included w/Lamp Assy

FOG LAMP

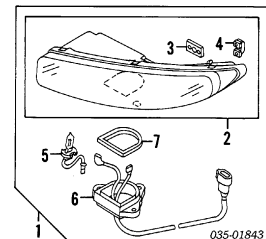

035-01843

- 1 Lamp Assy
- 2 Lens & Body Assy
- 3 Brkt, Lamp (a) (2/Side)

madpi1_g01_

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.
Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.

157


MAZDA 626 1993-97

FRONT LAMPS Cont'd

FOG LAMP Cont'd

- | | |
|---------------------------------|------------------|
| 4 Hose, Lens (a) | R/L GA2A-51-6H8 |
| (a) Included w/Lens & Body Assy | |
| 5 Bulb (a) | R/L 0000-11-0H3 |
| 6 Socket w/Wire (a) | R/L GA2A-51-6G4A |
| 7 Gasket (a) | R/L GA2A-51-6B2 |
| (a) Included w/Lamp Assy | |

HOOD

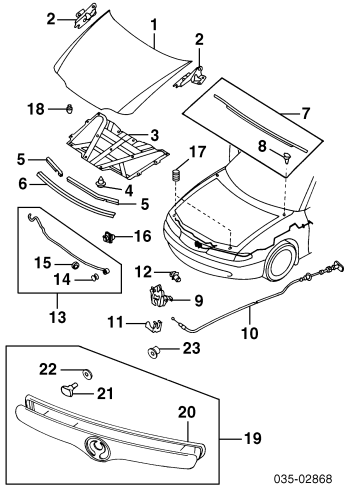


- | | |
|---|------------------------------|
| 1 Panel, Hood | 93-95 GAYK-52-310A |
| 2 Hinge | 96-97 GD1E-52-310F |
| 3 Insulator | R GA2K-52-410B |
| 4 Clip, Insulator (13) | L GA2K-52-420B |
| 5 Seal, Hood | 93-95 GA2K-68-601A |
| | 96-97 GD1E-56-681 |
| | GA2A-56-694 |
| | 93-95 R GA2K-96-730A |
| | L GA2K-96-750B |
| | 96-97 R GD1E-56-77X |
| | L GD1E-56-77Y |
| 6 W/Strip, Hood Front | 93-95 GA2K-56-770D |
| | 96-97 GD1E-56-770A |
| 7 Weatherstrip Assy, Hood Rear | 96-97 GD1E-56-760B |
| 8 Retainer, W/Strip (a) | R/L GD31-58-762 |
| (a) Included w/Hood Rear Weatherstrip Assy | |
| 9 Latch w/Theft Deterrent w/o Theft Deterrent | GA2L-56-620A |
| | GA2K-56-620A |
| | GA2K-56-720A |
| 10 Cable, Release | LA01-56-631 |
| 11 Fastener, Cable | R/L D001-56-731 |
| 12 Clip, Cable | GA2A-56-650C |
| 13 Rod Assy, Prop | GA5R-56-695 |
| 14 Retainer, Rod Rear (a) | GA2A-52-512 |
| 15 Spacer, Rod (a) (2) | (a) Included w/Prop Rod Assy |
| 16 Retainer, Rod Front | GA2K-56-693A |
| 17 Cushion, Hood Front Outer | R/L A001-56-796 |
| 18 Cushion, Hood Front Inner | R/L B092-62-877 |
| 19 Moulding Assy, Hood | 1993-95-Not Applicable |
| | 1996-97 GD1E-50-4A0D |
| 20 Protector, Midge (a) | GD1E-50-4A2D |
| 21 Bolt, Moulding (4) | GD1E-50-4A9A |
| 22 Gasket, Bolt (4) | GD1E-50-4A8 |
| (a) Included w/Hood Moulding Assy | |
| 23 Nut, Moulding (4) | LA01-50-4KYA |

COOLING

4 CYL


Illustration Located in Next Column

- | | |
|------------------------------|-------------------------|
| 1 Radiator Assy | Man Trans FS11-15-200D |
| | Auto Trans FS12-15-200E |
| 2 Cap, Radiator (a) | AS01-15-205 |
| 3 Plug, Drain (a) | A001-15-203 |
| (a) Included w/Radiator Assy | |
| 4 Brkt, Radiator | R FS25-15-240B |

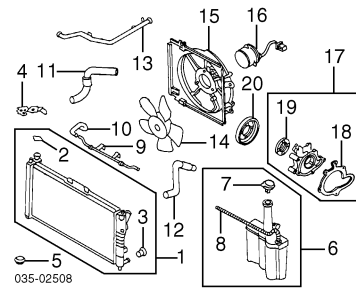

- | | |
|----------------------------------|------------------------------------|
| 5 Mount, Radiator | Man Trans FS25-15-250B |
| | 1993-94 R/L K802-15-202 |
| | 1995-97 w/A/C R/L K804-15-202 |
| | Auto Trans w/o A/C R/L K802-15-202 |
| | 1993-95 R/L FS02-15-202 |
| | w/o A/C R/L K802-15-202 |
| | 1996-97 w/A/C R/L FP12-15-202 |
| | w/o A/C R/L FS91-15-202 |
| 6 Tank Assy, Coolant | FS11-15-350D |
| 7 Cap, Tank (a) | FS11-15-355 |
| 8 Hose, Water (a) | 9302-40-757 |
| (a) Included w/Coolant Tank Assy | |
| 9 Pipe, Coolant | FS01-15-190C |
| 10 Hose, Coolant | FS01-15-381 |
| 11 Hose, Rad Upper | 93-94 FSM1-15-185A |
| | 95-97 FS04-15-185 |
| | 93-94 FS05-15-186 |
| | 95-97 FSC4-15-186 |
| | FS01-15-290C |
| 12 Hose, Rad Lower | |
| 13 Pipe, By-Pass | |
| 14 Blade, Fan | 1993-95 FE68-15-140A |
| | Man Trans FS12-15-140 |
| | Auto Trans FE68-15-140A |
| | 1996-97 |
| 15 Shroud, Fan | 1993-95 FS11-15-210 |
| | Man Trans FS12-15-210A |
| | Auto Trans FS11-15-210 |
| 16 Motor, Fan | 93-94 FS11-15-150 |
| | Man Trans FS59-15-150 |
| | Auto Trans 93-94 KL20-15-150 |
| | 95 KL56-15-150 |
| | 96-97 FS09-15-150 |
| 17 Pump Assy, Water | 8AG9-15-010 |
| 18 Gasket, Water Pump (a) | FS02-15-116 |
| 19 Plate, Pulley (a) | FS01-15-117A |
| (a) Included w/Water Pump Assy | |
| 20 Pulley, Pump | FS01-15-131 |

6 CYL

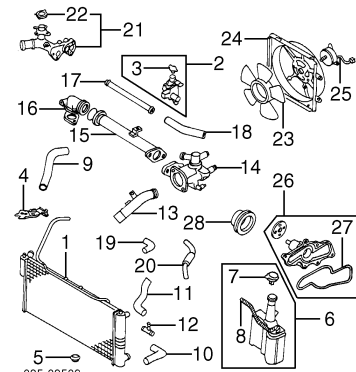


- | | |
|------------------------------------|-------------------------|
| 1 Radiator | Man Trans KL11-15-200D |
| | Auto Trans KL12-15-200D |
| 2 Tank Assy, Expansion | KL78-15-30X |
| 3 Cap, Expansion Tank (a) | KL11-15-205A |
| (a) Included w/Expansion Tank Assy | |
| 4 Brkt, Radiator | R FS25-15-240B |

- | | |
|----------------------------------|------------------------|
| 5 Mount, Radiator | L FS25-15-250B |
| 6 Tank Assy, Coolant | R/L K802-15-202 |
| 7 Cap, Tank (a) | FS11-15-350D |
| 8 Hose, Water (a) | FS11-15-355 |
| (a) Included w/Coolant Tank Assy | |
| 9 Hose, Rad Upper | 93-94 KL05-15-186 |
| | 95-97 KL56-15-186 |
| 10 Hose, Rad Lower | |
| 11 Union | 93 KL05-15-189A |
| | 94-97 KL56-15-189 |
| | 93-94 KL05-15-185B |
| | 95-97 KL56-15-185 |
| 12 Pipe, Water | KL01-15-197 |
| 13 Cover, Thermostat | K805-15-180C |
| 14 Pipe, Front Water | KL01-15-172 |
| 15 Inlet, Water Pump | KL01-15-190B |
| 16 Pipe, Water By-Pass | KL01-15-161A |
| 17 Hose, Crossover | KL01-15-270 |
| 18 Hose, Upper By-Pass | KL01-15-261 |
| 19 Hose, Lower By-Pass | KL11-15-183 |
| 20 Outlet Assy, Water | 93-94 KL05-15-184D |
| | 95-97 KL56-15-184 |
| 21 Cap, Outlet (a) | 93-94 K817-15-172D |
| | 95-97 KL61-15-172C |
| | 93-94 KF01-15-205 |
| | 95-97 KL61-15-205 |
| (a) Included w/Water Outlet Assy | |
| 23 Blade, Fan | 1993-94 FS12-15-140 |
| | Man Trans KL12-15-140 |
| | Auto Trans FS12-15-140 |
| | 1995-97 FS12-15-140 |
| 24 Shroud, Fan | FS12-15-210A |
| 25 Motor, Fan | 93-94 KL20-15-150 |
| | 95-97 KL56-15-150 |
| 26 Pump Assy, Water | 8AK2-15-010 |
| 27 Gasket, Water Pump (a) | KL01-15-106 |
| (a) Included w/Water Pump Assy | |
| 28 Pulley, Water Pump | KL47-15-131 |

A/C REFRIGERANT CAPACITIES

- A/C R-12 Refrigerant Capacity
1993: 26 Ozs (1.62 Lbs)
A/C R-134 Refrigerant Capacity
1994-97: 24.7 Ozs (1.54 Lbs)


A/C /HEATER

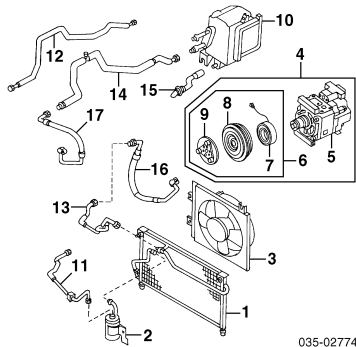


- | | |
|---------------------------------------|--------------------------|
| 1 Condenser | GB6H-61-480 |
| 2 Receiver/Drier | GB6H-61-500 |
| 3 Fan, Condenser | |
| 4 Cyl | To 6-13-95 GA2A-61-710A |
| | From 6-13-95 GD1E-61-710 |
| | 6 Cyl GA2E-61-710A |
| 4 Compressor Assy | 93-94 GA2A-61-450 |
| | 95-97 GB6H-61-450D |
| | 93-94 GA2E-61-450 |
| | 95-97 GB6M-61-450D |
| 5 Compressor (a) | GA2A-61-K00 |
| | 1993-94 |
| | 1995-96 GB6H-61-450D |
| | To 5-7-96 GB6H-61-450D |
| | From 5-7-96 GB6H-61-450D |
| 6 Clutch Assy, Compressor (a) | 93-94 GA2A-61-L10 |
| | 95-97 GB6H-61-L10 |
| | 6 Cyl 93-94 GA2E-61-L10 |
| | 95-97 GB6M-61-L10 |
| 7 Coil, Clutch (a) | 93-94 GA2A-61-L13 |
| | 95-97 GB6H-61-L13 |
| 8 Pulley, Clutch (a) | GA2A-61-L12 |
| | 4 Cyl 93-94 GA2A-61-L12 |
| | 6 Cyl 95-97 GB6M-61-L12 |
| 9 Armature, Clutch (a) | 93-94 D061-61-L11 |
| | 95-97 GB6H-61-L11 |
| (a) Included w/Compressor Assy | |
| (a) Included w/Compressor Clutch Assy | |

MAZDA 626 1993-97

- Belt, Alternator-See Electrical Section**
- 10 Evaporator 93-94 GA2A-61-520C
95-97 GB6H-61-520A
- 11 Pipe, High Pressure Front 1993-94 GA2A-61-46ZB
1995-96 GB6H-61-46Z
1997
4 Cyl GD4T-61-464
6 Cyl GD4W-61-464
GB6H-61-466A
- 12 Pipe, High Pressure Rear
Pipe, Low Pressure Front 93-94 GA2A-61-469A
95-97 GB6H-61-469A
93-94 GA2A-61-465B
95-97 GB6H-61-465
GA2A-61-52X
- 14 Rear 93-94 GA2A-61-469A
95-97 GB6H-61-469A
93-94 GA2A-61-465B
95-97 GB6H-61-465
GA2A-61-52X
- 15 Hose, Drain
16 Hose, High Pressure 4 Cyl GB6H-61-4G0A
6 Cyl GB6M-61-4G0B
- 17 Hose, Low Pressure 4 Cyl
To 11-15-95 GD1E-61-4T0
From 11-15-95 GD1E-61-462
6 Cyl GB6M-61-4T0A

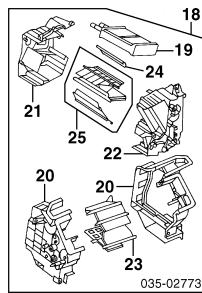

- 18 Heater Assy 93 GA2A-61-130B
94 GB6H-61-130B
95-97 GC1M-61-130A
GA2A-61-A10
- 19 Core, Heater 93 R GA2A-61-A04
L GA2A-61-A03
- 20 Case, Heater Outer 94-97 R/L GB6H-61-A03-4
93-94 GA2A-61-A02
95-97 GC1M-61-A02
- 21 Case, Htr Inner Frnt 93-94 GA2A-61-A01
95-97 GC1M-61-A01
- 22 Case, Htr Inner Rear 93 GA2A-61-A1X
94-97 GB6H-61-A1X
GA2A-61-A1Z
GA2A-61-A1Y
- 23 Damper, Heater Outer 93 GA2A-61-A1X
94-97 GB6H-61-A1X
GA2A-61-A1Z
GA2A-61-A1Y
- 24 Damper, Htr Inr Upper 93 GA2A-61-A1X
94-97 GB6H-61-A1X
GA2A-61-A1Z
GA2A-61-A1Y
- 25 Damper, Htr Inr Lower 93 GA2A-61-A1X
94-97 GB6H-61-A1X
GA2A-61-A1Z
GA2A-61-A1Y
- Included w/Heater Assy*

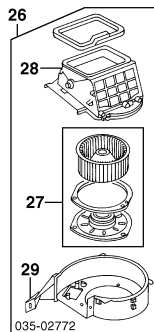


- 26 Blower Assy GA2A-61-140F
27 Motor w/Fan GA2A-61-B10
28 Case, Upper GA2A-61-B01
29 Case, Lower GA2A-61-B02
- Included w/Blower Assy*

FRONT FENDER SHEET METAL


Illustration Located in Next Column

- 1 Fender R GAYK-52-110B

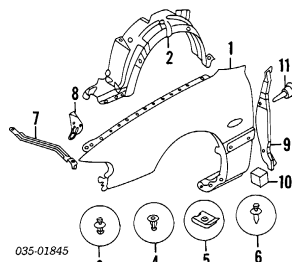

- 2 Liner, Fender L GAYK-52-210B
R GA2K-56-131A
L GA2K-56-141A
- 3 Retainer, Fender Liner Type A (2/Side) 93-94 R/L B455-56-143
95-97 R/L UB39-45-919
93-94 R/L B455-56-145
95-97 R/L B810-56-639
- 4 Type B (2/Side) 93-94 R/L B455-56-145
95-97 R/L B810-56-639
- 5 Type C (2/Side) R/L B897-61-122
- 6 Type D (9/Side) R/L NA01-56-145
- 7 Stay, Fender R/L GA2K-56-211B
- 8 Hook, Tow R GA2C-53-36X
GA2C-54-36X
R GA2K-56-391E
L GA2K-56-396E
- 9 Plate, Seal R/L GD4T-56-458
- 10 Insulator, Plate R/L GA2A-56-399A
- 11 Fastener, Plate (2/Side) R/L GA2A-56-399A


EXTERIOR TRIM

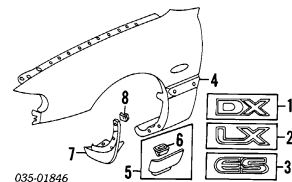

- 1 Decal *DX To 9-13-95 R/L GA2K-51-761-62
From 9-13-95 R/L GA2K-51-761A
- 2 *LX To 9-13-95 R/L GA2M-51-761-62
From 9-13-95 R/L GC1M-51-761
- 3 *ES To 9-13-95 R/L GA2P-51-761-62
From 9-13-95 R/L GA2P-51-761-62
- 4 Moulding, Side Adhesive R GA2K-50-681C-00
L GA2K-50-691C-00
- Included w/Heater Assy*
- Brilliant Black listed, Order by Application*
- G1 Sahara Gold Metallic; G3 Arctic Blue Metallic;
T3 Platinum OpM; J4 Passion Rose; NN Ebony;
B1 Valencia Rose Mica; UK Performance White;
5S Neat Green; 56 Opal; 64 New Sahara Gold
B8 Champagne M; J3 Platinum OpM; J4 Passion Rose;
PZ Brilliant Black; UA Cameo White; 4Y Caribbean Blue M
5S Neat Green MC; G1 Sahara Gold; G3 Arctic Blue;
16E Sandalwood; C8 12X Timberline;
13B Medium Poppy; 11G Opal
- 5 Moulding Assy, Lower Clip-On 1993 R GA2K-50-L10A
L GA2K-50-L20A
- 1994-97-Not Serviced
- 6 Clip, Midg (2/Side) R/L H115-50-313A
- Included w/Lower Moulding Assy*
- 7 Guard, Splash 1993 R GA2L-51-840
L GA2K-51-850B-5S
1994-95 R GA7C-51-840A
L GA7C-51-850A
1996-97 R GA2M-51-850
L GA2M-51-850
- Brilliant Black listed, Order by Application*
- B8 Champagne M; J3 Platinum OpM; J4 Passion Rose;
PZ Brilliant Black; UA Cameo White; 4Y Caribbean Blue M;
5S Neat Green MC; G1 Sahara Gold; G3 Arctic Blue
- 8 Grommet R/L B092-51-832


UNDERHOOD DIMENSIONS

Illustration Located in Next Column

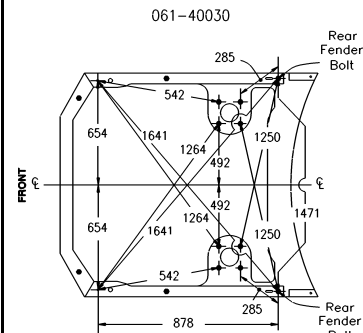


FRONT INNER STRUCTURE

FRONT

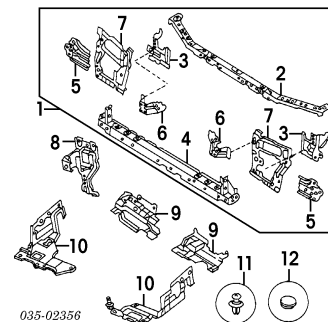

- 1 Support Assy, Radiator GA2K-53-100W
- 2 Tie Bar Upper GA2A-53-150E
- 3 Brkt, Upper Tie Bar R GA2A-53-161E
L GA2A-54-161C
- 4 Tie Bar Lower GA2A-53-16XH
- 5 Bracket, Bumper R GA2K-53-12VC
L GA2K-54-12VC
- 6 Bracket, Lamp R GA2K-53-12XC
L GA2K-54-12XC
- 7 Panel, Shroud R GA2K-53-120
L GA2K-54-120D
- Included w/Radiator Support Assy*
- 8 Support, Hood Latch GA2K-52-15YB
- 9 Seal, Rad Support R GA2K-56-381E
L GA2K-56-382E
- 10 Cover, Engine Under R GA2A-56-330
L GA2A-56-341A
- 11 Retainer, Cover R/L UB39-45-919
- 12 Cover, Service Hole 0810-56-639

SIDE

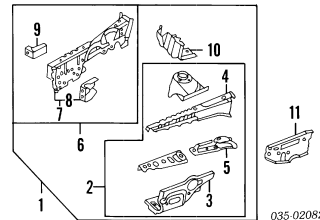

- 1 Apron Assy R GAYK-53-20Y
L GAYK-54-20Y
- 2 Panel Assy, Apron R GAYK-53-21Y
L GAYK-54-21Y
- 3 Panel, Apron (a) R GA2A-53-220F
L GAYK-54-22Y
- 4 Reinf, Upper Apron (a) R GA2K-53-260B
L GA2K-54-260A
- 5 Reinf, Lower Apron (a) R GA2A-53-270D
L GA2A-54-270D

madpi1_g01_

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.
Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.


159

MAZDA 626 1993-97

FRONT INNER STRUCTURE Cont'd


SIDE Cont'd

- (a) Included w/Apron Panel Assy
- 6 Frame Assy, Side† R GA2A-53-31XH
L GA2A-54-31XJ
- 7 Rail Assy, Frame† (a) R GA2A-53-320F
L GA2A-54-320G
- 8 Reinf, Bumper† (a) (b) R GA2A-53-323
L GA2A-54-323A
- (b) Included w/Frame Rail Assy
- 9 Bracket, Bumper† (a) R/L GA2A-54-335A
- (a) Included w/Side Frame Assy
- 10 Frame, Side† R GA2A-53-390C
L GA2A-54-390C
- †Included w/Apron Assy
- 11 Reinf, Apron R GA2K-53-291A
L GA2K-54-291A

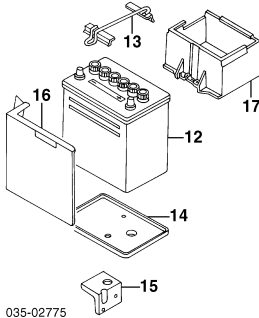

- 12 Battery-See Electrical Section
- 13 Clamp, Battery GA2A-56-042
- 14 Tray, Battery GA2A-56-040A
- 15 Brkt, Battery Clamp GD7A-56-03Y
- 16 Shield, Battery FS01-18-591D
- 17 To 5-22-96 FSC1-18-591

ABS/BRAKES

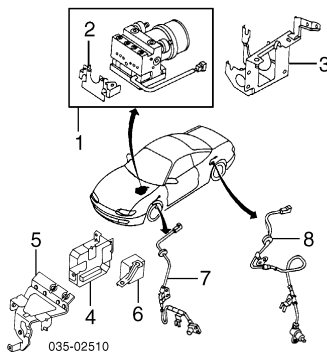


- 1 Actuator Assy, ABS
- 1993-94 GA2G-43-7A0C
- 1995 GB6N-43-7A0
- 1996-97
- To 6-24-96 GB6N-43-7A0
- From 6-24-96 GD4T-43-7A0A
- 2 Cover, Actuator†
- To 2-24-92 B603-43-7A4
- From 2-24-92 GA2G-43-7A4
- †Included w/ABS Actuator Assy
- 3 Bracket, Actuator
- 1993-94 GA2G-43-310A
- 1995 GA2G-43-310B
- 1996-97
- To 6-24-96 GA2G-43-310B
- From 6-24-96 GA2G-43-310B
- 4 Computer, ABS
- 1993-94 GA2A-67-650
- 1995 KB42-67-650
- 1996-97
- To 6-24-96 KB42-67-650
- From 6-24-96 GD1E-67-650A
- 5 Bracket, Computer
- GA2A-67-990A
- 6 Relay, ABS GA2B-67-740A

Rotor, Sensor Frit-See Front Suspension Section

- Rotor, Sensor Rear-See Rear Suspension Section
- 7 Sensor, ABS Front
- To 12-8-94 R G06T-43-70X
L G06T-43-73X
- From 12-8-94 R G06T-43-70X
L G06T-43-73X
- 8 Sensor, ABS Rear
- To 5-4-92 R G06T-43-71Y
L G06T-43-72Y
- From 5-4-92 R G06T-43-71Y
L G06T-43-72Y


CRUISE CONTROL SYSTEM

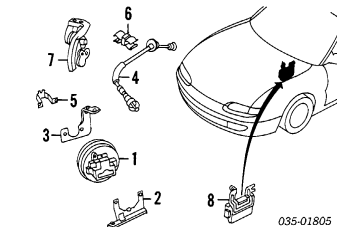

- 1 Actuator, Cruise
- 4 Cyl GA2B-66-312
- Man Trans GB6H-66-312B
- Auto Trans GA2B-66-312
- 2 Brkt, Actuator Front
- 4 Cyl GA2B-66-3A2A
- Man Trans GB6H-66-3A1A
- Auto Trans GA2B-66-3A2A
- 3 Brkt, Actuator Rear
- 4 Cyl GA2B-66-3A1A
- Man Trans
- Auto Trans Not Applicable
- 6 Cyl GA2B-66-3A1A
- 4 Cable, Cruise Control
- 4 Cyl GA2B-66-311B
- Man Trans 93 GA2B-66-311B
- Auto Trans 94-97 GB6H-66-311
- 6 Cyl
- Man Trans GA2C-66-311
- Auto Trans GA2D-66-311
- 5 Brkt, Cable GA2B-66-3A8
- 6 Clip, Cable UC94-45-960
- 7 Linkage, Cable KL01-13-64X
- 8 Computer, Cruise
- 4 Cyl
- Man Trans 93-94 GA2B-66-320C
- Auto Trans 95-97 GC1M-66-320A
- 93 GA2B-66-320C
- 94 GB6H-66-320
- 95-97 GC1P-66-320A
- 93-94 GA2B-66-320C
- 95-97 GC1M-66-320A

AIR BAG SYSTEM

1993-94

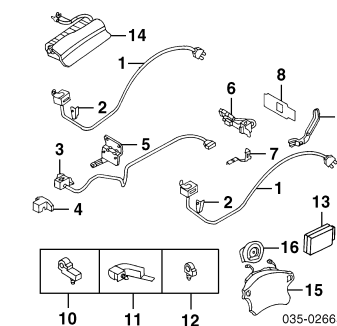


- 1 Sensor, Front R GA2A-57-K2XH
L GA2A-57-K2YF
- 2 Brkt, Front Sensor R GA2A-57-KX2A
L GA2A-57-KY2A
- 3 Sensor, Center GA2A-57-K1XH
- 4 Cover, Center Sensor GA2A-57-K47A
- 5 Brkt, Center Sensor GA2A-57-KX0C
- 6 Sensor, Inner GA2A-57-K40C
- 7 Brkt, Inner Sensor GA2A-57-KX7C
- 8 Cover, Hole GA2A-57-GW2A

Clip, Front Sensor

- R/L GA2B-57-K97
- 9 Retainer, Sensor
- Type A R/L GA2A-57-K92A
- Type B R/L GA2A-57-K95C
- Type C (4/Side) R/L GA2E-57-K96
- 10 Control Unit, Diagnosis GA2A-57-7F0A
- 11 Module, Air Bag
- 12 Driver Side GB6H-57-K00
- 13 Passenger Side
- 1994 GC1M-57-K70A-90
- Brown GC1M-57-K70A-29
- Gray GB6H-66-CS0D
- 16 Clockspring


1995-97

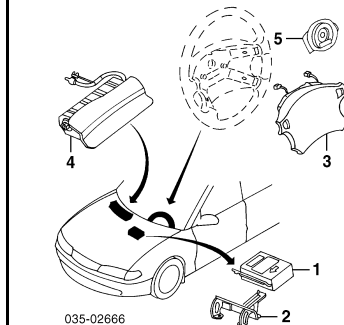

- 1 Sensor Unit, Air Bag GE5G-57-K30
- 2 Brkt, Air Bag Sensor GC1M-57-K00B
- 3 Module, Air Bag GC1M-57-K00
- 4 Driver Passenger
- GCYP-57-K70-90
- Gray GCYP-57-K70-29
- 5 Clockspring GB6H-66-CS0D


WHEEL

STEEL WHEEL

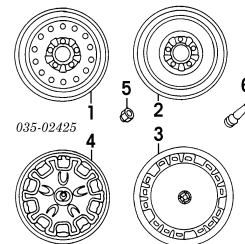

- 1 Wheel, Steel 93-94 9965-C4-5540
- 95-97 9965-F9-5540
- 2 Wheel, Spare 9965-21-4050
- 3 Cover, Wheel
- 93-94 GA2K-37-170B
- 95-96 GC1N-37-170B
- 4 Multi-Spoke Style 97 GD1F-37-170
- 5 Nut, Lug 0603-26-161A
- 6 Stem, Valve 93-94 9963-60-4130
- 95-97 9963-60-4130

ALUMINUM WHEEL

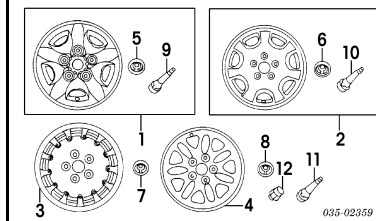


- 1 Wheel Assy, 5 Spoke Style
- 4 Cyl 93-94 8DGP-37-600


MAZDA 626 1993-97

- 2 Wheel Assy, 7 Spoke Style
6 Cyl 93-94 8DGR-37-600
- 3 Wheel Assy, 3 Piece Style
4 Cyl 95-97 9965-18-6040
- 4 Wheel Assy, Snowflake Style
6 Cyl 95-97 9965-A1-6050
- 5 Cap, Center (4 Cyl)
93-94 GA2P-37-192B
- 6 Cap, Center (6 Cyl V6)
93-94 GA2P-37-192B
- 7 Cap, Center (4 Cyl)
95-97 GC1M-37-192
- 8 Cap, Center (6 Cyl V6)
95-97 GC1S-37-192
- Stem, Valve
1993-94
- 9 4 Cyl 9963-60-4130
- 10 6 Cyl 9963-60-4130
- 11 1995-97 9963-60-4130
- 12 Nut, Lug
B002-37-160A


FRONT SUSPENSION

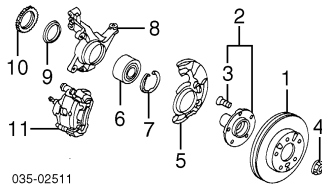

- 1 Rotor, Brake
R/L GA2Y-33-25XA
- 2 Hub Assy
R/L GA2A-33-060D
- 3 Stud, Wheel
R/L J00Y-33-062
- 4 Nut, Axle
R/L CJ21-33-042B
- 5 Plate, Backing
R/L GA2A-33-051
- 6 Bearing
L GA2A-33-271
- 7 Ring, Snap
R/L GA2A-33-047D-MV
- 8 Knuckle, Steering
R/L GA2A-33-021A
- 9 Seal, Oil
L GA2A-33-031A
- 10 Rotor, ABS Sensor
R/L GA2A-33-085
- 11 Sensor, ABS Front-See Anti-Lock Brake System Section
R/L GA2G-33-471A
- Caliper, Brake
R/L GAYA-33-982R
- Hose, Brake
L GAYA-33-992R
- R/L B455-43-980B

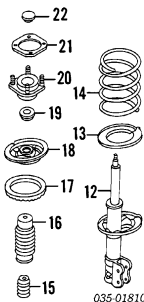


- 12 Strut
R/L GA8N-34-700C
- 13 Seat, Lower
L GA8N-34-900C
- 14 Spring, Coil
R/L GA2A-34-0A3A
- Man Trans
93 R/L G508-34-011A
- Auto Trans
94-97 R/L G509-34-011A
- 93 R/L G509-34-011A
- 94-97 R/L G510-34-011A
- 6 Cyl
Man Trans
93 R/L G510-34-011A
- Auto Trans
94-97 R/L G511-34-011A
- 1993
R/L G511-34-011A
- 1994-95
R/L G518-34-011
- 1996-97
To 1-12-96
From 1-12-96
- 15 Bumper, Rebound
R/L G518-34-011
- 16 Cover, Lever
R/L GA2A-34-015
- 17 Seal, Seat
R/L GA2A-34-012
- 18 Seat, Upper
R/L GA2A-34-340
- 19 Plate, Strut Brg
R/L GA2A-34-38XA
- 20 Mount, Strut Upper
R/L GA2A-34-380
- 21 Gasket, Mount
R/L GA2A-34-003
- 22 Cap, Dust
R/L 1011-34-019

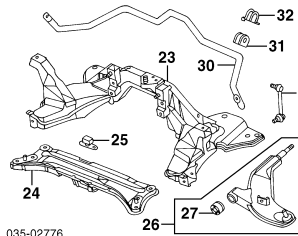

035-02776

- 23 Crossmember, Susp
4 Cyl GA2A-34-800D
- 6 Cyl GA2A-34-800D
- 24 Member, Transverse
4 Cyl 1993 GE4T-34-H90C
- 1994
w/Calif Emission
Man Trans GB6H-34-H90
- Auto Trans GE4T-34-H90C
- w/o Calif Emission
1995-97 GE4T-34-H90C
- 6 Cyl 1993-95 GA2E-34-H90B
- 1996-97
Man Trans GE4T-34-H90C
- Auto Trans GE5T-34-H90C
- 25 Damper, Transverse
GA2A-34-980
- 26 Arm Assy, Lower Control
R/L GA2B-34-300A
- L GA2B-34-350A
- 27 Bushing, Arm Front
R/L GA2B-34-470A
- 28 Bushing, Arm Mount
R/L GA2A-34-46XE
- L GA2A-34-46YE
- 29 Link, Control Arm
To 9-13-95 R/L GA2A-34-150A
- From 9-13-95 L GA2A-34-170A
- LD1E-34-150
- LD1E-34-170
- 30 Bar, Stabilizer
4 Cyl GA2A-34-151
- 6 Cyl GA2A-34-151
- 31 Bushing, Stabilizer
R/L GA2A-34-156
- 32 Brkt, Stab Bushing
93 R/L GA2A-34-155B
- 94-97 R/L GB6H-34-155

FRONT DRIVE AXLE

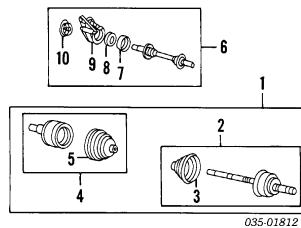

035-01812

- 1 Shaft Assy, Axle
Man Trans
4 Cyl 93 R G568-25-500R-0B
- L G568-25-600R-0B
- 94-97 R G592-25-500R-0A
- L G592-25-600R-0A
- 6 Cyl 93 R G570-25-500R-0C
- L G570-25-600R-0C
- 94-97 R G594-25-500R-0C
- L G594-25-600R-0C
- Auto Trans
4 Cyl R G584-25-500R-0D
- L G584-25-600R-0A
- 6 Cyl R G594-25-500R-0C
- L G594-25-600R-0C
- 2 Joint Assy, Outer
Man Trans
4 Cyl 93-95 R/L G568-22-510B
- 96-97 R/L G592-22-510A
- R/L G570-22-510B
- 6 Cyl 93 R/L G567-22-510
- Auto Trans 94-97 R G585-22-510
- L G591-22-510
- 6 Cyl 93 R/L G585-22-510
- 94-97 R/L G567-22-510
- 3 Boot, Outer Joint (a)
Man Trans
4 Cyl R/L GA2K-V9-050-9U
- 6 Cyl R/L G570-V9-050-9U
- Auto Trans R/L G567-22-530-9U
- (a) Included w/Outer Joint Assy
- 4 Joint Assy, Inner
Man Trans

- 4 Cyl R G568-22-520
- 6 Cyl L G568-22-620
- Auto Trans R G570-22-520
- 1993-94 L G570-22-620
- 1995-97 R G567-22-520
- 4 Cyl L G567-22-620
- 6 Cyl R G567-22-520
- L G567-22-620
- 5 Boot, Inner Joint (b)
Man Trans
4 Cyl R/L G568-22-540
- 6 Cyl R/L G570-22-540-9U
- Auto Trans R/L G567-22-540-9U
- (b) Included w/Inner Joint Assy
- 6 Shaft Assy, Intermediate
Man Trans
4 Cyl G560-25-700E
- 6 Cyl G562-25-700B
- 1993-94
1995-97
To 12-9-94
From 12-9-94
Auto Trans 93 G570-25-700D
- 4 Cyl 94-97 G578-25-700A
- 6 Cyl 1993
To 4-13-92
From 4-13-92
1994
1995-97
G572-25-700B
- G562-25-700B
- G579-25-700B
- G579-25-700D
- 7 Seal, Inner
1993
1994-97
To 2-19-96
Man Trans G560-25-744
- Auto Trans G569-25-744
- From 2-19-96
Keeper Brand F011-25-744
- Uchiyama Brand F011-25-744
- 8 Bearing, Shaft
1993
1994-97
4 Cyl 9960-68-2064
- 6 Cyl G569-25-155
- 9 Bracket, Shaft
Man Trans
4 Cyl G560-25-741A
- 6 Cyl 93 G564-25-741B
- 94 G569-25-741B
- 95-97 G569-25-741B
- Auto Trans
4 Cyl 93 G570-25-741A
- 6 Cyl 94-97 G578-25-741A
- 93 G574-25-741B
- 94 G579-25-741B
- 95-97 G579-25-741B
- 10 Seal, Outer
1993
1994
Man Trans G560-25-742
- Auto Trans G569-25-742
- 1995-97
To 2-19-96
From 2-19-96
Keeper Brand F011-25-742
- Uchiyama Brand F011-25-742
- 6 Cyl
Man Trans
To 12-9-94
From 12-9-94
Auto Trans G569-25-742
- To 11-2-95
From 11-2-95
G560-25-744
- (a) Included w/Intermediate Shaft Assy

FRONT STEERING LINKAGE/GEAR

Illustration Located in Next Column

- 1 Gear Assy, Steering
1993
4 Cyl GG2A-32-110R-0A
- 6 Cyl GG2A-32-110R-0A
- 1994
4 Cyl GG2A-32-110R-0A
- 6 Cyl GG2A-32-110R-0A
- 1995-97
4 Cyl GG2A-32-110R-0A
- 6 Cyl GG2A-32-110R-0A
- 2 Yoke Set, Support
GA2B-32-11XA
- 3 Nut, Outer Lock
GA2B-32-131
- 4 Nut, Inner Lock
GA2B-32-130
- 5 Rod, Tie
R/L GA2A-32-240A
- 4 Cyl R/L GA2A-32-240A
- 6 Cyl R/L GA2B-32-12X
- 6 Boot
GA2B-32-190
- 7 Support Kit, Tube
R GA2B-32-44Z
- 8 Tube, Pressure
L GA2B-32-44Y
- 9 Tube, Return
GN81-32-480


madp11_g01_

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.
Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.

161

MAZDA 626 1993-97


FRONT STEERING LINKAGE/GEAR Cont'd

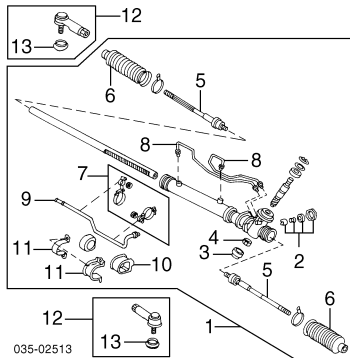

- 035-02513
- 10 Bushing, Mounting R GD7A-32-124
 - 11 Bracket, Mounting L GA2B-32-123
 - 4 Cyl R GA2B-32-134
 - 6 Cyl L GB6P-32-133
 - 12 End Assy, Tie Rod R/L 8A64-32-280
 - 13 Seal, Dust R/L B455-32-279
- *Included w/Steering Gear Assy
*Included w/Tie Rod End Assy

STEERING PUMP

4 CYL

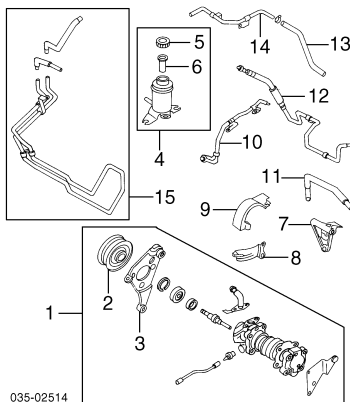


- 035-02514
- 1 Pump Assy, Steering GD7E-32-600R-00
 - 2 Pulley, Pump GA2B-32-620
 - 3 Bracket, Pump G06T-32-60X
 - 4 Reservoir Assy, Pump GA2G-32-69XA
 - 5 Cap, Reservoir GA2G-32-691
 - 6 Filter GA2G-32-503
 - 7 Brkt, Pump Reservoir GE4T-32-603
 - 8 Strap GA2B-32-605A
 - 9 Shield, Idler Pulley GA2A-32-634A
 - 10 Hose, Pressure GA2A-32-400E
 - 11 Hose, Suction GA2A-32-688B
 - 12 Hose, Gear Pressure GB6H-32-430B
 - 13 Hose, Return GA2A-32-684B
 - 14 Tube, Return GB6H-32-410
 - 15 Pipe, Cooler GA2B-32-470F

6 CYL


Illustration Located in Next Column

- 1 Pump Assy, Steering 93-94 GD7E-32-600R-00
- 95-97 GD7E-32-600R-00

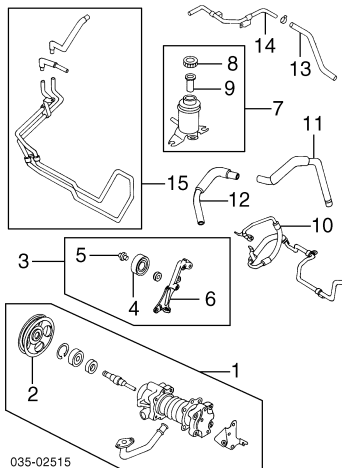

- 035-02515
- 2 Pulley, Pump GA2F-32-620A
 - 3 Pulley Assy, Idler *Included w/Steering Pump Assy
 - 4 Pulley, Idler K80B-15-930D
 - 5 Collar, Pulley K80S-15-94XA
 - 6 Bracket KL01-15-942
 - 7 Reservoir Assy, Pump EA03-32-603D
 - 8 Cap, Reservoir GA2G-32-69XA
 - 9 Filter GA2G-32-691
 - 10 Hose, Pressure GA2G-32-503
 - 11 Hose, Pump Suction *Included w/Pump Reservoir Assy
 - 12 Hose, Reservoir Suction GA2E-32-420C
 - 13 Hose, Return GA2G-32-420A
 - 14 Tube, Return GB6M-32-420
 - 15 Tube, Cooler GA5V-32-688C


STEERING WHEEL/COLUMN

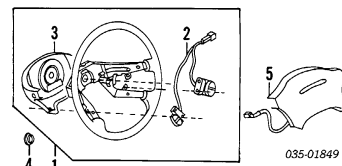

- 035-01849
- 1 Wheel Assy, Steering 93-94 GA2P-32-980D
 - Leather 95-97 GB6K-32-980A
 - Urethane 93-94 GA2L-32-980D
 - w/Cruise Control 95-97 GB6H-32-980A
 - w/o Cruise Control 93-94 GE1A-32-980
 - 2 Switch, Cruise Control 95-97 GE1A-32-980
 - 3 Cover, Wheel 93-94 GA2L-66-301C
 - w/Cruise Control 95-97 GB6H-66-3D1
 - w/o Cruise Control 93-94 GA2K-32-049
 - 4 Cap, Wheel (4) 95-97 GA2L-32-049
 - 5 Module, Air Bag-See Air Bag System Section 95-97 GB6H-32-049

Illustration Located in Next Column


- 6 Clockspring-See Air Bag System Section
- 7 Column, Steering To 2-27-92 GA2A-32-100E
- From 2-27-92 GA2K-32-100C
- 8 Cover, Column Upper GA2A-60-220F
- 9 Cover Assy, Column Lower 1993-95 GA2A-60-230C
- 1996-97 GC1M-60-230

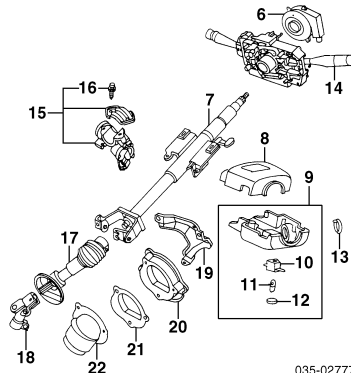

- 035-02777
- 10 Socket, Cover Lamp GA2A-60-245A
 - 11 Bulb B456-60-223
 - 12 Lens, Cover Lamp GA2A-60-246
 - 13 Bezel, Cylinder *Included w/Column Lower Cover Assy
 - 14 Switch, Combination To 1-3-95 LA01-60-261
 - 1994 From 1-3-95 KB75-60-261A
 - 15 Lock Assy, Ignition 1993 GA2A-66-120A
 - 1994 GB6H-66-120
 - 1995 w/Variable Wipers GB6H-66-120
 - 1996-97 w/o Variable Wipers GC1M-66-120
 - 16 Bolt, Breakaway w/Variable Wipers GD1J-66-120
 - 17 Shaft, Lower w/o Variable Wipers GD1E-66-120
 - 18 Coupling GA2A-76-290D
 - 19 Brkt, Steering GA2C-76-290D
 - 20 Plate, Inner Cover GA2A-76-290D
 - 21 Plate, Outer Cover GA2C-76-290D
 - 22 Boot H043-66-154

ENGINE

4 CYL

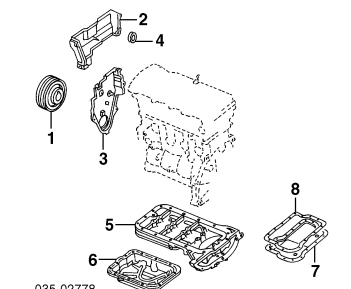

- 035-02778
- 1 Pulley, Crankshaft 1993-95 FS05-11-401
 - 1996-97 Man Trans FSB9-11-400
 - Auto Trans FSB8-11-400
 - 2 Cover, Upper Timing FS01-10-520C
 - 3 Cover, Lower Timing FS01-10-500D
 - 4 Seal, Timing Cover R/L FS05-10-602A
 - 5 Pan, Upper Eng Oil FSY1-10-030
 - Man Trans FS31-10-380G
 - Auto Trans FS59-10-400A
 - 6 Pan, Lower Eng Oil 8627-77-739
 - 7 Sealant, Oil Pan FLBA-21-51XA
 - 8 Gskt, Trans Oil BN97-21-512A

MAZDA 626 1993-97

6 CYL

035-02779

- Pulley, Crankshaft
- Cover, Timing
- Plate Assy, Cover Seal
- Seal, Upper Plate
- Seal, Lower Plate
- Plug, Rubber
- Pan, Eng Oil
- Sealant, Eng Oil Pan
- Pan, Trans Oil
- Gskt, Trans Oil Pan

KL01-11-400B	R
KL01-10-500E	L
KL01-10-510C	
KL01-10-530F	
KL01-10-535	
KL01-10-533B	
KL01-10-536B	
KL01-10-557	

*Included w/Cover Seal Plate Assy

KL01-10-400	
8527-77-739	
FU9A-21-51XA	
BN97-21-512A	

ENGINE/TRANS MOUNTS

035-01816

- Mount, Eng Front
- Brkt, Front Body Mount
- Brkt, Front Eng Mount
- Mount, Eng Side
- Brkt, Side Mount
- Damper
- Mount, Trans

4 Cyl		GA2A-39-060G																																		
To 2-23-93		GA2B-39-060B																																		
6 Cyl		GA2F-39-060B																																		
		GA2C-53-37XC																																		
4 Cyl		GA2A-39-030E																																		
6 Cyl		GA2E-39-030A																																		
Man Trans	R	GA2A-39-040A																																		
4 Cyl	L	GA2A-39-050																																		
6 Cyl	R	GJ4K-39-040																																		
Auto Trans	L	GA2A-39-050																																		
4 Cyl	93-94 R	G14J-39-040																																		
	L	GA2C-39-050																																		
6 Cyl	95-97 R	KB31-39-040																																		
	L	KB31-39-050																																		
	R	GA2H-39-040A																																		
	L	GA2G-39-050A																																		
5 Brkt, Side Mount <tr> <td>Man Trans</td> <td>93-94 R</td> <td>GA2A-39-010A</td> </tr> <tr> <td></td> <td>L</td> <td>GA2A-39-021B</td> </tr> <tr> <td>Auto Trans</td> <td>95-97 R</td> <td>KB30-39-010A</td> </tr> <tr> <td></td> <td>L</td> <td>GA2A-39-021B</td> </tr> <tr> <td>4 Cyl</td> <td>93-94 R</td> <td>GA2A-39-010A</td> </tr> <tr> <td></td> <td>L</td> <td>GA2A-39-021B</td> </tr> <tr> <td>6 Cyl</td> <td>95-97 R</td> <td>KB31-39-010C</td> </tr> <tr> <td></td> <td>L</td> <td>KB31-39-021</td> </tr> <tr> <td></td> <td>R</td> <td>GA2A-39-010A</td> </tr> <tr> <td></td> <td>L</td> <td>GA2G-39-021A</td> </tr> <tr> <td></td> <td>R</td> <td>GA2C-39-01XA</td> </tr> <tr> <td></td> <td>L</td> <td>GA2C-39-02X</td> </tr>	Man Trans	93-94 R	GA2A-39-010A		L	GA2A-39-021B	Auto Trans	95-97 R	KB30-39-010A		L	GA2A-39-021B	4 Cyl	93-94 R	GA2A-39-010A		L	GA2A-39-021B	6 Cyl	95-97 R	KB31-39-010C		L	KB31-39-021		R	GA2A-39-010A		L	GA2G-39-021A		R	GA2C-39-01XA		L	GA2C-39-02X
Man Trans	93-94 R	GA2A-39-010A																																		
	L	GA2A-39-021B																																		
Auto Trans	95-97 R	KB30-39-010A																																		
	L	GA2A-39-021B																																		
4 Cyl	93-94 R	GA2A-39-010A																																		
	L	GA2A-39-021B																																		
6 Cyl	95-97 R	KB31-39-010C																																		
	L	KB31-39-021																																		
	R	GA2A-39-010A																																		
	L	GA2G-39-021A																																		
	R	GA2C-39-01XA																																		
	L	GA2C-39-02X																																		

Man Trans	GA2B-39-070
Auto Trans	
4 Cyl	93-94 GE6T-39-070A
	95-97 KB31-39-070D
	GA2G-39-070C
8 Brkt, Trans Mount	
Man Trans	GA2A-39-080D
Auto Trans	GA2C-39-080C
9 Mount, Crossmember	
Man Trans	GA2E-39-100A
Auto Trans	
4 Cyl	
1993	
To 6-2-92	GA2G-39-100
From 6-2-92	GA2C-39-100
1994-97	KB31-39-100
6 Cyl	GA2G-39-100
	GA2A-39-970A
10 Damper, Crossmember	KB31-39-800
11 Crossmember Assy, Engine Protector, Mtg	93 GA2A-39-999A

*Included w/Engine Crossmember Assy

AIR CLEANER

4 CYL

035-01817

- Cleaner Assy, Air
- Element, Cleaner
- Cover, Air Cleaner
- Meter, Air Flow
- Brkt, Meter
- Hose, Air Upper
- Hose, Air Lower
- Chamber, Resonance
- Duct Assy, Fresh Air
- Plate, Air Duct Up
- Plate, Air Duct Ctr
- Plate, Air Duct Lwr
- Hose, Air Duct

1993	FS11-13-320B																																																																																
1994																																																																																	
Man Trans	FS61-13-320																																																																																
Auto Trans	FS56-13-320																																																																																
1995-97																																																																																	
Man Trans	FS63-13-320																																																																																
Auto Trans	FS55-13-320A																																																																																
	FS11-13-240																																																																																
2 Element, Cleaner <tr> <td>3 Cover, Air Cleaner <tr> <td>1993</td> <td>FS11-13-201</td> </tr> <tr> <td>1994-97</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS61-13-201</td> </tr> <tr> <td>Auto Trans</td> <td>FS56-13-201</td> </tr> <tr> <td></td> <td>*Included w/Air Cleaner Assy</td> </tr> <tr> <td>4 Meter, Air Flow</td> <td>FS11-13-215R-00</td> </tr> <tr> <td>1993</td> <td></td> </tr> <tr> <td>1994-95</td> <td>FS11-13-215R-00</td> </tr> <tr> <td>Man Trans</td> <td>FS15-13-215R-00</td> </tr> <tr> <td>Auto Trans</td> <td></td> </tr> <tr> <td>1996-97</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS11-13-215R-00</td> </tr> <tr> <td>Auto Trans</td> <td>FS02-13-215R-00</td> </tr> <tr> <td></td> <td>FS11-13-311</td> </tr> <tr> <td>5 Brkt, Meter</td> <td></td> </tr> <tr> <td>6 Hose, Air Upper</td> <td>FS11-13-220D</td> </tr> <tr> <td>1993</td> <td></td> </tr> <tr> <td>1994</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS11-13-220D</td> </tr> <tr> <td>Auto Trans</td> <td>FS15-13-220F</td> </tr> <tr> <td>1995-97</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS11-13-220D</td> </tr> <tr> <td>Auto Trans</td> <td>FS15-13-220F</td> </tr> <tr> <td>7 Hose, Air Lower</td> <td>FS01-13-207</td> </tr> <tr> <td>1993-94</td> <td></td> </tr> <tr> <td>1995-97-Not Applicable</td> <td></td> </tr> <tr> <td>8 Chamber, Resonance</td> <td>93 FS11-13-195B</td> </tr> <tr> <td>Upper</td> <td>94-97 FS56-13-195</td> </tr> <tr> <td>9 Lower</td> <td>FS11-13-19XC</td> </tr> <tr> <td>1993-94</td> <td></td> </tr> <tr> <td>1995-97-Not Applicable</td> <td></td> </tr> <tr> <td>10 Duct Assy, Fresh Air</td> <td>FS25-13-200D</td> </tr> <tr> <td>11 Plate, Air Duct Up <tr> <td>93-94</td> <td>FS25-13-192</td> </tr> <tr> <td>95-97</td> <td>FS25-13-192</td> </tr> <tr> <td></td> <td>FS25-13-203B</td> </tr> <tr> <td>12 Plate, Air Duct Ctr <tr> <td>93-94</td> <td>FS25-13-204</td> </tr> <tr> <td>95-97</td> <td>FS25-13-204</td> </tr> <tr> <td></td> <td>*Included w/Fresh Air Duct Assy</td> </tr> <tr> <td>14 Hose, Air Duct</td> <td>FS01-13-202B</td> </tr> </td></tr></td></tr></td></tr>	3 Cover, Air Cleaner <tr> <td>1993</td> <td>FS11-13-201</td> </tr> <tr> <td>1994-97</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS61-13-201</td> </tr> <tr> <td>Auto Trans</td> <td>FS56-13-201</td> </tr> <tr> <td></td> <td>*Included w/Air Cleaner Assy</td> </tr> <tr> <td>4 Meter, Air Flow</td> <td>FS11-13-215R-00</td> </tr> <tr> <td>1993</td> <td></td> </tr> <tr> <td>1994-95</td> <td>FS11-13-215R-00</td> </tr> <tr> <td>Man Trans</td> <td>FS15-13-215R-00</td> </tr> <tr> <td>Auto Trans</td> <td></td> </tr> <tr> <td>1996-97</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS11-13-215R-00</td> </tr> <tr> <td>Auto Trans</td> <td>FS02-13-215R-00</td> </tr> <tr> <td></td> <td>FS11-13-311</td> </tr> <tr> <td>5 Brkt, Meter</td> <td></td> </tr> <tr> <td>6 Hose, Air Upper</td> <td>FS11-13-220D</td> </tr> <tr> <td>1993</td> <td></td> </tr> <tr> <td>1994</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS11-13-220D</td> </tr> <tr> <td>Auto Trans</td> <td>FS15-13-220F</td> </tr> <tr> <td>1995-97</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS11-13-220D</td> </tr> <tr> <td>Auto Trans</td> <td>FS15-13-220F</td> </tr> <tr> <td>7 Hose, Air Lower</td> <td>FS01-13-207</td> </tr> <tr> <td>1993-94</td> <td></td> </tr> <tr> <td>1995-97-Not Applicable</td> <td></td> </tr> <tr> <td>8 Chamber, Resonance</td> <td>93 FS11-13-195B</td> </tr> <tr> <td>Upper</td> <td>94-97 FS56-13-195</td> </tr> <tr> <td>9 Lower</td> <td>FS11-13-19XC</td> </tr> <tr> <td>1993-94</td> <td></td> </tr> <tr> <td>1995-97-Not Applicable</td> <td></td> </tr> <tr> <td>10 Duct Assy, Fresh Air</td> <td>FS25-13-200D</td> </tr> <tr> <td>11 Plate, Air Duct Up <tr> <td>93-94</td> <td>FS25-13-192</td> </tr> <tr> <td>95-97</td> <td>FS25-13-192</td> </tr> <tr> <td></td> <td>FS25-13-203B</td> </tr> <tr> <td>12 Plate, Air Duct Ctr <tr> <td>93-94</td> <td>FS25-13-204</td> </tr> <tr> <td>95-97</td> <td>FS25-13-204</td> </tr> <tr> <td></td> <td>*Included w/Fresh Air Duct Assy</td> </tr> <tr> <td>14 Hose, Air Duct</td> <td>FS01-13-202B</td> </tr> </td></tr></td></tr>	1993	FS11-13-201	1994-97		Man Trans	FS61-13-201	Auto Trans	FS56-13-201		*Included w/Air Cleaner Assy	4 Meter, Air Flow	FS11-13-215R-00	1993		1994-95	FS11-13-215R-00	Man Trans	FS15-13-215R-00	Auto Trans		1996-97		Man Trans	FS11-13-215R-00	Auto Trans	FS02-13-215R-00		FS11-13-311	5 Brkt, Meter		6 Hose, Air Upper	FS11-13-220D	1993		1994		Man Trans	FS11-13-220D	Auto Trans	FS15-13-220F	1995-97		Man Trans	FS11-13-220D	Auto Trans	FS15-13-220F	7 Hose, Air Lower	FS01-13-207	1993-94		1995-97-Not Applicable		8 Chamber, Resonance	93 FS11-13-195B	Upper	94-97 FS56-13-195	9 Lower	FS11-13-19XC	1993-94		1995-97-Not Applicable		10 Duct Assy, Fresh Air	FS25-13-200D	11 Plate, Air Duct Up <tr> <td>93-94</td> <td>FS25-13-192</td> </tr> <tr> <td>95-97</td> <td>FS25-13-192</td> </tr> <tr> <td></td> <td>FS25-13-203B</td> </tr> <tr> <td>12 Plate, Air Duct Ctr <tr> <td>93-94</td> <td>FS25-13-204</td> </tr> <tr> <td>95-97</td> <td>FS25-13-204</td> </tr> <tr> <td></td> <td>*Included w/Fresh Air Duct Assy</td> </tr> <tr> <td>14 Hose, Air Duct</td> <td>FS01-13-202B</td> </tr> </td></tr>	93-94	FS25-13-192	95-97	FS25-13-192		FS25-13-203B	12 Plate, Air Duct Ctr <tr> <td>93-94</td> <td>FS25-13-204</td> </tr> <tr> <td>95-97</td> <td>FS25-13-204</td> </tr> <tr> <td></td> <td>*Included w/Fresh Air Duct Assy</td> </tr> <tr> <td>14 Hose, Air Duct</td> <td>FS01-13-202B</td> </tr>	93-94	FS25-13-204	95-97	FS25-13-204		*Included w/Fresh Air Duct Assy	14 Hose, Air Duct	FS01-13-202B
3 Cover, Air Cleaner <tr> <td>1993</td> <td>FS11-13-201</td> </tr> <tr> <td>1994-97</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS61-13-201</td> </tr> <tr> <td>Auto Trans</td> <td>FS56-13-201</td> </tr> <tr> <td></td> <td>*Included w/Air Cleaner Assy</td> </tr> <tr> <td>4 Meter, Air Flow</td> <td>FS11-13-215R-00</td> </tr> <tr> <td>1993</td> <td></td> </tr> <tr> <td>1994-95</td> <td>FS11-13-215R-00</td> </tr> <tr> <td>Man Trans</td> <td>FS15-13-215R-00</td> </tr> <tr> <td>Auto Trans</td> <td></td> </tr> <tr> <td>1996-97</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS11-13-215R-00</td> </tr> <tr> <td>Auto Trans</td> <td>FS02-13-215R-00</td> </tr> <tr> <td></td> <td>FS11-13-311</td> </tr> <tr> <td>5 Brkt, Meter</td> <td></td> </tr> <tr> <td>6 Hose, Air Upper</td> <td>FS11-13-220D</td> </tr> <tr> <td>1993</td> <td></td> </tr> <tr> <td>1994</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS11-13-220D</td> </tr> <tr> <td>Auto Trans</td> <td>FS15-13-220F</td> </tr> <tr> <td>1995-97</td> <td></td> </tr> <tr> <td>Man Trans</td> <td>FS11-13-220D</td> </tr> <tr> <td>Auto Trans</td> <td>FS15-13-220F</td> </tr> <tr> <td>7 Hose, Air Lower</td> <td>FS01-13-207</td> </tr> <tr> <td>1993-94</td> <td></td> </tr> <tr> <td>1995-97-Not Applicable</td> <td></td> </tr> <tr> <td>8 Chamber, Resonance</td> <td>93 FS11-13-195B</td> </tr> <tr> <td>Upper</td> <td>94-97 FS56-13-195</td> </tr> <tr> <td>9 Lower</td> <td>FS11-13-19XC</td> </tr> <tr> <td>1993-94</td> <td></td> </tr> <tr> <td>1995-97-Not Applicable</td> <td></td> </tr> <tr> <td>10 Duct Assy, Fresh Air</td> <td>FS25-13-200D</td> </tr> <tr> <td>11 Plate, Air Duct Up <tr> <td>93-94</td> <td>FS25-13-192</td> </tr> <tr> <td>95-97</td> <td>FS25-13-192</td> </tr> <tr> <td></td> <td>FS25-13-203B</td> </tr> <tr> <td>12 Plate, Air Duct Ctr <tr> <td>93-94</td> <td>FS25-13-204</td> </tr> <tr> <td>95-97</td> <td>FS25-13-204</td> </tr> <tr> <td></td> <td>*Included w/Fresh Air Duct Assy</td> </tr> <tr> <td>14 Hose, Air Duct</td> <td>FS01-13-202B</td> </tr> </td></tr></td></tr>	1993	FS11-13-201	1994-97		Man Trans	FS61-13-201	Auto Trans	FS56-13-201		*Included w/Air Cleaner Assy	4 Meter, Air Flow	FS11-13-215R-00	1993		1994-95	FS11-13-215R-00	Man Trans	FS15-13-215R-00	Auto Trans		1996-97		Man Trans	FS11-13-215R-00	Auto Trans	FS02-13-215R-00		FS11-13-311	5 Brkt, Meter		6 Hose, Air Upper	FS11-13-220D	1993		1994		Man Trans	FS11-13-220D	Auto Trans	FS15-13-220F	1995-97		Man Trans	FS11-13-220D	Auto Trans	FS15-13-220F	7 Hose, Air Lower	FS01-13-207	1993-94		1995-97-Not Applicable		8 Chamber, Resonance	93 FS11-13-195B	Upper	94-97 FS56-13-195	9 Lower	FS11-13-19XC	1993-94		1995-97-Not Applicable		10 Duct Assy, Fresh Air	FS25-13-200D	11 Plate, Air Duct Up <tr> <td>93-94</td> <td>FS25-13-192</td> </tr> <tr> <td>95-97</td> <td>FS25-13-192</td> </tr> <tr> <td></td> <td>FS25-13-203B</td> </tr> <tr> <td>12 Plate, Air Duct Ctr <tr> <td>93-94</td> <td>FS25-13-204</td> </tr> <tr> <td>95-97</td> <td>FS25-13-204</td> </tr> <tr> <td></td> <td>*Included w/Fresh Air Duct Assy</td> </tr> <tr> <td>14 Hose, Air Duct</td> <td>FS01-13-202B</td> </tr> </td></tr>	93-94	FS25-13-192	95-97	FS25-13-192		FS25-13-203B	12 Plate, Air Duct Ctr <tr> <td>93-94</td> <td>FS25-13-204</td> </tr> <tr> <td>95-97</td> <td>FS25-13-204</td> </tr> <tr> <td></td> <td>*Included w/Fresh Air Duct Assy</td> </tr> <tr> <td>14 Hose, Air Duct</td> <td>FS01-13-202B</td> </tr>	93-94	FS25-13-204	95-97	FS25-13-204		*Included w/Fresh Air Duct Assy	14 Hose, Air Duct	FS01-13-202B	
1993	FS11-13-201																																																																																
1994-97																																																																																	
Man Trans	FS61-13-201																																																																																
Auto Trans	FS56-13-201																																																																																
	*Included w/Air Cleaner Assy																																																																																
4 Meter, Air Flow	FS11-13-215R-00																																																																																
1993																																																																																	
1994-95	FS11-13-215R-00																																																																																
Man Trans	FS15-13-215R-00																																																																																
Auto Trans																																																																																	
1996-97																																																																																	
Man Trans	FS11-13-215R-00																																																																																
Auto Trans	FS02-13-215R-00																																																																																
	FS11-13-311																																																																																
5 Brkt, Meter																																																																																	
6 Hose, Air Upper	FS11-13-220D																																																																																
1993																																																																																	
1994																																																																																	
Man Trans	FS11-13-220D																																																																																
Auto Trans	FS15-13-220F																																																																																
1995-97																																																																																	
Man Trans	FS11-13-220D																																																																																
Auto Trans	FS15-13-220F																																																																																
7 Hose, Air Lower	FS01-13-207																																																																																
1993-94																																																																																	
1995-97-Not Applicable																																																																																	
8 Chamber, Resonance	93 FS11-13-195B																																																																																
Upper	94-97 FS56-13-195																																																																																
9 Lower	FS11-13-19XC																																																																																
1993-94																																																																																	
1995-97-Not Applicable																																																																																	
10 Duct Assy, Fresh Air	FS25-13-200D																																																																																
11 Plate, Air Duct Up <tr> <td>93-94</td> <td>FS25-13-192</td> </tr> <tr> <td>95-97</td> <td>FS25-13-192</td> </tr> <tr> <td></td> <td>FS25-13-203B</td> </tr> <tr> <td>12 Plate, Air Duct Ctr <tr> <td>93-94</td> <td>FS25-13-204</td> </tr> <tr> <td>95-97</td> <td>FS25-13-204</td> </tr> <tr> <td></td> <td>*Included w/Fresh Air Duct Assy</td> </tr> <tr> <td>14 Hose, Air Duct</td> <td>FS01-13-202B</td> </tr> </td></tr>	93-94	FS25-13-192	95-97	FS25-13-192		FS25-13-203B	12 Plate, Air Duct Ctr <tr> <td>93-94</td> <td>FS25-13-204</td> </tr> <tr> <td>95-97</td> <td>FS25-13-204</td> </tr> <tr> <td></td> <td>*Included w/Fresh Air Duct Assy</td> </tr> <tr> <td>14 Hose, Air Duct</td> <td>FS01-13-202B</td> </tr>	93-94	FS25-13-204	95-97	FS25-13-204		*Included w/Fresh Air Duct Assy	14 Hose, Air Duct	FS01-13-202B																																																																		
93-94	FS25-13-192																																																																																
95-97	FS25-13-192																																																																																
	FS25-13-203B																																																																																
12 Plate, Air Duct Ctr <tr> <td>93-94</td> <td>FS25-13-204</td> </tr> <tr> <td>95-97</td> <td>FS25-13-204</td> </tr> <tr> <td></td> <td>*Included w/Fresh Air Duct Assy</td> </tr> <tr> <td>14 Hose, Air Duct</td> <td>FS01-13-202B</td> </tr>	93-94	FS25-13-204	95-97	FS25-13-204		*Included w/Fresh Air Duct Assy	14 Hose, Air Duct	FS01-13-202B																																																																									
93-94	FS25-13-204																																																																																
95-97	FS25-13-204																																																																																
	*Included w/Fresh Air Duct Assy																																																																																
14 Hose, Air Duct	FS01-13-202B																																																																																

6 CYL

035-01896

- Cleaner Assy, Air
- Element, Cleaner
- Cover, Air Cleaner
- Meter Assy, Air Flow
- Grommet, Meter
- Hose, Upper Air
- Duct Assy, Fresh Air
- Plate, Air Duct Up
- Plate, Air Duct Ctr
- Plate, Air Duct Lower
- Hose, Air Duct

KL11-13-320C	
FS11-13-240	
KL11-13-201	
*Included w/Air Cleaner Assy	
KL02-13-210R-00	
FS01-13-214	
*Included w/Air Flow Meter Assy	
KL11-13-220D	
KL25-13-200D	
FS25-13-192	93-94
FS25-13-192	95-97
FS25-13-204	93-94
FS25-13-204	95-97
FS25-13-203B	
*Included w/Fresh Air Duct Assy	
KL11-13-202B	

EXHAUST

4 CYL

035-02780

- Manifold, Exhaust
- Shield, Exhaust Heat
- Pre-Converter, Catalytic
- Gskt, Pre-Converter
- Pipe, Front Exhaust (1 Piece)
- Pipe, Front Exhaust (2 Piece)
- Converter, Catalytic


93-95	FS01-13-450B
96-97	FS01-13-450B
93-95	FS01-13-390B
96-97	FS01-13-390A
3 Pre-Converter, Catalytic	
1996-97	B6CK-20-500B
96-97	B6CK-20-520
4 Gskt, Pre-Converter	
96-97	B6CK-20-520
5 Pipe, Front Exhaust (1 Piece)	
1993	
w/Calif Emission	FS02-40-500F
w/o Calif Emission	FS01-40-500A
1994	
Man Trans	
w/Calif Emission-See 2 Piece Front Exhaust Pipe	
w/o Calif Emission	FS01-40-500A
Auto Trans	FS02-40-500F
1995	
w/Calif Emission-See 2 Piece Front Exhaust Pipe	
w/o Calif Emission	
Man Trans	
To 5-2-95	FS02-40-500F
From 5-2-95	FS02-40-500F
Auto Trans	FS30-40-500A
1996-97-See 2 Piece Front Exhaust Pipe	
6 Pipe, Front Exhaust (2 Piece)	
1994	
Man Trans	
w/Calif Emission	FS24-40-500A
w/o Calif Emission-See 1 Piece Front Exhaust Pipe	
Auto Trans-See 1 Piece Front Exhaust Pipe	
1995	
w/Calif Emission	FS24-40-500A
w/o Calif Emission-See 1 Piece Front Exhaust Pipe	
1996-97	
Man Trans	FS60-40-500C
Auto Trans	FS61-40-500C
7 Converter, Catalytic	
Front	
1 Piece Front Exh Pipe-Not Applicable	
2 Piece Front Exhaust Pipe	FS62-20-500
Rear	

madpi1_g01_

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.
Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.

MAZDA 626 1993-97

EXHAUST Cont'd	
4 CYL Cont'd	
1993 w/Calif Emission w/o Calif Emission	FS49-20-600 FS01-20-600B
1994 Man Trans w/Calif Emission w/o Calif Emission Auto Trans	FS01-20-600B FS02-20-600 FS49-20-600
1995 w/Calif Emission w/o Calif Emission 1996-97 w/Calif Emission w/o Calif Emission	FS01-20-600B FS49-20-600 FSC5-20-600 FSC1-20-600
9 Pipe, Intermediate Man Trans Auto Trans	FS01-40-300B FS02-40-300B GA2A-56-421B
10 Insulator, Pipe Muffler, Rear Insulator, Muffler	FS03-40-100F GA2A-56-411

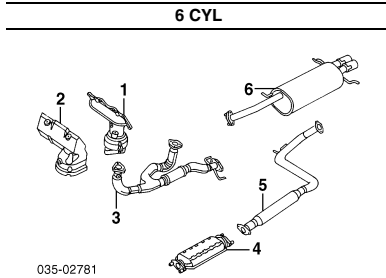

6 CYL	
1 Manifold, Exhaust 1993 1994-95 w/Calif Emission w/o Calif Emission 1996 1997	R KL01-13-4F0B L KL01-13-450B R KL50-20-55XA L KL50-20-50XA R KL01-13-450B L KL01-13-4F0B R KB34-20-55X L KL50-20-50XA R KL8-13-45X L KL8-13-4F0
2 Shield, Exhaust Heat 1993 1994-95 w/Calif Emission w/o Calif Emission 1996-97	R KL02-13-390A L KL02-13-390A R KL50-13-390A L KL50-13-3K0A R KL02-13-390A L KL02-13-390A R KL50-13-390A L KL50-13-3K0A
3 Pipe, Front Exhaust 1993 1994-95 w/Calif Emission w/o Calif Emission 1996 1997	KL01-40-500F KL19-40-500A KL01-40-500F KL56-40-500B KL90-40-500
4 Converter, Catalytic 1993 1994-95 w/Calif Emission w/o Calif Emission 1996 1997	KL01-20-600A KL50-20-600 KL01-20-600A FSC5-20-600 KL8-20-600B
5 Pipe, Intermediate 1993-95 Man Trans Auto Trans 1996 Man Trans Auto Trans 1997 Man Trans Auto Trans	KL01-40-300E KL29-40-300C KL56-40-300B KL57-40-300B KL90-40-300A KL91-40-300
6 Muffler, Rear Insulator, Pipe	KL03-40-100E GA2E-56-421D

EMISSION SYSTEM	
Valve, EGR 4 Cyl 1993 w/Calif Emission w/o Calif Emission 1994 w/Calif Emission w/o Calif Emission Man Trans Auto Trans 1995-97 6 Cyl	FS06-20-300 FS05-20-300 FS56-20-300A FS06-20-300 FS56-20-300A FS56-20-300A KL1Y1-13-SJ0 93-94 95-97 KL01-20-300C

Modulator, EGR Valve 4 Cyl 1993-94 1995-97-Not Serviced 6 Cyl-Not Serviced Brkt, Modulator 1993-94 1995-97-Not Serviced Solenoid, EGR† †Order by Application Canister, Fuel Bracket, Canister	F201-20-350 FS01-20-35X KL01-18-740B FS11-13-970A FS01-13-960A
--	--

ELECTRICAL


ALTERNATOR	
Alternator Assy† 4 Cyl 6 Cyl †Remanufactured Part. Contact Dealer for Core Charge & Exchange Information Pulley, Alternator (a) 4 Cyl 6 Cyl (a) Included w/Alternator Assy Brkt, Alt Pivot 4 Cyl 6 Cyl Bolt, Pivot 4 Cyl 6 Cyl Brkt, Adjust 4 Cyl Upper Lower 6 Cyl Belt, Alternator 4 Cyl w/ A/C w/o A/C 6 Cyl w/ A/C w/o A/C	FS11-18-300R-00 KL11-18-300R-00 FS05-18-W11 K801-18-W11 FS11-18-371 93-94 KL11-18-371B 95-97 KL11-18-371B 93-94 9972-41-000 95-97 9972-41-000 93-94 9979-40-825 95-97 9980-01-0105 FS01-18-356 FS11-18-360 KL11-18-360A FS05-15-907 FS12-18-381A KL64-15-908 KL11-18-381B

BATTERY	
Battery	0000-80-058R-WB

HORN	
Horn High Note 1993-94 1995-97 To 7-19-94 From 7-19-94 Low Note 1993-94 1995-97 To 7-19-94 From 7-19-94	GA2A-66-780B KB42-66-780A GD0S-66-780 GA2A-66-790B KB42-66-790A GD0S-66-790

IGNITION	
Cap, Distributor 4 Cyl Man Trans 1993-94 1995-97 To 7-19-94 From 7-19-94 Auto Trans 1993-94 1995-97 To 7-19-94 From 7-19-94 6 Cyl	FS01-18-V00-9U B593-18-V00A-9U FS01-18-V00-9U FS01-18-V00-9U 94-97 FS07-18-V00-9U 93-94 KL01-18-V00A-9U 95-97 KF34-18-V00-9U


WINDSHIELD

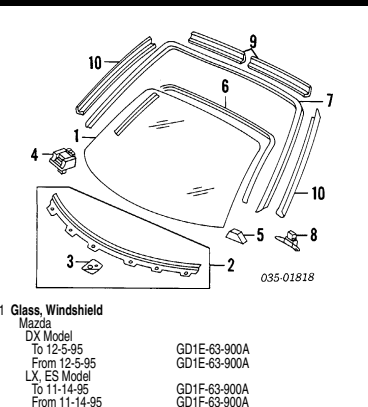

1 Glass, Windshield Mazda DX Model To 12-5-95 From 12-5-95 LX, ES Model To 11-14-95 From 11-14-95	GD1E-63-900A GD1E-63-900A GD1F-63-900A GD1F-63-900A
--	--

2 Stopper Assy, Glass 3 Tape, Stopper† (6) †Included w/Glass Stopper Assy Spacer, Glass 4 Type A 5 Type B 6 Dam, Windshield To 8-17-92 From 8-17-92 7 Moulding Upper/Side Clip, Moulding 8 Protector, Midg Upper 9 Protector, Midg Side Midg, Inside Garnish Light Beige Gray Taupe Mirror, Rear View Visor, Sun DX Model Light Beige Light Gray Light Taupe LX, ES Model Light Beige Light Gray Light Taupe	GA2K-50-G30A GA2K-50-G33 R/L B455-50-891A R/L 8182-63-903 GA7B-50-899 GA7B-50-894 GAYN-50-6AXD R GA2C-50-6A6 L GA2C-50-6A7 R/L GA2K-50-6B1 R/L GA2A-50-6B2 R GA2K-68-160E-90 L GA2K-68-170E-90 R GA2K-68-160E-29 L GA2K-68-170E-29 R GA2K-68-160E-78 L GA2K-68-170E-78 KA51-69-220 R GA2K-69-270D-80 L GB6H-69-320D-80 R GA2K-69-270D-27 R GA2K-69-320D-27 R GA2K-69-270-83 L GA2K-69-320B-83 R GA2P-69-270E-80 L GB6L-69-320-80 R GA2P-69-270-27 L GA2P-69-320B-27 R GA2P-69-270-83 L GA2P-69-320B-83
--	---

WIPER SYSTEM

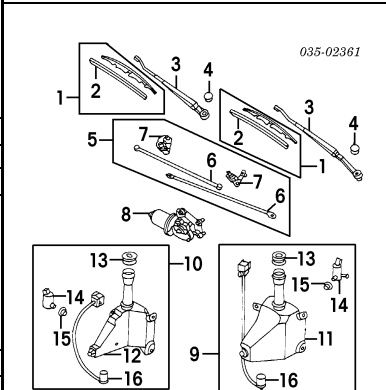


1 Blade Assy, Wiper 2 Blade, Insert† †Included w/Wiper Blade Assy 3 Arm, Wiper 4 Cover, Wiper Arm 5 Link Assy, Wiper w/Cold Climate Spec w/o Cold Climate Spec 6 Arm, Link† 7 Shaft, Drive† w/Cold Climate Spec w/o Cold Climate Spec †Included w/Wiper Link Assy 8 Motor, Wiper w/Cold Climate Spec w/o Cold Climate Spec 9 Reservoir Assy, Washer w/Cold Climate Spec 1993 1994-97 To 6-13-95 From 6-13-95 10 w/o Cold Climate Spec 11 Tank, Washer† w/Cold Climate Spec 12 w/o Cold Climate Spec 13 Cap, Tank† 14 Pump, Washer† 15 Grommet, Pump† 16 Switch, Level†	R BJ0E-67-330-9U L TA02-67-330A-9U 93 R DB09-67-333-9U L E016-67-333 94 R DB09-67-333-9U L E016-67-333 95-97 R E016-67-333 L KA81-67-331A R GATC-67-321A L GTOL-67-321 R/L LA01-67-395C GA2L-67-360E GA2K-67-360E R GA2K-67-361A L GA2K-67-362B R GA2K-67-363C L GA2K-67-364A R/L GA2K-67-363C GA2L-67-340D GA2K-67-340D GA2B-67-480F GA2B-67-480F GA2B-67-480F 93-94 GA2A-67-480E 95-97 GC1M-67-480 GA2B-67-481A 93-94 GA2A-67-481A 95-97 GC1M-67-481 GJ21-67-483 GA2A-67-482 S084-76-677 S084-76-677
---	---

MAZDA 626 1993-97

w/Cold Climate Spec GA2A-67-488
w/o Cold Climate Spec GB8A-67-488
*Included w/Washer Reservoir Assy
Nozzle, Washer R GA2K-67-510A
L GA2L-67-510A


COWL & DASH

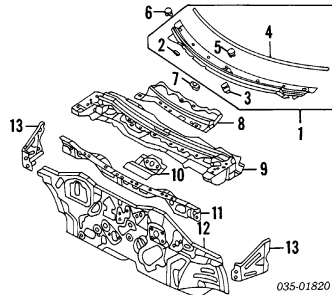

- 1 Grille Assy, Cowl GA2K-50-790F
- 2 Pad, Grille (5) GA2A-50-755A
- 3 Grille (5) GA5S-50-752
- 4 Protector, Grille (5) Serviced w/Cowl Grille Assy
- 5 Cap, Grille Center (5) GA2A-50-797
- 6 Cap, Grille R/L GA2A-50-796
- 7 Screw, Grommet R/L FD02-50-796
- 8 Baffle, Cowl 93-94 GA2K-56-351D
- 9 Panel, Cowl 95-97 GA2K-56-351D
- 10 Bracket, Wiper Motor 93-94 GA2K-53-51XC
- 11 Panel, Cowl Front 95-97 GB6H-53-51XD
- 12 Panel, Dash 93-94 GA2K-53-513B
- 13 Gusset, Dash Panel 93-94 GA2K-70-610E


INSTRUMENT PANEL

1993

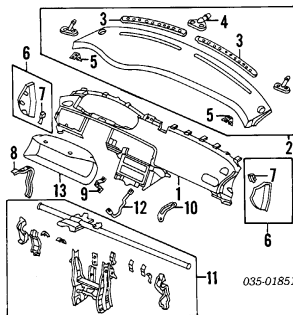


- 1 Panel, Instrument GA2K-60-380F-29
- 2 Pad Assy, Instrument GA2K-60-380F-78
- 3 Grille, Defroster GA2K-60-340G-29
- 4 Pin, Pad GA2K-60-340G-78
- 5 Bracket, Pad R GA2K-60-785-30
- 6 Panel Assy, Side L GA2K-60-785-79
- 7 Spring, Side Panel (8/5ide) R GA2K-60-795-79
- 8 Stiffener, Pad L GA2K-60-382B
- 9 Brkt, Instrument R GA2K-60-482A

- 10 Member, Junction GA2K-60-441
- 11 Crossmember GA2K-60-420D
- 12 Stiffener, Crossmember GA2K-60-442
- 13 Hood, Meter GA2K-55-420C

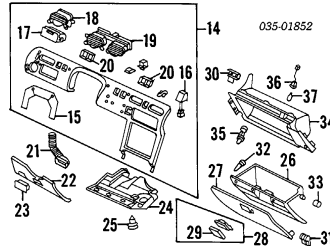


- 14 Panel Assy, Switch GA2P-55-310S
- 15 Cover, Panel Lower GA2A-55-423A
- 16 Switch, Hazard GA2L-66-4H0A
- 17 Pocket, Panel GA2K-64-180D
- 18 Louver, Vent GA2K-64-81XC
- 19 Grille, Vent GA2P-64-930D
- 20 Cover, Panel Upper R GA2K-55-427B
- 21 Duct, Lap GA2K-55-423
- 22 Panel, Lower GA2A-64-77XA
- 23 Louver, Lower Panel GA2K-64-281F-29
- 24 Cover, Under GA2K-64-281F-78
- 25 Fastener, Under Cover (3) FB01-64-850
- 26 Glove Box GA2K-64-520D
- 27 Lid, Glove Box GA2L-68-885B-02
- 28 Lock Assy, Glove Box GA2K-64-161
- 29 Knob, Glove Box Lid GA2K-64-041B-29
- 30 Striker GA2K-64-041B-78
- 31 Hinge, Glove Box GA2K-64-090A-29
- 32 Cushion, Rubber GA2K-64-090A-78
- 33 Stopper, Rubber GA2K-64-081-29
- 34 Frame, Glove Box GA2K-64-081-78
- 35 Switch, Glove Box GA2A-64-10XA
- 36 Bulb, Indicator R GA7B-64-071B
- 37 Bulb L GA7B-64-072B
- Radio Set R/L B092-64-046
- Player, CD R/L G113-64-073A
- Speaker, Radio R/L GA2K-64-261B-29

1994-97

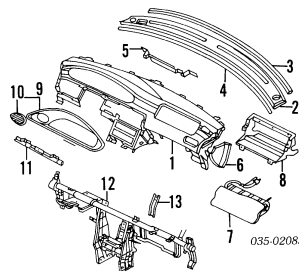

- 1 Panel, Instrument GB6H-60-350F-90
- 2 Panel, Upper GB6H-60-350F-29
- 3 Seal, Front GB6H-60-721-90
- 4 Seal, Rear GB6H-60-721-29
- 5 Bracket, Upper GA2A-60-726
- 6 Panel, Side GA2A-60-722B
- 7 Module, Air Bag-See Air Bag System Section GB6H-60-556B
- 8 Case, Air Bag R GA2K-64-910E-90
- 9 Hood, Meter L GA2K-64-920E-90
- 10 Grille, Vent-Serviced w/Meter Hood R GA2K-64-910E-29

- 11 Bracket, Lower GB6H-60-559B
- 12 Reinf, Panel 94-95 GB6H-60-420E
- 13 Bracket, Reinforcement 96-97 GD1E-60-420B

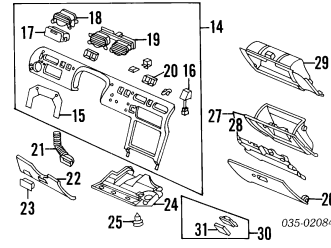

- 14 Panel Assy, Switch 94 GB6H-55-310E
- 15 Cover, Panel Lower 95-97 GC1M-55-310B
- 16 Switch, Hazard GA2A-55-423A
- 17 Pocket, Panel GA2L-66-4H0A
- 18 Louver, Vent GA2K-64-180D
- 19 Grille, Vent From 1-15-96 GC1M-64-180
- 20 Cover, Panel Upper GA2K-64-81XC
- 21 Duct, Lap GA2P-64-930D
- 22 Panel, Lower 94 R GA2K-55-427B
- 23 Louver, Lower Panel To 1-15-96 95-97 R GC1M-55-427A
- 24 Cover, Under L GA2K-55-423
- 25 Fastener, Under Cover (3) GA2K-55-423
- 26 Lid, Glove Box Otr
- 27 Glove Box Assy GB6H-64-041B-90
- 28 Reinf, Glove Box GB6H-64-041B-29
- 29 Frame, Glove Box GB6H-64-261E-90
- 30 Lock, Glove Lid GB6H-64-261E-29
- 31 Knob, Lid GB6H-64-090A-90
- AM-FM Cassette GA2K-64-081-90
- Player, CD GA2K-64-081-29
- 1994 94 0000-81-3431-F5
- 1995-97 95-97 0000-81-3266
- 0000-81-6410-03
- 0000-81-6410-03
- 0000-81-6410-03
- 0000-81-6410-03
- Speaker, Radio R/L 0000-81-H02A-90
- 1994 R/L 0000-81-H02A-29
- 1995-97 R/L 0000-81-1310

CENTER CONSOLE

Illustration Located in Next Column


- 1 Console Assy, Front Man Trans To 11-15-94 GA2K-64-320G
- 2 Lid, Ashtray (a) From 11-15-94 GD1E-64-320B
- 3 Box, Lamp (2) GA2M-64-320F
- 4 Bulb (2) GD1G-64-320
- 5 Wire GA2A-64-610C
- 6 Box, Console GA2A-64-630B-02
- 7 Boot, Lever Change (a) GA2A-64-216
- 8 Plate, Boot (a) 0000-11-0194
- 9 Panel, Side To 11-15-94 GA2K-67-SHO
- 10 Panel, Side To 11-15-94 GA2K-64-360A
- 11-15-94 GA2K-64-360A
- 12-15-94 GA2A-64-331B
- 13-15-94 GA2A-64-334A
- 14-15-94 GA2K-64-231B-90
- 15-15-94 L GA2K-64-241C-90

madp11_g01_

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.
Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.

MAZDA 626 1993-97

CENTER CONSOLE Cont'd

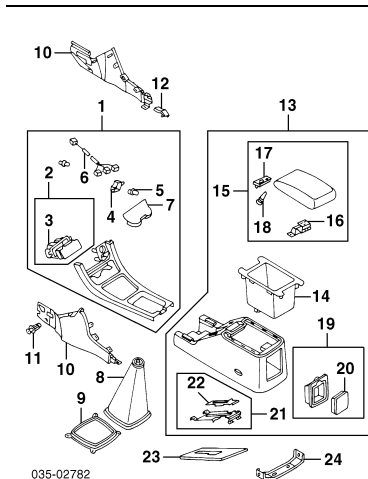


035-02782

- Gray R GA2K-64-231B-29
L GA2K-64-241C-29
Taupe R GA2K-64-231B-78
L GA2K-64-241C-78
- From 11-15-94
Brown R GD1E-64-231-90
L GD1E-64-241-90
R/L GD1E-64-231-29

- 11 Fastener, Side Panel
Gray R/L B467-68-AC3-43
Gray R/L B467-68-AC3-29
Taupe R/L B467-68-AC3-78
GA2A-64-329
- 12 Cover, Hole
Gray GA2A-64-420C-90
Taupe GA2A-64-420C-29
GA2A-64-420C-78
GA2A-64-441
- 13 Console Assy, Rear
Brown GA2A-64-450B-90
Gray GA2A-64-450B-29
Taupe GA2A-64-450B-78
GA2A-64-46Y
GA2A-64-46X
B092-64-046
(b) Included w/Console Upper Lid Assy
- 14 Box, Console
Brown GA2A-64-660-90
Gray GA2A-64-660-29
Taupe GA2A-64-660-78
- 15 Lid Assy, Console Upper
Brown GA2A-64-680-90
Gray GA2A-64-680-29
Taupe GA2A-64-680-78
(a) Included w/Ashtray Assy
- 16 Hinge, Lid (b)
Gray GA2A-64-430-90
Taupe GA2A-64-430-29
GA2A-64-430-78
- 17 Latch, Lid (b)
Brown GA2A-64-430A
Gray GA2A-64-432-29
Taupe GA2A-64-430A
(a) Included w/Rear Console Assy
(a) Included w/Upper Plate Assy
- 18 Cushion, Lid (b) (2)
Brown GA2A-64-429B
Gray GA2A-64-416B
- 19 Ashtray Assy
Brown GA2A-64-660-90
Gray GA2A-64-660-29
Taupe GA2A-64-660-78
- 20 Lid, Ashtray (a)
Brown GA2A-64-680-90
Gray GA2A-64-680-29
Taupe GA2A-64-680-78
- 21 Plate Assy, Upper
Brown GA2A-64-430-90
Gray GA2A-64-430-29
Taupe GA2A-64-430-78
- 22 Plate, Inner (a)
Brown GA2A-64-430A
Gray GA2A-64-432-29
Taupe GA2A-64-430A
(a) Included w/Rear Console Assy
(a) Included w/Upper Plate Assy
- 23 Plate, Console Lower
Brown GA2A-64-429B
Gray GA2A-64-416B
- 24 Brkt, Rear Console
Gray GA2A-64-416B


ROCKER/PILLARS/FLOOR

SHEET METAL

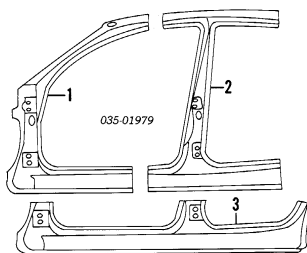


035-01979

- 1 Pillar, Hinge Outer R GAYK-70-221A
L GAYK-71-221A
2 Pillar, Center Outer R GAYK-70-351
L GAYK-70-271
3 Panel, Outer Rocker R GAYK-71-271

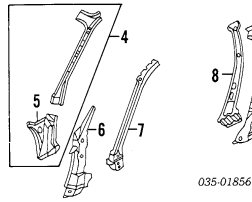

035-01856


- 4 Pillar Assy, Hinge Inner R GA2K-70-04X
L GA2K-71-04X
5 Panel, Cowl Side R GA2A-70-23YE
L GA2A-71-23YD
(Included w/Inner Hinge Pillar Assy)
6 Reinf, Pillar Outer R GA2K-70-030B
L GA2K-71-030B
7 Reinf, Pillar Inner R GA2K-70-242B
L GA2K-71-242B
8 Pillar, Inner Ctr R GB8A-70-080A
GB8A-71-080A
93 R GB8A-70-360
GB8A-71-360
94-97 R GB8A-70-360
L GB8A-71-360

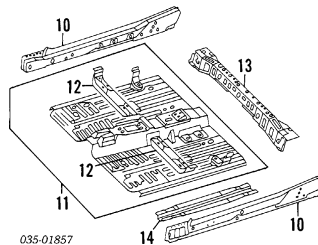

035-01857

- 10 Panel, Inner Rocker R GA2K-53-950B
L GA2K-54-950B
11 Pan Assy, Front Floor R GAYK-53-60YA
L GAYK-53-60YA
12 Crossmember, Front R GA2A-53-650C
L GA2A-54-650C
(Included w/Front Floor Pan Assy)
13 Crossmember, Rear R GA2A-53-911C
L GA2A-54-911C
14 Frame, Side R GA2A-53-660A
L GA2A-54-660A

INTERIOR TRIM

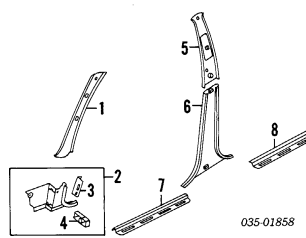


035-01858

- 1 Midg, Inside Garnish-See Windshield Section
2 Panel Assy, Cowl Trim Brown R GA2K-68-370B-90
L GA2K-68-390C-90
Gray R GA2K-68-370B-29
L GA2K-68-390C-29
Taupe R/L GA2K-68-370B-78
L GA2K-68-390C-78
- 3 Cover, Trim Panel Brown GA2A-68-381B-90
Gray GA2A-68-381B-29
Taupe GA2A-68-381B-78
H001-66-739
(Included w/Left Cowl Trim Panel Assy)
- 4 Holder, Fuse R GA2K-68-190-80
L GA2K-68-210-80
Gray R GA2K-68-190-29
L GA2K-68-210-29
- 5 Trim, Uptr Ctr Pillar w/Seat Belt Adjust Light Beige R GA2K-68-190C-29

- Taupe L GA2K-68-210C-29
R GA2K-68-190C-78
L GA2K-68-210C-78
- 6 Trim, Lower Center Pillar Brown R GA2K-68-220C-90
L GA2K-68-230C-90
Gray R GA2K-68-220C-29
L GA2K-68-230C-29
Taupe R GA2K-68-220C-78
L GA2K-68-230C-78
- 7 Plate, Front Scuff Brown R/L GA2K-68-710F-90
Gray R/L GA2K-68-710F-29
Taupe R/L GA2K-68-710F-78
- 8 Plate, Rear Scuff Brown R/L GA2K-68-730G-90
Gray R/L GA2K-68-730G-29
Taupe R/L GA2K-68-730G-78

FRONT SEAT

PASSENGER SIDE

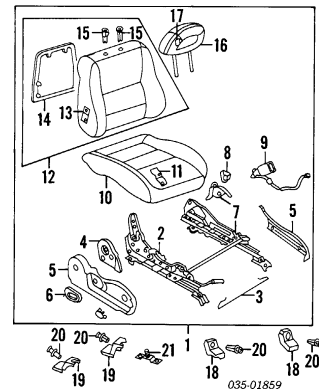


035-01859

- 1 Seat Assy, Front w/Leather Pkg GB6M-57-100B-80
DX Model GA2K-57-100F-29
LX, ES Model GA2P-57-100F-29
(Order by Application)
29, 30 Gray; 90 Brown; 91 Beige/Brown; 02 Black; 78 Taupe; 80 Light Beige
- 2 Adjuster Unit (a) 93 GA2K-88-A00
94-97 GB6H-88-A00A
GA2A-88-106
- 3 Wire, Release (a) GA2A-88-1J1
4 Protector, Adjuster (a) R GA2K-88-1G1-78
5 Cover, Side (a) L GA2A-88-1H3-78
(Order by Application)
29 Gray; 90 Brown; 78 Taupe; 02 Black; 80 Light Beige
- 6 Knob, Adjuster (a) Black GA2A-88-1G5-02
Beige GA2A-88-1G5-80
Gray GA2A-88-1G5-29
Taupe GA2A-88-1G5-78
- 7 Cover, Inner (a) Beige GA2A-88-1G3A-90
Black GA2A-88-1G3A-02
Gray GA2A-88-1G3A-29
Taupe GA2A-88-1G3A-78
R/L GA2A-88-1J2
- 8 Cover, Hinge (a) R/L GA2A-88-1J2
- 9 Belt, Seat (a)-See Seat Belts Section
- 10 Cushion Assy, Seat (a) w/Leather Pkg GA2S-88-110B-29
w/o Leather Pkg GA2K-88-110A-29
DX Model GA2P-88-110A-29
LX, ES Model GA2P-88-110A-29
(b) Included w/Seat Cushion Assy
- 11 Trim, Cushion (a) (b) w/Leather Pkg GA2S-88-111B-29
w/o Leather Pkg GA2K-88-111B-29
DX Model GA2P-88-111B-29
LX, ES Model GA2P-88-111B-29
- 12 Backrest Assy (a) w/Leather Pkg GA2S-88-130C-29
w/o Leather Pkg GA2K-88-130-29
DX Model GA2P-88-130-29
LX, ES Model GA2P-88-130-29
- 13 Trim, Backrest (a) (b) w/Leather Pkg GA2S-88-181A-29
w/o Leather Pkg GA2K-88-181-29
DX Model GA2P-88-181-29
LX, ES Model GA2P-88-181-29
- 14 Cover, Backrest (a) (b) w/Leather Pkg GA2S-88-AL0-29
w/o Leather Pkg GA2K-88-AL0-29
DX Model GA2P-88-AL0-29
LX, ES Model GA2P-88-AL0-29
(Gray listed, Order by Application)
29 Gray; 90 Brown; 02 Black; 78 Taupe; 80 Light Beige
- 15 Guide, Pole (a) (b)

MAZDA 626 1993-97

Beige	R	G211-88-138-80
Gray	R	G211-88-137-80
Gray	R	G211-88-138-29
Taupe	R	G211-88-137-29
	R	G211-88-139-78
	R	G211-88-137-78
(b) Included w/Backrest Assy		
16 Headrest Assy† (a)		
w/Leather Pkg		GA2S-88-140C-29
w/o Leather Pkg		
DX Model		GA2K-88-140-29
LX, ES Model		GA2P-88-140-29
17 Trim, Headrest† (a) (b)		
w/Leather Pkg		GA2S-88-141-29
w/o Leather Pkg		
DX Model		GA2K-88-141-29
LX, ES Model		GA2P-88-141-29
†Gray listed, Order by Application		
29 Gray; 90 Brown; 02 Black; 78 Taupe; 80 Light Beige		
(a) Included w/Front Seat Assy		
(b) Included w/Headrest Assy		
18 Cover, Adjuster Front		
Beige	R	GA2K-57-041A-90
	L	GA2K-57-042A-90
Gray	R	GA2K-57-041A-29
	L	GA2K-57-042A-29
Taupe	R	GA2K-57-041A-78
	L	GA2K-57-042A-78
19 Cover, Adjuster Rear		
Beige	R	GA2K-57-051-90
	L	GA2K-57-052-90
Gray	R	GA2K-57-051-29
	L	GA2K-57-052-29
Taupe	R	GA2K-57-051-78
	L	GA2K-57-052-78
†Black listed, Order by Application		
00 Black; 06, 29 Gray; 23 Brown; 27 Light Gray; 043 Beige		
20 Fastener, Cover†		R/L B040-88-865A-00
21 Bracket, Seat		GA2A-57-59XA

FRONT DRIVER SIDE

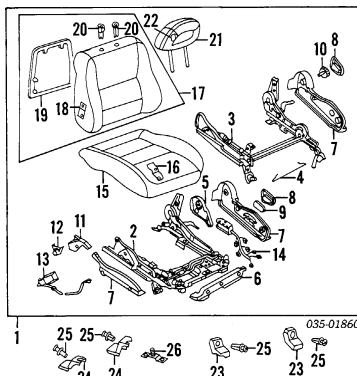


1 Seat Assy, Front†		
w/Leather Pkg		GA2S-57-150H-29
w/o Leather Pkg		
DX Model		GA2K-57-150F-29
LX, ES Model		GA2P-57-150F-29
†Gray listed, Order by Application		
29 Gray; 90 Brown; 02 Black; 78 Taupe; 80 Light Beige		
Adjuster Unit (a)		
2 w/Leather Pkg		GA2S-88-AF0
3 w/o Leather Pkg		GA2K-88-A50A
4 Wire, Release (a)		GA2A-88-106
5 Protector (a)		GA2A-88-1K1
6 Cover, Front (a)		
w/Leather Pkg		GA2G-88-1H2
7 Cover Side† (a)		R GA2K-88-1K3-29
	L	GA2A-88-1H3-90
†Gray listed, Order by Application		
02 Black; 29 Gray; 78 Taupe; 80 Beige; 90 Brown		
8 Knob, Adjuster (a)		
Beige		GA2A-88-1H5-80
Black		GA2A-88-1H5-02
Gray		GA2A-88-1H5-29
Taupe		GA2A-88-1H5-78
9 Knob, Slide (a)		
w/Leather Pkg		GA2G-57-167A-80
Beige		GA2G-57-167A-02
Black		GA2G-57-167A-29
Gray		GA2G-57-167A-78
10 Dial, Support (a)		
w/o Leather Pkg		GA2A-88-1L1-29
Beige		GA2A-88-1L1-02
Black		GA2A-88-1L1-29
Gray		GA2A-88-1L1-78
11 Cover, Inner (a)		

Beige		GA2A-88-1H1A-80
Black		GA2A-88-1H1-02
Gray		GA2A-88-1H1A-29
Taupe		GA2A-88-1H1A-78
		GA2A-88-1J2
12 Cover, Hinge (a)		
13 Belt, Seat (a) - See Seat Belts Section		
14 Switch, Power Seat (a)		
w/Leather Pkg		GA2G-57-155C
15 Cushion Assy, Seat† (a)		
w/Leather Pkg		GA2S-88-160B-80
w/o Leather Pkg		
DX Model		GA2K-88-160A-29
LX, ES Model		GA2P-88-160A-29
16 Trim, Cushion† (a) (b)		
w/Leather Pkg		GA2S-88-161B-29
w/o Leather Pkg		
DX Model		GA2K-88-161A-29
LX, ES Model		GA2P-88-161B-29
(b) Included w/Seat Cushion Assy		
17 Backrest Assy† (a) (b)		
w/Leather Pkg		GA2S-88-180B-29
w/o Leather Pkg		
DX Model		GA2K-88-180-29
LX, ES Model		GA2P-88-180-29
18 Trim, Backrest† (a) (b)		
w/Leather Pkg		GA2S-88-181A-29
w/o Leather Pkg		
DX Model		GA2K-88-181-29
LX, ES Model		GA2P-88-181-29
19 Cover, Backrest† (a) (b)		
w/Leather Pkg		GA2S-88-AL0-29
w/o Leather Pkg		
DX Model		GA2K-88-AL0-29
LX, ES Model		GA2P-88-AL0-29
†Gray listed, Order by Application		
29 Gray; 90 Brown; 02 Black; 78 Taupe; 80 Light Beige		
20 Guide, Pole (a) (b)		
Beige	R	G211-88-138-80
	L	G211-88-137-80
Gray	R	G211-88-138-29
	L	G211-88-137-29
Taupe	R	G211-88-138-78
	L	G211-88-137-78
(b) Included w/Backrest Assy		
21 Headrest Assy† (a)		
w/Leather Pkg		GA2S-88-190-29
w/o Leather Pkg		
DX Model		GA2K-88-190-29
LX, ES Model		GA2P-88-190-29
22 Trim, Headrest† (a) (b)		
w/Leather Pkg		GA2S-88-141-29
w/o Leather Pkg		
DX Model		GA2K-88-141-29
LX, ES Model		GA2P-88-141-29
†Gray listed, Order by Application		
29 Gray; 90 Brown; 78 Taupe; 80 Light Beige		
(a) Included w/Front Seat Assy		
(b) Included w/Headrest Assy		
23 Cover, Adjuster Front		
Brown	R	GA2K-57-043A-90
	L	GA2K-57-044A-90
Gray	R	GA2K-57-043A-29
	L	GA2K-57-044A-29
Taupe	R	GA2K-57-043A-78
	L	GA2K-57-044A-78
24 Cover, Adjuster Rear		
Brown	R	GA2K-57-052-90
	L	GA2K-57-053-90
Gray	R	GA2K-57-051-29
	L	GA2K-57-052-29
Taupe	R	GA2K-57-051-78
	L	GA2K-57-052-78
†Black listed, Order by Application		
R/L B040-88-865A-00		
25 Fastener, Cover† (2/Side)		
26 Bracket, Seat		GA2A-57-59XA

REAR SEAT

SEAT BELTS

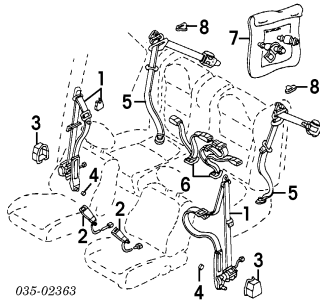

Belt Assy, Front Seat		
1 Retractor Side		
Beige	93-95 R	GB6H-57-630D-80


Gray		
	L	GB6H-57-690D-80
	R	GD1E-57-630D-80
	L	GD1E-57-690A-80
	R	GA2K-57-630B-29
	L	GA2K-57-690A-29
	R	GB6H-57-630D-29
	L	GB6H-57-690D-29
	R	GD1E-57-630D-29
	L	GD1E-57-690A-29
	R	GA2K-57-630B-78
	L	GA2K-57-690A-78
2 Buckle Side		
Beige		
Black	R	GB8A-57-620-80
	L	GB8A-57-680-80
Gray	R	GA2A-57-620B-02
	L	GA2A-57-680B-02
Taupe	R	GB8A-57-620-29
	L	GA2A-57-680B-29
	R	GA2A-57-620B-78
	L	GA2A-57-680B-78
3 Cover, Retractor		
	R	GA2K-57-988B
	L	GA2K-57-989A
4 Cap, Belt†		R/L GA2K-57-63B-29
†Gray listed, Order by Application		
5 Belt, Seat Rear Outer		
Beige	93-95 R	GB6H-57-730A-80
	L	GB6H-57-790A-80
	R	GD1E-57-730D-80
	L	GD1E-57-790D-80
Gray	93-95 R	GA2K-57-730D-29
	L	GA2K-57-790D-29
	R	GD1E-57-730D-29
	L	GD1E-57-790D-29
Taupe	R	GA2K-57-730D-78
	L	GA2K-57-790D-78
6 Belt, Seat Rear Center		
Beige		
Gray	R	GA2K-57-720B-80
	L	GA2K-57-780B-80
Taupe	R	GA2K-57-720B-29
	L	GA2K-57-780B-29
7 Anchor, Belt		
Canada		N.A.
8 Cover, Retractor-Serviced w/Rear Outer Seat Belt		

FRONT DOOR

SHEET METAL

Shell Assy, Door		R GDYE-58-02XB
	L	GDYE-59-02XB
Panel, Door Repair†	93-94 R	GA2K-58-031E
	L	GA2K-58-031E
	95-97 R	GD1E-58-030F
	L	GD1E-59-030F
†Included w/Door Shell Assy		

EXTERIOR TRIM

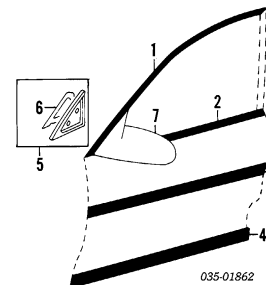


1 Moulding, Door Sash		
	R	GA2K-50-981C
	L	GA2K-50-985C
2 Moulding Assy, Belt		
Protector, Belt Midg†		
	L	GA2K-50-640F
	R	GA2K-50-645B
	L	GA2K-50-655B
†Included w/Belt Moulding Assy		
3 Moulding, Side†		
Adhesive		
	R	GA2K-50-682D-00
	L	GA2K-50-692D-00
†Brilliant Black listed, Order by Application		
G1 Sahara Gold Metallic; G3 Arctic Blue Metallic;		
T3 Platinum OPM; J4 Passion Rose; NN Ebony;		
PZ Brilliant Black; UA Cameo White; UK Performance		
White; SS Neat Green; 56 Cpl; 64 New Sahara Gold		
B8 Champagne M; J3 Platinum Opm; J4 Passion Rose;		
4Y Caribbean Blue M; 56 Neat Green MC;		
G1 Cream Yellow; G3 Arctic Blue Metallic; 21 Sandal Wood;		
24 Timberline Metallic; 48 Medium Poppy		
4 Moulding Assy, Lower		
Clip-On		
To 8-25-95		
From 8-25-95	R	GA2K-50-L30C
	L	GA2K-50-L40C
Clip, Lower Moulding†		
(7/Side)	R/L	GA2K-50-L32A

madpi1_g01_

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.
Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.

167

MAZDA 626 1993-97

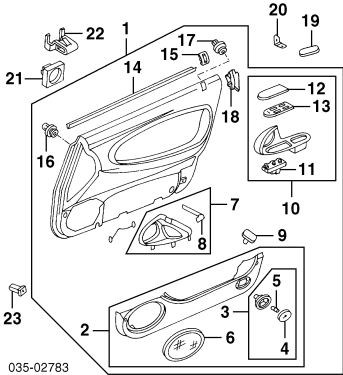FRONT DOOR Cont'd		4 Lens (a) (b) (c)		4 Rod Assy, Latch	
EXTERIOR TRIM Cont'd		5 Bulb (a) (b) (c)		5 Knob, Latch	
*Included w/Lower Moulding Assy		6 Grille, Speaker (a) (b)		6 Stopper, Latch Knob	
5 Garnish Assy, Door Corner	R GA2K-50-M10J L GA2K-50-M20K R GA7B-50-M15A L GA7B-50-M25A	*Included w/Door Trim Pocket Assy		7 Handle Assy, Outside	
6 Seal, Garnish		Speaker, Radio		*Brilliant Black listed, Order by Application	
*Included w/Door Corner Garnish Assy		7 Handle Assy, Pull (a)		8 Joint, Handle	
7 Mirror, Rear View	Manual 93-94 R GA2K-69-120E-00 L GA2K-69-180E-00 95-97 R GC1P-69-120 L GC1P-69-180	8 Cap, Door Trim (a)		9 Handle Assy, Inside	
Power	w/Defogger R GC1M-69-120A-00 L GC1M-69-180A-00 w/Defogger R GA2L-69-120H-00 L GA2L-69-180H-00	9 w/o Pwr Windows		10 Clip, Inside Handle	
*Brilliant Black listed, Order by Application		10 Panel Assy, Switch (a)		11 Hinge, Upper	
B1 Valencia P/C; G1 Sahara Gold Metallic; J3 Optimum; J4 Passion Rose; NN Ebony; PZ Brilliant Black; UA Cameo White; UK Performance White; 5S Neat Green MC; 56 Opal; 64 New Sahara Gold B8 Champagne M.; J3 Platinum Opn; J4 Passion Rose; 4Y Caribbean Blue; 5S Neat Green MC; G1 Cream Yellow; G3 Arctic Blue Metallic		11 Switch, Pwr Window (b)		12 Hinge, Lower	
Garnish, Sail	Man Mirror 93-94 R GA2K-69-111C L GA2K-69-171C 95-97 R GA2N-69-111C L GA2N-69-171C	12 Man Windows		13 Check, Door	
Pwr Mirror	93-94 R GA2L-69-111C L GA2L-69-171C 95-97 R GA7J-69-111 L GA7J-69-171	13 Pwr Windows		14 Pin, Door Check	
Knob, Manual Mirror	No. 1 R/L D062-69-1B5 No. 2 R/L D062-69-1B6	14 W/Strip, Inner (a)		15 Weatherstrip Assy, Door	
INTERIOR TRIM		15 Cover, Door Lock (a)		Fastener, Weatherstrip	
		16 Fastener, Trim Panel (a)		17 No. 1	
035-02783		17 Rear (S/ide)		18 No. 2 (5/ide)	
1 Panel Assy, Trim		18 Cover, Door Trim (a) (2)		19 Plate, Seal	
Cloth		19 Cover, Recess		20 Weatherstrip Assy, Lower	
DX Model		20 Brkt, Pull Handle		21 Fastener, Lower W/Strip	
Man Windows		21 Grommet, Upper		22 Welt, Seaming	
93 R GA2K-68-420L-29		To 11-9-94		Brown	
L GA2K-68-450L-29		From 11-9-94		Gray	
94-95 R GB6H-68-43Y-29		22 Clip, Trim		Taupe	
L GB6H-68-46Y-29		23 Grommet, Pocket (2/ide)			
96 R GD1E-68-43Y-29					
L GD1E-68-46Y-29					
97 R GD1E-68-43Y-29					
L GD1E-68-46Y-29					
Pwr Windows					
93 R GA2L-68-420L-29					
L GA2L-68-450L-29					
94-95 R GB6K-68-43Y-29					
L GB6K-68-46Y-29					
96-97 R GD1F-68-43Y-29					
L GD1F-68-46Y-29					
LX, ES Model					
93 R GA2P-68-420M-29					
L GA2P-68-450M-29					
94-95 R GB6L-68-43Y-29					
L GB6L-68-46Y-29					
96-97 R GD1G-68-43Y-29					
L GD1G-68-46Y-29					
Leather/Vinyl					
93-95 R GA2R-68-43Y-29					
L GA2R-68-46Y-29					
96-97 R GD1H-68-43Y-29					
L GD1H-68-46Y-29					
2 Pocket Assy, Door Trim (a)					
1993					
R GA2K-68-4C0E-29					
L GA2K-68-4N0E-29					
1994-97					
R GA2K-68-4C0E-29					
L GA2K-68-4N0E-29					
3 Lamp Assy, Courtesy (a) (b)					
*Gray listed, Order by Application					
90 Beige; 29 Gray; 78 Taupe					

7 Escutcheon, Handle	
Brown	R/L A002-58-582-90
Gray	R/L A002-58-582-29
Taupe	R/L A002-58-582-78
8 Regulator, Power	
	R GB6J-59-560D
	L GB6J-59-560D


REAR DOOR

SHEET METAL

Shell Assy, Door	R GDYE-72-02XB
Panel, Door Repair	R GA2K-72-031D
	L GA2K-73-031D

*Included w/Door Shell Assy


EXTERIOR TRIM

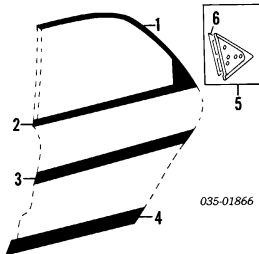

035-01866

- 1 Moulding, Sash R GA2K-50-991C
L GA2K-50-995C
- 2 Moulding Assy, Belt R GA2K-50-650F
L GA2K-50-670F
- Protector, Belt Midg R GA2A-50-649
L GA2K-50-649A
- *Included w/Belt Moulding Assy
- 3 Moulding, Side R GA2K-50-683D-00
Adhesive L GA2K-50-693D-00
- *Brilliant Black listed, Order by Application
G1 Sahara Gold Metallic; G3 Arctic Blue Metallic;
T3 Platinum OPM; J4 Passion Rose; NN Ebony;
PZ Brilliant Black; UA Cameo White; UK Performance
White; SS Neat Green; 56 Opal; 64 New Sahara Gold
B8 Champagne M.; J3 Platinum Opm; J4 Passion Rose;
4Y Caribbean Blue; 5S Neat Green MC; 21 Sandal Wood;
G1 Sahara Gold Metallic; G3 Arctic Blue Metallic;
48 Medium Poppy; 24 Timberline
- 4 Moulding Assy, Lower R GA2K-50-L50C
Clip-On L GA2K-50-L60C
To 8-25-95 R GB6H-50-L50
From 8-25-95 L GB6H-50-L60
- Clip, Lower Moulding R/L GA2K-50-L32A
To 8-25-95 (4/Side) R/L GA2K-50-L32A
From 8-25-95 (6/Side)
- *Included w/Lower Moulding Assy
- 5 Garnish Assy, Door Corner R GA2K-50-M30L
L GA2K-50-M40L
- 6 Seal, Garnish R/GS16-50-M35
L/GS16-50-M45
- *Included w/Door Corner Garnish Assy

INTERIOR TRIM

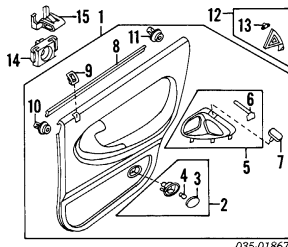

035-01867


- 1 Panel Assy, Trim R GA2K-68-520J-29
Cloth DX Model L GA2K-68-550J-29
Man Windows 94 R GB6H-68-520A-29
L GB6H-68-550A-29
- 95-97 R GD1E-68-53V-29
L GD1E-68-56Y-29
- Pwr Windows 93 R GA2L-68-520J-29
L GA2L-68-550J-29
- 94-95 R GB6H-68-520A-29

- 96-97 R GB6H-68-550A-29
L GD1F-68-53Y-29
- 93 R GA2P-68-520K-29
L GA2P-68-550K-29
- 94 R GB6L-68-520A-29
L GB6L-68-550A-29
- 95 R GC1S-68-53Y-29
L GC1S-68-550Y-29
- 96-97 R GD1G-68-53Y-29
L GD1G-68-56Y-29
- 93-94 R GA2R-68-520J-29
L GA2R-68-550J-29
- 95 R GD0S-68-520A-29
L GD0S-68-550A-29
- 96-97 R GD1H-68-53Y-29
L GD1H-68-56Y-29

*Gray listed, Order by Application

- 2 Lamp Assy, Courtesy (a) R/L GA2C-68-4G0-90
Brown R/L GA2C-68-4G0-29
Gray R/L GA2C-68-4G1
- 3 Lens (a) (b) R/L 0000-11-0194
- 4 Bulb (a) (b) *Included w/Courtesy Lamp Assy
- 5 Handle Assy, Pull (a) R GA2A-68-D60C-90
Brown L GA2K-68-D90C-90
Gray L GA2A-68-D60C-29
L GA2K-68-D90C-29
- 6 Cap, Door Trim (a) (b) R GA5R-68-D62B-02
Rear L GA5R-68-D82B-02
- (b) Included w/Pull Handle Assy
- 7 Cap, Switch Hole (a) R/L GA2K-68-D62-90
Brown R/L GA2K-68-D62-29
Gray R/L GA2K-68-D62-78
Taupe R/L GA2K-72-821C
L GA2K-73-821C
- 8 W/Strip, Inner (a) R/L GA2K-68-421A-90
Beige R/L GA2K-68-421A-29
Gray R/L GA2K-68-421A-78
Taupe
- 9 Cover, Door Lock (a) R/L GA2A-68-AB1A
10 Front R/L GA2K-68-AB1
- 11 Rear (a) Included w/Trim Panel Assy
- 12 Garnish Assy, Sail Inner R GA2K-68-51XJ
L GA2K-68-51YJ
- 13 Clip, Garnish R/L B499-68-AD1A
- *Included w/Inner Sail Garnish Assy
- 14 Grommet, Upper R/L GA2K-68-AD5A
- 15 Clip, Trim R/L GA2A-68-AD2A

HARDWARE

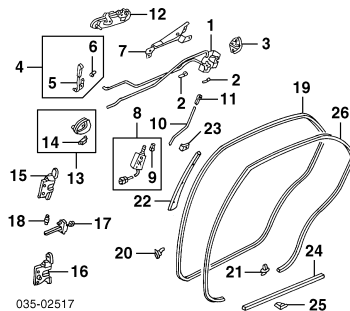


035-02517

- 1 Latch Assy, Door R GA2M-72-310B
w/Theft Deterrent L GA2M-73-310B
w/o Theft Deterrent R GA2K-72-310A
L GA2K-73-310A
- 2 Clip, Latch (2/Side) R/L G030-59-315
- *Included w/Door Latch Assy
- 3 Striker, Latch R/L H260-58-361A
- 4 Knob Assy, Latch R GA2L-72-390-90
Brown R/L GA2L-72-390-90
Gray R/L GA2L-72-390-29
Taupe R/L GA2L-72-390-78
L GA2L-73-390-78
- 5 Knob, Latch R/L H260-58-316-90
Brown R/L H260-58-316-29
Gray R/L H260-58-316-78
Taupe R/G030-58-315
L/G030-59-315
- 6 Clip, Knob (4/Side) *Included w/Latch Knob Assy
- 7 Protector, Rod R GA2K-72-308C
1995-94 L GA2K-73-308C
- 1995-97 R GA2K-72-308C
To 2-21-95 L GA2K-73-308C
- From 2-21-95 R GB6H-72-308
- 8 Actuator Assy, Latch R/D081-59-350A

- 9 Clip, Actuator R/D081-59-350A
L B093-58-351
- *Included w/Latch Actuator Assy
- 10 Rod, Actuator R GA2K-72-352
L GA2K-73-352
- 11 Clip, Rod (4/Side) R G030-58-315
L G030-59-315
- 12 Handle, Outside R GD1E-72-410-NN
To 11-9-95 L GA7B-73-410C-PZ
R GD1E-72-410-NN
L GD1E-73-410-NN
- *Black listed, Order by Application
G1 Sahara Gold Metallic; G3 Arctic Blue Metallic;
PZ Brilliant Black; UA Cameo White; 13 Passion Rose;
46 Neat Green MC; 67 Platinum; NN Ebony;
B8 Champagne M; J3 Platinum Opm; J4 Passion Rose;
UA Cameo White; 24 Timberline;
4Y Caribbean Blue M; 5S Neat Green MC; 48 Medium Poppy;
B1 Valencia P/C; 56 Opal
- 13 Handle Assy, Inside R GA2K-58-330B-90
Brown R/L GA2K-58-330B-29
Gray R/L GA2K-58-330B-78
Taupe R/L GA2K-58-330B-78
R B001-58-335
L FB01-58-335
- 14 Clip, Handle *Included w/Inside Handle Assy
- 15 Hinge, Upper R GA2L-72-210B
L GA2L-72-210B
- 16 Hinge, Lower R/L GA2L-72-240B
L GA2L-73-240B
- 17 Check, Door R/L GA2K-72-270F
L H260-58-265C
- 18 Pin, Door Check R GA2K-72-760D
To 3-95 L GA2K-73-760D
R GC1M-72-760A
L GC1M-73-760A
- 19 Weatherstrip Assy, Door From 3-95
- Fastener, Weatherstrip R/L GA2A-58-762
No. 1 (6/Side) R/L G031-58-762
No. 2 (14/Side) *Included w/Door Weatherstrip Assy
- 22 Plate, Seal R GA2K-72-768B
To 3-16-95 L GA2K-73-768B
From 3-16-95 R GC1M-72-768B
L GC1M-73-768B
- 23 Grommet (3/Side) R/L GA2K-72-769
L GA2K-72-76XA
- 24 Weatherstrip Assy, Lower R/L GA2K-72-76XA
- 25 Fastener, Lower W/Strip (4/Side) R/L G031-58-762
- *Included w/Lower Weatherstrip Assy
- 26 Welt, Seaming R GA2K-68-913A-90
Brown R/L GA2K-68-914A-90
Gray R/L GA2K-68-913A-29
L GA2K-68-914A-29
Taupe R/L GA2K-68-913-78
L GA2K-68-914-78

GLASS & PARTS

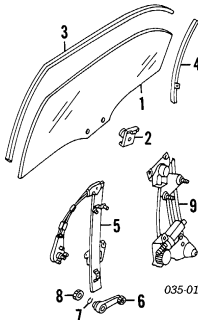

035-01869

- 1 Glass, Rear Door R GA2K-72-511B
Mazda L GA2K-73-511B
- 2 Grommet (2/Side) R/L S084-58-502
- 3 Run, Glass R GA2K-72-605D
L GA2K-73-605D
- 4 Guide, Glass R GA2K-72-603G
L GA2K-73-603G
- 5 Regulator, Manual 93 R GB6H-72-560C
L GB6H-73-560C
94-97 R GB6H-72-560C
L GB6H-73-560C
- *Add'l Parts &/or Dealer Contact Required
- 6 Handle Assy, Regulator R/L S084-58-580A-90
Brown R/L S084-58-580A-29
Gray R/L S084-58-580A-78
Taupe R/L B001-58-585
- 7 Ring, Snap *Included w/Regulator Handle Assy
- 8 Escutcheon, Handle

madpi1_g01_

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.
Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.

MAZDA 626 1993-97


REAR DOOR Cont'd

GLASS & PARTS Cont'd

Brown	R/L A002-58-582-90
Gray	R/L A002-58-582-29
Taupe	R/L A002-58-582-78
9 Regulator, Power	93 R GB6J-72-560D
	L GB6J-73-560D
	94-97 R GB6J-72-560D
	L GB6J-73-560D

ROOF

SHEET METAL/EXTERIOR TRIM

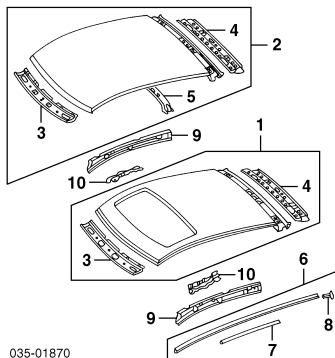


- Panel Assy, Roof
1 w/Sunroof GA2L-70-600A
2 w/o Sunroof GA2K-70-600B
3 Header, Front GA2K-70-641A
4 Header, Rear GA2K-70-701
5 Reinf. Roof w/o Sunroof GA2K-70-661A
*Included w/Roof Panel Assy
6 Moulding Assy, Roof R GC1M-50-9H0-PZ
L GC1M-50-9L0-PZ
*Brilliant Black listed, Order by Application
G1 Sahara Gold Metallic; G3 Arctic Blue Metallic;
J3 Platinum; J4 Lonely Brown Metallic; NN Ebony;
PZ Brilliant Black; UA Cameo White; UK Performance White;
46 Neat Green MC; 56 Opal; 64 New Sahara Gold
B8 Champagne M; J3 Platinum Opn; J4 Passion Rose;
5S Neat Green MC; B1 Valencia;
24 Timberline; 48 Medium Poppy
7 Retainer, Roof Midg (a) R/L GA2K-50-9H5A
8 Protector, Roof Midg (a) R GA2M-50-9H1
L GA2M-50-9L1
(a) Included w/Roof Moulding Assy
9 Rail, Roof Inner R GA2K-70-050B
L GA2K-71-050B
10 Bracket, Sunroof R GA7C-70-621A
L GA7C-71-621A

INTERIOR TRIM

- 1 Headliner w/Sunroof
Light Beige To 1-3-95 GA2L-68-030J-80
From 1-3-95 to 4-4-95 GC1N-68-030D-80
From 4-4-95 to 6-13-95 GA2L-68-030J-80
From 6-13-95 GC1N-68-030D-80
Light Gray To 1-3-95 GA2L-68-030J-27
From 1-3-95 to 4-4-95 GC1N-68-030D-80
From 4-4-95 to 6-13-95 GA2L-68-030J-80
From 6-13-95 GC1N-68-030D-80
Light Taupe GA2L-68-030J-83
w/o Sunroof GA2K-68-030G-80
w/Spot Lamp
Light Beige


- Light Gray GA2K-68-030G-27
Light Taupe GA2K-68-030E-83
w/o Spot Lamp
Light Beige GA2M-68-030G-80
Light Gray GA2M-68-030G-27
Light Taupe GA2K-68-030E-83
2 Insulator, Roof (2) GA2K-68-021A
3 Adapter, Sun Visor w/o Sunroof
Light Beige R/L GA2K-69-261-80
Light Gray R/L GA2A-69-261A-27
Light Taupe R/L GA2A-69-261A-77
Handle, Assist 1993-94
Light Beige R GA2L-69-470C-80
Light Gray L GA2M-69-470C-80
Light Taupe R GA2L-69-470C-27
Light Gray L GA2M-69-470C-27
Light Taupe R/L B100-69-471-80
Light Gray R/L B100-69-471-27
Cap, Assist Handle (6) 1993-94
Light Beige R/L C001-69-472B-80
Light Gray R/L C001-69-472B-27
Light Taupe R/L C001-69-472B-77
1995-97
Light Beige R/L G030-69-472A-80
Light Gray R/L G030-69-472A-27
*Order by Application
Bracket, Assist Handle Right (2) 93 GA2K-69-45Y
94-97 GA2K-69-45YB
GA2K-69-45ZB
Left Hanger, Coat 1993-94
Light Beige C001-69-531D-80
Light Gray C001-69-531D-27
Light Taupe C001-69-531D-77
1995-97
Light Beige R GC1M-69-531A-80
Light Gray L GC1M-69-536A-80
R/L GC1M-69-531A-27
*Order by Application

OVERHEAD CONSOLE

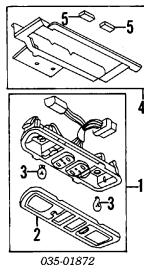


- 1 Console Assy, Overhead Light Gray GA2L-69-970D-27
Light Beige GA2L-69-970D-80
Light Taupe GA2L-69-970A-77
2 Lens GA2L-69-877A
3 Bulb (2) 0000-11-0194
*Included w/Overhead Console Assy
4 Bracket Assy, Console GA2L-69-98XE
5 Stopper (2) GA2L-69-977B
*Included w/Console Bracket Assy

SUNROOF

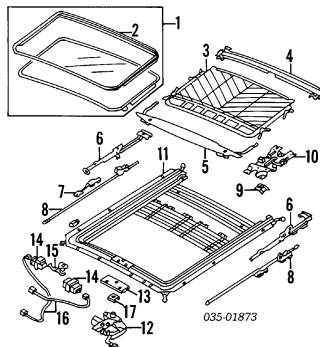


- 1 Glass, Sunroof GA2L-69-810C
2 Weatherstrip, Sunroof-Serviced w/Sunroof Glass
3 Sunshade GA2L-69-890-80
Light Beige GA2L-69-890-27
Light Gray GA2L-69-890-83
Light Taupe HG30-69-867
4 Rail, Drip HG40-69-880
5 Deflector, Air R HG30-69-858
6 Plate, Position R HG30-69-859
7 Guide, Front R/L HG40-69-862-3
8 Guide, Rear R HG40-69-864
L HG30-69-865A
9 Bracket, Rear R/L GA2L-69-84X
10 Bracket, Room Lamp GA2L-69-846B
11 Housing, Sliding Roof HG40-69-840
12 Motor, Sliding Roof HG40-69-871
13 Cover, Motor (2) HG40-69-875
14 Relay, Sliding Roof (2) H442-67-740A
15 Bracket, Relay HG30-69-84YA
16 Harness, Sliding Roof GA2L-69-872A
17 Guide, Cable HG40-69-877

BACK WINDOW

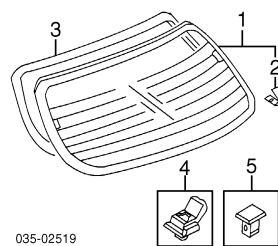

- 1 Glass Assy, Back Window Mazda (Green) GB8A-63-930
2 Stopper, Glass (3) KA01-63-959
*Included w/Back Window Glass Assy
3 Dam, Glass 93-94 GA7B-50-899
95-97 GA7B-50-899
4 Spacer, Glass Outer R/L D061-50-893
5 Spacer, Glass Inner R/L GA2A-50-891B

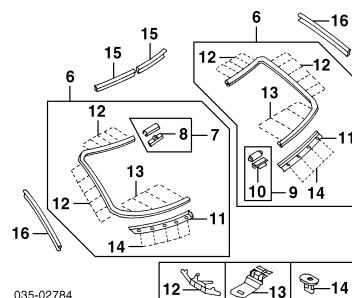

- 6 Moulding Assy, Back Glass R/L BA09-50-612-3
7 Joint Assy, Moulding Upper GA2K-50-6HYC
8 Protector, Joint (a) GA2K-50-6H3C
(a) Included w/Moulding Upper Joint Assy
9 Joint Assy, Moulding Lower GA2K-50-6L0C
10 Protector, Joint (b) GA2K-50-6H3C
(b) Included w/Moulding Lower Joint Assy
11 Protector, Lower Midg R GA2K-50-6H1C
L GA2K-50-6H2C
Retainer, Midg Type A (11/Side) R/L GA2A-50-6G8B
Type B (4/Side) R/L GA2A-50-6H9
Type C (4/Side) R/L B260-50-6K8
*Included w/Back Glass Moulding Assy
15 Protector, Upper Midg R/L GA2A-50-6G4B
16 Protector, Side Midg R/L GA2K-50-6G2B



QUARTER PANEL

SHEET METAL

Illustration Located in Next Column


- 1 Panel, Outer Quarter R GAYK-70-400
2 Door, Fuel L GAYK-71-400
GA2K-42-410A

MAZDA 626 1993-97

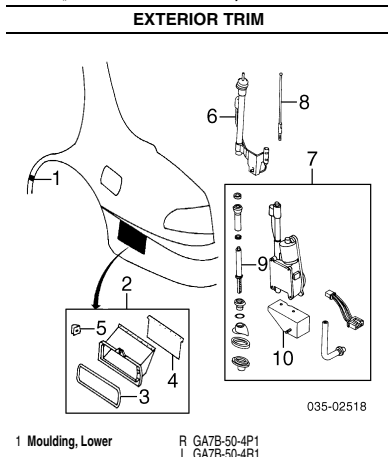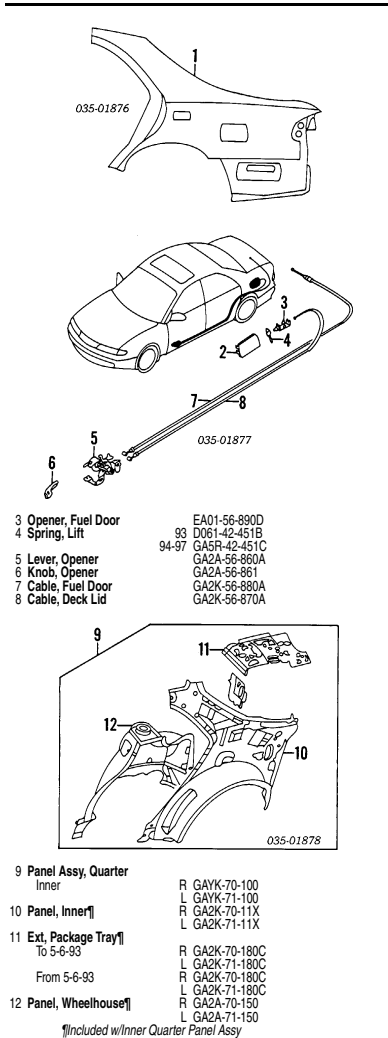


2 Chamber Assy, Extractor	L GA2A-51-920B
3 Gasket, Chamber	GA2A-51-922
4 Valve, Extractor	GA2A-51-924A
5 Clip (2)	GA2A-51-925A
*Included w/Extractor Chamber Assy	
6 Antenna, Manual	0000-81-930M
7 Antenna Assy, Power	0000-81-6930
To 10-25-94	0000-81-9306
From 10-25-94	
8 Mast, Antenna	0000-81-904C
9 Manual	0000-81-0532-CR
Power	0000-81-6626
To 10-25-94	GA2L-66-A9X
From 10-25-94	
10 Bracket, Power Antenna	GA2L-66-A9X
*Included w/Power Antenna Assy	

INTERIOR TRIM

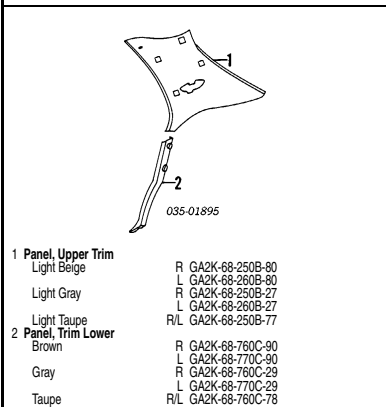


LUGGAGE LID

SHEET METAL

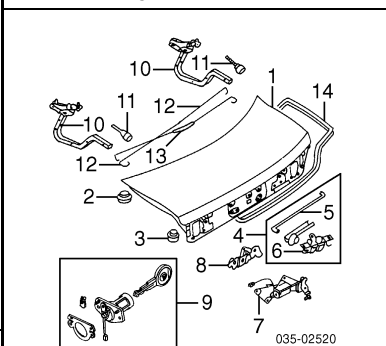


1 Lid, Luggage	GBYH-62-61X
Trim, Inner Luggage Lid	G50H-68-8WXA-97
2 Stopper, Lid	R/L 0208-72-941
3 Cushion, Lid	R/L B092-62-877
4 Latch Assy, Lid	93-95 GA2K-56-820E
	96-97 GD1E-56-820B
5 Rod, Lid Opener	GA2K-56-822A
6 Protector, Lock	93-95 GA2A-56-823
	96-97 GB8A-56-823
*Included w/Lid Latch Assy	
7 Actuator, Latch	GD1E-56-890C
Cable, Deck Lid-See Quarter Panel Section	GA2K-56-840B
8 Striker, Latch	1993-95 GA2L-76-230C
9 Cylinder w/Key	GA2K-76-230B
	GA2K-76-230B
w/Theft Deterrent	R GA2K-62-710D
w/o Theft Deterrent	L GA2K-62-720D
10 Hinge, Lid	R/L G211-56-802
11 Bolt, Hinge	R GB6J-52-791
12 Spring Assy, Balance	L GB6J-52-790A
13 Protector, Spring	B130-56-805A
*Included w/Left Balance Spring Assy	
14 Weatherstrip, Lid	GA2K-56-951B

EXTERIOR TRIM

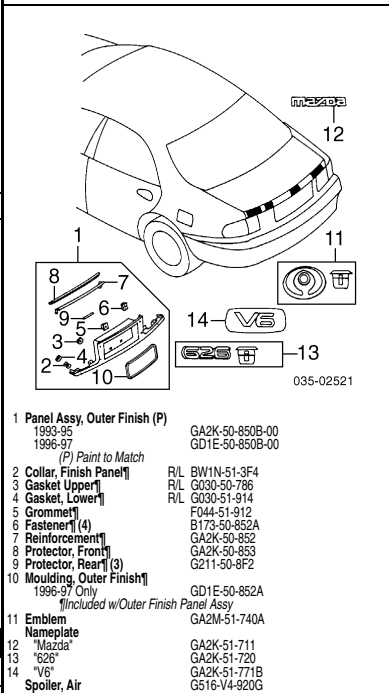

REAR SUSPENSION

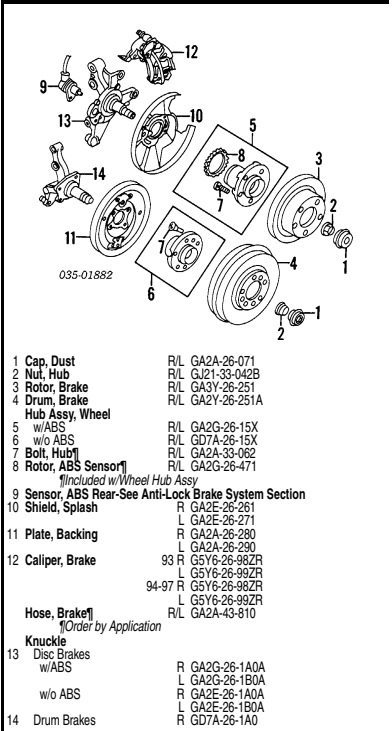


madp11_g01_

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.
Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.


171

MAZDA 626 1993-97


REAR SUSPENSION Cont'd

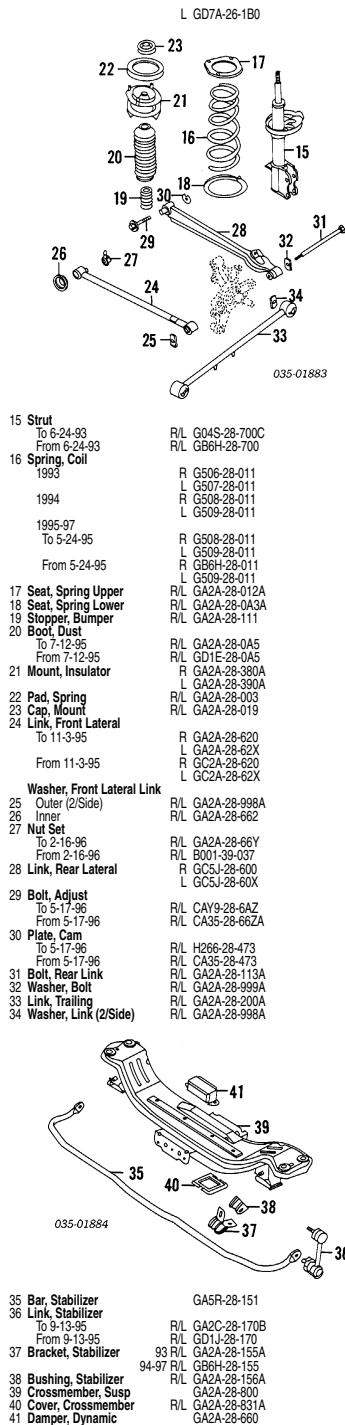

FUEL TANK

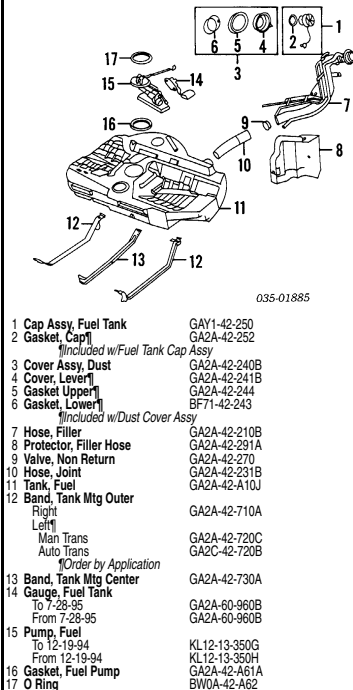


REAR BODY SHEET METAL

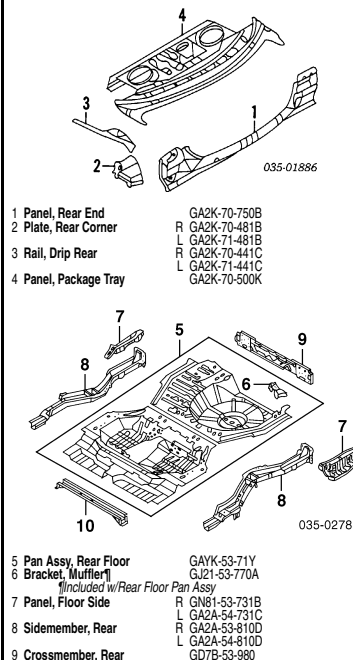


10 Crossmember, Front GAYA-53-920B

INTERIOR TRIM

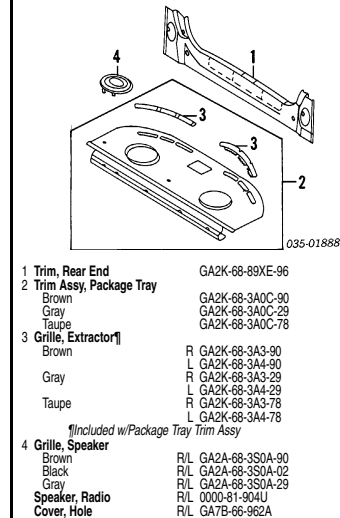

REAR LAMPS

COMBINATION LAMP ON QUARTER PANEL

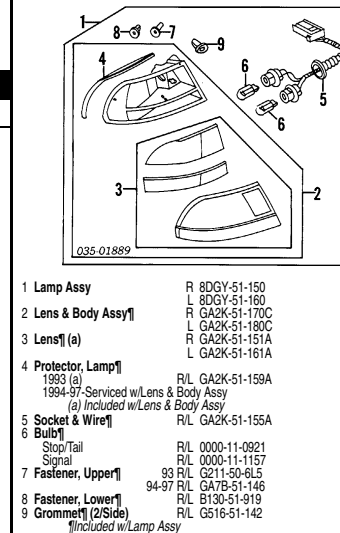

COMBINATION LAMP ON LUGGAGE LID

Illustration Located in Next Column

