
SYSTEM WIRING DIAGRAMS 2.0L, A/C Circuit (1 of 2)

1994 Mazda 626


For x

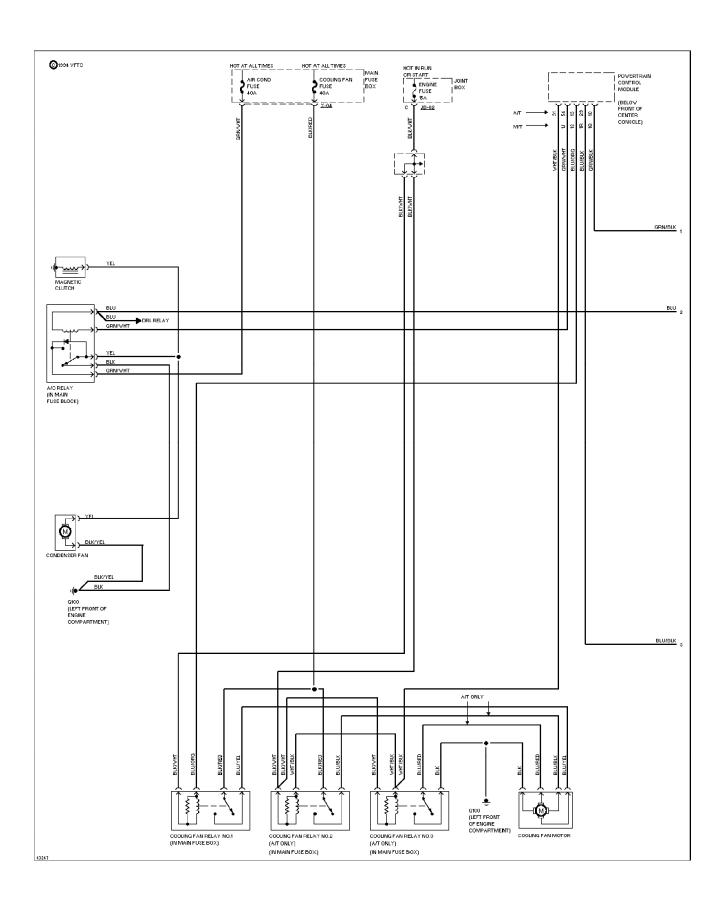

SYSTEM WIRING DIAGRAMS 2.0L, A/C Circuit (2 of 2) (p. 2)

1994 Mazda 626


For x

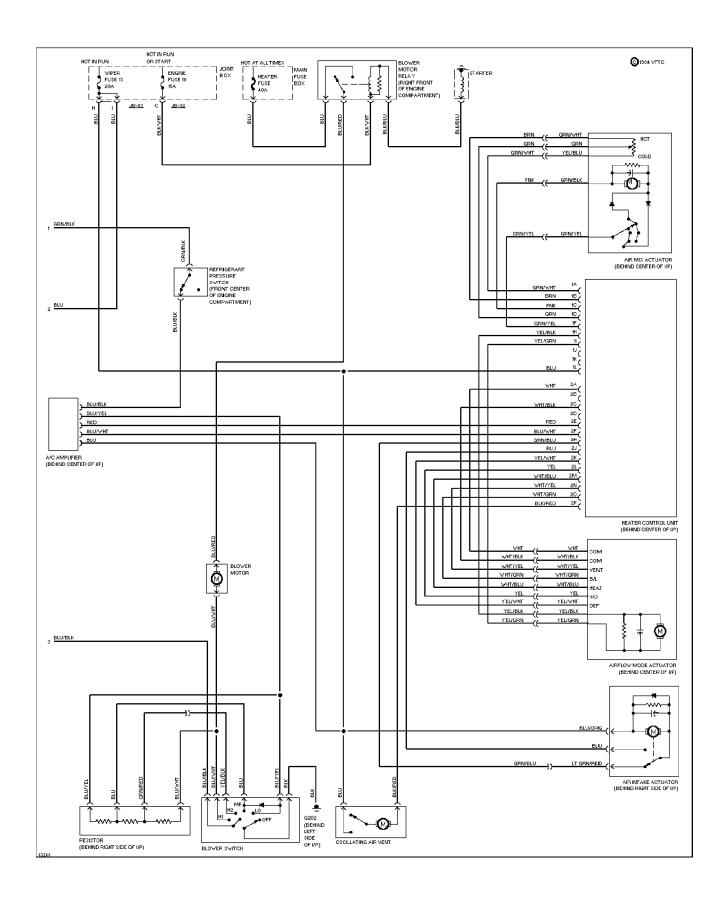

SYSTEM WIRING DIAGRAMS Heater Circuit (p. 3)

1994 Mazda 626


For x

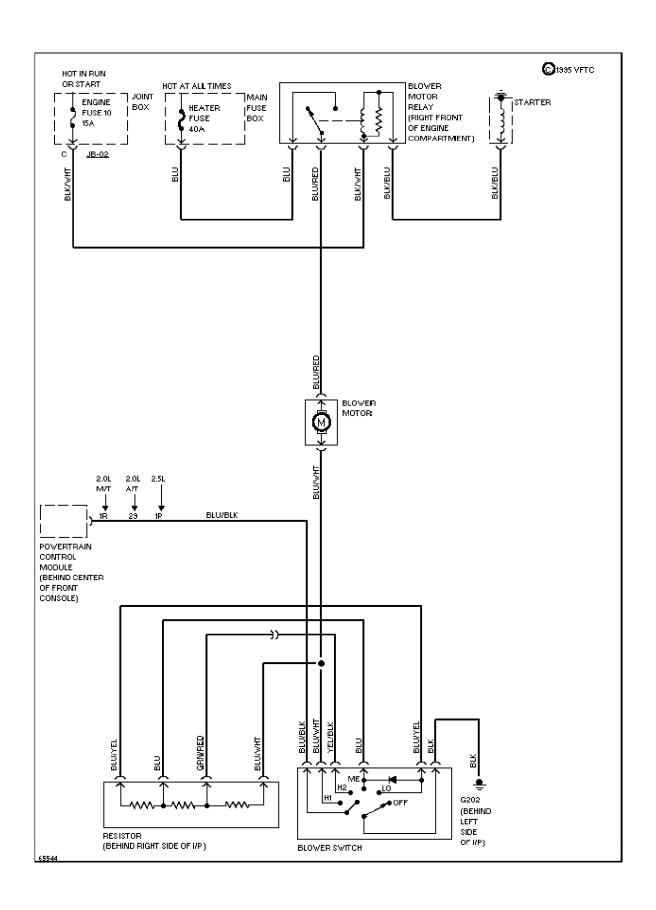

SYSTEM WIRING DIAGRAMS 2.5L, A/C Circuit (1 of 2) (p. 4)

1994 Mazda 626


For x

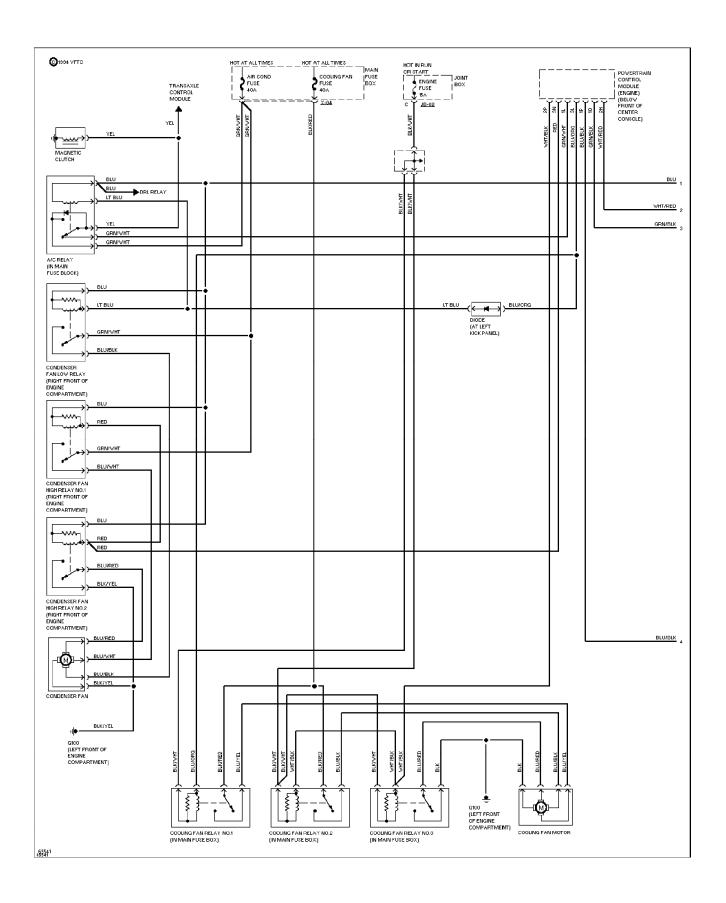

SYSTEM WIRING DIAGRAMS 2.5L, A/C Circuit (2 of 2) (p. 5)

1994 Mazda 626


For x

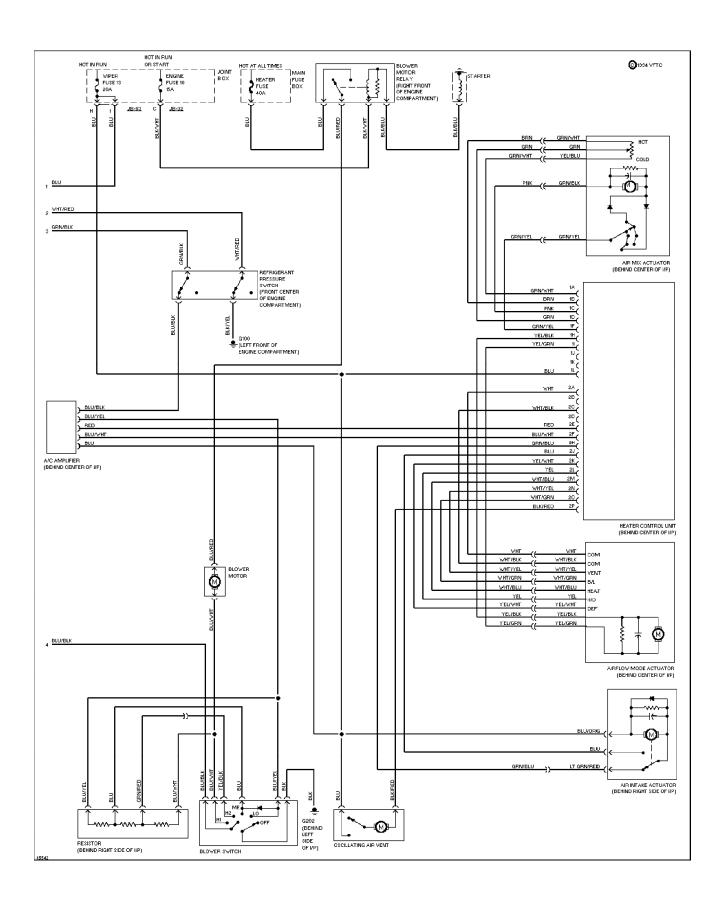

SYSTEM WIRING DIAGRAMS Heater Circuit (p. 6)

1994 Mazda 626


For x

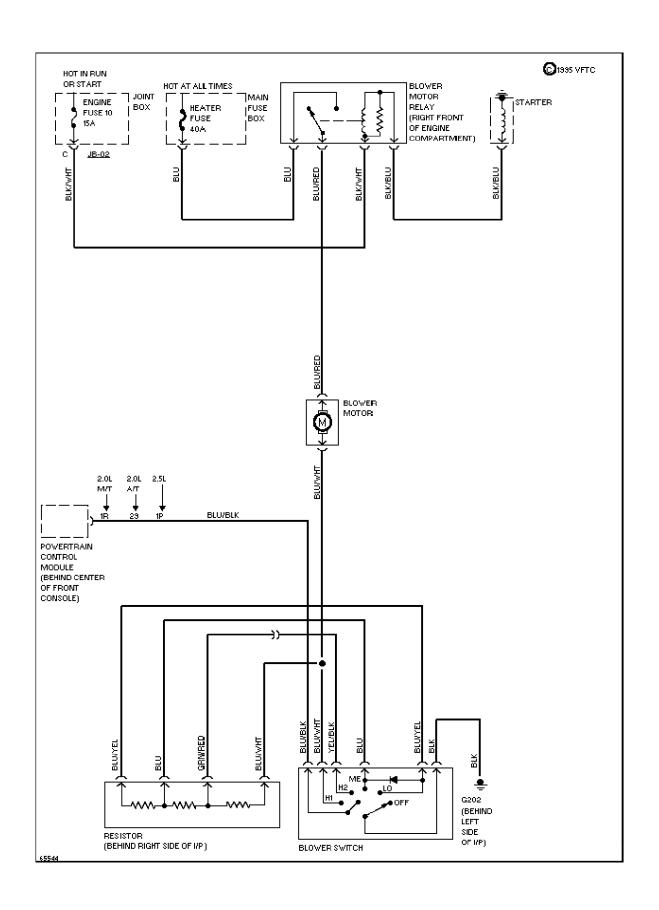

SYSTEM WIRING DIAGRAMS Anti-lock Brake Circuits (p. 7)

1994 Mazda 626


For x

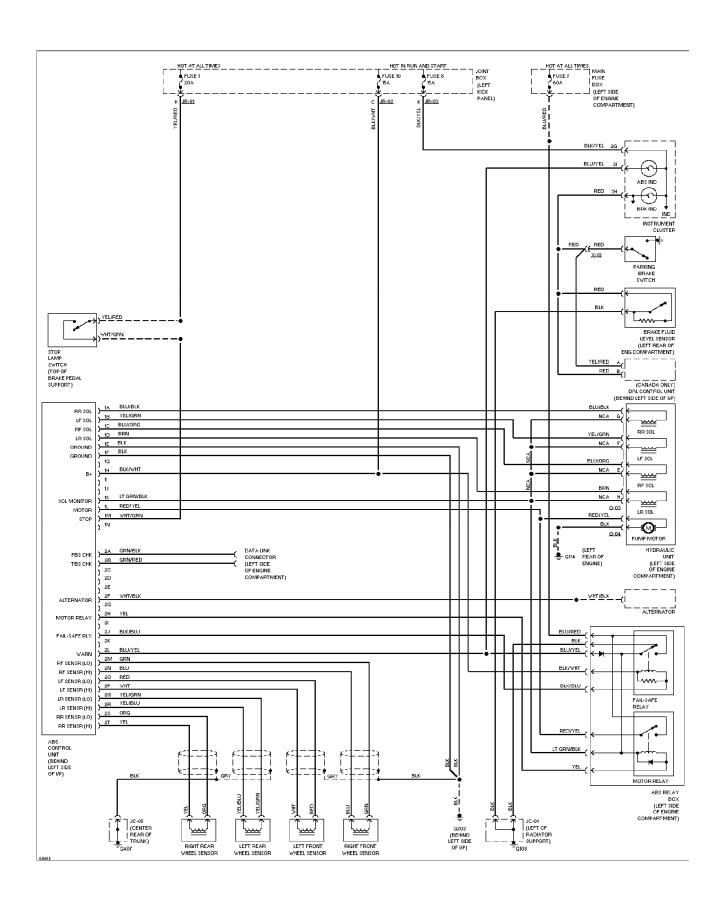

SYSTEM WIRING DIAGRAMS Anti-theft Circuit (p. 8)

1994 Mazda 626


For x

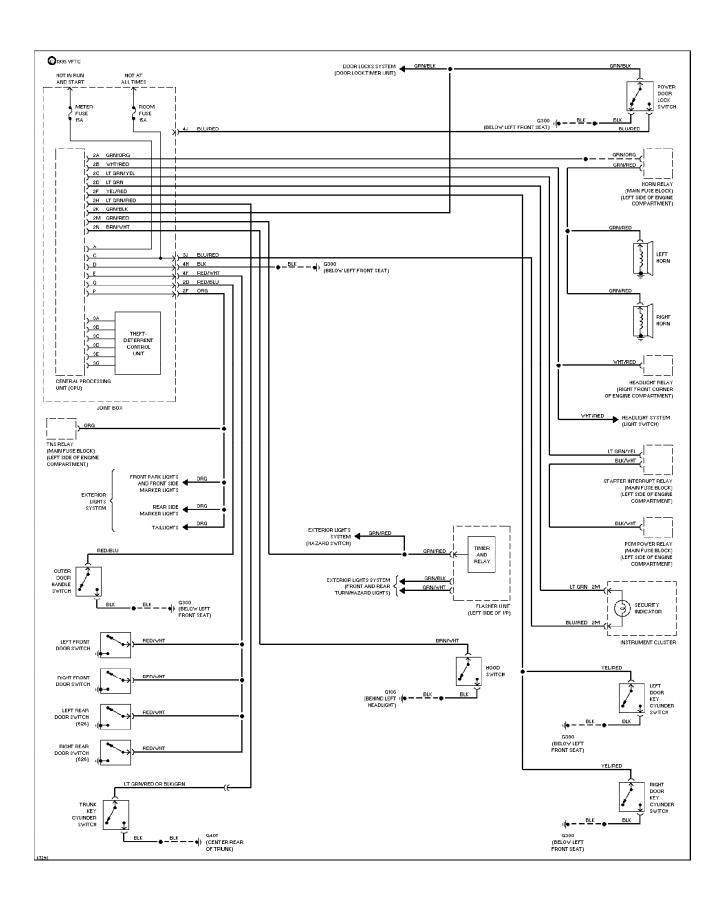

SYSTEM WIRING DIAGRAMSCentral Processing Unit Circuit (p. 9)

1994 Mazda 626


For x

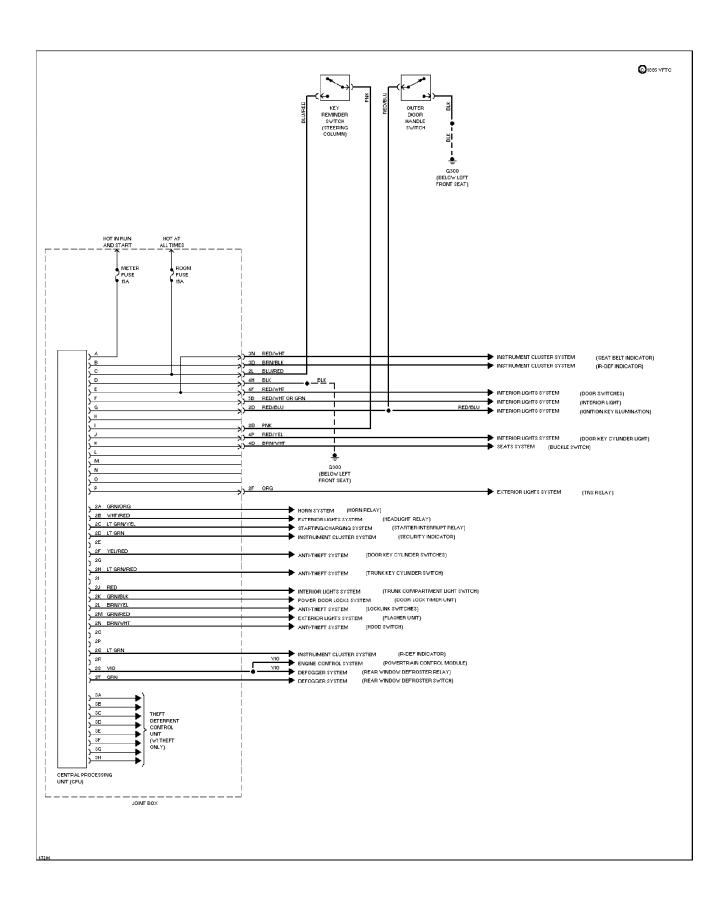

SYSTEM WIRING DIAGRAMS 2.0L, Data Link Connector Circuit, A/T (p. 10)

1994 Mazda 626


For x

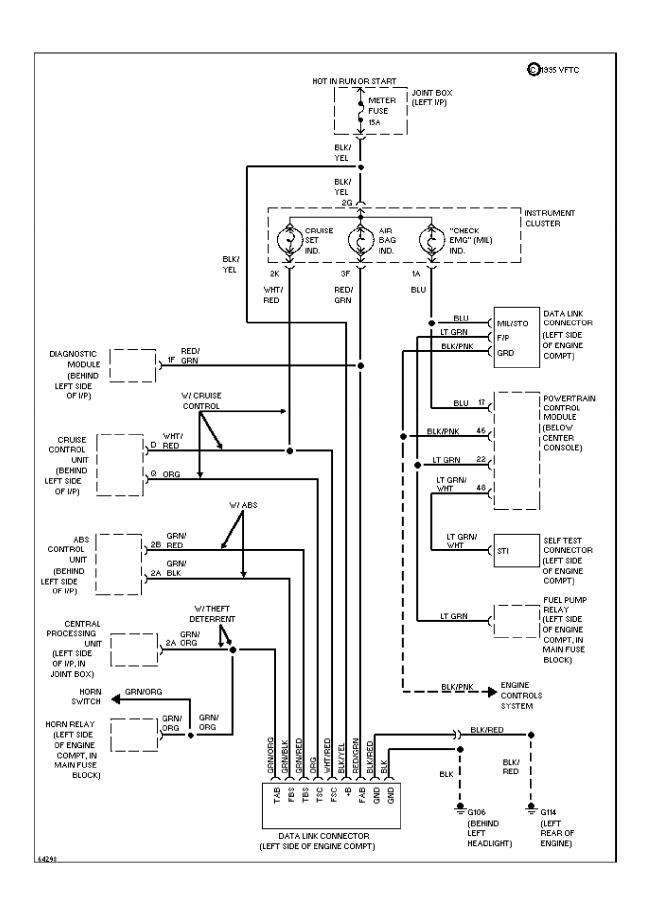

SYSTEM WIRING DIAGRAMS 2.0L, Data Link Connector Circuit, M/T (p. 11)

1994 Mazda 626


For x

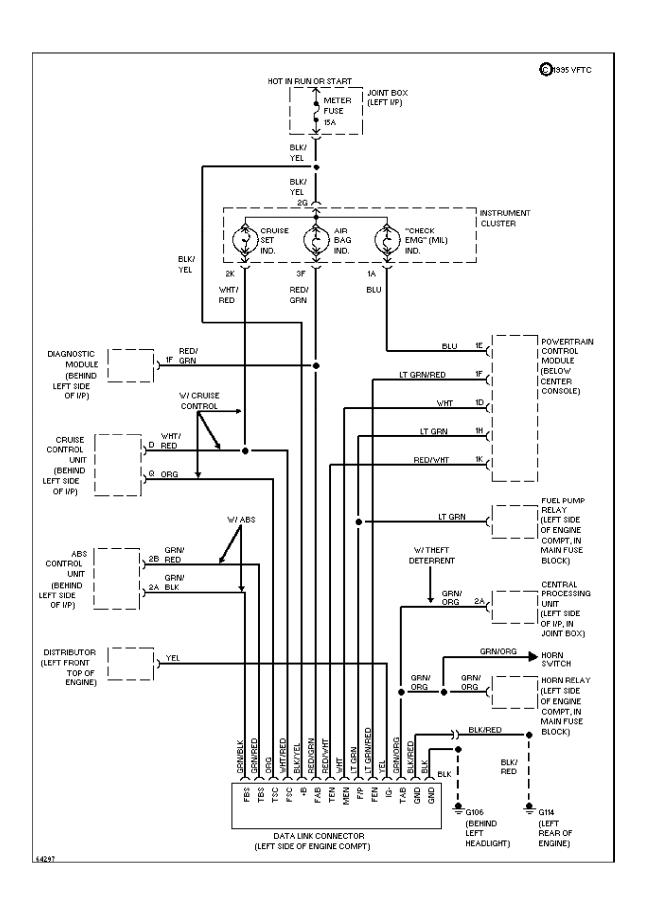

SYSTEM WIRING DIAGRAMS 2.5L, Data Link Connector Circuit (p. 12)

1994 Mazda 626


For x

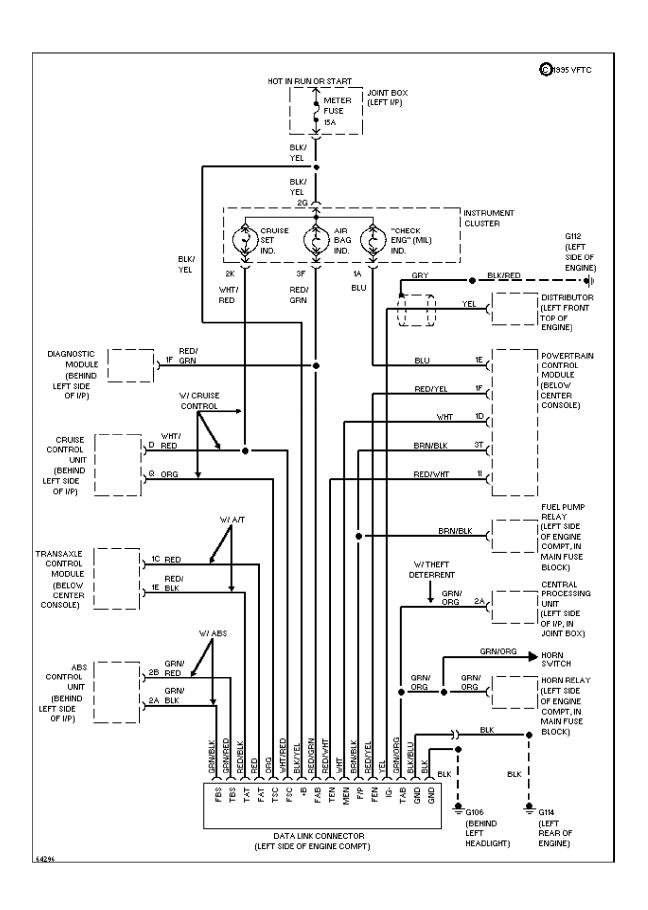

SYSTEM WIRING DIAGRAMS 2.0L, Cooling Fan Circuit, A/T (p. 13)

1994 Mazda 626


For x

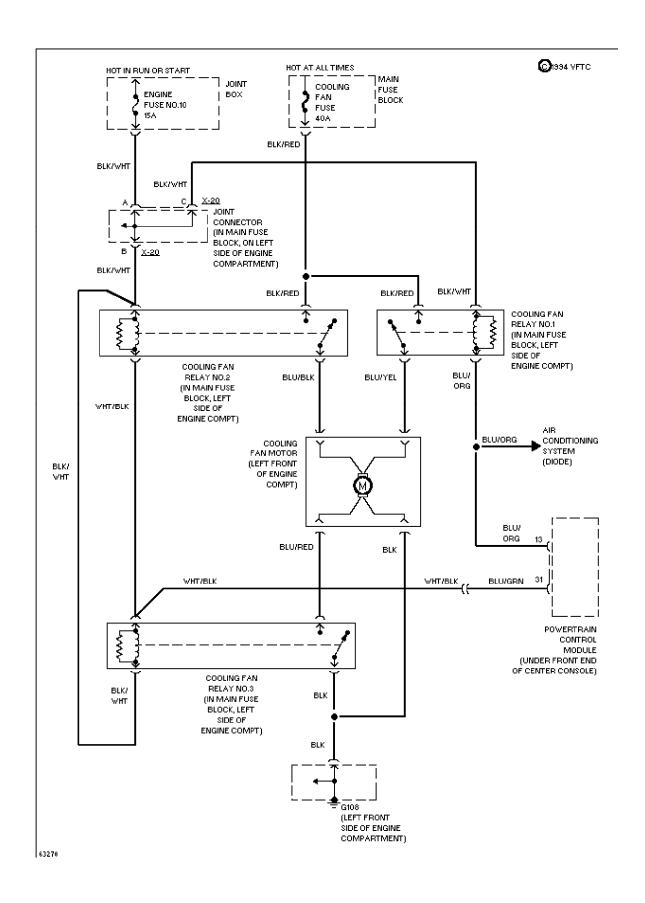

SYSTEM WIRING DIAGRAMS 2.0L, Cooling Fan Circuit, M/T (p. 14)

1994 Mazda 626


For x

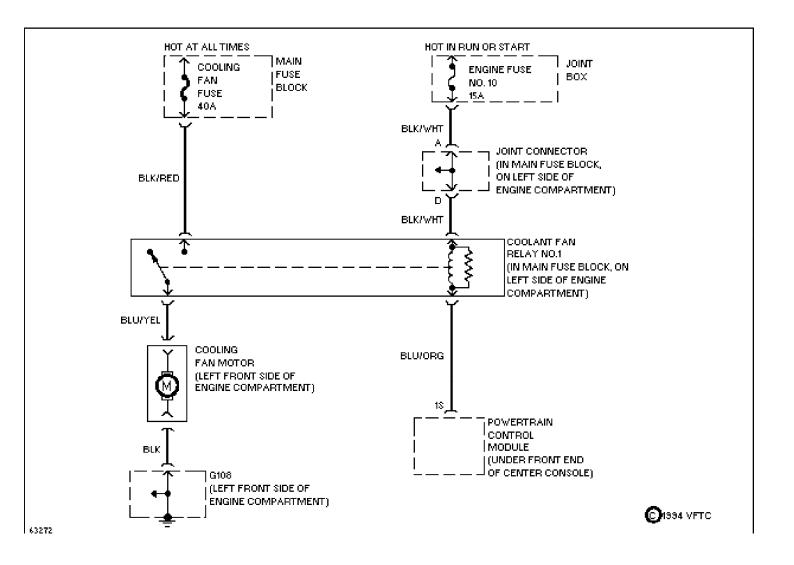

SYSTEM WIRING DIAGRAMS 2.5L, Cooling Fan Circuit (p. 15)

1994 Mazda 626


For x

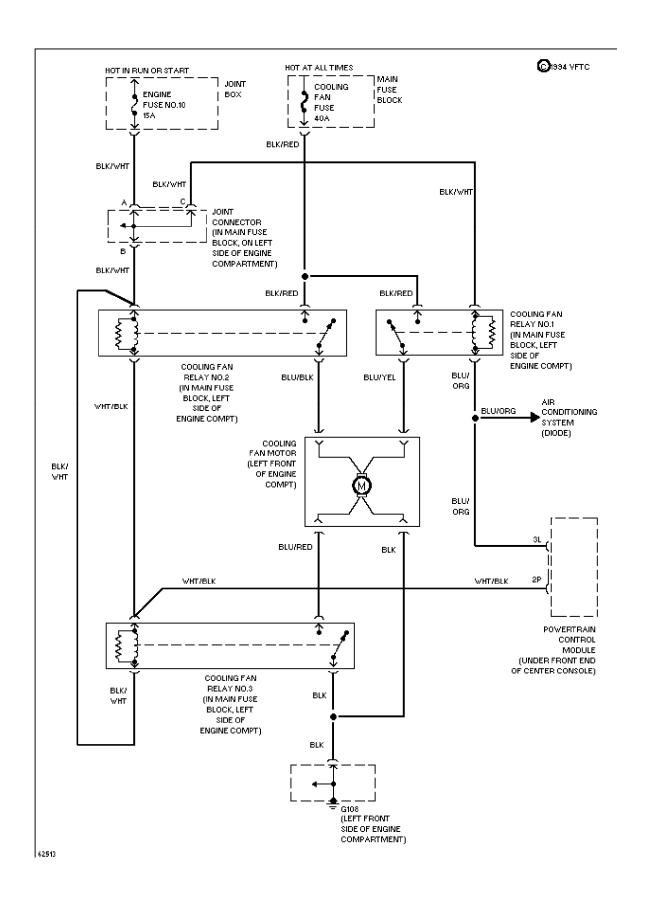

SYSTEM WIRING DIAGRAMS Cruise Control Circuit (p. 16)

1994 Mazda 626


For x

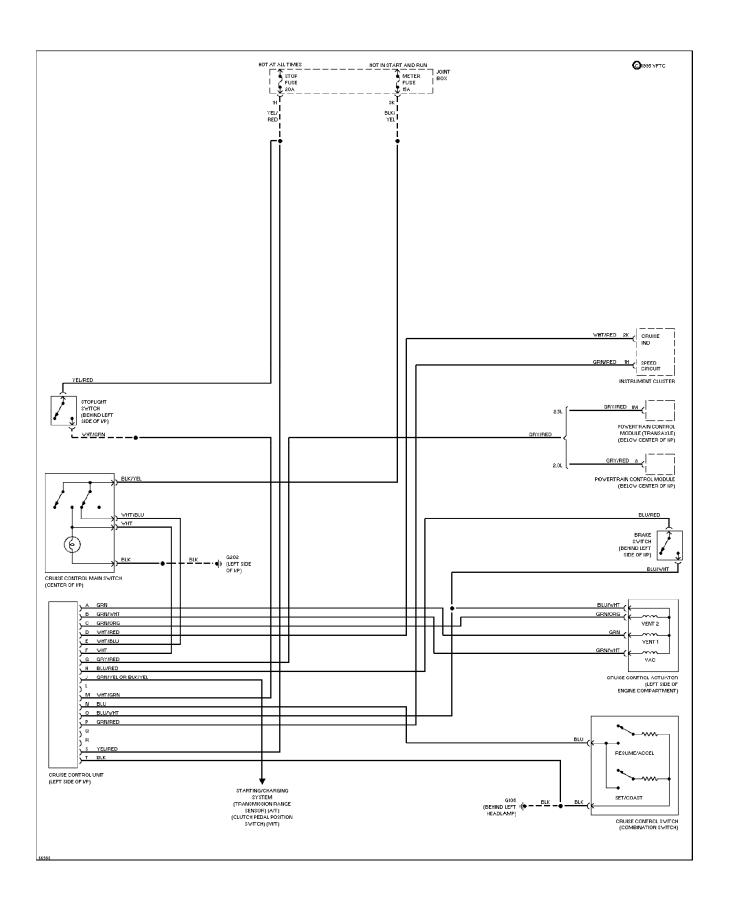

SYSTEM WIRING DIAGRAMS Defogger Circuit (p. 17)

1994 Mazda 626


For x

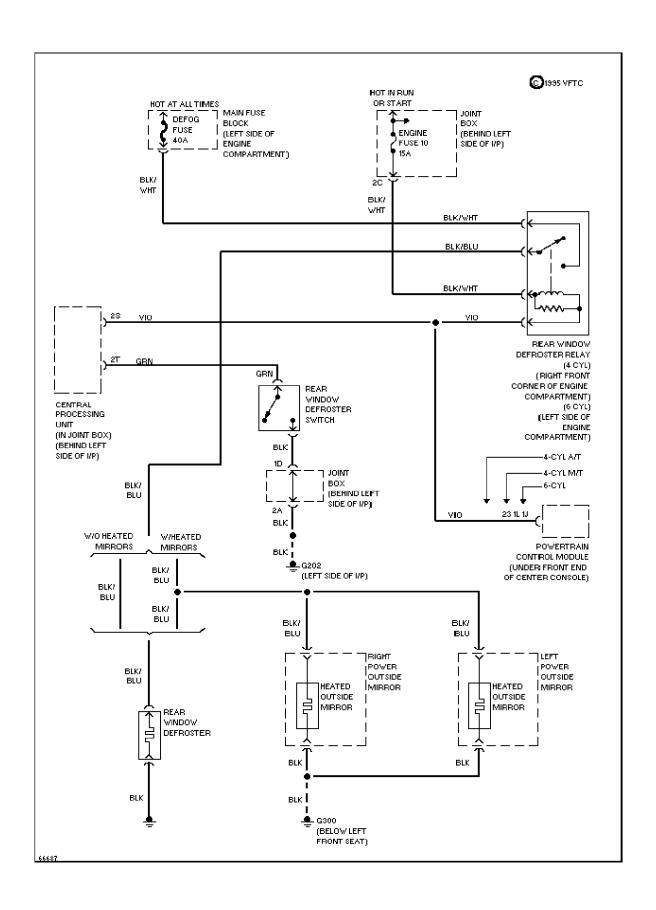

SYSTEM WIRING DIAGRAMS 2.0L, Engine Performance Circuits, A/T (1 of 2) (p. 18)

1994 Mazda 626


For x

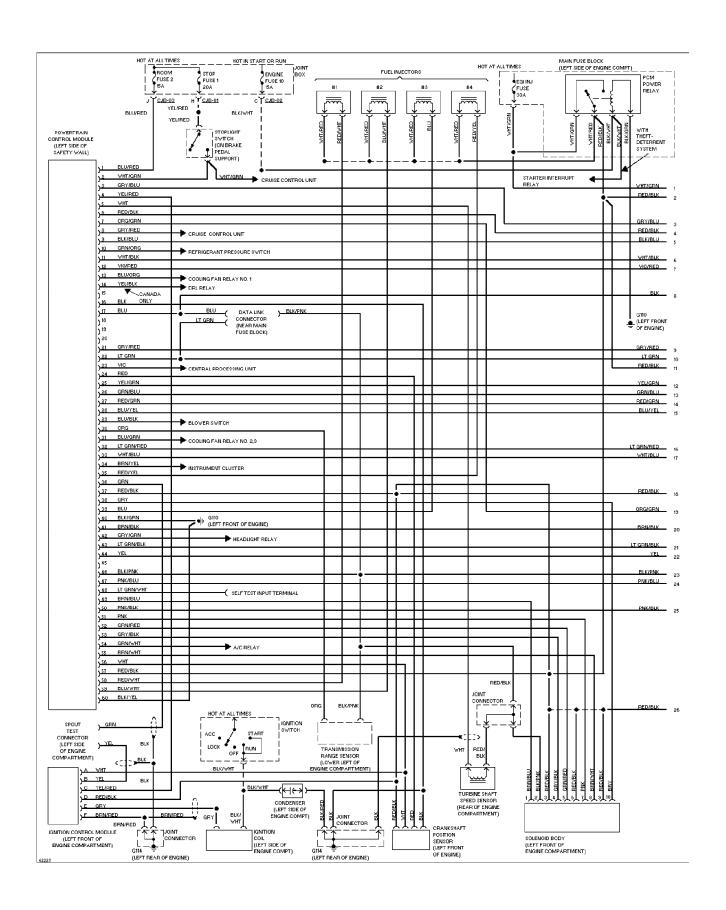

SYSTEM WIRING DIAGRAMS 2.0L, Engine Performance Circuits, A/T (2 of 2) (p. 19)

1994 Mazda 626


For x

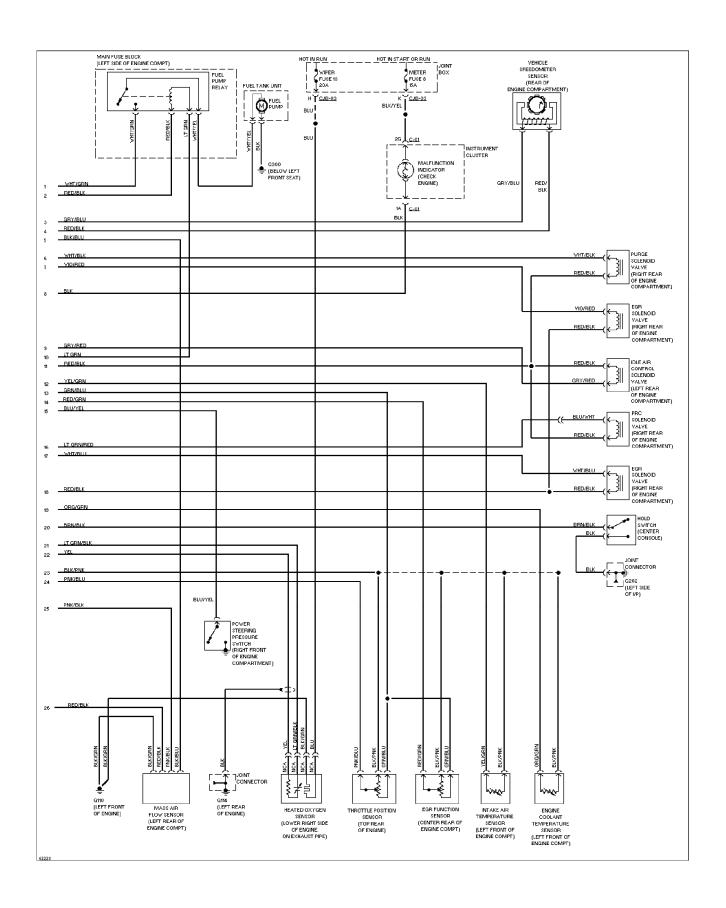

SYSTEM WIRING DIAGRAMS 2.0L, Engine Performance Circuits, M/T (1 of 2) (p. 20)

1994 Mazda 626


For x

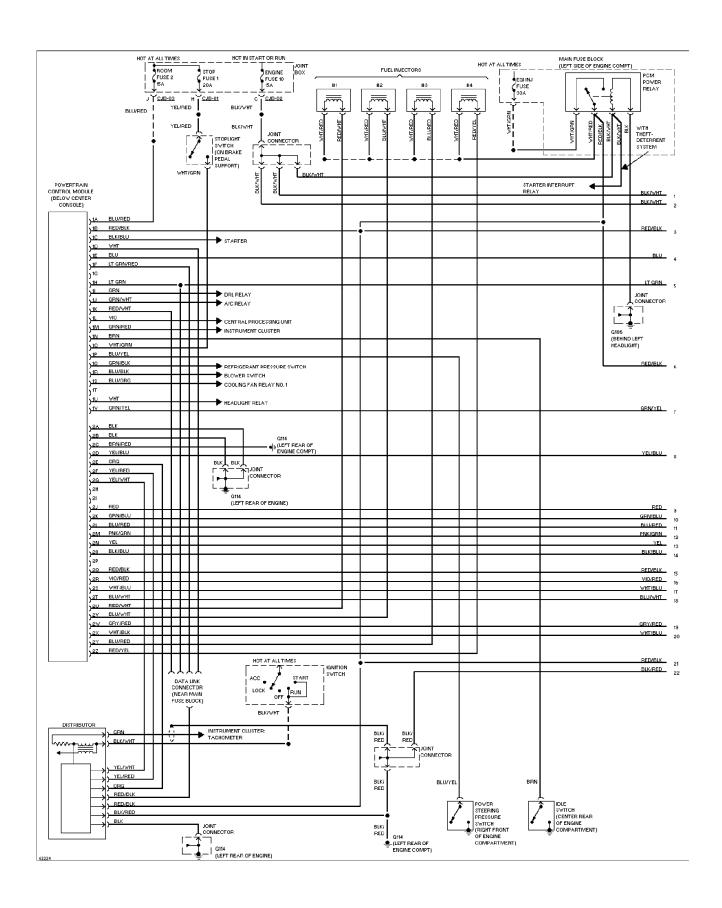

SYSTEM WIRING DIAGRAMS 2.0L, Engine Performance Circuits, M/T (2 of 2) (p. 21)

1994 Mazda 626


For x

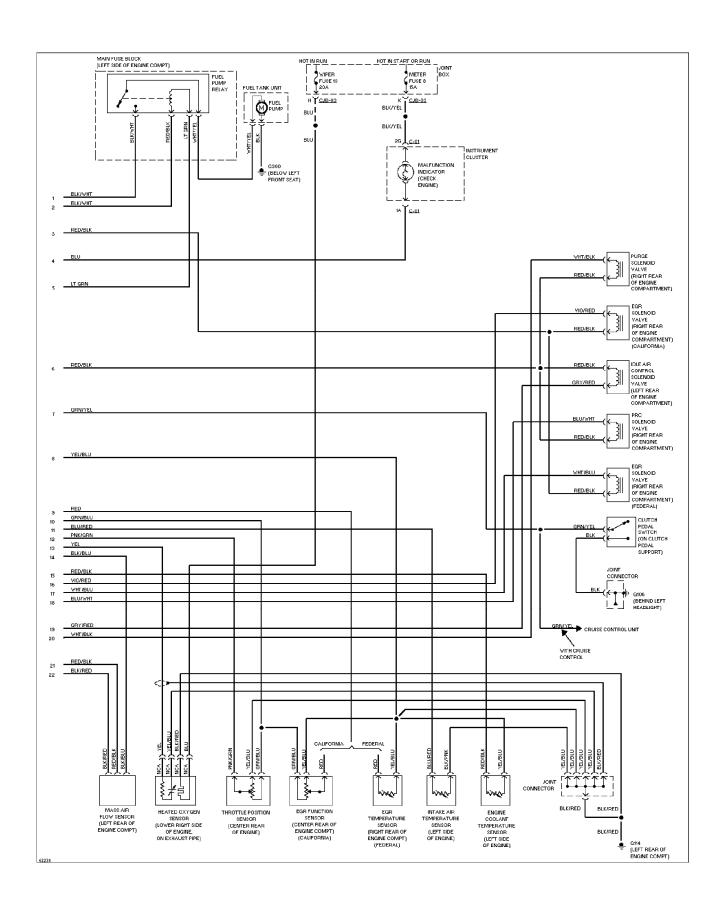

SYSTEM WIRING DIAGRAMS 2.5L, Engine Performance Circuits (1 of 2) (p. 22)

1994 Mazda 626


For x

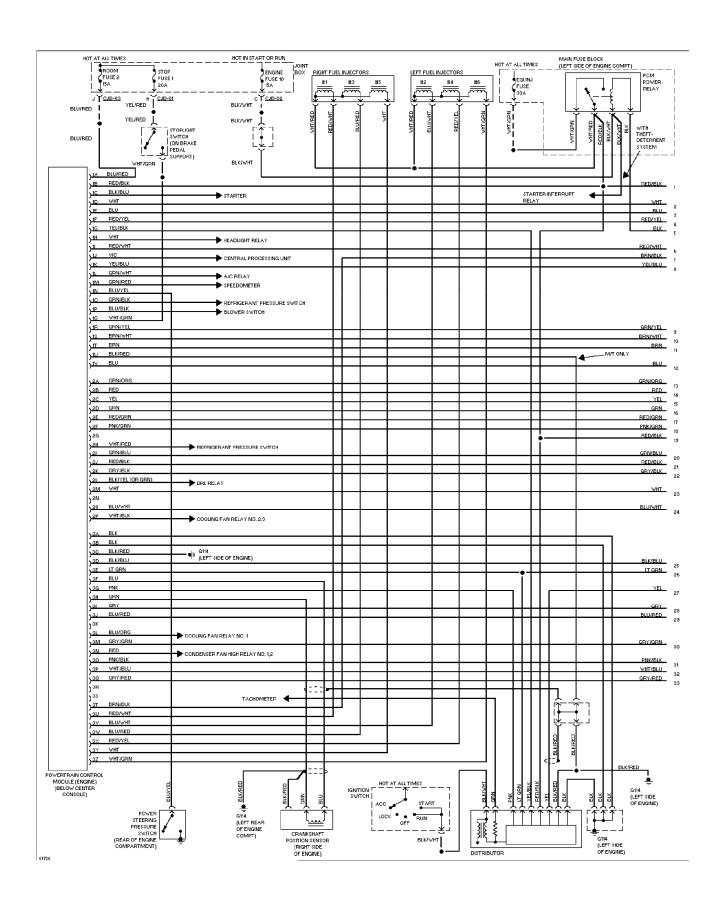

SYSTEM WIRING DIAGRAMS 2.5L, Engine Performance Circuits (2 of 2) (p. 23)

1994 Mazda 626


For x

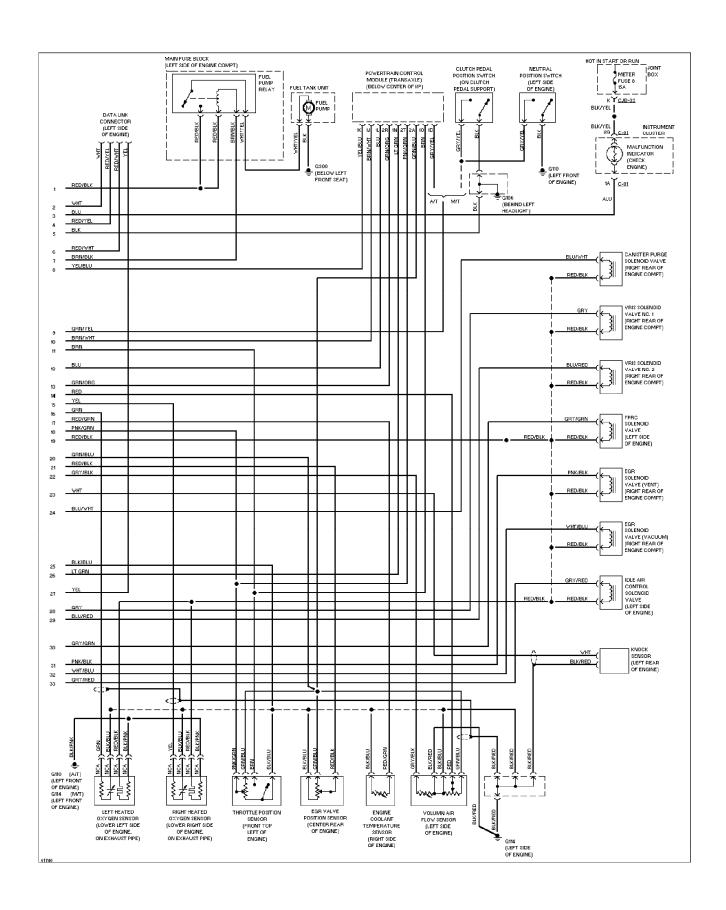

SYSTEM WIRING DIAGRAMS Exterior Light Circuit (p. 24)

1994 Mazda 626


For x

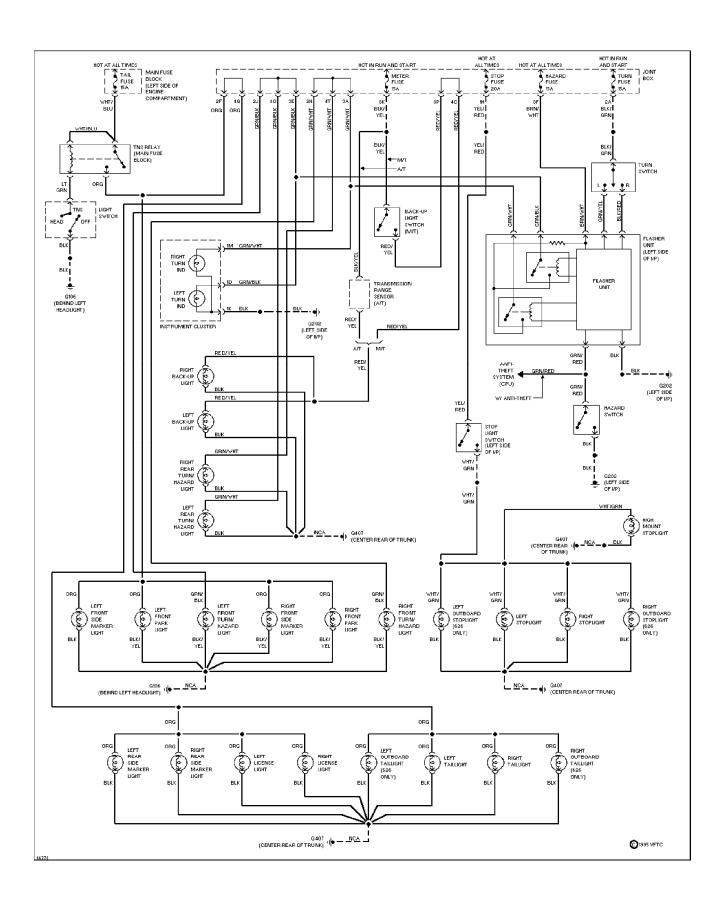

SYSTEM WIRING DIAGRAMS Ground Distribution Circuit (1 of 4) (p. 25)

1994 Mazda 626


For x

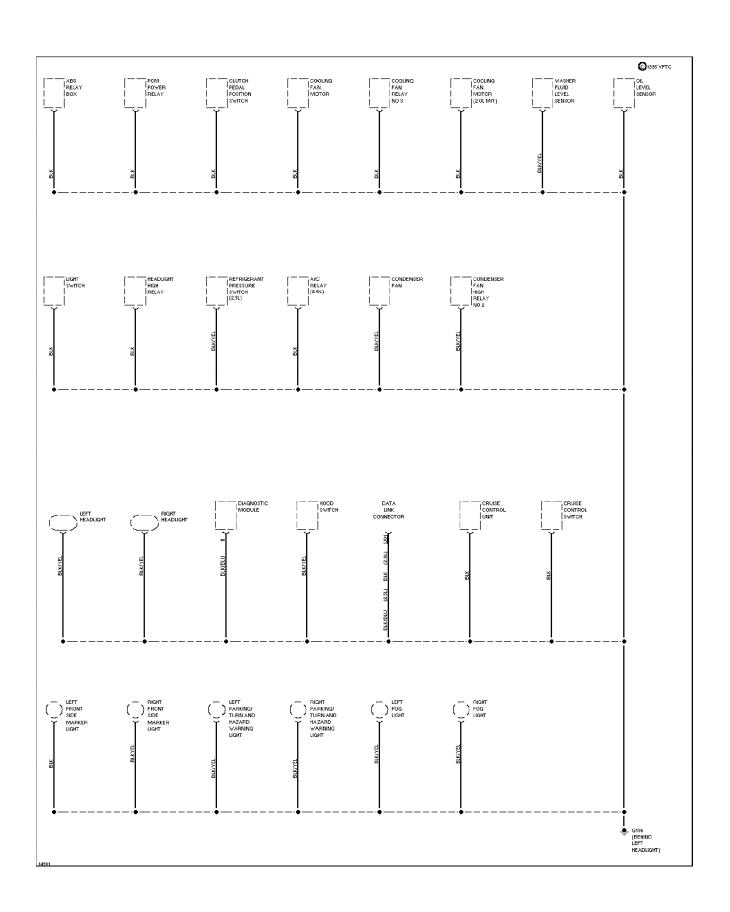

SYSTEM WIRING DIAGRAMS Ground Distribution Circuit (2 of 4) (p. 26)

1994 Mazda 626


For x

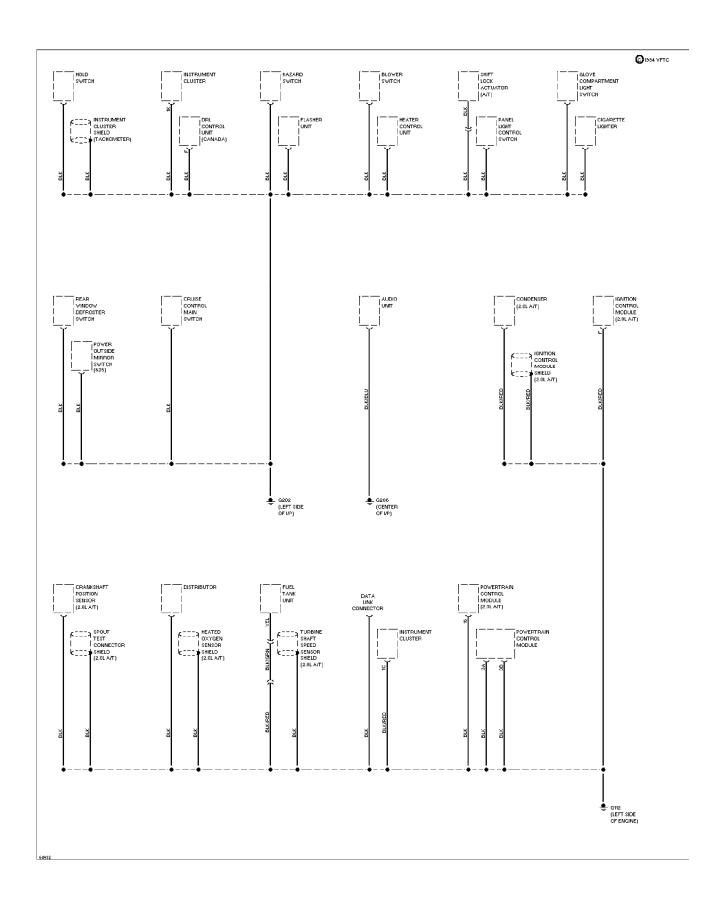

SYSTEM WIRING DIAGRAMS Ground Distribution Circuit (3 of 4) (p. 27)

1994 Mazda 626


For x

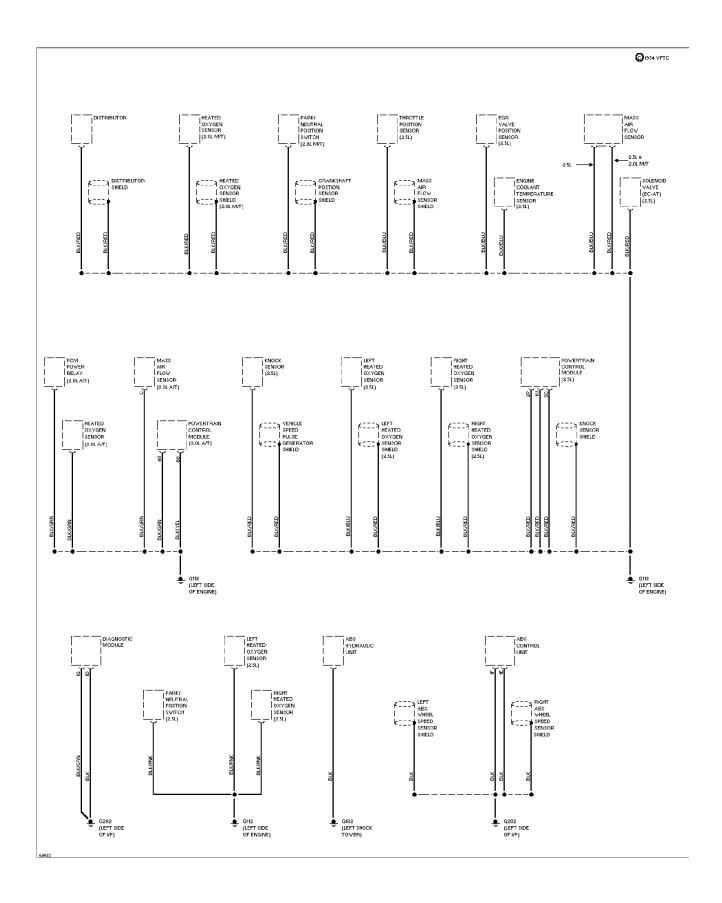

SYSTEM WIRING DIAGRAMS Ground Distribution Circuit (4 of 4) (p. 28)

1994 Mazda 626


For x

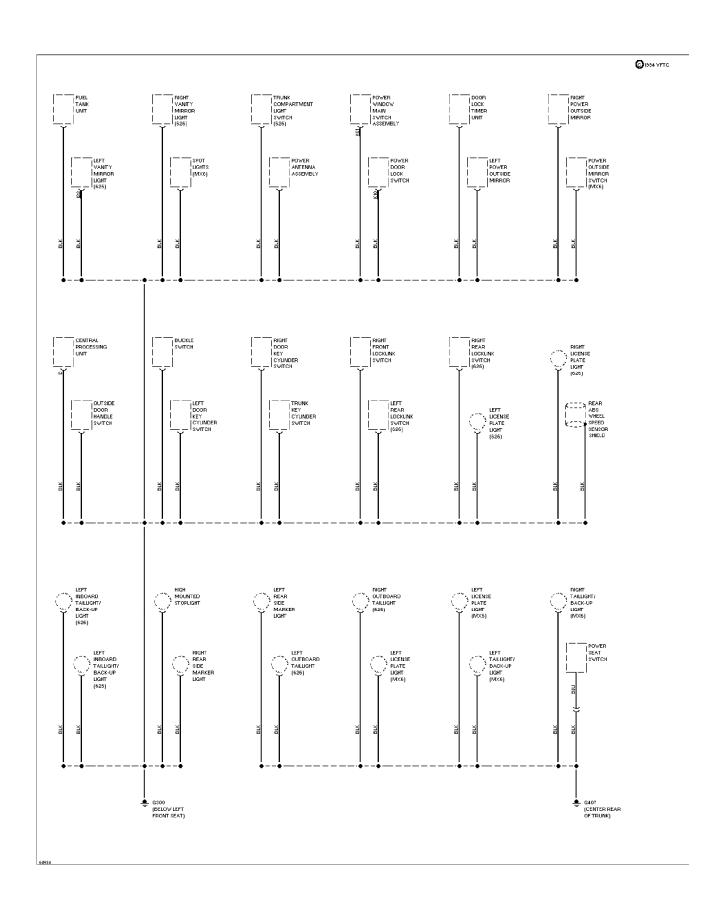

SYSTEM WIRING DIAGRAMS Headlight Circuit, W/ DRL (p. 29)

1994 Mazda 626


For x

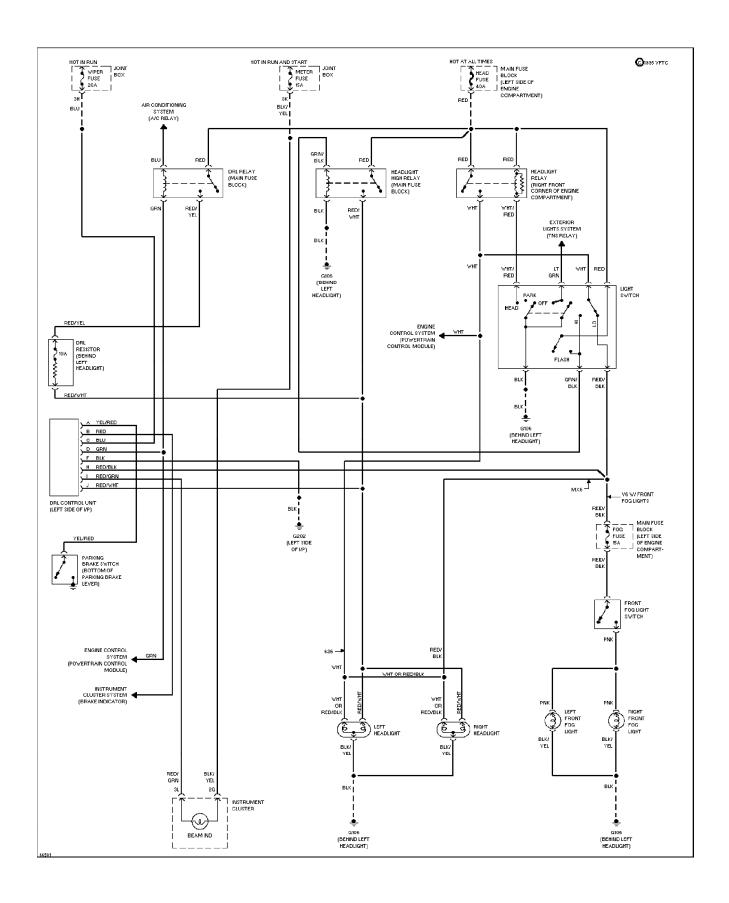

SYSTEM WIRING DIAGRAMS Headlight Circuit, W/O DRL (p. 30)

1994 Mazda 626


For x

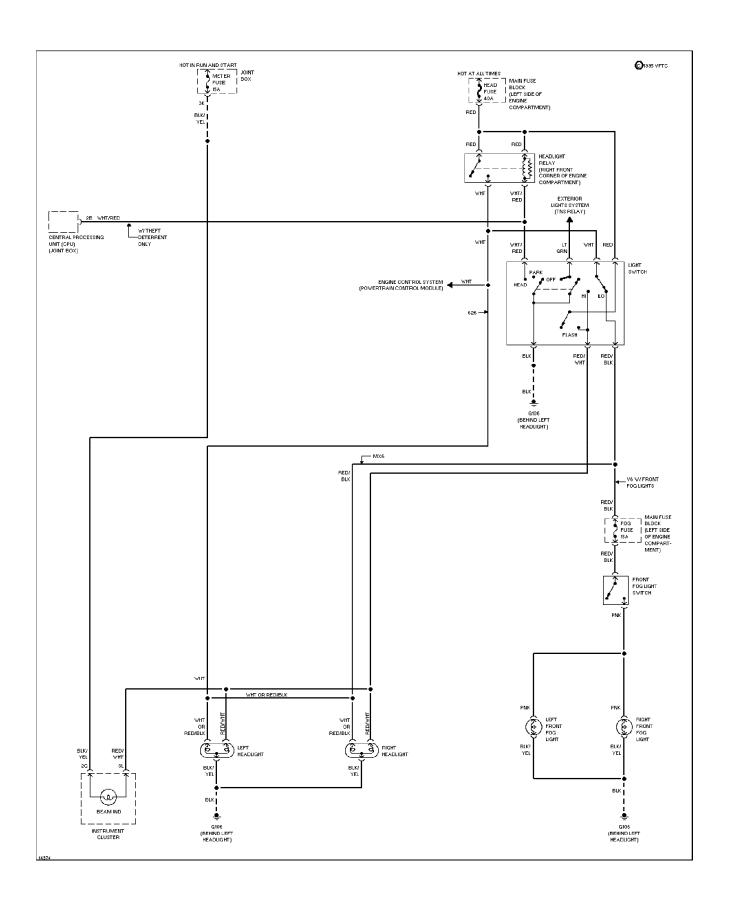

SYSTEM WIRING DIAGRAMS Horn Circuit (p. 31)

1994 Mazda 626


For x

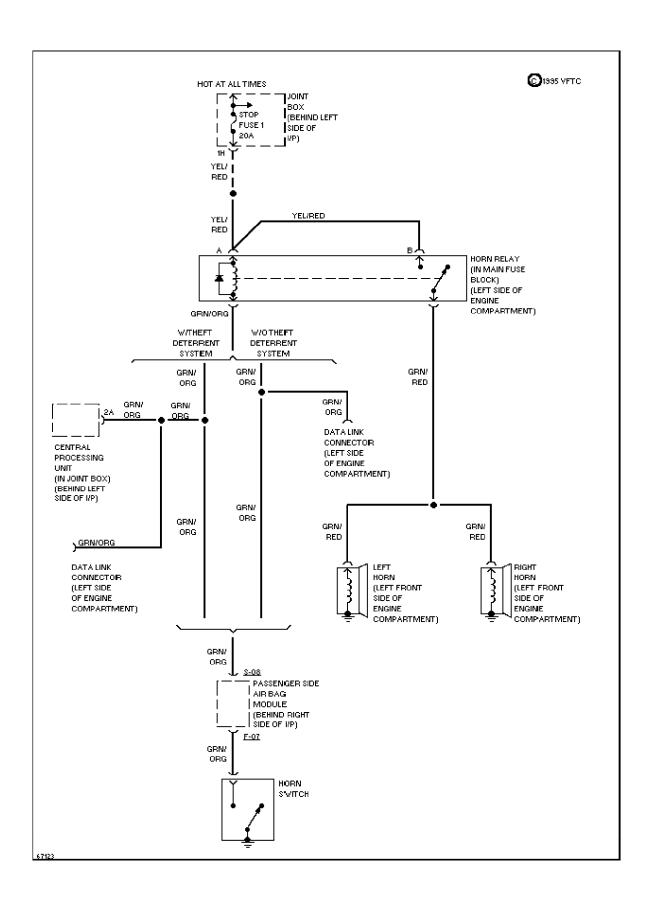

SYSTEM WIRING DIAGRAMS Instrument Cluster Circuit (1 of 2) (p. 32)

1994 Mazda 626


For x

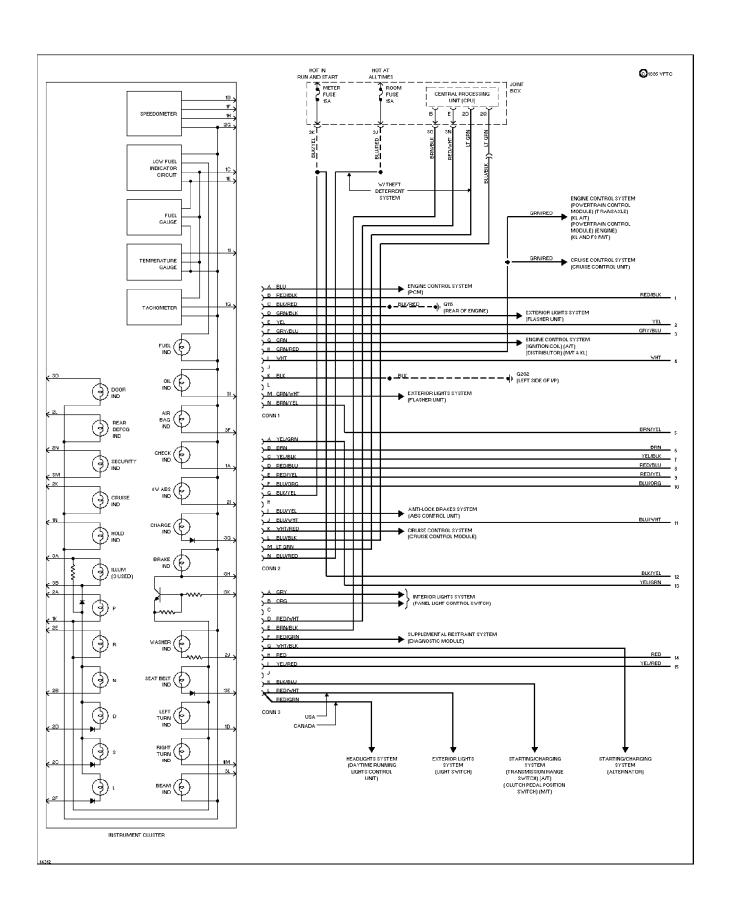

SYSTEM WIRING DIAGRAMS Instrument Cluster Circuit (2 of 2) (p. 33)

1994 Mazda 626


For x

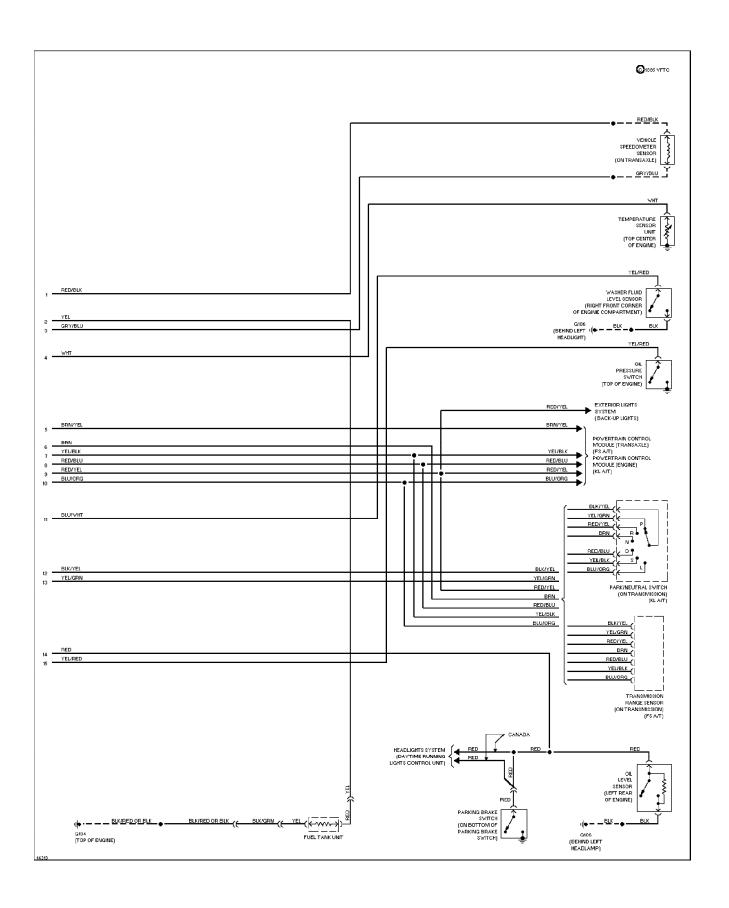

SYSTEM WIRING DIAGRAMSCourtesy Lamp Circuit (p. 34)

1994 Mazda 626


For x

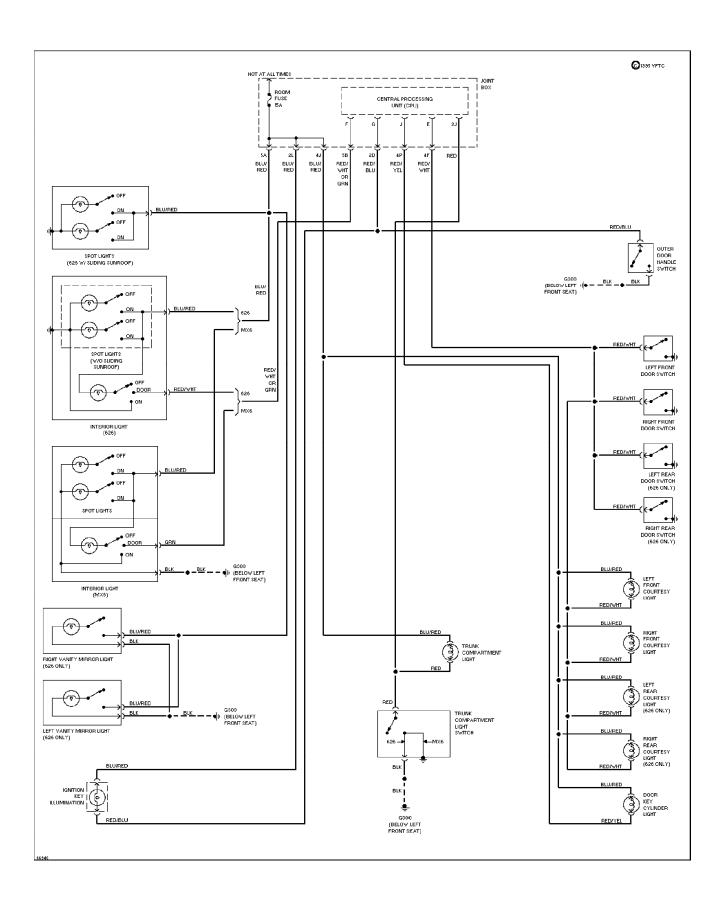

SYSTEM WIRING DIAGRAMS Instrument Illumination Circuit (p. 35)

1994 Mazda 626


For x

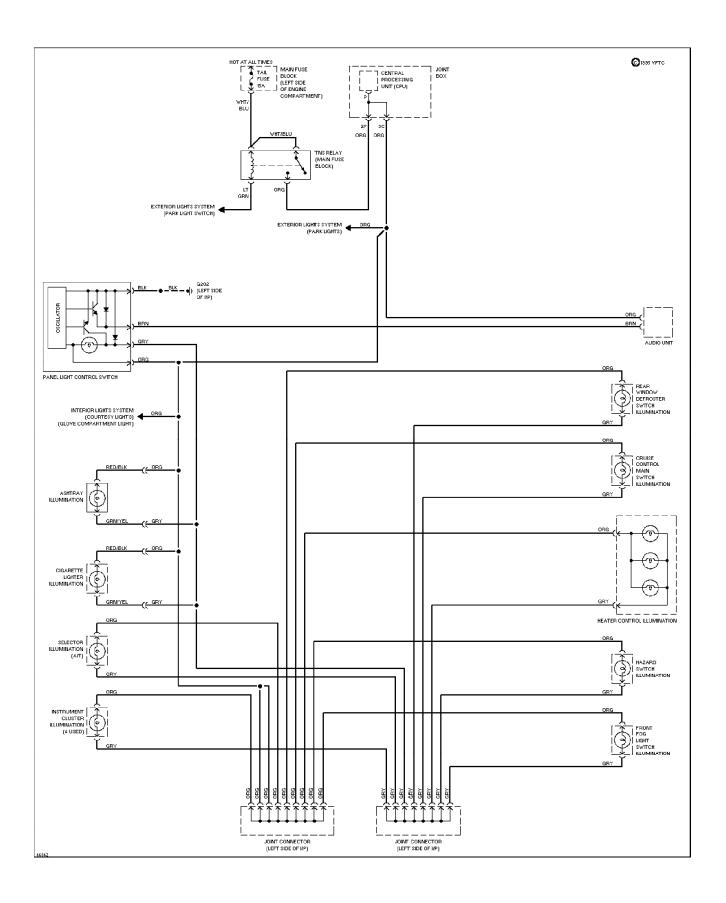

SYSTEM WIRING DIAGRAMS Power Antenna Circuit (p. 36)

1994 Mazda 626


For x

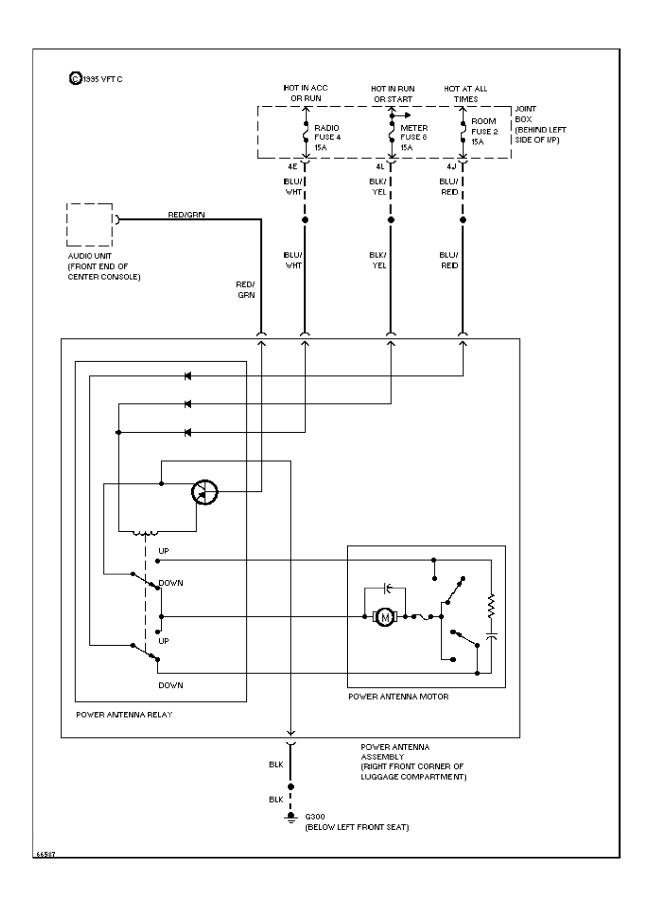

SYSTEM WIRING DIAGRAMS Power Distribution Circuit (1 of 4) (p. 37)

1994 Mazda 626


For x

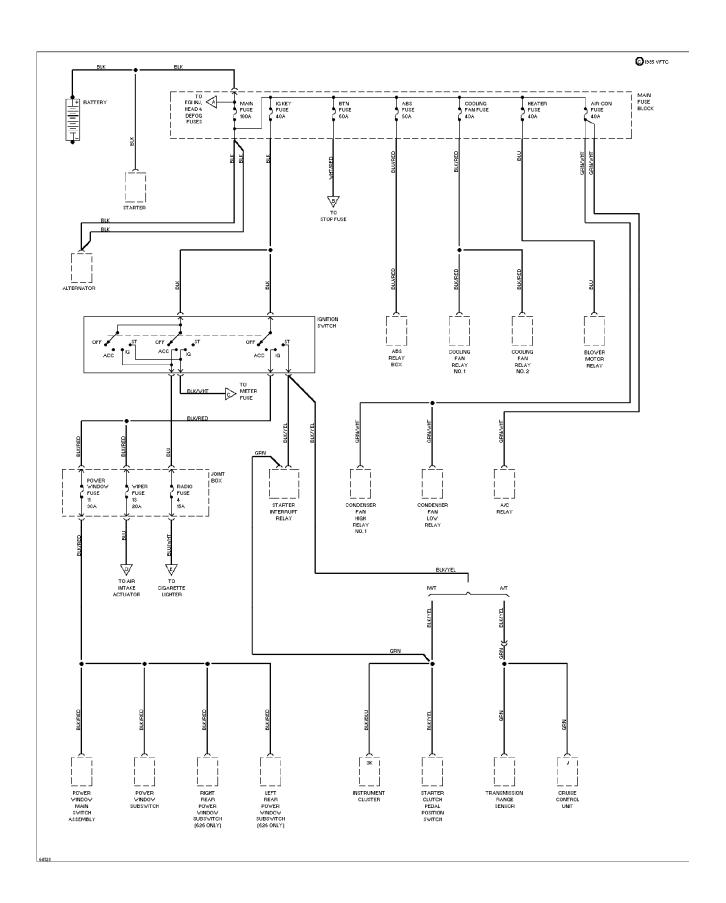

SYSTEM WIRING DIAGRAMS Power Distribution Circuit (2 of 4) (p. 38)


1994 Mazda 626

For x

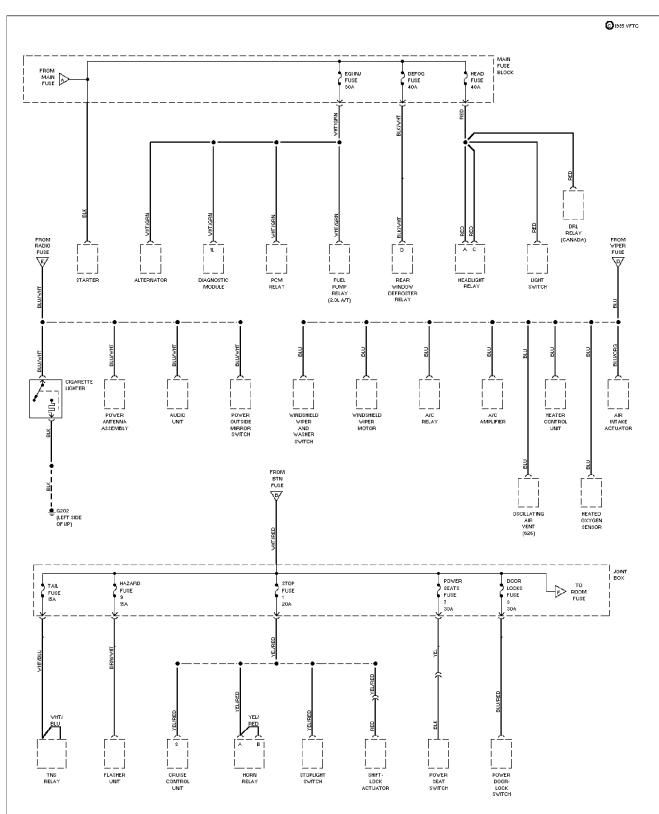

SYSTEM WIRING DIAGRAMS Power Distribution Circuit (3 of 4) (p. 39) 1994 Mazda 626


For x

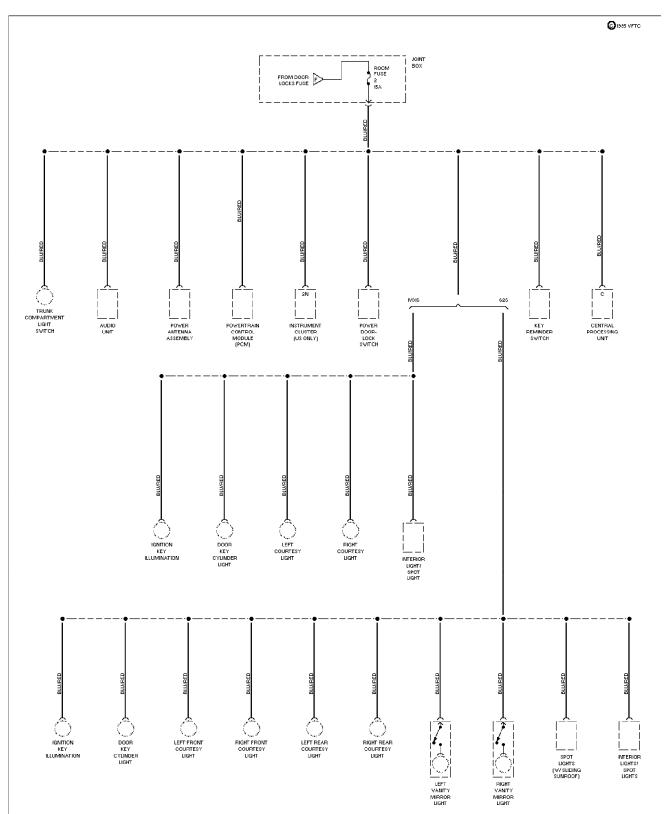

SYSTEM WIRING DIAGRAMS Power Distribution Circuit (4 of 4) (p. 40)

1994 Mazda 626


For x

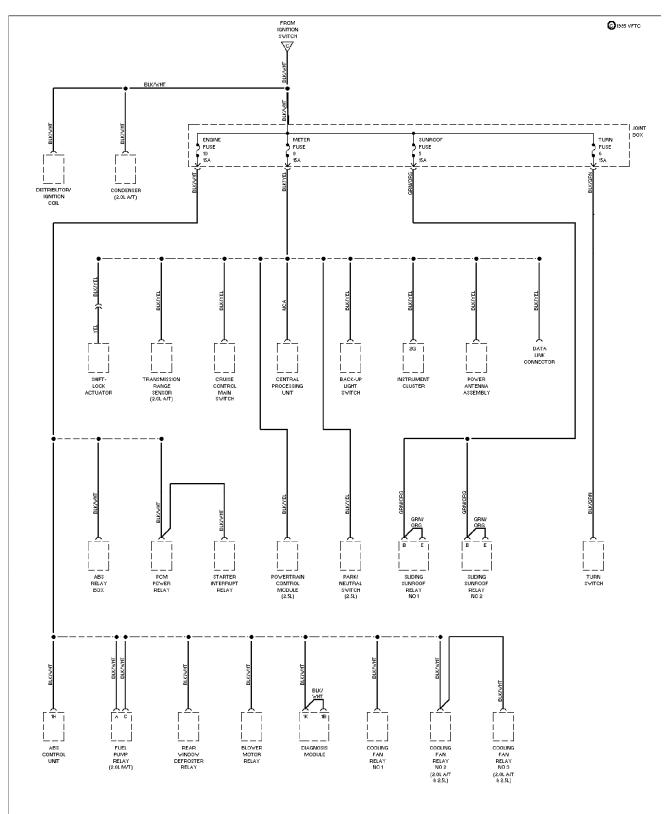

SYSTEM WIRING DIAGRAMS Power Door Lock Circuit (p. 41)

1994 Mazda 626


For x

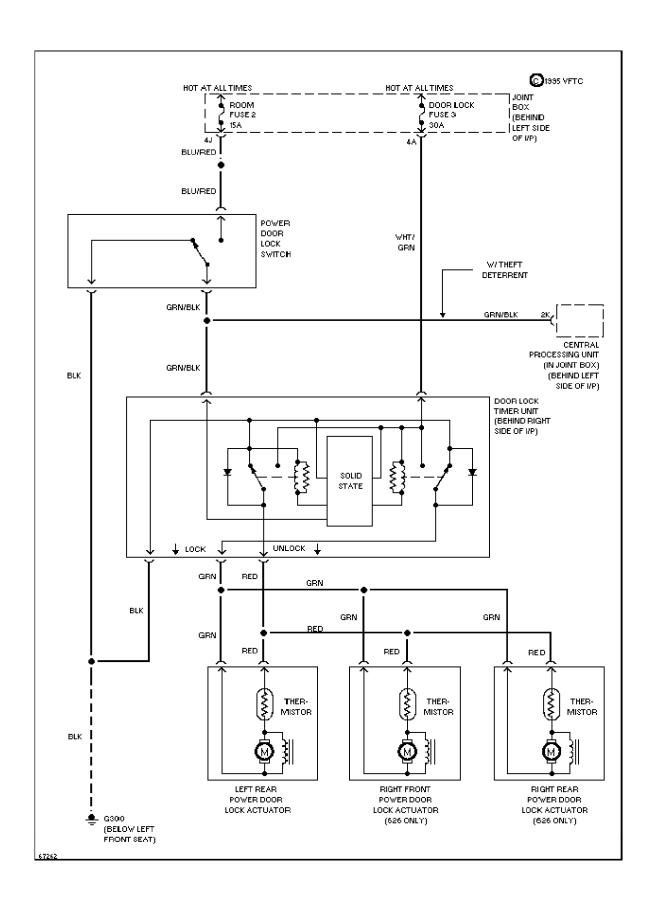

SYSTEM WIRING DIAGRAMS Power Mirror Circuit (p. 42)

1994 Mazda 626


For x

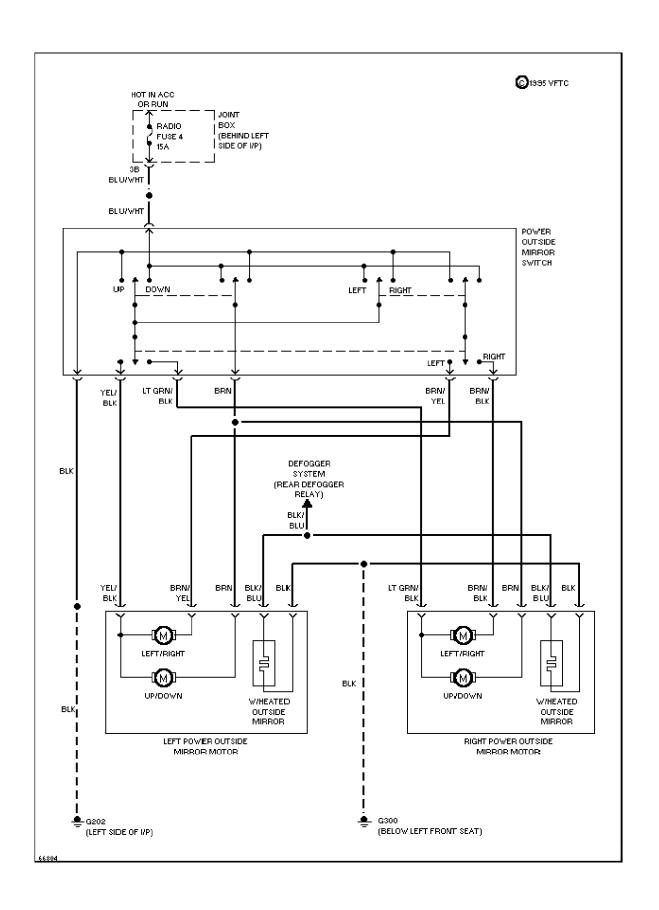

SYSTEM WIRING DIAGRAMS Power Seat Circuits (p. 43)


1994 Mazda 626

For x

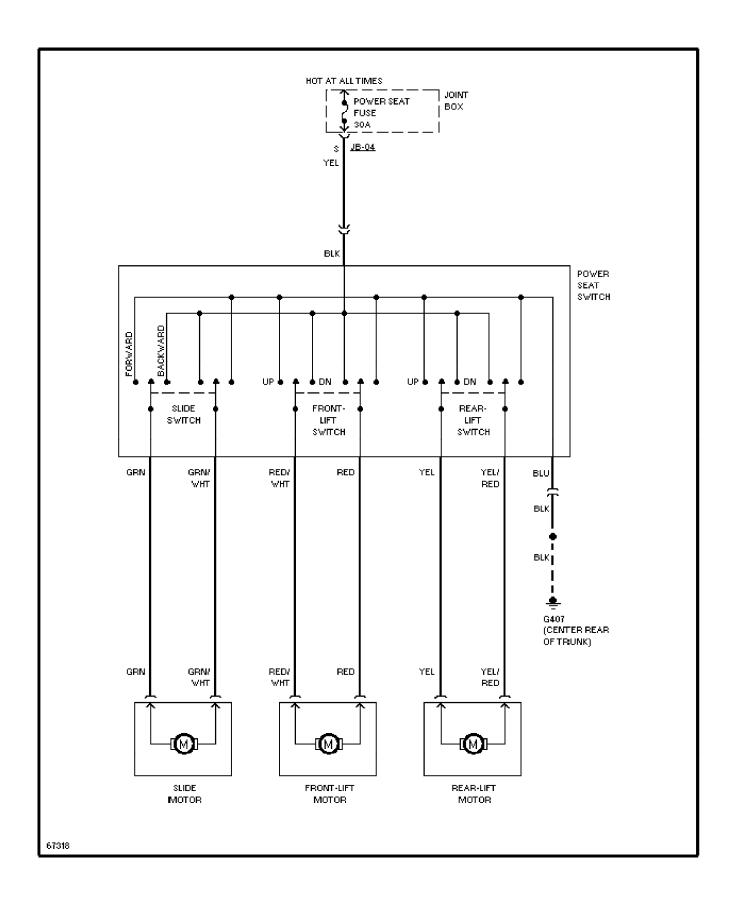

SYSTEM WIRING DIAGRAMS Power Top/Sunroof Circuits (p. 44)


1994 Mazda 626 For x

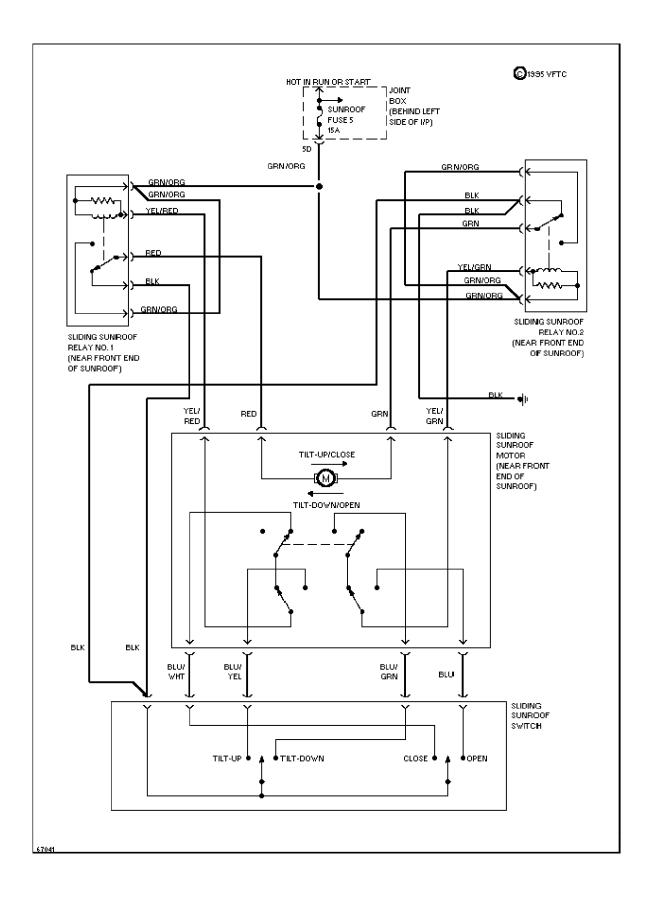

SYSTEM WIRING DIAGRAMS Power Window Circuit (p. 45)

1994 Mazda 626


For x

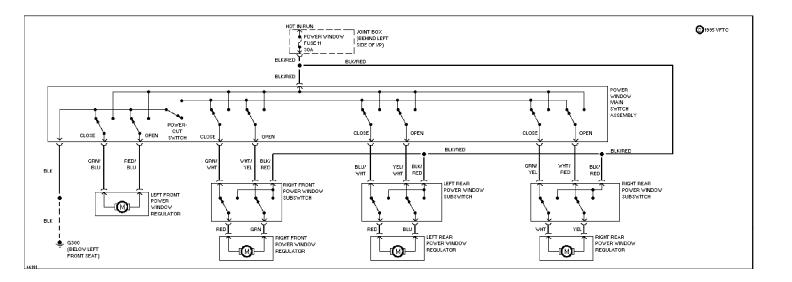

SYSTEM WIRING DIAGRAMS Radio Circuits (p. 46)

1994 Mazda 626


For x

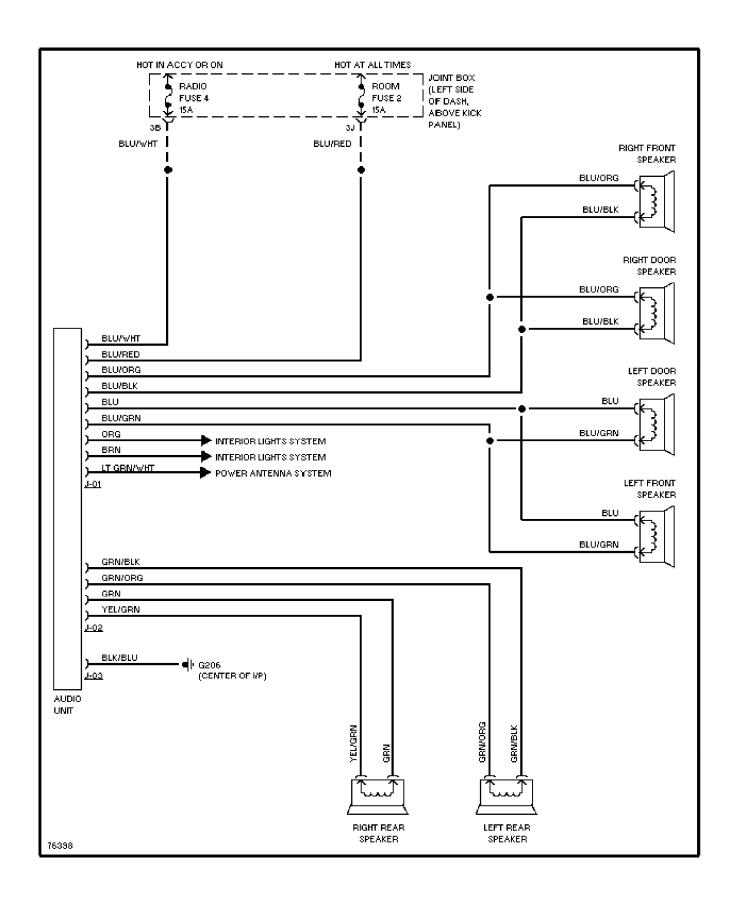

SYSTEM WIRING DIAGRAMS Shift Interlock Circuit (p. 47)


1994 Mazda 626

For x

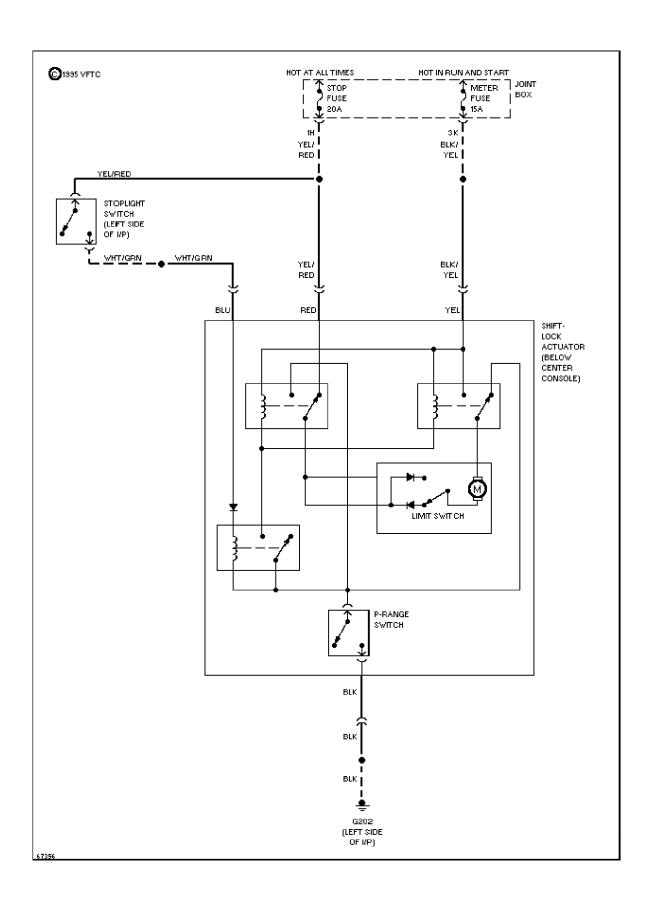


SYSTEM WIRING DIAGRAMS 2.0L, Starting Circuit, A/T (p. 48) 1994 Mazda 626

For x

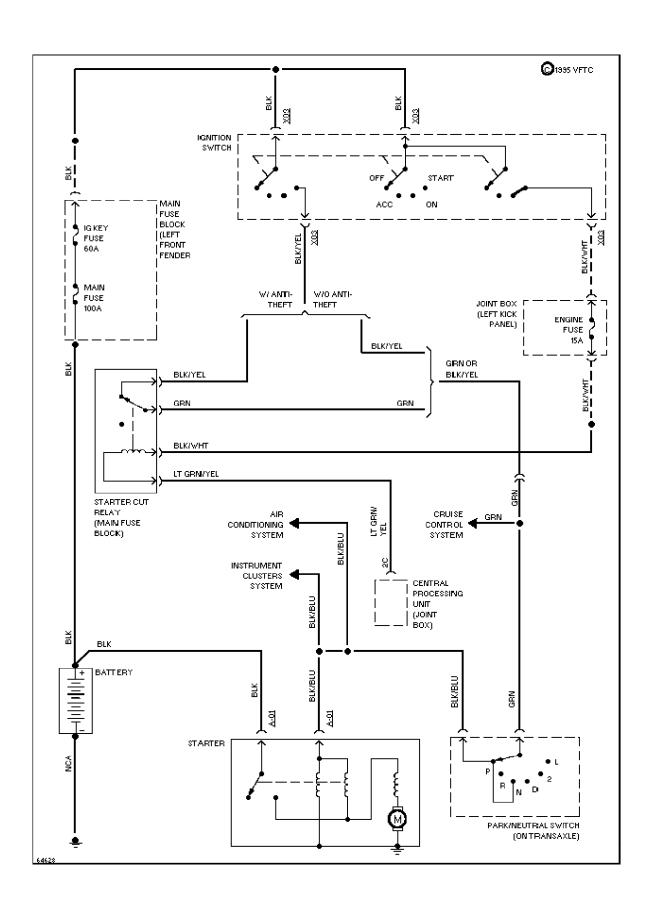


SYSTEM WIRING DIAGRAMS 2.0L, Starting Circuit, M/T (p. 49) 1994 Mazda 626

For x

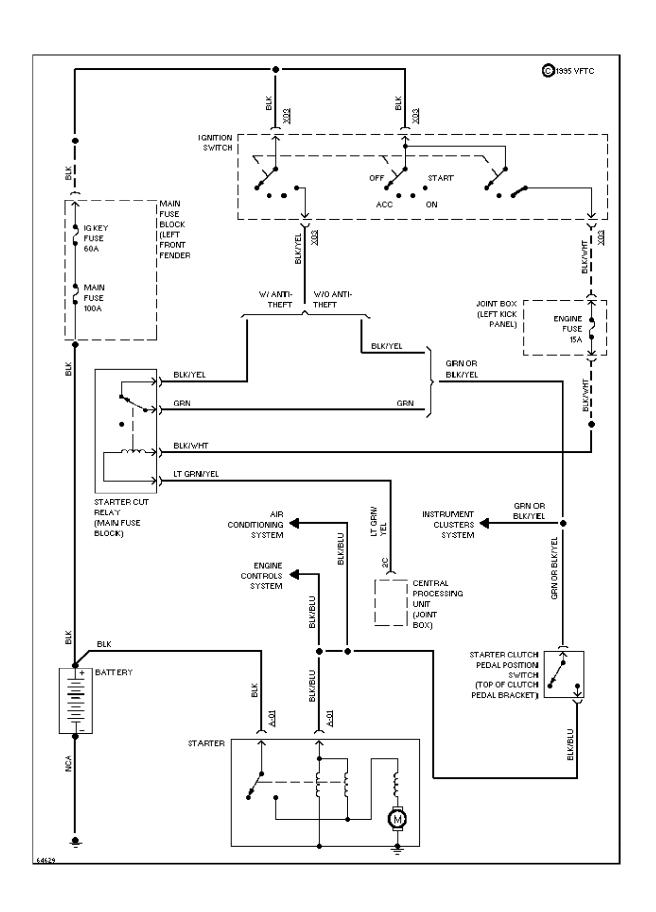

SYSTEM WIRING DIAGRAMS Charging Circuit (p. 50) 1994 Mazda 626


For x

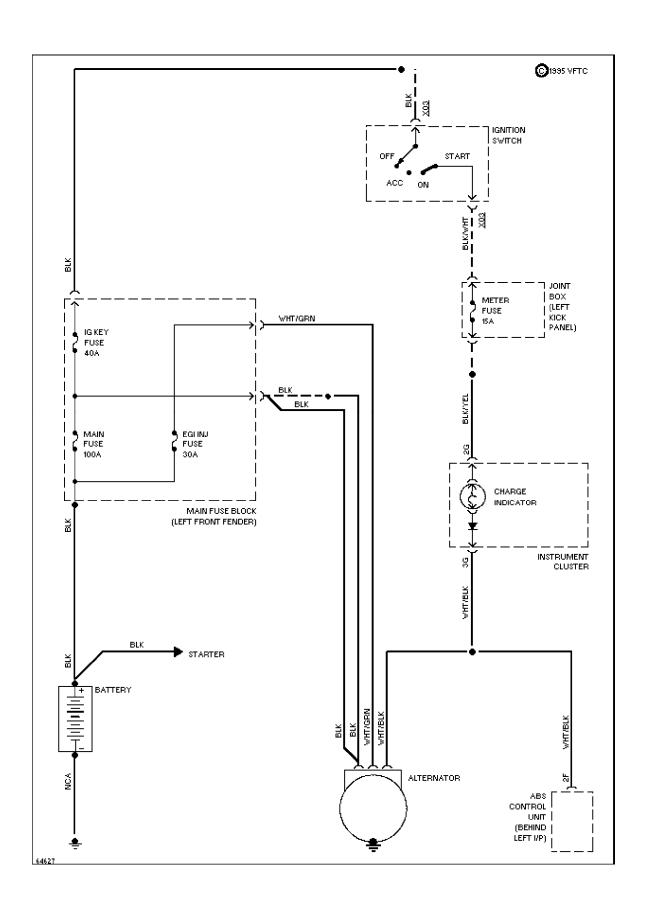

SYSTEM WIRING DIAGRAMS 2.5L, Starting Circuit, A/T (p. 51)

1994 Mazda 626


For x

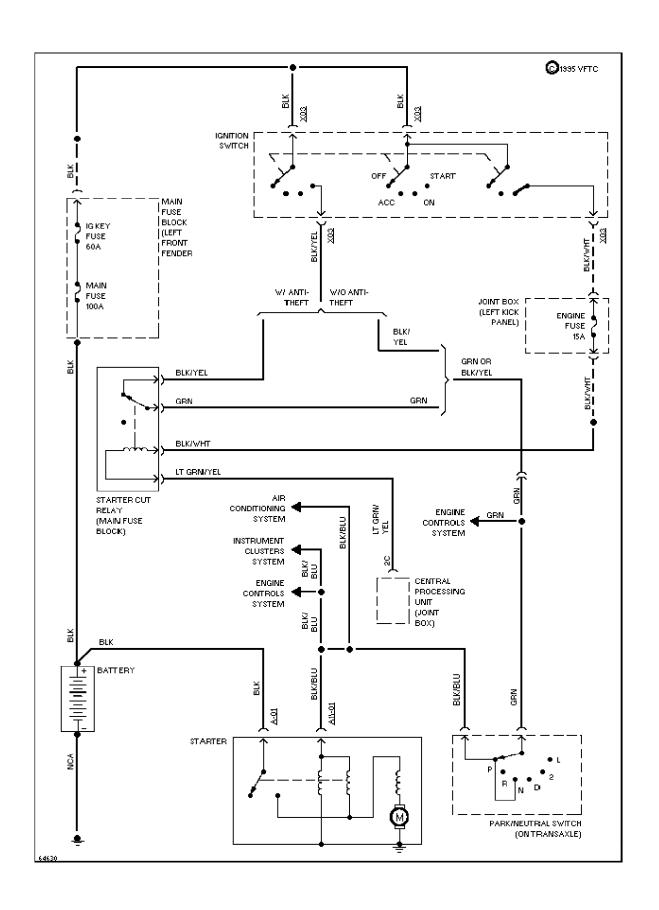

SYSTEM WIRING DIAGRAMS 2.5L, Starting Circuit, M/T (p. 52)


1994 Mazda 626

For x

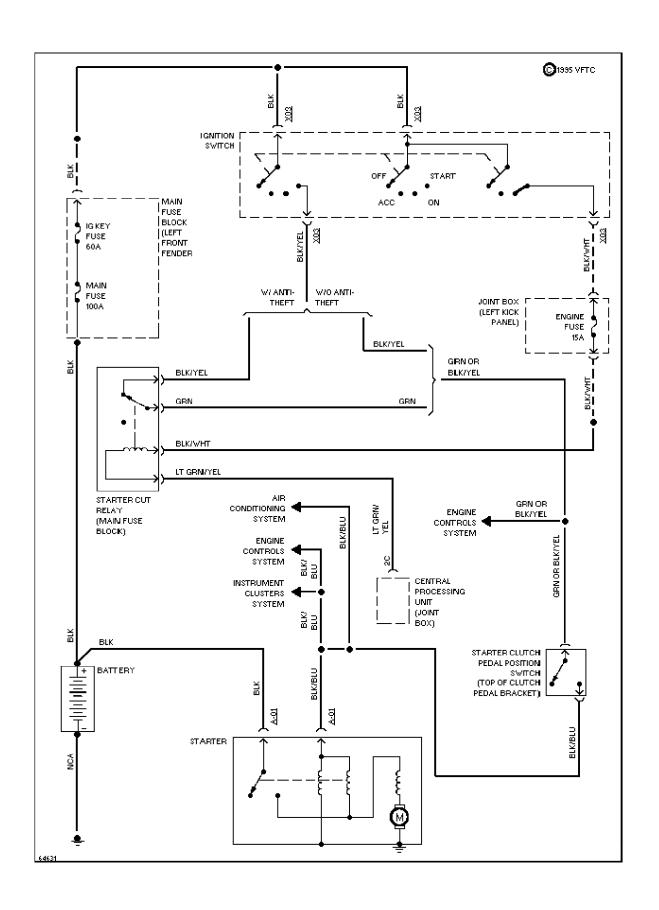

SYSTEM WIRING DIAGRAMS Charging Circuit (p. 53) 1994 Mazda 626


For x

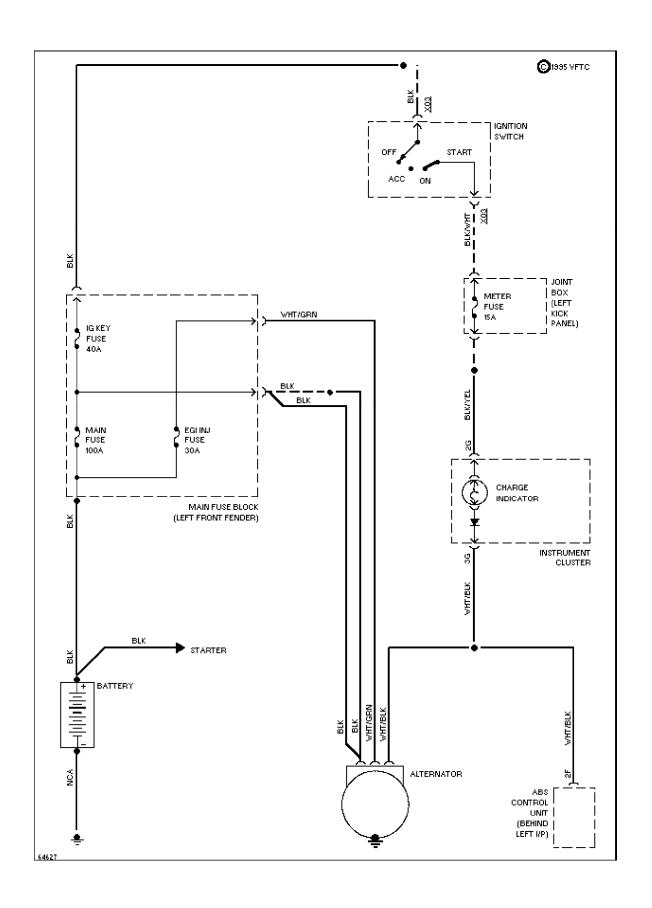

SYSTEM WIRING DIAGRAMS Supplemental Restraint Circuit (p. 54)

1994 Mazda 626


For x

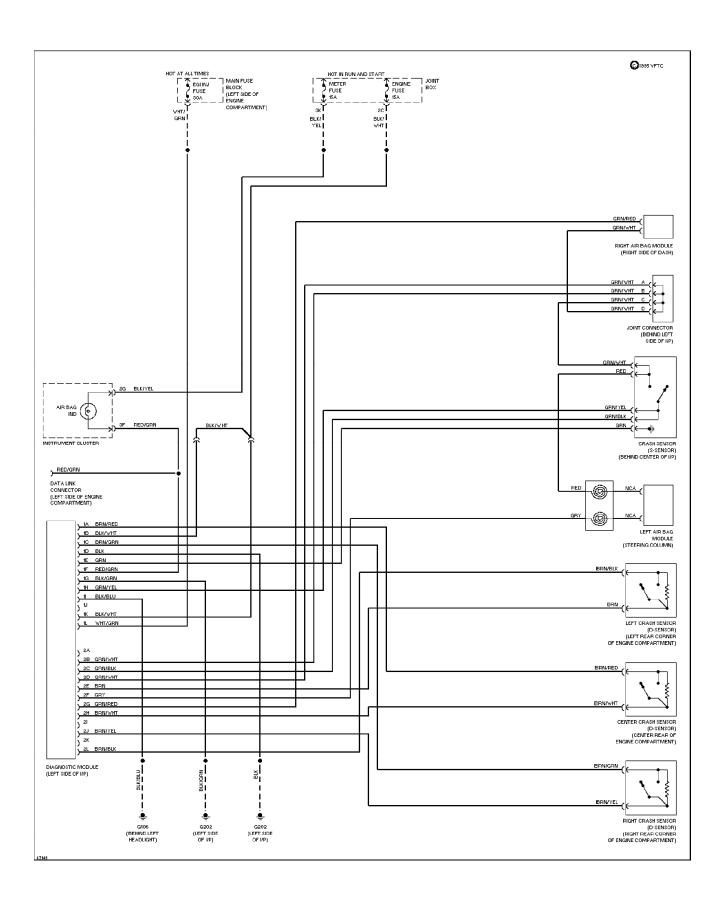

SYSTEM WIRING DIAGRAMS 2.0L, Transmission Circuit (p. 55)

1994 Mazda 626


For x

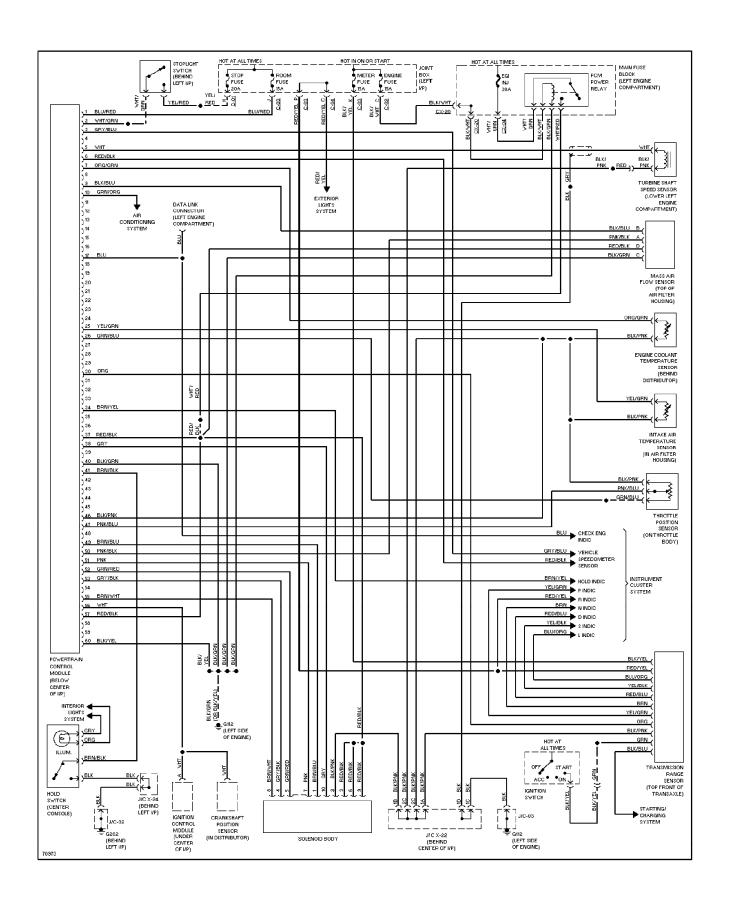

SYSTEM WIRING DIAGRAMS 2.5L, Transmission Circuit (p. 56)

1994 Mazda 626


For x

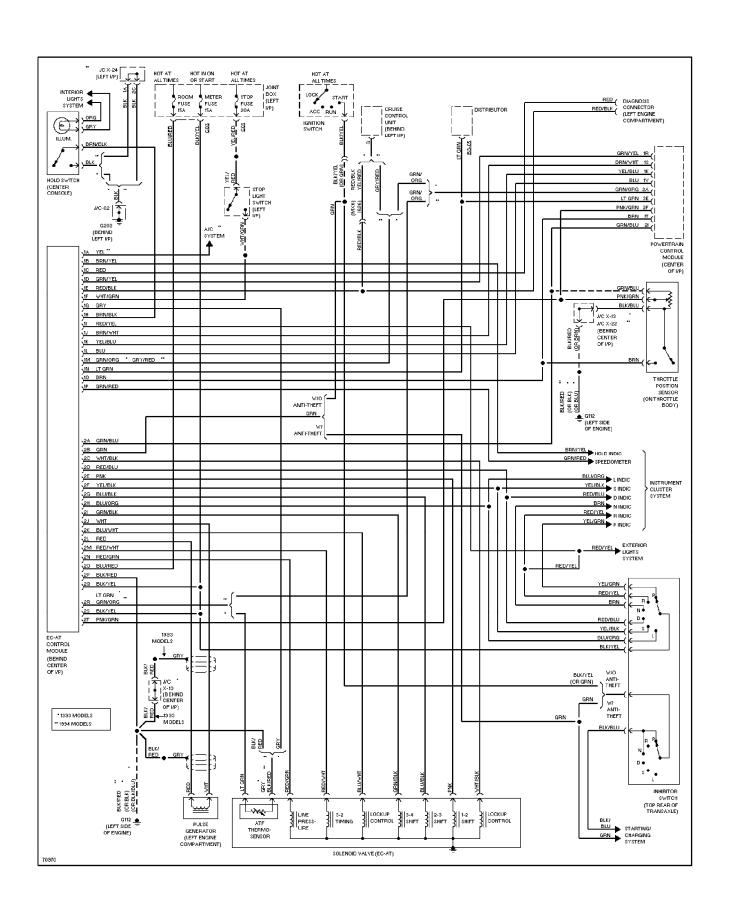

SYSTEM WIRING DIAGRAMS Warning System Circuits (p. 57)

1994 Mazda 626

For x

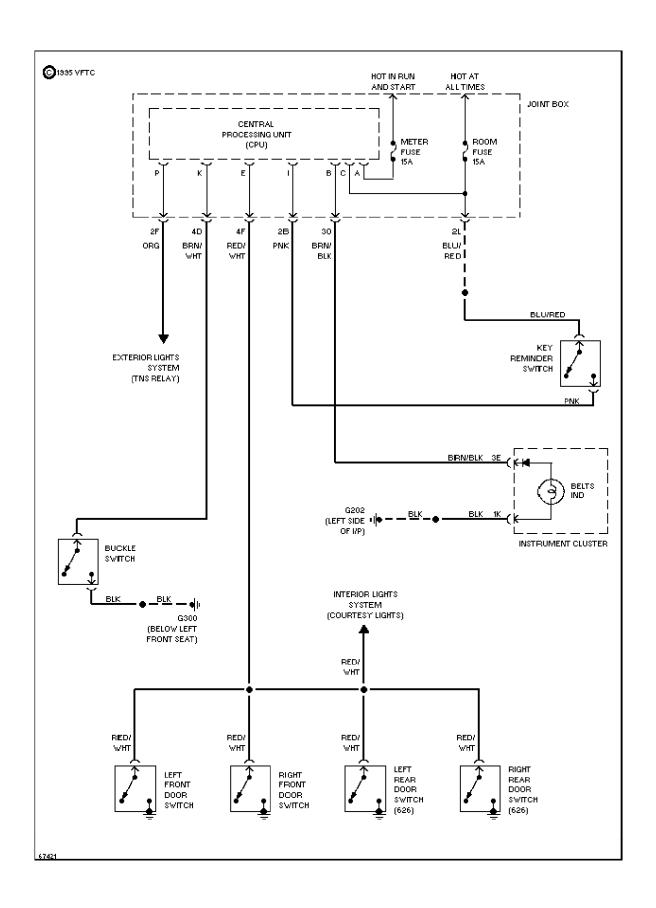

SYSTEM WIRING DIAGRAMS Wiper/Washer Circuit (p. 58)

1994 Mazda 626

For x

