




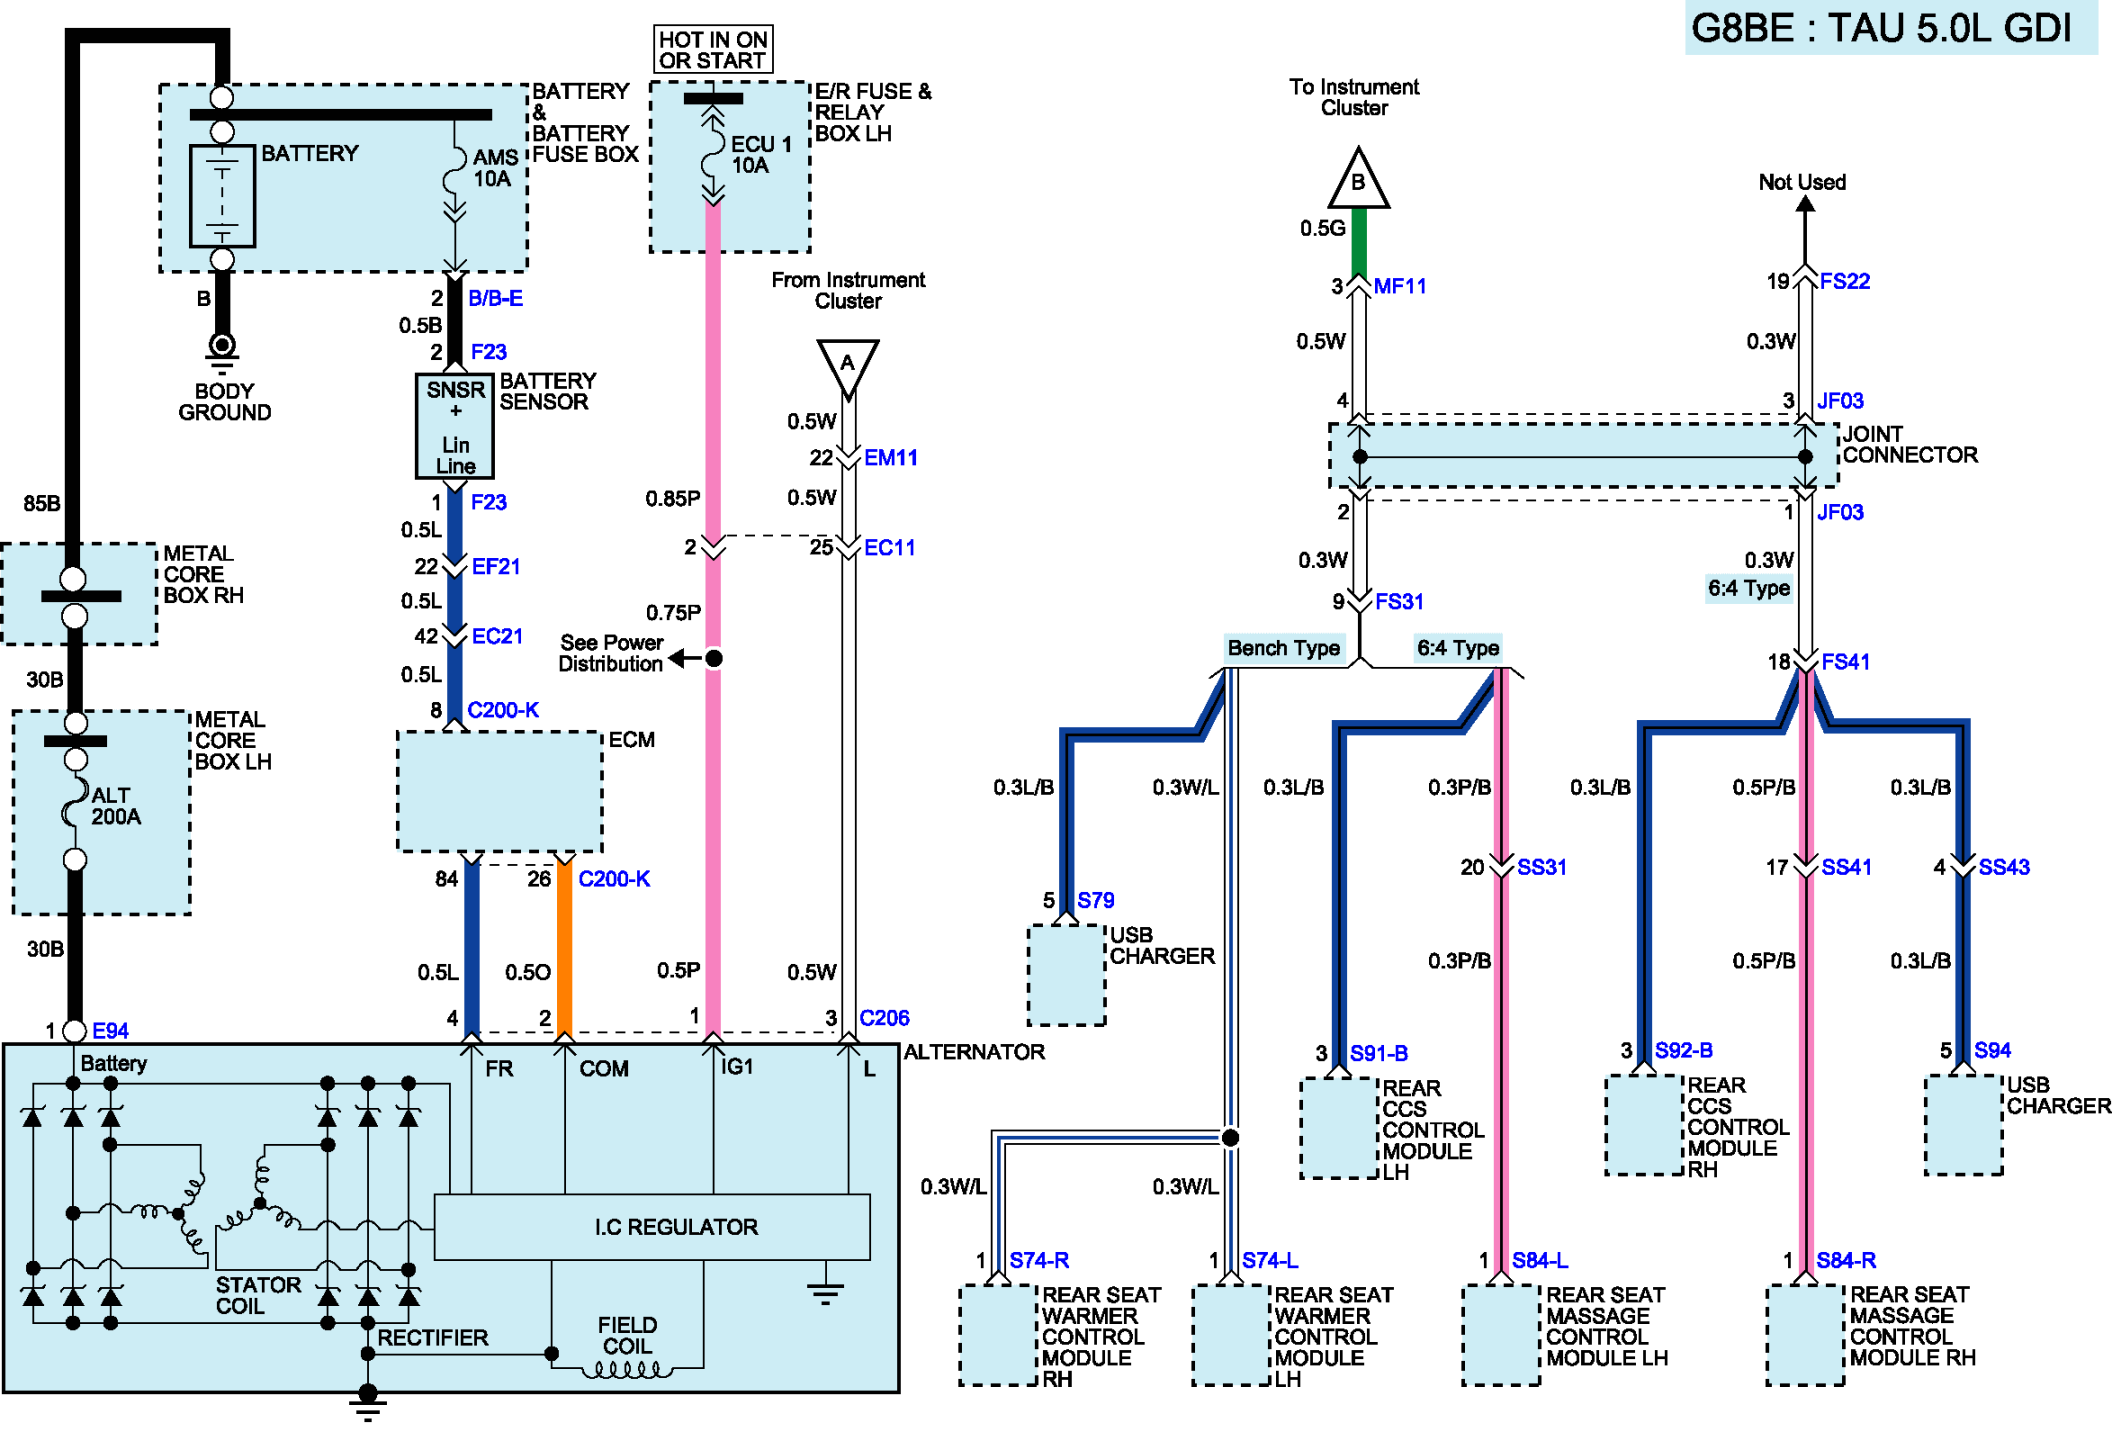



Standard Type

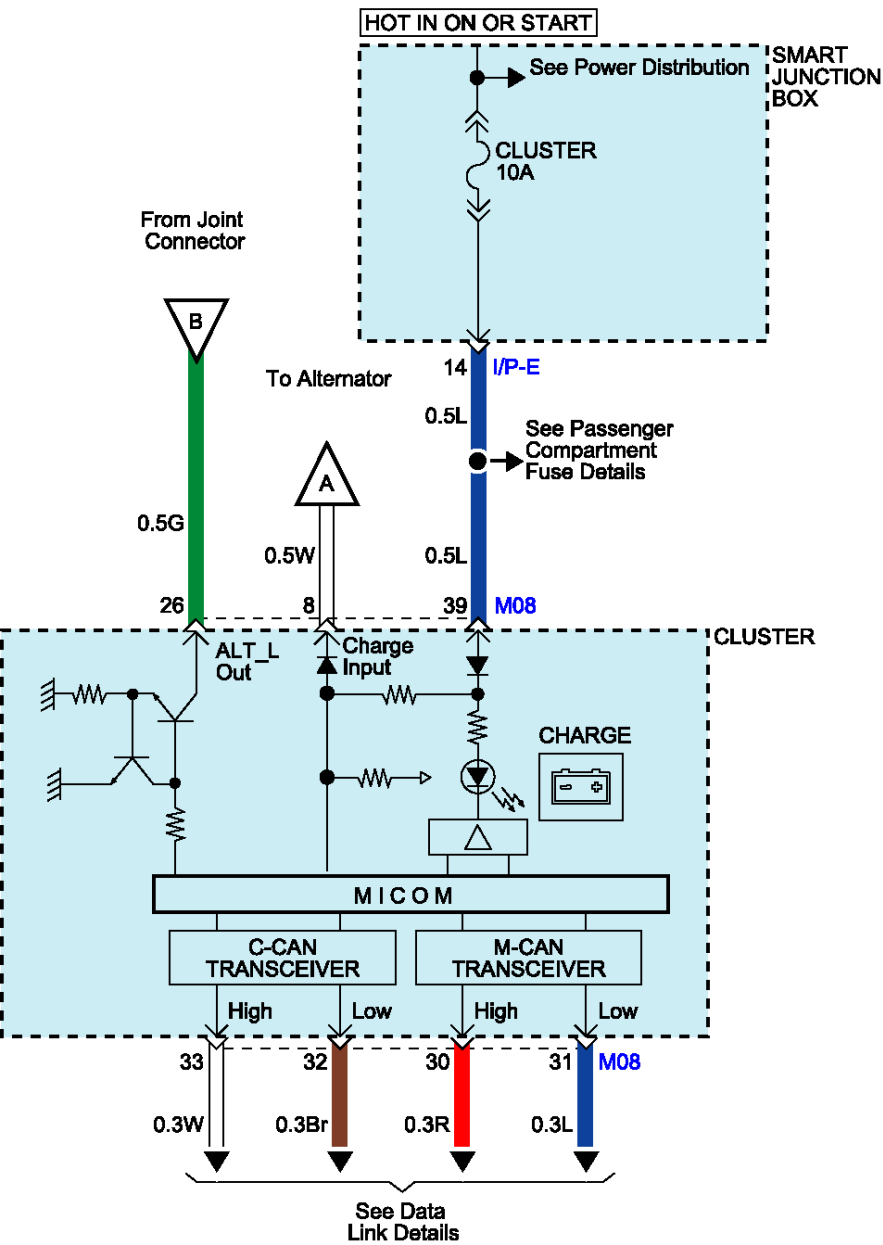



Deluxe Type

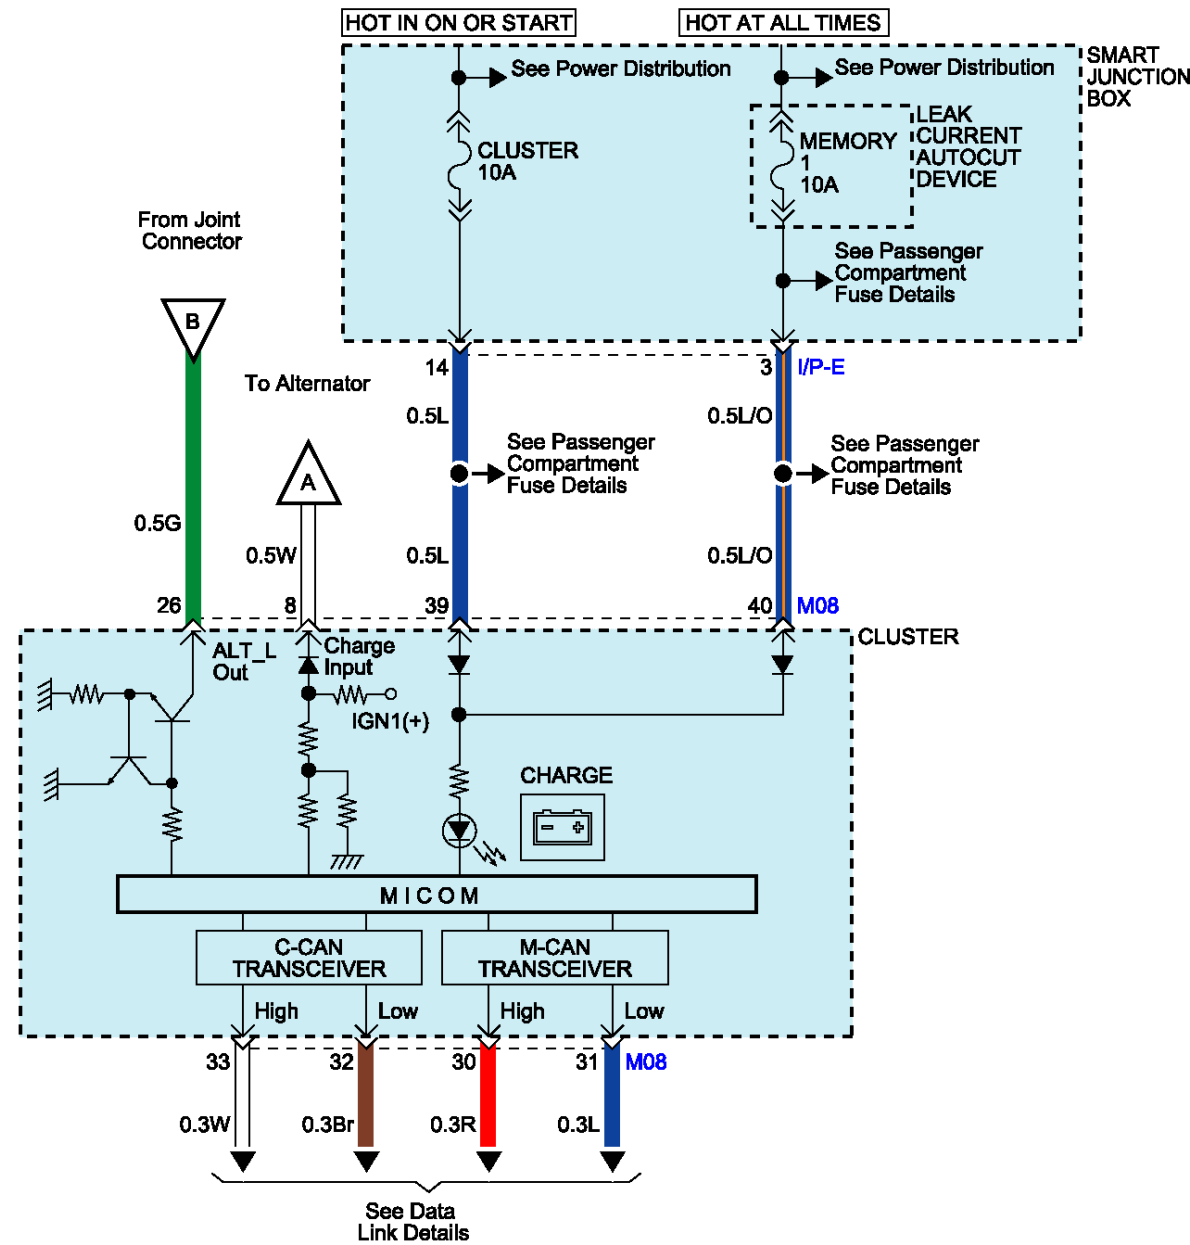


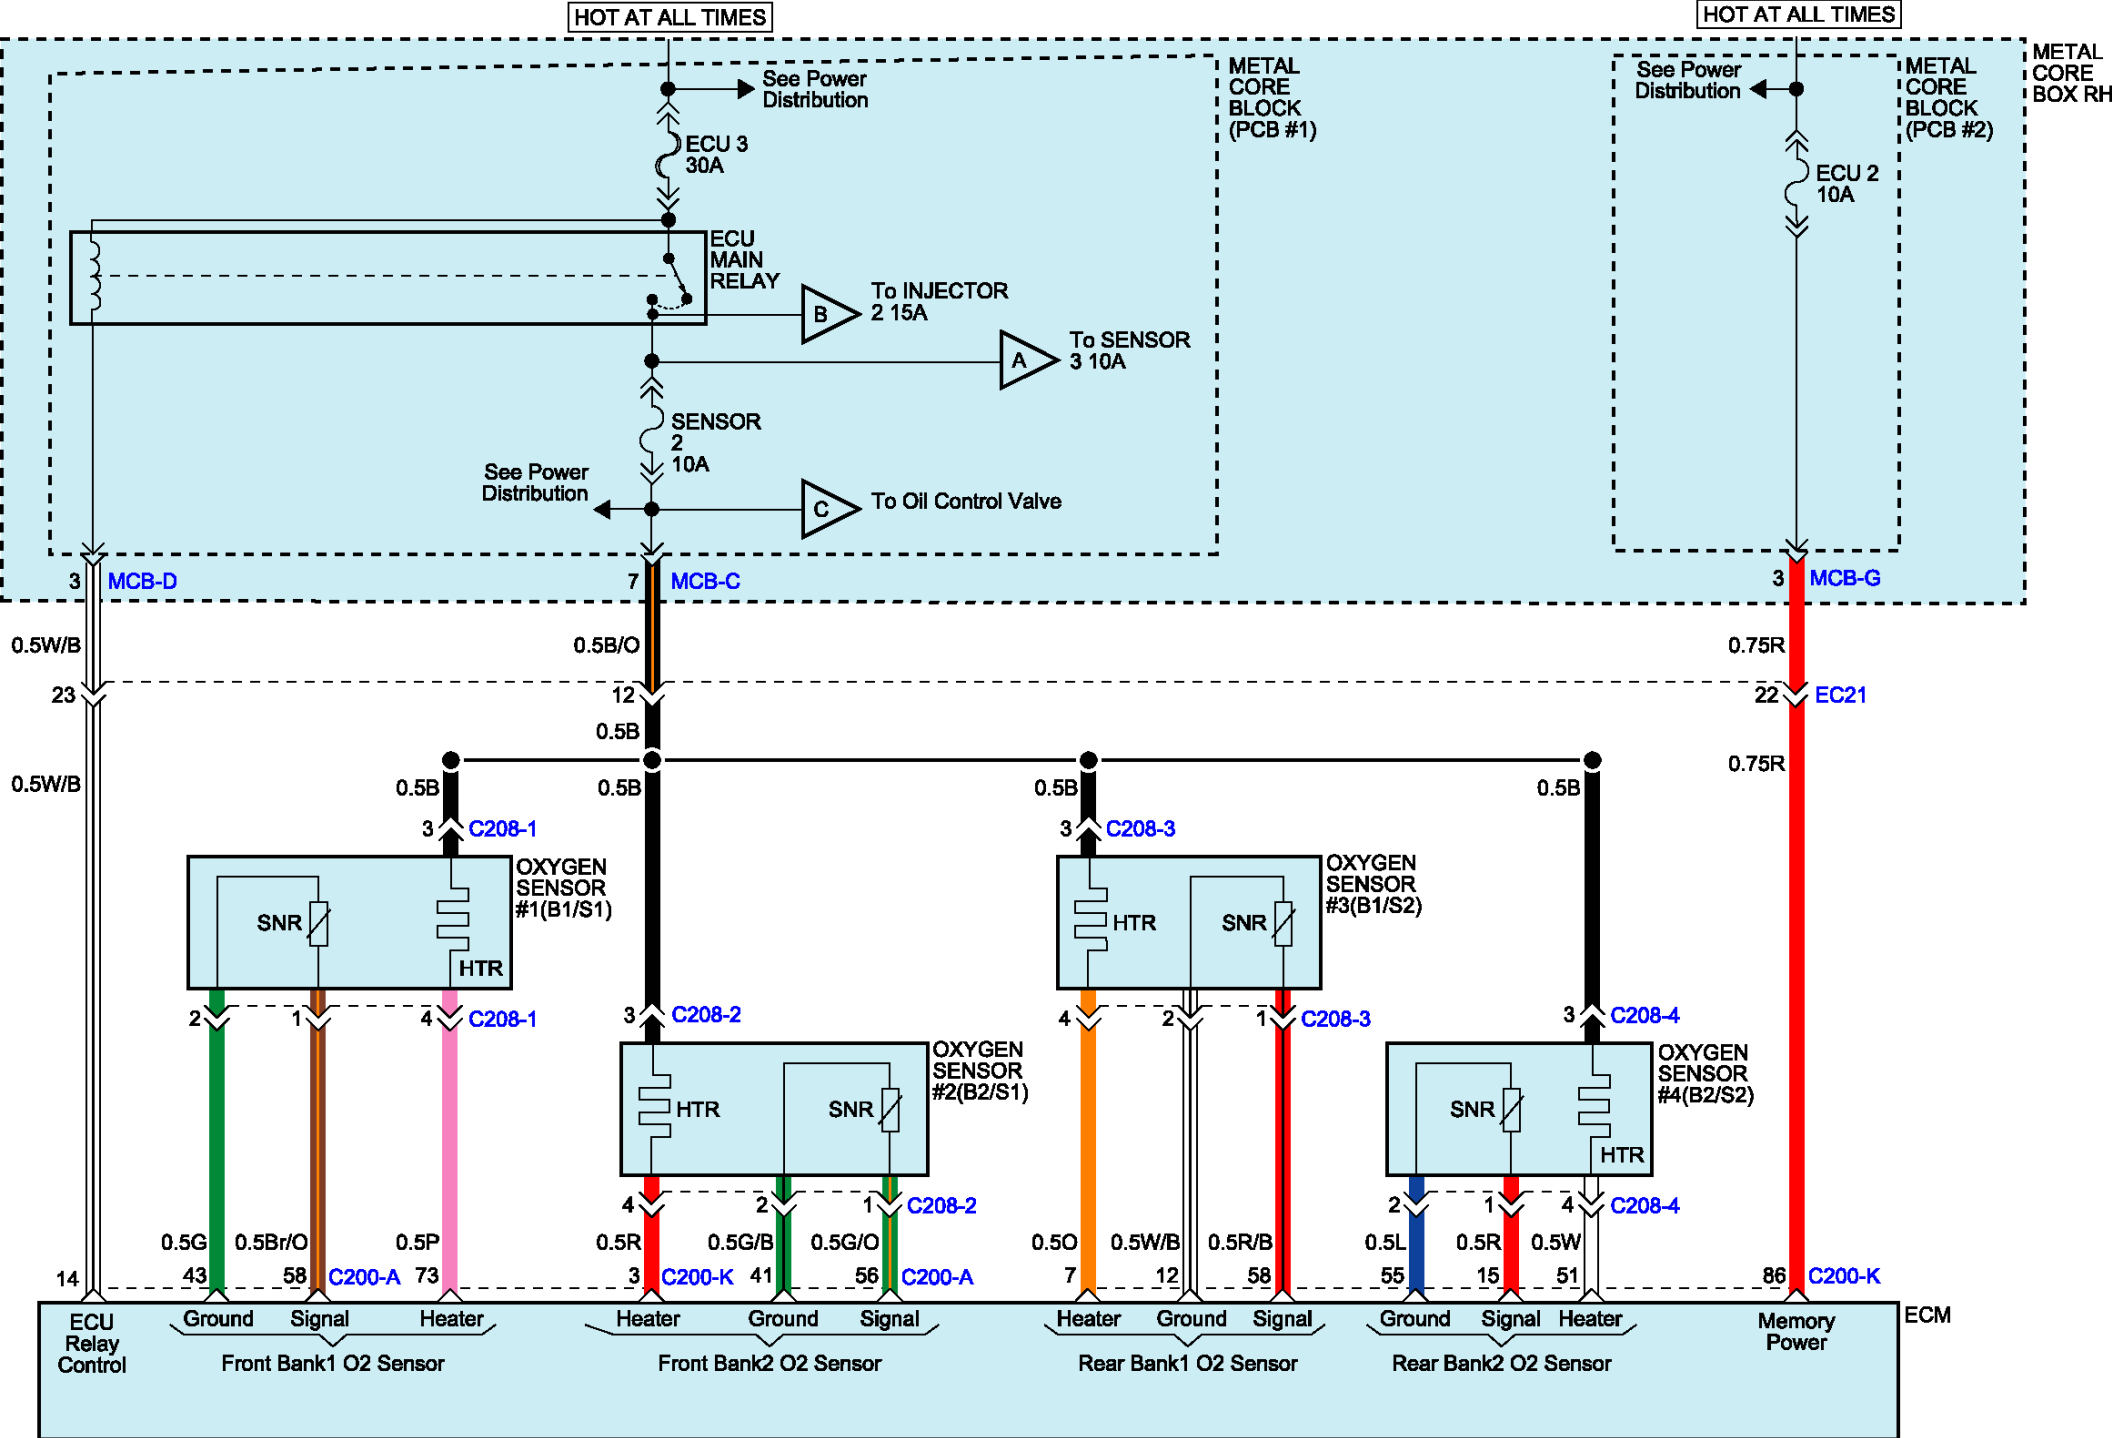


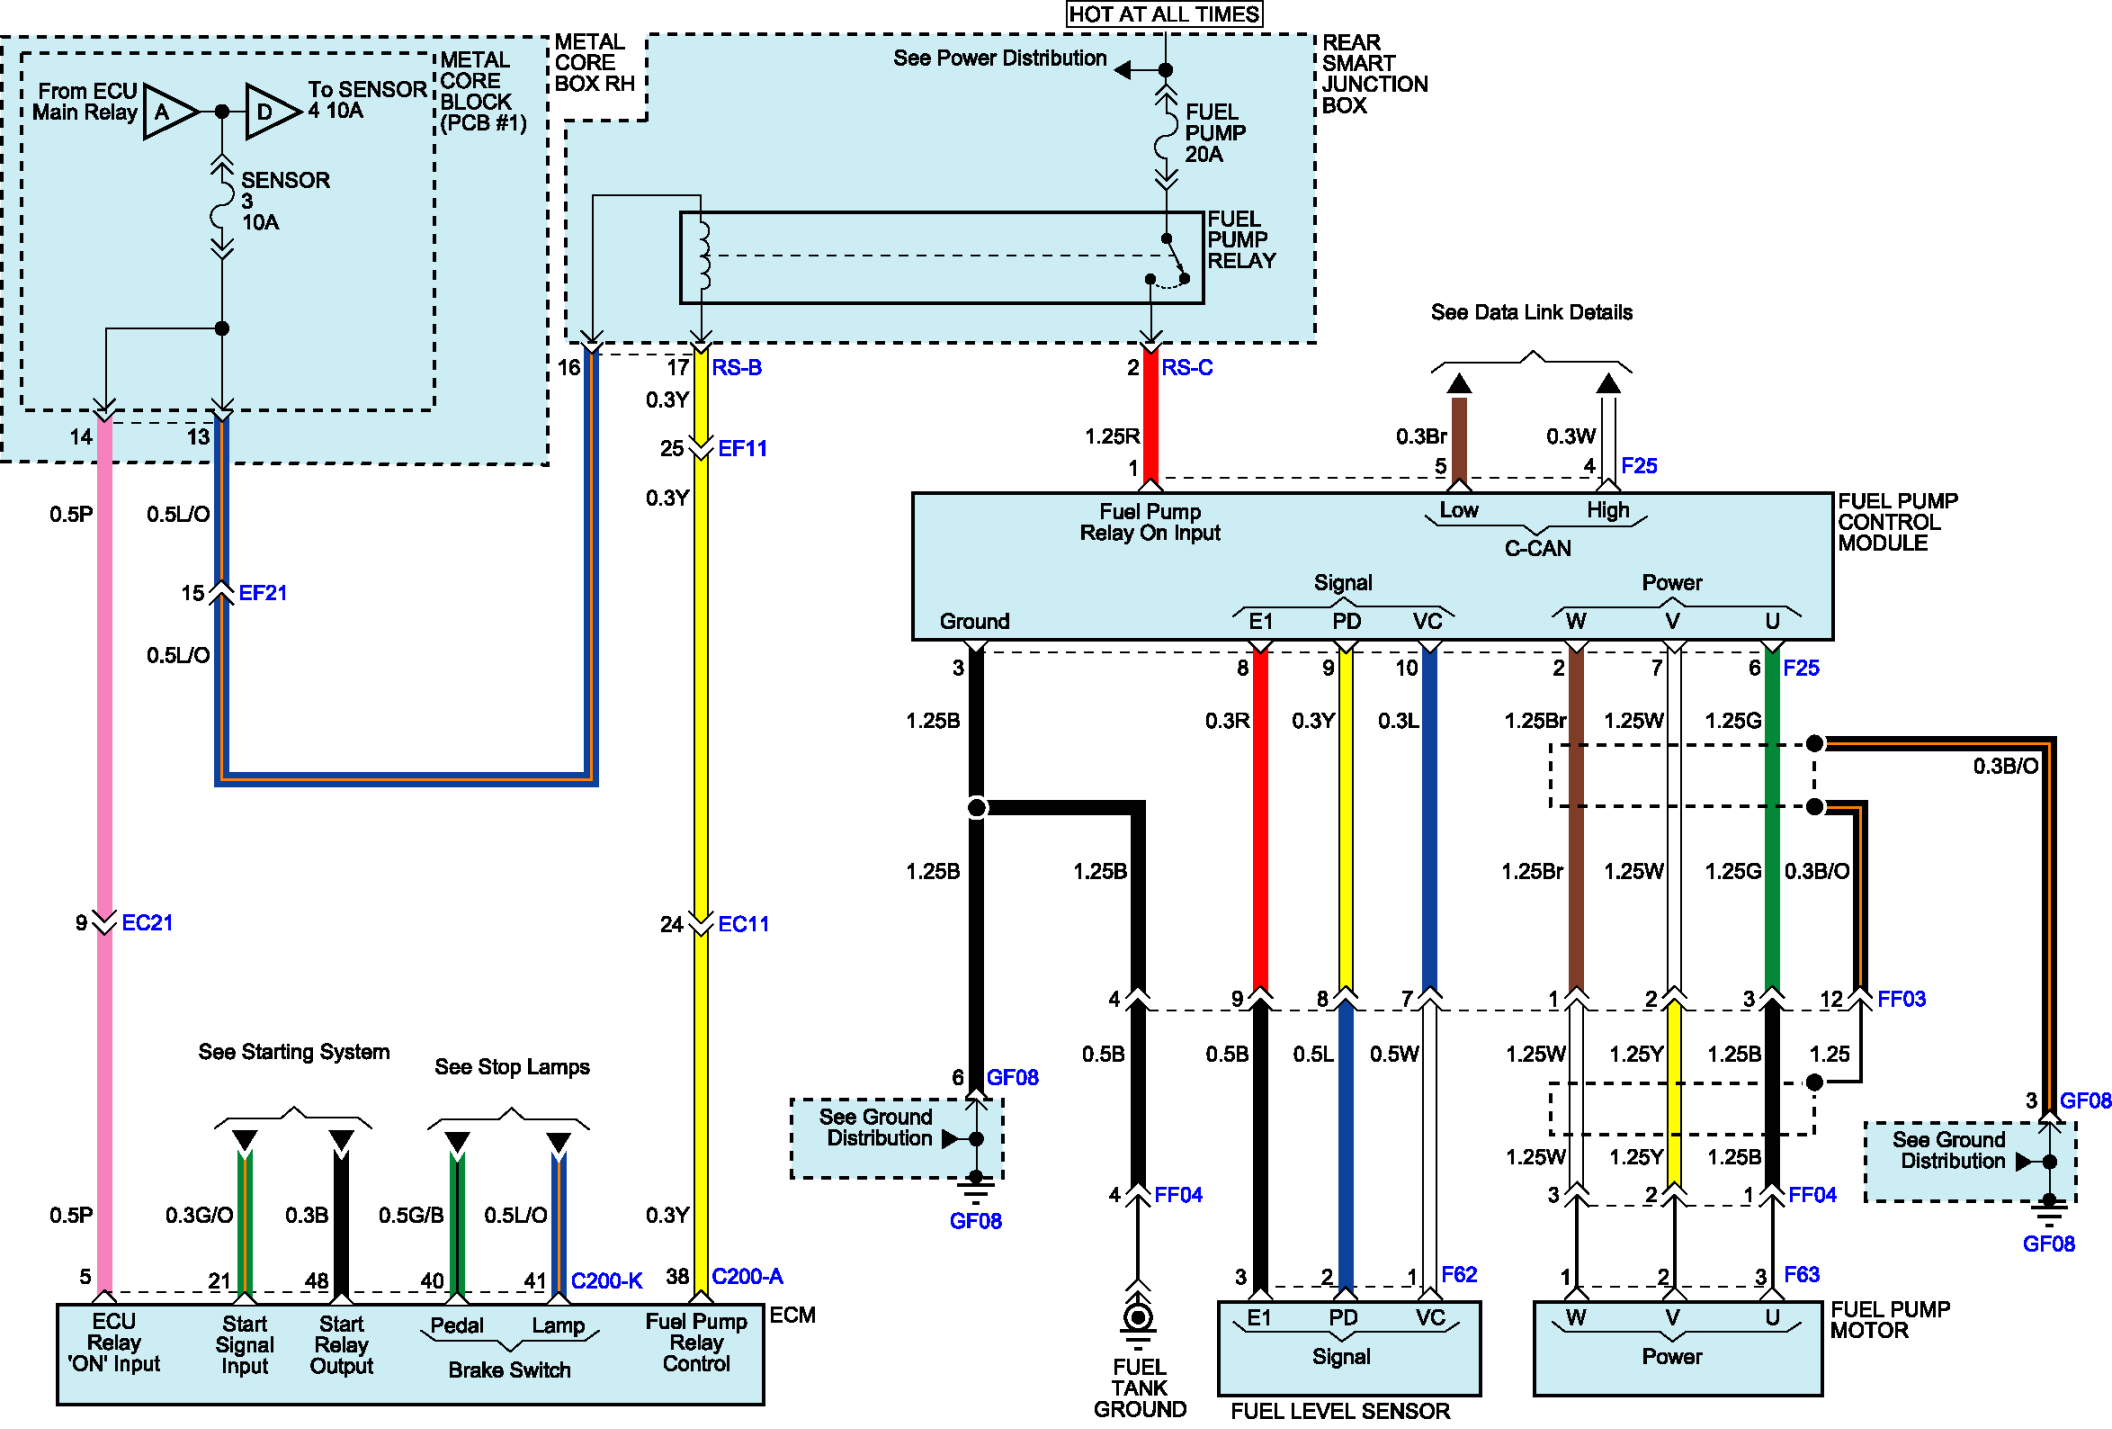


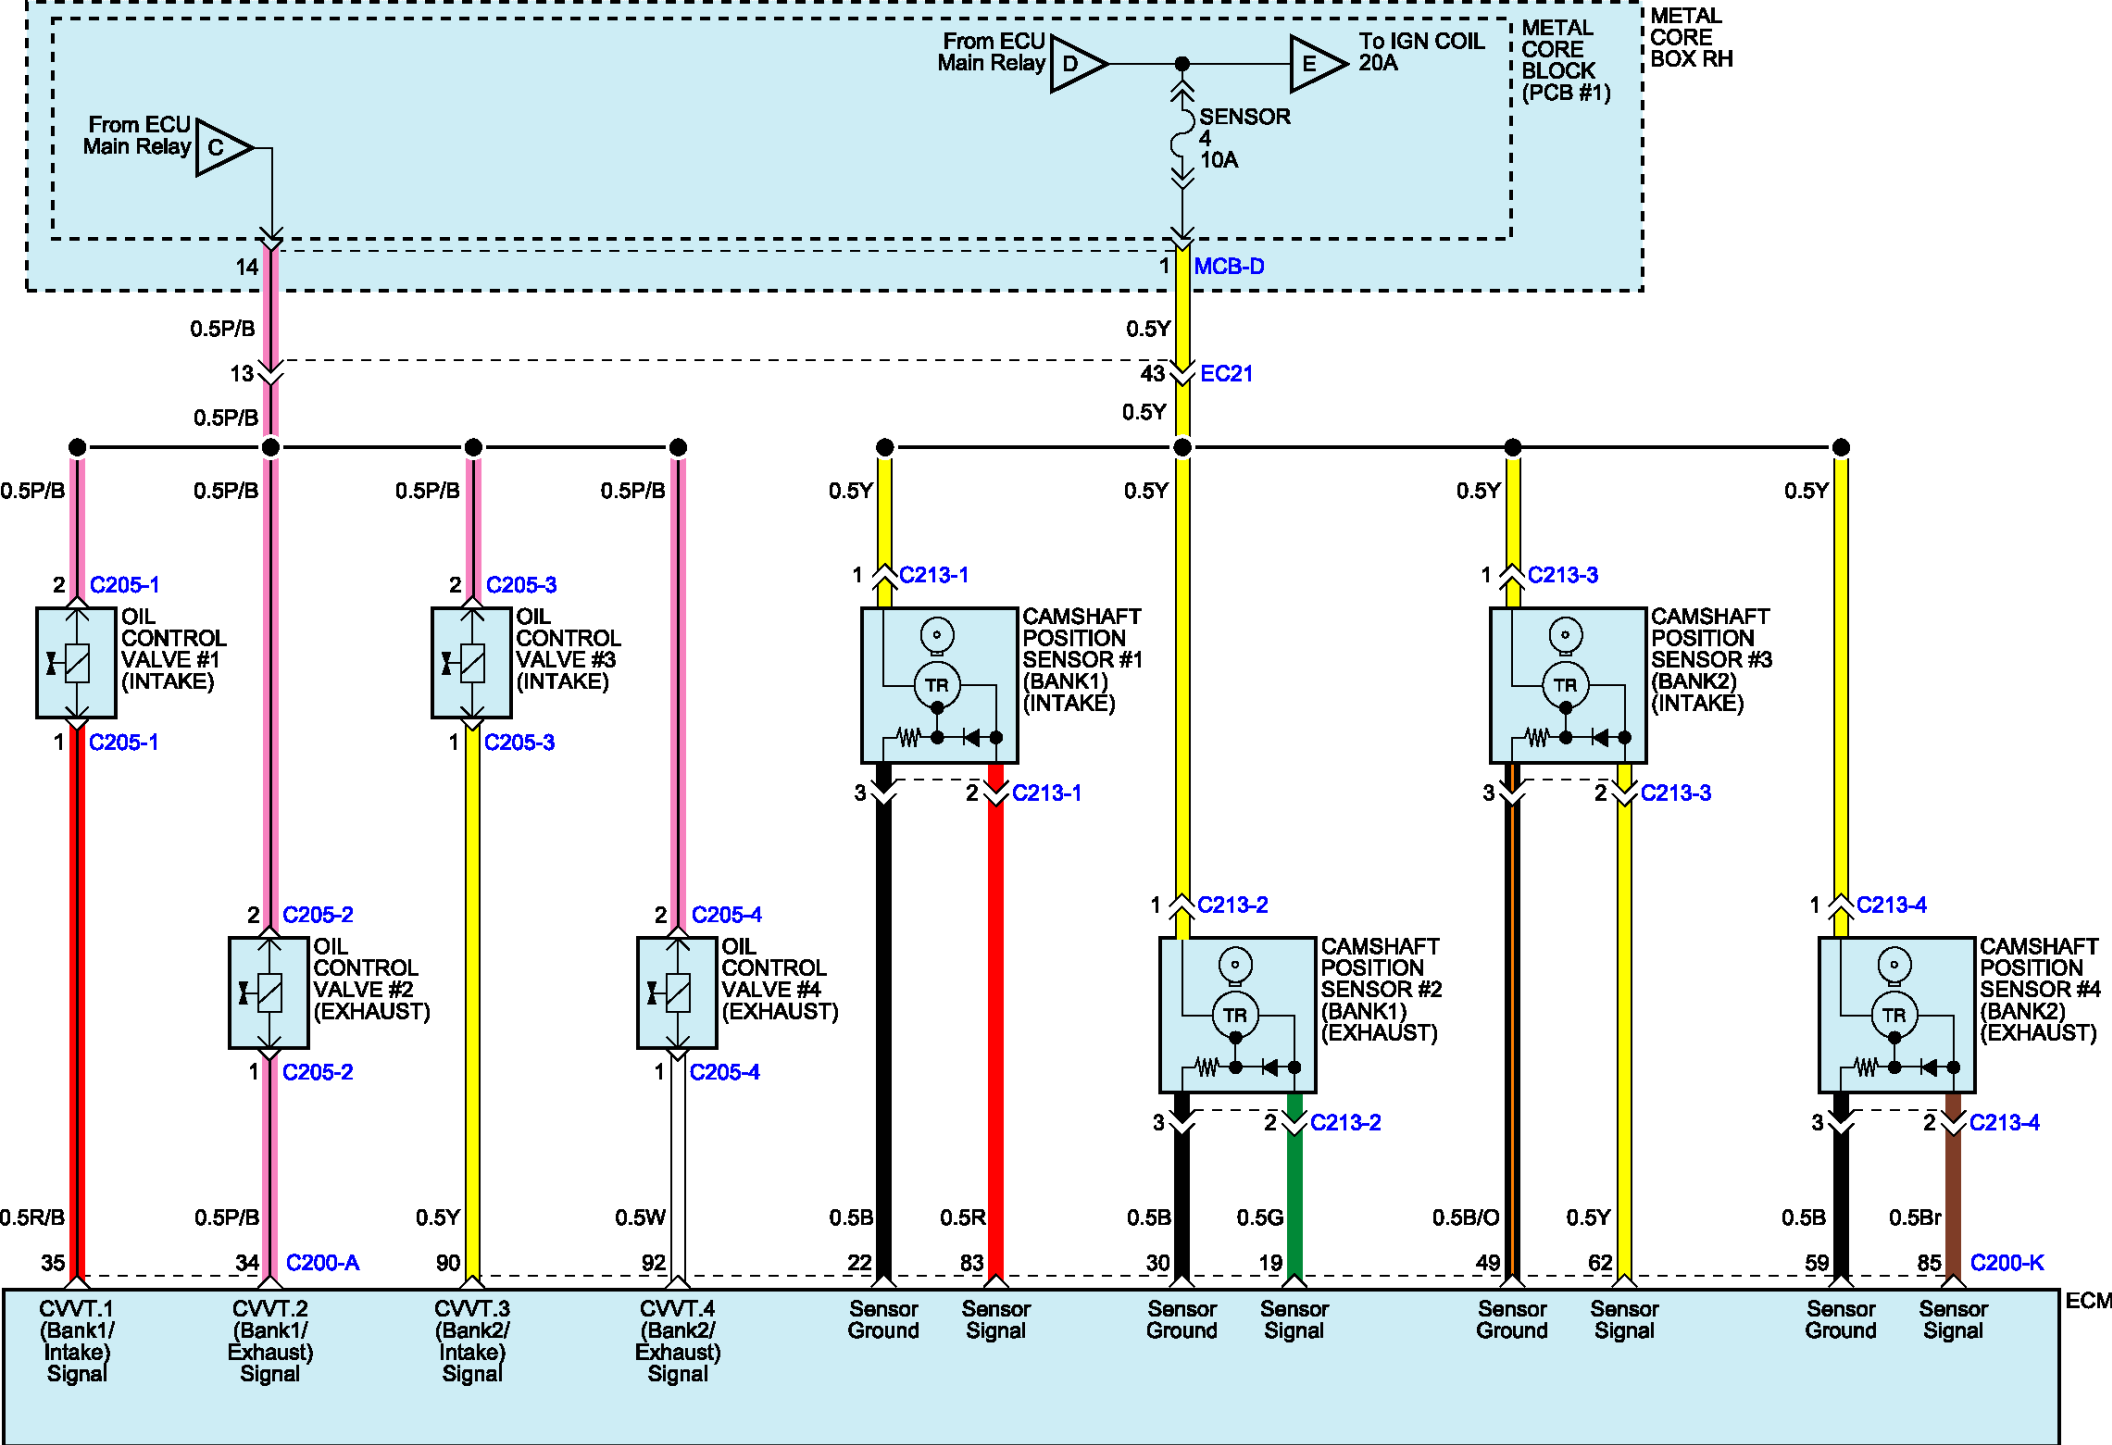

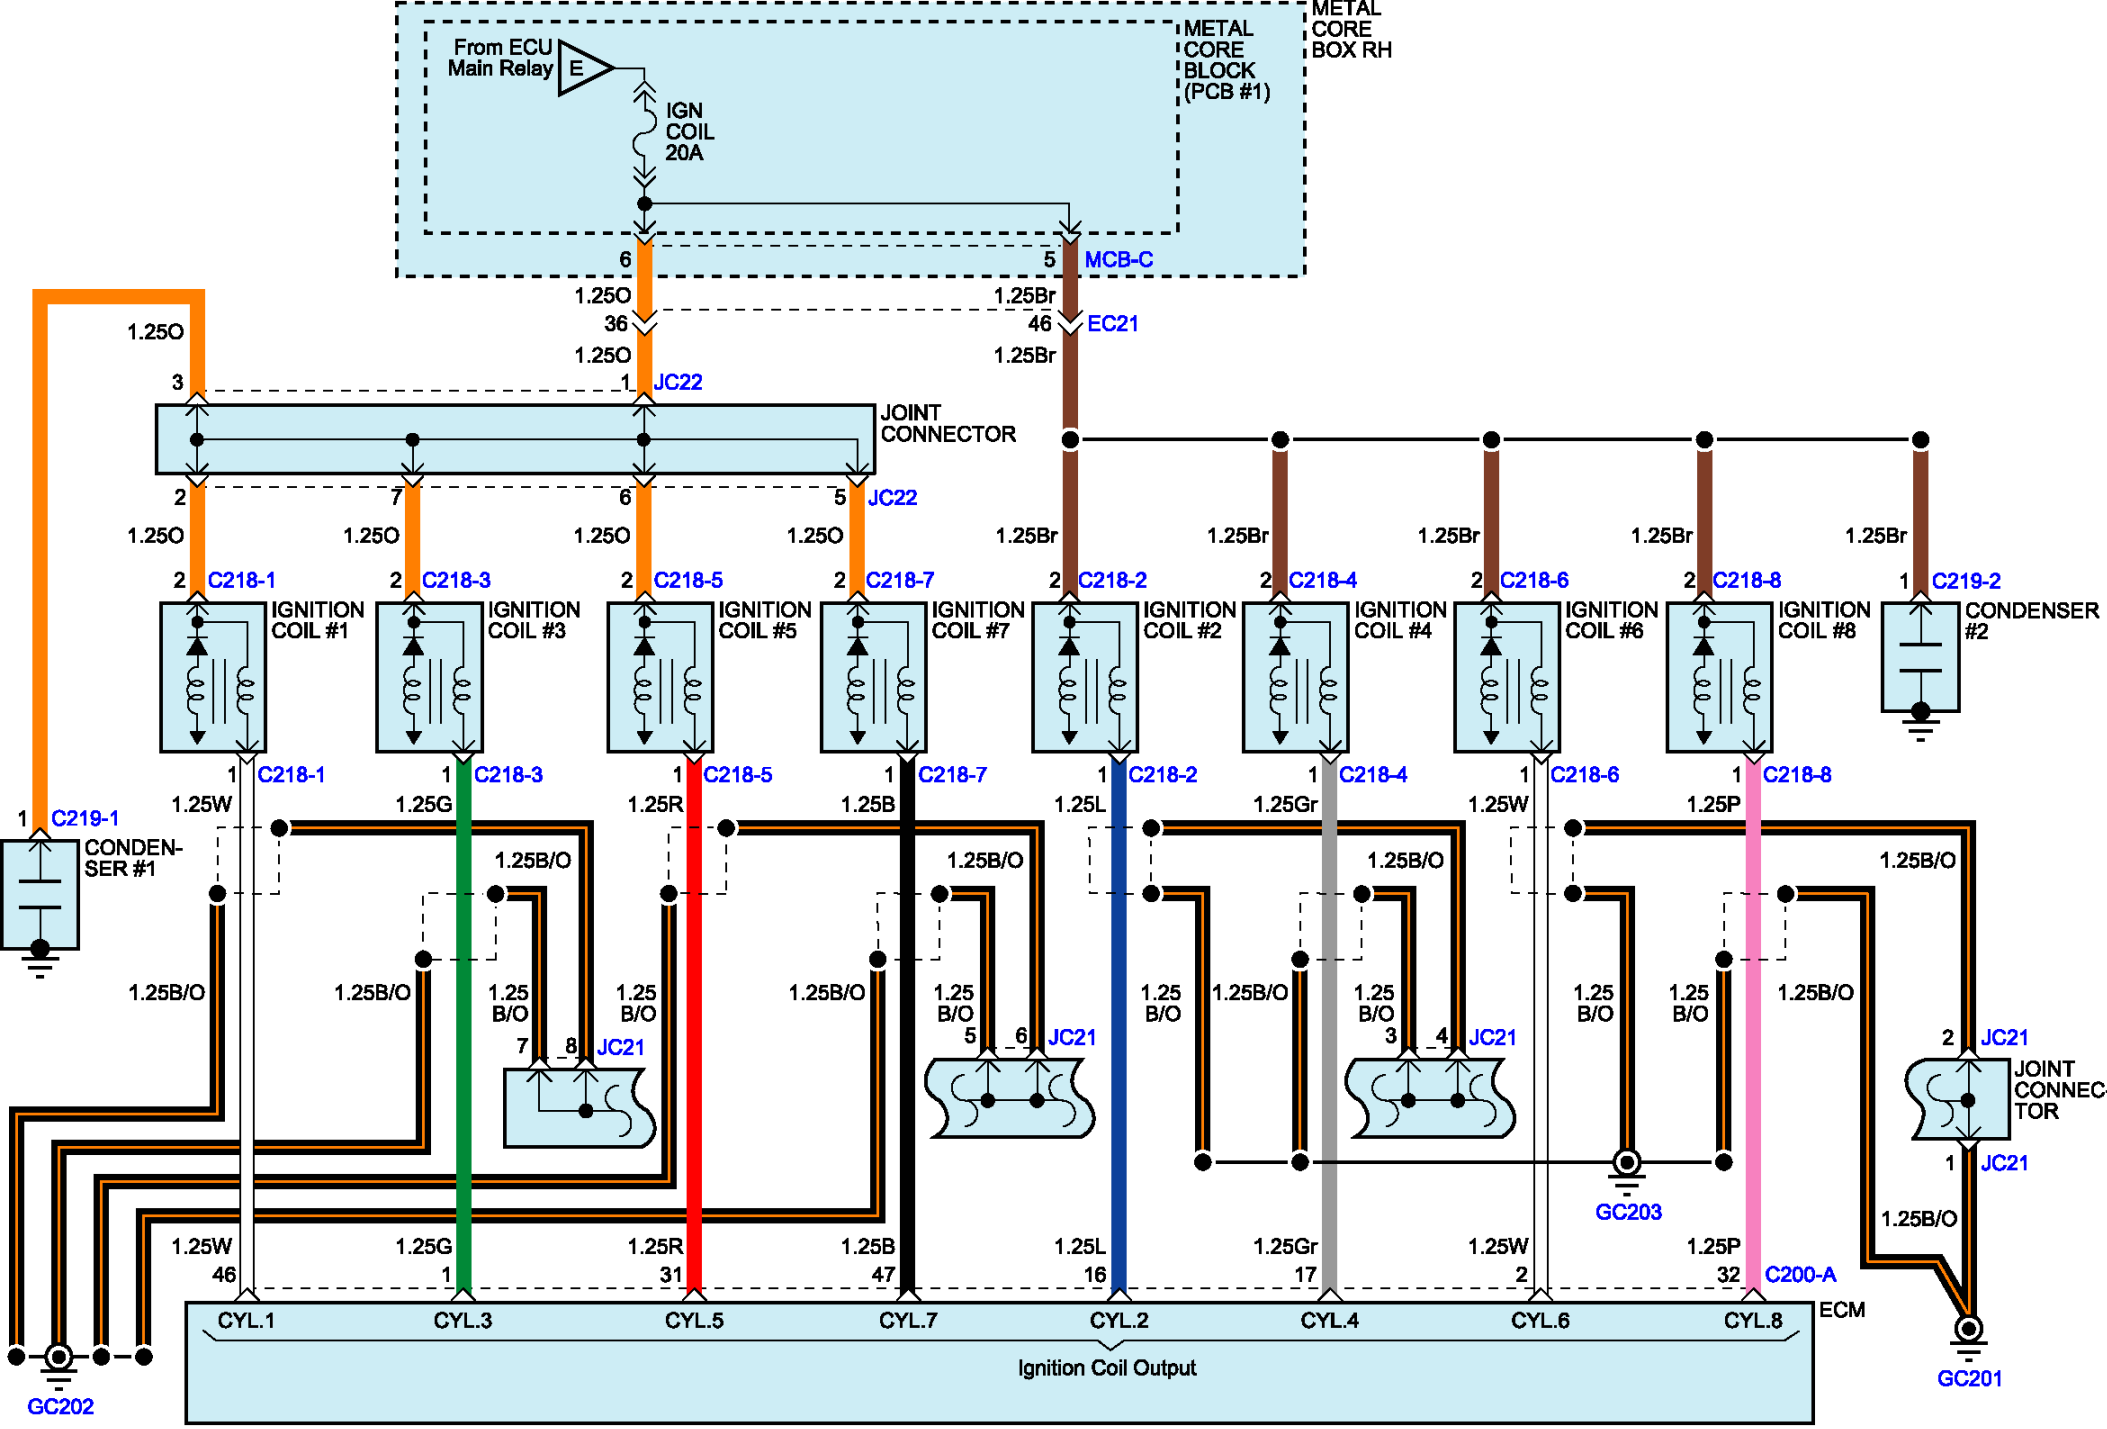

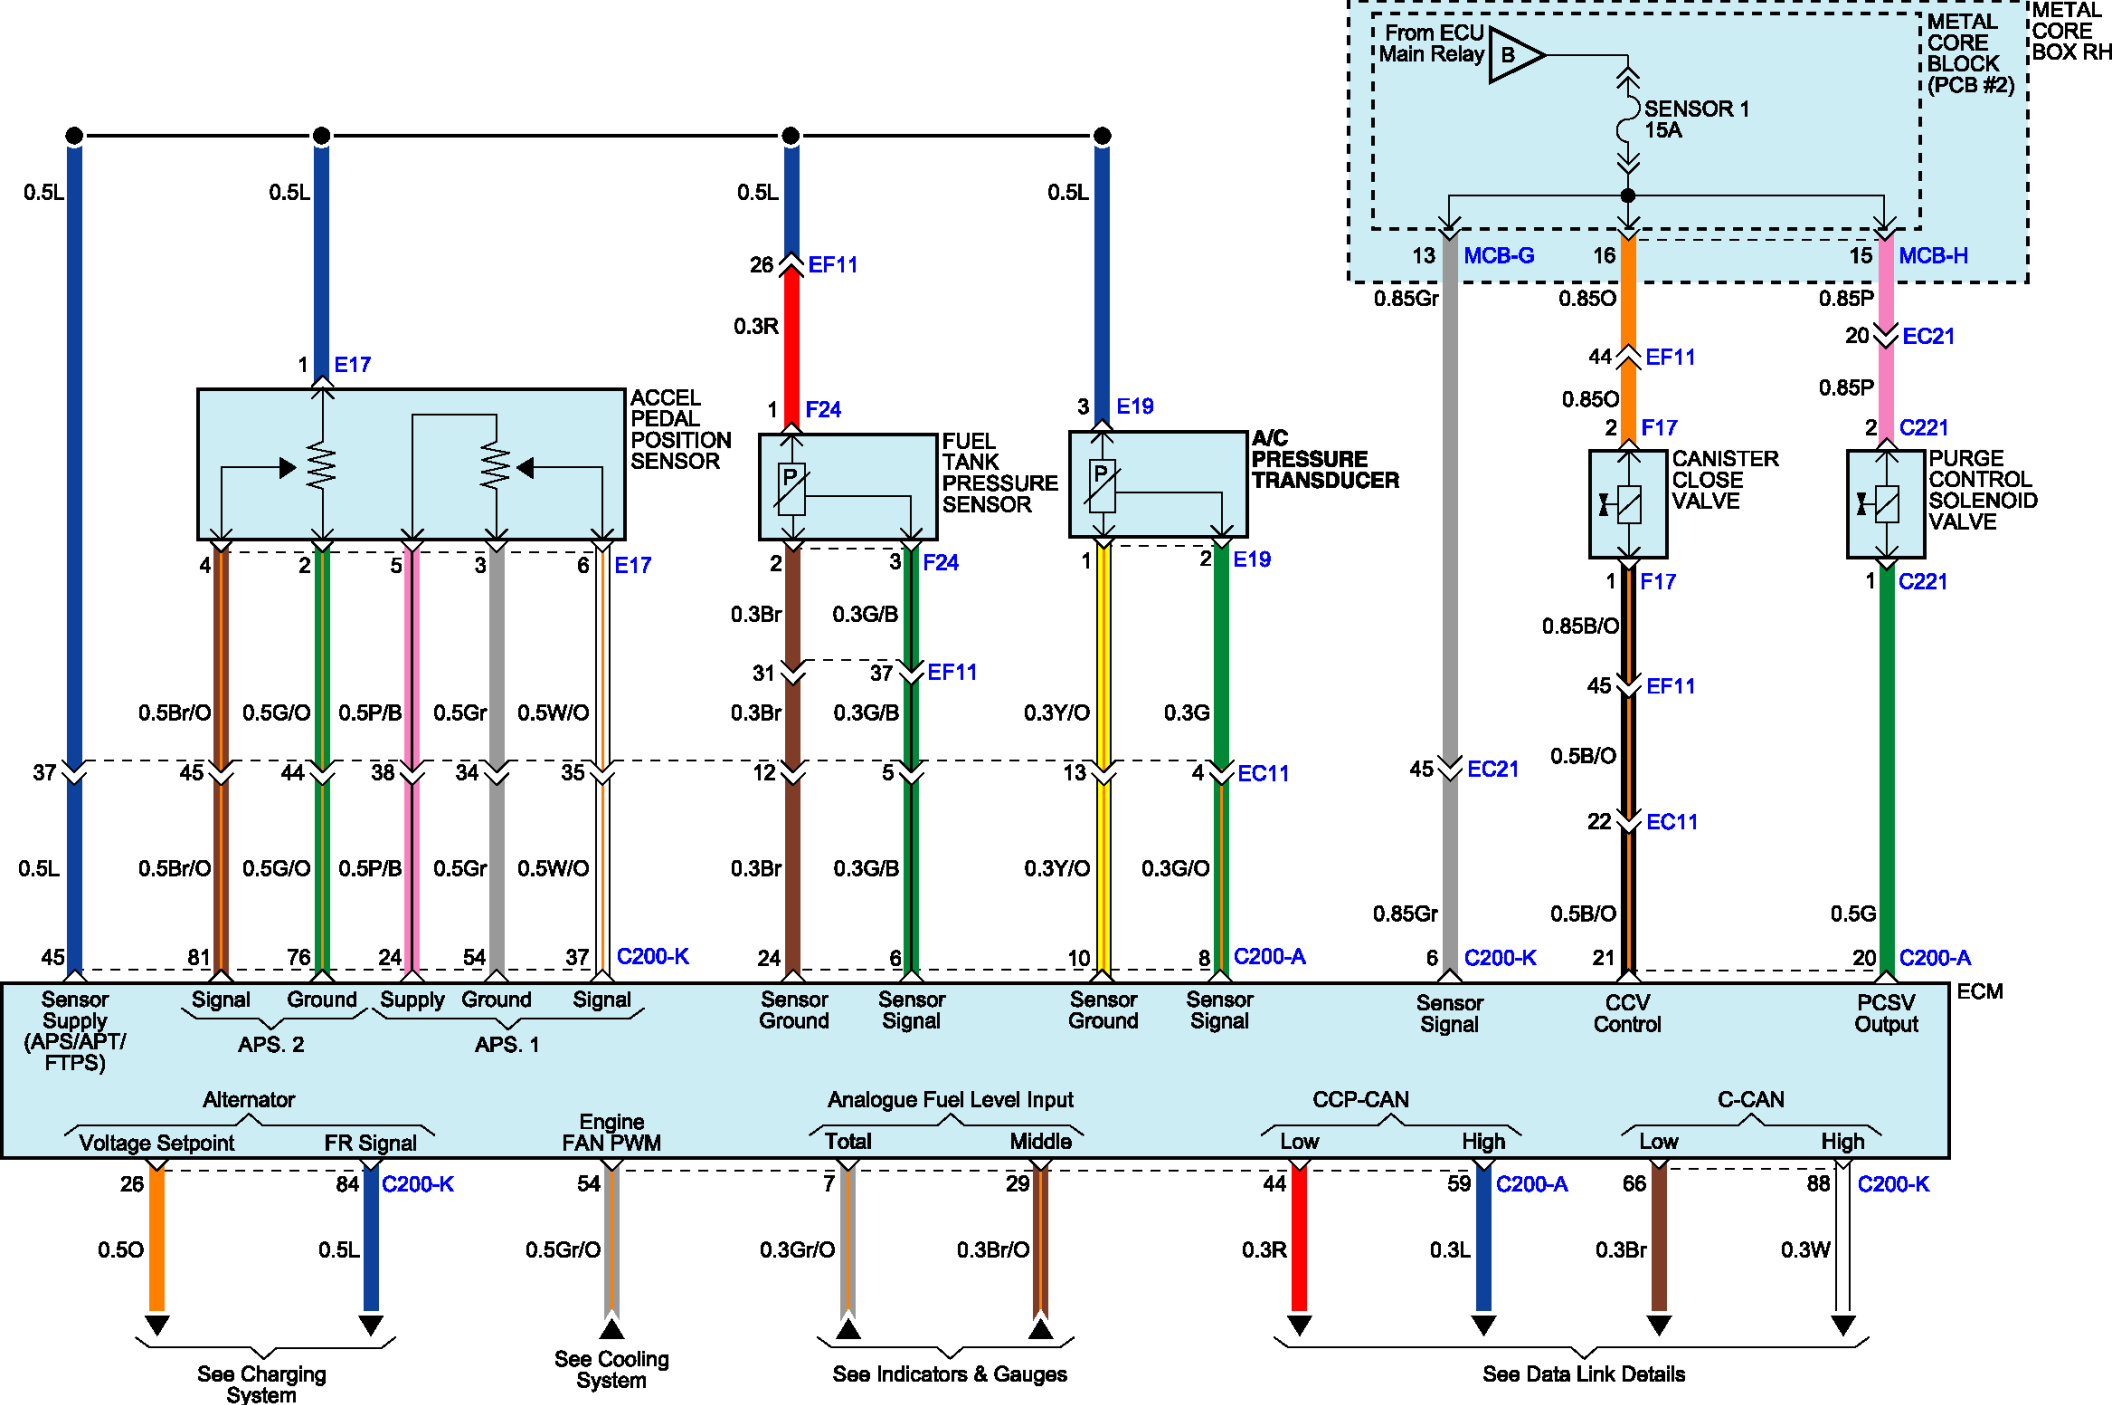

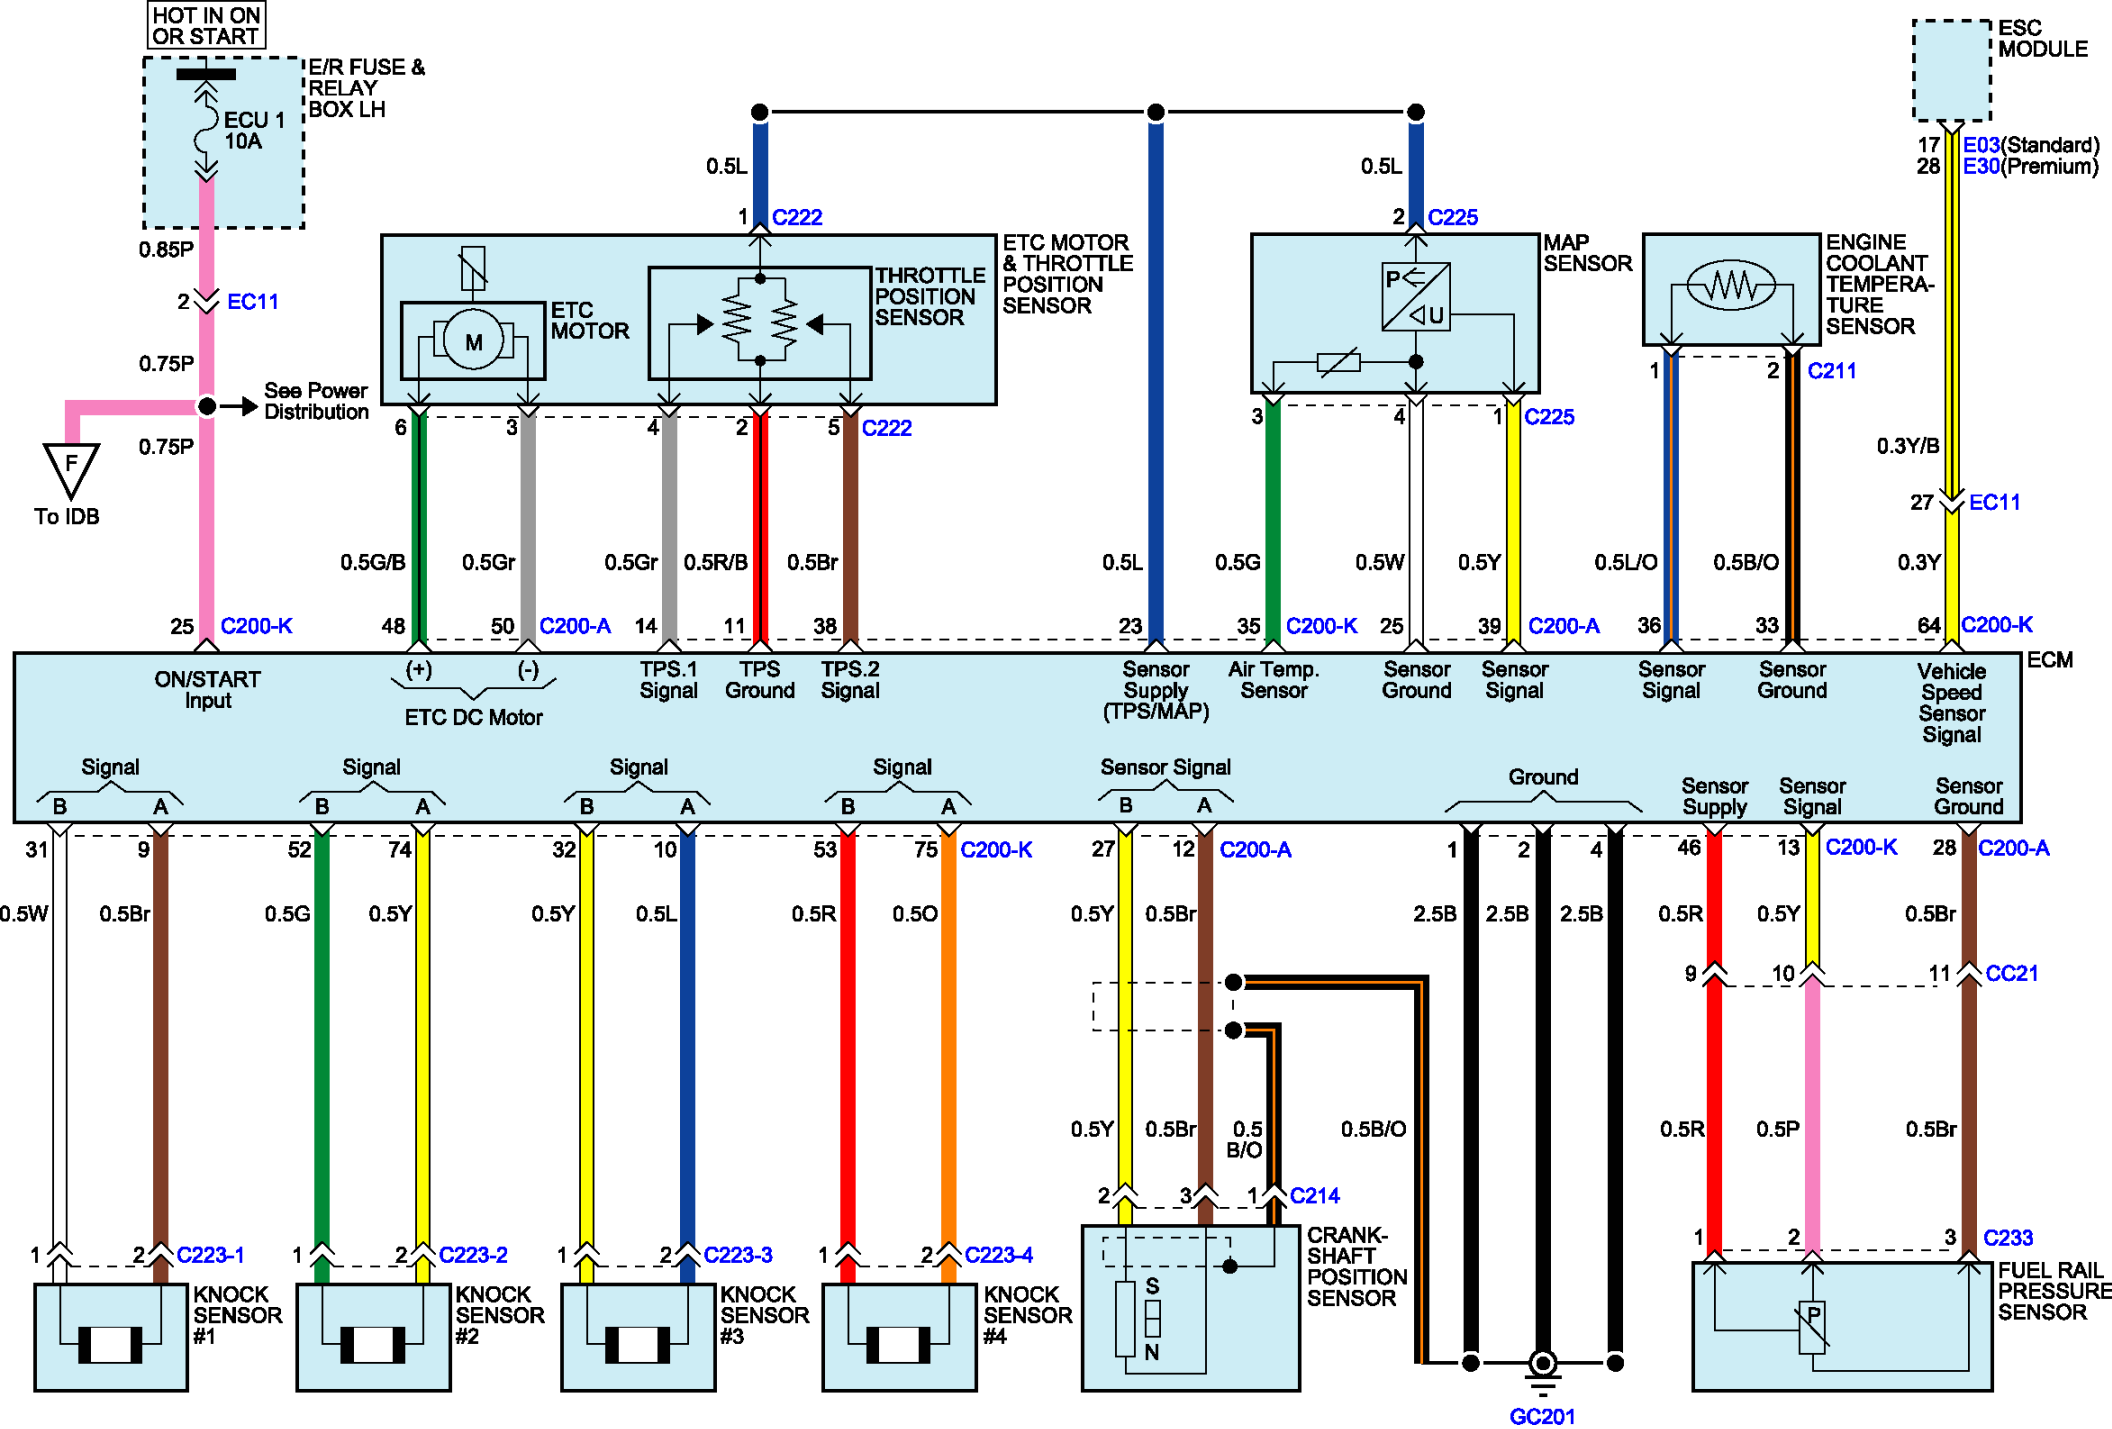

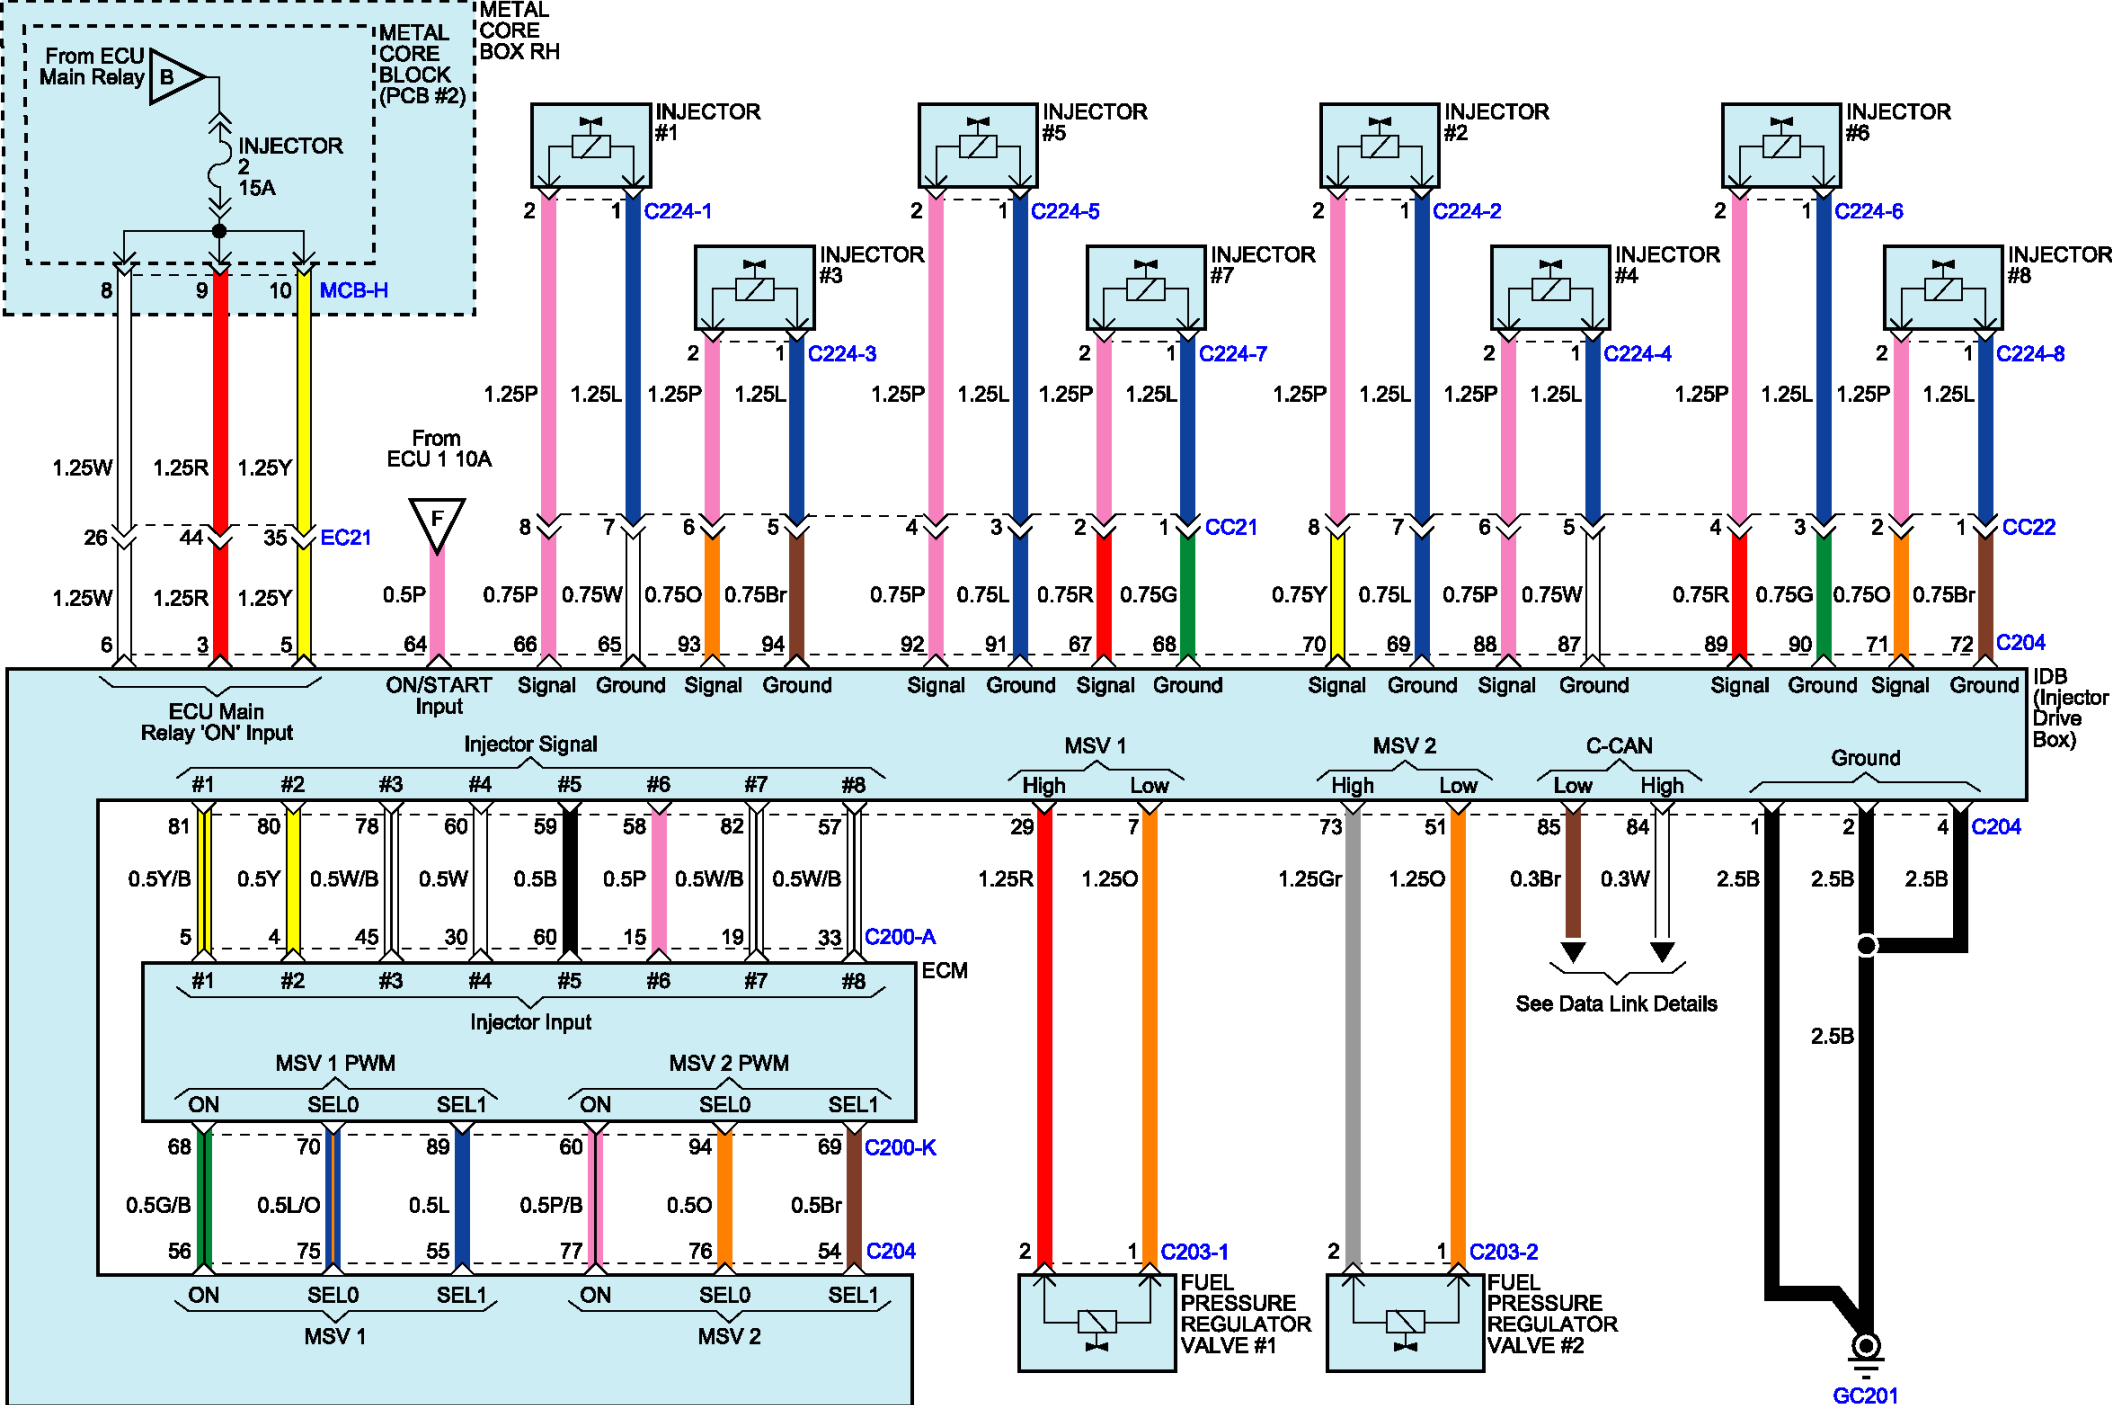

HOT AT ALL TIMES

BATTERY
& BATTERY
FUSE BOX

AMS
10A

2 B/B-E

0.5B

2 F23

SNSR
+
LIN
Line

BATTER
SENSOR

1 F23

0.5L

22 EF21

0.5L

42 EC21

0.5L

8

Battery
Sensor
LIN Line

SMART KEY
CONTROL
MODULE

24

0.3R/O

26

0.3R/O

39

0.3R/O

67

IMMO.
Serial
Communication

23

0.3Gr

38

0.3Gr

17

0.3Gr

3

Engine
Speed
Output

SMART KEY
CONTROL
MODULE

M13-A

EM11

EC11

C200-A

ECM

Standard Type

HOT IN ON OR START

HOT AT ALL TIMES

See Power
Distribution

See Power
Distribution

SMART
JUNCTION
BOX

CLUSTER
10A

MEMORY
1
10A

LEAK
CURRENT
AUTOCUT
DEVICE

See Passenger
Compartment
Fuse Details

14

0.5L

See Passenger
Compartment
Fuse Details

0.5L

39

3

I/P-E

0.5L/O

See Passenger
Compartment
Fuse Details

0.5L/O

40

M08

ENGINE
CHECK
CHECK

IMMO.
CHECK

MICOM

C-CAN
TRANSCIVER

M-CAN
TRANSCIVER

High

Low

High

Low

33

0.3W

32

0.3Br


30


0.3R


31


0.3L


See Data
Link Details

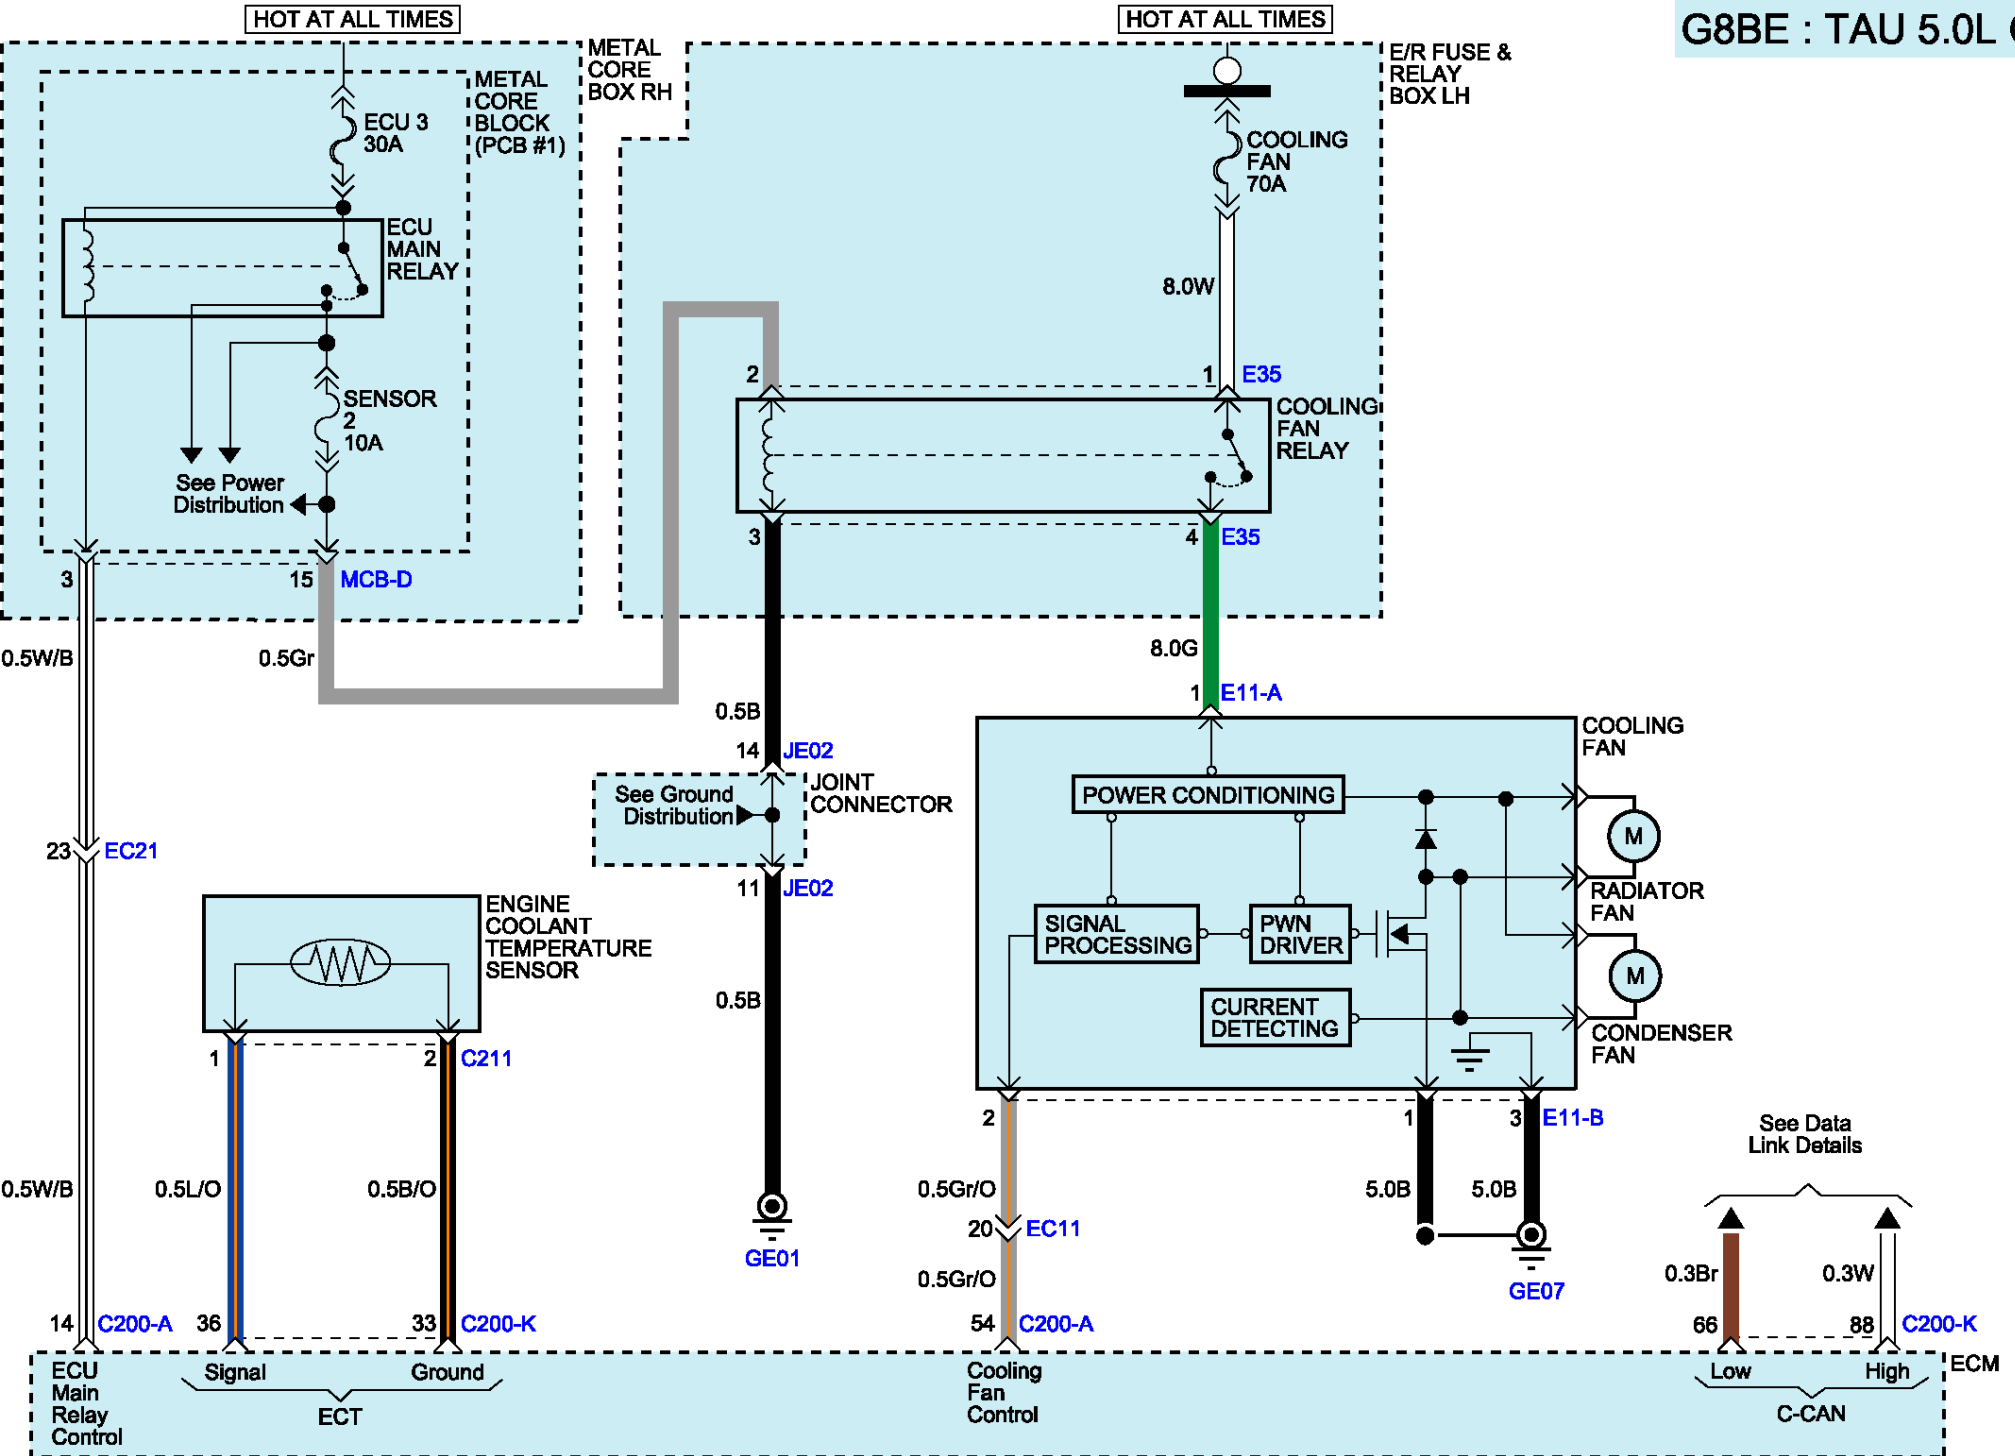

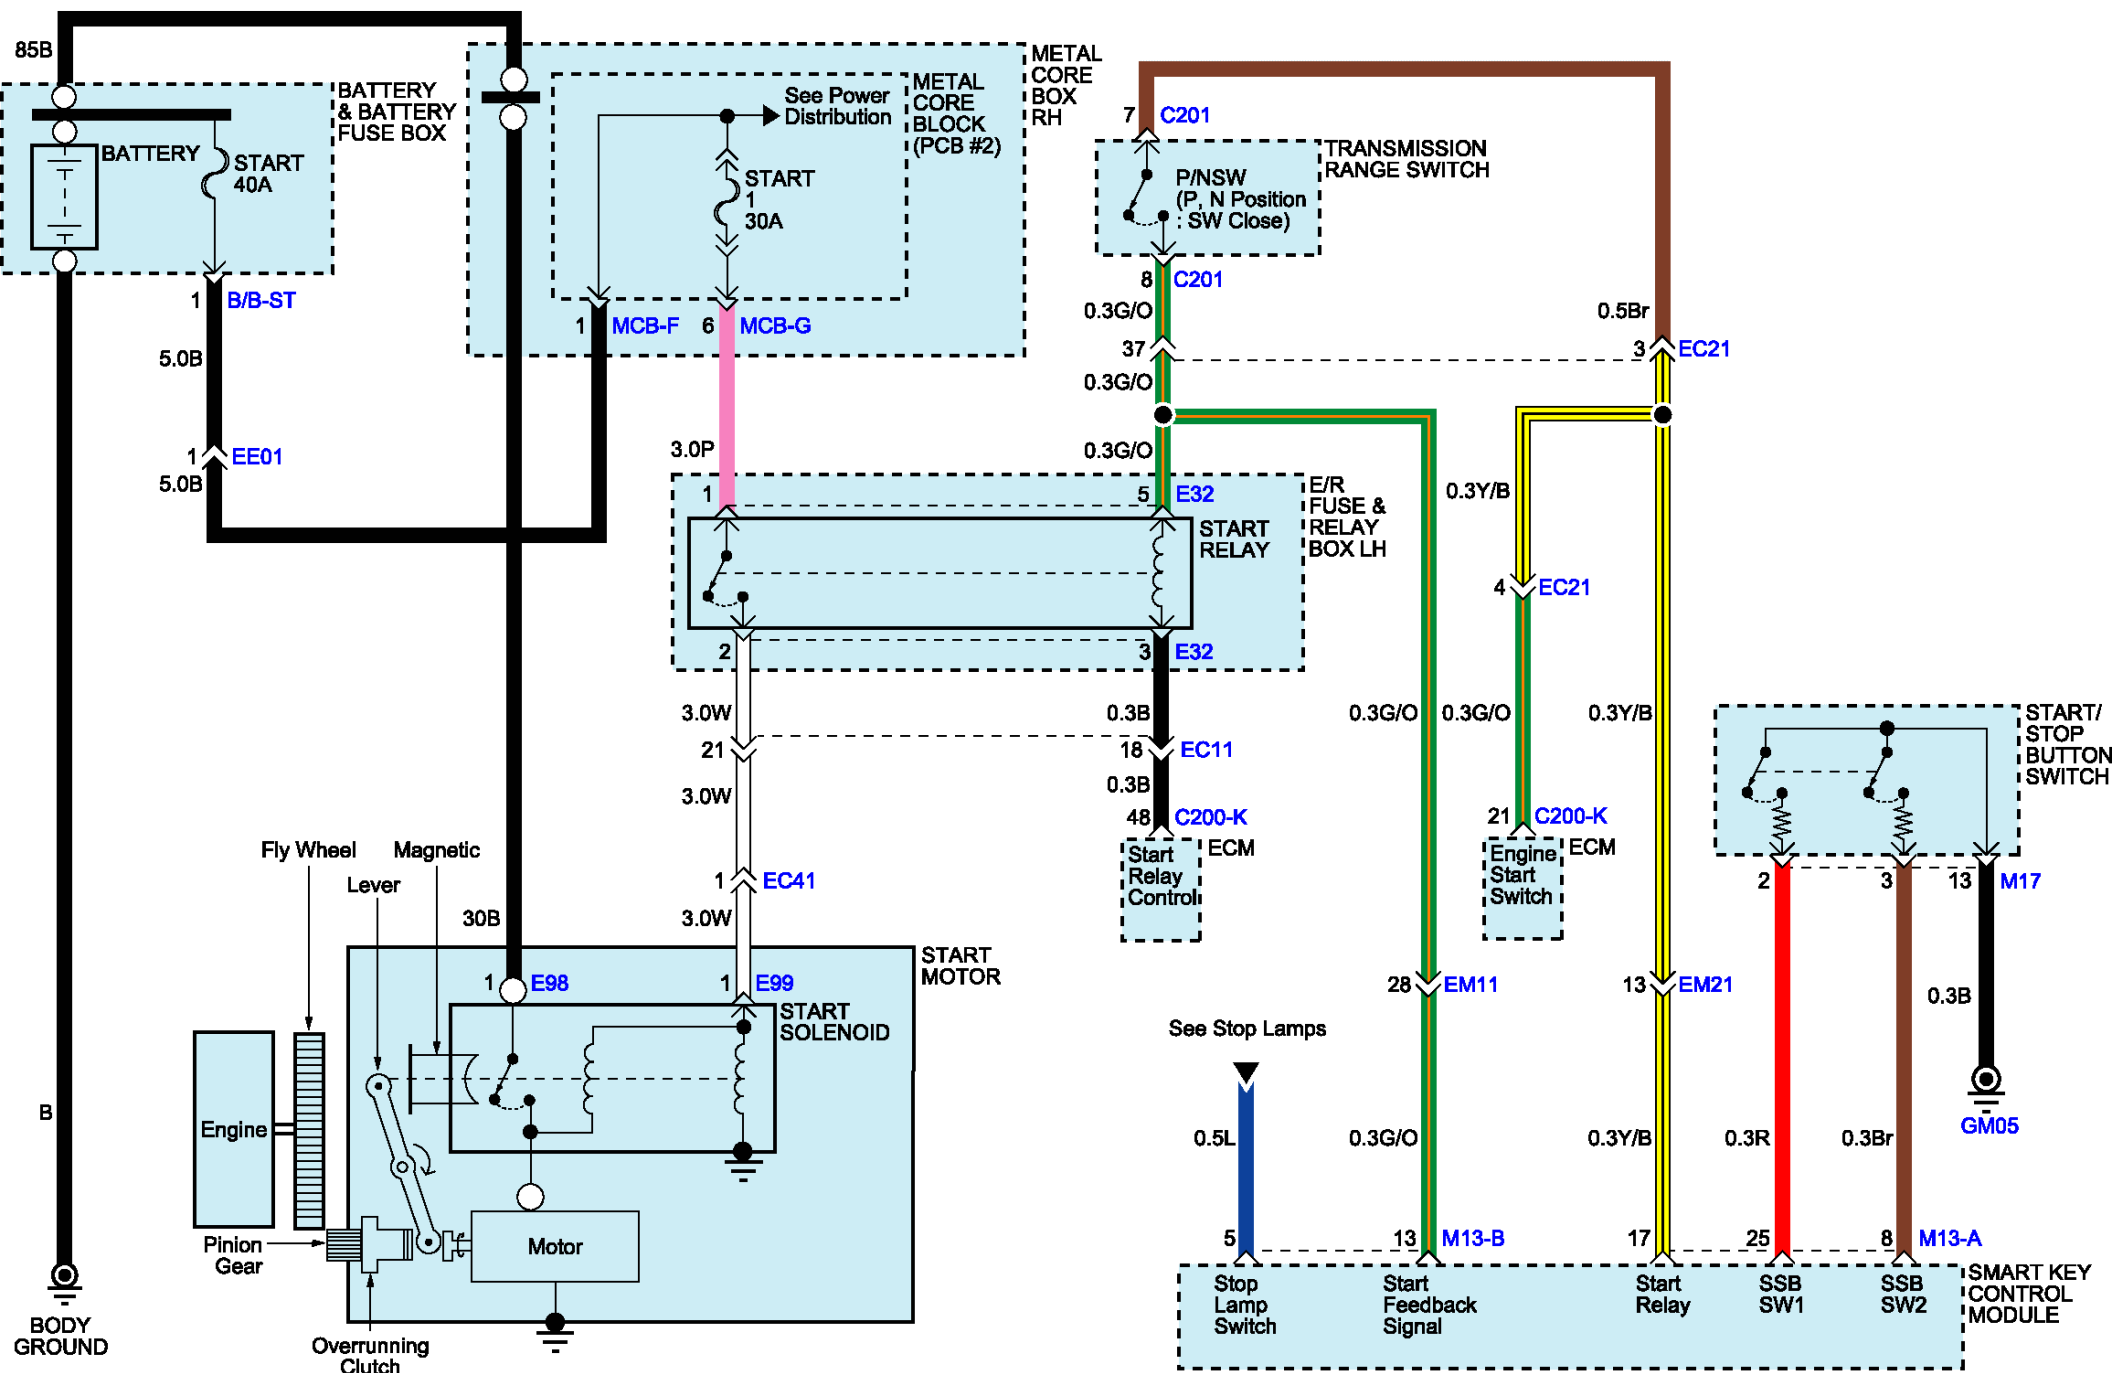


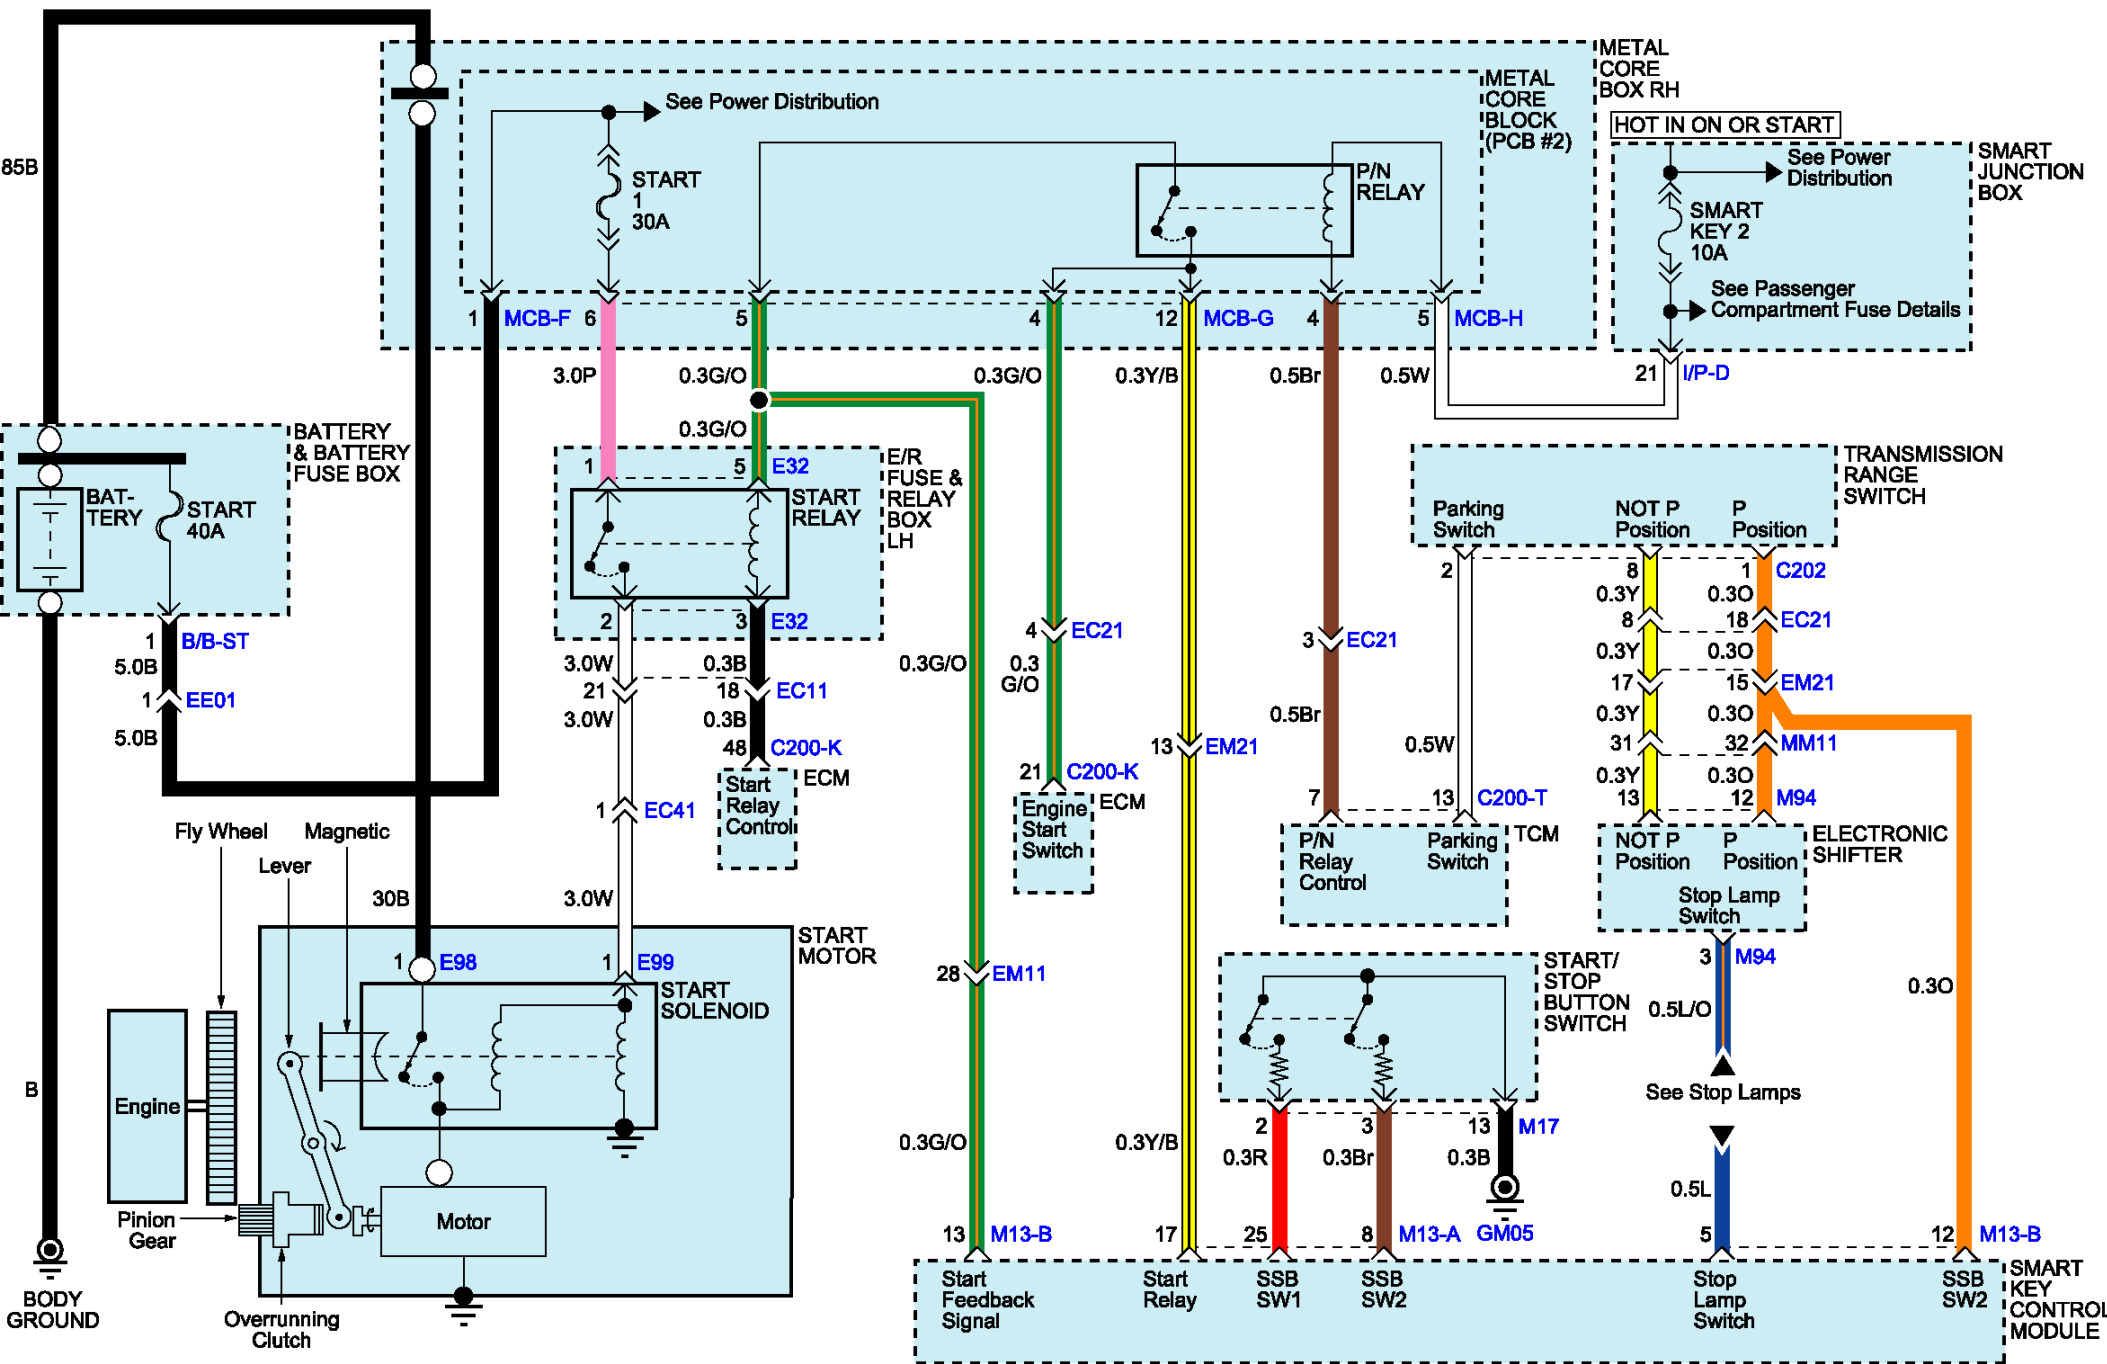


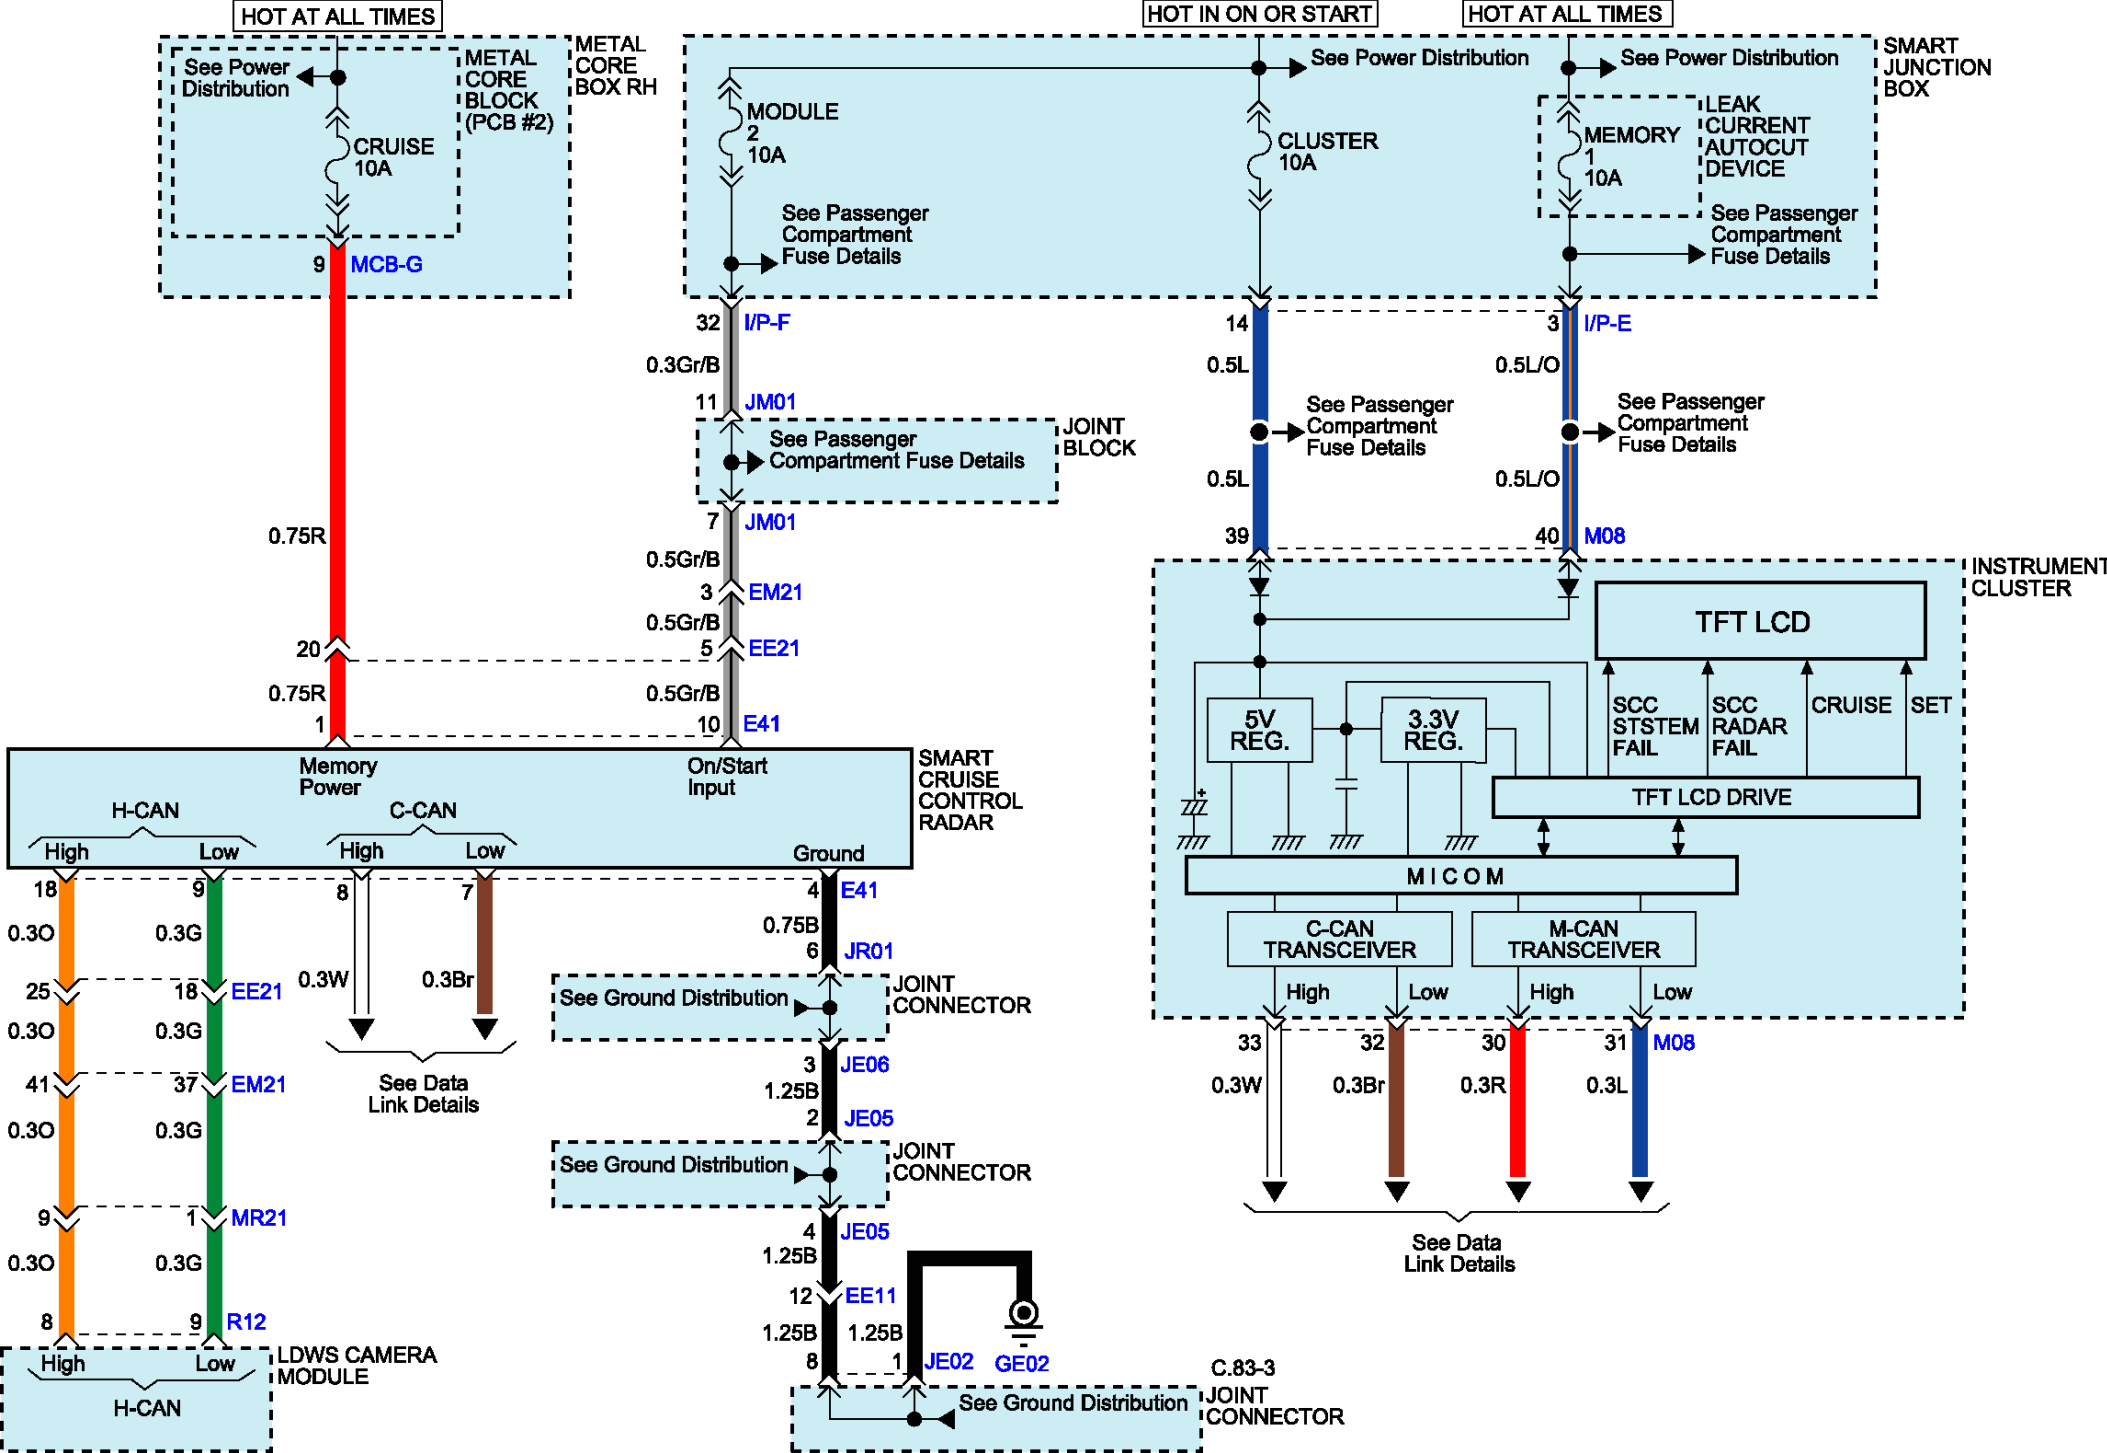

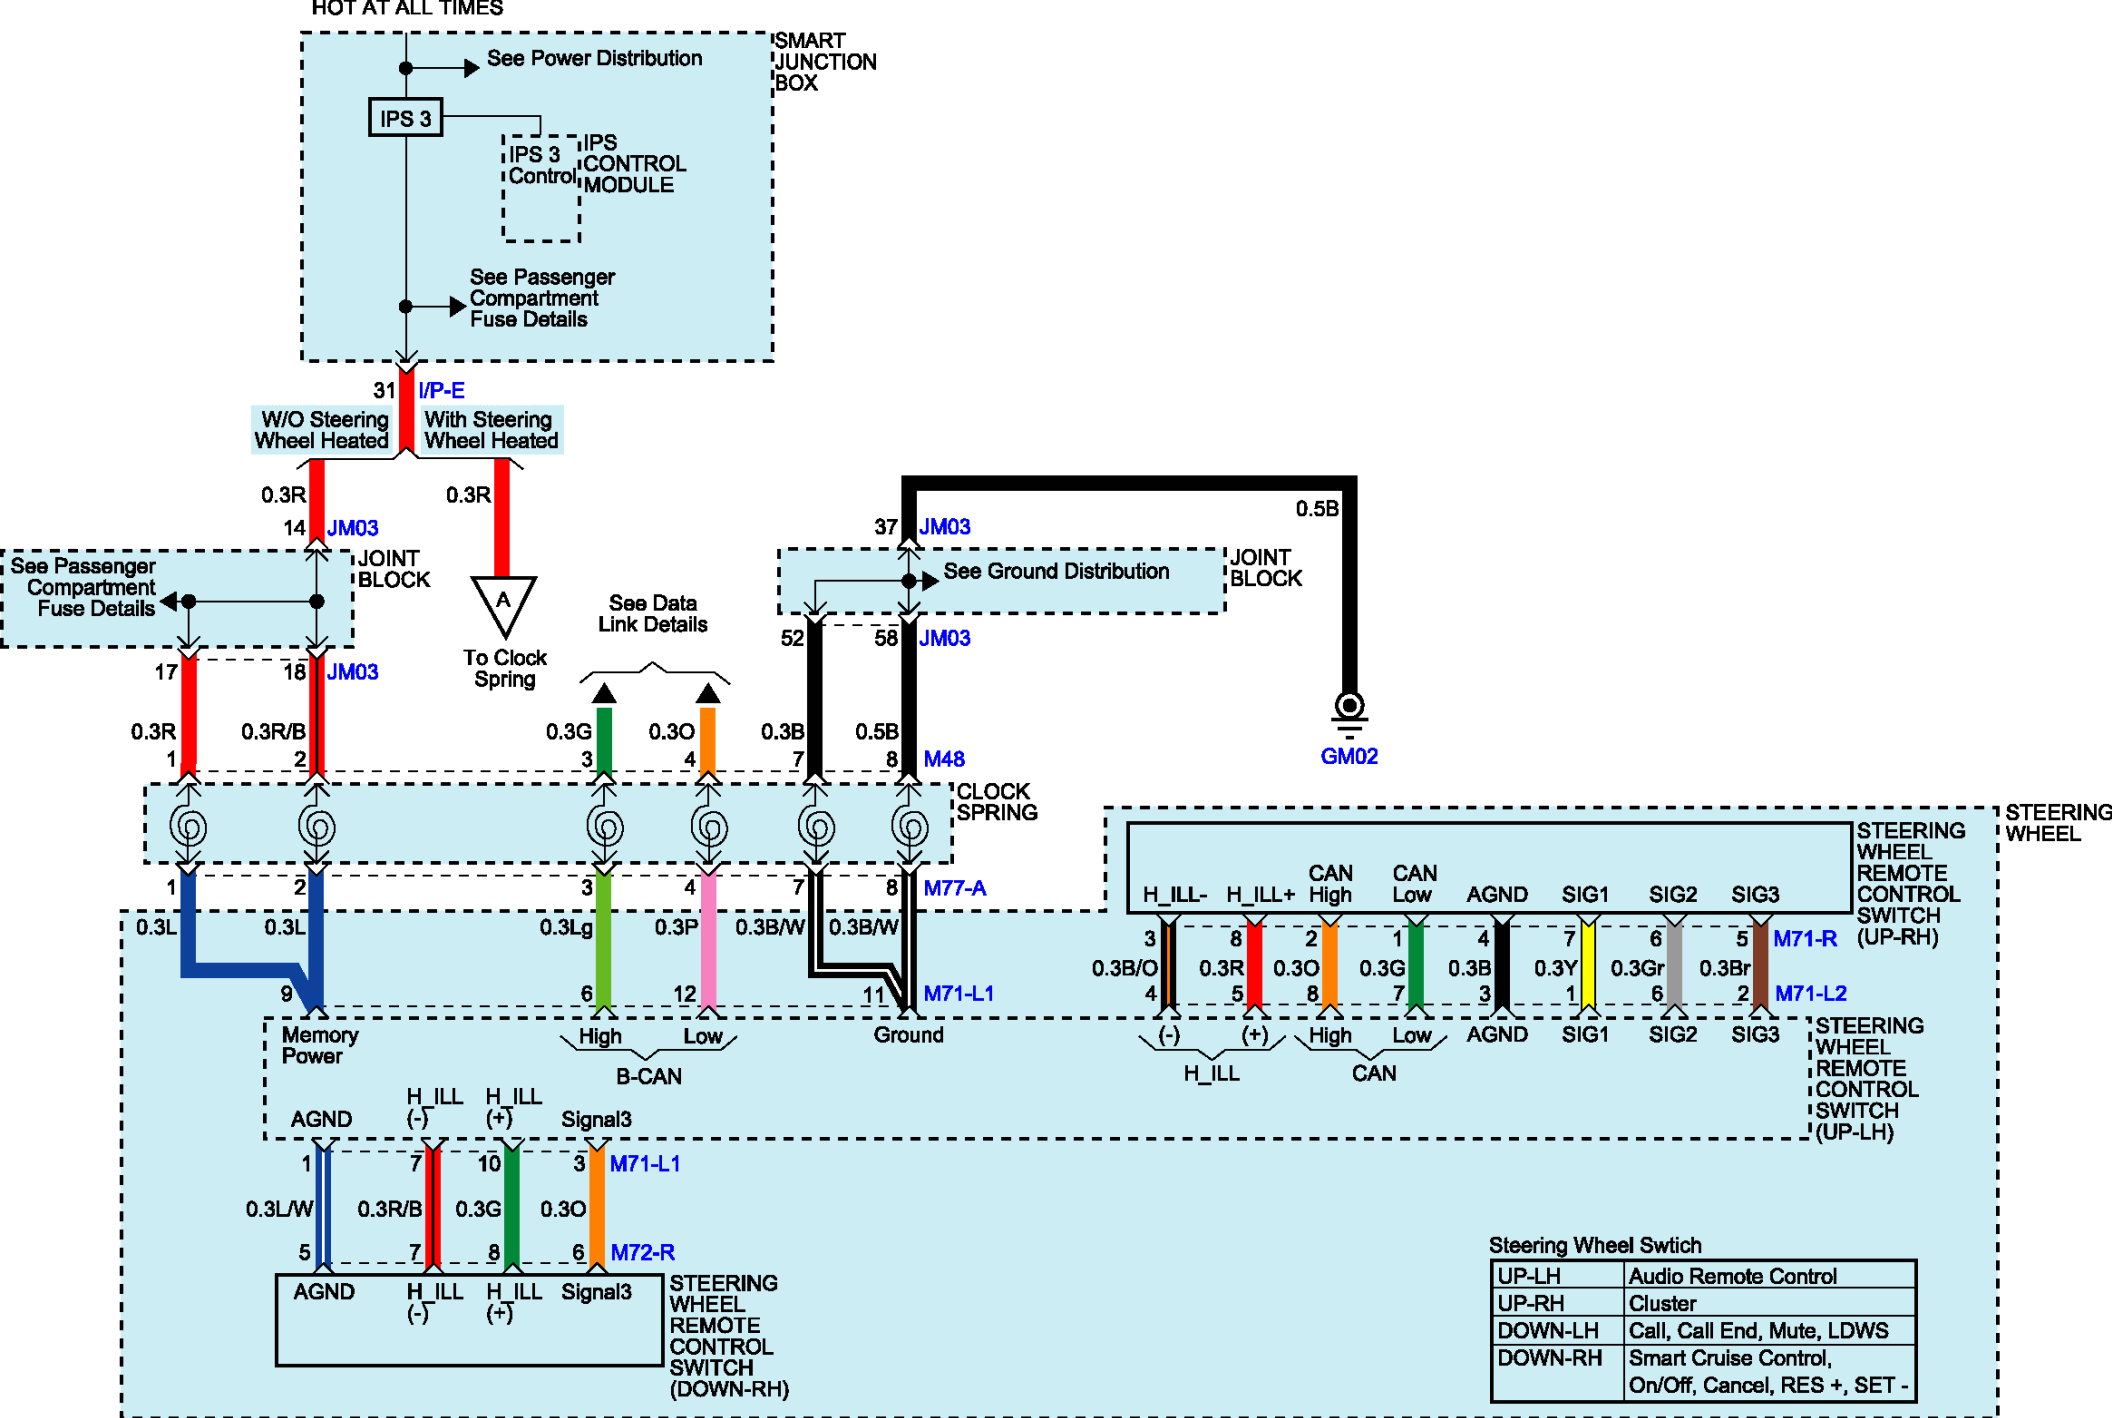

From IPS 3

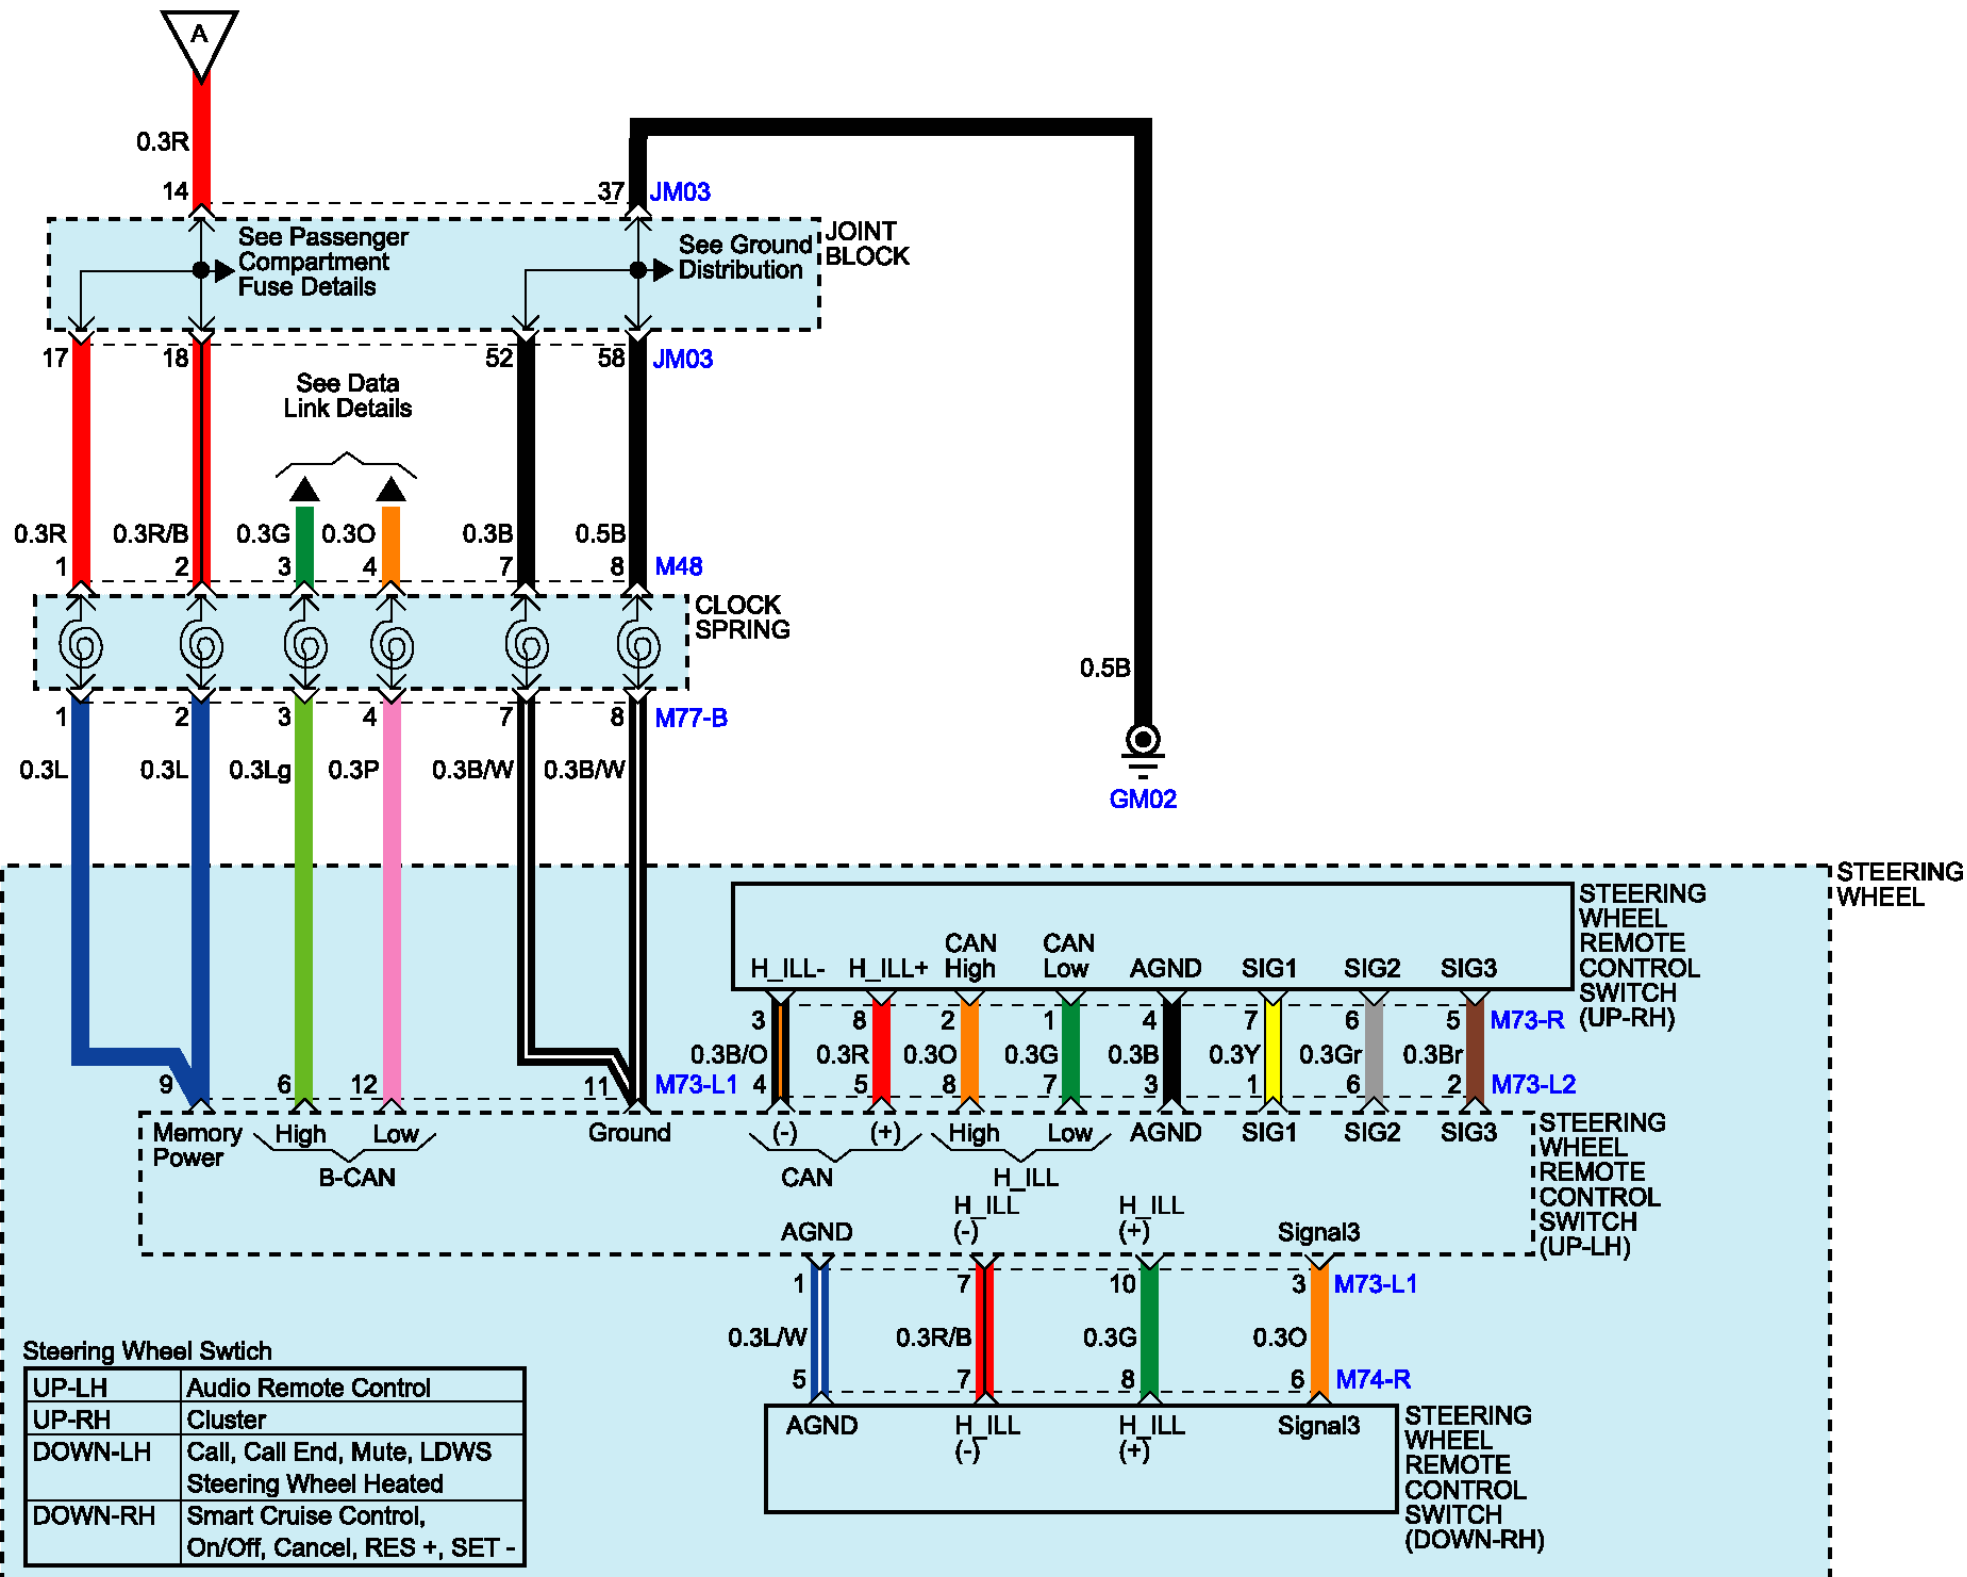


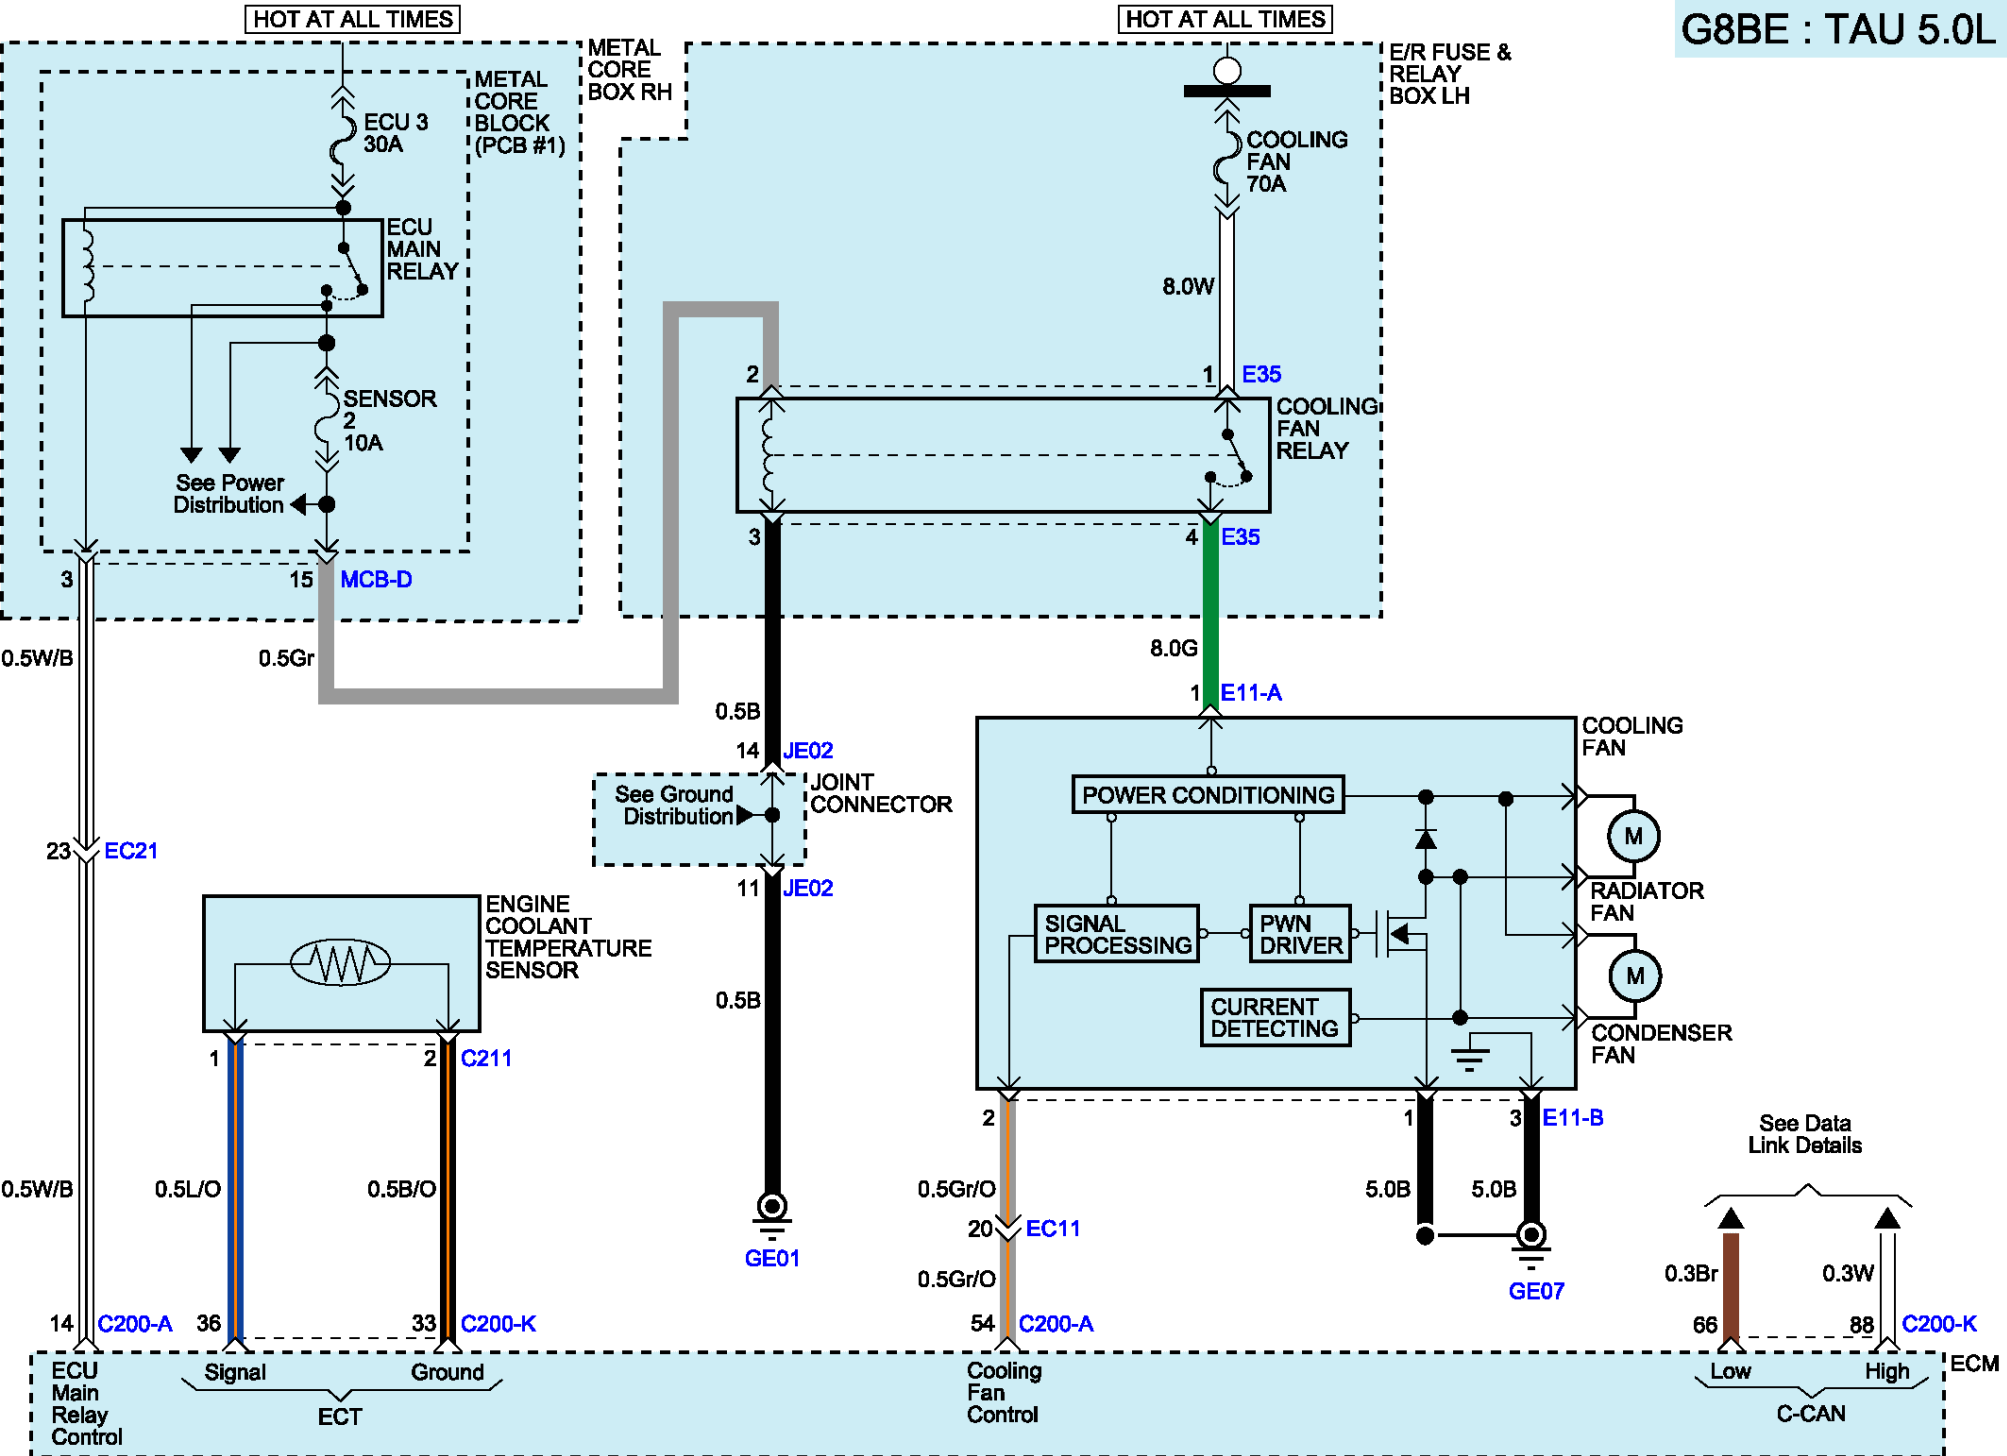

Standard Type

HOT IN ON OR START

HOT AT ALL TIMES

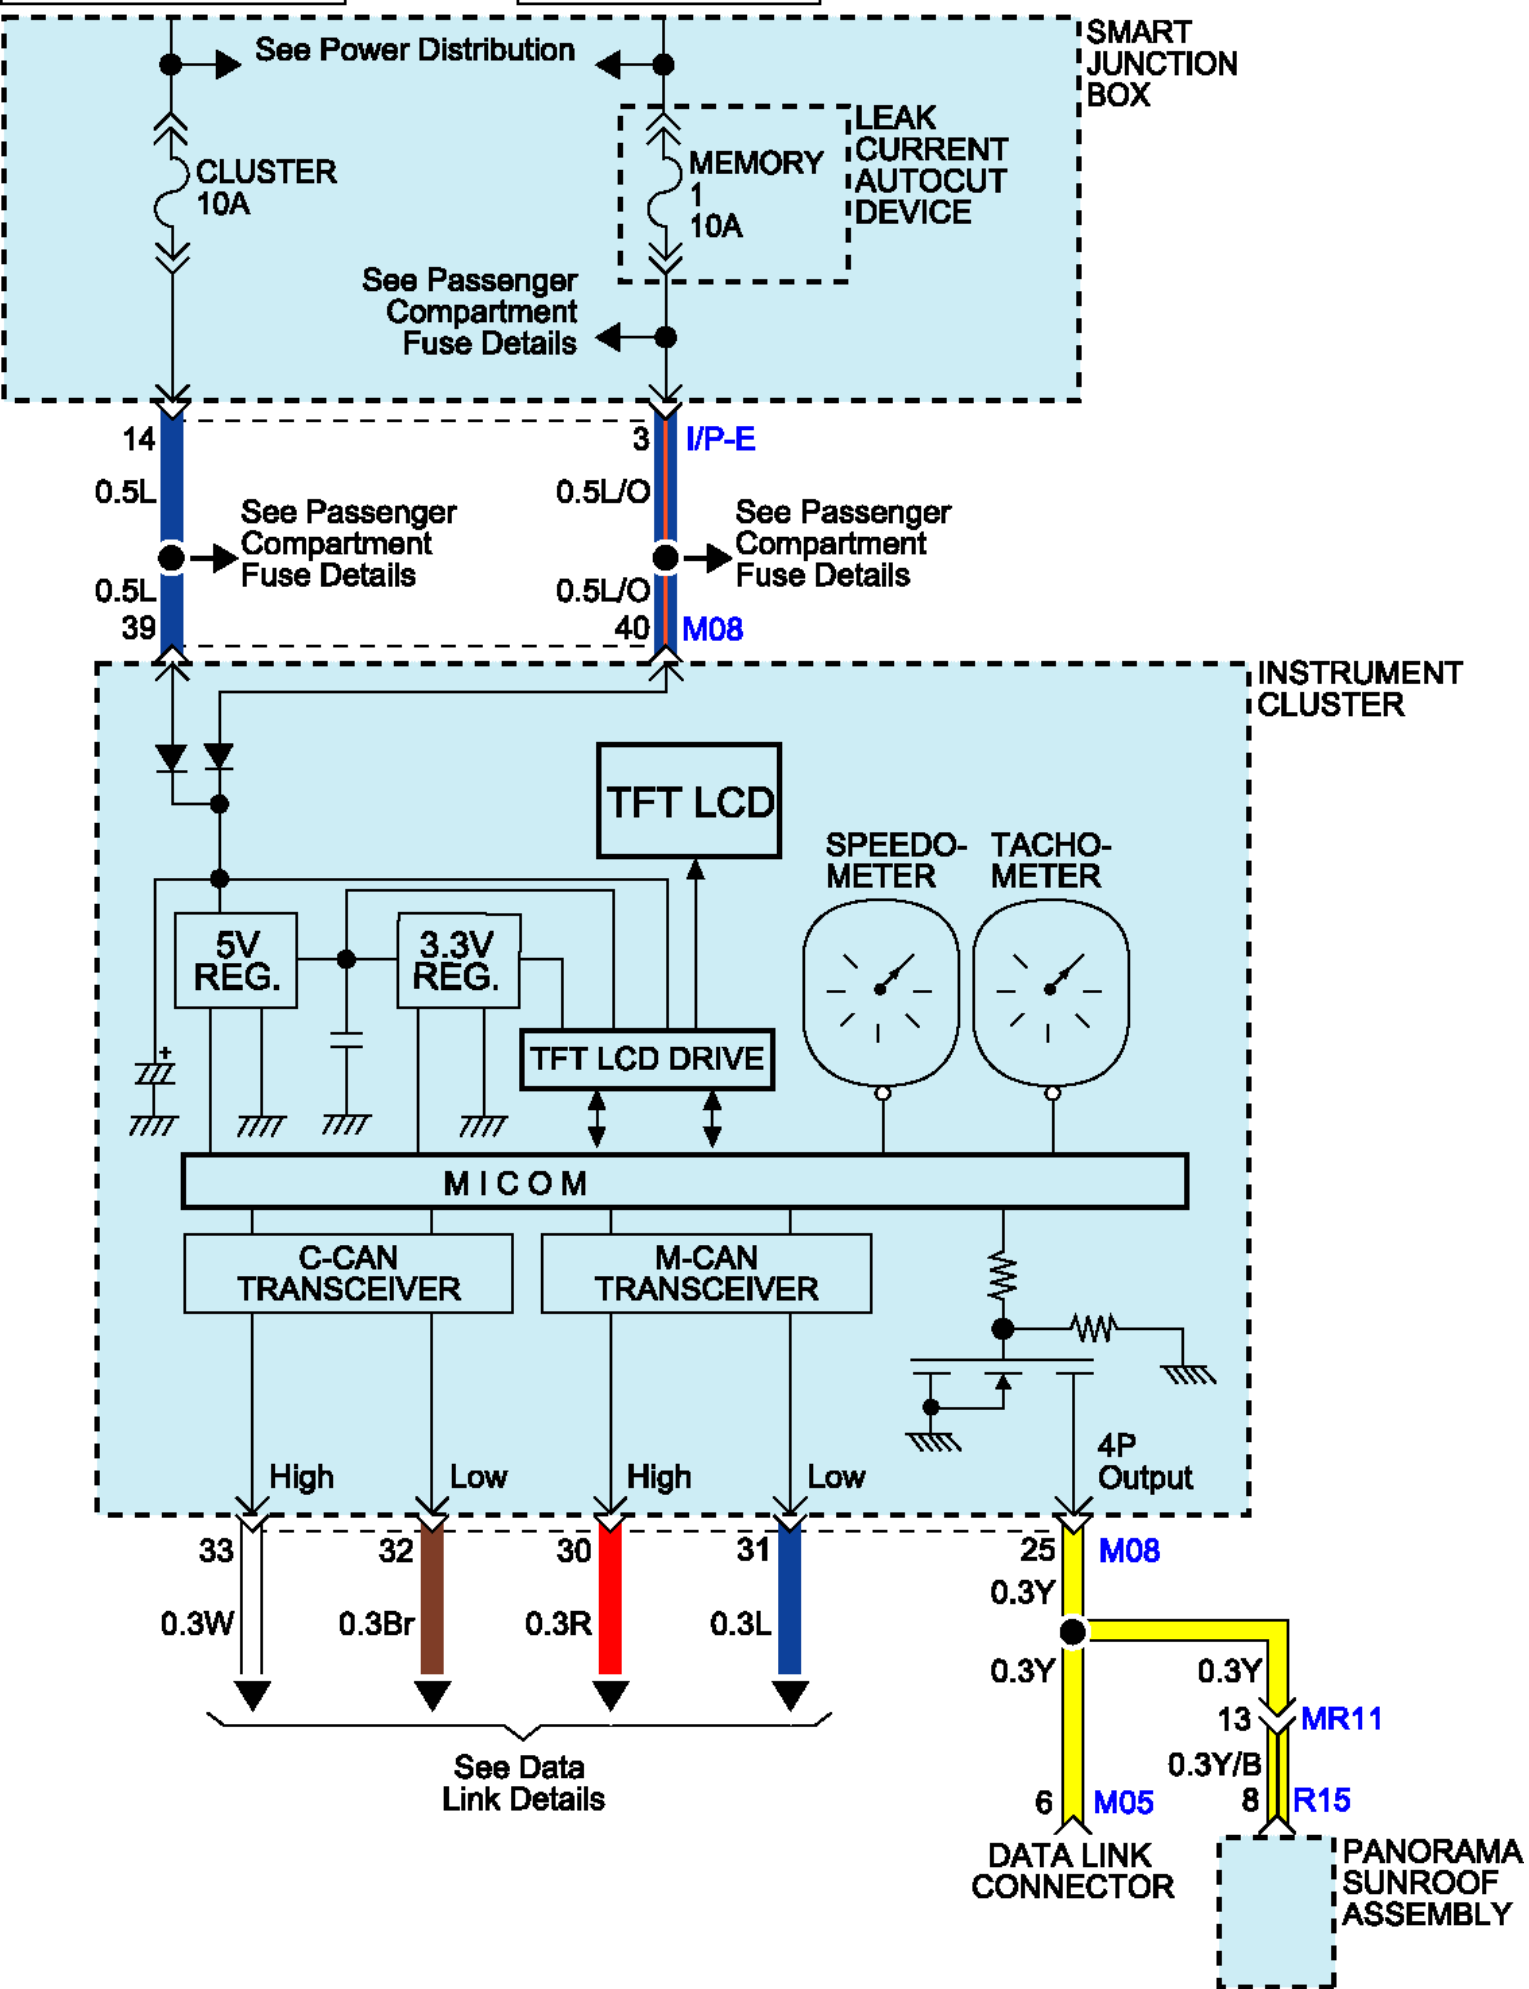

Deluxe Type

HOT IN ON OR START

HOT AT ALL TIMES

