

Customer Experience Center  
1-800-331-4331



*moving forward ▶*

# ***YARIS*** LIFTBACK



***2007***  
***Pocket Reference Guide***

# 2007 YARIS Liftback

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris.


## ! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of Yaris operations. Every Yaris owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.


## Child comfort guide

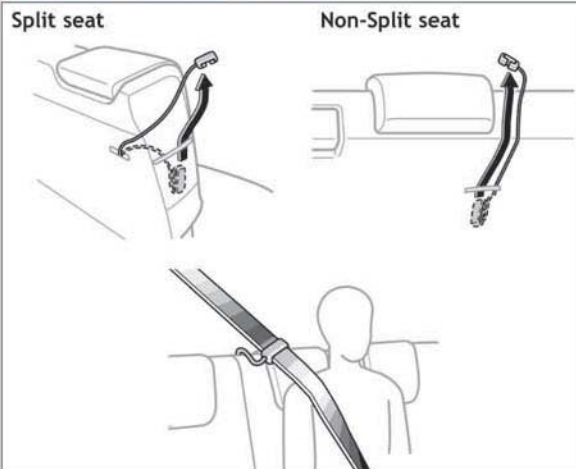


Rear seat center position guides provide added comfort for children who have outgrown child restraints.

## Spare tire & tools

### Tool location

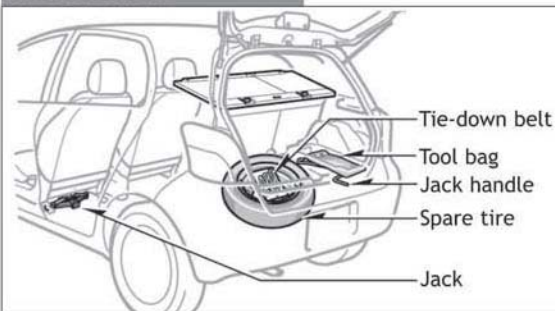

### Removing the spare tire

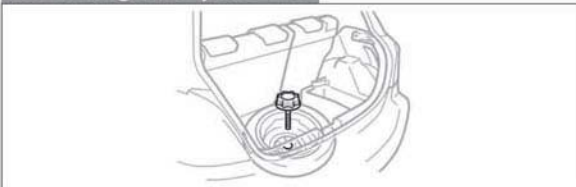

Loosen and remove the bolt.


Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

# INDEX


Item	Page no.
<b>OVERVIEW</b>	
Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	6
<b>FEATURES/OPERATIONS</b>	
Air Conditioning/Heating	13
Audio	14
Automatic Transmission	8
Bottle holders	15
Clock	13
Cup holders	15
Door-Back	12
Light control-Instrument panel	11
Lights & turn signals	11
Luggage storage box	15
Parking brake	8
Power outlet	13
Seat adjustments-Front	9
Seat adjustments-Rear	9
Seat-Folding rear seat	10
Seats-Head restraints	9
Tilt steering wheel	8
Windows-Power	12
Windshield wiper & washer	12
<b>SAFETY AND EMERGENCY FEATURES</b>	
Child comfort guide	17
Door locks	16
Seat belts	16
Spare tire & tools	17

# OVERVIEW

## Instrument panel

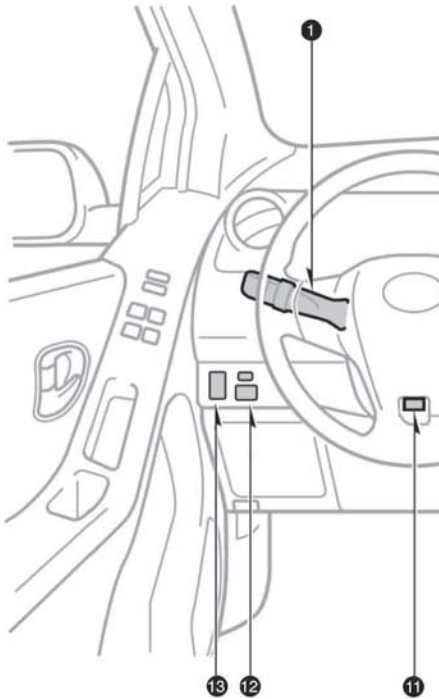


- ❶ Headlight, turn signal and front fog\* light controls
- ❷ Wiper and washer controls
- ❸ Emergency flasher switch
- ❹ Audio system\*
- ❺ "AIRBAG ON" and "AIRBAG OFF" indicator
- ❻ Front passenger seat belt reminder light
- ❼ Rear window defogger switch
- ❽ 12V DC Power outlet

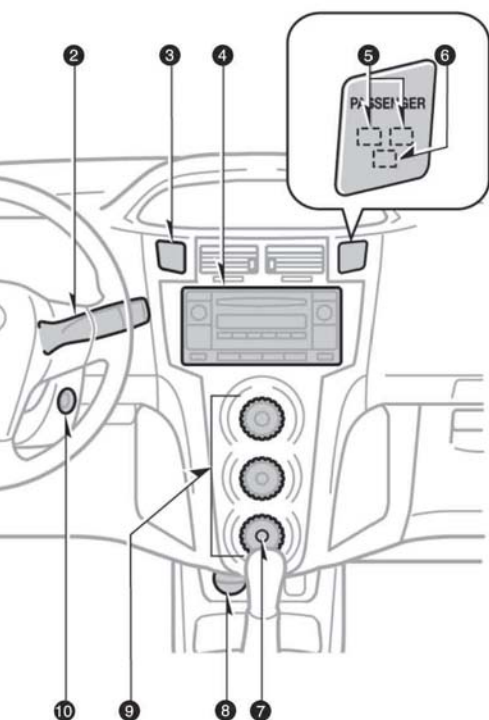

- 9 Air Conditioning controls
- 10 Ignition switch
- 11 Tilt steering lock release lever
- 12 Power rear view mirror control switches
- 13 Instrument panel light control

\* If equipped


## Instrument cluster

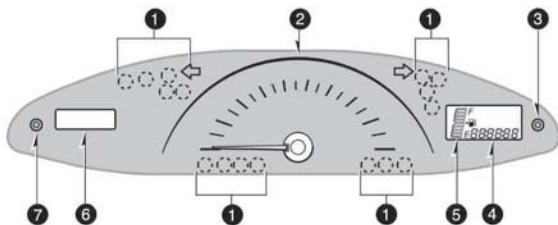


 
- ① Service indicator and reminder
- ② Speedometer
- ③ Trip meter reset knob
- ④ Odometer and two trip meters
- ⑤ Fuel gauge
- ⑥ Clock
- ⑦ Clock reset knob

## Indicator symbols


**BRAKE** Brake system warning<sup>1</sup>


 Driver seat belt reminder<sup>1</sup>  
(Alarm will sound if speed is over 12 mph.)

**PASSENGER**  
 Front passenger seat belt reminder<sup>1</sup>  
(Alarm will sound if speed is over 12 mph.)

 Charging system warning<sup>1</sup>

 Malfunction/Check Engine indicator<sup>1</sup>













 Low engine oil pressure warning<sup>1</sup>

 Open door warning<sup>1</sup>

 Airbag SRS warning<sup>1</sup>

**P/S** Electric power steering system warning<sup>1</sup>

<sup>1</sup> For details, refer to "Service reminder indicators and warning buzzers," Section 1-6, 2007 Owner's Manual.

	Low windshield washer fluid level warning <sup>1</sup>
	Engine oil replacement reminder <sup>1</sup>
	"AIRBAG ON" indicator
	"AIRBAG OFF" indicator
	Headlight low beam indicator
	Headlight high beam indicator
	Front fog light indicator
	Turn signal indicator
	Low fuel level warning <sup>1</sup>
	High engine coolant temperature warning <sup>1</sup>
	Low engine coolant temperature indicator <sup>2</sup>
	Anti-lock brake system warning <sup>1</sup>


### CAUTION

When the anti-lock brake system (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

<sup>2</sup> For details, refer to "Engine coolant temperature indicators and warning light," Section 1-6, 2007 Owner's Manual.



## Fuel tank door release and cap

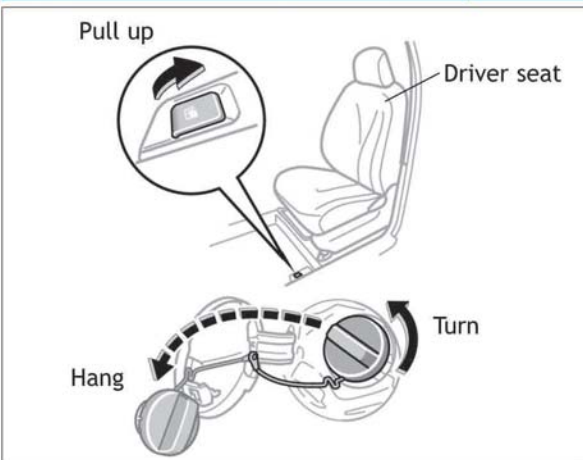

**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

## Keyless entry (if equipped)

### Locking operation



### Unlocking operation

Push ONCE: Driver door  
TWICE: All doors



**NOTE:** After unlocking, if a door is not opened within 30 seconds, all doors will relock for safety.


### Alarm operation

Push and hold






## Hood release

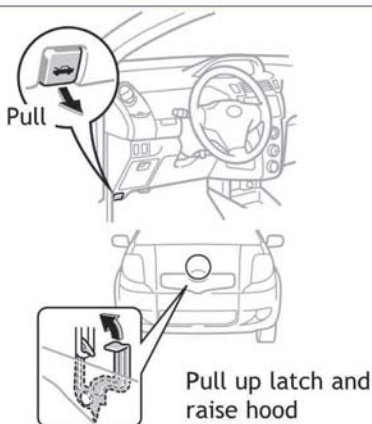

## Engine maintenance

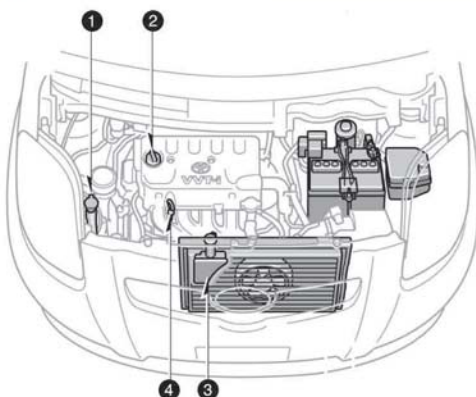


- ❶ Windshield washer and rear window washer fluid tank
- ❷ Engine oil filler cap
- ❸ Engine coolant reservoir
- ❹ Engine oil level dipstick

**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

# FEATURES/OPERATIONS

## Automatic Transmission (if equipped)

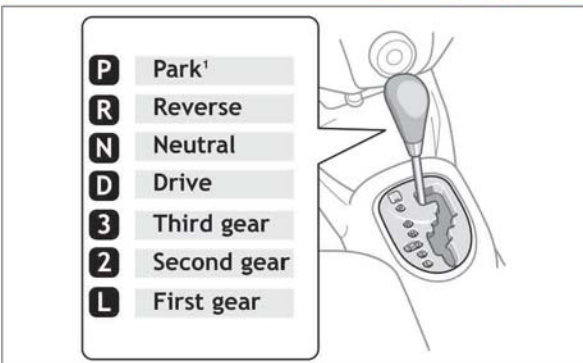

<sup>1</sup> The ignition switch must be ON, and the brake pedal depressed.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


## Tilt steering wheel




Hold wheel, push lever down, set angle then return lever.

**Note:** Do not attempt to adjust while the vehicle is in motion.

## Parking brake

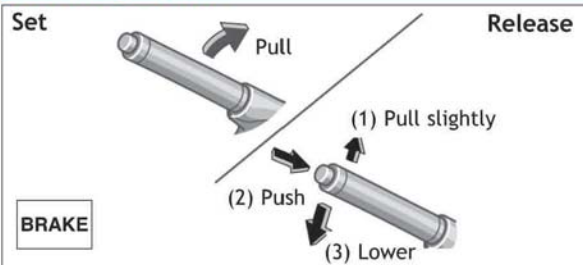

## Seat adjustments-Front

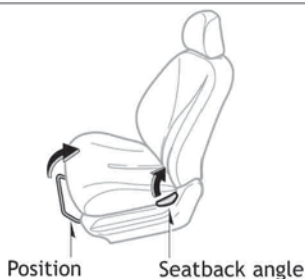

## Seat adjustments-Rear

### Split seat

Seatback angle/Fold  
Position




### Non-Split seat




## Seats-Head restraints


### Front seats

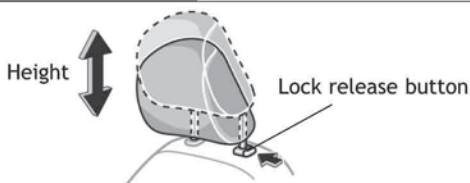

### Rear seats (Split seat)

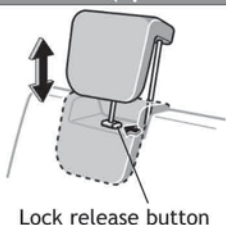


### Rear seats (Non-Split seat)

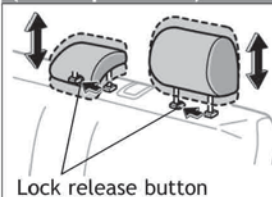


## Seat-Folding rear seat


### Before folding

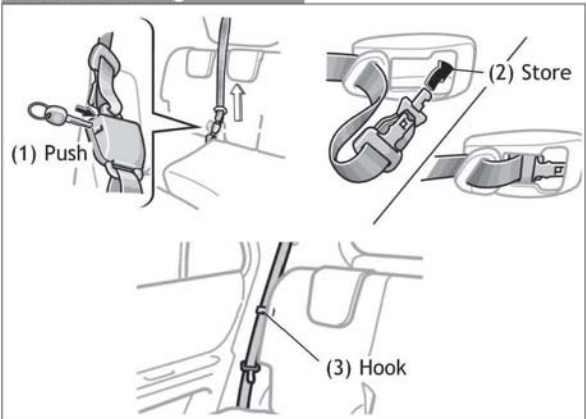

### Fold (Split seat)

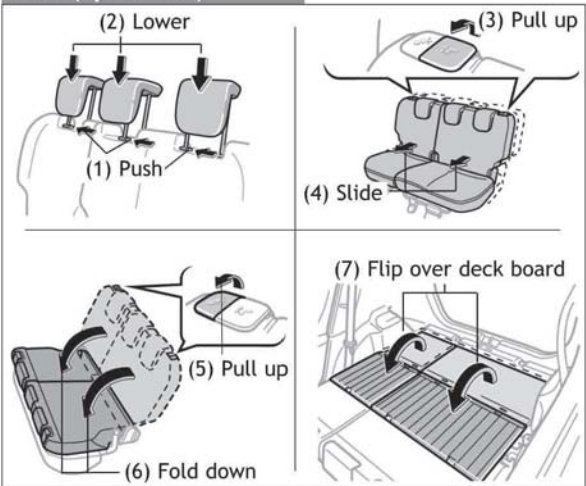


### Fold (Non-Split seat)

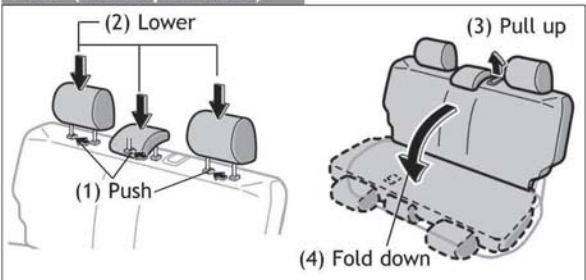

## Lights & turn signals

### Headlights

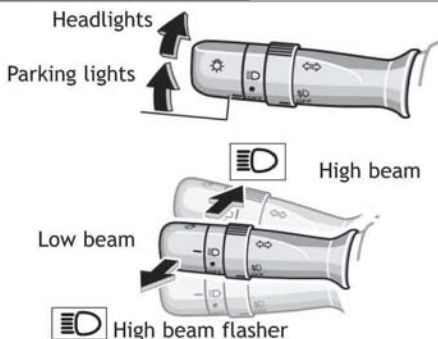


### -Daytime Running Light system (DRL)<sup>1</sup>

Automatically turns on the headlights at a reduced intensity.

<sup>1</sup> If equipped

### Turn signals

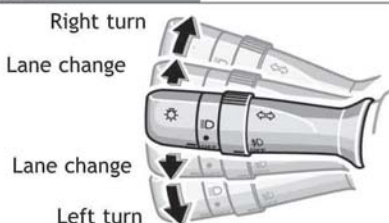

### Front fog lights (if equipped)



Front fog lights turn on only when the headlights are on low beam.


## Light control-Instrument panel

Brightness control




## Windshield wiper & washer

### Front

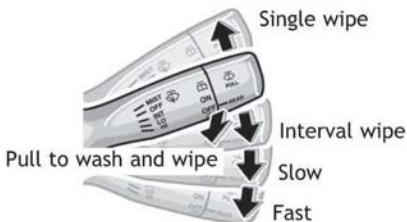


### Rear

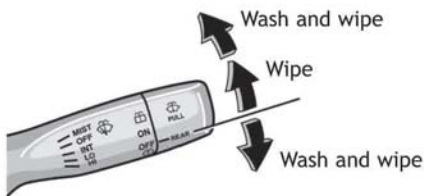


## Windows-Power (if equipped)

### Driver side

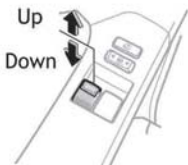

### Window lock switch

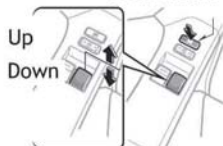


### Window operation


**Automatic operation (Driver side only)** Push the switch completely down and release to fully open. To stop window mid-way, lightly pull the switch up.

## Door-Back

### Open/Close

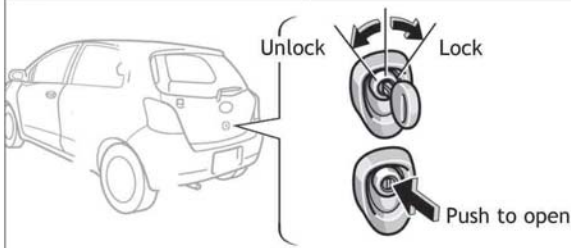

## Air Conditioning (if installed)/Heating

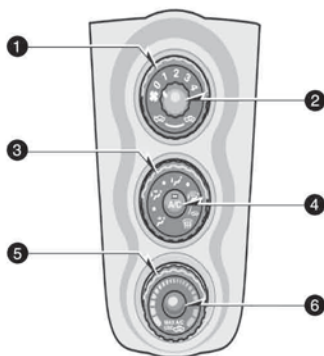

- ① Fresh or recirculate cabin air
- ② Fan speed
- ③ Air flow vent  
In "🚗" or "🚗" mode, use fresh air to reduce window fogging.
- ④ Air Conditioning ON/OFF\*
- ⑤ Temperature
- ⑥ Rear defogger\*

\* If equipped

## Clock



Refer to the *Owner's Manual* for adjustment instructions.


## Power outlet



Designed for 12V car accessories. Key must be in the "ACC" or "ON" position to be used.



### Audio

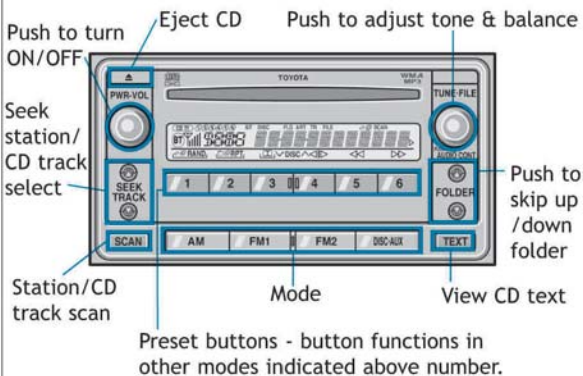

### CD PLAYER

**To scan tracks on a disc** Push and hold "SCAN." Push again to hold selection.

### RADIO

**To preset stations** Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

**To scan stations** Push "SCAN." Push and hold to scan preset stations. Push again to hold selection.


### AUX audio jack (if equipped)




By inserting a mini plug of a commercially available component into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.

## Cup holders

Front

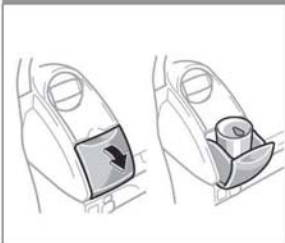


Rear

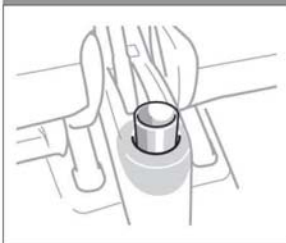


## Bottle holders

Front Door

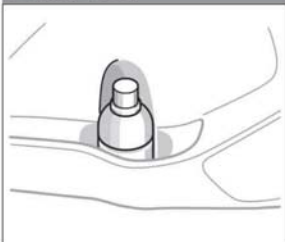

Rear

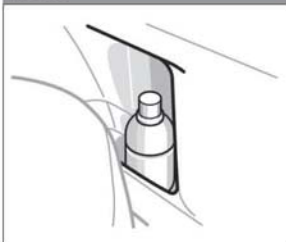


## Luggage storage box

Open


Right side:  
Turn to unlock

Left side:  
Turn to unlock

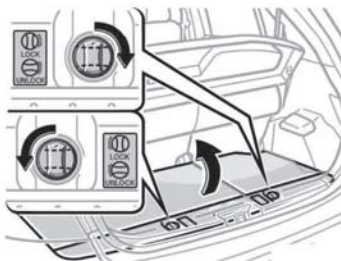


# SAFETY AND EMERGENCY FEATURES

## Door locks

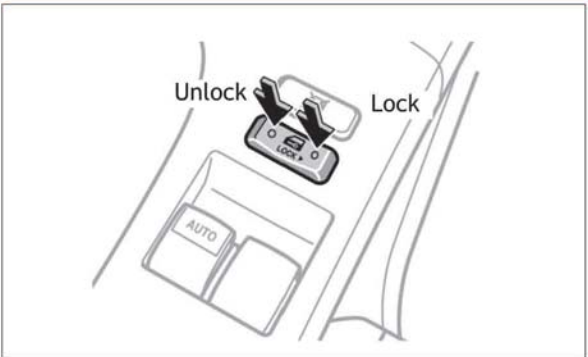

## Seat belts

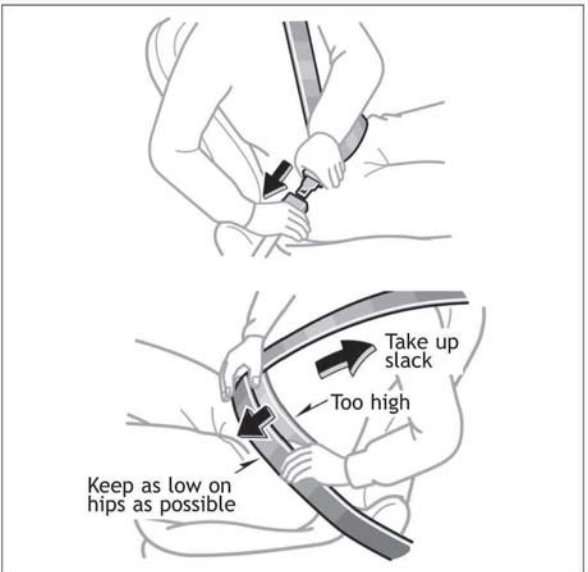

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.