

# **TRIPLE S** *Customs*

## **CHRYSLER PT CRUISER 2001-2006 VEHICLE WIRING**

WIRING INFORMATION: 2001 Chrysler PT Cruiser

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	PINK/BLACK & RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	BLUE	Ignition Harness
ACCESSORY WIRE	BLACK/ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BLACK/WHITE	Ignition Harness
POWER DOOR LOCK (negative trigger through 3000 ohm resistor)	WHITE/GREEN	Harness Coming Into Vehicle From Driver's Door
POWER UNLOCK (negative trigger through 7200 ohm resistor- requires double pulse to unlock)	SAME WIRE AS LOCK	Harness Coming Into Vehicle From Driver's Door
PARKING LIGHTS (+)	BLACK/YELLOW	Harness In Driver's Kick Panel Or Light Switch
HEADLIGHTS (+)	PURPLE/WHITE	Harness At Steering Column Or Light Switch
DOOR TRIGGER (-)	TAN or TAN/BLUE (DRIVER DOOR) BLUE/ORANGE (ALL OTHER DOORS)	Harness In Driver's Kick Panel And Harness In Passenger's Kick Panel Or OEM Keyless Module In Dash Above Radio
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
REAR HATCH TRIGGER (-)	TAN/BLACK	Harness In Driver's Kick Panel Or OEM Keyless Module In Dash Above Radio
HOOD TRIGGER (-)	BROWN/TAN	Factory Hood Pin Switch Or OEM Keyless Module In Dash Above Radio
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK	SINGLE NEGATIVE PULSE TO DISARM WIRE	
TACHOMETER WIRE	BLACK/GRAY	Ignition Coil
BRAKE WIRE (+)	WHITE/TAN	Brake Switch
HORN TRIGGER (-)	BLACK/RED	Steering Column
LEFT FRONT WINDOW UP	WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	LT.BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GRAY	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
Models with a gray head on the ignition key are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		
RADIO 12V CONSTANT WIRE	PINK	Radio Harness
RADIO SWITCHED WIRE	RED/WHITE	
RADIO GROUND WIRE	BLACK	
POWER ANTENNA WIRE (+)		
AMP TURN-ON WIRE		
LEFT FRONT SPEAKER (+)	GREEN	Left Front Speaker
LEFT FRONT SPEAKER (-)	RED/BROWN	Left Front Speaker
RIGHT FRONT SPEAKER (+)	PURPLE/GREEN	Right Front Speaker
RIGHT FRONT SPEAKER (-)	BLUE/RED	Right Front Speaker
LEFT REAR SPEAKER (+)	BROWN/YELLOW	Left Rear Speaker
LEFT REAR SPEAKER (-)	BROWN/LT.BLUE	Left Rear Speaker
RIGHT REAR SPEAKER (+)	DK.BLUE/WHITE	Right Rear Speaker
RIGHT REAR SPEAKER (-)	DK.BLUE/BLACK	Right Rear Speaker

## WIRING INFORMATION: 2002 Chrysler PT Cruiser

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	PINK/BLACK & RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	BLUE	Ignition Harness
ACCESSORY WIRE	BLACK/ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BLACK/WHITE	Ignition Harness
POWER DOOR LOCK AND UNLOCK	WHITE/GREEN	Harness Coming Into Vehicle From Driver's Door
Lock is a negative trigger through a 3000-ohm resistor. Unlock is negative trigger through a 7200-ohm resistor. Unlock requires a double pulse.		
PARKING LIGHTS (+)	BLACK/YELLOW	Harness In Driver's Kick Panel Or Light Switch
HEADLIGHTS (+)	PURPLE/WHITE	Harness At Steering Column Or Light Switch
DOOR TRIGGER (-)	TAN or TAN/BLUE (DRIVER DOOR) BLUE/ORANGE (ALL OTHER DOORS)	Harness In Driver's Kick Panel And Harness In Passenger's Kick Panel Or OEM Keyless Module In Dash Above Radio
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
REAR HATCH TRIGGER (-)	TAN/BLACK	Harness In Driver's Kick Panel Or OEM Keyless Module In Dash Above Radio
HOOD TRIGGER (-)	BROWN/TAN	Factory Hood Pin Switch Or OEM Keyless Module In Dash Above Radio
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK	SINGLE NEGATIVE PULSE TO DISARM WIRE	
TACHOMETER WIRE	BLACK/GRAY	Ignition Coil
BRAKE WIRE (+)	WHITE/TAN	Brake Switch
HORN TRIGGER (-)	BLACK/RED	Steering Column
LEFT FRONT WINDOW UP	WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	LT.BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GRAY	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
Models with a gray head on the ignition key are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		
RADIO 12V CONSTANT WIRE	PINK/LT.BLUE	Radio Harness
RADIO SWITCHED WIRE	RED/WHITE	
RADIO GROUND WIRE	BLACK	
POWER ANTENNA WIRE (+)		
AMP TURN-ON WIRE		
LEFT FRONT SPEAKER (+)	DK.GREEN	Left Front Speaker
LEFT FRONT SPEAKER (-)	BROWN/DK.BLUE	Left Front Speaker
RIGHT FRONT SPEAKER (+)	PURPLE	Right Front Speaker
RIGHT FRONT SPEAKER (-)	DK.BLUE/RED	Right Front Speaker
LEFT REAR SPEAKER (+)	BROWN/YELLOW	Left Rear Speaker
LEFT REAR SPEAKER (-)	BROWN/LT.BLUE	Left Rear Speaker
RIGHT REAR SPEAKER (+)	DK.BLUE/WHITE	Right Rear Speaker
RIGHT REAR SPEAKER (-)	DK.BLUE/BLACK	Right Rear Speaker

## WIRING INFORMATION: 2003 Chrysler PT Cruiser

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	PINK/BLACK & RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	BLUE	Ignition Harness
ACCESSORY WIRE	BLACK/ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BLACK/WHITE	Ignition Harness
POWER DOOR LOCK AND UNLOCK	WHITE/GREEN	Harness Coming Into Vehicle From Driver's Door
Lock is a negative trigger through a 3000-ohm resistor. Unlock is negative trigger through a 7200-ohm resistor. Unlock requires a double pulse.		
PARKING LIGHTS (+)	BLACK/YELLOW	Harness In Driver's Kick Panel Or Light Switch
HEADLIGHTS (+)	PURPLE/WHITE	Harness At Steering Column Or Light Switch
DOOR TRIGGER (-)	TAN or TAN/BLUE (DRIVER DOOR) BLUE/ORANGE (ALL OTHER DOORS)	Harness In Driver's Kick Panel And Harness In Passenger's Kick Panel Or OEM Keyless Module In Dash Above Radio
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
REAR HATCH TRIGGER (-)	TAN/BLACK	Harness In Driver's Kick Panel Or OEM Keyless Module In Dash Above Radio
HOOD TRIGGER (-)	BROWN/TAN	Factory Hood Pin Switch Or OEM Keyless Module In Dash Above Radio
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK	SINGLE NEGATIVE PULSE TO DISARM WIRE	
TACHOMETER WIRE	BLACK/GRAY	Ignition Coil
BRAKE WIRE (+)	WHITE/TAN	Brake Switch
HORN TRIGGER (-)	BLACK/RED	Steering Column
LEFT FRONT WINDOW UP	WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	LT.BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GRAY	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
Models with a gray head on the ignition key are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		
RADIO 12V CONSTANT WIRE	PINK/LT.BLUE	Radio Harness
RADIO SWITCHED WIRE	RED/WHITE	
RADIO GROUND WIRE	BLACK	
POWER ANTENNA WIRE (+)		
AMP TURN-ON WIRE		
LEFT FRONT SPEAKER (+)	DK.GREEN	Left Front Speaker
LEFT FRONT SPEAKER (-)	BROWN/DK.BLUE	Left Front Speaker
RIGHT FRONT SPEAKER (+)	PURPLE	Right Front Speaker
RIGHT FRONT SPEAKER (-)	DK.BLUE/RED	Right Front Speaker
LEFT REAR SPEAKER (+)	BROWN/YELLOW	Left Rear Speaker
LEFT REAR SPEAKER (-)	BROWN/LT.BLUE	Left Rear Speaker
RIGHT REAR SPEAKER (+)	DK.BLUE/WHITE	Right Rear Speaker
RIGHT REAR SPEAKER (-)	DK.BLUE/BLACK	Right Rear Speaker

WIRING INFORMATION: 2004 Chrysler PT Cruiser

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	PINK/BLACK & RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	BLUE	Ignition Harness
SECOND IGNITION WIRE	LT.GREEN/WHITE	Ignition Harness
Second ignition wire is only needed on models with auto-stick		
ACCESSORY WIRE	BLACK/ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BLACK/WHITE	Ignition Harness
POWER DOOR LOCK AND UNLOCK	WHITE/GREEN	Harness Coming Into Vehicle From Driver's Door
Lock is a negative trigger through a 3000-ohm resistor. Unlock is negative trigger through a 7200-ohm resistor. Unlock requires a double pulse.		
PARKING LIGHTS (+)	BLACK/YELLOW	Harness In Driver's Kick Panel Or Light Switch
HEADLIGHTS (+)	PURPLE/WHITE	Harness At Steering Column Or Light Switch
DOOR TRIGGER (-)	TAN or TAN/BLUE (DRIVER DOOR) BLUE/ORANGE (ALL OTHER DOORS)	Harness In Driver's Kick Panel And Harness In Passenger's Kick Panel Or OEM Keyless Module In Dash Above Radio
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
REAR HATCH TRIGGER (-)	TAN/BLACK	Harness In Driver's Kick Panel Or OEM Keyless Module In Dash Above Radio
HOOD TRIGGER (-)	BROWN/TAN	Factory Hood Pin Switch Or OEM Keyless Module In Dash Above Radio
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK	SINGLE NEGATIVE PULSE TO DISARM WIRE	
TACHOMETER WIRE	BLACK/GRAY	Ignition Coil
BRAKE WIRE (+)	WHITE/TAN	Brake Switch
HORN TRIGGER (-)	BLACK/RED	Steering Column
LEFT FRONT WINDOW UP	WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	LT.BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GRAY	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
Models with a gray head on the ignition key are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		
RADIO 12V CONSTANT WIRE	PINK/LT.BLUE	Radio Harness
RADIO SWITCHED WIRE	RED/WHITE	
RADIO GROUND WIRE	BLACK	
POWER ANTENNA WIRE (+)		
AMP TURN-ON WIRE		
LEFT FRONT SPEAKER (+)	DK.GREEN	Left Front Speaker
LEFT FRONT SPEAKER (-)	BROWN/DK.BLUE	Left Front Speaker
RIGHT FRONT SPEAKER (+)	PURPLE	Right Front Speaker
RIGHT FRONT SPEAKER (-)	DK.BLUE/RED	Right Front Speaker
LEFT REAR SPEAKER (+)	BROWN/YELLOW	Left Rear Speaker
LEFT REAR SPEAKER (-)	BROWN/LT.BLUE	Left Rear Speaker
RIGHT REAR SPEAKER (+)	DK.BLUE/WHITE	Right Rear Speaker
RIGHT REAR SPEAKER (-)	DK.BLUE/BLACK	Right Rear Speaker

WIRING INFORMATION: 2005 Chrysler PT Cruiser

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	PINK/BLACK & RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	BLUE	Ignition Harness
SECOND IGNITION WIRE	LT.GREEN/WHITE	Ignition Harness
Second ignition wire is only needed on models with auto-stick		
ACCESSORY WIRE	BLACK/ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BLACK/WHITE	Ignition Harness
POWER DOOR LOCK AND UNLOCK	WHITE/GREEN	Harness Coming Into Vehicle From Driver's Door
Lock is a negative trigger through a 3000-ohm resistor. Unlock is negative trigger through a 7200-ohm resistor. Unlock requires a double pulse.		
PARKING LIGHTS (+)	BLACK/YELLOW	Harness In Driver's Kick Panel Or Light Switch
HEADLIGHTS (+)	PURPLE/WHITE	Harness At Steering Column Or Light Switch
DOOR TRIGGER (-)	TAN or TAN/BLUE (DRIVER DOOR) BLUE/ORANGE (ALL OTHER DOORS)	Harness In Driver's Kick Panel And Harness In Passenger's Kick Panel Or OEM Keyless Module In Dash Above Radio
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
REAR HATCH TRIGGER (-)	TAN/BLACK	Harness In Driver's Kick Panel Or OEM Keyless Module In Dash Above Radio
HOOD TRIGGER (-)	BROWN/TAN	Factory Hood Pin Switch Or OEM Keyless Module In Dash Above Radio
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK	SINGLE NEGATIVE PULSE TO DISARM WIRE	
TACHOMETER WIRE	BLACK/GRAY	Ignition Coil
BRAKE WIRE (+)	WHITE/TAN	Brake Switch
HORN TRIGGER (-)	BLACK/RED	Steering Column
LEFT FRONT WINDOW UP	WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	LT.BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GRAY	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
Models with a gray head on the ignition key are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		
RADIO 12V CONSTANT WIRE	PINK/LT.BLUE	Radio Harness
RADIO SWITCHED WIRE	RED/WHITE	
RADIO GROUND WIRE	BLACK	
POWER ANTENNA WIRE (+)		
AMP TURN-ON WIRE		
LEFT FRONT SPEAKER (+)	DK.GREEN	Left Front Speaker
LEFT FRONT SPEAKER (-)	BROWN/DK.BLUE	Left Front Speaker
RIGHT FRONT SPEAKER (+)	PURPLE	Right Front Speaker
RIGHT FRONT SPEAKER (-)	DK.BLUE/RED	Right Front Speaker
LEFT REAR SPEAKER (+)	BROWN/YELLOW	Left Rear Speaker
LEFT REAR SPEAKER (-)	BROWN/LT.BLUE	Left Rear Speaker
RIGHT REAR SPEAKER (+)	DK.BLUE/WHITE	Right Rear Speaker
RIGHT REAR SPEAKER (-)	DK.BLUE/BLACK	Right Rear Speaker

WIRING INFORMATION: 2006 Chrysler PT Cruiser

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	Must go to battery for 12V constant.	
STARTER WIRE	PINK/LT.BLUE	Ignition Harness
SECOND STARTER WIRE	PURPLE/BROWN	Ignition Harness
The second starter wire is a negative trigger through a 180-ohm resistor.		
IGNITION WIRE	PINK/WHITE	Ignition Harness
ACCESSORY WIRE	PURPLE/BROWN	Ignition Harness
The accessory wire is the same wire as the second starter wire. The accessory wire is a negative trigger through a 610-ohm resistor.		
POWER DOOR LOCK AND UNLOCK	LT.GREEN/DK.GREEN	Harness or Connector 2 at Gauge Cluster
Lock is a negative trigger through a 1000-ohm resistor. Unlock is negative trigger through a 249-ohm resistor. Unlock requires a double pulse.		
PARKING LIGHTS (+)	WHITE/PURPLE	Harness In Driver's Kick
LEFT FRONT DOOR TRIGGER (-)	PURPLE	Connector 2 At Gauge Cluster
RIGHT FRONT DOOR TRIGGER (-)	PURPLE/WHITE	
LEFT REAR DOOR TRIGGER (-)	PURPLE/GRAY	
RIGHT REAR DOOR TRIGGER (-)	PURPLE/YELLOW	
TRUNK TRIGGER (-)	PURPLE/ORANGE	
TRUNK RELEASE (-)	TAN/DK.GREEN	Connector 3 At Gauge Cluster
FACTORY ALARM ARM	Factory Remote Only	
FACTORY ALARM DISARM	Factory Remote Only	
FACTORY DISARM NO UNLOCK	Disarms When Starting Vehicle And Sentry Key Is Present	
TACHOMETER WIRE	Wire NOT DK.GREEN/ORANGE	At Any Ignition Coil
BRAKE WIRE (+)	WHITE/BLACK	Connector 2 At Gauge Cluster
HORN TRIGGER (-)	DK.GREEN/PURPLE	Connector 3 At Gauge Cluster
LEFT FRONT WINDOW UP	LT.BLUE	Power Window Switch On Dash
LEFT FRONT WINDOW DOWN	WHITE	
RIGHT FRONT WINDOW UP	BROWN/LT.BLUE	
RIGHT FRONT WINDOW DOWN	PURPLE/WHITE	
LEFT REAR WINDOW UP	ORANGE/WHITE	
LEFT REAR WINDOW DOWN	ORANGE/GRAY	
RIGHT REAR WINDOW UP	ORANGE/LT.BLUE	
RIGHT REAR WINDOW DOWN	ORANGE/DK.BLUE	
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		
RADIO 12V CONSTANT WIRE	RED	Radio Harness
RADIO SWITCHED WIRE	Databus	
RADIO GROUND WIRE	BLACK	
POWER ANTENNA WIRE (+)		
AMP TURN-ON WIRE		
LEFT FRONT SPEAKER (+)	GRAY/PURPLE	Left Front Speaker
LEFT FRONT SPEAKER (-)	GRAY/YELLOW	Left Front Speaker
RIGHT FRONT SPEAKER (+)	DK. GREEN/PURPLE	Right Front Speaker
RIGHT FRONT SPEAKER (-)	DK. GREEN/YELLOW	Right Front Speaker
LEFT REAR SPEAKER (+)	DK.GREEN/TAN	Left Rear Speaker
LEFT REAR SPEAKER (-)	DK.GREEN/GRAY	Left Rear Speaker
RIGHT REAR SPEAKER (+)	DK. GREEN/BROWN	Right Rear Speaker
RIGHT REAR SPEAKER (-)	YELLOW/GRAY	Right Rear Speaker
Factory amplifier is under the driver seat		