li 2007 9:16 09

Audi A4

Owner's Manual

Audi A4 englisch 9.07

uli 2007 9:16 09

© 2007 AUDI AG

AUDI AG works continuously to develop and further improve all models. You will appreciate that we must therefore reserve the right to alter any part of the vehicle and its equipment or technical specifications at any time. No legal commitment can therefore be implied by the information, illustrations or descriptions in this Manual. No part of this Owner's N translated without the wu under the laws of copyrig Subject to alteration and Date of publication: 27.00

For the sake of th This paper was bleached

document_0900452a81b1b9de.book Seite 1 Donnerstag, 26. Juli 2007 9:16 09



Thank you for choosing the Audi A4.

The new Audi A4 combines the latest technology with numerous features for your comfort and convenience. To help you get the best out of these features in everyday use, we recommend that you read this Manual carefully so you can quickly become familiar with your vehicle in detail.

As well as information on how to use the controls and equipment, the Owner's Manual contains important notes on care and maintenance. These are relevant to your safety and will help preserve your car's value. The Manual also offers useful driving tips and advice, together with some suggestions on how to drive your car with minimum impact on the environment.

In addition to this Owner's Manual, the Service Wallet also includes the Service Schedule for your vehicle. This booklet contains important information on Audi service requirements and lists the vehicle's fuel consumption figures. The Service Wallet also includes operating manuals for optional on-board systems such as the radio, navigation and telephone. We recommend that you keep the Service Wallet in the car at all times.

Should you have any further questions regarding your car or if you suspect that your owner's literature is not complete, please contact your Audi dealer or importer. They are always glad to answer your queries and note any suggestions you may have.

We wish you safe and enjoyable motoring with your Audi A4.

AUDI AG

	nent_0900452a81b1b9de.book Seite 2 Donnerstag, 20	5. Juli	2007 9:16 09
2	Contents		
	Contents		
	Notes on this Owner's Manual	5	Clear visio Windscre Rear-view Digital co
	Controls	7	Seats and Manual a Electric au Seat men Head rest Front arm Luggage Roof carr
	Controls and displays Overview Instruments and warning/indicator lamps Fuel gauge Warning and indicator lamps Warning and indicator lamps Driver information system Introduction On-board computer Speed warning function Auto-check control Tyre pressure monitoring system Doors and windows Central locking system Boot lid Child-proof catches Electric windows Sun roof Lights and vision Lights Interior lights	9 9 111 14 15 21 25 28 30 39 42 42 51 53 55 57 63	Roof load Cup hold Ashtrays Cigarette sockets On-board Storage c Heating a Deluxe au basic sett Deluxe au plus - bas Auxiliary 1 ventilatio Seat heat Driving Steering Ignition Id Starting a with the a

Clear vision	64 65
Rear-view mirrors	68
Digital compass	71
Seats and storage	73
Manual adjustment of front seats	73
Electric adjustment of front seats	74
Seat memory	75
Head restraints	77
Front armrest	78
Luggage compartment	79
Roof carrier	83
Roof load	84 85
Cup holders	85
Cigarette lighter and electrical	00
sockets	87
On-board 230 Volt Euro socket	89
Storage compartments	90
Heating and cooling	93
Deluxe automatic air conditioner .	93
Deluxe automatic air conditioner -	
basic settings	100
Deluxe automatic air conditioner	101
plus Deluxe automatic air conditioner	101
plus - basic settings	109
Auxiliary heating and auxiliary	
ventilation	110
Seat heating	114
Driving	116
Steering	116
Ignition lock	116
Starting and stopping the engine	
with the advanced key	118


Electro-mechanical parking brake Cruise control system	121 125
,	
adaptive cruise control (ACC)	128
Speed and distance control system	128
Driver messages	134
System limitations	140
Audi braking guard	142
Audi lane assist	145
Audi lane assist	145
Audi side assist	149
Lane change assist feature	149
Notes	156
Audi drive select	159
Adjusting the vehicle set-up	159
Automatic gearbox	162
multitronic®, tiptronic (6-speed	
gearbox)	162
Parking aid	169
General notes	169
Audi parking system	169
Audi parking system plus	170
Audi parking system advanced	171
Switching display and acoustic	
signals on and off	177
Towing bracket	177
Error messages	178
HomeLink	179
Universal transmitter	179

 $Downloaded \ from \ \underline{www.Manualslib.com} \ manuals \ search \ engine$

<u>∲</u> ● |�

 ●	document_0900452a81b1b9de.book Seite 3 Donnerstag, 2	26. Juli 2	2007 9:16 09		Contents 3	
	Safety		5 1	221	General maintenance 243	
÷	Safe driving	191 192 194 195 197 199 201 203 205 207 208 210 210 210 213	Electronic stabilisation program (ESP)	222 2224 225 226 229 229 229 231 232 232 235	Care of vehicle and cleaning 244 General notes 244 Care of exterior 244 Care of interior 247 Fuel and filling the tank 251 Diesel 251 Diesel 252 Checking and topping up fluids 254 Bonnet 256 Engine compartment layout 256 Brake fluid 262 Battery 263 Windscreen washer 263 Wheels and tyres 268 Run flat tyres 274 Accessories and modifications 277 Accessories and replacement 277 Radio transmitters and business 277	

Controls	Safety	Driving tips	General maintenance	Self-help	Technical data
))		$- \phi \overset{\Psi}{\bigcirc}$

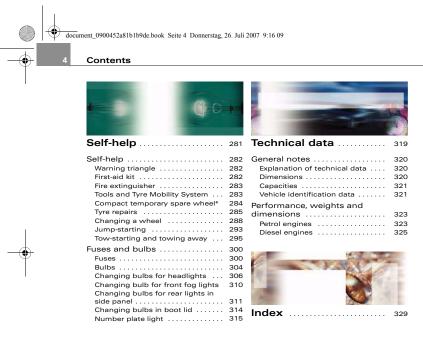

Downloaded from <u>www.Manualslib.com</u> manuals search engine

document_0900452a81b1b9de.book Seite 5 Donnerstag, 26. Juli 2007 9:16 09

Notes on this Owner's Manual

Notes on this Owner's Manual

This Owner's Manual contains important information, tips, suggestions and warnings.

Please ensure that this Owner's Manual is always kept in the vehicle. It should always be available to anyone else driving the vehicle, i.e. anyone renting, borrowing or buying the vehicle from you.

This manual describes **the equipment available for the vehicle at the time of going to print**. Some of the equipment described here will not be available until a later date, or may only be available in certain markets.

Some sections of this Owner's Manual do not apply to all vehicles. If this is the case, a text at the start of the section indicates which vehicles it applies to, e.g. "Applies to vehicles: with auxiliary heater". This optional equipment is also marked with an asterisk "*".

Illustrations are intended as a general guide, and may vary from the equipment fitted in your vehicle in some details.

At the beginning of this Owner's Manual, you will find a **table of contents** showing all the items described in this manual in the order in which they appear. An **alphabetical index** is included at the end of the Owner's Manual.

All references to **positions** such as "left", "right", "front" or "rear" are given as seen facing in the direction of travel.

- * optional equipment
- The section is continued on the following page.
- Denotes the end of a section.
- Registered trademarks are marked **1**. However, the absence of this symbol does not constitute a waiver of the rights concerning any proprietary name.

 $\Rightarrow \triangle Refers to a "WARNING" within the same section. If the WARNING symbol is followed by a page number the warning text referred to is included in a different section.$

Texts with this symbol contain safety information. They warn you of serious dangers, possibly involving accident or injury.

U Caution

Texts with this symbol draw your attention to a possible risk of damage to your vehicle.

🕷 For the sake of the environment

Texts with this symbol refer to points relevant to the protection of the environment.




Texts with this symbol contain additional information of a more general nature. ■

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u></u>
_		-•	_			0





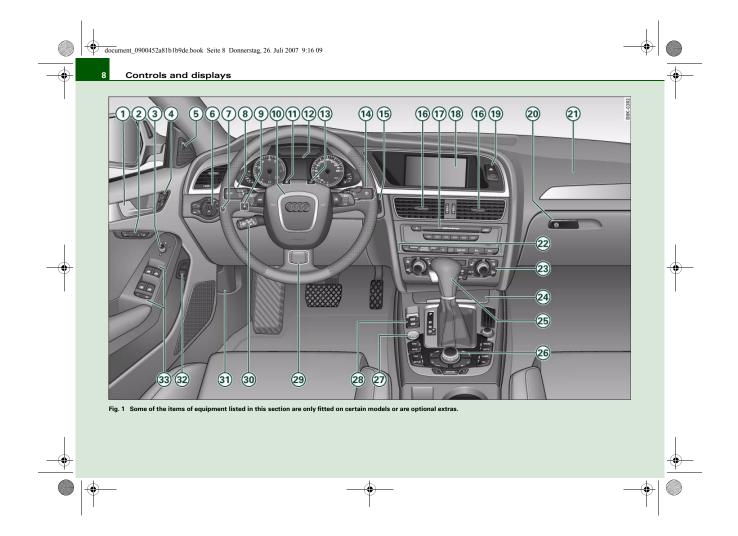

document_0900452a81b1b9de.book Seite 9 Donnerstag, 26. Juli 2007 9:16 09

Controls and displays

Controls and displays

Overview

۲

(1)	Door handle	
2	Seat memory	. 75
Ğ	Electric adjuster for exterior mirrors	. 70
(4)	Central locking switch	. 49
5	Button for side assist	. 149
Ğ	Light switch	
õ	Instrument lighting	. 59
(B)	Control lever for:	
0	- Turn signals and main beam headlights	. 62
	- lane assist	. 145
(9)	Headlight range control	. 61
10	Steering wheel with:	
0	– Horn	
	- Driver's airbag	. 203
	 Controls for audio, TV*, telephone and speech 	
	dialogue system*	
	- Paddle levers for tiptronic gearshift	. 167
(1)	SET button	. 12
(12)	Instrument cluster	. 11
(13)	Reset button for trip recorder	. 14
(14)	Control lever for:	
-	- Windscreen wipers and washer	. 65
	- On-board computer	. 25
(15)	Ignition lock	. 116
16	Air outlets with thumbwheel	. 107
-	- For deluxe automatic air conditioner	. 99
	- For deluxe automatic air conditioner plus	. 107
(17)	Depending on equipment fitted:	
Ŭ		
	Controls Safety	Driving tips

	- Radio		
	- CD changer		
(18) Depending on equipment fitted:		
0	 Radio display 		
	– MMI display ¹⁾		
(19			
õ) Glove box	90	
õ) Front passenger's airbag	203	
(22) Switches for the following (as applicable):		
Ŭ	– Audi parking system	170	
	Electronic Stabilisation Program (ESP)	222	
	- Electric sun blind	64	1
	Control for Audi drive select	159	
23) Air conditioner, depending on equipment fitted:		
Ŭ	- Deluxe automatic air conditioner	93	Ψ
	Deluxe automatic air conditioner plus	101	
24) Ashtray with cigarette lighter	86, 87	
25			
	lever for:		
	– multitronic [®]	162	
_	 Manual gearbox 		
26) Depending on equipment fitted:		
	 MMI control console or 		
	 Switch for Audi parking system 	170	
	 Switch for Electronic Stabilisation Program (ESP 		
	OFF)	222 🕨	
1)	Depending on the equipment fitted in your vehicle the display scre	an is ai-	
	ther two-coloured or multi-coloured. As the two displays are mor	e or less	
	identical this Owner's Manual uses the multi-coloured displays for tion purposes.	illustra-	

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	—
_		-•	_			0

document_0900452a81b1b9de.book Seite 10 Donnerstag, 26. Juli 2007 9:16 09	
Controls and displays	
- Switch for electric sun blind	64
 Control for Audi drive select 	159
27 Start/stop button	118
Blectro-mechanical parking brake	121
Adjustable steering column (hidden behind steering wheel)	116
③ Depending on equipment fitted:	
Cruise control system adaptive cruise control	125
Bonnet lock release	254
32) Switch for releasing the boot lid	234 51
33 Electric windows	53
(3) Electric Willows	53

Please refer to the separate operating manual for instructions on using the Multi Media Interface (MMI).
 The arrangement of switches and controls on right-hand drive models* may be slightly different from the layout shown in the illustration ⇒ *page 8*, fig. 1. However, the symbols used to identify the controls are the same. ■

Downloaded from <u>www.Manualslib.com</u> manuals search engine

•

document_0900452a81b1b9de.book Seite 11 Donnerstag, 26. Juli 2007 9:16 09


Instruments and warning/indicator lamps

Instruments and warning/indicator lamps

Instruments

Instrument cluster overview

The instrument cluster is the driver's information centre.

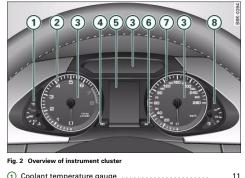

6	Reset button for trip recorder	14
	 Mileage recorder 	14
	 Date and time display 	13
	 Driver information system 	21
5	Display	
	SET button	12
	Warning and indicator lamps	15
2	Rev counter	12
U	coolant temperature gauge	

⑦ Speedometer⑧ Fuel gauge

i Note

• The needles in the instrument cluster will sweep across the dials when you switch on the ignition.

• The instrument lighting (illumination of dials and needles) is switched on when the ignition is on and the **vehicle's lights are off**. The instrument lighting is dimmed automatically as the daylight starts to fade. This function is intended to remind the driver to switch on the dipped-beam headlights in good time when light conditions become poor.

Coolant temperature gauge

 
The coolant temperature gauge $(\mathbf{j}) \Rightarrow$ fig. 2 only works when the ignition is switched on. In order to avoid possible damage to the engine, please read the following notes for the different temperature ranges.

Engine cold

If the needle is still in the lower range of the dial, this indicates that the engine has not yet reached operating temperature. Avoid high engine speeds, full acceleration and heavy engine loads.

Normal temperature

In normal operation the needle will settle somewhere in the centre of the dial once the engine has reached operating temperature. The needle may also go further up when the engine is working hard at high outside temperatures. This is no cause for concern provided the warning symbol $\frac{1}{2}$ in the display does not start flashing.



14

document_0900452a81b1b9de.book Seite 12 Donnerstag, 26. Juli 2007 9:16 09

Instruments and warning/indicator lamps

Warning symbol in instrument cluster 🚣

If the symbol \downarrow lights up in the display, this means that either the coolant *temperature* is too high or the coolant *level* is too low \Rightarrow page 33.

If the needle is at the top end of the dial, this means the coolant temperature is too high. Stop the vehicle, switch off the engine and wait for it to cool down. If the warning lamp starts flashing again after just a short distance, contact a qualified workshop.

۲

12

• Before opening the bonnet and checking the coolant level, please observe the warning information on \Rightarrow page 255, "Working on components in the engine compartment".

 Never open the bonnet if you can see or hear steam or coolant escaping from the engine compartment; there is a risk of being scalded. Wait until you can no longer see or hear escaping steam or coolant.

U Caution

 Additional lights and other accessories in front of the air inlet reduce the cooling effect of the radiator. At high outside temperatures and high engine loads, there is a risk of the engine overheating.

● The front spoiler also ensures proper distribution of the cooling air when the vehicle is moving. If the spoiler is damaged this can reduce the cooling effect, which could cause the engine to overheat. You should obtain professional assistance. ■

Rev counter

The rev counter indicates the number of engine revolutions per minute.

You should select a lower gear if the engine speed drops below 1500 rpm. The start of the red zone on the dial indicates the maximum engine speed which may be used briefly when the engine is warm and after it has been run in properly. However, it is advisable to change up a gear or move the selector lever to "D" (or lift your foot off the accelerator) before the needle reaches the red zone.

U Caution

Never allow the rev counter needle (2) \Rightarrow page 11, fig. 2 to go into the red zone on the dial for more than a very brief period: there is a risk of damaging the engine. The start of the red zone on the dial is different for some engine versions.

***** For the sake of the environment

Changing up a gear early will help you to save fuel and minimise engine noise. \blacksquare

SET button

This button has a number of different functions.



Fig. 3 Instrument cluster: SET button document_0900452a81b1b9de.book Seite 13 Donnerstag, 26. Juli 2007 9:16 09

The (SET) button has the following functions:

Activating clock, date, temperature and mileage recorder displays

The display will appear for about 30 seconds if you press the SET button \Rightarrow page 12, fig. 3 when the ignition is switched off.

Starting check procedure (auto-check control)

The auto-check control checks important components and vehicle systems. These background checks are run constantly, as long as the ignition is switched on \Rightarrow page 30.

You can start the "check procedure" manually by pressing the \fbox{SET} button with the ignition switched on. This function check can be started at road speeds up to 5 km/h.

Calling up driver messages again

A red or yellow symbol appearing in the instrument cluster display is normally accompanied by a corresponding message. The message will disappear from the display after about 5 seconds. If required, you can call up the message again by briefly pressing the (SET) button.

Setting speed warning

You can press the (SET) button briefly to set speed limit warning 1 while the vehicle is moving \Rightarrow page 29. If you press and hold the (SET) button, this will cancel the speed warning.

Instruments and warning/indicator lamps

Time and date display



Fig. 4 Instrument cluster: Time and date display

Quartz clock

The date, time and display format can be changed using the sound system or MMI* control console. Please refer to the sound system or MMI* Operating Manual for more details.

 
Radio-controlled clock*

When the clock is in "radio-control" mode the signal reception symbol (a radio tower with radio waves) appears in the display \Rightarrow fig. 4. It is then not possible to change the minutes or the date manually.



• The digital clock and mileage recorder displays are switched on for about 30 seconds when the driver's door is opened.

• When the ignition is switched off, the clock and date display can be switched on for about 30 seconds by pressing the SET button ⇒ page 12, fig. 3 ⇒ page 12. ■



document_0900452a81b1b9de.book Seite 14 Donnerstag, 26. Juli 2007 9:16 09

Instruments and warning/indicator lamps

Mileage recorder

۲

14

The instrument shows how far you have travelled.



Fig. 5 Instrume cluster: Mileage rder

Fig. 6 Instrument cluster: Reset button



The mileage is stated in kilometres ("km") or "miles".

You can switch the display from kilometres to miles and vice versa via the sound system or MMI* using the CAR button on the control console.

Odometer / trip recorder

The odometer records the vehicle's total mileage.

The trip recorder shows the distance that has been travelled since it was last reset. It is used to measure individual journeys. The last digit of the trip recorder indicates distances of 100 metres or tenths of a mile.

The trip recorder can be reset to zero by pressing the reset button $\boxed{0.0}$ \Rightarrow fig. 6.

Fault display

If there is a fault in the instruments, the letters dEF appear permanently in the trip recorder display. Please have the fault rectified as soon as possible.

Immobiliser

When the ignition is switched on, the security programming of the ignition key is verified electronically.

If an uncoded key is used, **SAFE** will appear continuously in the mileage recorder display. The vehicle cannot then be driven \Rightarrow page 43.

i Note

• The date, time and recorded mileage will continue to be displayed for about 30 seconds after you switch off the ignition. • The digital clock and mileage recorder displays are switched on

for about 30 seconds when the driver's door is opened. • When the ignition is switched off, the mileage recorder can be switched on for about 30 seconds by pressing the SET button \Rightarrow page 12, fig. 3 \Rightarrow page 12.

Fuel gauge

The gauge only works when the ignition is switched on.

When the needle reaches the reserve zone, the symbol $\square \Rightarrow$ page 37 lights up in the instrument cluster display together with the message **Please refuel**. At this point there are still about 8 litres of fuel left in the tank. This is your reminder to fill up soon.

The tank capacity of your vehicle is given in the Technical data section.

►

document_0900452a81b1b9de.book Seite 15 Donnerstag, 26. Juli 2007 9:16 09

U Caution

¢

4

Never run the tank completely dry. The irregular supply of fuel can cause misfiring, which would allow unburnt fuel to enter the exhaust system. This can lead to overheating and damage to the catalytic converter. ■

Warning and indicator lamps

Overview


The warning and indicator lamps indicate a number of different functions and possible faults.



Fig. 7 Instrument cluster with warning and indicator lamps

Instruments and	warning/indicator lamps

	Dynamic steering	\Rightarrow page 16	
	Engine management (alternative to 700)	\Rightarrow page 16	
	(alternative to EPC)	\Rightarrow page 16	
	Electronic stabilisation program (ESP)	\Rightarrow page 17	
<u>_</u>	Airbag system	\Rightarrow page 17	
	Tyre pressure monitoring	\Rightarrow page 17	
\Diamond	Left turn signals	\Rightarrow page 18	
¢1¢	Trailer turn signals*	\Rightarrow page 18	
Å	Seat belt warning lamp	\Rightarrow page 18	
	Emission control system	\Rightarrow page 18	
/:\	lane assist (active)	\Rightarrow page 18	
	lane assist (inactive)	\Rightarrow page 18	
D	Main beam headlights	\Rightarrow page 18	
⇔	Right turn signals	\Rightarrow page 18	
$(\gamma)^{2}$	Cruise control system*	\Rightarrow page 19	•

 

Instrum	ents and warning/indicator	lamps
	Anti-lock brake system (ABS)	\Rightarrow page 19

document_0900452a81b1b9de.book Seite 16 Donnerstag, 26. Juli 2007 9:16 09

(P)	Electro-mechanical parking brake/Audi hold assist*	\Rightarrow page 20
(!)	Fault in brake system	\Rightarrow page 20

Additional warning and indicator lamps are displayed on vehicles equipped with the adaptive cruise control* \Rightarrow page 134.

i Note

A number of functions are monitored by the auto-check control \Rightarrow page 21. If a malfunction should occur, this will be shown by the display in the instrument cluster either with a red symbol (priority 1 – serious malfunction) or a yellow symbol (priority 2 – other malfunction or item requiring attention).

Applies to vehicles: with Audi drive select Dynamic steering

If the warning lamp \fbox lights up when you switch on the ignition and goes out when the engine has started, the dynamic steering is activated.

If the warning lamp 😒 stays on after the engine has started, this indicates a malfunction in the system. You can continue driving carefully at reduced speed to the next qualified workshop, however the steering may feel heavier and its response may be more sensitive than usual. In addition, it is possible that the steering wheel will be off centre when driving in a straight line.

Have the system malfunction in the dynamic steering repaired by a qualified workshop as soon as possible – risk of accident.

i Note

• The stabilisation functions of the dynamic steering \Rightarrow page 222 are not available in the event of a system malfunction. \blacksquare

Applies to vehicles: with petrol engine Engine management

This warning lamp monitors the engine management system on petrol engines.

The EPC warning lamp (Electronic Power Control) lights up when the ignition is switched on to show that the lamp is working properly.

i Note

If the warning lamp lights up while the vehicle is moving, this indicates a fault in the engine management system. The engine should be serviced by a qualified workshop without delay. \blacksquare

Applies to vehicles: with diesel engine

The indicator lamp lights up to show that the glow plugs are preheating.

Your vehicle is equipped with an automatic glow plug system.

The indicator lamp $\overline{00}$ lights up while the glow plugs are preheating. If the engine fails to start immediately, the glow plugs have not finished preheating. In this case, keep the clutch pedal depressed (or keep your foot on the brake if your vehicle has an automatic gearbox) until the engine starts. document_0900452a81b1b9de.book Seite 17 Donnerstag, 26. Juli 2007 9:16 09

i Note

• If the glow plug indicator lamp should start flashing while the vehicle is moving, this indicates a fault in the engine management system. The engine should be serviced without delay.

• If the indicator lamp fails to light up when the ignition is switched on, this can mean that the glow plug system is defective.

The engine should be serviced. ■

Electronic stabilisation program (ESP) 🖯

This warning lamp monitors the electronic stabilisation program.

The warning lamp 3 has the following functions:

• It flashes when the ESP or traction control system (ASR) intervenes while the vehicle is in motion.

• The warning lamp will light up continuously if the ESP or the traction control system (ASR) has been switched off using the ESP OFF button \Rightarrow page 222.

 It lights up when the ignition is switched on and should go out again after about 2 seconds. This signals that the lamp is working properly.

It will light up continuously if there is a malfunction in the ESP.
It will also come on if a fault should occur in the ABS because the ESP operates in conjunction with the ABS.

If the battery has been disconnected, if the battery voltage is very low, or if the engine has been started from an outside power source, the ESP system will perform an initialisation of the various on-board sensors while you drive the first few metres. The warning lamp will light up during this period. It will go out when the initialisation has been completed.

If the warning lamp lights up and stays on after the engine is started, this may mean that the control system has temporarily switched off the ESP. In this case the ESP can be reactivated by

Instruments and warning/indicator lamps

switching the ignition off and then on again. If the warning lamp goes out, this means the system is fully functional. For further information on the ESP \Rightarrow page 222.

Airbag system 鸄

This warning lamp monitors the airbag and seat belt tensioner system.

The warning lamp \clubsuit should light up for a few seconds when the ignition is switched on.

If the warning lamp does not go out, or if it lights up, flashes or flickers when the vehicle is moving, this indicates a malfunction in the system. This is also the case if the warning lamp does not light up when the ignition is switched on.

 
If a malfunction should occur, have the system checked immediately by a qualified workshop. If this is neglected, there is a risk that the airbag system and/or belt tensioners may not be activated in an accident. ■

Tyre pressure monitoring (])

The tyre pressure should be corrected as soon as possible if it is too low.

If the (\underline{l}) symbol flashes for about a minute and then remains lit after you switch on the ignition, there is a fault in the system. Please contact the nearest qualified workshop as soon as possible.

For more detailed information on the tyre pressure monitoring system, please refer to \Rightarrow page 39.



document_0900452a81b1b9de.book Seite 18 Donnerstag, 26. Juli 2007 9:16 09

Instruments and warning/indicator lamps

Turn signals $\Diamond \Diamond$

18

Depending on which turn signal is operated, either the left \triangleleft or right \triangleleft indicator lamp flashes. Both indicator lamps will flash when the hazard warning lights are switched on.

If one turn signal should fail, the indicator lamp will start flashing twice as fast.

This does not apply when towing a caravan or trailer. The indicator lamp will stop flashing if one of the turn signals on the vehicle or the caravan/trailer should fail. For further information on the turn signals \Rightarrow page 62.

Applies to vehicles: with towing bracket Trailer turn signals \$1\$

The indicator lamp flashes when the turn signals are operated while towing a caravan or trailer.

The indicator lamp <code>dtb</code> flashes when the turn signals are operated, provided a caravan or trailer is correctly attached and connected to the vehicle.

The indicator lamp will not flash if one of the turn signals on the trailer fails. \blacksquare

Seat belt warning lamp 🗍

The warning lamp acts as a reminder to fasten the seat belts.

After switching on the ignition, the warning lamp $\frac{4}{2}$ will remain lit until the driver and front passenger (if applicable) have fastened their seat belts. When the vehicle has gathered speed you will also hear a warning chime.

For further information on the seat belts \Rightarrow page 194.

Emission control system Ċ

If the warning lamp **lights up continuously** you should take your vehicle to a qualified workshop as soon as possible in order to have the fault rectified.

If the warning lamp **flashes** drive on at reduced speed and seek professional help in order to avoid damage to the catalytic converter.

For further information on the catalytic converter \Rightarrow page 229.

Applies to vehicles: with lane assist lane assist (active) /:\

The indicator lamp confirms that the system is fully functional. You will be warned if you are about to cross the lane markings detected by the system.

For more information on the lane assist system, please see \Rightarrow page 145.

lane assist (inactive) / i)

The warning lamp indicates that the system is switched on. However, you will not be warned if you cross the lane markings. For more information on the lane assist system, please see

 \Rightarrow page 145.

Main beam headlights 🗈

The indicator lamp $\fbox{}$ lights up when the main beams are on or when the headlight flasher is operated.

For further information on the main beam headlights \Rightarrow page 62.

document_0900452a81b1b9de.book Seite 19 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with cruise control system $\mathbf{Cruise\ control\ }\mathfrak{S}^{\mathbf{r}}$

The indicator lamp $\mathfrak{S}^{\mathfrak{P}}$ in the instrument cluster lights up when the cruise control system is operating.

Anti-lock brake system (ABS) 🥯

The warning lamp monitors the ABS and the electronic differential lock (EDL).

The warning lamp \bigcirc lights up for a few seconds when the ignition is switched on and while the engine is being started. The lamp goes out again once the system has run through an automatic test sequence.

There is a fault in the ABS if:

• the warning lamp i does not light up when the ignition is switched on.

the warning lamp does not go out again after a few seconds,
the warning lamp lights up when the vehicle is moving.

The vehicle can still be braked in the normal way (except that the ABS control function is out of action). Please take the vehicle to a qualified workshop as soon as possible. For further information on

the ABS \Rightarrow page 222.

If a fault occurs in the ABS, the ESP warning lamp will also light up.

Fault in the main brake system

If the ABS warning lamp \bigcirc lights up together with the brake warning lamp $\bigcirc \Rightarrow page 32$, this indicates a fault in the ABS function, and possibly a malfunction in the main brake system as well $\Rightarrow \triangle$.

If there is a **malfunction in the brake system** the symbol 0 will light up in the instrument cluster. Please refer to \Rightarrow *page 32*.

Instruments and warning/indicator lamps

Fault on the electronic differential lock (EDL) The EDL works in conjunction with the ABS. If a malfunction should occur in the EDL, this is indicated by the ABS warning lamp \bigcirc . Please take the vehicle to a qualified workshop as soon as possible. For further information on the EDL \Rightarrow *page 222*.

• Before opening the bonnet and checking the brake fluid level, observe the warning information on ⇒ *page 255,* "Working on components in the engine compartment".

 If the brake warning lamp ⁽¹⁾ should light up together with the ABS warning lamp ⁽²⁾, stop the vehicle immediately and check the brake fluid level in the reservoir. If the fluid level has dropped below the "MIN" mark you must not drive on - otherwise there may be an increased accident risk. You should obtain professional assistance.

• If the brake fluid level is OK, the fault in the brake system may have been caused by a failure of the ABS control function. As a result the rear wheels can lock relatively easily when braking. This could cause the tail of the vehicle to skid sideways. Drive carefully to the nearest qualified workshop and have the fault rectified. ■

Applies to vehicles: with Audi hold assist Audi hold assist (D)

This warning lamp monitors the Audi hold assist function.

Audi hold assist helps the driver to keep the vehicle stationary while the engine is running, for instance on steep gradients, at traffic lights or in stop-and-go traffic. When the Audi hold assist function is on, you don't have to keep your foot on the brake to prevent the vehicle from accidentally rolling away. Once it detects that the vehicle is stopped, Audi hold assist keeps the vehicle stationary. The green symbol (12) in the instrument cluster indicates that the function is activated. You can now take your foot off the brake pedal.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
—			-			\bigcirc

document_0900452a81b1b9de.book Seite 20 Donnerstag, 26. Juli 2007 9:16 09

20

Instruments and warning/indicator lamps

When the vehicle has been stationary for an extended period, Audi hold assist will automatically apply the parking brake. In this case, the green symbol ([®]) will change to red ([®]). ■

Electro-mechanical parking brake 🕲

This warning lamp monitors the electro-mechanical parking brake.

The warning lamp (2) lights up when the parking brake is applied with the ignition on. After the ignition has been switched off the lamp will stay on for about 30 seconds. The warning lamp will light up for about 30 seconds if the parking brake is applied with the ignition switched off.

The warning lamp should go out when the parking brake is released.

If the warning lamp flashes continuously **after the parking brake has been applied**, the brake may not be strong enough to hold the vehicle on a slope. This may be due to the brakes overheating. Please note the following points:

• If the gradient is too steep to park the vehicle safely, the display will show the message **Caution: Vehicle parked too steep**.

 In the event of a fault in the parking brake system the symbol Ø will also appear in the instrument cluster display together with the message Parking brake! You should have the fault corrected by a qualified workshop without delay.■

Brake system 🛈

The warning lamp flashes if the brake fluid level is too low or if there is a fault in the ABS system or the parking brake.

If the warning lamp (1) flashes, there is a fault in the brake system. The symbol (1) in the instrument cluster display will flash at the same time. You can press the $\overline{(\text{SET})}$ button to obtain a message explaining the fault \Rightarrow page 32.

If a failure should occur in the ABS, the ABS warning lamp Θ will light up together with the brake warning lamp $\Omega \Rightarrow \Delta$.

• Before opening the bonnet and checking the brake fluid level, observe the warning information on ⇒ *page 255,* "Working on components in the engine compartment".

 If the brake warning lamp does not go out, or if it lights up when driving, the brake fluid level in the reservoir is too low – this may cause an increased accident risk. Stop the vehicle and do not drive on. You should obtain professional assistance.

 If the brake warning lamp lights up together with the ABS warning lamp, this can mean that the control function of the ABS is out of action. As a result the rear wheels can lock relatively easily when braking. This could cause the tail of the vehicle to skid sideways. Drive carefully to the nearest qualified workshop and have the fault rectified. ■



document_0900452a81b1b9de.book Seite 21 Donnerstag, 26. Juli 2007 9:16 09

Driver information system



Driver information system

Introduction

General notes

instrument cluster.

The driver information system in the instrument cluster shows you the status of various on-board systems at a glance.



gearbox The display for the driver information system is in the centre of the

Fig. 8 Dashboard: Display in instrume natic

cluster (autor

The system runs a check on certain components and functions when the ignition is switched on and while the vehicle is moving. It gives an audible warning if a fault should occur or if servicing is required, and a red or yellow warning symbol (in some cases with a corresponding driver message) appears in the dashboard display.

The system will also display information for the radio and CD player and (if fitted) the route guidance directions from the navigation system*. For further information on these systems, please refer to the sound system or MMI* Operating Manual.

 
On some models the display of information shown in the instrument cluster differs from the illustrations used here.

The driver information system includes the following functions:

CD and radio display \Rightarrow page 22 \Rightarrow page 22 Outside temperature Gear-change indicator \Rightarrow page 22 Digital speedometer* \Rightarrow page 23 Door catches/boot lid warning \Rightarrow page 24 Service interval display \Rightarrow page 24 Auto-check control* \Rightarrow page 30 Driver messages \Rightarrow page 30 Speed warning \Rightarrow page 28 On-board computer* \Rightarrow page 25 Selector lever positions for automatic gearbox* \Rightarrow page 163

i Note

If a fault should occur, the display will show a red or yellow warning symbol. A red warning symbol indicates a serious malfunction \Rightarrow page 31. A yellow warning symbol indicates a less serious malfunction, or other item requiring attention \Rightarrow page 35.



document_0900452a81b1b9de.book Seite 22 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

CD and radio display

۲

4

22



If no priority 1 or 2 faults have been detected by the auto-check control, the name or frequency of the current radio station and the selected waveband will appear the upper part of the display.

When a CD is playing, the display will show the current title. If the vehicle is equipped with a CD changer* the display will also show the number of the CD being played (CD1 to CD6). ■

Outside temperature display

The outside temperature is shown when the display is activated.



Fig. 10 Display: Outside temperature At temperatures below +5°C a snowflake symbol appears next to the temperature display. This is to warn the driver to take extra care when there is a risk of **ice** on the road.

When the vehicle is stationary or travelling at very low speeds, the temperature displayed may be slightly higher than the actual outside temperature as a result of the heat radiated from the engine.

The temperature units can be set to °F or °C on the sound system or MMI* system. The outside temperature is automatically displayed in the units you have selected. Please refer to the sound system or MMI* Operating Manual for further details.


Do not rely on the outside temperature display as an ice warning. Please bear in mind that there may be patches of ice on the roads even at outside temperatures around +5°C.

Applies to vehicles: with manual gearbox and gear-change indicator
Gear-change indicator

This additional indicator function can help to save fuel.



Fig. 11 Display: Gearchange indicator

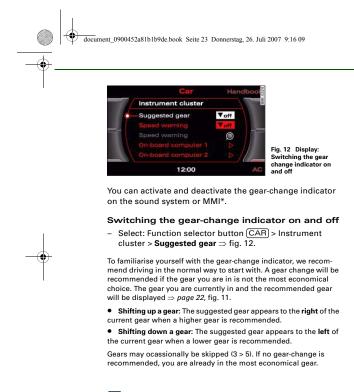

i Note

• The gear-change indicator is intended to help save fuel. It is not intended to recommend the right gear for all driving situations. In

Driver information system

 
certain situations, only the driver can choose the correct gear (for instance when overtaking, driving up a steep gradient or towing a trailer).

• The gear-change indicator in the instrument cluster \Rightarrow page 22, fig. 11 goes out when you press the clutch pedal. \blacksquare

Applies to vehicles: with on-board computer Digital speedometer

Radio Antenne 120 km/h 1 = 10 04 = 424.0c

The display shows the current speed. The speed is displayed in increments of 1 km/h. \blacksquare



document_0900452a81b1b9de.book Seite 24 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

۲

24

Door catches / boot lid warning

The pictogram shows whether the doors and the boot lid, etc. are properly closed when driving off.



Fig. 14 Display: Door catches/boot lid warning

The door catches/boot lid warning symbol lights up if one or more of the doors, or the bonnet or boot lid are not properly closed when the ignition is on. The symbol also indicates which of these is not properly closed \Rightarrow fig. 14.

The warning symbol disappears when all the doors, the bonnet and the boot lid are completely closed, and the driver information functions selected will then be displayed again. ■

Service interval display

The service interval display detects when the next service is due for your vehicle.



Car Handboo Service Interval display Noxt oil change In 15000 km / 100 days Next service Inspection In 25000 km / 120 days

Fig. 15 Instrument cluster display: Service interval display

Fig. 16 Display: Service interval display

You can see whether an oil change or service inspection is due in the Car menu on the sound system or MMI display. There are two display levels:

• Service reminder: When the next service date is approaching, Service in---- km-- days \Rightarrow fig. 15 will be shown in the instrument cluster display each time you switch on the ignition. The number of days and kilometres act independently of each other. Service due! will appear in the display when the number of days reaches zero, even if you have not yet driven the estimated number of kilometres remaining. Similarly, Service due! will appear in the display when document_0900452a81b1b9de.book Seite 25 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

the number of kilometres reaches zero, even if the estimated period has not yet expired. The remaining distance and time are updated and displayed briefly each time you switch on the ignition.

• Service due: When a service is due, Service due! will appear in the display as soon as you switch on the ignition. The display reverts back to the standard display after a short time. In addition, a tone will sound.

Displaying distance and time to next service

In the Car menu, you can look up the distance and time remaining until the next oil change and next service inspection. To do this, select function selector button CAR > Service interval display ⇒ *page 24,* fig. 16.

The display may not be complete on new vehicles within the first 500 km.

Resetting the service interval display

Your Audi dealer resets the display after each service. You can only reset the oil change display yourself. To do this, select function selector button (CAR) > Service interval display > Reset oil change interval. The next oil change will be indicated as being due 15,000 km or one year (fixed service interval) after the oil change interval is reset.

U Caution

The system cannot calculate the figures for the service indicator if the battery is disconnected from the vehicle, so no service reminder can be displayed during this time. Please remember that keeping to the correct service intervals is most important for the service life and residual value of the vehicle (and especially for the life of the engine). The period between two services must never be longer than the time specified in the Service Schedule, even if you only cover a low mileage during this time.

i Note

 Do not reset the display between oil changes - otherwise the display will be incorrect.

 The information in the service interval display remains intact if the battery is disconnected.

• The distance to the next service cannot be called up if the system has detected a Priority 1 fault (red symbol).

• If the service was not performed by a qualified workshop, the oil change interval display can only be set to "fixed service intervals" of 15,000 km. If you wish to continue with the "LongLife" service, you will need to have the oil change interval display reset by a qualified workshop. 🔳

On-board computer

Applies to vehicles: with on-board computer Introduction

The on-board computer provides you with useful information during a journey, including average and current fuel


 


Fig. 17 On-board mputer: Fuel range

 

document_0900452a81b1b9de.book Seite 26 Donnerstag, 26. Juli 2007 9:16 09

Driver information system



Fig. 18 On-board computer: Average fuel consumption

The following items of information are processed by the on-board computer and can be shown one after the other on the display in the instrument cluster.

Fuel range

۲

26

The estimated fuel range is displayed in km. It shows how far the vehicle can be driven with the amount of fuel left in the tank, assuming the same style of driving. The fuel range is displayed in increments of 10 km.

The fuel range is calculated on the basis of the fuel consumption over the last 30 kilometres. The fuel range will increase accordingly if you drive in a more economical manner.

Average fuel consumption

This mode displays the average fuel consumption since the memory was last cancelled in litres/100 km. If required, you can use this display to adjust your driving style to achieve the desired fuel consumption.

Current fuel consumption

The display shows the current fuel consumption in litres/100 km. If required, you can use this display to adjust your driving style to achieve the desired fuel consumption.

The computer calculates the fuel consumption every 30 metres. The display switches to I/h (litres per hour) when the vehicle is stationary.

Average speed

This mode shows the average speed driven since the memory was last cancelled (in km/h).

Driving time

This display shows the period of time which has elapsed since the memory was last cancelled.

Distance covered

This display shows the distance you have covered since the memory was last cancelled.

🚺 Note

• The displays for fuel consumption (average and current consumption), fuel range and speed are shown in metric units. You can change the measurement units via the sound system or MMI*.

• The information in the memory is cancelled if the battery is disconnected.

Applies to vehicles: with on-board computer

Memory The on-board computer has two automatic journey



Fig. 19 On-board computer: Memory 1 document_0900452a81b1b9de.book Seite 27 Donnerstag, 26. Juli 2007 9:16 09

Press RESET button (B) \Rightarrow fig. 20 to switch back and forward between the functions of on-board computers 1 and 2.

The number in the display \Rightarrow page 26, fig. 19 indicates which of the two memories is currently in use. The figure 1 means that the display is showing the information in the single journey memory (on-board computer 1). The figure 2 means that the display is showing the information in the total journey memory (on-board computer 2).

Single journey memory (on-board computer 1)

The single journey memory processes the information on a journey from the time the ignition is switched on until it is switched off. If the journey is resumed **within two hours** after the ignition is switched off, the new figures are automatically included in the calculation. The memory is automatically deleted when you resume driving, if the journey is interrupted for **more than two hours**.

Total journey memory (on-board computer 2)

Unlike the single journey memory, the total journey memory is not erased automatically. In this way, you can determine the period for which you wish the on-board computer to supply figures.

Driver information system

27

Applies to vehicles: with on-board computer

Controls

The on-board computer is controlled by means of two switches on the windscreen wiper lever.



Fig. 20 Windscreen wiper lever: On-board computer controls

Press the top or bottom of the function selector switch

 (A) ⇒ fig. 20. This displays the on-board computer readouts one after the other.

 
The on-board computer can only be operated while the ignition is switched on. When the ignition is switched on, the display shows the function that was last selected.

As well as the figures from the on-board computer (computer 1 or 2), the display can also show information from other systems. Press the Reset button (a) briefly to switch back and forward between these displays.

Resetting figures to zero

To cancel one of the computer readings **individually**, select the required function and press the RESET button (a) for at least one second. The following values can be reset to zero **individually** using the Reset button:

- Average fuel consumption
- Average speed



document_0900452a81b1b9de.book Seite 28 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

Driving time

28

Distance covered

You can also cancel **all** the values in the single journey memory or the total journey memory at the same time \Rightarrow page 28.

i Note

The information in the memory is cancelled if the battery is disconnected. \blacksquare

Applies to vehicles: with on-board computer

Basic settings for the on-board computer

The basic settings for the on-board computer can be adjusted via the sound system or MMI*.



 Select: Function selector button (CAR) > Instrument cluster > On-board computer 1 or On-board computer 2.

You can zero all the values in the single journey memory or the total journey memory at the same time by selecting the **Reset** menu item.

You can also define which items of information you wish to have displayed by the on-board computer. If one of these items is switched **off**, it will not appear in the display. However, the corresponding figures will still be registered by the on-board computer

and can be switched back \mathbf{on} at any time so that they again appear in the display. \blacksquare

Speed warning function

Applies to vehicles: with speed warning function

Introduction

The speed warning function can help you keep below a pre-set maximum speed.

The speed warning function will warn you if the vehicle exceeds the pre-set maximum speed. The system gives an audible warning signal if the set speed is exceeded by about 3 km/h. A warning symbol will also appear in the display. On some models the symbol may look slightly different.

The speed warning function has **two** different warning speeds, which operate independently and serve slightly different purposes:

Speed limit warning 1 😔

With speed limit warning 1, the maximum speed can be changed while driving. The speed limit that has been set remains stored until the ignition is switched off, or until it is changed or cleared.

The speed limit warning symbol \bigcirc for speed limit warning 1 will appear in the display if you exceed the pre-set speed. It goes out again if the speed is reduced below the set speed limit.

The symbol also goes out if the speed is *increased* to more than about 40 km/h above the set speed for at least 10 seconds. This cancels the speed limit that was originally set.

Setting speed limit warning $1 \Rightarrow page 29$.

Speed limit warning 2 😔

You are recommended to store this speed limit warning if you *always* wish to be reminded of a particular speed limit. This could be when driving in countries with general speed limits, or if you



document_0900452a81b1b9de.book Seite 29 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

need to keep below a particular speed when winter tyres are fitted, etc.

The speed limit warning symbol \bigcirc for speed warning 2 will appear in the display if you exceed the pre-set speed. Unlike speed limit warning 1, the warning symbol only goes out once the road speed has dropped below the stored value again.

Setting speed limit warning 2 \Rightarrow page 29.

i Note

Please bear in mind that, even with the speed warning function, it is still important to keep a check on the car's speed with the speedometer and to observe the statutory speed limits. ■

Applies to vehicles: with speed warning function

Setting speed limit warning 1

You can use the SET button to set, alter or cancel speed limit warning 1.



Selecting speed limit

- Drive at the desired maximum speed.
- Press the $\underline{(\text{SET})}$ button in the instrument cluster \Rightarrow fig. 22 for one second.

Clearing speed limit

Drive the vehicle at a minimum of 5 km/h.

Press the SET button for at least 2 seconds.

The speed warning symbol \bigcirc lights up briefly in the display to confirm that the selected speed has been stored. The speed limit that has been set remains stored until another speed is set with a brief push of the button, or until the memory is cleared with a long push of the button.

When the speed limit has been cleared, the display will show a crossed-out warning symbol $\overleftrightarrow{\mathbf{O}}.$ \blacksquare

Applies to vehicles: with speed warning function

Setting speed limit warning 2


You can use the sound system or MMI* to set, alter or cancel speed limit warning 2.



Fig. 23 Display: Setting speed limit warning 2

 Select: Function selector button (CAR) > Instrument cluster > Speed warning.

 • Speed warning on/off - to activate or deactivate the speed warning function \Rightarrow fig. 23.



document_0900452a81b1b9de.book Seite 30 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

• Speed warning - to set the speed above which a warning signal will sound.

Speed limit warning 2 can be adjusted in increments of 10 km/h between 30 and 240 km/h. \blacksquare

Auto-check control

Introduction

30

The auto-check control checks important components and vehicle systems. These background checks are run constantly, as long as the ignition is switched on.

A message is displayed in the instrument cluster if a fault should occur or if any maintenance or repairs are urgently required. This is accompanied by an audible warning signal. Depending on the priority of the fault, a red or yellow warning symbol lights up in the display.

The red symbols indicate a **serious malfunction**, whereas the yellow ones represent other **malfunctions** or items requiring attention. Additional messages to assist the driver may be shown with the red or yellow symbols.

Automatic gearbox* function test

The auto-check control automatically checks the vehicle systems when the ignition is switched on. If the selector lever is in position P or N, the following instruction will appear:

When stationary apply footbrake while selecting gear

When a gear (R, D etc.) is selected, this message disappears and the auto-check control function is displayed.

The driver message will disappear 30 seconds after switching on the ignition or earlier, if there are other driver messages or malfunctions. If one or more faults are detected, the driver information message (as above) will disappear about 15 seconds after the engine has been started and the appropriate fault symbol(s) will appear in the display. The warning display will be accompanied by the corresponding warning chime. ■

Applies to vehicles: with speed warning function

Driver messages

Additional messages to assist the driver are displayed together with the warning symbols in the instrument cluster.





For example, the following driver message will appear if the selector lever for the automatic gearbox* is not in position P when you switch off the engine:

Shift to P, otherwise vehicle can roll away. Doors do not lock if lever is not in P.

The ignition key can only be withdrawn when the selector lever is in this position. Similar messages will be displayed if other functions of this kind cannot be carried out.

Driver messages and red symbols

If a red warning symbol appears in the display, it will automatically be accompanied by the corresponding driver message.

document_0900452a81b1b9de.book Seite 31 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

For example, in the event of an oil pressure malfunction the oil pressure symbol 🕁 will appear in the display. In addition, the following message will appear:

Switch off engine and check oil level

The message will disappear from the display after about 5 seconds. If required, the message can be called up again by briefly pressing the (SET) button \Rightarrow page 30, fig. 24.

Driver messages and yellow symbols

If a yellow warning symbol appears in the display, it will automatically be accompanied by the corresponding driver message.

For example, if the symbol \backsim appears (windscreen washer fluid low), the display will also show the message:

Please top up washer fluid

The message will disappear after a few seconds. If required, the message can be called up again by briefly pressing the SET button.

Red symbols

A red symbol warns of a serious malfunction.



Fig. 25 Display: Symbol for serious

- Stop the vehicle.

Switch off the engine.

Check the function displayed. Obtain professional assistance if necessary.


The red symbols indicate a Priority 1 fault (serious malfunction).

Should a Priority 1 fault occur, a red warning symbol will appear at the top of the display \Rightarrow fig. 25. The symbol is accompanied by a driver message giving you more information about the fault. This symbol is accompanied by *three* warning chimes. The symbol will keep flashing until the fault is corrected.

If *several* Priority 1 faults are detected at the same time, the symbols are displayed one after the other for about 2 seconds at a time.

This message will disappear after about 5 seconds, but you can call it up again at any time by pressing the SET button \Rightarrow page 30.

÷	Alternator fault	\Rightarrow page 32	
(!)	Fault in brake system/parking brake	\Rightarrow page 32	
£	Coolant level too low / coolant temperature too high	\Rightarrow page 33	
dir.	Engine oil pressure too low	\Rightarrow page 33	
	Add engine oil immediately	\Rightarrow page 34	
;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;	Fault in the steering system	\Rightarrow page 34	
•	Ignition lock defective	\Rightarrow page 34	
(])	Tyre pressure monitoring	\Rightarrow page 39	-

 

document_0900452a81b1b9de.book Seite 32 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

Alternator fault 🚞

If the symbol ⊡ flashes in the instrument cluster display, there is an alternator fault or a fault in the vehicle's electrical system. In addition, a message will appear. This message will disappear after about 5 seconds, but you can call it up again at any time by pressing the [SET] button.

You should normally be able to drive to the next available qualified workshop. However, you should avoid using electrical equipment that is not absolutely necessary because this will drain the battery.

U Caution

32

If the coolant warning lamp \pounds in the instrument display lights up as well as the alternator warning lamp while driving \Rightarrow *page 33*, stop the vehicle immediately and switch off the engine. In this case the coolant pump is no longer being driven, and there is a risk of engine damage.

Fault in the brake system

A fault in the brake system should be corrected as soon as possible.

If the symbol (1) flashes in the display, there is a fault in the brake system. The symbol is accompanied by a driver message giving you more information about the fault. This message will disappear after about 5 seconds, but you can call it up again at any time by pressing the (SET) button:

Stop vehicle and check brake fluid level

- Stop the vehicle.
- Check the brake fluid level \Rightarrow page 262.
- Obtain professional assistance if necessary.

Warning! Fault in ABS brake system. Contact workshop

- Drive carefully to the nearest qualified workshop and have the fault rectified $\Rightarrow \triangle$.

Parking brake ! Please contact workshop

- If the symbol appears after you switch on the ignition when the vehicle is stationary, please check whether you can release the parking brake. If this is possible, you should drive without delay to the nearest qualified workshop and have the fault rectified. If the parking brake cannot be released you should obtain professional assistance.
- If this symbol should appear while driving, there may be a malfunction in the drive-away assist or the emergency brake functions. You may not be able to apply the parking brake. It is also possible that you cannot release the parking brake after it has been applied. Drive the vehicle to a qualified workshop and have the fault repaired.

If the ABS fails, the ABS warning lamp \boxdot will light up together with the brake warning symbol $@\Rightarrow \triangle.$

• Before opening the bonnet and checking the brake fluid level, observe the warning information on \Rightarrow page 255, "Working on components in the engine compartment".

• If the brake fluid level in the reservoir is too low, this could result in an accident. Do not drive on. You should obtain professional assistance.

• If the brake warning lamp lights up together with the ABS warning lamp, this can mean that the control function of the ABS is out of action. As a result the rear wheels can lock relatively

document_0900452a81b1b9de.book Seite 33 Donnerstag, 26. Juli 2007 9:16 09

M WARNING (continued)

easily when braking. This could cause the tail of the vehicle to skid sideways. Drive carefully to the nearest qualified workshop and have the fault rectified.

i Note

The warning lamp (①) in the instrument cluster will start flashing as well if there is a fault in the brake system. ■

Fault in the cooling system 🚣

Faults in the cooling system must be rectified immediately.

If the L symbol flashes in the display, this means that either the coolant *temperature* is too high or the coolant *level* is too low. The symbol is accompanied by a driver message giving you more information about the fault. This message will disappear after about 5 seconds, but you can call it up again at any time by pressing the <u>SET</u> button:

Switch off engine, check coolant level

- Stop the vehicle.
- Switch off the engine.
- Check the coolant level \Rightarrow page 261.
- Add more coolant if necessary \Rightarrow page 261.
- Wait for the symbol to go out before driving on.
- Obtain professional assistance if necessary.

If the coolant level is correct, the overheating may be caused by a malfunction of the radiator fan.

Driver information system

If the alternator warning lamp lights up as well \Rightarrow page 32, it is possible that the drive belt has broken.

WARNING

• If your vehicle should break down for technical reasons, stop it at a safe distance away from moving traffic, switch off the engine and turn on the hazard warning lights \Rightarrow page 61, "Hazard warning lights \blacktriangle ".

 Never open the bonnet if you can see or hear steam or coolant escaping from the engine compartment; there is a risk of being scalded. Wait until you can no longer see or hear escaping steam or coolant.

• The engine compartment of any motor vehicle is a dangerous place. Before carrying out any work in the engine compartment, switch off the engine and allow it to cool down. Please observe the important safety warnings ⇒ *page 255,* "Working on components in the engine compartment".

 
U Caution

Do not drive on if the symbol ≟ has come on to indicate a fault in the cooling system, otherwise there is a risk of damaging the engine. ■

Engine oil pressure too low 🗠

If the engine oil pressure is too low the fault must be rectified immediately.

If the 😁 symbol flashes in the display, the oil pressure is too low. The symbol is accompanied by a driver message giving you more information about the fault. This message 🕨



document_0900452a81b1b9de.book Seite 34 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

will disappear after about 5 seconds, but you can call it up again at any time by pressing the \fbox{ET} button:

Switch off engine and check oil level

- Stop the vehicle.
- Switch off the engine.
- Check the engine oil level \Rightarrow page 258.
- Obtain professional assistance if necessary.

If the engine oil level is too low

If the engine oil level is too low, add more oil \Rightarrow page 259.

If the engine oil level is correct

If the 😁 symbol flashes and the engine oil level is correct, obtain professional assistance. Do not drive on. Do not continue to run the engine, **not even at idle speed**.

🚺 Note

The oil pressure warning lamp \xrightarrow{end} is not an indicator for the oil level. The oil level should therefore be checked regularly.

Add engine oil immediately 🛸

蹄 WARNING! Please add oil immediately

If the 🛸 symbol lights up, you must add oil immediately \Rightarrow page 259.

Fault in the steering system 🛛 🗝

The steering wheel cannot be unlocked if there is a fault in the electronic steering lock.

If the symbol solution of the display, there is a malfunction in the electronic steering lock. The symbol is accompanied by a driver message giving you more information about the fault. This message will disappear after about 5 seconds, but you can call it up again at any time by pressing the SET button:

Do not drive vehicle. Steering defective

- You should obtain professional assistance.
- Do not have the vehicle towed away.

The vehicle must not be towed if there is a fault in the electronic steering lock: the steering will be locked and the vehicle cannot be steered. Towing a vehicle with locked steering can cause an accident.

i Note

On some models the symbol may look slightly different. \blacksquare

Ignition lock defective 0-

A fault in the ignition lock must be rectified immediately.

If the symbol \odot -flashes in the display, there is a malfunction in the electronic ignition lock. The symbol is accompanied by a driver message giving you more information about the fault. This message will disappear after about document_0900452a81b1b9de.book Seite 35 Donnerstag, 26. Juli 2007 9:16 09

5 seconds, but you can call it up again at any time by pressing the SET button:

Ignition lock defective. Contact workshop!

- Do not switch off the engine.
- Drive the vehicle without delay to a qualified workshop and have the fault repaired.

The ignition cannot be switched off if there is a fault in the electronic ignition lock. For this reason, you should drive the vehicle without delay to a qualified workshop and have the cause of the fault repaired.

If the vehicle is equipped with the advanced key* feature, you should not switch off the engine with the Stop/Start button because it cannot be started again after the ignition has been switched off.

Note

On some models the symbol may look slightly different.

Yellow symbols

Controls

A yellow symbol indicates a malfunction or other item requiring attention.



Fig. 26 Display: Yellow warning symbol Driver information system

Yellow symbols indicate a Priority 2 fault.

Yellow symbols are accompanied by *one* warning chime. The symbol is accompanied by a driver message giving you more information about the fault. This message will disappear after about 5 seconds, but you can call it up again at any time by pressing the <u>(SET)</u> button.

The function indicated should be checked as soon as possible. The yellow symbol will only go out when the fault has been rectified. If several Priority 2 faults are detected at the same time, the symbols are displayed one after the other for about 2 seconds at a time.

	Dynamic steering	\Rightarrow page 36 and \Rightarrow page 159	
	Brake pads worn	\Rightarrow page 37	
÷ •	Battery power*	\Rightarrow page 38	
	Bulb monitor* Bulb failure*	\Rightarrow page 37	
	Check engine oil level	\Rightarrow page 38 or \Rightarrow page 38	
	Engine oil sensor defective	\Rightarrow page 38	
EÐ	Fuel level low	\Rightarrow page 37	
	Washer fluid level low*	\Rightarrow page 37	
?	advanced key* Key not in vehicle	\Rightarrow page 36	
	Light sensor/rain sensor defec- tive	\Rightarrow page 37	
	Diesel particulate filter* obstructed	\Rightarrow page 38	•
General mainte	enance Self-he	lp Techn	ical data

document_0900452a81b1b9de.book Seite 36 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

36

Image: Dynamic headlight range constructions \Rightarrow page 39trol* defective \Rightarrow page 39Sattery in remote control key \Rightarrow page 44Image: Displaying brake \Rightarrow page 123adaptive light* defective \Rightarrow page 39Image: Displaying brake \Rightarrow page 39 <t< th=""><th></th><th></th><th></th></t<>			
Image: second		,	\Rightarrow page 39
parking brake projection parking brake projection adaptive light* defective ⇒ page 39 parking brake ⇒ page 39		Battery in remote control key	\Rightarrow page 44
Ignition lock defective ⇒ page 39			\Rightarrow page 123
Image: second	≣C)	adaptive light* defective	\Rightarrow page 39
Suspension control ⇒ page 39 TPMS Tyre pressure monitoring sys- ⇒ page 39		Ignition lock defective	\Rightarrow page 39
TPMS Tyre pressure monitoring sys- ⇒ page 39		Windscreen wiper defective	\Rightarrow page 39
, , , , , , , , , , , , , , , , , , , ,		Suspension control	\Rightarrow page 39
		, , , , , , , , , , , , , , , , , , , ,	\Rightarrow page 39

i Note

On some models the speed limit warning $1 \stackrel{\bigcirc}{\ominus}$ and speed limit warning $2 \stackrel{\bigcirc}{\ominus}$ will also be displayed as yellow symbols. These always appear as a small symbol at the top of the display \Rightarrow *page 28.*

Applies to vehicles: with Audi drive select
Dynamic steering

😔 Dynamic steering: system fault

This message and the \bigcirc symbol will appear if a fault develops in the system while the vehicle is moving. You can continue driving carefully at reduced speed to the next qualified workshop, however the steering may feel heavier and its response may be more sensitive

than usual. In addition, it is possible that the steering wheel will be off centre when driving in a straight line.

Dynamic steering: initialising

If this message appears and the warning lamp \gtrsim flashes in the instrument cluster, this indicates that the dynamic steering is being initialised. The steering wheel will move slightly after the engine is started. The dynamic steering may be initialised if the steering wheel was moved while the vehicle was stopped. The warning lamp will go out when the initialisation has been completed.

Have the system malfunction in the dynamic steering repaired by a qualified workshop as soon as possible – risk of accident.

i Note

The stabilisation functions of the dynamic steering \Rightarrow page 222 are not available in the event of a system malfunction. \blacksquare

Applies to vehicles: with advanced key Key not in vehicle 4

💪 Key not in vehicle

This message will appear together with the symbol $\stackrel{\sim}{\rightarrow}$ if the remote control key is removed from the vehicle while the engine is running. This is to remind you not to continue driving without the key (for example if you change drivers).

If the remote control key is not in the vehicle you will not be able to switch on the ignition or restart the engine after it has been switched off. You will also not be able to lock the vehicle from the outside. \blacksquare

document_0900452a81b1b9de.book Seite 37 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

Light sensor / rain sensor defective 🖉

@ Automatic headlights / automatic wipers defective

Brake pads worn 🔘

O Brake pads!

If the \bigcirc symbol lights up, have the front brake pads (and, for safety's sake the rear pads as well) inspected by a qualified workshop. \blacksquare

Applies to vehicles: with bulb monitor

Bulb monitor

The bulb monitor checks whether the lights on the vehicle are working.

The bulb monitor checks whether the lights on the vehicle are working. If it detects a defective bulb on the vehicle it will show a yellow warning symbol together with a message indicating which light is not working.

Bulb failure 💈

If the symbol $\frac{\delta}{2}$ lights up, this means that one of the turn signals (front or rear), headlights, brake lights, rear lights, fog lights or the rear fog light is not working.

· · · · · · · ·

WARNING
 Bulbs are sensitive to pressure. The glass can break when you touch the bulb, causing injury.

 Incorrect handling of the high-voltage element of xenon gasdischarge bulbs* can have potentially fatal consequences.

i Note

Have the components repaired or replaced by a qualified workshop. \blacksquare

Applies to vehicles: with washer fluid warning system
Washer fluid level low

Please top up washer fluid

 
If the \bigcirc symbol lights up, top up the fluid for the windscreen washer and headlight washer system^{*} \Rightarrow page 267.

Fuel level low 🔒

🖯 Please refuel

When this symbol \bigcap comes on for the first time, there are about 8 litres of fuel left in the tank. You should fill up as soon as possible \Rightarrow page 252.

If this warning symbol lights up although the fuel tank is sufficiently filled, there is a malfunction in the fuel tank system. The display will also show the driver message **Tank system malfunction ! Contact workshop**. **■**



document_0900452a81b1b9de.book Seite 38 Donnerstag, 26. Juli 2007 9:16 09

Driver information system

38

Applies to vehicles: with battery power warning system
Battery power

If battery power drops to a level at which you may encounter problems when starting the engine, the display will show the symbol and the driver message Low battery charge: Battery will be charged while driving.

Please bear in mind that the starting ability of the engine may be impaired while this message is shown.

Message comes on and goes out again

If the message appears in the display after the ignition is switched on or while driving, and goes out again after a period of time, the battery has been charged up again sufficiently while the vehicle was being driven.

Message comes on and does not go out

If the message appears in the display after the ignition is switched on or while driving, and does not go out again, the battery is not being maintained at the proper power level. Starting reliability may be impaired. You should have the battery checked by a qualified workshop as soon as possible.

Engine oil level (without dipstick) 😂

端 Add oil, max. 1L. You may continue driving.

If the 😒 symbol lights up in conjunction with this driver message, add not more than 1 litre of oil at the next opportunity \Rightarrow page 259.

Check engine oil level (with dipstick) 端

端 Please check oil level

If the $\stackrel{\text{construction}}{\longrightarrow}$ symbol lights up in conjunction with this driver message, please check the engine oil level as soon as possible \Rightarrow page 258. Top up the oil at the next opportunity \Rightarrow page 259.

Engine oil sensor defective 🛸

Sensor defective

If the \cong symbol lights up, take the vehicle to a qualified workshop and have the oil level sensor checked. Until then it is advisable to check the oil level every time you fill up with fuel \Rightarrow page 258.

Applies to vehicles: with diesel engine and diesel particulate filter Diesel particulate filter obstructed

👄 Particle filter. See Owner's Manual

When the symbol I lights up you can assist the self-cleaning function of the filter by driving accordingly. You should drive at a speed of at least 60 km/h (engine speed about 2,000 rpm) for about 15 minutes in 4th or 5th gear, or with the selector lever in position S on vehicles with automatic gearbox*. As a result of the increase in temperature the soot in the filter will be burned off. The symbol will disappear once the cleaning process has been completed successfully.

If the symbol - does not go out, please contact a qualified workshop and have the fault rectified.

For further information on the diesel particulate filter \Rightarrow page 229.

It is essential that you adjust your speed to suit the weather, road, terrain and traffic conditions. The recommended driving speed must never lead to the driver disregarding the traffic regulations. ■

document_0900452a81b1b9de.book Seite 39 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with dynamic headlight range control
Headlight range control defective

D Headlight range control defective

This symbol \bigcirc indicates a malfunction in the dynamic headlight range control. Take the vehicle to a qualified workshop to have the dynamic headlight range control function repaired.

Applies to vehicles: with adaptive light adaptive light defective SO

adaptive light defective

This symbol [©] indicates that the adaptive light is defective. Take the vehicle to a qualified workshop to have the headlights and/or the control unit for the adaptive light repaired. ■

Ignition lock defective 🛹

-v Ignition lock defective

If the symbol → lights up in the display, there is a malfunction in the electronic ignition lock. Take the vehicle to a qualified workshop to have the problem remedied.

Applies to vehicles: with Audi drive select

Suspension control

This warning lamp monitors the damping effect of the shock absorbers.

Suspension: system fault

If the $\frac{2}{3}$ symbol lights up in the display, there is a malfunction in the vehicle suspension. Take the vehicle to a qualified workshop to have the problem remedied.

Driver information system

Windscreen wipers defective 🐢

Windscreen wipers defective

This symbol \P indicates a malfunction in the electronics for the windscreen wipers. Take the vehicle to a qualified workshop to have the windscreen wiper system repaired. \blacksquare

Tyre pressure monitoring system


Applies to vehicles: with tyre pressure monitoring


Tyre pressure monitoring display appears
The tyre pressure monitoring display in the instrument

cluster informs the driver if the tyre pressure is too low or a system malfunction has occurred.



  Fig. 27 Display: Warning message with symbol and text





The tyre pressure monitoring system makes use of the ABS sensors to compare the rolling circumference and the vibration of the wheels. The display in the instrument cluster alerts the driver if changes are detected on one or more wheels. If only one tyre is affected, the display will indicate its position \rightarrow fig. 27.

Fig. 28 Display:

System fault ("Systemstörung")

Each time you change a tyre or the tyre pressures on your vehicle, you must store the new tyre pressures via the sound system or MMI* \Rightarrow page 41.

The rolling circumference and vibration can change if:

- The tyre pressure is too low
- The tyre has suffered structural damage

2696 km 125.9

D4 *-2.5'c

• The air pressure in one or more tyres was changed and the new tyre pressures were not stored \Rightarrow page 41, "Storing the tyre pressures"

• The wheels were changed and the new tyre pressures were not stored \Rightarrow page 41, "Storing the tyre pressures"

• There is a greater load on the wheels of one axle (e.g. if you are carrying more passengers or luggage)

• The road surface under the left wheels is different to the road surface under the right wheels for a long period

Warning lamp (1) / TPMS Tyre pressure ! System malfunction If the warning lamp (1) flashes for about a minute and then remains lit after you switch on the ignition, there is a fault in the system.


TPMS (Tyre Pressure Monitoring System) Tyre pressure ! System malfunction \Rightarrow page 40, fig. 28 will also be displayed in the instrument cluster. Please contact the nearest qualified workshop as soon as possible.

 
 If the tyre pressure warning lamp appears in the instrument cluster display, slow down immediately and avoid any severe braking or steering manoeuvres. As soon as you can do so safely, stop and check the tyres and the tyre pressures.

 It is the driver's responsibility to ensure that the tyre pressures are correct. For this reason you must check the tyre pressures regularly.

 Under certain conditions (e.g. driving at high speeds, on ice and snow or on poor road surfaces) the tyre pressure warning lamp may not light up immediately or not at all.

● Please ask your Audi dealer or qualified workshop whether run flat tyres can be used on your vehicle. Unauthorised use of these tyres can invalidate the vehicle's type approval for use on public roads. Furthermore, this could cause damage to your vehicle and possibly also result in an accident. ■

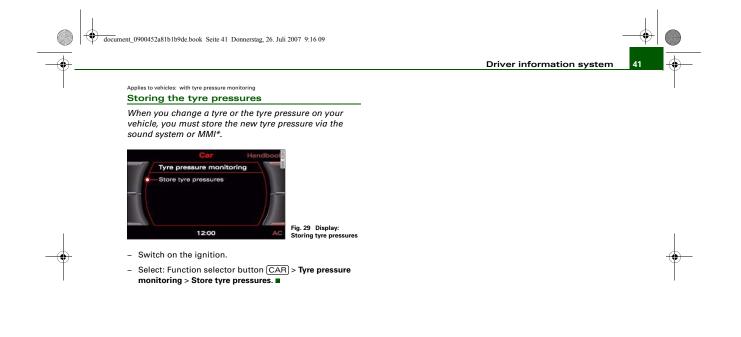



document_0900452a81b1b9de.book Seite 42 Donnerstag, 26. Juli 2007 9:16 09

Doors and windows

Doors and windows

Central locking system

Description

The vehicle can be locked and unlocked via the central locking system. You can use any of the following:

- Remote control key \Rightarrow page 47
- Door handles in conjunction with advanced key* \Rightarrow page 47
- Lock on driver's door ⇒ page 48
- Interior central locking switch \Rightarrow page 49

Unlocking one side of the vehicle only

When you lock the vehicle, the central locking system will lock the doors and the boot lid. When you unlock the vehicle, the central locking system will unlock either the driver's door *only*, or all the locks on the vehicle, depending on the setting you have selected on the sound system or MMI* \Rightarrow *page 50*.

Automatic locking function (Auto Lock)

The Auto Lock function locks the doors and the boot lid when the vehicle exceeds a speed of about 15 km/h.

The vehicle is unlocked again when the ignition key is removed. Alternatively, the vehicle can also be unlocked via the central locking switch or by pulling one of the inside door handles. The Auto Lock function can be switched on and off on the sound system or $MM^{\dagger} \Rightarrow page 50$.

In the event of an accident in which the airbags inflate, the doors will be automatically unlocked to facilitate access and assistance.

Deadlock mechanism

The central locking system is combined with a deadlock mechanism. Once the vehicle has been locked from the outside, the door handles on the inside are deactivated. This makes it more difficult to break into the vehicle.

Anti-theft alarm system*

If the anti-theft alarm system senses interference with the vehicle it triggers an audible and visible alarm.

The anti-theft alarm system switches on automatically when the vehicle is locked. It switches off automatically if you unlock the vehicle using the **remote control**.

If you unlock the vehicle by inserting the **key** in the driver's door, the ignition must be switched on within 15 seconds, otherwise the alarm will be triggered. On some export versions, the alarm is triggered immediately when you open a door.

To deactivate the alarm, press the unlock button on the remote control key or switch on the ignition. The alarm will also switch itself off when it comes to the end of its cycle.

Switch off the interior monitor and tow-away protection if you wish to prevent the alarm from being triggered accidentally \Rightarrow page 50.

Turn signals

The turn signals will flash twice when the vehicle is unlocked and once when the vehicle is locked. If the turn signals do not flash, one of the doors, the bonnet or the boot lid is still open.

Accidental lock-out

The central locking system prevents you from being locked out of the vehicle in the following situations:

• When the driver's door is open, it cannot be locked together with the other doors by pressing the central locking switch and then closing the door \Rightarrow page 49.

• On vehicles with advanced key*, the boot lid will be released again automatically if the remote control key that was last in use is left inside the boot when the boot lid is closed \Rightarrow page 51.

document_0900452a81b1b9de.book Seite 43 Donnerstag, 26. Juli 2007 9:16 09

Doors and windows

To prevent yourself from being locked out, do not lock the vehicle with the **remote control key** before closing the doors or boot lid. If you accidentally press the locking button on your remote control key when any of the doors (except for the driver's door) are open, then put the key down inside the car and forget to take it with you when you close the doors, you can still open the doors for about one minute before the vehicle is locked.

Do not leave anyone (especially children) in the car if it is locked from the outside and the deadlock mechanism is activated: the doors and windows cannot then be opened from the inside. Locked doors could delay assistance in an emergency, potentially putting lives at risk.

 
i Note

• Never leave any valuable items in the vehicle unattended. Even a locked vehicle is not a safe.

 If the diode on the driver's window sill lights up for about 30 seconds when the vehicle is locked, the central locking system or anti-theft alarm* is not working properly. Please have the malfunction repaired by an Audi dealer or qualified workshop.

• The interior monitor of the anti-theft alarm* system will only function as intended if the windows and the tilting panorama roof* are closed. ■

Set of keys



A Remote control key

The remote control key will lock and unlock the car and start the engine.

B Spare key

The spare key is intended for temporary use only and should be used only in an emergency. Keep it in a safe place and do not carry it on the keyring.

Replacing a key

If you should lose a key, please contact an Audi dealer. Have the remote control coding for *that* key deactivated. For this purpose you should bring all available keys with you. It is also important to notify your insurance company if a key has been lost.

Electronic immobiliser

The immobiliser is designed to prevent unauthorised persons from driving the vehicle. If an uncoded key is used, **SAFE** will appear in the mileage recorder display.

It may not be possible to start the engine with the key if there is another ignition key from a different make of vehicle on the same key ring.



document_0900452a81b1b9de.book Seite 44 Donnerstag, 26. Juli 2007 9:16 09

Doors and windows

۲

Data stored on remote control key

Data related to the service and maintenance of the vehicle are stored continuously on your remote control key. Your Audi dealer can read out the data and will then be able to tell you what service work is required. This also applies to vehicles with advanced key.

Personal convenience settings

If two people use the same car regularly, it is a good idea for each person to have his or her "own" remote control key. When you switch off the ignition or lock the vehicle, your personal settings for the following convenience features are stored and assigned to the remote control key:

- Air conditioner
- Central locking system
- Windows
- parking system*
- adaptive cruise control*
- Audi drive select*
- Seat memory*

The stored settings are then recalled automatically the next time the vehicle is unlocked, the doors are opened or the ignition is switched on.

 Always take the key with you when leaving the vehicle - even if you only intend to be gone for a short time. This is especially important if children are left in the car. They might otherwise be able to start the engine or use power-operated equipment such as the electric windows - this could lead to injuries.

 Wait for the vehicle to come to a standstill before removing the ignition key from the lock. Otherwise the steering lock could engage suddenly, causing an accident.

i Note

The function of the remote control key may be impaired by interference from other nearby radio signals (for example from a mobile telephone or TV transmitter) if these are in the same frequency range.

Indicator lamp on remote control key

The indicator lamp on the remote control key lights up when you press the buttons.




Fig. 31 Indicator lamp on remote control key

The indicator lamp should light up once briefly when you press one of the buttons briefly. The indicator lamp should flash when you press and hold one of the buttons (convenience open/close).

If the indicator lamp does not light up, this means the battery is exhausted and must be replaced $\Rightarrow page 45$. The instrument cluster display also shows the symbol $\frac{1}{2}$ and the following message if the battery is exhausted:

Please change key battery

<u>∳</u> _∳|

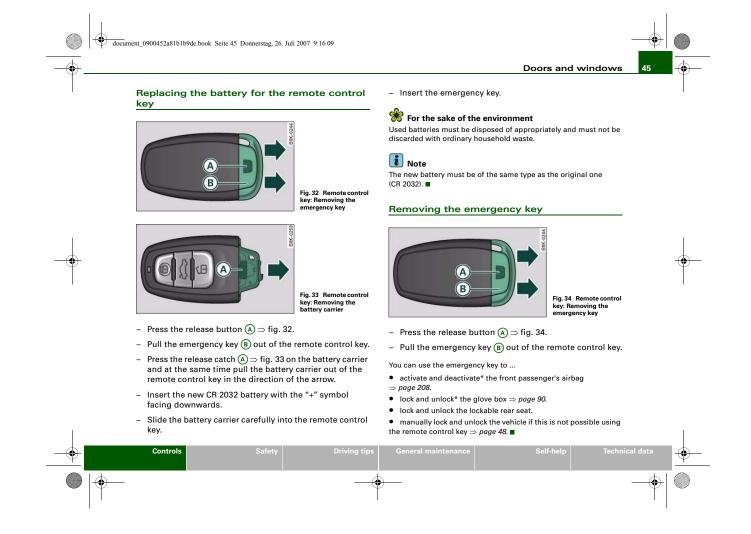

document_0900452a81b1b9de.book Seite 46 Donnerstag, 26. Juli 2007 9:16 09

Doors and windows

۲

46

Emergency release for ignition key

In the event of a malfunction in the vehicle's electrical system, it may no longer be possible to remove the ignition key.



Fig. 35 Ignition lock

If you are not able to remove the ignition key because the vehicle battery has discharged (for example), remove the key as follows:

- Press the release catch (A) \Rightarrow fig. 35 using a ball-point pen or a similar object and pull the emergency key (B) out of the remote control key.
- Use the emergency key to lock the vehicle \Rightarrow page 48.
- Have the vehicle's electrical system checked by a qualified workshop. ■

Starting the vehicle with the spare key

 


Fig. 36 Glove box: Adapter for spare key


 


Fig. 37 Inserting the spare key into the adapter

- Take the adapter for the spare key out of the glove box \Rightarrow fig. 36.
- Slide the spare key \Rightarrow fig. 37 all the way into the adapter. Make sure that the Audi rings are facing upwards.
- Press the spare key in the adapter downwards until you hear it engage.
- Insert the adapter, spare key first, into the ignition lock. You should now be able to start the engine in the usual way.

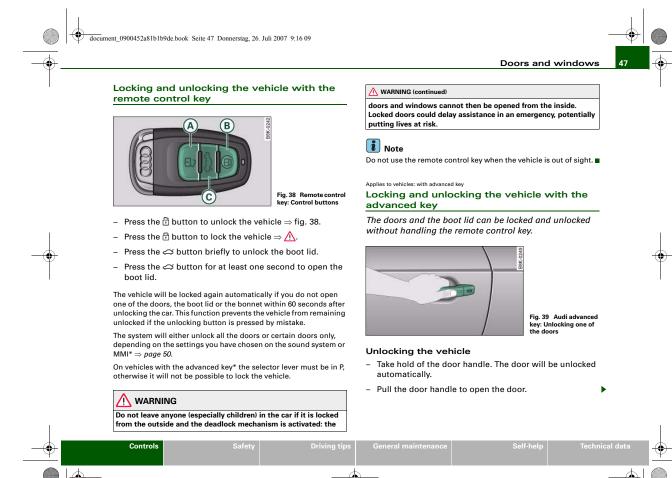

document_0900452a81b1b9de.book Seite 48 Donnerstag, 26. Juli 2007 9:16 09

Doors and windows

Locking the vehicle

- Move the selector lever to position P (automatic gearbox), otherwise it will not be possible to lock the vehicle.
- Touch the sensor on the door handle **once** to lock the vehicle $\Rightarrow \Delta$.
- Touch the sensor a second time within 2 seconds to lock the vehicle without activating the deadlock mechanism.

The vehicle can be locked and unlocked from any of the doors. The driver's door will always be unlocked as well when the passenger's door is unlocked. The remote control key has to be within a range of about 1.5 metres of the relevant door or the boot lid. It does not matter where you carry the key, for instance whether it is in your jacket pocket or in a briefcase.

The unlocking function may be affected if the sensor area on the door handle is touched while the vehicle is being unlocked.

The locking function may be affected if you grasp the door handle while the vehicle is being locked.

Once the doors have been locked, they cannot be opened again immediately. This will enable you to check that the doors are properly closed.

The system will either unlock all the doors or one door only, depending on the settings you have chosen on the sound system or MMI* \Rightarrow page 50.

Do not leave anyone (especially children) in the car if it is locked from the outside and the deadlock mechanism is activated: the doors and windows cannot then be opened from the inside. Locked doors could delay assistance in an emergency, potentially putting lives at risk.

i Note

Please note the following points if the vehicle is left parked for long periods:

• To save electrical power, the proximity sensors are switched off after a few days. You will then need to pull the door handle once to unlock the vehicle, and a second time to open it.

• To prevent the battery from becoming discharged and thus maintain the vehicle's starting ability for as long as possible, the power management system will gradually switch off convenience functions that are not required. In this case you may not be able to unlock the vehicle with this convenience function.

Locking and unlocking the vehicle using the key

If the central locking system should fail to work, you can still lock and unlock the driver's door by turning the emergency key or spare key in the lock.

 


Fig. 40 Lock on driver's door

Unlocking

- Turn the key to position (A) \Rightarrow fig. 40 to unlock the vehicle.

document_0900452a81b1b9de.book Seite 49 Donnerstag, 26. Juli 2007 9:16 09

Locking

- Move the selector lever to position P (automatic gearbox).
- Turn the key once to position $(\mathbb{B}) \Rightarrow \bigwedge$ to lock the vehicle.
- If you turn the key to position (B) a second time within 2 seconds, this will lock the vehicle without activating the deadlock mechanism.

In order to switch off the anti-theft alarm*, you must switch on the ignition within 15 seconds after opening the driver's door. Otherwise the alarm will be triggered.

If the central locking system should fail to work at any time, the passenger's door can be locked manually \Rightarrow page 51.

Do not leave anyone (especially children) in the car if it is locked from the outside and the deadlock mechanism is activated; the doors and windows cannot then be opened from the inside Locked doors could delay assistance in an emergency, potentially putting lives at risk.

i Note

• The central locking switch and the release button for the boot lid \$\approx\$ will function after the ignition is switched on.

 If the vehicle is locked with the key when the central locking system is operational, it is only possible to unlock all the doors and the boot lid centrally with the key within the next 45 seconds. After this period, the key will only unlock the driver's door. \blacksquare

Central locking switch

- Press the $\widehat{\Box}$ button to unlock the vehicle \Rightarrow fig. 41.

- Press the \square button to lock the vehicle \Rightarrow \triangle .

Please note the following when you use the central locking switch to lock your vehicle:

- The doors and the boot lid cannot be opened from the outside (for safety reasons, when stopped at traffic lights, etc.).
- The LED in the central locking switch lights up when both of the doors and the boot lid are closed and locked.
- You can open the doors individually from the inside by pulling the inside door handle.

• In the event of an accident in which the airbags inflate, doors locked from the inside will be automatically unlocked to facilitate access and assistance.

• The central locking switch is still operative when the ignition is switched off and will automatically lock the entire vehicle when pressed.

• The central locking switch inside the vehicle is not operative if you lock the vehicle from the outside.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	—
			<u> </u>			

Fig. 41 Driver's door: Central locking switcl

switch

Doors and windows

document_0900452a81b1b9de.book Seite 50 Donnerstag, 26. Juli 2007 9:16 09

Doors and windows

WARNING (continued)

 Locked doors could delay assistance in an emergency, potentially putting lives at risk. Do not leave anyone (especially children) in the vehicle.

i Note

۲

50

The doors and the boot lid are locked automatically when the vehicle reaches a speed of about 15 km/h (Auto Lock) \Rightarrow page 42. You can unlock the vehicle again via the central locking switch.

Setting the central locking system

You can use the sound system or MMI* to select which doors are unlocked by the central locking system.



Select: Function selector button CAR > Central locking
 Unlocking single door.

In the **Unlocking single door** menu you can specify which doors you wish to have unlocked when you unlock the vehicle using the remote control key or the advanced key*. If you switch the Unlocking single door function **on**, only the driver's door will be unlocked when you press the unlocking button on the remote control key once.

You can still unlock all doors and the luggage compartment. To do so, press the unlock button **twice** on the remote control key.

When you lock the vehicle, the central locking system will automatically lock all the doors and the boot lid together.

If you select "Locking boot lid/tailgate" **on**, you can no longer open the luggage compartment using the handle on the boot lid \Rightarrow page 52, fig. 46. In this case, you can open the boot lid using the

 \Rightarrow page 52, fig. 46. In this case, you can open the boot lid using the \iff button on the remote control key \Rightarrow page 47, fig. 38 or the unlock switch on the driver's door \Rightarrow page 51, fig. 45.

If you select "Retract mirrors" **on**, the exterior mirrors will be retracted automatically \Rightarrow *page* 70 when you press the lock button $\overrightarrow{\Box}$ on the remote control key.

Applies to vehicles: with anti-theft alarm system

Deactivating the interior monitor and towaway protection



Fig. 43 Front end of the driver's door: Switches for interior monitor and tow-away protection

When the vehicle is locked, the alarm will be triggered if movements are detected in the interior (e.g. by animals) or if the vehicle's inclination is changed (e.g. during transport). You can prevent the alarm from being triggered accidentally by switching off the interior monitor and/or tow-away protection. document_0900452a81b1b9de.book Seite 51 Donnerstag, 26. Juli 2007 9:16 09

Deactivating interior monitor

– Press switch (A) \Rightarrow page 50, fig. 43. The diode in the switch will light up.

Deactivating tow-away protection

Press switch (B). The diode in the switch will light up.

The interior monitor and tow-away protection will be switched on again automatically the next time the vehicle is locked.

Do not leave anyone (especially children) in the car if it is locked from the outside and the deadlock mechanism is activated: the doors and windows cannot then be opened from the inside. Locked doors could delay assistance in an emergency, potentially putting lives at risk. ■

Locking the doors manually if the central locking fails to work

If the central locking system should fail to work at any time, each door will have to be locked separately.



Doors and windows

A mechanical locking device (only visible when the doors are open) is provided on the front passenger's door and the rear doors.

- Take the emergency key out of the remote control key \Rightarrow page 45.
- Pull the cap out of the opening \Rightarrow fig. 44.
- Insert the key in the slot inside and turn it as far as the stop to the right (if the door is on the right side) or to the left (if the door is on the left side).


Once the door has been closed it can no longer be opened from the outside. The door can be opened from the inside by pulling the door handle. If the child-proof catch is engaged on one of the rear doors, the door can be opened by pulling the inside door handle once and then opening the door from the outside.

Boot lid

Opening and closing the boot lid



Fig. 45 Driver's door: Unlocking the boot lid

 

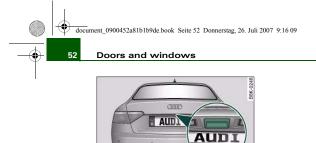


Fig. 46 Release catch on the boot lid

Opening boot lid

- Pull the unlock switch <7 on the driver's door \Rightarrow page 51, fig. 45, or
- Press the release catch on the boot lid \Rightarrow fig. 46.
- The boot lid is unlocked and opens automatically.
- Push the boot lid up slightly to secure it in the open position.

Closing boot lid

- Pull down the boot lid by the handle on the inside and let it drop into the latch $\Rightarrow \triangle$.

 After closing the boot lid, always check that the catch has engaged properly. The boot lid could otherwise open suddenly when the vehicle is moving - this could result in an accident.
 The boot lid must always be completely closed when the vehicle is moving, otherwise toxic exhaust fumes can be drawn into the interior.

i Note

When the vehicle is locked, you can unlock the boot lid separately by pressing the \backsim button on the remote control key. The boot lid will lock automatically when you close it again.

Manual release of the boot lid

The boot lid can be released manually from the inside.





- Prise off the cover (using the emergency key) \Rightarrow fig. 47.
- Press the sliding lever in the direction of the arrow to unlock the boot lid. ■

document_0900452a81b1b9de.book Seite 53 Donnerstag, 26. Juli 2007 9:16 09

Child-proof catches

Child-proof catches on the rear doors

The child-proof catches prevent the rear doors being opened from the inside.



Fig. 48 Child-proof catches on the rear

The rear doors are equipped with child-proof catches. The child-proof catches are only visible with the doors open. Take the emergency key out of the remote control key \Rightarrow page 45.

Engaging the child-proof catch

- Turn the key in the direction of the arrow \Rightarrow fig. 48.

Disengaging the child-proof catch

- Turn the key in the opposite direction of the arrow.

When the child-proof catch is engaged, the inside door handle will not function, and the door can only be opened from the outside. \blacksquare

Doors and windows

Electric windows

Controls

The driver can operate all the electric windows.



Fig. 49 Detail of the er's door: Controls

All electric windows have two-stage switches:

Opening the windows

 
- Press the switch as far as the first stop and hold it until _ the window has moved to the desired position.
- Press the switch briefly to the second stop: the window _ will automatically open all the way.

Closing the windows

- Pull the switch as far as the first stop and hold it until the window has moved to the desired position.
- Pull the switch briefly to the second stop: the window will automatically close all the way.

Switches for electric windows

- A Driver's door
 B Front passenger's door



document_0900452a81b1b9de.book Seite 54 Donnerstag, 26. Juli 2007 9:16 09

Doors and windows

C Rear door (left-side)*
D Rear door (right-side)*

s Safety switch

Child safety switch

When the safety switch (s) \Rightarrow *page* 53, fig. 49 is pressed in, the symbol \swarrow in the switch lights up. The window switches in the rear doors are deactivated.

 Always take the key with you when leaving the vehicle - even if you only intend to be gone for a short time. This is especially important if children are left in the car. They might otherwise be able to start the engine or use power-operated equipment such as the electric windows - this could lead to injuries. The window switches are only deactivated when the driver's door or the front passenger's door is opened.

 Always be careful when closing the windows. Careless use of the electric windows can cause severe injuries.

 When locking the vehicle from the outside, make sure that nobody is inside the vehicle, as the windows cannot be opened from the inside in an emergency.

i Note

The windows can be operated for about ten minutes after the ignition has been switched off. The window switches are only deactivated when the driver's door or the front passenger's door is opened.

Convenience open/close function

The convenience open/close function allows you to open and close the windows and the sun roof* with the remote control key.

You can select which windows are opened in the settings on the sound system or MMI* \Rightarrow page 55.

Convenience open function

 Press and hold the unlocking button I on the remote control key until the windows have reached the desired position and the sun roof* is open.

Convenience close function

 Press and hold the locking button ¹/_□ on the remote control key until the windows and the sun roof* are closed ⇒ <u>∧</u>.

Convenience close function with advanced key*

 Touch and keep your hand in contact with the locking sensor on the door handle until the windows and the sun roof* are closed.

• Take care when closing the windows and the sun roof*. Careless or uncontrolled use can cause injuries.

• For safety reasons, you should only use the remote control open and close functions within about 2 metres of the vehicle. To avoid injuries, always keep an eye on the windows when pressing the button to close them. The windows and sun roof stop moving as soon as the button is released.

document_0900452a81b1b9de.book Seite 55 Donnerstag, 26. Juli 2007 9:16 09

Settings for convenience open function

The driver can use the sound system or MMI* to select which windows are opened.



Select: Function selector button \bigcirc > Windows > Convenience open.

If you wish to use the convenience open function for the windows and the sun roof*.

What to do after a malfunction

The one-touch open and close function must be reactivated if the battery has been disconnected.

- Pull and hold the electric window switch until the window is fully closed.
- Release the switch and then pull it again for at least one second. 🔳

Doors and windows



b

1

Sun roof

Controls



Tilting open

- You can tilt the sun roof open or closed only when the switch is in the 0 position \Rightarrow fig. 51.
- Press the switch briefly to tilt open the sun roof.
- Pull the switch briefly to close the sun roof again $\Rightarrow \Delta$.
- _ To set an intermediate position, press or pull the switch until the sun roof has reached the desired position.

Sliding open

- To slide the sun roof open to the position for low wind noise, turn the switch to position ① (until you feel a resistance).
- To slide the sun roof fully open, turn the switch past the point of resistance to position (2) and hold the switch.
- To close the sun roof, turn the switch to position () ⇒ ∆.

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
	—) —			

1

document_0900452a81b1b9de.book Seite 56 Donnerstag, 26. Juli 2007 9:16 09

Doors and windows

۲

56

- You can set the roof to an intermediate position by turning the switch to the desired position.

The sun roof can be operated for about ten minutes after the ignition has been switched off. The switch is deactivated immediately when one of the front doors is opened.

Sliding sun blind with glass sun roof*

The sliding sun blind can be opened and closed manually in any position. The sun blind opens automatically when you slide open the sun roof. When the sun roof is raised to the tilt position, the rear end of the sun blind is raised together with the sun roof.

Take care when closing the sun roof. Careless or uncontrolled use of the sun roof can cause injuries. For this reason, always take out the ignition key when leaving the vehicle.

U Caution

You should always close the sun roof when leaving the car. Sudden rain could seriously damage your car's interior equipment, especially the on-board electronic systems.

i Note

• Should you not be able to close the tilted sun roof, pull and hold the switch until the sun roof is closed.

• Details on the convenience open/close function \Rightarrow page 54.

Closing the sun roof manually





Fig. 52 Detail of head-liner: Unscrewing the light housing



- Open the compartment for (sun)glasses. The screw \Rightarrow fig. 52 will then be visible.

- Remove the screw and detach the light unit.
- Insert the crank all the way into the hexagonal socket \Rightarrow fig. 53 and turn. The sun roof will now close.

i Note

To make it easier to turn the crank, you can make use of the screwdriver handle (tool kit).



document_0900452a81b1b9de.book Seite 57 Donnerstag, 26. Juli 2007 9:16 09

Lights and vision

�| ● 7 ●

Lights and vision

Lights

Switching lights on and off 🔅



Fig. 54 Dashboard: Light switch

Switching on automatic headlights* (AUTO) - Turn the light switch to AUTO \Rightarrow fig. 54.

Switching on the side lights

- Turn the light switch to position ∌€.

Switching on dipped headlights

- Turn the light switch to position *≣*D.

Switching off the lights

- Turn the light switch to position **O**.

The dipped beam headlights will only work with the ignition on. The symbol ≫€ next to the light switch will light up when the side lights or headlights are on. Automatic headlight control (AUTO)*

When the switch is set to AUTO, the headlights switch on automatically according to the ambient light conditions, for instance in a tunnel, at sunset, or in the rain or snow. The $\Im \in$ symbol lights up when the dipped headlights are on. The headlights are switched on, regardless of the light conditions, when you switch on the fog lights.

The headlights are switched off automatically when you switch off the ignition.

On vehicles with a rain sensor, the headlights switch on automatically after several windscreen wiper cycles. The instrument lighting does not switch on, however.

 
While using the automatic headlights you can activate the main beam headlights as normal if this function has been activated in the MMI. However, if you switch on the main beam headlights while using the AUTO function and then do not switch back to the dipped headlights setting, only the dipped headlights will come on the next time you switch on the AUTO function. To be able to use the main beam headlights again you must first pull the main beam lever back to the "off" position and then push it forward to "on".

Malfunction of light sensor

If a malfunction should occur in the light sensor, the instrument cluster will show the message:

Automatic headlights / automatic wipers defective

For safety reasons, the dipped beam headlights will then be switched on permanently when the light switch is set to the **AUTO** position. However, you can still switch the lights on and off in the normal way with the light switch. You should have the light sensor checked by a qualified workshop as soon as possible.



document_0900452a81b1b9de.book Seite 58 Donnerstag, 26. Juli 2007 9:16 09

Lights and vision

58

The automatic headlights are only intended to assist the driver. The driver must always ensure that the headlights are used when required, and may have to switch them on manually when the light conditions or visibility are poor. For example, the light sensors are not able to detect fog. Therefore, you should always switch on the headlights \mathbb{SD} in these conditions and when driving after dark.

i Note

 The light sensor for automatic headlight control is located in the mounting for the interior mirror. Do not affix any stickers on this section of the windscreen to avoid malfunctioning of the sensor.

- Some of the settings for the exterior lighting can be adjusted \Rightarrow page 59.
- If the lights are left on after the key has been taken out of the ignition lock, a buzzer sounds when the driver's door is opened.
- The use of the lighting described here is subject to the relevant statutory requirements.

• The coming home/leaving home function is active only when the light switch is set to AUTO. \blacksquare

Fog lights

 


Fig. 55 Switch for front fog lights

- Press button (1) \Rightarrow fig. 55 to switch on the front fog lights 耟.
- Press button (2) to switch on the rear fog lights ()‡.

Front fog lights

The side lights or headlights must be switched on. The green diode at the edge of the switch lights up when the front fog lights are switched on.

When the headlights are set to AUTO, the dipped headlights are switched on automatically when you switch on the front fog lights.

Rear fog lights

The headlights or side lights and the front fog lights must be switched on.

The yellow diode at the edge of the switch lights up when the rear fog lights are switched on.

If you are towing a trailer or caravan equipped with a rear fog light on a vehicle with a factory-fitted **towing bracket**, only the rear fog light on the trailer or caravan will light up.



To avoid dazzling the traffic behind you, the rear fog light should only be used in accordance with statutory regulations.



document_0900452a81b1b9de.book Seite 59 Donnerstag, 26. Juli 2007 9:16 09

Exterior lighting settings

You can change the settings for these functions on the sound system or MMI*.



Important: .

- Select: Function selector button CAR > Exterior lighting.

coming home

The coming home function lights up the area round the vehicle after dark when the ignition has been switched off and the driver's door opened. This function can be set to operate for a time interval between 0 (off) and 60 seconds. The coming home function is operational when the light switch is set to **AUTO**.

leaving home

The leaving home function lights up the area round the vehicle after dark when the vehicle is unlocked. The function can be switched on or off as required. The leaving home function is operational when the light switch is set to **AUTO**.

Automatic headlights*

The sensitivity of the light sensor (i.e. how soon the lights are switched on) can be adjusted.

Lights and vision

Daytime running lights* The daytime running lights are switched on and off together with the ignition.

On vehicles for some markets the daytime running lights cannot be switched off if the vehicle has halogen headlights.

Headlamp converter* for driving abroad

The asymmetric low beams of the headlights are designed to light up the near side of the road more intensely. If you drive a right-hand drive vehicle in a left-hand drive country, or vice versa, you will dazzle oncoming traffic.

Vehicles with xenon headlights*: The headlamp converter should be switched **on** to avoid dazzling oncoming traffic.

Vehicles with halogen headlights: Opaque stickers should be applied to certain parts of the headlight lenses. For further information, please consult an Audi dealer or other qualified workshop. ■

Instrument lighting


The background lighting of the instruments, the centre console and the display can be adjusted as required.



Fig. 57 Instrument lighting

Þ

 - Briefly press the knob to release it.



document_0900452a81b1b9de.book Seite 60 Donnerstag, 26. Juli 2007 9:16 09

Lights and vision

60

- Turn the button clockwise +" to increase the brightness of the instrument lighting in dark conditions.
- Turn the button anti-clockwise -" to reduce the brightness of the instrument lighting in dark conditions.
- Press the knob in again to prevent the setting from being changed unintentionally.

The instrument lighting (dials and needles), the centre console illumination and the illumination of the displays are regulated by a light sensor incorporated in the instrument cluster. In bright conditions any changes made to the brightness of the instrument lighting have no effect.

i Note

The instrument lighting (illumination of dials and needles) is switched on when the ignition is on and the **vehicle's lights are off**. The instrument lighting is dimmed automatically as the daylight starts to fade; it is switched off completely when the light conditions become very poor. This function is intended to remind the driver to switch on the dipped-beam headlights in good time when light conditions become poor. ■

Applies to vehicles: with headlight range control

When the dipped beam headlights are switched on, the range of the headlights can be adjusted to suit the load being carried.



Fig. 58 Headlight range control

Turn the thumbwheel \$D ⇒ fig. 58 to the appropriate setting.

Adjustment settings

- The settings correspond roughly to the following load conditions:
- Two front occupants, luggage compartment empty
- () All seats occupied, luggage compartment empty
- (I) All seats occupied, luggage compartment loaded
- Driver only, luggage compartment loaded

! Caution

Always adjust the headlights to avoid dazzling oncoming traffic. Make sure you lower the headlights when the vehicle is carrying a heavy load. ■

er only, luggage

document_0900452a81b1b9de.book Seite 61 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with xenon headlight bulbs Dynamic headlight range control

Headlights with xenon gas-discharge bulbs automatically adapt to suit the load being carried when the engine is switched on. The headlights are also automatically adjusted when the vehicle is in motion (e.g. when accelerating and braking). ■

Applies to vehicles: with adaptive light adaptive light

This feature provides better illumination when you drive through a corner.

 


Fig. 59 adaptive light when driving

The adaptive light gives better illumination of the bend and the side of the road when driving through a corner \Rightarrow fig. 59. The adaptive light is controlled automatically, depending on the speed of the vehicle and the steering wheel angle.

The headlights are regulated automatically when you drive through a corner, depending on how far you turn the steering wheel. To avoid having a dark spot in front of the vehicle the two headlights are directed at different angles.

Lights and vision

i Note

The system is active at speeds from approximately 10 km/h to 110 km/h. \blacksquare

Hazard warning lights 🛕

The hazard warning lights are used to make other road users aware of your vehicle in hazardous situations.





1

- Press the switch \triangle to switch the hazard warning lights on or off \Rightarrow fig. 60.

All four turn signals flash simultaneously when the hazard warning lights are switched on. The two turn signal indicator lamps $\langle T C \rangle$ and the indicator lamp in the switch \bigtriangleup will flash at the same time. The hazard warning lights also work when the ignition is switched off.

The hazard warning lights come on automatically in the event of an accident in which an airbag is triggered or in the case of an emergency stop (full brake application).

i Note

Vou should switch on the hazard warning lights to warn other road users, for instance:

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
			<u> </u>			

1

document_0900452a81b1b9de.book Seite 62 Donnerstag, 26. Juli 2007 9:16 09

Lights and vision

62

- When reaching the tail end of a traffic jam
- If your vehicle breaks down or there is an emergency
- If your vehicle is being towed away, or if you are towing another vehicle. ■

Turn signal and main beam lever

The turn signal and main beam lever also operates the parking lights and the headlight flasher.



Fig. 61 Turn signal and main beam headlight lever

The turn signal and main beam headlight lever has the following functions:

Turn signals $\diamondsuit \diamondsuit$

- Move the lever all the way up to indicate right, or all the way down to indicate left \Rightarrow fig. 61.
- Move the lever briefly up or down just as far as the point of resistance and then release it: the turn signals will flash three times.
- Move the lever up or down just as far as the point of resistance and hold it there: the turn signals flash for as long as you hold the lever.

Main beam headlights ID

- Press the lever forward to switch on the main beams.
- Pull the lever back towards you to switch the main beam headlights off again.

Headlight flasher ID

Pull the lever towards the steering wheel to operate the flasher.

Parking lights P[∈]

- Switch off the ignition.
- Move the lever up or down to turn on the right or lefthand parking lights respectively.

Notes on these functions

• The turn signals only work when the ignition is switched on. The corresponding indicator lamp \diamondsuit or \diamondsuit flashes in the instrument cluster.

• The turn signals are cancelled automatically when the steering wheel is returned to the straight-ahead position.

• The main beam headlights can only be switched on if the dipped beam headlights are already on. The main beam headlight indicator lamp **ED** then comes on in the instrument cluster.

• The *headlight flasher* comes on for as long as you pull the lever – even if no other lights are switched on. The main beam headlight indicator lamp **ID** then comes on in the instrument cluster.

• When the *parking lights* are switched on, the headlight and the rear light on one side of the car light up with reduced intensity. The parking lights will only work with the ignition off. A warning buzzer will sound for as long as the driver's door is open.

document_0900452a81b1b9de.book Seite 63 Donnerstag, 26. Juli 2007 9:16 09

Lights and vision

! Caution

Do not use the main beam headlights or the headlight flasher if this would dazzle oncoming traffic. \blacksquare

Interior lights

Front interior lights

The front interior lighting also incorporates the reading lights for the driver and passenger.



Fig. 62 Headliner: Front interior lighting/reading lights

The rocker switch (a) \Rightarrow fig. 62 for the interior light has the following functions:

Courtesy light position

- Move switch (A) to the centre position.

Interior light switched on

– Move switch (A) to position I.

Interior light switched off

- Move switch (A) to position 0.

Front reading lights 🐨

Press one of the switches (a) \Rightarrow fig. 62 to switch the left or right reading light on and off.

If you switch on the courtesy lighting, the interior lights come on automatically when the vehicle is unlocked or the doors are opened. The light also comes on when the key is pulled out of the ignition. It goes out approximately 30 seconds after the doors are closed. The interior light is switched off immediately when the vehicle is locked or when the ignition is switched on.

If a door is left open, the light is switched off after about 10 minutes to prevent the battery from running flat.

The brightness of the light is automatically adjusted by a dimmer when it is switched on. ■


Rear interior lights

Reading lights are also provided for rear passengers.



Fig. 63 Headliner: Rear reading lights

 The reading lights are switched on and off with the switches $\overline{\mathcal{V}}$.



document_0900452a81b1b9de.book Seite 64 Donnerstag, 26. Juli 2007 9:16 09

Lights and vision

Clear vision

Sun visors

۲

64

The sun visors can improve visibility and contribute to safety.



The sun visors for the driver and the front passenger can be pulled out of their mountings in the centre of the vehicle and turned towards the doors \Rightarrow fig. 64 (1). Once the sun visor has been turned towards the door you can pull it towards the rear as desired.

Make-up mirrors

There are covers on the make-up mirrors in the sun visors. The light for the mirror (located in the headlining) comes on automatically when the mirror cover (2) is slid open. The light switches itself off when the cover is closed and when the sun visor is pushed back up. \blacksquare

Applies to vehicles: with sun blinds

Sun blinds

Sun blinds are provided for the rear window and the rear side windows.



Fig. 65 Switch for sun blind (vehicles with MMI)



Fig. 66 Switch for sun blind

Sun blinds (rear side windows)

 Pull out the blind and hook it into the retainers at the top of the door frame.

Sun blind (rear window)

 Press the switch i ⇒ fig. 65 or ⇒ fig. 66 to extend or retract the sun blind for the rear window.



I.

document_0900452a81b1b9de.book Seite 65 Donnerstag, 26. Juli 2007 9:16 09

 To retract the sun blind automatically when reversing, select: Function selector button (CAR) > Windows > Automatic rear blind > on.

If you switch the Automatic rear blind function on in the sound system or MMI*, the raised sun blind will be retracted automatically when reverse gear is engaged \Rightarrow page 55. In this way, the rear blind will not obstruct your vision when reversing. The rear blind returns to its raised position when reverse gear is disengaged and the vehicle is driven forwards at a speed above about 15 km/h. The current setting is automatically stored and assigned to the remote control key.

If the rear blind was rolled in automatically when reversing and then the ignition was switched off and on again, the blind will *not* roll back out again when you select a forward gear and the speed exceeds 15 km/h. You will then have to press the button 🗷 on the centre console to extend the blind again.

The sun blind for the rear window switches off automatically when it reaches the end position. It can be made to move in the other direction before it reaches its end position by briefly pressing the switch a second time. If the ignition is turned off while the blind is still moving, it continues until it reaches the end position before switching off.

i Note

• An overload cut-out may be activated if the sun blind is operated repeatedly. There will then be a short delay before the blind can be operated again.

• As the material of the sun blind is less flexible at low temperatures the electric actuator is switched off when the temperature in the car is below -5°C. The blind can only be operated when the temperature in the car's interior rises above this level.

Lights and vision

Windscreen wipers

Windscreen wipers 🖗

The windscreen wiper lever controls the windscreen wipers and the automatic wash and wipe.



Fig. 67 Windscreen wiper lever

The windscreen wiper lever has the following settings:

Brief wipe

 Move the lever down to position ① to give the windscreen a *brief* wipe.

Intermittent wipe Vi (activating rain sensor)

 
- Move the lever up to the stop 2.
- Move the control (a) to the left or right to set the sensitivity of the rain sensor.

Slow wiper speed

Move the lever up to the stop ③.

Fast wiper speed

Move the lever up to the stop (4).



document_0900452a81b1b9de.book Seite 66 Donnerstag, 26. Juli 2007 9:16 09

Lights and vision

Automatic wash and wipe

- Pull the lever to position (5).
- Release the lever again. The washer will stop and the wipers will keep running for approximately 4 seconds. The number of wipe cycles varies according to the length of time the lever is pulled.

Switching off the wipers

- Move the lever to the "off" position ().

General notes

The washers and wipers will only work when the ignition is switched on.

If you stop briefly, e.g. at traffic lights, the wiper speed will automatically be reduced by one level.

The windscreen washer jets are heated when the ignition is switched on if the outside temperature is low.

Dribble wipe

About 5 seconds after the wash and wipe cycle has finished, the windscreen wiper system automatically gives the screen one extra wipe to remove any dribbles of water.

If you want to deactivate the dribble wipe function while driving, pull the lever to position (s) again within 10 seconds.

The dribble wipe function will be re-activated the next time the ignition is switched off and on.

Rain sensor*

The rain sensor will only function in the intermittent wipe position. The intermittent wipe function is activated automatically when it starts to rain.

Before you reach a road speed of 6 km/h you will have to activate the rain sensor manually by switching it off and back on again.

To reduce the sensitivity level of the rain sensor move control (A) \Rightarrow page 65, fig. 67 to the left. To increase the sensitivity level of the rain sensor move the control to the right.

If you have selected a high sensitivity level for the rain sensor the windscreen wipers will react sooner to any moisture on the windscreen. The wiper intervals in the intermittent wipe setting are also varied automatically according to the road speed (in addition to the sensitivity setting).

 Poor visibility can cause accidents. Always ensure that the wiper blades are in good condition ⇒ page 68, "Changing wiper blades".

 The rain sensor is only intended to assist the driver. The driver is still obliged to manually operate the windscreen wipers as required depending on visibility.

 Do not use water-repellent coatings on the windscreen. In bad visibility conditions such as light rain, low sun or when driving at night these coatings can cause increased dazzle, which is a serious safety hazard. Such coatings can also cause the wiper blades to judder.

Caution

 In icy conditions, always check that the wiper blades are not frozen to the glass before using the wiper for the first time. If you switch on the wipers when the wiper blades are frozen to the glass, this could damage both the wiper blades and the wiper motor.

 Make sure you switch off the windscreen wiper system (lever in position "0") before you use an automatic car wash. This will avoid inadvertent triggering of the wipers and possible damage to the wiper system. document_0900452a81b1b9de.book Seite 67 Donnerstag, 26. Juli 2007 9:16 09

i Note

• Check that the washer fluid reservoir is full before starting a long journey. Filling the reservoir \Rightarrow page 267.

● Worn or dirty wiper blades can cause smearing on the glass which can also impair the effectiveness of the rain sensor. Please check the wiper blades regularly. ■

Applies to vehicles: with headlight washers Headlight washer system

The headlight washer system only operates when the lights are switched on.

- Move the automatic wash and wipe lever to position (5) \Rightarrow page 65, fig. 67.

The headlight washer system is always activated the first time you operate the automatic wash and wipe. Subsequently, it is only activated about every five wash and wipe cycles. The headlights are always washed if you hold the lever for longer than about 2 seconds.

The headlight washer jets come out of the bumper automatically (under water pressure).

Clean off stubborn dirt (insects, etc.) from the lenses at regular intervals, for instance when stopping for fuel.

To ensure that the system works properly in winter, keep the nozzle holders free of snow and remove any ice with a de-icer spray. \blacksquare

Lights and vision

Service position

Use the service position to change the wiper blades.



Fig. 68 Display: Windscreen wipers

Service posi-

1



You can set the wipers to the service position on the sound system or $\mathsf{MMI}^{\ast}.$

- If the wiper blades are not frozen to the windscreen, move the windscreen wiper lever to the "off" position () ⇒ page 65, fig. 67.
- Select: Function selector button (CAR) > Windscreen wipers > Service position \Rightarrow fig. 68.

• on - the wiper blades can only be replaced when the wiper arms are in the service position \Rightarrow fig. 69. If you only work on the wipers \blacktriangleright

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
)			0

1

document_0900452a81b1b9de.book Seite 68 Donnerstag, 26. Juli 2007 9:16 09

Lights and vision

when they are in the service position you will also avoid damaging the paintwork on the bonnet.

• off - the windscreen wipers will be moved back to their original position.

U Caution

68

 
Never move the vehicle with the front wiper arms in a raised position as they are automatically moved back to their normal park position above a speed of 6 km/h. The paintwork on the bonnet may be damaged as a result.

i Note

You can also use the service position, for example, if you want to fix a cover over the windscreen in the winter to keep it clear of ice.
The service position is automatically set to off when you operate the windscreen wiper lever or the road speed exceeds 6 km/h.

Changing wiper blades

Good wiper blades are essential for clear vision.



Taking off the wiper blade

- Set the wipers to the service position \Rightarrow page 67.

- Lift the wiper arm away from the glass.
- Press the release button (1) on the wiper blade \Rightarrow fig. 70. Hold the wiper blade firmly and press it forwards slightly (2).
- Slide the wiper blade upwards (3).

Fitting the wiper blade

- Fit the new wiper blade into the mounting on the wiper arm (4). You should hear it engage in the wiper arm.
- Fold the wiper arm back down onto the glass.

 To prevent smearing on the glass, the wiper blades should be cleaned regularly using a window cleaner solution. If the wiper blades are very dirty (insects etc.), they should be cleaned using a sponge or cloth – bad visibility can cause accidents.
 For safety, the wiper blades should be changed once or twice a year.

U Caution

ving the

The windscreen wipers must be in the service position \Rightarrow page 67 when replacing the blades! Otherwise the wiper motor or the paintwork on the bonnet may be damaged.

Rear-view mirrors

Manual anti-dazzle adjustment

Normal setting

- Push the lever at the bottom of the mirror away from you.

document_0900452a81b1b9de.book Seite 69 Donnerstag, 26. Juli 2007 9:16 09

Anti-dazzle setting

Pull the lever at the bottom of the mirror towards you.

Applies to vehicles: with automatic anti-dazzle adjustment for interior mirror Automatic anti-dazzle adjustment

The automatic anti-dazzle function can be switched on and off as desired.

 


Fig. 71 Anti-dazzle interior mirror: On/off button with indicator

Switching off anti-dazzle function

Press button (A) ⇒ fig. 71 - the indicator lamp (B) will go out.

Switching on anti-dazzle function

Press button (A) - the indicator lamp (B) will light up.

Anti-dazzle function

The anti-dazzle function is activated every time the ignition is switched on. The green indicator lamp lights up in the mirror housing.

When the anti-dazzle function is activated the interior mirror will darken *automatically* according to the amount of light it receives (for example from the headlights of a vehicle behind). The mirror will **not** darken automatically:

Lights and vision

- when the interior lighting is switched on
- when reverse gear is engaged

Electrolyte fluid can leak from a broken mirror. This fluid can cause irritation to the skin, eyes, and respiratory organs. Wash thoroughly with clean water should you come into contact with this fluid. Seek medical assistance if needed.

U Caution

 
Electrolyte fluid leaking from a broken mirror can cause damage to plastic surfaces. Use a sponge or similar to remove the fluid as soon as possible.

i Note

• If you switch off the anti-dazzle function for the interior mirror, this will also deactivate the anti-dazzle function for the exterior mirrors.

• The automatic anti-dazzle function will only work properly if the sun blind* for the rear window is not in use and there are no other objects preventing light from reaching the interior mirror.

 Do not attach any stickers to the windscreen in front of the sensors, as these could lead to malfunctioning of the mirror.



document_0900452a81b1b9de.book Seite 70 Donnerstag, 26. Juli 2007 9:16 09

Lights and vision

70

Exterior mirrors

The exterior mirrors are adjusted electrically.



Adjusting exterior mirrors

- Turn the adjuster knob to position () (left exterior mirror) or position () (right exterior mirror) \Rightarrow fig. 72.
- Move the knob as required to adjust the exterior mirror for a good rearward view.

Heated mirrors

- Turn the knob to position (A).

Retracting both exterior mirrors*

- Turn the knob to position (B).

The mirrors are heated depending on the outside temperature until the ignition is switched off, even if the knob is no longer in position (a).

It may be advisable to retract* the exterior mirrors to protect them when parking or when driving through tight spaces.

Memory for exterior mirrors*

On vehicles with memory function for the driver's seat, the setting of the exterior mirrors is automatically stored together with the seat position \Rightarrow page 75.

Tilting function for exterior mirror on passenger side* (only if equipped with memory for exterior mirrors) When reverse gear is engaged, the mirror surface tilts slightly downwards, provided the mirror control is switched to the exterior mirror on the passenger's side (knob in position ($\hat{n} \Rightarrow$ fig. 72). This provides a better view of the kerb when parking.

The mirror returns to its original position when reverse gear is disengaged and the vehicle is driven forwards at a speed above about 15 km/h. The mirror will also return to its original position when the adjuster knob is turned to the position for the driver's exterior mirror (\underline{I}) or when the ignition is switched off.

If the position of the mirror surface is changed while the mirror is tilted, this new position is automatically stored and assigned to the remote control key when you disengage reverse gear.

U Caution

 Convex or wide-angle* exterior mirrors give a larger field of vision. However, they also make objects appear further away than they actually are. For this reason, you should not rely on these mirrors for judging the distance of vehicles behind.

 If one of the mirror housings is knocked out of position (e.g. when parking), the mirrors must first be fully retracted with the electric control. Do not readjust the mirror housing by hand, as this will interfere with the mirror adjuster function.

i Note

If the electrical adjustment should ever fail to operate, the mirrors can be adjusted by hand by lightly pressing the edge of the mirror glass. \blacksquare

ĺ

document_0900452a81b1b9de.book Seite 71 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with automatic anti-dazzle adjustment for exterior mirrors Automatic anti-dazzle adjustment for exterior mirrors

The exterior mirrors darken together with the automatically adjusting interior mirror. When the ignition is on, the mirrors will darken automatically according to the amount of light received (for example from the headlights of a vehicle behind).

When the interior lights are switched on, or when reverse gear is engaged, the mirrors revert to their original (i.e. not darkened) condition.

Electrolyte fluid can leak from a broken mirror. This fluid can cause irritation to the skin, eyes, and respiratory organs. Wash thoroughly with clean water should you come into contact with this fluid. Seek medical assistance if needed.

U Caution

Electrolyte fluid leaking from a broken mirror can cause damage to the paintwork or plastic surfaces. Use a sponge or similar to remove the fluid as soon as possible.

i Note

 If you switch off the anti-dazzle function for the interior mirror, this will also deactivate the anti-dazzle function for the exterior mirrors.

 
 The automatic anti-dazzle function will only work properly if the sun blind* for the rear window is not in use and there are no other objects preventing light from reaching the interior mirror. \blacksquare Lights and vision

mpass

Digital compass

Applies to vehicles: with digital compass Activating and deactivating the compass

The compass direction will appear in the mirror.



- To switch the compass on and off, press and hold button (A) until the compass display in the mirror
- \Rightarrow fig. 73 appears or disappears. The digital compass only works when the ignition is on. The points

The update compass are displayed as follows: W (North), NE (North East), E (East), SE (South East), S (South), SW (South West), W (West), NW (North West).

i Note

_

To avoid inaccurate compass readings, do not hold any remote controls or other electrical devices or metal objects near the interior mirror. 🔳

Control

document_0900452a81b1b9de.book Seite 72 Donnerstag, 26. Juli 2007 9:16 09

Lights and vision

•

72

Applies to vehicles: with digital compass

Setting the correct compass calibration zone The correct compass calibration zone must first be set

before the compass can give an accurate reading.

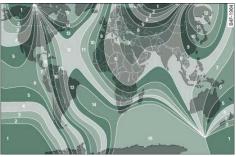


Fig. 74 Map of compass calibration zone

- Press and hold button (A) ⇒ page 71, fig. 73 until the currently set zone number is displayed on the interior mirror.
- Press button (▲) repeatedly until the correct zone number appears. The adjustment mode will be ended automatically after a few seconds.

Applies to vehicles: with digital compass Calibrating compass

The compass must be re-calibrated if the display is incor-

rect or inaccurate.

- Press and hold button (A) until the letter C appears in the interior mirror.
- Drive in a circle at a speed of about 10 km/h until a point of the compass is displayed in the interior mirror.

Calibrate your compass at a location where there is no traffic so that you do not endanger yourself or other road users (accident risk).



document_0900452a81b1b9de.book Seite 73 Donnerstag, 26. Juli 2007 9:16 09

Seats and storage

Manual adjustment of front seats

Applies to vehicles: with manual seat adjustment

Seat adjuster controls

There are several seat adjustment functions for your comfort and convenience

 


Fig. 75 Adjuster controls on driver's

Some of the controls shown are only fitted on certain models or are optional extras.

Adjuster controls

- 1 Moves seat backwards or forwards
- 2 Thigh support*
- Adjusts angle of seat cushion*
- Adjusts lumbar support*
- 5 Adjusts seat height
- 6 Adjusts backrest angle

Applies to vehicles: with manual seat adjustment Seat adjustment

It is possible to adjust the position and shape of the seat manually so that you can travel in a safe and comfortable sitting position.

Before adjusting your seat, please read and observe the warnings $\Rightarrow \triangle$.

Moving seat backwards or forwards

- Lift the lever (1) \Rightarrow fig. 75 and move the seat to the desired position.
- Then release the lever 1 and move the seat further until the catch engages.

Extending or shortening the thigh support*

- Lift the control (2) below the seat cushion. The front seat cushion will spring forward.
- Slide the seat cushion back to the normal position after each use.

Adjusting angle of seat cushion*

Pull the lever (3) ⇒ fig. 75 up or down repeatedly (i.e. pump the lever).

Adjusting contour of lumbar support*

 Press the front or rear part of the adjuster switch (4) to increase or decrease the curvature of the lumbar support as required.

	– Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
C) —			

1

Seats and storage

1

document_0900452a81b1b9de.book Seite 74 Donnerstag, 26. Juli 2007 9:16 09

Seats and storage

۲

74

Adjusting height of lumbar support*

 Press the top or bottom part of the adjuster switch (4) to move the lumbar support upwards or downwards as required.

Raising or lowering the seat

Pull the lever (5) ⇒ page 73, fig. 75 up or down repeatedly (i.e. pump the lever).

Adjusting backrest angle

- Lean forwards to take your weight off the backrest.
- Turn the adjuster wheel (6) \Rightarrow page 73, fig. 75 to set the angle of the backrest as required.

• Never adjust the driver's seat when the vehicle is moving - this could lead to an accident.

• Be careful when adjusting the seat height. Careless or uncontrolled use of the seat adjustment can cause injuries.

 Do not drive with the backrests of the front seats reclined too far as otherwise the seat belt and airbag could fail to restrain the wearer properly in an accident, possibly leading to injury.

Electric adjustment of front seats

Seat adjuster controls

The arrangement of the switches corresponds with the design of the seats.

 


Fig. 76 Front seat: Adjuster controls

The adjustment switches for the seat and backrest correspond with the design of the seat. The seats can be adjusted simply by pressing the corresponding switch in the required direction.

Adjuster controls

- A Lumbar support
- B Seat adjuster
 B Backrest adjuster
- Thigh support*

Seat adjustment

You can use the electrical adjustment to set the position, angle and shape of the seat so that you can travel in a safe and comfortable sitting position.

Before adjusting your seat, please read and observe the warnings $\Rightarrow \Delta$.

document_0900452a81b1b9de.book Seite 75 Donnerstag, 26. Juli 2007 9:16 09

Adjusting contour of lumbar support

 Press the front or rear of switch (a) to increase or decrease the curvature of the lumbar support as required.

Adjusting height of lumbar support

 Press the top or bottom of adjuster switch (A) to move the lumbar support upwards or downwards as required.

Moving seat backwards or forwards

– Press switch (B) \Rightarrow page 74, fig. 76 forwards or backwards.

Adjusting seat height

- Press switch (B) up or down.

Raising/lowering seat at front

Press the front of switch

 B up or down.

Raising/lowering seat at rear

- Press the rear of switch B up or down.

Adjusting backrest angle

Press switch c forwards or backwards.

Extending or shortening the thigh support*

- Lift the control (b) below the seat cushion. The front seat cushion will spring forward.
- Slide the seat cushion back to the normal position after each use.

Seats and storage

- Never adjust the driver's seat when the vehicle is moving this could lead to an accident.
- The electrical seat adjustment also works when the ignition is off and when the key is not in the ignition. To avoid accidental injuries, never leave children unattended in the vehicle.
- Be careful when adjusting the seat height. Careless or uncontrolled use of the height adjustment can cause injuries.
- Do not drive with the backrests of the front seats reclined too far as otherwise the seat belt and airbag could fail to restrain the wearer properly in an accident, possibly leading to injury.

Seat memory

Memory for driver's seat

You can use the recall buttons in the driver's door to store and recall the seat adjustments for two drivers.



Fig. 77 Driver's door: Seat memory

As well as the driver's seat position, the seat memory will store and recall the exterior mirror settings (if the vehicle is equipped accordingly):

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
	.						

document_0900452a81b1b9de.book Seite 76 Donnerstag, 26. Juli 2007 9:16 09

Seats and storage

76

Storing and recalling settings

You can store and recall the settings for two different drivers using the recall buttons 1 and 2 \Rightarrow page 75, fig. 77 \Rightarrow page 76.

In addition, the current settings are automatically stored when you lock the vehicle and assigned to the remote control key that is being used. When you unlock the vehicle, the system automatically recalls the settings stored on that remote control key.

Switching seat memory on and off

The seat memory will be out of action if the \fbox{OFF} switch has been pressed and the diode in the switch is lit. In this case, the setting cannot be stored.

The stored settings will all remain in the memory. However, the seat can now only be adjusted using the conventional electrical adjustment. ■

Applies to vehicles: with seat memory

Storing and recalling settings

Storing settings

- Adjust the driver's seat as required.
- Adjust both exterior mirrors.
- Press the (SET) button. The diode in the switch will light up to indicate that it is ready to store the settings. Now press the desired recall button for at least a second.
- Release the button. The setting is now stored on the selected recall button.

Recalling settings

 If the driver's door is open, press the desired recall button briefly. If the driver's door is closed, press and hold down the desired recall button until the programmed settings are reached.

A tone will sound and the diode in the (\underline{SET}) button \Rightarrow page 75, fig. 77 will light up to confirm that the settings have been stored.

When you **lock** the vehicle the current settings are automatically stored and assigned to the remote control key. However, the settings assigned to the remote control key will not overwrite the settings stored on recall buttons 1 and 2. The settings stored on the recall buttons can be called up at any time. When you **unlock** the vehicle, the settings assigned to the remote control key are recalled automatically.

If your vehicle is also driven by other persons using your remote control key, it is advisable to store your personal settings on one of the recall buttons. You can then recall your own settings at any time simply by pressing the corresponding recall button. When you lock the vehicle these settings are then stored automatically and assigned once again to the remote control key.

• For safety reasons, never recall seat settings when the vehicle is moving - this could lead to an accident.

 In an emergency the recall function can be stopped at any time by pressing the ON/OFF switch, or by briefly pressing any of the recall buttons. document_0900452a81b1b9de.book Seite 77 Donnerstag, 26. Juli 2007 9:16 09

Seats and storage

Applies to vehicles: with seat memory

Activating memory for remote control key

The relevant function must be activated on the sound system or MMI* so that the settings stored in the memory can be recalled using the remote control key.



Select: Function selector button (CAR) > Seat adjustment
 > Driver's seat > Remote control key > on. ■

Fig. 78 Display: Driver's seat

Head restraints

Adjusting the front head restraints

In combination with properly worn seat belts, the head restraints offer effective protection. However, they must always be properly adjusted to suit the height of the occupant.

 


Fig. 79 Front seat: Adjusting head restraint

Raising head restraint

 
- Take hold of the sides of the head restraint with both hands.
- Push the head restraint upwards.

Lowering head restraint

- Take hold of the sides of the head restraint.
- Press button (A) \Rightarrow fig. 79 and push the head restraint downwards.

For best protection, the top of the head restraint should be at least at eye level, or higher.

The height of the head restraints is adjustable. They should be set to suit the height of the occupant. In combination with the seat



document_0900452a81b1b9de.book Seite 78 Donnerstag, 26. Juli 2007 9:16 09

Seats and storage

۲

78

belts, the head restraints offer effective protection, provided they are properly adjusted. \blacksquare

Adjusting the rear head restraints



Raising head restraint

 Take hold of the sides of the head restraint with both hands.

Fig. 80 Rear seats: Head restraint

- Push the head restraint upwards as far as it will go.

Lowering head restraint

- Take hold of the sides of the head restraint.
- Press the button (A) \Rightarrow fig. 80 and push the head restraint downwards.

For best protection, the top of the head restraint should be at least at eye level, or higher.

When the rear seats are not occupied the head restraints should be moved to the lowest position so that they do not obstruct the driver's field of vision.

Applies to vehicles: with front armrest

Front armrest

The armrest can be adjusted to several positions and moved back and forwards.



Fig. 81 Armrest between driver's seat and front passenger's

Adjusting armrest

- To adjust the position of the armrest, pull the armrest all the way down.
- Then lift the armrest gradually until it engages in the desired position.

Moving armrest

– You can move the armrest backwards or forwards \Rightarrow fig. 81.

Please note that the armrest can restrict the driver's movements when it is lowered. The armrest should therefore be moved back before driving in city traffic.

There is a storage compartment underneath the armrest. ■



document_0900452a81b1b9de.book Seite 79 Donnerstag, 26. Juli 2007 9:16 09

Luggage compartment

Loading the luggage compartment

Loads in the luggage compartment should be safely secured.



Fig. 82 Heavy items should be placed as far forwards as possible.

To maintain safe handling on the road, please observe the following points:

- Distribute the weight as evenly as possible.
- Position heavy items as far forward as possible \Rightarrow fig. 82.
- Secure the load with the luggage net* or with non-elastic straps secured to the fastening rings* \Rightarrow page 79.

 Unsecured objects in the luggage compartment can suddenly shift and cause changes in the handling of the vehicle.

 In an accident or a sudden manoeuvre, loose objects in the passenger compartment can be flung forward and possibly injure vehicle occupants.

Seats and storage

MARNING (continued)

• Always store objects in the luggage compartment and secure with suitable straps. This is especially important for heavy objects.

• When you transport heavy objects, always keep in mind that a change of the centre of gravity can also cause changes in vehicle handling.

• Please observe the important safety warnings \Rightarrow page 186, "Safe driving".

i Note

Adjust the tyre pressure to match the vehicle loading - the correct pressures are specified on the sticker on the end face of the driver's door.

Applies to vehicles: with fastening rings **Fastening rings**

There are four fastening rings in the luggage compartment which can be used to secure loads.



Fig. 83 Location of fastening rings in luggage compartme

Use the fastening rings to secure the load \Rightarrow fig. 83 _ -arrows-.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
+		(—			

♦ document_0900452a81b1b9de.book Seite 80 Donnerstag, 26. Juli 2007 9:16 09 80 Seats and storage Please refer to the safety notes ⇒ page 193. ■ Applies to vehicles: with stretch net Stretch net / retaining net The stretch net / retaining net can be used to secure light items in the luggage compartment.



Fig. 84 Stretch net laid



Fig. 85 Stretch net attached in position as retaining net

Stretch net

- First secure the *front* hooks in the fastening rings \Rightarrow fig. 84.

- Then secure the rear hooks in the fastening rings.

Retaining net

- Secure the hooks of the retaining net to the fastening rings at the bottom of the tail panel \Rightarrow fig. 85.
- Pull down the retaining hooks at the top of the luggage compartment. Pull up the net and attach the loops of the net to the retaining hooks.

You can also use the retaining hooks \Rightarrow fig. 85 to secure light items of luggage, such as shopping bags, etc.

The hooks will fold up again by themselves when not in use.

The retaining net should only be used to hold objects weighing up to 5 kg. Heavier objects cannot be safely secured (injury risk). ■

Side storage compartment

The DVD player for the navigation system* is located in the left side compartment in the luggage compartment.



Fig. 86 Luggage compartment: Side trim with closed storage compartment



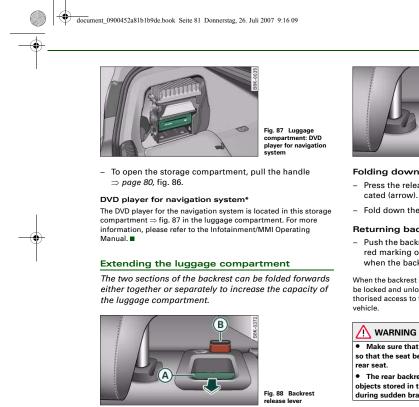


Fig. 89 Locking the backrest

Folding down backrest

- Press the release lever $(A) \Rightarrow$ fig. 88 in the direction indi-

Seats and storage

81

Fold down the backrest.

Returning backrest to an upright position

- Push the backrest up until it engages securely $\Rightarrow \Delta$. The red marking on the tab (B) should no longer be visible when the backrest is properly secured.

When the backrest is properly engaged in its upright position, it can be locked and unlocked with the key \Rightarrow fig. 89. This prevents unauthorised access to the luggage compartment from inside the

 Make sure that the rear backrest is securely locked in position so that the seat belt can provide proper protection on the centre

• The rear backrest must always be securely latched so that objects stored in the luggage compartment will not fly forward during sudden braking.



document_0900452a81b1b9de.book Seite 82 Donnerstag, 26. Juli 2007 9:16 09

Seats and storage

U Caution

۲

82

When returning the backrest to an upright position, make sure that the seat belts for the outer rear seats are in their guides so that they cannot be caught up and damaged in the catches for the backrest.

Storage shelf

The storage shelf behind the rear backrest should only be used to store light articles of clothing.

Do not store any heavy or hard objects on the storage shelf. They could cause injury if the brakes are applied suddenly.

U Caution

Please note that hard objects could chafe against the wires of the heating element in the rear window and cause damage.

i Note

Make sure that the slots between the rear window and the storage shelf are kept clear to ensure unimpaired ventilation. \blacksquare

Applies to vehicles: with load-through hatch

Load-through hatch with transport bag

You can use the load-through hatch and the removable ski bag to transport skis or other extra-long objects safely inside the vehicle without soiling or damaging the upholstery.



Fig. 90 Rear seat: Cover of load-through hatch

 


Fig. 91 Securing the ski bag with the centre seat belt buckle on the rear seat

►

Loading

- In the passenger compartment, pull down the centre rear armrest.
- You will then see the inside cover of the load-through hatch pull the release catch downwards \Rightarrow fig. 90 -arrow- to fold the hatch down.

document_0900452a81b1b9de.book Seite 83 Donnerstag, 26. Juli 2007 9:16 09

- Open the boot lid.
- Open out the ski bag and fill it with the items you wish to transport.
- Push the ski bag from the luggage compartment into the passenger compartment through the opening in the backrest $\Rightarrow \Delta$.

Securing

- Insert the fastening belt (A) \Rightarrow page 82, fig. 91 of the ski bag into the centre seat belt buckle (B).
- Pull the free end of belt (c) to tighten.

Storage

- Pull the ski bag towards the rear through the opening in the backrest.
- Close the cover of the load-through hatch in the passenger compartment.
- Fold up the ski bag.

The ski bag must be secured in place with the fastening belt after it has been loaded.

i Note

Allow the ski bag to dry before folding it up.

Seats and storage

Roof carrier

Applies to vehicles: with roof carrier: Under development at the time of print **Description**

 
Additional loads can be transported using the roof carrier.

Note the following points if you intend to carry loads on the roof: • The rain channels are moulded into the roof as part of the aerodynamic roof design. It is therefore not possible to mount conventional roof luggage racks. We recommend using the carrier units from the range of Audi Genuine accessories.

• These carrier units form the basic elements of a complete roof carrier system. Special fixtures must then be added in order to safely transport luggage, bicycles, skis, surf boards or boats on the roof. All the elements of this system are available from Audi dealers.

U Caution

Any damage to the vehicle caused by the use of other types of roof rack or incorrect installation will not be covered by the factory warranty. The roof carrier system must therefore be installed exactly according to the instructions provided.



document_0900452a81b1b9de.book Seite 84 Donnerstag, 26. Juli 2007 9:16 09

Seats and storage

۲

84

Attachment points

The roof carrier must be attached at the marked points only.



Fig. 92 Attachment points for carrier units

Mounting

The feet of the roof carrier must always be attached at the position where the holes in the roof frame are located \Rightarrow fig. 92. The holes are only visible when the doors are open. When using roof carriers with pins, make sure that the pins are securely fixed in the holes when mounting the carrier units.

After driving a few kilometres, check that the roof carrier is securely attached.

🚺 Note

Each roof carrier has a marking to indicate whether it is to be fitted at the front or rear of the vehicle. \blacksquare

Roof load

Loads carried on the roof must be securely attached. The car's handling is affected when transporting loads.

The maximum permissible roof load for your vehicle is **90 kg**. The load limit applies to the combined weight of the carrier system and the load itself.

It will not be possible to carry the full maximum load if the roof carrier you are using is rated for a load which is less than this figure. Do not exceed the maximum weight limit for the roof carrier, which is listed in the fitting instructions.


 To prevent accidents, loads carried on the roof must be securely attached.

 Do not exceed the maximum roof load for the vehicle, the maximum axle loads or the maximum gross vehicle weight, as this could cause an accident.

 When transporting heavy or bulky loads on the roof, bear in mind that the car's handling is affected by the extra weight on the roof and a possible susceptibility to cross winds. Adjust your speed and driving style accordingly to avoid accidents.

💏 For the sake of the environment

The increased air resistance when the roof carrier is fitted means that the vehicle uses more fuel. For this reason you should always take off the roof carrier when it is not in use. ■

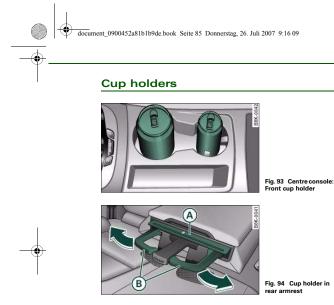

Front cup holder

- Two drinks can be placed in this cup holder \Rightarrow fig. 93.

Opening rear cup holder

– Press the symbol $earrow A \Rightarrow fig. 94.$

Placing drinks in rear cup holder

 To adjust the arm of the cup holder (B), move it in the direction indicated by the arrow. Seats and storage

 Position the cup in the holder and let go of the arm. The arm will move back automatically to secure the cup.

Closing cup holder

 Press the middle piece between the two arms and push the cup holder back into the shaft as far as it will go.

The retainer arm should be positioned against the drinks container so that it is held securely.

 
One or two drink containers can be held in the centre armrest.

Do not put any hot drinks in the cup holders while the vehicle is moving. You could be scalded if the hot liquid is spilt.
Do not use hard china cups or glasses. These could cause injury

in the event of an accident.



To should avoid putting open drinks containers in the cup holders. The drinks could otherwise spill over and cause damage to e.g. the electrical equipment or the seat covers. ■



document_0900452a81b1b9de.book Seite 86 Donnerstag, 26. Juli 2007 9:16 09

 
Seats and storage

Ashtrays

۲

86

Front ashtray



Opening ashtray

- Slide the cover open.

Closing ashtray

 Lightly press the cover to make the ashtray close automatically.

Removing ashtray

 
- Slide the switch (A) \Rightarrow fig. 95 to the right to release the ashtray.
- Take out the ashtray (B) \Rightarrow fig. 95.

Inserting ashtray

- Insert the ashtray and press it into its mountings.

Never put waste paper in the ashtray, as this could cause a fire.

Rear ashtray



Opening ashtray

– Pull the front lip of the ashtray (B) \Rightarrow fig. 96 in the direction of the arrow.

Removing ashtray

- Press down the retainer (A) and take out the ashtray.

Inserting ashtray

- Place the ashtray in the holder.

Never put waste paper in the ashtray, as this could cause a fire.

document_0900452a81b1b9de.book Seite 87 Donnerstag, 26. Juli 2007 9:16 09

Cigarette lighter and electrical sockets

Cigarette lighter



Using cigarette lighter

- Open the cover of the front ashtray.
- Press in the cigarette lighter knob.
- Wait for the lighter to spring out.
- Pull out the cigarette lighter immediately.
- Use the glowing heater element of the cigarette lighter to light your cigarette.
- Put the cigarette lighter back in its socket.

Operating electrical socket

- Take out the cigarette lighter.
- Insert the plug of the electrical appliance into the cigarette lighter socket.

Seats and storage

The cigarette lighter employs a standard 12 Volt socket which can also be used as a power source for electrical appliances. The appliances connected to the socket must not exceed a power rating of 100 W.

The cigarette lighter only works when the ignition is on.

• Take care when using the cigarette lighter. Carelessness or negligence when using the cigarette lighter can cause burns.

• The electrical sockets and any appliances connected to them will operate only when the ignition is switched on. Improper use of the electrical sockets or the appliances connected to them can cause injuries or fire. To avoid the risk of injury, never leave children unsupervised in the vehicle with the key.



• Always use the correct type of plugs to avoid damaging the sockets.

• The cigarette lighter socket should only be used for a short period of time as a power source for electrical equipment. Please use the electrical sockets* \Rightarrow page 88 in the vehicle when connecting equipment for longer periods.

i Note

Using electrical appliances with the engine switched off will drain the battery. \blacksquare



document_0900452a81b1b9de.book Seite 88 Donnerstag, 26. Juli 2007 9:16 09

Seats and storage

12 Volt sockets

۲

88

Electrical equipment can be connected to both 12 Volt sockets.



Fig. 98 Detail of the side trim in the luggage compartment: 12 Volt socket



Fig. 99 Electrical

Fig. 99 Electrical socket in the centre console

Electrical socket in luggage compartment and front centre console

- Open the cover cap concealing the socket \Rightarrow fig. 98.
- Insert the plug of the electrical appliance into the socket.

Electrical socket in rear centre console

– Fold up the lid \Rightarrow page 89, fig. 100 to access the socket.

- Insert the plug of the electrical appliance into the socket.

Electrical equipment can be connected to the 12 Volt socket. The appliances connected to the socket must not exceed a power rating of 150 W.

The electrical sockets and any appliances connected to them will operate only when the ignition is switched on. Improper use of the electrical sockets or the appliances connected to them can cause injuries or fire. To avoid the risk of injury, never leave children unsupervised in the vehicle with the key.

U Caution

 To avoid damage to the vehicle's electrical system, never connect equipment that generates electrical current, such as a solar panel or battery charger, to the 12 Volt sockets or cigarette lighter in order to charge the vehicle's battery.

• Use only equipment which has been tested for electromagnetic compatibility in compliance with EC Directive 2004/104/EC.

i Note

Using electrical appliances with the engine switched off will drain the battery. \blacksquare



document_0900452a81b1b9de.book Seite 89 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with 230 Volt Euro socket On-board 230 Volt Euro socket

Electrical equipment can be connected to the 230 Volt Euro socket in the rear centre console.



Fig. 100 Rear centre console: 230 Volt Euro socket

The 230 Volt Euro socket can only be used when the ignition is on $\Rightarrow \triangle$.

- Fold up the lid to access the socket.
- Plug the Euro connector into the socket. This will automatically release the child safety device.

LED in electrical socket

Steady green light:	The socket is ready for use.
Flashing red light:	The socket has tripped out due
	to a power surge, overheating or
	eimilar

Appliances suitable for connection

Electrical equipment with a Euro plug connector can be connected to the 230 Volt Euro socket. The appliances connected to the 230 Volt Euro socket must not exceed a power rating of 150 W (300 W peak power).

Seats and storage

If you connect more than one appliance, the total power rating of all appliances must not exceed 150 W. If necessary, check the type plates on the connected appliances for details of the power ratings.

Connected appliances must be in perfect condition and free of defects.

 Heavy appliances or plugs (such as power supply units) can damage the mounting of the 230 Volt Euro socket if they are suspended directly from the socket – Risk of injury!
 Make sure that all connected appliances are securely stowed

 Wake sure that al connected appliances are securely stowed when driving to prevent them from being cataputed through the car under braking or in an accident – Danger to life!

- Never spill liquid over the socket Danger to life! If the socket does get wet, ensure that it is absolutely dry before using it again.
- Improper use of the electrical socket or appliances connected to it can cause injuries or fire – Risk of injury!
- Never leave children unattended in the vehicle while the engine is running – Risk of injury!
- Connected appliances behave differently than when they are connected to the public electricity grid. As a result, the connected
- When using adapters or extension cables, please remember

 when using adapters or extension cables, please remember that the child safety device on the 230 Volt Euro socket is deactivated and the socket is live – Risk of injury!

 Do not insert conductive materials, such as knitting needles, into the contacts of the 230 Volt Euro socket – Danger to life!
 Switch off the connected electrical appliances if the inverter

trips out due to overheating - Risk of injury!

U Caution

• Please observe the operating instructions for the connected appliances.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	—
—			<u> </u>			0

document_0900452a81b1b9de.book Seite 90 Donnerstag, 26. Juli 2007 9:16 09

Seats and storage

۲

90

 If the power drawn by the connected appliances is above 150 W, the inverter in the socket will get warm. The inverter will trip out in the temperature exceeds a certain limit. The inverter can trip out on hot days even when an appliance with a suitable power rating is used. The inverter will switch on again automatically after it has cooled down. Appliances which are already connected and switched on will be activated again automatically = <u></u>.

• Do not connect lamps which contain a neon tube. For technical reasons, this may damage the lamp.

• Do not connect 115 Volt appliances to the 230 Volt Euro socket. This may cause irreparable damage to the appliance. Check the type plate on the appliance if you are unsure of the voltage rating.

• With some power supplies (e.g. on laptop computers), the integrated surge suppressor prevents the equipment from being switched on because the starting current is too high. If this happens, please disconnect the power supply unit from the load and wait for about 10 seconds before re-connecting.

i Note

• Unshielded equipment can cause interference on the radio, TV and vehicle's electrical system.

• The Euro socket has an integrated child safety device. There is no

power at the socket until the Euro connector is fully inserted.
Some appliances may not function normally due to the lower power rating (wattage).

• The socket can be operated with 115 Volt power supplies, as is the case in certain countries. In this case, a different type of inverter must be installed in the vehicle. Retrofit kits are available from your Audi dealer. Do not connect 115 Volt appliances to the 230 Volt Euro socket.

● Interference can occur on the radio's AM waveband if electrical appliances are used near the rear window aerial. ■

Storage compartments

Overview

There are several storage compartments at various points in the vehicle.

Glove box	\Rightarrow page 90
Compartment for (sun)glasses in head- liner	\Rightarrow page 91
Storage compartments in the front seats	\Rightarrow page 91
Coat hooks	\Rightarrow page 91
First-aid kit	\Rightarrow page 282
Side storage compartment in luggage compartment	\Rightarrow page 80
Warning triangle	\Rightarrow page 282

Glove box

The glove box is equipped with a lock* and a light.



Fig. 101 Glove box

document_0900452a81b1b9de.book Seite 91 Donnerstag, 26. Juli 2007 9:16 09

Opening glove box

Pull the catch on the lid in the direction indicated (arrow) \Rightarrow page 90, fig. 101 and open the lid.

Closing glove box

 
- Close the lid and push it in until it engages.

The glove box lid has separate holders for a pen and a note pad. On the right-hand side of the glove box there is a holder with a key shell. In order to start the engine with the spare key, it has to be clipped into this shell.

MARNING

To avoid the risk of injuries, always keep the glove box lid closed when driving.

Compartment for (sun)glasses in headliner



To open the cover, lightly press the panel \Rightarrow fig. 102 (arrow). The cover will then open by itself.

- To close the cover, push it upwards until it engages.

Seats and storage

Always keep the compartment cover closed while the vehicle is in motion to reduce the risk of injury during a sudden braking manoeuvre or in the event of an accident. \blacksquare

Coat hooks

The coat hooks are located on the rear side of the B-pillars (in the rear passenger compartment).

 Please make sure that any items of clothing hanging from the coat hooks do not obstruct your view to the rear.

- Only use the coat hooks for light items of clothing and make
- sure that there are no heavy or sharp objects in the pockets. • Do not use clothes hangers to hang up the clothing, as this could interfere with the function of the head-protection airbags*.

Applies to vehicles: with storage compartments in the front seats Storage compartments in front seats

 
There is a fold-out drawer in the front part of each front seat.

Opening

- Pull the handle to open the compartment.

Closing

- Close the lid and push it in until it engages.



for (sun)glasses in

adline





Heating and cooling

Deluxe automatic air conditioner

Applies to vehicles: with deluxe automatic air conditioner

Description

The air conditioner can be used to set a comfortable interior temperature in the vehicle.

The air conditioner provides heating and ventilation and also cools and dehumidifies the air inside the vehicle.

The air conditioner is fully automatic and will maintain the desired temperature at a constant level. To achieve this, the temperature of the air supplied to the interior, the blower speed (volume of air delivery) and the air distribution are regulated automatically. The system also allows for the effect of strong sunlight, so there is no need for manual adjustment. For these reasons it is advisable to use the **automatic mode** for the comfort of all the passengers in virtually all conditions throughout the year \Rightarrow page 95.

Please note:

The humidity of the air is automatically reduced when the system cools the interior of the vehicle. This helps to prevent condensation on the windows.

If the humidity and temperature outside the vehicle are high, condensation can drip off the evaporator in the air cooling system and form a pool underneath the vehicle. This is normal and does not indicate a leak.

If the outside temperature is low, the blower normally only switches to a higher speed once the coolant has warmed up sufficiently (this does not apply to the defrost setting).

In order to achieve maximum engine power, the air conditioner compressor is temporarily switched off when pulling away from a standstill with full throttle. The compressor also switches off if the coolant temperature is excessively high, to ensure adequate engine cooling under extreme loads.

Pollution filter

The pollution filter (a particle filter) serves as a barrier against impurities in the outside air, including dust and pollen, and odours. The air is also filtered when the air recirculation mode is activated.

For the air conditioner to work with maximum efficiency, the pollution filter element must be replaced at the intervals specified in the Service Schedule.

If the vehicle is driven in areas with a high level of air pollution and the filter is no longer fully effective, it may be necessary to change the filter element more frequently.

Key-coded settings

The currently selected air conditioner settings are automatically stored and assigned to the remote control key.

Power management

To prevent the battery from becoming discharged and to maintain the necessary power level, the system will temporarily shut off the electrical components that are using a lot of power, or reduce the current they are consuming \Rightarrow *page* 226. Heating systems in particular use a large amount of electrical power. If you notice, for instance, that the rear window heater is not working, it may have been temporarily switched off by the **power management** function, or regulated to a lower heat output. These systems will be available again as soon as sufficient electrical power is available.

For safety reasons it is important that all the windows are kept free of ice, snow and condensation. These can cause poor visibility

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
-						0

Heating and cooling

document_0900452a81b1b9de.book Seite 94 Donnerstag, 26. Juli 2007 9:16 09

Heating and cooling

MARNING (continued)

and lead to an accident. Please familiarise yourself with the operating controls for the air conditioner, including the demist/defrost functions for the windows.

(Caution

۲

94

 If you suspect that the air conditioner is damaged, switch it off to prevent further damage and have the system checked by a qualified workshop.

• Repairs to the Audi air conditioner require specialist knowledge and special tools. For this reason, please contact a qualified workshop if the system is not working properly.

i Note

• Keep the air intake slots in front of the windscreen clear of snow, ice and leaves to ensure unimpaired heating and cooling, and to prevent the windows misting over.

• The air from the outlets flows through the passenger compartment and out through the slots at the rear of the vehicle. Do not cover these slots with clothing or other objects.

 The air conditioner operates most effectively with the windows and the tilting panorama roof* closed. However, if the vehicle has heated up after standing in the sun for some time, the air inside can be cooled more quickly by opening the windows for a short time. Applies to vehicles: with deluxe automatic air conditioner

Controls

The controls for the air conditioner at a glance.



Fig. 103 Controls for deluxe automatic air conditioner

The functions can be set by turning the rotary control and are switched on and off by briefly pressing the buttons. The LEDs in the buttons light up when the function is switched on.

Button(s)	Function	Page
OFF	Switching on and off	\Rightarrow page 95
(AUTO)	Automatic mode	\Rightarrow page 95
Rotary control ^{a)}	Temperature selection	\Rightarrow page 96
8	Blower	\Rightarrow page 96
6	Air recirculation mode	\Rightarrow page 97

document_0900452a81b1b9de.book Seite 95 Donnerstag, 26. Juli 2007 9:16 09

Button(s)	Function	Page
*21	Air distribution	\Rightarrow page 97
	Defrosting windows	\Rightarrow page 98
(H)	Heated rear window	\Rightarrow page 98
(AC)	Switching air cooling on/off	\Rightarrow page 98
۵	Seat heating	\Rightarrow page 114

The rotary control is also used to adjust the blower speed, air distribution and seat heating.

i Note

The grille on the control console \Rightarrow *page 94*, fig. 103 must be kept free. Please ensure that it is not covered by stickers or similar. Measuring sensors are located behind it.

Applies to vehicles: with deluxe automatic air conditioner Switching on and off

Switching on air conditioner

- Press the OFF button briefly, or
- Press the AUTO button.

Switching off air conditioner

 Press the OFF button to switch off the air conditioner and cut off the supply of fresh air from outside the vehicle.

The air conditioner will switch on again if one of the control buttons is pressed. \blacksquare

Heating and cooling

Applies to vehicles: with deluxe automatic air conditioner

Automatic mode AUTO

The standard operating mode for all seasons.

Switching on automatic mode

- Select a temperature between +16 °C (60 °F) and +28 °C (84 °F).
- Press the AUTO button.

The automatic mode maintains a constant temperature inside the vehicle and dehumidifies the air. Air temperature, air delivery and air distribution are regulated automatically to reach the desired interior temperature as quickly as possible, and then to maintain this temperature. The system automatically compensates for any variations in the outside temperature and for the effect of direct sunlight.

The automatic temperature regulation only operates at temperature settings between +16 °C and +28 °C. If a temperature below +16 °C is selected, LO appears on the display. If a temperature above +28 °C is selected, the display will show HL in the two extreme settings the air conditioner operates continuously with maximum cooling or heating output, and the temperature is not regulated automatically.

 




Fig. 104 Rotary control for temperature selection



- Turn the rotary control anti-clockwise to reduce the temperature or clockwise to increase the temperature \Rightarrow fig. 104.

The temperature setting will be shown on the screen \Rightarrow fig. 105 for a few seconds if the sound system or MMI* is switched on. \blacksquare

Applies to vehicles: with deluxe automatic air conditioner

Blower 😽

The automatically selected blower speed can be reduced or increased manually if required.



Fig. 106 Blower button and rotary control



- Seat heat. Fig. 107 Display: Blower setting
- Press the button for the **blower** (a).
 Turn the rotary control to set the blower to the desired

speed (and regulate the volume of air delivery).

We recommend keeping the blower running at a low setting when driving slowly.

To prevent fumes or unpleasant smells from entering the vehicle, switch to the **air recirculation** mode by pressing the 🕞 button.



document_0900452a81b1b9de.book Seite 97 Donnerstag, 26. Juli 2007 9:16 09

The blower speed will be shown on the screen \Rightarrow page 96, fig. 107

i Note

 The blower speed may change automatically. This ensures that the selected temperature is reached as quickly as possible. The blower speed cannot be regulated separately for the driver and front passenger sides of the vehicle.

for a few seconds if the sound system or MMI* is switched on.

Applies to vehicles: with deluxe automatic air conditioner Air recirculation mode 🔄

The air recirculation setting prevents fumes etc. from

entering the interior. Switching on the air recirculation mode

- Press the button $\Rightarrow \bigwedge$.

Switching off the air recirculation mode

- Press the 🖾 button again, or
- Press the AUTO button, or
- Press the 🐨 button.

In this setting, the air is drawn from the interior of the vehicle, filtered and continuously recirculated. We recommend using the air recirculation mode in the following circumstances:

When driving through a tunnel or in queues of traffic, to prevent fumes entering the interior of the vehicle.

For reasons of safety you should not leave the air recirculation switched on for too long. This mode prevents fresh air from

Heating and cooling

MARNING (continued)

entering the vehicle, so the windows can mist over if the air cooling is switched off. Bad visibility can cause an accident.

Applies to vehicles: with deluxe automatic air conditioner

Air distribution 划 The automatically programmed air distribution can be

altered manually if required.







Fig. 109 Display: Air distribution

ntrol

- Press the button for Distribution 12.
- Turn the rotary control to the desired setting.

Controls

document_0900452a81b1b9de.book Seite 98 Donnerstag, 26. Juli 2007 9:16 09

Heating and cooling

You can use the air distribution setting to select the air outlets you wish to activate. In setting \hat{T} all the air is directed to the windows, in setting $\overline{\Xi}$ the air is directed to the driver (or passenger), and in setting $\overline{\Psi}$ to the footwells. In addition to this there are several other possible combinations, allowing you to adjust the air distribution to suit individual requirements.

Switch to $\fbox{\sc AUTO}$ for automatic control of the air distribution.

The air distribution setting will be shown on the screen \Rightarrow page 97, fig. 109 for a few seconds if the sound system or MMI* is switched on.

Applies to vehicles: with deluxe automatic air conditioner Defrosting

The windscreen and side windows are defrosted or demisted as quickly as possible.

- To switch on, press the 🐨 button.
- To switch off, press the button again, or press the AUTO button.

The temperature is regulated automatically. The air output is increased to maximum and most of the air comes out of the outlets below the windscreen.

The air recirculation mode is switched off when the $\textcircled{\begin{tmatrix} \hline \end{tmatrix}}$ button is pressed. \blacksquare

Applies to vehicles: with deluxe automatic air conditioner

Heated rear window 💷

The rear window heating helps to demist the rear window.

 Press the III button to switch the rear window heating on and off. The rear window heating only works when the engine is running. An indicator lamp in the button lights up when the rear window heater is switched on.

Depending on the outside temperature, the rear window heating switches off automatically after about 10 to 20 minutes.

The rear window heating can be switched on permanently by pressing the $(\mbox{$\overline{W}$})$ button for longer than two seconds. It will then remain on until the ignition is switched off. When the rear window heating is switched on, this setting will remain activated for 15 minutes after switching off the ignition.

If the engine is started again during this period of 15 minutes, the rear window heating will be switched on for about 10 to 20 minutes, depending on the exterior temperature. This means you do not have to manually switch on the rear window heating again if the vehicle has only been parked for a short time.

***** For the sake of the environment

Switch off the heated rear window manually as soon as the rear window is clear. By saving electrical power you can also save fuel.

Applies to vehicles: with deluxe automatic air conditioner AC mode (AC)

Deactivating the AC modePress the (AC) button.

Activating the AC mode

- Press the AC button again.

In the AC mode, the air cooling system is switched on and the heating and ventilation are regulated automatically.

document_0900452a81b1b9de.book Seite 99 Donnerstag, 26. Juli 2007 9:16 09

i Note

If the LED in the AC button should continue to light up when the AC mode has been switched off (i.e. the air conditioner has been switched off) this is due to a defect in one of the air conditioner components. If a malfunction should occur, please contact a qualified workshop.

Applies to vehicles: with deluxe automatic air conditioner

Air outlets

The air distribution setting directs the air to the outlets you select.

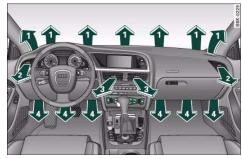


Fig. 110 Dashboard: Location of air outlets

Air outlets (2) and (3)

 The outlets can be opened and closed by turning the thumbwheels next to them.

- Heating and cooling
- The direction of air delivery from these outlets can be adjusted horizontally and vertically using the adjuster in the centre of each outlet grille.

The flow of air from the outlets is controlled either automatically or manually, depending on the operating mode selected. All the outlets can provide air which is either heated, unheated, or cooled.

i Note

When the air conditioner is operating in the cooling mode, the air is directed mainly to outlets (2) and (3). To ensure an adequate cooling effect, you should not close these outlets completely.

Applies to vehicles: with deluxe automatic air conditioner Air outlets for rear passengers

 
The air outlets for the rear cabin are located in the centre console.

- The outlets can be opened and closed by turning the thumbwheels.
- The direction of air delivery from these outlets can be adjusted horizontally and vertically using the adjuster in the centre of each outlet grille.

The flow of air from the outlets is controlled either automatically or manually, depending on the operating mode selected. All the outlets can provide air which is either heated, unheated, or cooled. The heater outlets for the rear footwells are located under the front seats.

i Note

When the air conditioner is operating in the cooling mode the air is directed mainly to the outlets in the centre console. To ensure an



document_0900452a81b1b9de.book Seite 100 Donnerstag, 26. Juli 2007 9:16 09

Heating and cooling

100

adequate cooling effect, you should not close these outlets completely.

Applies to vehicles: with deluxe automatic air conditioner Economical operation of the air conditioner

Economical operation of the air conditioner will help to save fuel.

When the air conditioner is operating in the cooling mode it reduces engine power and increases fuel consumption. To ensure that the cooling mode is activated only when really necessary, please note the following points:

- Switch off the cooling mode by pressing the AC button (LED off) if you wish to save fuel.
- You should also switch off the cooling mode by pressing the AC button (LED off) if you open the windows or the tilting panorama roof* while driving.
- If the vehicle has heated up after standing in the sun, open the windows and doors for a short time to cool the vehicle.

🕷 For the sake of the environment

By saving fuel you also reduce the amount of pollutants emitted from your vehicle.

Deluxe automatic air conditioner basic settings

Applies to vehicles: with deluxe automatic air conditioner

General notes

The basic settings for the air conditioner can be adjusted via the sound system or MMI*.



- Select: Function selector button CAR > control button AC.

The following functions are available:

- Auxiliary heating* \Rightarrow page 110
- Auxiliary ventilation* \Rightarrow page 110
- Running time* \Rightarrow page 112
- Timer status* \Rightarrow page 111
- Timer $1^* \Rightarrow page 111$
- Timer $2^* \Rightarrow page 111$
- Timer $3^* \Rightarrow page 111$
- Supplementary heater^{*} ⇒ page 101 ■

document_0900452a81b1b9de.book Seite 101 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with diesel engine Supplementary heater

- Set the Supplementary heater to auto or off.

Models with a diesel engine are equipped with a supplementary heater to help warm up the interior more quickly. At outside temperatures below about +5 °C the supplementary heater is switched on (and off) automatically when the engine is running, depending on the coolant temperature, the temperature in the vehicle interior and the temperature the heater is set to ■

Deluxe automatic air conditioner plus

Applies to vehicles: with deluxe automatic air conditioner plus

Description

The air conditioner is designed to keep the passenger compartment at the temperature you find most comfortable at all times of the year.

The air conditioner provides heating and ventilation and also cools and dehumidifies the air inside the vehicle.

The air conditioner is fully automatic, and will maintain the desired temperature at a constant level. To achieve this, the temperature of the air supplied to the interior, the blower speed (volume of air delivery) and the air distribution are regulated automatically. The system also allows for the effect of strong sunlight, so there is no need for manual adjustment. For these reasons it is advisable to use the **automatic mode** for the comfort of all the passengers in virtually all conditions throughout the year $\Rightarrow page 103$.

Please note:

The humidity of the air is automatically reduced when the system cools the interior of the vehicle. This helps to prevent condensation on the windows.

Heating and cooling

If the humidity and temperature outside the vehicle are high, condensation can drip off the evaporator in the air cooling system and form a pool underneath the vehicle. This is normal and does not indicate a leak.

If the outside temperature is low, the blower normally only switches to a higher speed once the coolant has warmed up sufficiently (this does not apply to the defrost setting).

In order to achieve maximum engine power, the air conditioner compressor is temporarily switched off when pulling away from a standstill with full throttle.

The compressor also switches off if the coolant temperature is excessively high, to ensure adequate engine cooling under extreme loads.

Pollution filter

The pollution filter (a combined particle filter and activated charcoal filter) serves as a barrier against impurities in the outside air, including dust and pollen, and against unpleasant smells. The air is also filtered when the air recirculation mode is activated.

For the air conditioner to work with maximum efficiency, the pollution filter element must be replaced at the intervals specified in the Service Schedule.

If the vehicle is driven in areas with a high level of air pollution and the filter is no longer fully effective, it may be necessary to change the filter element more frequently.

Key-coded settings

The currently selected air conditioner settings are automatically stored and assigned to the remote control key.

-

Power management To prevent the battery from becoming discharged and to maintain the necessary power level, the system will temporarily shut off the electrical components that are using a lot of power, or reduce the current they are consuming \Rightarrow *page* 226. Heating systems in particular use a large amount of electrical power. If you notice, for

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
			<u> </u>		-•	

document_0900452a81b1b9de.book Seite 102 Donnerstag, 26. Juli 2007 9:16 09

Heating and cooling

instance, that the rear window heater is not working, it may have been temporarily switched off by the **power management** function, or regulated to a lower heat output. These systems will be available again as soon as sufficient electrical power is available.

۲

102

For safety reasons it is important that all the windows are kept free of ice, snow and condensation. These can cause poor visibility and lead to an accident. Please familiarise yourself with the operating controls for the air conditioner, including the demist/defrost functions for the windows.

! Caution

 If you suspect that the air conditioner is damaged, switch it off to prevent further damage and have the system checked by a qualified workshop.

 Repairs to the air conditioning system require specialist knowledge and special tools. For this reason, please contact a qualified workshop if the system is not working properly.

i Note

 Keep the air intake slots in front of the windscreen clear of snow, ice and leaves to ensure unimpaired heating and cooling, and to prevent the windows misting over.

 
• The air from the outlets flows through the passenger compartment and out through the slots at the rear of the vehicle. Do not cover these slots with clothing or other objects.

 The air conditioner operates most effectively with the windows and the tilting panorama roof* closed. However, if the vehicle has heated up after standing in the sun for some time, the air inside can be cooled more quickly by opening the windows for a short time. Applies to vehicles: with deluxe automatic air conditioner plus

Controls

The controls for the air conditioner at a glance.





The left-hand display shows the temperature selected for the lefthand side, the right-hand display the temperature for the right-hand side.

The functions can be switched on and off by turning the controls or briefly pressing the buttons. The LEDs in the buttons light up when the function is switched on.

document_0900452a81b1b9de.book Seite 103 Donnerstag, 26. Juli 2007 9:16 09

Button(s)	Function	Page
OFF	Switching on and off	\Rightarrow page 103
(AUTO)	Automatic mode - drivers side/ front passengers side	\Rightarrow page 103
Temperature con- trol 1 ^{a)} Temperature con- trol 2 ^{a)}	Temperature selection - drivers side Temperature selection - front passengers side	\Rightarrow page 104
*	Blower - driver's side/ front passenger's side	\Rightarrow page 104
(Gap b)	Air recirculation mode	\Rightarrow page 105
* 2	Air distribution - drivers side/ front passengers side	\Rightarrow page 106
	Defrosting windows	\Rightarrow page 106
	Heated rear window	\Rightarrow page 106
AC	Switching air cooling on/off	\Rightarrow page 107
() / ()	Seat heating / seat ventila- tion	\Rightarrow page 114

a) The rotary control is also used to adjust the blower speed, air distribution and seat heating.

^{b)} The symbol differs slightly on some models.

i Note

1

• The grille on the control console \Rightarrow page 102, fig. 112 must be kept free. Please ensure that it is not covered by stickers or similar. Measuring sensors are located behind it.

Heating and cooling

Applies to vehicles: with deluxe automatic air conditioner plus Switching on and off

Switching on air conditioner

- Press the OFF button briefly, or
- Press the AUTO button.

Switching off air conditioner

Press the OFF button for at least 2 seconds to switch off _ the air conditioner and cut off the supply of fresh air from outside the vehicle. The display will show "OFF".

The air conditioner will switch on again if you operate the temperature control.

i Note

You can press the OFF button when the ignition is switched off to activate the "residual heat" function. The system will then heat the interior using the remaining heat in the engine coolant.

Applies to vehicles; with deluxe automatic air conditioner plus

Automatic mode AUTO

The standard operating mode for all seasons.

Switching on automatic mode

- Select a temperature between +16 °C (60 °F) and +28 °C (84 °F).
- Press the AUTO button.

The automatic mode maintains a constant temperature inside the vehicle and dehumidifies the air. Air temperature, air delivery and air distribution are regulated automatically to reach the desired

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
-) —			

103

document_0900452a81b1b9de.book Seite 104 Donnerstag, 26. Juli 2007 9:16 09

Heating and cooling

٠

۲

104

interior temperature as quickly as possible, and then to maintain this temperature. The system automatically compensates for any variations in the outside temperature and for the effect of direct sunlight.

The automatic temperature regulation only operates at temperature settings between +16 °C and +28 °C. If a temperature below +16 °C is selected, LO appears on the display. If a temperature above +28 °C is selected, the display will show **HI**. In the two extreme settings the air conditioner operates continuously with maximum cooling or heating output, and the temperature is not regulated automatically.

Applies to vehicles: with deluxe automatic air conditioner plus Temperature selection

Separate temperatures can be selected for the driver's and front passenger's sides.



Fig. 113 Rotary control for temperature selec-tion



Fig. 114 Display: Temperature setting

- Turn the rotary control anti-clockwise to reduce the temperature or clockwise to increase the temperature ⇒ fig. 113.

The temperature setting will be shown on the display of the air conditioner console. The temperature setting will be shown on the screen \Rightarrow fig. 114 for a few seconds if the sound system or MMI* is switched on.

Applies to vehicles: with deluxe automatic air conditioner plus Blower 🛞

The automatically selected blower speed can be reduced or increased manually if required.



Fig. 115 Blower button and rotary control



Blower Air conditioning Distribution

document_0900452a81b1b9de.book Seite 105 Donnerstag, 26. Juli 2007 9:16 09

Fig. 116 Display: Blower setting

- Press the button for the blower (86).

 Turn the rotary control to set the blower to the desired speed (and regulate the volume of air delivery).

The air conditioning system automatically regulates the blower speed according to the interior temperature. However, you can also adjust the blower speed manually.

The blower speed will be shown on the screen \Rightarrow fig. 116 for a few seconds if the sound system or MMI* is switched on.

i Note

• The blower speed may change automatically. This ensures that the selected temperature is reached as quickly as possible.

• The blower speed cannot be regulated separately for the driver and front passenger sides of the vehicle. \blacksquare

Heating and cooling

Applies to vehicles: with deluxe automatic air conditioner plus

Air recirculation mode 🔄

The air recirculation setting prevents fumes etc. from entering the interior.

Switching on the air recirculation mode

- Press the button $\Rightarrow \bigwedge$.

 
Switching off the air recirculation mode

- Press the 🔄 button again, or
- Press the AUTO button, or
- Press the () button.

In this setting, the air is drawn from the interior of the vehicle, filtered and continuously recirculated. We recommend using the air recirculation mode in the following circumstances:

When driving through a tunnel or in queues of traffic, to prevent fumes entering the interior of the vehicle.

For reasons of safety you should not leave the air recirculation switched on for too long. This mode prevents fresh air from entering the vehicle, so the windows can mist over if the air cooling is switched off. Bad visibility can cause an accident. ■



document_0900452a81b1b9de.book Seite 106 Donnerstag, 26. Juli 2007 9:16 09

Heating and cooling

۲

106

Applies to vehicles: with deluxe automatic air conditioner plus

Air distribution 划

The automatically programmed air distribution can be altered manually if required.



Fig. 117 Air distribution button and rotary control



Fig. 118 Display: Air

- Press the button for Distribution 划.
- Turn the rotary control to the desired setting.

You can use the air distribution setting to select the air outlets you wish to activate. In setting $\widehat{\Box}$ all the air is directed to the windows, in setting $\overline{\Box}$ the air is directed to the driver (or passenger), and in setting $\overline{\Box}$ to the footwells. In addition to this there are several other possible combinations, allowing you to adjust the air distribution to suit individual requirements.

Switch to AUTO for automatic control of the air distribution.

The air distribution setting will be shown on the MMI display \Rightarrow fig. 118 for a few seconds if the MMI is switched on. \blacksquare

Applies to vehicles: with deluxe automatic air conditioner plus

Defrosting 🐨

The windscreen and side windows are defrosted or demisted as quickly as possible.

- To switch on, press the 🗐 button.
- To switch off, press the button again, or press the (AUTO) button.

The temperature is regulated automatically. The air output is increased to maximum and most of the air comes out of the outlets below the windscreen.

The air recirculation mode is switched off when the $\textcircled{\ensuremath{\mathbb{R}}}$ button is pressed. \blacksquare

Applies to vehicles: with deluxe automatic air conditioner plus
Heated rear window

The rear window heating helps to demist the rear window.

 Press the IIII button to switch the rear window heating on and off.

The rear window heating only works when the engine is running. An indicator lamp in the button lights up when the rear window heater is switched on.

 
Depending on the outside temperature, the rear window heating switches off automatically after about 10 to 20 minutes.

The rear window heating can be switched on permanently by pressing the IIII button for longer than two seconds. It will then

document_0900452a81b1b9de.book Seite 107 Donnerstag, 26. Juli 2007 9:16 09

remain on until the ignition is switched off. When the rear window heating is switched on, this setting will remain activated for 15 minutes after switching off the ignition.

If the engine is started again during this period of 15 minutes, the rear window heating will be switched on for about 10 to 20 minutes, depending on the exterior temperature. This means you do not have to manually switch on the rear window heating again if the vehicle has only been parked for a short time.



Switch off the heated rear window manually as soon as the rear window is clear. By saving electrical power you can also save fuel. ■

Applies to vehicles: with deluxe automatic air conditioner plus AC mode AC

Deactivating the AC mode - Press the AC button.

Activating the AC mode

- Press the AC button again.

In the AC mode, the air cooling system is switched on and the heating and ventilation are regulated automatically.

i Note

T

If the LED in the AC button should continue to light up when the AC mode has been switched off (i.e. the air conditioner has been switched off) this is due to a defect in one of the air conditioner components. If a malfunction should occur, please contact a qualified workshop. \blacksquare

Heating and cooling

Applies to vehicles: with deluxe automatic air conditioner plus

The air distribution setting directs the air to the outlets you select.

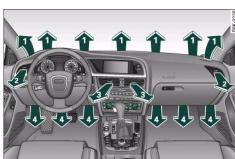


Fig. 119 Dashboard: Location of air outlets

Air outlets (2) and (3)

Air outlets

- The outlets can be opened and closed by turning the thumbwheels next to them.
- The direction of air delivery from these outlets can be adjusted horizontally and vertically using the adjuster in the centre of each outlet grille.

The flow of air from the outlets is controlled either automatically or manually, depending on the operating mode selected. Outlets () to (4) can provide air which is either heated, unheated, or cooled.

1

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
) —		-	

document_0900452a81b1b9de.book Seite 108 Donnerstag, 26. Juli 2007 9:16 09

Heating and cooling

i Note

108

When the air conditioner is operating in the cooling mode, the air is directed mainly to outlets (2) and (3). To ensure an adequate cooling effect, you should not close these outlets completely.

Applies to vehicles: with deluxe automatic air conditioner plus

Air outlets for rear passengers

The air outlets for the rear cabin are located in the centre console.

- The outlets can be opened and closed by turning the thumbwheels.
- The direction of air delivery from these outlets can be adjusted horizontally and vertically using the adjuster in the centre of each outlet grille.

The flow of air from the outlets is controlled either automatically or manually, depending on the operating mode selected. All the outlets can provide air which is either heated, unheated, or cooled. The heater outlets for the rear footwells are located under the front seats.

i Note

When the air conditioner is operating in the cooling mode the air is directed mainly to the outlets in the centre console. To ensure an adequate cooling effect, you should not close these outlets completely. \blacksquare

Applies to vehicles: with deluxe automatic air conditioner plus

Economical operation of the air conditioner

Economical operation of the air conditioner will help to save fuel.

When the air conditioner is operating in the cooling mode it reduces engine power and increases fuel consumption. To ensure that the cooling mode is activated only when really necessary, please note the following points:

- Switch off the cooling mode by pressing the AC button (LED off) if you wish to save fuel.
- You should also switch off the cooling mode by pressing the AC button (LED off) if you open the windows or the tilting panorama roof* while driving.
- If the vehicle has heated up after standing in the sun, open the windows and doors for a short time to cool the vehicle.

st For the sake of the environment

By saving fuel you also reduce the amount of pollutants emitted from your vehicle. \blacksquare

document_0900452a81b1b9de.book Seite 109 Donnerstag, 26. Juli 2007 9:16 09

Deluxe automatic air conditioner plus - basic settings

Applies to vehicles: with deluxe automatic air conditioner plus

General notes

The basic settings for the air conditioner can be adjusted via the sound system or MMI*.



- Select: Function selector button CAR > control button AC.

The following functions are available:

- Automatic air recirculation \Rightarrow page 109
- Synchronisation ⇒ page 109
- Auxiliary heating* \Rightarrow page 110
- Auxiliary ventilation* ⇒ page 110
- Running time* \Rightarrow page 112
- Timer status* \Rightarrow page 111
- Timer $1^* \Rightarrow page 111$
- Timer $2^* \Rightarrow page 111$
- Timer $3^* \Rightarrow page 111$

1

Supplementary heater^{*} ⇒ page 110 ■

Heating and cooling

Applies to vehicles: with deluxe automatic air conditioner plus Automatic recirculation

If the outside air is polluted, an air purity sensor in the vehicle will automatically switch on the air recirculation.

To prevent fumes, etc. in the outside air from entering the interior, we recommend that the automatic air recirculation should be switched on at all times.

If the **air purity sensor** in the air conditioner system detects a certain concentration of fumes in the outside air, the control unit will either pass the incoming air through the pollution filter or automatically switch on the air recirculation. If there is a high concentration of pollution in the outside air, the air conditioner automatically switches to air recirculation and cuts off the supply of air from the outside. As soon as the level of pollution decreases, air is fed into the vehicle from the outside again.

If the windows mist up when the automatic air recirculation is on, press the 🐨 button immediately.

The automatic air recirculation can switch itself off in certain conditions. If the outside temperature is less than about +10 °C, the auto-matic air recirculation will only operate for 30 seconds. If the air conditioner is switched to the ECON mode, or if the outside temperature is less than about -1 °C, the automatic air recirculation will only operate for 15 seconds.

Applies to vehicles: with deluxe automatic air conditioner plus

Synchronisation

The air conditioner settings can be synchronised for all passengers.

When the synchronisation function is switched **on**, all subsequent air conditioner settings made on the driver's side (except for the seat heating*) are also applied to the front passenger's side.

•	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
)			

document_0900452a81b1b9de.book Seite 110 Donnerstag, 26. Juli 2007 9:16 09

Heating and cooling

110

The synchronisation is cancelled as soon as any adjustments are made on the front passenger's side. \blacksquare

Applies to vehicles: with diesel engine Supplementary heater

- Set the Supplementary heater to auto or off.

Models with a diesel engine are equipped with a supplementary heater to help warm up the interior more quickly. At outside temperatures below about +5 °C the supplementary heater is switched on (and off) automatically when the engine is running, depending on the coolant temperature, the temperature in the vehicle interior and the temperature the heater is set to.■

Auxiliary heating and auxiliary ventilation

Applies to vehicles: with auxiliary heating - under development at the time of printing **Description**

The auxiliary heating and ventilation systems heat and cool the interior independently of the engine.

The auxiliary heating <u></u> works in conjunction with the air conditioner system, but does not rely on heat from the engine. Instead of this, the system burns fuel. The system's main function is to warm up the interior of the vehicle and to defrost the windows in cold weather.

The auxiliary heating system can be used both when the vehicle is stationary and when driving (to provide extra heat while the engine is warming up). The **auxiliary ventilation \$** also operates independently of the engine. This feature can be used to cool the interior with the blower when the vehicle is left parked in the sun.

The system will automatically activate either the auxiliary heating or the auxiliary ventilation mode, depending on the actual temperature measured inside the car and the temperature you have set with the air conditioner controls. It is possible to alter the temperature setting while the auxiliary heating/ventilation is running.

Switching on and off

There are two different ways of switching on the auxiliary heating/ventilation system.

 Immediate start: You can switch the auxiliary heating/ventilation on and off at any time via the sound system or MMI ⇒ page 111. You can also switch the system on and off using the remote control ⇒ page 113.

• Switching on via timer: You can programme various start times using the timers \Rightarrow page 111. However you must first activate the timer before the auxiliary heating/ventilation system will switch on automatically.

The auxiliary heating/ventilation will switch itself off at the end of the programmed running time. The running time can be set to 15, 30, 45 or 60 minutes \Rightarrow page 112.

 The auxiliary heating must not be allowed to run when the vehicle is in a confined space because it can give off toxic fumes.

• To avoid any possible fire risk, never have the auxiliary heating switched on when refuelling the vehicle.

Because of the high temperatures which occur when the auxiliary heating is running, make sure when parking the car that the exhaust outlet under the car is not obstructed in any way and that the exhaust gases do not come into contact with flammable materials (fire risk).

document_0900452a81b1b9de.book Seite 111 Donnerstag, 26. Juli 2007 9:16 09

i Note

• It is advisable to open the air outlets when using the auxiliary heating/ventilation.

• The auxiliary heating/ventilation will not switch on if the fuel in the tank has reached the reserve zone.

• The auxiliary heating/ventilation will not switch on if the battery charge level is low.

• The symbols ♣ (auxiliary ventilation) or ﷺ (auxiliary heating) flash in the instrument cluster next to the clock display when the auxiliary heating/ventilation is switched on. Both symbols light continuously when the timer is activated.

• At low outside temperatures some visible water vapour may form in the engine compartment. This is a normal phenomenon, and no reason for concern.

Applies to vehicles: with auxiliary heating - under development at the time of printing **Switching on/off immediately**

You can switch the auxiliary heating/ventilation on and off immediately via the sound system or MMI*.



 Select: Function selector button (CAR) > control button AC > Aux. heating or Aux. ventilation. Heating and cooling

When the auxiliary heating/ventilation is running, you can press the $\overline{\text{OFF}}$ button on the air conditioner console to switch off the blower only. Pressing the $\overline{\text{OFF}}$ button a second time will switch on the




The symbols ♣ (auxiliary ventilation) or ऄ (auxiliary heating) flash in the instrument cluster next to the clock display when the auxiliary heating/ventilation is switched on.


Applies to vehicles: with auxiliary heating - under development at the time of printing Setting and activating the timers

You can make the desired settings for the auxiliary heating/ventilation on the sound system or MMI*.



 Fig. 122 Display: Timer 🕨



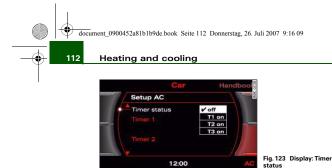

Setting the timers

- Select: Function selector button (CAR) > control button AC > e.g. Timer 1 \Rightarrow page 111, fig. 122.

Activating a timer

- Select: Function selector button \fbox{CAR} > control button AC > Timer status \Rightarrow fig. 123.

Three timers are available for the auxiliary heating/ventilation. You can set a starting time and running time for each of the timers.

When the time set on one of the timers elapses, the date automatically changes to the next day and the **Timer status** is reset to off. You have to **activate one of the timers** (e.g. T1 on) before it will switch on the auxiliary heating/ventilation at the time you have set. This prevents the auxiliary heating/ventilation from switching on when you are not using your vehicle.

Setting the running time

You can set the running time on the sound system or MMI*.

Applies to vehicles: with auxiliary heating - under development at the time of printing



Fig. 124 Display: Running time

- Select: Function selector button (CAR) > control button AC > Running time.

The running time for the auxiliary heating/ventilation can be set to a time between 15 and 60 minutes. The auxiliary heating/ventilation will switch itself off at the end of the programmed running time. ■

i Note

Before activating the timer, make sure that the correct time and date settings have been entered. If the time and/or date are not correct, the auxiliary heating will come on late or not at all. Please refer to the MMI Operating Instructions for information on how to set the date and time.



document_0900452a81b1b9de.book Seite 113 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with auxiliary heating - under development at the time of printing Remote control

The auxiliary heating and auxiliary ventilation can also be switched on or off with the remote control.

 


Fig. 125 Remote control for auxiliary heating

Fig. 126 Remote control: Changing

battery



Switching on

- Press the B button (1) for about 2 seconds to activate the auxiliary heating/ventilation \Rightarrow fig. 125.

Switching off

- Press the OFF button (2) for about 2 seconds to switch off the auxiliary heating/ventilation.

Heating and cooling

113

Changing the battery

- Push back and remove the battery cover on the remote control \Rightarrow fig. 126.
- Change the battery. The diagram in the battery compartment shows how the battery should be fitted. The new battery must be of the same type as the original one.
- Re-fit the battery cover.

When it is switched on, the auxiliary heating or auxiliary ventilation Starts immediately and remains of nor the period set in the menu. The maximum running time is 60 minutes.

If you want to switch the system on again after the end of the programmed running time, press the 🗒 button (1).

 
Transmitter indicator lamp

The transmitter indicator lamp $(\ensuremath{\underline{3}})$ will flash accordingly to show whether the command you sent via the remote control was successful.

When you switch the system on by pressing the 🗒 button (1) the indicator lamp will flash green for about 30 seconds to confirm that the heating/ventilation has been switched on. When you switch the system off by pressing the OFF button (2) the indicator lamp will flash red to confirm that the heating/ventilation has been switched off.

If the remote control is outside the transmitting range the indicator lamp will flash red slowly. If there is a fault in the system (e.g. fuel level is down to reserve), the indicator lamp will flash red rapidly. In both cases the command will not be executed.

When the battery of the remote control is almost completely flat, the transmitter indicator lamp will not light up and no commands will be executed.



document_0900452a81b1b9de.book Seite 114 Donnerstag, 26. Juli 2007 9:16 09

Heating and cooling

۲

114

Transmitting range

The range of the remote control transmitter is about 600 metres. However, this can be greatly reduced by obstacles (buildings, etc.) between the remote control transmitter and the vehicle. Hold the aerial $(\frac{3}{2})$ upright when using the remote control.

You should not normally use the remote control at a distance of less than 3 metres from the vehicle. If you are closer than this, or if you use the remote control inside the vehicle, this can cause signal overload.

🟶 For the sake of the environment

Please dispose of old batteries in the proper manner so that they do not harm the environment. ■

Seat heating

Applies to vehicles: with front seat heating/ventilation

Seat heating / ventilation

The seat cushions and backrests of the front seats can be heated and ventilated* electrically.







Seat heating

- Press the control button for Seat heat. a \Rightarrow fig. 127.
- Turn the rotary control to the desired setting.

Seat heating/ventilation*

Press the control button for Seat AC ⇒ fig. 128.
To adjust the seat ventilation, turn the rotary control anti-

Fig. 128 Display: Seat heating/ventilation


- clockwise to the desired setting.
 To adjust the seat heating, turn the rotary control clock-
- To adjust the seat heating, turn the rotary control clockwise to the desired setting.

In setting 0, the seat ventilation and seat heating are switched off.

U Caution

To avoid damaging the heating elements of the seat heating, please do not kneel on the seat or apply sharp pressure at a single point. \blacksquare




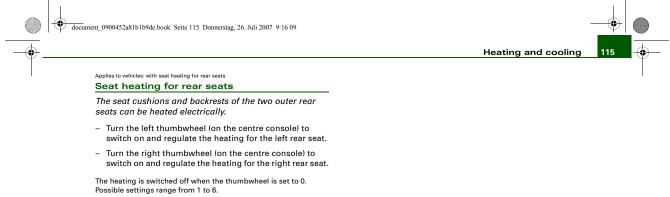

The heating for the rear seats only operates when a sensor registers the weight of the occupant in the seat. If nobody is travelling on the rear seats, please switch off the rear seat heating to avoid activating it unintentionally.

U Caution

 To avoid damaging the heating elements of the seat heating, please do not kneel on the seat or apply sharp pressure at a single point.



document_0900452a81b1b9de.book Seite 116 Donnerstag, 26. Juli 2007 9:16 09

Driving

 
Driving

116

Steering

Applies to vehicles: with manually adjustable steering column Adjusting the steering wheel position

The height and reach of the steering wheel can be adjusted as required to suit the driver.



- Pull the lever \Rightarrow fig. 129 -arrow- $\Rightarrow \triangle$ up.

- Move the steering wheel to the desired position.
- Then push the lever towards the steering column until the catch engages.

Fig. 129 Lever beneath steering column

• Never adjust the position of the steering wheel when the vehicle is moving - this could cause an accident.

 For safety reasons, the lever must be pushed securely against the steering column to prevent the steering wheel from accidentally changing position while driving (accident risk).

Ignition lock

Starting the engine with the key

You can use the ignition key to switch on the ignition and start the engine.



- Insert the key into the ignition lock.
- Manual gearbox: Press the clutch pedal all the way down and move the gear lever into neutral.
- Automatic gearbox: Press the brake pedal and move the selector lever to position P or N.
- Press in the key \Rightarrow fig. 130 to start the engine.
- Diesel engines can take a few seconds longer than usual to start on cold days. Please keep your foot on the clutch or brake pedal until the engine starts. The glow plug indicator lamp ¹⁰⁰ lights up in the instrument cluster while the glow plugs are preheating.

document_0900452a81b1b9de.book Seite 117 Donnerstag, 26. Juli 2007 9:16 09

If you press in the key **without** pressing the clutch or brake pedal, the ignition will be switched on or off. The steering lock is released when the ignition is switched on. Diesel engines continue to be automatically preheated.

The key can be removed only when the ignition is off. The key has to be pressed in briefly to switch off the ignition. On vehicles with an automatic gearbox, the selector lever has to be in position P.

Electrical components with a high power consumption are switched off temporarily while you start the engine.

When starting from cold the engine may be a little noisy for the first few seconds until oil pressure has built up in the hydraulic tappets. This is quite normal and no cause for concern.

If the engine fails to start immediately, the starter will be switched off automatically after a few seconds. Try to start the engine again.

Driver message in the instrument cluster display

Press brake pedal to start engine

This message appears on vehicles with an automatic gearbox if you try to start the engine without first pressing the brake pedal.

Press clutch pedal to start engine

This message appears on vehicles with a manual gearbox if you try to start the engine without first pressing the clutch pedal.

Engage N or P to start engine

This message will appear if you try to start the engine when the selector lever of the automatic gearbox is not in P or N.

Shift to P, otherwise vehicle can roll away. Doors do not lock if lever is not in P. or Please move selector lever to position P. Vehicle cannot be locked.

For safety reasons, this message will appear and a warning buzzer will sound if the selector lever of the automatic gearbox is not in position P after you switch off the ignition. Put the selector lever in position P; otherwise the vehicle can roll away. If the lever is not in position P you will not be able to lock the vehicle using the exterior locking switch on the door handle or the remote control key.

Steering lock

The steering is locked when the key is not in the ignition. The steering lock acts as a theft deterrent.

 Always take the key with you when you leave the vehicle. Otherwise the engine can be started or power-operated equipment such as the electric windows can be used. This could result in serious injury.

 Never leave children or disabled people alone in the car. The doors could be locked with the remote control key and the occupants could become trapped in the vehicle. The vehicle occupants could be exposed to extremely high or low temperatures, depending on the time of year.

• Never remove the key from the ignition while the vehicle is moving. The steering lock could engage suddenly, and you would not be able to steer the car.

 
U Caution

• If a malfunction occurs in the electronic ignition lock, a flashing symbol and the message **Ignition lock defective** will appear in the instrument cluster display.

• Avoid high engine speeds, full throttle and extreme load conditions until the engine has reached its normal operating temperature, otherwise this can damage the engine.

🐮 For the sake of the environment

Do not warm up the engine by running it with the car stationary. You should drive off immediately whenever possible. This will help avoid unnecessary exhaust emissions.



Driving

document_0900452a81b1b9de.book Seite 118 Donnerstag, 26. Juli 2007 9:16 09

i Note

Driving

118

• If the key should become stuck in the ignition lock, remove the top part of the key and use it to lock the vehicle.

• If you open the driver's door while the ignition is switched on, a warning buzzer will sound, and the message **Ignition is on** will appear in the display. In this case, please switch off the ignition.

Switching off the engine

- Stop the vehicle.
- Automatic gearbox: Move the selector lever to position P or N.
- Press in the ignition key to switch off the engine.

Emergency Off function

If necessary in an emergency, the engine can be switched off while the vehicle is still moving. The engine will be switched off if you press and hold the ignition key.

 Never switch off the engine until the vehicle is stationary.
 The brake servo and the power steering system work only when the engine is running. You need more strength to steer and brake the vehicle when the engine is switched off. This would mean a greater risk of accidents and serious injury, because you cannot steer and brake in the normal manner.

U Caution

If the engine has been working hard for a long time, there is a risk of heat building up in the engine compartment after the engine has been switched off; this could cause engine damage. For this reason, you should leave the engine idling for about 2 minutes before switching it off.



After the engine is stopped the radiator fan may run on for up to 10 minutes, even if the ignition is switched off. The fan may also start running again after some time if the coolant temperature rises due to a build-up of heat, or if the engine is hot and the engine compartment is heated up further by direct sunlight.

Starting and stopping the engine with the advanced key

Applies to vehicles: with advanced key

Starting the engine with the Start/Stop button

You can use the Start/Stop button to switch on the ignition and start the engine.



- Fig. 131 Audi advanced key: START ENGINE STOP button
- Manual gearbox: Press the clutch pedal all the way down and move the gear lever into neutral.



document_0900452a81b1b9de.book Seite 119 Donnerstag, 26. Juli 2007 9:16 09

- Automatic gearbox: Press the brake pedal and move the selector lever to position P or $N \Rightarrow \Delta$.
- **Press** the Start/Stop button \Rightarrow *page 118,* fig. 131 to start the engine.
- Diesel engines can take a few seconds longer than usual to start on cold days. Please keep your foot on the clutch or brake pedal until the engine starts. The glow plug indicator lamp ¹⁰⁰ lights up in the instrument cluster while the glow plugs are preheating.

If you press the Start/Stop button without pressing the clutch or brake pedal, the ignition will be switched on (and will be switched off if you press the button again). Diesel engines are preheated when the ignition is switched on.

If the engine fails to start straight-away, switch off the starter after about 10 seconds and try again after about half a minute.

When starting from cold the engine may be a little noisy for the first few seconds until oil pressure has built up in the hydraulic tappets. This is quite normal and no cause for concern.

Driver message in the instrument cluster display

No key identified

This message appears when you press the Start/Stop button if there is no remote control key inside the vehicle or if the system cannot detect or identify the key. This can happen, for example, if the radio signal from the key is *obstructed* by a metal briefcase or similar. Electronic equipment, such as mobile phones, can also interfere with the radio signal from the key.

Press brake pedal to start engine

This message appears on automatic vehicles if you press the Start/Stop button to start the engine without first pressing the brake pedal. The engine will only start if you press the brake pedal.

Press clutch pedal to start engine

This message appears on manual vehicles if you press the Start/Stop button to start the engine without first pressing the clutch pedal. The engine will only start if you press the clutch pedal.

Engage N or P to start engine

This message will appear if you try to start the engine when the selector lever of the automatic gearbox is not in P or N. The engine can only be started if the selector lever is in one of these positions.

Key not in vehicle

This message will appear together with the symbol \checkmark if the remote control key is removed from the vehicle while the engine is running. This is to remind you not to continue driving without the key (for example if you change drivers).

 
If the remote control key is not in the vehicle you will not be able to switch on the ignition or restart the engine after it has been switched off. Without the key, you will also not be able to lock the vehicle from the outside.

Shift to P, otherwise vehicle can roll away. Doors do not lock if lever is not in P. or Please move selector lever to position P. Vehicle cannot be locked.

For safety reasons, this message will appear and a warning buzzer will sound if the selector lever of the automatic gearbox is not in position P when you switch off the ignition with the Start/Stop button. Put the selector lever in position P; otherwise the vehicle can roll away. If the lever is not in position P you will not be able to lock the vehicle using the exterior locking switch on the door handle or the remote control key.

Advanced key defective! Use ignition lock

This message appears if the vehicle has to be started with the ignition key instead of the Start/Stop button.



Driving 119

document_0900452a81b1b9de.book Seite 120 Donnerstag, 26. Juli 2007 9:16 09

Steering lock

Driving

120

The steering is locked if the key is not in the ignition and the driver door has been opened. The steering lock acts as a theft deterrent.

Never run the engine in confined spaces. The exhaust gases are toxic.

 Never switch off the engine until the vehicle is stationary.
 The brake servo and the power steering system work only when the engine is running. You need more strength to steer and brake the vehicle when the engine is switched off. This would mean a greater risk of accidents and serious injury, because you cannot steer and brake in the normal manner.

U Caution

• Avoid high engine speeds, full throttle and extreme load conditions until the engine has reached its normal operating temperature, otherwise this can damage the engine.

• The engine cannot be started by push-starting or towing.

 If the engine has been working hard for a long time, there is a risk of heat building up in the engine compartment after the engine has been switched off; this could cause engine damage. For this reason, you should leave the engine idling for about 2 minutes before switching it off.

i Note

If you open the driver's door while the ignition is switched on, a warning buzzer will sound, and the message **Ignition is on** will appear in the display. In this case, please switch off the ignition.

Switching off the engine with the Start/Stop button

- Stop the vehicle.
- Automatic gearbox: Move the selector lever to position P or N.
- **Press** the Start/Stop button \Rightarrow *page 118,* fig. 131.

Emergency Off function

Should it be necessary in an emergency, the engine can be switched off when the selector lever is in position R, D or S. To switch off the engine (max. speed 10 km/h) press and hold the Start/Stop button and keep your foot on the brake.

 Never switch off the engine until the vehicle is stationary.
 The brake servo and the power steering system work only when the engine is running. You need more strength to steer and brake the vehicle when the engine is switched off. This would mean a greater risk of accidents and serious injury, because you cannot steer and brake in the normal manner.

U Caution

If the engine has been working hard for a long time, there is a risk of heat building up in the engine compartment after the engine has been switched off; this could cause engine damage. For this reason, you should leave the engine idling for about 2 minutes before switching it off.

i Note

After the engine is stopped the radiator fan may run on for up to 10 minutes, even if the ignition is switched off. The fan may also

document_0900452a81b1b9de.book Seite 121 Donnerstag, 26. Juli 2007 9:16 09

start running again after some time if the coolant temperature rises due to a build-up of heat, or if the engine is hot and the engine compartment is heated up further by direct sunlight. ■

Electro-mechanical parking brake

Operation

The electro-mechanical parking brake replaces the handbrake.



- Pull switch (A) \Rightarrow fig. 132 to apply the parking brake. The indicator lamp in the switch will light up.
- Depress the brake or accelerator pedal and press the switch at the same time to release the parking brake. The indicator lamp in the switch will go out.

Your vehicle is equipped with an electro-mechanical parking brake. The parking brake replaces the conventional handbrake, and is mainly intended to prevent the vehicle from rolling away accidentally.

However, the electro-mechanical parking brake also offers a number of convenience and safety features in addition to the functions of a normal handbrake.

When driving away

• The parking brake auto release function releases the parking brake automatically when you wish to start moving \Rightarrow page 122, "Driving away from a standstill".

 When driving away on a gradient, the parking brake auto release function prevents the vehicle from rolling back unintentionally. The braking force of the parking brake is only released when there is enough power at the wheels to make the vehicle move in the desired direction.

Emergency braking function

An emergency braking function enables you to stop the vehicle even if the conventional foot brake should fail to work \Rightarrow page 123, "Emergency braking function"

Warning and indicator lamps

 The warning lamps (2) in the instrument cluster and in the switch light up when the parking brake is applied with the ignition switched on.

 The warning lamps (D) in the instrument cluster and switch light up for approximately 20 seconds when the parking brake is applied with the ignition switched off.

Never press the accelerator pedal or release the clutch inadvert-ently if a gear is engaged or if the selector lever is not in position P or N (on automatic vehicles) while the vehicle is stationary with the engine running. The vehicle could otherwise start moving immediately and possibly cause an accident.

U Caution

If the symbol 🛈 flashes in the centre display, or if the warning lamp (1) flashes in the instrument cluster, there is a fault in the brake system. You can press the SET button to obtain a message explaining the fault. If the message **Parking brake!** appears, there is

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u></u>
—) —			

ole: Parking brake

1

Driving

document_0900452a81b1b9de.book Seite 122 Donnerstag, 26. Juli 2007 9:16 09

Driving

122

a fault in the parking brake. Have the fault repaired by a qualified workshop without delay \Rightarrow page 32.

i Note

• The parking brake can be applied at any time - even when the ignition is switched off. However, the ignition must be switched on before the parking brake can be released.

 Any slight noise which may be heard when the parking brake is applied or released is quite normal and no cause for concern.

The parking brake runs an automatic test cycle at regular intervals when the vehicle is parked. This may also cause a slight noise, which is normal.

Parking

Please note the following points to ensure there is no risk of the car rolling away accidentally after it is parked.

Parking the car

- Use the foot brake to stop the vehicle.
- Pull the switch to apply the parking brake.
- Automatic gearbox: Move the selector lever to P.
- Switch off the engine $\Rightarrow \Delta$.
- Manual gearbox: Engage the first gear.

When parking on slopes

- Turn the steering wheel so that the vehicle would roll into the kerb if it did start to move accidentally.

 Always take the key with you when leaving the vehicle – even if you only intend to be gone for a short time. This is especially important if children are left in the car. They might otherwise be able to start the engine, release the parking brake or use poweroperated equipment such as the electric windows - this could lead to injuries.

 Do not leave anyone (especially children) in the vehicle when it is locked. Locked doors could delay assistance in an emergency, potentially putting lives at risk.

Driving away from a standstill

The parking brake auto release function releases the parking brake automatically when you wish to start moving.

Applying the parking brake when stopping

Pull the switch to apply the parking brake.

Releasing the parking brake when driving away

 Drive off in the normal way: the parking brake will be released automatically and the vehicle will start moving.

On vehicles with automatic gearbox, you can apply the parking brake when stopping at traffic lights, etc. Then you do not have to hold the car with the footbrake, as the parking brake will stop it creeping forward while a gear is engaged in the automatic transmission. When you drive off in the normal way, the parking brake will be released automatically and the vehicle will start moving.

Driving away on a slope

When driving away on a gradient, the parking brake auto release function prevents the vehicle from rolling back unintentionally. The **>**

document_0900452a81b1b9de.book Seite 123 Donnerstag, 26. Juli 2007 9:16 09

braking force of the parking brake is only released when there is enough power at the wheels to make the vehicle move in the desired direction.

i Note

For safety reasons the parking brake will only release automatically if the driver's seat belt is engaged in its buckle. ■

Driving away when towing a trailer

Please note the following points to prevent the vehicle from rolling back unintentionally on a gradient.

- Pull and hold the parking brake switch and press the accelerator. The parking brake will remain engaged and prevent any tendency to roll back down the slope.
- You can release the parking brake switch as soon as the engine is delivering enough power to the wheels.

Depending on the weight of the vehicle and trailer and the steepness of the slope, there may be a tendency to roll back downhill when driving away from a standstill. You can prevent this by pulling out the parking brake switch as you press the accelerator (in the same way as with a conventional handbrake).

Emergency braking function

This feature enables you to stop the vehicle if the main brake system should fail or if the pedal is obstructed.

- Pull out and hold the parking brake switch to stop the vehicle with the parking brake in an emergency.
- The brakes will be released immediately if you release the switch or press down the accelerator.

Driving

If you pull out and hold the parking brake switch at a road speed above about 8 km/h, this will initiate an emergency brake application. The brakes are then applied hydraulically at all four wheels. The effect is the same as an emergency stop (full brake application) $\Rightarrow \triangle$

To prevent the emergency braking function from being used accidentally, a warning buzzer sounds when the switch is operated. The brakes are released immediately when you release the switch or press down the accelerator.

You should only use the emergency braking function in a real emergency, for example if the brake system should fail or if the brake pedal is obstructed. If you use the emergency braking function by activating the parking brake switch, the effect is similar to a full brake application (emergency stop). Please remember that the ESP (with its combined ABS, EDL and traction control functions) is still subject to certain physical limits. In a corner or in bad road or weather conditions an emergency stop can cause the vehicle to skid or lose steering control.

Driver messages in the instrument cluster display

 
Caution: Vehicle parked too steep

This message can appear when you apply the parking brake if the car is parked on a gradient steeper than about 30%.

In this case the parking brake **may not be strong enough** to prevent the vehicle from rolling back accidentally.

Please release parking brake

However, please remember that, for safety reasons, the parking brake will only release automatically if the driver's seat belt is buckled.



document_0900452a81b1b9de.book Seite 124 Donnerstag, 26. Juli 2007 9:16 09

Press brake pedal to release parking brake

This message may appear when you press the switch to release the parking brake. The parking brake can only be released, if you depress the brake pedal and simultaneously press the switch or if you use the parking brake auto release function $\Rightarrow page 122$.

Ø Parking brake malfunction !

124

Driving

This message will appear together with the yellow symbol 0 if a malfunction should occur in the parking brake.

Fault in parking brake auto release

This driver message will appear in the event of a malfunction of the parking brake auto release. The automatic release of the parking brake when moving off from a standstill is not functioning correctly. The parking brake must be released manually by pressing the switch. Have the fault rectified by a qualified workshop.■

Applies to vehicles: with Audi hold assist

Audi hold assist

Audi hold assist helps the driver when the vehicle is stationary and automatically prevents the vehicle from rolling away when driving off.





When the Audi hold assist function is on, the vehicle is automatically prevented from rolling away and you no longer have to keep your foot on the brake pedal.

Conditions for switching on Audi hold assist

- The driver's door must be closed.
- The driver's seat belt must be buckled.
- The engine must be running.

Switching on Audi hold assist

 Press button (B)⇒ fig. 133 in the centre console to switch on the Audi hold assist function. The indicator lamp in the switch will light up.

Switching off Audi hold assist

- Press button (B) ⇒ fig. 133 to switch off the Audi hold assist function. The indicator lamp in the switch will go out.
- If you press button (a) while the vehicle is being held by the Audi hold assist function, the electro-mechanical parking brake (2) will automatically take over. The parking brake will not take over if the foot brake is applied simultaneously.
- Audi hold assist is switched off automatically if you open the driver's door, unbuckle the seat belt or switch off the engine. If this happens when the green symbol (P) is displayed in the instrument cluster, the parking brake will be applied automatically to ensure that the vehicle is parked safely.

Audi hold assist helps the driver to keep the vehicle stationary while the engine is running, for instance on steep gradients, at traffic

document_0900452a81b1b9de.book Seite 125 Donnerstag, 26. Juli 2007 9:16 09

lights or in stop-and-go traffic. When the Audi hold assist function is on, you don't have to keep your foot on the brake to prevent the vehicle from accidentally rolling away. Once it detects that the vehicle is stopped, Audi hold assist keeps the vehicle stationary. The green symbol \mathbb{O} in the instrument cluster indicates that the function is activated. You can now take your foot off the brake pedal.

As soon as you drive off in the normal way, the parking brake will automatically be released and the vehicle will start moving.

If the conditions for Audi hold assist change and the function is switched off as a result, the parking brake will be applied automatically to ensure that the vehicle is parked safely. The diode in the button will go out when the Audi hold assist function is switched off.

The intelligent technology in Audi hold assist cannot defy the laws of physics. Do not let the extra convenience provided by Audi hold assist tempt you into taking a safety risk.

• Audi hold assist cannot keep the vehicle stationary in all conditions on a gradient (e.g. if the road is slippery or icy).

 Audi hold assist must be switched on again each time the engine is started – Risk of accident!

• Never get out of the vehicle when the engine is running and

Audi hold assist is switched on – Risk of accident! • Always ensure that the vehicle is stopped properly and safely

to avoid injury to yourself and others.

U Caution

Switch off the Audi hold assist function before driving the vehicle into a car wash.

i Note

 Audi hold assist can be switched on only when the driver's door is closed, the driver's seat belt is buckled and the engine is running.

• Audi hold assist prevents automatic vehicles from creeping forwards when the brake pedal is released with the car in gear.

• When the vehicle has been stationary for an extended period, Audi hold assist will automatically apply the parking brake. In this case, the green symbol ([®]) in the instrument cluster display will change to red ([®]).

Cruise control system

Applies to vehicles: with cruise control system


Switching on

The cruise control system allows you to drive at a constant speed of 30 km/h or higher.



Fig. 134 Control lever and pushbutton

 Driving





- Pull the lever (A) to position (1) \Rightarrow page 125, fig. 134 to switch on the system.
- Drive at the speed you wish to set the system to.
- Press the button marked (B) to store the speed.

The display will indicate the stored speed, and the green symbol \mathcal{O}° will appear \Rightarrow fig. 135. The display can vary according to the display status. In addition, the indicator lamp \mathcal{O}° in the instrument cluster will light up.

A constant speed is maintained by adjusting the engine power or braking the vehicle accordingly.

 Always direct your full attention to the road, even when you are using the cruise control system. It is always the driver who is responsible for determining the speed and for keeping a safe distance to the other vehicles on the road.

 For safety reasons, the cruise control system must not be used in city traffic, stop-and-go traffic, roads with a lot of bends or in difficult driving conditions (such as ice, fog, loose grit or gravel, heavy rain, aquaplaning) - this could cause an accident!

MARNING (continued)

 When you take a turn-off, drive along a motorway exit lane or pass through roadwork sections, please temporarily switch off the cruise control system.

• Please make sure you do not unintentionally rest your foot on the accelerator - this will override the cruise control system which, as a result, will not brake the vehicle.

i Note

 Vehicles with manual gearbox: The set speed cannot be reached if the currently selected gear is too high or too low. Change down to a lower gear if the engine is no longer running smoothly or change up a gear to avoid overrewing the engine.

• The brake lights come on when the system brakes the vehicle.

Applies to vehicles: with cruise control system Adjusting the speed

- Push the lever (A) up towards (→) or down towards (→)
 ⇒ page 125, fig. 134 in order to increase or reduce the cruising speed setting.
- Release the lever to store the current cruising speed.

You can alter the set speed in steps of 1 km/h by briefly pressing the lever upwards or downwards. When you press and hold the lever, the speed is changed in steps of 10 km/h.

You can still use the accelerator pedal to increase speed in the normal way, for example to overtake another vehicle. Once you release the accelerator, the system will revert to the speed you stored initially.

However, if the vehicle exceeds the programmed speed by more than 10 km/h for more than 5 minutes, the cruise control system will ▶

document_0900452a81b1b9de.book Seite 127 Donnerstag, 26. Juli 2007 9:16 09

be deactivated temporarily. The green symbol in the display will change to white but the stored speed will be retained. \blacksquare

Applies to vehicles: with cruise control system

Pre-selecting a speed

You can pre-select a desired speed while the vehicle is stationary.

- Switch on the ignition.
- Pull the lever (A) to position 1 \Rightarrow page 125, fig. 134.
- Push the lever up towards (-) or down towards (-) in
- order to increase or reduce the cruising speed setting. - Release the lever to store the cruising speed setting
- displayed.

This function allows you to enter the desired cruise control setting speed ahead of time, for example before joining a motorway. Once you are on the motorway, you can activate the cruise control system by pulling the lever to position ().

Applies to vehicles: with cruise control system

Switching off the cruise control system

Switching off temporarily

- Press the brake pedal, or
- Manual gearbox: Press the clutch pedal for a *relatively* long period, or
- Push lever (a) to position (2) (click stop not engaged) \Rightarrow page 125, fig. 134, or

- Drive more than 10 km/h faster than the stored speed over a period of more than 5 minutes.

Driving

Switching off completely

- Press the lever (A) to position (2) (click stop engaged), or
- Switch off the ignition.

The speed setting will remain stored after the system is temporarily deactivated. To resume the programmed cruising speed, release the clutch or brake pedal and pull the lever to position (1).

The stored speed will be deleted once the ignition is switched off.

Do not resume the programmed cruising speed if this is too high for the traffic conditions - this can cause accidents.

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
	.		—	•			

document_0900452a81b1b9de.book Seite 128 Donnerstag, 26. Juli 2007 9:16 09

adaptive cruise control (ACC)

adaptive cruise control (ACC)

Speed and distance control system

Applies to vehicles: with adaptive cruise control

Description

۲

128

The adaptive cruise control is a combined speed and distance control system to assist the driver.



Fig. 136 Trim grille (front right): Position of radar sensor

Adaptive cruise control allows you to maintain any desired constant speed between 30 and 200 km/h. In addition, the system controls the distance maintained to the vehicle in front (subject to certain limitations as described below).

The system can be used to greatest effect on long motorway journeys or on other main roads with long straight sections.

How is the system operated?

The adaptive cruise control system is operated via a control lever on the steering wheel \Rightarrow page 131, "Setting the speed" and \Rightarrow page 133, "Setting the distance".

Driver messages

When the system is being used, important information is displayed in the speedometer and on the instrument cluster display screen \Rightarrow page 134, "Driver messages".

Please note the following points:

The adaptive cruise control has certain limits determined by the system itself. This means that the driver may in some situations have to intervene and control the speed and distance to the vehicle in front hinself \Rightarrow page 138, "Driver intervention prompt" and \Rightarrow page 140, "System limitations".

Please always direct your full attention to the road, even when you are using adaptive cruise control. It is always the driver who is responsible for determining the speed and for keeping a safe distance to the other vehicles on the road.

 For safety reasons, the adaptive cruise control must not be used in city traffic, stop-go traffic, roads with a lot of bends or in difficult driving conditions (such as ice, fog, loose grit or gravel, heavy rain, aquaplaning) - this could cause an accident!

 When you take a turn-off, drive along a motorway exit lane or pass through roadwork sections, please temporarily switch off the adaptive cruise control in order to avoid the vehicle accelerating to the selected speed.

 The adaptive cruise control can only control the distance to vehicles in front. As a rule, it cannot recognize vehicles travelling in other lanes. For this reason, please temporarily switch off the system if you are travelling in the inside lane and vehicles in the overtaking lane are travelling at a slower speed than you are.
 Otherwise, you would overtake these vehicles on the inside.



document_0900452a81b1b9de.book Seite 129 Donnerstag, 26. Juli 2007 9:16 09

WARNING (continued)

Adaptive cruise control will not react when approaching a stationary obstacle, e.g. the end of a traffic jam or a broken-down vehicle, or if a vehicle should come towards you in the same lane.
 Please make sure you do not unintentionally rest your foot on the accelerator - this will override the adaptive cruise control system which, as a result, will not automatically brake the vehicle.

i Note

• For safety reasons, the speed setting will be deleted when the ignition is switched off.

 Switching on the adaptive cruise control automatically activates the Electronic Stabilisation Program (ESP) and the traction control system (ASR). These two systems cannot be deactivated while the adaptive cruise control is switched on.

• Damage caused by impacts (e.g. if the vehicle is damaged when parking) can affect the radar sensor settings. This can cause the system to malfunction or switch off completely.

 The radar sensor is heated. However, in winter conditions, you should make sure that the radar sensor is free of ice and snow before you set off. If necessary, carefully clean the cover of the radar sensor and the surrounding area *⇒* page 128, fig. 136.

 To make sure that the radar sensor is fully operative, do not attach any objects (e.g. stickers, add-on parts or other accessories) to the area surrounding the radar sensor. Do not paint the area surrounding the radar sensor. adaptive cruise control (ACC)

29 🔶

Applies to vehicles: with adaptive cruise control and manual gearbox Vehicles with manual gearbox

The driver of a vehicle with a manual gearbox of course has to change gears as appropriate, even when the adaptive cruise control is activated.

The **adaptive cruise control** is available from the **second** to the **sixth** gear (when driven in normal engine speed range).

When the adaptive cruise control is activated, the driver must press the clutch pedal as normal in order to change gear. When changing gear or pressing the clutch pedal (for up to 20 seconds), the adaptive cruise control will remain activated.

 
When changing gear, the driver does **not** have to accelerate after engaging a gear as the engine torque will be coordinated by the adaptive cruise control.

The following situations may lead to an **automatic deactivation** of the **adaptive cruise control**:

- pressing the clutch pedal too long (longer than approx.
 20 seconds)
- incorrect changing of gears and/or use of the clutch pedal

i Note

 The adaptive cruise control cannot be activated while changing gears.



document_0900452a81b1b9de.book Seite 130 Donnerstag, 26. Juli 2007 9:16 09

adaptive cruise control (ACC)

Applies to vehicles: with adaptive cruise control

130

How does the distance control work?

Vehicles in front are detected by a radar sensor.

 


Fig. 137 Area covered

The adaptive cruise control uses a radar sensor \Rightarrow fig. 137 which is integrated in the front of the vehicle and is subject to certain system limitations $\Rightarrow page 140$. Stationary volpects are disregarded. The system requires reflecting surfaces in order to be able to measure the distance. If the ACC is unable to measure the distance it will not respond.

No vehicle in front

When there is no vehicle in front, the adaptive cruise control works like a speed control system. It maintains a constant target speed specified by the driver.

Vehicle in front

If you catch up with a vehicle driving in front, the adaptive cruise control will reduce the speed accordingly (within the limits set by the system $\Rightarrow page$ 138, "Driver intervention prompt" and $\Rightarrow page$ 140, "System limitations") and adapt it to the speed of the vehicle in front. Then the system will try to adjust the distance to the car in front according to the settings selected. During the adjust-ment process the system may temporarily not be able to adhere to the distance you had specified $\Rightarrow \Delta$ in "Description" on page 128.

If the vehicle in front accelerates, the adaptive cruise control will also accelerate, up to the target speed you have specified.

Driver intervention prompt

In some situations, it is necessary for the driver to brake the vehicle with the foot brake in order to keep a safe distance to the vehicle in front or to avoid a collision. In this case, a warning message will appear in the display and you will also hear a warning tone \Rightarrow page 138.

When overtaking

When you move into the overtaking lane and no vehicle is detected in front, the adaptive cruise control will accelerate up to the target speed and then maintain it.

Overriding

You can still use the accelerator pedal at any time to increase speed in the normal way. The previously programmed speed will be resumed when the accelerator pedal is released.

i Note

 Please note that acceleration will vary depending on the preset programme. If you have, for example, selected "Distance 1" and the driving programme "dynamic", acceleration will be more "sporty".
 However, if you have set the system to "Distance 4" and driving programme "comfort", acceleration will be more gradual. For a detailed description please refer to ⇒ page 133, "Setting the distance".

• No vehicle in front, Vehicle in front and a Driver intervention prompt will be indicated by an indicator lamp \Rightarrow page 134, "Indicator lamp and display in the speedometer".

document_0900452a81b1b9de.book Seite 131 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with adaptive cruise control Switching the system on and off



Fig. 138 Control lever for: Switching the system on and off

> Fig. 139 Control lever for: Setting speed

- Pull the control lever to position (1) \Rightarrow fig. 138 to switch on the system.
- Press the control lever to position ② (click stop engaged) to switch the system off. ■

Applies to vehicles: with adaptive cruise control **Setting the speed**



Important: The system must be switched on.

adaptive cruise control (ACC)

d must be in the

131

- Drive at the desired speed. The speed must be in the range between 30 and 200 km/h.
- Press the \fbox{SET} button -arrow- \Rightarrow fig. 139 to confirm the target speed you wish to store.

When the $\underline{(\text{SET})}$ button is released, the current speed is stored in the memory and the vehicle will then maintain this speed.

One or two red diodes will light up in the speedometer dial \Rightarrow page 134 to mark the speed which is currently stored in the system. At the same time, the speed will briefly be displayed in the system status indicator \Rightarrow page 136.

i Note

For safety reasons, the speed setting will be deleted when the ignition is switched off. \blacksquare


Applies to vehicles: with adaptive cruise control

Setting a new speed

The speed can be altered without touching the accelerator or the brake.



 Fig. 140 Control lever for: Setting a new speed



document_0900452a81b1b9de.book Seite 132 Donnerstag, 26. Juli 2007 9:16 09

adaptive cruise control (ACC)

Setting a higher speed

132

- Briefly move the control lever up towards (→) ⇒ fig. 140. The speed will be incremented by one graduation on the scale in the speedometer.
- Press the control lever up towards

 and hold it in this position. The speed setting is indicated by the diodes in the speedometer; the speed will be increased accordingly.

Setting a lower speed

- Briefly move the control lever down towards ①. The speed will be reduced by one graduation on the scale in the speedometer.
- Press the control lever down towards () and hold it in this position. The speed setting is indicated by the diodes in the speedometer; the speed will be reduced accordingly.

After releasing the control lever, the system will adapt your speed to the setting you have selected.

Following any changes, the new stored speed will be displayed briefly in the system status indicator \Rightarrow page 136.

i Note

You can still use the accelerator pedal at any time to increase speed in the normal way. The previously programmed speed will be resumed when the accelerator pedal is released. You can set a new speed at any time by pressing the SET button \Rightarrow page 131, fig. 138.

Applies to vehicles: with adaptive cruise control Switching off the system (with speed memory function) and reactivating it

In some situations it makes sense to switch off the system.



Fig. 141 Control lever for: Switching off the system (with speed memory function) and reactivating it

Switching off the system (with speed memory function)

- Press the brake pedal, or
- Press the control lever in direction (2) \Rightarrow fig. 141.

Reactivating the system

- Release the brake pedal and pull the lever in direction (1).

It is dangerous to resume a set speed which is too high for the current road, traffic or weather conditions - risk of accident.

 
🚺 Note

When switching off the system (with speed memory function) the speed stored at this point remains in the memory. \blacksquare

document_0900452a81b1b9de.book Seite 133 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with adaptive cruise control **Setting the distance**

The distance can be set in 4 different stages.



- Fig. 142 Control lever for: Setting the distance
- Briefly press the sliding switch ⇒ fig. 142 once towards
 (→ or ()). The display in the instrument cluster will briefly show the current distance setting.
- Press the sliding switch again towards ↔ or ⊙ to increase or reduce the distance by one level at a time.

Choosing the distance

The adaptive cruise control system determines the distance to the vehicle in front by **time intervals**. It defines a time-based distance to the vehicle in front which is kept at a constant level. This converts to a distance which depends on the speed - the higher the safety distance in metres $\Rightarrow \Delta$.

The actual distance maintained by the adaptive cruise control can be longer or shorter, depending on the traffic situation and the driving style of the driver in front.

Distance 1 ക_ക___

This setting is suitable for brisk driving in a line of traffic. The time interval is 1 second. This is equivalent to (for instance):

• A distance of 14 metres at a speed of 50 km/h

adaptive cruise control (ACC)

A distance of 36 metres at a speed of 130 km/h

Distance 2 🗠__

This setting is suitable for relaxed "moving with the flow" in a line of traffic. The time interval is 1.3 seconds. This is equivalent to (for

- instance):
- A distance of 18 metres at a speed of 50 km/h
- A distance of 47 metres at a speed of 130 km/h

Distance 3

This (recommended) setting is suitable for relaxed "moving with the flow" in a line of traffic. The time interval is 1.8 seconds. This is equivalent to (for instance):

- A distance of 25 metres at a speed of 50 km/h
- A distance of 65 metres at a speed of 130 km/h

Distance 4

This setting is suitable for single-carriageway roads. The time interval is 2.3 seconds. This is equivalent to (for instance):

- A distance of 32 metres at a speed of 50 km/h
- A distance of 83 metres at a speed of 130 km/h

You can control the acceleration and braking response of your vehicle in adaptive cruise control mode by adjusting the settings on the sound system or MMI* \Rightarrow *page* 139. Depending on the driving program and distance selected, acceleration and braking response will range from dynamic (1) to relaxed (5).

Driving pro- gram	dynamic	standard	comfort
Distance 1	1	2	3
Distance 2	2	3	4
Distance 3	2	3	4
Distance 4	3	4	5

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
) 			<u>) </u>			

document_0900452a81b1b9de.book Seite 134 Donnerstag, 26. Juli 2007 9:16 09

adaptive cruise control (ACC)

۲

134

When setting the distance, the driver is responsible for adhering to the laws and regulations which apply in the country he is travelling in.

Driver messages

Applies to vehicles: with adaptive cruise control

Messages in the instrument cluster

The instrument cluster displays various driver messages.



- Fig. 143 Overview of instrument cluster
- (A) Indicator lamp and speedometer display
- (B) Instrument cluster display
- © System status indicator

(A) Indicator lamp and speedometer display

Section (a) of the display shows important information regarding the use of the adaptive cruise control system. The target speed you have set is marked by diodes in the speedometer.

The indicator lamp shows whether the system has detected a vehicle in front.

(B) Instrument cluster display

 
You can call up the display for the adaptive cruise control by repeatedly pressing the (RESET) button on the windscreen wiper lever. For more details refer to \Rightarrow page 27.

© System status indicator

The information in section (c) of the display is not shown permanently. It only appears if you, for example, set or change the speed setting, change the time interval, when messages are displayed, or if the adaptive cruise control is switched off for safety reasons.

Applies to vehicles: with adaptive cruise control

Indicator lamp and display in the speedometer





document_0900452a81b1b9de.book Seite 135 Donnerstag, 26. Juli 2007 9:16 09

Target speed

The target speed set by the driver is indicated by a red diode in the speedometer.

If the speed setting is between two graduations on the speedometer dial, the two closest diodes will both light up \Rightarrow fig. 143.

It is only possible to set target speeds ranging from 30 to 200 km/h. This speed range is illuminated slightly by the diodes on the speed-ometer dial.

Indicator lamp (symbol)

 (a) No vehicle in front: The green indicator lamp (a) ⇒ page 134, fig. 144 shows that the adaptive cruise control system is in cruise mode and that there is no vehicle in front. It maintains the stored target speed.

• (a) Vehicle in front: The green indicator lamp (b) shows that the system has detected a vehicle in front. The speed is adapted to the vehicle in front. The adaptive cruise control system accelerates and brakes the vehicle automatically.

• ⓒ Driver intervention prompt: When the red indicator lamp flashes ⓒ, this is a warning for the driver to intervene. The driver has to brake the vehicle with the foot brake. This warning lamp will always appear when the adaptive cruise control system alone is not able to brake the vehicle sufficiently to maintain a safe distance to a vehicle in front. An audible alarm (warning tone) will also sound when the lamp starts to flash. For further information on the driver intervention prompt \Rightarrow *page* 138.

i Note

 If you exceed the target speed by using the accelerator, the driver intervention prompt will not be accompanied by a warning tone. The indicator lamp shown in the speedometer will also switch off if the target speed is exceeded.

• You can change the volume of the warning tone on the sound system or MMI* \Rightarrow page 139, "Setting the warning tone volume and driving program".

adaptive cruise control (ACC)

Applies to vehicles: with adaptive cruise control Instrument cluster display

 


Fig. 145 Instrument cluster: Display

Repeatedly press the (RESET) button on the windscreen wiper lever to select whether you wish to display information regarding the onboard computer, the navigation system* or the adaptive cruise control in this section of the display screen.

A Vehicle image

- B Distance
- © System status

(A) Vehicle image

The vehicle image will show you whether the system has detected a vehicle in front.

• Vehicle outlined: No vehicle in front

- Vehicle in white: A vehicle in front has been detected
- Vehicle in red: Driver intervention prompt

B Distance

be shown.

The arrows and scale indicate the distance to the vehicle in front.

• No vehicle in front: If there is no vehicle in front, no arrows will

 Controls
 Safety
 Driving tips
 General maintenance
 Self-help
 Technical data

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Safety
 Driving tips
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Safety
 Driving tips
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

document_0900452a81b1b9de.book Seite 136 Donnerstag, 26. Juli 2007 9:16 09

adaptive cruise control (ACC)

• Vehicle in front: If a vehicle is detected in front, the arrows will be on the scale. The green area of the scale represents the distance setting. If you approach the vehicle in front slowly, the arrows will move from the grey area into the green area of the scale.

• Driver intervention prompt: If you approach the vehicle in front quickly, the arrows act as a warning. When the actual distance is shorter (or is likely to become shorter) than the distance selected, the arrows move into the red area of the scale. In certain situations, you may need to intervene as the driver \Rightarrow page 138, "Driver intervention prompt".

© Status

۲

136

• ACC OFF (in white letters): The adaptive cruise control is switched off.

• ACC AVAILABLE (in white letters): The system is switched on but the control has not yet been activated.

• OVERRIDE (in white letters): You have exceeded the target speed by accelerating.

• DISTANCE! (in red letters): The distance to the vehicle in front is not sufficient and you have to brake the vehicle with the foot brake.

• DISTANCE 1 to DISTANCE 4 (in green letters): Shows the time interval you have selected. The adaptive cruise control is in cruise mode.

• DISTANCE 1 - dyn., DISTANCE 1 - comf. etc. (in green letters): If the settings are adjusted on the sound system or MMI* such that the "standard" driving program is replaced by "comfort" or "dynamic", the message above will indicate the setting.

Applies to vehicles: with adaptive cruise control System status indicator in the instrument cluster display

The text messages and symbols in this section of the display are not shown permanently.



Time intervals (e.g. ⇔____⇔)

Fig. 146 Instrument cluster: Further infor-

ation

The various symbols for the **time intervals** -arrow- \Rightarrow fig. 146 appear when you change the settings.

A

The symbol ${\it H}$ indicates that the warning tone has been switched off.

The text message ... (three white dots) appears if a setting made with the control lever cannot be implemented. There can be several reasons for this:

• You have pulled the control lever towards you to resume the programmed cruising speed, without a target speed having been set.

• The control lever has been pushed up / down to increase / reduce the speed, without a target speed having been set.

document_0900452a81b1b9de.book Seite 137 Donnerstag, 26. Juli 2007 9:16 09

• The control lever has been pushed up / down to increase / reduce the speed, but the resulting speed would be outside the range of 30 to 200 km/h.

ACC deactivation

The message ACC deactivation sometimes appears on vehicles with a manual gearbox. If you press the clutch pedal for longer than about 20 seconds, the adaptive cruise control will be automatically deactivated and a warning tone will sound.

ACC not available

The text message **ACC not available** will appear if, for example, the brakes are overheated. The adaptive cruise control will then temporarily not be available. This is indicated by a warning tone.

ACC not available!

The text message **ACC not available!** appears if a malfunction should occur. The adaptive cruise control will then be switched off. This is indicated by a warning tone. Have the system checked by a qualified workshop.

ACC sensor blocked!

The text message ACC sensor blocked! appears if the ACC system can no longer detect objects reliably. The adaptive cruise control will then be switched off. This is indicated by a warning tone.

The ACC sensor is obstructed by dirt or foreign objects (e.g. leaves or snow). Clean the sensor to restore the function \Rightarrow *page 128*, fig. 136.

Engine speed !

On vehicles with manual gearbox, the text message **Engine speed** ! will appear if the driver does not change gear in time when the adaptive cruise control accelerates or brakes the vehicle. The adaptive cruise control will automatically be deactivated if the engine speed is not maintained within the permissible range. This is indicated by a warning tone.

adaptive cruise control (ACC)

ESP activation

The text message **ESP activation** appears if the Electronic Stabilisation Programme (ESP) has intervened. In this case, the adaptive cruise control will automatically be switched off. This is indicated by a warning tone.

Speed (in km/h)

The target speed (in km/h) will appear in the display whenever it is stored or changed \Rightarrow page 131, "Setting the speed" and \Rightarrow page 131, "Setting a new speed".

Speed range

The text message **speed range** appears if the current speed is too low **to set** or **to maintain** the target speed.

To set a target speed, the speed of the vehicle must be at least 30 km/h. The cruise control system switches off if the speed falls below 20 km/h.

 
If the speed exceeds 200 km/h (OVERRIDE), the system will remain active and will reduce the speed to 200 km/h once the driver stops accelerating.

ACC functionality limited

The text message **ACC functionality limited** appears if the ACC system does not detect any objects for an extended period. The distance to vehicles in front is not being controlled while the message is displayed. The ACC system is not deactivated, and so extra care should be taken! The text message **ACC functionality limited** can appear for the following reasons:

• The ACC sensor is dirty. The ACC system is not responding or is not responding correctly to the vehicles in front!

 You may be driving on a country road with no traffic and no clear roadside demarcation (e.g. safety barriers, traffic signs, trees). As soon as the system detects a vehicle, distance control is resumed and the text message disappears.



document_0900452a81b1b9de.book Seite 138 Donnerstag, 26. Juli 2007 9:16 09

adaptive cruise control (ACC)

The ACC sensor is located inside the trim grille (front right) \Rightarrow page 128, fig. 136. If the sensor is no longer functioning due to dirt or obstruction in this area, it should be cleaned.

Parking brake !

•

138

The text message Parking brake ! appears if the parking brake is operated. The adaptive cruise control will then be switched off. This is indicated by a warning tone.

Gear lever position !

On vehicles with manual gearbox the text message Gear lever **position** ! appears when no valid forward gear is selected, i.e. reverse gear or 1st gear is engaged or the gear lever is in the neutral position. Adaptive cruise control is not available when the lever is in these positions.

Shift lever position!

On vehicles with automatic gearbox the text message Shift lever $\ensuremath{\textit{position}}$! appears if the shift lever is moved to position $\ensuremath{\mathbf{N}}$. Adaptive cruise control is not available when the lever is in this position.

Applies to vehicles: with adaptive cruise control **Driver intervention prompt**

The driver intervention prompt is a warning for the driver to reduce speed manually.



Fig. 147 Instrument cluster: Driver intervention prompt

In some situations the adaptive cruise control system alone is not able to brake the vehicle sufficiently to maintain a safe distance to the vehicle in front. The adaptive cruise control system will then call on you as the driver to take control of the situation yourself.

The Driver intervention prompt provides both a visual and an acoustic warning.

- A red vehicle symbol will appear in the instrument cluster
- display \Rightarrow fig. 147.
- The system status indicator will show DISTANCE!.
- The red warning lamp will start to flash.

document_0900452a81b1b9de.book Seite 139 Donnerstag, 26. Juli 2007 9:16 09

• An acoustic warning will also sound (unless it has been deactivated in the sound system or MMI* settings).

i Note

 Pressing the brake pedal will switch off the adaptive cruise control system. The speed set at that point will, however, remain stored until the adaptive cruise control is activated again.

• To resume the programmed cruising speed, release the brake pedal and pull the control lever towards you \Rightarrow page 132, "Switching off the system (with speed memory function) and reactivating it".

 If you exceed the target speed by pressing the accelerator, the driver intervention prompt will not be accompanied by a warning tone. The indicator lamp shown in the display will also switch off when the target speed is exceeded.

• If the adaptive cruise control triggers a braking operation the hydraulic brake system is under pressure. This is why brake pedal travel will be shorter and the pedal will feel "harder".

adaptive cruise control (ACC)

Applies to vehicles: with adaptive cruise control

Setting the warning tone volume and driving program

You can change the adaptive cruise control settings on the sound system or MMI* to suit your individual driving style.



Fig. 148 Display: adaptive cruise control

Select: Function selector button CAR > adaptive cruise control.

 
Setting the volume of the warning tone

If the adaptive cruise control system switches off (e.g. when the ESP intervenes) or a driver intervention prompt appears, a warning tone will sound.

You can set the volume of the warning tone to **low, medium**, or **high**. The new volume will sound briefly after making any adjustment. If you do not want a tone to sound, select **off**.

Adjusting the basic settings

You can set the distance (time interval) you want the adaptive cruise control system to keep to the vehicle in front by selecting **distance** 1, **distance 2**, **distance 3** or **distance 4**.



document_0900452a81b1b9de.book Seite 140 Donnerstag, 26. Juli 2007 9:16 09

adaptive cruise control (ACC)

Setting the driving program

In the Driving program menu you can select either dynamic, standard or comfort according to your personal preferences.

i Note

140

• We recommend you to leave the warning tone switched on. Even when the warning tone is switched off, not every warning tone will be deactivated.

• When you pass the key on to somebody else please remember to make the other driver aware of the ACC settings.

• We recommend a minimum distance setting of **DISTANCE 3** (factory default setting).

 When the ignition is switched off, the distance setting reverts to the factory default DISTANCE 3. A qualified workshop can cancel this function. In this case a default distance setting defined on the sound system or MMI* is applied each time the engine is started.

System limitations

Applies to vehicles: with adaptive cruise control

General notes

The following situations could impair the function of the radar sensor.

The adaptive cruise control is subject to given physical limits and also has certain limits determined by the system itself. Under certain circumstances the driver may feel that the ACC system is responding unexpectedly or belatedly. For this reason, please always give your full attention to road traffic and if necessary take action yourself:

- When driving through bends \Rightarrow page 140.
- When vehicles in front are not in line with your vehicle ⇒ page 141.

- When other vehicles change lanes \Rightarrow page 141.
- When other vehicles are not clearly discernible \Rightarrow page 141
- When vehicles are stationary \Rightarrow page 142.

The radar sensor's "field of vision" can be impaired by rain, snow or a lot of water on the road. This results in vehicles in front not being properly recognised or, in some circumstances, not being detected at all. If necessary, take action yourself!

Applies to vehicles: with adaptive cruise control

 


Fig. 149 Driving into a bend

 


Fig. 150 Driving out of a bend

document_0900452a81b1b9de.book Seite 141 Donnerstag, 26. Juli 2007 9:16 09

 
Driving into a bend

When you are driving into a bend, the ACC system may react to a vehicle travelling in the other lane and therefore brake the vehicle \Rightarrow page 140, fig. 149. You can override the braking effect by pressing the accelerator.

Driving out of a bend

When you are driving out of a long bend, the ACC system may - in the course of its calculation of the lane ahead - react to a vehicle travelling in the other lane and therefore brake the vehicle \Rightarrow page 140, fig. 150. You can override the braking effect by pressing the accelerator.






Vehicles in front which are not in line with your vehicle cannot be detected by the ACC system until they are within the range of the sensor. \blacksquare

adaptive cruise control (ACC)

Applies to vehicles: with adaptive cruise control

 Other vehicles changing lanes



```
Fig. 152 A vehicle is 
changing lanes
```

141

Vehicles which are very close to you when they move onto your lane cannot be detected by the radar sensor until they move into its range. \blacksquare

Applies to vehicles: with adaptive cruise control Not clearly discernible vehicles

 


Fig. 153 Motorcycle in

1

Vehicles that are not clearly discernible, e.g. a motorcycle travelling in front of you and vehicles with a large amount of ground clearance or protruding freight, are often identified late or may not be detected at all.

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
			—) —			

T

document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09 document_0900452a81b1b9de.book Seite 142 Donnerstag, 26. Juli 2007 9:16 09


 


Fig. 154 Vehicle turning off and vehicle stationary

 

If a vehicle detected by the ACC system turns off or changes lane and another stationary vehicle is located in front of that vehicle, the ACC system will not react to the stationary vehicle \Rightarrow fig. 155.

Audi braking guard

Applies to vehicles: with adaptive cruise control

Description

Audi braking guard warns you in case of an impending collision with a vehicle in front.



Fig. 156 Instrument cluster: Display

Audi braking guard is active at speeds above approximately 30 km/h and operates within the system limitations \Rightarrow page 140 even when the adaptive cruise control is deactivated.

The radar sensor is fitted at the front of the vehicle \Rightarrow *page 130*, fig. 137. The system requires reflecting surfaces in order to be able to measure the distance. If the ACC is unable to measure the distance it will not respond.

Once the system has measured the distance, it can assess a dangerous situation where a vehicle in front brakes suddenly or you are driving fast and approach a vehicle travelling at a much slower speed. The system warns you as soon as it anticipates that a potential collision with the vehicle in front can only be avoided by hard braking or by taking evasive action.

The system has a preset response time so that it can warn you in time. In certain situations, the system response time will be reduced dynamically, e.g. when you are accelerating onto a motorway. Braking, lateral acceleration and steering angle are other factors



document_0900452a81b1b9de.book Seite 143 Donnerstag, 26. Juli 2007 9:16 09

which can shorten the system response time. The warning will be deactivated if you press the accelerator pedal right down in order to overtake.

The system draws the driver's attention to two different hazardous situations:

Distance !

A distance warning will be given if you travel too close to the vehicle in front for longer than 5 seconds. For example, if the distance is less than 9 m at 80 km/h, a message will appear in the instrument cluster display \Rightarrow *page 142*, fig. 156.

If the vehicle in front were to brake hard, a collision would no longer be avoidable, even if you reacted immediately. In this case, you should leave more room between your car and the vehicle in front.

Speed

If the vehicle in front of you is travelling in the same lane at a much slower speed or if it brakes hard, the Audi braking guard will calculate the time at which a collision can be avoided only by emergency braking or evasive action. When the system warns you, it is possible to avoid a potential collision with the vehicle in front by braking or changing lane. There are two warning levels:

• Early warning: A message will appear in the instrument cluster display and you will also hear a warning tone.

• Acute warning: The second (acute) warning will be triggered if you do not react to the advance warning. There will automatically be a short dab of the brakes to remind you to concentrate on the traffic.

If you brake hard, the brake assist system \Rightarrow page 222 helps you to achieve the optimum braking effect.

Please always direct your full attention to the road, even when the Audi braking guard is activated. It is always you who is responsible

adaptive cruise control (ACC)

MARNING (continued)

for determining your speed and for keeping a safe distance to the other vehicles on the road.

• Always maintain the statutory minimum safety distance to the vehicle in front (risk of accident).

 Due to the system limitations, the Audi braking guard will not react in certain situations, for example when approaching a stationary obstacle (such as the end of a traffic jam or a brokendown vehicle).

 Please note that the Audi braking guard is subject to limitations in tight bends on account of the radar sensor's field of vision.
 This means that obstacles may not be detected in certain situations.

 The radar sensor's "field of vision" can be impaired by rain, snow or a lot of water on the road. This results in vehicles not being reliably recognised or, in some circumstances, not being detected at all. Always keep the road ahead within your field of vision.

• Reflecting objects, such as crash barriers or the entrance to a tunnel, could impair the function of the radar sensor.

Applies to vehicles: with adaptive cruise control


Status messages in the instrument cluster display

braking guard brake jolt

This driver message appears when the brakes are dabbed due to an acute warning.

braking guard off

This driver message appears when the system is switched off in the MMI. The message also appears briefly after you begin driving if the system is switched off.

 

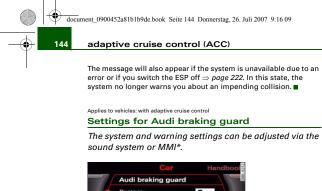




Fig. 157 Display: Audi braking guard

Select: Function selector button (CAR) > Audi braking guard.

• System - The Audi braking guard system can be switched on and off.

• Early warning - The acoustic signals and display messages can be switched on and off.

i Note

The settings are stored on the remote control key in use. When you pass the key on to somebody else please remember to make the other driver aware of the Audi braking guard settings \Rightarrow page 43.

document_0900452a81b1b9de.book Seite 145 Donnerstag, 26. Juli 2007 9:16 09

Audi lane assist

Audi lane assist

Applies to vehicles: with lane assist

Description

The lane assist system assists the driver in keeping the vehicle in the right lane.

The system uses a camera to detect the markings of the lane you are driving in. If the vehicle approaches one of the detected lane markings, the steering wheel *vibrates* to warn the driver that the vehicle might be about to cross one of the markings. The lane assist system is functional when it has detected lane markings on both sides of the lane you are driving in. The green lamp /!\` in the instrument cluster indicates that the function is activated and fully functional.

If you operate the turn signal before crossing one of the lane markings (while the lane assist system is functional), the system will detect that the lane change is intended and will not warn the driver.

As the system is designed for driving on motorways and other major roads, it is only active above a speed of about 65 km/h.

WARNING

 The lane assist system does not keep the vehicle in its lane. It merely warns the driver when the vehicle is in danger of crossing the markings of the lane. As the driver you are always responsible for staying in your own lane.

 The camera cannot detect all lane markings. Therefore it is possible that variations in the road surface or objects might be detected as lane markings, which can lead to false warnings, or warnings not being given.

• The camera's view might be obstructed, for example by vehicles travelling in front, rain, snow, a lot of water on the road or

MARNING (continued)

adverse light. This can result in the system not detecting the lane markings correctly.

Applies to vehicles: with lane assist Switching on and off



Fig. 158 Turn signal lever: Pushbutton for Audi lane assist

Audi lane assist



Fig. 159 Windscreen: Camera window for Audi lane assist

1

 Press the button ⇒ fig. 158 -arrow- to switch the system on and off. The indicator lamp /i\ in the instrument cluster will light up or go out.

-•	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
0) —			

1

document_0900452a81b1b9de.book Seite 146 Donnerstag, 26. Juli 2007 9:16 09

Audi l<u>ane assist</u>

۲

146

Indicator lamp in instrument cluster

/:\ Active: The green indicator lamp confirms that the system is fully functional. You will be warned if you are about to cross the lane markings detected by the system.

/i\ Inactive: The yellow warning lamp indicates that the system is switched on. However, you will not be warned if you cross the lane markings. This can have the following causes:

- There is only one or no lane marking.
- The system cannot detect the lane markings (e.g. due to snow, dirt, wet conditions or adverse light).
- There are more than two lane markings in the lane you are driving in (e.g. in roadwork sections).
- The vehicle's speed is below 65 km/h, the speed at which the lane assist system is activated.
- The lane is narrower than 2.5 m or wider than 5 m.
- The bend is too tight.

I Note

- Make sure that the camera window \Rightarrow page 145, fig. 159 is not covered with stickers or similar objects.
- Always keep the camera window clean. Usually it should suffice to operate the windscreen wipers. ■

Applies to vehicles: with lane assist and on-board computer

Instrument cluster display



Fig. 160 Instrument cluster: lane assist switched on and in warning mode



Fig. 161 Instrument cluster: lane assist switched on but not ready for warning

You can call up the display for the lane assist by repeatedly pressing the (RESET) button on the windscreen wiper lever. For more details refer to \Rightarrow page 27.

When the lane assist is switched on, two lines indicate the lane demarcations on the left and right of your vehicle.

Version (A): Monochrome display

- Solid red lines: The lane assist is switched on and ready to warn.
- One red line flashing (left or right): The lane assist warns you before you cross the lane demarcation \Rightarrow fig. 160, A

document_0900452a81b1b9de.book Seite 147 Donnerstag, 26. Juli 2007 9:16 09

• Unfilled lines: The lane assist is switched on but not ready for warning \Rightarrow page 146, fig. 161, (a)

Version (B): High-resolution display

• Solid white lines: The lane assist is switched on and ready to warn.

• Solid red line (left or right): The lane assist warns you before you cross the lane demarcation \Rightarrow page 146, fig. 160.

• Unfilled lines: The lane assist is switched on but not ready for warning \Rightarrow page 146, fig. 161.

Messages in the instrument cluster display

Should the lane assist be deactivated automatically, the indicator lamp in the instrument cluster will go out and one of the following messages will appear in the instrument cluster display:

Audi lane assist not available: currently no sensor vision

This message is displayed when the camera is no longer functional after the system has continuously failed to detect the lane markings. This can have the following causes:

• The outside of the camera window \Rightarrow page 145, fig. 159 is dirty or frosted. Please remove dirt or ice from this area of the wind-screen.

• The inside of the camera window is misted up. In this case, please wait for the camera window to demist before switching on the lane assist system again.

 Due to the conditions (e.g. snow-covered road) the system has not been able to detect the lane markings for a long period. Do not switch the lane assist system on again before the lane markings are discernible.

Audi lane assist currently not available

A temporary error is preventing the lane assist system from fully functioning. Try switching on the lane assist system again later. Audi lane assist: system fault Audi lane assist

The system should be checked by an Audi dealership or other qualified workshop. \blacksquare

Applies to vehicles: with lane assist

Setting the warning time and steering vibration

You can change the lane assist settings on the sound system or MMI* to suit your individual preferences.




Fig. 162 Display: Setting time of warning and steering

- Select: Function selector button (CAR) > Audi lane assist.

Setting time of warning

early: In this setting, the driver will be warned before a wheel crosses a lane marking. The warning depends on the angle with which the vehicle is approaching the lane marking. The larger the angle with which you are driving towards the marking, the earlier you will receive the warning, i.e. the distance between the vehicle and the marking at a very narrow angle, you will receive the warning later, i.e. shortly before one of the wheels touches the marking.

 adaptive: In this setting, the time of warning is adapted to the road layout and the vehicle's speed. The warning will be received later when you are driving through a bend, and earlier when you are



document_0900452a81b1b9de.book Seite 148 Donnerstag, 26. Juli 2007 9:16 09

Audi lane assist

٠

۲

148

driving on a straight section. On narrow roads, the system will give off warnings later than on wide roads.

late: In this setting, the driver will be warned when a wheel crosses a lane marking.

Setting steering wheel vibration

You can set the steering vibration to **low, medium** or **strong**. The steering wheel will vibrate so that you can check your selection.

i Note

• The lane assist is not active while you are changing the setting; the brief vibration of the steering wheel is only intended to help you make the desired setting.

• Your personal settings are stored automatically and assigned to the remote control key which is being used. \blacksquare



document_0900452a81b1b9de.book Seite 149 Donnerstag, 26. Juli 2007 9:16 09

Audi side assist

Lane change assist feature

Applies to vehicles: with side assist **Description**

The side assist function assists the driver when changing lanes.



Fig. 163 Rear bumper: Position of radar sensors (not externally visible)



The side assist function employs radar sensors \Rightarrow fig. 163 to assist the driver in monitoring following traffic and the blind spots on both sides of the car \Rightarrow page 151, fig. 166.

Audi side assist

149

Warning lamps are incorporated in the two exterior mirrors \Rightarrow fig. 164. The warning lamp on the left-hand mirror assists the

 \Rightarrow fig. 164. The warning lamp on the left-hand mirror assists the driver when changing lane towards the left and the warning lamp on the right-hand mirror assists the driver when changing lane towards the right.


When one of these lamps lights up, this is to inform you that the side assist has detected a vehicle on that side and calculates that a lane change would be critical. This is the first stage of the warning, referred to as the **information mode** \Rightarrow *page 151*. This stage of the warning is designed to be visible only when you look in the exterior mirror.

If you operate the turn signal when the side assist has registered what it judges to be a critical vehicle, the lamp on the exterior mirror will then flash several times with greater intensity. This is the warning mode \Rightarrow page 151.

Applies to vehicles: with side assist Switching on and off



 Fig. 165 Driver's door: Button for side assist



document_0900452a81b1b9de.book Seite 150 Donnerstag, 26. Juli 2007 9:16 09

Audi side assist

150

Switching on

- Press the button \Rightarrow page 149, fig. 165. The red indicator lamp in the button will light up.

Switching off

- Press the button again. The indicator lamp in the button will go out.

The system is designed to provide assistance on motorways and other out-of-town roads, so it only operates at speeds above about 60 km/h.

Please note that the sensors are not always able to detect all vehicles which may represent a potential hazard (accident risk).
Please note that the side assist is not able to give adequate warning of vehicles approaching very fast from behind, or vehicles that you are overtaking rapidly.

• The radar sensor's "field of vision" can be impaired by rain, snow or a lot of water on the road. This results in vehicles not being reliably recognised or, in some circumstances, not being detected at all by the side assist. Always give your full attention to the position of your vehicle on the road and other nearby traffic.

The side assist only gives a warning of approaching vehicles and vehicles in the blind spots when road speed is above 60 km/h.
Please note that the side assist does not operate in tight bends (with a radius of less than 200 metres).

 The side assist feature is not a substitute for the full concentration of the driver. The driver is always responsible for the safety of lane changes and other manoeuvres. Always give your full attention to the position of your vehicle on the road and other nearby traffic.

U Caution

• To avoid impairing the function of the side assist, do not attach any objects (e.g. stickers or bicycle carriers) in such a way that they might interfere with the radar sensors in the rear bumper.

• Make sure that the warning lamps on the exterior mirrors are not obscured by stickers or other objects.

i Note

• To ensure that the side assist function works properly, do not allow snow and ice to accumulate on the rear bumper near the radar sensors. Please observe the additional notes on ⇒ page 157.

• The side assist function will be switched off automatically when the electrical connector for the trailer socket is plugged in on vehicles with a factory-fitted towing bracket.

• The side assist should be switched off manually when towing a trailer if the vehicle is equipped with a towing bracket which was not factory-fitted.

• The side assist system will switch off automatically if it detects an obstruction that impairs the function of the radar sensors.

• The warning lamps on the exterior mirrors may not be properly visible if tinted foil is affixed to the side windows on the driver's or passenger's side.

document_0900452a81b1b9de.book Seite 151 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with side assist





The area covered by the radar sensors \Rightarrow fig. 166 consists of: • The rearward approach zone (light green area: up to about 50

metres) (1) and • Blind spots (dark green area) (2).

The radar sensors monitor the lanes immediately to the left and right of your vehicle. Other lanes are *not* covered by the sensors.

i Note

The side assist system is programmed for lanes of a fixed width, and is not able to measure differing lane widths. It monitors a zone equivalent to one normal lane width on either side. If the lanes are narrower than this, or if vehicles are not travelling in the centre of the lanes, the system may register vehicles that are *not* in fact travelling in an adjacent lane \Rightarrow *page 156*.

Applies to vehicles: with side assist How the system works

When other vehicles are detected, the side assist system registers their distance and how fast they are approaching. The warning lamp

Audi side assist

on the relevant exterior mirror will light up whenever the side assist calculates that the distance and the speed differential of approaching vehicles would be critical in the event of a lane change.

The warning lamp may light up when you are being overtaken and when you are overtaking another vehicle.

If you are overtaking slowly, with a speed differential of less than 15 km/h, the warning lamp will light up as soon as the other vehicle enters your blind spot and is detected by the sensors. If you are overtaking with a speed differential which is greater than this the lamp will not give a warning.

Applies to vehicles: with side assist

Information mode and warning mode

 
- The side assist has two modes of operation
- The information mode and
- The warning mode

The side assist will respond in the appropriate mode, depending on whether or not you operate the turn signal to indicate an intended lane change.

Information mode

As long as you do not operate the turn signal, the side assist will merely inform you of the presence of vehicles that it has detected and judges to be critical in the event of a lane change. The warning lamp on the relevant exterior mirror will light up with low intensity whenever the side assist calculates that the distance and the speed differential of an approaching vehicle are critical.

The intensity of the warning lamp in this information mode is deliberately kept relatively low, so that it does not distract you while you are looking at the road in front and do not intend to change to a different lane. The information mode is clearly visible when you look in the exterior mirror.



document_0900452a81b1b9de.book Seite 152 Donnerstag, 26. Juli 2007 9:16 09

Audi side assist

Warning mode

•

152

If you operate the turn signal when the side assist has detected a vehicle on that side that it judges to be critical in the event of a lane change, the warning lamp on the relevant exterior mirror will flash brightly several times. This is the warning mode: if the lamp flashes brightly it warns you that you should check the situation again in the mirror and by looking back over your shoulder \Rightarrow in "Safety notes" on page 157.

i Note

You can adjust the brightness of the warning lamps on the exterior mirrors via the MMI \Rightarrow page 155. \blacksquare

Applies to vehicles: with side assist

Situation with vehicle approaching rapidly from behind

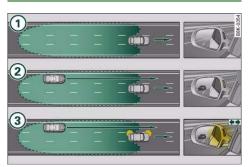


Fig. 167 side assist: Vehicles approaching rapidly from behind

() Warning lamp on exterior mirror does not light up The sensors have not detected any vehicles. The warning lamp on the exterior mirror does not light up $\Rightarrow \bigwedge$ in "Safety notes" on page 157.

(2) Warning lamp lights up in information mode

The sensors have detected a rapidly approaching vehicle - in this example in the left-hand lane. Because of its approach speed, this vehicle is already judged to be critical in the event of a lane change even though it is still some distance away. The warning lamp on the exterior mirror lights up in the information mode \Rightarrow page 151.

③ Warning lamp flashes in warning mode

If you operate the turn signal in situation (2), the warning lamp on the exterior mirror will flash briefly several times. This calls your attention to the presence of a vehicle which you may have overlooked.

i Note

 The faster a vehicle approaches, the earlier the warning will appear on the exterior mirror. In all cases, the side assist will give a warning for the vehicles it has detected at the latest when they enter the "blind spot".

• If a vehicle is approaching at high speed it is possible that a lane change may be critical, even though no warning is given. ■

document_0900452a81b1b9de.book Seite 153 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with side assist

Situation with vehicle approaching slowly from behind

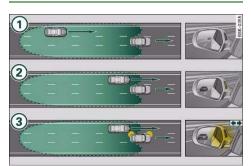


Fig. 168 side assist: Vehicles approaching slowly from behind and vehicles in the blind spot

() Warning lamp on exterior mirror does not light up The sensors have detected a slowly approaching vehicle - in this example in the left-hand lane. Because it is relatively far away and only approaching slowly, no warning will appear on the exterior mirror $\rightarrow \Delta$ in "Safety notes" on page 157.

(2) Warning lamp lights up in information mode The slowly approaching vehicle is now closer. The warning lamp on the exterior mirror lights up in the information mode.

The warning lamp on the exterior mirror will only light up if the side assist calculates that the distance and the speed differential of approaching vehicles would be critical in the event of a lane change.

Audi side assist

In all cases, the side assist will light up to indicate the vehicles it has detected at the latest when they enter the "blind spot".

③ Warning lamp flashes in warning mode

If you operate the turn signal in situation (2), the warning lamp on the exterior mirror will flash briefly several times. This calls your attention to the presence of a vehicle which you may have overlooked.

i Note

 The faster a vehicle approaches, the earlier the warning will appear on the exterior mirror. The side assist will give a warning for the approaching vehicles it has detected at the latest when they enter the "blind spot".

● If a vehicle is approaching at high speed it is possible that a lane change may be critical, even though no warning is given.

•	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
)			

document_0900452a81b1b9de.book Seite 154 Donnerstag, 26. Juli 2007 9:16 09

Audi side assist

۲

154

Applies to vehicles: with side assist

Situation when you are slowly overtaking other vehicles

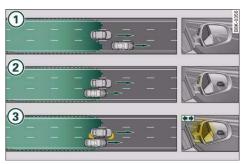


Fig. 169 side assist: Other vehicles being overtaken slowly

① Warning lamp on exterior mirror does not light up The vehicle you are overtaking has not yet been detected by the side assist. The warning lamp on the exterior mirror does not light up $\Rightarrow \Delta$ in "Safety notes" on *page 157*.

(2) Warning lamp lights up in information mode

The vehicle you are passing slowly (with a speed differential less than 15 km/h) is detected by the side assist. The warning lamp on the exterior mirror lights up in the information mode.

3 Warning lamp flashes in warning mode

If you operate the turn signal in situation (2), the warning lamp on the exterior mirror will flash briefly several times. This calls your

attention to the presence of a vehicle which you may have overlooked. \blacksquare

Applies to vehicles: with side assist

Situation when you are rapidly overtaking other vehicles

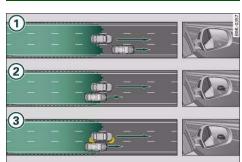


Fig. 170 side assist: Other vehicles being overtaken rapidly

() Warning lamp on exterior mirror does not light up The vehicle you are overtaking has not yet been detected by the side assist. The warning lamp on the exterior mirror does not light up $\Rightarrow \Delta$ in "Safety notes" on *page* 157.

(2) Warning lamp on exterior mirror does not light up The vehicle you are passing rapidly (with a speed differential greater than 15 km/h) is detected by the side assist but is not judged to be critical in the event of a lane change since it is dropping back



document_0900452a81b1b9de.book Seite 155 Donnerstag, 26. Juli 2007 9:16 09

quickly. The warning lamp on the exterior mirror does not light up \Rightarrow \triangle in "Safety notes" on *page 157*.

③ Warning lamp on exterior mirror does not light up If you operate the turn signal in situation ④, the warning lamp on the exterior mirror will still not give any warning \Rightarrow ⚠ in "Safety notes" on page 157.

Applies to vehicles: with side assist Adjusting brightness of warning lamp on exterior mirror

You can adjust the brightness of the warning lamp on the sound system or MMI*.



Select: Function selector button (CAR) > Audi side assist
 > Warning lamp: brightness.

ig. 171 Display:

of warning lamp

justing brightness

The brightness of the warning lamp in both the information and warning modes is regulated automatically according to the ambient light level. You can also adjust the basic *brightness level* of the warning lamp yourself via the function **Warning lamp: brightness**.

The new brightness level will be displayed briefly while you are making the adjustment. The brightness level that is shown at this point is the intensity of the lamp when it comes on in the informaAudi side assist

tion mode. The intensity of the lamp in the warning mode is linked to the intensity in the information mode.

The brightness of the lamp in the information mode should be set so that you can see the lamp when you glance at the exterior mirror, but are not aware of it when looking forwards through the windscreen.

If you are in very dark or very light surroundings when you adjust the brightness of the warning lamp, the automatic brightness control may already have reached the lowest or the brightest setting. Under these circumstances the brightness of the warning lamp on the exterior mirror may not change visibly when you alter the basic *brightness level.*

If you adjust the basic *brightness level* while the vehicle is in in very dark or very light surroundings, the change in the setting may only become visible in surroundings of more moderate brightness.

i Note

 
• The side assist is not active while you are changing the brightness setting; the brief flash of the warning lamp is only intended to help you make the desired setting.

• Your personal settings are stored automatically and assigned to the remote control key which is being used. ■

Applies to vehicles: with side assist General notes

The side assist system has inherent limitations in some situations. For this reason, please take particular care:

- When driving through bends \Rightarrow page 156
- On roads with varying lane widths \Rightarrow page 156.





Applies to vehicles: with side assist When driving through bends


The side assist cannot detect vehicles in tight bends (with a radius of less than 200 metres).

When driving through a bend, the side assist may react to a vehicle that is two lanes away and activate the warning lamp in the exterior mirror.

Applies to vehicles: with side assist Lane widths



 Fig. 172 Lanes of normal width are covered by the senso





The side assist system is designed to cover adjacent lanes of normal width on both sides of your vehicle (left and right), regardless of

whether you are driving directly in the centre of your lane or further to one side. $\label{eq:constraint}$

If the lane widths are reduced, the sensors may also detect vehicles in additional lanes, especially if you are driving further to one side of your lane \Rightarrow fig. 173. In such situations the system may react to vehicles travelling two lanes away, so that the side assist activates the information or the warning mode.

Similarly, if the lanes are very wide, it is possible that the system may not detect vehicles in the adjacent lane because they are outside the area covered by the sensors. ■

Notes

Applies to vehicles: with side assist

Messages in the instrument cluster display

Should the side assist be deactivated automatically, the indicator lamp in the button will go out and a message will appear in the instrument cluster display:

Audi side assist not available: sensors blocked

The sensors, which are not externally visible, are incorporated on either side of the rear bumper \Rightarrow page 149, fig. 163. To ensure the proper function of the side assist system, do not attach any objects (such as stickers or bicycle carriers, etc.) to the rear bumper in such a way that they might obstruct these sensors. Should the function of the system be impaired, the instrument cluster display will show this message. Please check whether anything is obstructing the sensors and remove the obstruction if necessary.

Audi side assist currently not available

The side assist is temporarily inoperative and cannot be switched on (for instance if the battery is not sufficiently charged).



document_0900452a81b1b9de.book Seite 157 Donnerstag, 26. Juli 2007 9:16 09

Audi side assist: system fault

The system should be checked by an Audi dealership or other qualified workshop.

Audi side assist not available when towing

On vehicles with a factory-fitted towing bracket the side assist function will be switched off automatically when the electrical connector for the trailer is plugged in, and this message will appear in the instrument cluster display. The side assist function may not be switched off automatically if the towing bracket is not of the factoryfitted type.

Applies to vehicles: with side assist Safety notes

The function of the side assist can be restricted when driving in tight bends or over crests and in bad weather conditions.

It is possible that the radar sensors may register objects such as high or offset roadside barriers as well as other vehicles.

The side assist system is programmed for lanes of a fixed width, and is not able to measure differing lane widths. It monitors a zone equivalent to one normal lane width on either side. If the lanes are narrower than this, or if vehicles are not travelling in the centre of the lanes, the system may give a warning for vehicles which it judges to be critical, even though they are *not* in fact travelling in an adjacent lane.

Please note that the sensors are not always able to detect all vehicles which may represent a potential hazard (accident risk).
Please note that the side assist is not able to give adequate warning of vehicles approaching very fast from behind, or vehicles that you are overtaking rapidly.

Audi side assist

MARNING (continued)

 The radar sensor's "field of vision" can be impaired by rain, snow or a lot of water on the road. This results in vehicles not being reliably recognised or, in some circumstances, not being detected at all by the side assist. Always give your full attention to the position of your vehicle on the road and other nearby traffic.

• The side assist only gives a warning of approaching vehicles and vehicles in the blind spots when road speed is above 60 km/h.

• Please note that the side assist does not operate in tight bends (with a radius of less than 200 metres).

• The side assist feature is not a substitute for the full concentration of the driver. The driver is always responsible for the safety of lane changes and other manoeuvres. Always give your full attention to the position of your vehicle on the road and other nearby traffic.

U Caution

To avoid impairing the function of the side assist, do not attach any objects (e.g. stickers or bicycle carriers) in such a way that they might interfere with the radar sensors in the rear bumper.

i Note

For reasons of safety, the side assist system must be checked by a qualified workshop if the positions of the radar sensors have been affected by a rear-end collision, etc. \blacksquare

Applies to vehicles: with side assist Conformity certification

The side assist employs radar sensors operating in one of two frequency bands at 24 GHz. Please note that in some countries only one of these two frequency bands is permitted. Accordingly, the frequency band permitted in the country where the vehicle is being **>**

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
			—			

document_0900452a81b1b9de.book Seite 158 Donnerstag, 26. Juli 2007 9:16 09

Audi side assist

٠

۲

158

operated must be set by a qualified workshop, or if necessary the side assist must be deactivated.

The manufacturer certifies that, when used in the authorised manner, the side assist conforms with the requirements of \$3 and the other relevant provisions of the "1999/5/EC Guideline issued by the European Parliament and the European Council".

The side assist is certified for use in the following countries:

Austria, Belgium, Cyprus, Czech Republic, Denmark, Estonia, Finland, GB/Northern Ireland, Germany, Greece, Hungary, Iceland, Ireland, Italy, (San Marino, Vatican City), Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Slovakia, Slovenia, Spain (Andorra, Balearic Islands, Canary Islands), Sweden, Switzerland. ■ document_0900452a81b1b9de.book Seite 159 Donnerstag, 26. Juli 2007 9:16 09

Audi drive select

Adjusting the vehicle set-up

Applies to vehicles: with Audi drive select Introduction

Audi drive select allows you to use different set-ups on your vehicle. Using the three modes COMFORT, AUTO and DYNAMIC, you can change the set-up at the press of a button for a more comfortoriented or dynamic drive.

On vehicles with MMI*, you also have the INDIVIDUAL* mode, which allows you to adapt the vehicle set-up individually to your personal driving style. For example, you might choose to combine a more dynamic engine set-up with a lighter steering response.

Applies to vehicles: with Audi drive select **Description**

The possible vehicle set-up in each mode depends on which equipment is installed on your vehicle. The engine and the servotronic power steering are basic parts of your vehicle which are always included in the set-up. In addition, you can change the characteristics of the automatic gearbox*, dynamic steering* and suspension control*.

The response of the **engine** and **automatic gearbox*** to accelerator pedal movements will be more spontaneous or balanced, depending on which mode you select.

The **servotronic power steering** \Rightarrow *page 225* will also respond to different drive set-ups.

The **dynamic steering*** alters the steering ratio depending on the road speed to optimise the amount of steering effort required by the driver at any given time. This enables the sensitivity of the steering

Audi drive select

to be reduced at higher speeds in order to improve the handling of the vehicle. The steering is more direct at lower speeds to minimise the amount of steering effort required by the driver, e.g. when manoevring in tight spaces. The dynamic steering⁺ also provides a more agile steering response at low and medium speeds. You can adjust the basic characteristics of the steering in the Audi drive select menu.

The suspension control* uses sensors to collect information on steering movements, braking and acceleration input by the driver, road surface quality, road speed and vehicle loading. Using this information, the suspension can be adapted almost instantaneously to changing driving conditions. With Audi drive select, the driver can choose between dynamic and comfort-oriented suspension set-ups (DYNAMIC and COMFORT modes), or opt for a more balanced set-up (AUTO mode).

The following table provides an overview of the characteristics in each driving mode.

Systems	COMFORT	AUTO	DYNAMIC
Engine or engine/gearbox*	Balanced	Balanced	Dynamic
Steering	Comfortable	Balanced	Dynamic
Dynamic steering*	Comfortable (indirect)	Balanced (direct)	Dynamic (direct)
Suspension control*	Comfortable	Balanced	Dynamic

If your vehicle is equipped with dynamic steering*, the servotronic power steering settings are adjusted in the **Dynamic steering*** menu.

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u></u>
	—)—			

document_0900452a81b1b9de.book Seite 160 Donnerstag, 26. Juli 2007 9:16 09

Audi drive select

i Note

۲

160

• You can select the sport program for gear changes on vehicles with an automatic gearbox* by activating the **DYNAMIC** mode. There is no S position on the selector lever.

• You may hear a noise on vehicles with dynamic steering* when you start or stop the engine. This is no cause for concern. \blacksquare

Applies to vehicles: with Audi drive select

Selecting the driving mode

You can choose between COMFORT, AUTO, DYNAMIC and INDIVIDUAL*.



Fig. 174 Selector gate: Control for Audi drive



Fig. 175 Centre console: Control for Audi drive select The control is next to the selector gate \Rightarrow fig. 174 on vehicles with sound system, or in the centre console \Rightarrow fig. 175 on vehicles with MMI*.

- Switch on the ignition.
- Press the left or right arrow button until the desired mode lights up in red.

You can change the driving mode while the vehicle is stationary or moving. If traffic conditions permit, take your foot off the accelerator briefly after you change the mode so that the new mode is also activated for the engine.

COMFORT

The COMFORT mode alters the vehicle set-up for a more comfortable ride. The response of the engine and automatic gearbox* to accelerator pedal movements is balanced. The steering is light and indirect* and the suspension control* is set to soft. This setting is suitable for driving long distances on motorways for example.

AUTO


The overall impression in AUTO mode is of a comfortable but dynamic ride. This setting is suitable for everyday use.

DYNAMIC

DYNAMIC gives the vehicle a tighter set-up. The engine reacts spontaneously to accelerator pedal movements and the steering is dynamic and direct*. The suspension control* is stiffer and the automatic gearbox* changes gear at higher engine speeds. This setting is ideal for performance driving.

INDIVIDUAL*

You can configure this mode on the MMI according to your personal preferences.

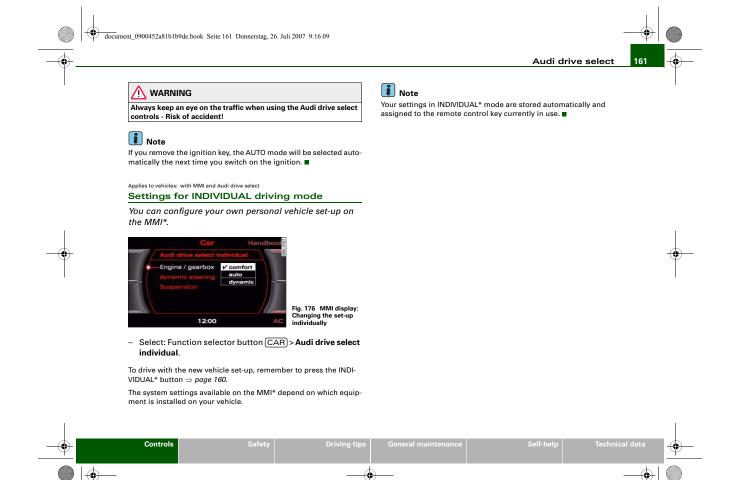

document_0900452a81b1b9de.book Seite 162 Donnerstag, 26. Juli 2007 9:16 09

Automatic gearbox

162

Automatic gearbox

multitronic[®], tiptronic (6-speed gearbox)

Applies to vehicles: with multitronic® or tiptronic Introduction

Applies to vehicles with multitronic[®] gearbox

The vehicle is equipped with an electronically controlled **continuously variable transmission** (multitronic[®]). Unlike conventional automatics, the gear ratios are not shifted in fixed steps but continuously variable. This gives smoother transmission and makes for better fuel economy.

The gearbox selects the gear ratio and shifts up or down automatically according to the gear change programmes stored in the control unit \Rightarrow *page 166*.

If desired, you can also select the gears manually (tiptronic mode) \Rightarrow page 166.

Please note that on vehicles with a multitronic® gearbox, torque is transmitted via a multi-plate clutch, and not via a torque converter as on conventional automatics. This means that the car will not "creep" as much as conventional automatics when the engine is idling if you stop temporarily with the selector lever in position D, S or R.

Applies to vehicles with tiptronic gearbox

The vehicle is equipped with an electronically controlled 6-speed automatic gearbox. The gearbox changes up and down *automatically*.

If desired, you can also select the gears manually (tiptronic mode) \Rightarrow page 166. \blacksquare

Applies to vehicles: with multitronic® or tiptronic General notes on using multitronic®

The gears are changed automatically.



Driving away from a standstill

- Press and hold the brake pedal.
- Press and hold the interlock button (the button in the selector lever handle), move the selector lever to the desired position, for instance D, and release the interlock button.

Fig. 177 Detail of the centre console: Selector lever with interlock button

- Wait for the gearbox to engage the gear (a slight movement can be felt).
- Release the brake and press the accelerator \Rightarrow \triangle .

Stopping briefly

Apply the foot brake to hold the vehicle when stationary (for instance at traffic lights).

document_0900452a81b1b9de.book Seite 163 Donnerstag, 26. Juli 2007 9:16 09

- To prevent the vehicle from rolling away, apply the parking brake before moving off on steep gradients $\Rightarrow \Delta$.
- As soon as you accelerate as normal, the parking brake will automatically be released and the vehicle will start moving.

Parking the car

- Press and hold the brake pedal \Rightarrow \triangle .
- Apply the parking brake.
- Press and hold the interlock button, move the selector lever to P and release the interlock button.

The engine can only be started when the selector lever is at P or N.

On level ground it is sufficient to move the selector lever to P. On a gradient the parking brake should be applied first and the selector lever should be moved to P. This reduces the load on the locking mechanism and makes it easier to move the selector lever out of position P.

Vehicles with multitronic® gearbox: Your vehicle is equipped with the **hill hold assist function** which makes it easier to drive away on a slope. The system is activated when you press and hold the brake pedal for **a few seconds**. When you release the brake pedal the braking force will be maintained for a *moment* in order to prevent the vehicle rolling back when you drive away.

• Do not press the accelerator while selecting a gear with the vehicle stationary and the engine running, as this could cause an accident.

• Please note that some power will still be transmitted when you stop temporarily with the selector lever in position D, S or R. For

Automatic gearbox

WARNING (continued)

this reason, to avoid risking an accident, apply the footbrake firmly when stopping to prevent the vehicle rolling away.

• Never move the selector lever to R or P when driving, as this could cause an accident.

• Vehicles with multitronic® gearbox: Please note that some power will still be transmitted when you stop temporarily with the selector lever in position D, S or R. For this reason, to avoid risking an accident, apply the footbrake firmly when stopping to prevent the vehicle rolling away.

Applies to vehicles: with multitronic® or tiptronic

Selector lever positions

This section covers all the selector lever positions.




Fig. 178 Display: Selector lever posi

The current selector lever position is shown in the instrument cluster display.

P - Parking lock

This locks the driving wheels mechanically. The parking lock must only be engaged when the vehicle is *stationary* \Rightarrow \triangle .

 The interlock button (the button in the selector lever handle) must be pressed in *and* the brake pedal must be depressed before



document_0900452a81b1b9de.book Seite 164 Donnerstag, 26. Juli 2007 9:16 09

Automatic gearbox

moving the selector lever either in or out of position P. The lever can only be moved out of position P when the ignition is on.

R - Reverse gear

164

When reverse gear is engaged the gearbox automatically selects the **lowest gear ratio**.

Reverse gear must only be engaged when the vehicle is stationary and the engine is idling $\Rightarrow \underline{A}$.

To move the selector lever to position R, press in the interlock button *and* at the same time press the brake pedal. Depending on the model, one or two reversing lights will come on in selector lever position R (when ignition is switched on).

N - Neutral

In this position the gearbox is in neutral $\Rightarrow \Delta$.

D - Drive (forwards)

In this position the gearbox automatically selects the best gear ratio. This depends on the engine load, the road speed and the dynamic gear control program (DCP).

Press the brake pedal when moving the selector lever from N to D if the vehicle is stationary or at speeds below 5 km/h $\Rightarrow \Delta$.

In some situations (such as on mountain roads or when towing a trailer or caravan) it can be advantageous to switch temporarily to tiptronic mode \Rightarrow *page* 166, so that the gear ratios can be selected *manually* to suit the driving conditions.

S - Sport position

Select this position if you wish to take full advantage of the car's performance. This setting makes use of the engine's maximum power output. When accelerating the gear shifts will be noticeable. Press the brake pedal when moving the selector lever from N to S if

the vehicle is stationary or at speeds below 5 km/h \Rightarrow Λ .

• Never move the selector lever to R or P when driving, as this could cause an accident.

In selector position D or S the vehicle must always be held with the foot brake when the engine is running. This is because an automatic gearbox still transmits power even at idling speed, and the vehicle tends to "creep". The throttle must on no account be opened inadvertently (for instance by hand from the engine compartment) when a gear is engaged with the vehicle stationary. The vehicle could otherwise start moving immediately (in some cases even if the parking brake is engaged) and possibly cause an accident.

• To avoid accidents, apply the parking brake and put the selector lever in position P before opening the bonnet and working on the vehicle with the engine running. Please observe the important safety warnings \Rightarrow page 255, "Working on components in the engine compartment".

i Note

You can select the sport program for gear changes on vehicles with Audi drive select* by activating the **DYNAMIC** mode. There is no S position on the selector lever.

• Applies to vehicles with tiptronic gearbox:

• If the lever is moved accidentally to N when driving, release the accelerator and let the engine speed drop to idling before selecting D or S again.

• For the sake of fuel economy (and the environment), the gearbox ratios on some models are designed so that maximum speed is only obtained when the selector lever is at position S.

document_0900452a81b1b9de.book Seite 165 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with multitronic® or tiptronic

Selector lever lock

The selector lever lock prevents gears from being engaged inadvertently, so that the vehicle is not set in motion unintentionally.



The selector lever lock is released as follows:

- Switch on the ignition.
- Press the brake pedal and at the same time press in the interlock button.

Automatic selector lever lock

The selector lever is locked in the P and N positions when the ignition is on. The brake pedal must be depressed before the lever can be moved out of either of these positions. The following message appears in the instrument display as a reminder for the driver when the selector lever is in position P or N:

WHEN STATIONARY APPLY FOOTBRAKE WHILE SELECTING GEAR.

The selector lever lock only works if the vehicle is stationary or driving at speeds up to 5 km/h. At higher speeds the selector lever lock in the N position is disengaged automatically.

The selector lever lock is not engaged if the selector lever is moved quickly through position N (e.g. when shifting from R to D). This

Automatic gearbox

makes it possible, for instance, to "rock" the vehicle backwards and forwards if it is stuck in snow or mud. The selector lever lock engages automatically if the brake pedal is not depressed and the lever is in position N for more than about a second.

Interlock button

The interlock button on the selector lever handle prevents the driver from inadvertently engaging particular gears. Press the button in to disengage the selector lever lock. The illustration shows the selector lever positions in which the button has to be pressed, highlighted in colour \Rightarrow fig. 179.

Safety interlock for ignition key

The key can only be withdrawn with the ignition switched off and the selector lever in position P. When the ignition key is removed, the selector lever is locked in position P.

Applies to vehicles: with multitronic® or tiptronic

Kick-down feature

The kick-down feature is designed to give maximum acceleration.

Applies to vehicles with multitronic[®] gearbox

When the accelerator pedal is pressed right down past the point of resistance at full throttle, the gearbox will select a lower gear ratio, depending on road speed and engine speed. While you keep the accelerator depressed the engine speed is automatically controlled to give your vehicle maximum acceleration.

Applies to vehicles with tiptronic gearbox

When the accelerator pedal is pressed right down past the point of resistance at full throttle, the gearbox will shift down to a lower gear, depending on road speed and engine speed. The upshift to the next higher gear is delayed until the engine reaches maximum rpm.

 


Fig. 179 Selector lever

document_0900452a81b1b9de.book Seite 166 Donnerstag, 26. Juli 2007 9:16 09

Automatic gearbox

۲

166

Please note that if the road surface is slippery or wet, the kickdown feature could cause the driving wheels to spin, which could result in skidding.

Applies to vehicles: with multitronic® or tiptronic

Dynamic gear control program (DCP)

The automatic gearbox is controlled electronically.

The vehicle is equipped with an electronically controlled gearbox. The gear ratios are selected automatically according to preset gearshift programmes.

When you drive at **moderate speeds** the gearbox will select the most economical shift programme. It will then change up early and delay the downshifts to give better fuel economy.

If you drive at **higher speeds** with heavy acceleration, if you open the throttle quickly, or if you use the kick-down or the car's maximum speed, the gearbox will automatically select the more "sporty" shift programmes.

The gearbox is self-adapting, and continuously selects the most suitable shift programme. At the same time, the driver can also make the gearbox switch to a more "sporty" programme by pressing the accelerator quickly. Depending on road speed, this makes the gearbox shift down early into a lower gear ratio for more rapid acceleration (for instance to pass another vehicle), without having to press the accelerator all the way down into the kick-down position. After the gearbox has shifted back up it returns to the original programme, depending on your style of driving.

Vehicles with multitronic® gearbox: The gearbox continuously adapts the gear ratios on uphill gradients. If the brake pedal is pressed on a downhill gradient the gearbox automatically shifts to a lower gear ratio. This increases the engine braking effect. Vehicles with tiptronic gearbox: The gearbox adapts the gearshifts for uphill and downhill gradients. This prevents the gearbox from shifting up and down unnecessarily on uphill gradients.

Applies to vehicles: with multitronic® or tiptronic Manual gear selection (tiptronic mode)

With the manual shift programme (tiptronic) the driver can manually select pre-programmed gears.



Fig. 180 Centre console: Manual gea selection (tiptronic

Fig. 181 Display:

Manual gear selection (tiptronic mode)



Switching over to the manual programme

 From position D, push the selector lever to the right. As soon as the automatic gearbox has changed over to this programme, the display will show the selected gear. document_0900452a81b1b9de.book Seite 167 Donnerstag, 26. Juli 2007 9:16 09

Shifting up a gear

Briefly push the selector lever forwards (in the tiptronic gate) \Rightarrow page 166, fig. 180 (+).

Shifting down a gear

Briefly pull the selector lever backwards (in the tiptronic gate) _.

With the tiptronic system the driver can manually choose between 7 different pre-programmed gears. The manual programme can be selected either with the vehicle stationary or on the move.

When accelerating, the gearbox automatically shifts up into the next gear shortly before the maximum engine speed is reached.

If you select a gear which is lower than the gear shown in the instrument display \Rightarrow *page 166*, fig. 181, the gearbox will only shift down when there is no longer a risk of overrevving the engine.

When the vehicle slows down (for instance when braking), the gearbox automatically shifts down into the next gear when the minimum engine speed is reached.

Changing down to a lower gear increases the engine braking effect on downhill gradients.

When the accelerator pedal is pressed right down past the point of resistance at full throttle, the gearbox will select a lower gear, depending on road speed and engine speed. ■

Applies to vehicles: with multitronic® or tiptronic

Back-up programme

A back-up system is in place should a fault occur in the control system.

The automatic gearbox switches to the back-up programme if a fault should occur in the control system. This is indicated by all segments

Automatic gearbox

gennen

167

of the display panel either lighting up together or going out completely.

It is still possible to move the selector lever to all positions. The manual shift programme (tiptronic) is not available when the backup programme is active.

Vehicles with tiptronic gearbox: When the selector lever is in position D or S or in the manual shift programme, the gearbox will remain in 3rd gear if 1st, 2nd or 3rd gears were engaged when the fault occurred. The gearbox will remain in 5th gear if 4th, 5th or 6th gears were engaged. The gearbox will then engage 3rd gear when you drive away from a standstill or after the engine is restrated.

It will still be possible to use reverse gear in the normal way. However, the electronic lock for reverse gear will be switched off.

! Caution


Should the gearbox ever switch into the back-up programme, you should take the vehicle to an Audi dealer or qualified workshop as soon as possible. ■

Applies to vehicles: Paddle levers Steering wheel with paddle levers

The paddle levers on the steering wheel enable the driver to manually select pre-programmed ratios or gears.



 Fig. 182 Steering wheel: tiptronic switches





The paddle levers are activated when the selector lever is in position D or S, or the position for the manual shift programme (tiptronic). The manual shift programme can, of course, still be operated using the selector lever in the centre console. ■

Applies to vehicles: with multitronic® or tiptronic Manual release of selector lever

The selector lever can be released manually if the electrical power supply should fail.

 


Fig. 183 Removing



Fig. 184 Manual release of selector

The manual release mechanism is behind the ashtray.

- Slide open the cover for the ashtray.
- Slide the switch (A) \Rightarrow fig. 183 to the right to release the ashtray.
- Take out the ashtray (B).
- You will now see a small cover cap at the front of the opening in the ashtray mounting unit.
- Loosen and remove this cover cap.
- Use a screwdriver or similar object to press down the pin, which is now accessible, and hold it down \Rightarrow fig. 184.
- Now press the interlock button on the selector lever and move the selector lever to position N.

The selector lever can only be moved out of position P if the ignition key is inserted and the ignition is switched on. If the power supply should ever fail (discharged battery, etc.) and the vehicle has to be pushed or towed, the selector lever must first be moved to position N. This is possible after operating the manual release mechanism. ■

document_0900452a81b1b9de.book Seite 169 Donnerstag, 26. Juli 2007 9:16 09

Parking aid

Applies to vehicles: with Audi parking system/plus/advanced

General notes

Various systems are available to help you when parking or manoeuvring in tight spaces, depending on the equipment fitted on your vehicle.

The Audi parking system gives an acoustic warning if there are any obstacles behind the car \Rightarrow page 169.

When you are parking, the **Audi parking system plus** warns you acoustically and optically about obstacles *in front of* and *behind* the vehicle \Rightarrow *page* 170.

In conjunction with a reversing camera, the **Audi parking system advanced** shows a picture of the area behind the vehicle. This picture helps you to manoevre the vehicle backwards and sideways. In addition, you are assisted by the acoustic signals and graphic display of the parking aid \Rightarrow page 171.

i Note

To ensure that the acoustic parking aid works properly, the sensors must be kept clean and free of snow and ice. \blacksquare

Audi parking system

Applies to vehicles: with Audi parking system

Description

The Audi parking system is an acoustic parking aid.

Sensors are located in the rear bumper. When the sensors detect an obstacle, you are alerted by acoustic signals (beeps). The measuring range of the sensors starts at about:

	Rear	Side	0.60 m
-		Centre	1.60 m

The acoustic signals sound with increasing frequency as you approach the obstacle. A warning tone will sound continuously when the vehicle is less than approx. 0.30 m away from the obstacle. Stop reversing immediately!

The volume of the warning beeps will be gradually reduced after about 4 seconds if the vehicle remains at a constant distance from a detected obstacle (it will not be reduced if the obstacle is closer than 0.30 m).

The parking aid is switched on automatically when reverse gear is engaged. You will hear a brief acknowledgement tone.

• The parking aid cannot replace the full concentration of the driver. The driver is always responsible for safety during parking and other manoeuvres.

 The sensors have blind spots in which obstacles are not registered. It is particularly important to ensure that there are no small children or animals near the vehicle, as the sensors may not always be able to detect them.

• Always keep a close watch on the area around the vehicle and make full use of the rear-view mirrors.

U Caution

Please note that low obstacles detected by the system may no longer be registered by the sensors as the car moves closer, so the system will not give any further warning. Certain kinds of obstacles (such as wire fences, chains, thin painted posts or trailer draw bars,

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u></u>
)			

Ť

1

Parking aid

document_0900452a81b1b9de.book Seite 170 Donnerstag, 26. Juli 2007 9:16 09

Parking aid

۲

170

etc.) may not always be detected by the system, so take care not to damage the vehicle in such cases.

i Note

- Please refer to the notes on towing \Rightarrow page 177.
- You can adjust the volume and pitch of the beeps \Rightarrow page 177.

Audi parking system plus

Applies to vehicles: with Audi parking system plus

Description

The Audi parking system plus is a parking aid with acoustic signals and graphic display.

Sensors are located in the front and rear bumpers. When the sensors detect an obstacle, you are alerted by acoustic signals (beeps) and a graphic display. The measuring range of the sensors starts at about:

Front	Side	0.90 m
FIOIL	Centre	1.20 m
Rear	Side	0.60 m
near	Centre	1.60 m

The acoustic signals sound with increasing frequency as you approach the obstacle. A warning tone will sound continuously when the vehicle is less than approx. 0.30 m away from the obstacle. Stop moving immediately!

The volume of the warning beeps will be gradually reduced after about 4 seconds if the vehicle remains at a constant distance from a detected obstacle (it will not be reduced if the obstacle is closer than 0.30 m).

Applies to vehicles: with Audi parking system plus Switching on/off



Fig. 185 Centre console: Parking aid /itch

display



Switching on

- Switch on the sound system or MMI*.
- Engage reverse gear, or
- Press the switch Pⁿ in the centre console \Rightarrow fig. 185 or next to the selector gate. You will hear a brief acknowledgement tone and the diode in the switch will light up.

Switching off

- Drive forwards faster than 10 km/h, or

document_0900452a81b1b9de.book Seite 171 Donnerstag, 26. Juli 2007 9:16 09

- Press the switch P^{MA}, or
- Switch off the ignition.

Segments in the graphic display

You can estimate the distance to an obstacle by referring to the red segments at the front and rear of the vehicle \Rightarrow page 170, fig. 186. The closer the vehicle gets to the obstacle the closer the segments move towards the vehicle in the graphic. At the latest when the penultimate segment is highlighted the vehicle has reached the danger (collision) zone. Stop moving immediately \Rightarrow Λ !

MARNING

 The parking aid cannot replace the full concentration of the driver. The driver is always responsible for safety during parking and other manoeuvres.

 The sensors have blind spots in which obstacles are not registered. It is particularly important to ensure that there are no small children or animals near the vehicle, as the sensors may not always be able to detect them.

• Always keep a close watch on the area around the vehicle and make full use of the rear-view mirrors.

U Caution

Please note that low obstacles detected by the system may no longer be registered by the sensors as the car moves closer, so the system will not give any further warning. Certain kinds of obstacles (such as wire fences, chains, thin painted posts or trailer draw bars, etc.) may not always be detected by the system, so take care not to damage the vehicle in such cases.

i Note


• You can change the display and adjust the volume and pitch of the beeps \Rightarrow page 177.

• Please refer to the notes on towing \Rightarrow page 177.

● There is a slight delay in the picture display.


Audi parking system advanced


Applies to vehicles: with Audi parking system advanced Introduction

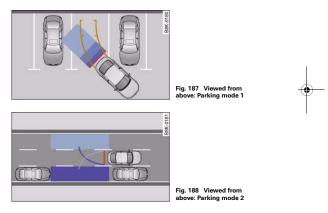

A **reversing camera** is integrated in vehicles with the Audi parking system advanced, in addition to a parking aid with acoustic signals and graphic display \Rightarrow *page* 170.

Two modes can be selected when parking. "Parking mode 1" can, for example, be used when parking your vehicle in a parking bay or a

 

 

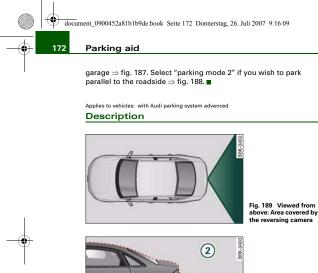


Fig. 190 Side view: (1): Area covered by the reversing camera; (2): area NOT covered by the reversing camera

The reversing camera covers approximately the area depicted in \Rightarrow fig. 189 and \Rightarrow fig. 190 (1). This is the area you will see in the picture on the MMI display. Orientation lines and colour markings are projected onto the picture to help you when parking or mano-evring in tight spaces. Objects out of range of the camera in area 2 do not appear in the picture on the MMI display. \blacksquare

(2)

(1)

Applies to vehicles: with Audi parking system advanced **General notes**



Fig. 191 Boot lid: Loca-tion of reversing camera

We recommend that you practise parking with the reversing camera in a quiet location (car park or similar) in order to become familiar with the system, including the orientation lines and all the other features. Ideally, the weather and light conditions should be good. Vehicles or other objects shown in the MMI display appear to be

further away or closer, if:

• you are reversing from a horizontal surface up a gradient or down a hill,

• you are reversing towards protruding objects,

• the vehicle has been loaded with a greater load on the rear.

The accuracy of the orientation lines and the blue area markings decreases if:

• the reversing camera does not provide a reliable image, e.g. if visibility is poor or the lens is dirty,

• the sun is so dazzling that you cannot see the image on the display screen.

How to clean the lens of the reversing camera

The reversing camera is located above the rear number plate. To The reversing camera is located above the rear manufactor processory ensure that the parking aid works properly, the lens \Rightarrow fig. 191 must be kept clean.

document_0900452a81b1b9de.book Seite 173 Donnerstag, 26. Juli 2007 9:16 09

• Moisten the lens using a commercially available, alcohol-based glass cleaning agent and clean the lens with a dry cloth \Rightarrow ().

• Use a small brush to remove snow and a de-icer spray to remove ice \Rightarrow ().

 The parking aid cannot replace the full concentration of the driver. The driver is always responsible for safety during parking and other manoeuvres.

• Always keep a close watch on the area around the vehicle and make full use of the rear-view mirrors.

• Do not allow the camera images in the MMI display to distract you from watching the traffic.

• For safety reasons, you should not use the system if the position and installation angle of the camera have been changed, e.g. in a rear-end collision. Have it checked by a qualified workshop.

U Caution

 Please note that low obstacles detected by the system may no longer be registered by the sensors as the car moves closer, so the system will not give any further warning. Certain kinds of obstacles (such as wire fences, chains, thin painted posts or trailer draw bars, etc.) may not always be detected by the system, so take care not to damage the vehicle in such cases.

• Never remove snow and ice from the lens of the reversing camera using warm or hot water - danger of cracks appearing on the lens.

Never use abrasive cleaning agents on the lens.

Parking aid

Farking an

Switching on/off The reversing camera is automatically switched on

Applies to vehicles: with Audi parking system advanced

together with the acoustic signals and graphic display when you select reverse gear.

Switching on

- Switch on the MMI system.
- Engage reverse gear, or
- Press the switch P[®] in the centre console ⇒ page 170, fig. 185. You will hear a brief acknowledgement tone and the diode in the switch will light up.

 
Switching off

- Drive forwards faster than 10 km/h, or
- Press the switch P[™], or
- Switch off the ignition.

Changing display via MMI

- Press the control button for **Graphic** \Rightarrow *page* 174, fig. 192 (5) to show the graphic display on the screen.
- Press the control button for Rear View to display the picture from the reversing camera.

 Some objects (e.g. narrow posts or bars), recesses in the ground or protruding parts on other vehicles may not be displayed in a satisfactory manner or may not be displayed at all on the MMI screen.



document_0900452a81b1b9de.book Seite 174 Donnerstag, 26. Juli 2007 9:16 09

Parking aid

۲

174

MARNING (continued)

 Only use the reversing camera to assist you if it is supplying you with a good and clear picture. The quality of the picture could be impaired by adverse light, dirt on the lens or a defect (accident risk).

• Only use the reversing camera when the boot lid is completely closed. Please make sure that there are no objects mounted to the rear end of the vehicle which could block the view of the reversing camera.

i Note

 If your vehicle is near an obstacle, the graphic display will also appear in the reversing camera image. This superimposed graphic helps the driver to localise the critical area of the vehicle.

- You can change the display and adjust the volume and pitch of the beeps \Rightarrow page 177.

- Please refer to the notes on towing \Rightarrow page 177.
- There is a slight delay in the picture display. ■

Applies to vehicles: with Audi parking system advanced

Parking perpendicular to the roadside

Parking mode 1 can be used when parking your vehicle in a garage or parking bay.

 


Fig. 192 MMI display: Approaching a parking

 


Fig. 193 MMI display: Aligning the vehicle

- Turn the steering wheel until the orange orientation lines (1) are pointing towards the parking space \Rightarrow fig. 192. You can estimate the distance to an obstacle by referring to the markings (2). Each marking is equivalent to 1 metre. document_0900452a81b1b9de.book Seite 175 Donnerstag, 26. Juli 2007 9:16 09

- Reverse into the space and adapt the steering angle to the parking space, using the orange lines to assist you $\Rightarrow \bigcirc$. (3) indicates the rear bumper. You should stop reversing, at the latest, when the red orientation line (4) is bordering on an object $\Rightarrow \bigwedge$!
- Align your vehicle according to the blue area marking ⇒ fig. 193. The blue marking is an extension of the vehicle outline and reaches about five metres to the rear of the vehicle. The shade of blue changes at a distance of approx. 1 m, 2 m and 5 m to the vehicle.

• The reversing camera does not show the complete area behind the vehicle. It is particularly important to ensure that there are no small children or animals near the vehicle, as the reversing camera may not always be able to detect them (accident risk).

• Please note that objects which are not touching the ground may appear to be further away than they actually are (e.g. the bumper of a parked vehicle, a towing bracket or the rear end of a truck). In this case you should not use the orientation lines as a guide when parking the car - accident risk!

U Caution

1

The MMI display shows the path of the rear end of the vehicle if you were to reverse using the current steering angle. NB: The front end of the vehicle swings out further than the rear. Please make sure you keep a sufficient distance between the vehicle and any obstacles to make sure that the exterior mirror or edge of the vehicle do not collide with the obstacle (accident risk).

Applies to vehicles: with Audi parking system advanced

Parking parallel to the roadside

Parking mode 2 can be used when parking your vehicle at the roadside.



Fig. 194 MMI display: Blue area marking aligned in parking space

 


Fig. 195 MMI display: Blue marking touches edge of pavement

The following steps apply only when there are no obstacles (such as a wall) next to the parking space. Otherwise, please follow the "Instructions for parking next to obstacles".

- Position your vehicle parallel to the roadside, about a metre away from the next parked vehicle.
- Engage reverse gear. The parking aid will be switched on and parking mode 1 will be displayed.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
-						



1

document_0900452a81b1b9de.book Seite 176 Donnerstag, 26. Juli 2007 9:16 09

Parking aid

176

- Press the control button for $\textbf{Mode} \Rightarrow$ fig. 194 () on the MMI control console. Parking mode 2 is displayed.
- Reverse and align your vehicle in such a way that the blue area marking ② borders onto the vehicle behind or onto the parking space line marking. The blue marking is an extension of the vehicle outline and reaches about five metres to the rear of the vehicle. The long side of the blue marking should border onto the kerb. The complete blue area marking must fit into the parking space.
- When the vehicle is stationary turn the steering wheel to the left as far as it will go.
- Reverse into the parking space.
- Stop the vehicle as soon as the blue curve touches the kerb \Rightarrow page 175, fig. 195.
- When the vehicle is stationary turn the steering wheel to the right as far as it will go.
- Continue to reverse into the parking space until the vehicle is standing parallel to the kerb. (3) indicates the rear bumper. You should stop reversing, at the latest, when the red orientation line (4) is bordering on an object $\Rightarrow \bigwedge$! Keep a close watch on the front of your vehicle \Rightarrow (1).

Parking next to obstacles

If an obstacle (such as a wall) is located next to the parking space, the clearance at the side of the vehicle must be larger. Position the long side of the blue marking so that there is sufficient clearance from the kerb. The marking must not touch the kerb. You must also start turning the steering wheel much earlier. The blue curve $\Rightarrow page 175$, fig. 195 must **not** touch the kerb - make sure there is sufficient clearance from the kerb.

 The reversing camera does not show the complete area behind the vehicle. It is particularly important to ensure that there are no small children or animals near the vehicle, as the reversing camera may not always be able to detect them (accident risk).

 Please note that objects which are not touching the ground may appear to be further away than they actually are (e.g. the bumper of a parked vehicle, a towing bracket or the rear end of a truck). In this case you should not use the orientation lines as a guide when parking the car - accident risk!

U Caution

The MMI display shows the path of the rear end of the vehicle if you were to reverse using the current steering angle. NB: The front end of the vehicle swings out further than the rear. Please make sure you keep a sufficient distance between the vehicle and any obstacles to make sure that the exterior mirror or edge of the vehicle do not collide with the obstacle (accident risk).

i Note

The orientation lines and markings appear on the left or right side, depending on which turn signals are on. ■

document_0900452a81b1b9de.book Seite 177 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with Audi parking system/plus/advanced Switching display and acoustic signals on and off

The settings for the graphic display* and acoustic signals are controlled via the sound system or MMI*.



Fig. 196 Display: Settings for parking

Select: Function selector button CAR > Audi parking system.

Display*

• off - The parking aid gives only acoustic warning signals when it is activated.

• **Graphic** - The graphic display appears when reversing and driving forwards.

• **Rear View*** - The picture from the reversing camera is shown when reversing and driving forwards.

 Automatic* - The picture from the reversing camera is shown when reversing and the graphic display is shown when driving forwards.

Warning beeps

- Rear volume Volume of the rear sensors
- Rear frequency Pitch of the rear sensors

- Front volume* Volume of the front sensors
- Front frequency* Pitch of the front sensors

You will hear a short test tone each time you make a new setting.

i Note

• You can also change the warning beep settings directly from the graphic display* or reversing camera* picture. Simply press the control button for (Settings)*.

• New settings are not activated until you switch on the parking aid again.

● The settings will be automatically stored and assigned to the remote control key.

Applies to vehicles: with Audi parking system/plus/advanced and towing bracket Towing bracket

In towing mode, the rear parking sensors are NOT activated when you select reverse gear or press the switch PML. This may not apply if the power socket was NOT factory-fitted. This results in the following restrictions:

Audi parking system*

 
There is no distance warning.

Audi parking system plus*

There is no rear distance warning. However, the system will still give a warning when obstacles are detected while driving forwards. The proximity graphic will switch over to towing mode.

Audi parking system advanced*

There is no rear distance warning. However, the system will still give a warning when obstacles are detected while driving forwards. The proximity graphic will switch over to towing mode. The image of the ▶



Parking aid

document_0900452a81b1b9de.book Seite 178 Donnerstag, 26. Juli 2007 9:16 09

Parking aid

٠

۲

178

reversing camera will then be shown without orientation lines and blue area markings. \blacksquare

Applies to vehicles: with Audi parking system/plus/advanced

Error messages

If you hear a long beep for a few seconds and the diode in the switch $P_{\underline{w}}^*$ starts flashing when you switch on the parking aid, a system fault has occurred. Please have the fault corrected by an Audi dealer or qualified workshop.

i Note

If the fault is not corrected before you switch off the ignition, it will only be indicated by the flashing diode in the switch $P \bowtie^*$ the next time you switch on the parking aid.



document_0900452a81b1b9de.book Seite 179 Donnerstag, 26. Juli 2007 9:16 09

HomeLink

Universal transmitter

Applies to vehicles: with HomeLink Description

The HomeLink universal transmitter can be programmed to replace the hand-held controls of devices already in use.

HomeLink allows you to conveniently activate garage doors, estate gates, security systems, home or office lighting and other electric devices by means of control buttons inside your car.

HomeLink can replace up to three hand-held transmitters operating existing devices on your property with a single universal transmitter. This will be possible for most transmitters which control the

drive units for a garage door or external gates, etc. You can programme the individual hand-held transmitters for your remote control at or near the centre of the radiator grille. This is where the control unit is located.

To be able to control systems with HomeLink, you need to perform initial programming on the HomeLink transmitter first. If systems fail to respond after the initial programming, check whether these systems work with a "rolling code" (variable security code) $\Rightarrow page 180$.

When you are programming the HomeLink universal transmitter, make sure that no persons or objects are close to the devices receiving the transmitter signals. If a gate or door is inadvertently set into motion during programming, persons might be injured or other damage caused by moving parts.

🚺 Note

• For additional information on HomeLink[®] and/or products compatible with HomeLink[®], please call the toll-free HomeLink[®] hotline (0) 08000466 35465 or alternatively +49 (0) 6838 907 277, or visit the HomeLink[®] website at: www.homelink.com

• HomeLink $^{\textcircled{B}}$ is a registered trademark of Johnson Controls. \blacksquare

Applies to vehicles: with HomeLink

Programming the universal transmitter


The HomeLink unit is programmed at the radiator grille.



Fig. 197 Operating unit in headliner



 Fig. 198 Radiator grille



HomeLink 179

document_0900452a81b1b9de.book Seite 180 Donnerstag, 26. Juli 2007 9:16 09

HomeLink

180

At the operating unit

- 1. Switch on the ignition (do not start the engine).
- Press and hold down the two outer HomeLink buttons
 ⇒ page 179, fig. 197 until the indicator diode (A)
 ⇒ page 179, fig. 197 begins to flash after about
 20 seconds. This procedure will delete the standard
 factory settings and does not need to be repeated when
 programming the other buttons.
- 3. Press the particular HomeLink button which you would like to program.
- 4. Wait until the diode (A) begins to flash. The HomeLink module now remains in training mode for 5 minutes.
- Now step in front of your vehicle with the original handheld transmitter for the garage door opener or any other device you wish to assign to the HomeLink control button.

At the radiator grille

- 6. Hold the **original hand-held transmitter** at or near the centre of your car's radiator grille \Rightarrow *page 179*, fig. 198.
- 7. Press the activator button on the original hand-held transmitter.
- As you do so, watch the turn signals on your vehicle. HomeLink confirms successful programming by flashing all four turn signals three times.
- 9. If the turn signals fail to flash three times, repeat the procedure with the transmitter held at a different distance from the radiator grille.

The proper distance between the hand-held transmitter and the HomeLink module at the radiator grille depends on the system you want to train. It may require several attempts.

The turn signals will flash **once** if the time limit for the programming mode has been exceeded. In this case the programming procedure needs to be performed again. Repeat the sequence at the operating unit starting with step 3.

The programming instructions above also apply to the other control buttons. Start with step 3 if you wish to proceed and program the other two buttons.

If the garage door or other devices still fail to be activated with the HomeLink control buttons after programming is completed, it is possible that these systems might be working with a rolling code instead of the normal fixed security code. If this is the case, a **rolling code programming** is required in addition to the steps described above. $\Rightarrow page 180$

Applies to vehicles: with HomeLink Rolling code programming

Some devices require rolling code programming of the HomeLink universal transmitter.

Identifying a rolling code

- Press the already programmed HomeLink button again and hold it down.
- Watch HomeLink diode (A) ⇒ page 179, fig. 197. If the diode starts flashing rapidly and turns into a constant light after about 2 seconds, this indicates that the device you wish to operate (e.g. a garage door opener) is equipped with a rolling code.
- Program the rolling code as follows:

document_0900452a81b1b9de.book Seite 181 Donnerstag, 26. Juli 2007 9:16 09

Activating the garage door opener drive unit

- Locate the programming button on the garage door drive. The exact location and colour of the button may vary depending on the type of garage door opener.
- Press the programming button on the door drive unit (this will normally cause a "programming mode indicator lamp" on the unit to light up). You now have about 30 seconds to start and complete the programming of the HomeLink control button on the operating unit.

Programming at the operating unit in the headliner

- Press and release the already programmed HomeLink button.
- Press the HomeLink button again to complete rolling code programming.

After programming at the operating unit in the headliner, the garage door opener should recognize the HomeLink signal and respond when the HomeLink button is pressed. Now the other control buttons can be programmed as required.

i Note

 Having a second person assist you makes programming of the rolling code easier and faster. For some makes of garage door openers the HomeLink button may have to be pressed a third time to complete the training sequence.

If you encounter problems programming the rolling code you
may find helpful information in the operating instructions of the
garage door opener or other device you wish to operate.

Applies to vehicles: with HomeLink Operating HomeLink

The programmed devices are activated by means of the HomeLink control buttons in the headliner.

- Make sure that the ignition is on.
- Press the programmed HomeLink button ⇒ page 179, fig. 197. The device assigned to that button (e.g. garage door) will be activated.

The HomeLink indicator diode \Rightarrow page 179, fig. 197 will light up when you press the button.

Applies to vehicles: with HomeLink

Erasing the button programming You can erase the complete HomeLink programming by pressing the two outer buttons.

- Switch on the ignition (do not start the engine).
- Press and hold down the two outer buttons until the indi-
- cator diode starts to flash \Rightarrow page 179, fig. 197.
- Then release the buttons.

After the programming of the HomeLink buttons has been erased, the system will return to the training mode and is ready to be reprogrammed at any time.

🚺 Note

Programmed buttons cannot be erased individually.

● For security reasons it is advisable to erase the programming of the HomeLink buttons prior to selling your vehicle. ■

 Controls
 Safety
 Driving tips
 General maintenance
 Self-help
 Technical data

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls
 Image: Controls

 Image: Controls
 Image: Controls

HomeLink

document_0900452a81b1b9de.book Seite 182 Donnerstag, 26. Juli 2007 9:16 09

HomeLink

182

Applies to vehicles: with HomeLink Re-programming a button

A HomeLink button can be re-programmed individually without affecting the other button allocations.

At the operating unit in the headliner

- Press and hold down the selected button until the indicator diode \Rightarrow page 179, fig. 197 starts flashing slowly.

At the radiator grille

- Hold the original hand-held transmitter for the garage door opener or other device directly in front of the radiator grille of your vehicle (at or near the centre)
 ⇒ page 179, fig. 198. The exact distance depends on the system that you want to program.
- Press the button on the original hand-held transmitter for the garage door opener or other device.
- As you do so, watch the turn signals on your vehicle.
 HomeLink confirms successful programming by flashing all four turn signals three times.
- If the turn signals fail to flash three times, repeat the procedure with the transmitter held at a different distance from the radiator grille.

When the turn signals have flashed three times, this means the device previously stored in HomeLink has been erased and the new system programmed in its place. To activate the new system, press the HomeLink button that has just been re-programmed.

i Note


It may require several attempts before programming is successful. When programming a new device, keep the button pressed for at least 15 seconds before trying again with the transmitter in a different position. Keep watching the turn signals during that time. ■


Applies to vehicles: with HomeLink Conformity certification


The HomeLink universal transmitter is registered in the following countries under the following certification numbers:

Country	Certification number
Andorra	16SEP2003
Belgium	RTT/D/X2064
Denmark	98.3142-266
Germany	D800038K
Finland	FI98080106
France	97619 RD
Gibraltar	RTTE 20754/0087847
Greece	JCI 05JUL2000 RTTE
Great Britain	RTTE 20754/0087847
Republic of Ireland	TRA 24/5/109/5
Iceland	IS-3418-00
Italy	DGPGF/4/341032/TB 0002573
Croatia	SRD-156/03
Luxembourg	L2433/10510-03J
Malta	WT/122/98
Monaco	PC/cp-CI.T55-03/04672
Netherlands	NL99030970
Norway	NO20000026

			HomeLin
Country	Certification number		
Austria	GZ104569-ZB/98		
Poland	URT-GP-CLBT-431-66/2002/C	1	
Portugal	JCI 03JUL2000 RTTE		
Sweden	Ue990195		
Switzerland	BAKOM 98.0746.K.P		
Slovak Republic	R 267 2001 N		
Spain	0416 00		
Czech Republic	CTU 2000 3 R 1194		
Turkey	0425/TGM-TR/JOCO-EURO		
Hungary	BB-5793-1/2000	1	
Cyprus	MCW129/95 12/2000	•	

 

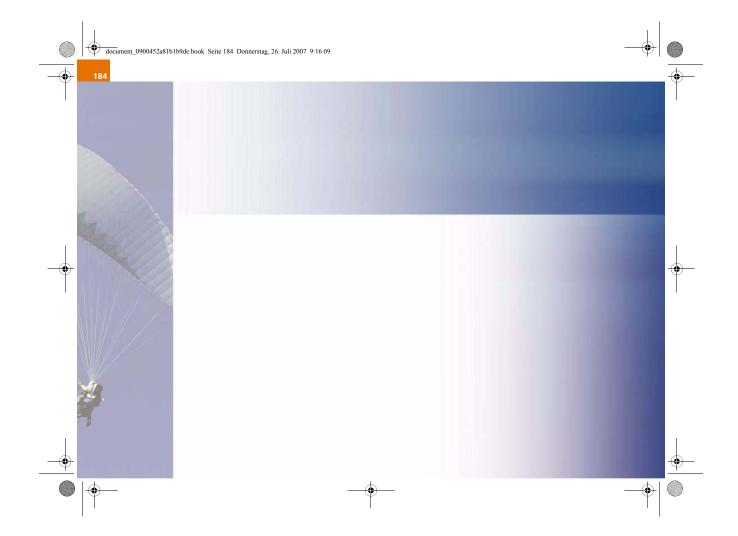

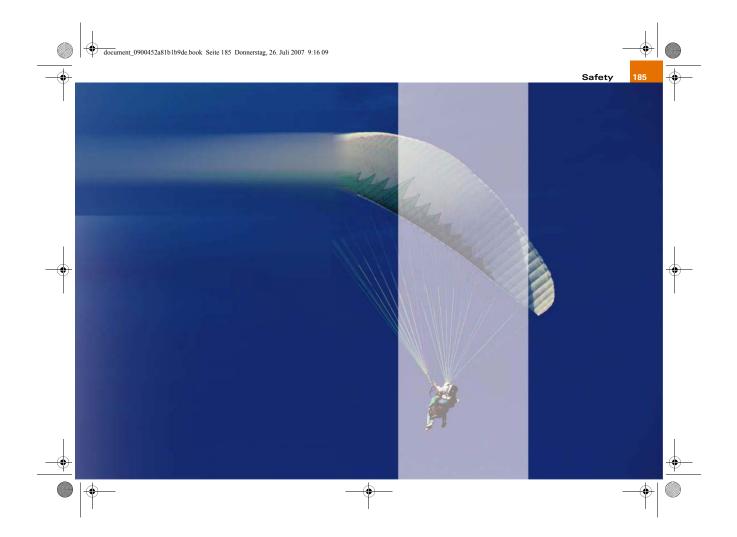

document_0900452a81b1b9de.book Seite 186 Donnerstag, 26. Juli 2007 9:16 09

Safe driving

186

Safe driving

General notes

Safety is the first priority

Your safety is our first priority.

This chapter contains important information, tips, suggestions and warnings that you should read and observe for your own safety and the safety of your passengers.

 The information in this chapter is important for the driver of the vehicle and all passengers. The other chapters in this manual (and, where applicable, in the other literature supplied with the vehicle) contain further important notes which you should read and observe for your own safety and that of your passengers.
 Ensure that the complete vehicle wallet is always in the vehicle. This is especially important when you lend or sell the vehicle to others.

Safety features

The safety features listed here are part of the vehicle's occupant restraint system. They work together to help reduce the risk of injury in a wide variety of accident situations.

Your safety and the safety of your passengers should not be left to chance. In the event of an accident, the safety features incorporated in your vehicle are capable of reducing the risk of injury. These are just a few of the safety features in your Audi:

• Optimised three-point seat belts for all seats,

- Belt force limiters for the front seats,
- Belt pre-tensioners for the front seats,
- Head restraints for all seats,
- Optimised protection against injuries of the cervical vertebrae,
- Front airbags,
- Side airbags in the front seat backrests and on the outer rear
- seats*,
- Head-protection airbags (sideguard system),
- "ISOFIX" mountings* for "ISOFIX" child safety seats on the rear seats,
- · Height-adjustable head restraints on the seats,
- Adjustable steering column.

These individual safety features are harmonised to provide you and your passengers with the best possible protection in accident situations. However, they can only be effective if you and your passengers sit in the correct position and adjust and use the safety equipment properly.

For these reasons, this chapter explains why these safety features are so important, how they can protect you, what you need to remember when using them, and how you and your passengers can gain the most benefit from them. There are also a number of important safety warnings which you and your passengers should always observe in order to minimise the risk of injury.

Safety is everyone's responsibility!

document_0900452a81b1b9de.book Seite 187 Donnerstag, 26. Juli 2007 9:16 09

Before every trip

The driver is responsible for the safety of the passengers and the safe operation of the vehicle at all times.

For your own safety and the safety of your passengers, always note the following points before every trip:

- Make sure that all lights and turn signals are working properly.
- Check the tyre pressures.
- Make sure that all windows are clean and give good visibility to the outside.
- Secure all luggage and other items carefully \Rightarrow page 79.
- Make sure that no objects can interfere with the pedals.
- Adjust the front seat, head restraint and mirrors correctly.
- Make sure that the head restraints for all passengers are adjusted to the correct position.
- Make sure that children are protected with suitable safety seats and properly worn seat belts ⇒ page 210.
- Sit in the correct position in your seat and make sure that your passengers do the same. \Rightarrow page 73.
- Fasten your seat belt correctly. Make sure that your passengers do the same ⇒ page 194.

Safe driving

 
What affects driving safety?

Safety on the road is directly related to how you drive, and can also be affected by the passengers in the vehicle.

The driver is responsible for the safety of the vehicle and all its occupants. If your ability to drive is impaired in any way, you endanger yourself and other road users $\Rightarrow \triangle$. Therefore:

- Do not let yourself be distracted by passengers or by using a mobile phone, etc.
- Never drive when your driving ability is impaired (by medication, alcohol, drugs, etc.).
- Obey all traffic regulations and speed limits and always maintain a safe distance to the vehicle in front.
- Always adjust your speed to suit the road, traffic and weather conditions.
- Take frequent breaks on long trips. Do not drive for more than two hours without a stop.
- If possible, avoid driving when you are tired or stressed.

Distractions while driving or any kind of impairment to your driving ability increase the risk of accident and injury.
 Do not store loose objects on the dashboard. These objects could fly around the interior when the vehicle is moving (under acceleration or whilst cornering) and distract the driver – this could lead to an accident.



Ψ

document_0900452a81b1b9de.book Seite 188 Donnerstag, 26. Juli 2007 9:16 09

Correct sitting positions

Safe driving

188

Correct sitting position for driver

The correct driving position is important for safe and fatigue-free driving.

 


Fig. 199 Minimum distance between driver and steering wheel



Fig. 200 Correct head restraint position for the driver

For your own safety, and to reduce the risk of injury in the event of an accident, we recommend the following driving position.

- Adjust the steering wheel so there is a distance of at least 25 cm between the steering wheel and your breastbone \Rightarrow fig. 199.

- Move the driver's seat forwards or backwards so that you can press the accelerator, brake and clutch pedals all the way to the floor with your knees slightly bent ⇒ A.
- Make sure that you can comfortably reach the top of the steering wheel.
- Adjust the head restraint so that the top of the head restraint is level with the top of your head \Rightarrow fig. 200.
- Adjust the backrest to an upright position so that your back remains in contact with the upholstery.
- Fasten your seat belt correctly \Rightarrow page 194.
- Keep both feet in the footwell so that you are in full control of the vehicle at all times.

For detailed information on how to adjust the driver's seat, see \Rightarrow page 73, "Seats and storage".

A driver who is not sitting in the correct position or who is not wearing a seat belt can be fatally injured if the airbag is triggered.
 Adjust the driver's seat so there is a distance of at least 25 cm between your breastbone and the centre of the steering wheel ⇒ fig. 199.

 While driving, always hold the steering wheel with both hands on the outside of the rim at about the 9 o'clock and 3 o'clock position. This reduces the risk of injury if the driver's airbag inflates.
 Naver hold the steering wheel at the 12 o'clock position or

 Never hold the steering wheel at the 12 o'clock position, or with your hands inside the rim or on the steering wheel hub. This could result in serious injuries to the arms, hands and head if the driver's airbag inflates.

• To reduce any risk of injury to the driver during a sudden brake application or in an accident, never drive with the backrest tilted

document_0900452a81b1b9de.book Seite 189 Donnerstag, 26. Juli 2007 9:16 09

Safe driving

WARNING (continued)

too far back. The airbag system and seat belts can only provide proper protection when the backrest is in an upright position and the driver is wearing the seat belt in the correct position. The further the backrest is tilted back, the greater the risk of injury due to incorrect positioning of the belt webbing or an incorrect sitting position.

 Adjust the head restraint properly so that it can give maximum protection.

Correct sitting position for front passenger

The front seat passenger must sit at least 25 cm away from the dash panel so that the airbag has enough room to inflate and give maximum protection in an accident.

For your own safety and to reduce the risk of injury in the event of an accident, we recommend adjusting the front passenger's seat as follows:

- Move the front passenger's seat as far back as possible $\Rightarrow \triangle$.
- Adjust the backrest to an upright position so that your back remains in contact with the upholstery.
- Adjust the head restraint so that the top of the head restraint is level with the top of your head ⇒ page 190.
- Keep both feet in the footwell in front of the seat.
- Fasten your seat belt correctly \Rightarrow page 197.

In exceptional cases you can disable the front passenger's airbag via the key-operated switch* \Rightarrow page 208.

For detailed information on how to adjust the front passenger's seat, see \Rightarrow page 73, "Seats and storage".

A passenger who is not sitting in the correct position or who is not wearing a seat belt can be fatally injured if the airbag is triggered. • Adjust the front passenger's seat so there is a distance of at least 25 cm between your breastbone and the dash panel.

 Always keep your feet on the floor when the vehicle is moving; never rest them on the instrument panel, out of the window or on the seat. If you sit in an incorrect position, you increase your risk of injury in the event of sudden braking or an accident. If the airbag is triggered, you could sustain potentially fatal injuries by sitting out of position.

 
 To reduce the risk of injury to the front passenger in the case of sudden braking or an accident, the passenger should never travel in a moving vehicle with the backrest reclined. The airbag system and seat belt can only provide proper protection when the backrest is in an upright position and the passenger is wearing the seat belt in the correct position. The further the backrest is tilted back, the greater the risk of injury due to incorrect positioning of the belt webbing or an incorrect sitting position.

 Always adjust the head restraints properly for maximum protection.

Correct sitting position for passengers in the rear

Rear seat passengers should sit upright with both feet on the floor and wear their seat belts properly whenever the vehicle is moving.

To reduce any risk of injury in the event of sudden braking or an accident, passengers in the rear seats must observe the following:



Ψ

document_0900452a81b1b9de.book Seite 190 Donnerstag, 26. Juli 2007 9:16 09

Safe driving

190

- Adjust the head restraint so that the top of the head restraint is level with the top of your head \Rightarrow page 190.
- Keep both feet in the footwell in front of the rear seat.
- Fasten your seat belt correctly \Rightarrow page 197.
- Use appropriate child restraint systems for children travelling in the vehicle \Rightarrow page 210.

Rear passengers sitting out of position can suffer severe injuries.

Always adjust the head restraints properly for maximum protection.

 Seat belts only offer maximum protection when the backrest is in an upright position and the passengers are wearing the seat belts properly. By not sitting upright, rear passengers increase the risk of injury due to incorrect positioning of the seat belt webbing.

Correct adjustment of head restraints

Properly adjusted head restraints are an important part of the vehicle's occupant protection system. They can help to reduce the risk of injuries in most accident situations.

10-185

 


Fig. 201 Correctly adjusted head restraint (seen from the front)



Fig. 202 Correctly adjusted head restraint (seen from the side)

162

38

The head restraints must be adjusted properly to provide maximum protection.

- Adjust the head restraint so that the top of the head restraint is level with the top of your head \Rightarrow fig. 201 and \Rightarrow fig. 202.

For more information on how to adjust the head restraints, see \Rightarrow page 77.

Travelling with the head restraints removed or incorrectly adjusted increases the risk of severe injuries.

 Incorrectly adjusted head restraints could lead to death in the event of a collision or accident.

 Incorrectly adjusted head restraints can also increase the risk of injury during sudden or unexpected braking or other manoeuvres.

The head restraints must always be adjusted according to the occupant's size.



document_0900452a81b1b9de.book Seite 191 Donnerstag, 26. Juli 2007 9:16 09

Examples of incorrect sitting positions

Occupants can suffer severe or fatal injuries injuries if they sit in an incorrect position while the vehicle is moving.

Seat belts can only provide maximum protection if the belt webbing is positioned correctly. Sitting out of position greatly reduces the effectiveness of the seat belts and increases the risk of injury since the belt webbing is not worn in the position for which it is designed. The driver is responsible for the safety of all vehicle occupants, especially for children.

- Never allow anyone to sit out of position while the vehicle is moving $\Rightarrow \Delta$.

The following list shows just some examples of incorrect sitting positions which can be dangerous to all occupants. The list is not complete, but will help to make you aware of possible dangers which can be avoided.

Therefore, whenever the vehicle is moving:

- never stand up in the vehicle,
- never stand on the seats,
- never kneel on the seats,
- never travel with the backrest reclined too far,
- never lean against the dash panel,
- never lie down on the rear seat,
- never sit on the front edge of a seat,
- never sit sideways,
- never lean out of the window,
- never put your feet out of the window,
- never put your feet on the dash panel.
- never put your feet on the seat cushion,

- never ride in the footwell,
- never travel on a seat without wearing the seat belt,
- never climb into the luggage compartment.

Sitting out of position increases the risk of severe injuries. Sitting out of position exposes the occupants to potentially fatal injuries: if the airbags inflate they can strike any occupant who is not in one of the designed seat positions.

Safe driving

• Before starting a trip, sit in the correct position and stay in this position as long as the vehicle is moving. Before every trip, make sure all passengers are sitting in the correct positions and remain correctly seated at all times \Rightarrow page 73, "Seats and storage".

Pedal area

Pedals

The pedals must always be free to move and must never be obstructed by floor mats or any objects in the footwell.

- Make sure that the accelerator, brake and clutch pedals are not obstructed and can be pressed all the way down to the floor.
- Make sure that all pedals are able to return freely to their original positions.

Only use floor mats which leave the pedal area free and can be securely fastened in the footwell.

If one of the brake circuits should fail, increased brake pedal travel will be required to bring the vehicle safely to a stop.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
—			-			0

1

document_0900452a81b1b9de.book Seite 192 Donnerstag, 26. Juli 2007 9:16 09

Safe driving

Any obstructions that restrict pedal travel can cause loss of vehicle control and critical situations on the road.

 Never place objects in the driver's footwell. Such objects could move under the pedals and interfere with their proper function. In the event of sudden braking or a change of direction, you would not be able to use the pedals. This could result in a loss of control and possibly cause an accident.

Floor mats on the driver's side

Use only floor mats which can be securely fastened in the footwell and do not obstruct the pedals.

- Make sure that floor mats are securely fastened and cannot interfere with the pedals $\Rightarrow \Delta$.

Use only floor mats that leave the pedal area unobstructed and are firmly secured to prevent them from slipping. You can obtain suitable floor mats from your dealer or a specialist retailer.

Any obstructions that restrict pedal travel can cause loss of vehicle control and increase the risk of serious personal injury. • Always make sure that floor mats are properly secured. • Never lay or install additional floor mats or other floor coverings over the existing floor mats; this would restrict the pedal area and possibly obstruct the pedals, which could cause an accident.

Stowing luggage safely

Luggage compartment

All luggage and other objects must be safely secured in the luggage compartment.

Loose items in the luggage compartment can shift suddenly and cause a safety hazard or impair the handling of the vehicle by changing the weight distribution.

- Distribute the load evenly in the luggage compartment \Rightarrow page 79.
- Place heavy items as far forward as possible in the luggage compartment and secure them properly.
- Use the fastening rings* provided \Rightarrow page 193 or the luggage net* for securing heavy items.

 Loose items in the luggage compartment can shift suddenly and cause a safety hazard or impair the handling of the vehicle by changing the weight distribution.

• Always stow objects in the luggage compartment and secure them on the fastening rings*.

 Transporting heavy objects may affect the vehicle's handling by shifting the centre of gravity – this could cause an accident. Take extra care when driving and adjust your speed accordingly.

 Never exceed the maximum axle loads or the maximum gross weight for the vehicle -> page 323, "Performance, weights and dimensions". Exceeding the permitted axle loads or gross weight limit can affect the vehicle's handling characteristics, and increase the risk of accidents, personal injuries or damage to the vehicle.
 Never leave your vehicle unattended when the boot lid is open.
 Children could climb into the boot and close the boot lid from the document_0900452a81b1b9de.book Seite 193 Donnerstag, 26. Juli 2007 9:16 09

MARNING (continued)

inside. In this case the child would be unable to get out of the vehicle without help. This could have fatal consequences.

 Never allow children to play in or around the vehicle. Always close and lock the boot lid and all the doors when you leave the vehicle.

• Never let passengers ride in the luggage compartment. All occupants must be properly restrained by the seat belts at all times \Rightarrow page 194.

i Note

 Air circulation in the vehicle helps reduce fogging of the windows. Used air escapes through ventilation slots in the rear of the vehicle. Make sure that these ventilation slots are not obstructed.

• Suitable belts for securing loads to the fastening rings* are commercially available.

Applies to vehicles: with fastening rings Fastening rings

Unsecured loads are a hazard to all vehicle occupants.

There are fastening rings in the luggage compartment which can be used to secure luggage and other objects \Rightarrow page 79.

 Use the fastening rings to secure items safely in the luggage compartment ⇒ A in "Loading the luggage compartment" on page 79.

During a collision or an accident, even small and light objects can possess so much energy that they can cause very severe injuries. The amount of this "kinetic energy" depends on the speed of the Safe driving

 
vehicle and the weight of the object. The most significant factor, however, is the speed of the vehicle.

An example: An object weighing 4.5 kg is lying unsecured in the vehicle. During a frontal collision at a speed of 50 km/h, this object generates a force corresponding to 20 times its weight. That means that the effective weight of the object increases to about 90 kg. You can imagine the severity of the injuries which might be sustained if this "projectile" strikes an occupant as it flies through the passenger compartment.

If items of luggage or other objects are secured to the fastening rings with inappropriate or damaged retaining cords, injuries could result in the event of sudden braking or a collision.

• To prevent pieces of luggage or other objects from flying forward, always use appropriate retaining cords which are properly secured to the fastening rings.

• Never secure a child seat on the fastening rings.



document_0900452a81b1b9de.book Seite 194 Donnerstag, 26. Juli 2007 9:16 09

Seat belts

Seat belts

۲

194

Why is it so important to use seat belts?

Seat belts provide effective protection

The common belief that passengers can brace their weight with their hands in a minor collision is false.



Fig. 203 Driver protected by the properly worn seat belt during a sudden brake manoeuvre

It is an established fact that seat belts provide good protection in accidents. Therefore wearing a seat belt is required by law in most countries.

Properly worn seat belts hold the occupants in the best position for maximum protection \Rightarrow fig. 203. The seat belts are capable of absorbing much of the kinetic energy arising in a collision. Also they help to prevent uncontrolled movements which could lead to severe injuries \Rightarrow page 195, "Important safety instructions for using seat belts".

If they wear the seat belts correctly, the passengers benefit greatly from the ability of the belts to reduce the kinetic energy gradually. The front crumple zones and other passive safety features (such as the airbag system) are also designed to absorb the kinetic energy generated in a collision. Taken together, all these features reduce the forces acting on the occupants and consequently the risk of injury.

Although these examples are based on a frontal collision, the physical principles involved are the same in other types of accidents and for vehicles with an airbag system. This is why it is so important to put on the seat belts before every trip – even when "just driving around the corner". Ensure that your passengers wear their seat belts as well $\Rightarrow \Delta$.

Properly worn seat belts have been shown to be an effective means of reducing the potential for injury and improving the chances of survival in a serious accident \Rightarrow page 195, "Forces acting in a collision".

For information on how children can travel safely in the car \Rightarrow page 210, "Points to remember if children are travelling in the car".

• Seat belts must be put on before every trip – even when driving in town. This also applies to the rear passengers (injury risk).

• During pregnancy, women should always ensure they wear a seat belt. The best way to protect the unborn child is to protect the mother ⇒ *page 198,* "Wearing and adjusting the seat belts during pregnancy". ■

document_0900452a81b1b9de.book Seite 195 Donnerstag, 26. Juli 2007 9:16 09

Important safety instructions for using seat belts

There are a number of safety points concerning the seat belts which you should remember. This will help to reduce the risk of injury in an accident.

• The seat belts can only provide maximum protection if the seats are adjusted properly \Rightarrow page 73, "Seats and storage".

• To ensure proper protection, it is important to wear the seat belts in the correct position \Rightarrow page 197, "How to wear seat belts properly". Ensure that the seat belts are worn exactly as recommended in this chapter. Belts which are not worn properly can increase the risk of injury in accidents considerably.

• Do not allow the seat belt to become twisted or jammed, or to rub on any sharp edges.

 Never allow two passengers (even children) to share the same seat belt. It is especially dangerous to place a seat belt over a child sitting on your lap.

• Do not wear the belt over hard or fragile objects (such as glasses or pens, etc.) because this can cause injuries.

 Loose, bulky clothing (such as an overcoat over a jacket) impairs the proper fit and function of the belts.

• The belts must be kept clean, otherwise the retractors may not work properly \Rightarrow page 250, "Seat belts".

 The slot in the seat belt buckle must not be blocked with paper or other objects, as this can prevent the latch plate from engaging properly.

• The latch plate of the belt must always be engaged in the correct buckle for that seat, otherwise the belt will not be fully effective.

• Check the condition of the seat belts at regular intervals. If you notice that the belt webbing, fittings, retractor mechanism or

Seat belts

WARNING (continued)

buckle of any of the belts is damaged, the belt must be replaced by a qualified workshop.

• The seat belts must not be removed or modified in any way. Do not attempt to repair a damaged belt yourself.

 Seat belts which have been worn in an accident and stretched must be replaced by a qualified workshop. The belt anchorages should also be checked.

Forces acting in a collision

The physical principles involved in a frontal impact

Very large forces are generated during a collision; these forces have to be absorbed.



Fig. 204 Passengers of a vehicle which is headed for a brick wall. They are not using seat

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
<u> </u>		-•				

document_0900452a81b1b9de.book Seite 196 Donnerstag, 26. Juli 2007 9:16 09

Seat belts

196



crashes against the wall

The physical principles involved in a frontal collision are relatively simple:

Both the moving vehicle and the passengers possess energy, which is known as "kinetic energy" \Rightarrow page 195, fig. 204. The amount of "kinetic energy" depends on the speed of the vehicle and the weight of the vehicle and passengers. The higher the speed and the greater the weight, the more energy there is to be absorbed in an accident.

The most significant factor, however, is the speed of the vehicle. If the speed doubles from 25 km/h to 50 km/h, for example, the kinetic energy increases by a factor of four. Because these passengers are not restrained by seat belts, the entire amount of kinetic energy has to be absorbed at the point of impact \Rightarrow fig. 205. This would result in serious or potentially fatal injury.

Even at urban speeds of 30 km/h to 50 km/h, the forces acting on the occupants in a collision can reach the equivalent of 1 ton (1000 kg) or more. At greater speed these forces are even higher. A rule of thumb: if the speed doubles, the forces increase by a factor of four.

Passengers who do not wear seat belts are not "attached" to the vehicle. In a frontal collision they will continue to move forward at the speed their car was travelling just before the impact.

What happens to passengers not wearing seat belts?

Passengers not wearing seat belts risk fatal injuries in the event of an accident.



Fig. 206 A driver not wearing a seat belt can be thrown forwards



Fig. 207 A rear passenger not wearing a seat belt can be thrown forwards

In a frontal collision, unbelted passengers will be thrown forwards and make violent contact with the steering wheel, dashboard, wind-screen, etc. \rightarrow fig. 206. Passengers not wearing their belts risk being thrown out of the car, resulting in potentially fatal injuries.

The common belief that occupants can brace their weight with their hands in a minor collision is false. Even at low speeds the forces acting on the body in a collision are so great that it is not possible to hold yourself in the seat.

document_0900452a81b1b9de.book Seite 197 Donnerstag, 26. Juli 2007 9:16 09

It is also important for the rear passengers to wear seat belts, as they could otherwise be thrown forwards violently in an accident. Rear passengers who do not use seat belts endanger not only themselves but also the other occupants \Rightarrow page 196, fig. 207.

How to wear seat belts properly

Putting on the three-point seat belts

Always fasten your seat belts before driving off.



Fig. 208 Positioning of head restraints and seat belts



Fig. 209 Driver's seat: Belt buckle and latch plate

- Adjust the front seat and head restraint correctly before putting on the seat belt \Rightarrow page 73, "Seats and storage". - To fasten the belt, take hold of the latch plate and pull it

Seat belts

- slowly across your chest and lap $\Rightarrow \bigwedge$.
- Insert the latch plate into the buckle for the appropriate seat and push it down until it is securely locked with an audible click \Rightarrow fig. 209.
- Pull the belt to check that it is now securely fastened.

The three-point inertia reel belts are tensioned automatically. The retractor system gives complete freedom of movement, as long as the pull on the belt is slow. Hard braking locks the belt. The belt will also lock when you accelerate, drive up or down a steep hill or in a sharp curve.

- Always make certain that the belt is positioned properly
- \Rightarrow fig. 208 risk of injury \Rightarrow page 197, "Adjusting the seat belts".

• The latch plate of the belt must always be engaged in the correct buckle for that seat. Otherwise the belt will not be fully effective and the danger of injury increases.

Adjusting the seat belts

Always position seat belts properly for maximum safety.



Fig. 210 Adjusting shoulder and lap belt

1

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
—) —			

1

document_0900452a81b1b9de.book Seite 198 Donnerstag, 26. Juli 2007 9:16 09

Seat belts

۲

198

The height of the front seat on your vehicle can be adjusted in order to match the position of the seat belt to your height.

• The diagonal part of the belt should never be positioned across the neck, but roughly over the centre of the shoulder; it should fit closely against the upper part of the body. The lap part of the belt must be worn tightly across the hips, and not over the abdomen \Rightarrow page 197, fig. 210. Pull the belt tight if necessary to take up any slack.

Always make sure that belt is positioned properly. Incorrectly worn seat belts can give rise to injuries even in a minor collision.
 Seat belts worn too loose can result in injuries because they allow excessive forward movement in a crash; the occupant will be brought to a sudden stop by the belt webbing.

Wearing and adjusting the seat belts during pregnancy

To afford the best protection for the unborn child it is important for the mother to wear the seat belt properly at all times.



Fig. 211 Positioning seat belts during pregnancy Women should always ensure they adjust the seat belt correctly during pregnancy.

- Adjust the front seat and head restraint correctly before putting on the seat belt ⇒ page 73, "Seats and storage".
- To fasten the belt, take hold of the latch plate and pull it slowly down across your chest. Wear the lap portion of the seat belt as low as possible over the hips so that there is no pressure on the stomach ⇒ fig. 211, ⇒ ▲.
- Insert the latch plate into the buckle for the appropriate seat and push it down until it is securely locked with an audible click ⇒ page 197, fig. 209.
- Pull the belt to check that it is now securely fastened.

During pregnancy, women should especially make sure to wear the lap portion of the seat belt as low as possible across the hips so that there is no pressure on the stomach. document_0900452a81b1b9de.book Seite 199 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles:

Seat belt height adjustment

Seat belt height adjusters can be used to adjust the height of the shoulder portion of the seat belt.

 


Fig. 212 Belt height adjustment for the front seats: guide fitting

- Take hold of the guide fitting and slide it up \Rightarrow fig. 212 (2), or
- Compress the adjuster (1) and slide the guide fitting downwards (2).
- After adjusting, pull the shoulder belt sharply to check that the catch on the guide fitting is engaged securely.

i Note

• The shoulder portion of the seat belt must be positioned roughly midway over the shoulder – it must never rest against the neck ⇒ ▲ in "Adjusting the seat belts" on page 197.

 It is also possible to adjust the height of the front seats to obtain the best position for the front seat belts. Seat belts

Taking off the seat belts

The red button releases the belt from the buckle.



Fig. 213 The latch plate of the belt springs out of the buckle

- Press the red button in the seat belt buckle \Rightarrow fig. 213. The latch plate will spring out of the buckle.
- Guide the belt back by hand so that it is taken up by the retractor.

 
Belt tensioners

How the belt tensioners work

The seat belts for the driver and front passenger are equipped with belt tensioners.

The seat belts on the front seats are tensioned automatically in frontal, side and rear-end impacts above a certain degree of severity. This helps to reduce the forward motion of the occupants.

In a less severe accident, or in the event of a roll-over, the belt tensioners are not activated.



document_0900452a81b1b9de.book Seite 200 Donnerstag, 26. Juli 2007 9:16 09

Seat belts

•

۲

200

 Any work on the tensioner system or removal and installation of system components for other repairs must be performed by a qualified workshop.

• The belt tensioners can only be activated once. If they have been activated at any time, the system must be replaced.

i Note

• Some smoke may be released when the belt tensioners are activated. This does not mean there is a fire in the vehicle.

• The relevant safety requirements must be observed when the vehicle or components of the system are scrapped. Your authorised Audi dealer is familiar with these regulations and will be pleased to pass on the information to you.

document_0900452a81b1b9de.book Seite 201 Donnerstag, 26. Juli 2007 9:16 09

Airbag system

Description of airbag system

General notes on airbag system

The airbag is an integral part of the car's passive safety system.

In conjunction with the three-point seat belts, the airbag system gives the front occupants additional protection for the head and chest in the event of a severe frontal collision.

In a severe side collision the side airbags and the head-protection airbags reduce the risk of injury to the occupants in the areas of the body facing the impact $\Rightarrow \Delta$.

In addition to their normal function of protecting the occupants in a collision, the seat belts also hold them in a position where the airbags can inflate properly and provide maximum protection.

The airbag system will only work with the ignition on. The airbag system is monitored electronically; the airbag warning lamp indicates whether the system is functioning properly.

The main parts of the airbag system are:

• the electronic monitoring system (control unit and sensors),

- the two front airbags,
- the front side airbags, the side airbags on the outer rear seats* and the head-protection airbags,
- the airbag warning lamp in the instrument cluster.

There is a fault in the airbag system if the warning lamp

• does not come on when the ignition is switched on,

• does not go out about 4 seconds after the ignition is switched on,

• goes out and then comes on again after the ignition is switched on.

• comes on or flickers while the car is moving.

• The airbags are not a substitute for the seat belts; they are an integral part of the car's overall passive safety system. The airbags can only offer effective protection if the occupants are wearing their seat belts. For this reason it is very important to wear the seat belts at all times \Rightarrow *page 194, "*Why is it so important to use seat belts?".

• The seat belts and airbags can only provide maximum protection if the occupants are seated correctly \Rightarrow *page 73,* "Seats and storage".

 If you do not wear a seat belt, if you lean forward, or are not seated correctly while the vehicle is in motion, you are at greater risk of injury should the airbag system be triggered in an accident.

 Components of the airbag system are located in various parts of the vehicle. If repairs to other vehicle components make it necessary to perform work on the airbag system or to remove or install parts of the airbag system, this may cause damage to the airbag system. As a result, the airbags may not inflate correctly or may not be triggered at all in an accident situation. For this reason,

you should always have the work carried out by a qualified workshop. • If a fault should occur in the airbag system, have the system

checked immediately by a qualified workshop. Otherwise the system may fail to trigger in an accident.

 Do not attempt to modify components of the airbag system in any way.

Never make any alterations to the front bumper or the body.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	—
—			<u> </u>			

Airbag system

document_0900452a81b1b9de.book Seite 202 Donnerstag, 26. Juli 2007 9:16 09

Airbag system

WARNING (continued)

Do not remove the front seats.

 The airbag system can only be activated once; if the airbag has been triggered, the system must be replaced. Should the airbag system or airbag modules have to be replaced, the qualified workshop carrying out the replacement will document all details in the appropriate section of the Service Schedule.

 If you sell the vehicle, please remember to pass on the complete Service Wallet to the new owner. If any of the airbags have been deactivated, it is important that the new owner is also given the relevant documents.

 The relevant safety requirements must be observed when the vehicle or components of the airbag or belt tensioner systems are scrapped.

• In an accident in which one or more airbags are triggered the alternator and the starter are - for safety reasons - both disconnected from the battery via a pyrotechnic circuit breaker.

- Any repairs to the pyrotechnic circuit breaker must always

be performed by a qualified workshop (accident risk). − The relevant safety requirements must be observed when the vehicle or the circuit breaker are scrapped. ■

When are the airbags triggered?

The airbag system is triggered in collisions with a severe impact.

The airbag system is designed so that the airbags for the driver and front passenger are triggered in a severe **frontal collision**.

In severe side collisions the side airbags on the impact side of the vehicle are triggered together with the head-protection airbag. The front airbags, side airbags and one of the head-protection

airbags may be triggered together in certain types of accident.

The airbag system is **not triggered** in **minor** frontal or side collisions, or in rear collisions or if the car overturns. In these situations the occupants are protected by wearing the seat belts.

Factors determining the triggering response

It is not possible to define the exact triggering response of the airbag system in all possible situations, since the circumstances in different types of accident will vary considerably. Important factors include, for example, the nature (hard or soft) of the object which the car hits, the angle of impact, vehicle speed and so on.

Whether the airbags are triggered depends primarily on the vehicle deceleration rate resulting from the collision. By processing the signals from the sensors located in the vehicle, the electronic control unit is immediately able to evaluate the severity of the collision and activate the restraint systems accordingly. If the deceleration rate is below the predefined reference value in the control unit the airbags will not be triggered, even though the accident may cause extensive damage to the car.

Note

The airbag releases a fine dust when it inflates. This is quite normal and does not mean there is a fire in the vehicle.

document_0900452a81b1b9de.book Seite 203 Donnerstag, 26. Juli 2007 9:16 09

Front airbags

Description of front airbags

The airbag system is not a substitute for the seat belts.



Fig. 214 Driver's airbag in steering wheel



Fig. 215 Front passenger's airbag in dashboard

The front airbag for the driver is located in the padded hub of the steering wheel \Rightarrow fig. 214. The front airbag for the front passenger is in the dashboard above the glove box \Rightarrow fig. 215. The locations of the airbags are marked with the word "AIRBAG".

In conjunction with the three-point seat belts, the front airbags give additional head and chest protection for the driver and front passenger in the event of a severe frontal collision $\Rightarrow \underline{A}_{i}$ in "Important safety notes on the front airbag system" on page 204.

Airbag system

How the front airbags work

When fully inflated, the airbags reduce the risk of head or chest injury.



Fig. 216 Front airbags in inflated condition

1

The airbag system is designed so that the airbags for the driver and front passenger are triggered in a severe frontal collision.

In certain types of accident the front airbags, side airbags and one of the head-protection airbags may be triggered together.

When the system is triggered, the airbags fill with a propellant gas and open out in front of the driver and front passenger \Rightarrow fig. 216. In order to provide the desired extra protection in an accident, the airbags have to inflate extremely rapidly (within fractions of a second). The fully deployed airbags cushion the forwards movement of the front occupants and help to reduce the risk of injury to the head and the upper part of the body.

Special openings in the airbag allow the gas to escape at a controlled rate to restrain the forward movement of the occupant's head and torso. Once the impact has been absorbed, the airbag deflates sufficiently for the front occupants to see forward.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
—) —			

1

document_0900452a81b1b9de.book Seite 204 Donnerstag, 26. Juli 2007 9:16 09

Airbag system

Important safety notes on the front airbag system

There are a number of safety points concerning the airbag system which you should remember. This will help to reduce the risk of injury in an accident.



Fig. 217 Minimum distance from steering wheel

It is important for the driver and front passenger to maintain a distance of at least 25 cm from the steering wheel or dashboard ⇒ fig. 217. The airbag system will not be able to give the required protection if you sit too close to the steering wheel or dashboard. There is also a risk of injury if the airbags are inflated. The front seats and head restraints must always be positioned correctly for the height of the occupant.

 If you do not wear a seat belt, if you lean forward or to the side, or are not seated correctly while the vehicle is in motion, you are at greater risk of injury. Should the airbag system be triggered in an accident there is an even greater risk of injury.

Never let a child travel on the front seat without an appropriate restraint system. If the airbag is triggered in an accident, the child could sustain serious or fatal injuries *⇒ page 210*, "Child safety".
 Never install a rearward-facing child safety seat on the front passenger's seat unless the front passenger's airbag has been

MARNING (continued)

deactivated. However, if you have no alternative but to use a rearward-facing child seat on the front passenger's seat, the front passenger's airbag must be deactivated beforehand by means of the key-operated switch* \Rightarrow *page 208.* Failure to observe this precaution could result in serious or potentially fatal injury.

 Occupants sitting in the front of the car must never carry any objects or pets in the space between them and the airbags, or allow children or other passengers to travel in this position.

 Do not cover or stick anything on the steering wheel hub or the soft plastic surface of the airbag unit on the passenger's side of the dashboard, and do not obstruct or modify them in any way. These parts should only be cleaned with a dry cloth (or with a cloth moistened with plain water). It is also important not to attach any objects such as cup holders or telephone mountings to the surfaces covering the airbag units.

 Any work on the airbag system or removal and installation of the airbag components for other repairs (such as repairs to the steering wheel or removal of seats) must be performed by a qual ified workshop.

i Note

If necessary, you can deactivate the front passenger's airbag by means of the key-operated switch* \Rightarrow page 208. \blacksquare

document_0900452a81b1b9de.book Seite 205 Donnerstag, 26. Juli 2007 9:16 09

Side airbags

Description of side airbags

The airbag system is not a substitute for the seat belts.



Fig. 218 Location of side airbag in driver's

The side airbags are located in the backrest padding of the front seats \Rightarrow fig. 218. The locations of the airbags are marked with the word "AIRBAG".

In conjunction with the three-point seat belts, the side airbags give the occupants additional protection for the whole upper part of the body (i.e. the chest, stomach and pelvis) in the event of a severe side collision $\Rightarrow \Delta$ in "Important safety notes on the side airbag system" on page 206.

In a side collision the side airbags reduce the risk of injury to the areas of the body facing the impact.

If the side airbags are activated, the head-protection airbags (sideguard system) are always triggered at the same time for additional protection on the side of the vehicle facing the impact $\Rightarrow page 207.$ Airbag system

How the side airbags work

When fully inflated, the side airbags reduce the risk of injuries to the upper part of the body.



Fig. 219 Side airbags

 
In certain types of side collisions the side airbags (front and rear*) are triggered on the impact side of the vehicle \Rightarrow fig. 219.

The front airbags, side airbags and the head-protection airbag may be triggered together in certain types of accident.

When the system is triggered, the airbag is filled with propellant gas.

In order to provide the desired extra protection in an accident, the airbags have to inflate extremely rapidly (within fractions of a second). The airbag releases a fine dust when it inflates. This is quite normal and does not mean there is a fire in the vehicle.

When fully deployed, the airbags cushion the impact for the occupants and help to reduce the risk of injury to the whole upper part of the body (i.e. the chest, stomach and pelvis) on the side facing the door.



document_0900452a81b1b9de.book Seite 206 Donnerstag, 26. Juli 2007 9:16 09

Airbag system

۲

Important safety notes on the side airbag system

There are a number of safety points concerning the airbag system which you should remember. This will help to reduce the risk of injury in an accident.

If you do not wear a seat belt, if you lean forward, or are not seated correctly while the vehicle is in motion, you are at greater risk of injury should the side airbags on the front seats or the outer rear seats* be triggered in an accident. This applies particularly to children if they are not properly protected by a child restraint system ⇒ page 212, "Important notes on side airbags and child safety".

 If children are not seated correctly, they are at greater risk of injury in an accident. This is particularly the case if the child is travelling on the front passenger's seat and the airbag system is triggered. This could result in serious or potentially fatal injury ⇒ page 210, "Child safety".

 It is also important not to attach any accessories (such as cup holders) to the doors. This would impair the protection offered by the side airbags (front and rear*).

The sensors for the airbags are located in the front doors. You
must therefore not make any modifications to the doors or door
trim (e.g. retrofitting loudspeakers), as this could impair the function of the side airbags. Any damage to the front doors could lead
to faults in the system. Repairs or any other work on the front
doors must therefore always be carried out by a qualified workshop.

 The built-in coat hooks should only be used for lightweight clothing. Do not leave any heavy or sharp-edged objects in the pockets.

MARNING (continued)

• Do not apply excessive force to the sides of the backrests (such as hard knocks or kicks), as this could damage parts of the system. The side airbags could then fail to operate when required.

 If you intend to fit protective covers over the seats, these must be of the specific type approved for use on Audi seats with side airbags. Conventional seat covers would obstruct the side airbag when it inflates out of the backrest, and seriously reduce the airbag's effectiveness.

 Any damage to the original seat upholstery or around the seams of the side airbag units must be repaired immediately by a qualified workshop.

 Any work involving the side airbag system or removal and installation of the airbag components for other repairs (such as repairs to the seats) must always be performed by a qualified workshop. Otherwise the airbag system may fail to work properly. document_0900452a81b1b9de.book Seite 207 Donnerstag, 26. Juli 2007 9:16 09

Airbag system

Head-protection airbags (sideguard)

Description of head-protection airbags

The head-protection airbags work together with the side airbag system to give extra protection in a side impact.



Fig. 220 Location of head-protection airbags above the doors

The head-protection airbags are located above the doors on the left and right sides of the vehicle \Rightarrow *page 207*, fig. 220. The locations of the airbags are marked with the word "AIRBAG".

In conjunction with the three-point seat belts and side airbags, the head-protection airbags give the occupants additional protection against head and neck injuries in a severe side collision $\Rightarrow \Delta$ in "Important safety notes on the head-protection airbags" on page 208.

Together with other design features (including cross-braces in the seats and the overall strength of the body structure), the sideguard system offers an effective further improvement to occupant protection in side impacts.

How the head-protection airbags work

When fully inflated, the airbags reduce the risk of head or chest injury in a side collision.



Fig. 221 Head-protection airbags in inflated condition

In certain types of side collisions the head-protection airbag is triggered together with the side airbag on the impact side of the vehicle \Rightarrow fig. 221.

When the system is triggered, the airbag fills with a propellant gas and covers the entire area in front of the side windows, including the door pillars. In this way the system is able to protect both the front and the rear occupants on the side of the vehicle where the impact occurs. The head-protection airbag inflates to soften the impact if an occupant strikes parts of the interior or objects outside the vehicle with their head. By reducing the head impact and restraining uncontrolled movement of the head, the airbag also reduces the forces acting on the neck. In addition, since it covers the front door pillar when fully inflated, the head-protection airbag also gives extra protection if the car should collide with an obstacle at an oblique angle.

The front airbags, side airbags and head-protection airbags may be triggered together in certain types of accident.

In order to provide the desired extra protection in an accident, the airbags have to inflate extremely rapidly (within fractions of a



document_0900452a81b1b9de.book Seite 208 Donnerstag, 26. Juli 2007 9:16 09

Airbag system

۲

208

second). The airbag releases a fine dust when it inflates. This is quite normal and does not mean there is a fire in the vehicle. \blacksquare

Important safety notes on the headprotection airbags

There are a number of safety points concerning the airbag system which you should remember. This will help to reduce the risk of injury in an accident.

• It is important to ensure that the area around the openings for the head-protection airbags remains unobstructed at all times, so that the airbags can inflate properly if needed.

 The built-in coat hooks should only be used for lightweight clothing. Do not leave any heavy or sharp-edged objects in the pockets. When using the coat hooks, do not hang the clothes on coat hangers.

 The space between the passengers and the head-protection airbags must never be occupied by children, other passengers or pets. Passengers should never lean out or put a hand or arm out of the window while the vehicle is in motion.

• Do not move the sun visors out to cover the side windows if there is anything attached to them (such as pens or a remote control for the garage door). These objects could cause injury if the head-protection airbag is triggered.

The sensors for the airbags are located in the front doors. You
must therefore not make any modifications to the doors or door
rim (e.g. retrofitting loudspeakers), as this could impair the function of the side airbags. Any damage to the front doors could lead
to faults in the system. Repairs or any other work on the front
doors must therefore always be carried out by a qualified workshop.

MARNING (continued)

• Where sun blinds are fitted on the rear doors, these must not obstruct or impair the airbags in any way.

 If unsuitable accessories are installed near the head-protection airbag, the protection afforded by the airbag can be seriously impaired if the system is triggered. When the head-protection airbag opens, parts of these accessories could be thrown into the vehicle and injure passengers
 page 277.

 Any work involving the head-protection airbags, or removal and installation of the airbag components for other repairs (such as repairs to the roof liner), must always be performed by a qualified workshop. Otherwise the airbag system may fail to work properly.

Applies to vehicles: with key-operated switch for front passenger's airbag Deactivating the front passenger's airbag via the key-operated switch

If an airbag has been deactivated, it should be reactivated as soon as possible so that it can continue to give the required protection.



Fig. 222 Key-operated switch in glove box for deactivating front passenger's airbag document_0900452a81b1b9de.book Seite 209 Donnerstag, 26. Juli 2007 9:16 09



Fig. 223 Lamp indicates that front passenger's airbag has been deactivated via key-operated switch

The key-operated switch for deactivating the front passenger's airbag is located in the glove box \Rightarrow fig. 222.

- To deactivate the front passenger's airbag, insert the ignition key into the switch and turn it to position (FF).
- The front passenger's airbag can be reactivated by turning the key to position (19).

Deactivating front passenger's airbag when a child safety seat is in use

If you have no alternative but to install a rearward-facing child safety seat on the front passenger's seat you must deactivate the front passenger's airbag beforehand.

We recommend, however, that child seats should be only fitted on the rear seat so that the front passenger's airbag can remain functional and provide protection in an accident \Rightarrow page 210.

Monitoring of airbag system

The airbag warning lamp will light up for a few seconds every time the ignition is switched on.

If the front passenger's airbag has been deactivated via the keyoperated switch, the indicator lamp "PASSENGER AIRBAG OFF" will light up constantly as a reminder \Rightarrow *page 209*, fig. 223. Please refer also to the description of the \$ warning lamp in the instrument cluster \Rightarrow *page 17*.

Airbag system

When the front passenger's airbag is deactivated using the keyoperated switch, the seat belt warning lamp for the front passenger $4 \Rightarrow page 18$ is also switched off.

 
 If you have no alternative but to install a rearward-facing child seat on the front passenger's seat, the front passenger's airbag must be deactivated beforehand. Potentially fatal injuries to the child can result if the front passenger's airbag is not deactivated! ⇒ page 211, "Using a child safety seat on the front passenger's seat"

• If you have deactivated the front passenger's airbag, reactivate it as soon as the child seat is no longer needed so that the airbag can continue to give the required protection.

• It is the driver's responsibility to ensure that the key-operated switch is set to the correct position.

i Note

All the other airbags in the car will remain functional if the front passenger's airbag has been deactivated with the key-operated switch.



document_0900452a81b1b9de.book Seite 210 Donnerstag, 26. Juli 2007 9:16 09

Child safety

210

Child safety

Points to remember if children are travelling in the car

Introduction

Statistics show that children are generally safer on the rear seat than on the front passenger's seat.

Children under 12 years of age should normally travel on the rear seat ²⁾. Children travelling on the rear seat must use a child restraint system or the seat belts provided, depending on their age, height and weight. For safety reasons, the child restraint system should be installed behind the front passenger's seat.

The physical principles involved and the forces acting in a collision apply to children just as much as adults \Rightarrow *page 195,* "Forces acting in a collision". But, unlike adults, children do not have fully developed muscle and bone structures. This means that children are subject to a greater risk of injury.

To reduce this risk, children must always use special child restraint systems when travelling in the car.

Use only child restraint systems which are officially approved under the European standard ECE R 44 and are suitable for the child. ECE R refers to the Economic Commission of Europe Recommendation, which categorises child restraint systems in 5 groups \Rightarrow page 213, "Child seat categories". Child restraints that have been tested and approved under the ECE R 44 standard bear the ECE-R 44 test mark on the seat (the letter E in a circle with the test number below it).

We recommend using child restraint systems from the range of Audi Genuine Accessories available from Audi dealers. The "Huckepack" range includes suitable restraint systems for all ages.

2) Observe any restrictions or regulations to the contrary.

These systems have been specially developed and tested for use in Audi vehicles and comply with the ECE-R 44 standard.

Follow the manufacturer's instructions and observe any statutory requirements when installing and using child restraints $\Rightarrow \Delta$ in "Important safety notes for using child safety seats".

Important safety notes for using child safety seats

Correct use of child safety seats can help to reduce the risk of injury in an accident.

• All vehicle occupants, especially children, must wear a seat belt while the vehicle is in motion.

 Children who are less than 1.5 metres tall must not wear a normal seat belt without a child restraint, as this could cause injuries to the abdominal and neck areas.

Babies and children must never travel on another occupant's lap.

• A suitable child safety seat can protect your child \Rightarrow page 213, "Child safety seats".

• Never allow two children to occupy one child safety seat.

Never leave a child without supervision in a child safety seat.
Never allow a child to travel in the car without a suitable child restraint.

 Never allow a child to stand up or kneel on a seat while the car is moving. In an accident, the child could be catapulted through the car, causing possibly fatal injuries to itself and other occupants. document_0900452a81b1b9de.book Seite 211 Donnerstag, 26. Juli 2007 9:16 09

MARNING (continued)

• If children lean forward or are otherwise out of position when the car is moving, they are at greater risk of injury in an accident. This is particularly the case if the child is travelling on the front passenger's seat and the airbag system is triggered in an accident. There is then a risk of serious or potentially fatal injury.

 To ensure proper protection, it is important to wear the seat belts in the correct position -> page 197, "How to wear seat belts properly". Always check that the belt is properly positioned according to the instructions provided by the manufacturer of the child safety seat. Incorrectly worn seat belts can give rise to injurise even in a minor collision.

• Never install a rearward-facing child safety seat on the front passenger's seat if the front passenger's airbag has not been deac tivated ⇒ page 211.

• Extra caution is advised if you are installing a child safety seat using the same mounting bolts as the existing car seat belts. The bolts must be screwed in all the way to the full depth of the mounting holes and tightened to a torque of 50 Nm. Failure to observe this precaution could result in potentially fatal injury. We recommend having the installation performed by a qualified workshop.

Using a child safety seat on the front passenger's seat

Whenever possible, child safety seats should always be installed on the rear seat.

For safety reasons, we recommend that child safety seats should be installed on the rear seats whenever possible. However, if you have to use a child seat on the front passenger's seat when there is **no other alternative**, it is most important to note the following warnings:

Child safety

 Do not use a rearward-facing child safety seat on the front passenger's seat unless the front passenger's airbag has been deactivated. The child seat would be directly in the path of the airbag as it inflates, and the child could sustain serious or fatal injuries if the airbag were to be deployed.

 However, if you have no alternative but to use a rearwardfacing child seat on the front passenger's seat, the front passenger's airbag must be deactivated beforehand by means of the key-operated switch^{*} ⇒ page 208. Failure to observe this precaution could result in serious or potentially fatal injury.

• Make sure that the front passenger's airbag is reactivated by means of the key-operated switch* as soon as the child seat is no longer needed on the front passenger's seat.

• When using a child safety seat of the type which faces in the direction of travel, the front passenger's seat must be moved back to the rearmost position.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
) —			0

document_0900452a81b1b9de.book Seite 212 Donnerstag, 26. Juli 2007 9:16 09

Child safety

۲

Applies to vehicles: with side airbags

Important notes on side airbags and child safety

Children must never sit too close to the opening for the side airbag.



Fig. 224 Not properly restrained, and too close to the opening for the side airbag



Fig. 225 Correctly seated in a suitable child safety seat

The side airbags offer increased protection in a side-on collision. In order to be effective, the side airbags need to inflate very quickly (within fractions of a second) $\Rightarrow page 205$, "How the side airbags work".

The airbag inflates with such force that injury can be caused if the occupant is not sitting upright, or if there are any objects close to the opening for the side airbag.

This applies particularly to children if they are travelling in a way which does not comply with the statutory safety regulations.

Incorrect position – danger of injury from the side airbag

If the side airbag were to inflate in an accident, it would strike the child on the head and most likely cause serious injury \Rightarrow fig. 224.

Correct position – properly restrained in a suitable child safety seat

The child is correctly seated in a suitable child restraint system on the rear seat \Rightarrow fig. 225. There is enough space between the child and the opening for the side airbag.

In an accident, the airbag would be able to inflate completely to offer maximum protection.

To help prevent serious injury, children travelling in the vehicle must always be protected with a restraint system which is suited to their age, height and weight.

• The child's head must always be well away from the opening for the side airbag. There is a risk of suffering injury.

 Do not leave or place any objects in the space next to the side airbag. There is a risk of suffering injury.

i Note

If required, you can have the side airbags for the rear passengers deactivated by a qualified workshop. \blacksquare



document_0900452a81b1b9de.book Seite 213 Donnerstag, 26. Juli 2007 9:16 09

Child safety seats

Child seat categories

Only use child restraint systems that are officially approved and suitable for the child.

Child restraint systems are covered by the European standard ECE R 44 (issued by the Economic Commission of Europe). The child seats are divided into 5 categories:

Category	Weight	
0	0 -10 kg	\Rightarrow page 213
0 +	up to 13 kg	\Rightarrow page 213
1	9 - 18 kg	\Rightarrow page 214
2	15 - 25 kg	\Rightarrow page 214
3	22 - 36 kg	\Rightarrow page 214

Children who are taller than 1.5 metres can use the existing seat belts without a booster cushion.

Child restraints that have been tested and approved under the ECE R 44 standard bear the ECE-R 44 test mark on the seat (the letter E in a circle with the test number below it).

Child safety

Child safety seat: category 0 / 0+

A suitable child safety seat and a correctly worn seat belt can protect your child.

 


Fig. 226 Child safety seat: Category 0 / 0+

Babies up to about 9 months old / 10 kg and infants up to about 18 months old / 13 kg are best protected by child safety seats that can be adjusted to a horizontal position \Rightarrow fig. 226.

Follow the manufacturer's instructions and observe any statutory requirements when installing and using child restraints \Rightarrow page 210, "Important safety notes for using child safety seats".

Never install a rearward-facing child safety seat on the front passenger's seat if the front passenger's airbag has not been dead tivated \Rightarrow page 211. This can result in serious or possibly fatal injury. 📕



document_0900452a81b1b9de.book Seite 214 Donnerstag, 26. Juli 2007 9:16 09

Child safety

۲

214

Child safety seats: category 1

A suitable child safety seat and a correctly worn seat belt can protect your child.

B8K-0624



Fig. 227 A category 1 forward-facing child seat fitted on the rear seat

Babies and small children up to about 4 years of age weighing between 9 and 18 kg are best protected by child safety seats of the type where the child faces the front of the vehicle \Rightarrow fig. 227.

Follow the manufacturer's instructions and observe any statutory requirements when installing and using child restraints \Rightarrow page 210, "Important safety notes for using child safety seats".

Never install a rearward-facing child safety seat on the front passenger's seat if the front passenger's airbag has not been deactivated \Rightarrow *page 211*. This can result in serious or possibly fatal injury.

Child safety seats: category 2/3

A suitable child safety seat and a correctly worn seat belt can protect your child.







Fig. 229 A category 2/3 forward-facing child seat (without backrest) fitted on the

rear seat

Children up to about 12 years of age weighing between 15 and 36 kg but less than 1.5 metres tall are best protected by a child safety seat in conjunction with the three-point seat belts \Rightarrow fig. 228 and \Rightarrow fig. 229.

Follow the manufacturer's instructions and observe any statutory requirements when installing and using child restraints \Rightarrow page 210, "Important safety notes for using child safety seats".



document_0900452a81b1b9de.book Seite 215 Donnerstag, 26. Juli 2007 9:16 09



•

4

The diagonal part of the belt should be positioned roughly over the centre of the shoulder and fit closely against the upper part of the body. It must never be allowed to run across the neck. The lap part of the belt should fit closely over the hips. It must not be positioned over the stomach. Pull the belt tight if necessary to take up any slack.

i Note

We recommend that you fit child safety seats with backrests.

 






Fig. 230 Example of an approval number on a child safety seat

2 Manufacturer's serial number. The label also shows information on the use and weight class of the child seat.

(1) Approval number


List of recommended child restraint systems

Weight class	Identification "Huckepack"	Audi Genuine accessories catalogue number	Manufacturer	Model	Approval number
0+ (up to 13 kg)	G0 Plus	00A.019.900.A	Britax Römer	Baby Safe Plus	E1 03301146
1 (9 to 18 kg)	G1 ISOFIX Duo Plus	00A.019.909.B	Britax Römer	Duo Plus	E1 03301133
2 (15 to 25 kg)	1)	1)	1)	1)	1)
3 (22 to 36 kg)	1)	1)	1)	1)	1)

¹⁾ Under development.

For the current range of child seats from Audi Genuine Accessories visit: http://www.audi.com

					Child safety
Extended list of re	ecommended ch	ild restraint systems Catalogue number		Model / Mode of securing seat	Approval number
0 - 1 (up to 18 kg)	ISOFIX RWF	4590.xx, 4710.xx ¹⁾	FAIR	FAIR G0/ 1 rearward-facing with vehi- cle-specific platform type A (RWF)	E4 04443513
1 (9 to 18 kg)	ISOFIX FWF	4590.xx, 4610.xx ¹⁾	FAIR	FAIR G0/ 1 forward-facing with vehicle- specific platform type A (FWF)	E4 04443513
	Universal	4590.xx ¹⁾	FAIR	FAIR G0/ 1 standard three-point seat belt ²⁾	E4 03443416

 

document_0900452a81b1b9de.book Seite 218 Donnerstag, 26. Juli 2007 9:16 09

Child safety

218

Possible alternatives for securing a child safety seat

A child safety seat can be secured on the rear seats and on the front passenger's seat.

The following alternatives are available for safely securing a child safety seat on the rear seats and on the front passenger's seat.

• Child safety seats of the categories **0 to 3** can be secured with the standard three-point seat belts.

• Child safety seats of the categories 0, 0+ and 1 with the "ISOFIX" system can be secured without seat belts using the "ISOFIX" retainers* \Rightarrow page 218.

Compatibility of vehicle seat positions for child safety seats (according to EC directive 77/541):

Weight class	Front passen- ger's seat	Rear seats		
0, 0+	u , a, b, c	u, d		
1	u , a, b, c	u, d		
2	u, a	u		
3	u, a	u		

(u) "universally compatible"

(a) The front passenger's *backrest* must be set as far forward as possible or adapted to the child safety seat as required, and the seat height must be adjusted to its highest position.

- b The front passenger's airbag must be deactivated if a rearwardfacing child seat is used.
- (c) The front passenger's seat can be equipped with optional "ISOFIX" retainers.

d The rear seats can be equipped with optional "ISOFIX" retainers.

While the vehicle is moving, children must always be protected with a restraint system which is suited to their age, height and weight. Please refer to the chapter "Child seat categories".

 Never install a rearward-facing child safety seat on the front passenger's seat unless the front passenger's airbag has been deactivated. This could result in potentially fatal injuries. If you have no alternative but to let a child travel on the front passenger's seat, the front passenger's airbag must be deactivated beforehand. Please refer to the chapter "Deactivating airbags".

 Note the important information and warnings concerning the use of child safety seats found in the chapter "Important safety notes when using child safety seats" and in the installation instructions provided by the manufacturer of the child safety seat.

Applies to vehicles: with ISOFIX system "ISOFIX" child seat mounting system


Child safety seats with the "ISOFIX" system can be secured quickly and easily.



Fig. 231 The ISOFIX child safety seat is pushed into the protective sleeves.

ь


When removing or fitting the child safety seat, please be sure to follow the manufacturer's instructions.

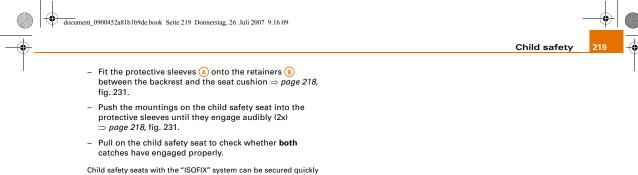

Child safety seats with the "ISOFIX" system can be secured quickly and safely on the rear seat* or on the front passenger's seat*. Detailed fitting instructions are supplied with the child safety seat. Child seats with "ISOFIX" mountings are available from Audi dealers and specialist retailers.

If required, the "ISOFIX" mounting system can be retrofitted.

 The retainers used here are specially designed for child safety seats with "ISOFIX" mountings. Do not attempt to secure other types of child safety seat, seat betts or other objects with these retainers – this could result in serious or possibly fatal injury.







document_0900452a81b1b9de.book Seite 222 Donnerstag, 26. Juli 2007 9:16 09

Intelligent technology

Intelligent technology

Electronic stabilisation program (ESP)

Description

ESP increases the car's stability. It reduces the tendency to skid and improves the stability and roadholding of the vehicle. ESP detects critical handling situations, such as understeer, oversteer and wheelspin on the driven wheels. It stabilises the vehicle by braking individual wheels or by reducing the engine torque. The warning lamp \mathcal{B} in the instrument cluster starts flashing as soon as the ESP intervenes.

The ESP incorporates the functions of the anti-lock brake system (ABS), the traction control system (ASR), the electronic differential lock (EDL) and the dynamic steering*.

Anti-lock brake system (ABS)

ABS prevents the wheels from locking up under braking until the vehicle has reached a virtual standstill. You can continue to steer the vehicle even when the brakes are on full. Keep your foot on the brake pedal and do not pump the brakes. You will feel the brake pedal pulsate while the anti-lock brake system is working.

Brake assist system

The brake assist system can speed up the braking process and shorten the braking distance. It automatically boosts the braking force if you press the brake pedal quickly in an emergency. On vehicles with adaptive cruise control*, the brake assist system will build up a small amount of pressure in the hydraulic brake system if it senses that you are too close to the vehicle in front.

Traction control system (ASR)

In the event of wheelspin, the traction control system reduces the engine torque to match the amount of grip available. This helps the car to start moving, accelerate or climb a gradient.

Electronic differential lock (EDL)

When the EDL detects wheelspin, it brakes the spinning wheel and directs the power to the other driven wheel (or wheels on quattro* versions). This function is active up to about 100 km/h.

To prevent the disc brake of the braked wheel from overheating, the EDL cuts out automatically if subjected to excessive loads. The vehicle can still be driven. The EDL will switch on again automatically when the brake has cooled down.

Dynamic steering*

On vehicles with dynamic steering*, the ESP can also intervene in the steering to stabilise the vehicle in critical situations.



 The grip provided by the ESP, ABS, ASR, EDL and dynamic steering* systems is still subject to the physical limits of adhesion.
 Always bear this in mind, especially on wet or slippery roads. If you notice the systems cutting in, you should reduce your speed immediately to suit the road and traffic conditions. Do not let the extra safety provided tempt you into taking any risks when driving – this can cause accidents.

 Please remember that the accident risk always increases if you drive fast, especially in corners or on a slippery road, or if you follow too close behind the vehicle in front of you. Please bear in mind that even ESP, ABS, brake assist, EDL, ASR and dynamic steering* cannot compensate for the increased accident risk.

 When accelerating on a uniformly slippery surface (for instance all four wheels on ice or snow), press the accelerator gradually and carefully. The driven wheels may otherwise start to spin (in spite of the integrated control systems), which would impair the car's stability and could lead to an accident. document_0900452a81b1b9de.book Seite 223 Donnerstag, 26. Juli 2007 9:16 09

Intelligent technology



Þ

i Note

• To ensure that the ASR works properly, all four wheels must be fitted with identical tyres. Any differences in the rolling radius of the tyres can cause the system to reduce engine power when this is not desired.

• Should a malfunction occur in the ABS or EDL, both the ABS warning lamp Θ and the ESP warning lamp $2 \Rightarrow page 19$ will light up.

• In the event of a malfunction in the ESP system, the warning lamp $\mathfrak{R} \Rightarrow$ page 17 will light up.

• If a malfunction should occur in the ABS, the ESP, EDL and ASR will also be out of action.

• The systems can make noises when they intervene.

Switching on and off

The ESP is switched on automatically when the engine is started.



Fig. 232 Version A: Centre console (bottom), ESP OFF button



Switching off the traction control system (ASR)

In particular circumstances, it may be advisable to switch off the traction control system (ASR) to allow a certain amount of wheel slip. For example:

- Rocking the car backwards and forwards to free it
- Driving in deep snow or on loose surfaces
- Driving with snow chains

Press the $\overline{[SP OFF]}$ button briefly \Rightarrow fig. 232 or \Rightarrow fig. 233. The warning lamp $\frac{2}{5}$ will light up and the message **ASR off** will appear in the driver information system display.

The traction control system (ASR) can only be switched off at speeds below 50 km/h on vehicles with front-wheel drive. At 70 km/h it will switch on again automatically. The ASR can be deactivated at any speed on vehicles with four-wheel drive.

Switching off the ESP

Press the \fbox{ESPOFF} button for longer than 3 seconds. The ESP warning lamp \fbox{Will} ight up and the message ESP switched off will appear in the display. The ASR is also deactivated when the ESP is switched off.

Switching on

Press the <u>ESP OFF</u> button again. The message **ESP/ASR on** will appear briefly on the display.



document_0900452a81b1b9de.book Seite 224 Donnerstag, 26. Juli 2007 9:16 09

Intelligent technology

You should switch off the ESP only if your driving ability and traffic conditions allow you to do so safely. Please note that, when the ASR and ESP are switched off, the driven wheels may start to spin, causing the vehicle to lose grip, in particular on slippery or wet roads - danger of skidding!

i Note

The ASR and ESP cannot be switched off when the adaptive cruise control (ACC)* is on.

Brakes

New brake pads

New brake pads do not give full braking effect for the first 400 km, they must first be "bedded in". However, you can compensate for the slightly reduced braking effect by applying more pressure on the brake pedal. Avoid placing a heavy load on the brakes during the running-in period.

Wear

The rate of wear on the **brake pads** depends a great deal on how you drive and the conditions in which the vehicle is operated. Negative factors are, for instance, city traffic, frequent short trips or hard driving with abrupt starts and stops.

Wet roads; road salt

When you are driving at a speed *higher than* 80 km/h and have the windscreen wipers *switched* on the brake pads are very briefly brought into contact with the brake discs. This automatic process which goes unnoticed by the driver is carried out at regular intervals and is intended to improve braking response in wet conditions.

In certain conditions, such as in heavy rain, or after washing the car or driving through water, the full braking effect can be delayed by moisture (or in winter by ice) on the discs and brake pads. The brakes should be "dried" by pressing the pedal to restore full braking effect.

The effectiveness of the brakes can also be temporarily reduced if the car is driven for some distance without using the brakes when there is a lot of salt on the road in winter. The layer of salt that accumulates on the discs and pads can be removed with a few cautious brake applications.

Corrosion

There may be a tendency for dirt to build up on the brake pads and corrosion to form on the discs if the car is used infrequently, or if you only drive low mileages without using the brakes very much.

If the brakes are not used frequently, or if corrosion has formed on the discs, it is advisable to clean off the pads and discs by braking firmly a few times from a moderately high speed $\Rightarrow \Delta$.

Faults in the brake system

If the brake pedal travel should ever increase *suddenly*, this may mean that one of the two brake circuits has failed. Drive immediately to the nearest qualified workshop and have the fault rectified. On the way to the dealer, be prepared to use more pressure on the brake pedal and allow for longer stopping distances.

Low brake fluid level

Malfunctions can occur in the brake system if the brake fluid level is too low. The brake fluid level is monitored electronically.

Brake servo

The brake servo amplifies the pressure you apply to the brake pedal. It only works when the engine is running.

document_0900452a81b1b9de.book Seite 225 Donnerstag, 26. Juli 2007 9:16 09

Intelligent technology

♥ | ● 25 ●

 When applying the brakes to clean off deposits on the pads and discs, select a clear, dry road. Be sure not to inconvenience or endanger other road users; do not risk an accident.

 Never let the car coast with the engine switched off (this can cause accidents).

U Caution

 Never let the brakes "drag" by leaving your foot on the pedal when you do not really intend to brake. This overheats the brakes, resulting in longer stopping distances and greater wear.

• Before driving down a long, steep gradient, it is advisable to reduce speed and move the selector lever to a lower gear. In this way you will make use of the engine braking effect and relieve the load on the brakes. If you still have to use the brakes, it is better to brake firmly at intervals than to apply the brakes continuously.

i Note

• If the brake servo is out of action due to a malfunction, or if the car has to be towed, you will have to press the brake pedal considerably harder to make up for the lack of servo assistance.

• If you wish to equip the car with accessories such as a front spoiler or wheel covers, it is important that the flow of air to the front wheels is not obstructed, otherwise the brakes can overheat.

Power steering (servotronic)

The power steering assists the driver when turning the steering wheel (with the engine running).

The power steering assists the driver by reducing the force needed to turn the steering wheel. The degree of power assistance is adapted *electronically*, depending on the speed.

intelligent technolo

If a fault should occur in the *servotronic* system the *power steering* will still operate. The degree of power assistance will, however, no longer adapt to different speeds. If the electronic regulating system is not working properly, this is most noticeable when turning the steering wheel at low speeds (for instance when parking) – more effort will be required than usual. The fault should be corrected by a qualified workshop as soon as possible.

The power steering does not function when the engine is switched off. In this case the steering wheel is very hard to turn.

If the steering is held at its *turning limit* when the car is stationary, this will place an excessive load on the power steering system. In this case, the power steering system will make noises. It will also reduce the idling speed of the engine.

! Caution

Do not keep the steering in the full-lock position for longer than 15 seconds when the engine is running – this could cause damage to the power steering system.

i Note

 If the power steering should fail at any time or the engine is switched off (for instance when being towed), the car can still be steered. However, more effort will be required to turn the steering wheel.

• If the system is leaking or malfunctioning, please take the car to a qualified workshop as soon as possible.

• The power steering requires a special hydraulic fluid. The fluid reservoir is located at the front of the engine compartment on the left \Rightarrow *page 256*. The correct fluid level in the reservoir is important for the power steering to function properly. The hydraulic fluid level is checked at the Inspection Service.

Controls Safety Driving tips General maintenance Self-help Technical data Image: Controls Image: Controls

document_0900452a81b1b9de.book Seite 226 Donnerstag, 26. Juli 2007 9:16 09

Intelligent technology

Applies to vehicles: with four-wheel drive Four-wheel drive (quattro[®])

On quattro models the engine power is distributed to all four wheels

General notes

On four-wheel drive vehicles, the engine power is distributed to all four wheels. The distribution of power is controlled automatically according to your driving style and the road conditions. Also refer to \Rightarrow page 222, "Description".

The four-wheel drive is specially designed to complement the superior engine power of your Audi. This combination gives the car exceptional handling and performance capabilities – both on normal roads and in more difficult conditions, such as snow and ice. Even so (or perhaps especially for this reason), it is important to observe certain safety points $\Rightarrow \Delta$.

Winter tyres

Thanks to its four-wheel drive, your car will have plenty of *traction* in winter conditions, even with the standard tyres. Nevertheless, we still recommend that winter tyres or all-season tyres should be fitted on all four wheels when winter road conditions are expected, mainly because this will give a better *braking response*.

Snow chains

On roads where snow chains are mandatory, this also applies to cars with four-wheel drive \Rightarrow page 273, "Snow chains".

Replacing tyres

On vehicles with four-wheel drive, all four tyres must have the same rolling circumference. Also avoid using tyres with varying tread depths \Rightarrow *page 270*, "Replacing wheels and tyres".

Off-roader?

Your Audi does not have enough ground clearance to be used as an off-road vehicle. It is therefore best to avoid rough tracks and uneven terrain as much as possible.

 Even with four-wheel drive, you should always adjust your speed to suit the conditions. Do not let the extra safety provided tempt you into taking any risks when driving – this can cause accidents.

 The braking ability of your car is limited by the grip of the tyres. In this respect, your car is no different from a car without fourwheel drive. So do not be tempted to drive too fast on icy or slippery roads just because the car still has good acceleration in these conditions (accident risk).

 On wet roads bear in mind that the front wheels may start to "aquaplane" and lose contact with the road if the car is driven too fast. If this should happen, there will be no sudden increase in engine speed to warn the driver, as with a front-wheel drive car. So do not drive too fast in the wet: adjust your speed to suit the conditions (accident risk).

Power management

This system helps to ensure reliable starting

The power management controls the distribution of electrical energy and thus helps to ensure that there is always enough power available to start the engine.

If a vehicle with a conventional electrical system is left parked for a long time, the battery will gradually lose its charge because certain electrical equipment (such as the immobiliser) continues to draw

document_0900452a81b1b9de.book Seite 227 Donnerstag, 26. Juli 2007 9:16 09

be enough power available to start the engine.

power management.

Battery diagnosis

can be started reliably.

battery power level.

Your vehicle is equipped with an intelligent power management

cantly improves reliability when starting the engine, and also prolongs the life of the battery.

system to control the distribution of electrical energy. This signifi-

The main functions incorporated in the power management system are battery diagnosis, residual current management and dynamic

The battery diagnosis function constantly registers the condition of

the battery. Sensors detect the battery voltage, battery current and

battery temperature. This enables the system to calculate the

The residual current management reduces power consumption

while the vehicle is parked. It controls the supply of power to the various electrical components while the ignition is switched off. The system takes the battery diagnosis data into consideration.

Depending on the power level of the battery, the individual electrical

battery from losing too much charge and to ensure that the engine

While the vehicle is moving, this function distributes the available power to the various electrical components and systems according

to their requirements. The power management ensures that on-

board systems do not consume more electrical power than the

alternator can supply, and thus maintains the maximum possible

components are switched off one after the other to prevent the

current power level and charge condition of the battery.

Residual current management

Dynamic power management

Intelligent technology

current even when the ignition is off. In some cases there may not **i** Note

· The power management system is not able to overcome the given physical limits. Please remember that the power and life of the battery are limited.

• A warning message will appear ⇒ page 228, "Driver message in the instrument cluster display" if the battery power has dropped to a level where reliable starting is impaired.

Points to remember

Starting ability has first priority.

Short trips, city traffic and low temperatures all place a heavy load on the battery. In these conditions a large amount of power is consumed, but only a small amount is supplied. The situation is also critical if electrical equipment is in use when the engine is not running. In this case power is consumed when none is being generated.

In these situations you will be aware that the power management system is intervening to control the distribution of electrical power.

When the vehicle is parked for long periods

If you do not drive your vehicle for a period of several days or weeks. the power management will gradually shut off the on-board systems one by one, or reduce the amount of current they are using. This limits the amount of power consumed and helps to ensure reliable starting even after a long period.

Please note that certain convenience features, such as the Audi advanced key*, the remote control key or the electrical seat adjustment may not be available when you unlock the vehicle. These functions will be restored when you switch on the ignition and start the engine.



document_0900452a81b1b9de.book Seite 228 Donnerstag, 26. Juli 2007 9:16 09

Intelligent technology

With the engine switched off

If you listen to the radio or use the other MMI functions when the engine is not running, this will discharge the battery.

The MMI display will show this warning message before the battery power drops to a level where the starting ability is impaired.

Please start engine, otherwise system will switch off

in 3 minutes.

This message warns you that the system you are using will be switched off automatically after 3 minutes. You should therefore start the engine if you wish to continue using the system.

When the engine is running

Although the alternator generates electrical power, the battery can still become discharged while the vehicle is being driven. This can occur when a lot of power is being consumed but only a small amount supplied, especially if the battery is not fully charged initially.

To restore the necessary energy balance, the system will then temporarily shut off the electrical components that are using a lot of power, or reduce the current they are consuming. Heating systems in particular use a large amount of electrical power. If you notice, for instance, that the seat heating* or the rear window heater is not working, they may have been temporarily switched off or regulated to a lower heat output. These systems will be available again as soon as sufficient electrical power is available.

You may also notice that the engine runs at a slightly faster idling speed. This is quite normal, and no cause for concern. The increased idling speed allows the alternator to meet the greater power requirement and charge the battery at the same time.

Driver message in the instrument cluster display

If battery power drops to a level at which you may encounter problems when starting the engine, the following message will appear in the instrument cluster display:

🗀 Low battery charge: Battery will be charged while driving

This message reminds you that the starting reliability may be impaired. The message will disappear as soon as you set off and the battery is charged.

Message comes on and goes out again

If the message appears in the display after the ignition is switched on or while driving, and goes out again after a period of time, the battery has been charged up again sufficiently while the vehicle was being driven.

Message comes on and does not go out

If the message appears in the display after the ignition is switched on or while driving, and does not go out again, the battery is not being maintained at the proper power level. Starting reliability may be impaired. You should have the battery checked by a qualified workshop as soon as possible. document_0900452a81b1b9de.book Seite 229 Donnerstag, 26. Juli 2007 9:16 09

Your vehicle and the environment



Your vehicle and the environment

Running in

A new vehicle should be run in over a distance of 1,500 km. For the first 1,000 km the engine speed should not exceed 2/3 of the maximum permissible engine speed – do not use full throttle and do not tow a trailer or caravan. From 1,000 to 1,500 km you can gradually increase the engine rpm and road speed.

During its first few hours of running, the internal friction in the engine is greater than later on when all the moving parts have bedded down.

How the vehicle is driven for the first 1,500 km also influences the engine quality. After the first 1,500 km you should continue driving at moderate engine speeds, in particular when the engine is cold. This helps to reduce wear and tear on the engine and increases the potential mileage which can be covered by the engine.

You should also avoid driving with the engine speed too *low*. Change down to a lower gear when the engine no longer runs "smoothly". Excessively high engine speeds are prevented by an automatic rev limiter.

Emission control systems

Catalytic converter

Applies to vehicles with petrol engine: The vehicle must only be used with unleaded petrol, otherwise the catalytic converter will be destroyed.

Never run the tank completely dry. The irregular fuel supply can cause misfiring, which would allow unburnt fuel to enter the exhaust system, which could cause overheating and damage the catalytic converter.

Diesel particulate filter

Applies to vehicles with diesel engine: The diesel particulate filter can filter out almost all soot particles contained in the exhaust gas. In normal driving conditions the filter is self-cleaning. Should the self-cleaning function of the filter not be able to operate, e.g. when the vehicle is continuously used only for short trips, the filter becomes obstructed with soot and the symbol \bigcirc for the diesel particulate filter lights up \Rightarrow page 38.

Because of the high temperatures which can occur in the emission control system (catalytic converter or diesel particulate filter), do not park the vehicle where the exhaust can come into contact with flammable materials under the car (e.g. on grass or at the forest edge). - Fire hazard!

 Do not apply any underseal agents in the area around the exhaust system - fire hazard!

How to improve economy and minimise pollution

Fuel economy, environmental impact and wear on the engine, brakes and tyres depend largely on the way you drive the vehicle. By adopting an economical driving style and anticipating the traffic situation ahead, you can reduce fuel consumption by 10-15%. The following section gives you some tips on lessening the impact on the environment and reducing your operating costs at the same time.



document_0900452a81b1b9de.book Seite 230 Donnerstag, 26. Juli 2007 9:16 09

Your vehicle and the environment

Anticipate well in advance

A car uses most fuel when accelerating. If you anticipate hazards and speed changes well in advance, you will need to brake less and thus accelerate less. Wherever possible, let the car slow down gradually **with a gear engaged**, for instance when you can see that the next traffic lights are red. This takes advantage of the engine braking effect, reducing wear on the brakes and tyres. Emissions and fuel consumption will drop to zero due to the overrun fuel cutoff.

Change gear early to save fuel

An effective way of saving fuel is to *change up quickly* through the gears. Running the engine at high rpm in the lower gears uses an unnecessary amount of fuel.

Manual gearbox: Shift up to second gear as soon as possible. If possible, we recommend shifting up to the next gear at approx. 2,000 rpm.

Automatic gearbox: Press the accelerator slowly and avoid using the "kick-down" feature.

Avoid driving at high speed

Avoid travelling at top speed. Fuel consumption, exhaust emissions and noise levels all increase very rapidly at higher speeds. Driving at moderate speeds will help to save fuel.

Do not let the engine idle for longer than necessary

It is worthwhile switching off the engine when waiting in a traffic jam, at level crossings or at traffic lights with a long red phase. The fuel saved after only 30 - 40 seconds is greater than the amount of fuel needed to restart the engine.

The engine takes a very long time to warm up when it is running at idling speed. Mechanical wear and pollutant emissions are also especially high during this initial warm-up phase. It is therefore best to drive off immediately after starting the engine. Avoid running the engine at high speed.

Regular servicing

Regular servicing can establish a basis for good fuel economy before you start driving. A well-serviced engine gives you the benefit of **improved fuel efficiency** as well as maximum reliability and an enhanced resale value. A badly tuned engine can consume up to ten percent more fuel than necessary.

Avoid short trips

The engine and emission control system need to reach their **proper working temperature** in order to minimise fuel consumption and emissions.

A cold engine uses disproportionately more fuel. The engine only reaches its working temperature after about *four* kilometres, when fuel consumption will return to a normal level. This is the reason why we recommend avoiding short trips wherever possible.

Maintain the correct tyre pressures

Always make sure the tyres are inflated to the correct pressures \Rightarrow page 268 to save fuel. If the tyre pressures are just 0.5 bar too low, this can increase the fuel consumption by as much as 5 %. Due to the greater rolling resistance, under-inflation also increases **tyre wear** and impairs handling.

Do not use **winter tyres** all through the year; they will increase fuel consumption by up to 10 %.

Avoid carrying unnecessary loads

Every kilo of **extra weight** will increase the fuel consumption, so it is worth checking the luggage compartment occasionally to make sure that no unnecessary loads are being transported.

A **roof carrier** is often left in place for the sake of convenience, even when it is no longer needed. At a speed of 100-120 km/h your car will use about 12 % more fuel as a result of the extra wind resistance caused by the roof carrier - even when it is empty. document_0900452a81b1b9de.book Seite 231 Donnerstag, 26. Juli 2007 9:16 09

Save electrical energy

The engine drives the alternator to generate electricity. This means that fuel consumption rises when more power is required for electrical equipment. Switch off electrical equipment when it is not needed. Electrical equipment which uses a lot of electricity includes the blower (at a high setting), the rear window heating and the seat heating*.

Environmental compatibility

Environmental protection is a top priority in the design, choice of materials and production of your new Audi.

Design measures for economical recycling

• Joints and connections designed for ease of dismantling

- Modular construction to facilitate dismantling
- Increased use of single-grade materials
- Plastic parts and elastomers are labelled in accordance with ISO 1043, ISO 11469 and ISO 1629

Choice of materials

- Nearly all materials used can be recycled
- Similar types of plastics grouped together for easy recycling
- Recycled materials used in manufacture
- Reduced vapour emissions from plastics
- CFC-free refrigerant in air conditioner

Compliance with the laws prohibiting the use of: Cadmium, asbestos, lead, mercury and chrome VI.

Manufacturing methods

- Using recycling material for manufacturing plastic parts
- Solvent-free cavity sealing
- Solvent-free wax for protecting the vehicles in transit



Your vehicle and the environment

- Solvent-free adhesives
- No CFCs used in production
- Surplus materials used extensively for energy conversion and
- building materials
- Overall water consumption reduced
- Heat recovery systems
- Water-soluble paint

document_0900452a81b1b9de.book Seite 232 Donnerstag, 26. Juli 2007 9:16 09

Towing a trailer

Towing a trailer

Driving the vehicle with a trailer or caravan

Technical requirements

The towing bracket must comply with certain technical requirements.

Your car is intended mainly for transporting passengers and luggage. However, if suitably equipped, it can also be used to tow a trailer or caravan.

If the car is supplied with a **factory-fitted** towing bracket it will already have the necessary technical modifications and meet the statutory requirements.

A 13-pin socket is provided to make the electrical connection between the car and the trailer. If the trailer has a **7-pin plug** you can use an adapter cable. This is available from Audi dealers.

If a towing bracket is retrofitted, the installation should be carried out by a qualified workshop.

• In particular in high outside temperatures it is not possible to drive up long steep gradients without a suitable cooling system. The engine would then overheat.

Incorrect installation can result in a safety risk.

Points to check before towing

Trailer weights

Never exceed the maximum permitted trailer weights \Rightarrow page 323.

If you do not load the trailer up to the maximum permitted trailer weight, you can then climb correspondingly steeper gradients.

The maximum trailer weights listed are only applicable for **altitudes** up to 1000 m above sea level. With increasing altitude the engine power and therefore the car's climbing ability are impaired because of the reduced air density, so the maximum trailer weight has to be reduced accordingly. The weight of the car and trailer must be reduced by 10% for every further 1000 m (or part thereof). This figure refers to the combined weight of the (loaded) vehicle and (loaded) trailer.

The figures for the **draw bar weight** that appear on the identification plate of the towing bracket are for certification purposes only. The correct figures for your specific vehicle, which may be *lower* than these figures for the towing bracket, are given in the registration documents. Also refer to \Rightarrow *page 323*.

Distributing the load

Distribute loads in the trailer so that heavy objects are as near to the axle as possible. Loads carried in the trailer must be secured to prevent them slipping.

Where possible, operate the trailer with the maximum permitted **draw bar weight** on the ball joint of the towing bracket, but do not exceed the specified limit.

Tyre pressure

Check the tyre pressures on your car and adjust for "full load" conditions (refer to the sticker listing the tyre pressures on the end face of the driver's door). It may also be necessary to adjust the tyre pressures on the trailer according to the recommendations of the trailer manufacturer.

Exterior mirrors

Check whether you can see enough of the road behind the trailer with the standard mirrors. If this is not the case you should have document_0900452a81b1b9de.book Seite 233 Donnerstag, 26. Juli 2007 9:16 09

additional mirrors fitted. Both exterior mirrors should be mounted on hinged extension brackets. Adjust the mirrors to give sufficient vision to the rear.

Headlights

Before starting a journey, check the headlight beam settings with the trailer hitched up. If necessary, alter the height of the headlight beams by means of the headlight range control \Rightarrow page 60.

Power supply

When you remove the ignition key the power supply to the trailer is interrupted.

Removable ball joint coupling

Vehicles with a factory-fitted towing bracket are equipped with a *removable* ball joint coupling. It is carried under the floor panel on the left-hand side of the luggage compartment and is secured by a strap.

Note

We recommend having the car serviced between the normal inspection intervals if it used frequently for towing a trailer. \blacksquare

Applies to vehicles: with towing bracket

Trailer stabilisation system

Trailer stabilisation helps to reduce the risk of the vehicle skidding when towing a trailer.

The trailer stabilisation system is operational only when the ESP is switched on and there is no malfunction in the ESP \Rightarrow page 17.

When is the trailer stabilisation system activated? Trailer stabilisation is active when the following requirements are met:

• The ESP must NOT be switched off \Rightarrow page 222,

• The trailer connector must be properly secured in the vehicle

Towing a trailer

socket.

Vehicle speed must be higher than approx. 60 km/h.

How trailer stabilisation works:

In many cases, the driver can stabilise a swaying trailer by manually braking the vehicle.

However, if the ESP detects that the trailer is swaying and this is affecting the towing vehicle, it will automatically brake the vehicle to stabilise the trailer by slowing it down. The warning lamp $\frac{3}{4}$ will light up in the instrument cluster. If possible, do not turn the steering wheel at this stage.

In order to warn traffic behind you, the brake lights will come on during this automatic braking operation.

A trailer weighing less than 70% of the kerb weight of the towing vehicle may sway quite considerably without the trailer stabilisation system intervening. This can happen when the swaying movements of the light-weight trailer are not or hardly passed on to the towing vehicle and are therefore not detected by the ESP.

If the system for activating the trailer brake lights is defective, this will be indicated in the instrument cluster display \Rightarrow page 37, "Bulb monitor &".

Requirements for correct functioning of the trailer stabilisation system

If these conditions are not met in full, the trailer stabilisation system will only intervene to a limited extent or not at all $\Rightarrow \Delta$.

• The electrical connection between the towing vehicle and the trailer must be functioning correctly, without any defects.

- Tallel must be functioning correctly, without any dele
- The load on the trailer must be properly secured.

• The tyre pressures on both the vehicle and the trailer must be adapted to the load that is being carried.

• Where possible, operate the trailer with the maximum permitted draw bar weight.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	—
+)			

document_0900452a81b1b9de.book Seite 234 Donnerstag, 26. Juli 2007 9:16 09

Towing a trailer

• The trailer overrun brake must be set correctly. This is important to ensure that the trailer can be braked correctly, to avoid the vehicle and trailer "jack-knifing" and to prevent excess braking of the trailer.

• At low outside temperatures, both the towing vehicle **and** the trailer should be fitted with winter tyres.

It is essential that you adjust your speed to suit the weather, road and traffic conditions. Do not let the trailer stabilisation system tempt you into taking any risks when driving – this can cause accidents.

 The ESP and trailer stabilisation system cannot defy the laws of physics. This should be kept in mind, particularly on slippery and wet roads and when towing a trailer with a light load.

• The trailer stabilisation system is functional, regardless of whether the trailer has a mechanical overrun brake or not.

 The trailer stabilisation system is not always able to detect swaying of trailers with a light load and will therefore not intervene.

 A trailer can still "jack-knife" on slippery roads with little grip, even if the towing vehicle is equipped with the trailer stabilisation system.

• Trailers with a high centre of gravity may even tip over before they start to sway sideways.

 If you are not towing a trailer, but the trailer socket is being used (e.g. for an illuminated bicycle rack), the trailer stabilisation system may be activated in extreme driving conditions.

Please note the additional information and warnings
 ⇒ page 234. ■

Notes on towing

Driving with a trailer always requires extra care.

Weight distribution

Try to avoid towing a loaded trailer with an unladen vehicle. If this cannot be avoided, drive extra slowly to allow for the unbalanced weight distribution.

Speed

The stability of the car and trailer is reduced with increasing speed. For this reason it is advisable not to drive at the maximum permissible top speed in unfavourable road, weather or wind conditions. This applies especially on a downhill gradient.

You should always reduce speed immediately if the trailer shows the slightest sign of **swaying**. Never try to stop the swaying by accelerating further.

Always brake in good time. If the trailer has an **overrun brake**, apply the brakes *gently at first* and then firmly. This will prevent the jerking that can be caused by the trailer wheels locking. Change down in good time before going down a steep hill so that you can use the engine braking effect to slow down the vehicle.

Swaying and pitching can be reduced by stabiliser aids. We recommend having stabiliser aids installed when towing trailers with a high trailer weight. They can be purchased and installed at an Audi dealer.

Overheating

When climbing long hills in hot weather with the engine running fast in low gear, you should keep an eye on the coolant temperature gauge \Rightarrow page 11. Reduce speed immediately if the needle moves to the top end of the scale. If the temperature warning lamp $\frac{1}{k_{e}}$ in the instrument cluster should start flashing, stop the car and let the engine cool down by running it at *idling speed* for a few minutes.

document_0900452a81b1b9de.book Seite 235 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with towing bracket

Accessories

Before mounting equipment and accessories (e.g. bicycle rack) please observe the following notes.

 


Fig. 234 Load distribution of equipment and accessories

The equipment/accessories mounted must not protrude more than 700 mm from the ball joint 1.

The total weight (mounted equipment plus the load) must not exceed 75 kg.

The maximum load depends on where the centre of gravity lies. The maximum weight decreases as the distance between the centre of gravity and the ball joint 1 increases.

The following limits apply:

If the distance is 300 mm, the total weight (incl. the equipment mounted) (A) must not exceed 75 kg.

If the distance is 600 mm, the total weight (incl. the equipment mounted) (a) must not exceed 35 kg.

Only bicycle racks for a maximum of three bicycles may be used.

Equipment mounted on the towing bracket

We recommend that you only mount equipment (e.g. bicycle rack) which has been approved by Audi on the ball joint. If you wish to attach other equipment please make sure that it has been approved

Towing a trailer

by the manufacturer for use on the ball joint. If you mount unsuitable equipment, this can cause damage to the towing bracket. In an extreme case, damage to the towing bracket could cause it to break $\Rightarrow \Delta$.

If you wish to mount equipment which has not been approved by Audi please ensure that it is suitable for use on Audi vehicles.
Use of unsuitable equipment can result in severe damage to the towing bracket. The towing bracket could then break while pulling a trailer and cause an accident.

• Never use tools of any kind when fitting and removing the ball joint. This could damage the mechanism which locks the ball joint in place and impair its safety (accident risk).

Removable towing bracket

Applies to vehicles: with removable towing bracket

Introduction

Special care is required when fitting and removing the towing bracket.


 


Fig. 235 Luggage compartment with towing bracket

 

document_0900452a81b1b9de.book Seite 236 Donnerstag, 26. Juli 2007 9:16 09

Towing a trailer

۲

The removable ball joint attachment for the towing bracket is carried under the floor panel on the left-hand side of the luggage compartment and is secured by a strap.

The ball joint can be fitted and removed by hand.

 Never use tools of any kind when fitting and removing the ball joint. This could damage the mechanism which locks the ball joint in place and impair its safety (accident risk).

• Secure the ball joint again with the strap when you have finished using it.

i Note

• Do not attempt to modify or repair the ball joint or other towing bracket components.

 Should you have any difficulties when using the towing bracket, or suspect that it is not fitted properly, contact a qualified workshop.

• Before setting off, always check that the ball joint is secured properly \Rightarrow page 238.

Never disengage the ball joint with the caravan / trailer still

hitched or with a bicycle rack or similar accessory still attached. • It is advisable to remove the ball joint when you are not towing a trailer. Fold the socket back to its original position so that the mounting fixture is properly closed.

• The ball joint must be removed if you intend to clean the car with a steam cleaning attachment. Make sure that the mounting fixture is properly closed.

• For installation and removal of the ball joint we recommend that the gloves provided be used. \blacksquare

Applies to vehicles: with removable towing bracket Fitting the ball joint (step 1)



Fig. 236 Area below rear bumper: Folding down the socket



- Fold the socket unit all the way out in the direction of the arrow \Rightarrow fig. 236.
- The cover piece is held automatically in the open position.
- Check that the mounting for the towing bracket, which will now have become visible -arrow-⇒ fig. 237, is free of dirt, and clean if necessary ⇒ A.

document_0900452a81b1b9de.book Seite 237 Donnerstag, 26. Juli 2007 9:16 09

 Also check the shaft section of the ball joint and its associated mechanical parts to make sure they are clean and undamaged.

Continued \Rightarrow page 237, "Fitting the ball joint (step 2)".

4

1

It is important to keep the mounting fixture clean. Otherwise the ball joint may fail to engage securely (accident risk).

Applies to vehicles: with removable towing bracket Fitting the ball joint (step 2)

 


Fig. 238 Removable towing bracket: Ball joint

The spring mechanism inside the ball joint must be in the "ready" position.

- − Check that the red marking (2) \Rightarrow fig. 238 on the knob is inside the green zone on the ball joint.
- Check that the locking ball () is inside the hole in the shaft section of the ball joint.
- Check that the knob protrudes visibly from the ball joint, so that there is a clear gap (3) between the knob and the ball joint.

The ball joint can only be installed if the internal spring mechanism is in the $\ensuremath{\textit{ready}}$ position.

Continued \Rightarrow page 237, "Fitting the ball joint (step 3)".

Applies to vehicles: with removable towing bracket Fitting the ball joint (step 3)



Fig. 239 Removable towing bracket: Setting the spring mechanism to the "ready" position

Towing a trailer



Fig. 240 Removable towing bracket: Inserting the ball joint

Setting the spring mechanism to the "ready" position (if required)

 Insert the key () ⇒ fig. 239 for locking the ball joint into the lock on the knob and turn it clockwise.

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	∲ —_
	•)			

document_0900452a81b1b9de.book Seite 238 Donnerstag, 26. Juli 2007 9:16 09

Towing a trailer

۲

− Pull out the knob in direction (a), hold and turn in direction (b) until the locking ball (c) engages \Rightarrow \triangle .

Inserting the ball joint

- With the spring mechanism in the "ready" position, insert the ball joint into the mounting fixture and push it upwards ⇒ page 237, fig. 240 in the direction indicated (arrow) ⇒ △. The spring mechanism should then engage automatically with an audible click.
- Lock the ball joint by turning the key anti-clockwise.
- Take out the key and press the cover cap provided onto the lock.

Continued \Rightarrow page 238, "Fitting the ball joint (step 4)".

• If it is not possible to set the spring mechanism to the "ready" position as described above, do not use the ball joint. Please take your vehicle to a qualified workshop.

• To avoid injury, keep your hands away from the knob and the cover piece when inserting the ball joint into the mounting fixture.

i Note

Make sure that the knob can turn freely when the ball joint is inserted. \blacksquare

Applies to vehicles: with removable towing bracket Fitting the ball joint (step 4)



Fig. 241 Removable towing bracket: Safety check

Fig. 242 Area below

rear bumper: Electrical socket for trailer



Safety check

- Check that the green marking 6 \Rightarrow fig. 241 on the knob is inside the green zone on the ball joint.
- Check that the knob is directly against the ball joint, so that there is no gap 7 between the knob and the ball joint.
- Check that the ball joint is locked and the key is removed (so that the knob cannot be pulled out).

document_0900452a81b1b9de.book Seite 239 Donnerstag, 26. Juli 2007 9:16 09

 Check that the ball joint fits tightly in the mounting fixture (try moving it about to check).

Electrical socket for trailer

- The cable of the towing bracket can be connected to the socket \Rightarrow *page 238*, fig. 242.


If the safety check is not satisfactory, the ball joint must be fitted again properly.

To avoid accidents, the ball joint must meet all the safety requirements listed in the safety check. The towing bracket must not be used if any one of these requirements is not met. If this is the case, you should contact a qualified workshop.

Applies to vehicles: with removable towing bracket
Removing the ball joint



Fig. 243 Removable towing bracket: Removing the ball joint

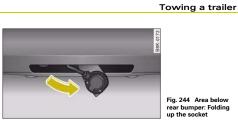

- Take off the cover cap and insert the key (8) \Rightarrow fig. 243 in the lock on the knob.
- Unlock the ball joint by turning the key clockwise.
- Take hold of the ball joint and pull out the knob in direction (a).
- Keep hold of the knob and turn it as far as it will go in direction (b).
- Release the knob. The spring mechanism will remain in the "ready" position $\Rightarrow \Delta$.
- Pull the ball joint down out of the mounting fixture.
- Then swivel the socket up \Rightarrow fig. 244 as far as it will go. The mounting fixture will be closed automatically.
- Put away the ball joint attachment under the floor panel in the luggage compartment.

Make sure that the socket unit has closed off the mounting fixture of the towing bracket properly. Otherwise the ball joint may fail to engage securely if dirt accumulates in the mounting fixture.

 


Image: document_0900452a81b1b9de.book Seite 240 Donnerstag, 26. Juli 2007 9:16 09 240 Towing a trailer

Applies to vehicles: with towing bracket Towing bracket (retrofitting)

If required, the vehicle can be retrofitted with a towing bracket.

38K

 


Fig. 245 Positions of securing points (side view)

 


Fig. 246 Positions of securing points (from above)

If a towing bracket is to be fitted after the car is purchased, this must be done according to the instructions of the towing bracket manufacturer.

The securing points, which are marked by an a in the illustrations \Rightarrow fig. 245 and \Rightarrow fig. 246, are located under the vehicle.

Audi dealers are familiar with the method of installation and any modifications which may be required for the cooling system.

• If a towing bracket is retrofitted, the installation should be carried out by a qualified workshop.


• If the towing bracket is incorrectly fitted, this could cause a


safety risk. • For your own safety, please observe the instructions provided by the manufacturer of the towing bracket.

! Caution

If the connector socket is not fitted correctly, this could cause damage to the vehicle's electrical system. \blacksquare



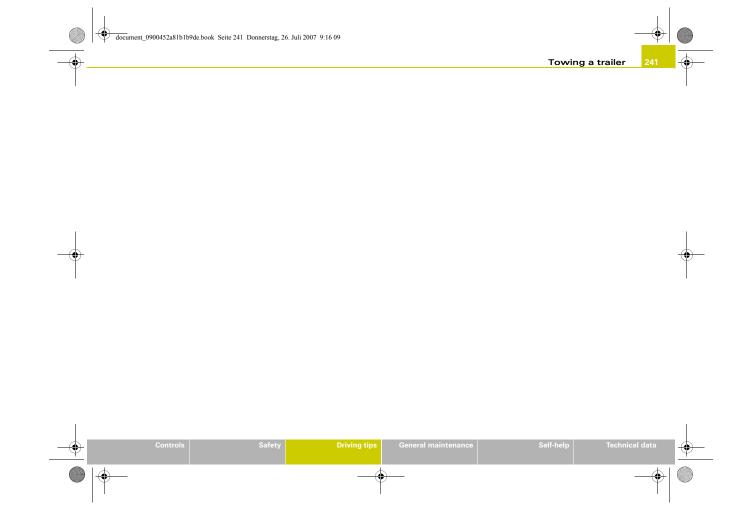

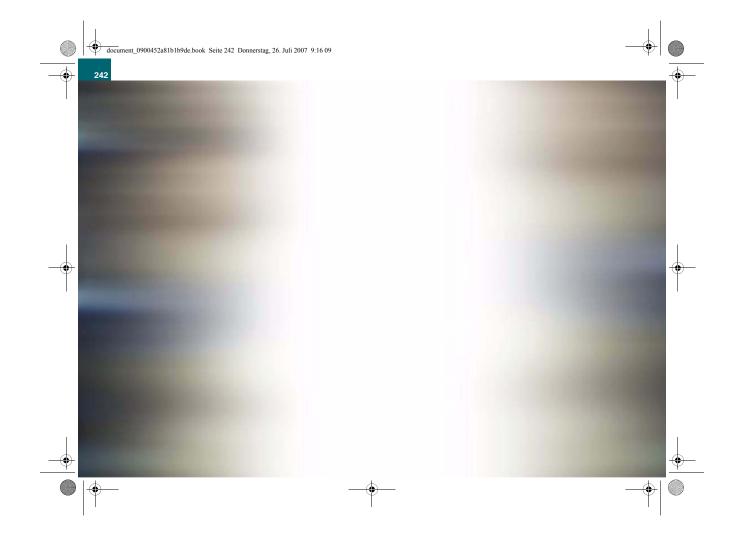



document_0900452a81b1b9de.book Seite 244 Donnerstag, 26. Juli 2007 9:16 09

Care of vehicle and cleaning

Care of vehicle and cleaning

General notes

244

Regular care helps to maintain the value of the vehicle. Regular and careful care helps to maintain the value of the vehicle.

This may also be one of the requirements for upholding any warranty claims in the event of corrosion or paint defects. Audi dealers and specialist retailers carry stocks of suitable **car care**

products. Please follow the instructions for use on the packaging.

• Cleaning products and other materials used for car care can damage health if misused.

• Car care products can contain toxic substances and must always be kept in a safe place out of reach of children.

🗱 For the sake of the environment

• When purchasing car care products, try to select ones which are not harmful to the environment.

• Surplus cleaning materials should not be disposed of together with ordinary household waste.

Care of exterior

Washing the vehicle

The longer substances like insects, bird droppings, resinous tree sap, road dirt, industrial deposits, tar, soot or road salt and other aggressive materials remain on the vehicle, the more damage they do to the paintwork. High temperatures (for instance in strong sunlight) further intensify the corrosive effect.

After the period when salt is put on the roads it is important to have the **underside** of the vehicle washed thoroughly.

Automatic car washes

Before going through a car wash, be sure to take the usual precautions such as closing the windows and sunroof. If the vehicle has special accessories such as spoilers or a roof carrier or two-way radio aerial, etc., it is advisable to consult the car wash operator.

It is best to use a car wash without revolving bristles if possible.

Washing your car with a high-pressure cleaner

When cleaning the vehicle with a high-pressure cleaner, always follow the operating instructions for the equipment. This applies particularly to the **operating pressure** and the **spraying distance**. Do not hold the spray nozzle too close to soft materials, such as rubber hoses or seals.

Do not use a nozzle that sprays the water out in a **direct stream** or one that has a **rotating jet** for forcing off dirt.

Washing the car by hand

When washing the car by hand, use plenty of water to soften the dirt first, and rinse off as well as possible.

Then clean the vehicle with a soft **sponge**, **glove** or **brush**, using only slight pressure. You should start on the roof and work down. Special **car shampoo** should only be used for very persistent dirt.

Rinse the sponge or glove thoroughly and often.

Wheels, sills and similar should be cleaned last. Use a second sponge for this.

document_0900452a81b1b9de.book Seite 245 Donnerstag, 26. Juli 2007 9:16 09

Care of vehicle and cleaning



MARNING

• Do not wash the vehicle with the ignition switched on – risk of accident.

• Do not clean the underside of the car or inside the wheel arches without protecting your hands and arms. You may cut yourself on sharp metal parts.

• Take care when washing the car during the winter: moisture and ice on the brakes may affect braking efficiency – this could cause an accident.

U Caution

• Do not wash the vehicle in direct sunlight – otherwise the paint can be damaged.

• Do not use insect sponges or abrasive household sponges, etc. - they can damage the surfaces.

• The headlights should only be washed with water – do not wipe them with a dry cloth or sponge. It is best to use soapy water.

• Never wash tyres with a jet that sprays the water out in a direct stream. This could damage the tyres – even if the spray is kept at a distance and only used for a very short time.

For the sake of the environment

The car should only be washed in special wash bays. This prevents oily water from getting into the public drains. In some districts, washing vehicles anywhere else may be prohibited.

Waxing and polishing

Waxing

Waxing protects the paintwork. It is time to apply a good coat of wax when water no longer **forms droplets** and rolls off the clean paintwork.

Even if a **wax solution** is used regularly in the car wash, it is advisable to protect the paint with a coat of wax at least twice a year. In the summer, you will find it is much easier to remove dead insects

(which accumulate on the bumper and the front of the bonnet) if the car has been waxed *recently*.

Polishing

Polishing is only necessary if the paint has lost its shine, and the gloss cannot be brought back by putting on wax.

The car must be waxed after polishing if the polish used does not contain wax compounds to seal the paint.

U Caution

Matt painted and plastic parts must not be treated with wax or polish. \blacksquare

Ornamental trim and mouldings

The metal brightwork on the body is made of aluminium rather than chrome (for environmental reasons).

Dirt or marks on the trim mouldings should be removed with an acid-free cleaning agent (do not use a chrome cleaner). Body polish is also unsuitable for use on trim mouldings. The intensive cleaning fluids often used before the car goes into a car wash may contain alkaline substances, which can cause dull or milky patches when they dry out.

Audi dealers carry stocks of cleaning products which have been tested for use on your vehicle and are not harmful to the environment.



document_0900452a81b1b9de.book Seite 246 Donnerstag, 26. Juli 2007 9:16 09

Care of vehicle and cleaning

Plastic parts

246

Plastic parts will come clean with regular washing. If this is not sufficient, plastic parts should only be treated with a special solvent-free **plastic cleaning agent**. Do not use paint cleaners, polishes or wax on plastic parts.

Paint damage

Minor damage to the paint, such as scratches or stone chips, should be touched up *without delay* before the metal starts to corrode. Suitable **touch-up brushes** or **sprays** for your car can be obtained from an Audi dealer.

The number of the original paint finish on the vehicle is given on the data sticker \Rightarrow page 321.

If corrosion is already visible it must be thoroughly removed by a qualified workshop.

Windows

Clear vision is an essential safety factor.

The windscreen must not be cleaned with insect remover or wax, otherwise the windscreen wipers will not function properly (juddering).

Traces of rubber, oil, grease or silicone can be removed with a window cleaning solution or a silicone remover. Wax residue can only be removed with a special cleaner. Your Audi dealer will be able to provide you with more detailed information.

The windows should also be cleaned on the inside at regular intervals.

Use a separate cloth or chamois to dry the windows. Cloths used for waxing and polishing contain residues that will cause smears on the glass.

Do not use water-repellent coatings on the windscreen. In bad visibility conditions such as light rain, low sun or when driving at night these coatings can cause increased dazzle, which is a serious safety hazard. Such coatings can also cause the wiper blades to judder.

U Caution

 Remove snow and ice from windows and mirrors with a plastic scraper only. To avoid scratches caused by dirt on the glass, the scraper should only be pushed in one direction and not moved to and fro.

• The heating element for the rear window is located on the inner side of the window. To avoid damaging the heating element, do not put stickers on the inner side of the window.

 Never use warm or hot water to remove snow and ice from windows and mirrors. This could cause the glass to crack!

Rubber seals (weatherstrips)

The weatherstrips will remain pliable and last longer if they are occasionally treated with a suitable care product (for example silicone spray). This will also prevent premature ageing and leaks. The doors will be easier to open as well. If they are kept pliable, the door seals will be less likely to freeze up in the winter.

Wheels

The wheels require regular attention to preserve their appearance. It is important to remove road salt and brake dust by washing the wheels at regular intervals, otherwise the finish will be impaired. document_0900452a81b1b9de.book Seite 247 Donnerstag, 26. Juli 2007 9:16 09

After washing, the wheels should only be cleaned with an "acidfree" cleaning agent for alloy wheels. This is available from Audi dealers and specialist retailers. Never leave the cleaning agent on the rims for any longer than specified in the instructions before rinsing it off. If the wheel cleaner fluid contains acid it can attack the surfaces of the wheel bolts.

Car polish or other abrasive agents should not be used. If the protective paint coating is damaged by stone chips etc., the damaged area should be touched up immediately.

Please note when cleaning the wheels that water, ice and road salt can impair the effectiveness of the brakes – this can cause an accident.

Care of interior

Sound system / MMI* display screen and MMI control console*

The display screen can be cleaned with a soft cloth and a special "LCD cleaner" (available from retailers of electrical goods). Moisten the cloth with a small amount of the cleaning fluid.

Clean the MMI control console with a fine brush first to prevent any dirt from getting in between the control buttons and the housing. We then recommend wiping the MMI control console using a cloth moistened with washing-up liquid and water.

U Caution

To avoid scratching the screen, do not wipe the display with a dry cloth. Care of vehicle and cleaning

247

• To avoid any possibility of damage, do not let any liquid get inside the control console.

Plastic parts and leatherette

Plastic parts and leatherette can be cleaned with a damp cloth. If this is not sufficient, plastic parts and leatherette should only be treated with a **special solvent-free plastic cleaner.**

Textile covers and trim parts

Textile covers and trim parts (e.g. seats, door trim) should be cleaned regularly with a vacuum cleaner. This will remove surface dirt which could otherwise be rubbed into the textile material during use. Do not use steam cleaners, as the steam could carry the dirt deeper into the textile material.

 
Normal cleaning

We recommend that you use a soft sponge or lint-free, micro-fibre cloth for normal cleaning. Only use brushes on floor coverings and mats, as other textile surfaces could become damaged.

In the case of normal surface dirt you can use a foam cleaner. Use a sponge to spread the foam on the textile surface and to work it into the material lightly. However, make sure that the textile material does not become soaking wet. Then dab off the foam with a dry and absorbent cloth (e.g. a micro-fibre cloth) and vacuum off any residue once the surface is completely dry.

Removal of stains

To treat stains caused by spilled drinks (coffee, fruit juice or similar) make up a solution with a mild detergent for sensitive fabrics and apply it with a sponge. If the stains are difficult to remove, a washing paste can be applied directly onto the stain and worked into the fabric. The surface will then have to be wiped with clear



document_0900452a81b1b9de.book Seite 248 Donnerstag, 26. Juli 2007 9:16 09

Care of vehicle and cleaning

water to remove any residue left by the paste. To do so, use a damp cloth or sponge and then dab the stain with an absorbent cloth. Treat chocolate or make-up stains with a washing paste and then

rinse off with water (using a damp sponge). A spirit-based cleaner can be used to remove grease, oil, lipstick or ball point pen. Then dab the dissolved grease or colour particles off

with an absorbent cloth or similar. You may also have to treat the stain once more using washing paste and water. If the covers or textile trim panels are badly soiled we recommend

that you have them cleaned by a professional cleaning company.

🚺 Note

248

Please make sure you close any velcro fasteners on your clothing, as these could otherwise damage the upholstery.

Applies to vehicles: with leather upholstery

Natural leather

Audi does everything possible to preserve the special qualities of leather as a natural product.

General notes

We have a wide selection of leathers. The main type used is nappa in various forms, that is leather with a smooth surface in a selection of colours.

The amount of dye used determines the appearance and properties of leather. If the leather is left in a more natural state, it retains its typical natural appearance and is pleasant and comfortable for the seat occupants. Fine veins, healed scars, insect bites, wrinkles and a subtle variation in shading remain visible; these are the characteristic features of genuine natural leather.

Natural napped leather does not have a protective surface coating of dye. It is therefore somewhat more prone to damage. You should

bear this in mind if children or pets often travel in the car, or if there are other factors that could lead to damage.

Types of leather with a coloured surface coating are likely to be more resistant to damage. This has a great advantage for day-to-day use. However, this means that the typical natural characteristics of the surface are less apparent, though this does not affect quality.

Cleaning and care

Because of the natural properties of the specially selected hides employed, the finished leather has a certain sensitivity to grease and dirt, etc. so a degree of care is required in everyday use and when looking after the leather. Dark clothing (especially if damp or incorrectly dyed) may stain leather upholstery. Dust and grit in the pores and seams can have an abrasive effect and damage the surface of the leather. Therefore leather should be cleaned at regular intervals, depending on the actual amount of use. When they have been in use for a certain time, your car seats will acquire a typical and distinctive patina. This is characteristic for real leather upholstery, and is a sign of genuine quality.

To maintain the value of natural leather you should note the following points:

U Caution

Avoid exposing leather to direct sunlight for long periods, otherwise it may tend to lose some of its colour. If the car is left for a prolonged period in the bright sun, it is best to cover the leather.
Sharp-edged objects on clothing, such as belts, zip fasteners, rivets or similar, can also leave permanent scratches and rough marks on the surface of the leather.

i Note

 Use a suitable impregnating cream with ultra-violet protection at regular intervals and after cleaning. This cream will nourish and moisturise the leather, keep it supple and able to breathe. In addition, it will also help to protect the surface of the leather. document_0900452a81b1b9de.book Seite 249 Donnerstag, 26. Juli 2007 9:16 09

- Clean the leather every 2 to 3 months and remove fresh dirt as necessary.
- Remove stains from fresh ball-pen and other inks, lipstick, shoe cream and similar stains as soon as possible.

• Preserve the colour of the leather. A special coloured cream will renew the colour of the leather when required and will eliminate differences in colour.

Applies to vehicles: with leather upholstery

Cleaning and care of leather upholstery

Natural leather requires an extra degree of attention and care.

Normal cleaning

 Moisten a cotton or woollen cloth with water and wipe over the leather surfaces.

More stubborn dirt

- More stubborn dirt can be removed using a mild soap solution (pure liquid soap: two tablespoons dissolved in one litre of water).
- It is very important not to let the water soak through the leather or penetrate into the seams.
- Then wipe off with a soft, dry cloth.

Removal of stains

 Remove fresh water-based stains such as coffee, tea, juices, blood etc. with an absorbent cloth or kitchen roll, dried-on stains with the cleaning agent from the care set.

Care of vehicle and cleaning

- Remove fresh fat-based stains on the surface such as butter, mayonnaise, chocolate, etc. with an absorbent cloth or kitchen roll or with the cleaning agent from the care set.
- Treat fat-based, dried-in stains with grease-dissolving spray.
- Treat less common stains such as ball-pen and other inks, felt-tip pens, nail polish, dispersion paint, shoe cream etc. with a special leather stain remover.

Leather care products

- The leather should be treated regularly (about twice a year) with a special leather-care product.
- Apply the cream very sparingly.
- Then wipe off with a soft, dry cloth.

Should you have any questions regarding the care and cleaning of the leather upholstery in your vehicle, we recommend that you contact your Audi dealer. The staff there will gladly provide you with further information on cleaning and care of your upholstery and on our complete range of leather care products:

- Cleaning and care set
- Coloured leather-care cream
- Stain remover for ball-pen inks, shoe cream etc.
- Grease dissolving spray
- New products and further developments

! Caution

On no account use solvents (such as petrol, turpentine), wax polish, shoe cream or similar materials. \blacksquare

1

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
-)			0

1

document_0900452a81b1b9de.book Seite 250 Donnerstag, 26. Juli 2007 9:16 09

Care of vehicle and cleaning

Applies to vehicles: with Alcantara seat covers Cleaning Alcantara

Removing dust and dirt

Moisten a cloth just a little and wipe down the seat covers.

Removing stains

250

- Moisten a cloth with lukewarm water or diluted methylated spirits.
- Dab at the stain. Start at the outside and work inwards.Dry the area you have cleaned with a soft cloth.

Do not use leather cleaning products on Alcantara seat covers. You may use a suitable shampoo on dust and dirt.

Dust and grit in the pores and seams can have an abrasive effect and damage the surface of the leather. If the car is left standing in the sun for long periods, the leather should be protected against direct sunlight to prevent it from fading. However, slight colour variations will arise in normal use.



- Do not use solvents, wax polish, shoe cream, stain removers,
- leather cleaning products or any similar products on Alcantara.
- To avoid damage, stubborn stains should be removed by a qualified workshop.
- On no account use brushes, hard sponges or similar utensils.

Seat belts

Seat belts should be looked after properly to ensure that they give the full protection.

- Keep the seat belts clean.
- For cleaning, use a mild soap solution.
- Check the condition of the seat belts at regular intervals.

Very dirty belts may not retract properly.

Make sure that the inertia reel seat belts are completely dry before allowing them to retract.

U Caution

• Do not remove the seat belts from the vehicle to clean them.

• Do not use chemical cleaning agents on the seat belts, as this can damage the webbing. Ensure that the belts do not come into contact with corrosive fluids.

• If you find any damage to the belt webbing, belt fittings, the belt retractor or the buckle, the belt in question must be replaced by a gualified workshop.

document_0900452a81b1b9de.book Seite 251 Donnerstag, 26. Juli 2007 9:16 09

Fuel and filling the tank



Fuel and filling the tank

Petrol

Applies to vehicles: with petrol engine

Petrol grade

The correct grade of petrol is listed inside the fuel tank flap.

The vehicle is equipped with a catalytic converter and must only be run on **unleaded petrol**. Unleaded petrol must comply with the European EN 228 standard. The petrol grades have different **octane ratings** (RON). If, in exceptional circumstances, the correct octane rating is not available, please note the following:

• For engines which require **Premium unleaded petrol (95 RON)** according to \Rightarrow *page 323,* "Performance, weights and dimensions": Regular unleaded fuel with 91 RON can also be used. This will, however, result in a slight loss of power.

 For engines which require Super Plus unleaded petrol (98 RON) according to ⇒ page 323, "Performance, weights and dimensions": Premium unleaded fuel with 95 RON can also be used. This can, however, result in a slight loss of power under certain driving conditions. – If premium unleaded petrol is not available, the engine can be run on regular unleaded petrol with 91 RON as an *emergency measure*. In this case only use moderate engine speeds and a light throttle. Fill up with premium or Super Plus petrol as soon as possible.

U Caution

 Petrol complying with the EN 228 standard can contain small quantities of ethanol. However, "bioethanol fuels", which are retailed under various different names such as E50 and E85, and which contain a large proportion of ethanol, must **not** be put into the vehicle, as this would damage the fuel system. • Even one tankful of leaded fuel would permanently impair the efficiency of the catalytic converter.

• High engine speed and full throttle can damage the engine when using petrol with an octane rating lower than the correct grade for the engine.

Diesel

Applies to vehicles: with diesel engine

Diesel fuel

Please note the information on the inside of the fuel tank flap.

Diesel fuel must comply with the European EN 590 standard. It must have a cetane number (CN) of at least 51. The cetane number indicates the ignition quality of the diesel fuel.

Winter-grade diesel

Diesel fuel can thicken in winter. For this reason petrol stations in some countries also offer winter diesel.

U Caution

• The vehicle is **not** designed for the use of biodiesel (FAME fuel). The fuel system would be damaged if you used biodiesel.

• Do not mix fuel additives ("thinners", petrol or similar additives) with the diesel fuel.

• If poor-quality diesel fuel is used, it may be necessary to drain the water separator on the **fuel filter** more frequently than is specified in the Service Schedule. We recommend having this done by a specialist workshop. If water is allowed to collect in the filter, this can cause engine performance problems.

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
				•)			

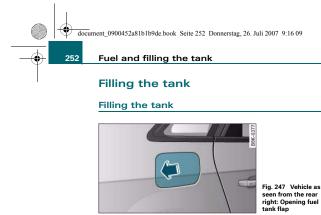




Fig. 248 Fuel tank flap with tank cap attached

The flap that covers the tank cap is unlocked and locked automatically by the central locking.

Unscrewing the tank cap

– Press the left side of the flap to open it \Rightarrow fig. 247 -arrow-.

- Unscrew the tank cap anti-clockwise.
- Hook the cap onto the open flap \Rightarrow fig. 248.

Closing the tank cap

- Screw on the tank cap clockwise until it cannot be turned further.
- Press the left side of the flap to close it (you should hear it click into place).

When the automatic filler nozzle is operated correctly it will switch itself off as soon as the tank is "full". Do not try to put in more fuel after the nozzle cuts out, as this will fill the expansion chamber in the fuel tank.

The correct fuel grade for your vehicle is given on a sticker on the inside of the tank flap. Further notes on fuel \Rightarrow page 251.

The tank capacity of your vehicle is given in the Technical data section \Rightarrow page 321.

Fuel is highly inflammable and can cause serious burns and other injuries.

 For safety reasons always switch off the auxiliary heating* before refuelling the vehicle.

 For safety reasons we do not recommend carrying a spare fuel canister in the vehicle. The canister could become damaged in an accident and leak.

• Observe all relevant statutory regulations on using, storing and transporting spare fuel canisters.

• When filling your tank or a spare fuel canister with fuel, do not smoke and keep away from naked flames. Risk of explosion!

• If, in exceptional circumstances, you have to carry a spare fuel canister, please observe the following warnings:

 Never fill fuel into the spare fuel canister with the canister placed in or on top of the vehicle. An electrostatic charge could build up during filling, causing the fuel vapour to ignite. Danger of explosion. Always place the canister on the ground to fill it. document_0900452a81b1b9de.book Seite 253 Donnerstag, 26. Juli 2007 9:16 09

(WARNING (continued)

 Insert the filler nozzle as far as possible into the spare fuel canister.

 If the spare fuel canister is made of metal, the filler nozzle must be in contact with the canister during filling. This helps prevent an electrostatic charge building up.

 Make sure you never spill fuel in the vehicle or in the luggage compartment. Fuel vapour is explosive. Risk of fatal accident!

! Caution

• If any fuel is spilt onto the vehicle, it should be removed immediately, as it could otherwise damage the paintwork.

• Never run the tank completely dry. If there is an irregular fuel supply, misfiring can occur. As a result unburnt fuel can enter the exhaust system and cause damage to the catalytic converter(s).

• When filling the fuel tank after having run it completely dry on a vehicle with a **diesel engine** the ignition must be switched on for at least 30 seconds without starting the engine. When you then start the engine it may take longer than normal (up to one minute) for the engine to start firing. This is because air needs to be bled from the fuel system while starting.

🕷 For the sake of the environment

Do not try to put in more fuel after the automatic filler nozzle has switched off; this may cause the fuel to overflow if it becomes warm.

i Note

The tank flap is not locked when you lock the vehicle from the inside. \blacksquare

Fuel and filling the tank

Releasing the tank flap manually

The tank flap can be released manually if the central locking system should fail to operate.



Fig. 249 Luggage compartment: Releasing the fuel tank flap manually

The manual release mechanism is located behind the side trim on the right of the luggage compartment.

- Open the right-hand side trim.
- Release the ring from its holder and pull the ring
 ⇒ fig. 249. You should now be able to open the tank flap
 in the usual way ⇒ page 252. ■



document_0900452a81b1b9de.book Seite 254 Donnerstag, 26. Juli 2007 9:16 09

Checking and topping up fluids

Checking and topping up fluids

Bonnet

۲

254

Releasing the bonnet

The bonnet is released from inside the vehicle.

 


Fig. 250 Detail of footwell on driver's side: Release lever

- Open the driver's door.
- Pull the lever under the dashboard in the direction indicated (arrow) \Rightarrow fig. 250.

The bonnet springs out of its lock.

Opening the bonnet



Fig. 251 Release catch under the bonnet

Before opening the bonnet make sure that the windscreen wiper arms are not lifted away from the glass. Otherwise the paint may get damaged.

– Lift the bonnet slightly $\Rightarrow \Delta$.

- Press the release catch under the bonnet upwards \Rightarrow fig. 251. This will release the arrester hook.
- Open the bonnet.

The bonnet is held open by two gas-filled struts.

To avoid the risk of being scalded, never open the bonnet if you see steam or coolant escaping from the engine compartment. Wait until no steam or coolant can be seen before opening the bonnet. document_0900452a81b1b9de.book Seite 255 Donnerstag, 26. Juli 2007 9:16 09

Working on components in the engine compartment

Extra caution is necessary when working on components in the engine compartment.

Always be aware of the danger of injury and scalding as well as the risk of accident or fire when working in the engine compartment (e.g. when checking and refilling fluids). Always observe the warnings listed below and follow all normal safety precautions. The engine compartment of any motor vehicle is a potentially hazardous area. $\Rightarrow \Delta$.

- Switch off the engine.
- Remove the ignition key.
- Apply the parking brake.
- Put the gear lever in neutral or selector in P.
- Wait for the engine to cool down.
- Keep children away from engine compartment.
- Never spill fluids on hot engine components. These fluids can cause a fire (e.g. radiator anti-freeze).
- Take care not to cause short circuits in the electrical system, especially when working on the battery.

• Do not touch the radiator fan when the engine is hot. The fan may start running suddenly.

- Do not unscrew the cap on the expansion tank when the engine is hot. The cooling system is under pressure.
- Protect face, hands and arms by covering the cap with a large, thick rag to protect against escaping coolant and steam.

 If any tests have to be performed with the engine running, there is an extra safety risk from the rotating parts, such as the drive belts, alternator and radiator fan, etc., and from the highvoltage ignition system. Checking and topping up fluids

1

WARNING (continued)

 Vehicles with automatic gearbox: Never open the throttle inadvertently (for instance by hand from the engine compartment) if a gear is engaged while the vehicle is stationary with the engine running. The vehicle could otherwise start moving immediately and possibly cause an accident.

• Observe the following additional warnings if work on the fuel system or the electrical system is necessary:

- Always disconnect the battery.
- Do not smoke.
- Never work near naked flames.
- Always keep an approved fire extinguisher immediately available.

U Caution

When topping up fluids make sure the correct fluid is put into the correct filler opening. This can otherwise cause serious malfunctions or engine damage.

🗱 For the sake of the environment

Inspect the ground underneath your vehicle regularly so that any leaks are detected at an early stage. If you find oil spots or other fluids, have your vehicle inspected by a qualified workshop.

i Note

On right-hand drive vehicles* some of the containers / reservoirs mentioned below are located on the other side of the engine compartment.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
• —) 			

1

document_0900452a81b1b9de.book Seite 256 Donnerstag, 26. Juli 2007 9:16 09

Checking and topping up fluids

Closing the bonnet

- To close the bonnet, pull it down to overcome the spring pressure.
- Then let it drop into the catches; do not press down \Rightarrow \triangle .

۲

256

• For safety reasons the bonnet must always be completely closed when the vehicle is moving. After closing it always check that it is properly secured. The bonnet must be flush with the adjacent body panels.

 Should you notice that the bonnet is not safely secured when the vehicle is moving, stop the vehicle immediately and close the bonnet properly, otherwise it could cause an accident.

Engine compartment layout

Engine compartment layout

Main components for checking and refilling

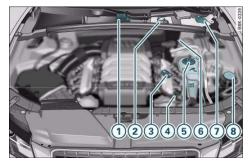


Fig. 252 Typical locations of fluid containers, engine oil dipstick and engine oil filler cap

1	Jump-start terminal (+) under a cover 265,	294
2	Brake fluid reservoir (🔘)	262
3	Engine oil filler cap (🖘)	259
4	Engine oil dipstick* (orange)	258
5	Radiator expansion tank (🔔) 🛛	261
6	Jump-start terminal (-) with hexagon head 265,	294
1	Windscreen washer container (虊) 🛛	267
8	Hydraulic fluid reservoir for power steering	225



document_0900452a81b1b9de.book Seite 257 Donnerstag, 26. Juli 2007 9:16 09

The positions of the engine oil filler cap and the engine oil dipstick \Rightarrow *page 256*, fig. 252 (items (3) and (4)) may be different on some engine versions.

Engine oil

General notes

We recommend that you have the oil change carried out by an Audi dealership / qualified workshop according to the intervals stated in the Service Schedule or according to the service interval display in the instrument cluster.

Whether your vehicle is serviced at *flexible* service intervals or *fixed* service intervals is shown in the Service Schedule.

The correct oil specifications for your engine are listed in the **Technical data** section \Rightarrow *page 323,* "Performance, weights and dimensions".

Check that the specifications quoted (VW standards) appear on the container either singly or in combination with other specifications.

Flexible service intervals (Audi LongLife Service*)

Special engine oils \Rightarrow page 323, "Performance, weights and dimensions" have been developed as part of the Audi LongLife Service (\Rightarrow "Service Schedule").

This type of oil **must** be used if you intend to take advantage of the extended maintenance intervals allowed by the Audi LongLife Service.

• Do not mix the LongLife oil with oil intended for fixed service intervals, as the requirements for the extended service intervals are then no longer guaranteed.

 In exceptional circumstances, if the engine oil level is too low *page 258* and you cannot obtain the specified LongLife oil, you can put in a small quantity of oil for **fixed service intervals** -*page 323*, "Performance, weights and dimensions". This should Checking and topping up fluids

257

not be done more than once and no more than 0.5 litres should be used.

Fixed service intervals (Inspection Service)*

If you do not take advantage of the LongLife service for your car, you can use the oils for **fixed service intervals** - \Rightarrow *page* 323, "Performance, weights and dimensions". In this case, your car must be serviced after a fixed interval of 1 year / 15,000 km (9,000 miles) – see Service Schedule.

 In exceptional circumstances, if the engine oil level is too low ⇒ page 258 and you cannot obtain the oil specified for your vehicle, you can put in a small quantity of oil conforming to the specification ACEA A2 or ACEA A3 (petrol engines) or ACEA B3 or ACEA B4 (diesel engines). This should not be done more than once and no more than 0.5 litres should be used.

Vehicles with diesel particulate filter*

The Service Schedule states whether your vehicle is fitted with a diesel particulate filter.

 Vehicles with diesel particulate filter must only be filled with engine oil VW 507 00. This oil can be used regardless of whether the vehicle is serviced at flexible service intervals (Audi LongLife Service) or fixed service intervals.

Avoid mixing this oil with other engine oils.

 In exceptional circumstances, if the engine oil level is too low ⇒ page 258 and you cannot obtain the oil specified for your vehicle, you can put in a small quantity of oil conforming to the specification W 506 00 / W 506 01 or WV 505 00 / WV 505 01 or ACEA B3 / ACEA B4. This should not be done more than once and no more than 0.5 litres should be used.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
—)—			

1

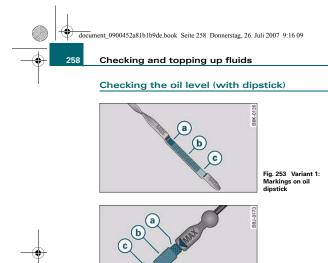




Fig. 254 Variant 2: Markings on oil dipstick

Checking the oil level

- Park your vehicle on a level surface.
- Allow the warm engine to run briefly at idling speed and then switch off the ignition.
- Wait approx. 2 minutes.
- Pull out the dipstick. Wipe the dipstick with a clean cloth and insert it again, pushing it in as far as it will go.

- Then pull the dipstick out again and check the oil level ⇒ fig. 253 or ⇒ fig. 254. If the oil level is too low, add more engine oil ⇒ page 259.
- Oil level in area (a)

- Do not top up oil.

Oil level in area (b)

- Oil *can* be topped up. *After topping up* the oil level should be in area (a).

Oil level in area ⓒ

- Oil *must* be topped up. *After topping up* the oil level should be in area (a).

Depending on how you drive and the conditions in which the car is used, oil consumption can be up to 0.5 ltr./1000 km. Oil consumption is likely to be higher for the first 5000 km. You should therefore check the oil level at regular intervals, ideally every time you fill the tank, and also before setting off on a long trip.

document_0900452a81b1b9de.book Seite 259 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: without oil dipstick

Checking the oil level (without dipstick)

You can check the engine oil level via the sound system or MMI*.



- Select: Function selector button CAR > Oil level.
- Park your vehicle on a level surface.
- Allow the warm engine to run briefly at idling speed and then switch off the ignition.
- Wait approx. 2 minutes
- Read off the oil level on the display ⇒ fig. 255. Top up the engine oil if the bar in the oil level display is near the "min" mark ⇒ page 259.

Depending on how you drive and the conditions in which the car is used, oil consumption can be up to 0.5 ltr./1000 km. Oil consumption is likely to be higher for the first 5000 km.

i Note

1

The oil level display is intended solely for information purposes. An oil level warning will appear in the instrument cluster if the oil level is too low. Add more oil \Rightarrow *page 259.* If the bonnet has been opened,

Checking and topping up fluids

the current oil level will be shown in the instrument cluster the next time the ignition is switched on. \blacksquare

Topping up the engine oil



Fig. 256 Engine compartment: Engine oil filler cap

1

- Unscrew cap $rac{}$ from oil filler opening \Rightarrow fig. 256.
- Carefully put in the specified grade of oil \Rightarrow page 323 0.5 litres at a time.
- Check the oil level again after two minutes by calling up the sound system or MMI* display or using the oil dipstick ⇒ page 258.
- If the oil level is too low, add more engine oil.
- Replace the oil filler cap carefully and push the dipstick all the way in (on vehicles with dipstick).

• Ensure that no oil comes into contact with hot engine components when topping up: this could cause a fire.

 Wash your skin thoroughly if it comes into contact with engine oil.

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
			<u>)</u>			

document_0900452a81b1b9de.book Seite 260 Donnerstag, 26. Juli 2007 9:16 09

Checking and topping up fluids

U Caution

• The oil level must never be above area (a) \Rightarrow page 258, fig. 254, as this may result in damage to the catalytic converter or to the engine. On vehicles without an oil dipstick, you can check the oil level via the sound system or MMI*. Contact a qualified workshop to extract the engine oil if necessary.

• No additives should be used with engine oil. Any damage caused by the use of such additives would not be covered by the factory warranty.

🗱 For the sake of the environment

• Never pour oil down drains or into the ground.

• Always observe statutory requirements when disposing of empty oil canisters.

Cooling system

Coolant

The purpose of the coolant is to carry heat away from the engine. The correct amount of anti-freeze is important to prevent the cooling system from freezing in winter.

The cooling system is filled for life at the factory, so the coolant does not need to be changed. The coolant consists of a mixture of water and anti-freeze additive G12++. This is a glycol-based anti-freeze with anti-corrosion additives.

Anti-freeze additive

The amount of anti-freeze additive required depends on the temperatures to be expected in the winter season. If the anti-freeze concentration is too low the coolant can freeze, resulting in failure of the cooling system and heater. The cooling system is filled at the factory with the correct amount of anti-freeze for the country concerned.

In most cases the mixture consists of 60% water and **40% additive**. This mixture gives the required anti-freeze protection at temperatures down to -25 °C and protects the alloy parts of the cooling system against corrosion. It also prevents scaling and raises the boiling point of the coolant.

Countries with warm climate

The coolant concentration must not be reduced by adding plain water, even in the summer or in warm climates. The concentration of the anti-freeze additive must always be **at least** 40%.

Countries with cold climate

If greater anti-freeze protection is required in very cold climates, the proportion of the anti-freeze additive G12++ can be increased. A concentration of 60% offers protection down to about - 40 °C. The concentration of the anti-freeze additive must **not be more than** 60%, otherwise this would reduce the anti-freeze protection. In addition, the cooling effect will be adversely affected.

Vehicles for export to countries with a cold climate (such as Sweden, Norway and Finland) are supplied with antifreeze protection down to about -35 °C. The concentration of the antifreeze additive for these countries should always be at least 50%.

U Caution

 It is advisable to have the cooling system checked before the winter season to make sure that the antifreeze concentration is adequate for the conditions to be expected. This applies particularly if you intend to take the car into a colder climate zone. If necessary, have the anti-freeze concentration increased to 50 - 60% as required.

• Use only anti-freeze additive G12++, an additive meeting the specification "TL 774 G". Other additives may give considerably inferior corrosion protection. The resulting corrosion in the cooling system can lead to a loss of coolant, causing serious damage to the engine.

document_0900452a81b1b9de.book Seite 261 Donnerstag, 26. Juli 2007 9:16 09

Checking and topping up fluids

♥| ● 61 ●

1

• The coolant additive G12++ can be mixed only with additives G12+ and G12. \blacksquare

Checking coolant level

The coolant level can be checked at a glance.



Fig. 257 Engine compartment: Markings on radiator expancion tonk

- Switch off the ignition.

 Read off coolant level on radiator expansion tank
 ⇒ fig. 257. When the engine is cold it should be between the "MIN" and "MAX" marks. When the engine is hot it may be slightly above the "MAX" mark.

The coolant level should be checked with the engine switched off. The coolant level is monitored by a warning lamp in the instrument cluster \Rightarrow *page* 33. However, we recommend that it should be checked occasionally.

Coolant losses

1

Any loss of coolant normally indicates a **leak** in the cooling system. In this case the cooling system should be inspected by a qualified workshop without delay. It is not sufficient merely to top up the coolant. If there are **no leaks** in the system, a loss of coolant can only occur if the coolant boils and is forced out of the system as a result of overheating.

U Caution

Radiator sealants must not be added to the coolant. Such additives could seriously impair the function of the cooling system.

Topping up the coolant

Be careful when topping up coolant.

- Switch off the engine.
- Wait for the engine to cool down.
- Cover the cap on the expansion tank \Rightarrow fig. 257 with a cloth, and **carefully** unscrew the cap anti-clockwise $\Rightarrow \triangle$.
- Add coolant.
- Screw the cap on again tightly.

Make sure that the coolant meets the required specifications $\Rightarrow page 260$, "Coolant". Do not use a different type of additive if antifreeze additive G12++, G12+ or G12 is not available. In this case use only water and bring the coolant concentration back up to the correct level as soon as possible by putting in the specified additive. Always too up with *fresh. unused* coolant.

Do not fill above the "MAX" mark. Excess coolant is forced out of the system through the valve in the filler cap when the engine gets hot.

If a lot of coolant has been lost, wait for the engine to *cool down* before putting in cold coolant. Failure to do so could result in serious engine damage.

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
	—) —			

document_0900452a81b1b9de.book Seite 262 Donnerstag, 26. Juli 2007 9:16 09

Checking and topping up fluids

262

• The cooling system is under pressure. Do not unscrew the cap on the expansion tank when the engine is hot: you could be scalded by escaping steam

• The coolant and coolant additive can be a health hazard. Store the coolant additive in the original container in a safe place out of reach of children – risk of poisoning.

***** For the sake of the environment

Drained off coolant should not be used again. Drain off the used coolant into a suitable container and dispose of it in the proper manner (observe environmental regulations). \blacksquare

Radiator fan

The radiator fan can start running spontaneously.

The radiator fan is driven by the engine via a poly V-belt. The speed of the fan is varied by a viscous clutch according to the temperature.

There is also an auxiliary electric fan, which cuts in automatically whenever the temperature of the coolant and the engine compartment rises above a certain level.

The auxiliary fan can continue to run for as long as 10 minutes after stopping the engine – even after the ignition is switched off. It may also start running suddenly $\Rightarrow \triangle$ after a while if

· residual heat raises the coolant temperature, or

• the hot engine compartment is additionally heated up by the sun.

When working in the engine compartment be aware that the radiator fan may start running suddenly – risk of injury.

Brake fluid

Checking brake fluid level

The brake fluid level can be checked at a glance.



Fig. 258 Engine compartment: Markings on brake fluid

 Check the fluid level on the brake fluid reservoir ⇒ fig. 258. It should always be between the "MIN" and "MAX" marks.

In right-hand drive vehicles the brake fluid reservoir is on the other side of the engine compartment.

The fluid level may drop *slightly* after a period of time due to the automatic compensation for brake pad wear. This is quite normal.

However, if the level goes down noticeably in a *short* time, or drops below the "MIN" mark, there may be a leak in the brake system. If the fluid level in the reservoir is too low, this will be indicated by the brake warning lamp \Rightarrow *page 32*. If this should happen, **take the car** to a qualified workshop immediately and have the brake system inspected.

document_0900452a81b1b9de.book Seite 263 Donnerstag, 26. Juli 2007 9:16 09

Changing brake fluid

When required, the brake fluid should be changed by a competent mechanic with the proper equipment.

Brake fluid gradually absorbs moisture from the atmosphere. If the water content in the brake fluid is too high, this may cause corrosion in the brake system over time. In addition, the boiling point of the brake fluid will be considerably reduced. This could adversely affect the braking ability in certain circumstances.

For this reason the brake fluid must be changed periodically.

Your vehicle's Service Schedule will tell you when the brake fluid has to be changed.

It is advisable to have the brake fluid changed as part of a regular Inspection Service at your Audi workshop. They are familiar with the procedure and have the necessary special tools and spare parts as well as the proper facilities for disposing of the old fluid.

Use only the genuine brake fluid specified by the factory Qualified workshops know that the brake fluid "DOT 4" is approved by Audi. The brake fluid must be fresh and unused.

• Brake fluid is poisonous; store it in the sealed original container in a safe place out of reach of children.

 Heavy use of the brakes may cause a vapour lock if the brake fluid is left in the system for too long. This would seriously affect the efficiency of the brakes and the safety of the car – risk of accident.

U Caution

Please note that brake fluid will attack the paintwork on contact.

Checking and topping up fluids

₃_⊕

🐮 For the sake of the environment

If the fluid has to be drained out of the brake system, use an appropriate container to catch the used brake fluid and dispose of it in the proper manner.

Battery

General notes

All work on batteries requires specialist knowledge.

The battery is virtually **maintenance-free**. It is checked as part of the Inspection Service.

We recommend that you replace a battery once it is older than 5

years. When an airbag is triggered, the battery will, under certain circumstances, be disconnected from the on-board power supply for

 
safety reasons \Rightarrow \triangle in "General notes on airbag system" on page 201.

Disconnecting the battery

If the battery is disconnected, some of the vehicle's functions will become inoperative (e.g. electric windows). These functions will require resetting after the battery is reconnected. For this reason, the battery should only be disconnected from the vehicle's electrical system when absolutely necessary.

If the vehicle is not used for long periods

If you do not drive your vehicle for a period of several days or weeks, the power management will gradually shut off the on-board systems one by one, or reduce the amount of current they are using. This limits the amount of power consumed and helps to ensure reliable starting even after a long period \Rightarrow page 226.



document_0900452a81b1b9de.book Seite 264 Donnerstag, 26. Juli 2007 9:16 09

Checking and topping up fluids

Please note that certain convenience features, such as the Audi advanced key*, the remote control key or the electrical seat adjustment may not be available when you unlock the vehicle. These functions will be restored when you switch on the ignition and start the engine.

Winter conditions

At low temperatures the battery has to work very hard. It also provides only a fraction of the starting power it has at normal temperatures.

For this reason, we recommend having the battery checked and charged if necessary before the start of winter \Rightarrow page 265.

 All work on batteries requires specialist knowledge. For queries regarding the vehicle battery please contact an Audi dealership or other qualified workshop (risk of chemical burns / risk of explosion).

 The battery must not be opened. Do not attempt to make any changes to the electrolyte level of the battery. Otherwise, there is a risk that a mixture of oxygen and hydrogen gas can accumulate and cause an explosion.

i Note

If the vehicle is to be left standing for a period of several weeks at extremely low temperatures, the battery should be removed from the vehicle. This ensures that it cannot "freeze up" and be damaged. \blacksquare

Important safety warnings for handling a car battery

All work on batteries requires specialist knowledge.

The vehicle battery is located under the floor panel in the luggage compartment.

0	Wear safety glasses!
	Battery acid is extremely corrosive. Wear protec- tive gloves and safety glasses.
8	Keep open flames, sparks, uncovered lights and lit cigarettes away from battery!
	A highly explosive mixture of gases is given off when the battery is under charge!
8	Keep children away from the battery and battery acid.

Always be aware of the danger of injury and chemical burns as well as the risk of accident or fire when working on the battery and the electrical system.

• Wear safety glasses. Do not allow acid or lead particles to come into contact with eyes, skin or clothing.

 Battery acid is extremely corrosive. Wear protective gloves and safety glasses. Do not tilt the battery - acid can leak out of the vapour vent. If electrolyte should splash into the eyes rinse at once for several minutes using clear water. Then seek medical care immediately. Neutralize any acid splashes on the skin or clothing with soap solution, and rinse off with plenty of water. If acid is swallowed by mistake, consult a doctor immediately.

• Keep open flames, sparks, uncovered lights and lit cigarettes away from battery. Avoid sparks (including those from static

document_0900452a81b1b9de.book Seite 265 Donnerstag, 26. Juli 2007 9:16 09

MARNING (continued)

charges) when handling cables and electrical equipment. Never cross the battery poles. The resulting high-energy sparks can cause injury.

• A highly explosive mixture of gases is given off when the battery is under charge. Only charge battery in a well ventilated area.

• Keep children away from the battery and battery acid.

 Switch off all electrical equipment before starting any work on the vehicle electrical system. Remove the ignition key. The minus cable of the battery must be disconnected. When changing a light bulb, it is sufficient to only turn off the light.

• Before disconnecting the battery, turn off the anti-theft system! Otherwise, the alarm will sound.

 When disconnecting the battery from the vehicle's electrical system, first disconnect the minus cable and then the plus cable.

• Before reconnecting the battery, turn off all electrical equipment. First connect the plus cable, then the minus cable. The

battery cables must not be connected to the wrong battery poles
serious risk of cable fire.
Never charge a frozen or thawed out battery - risk of explosion

and chemical burns! A battery must be replaced once it has been frozen. When it is discharged the battery can freeze at temperatures around 0°C.

• Make sure that the vapour hose is always attached to the battery.

Never use a damaged battery - risk of explosion! Replace a damaged battery immediately.

U Caution

1

 Never disconnect the car's battery with the engine running or with the ignition turned on, otherwise the electrical system or electrical components will be damaged. Checking and topping up fluids

ht over a long period of

• Do not expose the battery to direct sunlight over a long period of time, as the intense ultraviolet radiation can affect the battery housing.

• If the car is left standing for long periods, protect the battery from extreme cold temperature so that it does not "freeze up" and become damaged.

Charging the battery

Terminals for charging the battery are fitted in the engine compartment.



Fig. 259 Engine compartment: Terminals for jump leads and battery charger

1

- − Note the warnings \Rightarrow \triangle in "Important safety warnings for handling a car battery" on *page 264* and \Rightarrow \triangle .
- Switch off all electrical equipment. Remove the ignition key.
- Open the bonnet \Rightarrow page 254.
- Open the red cap on the positive terminal \Rightarrow fig. 259.
- Follow the correct procedure for connecting the charger cables to the jump-start terminals (terminal with red cap = "positive", terminal with hexagon = "negative").

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
	-) —		-+	

document_0900452a81b1b9de.book Seite 266 Donnerstag, 26. Juli 2007 9:16 09

Checking and topping up fluids

- Now connect the battery charger to the mains and switch on.
- After charging the battery: switch off the battery charger and disconnect the mains cable.
- Now disconnect the charger cables.
- Refit the red cap onto the positive terminal.
- Close the bonnet \Rightarrow page 256.

When it is discharged the battery can freeze at temperatures around 0°C. A frozen battery must be thawed before charging $\Rightarrow \Delta$. However, it is advisable to replace the battery if it has frozen, because the ice can crack the battery casing and allow the battery acid to escape.

Charging the battery

Important: Before you charge the battery make sure you read the manufacturer's instructions for using the battery charger.

When charging with a low current (for instance with a small battery charger) the battery does not have to be disconnected. The battery must not be opened while you are charging it.

Fast-charging the battery

For technical reasons it is not permissible to fast-charge the battery using charging devices with an output voltage higher than 14.8 V.

Never charge a frozen battery – it could explode.

i Note

Use only the terminals in the engine compartment to charge the battery. 🔳

Replacing the battery

A replacement battery must have the same specifications as the original equipment battery.

Your vehicle is equipped with an intelligent power management system to control the distribution of electrical energy \Rightarrow page 226. The power management function ensures that the battery is charged much more efficiently than on vehicles without a power management system. For this additional power to be available after replacing the battery, we recommend that the replacement battery used is of the same make and type as the original-equipment battery. The battery must be encoded in the control unit for power management. This has to be done by a qualified workshop.

A replacement battery must have the same capacity, voltage (12 V) and current rating. It must also have the same dimensions as the original, factory-fitted battery and have sealed caps. The battery must comply with the standards TL 825 06 (dated December 1997 or later) and VW 7 50 73 (August 2001 or later).

U Caution

 Make sure that the vent hose is always attached to the opening on the side of the battery. Gases or battery acid can otherwise escape and possibly cause damage.

The battery holder and clamps must always be correctly secured.

• Before starting any work on the battery, always observe the warnings listed under \Rightarrow page 264, "Important safety warnings for handling a car battery".

🕷 For the sake of the environment

 $\overline{\$}$ Batteries contain toxic substances including sulphuric acid and lead. They must be disposed of appropriately and must not be put together with ordinary household waste. Make sure the battery removed from the vehicle cannot tip over. Otherwise, sulphuric acid could escape.



document_0900452a81b1b9de.book Seite 267 Donnerstag, 26. Juli 2007 9:16 09

Windscreen washer

4

Plain water on its own is not sufficient for the windscreen washer system.



Fig. 260 Engine compartment: Windscreen washer container Checking and topping up fluids

267

The container for the windscreen washer O contains the cleaning fluid for the windscreen and the headlight washer system^{*} \Rightarrow fig. 260. Container capacity: \Rightarrow *page 321*.

Plain water on its own is not enough to clean the glass properly. It is therefore advisable to add a suitable washer fluid additive (with wax solvent) to the water. A washer fluid with freeze-resistant additive should be used in winter.

U Caution

• Never put in radiator anti-freeze or other additives.

• Never use washer fluid which contains paint thinners or solvents as it can damage the paintwork.



document_0900452a81b1b9de.book Seite 268 Donnerstag, 26. Juli 2007 9:16 09

Wheels and tyres

Wheels and tyres

Wheels

General notes

- When driving with **new tyres**, be especially careful during the first 500 km.
- If you have to drive over a kerb or similar obstacle, drive very slowly and as near as possible at a right angle to the kerb.
- Inspect the tyres regularly for damage (cuts, cracks or blisters, etc.). Remove any foreign bodies embedded in the treads.
- Damaged wheels and tyres must be replaced immediately.
- Keep grease, oil and fuel off the tyres.
- Replace any missing valve caps as soon as possible.
- Mark the wheels before taking them off so that they rotate in the same direction when put back.
- When removed, the wheels or tyres should be stored in a cool, dry and preferably dark place.

New tyres

New tyres do not give maximum **grip** straight away and should therefore be "run in" by driving carefully and at moderate speeds for about the first 500 km. This will also help to make the tyres last longer.

The **tread depth** of new tyres may *vary*, according to the type and make of tyre and the tread pattern.

Concealed damage

Damage to tyres and rims is often not readily visible. If you notice unusual vibration or the car pulling to one side, this may indicate that one of the tyres is damaged. Reduce speed immediately if there is any reason to suspect that damage may have occurred. Inspect the tyres for damage. If no external damage is visible, drive slowly and carefully to the nearest qualified workshop and have the car inspected.

Tyres with directional tread pattern

An arrow on the tyre sidewall indicates the direction of rotation on tyres with directional tread. Always note the direction of rotation indicated when mounting the wheel. This guarantees optimum grip and helps to avoid aquaplaning, excessive noise and wear.

Tyre service life

Correct inflation pressures and sensible driving habits will increase the service life of your tyres.



Fig. 261 Open driver's door (LHD vehicle) with sticker listing tyre inflation pressures

Check the tyre pressures at least once a month.

document_0900452a81b1b9de.book Seite 269 Donnerstag, 26. Juli 2007 9:16 09

- The tyre pressures should only be checked when the tyres are *cold*. The slightly raised pressures of warm tyres must not be reduced.
- The pressures must be altered to suit major changes in the load being carried.
- Avoid fast cornering and hard acceleration.
- Inspect the tyres for irregular wear from time to time.

Tyre pressure and vehicle loading

The tyre pressure must be adjusted according to the load the vehicle is carrying. We recommend adhering to the tyre pressure specifications for a maximum load. The tyre inflation pressures are listed on a sticker on the end face of the driver's door \Rightarrow page 268, fig. 261.

However, if you prefer an extra-smooth ride and the vehicle is not fully loaded, you can select the tyre pressure for a normal load (no more than three people travelling in the vehicle). However, should you wish to drive with a full load you **must** increase the tyre pressure to the specified maximum.

Under-inflation or over-inflation will reduce the life of the tyres considerably and also impair the car's handling. Correct inflation pressures are very important, especially at **high speeds**. The pressures should therefore be checked at least once a month and before starting a journey.

Do not forget the spare wheel* when checking the tyre pressures. Keep the spare tyre inflated to the highest pressure required for the road wheels.

Driving habits

Fast cornering, heavy acceleration and hard braking (squealing tyres) all increase tyre wear.

Wheels and tyres

269

Wheel balancing

The wheels on new vehicles are balanced. However, various factors encountered in normal driving can cause them to become unbalanced, which results in steering vibration.

Unbalanced wheels should be rebalanced, as they otherwise cause excessive wear on steering, suspension and tyres. A wheel must also be rebalanced when a new tyre is fitted or if a tyre is repaired.

Incorrect wheel alignment

Incorrect wheel alignment causes excessive tyre wear, impairing the safety of the vehicle. If you notice excessive tyre wear, contact your Audi dealer.

• Always adapt the tyre pressure accordingly when the vehicle load changes.

 Under-inflated tyres flex more and can overheat at continuous high speeds. This can cause tread separation and tyre blow-out, which could result in an accident.

🕷 For the sake of the environment

Under-inflated tyres will increase the fuel consumption.



document_0900452a81b1b9de.book Seite 270 Donnerstag, 26. Juli 2007 9:16 09

Wheels and tyres

•

270

Tread wear indicators

The tread wear indicators show the condition of the tyre treads.



Fig. 262 Tyre tread: Tread wear indicators

The original tyres on your vehicle have 1.6 mm high "tread wear indicators" \Rightarrow fig. 262 running across the tread. Depending on the make, there will be 6 to 8 of them spaced at equal distances around the tyre. Markings on the tyre sidewall (for instance the letters "TWI" or a triangle) indicate the positions of the tread wear indicators.

The minimum tread depth required by law in Germany is 1.6 mm (measured in the tread grooves next to the tread wear indicators). Other specifications may apply in export countries.

 
To avoid putting safety at risk, the tyres must be replaced at the latest when the tread is worn down to the tread wear indicators. • Especially in difficult driving conditions such as wet or icy roads, it is important that the tyres have sufficient tread depth. The tread depth should same on the tyres of both the front and the rear axles.

 The decrease in driving safety due to insufficient tread depth is particularly evident in vehicle handling, when there is a risk of WARNING (continued)

aquaplaning in deep puddles of water and when driving through corners. Braking is also adversely affected.

 The speed has to be adapted accordingly, otherwise there is a risk of losing control over the vehicle.

Changing wheels round



To ensure that the wear is equal on all tyres the wheels should be changed round from time to time according to the system \Rightarrow fig. 263. All the tyres will then last for about the same time.

Replacing wheels and tyres

It is important to use the correct wheels and tyres when replacement is necessary.

- All four wheels must be fitted with tyres of the same type, size (rolling circumference) and preferably the same tread pattern.
- If possible, tyres should be replaced at least in pairs and not individually (i.e. both front tyres or both rear tyres together).

Downloaded from www.Manualslib.com manuals search engine

document_0900452a81b1b9de.book Seite 271 Donnerstag, 26. Juli 2007 9:16 09

- Never use tyres whose actual size exceeds the dimensions of the factory-approved makes of tyre.
- If you wish to fit the vehicle with non-standard rims or tyres, it is advisable to consult an Audi dealer before purchasing them.

The tyres and wheel rims are an essential part of the vehicle's design. The tyres and rims approved by Audi are specially matched to the characteristics of the vehicle and make a major contribution to good roadholding and safe handling $\Rightarrow \Delta$.

The sizes of the rims and tyres approved for your vehicle are listed in the vehicle's documents (e.g. EC Certificate of Conformity or COC document ³¹). The vehicle documents vary depending on the country of residence.

Understanding the tyre designations makes it easier to choose the correct tyres. For example, radial ply tyres have the following **tyre designations** marked on the sidewall:

225 / 50 R 17 94 Y

This contains the following information:

225	Tyre width in mm
50	Height/width ratio in %
R	Tyre construction: Radial
17	Rim diameter in inches
94	Load rating code
Y	Speed rating code letter

The **manufacturing date** is also indicated on the tyre sidewall (possibly only on the *inner* side of the wheel):

DOT ... 1006...

3) COC = certificate of conformity

Wheels and tyres

means, for example, that the tyre was produced in the 10th week of 2006.

Please note that with some types of tyres, the actual tyre size can differ from the nominal size marked on the tyre (for instance 225/50 R 17 94 Y), and there may be significant differences in the contours of the tyres, even though the tyres are marked with the same nominal size designation. When replacing the tyres, it is therefore important to make sure that the actual size of the new tyres does not exceed the dimensions of the factory-approved makes of tyre.

Failure to observe this requirement can affect the clearance needed for the tyres. This could result in contact between the tyres and suspension components or bodywork. The brake lines could also be damaged and the vehicle's safety could be severely impaired $\Rightarrow \triangle$. When using tyres with the maximum permitted nominal dimensions, this can also void the vehicle's registration.

If you use tyres that are approved by Audi you can be sure that the actual tyre dimensions will be correct for your vehicle. If you decide to fit a different type of tyre, you must obtain the appropriate manufacturer's certificate from the tyre retailer to confirm that the tyres are suitable for your vehicle. Keep this certificate in a safe place.

Your local Audi dealer will be able to advise you on which tyres may be fitted to your vehicle.

On vehicles with **four-wheel drive**, all four tyres must always be fitted with tyres of the same type, make and tread pattern, as otherwise the driveline can be damaged by continuous variations in the wheel speeds. For the same reason, only use a spare wheel* with the same tyre dimensions as the normal road wheels.

It the **spare tyre**^{*} is not the same type as the tyres fitted on the car (for example if the car has winter tyres or wide-section tyres) you should only use the spare tyre if a puncture occurs, and then only for a short period of time. In this case, please drive with extra care. Refit the normal road wheel as soon as possible.

It is best to have all servicing of wheels and tyres performed by a **qualified workshop**. They have the necessary special tools and

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
	—) —			

document_0900452a81b1b9de.book Seite 272 Donnerstag, 26. Juli 2007 9:16 09

Wheels and tyres

replacement parts, trained personnel and facilities for disposing of the old tyres.

272

It is very important to ensure that the tyres you have chosen have adequate clearance. When selecting replacement tyres, do not rely entirely on the nominal tyre size marked on the tyre; with some makes of tyre the effective tyre size can differ significantly from the nominal dimensions, even though the tyres have the same size designation. Inadequate tyre clearance can result in damage to the tyres or the vehicle, causing a serious safety risk. It may also invalidate the vehicle's type approval for use on public roads.

 Please ask your Audi dealer or qualified workshop whether run flat tyres can be used on your vehicle. Unauthorised use of these tyres can invalidate the vehicle's type approval for use on public roads. Furthermore, this could cause damage to your vehicle and possibly also result in an accident.

Avoid running the car on tyres that are more than 6 years old.
 If you have no alternative, you should drive slowly and with extra care at all times.

🗱 For the sake of the environment

Old tyres must be disposed of according to the laws in the country concerned.

i Note

• Never mount used tyres if you are not sure of their previous history.

• For technical reasons it is not normally possible to use wheel rims from other vehicles. In some cases this also applies to rims from other vehicles of the same model.

Wheel bolts

The wheel bolts are designed to suit the rims on your car.

The **wheel bolts** are matched to the rims. When installing different wheels (for instance wheels with winter tyres) it is important to use the correct wheel bolts with the right length and correctly shaped bolt heads. This is essential for the secure fit of the wheels and for the proper function of the brake system.

Audi dealers have full information on the technical requirements when installing or changing tyres, rims or wheel trims.

The wheel bolts should be clean and turn easily.

A special adapter is required to turn the anti-theft wheel bolts* \Rightarrow page 292. \blacksquare

Winter tyres

Winter tyres will significantly improve the car's handling in winter road conditions.

- Use only radial ply winter tyres.
- Winter tyres must be fitted on all four wheels.
- Only use winter tyres of the correct type approved for your vehicle.
- Please note that the maximum permissible speed for winter tyres may be lower than for summer tyres.
- Also note that winter tyres are no longer effective when the tread is worn down.
- After fitting the wheels you must always check the tyre pressures. The correct tyre pressures are listed on the sticker on the end face of the driver's door.

document_0900452a81b1b9de.book Seite 273 Donnerstag, 26. Juli 2007 9:16 09

Wheels and tyres

In winter road conditions winter tyres will considerably improve the car's handling. Due to their type of construction (width, rubber compound, tread pattern), summer tyres give less grip on ice and snow. This applies particularly to vehicles equipped with wide section tyres or high speed tyres (code letters H, V or Y on the sidewall).

Only use winter tyres of the correct type approved for your vehicle. The sizes of the winter tyres approved for your vehicle are listed in the vehicle's documents (e.g. EC Certificate of Conformity or COC document ⁴⁾). The vehicle documents vary depending on the country of residence. Also refer to \Rightarrow page 270, \Rightarrow page 270.

Winter tyres are no longer fully effective when the tread is worn down to a depth of 4 mm.

The performance of winter tyres is also severely impaired by ageing. even if the tread is still much deeper than 4 mm.

Winter tyres are subject to the following maximum speed limits according to speed rating code letter: \Rightarrow \bigwedge

Speed rating code letter \Rightarrow page 270, \Rightarrow page 270	Maximum speed limit
Q	160 km/h
S	180 km/h
Т	190 km/h
н	210 km/h
V	240 km/h (note restrictions)

In Germany vehicles capable of exceeding these speeds must have an appropriate **sticker** attached so it is visible to the driver. Suitable stickers are available from Audi dealers and specialist retailers. Please note regulations to this effect in your country.

4) COC = certificate of conformity

"All-weather" tyres can also be used instead of winter tyres.

Using winter tyres with V-rating

Please note that the generally applicable 240 km/h speed rating for winter tyres with the letter "V" is subject to technical restrictions; the maximum permissible speed for your vehicle may be significantly lower. The maximum speed limit for tyres with a V-rating depends directly on the maximum axle weights for your car and on the listed weight rating of the tyres being used.

It is best to contact an Audi dealer to check the maximum speed which is permissible for the V-rated tyres fitted on your car on the basis of this information.

Exceeding the maximum speed permitted for the winter tyres fitted on your car can cause tyre failure, resulting in a loss of control of the vehicle - risk of accident.

🐮 For the sake of the environment

Summer tyres should be fitted again as soon as possible; they give better handling on roads which are free of snow and ice. Summer tyres produce less rolling noise, do not wear down as quickly and, most importantly, reduce fuel consumption.

Snow chains

Snow chains will improve the vehicle's handling on snowcovered roads.

- Snow chains can be used on the front wheels only.
- Keep your speed below 50 km/h.

Snow chains will improve braking ability as well as traction in winter conditions.

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
						-	

document_0900452a81b1b9de.book Seite 274 Donnerstag, 26. Juli 2007 9:16 09

Wheels and tyres

274

For technical reasons snow chains may only be used on tyres with certain wheel rim/tyre combinations.

Rim size	Rim offset	Tyre size
7Jx16	39 mm	205/60
7Jx16	46 mm	225/55
7Jx17	46 mm	225/50

Only use snow chains with **fine-pitch links**. The links must not protrude more than 13.5 mm from the tyres (including tensioner).

Remove the chains when roads are *free of snow*. Otherwise they will impair handling, damage the tyres and wear out very quickly.

Four-wheel drive: where snow chains are compulsory on certain roads, this normally also applies to cars with four-wheel drive. Snow chains may only be fitted to the *front* wheels (also on vehicles with four-wheel drive).

Run flat tyres

Applies to vehicles: with run flat tyres

Introduction

Run flat tyres allow you to continue your journey in the event of a loss of tyre pressure.

Run flat tyres have reinforced sidewalls which support the tyre in the event of a loss of pressure.

Run flat tyres must only be used on vehicles which were already factory-fitted with these tyres and which also have a tyre pressure monitoring system*.

Run flat tyres can be identified by the marking "RSC" (Runflat System Component) on the sidewall.

If you change the tyres on your vehicle from regular tyres to run flat tyres or vice-versa, the control unit must be reprogrammed by an Audi dealer or other qualified workshop.

What are the benefits of run flat tyres?

Run flat tyres ensure that you remain mobile, even in the event of a loss of tyre pressure. In favourable conditions these tyres have an operating range of at least 30 km, however the vehicle **must not be driven faster than 80 km/h** $\Rightarrow \triangle$ in "Driving with run flat tyres" on page 275.

The tyre pressures are constantly checked by the tyre pressure monitoring system. When the run flat system becomes active (centre display), it is still the driver's responsibility to check the tyre(s) affected and to decide whether it is possible to continue driving. Also refer to \Rightarrow page 275, "Driving with run flat tyres".

When is it no longer possible to continue driving with the help of the run flat tyres?

• If the Electronic Stabilisation Program (ESP) is out of operation or is triggered continuously.

• If the tyre pressure monitoring system is out of operation.

If one of the tyres has been severely damaged in an accident, etc.
 If a tyre has been badly damaged there is a risk that parts of the tread can be thrown off and cause damage to the fuel lines, brake pipes or fuel filler.

• You must stop driving if severe vibrations occur, or if the wheel starts overheating and gives off smoke.

• You must also stop driving if damage to the tyres (e.g. tears in the sidewalls) becomes apparent.

Please ask your Audi dealer or qualified workshop whether run flat tyres can be used on your vehicle. Unauthorised use of these tyres can invalidate the vehicle's type approval for use on public roads.

document_0900452a81b1b9de.book Seite 275 Donnerstag, 26. Juli 2007 9:16 09

WARNING (continued)

Furthermore, this could cause damage to your vehicle and possibly also result in an accident.

i Note

• If you cannot continue driving even with run flat tyres please obtain professional assistance.

• You should obtain professional assistance if you are in any doubt regarding the rims and tyres for your vehicle.

Applies to vehicles: with run flat tyres Driving with run flat tyres

Please remember that the vehicle's handling will be impaired.

Driving a vehicle with a deflated tyre, or with insufficient tyre pressure, is an abnormal situation. However, since the handling of a vehicle equipped with run flat tyres is only slightly impaired, it is important to remember that you are driving with a deflated tyre. If you have to make use of the run flat system please remember the following points:

- The Electronic Stabilisation Program (ESP) must be switched on.
- Do not exceed 80 km/h \Rightarrow \bigwedge .
- Anticipate the traffic situation well in advance.
- Be careful when accelerating.
- Avoid unnecessary braking and steering manoeuvres.
- Reduce speed in good time before corners and potential hazards.

Wheels and tyres

Please refer to \Rightarrow page 274, "When is it no longer possible to continue driving with the help of the run flat tyres?"

Effects on handling when driving with defective tyres If one of the front tyres is defective, your vehicle will tend to pull slightly towards that side and braking performance will be impaired.

A **defective rear tyre** will also make the vehicle pull slightly to one side, and the braking response will again be slightly impaired. These effects will be most noticeable when driving in a corner.

• When using the run flat system the changes in vehicle handling will be noticeable when braking, in corners and during fast acceleration.

• The maximum permitted speed of 80 km/h is subject to road and weather conditions. Always observe the relevant rules and regulations. Run flat tyres allow you to continue your journey in the event of a loss of tyre pressure. However, the driver remains responsible for the safety of the vehicle and for restoring the correct tyre pressure and having defective parts replaced $\Rightarrow page 276$. For these reasons you should always adjust your driving to suit the circumstances.



We recommend that you drive with great care when making use of the run flat system. Avoid abrupt manoeuvres. ■



document_0900452a81b1b9de.book Seite 276 Donnerstag, 26. Juli 2007 9:16 09

Wheels and tyres

۲

•

276

Applies to vehicles: with run flat tyres Renewing defective components on run flat tyres

The run flat tyres have been specially developed for your vehicle and matched to its requirements.

Use and combine only the approved run flat tyres and rims. It is not permissible to combine standard wheels and run flat tyres $\Rightarrow \underline{\Lambda}$.

If you have to drive with low tyre pressure or with a completely deflated tyre, you should always take the vehicle to an authorised qualified workshop and have the defective parts inspected and the condition corrected.

 We recommend that you have the run flat tyre renewed and also have the rim checked by a qualified workshop to identify any damage.

 Using tyres or rims which have not been approved can cause damage to the vehicle. Vehicle handling can be impaired and driving safety can no longer be guaranteed. This can also void the vehicle's certification for use on public roads.

i Note

Run-flat tyres can be repaired with the TMS \Rightarrow page 285. \blacksquare

document_0900452a81b1b9de.book Seite 277 Donnerstag, 26. Juli 2007 9:16 09

Accessories and modifications to the vehicle

Accessories and modifications to the vehicle

Accessories and replacement parts

Always ask your dealer or specialist retailer for advice before purchasing accessories and replacement parts.

Your car is designed to offer a high standard of active and passive safety. For this reason, we recommend that you ask an Audi dealer for advice before fitting accessories or replacement parts. Audi dealers have the latest information from the manufacturer and can recommend accessories and replacement parts which are suitable for your requirements. They can also answer any questions you might have regarding official regulations.

We recommend you to use only **Audi accessories** and **Audi Genuine parts**[®]. Audi has tested these parts and accessories for suitability, reliability and safety. Audi dealers have the necessary experience, and facilities to ensure that the parts are installed properly.

Although the market is constantly scrutinised, Audi cannot judge or assume responsibility for the reliability, safety and suitability of non-genuine products - even though in some instances, these parts may have been approved by an officially recognised technical testing authority or accompanied by an official approval certificate.

Any **retro-fitted equipment** which has a direct effect on the vehicle and/or the way it is driven (e.g. cruise control system or electronically-controlled suspension) must be approved for use in your vehicle and bear the **e** mark (the European Union's approval symbol).

If any **additional electrical components** are fitted which do not serve to control the vehicle itself (for instance a refrigerator box, laptop or ventilator fan, etc.), these must bear the **CE** mark (manufacturer conformity declaration in the European Union).

WARNING

Never attach accessories (such as cup holders or telephone brackets) to the surfaces covering the airbag units or the areas around the airbags: this could cause injury if the airbag is triggered.

Modifications

 
Modifications must always be carried out according to our specifications.

Unauthorised modifications to the electronic components or software in the vehicle may cause malfunctioning. Due to the way the electronic components are linked together in networks, other systems may be affected by the faults. This can seriously impair safety, lead to excessive wear of components, and also invalidate the type approval for your vehicle.

You will appreciate that your Audi dealer cannot be held liable for any damage caused by modifications and/or work performed incorrectly.

We recommend that all work should be performed by an Audi workshop using **Audi Genuine parts**[®].

Incorrectly performed modifications or other work on your vehicle can lead to malfunctions and cause accidents.



document_0900452a81b1b9de.book Seite 278 Donnerstag, 26. Juli 2007 9:16 09

Accessories and modifications to the vehicle

Radio transmitters and business equipment

Radio transmitters (fixed installation)

Retrofit installations of radio transmitters in the vehicle are subject to official approval. Audi generally authorises in-vehicle installations of approved types of radio transmitters provided that:

• the aerial is installed correctly,

278

• the aerial is not installed in the interior of the vehicle (and screened cables are used together with non-reflective aerial trimming),

• the effective transmitting power does not exceed 10 Watts at the aerial base.

Audi dealers and specialist retailers will be able to inform you about options for installing and operating radio transmitters with a *higher* transmitting power.

Mobile radio transmitters

When using commercial mobile telephones or radio equipment it is possible that they might interfere with the electronics of your vehicle and cause malfunctions. The reasons could be:

- no external aerial
- external aerial incorrectly installed
- transmitting power more than 10 W.

Therefore you must not operate portable mobile telephones or radio equipment *inside the vehicle* without a correctly installed external aerial $\Rightarrow \Delta$.

Please note also that the maximum range of the equipment can only be achieved with an *external* aerial.

Business equipment

Retrofit installation of business or other equipment in the vehicle is permitted, provided the equipment cannot interfere with the

driver's immediate control of the vehicle. Any such equipment must carry the **CE mark**. Any retrofit equipment that could influence the driver's control of the vehicle must have a type approval for your vehicle and must carry the **e mark**.


Mobile telephones or radio equipment which are operated inside the vehicle without a correctly installed external aerial can create excessive magnetic fields that could cause a health hazard.


i Note

• Any retrofit installation of electrical or electronic equipment in the vehicle will affect its type approval. In extreme cases this could mean that you might lose the type approval for your vehicle.

• Please refer to the mobile telephone/radio operating instructions.



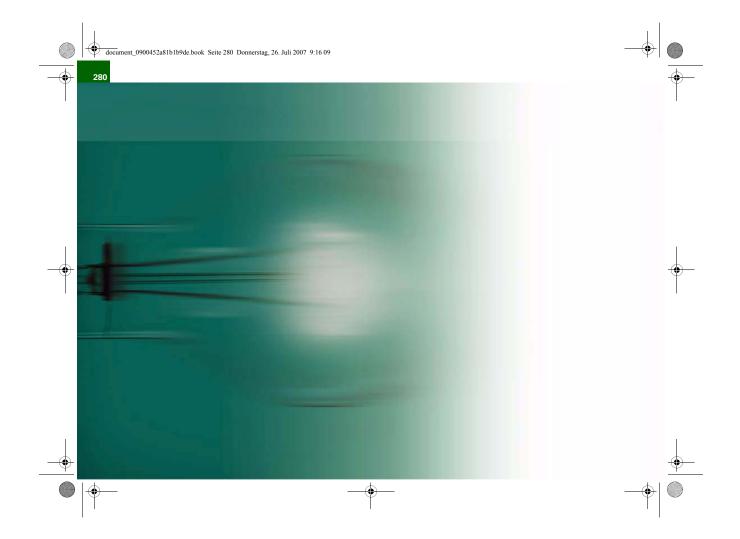

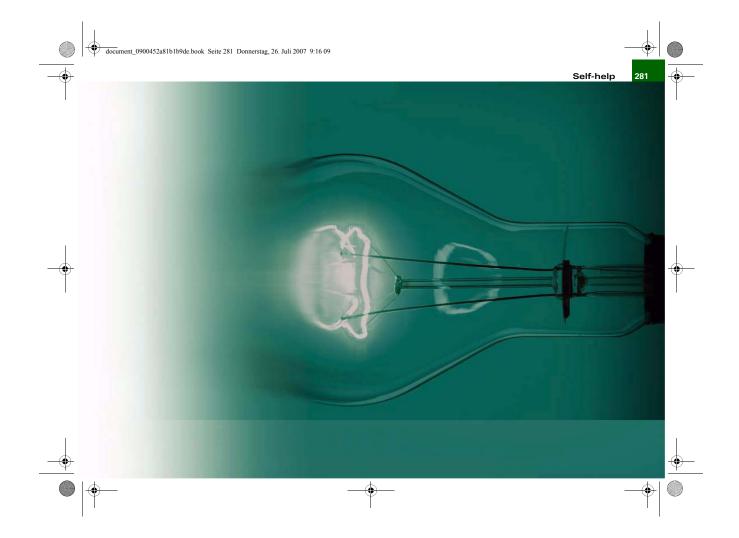



Applies to vehicles: with warning triangle Warning triangle

The factory-supplied warning triangle is attached to the inside of the boot lid.

 


Fig. 264 Warning triangle fitted inside boot lid

To remove the warning triangle, push the tab in the direction indicated by the arrow ⇒ fig. 264 and pull the retainer down.

The retainer on the boot lid is specifically designed to hold the warning triangle supplied as an Audi Genuine Accessory. This accessory is available from Audi dealers. \blacksquare

Applies to vehicles: with first-aid kit First-aid kit

The first-aid kit is accommodated in the compartment behind the rear centre armrest.



Fig. 265 Rear centre armrest: First-aid kit

 
– Pull up the catch to open the storage compartment \Rightarrow fig. 265.

On vehicles with a load-through hatch*, the first-aid kit is kept in the rear centre armrest. The centre armrest has to be folded down in order to access the compartment.

The storage compartment will hold a maximum weight of 0.5 kg.

i Note

Before folding the centre armrest back up into the rear seat backrest make sure the lid of the storage compartment is properly closed. \blacksquare



document_0900452a81b1b9de.book Seite 283 Donnerstag, 26. Juli 2007 9:16 09

Applies to vehicles: with fire extinguisher Fire extinguisher

The factory-fitted fire extinguisher is located in the footwell on the front passenger's side (secured in a holder).



Taking out the fire extinguisher

- Unfasten the retaining strap by pressing on the tab marked "PRESS" \Rightarrow fig. 266 -arrow-.
- Take the fire extinguisher out of the holder.

Securing the fire extinguisher

- Place the fire extinguisher in the holder.
- Secure the fire extinguisher with the retaining strap.

After using the fire extinguisher

 Have the fire extinguisher refilled and checked by a qualified dealer or the fire service.

Check how the fire extinguisher works before you need to use it. The instructions for use are shown on the fire extinguisher.

Self-help

Have the fire extinguisher checked regularly (at least every two years) by a qualified dealer or by the fire service to ensure that it will be in working order when you need it.

When buying a new fire extinguisher, make sure it fits in the holder.

If the fire extinguisher is not secured properly it could be catapulted through the vehicle during driving and braking manoeuvres or in the event of an accident. This poses a risk of injury to occupants.

i Note

The fire extinguisher must comply with legal requirements.
Observe the expiry date of the fire extinguisher. The fire extinguisher may not work properly after the expiry date.

Tools and Tyre Mobility System

The tools and the Tyre Mobility System are stored under the floor panel in the luggage compartment.


 


Fig. 267 Luggage compartment: Tools, Tyre Mobility System and jack

 

document_0900452a81b1b9de.book Seite 284 Donnerstag, 26. Juli 2007 9:16 09

Self-help

284

If you need the tools, the Tyre Mobility System or the jack*, you will have to open the floor panel and take out the spare wheel* \Rightarrow page 284.

The tool kit includes:

- A hook for removing hub caps
- Pin for mounting a wheel
- · Screwdriver with reversible blade
- Tool for changing bulbs
- Interchangeable socket (Torx socket for changing bulbs)
- Crank handle for jack
- Adapter for anti-theft wheel bolts*
- Jack*
- Box spanner for wheel bolts
- Towline anchorage
- Some of the parts listed are only fitted on certain models or are optional extras.
- Before stowing the jack* again, wind down the arm of the jack as far as it will go.

 Do not use the hexagonal socket in the screwdriver handle to tighten the wheel bolts. It is not possible to tighten the bolts with the required torque - risk of accident.

 The jack supplied by the factory is only designed for changing wheels on this model. On no account attempt to use it for lifting heavier vehicles or other loads - risk of injury.

• Never start the engine when the vehicle is on the jack - risk of accident.

 If work has to be done under the vehicle, ensure that it is safely supported on stands designed for the purpose, otherwise there is a risk of injury. 🔳

Applies to vehicles: with compact temporary spare wheel

Compact temporary spare wheel*

The spare wheel is carried in the wheel well under the floor panel in the luggage compartment. It is only intended for temporary use over short distances.



– Lift the floor panel by the plastic handle \Rightarrow fig. 268.

- Hook the handle onto the luggage compartment weatherstrip.
- Turn the centre plastic knob \Rightarrow fig. 268 anti-clockwise.
- Take out the spare wheel.
- Unhook the floor panel before closing the boot lid.

Securing the defective wheel in the spare wheel well

- Place the wheel in the spare wheel well and secure it with the plastic knob.
- Unhook the floor panel before closing the boot lid.

Taking out the spare wheel

Fig. 268 Spare wheel

document_0900452a81b1b9de.book Seite 285 Donnerstag, 26. Juli 2007 9:16 09

How to use the compact temporary spare wheel

Should you ever have a punctured tyre, the compact temporary spare wheel is only intended for temporary use until you can reach a workshop. The standard-size road wheel should be refitted as soon as possible.

Please note the following restrictions when using the compact temporary spare wheel. The compact temporary spare wheel is designed specifically for this model. For this reason, do not use a temporary spare from a different type of vehicle.

Snow chains

For technical reasons, snow chains must **not** be used on the compact temporary spare wheel.

If you should have a puncture on one of the *front wheels* when using snow chains, fit the compact temporary spare in place of one of the rear wheels. You can then attach the snow chains to the wheel taken from the rear and use this wheel to replace the punctured front wheel.

 The tyre pressures must be checked and corrected as soon as possible. The tyre pressure of the compact temporary spare wheel must be 4.2 bar – an incorrectly inflated tyre can cause an accident.

• Do not drive faster than 80 km/h - higher speeds can cause an accident.

• Avoid heavy acceleration, hard braking and fast cornering – risk of accident.

• Never use two or more compact spare tyres at the same time - risk of accident.

• No other type of tyre (normal summer or winter tyres) may be fitted on the compact temporary spare wheel.

Self-help

Tyre repairs

General information and safety notes

Repaired tyres are only suitable for temporary use.



Fig. 269 The Tyre Mobility System is NOT suitable for repairing this type of damage to types

Your vehicle is equipped with a tyre repair kit: the Tyre Mobility System (TMS).

In the event of a puncture you will find the **TMS**, which consists of a sealing compound and an electric compressor, located under the floor panel in the luggage compartment.

The **TMS** will reliably seal tyres damaged by foreign bodies, provided that the cuts or punctures are no larger than approx. **4 mm** in diameter.

It is not necessary to remove the foreign body from the tyre.

The sealing compound must not be used:

• on cuts and punctures larger than 4 mm \Rightarrow fig. 269 (1)

- if the wheel rim has been damaged (2)
- if you have been driving with very low pressure or a completely flat tyre (3).

How to use the **TMS** is described in the section **Repairing a tyre** \rightarrow normalized with the two contents

 \Rightarrow page 286 and in the instructions supplied with the tyre sealant can.

-•		Driving tips	General maintenance	Self-help	Technical data	—
	-	-•)			0

document_0900452a81b1b9de.book Scite 286 Donnerstag, 26. Juli 2007 9:16 09 286 Self-help The TMS can be used at outside temperatures down to - 20 °C. MRNING After repairing a tyre please note the following points: Do not drive faster than 80 km/h. Avoid heavy acceleration, hard braking and fast cornering. Vehicle handling could be impaired. Tyres which have been sealed using the TMS are only suitable for temporary use. Damaged tyres must be renewed.

• The TMS must NOT be used,

- on cuts and punctures larger than 4 mm
- if the wheel rim has been damaged
- if you have been driving with very low pressure or a
- completely flat tyre
- Seek professional assistance if the repair of a tyre puncture is not possible with the sealing compound.
- Do not allow the sealant to come into contact with your eyes, skin or clothing.
- If you do come into contact with the sealant immediately rinse the eyes or skin affected with clean water.
- Change clothing immediately if it becomes soiled with the tyre sealant.
- Make sure you do not breathe in the fumes!
- If any of the tyre sealant is accidentally ingested, immediately
- rinse the mouth thoroughly and drink lots of water.
- Do not induce vomiting. Immediately contact a doctor!
- If any allergic reactions should occur get medical help immedi-
- ately.
- Keep the sealant away from children.

***** For the sake of the environment

Used bottles of sealing compound can be returned to an Audi dealer for disposal.

i Note

• If sealant should leak out, leave it to dry. When it has dried, you can pull it off like a piece of foil.

• Observe the expiry date stated on the sealing compound can. Have the sealing compound exchanged by a qualified workshop.

Repairing a tyre



)

Fig. 270 Repairing a

Preparations

- If you have a flat tyre, stop the car well away from moving traffic.
- Apply the parking brake to stop the vehicle moving accidentally.
- Engage first gear (manual gearbox) or move selector lever to position P (automatic gearbox).

document_0900452a81b1b9de.book Seite 287 Donnerstag, 26. Juli 2007 9:16 09

- Check whether a repair is possible using the Tyre Mobility System \Rightarrow page 285.
- Ensure that all passengers leave the vehicle and move away from the danger area $\Rightarrow \triangle$.
- Take the **tyre sealant can** and the **electric compressor** out of the luggage compartment \Rightarrow *page 283*.
- Fix the sticker "max. 80 km/h", which is included with the tyre sealant can, onto the instrument cluster where the driver will see it.

Filling the tyre

- Shake the tyre sealant can well.
- Screw the enclosed filling hose onto the sealant can as far as it will go. This will automatically pierce the foil sealing the can.
- Take the valve cap off the tyre valve and use the enclosed valve insert tool to unscrew the valve insert \Rightarrow page 286, fig. 270.
- Place the valve insert onto a clean surface.
- Remove the sealing plug from the filling hose and insert the hose into the tyre valve.
- Hold the tyre sealant can upside down and fill the complete contents of the can into the tyre.
- Then disconnect the hose and screw the valve insert firmly back into the tyre valve.

Inflating the tyre

- Screw the filling hose of the electric compressor onto the tyre valve and plug the connector into the cigarette lighter.
- Pump the tyre up to 2.0 to 2.5 bar and monitor the pressure shown on the pressure gauge.
- If the tyre pressure remains lower than the value specified above drive the vehicle approx. 10 metres forwards or backwards, so that the sealant can spread evenly in the tyre. If the pressure is still lower than the specification the tyre is too badly damaged and cannot be repaired using the tyre sealant.

Final checks

- After about 10 minutes stop to check the tyre pressure.
- If tyre pressure is less than 1.3 bar, the tyre is too badly damaged. Do not drive on. You should obtain professional assistance.

 If you have a puncture in moving traffic, switch on the hazard warning lights and place the warning triangle in a visible location. This is for your own safety and also warns other road users.
 Make sure your passengers wait in a safe place (for instance

behind the roadside crash barrier).

• Please observe the manufacturers' safety notes on the compressor and the instructions supplied with the tyre sealant can.

• If it was not possible to build up a tyre pressure of 2.0 bar within 6 minutes this means that the tyre is too badly damaged. Do not drive on.

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
	—			<u> </u>			

Self-help

document_0900452a81b1b9de.book Seite 288 Donnerstag, 26. Juli 2007 9:16 09

Self-help

WARNING (continued)

• Seek professional assistance if the repair of a tyre puncture is not possible with the sealing compound.

• If tyre pressure is less than 1.3 bar after driving about 10 minutes, the tyre is too badly damaged. Do not drive on. You should obtain professional assistance.

U Caution

Take special care if you have to repair a tyre on a gradient.

i Note

• Do not use the compressor for longer than 6 minutes at a time, as it could overheat. When the compressor has cooled down, you can use it again.

• If tyre sealant should leak out, leave it to dry and then pull it off like foil.

• After carrying out a tyre repair remember to buy a new tyre sealant can at a qualified workshop. This will ensure that the Tyre Mobility System is operative again.

Please observe the relevant regulations.

Changing a wheel

Preparations

Some preparations are necessary before changing a wheel.

 If you have a flat tyre, stop the car well away from moving traffic. Choose a location that is as **level** as possible.

- All passengers should leave the car. They should wait in a safe place (for instance behind the roadside crash barrier).
- Apply the **parking brake** to stop the vehicle moving accidentally.
- Engage first gear (manual gearbox) or move selector lever to position P (automatic gearbox).
- When towing a trailer: unhitch the trailer from your vehicle.
- Take the **tools** \Rightarrow *page 283* and the **spare wheel*** \Rightarrow *page 284* out of the luggage compartment.

If you have a puncture in moving traffic, switch on the hazard warning lights and place the warning triangle in a visible location This is for your own safety and also warns other road users.



If you have to change the tyre on a gradient, block the wheel opposite the wheel being changed by placing a stone or similar object under it to prevent the vehicle from rolling away.

Note

Please observe the relevant regulations.

How to change a wheel

Change the wheel as described below.

- Pull off the **hub cap**. Also refer to \Rightarrow *page 289,* "Hub caps".

document_0900452a81b1b9de.book Seite 289 Donnerstag, 26. Juli 2007 9:16 09

- Loosen the wheel bolts \Rightarrow page 289.
- Raise the car with the jack* \Rightarrow page 290.
- Take off the wheel with the flat tyre and then put on the spare wheel* \Rightarrow page 291.
- Lower the vehicle to the ground.
- Tighten the wheel bolts firmly in diagonal sequence with the box spanner \Rightarrow page 289.
- Fit the hub cap back on. ■

After changing a wheel

What you must do after changing a wheel.

- Place the wheel with the defective tyre in the spare wheel well and secure it.
- Put the tools and the jack* back in the luggage compartment.
- The inflation pressure of the newly fitted spare tyre must be checked as soon as possible.
- Have the tightening torque of the wheel bolts checked as soon as possible with a torque wrench. The correct tightening torque is 120 Nm.
- Have the flat tyre replaced as quickly as possible.

i Note

 If you notice that the wheel bolts are corroded and difficult to turn when changing a wheel, they must be replaced before having the tightening torque checked.

 In the interest of safety, drive at moderate speeds until the tightening torque of the wheel bolts has been checked.

Hub caps

The hub caps must be removed for access to the wheel bolts.



Fig. 271 Changing a wheel: Removing a hub

car

Removing

- Insert the hook (provided in the vehicle's tool kit) in the hole in the hub cap.
- Pull off the hub cap ⇒ fig. 271.


Loosening and tightening the wheel bolts

The wheel bolts must be loosened before raising the vehicle.



Fig. 272 Changing a wheel: Loosening wheel bolts

 b



Downloaded from www.Manualslib.com manuals search engine

Self-help

document_0900452a81b1b9de.book Seite 290 Donnerstag, 26. Juli 2007 9:16 09

Self-help Loosening

290

- Fit the box spanner as far as it will go over the wheel bolt⁵⁾.
- Grip the box spanner as close to the end as possible and turn the wheel bolts about one turn anti-clockwise \Rightarrow page 289, fig. 272 $\,$ -arrow-.

Tightening

- Fit the box spanner as far as it will go over the wheel bolt⁵⁾.
- Grip the box spanner as close to the end as possible and tighten the bolt firmly by turning clockwise.

To avoid accidents, the wheel bolts should only be loosened slightly (about one turn) before raising the vehicle with the jack*.

i Note

• Do not use the hexagonal socket in the screwdriver handle to loosen or tighten the wheel bolts.

• If the wheel bolt is very tight, it may be possible to loosen it by n the finite soft is even by the soft is the soft is

 $^{5)}$ An adapter is required to unscrew or tighten the anti-theft wheel bolts* \Rightarrow page 292.

Raising the vehicle

The vehicle must be raised with the jack* to remove the wheel.

 


Fig. 273 Changing a wheel: Jacking points



Each jacking point is marked by a recess underneath the vehicle \Rightarrow fig. 273.

- Place the jack \Rightarrow page 283 underneath the jacking point closest to the wheel being changed. Make sure the base plate (A) is flat on the ground.
- Wind up the jack by the knob (B) until the claw of the jack © completely surrounds the seam on your vehicle ⇒ fig. 274.

document_0900452a81b1b9de.book Seite 291 Donnerstag, 26. Juli 2007 9:16 09

- Now fit the crank handle () onto the jack by inserting it in the opening on the knob ⇒ page 290, fig. 274. Turn the crank handle clockwise or anti-clockwise to secure it in place.
- Raise the vehicle by winding the crank handle until the defective wheel is clear of the ground.

Recesses at the front and rear of the door sills mark the jacking points \Rightarrow *page* 290, fig. 273. There is *one* jacking point for each wheel. The distance from the jacking points to the wheel arches is approximately 20 cm at the front and 40 cm at the rear. The jack may **only** be applied at the seam of the jacking points shown.

An **unstable surface** under the jack may cause the vehicle to slip off the jack. Always provide a firm base for the jack on the ground. If necessary use a large, strong board or similar support. On a **hard**, **slippery surface** (such as tiles) use a rubber mat or similar to prevent the jack from slipping.

Prevent the base of the jack from slipping – risk of injury.

 The car can be damaged if the jack is not applied at the correct jacking points. There is also a risk of injury since the jack can slip off suddenly if it is not properly engaged. ■

Taking off the wheel and putting on the spare wheel

Step-by-step instructions for taking off the wheel and putting on the spare wheel.





Self-help

291



Fig. 276 Changing a wheel: Mounting pin in wheel bolt hole nearest

to the top

Change the wheel as described below after loosening the wheel bolts and raising the vehicle with the jack*.

Taking off the wheel

 Using the hexagonal socket in the screwdriver handle (provided in the vehicle's tool kit) ⇒ fig. 275, unscrew the wheel bolt nearest to the *top* and place the bolt on a clean surface.



document_0900452a81b1b9de.book Seite 292 Donnerstag, 26. Juli 2007 9:16 09

Self-help

292

- Screw in the mounting pin (provided in the vehicle's tool kit) by hand in place of the wheel bolt ⇒ page 291, fig. 276.
- Then unscrew the other wheel bolts as described above.
- Take off the wheel. The mounting pin stays where it is.

Putting on the spare wheel

- Put on the spare wheel, using the mounting pin to guide it into place.
- Screw in the wheel bolts and tighten them *lightly* using the hexagonal opening in the screwdriver handle.
- Then unscrew the mounting pin and tighten the remaining wheel bolt lightly.
- Carry out the steps required after you have changed the wheel \Rightarrow page 289, "After changing a wheel".

The wheel bolts should be clean and turn easily. Before putting on the spare wheel, inspect the condition of the wheel and hub mounting surfaces. These surfaces must be clean before mounting the wheel.

The wheel bolts are easier to remove from the wheel rim if you use the hexagonal socket in the screwdriver handle. The reversible screwdriver blade should be removed as a precautionary measure when the tool is used for this purpose.

Note the direction of rotation when putting on a tyre with **directional tread pattern** \Rightarrow *page 292*.

i Note

Do not use the hexagonal socket in the screwdriver handle to loosen or tighten the wheel bolts. ■

Tyres with directional tread pattern

Tyres with directional tread pattern must be mounted so that they rotate in the correct direction.

A directional tread pattern is identified by **arrows on the sidewall** pointing in the forward running direction. Always note the direction of rotation indicated when mounting the wheel. This is important so that these tyres can give maximum grip and avoid excessive noise, tread wear and aquaplaning.

Drive carefully should you ever have a puncture and have to mount the spare wheel so it rotates in the wrong direction. This is because the tyre will not give optimum performance. Bear this in mind particularly when driving on wet roads.

To benefit from the advantages of tyres with this type of tread pattern, the defective tyre should be replaced and refitted as soon as possible so that all tyres again rotate in the correct direction.

Applies to vehicles: with anti-theft wheel bolts

Anti-theft wheel bolts

A special adapter is required to turn the anti-theft wheel bolts.

 


Fig. 277 Anti-theft wheel bolt with adapter

document_0900452a81b1b9de.book Seite 293 Donnerstag, 26. Juli 2007 9:16 09

Self-help 293

- Insert the hook (provided in the vehicle's tool kit) in the hole in the hub cap.
- Pull off the hub cap \Rightarrow page 289, fig. 271.
- Insert the adapter 2 completely into the wheel bolt 1.
- Fit the box spanner as far as it will go over the adapter 2.
- Loosen or tighten the wheel bolt \Rightarrow page 289.

It is advisable to carry the wheel bolt adapter in the vehicle. The adapter is normally stored in the vehicle tool kit, underneath the towline anchorage. It should be put back there after use.

The **code number** of the anti-theft wheel bolt is stamped on the front of the adapter. Your Audi dealer will need this number to replace the adapter if lost.

i Note

Note the code number of the anti-theft wheel bolt and keep it in a safe place – not in your vehicle. \blacksquare

Jump-starting

Before starting the engine

If necessary, the engine can be started by connecting it to the battery of another vehicle.

If the engine should ever fail to start because of a discharged battery, the battery can be connected to the battery of *another* vehicle to start the engine. Suitable **jump leads** are required.

Both batteries must be rated at 12 Volts. The **capacity** (Ah) of the booster battery should not be significantly lower than that of the discharged battery.

Jump leads

The jump leads must be **heavy enough** to carry the starter current. Refer to the details given by the manufacturer.

Only use jump leads with *insulated* battery clamps. **Positive cable –** usually red

Negative cable – usually black

 When it is discharged the battery can freeze at temperatures around 0°C. A frozen battery must first be thawed out before connecting the jump leads, as it could otherwise explode.
 Please note the safety warnings referring to working in the

 
• Please note the safety warnings referring to working in the engine compartment \Rightarrow page 255.

i Note

There must be no contact between the two vehicles as otherwise current could flow as soon as the positive terminals are connected.
The discharged battery must be properly connected to the

vehicle's electrical system.

• Switch off the car telephone if necessary. Details will be given in the manufacturer's instructions for the car telephone.



document_0900452a81b1b9de.book Seite 294 Donnerstag, 26. Juli 2007 9:16 09

Self-help Starting the engine

294

The two jump leads must be connected in the correct sequence.



Fig. 278 Engine compartment: Terminals for jump leads and battery charger

 


Fig. 279 Jumpstarting with the battery of another vehicle: A – Discharged battery, B – Boosting batterv

The jump-start terminals are located in the engine compartment \Rightarrow fig. 278.

Connecting the positive terminals with the positive lead (red)

- Open the red cap on the positive terminal \Rightarrow fig. 278.
- 1. Connect one end of the lead to the **jump-start terminal** \Rightarrow fig. 279 ① (terminal under red cap = "positive") of the vehicle with the flat battery (A).

2. Connect the other end of the positive lead to the positive terminal (2) of the boosting battery (8).

Connecting negative terminals with the negative lead (black)

- 3. Connect one end of the negative lead to the negative terminal (3) of the boosting battery (B).
- Connect the other end of the lead to the jump-start terminal (4) (terminal with hexagon = "negative") of the vehicle with the flat battery (A).

Starting the engine

- Start the engine of the vehicle with the boosting battery
 (B) and let it run at idling speed.
- Now start the engine of the vehicle with the discharged battery (A).
- If the engine fails to start: do not operate the starter for longer than 10 seconds. Wait for about 30 seconds and try again.
- When the engine is running, disconnect the leads in exactly the *opposite* sequence to that described above.
- Refit the red cap onto the positive terminal.

The battery is vented to the outside to prevent gases entering the vehicle's interior.

Connect the battery clamps so they have good *metal-to-metal* contact with the respective terminals.

• The non-insulated parts of the battery clamps must not be allowed to touch. The jump lead attached to the positive battery

Downloaded from www.Manualslib.com manuals search engine

document_0900452a81b1b9de.book Seite 295 Donnerstag, 26. Juli 2007 9:16 09

WARNING (continued)

terminal must not touch metal parts of the vehicle: this can cause short circuiting.

• Do not bend over the batteries - risk of acid burns.

The screw plugs on the battery cells must be screwed in firmly.
Keep sparks, flame and lighted cigarettes away from batteries: the gases given off can cause an explosion.

 If jump-starting another vehicle, position the jump leads in such a way that they cannot come into contact with any moving parts in the engine compartment of the other vehicle.

! Caution

Please note that the above method of connecting the leads is meant for jump-starting your vehicle. If jump-starting another vehicle, you should not connect the negative lead (-) to the negative terminal of the discharged battery, but directly to the engine block or a solid metal part bolted to the engine block. If the battery of the other vehicle does not have a gas vent, there is a risk that a mixture of oxygen and hydrogen gas can accumulate and cause an explosion.

Tow-starting and towing away

General notes

Points to observe when tow-starting or towing away

If you use a towrope:

Notes for the driver of the towing vehicle

- The towrope must be taut before driving off.

Engage the clutch very gently when starting to move; on vehicles with automatic gearbox press the accelerator slowly.

Notes for the driver of the towed vehicle

- The ignition should be switched on so that the turn signals, horn, windscreen wipers and washers can be used. Please ensure that the steering wheel is unlocked when you switch on the ignition, and that it moves freely.
- Put gear lever in neutral (manual gearbox) or move selector lever to position N (automatic gearbox).
- The brake servo and power steering only work when the engine is running. Considerably more effort is required on the brake pedal and steering wheel when the engine is switched off.
- Ensure that the towrope remains taut at all times when towing.

Towrope or towbar

_

 
It is easier and safer to tow a vehicle with a tow*bar*. You should only use a tow*rope* if you do not have a towbar.

A towrope should be slightly elastic to reduce the loading on both vehicles. It is advisable to use a **towrope made of synthetic fibre** or similar material.

Attach the tow-rope or tow-bar only to the **towing anchorages** intended for this purpose \Rightarrow page 296 or \Rightarrow page 297.

Driving technique

Towing requires some experience – especially when using a towrope. Both drivers should be familiar with the technique required for towing. Inexperienced drivers should not attempt to tow-start or tow away another vehicle.



Self-help 295

document_0900452a81b1b9de.book Seite 296 Donnerstag, 26. Juli 2007 9:16 09

Self-help

۲

296

Do not pull too hard with the towing vehicle and take care to avoid jerking the towrope. When towing on a loose surface there is always a risk of overloading and damaging the anchorage points.

! Caution

If there is no oil in the gearbox or no lubricant in the automatic transmission the car may only be towed with the driven wheels lifted clear of the road, or transported on a special car transporter or trailer.

I Note

Note the regulations concerning towing.

• The hazard warning lights of both vehicles must normally be

switched on. However, observe any regulations to the contrary.

• Make sure that the towrope is not twisted, as otherwise the front

towline anchorage on your vehicle could work itself loose. \blacksquare

Front towline anchorage

The front towline anchorage is only mounted if the vehicle has to be towed.



Fig. 280 Front bumper: Cover cap



Fig. 281 Front bumper: Fitting the towing eye

The screw connection for the towline anchorage is located behind a cover cap on the right side of the front bumper.

- Take the towline anchorage out of the vehicle's tool kit \Rightarrow page 283.
- To detach the cover cap from the bumper, firmly press the lower part of the cap inwards to release it \Rightarrow fig. 280.
- Screw the towline anchorage firmly all the way into the screw connection \Rightarrow fig. 281.

After use, unscrew the towline anchorage and put it back in the toolbox. Replace the cap in the bumper. The towline anchorage should always be kept in the vehicle.

If the towline anchorage is not screwed in as far as the stop, there is a risk of the screw connection shearing off during towing (accident risk). document_0900452a81b1b9de.book Seite 297 Donnerstag, 26. Juli 2007 9:16 09

Rear towline anchorage

Vehicles which do not have a factory-fitted towing bracket* have a towline anchorage on the right side of the rear bumper.



Fig. 282 Rear bumper Fitting the towing eye

Vehicles with towline anchorage

- Take the towline anchorage out of the vehicle's tool kit.
- To detach the cover cap from the bumper, firmly press the lower part of the cap inwards to release it \Rightarrow fig. 282.
- Screw the towline anchorage firmly all the way into the screw connection.

Vehicles with towing bracket*

- Fit the towing bracket.
- Attach the towbar or the towrope to the towing bracket.

After use, unscrew the towline anchorage and put it back in the toolbox. Replace the cap in the screw connection. The towline anchorage or towing bracket should always be kept in the vehicle. Vehicles which have a factory-fitted towing bracket* do **not** have a screw connection at the rear for the towline anchorage.

• If the towline anchorage is not screwed in as far as the stop, there is a risk of the screw connection shearing off during towing (accident risk).

Self-help

• If your car has a towing bracket*, please use only special tow bars with suitable attachments (i.e. tow bars which are specially designed for use with towing brackets) to avoid damage to the coupling equipment.

• If your car has a towing bracket*, please use only special towing ropes (risk of accident).

Tow-starting

As a general rule, tow-starting is not recommended.

- Engage 2nd or 3rd gear before moving off.
- Press the clutch and hold the pedal down.
- Switch on the ignition.
- Once both vehicles are moving, release the clutch.
- As soon as the engine starts: press the clutch and put the gear lever in neutral.

If the engine will not start, it is best to try starting it using the battery of another vehicle \Rightarrow page 293 before attempting to tow start. You should only try to tow-start the engine if jump-starting is not successful. Tow-starting is an attempt to start the engine via the movement of the wheels.

When tow-starting a vehicle with a **petrol engine**, do not tow it more than a *short* distance, otherwise unburnt fuel can enter the catalytic converter and cause damage.

For technical reasons, it is not possible to **tow-start** a vehicle with **automatic gearbox**.

<u> </u>	Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
	—) —			

document_0900452a81b1b9de.book Seite 298 Donnerstag, 26. Juli 2007 9:16 09

Self-help

298

There is a high risk of accidents when tow-starting, as the towed vehicle can easily be driven into the towing vehicle.

U Caution

When tow-starting the vehicle, do not tow it further than 50 metres: otherwise the catalytic converter could be damaged.

Towing a vehicle with manual gearbox and front-wheel drive

Towing is relatively straightforward.

Please observe the notes \Rightarrow page 295.

The vehicle can be towed using a towbar or towrope in the normal way, with all four wheels on the road; it can also be towed with either the front or rear wheels lifted off the road. The vehicle must not be towed faster than **50 km/h.**

Towing a vehicle with automatic gearbox and front-wheel drive

Certain restrictions must be observed when towing your vehicle.

Please observe the notes \Rightarrow page 295.

The vehicle can be towed with a towbar or towrope in the normal way, with all four wheels on the ground. When doing so, please note the following points:

- Release the parking brake \Rightarrow page 121.
- Make sure the selector lever is in the N position.
- The vehicle must not be towed faster than 50 km/h.

 The vehicle must not be towed further than 50 km. The reason for this is: when the engine is not running, the gearbox oil pump does not work and the gearbox is not adequately lubricated for higher speeds or longer distances.

If the vehicle has to be towed with a **breakdown truck**, it must only be suspended at the *front* wheels. The reason for this is: the drive shafts are located on the front wheels. If the car is towed with the rear wheels lifted off the road (i.e. travelling backwards), the drive shafts also turn *backwards*. The planetary gears in the automatic gearbox then turn at such high speeds that the gearbox will be severely damaged in a short time.

i Note

If it is not possible to tow the vehicle as described above, or if it has to be towed further than 50 km, it must be transported on a special car transporter or trailer. ■

Towing a vehicle with manual gearbox and four-wheel drive

Certain restrictions must be observed when towing your vehicle.

Please observe the notes \Rightarrow page 295.

The vehicle can be towed with a towbar or towrope in the normal way, with all four wheels on the ground. It can also be towed by a breakdown truck, with the wheels lifted at either the front or rear. When doing so, please note the following points:

• The vehicle must not be towed faster than 50 km/h.

• The vehicle must not be towed further than 50 km.

document_0900452a81b1b9de.book Seite 299 Donnerstag, 26. Juli 2007 9:16 09



If it is not possible to tow the vehicle as described above, or if it has to be towed further than 50 km, it must be transported on a special car transporter or trailer. \blacksquare

Towing a vehicle with automatic gearbox and four-wheel drive

Certain restrictions must be observed when towing your vehicle.

Please observe the notes \Rightarrow page 295.

The vehicle can be towed with a towbar or towrope in the normal way, with all four wheels on the ground. When doing so, please note the following points:

 
- Release the parking brake \Rightarrow page 121.
- Make sure the selector lever is in the N position.
- The vehicle must not be towed faster than 50 km/h.

 
• The vehicle must not be towed further than **50 km**. The reason for this is: when the engine is not running, the gearbox oil pump does not work and the gearbox is not adequately lubricated for higher speeds or longer distances.

The vehicle must not be towed with the wheels lifted at either the front or rear.

i Note

If it is not possible to tow the vehicle as described above, or if it has to be towed further than 50 km, it must be transported on a special car transporter or trailer.





document_0900452a81b1b9de.book Seite 300 Donnerstag, 26. Juli 2007 9:16 09 300 Fuses and bulbs **Fuses and bulbs** Fuses

Changing a fuse

If a fuse has blown it must be replaced.



Fig. 283 Left side of dash panel: Fuse cover

- Identify the fuse for the failed component.
- Switch off the ignition and the component concerned.
- Remove the fuse box cover \Rightarrow fig. 283.
- Take the plastic clip from inside the fuse cover, fit it onto the blown fuse, and pull the fuse out.
- Replace the blown fuse (which will have a melted metal strip) with a new fuse of the *same* amp rating.

The various electrical circuits are protected by fuses. The fuse boxes are located behind covers on the left and right sides of the dash panel and in the compartment on the right side of the boot.

A plastic clip for removing the fuses is provided in the fuse cover on the left side of the dash panel. There is also a sticker listing the fuses in each of the fuse boxes in the dash panel.

U Caution

Never attempt to "repair" a fuse or replace it by fitting a fuse with a higher rating - risk of fire! It could also cause damage to other parts of the electrical system.

i Note

If a newly replaced fuse blows again after a short time, the electrical system must be checked by a qualified workshop as soon as possible. \blacksquare

Fuses on the driver's side



Fig. 284 Diagram of fuse box (left-hand drive vehicle)

Some of the items listed are only fitted on certain models or are optional extras.

Please note that the following list, while correct at the time of printing, is subject to alterations. If discrepancies should occur, please refer to the sticker on the inside of the fuse cover for the correct information for your vehicle. document_0900452a81b1b9de.book Seite 301 Donnerstag, 26. Juli 2007 9:16 09

The seats with electrical adjustment are protected by circuit breakers. These reset automatically after a few seconds when the overload has been corrected.

Fuse list

(¢

•

1

No.	Electrical equipment	amps		
	Fuse carrier (black)			
1	Dynamic steering	5		
2	Clutch sensor	5		
3	Garage door opener	5		
4	Audi lane assist	10		
5	Air conditioner	5		
6	Headlight range control (right)	5		
7	Headlight range control (left)	5		
8	Control unit 1 for vehicle's electrical system	5		
9	Interior mirrors	5		
10	Selector gate	5		
11	Heated washer jets	5		
12	Air conditioner	5		
Fuse list				

No.	Electrical equipment	amps
	Fuse carrier (brown)	
1	Vacant	
2	Clutch sensor	5
3	Fuel pump (diesel/petrol)	20/25
4	Auxiliary water pump (3.2 FSI)	5

No. Electrical equipment amps Seat heating (left-side) with/without seat venti-5 30 lation Electronic stabilisation program 6 10 7 Horn 25 8 Electric window motor (left door) 30 9 Wiper motor 30 10 Electronic stabilisation program 25 11 Door control unit (driver's side) 15 12 Rain and light sensor 5 Fuse list

Fuses and bulbs

301

1

No.	Electrical equipment	amps
	Fuse carrier (red)	
1	Vacant	
2	Vacant	
3	Lumbar support	10
4	Dynamic steering	35
5	Interior light	5
6	Control unit 1 for vehicle's electrical system	35
7	Control unit 1 for vehicle's electrical system	30
8	Control unit 1 for vehicle's electrical system	30
9	Tilting panorama roof/sun roof	20
10	Control unit 1 for vehicle's electrical system	30
11	Vacant	
12	Convenience electronics	5

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	
_						

Image: Constraint of the second se

Some of the items listed are only fitted on certain models or are optional extras.

Please note that the following list, while correct at the time of printing, is subject to alterations. If discrepancies should occur, please refer to the sticker on the inside of the fuse cover for the correct information for your vehicle.

The seats with electrical adjustment are protected by **circuit breakers**. These reset automatically after a few seconds when the overload has been corrected.

Fuse list

Fuse carrier (black)					
/acant					
Steering column switch module	5				
Electronic Stabilisation Program	5				
	acant acant acant acant teering column switch module				

No.	Electrical equipment	amps
7	Diagnostic connector	5
8	Gateway (diagnostic interface for data bus)	5
9	Vacant	
10	Vacant	
11	Vacant	
12	Vacant	
Fuse I	ist	
No.	Electrical equipment	amps
Fuse c	arrier (brown)	
1	CD drive	5
2	Switch module for Audi drive select	5
3	MMI/Radio	10/20
4	Light switch	5
5	Control unit for instrument cluster	5
6	Ignition lock	5
7	Vacant	
8	Air conditioner blower	40
9	Steering column lock	5
10	Air conditioner	10
11	Diagnostic connector	10
12	Steering column switch module	5

	Fuse	list for luggage compartment					
	I			No.	Electrical equipment	amps	
	. 1			10	Control unit 2 for vehicle's electrical system	30	
				11	Control unit 2 for vehicle's electrical system	20	
				12	Vacant		
				Fuse	list		
		. / 8 / 8 / 8 / 2 / 2		No.	Electrical equipment	amps	
		Fig. 286	Diagram of		Fuse carrier (brown)		
		fuse pane		1	Electrical socket	15	
	- Bor	nove the trim.		2	Vacant		
				3	Radio/navigation	7.5	
	- Ope	en the fuse cover.		4	Control unit for digital sound system	30	
	Fuse I	ist		5	MMI	5	
_	No.	Electrical equipment	amps	6	Door control unit (driver's side)	30	
		Fuse carrier (black)		7	Electro-mechanical parking brake	30	
	1	Vacant		8	Seat heating, rear	30	
	2	Control unit for trailer	15	9	Door control unit (passenger side)	30	
	3	Control unit for trailer	20	10	Remote control receiver for auxiliary heating	5	
	4	Control unit for trailer	20	11	Door control unit (passenger side)	15	
	5	Electronic parking brake	5	12	Control unit for reversing camera	5	
	6	Electronic suspension control	15	Fuse	list		
	7	Electro-mechanical parking brake	30			0.000	
	8	Control unit 2 for vehicle's electrical system	30	NO.	Electrical equipment Fuse carrier (red)	amps	
	9	Vacant		1	Socket, centre console, rear	15	
				2	Socket, centre console, front	15	
				3	Socket, luggage compartment	15	•
				3	oookot, laggage compartment	15	

document_0900452a81b1b9de.book Seite 304 Donnerstag, 26. Juli 2007 9:16 09

Fuses and bulbs

304

No.	Electrical equipment	amps
4	Cigarette lighter	15
5	Parking aid	5
6	Phone pre-installation without handsfree sys- tem (VDA interface)	5
7	Control unit for adaptive cruise control	15
8	Vacant	
9	EPB switch (electro-mechanical parking brake)	5
10	Lane change assist feature	5
11	Seat heating, rear	5
12	Airbag	5

Bulbs

Changing bulbs

Changing bulbs requires a certain degree of practical skill.

You can change the following bulbs for exterior lights yourself:

- Halogen headlights: Bulb for dipped headlights
- Halogen headlights: Bulb for main beam headlights
- Bulb for fog light
- Bulbs for rear lights in boot lid
- Bulbs for rear lights in side panel
- Bulbs for number plate light

The following bulbs should only be changed by a qualified workshop:

- Halogen headlights: Bulb for turn signals
- Halogen headlights: Bulb for side lights

• Xenon headlights*: Bulb for turn signals

- Xenon headlights*: Light source for daytime running lights/parking lights
 - Bulb for headlights: **Bi-xenon** lights $\Rightarrow \triangle$
- Light source for turn signal in exterior mirror housing
- Light source for high-level brake light

As a rule, you require a certain degree of practical skill to change defective bulbs. This applies in particular to those bulbs which are only accessible from the engine compartment.

If in doubt, we recommend that you have defective bulbs changed by a qualified workshop or qualified mechanic.

If you do decide to change bulbs in the engine compartment yourself, be aware of the safety risks involved \Rightarrow page 255 \Rightarrow \bigwedge .

Types of bulbs

You must only replace a bulb with a bulb of the same type. Information regarding e.g. the wattage can be found on the base of the bulb.

Front bulb (12 V)	Version
Dipped-beam headlights (halogen)	55 W (H7)
Main beam headlights (halogen)	55 W (H7)
Front fog lights	55 W (H7)

Rear bulb (12 V)	Version
Brake lights / tail lights	P 21 W
Turn signals (rear)	P 21 W
Reversing lights	W 16 W
Rear fog light	H 21 W
Number plate lights	5 W

12 A

document_0900452a81b1b9de.book Seite 305 Donnerstag, 26. Juli 2007 9:16 09

Fuses and bulbs

MARNING

Take particular care when working on components in the

engine compartment if the engine is warm - risk of burns!

Bulbs are sensitive to pressure. The glass can break when you touch the bulb, causing injury.

· Incorrect handling of the high-voltage element of xenon gas-

discharge bulbs* can have potentially fatal consequences.

• When changing bulbs, please take care not to injure yourself on sharp edges, in particular on the headlight housing.

! Caution

• Always remove the ignition key before carrying out any work on the electrical system - danger of short circuiting!

- Switch off the lights or parking lights before you change a bulb.
- Take good care to avoid damaging any components.

• Removing the lights in particular can lead to the paintwork becoming damaged. This is another reason why we recommend having the bulbs changed by a qualified workshop.

🕷 For the sake of the environment

Please ask your specialist retailer how to dispose of used bulbs in the proper manner.

i Note

Place the parts you have removed on a soft cloth so that they do not become scratched.

 Please check at regular intervals that all lighting (especially the exterior lighting) on your vehicle is functioning properly. This is not only in the interest of your own safety, but also in that of all other road users.

Before changing a bulb, make sure you have the correct new bulb.

• Do not touch the glass part of the bulb with your bare hands, use a cloth or paper towel instead. Otherwise, the fingerprints left on the glass will vaporise as a result of the heat generated by the bulb, be deposited on the reflector and impair its surface.

Bulbs with a bayonet fastener

 
Bulbs with a bayonet fastener must be changed as follows:

Removing the bulb

- Lightly press the defective bulb into the bulb holder, then turn it anti-clockwise and remove it.
- Do not touch the glass part of the new bulb with your bare hands, use a cloth or paper towel instead.

Fitting the bulb

- Fit the new bulb, pressing it into the bulb holder, and turn it clockwise as far as it will go.
- If necessary, use a cloth to remove any fingerprints from the glass part of the bulb. ■



document_0900452a81b1b9de.book Seite 306 Donnerstag, 26. Juli 2007 9:16 09

Fuses and bulbs

۲

306

Bulb holders with a bayonet fastener



Fig. 287 Diagram: Bulb holder with a bayonet fastener

In the case of bulb holders with a bayonet fastener please proceed as follows:

Removing the bulb holder


Turn the bulb holder in the direction of the arrow (A) ⇒ fig. 287 as far as it will go and then take the bulb holder out of the light unit.

Fitting the bulb holder

- Insert the bulb holder into the light unit, making sure you keep the bulb holder straight, i.e. the rubber seal makes even contact all around.
- Turn the bulb holder in the direction indicated by the arrow (B) \Rightarrow fig. 287 as far as it will go. \blacksquare

Changing bulbs for headlights

Removing and installing headlights

 

 


Fig. 289 Headlight unit: Attachment points are marked by arrows

The description for removing the headlight refers to the left headlight; in principle the same procedure applies to the right headlight.

Removing

- Switch off the ignition and the lights.
- Open the bonnet.

document_0900452a81b1b9de.book Seite 307 Donnerstag, 26. Juli 2007 9:16 09

- Take the screwdriver and the interchangeable Torx socket out of the vehicle tool kit.
- Remove the screws ⇒ page 306, fig. 288 that secure the trim panel to the lock carrier and detach the trim panel.
- Slacken the two screws that secure the headlight to the lock carrier and the two screws at the underside of the headlight (the screws at the underside should not be slackened more than five turns) ⇒ page 306, fig. 289.
- Carefully pull the headlight forward about 60 mm.
- Release and unplug the electrical connector.
- Carefully take the headlight out towards the front (swivel it slightly if necessary).

Installing

- Perform all of the above steps in reverse sequence.

The headlight must be inserted in two guides (on the underside of the headlight). This is the only way to ensure that the headlight is installed in the correct position. To determine whether the headlight is correctly installed, check that it is aligned flush with adjacent body parts (such as the wing panel).

Do not interchange the securing screws.


U Caution

Please take particular care not to damage or scratch the adjacent parts of the body when removing or installing the headlights.

Fuses and bulbs

Fig. 290 Headlight unit: Rubber cap is highlighted

 Removing bulb for main beam headlights






- Remove the headlight \Rightarrow *page 306*.

− Take off the rubber cap \Rightarrow fig. 290 \Rightarrow \triangle in "Changing bulbs" on *page 304*.

 - Press the connector in the direction of the arrow \Rightarrow fig. 291.
- Remove the connector together with the bulb from the headlight housing.
- Disconnect the connector from the base of the bulb $\Rightarrow \bigwedge$ in "Changing bulbs" on *page 304*.



307

document_0900452a81b1b9de.book Seite 308 Donnerstag, 26. Juli 2007 9:16 09

Fuses and bulbs

۲

308

_

Installing the bulb for the main beam headlights

When installing a bulb, the lug on the base of the bulb must be inserted into the appropriate mounting on the bulb housing.

 


Fig. 292 Bulb with connector: The lug on the base of the bulb is highlighted



Fig. 293 Fitting bulb for main beam headlights f in "Changing

- bulbs" on page 304. – Insert the bulb carefully into the bulb housing. Start by
- Insert the build carefully into the build inocally. Start by placing the base of the bulb directly behind one of the retaining hooks so that the lug fits into the recess on the bulb housing.

- Press the connector in the direction of the arrow \Rightarrow fig. 293 until the bulb engages.
- Check that the bulb is securely seated in the bulb housing.
- Fit the rubber cap and install the headlight \Rightarrow page 306.
- Check whether the new bulb is working.
- Have the headlight settings checked.

🚺 Note

Ensure that the rubber cap is seated correctly so that no water can enter the unit. \blacksquare

Removing bulb for dipped headlights


 


Fig. 294 Headlight unit: Cover



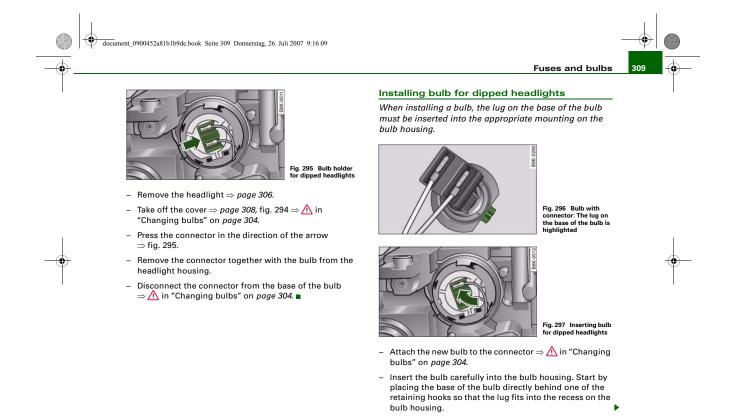

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	▶
+			<u> </u>			

1

- - Check that the bulb is securely seated in the bulb housing.
 - Fit the cover.
 - Install the headlight \Rightarrow page 306.
 - Check whether the new bulb is working.
 - Have the headlight settings checked.

Changing bulb for front fog lights

Applies to vehicles: with halogen main beam headlights

Preparations





Fig. 299 Screws securing fog light

The description for changing the bulb refers to the right fog light; in principle the same procedure applies to the left fog light.

- Switch off the ignition and the lights.
- Detach the trim cover \Rightarrow fig. 298 (pull it carefully in the direction of the arrow).
- Remove the two securing screws \Rightarrow fig. 299 and pull the fog light unit out of the bumper.
- Unplug the electrical connector.



The trim cover is secured to the bumper by several retaining hooks. Do not use force when removing the trim cover to avoid damaging it. ■

Fig. 298 Trim cover for fog light

 




Fig. 300 Front fog light: Bulb holder is highlighted

- Turn the bulb holder anti-clockwise \Rightarrow page 306 and take it out of the fog light housing.
- Insert the new bulb holder and turn it clockwise as far as the stop \Rightarrow page 306.

After changing the bulb re-install all parts in the reverse sequence and check that the bulb is working. \blacksquare

Changing bulbs for rear lights in side panel

Overview of rear lights



Fig. 301 Rear lights in side panel

 
Fuses and bulbs

311

Brake lights

• Turn signals

The following instructions for changing the bulb refer to the left side of the vehicle. Follow the same procedure for changing the bulb on the other side of the vehicle.



document_0900452a81b1b9de.book Seite 312 Donnerstag, 26. Juli 2007 9:16 09

Fuses and bulbs

312

Applies to vehicles: with halogen main beam headlights

Removing rear light

To change the bulbs, you must remove the rear light. Removing the light requires a certain degree of practical skill.



Fig. 302 Luggage compartment: Location of retaining screw for rear light

Fig. 303 Removing rear light from side panel



- Check which of the bulbs is defective.
- Open the boot lid.
- Remove the side trim.
- Insert the screwdriver (from the tool kit) through the side opening in the plastic screw \Rightarrow fig. 302.

- Turn the screwdriver anti-clockwise to loosen the screw and then carefully remove the screw.
- Gradually ease the light housing out of the rubber mountings (positions \Rightarrow fig. 303 (3) and (4) by pulling alternately in direction of arrows (1) and (2). If necessary use the tool for changing bulbs from your vehicle's toolkit to carefully apply some pressure between positions (3) and (4) \Rightarrow (1).
- Unplug the electrical connector.
- Change the defective bulb \Rightarrow page 313.

! Caution

When removing or installing the rear light, take care not to cause any damage.

• Removing the rear light in particular can lead to the paintwork or rear light becoming damaged. This is another reason why we recommend having the bulbs changed by a qualified workshop.

• NEVER use metal tools (e.g. a screwdriver) or sharp or pointed plastic tools to lever out the rear light - risk of damaging the paint.



Make sure you have a soft cloth ready to place under the glass on the rear light, to avoid any scratches. \blacksquare

Changing bulbs

All bulbs can be changed easily after removing the rear light.

 


Fig. 304 Rear light, mounting plate is highlighted

- Detach the bulb carrier.
- Renew the defective bulb (pull to remove from plug-in holder or turn to remove from bayonet holder)
 ⇒ page 305.
- Attach the bulb carrier.
- Re-install the rear light \Rightarrow page 313.

Fuses and bulbs

313

Applies to vehicles: with halogen main beam headlights Installing rear light

The rear light is easy to re-install.

 


To re-install the rear light, follow the steps for removal in reverse sequence.

- Plug in the electrical connector. Make sure you hear it click into place.
- Insert the rear light into the rear light carrier \Rightarrow fig. 305.
- Press the rear light into the two rubber mountings as far as it will go. The rear light must be flush with the body contour.
- Use the screw to secure the rear light from the luggage compartment.
- Make sure that all bulbs for the rear lights are working.

() Caution

Take care when installing the rear light to make sure there is no damage to the paintwork or any of its components.





Removing bulb carrier



Fig. 307 Boot lid: Opening the cover in the boot lid


 


Fig. 308 Boot lid: Removing bulb carrier

The description for changing the bulb refers to the left rear light unit; in principle the same procedure applies to the right rear light unit.

- Check which of the bulbs is defective.
- Open the boot lid.
- Take the screwdriver out of the vehicle tool kit.
- Using the flat-blade side of the reversible screwdriver insert, carefully detach the cover cap \Rightarrow fig. 307 -arrows-.
- Release the retaining tab and remove the bulb carrier from the light unit.
- Change the bulb \Rightarrow page 315.

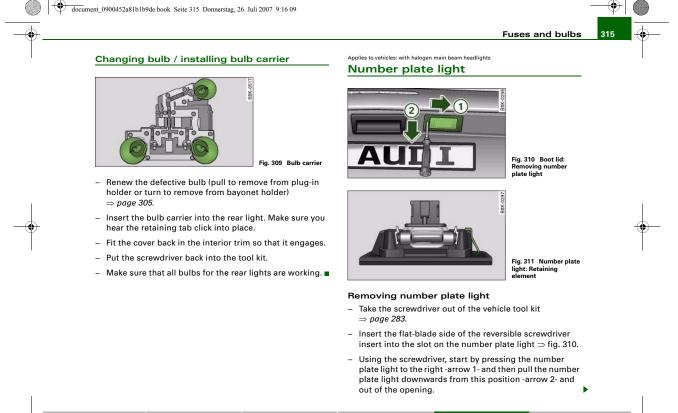

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
_						0

Image: document_0900452a81b1b9de.book Seite 316 Donnerstag, 26. Juli 2007 9:16.09 Image: document_0900452a81b1b9de.book Seite 316 Donnerstag, 26. Juli 2007 9:16.09 Image: document_0900452a81b1b9de.book Seite 316 Donnerstag, 26. Juli 2007 9:16.09 Image: document_0900452a81b1b9de.book Seite 316 Donnerstag, 26. Juli 2007 9:16.09 Image: document_0900452a81b1b9de.book Seite 316 Donnerstag, 26. Juli 2007 9:16.09 Image: document_0900452a81b1b9de.book Seite 316 Donnerstag, 26. Juli 2007 9:16.09


- Detach the number plate light.


Changing bulb

Press the defective bulb out of the bulb holder and fit the new bulb.

Installing number plate light

- First insert the side with the retaining element \Rightarrow page 315, fig. 311 and then carefully press the number plate light into the opening.
- Check whether the new bulb is working.

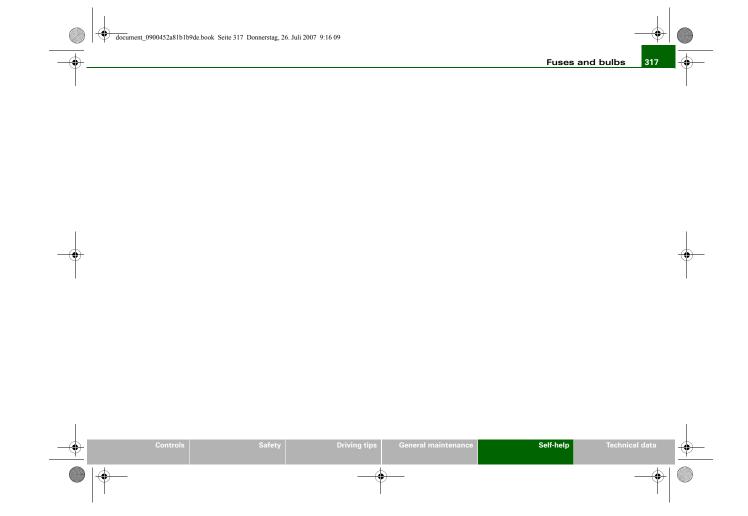

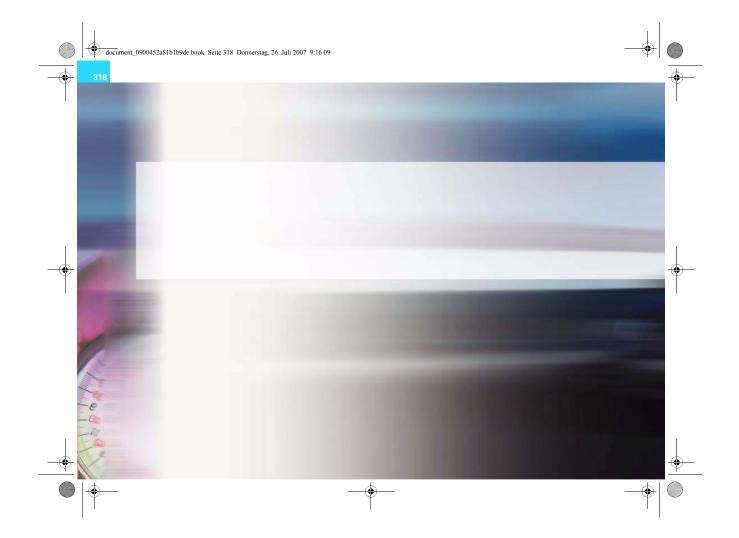



document_0900452a81b1b9de.book Seite 320 Donnerstag, 26. Juli 2007 9:16 09

General notes

General notes

Explanation of technical data

Where not otherwise indicated or separately listed, all technical data apply to vehicles with standard equipment for the German market. Other figures may apply for special versions and export models.

Please note that the details listed in the **vehicle's registration documents** can be taken as correct.

Engine data

The figures for engine power output are determined according to EU standards.

Performance figures

The performance figures were measured without equipment which may influence performance, such as mudflaps or extremely widesection tyres.

Kerb weight (unladen weight)

These figures (kerb weight according to the currently applicable version of EU Directive 92/21/EEC) apply to the vehicle with the tank 90% full, with no special equipment. The figures include an additional 75 kg to allow for the weight of the driver.

When towing a trailer, the **gross vehicle weight** may be exceeded by up to 30 kg and the **maximum rear axle weight** may be exceeded by up to 80 kg.

Maximum trailer weights

The maximum trailer weights are calculated in accordance with the currently applicable version of EU Directive 92/21/EEC.

The figures for a **trailer with brakes**, on **gradients up to 8%** are applicable only up to a maximum speed of 80 km/h (even though higher speeds may be permitted when towing a trailer in some countries). The figures for a trailer with brakes on gradients up to 12% and for the weight of car and trailer on gradients up to 12% are applicable up to a maximum speed of 100 km/h. This maximum speed must not be exceeded even in countries where higher speeds are permitted.

Maximum draw bar loading

The vertical load exerted by the trailer drawbar on the ball joint of the towing bracket must not exceed **80 kg**.

In the interest of safety, we recommend applying the maximum permitted draw bar weight. The stability of the trailer could be adversely affected if too little weight is applied.

If the **maximum** permitted drawbar weight cannot be obtained, e.g. when using small or light trailers, statutory regulations require that the drawbar weight be at least 4% of the actual trailer weight (for single-axle trailers or twin-axle trailers with an axle spacing less than 1.0 m).


Dimensions

Length	mm	4703
Width	mm	1826
Width across mirrors	mm	1953
Height, unladen ¹⁾	mm	1417-1437

¹⁾ The height of the vehicle depends on the tyres and suspension.

Take care not to damage low-mounted parts of the car (such as the spoiler or exhaust system) on steep ramps, uneven road surfaces or roadside kerbs, etc.

This applies especially when the vehicle is fully laden.

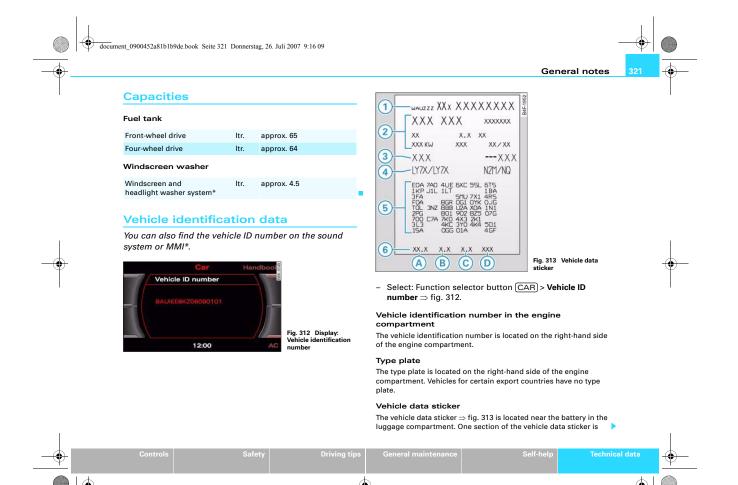

document_0900452a81b1b9de.book Seite 322 Donnerstag, 26. Juli 2007 9:16 09

General notes

4

attached to the inside cover of the Service Schedule before the vehicle is handed over.

The sticker lists the following data:

1) Vehicle identification number (chassis number)

Vehicle type / engine power / gearbox type

3 Engine and gearbox code letters

Paint No. / Interior equipment No.

- Optional equipment codes
- 6 Fuel consumption and emissions

Fuel consumption and emissions

Information on the vehicle's fuel consumption and emissions is given at the bottom of the vehicle data sticker (6):

A Urban cycle consumption (ltr./100 km)

- Extra-urban cycle consumption (ltr./100 km)
- Combined cycle consumption (ltr./100 km)
- Combined CO₂ emissions (g/km)

The specified values were determined in accordance with the test procedure prescribed by the currently applicable version of Directive 80/1268/EEC. The specifications do **not** refer to an individual vehicle. The consumption figures achieved during normal driving may differ from the test values quoted in accordance with the above Directive, depending on special equipment fitted, vehicle loading, personal driving style, road and traffic conditions, environmental factors and the condition of the car.



document_0900452a81b1b9de.book Seite 323 Donnerstag, 26. Juli 2007 9:16 09

Performance, weights and dimensions



Performance, weights and dimensions

Petrol engines

Engine data

Power output	118 kV	/ at 4500 - 600	0 rpm
Maximum torque	250 Nr	n at 1500 - 45	00 rpm
Cylinders, capacity	4 cylin	ders, 1,798 cn	n ³
Fuel	Premium unleaded 95 RON or regular unleaded 91 RON ¹⁾		
Performance figures			
		MG	AG
Maximum speed	km/h	225	218
Acceleration from 0 - 100 km/h	sec.	8.6	8.6
Weights			
		MG	AG
Gross vehicle weight	kg	1960	2000
Kerb weight (unladen weight)	kg	1410	1450
Maximum front axle weight	kg	1035	1060
Maximum rear axle weight	kg	1050	1060


Maximum trailer weights²⁾

		MG	AG
Trailer with brakes on gradients up to 8%	kg	1500	1500
Trailer with brakes on gradients up to 12%	kg	1300	1300
Weight of vehicle and trailer on gradients up to 12%	kg	3330	3370
Trailer without brakes	kg	740	750
Engine oil			
LongLife Service	VW 50	3 00, VW 504	00
Inspection Service	VW 502 00, VW 503 00, VW 504 00		
Engine oil capacity (including filter change)	approx	. 4.6 litres	

MG = Manual gearbox / AG = Automatic gearbox

¹⁾ With slight loss of power

 ²⁾ The specified trailer weights apply only to vehicles with a factoryfitted towing bracket.



document_0900452a81b1b9de.book Seite 324 Donnerstag, 26. Juli 2007 9:16 09

Performance, weights and dimensions

٠

۲

A4 3.2 quattro		
Engine data		
Power output	195 kV	/ at 6500 rpm
Maximum torque	330 Nr	n at 3000 - 5000 rpm
Cylinders, capacity	6 cylin	ders, 3,197 cm ³
Fuel		im unleaded 95 RON or r unleaded 91 RON ¹⁾
Performance figures		
Maximum speed	km/h	MG = 250
Acceleration from 0 - 100 km/h	sec.	MG = 6.2
Weights		
Gross vehicle weight	kg	MG = 2130
Kerb weight (unladen weight)	kg	MG = 1580
Maximum front axle weight	kg	MG = 1105
Maximum rear axle weight	kg	MG = 1145
Maximum trailer weights	2)	
Trailer with brakes on gradients up to 8%	kg	MG = 2100
Trailer with brakes on gradients up to 12%	kg	MG = 1900
Weight of vehicle and trailer on gradients up to 12%	kg	MG = 4100
Trailer without brakes	kg	MG = 750

Engine oil

LongLife Service Inspection Service Engine oil capacity (including filter change) VW 503 00, VW 504 00 VW 502 00, VW 503 00 VW 504 00 approx. 6.2 litres

MG = manual gearbox

¹⁾ With slight loss of power

 $^{2)}$ The specified trailer weights apply only to vehicles with a factory-fitted towing bracket. \blacksquare



document_0900452a81b1b9de.book Seite 325 Donnerstag, 26. Juli 2007 9:16 09

Diesel engines

A4 2.0 TDI

٠

Engine data ¹⁾			
Power output	105 kV	/ at 4200 rpm	
Maximum torque	320 Nr	n at 1750 - 250	00 rpm
Cylinders, capacity	4 cylin	ders, 1,968 cn	n ³
Fuel	Diesel		
Performance figures			
		MG	AG
Maximum speed	km/h	215	210
Acceleration from 0 - 100 km/h	sec.	9.4	9.4
Weights			
		MG	AG
Gross vehicle weight	kg	2010	2045
Kerb weight (unladen weight)	kg	1460	1495
Maximum front axle weight	kg	1075	1100
Maximum rear axle weight	kg	1065	1070

Performance, weights and dimensions

Maximum trailer weights	2)		
		MG	AG
Trailer with brakes on gradients up to 8%	kg	1900	1900
Trailer with brakes on gradients up to 12%	kg	1700	1700
Weight of vehicle and trailer on gradients up to 12%	kg	3780	3815
Trailer without brakes	kg	750	750
Engine oil			
LongLife Service	VW 506 01, VW 507 00		
	vehicles with diesel particulate filter*: only VW 507 00		
Inspection Service	VW 50 VW 50		95 01, VW 506 01,
		es with dies only VW 50	sel particulate 07 00
Engine oil capacity (including filter change)	approx	. 5.0 litres	

MG = Manual gearbox / AG = Automatic gearbox

¹⁾ This engine is available with reduced power for some markets (see car documentation). The performance figures may be slightly different.

 $^{2)}$ The specified trailer weights apply only to vehicles with a factory-fitted towing bracket. \blacksquare



document_0900452a81b1b9de.book Seite 326 Donnerstag, 26. Juli 2007 9:16 09

Performance, weights and dimensions

A4 2.7 TDI		
Engine data ¹⁾		
Power output	140 kV	/ at 3500 - 4000 rpm
Maximum torque	400 Nr	n at 1400 - 3250 rpm
Cylinders, capacity	6 cylin	ders, 2,698 cm ³
Fuel	Diesel	
Performance figures		
Maximum speed	km/h	AG = 226
Acceleration from 0 - 100 km/h	sec.	AG = 7.7
Weights		
Gross vehicle weight	kg	AG = 2145
Kerb weight (unladen weight)	kg	AG = 1595
Maximum front axle weight	kg	AG = 1180
Maximum rear axle weight	kg	AG = 1080
Maximum trailer weights	<u>2)</u>	
Trailer with brakes on gradients up to 8%	kg	AG = 1900
Trailer with brakes on gradients up to 12%	kg	AG = 1700
Weight of vehicle and trailer on gradients up to 12%	kg	AG = 3915
Trailer without brakes	kg	AG = 750

Engine oil

LongLife Service VW 506 01, VW 507 00 vehicles with diesel particulate filter* vehicles with diesel particulate filter* Inspection Service VW 505 00, VW 505 01, VW 506 01, VW 507 00 Inspection Service VW 507 00 vehicles with diesel particulate filter*: only VW 507 00 Engine oil capacity (including filter change) approx. 6.9 litres

AG = automatic gearbox

¹⁾ This engine is available with reduced power for some markets (see car documentation). The performance figures may be slightly different.

²¹ The specified trailer weights apply only to vehicles with a factoryfitted towing bracket.

<u>.</u>



document_0900452a81b1b9de.book Seite 327 Donnerstag, 26. Juli 2007 9:16 09

Engine data		
Power output	176 kV	V at 4000 - 4400 rpm
Maximum torque	500 Ni	m at 1500 - 3000 rpm
Cylinders, capacity	6 cylin	ders, 2,967 cm ³
Fuel	Diesel	
Performance figures		
Maximum speed	km/h	MG = 250 (governed)
Acceleration from 0 - 100 km/h	sec.	MG = 6.1
Weights		
Gross vehicle weight	kg	MG = 2205
Kerb weight (unladen weight)	kg	MG = 1655
Maximum front axle weight	kg	MG = 1180
Maximum rear axle weight	kg	MG = 1140
Maximum trailer weights ¹)	
Trailer with brakes on gradients up to 8%	kg	MG = 2100
Trailer with brakes on gradients up to 12%	kg	MG = 1900
Weight of vehicle and trailer on gradients up to 12%	kg	MG = 4175

Performance, weights and dimensions


Engine oil	
LongLife Service	VW 506 01, VW 507 00 vehicles with diesel particulate filter*: only VW 507 00
Inspection Service	VW 505 00, VW 505 01, VW 506 01, VW 507 00 vehicles with diesel particulate filter*: only VW 507 00
Engine oil capacity (including filter change)	approx. 6.9 litres

MG = manual gearbox

 $^{1)}$ The specified trailer weights apply only to vehicles with a factory-fitted towing bracket. \blacksquare

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
_		-•)			



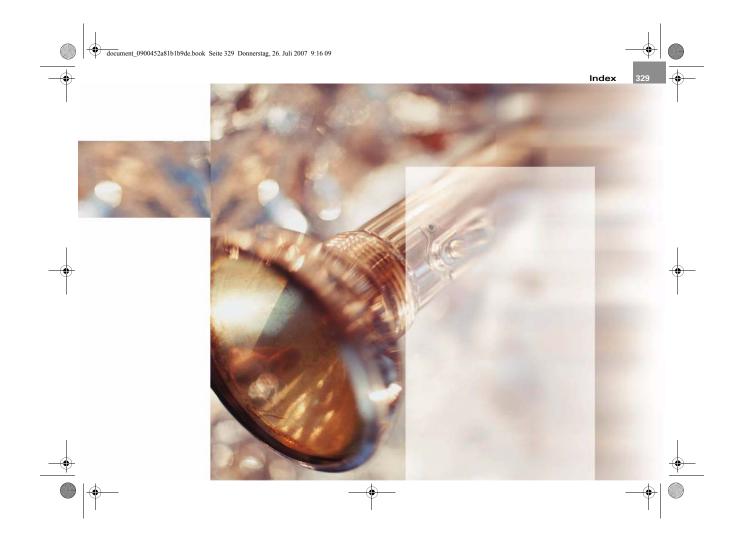

	o do		1b1b9de.book	Seite 330	Donnerstag, 26. Juli 2007	9:16 09
<u> </u>	330	Index				
Ψ-						

Index A

Abroad
Changing headlight dip settings 59
ABS
See Anti-lock brake system
AC mode
Acceleration figures
See Performance, weights and
dimensions 323
Accessories 277
Trailer
Acoustic parking aid 169
Adapter for anti-theft wheel bolts 292
adaptive cruise control 128
Driver intervention prompt 130, 138
Driver messages 134
Driving program 139
Error messages 136
Indicator lamps 134
No vehicle in front
Overriding 130
Setting a new speed 131
Setting distance 133
Setting speed 131
Setting time interval 133
Settings 139
Status messages 136
Switching off (with memory function) 131, 132
Switching on and off 131
System limitations 140
Vehicle in front 130

	Vehicles with manual gearbox 129	,
	Volume of warning tone 139	
	adaptive light 61	
9	Defective	
	advanced key	,
9	Locking and unlocking the vehicle 47	
7	START ENGINE STOP button 118	
	Starting the engine 118	,
	Switching on the ignition 118	,
3	Air conditioner	
7	AC mode 98	
5	See also Deluxe automatic air conditioner	,
9	93	
2	Air recirculation mode	
8	Deluxe automatic air conditioner 97	,
8	Deluxe automatic air conditioner plus	
4	105	
9	Airbag 201	
6	Deactivating 208	
4	Front airbags 203	,
0	Head-protection airbag	
0	Key-operated switch for front passenger's	
1	airbag	,
3	Side airbags 205	
1	Triggering	
3	Warning lamp 17	
9	Alarm system	
6	See Anti-theft alarm system 42	
	Alterations to the vehicle 277	1
	Alternator	1
1	Fault 32	1
0	Anti-dazzle interior mirror 69	1
0	Anti-freeze additive 260	

	4
	- Ψ_
Anti-knock properties of petrol 251 Anti-lock brake system How the system works 222	
Warning lamp 19	
Anti-theft alarm system 42	
Interior monitor 50	
Tow-away protection	
Anti-theft wheel bolts 292	
Armrest (front)	
Adjusting 78	
Storage compartment	
Ashtrays	
Front 86	
Rear	
Audi braking guard	1
Error messages 143	4
Settings 144	Φ
Status messages 143	
Switching on and off	I
Dynamic steering	
Suspension control	
Audi hold assist	
Audi lane assist	
See lane assist	
Audi parking system 169	
Audi parking system advanced 171	
Audi parking system plus 170	
Auto Lock	
Auto-check control 30	

_____ ____| 🔘

Automatic air conditioner plus See Deluxe automatic air conditioner plus 101 Automatic cruise control	В	Index Brake system	331	¢
See Deluxe automatic air conditioner plus 101 Automatic cruise control	_			
See adaptive cruise control 128 Automatic gearbox Dynamic gear control program 166 Kick-down feature 165 Manual release (multitronic®) 168 multitronic® 162 Paddle levers (tiptronic mode) 167 Safety interlock for ignition key 116 Selector lever lock 165 Selector lever positions 163 Steering wheel with paddle levers 167 tiptronic 162 Automatic headlight control 57 Automatic headlights 59 Auxiliary heating Deluxe automatic air conditioner plus Description 110 Description 111 Running time 112 Switching on/off immediately 111 Timer 111 Average speed 25 Avale weights 59	Battery Charging	Brake assist system 222 Brake fluid 262 Brake light defective 37 Brake pads worn 37 Brake servo 224 Electro-mechanical parking brake 121 General notes 224 Malfunction 32 Warning lamp 20 braking guard 22 Bulb holder 306 Bulb monitor 37 Bulbs 304 Brake lights 304 Brake lights 303 Front fog lights 308 Front fog lights 307 Number plate light 315 Rear fog light 311 Reversing light 311		-


 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	<u> </u>
)			

<u> </u>	Index		
	C Capacities 321 Car keys 43 Care of vehicle 244 Catalytic converter 249 Central locking system 42 Boot lid 51 Deadlock mechanism 48 Fuel tank flap 252 Locking and unlocking the vehicle from inside 49 Manual locking 51 Opening and closing windows 54 Sun roof 54 Sun roof 54 Sun roof 24 Switches on driver's door 49 Unlocking 48 Cetane number 251 Changing a wheel 288 Changing bulbs See Bulbs 304 Chassis number 321 Child safety 210 Side airbags 212 Side airbags 213 Side airbags 214	Cigarette lighter 87 Cleaning 244 Cleaning Alcantara 250 Cleaning seat covers Alcantara Alcantara 250 Natural leather 249 Textile covers 247 Cleaning textile covers and trim parts 247 Cleaning textile covers and trim parts 247 Cloak, setting 13 Closing Bonnet 256 Sun roof 55 Coat hooks 91 Colour code 321 coming home 59 Compact temporary spare wheel 58 See Spare wheel 284 Compartment for (sunlylasses 91 Controls and displays 0verview 9 Onvervience open/close function 54 Cooling system Anti-freeze additive 260 Coolant temperature gauge 11 Malfunction 33 Radiator fan 262 Topping up coolant 261	Cruise control system Adjusting stored speed Indicator lamp Pre-selecting a speed Switching off Switching on Cup holders Current fuel consumption D Date display Datytime running lights DCP See Dynamic gear control program Deadtock mechanism Deadtock mechanism Deluxe automatic air conditioner Air distribution Air outlets for rear passengers Blower Controls Defrosting Defrosting Defrosting Description Economical operation Heated rear window Seat heating, front

Supplementary heater101Dipped headlights57Driving on left59Switching on and off95Defective37Driving on right59Temperature96DISDiscover control system21Driving safety187Deluxe automatic air conditioner plus107Distance control system21Diving safety187Air outlets106Door actches/boot lid warning24Deluxe automatic air conditioner plus101Air outlets for rear passengers108Door actches/boot lid warning24Deluxe automatic air conditioner plus101Automatic recirculation mode103Automatic recirculation mode105Diver101DiverAuxiliary heating - running time113DriverSee Stittig position188EAuxiliary heating - running time113Door actches/boot lid warning24EControlsBlower101Door actches/boot lid warning24EControls19Description101Door actches/boot lid warning24EControls19Description101Door actches/boot lid warning24EControls19Description101Door actches/boot lid warning24EControls19Description101Door actches/boot lid warning24EEControls19Synchronisation109Door actches/boot lid warning24EEEEEDi	÷			Index	333
Blower104 ControlsBulk monitor37 ControlsEconomical driving223 ControlsDefrosting102 Defrosting102 Digital speedometer23 Digital speedometer23 See Electronic differential lock19 Electric seat adjustmentDescription108 Driver messages30 On-board computerSee Seat adjustment74 Electric windowsSupplementary heater100 Synchronisation103 Service interval display22 Central locking system53 Converience open/close functionDiesel251 Vellow symbols26 Service interval display24 SettingsSettingsDiesel particulate filter38, 229 Driving Engine oil257 Priving abroadSee Electrical socket88 Electrical socketDigital cock13 Driving abroad275 HeidightsElectrical socket87, 88 Electrical socket212 Multical spring away from a standstill221 LizeDimensions207 LizeDriving away from a standstill221 LizeDriving away when towing a trailer122 LizeDimensions207 LizeDriving away from a standstill122Emergency braking function123		Switching on and off 95 Temperature 96 Deluxe automatic air conditioner plus 101 AC mode 107 Air distribution 106 Air outlets 107 Air outlets 107 Air outlets for rear passengers 108 Air recirculation mode 105 Automatic recirculation 109 Auxiliary heating 110 Auxiliary heating - remote control 113 Auxiliary heating - running time 112	Defective 37 DIS See Driver information system 21 Distance control system 22 Door catches/boot lid warning 24 Doors Child-proof catches 53 Manual locking 51 Driver See Sitting position 188 Driver information system 21	Driving on right 59 Driving safety 187 Driving time 25 Dust filter 93 Deluxe automatic air conditioner 93 Deluxe automatic air conditioner plus 101 DVD player 80 Dynamic gear control program 166 Dynamic steering 16, 36, 159, 222	
Driving away when towing a trailer 125 Manufaction)	Blower 104 Controls 102 Defrosting 106 Description 101 Economical operation 108 Heated rear window 106 Supplementary heater 110 Switching on and off 103 Synchronisation 109 Temperature 104 Diesel 251 Diesel particulate filter 38, 229 Engine oil 257 Digital clock 13 Digital compass 71 Digital speedometer 23	Bulb monitor 37 CD and radio display 22 Digital speedometer 23 Door catches/boot lid warning 24 Driver messages 30 On-board computer 25 Outside temperature display 22 Red symbols 31 Service interval display 24 Speed warning 28 Yellow symbols 35 Driver messages 30 Driving 21 Run flat tyres 275 Driving abroad 59 Unleaded fuel 251 Driving away from a standstill 122	EDL See Electronic differential lock 19 Electric seat adjustment 74 See Seat adjustment 74 Electric windows 53 Central locking system 54 Convenience open/close function 54 Malfunctions 55 Settings 55 Electrical accessories 56 See Electrical socket 88 Electrical socket 87, 88 Electro-mechanical parking brake 124 Auto release function 122 Driving away from a standstill 122 Driving away when towing a trailer 123 Emergency braking function 123	

334	Index			
) -	Operation121Parking122Releasing and applying121Warning lamp19, 20Electronic differential lockHow the system works222Warning lamp19Electronic stabilisation programHow the system works222Warning lamp19Electronic stabilisation programHow the system works222Warning lamp17Emergency braking function123Emergency releaseIgnition keyIgnition key46Emission control systemsCatalytic converterCatalytic converter229Diesel particulate filter229	Topping up 259 See also Performance, weights and dimensions 323 Engine oil capacity 328 See Performance, weights and dimensions 323 Engine oil pressure Warning lamp Warning lamp 33 Engine oil pressure Warning lamp Malfunction 38 Environmental compatibility 231 Environmental tips Filling the tank 252 Heated rear window 98, 106 Leaks 255 Roof carrier 84 EPC See Engine management 16 ESP ESP	See Sitting position	
	Emissions	See Electronic stabilisation program . 17 Ethanol fuel 251	Garage door opener	
	Engine compartment layout 256 Engine data See Performance, weights and dimensions 323 Engine hood 323 See Bonnet 254 Engine management (EPC) warning lamp 16 Engine oil 34, 257 Checking oil level 258, 259	Exterior mirrors	Glove box	
)	Consumption	Fog lights		

• •			Index	335
	Hazard warning lights 61 Indicator lamp 18 Head restraints 77 Front seats 77 Hear seats 78 Headlight converter 59 Headlight flasher 62 Headlight range control 60 Malfunction 39 Headlight range control 61 Changing dip settings 59 Driving abroad 59 Headlight range control 60 Washer system 67 Heade 70 Front seats (deluxe automatic air conditioner) 114 Rear seats 115 Rear window 98, 106 Heating Deluxe automatic air conditioner 93 Deluxe automatic air conditioner plus 101 101 HomeLink 179 Horn 9	Ignition key Emergency release 46 Safety interlock 116 Ignition lock 116 Ignition lock 116 Ignition lock 116 Indicator lamps 15 adaptive cruise control 134 Cruise control system 19 Glow plug system 16 Main beam headlights 18 Overview 15 Trailer turn signals 18 Inflation pressures (tyres) 39, 268 Inspection intervals 24 Instrument lighting 59 Interior lights 16 Dimming 63 Front 63 Rear 63 Interior mirrors 50 See Mirrors 68, 69 Interior monitor 50 Interior memory 50 </th <th>J Jack</th> <th></th>	J Jack	

 

	Exterior lighting	Manual operation Boot lid	Number plate light Changing bulb	
	leaving home 59 Rear fog lights 58	Manual release Selector lever (multitronic®) 168	0	
	Switching on and off	Maximum speed See Performance, weights and	Octane rating	
	Load-through hatch	dimensions	See Engine oil 258, 259 Oil consumption 258, 259 Oil via via 258, 259	
	Central locking system	Activating remote control key 77 Recalling settings	Oil dipstick 258 Oil level 38 On-board computer 25	
	Central locking system	Messages	Opening Bonnet	
	LongLife Service	Minimising pollution 229 Mirrors	Sun roof55Outside temperature display22	
\rightarrow	Extending	Anti-dazzle setting	Overview	-(
	Loading 79 Side storage compartment 80	Automatic anti-dazzle interior mirror . 69 Exterior mirrors	P	
	Stretch net	Interior mirror	Paddle levers tiptronic	
	192 Luggage rack	MMI control console, cleaning 247 MMI display, cleaning 247	Paint tainage	
	See Roof carrier	Mobile phones 278 Modifications 277 multitronic® 162	Parking brake	
	M	Driving with multitronic® 162	0 0	
	Main beam headlights	Ν	Reversing camera, parking mode 2 174 Reversing camera, parking mode 2 175 Safety notes on reversing camera 172	
	Make-up mirrors 64	Natural leather 248	Switching graphic display on and off 177	

Υ –		
ļ	Switching reversing camera on and off . 177	Q
	Towing bracket 177	Quartz clock
	parking system advanced	quattro
	parking system plus	See Four-wheel drive
	Parking the car	
	multitronic® 162	R
	Particulate filter	
	See Diesel particulate filter	Radio transmitters
	Passengers	Fixed installation
	See Sitting position	Mobile equipment
	Pedals	Radio-controlled clock
	Performance figures	Radio-operated remote cont
	See Performance, weights and	See Remote control keys
1	dimensions	Rain sensor
	Performance, weights and dimensions . 323	Rain sensor defective
-+++	General notes 320	Reading lights
	Personalised remote control key 43	Front
l l	Petrol 251	Rear
	Polishing 245	Rear centre console
	Pollen filter	Socket
	Deluxe automatic air conditioner 93	Rear fog lights
	Deluxe automatic air conditioner plus	Rear lights
	101	Defective
	Pollution filter	Rear View camera
	Deluxe automatic air conditioner 93	See Reversing camera
	Deluxe automatic air conditioner plus 101	Rear view mirrors
		See Mirrors
	Power management	Rear window, sun blind
	Driver message	Remote control keys
	Power steering	Indicator lamp
	Pressure (tyres)	Replacing the battery Unlocking and locking .
	1 1855018 (Lyres/ 39	Shocking and locking .
	Controls Safety	Driving tips
$\underline{\Psi}$		

document_0900452a81b1b9de.book Seite 337 Donnerstag, 26. Juli 2007 9:16 09

Quartz clock 13 quattro See Four-wheel drive 226
R
Radio transmitters 278 Fixed installation 278 Mobile equipment 278 Radio-controlled clock 13 Radio-operated remote control 38 See Remote control keys 43 Rain sensor 65 Rain sensor defective 37 Reading lights 278
Front
Rear centre console Socket
Rear fog lights
Rear lights Defective
Rear View camera See Reversing camera
Rear view mirrors See Mirrors
Rear window, sun blind 64
Remote control keys 43
Indicator lamp 44
Replacing the battery 45 Unlocking and locking 47

	Replacement keys 43
	Replacement parts
3	Reset button 14
	Retaining net
5	Rev counter
	Reverse gear
	Automatic gearbox
3	Reversing camera
3	Parking mode 1 174
3	Parking mode 2
3	RME fuel
	Roof carrier
3	Attachment points
5	Run flat tyres
7	Driving
	Introduction
3	Renewing defective components 276
3	Tyres
9	Running in 229
	New engine 229
3	New tyres
,	0
	S
3	SAFE
	Safe driving
9	Safety
1	Safety features
3	Seat adjustment
1	Backrest angle (manual)
5	Electrical74
7	Forwards and backwards (manual) 73

Index

 Controls	Safety	Driving tips	General maintenance	Self-help	Technical data	_
) 						

338	Index		
	Manual73 Seat height (manual)73 Seat belt height adjustment199 Seat beltsSeat belt tensioners194 Adjusting seat belts197 Belt tensioners199 CleaningCleaning250 During pregnancy198 Height adjustment199 Putting onPutting on197 Safety notes195 Taking off199 Warning lampSeat heating114 Front (deluxe automatic air conditioner) 114 Rear115 Seat memorySeat nemory75 Selector lever Manual release (multitronic@)168 Selector lever positionsManual release (multitronic@)163 Service interval display24 Service position for windscreen wipersArea covered by sensors151 Changing settings in the MMI155 Description151 Messages in instrument cluster display156	Safety notes157Switching on and off149Side lights57Single journey memory26Sitting position181Driver188Front passenger189Incorrect sitting position191Rear passengers189Ski bag82Snow chains273Sockets230 Volt230 Volt89Spare key43Starting the engine46Spare parts277Spare wheel284Speedometer14, 23Starting the engine45After fuel tank has been run dry252Jump-starting293Spare key46Tow-starting293Status messages30Steering with jump leads293Status messages30Steering with estering116Malfunction34Stereing wheel height adjustment116Malfunction34Storage compartments90Front seats91	Stretch net

Stretch net	
Sun blinds 64	
Sun roof	
Convenience open/close function 54	
Opening and closing 55	
Sun visors 64	
Supplementary heater	
Deluxe automatic air conditioner 101	
Deluxe automatic air conditioner plus 110	
Suspension control	
Warning lamp 39	
Switches on driver's door	
Central locking system 49	
Switching off the engine 118, 120	
Symbols 15	
т	
Tailgate	
See Boot lid	
Tank capacity	
Technical data 320	
tiptronic 162, 166	
Tools	
Total journey memory	
Tow-away protection	
Towing	
Automatic braking 233	
Trailer stabilisation	

�			Index	339 -
	Towing bracket, removable 235 Towing bracket, retrofitting 240 Towline anchorage 240 Front 296 Rear 297 Tow-starting 297 Traction control system 222 Trailer 232 Accessories 235 Notes on towing 234	Tread wear indicators 270 Tyre pressure monitoring system 39, 41 Tyre service life 268 U U Universal transmitter 179 Unleaded fuel 251 Unlocking 47 Central locking system 48	Seat belt 18 Suspension control 39 Warning triangle 282 Washer fluid level low 37 Washing the vehicle 37 By hand 244 Car wash 244 With high-pressure cleaner 244 Waxing 244 Wath 244 Wath 244 With high-pressure cleaner 244 Waxing 245 Weights 245	
	Points to check before towing 232 Technical requirements	V	See Performance, weights and dimensions	
•	Trailer stabilisation 233 Trailer turn signals Indicator lamp Indicator lamp 18 Trailer weights See Performance, weights and dimensions Stread depth 270	Vehicle data sticker 321 Vehicle identification data 321 Vehicle identification number 321 Ventilation 21 Deluxe automatic air conditioner 93 Deluxe automatic air conditioner plus 101	Wheel bolts 272 Wheel imbalance 268 Wheels 246, 268 Changing 288 Changing wheels round 270 Window heating 98, 106 Windows 246, 268	-(
	Trip recorder 14 Trips, checklist 187 Turn signals 62	Ventilation slots 192	Cleaning	
	Indicator lamp 18	W	Windows (electric)	
	Type plate321Tyre Mobility System285Tyre pressure39, 41, 268Tyre pressure monitoring system39, 41Tyre repair kit283Tyre Mobility System285TyresInflation pressures39, 268Run flat tyres274	Warning lamps 15 Airbag system 17 Anti-lock brake system 19 Brake system 20 Dynamic steering 16, 36 Electro-mechanical parking brake 19, 20 Electronic stabilisation program 17 Emission control system 18 Engine management 16	See Electric windows 53 Windscreen washer fluid 267 Windscreen wiper and washer system 65 Okanging blades 68 Defective 39 Service position 67 Winter conditions 8 Battery 263 Care of vehicle 244	
	Controls Safety	Driving tips General maintenar	nce Self-help Technic	cal data 🗕 🔶

	ument_0900452a81b1b9de.book Seite 340 Donnerstag, 26. Juli 2007 9:16 09
Ý	
	Cooling system 260
	Defrosting windows 98, 106
	De-icing windows 246
	Diesel 251
	Seat heating (deluxe automatic air
	conditioner) 114
	Seat heating for rear seats 115
	Snow chains
	Tyres
	Winter tyres 272
	Wiper blades
	See Windscreen wipers 68
1	Х
4	Xenon lights
	Driving abroad 59

_____ _____