# RENAULT

# 5 Mechanisms and accessories

- 51A SIDE OPENING ELEMENT MECHANISMS
- 52A NON-SIDE OPENING ELEMENT MECHANISMS
- 54A WINDOWS
- 55A EXTERIOR PROTECTION
- 56A EXTERIOR EQUIPMENT
- 57A INTERIOR EQUIPMENT
- 59A SAFETY ACCESSORIES

X95

#### **APRIL 2009**

**Edition Anglaise** 

"The repair methods given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which his vehicles are constructed."

All copyrights reserved by Renault.

The reproduction or translation in part of whole of the present document, as well as the use of the spare parts reference numbering system, are prohibited without the prior written consent of Renault.

© Renault s.a.s 2008

# **MEGANE III - Section 5**

# Contents

#### Page

51A	SIDE OPENING ELEMENT MECH	IANISMS
L	Front side door check strap: Removal - Refitting	51A-1
	Front side door lock: Removal - Refitting	51A-2
	Front side door lock barrel: Removal - Refitting	51A-4
	Door exterior handle: Removal - Refitting	51A-6
	Front side door electric window mechanism: Removal - Refitting	51A-8
	Rear side door lock: Removal - Refitting	51A-10
	Rear side door electric window mechanism: Removal - Refitting	51A-13
	Rear side door manual window control mechanism: Removal - Refitting	51A-16
	Front side door glass run channel mounting: Removal - Refitting	51A-19
	Rear side door check strap: Removal - Refitting	51A-21

52A	NON-SIDE OPENING ELEMENT MECHANISMS	
	Bonnet latch: Removal - Refitting	52A-1
	Bonnet release cable: Removal - Refitting	52A-2
	Tailgate lock: Removal - Refitting	52A-5
	Tailgate balancer: Removal - Refitting	52A-7
	Sunroof operating mechanism: Removal - Refitting	52A-8
	Sunroof moving panel: Removal - Refitting	52A-12
	Sunroof deflector: Removal - Refitting	52A-15
	Sunroof sun visors: Removal - Refitting	52A-18
	Fixed glass roof: Removal - Refitting	52A-20
	Fixed glass sunroof visor: Removal - Refitting	52A-23

54A WINDOWS

Windscreen: Removal - Refitting	54A-1
Sliding window in front side door: Removal - Refitting	54A-3

# Contents

55A

# 54A WINDOWS

55A

1	Sliding window in rear side door: Removal - Refitting	54A-7
	Rear quarter panel window: Removal - Refitting	54A-10
	Rear side door fixed window: Removal - Refitting	54A-14
	Rear screen: Removal - Refitting	54A-16
	Fixed sunroof window: Removal - Refitting	54A-18
	Sunroof side trim: Removal - Refitting	54A-21
EX	TERIOR PROTECTION	
I	Front bumper: Removal - Refitting	55A-1
	Front bumper: Stripping - Rebuilding	55A-6
	Front bumper: Conversion	55A-11
	Rear bumper: Removal - Refitting	55A-12
	Rear bumper: Stripping- Rebuilding	55A-16
	Tailgate strip: Removal - Refitting	55A-18
	Front side door moulding: Removal - Refitting	55A-20
	Rear side door moulding: Removal - Refitting	55A-22
	Rear wing protective strip: Removal - Refitting	55A-23
	Front wheel arch liner: Removal - Refitting	55A-24
	Rear wheel arch liner: Removal - Refitting	55A-27
	A-pillar trim piece: Removal - Refitting	55A-29

#### Front side door pillar exterior trim Removal - Refitting 55A-31 Rear side door pillar exterior trim Removal - Refitting 55A-34 **EXTERIOR EQUIPMENT** 56A Scuttle panel grille: Removal - Refitting 56A-1 Tailgate spoiler: Removal -Refitting 56A-6 Scoop under scuttle panel grille: Removal - Refitting 56A-8 Door mirror: Removal -Refitting 56A-15 Door mirror casing: Removal - Refitting 56A-17 Door mirror glass: Removal -Refitting 56A-19 Roof rack bar: Removal -Refitting 56A-20 Rear badges: Removal -Refitting 56A-22

**EXTERIOR PROTECTION** 

57A	INTERIOR EQUIPMENT	
	Dashboard: Removal - Refitting	57A-1
	Lower section of dashboard trim: Removal - Refitting	57A-10
	Dashboard trim: Removal - Refitting	57A-15
	Dashboard air vent: Removal - Refitting	57A-17
	Dashboard side air vent: Removal - Refitting	57A-19
	Centre front panel: Removal - Refitting	57A-20

# Contents

# 57A INTERIOR EQUIPMENT

Glovebox: Removal - Refitting	57A-25
Glovebox cover: Removal - Refitting	57A-27
Centre console: Removal - Refitting	57A-29
Floor flap and storage: Removal - Refitting	57A-41
Interior rear-view mirror Removal - Refitting	57A-43
Sun visor: Removal - Refitting	57A-45
Grab handle: Removal - Refitting	57A-47
Rear side door sun blind: Removal - Refitting	57A-48
Underseat flap and storage: Removal - Refitting	57A-49


# 59A SAFETY ACCESSORIES

Passenger presence	
detection ply: Removal -	
Refitting	59A-1



- I REMOVAL PREPARATION OPERATION
- Remove:
  - the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the front speaker (see **Front speakers: Removal - Refitting**) (86A, Radio).


# II - OPERATION FOR REMOVAL OF PART CONCERNED

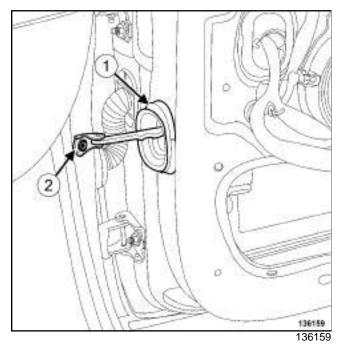

#### □ Remove:

- the front side door check strap seal  $(\mathbf{1})$  ,

- the bolt  $\left( 2\right)$  .

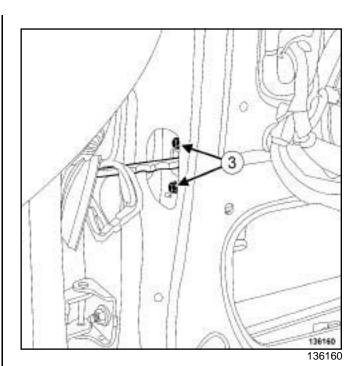

#### Remove:

- the bolts  $({\bf 3})$  ,
- the front side door check strap from inside the front side door box section.

# REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

#### Refit:

- the front side door check strap through the inside of the front side door box section,
- the bolts (3),
- the bolt (2),
- the front side door check strap seal (1).

#### **II - FINAL OPERATION**

Refit:

- the front speaker (see **Front speakers: Removal - Refitting**) (86A, Radio),
- the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening element trim).




Tightening torques $\bigtriangledown$	
front side door lock bolts	8 N.m

#### I - REMOVAL PREPARATION OPERATION


- Disconnect the battery (see Battery: Removal Refitting) (80A, Battery).
- Remove:
  - the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the door sealing film (see **Door sealing film: Removal - Refitting**) (65A, Opening element sealing),
  - the front side door lock barrel (see 51A, Side opening element mechanisms, Front side door lock barrel: Removal - Refitting, page 51A-4),
  - the front side exterior door handle (see **51A**, **Side opening element mechanisms**, **Door exterior handle: Removal Refitting**, page **51A-6**).
- Protect the side impact sensor to prevent any accidental damage (cardboard and adhesive tape).

# II - OPERATION FOR REMOVAL OF PART CONCERNED

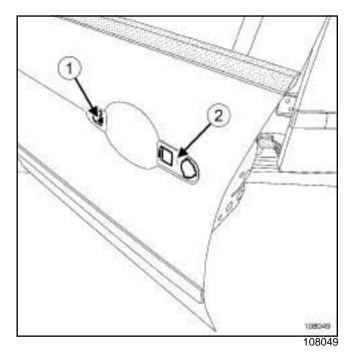

- Remove:
  - the bolt  $(\mathbf{1})$  ,
  - the seal  $\left( 2\right)$  .

Unclip the front side door exterior handle module.

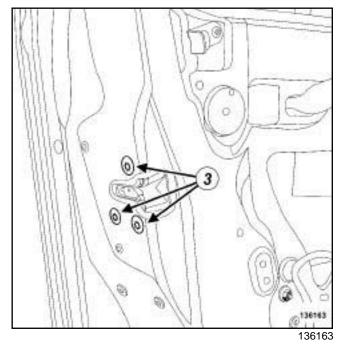

□ Remove the bolts (3).




- Gently lift the front side door lock to remove it from the retaining hook.
- Remove the front side door « lock exterior door handle module » assembly.
- Disconnect the connectors.
- □ Unclip the cable from the front side door exterior handle module lock.

### REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

- □ Clip the lock cable onto the front side door exterior handle module.
- □ Connect the connectors.
- Refit the front side door « lock exterior door handle module » assembly.
- Position the lock on the front side door box section retaining hook.
- Refit the front window guide bolts.

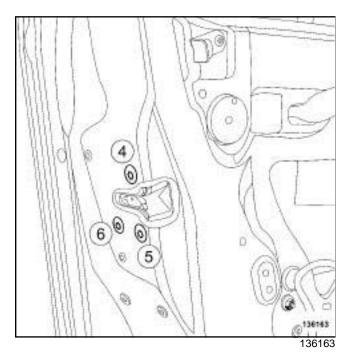

- Refit the front side door lock bolts (3) in the order (4)
   , (5) and (6).
- □ Torque tighten the front side door lock bolts (8 N.m).
- □ Clip on the front side door exterior handle module.
- Refit:

- the seal,

- the bolt.


#### **II - FINAL OPERATION**

- Refit:
  - the front side exterior door handle (see 51A, Side opening element mechanisms, Door exterior handle: Removal Refitting, page 51A-6),
  - the front side door lock barrel (see 51A, Side opening element mechanisms, Front side door lock barrel: Removal - Refitting, page 51A-4).
- Connect the battery (see Battery: Removal Refitting) (80A, Battery).
- □ Carry out a function test.
- □ Remove the side impact sensor protection,
- Refit new door sealing film (see Door sealing film: Removal - Refitting) (65A, Opening element sealing).
- □ Carry out a sealing test (see Technical Note 0653A).
- Refit the front side door trim (see Front side door trim: Removal - Refitting) (72A, Side opening elements trim).




Essential special tooling		
Car. 1904	Tool for removing and refit- ting door lock barrels and dummy lock barrels	


#### I - REMOVAL PREPARATION OPERATION

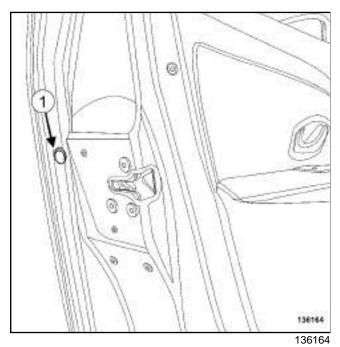

Remove the blanking cover (1) to access the front side door lock barrel release mechanism. II - OPERATION FOR REMOVAL OF PART CONCERNED

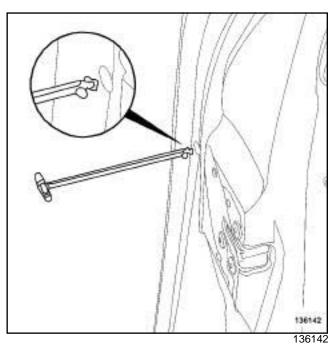


□ Insert the tool (Car. 1904) in the door box section.

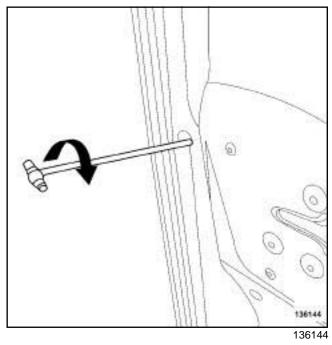


□ Rotate the tool (Car. 1904) a quarter of a turn.



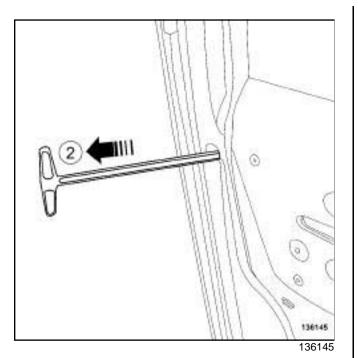

□ Pull the tool (Car. 1904) at (2).

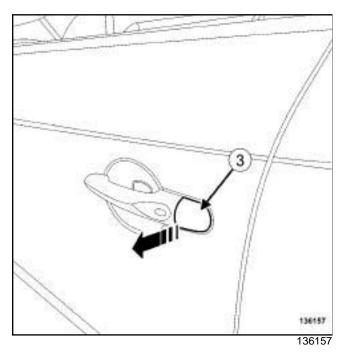

□ Remove the front side door lock barrel (3) .

# REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

- □ Refit the front side door lock barrel.
- □ Lock the safety mechanism by pushing it with a screwdriver.
- □ Carry out a function test.

### **II - FINAL OPERATION**

Refit the blanking cover on the front side door lock barrel release mechanism.



#### I - REMOVAL PREPARATION OPERATION

Remove the front side door lock barrel or the dummy lock (see 51A, Side opening element mechanisms, Front side door lock barrel: Removal -Refitting, page 51A-4).

#### DOOR OPEN SYST. 433 NML


#### Remove:

- the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening elements trim),
- the door sealing film (see **Door sealing film: Removal - Refitting**) (65A, Opening element sealing).

#### II - OPERATION FOR REMOVAL OF PART CONCERNED

DOOR OPEN SYST. 433 NML


Disconnect the door handle connector.

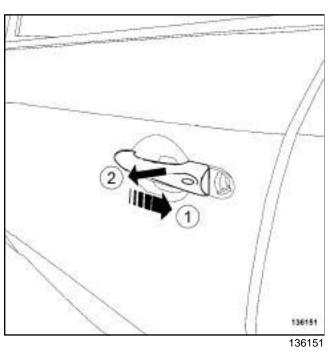

```
□ Remove the exterior door handle at (1) and (2).
```

### REFITTING

#### I - REFITTING PREPARATION OPERATION

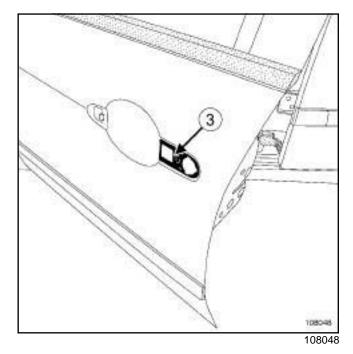

 $\hfill\square$  Check the presence and condition of seal (3) .

#### II - REFITTING OPERATION FOR PART CONCERNED

Refit:

- the door exterior handle,
- the front side door lock barrel or the dummy lock (see 51A, Side opening element mechanisms, Front side door lock barrel: Removal - Refitting, page 51A-4).

DOOR OPEN SYST. 433 NML

- Connect the door handle connector.
- Derform a function test of the "hands-free" function.

#### **III - FINAL OPERATION**

DOOR OPEN SYST. 433 NML

Refit:

new door sealing film (see Door sealing film: Removal - Refitting) (65A, Opening element sealing),



- -Carry out a sealing test (see Technical Note 0653A).
- the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening elements trim).

□ Carry out a function test.

Front side door electric window mechanism: Removal - Refitting




### REMOVAL


#### I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see Battery: Removal Refitting) (80A, Battery).
- □ Remove:
  - the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the door sealing film (see **Door sealing film: Removal - Refitting**) (65A, Opening element sealing),
  - the front side door sliding window (see 54A, Windows, Sliding window in front side door: Removal Refitting, page 54A-3),
  - the electric window motor (see **Window winder motor: Removal Refitting**) (87D, Electric windows Sunroof).
- Protect the side impact sensor to prevent any accidental damage (card and adhesive).

#### II - REMOVAL OPERATION FOR PART CONCERNED

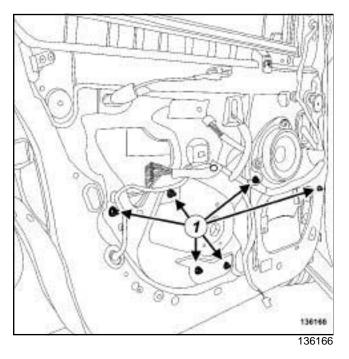

Remove the nuts (1) from the front side door electric window mechanism.

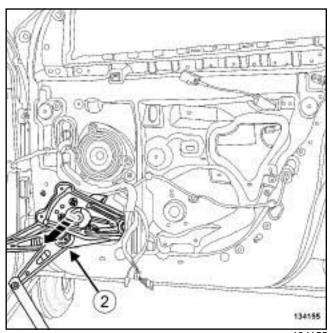

134155

Remove the front side door electric window mechanism (2).

# REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

#### Refit:

- the front side door electric window mechanism,
- the nuts on the front side door electric window mechanism.

### Front side door electric window mechanism: Removal - Refitting



#### **II - FINAL OPERATION**

- Refit the electric window motor (see Window winder motor: Removal - Refitting) (87D, Electric windows - Sunroof).
- Connect the battery (see Battery : Removal Refitting) (80A, Battery).
- □ Carry out a function test.
- □ Remove the side impact sensor protection.
- Refit:
  - the front side door sliding window (see 54A, Windows, Sliding window in front side door: Removal - Refitting, page 54A-3),
  - the door sealing film (see **Door sealing film: Removal - Refitting**) (65A, Opening element sealing).
- □ Carry out a sealing test (see Technical Note 0653A).
- Refit the front side door trim (see Front side door trim: Removal - Refitting) (72A, Side opening elements trim).

# SIDE OPENING ELEMENT MECHANISMS Rear side door lock: Removal - Refitting



B95 or J95 or K95

Tightening torques 🖓

rear side door lock bolts


8 N.m

### REMOVAL


#### I - REMOVAL PREPARATION OPERATION

- Remove:
  - the rear side door trim (see **Rear side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the door sealing film (see **Door sealing film: Removal - Refitting**) (65A, Opening element sealing),
  - the dummy lock (see 51A, Side opening element mechanisms, Front side door lock barrel: Removal - Refitting, page 51A-4) ,
  - the rear side exterior door handle (see 51A, Side opening element mechanisms, Door exterior handle: Removal - Refitting, page 51A-6).

# II - OPERATION FOR REMOVAL OF PART CONCERNED

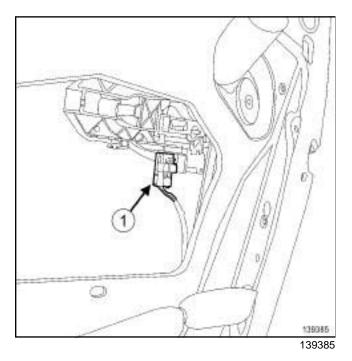


Disconnect the lock module connector (1).

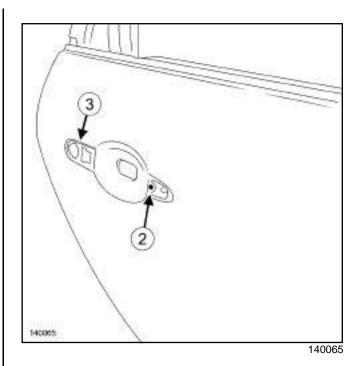

- Remove:
  - the bolt  $({\bf 2})$  ,
  - the seal  $({\bf 3})$  .
- □ Unclip the rear side door exterior handle module.



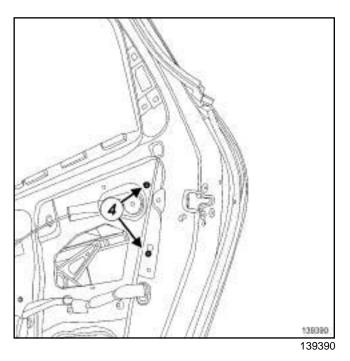


#### Remove:

- the bolts (4) from the slide mounting,



#### B95 or J95 or K95

- the slide mounting.
- $\hfill\square$  Disconnect the connector (5) .
- Unclip the wiring at (6).

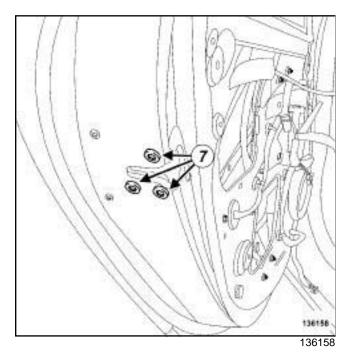


- □ Remove the bolts (7).
- Gently lift the rear side door lock to remove it from the retaining hook.
- Remove the « lock exterior rear side door handle module » assembly.
- Unclip the cable from the exterior rear side door handle module lock.

# REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

- □ Clip the lock cable onto the exterior rear side door handle module.
- Refit the « lock exterior rear side door handle module » assembly.
- Position the lock on the rear side door box section retaining hook.

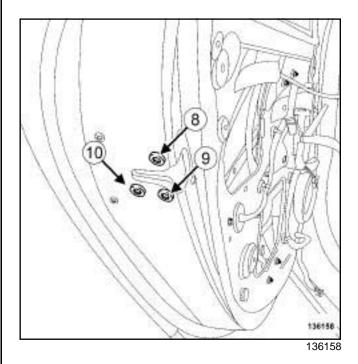

- Refit the rear side door lock bolts in the order (8), (9) and (10).
- □ Torque tighten the **rear side door lock bolts (8 N.m)**.
- Connect the connector (5).
- □ Attach the wiring.

### J95

- Refit:
  - the slide mounting,
  - the bolts (4) on the slide mounting.



B95 or J95 or K95

- □ Clip on the rear side door exterior handle module.
- Refit:
  - the seals (3),
  - the bolt (2).
- □ Connect the lock module connector (1).

#### **II - FINAL OPERATION**

- Refit:
  - the rear side exterior door handle (see 51A, Side opening element mechanisms, Door exterior handle: Removal - Refitting, page 51A-6),
  - the dummy lock (see 51A, Side opening element mechanisms, Front side door lock barrel: Removal - Refitting, page 51A-4).
- □ Carry out a function test.
- Refit the door sealing film (see Door sealing film: Removal - Refitting) (65A, Opening element sealing).
- □ Carry out a sealing test (see Technical Note 0653A).
- Refit the rear side door trim (see Rear side door trim: Removal - Refitting) (72A, Side opening element trim).

### Rear side door electric window mechanism: Removal - Refitting

#### B95 or J95 or K95, and REAR ELECTRIC WINDOW+ONE-TOUCH+ANTI-PINCH


#### REMOVAL

- I REMOVAL PREPARATION OPERATION
- Remove:
  - the rear side door trim (see **Rear side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the door sealing films (see **Door sealing film: Removal - Refitting**) (65A, Opening elements sealing).


#### B95

- Remove the rear speaker (see Rear speakers: Removal Refitting) (86A, Radio).
- □ Open the rear side door sliding window halfway.

J95

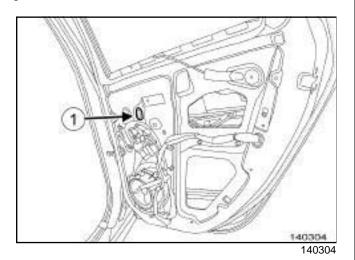


□ Remove the blanking cover (1).

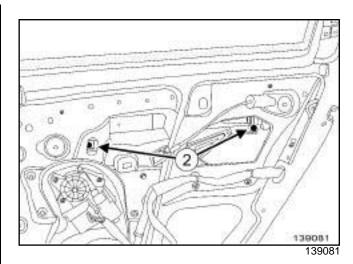

□ Remove the bolts (2).

B95

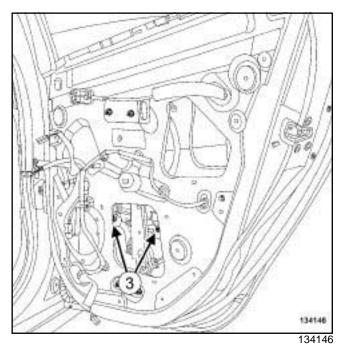


- □ Remove the bolts (3).
- Keep the rear side door sliding window in the upper position using masking tape.
- Remove the rear side door electric window motor (see Window winder motor: Removal - Refitting) (87D, Electric windows - Sunroof).
- □ Unclip the rear side door electric window mechanism cable from inside the door box section.

### Rear side door electric window mechanism: Removal - Refitting


#### B95 or J95 or K95, and REAR ELECTRIC WINDOW+ONE-TOUCH+ANTI-PINCH

# II - OPERATION FOR REMOVAL OF PART CONCERNED

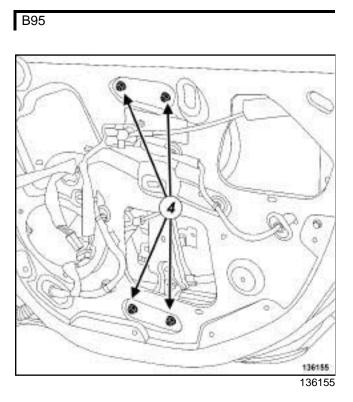




- the bolts  $(\mathbf{4})$  ,
- the rear side door electric window mechanism.

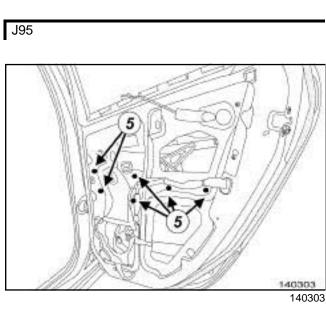

Remove the bolts (5).

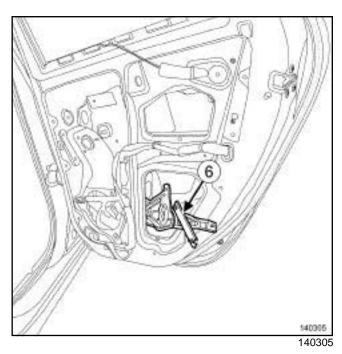

□ Remove the electric window mechanism (6) from inside the rear side door box section.

### REFITTING

#### I - REFITTING PREPARATION OPERATION

□ parts always to be replaced: rear side opening element sliding window bolt (50,04,08,07).

# II - REFITTING OPERATION FOR PART CONCERNED

#### Note:

When refitting a new electric window mechanism, a plastic sprocket pre-positions the mechanism for fitting. The sprocket must be removed before refitting the window motor.

□ Refit the rear side door electric window mechanism.

#### **III - FINAL OPERATION**

J95

□ Refit the blanking cover (1).



### Rear side door electric window mechanism: Removal - Refitting



#### B95 or J95 or K95, and REAR ELECTRIC WINDOW+ONE-TOUCH+ANTI-PINCH

- □ Position the rear side door sliding window.
- Refit:
  - new bolts (2) or (3),
  - the electric window motor (see **Window winder motor: Removal - Refitting**) (87D, Electric windows - Sunroof).
- □ Clip on the rear side door electric window mechanism wiring.

### B95

- Refit the rear speaker (see Rear speakers: Removal Refitting) (86A, Radio).
- □ Carry out a function test.
- Refit the door sealing films (see Door sealing film: Removal - Refitting) (65A, Opening elements sealing).
- □ Carry out a sealing test (see Technical Note 0653A).
- Refit the rear side door trim (see Front side door trim: Removal - Refitting) (72A, Side opening element trim).

Rear side door manual window control mechanism: Removal - Refitting



#### B95 or J95 or K95, and MANUAL REAR WINDOW WINDER


#### REMOVAL

- I REMOVAL PREPARATION OPERATION
- Remove:
  - the rear side door trim (see **Rear side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the door sealing films (see **Door sealing film: Removal - Refitting**) (65A, Opening elements sealing).

### B95


- Remove the rear speaker (see Rear speakers: Removal - Refitting) (86A, Radio).
- □ Open the rear side door sliding window halfway.

B95

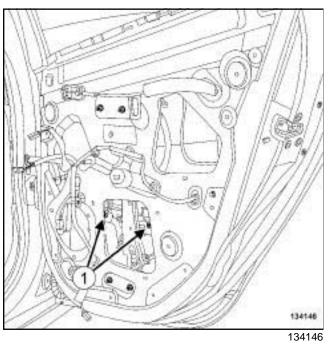


 $\hfill\square$  Remove the bolts (1) .

J95

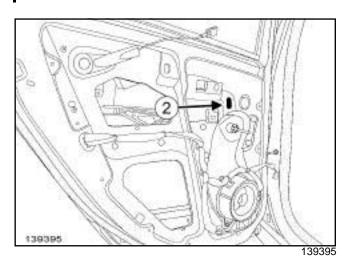


□ Remove the blanking cover (2).

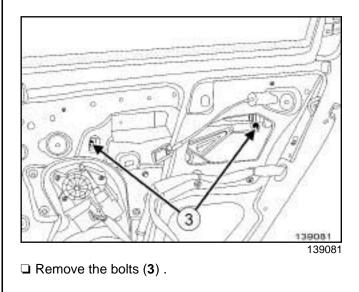

Keep the rear side sliding door window in the upper position using masking tape. Rear side door manual window control mechanism: Removal - Refitting



#### B95 or J95 or K95, and MANUAL REAR WINDOW WINDER

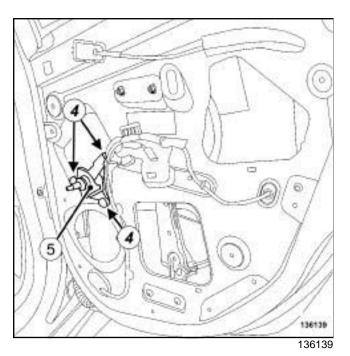


Remove:

- the bolts  $\left( 4\right)$  ,
- the rear side door manual window mechanism module  $\left( 5\right)$  .
- □ Unclip the cable from the rear side door manual window mechanism from inside the door box section.


#### II - OPERATION FOR REMOVAL OF PART CONCERNED


#### B95

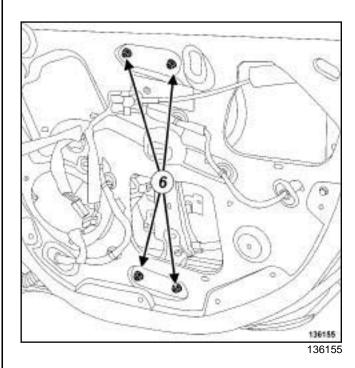

- Remove:
  - the bolts  $({\bf 6})$  ,
  - the rear side door manual window mechanism.

J95

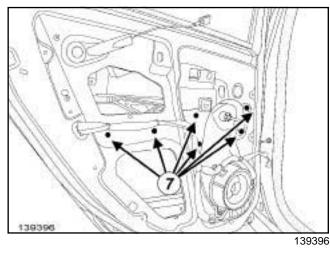


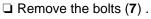

#### Rear side door manual window control mechanism: Removal - Refitting



#### B95 or J95 or K95, and MANUAL REAR WINDOW WINDER

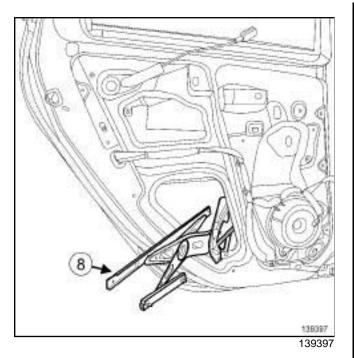

□ Remove the rear side door manual window mechanism (8) from inside the door box section.

#### REFITTING

#### I - REFITTING PREPARATION OPERATION

#### Note:

When refitting a new window mechanism, a plastic sprocket pre-positions the mechanism for fitting. The sprocket must be removed before refitting the window motor.

□ parts always to be replaced: rear side opening element sliding window bolt (50,04,08,07).

# II - REFITTING OPERATION FOR PART CONCERNED

#### B95

Refit:

- the rear side door manual window mechanism,

- the bolts (6).

# J95

- Refit:
  - the rear side door manual window mechanism,
  - the bolts (7).

#### **III - FINAL OPERATION**

- □ Clip the rear side door manual window mechanism cable inside the door box section.
- Refit:
  - the rear side door manual window mechanism module (5),
  - the bolts (4).
- □ Position the rear side door sliding window.

#### B95

□ Refit the new bolts (1).

# J95

#### Refit:

- the new bolts (3).
- the blanking cover (2).

□ Carry out a function test.

- Refit the door sealing film (see Door sealing film: Removal - Refitting) (65A, Opening element sealing).
- □ Carry out a sealing test (see Technical Note 0653A).

#### B95

- Refit the rear speaker (see Rear speakers: Removal Refitting) (86A, Radio).
- Refit the rear side door trim (see Rear side door trim: Removal - Refitting) (72A, Side opening element trim).

Front side door glass run channel mounting: Removal - Refitting


B95 or D95 or J95 or K95

Tigh	tening torques $\heartsuit$	
 ide doo support b		6.5 N.m

#### REMOVAL

#### I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see Battery: Removal Refitting) (80A, Battery).
- Remove:
  - the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the lower section of the door sealing film (see **Door** sealing film: Removal Refitting) (65A, Opening element sealing).

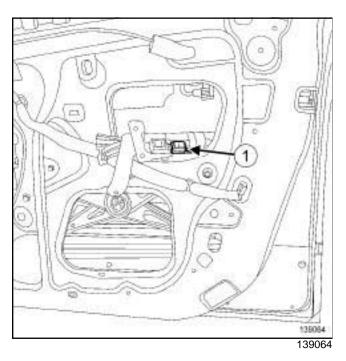


Disconnect the connector (1) from the side impact sensor.


# II - OPERATION FOR REMOVAL OF PART CONCERNED

Note:

Handle with care, as the side impact sensor is fitted on the front side door run channel support.

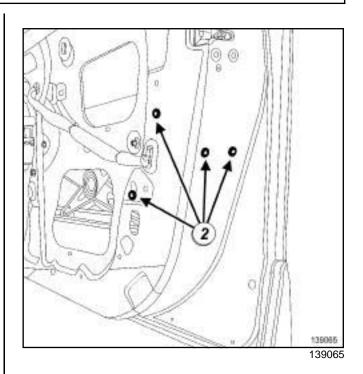

□ Remove the bolts (2) from the front side door run channel support.

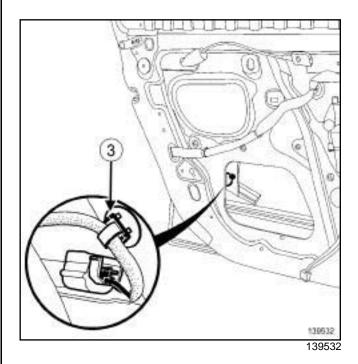

- □ Unclip the side impact sensor wiring (3) from the front side door run channel support.
- Remove:
  - the support of the front side door run channel,
  - the side impact sensor (see **Side impact sensor: Removal Refitting**) (88C, Airbags and pretensioners).

Front side door glass run channel mounting: Removal - Refitting



#### B95 or D95 or J95 or K95

#### REFITTING

- I REFITTING PREPARATION OPERATION
- □ parts always to be replaced: Front side opening element run channel mounting bolt (50,02,12,09).

#### II - REFITTING OPERATION FOR PART CONCERNED

- Refit:
  - the side impact sensor (see **Side impact sensor: Removal Refitting**) (88C, Airbags and pretensioners),
  - the support of the front side door run channel.
- Refit the bolts (2) .
- □ Torque tighten the front side door run channel support bolts (6.5 N.m).
- □ Clip the side impact sensor wiring in place.

#### **III - FINAL OPERATION**

- □ Connect the side impact sensor connector (1).
- Refit:
  - the door sealing film (see **Door sealing film: Removal - Refitting**) (65A, Opening element sealing),
  - the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening element trim).
- Connect the battery (see Battery: Removal Refitting) (80A, Battery).




### B95 or J95 or K95


### REMOVAL

- I REMOVAL PREPARATION OPERATION
- Remove:
  - the rear side door trim (see **Rear side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the rear speaker (see **Rear speakers: Removal - Refitting**) (86A, Radio).


# II - OPERATION FOR REMOVAL OF PART CONCERNED

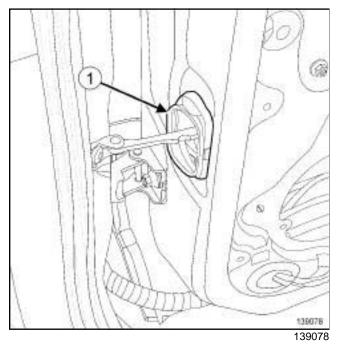

□ Remove the rear side door check strap seal (1).

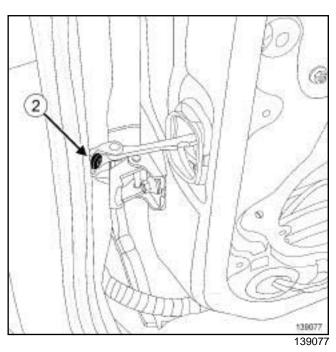

□ Remove the bolt (2) from the rear side door check strap.

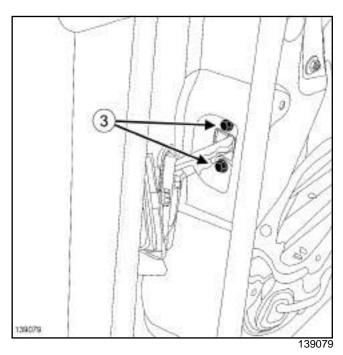

#### Remove:

- the bolts  $({\bf 3})$  ,
- the rear side door check strap from inside the rear side door box section.



#### B95 or J95 or K95

### REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
  - the rear side door check strap inside the rear side door box section,
  - the bolts (3),
  - the bolt (2),
  - the rear side door check strap seal (1).

#### **II - FINAL OPERATION**


Refit:

- the rear speaker (see **Rear speakers: Removal - Refitting**) (86A, Radio),
- the rear side door trim (see **Rear side door trim: Removal Refitting**) (72A, Side opening element trim).




Tightening torques 🖓	
bonnet catch bolts	8 N.m

#### OPERATION FOR REMOVAL OF PART CONCERNED

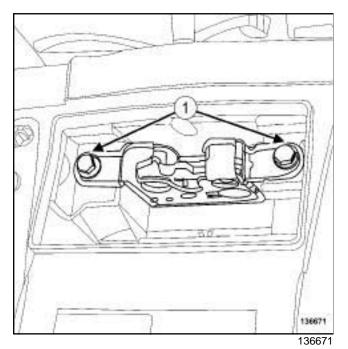

□ Remove the bonnet lock bolts (1).

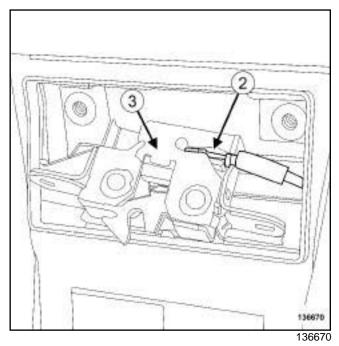

- □ Unclip the bonnet release cable (2).
- $\hfill\square$  Remove the bonnet catch (3) .

### REFITTING

#### **REFITTING OPERATION FOR PART CONCERNED**

- □ Clip on the bonnet release cable.
- Refit:
  - the bonnet catch,
  - the bonnet catch bolts.
- □ Carry out a function test.
- Adjust the clearances and flush fitting (see Vehicle clearances: Adjustment values) (01C, Vehicle bodywork specifications).
- □ Torque tighten the **bonnet catch bolts (8 N.m)**.



#### I - REMOVAL PREPARATION OPERATION

- Position the vehicle on a two-post lift (see Vehicle: Towing and lifting) (02A, Lifting equipment).
- Remove:
  - the front wheels (see **Wheel: Removal Refitting**) (35A, Wheels and tyres),
  - the front section of the front wheel arch liners (see 55A, Exterior protection, Front wheel arch liner: Removal - Refitting, page 55A-24),
  - the front bumper (see 55A, Exterior protection, Front bumper: Removal - Refitting, page 55A-1)
  - the battery (see **Battery: Removal Refitting**) (80A, Battery),
  - the battery tray (see **Battery tray: Removal Re-fitting**) (80A, Battery),
  - the air filter unit (see **Air filter unit: Removal Re-fitting**) (12A, Fuel mixture),
  - the bonnet catch (see 52A, Non-side opening element mechanisms, Bonnet latch: Removal - Refitting, page 52A-1).

#### D95


Remove the door sill lining (see Door sill lining: Removal - Refitting) (71A, Body internal trim).

#### B95 or J95


Remove:

- the B-pillar lower trim (see **B-pillar lower trim: Removal - Refitting**) (71A, Body internal trim),
- the front sill panel trim (see **Front door sill lining: Removal Refitting**) (71A, Body internal trim).

B95 or D95

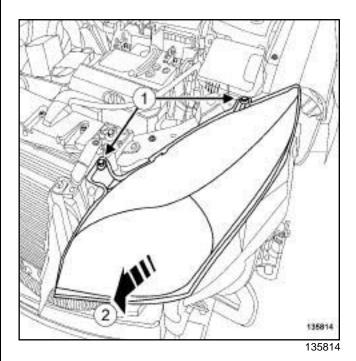


- □ Remove the bolts (1) from the headlight.
- $\hfill\square$  Slide the headlight at (2) .

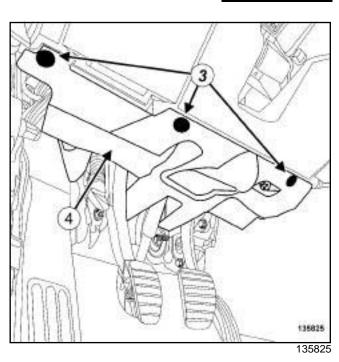


- □ Remove:
  - the clips  $({\bf 3})$  ,
  - the pedal soundproofing (4) .



# II - OPERATION FOR REMOVAL OF PART CONCERNED

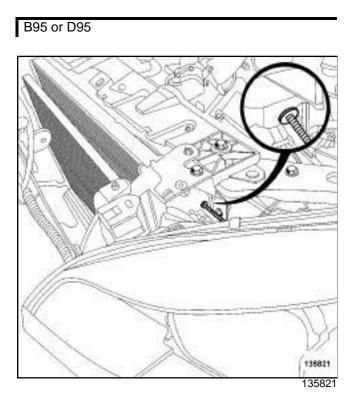


□ Unclip the bonnet release cable.

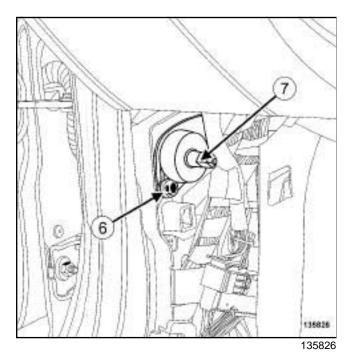


- □ Remove the bolt (6).
- □ Unclip the bonnet release control (7).
- □ Remove the bonnet release cable.



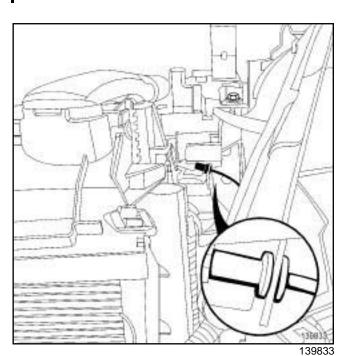

□ Unclip the bonnet release cable.

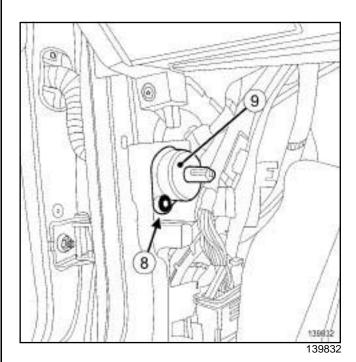

- Remove the bolt (8).
- $\hfill\square$  Unclip the bonnet release control (9) .
- □ Note the route of the bonnet release cable.
- □ Remove the bonnet release cable.



### REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

- Refit the bonnet release cable through the inside of the vehicle.
- □ Clip on the bonnet release control.
- □ Refit the front bonnet release control bolt.
- □ Clip on the bonnet release cable.

#### **II - FINAL OPERATION**

- Refit:
  - the pedal soundproofing (4),
  - the clips (3).

#### B95 or D95

- Position the headlight.
- □ Refit the headlight bolts (1).

#### B95 or J95

- Refit:
  - the front door sill lining (see **Front door sill lining: Removal Refitting**) (71A, Body internal trim),
  - the B-pillar lower trim (see **B-pillar lower trim: Removal - Refitting**) (71A, Body internal trim).

#### D95

Refit the door sill lining (see Door sill lining: Removal - Refitting) (71A, Body internal trim).


- Refit:
  - the bonnet catch (see 52A, Non-side opening element mechanisms, Bonnet latch: Removal Refitting, page 52A-1),
  - the air filter unit (see **Air filter unit: Removal Re-fitting**) (12A, Fuel mixture),
  - the battery tray (see **Battery tray: Removal Refitting**) (80A, Battery),

- the battery (see **Battery: Removal Refitting**) (80A, Battery),
- the front bumper (see 55A, Exterior protection, Front bumper: Removal - Refitting, page 55A-1)
- the front section of the front wheel arch liners (see 55A, Exterior protection, Front wheel arch liner: Removal Refitting, page 55A-24),
- the front wheels (see **Wheel: Removal Refitting**) (35A, Wheels and tyres).



	1
Tightening torques $\bigtriangledown$	
tailgate lock bolts	8 N.m

#### I - REMOVAL PREPARATION OPERATION

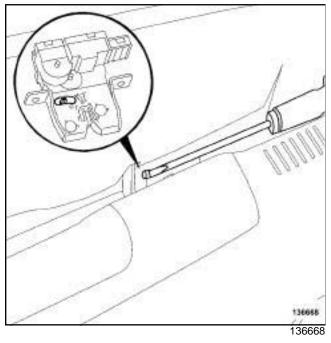


#### Note:

If there is an electrical fault, the tailgate can be opened manually using a flat-blade screwdriver.


This operation is performed from inside the vehicle.

Remove the tailgate trim (see Tailgate lining: Removal - Refitting) (73A, Non-side opening elements trim).

#### II - OPERATION FOR REMOVAL OF PART CONCERNED

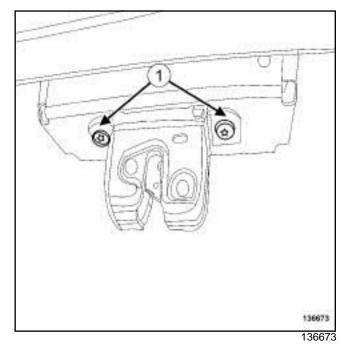

 $\hfill\square$  Remove the tailgate lock bolts (1) .

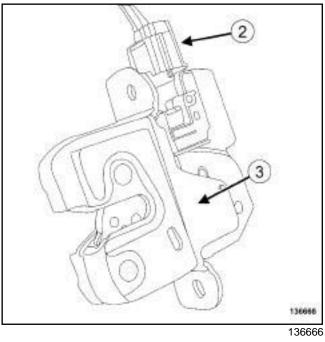

- $\hfill\square$  Disconnect the connector (2) .
- $\hfill\square$  Remove the tailgate lock (3) .



### REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

- □ Connect the tailgate lock connector.
- Refit:
  - the tailgate lock,
  - the tailgate lock bolts.
- □ Torque tighten the **tailgate lock bolts (8 N.m)**.
- □ Carry out a function test.

#### **II - FINAL OPERATION**

Refit the tailgate trim (see Tailgate lining: Removal
 Refitting) (73A, Non-side opening elements trim).




#### I - REMOVAL PREPARATION OPERATION


#### WARNING

The strut is fitted in such a way as to prevent leaks. Note the strut's direction of fitting (position of the body and cylinder rod) before removing it, in order to refit the strut identically during the refitting operation.

# II - OPERATION FOR REMOVAL OF PART CONCERNED

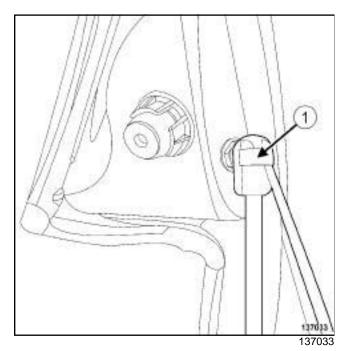

□ Unclip the clips (1) without removing them.

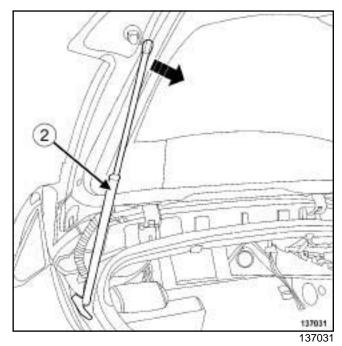

Remove the tailgate strut (2) while holding the tailgate.

# REFITTING

#### I - REFITTING PREPARATION OPERATION

Position the clips on the tailgate strut

# II - REFITTING OPERATION FOR PART CONCERNED

□ Refit the tailgate strut.



#### PANORAMIC SUNROOF

#### Essential special tooling

Car. 1033

Windscreen mastic cutting wire inserting tool.

#### IMPORTANT


To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- (see Airbag and Pretensioners: Precautions for repair) (88C, Airbags and pretensioners),
- (see **Vehicle: Precautions for repair**) (01D, Mechanical introduction).

#### REMOVAL

#### I - REMOVAL PREPARATION OPERATION


- □ Open the sunroof mobile panel halfway.
- Disconnect the battery (see Battery: Removal Refitting) (80A, Battery).
- Remove the headlining (see Headlining: Removal -Refitting) (71A, Body internal trim).

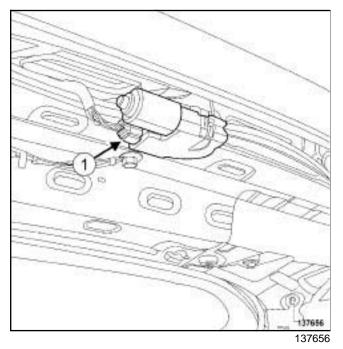


- $\hfill\square$  Disconnect the sunroof motor supply connector (1) .
- □ Unclip the sunroof motor wiring from the clips.
- Protect:
  - the vehicle interior,

- the edge of the sunroof operating mechanism using masking tape.

#### II - OPERATION FOR REMOVAL OF PART CONCERNED

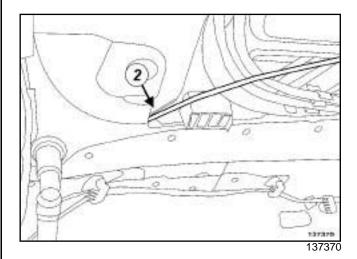

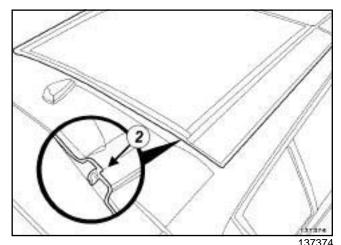


Insert:

- the tool (Car. 1033) at (2) in the rear right- or lefthand section of the sunroof operating mechanism,
- the cutting wire in the tool **(Car. 1033)**, or in a **2.5 mm** diameter tube, outside the vehicle.

# NON-SIDE OPENING ELEMENT MECHANISMS Sunroof operating mechanism: Removal - Refitting




#### PANORAMIC SUNROOF

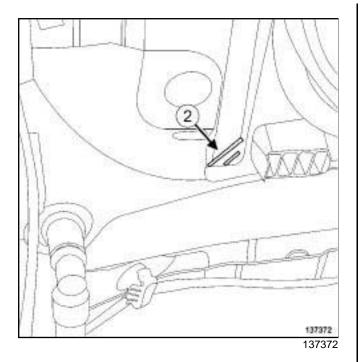


- □ Collect the cutting wire in the reserve (2), and leave it inside the vehicle until needed.
- Route the cutting wire between the sunroof operating mechanism and the roof using the tool (Car. 1033).

#### B95

Lift the sunroof operating mechanism side seal using the tool (Car. 1033).

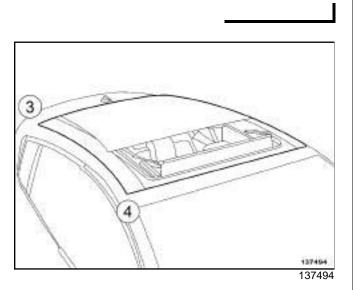


□ Slide the cutting wire from (3) to (4) under the sunroof operating mechanism side seal (if necessary, wet the seal with wiper fluid to facilitate this operation).

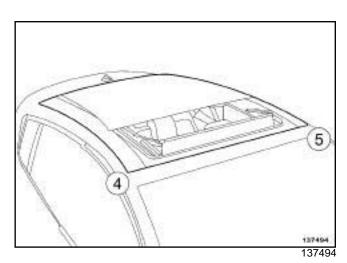

□ Follow the same procedure to slide the wire under the front aerodynamic seal from (4) to (5).



#### PANORAMIC SUNROOF

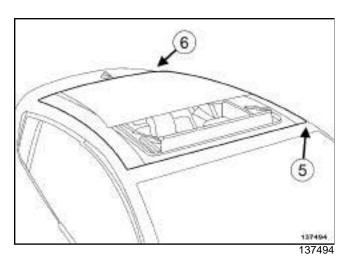

- □ Repeat the operation under the sunroof operating mechanism side seal from (5) to (6).
- □ Cut the cutting wire (leave a sufficient length of wire to use) and remove the tool (Car. 1033).

#### Note:

When routing the cutting wire into the vehicle interior, be careful not to cross the two wires, as this would make cutting the seal impossible.

- □ Route the cutting wire inside the vehicle through the reserve (2) using the tool (Car. 1033).
- □ Fit the cutting handles on the two sections of the cutting wire inside the vehicle.
- □ Cut the cement bead from (3) to (4) and leave the other handle in place until needed.

#### Note:

Reduce the length of the cutting wire as you cut.

- Pass the cutting wire to the roof centre cross member.
- □ Extend the cement bead cut at (4) to (5).
- □ Leave the cutting handle in place at the opposite cross member.
- □ Cut the cement bead with the other handle from (3) to (6) and from (6) to (5) up to the roof centre cross member.
- □ Cut the cement bead on the roof centre cross member, by pulling on the two handles.
- Remove the sunroof operating mechanism (this operation requires two people) using the specific supports:
  - Support: PARV 202,

- set of arch supports: APARV 200 ESP.

#### REFITTING

#### I - REFITTING PREPARATION OPERATION

- □ For preparation and bonding (see **Technical Note 560A**).
- □ parts always to be replaced: Roof opening element adjusting shim (50,04,22,03).
- □ Check the air seal and replace it if necessary.

# II - REFITTING OPERATION FOR PART CONCERNED

- Position:
  - the indexing guides,
  - the new positioning shims on the sunroof operating mechanism.
- Place the sunroof mobile panel in the closed position.
- Bond the sunroof operating mechanism (this operation requires two people plus a third inside the vehicle).
- □ Check that the positioning shims touch the roof.

#### **III - FINAL OPERATION**

- □ Fit the sunroof motor wiring on the clips.
- Connect the sunroof motor supply connector.
- Remove the indexing guides 30 minutes after bonding.
- Refit the headlining (see Headlining: Removal -Refitting) (71A, Body internal trim).
- Connect the battery (see Battery: Removal Refitting) (80A, Battery).
- Carry out a function test.
- Apply sunroof initialisation procedure using the diagnostic tool:
  - connect the diagnostic tool,
  - select "Roof opening element computer",
  - go to repair mode,
  - display the "Before/After repair procedure",
  - select "Roof opening element computer" in the "List of components controlled by this computer" section,



PANORAMIC SUNROOF

- carry out the operations described in the "After repair procedure" section.

## NON-SIDE OPENING ELEMENT MECHANISMS Sunroof moving panel: Removal - Refitting



### PANORAMIC SUNROOF


Tightening torques $\bigtriangledown$	
rear bolts on the sunroof mobile panel	6 N.m
front bolts on the sun- roof mobile panel	6 N.m

### REMOVAL


### I - REMOVAL PREPARATION OPERATION


□ Open the sunroof mobile panel.

# II - OPERATION FOR REMOVAL OF PART CONCERNED

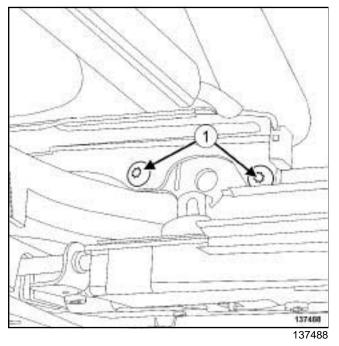

Remove the front bolts (1) from the sunroof mobile panel.

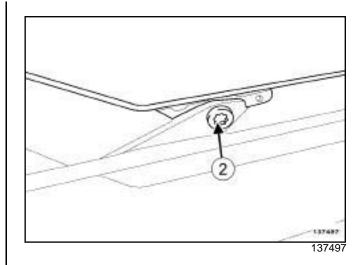

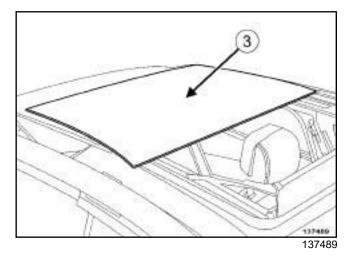

□ Remove:

- the rear bolts (2) from the sunroof mobile panel,
- the sunroof mobile panel (3) (this operation requires two people).

### REFITTING

### I - REFITTING PREPARATION OPERATION


### Note:


When «removing and refitting» the sunroof mobile panel, apply **HIGH STRENGTH THREAD LOCK** to the mobile panel bolts (see **Vehide: Parts and ingredients for the repairwork**) (04B, Consumables - Products).


When replacing the sunroof mobile panel, replace the bolts with those supplied with the sunroof mobile panel.



### PANORAMIC SUNROOF

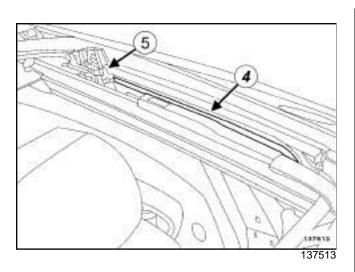

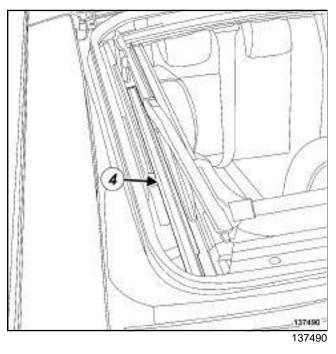

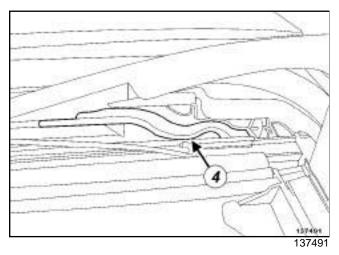

Using a LINT-FREE CLOTH soaked in HEPTANE (see Vehicle: Parts and ingredients for the repairwork) (04B, Consumables - Products), clean:

- the guide runner (4),
- the drive mechanism (5).
- Wipe the areas with a clean and dry LINT-FREE CLOTH (see Vehicle: Parts and ingredients for the repairwork) (04B, Consumables - Products).
- Using a fine brush, lightly grease the following areas only with OPENING ELEMENT GREASE (see Vehicle: Parts and ingredients for the repairwork) (04B, Consumables - Products).

# II - REFITTING OPERATION FOR PART CONCERNED

Refit:

- the sunroof mobile panel (this operation requires two people),
- the rear bolts (2) from the sunroof mobile panel,
- the front bolts (1) from the sunroof mobile panel.
- Adjust the sunroof mobile panel, the front section of the sunroof mobile panel must be lower than 2 mm in relation to the roof line.
- □ Torque tighten:
  - the **rear bolts on the sunroof mobile panel (6 N.m)**,
  - the front bolts on the sunroof mobile panel (6 N.m).



### PANORAMIC SUNROOF

### **III - FINAL OPERATION**

- Initialisation and programming procedure using digital commands (if the diagnostic tool is absent):
  - read the procedure in full before starting,
  - set the button to the "sunroof closed" position (= button turned anti-clockwise and fully to the left),
  - press and hold the centre part of the button: the roof travels to the closing end stop, confirmed by a clicking sound,
  - after hearing the clicking sound, keep the button held for approximately 1 second,
  - release the button,
  - immediately press and hold the button again until the roof opens approximately 2/3 of the way and then closes completely. (It is normal for the sunroof not to open immediately (delay of approximately 5 seconds),
  - -release the button: the sunroof is operational again.

### Note:

If the procedure fails (excessive delay between button presses or procedure interrupted), restart from the beginning of the procedure.

## NON-SIDE OPENING ELEMENT MECHANISMS Sunroof deflector: Removal - Refitting



### PANORAMIC SUNROOF

Tightening torques $\heartsuit$	
sunroof deflector bolts	2 N.m


### REMOVAL


### I - REMOVAL PREPARATION OPERATION

□ Open the sunroof mobile panel.

# II - OPERATION FOR REMOVAL OF PART CONCERNED


### B95

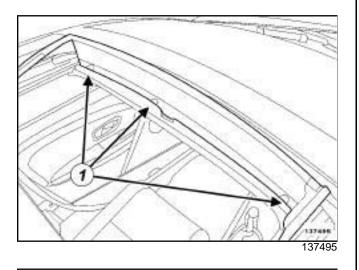

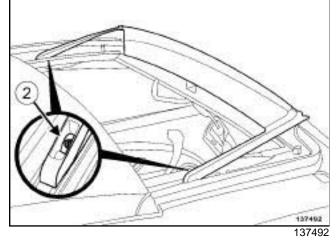

### Remove:

- the bolts (1) and (2) while holding the sunroof deflector,
- the sunroof deflector.

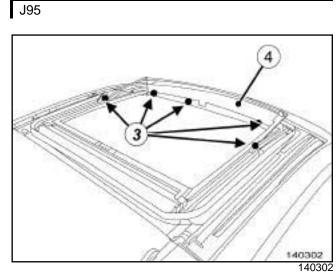

### □ Remove:

- the bolts (3) while holding the sunroof deflector,
- the sunroof deflector (4) .

### REFITTING

### I - REFITTING PREPARATION OPERATION

### Note:

When « removing - refitting » the sunroof deflector, apply some **HIGH RESISTANCE THREA-DLOCK** (see **Vehicle: Parts and ingredients for the repairwork**) (04B, Consumables - Products) to the sunroof deflector bolts.


When replacing the sunroof deflector, replace the bolts with those supplied with the sunroof deflector.

## NON-SIDE OPENING ELEMENT MECHANISMS Sunroof deflector: Removal - Refitting




### PANORAMIC SUNROOF

# II - REFITTING OPERATION FOR PART CONCERNED

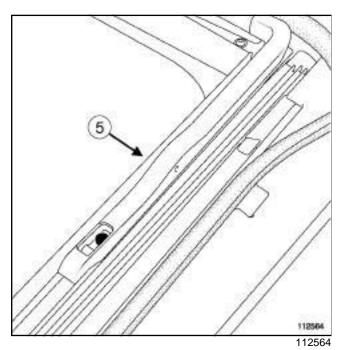

- Refit the sunroof deflector (this operation requires two people).
- Put the sunroof deflector return spring in the proper position.
- □ Hold the sunroof deflector in position at (5).
- □ Refit the bolts (1), (2) and (3).
- □ Torque tighten the **sunroof deflector bolts (2 N.m)**.

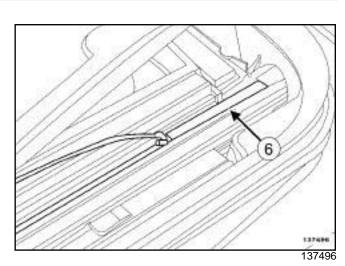

- Clean the deflector return spring area (6) with a LINT-FREE CLOTH soaked in HEPTANE (see Vehicle: Parts and ingredients for the repairwork) (04B, Consumables - Products).
- □ Wipe the deflector return spring area (6) with a clean and dry LINT-FREE CLOTH.
- □ Using a fine brush, grease the area (6) with OPE-NING ELEMENT GREASE (see Vehicle: Parts and ingredients for the repairwork) (04B, Consumables - Products).



### PANORAMIC SUNROOF

### **III - FINAL OPERATION**

- Initialisation and programming procedure using digital commands (if the diagnostic tool is absent):
  - read the procedure in full before starting.
  - set the button to the "sunroof closed" position (= button turned anti-clockwise and fully to the left),
  - press and hold the centre part of the button: the roof travels to the closing end stop, confirmed by a clicking sound,
  - after hearing the clicking sound, keep the button held for approximately 1 second,
  - release the button,
  - immediately press and hold the button again until the roof opens approximately 2/3 of the way and then closes completely. It is normal for the sunroof not to open immediately (delay of approximately 5 seconds),
  - release the button (the sunroof is operational again).

### Note:

If the procedure fails (excessive delay between button presses or procedure interrupted), restart from the beginning of the procedure.

## NON-SIDE OPENING ELEMENT MECHANISMS Sunroof sun visors: Removal - Refitting



PANORAMIC SUNROOF

### IMPORTANT

To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- (see Airbag and Pretensioners: Precautions for repair) (88C, Airbag and pretensioners),
- (see **Precautions for repair**) (01D, Mechanical introduction).

### REMOVAL


### I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see Battery: Removal Refitting) (80A, Battery).
- Remove the headlining (see Headlining: Removal -Refitting) (71A, Body internal trim).


# II - OPERATION FOR REMOVAL OF PART CONCERNED

### B95

1 - Front sunroof sun visor

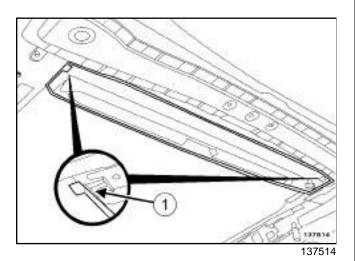


Unclip the clips (1).

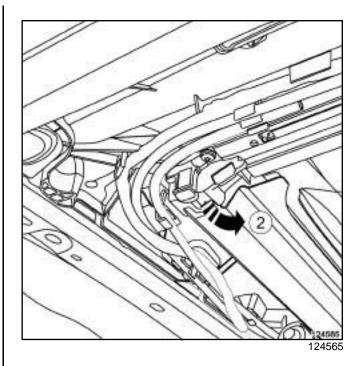

 $\hfill\square$  Remove the front sunroof sun visor at (2) .

### 2 - Rear sunroof sun visor

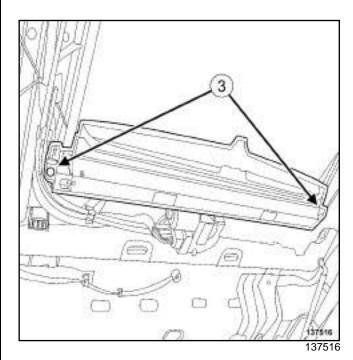

### Remove:


- the bolts  $(\mathbf{3})$  ,
- the rear sunroof sun visor.



### PANORAMIC SUNROOF

J95


### 3 - Front sunroof sun visor

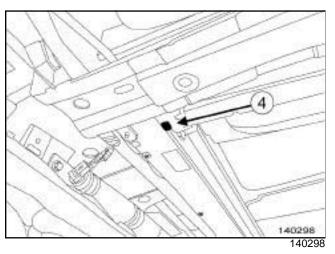

Unclip the clips (4).

□ Remove the front sunroof sun visor.

### 4 - Rear sunroof sun visor

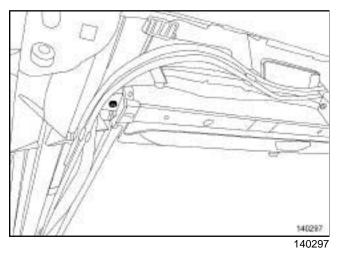

- Remove:
  - the bolts,
  - the rear sunroof sun visor.

### REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

### 1 - Front sunroof sun visor

- □ Refit the front sunroof sun visor.
- □ Attach the clips.

### 2 - Rear sunroof sun visor

- Refit:
  - the rear sunroof sun visor,
  - the bolts.

### **II - FINAL OPERATION**

- □ Carry out a function test.
- Refit the headlining (see Headlining: Removal -Refitting) (71A, Body internal trim).
- Connect the battery (see Battery: Removal Refitting) (80A, Battery).

## NON-SIDE OPENING ELEMENT MECHANISMS Fixed glass roof: Removal - Refitting



D95, and FIXED WINDOW SUNROOF

#### **Essential special tooling**

Car. 1033


Windscreen mastic cutting wire inserting tool.

### REMOVAL


### **REMOVAL PREPARATION OPERATION**

- Disconnect the battery (see Battery: Removal Refitting) (80A, Battery).
- □ Remove:
  - the headlining (see **Headlining: Removal Refitting**) (71A, Body internal trim),
  - the sun visor from the fixed sunroof (see 52A, Nonside opening element mechanisms, Fixed glass sunroof visor: Removal - Refitting, page 52A-23).
- Protect:
  - the vehicle interior,
  - the edge of the roof with masking tape.

### OPERATION FOR REMOVAL OF PART CONCERNED

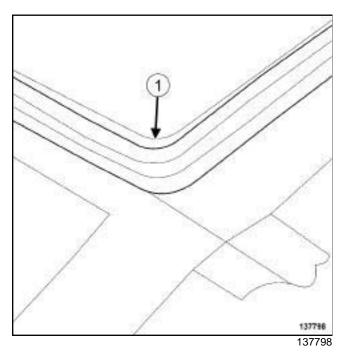

Lift the seal (1) in the rear left-hand or right-hand corner.

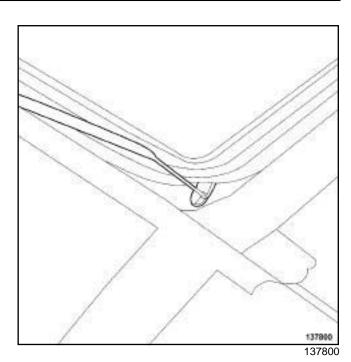



- Pass the tool (Car. 1033) at the rear right- or lefthand section of the fixed sunroof..
- □ Insert the cutting wire in the wire insertion tool, or in a 2.5 mm diameter tube, outside the vehicle.

## NON-SIDE OPENING ELEMENT MECHANISMS Fixed glass roof: Removal - Refitting



### D95, and FIXED WINDOW SUNROOF

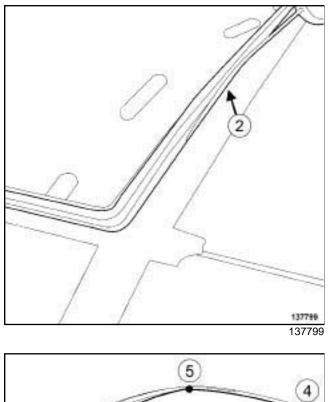


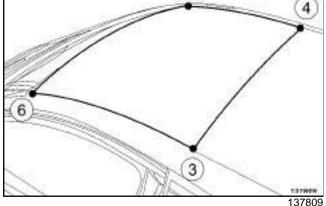

- ❑ Slide the wire insertion tool under the seal (2) from (4) to (5), from (5) to (6), from (6) to (3) and from (3) to (4).
- Prepare for a sufficient length of wire and remove the needle.
- □ Pass the cutting wire from the exterior towards the interior at *(1)* using the tool **(Car. 1033)**.

### Note:

When passing the cutting wire into the vehicle interior, be careful not to cross the two wires, as this would make cutting the seal impossible.

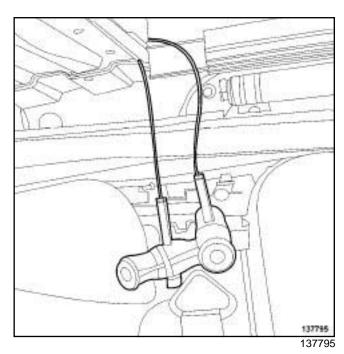

- □ Fit the cutting handles on the two sections of the cutting wire inside the vehicle.
- □ Cut the cement bead from (4) to (5), from (5) to (6), from (6) to (3) and from (3) to (4) (leave the second handle inside the vehicle).

Note:

Reduce the length of the cutting wire as you cut.

- Remove the fixed sunroof using the specific support (this operation requires two people):
  - support: PARV 202,
  - set of arch supports: APARV 200 ESP.

### REFITTING


### I - REFITTING PREPARATION OPERATION

- □ For preparation and bonding (see **Technical Note 560A**).
- Check the condition of the seal around the edge of the fixed sunroof and replace it if necessary.

## NON-SIDE OPENING ELEMENT MECHANISMS Fixed glass roof: Removal - Refitting



### D95, and FIXED WINDOW SUNROOF

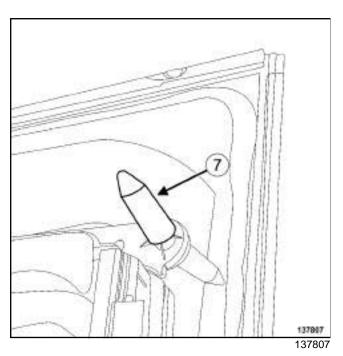

Desition the indexing guides (7).

## II - REFITTING OPERATION FOR PART CONCERNED

- Bond the fixed sunroof (this operation requires two people).
- □ Make sure that the moulded sections are securely fitted in the corners.
- □ Remove the indexing guides **30 minutes** after bonding the fixed sunroof.

### **III - FINAL OPERATION**

- Refit:
  - the sun visor on the fixed sunroof (see 52A, Nonside opening element mechanisms, Fixed glass sunroof visor: Removal - Refitting, page 52A-23),
  - the headlining (see **Headlining: Removal Refitting**) (71A, Body internal trim).
- Connect the battery (see Battery: Removal Refitting) (80A, Battery).



D95, and FIXED WINDOW SUNROOF

### REMOVAL

### I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see Battery: Removal Refitting) (80A, Battery).
- Remove the headlining (see Headlining: Removal -Refitting) (71A, Body internal trim).

# II - OPERATION FOR REMOVAL OF PART CONCERNED



- Unclip the clips (1).
- □ Remove the sun visor from the fixed sunroof.

### REFITTING

## I - REFITTING OPERATION FOR PART CONCERNED

- □ Refit the sun visor on the fixed sunroof.
- □ Attach the clips.

### **II - FINAL OPERATION**

- Carry out a function test.
- Refit the headlining (see Headlining: Removal -Refitting) (71A, Body internal trim).
- Connect the battery (see Battery: Removal Refitting) (80A, Battery).

### Windscreen: Removal - Refitting



B95 or D95 or J95 or K95

Car. 1847

Essential special tooling

Universal protector

### REMOVAL

### I - REMOVAL PREPARATION OPERATION

- □ Remove:
  - the windscreen wiper arms (see Windscreen wiper arm: Removal - Refitting) (85A, Wiping -Washing),
  - the scuttle panel grille (see 56A, Exterior equipment, Scuttle panel grille: Removal - Refitting, page 56A-1),
  - the interior rear-view mirror (see 57A, Interior equipment, Interior rear-view mirror Removal -Refitting, page 57A-43),
  - the windscreen pillar trims (see A-pillar trim: Removal - Refitting) (71A, Body internal trim).

AUTO LIGHTS+WIPER


Remove the rain and light sensor (see Rain and light sensor: Removal - Refitting) (85D, Wiping -Washing).

### J95

 Remove the windscreen pillar trims (see 55A, Exterior protection, A-pillar trim piece: Removal - Refitting, page 55A-29).

- □ Fit the tool (Car. 1847) on the dashboard.
- □ Protect the area around the windscreen with masking tape.

### **II - OPERATION FOR REMOVAL OF PART** CONCERNED

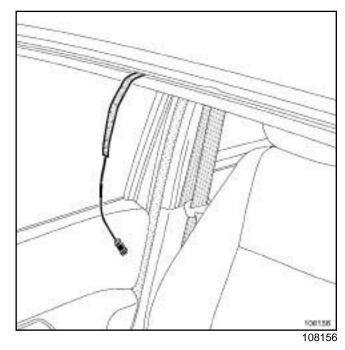

### WARNING

When cutting the cement bead, take care not to cut the wiring harness.

### NORMAL ROOF

□ Cut the cement bead (see **Technical Note 560A**).

D95, and FIXED WINDOW SUNROOF

Note:

For cutting the upper section of the windscreen, it is preferable to use the pneumatic window cutting tool, in order not to damage the finishing seal of the fixed glass roof.

- □ Cut the cement bead (see **Technical Note 560A**).
- Remove the windscreen (this operation requires two people).

### Windscreen: Removal - Refitting



### B95 or D95 or J95 or K95

### REFITTING

- I REFITTING PREPARATION OPERATION
- parts always to be replaced: Windscreen adjusting shim (50,04,02,03).

### AUTO LIGHTS+WIPER

- parts always to be replaced: rain and light sensor base (80,04,02,12).
- □ Fit the new shims and retaining thrust bearings.
- □ For preparation and bonding (see **Technical Note 560A**).

# II - REFITTING OPERATION FOR PART CONCERNED

- Bond the windscreen (this operation requires two people).
- □ Respect the following clearances and flush fitting:
  - « windscreen roof panel » ,
  - « windscreen windscreen pillar » .
- □ Hold the windscreen in position with masking tape.

### **III - FINAL OPERATION**

### J95

Refit the windscreen pillar trims (see 55A, Exterior protection, A-pillar trim piece: Removal - Refitting, page 55A-29).

### AUTO LIGHTS+WIPER

### Refit:

- a new adhesive base for the rain and light sensor (see **Rain and light sensor: Removal - Refitting**) (85A, Wiping - Washing),
- the rain and light sensor (see **Rain and light sensor: Removal Refitting**) (85D, Wipers Washing).

#### Refit:

- the windscreen pillar trims (see **A-pillar trim: Removal - Refitting**) (71A, Body internal trim),
- the interior rear-view mirror (see 57A, Interior equipment, Interior rear-view mirror Removal -Refitting, page 57A-43),
- the scuttle panel grille (see 56A, Exterior equipment, Scuttle panel grille: Removal Refitting, page 56A-1),
- the windscreen wiper arms (see **Windscreen wiper arm: Removal Refitting**) (85A, Wiping Washing).

### Sliding window in front side door: Removal - Refitting




### B95 or D95 or K95

### REMOVAL


### I - REMOVAL PREPARATION OPERATION

Remove the front side door trim (see Front side door trim: Removal - Refitting) (72A, Side opening elements trim).

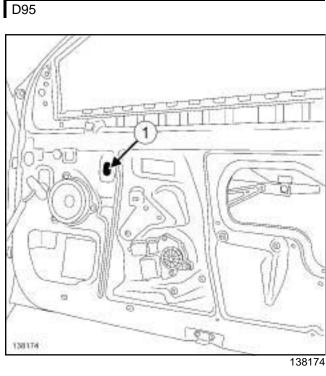

 $\hfill\square$  Remove the blanking cover (1) .

### B95 or K95

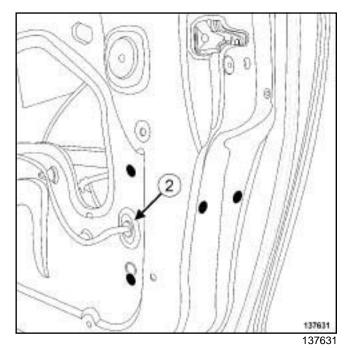

- Partially remove the blanking cover (2) of the front side door electrical wiring.
- Remove the door sealing film (see Door sealing film: Removal Refitting) (65A, Opening element sealing).
- Lower the window to access the bolts.
- Disconnect the battery (see Battery: Removal -Refitting) (80A, Battery).


### Note:

In order to avoid accidental damage, protect the side impact sensor with cardboard and adhesive tape.

□ Remove the interior weatherstrip.

### Sliding window in front side door: Removal - Refitting



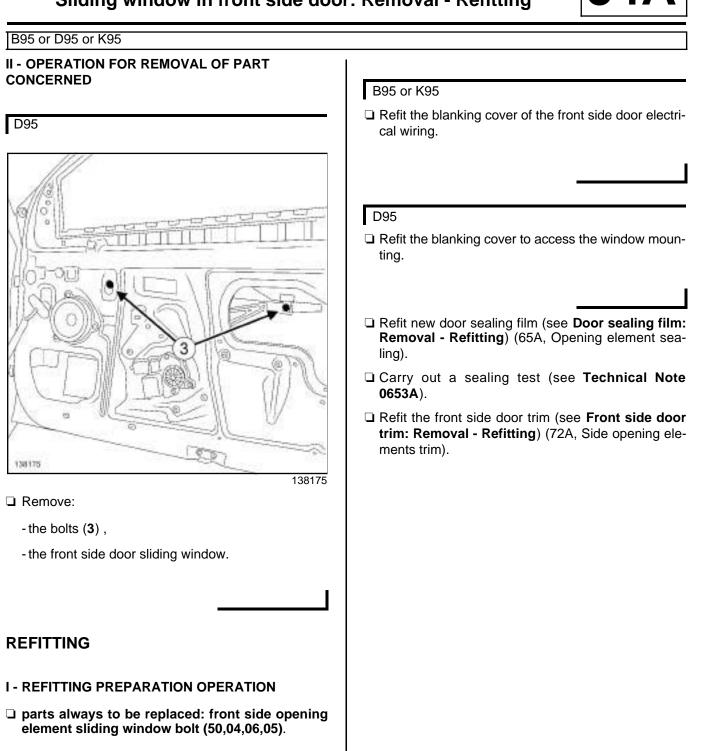

# II - REFITTING OPERATION FOR PART CONCERNED

□ Refit the front side door sliding window glass.

### **III - FINAL OPERATION**

- Connect the battery (see Battery : Removal Refitting) (80A, Battery).
- □ Carry out a function test.
- □ Remove the side impact sensor protection.
- □ Refit the interior weatherstrip.

### Sliding window in front side door: Removal - Refitting




### J95

### REMOVAL


### I - REMOVAL PREPARATION OPERATION

- Remove:
  - the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the sealing film (see **Door sealing film: Removal - Refitting**) (65A, Opening element sealing),
  - the front speaker (see **Front speakers: Removal - Refitting**) (86A, Radio),
  - the front side door exterior weatherstrip (see Front door side exterior weather strip: Removal - Refitting) (66A, Opening elements sealing),
  - the front side door interior weatherstrip.
- Lower the front side sliding door window.
- Disconnect the battery (see Battery: Removal Refitting) (80A, Battery).
- Protect the side impact sensor to prevent any accidental damage (cardboard and adhesive tape).

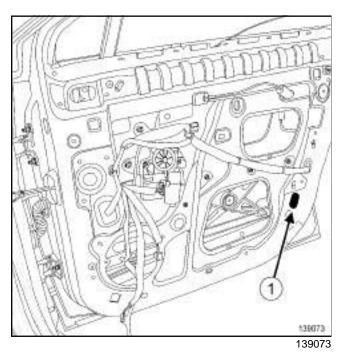


□ Remove the blanking cover (1).

### II - OPERATION FOR REMOVAL OF PART CONCERNED

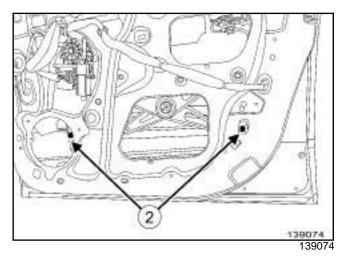

- Remove the bolts (2).
- Wind the front side door sliding window down to the bottom of the door box section.
- Detach the front side door glass run channel.

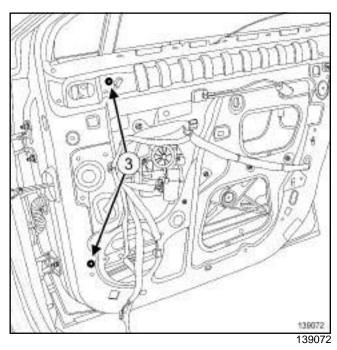


### □ Remove:

- the fixed window pillar bolts (3),
- the fixed window pillar towards the bottom, then the back of the front side door.

### Sliding window in front side door: Removal - Refitting



J95

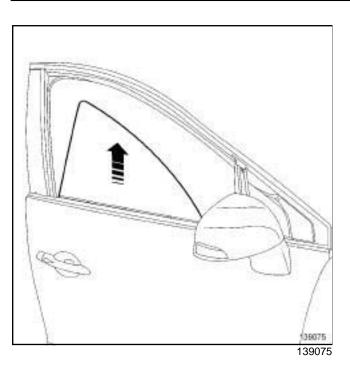

□ Remove the front side door sliding window.

### REFITTING

### I - REFITTING PREPARATION OPERATION

□ parts always to be replaced: front side opening element sliding window bolt (50,04,06,05).

# II - REFITTING OPERATION FOR PART CONCERNED

- Refit:
  - the front side door sliding window,
  - the fixed window pillar,
  - the fixed window pillar bolts (3).
- □ Fit the front side door glass run channel on the fixed window pillar.
- Refit:
  - the front side door sliding window on the electric window mechanism,
  - the new bolts (2).

### **III - FINAL OPERATION**

- □ Refit the blanking cover (1).
- □ Remove the side impact sensor protection.

- Refit:
  - the front side door interior weatherstrip,
  - the front side door exterior weatherstrip (see Front door side exterior weather strip: Removal - Refitting) (66A, Opening element sealing).
- Connect the battery (see Battery: Removal Refitting) (80A, Battery).
- Carry out a function test.
- Refit:
  - the front speaker (see **Front speakers: Removal - Refitting**) (86A, Radio),
  - the sealing film (see **Door sealing film: Removal - Refitting**) (65A, Opening element sealing).
- □ Carry out a sealing test (see Technical Note 0653A).
- Refit the front side door trim (see Front side door trim: Removal - Refitting) (72A, Side opening elements trim).

### Sliding window in rear side door: Removal - Refitting


### B95 or J95 or K95

### REMOVAL

### I - REMOVAL PREPARATION OPERATION

- Lower the rear side sliding door window to the low position.
- □ Remove:
  - the rear side door trim (see **Rear side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the door sealing film (see **Door sealing film: Removal - Refitting**) (65A, Opening element sealing),
  - the interior weatherstrip.


B95

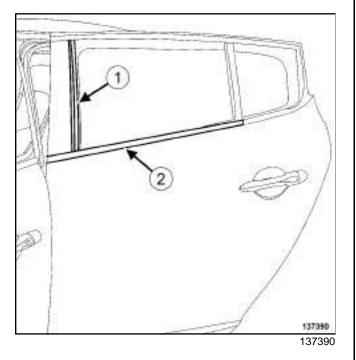

### Remove:

- partially the rear side door window glass run channel (1) ,
- partially the exterior weatherstrip  $(\mathbf{2})$  ,
- the rear speaker (see **Rear speakers: Removal - Refitting**) (86A, Radio).

J95

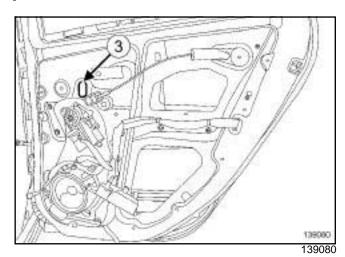


□ Remove:

- the blanking cover (3),
- the exterior weatherstrip,
- the rear side door pillar exterior trim (see 55A, Exterior protection, Rear side door pillar exterior trim Removal - Refitting, page 55A-34).


### Sliding window in rear side door: Removal - Refitting

B95 or J95 or K95


# II - OPERATION FOR REMOVAL OF PART CONCERNED

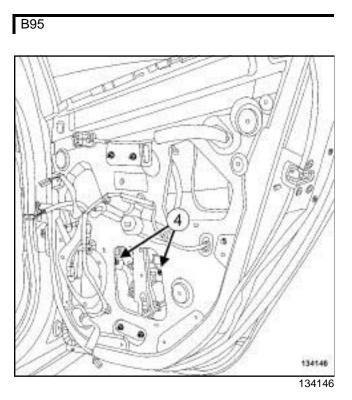

Remove the bolts (4) from the rear side door sliding window.

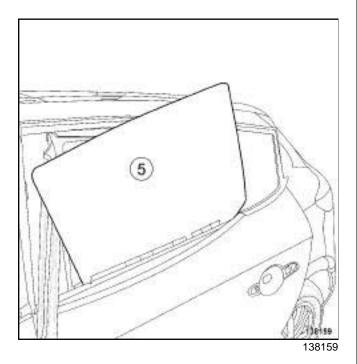


Remove the sliding window from the rear side door(5).

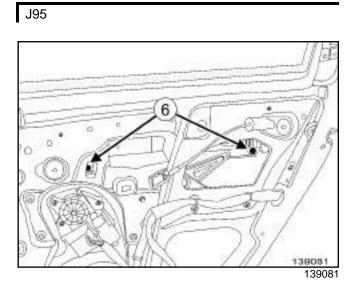

54

□ Remove the bolts (6).

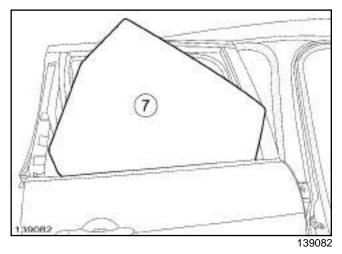

Remove the sliding window from the rear side door (7).

### REFITTING

### I - REFITTING PREPARATION OPERATION

□ parts always to be replaced: rear side opening element sliding window bolt (50,04,08,07).

# II - REFITTING OPERATION FOR PART CONCERNED

Refit:

- the rear side sliding door window,
- the rear side door sliding window bolts.

### Sliding window in rear side door: Removal - Refitting



### B95 or J95 or K95

### **III - FINAL OPERATION**

#### J95

Refit:

- the exterior weatherstrip,
- the blanking cover (3) ,
- the rear side door exterior trim (see 55A, Exterior protection, Rear side door pillar exterior trim Removal Refitting, page 55A-34).

### B95

Refit:

- the rear side door window glass run channel (1),
- the exterior weatherstrip (2),
- the rear speaker (see **Rear speakers: Removal - Refitting**) (86A, Radio).
- □ Carry out a function test.
- Refit the door sealing film (see Door sealing film: Removal - Refitting) (65A, Opening element sealing).
- □ Carry out a sealing test (see Technical Note 0653A).
- Refit the rear side door trim (see Rear side door trim: Removal - Refitting) (72A, Side opening element trim).

### Rear quarter panel window: Removal - Refitting



D95 or K95

#### Note:

The seal of the rear quarter panel window is moulded onto the rear quarter panel window. If the seal has deteriorated, always replace the rear quarter panel window.

### REMOVAL

### I - REMOVAL PREPARATION OPERATION

### D95

□ Remove:

- the door sill lining (see **Door sill lining: Removal - Refitting**) (71A, Body internal trim),
- the side roof rail rear trim (see Rear roof drip moulding lining: Removal - Refitting) (71A, Body internal trim),
- the rear wing panel trim (see **Rear panel trim: Removal - Refitting**) (71A, Body internal trim),
- the upper trim of the C-pillar (see **C-pillar upper trim: Removal Refitting**) (71A, Body internal trim),
- the B-pillar upper trim (see **B-pillar upper trim: Removal Refitting**) (71A, Body internal trim).


### K95

Remove:

- the rear inner sill upper trim (see **Rear door sill upper lining: Removal Refitting**) (71A, Body internal trim),
- the rear parcel shelf side trim (see **Rear parcel shelf side trim: Removal Refitting**) (71A, Body internal trim),
- the rear quarter panel trim (see **Rear quarter panel trim: Removal - Refitting**) (71A, Body internal trim).
- Protect the area around the rear quarter panel window with masking tape.

### II - OPERATION FOR REMOVAL OF PART CONCERNED

### D95

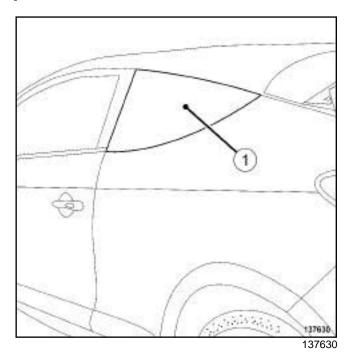


- □ Cut the cement bead (see **Technical Note 560A**).
- □ Remove the rear quarter panel window (1).

## WINDOWS Rear quarter panel window: Removal - Refitting



D95 or K95

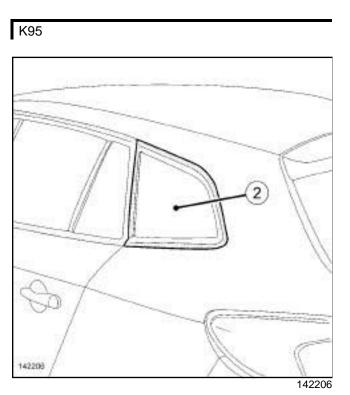

- □ Cut the cement bead (see Technical Note 560A).
- □ Remove the rear quarter panel window (2).

### REFITTING

### I - REFITTING PREPARATION OPERATION

□ For preparation and bonding (see **Technical Note 560A**).

### II - REFITTING OPERATION FOR PART CONCERNED

- D Bond the rear quarter panel window.
- □ Equal out the clearances and shut lines.

### **III - FINAL OPERATION**

### D95

Refit:

- the B-pillar upper trim (see **B-pillar upper trim: Removal Refitting**) (71A, Body internal trim),
- the upper trim of the C-pillar (see **C-pillar upper trim: Removal Refitting**) (71A, Body internal trim),

- the rear wing panel trim (see **Rear panel trim: Removal - Refitting**) (71A, Body internal trim),
- the side roof rail rear trim (see Rear roof drip moulding lining: Removal - Refitting) (71A, Body internal trim),
- the door sill lining (see **Door sill lining: Removal - Refitting**) (71A, Body internal trim).

### K95

Refit:

- the rear quarter panel trim (see **Rear quarter panel trim: Removal - Refitting**) (71A, Body internal trim).
- the rear parcel shelf side trim (see **Rear parcel** shelf side trim: **Removal Refitting**) (71A, Body internal trim),
- the rear inner sill upper trim (see **Rear door sill upper lining: Removal Refitting**) (71A, Body internal trim).

Rear quarter panel window: Removal - Refitting



J95

### Note:

The rear quarter panel window seal is moulded onto the rear quarter panel window. If the seal has deteriorated, always replace the rear quarter panel window.

### REMOVAL

### I - REMOVAL PREPARATION OPERATION


- □ Remove:
  - the rear panel trim (see **Rear end panel lining: Removal Refitting**) (71A, Body internal trim),
  - the rear parcel shelf side trim (see **Rear parcel shelf side trim: Removal Refitting**) (71A, Body internal trim),
  - the rear inner sill upper trim (see **Rear door sill upper lining: Removal Refitting**) (71A, Body internal trim),
  - the rear wheel arch trim (see **Rear wheel arch lining: Removal Refitting**) (71A, Body internal trim),
  - the rear quarter panel trim (see **Rear quarter panel trim: Removal - Refitting**) (71A, Body internal trim).
- Protect the edge of the rear quarter panel window using masking tape.

### Note:

When carrying out any work on the bodywork, protect the seal with a spatula when cutting. The window is supplied for replacements as a spare part with its moulded seal.


### II - OPERATION FOR REMOVAL OF PART CONCERNED

### LONG CHASSIS

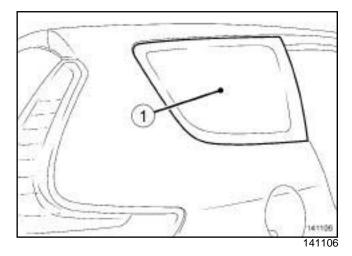

Cut the cement bead (see Technical Note 560A).

 $\hfill\square$  Remove the rear quarter panel window (1) .

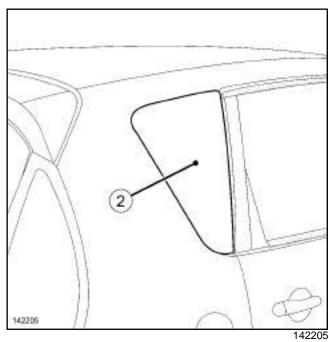

STANDARD CHASSIS

□ Cut the cement bead (see Technical Note 560A).

 $\hfill\square$  Remove the rear quarter panel window (2) .

### Rear quarter panel window: Removal - Refitting



### J95

### REFITTING

### I - REFITTING PREPARATION OPERATION

- □ parts always to be replaced: Rear quarter panel window adjusting shim (50,04,10,03).
- □ For preparation and bonding (see **Technical Note 560A**).

## II - REFITTING OPERATION FOR PART CONCERNED

- D Bond the rear quarter panel window.
- □ Equal out the clearances and shut lines.

### **III - FINAL OPERATION**

- Remove the protection on the edge of the rear quarter panel window.
- Refit:
  - the rear quarter panel trim (see **Rear quarter panel trim: Removal - Refitting**) (71A, Body internal trim).
  - the rear wheel arch trim (see **Rear wheel arch lining: Removal Refitting**) (71A, Body internal trim),
  - the rear inner sill upper trim (see **Rear door sill upper lining: Removal Refitting**) (71A, Body internal trim),
  - the rear parcel shelf side trim (see **Rear parcel shelf side trim: Removal Refitting**) (71A, Body internal trim),
  - the rear panel trim (see **Rear end panel lining: Removal Refitting**) (71A, Body internal trim).

### Rear side door fixed window: Removal - Refitting



### B95 or K95

### REMOVAL


### I - REMOVAL PREPARATION OPERATION

### K95

- Remove the rear side door exterior weatherstrip (see Rear side door exterior weather strip: Removal - Refitting) (66A, Window sealing).
- □ Remove:
  - the rear side door trim (see **Rear side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the interior weatherstrip,
  - the door sealing film (see **Door sealing film: Removal - Refitting**) (65A, Opening element sealing),
  - the rear speaker (see **Rear speakers: Removal - Refitting**) (86A, Radio),
  - the rear side sliding door window (see 54A, Windows, Sliding window in rear side door: Removal - Refitting, page 54A-7),
  - partially the rear side door pillar exterior trim (see 55A, Exterior protection, Rear side door pillar exterior trim Removal Refitting, page 55A-34).

### B95

Remove the rear side door "fixed window - glass run channel - exterior weatherstrip" assembly (see Glass run channel in rear side door: Removal -Refitting) (66A, Window sealing). K95

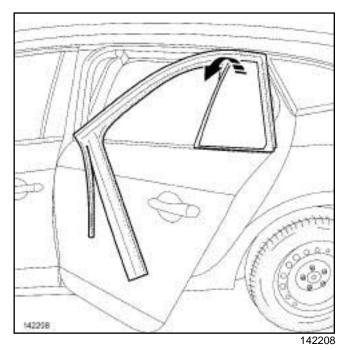

Remove the rear side door "fixed window - glass run channel" assembly (see Glass run channel in rear side door: Removal - Refitting) (66A, Window sealing).

# II - OPERATION FOR REMOVAL OF PART CONCERNED

### K95

Separate the rear side door fixed window from the rear side door glass run channel.

### B95

Separate the rear side door fixed window from the exterior weatherstrip on the rear side door glass run channel.

### Rear side door fixed window: Removal - Refitting



### B95 or K95 REFITTING K95 I - REFITTING OPERATION FOR PART □ Refit the rear side door exterior weatherstrip (see CONCERNED Rear side door exterior weather strip: Removal -Refitting) (66A, Window sealing). K95 □ Assemble the rear side door window "glass run channel - fixed window" assembly. Carry out a sealing test (see Technical Note 0653A). C Refit: - the interior weatherstrip, B95 - the rear side door trim (see Rear side door trim: Removal - Refitting) (72A, Side opening element □ Assemble the rear side door "glass run channel - extrim). terior weatherstrip - fixed window" assembly. **II - FINAL OPERATION** K95 □ Refit the rear side door window "glass run channel fixed window" assembly (see Glass run channel in rear side door: Removal - Refitting) (66A, Window sealing). B95 □ Refit the rear side door "fixed window - glass run channel - exterior weatherstrip" assembly (see Glass run channel in rear side door: Removal -Refitting) (66A, Window sealing). Refit: - the rear side door pillar exterior trim (see 55A, Exterior protection, Rear side door pillar exterior trim Removal - Refitting, page 55A-34), - the rear side sliding door window (see 54A, Windows, Sliding window in rear side door: Removal - Refitting, page 54A-7), - the rear speaker (see Rear speakers: Removal -Refitting) (86A, Radio), - the door sealing film (see Door sealing film: Removal - Refitting) (65A, Opening element sealing).



### REMOVAL

### I - REMOVAL PREPARATION OPERATION

- □ Remove:
  - the tailgate trim (see **Tailgate lining: Removal - Refitting**) (73A, Non-side opening elements trim),
  - the rear screen wiper arm (see **Rear screen wiper arm: Removal - Refitting**) (85A, Washing - Wiping),
  - the rear screen wiper motor (see **Rear screen wiper motor: Removal Refitting**) (85A, Washing Wiping).

### B95 or J95


Remove the high level brake light (see 3rd brake light: Removal - Refitting) (81A, Rear lighting).

### D95

- □ Remove the tailgate spoiler (see 56A, Exterior equipment, Tailgate spoiler: Removal Refitting, page 56A-6).
- Disconnect the rear screen de-icer connectors.
- Protect the edge of the rear screen window with masking tape.

### II - OPERATION FOR REMOVAL OF PART CONCERNED



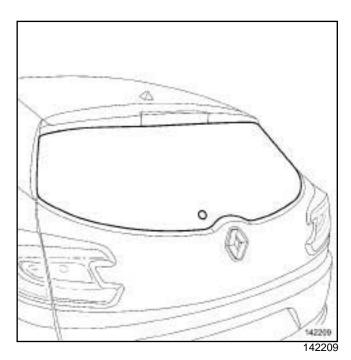

□ Cut the cement bead; (see **Technical Note 560A**) (this operation requires two people).

B95 or D95 or J95

- □ Cut the cement bead (see **Technical Note 560A**).
- Remove the rear screen (this operation requires two people).

### REFITTING

- I REFITTING PREPARATION OPERATION
- □ parts always to be replaced: Rear screen adjusting shim (50,04,12,03).
- □ For preparation and bonding (see **Technical Note 560A**).
- Refit the rear screen wiper motor (see Rear screen wiper motor: Removal - Refitting) (85A, Wiping -Washing).

## **Rear screen: Removal - Refitting**



# II - REFITTING OPERATION FOR PART CONCERNED

- □ Bond the rear screen (this operation requires two people).
- □ Equal out the clearances and shut lines.

### **III - FINAL OPERATION**

- □ Connect the rear screen de-icer connectors.
- □ Remove the masking tape.

### D95

Refit the tailgate spoiler (see 56A, Exterior equipment, Tailgate spoiler: Removal - Refitting, page 56A-6).

### B95 or J95

- Refit the high level brake light (see 3rd brake light: Removal - Refitting) (81A, Rear lighting).
- Refit the rear screen wiper arm (see Rear screen wiper arm: Removal - Refitting) (85A, Wiping -Washing).
- □ Carry out a function test.
- Refit the tailgate trim (see Tailgate lining: Removal
   Refitting) (73A, Non-side opening elements trim).
- Remove the tabs from the stops once the adhesive has dried.

## Fixed sunroof window: Removal - Refitting



### PANORAMIC SUNROOF

#### **Essential special tooling**

Car. 1033

Windscreen mastic cutting wire inserting tool.

### IMPORTANT

To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- (see Airbag and Pretensioners: Precautions for repair) (88C, Airbags and pretensioners),
- (see Vehicle: Precautions for repair) (01D, Mechanical introduction).

#### Note:

If the sunroof fixed window is cracked:

- disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery),
- remove the headlining (see **Headlining: Remo**val - **Refitting**) (71A, Body internal trim).

### REMOVAL

#### I - REMOVAL PREPARATION OPERATION


- Disconnect the battery (see Battery: Removal -Refitting) (80A, Battery).
- Remove the headlining (see Headlining: Removal -Refitting) (71A, Body internal trim).

K95

□ Protect:

- the area around the sunroof fixed window with masking tape,
- the sunroof side trims using masking tape,
- the inside of the vehicle.

B95 or J95

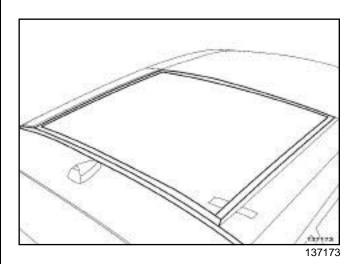

Protect:

- the area around the sunroof fixed window with masking tape,
- the sunroof side trims using masking tape,
- the inside of the vehicle.

Fixed sunroof window: Removal - Refitting



### PANORAMIC SUNROOF

### B95

Protect the mechanism cover seals using masking tape (if necessary raise the mechanism covers and hold them using masking tape).

#### II - OPERATION FOR REMOVAL OF PART CONCERNED

### J95

- Pass the tool (Car. 1033) to the rear section of the window and slide the cutting wire between the fixed window and the sunroof operating mechanism.
- □ Cut the cement bead (see **Technical Note 560A**) (this operation requires two people).

### B95 or K95

- □ Pass the tool (Car. 1033) in the rear right- or lefthand section of the sunroof fixed window, taking care not to damage the mechanism cover seals.
- Collect the cutting wire and leave it inside the vehicle until needed.
- Slide:
  - the cutting wire between the sunroof operating mechanism and the fixed window,
  - the cutting wire around the outside edge.

### Note:

When routing the cutting wire into the vehicle interior, be careful not to cross the two wires, as this would make cutting the seal impossible.

- □ Cut a sufficient length of cutting wire.
- Route the cutting wire inside the vehicle using the tool (Car. 1033).
- □ Fit the cutting handles on the two sections of the cutting wire inside the vehicle.
- □ Cut the cement bead and leave the other handle in place until it is needed.

#### Note:

Reduce the length of the cutting wire as you cut.

Remove the sunroof fixed window (this operation requires two people).

### REFITTING

- I REFITTING PREPARATION OPERATION
- □ parts always to be replaced: Roof opening element fixed window adjusting shim (50,04,22,04).
- □ For preparation and bonding (see **Technical Note 560A**).


## II - REFITTING OPERATION FOR PART CONCERNED

Bond the sunroof fixed window (this operation requires two people).


## WINDOWS Fixed sunroof window: Removal - Refitting



### PANORAMIC SUNROOF

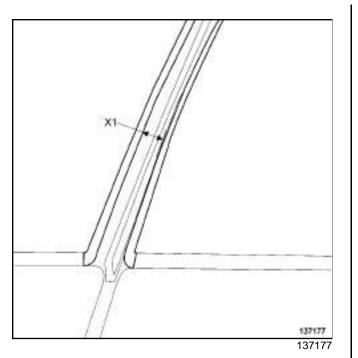

- □ Observe the clearance of (X1) = 8 mm between the sunroof fixed window and the sunroof mobile panel.
- □ The sunroof fixed window should be slightly lower than the sunroof mobile panel.

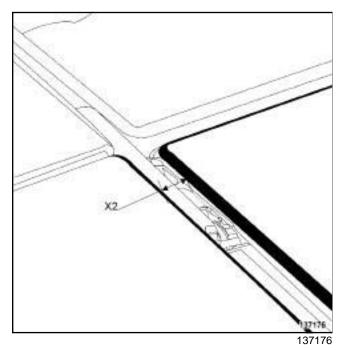

□ Balance the lateral clearances of (X2) = 13 mm between the window and the side trims.

### **III - FINAL OPERATION**

- □ Remove the masking tape.
- Refit the headlining (see Headlining: Removal -Refitting) (71A, Body internal trim).

□ Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).



### PANORAMIC SUNROOF

### REMOVAL

### I - REMOVAL PREPARATION OPERATION

### K95

Remove the roof bar (see 56A, Exterior equipment, Roof rack bar: Removal - Refitting, page 56A-20) (56A, Exterior equipment).

### 1 - Sunroof side trim, front section

Protect the edge of the roof and windows using masking tape.

### 2 - Sunroof side trim, rear section


Protect the edge of the roof and windows using masking tape.

### B95

Remove the mechanism cover side seal from the sunroof rear side trim.

### II - OPERATION FOR REMOVAL OF PART CONCERNED

1 - Sunroof side trim, front section

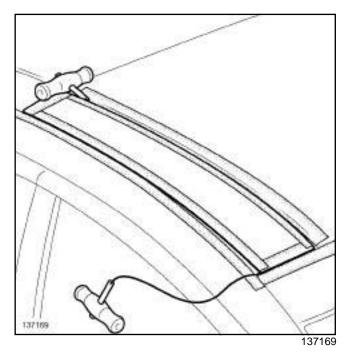


- Be sure to pass the cutting wire between the sunroof side trim and the sunroof operating mechanism finishing seal.
- Pass the cutting wire under the sunroof side trim.
- □ Cut the cement bead from the front to the rear using a cutting wire with two handles.
- □ Remove the sunroof front side trim.


## WINDOWS Sunroof side trim: Removal - Refitting



### 2 - Sunroof side trim, rear section

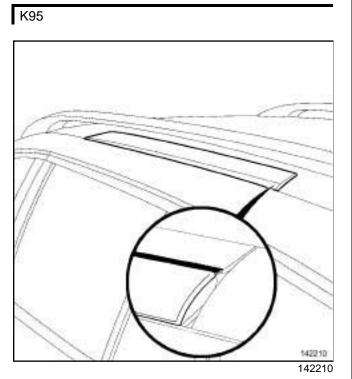

Be sure to pass the cutting wire between the sunroof side trim and the sunroof operating mechanism.

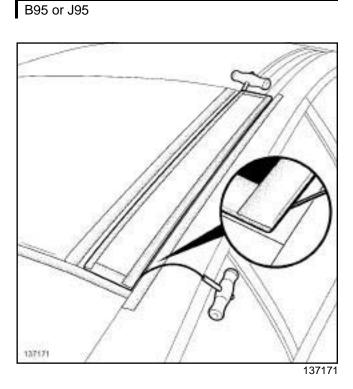

- Be sure to pass the cutting wire between the sunroof side trim and the sunroof operating mechanism finishing seal.
- □ Pass the cutting wire under the sunroof side trim.
- □ Cut the cement bead from the rear to the front using a cutting wire with two handles.
- □ Remove the sunroof rear side trim.

### REFITTING

### I - REMOVAL PREPARATION OPERATION

- □ parts always to be replaced: Roof opening element fixed window adjusting shim (50,04,22,04).
- □ For preparation and bonding (see **Technical Note 560A**).

# II - REFITTING OPERATION FOR PART CONCERNED

Position the positioning shims on the marks of the sunroof operating mechanism.



### PANORAMIC SUNROOF

### B95

- Refit the mechanism cover side seal on the sunroof rear side trim.
- Bond:
  - the sunroof rear side trim first,
  - the sunroof front side trim second.
- □ Respect the clearances and flush-fittings.

### **III - FINAL OPERATION**

- □ Remove the masking tape.
- □ Perform a function test of the sunroof mobile panel.

# EXTERIOR PROTECTION Front bumper: Removal - Refitting



#### **Essential special tooling**

Car. 1363


Set of trim removal levers.

### REMOVAL


### I - REMOVAL PREPARATION OPERATION

- Position the vehicle on a two-post lift (see Vehicle: Towing and lifting) (02A, Lifting equipment).
- Remove:
  - the front wheels (see **Wheel: Removal Refitting**) (35A, Wheels and tyres),
  - the front section of the wheel arch liners (see 55A, Exterior protection, Front wheel arch liner: Removal - Refitting, page 55A-24).

B95 or D95 or K95

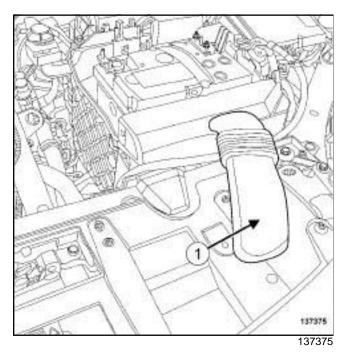

 $\hfill\square$  Remove the upper air duct (1) .

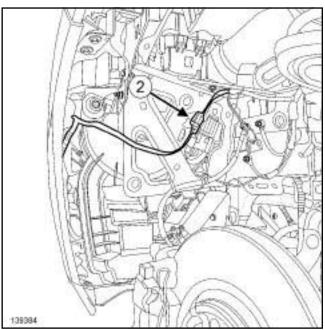

139384

Unclip the connector.


 $\hfill\square$  Disconnect the bumper wiring connector (2) .


FR AND RR PROX RADAR

 $\hfill\square$  Disconnect the bumper wiring connector.




# II - OPERATION FOR REMOVAL OF PART CONCERNED

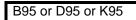


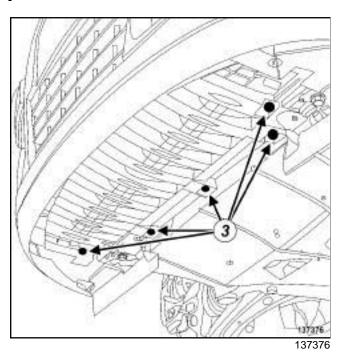


□ Remove the bolts (3).

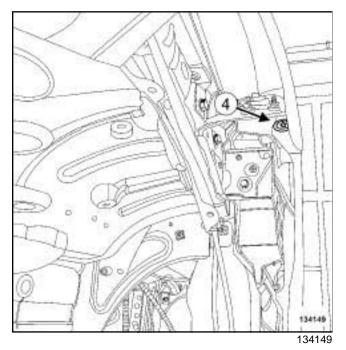

□ Remove the bolts (4).

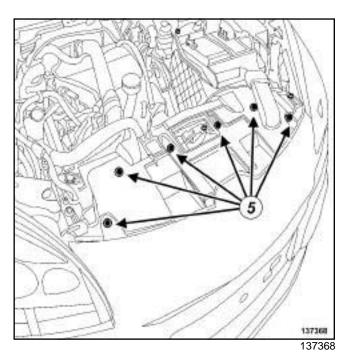


□ Remove the bolts (5).

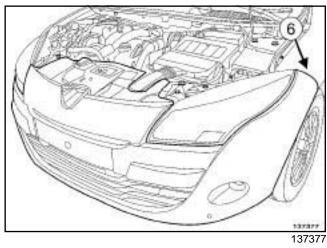


- Unclip the side sections of the front bumper at (6) using the tool (Car. 1363).
- □ Slightly lift the upper section of the front bumper.

# EXTERIOR PROTECTION Front bumper: Removal - Refitting




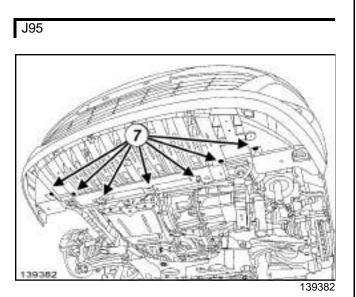

□ Remove the bolts (7).

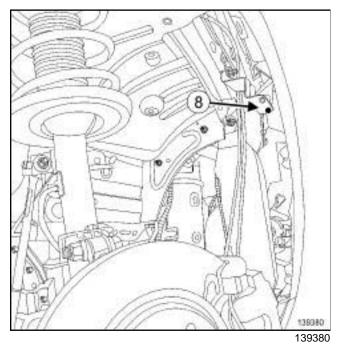


□ Remove the bolts (8).

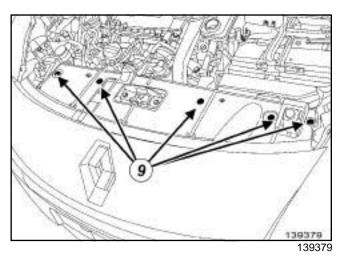


**Remove the bolts (9)**.

# EXTERIOR PROTECTION Front bumper: Removal - Refitting



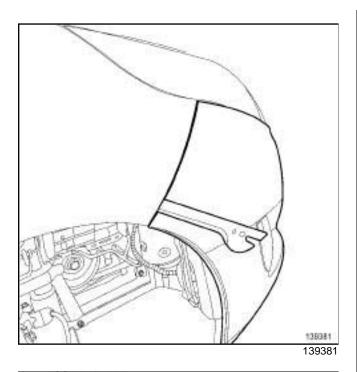

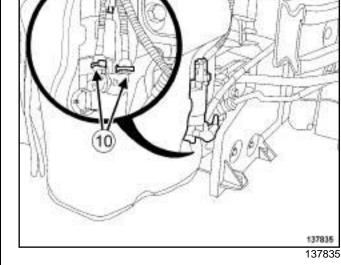

- Disconnect the headlight washer pipes (10) .
- Remove the front bumper (this operation requires two people).

## REFITTING


### I - REFITTING OPERATION FOR PART CONCERNED

- HEADLIGHT WASHERS WITH BLADE
- Connect the headlight washer pipes (10).
- Refit the front bumper by sliding it correctly in its guides (this operation requires two people).
- □ Clip on the side sections of the front bumper.

### B95 or D95 or K95

Refit:

- the bolts (5),
- the bolts (4),
- the bolts (3).

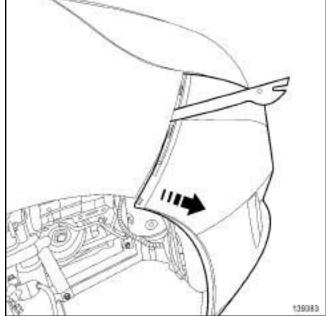

139383

- Unclip the side sections of the front bumper using the tool (Car. 1363).
- □ Slightly lift the upper section of the front bumper.

### HEADLIGHT WASHERS WITH BLADE

Partially remove the front bumper (this operation requires two people).



### J95

Refit:

- the bolts (9),
- the bolts (8),
- the bolts (7).

### **II - FINAL OPERATION**

- Connect the connector (2).
- Clip on the connector.

### FR AND RR PROX RADAR

□ Refit the bumper wiring connector.

# FR AND RR PROX RADAR, and HEADLIGHT WASHERS WITH BLADE

□ Carry out a function test.

B95 or D95 or K95

□ Refit the upper air duct (1).

Refit:

- the front section of the wheel arch liners (see 55A, Exterior protection, Front wheel arch liner: Removal - Refitting, page 55A-24),
- the front wheels (see **Wheel: Removal Refitting**) (35A, Wheels and tyres).



Essential	special tooling
-----------	-----------------

Car. 1363

Set of trim removal levers.

## STRIPPING


### I - STRIPPING PREPARATION OPERATION

- Position the vehicle on a two-post lift (see Vehicle: Towing and lifting) (02A, Lifting equipment).
- Remove:
  - the front wheels (see **Wheel: Removal Refitting**) (35A, Wheels and tyres),
  - the front section of the wheel arch liners (see 55A, Exterior protection, Front wheel arch liner: Removal - Refitting, page 55A-24),
  - the front bumper (see 55A, Exterior protection, Front bumper: Removal Refitting, page 55A-1)

# II - STRIPPING OPERATION FOR PART CONCERNED

### FOG LIGHT

Remove the front fog lights (see Front fog light: Removal - Refitting) (80B, Headlights).

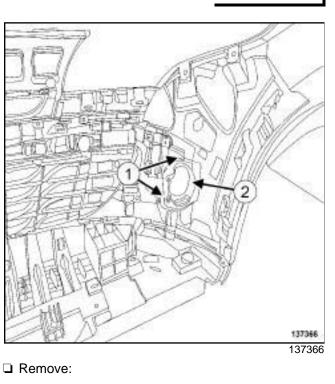

- the bolts (1),

- the trim pieces (2).

#### HEADLIGHT WASHERS WITH BLADE


Remove the headlight washer jets (see Headlight washer jet: Removal - Refitting) (85A, Wiping -Washing).

#### FR AND RR PROX RADAR

Remove the proximity radars (see Proximity radar Removal - Refitting) (87F, Parking distance control).


FOG LIGHT, and FR AND RR PROX RADAR

Remove the front bumper wiring (see Front bumper wiring: Removal - Refitting) (88A, Wiring).

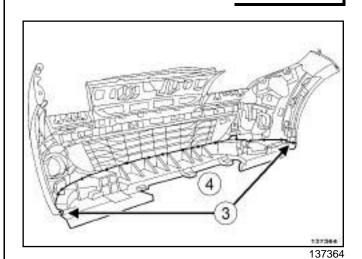


- Drill out the rivets (3).
- Unclip the diffuser (4).



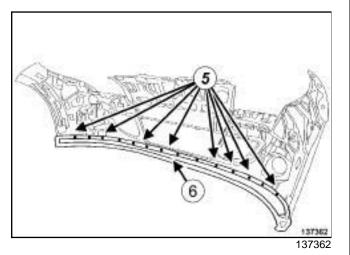

- □ Cut the clips (5).
- □ Unclip the aerodynamic component (6).




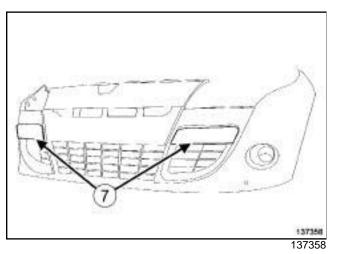

□ Unclip the front bumper impact strips (7).


137361

Unclip the centre grille (8).

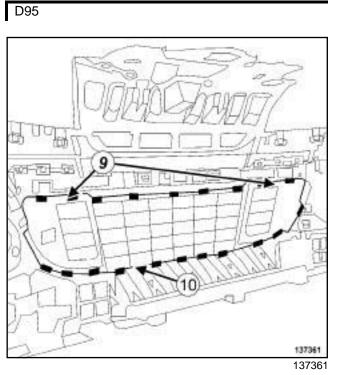


- Drill out the rivets (9).
- $\hfill\square$  Unclip the centre grille (10) .



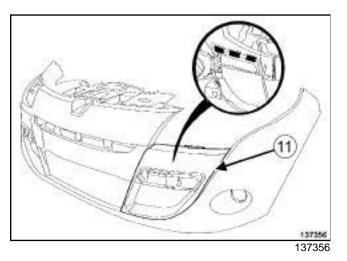


Unclip the trims (11).


J95

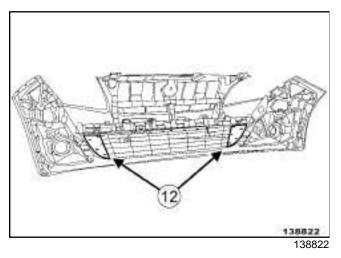


□ Unclip the centre grille blanking covers (12).

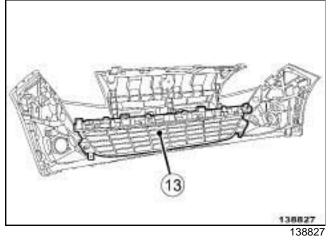


Unclip the centre grille (13).

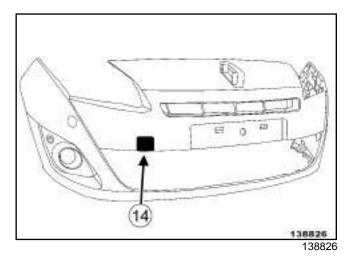

□ Unclip the tow eye flap.

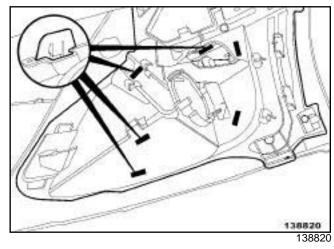


□ Unclip the fog light mounting trim.

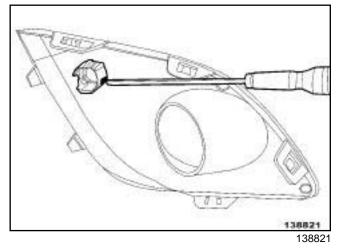

**□** Remove the proximity radar supports.



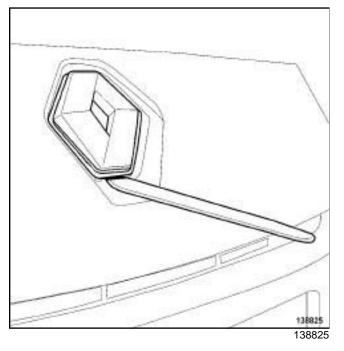

Remove the badge using tool (Car. 1363).

## REASSEMBLING

#### I - REBUILDING PREPARATION OPERATION

- □ parts always to be replaced: front bumper rivet (50,05,02,18).
- □ parts always to be replaced: Front bumper clip (50,05,02,17).

# II - REBUILDING OPERATION FOR PART CONCERNED

Refit the badge.

### J95

Refit:

- the proximity radar mountings.
- the fog light mounting trim,
- the tow eye flap,
- the centre grille,
- the centre grille blanking covers.

### D95

- Clip on:
  - the trims (11),
  - the central grille (10).
- Refit new rivets.

### B95 or K95

Clip on:

- the centre grille (8),
- the front bumper impact strips (7).
- Clip the aerodynamic component (6).
- Refit new clips (5).
- Clip on the diffuser (4).
- Refit new rivets.

FOG LIGHT, and FR AND RR PROX RADAR

Refit the front bumper wiring (see Front bumper wiring: Removal - Refitting) (88A, Wiring).

FR AND RR PROX RADAR

Refit the proximity radars (see Proximity radar Removal - Refitting) (87F, Parking distance control).

HEADLIGHT WASHERS WITH BLADE

Refit the headlight washer jets (see Headlight washer jet: Removal - Refitting) (85A, Wiping -Washing).

Refit:

- the trims (2),
- the bolts (1).



## FOG LIGHT

Refit the front fog lights (see Front fog light: Removal - Refitting) (80B, Headlights).

### **III - FINAL OPERATION**

Refit:

- the front bumper (see 55A, Exterior protection, Front bumper: Removal - Refitting, page 55A-1)
- the front section of the wheel arch liners (see 55A, Exterior protection, Front wheel arch liner: Removal - Refitting, page 55A-24),
- the front wheels (see **Wheel: Removal Refitting**) (35A, Wheels and tyres).





### HEADLIGHT WASHERS WITH BLADE

#### 

### Note:

When a front bumper is replaced, the replacement part needs to be modified before it is painted so that the headlight washer jets can be fitted.

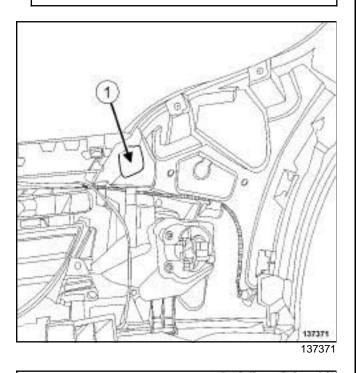

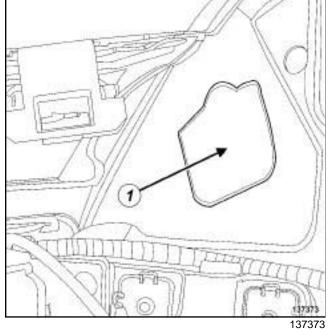

Drill the front bumper according to the marking (1) using the cutting kit or a conical cutter.

□ Finish off using a small file.

# EXTERIOR PROTECTION Rear bumper: Removal - Refitting



#### **Essential special tooling**

Car. 1363


Set of trim removal levers.

### REMOVAL

### I - REMOVAL PREPARATION OPERATION

- Position the vehicle on a two-post lift (see Vehicle: Towing and lifting) (02A, Lifting equipment).
- Remove:
  - the luggage compartment seal (partially),
  - the rear wheels (see **Wheel: Removal Refitting**) (35A, Wheels and tyres),
  - the rear wheel arch liners (see 55A, Exterior protection, Rear wheel arch liner: Removal - Refitting, page 55A-27),
  - the rear wing lights (see **Rear light on wing: Re-moval Refitting**) (81A, Rear lighting).


### B95 or D95

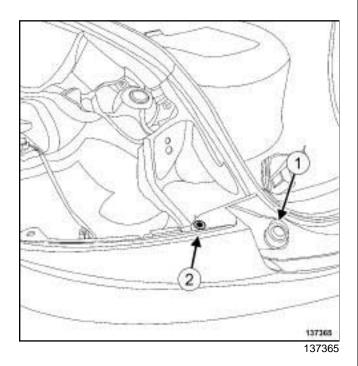

Remove:

- the stops  $(\mathbf{1})$  ,
- the clips  $({\bf 2})$  .

K95

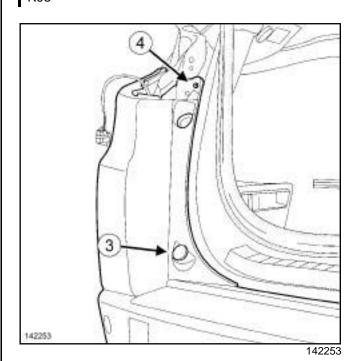


Remove:


- the stops (3),
- the bolts (4).




# II - OPERATION FOR REMOVAL OF PART CONCERNED

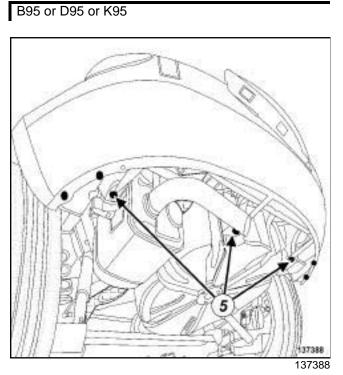

□ Remove the bolts (5).

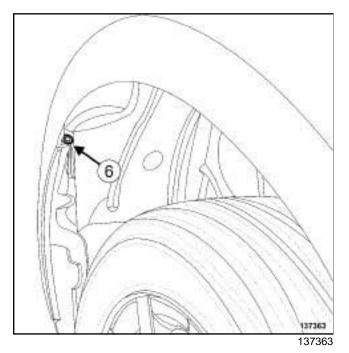



□ Remove the bolts (6).

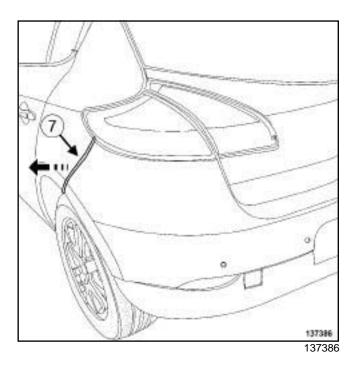

- $\hfill\square$  Unclip the rear bumper at (7) .
- Partially remove the rear bumper (this operation requires two people).
- Disconnect the rear bumper wiring connector.
- □ Unclip the rear bumper wiring connector.
- Remove the rear bumper (this operation requires two people).


J95

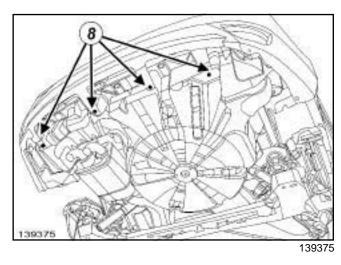

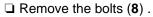


# EXTERIOR PROTECTION Rear bumper: Removal - Refitting




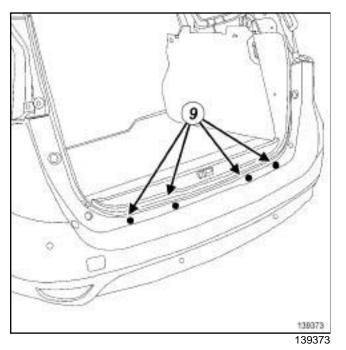


□ Remove the bolts (9).

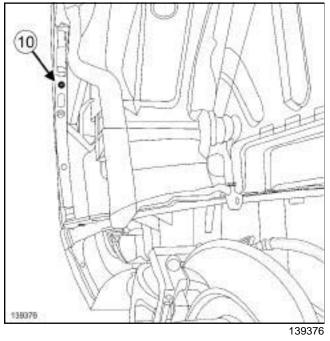

□ Remove the bolts (10).

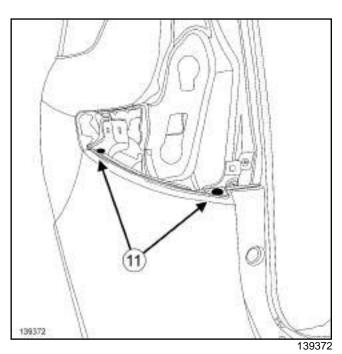


□ Remove the clips (11) .

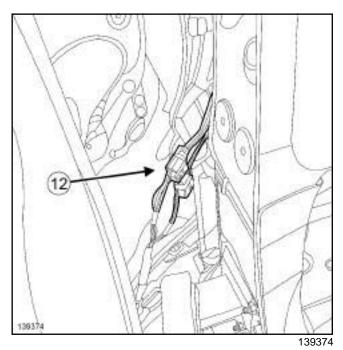


 $\hfill\square$  Disconnect the connector  $(\mathbf{12})$  .

# EXTERIOR PROTECTION Rear bumper: Removal - Refitting



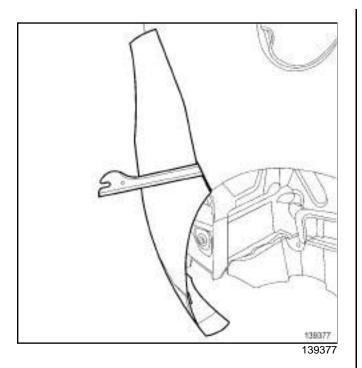

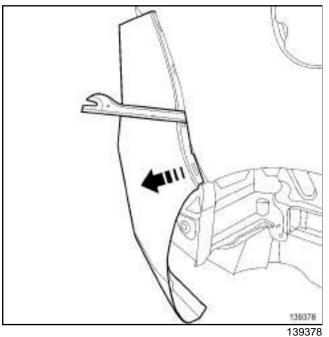

- Unclip the rear bumper using the tool (Car. 1363).
- Remove the rear bumper (this operation requires two people).

### REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

□ Connect the rear bumper wiring connector.

Refit the rear bumper (this operation requires two people).

### **II - FINAL OPERATION**

B95 or D95 or K95

□ Refit the stops.

Refit:

- the rear wing lights (see **Rear light on wing: Removal - Refitting**) (81A, Rear lighting),
- the rear wheel arch liners (see **55A**, **Exterior protection**, **Rear wheel arch liner: Removal - Refitting**, page **55A-27**),
- the rear wheels (see **Wheel: Removal Refitting**) (35A, Wheels and tyres),
- the luggage compartment seal.
- □ Carry out a function test.



### STRIPPING

### I - STRIPPING PREPARATION OPERATION

- Position the vehicle on a two-post lift (see Vehicle: Towing and lifting) (02A, Lifting equipment).
- □ Remove:
  - the rear wheels (see **Wheel: Removal Refitting**) (35A, Wheels and tyres),
  - the rear wheel arch liners (see 55A, Exterior protection, Rear wheel arch liner: Removal - Refitting, page 55A-27),
  - the rear wing lights (see **Rear light on wing: Re-moval Refitting**) (81A, Rear lighting),
  - the rear bumper (see 55A, Exterior protection, Rear bumper: Removal - Refitting, page 55A-12)


# II - STRIPPING OPERATION FOR PART CONCERNED

Remove the rear bumper wiring (see Rear bumper wiring: Removal - Refitting) (88A, Wiring).

#### B95 or D95

Remove the number plate lights (see Number plate light: Removal - Refitting) (81A, Rear lighting).

J95, and DOOR OPEN SYST. 433 NML

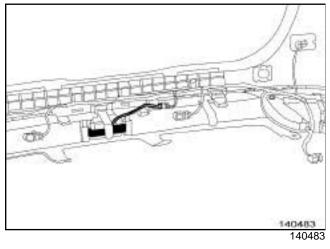

Remove the non-side opening element opening aerial. FR AND RR PROX RADAR or REAR PROX RADAR

Remove the proximity radars (see Proximity radar Removal - Refitting) (87F, Parking distance control).


### D95

□ Remove the rear fog lights (see **Rear fog lights: Removal - Refitting**) (81A, Rear lighting).

### J95


Remove the rear fog light and the reversing light (see Rear fog lights: Removal - Refitting) (81A, Rear lighting).



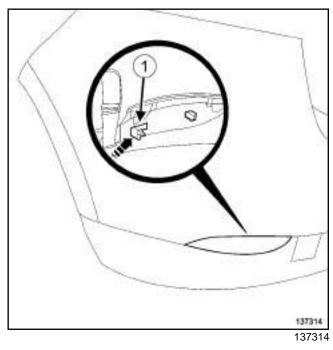

- $\hfill\square$  Unclip the reflectors at (1) .
- Remove the reflectors.



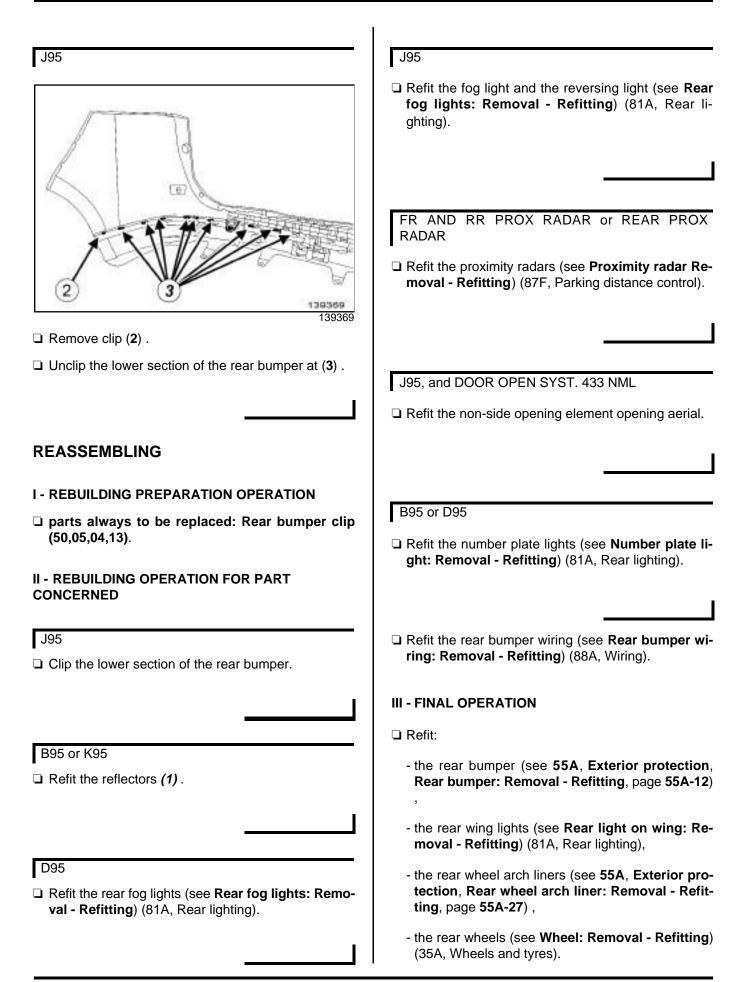



## J95 or K95

## REMOVAL

### I - REMOVAL PREPARATION OPERATION

Remove the tailgate trim (see Tailgate lining: Removal - Refitting) (73A, Non-side opening elements trim).

### J95

- Disconnect:
  - the registration plate light connectors.
  - the tailgate opening switch connector.

### PROXIMITY RADAR 0


Remove the reversing camera (see Reversing camera: Removal - Refitting) (87F, Parking distance control).


## K95

- □ Unclip the connector of the tailgate strip.
- Disconnect the connector of the tailgate strip.

### II - OPERATION FOR REMOVAL OF PART CONCERNED

### J95

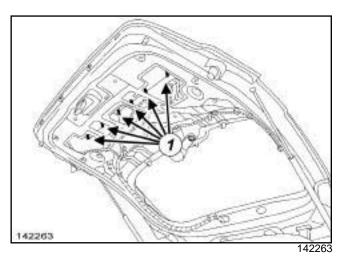

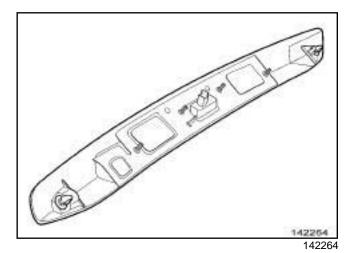



- □ Remove the nuts (1) from the tailgate strip.
- Unclip the tailgate strip.
- □ Remove the tailgate strip.

# EXTERIOR PROTECTION Tailgate strip: Removal - Refitting



### J95 or K95

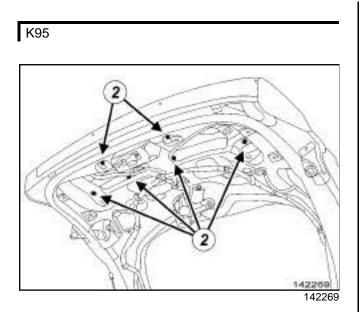

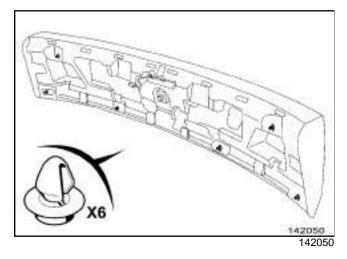

- □ Remove the bolts (2) from the tailgate strip.
- Unclip the tailgate strip.
- □ Partially remove the tailgate strip.
- □ Remove:
  - the seal of the connector for the tailgate strip,
  - the tailgate strip

## REFITTING

### I - REFITTING PREPARATION OPERATION

parts always to be replaced: Sealing foam of rear opening element strip (50,05,06,17).

### II - REFITTING OPERATION FOR PART CONCERNED

□ Refit the tailgate strip.

### K95

 $\hfill\square$  Refit the seal of the connector for the tailgate strip.

### **III - FINAL OPERATION**

### J95

- Connect:
  - the tailgate opening switch connector,
  - the registration plate light connectors.

### PROXIMITY RADAR 0

Refit the reversing camera (see Reversing camera: Removal - Refitting) (87F, Parking distance control).


## K95

- □ Connect the connector of the tailgate strip.
- □ Clip on the connector of the tailgate strip.
- Refit the tailgate trim (see Tailgate lining: Removal
   Refitting) (73A, Non-side opening elements trim).



## REMOVAL

## I - REMOVAL PREPARATION OPERATION

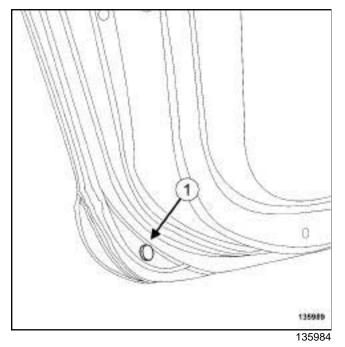


Remove:

- the blanking cover  $(\mathbf{1})$  ,

- the bolt.


# II - OPERATION FOR REMOVAL OF PART CONCERNED



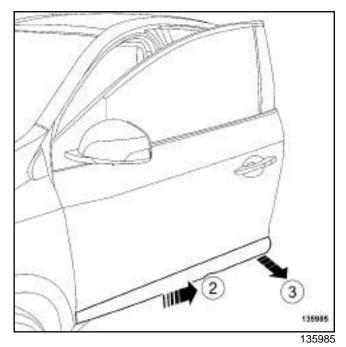


□ Remove the front side door protective strip at (2) then at (3).

# EXTERIOR PROTECTION Front side door moulding: Removal - Refitting

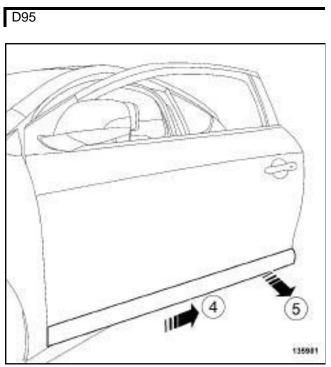

- 135981
- □ Remove the front side door protective strip at (4) then at (5).

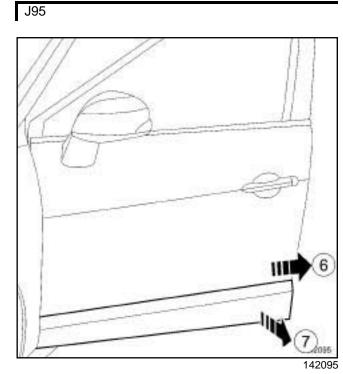

55

□ Remove the front side door protective strip at (6) then at (7).

## REFITTING

### **REFITTING OPERATION FOR PART CONCERNED**

□ Refit the front side door protective strip.


# EXTERIOR PROTECTION Rear side door moulding: Removal - Refitting



B95 or J95 or K95

## REMOVAL

# OPERATION FOR REMOVAL OF PART CONCERNED

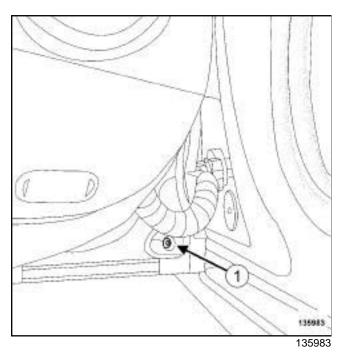


□ Remove the bolt (1).

## B95 or K95



□ Remove the rear side door protective strip at (2) then at (3).

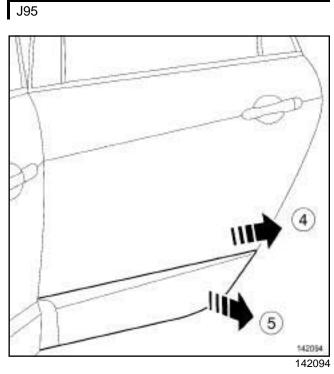

□ Remove the rear side door protective strip at (4) then at (5).

## REFITTING

### **REFITTING OPERATION FOR PART CONCERNED**

□ Refit the rear side door moulding at.

## EXTERIOR PROTECTION Rear wing protective strip: Removal - Refitting



D95


### Essential special tooling

Car. 1363

Set of trim removal levers.

### REMOVAL

# OPERATION FOR REMOVAL OF PART CONCERNED

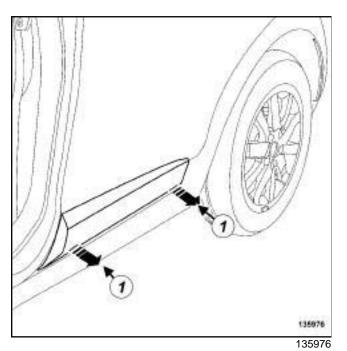

Remove the rear wing protective strip at (1) using the tool (Car. 1363).

## REFITTING

### I - REFITTING PREPARATION OPERATION

Check the condition of the clips and replace them if necessary.

# II - REFITTING OPERATION FOR PART CONCERNED

□ Refit the rear wing protective strip.

# EXTERIOR PROTECTION Front wheel arch liner: Removal - Refitting




## REMOVAL

### I - REMOVAL PREPARATION OPERATION

- Position the vehicle on a two-post lift (see Vehicle: Towing and lifting) (02A, Lifting equipment).
- Remove the front wheel (see Wheel: Removal Refitting) (35A, Wheels and tyres).

# II - OPERATION FOR REMOVAL OF PART CONCERNED


1 - Front wheel arch liner, front section

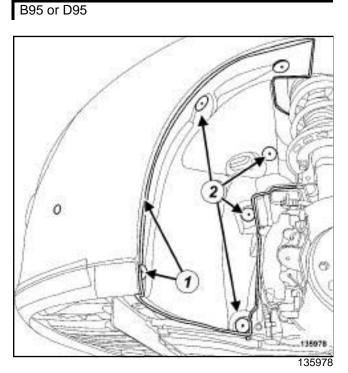


□ Remove:

- the bolts  $\left( 1\right)$  ,
- the clips  $(\mathbf{2})$  ,
- front wheel arch liner, front section.

J95

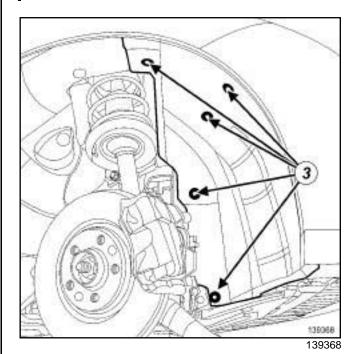

□ Remove the clips (3).

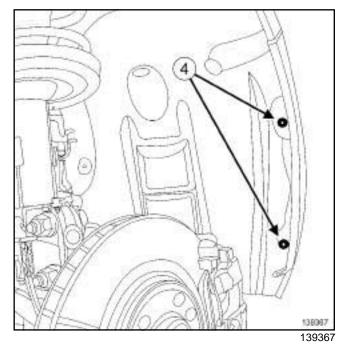


- Remove:
  - the bolts  $(\mathbf{4})$  ,
  - front wheel arch liner, front section.

# EXTERIOR PROTECTION Front wheel arch liner: Removal - Refitting



### 2 - Front wheel arch liner, rear section


### B95 or D95

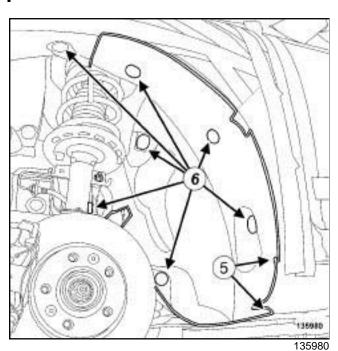

Remove:

- the bolts (5) ,
- the clips (6),
- front wheel arch liner, rear section.

J95

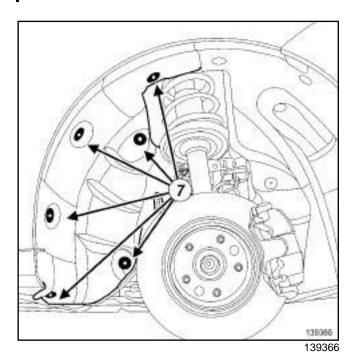

#### □ Remove:

- the clips  $(\mathbf{7})$  ,
- front wheel arch liner, rear section.

## REFITTING

- **I REFITTING PREPARATION OPERATION**
- Check the condition of the clipsand replace them if necessary.

# II - REFITTING OPERATION FOR PART CONCERNED

1 - Front wheel arch liner, rear section

### B95 or D95

Refit:

- the front wheel arch liner, rear section,
- the clips (6),
- the bolts (5) .



## J95

Refit:

- the front wheel arch liner, rear section,
- the clips (7) .

2 - Front wheel arch liner, front section

### B95 or D95

Refit:

- the front wheel arch liner, front section,
- the clips (2),
- the bolts (1).

### J95

Refit:

- the front wheel arch liner, front section,
- the clips (3),
- the bolts (4).

### **III - FINAL OPERATION**

Refit the front wheel (see Wheel: Removal - Refitting) (35A, Wheels and tyres).

# EXTERIOR PROTECTION Rear wheel arch liner: Removal - Refitting




### REMOVAL

### I - REMOVAL PREPARATION OPERATION


- Position the vehicle on a two-post lift (see Vehicle: Towing and lifting) (02A, Lifting equipment).
- Remove the rear wheel (see Wheel: Removal Refitting) (35A, Wheels and tyres).

# II - OPERATION FOR REMOVAL OF PART CONCERNED

B95 or D95

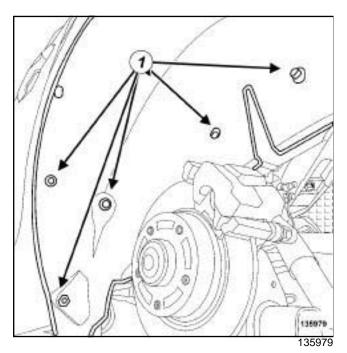


□ Remove the plastic nuts (1).

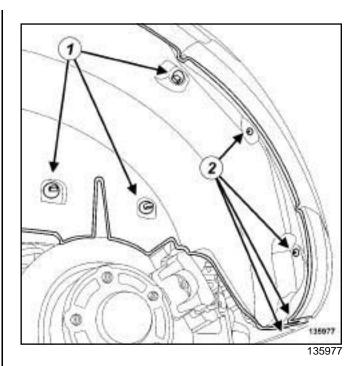

- Remove:
  - the plastic nuts (1),
  - the bolts  $\left( 2\right)$  ,
  - the rear wheel arch liner.


J95

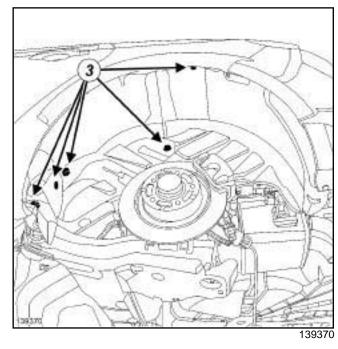

□ Remove the plastic nuts (3).

# EXTERIOR PROTECTION Rear wheel arch liner: Removal - Refitting



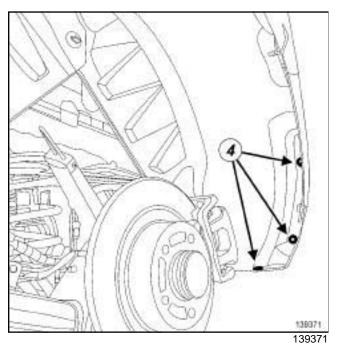

□ Remove:

- plastic rivets (4),
- the rear wheel arch liner.

## REFITTING

### I - REFITTING PREPARATION OPERATION

□ Check the condition of the plastic nuts and replace them if necessary.

### II - REFITTING OPERATION FOR PART CONCERNED

### B95 or D95

### Refit:

- the rear wheel arch liner,
- the plastic nuts (1),
- the bolts (2).

### J95

Refit:

- the rear wheel arch liner,

- the plastic nuts (3),

- the plastic rivets (4).

### **III - FINAL OPERATION**

Refit the rear wheel (see Wheel: Removal - Refitting) (35A, Wheels and tyres).

# EXTERIOR PROTECTION A-pillar trim piece: Removal - Refitting



#### J95

### **Essential special tooling**


Set of trim removal levers.

Car. 1363

## REMOVAL


- I REMOVAL PREPARATION OPERATION
- Remove the scuttle panel grille (see 56A, Exterior equipment, Scuttle panel grille: Removal - Refitting, page 56A-1).

### II - OPERATION FOR REMOVAL OF PART CONCERNED

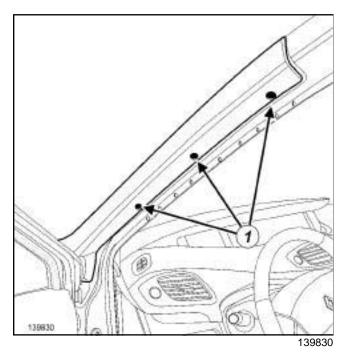


□ Remove the bolts (1).

□ Protect the front wing using masking tape.

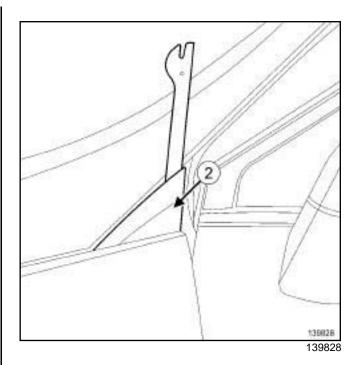

Unclip the trim (2) using the tool (Car. 1363).

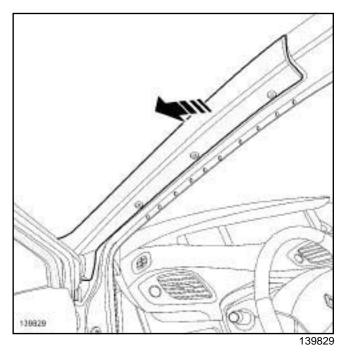

□ Remove the windscreen pillar trim using the tool (Car. 1363).

## REFITTING

### I - REFITTING PREPARATION OPERATION

□ parts always to be replaced: windscreen pillar trim clip (50,07,04,16).



### J95

# II - REFITTING OPERATION FOR PART CONCERNED

- □ Refit the windscreen pillar trim.
- □ Clip the trim piece in place (2).
- □ Refit the bolts (1).

### **III - FINAL OPERATION**

Refit the scuttle panel grille (see 56A, Exterior equipment, Scuttle panel grille: Removal - Refitting, page 56A-1).

## EXTERIOR PROTECTION Front side door pillar exterior trim Removal - Refitting

55A


137381 137381

## REMOVAL

### I - REMOVAL PREPARATION OPERATION

□ Remove:

- the door mirror (see 56A, Exterior equipment, Door mirror: Removal Refitting, page 56A-15),
- the front side door exterior weatherstrip (see Front door side exterior weather strip: Removal - Refitting) (66A, Window sealing),
- the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening element trim),
- the door sealing films (see **Door sealing film: Removal - Refitting**) (65A, Opening element sealing),
- the front side door sliding window (see 54A, Windows, Sliding window in front side door: Removal - Refitting, page 54A-3).

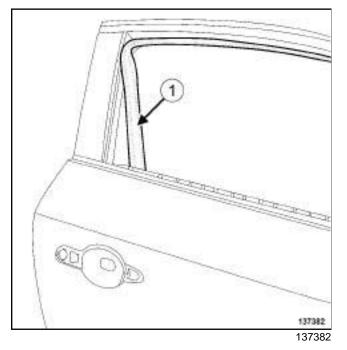


□ Partially remove the front side door window run channel at (1).

# II - OPERATION FOR REMOVAL OF PART CONCERNED

Note:

When removing the front side door pillar exterior trim, take care not to damage the part. Any damaged parts must be replaced.

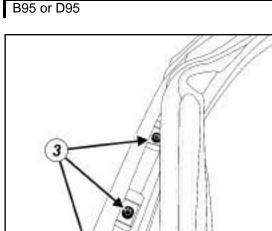


Remove:

- the bolts  $({\bf 3})$  ,
- the front side door pillar exterior trim.

## EXTERIOR PROTECTION Front side door pillar exterior trim Removal - Refitting



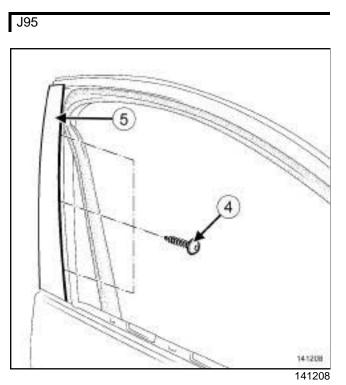

### □ Remove:

- the bolts  $\left( 4\right)$  ,
- the front side door pillar exterior trim (5) .


## REFITTING

### I - REFITTING PREPARATION OPERATION

□ parts always to be replaced: parts included in the acoustic and fitting foam kit (50,07,04,14).

# II - REFITTING OPERATION FOR PART CONCERNED

- Refit the lower section of the front side door pillar exterior trim.
- □ Fit the upper section of the front side door glass run channel.
- Position the front side door pillar exterior trim on the upper section of the window run channel.

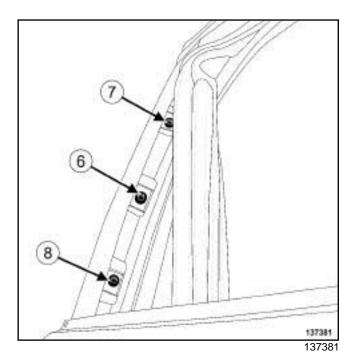

#### Refit:

- the centre bolt (6) while holding the front side door pillar exterior trim in place,
- the upper (7) and lower bolts (8).

### **III - FINAL OPERATION**

- □ Refit the front door window run channel.
- □ Check the alignment of the front side door pillar exterior trim with the rear door.

#### Note:

If the clearance between the front side door pillar exterior trim and the rear side door is skewed, adhesive shims may be bonded to the front side door pillar exterior trim supports to compensate. This operation requires the removal of the front side door pillar exterior trim.

## EXTERIOR PROTECTION Front side door pillar exterior trim Removal - Refitting




### Refit:

- the front side door sliding window (see 54A, Windows, Sliding window in front side door: Removal Refitting, page 54A-3),
- the door sealing films (see **Door sealing film: Removal - Refitting**) (65A, Opening elements sealing).
- □ Carry out a sealing test (see Technical Note 0653A).
- Refit:
  - the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the front side door exterior weatherstrip (see Front door side exterior weather strip: Removal - Refitting) (66A, Window sealing),
  - the door mirror (see 56A, Exterior equipment, Door mirror: Removal Refitting, page 56A-15).

## **EXTERIOR PROTECTION**

## Rear side door pillar exterior trim Removal - Refitting

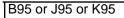

### REMOVAL

### I - REMOVAL PREPARATION OPERATION

- □ Remove:
  - the rear side door trim (see **Rear side door trim: Removal Refitting**) (72A, Side opening element trim),
  - the door sealing films (see **Door sealing film: Removal - Refitting**) (65A, Opening elements sealing).


B95 or K95

- Remove the rear speaker (see Rear speakers: Removal - Refitting) (86A, Radio).
- Remove the sliding window from the rear side door (see 54A, Windows, Sliding window in rear side door: Removal - Refitting, page 54A-7).

J95


□ Remove the exterior weatherstrip.

# 1 - Front section of rear side door pillar exterior trim

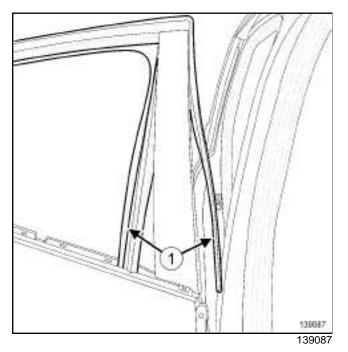


Partially remove the front section of the rear side door window run channel (1). 2 - Rear section of rear side door pillar exterior trim

55

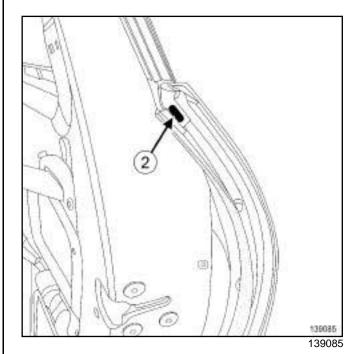

Unfasten clip (2).

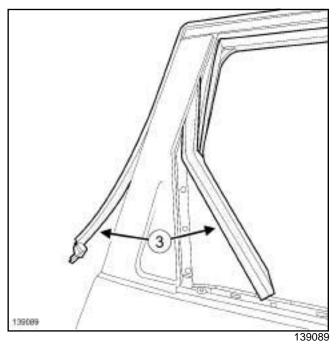

Partially remove the rear section of the rear side door window run channel (3).


## EXTERIOR PROTECTION

## Rear side door pillar exterior trim Removal - Refitting

### B95 or J95 or K95

# II - OPERATION FOR REMOVAL OF PART CONCERNED

### B95 or K95

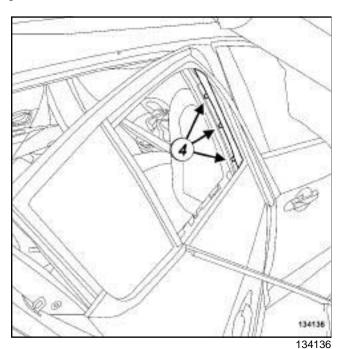


- Remove:
  - the bolts  $\left( 4\right)$  ,
  - the rear side door pillar exterior trim.


J95

1 - Front section of rear side door pillar exterior trim

**55A** 

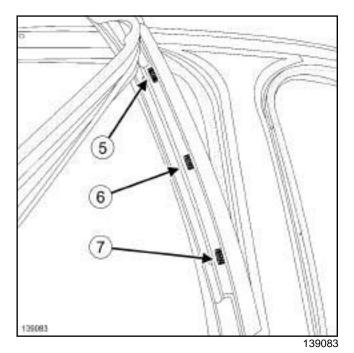

### $\hfill\square$ Remove the bolts (5) , (6) and (7) .

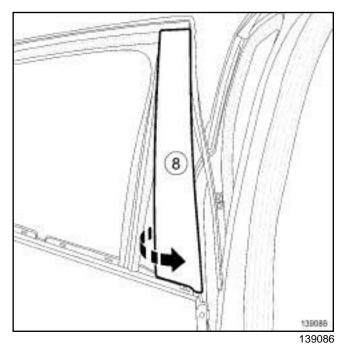


□ Remove the front section of the rear side door pillar exterior trim (8).

## **EXTERIOR PROTECTION**

## Rear side door pillar exterior trim Removal - Refitting


### B95 or J95 or K95

2 - Rear section of rear side door pillar exterior trim

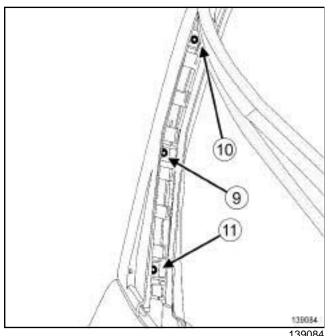

139084

□ Remove the bolts (9), (10) and (11).

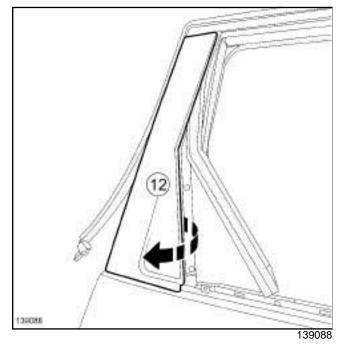

□ Remove the rear section of the rear side door pillar exterior trim (12).

## REFITTING


- **I REFITTING PREPARATION OPERATION**
- □ parts always to be replaced: parts included in the acoustic and fitting foam kit (50,07,04,14).

55

#### **II - REFITTING OPERATION FOR PART** CONCERNED

### B95 or K95

- □ Refit the lower section of the rear side door pillar exterior trim.
- □ Fit the upper section of the rear side door glass run channel.
- Desition the rear side door pillar exterior trim on the upper section of the window run channel.

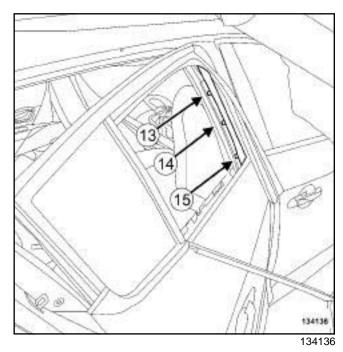

C Refit:

- the centre bolt (14) while holding the rear side door pillar exterior trim in place,
- the upper (15) and lower bolts (13).

## **EXTERIOR PROTECTION**

### Rear side door pillar exterior trim Removal - Refitting

B95 or J95 or K95

J95

# 1 - Front section of rear side door pillar exterior trim

- Refit the lower part of the front section of the rear side door pillar exterior trim.
- □ Fit the upper part of the front section of the rear side door window run channel.
- Position the front section of the rear side door pillar exterior trim on the upper section of the window run channel.
- Refit:
  - the centre bolt **(6)** while holding the front section of the rear side door pillar exterior trim in place,
  - the upper (5) and lower bolts (7).

#### 2 - Rear section of rear side door pillar exterior trim

- Refit the lower part of the rear section of the rear side door pillar exterior trim.
- □ Fit the upper part of the rear section of the rear side door window run channel.
- Position the rear section of the rear side door pillar exterior trim on the upper section of the window run channel.
- Refit:
  - the centre bolt **(9)** while holding the rear section of the rear side door pillar exterior trim in place,
  - the upper (10) and lower bolts (11).

#### **III - FINAL OPERATION**

#### J95

Refit:

- the rear side door window glass run channel,
- the exterior weatherstrip.

□ Check the alignment of the rear side door pillar exterior trim with the front door.

#### Note:

If the clearance between the rear side door pillar exterior trim and the front side door is skewed, adhesive shims may be bonded to the rear side door pillar exterior trim supports to compensate. This operation requires the removal of the rear side door exterior trim.

#### J95

- Engage clip (2).
- Refit the sliding window in the rear side door (see 54A, Windows, Sliding window in rear side door: Removal - Refitting, page 54A-7).

#### B95 or K95

- Refit the rear speaker (see Rear speakers: Removal Refitting) (86A, Radio).
- Refit the door sealing films (see Door sealing film: Removal - Refitting) (65A, Opening elements sealing).
- □ Carry out a sealing test (see Technical Note 0653A).
- Refit the rear side door trim (see Rear side door trim: Removal - Refitting) (72A, Side opening element trim).



B95 or D95 or K95

#### Essential special tooling

Car. 1363


\_\_\_\_\_

Set of trim removal levers.


#### REMOVAL

#### I - REMOVAL PREPARATION OPERATION


Remove the windscreen wiper arms (see Windscreen wiper arm: Removal - Refitting) (85A, Wiping - Washing).

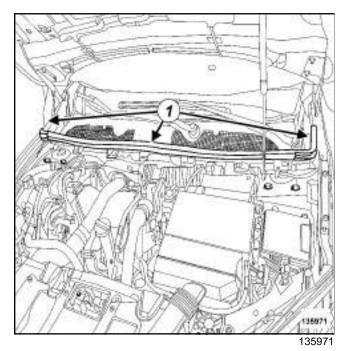

 $\Box$  Remove the sealing rings (1).

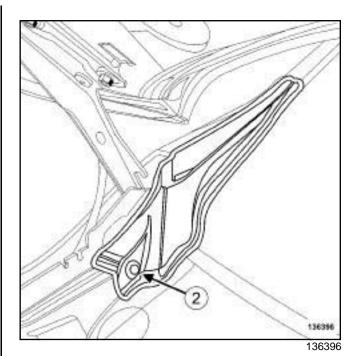

□ Remove the clips (2).

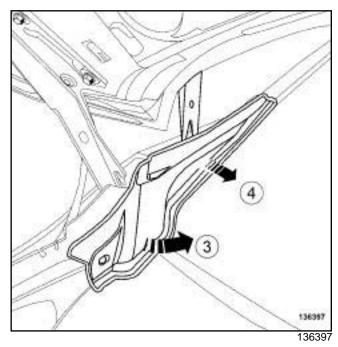


□ Unclip the lower windscreen trims using the tool (Car. 1363) by slightly turning the upper clip at (3) and (4).



#### B95 or D95 or K95

#### II - OPERATION FOR REMOVAL OF PART CONCERNED

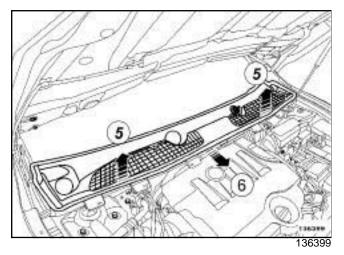

□ Remove the scuttle panel grille at (5) and (6) .


#### REFITTING

#### I - REFITTING PREPARATION OPERATION

#### Note:

Check that the windscreen and the scuttle panel grille are clean before refitting.

□ parts always to be replaced: clip under scuttle panel grille (50,07,06,12).

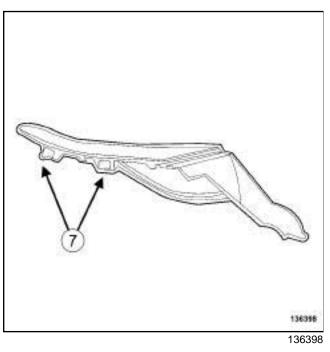

□ Check the clips (7) on the windscreen lower trims and replace them, if necessary.

# II - OPERATION FOR REFITTING PART CONCERNED

□ Refit the scuttle panel grille.

#### **III - FINAL OPERATION**

- □ Clip on the lower windscreen trims.
- Refit:
  - the clips,
  - the seals,
  - the windscreen wiper arms (see **Windscreen wiper arm: Removal Refitting**) (85A, Wiping Washing).




J95

#### REMOVAL


#### I - REMOVAL PREPARATION OPERATION

#### 1 - Centre section of the scuttle panel grille

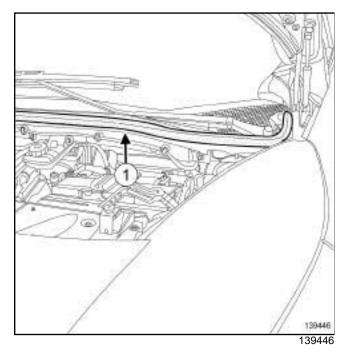

□ Remove the bonnet seal (1).

#### 2 - Side sections of the scuttle panel grille

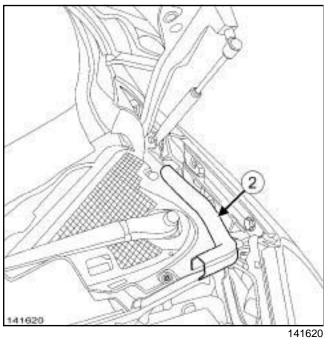


- Remove:
  - the bonnet side seals (2),

- the windscreen wiper arms (see **Windscreen wiper arm: Removal - Refitting**) (85A, Wiping - Washing).

II - OPERATION FOR REMOVAL OF PART CONCERNED

1 - Centre section of the scuttle panel grille

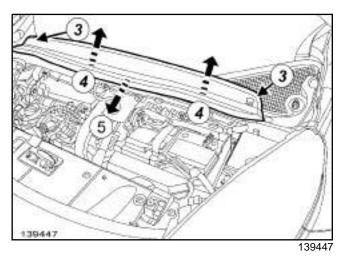



- □ Unclip the centre section of the scuttle panel grille using a flat-blade screwdriver at (3).
- □ Remove the centre section of the scuttle panel grille at (4) and (5).




#### J95

2 - Side sections of the scuttle panel grille

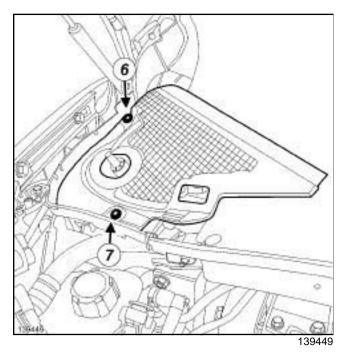

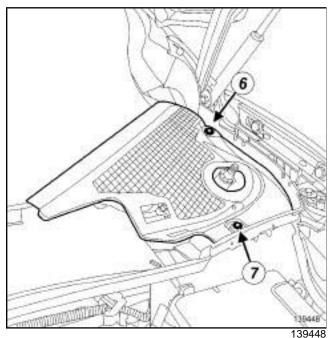

- □ Remove:
  - plastic rivets  $({\bf 6})$  ,
  - the bolts  $\left( 7\right)$  .

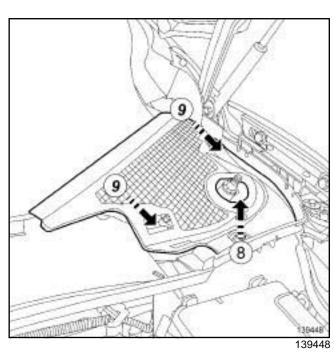

□ Remove the side sections of the scuttle panel grille at (8) and at (9).

#### REFITTING

#### I - REFITTING PREPARATION OPERATION

□ parts always to be replaced: clip under scuttle panel grille (50,07,06,12).

# II - REFITTING OPERATION FOR PART CONCERNED

- 1 Side sections of the scuttle panel grille
- Refit:
  - the side sections of the scuttle panel grille,
  - the bolts (7),
  - the plastic rivets (6).

#### 2 - Centre section of the scuttle panel grille

- □ Refit the centre section of the scuttle panel grille.
- Clip the centre section of the scuttle panel grille in place.



#### J95

#### **III - FINAL OPERATION**

1 - Side sections of the scuttle panel grille

Refit:

- the windscreen wiper arms (see **Windscreen wiper arm: Removal Refitting**) (85A, Wiping Washing),
- the bonnet side seals (2).

#### 2 - Centre section of the scuttle panel grille

□ Refit the bonnet seal (1).

## EXTERIOR EQUIPMENT Tailgate spoiler: Removal - Refitting


56A

#### D95


#### REMOVAL

#### I - REMOVAL PREPARATION OPERATION


□ Partially remove the tailgate trim.

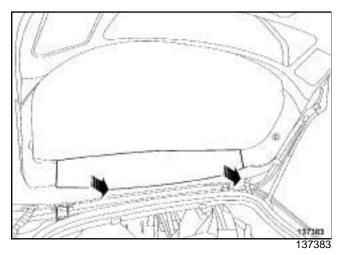

□ Remove the centre section.

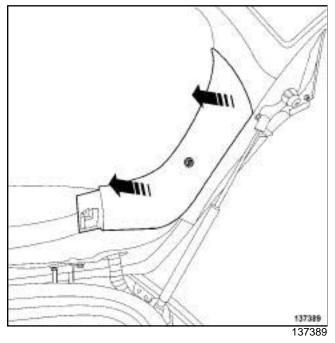


□ Remove the side sections.

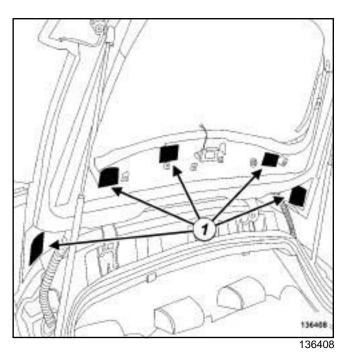

□ Remove the adhesive foam (1).

# II - OPERATION FOR REMOVAL OF PART CONCERNED

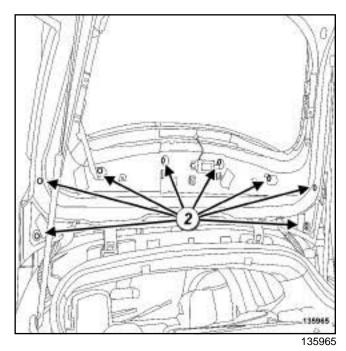


<sup>□</sup> Remove the bolts (2).


## EXTERIOR EQUIPMENT Tailgate spoiler: Removal - Refitting



D95

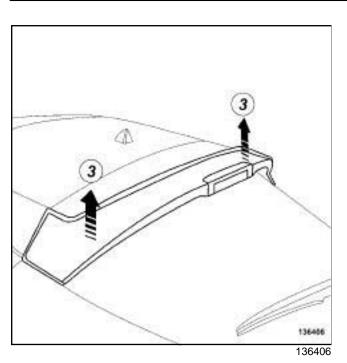

 $\hfill \square$  Partially unclip the tailgate spoiler at (3) .

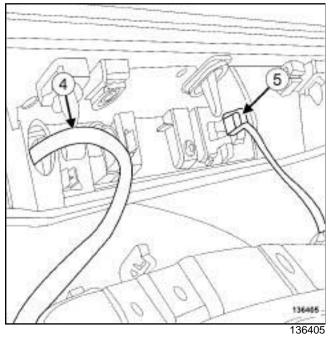


Disconnect:

- the rear screen washer jet pipe  $({\bf 4})$  ,
- the high level brake light connector  ${\bf (5)}$  .
- □ Remove the tailgate spoiler.

#### REFITTING

- I REFITTING PREPARATION OPERATION
- □ parts always to be replaced: parts included in the sealing kit (50,07,02,07).

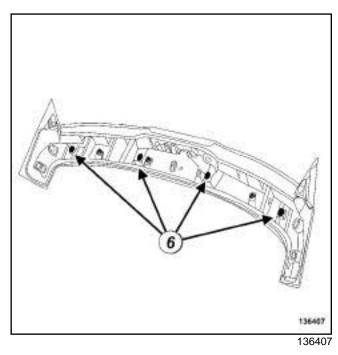

□ Check the condition of the clips (6) and replace them if necessary.

# II - REFITTING OPERATION FOR PART CONCERNED

Connect:

- the high level brake light connector (5),
- the rear screen washer jet pipe (4).
- □ Fit the tailgate spoiler.
- □ Clip the tailgate spoiler.
- □ Refit the bolts (2) starting at the centre and working outwards.

#### **III - FINAL OPERATION**

- Refit:
  - the blanking covers (1),
  - the side sections,
  - the centre section.
- Carry out a function test.

## EXTERIOR EQUIPMENT

## Scoop under scuttle panel grille: Removal - Refitting

B95 or D95 or K95


#### REMOVAL

#### I - REMOVAL PREPARATION OPERATION

# 1 - Centre section of the scoop under the scuttle panel grille


□ Remove:

- the windscreen wiper arms (see **Windscreen wiper arm: Removal Refitting**) (85A, Wiping Washing),
- the scuttle panel grille (see 56A, Exterior equipment, Scuttle panel grille: Removal - Refitting, page 56A-1).

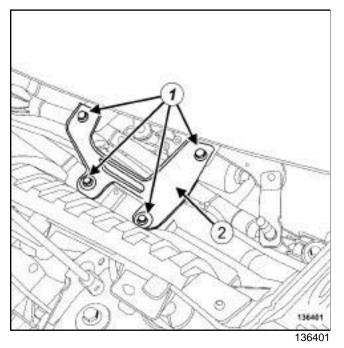


Remove:

- -the bolts  $(\mathbf{1})$  , marking them according to their length,
- the reinforcing linkage (2) .

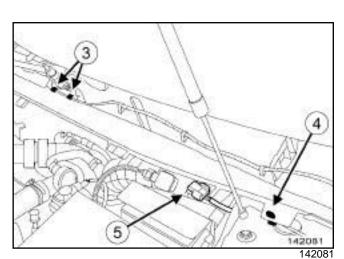

**56** 


# 2 - Side section of the scoop under the scuttle panel grille

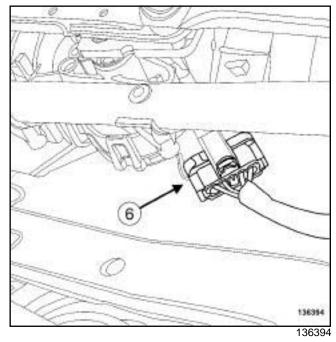


Disconnect the connector from the windscreen wiper motor (6).

# Unclip: the wiper motor wiring at (3) , the clip (4) , the spare connector (5) . 2 - Side section of the scoop units of

#### B95 or D95 or K95

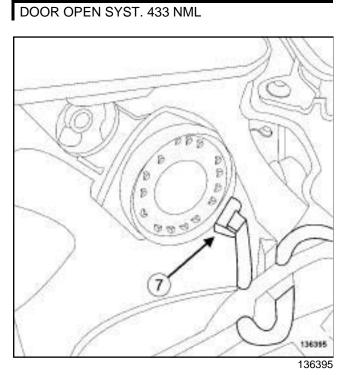

□ Disconnect the connector from the remote central door locking warning (7).

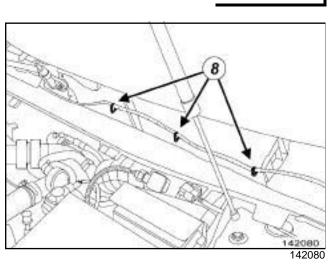


□ Unclip the wiring (8)


#### II - OPERATION FOR REMOVAL OF PART CONCERNED

1 - Centre section of the scoop under the scuttle panel grille

**56A** 

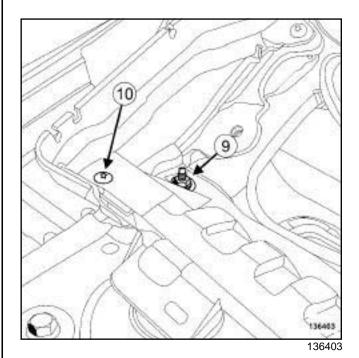

- Remove:
  - the nuts (9),
  - the bolts (10)

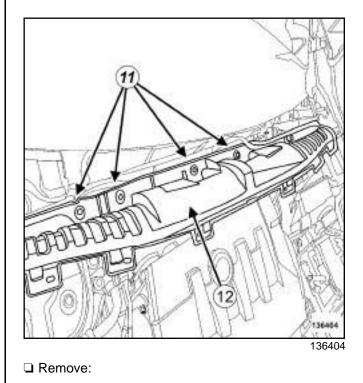


- the bolts (11) ,

## Scoop under scuttle panel grille: Removal - Refitting

#### B95 or D95 or K95

- the scoop under the central part of the scuttle panel grille  $(\mathbf{12})$  .

# 2 - Side section of the scoop under the scuttle panel grille

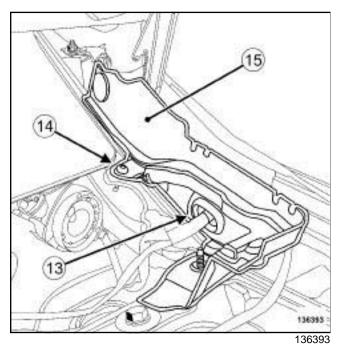

#### Remove:

- the wiring (13)
- the bolts (14) from the scoops under the side sections of the scuttle panel grille,
- the scoops under the side sections of the scuttle panel grille  $(\mathbf{15})$ .

#### REFITTING

Note:

#### I - REFITTING PREPARATION OPERATION

Clean the sealing foam on the scoop under the scuttle panel grille and the joint surface.

parts always to be replaced: Deflector sealing foam under scuttle panel grille (50,07,06,09).

#### II - REFITTING OPERATION FOR PART CONCERNED

# 1 - Side section of the scoop under the scuttle panel grille

Refit the scoops under the side sections of the scuttle panel grille.

# 2 - Centre section of the scoop under the scuttle panel grille

Refit the scoop under the central part of the scuttle panel grille.

#### **III - FINAL OPERATION**

# 1 - Side section of the scoop under the scuttle panel grille

Clip on the wiring.

DOOR OPEN SYST. 433 NML

Connect the connector of the remote central door locking warning.

□ Connect the windscreen wiper motor connector.

# 2 - Centre section of the scoop under the scuttle panel grille

- Refit:
  - the spare connector (5).
  - the clip (4),
  - the wiper motor wiring,
  - the reinforcing linkage,
  - the scuttle panel grille (see 56A, Exterior equipment, Scuttle panel grille: Removal Refitting, page 56A-1),
  - the windscreen wiper arms (see **Windscreen wiper arm: Removal Refitting**) (85A, Wiping Washing).

□ Carry out a function test.



J95

secondary brake fluid reservoir bolts

8 N.m

#### REMOVAL


#### I - REMOVAL PREPARATION OPERATION

1 - Centre section of the scoop under the scuttle panel grille


Note:

It is not necessary to remove the windscreen wiper arms in order to remove the centre section of the scoop under the scuttle panel grill.

Remove the centre section of the scuttle panel grille (see 56A, Exterior equipment, Scuttle panel grille: Removal - Refitting, page 56A-1).

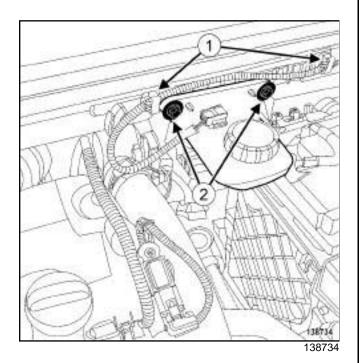



- Unclip the secondary brake fluid reservoir wiring at
   (1).
- □ Remove the secondary brake fluid reservoir bolts (2)
- □ Move aside the secondary brake fluid reservoir.

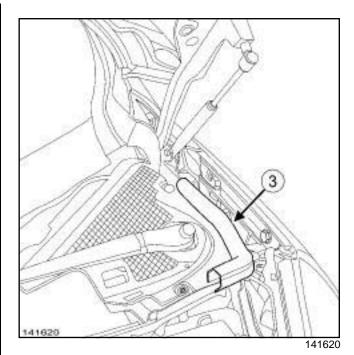

 $\hfill\square$  Remove the bonnet side seal (3) .




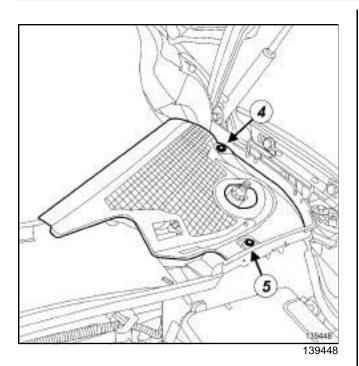

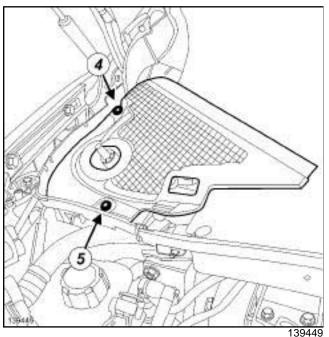

Remove:

- plastic rivets (4),
- the bolts  $({\bf 5})$  .

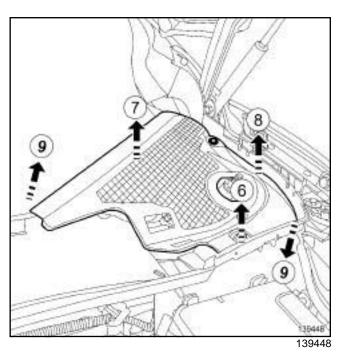

**56A** 

- Lift the side sections of the scuttle panel grille at (6).
- $\hfill\square$  Unclip the side sections of the scuttle panel grille at (7) .
- $\hfill\square$  Lift the side sections of the scuttle panel grille at  $({\bf 8})$  .
- $\hfill \Box$  Pivot the side sections of the scuttle panel grille at (9) .

# 2 - Side sections of the scoop under the scuttle panel grille

□ Remove:


- the windscreen wiper arms (see Windscreen wiper arm: Removal Refitting) (85A, Wiping Washing),
- the side sections of the scuttle panel grille (see 56A, Exterior equipment, Scuttle panel grille: Removal Refitting, page 56A-1).



#### J95

#### II - OPERATION FOR REMOVAL OF PART CONCERNED


# 1 - Centre section of the scoop under the scuttle panel grille

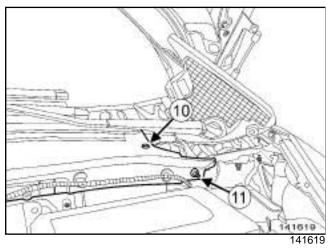

□ Remove:


- the clips (10) ,

- the nuts  $(\boldsymbol{11})$  .

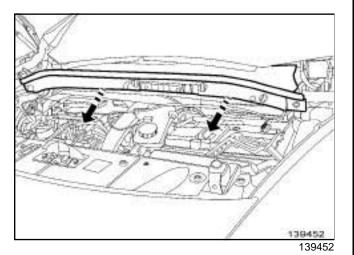

Remove the centre section of the scoop under the scuttle panel grille.

2 - Side sections of the scoop under the scuttle panel grille

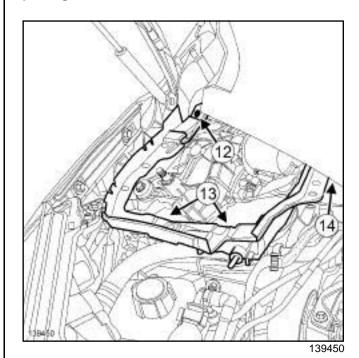

- Remove:
  - the clips (12),
  - the bolts (13),
  - the nuts (14),
  - the side sections of the scoop under the scuttle panel grille.

#### REFITTING

#### I - REFITTING PREPARATION OPERATION

□ Clean the relevant joint areas of the scoop under the scuttle panel grille.

#### II - REFITTING OPERATION FOR PART CONCERNED

# 1 - Side sections of the scoop under the scuttle panel grille

Refit:

- the side sections of the scoop under the scuttle panel grille,
- the nuts (14) ,
- the bolts  $(\mathbf{13})$  ,
- the clips (12) .

## Scoop under scuttle panel grille: Removal - Refitting



J95

- 2 Centre section of the scoop under the scuttle panel grille
- Refit:
  - the centre section of the scoop under the scuttle panel grille,
  - the nuts (11),
  - the clips  $({\bf 10})$  .

#### **III - FINAL OPERATION**

# 1 - Side sections of the scoop under the scuttle panel grille

Refit:

- the side sections of the scuttle panel grille (see 56A, Exterior equipment, Scuttle panel grille: Removal Refitting, page 56A-1),
- the windscreen wiper arms (see **Windscreen wiper arm: Removal Refitting**) (85A, Wiping Washing).

# 2 - Centre section of the scoop under the scuttle panel grille


- □ Fit the side sections of the scuttle panel grille.
- Refit:
  - the bolts  $({\bf 5})$  ,
  - plastic rivets (4),
  - the bonnet side seals (3).
  - the secondary brake fluid reservoir.
- □ Torque tighten the secondary brake fluid reservoir bolts (8 N.m).
- Clip the secondary brake fluid reservoir wiring in place.
- □ Refit the centre section of the scuttle panel grille (see 56A, Exterior equipment, Scuttle panel grille: Removal - Refitting, page 56A-1).



#### B95 or D95 or K95

#### REMOVAL

#### I - REMOVAL PREPARATION OPERATION

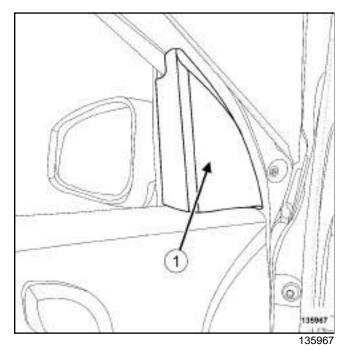


**Remove the door mirror trim (1)**.

# II - OPERATION FOR REMOVAL OF PART CONCERNED



 $\hfill\square$  Disconnect the connector (2) .

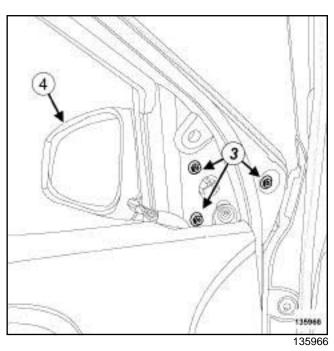

Remove:

- the bolts (3),

- the door mirror (4) .

#### REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
  - the door mirror (4),
  - the bolts (3).
- Connect the connector (2).
- □ Carry out a function test.

#### **II - FINAL OPERATION**

**□** Refit the door mirror trim (1).

## EXTERIOR EQUIPMENT Door mirror: Removal - Refitting




J95

Tightening torques $\heartsuit$	
door mirror bolts	8 N.m

REMOVAL


#### I - REMOVAL PREPARATION OPERATION

Remove the front side door trim (see Front side door trim: Removal - Refitting) (72A, Side opening elements trim).

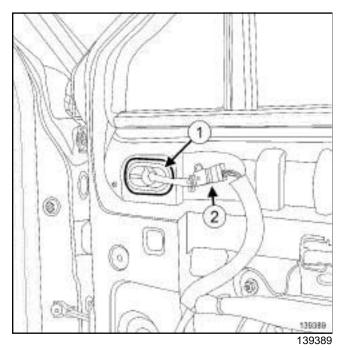

- □ Remove the blanking cover (1).
- Disconnect the connector (2).

#### II - OPERATION FOR REMOVAL OF PART CONCERNED

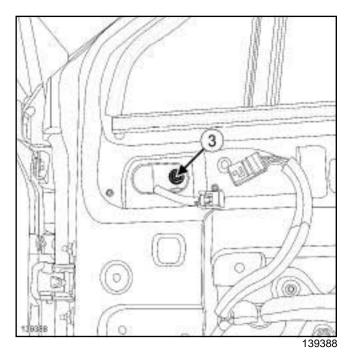

- □ Remove:
  - the bolt (3) ,
  - the door mirror.

#### REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

- Refit the door mirror.
- Torque tighten the door mirror bolts (8 N.m) (3).

#### **II - FINAL OPERATION**

Connect the connector (2).

Refit:

- the blanking cover (1),
- the front side door trim (see **Front side door trim: Removal Refitting**) (72A, Side opening elements trim).


## **EXTERIOR EQUIPMENT Door mirror casing: Removal - Refitting**

**Essential special tooling** 



142086


142088 142089

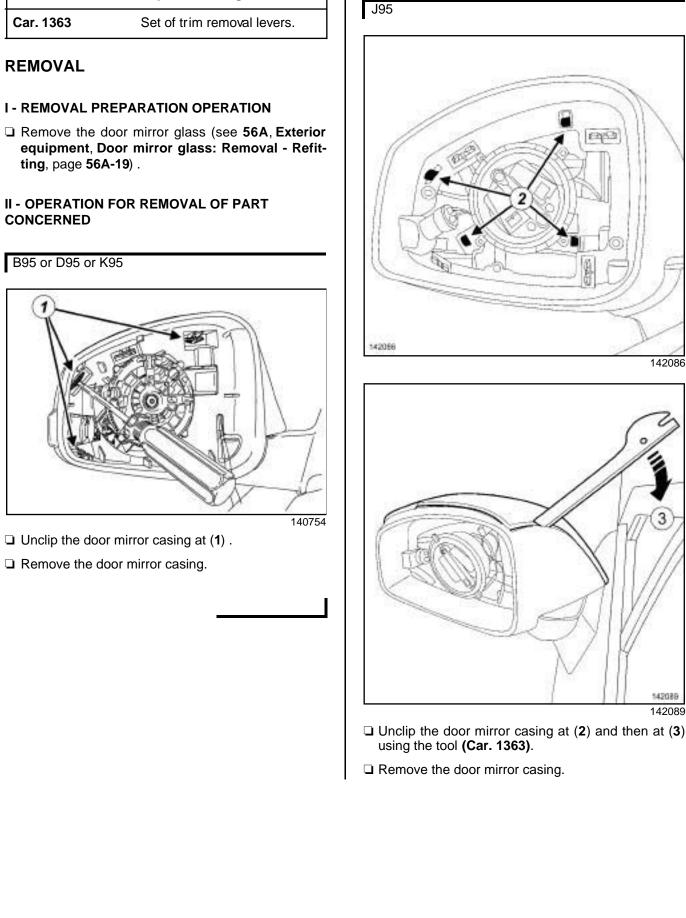



#### Note:

The Parts Department supplies the door mirror casings unpainted, but the casings may be separated for painting.

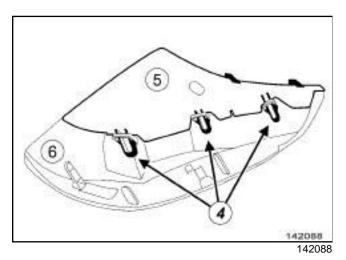

□ Squeeze the clips (4).

 $\hfill\square$  Separate the door mirror casings (5) and (6) .

#### REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

J95

□ Assemble the door mirror casings.

□ Refit the door mirror casing.

#### **II - FINAL OPERATION**

Refit the door mirror glass (see 56A, Exterior equipment, Door mirror glass: Removal - Refitting, page 56A-19).

## EXTERIOR EQUIPMENT Door mirror glass: Removal - Refitting




**Essential special tooling** 

Car. 1363

Set of trim removal levers.

#### REMOVAL

# OPERATION FOR REMOVAL OF PART CONCERNED

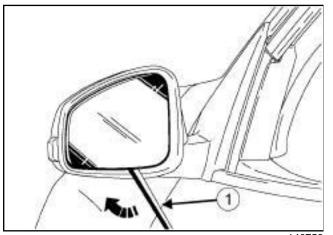

140756

- Protect the edges of the door mirror (1) with masking tape.
- □ Unclip the door mirror glass using the (Car. 1363).
- Disconnect the connector.

#### REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

- □ Connect the connector.
- □ Clip the exterior door mirror glass into place.

#### **II - FINAL OPERATION**

□ Carry out a function test.

## EXTERIOR EQUIPMENT Roof rack bar: Removal - Refitting



#### SATINY ROOF BARS

Car. 1363

Essential special tooling


63 Set of trim removal levers.

 Tightening torques
 Image: Constraint of the second sec

12 N.m


#### REMOVAL

#### I - REMOVAL PREPARATION OPERATION

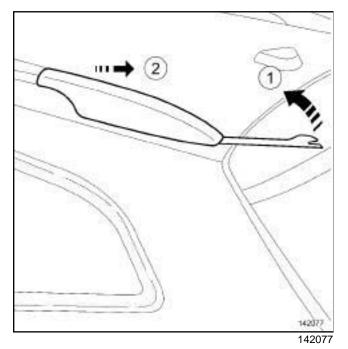

□ Remove the roof bar trims using the tool (Car. 1363) at (1) and (2).

#### II - OPERATION FOR REMOVAL OF PART CONCERNED

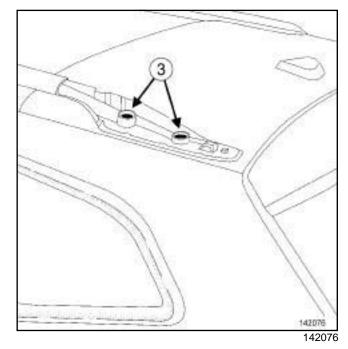

- Remove:
  - the roof bar bolts (3),
  - the roof bar.

#### REFITTING


- I REFITTING PREPARATION OPERATION
- □ parts always to be replaced: Roof bar bolts (50, 07,22,01).
- □ parts always to be replaced: roof bar sealing foam (50,07,22,03).

## EXTERIOR EQUIPMENT Roof rack bar: Removal - Refitting



#### SATINY ROOF BARS



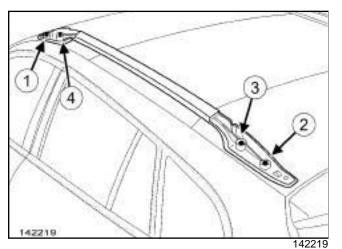

- Refit the roof bar.
- Torque tighten in order the **roof bar bolts (12 N.m)**.

#### **III - FINAL OPERATION**

□ Refit the roof bar trims.

## EXTERIOR EQUIPMENT Rear badges: Removal - Refitting



#### **Essential special tooling**


Car. 1363

Set of trim removal levers.

#### REMOVAL

# REMOVAL OPERATION FOR THE MANUFACTURER'S BADGE

#### B95 or D95 or J95 or K95

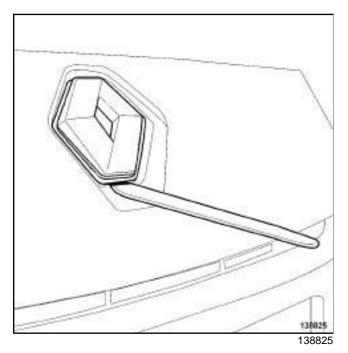

Unclip the manufacturer's badge using the tool (Car. 1363).

#### REFITTING


# I - REFITTING OPERATION FOR THE MANUFACTURER'S BADGE

□ Clip on the manufacturer's badge.

# II - REFITTING OPERATION FOR THE MANUFACTURER'S BADGE

- Clean the adhesive surface of the vehicle badge using a LINT-FREE CLOTH soaked in HEPTANE (see Vehicle: Parts and ingredients for the repairwork) (04B, Consumables - Products).
- □ Wipe the adhesive surface of the vehicle badge with a clean, dry LINT-FREE CLOTH.


#### B95 or D95

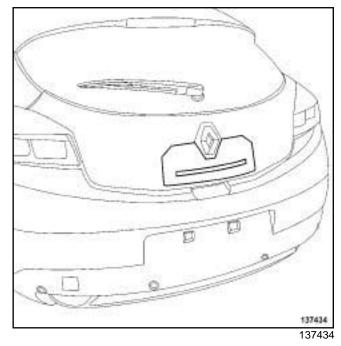

- Desition the template badge unit.
- Remove the protective paper from the back of the vehicle badge.
- □ Stick on the vehicle badge.
- □ Remove the template.


## EXTERIOR EQUIPMENT Rear badges: Removal - Refitting



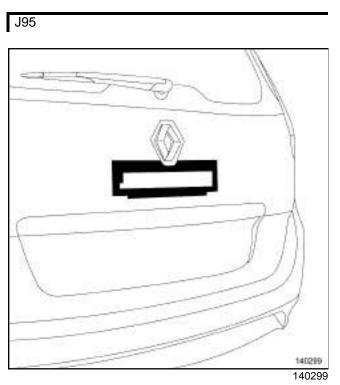

- Desition the template badge unit.
- Remove the protective paper from the back of the vehicle badge.
- □ Stick on the vehicle badge.
- □ Remove the template.

K95

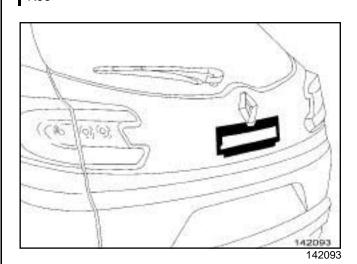

- Desition the template badge unit.
- Remove the protective paper from the back of the vehicle badge.
- □ Stick on the vehicle badge.
- □ Remove the template.



B95 or D95

#### Tightening torques

the passenger airbag bolts on the cross member 8 N.m

#### REMOVAL

#### I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see Battery: Removal -Refitting) (80A, Battery).
- Remove:
  - the windscreen pillar trims (see **A-pillar trim: Removal - Refitting**) (71A, Body internal trim),
  - the centre console (see **57A**, **Interior equipment**, **Centre console: Removal Refitting**, page **57A-29**),
  - the driver's front airbag (see **Driver's front airbag: Removal Refitting**) (88C, Airbags and pretensioners),
  - the steering wheel (see **Steering wheel: Removal Refitting**) (36A, Steering assembly),
  - the steering column switch assembly (see **Steering wheel controls assembly: Removal Refitting**) (84A, Controls Signalling),
  - the inhibitor switch (see **Inhibitor switch: Remo**val - Refitting) (88C, Airbags and pretensioners),
  - the dashboard lower trim (see 57A, Interior equipment, Lower section of dashboard trim: Removal Refitting, page 57A-10),
  - the glovebox (see 57A, Interior equipment, Glovebox: Removal Refitting, page 57A-25),
  - the centre front panel (see 57A, Interior equipment, Centre front panel: Removal - Refitting, page 57A-20),
  - the card reader (see **Card reader: Removal Re-fitting**) (82A, Immobiliser),
  - the control panel (see **Control panel: Removal - Refitting**) (61A, Heating).

RADIO NO 01 or RADIO NO 02 or RADIO NO 03 or RADIO NO 04 or RADIO NO 05

- Remove:
  - the radio (see **Car radio: Removal Refitting**) (86A, Radio),

- the display (see **Display: Removal - Refitting**) (86A, Radio).

RADIO NO 06 or RADIO NO 07


□ Remove:

- the radio navigation system (see **Radio navigation system: Removal - Refitting**) (83C, Onboard telematics system),
- the navigation screen (see **Navigation screen: Removal Refitting**) (83C, On-board telematics system).

Remove:


- the instrument panel (see Instrument panel: Removal - Refitting) (83A, Instrument panel),
- the dashboard centre air vent (see **57A**, **Interior equipment**, **Dashboard air vent: Removal - Re fitting**, page **57A-17**),
- the tweeters from the upper section of the dashboard (see **Tweeter: Removal - Refitting**) (86A, Radio).

#### **RIGHT-HAND DRIVE**

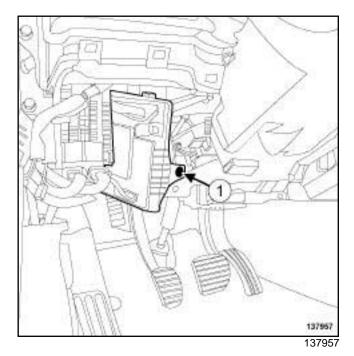

**Remove the bolt (1) from the UCH.** 

B95 or D95

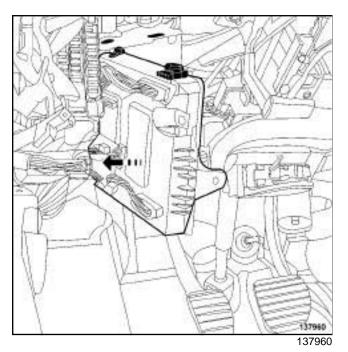


□ Move aside the UCH.

Mark the routing of the dashboard wiring and the location of its mountings around the passenger front airbag unit.


#### WARNING

To prevent any risk of noise, premature wear, short circuits, etc. after the refitting operation, mark the wiring routing and how to connect the connectors.

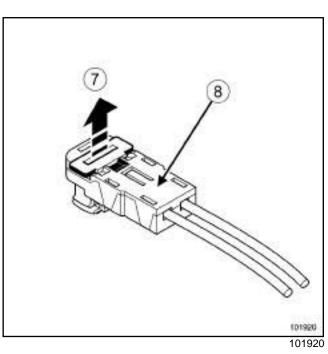

**57A** 


□ Unlock the passenger front airbag connectors (8) at (7).

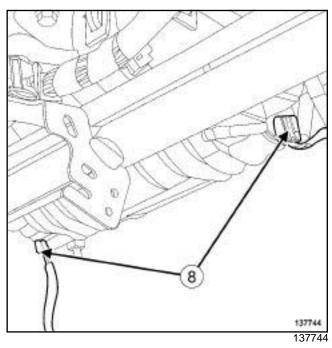

□ Disconnect the passenger front airbag connectors (8).



#### B95 or D95

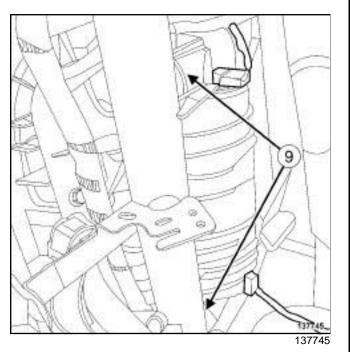


□ Remove the passenger airbag bolts (9) on the cross member.




B95 or D95

II - OPERATION FOR REMOVAL OF PART CONCERNED

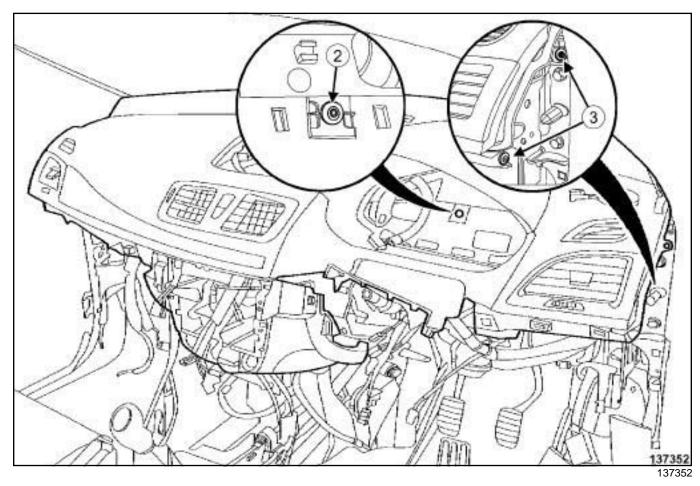



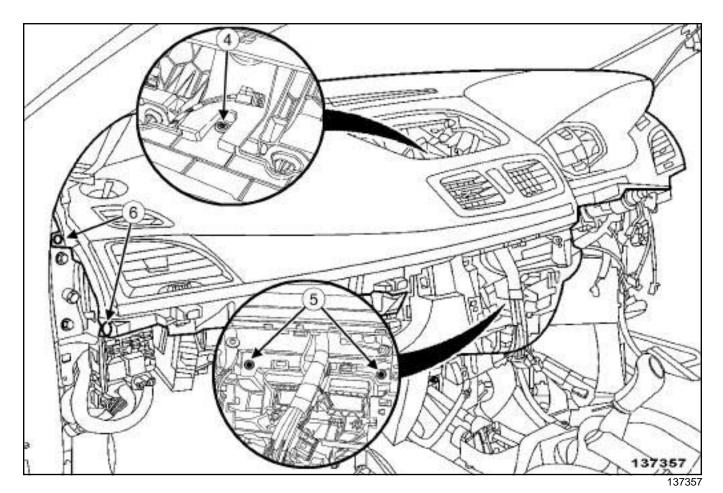

- Remove the bolts (2), (3), (4), (5) and (6) from the dashboard.
- □ Move the dashboard away slightly.

#### Note:

Mark the position of the various wiring before removing the dashboard.

Remove the dashboard (this operation requires two people).

#### REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

- □ Fit the dashboard (this operation requires two people).
- □ Refit the dashboard bolts.

#### **II - FINAL OPERATION**

- Refit the passenger airbag bolts on the cross member.
- □ Torque tighten the passenger airbag bolts on the cross member (8 N.m).
- Connect the passenger front airbag connectors.
- Lock the passenger's front airbag connectors.
- Refit the wiring in the position marked during the removal operation.

#### WARNING

To prevent damage to the wiring harness when refitting, observe the original routing.

#### WARNING

To guarantee a good electrical connection, make sure that the wiring does not place any stress on the connectors or the surrounding components.



#### B95 or D95

#### **RIGHT-HAND DRIVE**

Refit:

- the UCH,
- the UCH bolt (1).

Refit:

- the tweeters of the upper section of the dashboard (see **Tweeter: Removal Refitting**) (86A, Radio),
- the dashboard centre air vent (see **57A**, **Interior equipment**, **Dashboard air vent: Removal - Refitting**, page **57A-17**),

- the instrument panel (see **Instrument panel: Re-moval - Refitting**) (83A, Instrument panel),

RADIO NO 06 or RADIO NO 07

Refit:

- the navigation screen (see **Navigation screen: Removal Refitting**) (83C, On-board telematics system),
- the radio navigation system (see **Radio navigation system: Removal - Refitting**) (83C, Onboard telematics system).

RADIO NO 01 or RADIO NO 02 or RADIO NO 03 or RADIO NO 04 or RADIO NO 05

Refit:

- the display (see **Display: Removal Refitting**) (86A, Radio),
- the radio (see **Car radio: Removal Refitting**) (86A, Radio).

Refit:

- the control panel (see **Control panel: Removal - Refitting**) (61A, Heating),
- the card reader (see **Card reader: Removal Re-fitting**) (82A, Immobiliser),
- the centre front panel (see 57A, Interior equipment, Centre front panel: Removal - Refitting, page 57A-20),

- the glovebox (see 57A, Interior equipment, Glovebox: Removal Refitting, page 57A-25) ,
- the dashboard lower trim (see 57A, Interior equipment, Lower section of dashboard trim: Removal Refitting, page 57A-10),
- the inhibitor switch (see Inhibitor switch: Removal - Refitting) (88C, Airbags and pretensioners),
- the steering column switch assembly (see Steering wheel controls assembly: Removal - Refitting) (84A, Controls - Signalling),
- the steering wheel (see Steering wheel: Removal
  Refitting) (36A, Steering assembly),
- the driver's front airbag (see **Driver's front airbag: Removal Refitting**) (88C, Airbags and pretensioners),
- the centre console (see 57A, Interior equipment, Centre console: Removal - Refitting, page 57A-29) ,
- the windscreen pillar trims (see **A-pillar trim: Removal - Refitting**) (71A, Body internal trim).
- Connect the battery (see Battery : Removal Refitting) (80A, Battery).
- □ Carry out a function test on all functions.

8 N.m



J95

#### Tightening torques 灾

passenger front airbag bolts on the cross member

REMOVAL

#### I - REMOVAL PREPARATION OPERATION

Disconnect the battery (see Battery: Removal - Refitting) (80A, Battery).

RADIO NO 01 or RADIO NO 02 or RADIO NO 03 or RADIO NO 04 or RADIO NO 05

Remove the radio (see Car radio: Removal - Refitting) (86A, Radio).

NAVIGATION AID 1 LEVEL or NAVIGATION AID 1 LEVEL


Remove the radio navigation system (see Radio navigation system: Removal - Refitting) (83C, Onboard telematics system).

Remove:

- the ignition switch (see **Start button: Removal - Refitting**) (82A, Immobiliser),
- the dashboard trim pieces (see **57A**, **Interior equipment**, **Dashboard trim: Removal - Refitting**, page **57A-15**),
- the windscreen pillar trims (see A-pillar trim: Removal - Refitting) (71A, Body internal trim),
- the card reader (see Card reader: Removal Refitting) (82A, Immobiliser),
- the centre console (see 57A, Interior equipment, Centre console: Removal - Refitting, page 57A-29) ,
- the driver's front airbag (see **Driver's front airbag: Removal Refitting**) (88C, Airbags and pretensioners),
- the steering wheel (see Steering wheel: Removal
  Refitting) (36A, Steering assembly),

- the steering column switch assembly (see Steering wheel controls assembly: Removal - Refitting) (84A, Controls - Signalling),
- the inhibitor switch (see Inhibitor switch: Removal Refitting) (88C, Airbags and pretensioners),
- the dashboard lower trim (see 57A, Interior equipment, Lower section of dashboard trim: Removal Refitting, page 57A-10),
- the glovebox (see 57A, Interior equipment, Glovebox: Removal Refitting, page 57A-25),
- the centre front panel (see 57A, Interior equipment, Centre front panel: Removal - Refitting, page 57A-20),
- the control panel (see **Control panel: Removal - Refitting**) (61A, Heating),
- the instrument panel (see Instrument panel: Removal - Refitting) (83A, Instrument panel),
- the dashboard centre air vent (see 57A, Interior equipment, Dashboard air vent: Removal - Refitting, page 57A-17),
- the side air vents (see 57A, Interior equipment, Dashboard side air vent: Removal Refitting, page 57A-19),
- the tweeters from the upper section of the dashboard (see **Tweeter: Removal - Refitting**) (86A, Radio).

# II - OPERATION FOR REMOVAL OF PART CONCERNED

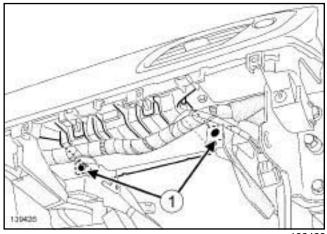


<sup>139426</sup> 


□ Remove the front passenger airbag bolts (1).




J95

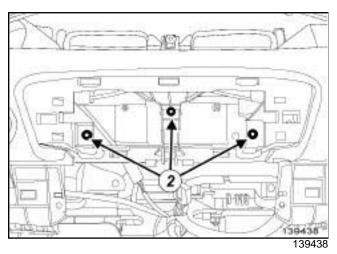


□ Remove the bolts (2).

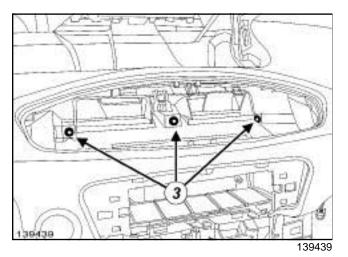


□ Remove the bolts (3).

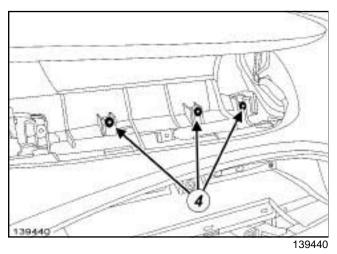

□ Remove the bolts (4).

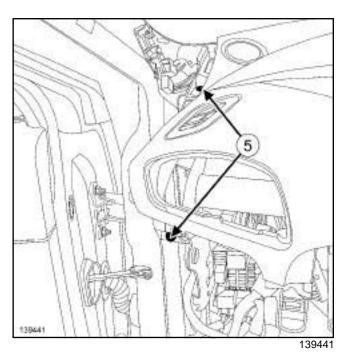

□ Remove the bolts (5).

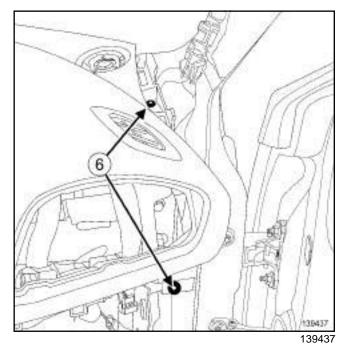

- Remove the bolts (6) .
- $\hfill\square$  Move the dashboard away slightly.

#### Note:

Mark the position of the various wiring before removing the dashboard.

- □ Unclip the wiring on the dashboard.
- Remove the dashboard (this operation requires two people).



#### J95

#### REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

- □ Clip the wiring onto the dashboard.
- □ Fit the dashboard (this operation requires two people).
- □ Refit the dashboard bolts (1), (2), (3), (4), (5), (6).
- □ Torque tighten the passenger front airbag bolts on the cross member (8 N.m).

#### **II - FINAL OPERATION**

- Refit:
  - the tweeters of the upper section of the dashboard (see **Tweeter: Removal Refitting**) (86A, Radio),
  - the side air vents (see 57A, Interior equipment, Dashboard side air vent: Removal Refitting, page 57A-19),
  - the dashboard centre air vent (see **57A**, **Interior equipment**, **Dashboard air vent: Removal - Refitting**, page **57A-17**),
  - the instrument panel (see **Instrument panel: Removal - Refitting**) (83A, Instrument panel),
  - the control panel (see **Control panel: Removal - Refitting**) (61A, Heating),
  - the centre front panel (see 57A, Interior equipment, Centre front panel: Removal - Refitting, page 57A-20),
  - the glovebox (see 57A, Interior equipment, Glovebox: Removal Refitting, page 57A-25),
  - the dashboard lower trim (see 57A, Interior equipment, Lower section of dashboard trim: Removal Refitting, page 57A-10),
  - the inhibitor switch (see **Inhibitor switch: Remo**val - Refitting) (88C, Airbags and pretensioners),
  - the steering column switch assembly (see **Steering wheel controls assembly: Removal Refitting**) (84A, Controls Signalling),
  - the steering wheel (see Steering wheel: Removal
    Refitting) (36A, Steering assembly),
  - the driver's front airbag (see **Driver's front airbag: Removal Refitting**) (88C, Airbags and pretensioners),
  - the centre console (see 57A, Interior equipment, Centre console: Removal - Refitting, page 57A-29) ,

- the card reader (see Card reader: Removal Refitting) (82A, Immobiliser),
- the windscreen pillar trims (see **A-pillar trim: Removal - Refitting**) (71A, Body internal trim),
- the dashboard trim pieces (see 57A, Interior equipment, Dashboard trim: Removal - Refitting, page 57A-15),
- the ignition switch (see **Start button: Removal - Refitting**) (82A, Immobiliser).

NAVIGATION AID 1 LEVEL or NAVIGATION AID 1 LEVEL

Refit the radio navigation system (see Radio navigation system: Removal - Refitting) (83C, On board telematics system).

RADIO NO 01 or RADIO NO 02 or RADIO NO 03 or RADIO NO 04 or RADIO NO 05

- Refit the radio (see Car radio: Removal Refitting) (86A, Radio).
- Connect the battery (see Battery: Removal Refitting) (80A, Battery).

## **INTERIOR EQUIPMENT**

#### Lower section of dashboard trim: Removal - Refitting

B95 or D95


Essential special tooling

Set of trim removal levers.


Car. 1363

#### REMOVAL

#### I - REMOVAL PREPARATION OPERATION

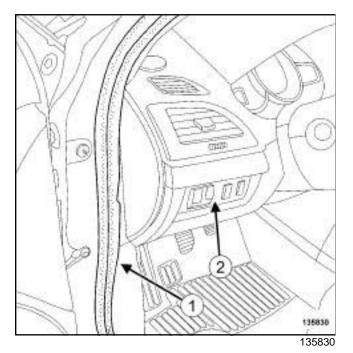


- □ Unclip the switch plate (2) using the tool (Car. 1363).
- Disconnect the switch plate connectors.
- □ Partially remove the driver's side door seal (1).

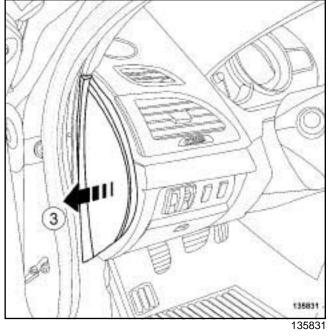

**57**A


Unclip the dashboard side panel using (Car. 1363)
 (3).

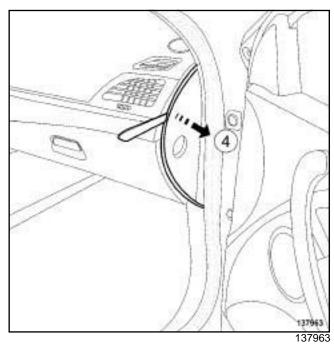

Unclip the dashboard side panel in accordance with the arrow (4) using the tool (Car. 1363).


## INTERIOR EQUIPMENT Lower section of dashboard trim: Removal - Refitting 57A

B95 or D95

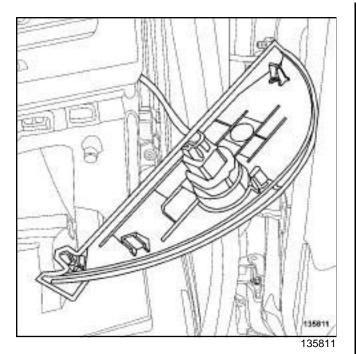


Disconnect inhibitor switch connector.

# II - OPERATION FOR REMOVAL OF PART CONCERNED

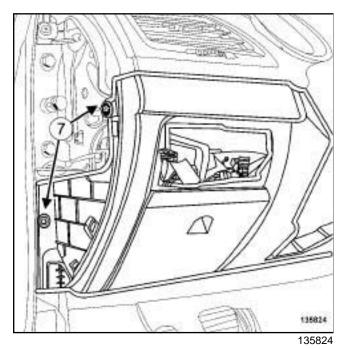

□ Remove the bolts (7) from the dashboard lower trim.

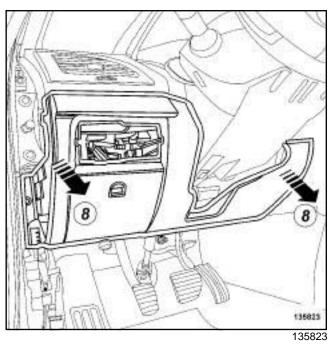


□ Unclip the dashboard lower trim in accordance with the arrow (8).


## INTERIOR EQUIPMENT

#### Lower section of dashboard trim: Removal - Refitting

B95 or D95

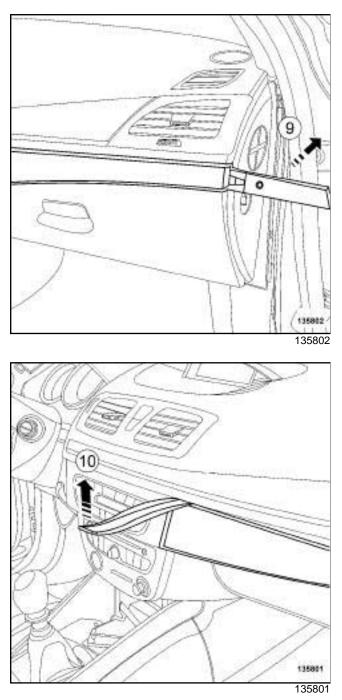

□ Unclip the dashboard lower trim on the passenger side at (9) and at (10) using the tool (Car. 1363).

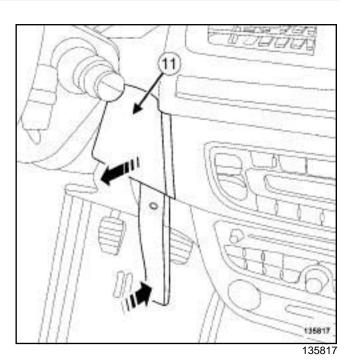

**57**A

 Unclip the dashboard lower trim on the driver's side (11) using the tool (Car. 1363).

#### REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

- Clip on the dashboard lower trim (8).
- □ Refit the bolts (7) on the dashboard lower trim.
- Clip:
  - the dashboard lower trim on the passenger side,
  - the dashboard lower trim (11) on the driver's side.

#### **II - FINAL OPERATION**

- □ Connect the inhibitor switch connector.
- □ Clip on the dashboard side faces.
- □ Refit the driver's side door seal (1).
- □ Connect the switch plate connectors.
- Clip the switch plate (2) onto the dashboard lower trim.

## **INTERIOR EQUIPMENT**

## Lower section of dashboard trim: Removal - Refitting



J95


### Essential special tooling

Set of trim removal levers.


Car. 1363

### REMOVAL


### I - REMOVAL PREPARATION OPERATION

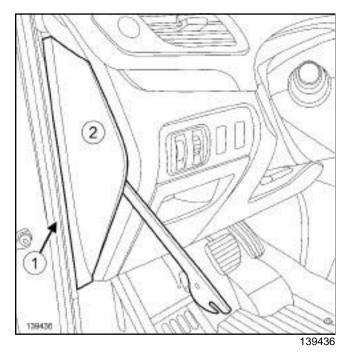

- $\hfill \square$  Partially remove the front side door seal (1) .
- Unclip the side panel (2) using the tool (Car. 1363).

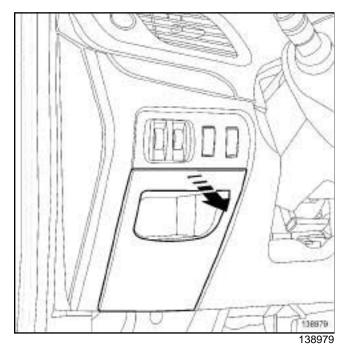


Unclip the access flap to the passenger compartment fuse and relay box using the tool (Car. 1363).

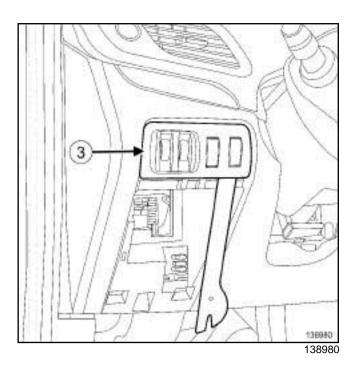

- Unclip the switch plate (3) using the tool (Car. 1363).
- Disconnect the switch plate connectors.
- Remove the dashboard trim on the driver's side (see 57A, Interior equipment, Dashboard trim: Removal - Refitting, page 57A-15).

# II - OPERATION FOR REMOVAL OF PART CONCERNED

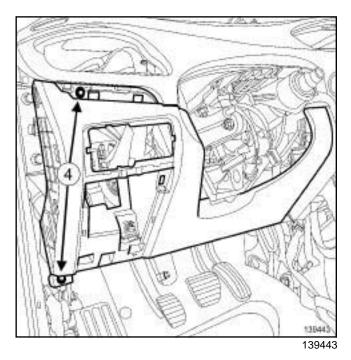


□ Remove the bolts (4) from the dashboard lower trim.

# INTERIOR EQUIPMENT Lower section of dashboard trim: Removal - Refitting

**57A** 

J95

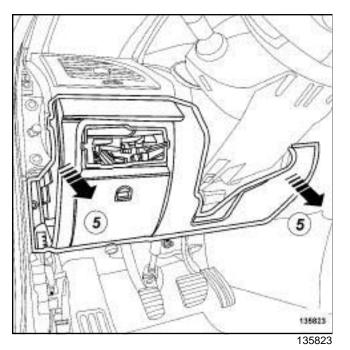

□ Unclip the dashboard lower trim at (5).

## REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

- □ Clip on the dashboard lower trim.
- □ Refit the bolts (4) from the dashboard lower trim.

### **II - FINAL OPERATION**

- Refit the dashboard trim on the driver's side (see 57A, Interior equipment, Dashboard trim: Removal Refitting, page 57A-15).
- □ Connect the switch plate connectors.
- Clip:
  - the switch plate (3),
  - the passenger compartment fuse and relay box access flap,
  - the side panel (2).
- □ Refit the seal (1) of the front side door.

# INTERIOR EQUIPMENT Dashboard trim: Removal - Refitting



J95


Essential special tooling

Car. 1363

# Set of trim removal levers.


## REMOVAL


# OPERATION FOR REMOVAL OF PART CONCERNED

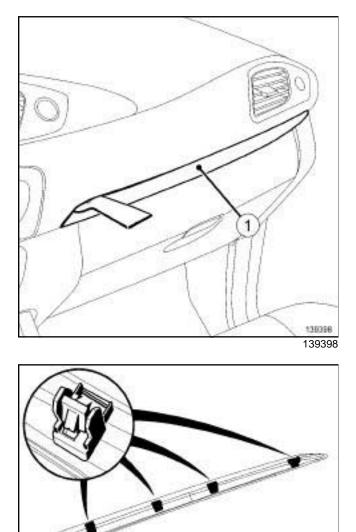

□ Remove the passenger side dashboard trim (1)

using the tool (Car. 1363).

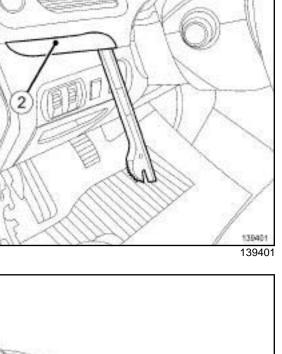

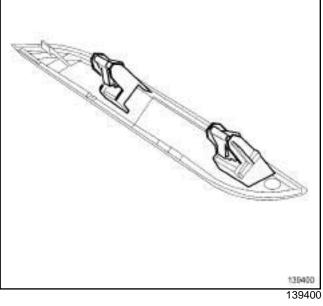

Remove the driver's side dashboard trim (2) using the tool (Car. 1363).

## REFITTING

### **REFITTING OPERATION FOR PART CONCERNED**

□ Clip the dashboard trim pieces in place.

57A-15

139399

# INTERIOR EQUIPMENT Dashboard trim: Removal - Refitting



#### B95 or D95

Essential	special	tooling
-----------	---------	---------


Set of trim removal levers.

Car. 1363


### REMOVAL


- I REMOVAL PREPARATION OPERATION
- Remove the glovebox (see 57A, Interior equipment, Glovebox: Removal Refitting, page 57A-25).

### II - OPERATION FOR REMOVAL OF PART CONCERNED

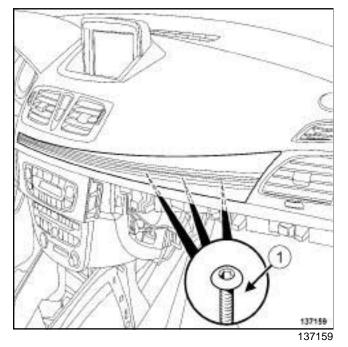

□ Remove the dashboard trim bolts (1).

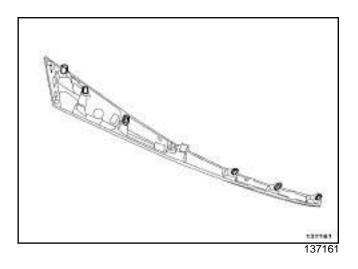

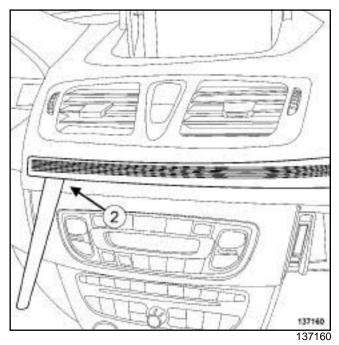

□ Unclip the dashboard trim using the tool (Car. 1363) at (2).

# I - REFITTING OPERATION FOR PART CONCERNED

- □ Clip on the dashboard trim piece.
- □ Refit the dashboard trim bolts.

### **II - FINAL OPERATION**

□ Refit the glovebox (see 57A, Interior equipment, Glovebox: Removal - Refitting, page 57A-25).

# INTERIOR EQUIPMENT Dashboard air vent: Removal - Refitting



B95 or D95

Essential special tooling

Set of trim removal levers.

Car. 1363

### REMOVAL


### I - REMOVAL PREPARATION OPERATION


### Side air vent on the passenger side


- Remove:
  - the glovebox (see 57A, Interior equipment, Glovebox: Removal Refitting, page 57A-25),
  - the dashboard trim piece (see 57A, Interior equipment, Dashboard trim: Removal - Refitting, page 57A-15).

#### II - OPERATION FOR REMOVAL OF PART CONCERNED

### Side air vent on the driver's side

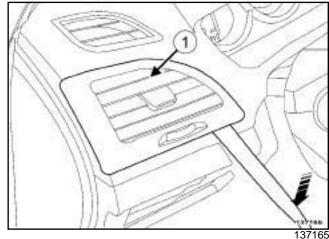

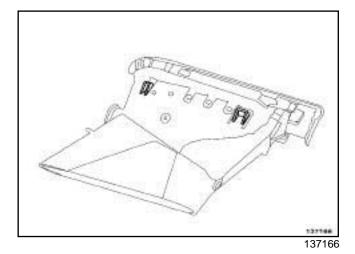

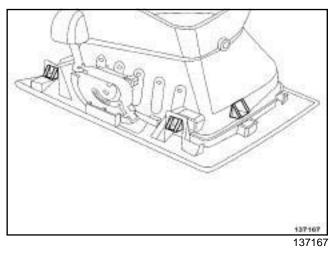


Unclip the side air vent (1) from the dashboard using the tool (Car. 1363).




### B95 or D95



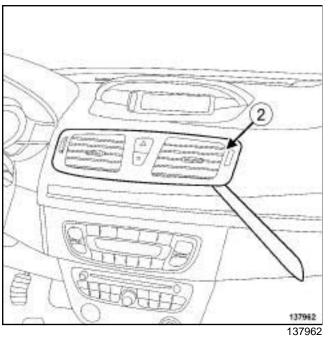

- □ Unclip the centre air vent (2) from the dashboard using the tool (Car. 1363).
- Disconnect the hazard warning lights and central door locking switch connector.

### Side air vent on the passenger side

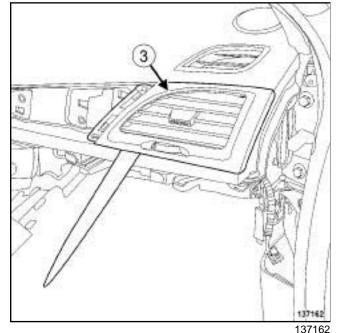

□ Unclip the side air vent (3) from the dashboard using the tool (Car. 1363).

### REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

#### 1 - Centre air vent

Connect the hazard warning lights and central door locking switch connectors.

#### 2 - Side air vents

□ Clip the side air vents in place.

### **II - FINAL OPERATION**

#### Side air vent on the passenger side

- Refit:
  - the dashboard trim piece (see 57A, Interior equipment, Dashboard trim: Removal Refitting, page 57A-15),
  - the glovebox (see 57A, Interior equipment, Glovebox: Removal Refitting, page 57A-25).

# INTERIOR EQUIPMENT Dashboard side air vent: Removal - Refitting




**Essential special tooling** 


Car. 1363

Set of trim removal levers.

### REMOVAL

#### OPERATION FOR REMOVAL OF PART CONCERNED

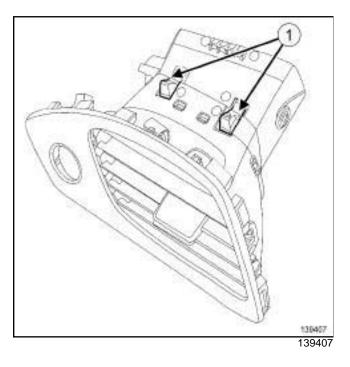

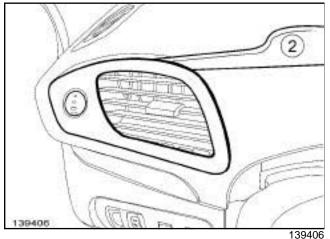

Remove the dashboard side air vent using the tool (Car. 1363) (2) while pressing on the clips (1).

## REFITTING

### **REFITTING OPERATION FOR PART CONCERNED**

□ Clip the side air vent back onto the dashboard.

# INTERIOR EQUIPMENT Centre front panel: Removal - Refitting



B95 or D95


### Essential special tooling


Set of trim removal levers.

Car. 1363


## REMOVAL

I - REMOVAL PREPARATION OPERATION

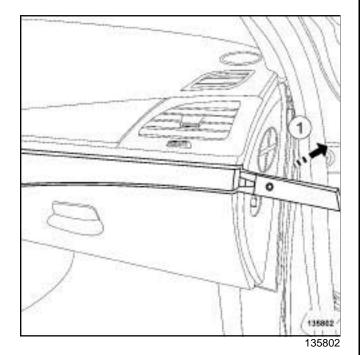

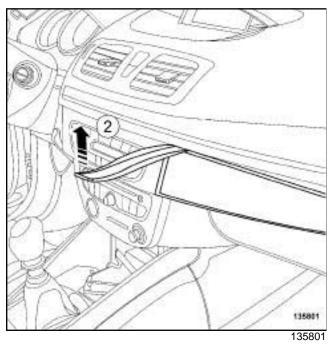

□ Unclip the dashboard lower trim on the passenger side at (1) and at (2) using the tool (Car. 1363).

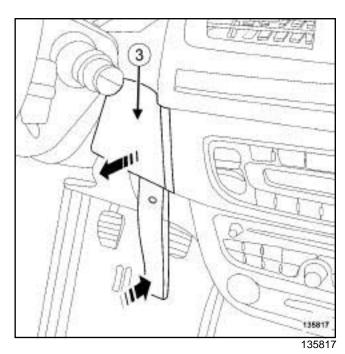


Unclip the dashboard lower trim on the driver's side
 (3) using the tool (Car. 1363).


# INTERIOR EQUIPMENT Centre front panel: Removal - Refitting




### B95 or D95


# II - OPERATION FOR REMOVAL OF PART CONCERNED

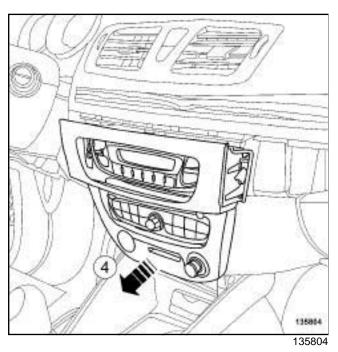

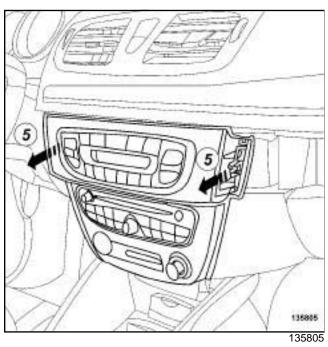

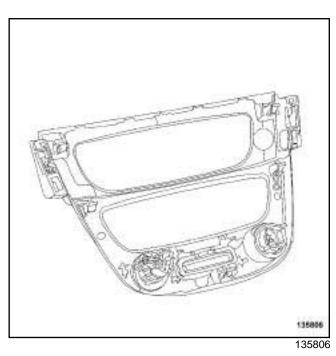

□ Unclip the centre front panel at (4) and at (5) using the tool (Car. 1363).

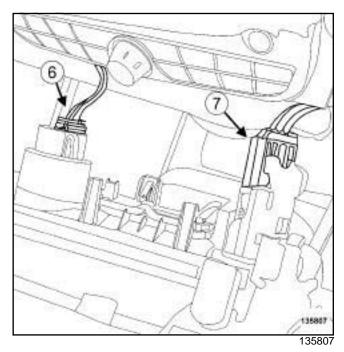

Disconnect:

- the start button connector (6) ,
- the cigarette lighter connector (7) .



### B95 or D95

### REFITTING

### I - REFITTING OPERATION FOR PART CONCERNED

Connect:

- the cigarette lighter connector,
- the start button connector.
- □ Clip in the centre front panel.

### **II - FINAL OPERATION**

Clip:

- the dashboard lower trim on the passenger side,
- the dashboard lower trim on the driver's side (3).

# INTERIOR EQUIPMENT Centre front panel: Removal - Refitting



### J95

### REMOVAL

### I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see Battery: Removal Refitting) (80A, Battery).
- Remove:
  - the dashboard trim pieces (see 57A, Interior equipment, Dashboard trim: Removal - Refitting, page 57A-15),
  - the dashboard lower trim (see 57A, Interior equipment, Lower section of dashboard trim: Removal - Refitting, page 57A-10),
  - the inhibitor switch (see **Inhibitor switch: Remo**val - **Refitting**) (88C, Airbags and pretensioners).
  - the glovebox light (see **Glovebox light: Removal - Refitting**) (81B, Interior lighting),
  - the glovebox (see 57A, Interior equipment, Glovebox: Removal Refitting, page 57A-25),
  - the centre console (see **57A**, **Interior equipment**, **Centre console: Removal Refitting**, page **57A-29**),
  - the control panel (see **Control panel: Removal - Refitting**) (61A, Heating).


RADIO NO 01 or RADIO NO 02 or RADIO NO 03 or RADIO NO 04 or RADIO NO 05


Remove the radio (see Car radio: Removal - Refitting) (86A, Radio).

NAVIGATION AID 1 LEVEL or NAVIGATION AID 1 LEVEL

Remove the radio navigation system (see Radio navigation system: Removal - Refitting) (83C, Onboard telematics system).

### II - OPERATION FOR REMOVAL OF PART CONCERNED

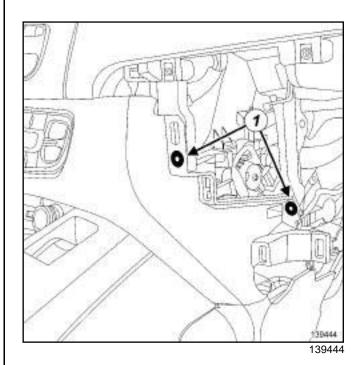

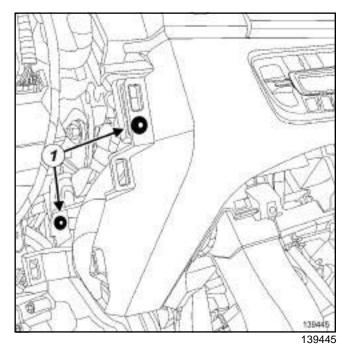

### Remove:

- the bolts (1),
- the centre front panel with care.

Note:

Mark the position of the various wiring before removing the centre front panel.



#### J95

### REFITTING

### I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
  - the centre front panel with care,
  - the bolts (1).

### **II - FINAL OPERATION**

RADIO NO 01 or RADIO NO 02 or RADIO NO 03 or RADIO NO 04 or RADIO NO 05

Refit the radio (see Car radio: Removal - Refitting) (86A, Radio).

NAVIGATION AID 1 LEVEL or NAVIGATION AID 1 LEVEL

Refit the radio navigation system (see Radio navigation system: Removal - Refitting) (83C, Onboard telematics system).

Refit:

- the control panel (see **Control panel: Removal - Refitting**) (61A, Heating),
- the centre console (see 57A, Interior equipment, Centre console: Removal - Refitting, page 57A-29) ,
- the glovebox (see 57A, Interior equipment, Glovebox: Removal Refitting, page 57A-25),
- the glovebox light (see **Glovebox light: Removal - Refitting**) (81B, Interior lighting),
- the inhibitor switch (see Inhibitor switch: Removal Refitting) (88C, Airbags and pretensioners),
- the dashboard lower trim (see 57A, Interior equipment, Lower section of dashboard trim: Removal - Refitting, page 57A-10),
- the dashboard trim pieces (see 57A, Interior equipment, Dashboard trim: Removal - Refitting, page 57A-15).
- Connect the battery (see Battery: Removal Refitting) (80A, Battery).

# INTERIOR EQUIPMENT Glovebox: Removal - Refitting



#### Essential special tooling

Car. 1363

Set of trim removal levers.

### REMOVAL


### I - REMOVAL PREPARATION OPERATION

- □ Remove:
  - the passenger side dashboard trim (see **57A**, **Interior equipment**, **Dashboard trim: Removal Refitting**, page **57A-15**),
  - the storage compartment light (see **Glovebox light: Removal - Refitting**) (81B, Interior lighting),
  - the front side door seal partially.

### LEFT-HAND DRIVE

Remove the inhibitor switch (see Inhibitor switch: Removal - Refitting) (88C, Airbags and pretensioners).


### **RIGHT-HAND DRIVE**

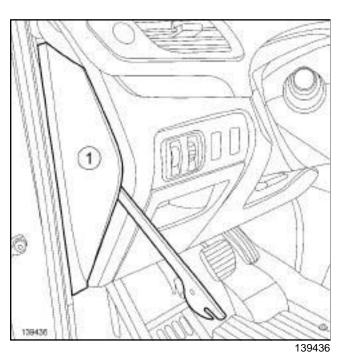


Unclip the side panel (1) using the tool (Car. 1363).

#### II - OPERATION FOR REMOVAL OF PART CONCERNED

#### B95 or D95

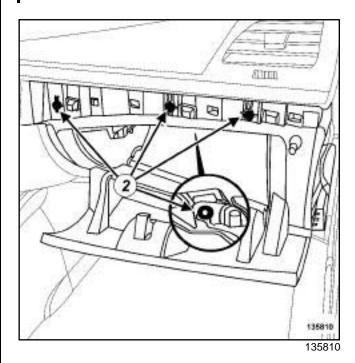


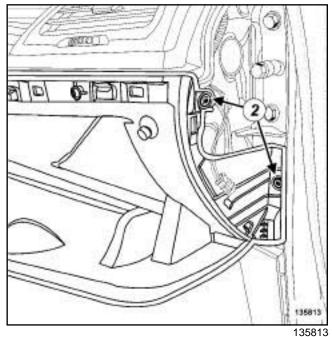

□ Remove the glovebox bolts (2).


# INTERIOR EQUIPMENT Glovebox: Removal - Refitting



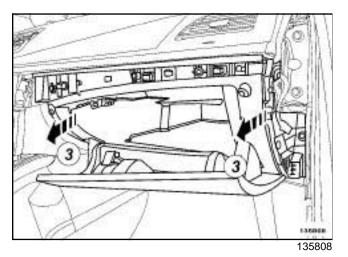

□ Unclip the glovebox at (3).

J95

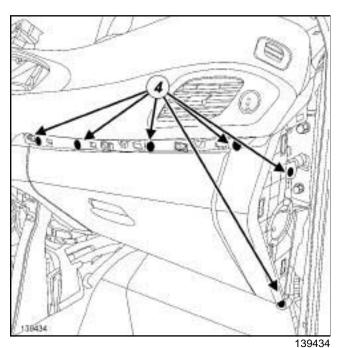

- Remove:
  - the bolts (4),
  - the glovebox.

## REFITTING

### I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
  - the glovebox,
  - the glovebox bolts.

### **II - FINAL OPERATION**

### **RIGHT-HAND DRIVE**

□ Clip on the side panel (1).

### LEFT-HAND DRIVE

Refit the inhibitor switch (see Inhibitor switch: Removal - Refitting) (88C, Airbags and pretensioners)

Refit:


- the front side door seal,
- the storage compartment light (see **Glovebox light: Removal - Refitting**) (81B, Interior lighting),
- the dashboard trim piece (see 57A, Interior equipment, Dashboard trim: Removal - Refitting, page 57A-15).



## REMOVAL

### I - REMOVAL PREPARATION OPERATION


- Remove:
  - the storage compartment light (see **Glovebox light: Removal - Refitting**) (81B, Interior lighting),
  - the glovebox (see 57A, Interior equipment, Glovebox: Removal Refitting, page 57A-25).

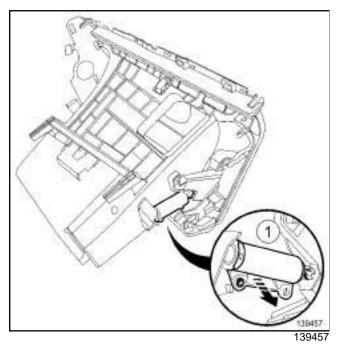


□ Unclip the jack (1).

#### II - OPERATION FOR REMOVAL OF PART CONCERNED

### B95 or D95

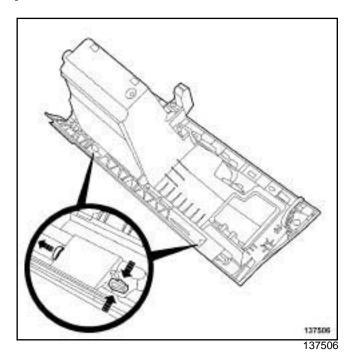


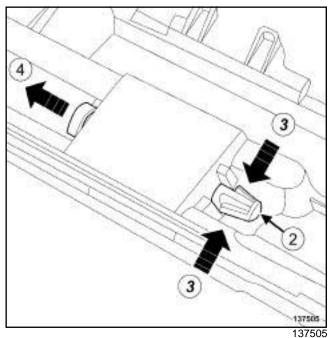

- □ Remove the glovebox cover shafts (2) by pressing on the clips at (3).
- Remove:
  - the glovebox cover shafts at  $\left( 4\right)$  ,
  - the glovebox cover.

# INTERIOR EQUIPMENT Glovebox cover: Removal - Refitting



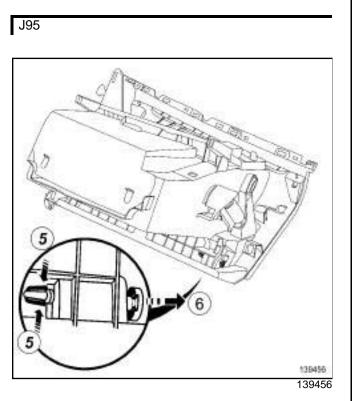

- □ Remove the shafts by pressing on the clips at (5).
- Remove:
  - the shafts at  $({\bf 6})$  ,
  - the glovebox cover.

## REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

- □ Refit the glovebox cover.
- □ Clip the glovebox cover shafts in place.

### **II - FINAL OPERATION**

- □ Clip the jack (1) in place.
- Refit:
  - the glovebox (see 57A, Interior equipment, Glovebox: Removal Refitting, page 57A-25),
  - the storage compartment light (see **Glovebox light: Removal - Refitting**) (81B, Interior lighting).



B95 or D95


### Essential special tooling

Set of trim removal levers.


Car. 1363

## REMOVAL


### I - REMOVAL PREPARATION OPERATION

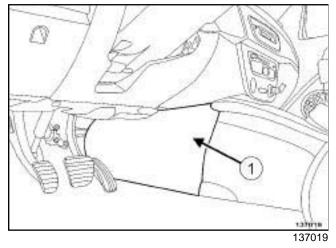

Unclip the centre console side panels (1) using the tool (Car. 1363).

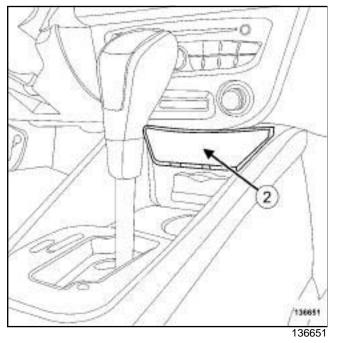


□ Unclip the diagnostic socket flap (2).

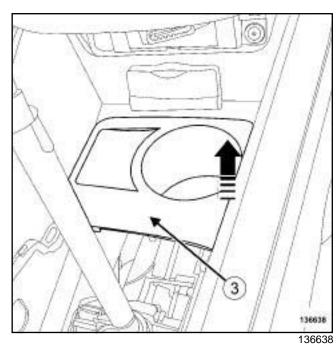

Unclip the cup holder (3).

5 SPEED MANUAL GBOX or 6 SPEED MANUAL GBOX

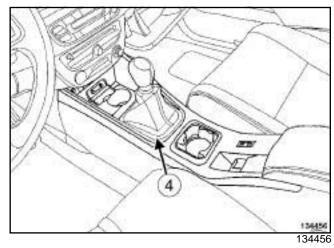


□ Unclip the gear lever trim (4) using the tool (Car. 1363).




B95 or D95

## 6 SPEED AUTO GBOX

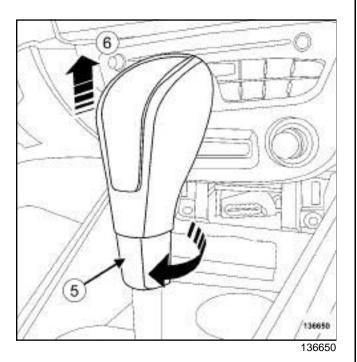


- □ Unlock the gear lever knob by turning the locking ring a quarter of a turn clockwise (5).
- □ Unclip the gear lever knob following (6).

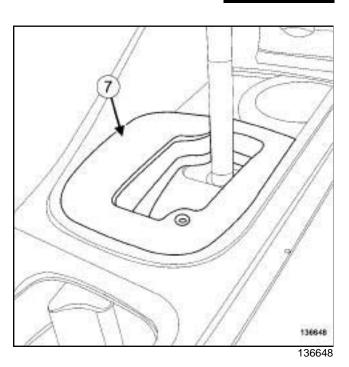


Remove the gear lever trim (7) using the tool (Car. 1363).

### WITHOUT AUTOMATIC PARKING BRAKE

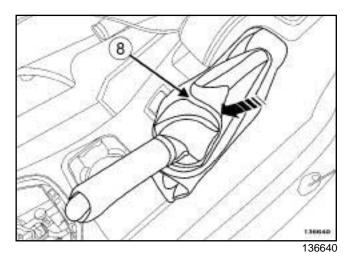

 $\hfill \square$  Partially unclip the handbrake lever gaiter  $({\bf 8})$  .

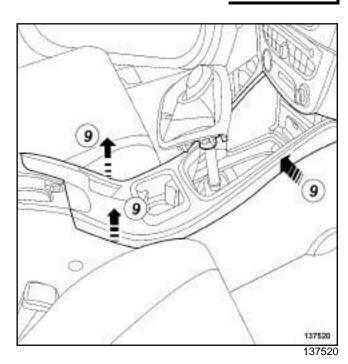

Unclip the centre console upper front panel following(9) using the tool (Car. 1363).

### ELECTRONIC PARKING BRAKE


Disconnect the electronic parking brake switch (see Handle: Removal - Refitting) (37B, Electronic parking brake).



### B95 or D95

## CRUISE CONTROL


 Disconnect the cruise control switch (see Switch: Removal - Refitting) (83D, Cruise control).

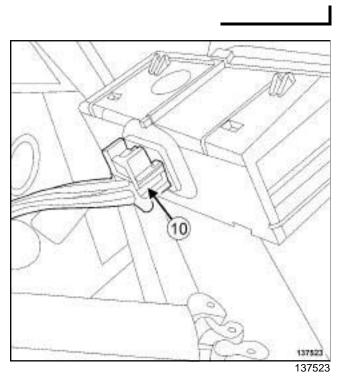


Disconnect the offset audio socket connector (10) .

### RADIO NO 07

Disconnect the navigation central control (see Central control: Removal - Refitting) (83C, On-board telematics system).

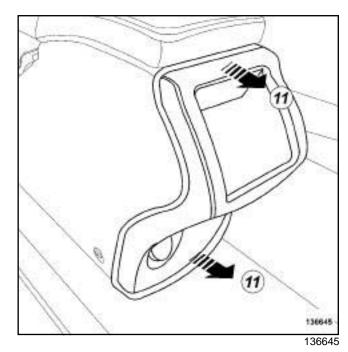

□ Unclip the centre console rear panel following (11) using the tool (Car. 1363).

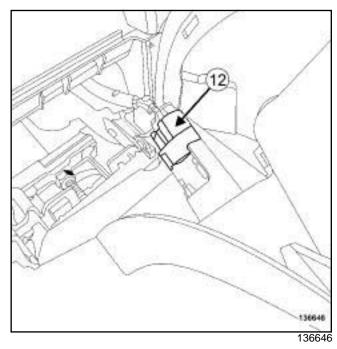


Disconnect the electrical accessories socket connector (12).




#### B95 or D95

### II - OPERATION FOR REMOVAL OF PART CONCERNED

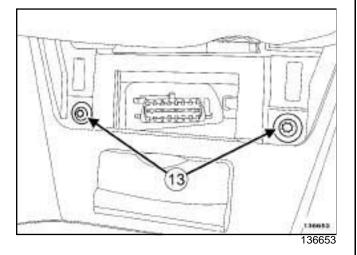

**□** Remove the front bolts (13) from the centre console.

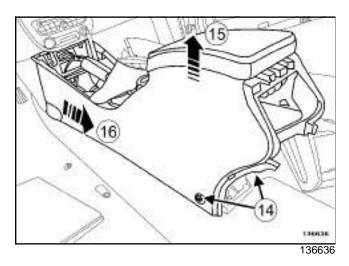

- □ Remove the rear bolts (14) from the centre console.
- □ Remove the centre console at (15) then at (16) .

### REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

- □ Refit the centre console.
- □ Refit the centre console bolts (13), (14).

### **II - FINAL OPERATION**

- Connect the electrical accessories socket connector.
- □ Clip the centre console rear panel in place.

#### RADIO NO 07

- Connect the navigation central control (see Central control: Removal Refitting) (83C, On-board telematics system).
- Connect the connector of the offset audio socket.

#### CRUISE CONTROL

Connect the cruise control switch (see Switch: Removal - Refitting) (83D, Cruise control).

#### ELECTRONIC PARKING BRAKE

Connect the electronic parking brake switch (see Handle: Removal - Refitting) (37B, Electronic parking brake).

□ Clip the upper front panel onto the centre console.

- WITHOUT AUTOMATIC PARKING BRAKE
- Clip the handbrake lever gaiter.
- Clip the cup holder.

#### 6 SPEED AUTO GBOX

- □ Clip on the gear lever trim piece.
- □ Refit the gear lever knob.
- □ Lock the gear lever knob.

5 SPEED MANUAL GBOX or 6 SPEED MANUAL GBOX

□ Clip on the gear lever trim.

Clip:

- the diagnostic socket flap,



B95 or D95

- the centre console side panels.

□ Carry out a function test on all functions.



J95

Essential special tooling

Car. 1363


### \_\_\_\_\_

**363** Set of trim removal levers.

## REMOVAL


### I - REMOVAL PREPARATION OPERATION

### Centre console fixed section

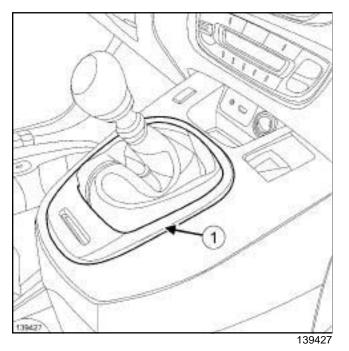

Unclip the trim (1).

5 SPEED MANUAL GBOX or 6 SPEED MANUAL GBOX

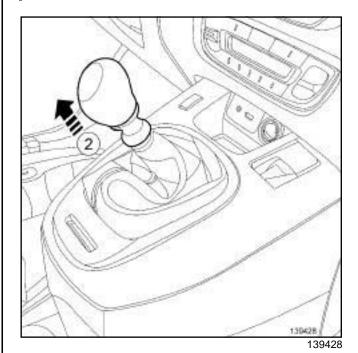

### Remove:

- the gear lever knob at (2),
- the gear lever spring,
- the gear lever gaiter.




J95

### 6 SPEED AUTO GBOX




□ Remove:

- the gear lever knob at (2),
- the gear lever gaiter.

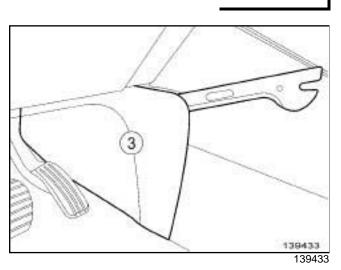

Remove the side panels (3) of the centre console using the tool (Car. 1363).


### FIXED CENTRE CONSOLE WITH STORAGE

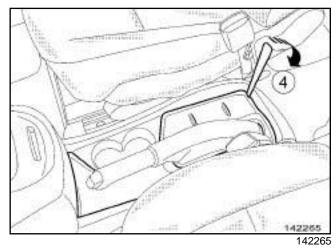

□ Remove the carpet from the fixed centre console using the tool (Car. 1363) at (4).

SLIDING CENTRE CONSOLE WITH STORAGE

#### Centre console sliding section

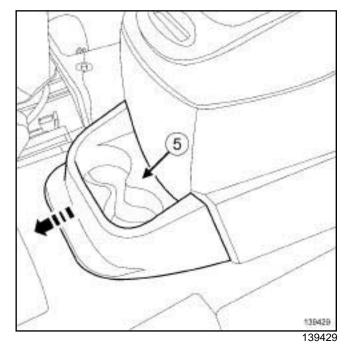

- □ Remove the cup holder (5).
- $\hfill\square$  Move the front seats forward.
- □ Push back the centre sliding console.





J95

# II - OPERATION FOR REMOVAL OF PART CONCERNED

### Centre console fixed section

### FIXED CENTRE CONSOLE WITH STORAGE

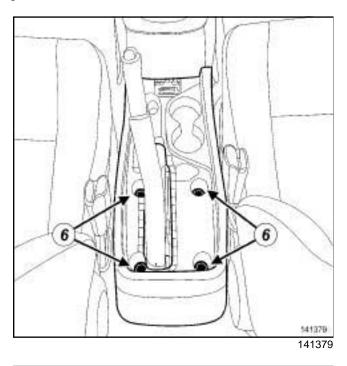


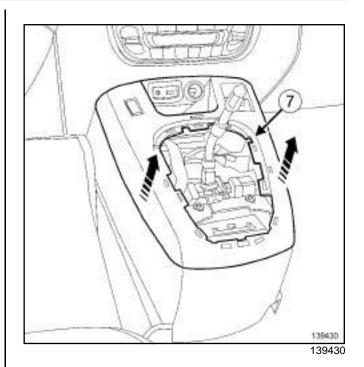

□ Partially unclip the centre console upper trim (7).

### CRUISE CONTROL

Disconnect the cruise control switch connector.

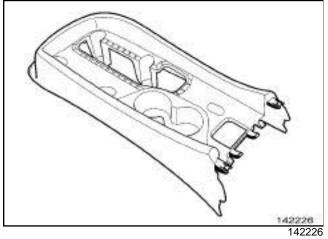

□ Remove:

- the nuts of the fixed centre console (6) ,

- the fixed centre console.

ELECTRONIC PARKING BRAKE

Disconnect the electric parking brake switch connector.

WITH ACCESS. FOR SMOKING

Disconnect the cigarette lighter connector.

RADIO NO 01 or RADIO NO 02 or RADIO NO 03

 $\hfill\square$  Disconnect the offset multimedia socket connector.




J95


### RADIO NO 04 or RADIO NO 05

Disconnect the offset multimedia socket connectors.

□ Remove the upper trim from the centre console.

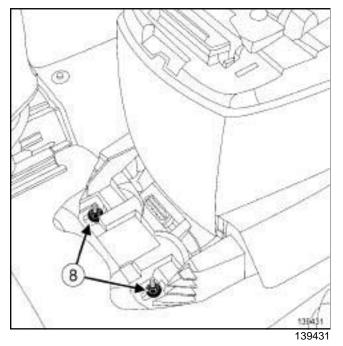

Remove nuts (8).

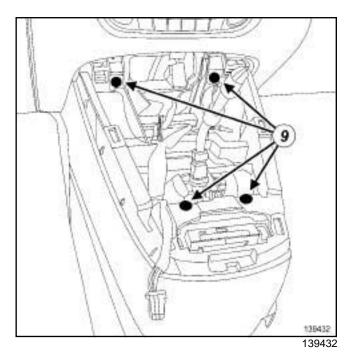

Remove:

- the card reader (see **Card reader: Removal Re-fitting**) (82A, Immobiliser),
- the bolts (9),
- the centre console.

#### Note:

Mark the position of the various wiring before removing the centre console.


### SLIDING CENTRE CONSOLE WITH STORAGE

### Centre console sliding section


- □ Put the front seats in the forward position.
- In the event of a fault in the slide mechanism, remove the front seats.




### J95

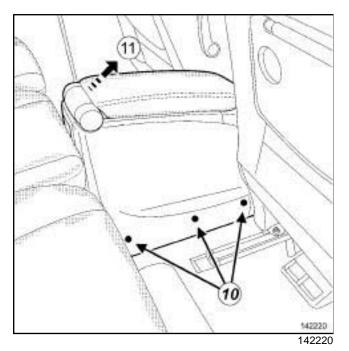


- □ Remove the bolts (10) from the sliding centre console.
- $\hfill\square$  Lift the sliding centre console at (11) .

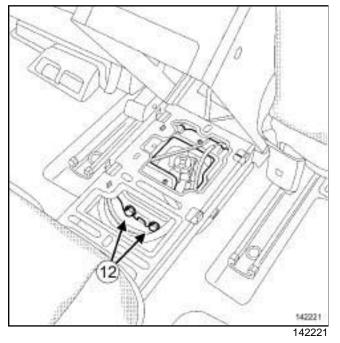

□ Remove the bolts (12) from the sliding centre console slide.

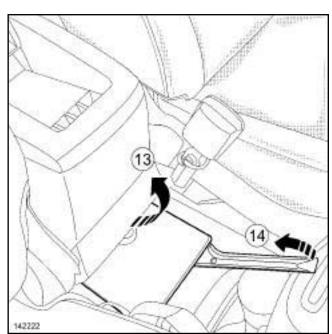


142222

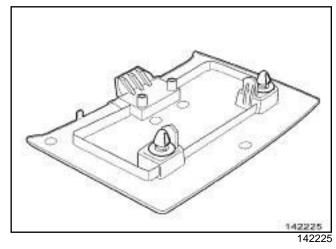


- $\hfill\square$  Lift the sliding centre console at (13) .
- □ Remove the front cover of the sliding centre console using the tool (Car. 1363) at (14).



J95

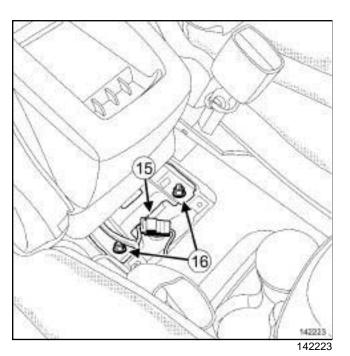

- □ Unclip the connector (15) from the sliding centre console.
- □ Disconnect the connector (15) from the sliding centre console.
- □ Remove:
  - the nuts (16) of the sliding centre console slide,
  - the « sliding centre console sliding centre console slide » assembly.

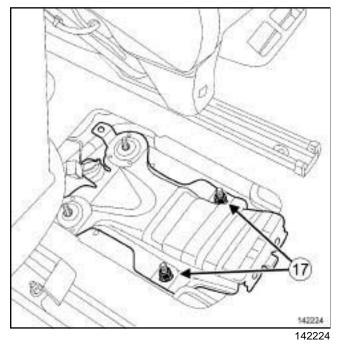

- Remove:
  - the nuts (17) from the slide mounting of the sliding centre console,

- the slide mounting of the sliding centre console.

## REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

### SLIDING CENTRE CONSOLE WITH STORAGE

### Centre console sliding section

- Refit:
  - the slide mounting of the sliding centre console,
  - the « sliding centre console sliding centre console slide » assembly.
- Connect the connector of the sliding centre console.
- Clip on the connector of the sliding centre console.
- □ Refit the front cover on the sliding centre console.

### Centre console fixed section

- Refit:
  - the centre console,
  - the card reader (see **Card reader: Removal Re-fitting**) (82A, Immobiliser).

### RADIO NO 01 or RADIO NO 02 or RADIO NO 03

□ Connect the offset multimedia socket connector.

### RADIO NO 04 or RADIO NO 05

Connect the offset multimedia socket connectors.

### WITH ACCESS. FOR SMOKING

□ Connect the cigarette lighter connector.



J95	
-	Clip the gaiter trim in place (1).
ELECTRONIC PARKING BRAKE	Carry out a function test.
Connect the electric parking brake switch connector.	
1 0	SLIDING CENTRE CONSOLE WITH STORAGE
	Contro concelo elidina ecotion
	Centre console sliding section
CRUISE CONTROL	Refit the cup holder.
Connect the cruise control switch connector.	<ul> <li>Reposition:</li> <li>the sliding centre console,</li> </ul>
	- the front seats.
	- the none seats.
□ Refit the upper trim (7).	
FIXED CENTRE CONSOLE WITH STORAGE	
□ Refit the fixed centre console.	
II - FINAL OPERATION	
Centre console fixed section	
FIXED CENTRE CONSOLE WITH STORAGE	
<ul> <li>Refit the carpet of the fixed centre console.</li> </ul>	
□ Refit the side panels (3).	
6 SPEED AUTO GBOX	
□ Refit:	
- the gear lever gaiter,	
- the gear lever knob.	
1	
5 SPEED MANUAL GBOX or 6 SPEED MANUAL GBOX	
□ Refit:	
- the gear lever gaiter,	
- the gear lever spring,	
- the gear lever knob.	

# INTERIOR EQUIPMENT Floor flap and storage: Removal - Refitting




### REMOVAL

### I - REMOVAL PREPARATION OPERATION


□ Open the floor storage flap.


# II - OPERATION FOR REMOVAL OF PART CONCERNED




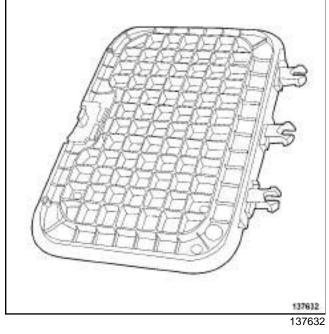

□ Unclip the front section of the floor storage flap at (1)

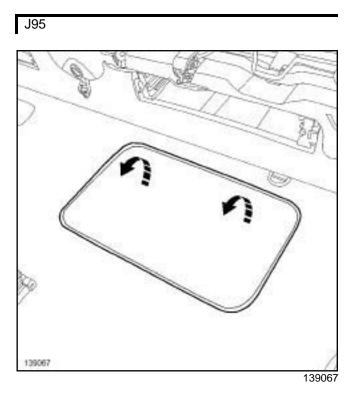

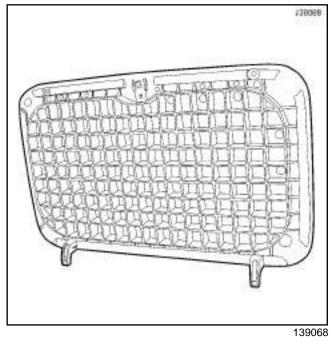

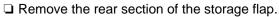



### REFITTING

### I - REFITTING OPERATION FOR PART CONCERNED

Clip the front section of the floor storage flap in place.

J95

□ Refit the rear section of the storage flap.

#### **II - FINAL OPERATION**

□ Close the floor storage flap.

# **INTERIOR EQUIPMENT** Interior rear-view mirror Removal - Refitting




**Essential special tooling** 

Car. 1363


Set of trim removal levers.

## REMOVAL

### **I - REMOVAL PREPARATION OPERATION**

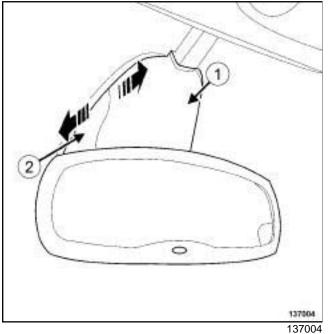

- □ Remove:
  - the upper cover (1) using the tool (Car. 1363),
  - the lower cover (2) .

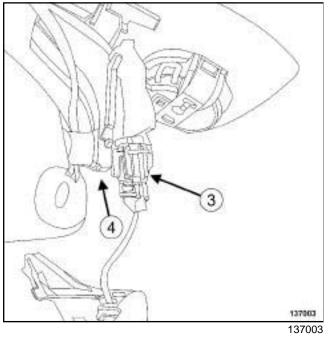

Disconnect the connectors.


EQT LEVEL EA4

Disconnect the interior rear-view mirror connector (3).

CLIMATE CONTROL

Disconnect the passenger compartment temperature sensor connector (4).


### AUTO LIGHTS+WIPER

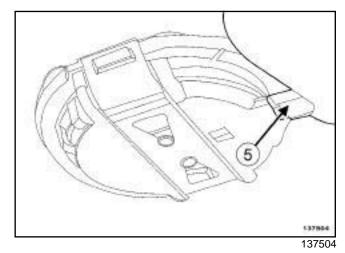

Disconnect the rain and light sensor connector (5).



### II - REMOVAL OPERATION FOR PART CONCERNED

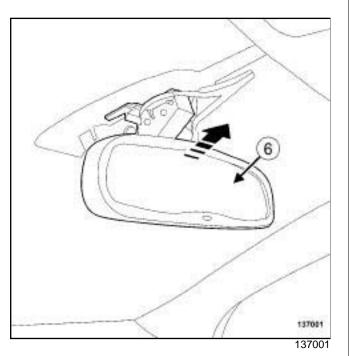

□ Remove interior rear view mirror (6).

### REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

□ Refit the interior rear-view mirror.

### **II - FINAL OPERATION**

AUTO LIGHTS+WIPER

□ Connect the rain and light sensor connector.

### EQT LEVEL EA4

□ Disconnect the interior rear-view mirror connector (4).

### CLIMATE CONTROL

Disconnect the passenger compartment temperature sensor connector (3).

- Clip:
  - the lower cover,
  - the upper cover.


# INTERIOR EQUIPMENT Sun visor: Removal - Refitting



Essential special tooling		
Car. 1597	Trim removal lever.	
Car. 1363	Set of trim removal levers.	

### REMOVAL

### I - REMOVAL PREPARATION OPERATION

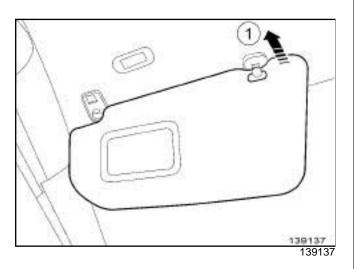

□ Unclip the sun visor (1) from its mounting.


# II - OPERATION FOR REMOVAL OF PART CONCERNED



Unclip the locking blanking plug (2) using the tool (Car. 1597).




□ Tilt the sun visor.

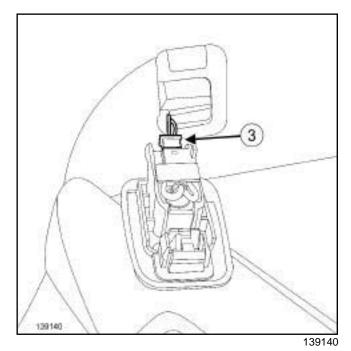


- $\hfill\square$  Disconnect the sun visor connector (3) .
- Remove the sun visor.

# INTERIOR EQUIPMENT Sun visor: Removal - Refitting



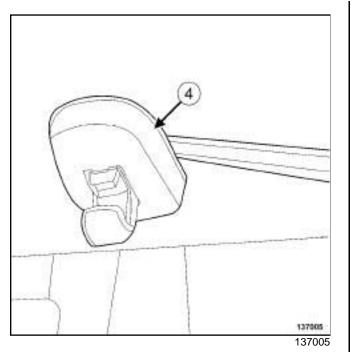

Unclip the trim (4) from the mounting using the tool (Car. 1363).

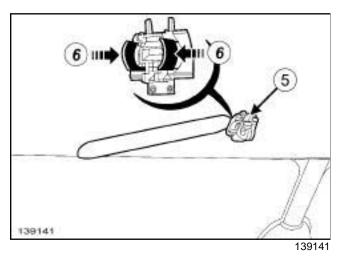

Unclip the sun visor mounting (5) using the tool (Car. 1363) while pressing on the clips (6).

### REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

- Clip:
  - the central sun visor mounting (5).
  - the central sun visor mounting trim (4).
- □ Connect the sun visor connector (3).
- Refit the sun visor.
- □ Clip the locking blanking plug in place (2).

- **II FINAL OPERATION**
- $\hfill\square$  Clip the sun visor onto the sun visor mounting.
- Carry out a function test.



B95 or D95 or E95 or J95 or K95


Essential special tooling

Car. 1597


Trim removal lever.

## REMOVAL

# OPERATION FOR REMOVAL OF PART CONCERNED

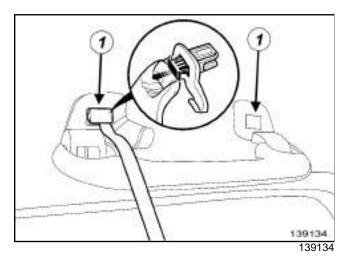

Unclip the locking blanking plugs (1) using the tool (Car. 1597).

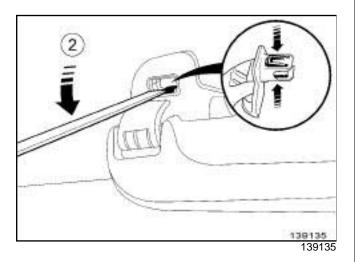

□ Remove the grab handle by pressing on the clips using a screwdriver at (2).

### REFITTING

### **REFITTING OPERATION FOR PART CONCERNED**

- □ Clip on the grab handle.
- □ Refit the locking blanking plugs.

# INTERIOR EQUIPMENT Rear side door sun blind: Removal - Refitting




### J95

### REMOVAL


### I - REMOVAL PREPARATION OPERATION

Remove the rear side door trim (see Rear side door trim: Removal - Refitting) (72A, Side opening element trim).

# II - OPERATION FOR REMOVAL OF PART CONCERNED

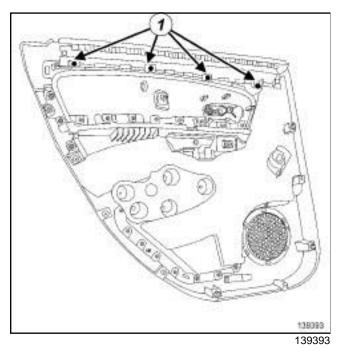

□ Remove the bolts (1).

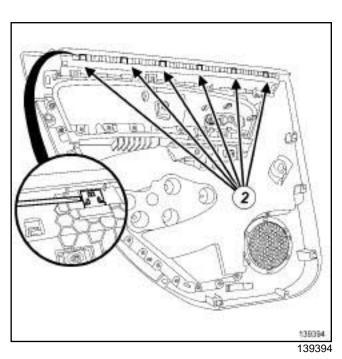

- □ Unclip the clips (2) using a flat-blade screwdriver.
- □ Remove the rear side door sun visor.

## REFITTING

# I - REFITTING OPERATION FOR PART CONCERNED

- $\hfill\square$  Refit the rear side door sun visor.
- □ Attach the clips.
- Refit the bolts (1).

### **II - FINAL OPERATION**

Refit the rear side door trim (see Rear side door trim: Removal - Refitting) (72A, Side opening element trim).

# INTERIOR EQUIPMENT Underseat flap and storage: Removal - Refitting




### J95

### REMOVAL


### I - REMOVAL PREPARATION OPERATION

 $\hfill\square$  Move the front seat forwards as far as possible.

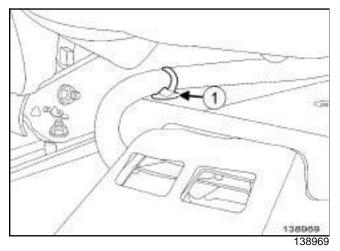


- Unclip the retaining clip (1) from the front passenger seat wiring.
- □ Move the front seat as far back as possible.

# II - OPERATION FOR REMOVAL OF PART CONCERNED

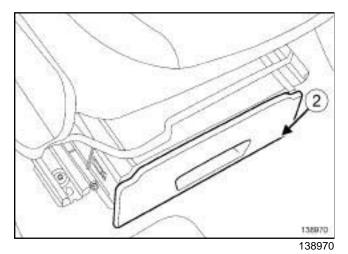

Remove the under-seat storage compartment flap
 (2).

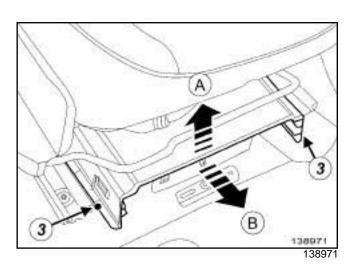


Remove:

- the under-seat storage compartment bolts (3) ,
- the under-seat storage compartment by lifting it at  $(\mathbf{A})$  and then pulling it toward the front of the vehicle  $(\mathbf{B})$ .
- □ Move the seat as far forward as possible.

## REFITTING

### I - REFITTING OPERATION FOR PART CONCERNED

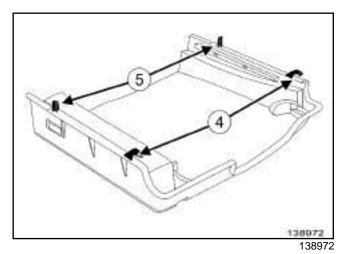

□ Refit the under-seat storage compartment.

#### Note:

When refitting the under-seat storage compartment, be sure to:

- correctly slide the guides (4) in the lugs provided,
- position the centring pins (5) in the centring holes.

## Underseat flap and storage: Removal - Refitting



# J95

- Refit:
  - the bolts (3),
    the under-seat storage compartment flap (2).
- **II FINAL OPERATION**
- Engage clip (1).
- □ Put the seat in its original position.

## Passenger presence detection ply: Removal - Refitting



### IMPORTANT

To ensure the pyrotechnic components operate correctly:

- do not bend the passenger presence sensor pad,


- do not apply glue or adhesive to the passenger presence sensor pad or to the seat cushion trim.

### REMOVAL

#### I - REMOVAL PREPARATION OPERATION

- Remove:
  - the front headrest (see Front headrest: Removal Refitting) ,
  - the complete front seat (see **Complete front seat: Removal Refitting**) (75A, Front seat frames and seat runners),
  - the front seat lower covers (see Front seat lower cover: Removal Refitting) (77A, Front seat trim),
  - the front seat base trim (see **Front seat base trim: Removal Refitting**) (77A, Front seat trim).

# II - OPERATION FOR REMOVAL OF PART CONCERNED

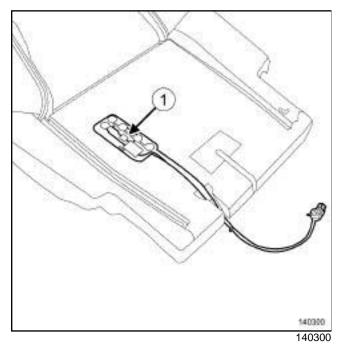

Carefully remove the passenger presence sensor cover (1) while holding the foam.

### REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

□ Refit the passenger presence sensor cover.

#### **II - FINAL OPERATION**

- Refit:
  - the front seat base trim (see Front seat base trim: Removal Refitting) (77A, Front seat trim),
  - the front seat lower covers (see Front seat lower cover: Removal Refitting) (77A, Front seat trim),
  - the complete front seat (see **Complete front seat: Removal Refitting**) (75A, Front seat frames and seat runners),
  - the front headrest (see Front headrest: Removal Refitting).
- Connect the battery (see Battery: Removal Refitting) (80A, Battery).
- □ Carry out a function test.