



# **Focus 2008.25 →**

## **WIRING DIAGRAMS**

### **New Manual**

**Note: This manual is valid as of model year 2008.25. It does NOT replace the previous one.**

# Focus Wiring Diagrams

## Table of Contents

### Group 1 – General Information

#### General Information

|                               |             |
|-------------------------------|-------------|
| Table of Contents .....       | 100-00-00-1 |
| Systems Overview .....        | 100-00-01-1 |
| Index .....                   | 100-00-02-1 |
| Introduction .....            | 100-00-03-1 |
| Symbols .....                 | 100-00-04-1 |
| Wiring Harness Overview ..... | 100-00-06-1 |

### Group 2 – Chassis

#### Brake System

|                         |              |
|-------------------------|--------------|
| Anti-Lock Control ..... | 206-09A-00-1 |
| Anti-Lock Control –     |              |
| Stability Assist .....  | 206-09C-00-1 |

#### Steering System

|                      |             |
|----------------------|-------------|
| Power Steering ..... | 211-02-00-1 |
|----------------------|-------------|

### Group 3 – Powertrain

#### Engine

|                                   |              |
|-----------------------------------|--------------|
| Engine Cooling – 1.6L (Z6) .....  | 303-03A-00-1 |
| Engine Cooling –                  |              |
| 1.8/2.0L Duratec-HE (MI4) .....   | 303-03B-00-1 |
| Engine Cooling –                  |              |
| 2.0L Duratorq-TDCi (DW) Diesel .  | 303-03C-00-1 |
| Fuel Charging and Controls –      |              |
| 1.6L (Z6) .....                   | 303-04A-00-1 |
| Fuel Charging and Controls –      |              |
| 1.8/2.0L Duratec-HE (MI4) .....   | 303-04B-00-1 |
| Fuel Charging and Controls –      |              |
| 2.0L Duratorq-TDCi (DW) Diesel .  | 303-04C-00-1 |
| Starting System – 1.6L (Z6) ..... | 303-06A-00-1 |
| Starting System –                 |              |
| 1.8/2.0L Duratec-HE (MI4) .....   | 303-06B-00-1 |
| Starting System –                 |              |
| 2.0L Duratorq-TDCi (DW) Diesel .  | 303-06C-00-1 |
| Engine Ignition – 1.6L (Z6) ..... | 303-07A-00-1 |
| Engine Ignition –                 |              |
| 1.8/2.0L Duratec-HE (MI4) .....   | 303-07B-00-1 |
| Glow Plug System –                |              |
| 2.0L Duratorq-TDCi (DW) Diesel .  | 303-07C-00-1 |

#### Electronic Engine Controls –

|                                  |              |
|----------------------------------|--------------|
| 1.6L (Z6) .....                  | 303-14A-00-1 |
| Electronic Engine Controls –     |              |
| 1.8/2.0L Duratec-HE (MI4) .....  | 303-14B-00-1 |
| Electronic Engine Controls –     |              |
| 2.0L Duratorq-TDCi (DW) Diesel . | 303-14C-00-1 |
| Automatic Transmission .....     | 307-01-00-1  |
| Manual Transmission –            |              |
| manual transmission (MPS6) ..... | 308-00-00-1  |
| Speed Control .....              | 310-03-00-1  |

### Group 4 – Electrical

#### Climate Control System

|                                     |              |
|-------------------------------------|--------------|
| Heating and Ventilation .....       | 412-02A-00-1 |
| Air Conditioning – without EATC ... | 412-03-00-1  |
| Air Conditioning – with EATC .....  | 412-03-00-6  |

#### Instrumentation and Warning Systems

|                                     |              |
|-------------------------------------|--------------|
| Instrument Cluster and Panel        |              |
| Illumination .....                  | 413-00-00-1  |
| Instrument Cluster .....            | 413-01-00-1  |
| Horn .....                          | 413-06-00-1  |
| Clock .....                         | 413-07-00-1  |
| Parking Aid .....                   | 413-13-00-1  |
| Generator and Regulator – 1.6L (Z6) | 414-02A-00-1 |
| Generator and Regulator –           |              |
| 1.8/2.0L Duratec-HE (MI4) .....     | 414-02B-00-1 |
| Generator and Regulator –           |              |
| 2.0L Duratorq-TDCi (DW) Diesel .    | 414-02C-00-1 |

#### Audio Systems

|                  |             |
|------------------|-------------|
| Audio Unit ..... | 415-01-00-1 |
| Speakers .....   | 415-03-00-1 |

#### Lighting

|                                     |              |
|-------------------------------------|--------------|
| Exterior Lighting – Headlamps ..... | 417-01-00-1  |
| Exterior Lighting –                 |              |
| Headlamp leveling .....             | 417-01-00-3  |
| Exterior Lighting – Stop Lamps .... | 417-01-00-9  |
| Exterior Lighting –                 |              |
| Turn Signal Lamps .....             | 417-01-00-13 |
| Exterior Lighting –                 |              |
| Position and Parking Lamps .....    | 417-01-00-21 |
| Exterior Lighting –                 |              |
| Licence plate illumination .....    | 417-01-00-23 |

|                                               |              |
|-----------------------------------------------|--------------|
| Exterior Lighting – Fog lamps . . . . .       | 417-01-00-25 |
| Exterior Lighting – Reversing lamps . . . . . | 417-01-00-27 |
| Interior Lighting . . . . .                   | 417-02-00-1  |

### Electrical Distribution

|                                         |             |
|-----------------------------------------|-------------|
| Module Communications Network . . . . . | 418-00-00-1 |
|-----------------------------------------|-------------|

### Electronic Feature Group

|                                                       |              |
|-------------------------------------------------------|--------------|
| Anti-Theft – Active . . . . .                         | 419-01A-00-1 |
| Anti-Theft – Passive . . . . .                        | 419-01B-00-1 |
| Multifunction Electronic Control<br>Modules . . . . . | 419-10-00-1  |

## Group 5 – Body and Paint

### Chassis

|                                                                               |              |
|-------------------------------------------------------------------------------|--------------|
| Rear View Mirrors . . . . .                                                   | 501-09-00-1  |
| Seating . . . . .                                                             | 501-10-00-1  |
| Glass, Frames and Mechanisms –<br>with front power windows . . . . .          | 501-11-00-1  |
| Glass, Frames and Mechanisms –<br>with front and rear power windows . . . . . | 501-11-00-3  |
| Glass, Frames and Mechanisms –<br>Heated rear window . . . . .                | 501-11-00-19 |

|                                                                               |              |
|-------------------------------------------------------------------------------|--------------|
| Glass, Frames and Mechanisms –<br>Heated power mirrors . . . . .              | 501-11-00-21 |
| Instrument Panel and Console . . . . .                                        | 501-12-00-1  |
| Handles, Locks, Latches and<br>Entry Systems – with central locking . . . . . | 501-14-00-1  |
| Handles, Locks, Latches and<br>Entry Systems – with double locking . . . . .  | 501-14-00-21 |
| Wipers and Washers . . . . .                                                  | 501-16-00-1  |
| Roof Opening Panel . . . . .                                                  | 501-17-00-1  |
| Safety Belt System . . . . .                                                  | 501-20A-00-1 |
| Supplemental Restraint System . . . . .                                       | 501-20B-00-1 |

## Group 7 – General Wiring Information

|                                      |             |
|--------------------------------------|-------------|
| Fuse and Relay Information . . . . . | 700-01-00-1 |
| Power Distribution . . . . .         | 700-02-00-1 |
| Fuse Details . . . . .               | 700-03-00-1 |
| Ground Distribution . . . . .        | 700-04-00-1 |
| Component Location Charts . . . . .  | 700-05-00-1 |
| Component Location Views . . . . .   | 700-06-00-1 |
| Connector Views . . . . .            | 700-07-00-1 |

The illustrations, technical information, data and descriptive text in this issue, to the best of our knowledge, were correct at the time of going to print. The right to make changes at any time, without notice, is reserved as part of Ford's policy of continuous development and improvement.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

Published by Ford Motor Company Ltd/Ford Werke AG.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, electronic, mechanical, photocopying, recording, translating or by other means without prior written permission of Ford Motor Company Ltd/Ford Werke AG.

© Ford Motor Company Ltd/Ford Werke AG 2004

# Systems Overview

02/2008  
100-00-01-1  
2008.25  
Focus

Engine Cooling – 1.6L (Z6)  
303-03A-00-1

Engine Cooling – 1.8/2.0L Duratec-HE (MI4)  
303-03B-00-1

Engine Cooling – 2.0L Duratorq-TDCi (DW)  
Diesel  
303-03C-00-1

Fuel Charging and Controls – 1.6L (Z6)  
303-04A-00-1

Fuel Charging and Controls – 1.8/2.0L Duratec-  
HE (MI4)  
303-04B-00-1

Fuel Charging and Controls – 2.0L  
Duratorq-TDCi (DW) Diesel  
303-04C-00-1

Starting System – 1.6L (Z6)  
303-06A-00-1

Starting System – 1.8/2.0L Duratec-HE (MI4)  
303-06B-00-1

Starting System – 2.0L Duratorq-TDCi (DW)  
Diesel  
303-06C-00-1

Engine Ignition – 1.6L (Z6)  
303-07A-00-1

Engine Ignition – 1.8/2.0L Duratec-HE (MI4)  
303-07B-00-1

Glow Plug System – 2.0L  
Duratorq-TDCi (DW) Diesel  
303-07C-00-1

Wipers and  
Washers  
501-16-00-1

Electronic Engine Controls –  
1.6L (Z6)  
303-14A-00-1

Electronic Engine Controls –  
1.8/2.0L Duratec-HE (MI4)  
303-14B-00-1

Electronic Engine Controls –  
2.0L Duratorq-TDCi (DW) Die-  
sel  
303-14C-00-1

Automatic Transmission  
307-01-00-1

Manual Transmission – manual  
transmission (MPS6)  
308-00-00-1

Speed Control  
310-03-00-1

Generator and Regulator  
414-02A-00-1

Generator and Regulator –  
1.8/2.0L Duratec-HE (MI4)  
414-02B-00-1

Generator and Regulator – 2.0L  
Duratorq-TDCi (DW) Diesel  
414-02C-00-1

Heating and Ventilation  
412-02A-00-1

Air Conditioning – without EATC  
412-03-00-1

Air Conditioning – with EATC  
412-03-00-6

Instrument Cluster and Panel Illumination  
413-00-00-1

Instrument Cluster  
413-01-00-1

Horn  
413-06-00-1

Clock  
413-07-00-1

Audio Unit  
415-01-00-1

Speakers  
415-03-00-1

Module Communications Network  
418-00-00-1

Anti-Theft – Active  
419-01A-00-1

Anti-Theft – Passive  
419-01B-00-1

Multifunction Electronic Control Modules  
419-10-00-1

Instrument Panel and Console  
501-12-00-1

Safety Belt System  
501-20A-00-1

Supplemental Restraint System  
501-20B-00-1

Exterior Lighting – Stop  
Lamps  
417-01-00-9

Exterior Lighting – Turn Signal  
Lamps  
417-01-00-13

Exterior Lighting – Position  
and Parking Lamps  
417-01-00-21

Exterior Lighting – Licence  
plate illumination  
417-01-00-23

Exterior Lighting – Fog lamps  
417-01-00-25

Exterior Lighting – Reversing  
lamps  
417-01-00-27

Interior Lighting  
417-02-00-1

Roof Opening Panel  
501-17-00-1

Glass, Frames and Mechan-  
isms – Heated rear window  
501-11-00-19

Parking Aid  
413-13-00-1

Seating  
501-10-00-1

Rear View Mirrors  
501-09-00-1

Glass, Frames and Mechan-  
isms – Heated  
power mirrors  
501-11-00-3

Glass, Frames and Mechan-  
isms – with front power win-  
dows  
501-11-00-1

Glass, Frames and Mechan-  
isms – with front and rear power  
windows  
501-11-00-3

Handles, Locks, Latches and  
Entry Systems – with central  
locking  
501-14-00-1

Handles, Locks, Latches and  
Entry Systems – with double  
locking  
501-14-00-21

Anti-Lock Control  
206-09A-00-1

Anti-Lock Control –  
Stability Assist  
206-09C-00-1

Power Steering  
211-02-00-1

Exterior Lighting – Headlamps  
417-01-00-1


Exterior Lighting – Headlamp  
leveling  
417-01-00-3

Exterior Lighting – Turn Signal  
Lamps  
417-01-00-13

Exterior Lighting – Position  
and Parking Lamps  
417-01-00-21

Exterior Lighting – Fog lamps  
417-01-00-25

Parking Aid  
413-13-00-1

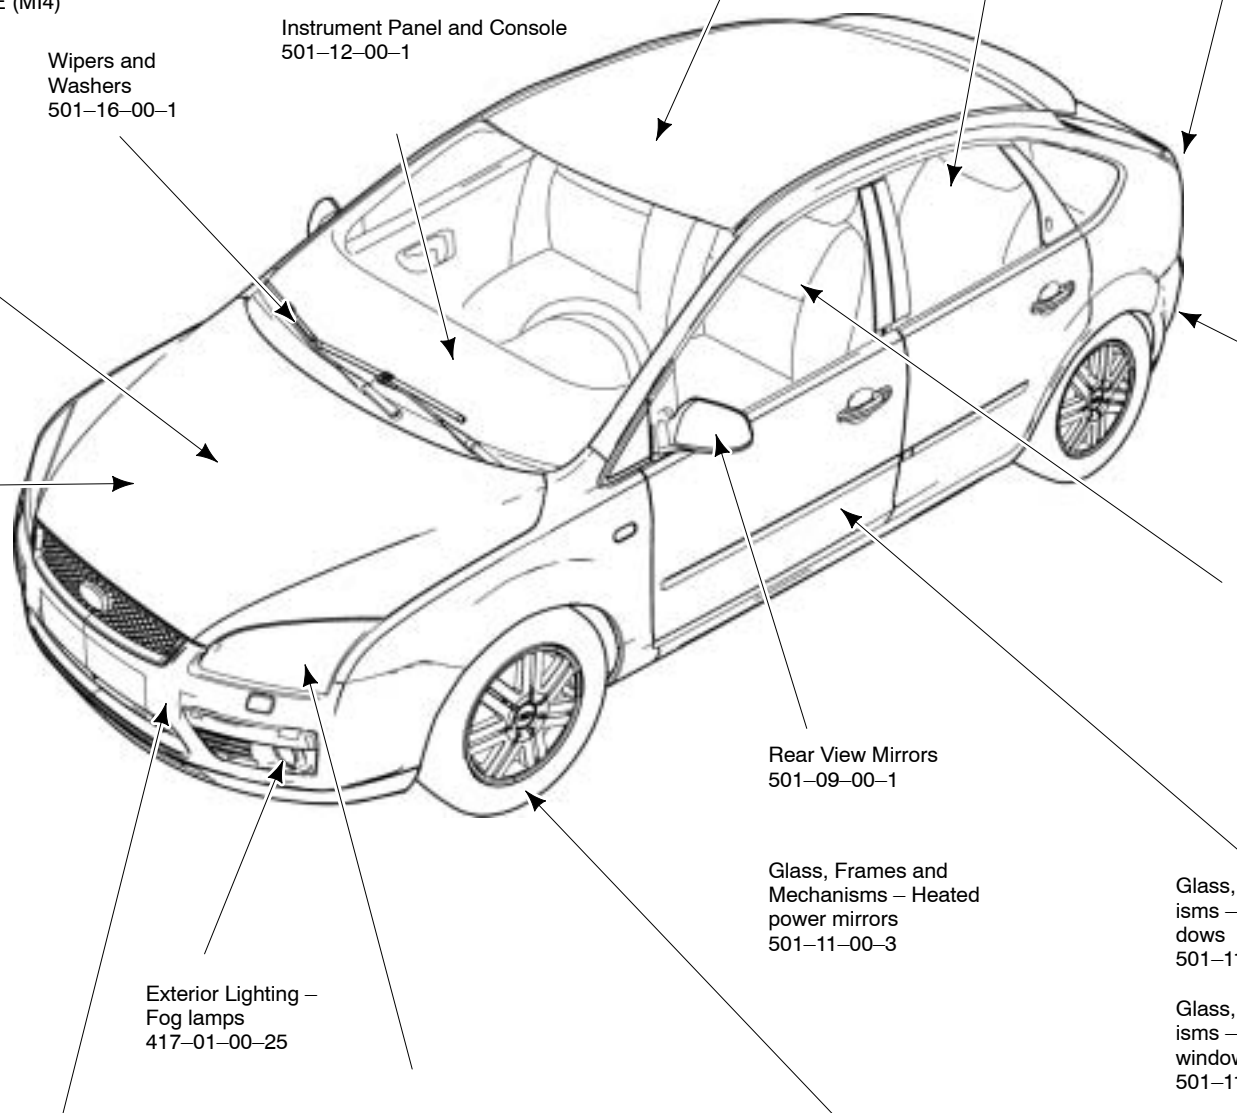

|                                           |               |
|-------------------------------------------|---------------|
| A/C Compressor clutch, Y16                | 412-03-00-13  |
| A/C Compressor clutch, Y16                | 412-03-00-14  |
| A/C Compressor clutch, Y16                | 412-03-00-15  |
| A/C Compressor clutch, Y16                | 412-03-00-3   |
| A/C Compressor clutch, Y16                | 412-03-00-4   |
| A/C Compressor clutch, Y16                | 412-03-00-5   |
| A/C high-pressure switch, N126            | 412-03-00-15  |
| A/C high-pressure switch, N126            | 412-03-00-5   |
| A/C low-pressure switch, N246             | 412-03-00-13  |
| A/C low-pressure switch, N246             | 412-03-00-14  |
| A/C low-pressure switch, N246             | 412-03-00-15  |
| A/C low-pressure switch, N246             | 412-03-00-3   |
| A/C low-pressure switch, N246             | 412-03-00-4   |
| A/C low-pressure switch, N246             | 412-03-00-5   |
| A/C pressure sensor, B308                 | 303-03A-00-1  |
| A/C pressure sensor, B308                 | 303-03B-00-1  |
| A/C pressure sensor, B308                 | 303-03B-00-2  |
| A/C pressure sensor, B308                 | 303-14A-00-5  |
| A/C pressure sensor, B308                 | 303-14B-00-2  |
| A/C pressure sensor, B308                 | 303-14B-00-8  |
| A/C pressure sensor, B308                 | 412-03-00-13  |
| A/C pressure sensor, B308                 | 412-03-00-14  |
| A/C pressure sensor, B308                 | 412-03-00-3   |
| A/C pressure sensor, B308                 | 412-03-00-4   |
| A/C Wide Open Throttle (WOT) relay, K32   | 412-03-00-13  |
| A/C Wide Open Throttle (WOT) relay, K32   | 412-03-00-14  |
| A/C Wide Open Throttle (WOT) relay, K32   | 412-03-00-15  |
| A/C Wide Open Throttle (WOT) relay, K32   | 412-03-00-3   |
| A/C Wide Open Throttle (WOT) relay, K32   | 412-03-00-4   |
| A/C Wide Open Throttle (WOT) relay, K32   | 412-03-00-5   |
| ABS module, A7                            | 206-09A-00-1  |
| Accelerator pedal position sensor, B129   | 303-14B-00-12 |
| Accelerator pedal position sensor, B129   | 303-14B-00-6  |
| Accelerator pedal position sensor, B129   | 303-14C-00-16 |
| Accelerator pedal position sensor, B129   | 303-14C-00-7  |
| Adaptive front lighting module, A379      | 417-01-00-4   |
| Adaptive front lighting module, A379      | 417-01-00-6   |
| Air Conditioning – with EATC              | 412-03-00-6   |
| Air Conditioning – without EATC           | 412-03-00-1   |
| Air temperature door motor, LH side, M100 | 412-03-00-10  |
| Air temperature door motor, RH side, M101 | 412-03-00-10  |
| Antenna, A151                             | 413-07-00-1   |
| Antenna, A151                             | 413-07-00-2   |
| Antenna, A151                             | 415-01-00-1   |
| Antenna, A151                             | 415-01-00-6   |
| Antenna, A151                             | 415-01-00-7   |
| Anti-Lock Control                         | 206-09A-00-1  |
| Anti-Lock Control – Stability Assist      | 206-09C-00-1  |
| Anti-Theft – Active                       | 419-01A-00-1  |

|                                                |               |
|------------------------------------------------|---------------|
| Anti-Theft – Passive                           | 419-01B-00-1  |
| Anti-theft alarm horn, H5                      | 419-01A-00-1  |
| Audio Unit                                     | 415-01-00-1   |
| Automatic Transmission                         | 307-01-00-1   |
| Auxiliary IN, D81                              | 415-01-00-4   |
| Auxiliary IN, D81                              | 415-01-00-5   |
| Auxiliary IN, D81                              | 415-01-00-6   |
| Auxiliary IN, D81                              | 415-01-00-7   |
| Barometric Absolute Pressure (BAP) sensor, B70 | 303-14A-00-5  |
| Battery Junction Box (BJB), P93                | 412-03-00-3   |
| Battery Junction Box (BJB), P93                | 412-03-00-4   |
| Battery Junction Box (BJB), P93                | 412-03-00-5   |
| Battery Junction Box (BJB), P93                | 700-02-00-1   |
| Battery Junction Box (BJB), P93                | 700-03-00-1   |
| Battery, O1                                    | 414-02B-00-1  |
| Battery, O1                                    | 414-02B-00-2  |
| Battery, O1                                    | 414-02C-00-1  |
| Battery, O1                                    | 700-02-00-1   |
| Blower motor relay, K14                        | 412-02A-00-1  |
| Blower motor relay, K14                        | 412-03-00-1   |
| Blower motor relay, K14                        | 412-03-00-7   |
| Blower motor resistor, R21                     | 412-02A-00-1  |
| Blower motor resistor, R21                     | 412-03-00-1   |
| Blower motor, M3                               | 412-02A-00-1  |
| Blower motor, M3                               | 412-03-00-1   |
| Blower motor, M3                               | 412-03-00-7   |
| Boost pressure sensor, B108                    | 303-14C-00-14 |
| Boost pressure sensor, B108                    | 303-14C-00-5  |
| Brake fluid level switch, N1                   | 413-01-00-2   |
| Brake pedal position switch, N82               | 206-09A-00-1  |
| Brake pedal position switch, N82               | 206-09C-00-1  |
| Brake pedal position switch, N82               | 310-03-00-2   |
| Brake pedal position switch, N82               | 413-01-00-11  |
| Brake pedal position switch, N82               | 413-01-00-12  |
| Brake pressure switch, N249                    | 308-00-00-2   |
| Buzzer, H9                                     | 413-13-00-1   |
| Buzzer, H9                                     | 413-13-00-3   |
| Buzzer, H9                                     | 413-13-00-4   |
| Buzzer, H9                                     | 413-13-00-5   |
| Camshaft position sensor, B41                  | 303-07A-00-1  |
| Camshaft position sensor, B41                  | 303-07B-00-1  |
| Camshaft position sensor, B41                  | 303-14A-00-3  |
| Camshaft position sensor, B41                  | 303-14C-00-15 |
| Camshaft position sensor, B41                  | 303-14C-00-6  |
| Catalyst monitor sensor, B192                  | 303-14A-00-4  |
| Catalyst monitor sensor, B192                  | 303-14B-00-1  |
| Catalyst monitor sensor, B192                  | 303-14B-00-7  |
| CD changer, A144                               | 415-01-00-4   |
| CD changer, A144                               | 415-01-00-5   |

|                                                                             |               |
|-----------------------------------------------------------------------------|---------------|
| Central Junction Box (CJB), P91 .....                                       | 700-02-00-1   |
| Central Junction Box (CJB), P91 .....                                       | 700-03-00-2   |
| Central Junction Box (CJB), P91 .....                                       | 700-03-00-34  |
| Cigar lighter, front, R42 .....                                             | 501-12-00-1   |
| Clock .....                                                                 | 413-07-00-1   |
| Clock spring, P13 .....                                                     | 310-03-00-1   |
| Clock spring, P13 .....                                                     | 413-06-00-1   |
| Clock spring, P13 .....                                                     | 501-20B-00-3  |
| Clutch pedal position switch, N81 .....                                     | 303-14A-00-3  |
| Clutch pedal position switch, N81 .....                                     | 303-14B-00-12 |
| Clutch pedal position switch, N81 .....                                     | 303-14B-00-6  |
| Clutch pedal position switch, N81 .....                                     | 303-14C-00-16 |
| Clutch pedal position switch, N81 .....                                     | 303-14C-00-7  |
| Clutch pedal position switch, N81 .....                                     | 310-03-00-2   |
| Clutch pedal position switch, N81 .....                                     | 413-01-00-11  |
| Clutch pedal position switch, N81 .....                                     | 413-01-00-12  |
| Component Location Charts .....                                             | 700-05-00-1   |
| Component Location Views .....                                              | 700-06-00-1   |
| Connector Views .....                                                       | 700-07-00-1   |
| Cooling fan module, A118 .....                                              | 303-03A-00-1  |
| Cooling fan module, A118 .....                                              | 303-03B-00-1  |
| Cooling fan module, A118 .....                                              | 303-03B-00-2  |
| Cooling fan module, A118 .....                                              | 303-03C-00-1  |
| Cooling fan module, A118 .....                                              | 303-03C-00-2  |
| Crankshaft position sensor, B43 .....                                       | 303-07A-00-1  |
| Crankshaft position sensor, B43 .....                                       | 303-07B-00-1  |
| Crankshaft position sensor, B43 .....                                       | 303-07B-00-2  |
| Crankshaft position sensor, B43 .....                                       | 303-14A-00-3  |
| Crankshaft position sensor, B43 .....                                       | 303-14B-00-3  |
| Crankshaft position sensor, B43 .....                                       | 303-14B-00-9  |
| Crankshaft position sensor, B43 .....                                       | 303-14C-00-14 |
| Crankshaft position sensor, B43 .....                                       | 303-14C-00-5  |
| Data Link Connector (DLC), D20 .....                                        | 418-00-00-1   |
| Data Link Connector (DLC), D20 .....                                        | 418-00-00-11  |
| Data Link Connector (DLC), D20 .....                                        | 418-00-00-12  |
| Data Link Connector (DLC), D20 .....                                        | 418-00-00-14  |
| Data Link Connector (DLC), D20 .....                                        | 418-00-00-2   |
| Defrost mode actuator, M210 .....                                           | 412-03-00-12  |
| Diesel particulate filter differential pressure feedback sensor, B189 ..... | 303-14C-00-15 |
| Diesel particulate filter differential pressure feedback sensor, B189 ..... | 303-14C-00-8  |
| Discharge temperature sensor, floor, LH side, B304 .....                    | 412-03-00-9   |
| Discharge temperature sensor, floor, RH side, B305 .....                    | 412-03-00-9   |
| Discharge temperature sensor, panel, LH side, B306 .....                    | 412-03-00-9   |
| Discharge temperature sensor, panel, RH side, B307 .....                    | 412-03-00-9   |
| Door control module, driver, A351 .....                                     | 419-01A-00-3  |
| Door control module, driver, A351 .....                                     | 419-01A-00-5  |
| Door control module, driver, A351 .....                                     | 419-01A-00-7  |
| Door control module, driver, A351 .....                                     | 501-11-00-11  |
| Door control module, driver, A351 .....                                     | 501-11-00-15  |

|                                               |              |
|-----------------------------------------------|--------------|
| Door control module, driver, A351 .....       | 501-11-00-3  |
| Door control module, driver, A351 .....       | 501-11-00-7  |
| Door control module, driver, A351 .....       | 501-14-00-16 |
| Door control module, driver, A351 .....       | 501-14-00-26 |
| Door control module, driver, A351 .....       | 501-14-00-36 |
| Door control module, driver, A351 .....       | 501-14-00-6  |
| Door control module, LH side rear, A353 ..... | 419-01A-00-7 |
| Door control module, LH side rear, A353 ..... | 501-11-00-13 |
| Door control module, LH side rear, A353 ..... | 501-11-00-17 |
| Door control module, LH side rear, A353 ..... | 501-11-00-5  |
| Door control module, LH side rear, A353 ..... | 501-11-00-9  |
| Door control module, LH side rear, A353 ..... | 501-14-00-18 |
| Door control module, LH side rear, A353 ..... | 501-14-00-28 |
| Door control module, LH side rear, A353 ..... | 501-14-00-38 |
| Door control module, LH side rear, A353 ..... | 501-14-00-8  |
| Door control module, passenger, A352 .....    | 419-01A-00-3 |
| Door control module, passenger, A352 .....    | 419-01A-00-5 |
| Door control module, passenger, A352 .....    | 419-01A-00-7 |
| Door control module, passenger, A352 .....    | 501-11-00-12 |
| Door control module, passenger, A352 .....    | 501-11-00-16 |
| Door control module, passenger, A352 .....    | 501-11-00-4  |
| Door control module, passenger, A352 .....    | 501-11-00-8  |
| Door control module, passenger, A352 .....    | 501-14-00-17 |
| Door control module, passenger, A352 .....    | 501-14-00-27 |
| Door control module, passenger, A352 .....    | 501-14-00-37 |
| Door control module, passenger, A352 .....    | 501-14-00-7  |
| Door control module, RH side rear, A354 ..... | 419-01A-00-7 |
| Door control module, RH side rear, A354 ..... | 501-11-00-10 |
| Door control module, RH side rear, A354 ..... | 501-11-00-14 |
| Door control module, RH side rear, A354 ..... | 501-11-00-18 |
| Door control module, RH side rear, A354 ..... | 501-11-00-6  |
| Door control module, RH side rear, A354 ..... | 501-14-00-19 |
| Door control module, RH side rear, A354 ..... | 501-14-00-29 |
| Door control module, RH side rear, A354 ..... | 501-14-00-39 |
| Door control module, RH side rear, A354 ..... | 501-14-00-9  |
| Door lock unit, driver side front, A172 ..... | 419-01A-00-2 |
| Door lock unit, driver side front, A172 ..... | 419-01A-00-3 |
| Door lock unit, driver side front, A172 ..... | 419-01A-00-4 |
| Door lock unit, driver side front, A172 ..... | 419-01A-00-5 |
| Door lock unit, driver side front, A172 ..... | 419-01A-00-6 |
| Door lock unit, driver side front, A172 ..... | 419-01A-00-7 |
| Door lock unit, driver side front, A172 ..... | 501-14-00-1  |
| Door lock unit, driver side front, A172 ..... | 501-14-00-11 |
| Door lock unit, driver side front, A172 ..... | 501-14-00-16 |
| Door lock unit, driver side front, A172 ..... | 501-14-00-21 |
| Door lock unit, driver side front, A172 ..... | 501-14-00-26 |
| Door lock unit, driver side front, A172 ..... | 501-14-00-31 |
| Door lock unit, driver side front, A172 ..... | 501-14-00-36 |
| Door lock unit, driver side front, A172 ..... | 501-14-00-6  |



|                                                  |               |
|--------------------------------------------------|---------------|
| Door lock unit, LH rear, A275 .....              | 419-01A-00-6  |
| Door lock unit, LH rear, A275 .....              | 419-01A-00-7  |
| Door lock unit, LH rear, A275 .....              | 501-14-00-13  |
| Door lock unit, LH rear, A275 .....              | 501-14-00-18  |
| Door lock unit, LH rear, A275 .....              | 501-14-00-23  |
| Door lock unit, LH rear, A275 .....              | 501-14-00-28  |
| Door lock unit, LH rear, A275 .....              | 501-14-00-3   |
| Door lock unit, LH rear, A275 .....              | 501-14-00-33  |
| Door lock unit, LH rear, A275 .....              | 501-14-00-38  |
| Door lock unit, LH rear, A275 .....              | 501-14-00-8   |
| Door lock unit, liftgate, A333 .....             | 419-01A-00-1  |
| Door lock unit, liftgate, A333 .....             | 501-14-00-10  |
| Door lock unit, liftgate, A333 .....             | 501-14-00-14  |
| Door lock unit, liftgate, A333 .....             | 501-14-00-20  |
| Door lock unit, liftgate, A333 .....             | 501-14-00-24  |
| Door lock unit, liftgate, A333 .....             | 501-14-00-30  |
| Door lock unit, liftgate, A333 .....             | 501-14-00-34  |
| Door lock unit, liftgate, A333 .....             | 501-14-00-4   |
| Door lock unit, liftgate, A333 .....             | 501-14-00-40  |
| Door lock unit, passenger side front, A173 ..... | 419-01A-00-3  |
| Door lock unit, passenger side front, A173 ..... | 419-01A-00-5  |
| Door lock unit, passenger side front, A173 ..... | 419-01A-00-6  |
| Door lock unit, passenger side front, A173 ..... | 419-01A-00-7  |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-12  |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-17  |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-2   |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-22  |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-27  |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-32  |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-37  |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-7   |
| Door lock unit, RH rear, A276 .....              | 419-01A-00-6  |
| Door lock unit, RH rear, A276 .....              | 419-01A-00-7  |
| Door lock unit, RH rear, A276 .....              | 501-14-00-13  |
| Door lock unit, RH rear, A276 .....              | 501-14-00-19  |
| Door lock unit, RH rear, A276 .....              | 501-14-00-23  |
| Door lock unit, RH rear, A276 .....              | 501-14-00-29  |
| Door lock unit, RH rear, A276 .....              | 501-14-00-3   |
| Door lock unit, RH rear, A276 .....              | 501-14-00-33  |
| Door lock unit, RH rear, A276 .....              | 501-14-00-39  |
| Door lock unit, RH rear, A276 .....              | 501-14-00-9   |
| Driver air bag unit, A42 .....                   | 501-20B-00-3  |
| Driver seat backrest motor, M230 .....           | 501-10-00-1   |
| Driver seat height motor, M158 .....             | 501-10-00-1   |
| Driver seat horizontal motor, M227 .....         | 501-10-00-1   |
| EGR stepper motor, M251 .....                    | 303-14A-00-2  |
| EGR stepper motor, M251 .....                    | 303-14B-00-10 |
| EGR stepper motor, M251 .....                    | 303-14B-00-4  |
| EGR throttle actuator, M252 .....                | 303-14C-00-11 |

|                                                                       |               |
|-----------------------------------------------------------------------|---------------|
| EGR throttle actuator, M252 .....                                     | 303-14C-00-2  |
| Electrical Hydraulic Power Assist Steering (EHPAS) module, A357 ..... | 211-02-00-1   |
| Electronic Automatic Temperature Control (EATC) module, A205 .....    | 412-03-00-6   |
| Electronic Engine Controls – 1.6L (Z6) .....                          | 303-14A-00-1  |
| Electronic Engine Controls – 1.8/2.0L Duratec-HE (MI4) .....          | 303-14B-00-1  |
| Electronic Engine Controls – 2.0L Duratorq-TDCi (DW) Diesel .....     | 303-14C-00-1  |
| Electronic Stability Program (ESP) module, A176 .....                 | 206-09C-00-1  |
| Electronic Stability Program (ESP) switch, N346 .....                 | 206-09C-00-1  |
| Electronic Throttle Control (ETC) module, A464 .....                  | 303-14B-00-2  |
| Electronic Throttle Control (ETC) module, A464 .....                  | 303-14B-00-8  |
| Engine compartment switch, N21 .....                                  | 419-01A-00-1  |
| Engine Coolant Temperature (ECT) sensor, B10 .....                    | 303-03A-00-1  |
| Engine Coolant Temperature (ECT) sensor, B10 .....                    | 303-03B-00-1  |
| Engine Coolant Temperature (ECT) sensor, B10 .....                    | 303-03B-00-2  |
| Engine Coolant Temperature (ECT) sensor, B10 .....                    | 303-03C-00-1  |
| Engine Coolant Temperature (ECT) sensor, B10 .....                    | 303-03C-00-2  |
| Engine Coolant Temperature (ECT) sensor, B10 .....                    | 303-14A-00-4  |
| Engine Coolant Temperature (ECT) sensor, B10 .....                    | 303-14B-00-2  |
| Engine Coolant Temperature (ECT) sensor, B10 .....                    | 303-14B-00-8  |
| Engine Coolant Temperature (ECT) sensor, B10 .....                    | 303-14C-00-14 |
| Engine Coolant Temperature (ECT) sensor, B10 .....                    | 303-14C-00-5  |
| Engine Cooling – 1.6L (Z6) .....                                      | 303-03A-00-1  |
| Engine Cooling – 1.8/2.0L Duratec-HE (MI4) .....                      | 303-03B-00-1  |
| Engine Cooling – 2.0L Duratorq-TDCi (DW) Diesel .....                 | 303-03C-00-1  |
| Engine Ignition – 1.6L (Z6) .....                                     | 303-07A-00-1  |
| Engine Ignition – 1.8/2.0L Duratec-HE (MI4) .....                     | 303-07B-00-1  |
| Evaporative emission canister purge valve, Y1 .....                   | 303-14A-00-3  |
| Evaporative emission canister purge valve, Y1 .....                   | 303-14B-00-10 |
| Evaporative emission canister purge valve, Y1 .....                   | 303-14B-00-4  |
| Exhaust Gas Recirculation (EGR) valve, Y2 .....                       | 303-14C-00-15 |
| Exhaust Gas Recirculation (EGR) valve, Y2 .....                       | 303-14C-00-6  |
| Exterior Lighting – Fog lamps .....                                   | 417-01-00-25  |
| Exterior Lighting – Headlamp leveling .....                           | 417-01-00-3   |
| Exterior Lighting – Headlamps .....                                   | 417-01-00-1   |
| Exterior Lighting – Licence plate illumination .....                  | 417-01-00-23  |
| Exterior Lighting – Position and Parking Lamps .....                  | 417-01-00-21  |
| Exterior Lighting – Reversing lamps .....                             | 417-01-00-27  |
| Exterior Lighting – Stop Lamps .....                                  | 417-01-00-9   |
| Exterior Lighting – Turn Signal Lamps .....                           | 417-01-00-13  |
| Exterior mirror, driver side, A355 .....                              | 417-01-00-15  |
| Exterior mirror, driver side, A355 .....                              | 417-01-00-16  |
| Exterior mirror, driver side, A355 .....                              | 417-01-00-17  |
| Exterior mirror, driver side, A355 .....                              | 417-01-00-18  |
| Exterior mirror, driver side, A355 .....                              | 417-01-00-19  |
| Exterior mirror, driver side, A355 .....                              | 417-01-00-20  |
| Exterior mirror, driver side, A355 .....                              | 501-09-00-1   |
| Exterior mirror, driver side, A355 .....                              | 501-09-00-2   |
| Exterior mirror, driver side, A355 .....                              | 501-09-00-3   |
| Exterior mirror, driver side, A355 .....                              | 501-09-00-5   |

|                                             |              |
|---------------------------------------------|--------------|
| Exterior mirror, driver side, A355 .....    | 501-09-00-6  |
| Exterior mirror, driver side, A355 .....    | 501-11-00-21 |
| Exterior mirror, passenger side, A356 ..... | 417-01-00-15 |
| Exterior mirror, passenger side, A356 ..... | 417-01-00-16 |
| Exterior mirror, passenger side, A356 ..... | 417-01-00-17 |
| Exterior mirror, passenger side, A356 ..... | 417-01-00-18 |
| Exterior mirror, passenger side, A356 ..... | 417-01-00-19 |
| Exterior mirror, passenger side, A356 ..... | 417-01-00-20 |
| Exterior mirror, passenger side, A356 ..... | 501-09-00-1  |
| Exterior mirror, passenger side, A356 ..... | 501-09-00-2  |
| Exterior mirror, passenger side, A356 ..... | 501-09-00-4  |
| Exterior mirror, passenger side, A356 ..... | 501-09-00-5  |
| Exterior mirror, passenger side, A356 ..... | 501-09-00-7  |
| Exterior mirror, passenger side, A356 ..... | 501-09-00-9  |
| Exterior mirror, passenger side, A356 ..... | 501-11-00-22 |
| F1 .....                                    | 700-02-00-1  |
| F1 .....                                    | 700-03-00-1  |
| F2 .....                                    | 700-02-00-1  |
| F2 .....                                    | 700-03-00-1  |
| F3 .....                                    | 700-02-00-1  |
| F3 .....                                    | 700-02-00-2  |
| F3 .....                                    | 700-03-00-2  |
| F4 .....                                    | 700-02-00-1  |
| F4 .....                                    | 700-03-00-3  |
| F6 .....                                    | 700-02-00-1  |
| F6 .....                                    | 700-02-00-7  |
| F6 .....                                    | 700-03-00-4  |
| F7 .....                                    | 700-02-00-1  |
| F7 .....                                    | 700-03-00-4  |
| F8 .....                                    | 700-02-00-1  |
| F8 .....                                    | 700-03-00-4  |
| F9 .....                                    | 700-02-00-1  |
| F9 .....                                    | 700-02-00-5  |
| F9 .....                                    | 700-02-00-6  |
| F9 .....                                    | 700-02-00-7  |
| F9 .....                                    | 700-03-00-5  |
| F10 .....                                   | 700-02-00-1  |
| F10 .....                                   | 700-03-00-6  |
| F10 .....                                   | 700-03-00-7  |
| F11 .....                                   | 700-02-00-1  |
| F11 .....                                   | 700-02-00-3  |
| F11 .....                                   | 700-02-00-4  |
| F11 .....                                   | 700-02-00-8  |
| F11 .....                                   | 700-02-00-9  |
| F11 .....                                   | 700-03-00-8  |
| F12 .....                                   | 700-02-00-1  |
| F12 .....                                   | 700-02-00-8  |
| F12 .....                                   | 700-03-00-9  |
| F13 .....                                   | 700-02-00-1  |

|     |              |
|-----|--------------|
| F13 | 700-03-00-10 |
| F19 | 700-02-00-3  |
| F19 | 700-02-00-4  |
| F19 | 700-03-00-11 |
| F20 | 700-02-00-1  |
| F20 | 700-03-00-12 |
| F22 | 700-02-00-3  |
| F22 | 700-02-00-4  |
| F22 | 700-03-00-12 |
| F24 | 700-02-00-1  |
| F24 | 700-03-00-13 |
| F25 | 700-02-00-3  |
| F25 | 700-02-00-4  |
| F25 | 700-02-00-8  |
| F25 | 700-03-00-14 |
| F25 | 700-03-00-15 |
| F25 | 700-03-00-16 |
| F26 | 700-02-00-1  |
| F26 | 700-03-00-17 |
| F27 | 700-02-00-1  |
| F27 | 700-03-00-17 |
| F28 | 700-02-00-7  |
| F28 | 700-03-00-17 |
| F30 | 700-02-00-1  |
| F30 | 700-03-00-18 |
| F30 | 700-03-00-19 |
| F31 | 700-02-00-1  |
| F31 | 700-03-00-20 |
| F32 | 700-02-00-6  |
| F32 | 700-03-00-21 |
| F33 | 700-02-00-5  |
| F33 | 700-02-00-6  |
| F33 | 700-02-00-7  |
| F33 | 700-03-00-22 |
| F33 | 700-03-00-23 |
| F33 | 700-03-00-24 |
| F34 | 700-02-00-5  |
| F34 | 700-02-00-6  |
| F34 | 700-02-00-7  |
| F34 | 700-03-00-25 |
| F34 | 700-03-00-26 |
| F34 | 700-03-00-27 |
| F35 | 700-02-00-5  |
| F35 | 700-02-00-6  |
| F35 | 700-02-00-7  |
| F35 | 700-03-00-28 |
| F35 | 700-03-00-29 |
| F35 | 700-03-00-30 |
| F36 | 700-02-00-5  |

|      |              |
|------|--------------|
| F36  | 700-02-00-6  |
| F36  | 700-02-00-7  |
| F36  | 700-03-00-31 |
| F36  | 700-03-00-32 |
| F36  | 700-03-00-33 |
| F100 | 700-02-00-3  |
| F100 | 700-02-00-4  |
| F100 | 700-03-00-34 |
| F101 | 700-02-00-1  |
| F101 | 700-03-00-3  |
| F101 | 700-03-00-35 |
| F102 | 700-02-00-2  |
| F102 | 700-03-00-2  |
| F102 | 700-03-00-36 |
| F103 | 700-02-00-2  |
| F103 | 700-02-00-9  |
| F103 | 700-03-00-2  |
| F103 | 700-03-00-3  |
| F103 | 700-03-00-36 |
| F104 | 700-02-00-1  |
| F104 | 700-03-00-3  |
| F104 | 700-03-00-36 |
| F105 | 700-02-00-1  |
| F105 | 700-02-00-3  |
| F105 | 700-02-00-4  |
| F105 | 700-03-00-3  |
| F105 | 700-03-00-37 |
| F106 | 700-02-00-2  |
| F106 | 700-03-00-2  |
| F106 | 700-03-00-37 |
| F107 | 700-02-00-2  |
| F107 | 700-03-00-2  |
| F107 | 700-03-00-37 |
| F108 | 700-02-00-3  |
| F108 | 700-02-00-4  |
| F108 | 700-03-00-38 |
| F109 | 700-02-00-1  |
| F109 | 700-03-00-39 |
| F111 | 700-02-00-2  |
| F111 | 700-03-00-2  |
| F111 | 700-03-00-40 |
| F112 | 700-02-00-1  |
| F112 | 700-03-00-3  |
| F112 | 700-03-00-41 |
| F114 | 700-02-00-3  |
| F114 | 700-02-00-4  |
| F114 | 700-03-00-42 |
| F115 | 700-02-00-3  |
| F115 | 700-02-00-4  |

|      |              |
|------|--------------|
| F115 | 700-03-00-42 |
| F116 | 700-02-00-8  |
| F116 | 700-03-00-43 |
| F117 | 700-02-00-9  |
| F117 | 700-03-00-44 |
| F118 | 700-02-00-1  |
| F118 | 700-03-00-3  |
| F118 | 700-03-00-45 |
| F120 | 700-02-00-1  |
| F120 | 700-03-00-3  |
| F120 | 700-03-00-45 |
| F122 | 700-02-00-3  |
| F122 | 700-02-00-4  |
| F122 | 700-03-00-46 |
| F124 | 700-02-00-9  |
| F124 | 700-03-00-47 |
| F125 | 700-02-00-9  |
| F125 | 700-03-00-48 |
| F127 | 700-02-00-8  |
| F127 | 700-03-00-49 |
| F129 | 700-02-00-2  |
| F129 | 700-03-00-2  |
| F129 | 700-03-00-50 |
| F131 | 700-02-00-1  |
| F131 | 700-03-00-3  |
| F131 | 700-03-00-51 |
| F132 | 700-02-00-3  |
| F132 | 700-02-00-4  |
| F132 | 700-03-00-52 |
| F133 | 700-02-00-2  |
| F133 | 700-03-00-2  |
| F133 | 700-03-00-53 |
| F134 | 700-02-00-2  |
| F134 | 700-03-00-2  |
| F134 | 700-03-00-53 |
| F135 | 700-02-00-2  |
| F135 | 700-03-00-2  |
| F135 | 700-03-00-54 |
| F136 | 700-02-00-8  |
| F136 | 700-03-00-54 |
| F137 | 700-02-00-1  |
| F137 | 700-03-00-3  |
| F137 | 700-03-00-55 |
| F138 | 700-02-00-3  |
| F138 | 700-02-00-4  |
| F138 | 700-02-00-5  |
| F138 | 700-03-00-56 |
| F138 | 700-03-00-57 |
| F138 | 700-03-00-58 |

|                                                                   |               |
|-------------------------------------------------------------------|---------------|
| F139 .....                                                        | 700-03-00-59  |
| F140 .....                                                        | 700-03-00-59  |
| F141 .....                                                        | 700-02-00-8   |
| F141 .....                                                        | 700-03-00-60  |
| F141 .....                                                        | 700-03-00-61  |
| F142 .....                                                        | 700-03-00-62  |
| F143 .....                                                        | 700-03-00-62  |
| F1000 .....                                                       | 700-02-00-1   |
| F1000 .....                                                       | 700-03-00-63  |
| F1000 .....                                                       | 700-03-00-64  |
| Fog lamp, LH front, E43 .....                                     | 417-01-00-25  |
| Fog lamp, LH front, E43 .....                                     | 417-01-00-26  |
| Fog lamp, RH front, E42 .....                                     | 417-01-00-25  |
| Fog lamp, RH front, E42 .....                                     | 417-01-00-26  |
| Footwell lamp, LH front, E61 .....                                | 417-02-00-3   |
| Footwell lamp, RH front, E62 .....                                | 417-02-00-3   |
| Fuel additive system module, A348 .....                           | 303-14C-00-17 |
| Fuel additive system module, A348 .....                           | 303-14C-00-9  |
| Fuel additive system pump module, A349 .....                      | 303-14C-00-17 |
| Fuel additive system pump module, A349 .....                      | 303-14C-00-9  |
| Fuel Charging and Controls – 1.6L (Z6) .....                      | 303-04A-00-1  |
| Fuel Charging and Controls – 1.8/2.0L Duratec-HE (MI4) .....      | 303-04B-00-1  |
| Fuel Charging and Controls – 2.0L Duratorq-TDCi (DW) Diesel ..... | 303-04C-00-1  |
| Fuel filler door lock motor, M90 .....                            | 501-14-00-1   |
| Fuel filler door lock motor, M90 .....                            | 501-14-00-11  |
| Fuel filler door lock motor, M90 .....                            | 501-14-00-15  |
| Fuel filler door lock motor, M90 .....                            | 501-14-00-21  |
| Fuel filler door lock motor, M90 .....                            | 501-14-00-25  |
| Fuel filler door lock motor, M90 .....                            | 501-14-00-31  |
| Fuel filler door lock motor, M90 .....                            | 501-14-00-35  |
| Fuel filler door lock motor, M90 .....                            | 501-14-00-5   |
| Fuel heater relay, K69 .....                                      | 303-04C-00-2  |
| Fuel heater relay, K69 .....                                      | 303-04C-00-4  |
| Fuel heater, R32 .....                                            | 303-04C-00-2  |
| Fuel heater, R32 .....                                            | 303-04C-00-4  |
| Fuel injector 1, Y108 .....                                       | 303-04A-00-1  |
| Fuel injector 1, Y108 .....                                       | 303-04B-00-1  |
| Fuel injector 1, Y108 .....                                       | 303-04B-00-2  |
| Fuel injector 1, Y108 .....                                       | 303-04C-00-1  |
| Fuel injector 1, Y108 .....                                       | 303-04C-00-3  |
| Fuel injector 2, Y109 .....                                       | 303-04A-00-1  |
| Fuel injector 2, Y109 .....                                       | 303-04B-00-1  |
| Fuel injector 2, Y109 .....                                       | 303-04B-00-2  |
| Fuel injector 2, Y109 .....                                       | 303-04C-00-1  |
| Fuel injector 2, Y109 .....                                       | 303-04C-00-3  |
| Fuel injector 3, Y110 .....                                       | 303-04A-00-1  |
| Fuel injector 3, Y110 .....                                       | 303-04B-00-1  |
| Fuel injector 3, Y110 .....                                       | 303-04B-00-2  |
| Fuel injector 3, Y110 .....                                       | 303-04C-00-1  |

|                                                  |               |
|--------------------------------------------------|---------------|
| Fuel injector 3, Y110 .....                      | 303-04C-00-3  |
| Fuel injector 4, Y111 .....                      | 303-04A-00-1  |
| Fuel injector 4, Y111 .....                      | 303-04B-00-1  |
| Fuel injector 4, Y111 .....                      | 303-04B-00-2  |
| Fuel injector 4, Y111 .....                      | 303-04C-00-1  |
| Fuel injector 4, Y111 .....                      | 303-04C-00-3  |
| Fuel metering valve, Y165 .....                  | 303-04C-00-1  |
| Fuel metering valve, Y165 .....                  | 303-04C-00-3  |
| Fuel metering valve, Y165 .....                  | 303-14C-00-13 |
| Fuel metering valve, Y165 .....                  | 303-14C-00-4  |
| Fuel pressure solenoid valve, Y47 .....          | 303-04C-00-1  |
| Fuel pressure solenoid valve, Y47 .....          | 303-04C-00-3  |
| Fuel pressure solenoid valve, Y47 .....          | 303-14C-00-13 |
| Fuel pressure solenoid valve, Y47 .....          | 303-14C-00-4  |
| Fuel pump relay, K4 .....                        | 303-14A-00-6  |
| Fuel pump relay, K4 .....                        | 303-14B-00-11 |
| Fuel pump relay, K4 .....                        | 303-14B-00-5  |
| Fuel rail pressure transducer sensor, B225 ..... | 303-04C-00-1  |
| Fuel rail pressure transducer sensor, B225 ..... | 303-04C-00-3  |
| Fuel rail pressure transducer sensor, B225 ..... | 303-14C-00-14 |
| Fuel rail pressure transducer sensor, B225 ..... | 303-14C-00-5  |
| Fuel tank filler cap sensor, B190 .....          | 303-14C-00-17 |
| Fuel tank filler cap sensor, B190 .....          | 303-14C-00-9  |
| Fuel tank unit, A31 .....                        | 303-14A-00-6  |
| Fuel tank unit, A31 .....                        | 303-14B-00-11 |
| Fuel tank unit, A31 .....                        | 303-14B-00-5  |
| Fuel tank unit, A31 .....                        | 413-01-00-3   |
| Fuel temperature sensor, B109 .....              | 303-04C-00-1  |
| Fuel temperature sensor, B109 .....              | 303-04C-00-3  |
| Fuel temperature sensor, B109 .....              | 303-14C-00-14 |
| Fuel temperature sensor, B109 .....              | 303-14C-00-5  |
| Fuse and Relay Information .....                 | 700-01-00-1   |
| Fuse Details .....                               | 700-03-00-1   |
| G1 .....                                         | 700-04-00-1   |
| G7 .....                                         | 700-04-00-2   |
| G8 .....                                         | 700-04-00-1   |
| G12 .....                                        | 700-04-00-3   |
| G12 .....                                        | 700-04-00-4   |
| G19 .....                                        | 700-04-00-5   |
| G20 .....                                        | 700-04-00-6   |
| G20 .....                                        | 700-04-00-7   |
| G31 .....                                        | 700-04-00-8   |
| G37 .....                                        | 700-04-00-9   |
| G39 .....                                        | 700-04-00-7   |
| G45 .....                                        | 700-04-00-10  |
| G45 .....                                        | 700-04-00-11  |
| G53 .....                                        | 700-04-00-12  |
| G53 .....                                        | 700-04-00-13  |
| G53 .....                                        | 700-04-00-14  |



|                                                                        |              |
|------------------------------------------------------------------------|--------------|
| G53 .....                                                              | 700-04-00-15 |
| G55 .....                                                              | 700-04-00-16 |
| G56 .....                                                              | 700-04-00-17 |
| G57 .....                                                              | 700-04-00-18 |
| G57 .....                                                              | 700-04-00-19 |
| G58 .....                                                              | 700-04-00-20 |
| G58 .....                                                              | 700-04-00-40 |
| G60 .....                                                              | 700-04-00-21 |
| G63 .....                                                              | 700-04-00-22 |
| G64 .....                                                              | 700-04-00-23 |
| G64 .....                                                              | 700-04-00-24 |
| G68 .....                                                              | 700-04-00-25 |
| G68 .....                                                              | 700-04-00-26 |
| G68 .....                                                              | 700-04-00-27 |
| G68 .....                                                              | 700-04-00-28 |
| G68 .....                                                              | 700-04-00-29 |
| G68 .....                                                              | 700-04-00-30 |
| G70 .....                                                              | 700-04-00-31 |
| G70 .....                                                              | 700-04-00-32 |
| G72 .....                                                              | 700-04-00-33 |
| G74 .....                                                              | 700-04-00-34 |
| G74 .....                                                              | 700-04-00-39 |
| G75 .....                                                              | 700-04-00-35 |
| G75 .....                                                              | 700-04-00-36 |
| G77 .....                                                              | 700-04-00-37 |
| G77 .....                                                              | 700-04-00-38 |
| G78 .....                                                              | 700-04-00-20 |
| G78 .....                                                              | 700-04-00-34 |
| G78 .....                                                              | 700-04-00-39 |
| G78 .....                                                              | 700-04-00-40 |
| Gearshift lever unit, N93 .....                                        | 307-01-00-1  |
| Gearshift lever unit, N93 .....                                        | 307-01-00-4  |
| Gearshift lever unit, N93 .....                                        | 307-01-00-7  |
| Gearshift lever unit, N93 .....                                        | 308-00-00-1  |
| Generator and Regulator – 1.6L (Z6) .....                              | 414-02A-00-1 |
| Generator and Regulator – 1.8/2.0L Duratec-HE (M14) .....              | 414-02B-00-1 |
| Generator and Regulator – 2.0L Duratorq-TDCi (DW) Diesel .....         | 414-02C-00-1 |
| Generator, O5 .....                                                    | 414-02B-00-1 |
| Generator, O5 .....                                                    | 414-02B-00-2 |
| Generator, O5 .....                                                    | 414-02C-00-1 |
| Glass, Frames and Mechanisms – Heated power mirrors .....              | 501-11-00-21 |
| Glass, Frames and Mechanisms – Heated rear window .....                | 501-11-00-19 |
| Glass, Frames and Mechanisms – with front and rear power windows ..... | 501-11-00-3  |
| Glass, Frames and Mechanisms – with front power windows .....          | 501-11-00-1  |
| Glove compartment lamp, E28 .....                                      | 417-02-00-3  |
| Glow plug 1, P16 .....                                                 | 303-07C-00-1 |
| Glow plug 1, P16 .....                                                 | 303-07C-00-2 |
| Glow plug 2, P17 .....                                                 | 303-07C-00-1 |
| Glow plug 2, P17 .....                                                 | 303-07C-00-2 |

|                                                                        |              |
|------------------------------------------------------------------------|--------------|
| Glow plug 3, P18 .....                                                 | 303-07C-00-1 |
| Glow plug 3, P18 .....                                                 | 303-07C-00-2 |
| Glow plug 4, P19 .....                                                 | 303-07C-00-1 |
| Glow plug 4, P19 .....                                                 | 303-07C-00-2 |
| Glow plug relay, K212 .....                                            | 303-07C-00-1 |
| Glow plug relay, K212 .....                                            | 303-07C-00-2 |
| Glow plug relay, K212 .....                                            | 700-02-00-7  |
| Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel .....                | 303-07C-00-1 |
| Ground Distribution .....                                              | 700-04-00-1  |
| Handles, Locks, Latches and Entry Systems – with central locking ..... | 501-14-00-1  |
| Handles, Locks, Latches and Entry Systems – with double locking .....  | 501-14-00-21 |
| Hazard flasher switch, N49 .....                                       | 417-01-00-13 |
| Headlamp switch, N120 .....                                            | 413-00-00-1  |
| Headlamp switch, N120 .....                                            | 417-01-00-1  |
| Headlamp switch, N120 .....                                            | 417-01-00-2  |
| Headlamp switch, N120 .....                                            | 417-01-00-21 |
| Headlamp switch, N120 .....                                            | 417-01-00-22 |
| Headlamp switch, N120 .....                                            | 417-01-00-25 |
| Headlamp switch, N120 .....                                            | 417-01-00-26 |
| Headlamp switch, N120 .....                                            | 417-01-00-3  |
| Headlamp switch, N120 .....                                            | 700-02-00-9  |
| Headlamp, LH side, E1 .....                                            | 417-01-00-1  |
| Headlamp, LH side, E1 .....                                            | 417-01-00-2  |
| Headlamp, LH side, E1 .....                                            | 417-01-00-21 |
| Headlamp, LH side, E1 .....                                            | 417-01-00-22 |
| Headlamp, LH side, E1 .....                                            | 417-01-00-3  |
| Headlamp, LH side, E1 .....                                            | 417-01-00-4  |
| Headlamp, RH side, E7 .....                                            | 417-01-00-1  |
| Headlamp, RH side, E7 .....                                            | 417-01-00-2  |
| Headlamp, RH side, E7 .....                                            | 417-01-00-21 |
| Headlamp, RH side, E7 .....                                            | 417-01-00-22 |
| Headlamp, RH side, E7 .....                                            | 417-01-00-3  |
| Headlamp, RH side, E7 .....                                            | 417-01-00-5  |
| Heated rear window relay, K1 .....                                     | 501-11-00-19 |
| Heated rear window relay, K1 .....                                     | 501-11-00-20 |
| Heated rear window relay, K1 .....                                     | 700-02-00-3  |
| Heated rear window relay, K1 .....                                     | 700-02-00-4  |
| Heated rear window switch, N10 .....                                   | 501-11-00-19 |
| Heated rear window switch, N10 .....                                   | 501-11-00-20 |
| Heater control module, A128 .....                                      | 412-02A-00-1 |
| Heater control module, A128 .....                                      | 412-03-00-1  |
| Heating and Ventilation .....                                          | 412-02A-00-1 |
| High mounted stop lamp, E174 .....                                     | 417-01-00-10 |
| High mounted stop lamp, E174 .....                                     | 417-01-00-11 |
| High mounted stop lamp, E174 .....                                     | 417-01-00-9  |
| Horn .....                                                             | 413-06-00-1  |
| Horn relay, K33 .....                                                  | 413-06-00-1  |
| Horn switch, N54 .....                                                 | 413-06-00-1  |
| Horn, H1 .....                                                         | 413-06-00-1  |

|                                                 |               |
|-------------------------------------------------|---------------|
| Idle speed control valve, Y13 .....             | 303-04A-00-1  |
| Ignition coil, cylinder 1, T6 .....             | 303-07A-00-1  |
| Ignition coil, cylinder 1, T6 .....             | 303-07B-00-1  |
| Ignition coil, cylinder 1, T6 .....             | 303-07B-00-2  |
| Ignition coil, cylinder 2, T7 .....             | 303-07A-00-1  |
| Ignition coil, cylinder 2, T7 .....             | 303-07B-00-1  |
| Ignition coil, cylinder 2, T7 .....             | 303-07B-00-2  |
| Ignition coil, cylinder 3, T8 .....             | 303-07A-00-1  |
| Ignition coil, cylinder 3, T8 .....             | 303-07B-00-1  |
| Ignition coil, cylinder 3, T8 .....             | 303-07B-00-2  |
| Ignition coil, cylinder 4, T9 .....             | 303-07A-00-1  |
| Ignition coil, cylinder 4, T9 .....             | 303-07B-00-1  |
| Ignition coil, cylinder 4, T9 .....             | 303-07B-00-2  |
| Ignition relay, K41 .....                       | 700-02-00-8   |
| Ignition switch, N278 .....                     | 700-02-00-3   |
| Ignition switch, N278 .....                     | 700-02-00-4   |
| Ignition transformer capacitor, U1 .....        | 303-07A-00-1  |
| In-vehicle temperature sensor, B206 .....       | 412-03-00-9   |
| Index .....                                     | 100-00-02-1   |
| Inertia Fuel Shutoff (IFS) switch, N316 .....   | 303-14A-00-6  |
| Inertia Fuel Shutoff (IFS) switch, N316 .....   | 303-14B-00-11 |
| Inertia Fuel Shutoff (IFS) switch, N316 .....   | 303-14B-00-5  |
| Inlet air control valve solenoid, Y218 .....    | 303-04A-00-1  |
| Inlet air control valve solenoid, Y218 .....    | 303-14B-00-10 |
| Inlet air control valve solenoid, Y218 .....    | 303-14B-00-4  |
| Instrument Cluster .....                        | 413-01-00-1   |
| Instrument Cluster and Panel Illumination ..... | 413-00-00-1   |
| Instrument cluster, A30 .....                   | 413-01-00-1   |
| Instrument cluster, A30 .....                   | 413-07-00-1   |
| Instrument cluster, A30 .....                   | 419-01B-00-1  |
| Instrument Panel and Console .....              | 501-12-00-1   |
| Intake Air Temperature (IAT) sensor, B213 ..... | 303-14C-00-14 |
| Intake Air Temperature (IAT) sensor, B213 ..... | 303-14C-00-5  |
| Intercooler bypass solenoid valve, Y185 .....   | 303-14C-00-8  |
| Interior lamp, front, E18 .....                 | 417-02-00-1   |
| Interior lamp, rear, E19 .....                  | 417-02-00-1   |
| Interior Lighting .....                         | 417-02-00-1   |
| Introduction .....                              | 100-00-03-1   |
| Knock sensor 1, B105 .....                      | 303-07B-00-1  |
| Knock sensor 1, B105 .....                      | 303-14B-00-3  |
| Knock sensor 2, B106 .....                      | 303-07B-00-1  |
| Knock sensor, B45 .....                         | 303-07A-00-1  |
| Knock sensor, B45 .....                         | 303-07B-00-2  |
| Knock sensor, B45 .....                         | 303-14A-00-3  |
| Knock sensor, B45 .....                         | 303-14B-00-9  |
| Licence plate lamp, LH side, E34 .....          | 417-01-00-23  |
| Licence plate lamp, LH side, E34 .....          | 417-01-00-24  |
| Licence plate lamp, RH side, E35 .....          | 417-01-00-23  |
| Licence plate lamp, RH side, E35 .....          | 417-01-00-24  |

|                                                             |               |
|-------------------------------------------------------------|---------------|
| Licence plate lamps, E14                                    | 417-01-00-24  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-10  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-14  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-20  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-24  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-30  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-34  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-4   |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-40  |
| Luggage compartment lamp, E57                               | 417-02-00-2   |
| Manual Transmission – manual transmission (MPS6)            | 308-00-00-1   |
| Mass Air Flow (MAF) sensor, B22                             | 303-14C-00-12 |
| Mass Air Flow (MAF) sensor, B22                             | 303-14C-00-3  |
| Mass Air Flow/Intake Air Temperature (MAF/IAT) sensor, B433 | 303-14A-00-2  |
| Micropol antenna, A378                                      | 413-07-00-2   |
| Micropol antenna, A378                                      | 415-01-00-2   |
| Micropol antenna, A378                                      | 415-01-00-6   |
| Micropol antenna, A378                                      | 415-01-00-7   |
| Module Communications Network                               | 418-00-00-1   |
| Multifunction Electronic Control Modules                    | 419-10-00-1   |
| Neutral position switch, N152                               | 303-14A-00-2  |
| Oil control valve, Y191                                     | 303-14A-00-3  |
| Oil pressure switch, N17                                    | 303-14A-00-2  |
| Oil pressure switch, N17                                    | 413-01-00-1   |
| Output Shaft Speed (OSS) sensor, B110                       | 307-01-00-3   |
| Output Shaft Speed (OSS) sensor, B110                       | 307-01-00-6   |
| Output Shaft Speed (OSS) sensor, B110                       | 307-01-00-9   |
| Outside air temperature sensor, B73                         | 413-01-00-2   |
| Outside air temperature sensor, B73                         | 419-10-00-3   |
| Panel/floor mode actuator, M250                             | 412-03-00-12  |
| Parking Aid                                                 | 413-13-00-1   |
| Parking aid module, A265                                    | 413-13-00-1   |
| Parking aid module, A265                                    | 413-13-00-3   |
| Parking aid module, A265                                    | 413-13-00-4   |
| Parking aid module, A265                                    | 413-13-00-5   |
| Parking aid sensor, LH front, B309                          | 413-13-00-2   |
| Parking aid sensor, rear, centre, B336                      | 413-13-00-3   |
| Parking aid sensor, rear, centre, B336                      | 413-13-00-4   |
| Parking aid sensor, rear, centre, B336                      | 413-13-00-5   |
| Parking aid sensor, rear, outer left, B168                  | 413-13-00-3   |
| Parking aid sensor, rear, outer left, B168                  | 413-13-00-4   |
| Parking aid sensor, rear, outer left, B168                  | 413-13-00-5   |
| Parking aid sensor, rear, outer right, B171                 | 413-13-00-3   |
| Parking aid sensor, rear, outer right, B171                 | 413-13-00-4   |
| Parking aid sensor, rear, outer right, B171                 | 413-13-00-5   |
| Parking aid sensor, RH front, B301                          | 413-13-00-2   |
| Parking aid switch, front, N359                             | 413-13-00-1   |
| Parking brake switch, N63                                   | 413-01-00-2   |
| Passenger air bag unit, A43                                 | 501-20B-00-4  |

|                                                    |               |
|----------------------------------------------------|---------------|
| Passive anti-theft system transceiver module, A102 | 419-01B-00-1  |
| Post-catalyst exhaust gas temperature sensor, B188 | 303-14C-00-15 |
| Post-catalyst exhaust gas temperature sensor, B188 | 303-14C-00-8  |
| Power Distribution                                 | 700-02-00-1   |
| Power hold relay, K13                              | 303-14A-00-1  |
| Power hold relay, K13                              | 303-14B-00-1  |
| Power hold relay, K13                              | 303-14B-00-10 |
| Power hold relay, K13                              | 303-14B-00-4  |
| Power hold relay, K13                              | 303-14B-00-7  |
| Power hold relay, K13                              | 303-14C-00-1  |
| Power hold relay, K13                              | 303-14C-00-10 |
| Power hold relay, K13                              | 303-14C-00-11 |
| Power hold relay, K13                              | 303-14C-00-12 |
| Power hold relay, K13                              | 303-14C-00-13 |
| Power hold relay, K13                              | 303-14C-00-2  |
| Power hold relay, K13                              | 303-14C-00-3  |
| Power hold relay, K13                              | 303-14C-00-4  |
| Power hold relay, K13                              | 700-02-00-5   |
| Power hold relay, K13                              | 700-02-00-6   |
| Power hold relay, K13                              | 700-02-00-7   |
| Power mirror fold switch, N279                     | 501-09-00-10  |
| Power mirror fold switch, N279                     | 501-09-00-5   |
| Power Steering                                     | 211-02-00-1   |
| Power steering pressure switch, N96                | 303-14A-00-2  |
| Powertrain control module (PCM), A147              | 303-04A-00-1  |
| Powertrain control module (PCM), A147              | 303-04B-00-1  |
| Powertrain control module (PCM), A147              | 303-04B-00-2  |
| Powertrain control module (PCM), A147              | 303-04C-00-1  |
| Powertrain control module (PCM), A147              | 303-04C-00-3  |
| Powertrain control module (PCM), A147              | 303-07A-00-1  |
| Powertrain control module (PCM), A147              | 303-07B-00-1  |
| Powertrain control module (PCM), A147              | 303-07B-00-2  |
| Powertrain control module (PCM), A147              | 303-07C-00-1  |
| Powertrain control module (PCM), A147              | 303-14A-00-1  |
| Powertrain control module (PCM), A147              | 303-14B-00-1  |
| Powertrain control module (PCM), A147              | 303-14B-00-7  |
| Powertrain control module (PCM), A147              | 303-14C-00-1  |
| Pre-catalyst exhaust gas temperature sensor, B187  | 303-14C-00-15 |
| Pre-catalyst exhaust gas temperature sensor, B187  | 303-14C-00-8  |
| Pre-catalyst heated oxygen sensor (HO2S), B89      | 303-14A-00-4  |
| Pre-catalyst heated oxygen sensor (HO2S), B89      | 303-14B-00-1  |
| Pre-catalyst heated oxygen sensor (HO2S), B89      | 303-14B-00-7  |
| Radio remote control switch, N214                  | 415-01-00-3   |
| Radio remote control switch, N214                  | 415-01-00-8   |
| Radio, A11                                         | 413-07-00-2   |
| Radio, A11                                         | 415-01-00-1   |
| Radio, A11                                         | 415-01-00-2   |
| Radio, A11                                         | 415-01-00-4   |
| Radio, A11                                         | 415-01-00-5   |

|                                             |              |
|---------------------------------------------|--------------|
| Radio, A11 .....                            | 415-01-00-6  |
| Radio, A11 .....                            | 415-01-00-7  |
| Radio, A11 .....                            | 415-03-00-1  |
| Radio, A11 .....                            | 415-03-00-2  |
| Radio, A11 .....                            | 415-03-00-3  |
| Radio, A11 .....                            | 415-03-00-4  |
| Rear fog lamp, LH side, E89 .....           | 417-01-00-26 |
| Rear fog lamp, RH side, E86 .....           | 417-01-00-26 |
| Rear lamp assembly, LH side, E9 .....       | 417-01-00-10 |
| Rear lamp assembly, LH side, E9 .....       | 417-01-00-11 |
| Rear lamp assembly, LH side, E9 .....       | 417-01-00-17 |
| Rear lamp assembly, LH side, E9 .....       | 417-01-00-18 |
| Rear lamp assembly, LH side, E9 .....       | 417-01-00-21 |
| Rear lamp assembly, LH side, E9 .....       | 417-01-00-22 |
| Rear lamp assembly, LH side, E9 .....       | 417-01-00-25 |
| Rear lamp assembly, LH side, E9 .....       | 417-01-00-27 |
| Rear lamp assembly, LH side, E9 .....       | 417-01-00-29 |
| Rear lamp assembly, LH side, E9 .....       | 417-01-00-31 |
| Rear lamp assembly, LH side, E9 .....       | 417-01-00-9  |
| Rear lamp assembly, RH side, E10 .....      | 417-01-00-10 |
| Rear lamp assembly, RH side, E10 .....      | 417-01-00-11 |
| Rear lamp assembly, RH side, E10 .....      | 417-01-00-17 |
| Rear lamp assembly, RH side, E10 .....      | 417-01-00-18 |
| Rear lamp assembly, RH side, E10 .....      | 417-01-00-21 |
| Rear lamp assembly, RH side, E10 .....      | 417-01-00-22 |
| Rear lamp assembly, RH side, E10 .....      | 417-01-00-25 |
| Rear lamp assembly, RH side, E10 .....      | 417-01-00-27 |
| Rear lamp assembly, RH side, E10 .....      | 417-01-00-29 |
| Rear lamp assembly, RH side, E10 .....      | 417-01-00-31 |
| Rear lamp assembly, RH side, E10 .....      | 417-01-00-9  |
| Rear View Mirrors .....                     | 501-09-00-1  |
| Rear window heater, R19 .....               | 501-11-00-19 |
| Rear window heater, R19 .....               | 501-11-00-20 |
| Rear window wiper motor, M9 .....           | 501-16-00-4  |
| Recirculated air actuator, M69 .....        | 412-02A-00-2 |
| Recirculated air actuator, M69 .....        | 412-03-00-11 |
| Recirculated air actuator, M69 .....        | 412-03-00-2  |
| Restraints Control Module (RCM), A208 ..... | 501-20A-00-1 |
| Restraints Control Module (RCM), A208 ..... | 501-20B-00-1 |
| Reversing lamp switch, N394 .....           | 417-01-00-27 |
| Reversing lamp switch, N394 .....           | 417-01-00-28 |
| Reversing lamp, left, E105 .....            | 417-01-00-28 |
| Reversing lamp, left, E105 .....            | 417-01-00-30 |
| Reversing lamp, left, E105 .....            | 417-01-00-32 |
| Reversing lamp, right, E109 .....           | 417-01-00-28 |
| Reversing lamp, right, E109 .....           | 417-01-00-30 |
| Reversing lamp, right, E109 .....           | 417-01-00-32 |
| Reversing lamps relay, K273 .....           | 417-01-00-29 |
| Reversing lamps relay, K273 .....           | 417-01-00-30 |

|                                               |              |
|-----------------------------------------------|--------------|
| Roof Opening Panel .....                      | 501-17-00-1  |
| Roof opening panel control switch, N230 ..... | 501-17-00-1  |
| Roof opening panel module, A26 .....          | 501-17-00-1  |
| S5 .....                                      | 413-00-00-1  |
| S6 .....                                      | 700-04-00-6  |
| S7 .....                                      | 700-04-00-7  |
| S9 .....                                      | 700-04-00-21 |
| S10 .....                                     | 417-01-00-13 |
| S11 .....                                     | 303-14A-00-4 |
| S12 .....                                     | 700-04-00-2  |
| S15 .....                                     | 700-04-00-3  |
| S15 .....                                     | 700-04-00-13 |
| S15 .....                                     | 700-04-00-15 |
| S24 .....                                     | 412-02A-00-1 |
| S24 .....                                     | 412-03-00-1  |
| S25 .....                                     | 412-02A-00-1 |
| S25 .....                                     | 412-03-00-1  |
| S48 .....                                     | 700-03-00-34 |
| S49 .....                                     | 413-13-00-2  |
| S49 .....                                     | 413-13-00-3  |
| S49 .....                                     | 413-13-00-4  |
| S49 .....                                     | 413-13-00-5  |
| S49 .....                                     | 700-03-00-34 |
| S50 .....                                     | 700-03-00-38 |
| S51 .....                                     | 303-14A-00-2 |
| S52 .....                                     | 700-03-00-22 |
| S53 .....                                     | 700-04-00-18 |
| S53 .....                                     | 700-04-00-19 |
| S53 .....                                     | 700-04-00-25 |
| S53 .....                                     | 700-04-00-26 |
| S53 .....                                     | 700-04-00-27 |
| S53 .....                                     | 700-04-00-28 |
| S53 .....                                     | 700-04-00-29 |
| S53 .....                                     | 700-04-00-30 |
| S54 .....                                     | 700-03-00-29 |
| S54 .....                                     | 700-03-00-30 |
| S55 .....                                     | 415-01-00-1  |
| S58 .....                                     | 307-01-00-2  |
| S59 .....                                     | 700-04-00-22 |
| S63 .....                                     | 303-14A-00-4 |
| S63 .....                                     | 303-14B-00-1 |
| S63 .....                                     | 303-14B-00-7 |
| S65 .....                                     | 700-03-00-33 |
| S66 .....                                     | 700-04-00-23 |
| S66 .....                                     | 700-04-00-24 |
| S67 .....                                     | 303-14B-00-2 |
| S67 .....                                     | 303-14B-00-8 |
| S71 .....                                     | 417-01-00-25 |
| S72 .....                                     | 303-14A-00-3 |

|      |              |
|------|--------------|
| S72  | 417-01-00-25 |
| S72  | 417-01-00-26 |
| S74  | 700-04-00-25 |
| S74  | 700-04-00-26 |
| S74  | 700-04-00-27 |
| S74  | 700-04-00-28 |
| S74  | 700-04-00-29 |
| S74  | 700-04-00-30 |
| S75  | 700-04-00-21 |
| S77  | 303-14A-00-5 |
| S80  | 303-14A-00-3 |
| S81  | 418-00-00-9  |
| S81  | 418-00-00-11 |
| S81  | 418-00-00-12 |
| S81  | 418-00-00-14 |
| S82  | 418-00-00-9  |
| S82  | 418-00-00-11 |
| S82  | 418-00-00-12 |
| S82  | 418-00-00-14 |
| S85  | 418-00-00-15 |
| S85  | 418-00-00-17 |
| S85  | 418-00-00-20 |
| S86  | 418-00-00-15 |
| S86  | 418-00-00-17 |
| S86  | 418-00-00-20 |
| S95  | 700-03-00-26 |
| S105 | 413-06-00-1  |
| S105 | 501-20B-00-3 |
| S108 | 417-01-00-25 |
| S108 | 417-01-00-26 |
| S109 | 700-04-00-17 |
| S111 | 700-04-00-17 |
| S112 | 417-01-00-9  |
| S112 | 417-01-00-10 |
| S112 | 417-01-00-11 |
| S113 | 418-00-00-10 |
| S113 | 418-00-00-11 |
| S113 | 418-00-00-13 |
| S113 | 418-00-00-14 |
| S114 | 418-00-00-10 |
| S114 | 418-00-00-11 |
| S114 | 418-00-00-13 |
| S114 | 418-00-00-14 |
| S115 | 418-00-00-9  |
| S115 | 418-00-00-10 |
| S115 | 418-00-00-11 |
| S115 | 418-00-00-12 |
| S115 | 418-00-00-13 |
| S115 | 418-00-00-14 |



|      |              |
|------|--------------|
| S116 | 418-00-00-9  |
| S116 | 418-00-00-10 |
| S116 | 418-00-00-11 |
| S116 | 418-00-00-12 |
| S116 | 418-00-00-13 |
| S116 | 418-00-00-14 |
| S118 | 700-04-00-8  |
| S119 | 700-03-00-6  |
| S121 | 700-04-00-9  |
| S124 | 303-07C-00-1 |
| S124 | 303-07C-00-2 |
| S127 | 418-00-00-2  |
| S128 | 418-00-00-2  |
| S132 | 700-03-00-30 |
| S145 | 413-13-00-3  |
| S145 | 413-13-00-4  |
| S145 | 413-13-00-5  |
| S156 | 418-00-00-2  |
| S157 | 418-00-00-2  |
| S158 | 501-14-00-2  |
| S158 | 501-14-00-12 |
| S158 | 501-14-00-22 |
| S158 | 501-14-00-32 |
| S160 | 501-14-00-1  |
| S160 | 501-14-00-2  |
| S160 | 501-14-00-11 |
| S160 | 501-14-00-31 |
| S162 | 700-02-00-3  |
| S162 | 700-02-00-4  |
| S163 | 501-14-00-21 |
| S163 | 501-14-00-22 |
| S163 | 501-14-00-31 |
| S164 | 700-03-00-15 |
| S164 | 700-03-00-16 |
| S171 | 700-04-00-4  |
| S171 | 700-04-00-12 |
| S175 | 413-13-00-2  |
| S179 | 412-03-00-9  |
| S180 | 412-03-00-9  |
| S182 | 418-00-00-3  |
| S183 | 418-00-00-3  |
| S187 | 700-04-00-32 |
| S194 | 700-04-00-4  |
| S194 | 700-04-00-12 |
| S196 | 700-04-00-38 |
| S197 | 700-04-00-3  |
| S197 | 700-04-00-13 |
| S199 | 700-04-00-32 |
| S200 | 700-04-00-37 |

|      |              |
|------|--------------|
| S202 | 700-03-00-56 |
| S203 | 700-04-00-5  |
| S204 | 700-04-00-26 |
| S204 | 700-04-00-27 |
| S204 | 700-04-00-29 |
| S204 | 700-04-00-30 |
| S206 | 700-04-00-33 |
| S213 | 417-02-00-1  |
| S214 | 418-00-00-7  |
| S214 | 418-00-00-8  |
| S215 | 418-00-00-7  |
| S215 | 418-00-00-8  |
| S219 | 418-00-00-4  |
| S219 | 418-00-00-5  |
| S220 | 418-00-00-4  |
| S220 | 418-00-00-5  |
| S222 | 418-00-00-5  |
| S223 | 418-00-00-5  |
| S224 | 307-01-00-5  |
| S224 | 307-01-00-8  |
| S224 | 700-03-00-21 |
| S225 | 307-01-00-5  |
| S226 | 700-04-00-27 |
| S226 | 700-04-00-30 |
| S230 | 206-09A-00-2 |
| S230 | 206-09C-00-2 |
| S231 | 206-09A-00-2 |
| S231 | 206-09C-00-2 |
| S232 | 206-09A-00-2 |
| S232 | 206-09C-00-2 |
| S233 | 206-09A-00-2 |
| S233 | 206-09C-00-2 |
| S234 | 206-09A-00-2 |
| S234 | 206-09C-00-2 |
| S235 | 206-09A-00-2 |
| S235 | 206-09C-00-2 |
| S236 | 206-09A-00-2 |
| S236 | 206-09C-00-2 |
| S237 | 206-09A-00-2 |
| S237 | 206-09C-00-2 |
| S240 | 417-01-00-15 |
| S240 | 417-01-00-16 |
| S240 | 417-01-00-17 |
| S240 | 417-01-00-18 |
| S241 | 417-01-00-15 |
| S241 | 417-01-00-16 |
| S241 | 417-01-00-17 |
| S241 | 417-01-00-18 |
| S690 | 307-01-00-3  |

|                                                   |              |
|---------------------------------------------------|--------------|
| S1000 .....                                       | 700-02-00-1  |
| S1000 .....                                       | 700-03-00-64 |
| S2000 .....                                       | 418-00-00-22 |
| S2000 .....                                       | 418-00-00-23 |
| S2000 .....                                       | 501-09-00-6  |
| S2000 .....                                       | 501-09-00-8  |
| S2000 .....                                       | 501-11-00-11 |
| S2000 .....                                       | 501-11-00-12 |
| S2000 .....                                       | 501-11-00-13 |
| S2000 .....                                       | 501-11-00-14 |
| S2000 .....                                       | 501-11-00-15 |
| S2000 .....                                       | 501-11-00-16 |
| Safety belt buckle switch, N124 .....             | 413-01-00-5  |
| Safety belt buckle switch, N124 .....             | 501-20A-00-1 |
| Safety Belt System .....                          | 501-20A-00-1 |
| Safety belt tensioner, driver seat, A117 .....    | 501-20A-00-1 |
| Safety belt tensioner, passenger seat, A116 ..... | 501-20A-00-1 |
| Seat control switch, driver, N242 .....           | 501-10-00-1  |
| Seating .....                                     | 501-10-00-1  |
| Second horn, H4 .....                             | 413-06-00-1  |
| Side air bag module, driver, A242 .....           | 501-20B-00-5 |
| Side air bag module, passenger, A245 .....        | 501-20B-00-5 |
| Side air bag sensor, driver, B238 .....           | 501-20B-00-2 |
| Side air bag sensor, passenger, B239 .....        | 501-20B-00-2 |
| Side head air bag module, driver, A326 .....      | 501-20B-00-6 |
| Side head air bag module, passenger, A327 .....   | 501-20B-00-6 |
| Spark plugs, P136 .....                           | 303-07B-00-1 |
| Spark plugs, P136 .....                           | 303-07B-00-2 |
| Speaker 1, LH front, Y101 .....                   | 415-03-00-1  |
| Speaker 1, LH front, Y101 .....                   | 415-03-00-2  |
| Speaker 1, LH front, Y101 .....                   | 415-03-00-3  |
| Speaker 1, LH front, Y101 .....                   | 415-03-00-4  |
| Speaker 1, LH rear door, Y70 .....                | 415-03-00-1  |
| Speaker 1, LH rear door, Y70 .....                | 415-03-00-2  |
| Speaker 1, LH rear door, Y70 .....                | 415-03-00-3  |
| Speaker 1, LH rear door, Y70 .....                | 415-03-00-4  |
| Speaker 1, RH front, Y103 .....                   | 415-03-00-1  |
| Speaker 1, RH front, Y103 .....                   | 415-03-00-2  |
| Speaker 1, RH front, Y103 .....                   | 415-03-00-3  |
| Speaker 1, RH front, Y103 .....                   | 415-03-00-4  |
| Speaker 1, RH rear door, Y72 .....                | 415-03-00-1  |
| Speaker 1, RH rear door, Y72 .....                | 415-03-00-2  |
| Speaker 1, RH rear door, Y72 .....                | 415-03-00-3  |
| Speaker 1, RH rear door, Y72 .....                | 415-03-00-4  |
| Speaker 2, LH front, Y102 .....                   | 415-03-00-1  |
| Speaker 2, LH front, Y102 .....                   | 415-03-00-2  |
| Speaker 2, LH front, Y102 .....                   | 415-03-00-3  |
| Speaker 2, LH front, Y102 .....                   | 415-03-00-4  |
| Speaker 2, RH front, Y104 .....                   | 415-03-00-1  |


|                                                        |              |
|--------------------------------------------------------|--------------|
| Speaker 2, RH front, Y104 .....                        | 415-03-00-2  |
| Speaker 2, RH front, Y104 .....                        | 415-03-00-3  |
| Speaker 2, RH front, Y104 .....                        | 415-03-00-4  |
| Speakers .....                                         | 415-03-00-1  |
| Speed Control .....                                    | 310-03-00-1  |
| Speed control switch, N201 .....                       | 310-03-00-1  |
| Speed control switch, N201 .....                       | 419-10-00-2  |
| Start inhibit relay, K94 .....                         | 303-06C-00-2 |
| Start inhibit/reversing lamp switch, N397 .....        | 307-01-00-2  |
| Start inhibit/reversing lamp switch, N397 .....        | 417-01-00-31 |
| Start inhibit/reversing lamp switch, N397 .....        | 417-01-00-32 |
| Starter motor, M8 .....                                | 303-06A-00-1 |
| Starter motor, M8 .....                                | 303-06A-00-2 |
| Starter motor, M8 .....                                | 303-06B-00-1 |
| Starter motor, M8 .....                                | 303-06B-00-2 |
| Starter motor, M8 .....                                | 303-06B-00-3 |
| Starter motor, M8 .....                                | 303-06B-00-4 |
| Starter motor, M8 .....                                | 303-06C-00-1 |
| Starter motor, M8 .....                                | 303-06C-00-2 |
| Starter motor, M8 .....                                | 303-06C-00-3 |
| Starter relay, K22 .....                               | 303-06A-00-1 |
| Starter relay, K22 .....                               | 303-06A-00-2 |
| Starter relay, K22 .....                               | 303-06B-00-1 |
| Starter relay, K22 .....                               | 303-06B-00-2 |
| Starter relay, K22 .....                               | 303-06B-00-3 |
| Starter relay, K22 .....                               | 303-06B-00-4 |
| Starter relay, K22 .....                               | 303-06C-00-1 |
| Starter relay, K22 .....                               | 303-06C-00-2 |
| Starter relay, K22 .....                               | 303-06C-00-3 |
| Starting System – 1.6L (Z6) .....                      | 303-06A-00-1 |
| Starting System – 1.8/2.0L Duratec-HE (MI4) .....      | 303-06B-00-1 |
| Starting System – 2.0L Duratorq-TDCi (DW) Diesel ..... | 303-06C-00-1 |
| Steering column multifunction switch, N282 .....       | 417-01-00-13 |
| Steering column multifunction switch, N282 .....       | 417-01-00-2  |
| Steering column position sensor, B218 .....            | 211-02-00-1  |
| Steering position sensor, B36 .....                    | 206-09C-00-3 |
| Steering position sensor, B36 .....                    | 206-09C-00-4 |
| Steering position sensor, B36 .....                    | 417-01-00-7  |
| Steering position sensor, B36 .....                    | 417-01-00-8  |
| Stop lamp switch, N318 .....                           | 307-01-00-1  |
| Stop lamp switch, N318 .....                           | 307-01-00-4  |
| Stop lamp switch, N318 .....                           | 307-01-00-7  |
| Stop lamp switch, N318 .....                           | 308-00-00-1  |
| Stop lamp switch, N318 .....                           | 417-01-00-10 |
| Stop lamp switch, N318 .....                           | 417-01-00-11 |
| Stop lamp switch, N318 .....                           | 417-01-00-12 |
| Stop lamp switch, N318 .....                           | 417-01-00-9  |
| Sunload sensor, B72 .....                              | 412-03-00-9  |
| Supplemental Restraint System .....                    | 501-20B-00-1 |

|                                                           |               |
|-----------------------------------------------------------|---------------|
| Swirl control solenoid valve, Y57 .....                   | 303-04A-00-1  |
| Swirl control solenoid valve, Y57 .....                   | 303-04B-00-1  |
| Swirl control solenoid valve, Y57 .....                   | 303-04B-00-2  |
| Symbols .....                                             | 100-00-04-1   |
| Systems Overview .....                                    | 100-00-01-1   |
| Table of Contents .....                                   | 100-00-00-1   |
| Temperature manifold absolute pressure sensor, B142 ..... | 303-14B-00-2  |
| Temperature manifold absolute pressure sensor, B142 ..... | 303-14B-00-8  |
| Throttle Position Sensor (TPS), B8 .....                  | 303-14A-00-5  |
| Throttle Position Sensor (TPS), B8 .....                  | 303-14C-00-15 |
| Transmission control module (TCM), A318 .....             | 307-01-00-4   |
| Transmission control module (TCM), A318 .....             | 307-01-00-7   |
| Transmission control module (TCM), A318 .....             | 308-00-00-1   |
| Transmission hardware unit, A40 .....                     | 307-01-00-2   |
| Transmission hardware unit, A40 .....                     | 307-01-00-6   |
| Transmission hardware unit, A40 .....                     | 307-01-00-9   |
| Transmission range sensor, B120 .....                     | 307-01-00-5   |
| Transmission range sensor, B120 .....                     | 307-01-00-8   |
| Transmission speed sensor, B80 .....                      | 303-14A-00-4  |
| Turbine Shaft Speed (TSS) sensor, B44 .....               | 307-01-00-3   |
| Turbine Shaft Speed (TSS) sensor, B44 .....               | 307-01-00-6   |
| Turbine Shaft Speed (TSS) sensor, B44 .....               | 307-01-00-9   |
| Turbo geometry position sensor, B196 .....                | 303-14C-00-15 |
| Turbo geometry position sensor, B196 .....                | 303-14C-00-6  |
| Turn signal lamp, LH rear, E49 .....                      | 417-01-00-15  |
| Turn signal lamp, LH rear, E49 .....                      | 417-01-00-16  |
| Turn signal lamp, RH rear, E48 .....                      | 417-01-00-15  |
| Turn signal lamp, RH rear, E48 .....                      | 417-01-00-16  |
| Two-way washer pump motor, M74 .....                      | 501-16-00-2   |
| Two-way washer pump motor, M74 .....                      | 501-16-00-3   |
| Vanity mirror lamp, LH side, E30 .....                    | 417-02-00-4   |
| Vanity mirror lamp, RH side, E31 .....                    | 417-02-00-4   |
| Variable geometry turbo actuator, M253 .....              | 303-14C-00-12 |
| Variable geometry turbo actuator, M253 .....              | 303-14C-00-3  |
| Vehicle speed sensor (VSS), B11 .....                     | 303-14B-00-10 |
| Vehicle speed sensor (VSS), B11 .....                     | 303-14B-00-4  |
| Water-in-fuel sensor, B12 .....                           | 303-14C-00-1  |
| Water-in-fuel sensor, B12 .....                           | 303-14C-00-10 |
| Wheel speed sensor, LH side front, B15 .....              | 206-09A-00-2  |
| Wheel speed sensor, LH side front, B15 .....              | 206-09C-00-2  |
| Wheel speed sensor, LH side rear, B17 .....               | 206-09A-00-2  |
| Wheel speed sensor, LH side rear, B17 .....               | 206-09C-00-2  |
| Wheel speed sensor, RH side front, B14 .....              | 206-09A-00-2  |
| Wheel speed sensor, RH side front, B14 .....              | 206-09C-00-2  |
| Wheel speed sensor, RH side rear, B16 .....               | 206-09A-00-2  |
| Wheel speed sensor, RH side rear, B16 .....               | 206-09C-00-2  |
| Window control switch, LH rear, N298 .....                | 501-11-00-13  |
| Window control switch, LH rear, N298 .....                | 501-11-00-17  |
| Window control switch, LH rear, N298 .....                | 501-11-00-5   |

|                                                               |              |
|---------------------------------------------------------------|--------------|
| Window control switch, LH rear, N298 .....                    | 501-11-00-9  |
| Window control switch, passenger side front, N297 .....       | 501-11-00-1  |
| Window control switch, passenger side front, N297 .....       | 501-11-00-12 |
| Window control switch, passenger side front, N297 .....       | 501-11-00-16 |
| Window control switch, passenger side front, N297 .....       | 501-11-00-4  |
| Window control switch, passenger side front, N297 .....       | 501-11-00-8  |
| Window control switch, RH rear, N299 .....                    | 501-11-00-10 |
| Window control switch, RH rear, N299 .....                    | 501-11-00-14 |
| Window control switch, RH rear, N299 .....                    | 501-11-00-18 |
| Window control switch, RH rear, N299 .....                    | 501-11-00-6  |
| Window control/power mirror adjust switch, driver, N388 ..... | 501-09-00-1  |
| Window control/power mirror adjust switch, driver, N388 ..... | 501-09-00-2  |
| Window control/power mirror adjust switch, driver, N388 ..... | 501-09-00-3  |
| Window control/power mirror adjust switch, driver, N388 ..... | 501-09-00-6  |
| Window control/power mirror adjust switch, driver, N388 ..... | 501-09-00-8  |
| Window control/power mirror adjust switch, driver, N388 ..... | 501-11-00-11 |
| Window control/power mirror adjust switch, driver, N388 ..... | 501-11-00-15 |
| Window control/power mirror adjust switch, driver, N388 ..... | 501-11-00-2  |
| Window control/power mirror adjust switch, driver, N388 ..... | 501-11-00-3  |
| Window control/power mirror adjust switch, driver, N388 ..... | 501-11-00-7  |
| Window regulator motor, driver side front, M122 .....         | 501-11-00-1  |
| Window regulator motor, driver side front, M122 .....         | 501-11-00-2  |
| Window regulator motor, passenger side front, M123 .....      | 501-11-00-1  |
| Window regulator motor, passenger side front, M123 .....      | 501-11-00-2  |
| Windshield wiper motor, M111 .....                            | 501-16-00-1  |
| Wiper/washer switch, N104 .....                               | 501-16-00-1  |
| Wiper/washer switch, N104 .....                               | 501-16-00-2  |
| Wiper/washer switch, N104 .....                               | 501-16-00-3  |
| Wipers and Washers .....                                      | 501-16-00-1  |
| Wiring Harness Overview .....                                 | 100-00-06-1  |
| Yaw rate sensor, B174 .....                                   | 206-09C-00-3 |
| Yaw rate sensor, B174 .....                                   | 206-09C-00-4 |
| Yaw rate sensor, B174 .....                                   | 417-01-00-7  |

## Note

All wiring connections between components are shown exactly as they exist in the vehicles. It is important to realise, however, that no attempt has been made on the schematic to represent components and wiring as they physically appear on the vehicle. For example, a 4-foot length of wire is treated no differently in a schematic from one which is only a few inches long. Furthermore, to aid in understanding electrical (electronic) operation, wiring inside complicated components has been simplified.

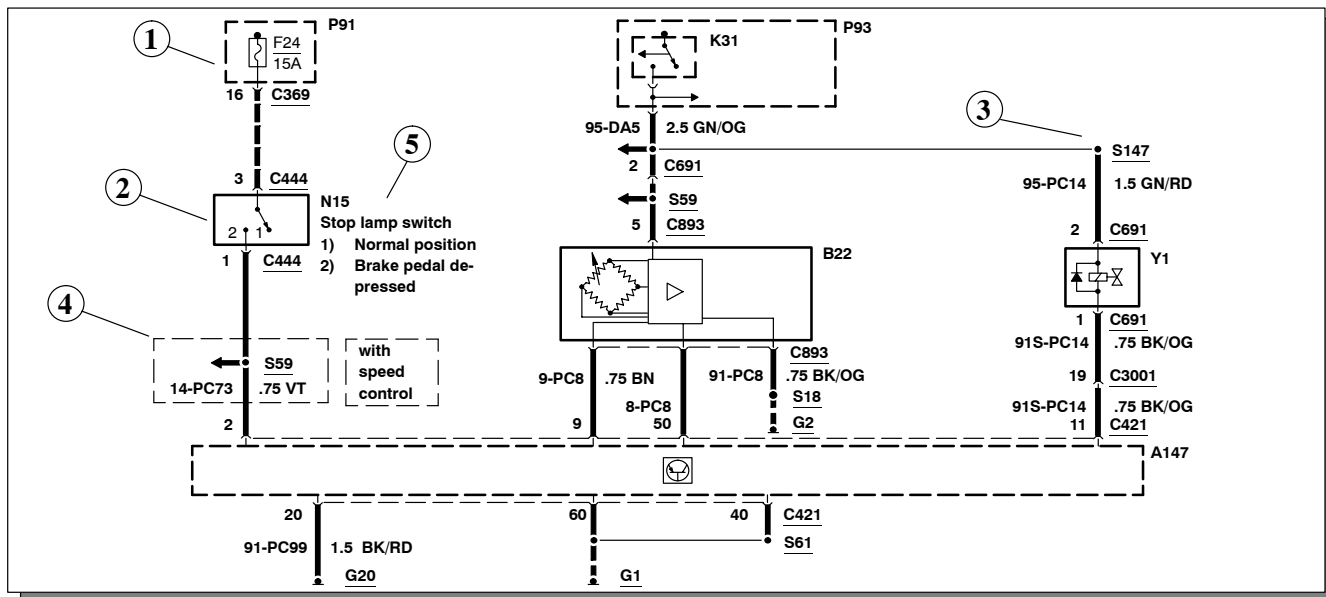

## Complete Circuit Operation

Each circuit is shown completely and independently in one chapter or “cell”. Other components which are connected to the circuit may not be shown unless they influence the circuit operation.

## Current Flow (1)

Each cell normally starts with the component that powers the circuit such as a fuse or the ignition switch. Current flow is shown from the power source at the top of the page to ground at the bottom of the page.

## Switch Positions (2)

Within the schematic, all switches, sensors and relays are shown “at rest” (as if the ignition switch were OFF).

## Splices (3)

An arrow indicates that the splice is not shown completely. The page where the splices appears in full is listed in the Index.

## Boxes (4)


A thin dashed box on a schematic indicates a part of the circuit which is only present for a particular vehicle model, country, or option. These qualifiers will be shown next to the box on the schematic.

## Component Names and Notes (5)

Component names are placed on the right hand side of each component. Any notes that describe switch positions or operating conditions follow the name. Descriptions of the internals of the component (e.g. “Speed sensor”) are also included here.


### Fuse and Relay Information

The “Fuse and Relay Information” cell (700-01-00) contains a view of the Fuse-/Relay Box in which all fuses and relays are identified. Cell 700-01-00 also specifies in table format which circuits/systems are protected by each fuse.

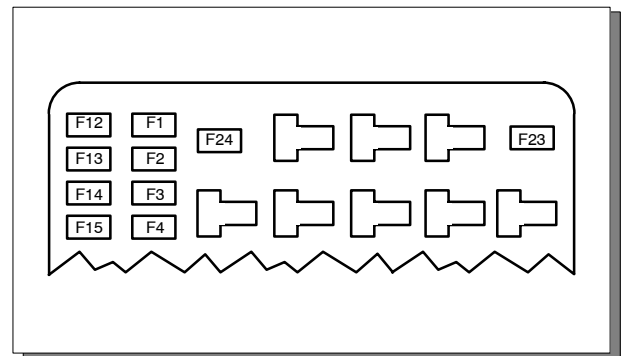


### Power Distribution

The “Power Distribution” cell (700-02-00) shows the current feed circuit. The current path is shown from the battery to the ignition switch and to all fuses.

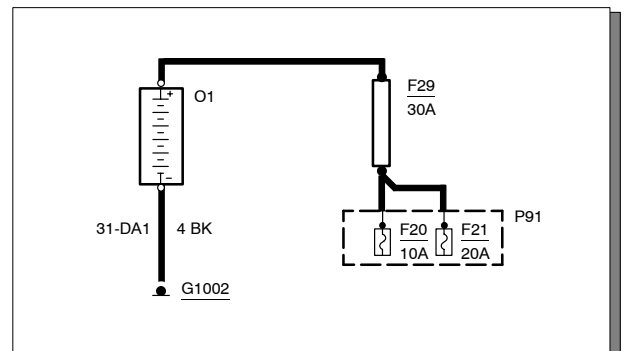


### Fuse Details

The “Fuse Details” cell (700-03-00) shows the circuits protected by each fuse. The circuit is traced from the fuse to the component. All details (wires, splices, connectors) between the fuse and the first component are shown.

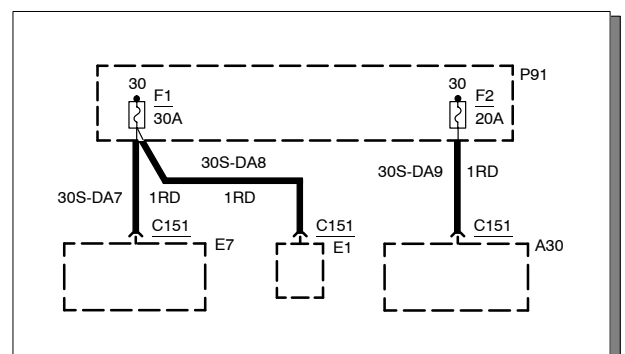




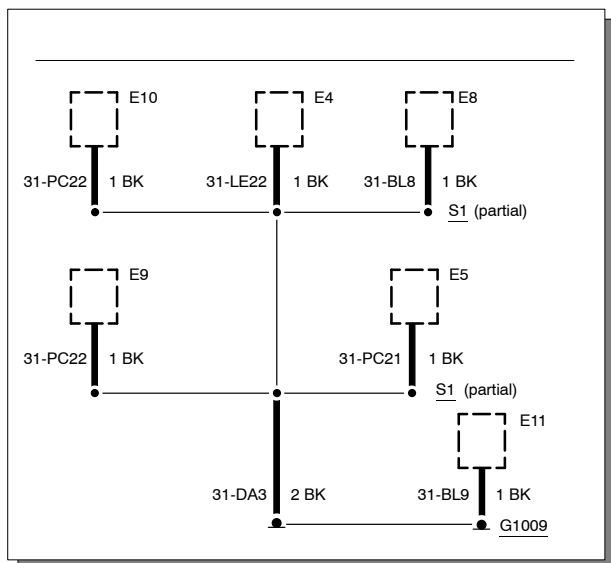

### Ground Distribution

Cell 700-04-00 contains the schematics that show the complete details for each ground connection or main ground splice. This is useful in diagnosing a problem affecting several components at once (poor ground connection or ground splice). All Details (wires, splices, connectors) between the ground point and the components are shown. These ground connection details are shown here in order to keep the individual cell schematics as uncluttered as possible.

Splices with a large number of wires may be split in order to improve the graphic representation. A thin line is then used to indicate the unity of the split splice.

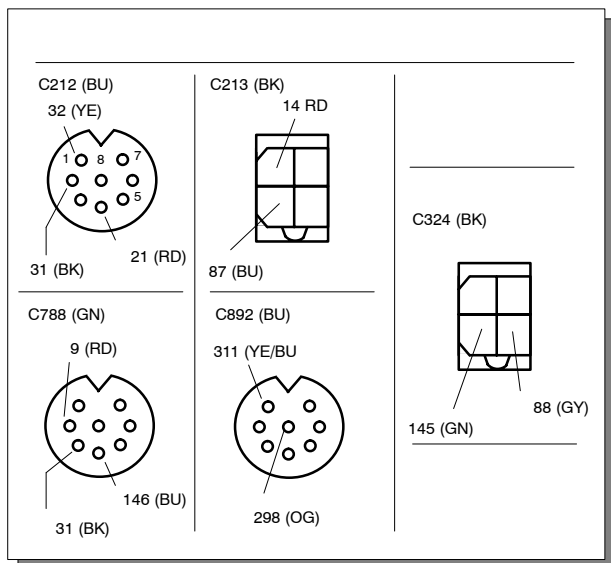

### Component Identification Information

Component Identification Information begins in cell 700-06-00 and consists of

- (1) Component Location Chart (List),
- (2) Component Location Views, and
- (3) Connector Views (Faces).

The **Component Location Chart** helps the user find where the various items depicted on the schematic can physically be found on the vehicle. A brief written description of the location is given, along with a reference to the component location views.


The **Component Location Views** show the components and their connecting wires as they can be found on the vehicle.

The **Connector Views** show the cavity or pin locations of all connectors. They are shown as they would appear to a user probing the wires with the connector disconnected.


**Note:**


Connector colours are portrayed in the following manner:

when both sides of the connector have the same colour

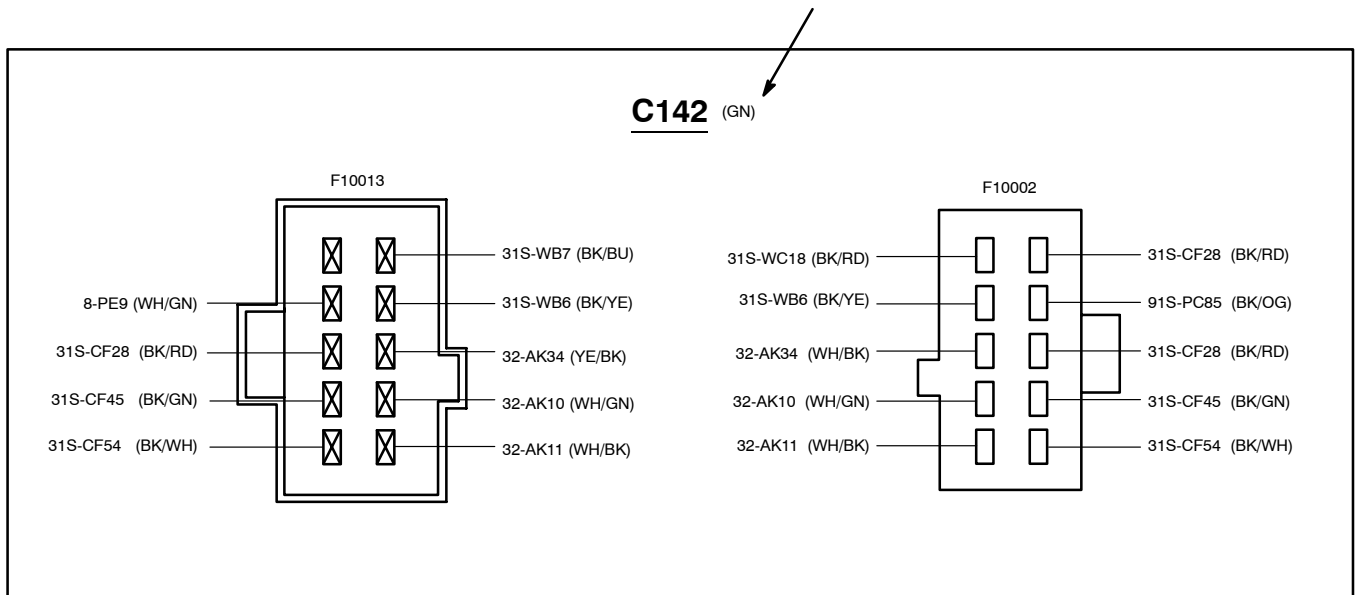

when the male and female sides of the connector have different colours

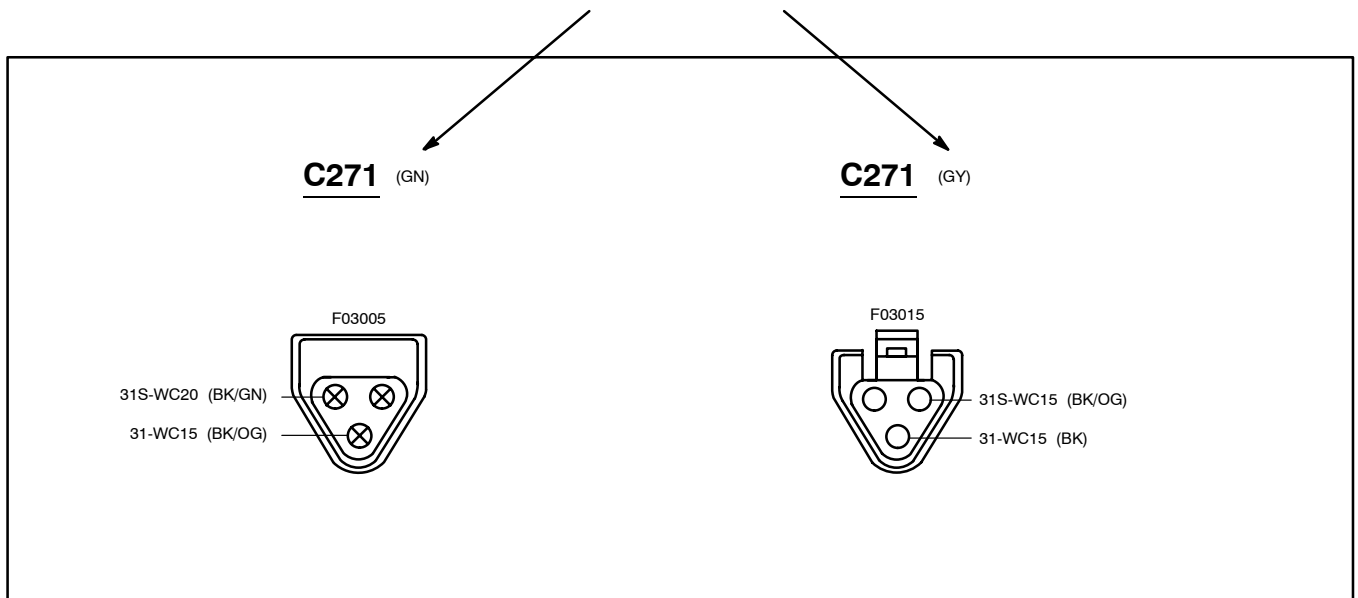

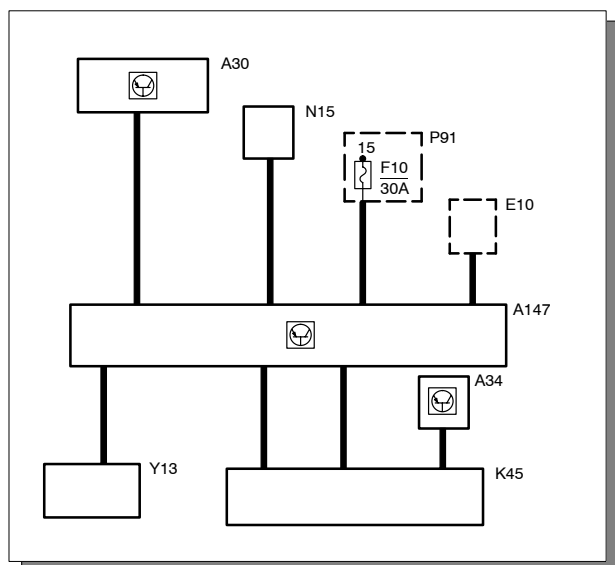

## Block Diagrams

Block diagrams can be found at the beginning of some cells. These diagrams provide an overview of the systems detailed on the pages that follow them. All components connected to the control module are shown in order to provide easy understanding of the system component interactions.


## Circuit Numbering and Wire Identification

### Circuit Numbering:

Ford has introduced a world-wide uniform system for circuit numbering and wire identification. The system is called Function - System Connection, or FSC for short.

FSC was developed mainly to assist in vehicle development and production processes, but is also helpful in helping the technician troubleshoot electrical circuits.

Example:

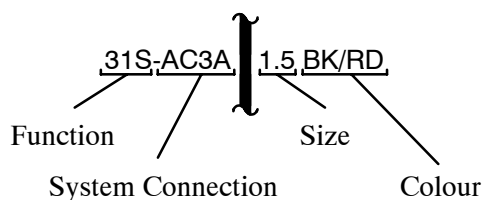

Function:

The first two digits identify the function of the wire. In this case, the function code includes the letter “S” to indicate it is an additionally switched function. The function part of the circuit number is the most helpful to the technician in troubleshooting a circuit. The function codes are based on some DIN designations used previously, with new numbers added for overload-protected functions, sensor functions, data links and special electronic module functions. A complete list of function codes and their descriptions is included in cell 100-00-04 “Symbols”.

System Connection (including branch):

Systems are related to subsets of the vehicle circuitry. A complete list of the system codes can be found in cell 100-00-04 “Symbols”.

Immediately following the system letter code is the connection number specific to that system. A branch identification is used to differentiate wires in one connection with the same function.

**Wire Identification (wire colours):**

The wire identification consists of a basic colour and an identification colour, and is determined directly from the wire's circuit number. In the wiring diagrams the wire colours will be located separately next to the wires as before.

The basic and identification colours are abbreviated using the international norm IEC 757. The abbreviations are listed in cell 100-00-04 "Symbols".

Each function code has a specific basic colour associated with it which can also be seen in the chart of function codes in cell 100-00-04 "Symbols". The identification colour is a coloured stripe used to differentiate several wires with the same function within one component connector.

One essential difference from the previous wire colouring system is the change of some of the basic wire colours. Ground circuits, previously assigned the basic colour brown (BN) are now black (BK).


Using the circuit number and wire identification used in the above example we know the following information about the wire.

31S-AC3A } 1.5 BK/RD


|             |                                                                                                          |
|-------------|----------------------------------------------------------------------------------------------------------|
| Function:   | 31 = Ground<br>S = Additionally switched circuit                                                         |
| System:     | AC = Headlamp levelling                                                                                  |
| Connection: | 3 = Switch connection<br>A = Branch                                                                      |
| Size:       | 1.5 = 1.5 mm <sup>2</sup>                                                                                |
| Colour:     | BK = Basic colour black<br>(determined by function 31)<br>RD = Identification colour red<br>(red stripe) |

# Symbols

02/2008  
100-00-04-1  
2008.25  
Focus

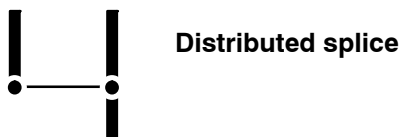

Distributed splice

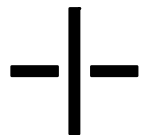

Crossed wiring  
without connection



Splice



Removable connection



Ground



Connector



 
Female connector




Male connector




Entire component




Part of a component

 

 
Component case directly attached to metal part of vehicle (ground)




Component with screw terminals

 

Connector attached to component

 

Connector attached to component lead (pigtail)

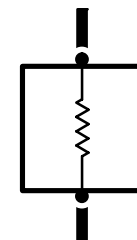


Wire resistance



Resistor or heating element



 Potentiometer (pressure or temperature)




Potentiometer (outside influence)

# Symbols

02/2008  
100-00-04-2  
2008.25  
Focus



Battery

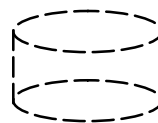

Shield



Diode, current flows in direction of arrow



Circuit breaker



Signal horn or speaker



 
Light emitting diode (LED)




Fuse




Steering column slip ring



Capacitor

 

Fusible link

 

Temperature dependent circuit breaker




Variable capacitor



Piezoelectric sensor

# Symbols

 
02/2008  
100-00-04-3  
2008.25  
Focus




Coil



 Bifilament lamp



Hall sensor

 


Solenoid controlled valve  
or clutch solenoid



High beam sym-  
bol



 Clock spring




Transistor



Rear fog lamp  
symbol



 
Buzzer




Lamp



Front fog lamp  
symbol

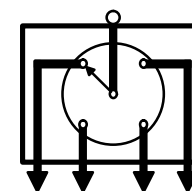


Distributor

 

Shorting bar con-  
nector

# Symbols

02/2008  
100-00-04-4  
2008.25  
Focus

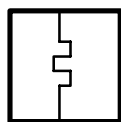

Heating element  
Conductor loop



Gauges



Permanent  
magnet, one-  
speed-motor



Fuel sender




Antenna



Permanent  
magnet, two-  
speed-motor



Busbar

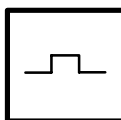

Thermal timer  
relay




Ignition coil as-  
sembly



Turn signal sym-  
bol



AC voltage

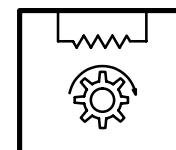

ABS wheel sen-  
sor



Filter






# Symbols



02/2008  
100-00-04-5  
2008.25  
Focus

 A thick dashed line represents 2 or more wires

 A thin dashed line represents a continuation

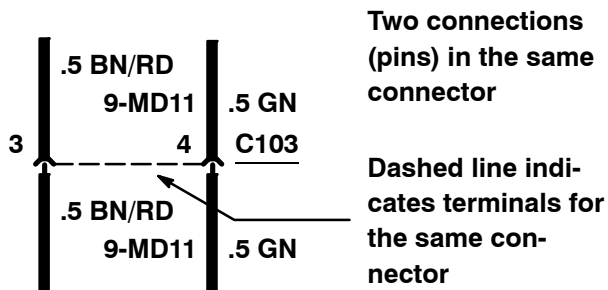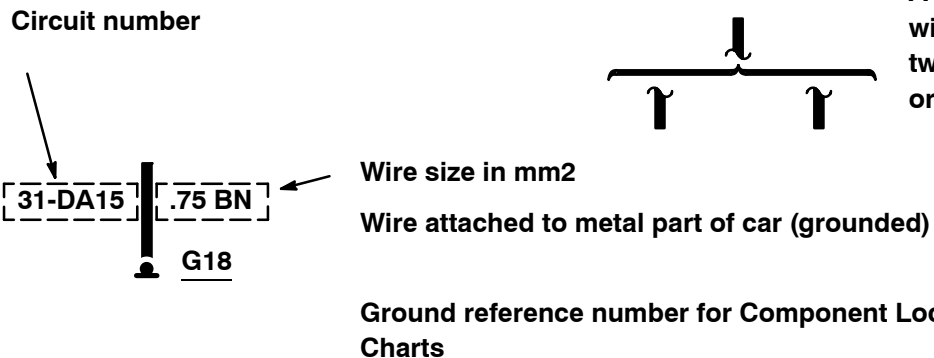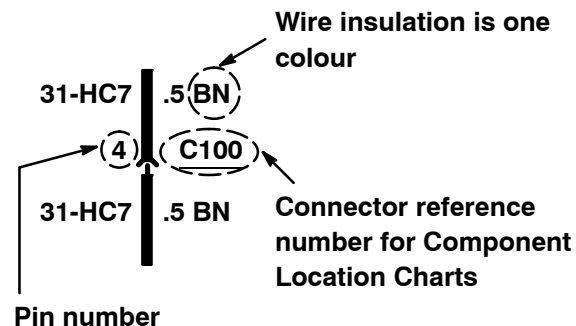


Wire insulation is one colour with another colour stripe (green with white)

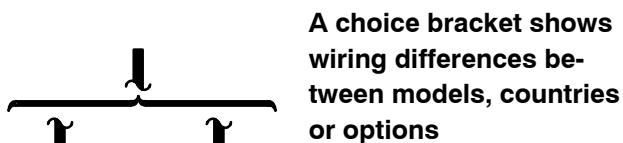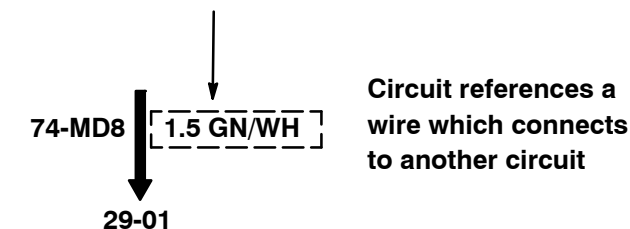







Two connections (pins) in the same connector

Dashed line indicates terminals for the same connector

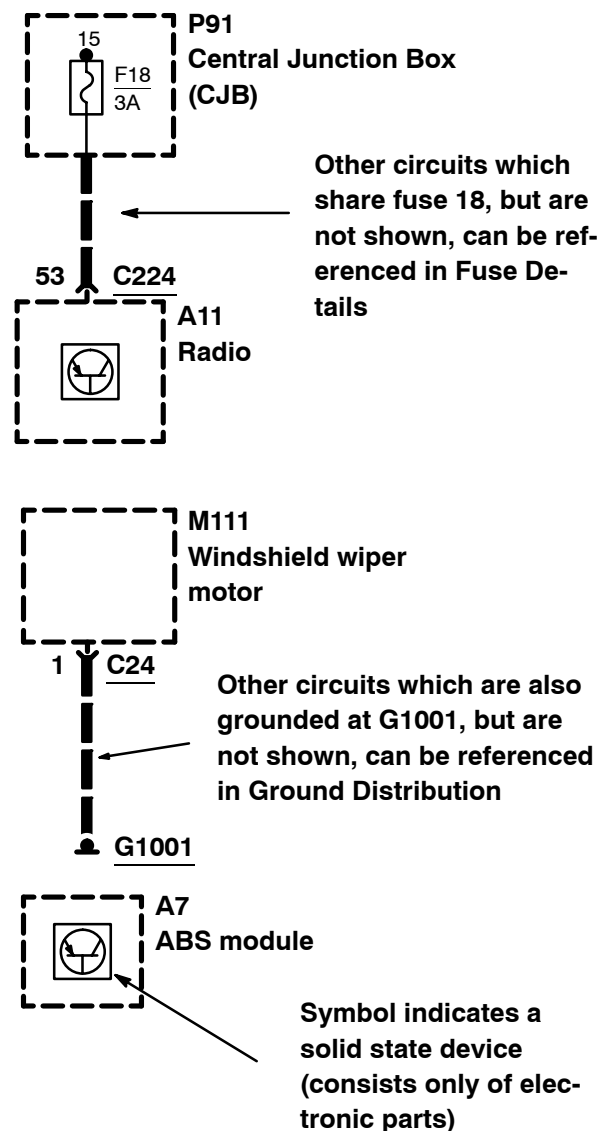


# Symbols

02/2008  
100-00-04-6  
2008.25  
Focus

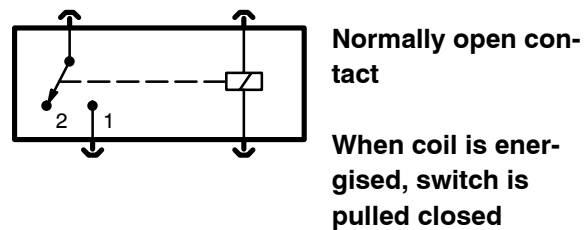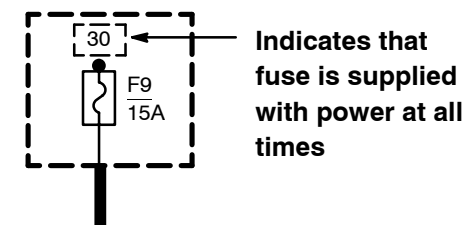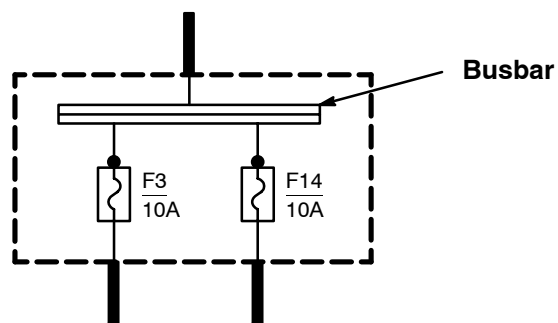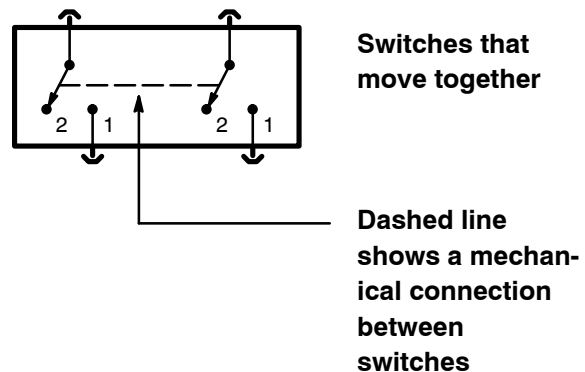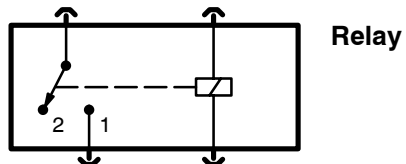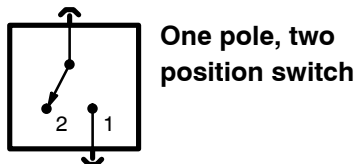

"15" is supplied with battery voltage in position 2 or 3

Component connector number

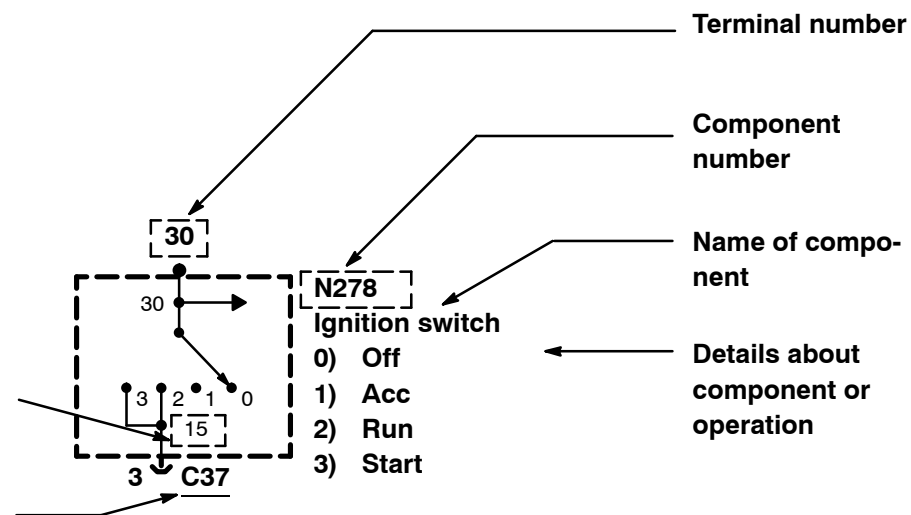


## Symbols

**02/2008**

**100-00-04-7**


**2008.25**

## Focus

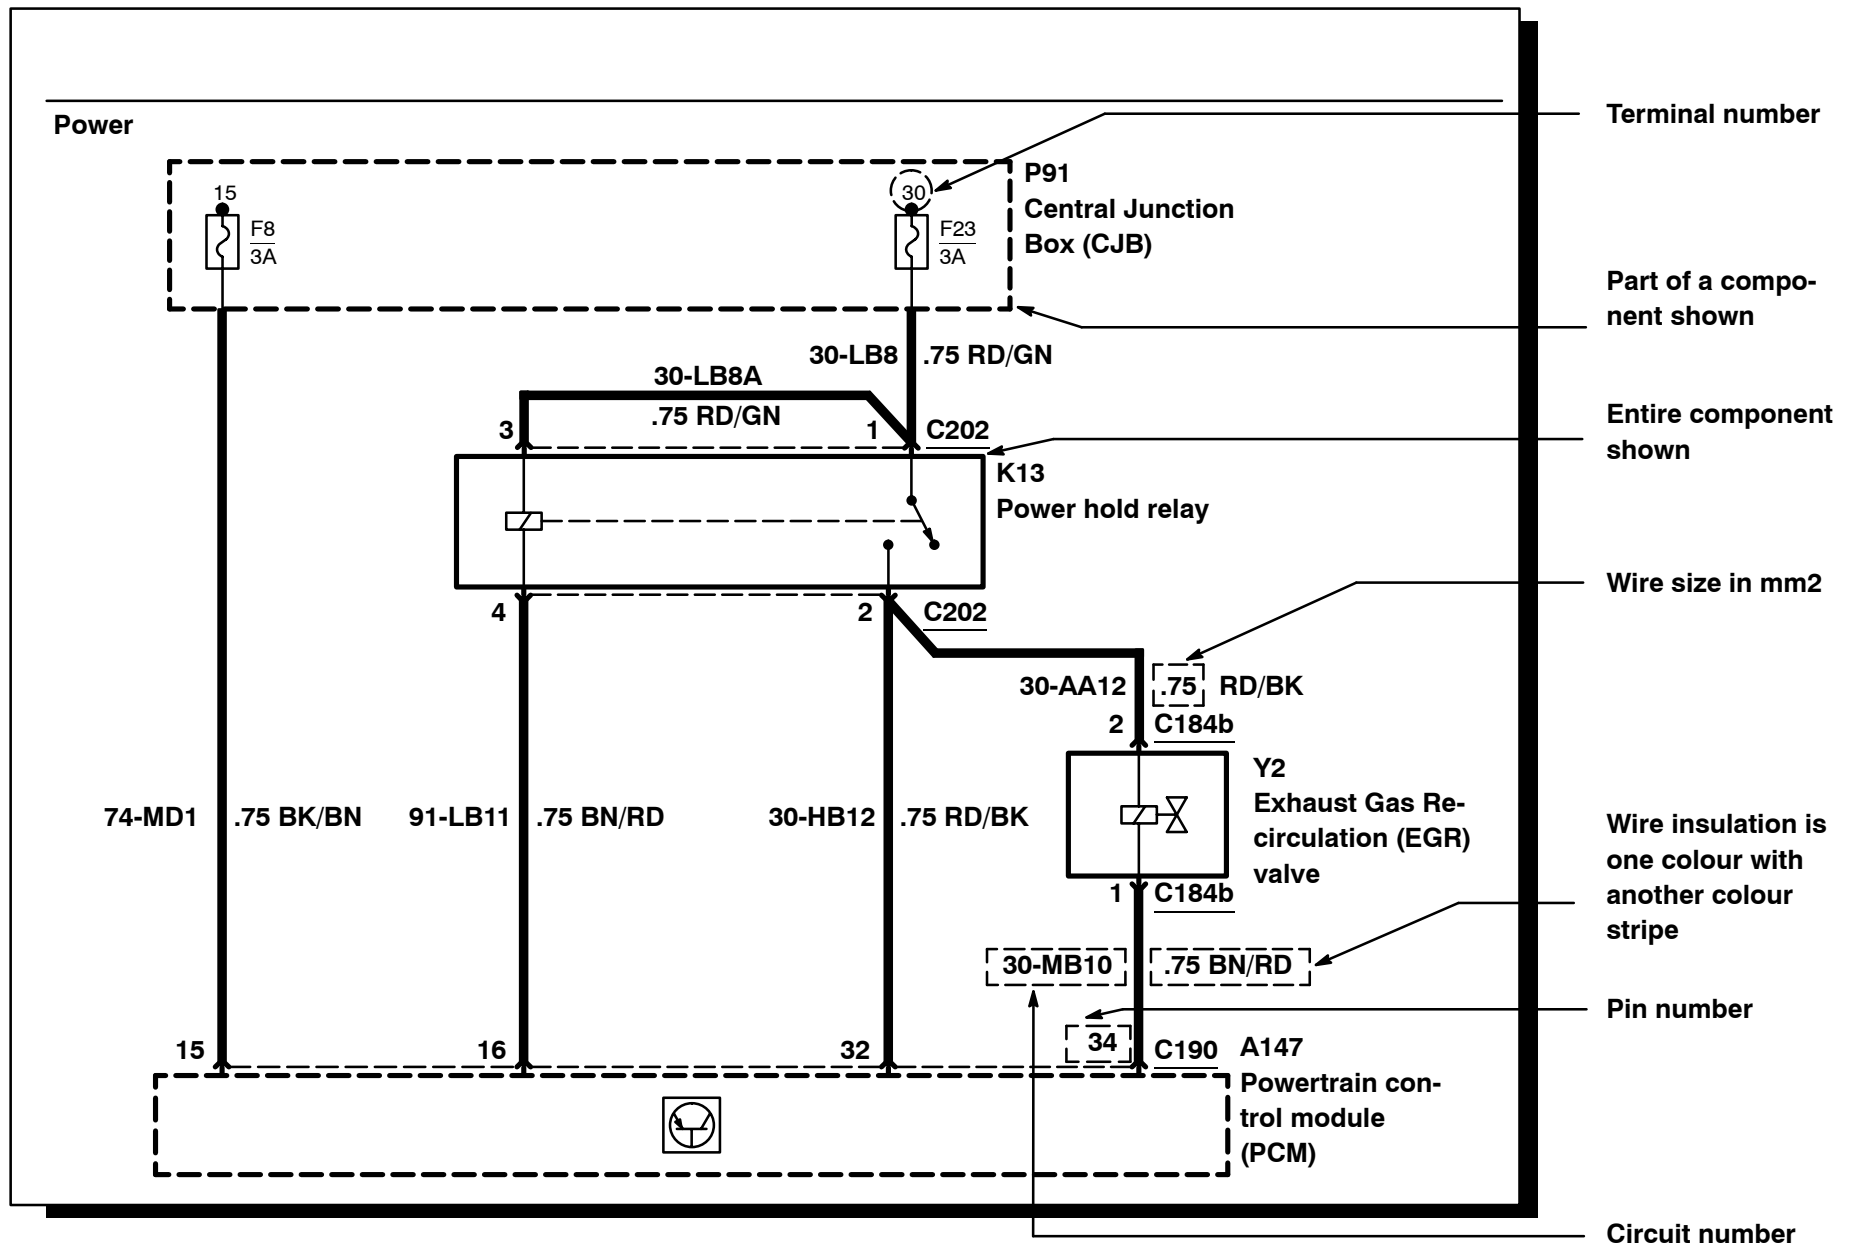

# Symbols

02/2008  
100-00-04-8  
2008.25  
Focus

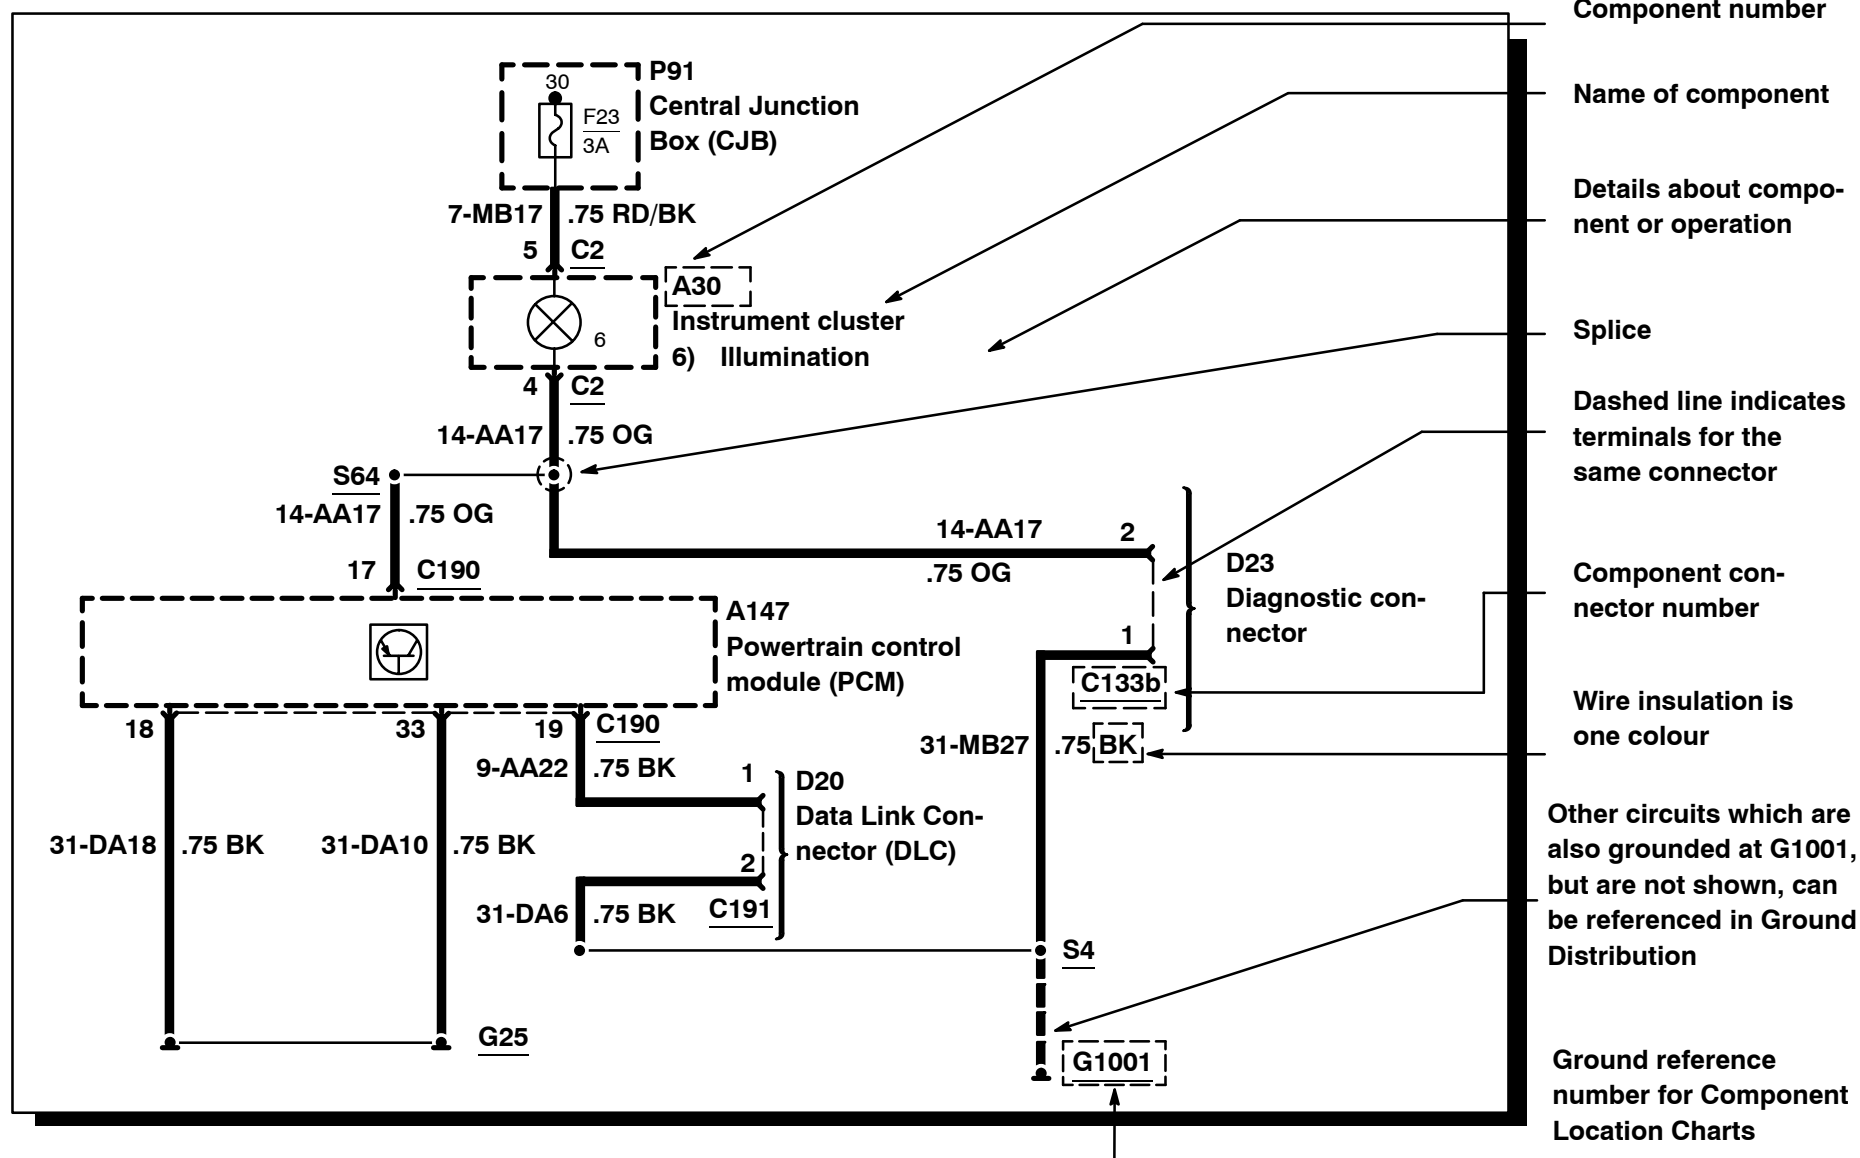

| Number | Description                                                                                                         | Basic colour |
|--------|---------------------------------------------------------------------------------------------------------------------|--------------|
| 1      | Audio signal positive                                                                                               | WH           |
| 2      | Audio signal negative                                                                                               | GY           |
| 3      | Audio signal reference (return/shield)                                                                              | BN           |
| 4      | Data link, bus positive                                                                                             | GY           |
| 5      | Data link, bus positive                                                                                             | BU           |
| 6      | Data link, bus shield                                                                                               | NO           |
| 7      | Constant DC voltage, other than battery                                                                             | YE           |
| 8      | Sensor signal (X–direction, forward, upward)                                                                        | WH           |
| 9      | Sensor signal return (reference/ground)                                                                             | BN           |
| 10     | Sensor signal (Y–direction, reverse, downward)                                                                      | GY           |
| 15     | Battery voltage, hot in Start and Run only                                                                          | GN           |
| 20     | Battery voltage, hot in Run only                                                                                    | PK           |
| 29     | Battery voltage, hot at all times (secondary fused)                                                                 | OG           |
| 30     | Battery voltage, hot at all times (not fused and primary fused)                                                     | RD           |
| 31     | Ground                                                                                                              | BK           |
| 32     | Switched between: Battery voltage, Ground or Open Circuit (Plus for: front down, open, mirror leftward, unlock, on) | WH           |

| Number | Description                                                                                                                          | Basic colour |
|--------|--------------------------------------------------------------------------------------------------------------------------------------|--------------|
| 33     | Switched between: Battery voltage, Ground or Open Circuit (Plus for: front up, close, mirror rightward, lock, off)                   | YE           |
| 34     | Switched between: Battery voltage, Ground or Open Circuit (Plus for: rear up, mirror upward, forward or module settings)             | BU           |
| 35     | Switched between: Battery voltage, Ground or Open Circuit (Plus for: rear down, mirror downward, reverse or inductor output voltage) | VT           |
| 48     | Drain wire                                                                                                                           | NO           |
| 49     | Pulsed power feed                                                                                                                    | BU           |
| 50     | Battery voltage, hot in Start only                                                                                                   | GY           |
| 59     | AC Power                                                                                                                             | GY           |
| 64     | DC voltage, hot only if engine runs                                                                                                  | BU           |
| 75     | Battery voltage, hot in Run and Accessory only                                                                                       | YE           |
| 91     | Ground                                                                                                                               | BK           |

# Symbols – System Codes

02/2008  
100-00-04-10  
2008.25  
Focus

## Distribution Systems

DA: Splices distribution  
DB: Busbars  
DC: Circuit protection – Battery Junction Box (BJB)  
DD: Circuit protection – Central Junction Box (CJB)  
DE: Ground  
DF: Junction block  
DG: Circuit protection – Auxiliary fuse box  
DH: Distribution – Auxiliary fuse box  
DJ: Auxiliary distribution  
DK: Integrated components

## Data Bus Systems

EA: ACP Bus  
EB: ALT Bus  
EC: CAN Bus  
ED: DCL Bus  
EE: ISO Bus  
EG: SCP Bus

## Power Convenience Systems

AA: Door locks and luggage compartment lid (including: remote keyless entry/global closing)  
AD: Power mirrors  
AG: Power roof  
AH: Power seats  
AJ: Power windows  
AL: Power steering column  
AM: Power doors

## Basic Systems

BA: Charge (including: ammeter/voltmeter)  
BB: Start

## Chassis Systems

CC: Ride suspension  
CD: Suspension (air/self-leveling)  
CE: Power steering (variable automatic power assist)  
CF: Anti-lock brakes/traction control  
CG: Brakes (engine/exhaust/jake)

## Climate Systems

FA: Climate 1  
FB: Climate 2  
FC: Climate, auxiliary heater

## Information and Warning Systems

GA: Gauges – level/pressure/temperature  
GB: Gauges miscellaneous (including: speedometer/clock)  
GC: Indicator – level/pressure/temperature  
GE: Auxiliary warning/bulb outage  
GG: Instrument cluster  
GH: Trip computer  
GJ: Horn  
GK: Navigation  
GL: Anti-theft  
GM: Audio warning (including: buzzers/chimes)  
GN: parking aid  
GP: Vehicle emergency monitoring

## Heated Systems

HA: Auxiliary (including: air/filter/lighter)  
HB: De-ice (including: mirrors/washer jets/windows)

HC: Heated seats

## Occupant Restraint Systems

JA: Air Bags

## Wiper and Washer Systems

KA: Wiper/washer

## Lighting Systems

LB: Courtesy (glove comp./hood/luggage comp./map/recharg. flashlight/vanity)  
LC: Entry (including: dome/floor/door)  
LD: Fog/flood/driving  
LE: Head (including: concealed/dim-dip/daytime running)  
LF: Parking/marker/licence/clearance  
LG: Turn signal/cornering/hazard/stop/reverse  
LH: Switch illumination  
LK: Instrument Illumination

## Entertainment and Communication Systems

MC: Communication  
MD: Entertainment

## Special Vehicles (unique)

NA: Ambulance  
NB: Police  
NC: Taxi  
ND: Trailer

## Powertrain Control Systems

PA: Engine control (common, cooling and extra carbureted)  
PG: Vehicle speed and engine RPM

# Symbols


02/2008  
100-00-04-11  
2008.25  
Focus

-  Left-hand-drive vehicles
-  Right-hand-drive vehicles

## Country codes

- |                                                                                                  |                                                                                               |
|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
|  Austria        |  Iceland     |
|  Belgium        |  Norway      |
|  Switzerland    |  Netherlands |
|  Czech Republic |  Portugal    |
|  Germany        |  Sweden      |
|  Denmark        |  Finland     |
|  Spain        |                                                                                               |
|  France       |                                                                                               |
|  Greece       |                                                                                               |
|  Hungary      |                                                                                               |
|  Italy        |                                                                                               |

| Wire colours |             |
|--------------|-------------|
| BK           | Black       |
| BN           | Brown       |
| BU           | Blue        |
| GN           | Green       |
| GY           | Grey        |
| LG           | Light green |
| NA           | Natural     |
| OG           | Orange      |
| PK           | Pink        |
| RD           | Red         |
| SR           | Silver      |
| VT           | Violet      |
| WH           | White       |
| YE           | Yellow      |

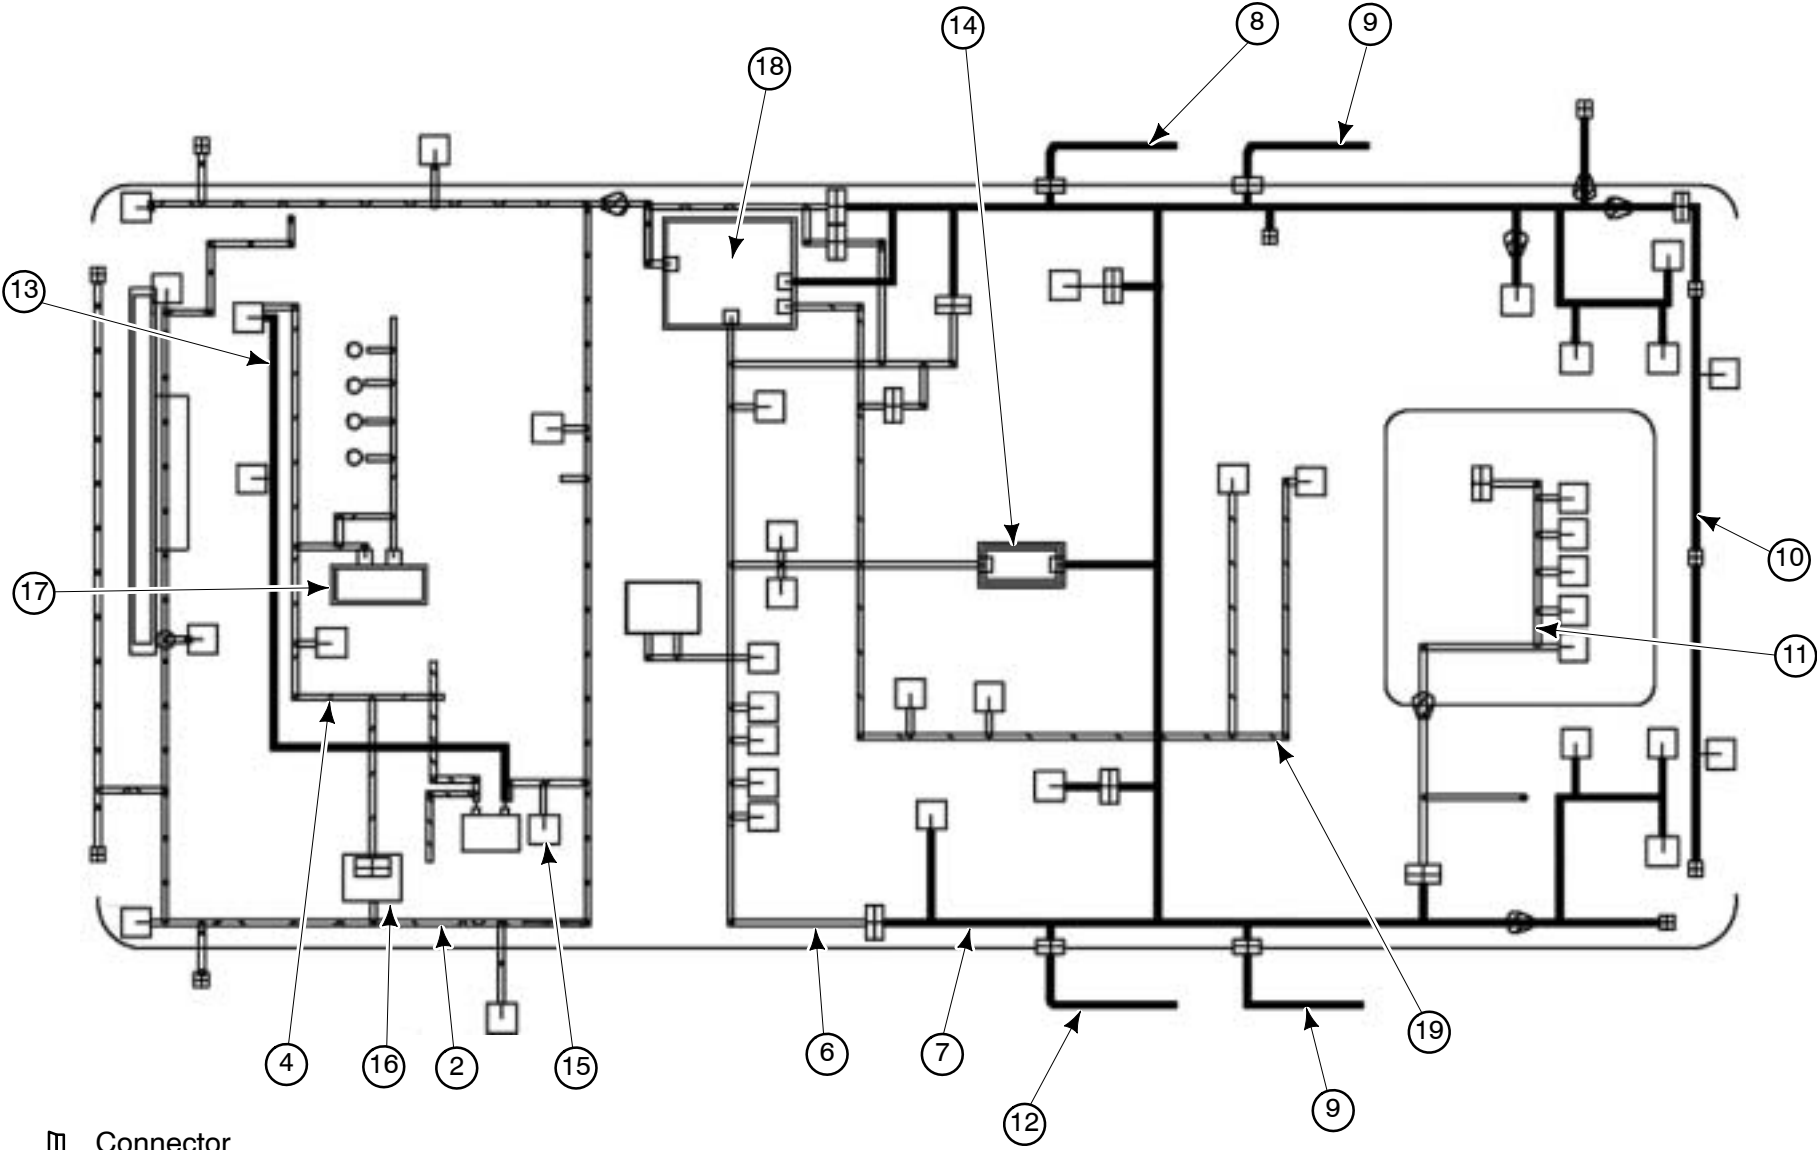


| Item | Part Number | Description                               | Item | Part Number | Description                            |
|------|-------------|-------------------------------------------|------|-------------|----------------------------------------|
| 2    | 14K733      | Wiring harness – Engine compartment       | 13   | 14A280      | Wiring harness – Battery               |
| 4    | 12A690      | Wiring harness – Engine control           | 14   | –           | Restraints Control Module (RCM)        |
| 6    | 14401       | Main wiring harness                       | 15   | –           | ABS module                             |
| 7    | 14014       | Wiring harness – Door to door             | 16   | –           | Battery Junction Box (BJB)             |
| 8    | 14K138      | Wiring harness – Passenger door           | 17   | –           | Power Control Module (PCM)             |
| 9    | 14240       | Wiring harness – Rear doors               | 18   | –           | Central Junction Box (CJB)             |
| 10   | 15K868      | Wiring harness – Parking aid sensor, rear | 19   | 14335       | Wiring harness – Interior illumination |
| 11   | 17N400      | Wiring harness – Liftgate/rear doors      |      |             |                                        |
| 12   | 14A584      | Wiring harness – Driver door              |      |             |                                        |



# Wiring Harness Overview – RHD

02/2008  
100-00-06-2  
2008.25  
Focus

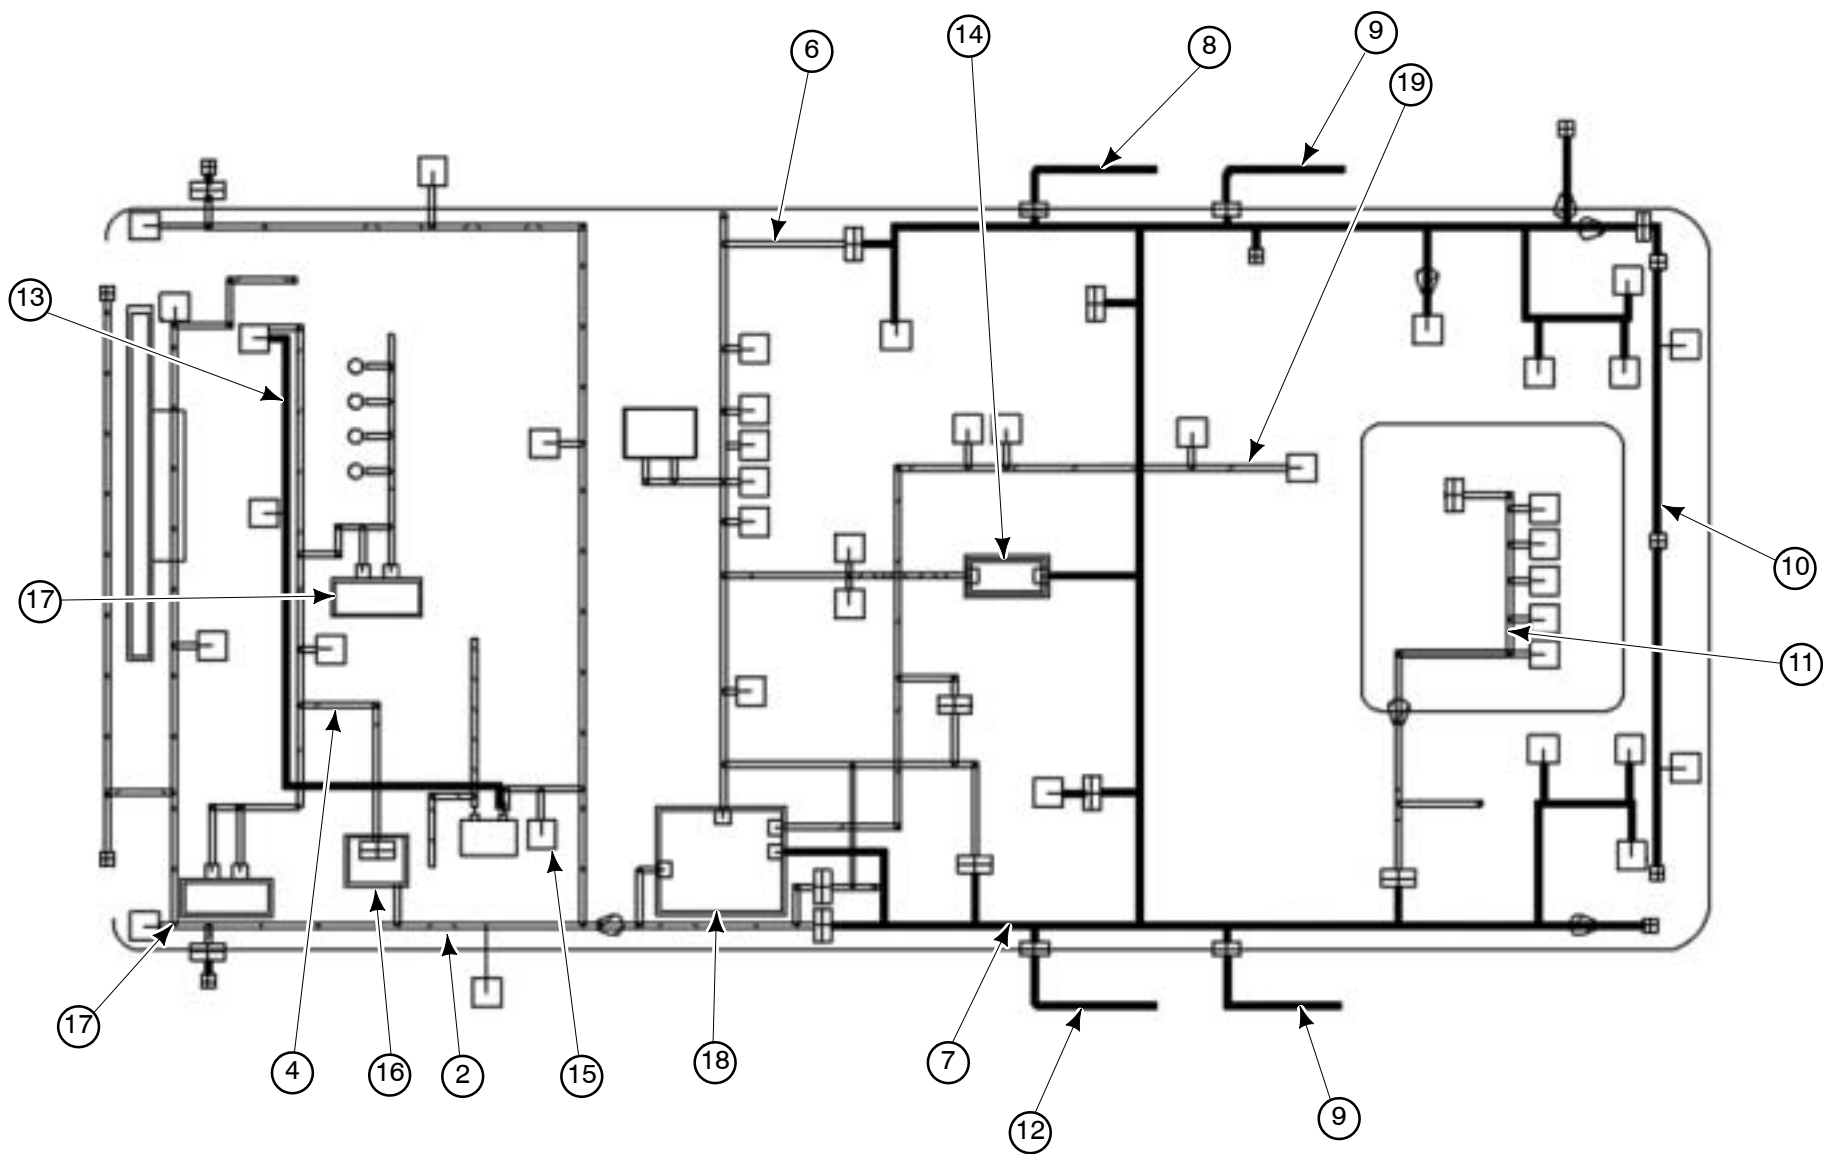


## Connector

| Item | Part Number | Description                               | Item | Part Number | Description                            |
|------|-------------|-------------------------------------------|------|-------------|----------------------------------------|
| 2    | 14K733      | Wiring harness – Engine compartment       | 112  | 14A280      | Wiring harness – Battery               |
| 4    | 12A690      | Wiring harness – Engine control           | 113  | –           | Restraints Control Module (RCM)        |
| 6    | 14401       | Main wiring harness                       | 15   | –           | ABS module                             |
| 7    | 14014       | Wiring harness – Door to door             | 16   | –           | Battery Junction Box (BJB)             |
| 8    | 14A584      | Wiring harness – Driver door              | 17   | –           | Power Control Module (PCM)             |
| 9    | 14240       | Wiring harness – Rear doors               | 18   | –           | Central Junction Box (CJB)             |
| 100  | 15K868      | Wiring harness – Parking aid sensor, rear | 19   | 14335       | Wiring harness – Interior illumination |
| 11   | 17N400      | Wiring harness – Liftgate/rear doors      |      |             |                                        |
| 111  | 14K138      | Wiring harness – Passenger door           |      |             |                                        |


Anti-Lock Control


02/2008  
206-09A-00-1  
2008.25  
Focus

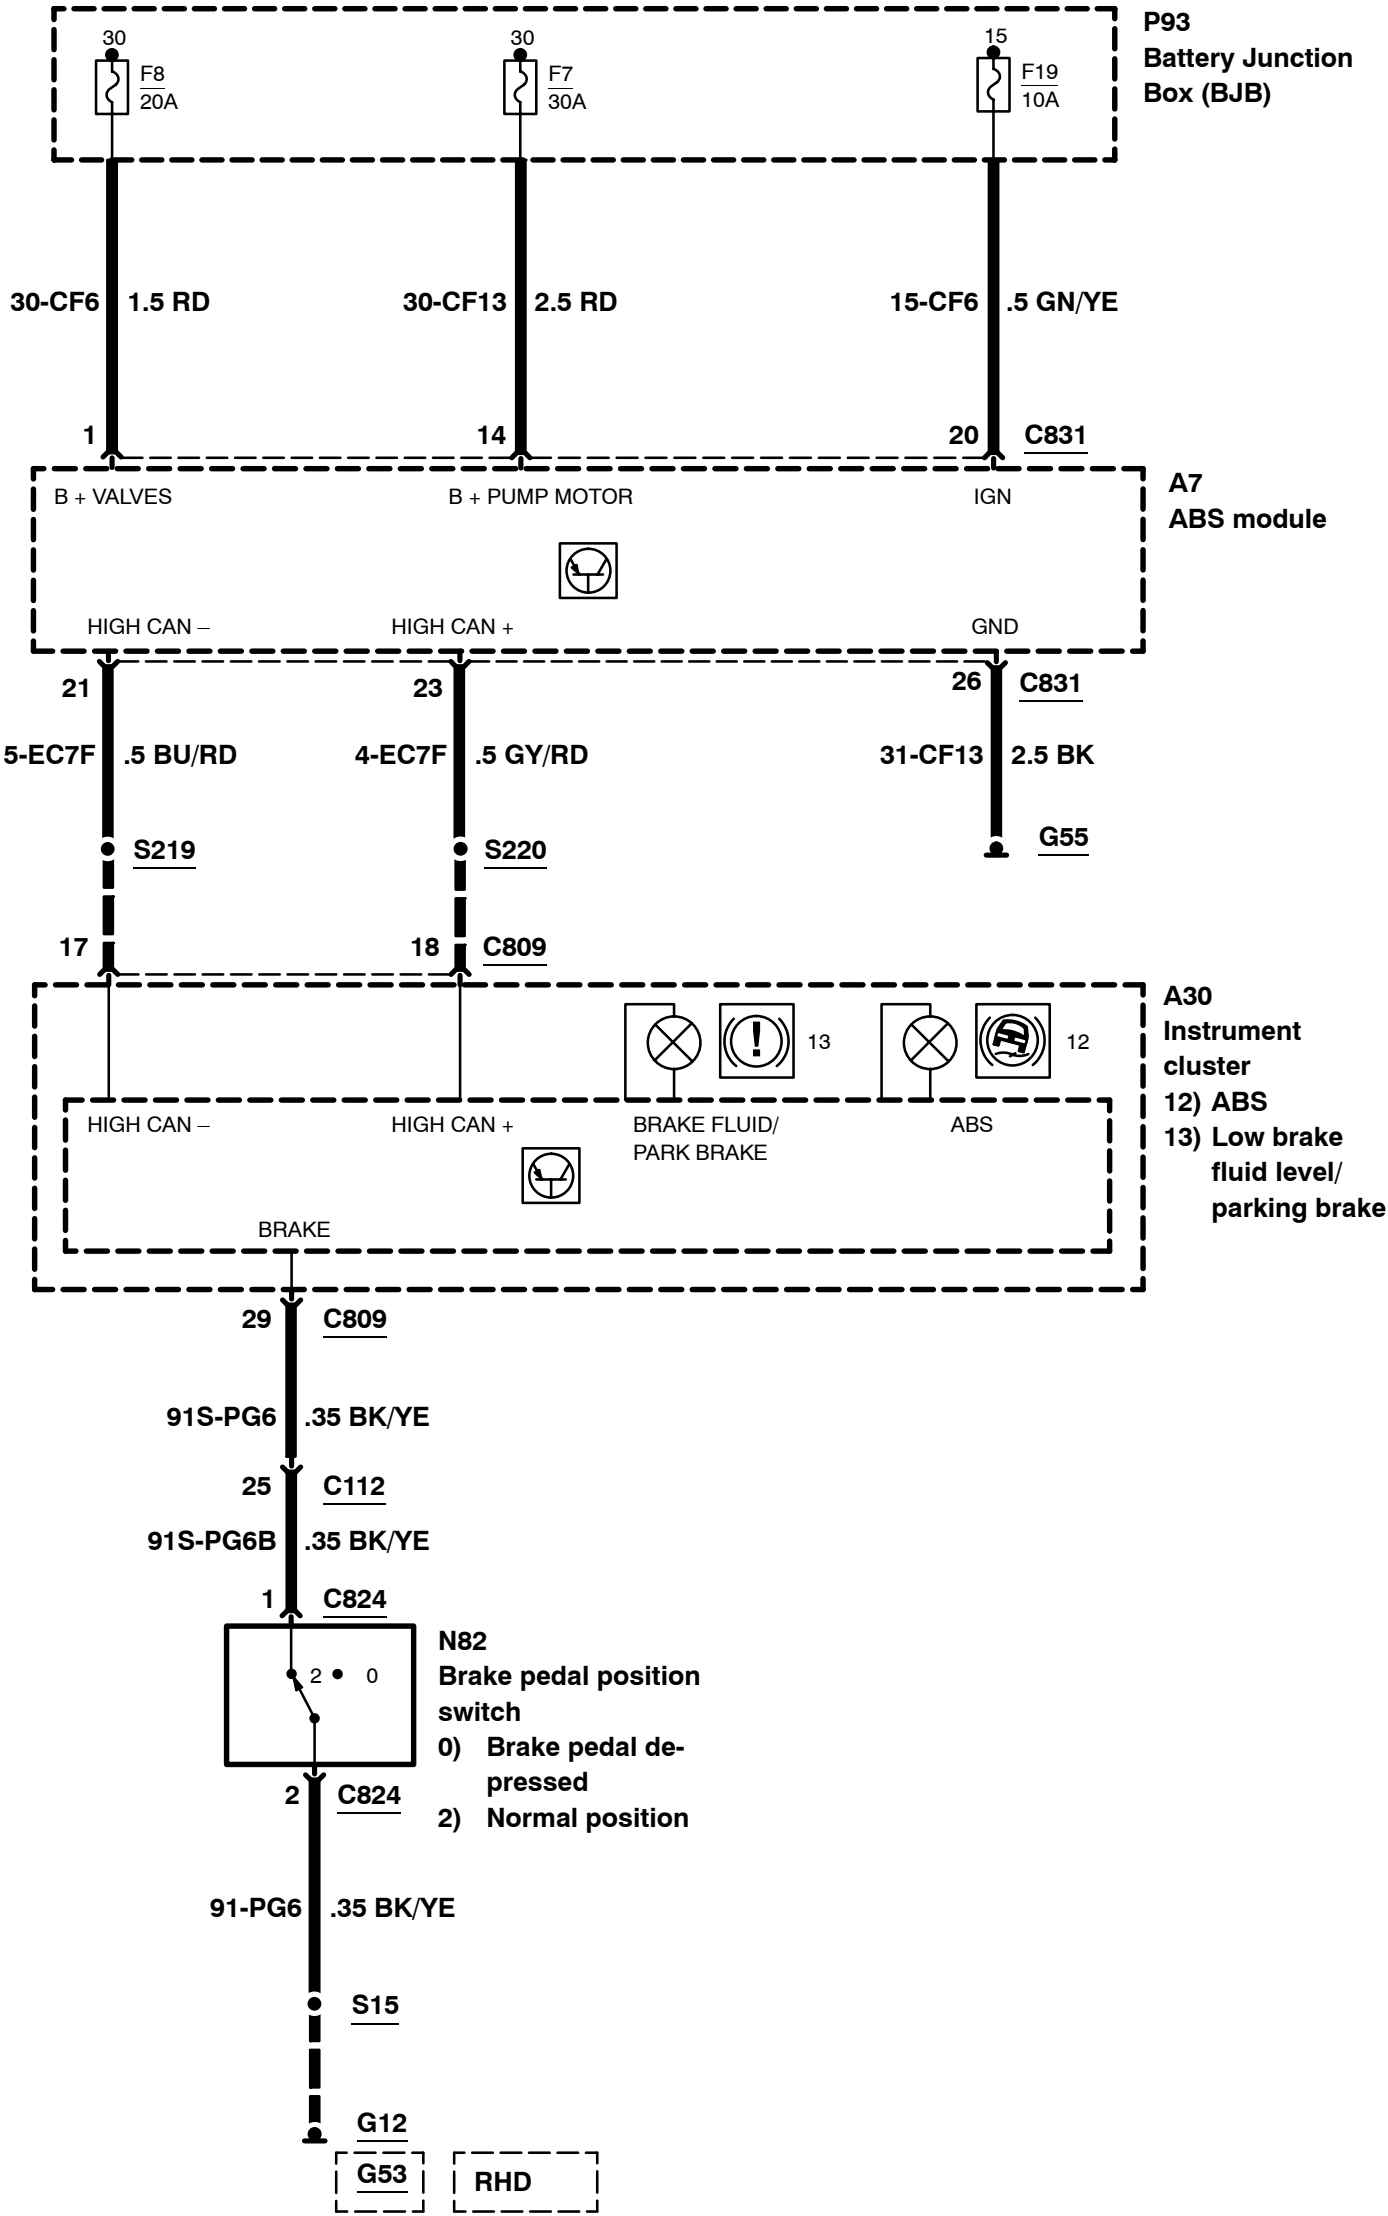


Anti-Lock Control

02/2008  
206-09A-00-2  
2008.25  
Focus

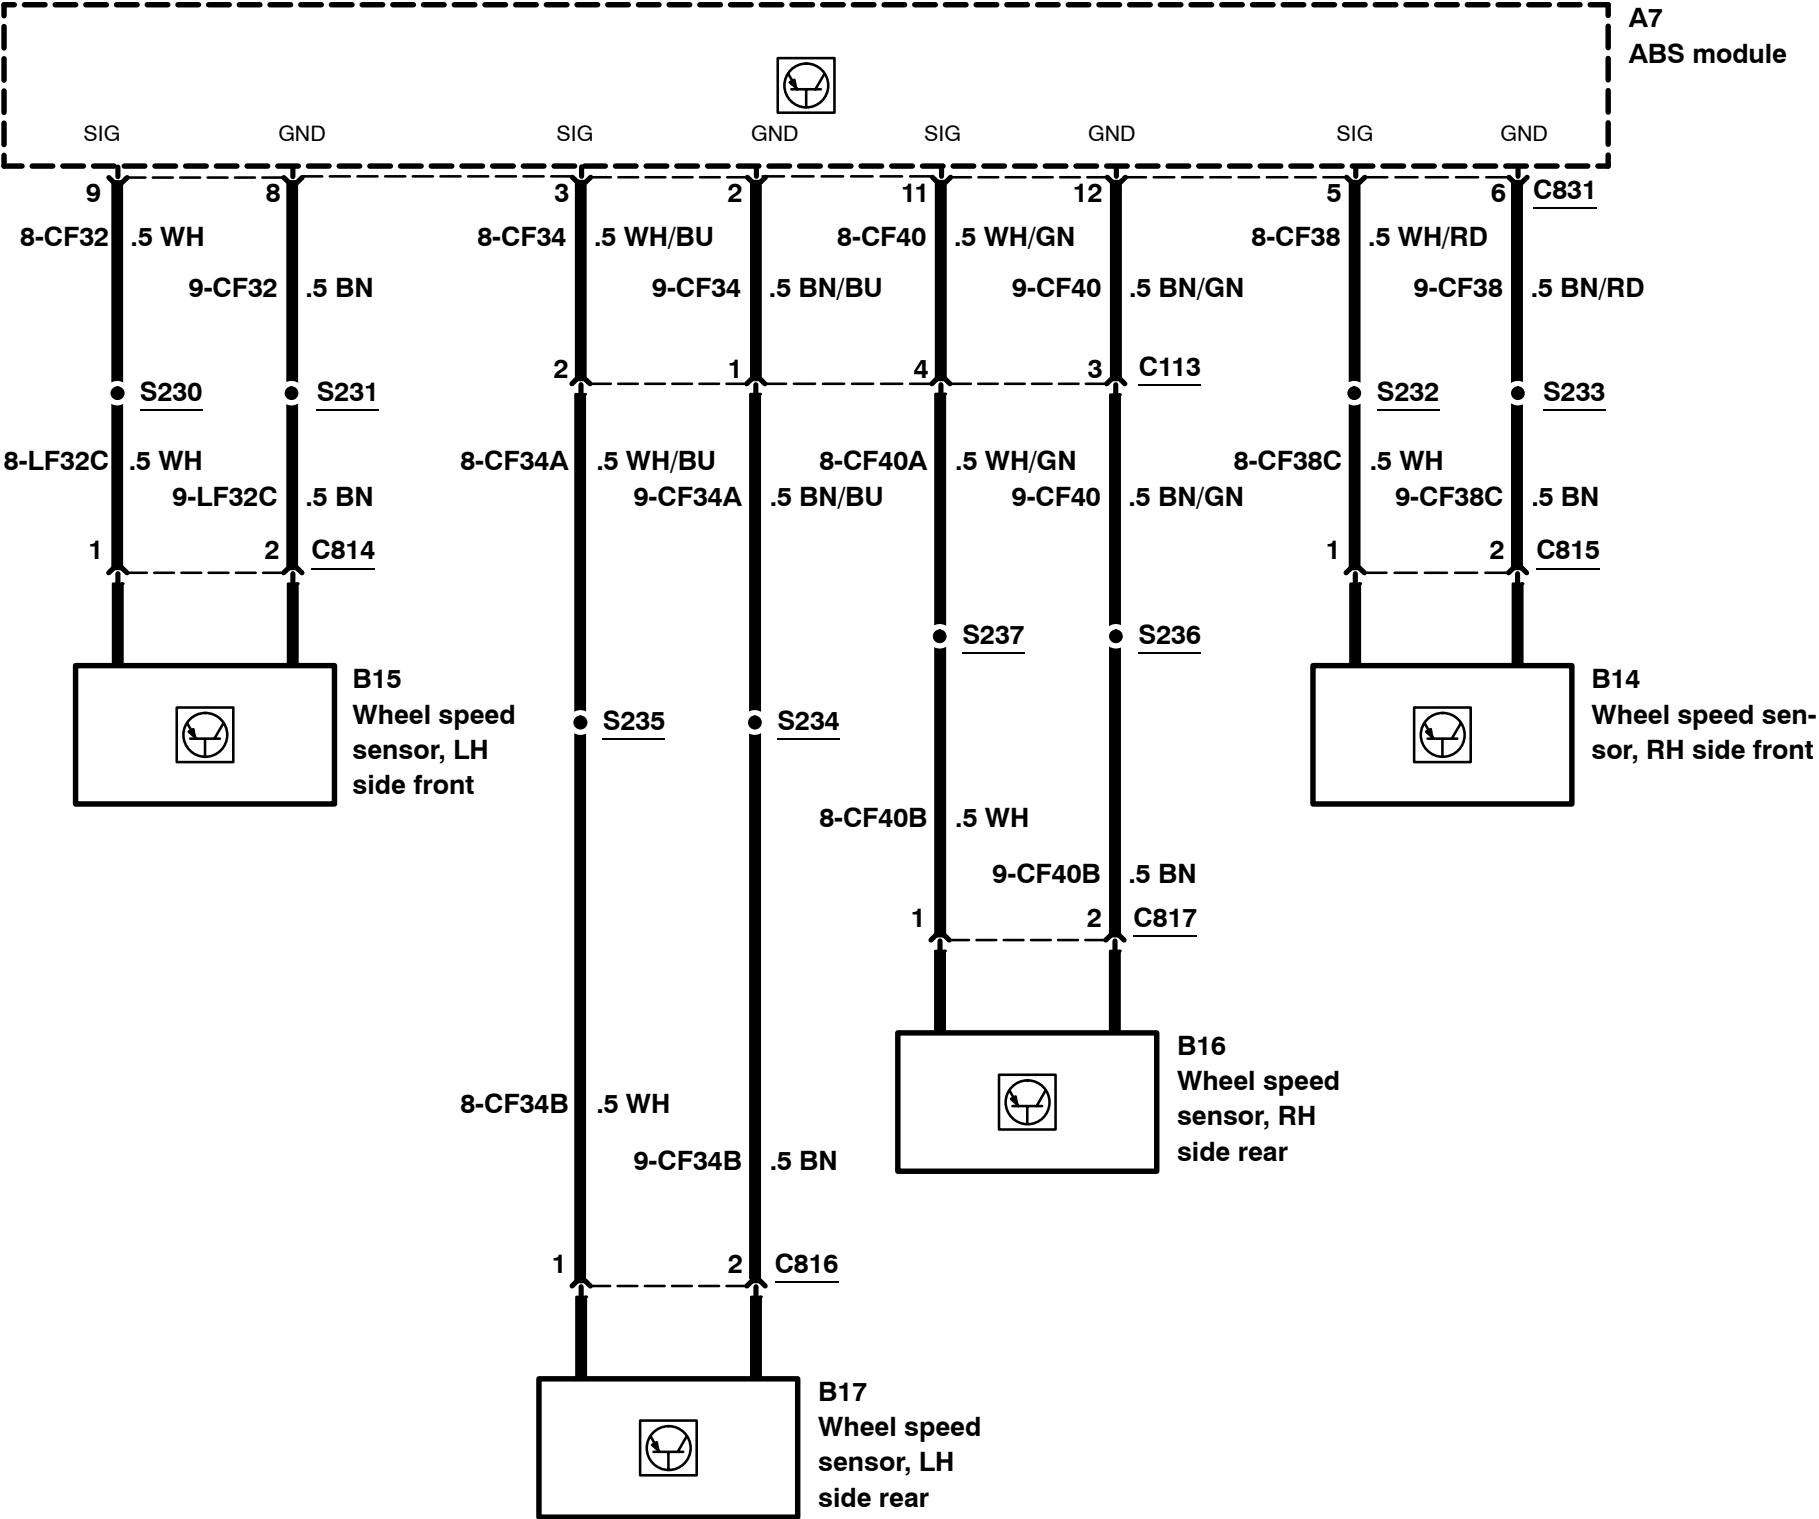


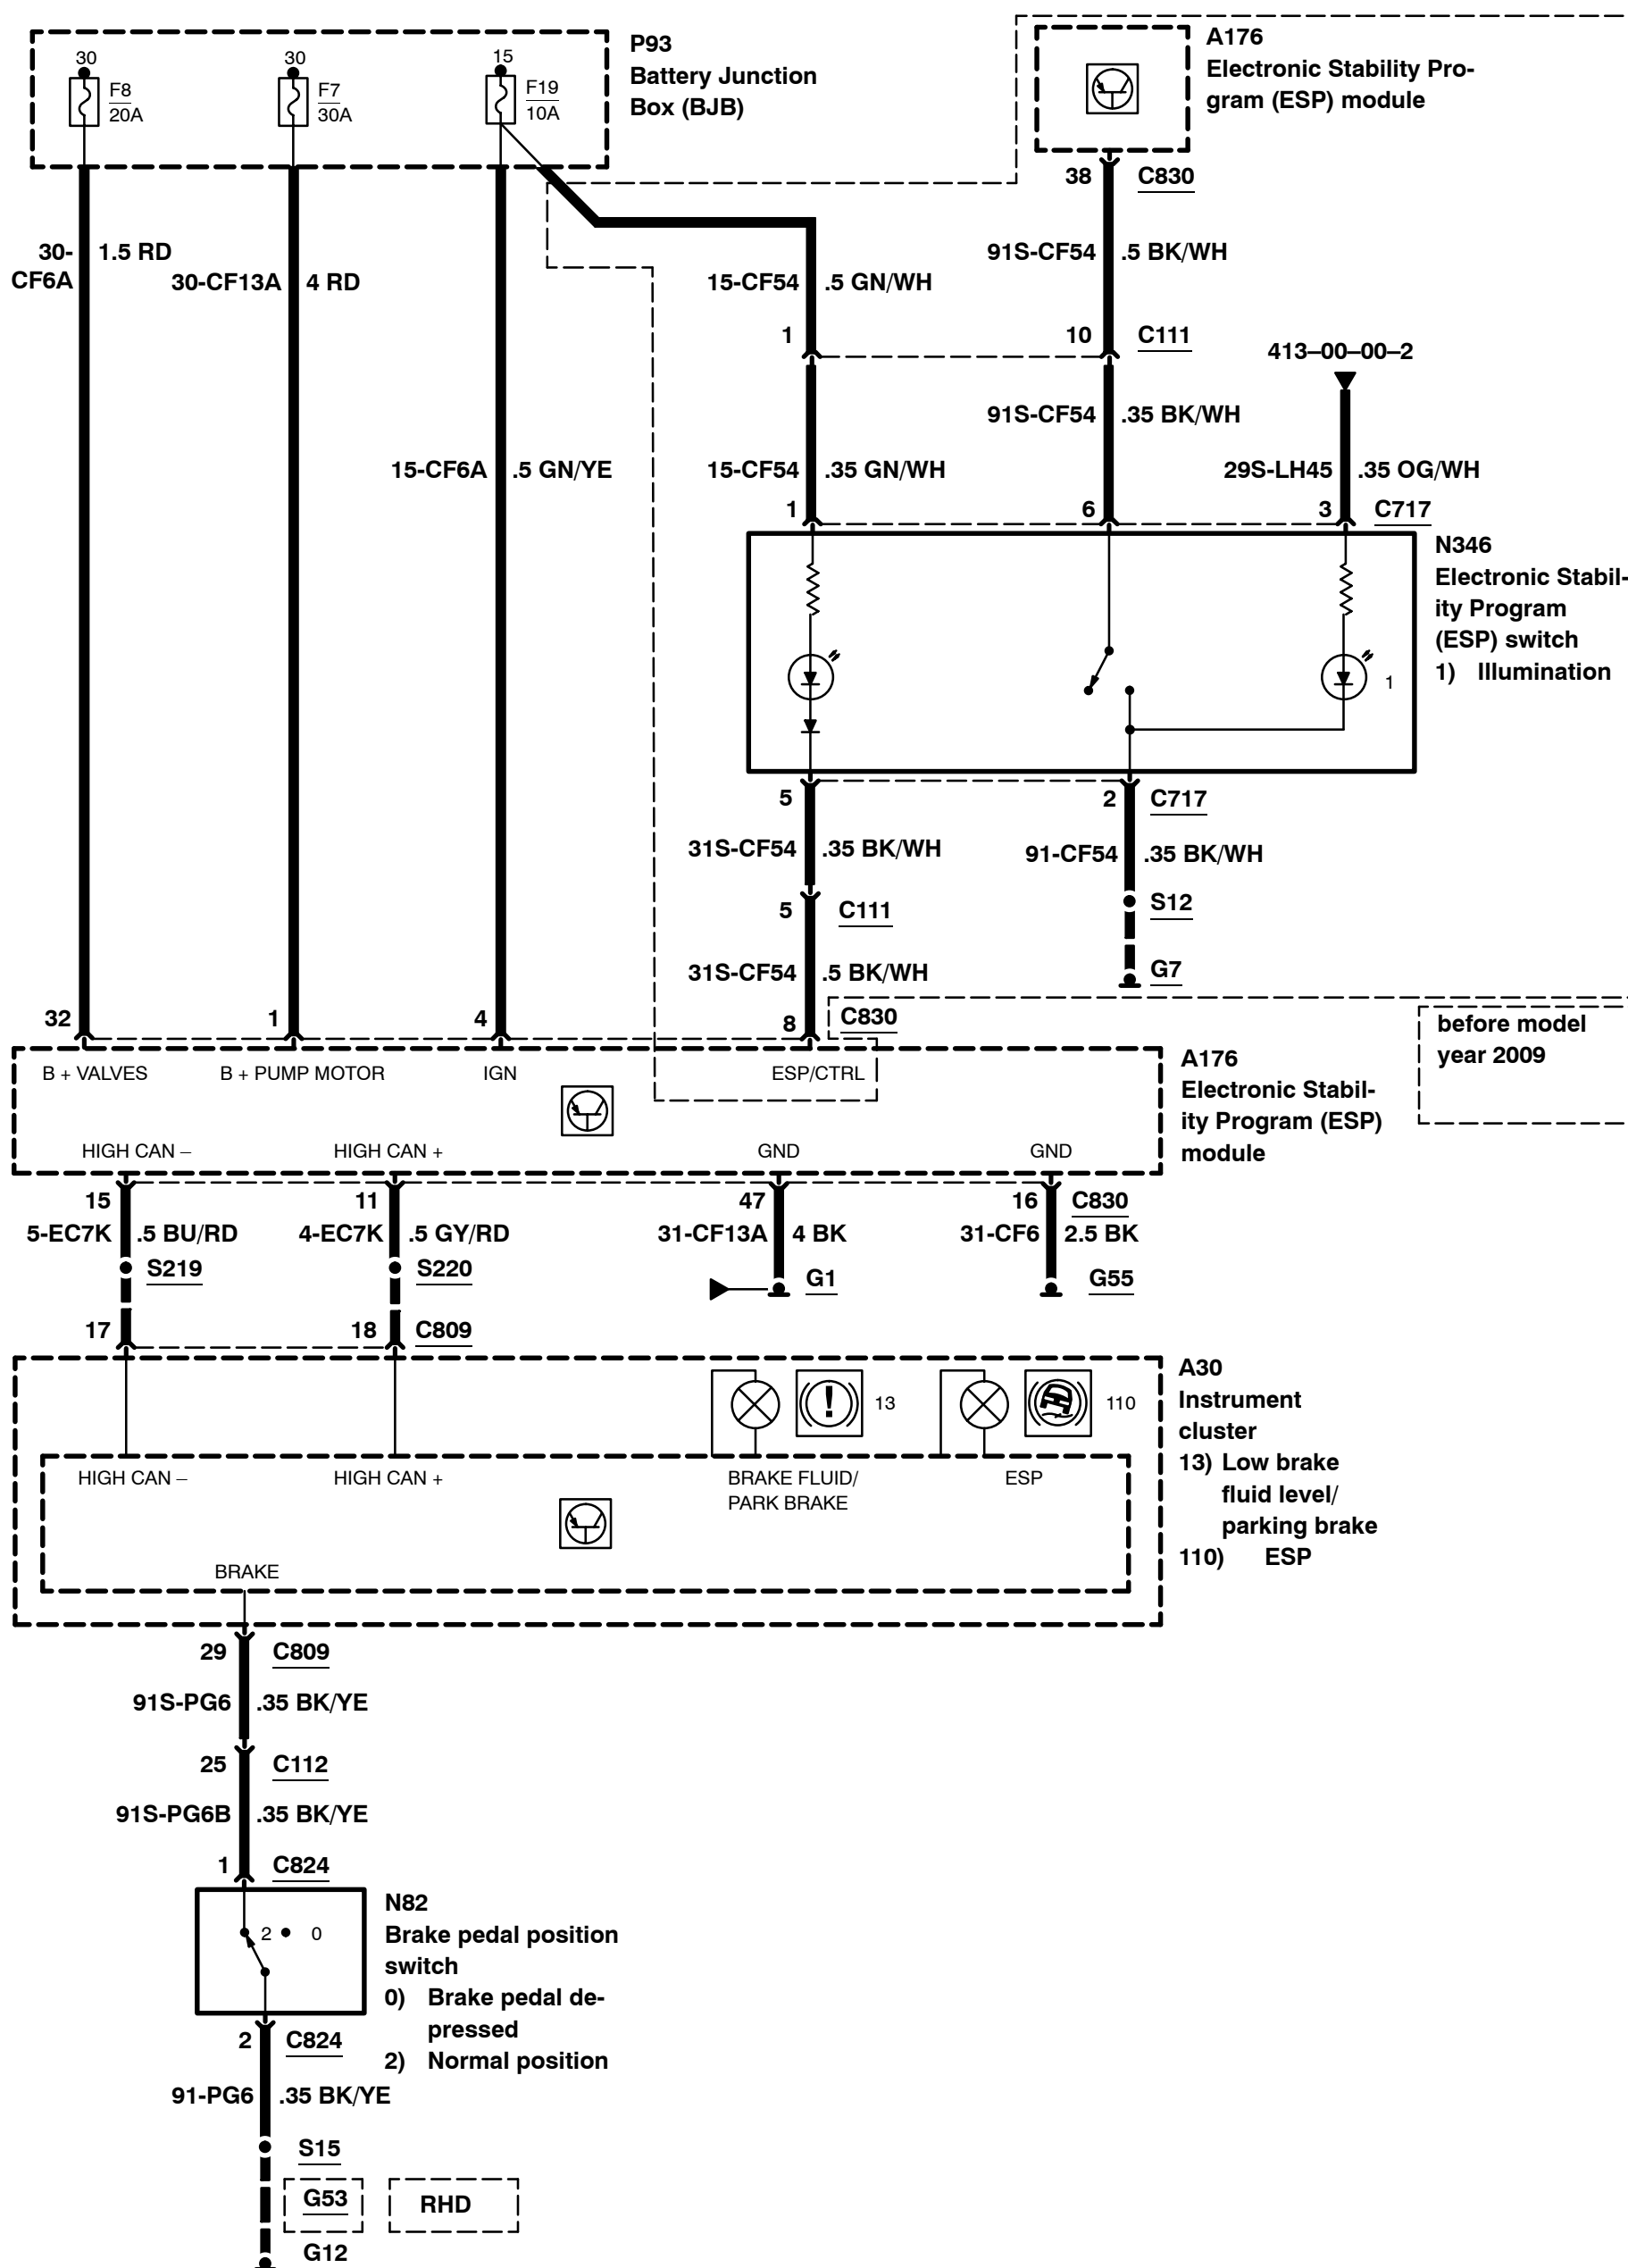

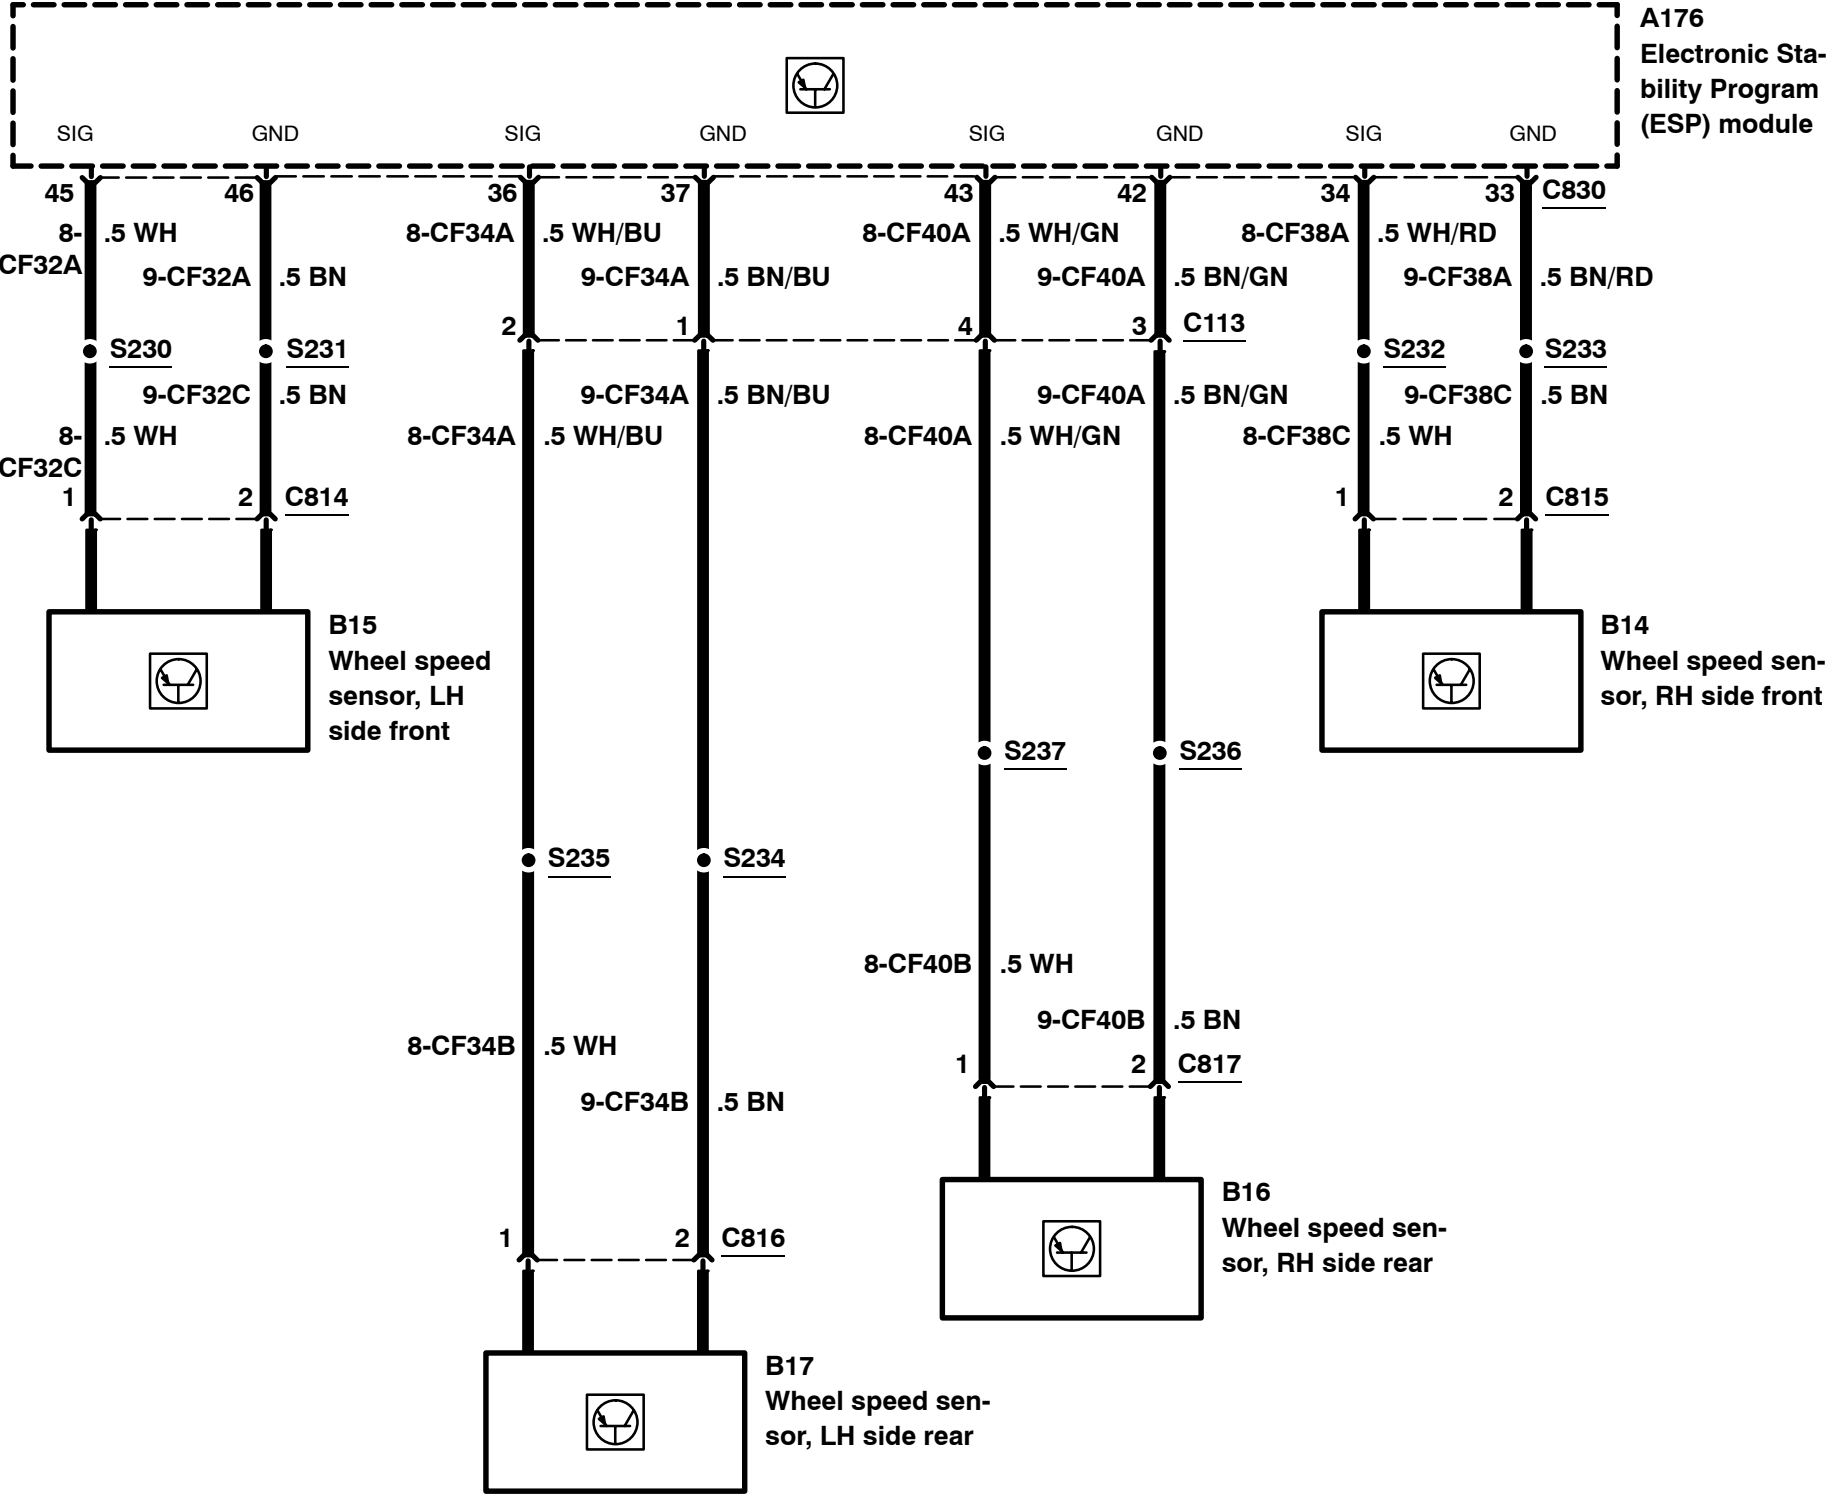

# Anti-Lock Control – Stability Assist – without adaptive front lighting


02/2008  
206-09C-00-3  
2008.25  
Focus

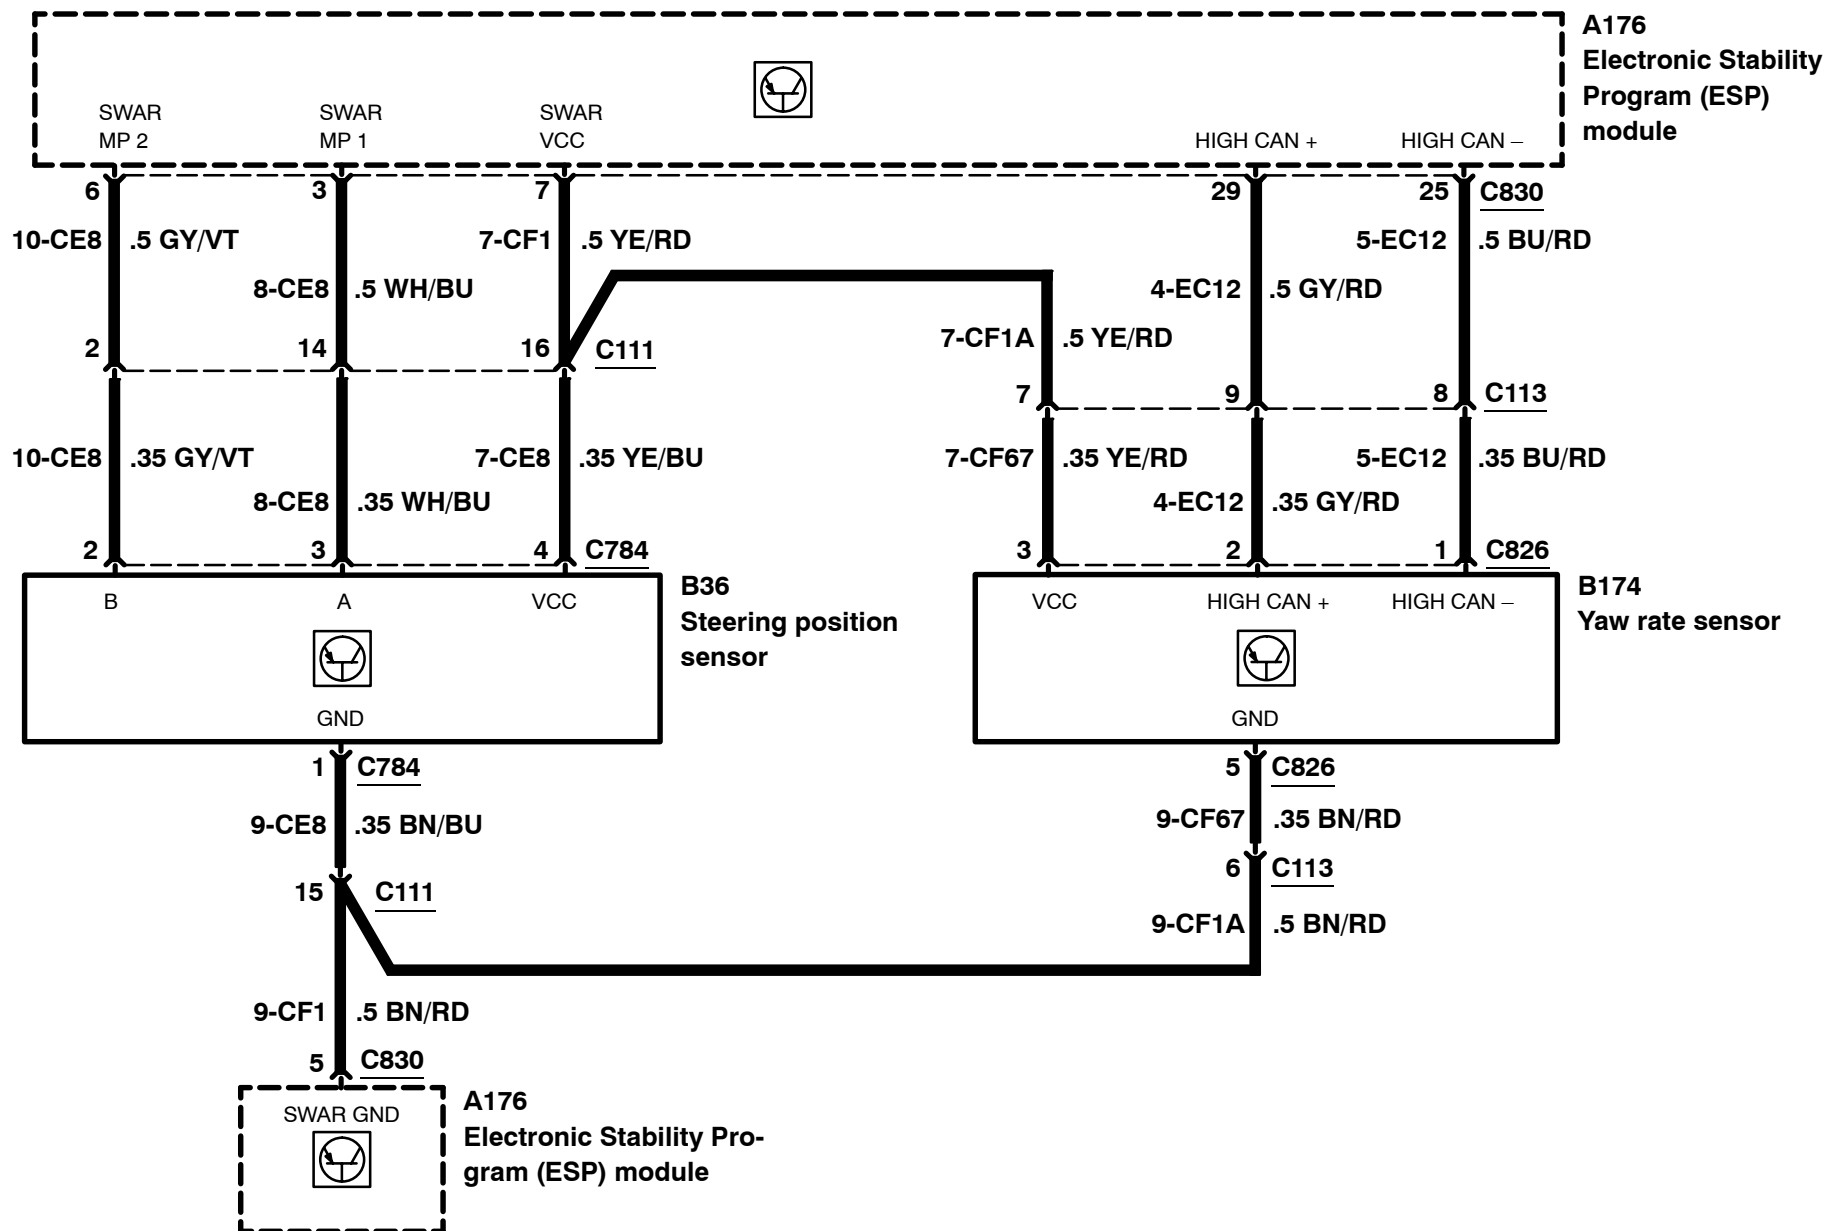




# Anti-Lock Control – Stability Assist – with adaptive front lighting

02/2008  
206-09C-00-4  
2008.25  
Focus

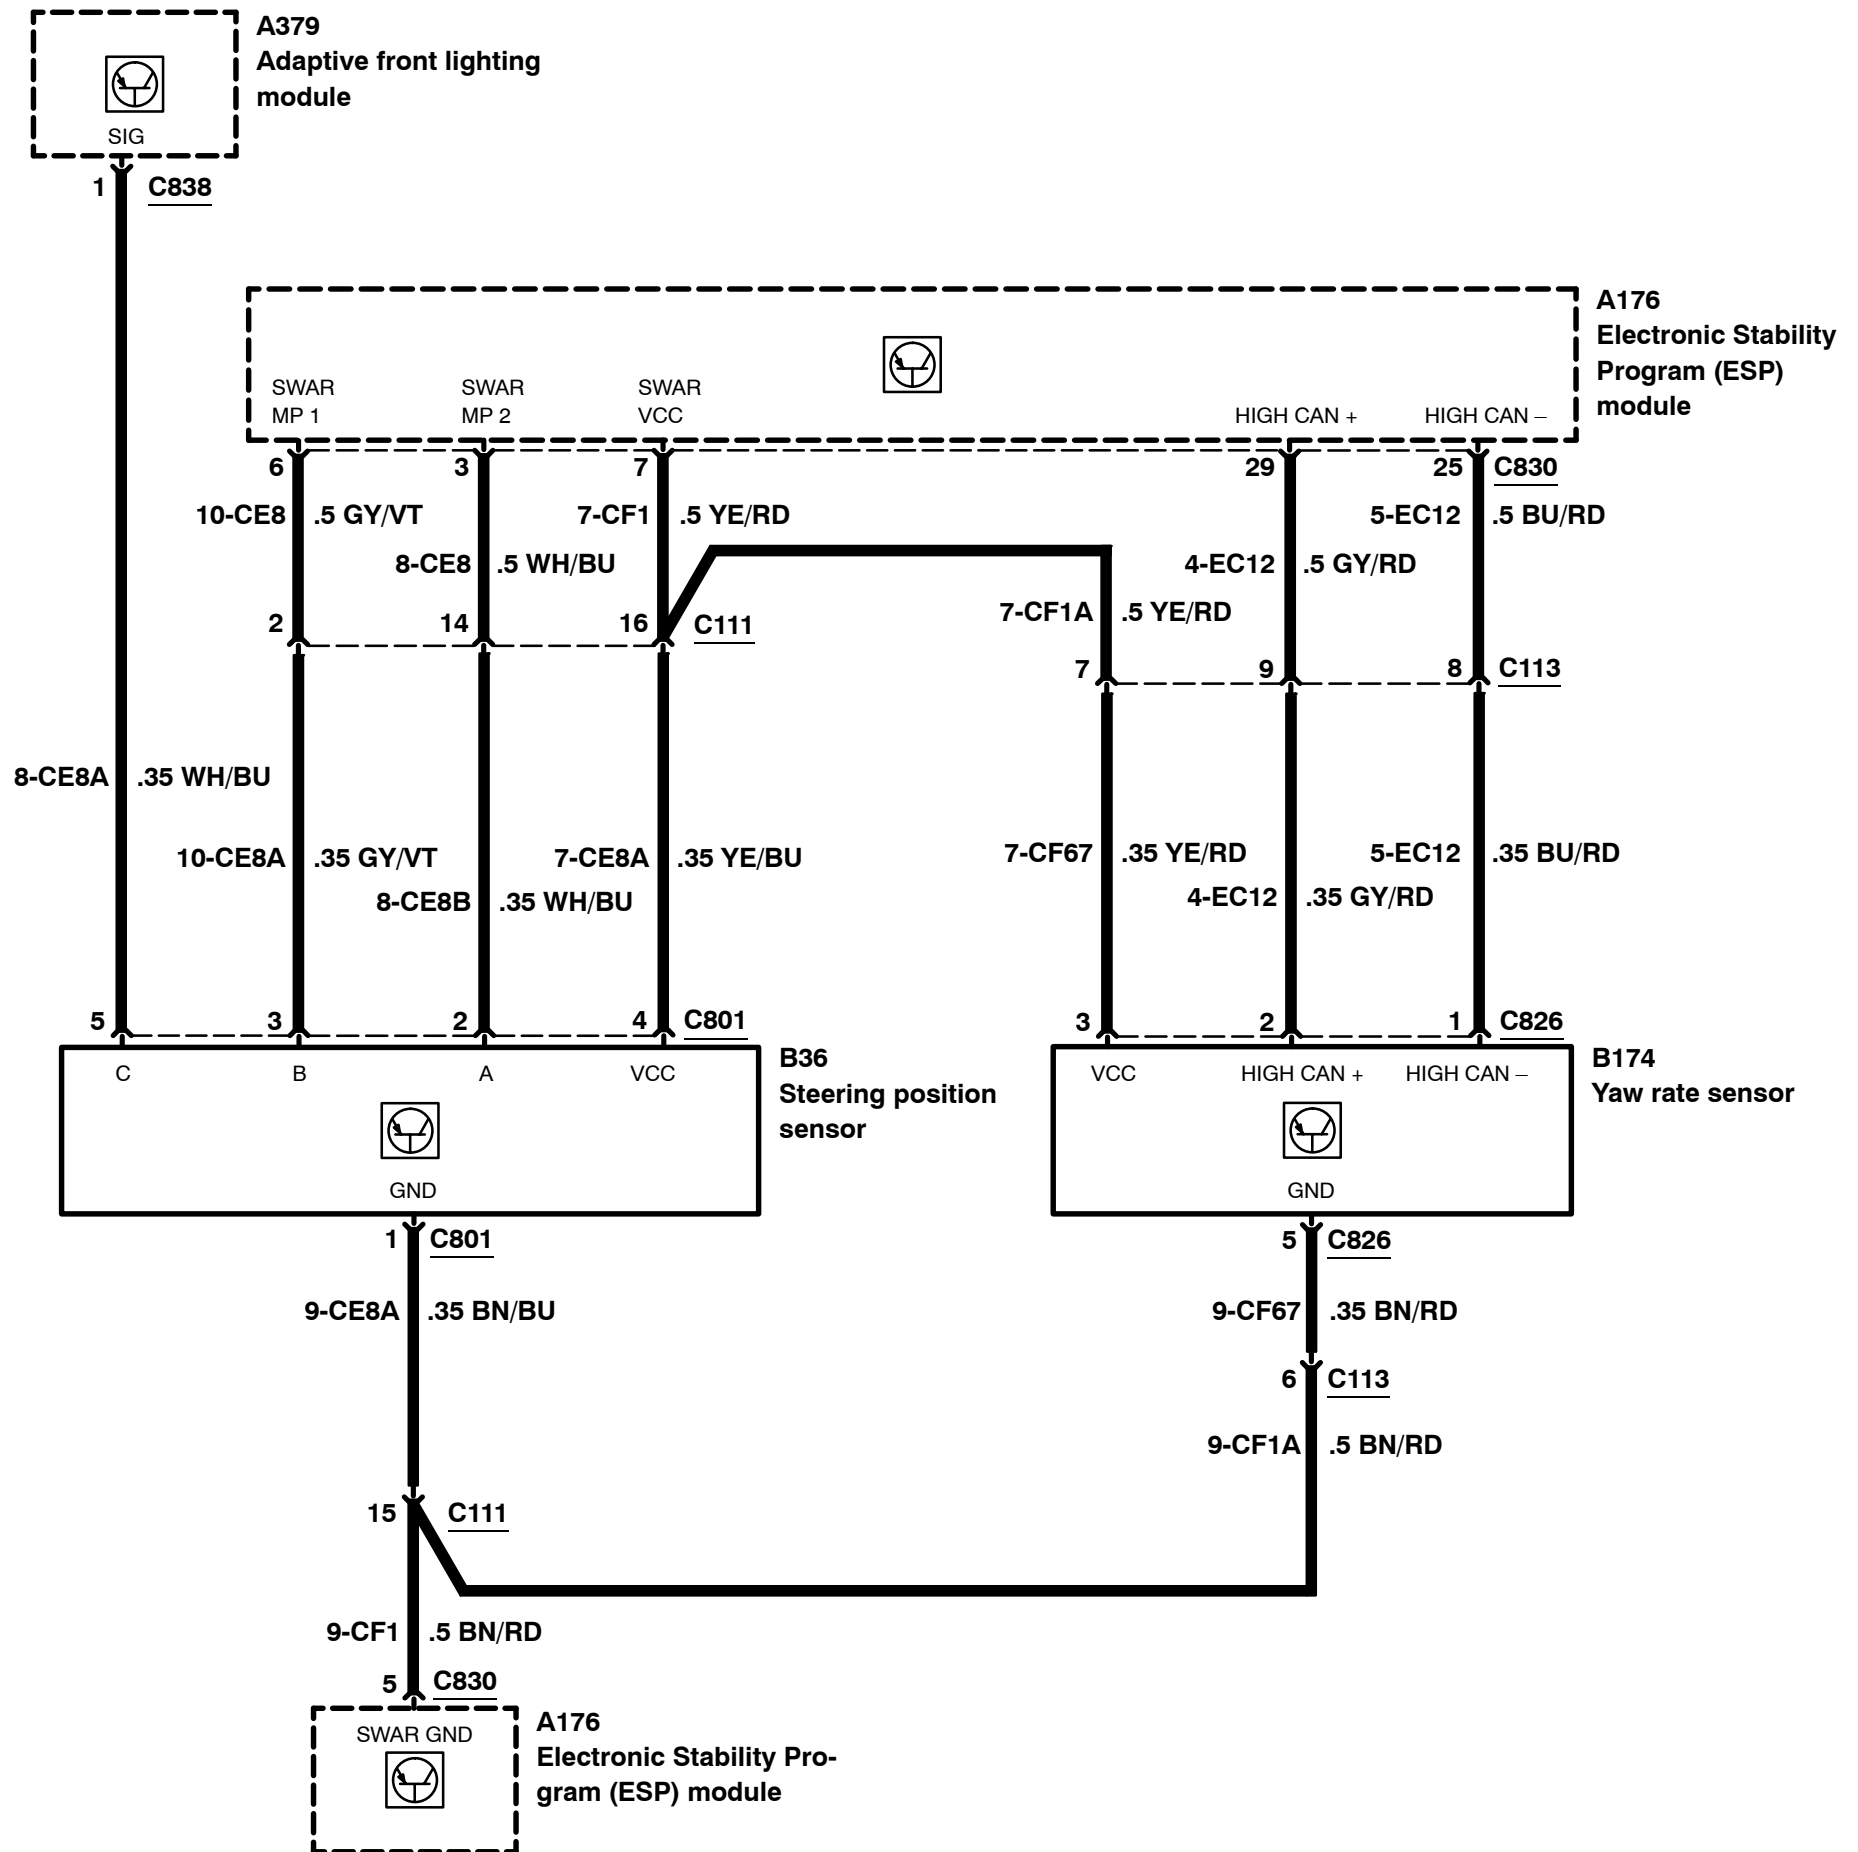

# Power Steering


02/2008  
211-02-00-1  
2008.25  
Focus

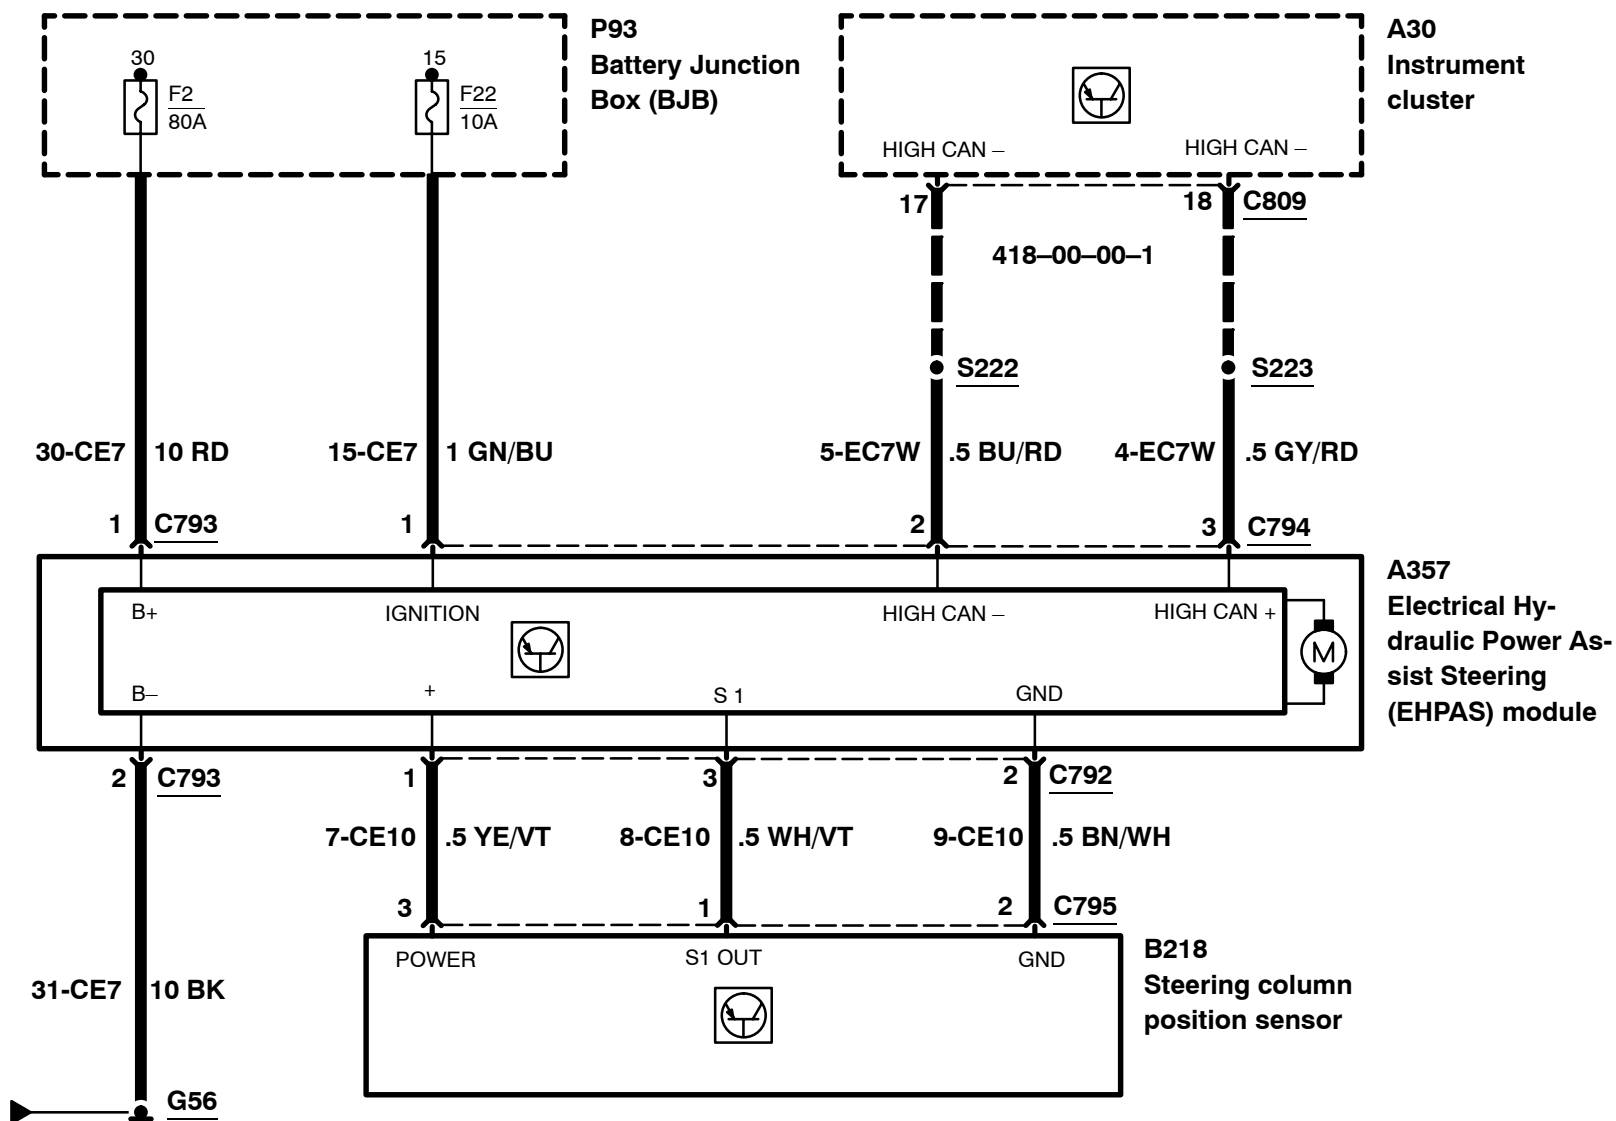




Engine Cooling – 1.6L (Z6)

02/2008  
303-03A-00-1  
2008.25  
Focus

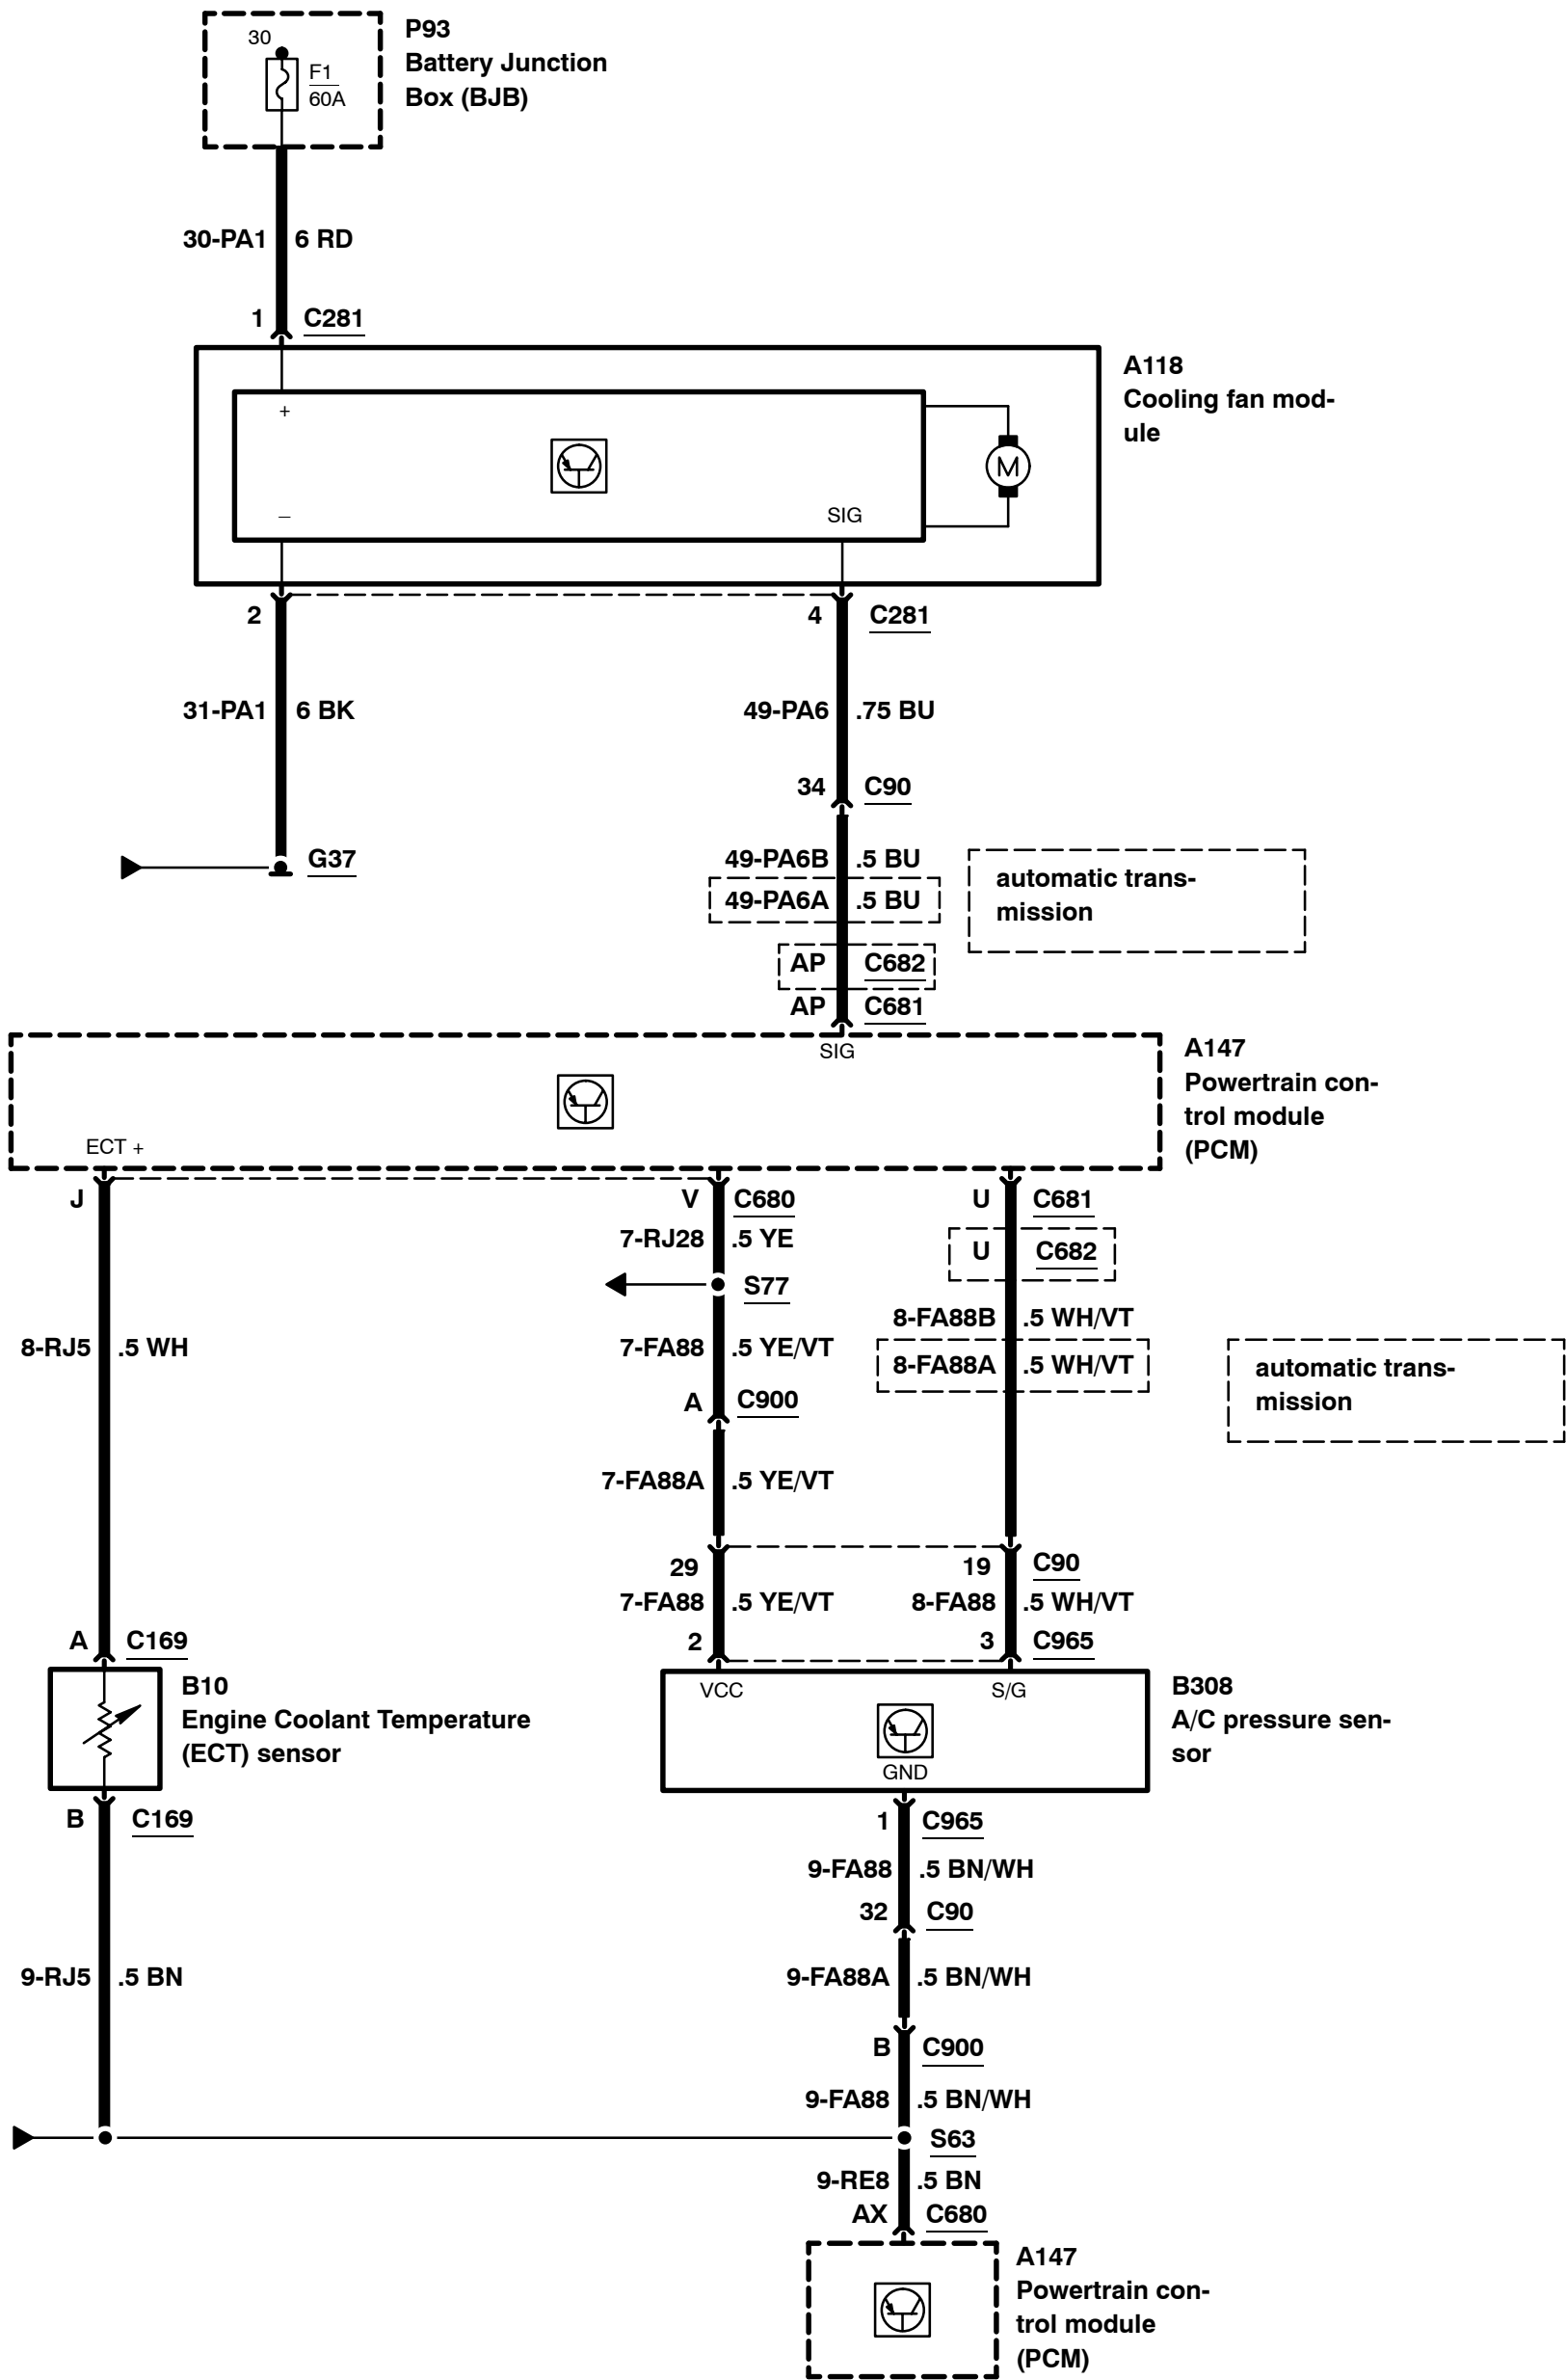


Engine Cooling – 1.8/2.0L Duratec–HE (M14), before model year 2009

02/2008  
303-03B-00-1  
2008.25  
Focus

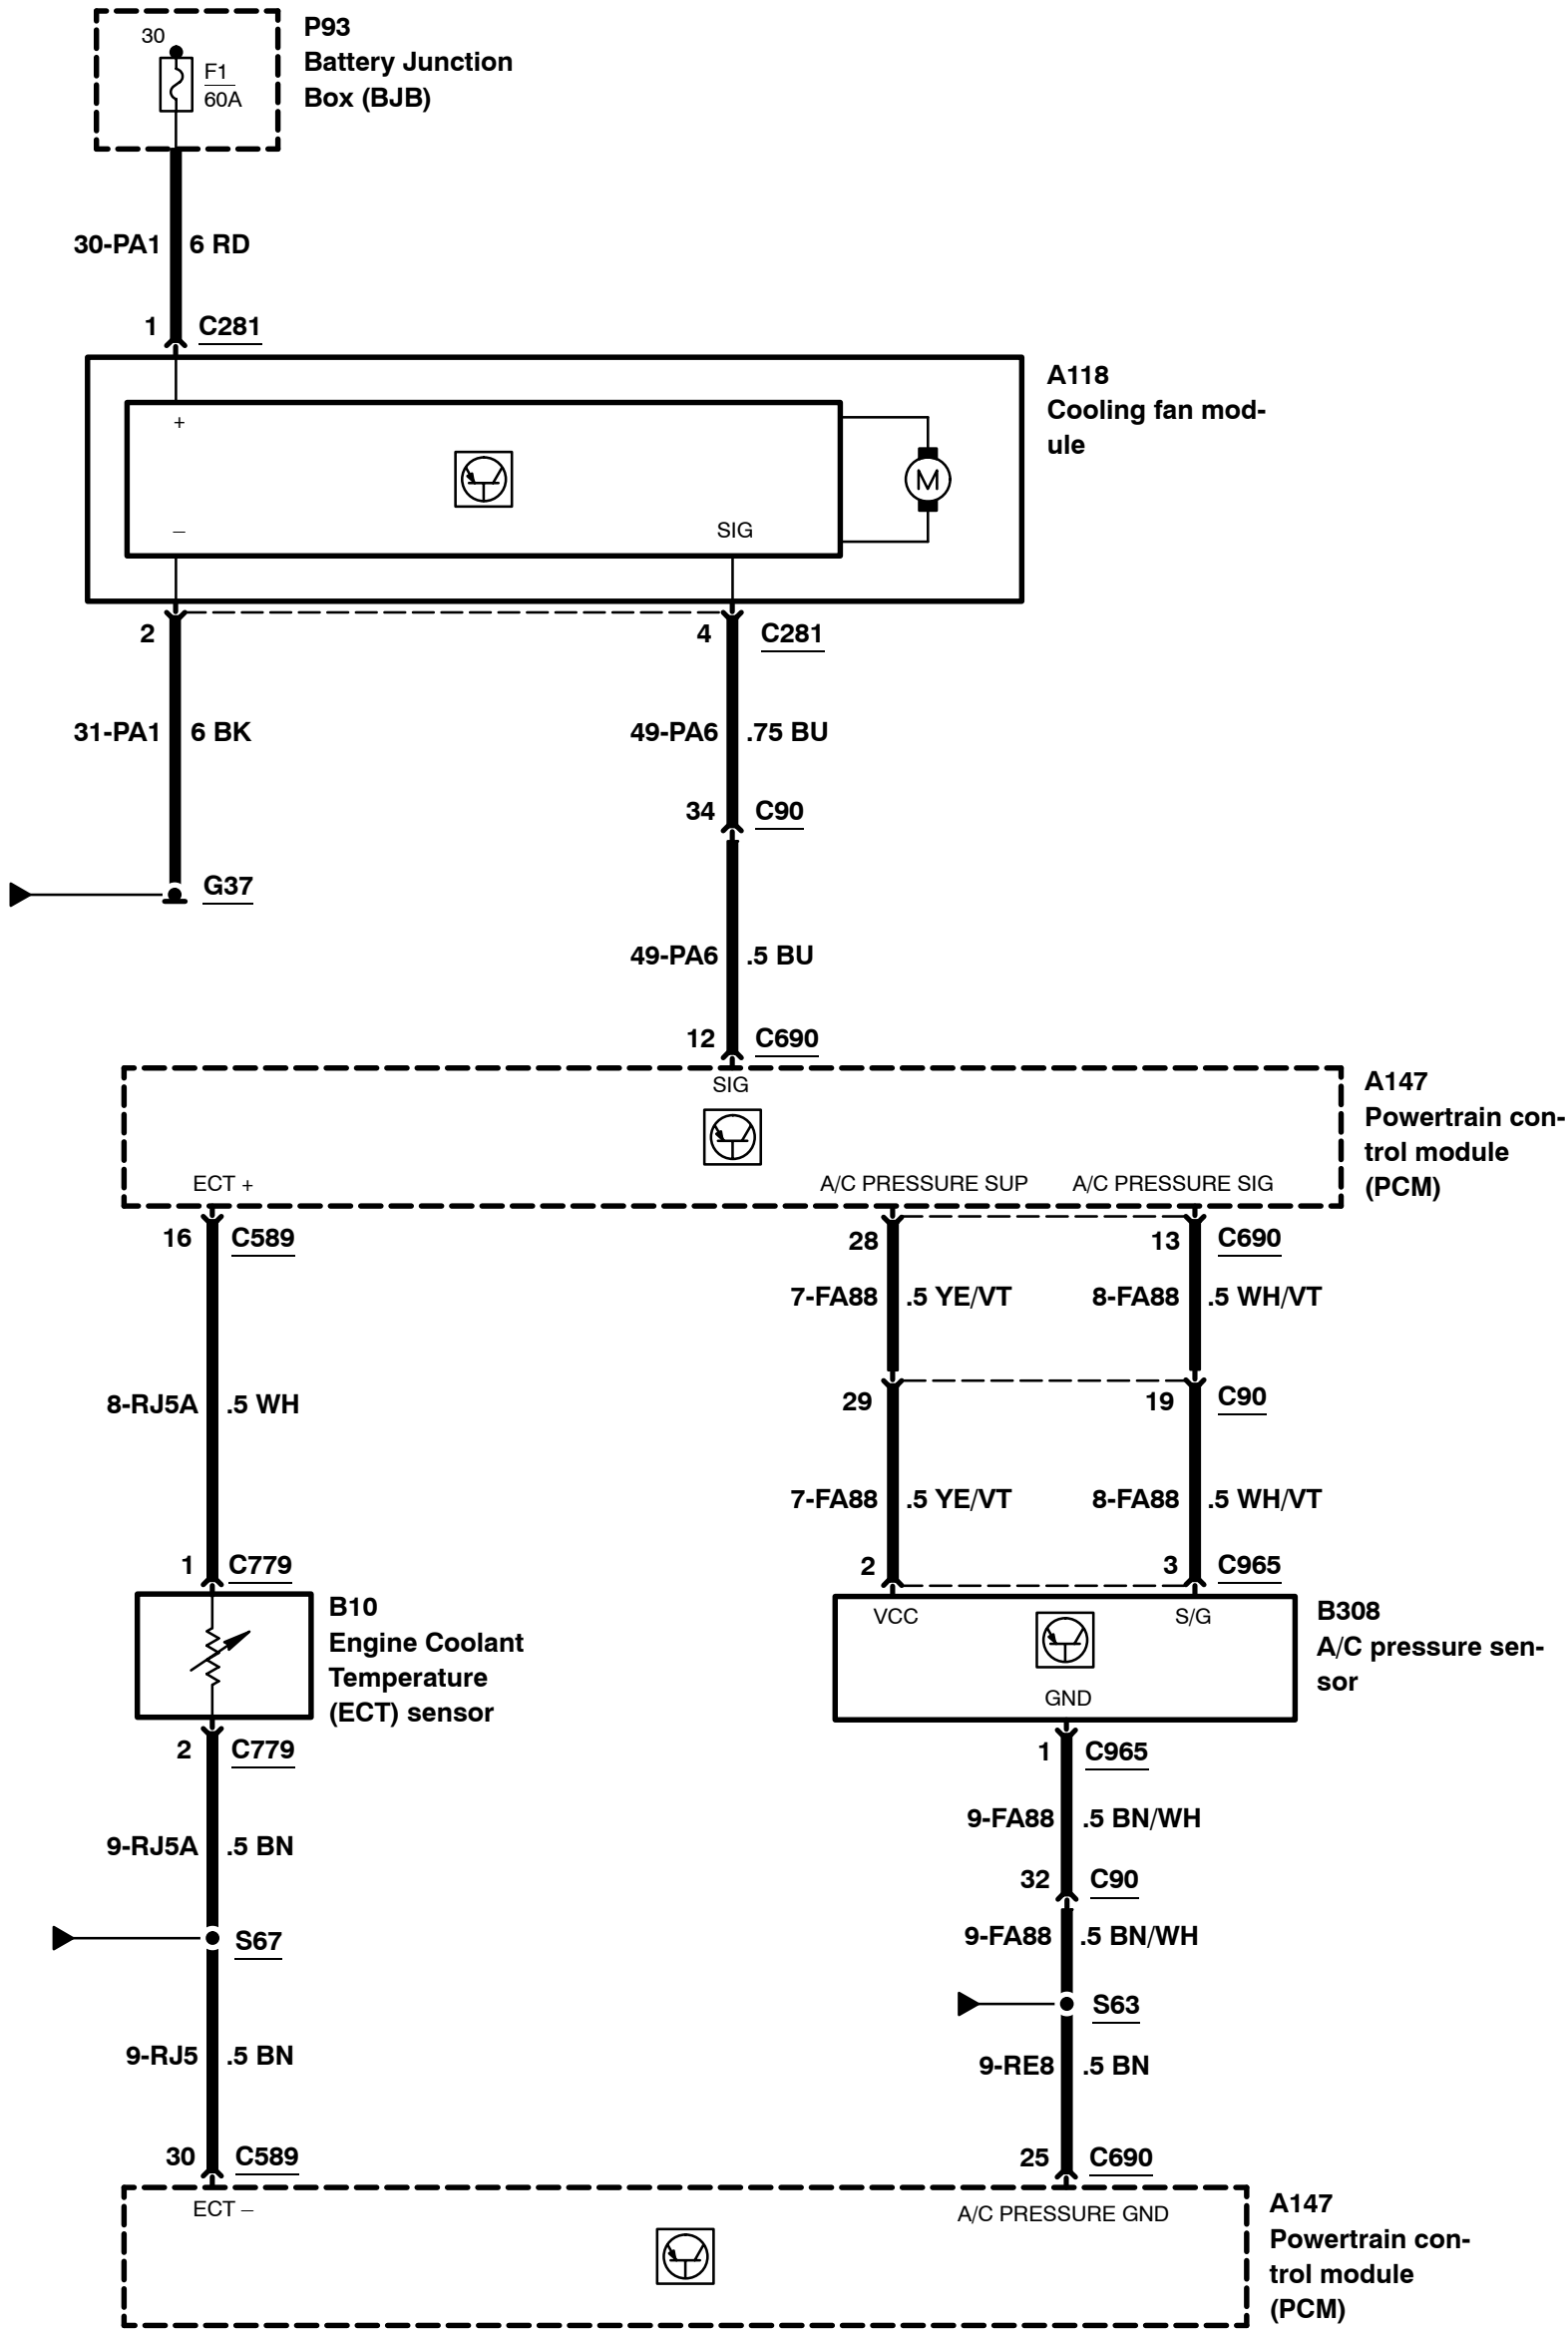


Engine Cooling – 1.8/2.0L Duratec–HE (MI4), as of model year 2009

02/2008  
303-03B-00-2  
2008.25  
Focus

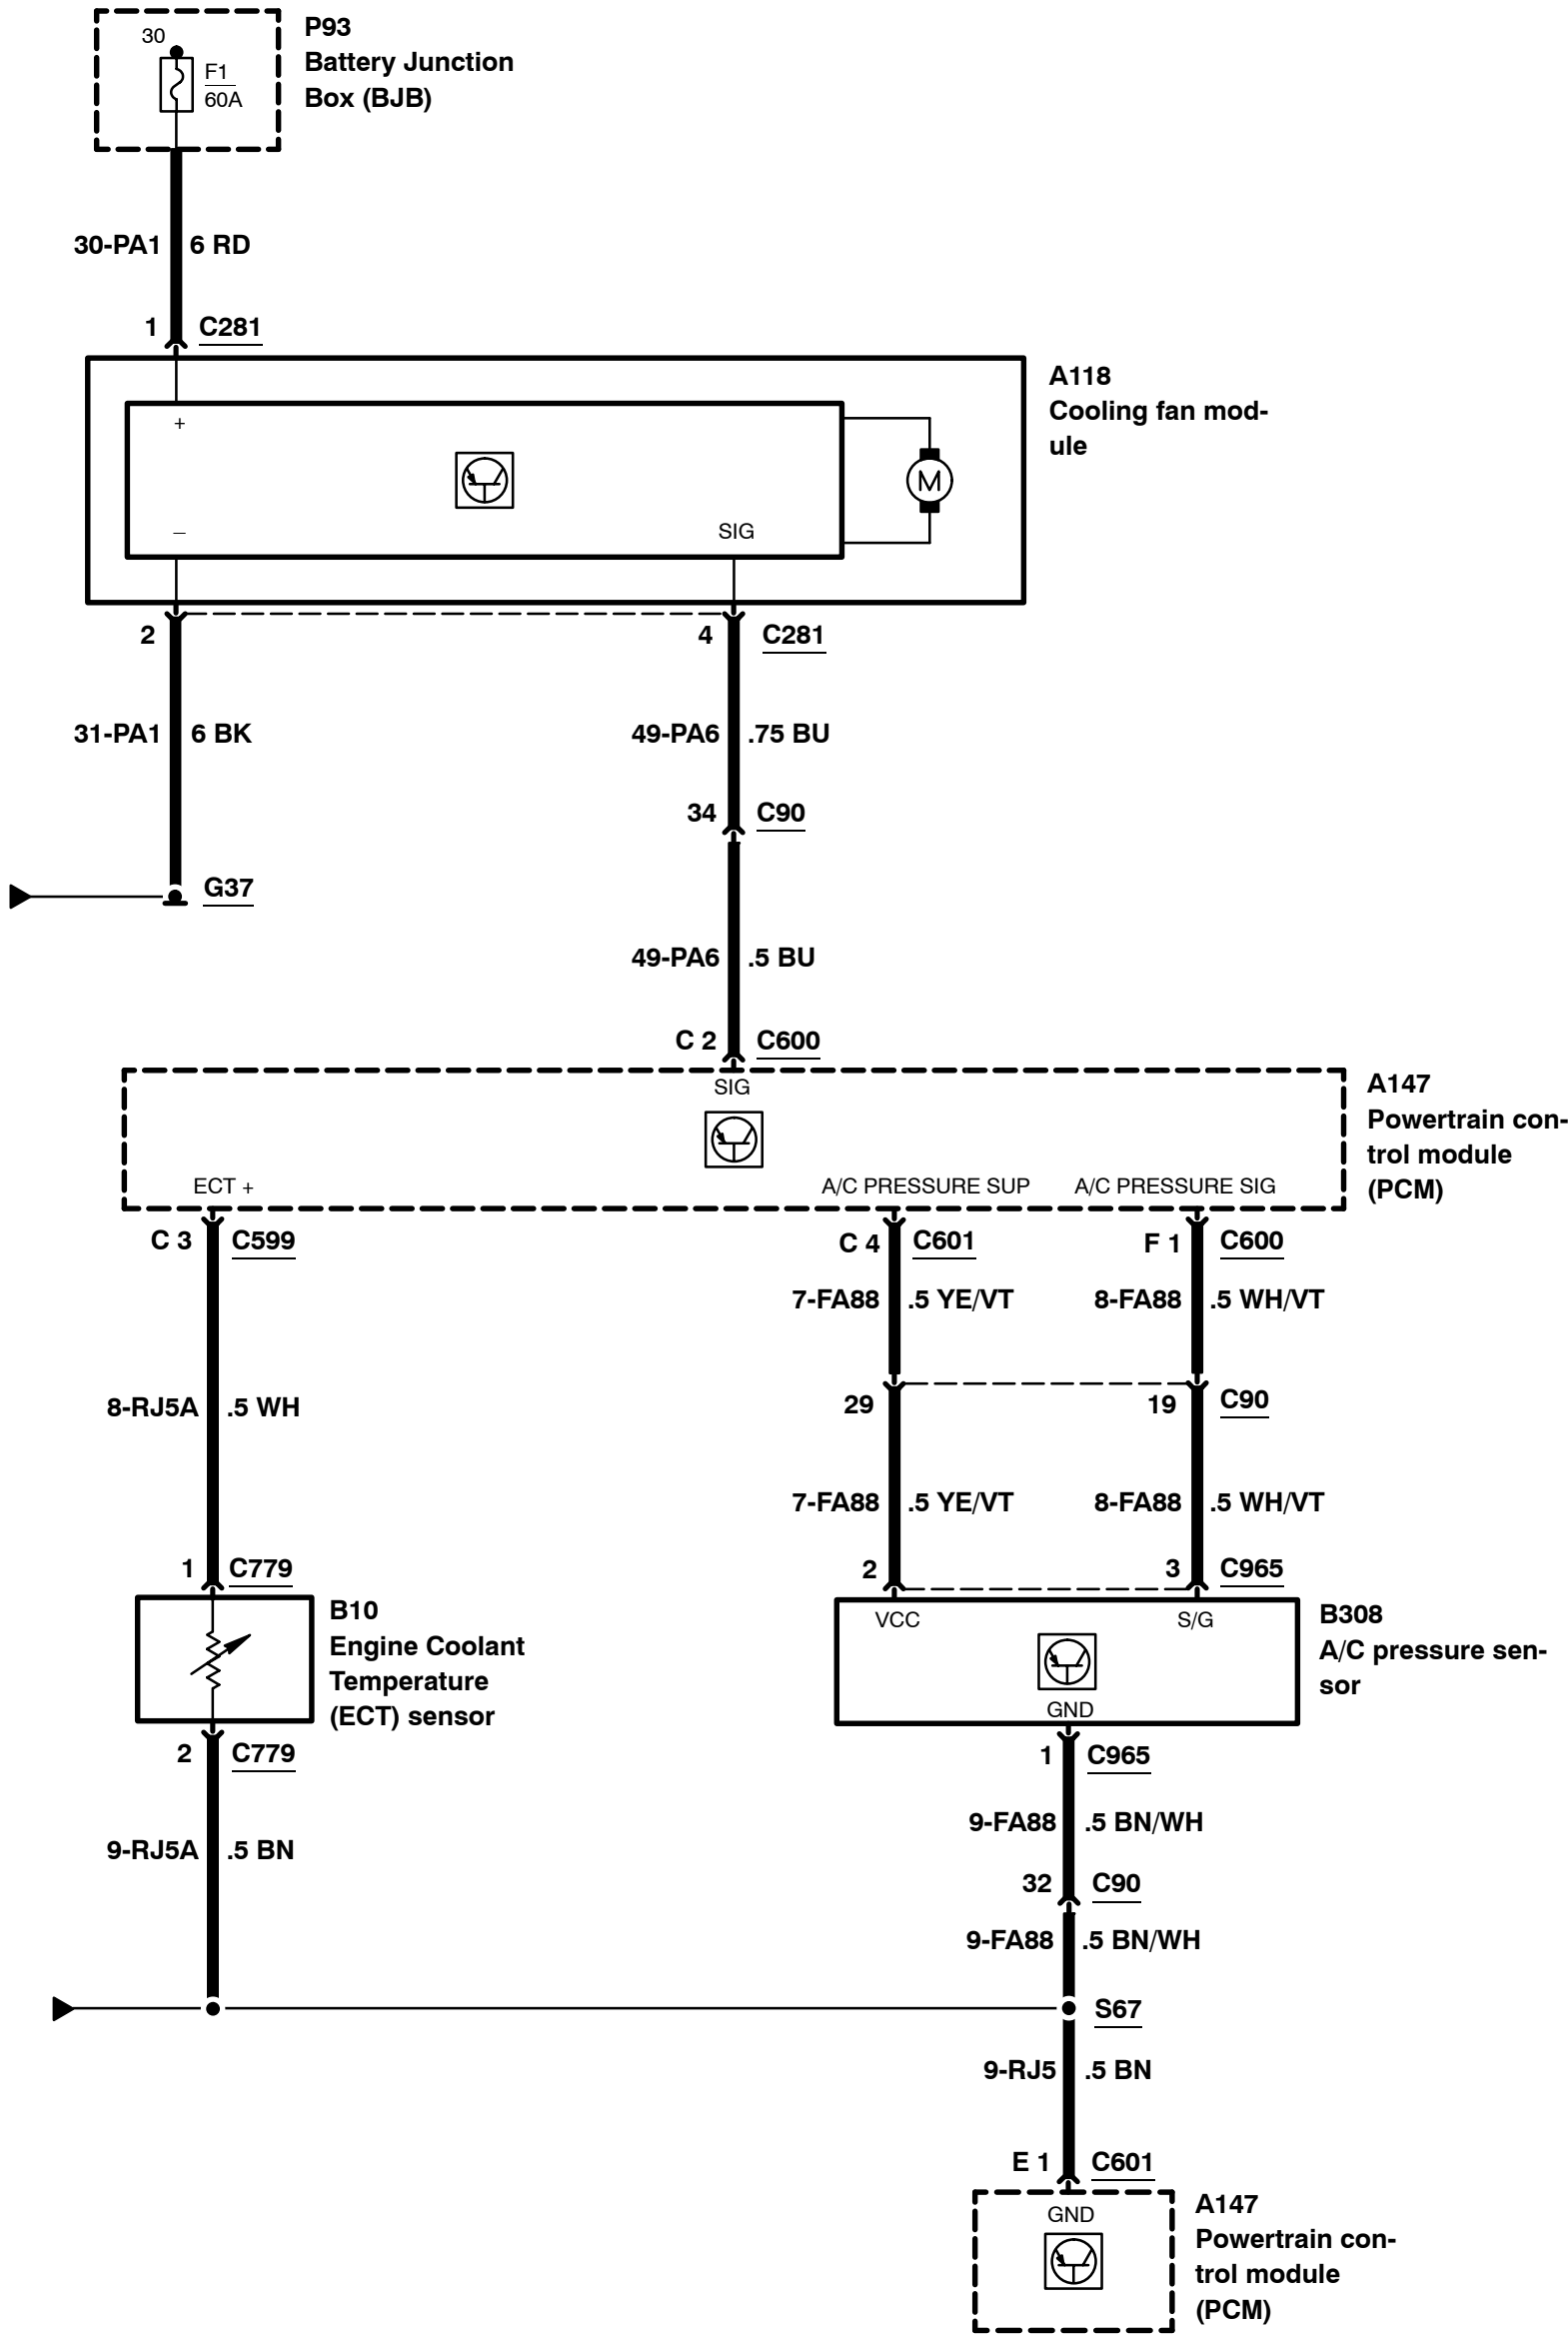


Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6)

02/2008  
303-03C-00-1  
2008.25  
Focus

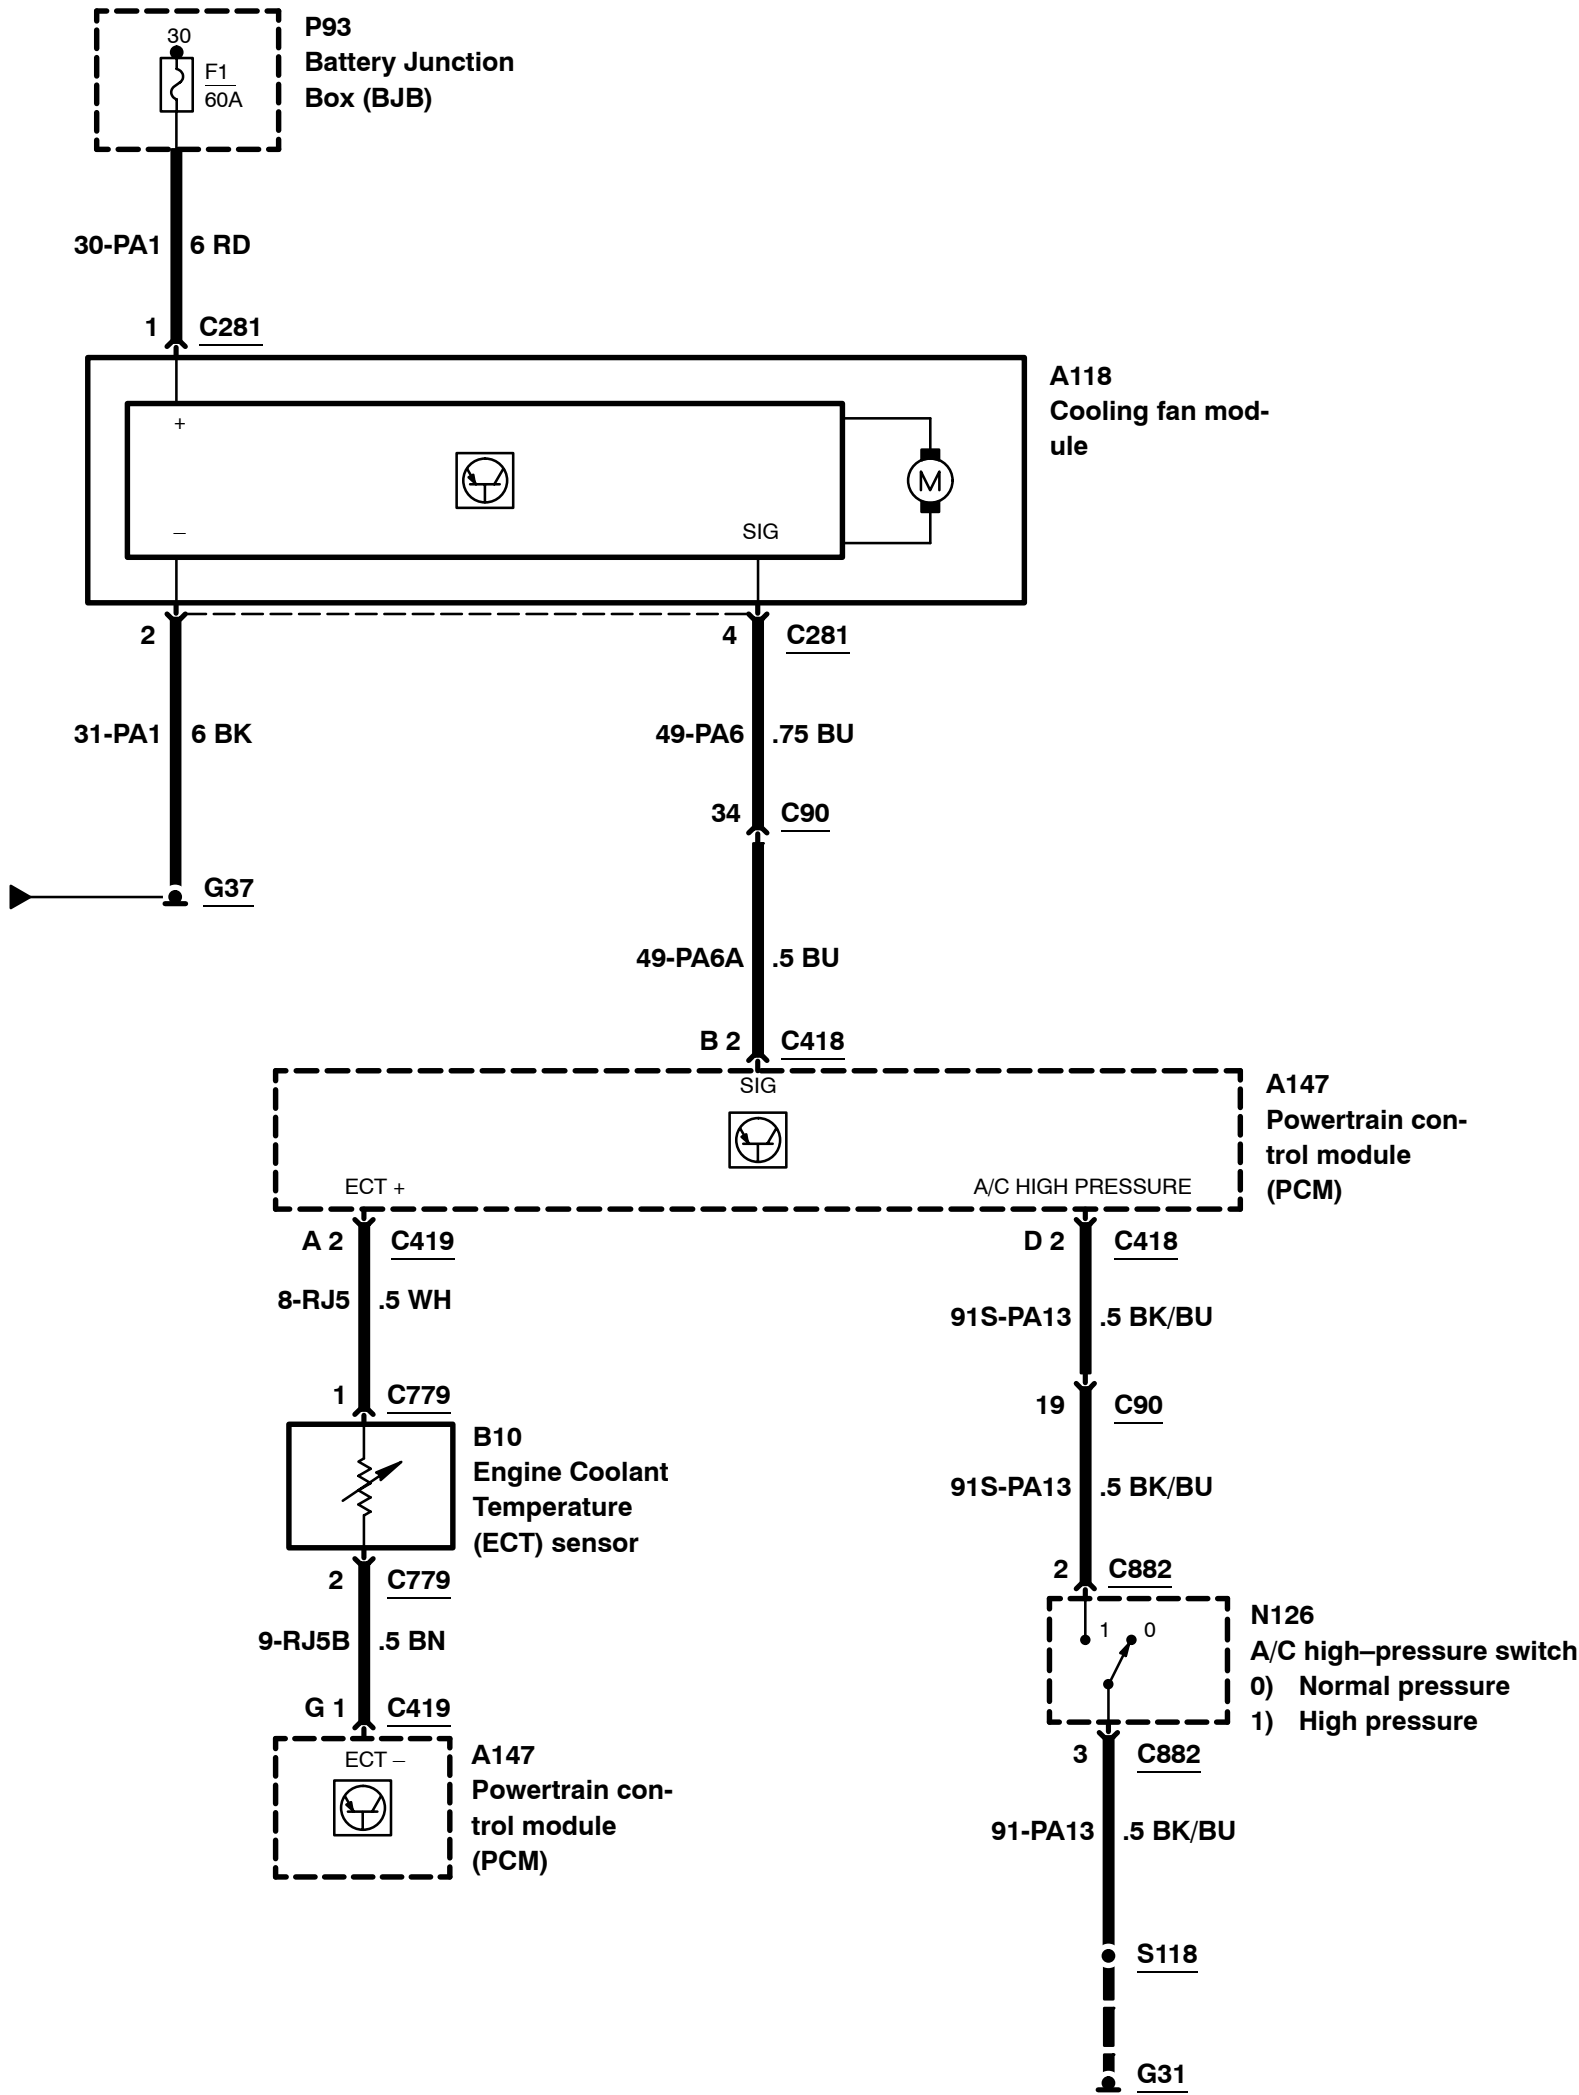


Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel, manual transmission (MPS6)

02/2008  
303-03C-00-2  
2008.25  
Focus

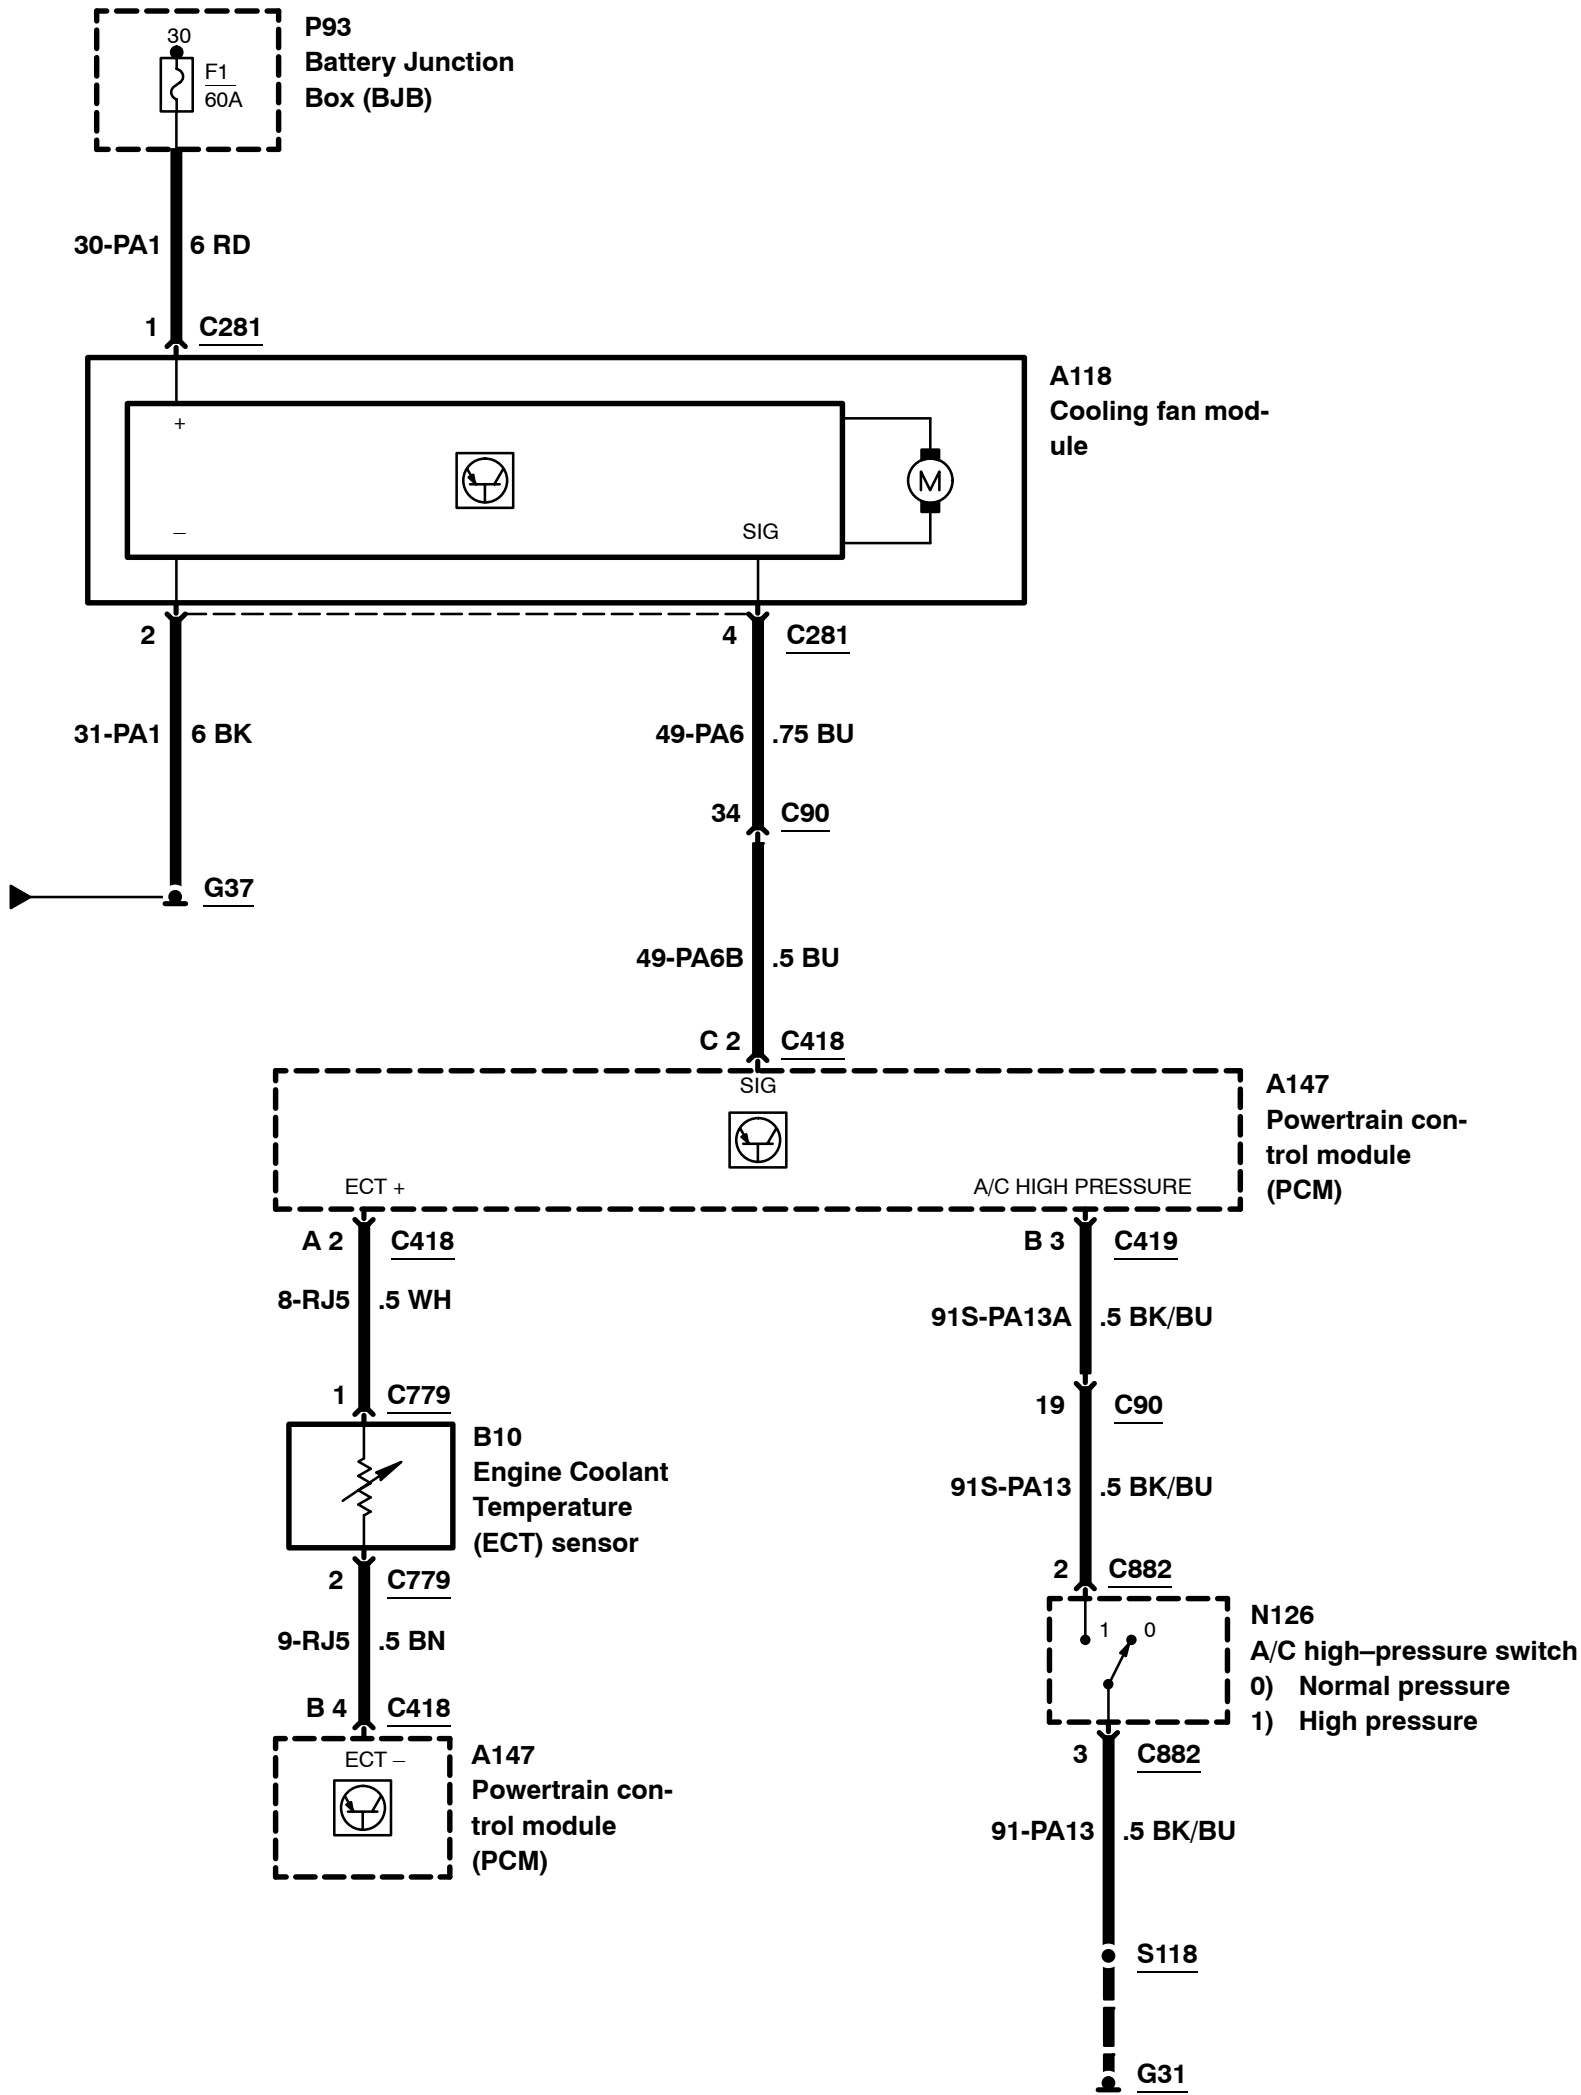

# Fuel Charging and Controls – 1.6L (Z6)


02/2008  
303-04A-00-1  
2008.25  
Focus

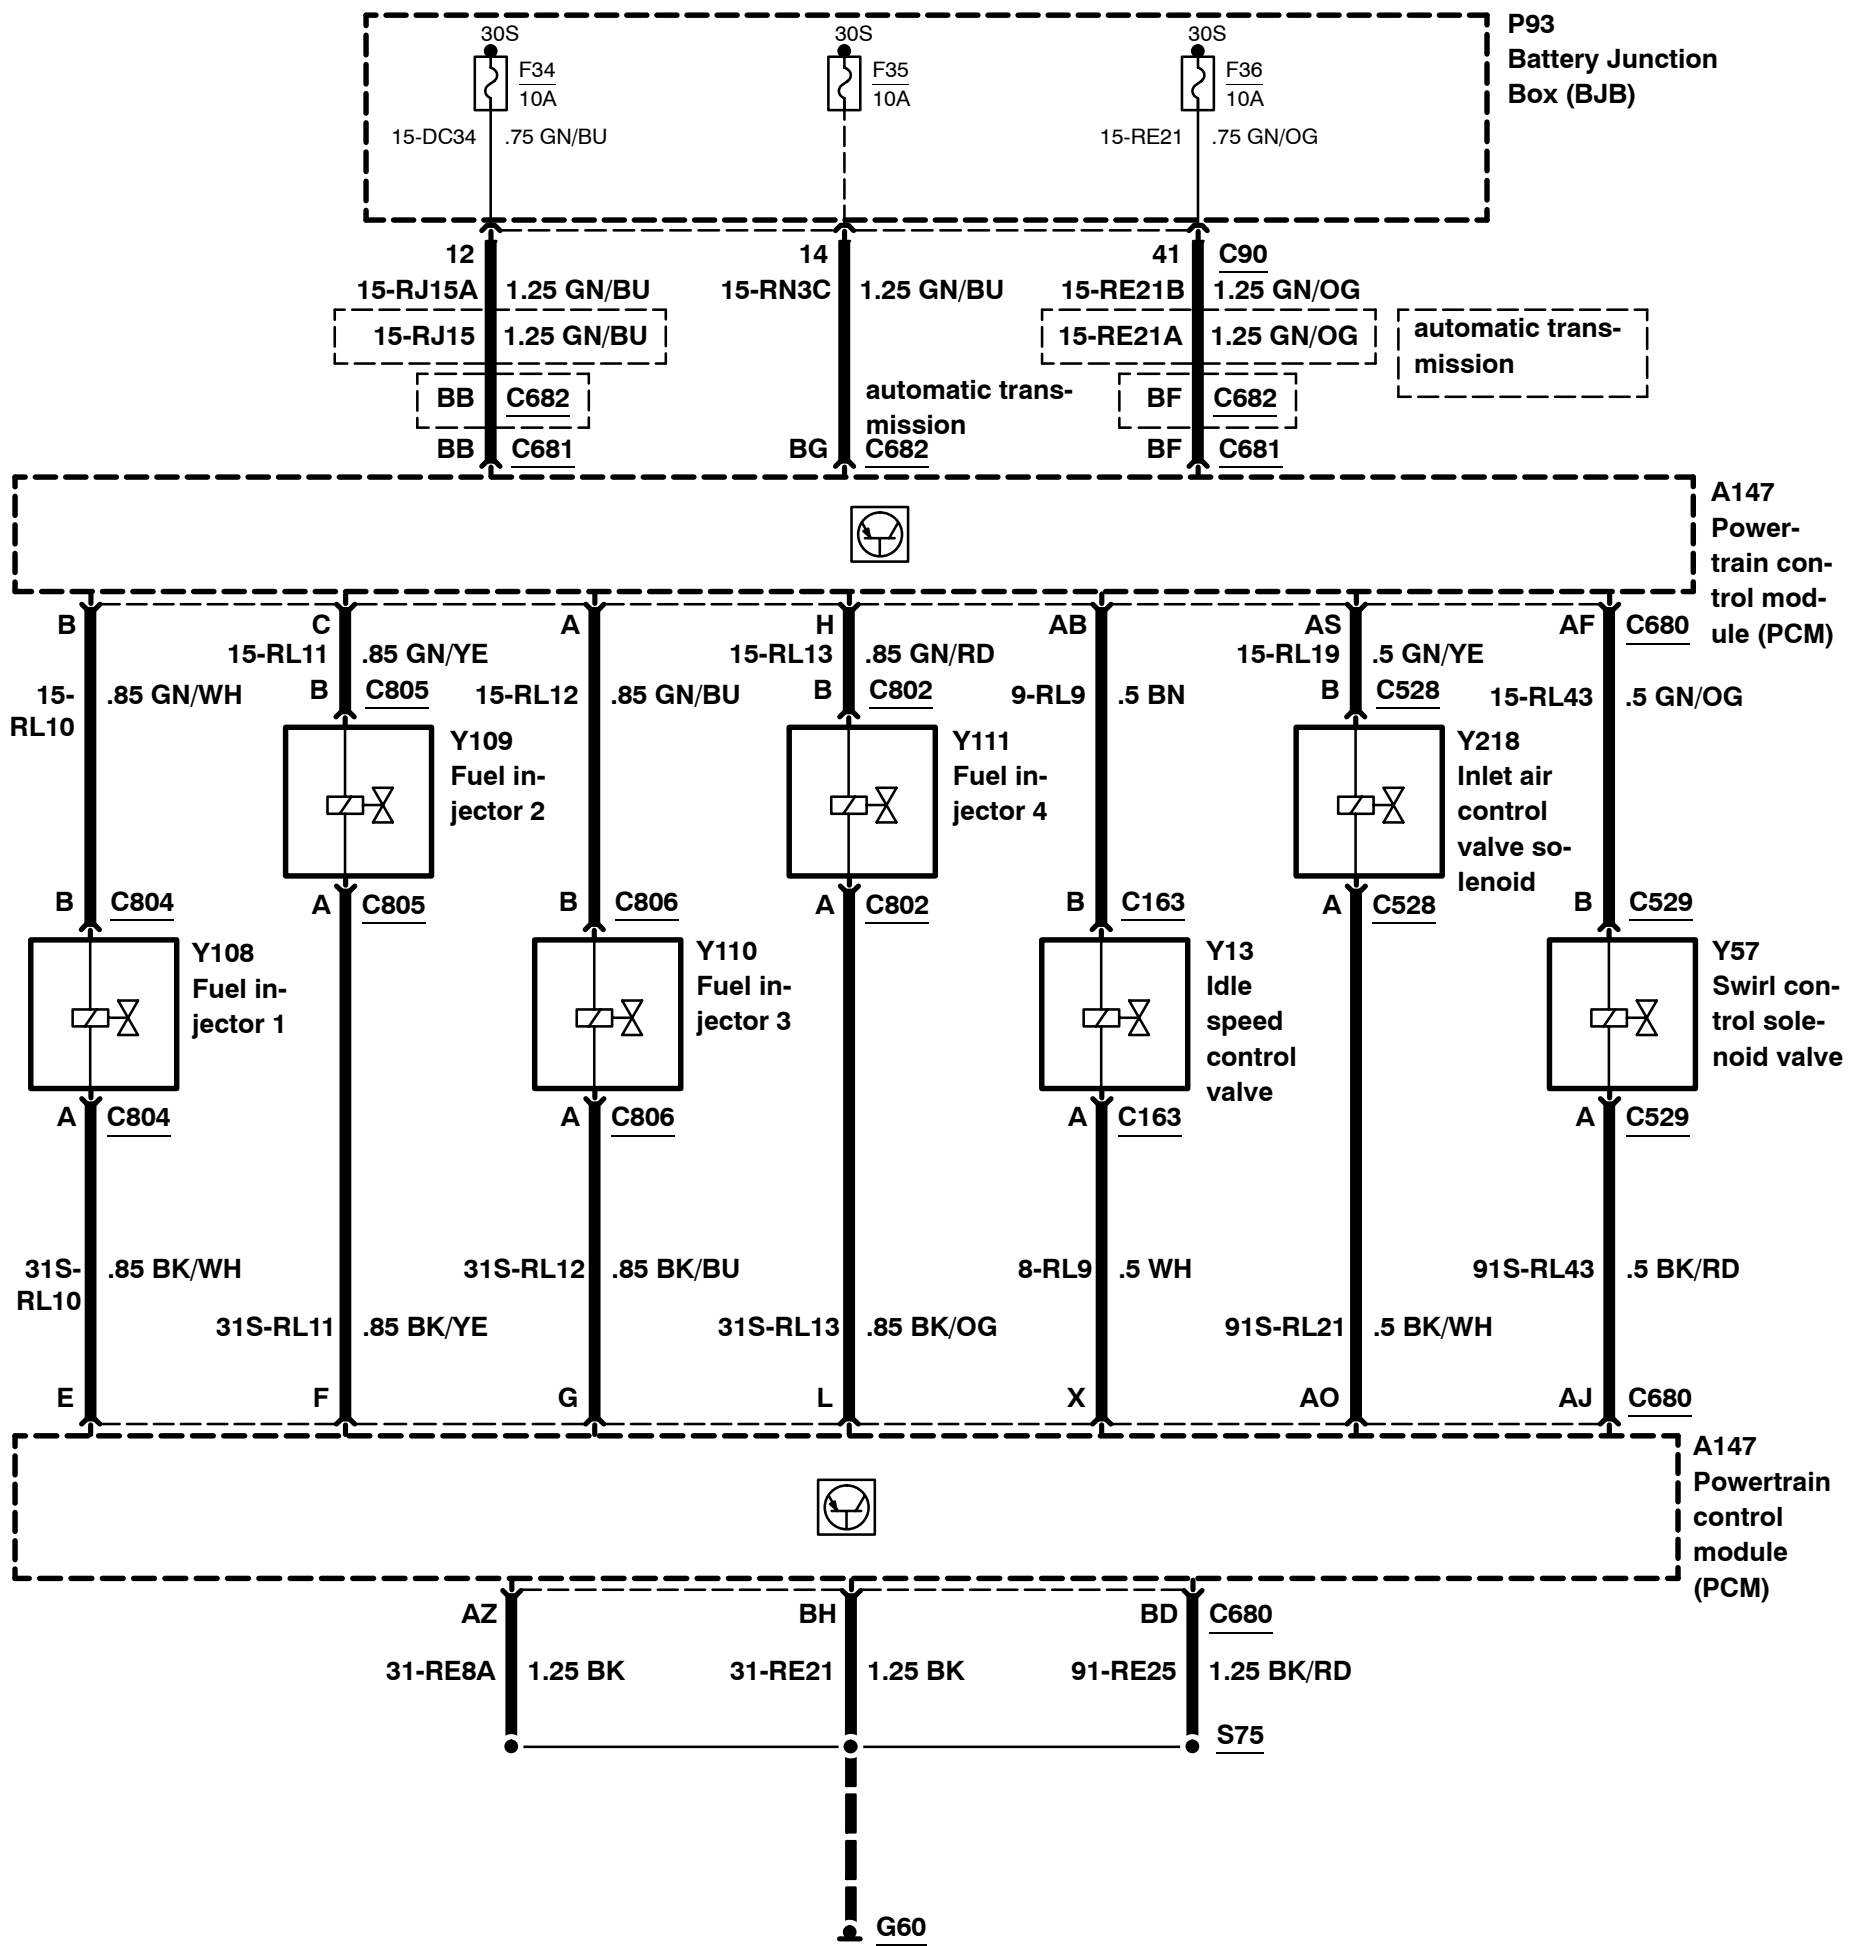




# Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4), before model year 2009

02/2008  
303-04B-00-1  
2008.25  
Focus

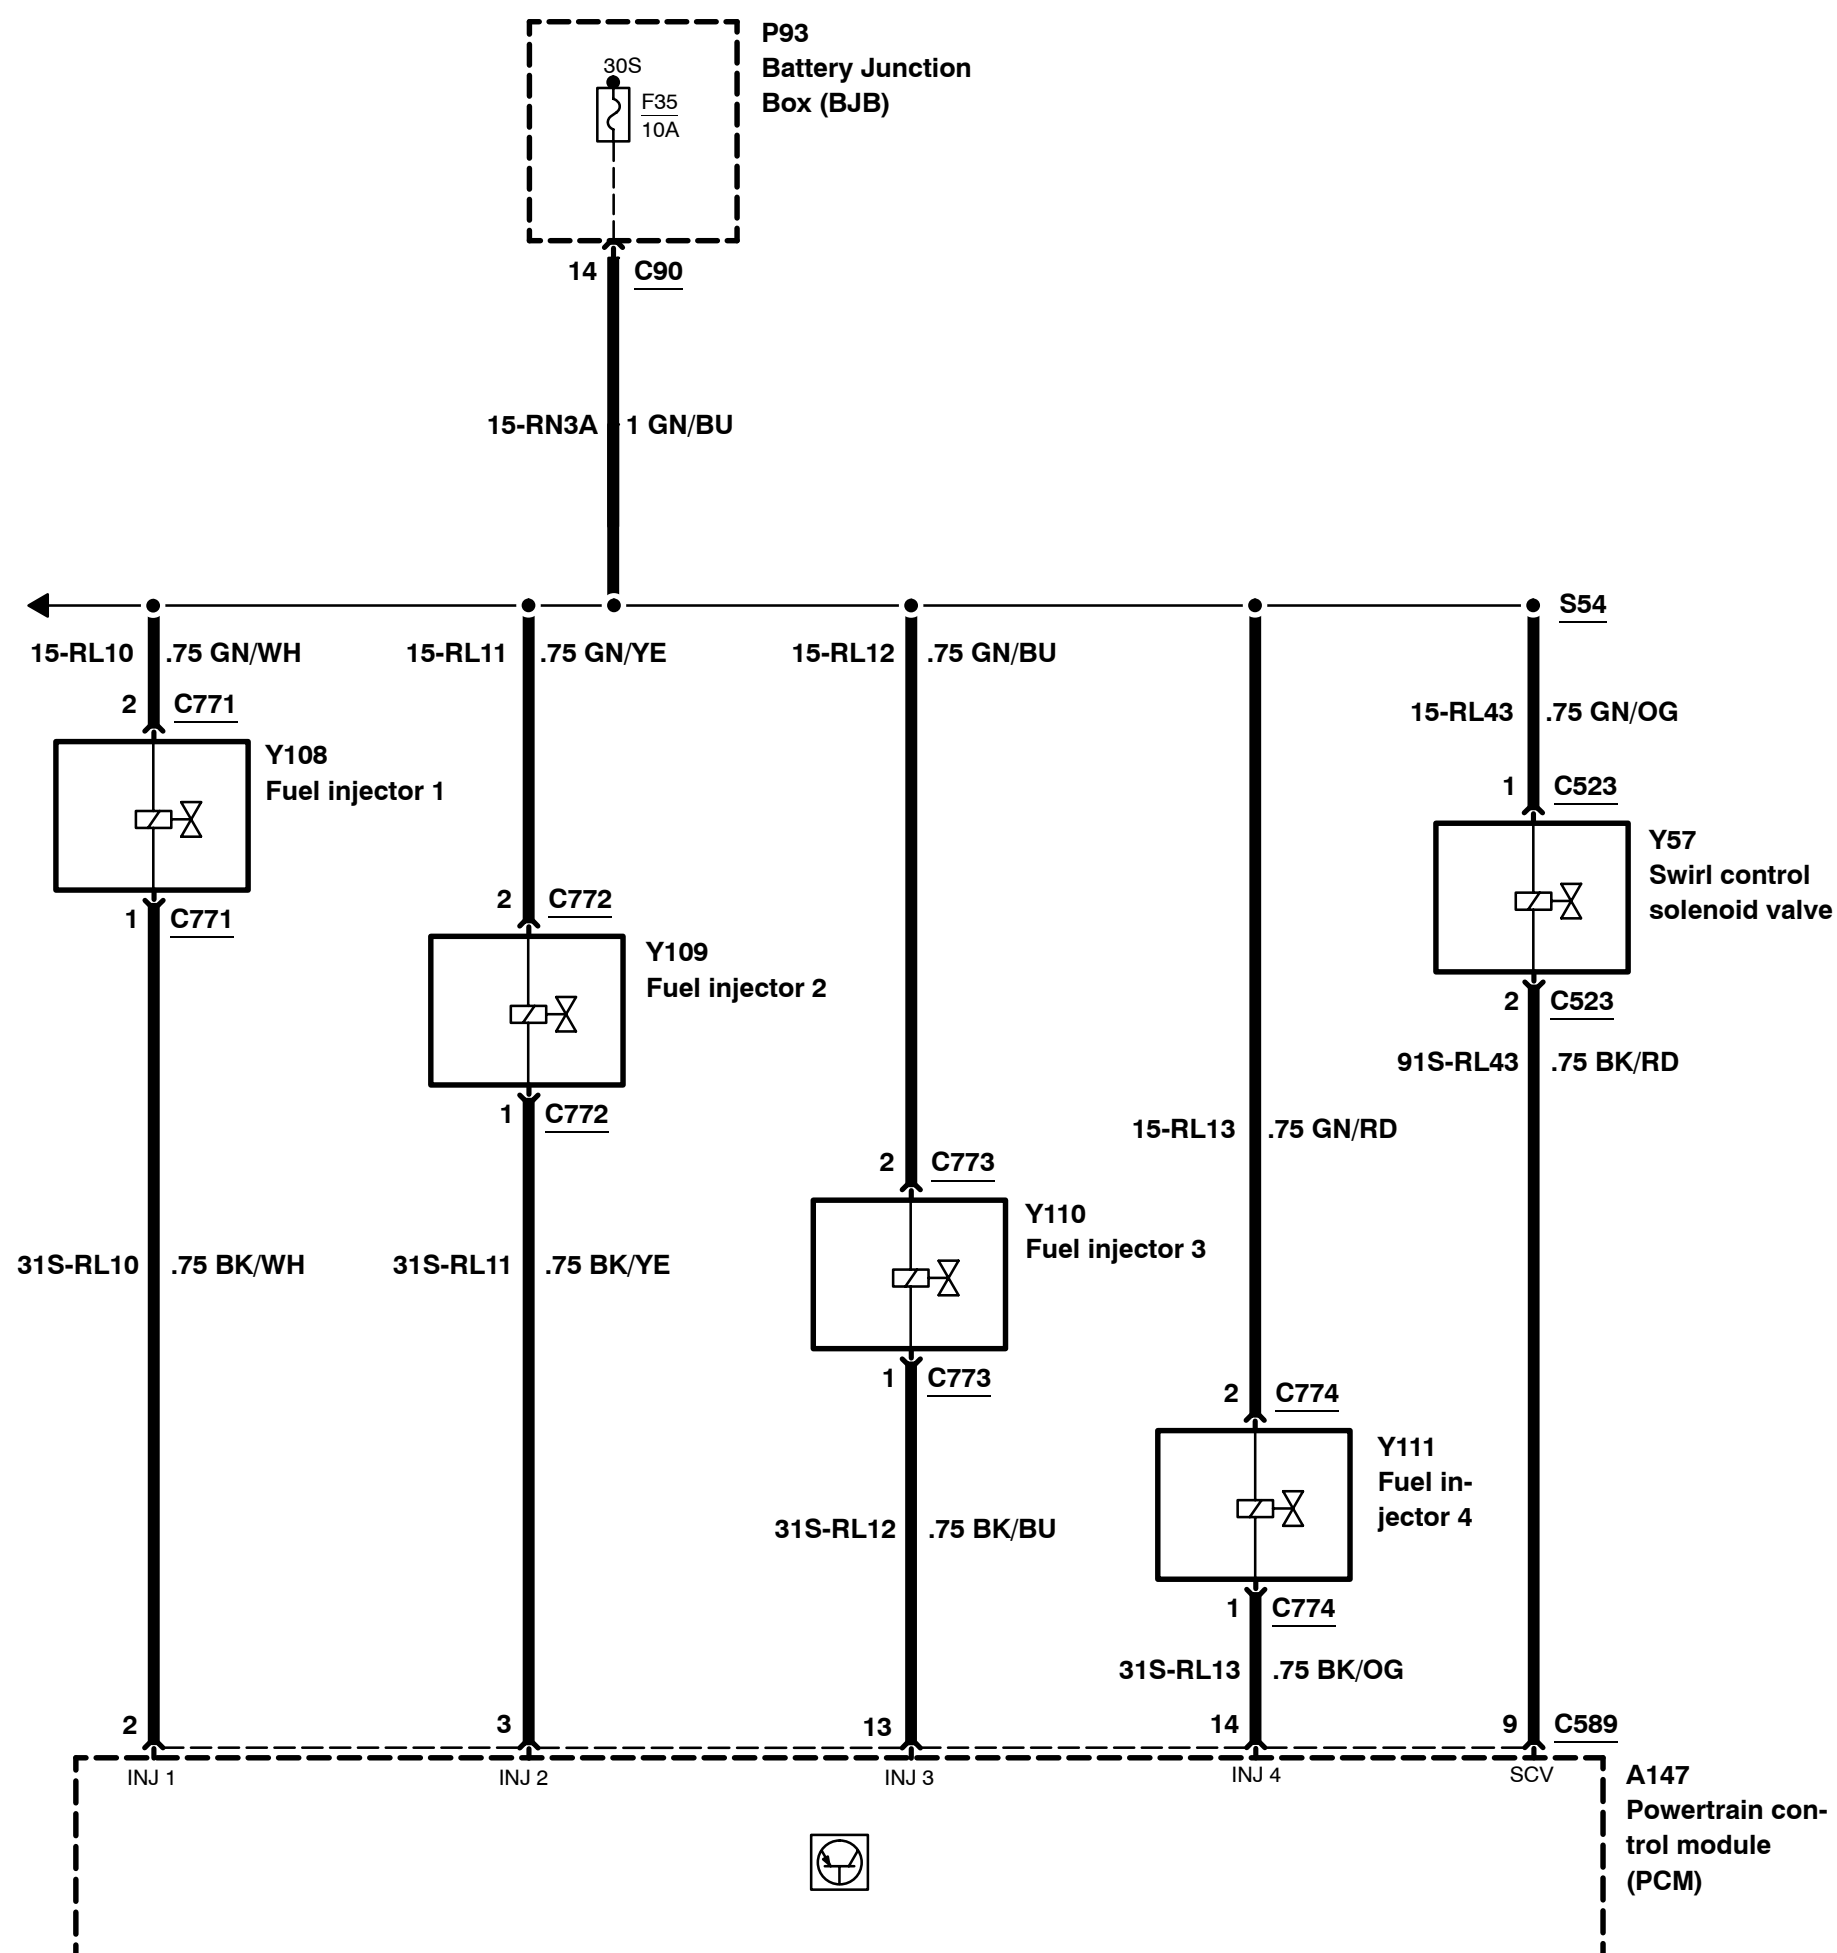


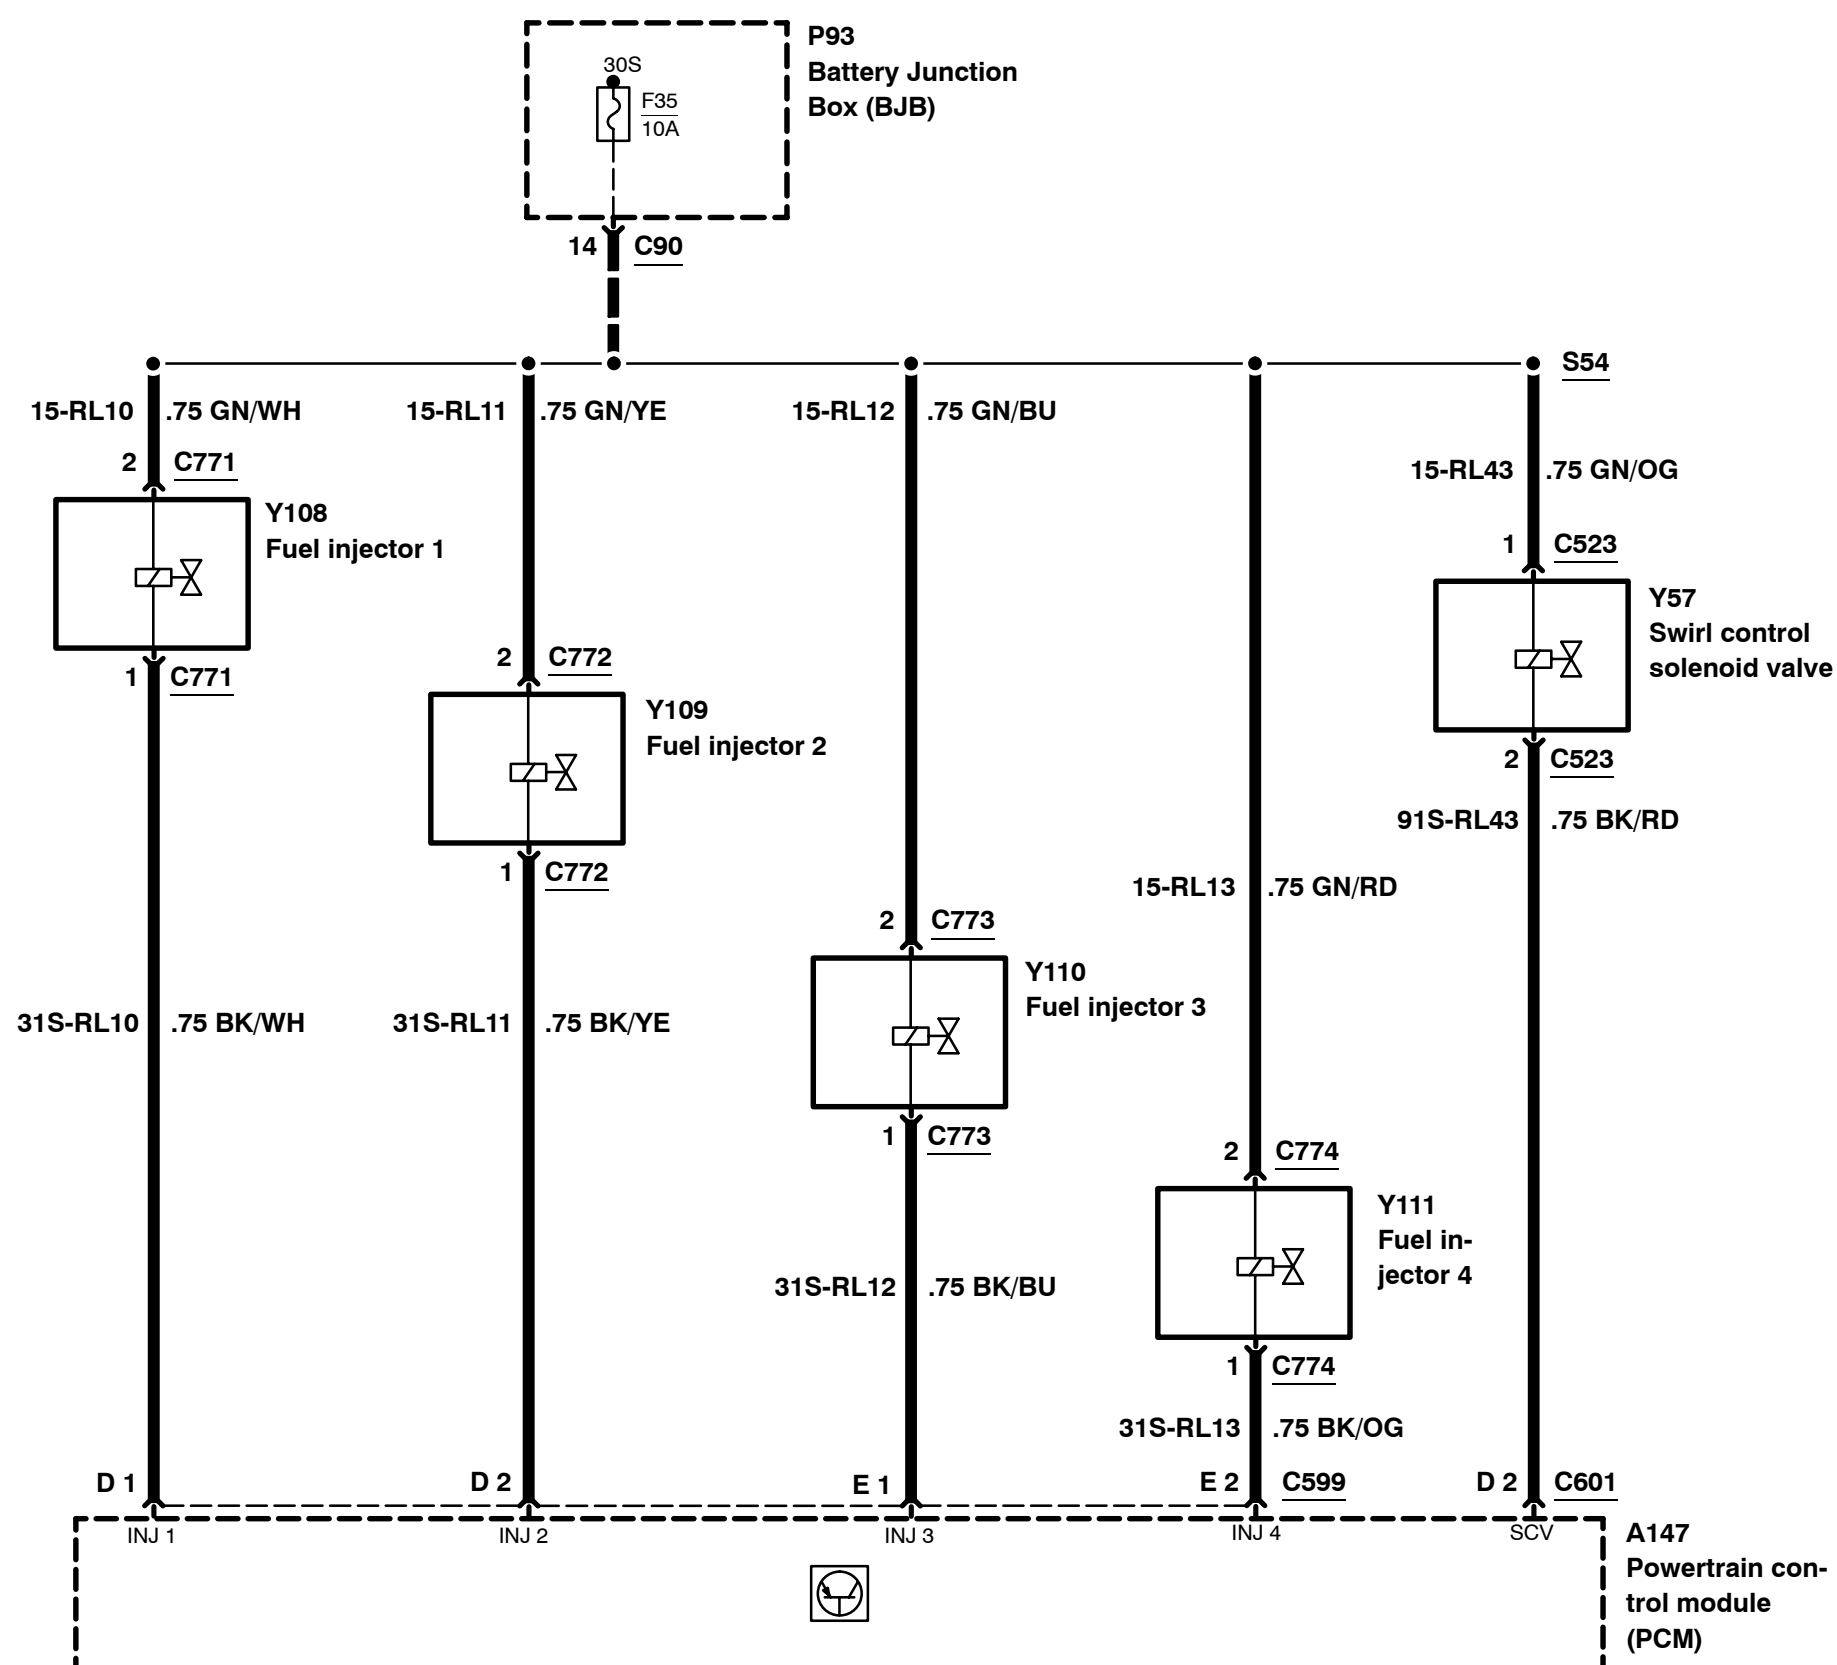




# Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6)

02/2008  
303-04C-00-1  
2008.25  
Focus

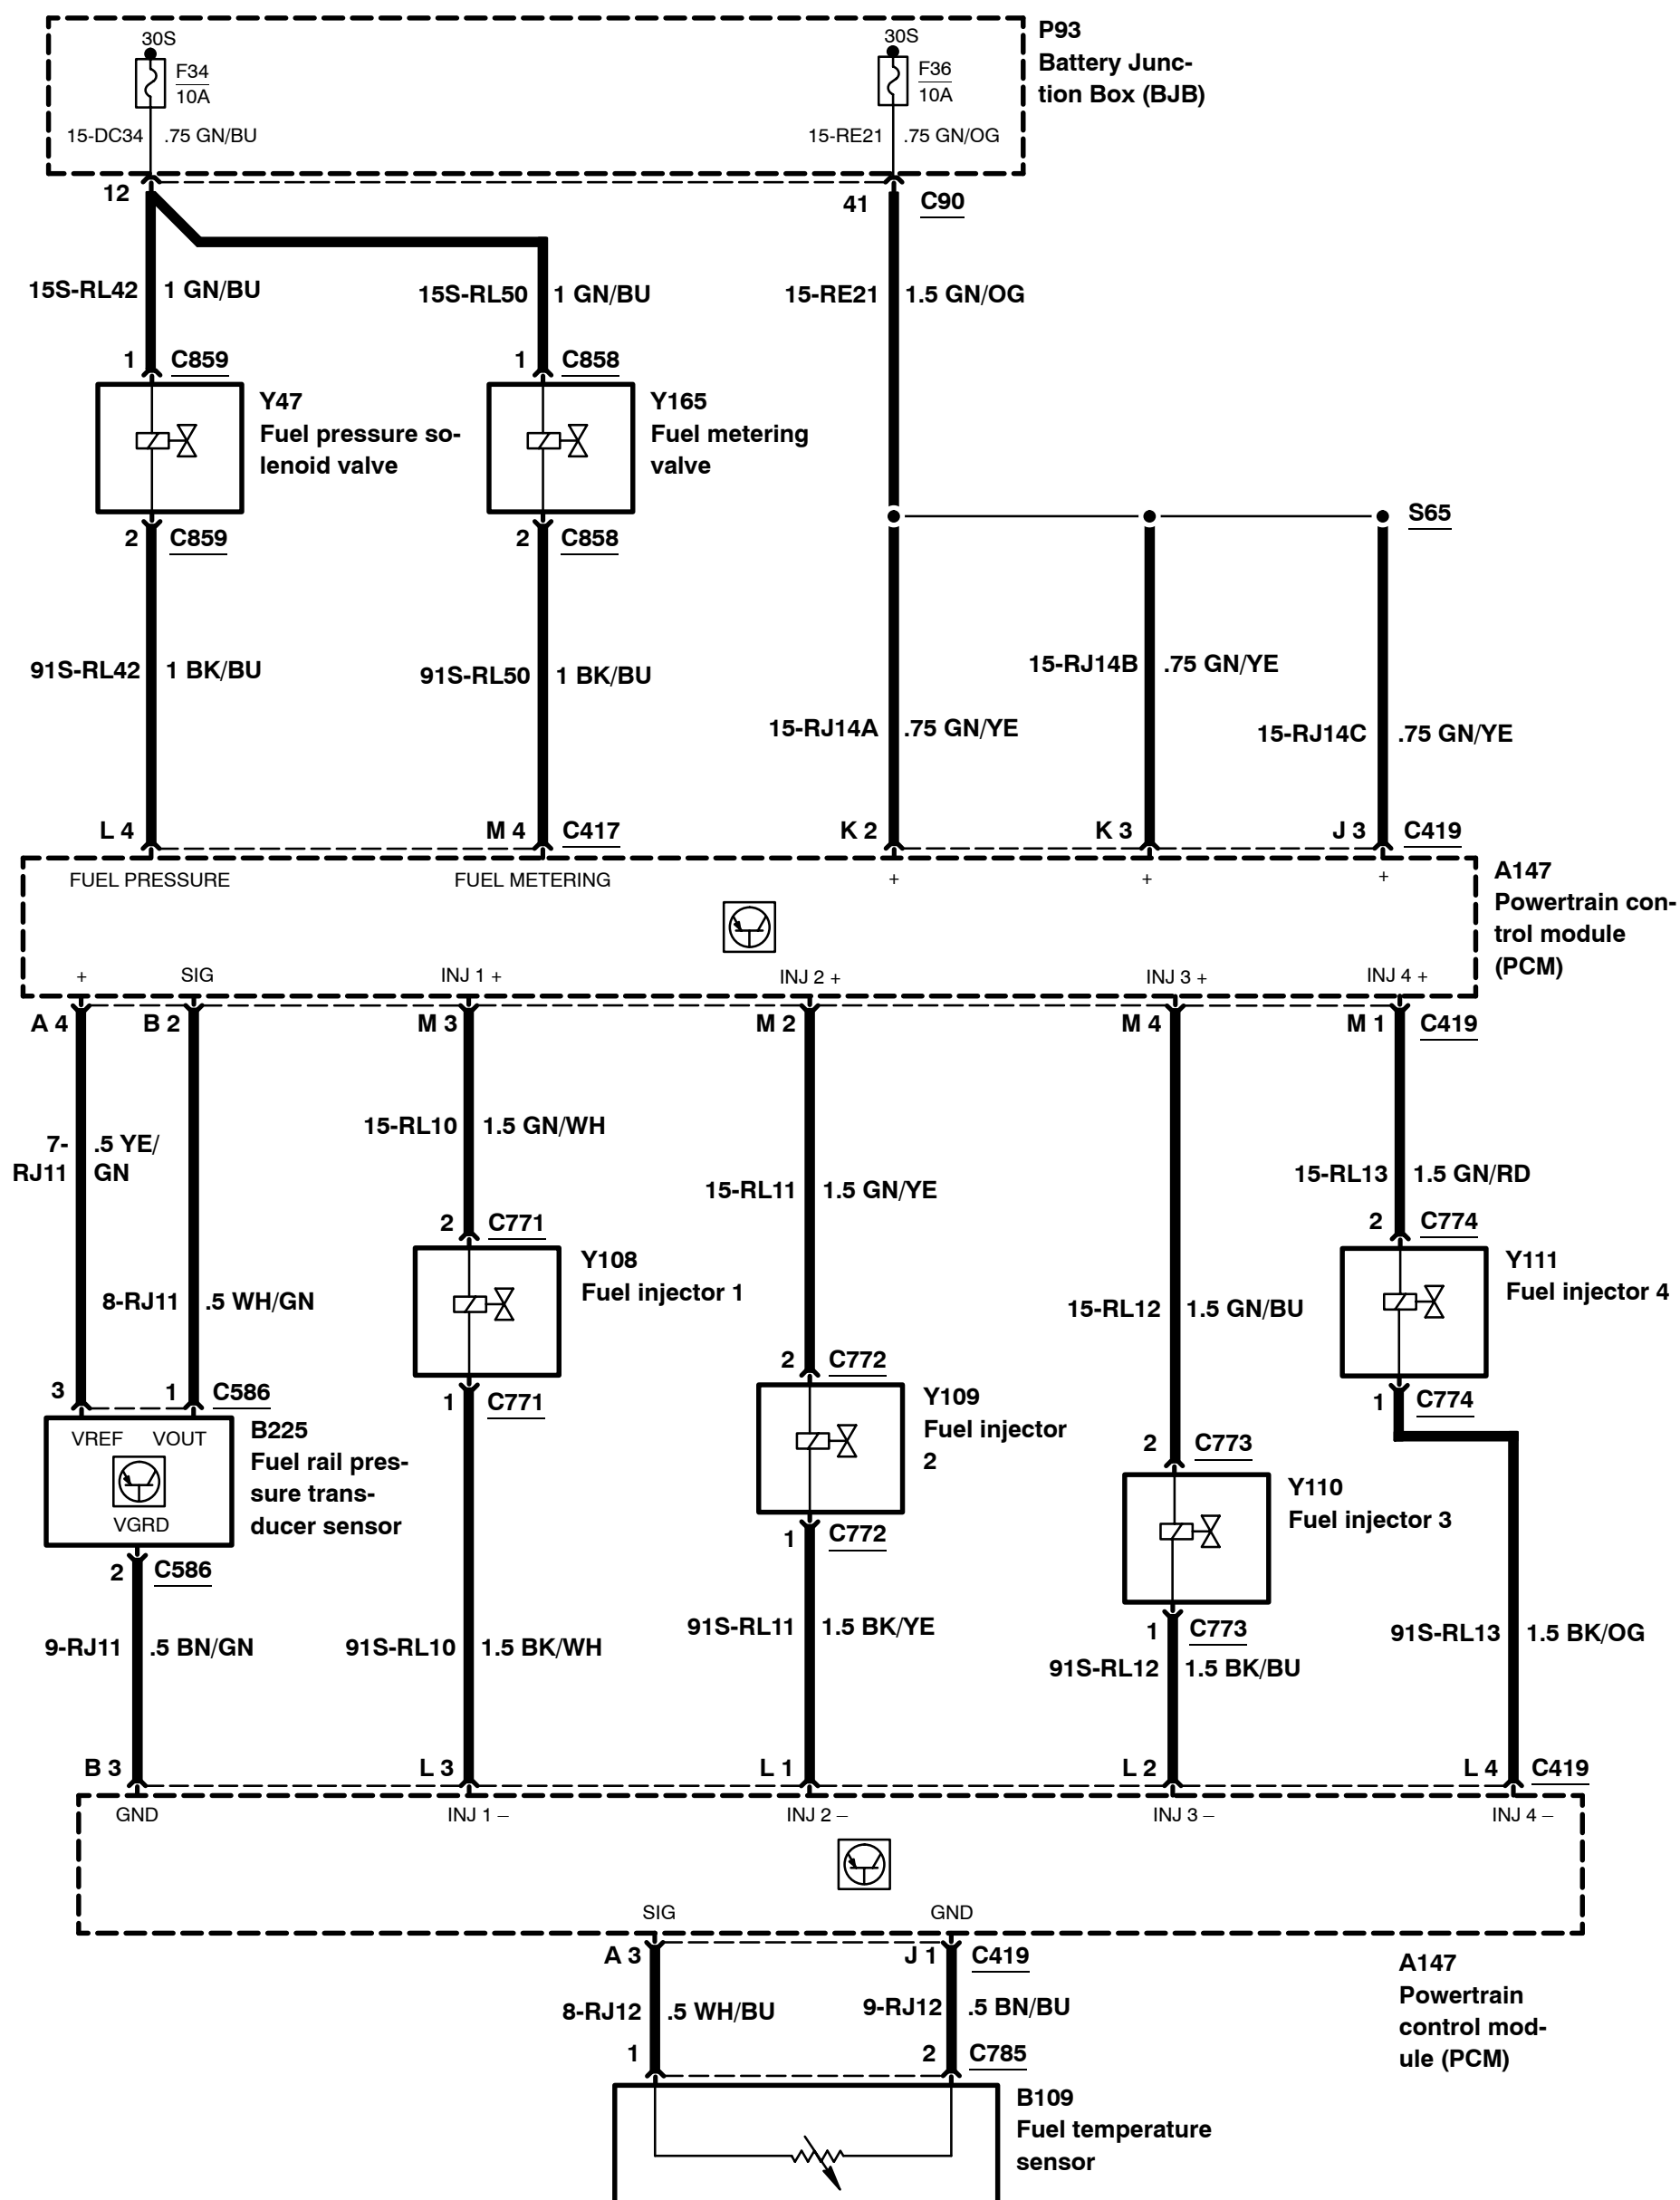


**Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6)**

02/2008  
303-04C-00-2  
2008.25  
Focus

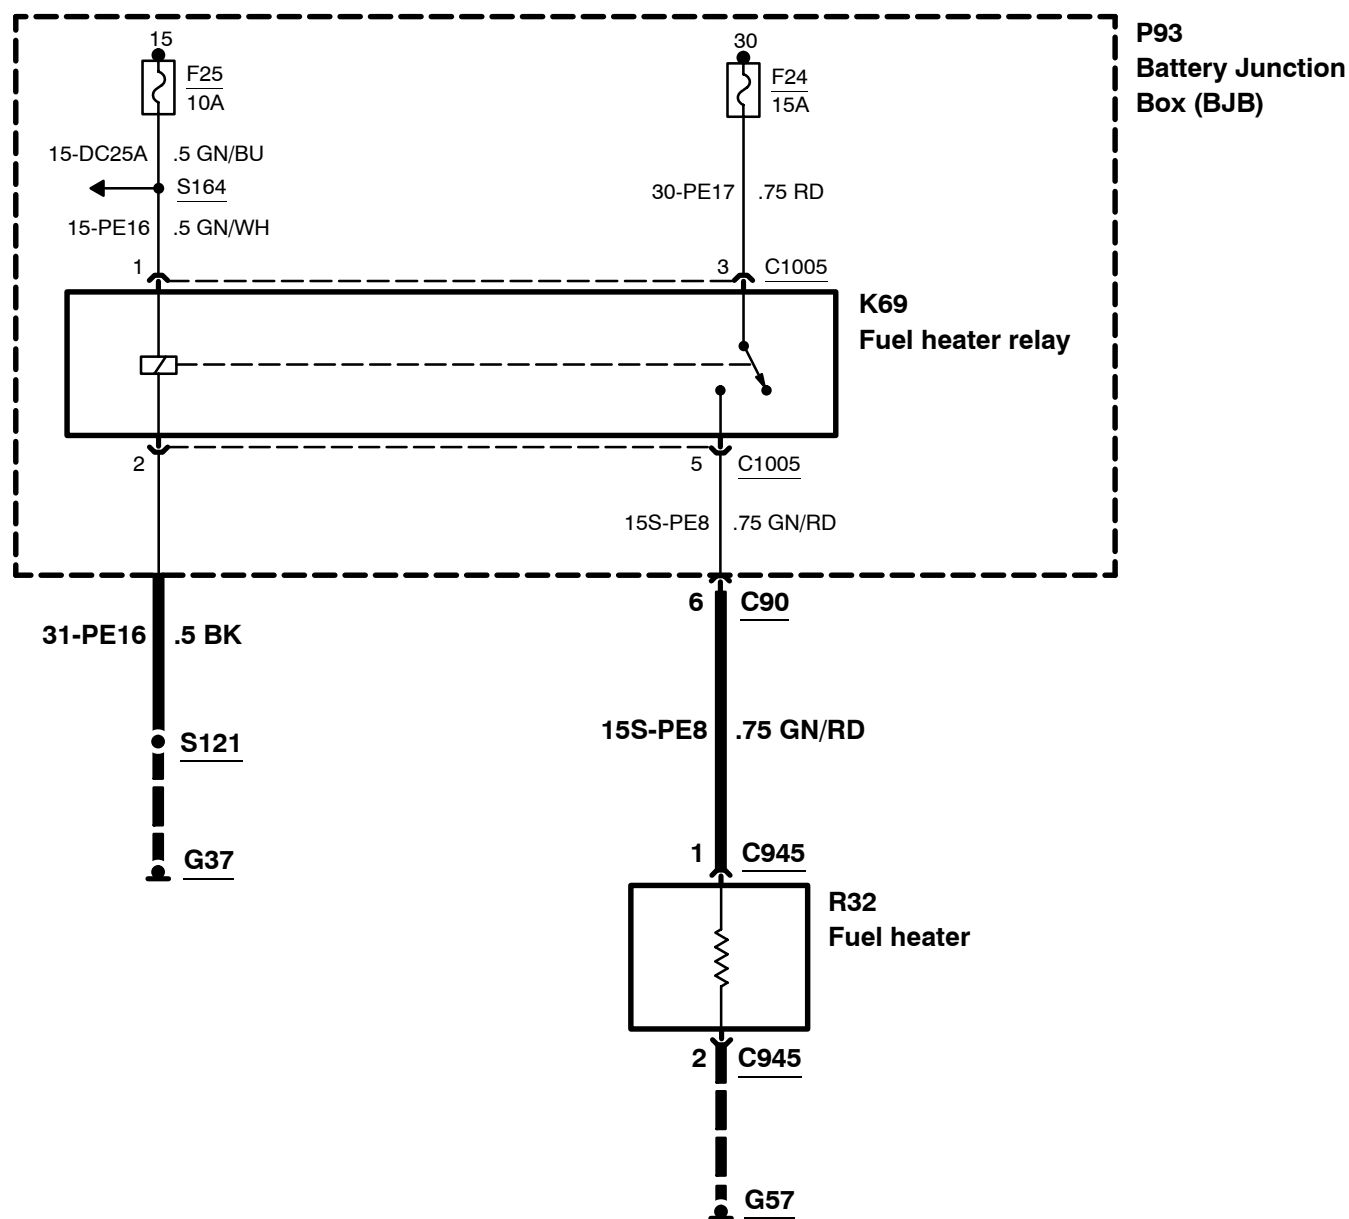


# Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel, manual transmission (MPS6)

02/2008  
303-04C-00-3  
2008.25  
Focus

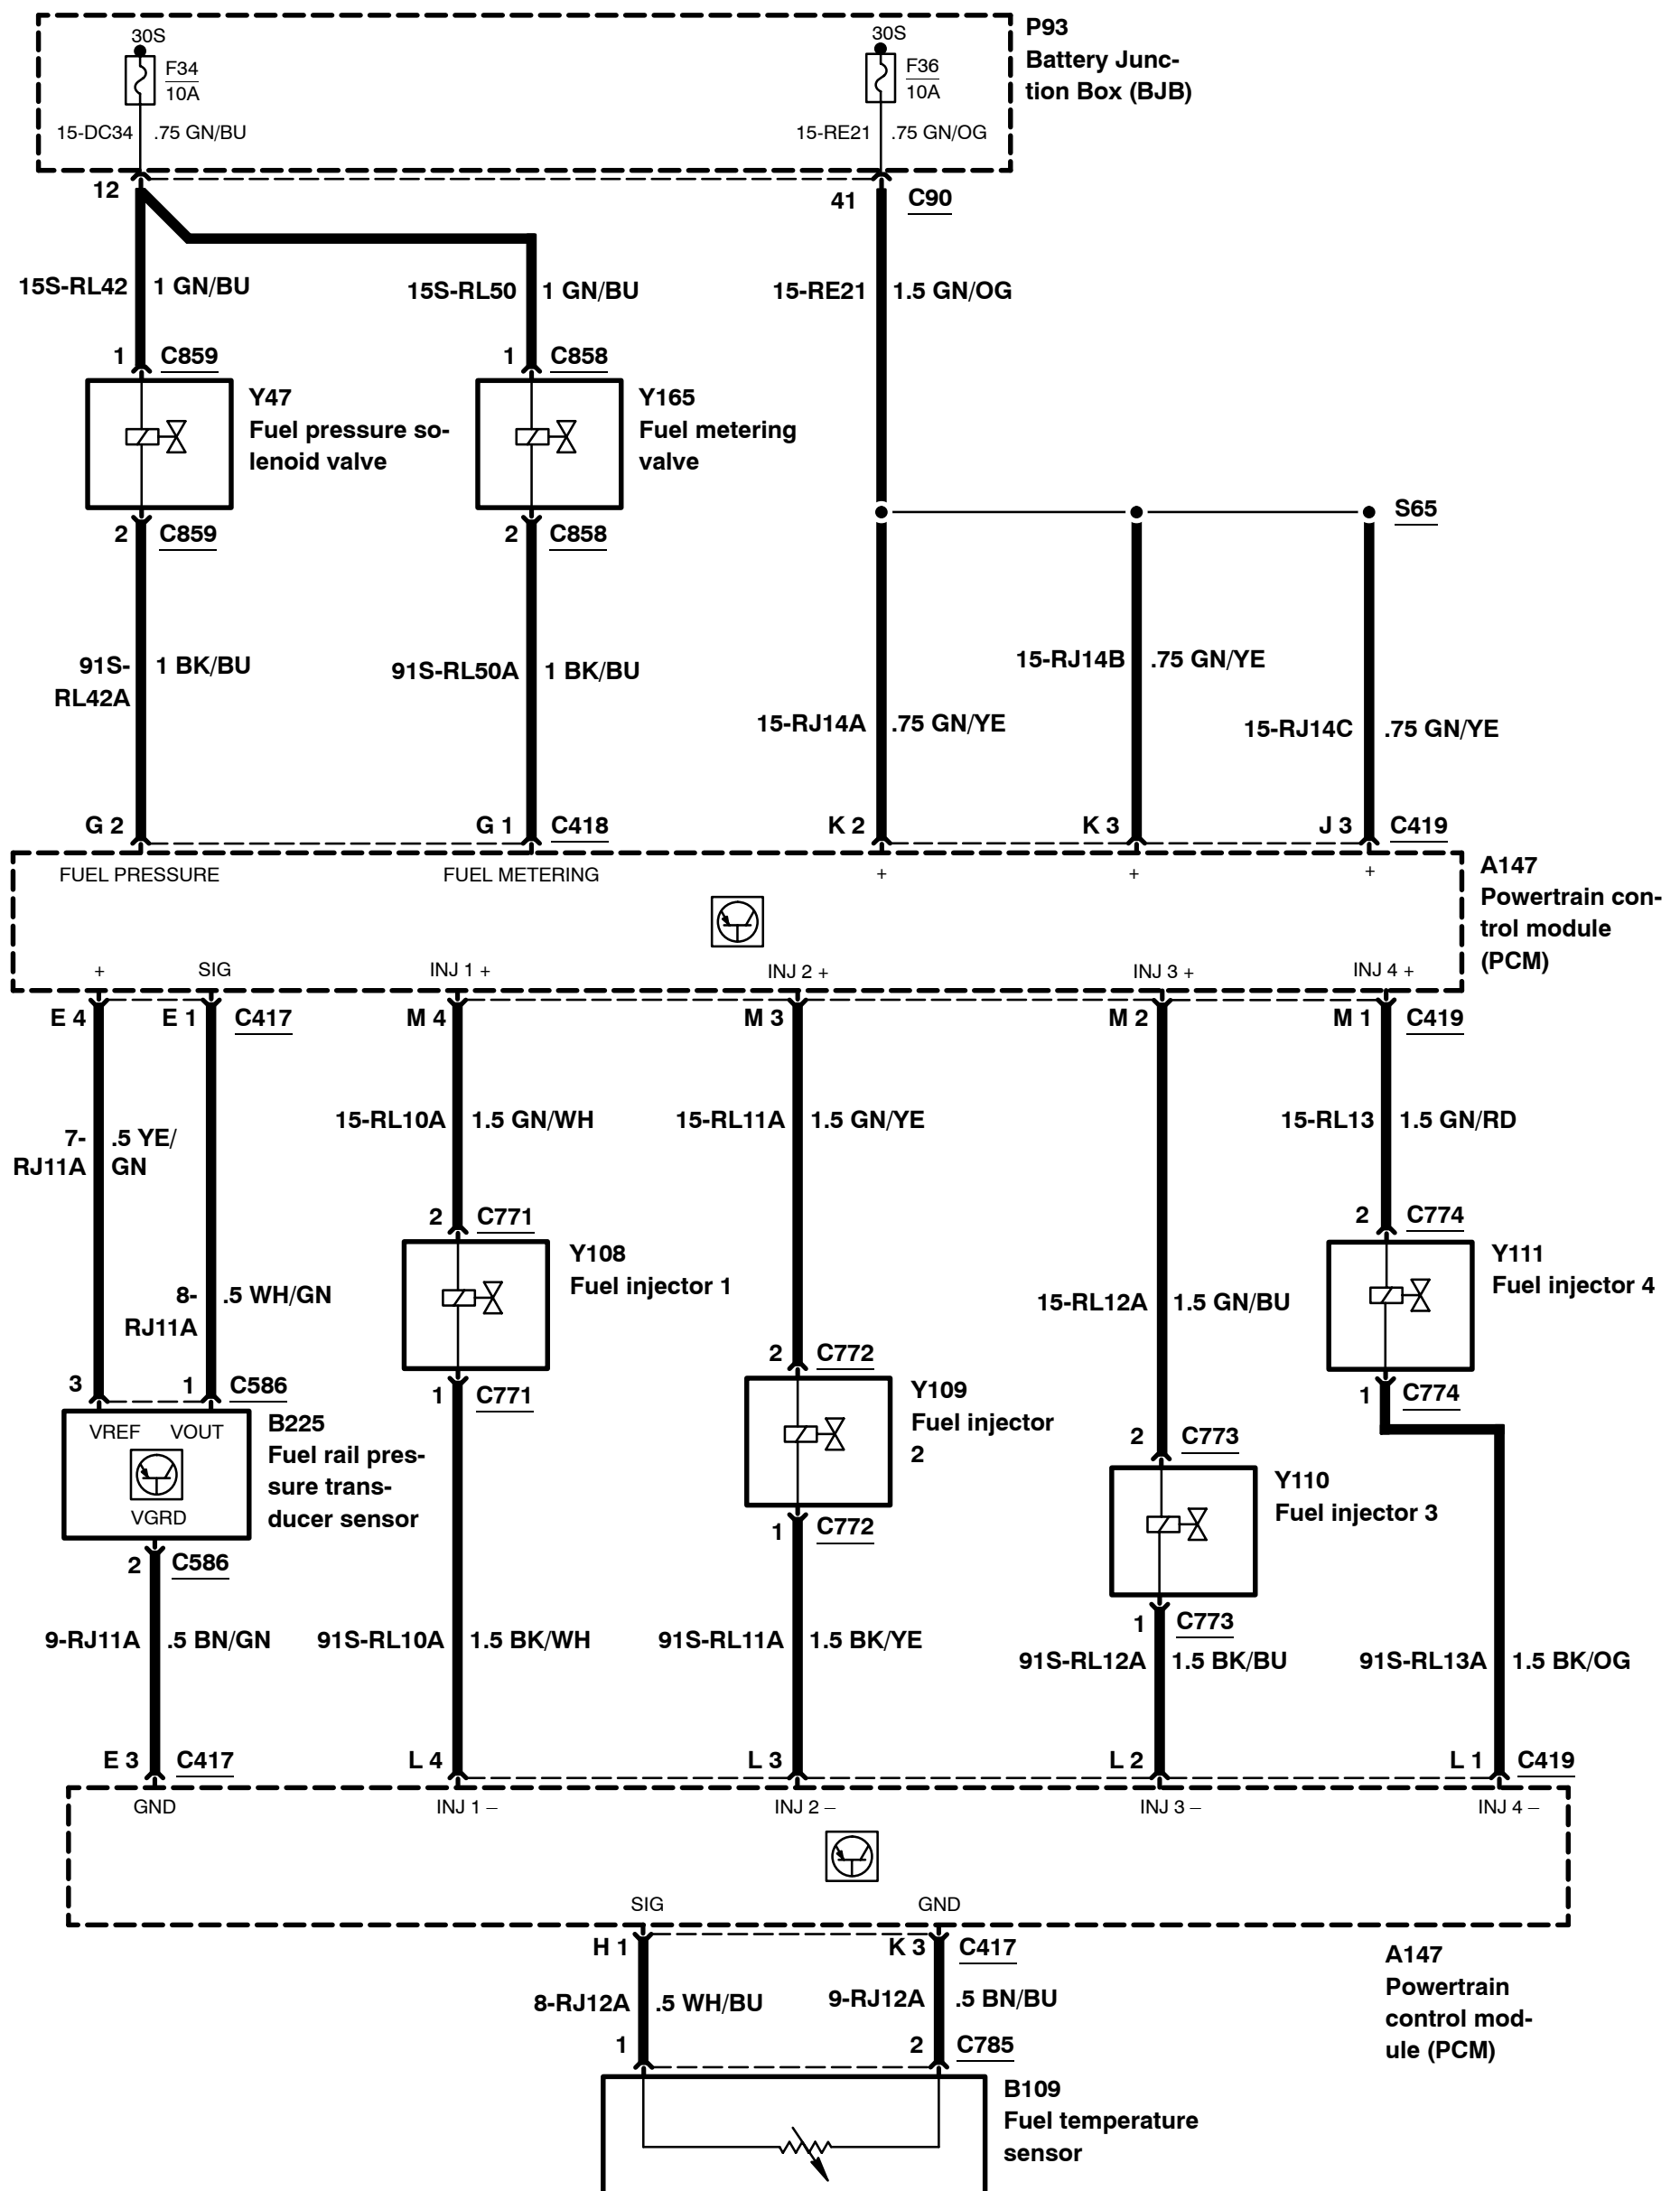


# Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel, manual transmission (MPS6)


02/2008  
303-04C-00-4  
2008.25  
Focus

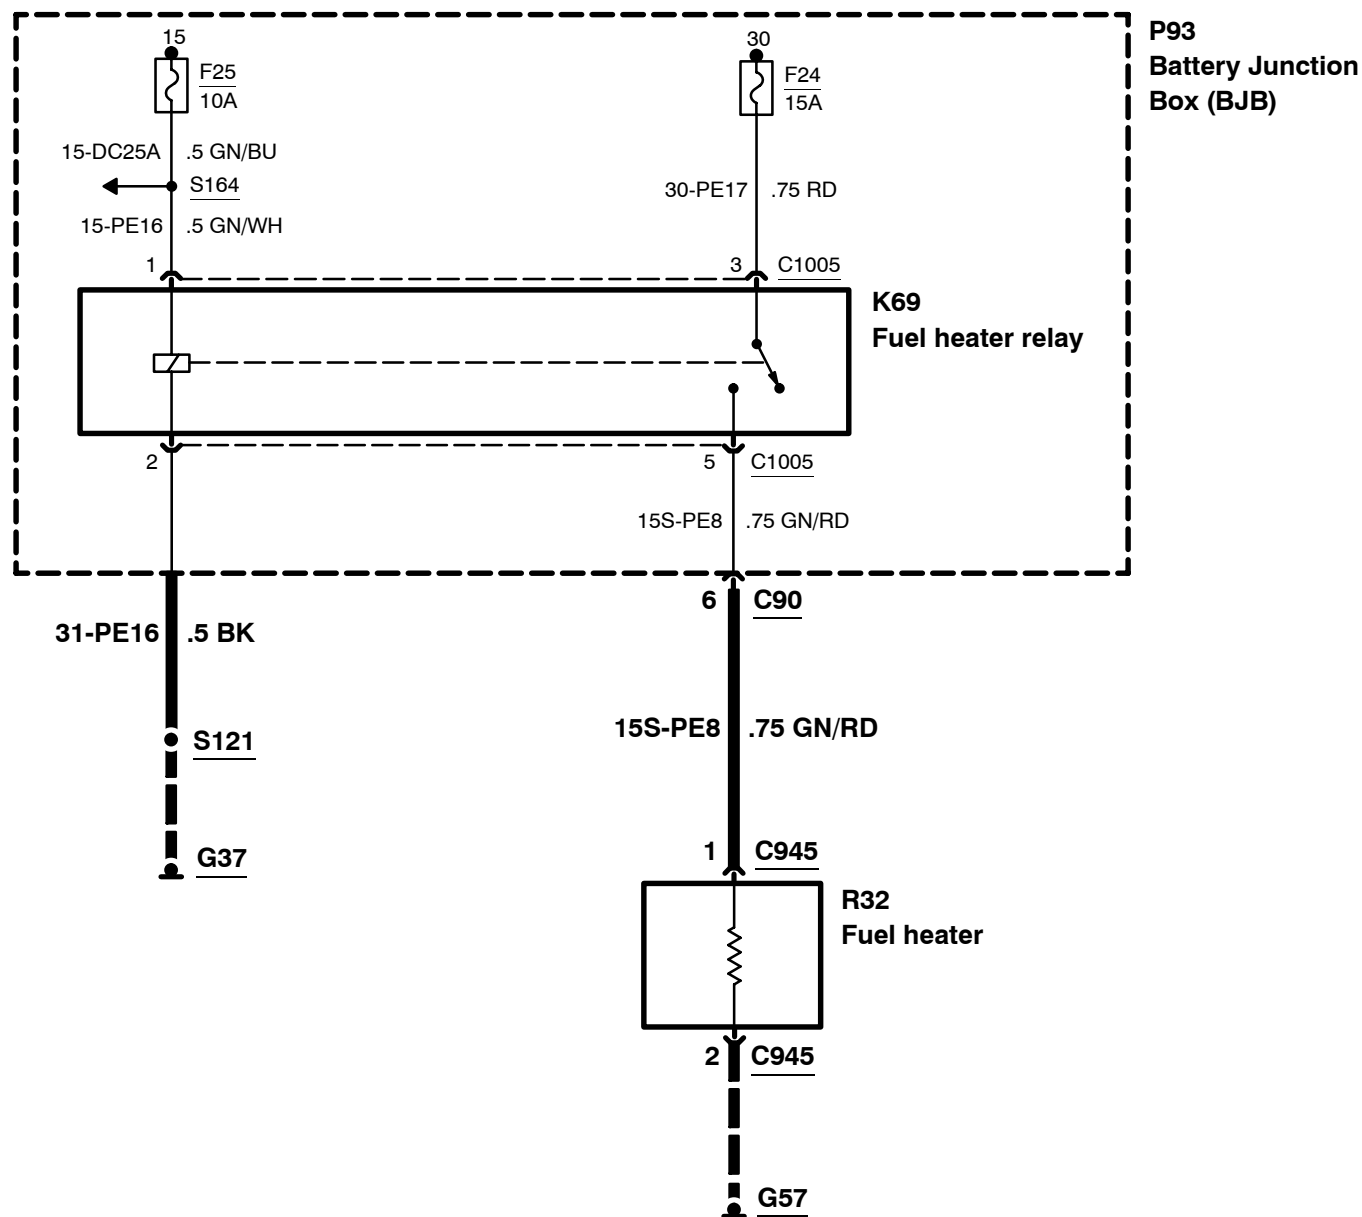

# Starting System – 1.6L (Z6), manual transmission


02/2008  
303-06A-00-1  
2008.25  
Focus

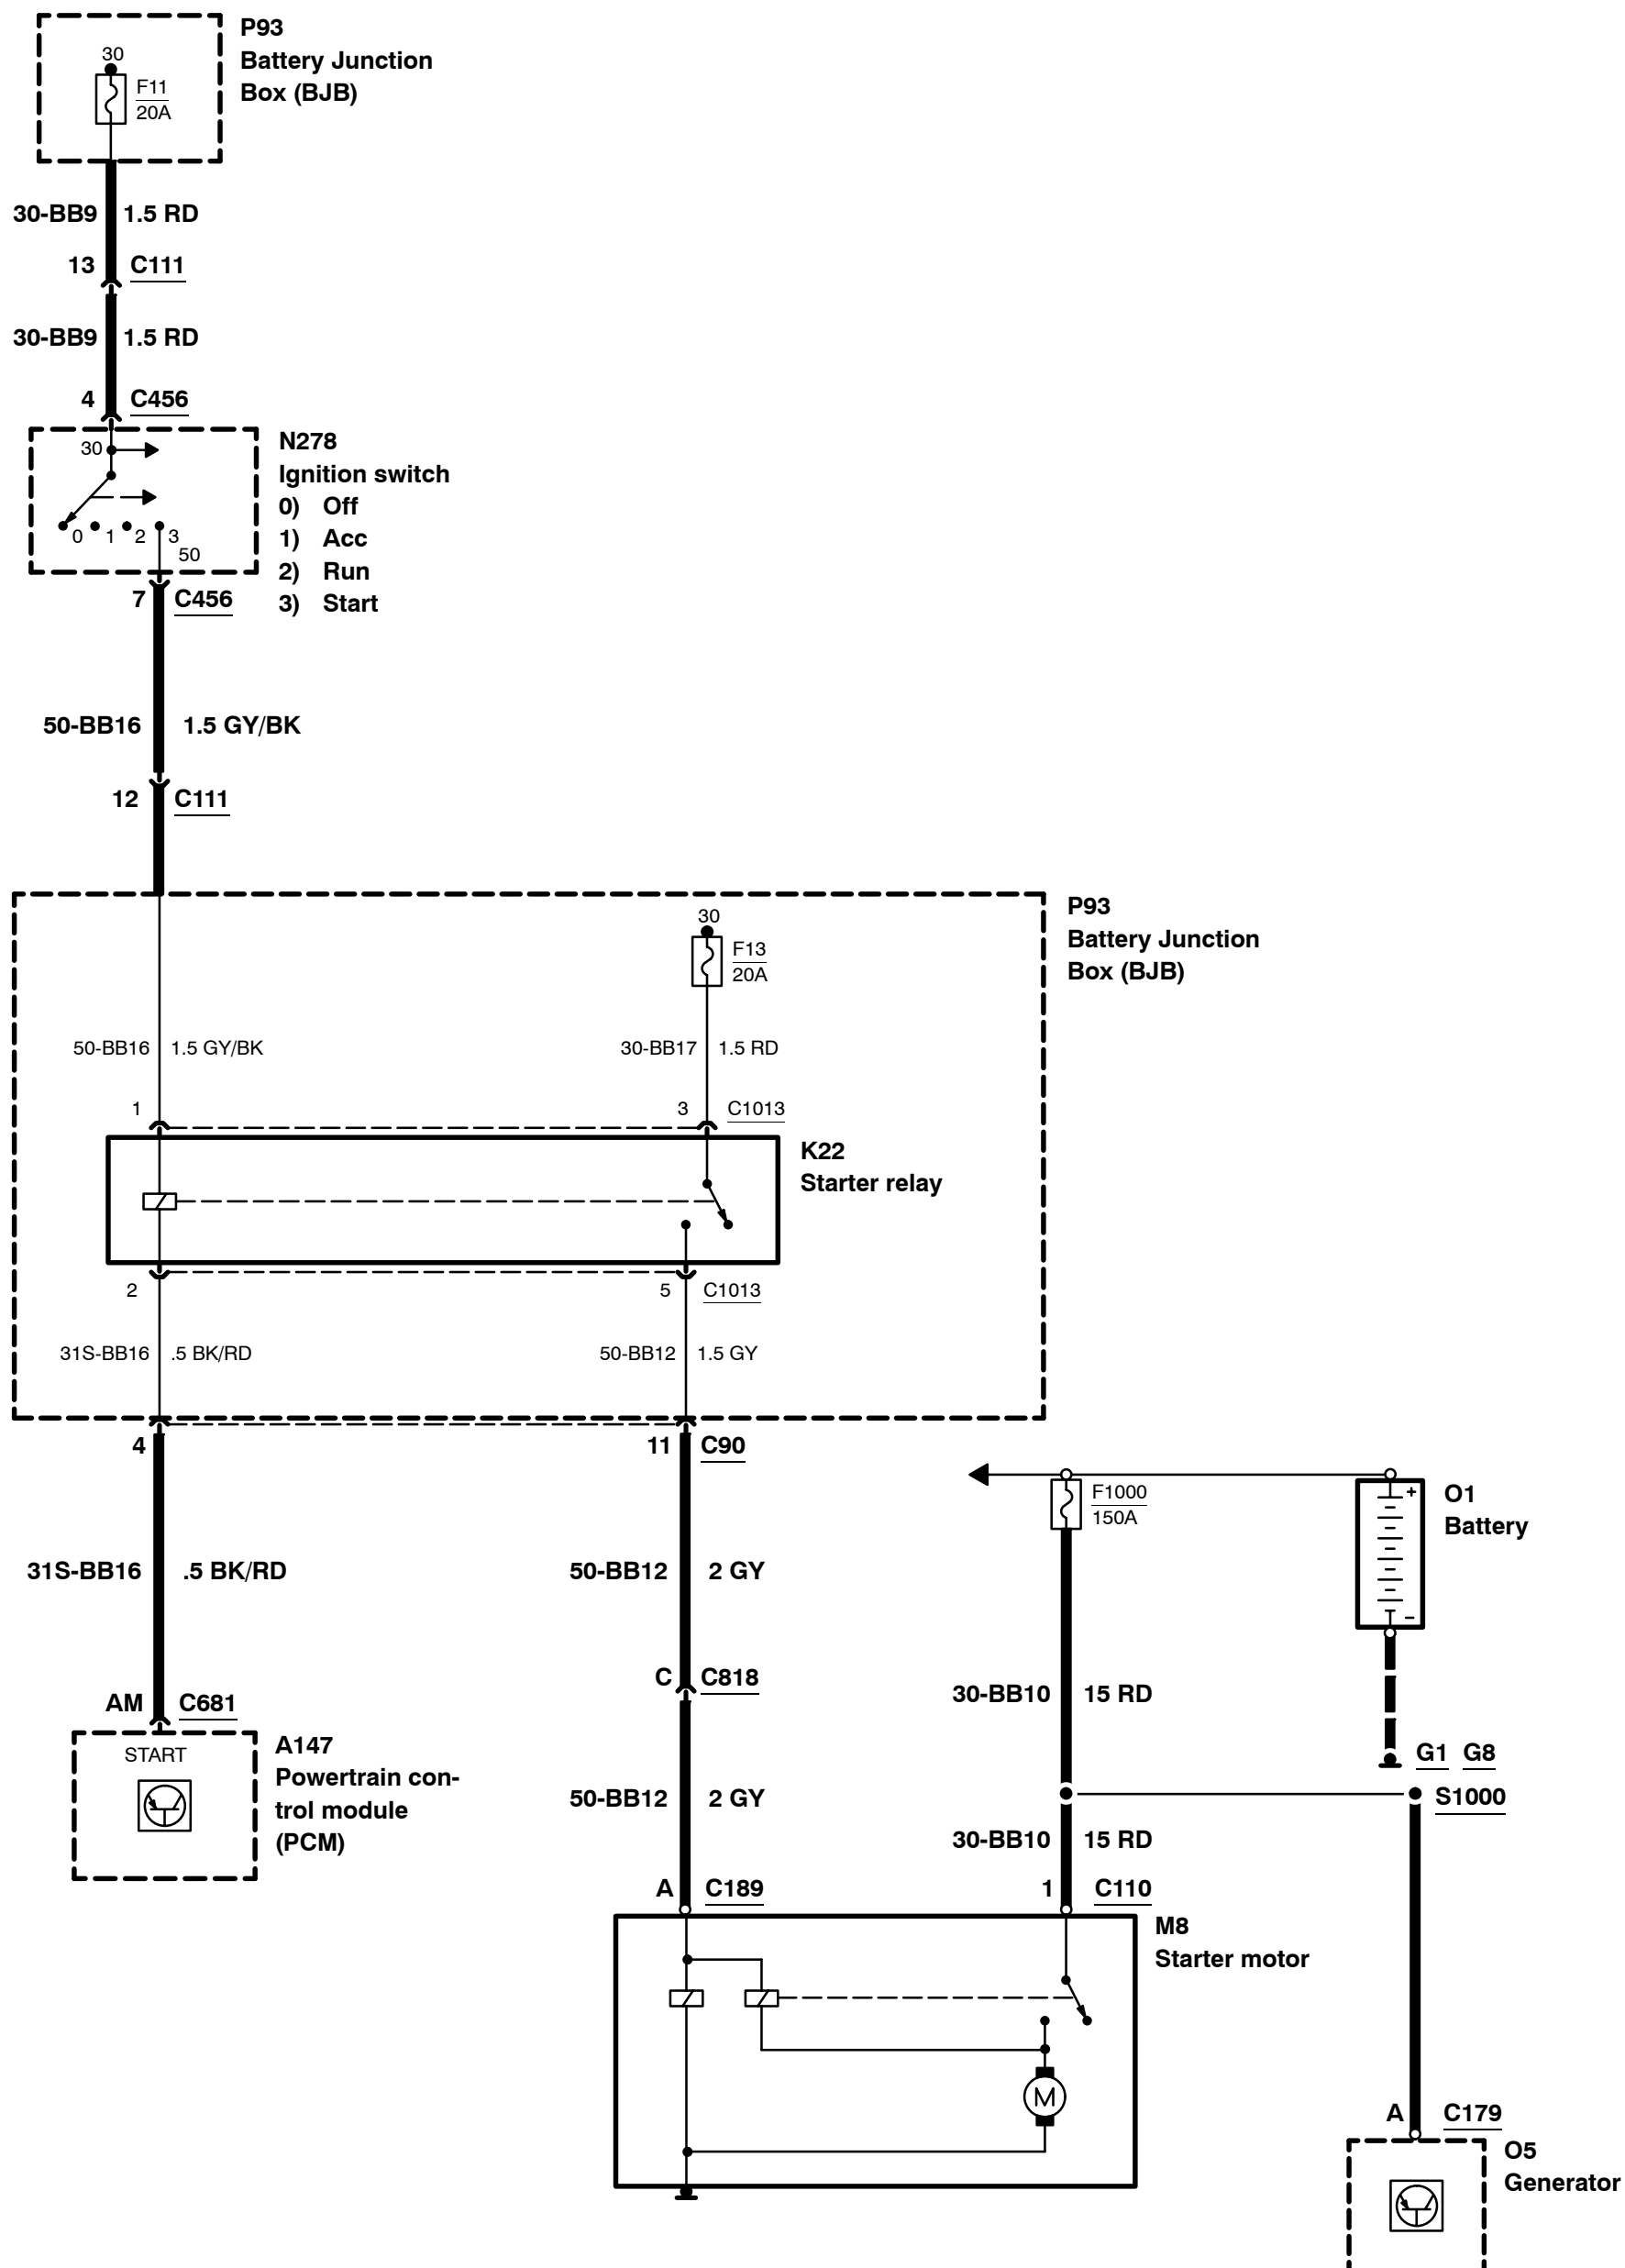

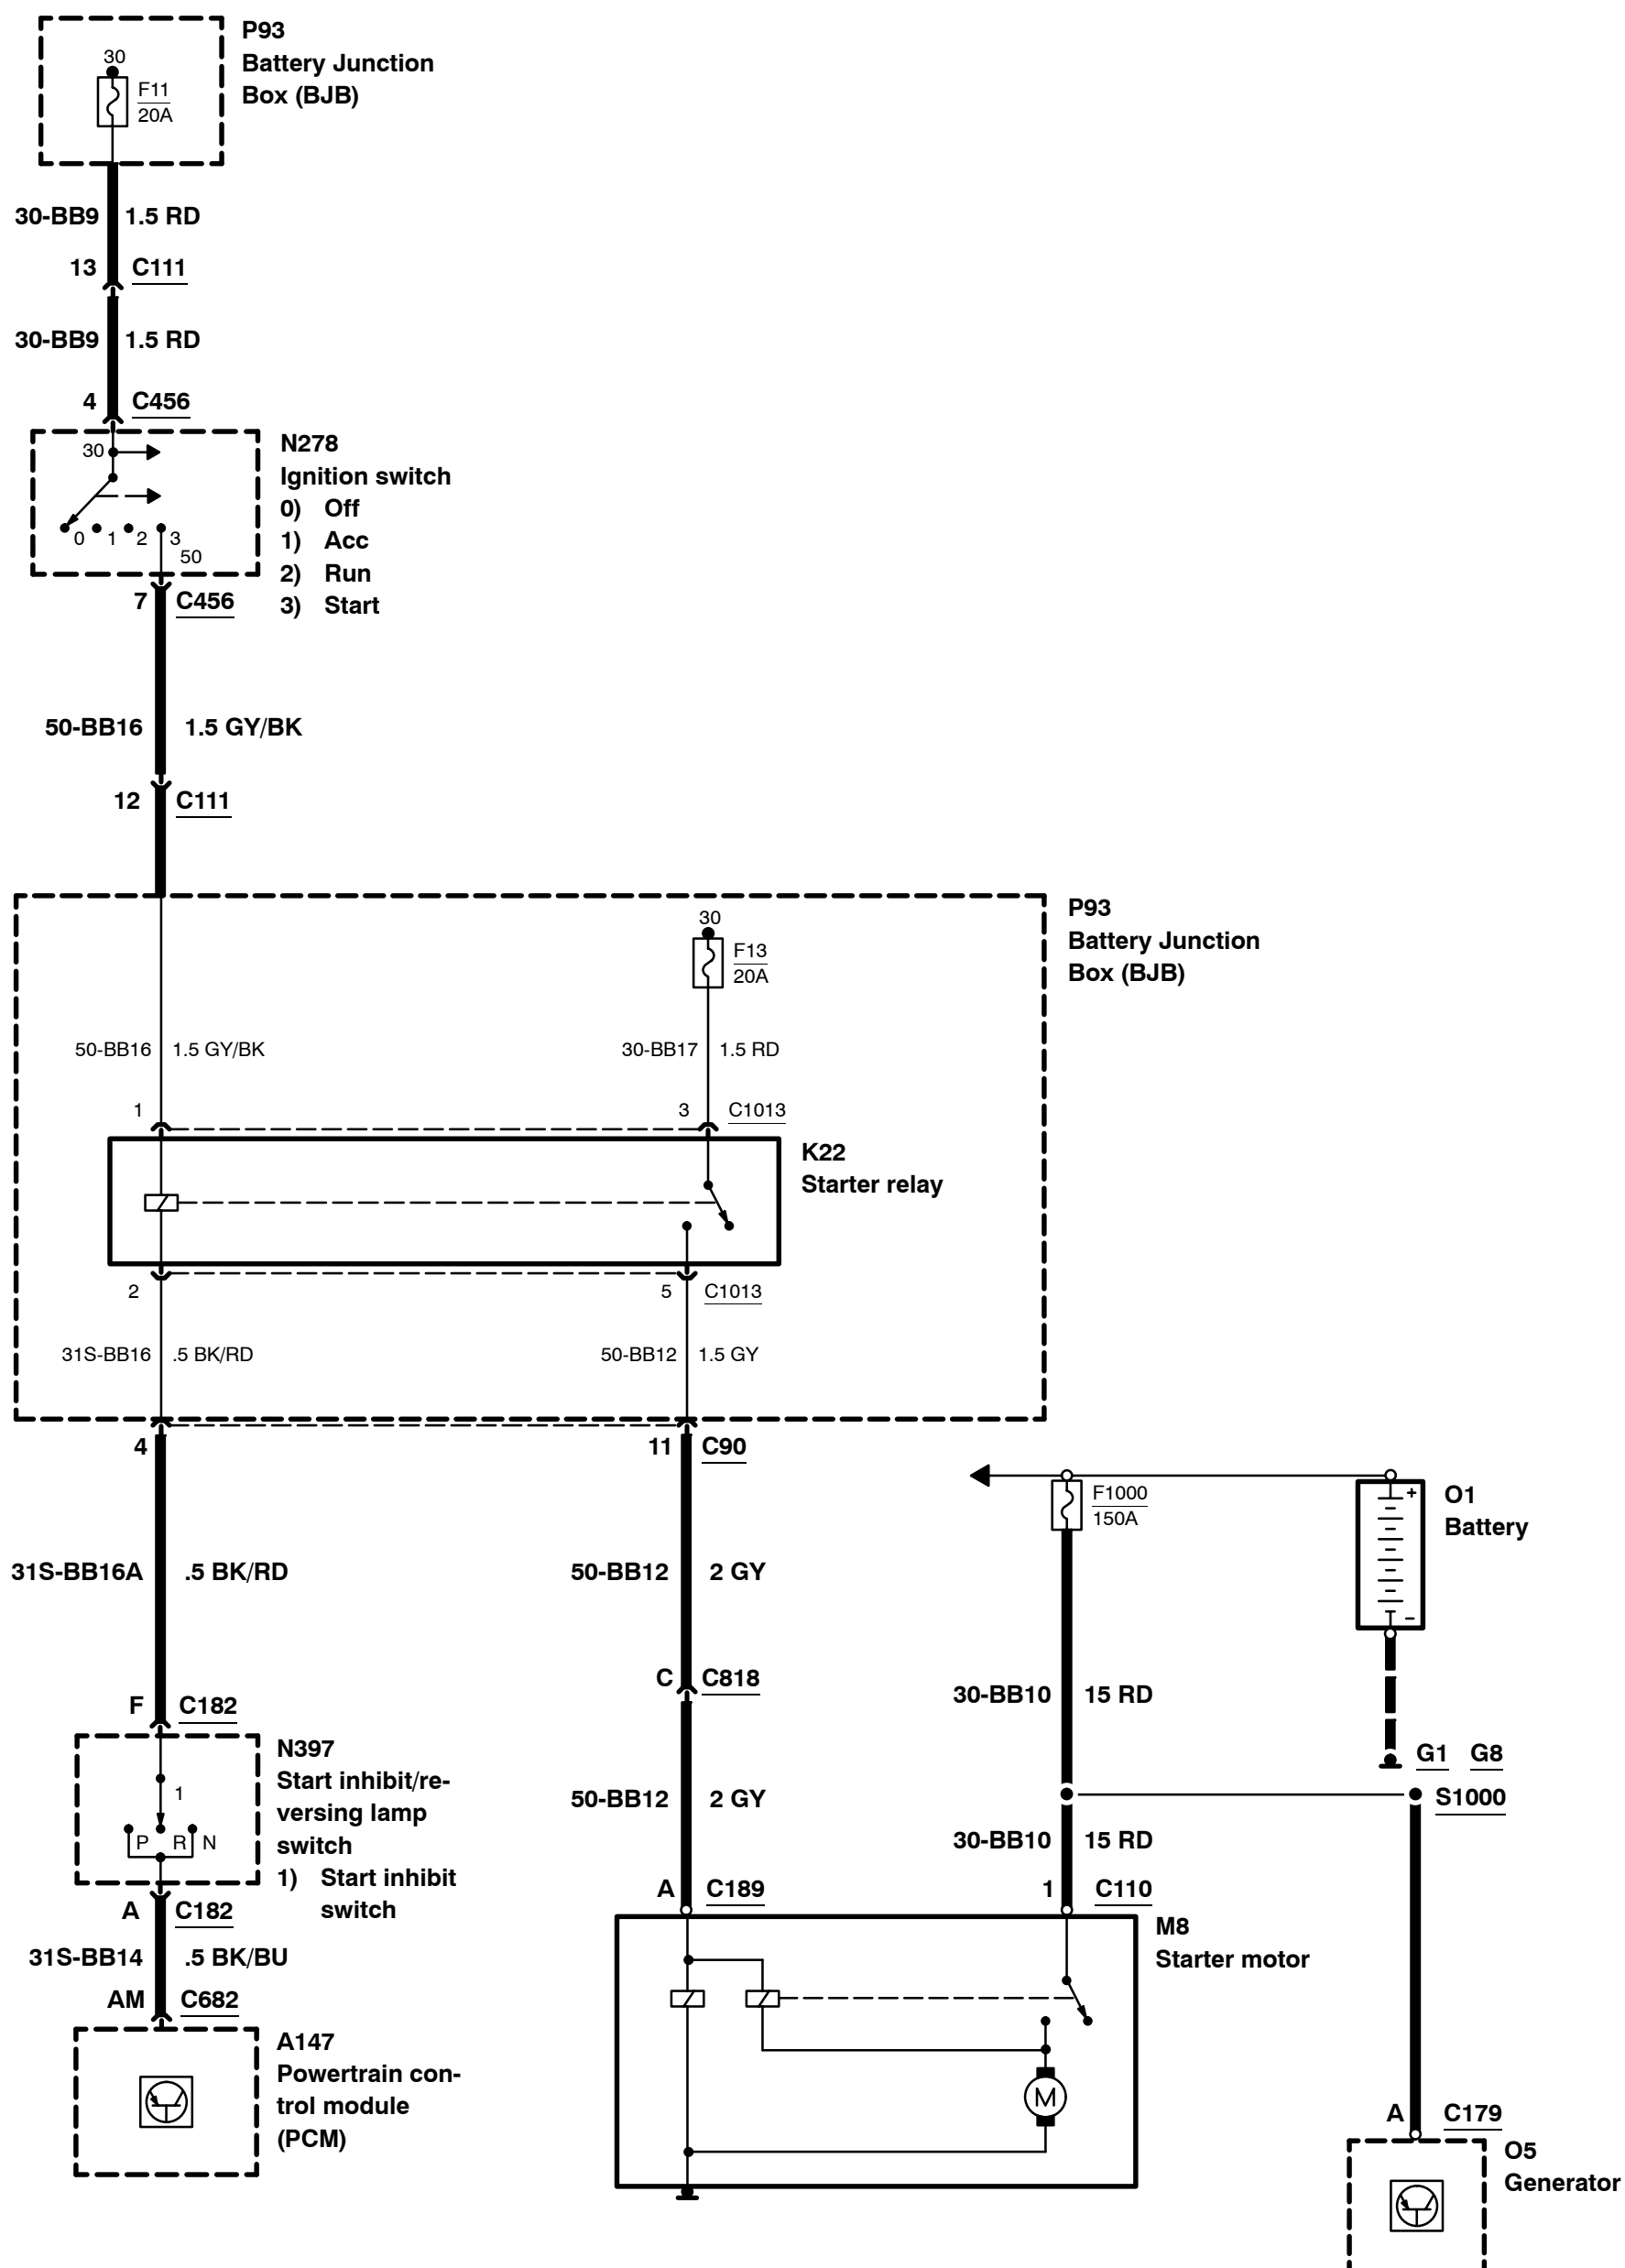

# Starting System – 1.8/2.0L Duratec–HE (MI4), manual transmission, before model year 2009


02/2008  
303-06B-00-1  
2008.25  
Focus

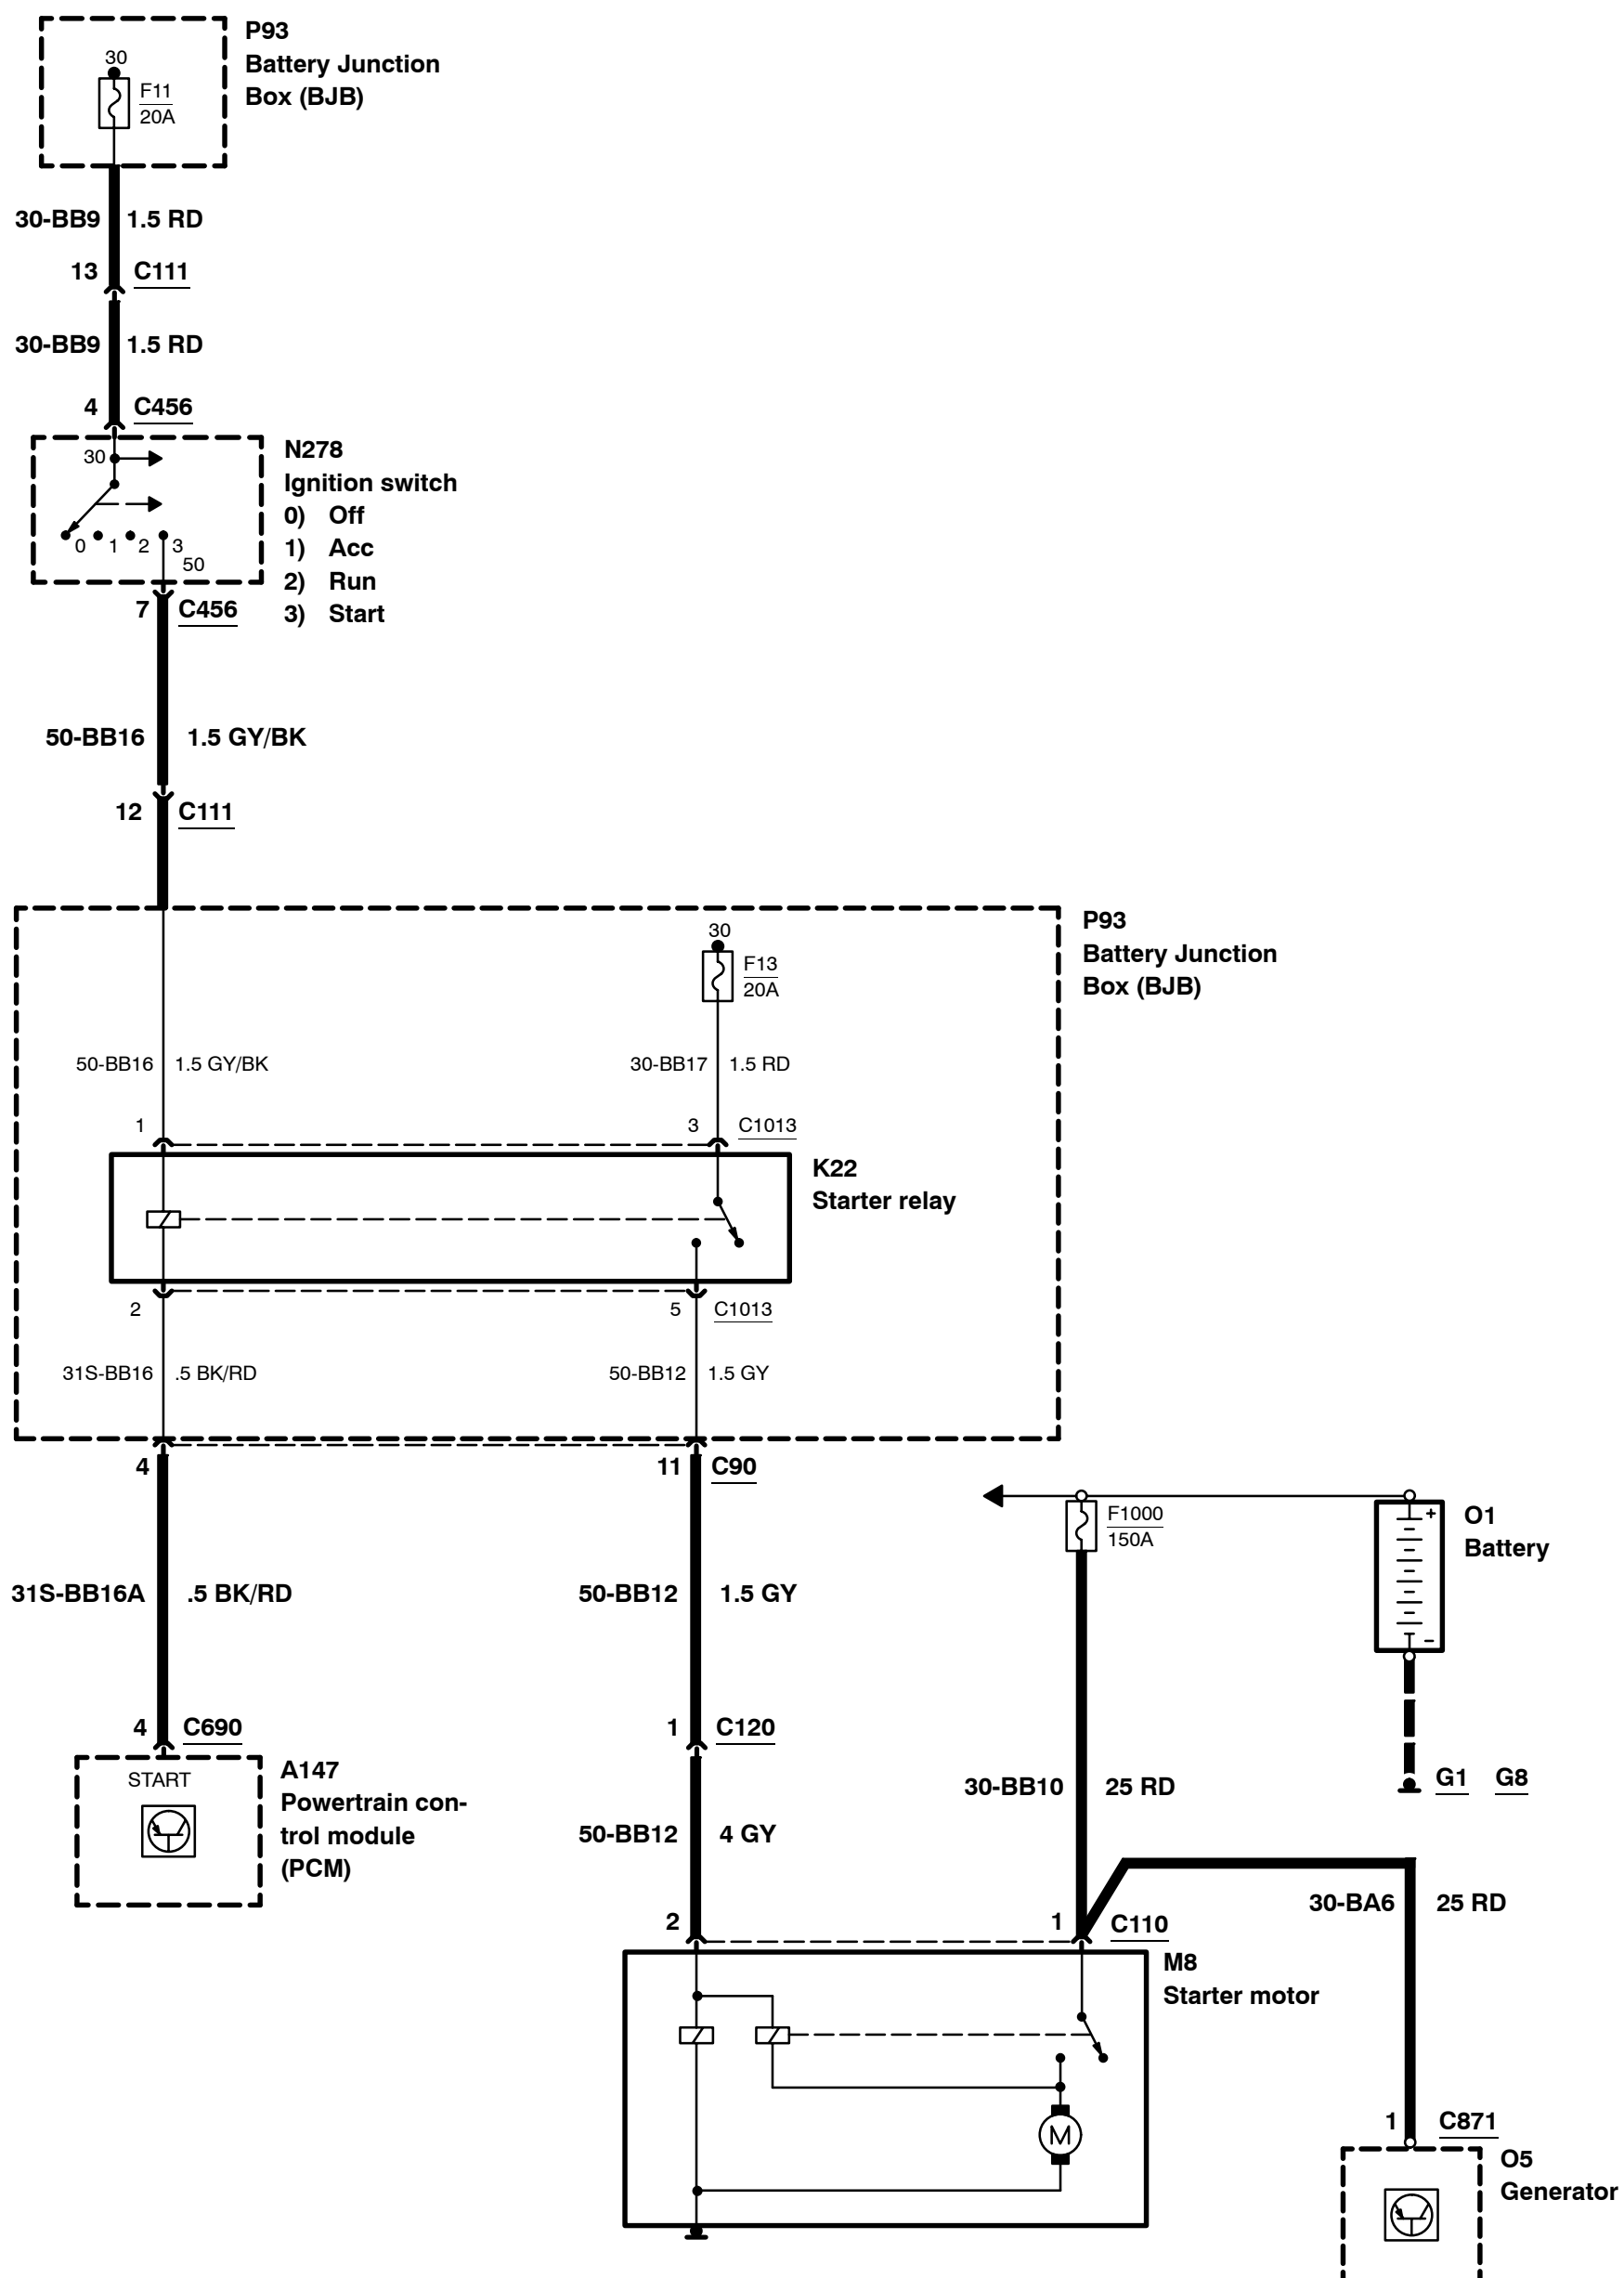



# Starting System – 1.8/2.0L Duratec–HE (M14), automatic transmission, before model year 2009


02/2008  
303-06B-00-2  
2008.25  
Focus

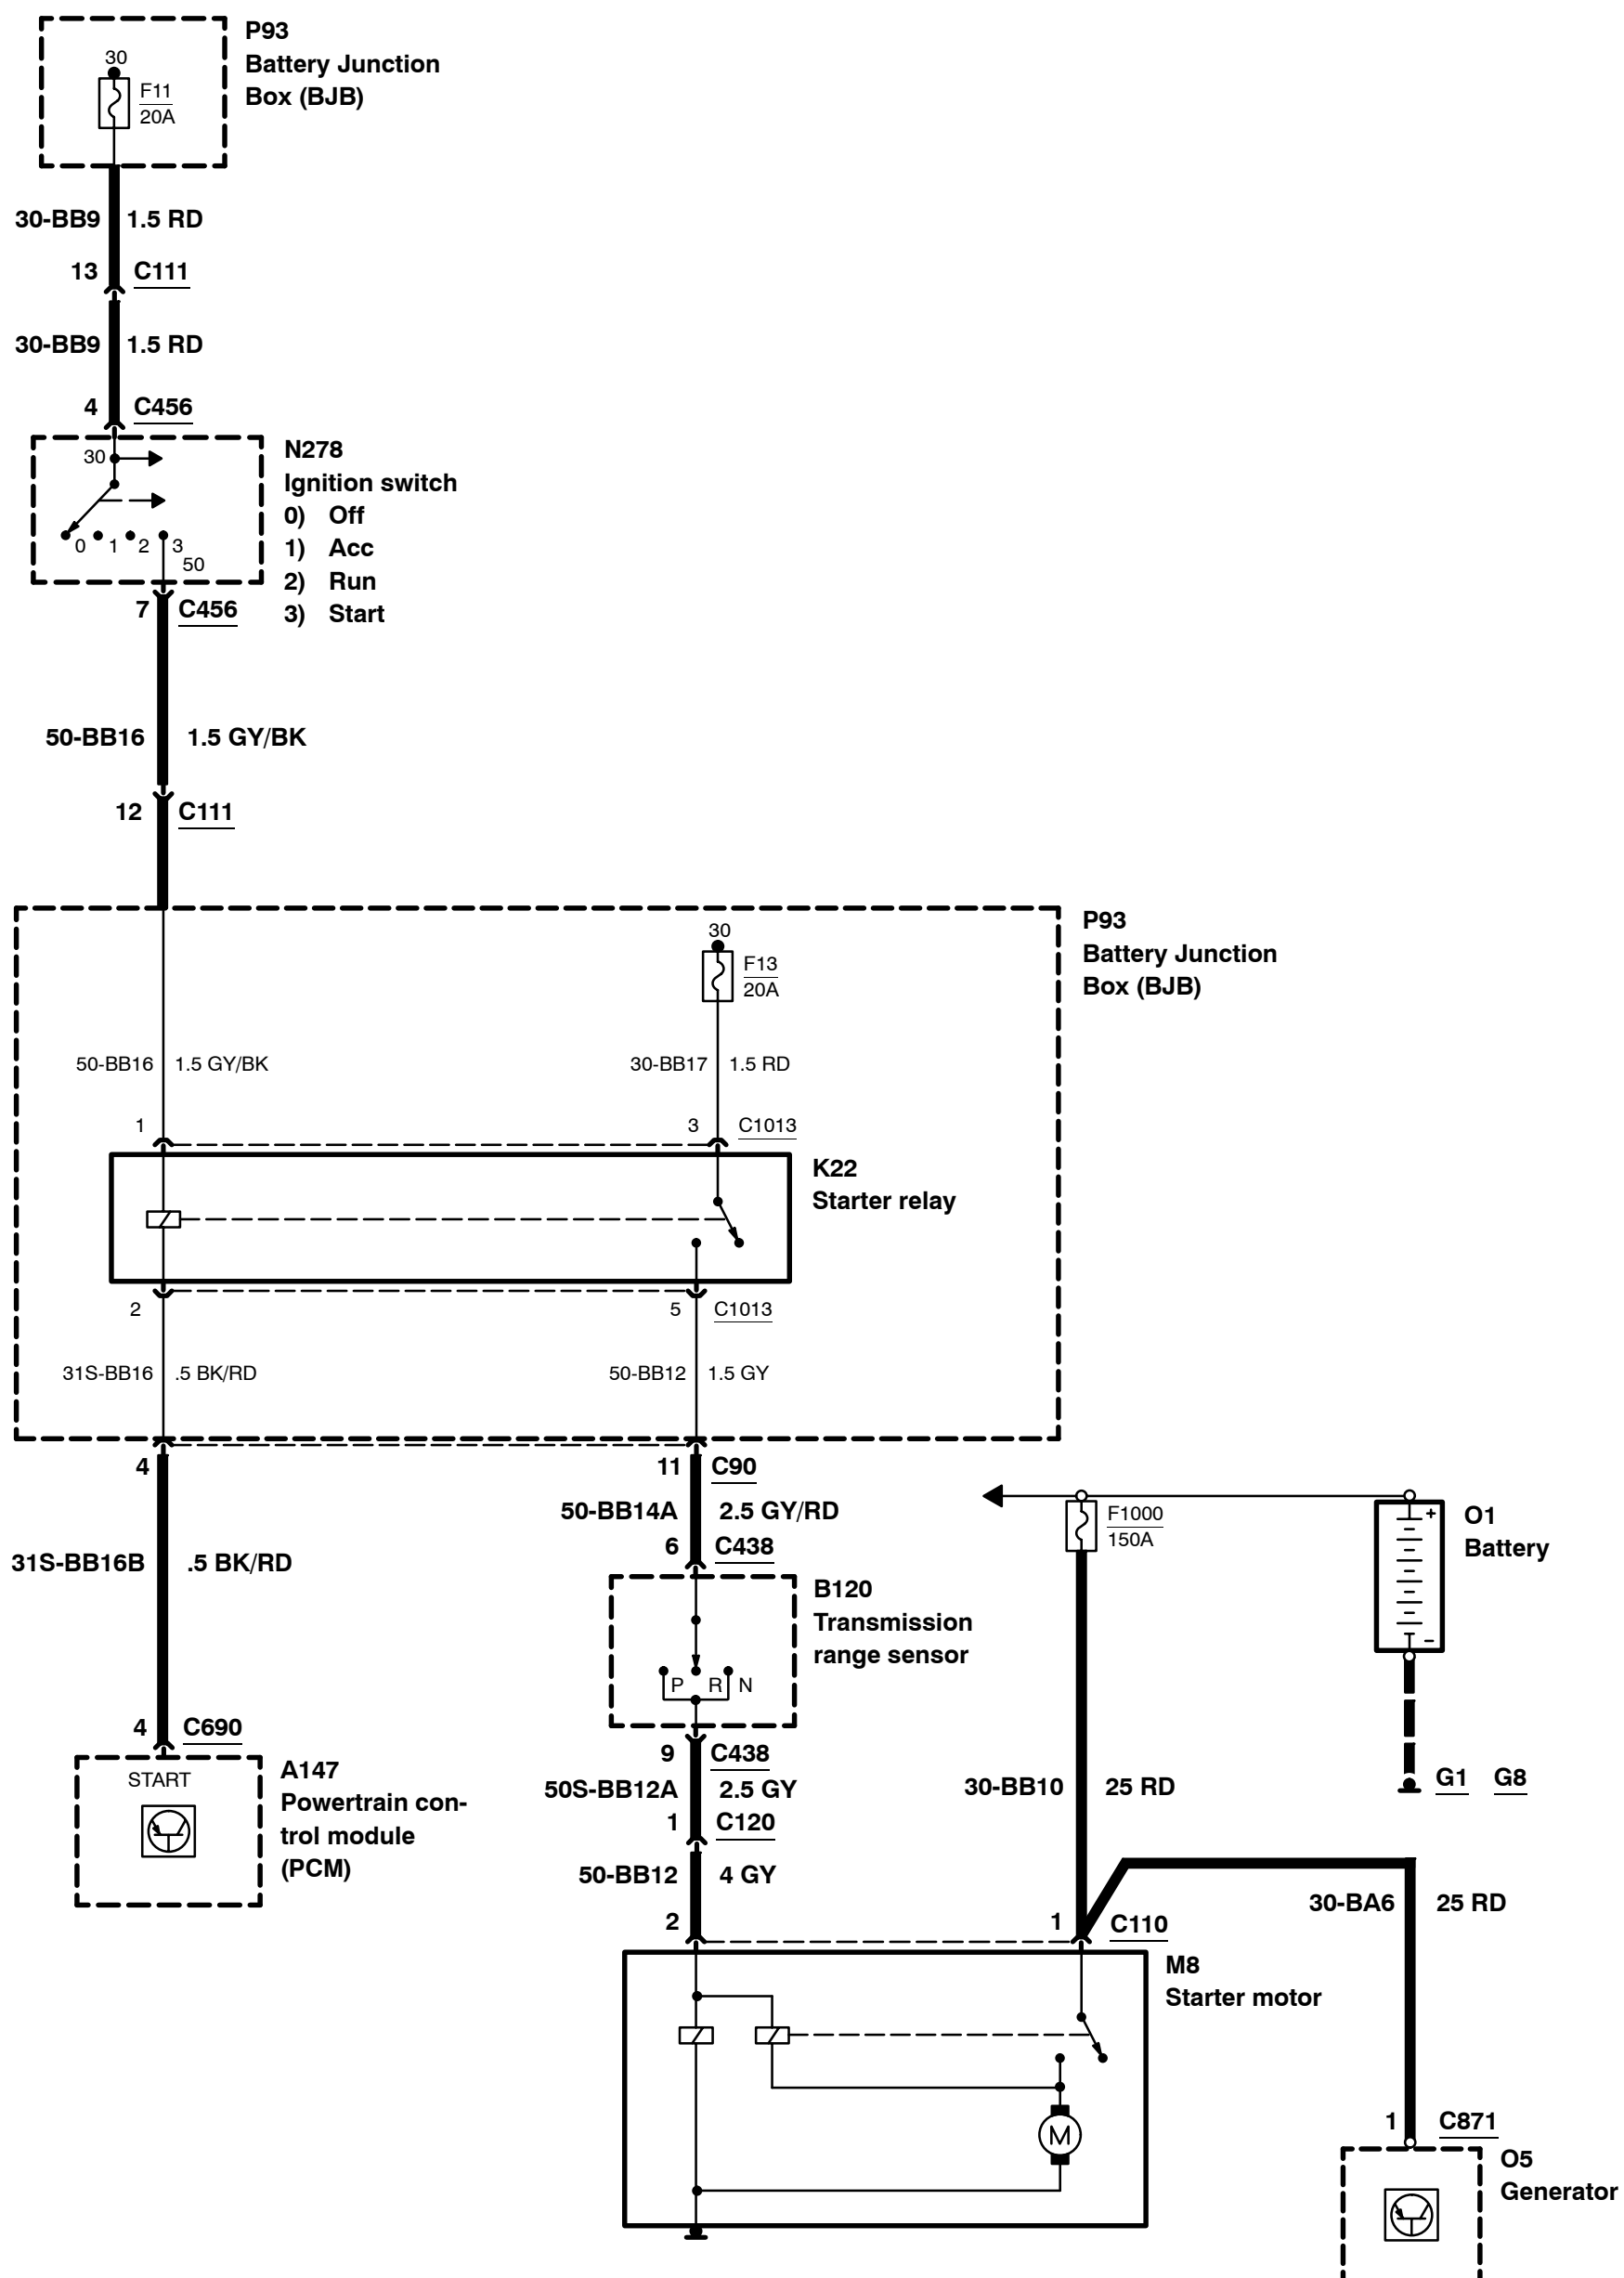




Starting System – 1.8/2.0L Duratec–HE (MI4), manual transmission, as of model year 2009

02/2008  
303-06B-00-3  
2008.25  
Focus

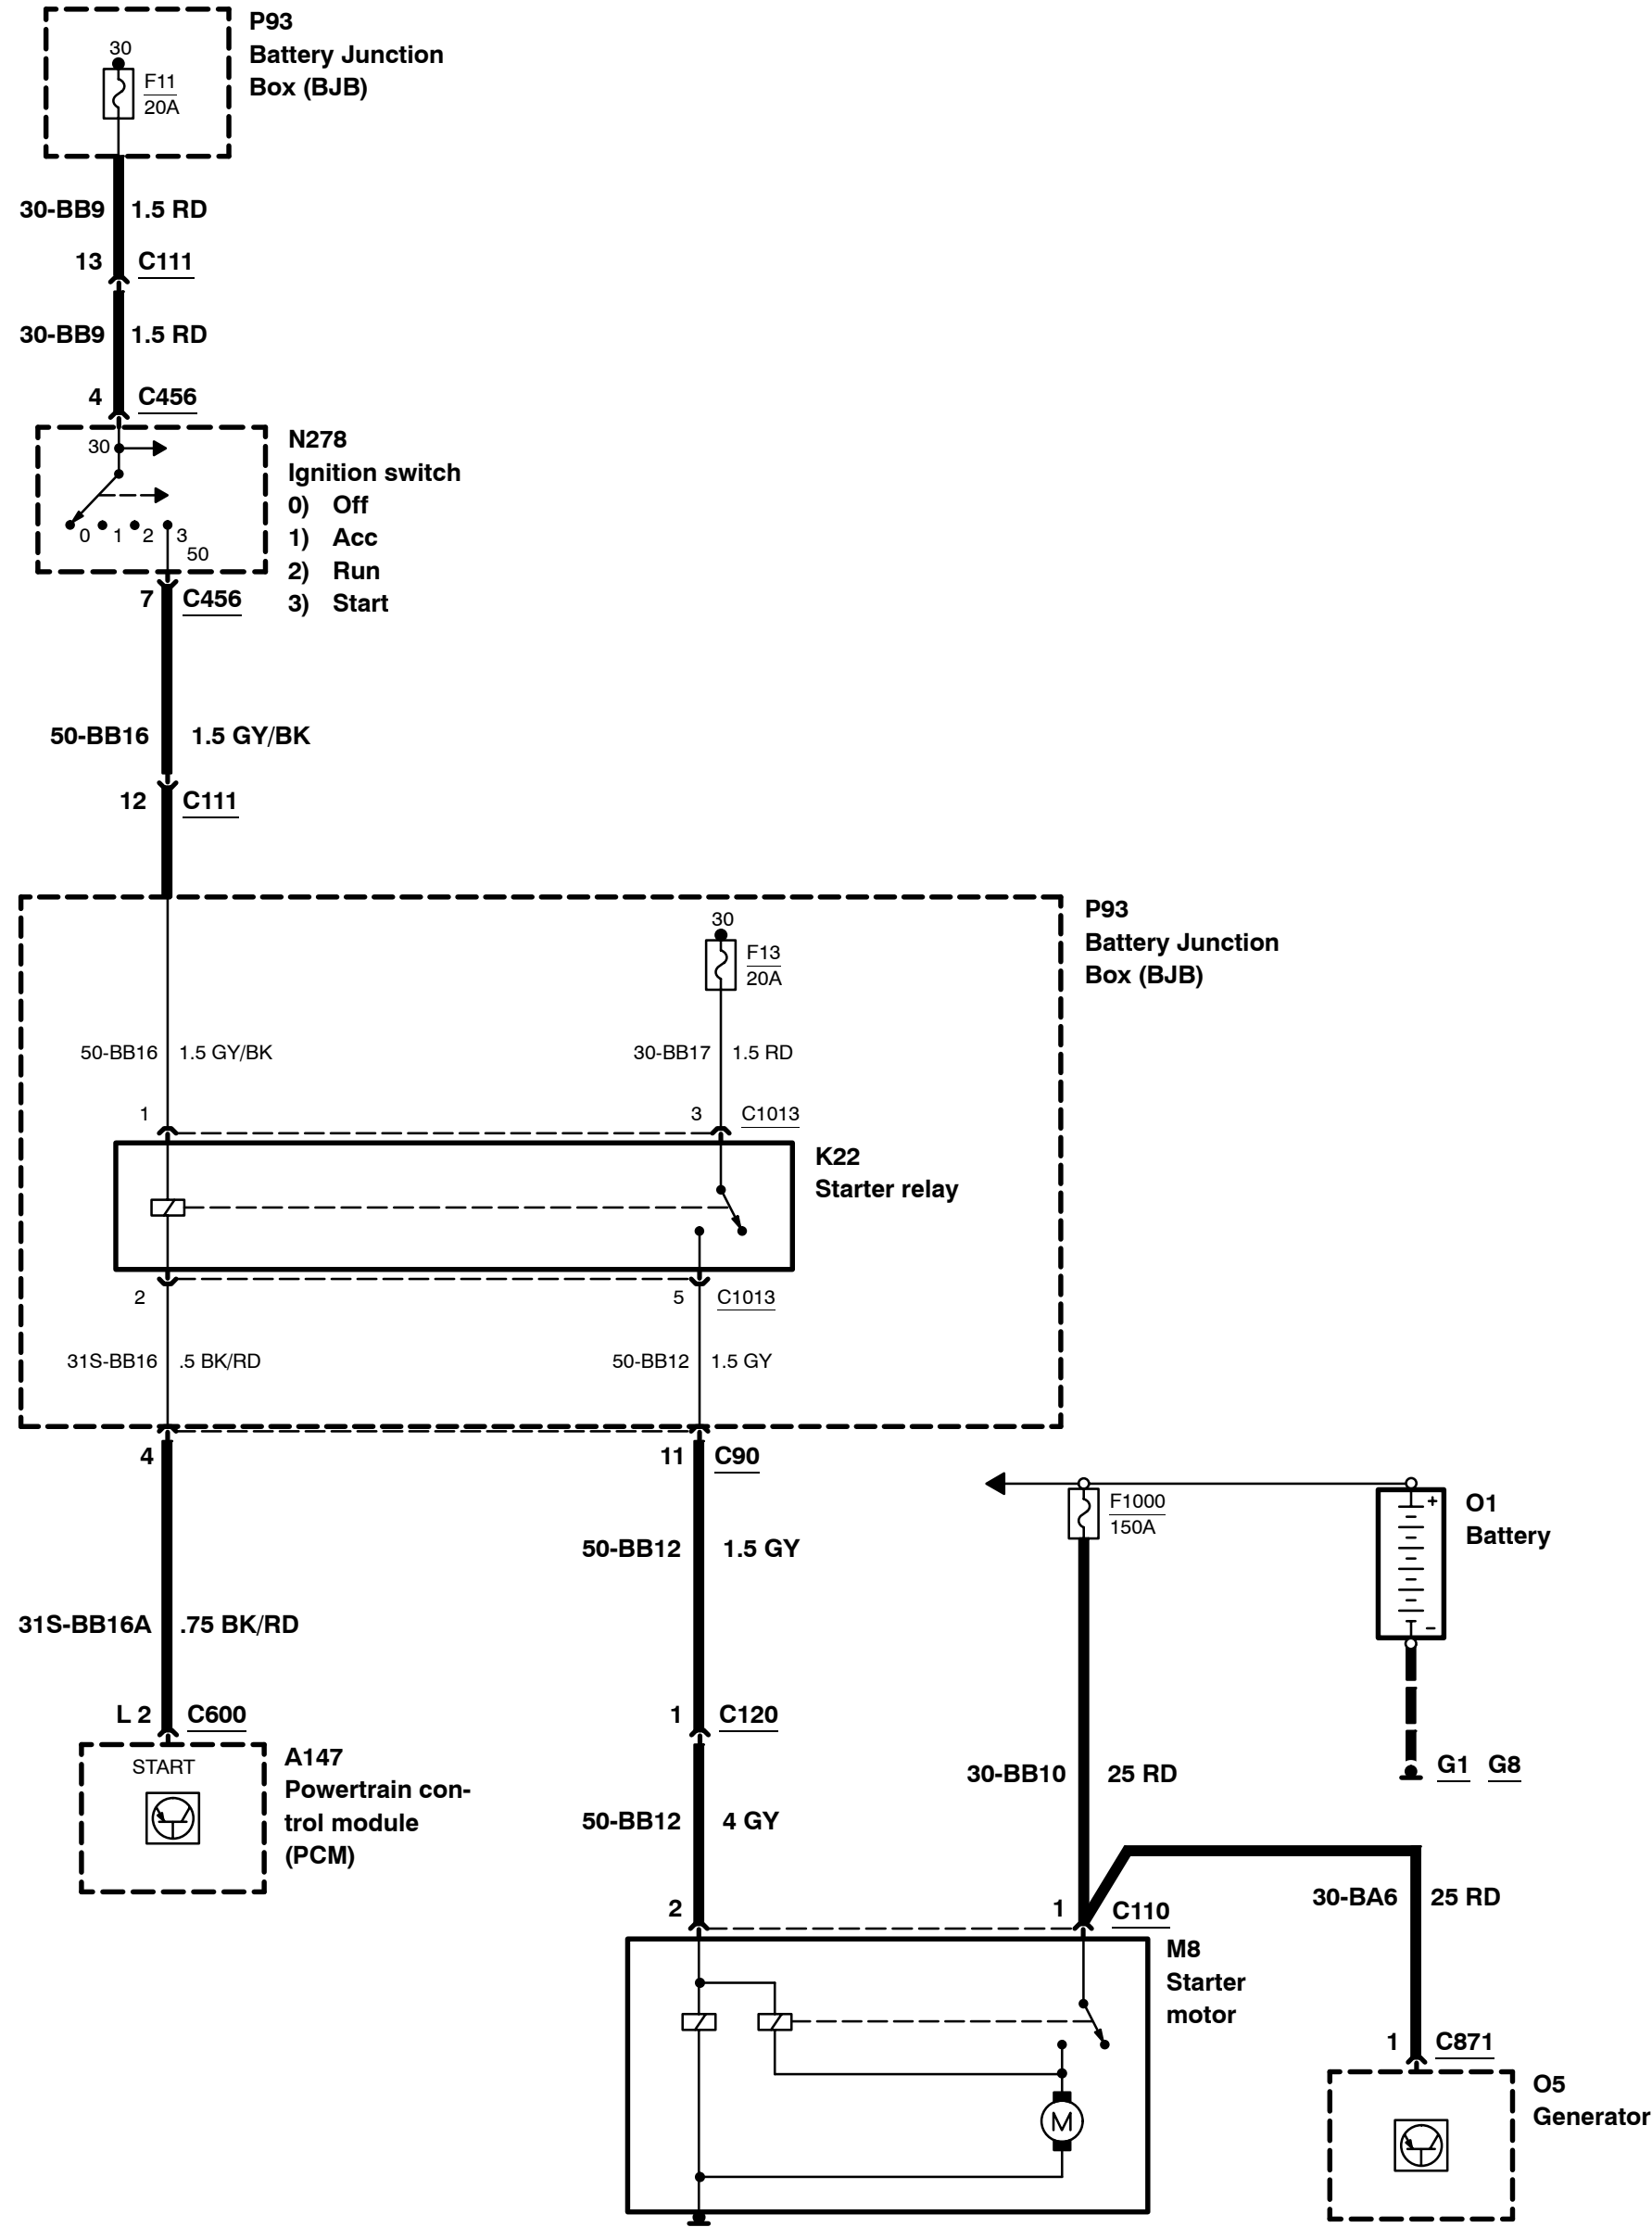


02/2008  
303-06B-00-4  
2008.25  
Focus

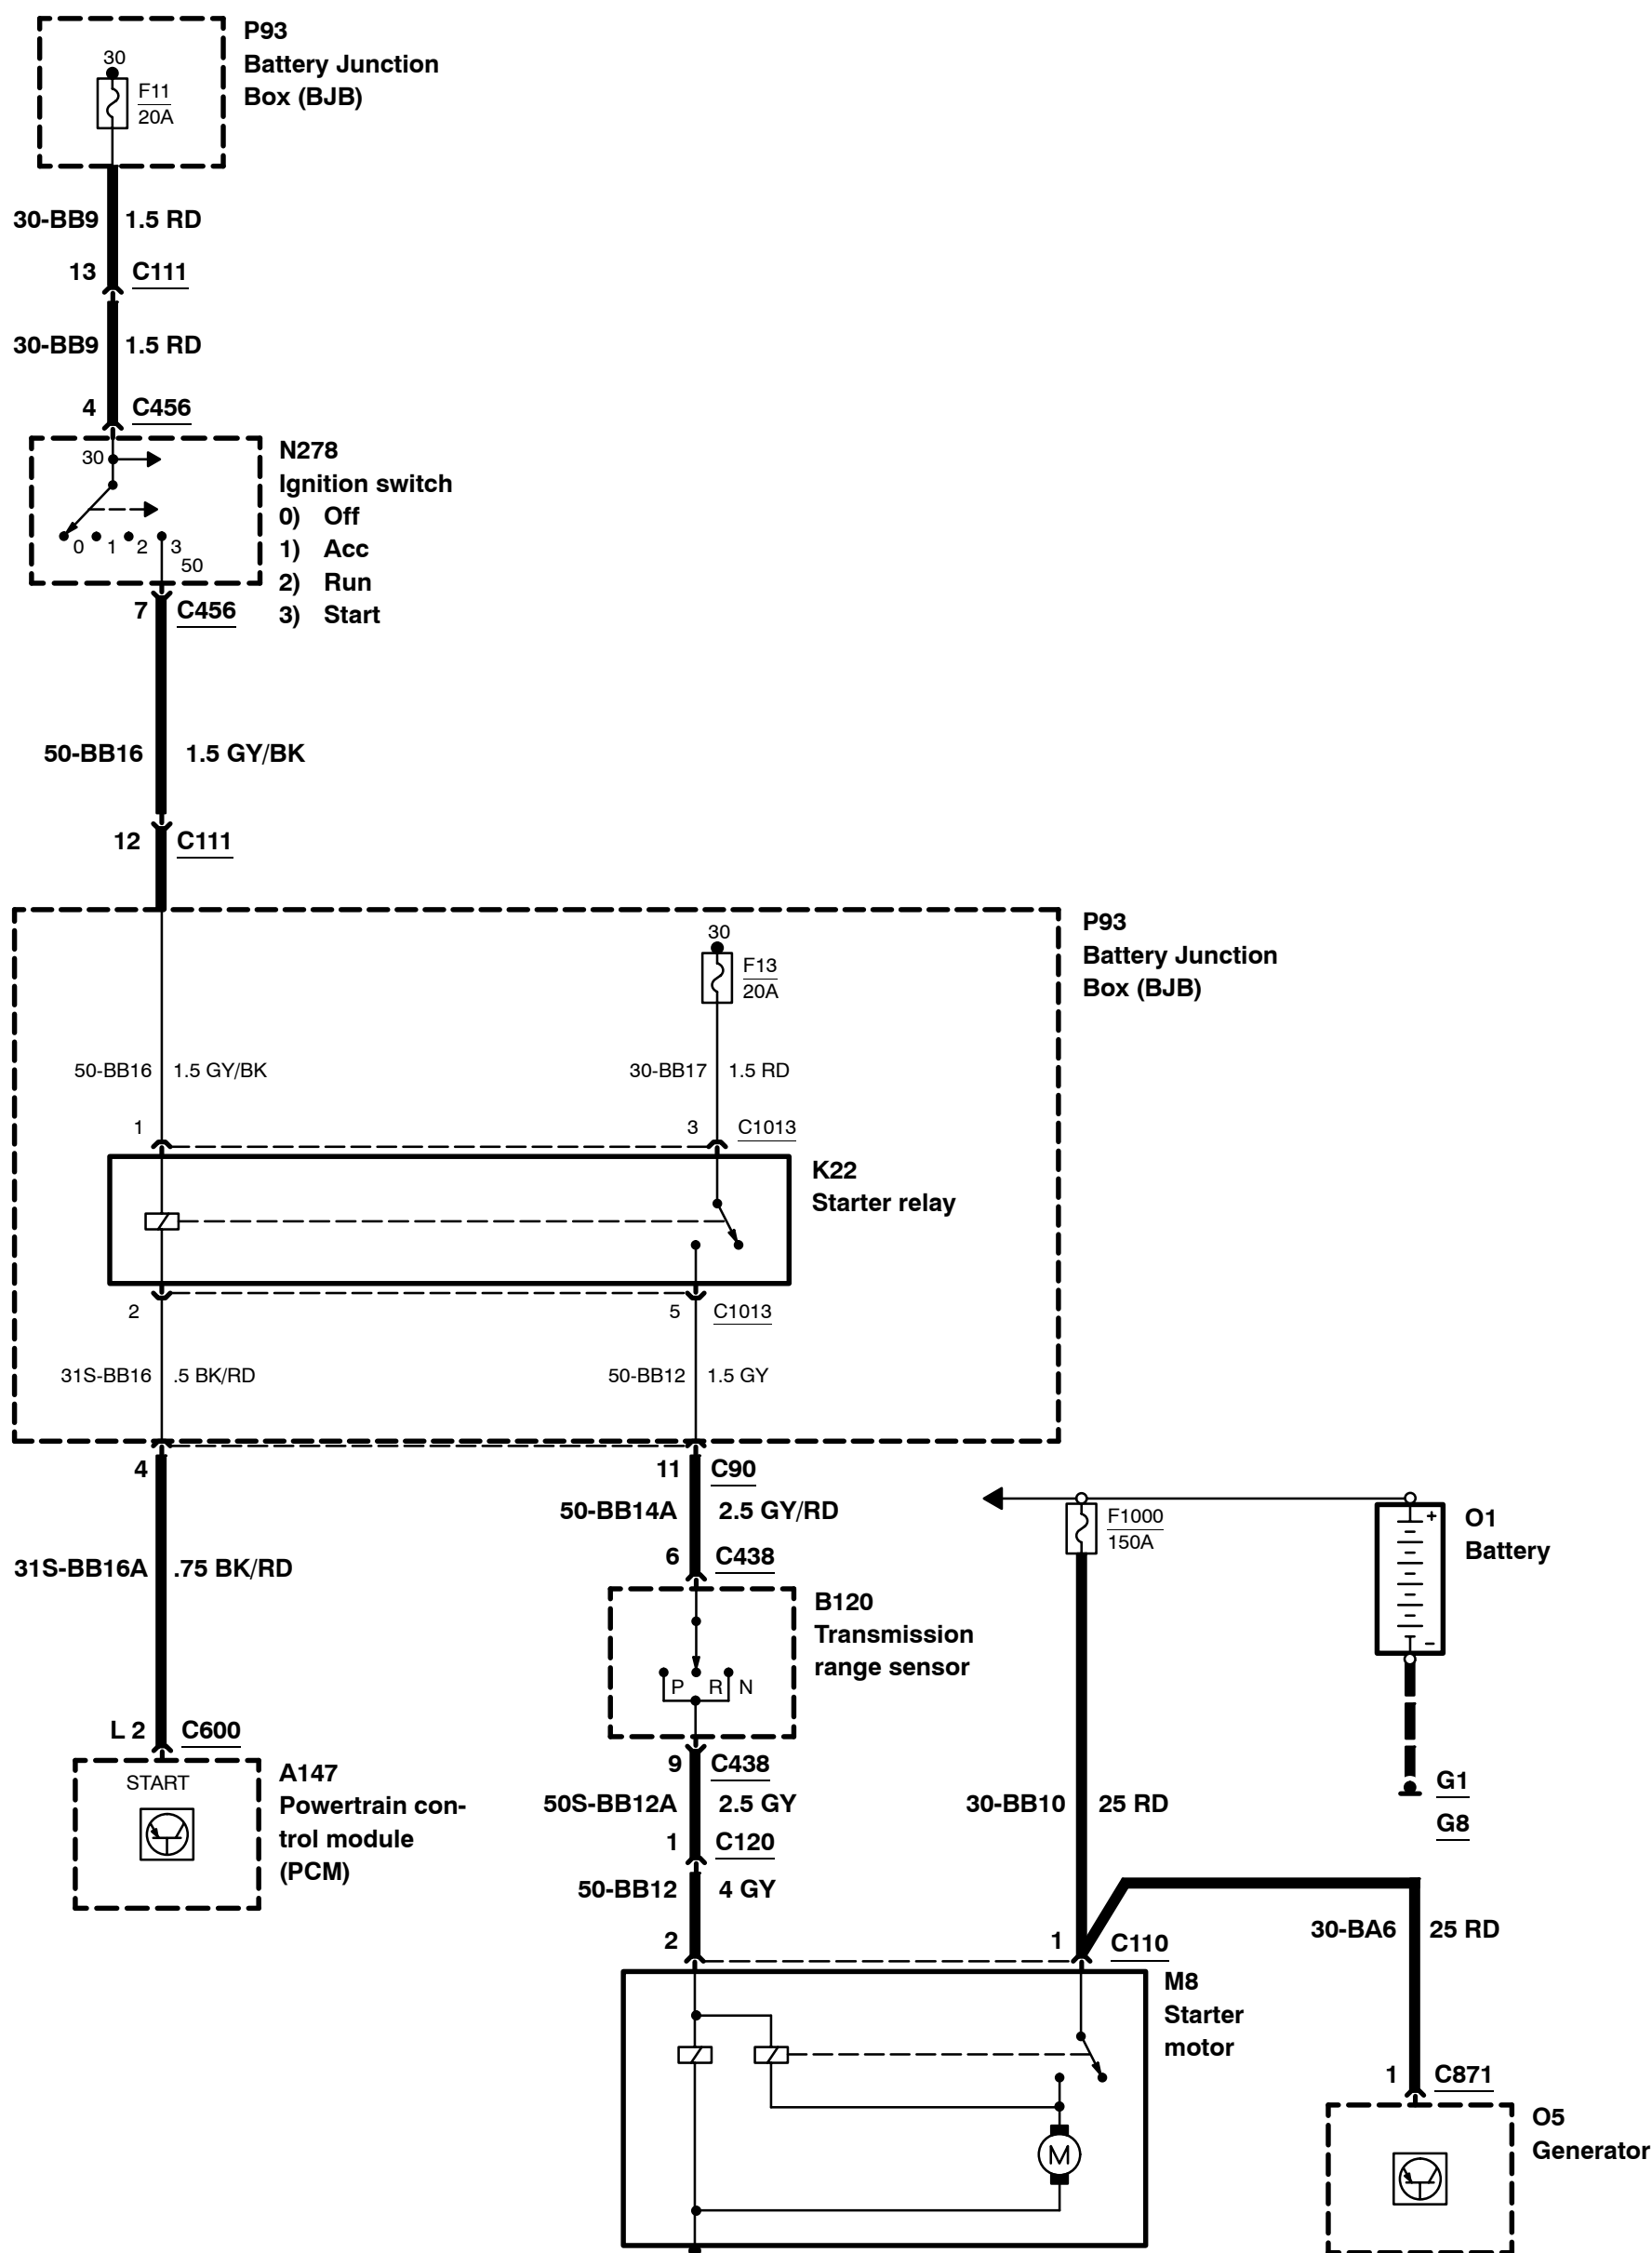


# Starting System – 2.0L Duratorq–TDCi (DW) Diesel, before model year 2009

02/2008  
303-06C-00-1  
2008.25  
Focus

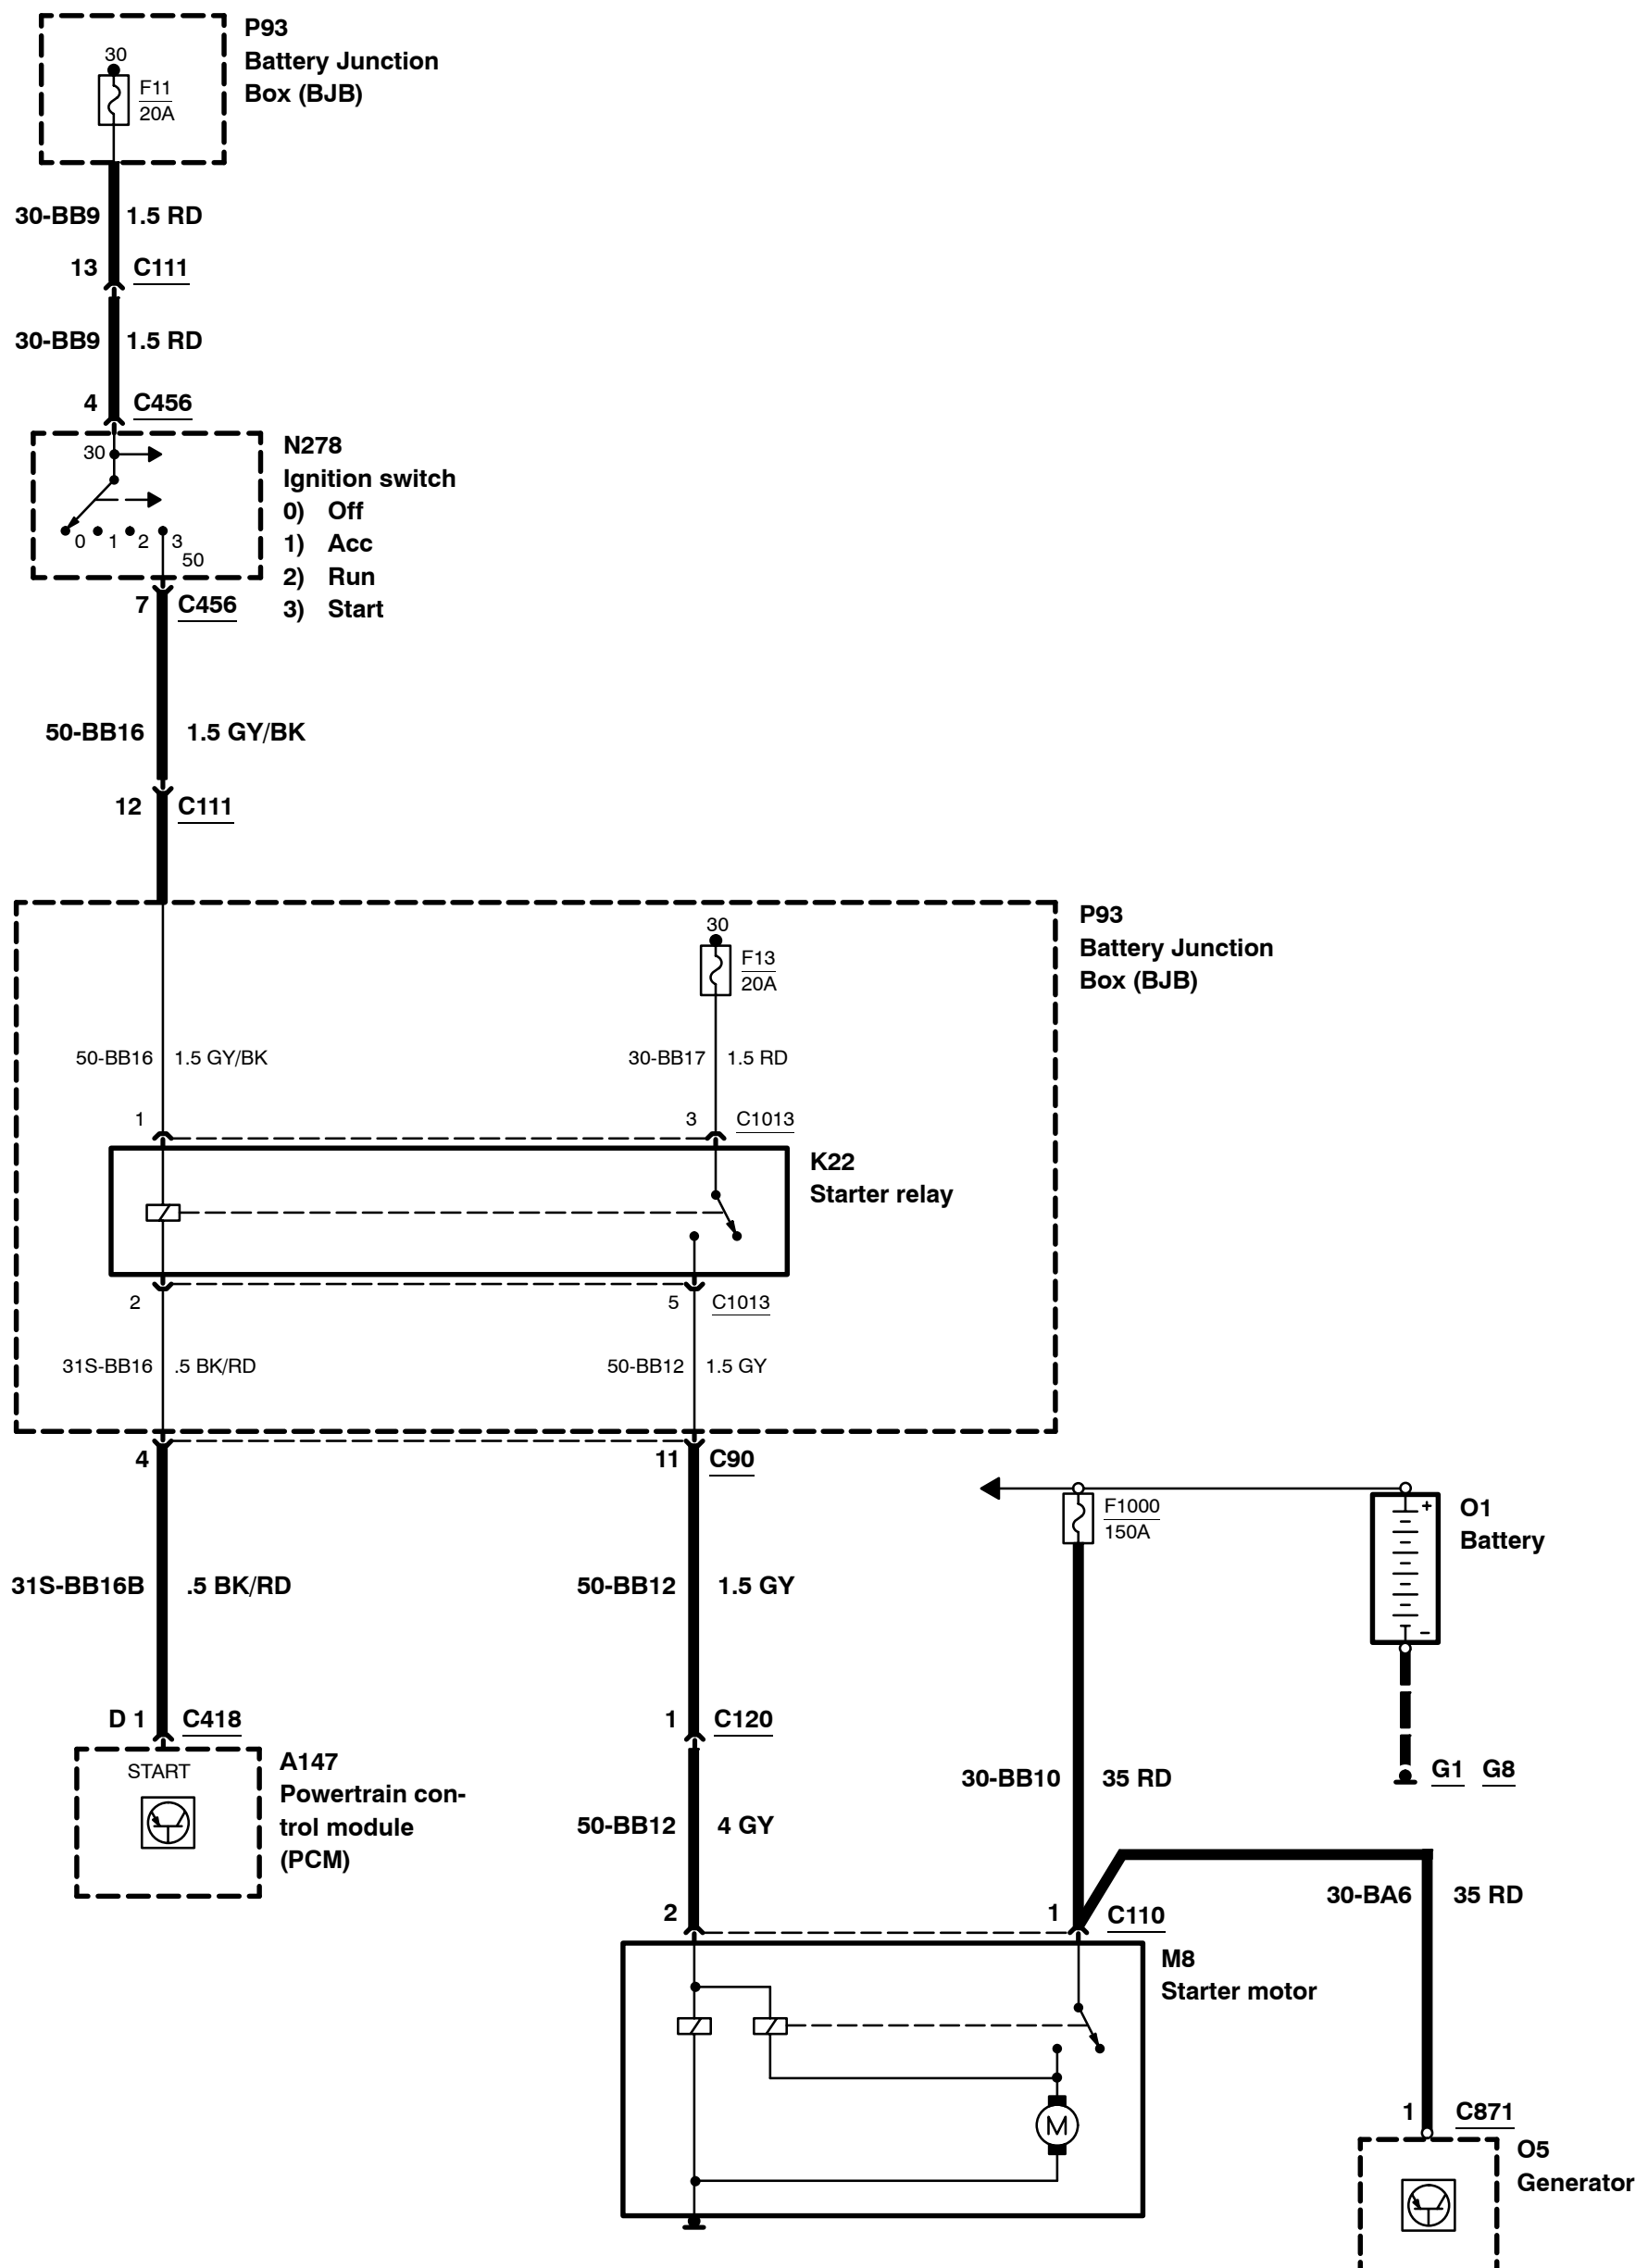


# Starting System – 2.0L Duratorq–TDCi (DW) Diesel, as of model year 2009, manual transmission (MPS6), with diesel particulate filter

02/2008  
303-06C-00-2  
2008.25  
Focus

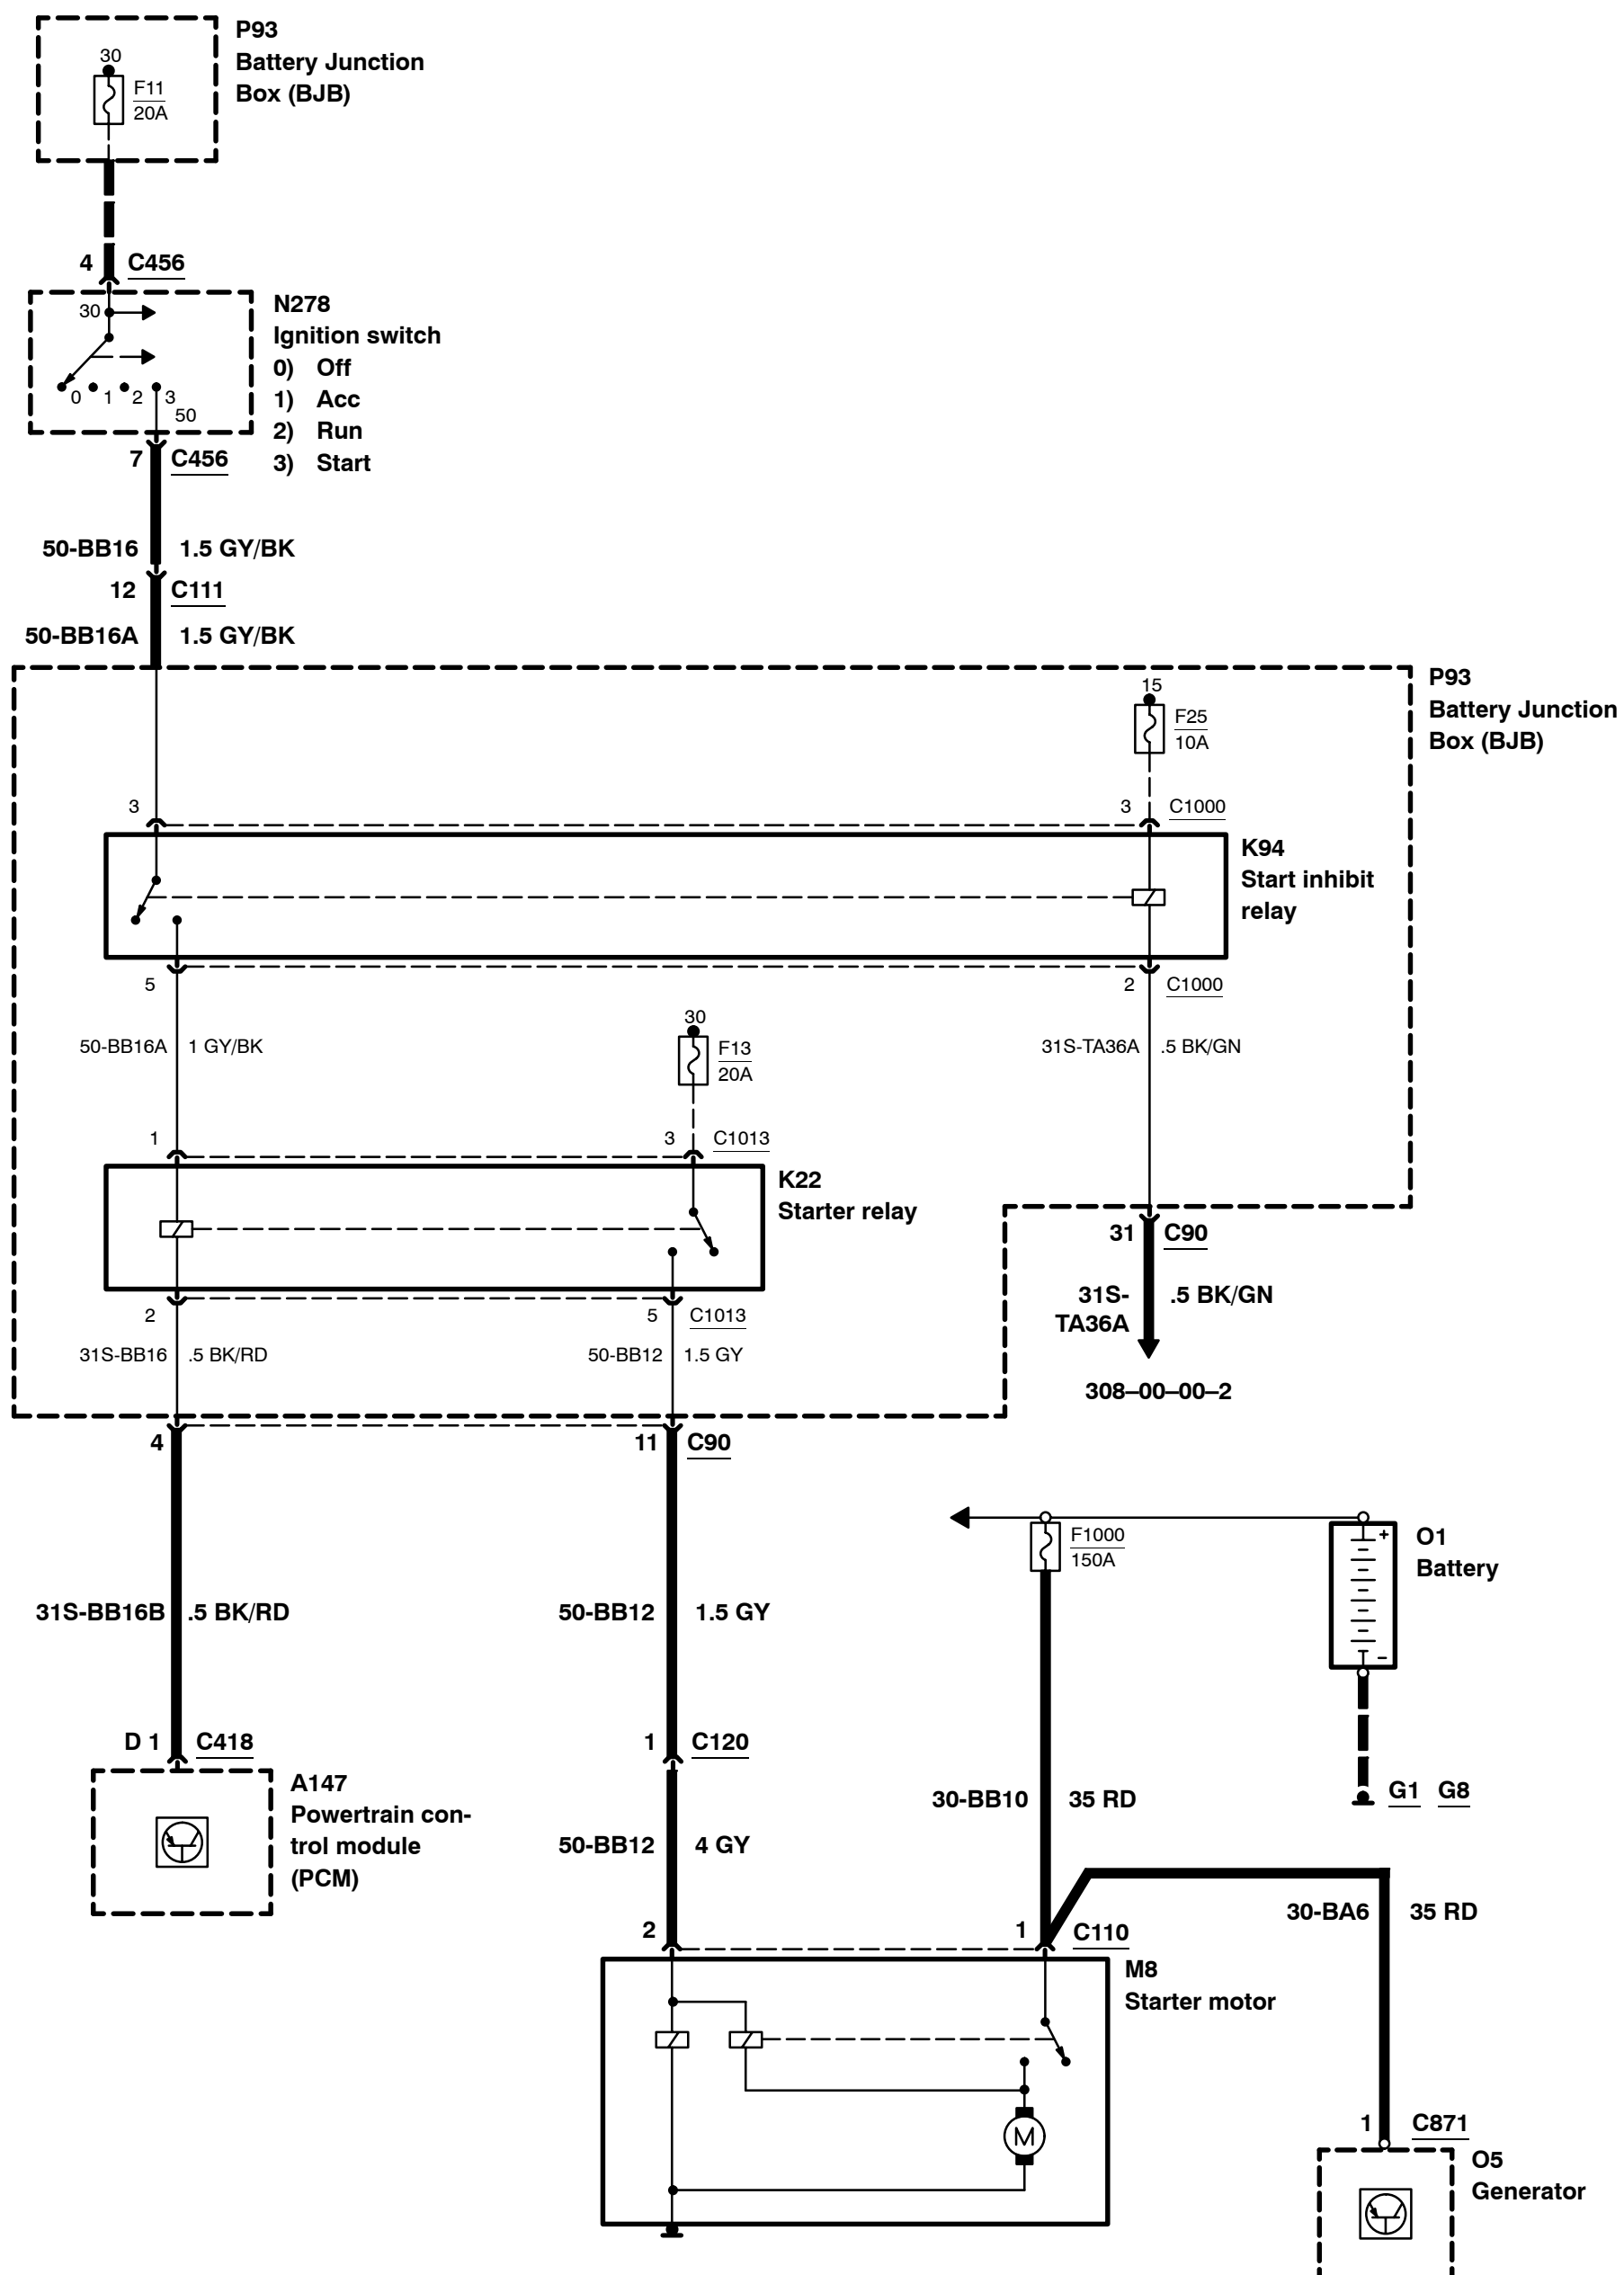


# Starting System – 2.0L Duratorq–TDCi (DW) Diesel, as of model year 2009, manual transmission (MPS6), with coated diesel particulate filter

02/2008  
303-06C-00-3  
2008.25  
Focus

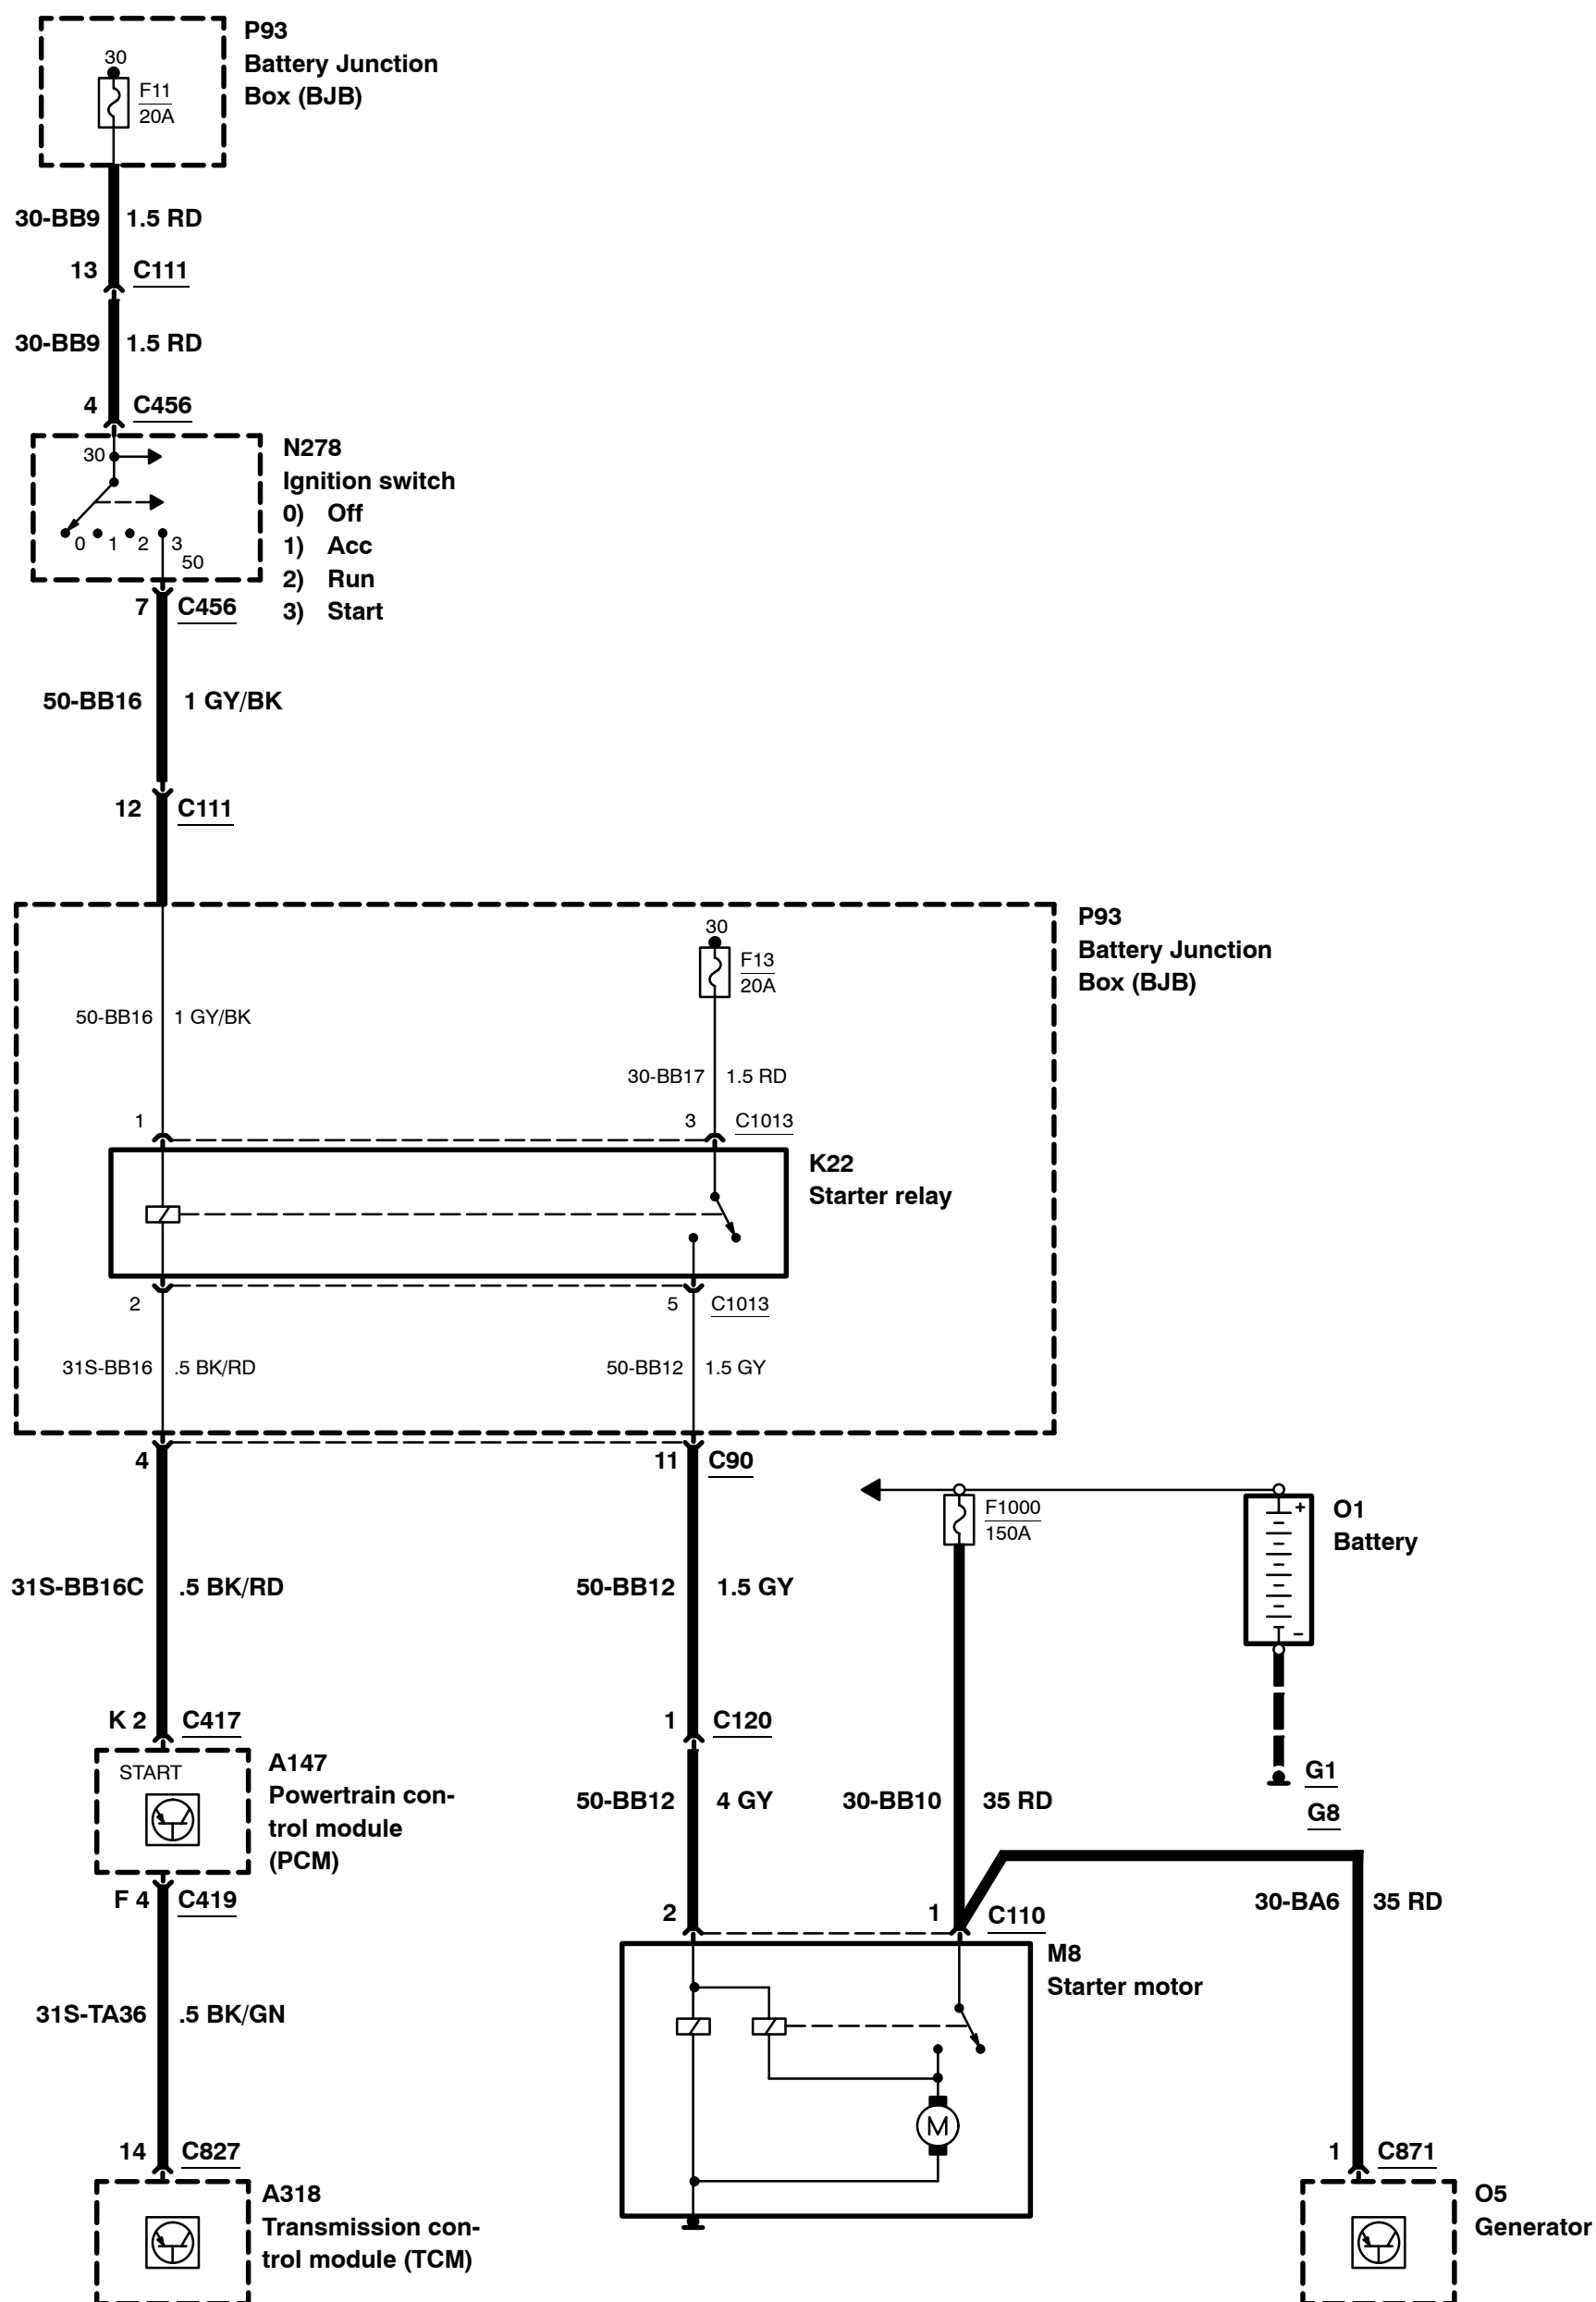

# Engine Ignition – 1.6L (Z6)


02/2008  
303-07A-00-1  
2008.25  
Focus

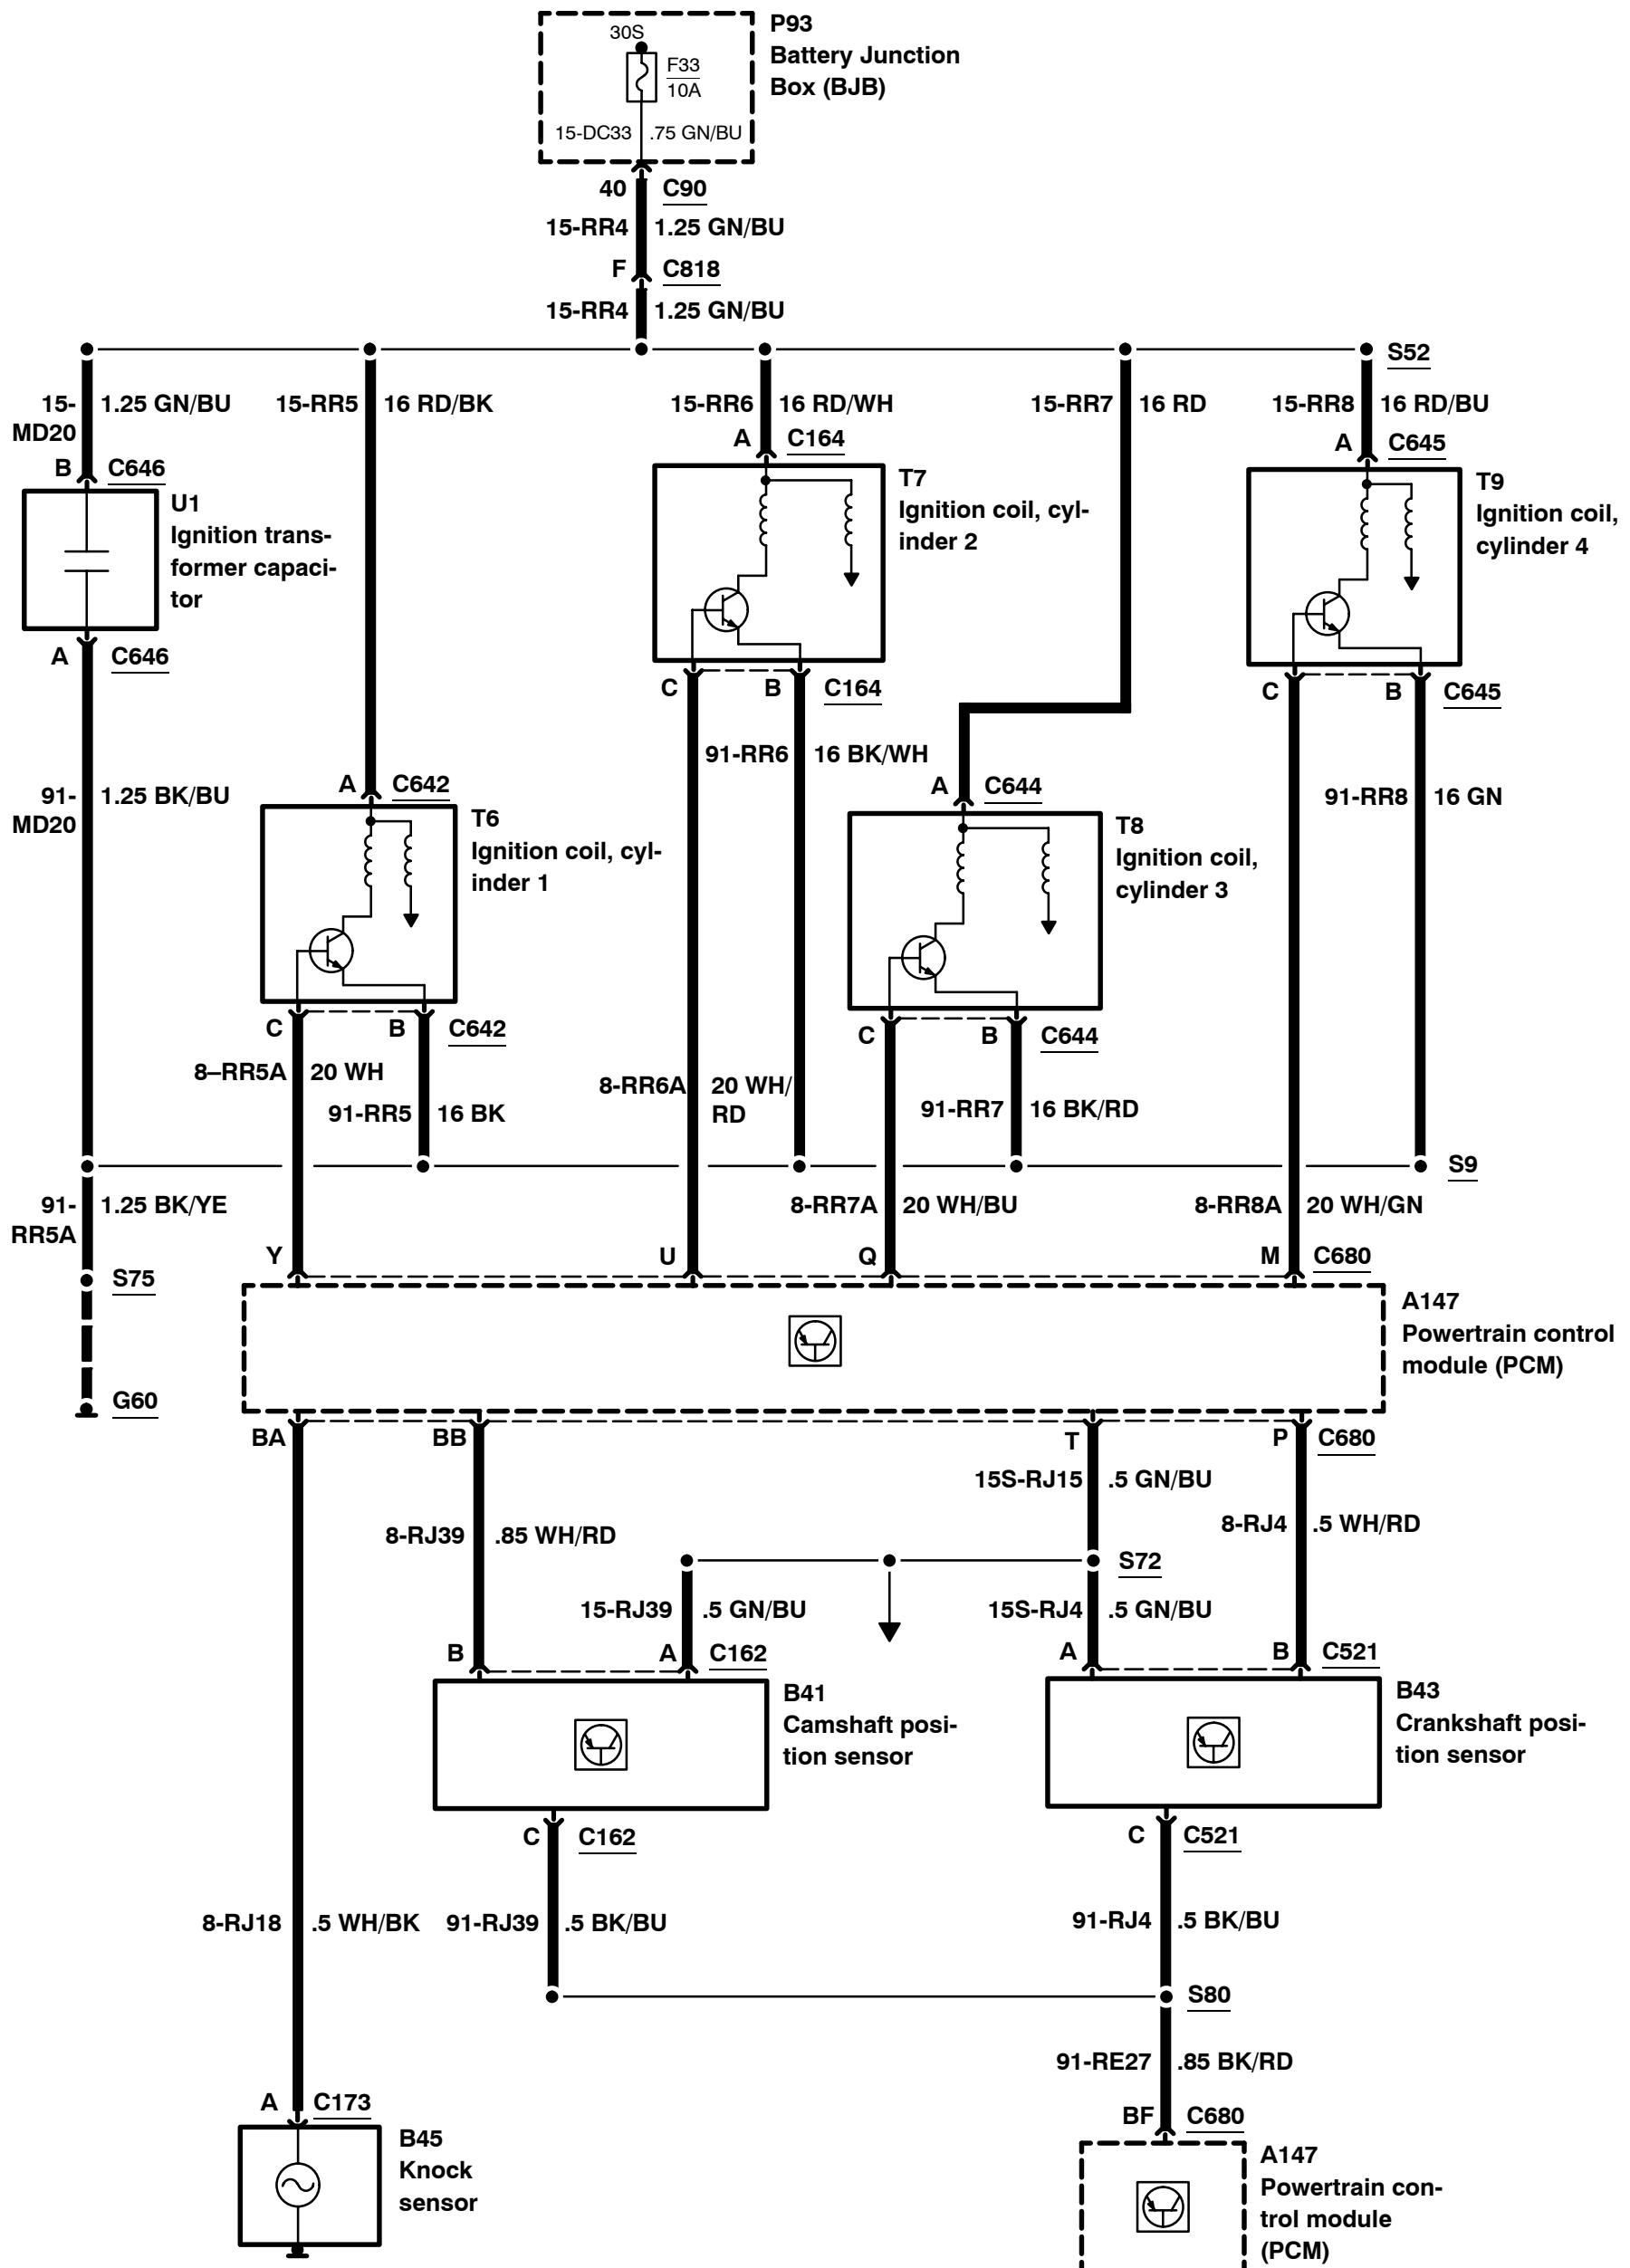




# Engine Ignition – 1.8/2.0L Duratec–HE (MI4), before model year 2009

02/2008  
303-07B-00-1  
2008.25  
Focus

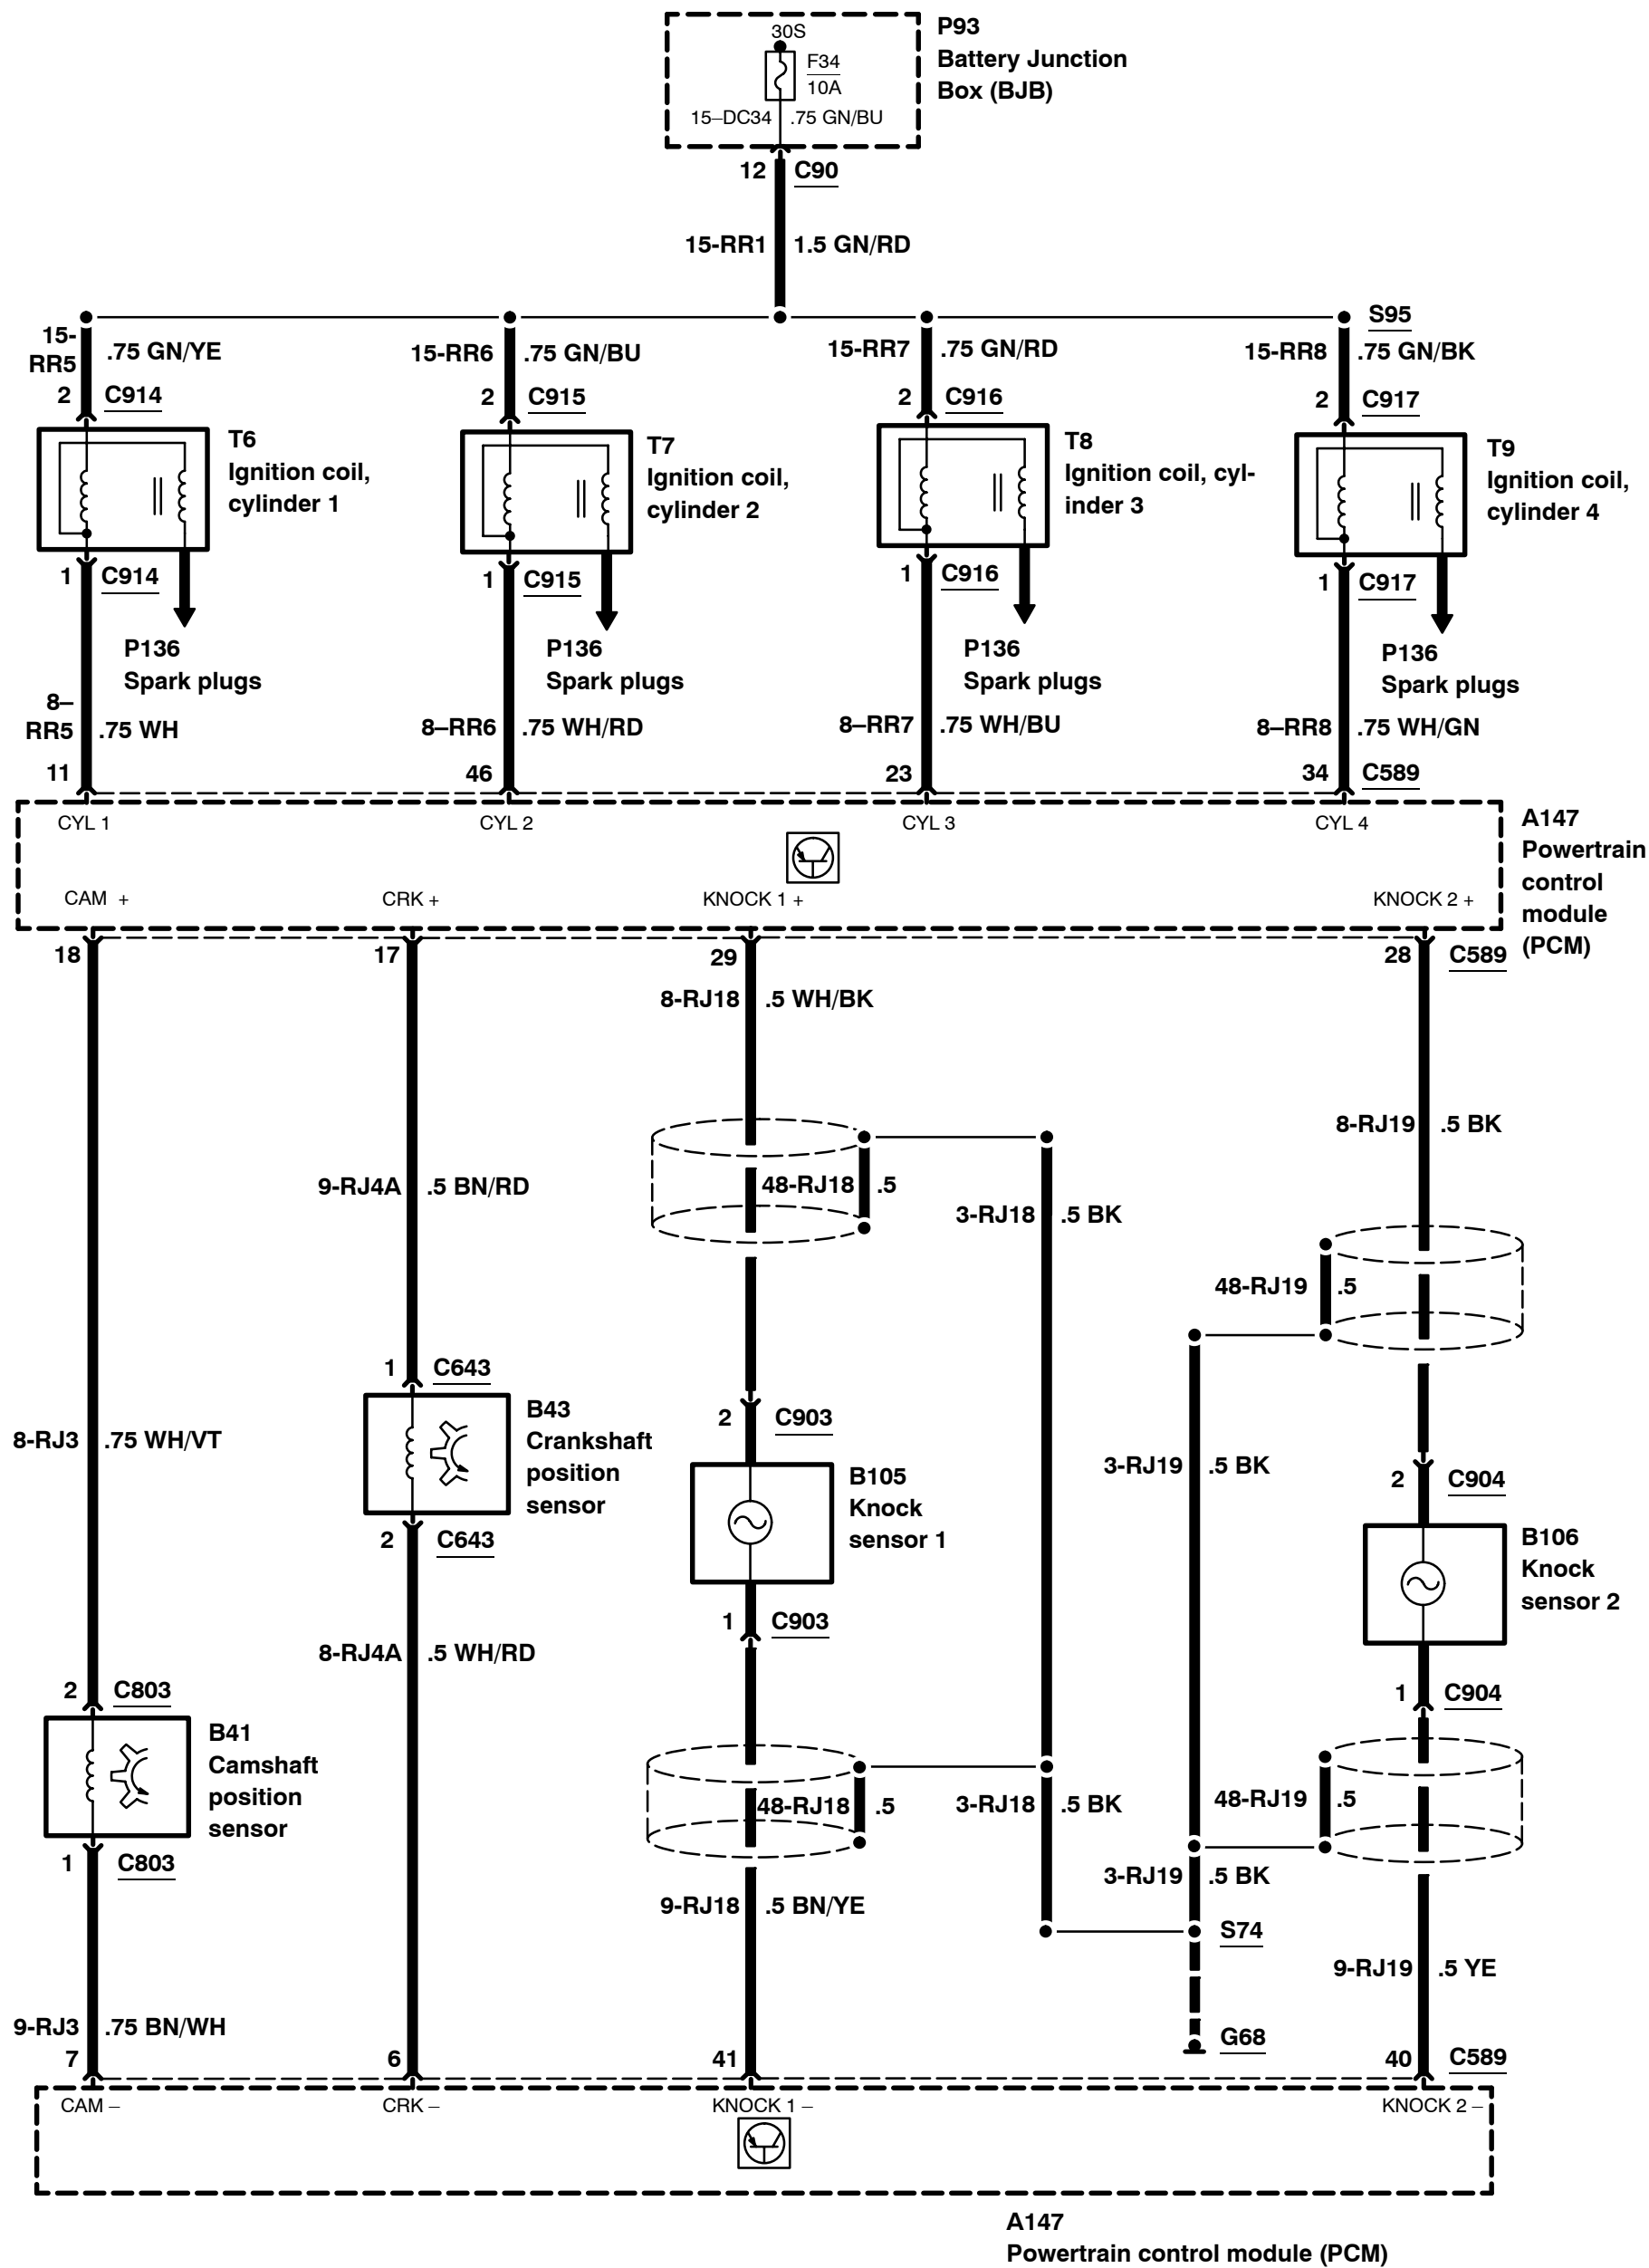

# Engine Ignition – 1.8/2.0L Duratec–HE (MI4), as of model year 2009


02/2008  
303-07B-00-2  
2008.25  
Focus

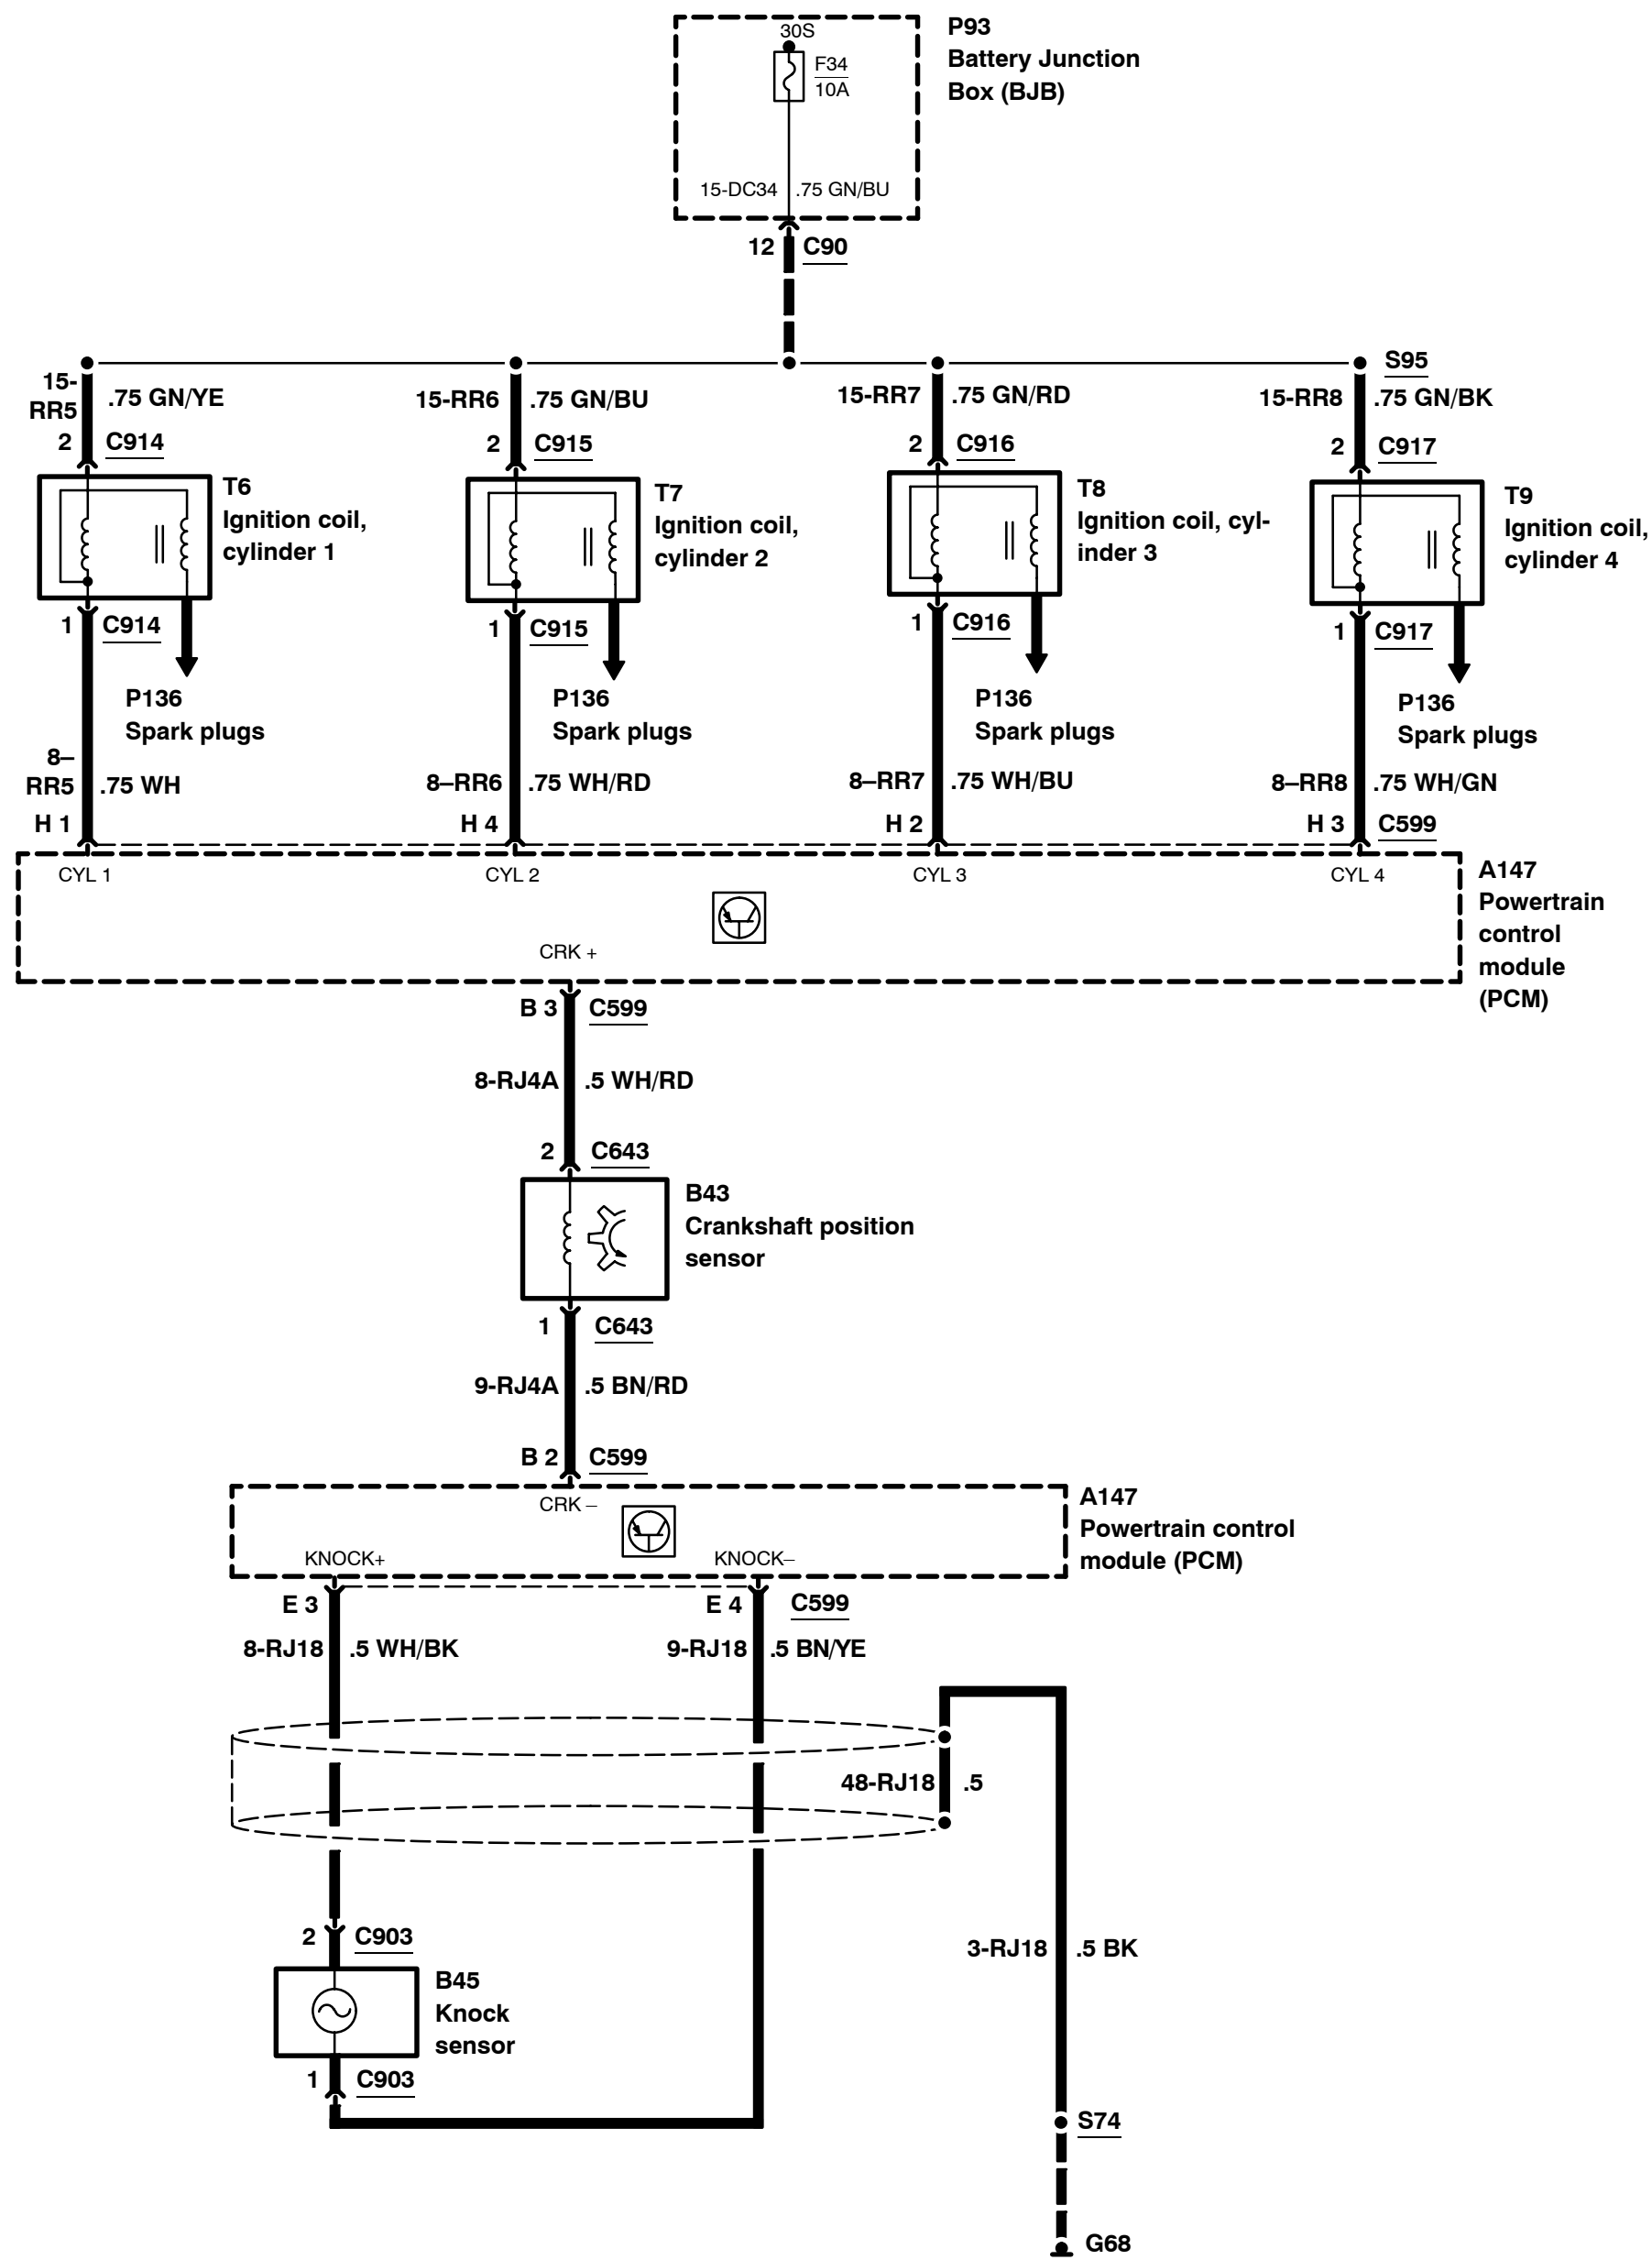




# Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6)


02/2008  
303-07C-00-1  
2008.25  
Focus

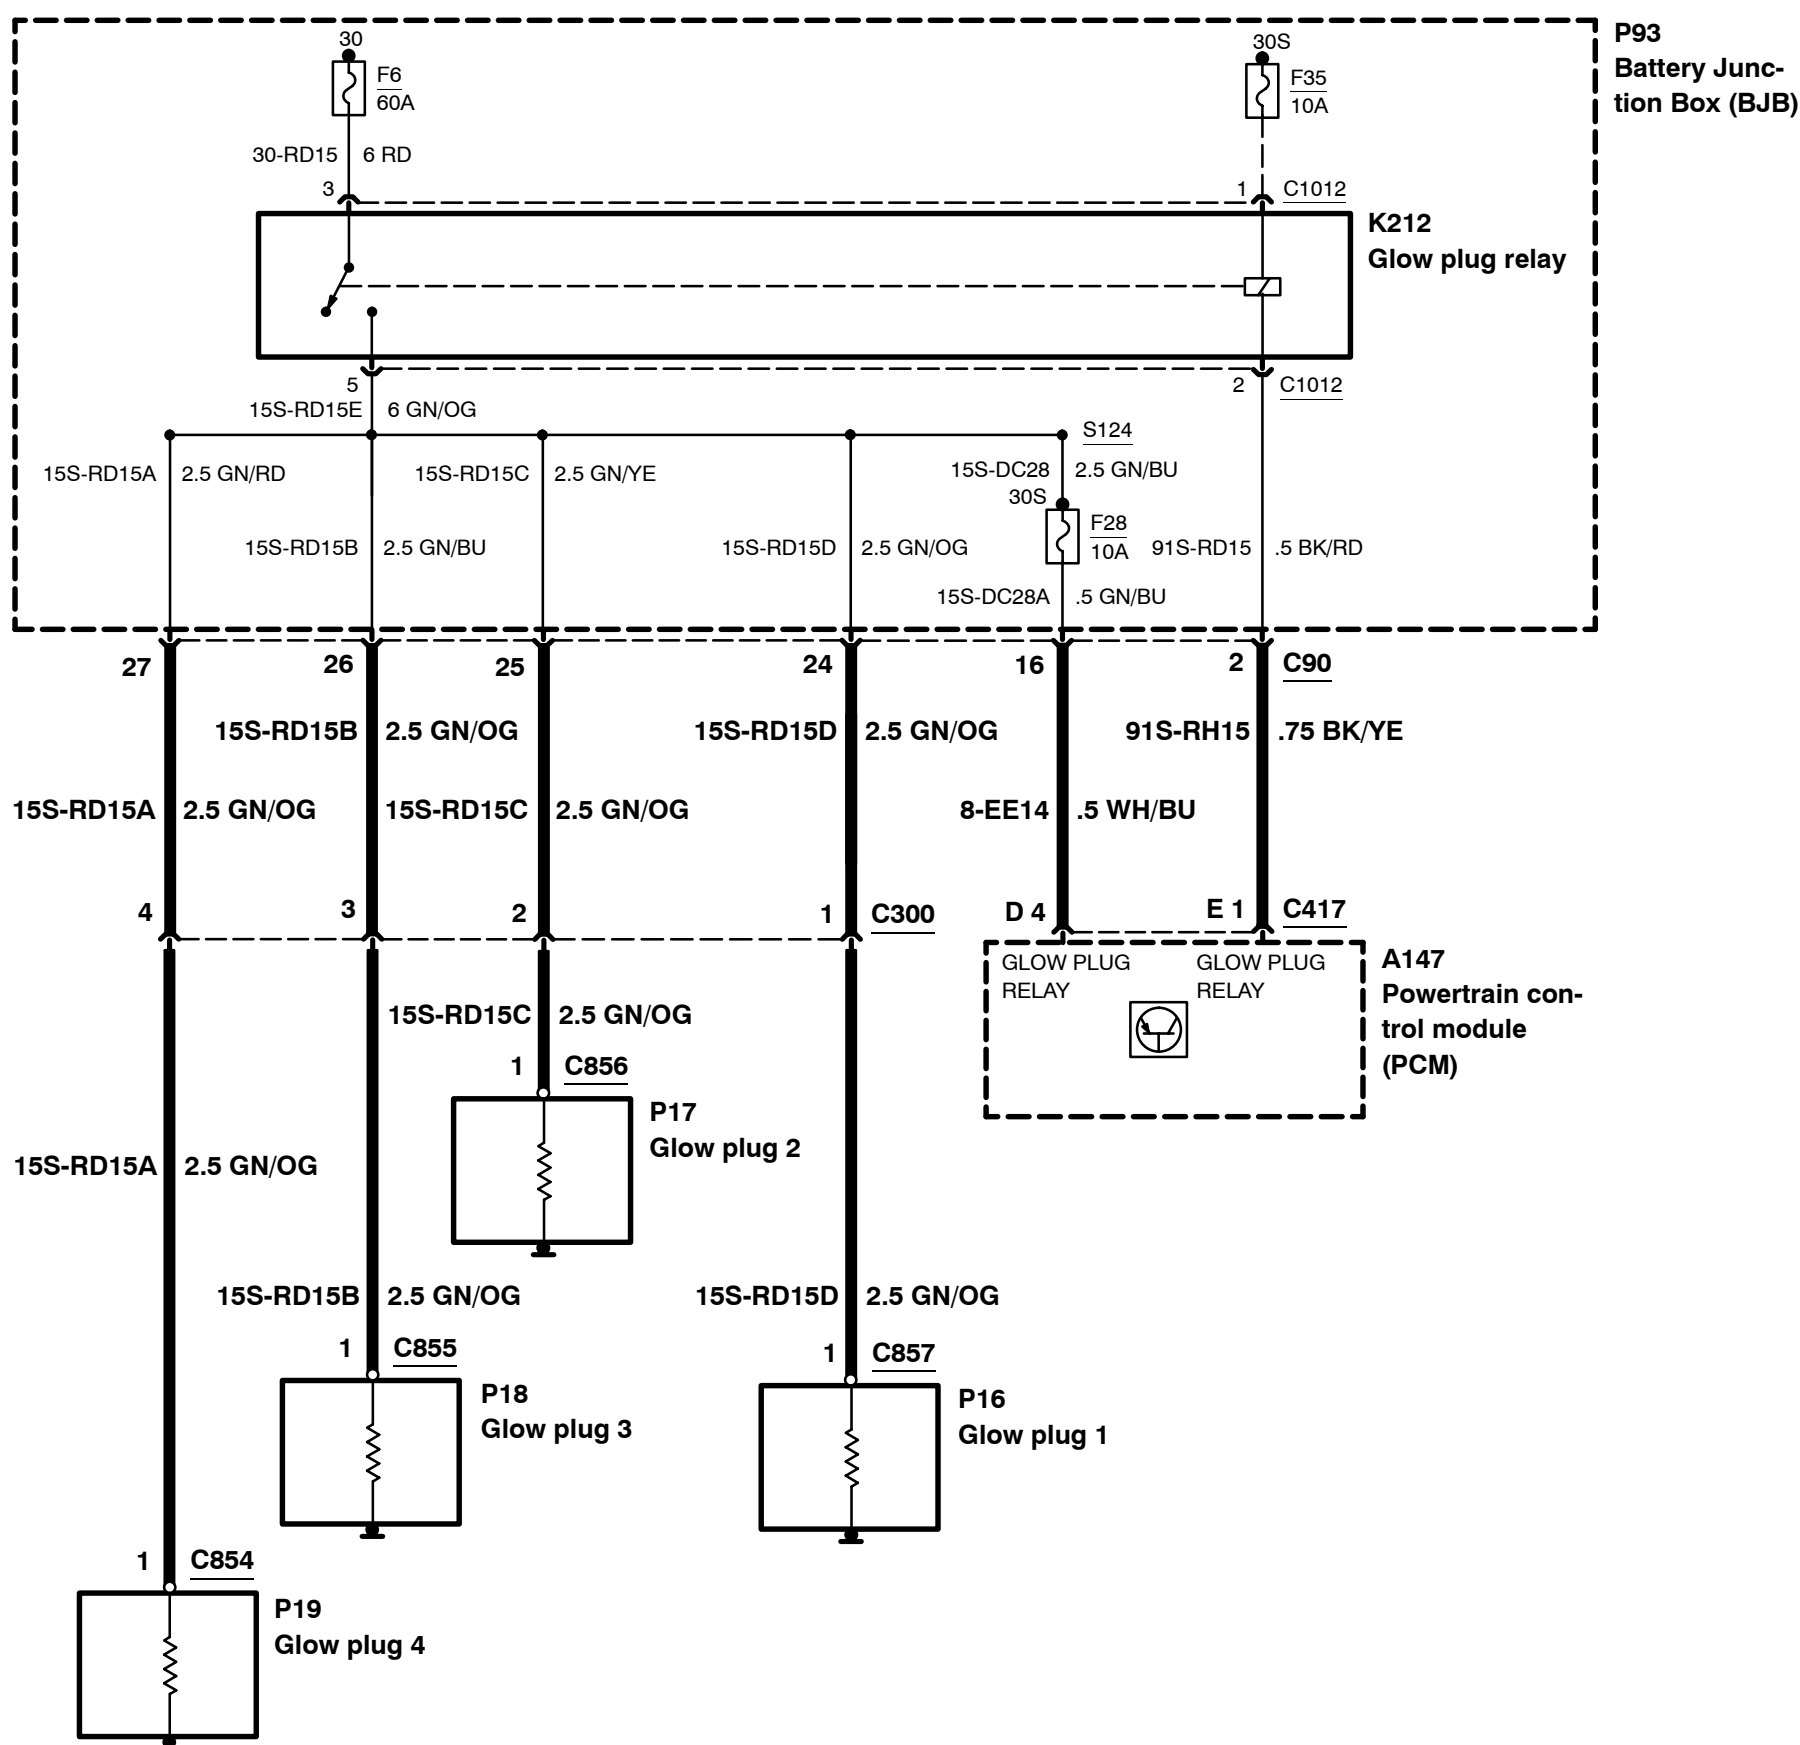

# Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel, manual transmission (MPS6)


02/2008  
303-07C-00-2  
2008.25  
Focus

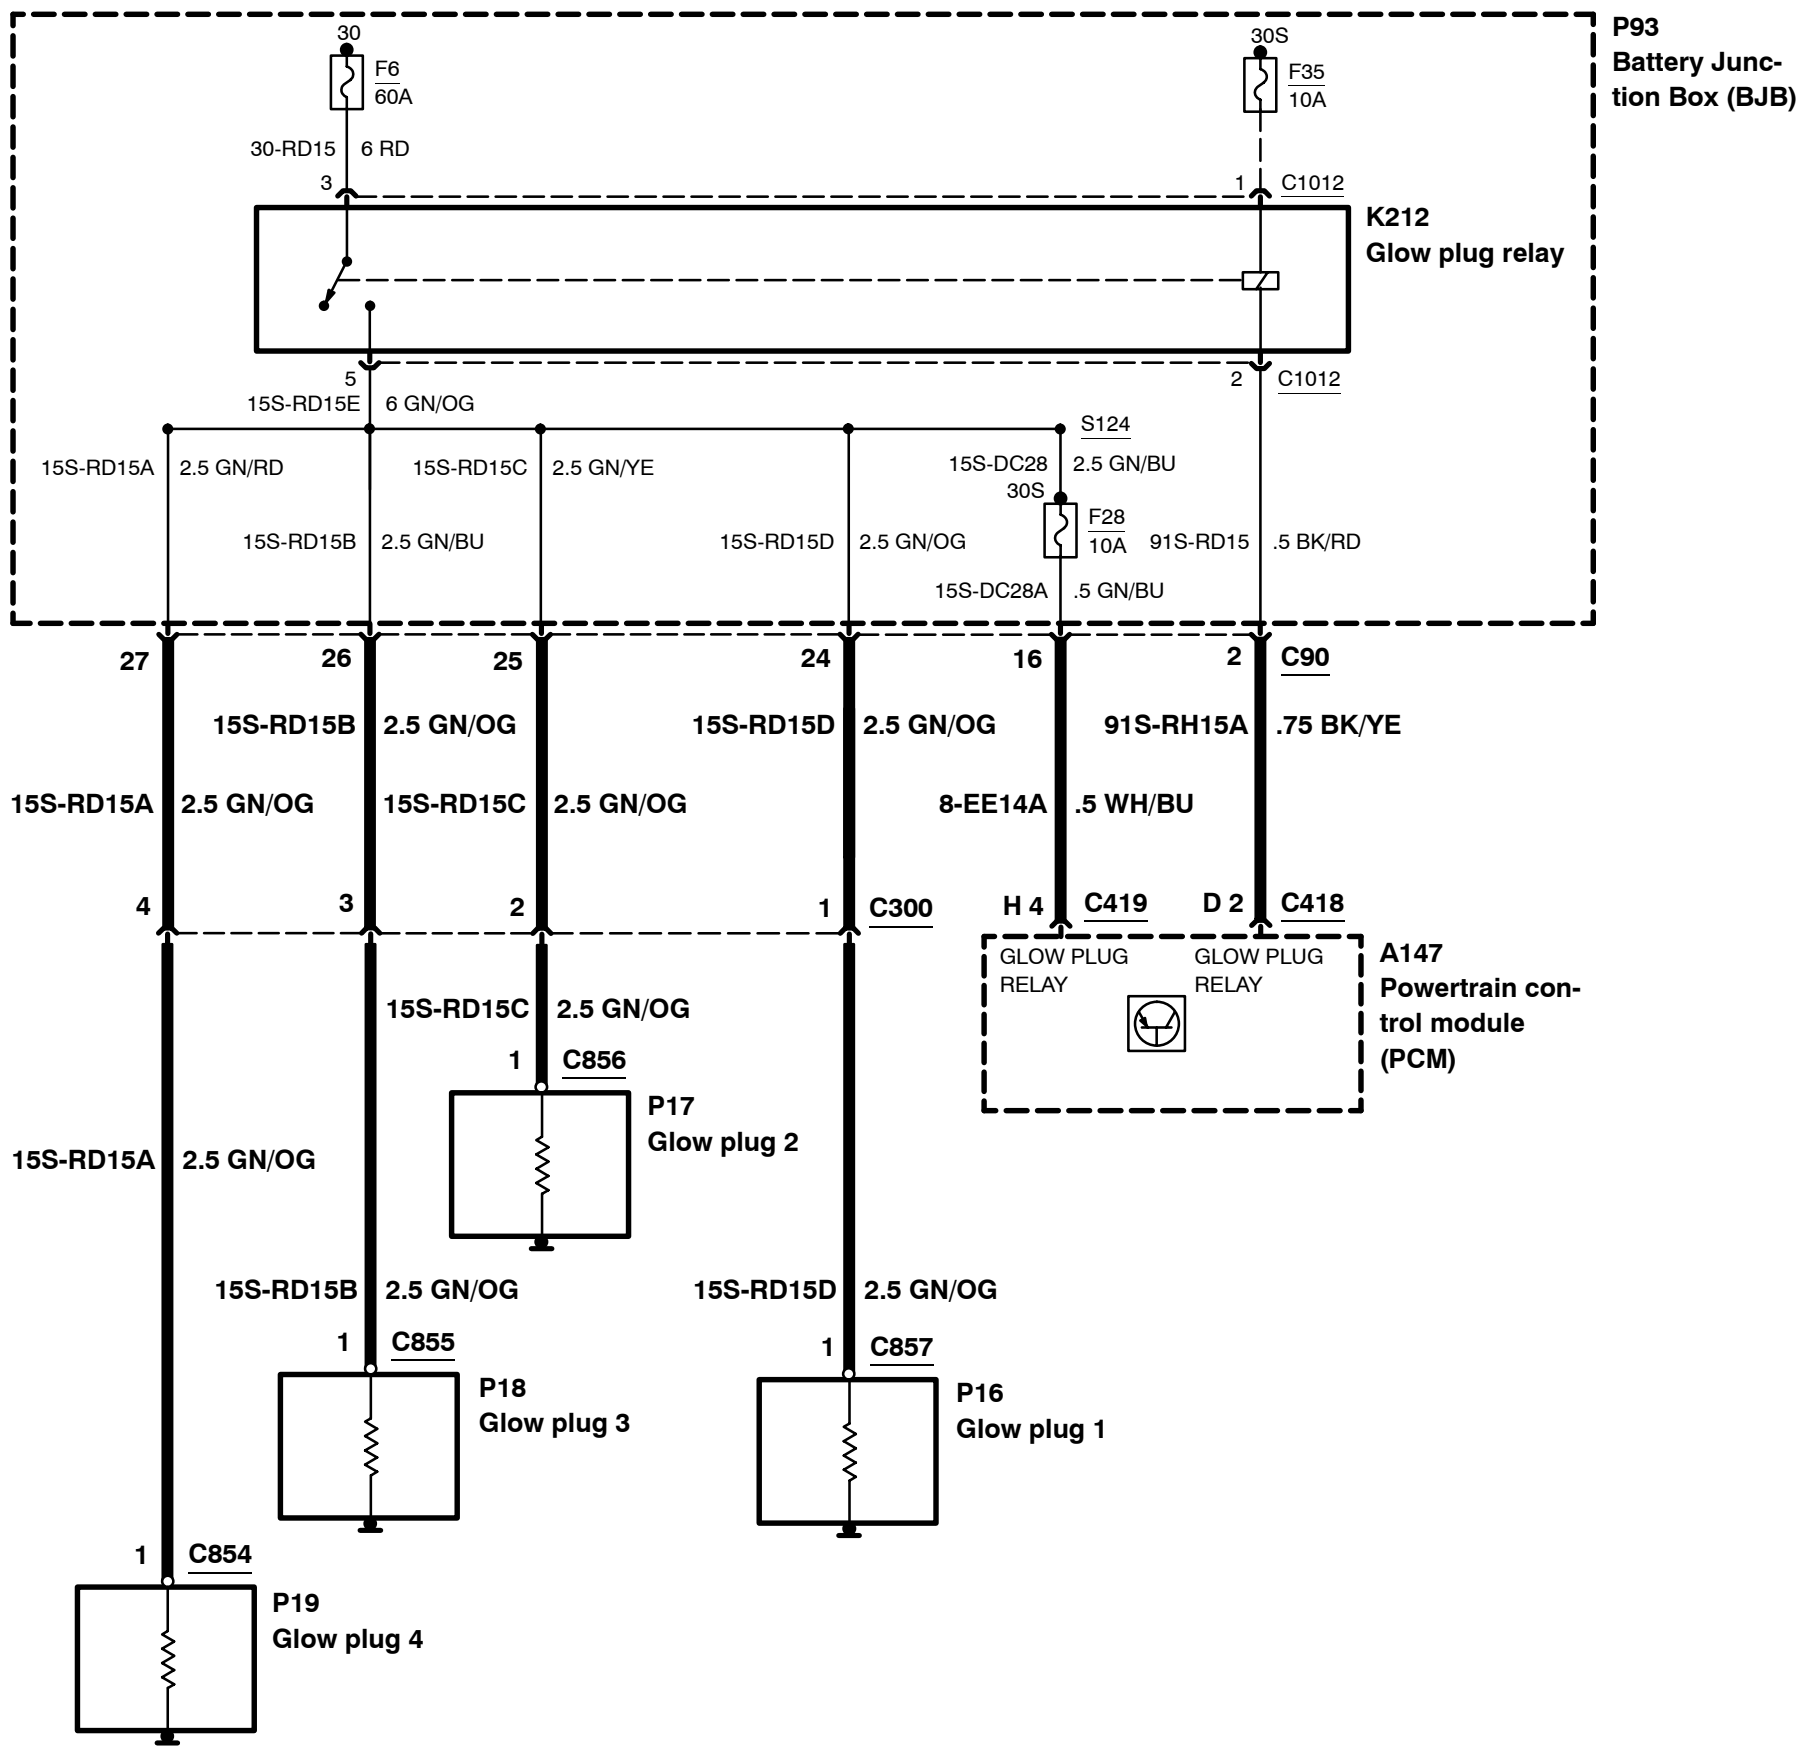


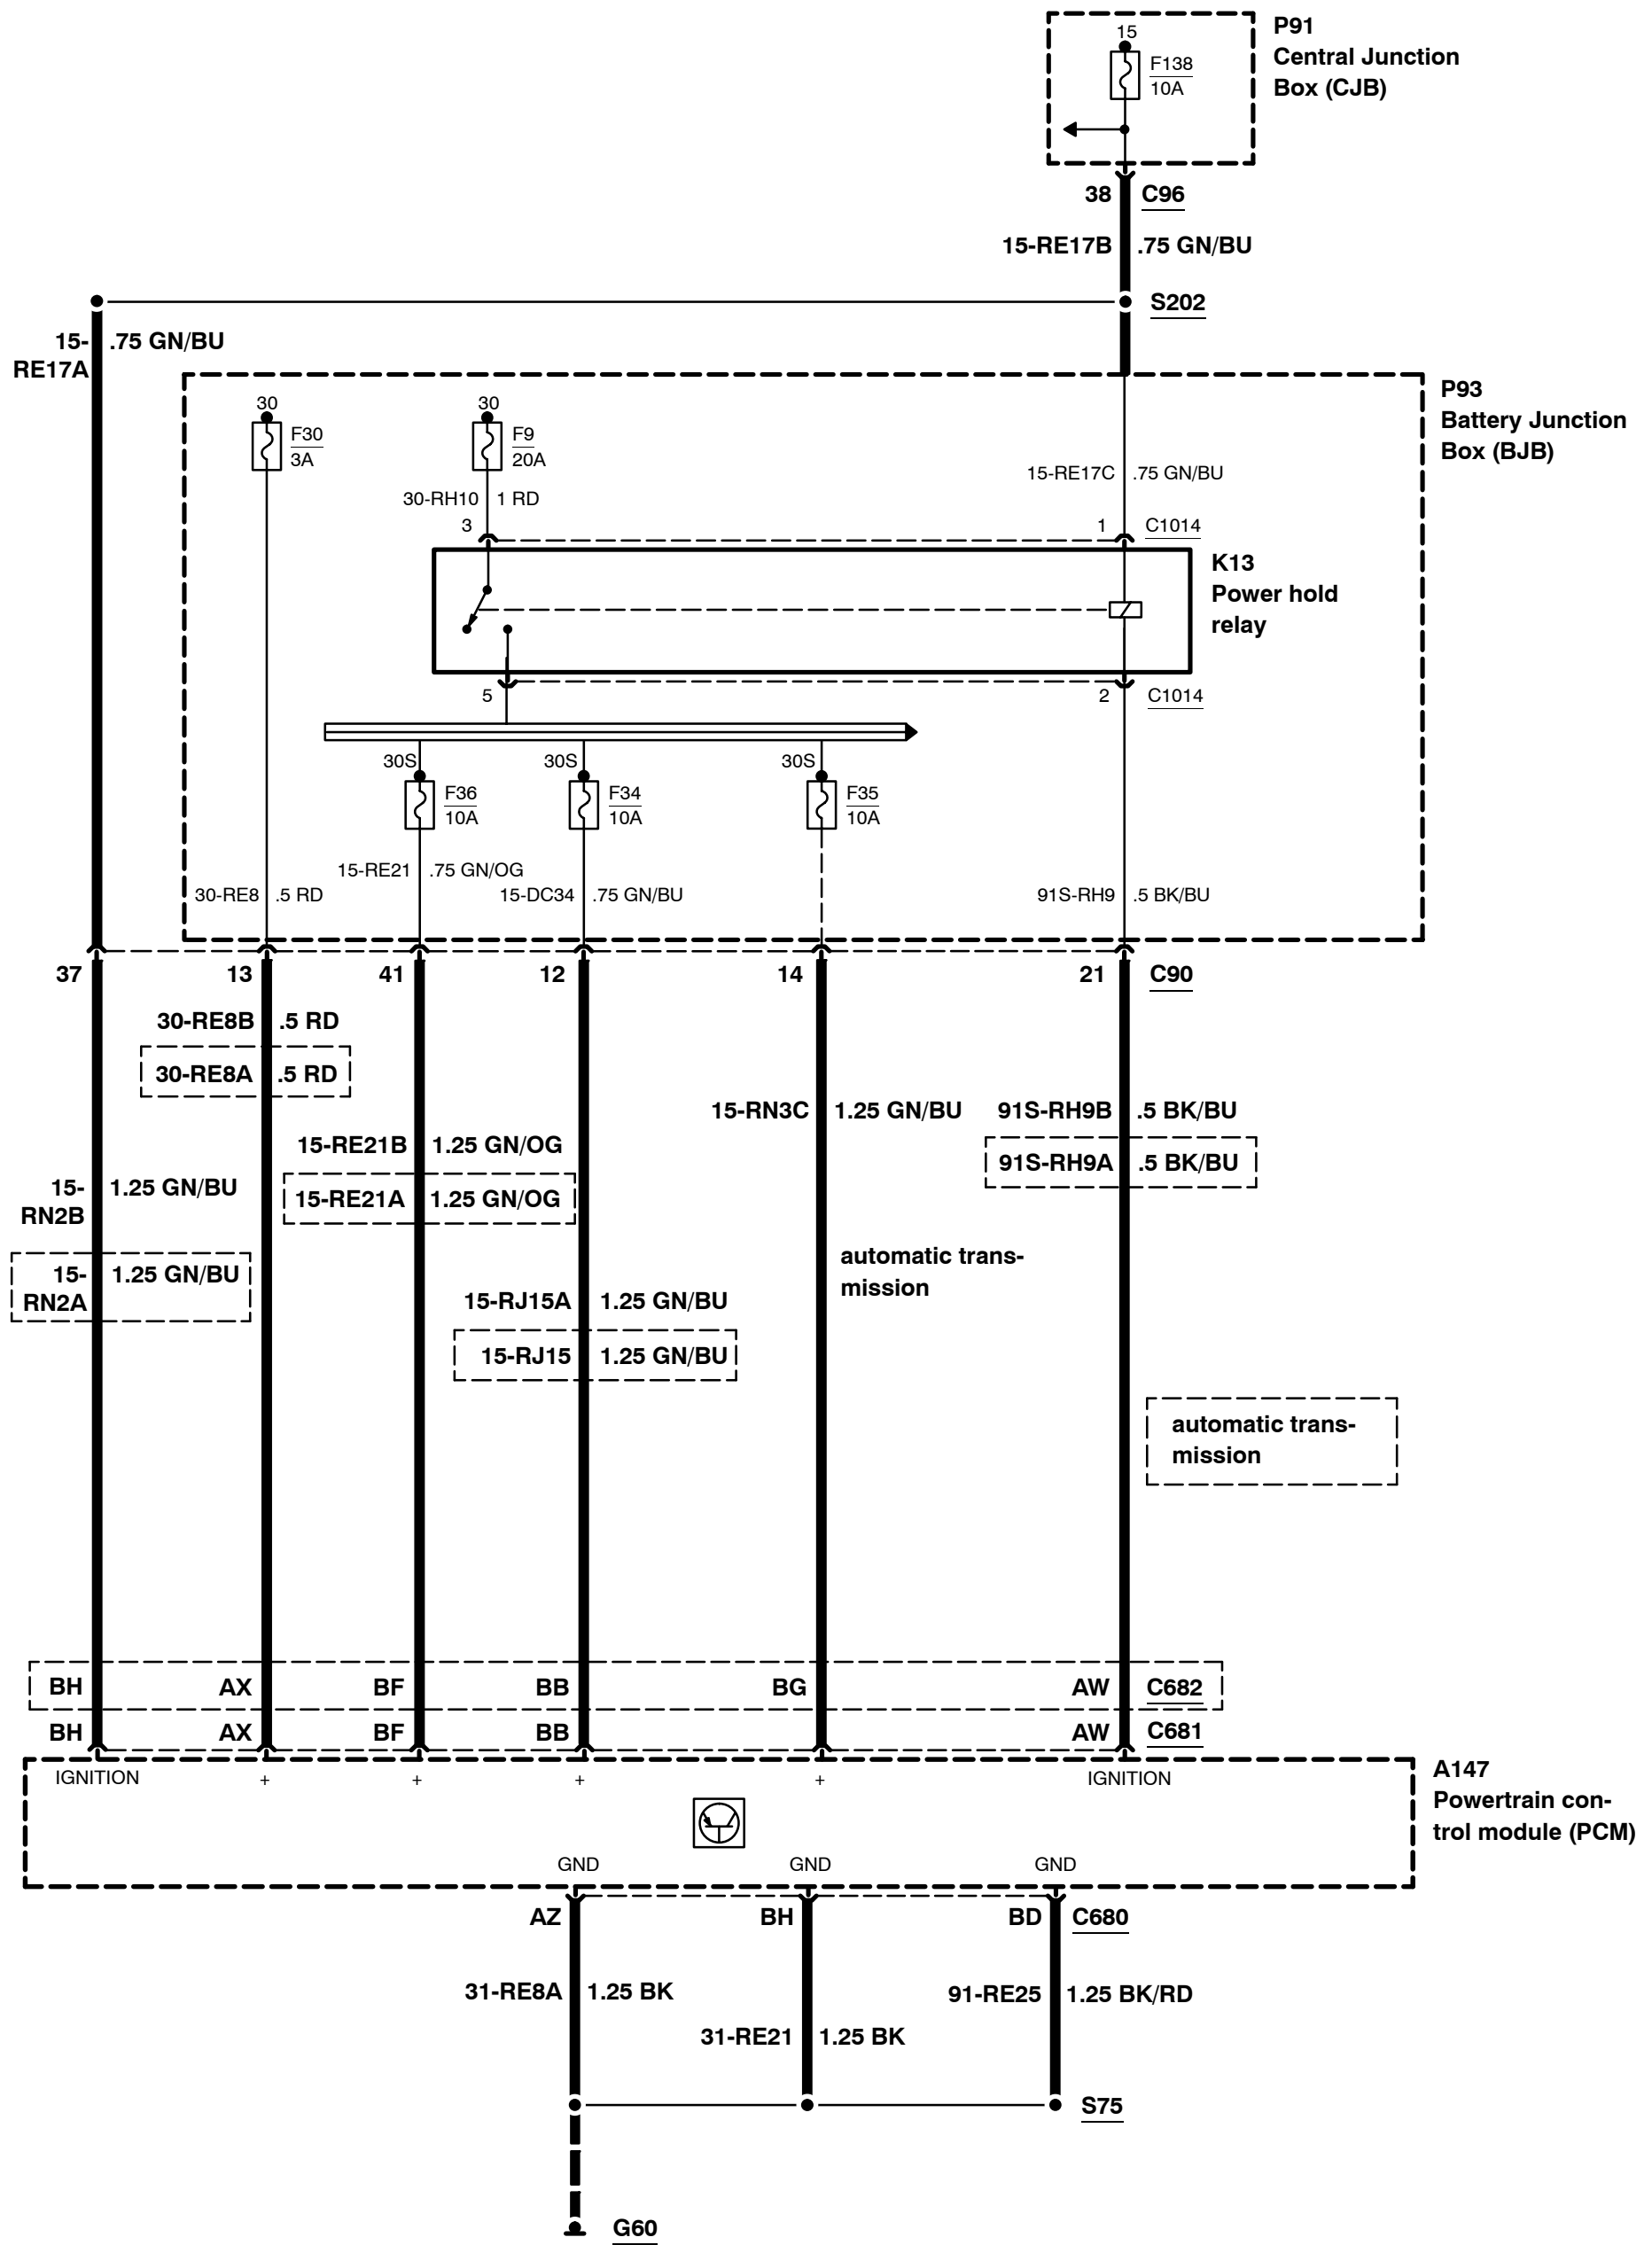


# Electronic Engine Controls – 1.6L (Z6)


02/2008  
303-14A-00-2  
2008.25  
Focus

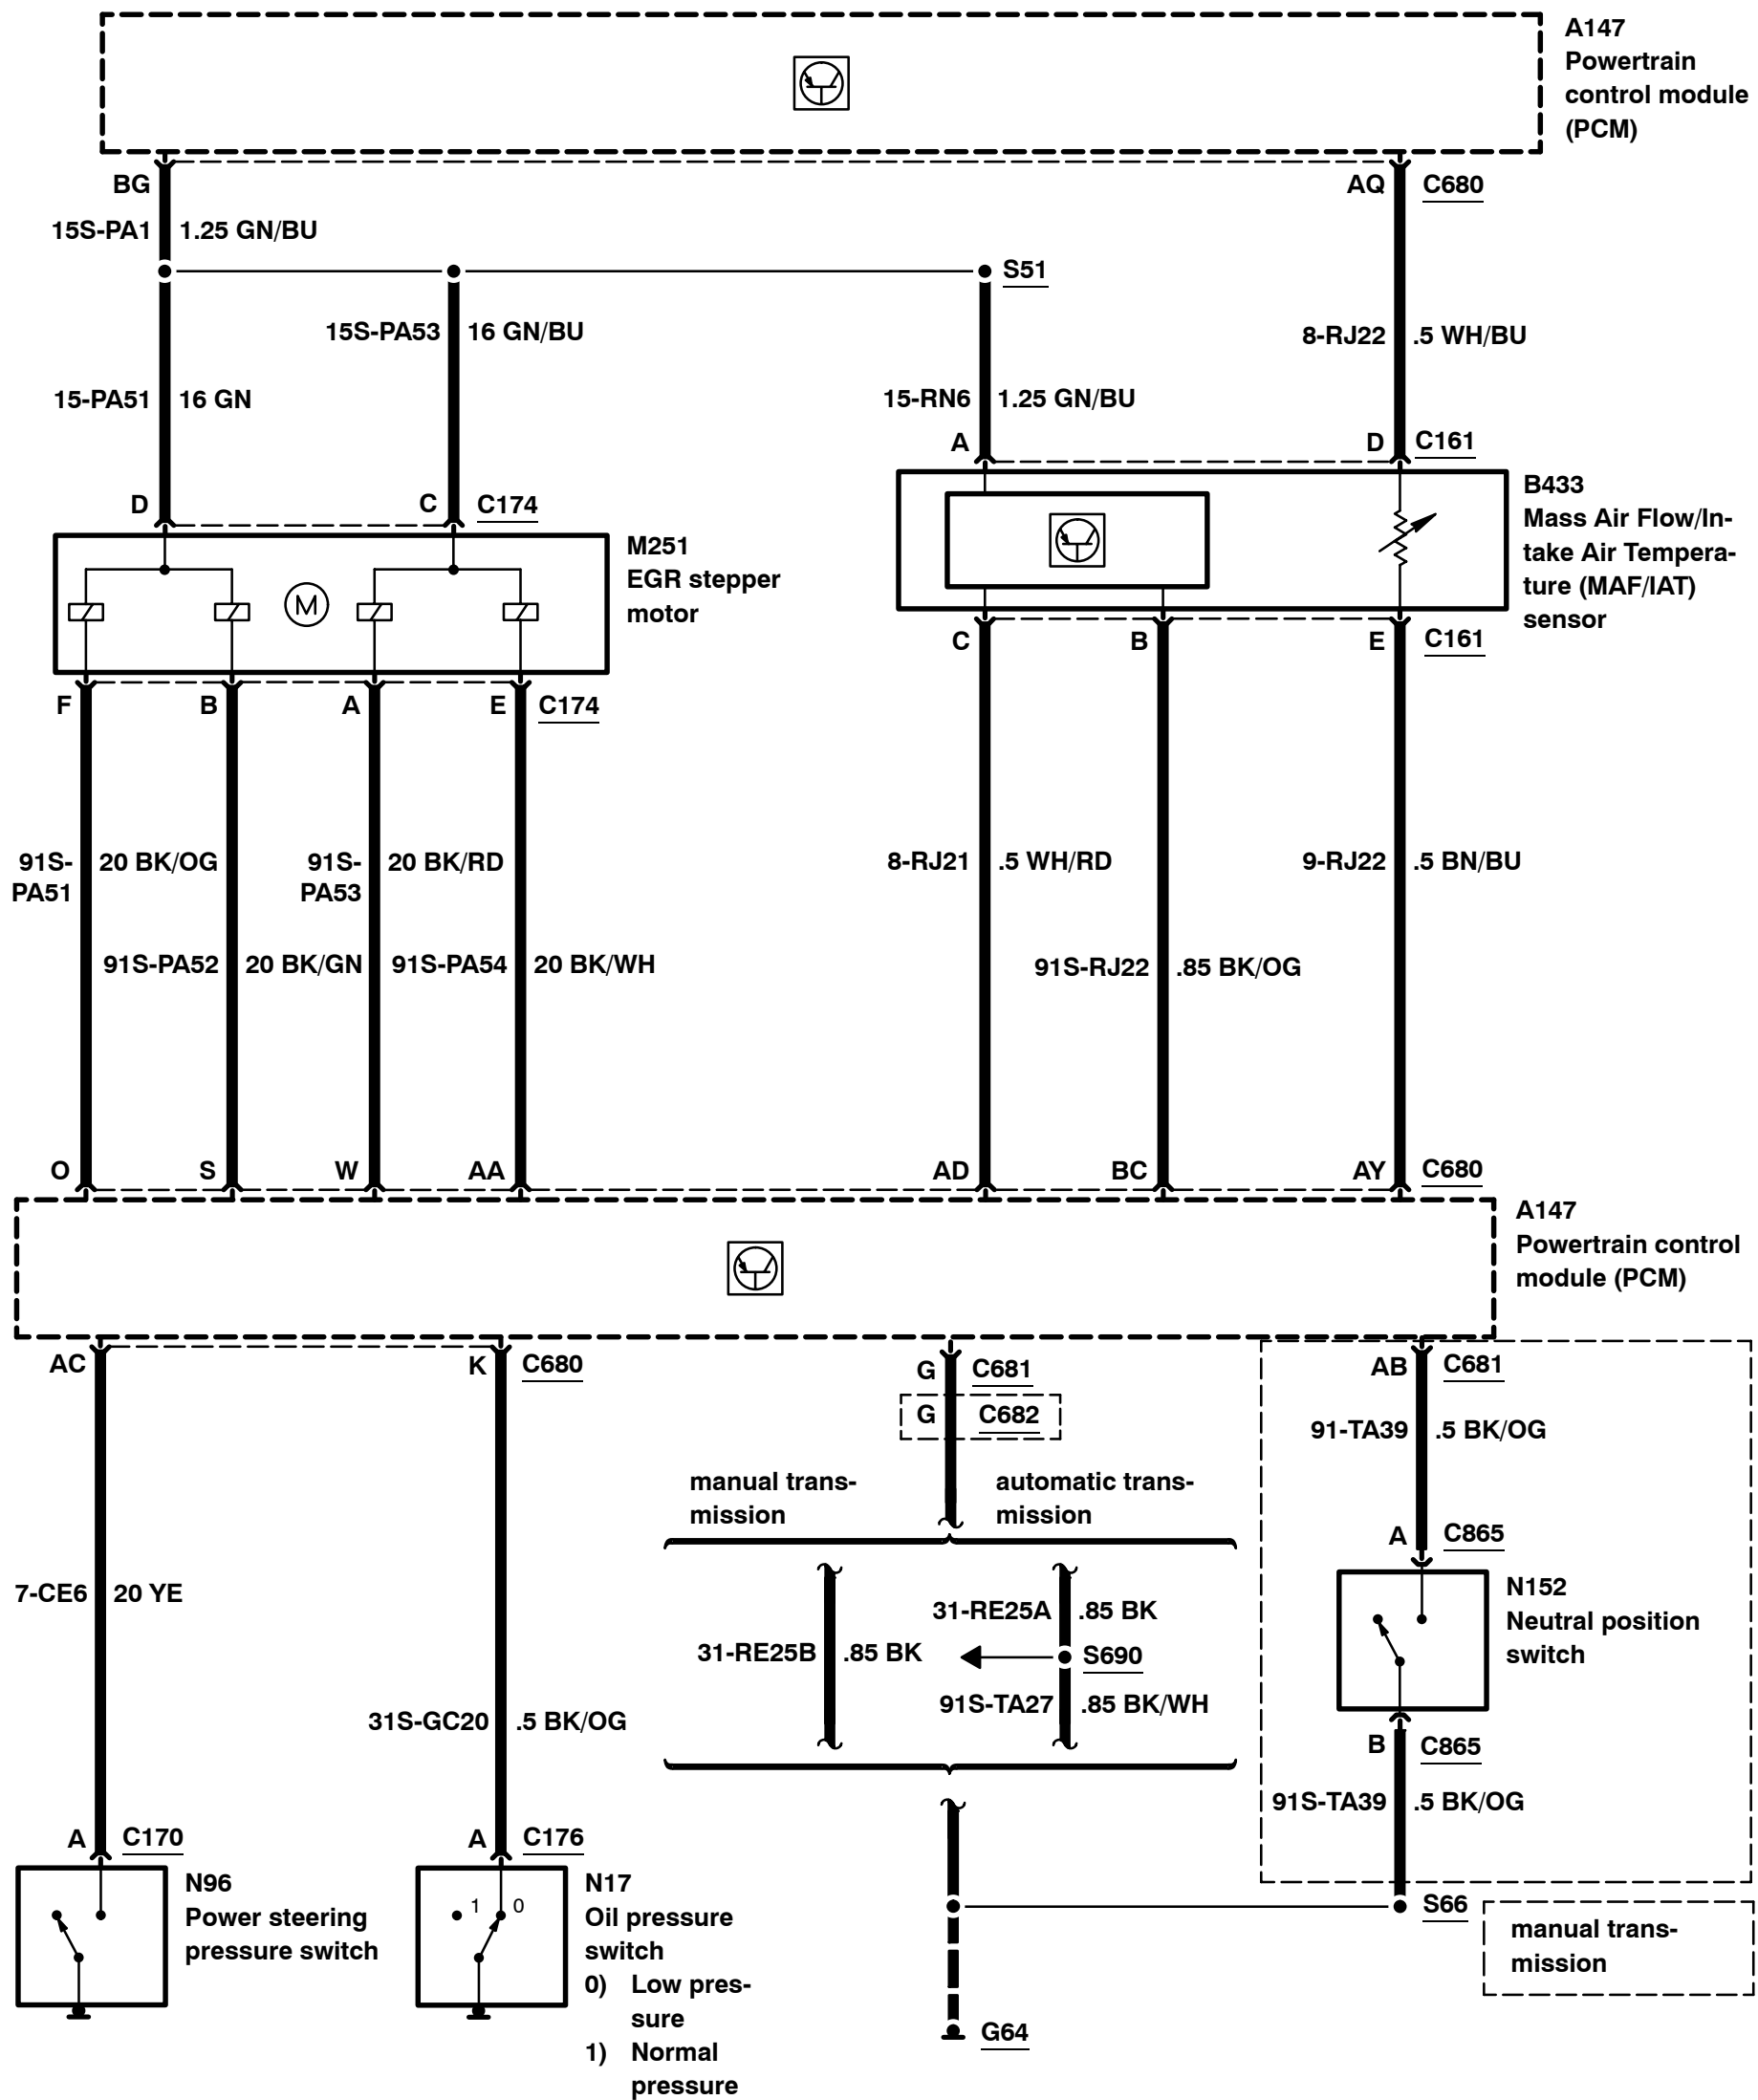


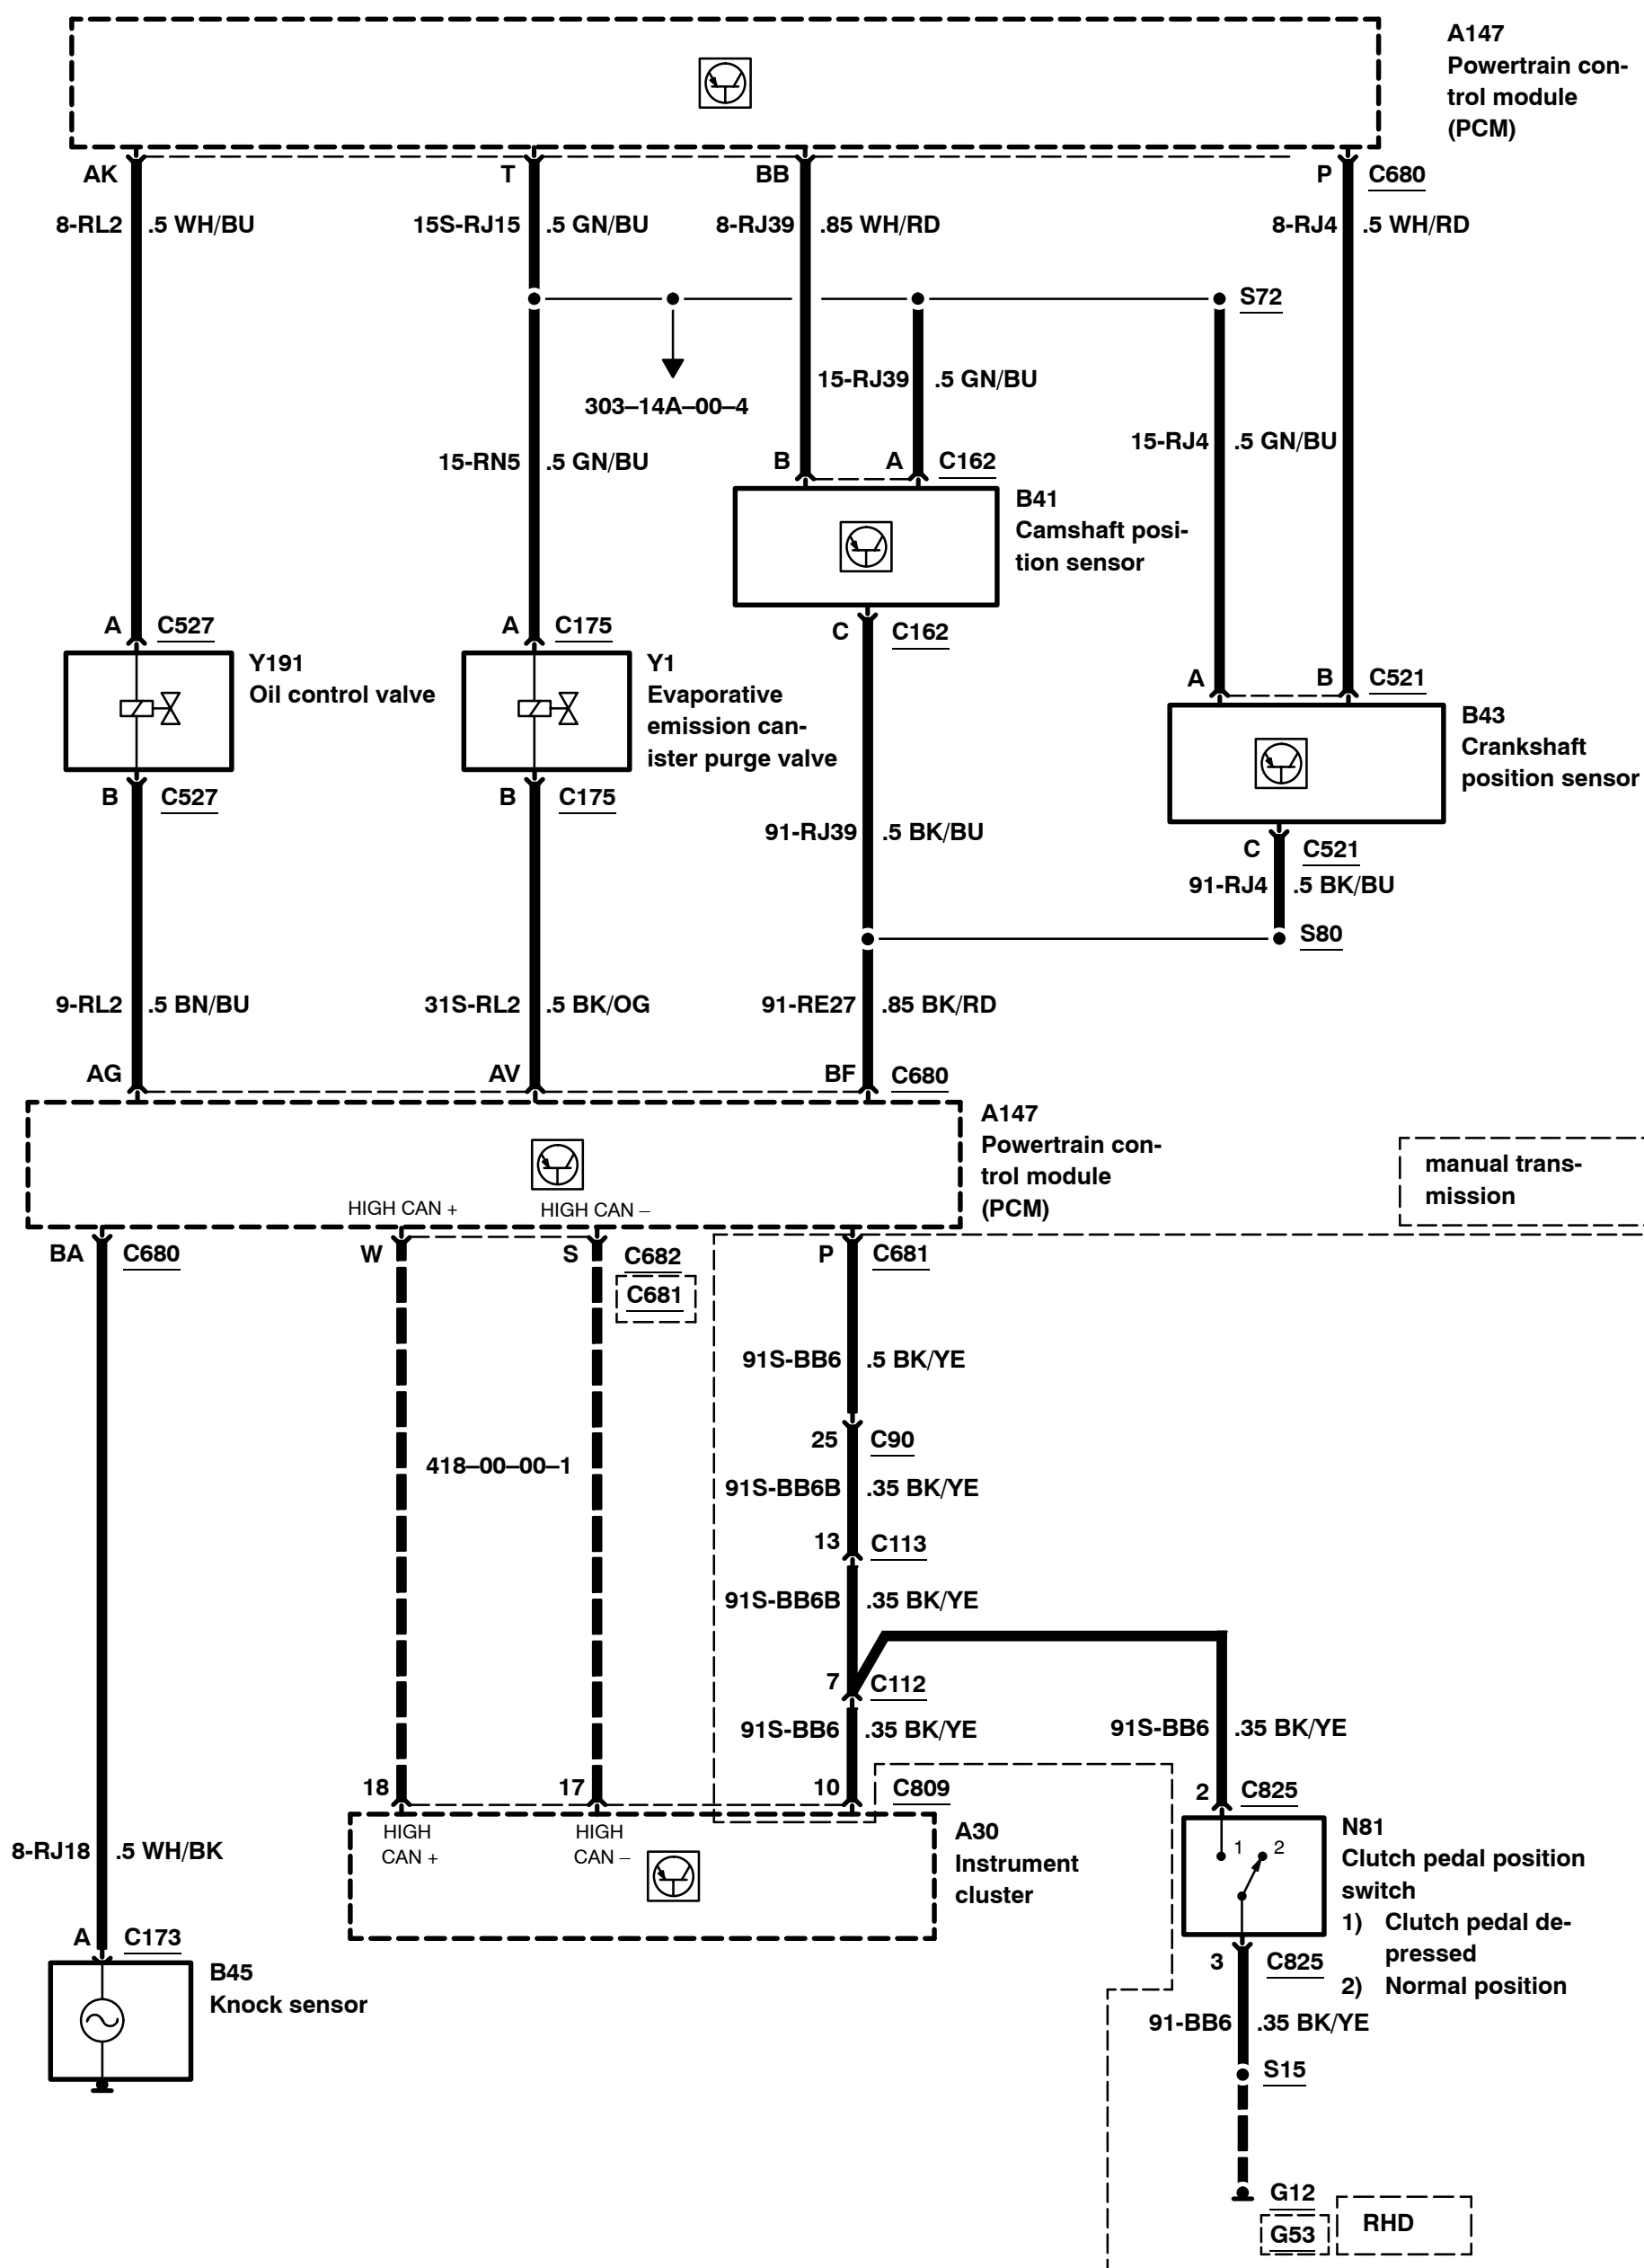

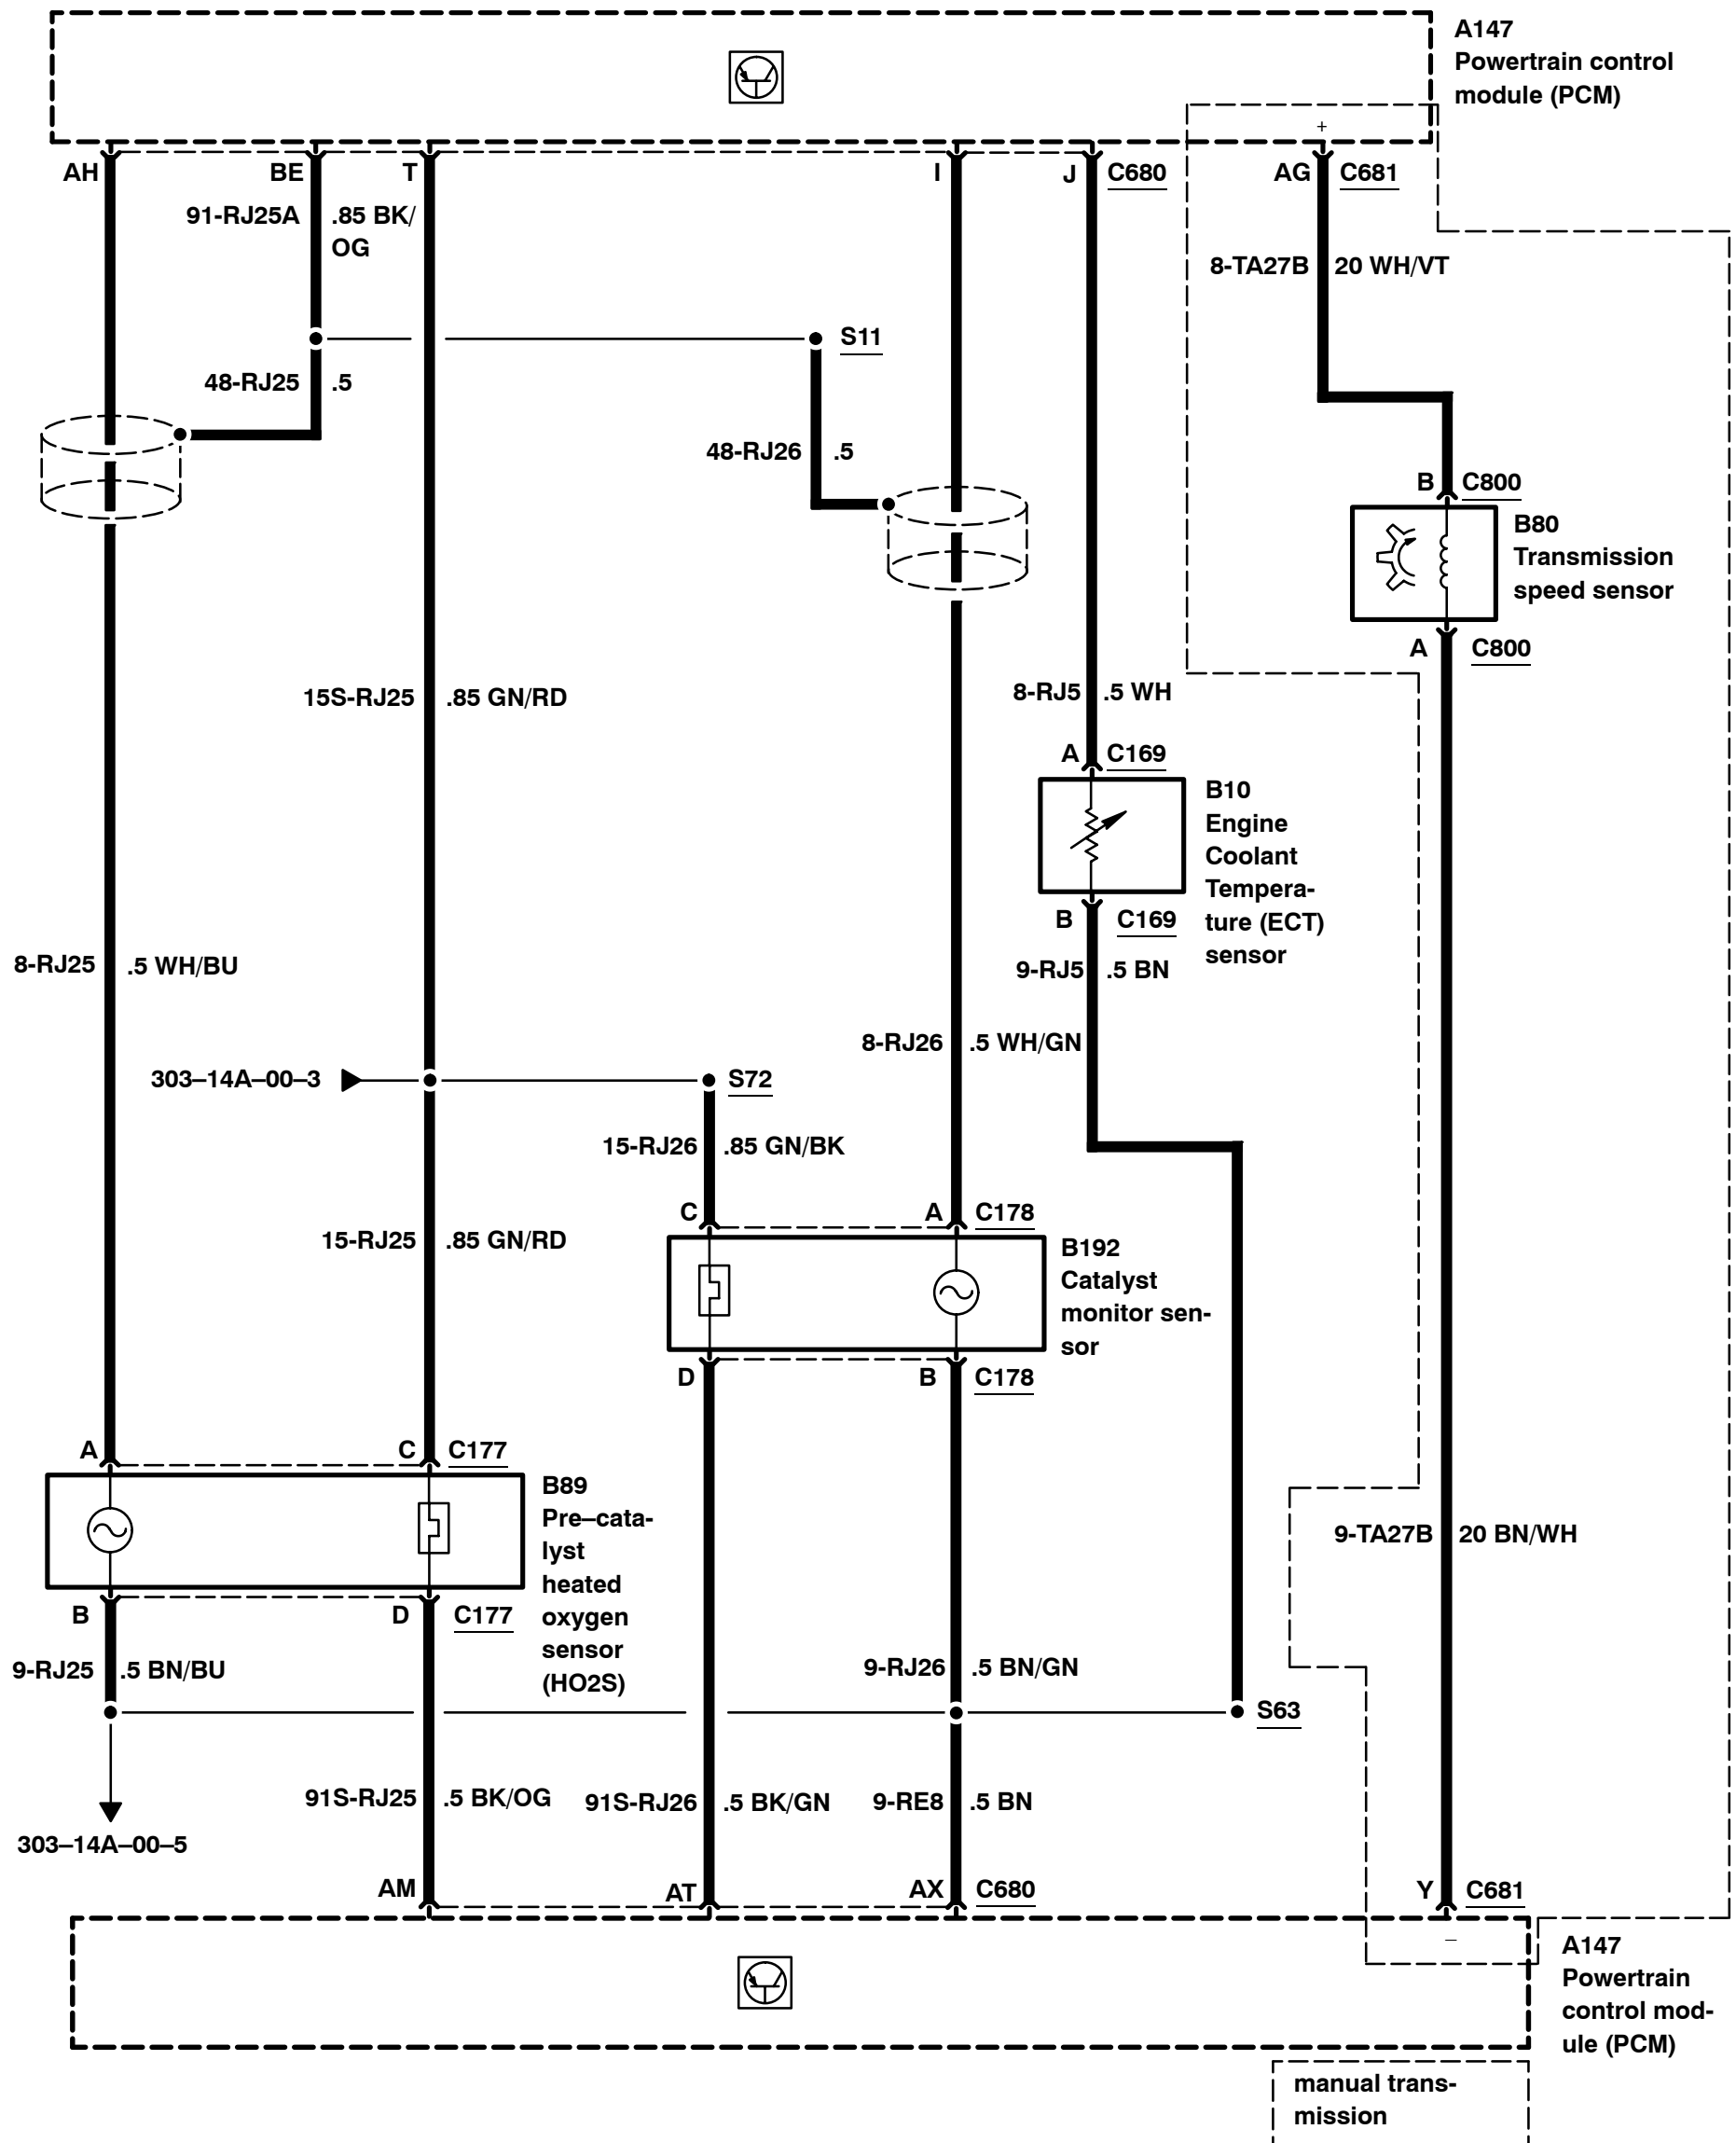




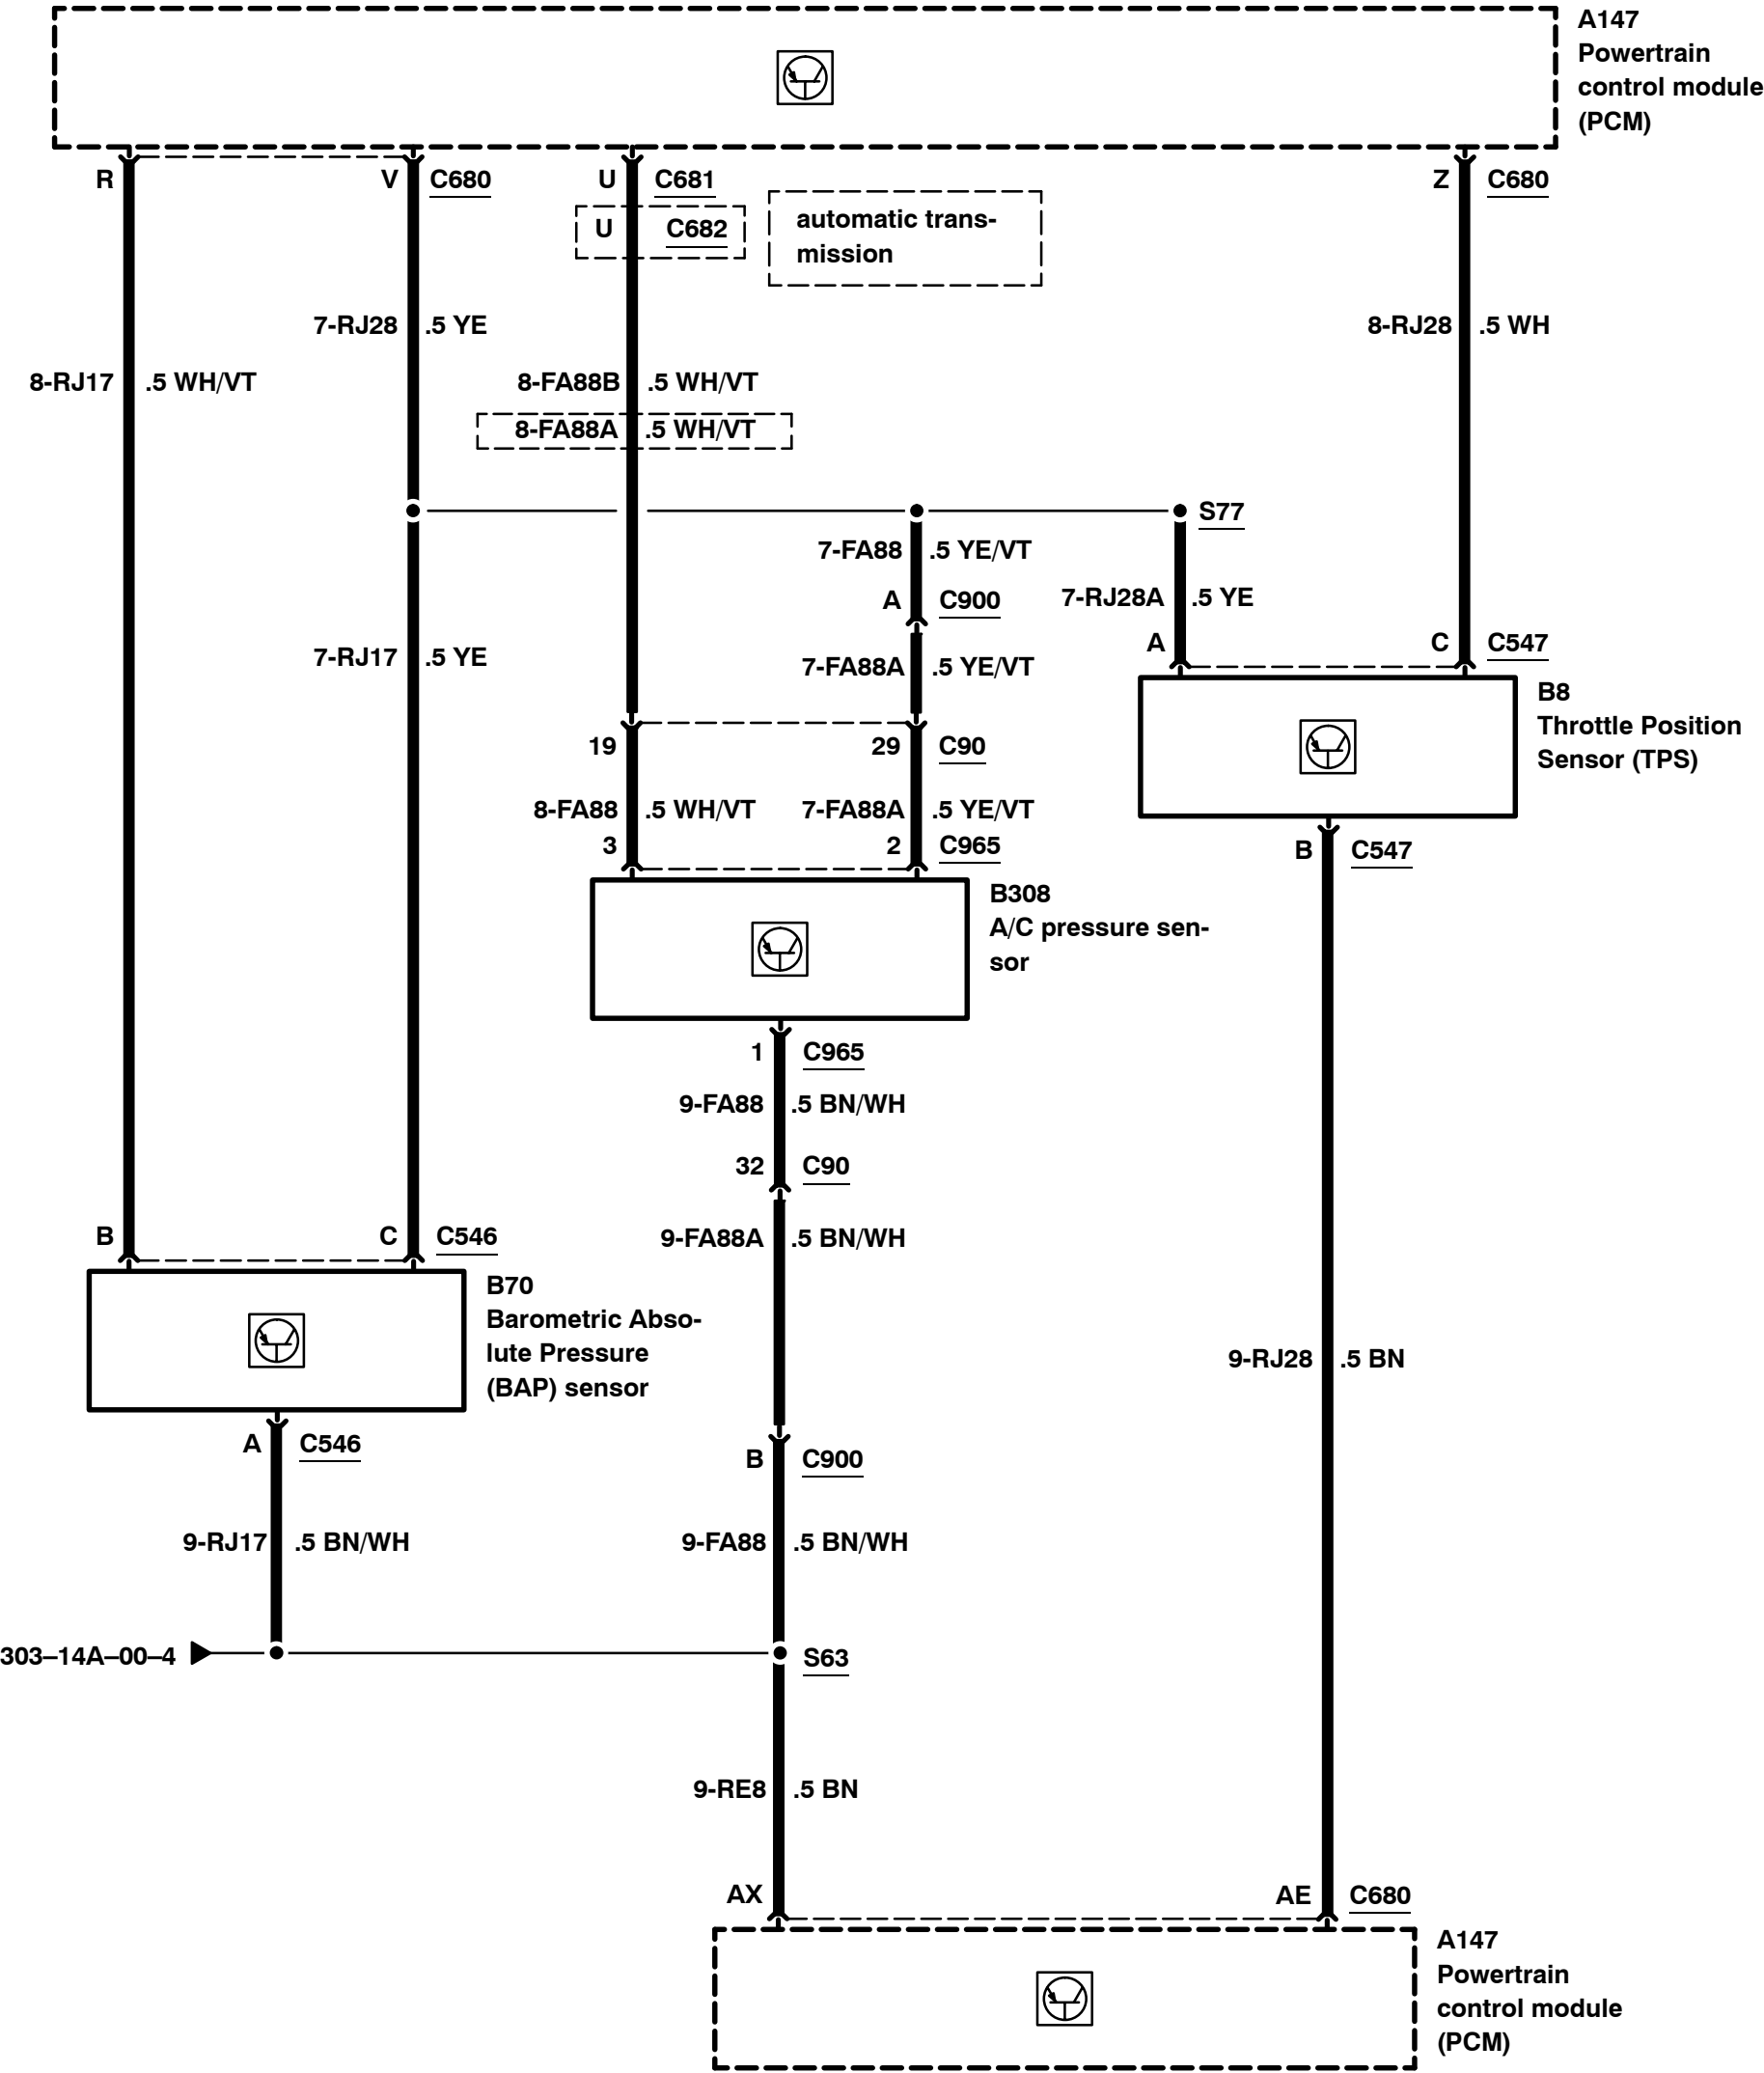

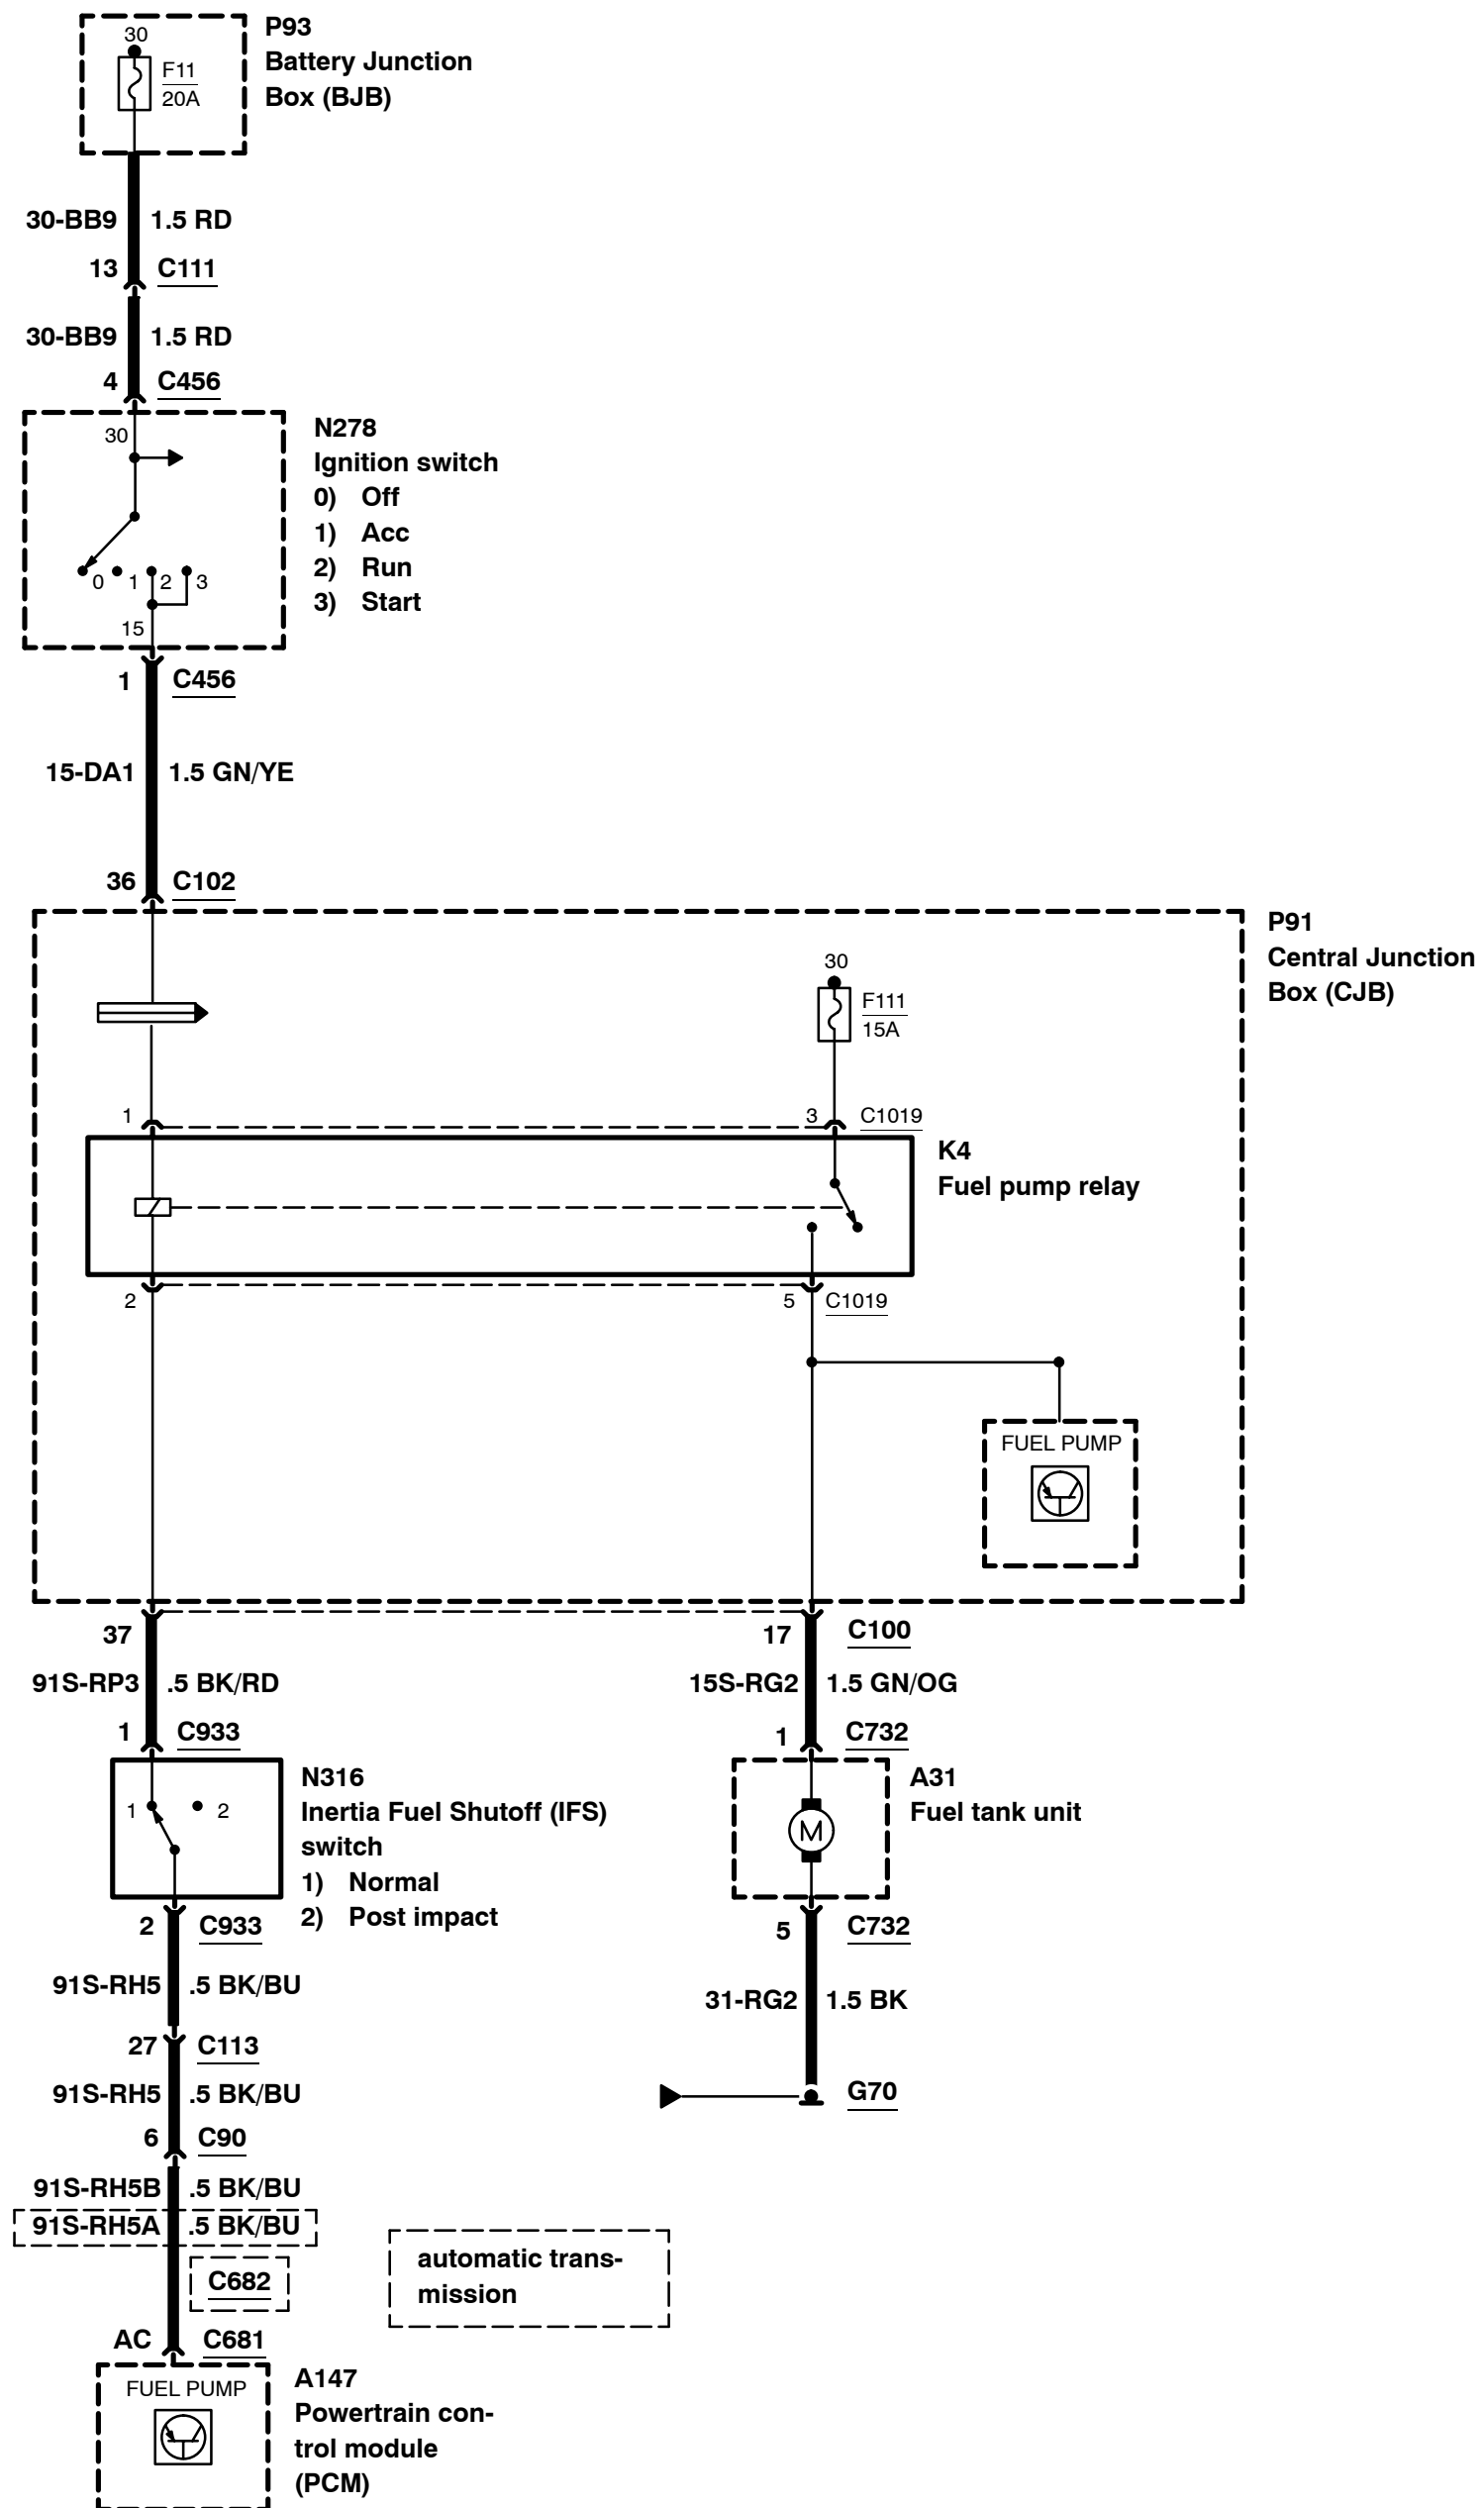





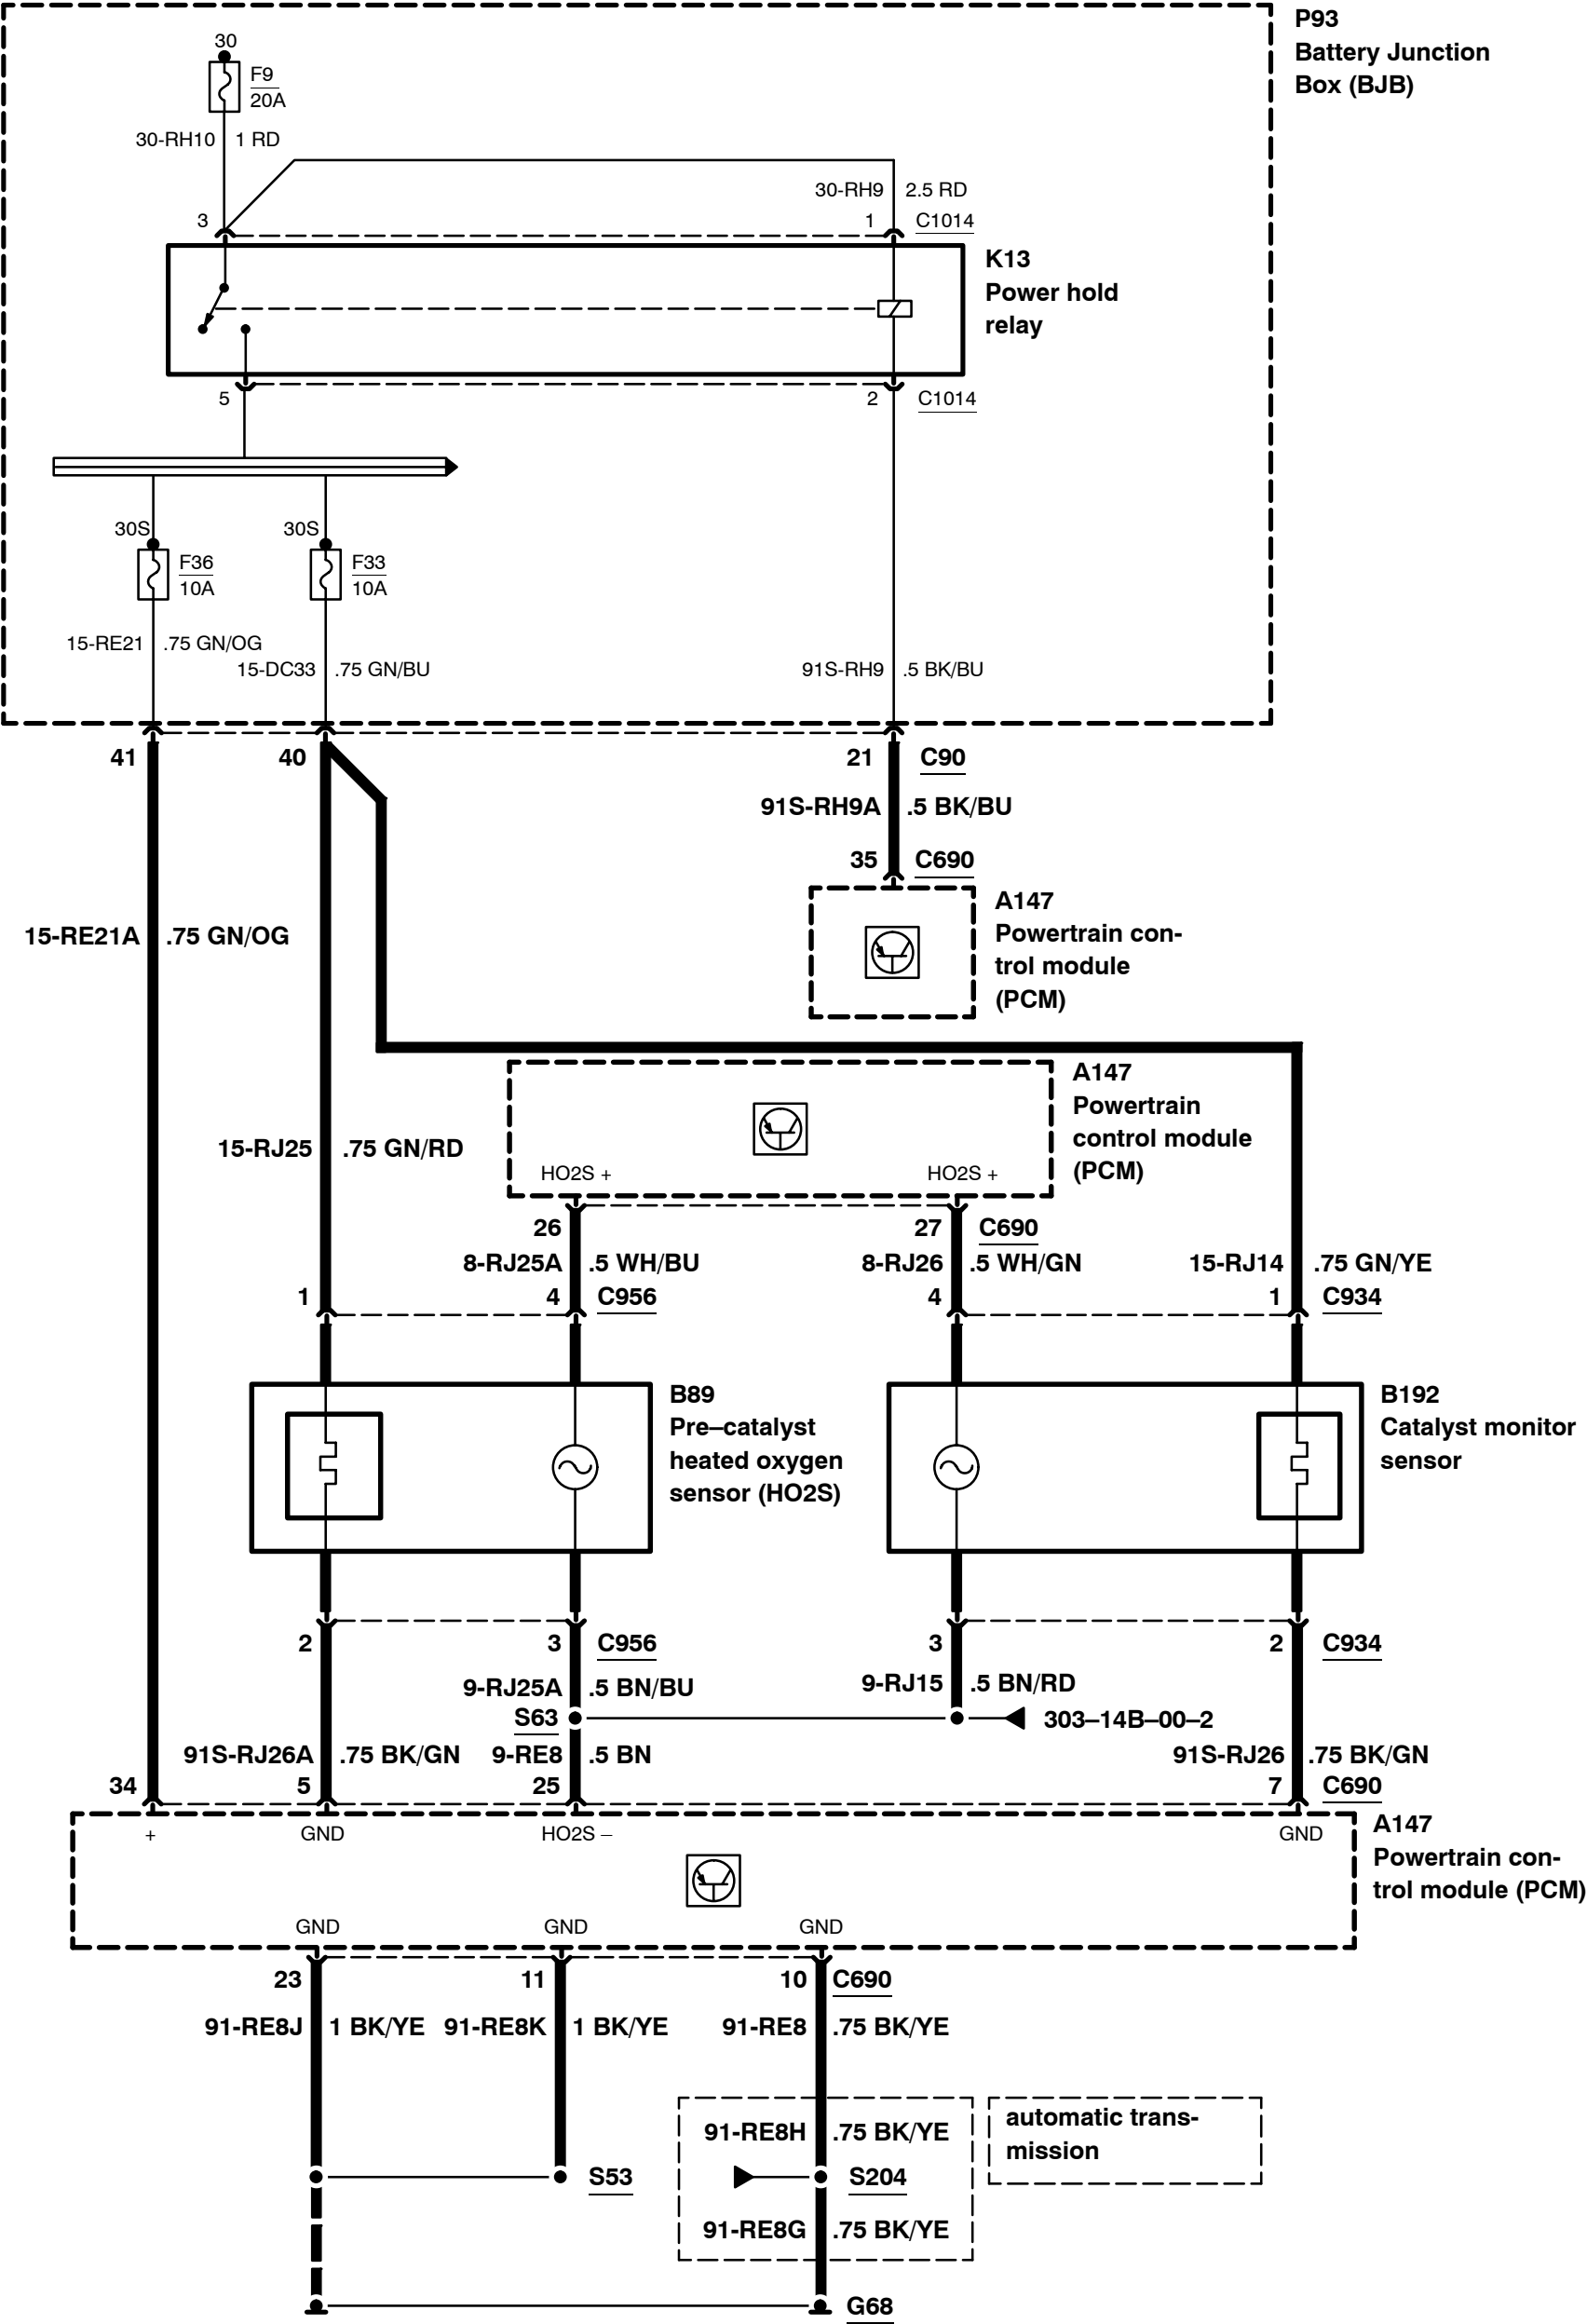



Electronic Engine Controls – 1.8/2.0L Duratec–HE (M14), before model year 2009


02/2008  
303-14B-00-2  
2008.25  
Focus

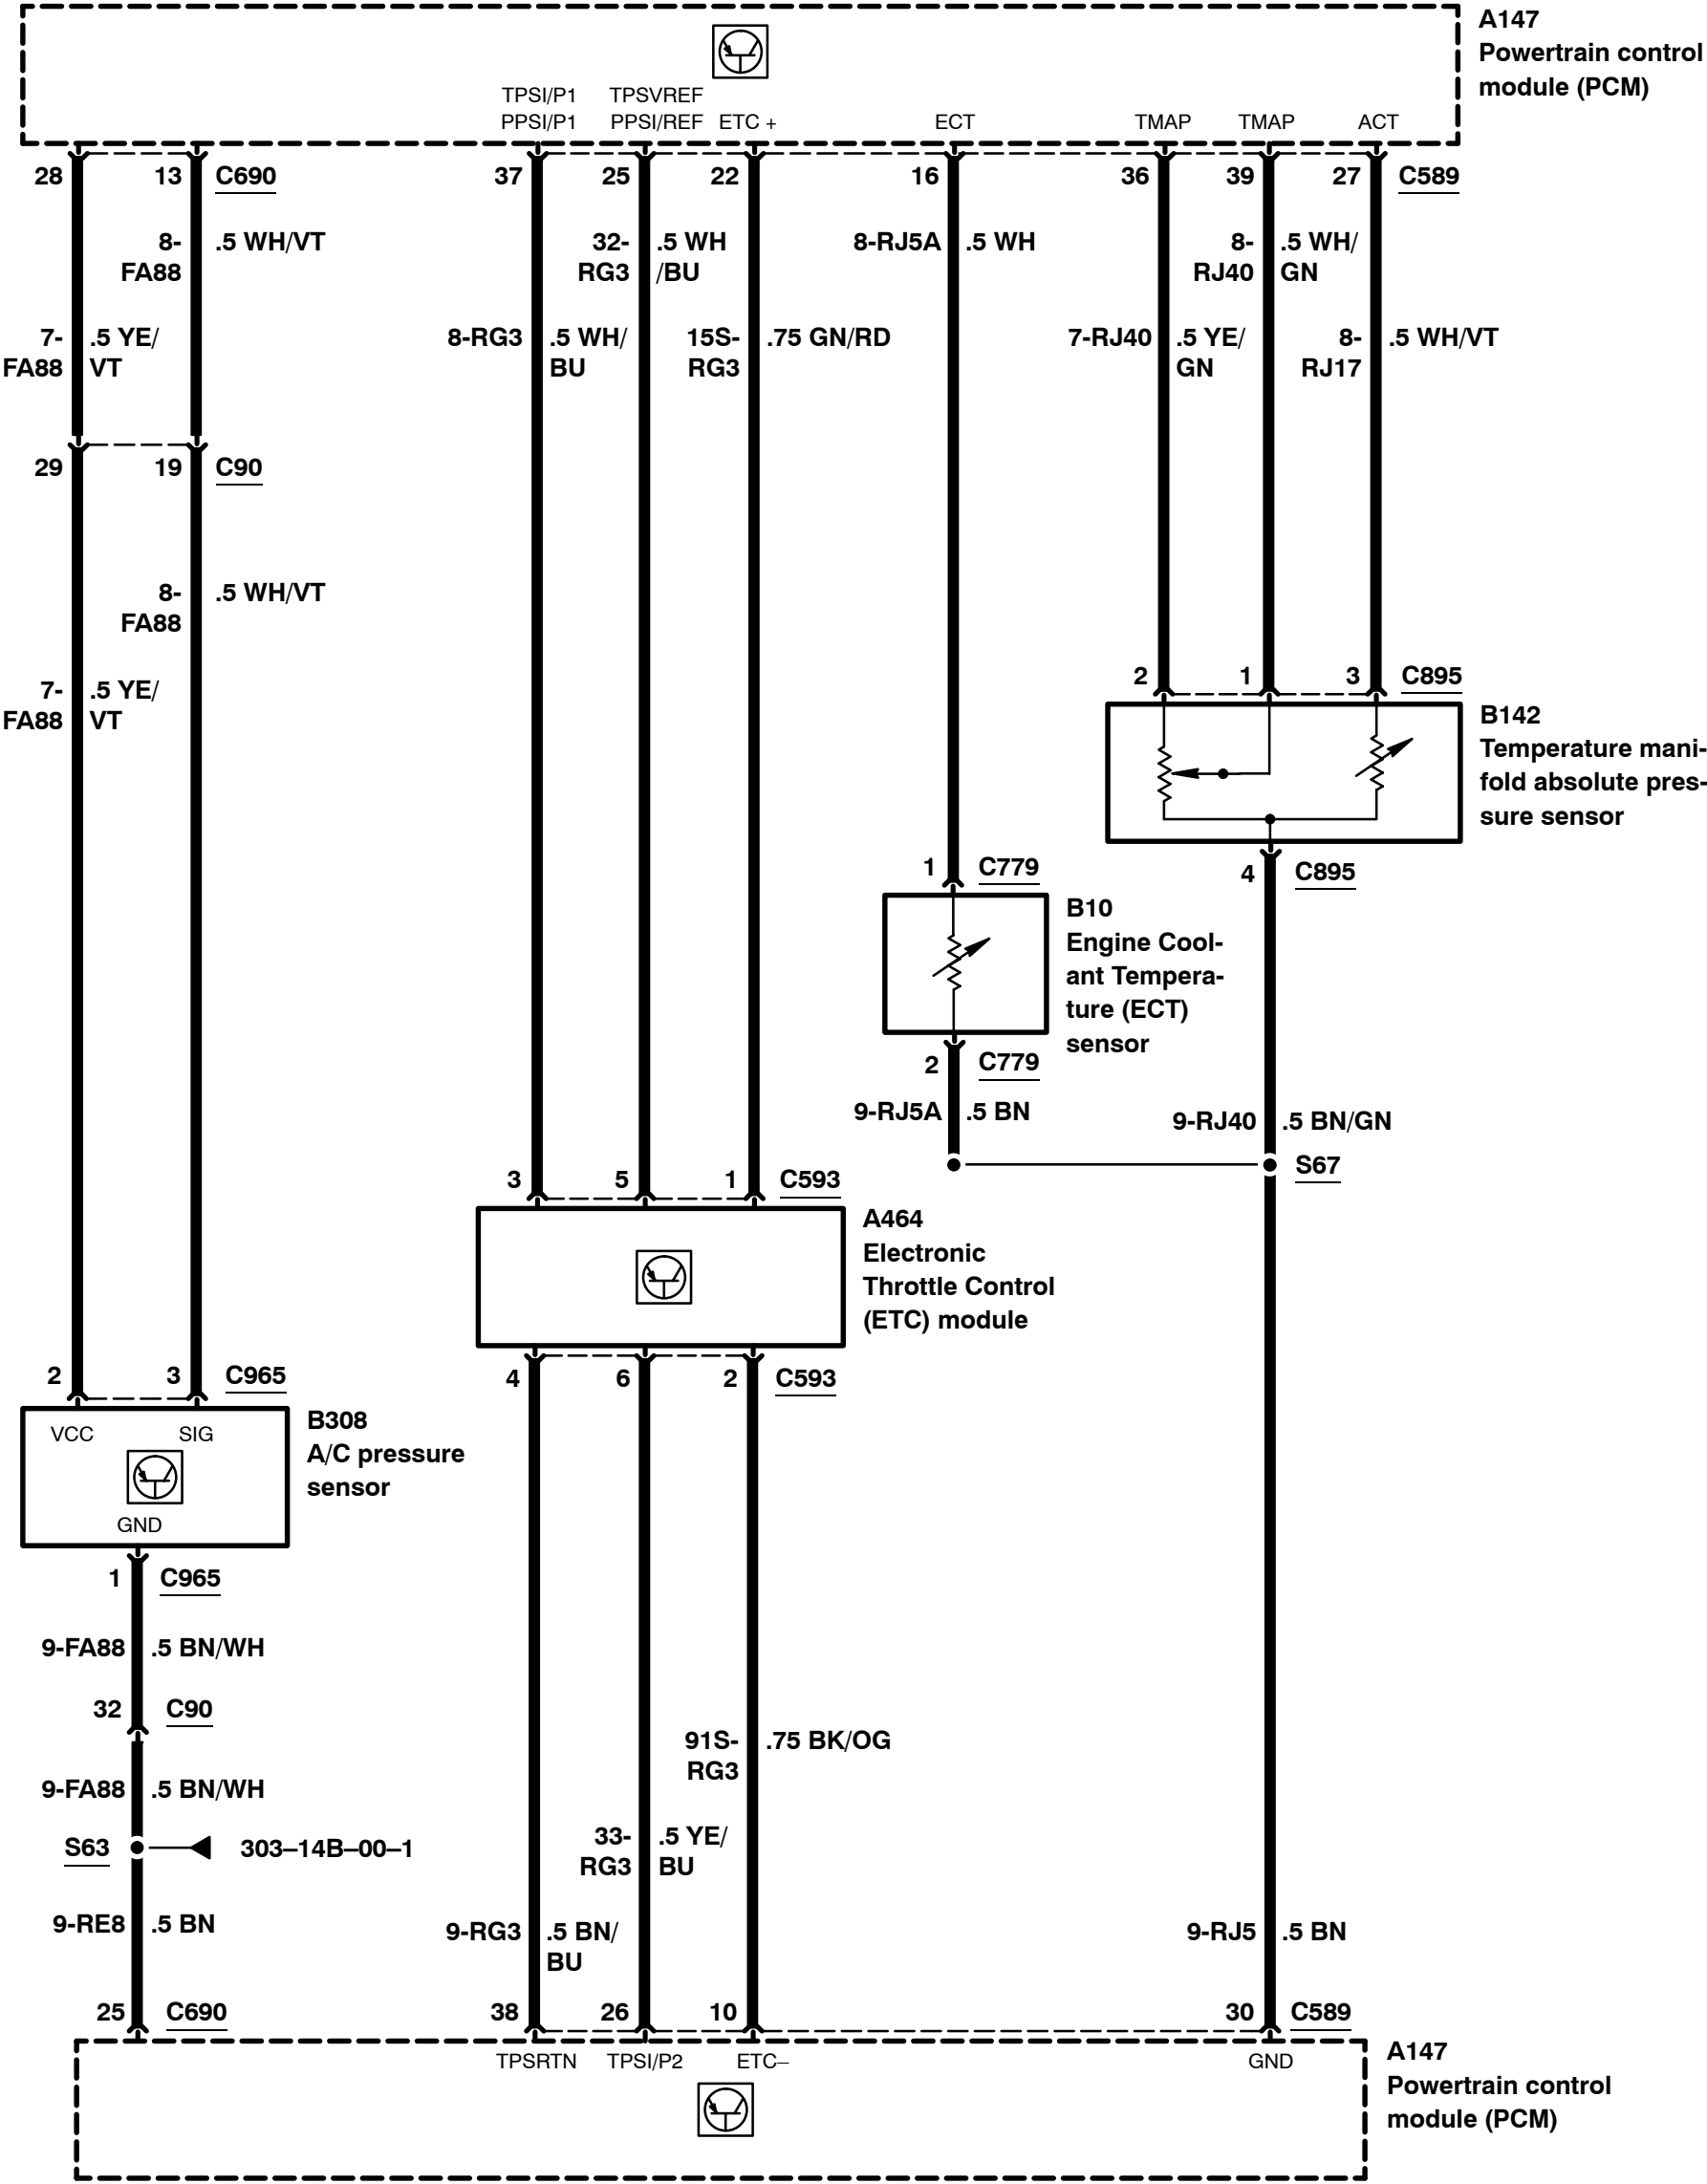

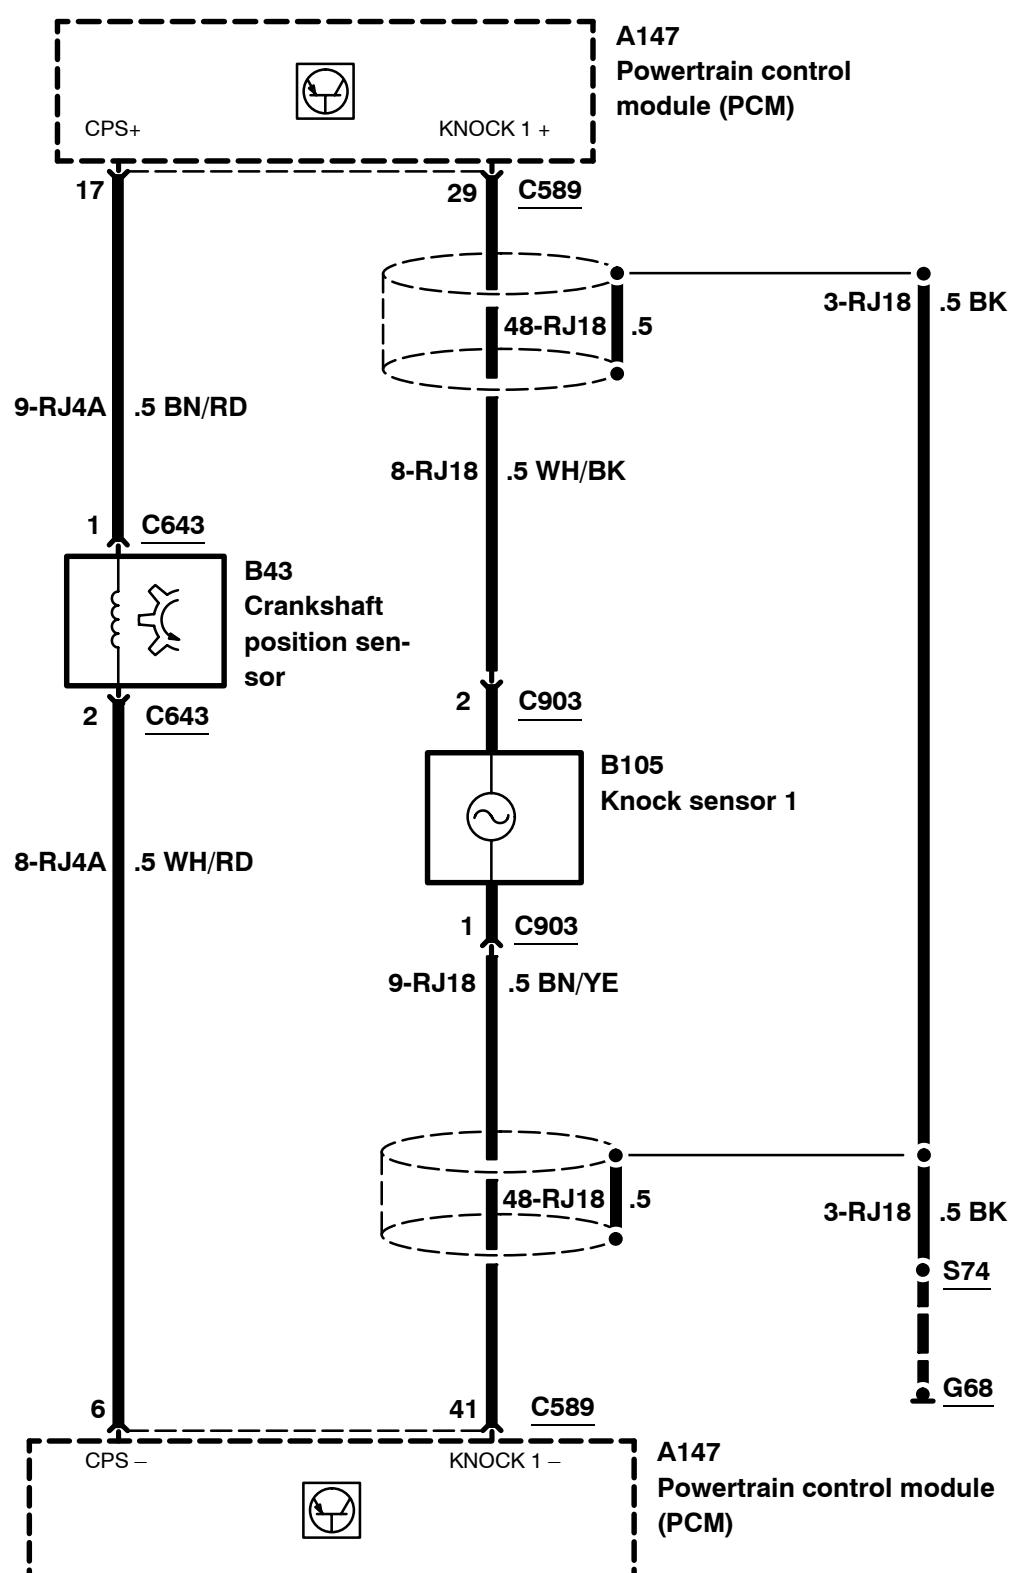

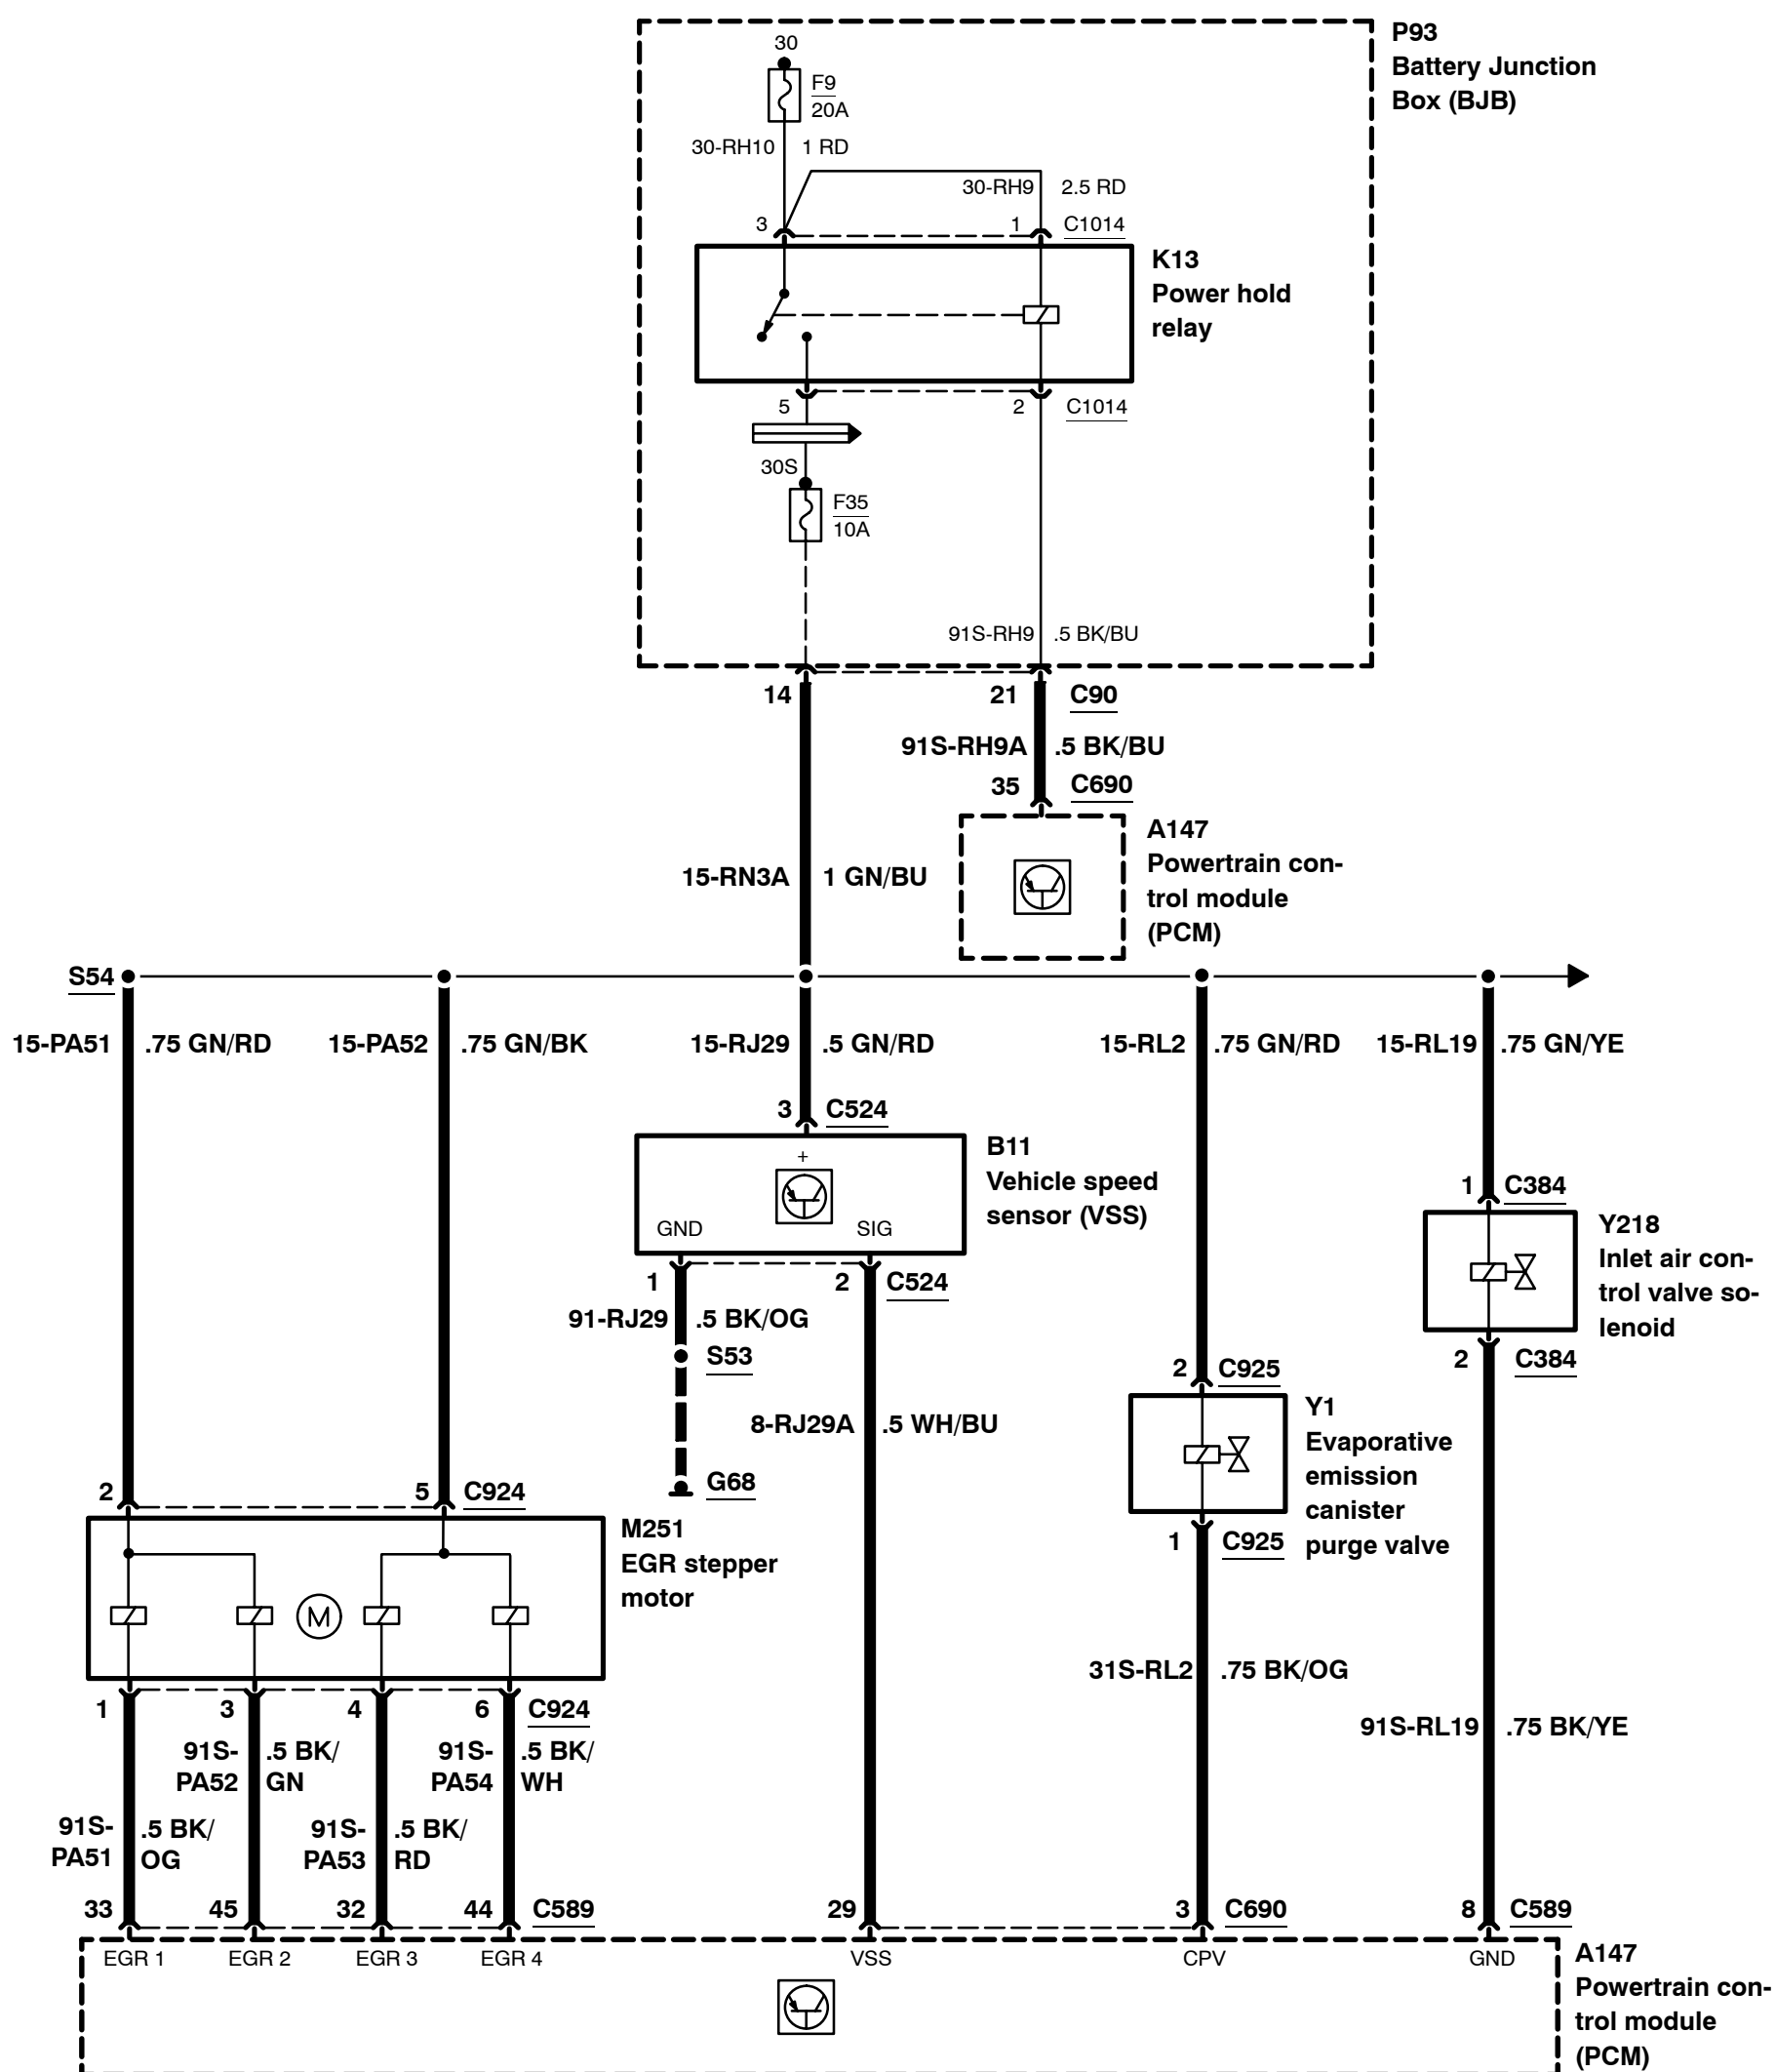

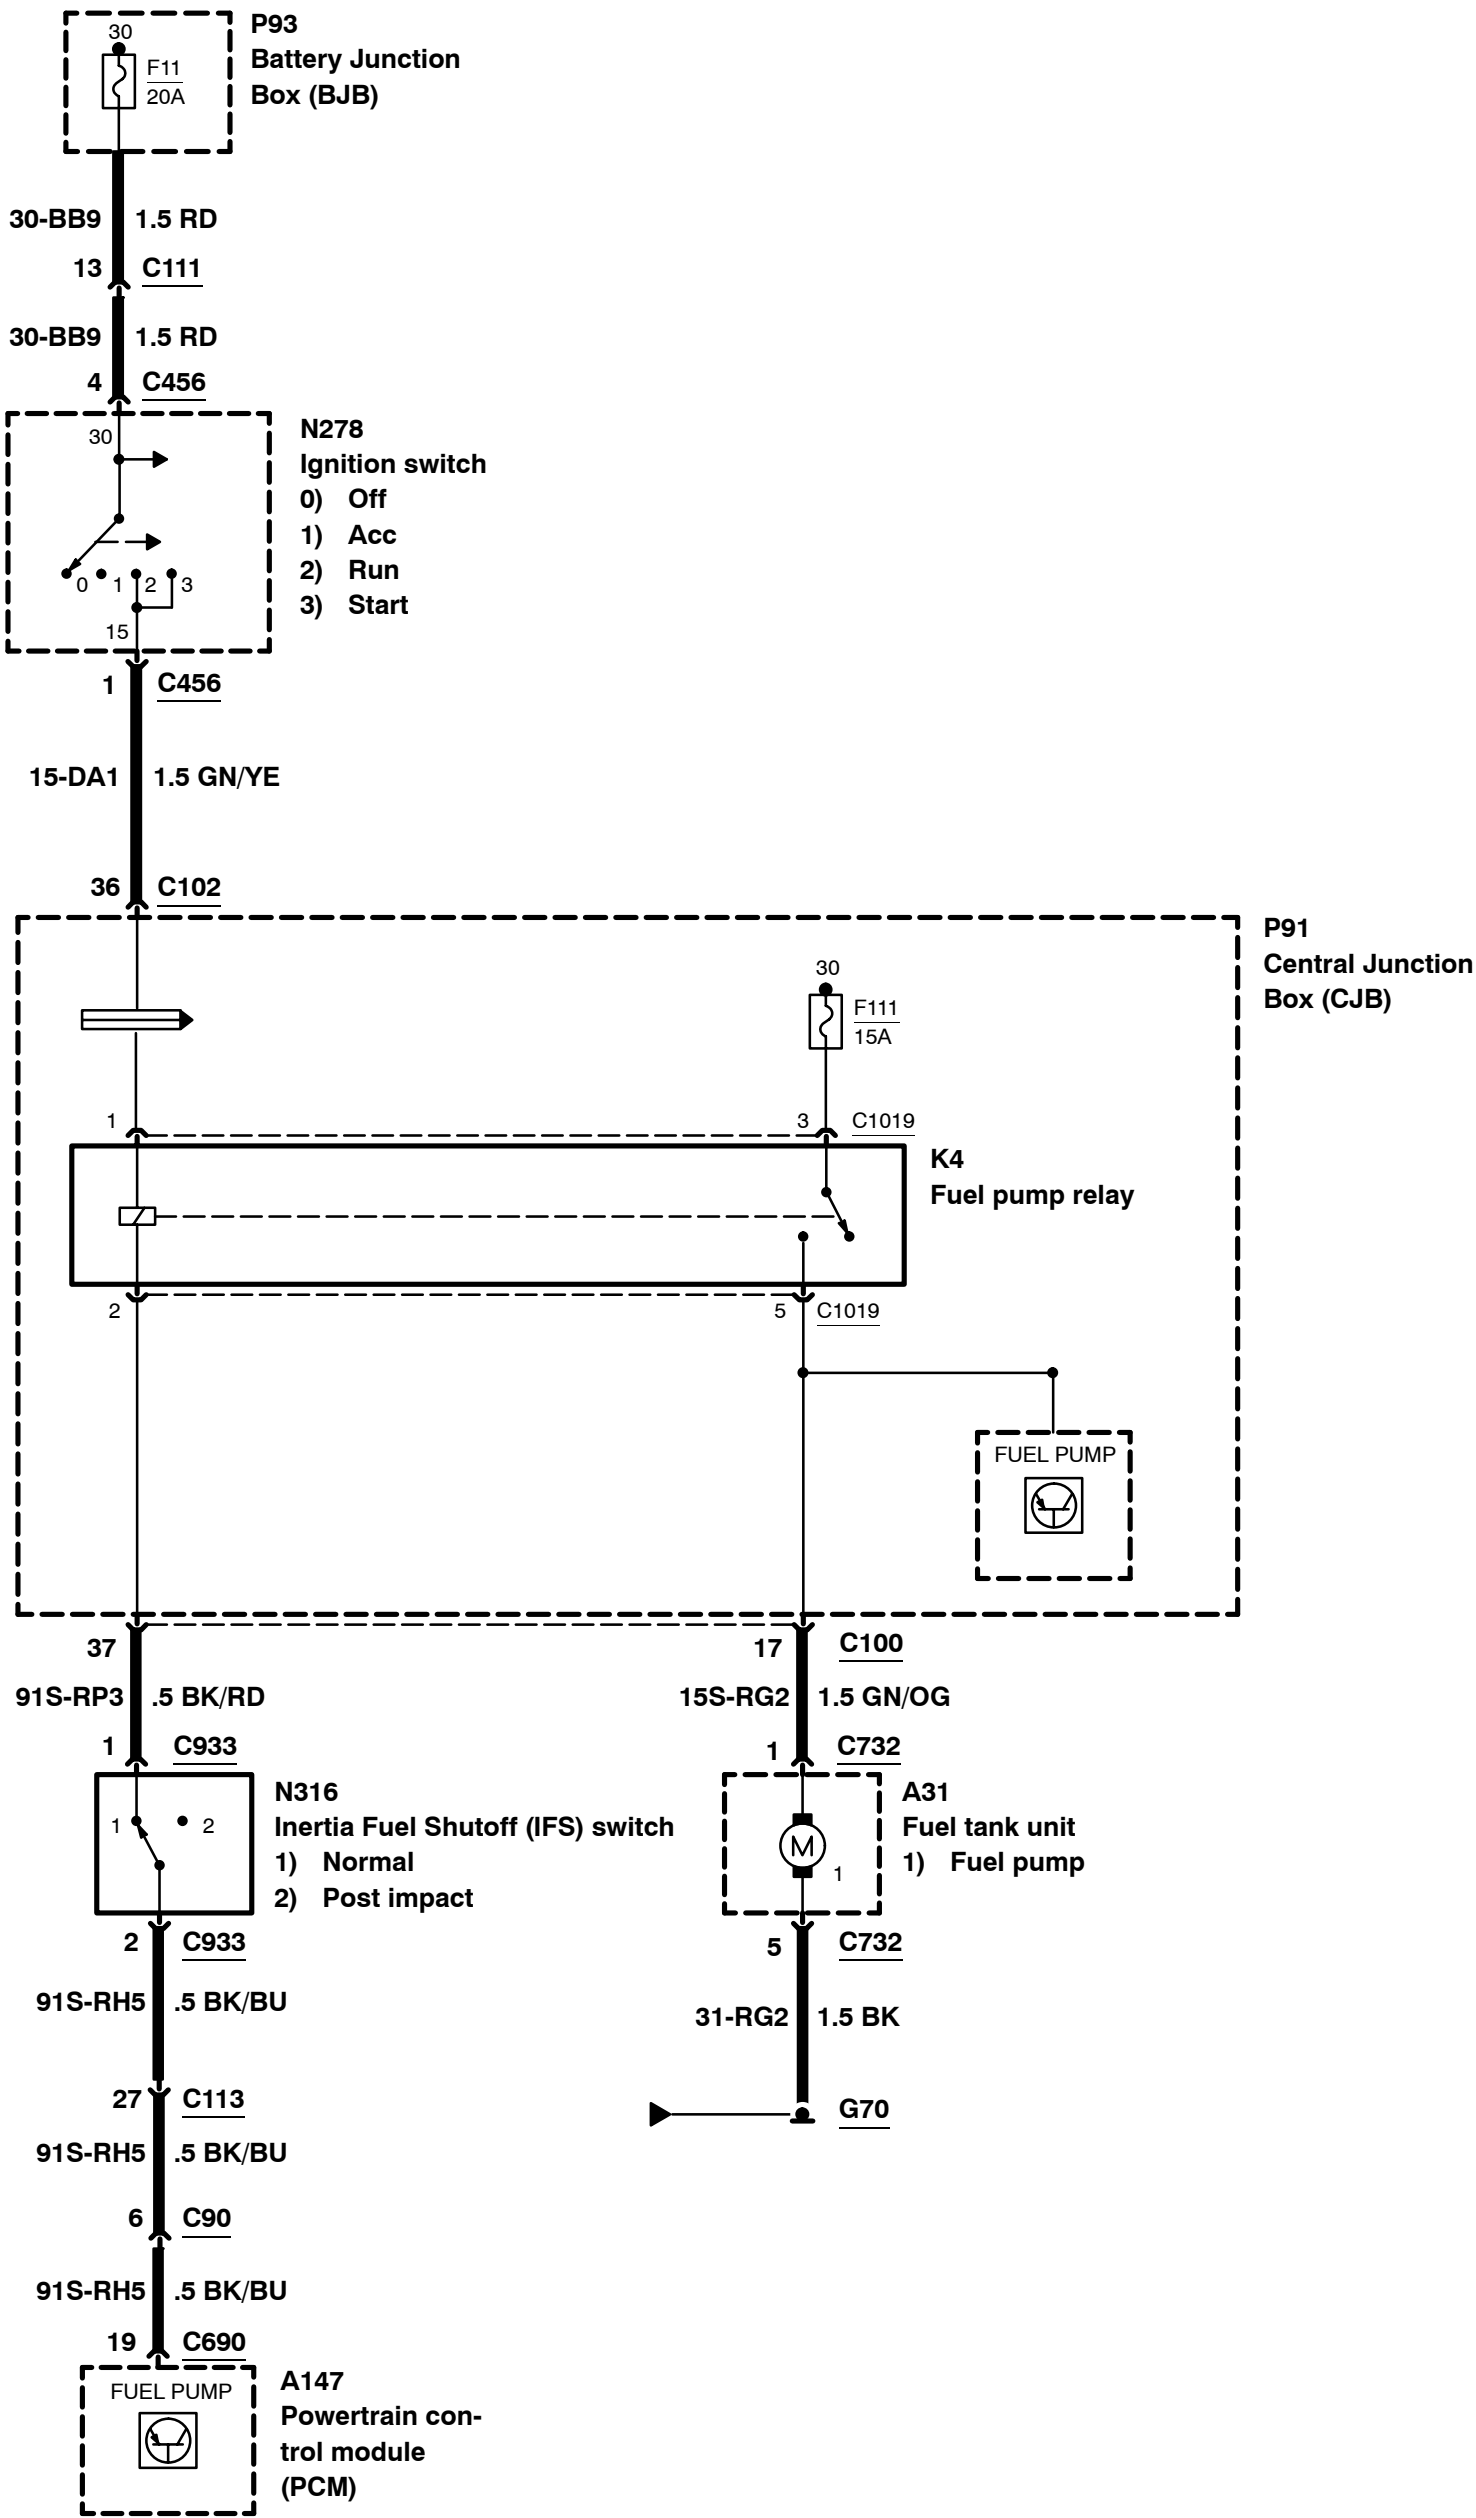


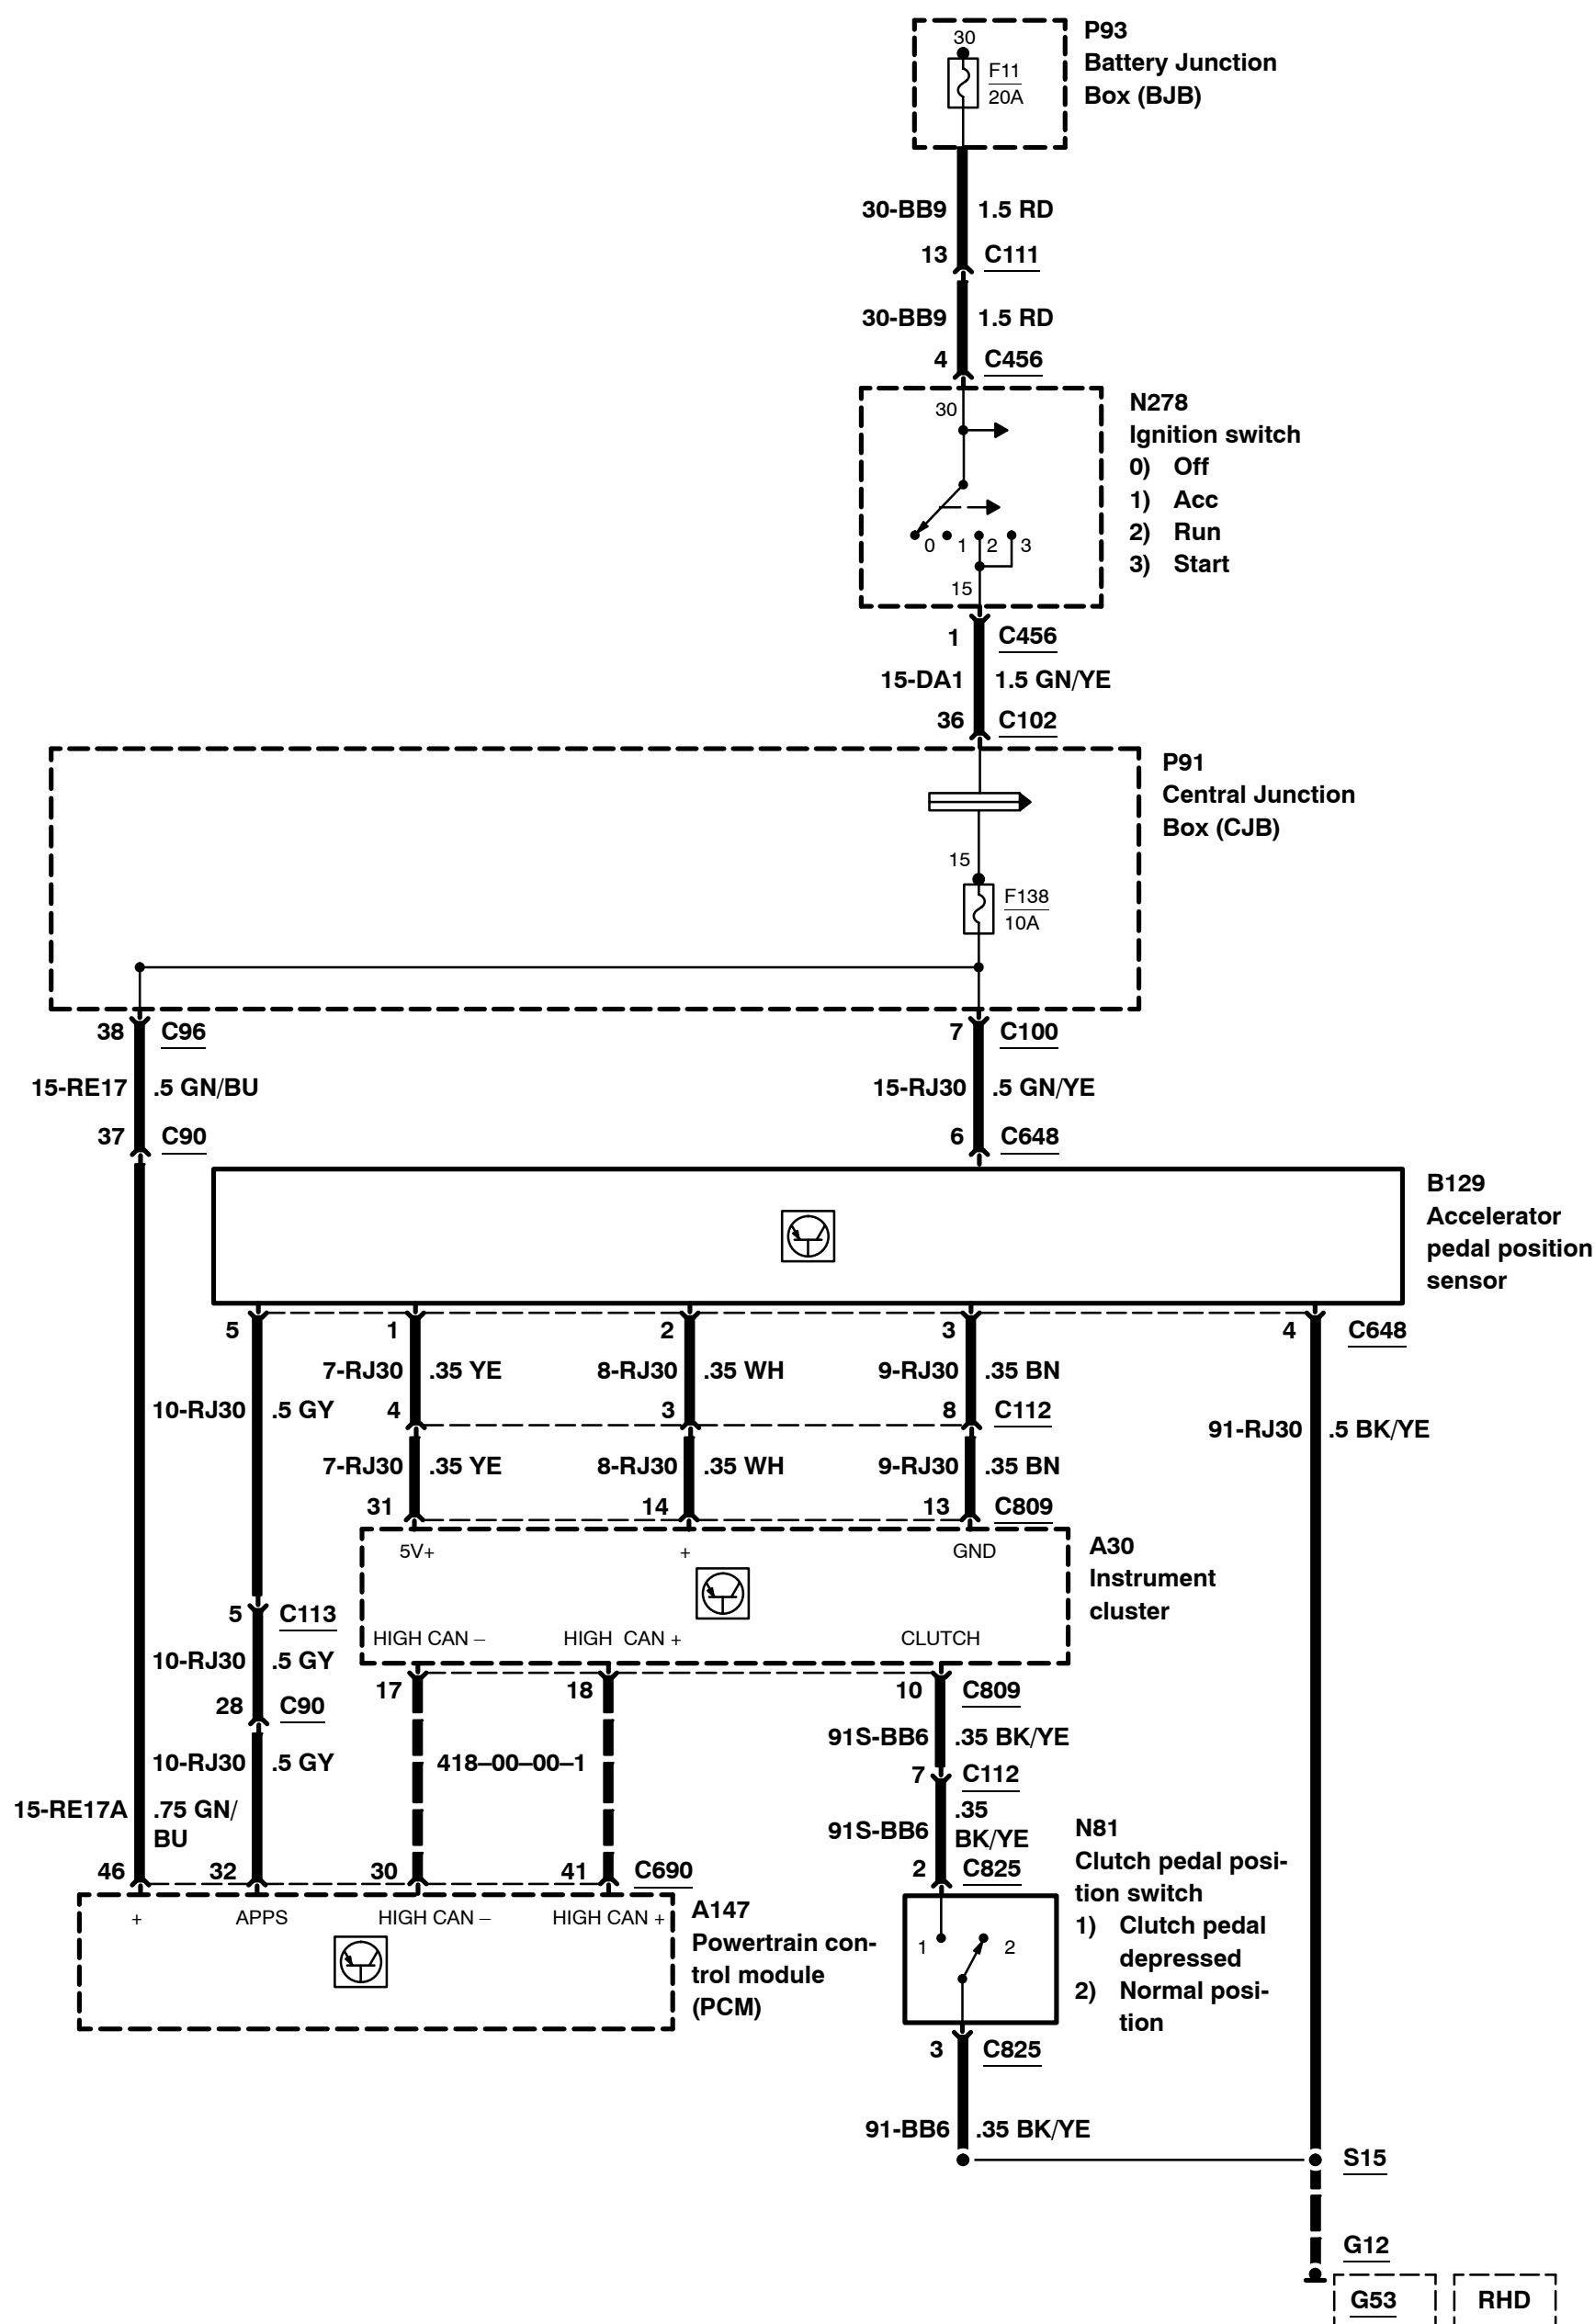




# Electronic Engine Controls – 1.8/2.0L Duratec–HE (M14), as of model year 2009

02/2008  
303-14B-00-7  
2008.25  
Focus

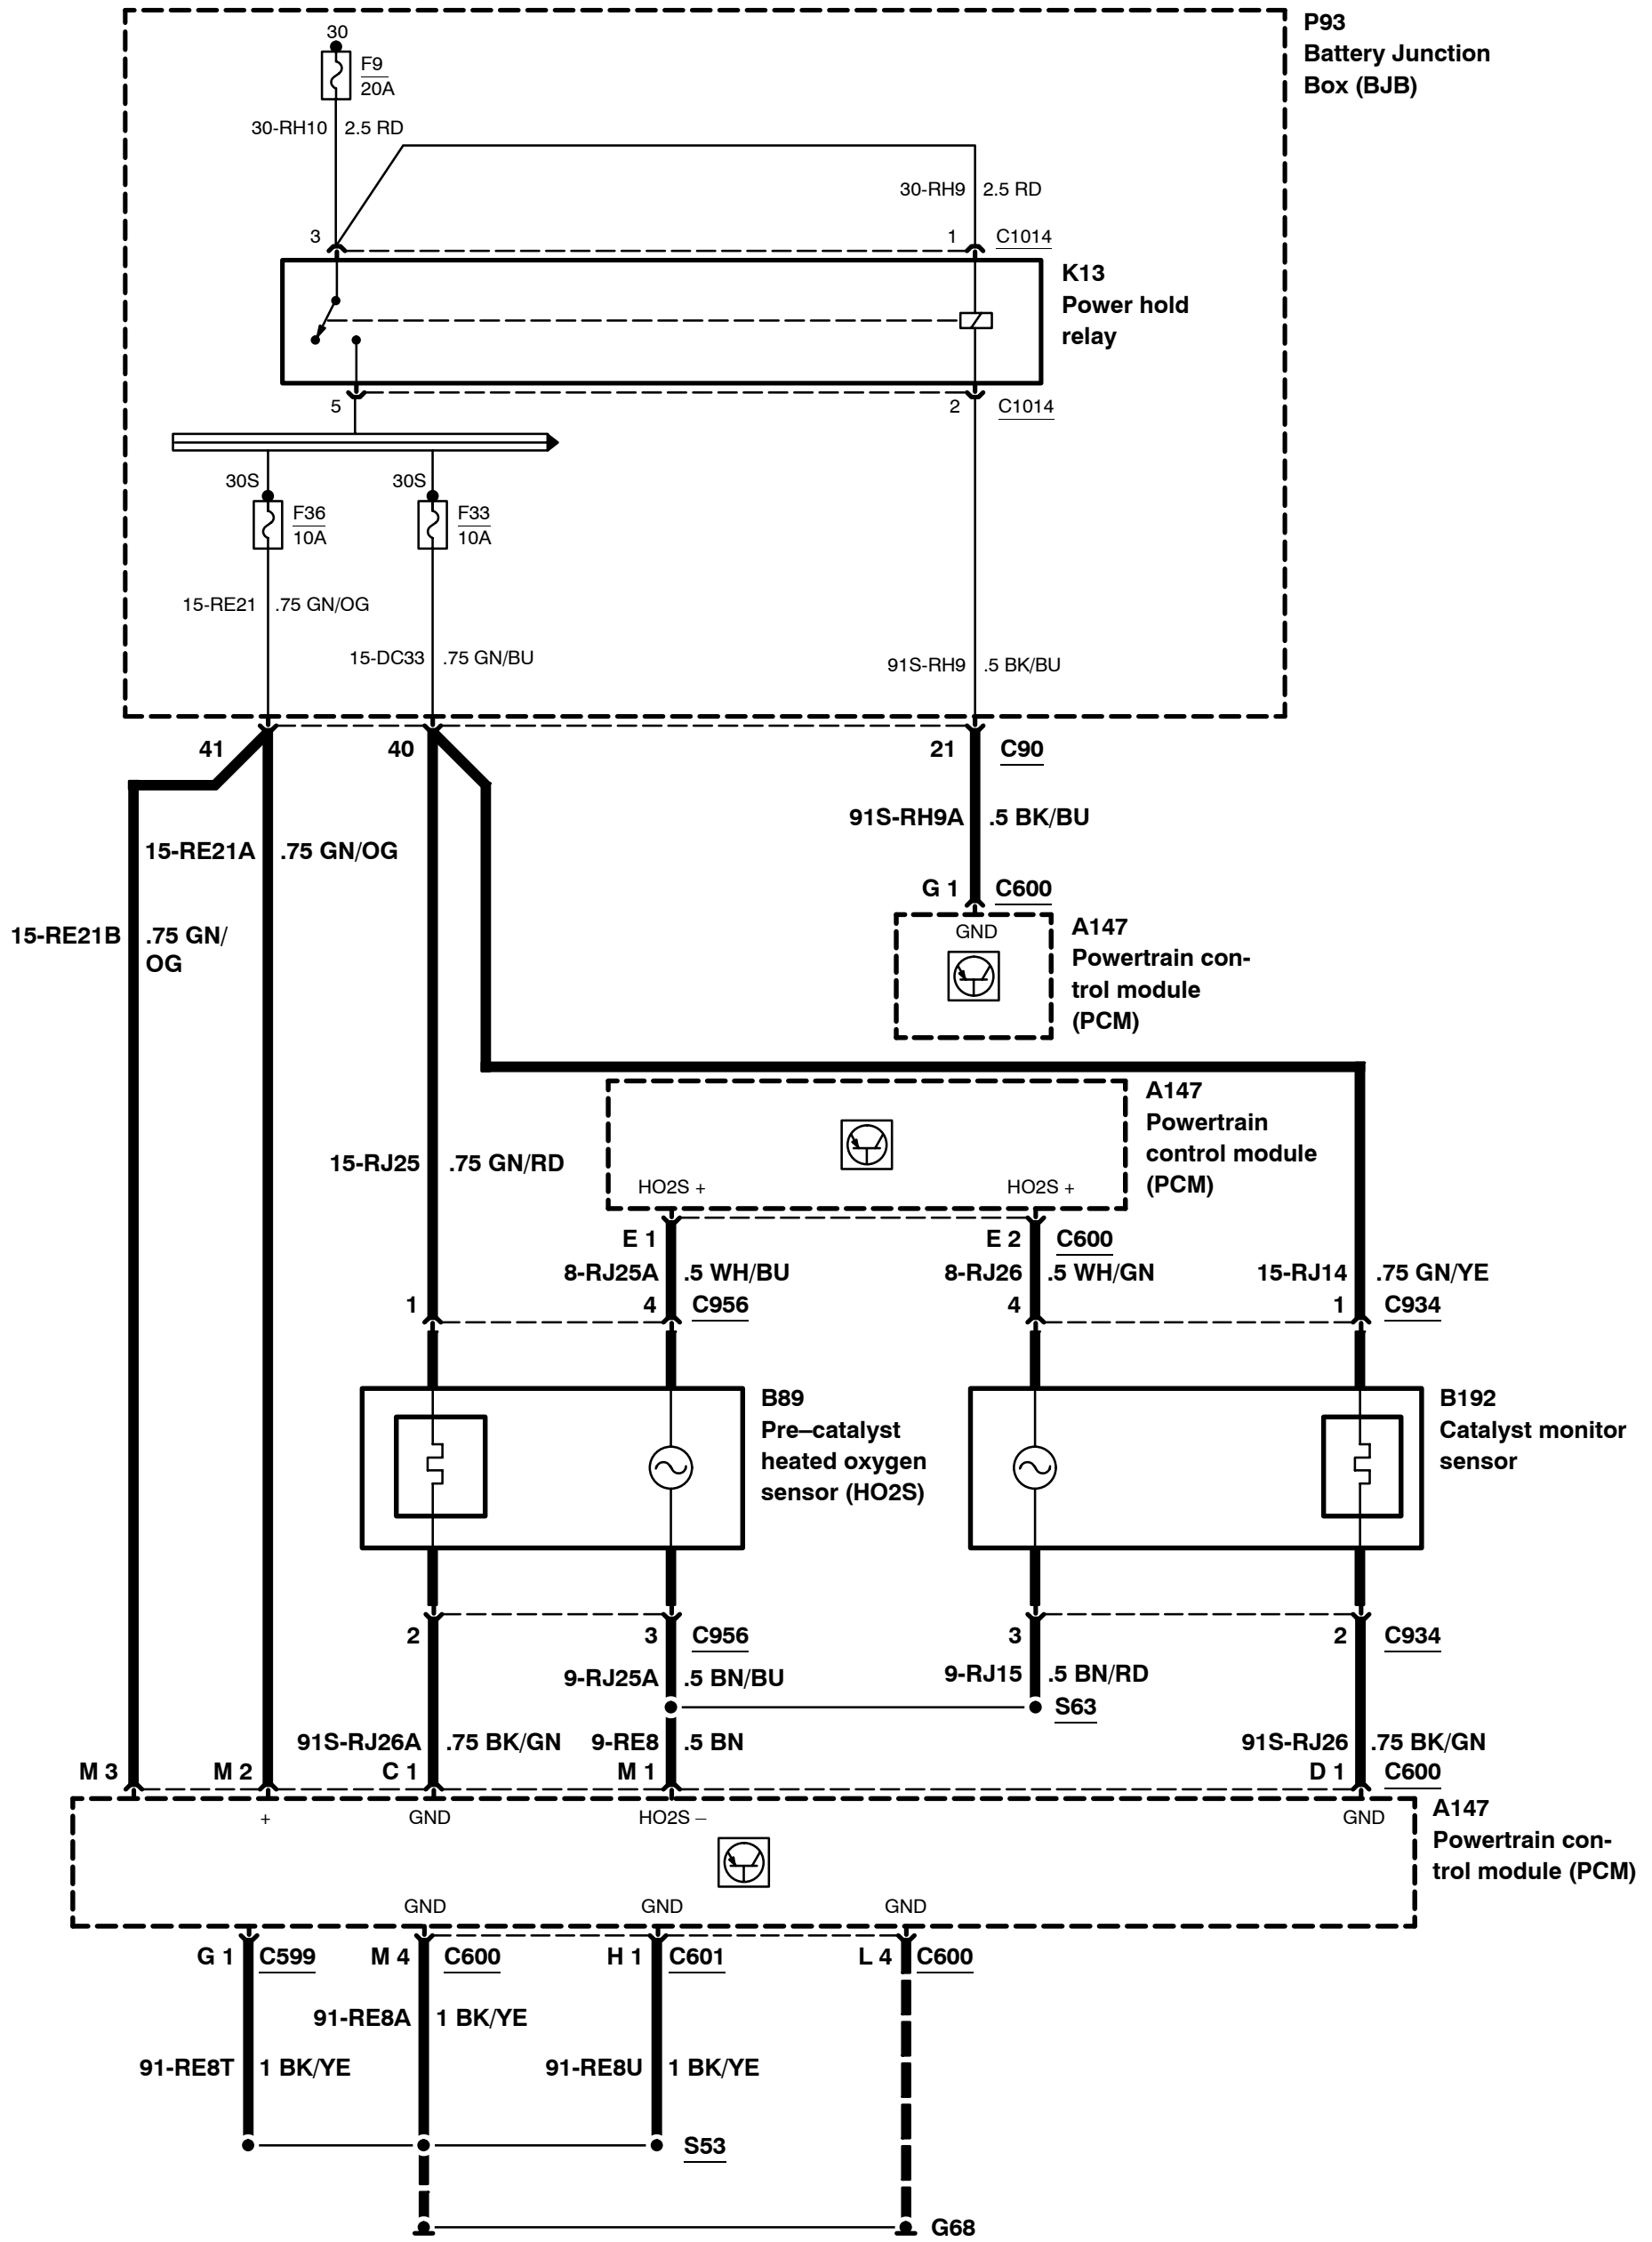



Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4), as of model year 2009


02/2008  
303-14B-00-8  
2008.25  
Focus

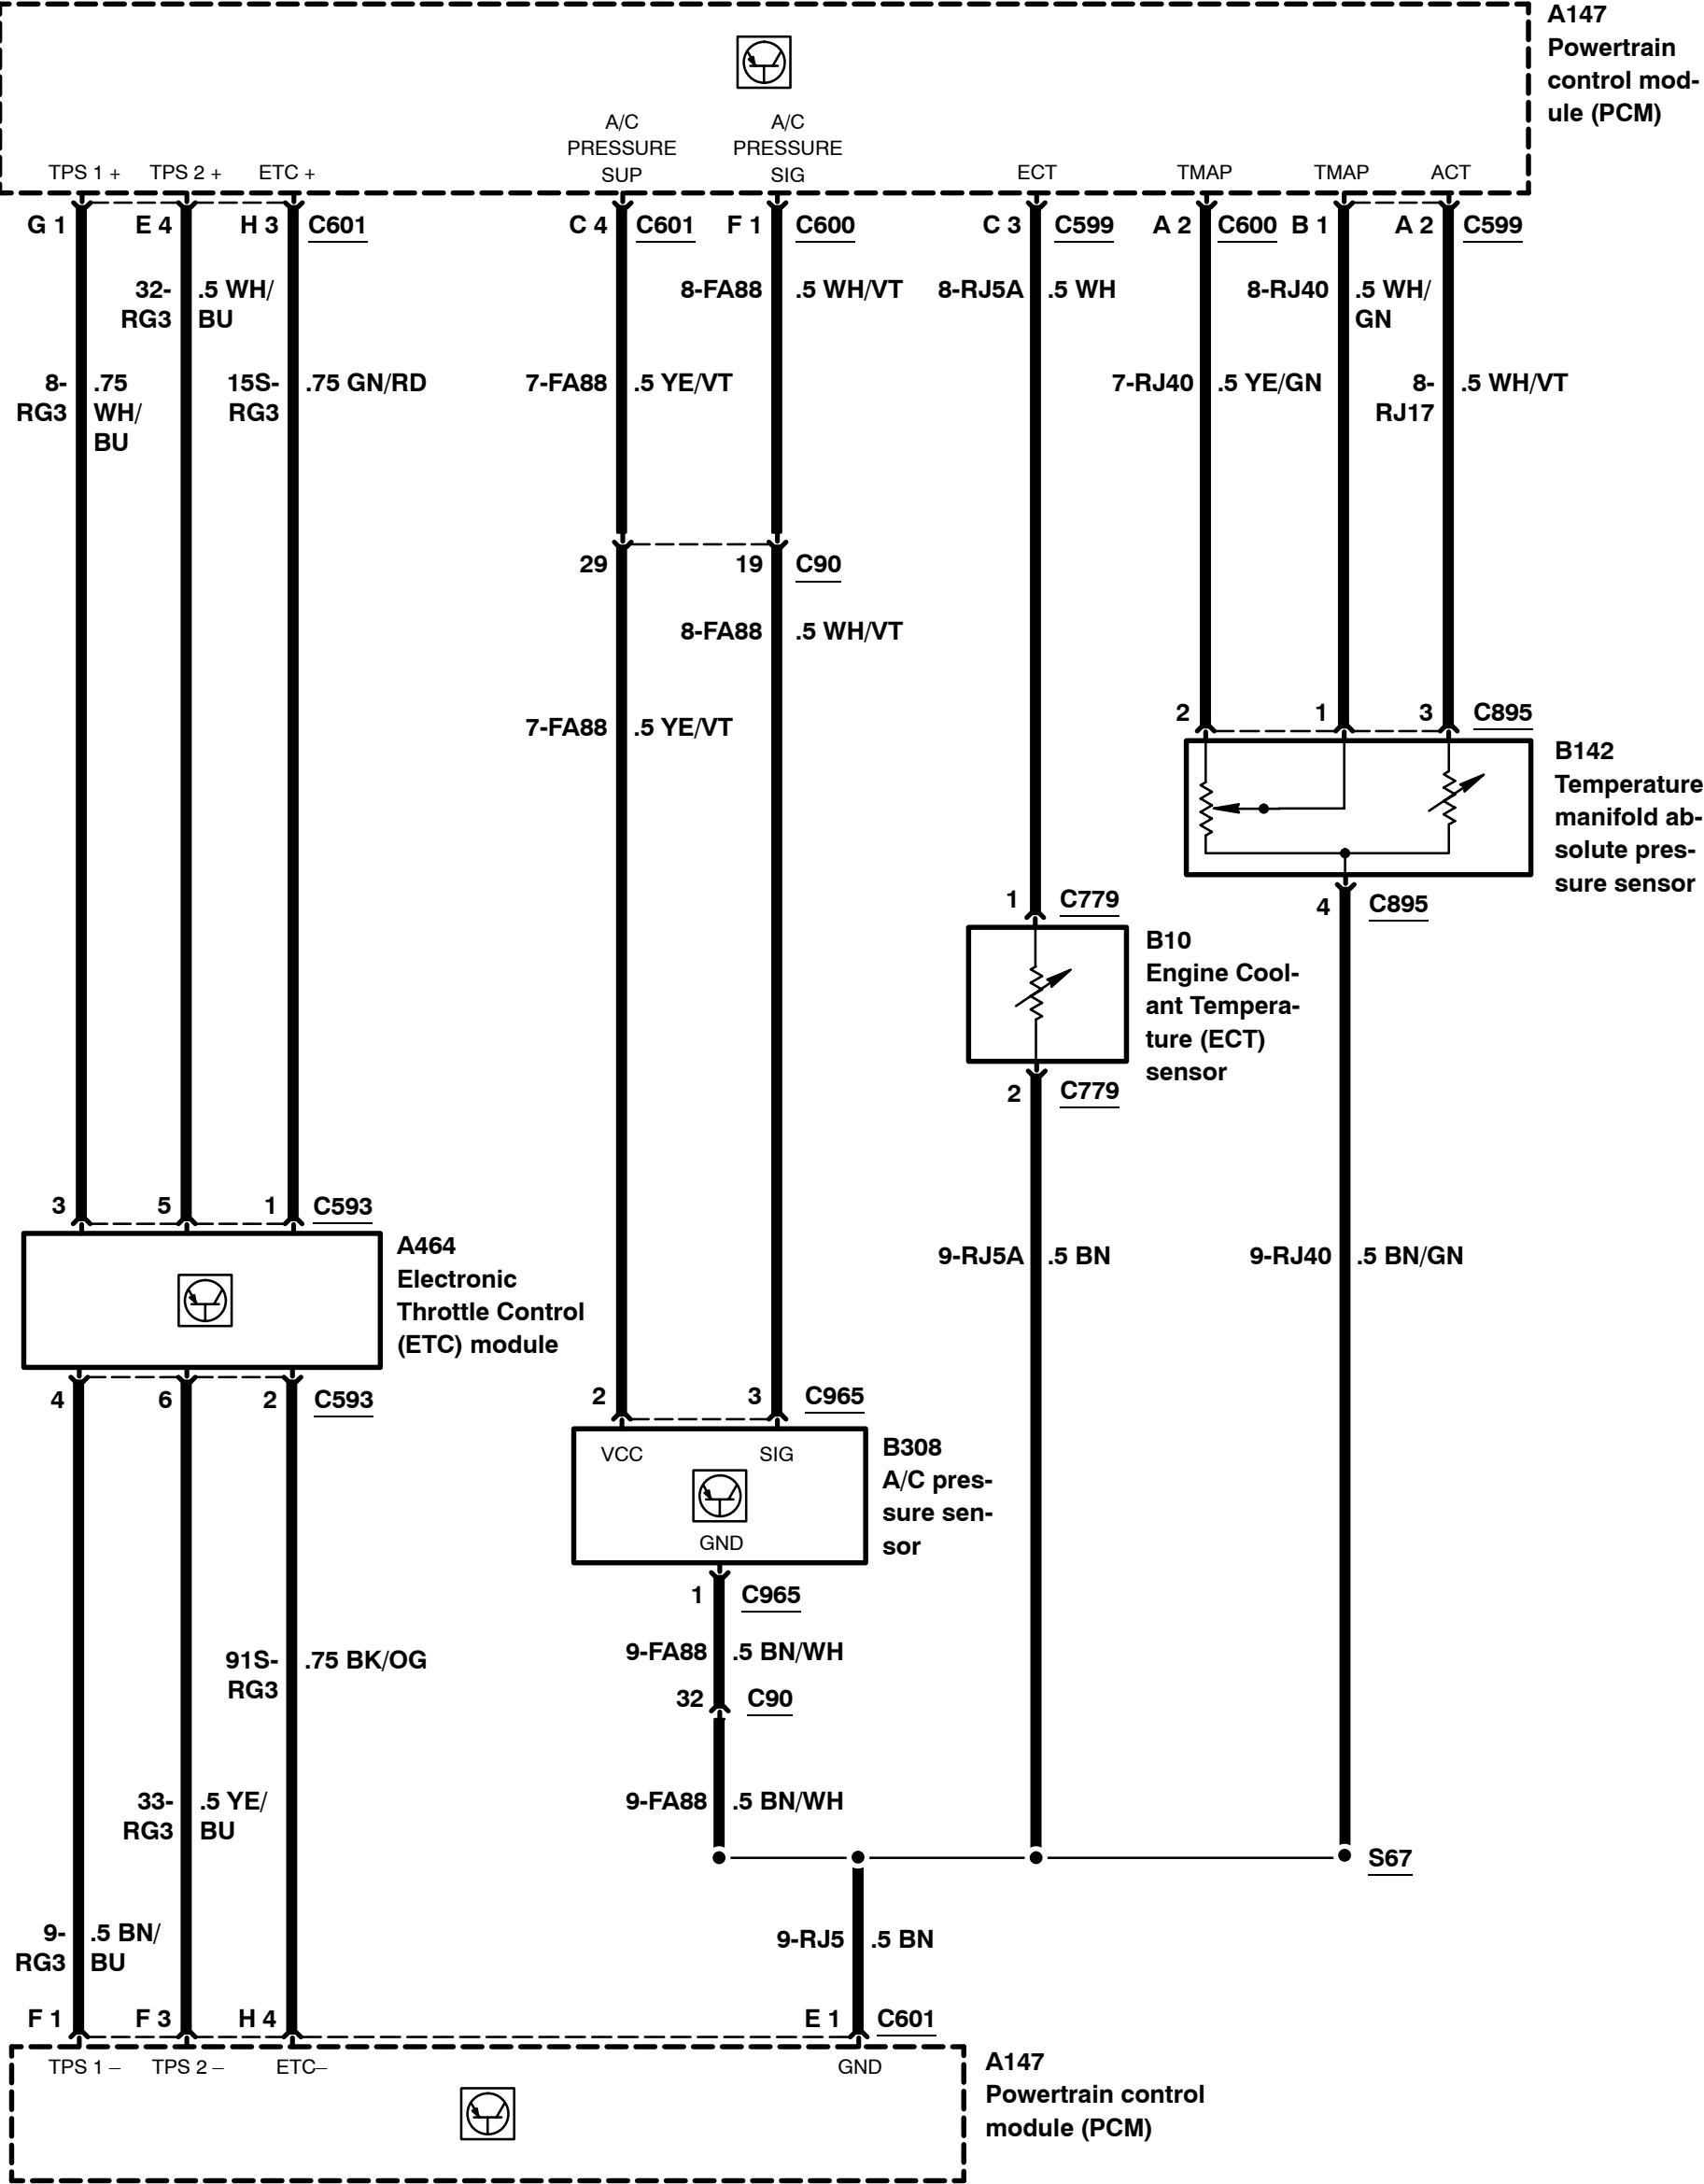




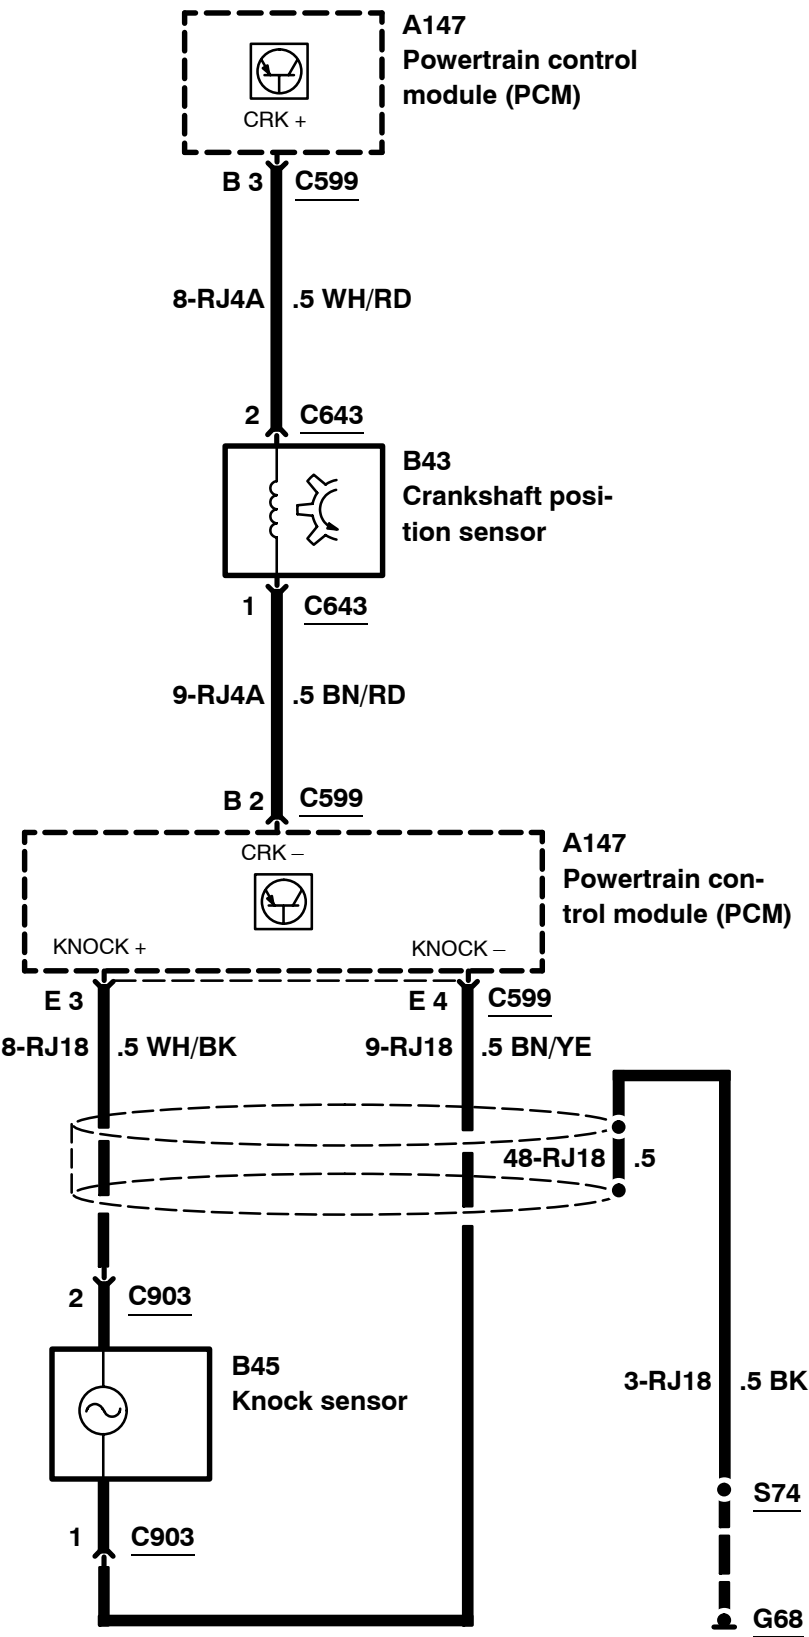


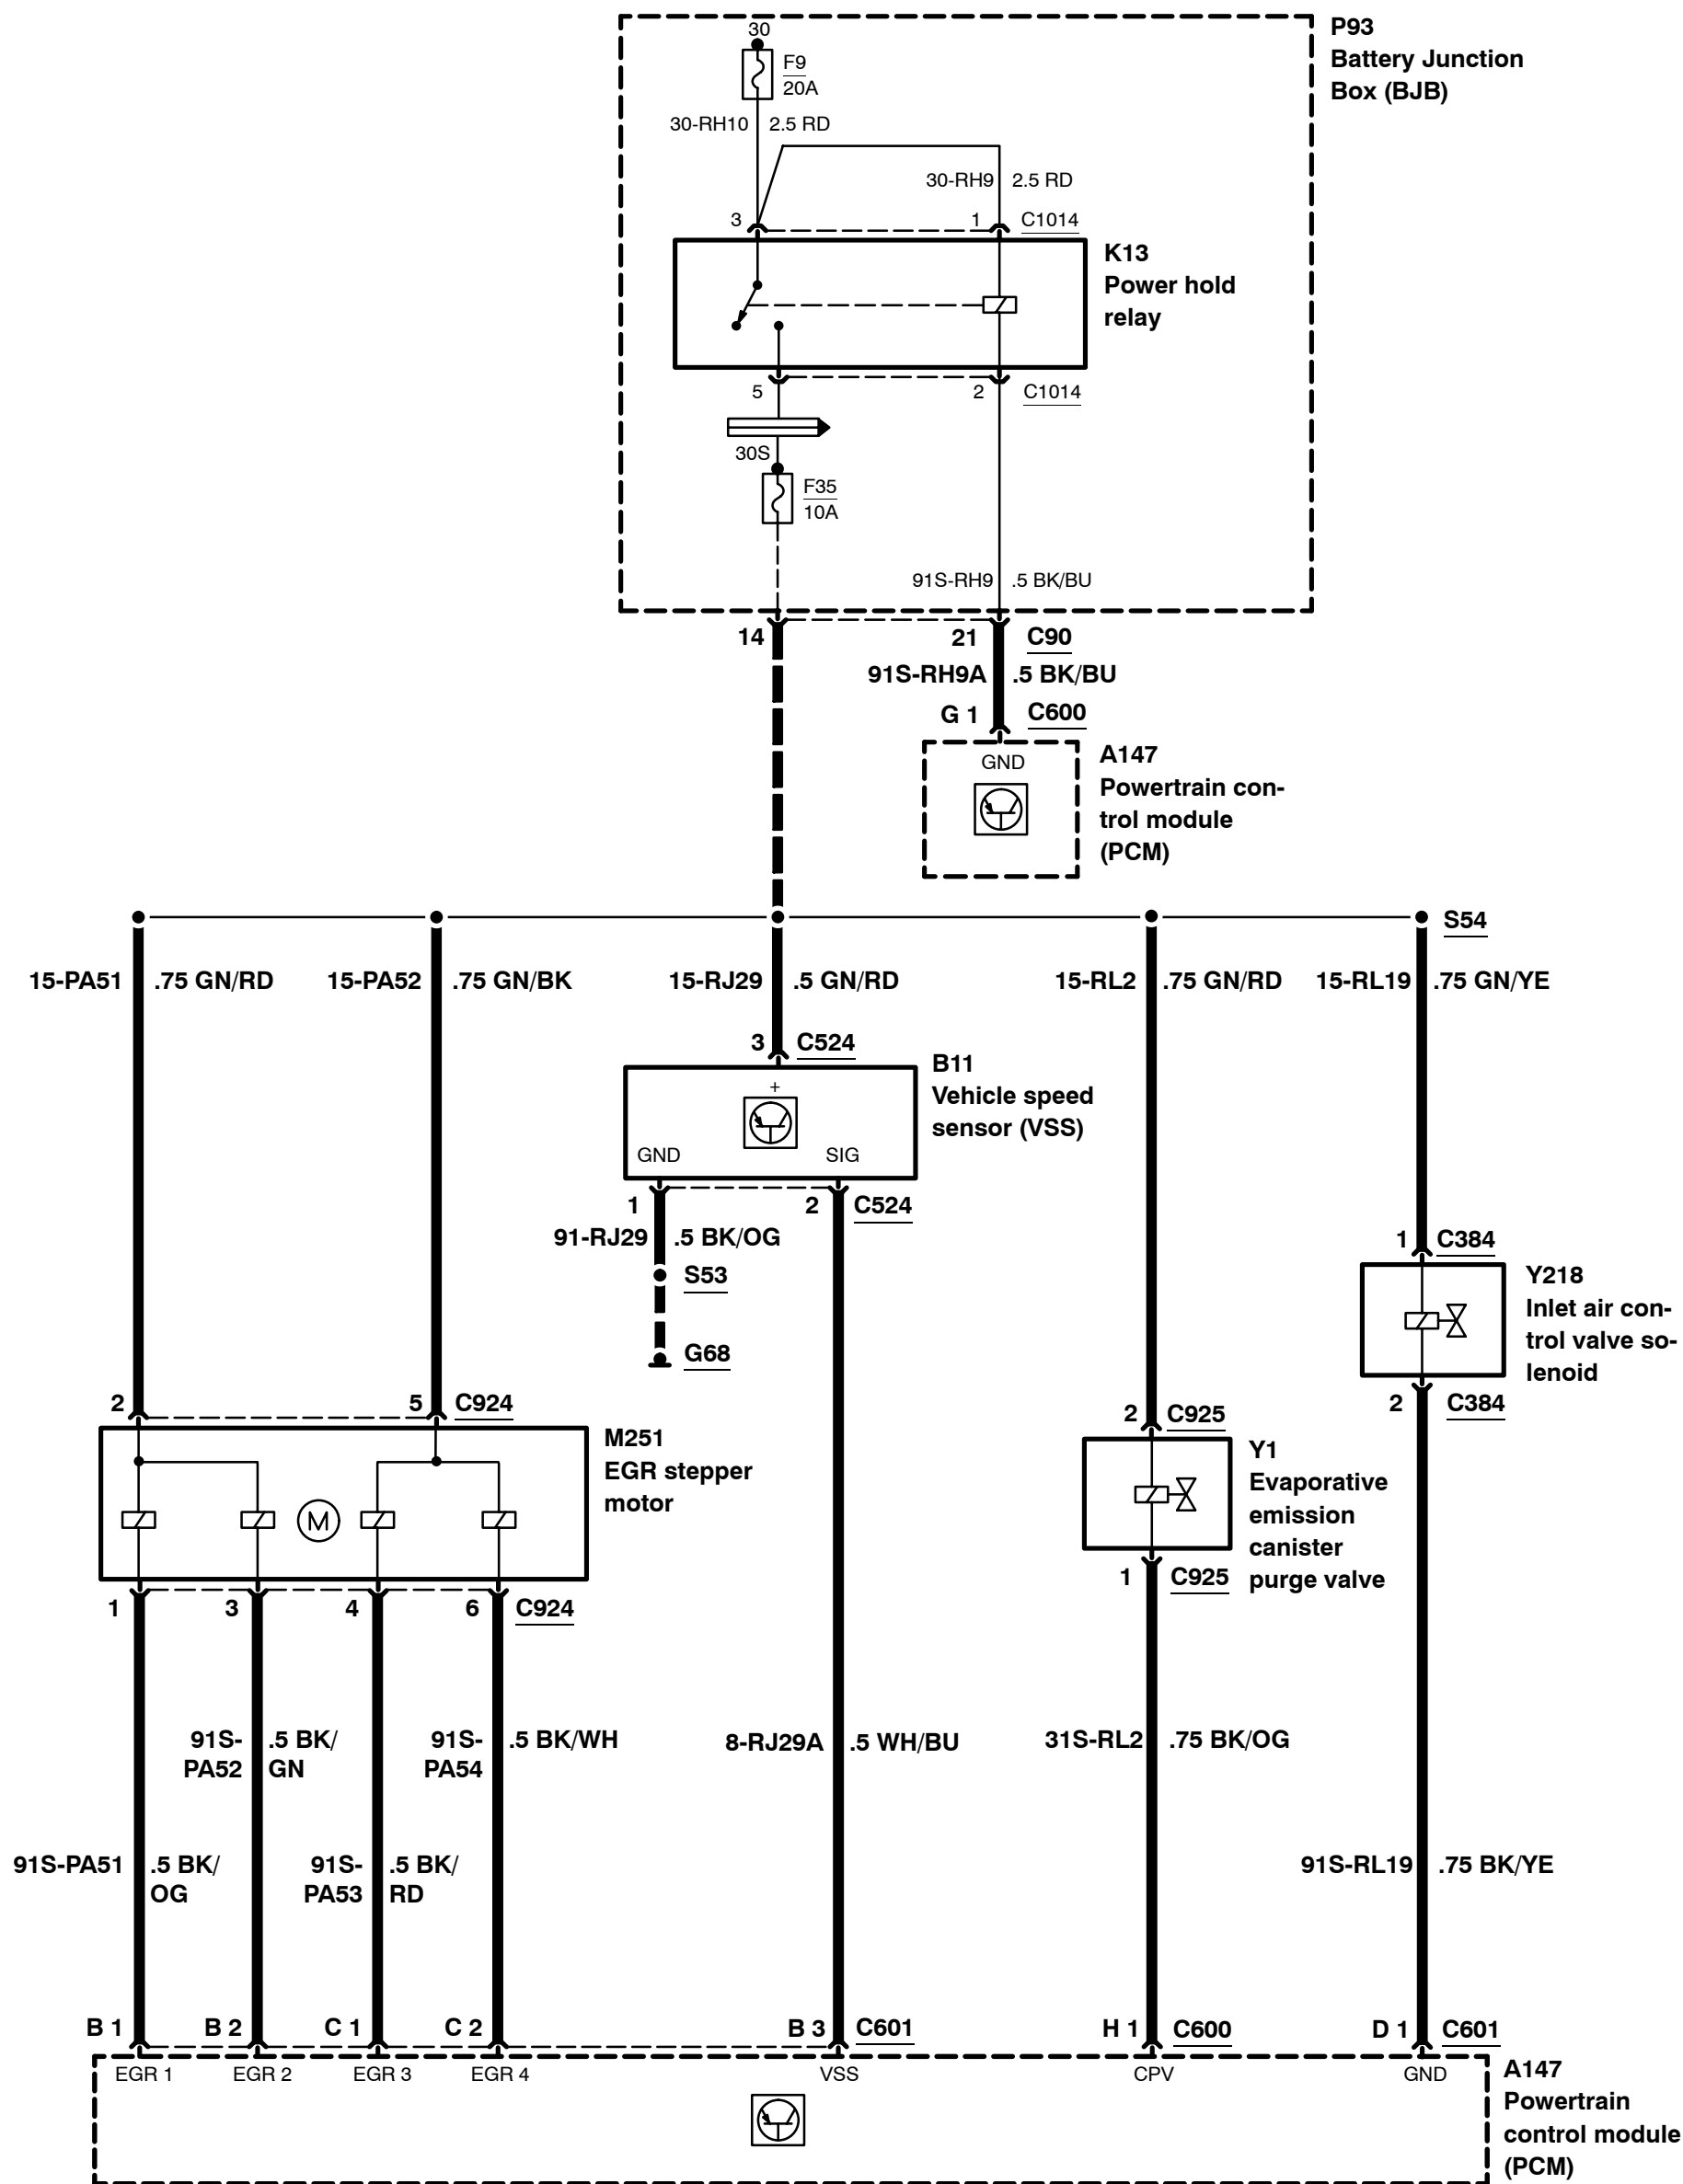

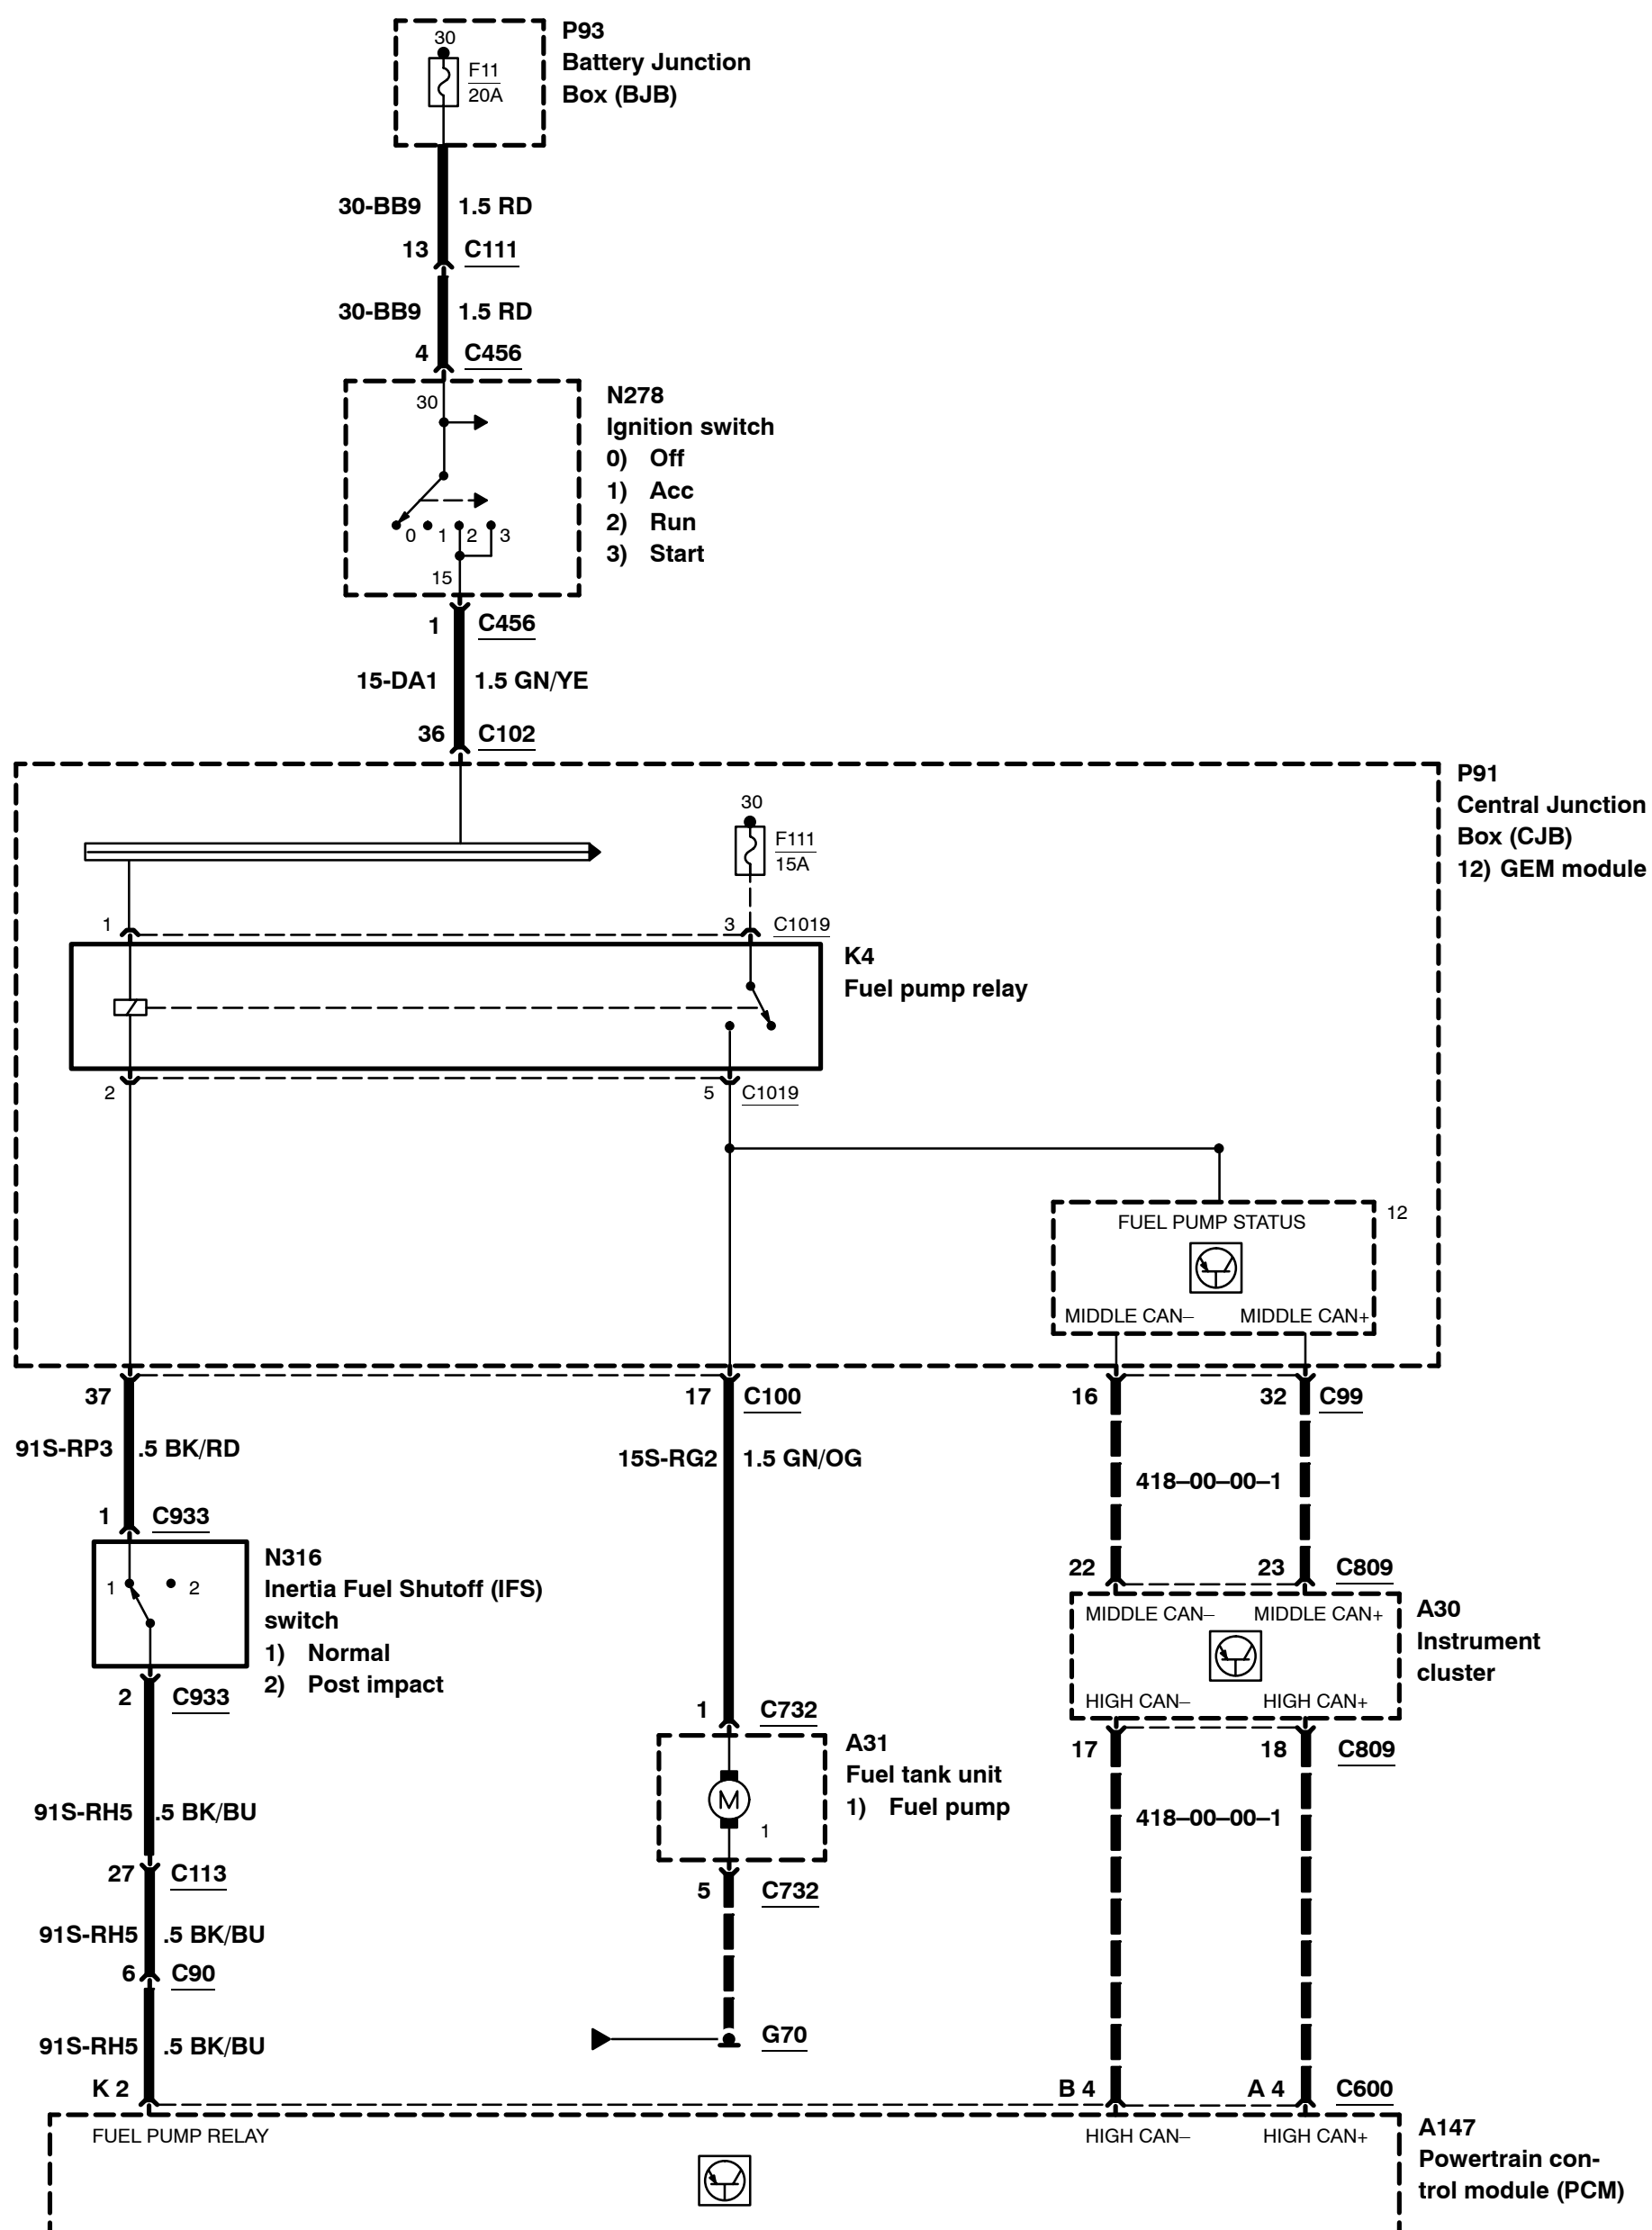

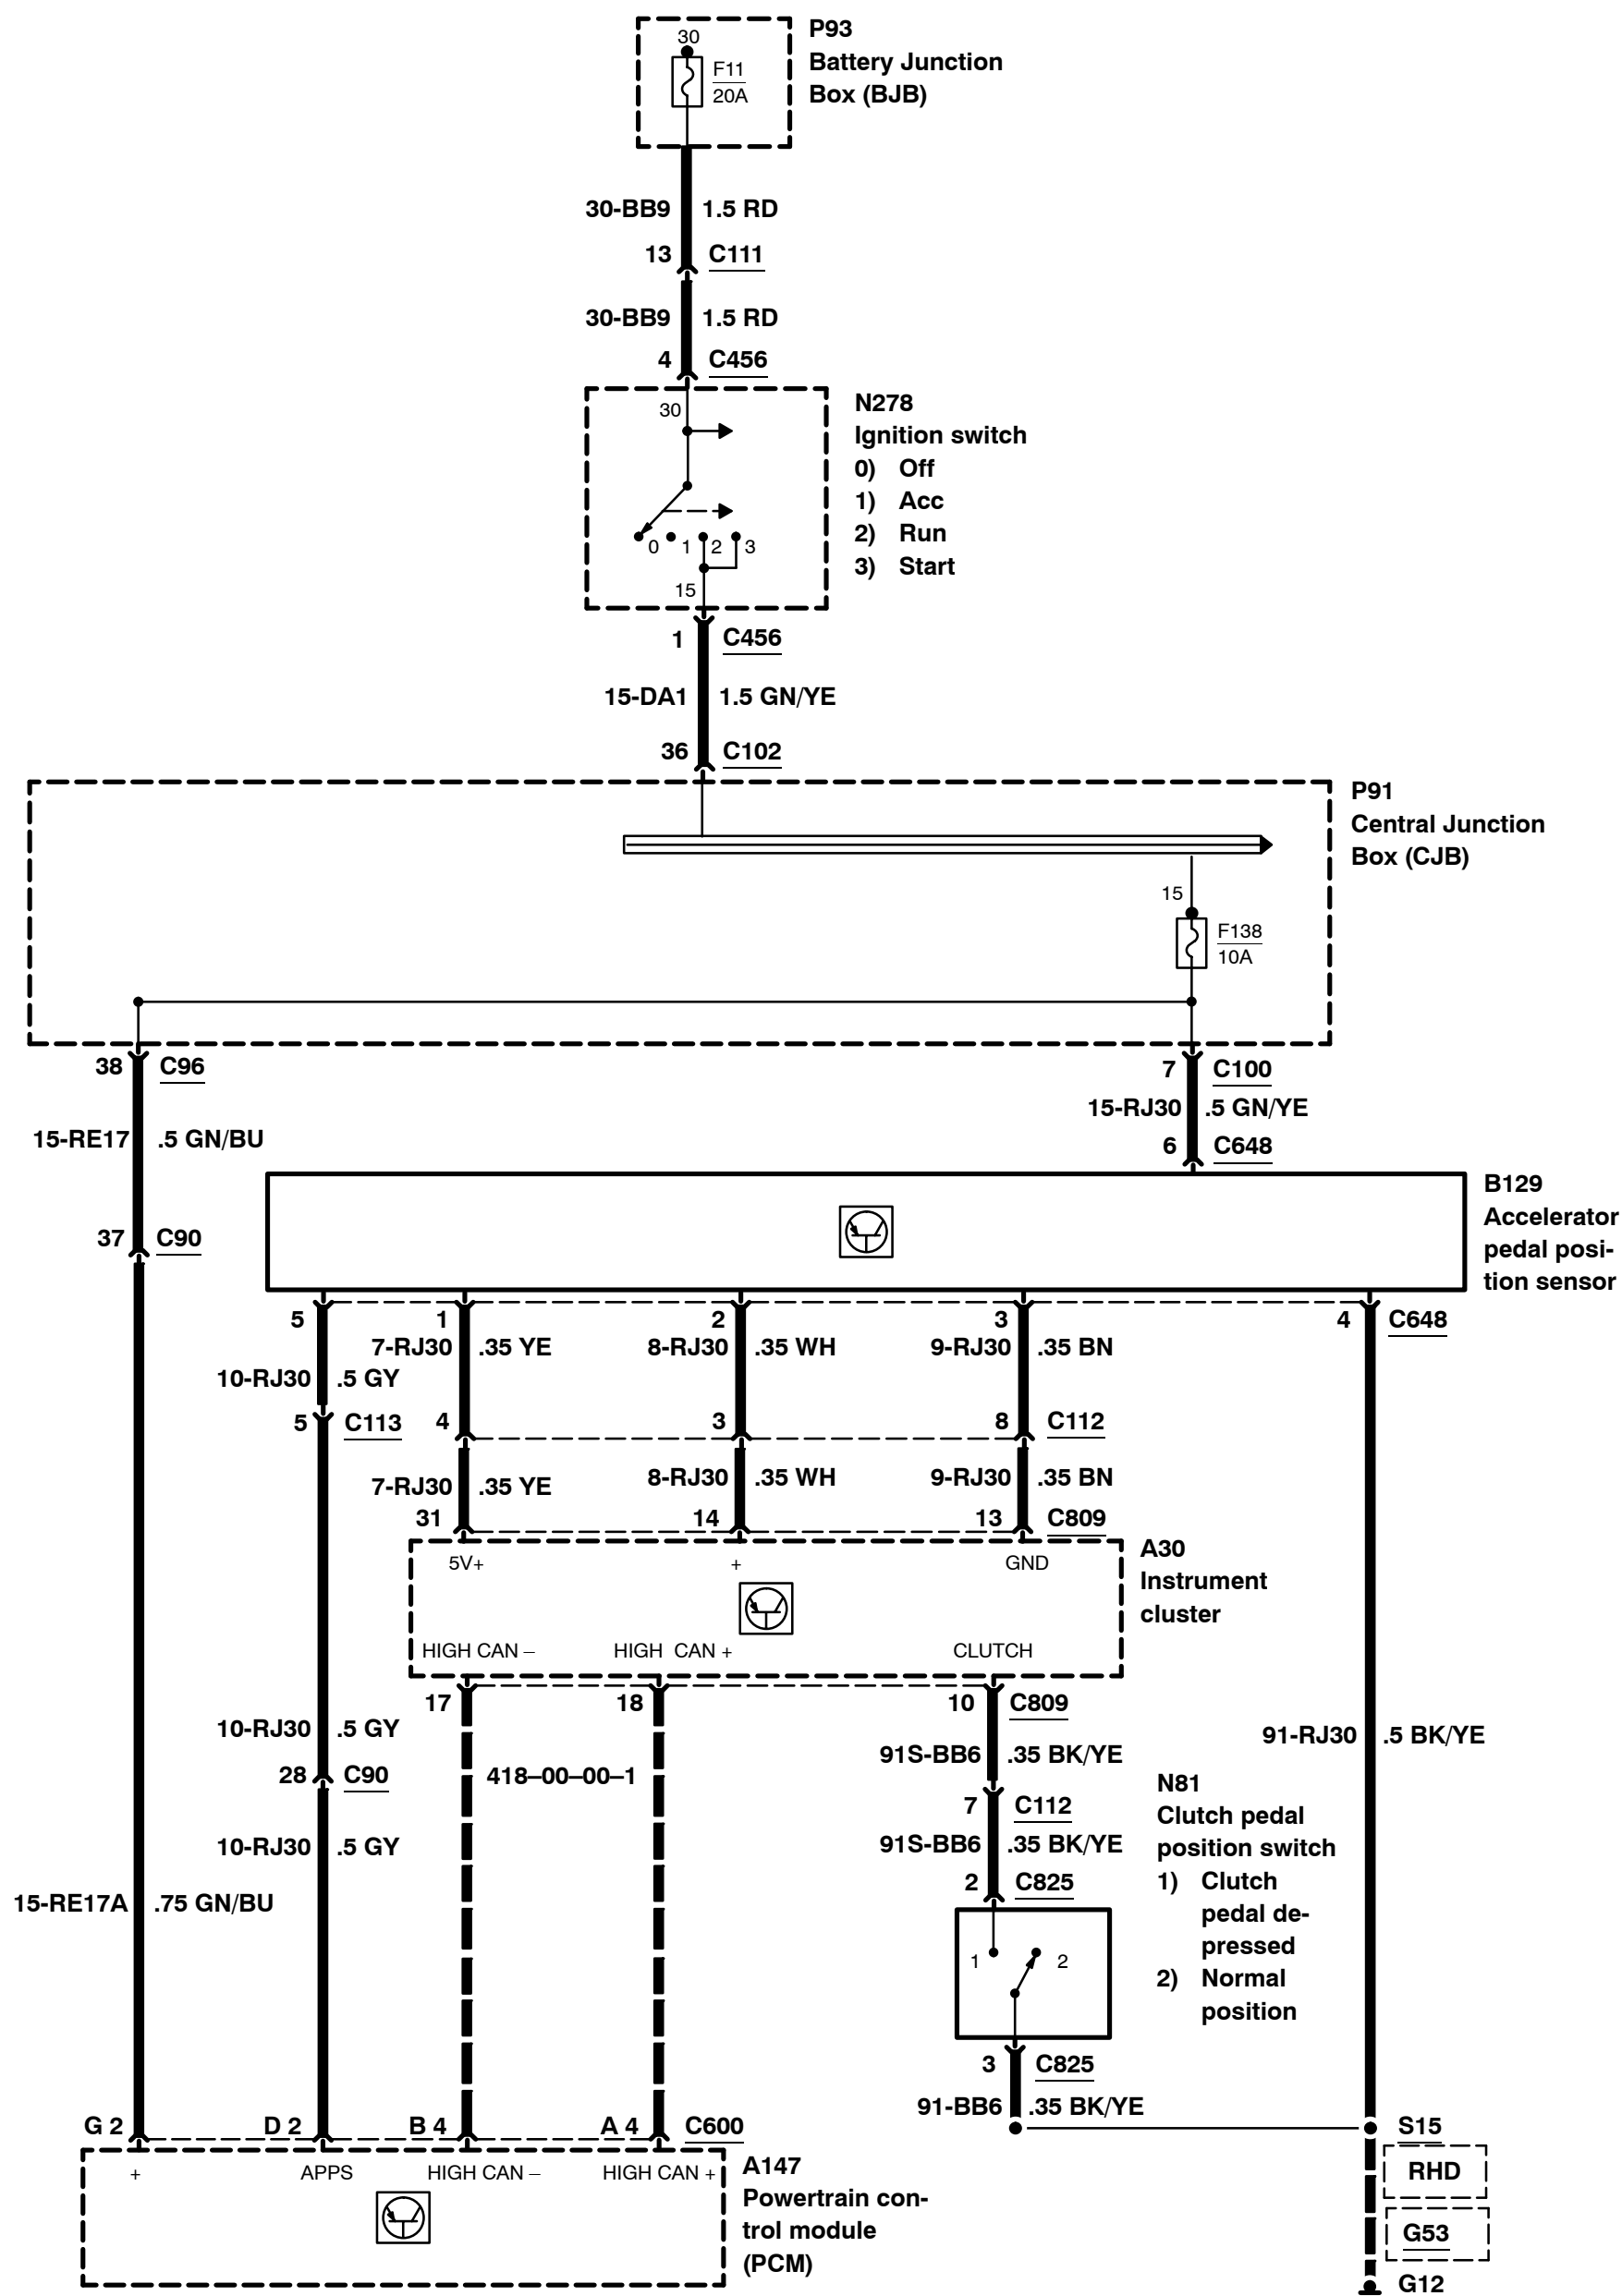


02/2008  
303-14C-00-1  
2008.25  
Focus

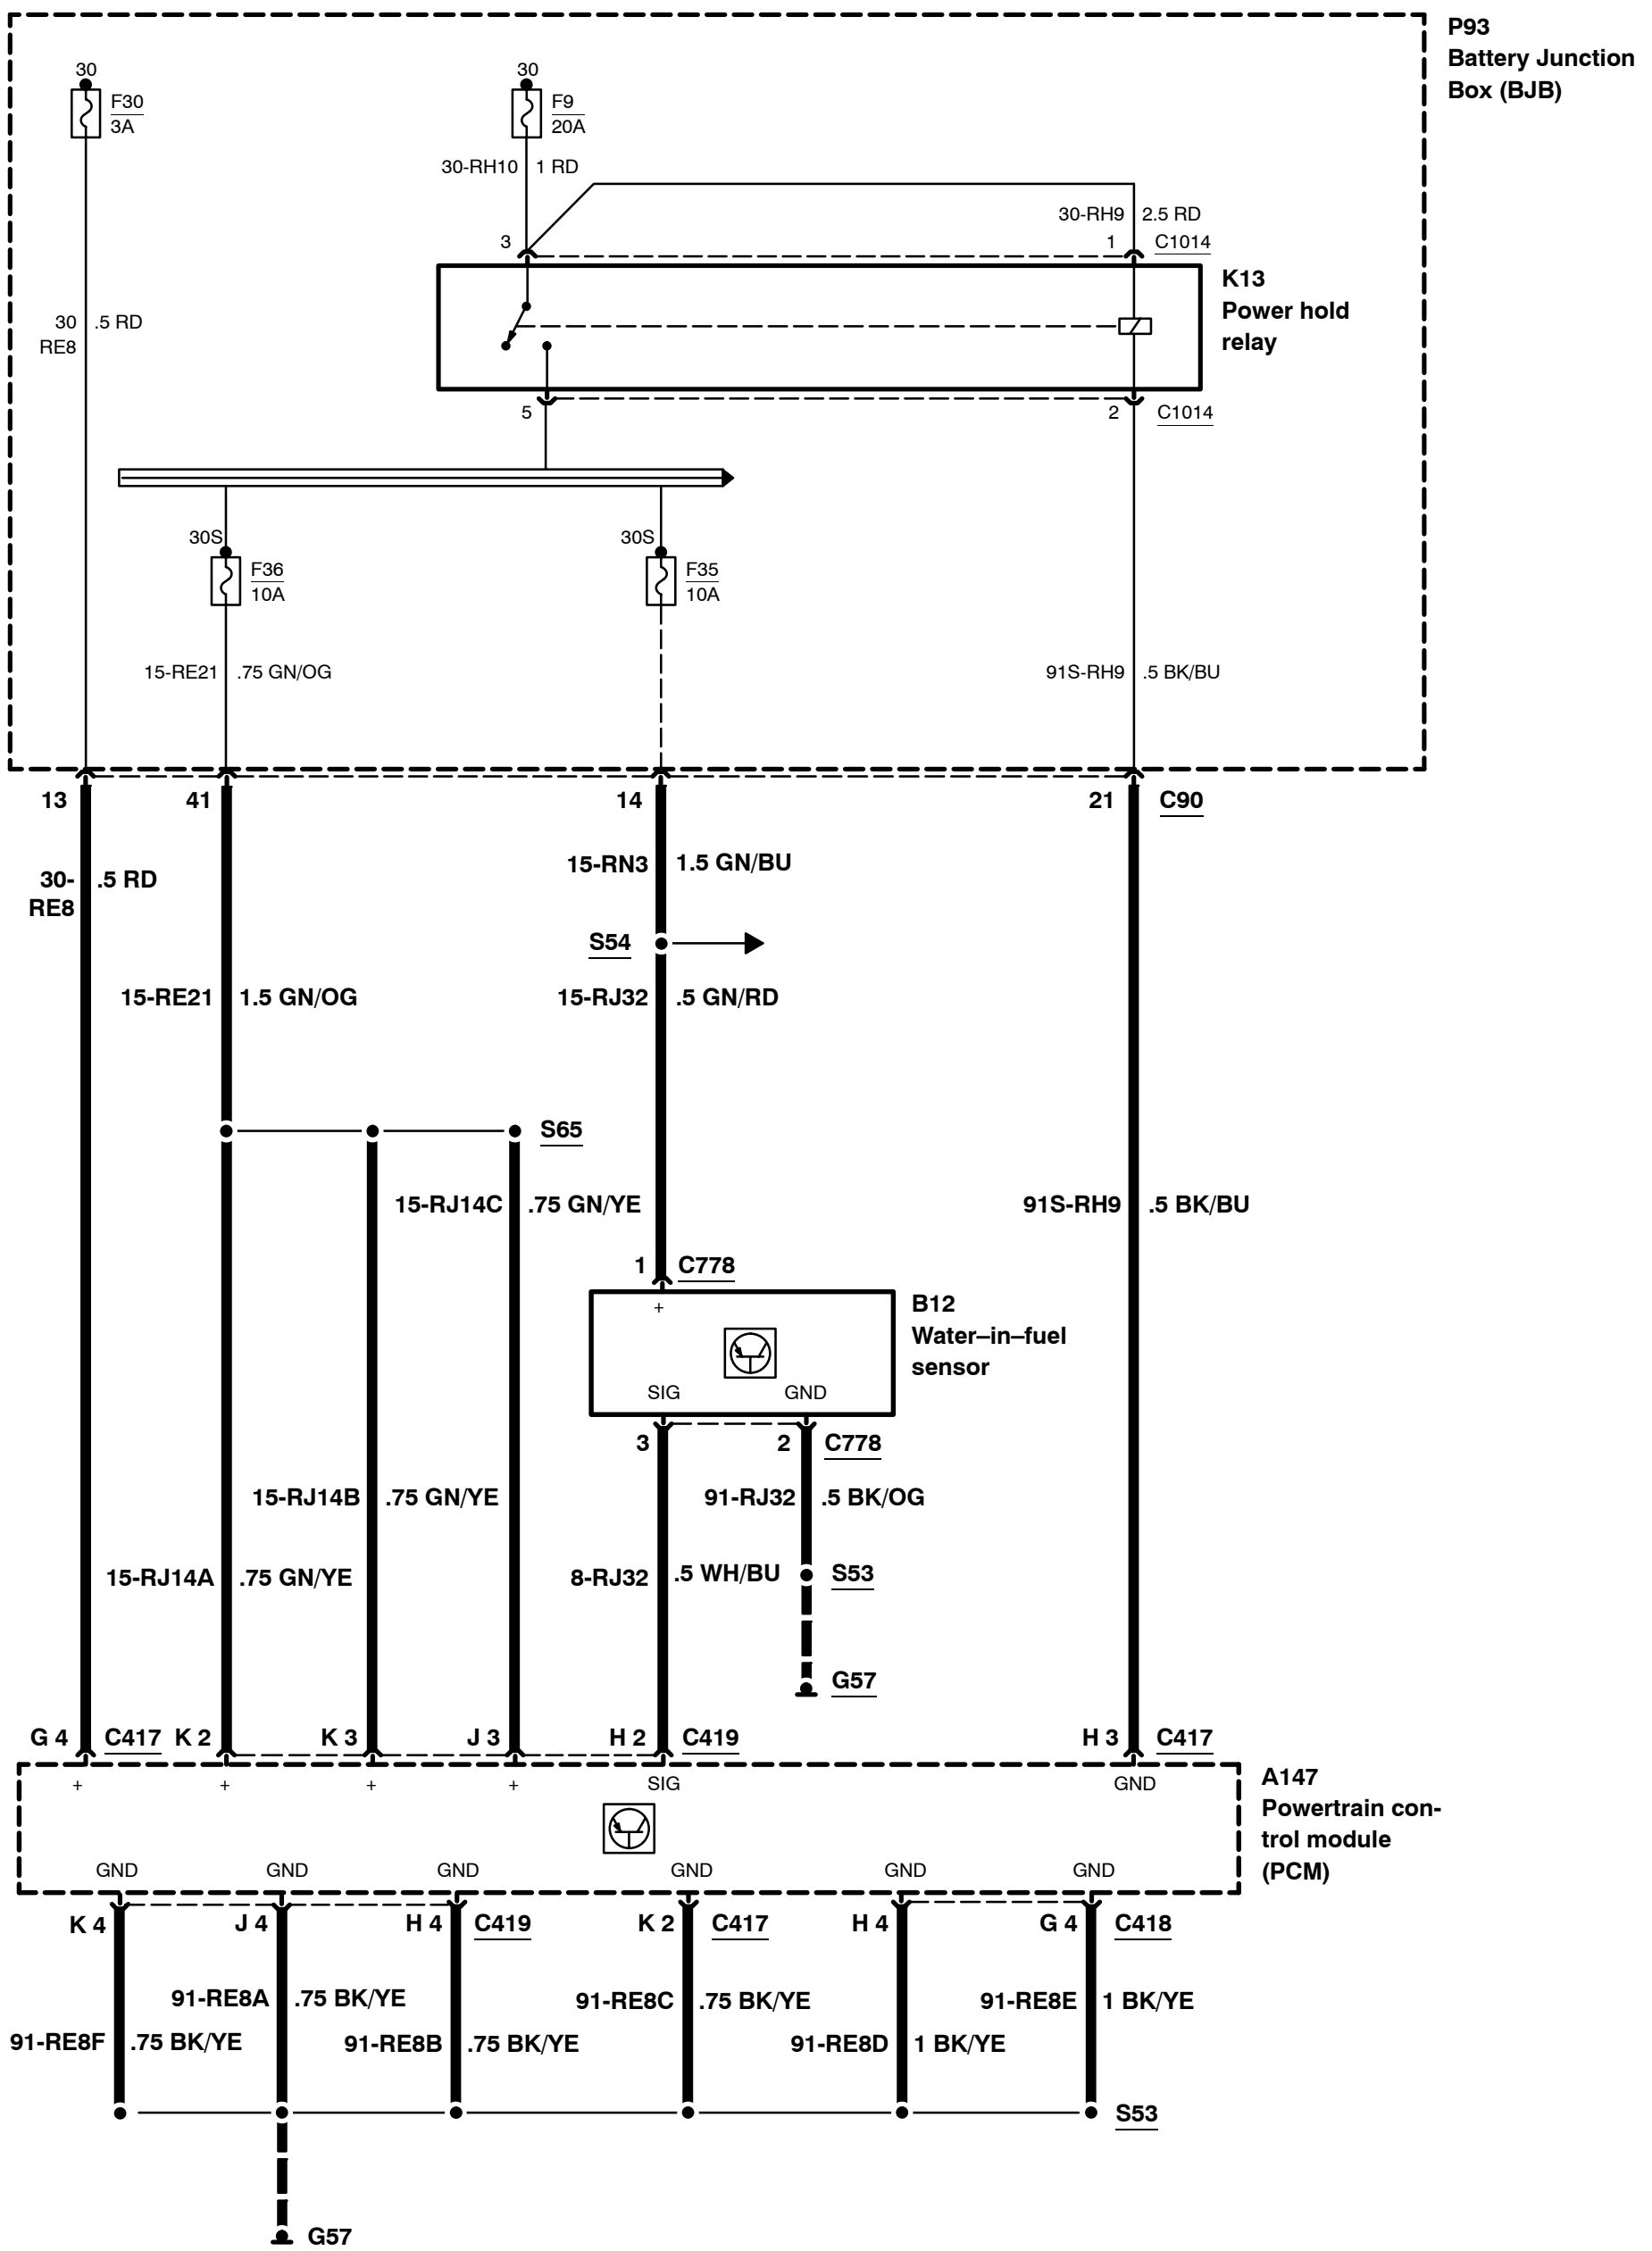

Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6)


02/2008  
303-14C-00-2  
2008.25  
Focus

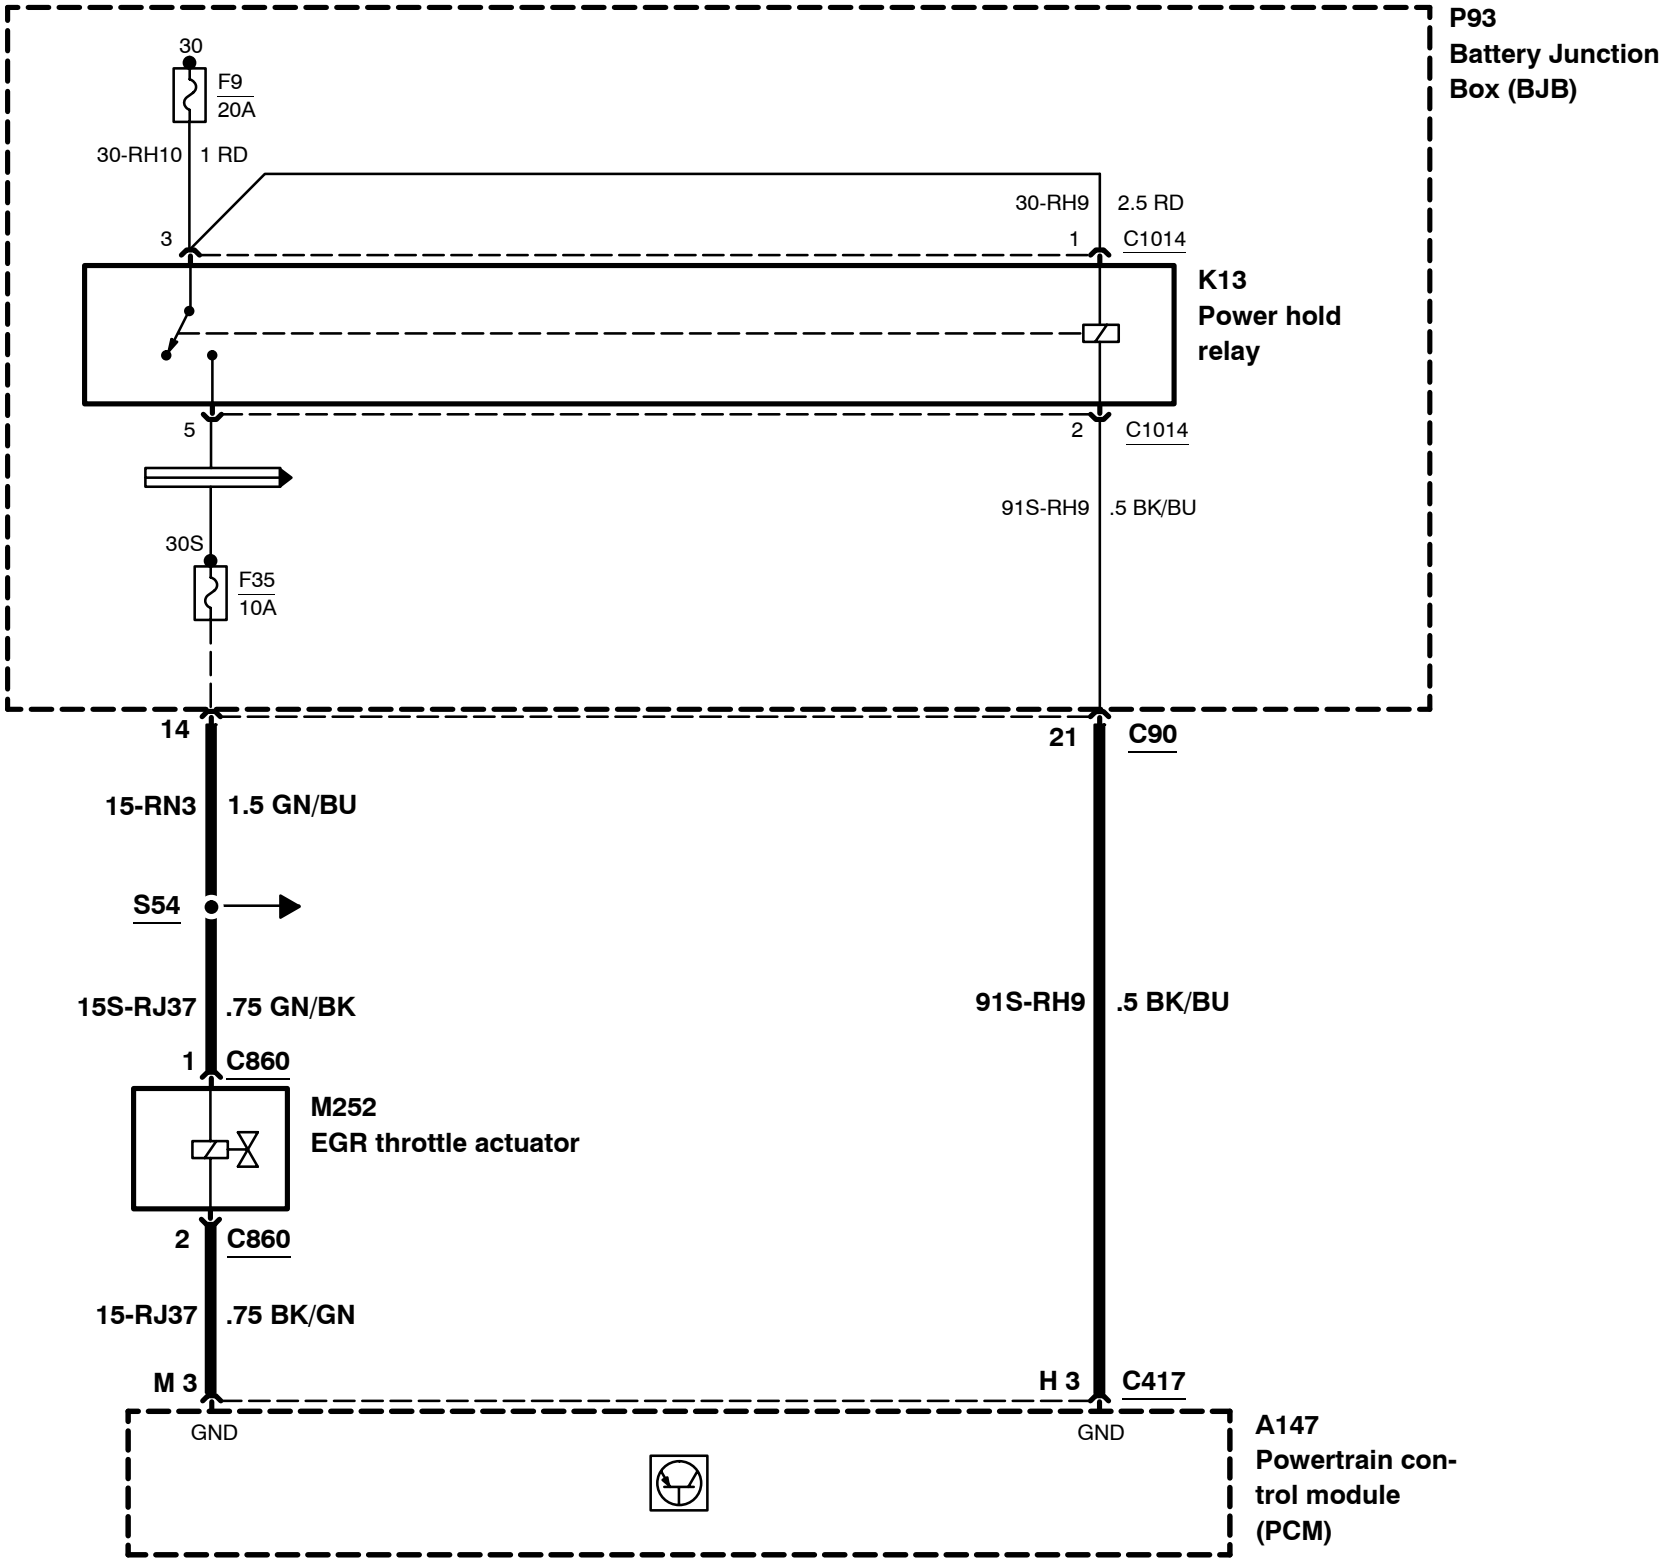




Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6)

02/2008  
303-14C-00-3  
2008.25  
Focus

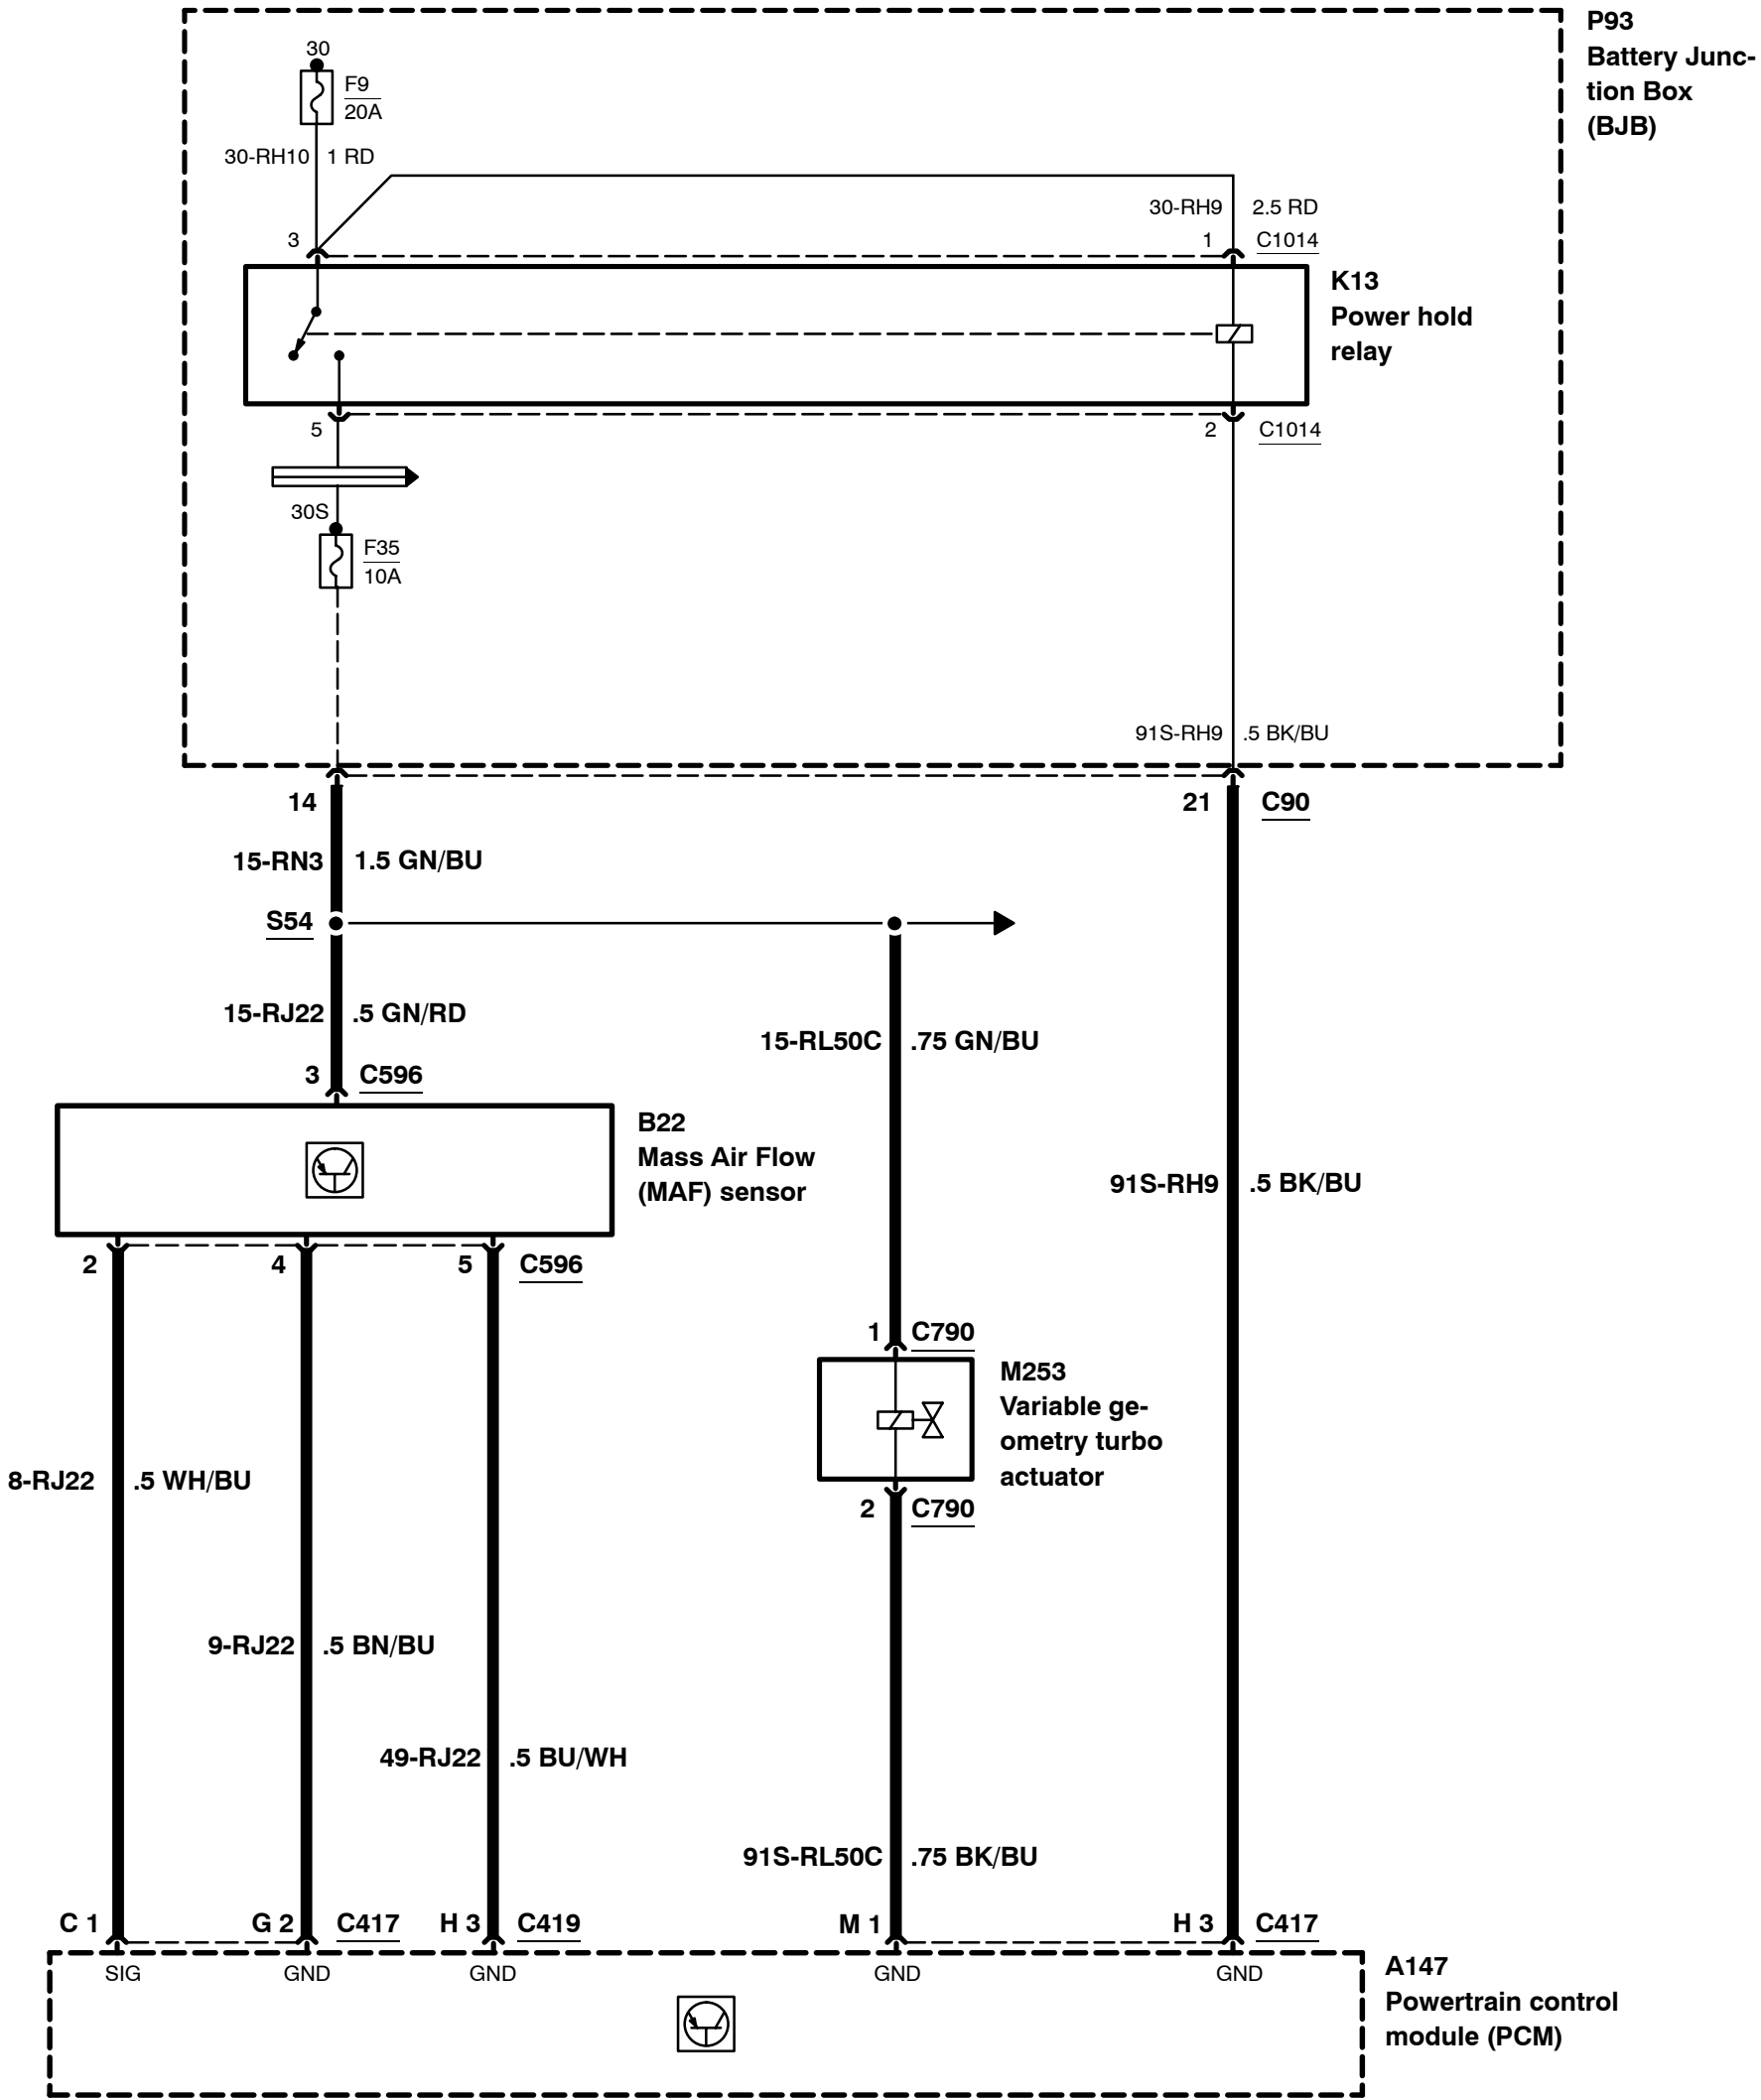

Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6)


02/2008  
303-14C-00-4  
2008.25  
Focus

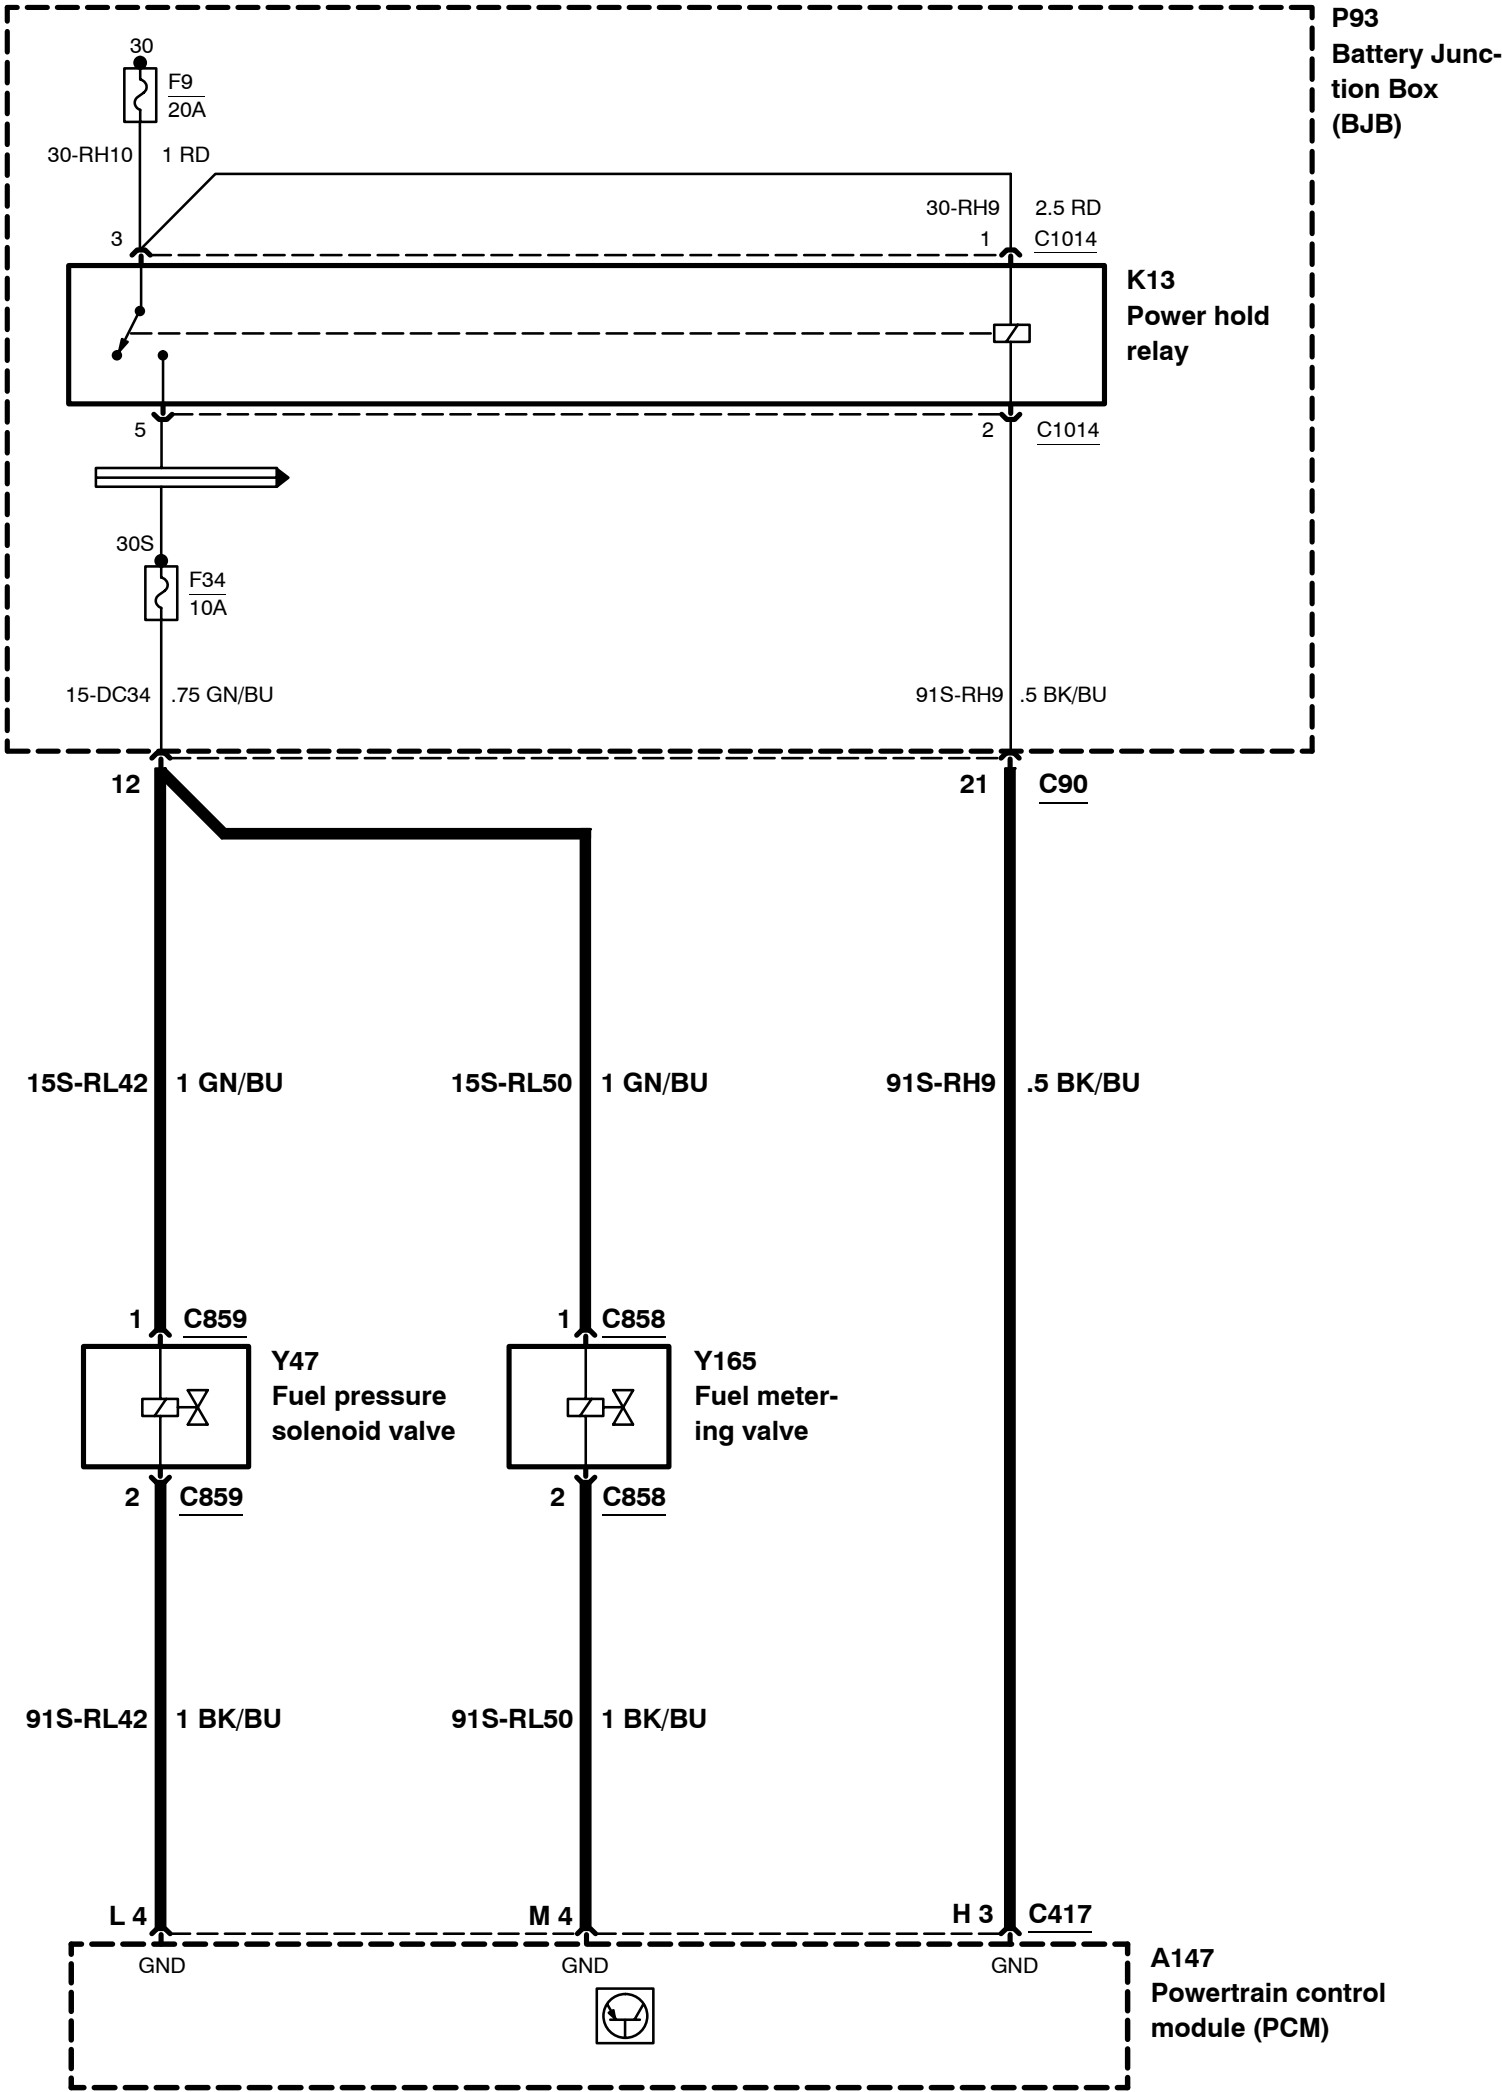




# Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6)

02/2008  
303-14C-00-5  
2008.25  
Focus

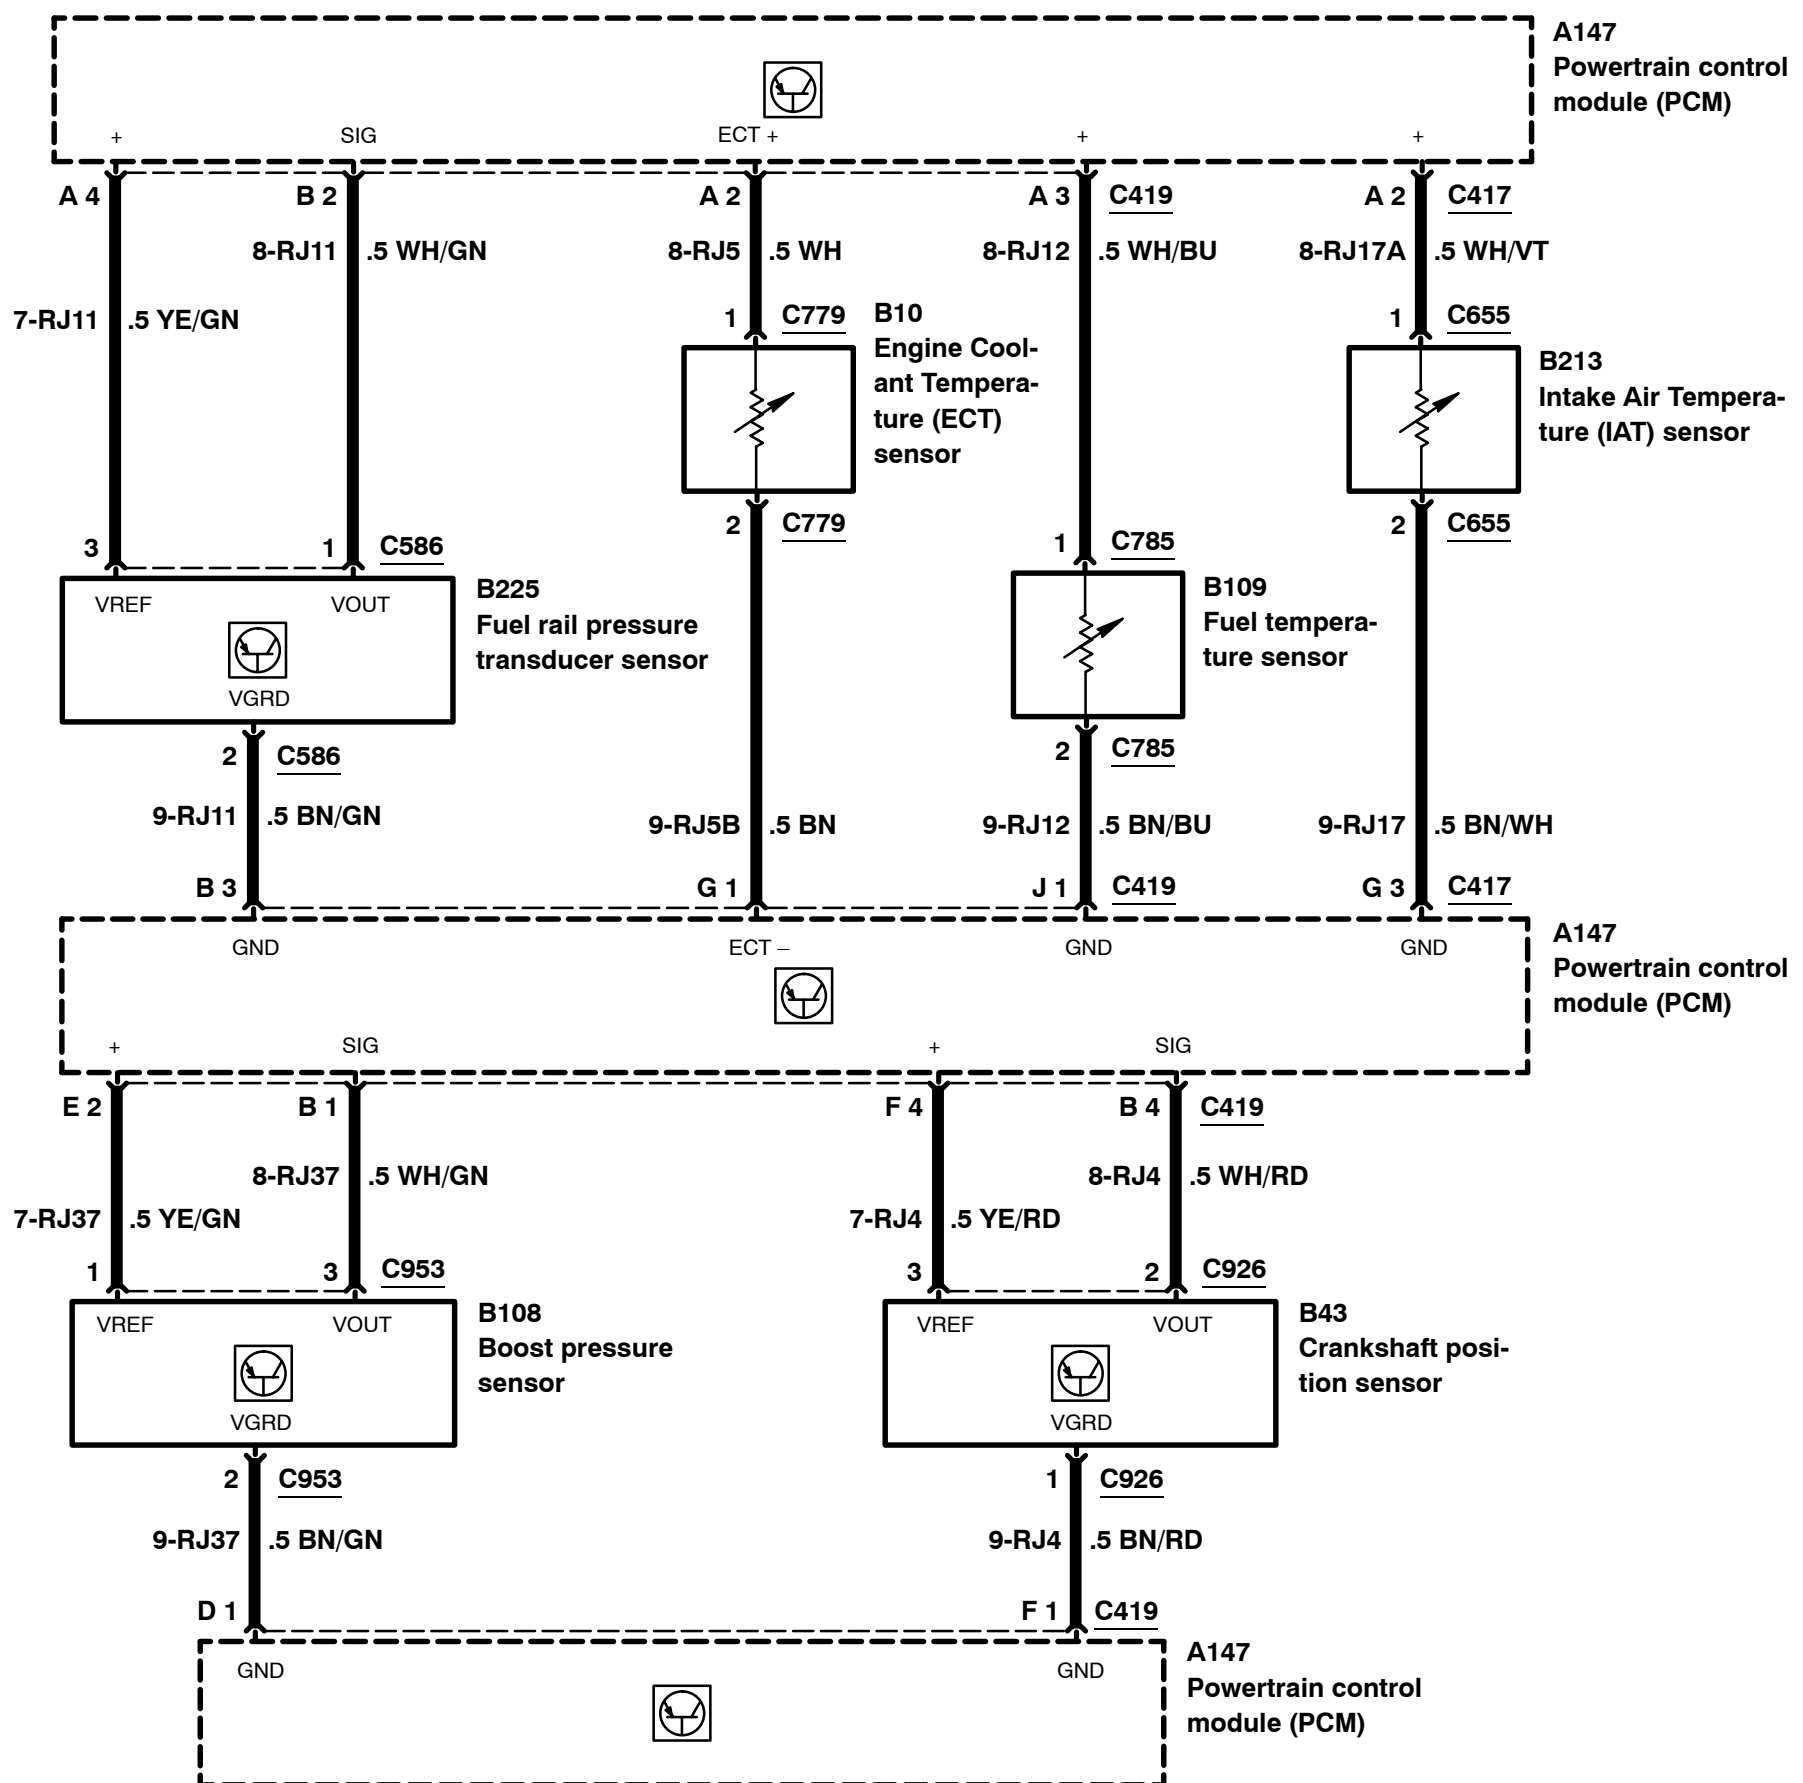


Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6)

02/2008  
303-14C-00-6  
2008.25  
Focus

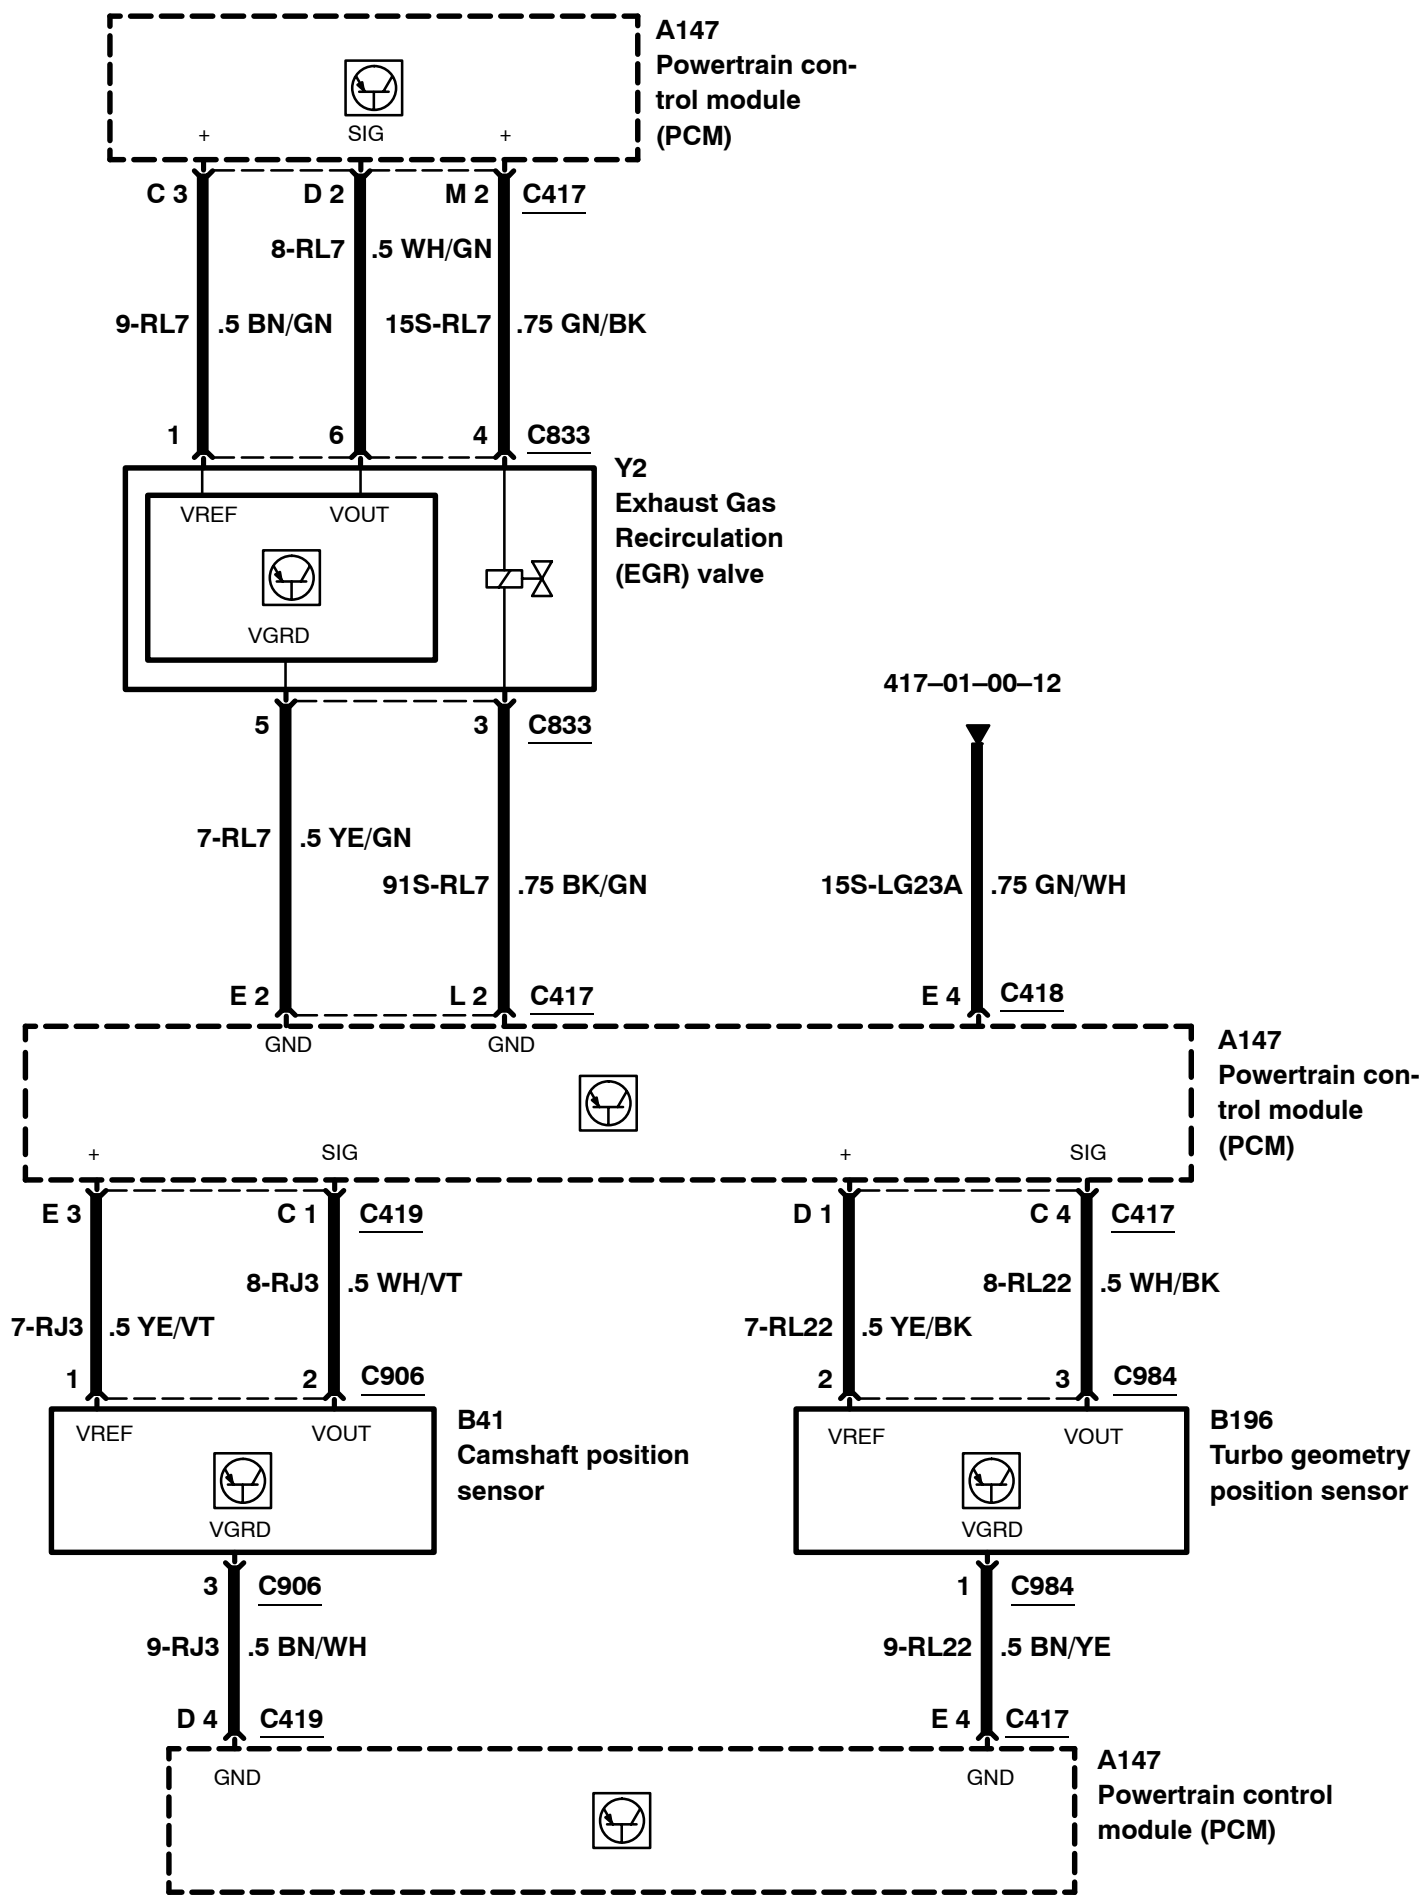


# Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6)

02/2008  
303-14C-00-7  
2008.25  
Focus

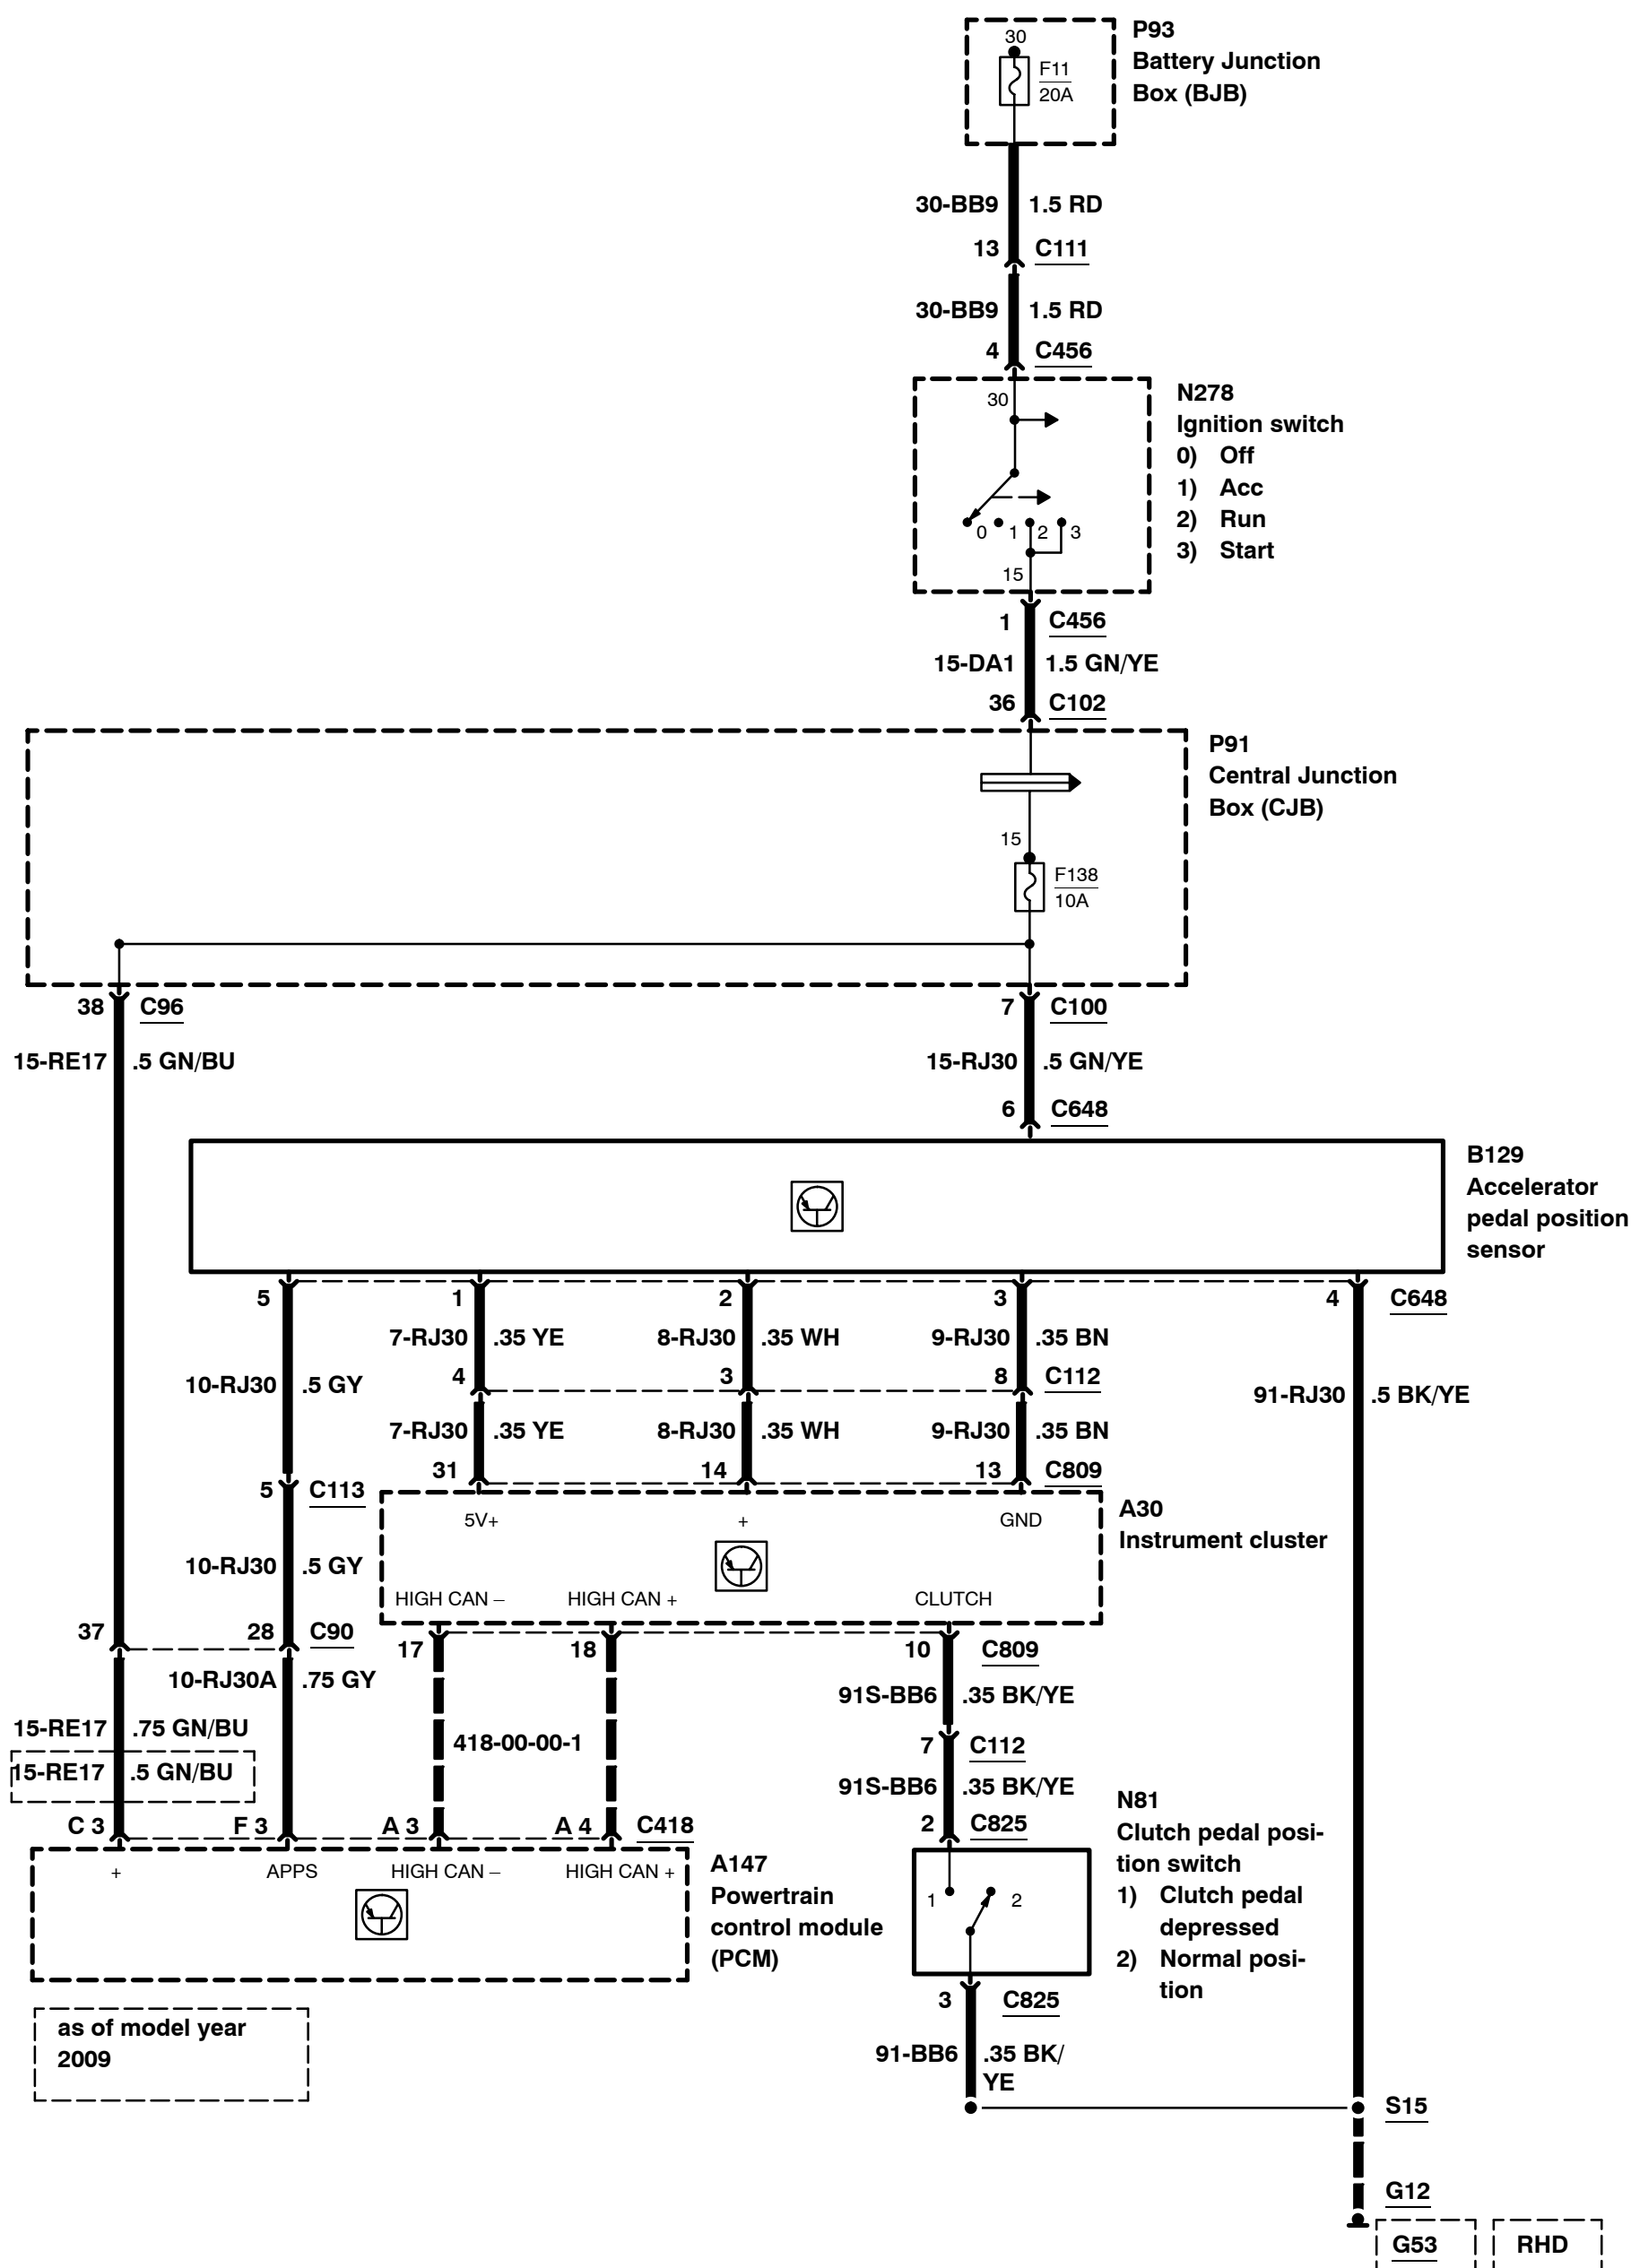


# Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6), with coated diesel particulate filter

02/2008  
303-14C-00-8  
2008.25  
Focus

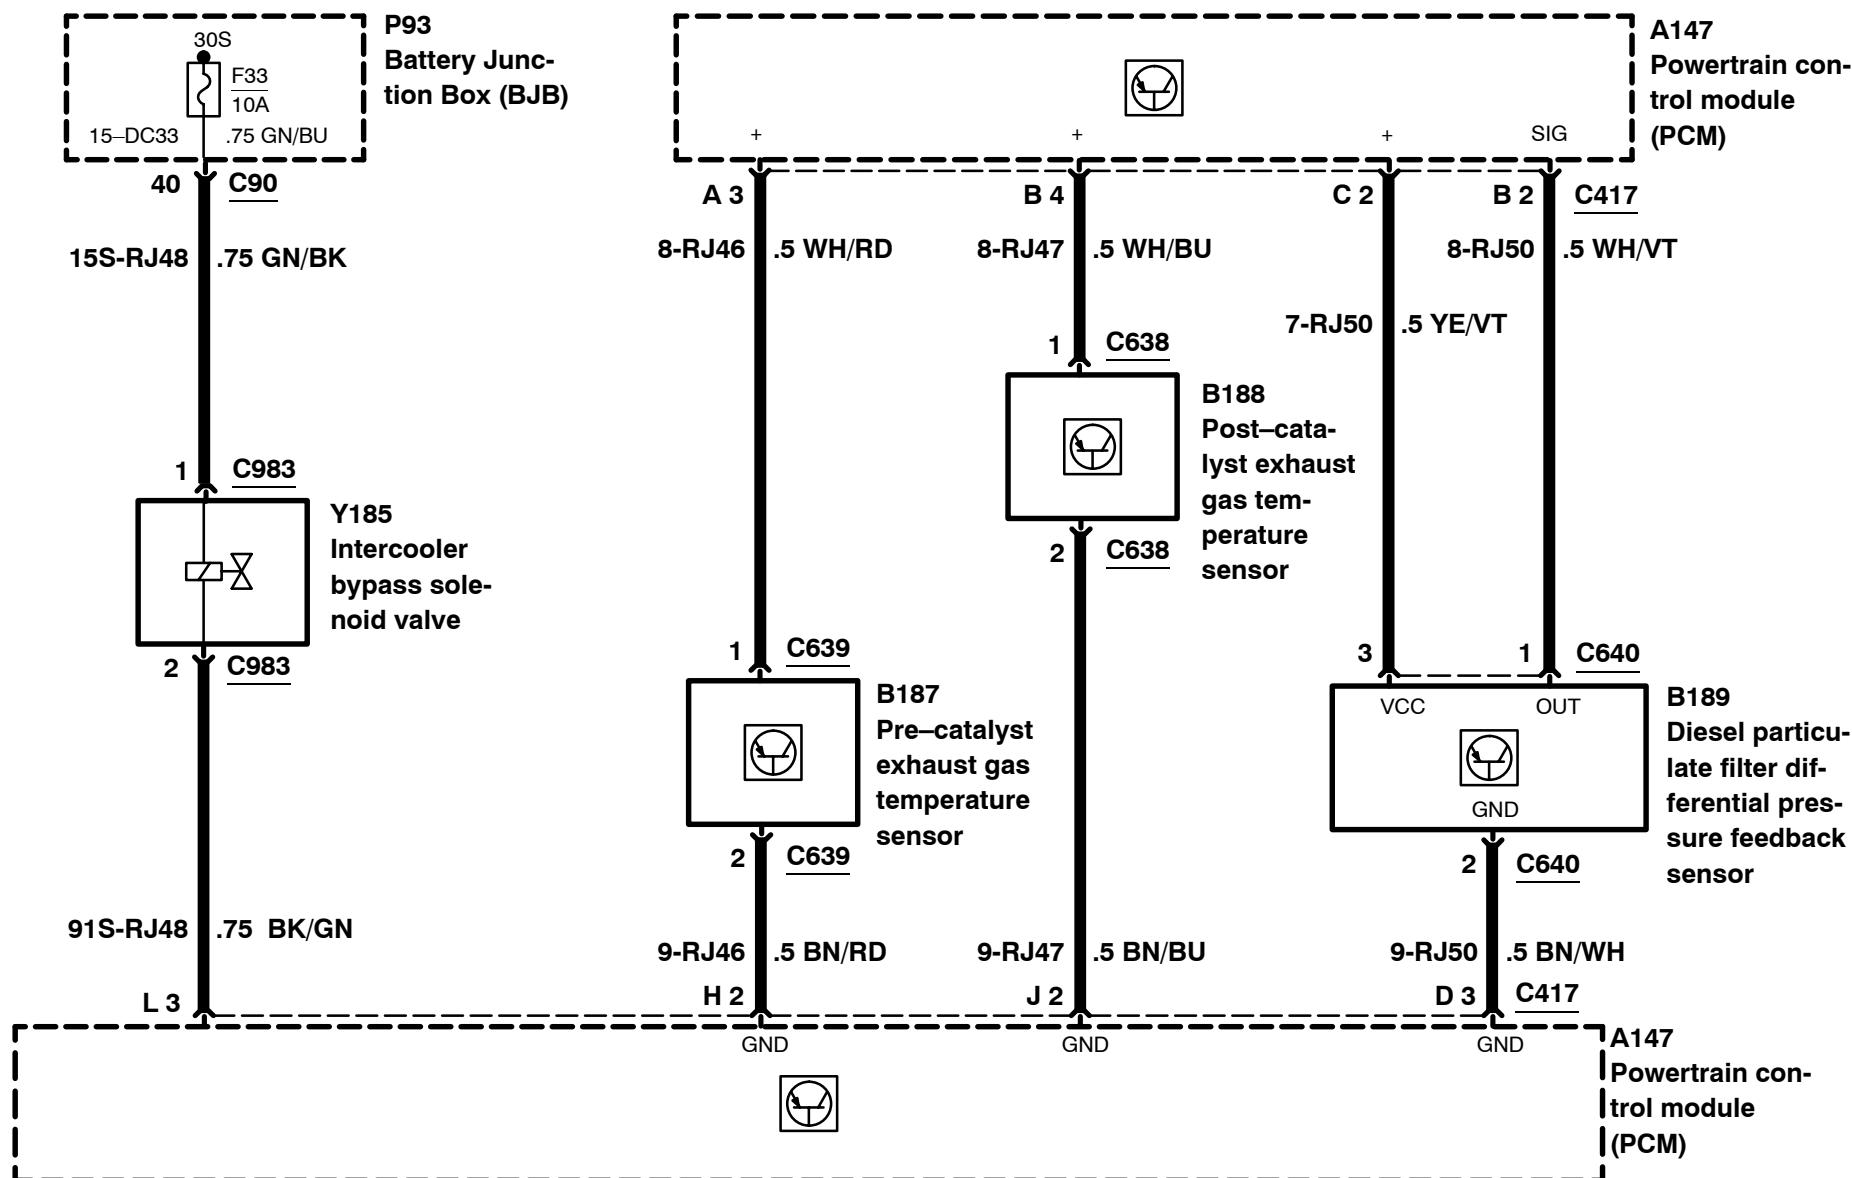


# Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6), with coated diesel particulate filter


02/2008  
303-14C-00-9  
2008.25  
Focus

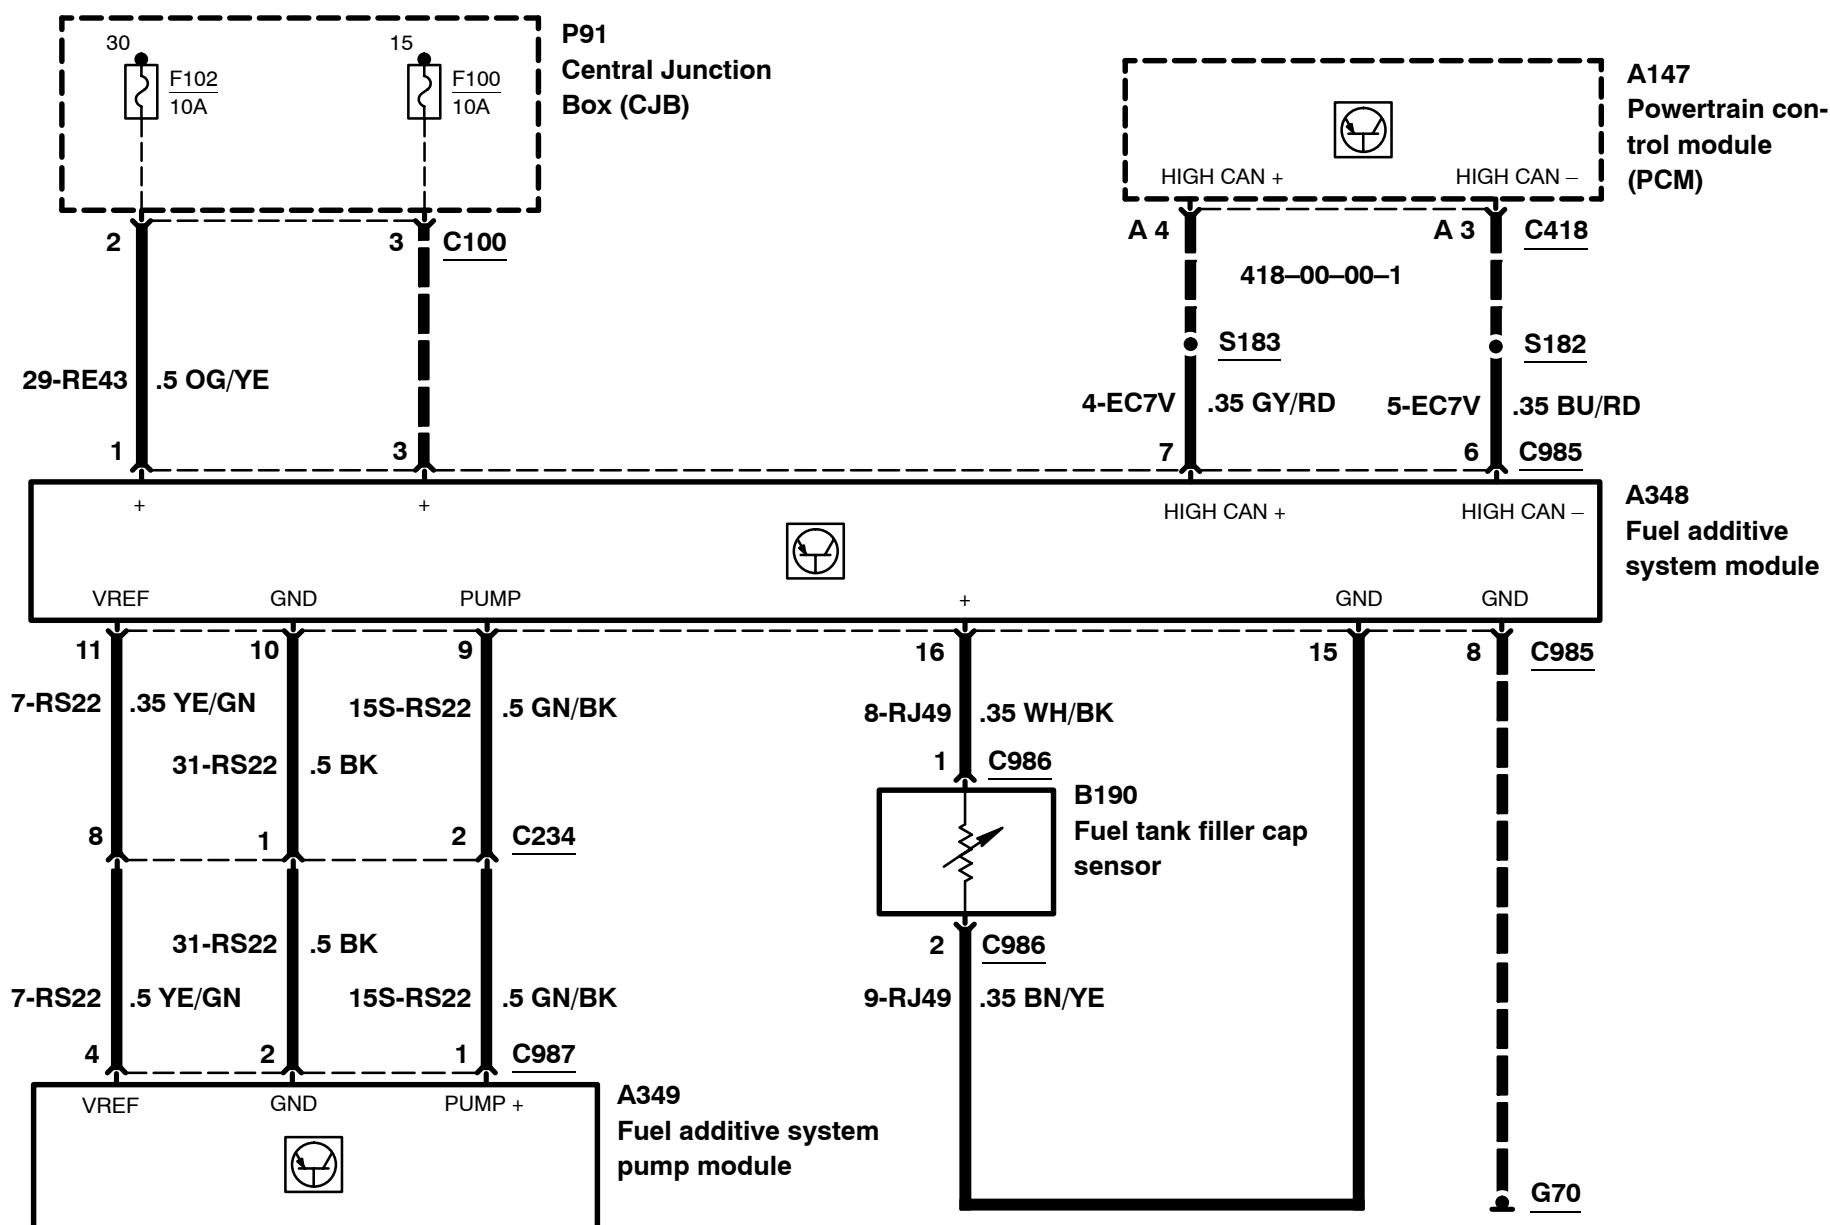

# Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, manual transmission (MPS6), with coated diesel particulate filter

02/2008  
303-14C-00-10  
2008.25  
Focus

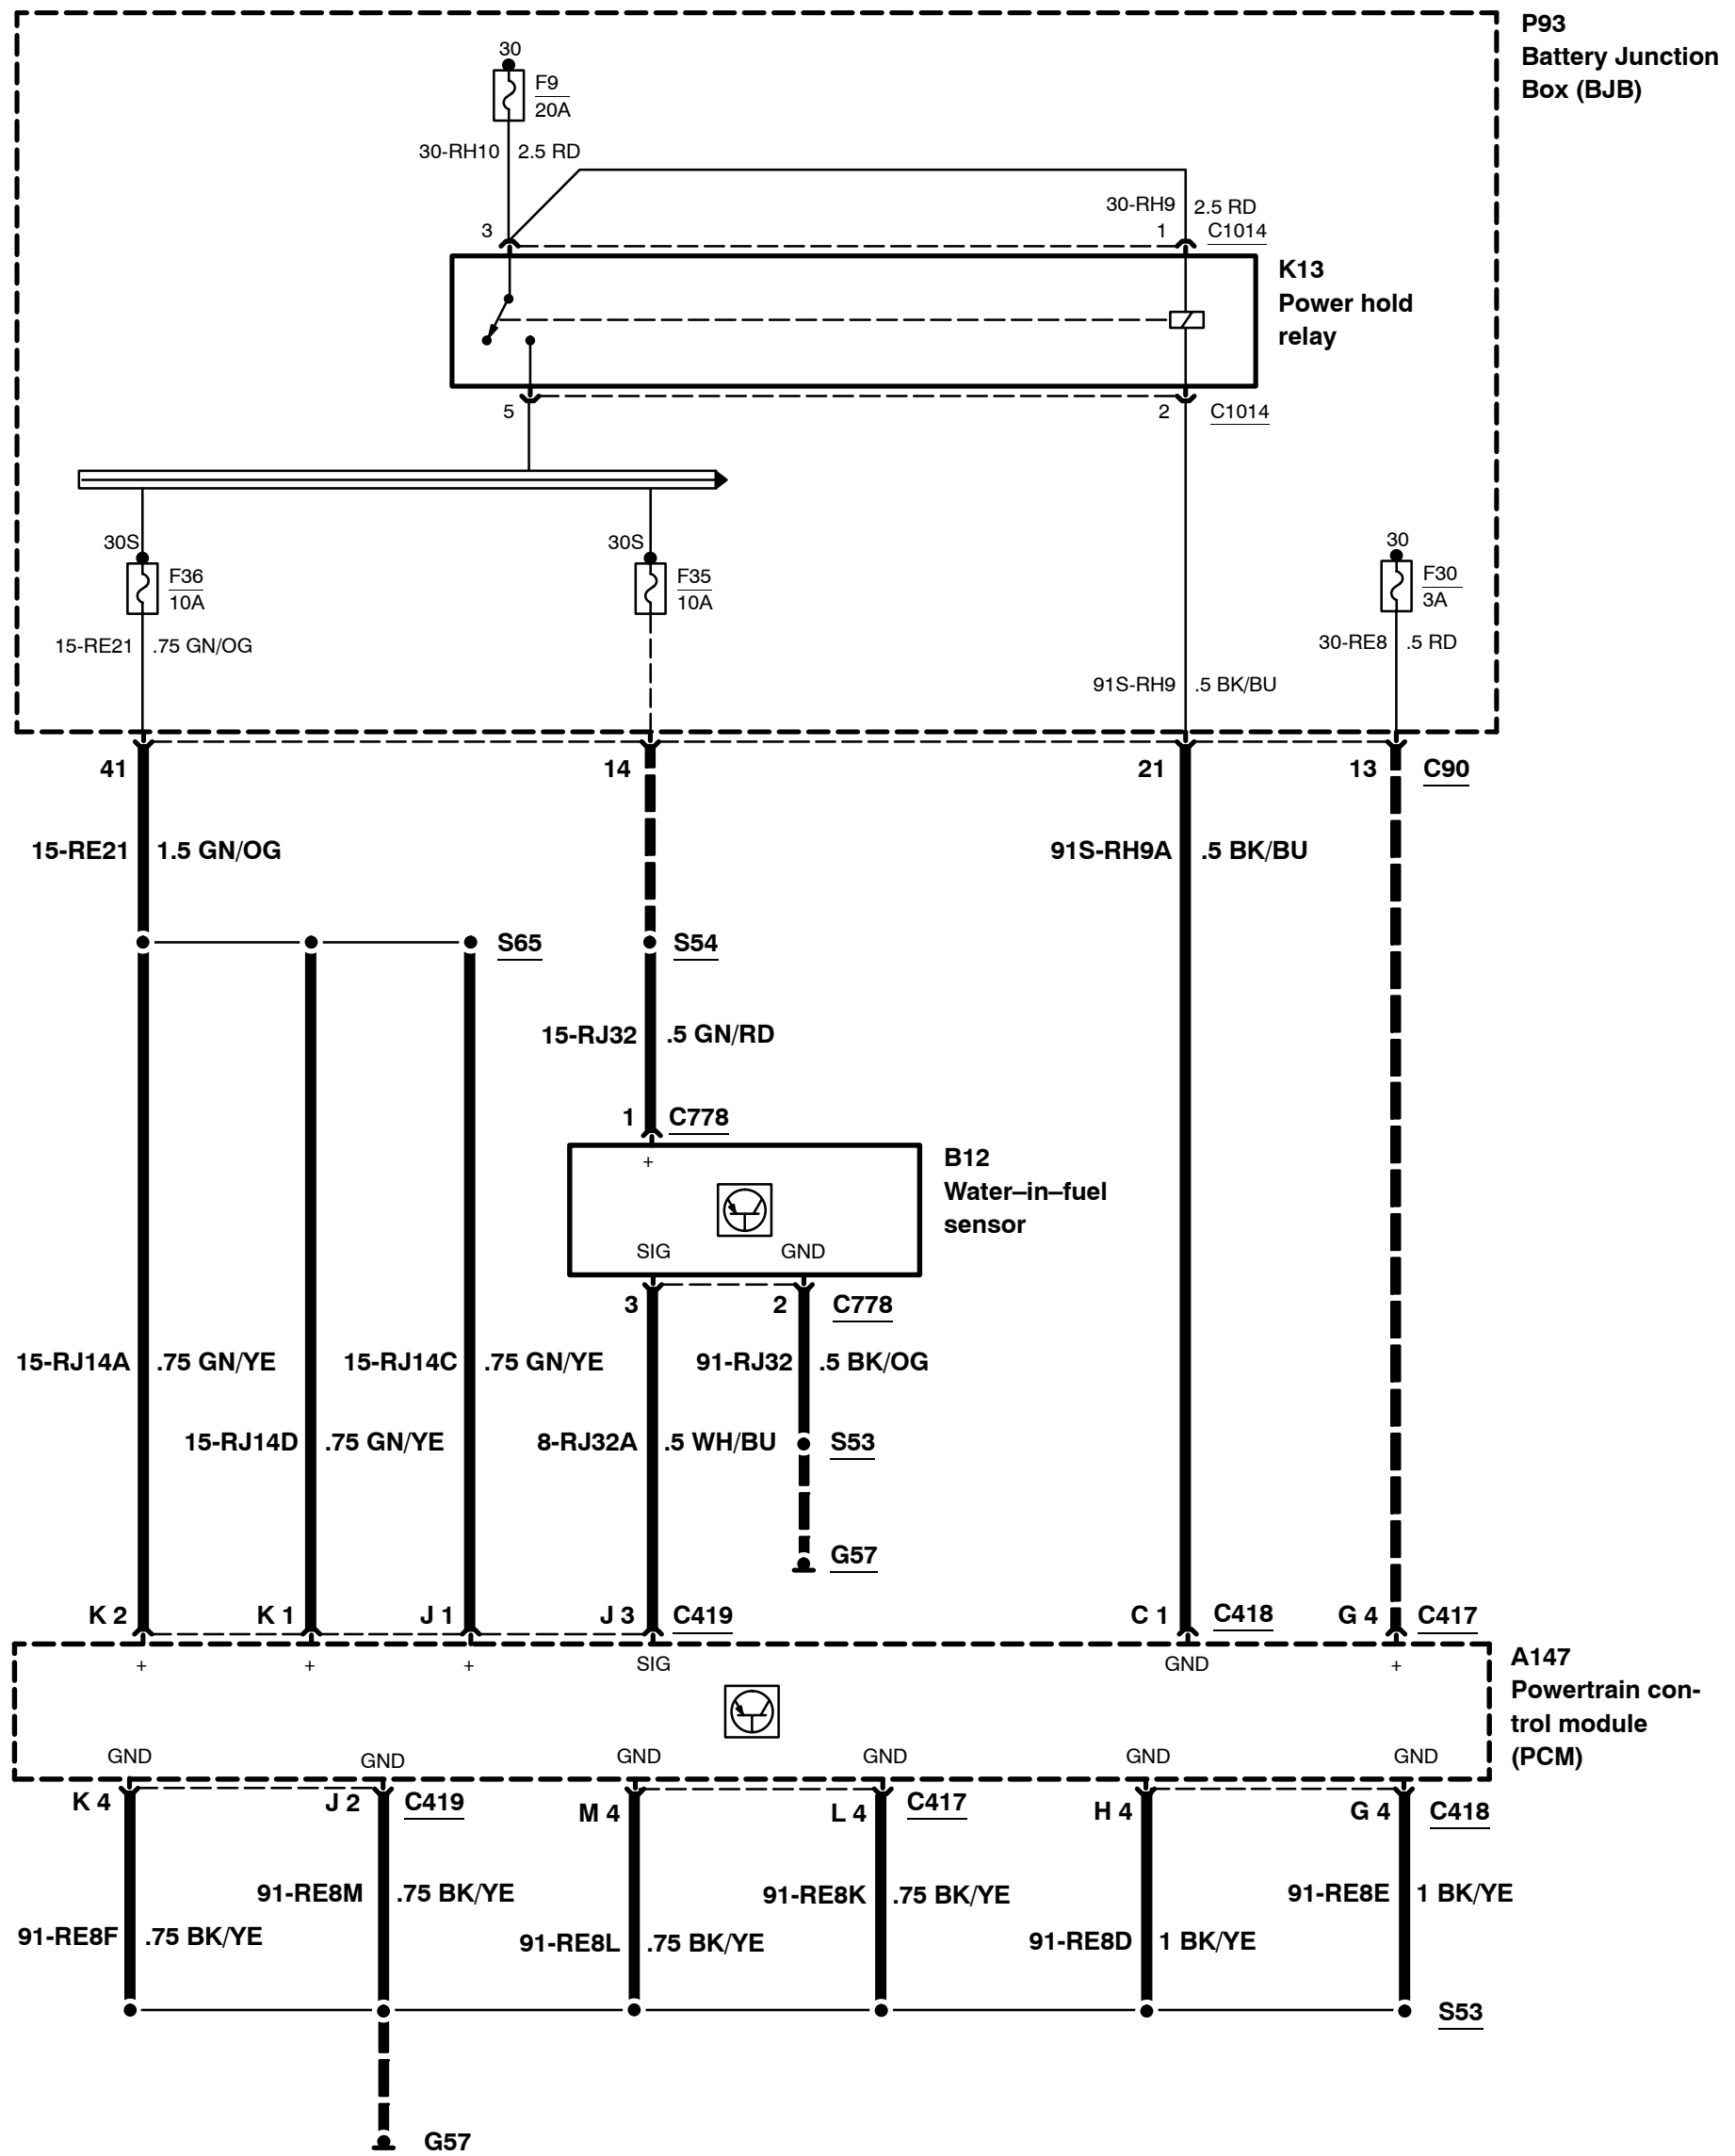


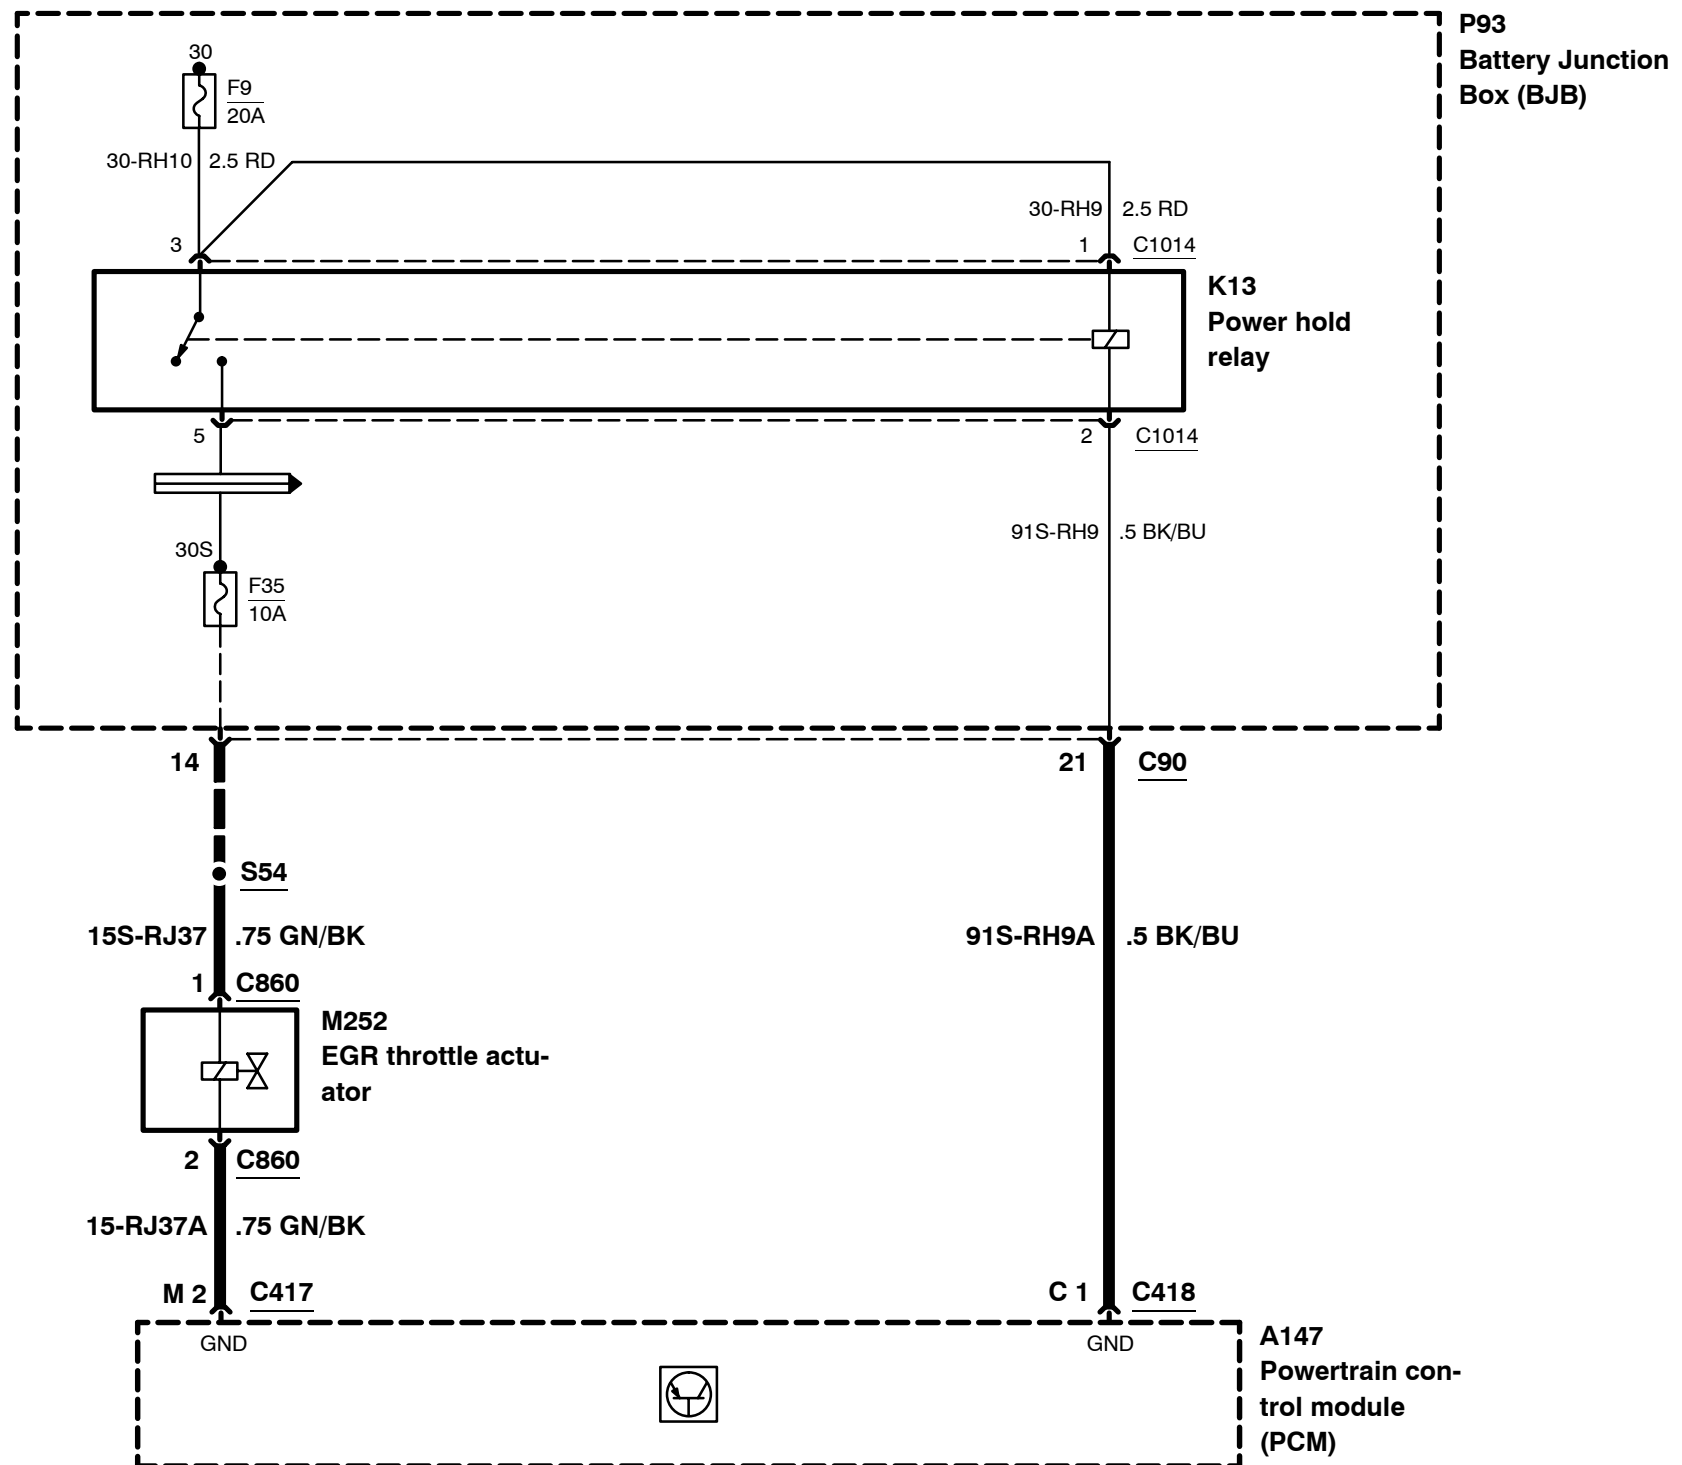



Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, manual transmission (MPS6), with coated diesel particulate filter


02/2008  
303-14C-00-12  
2008.25  
Focus

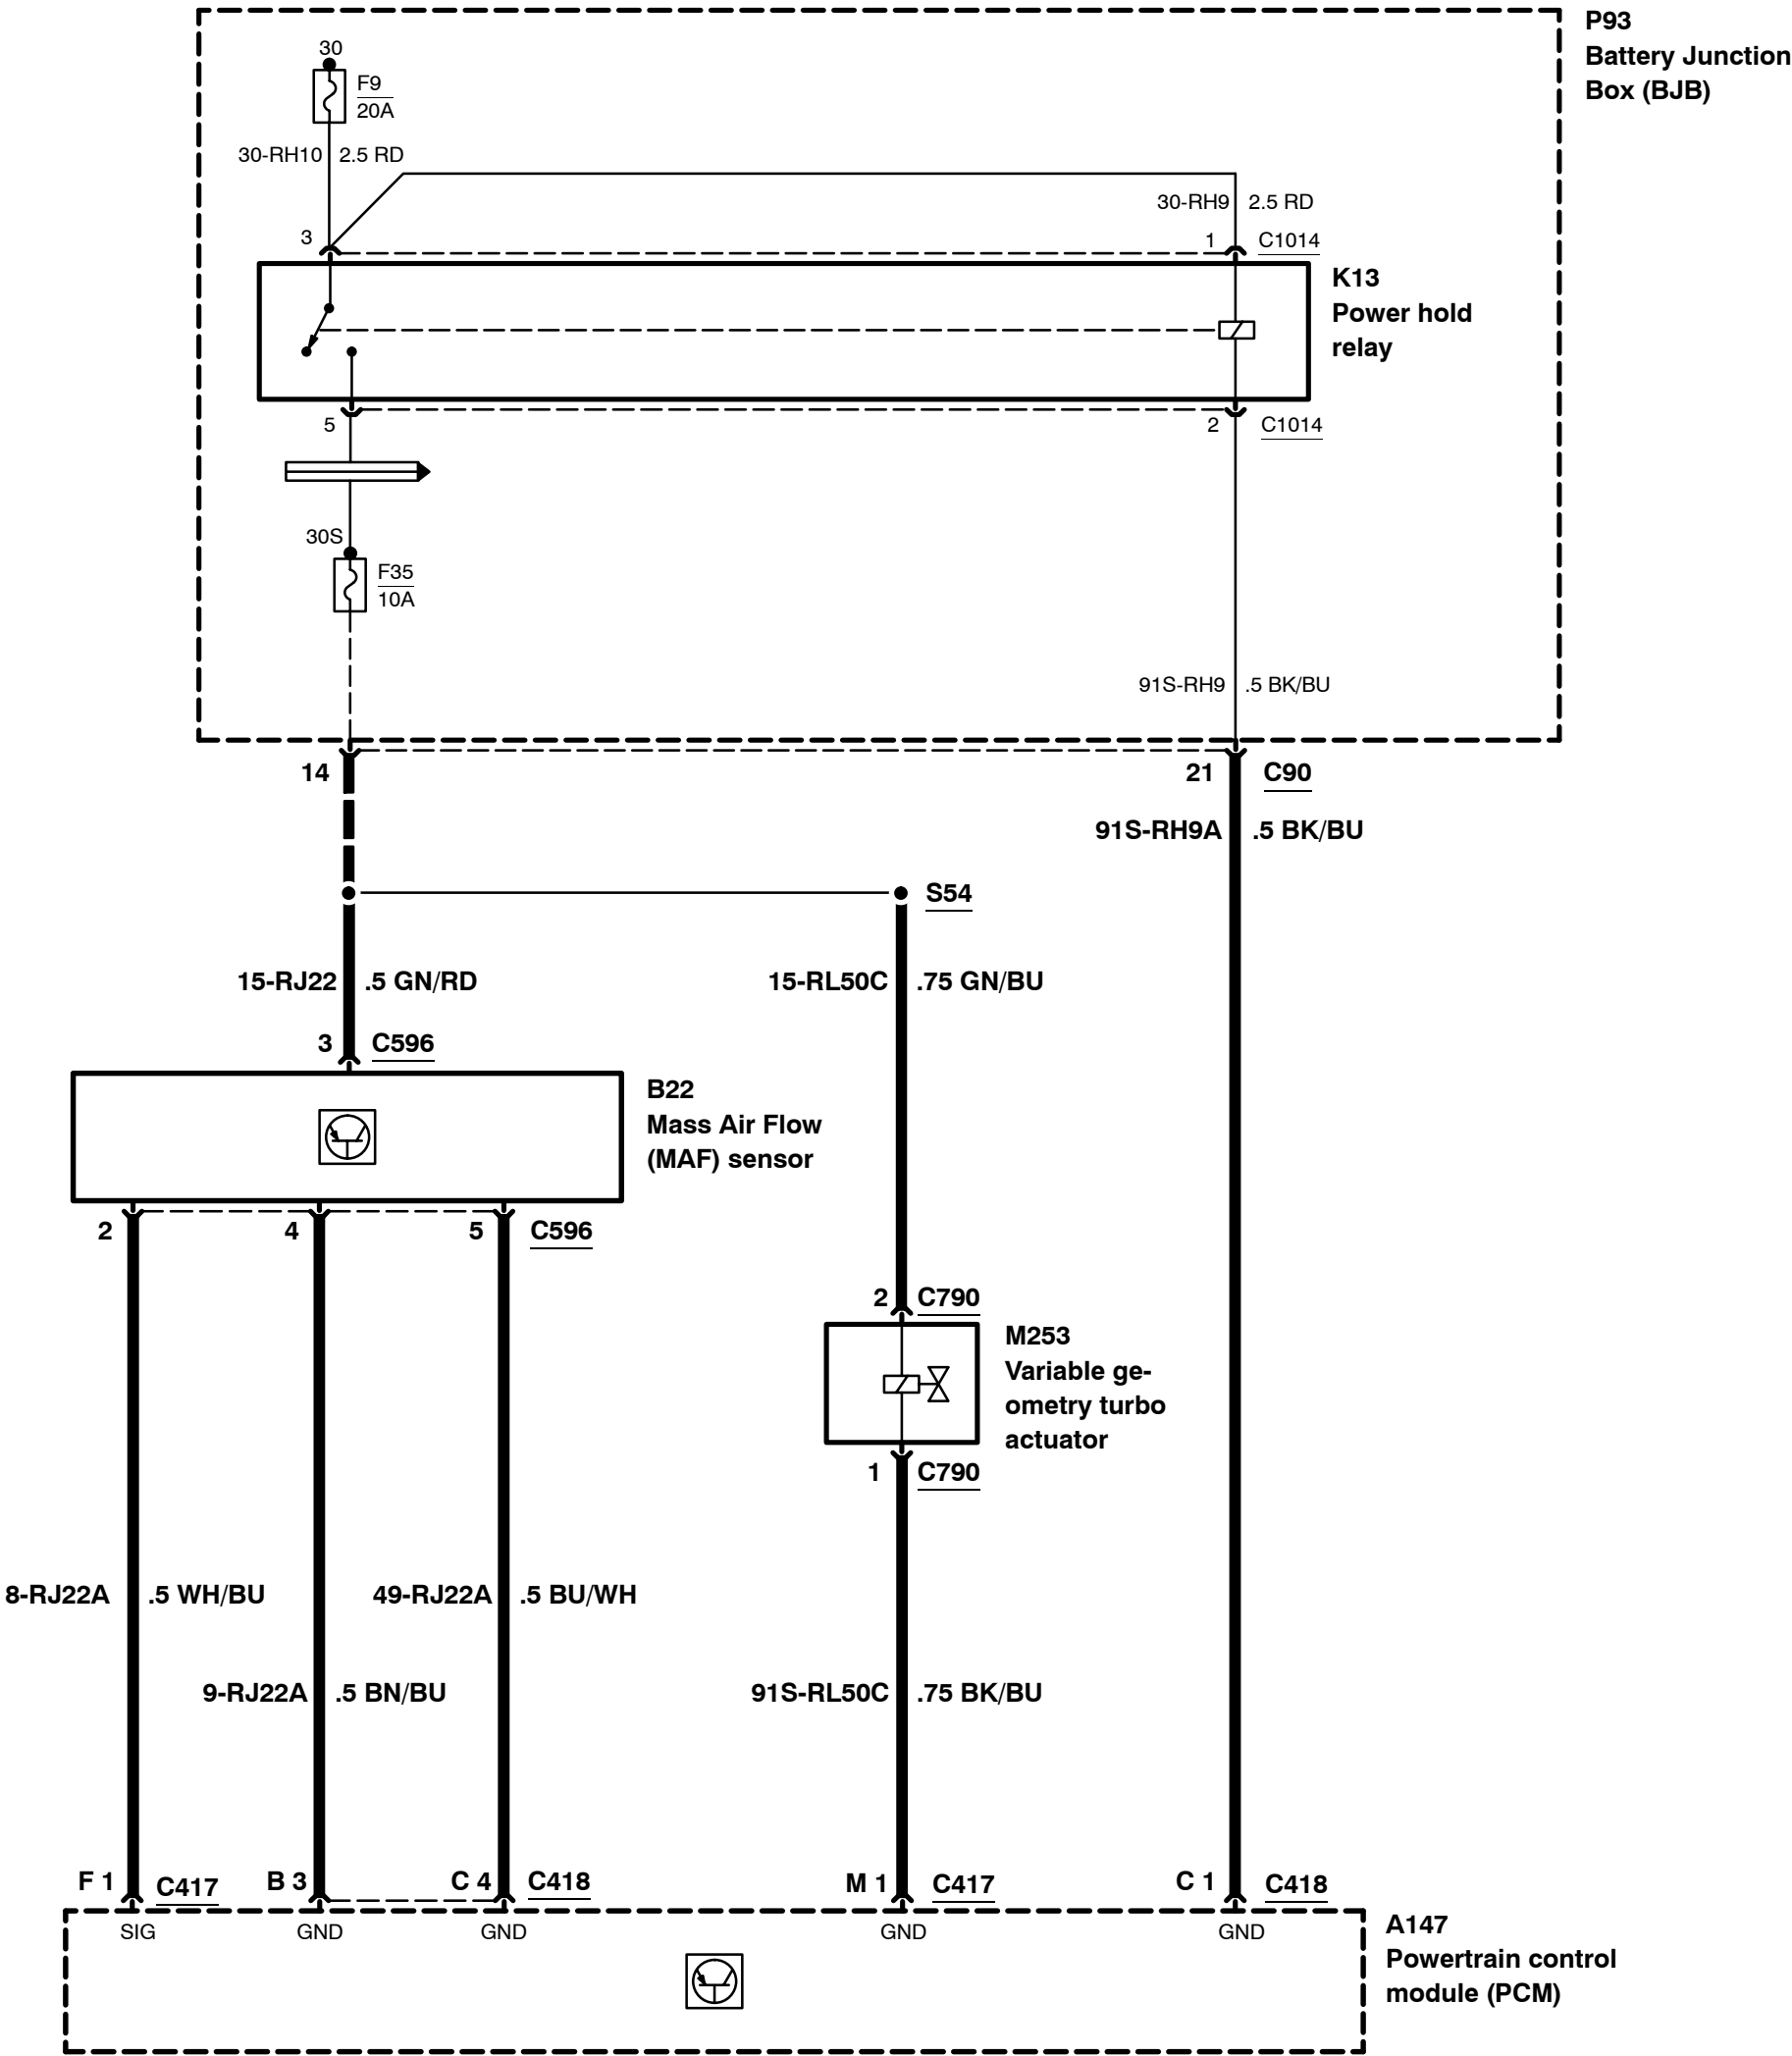




Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, manual transmission (MPS6), with coated diesel particulate filter

02/2008  
303-14C-00-13  
2008.25  
Focus

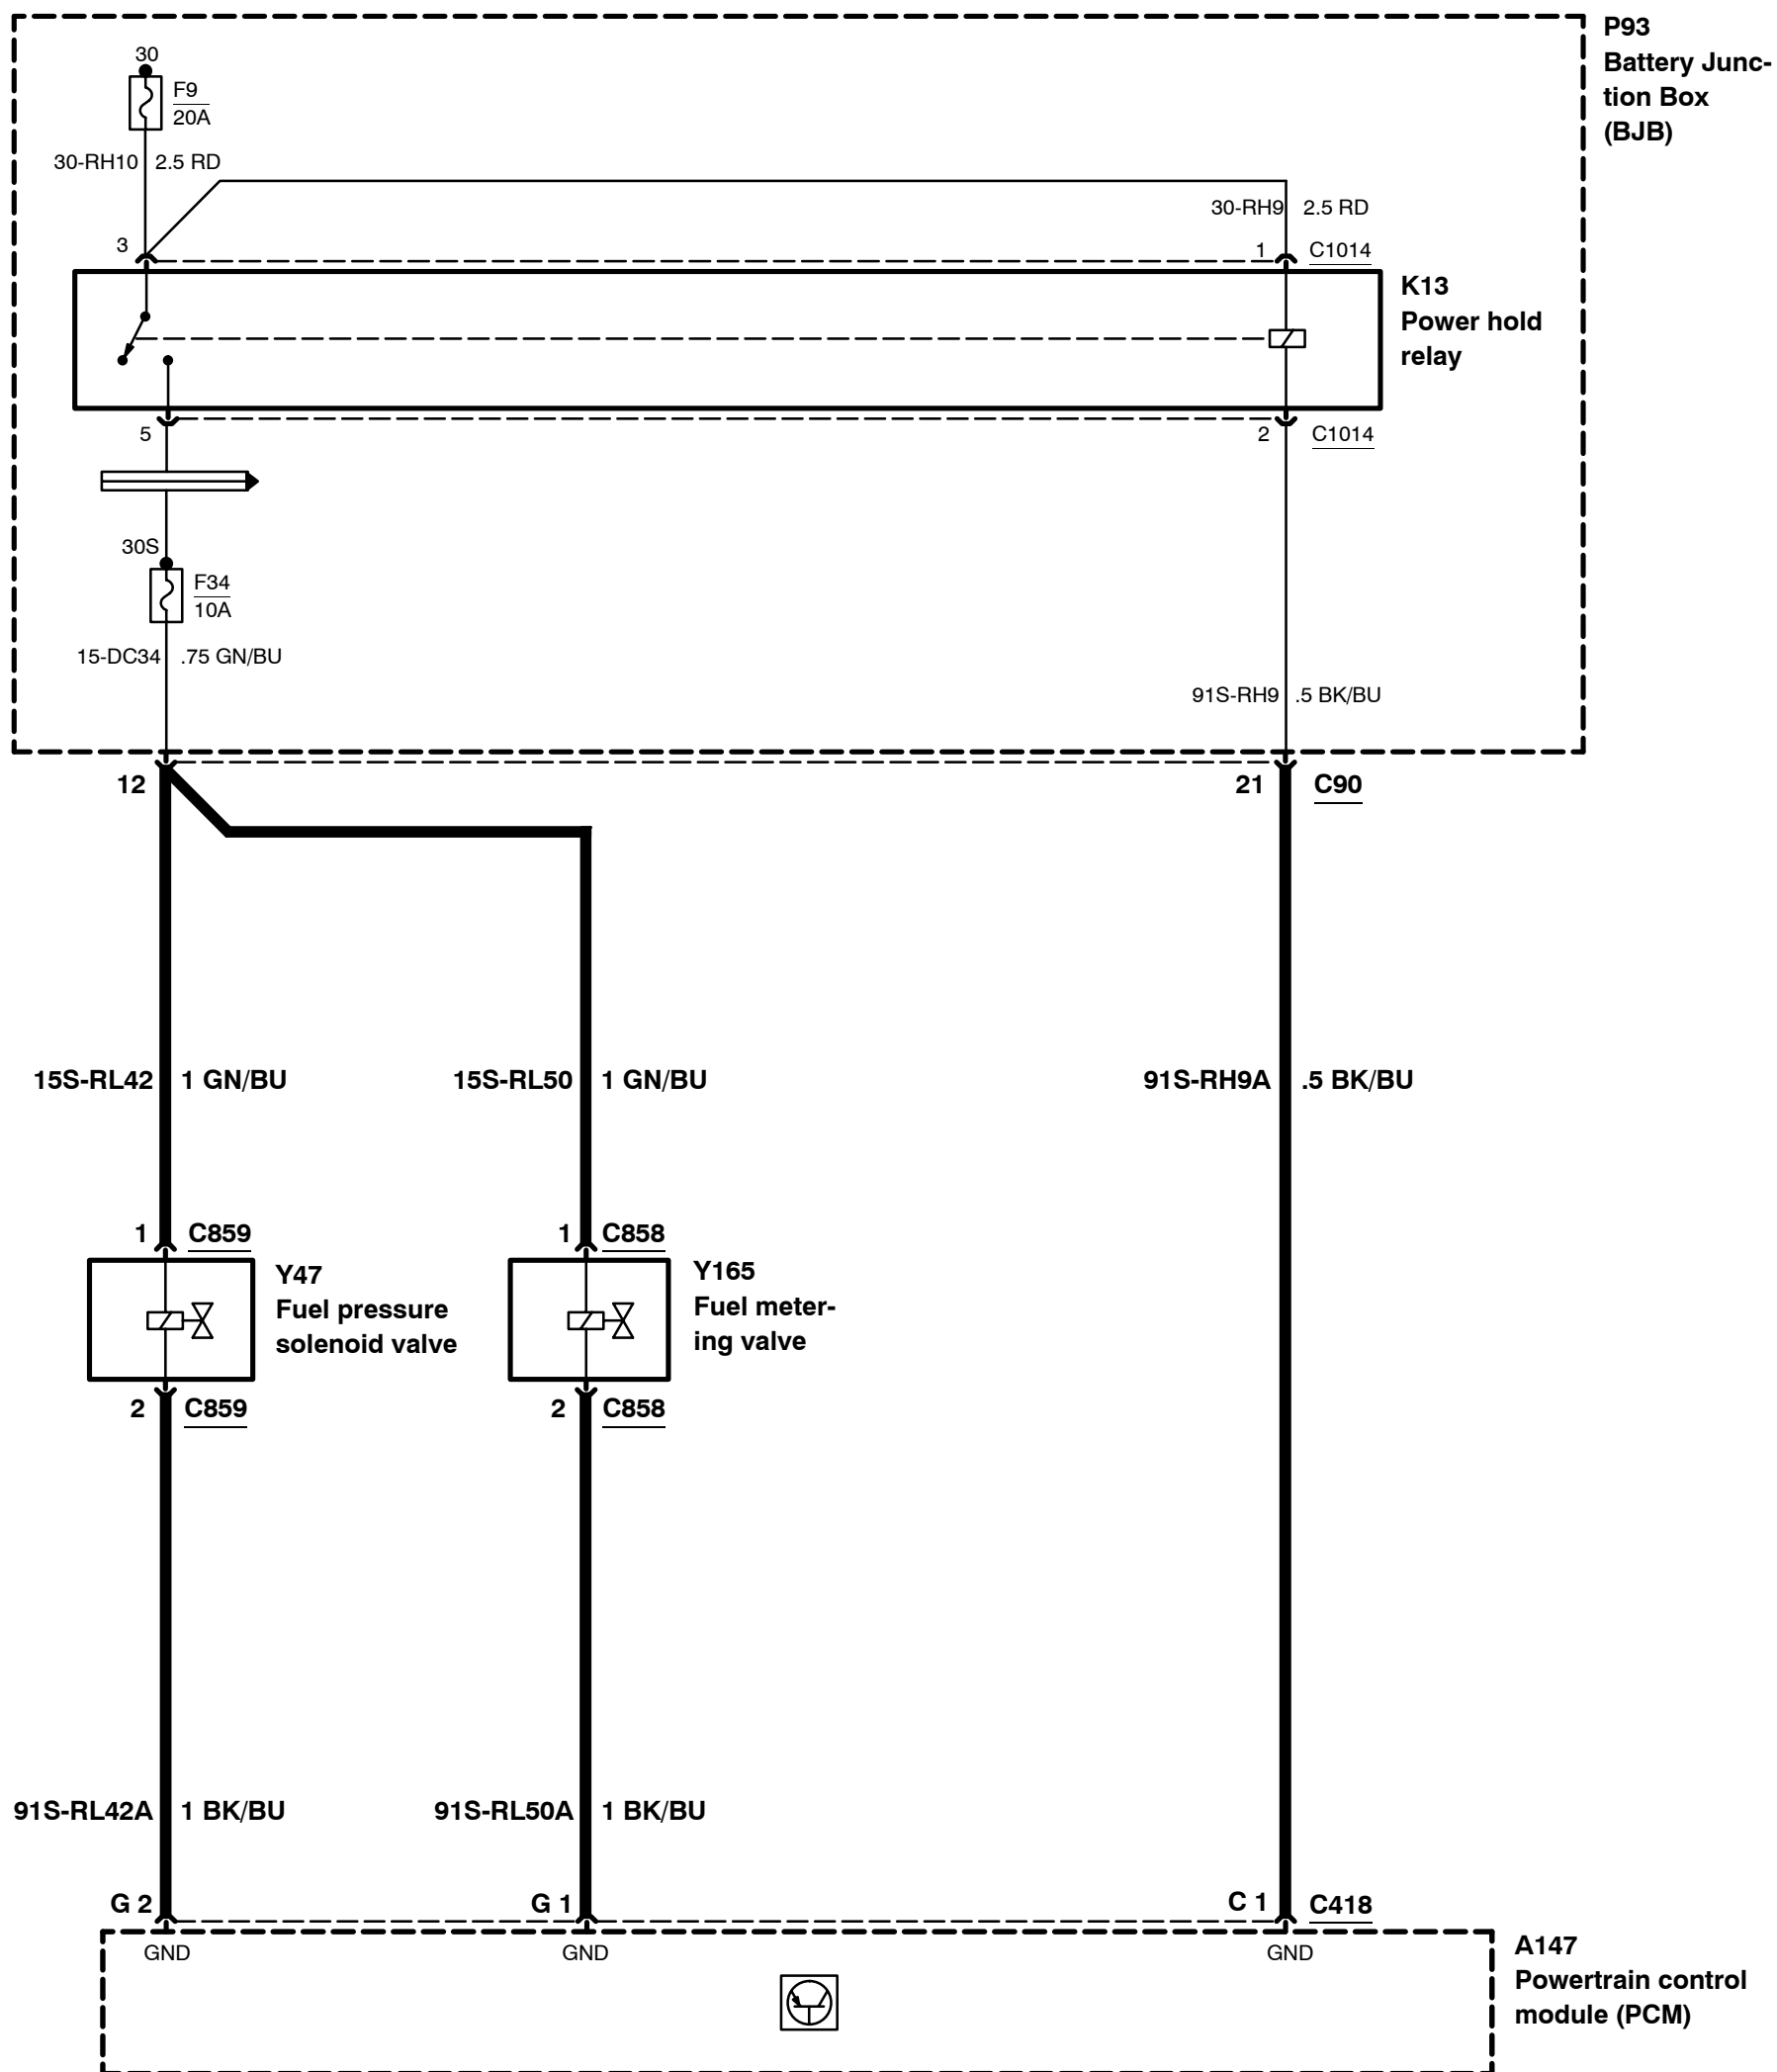


# Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, manual transmission (MPS6), with coated diesel particulate filter

02/2008  
303-14C-00-14  
2008.25  
Focus

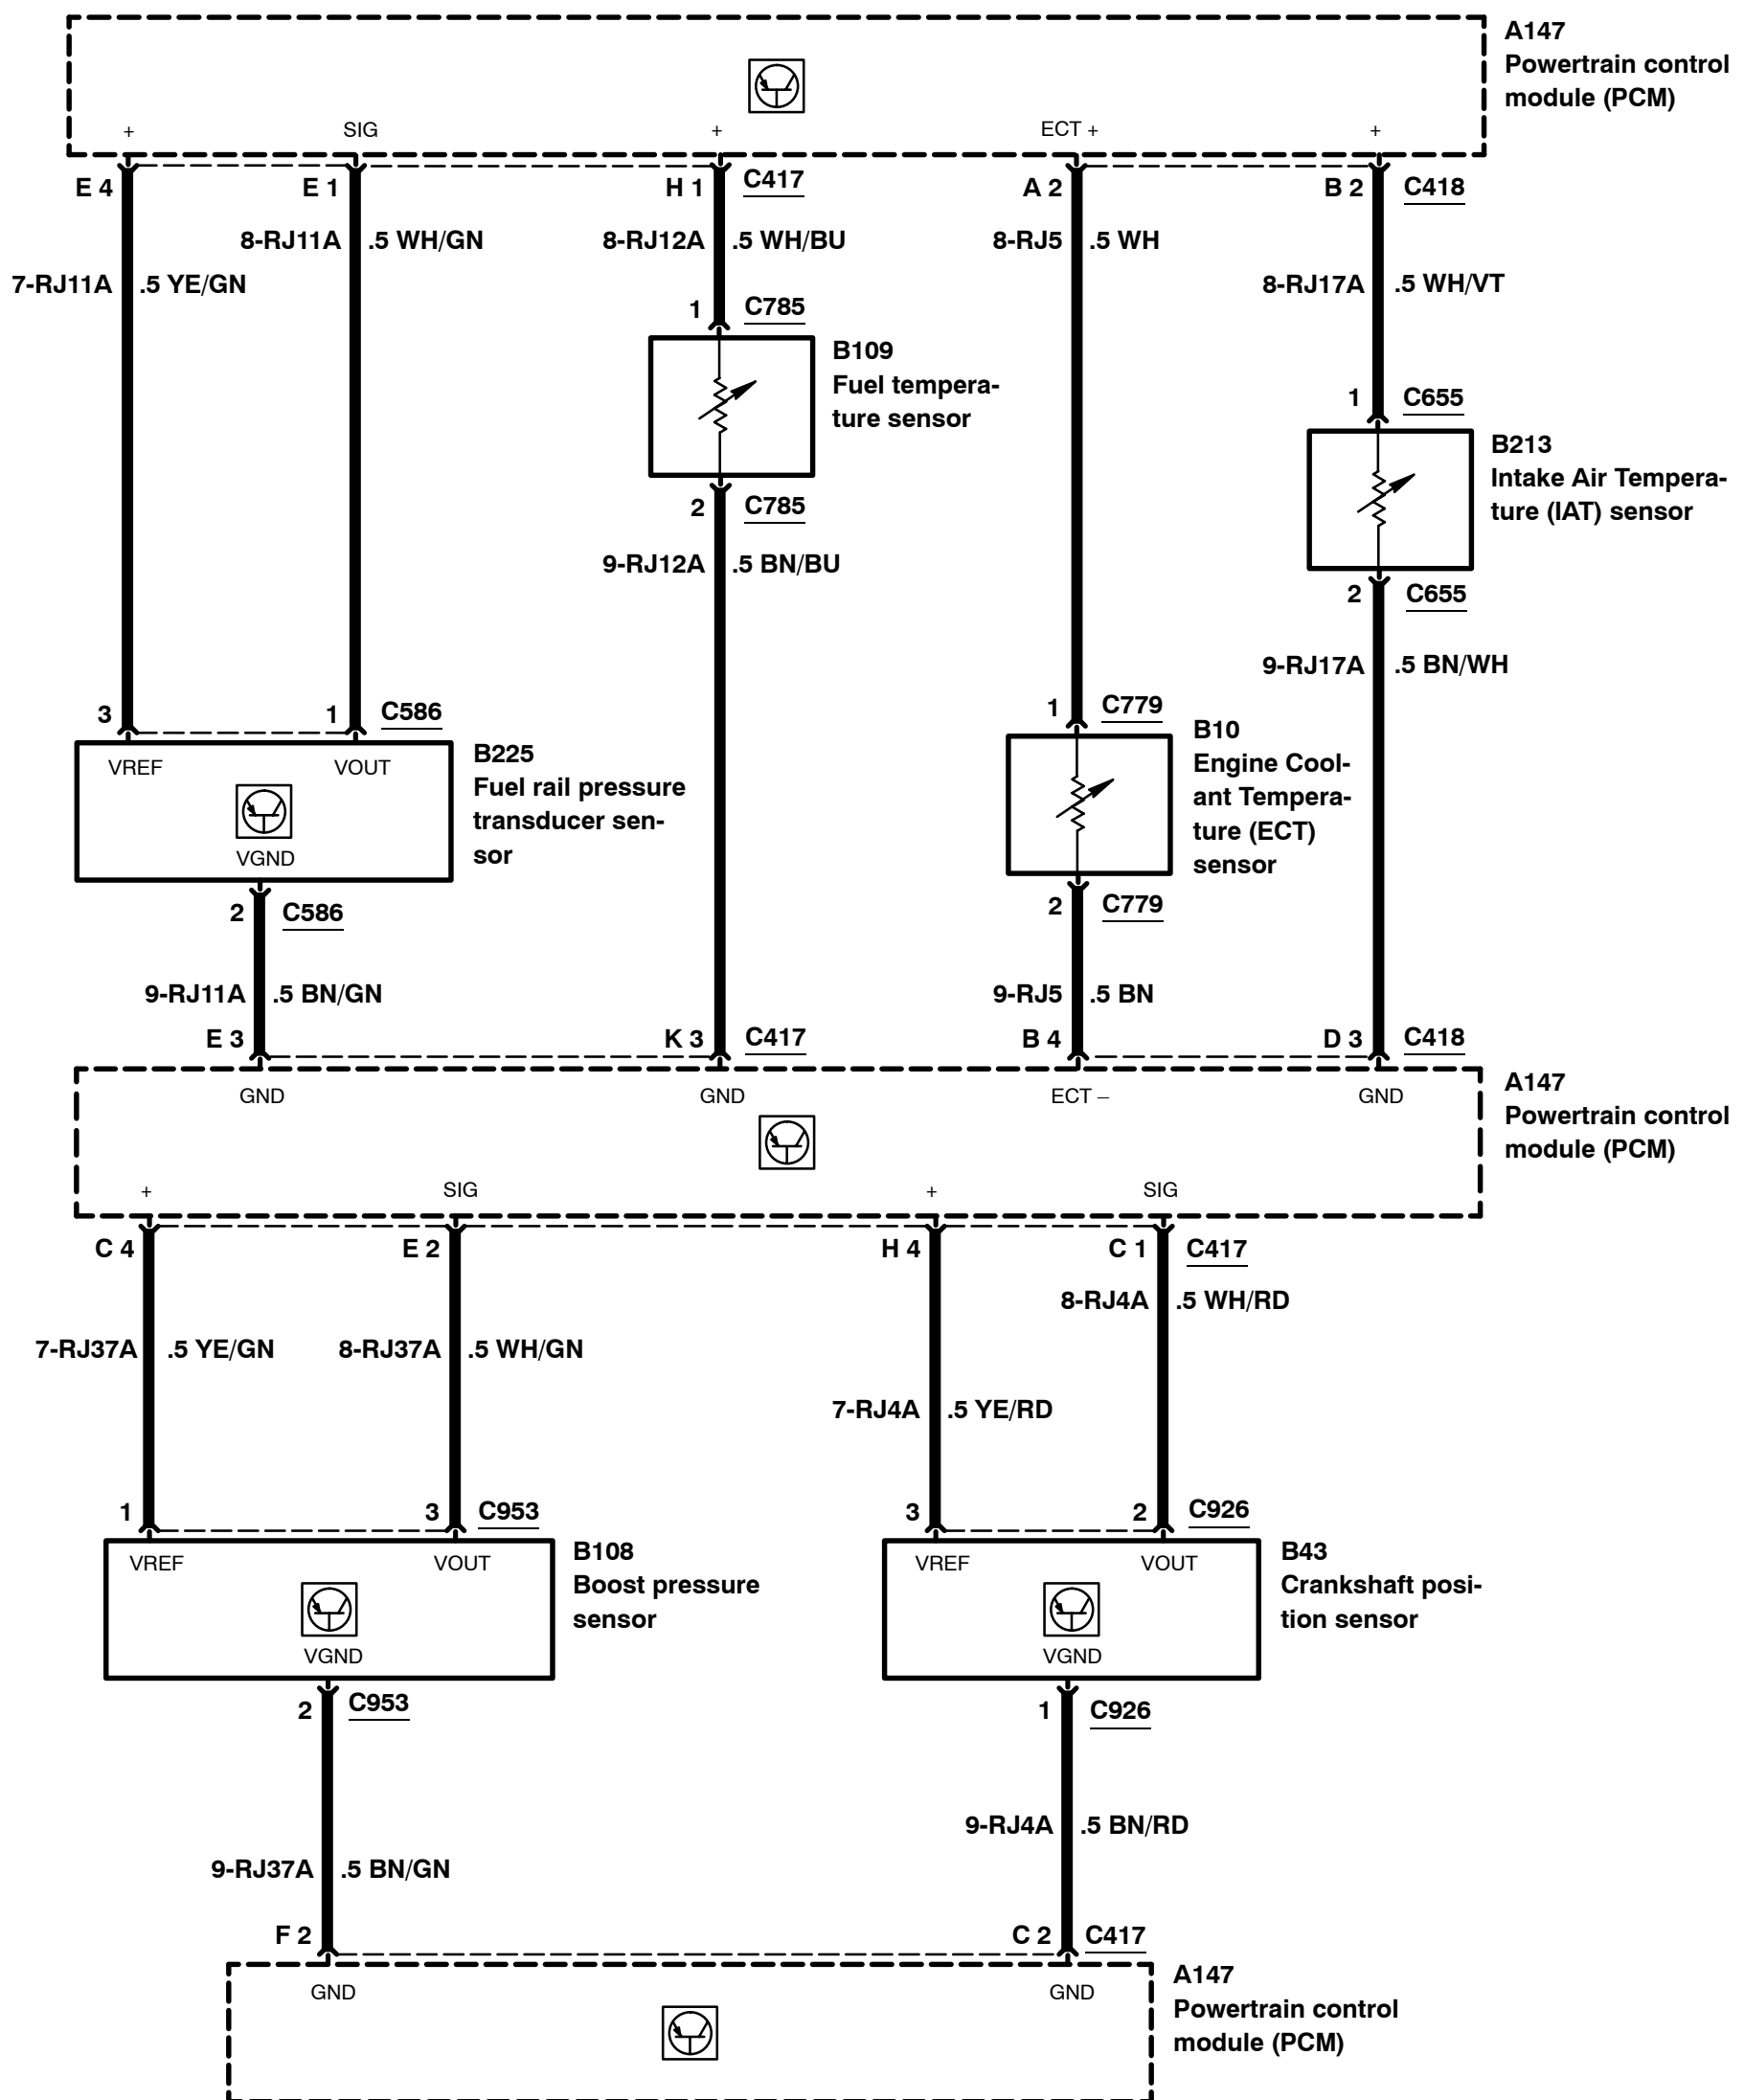


# Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, manual transmission (MPS6), with coated diesel particulate filter

02/2008  
303-14C-00-15  
2008.25  
Focus

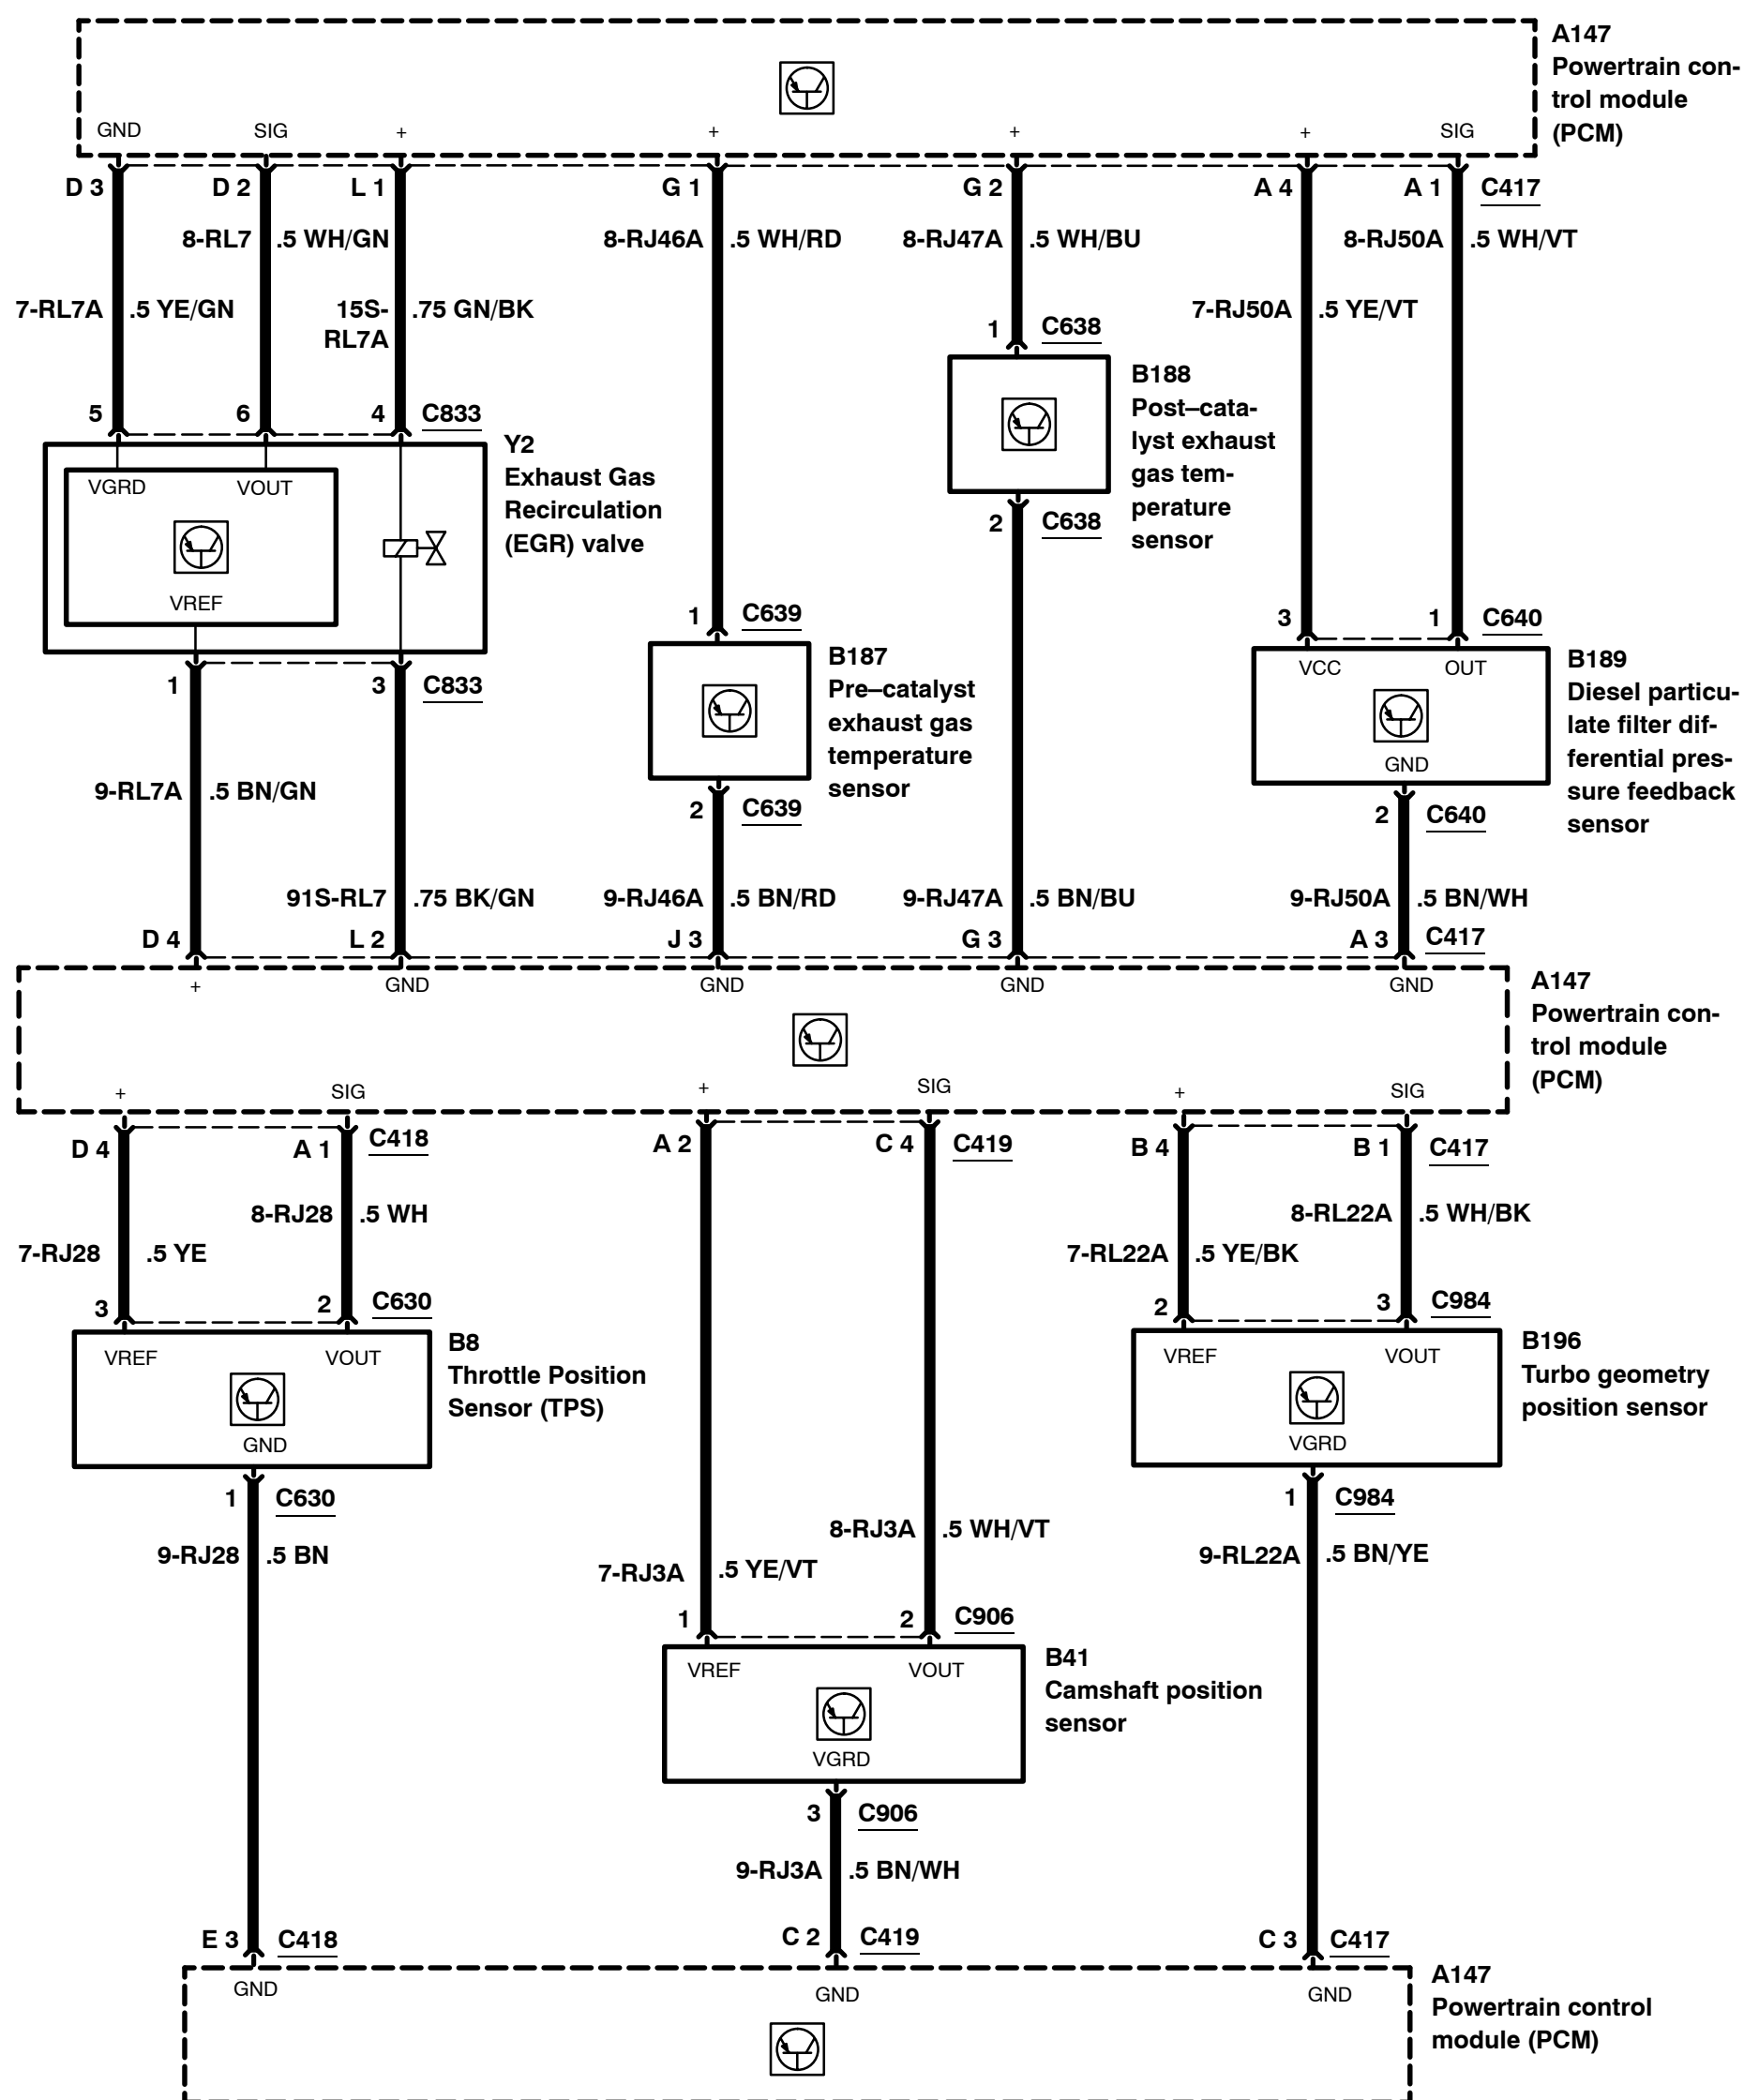


# Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, manual transmission (MPS6), with coated diesel particulate filter

02/2008  
303-14C-00-16  
2008.25  
Focus

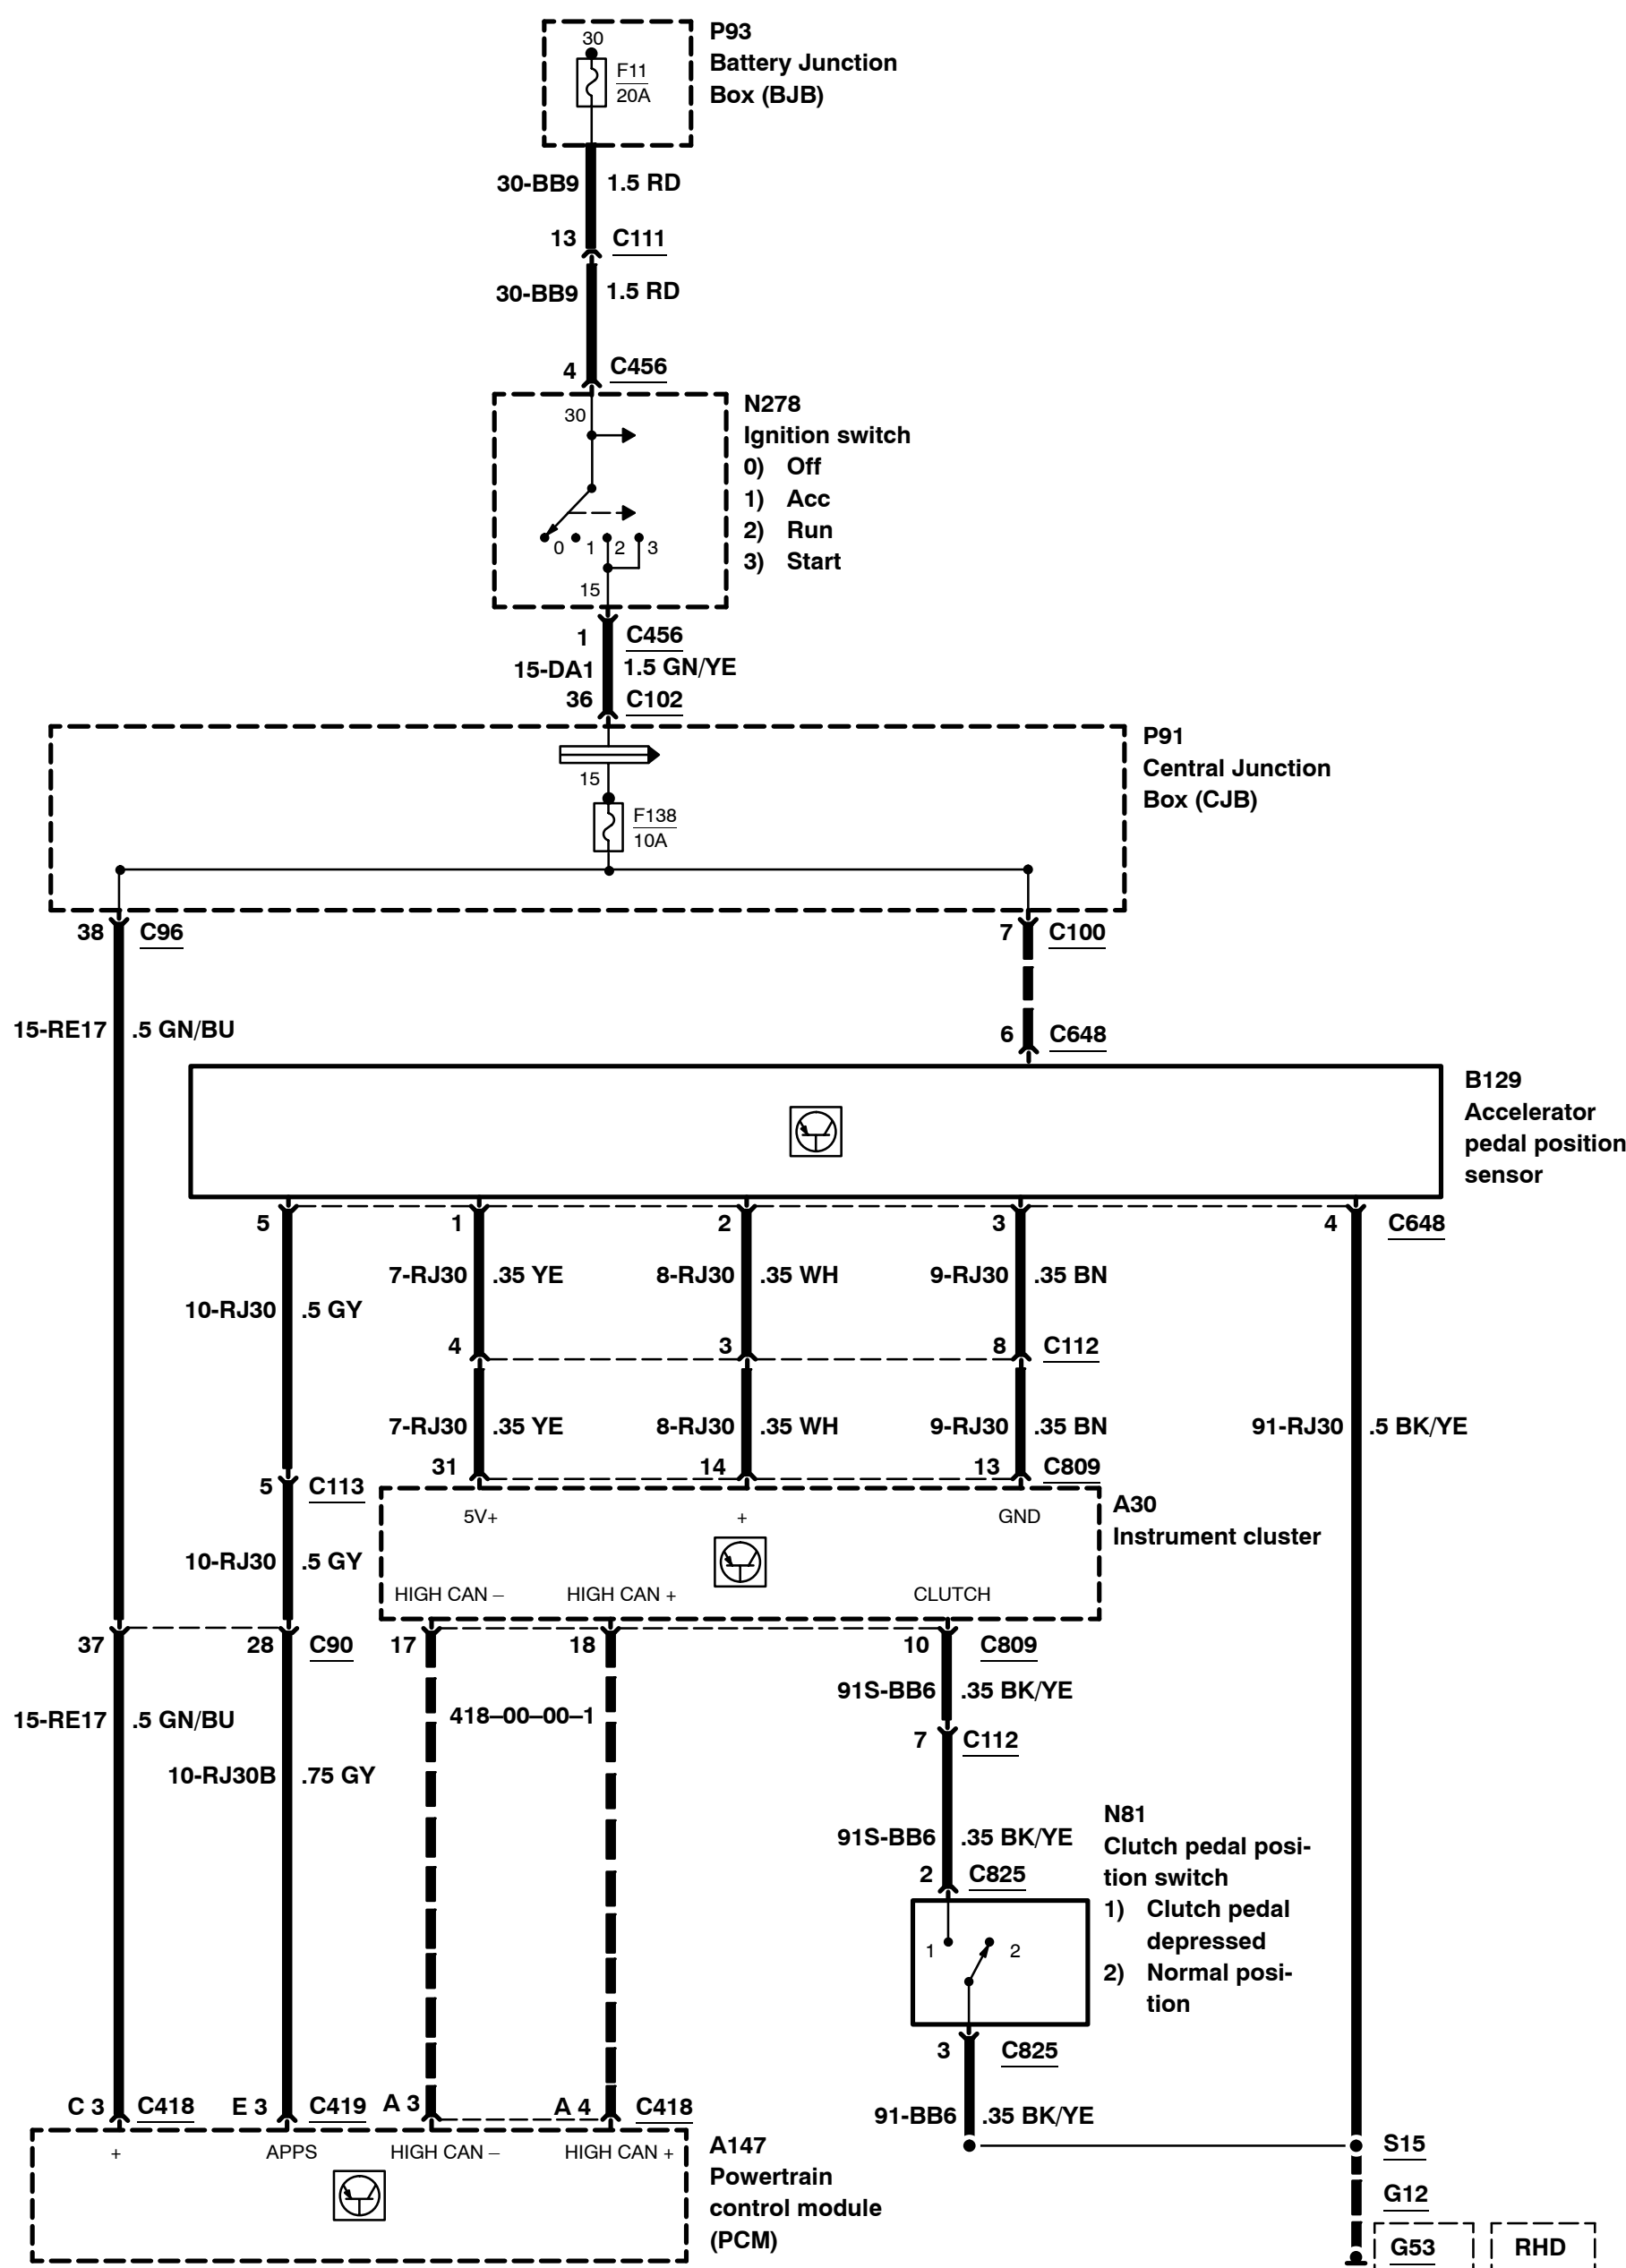


# Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, manual transmission (MPS6), with coated diesel particulate filter

02/2008  
303-14C-00-17  
2008.25  
Focus

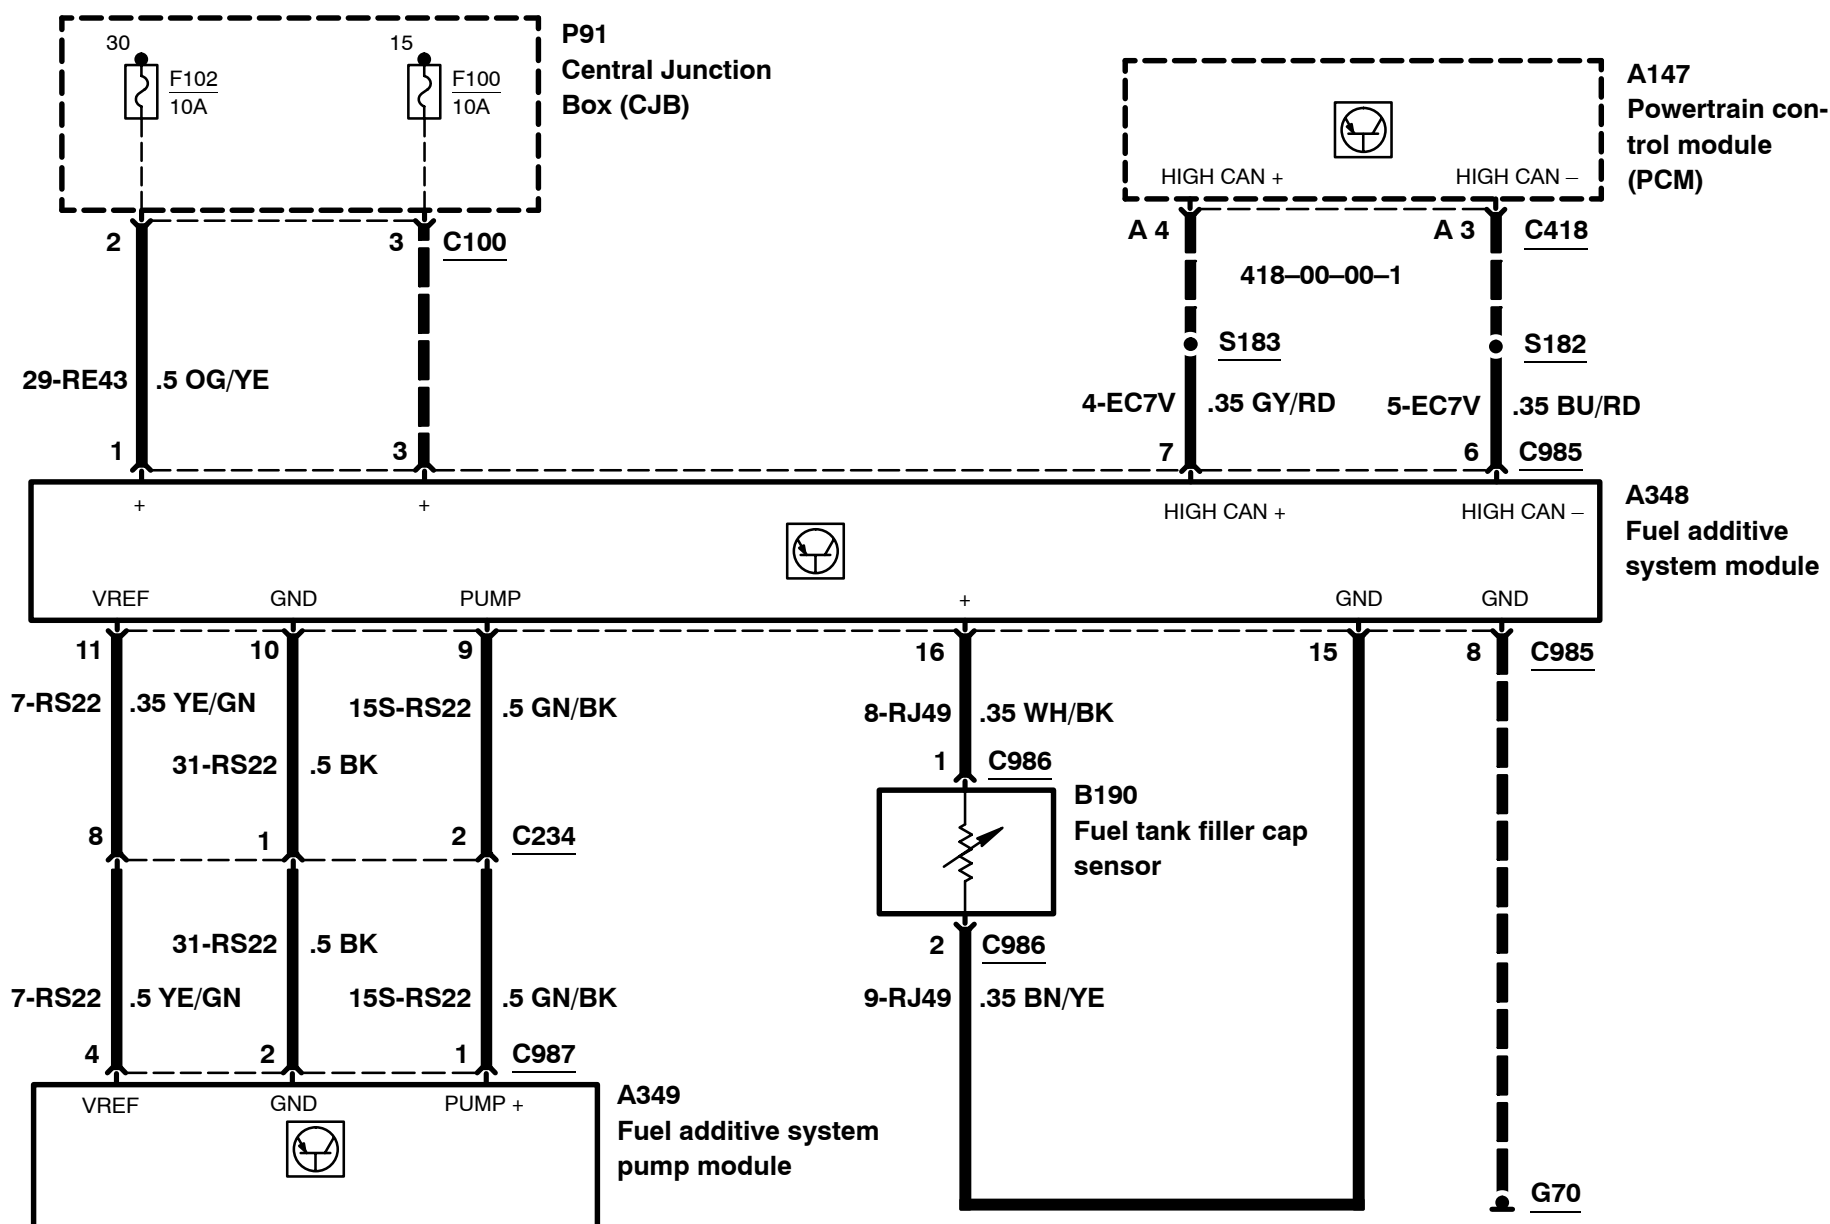

# Automatic Transmission – 1.6L (Z6)


02/2008  
307-01-00-1  
2008.25  
Focus

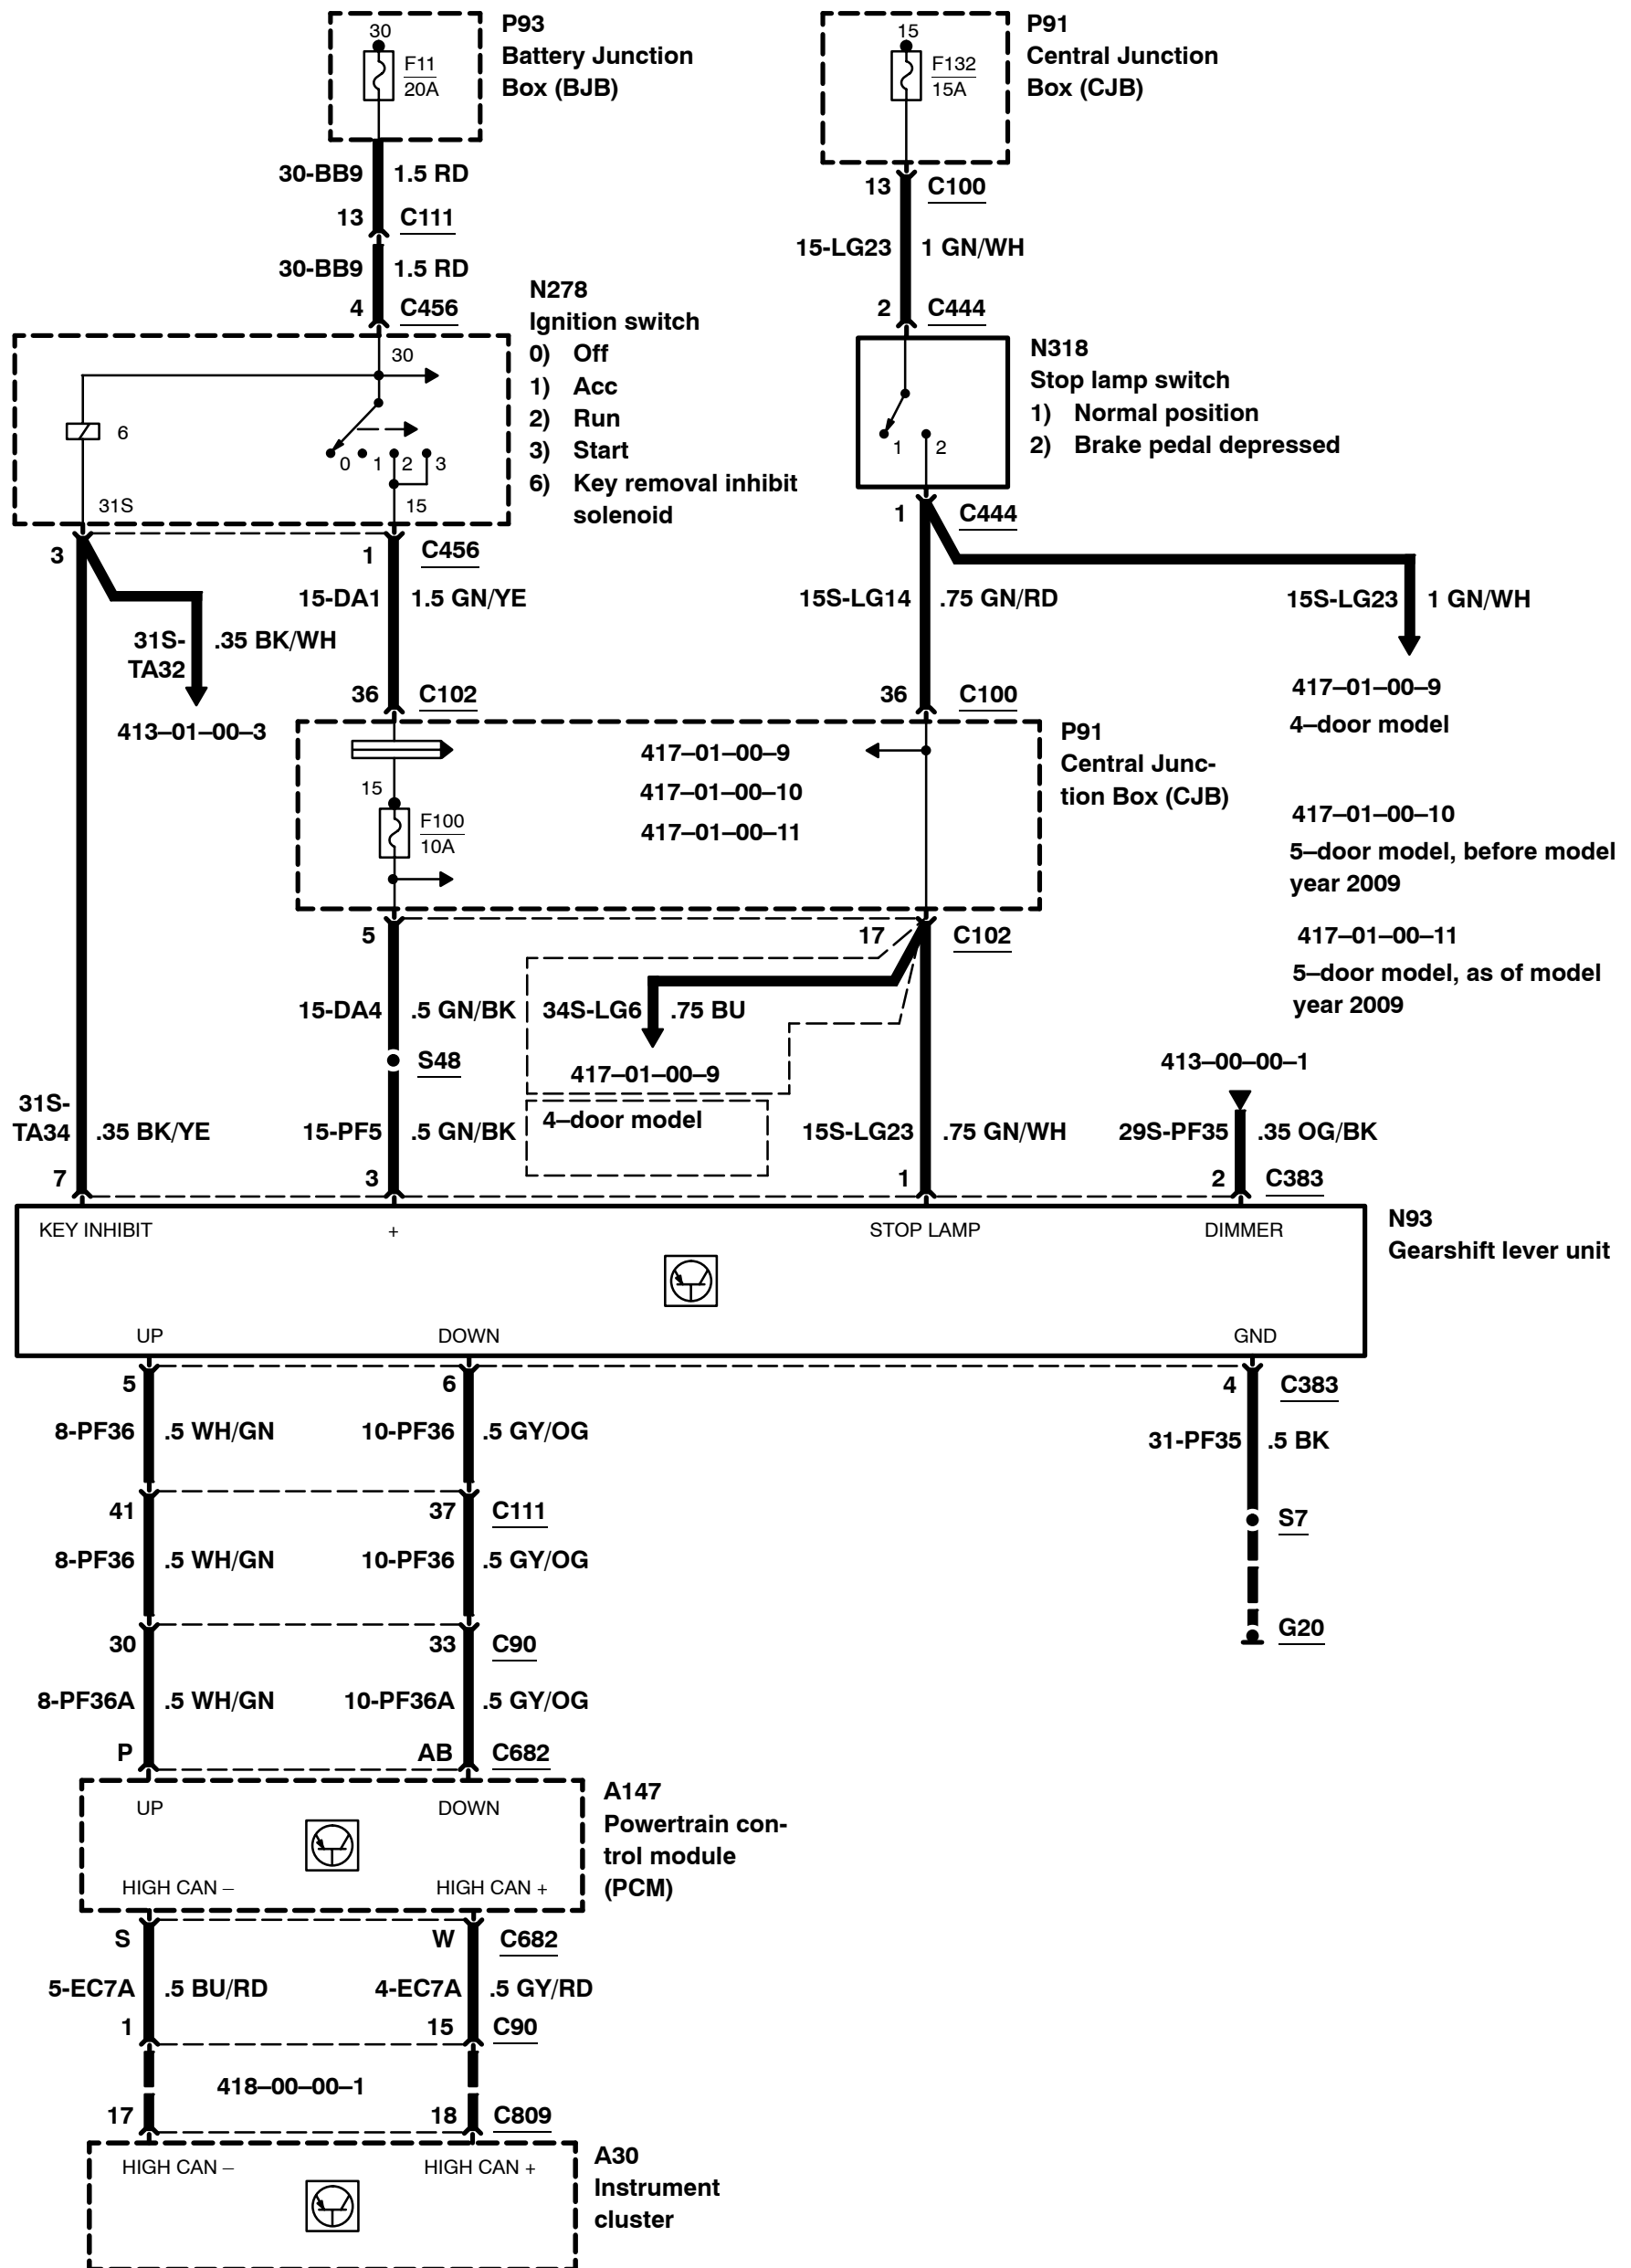



# Automatic Transmission – 1.6L (Z6)

02/2008  
307-01-00-2  
2008.25  
Focus

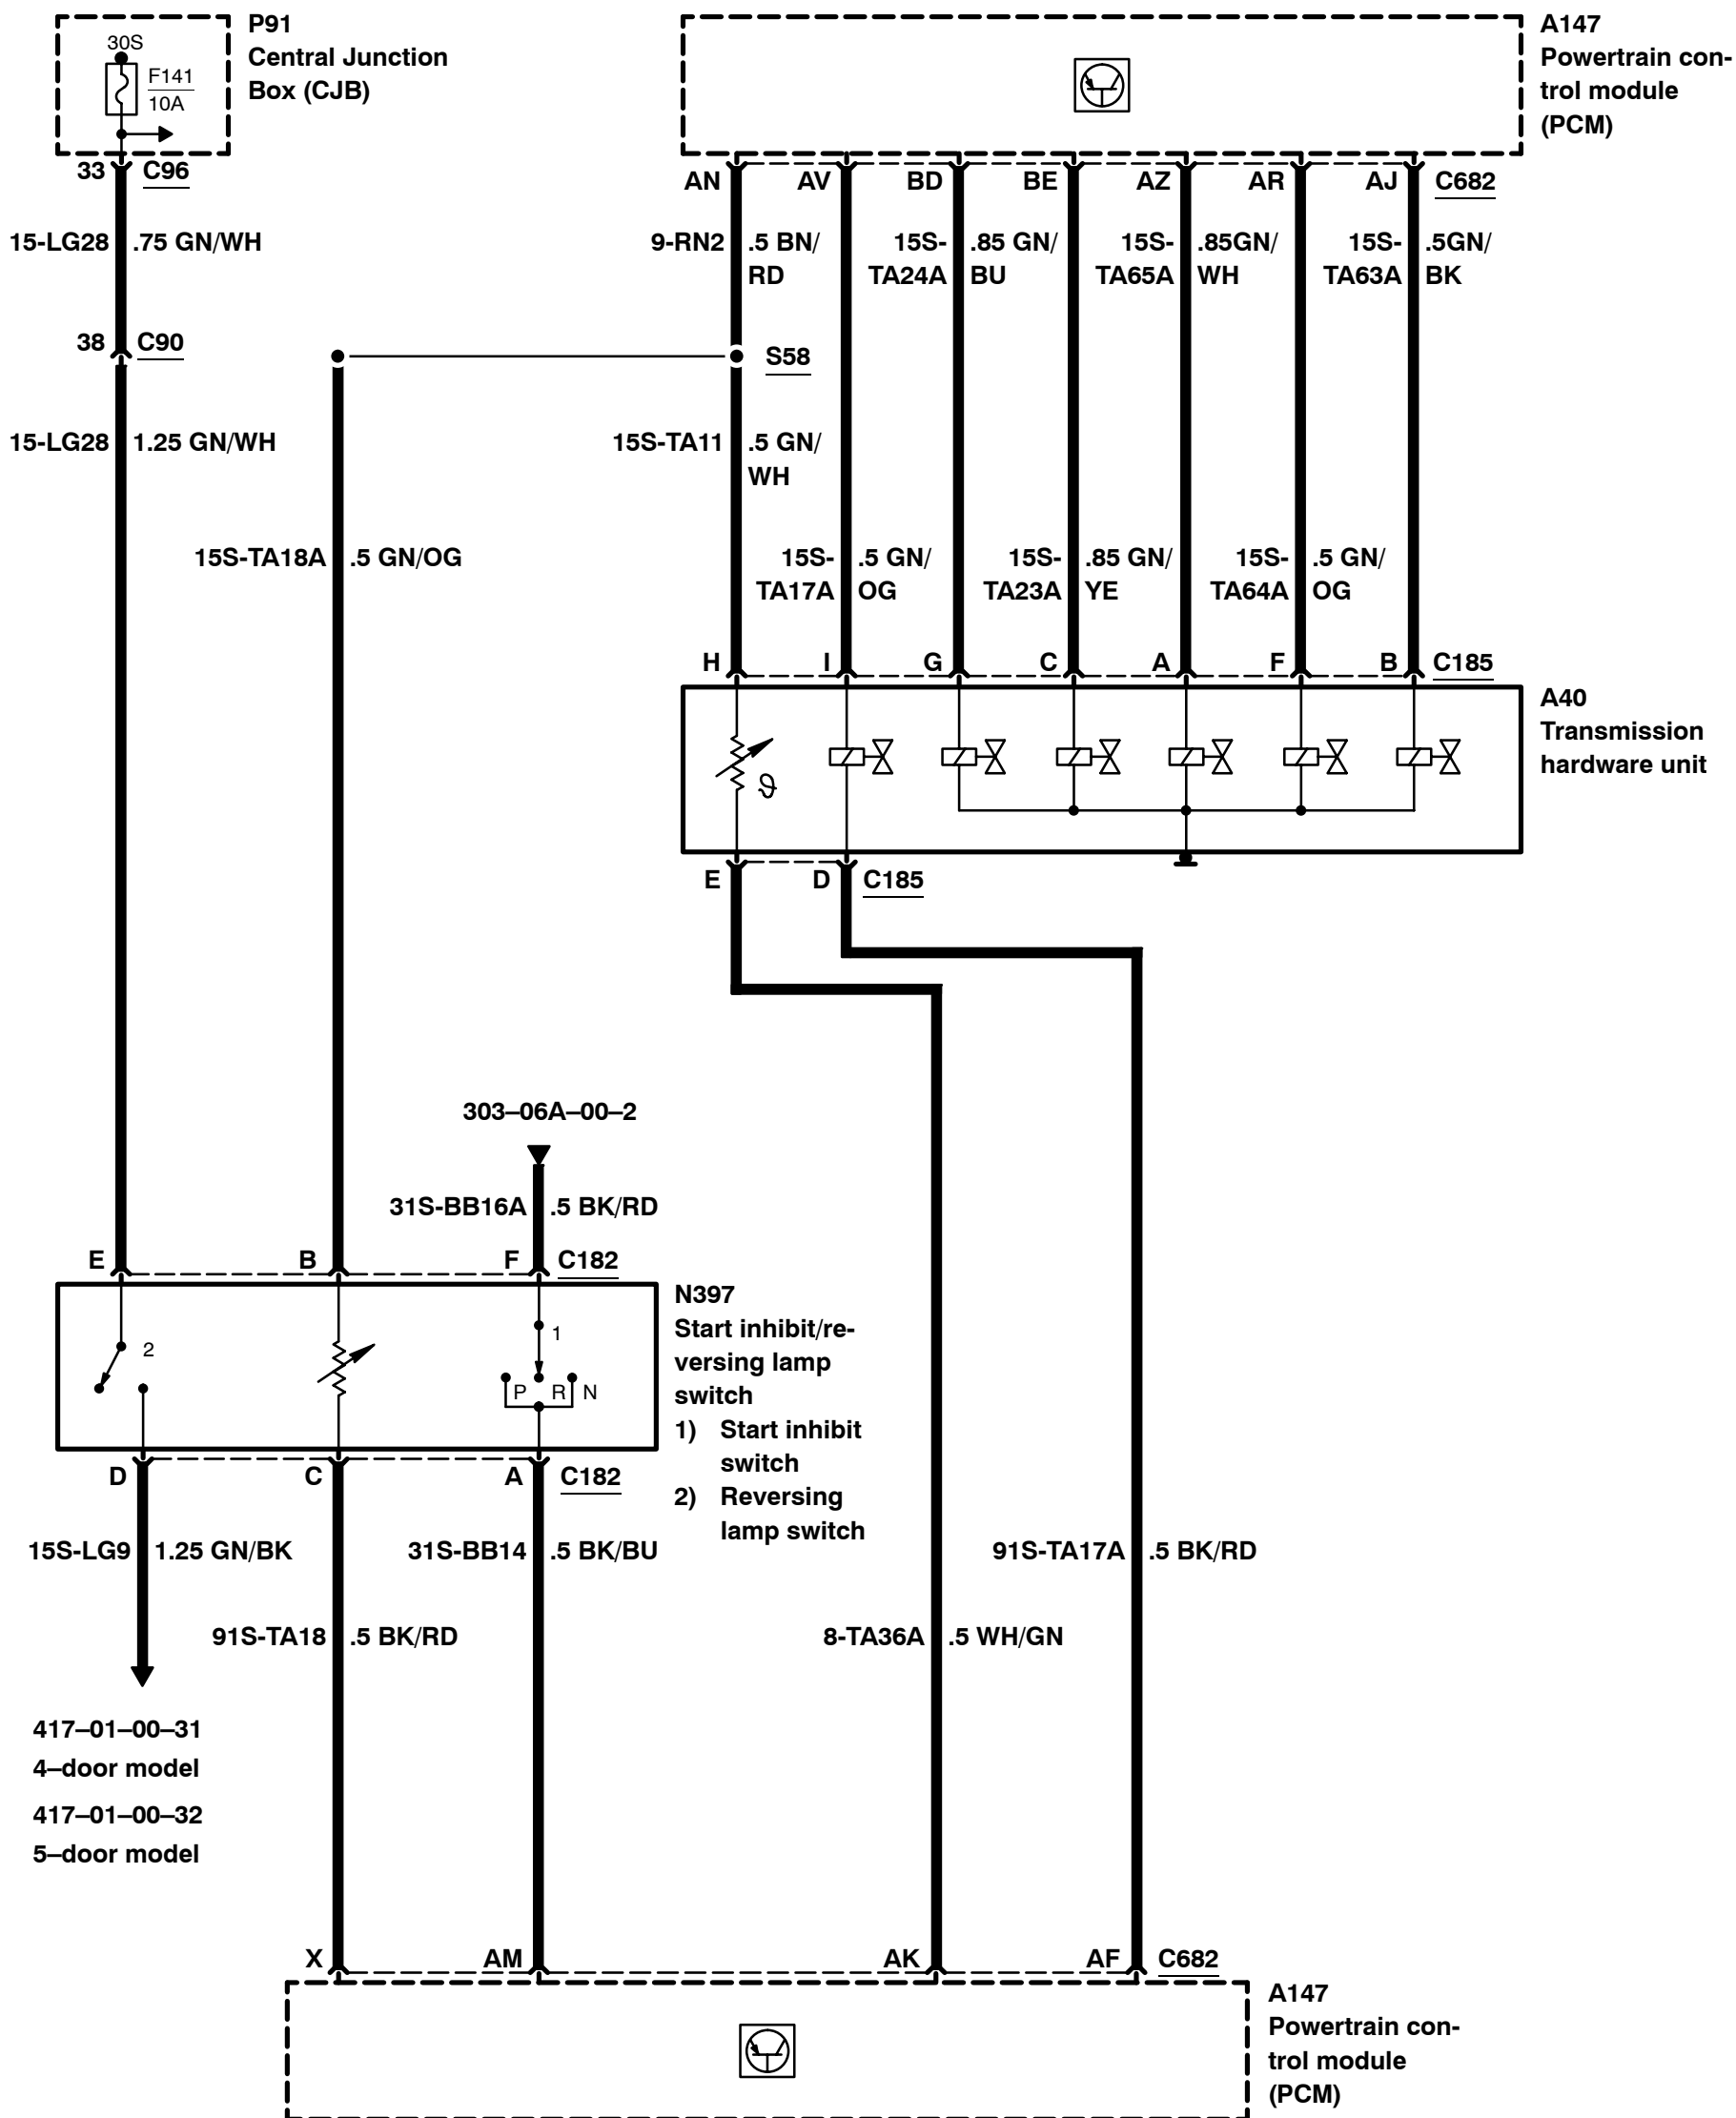


### Automatic Transmission – 1.6L (Z6)

**02/2008**


**307-01-00-3**


**2008.25**

## Focus

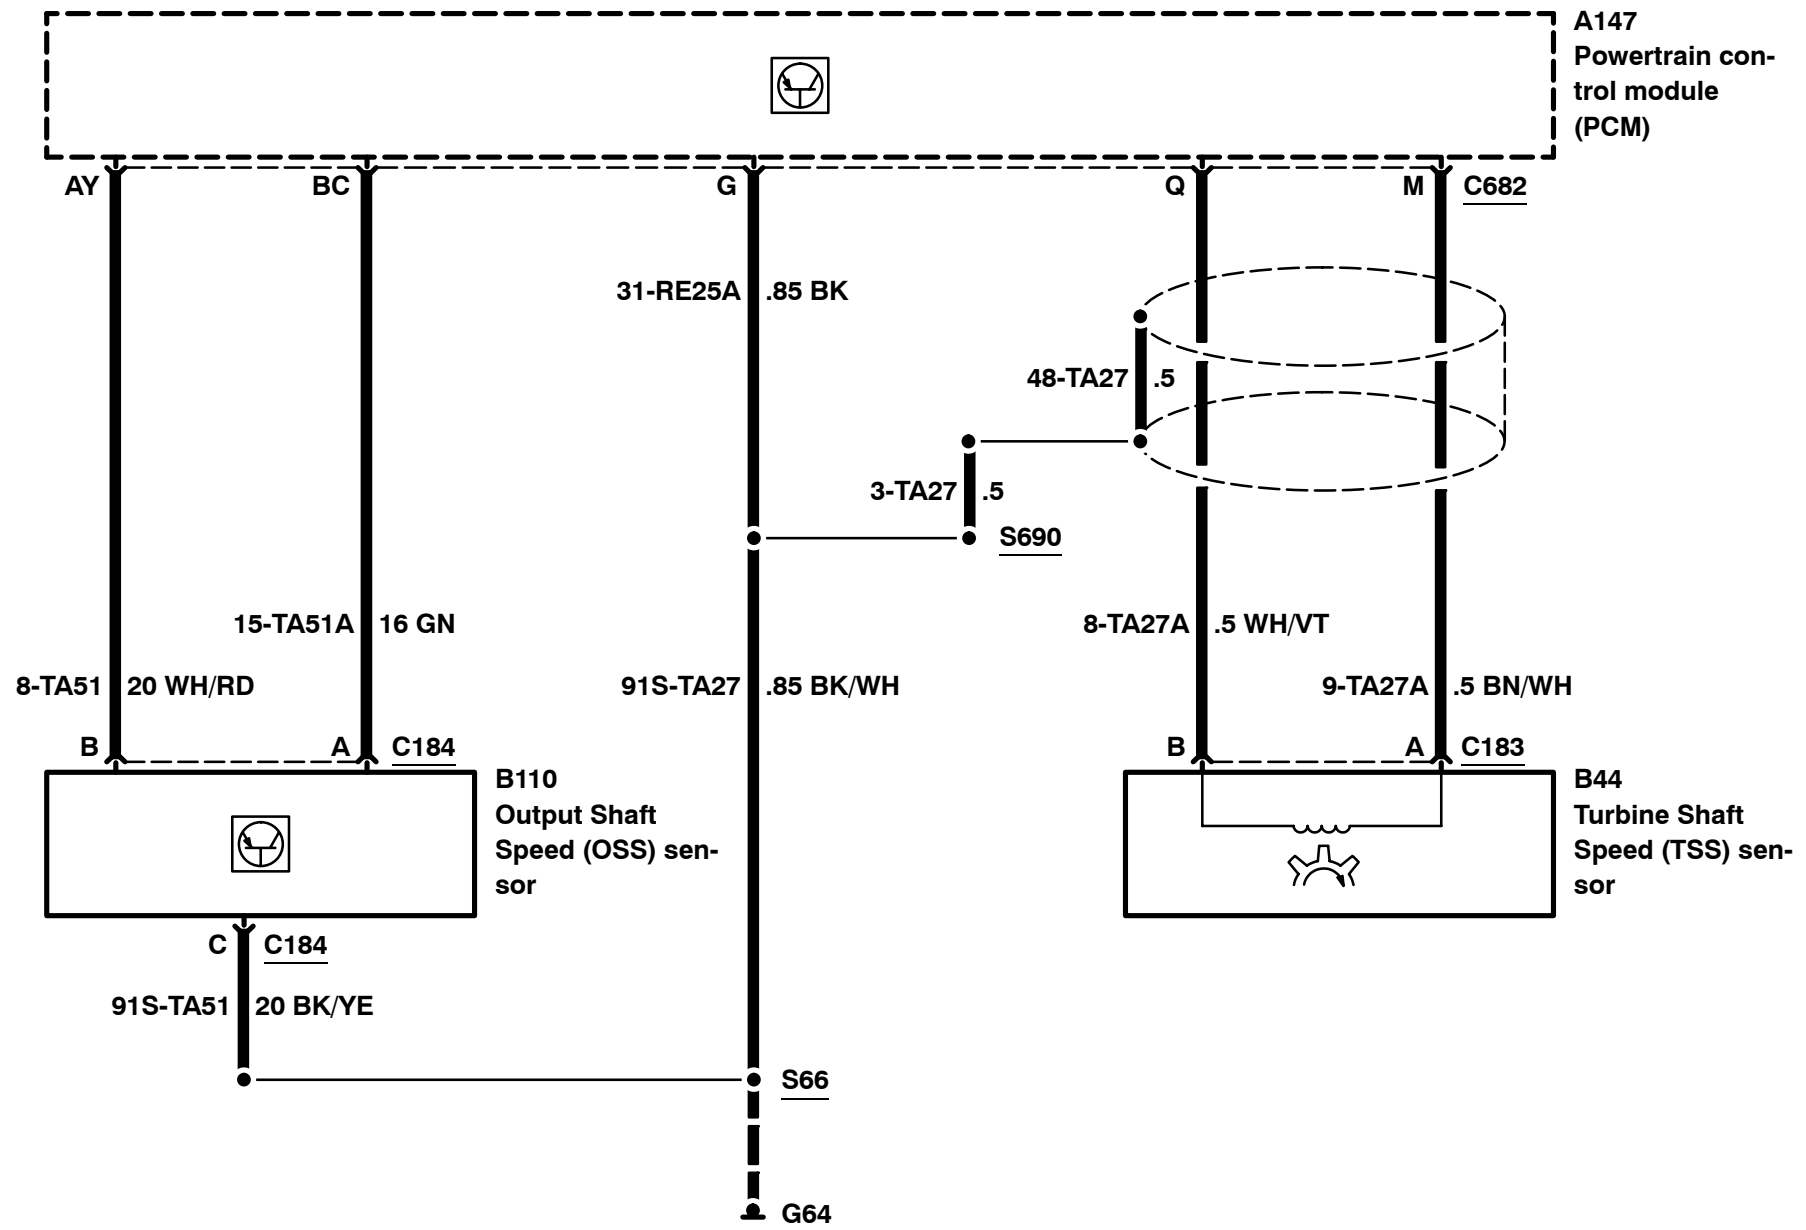




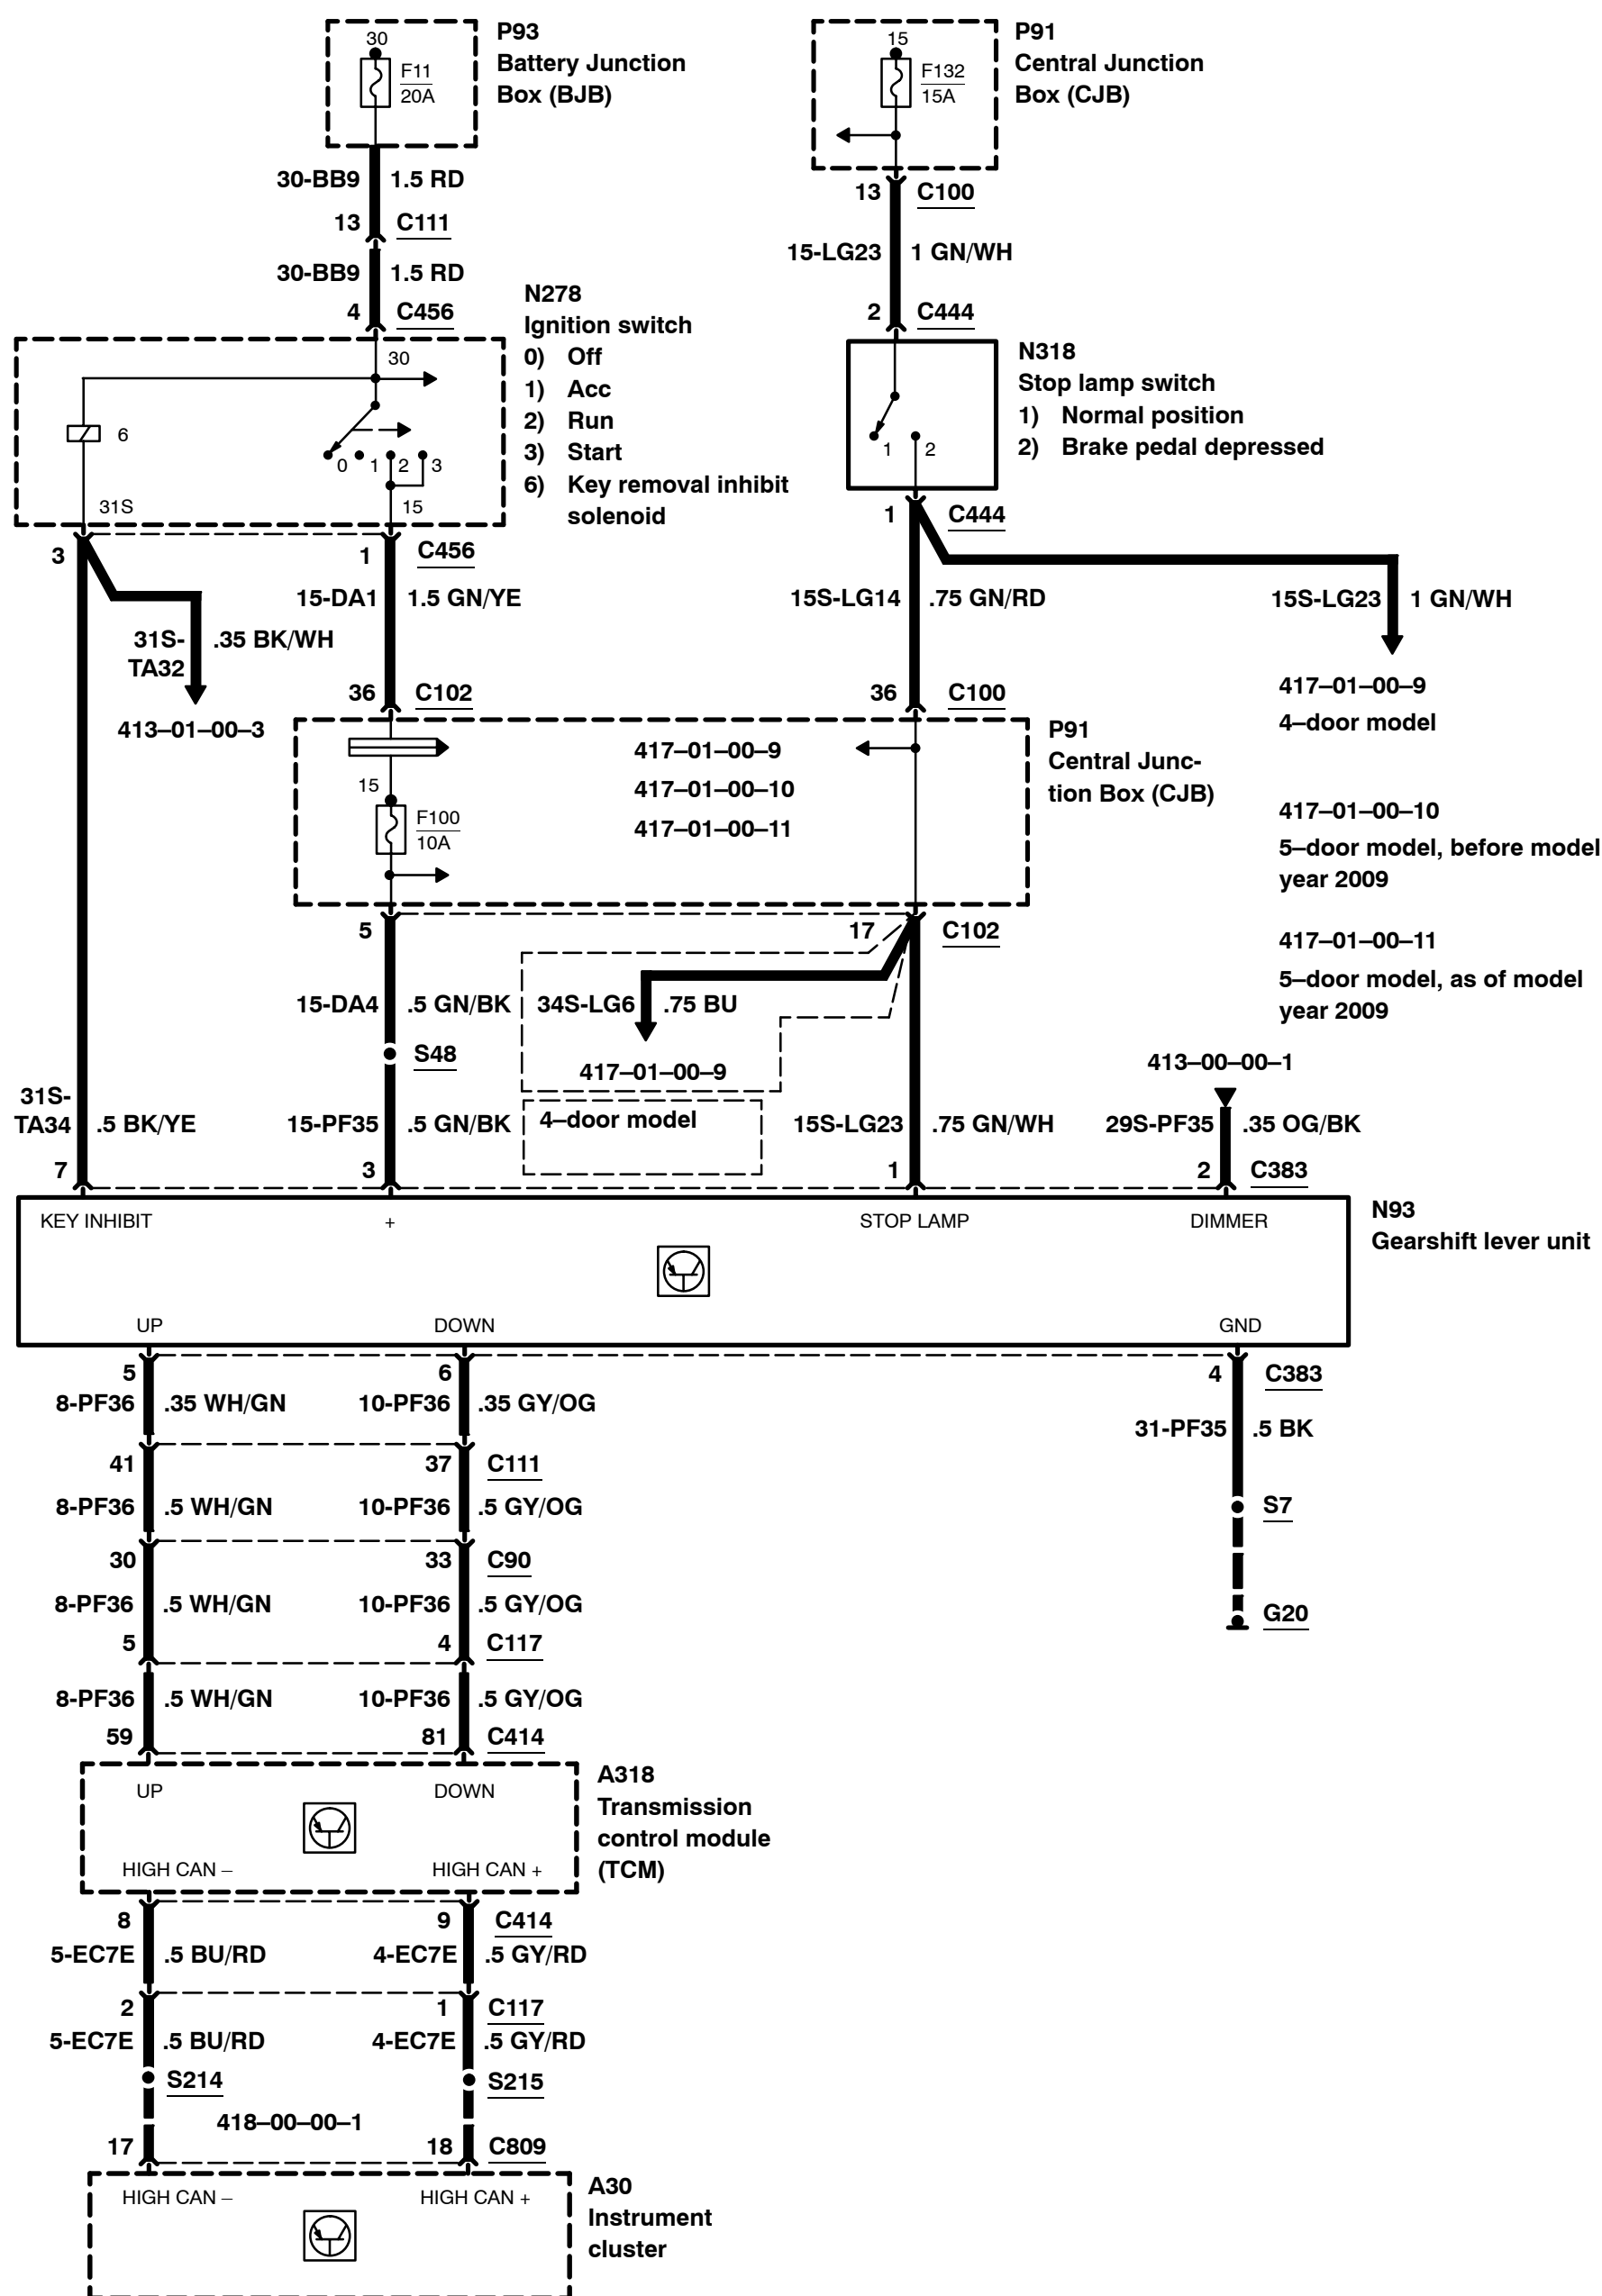

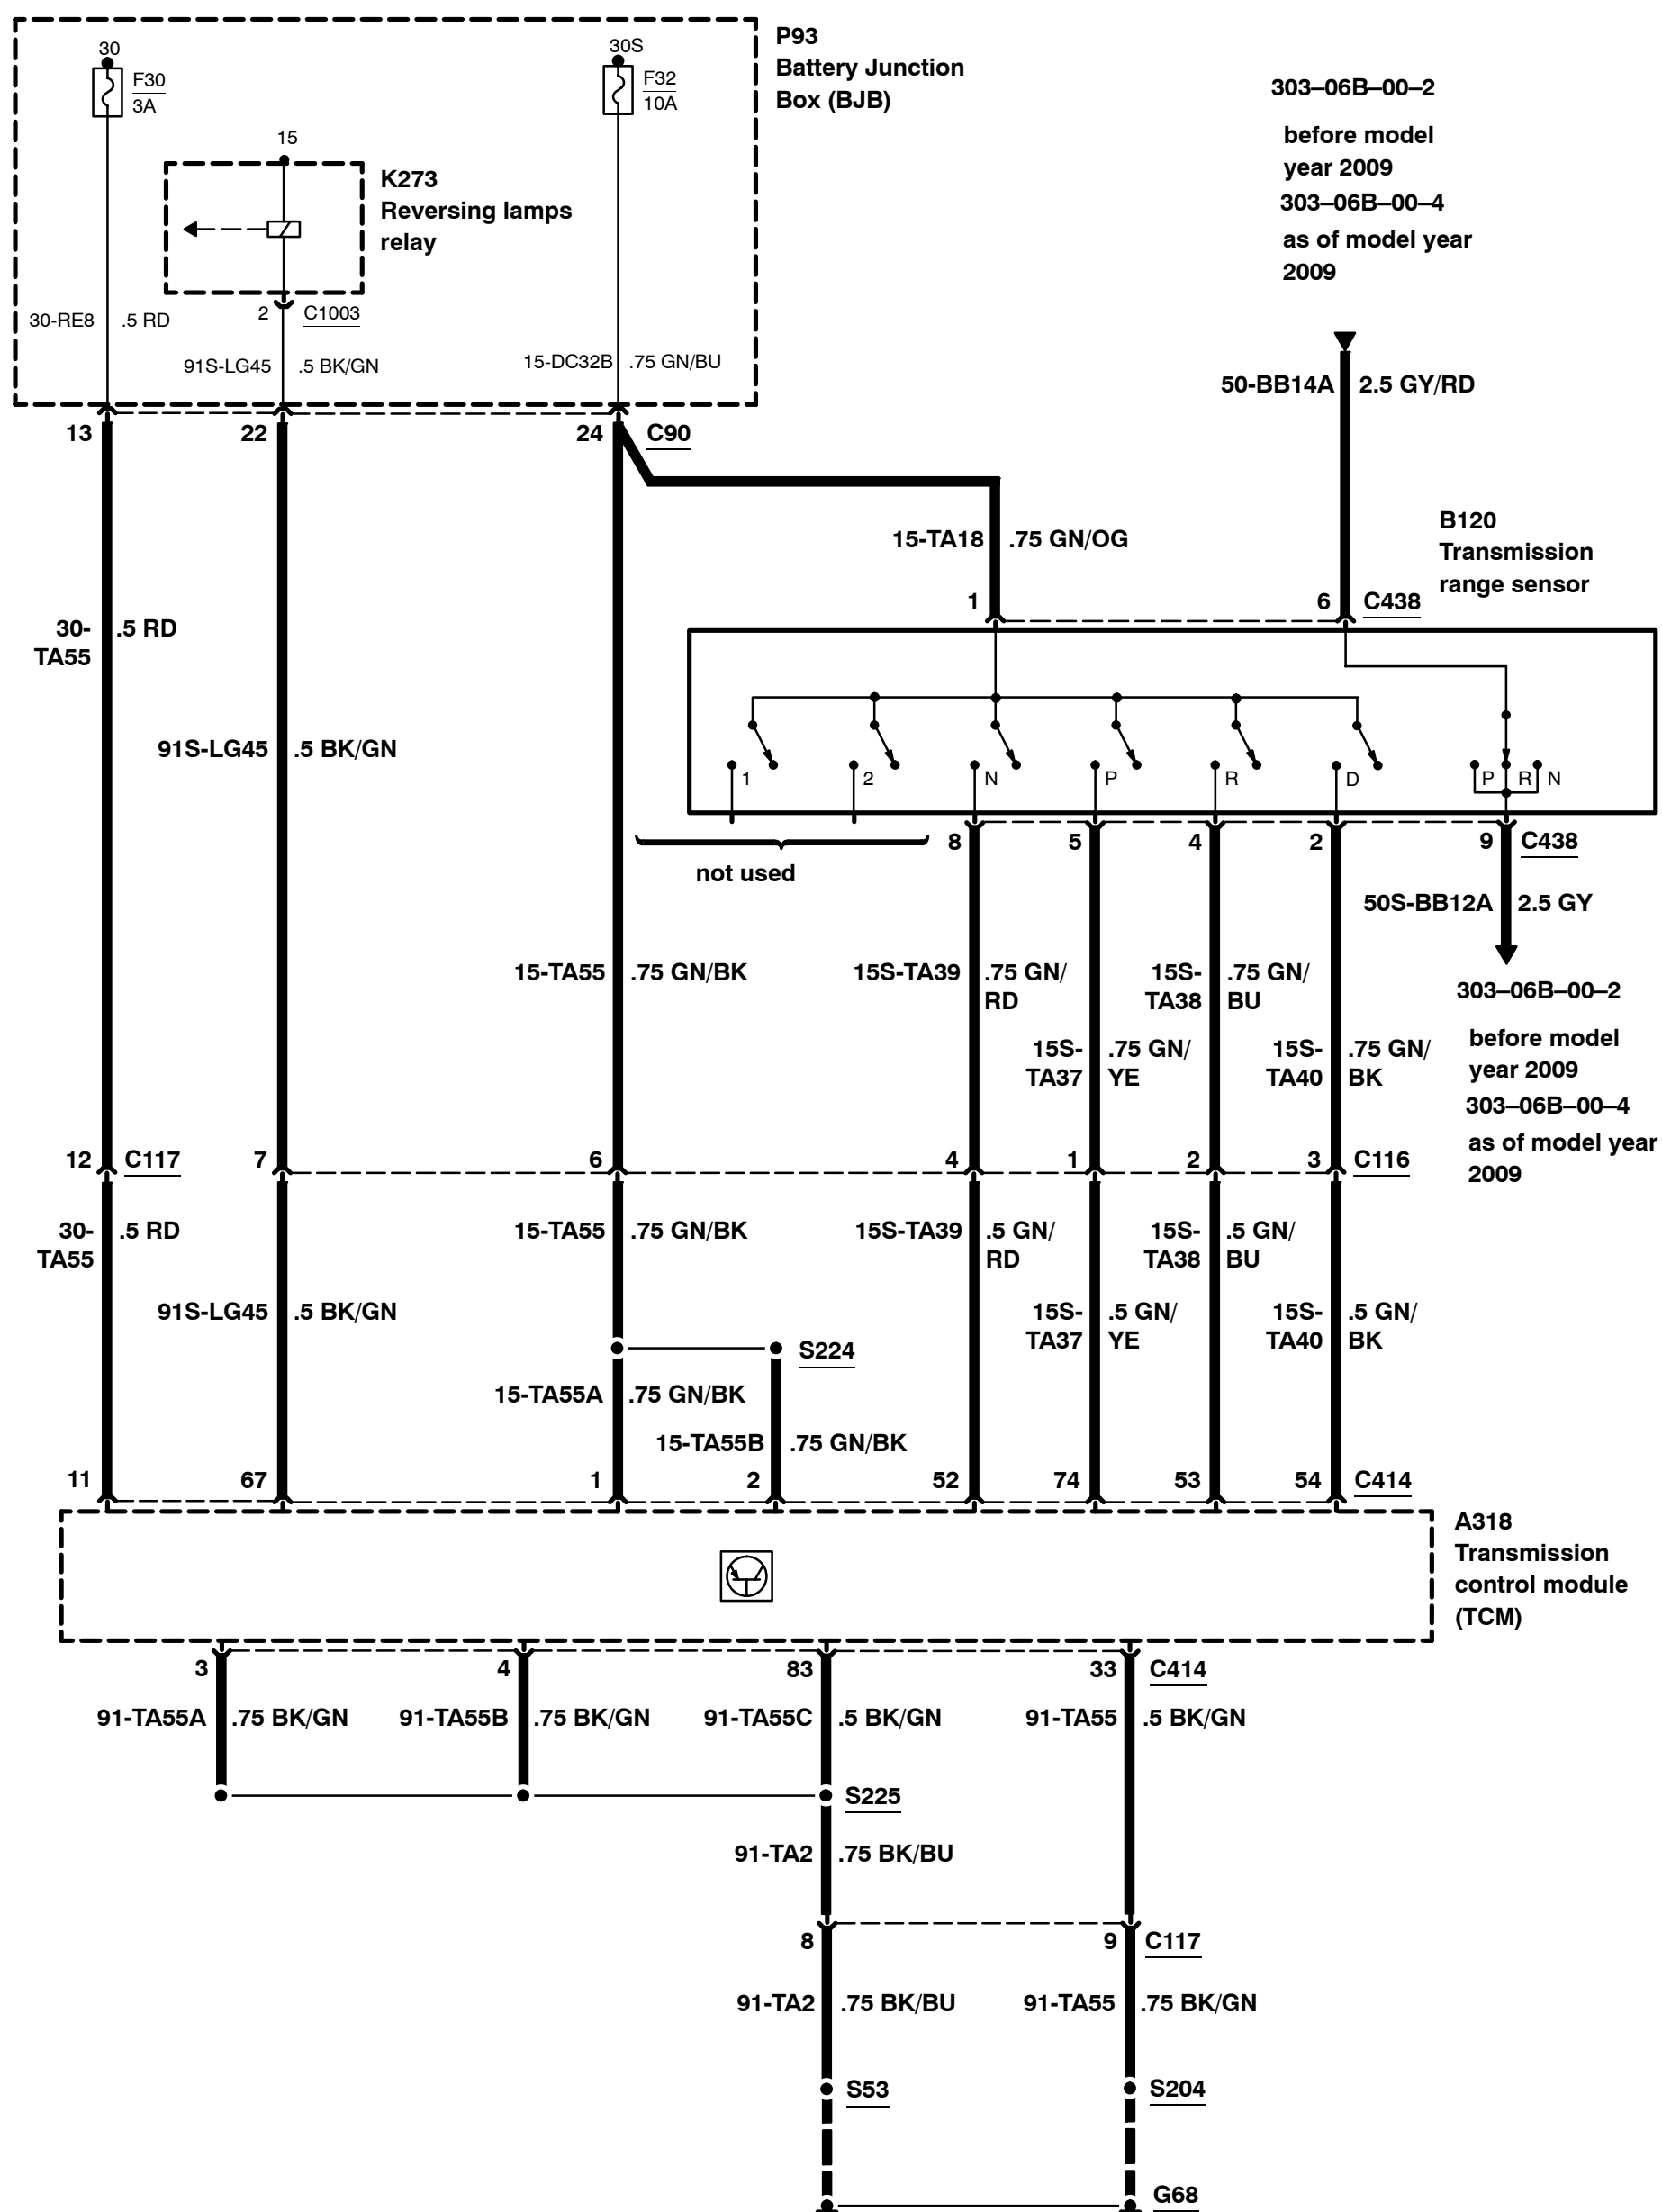


# Automatic Transmission – 1.8/2.0L Duratec–HE (MI4), LHD


02/2008  
307-01-00-6  
2008.25  
Focus

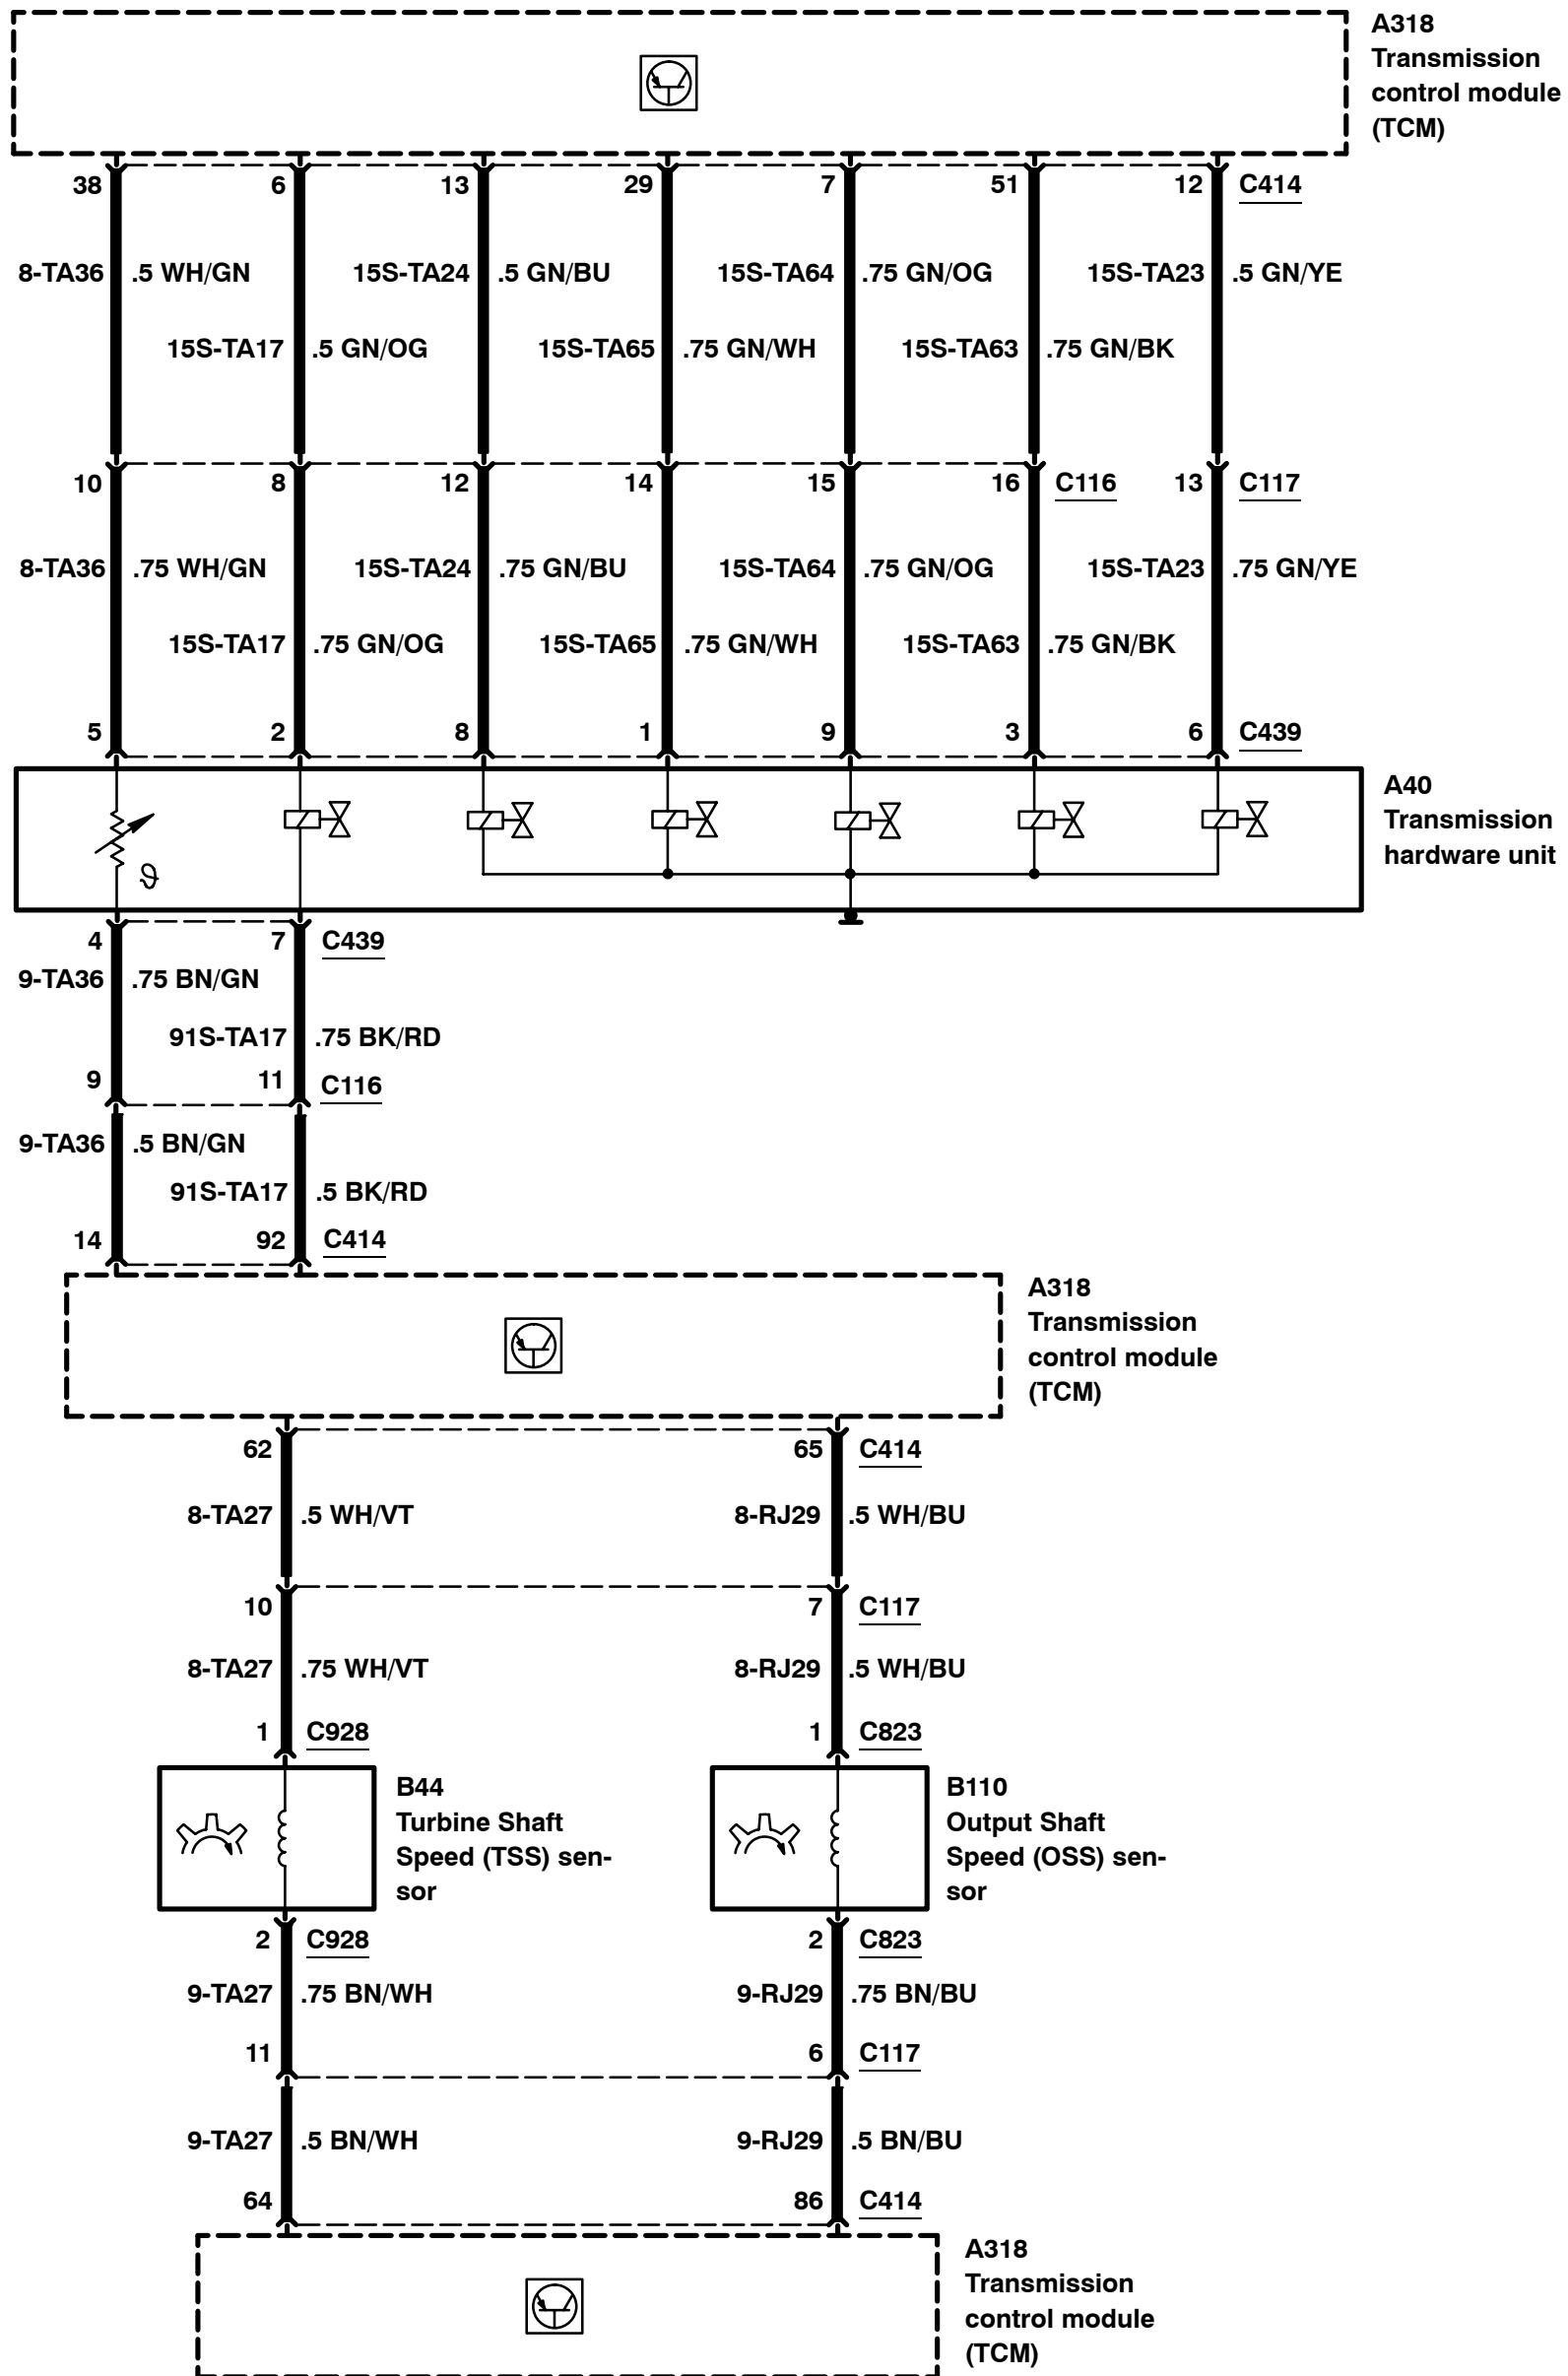


# Automatic Transmission – 1.8/2.0L Duratec–HE (MI4), RHD


02/2008  
307-01-00-7  
2008.25  
Focus

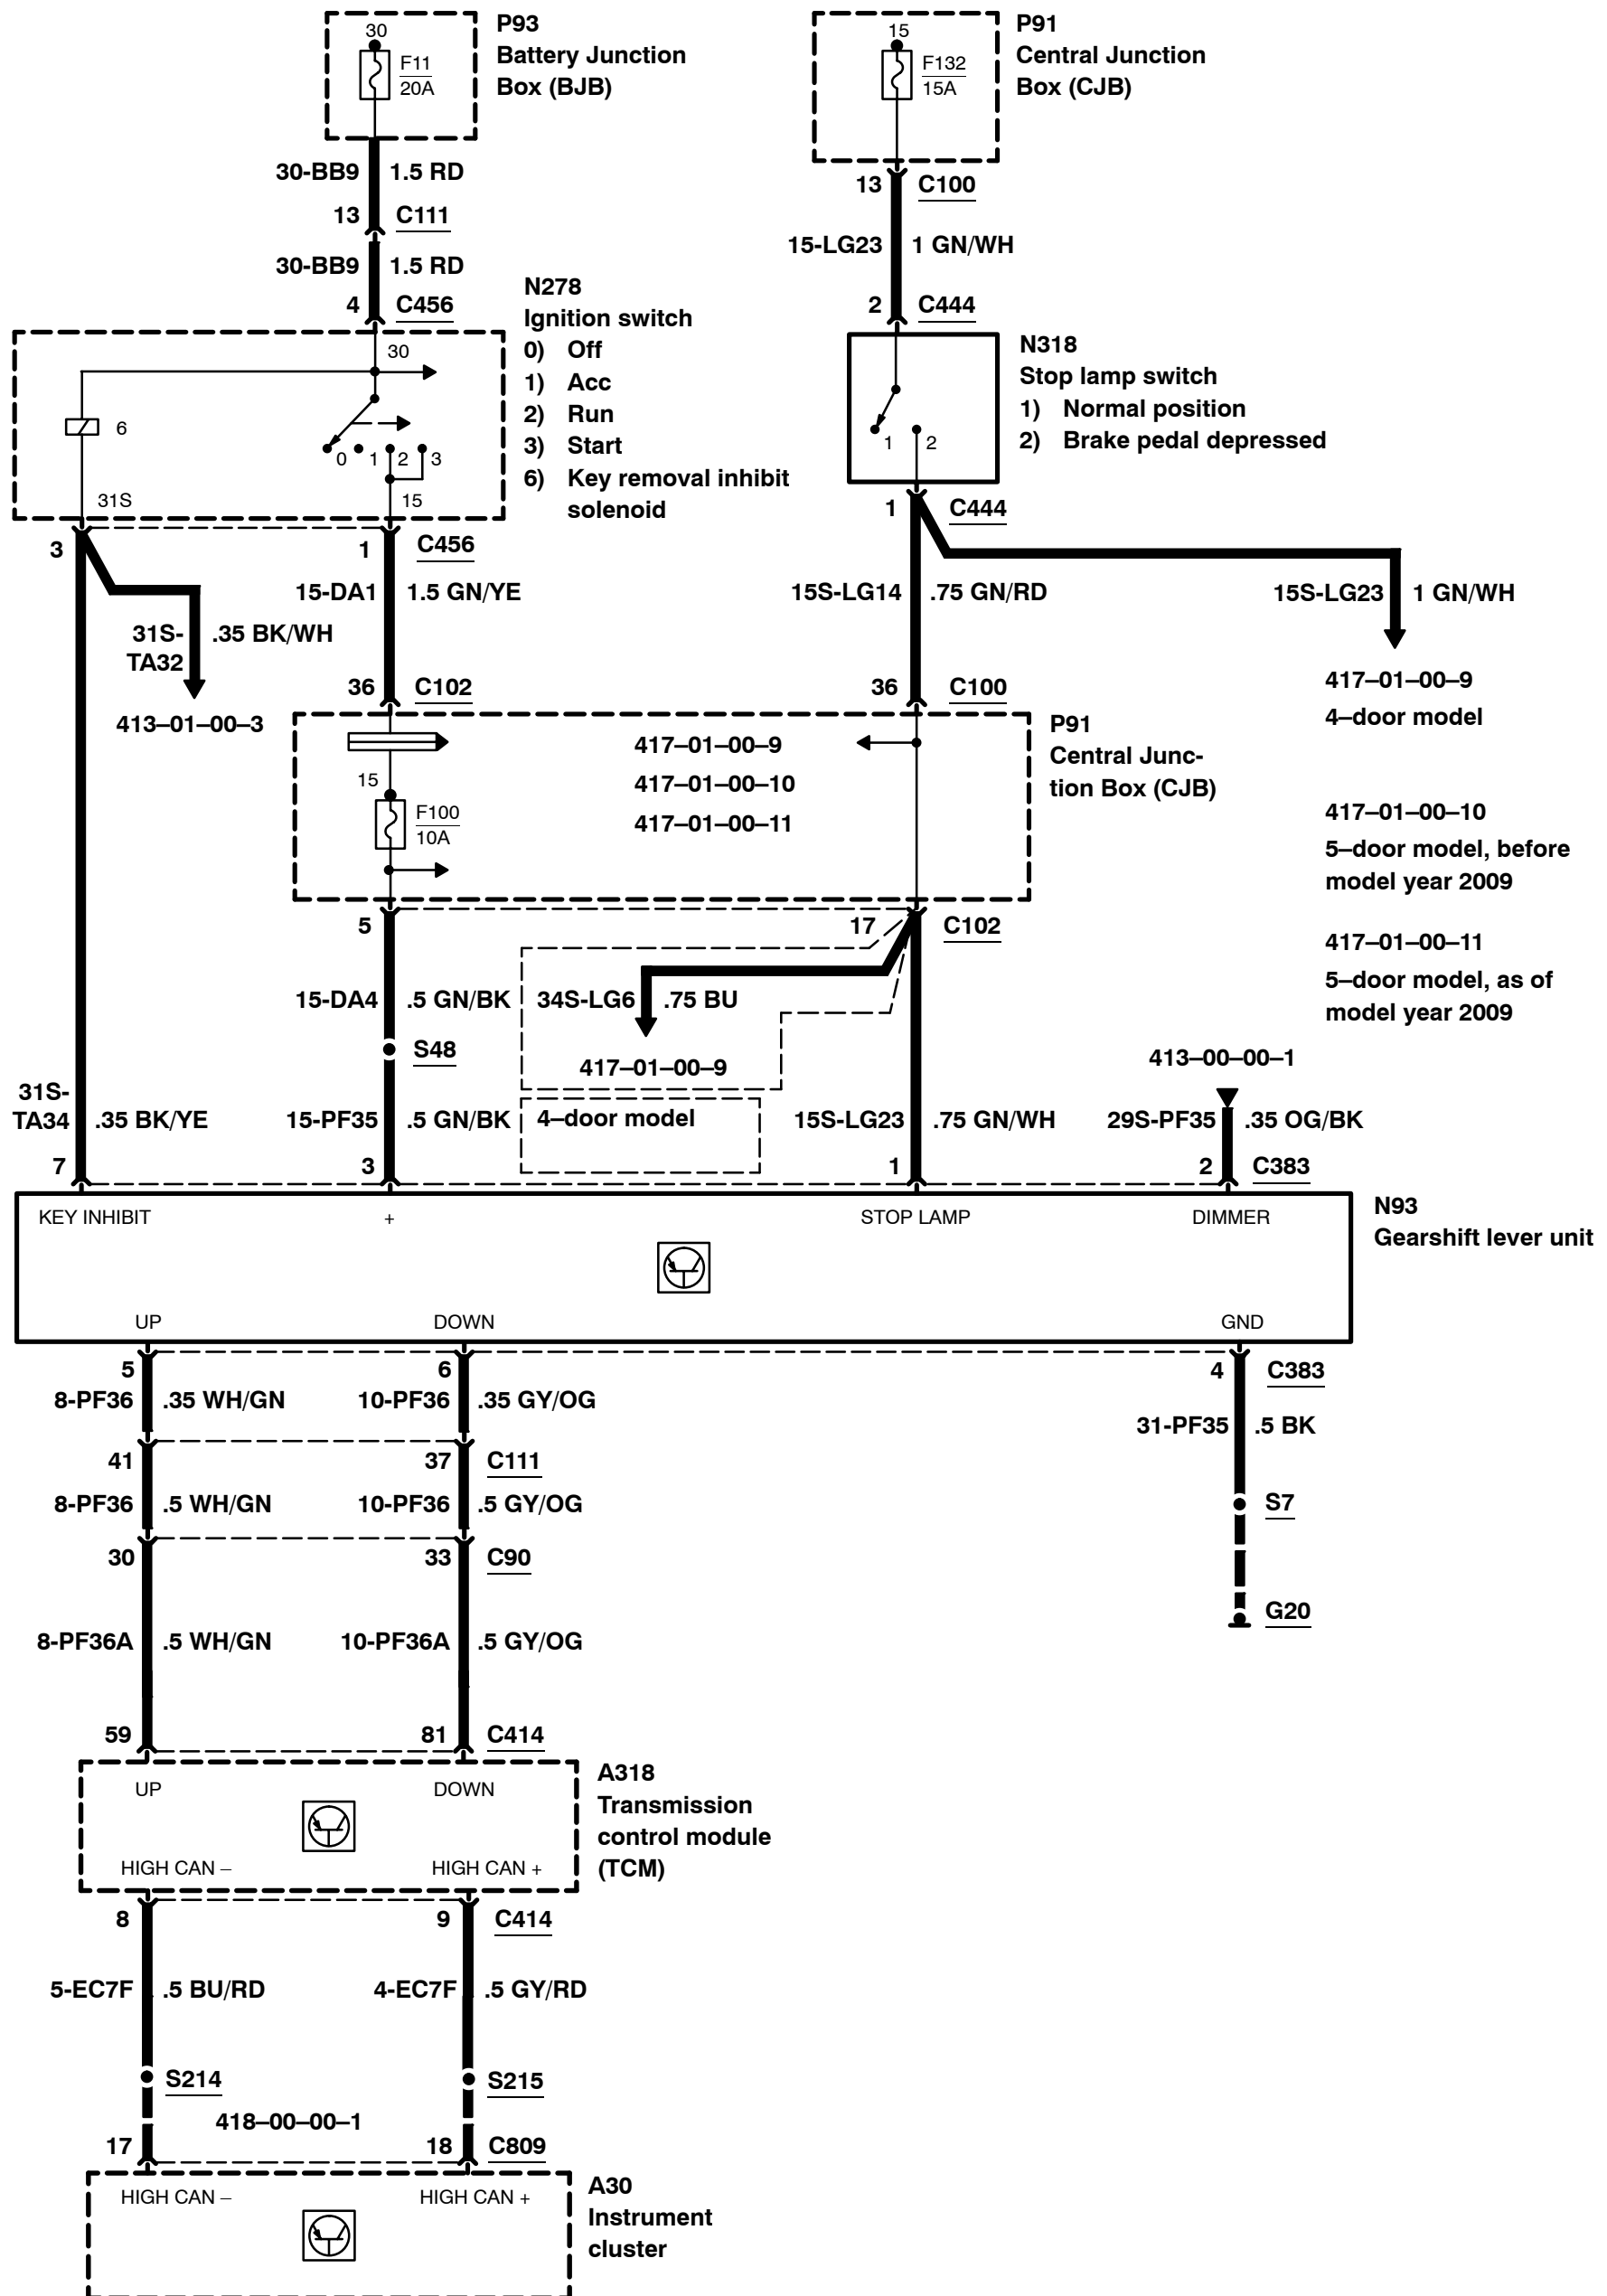


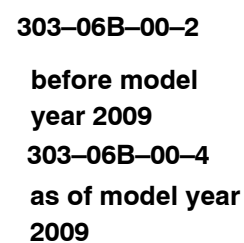

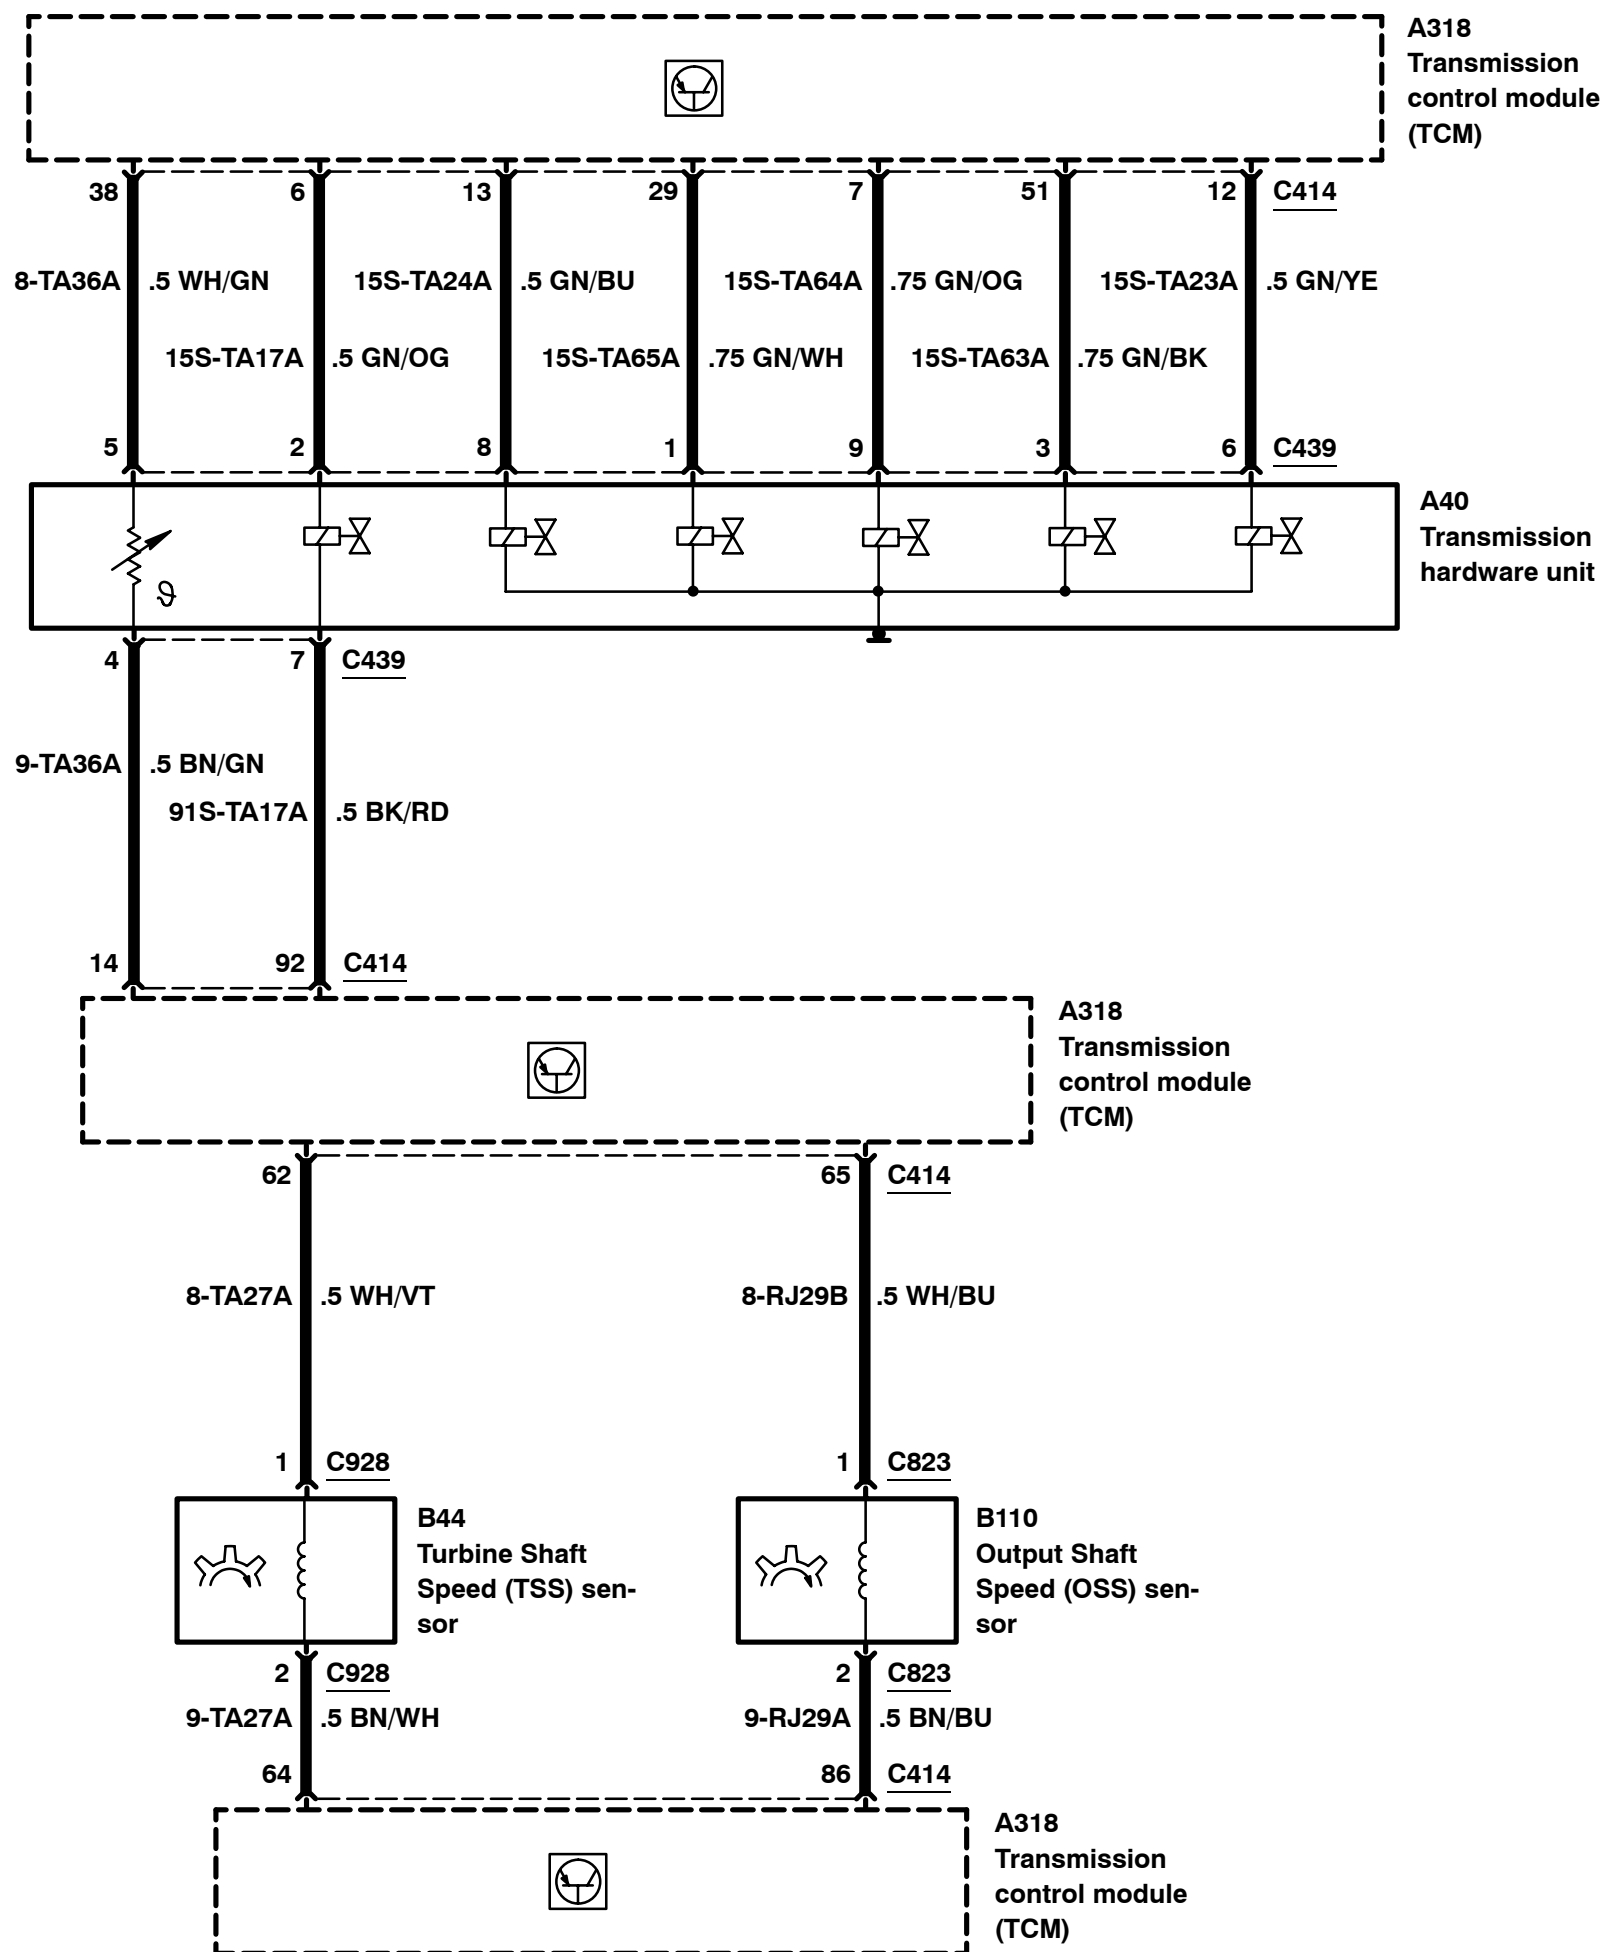



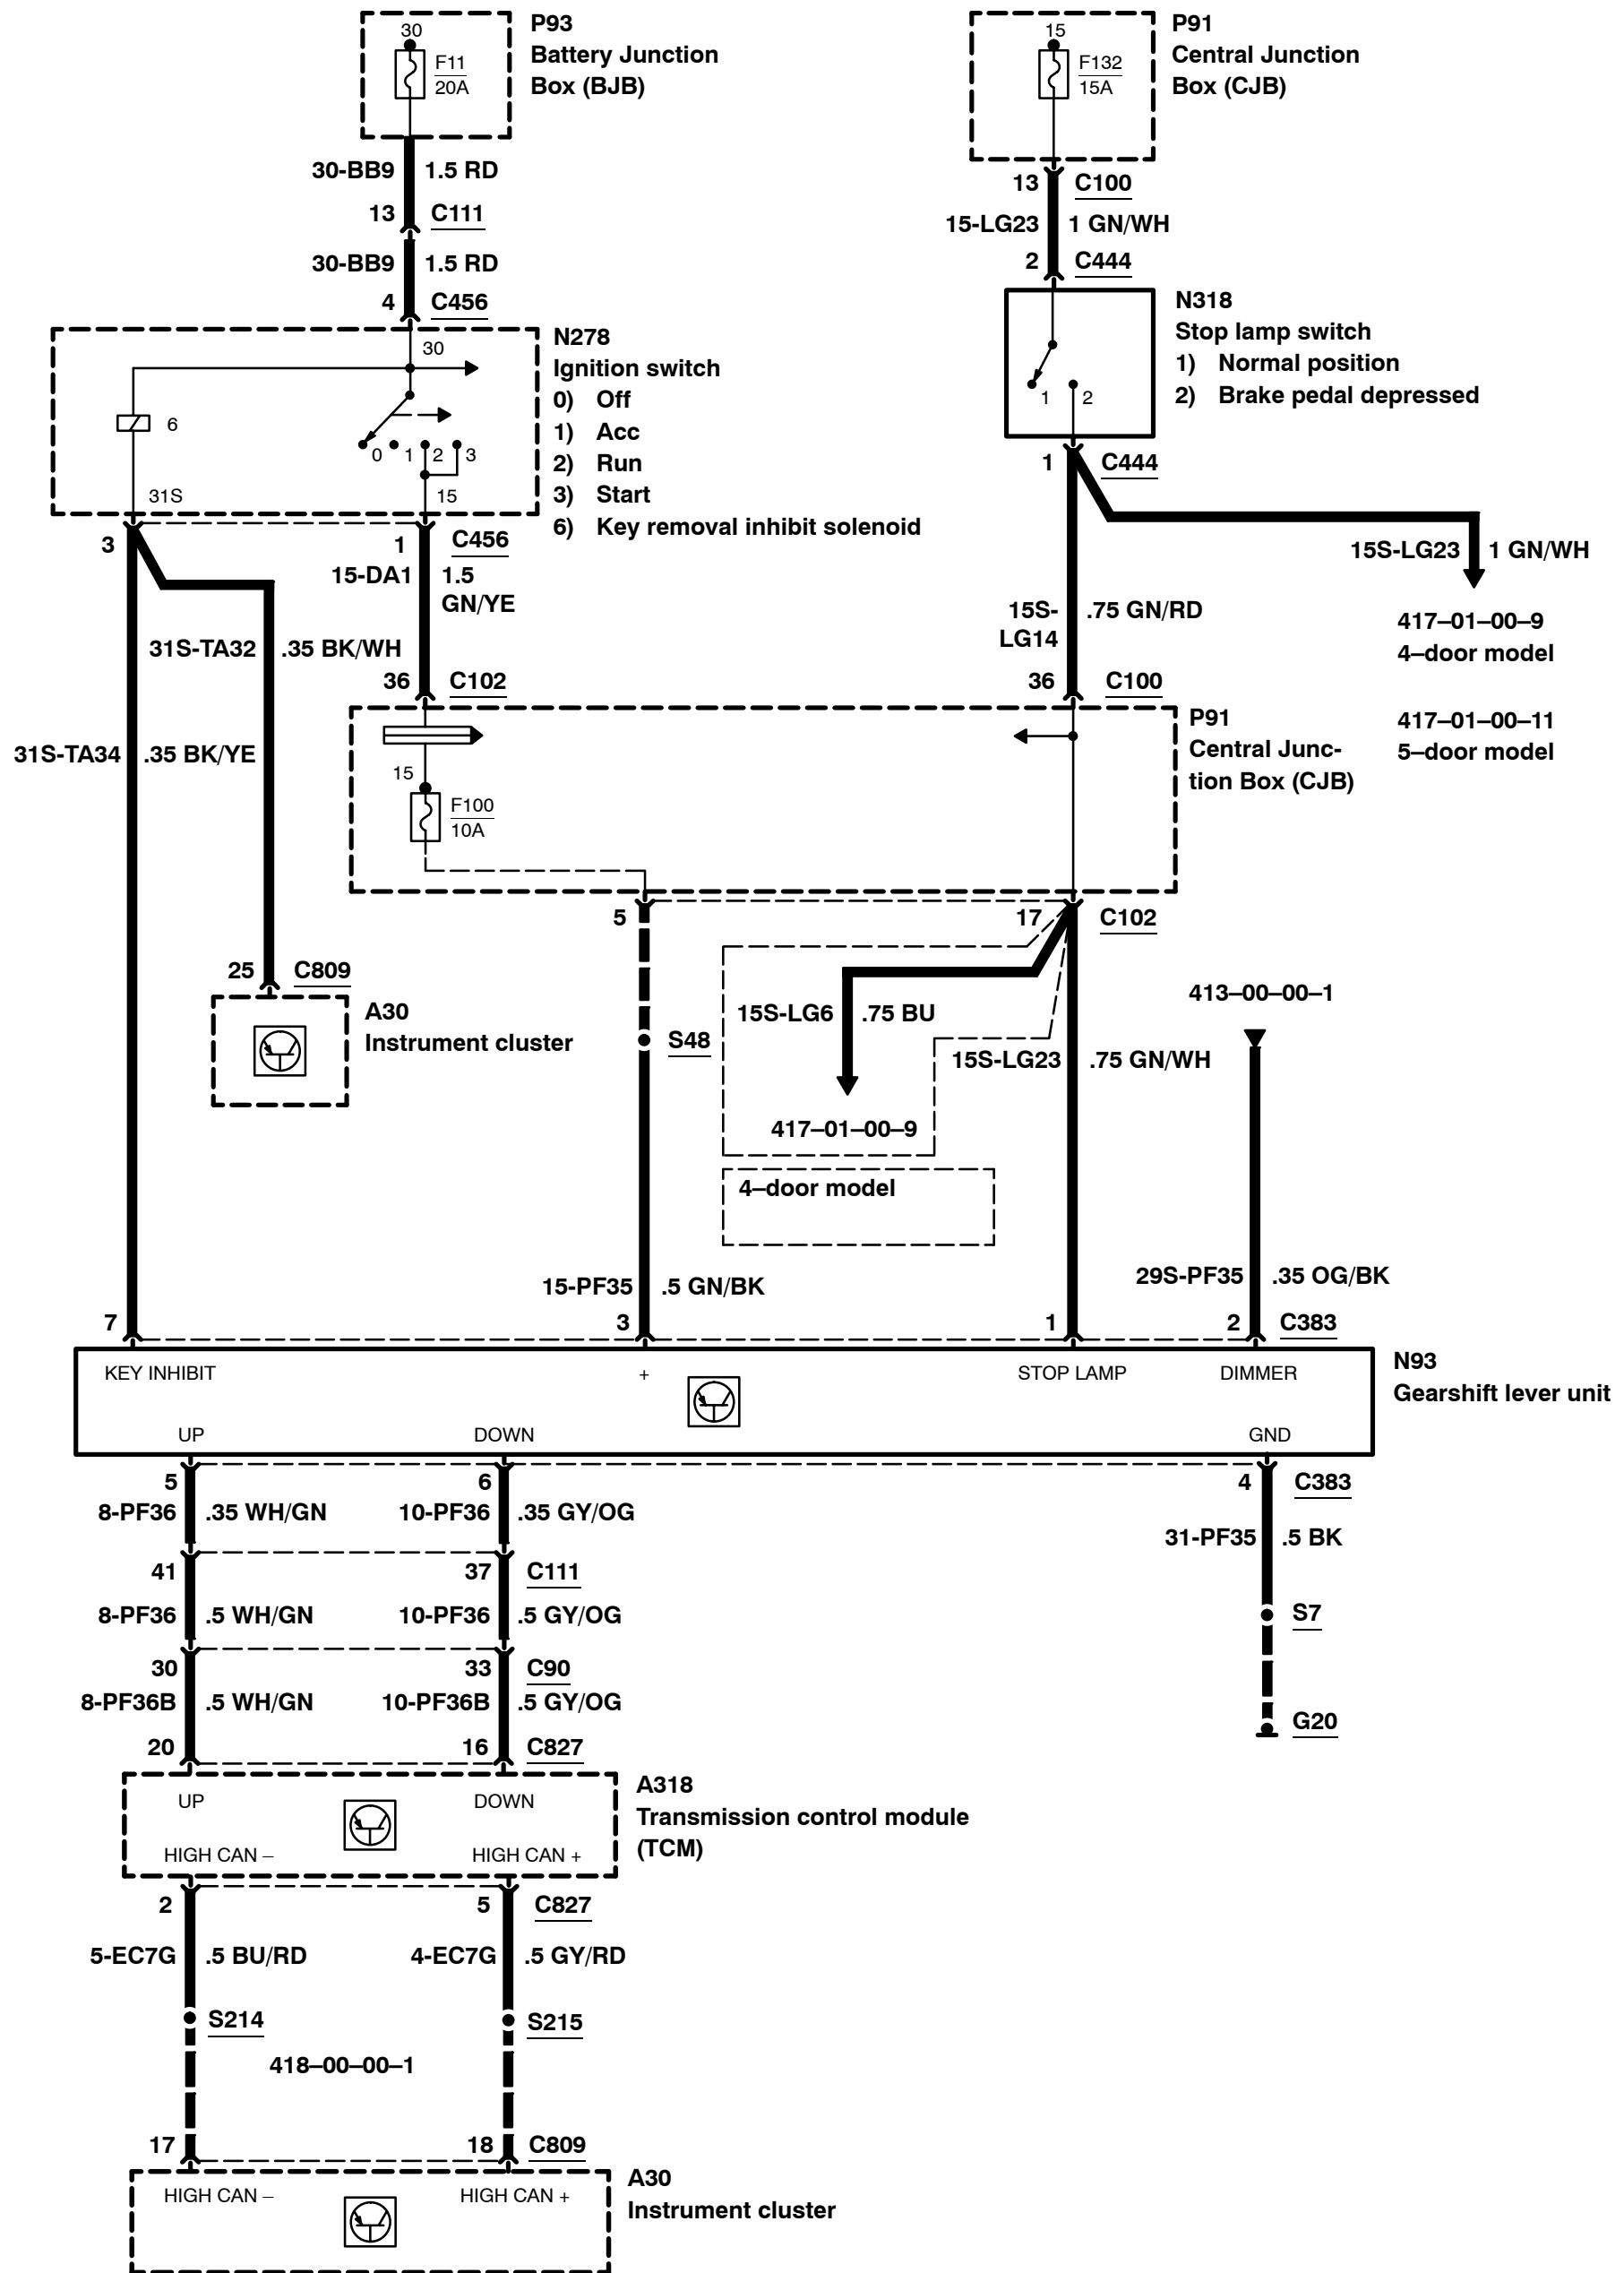


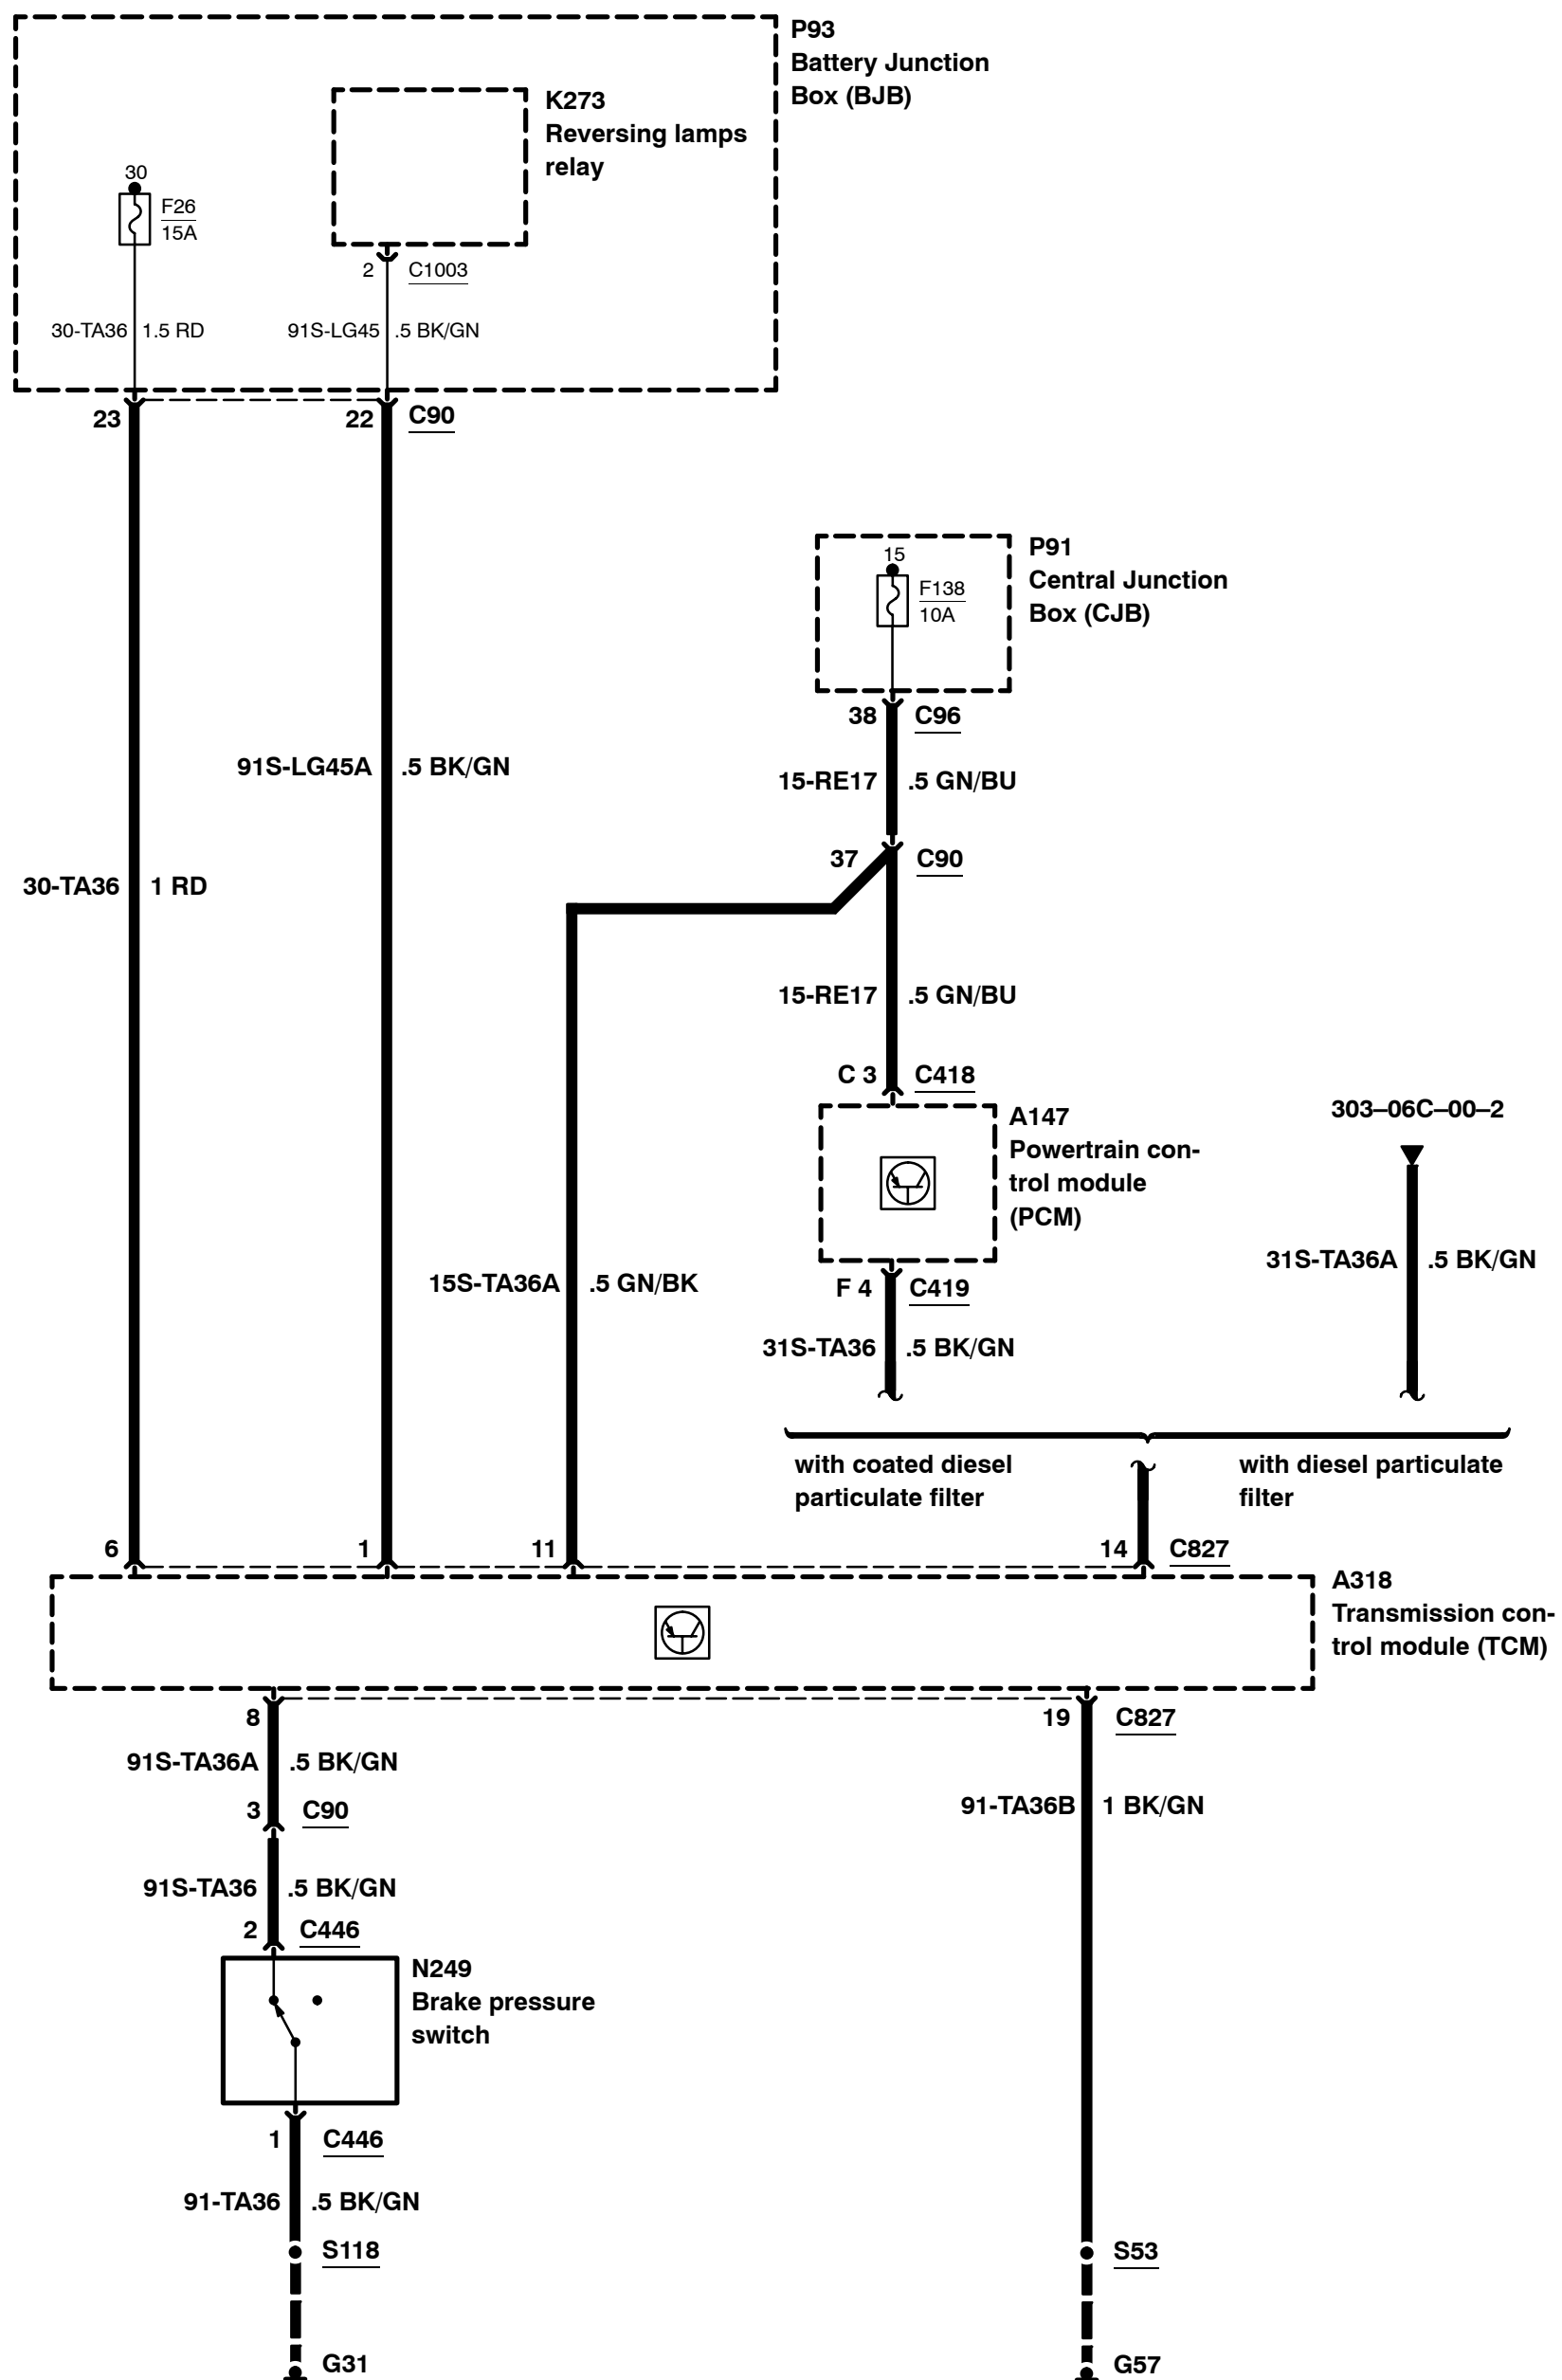




Speed Control


02/2008  
310-03-00-1  
2008.25  
Focus

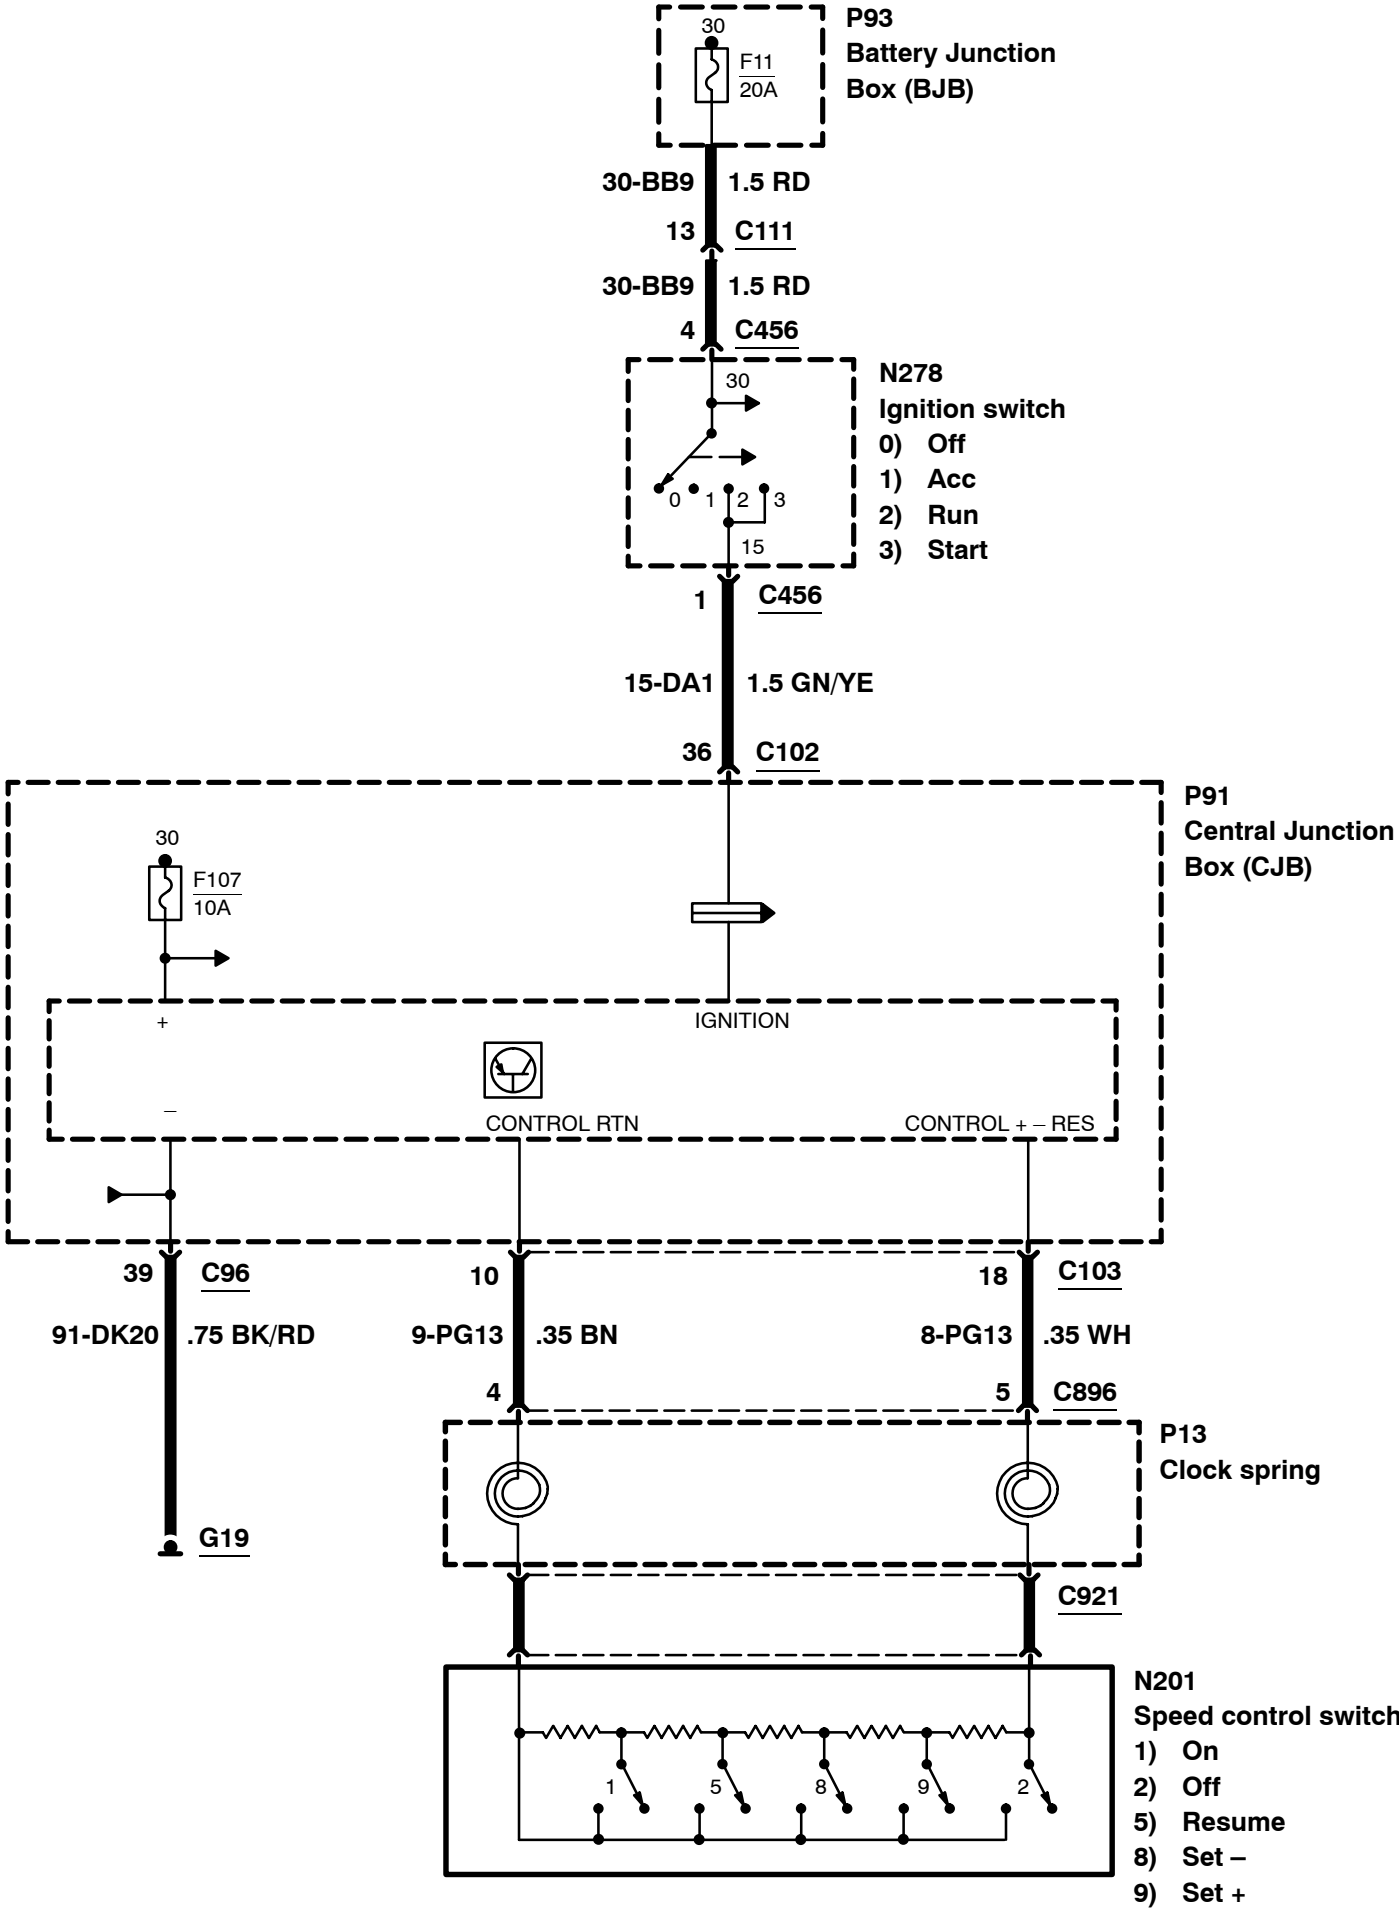



# Speed Control


02/2008  
310-03-00-2  
2008.25  
Focus

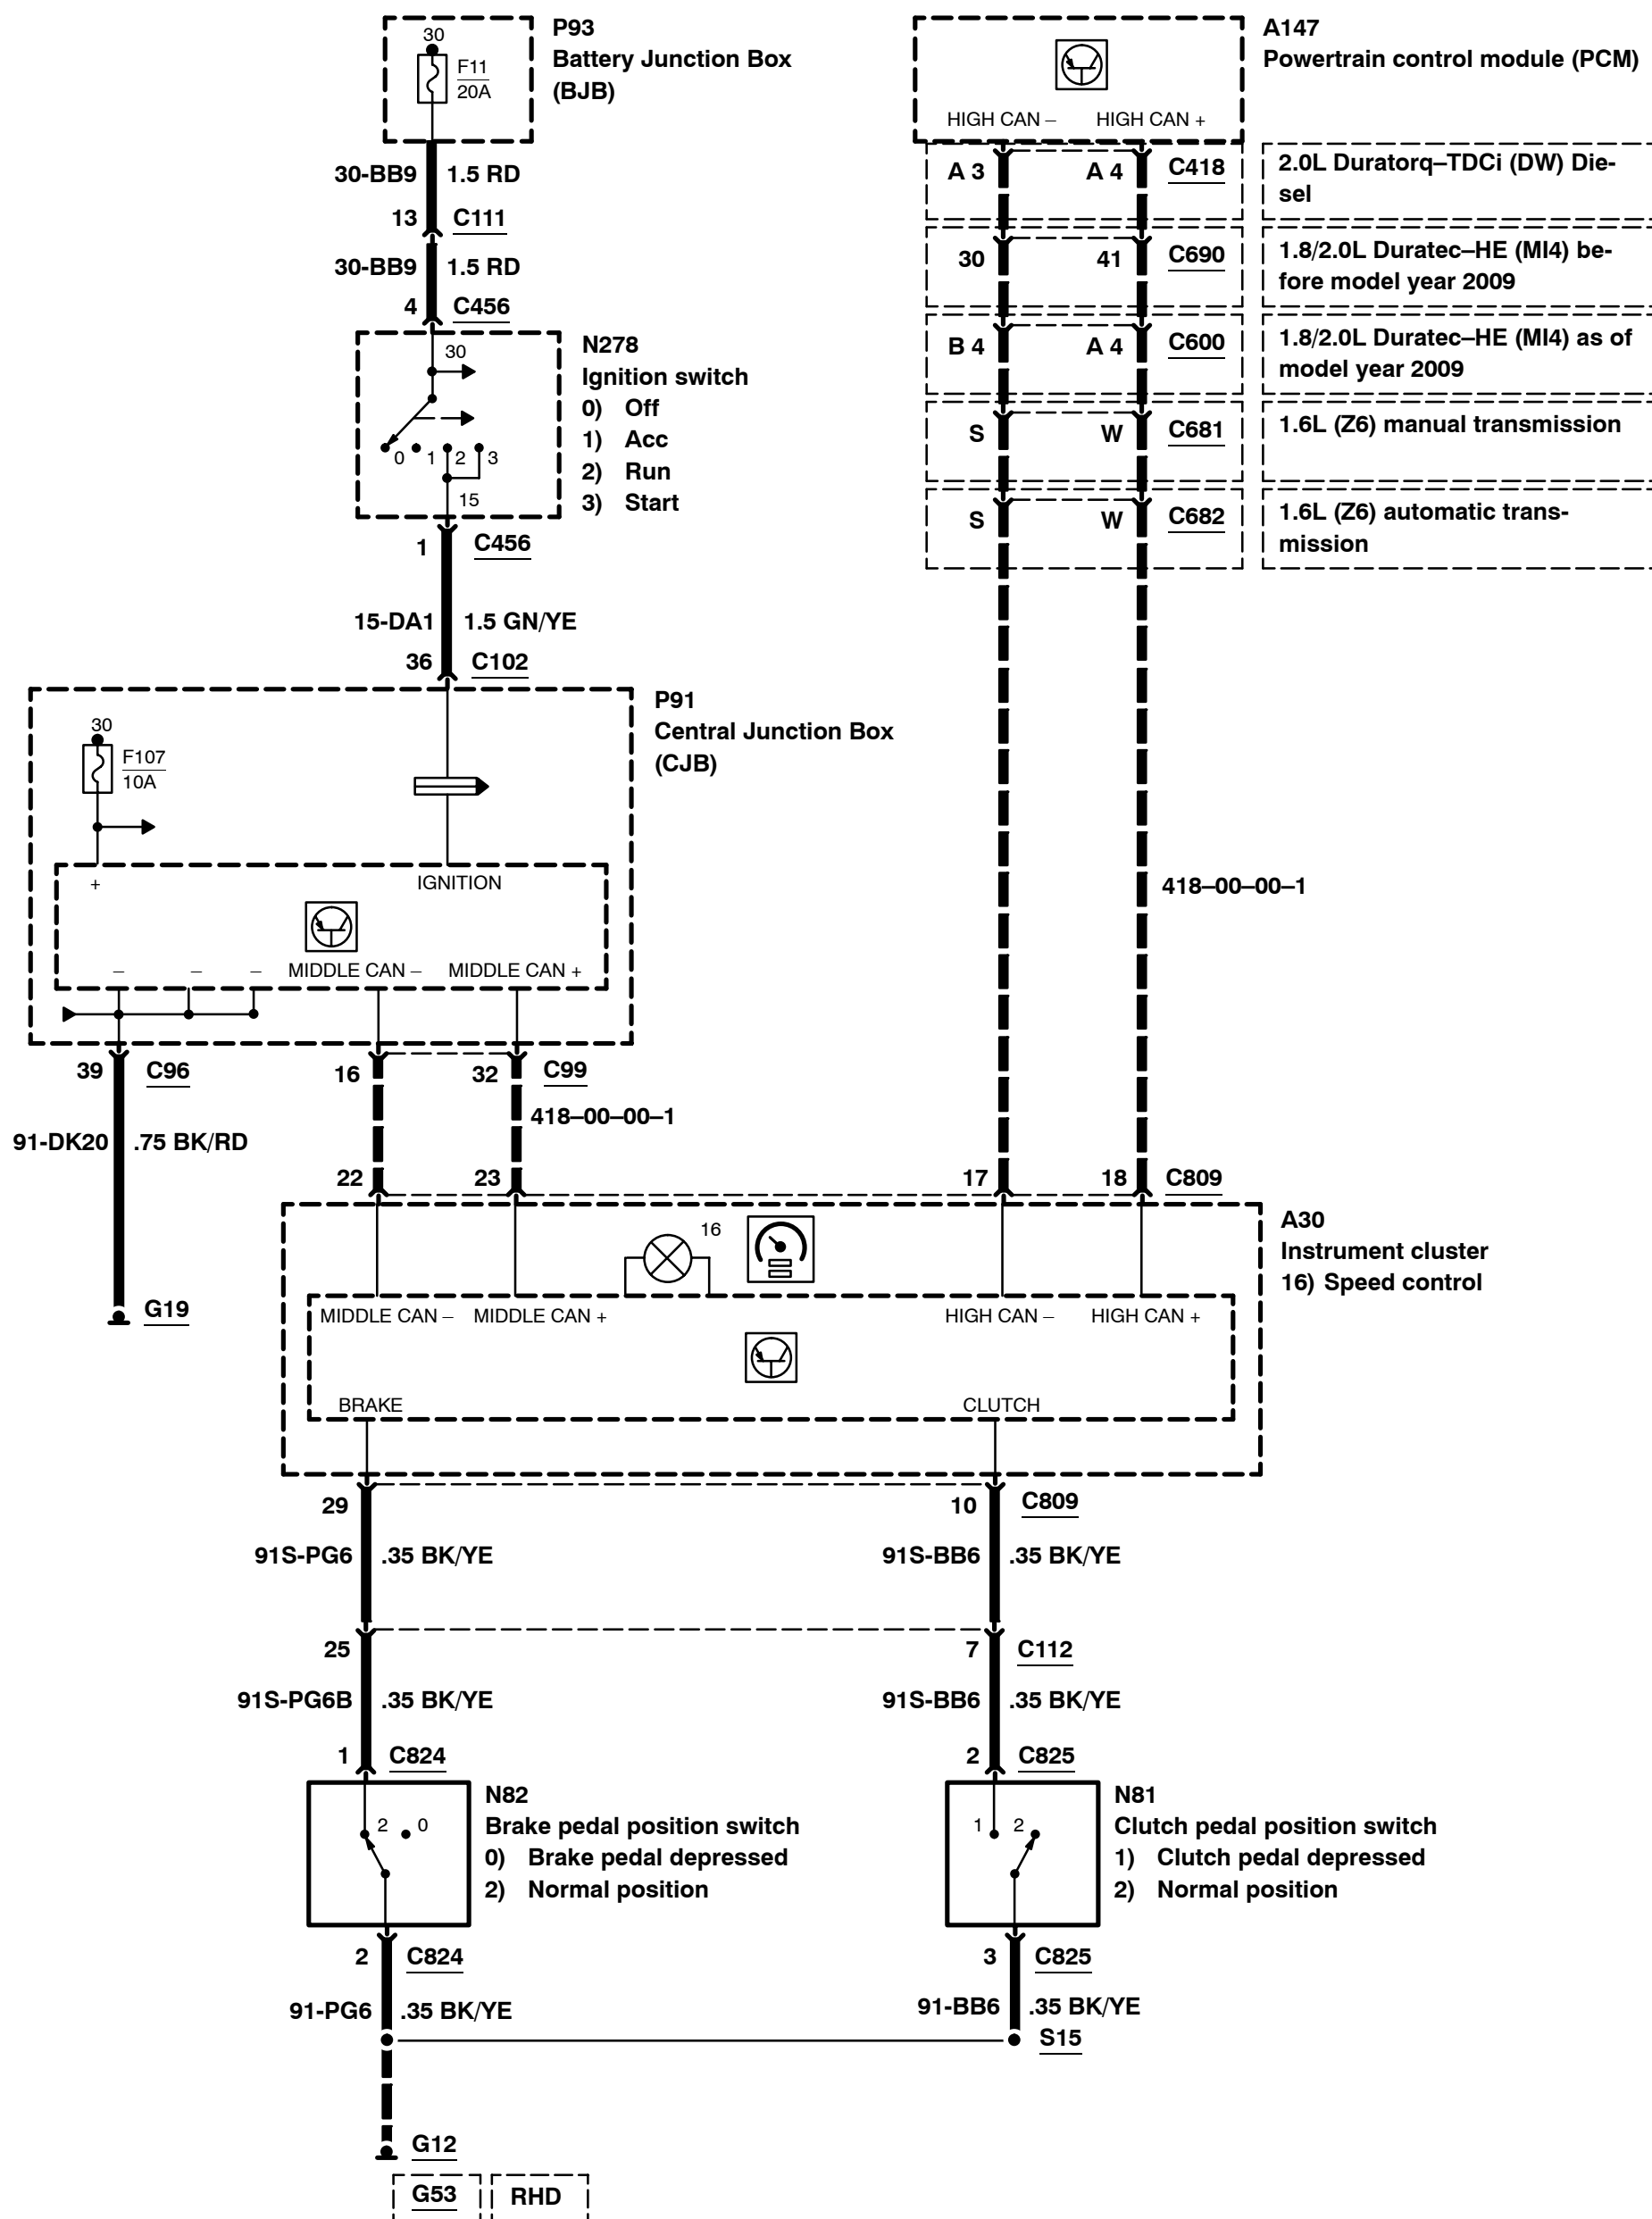

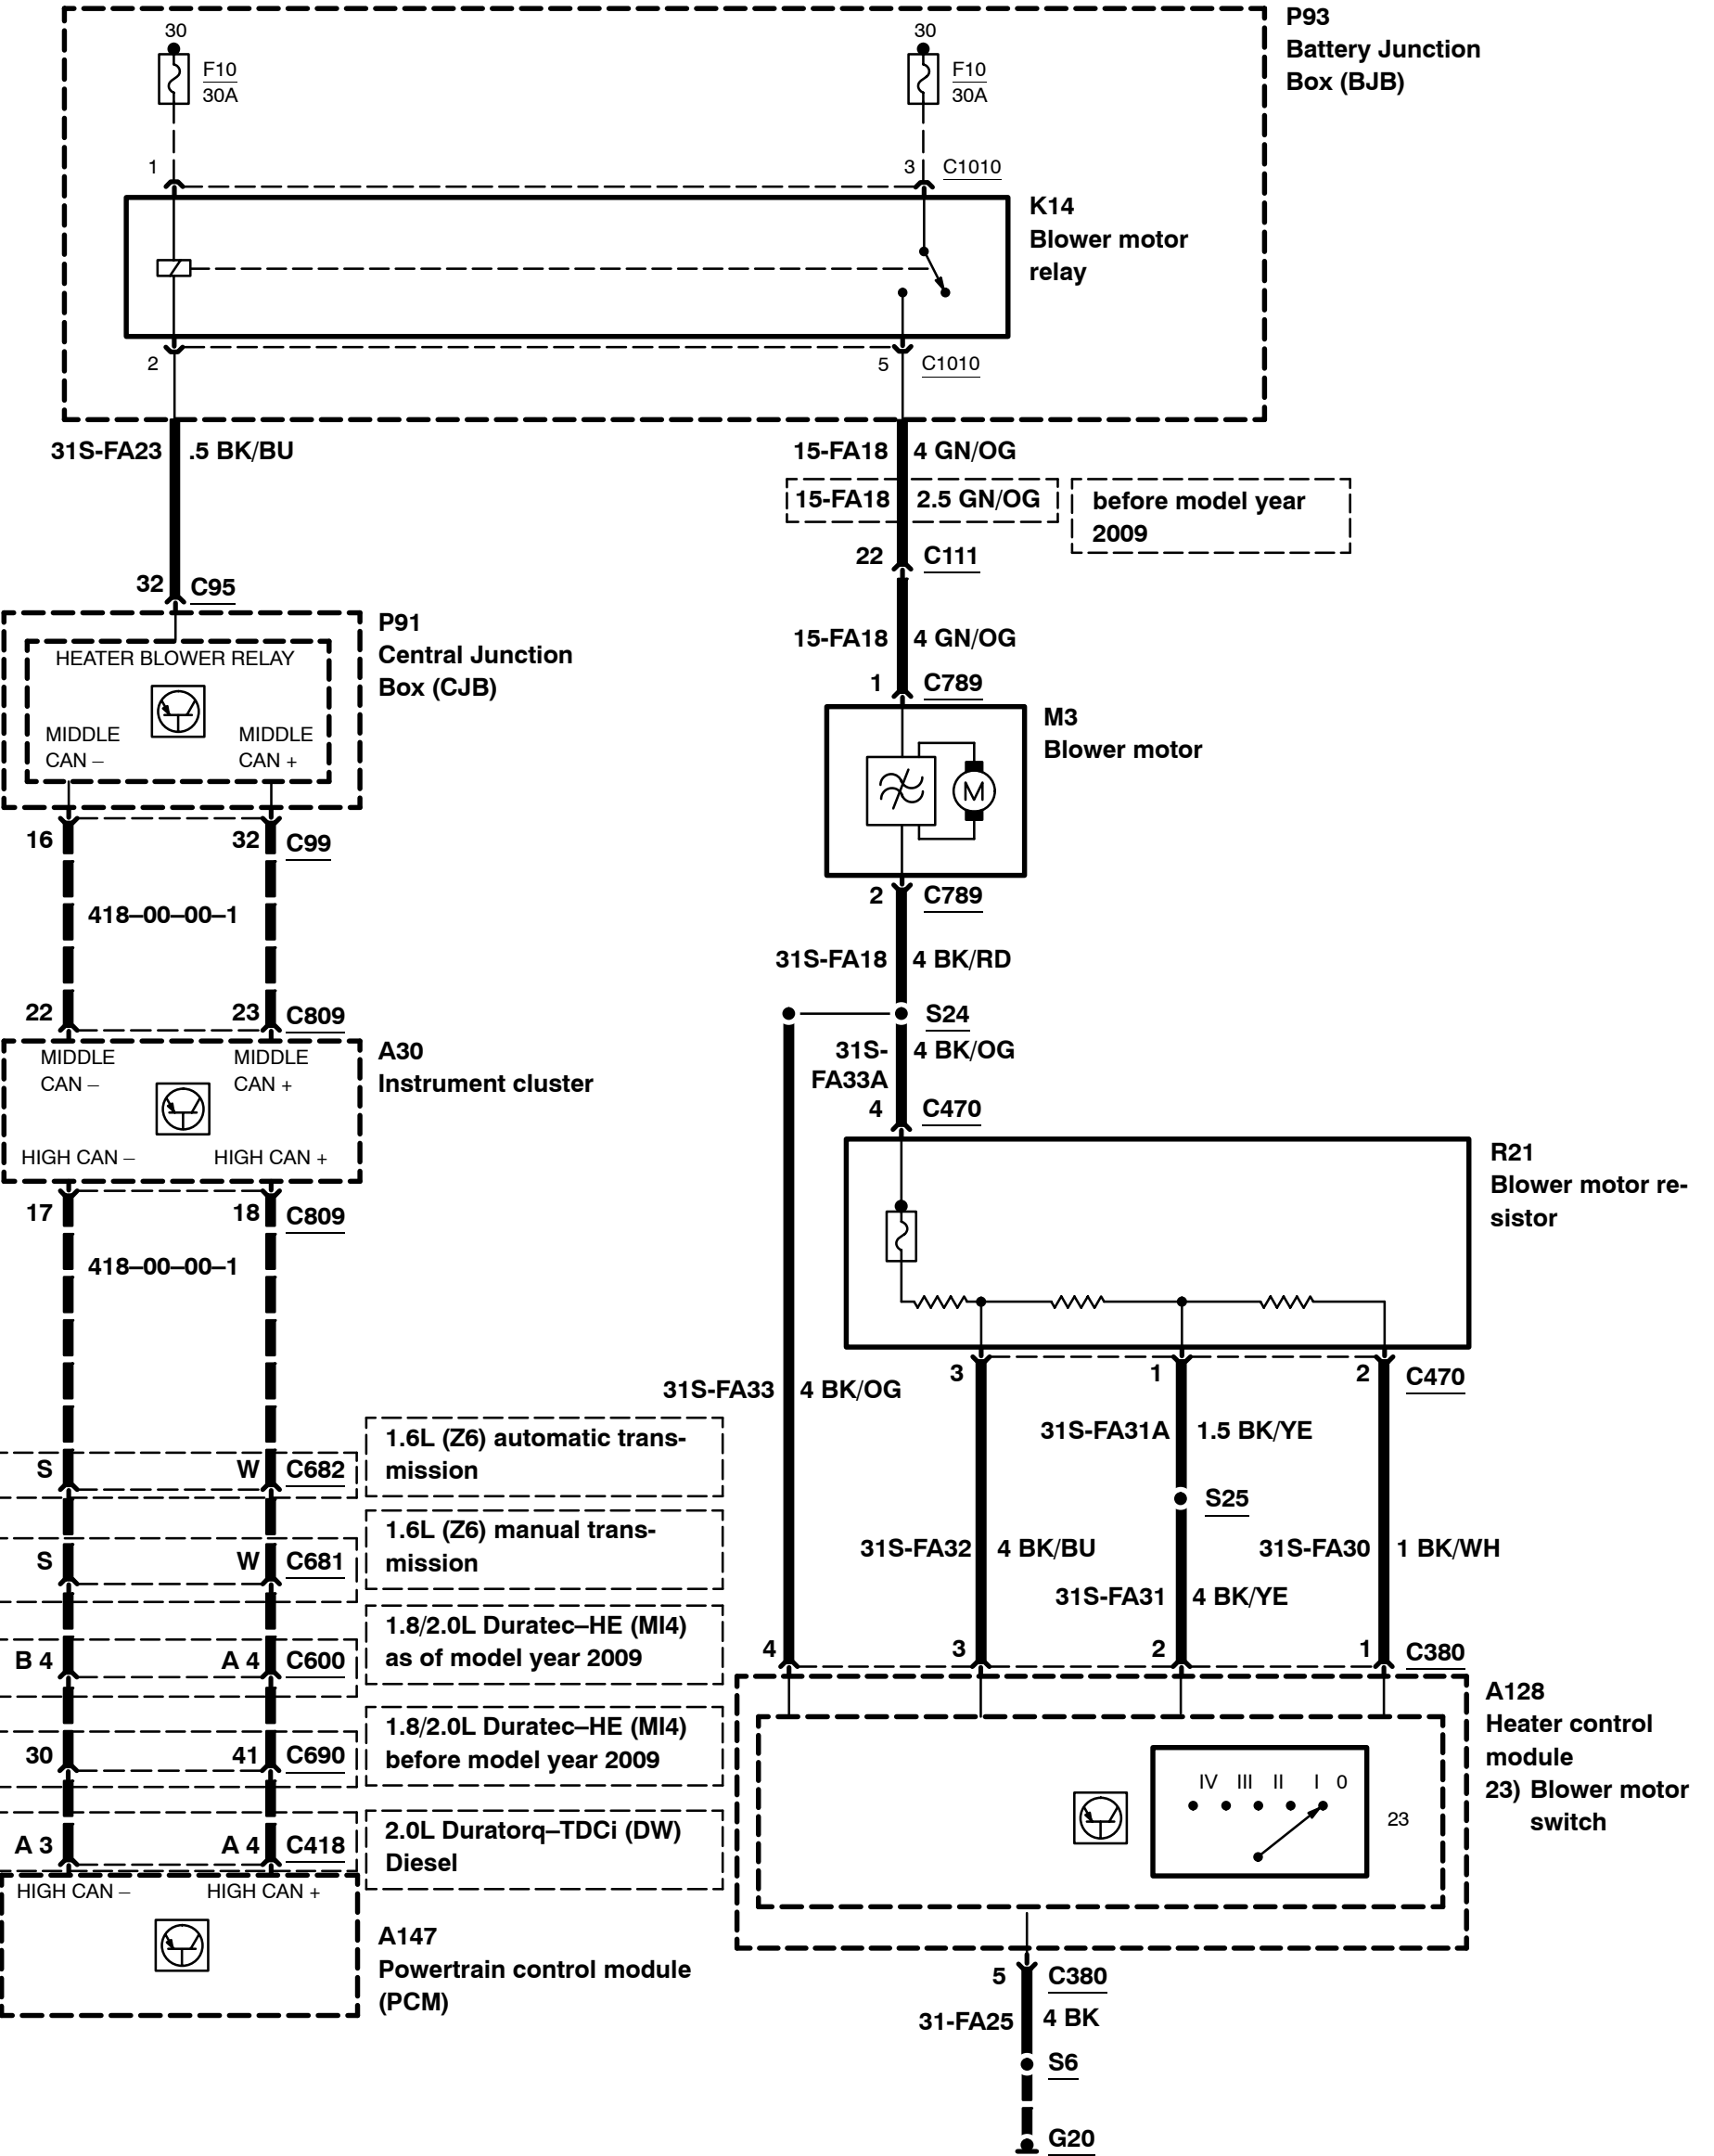


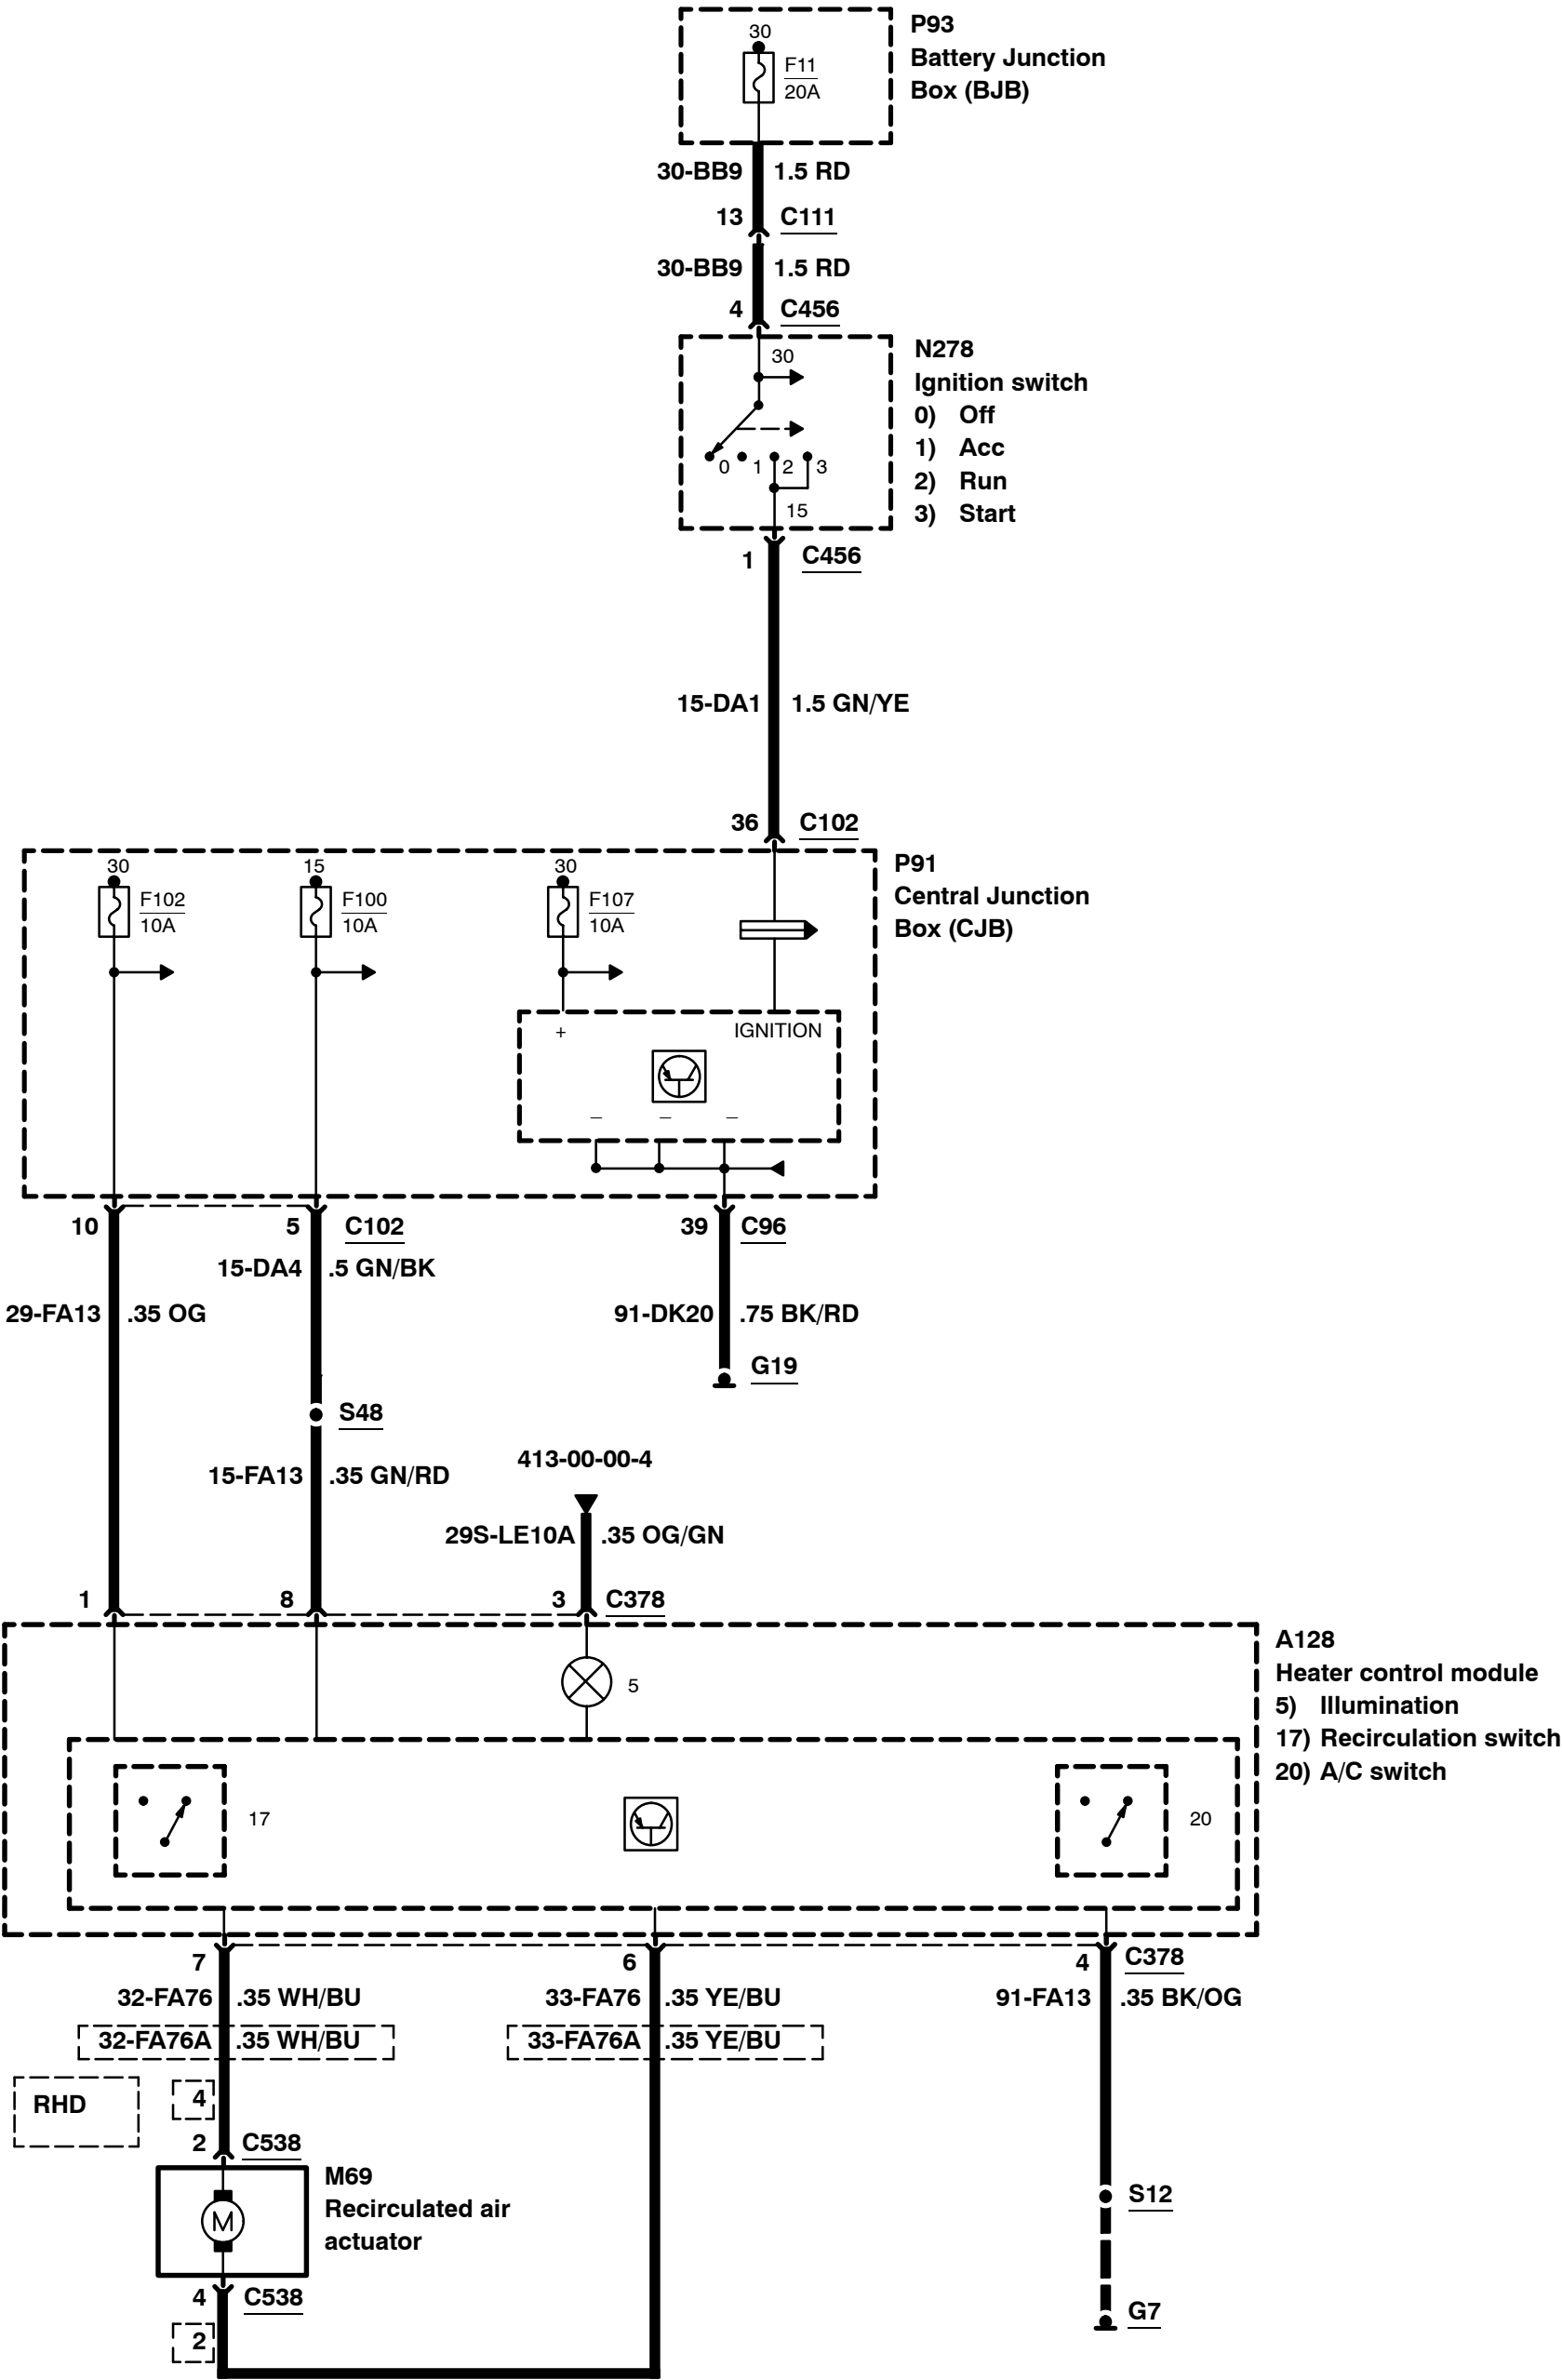


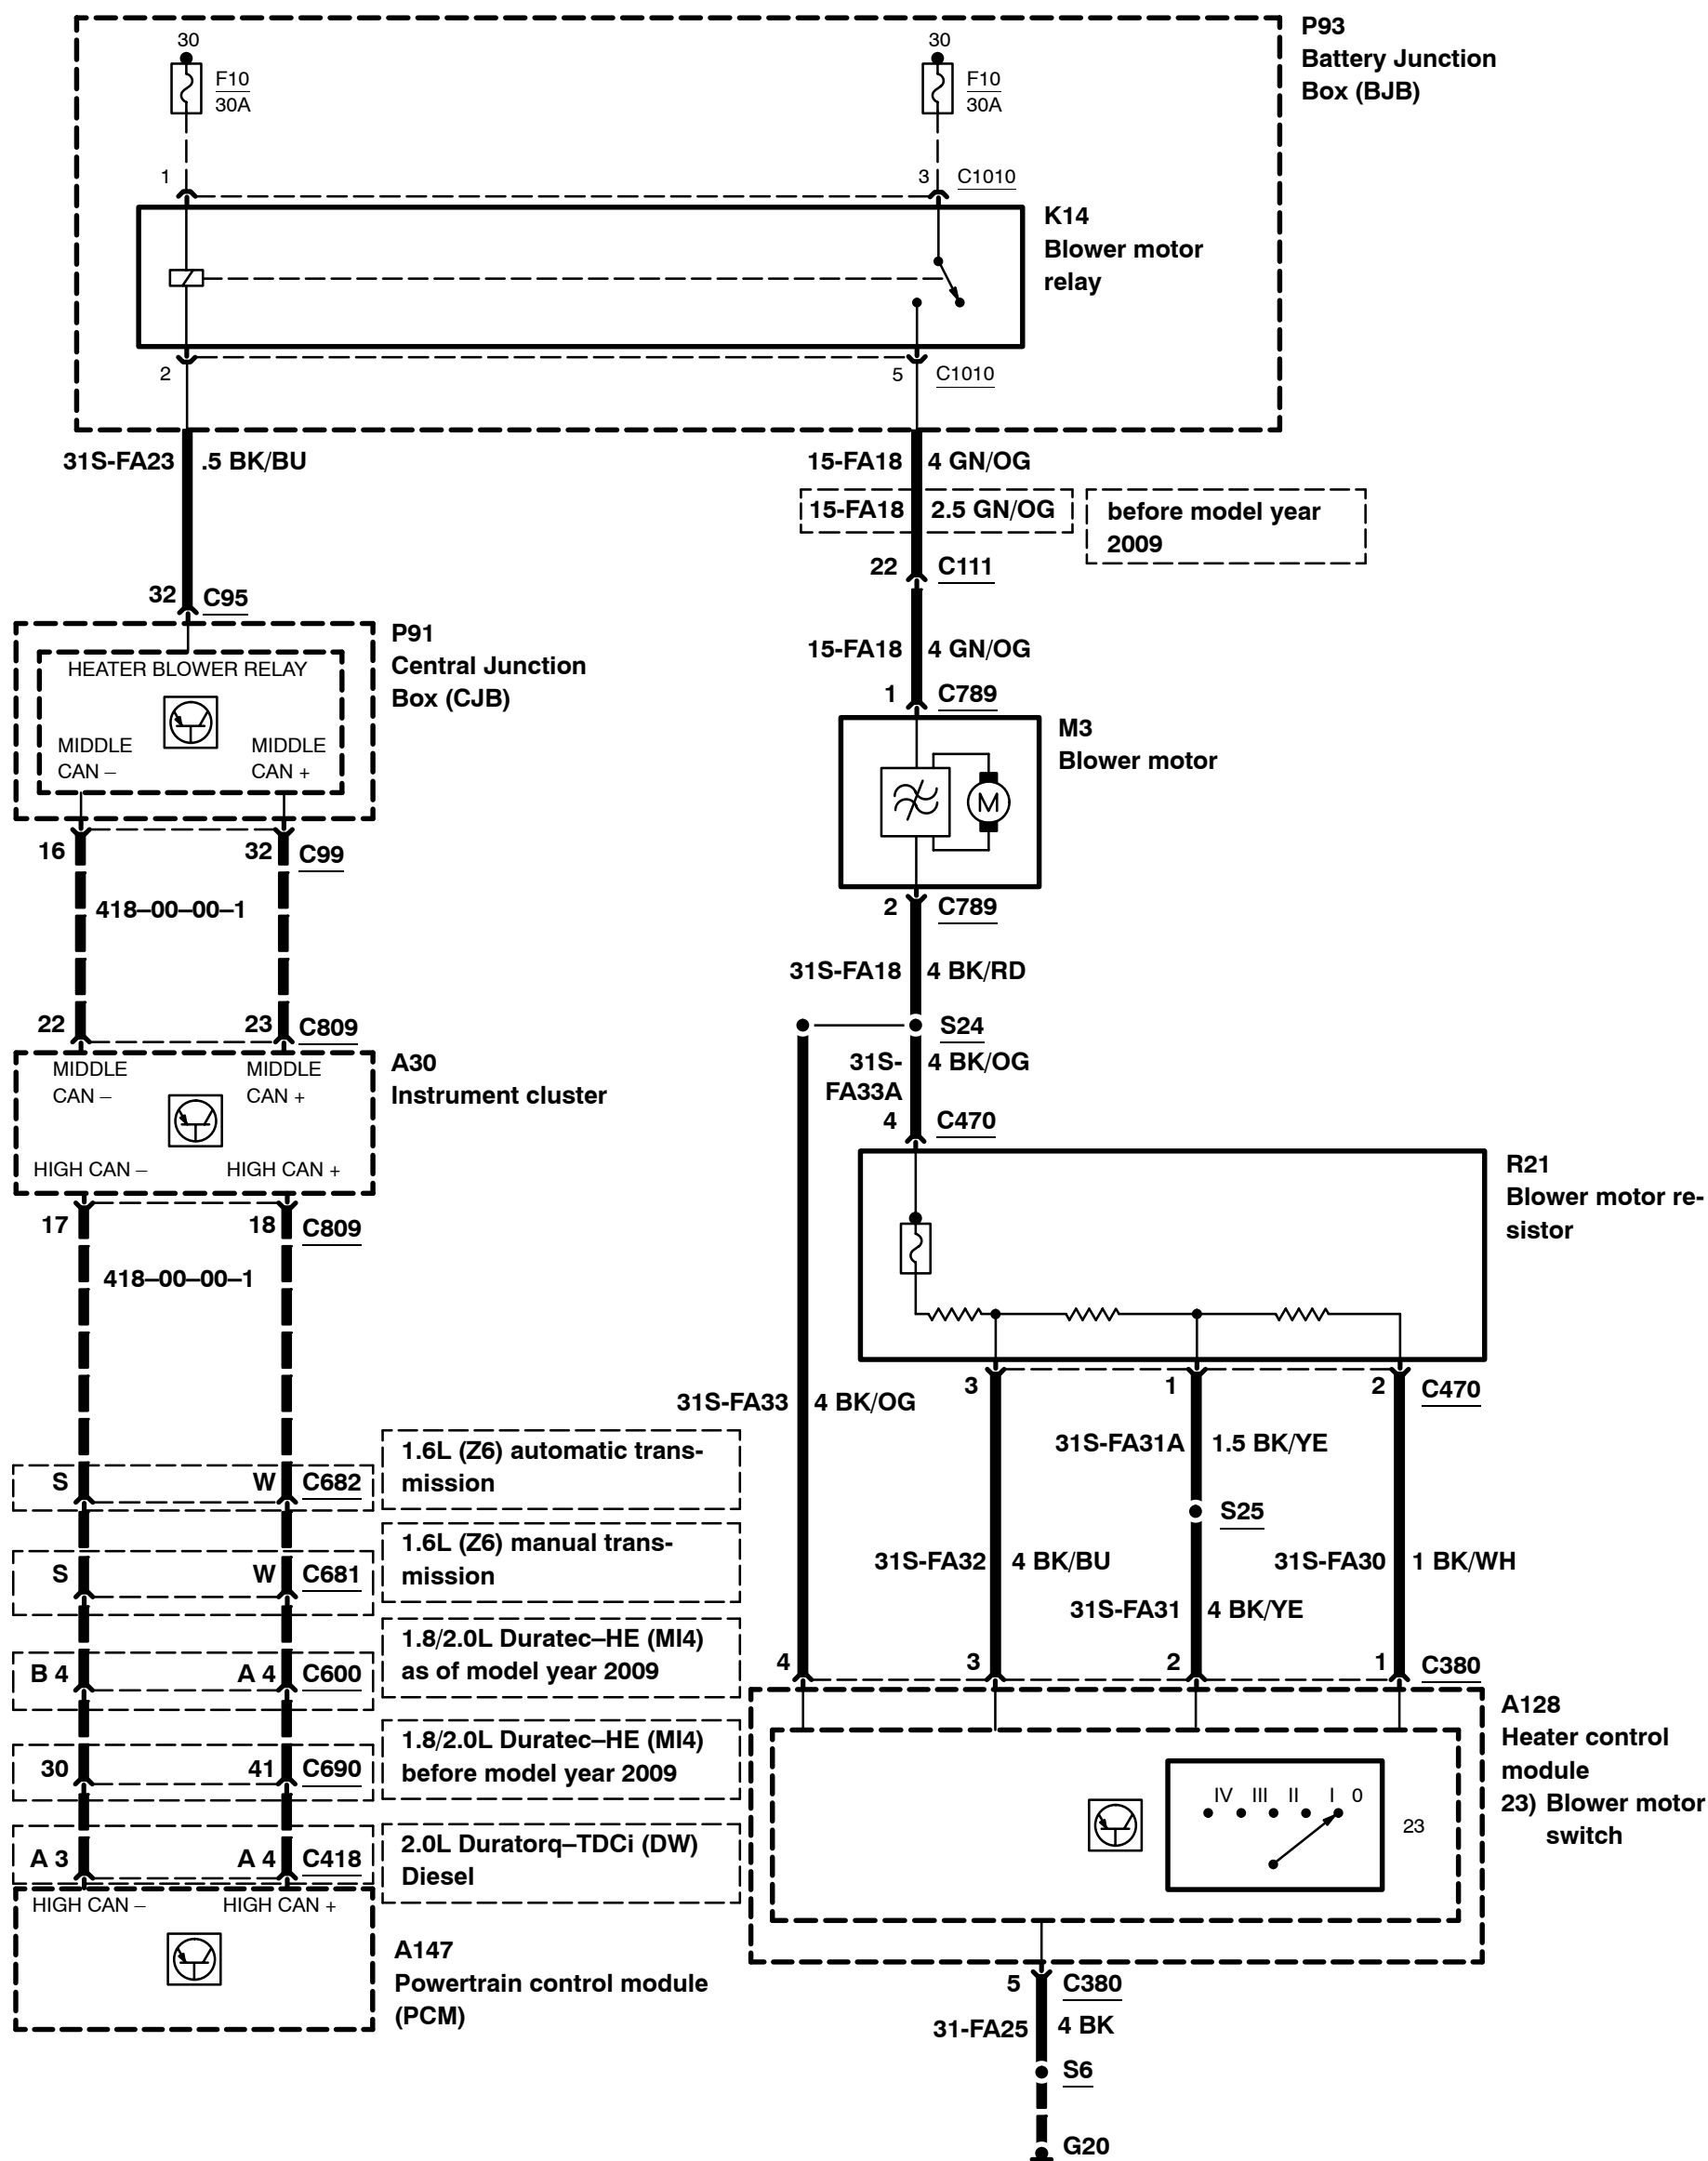

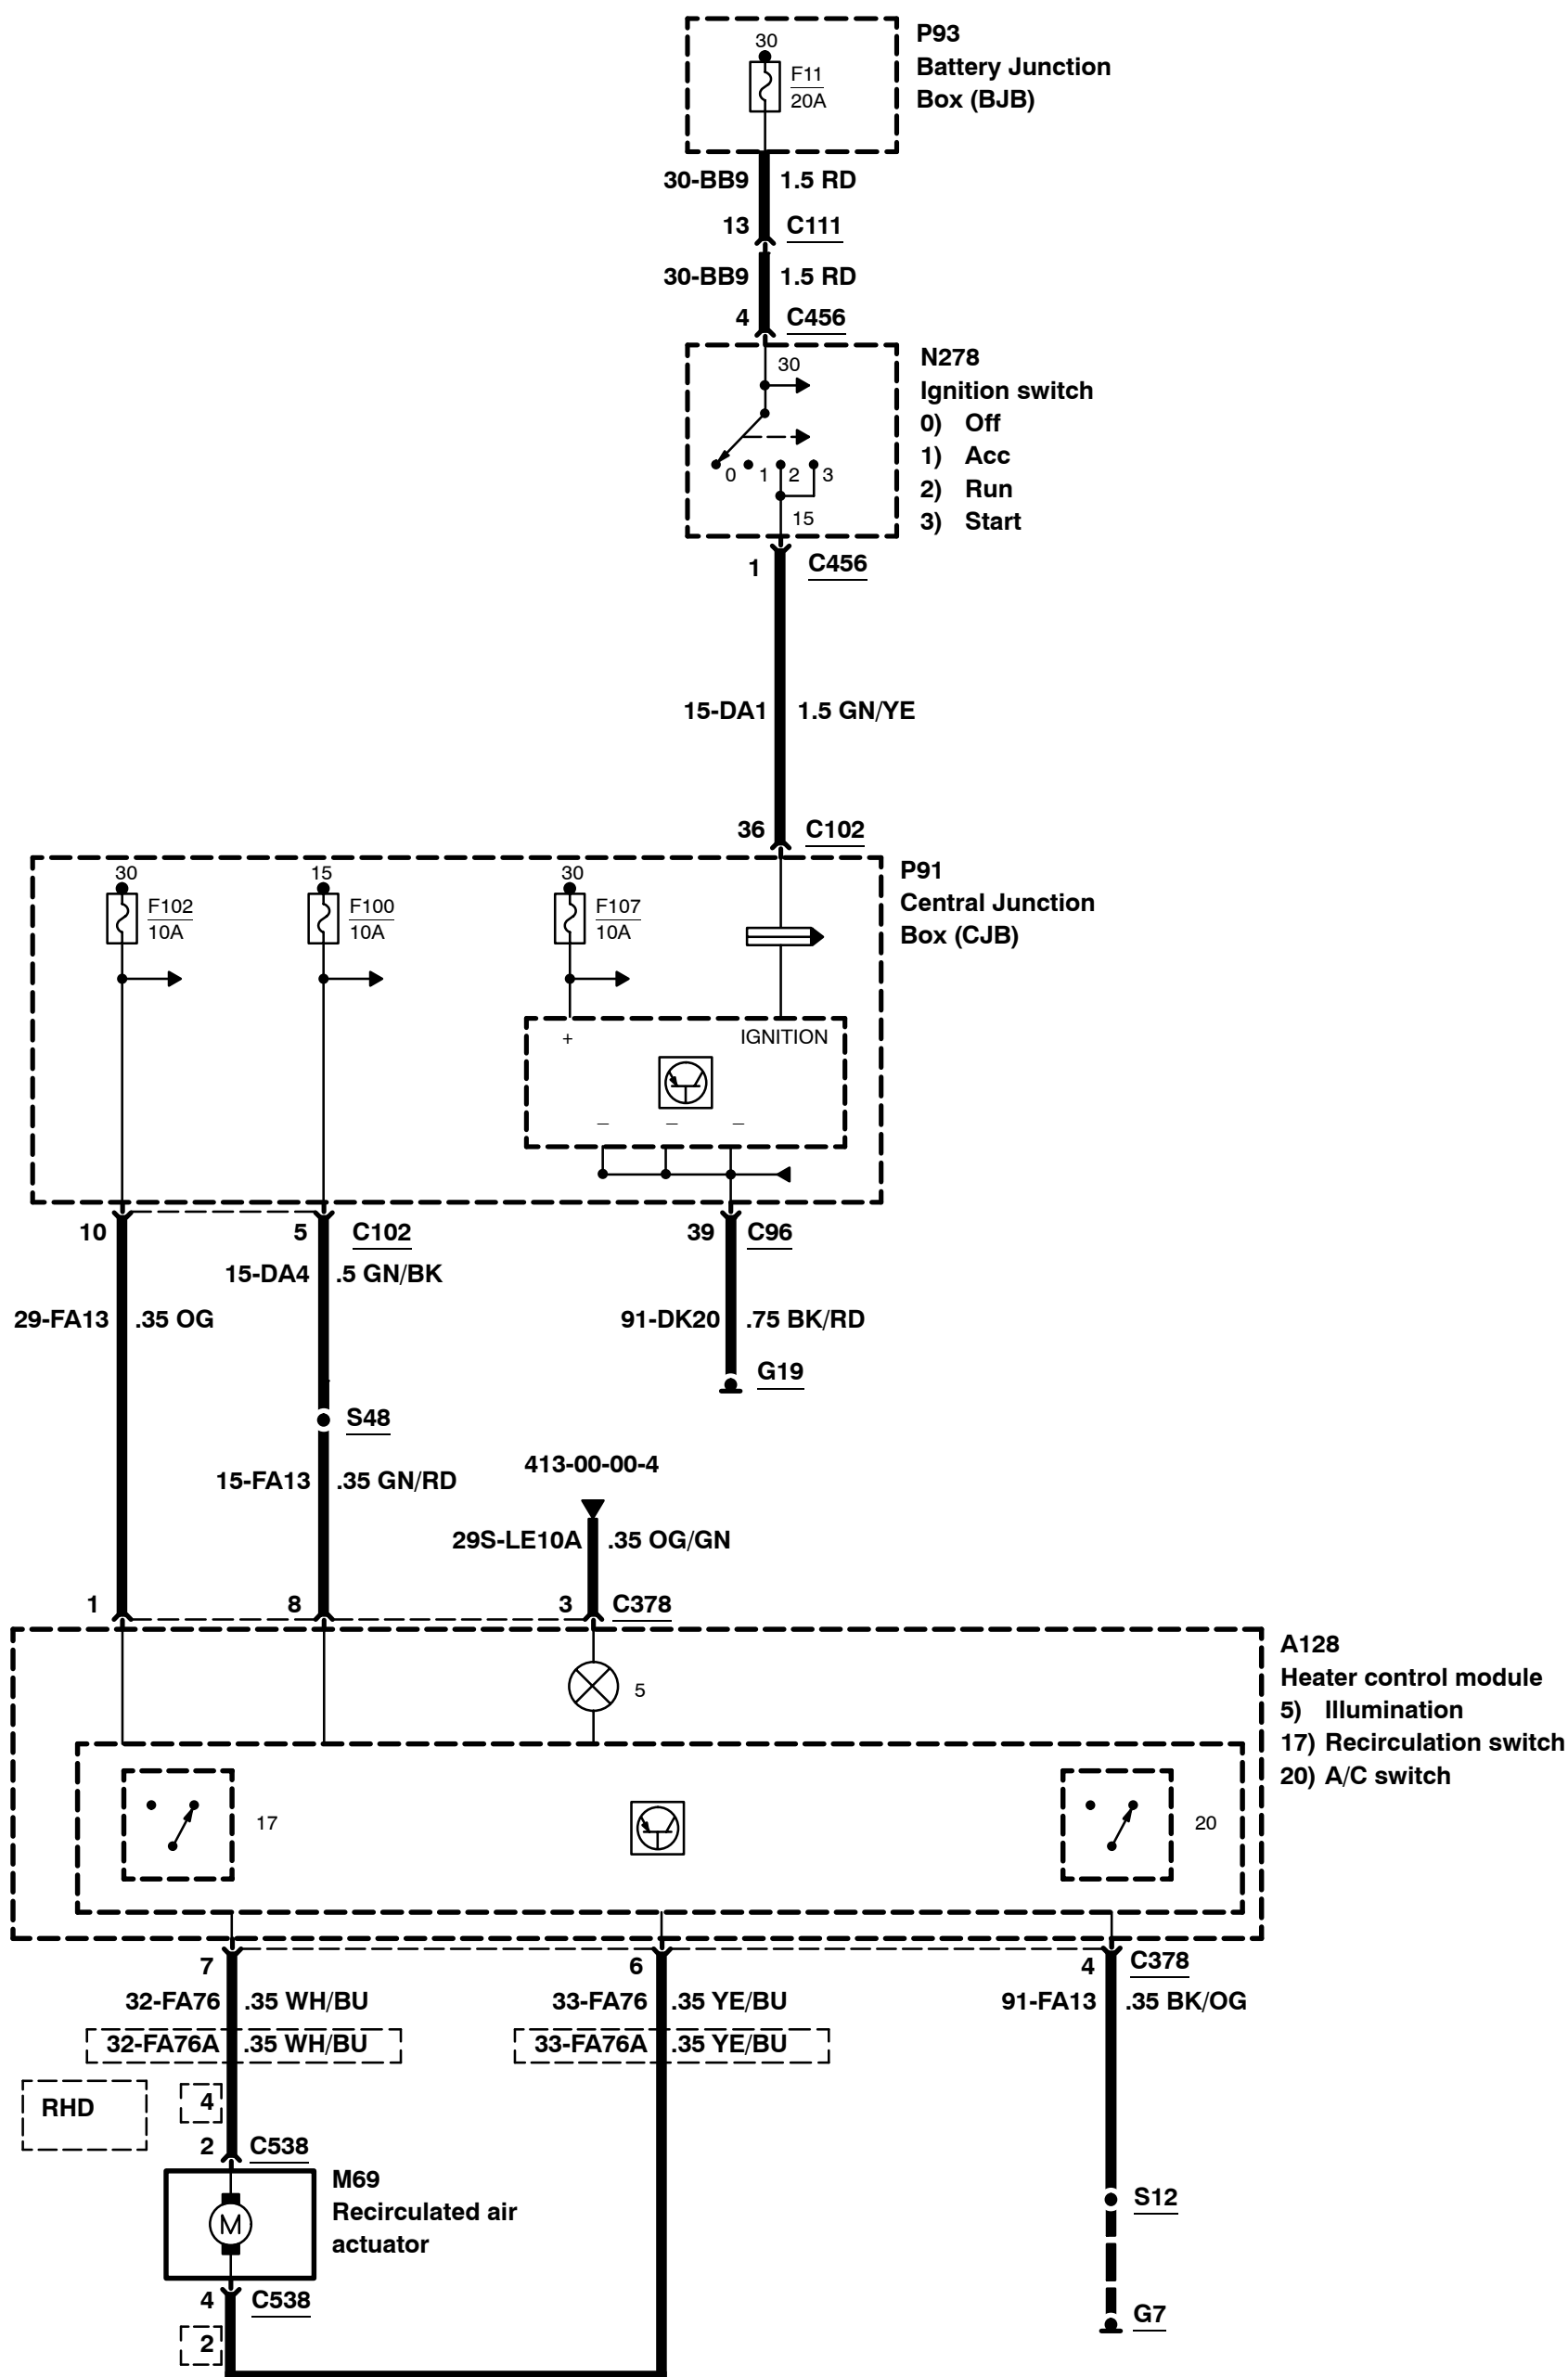




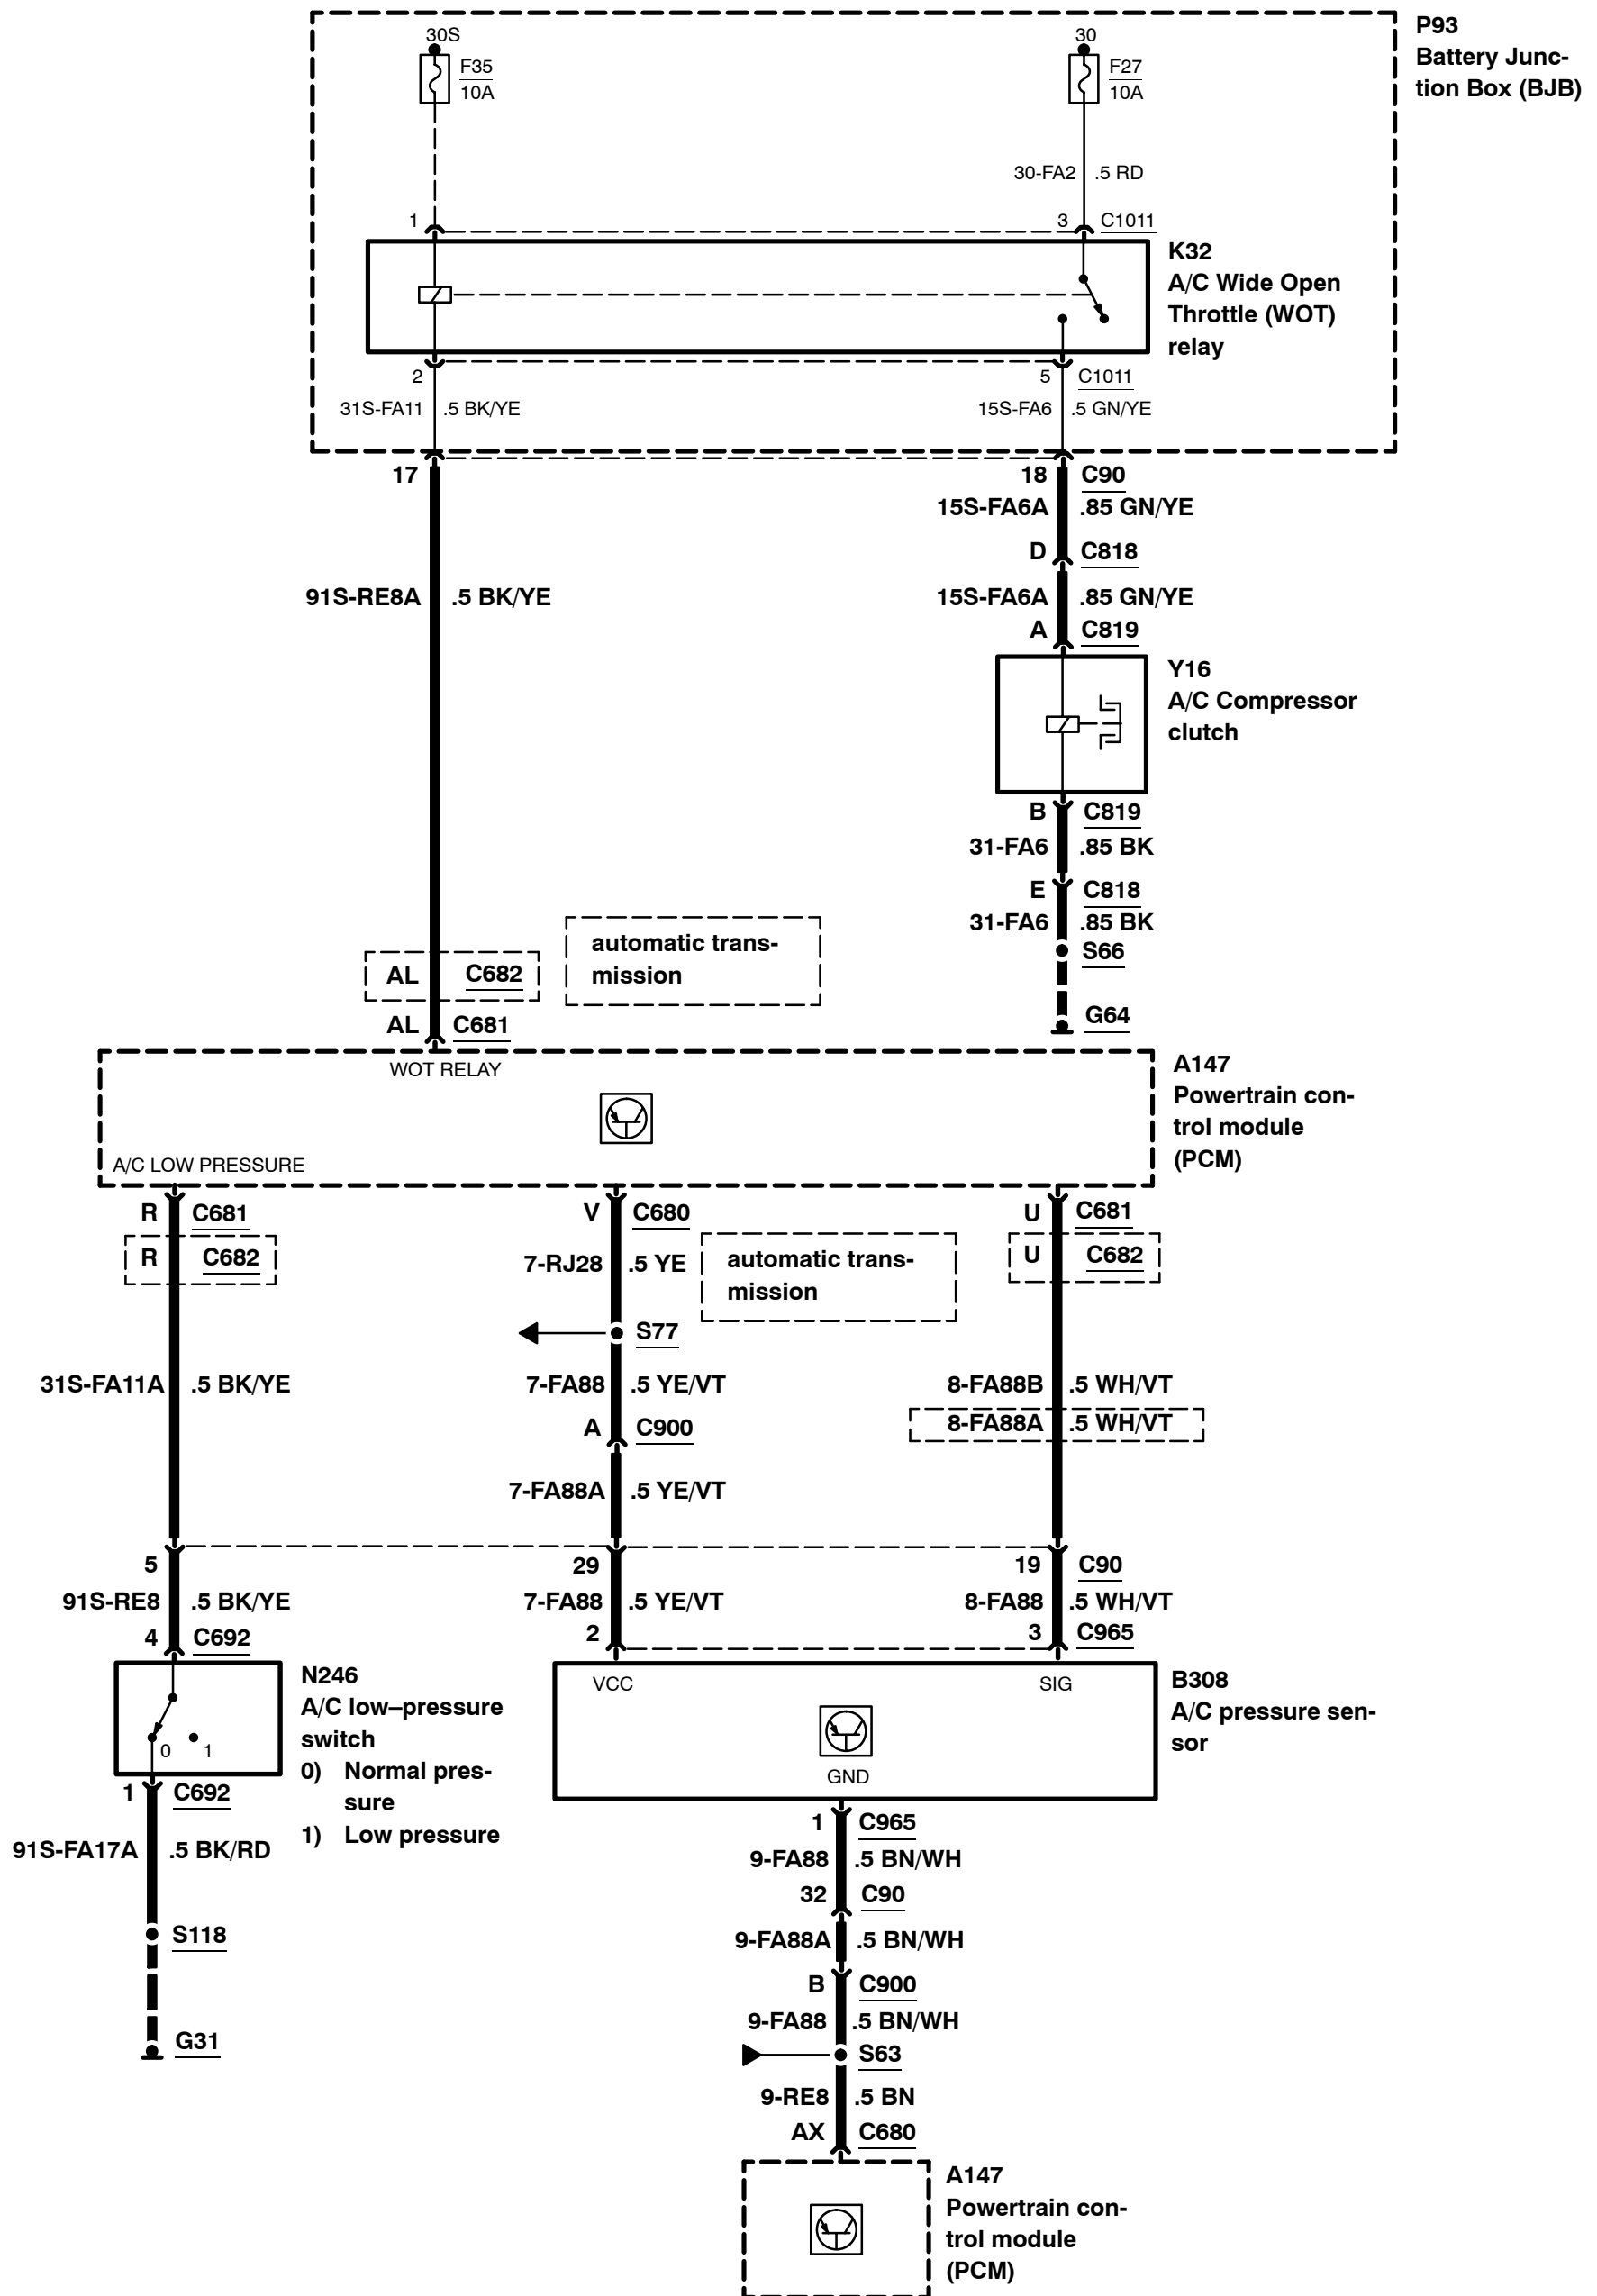

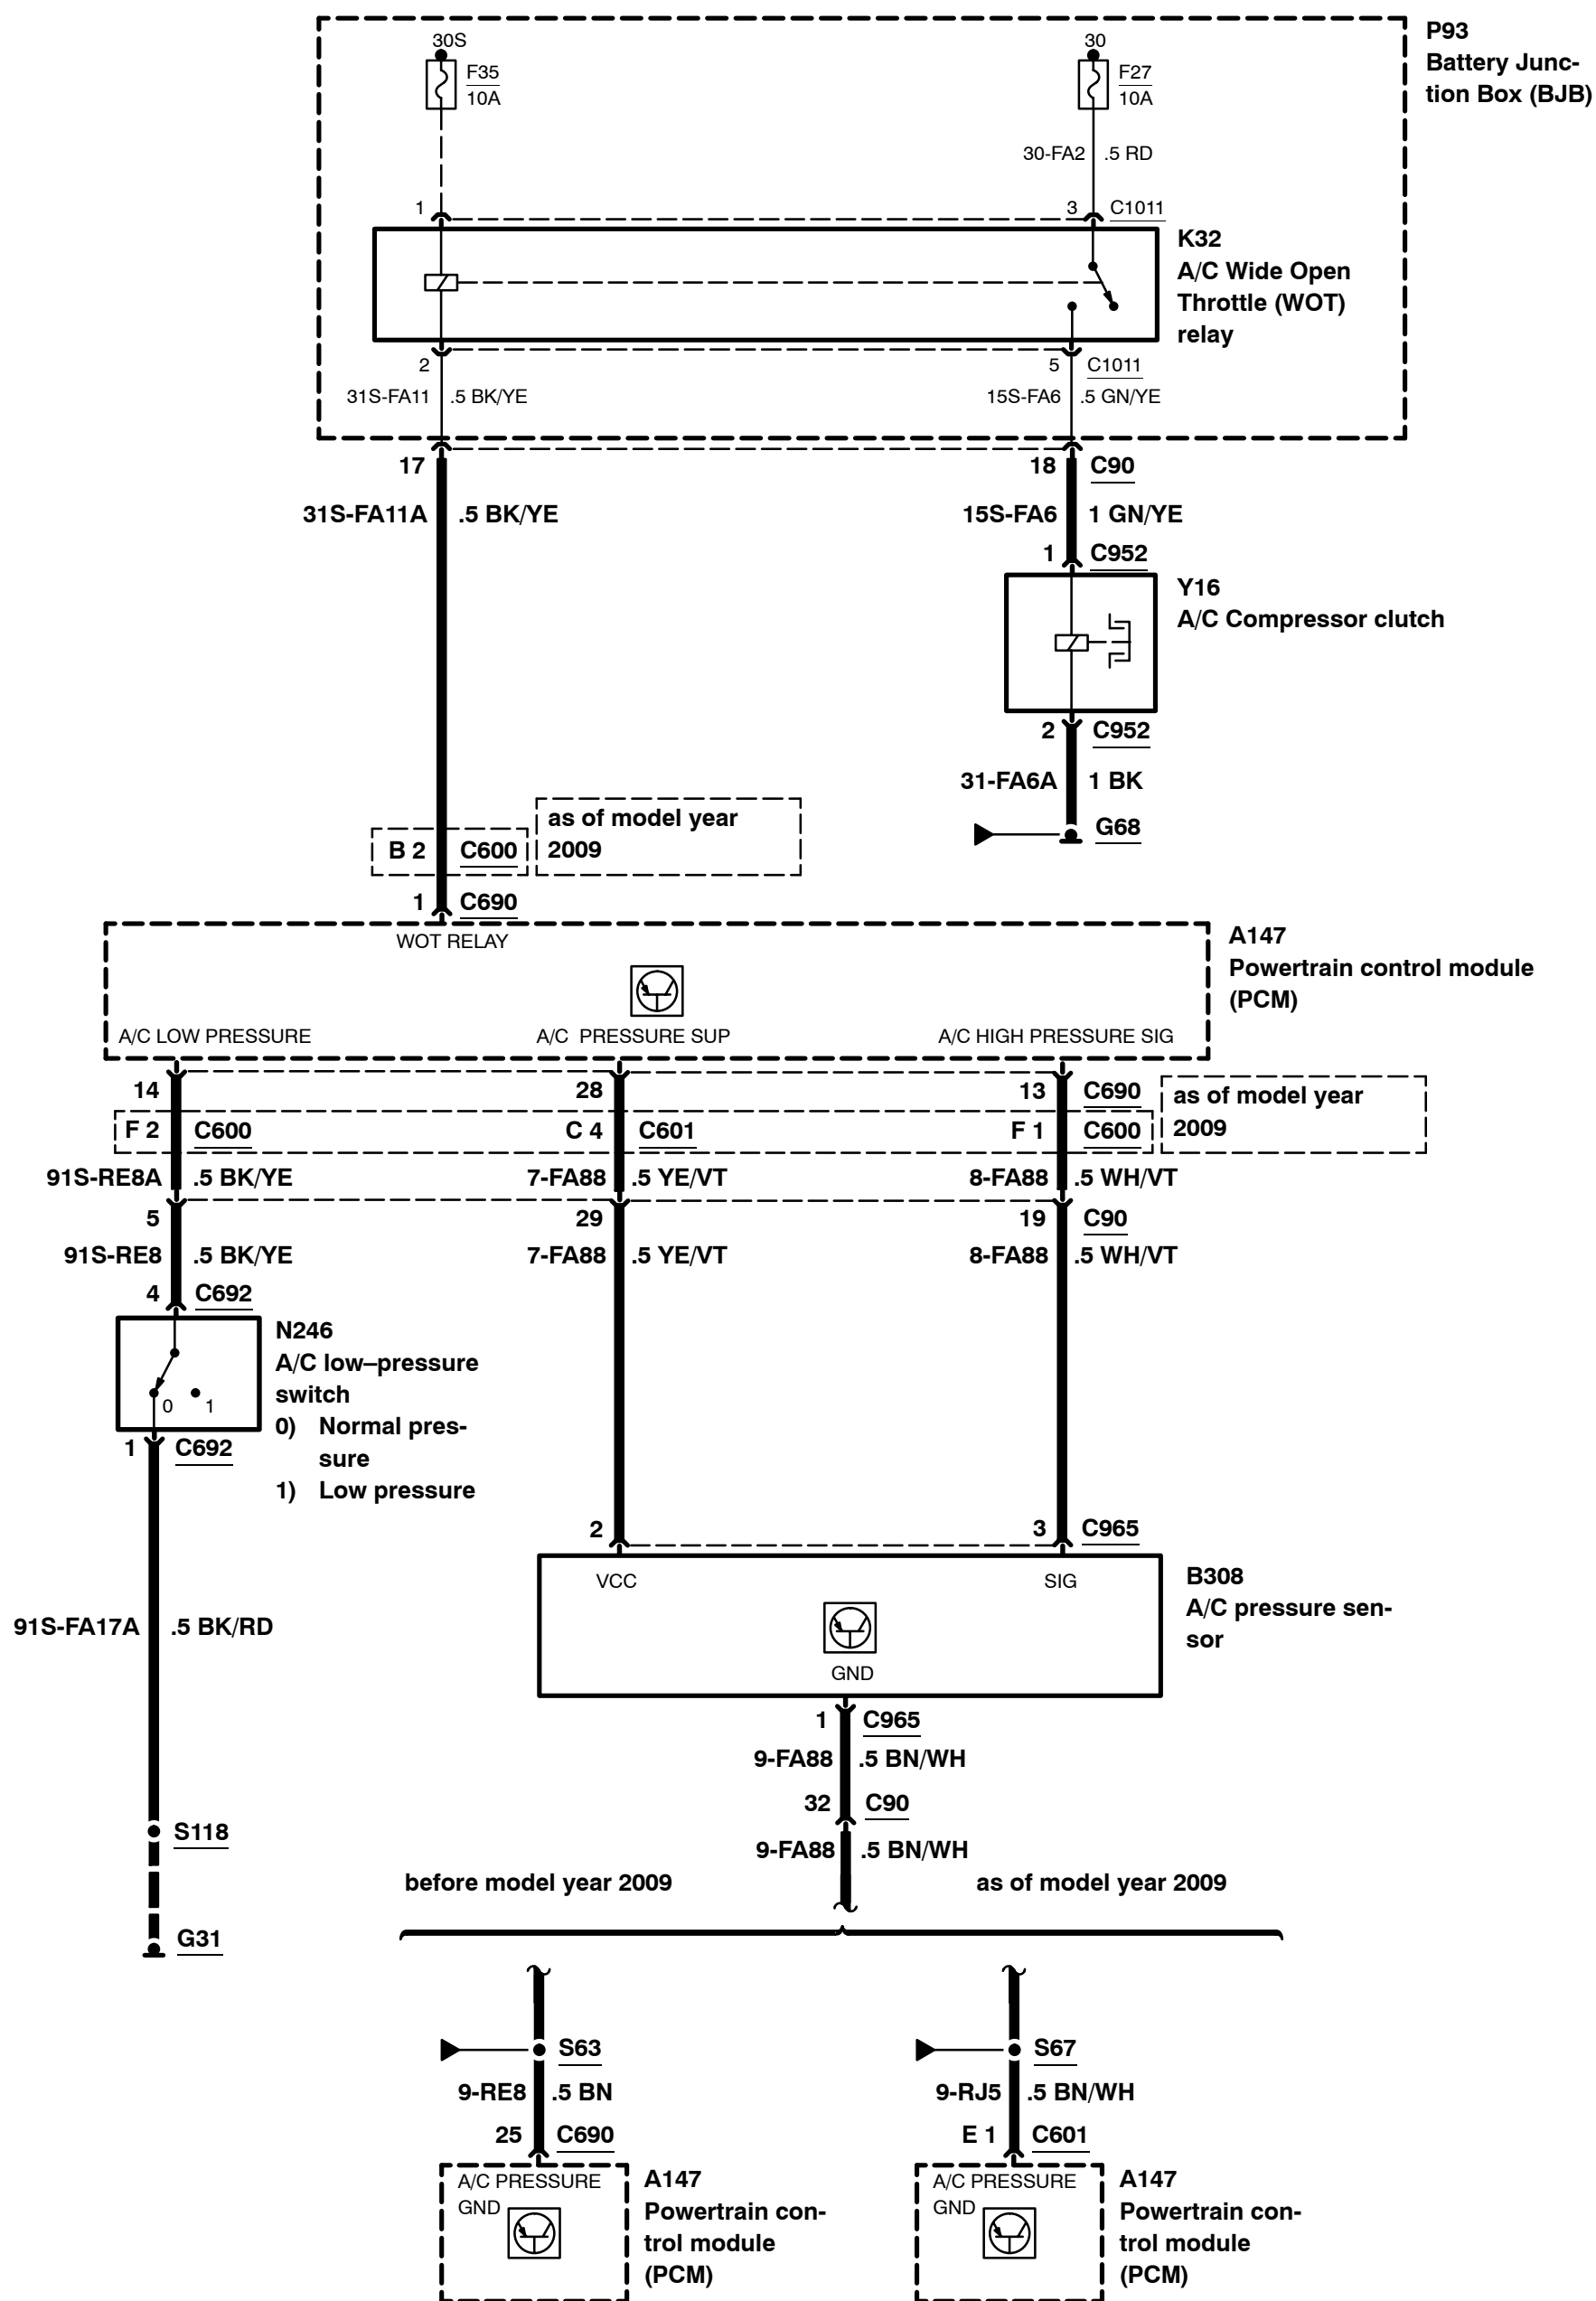





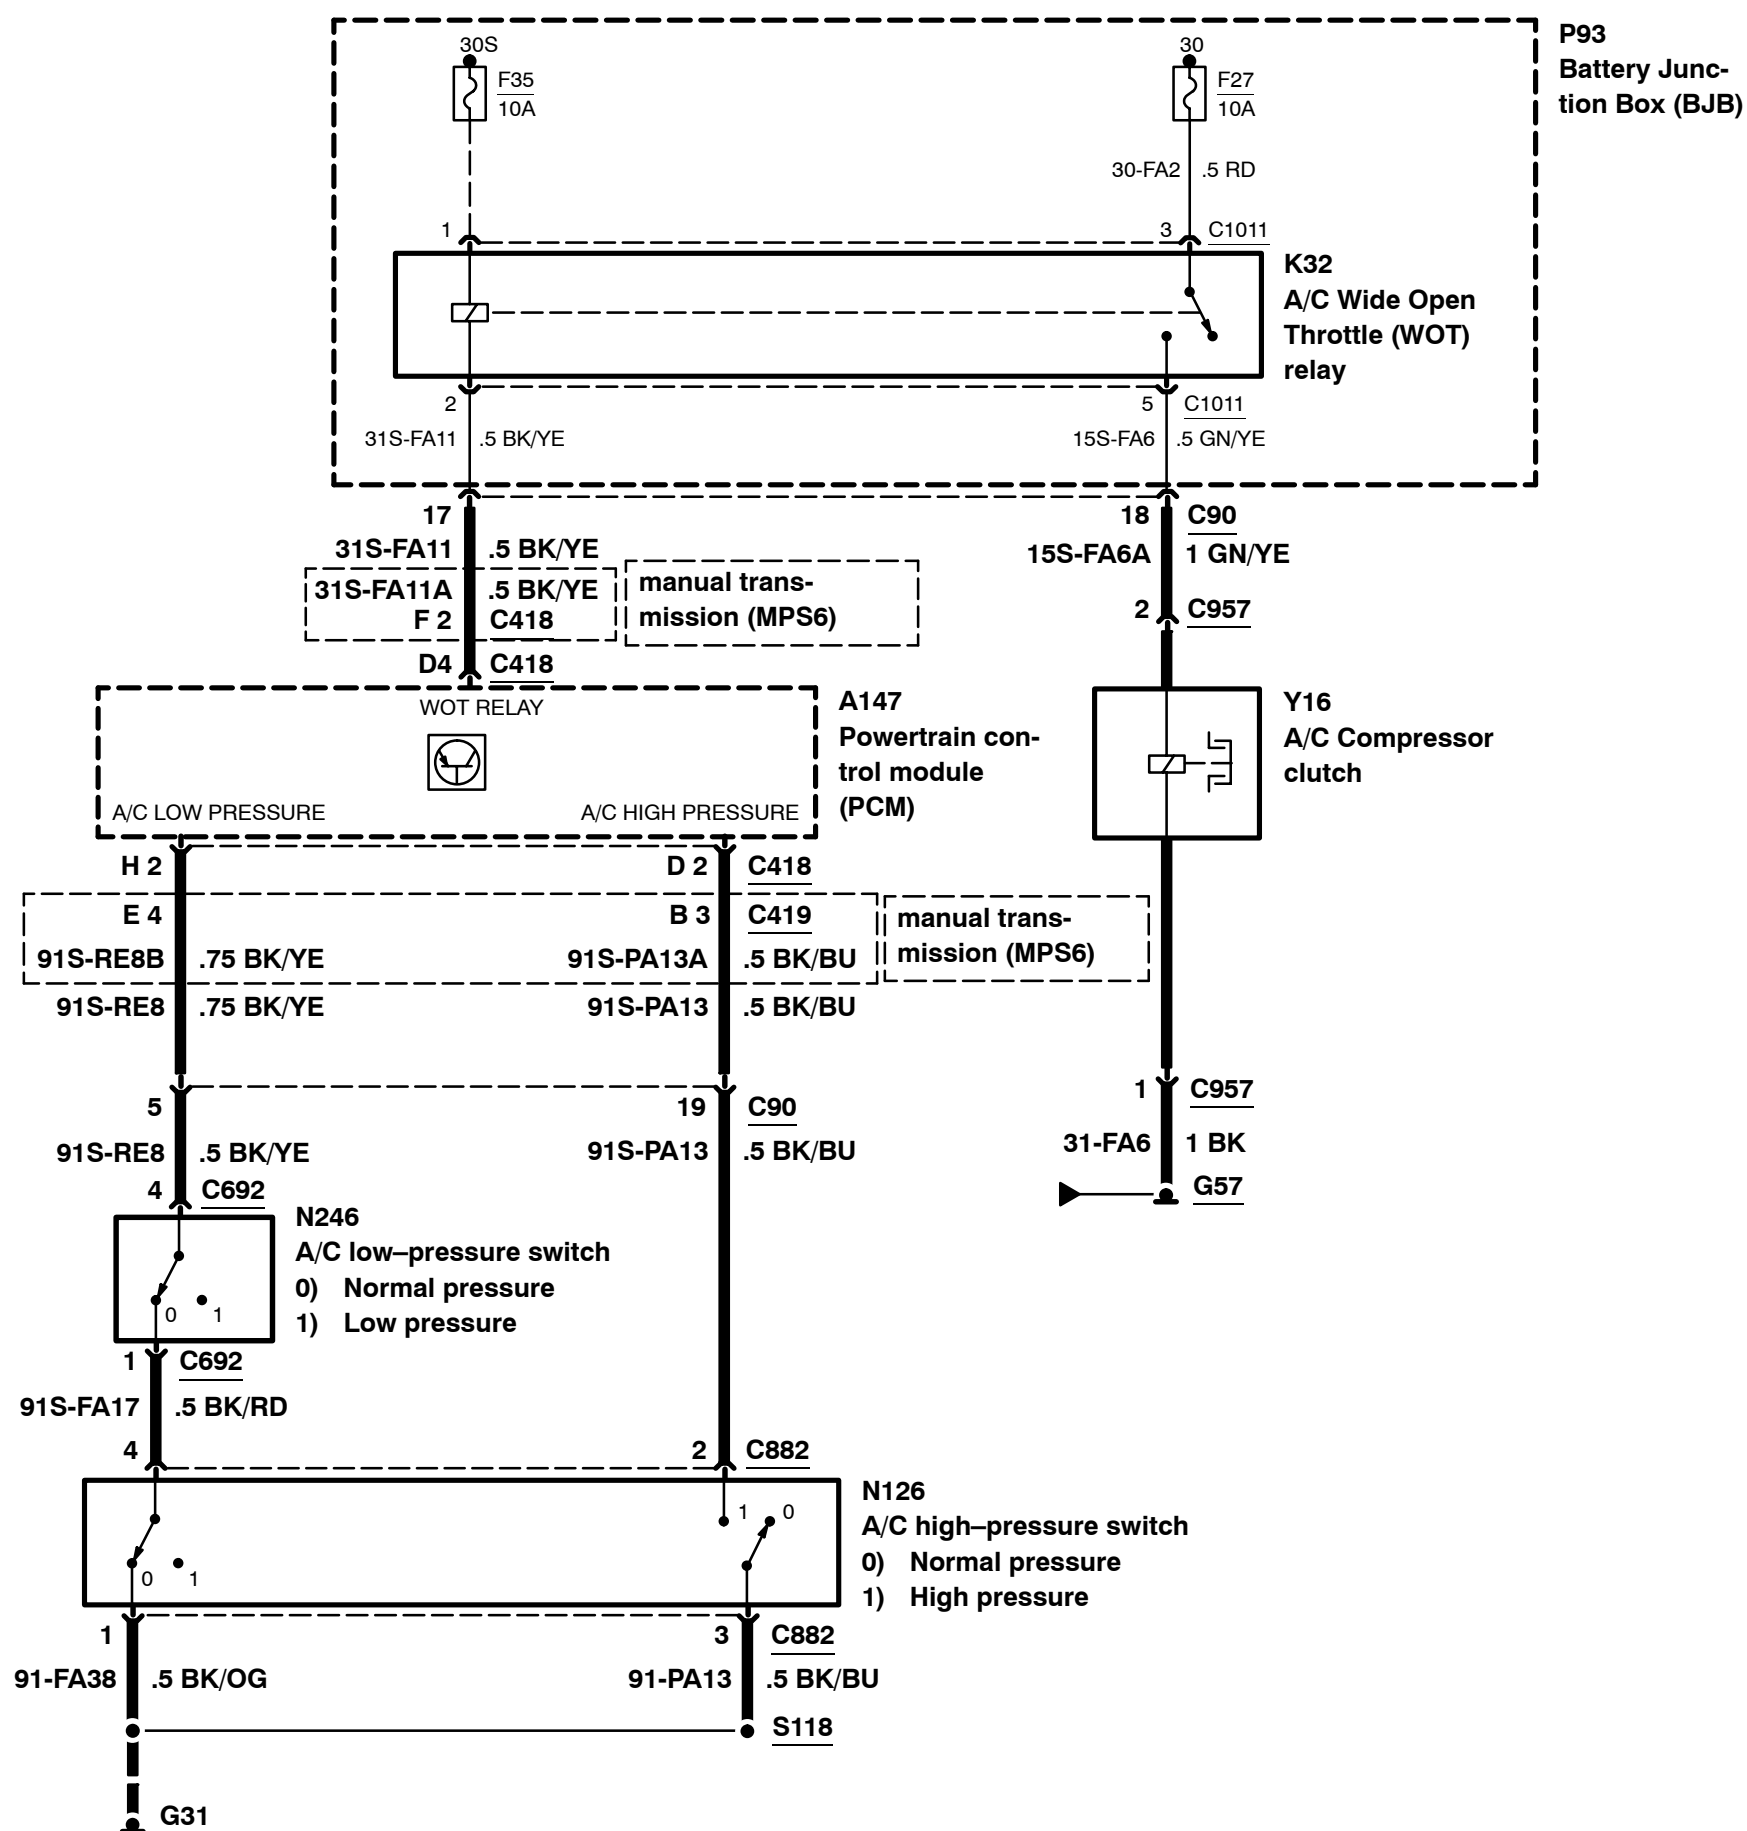



# Air Conditioning – with EATC

02/2008  
412-03-00-6  
2008.25  
Focus

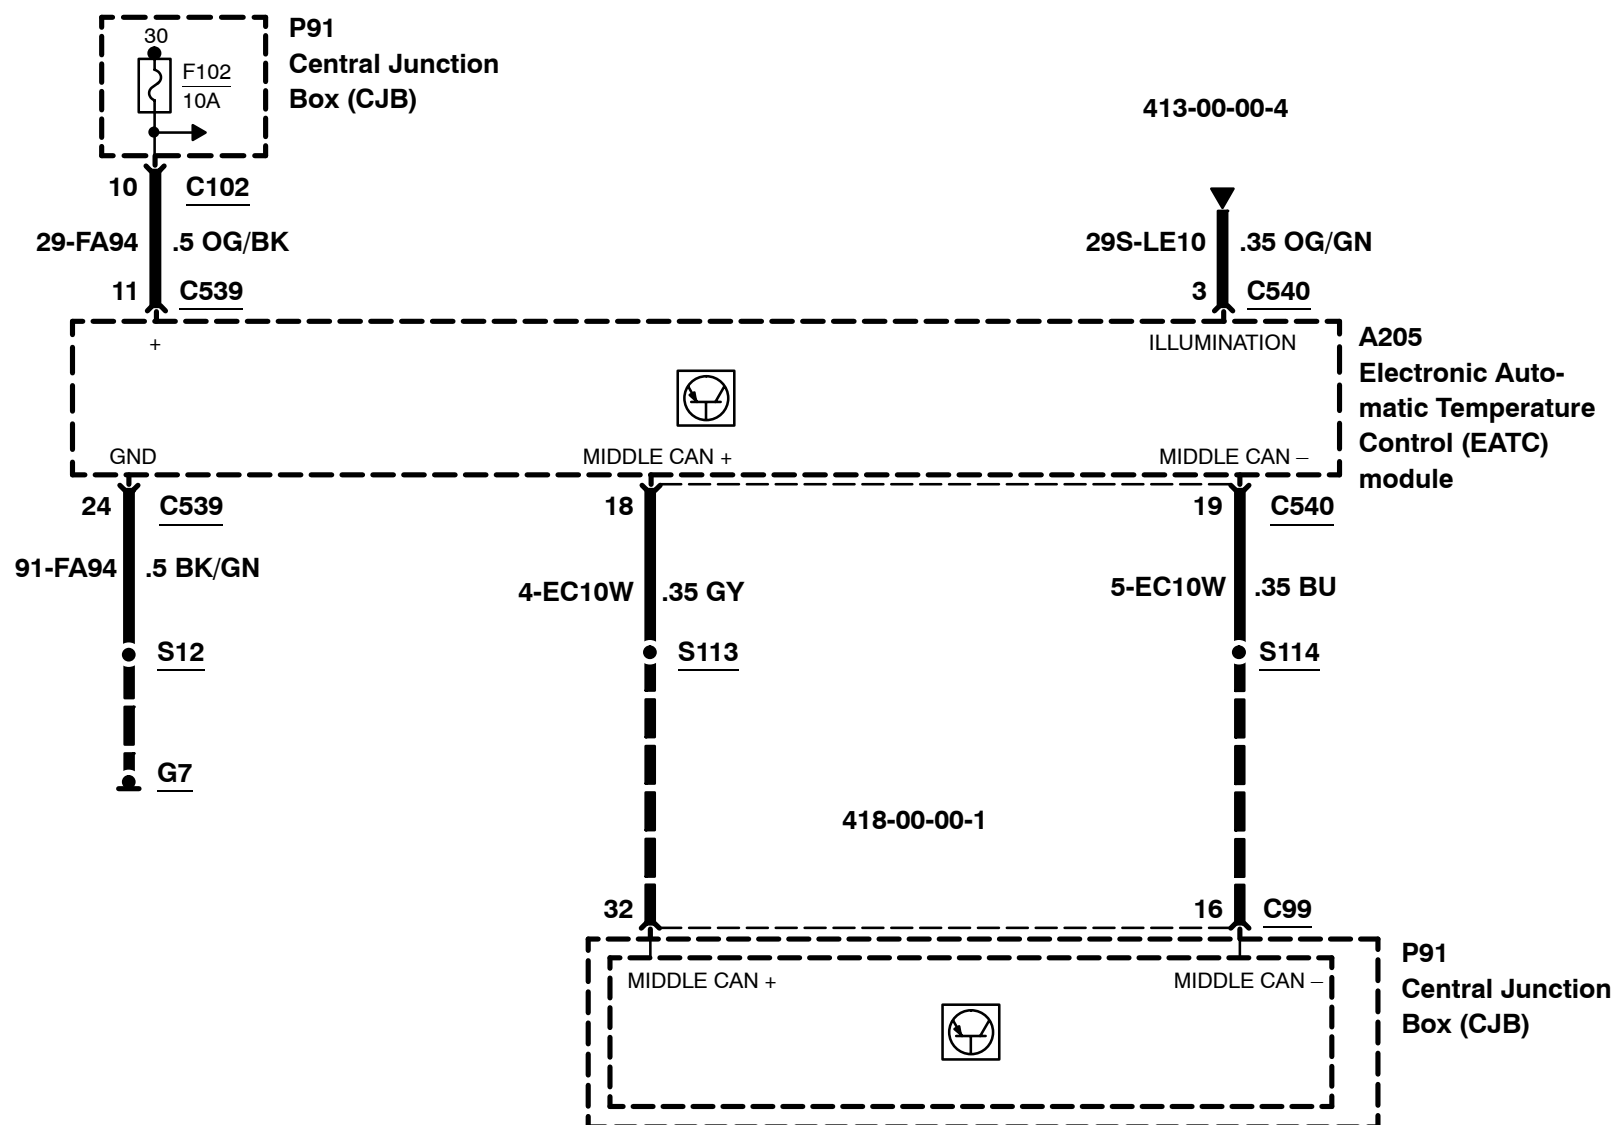

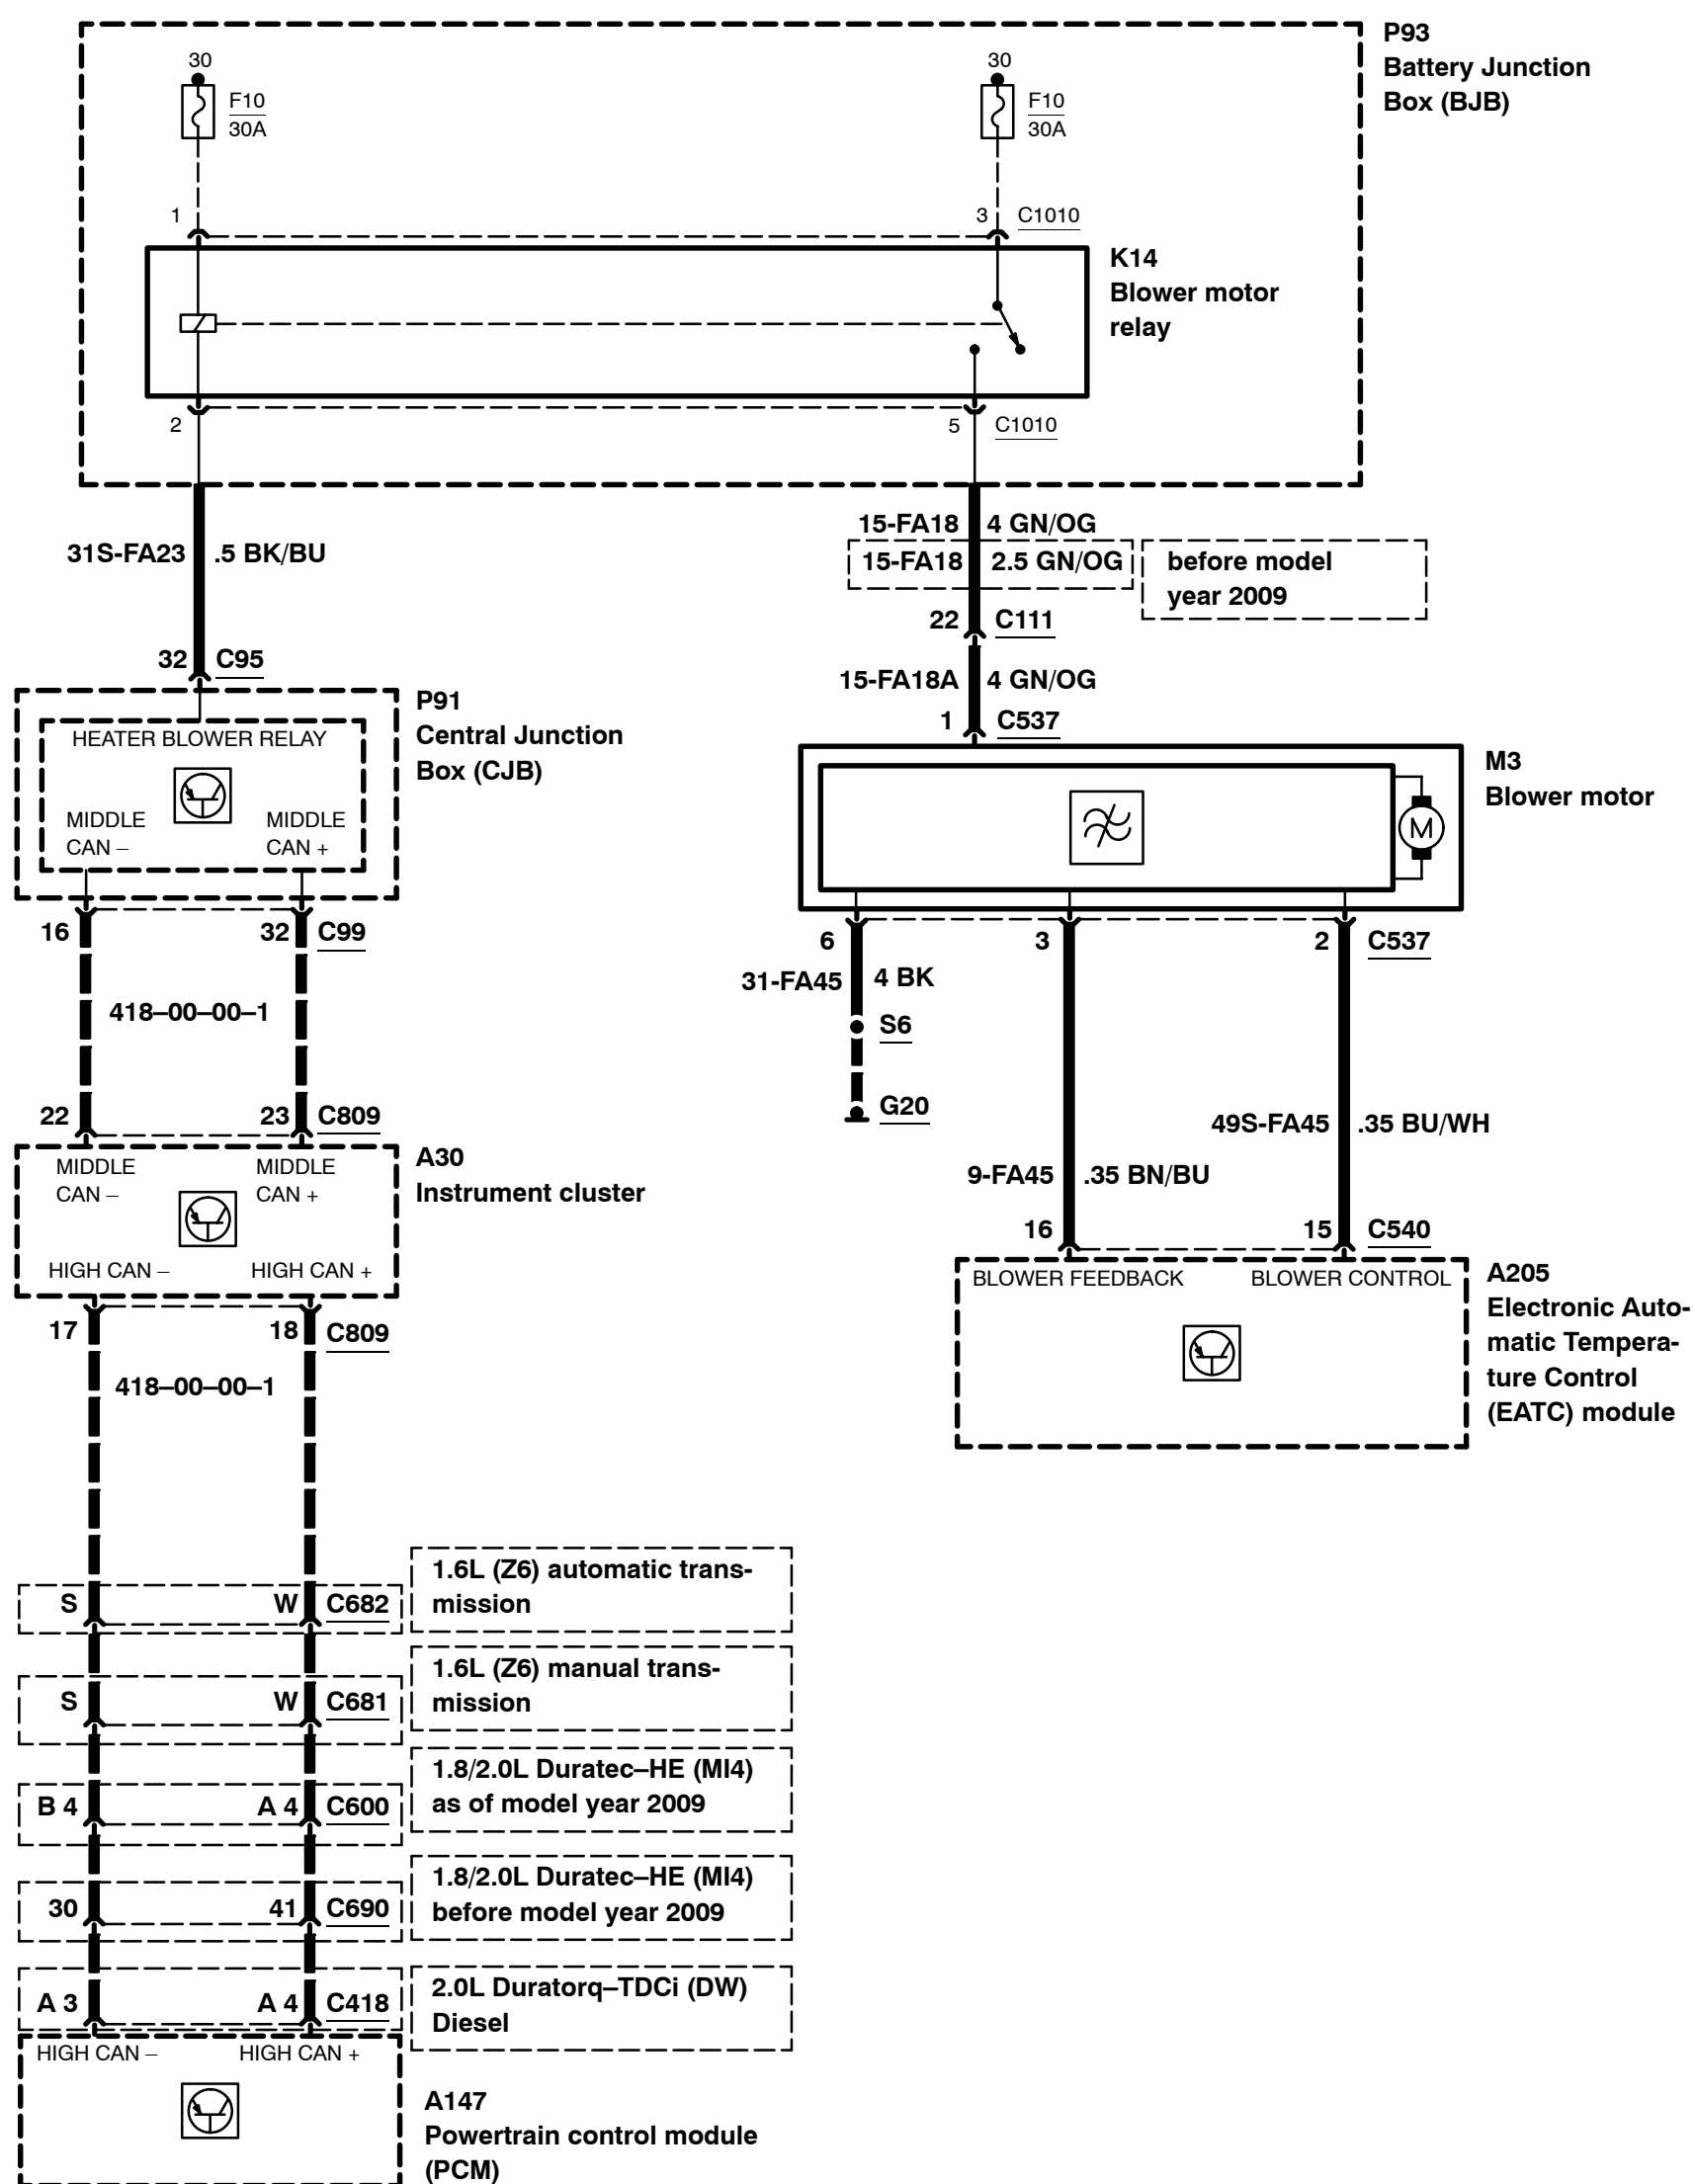


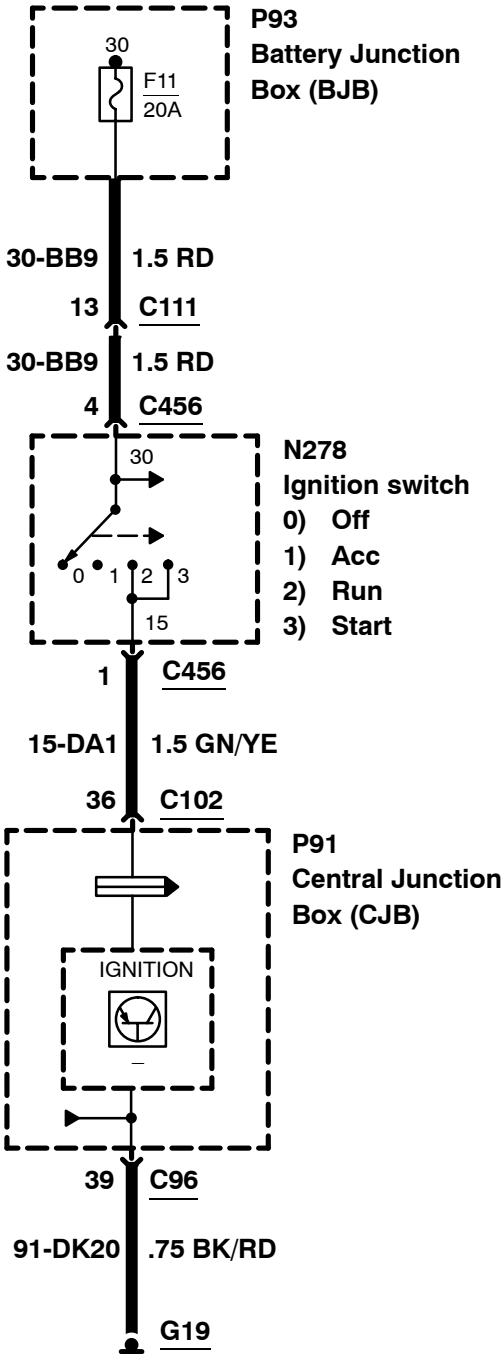

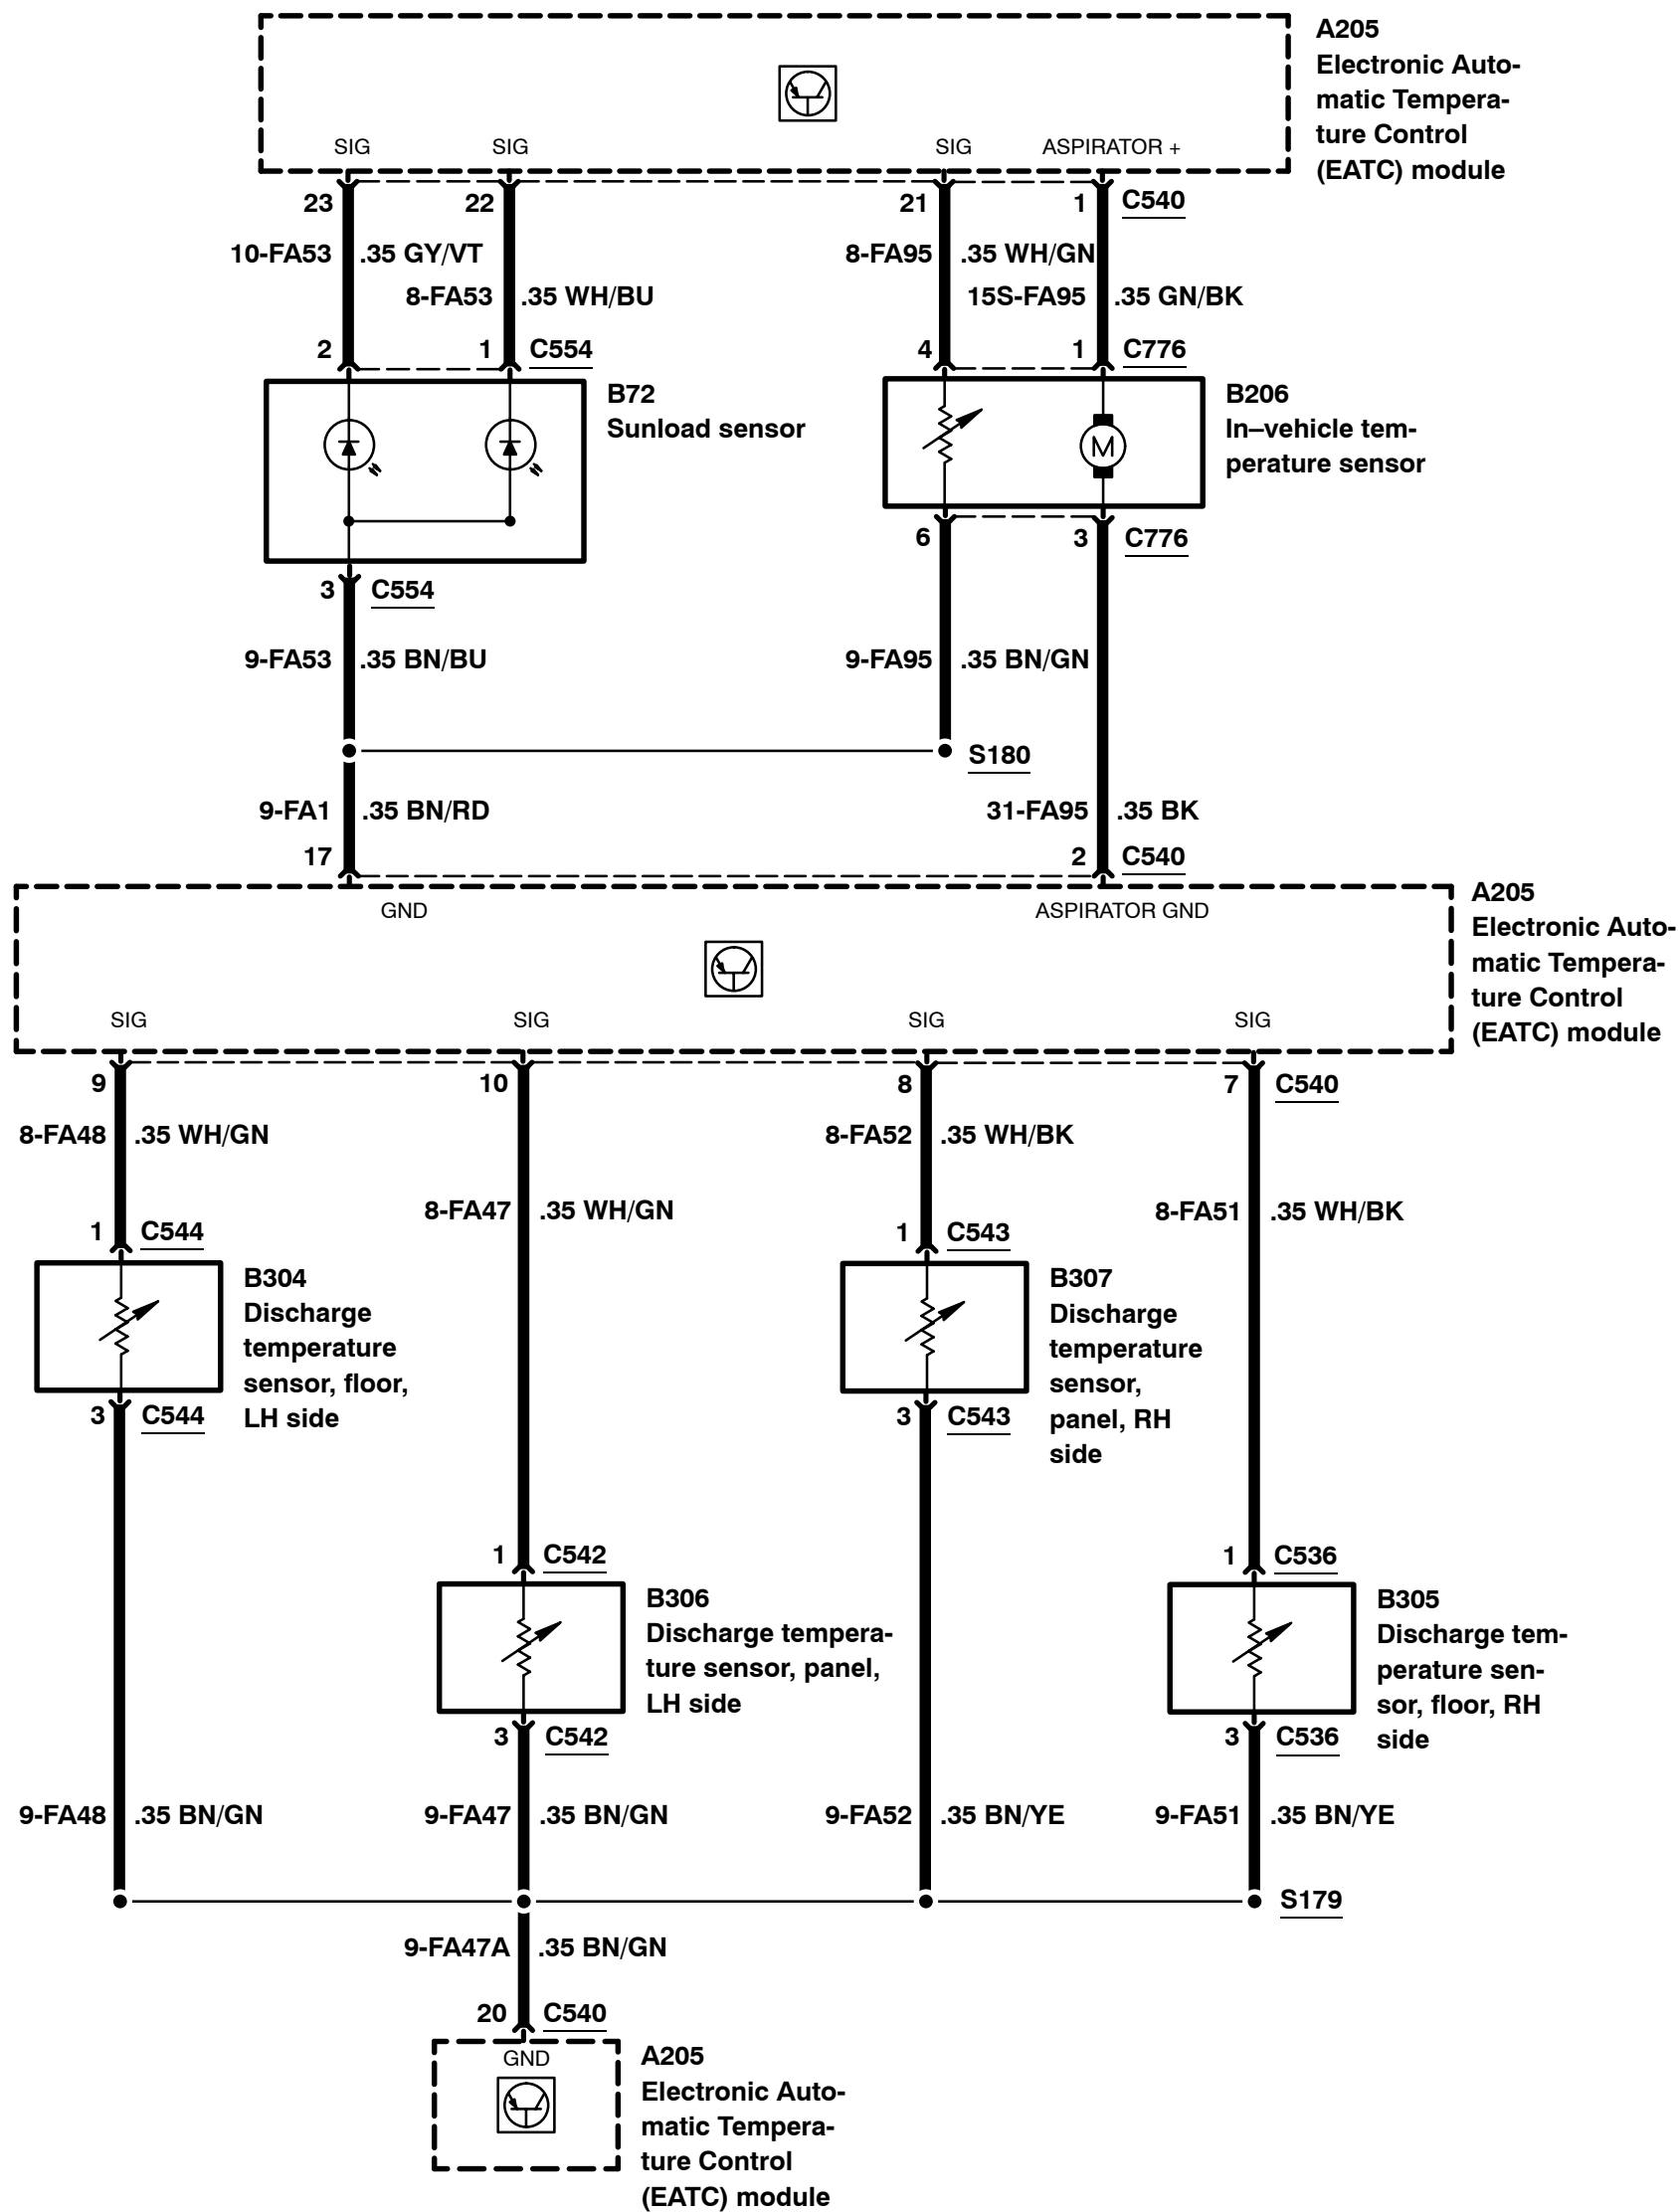


# Air Conditioning – with EATC

02/2008  
412-03-00-10  
2008.25  
Focus

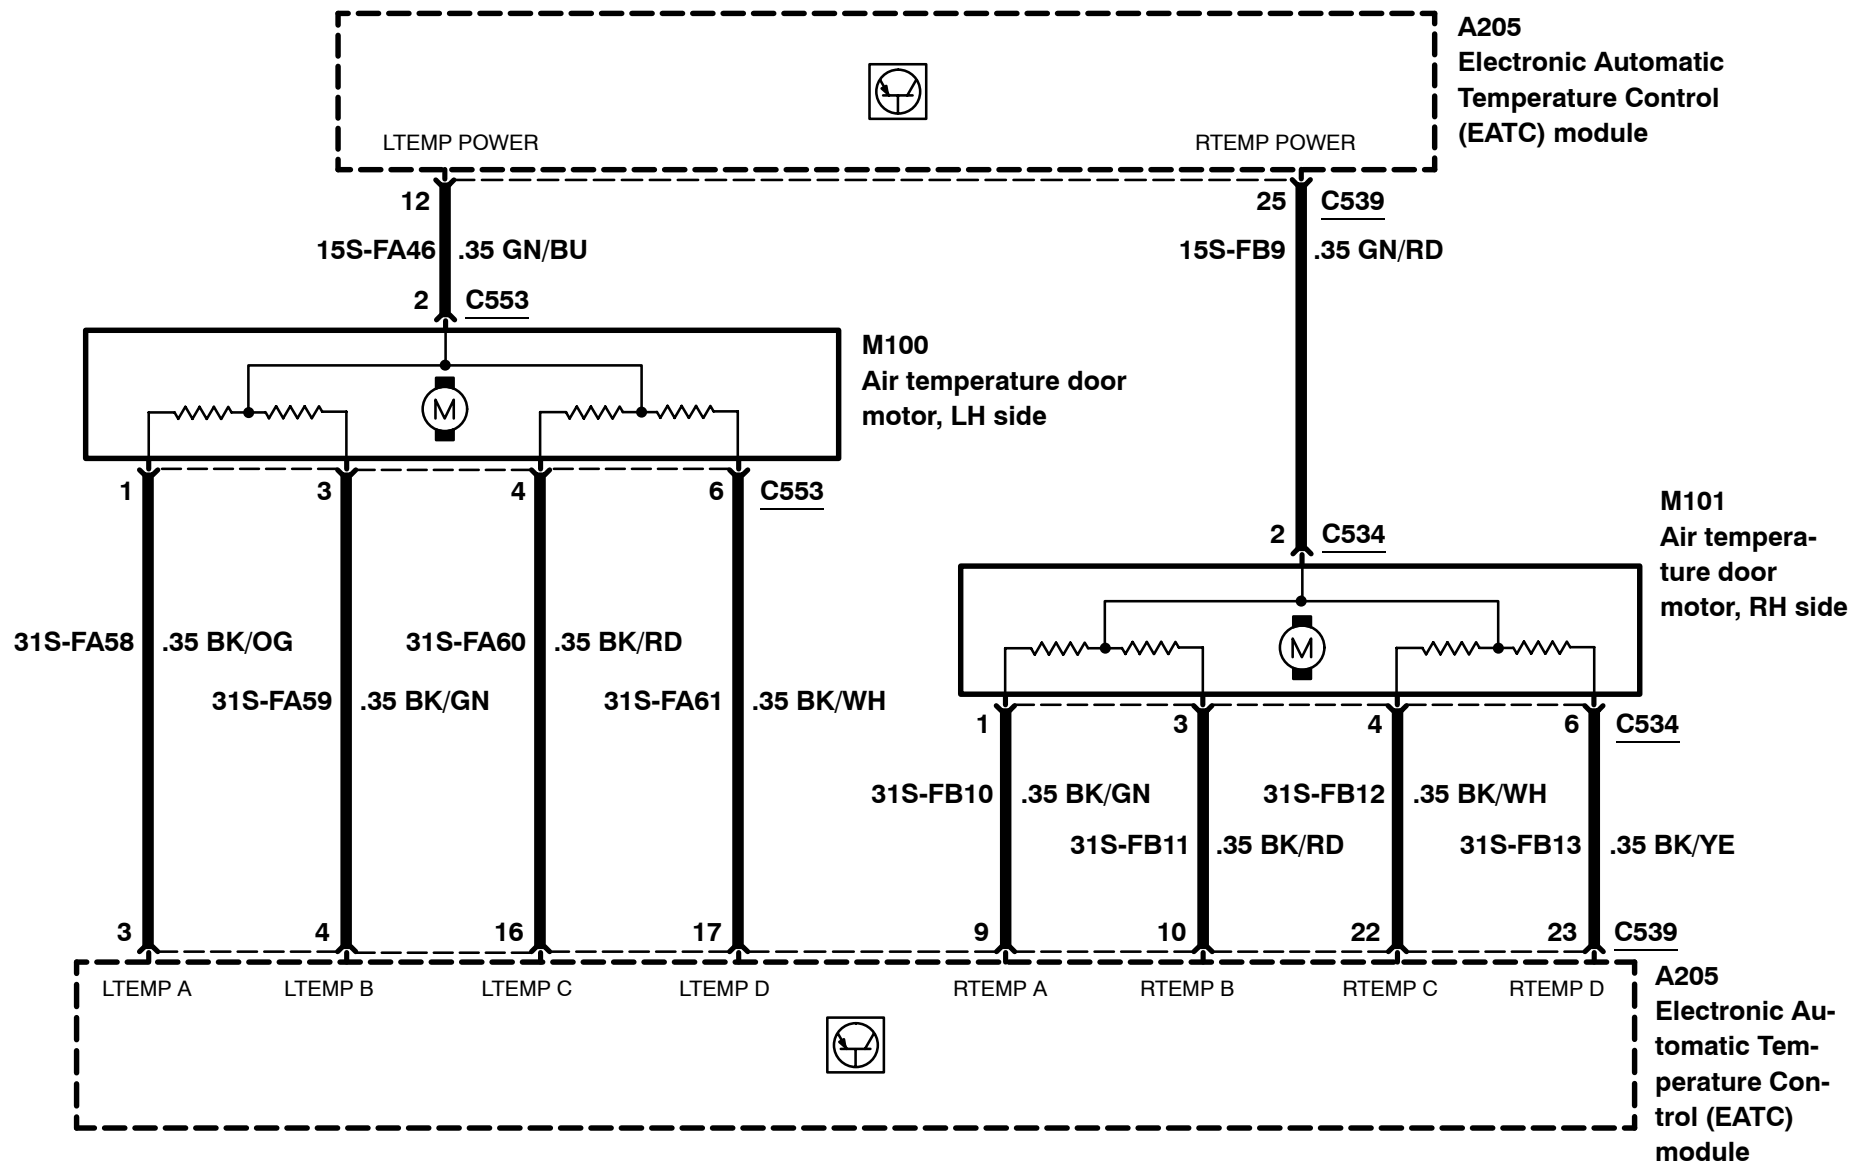

# Air Conditioning – with EATC

02/2008  
412-03-00-11  
2008.25  
Focus

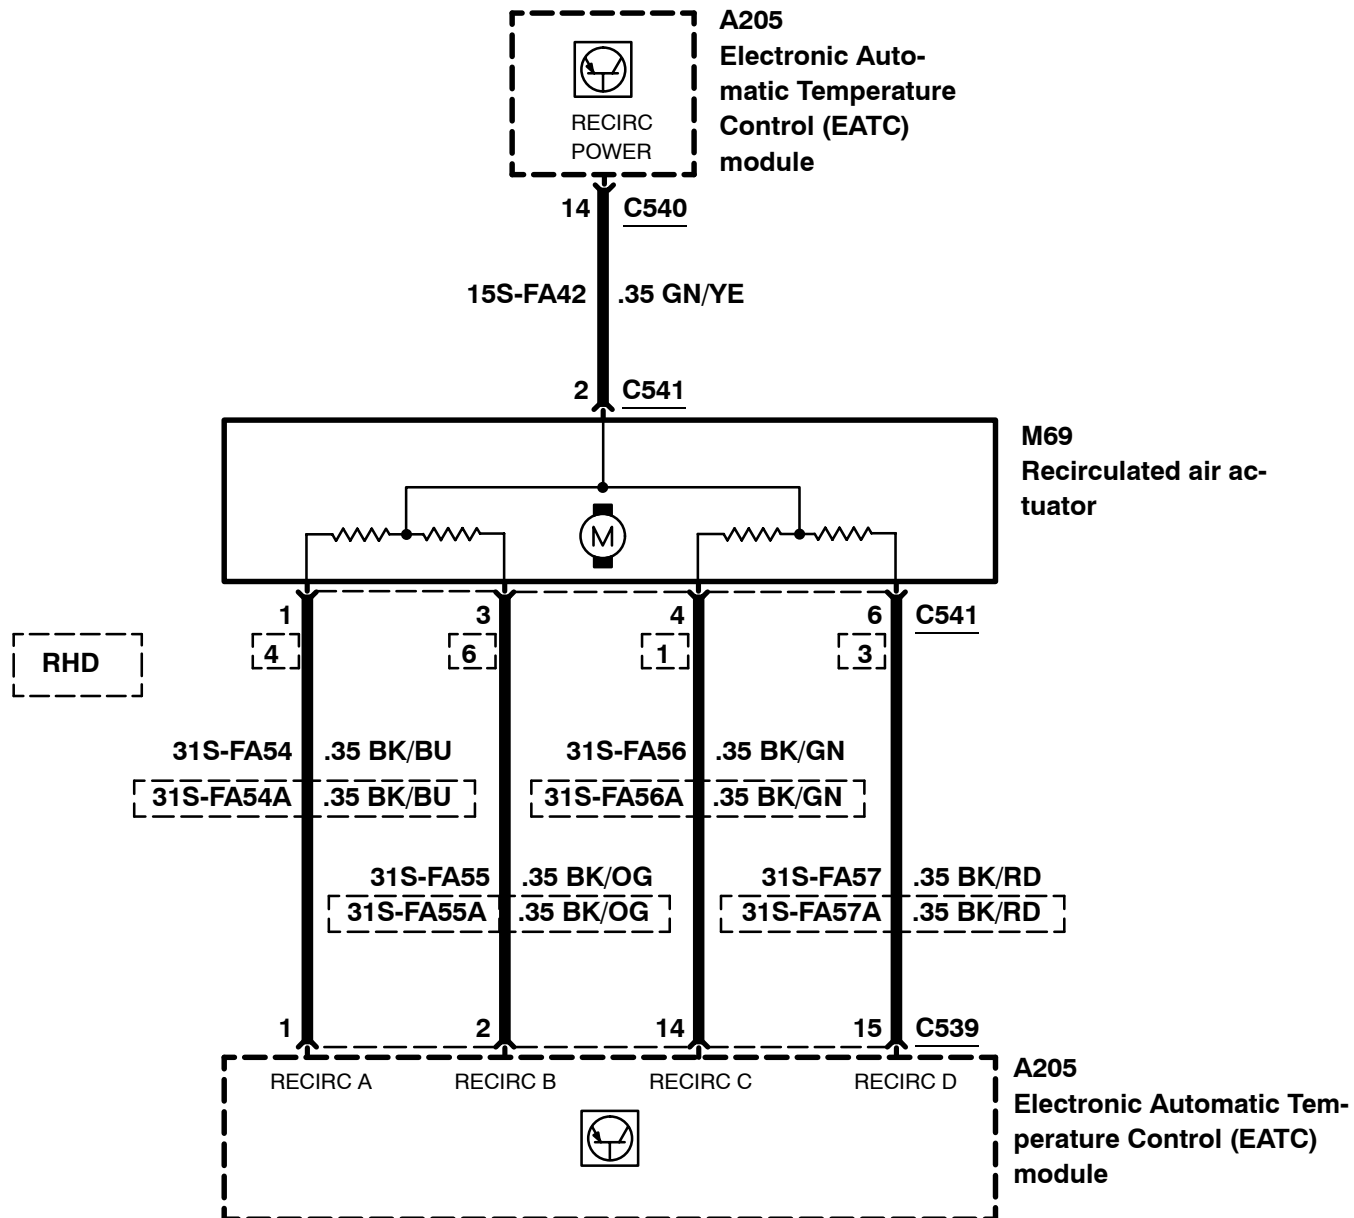


# Air Conditioning – with EATC

02/2008


412-03-00-12


2008.25


Focus

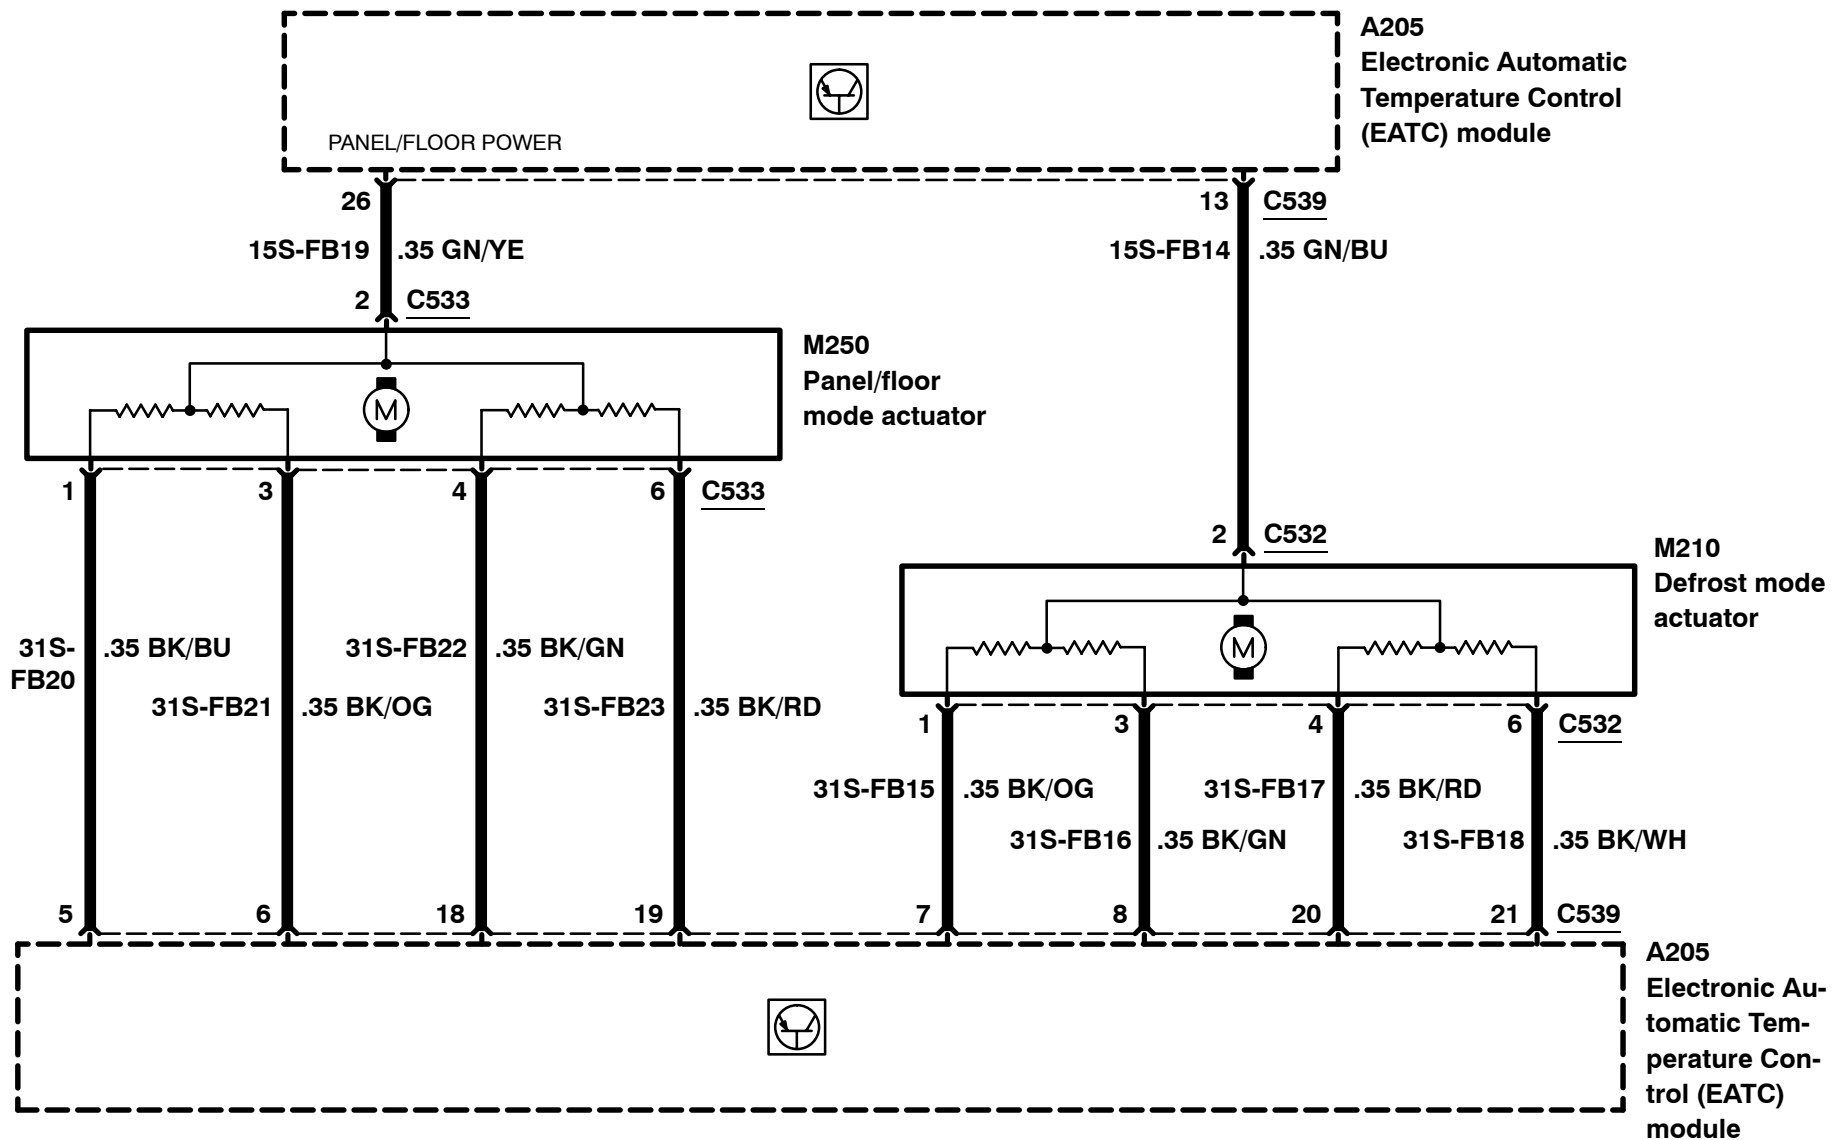



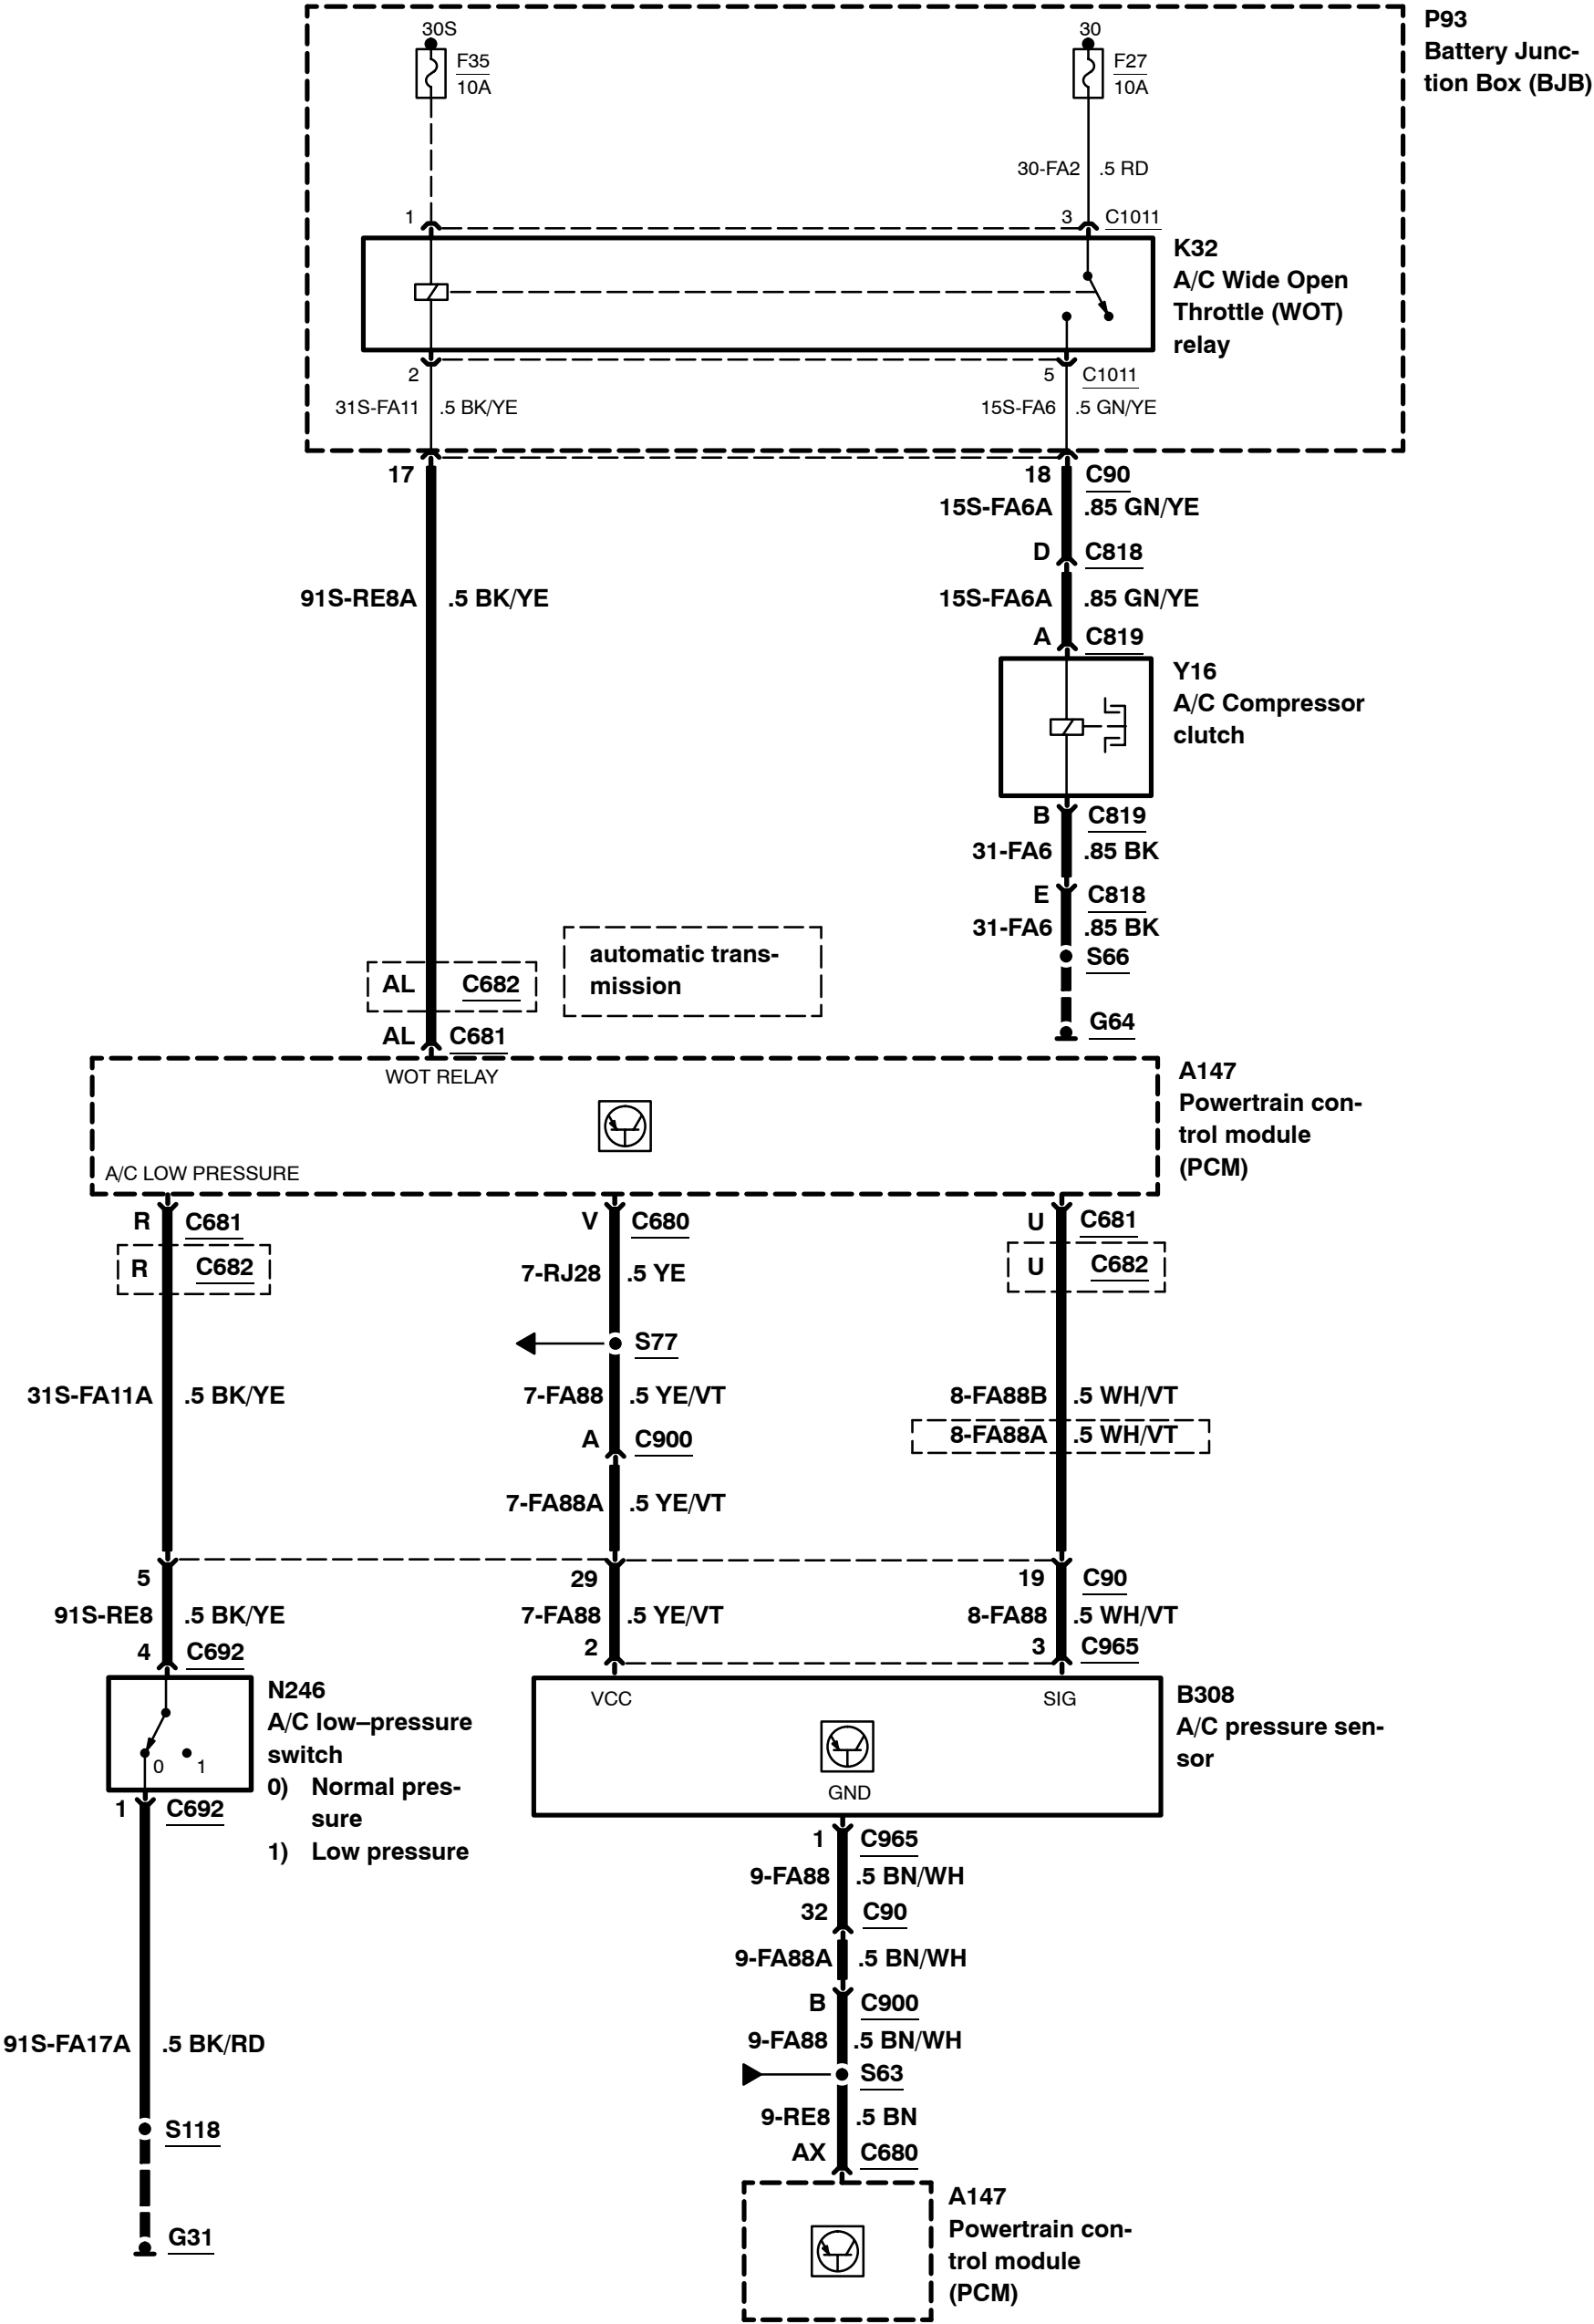


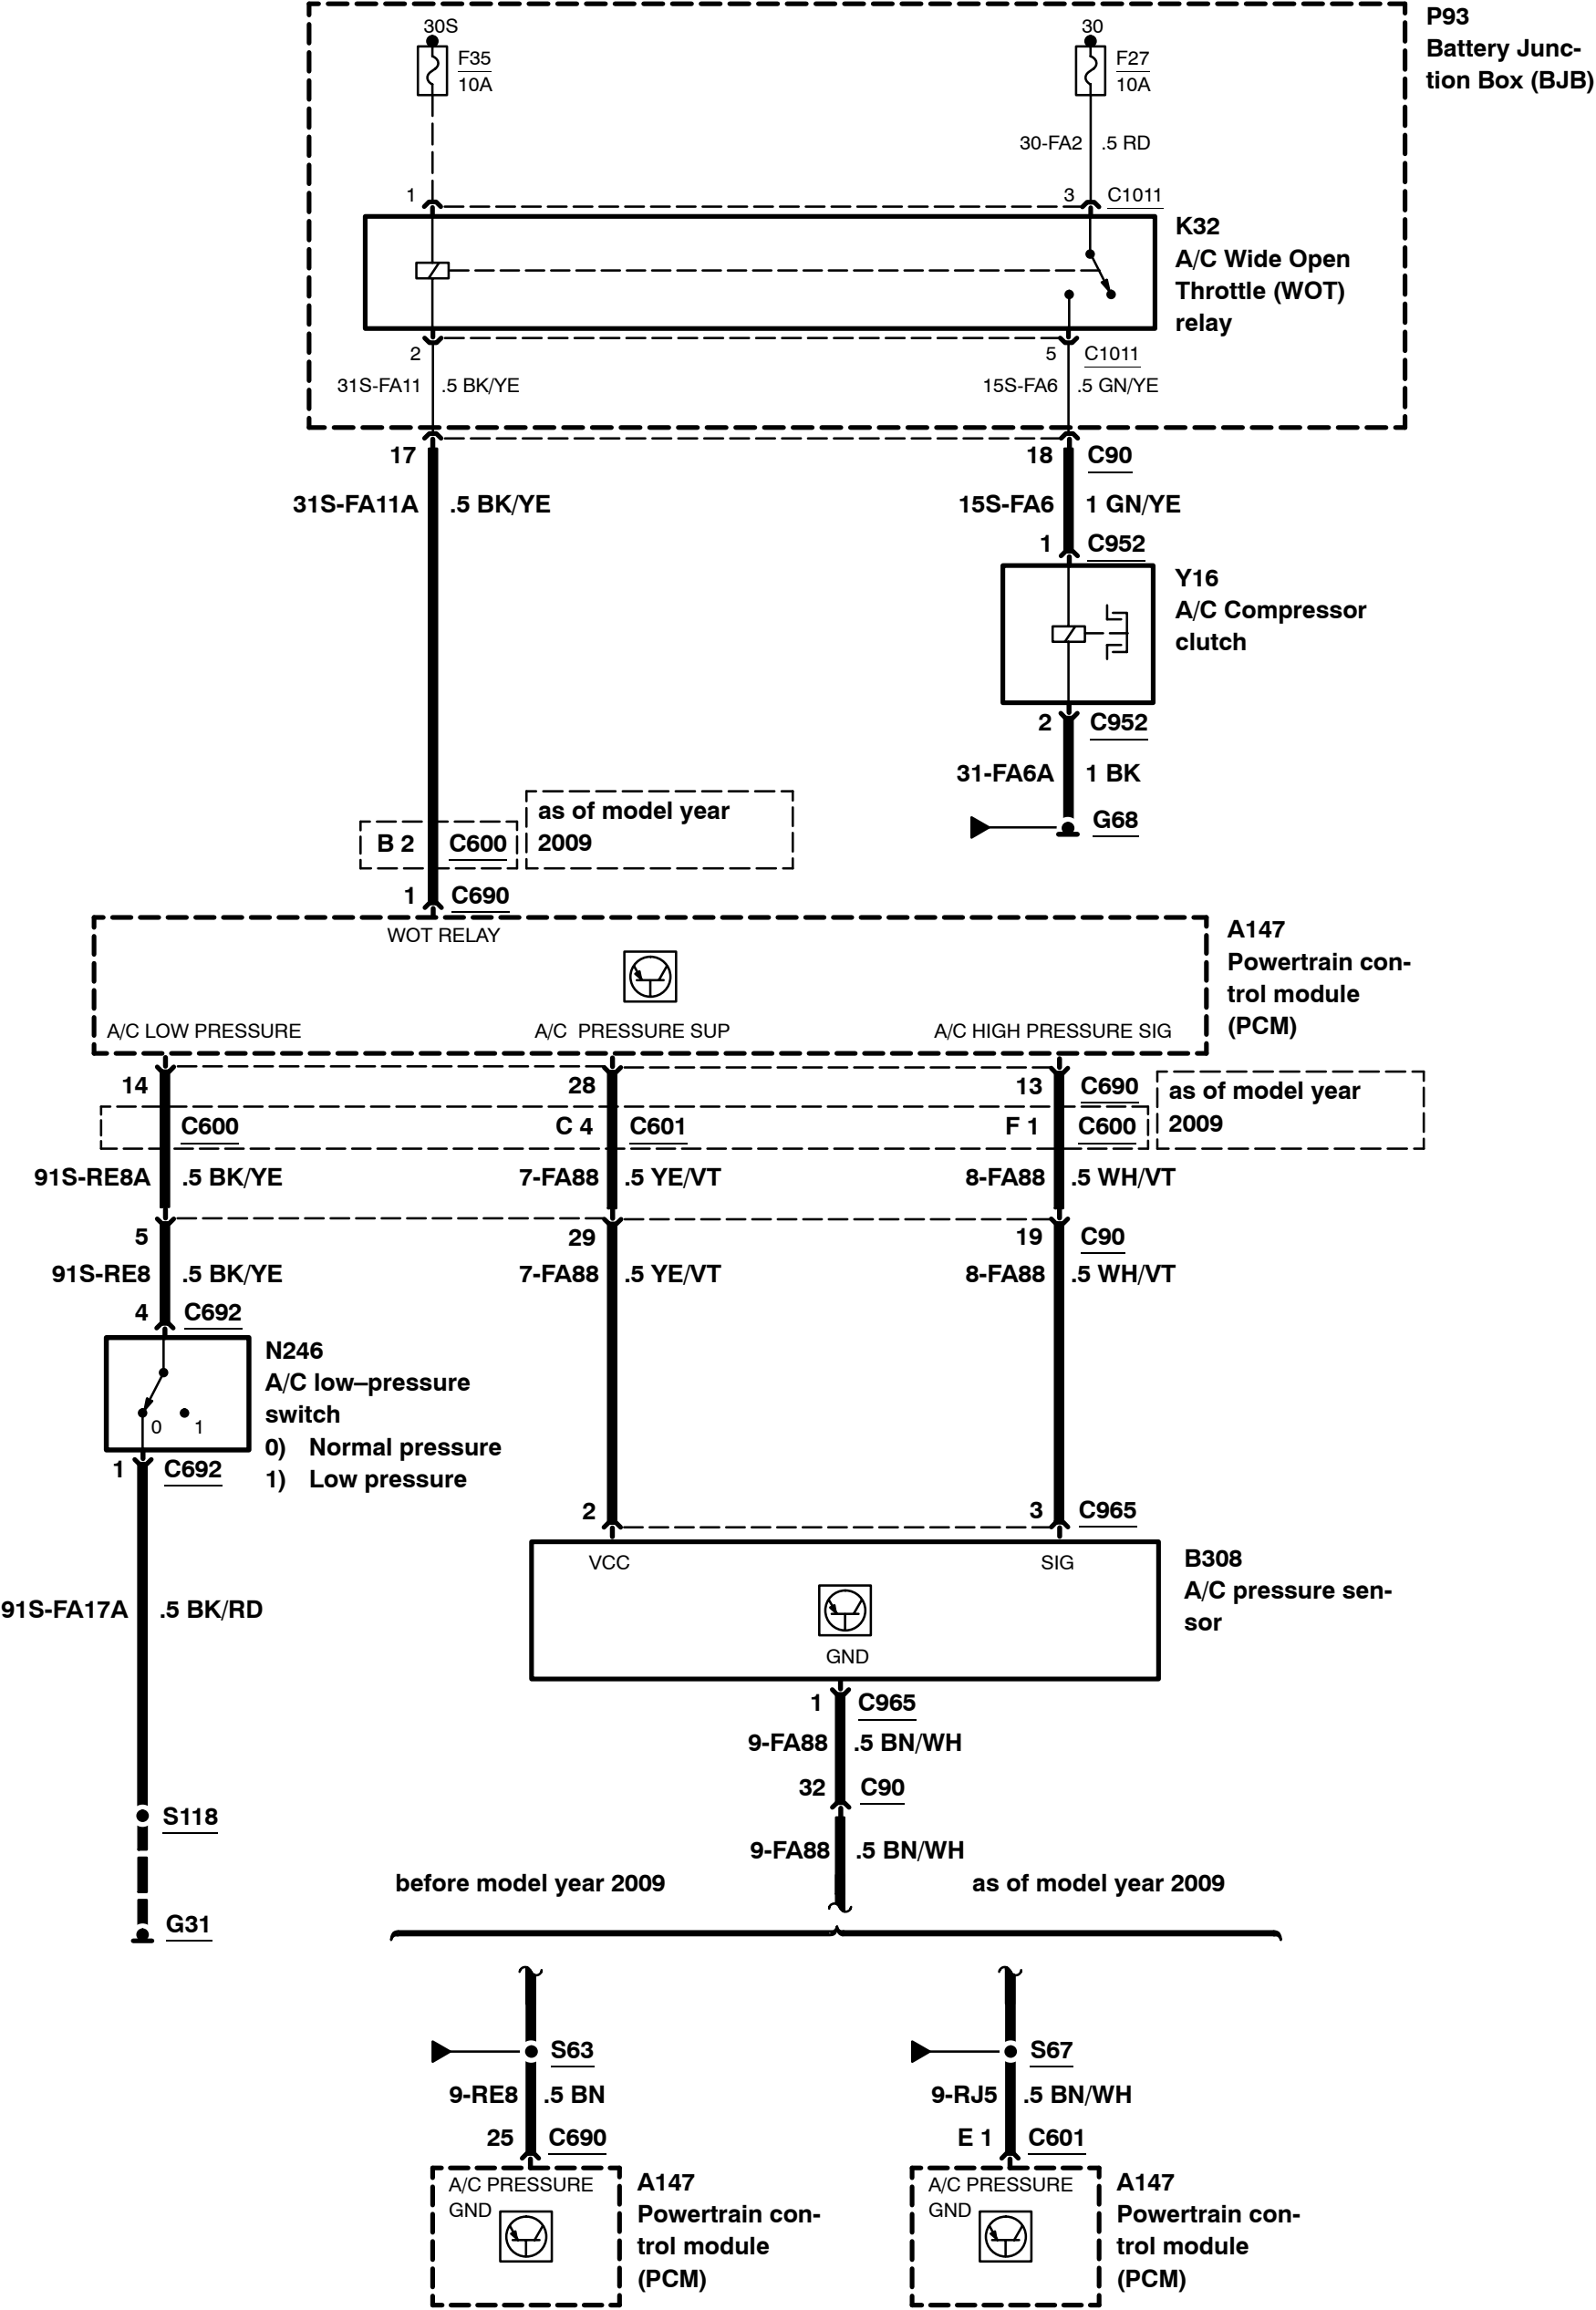

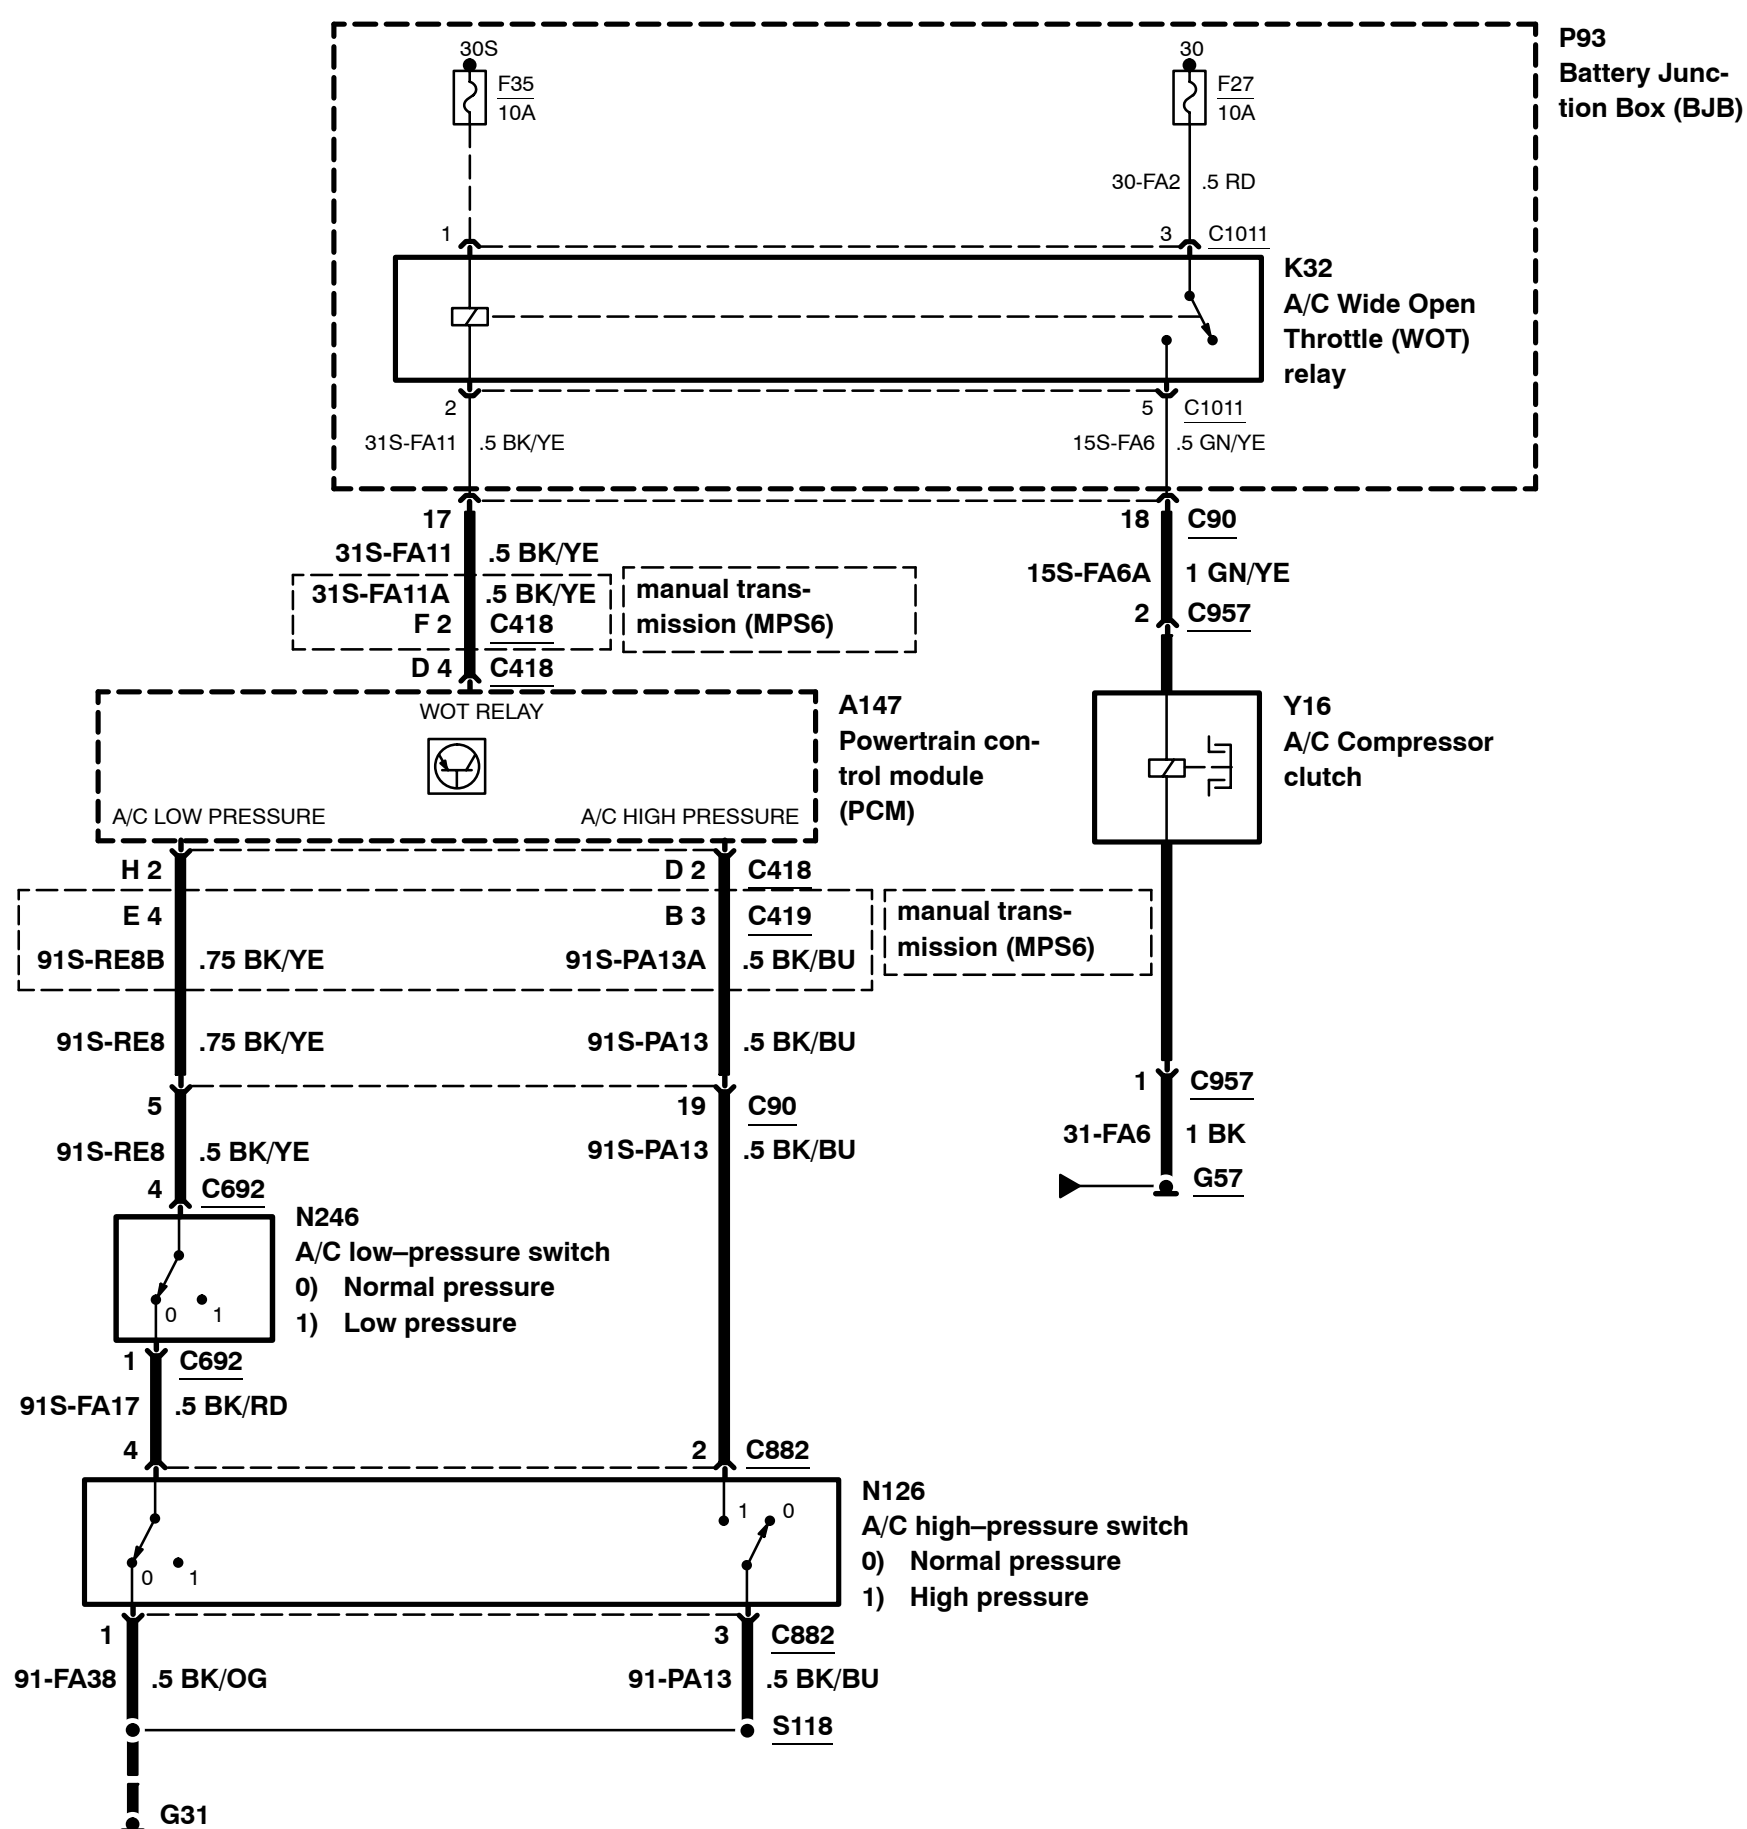


Instrument Cluster and Panel Illumination

02/2008  
413-00-00-1  
2008.25  
Focus

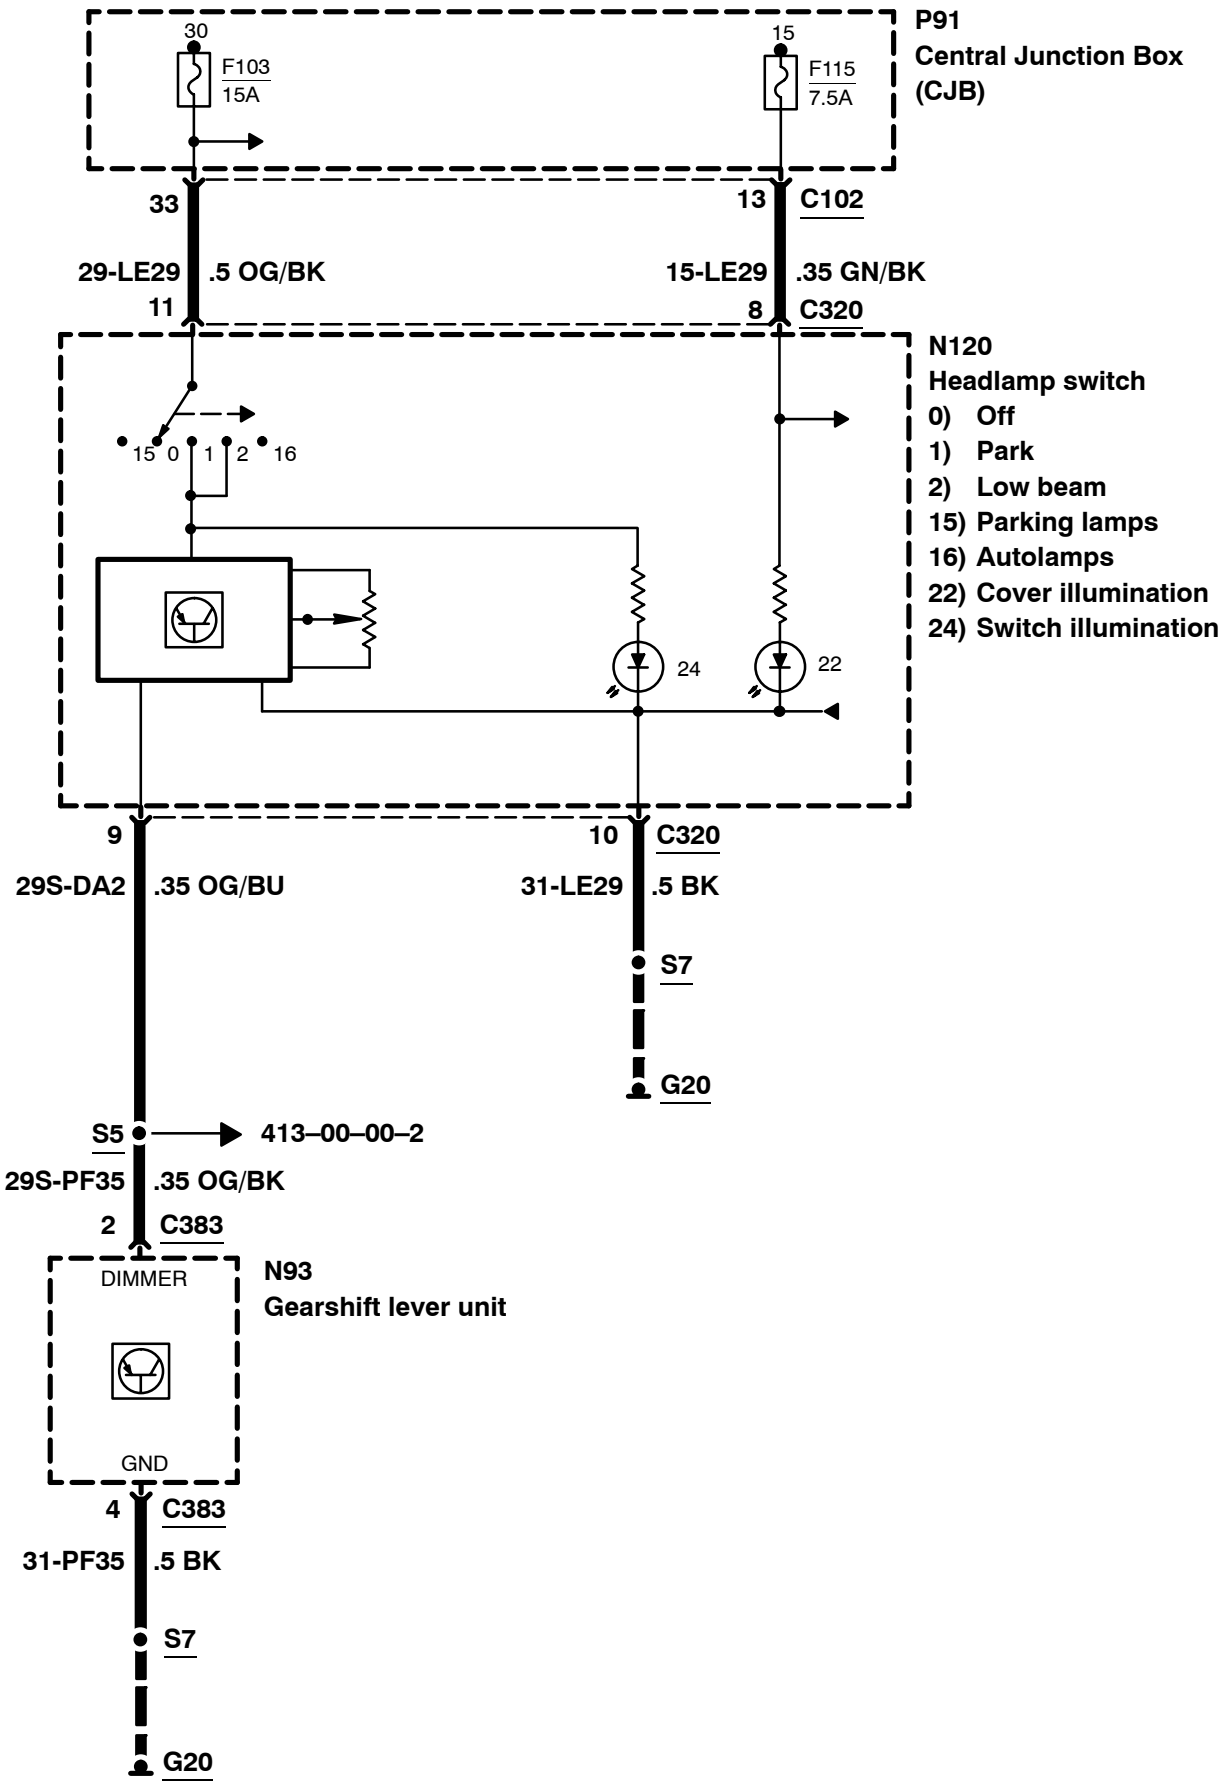


# Instrument Cluster and Panel Illumination

02/2008  
413-00-00-2  
2008.25  
Focus

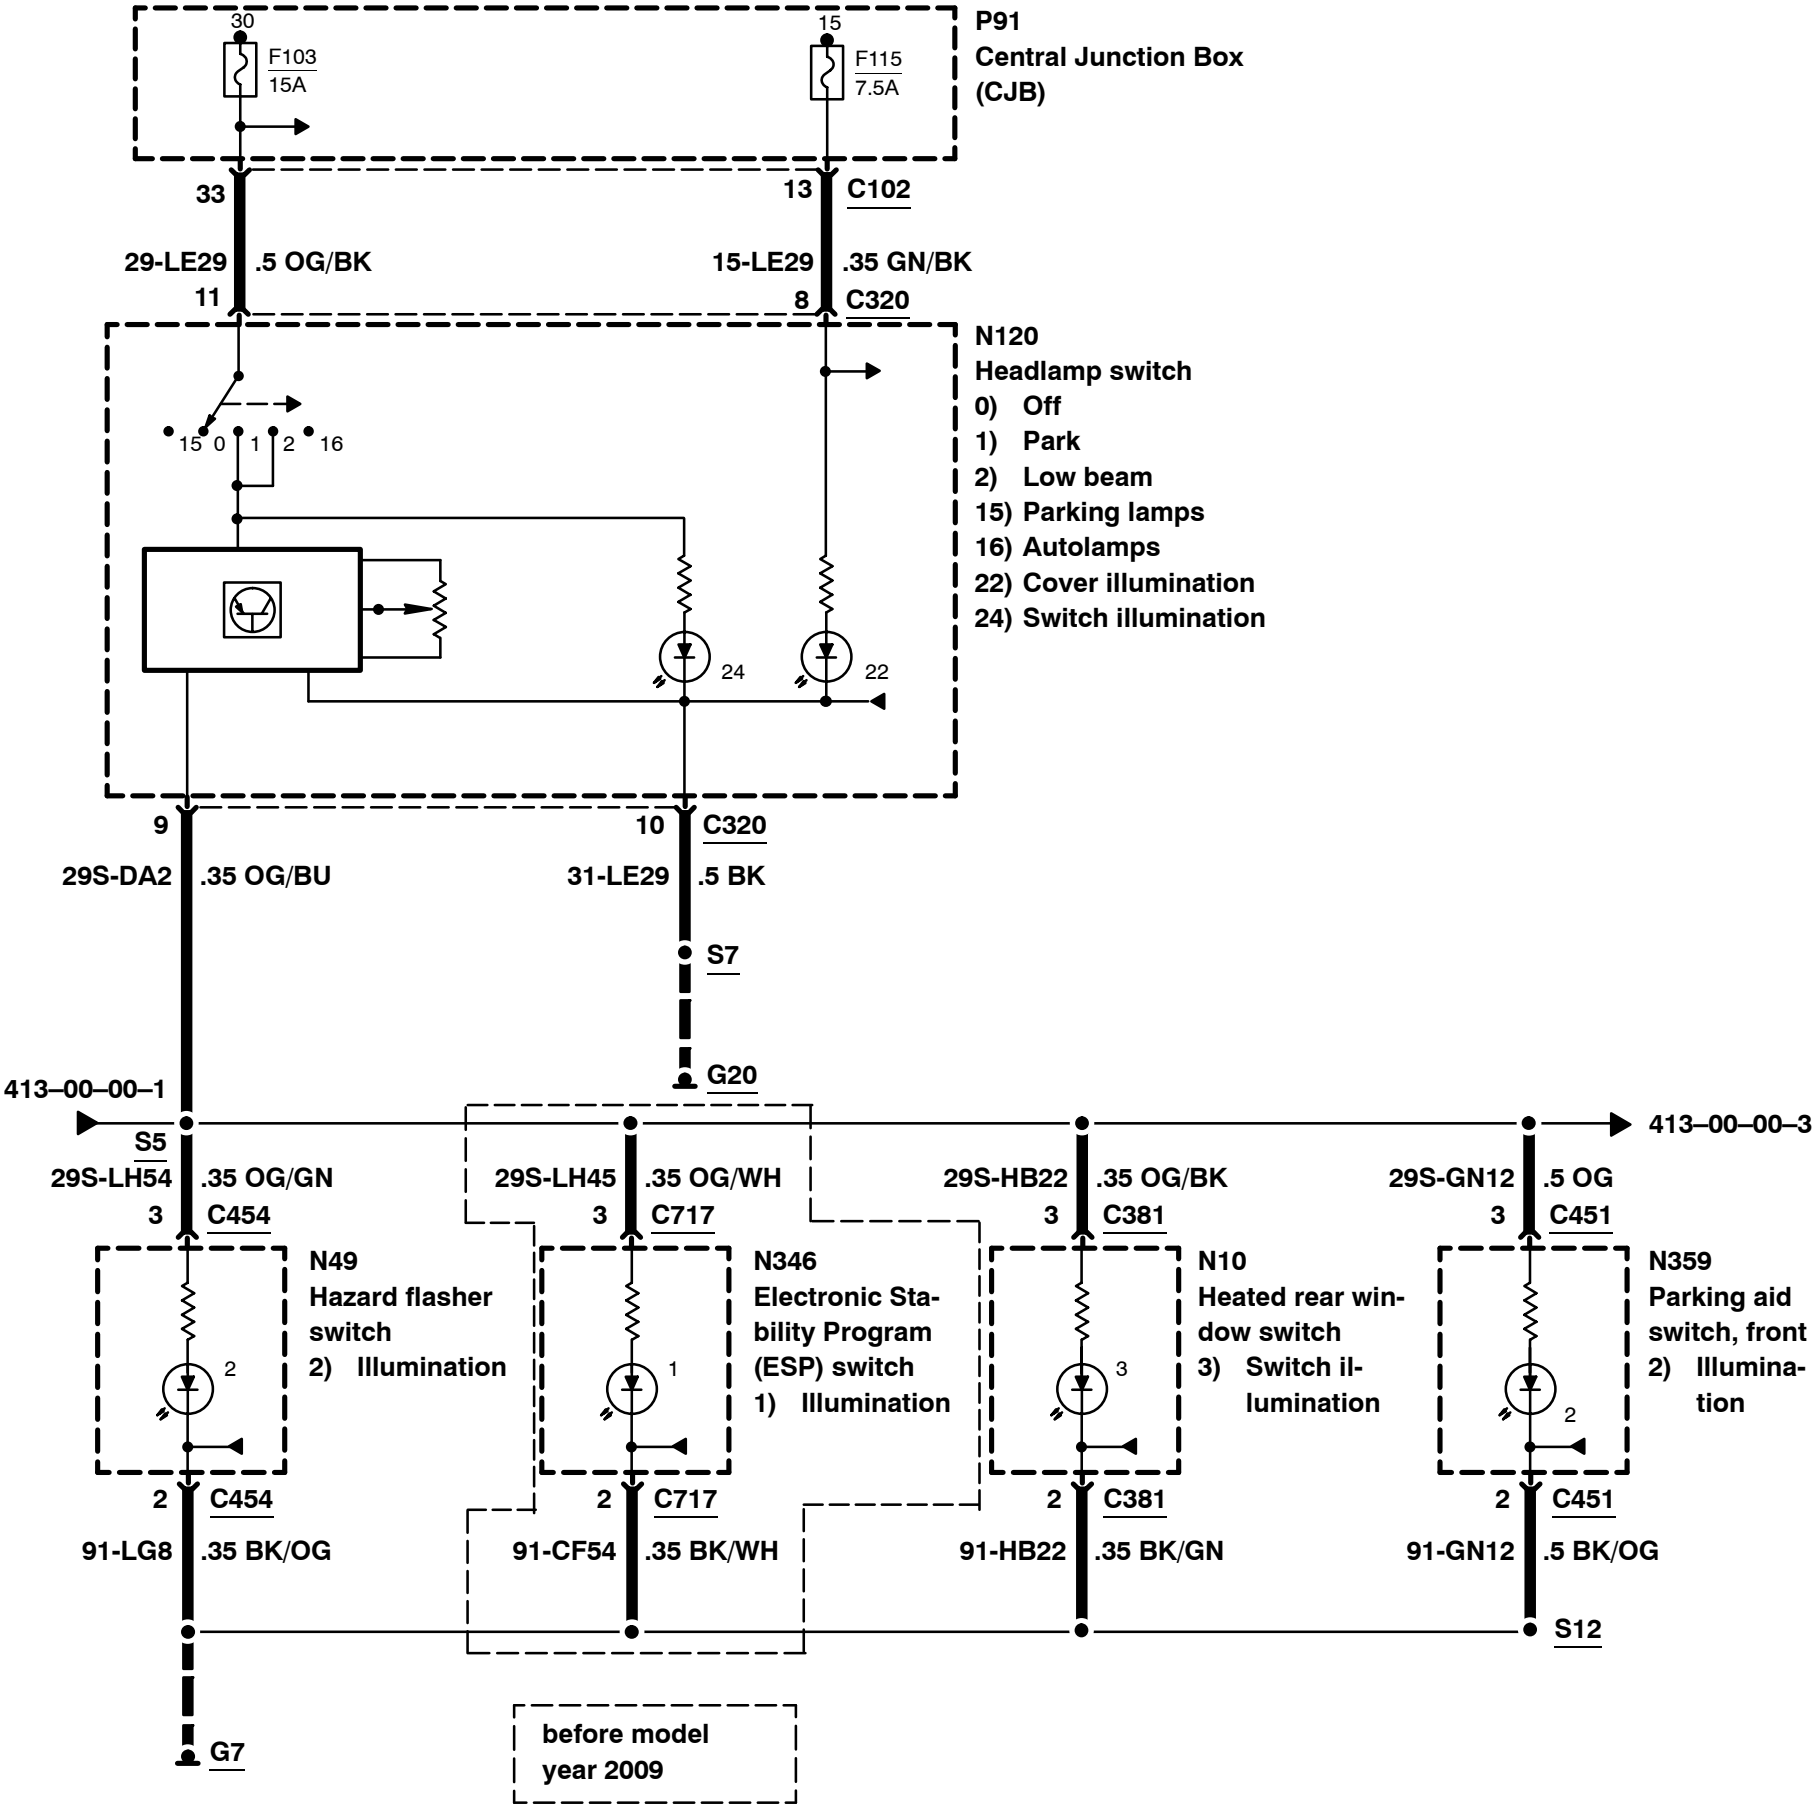

# Instrument Cluster and Panel Illumination


02/2008  
413-00-00-3  
2008.25  
Focus

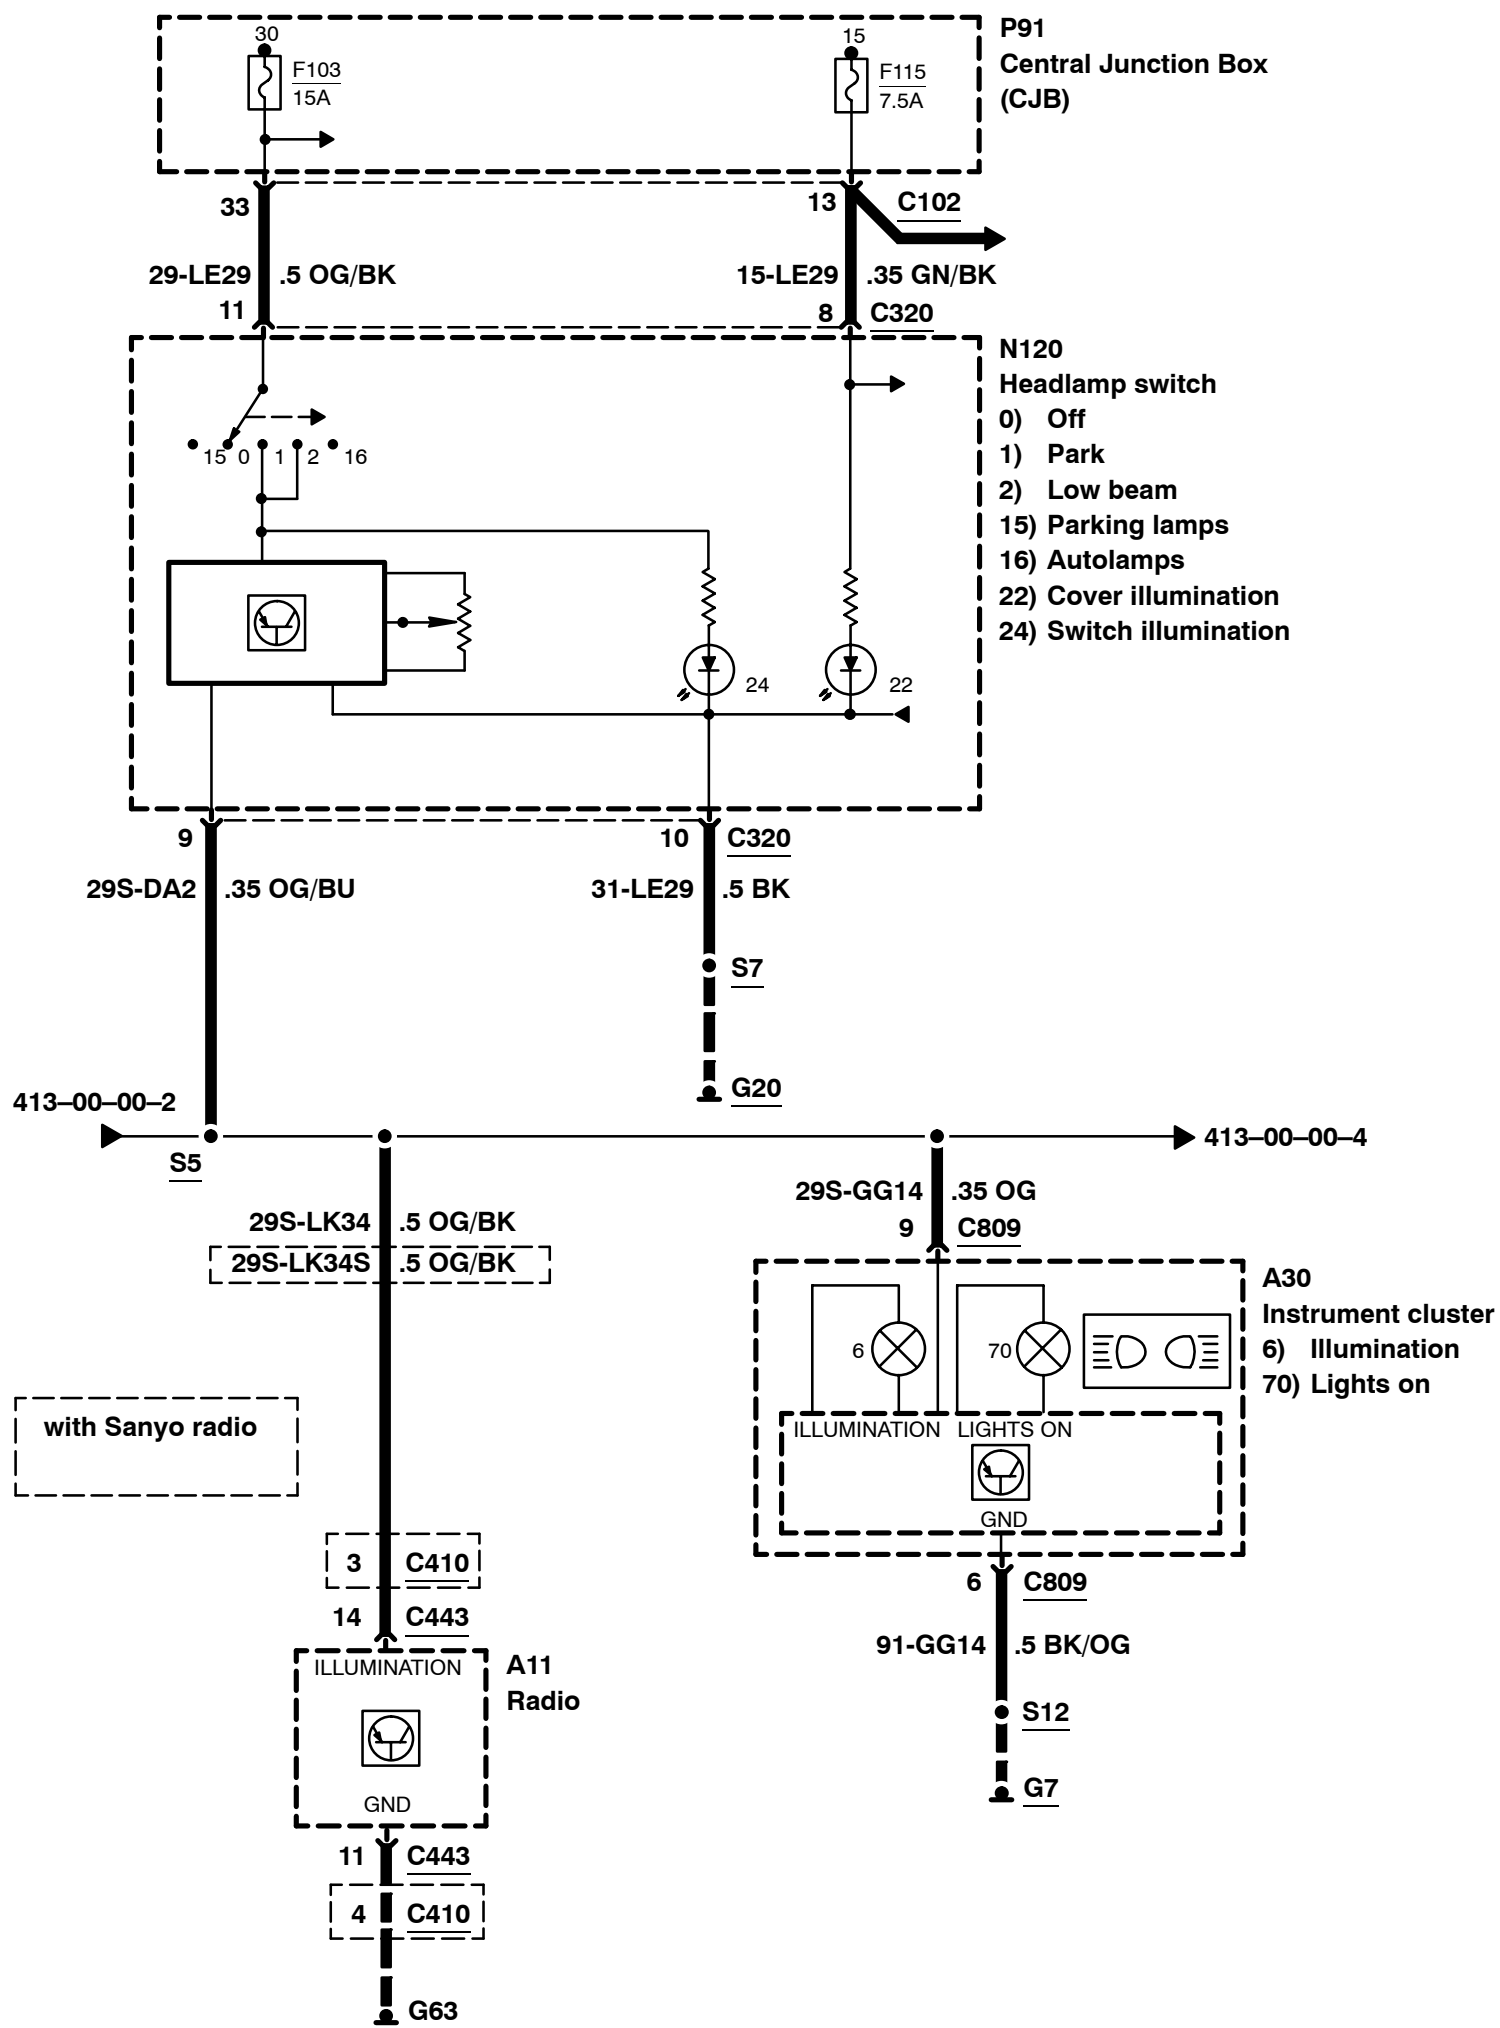




Instrument Cluster and Panel Illumination

02/2008  
413-00-00-4  
2008.25  
Focus

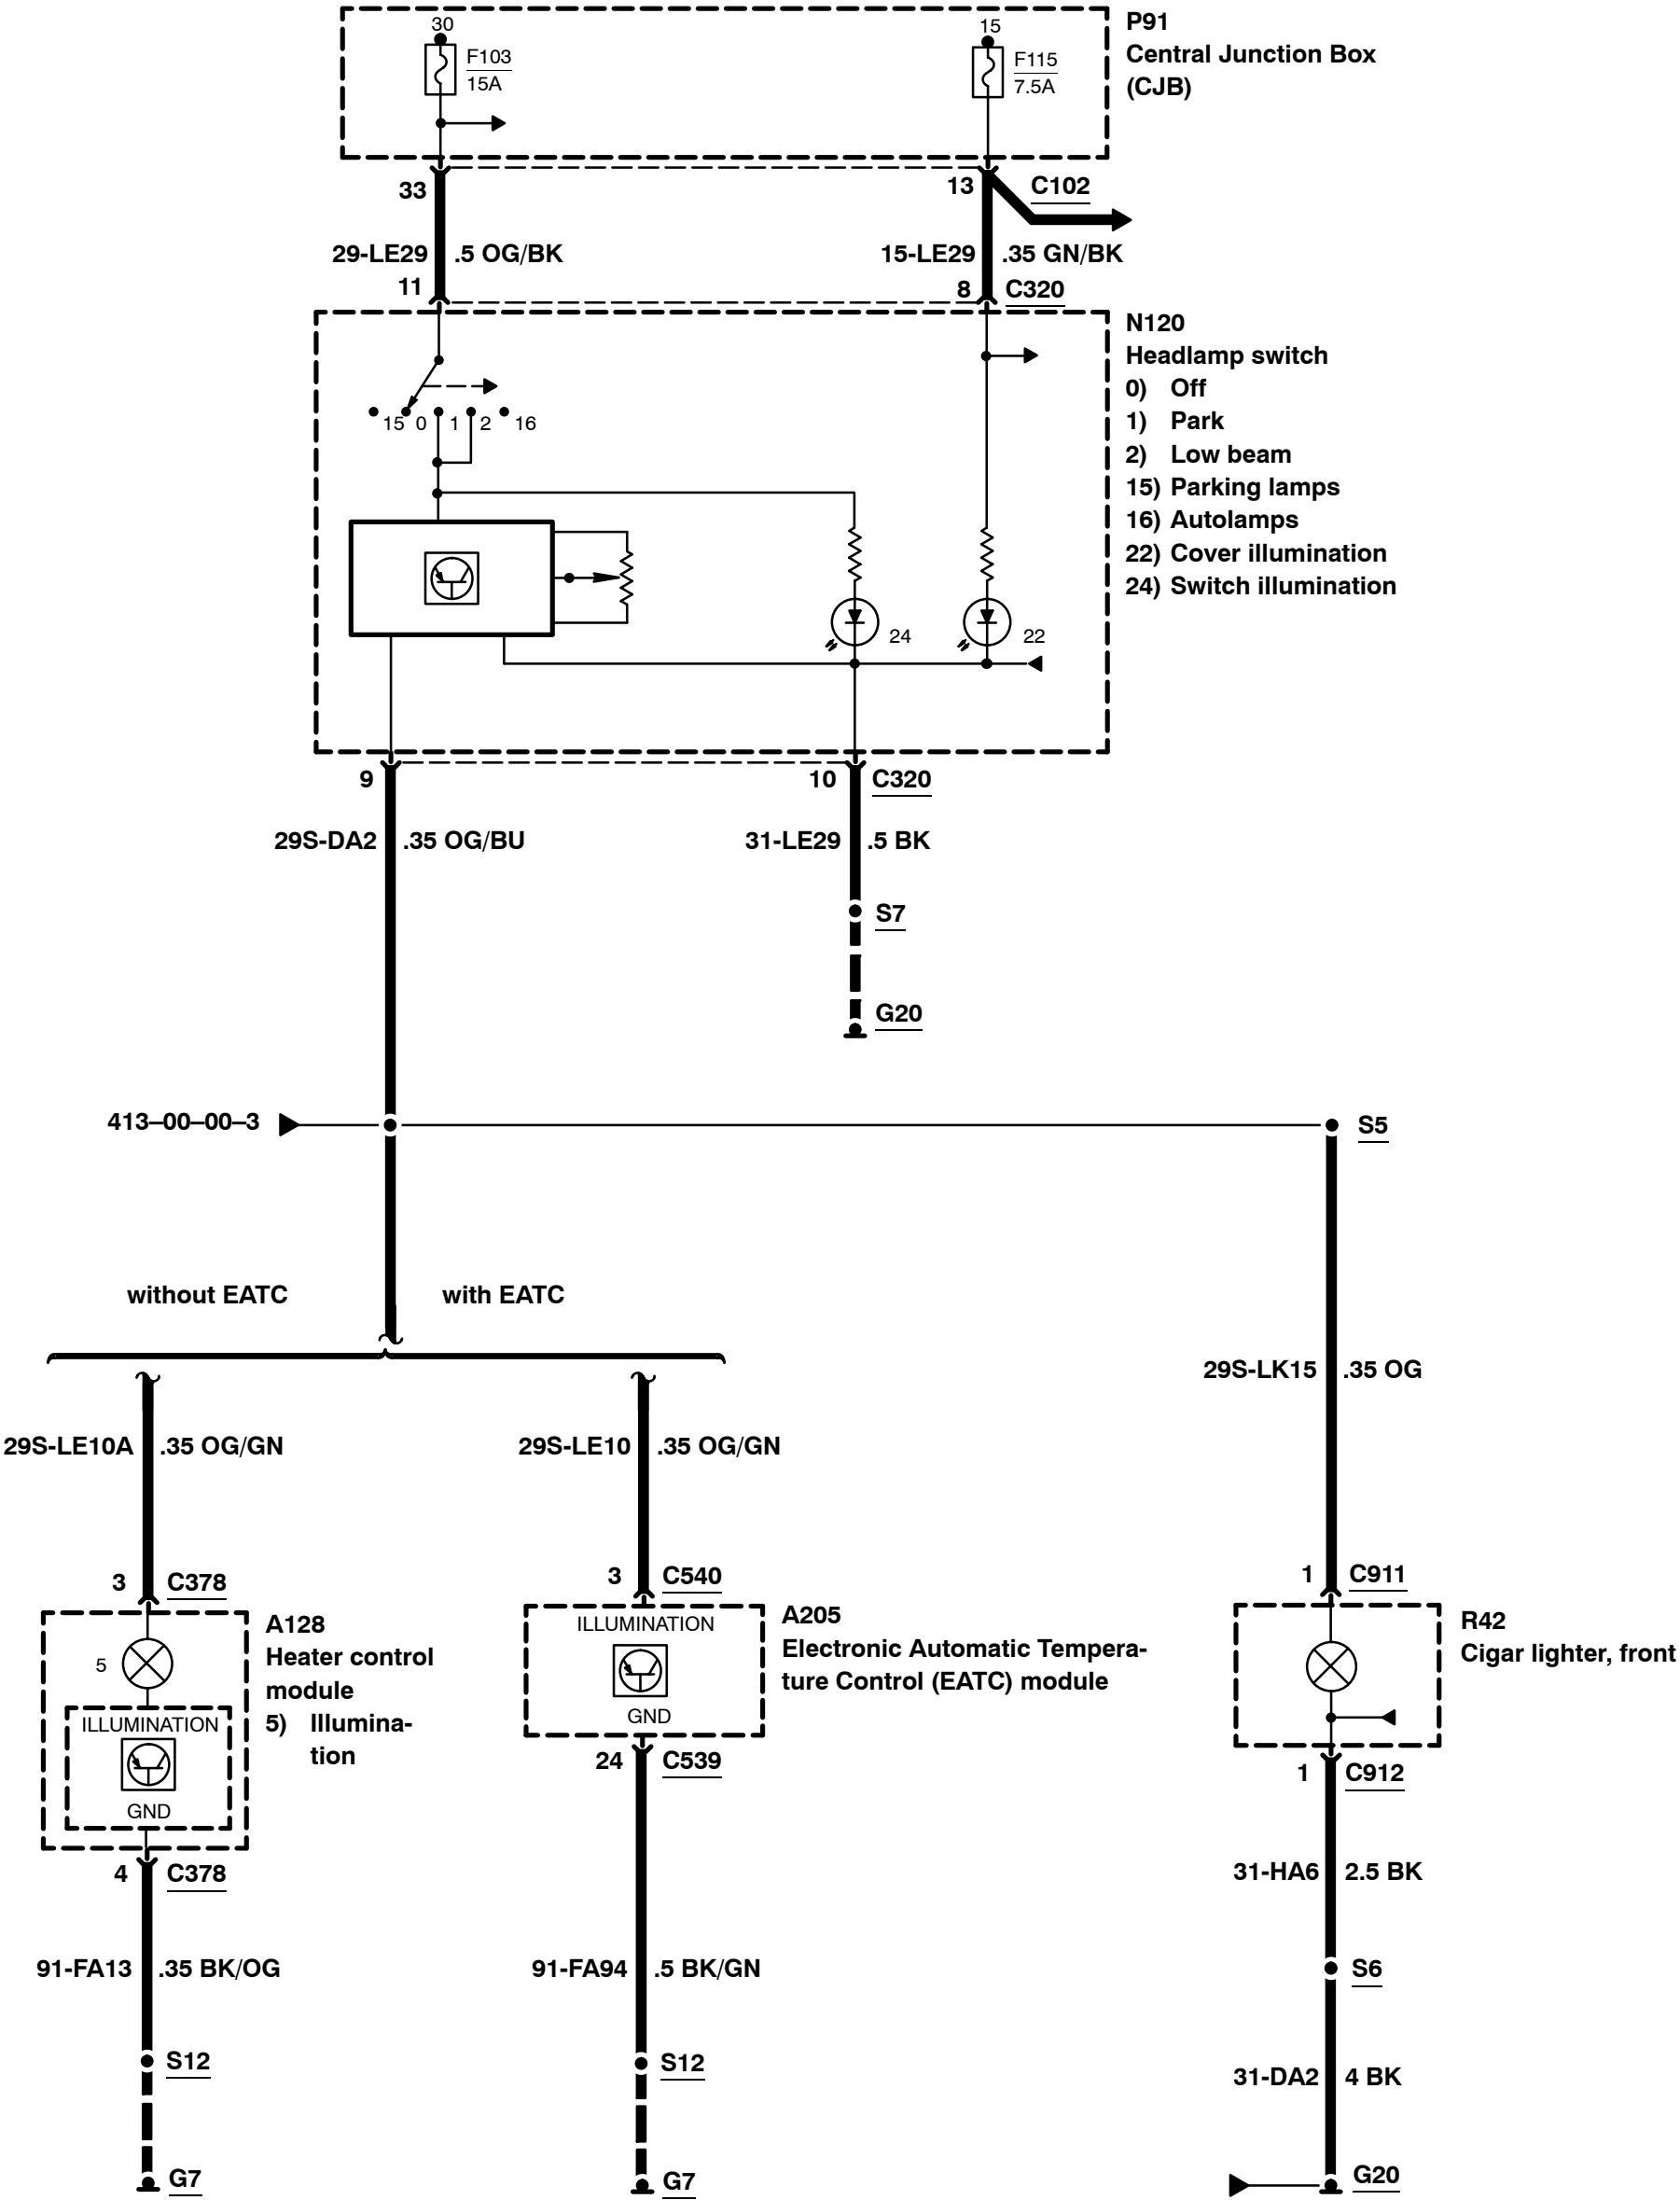



# Instrument Cluster and Panel Illumination – with front power windows

02/2008  
413-00-00-5  
2008.25  
Focus

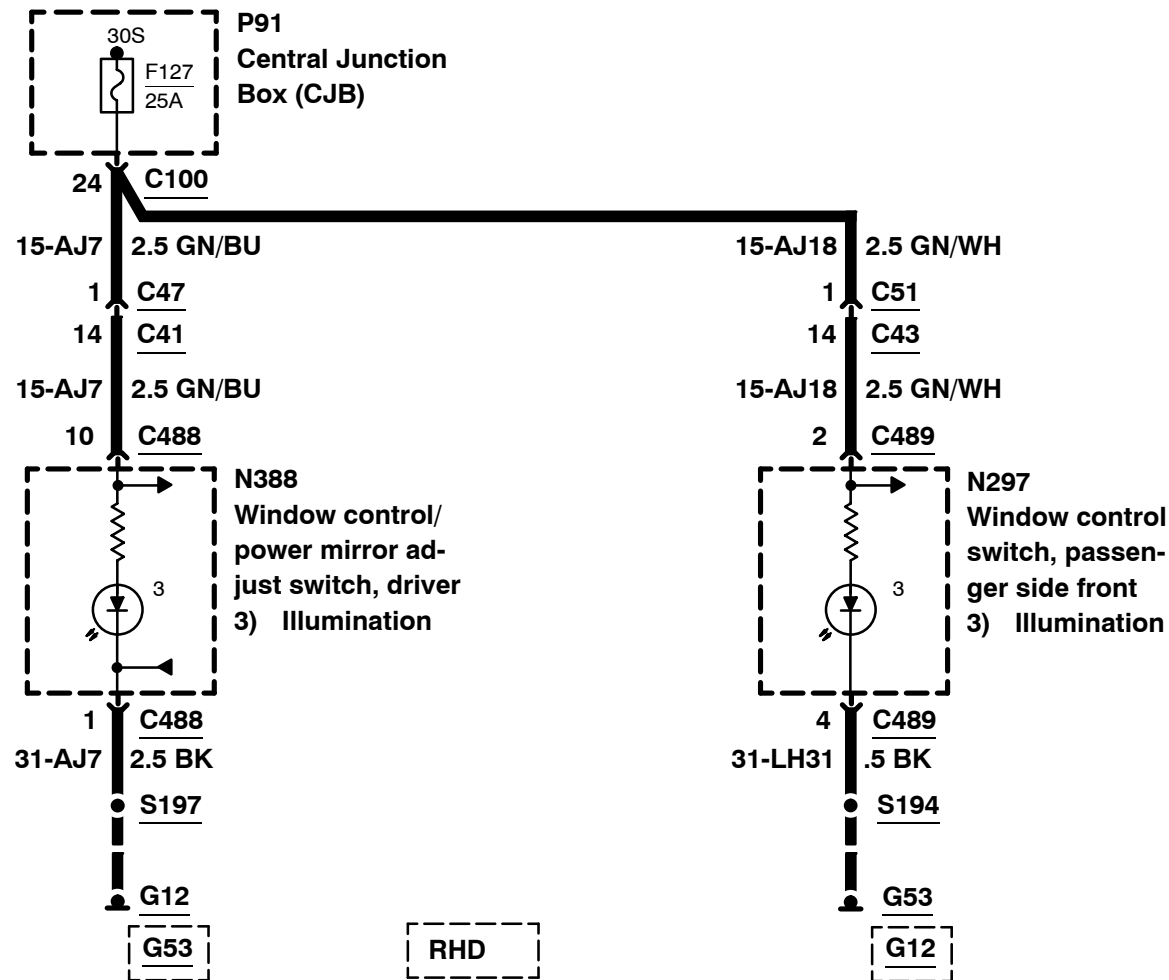




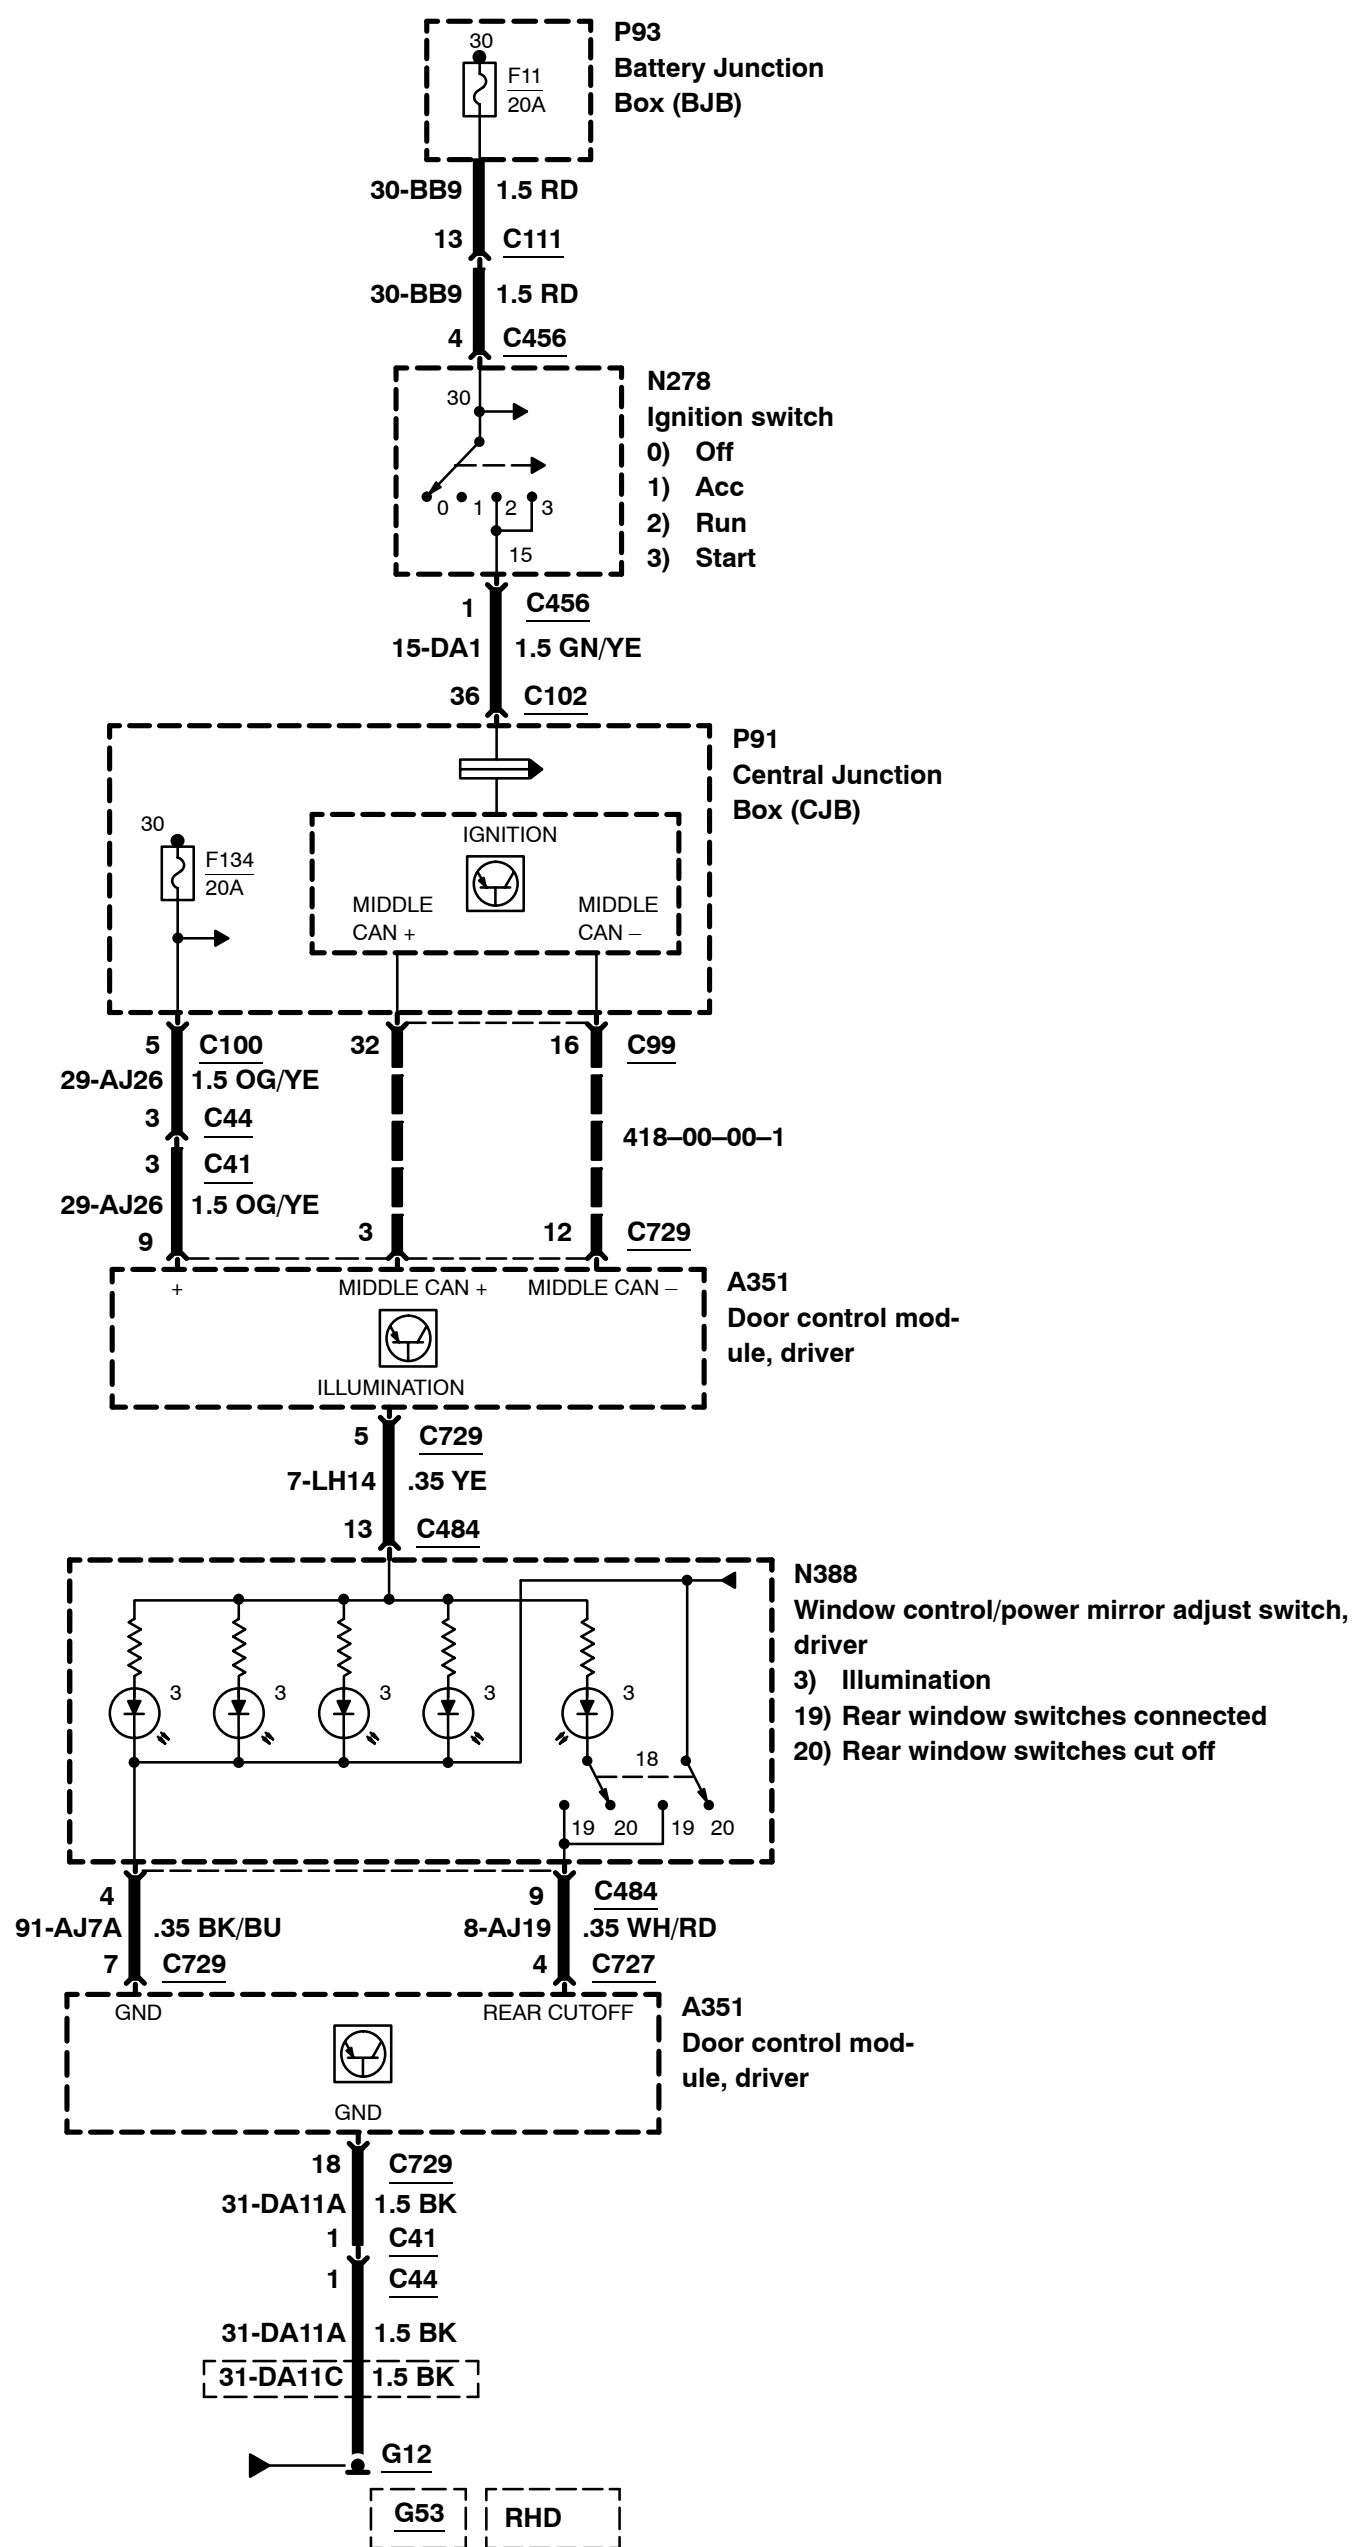


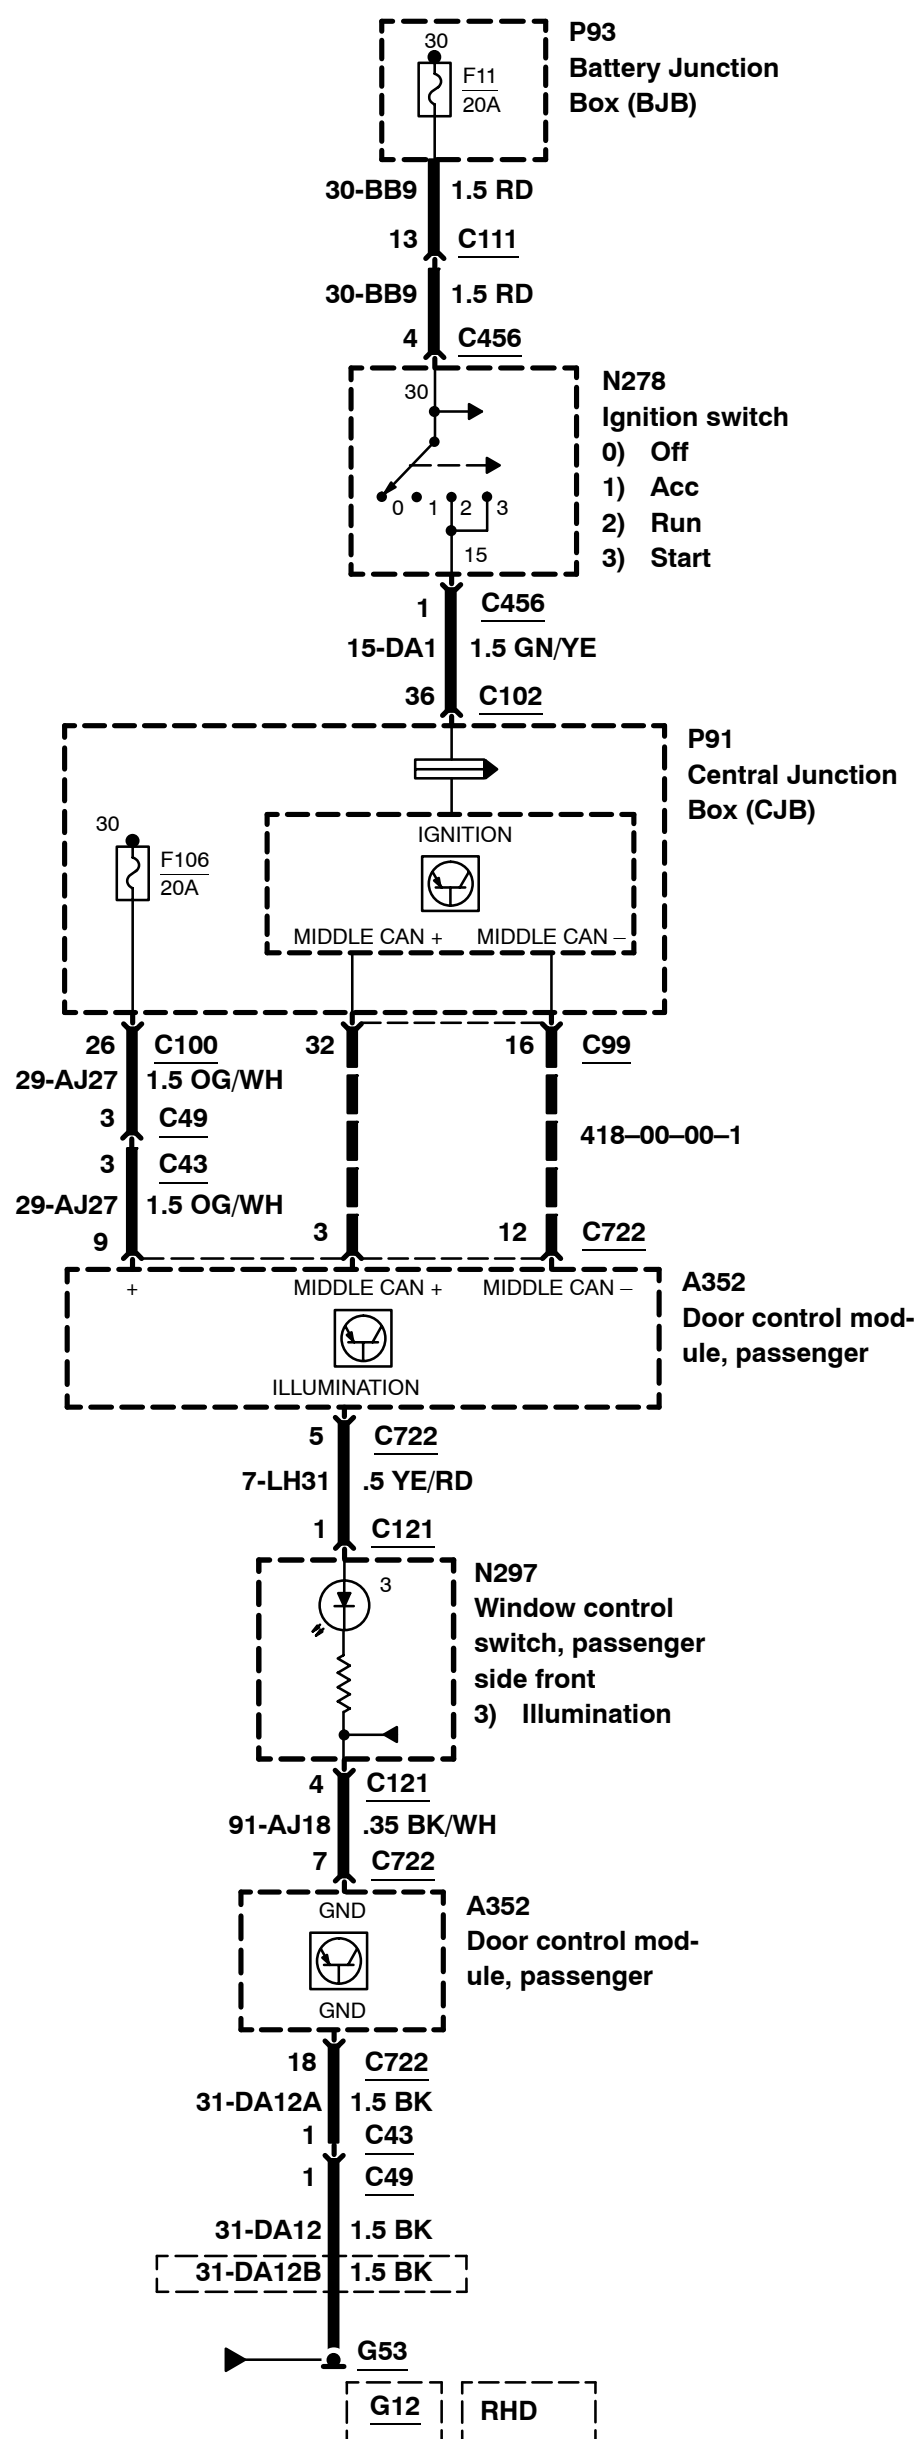

# Instrument Cluster and Panel Illumination – with front and rear power windows


02/2008  
413-00-00-8  
2008.25  
Focus

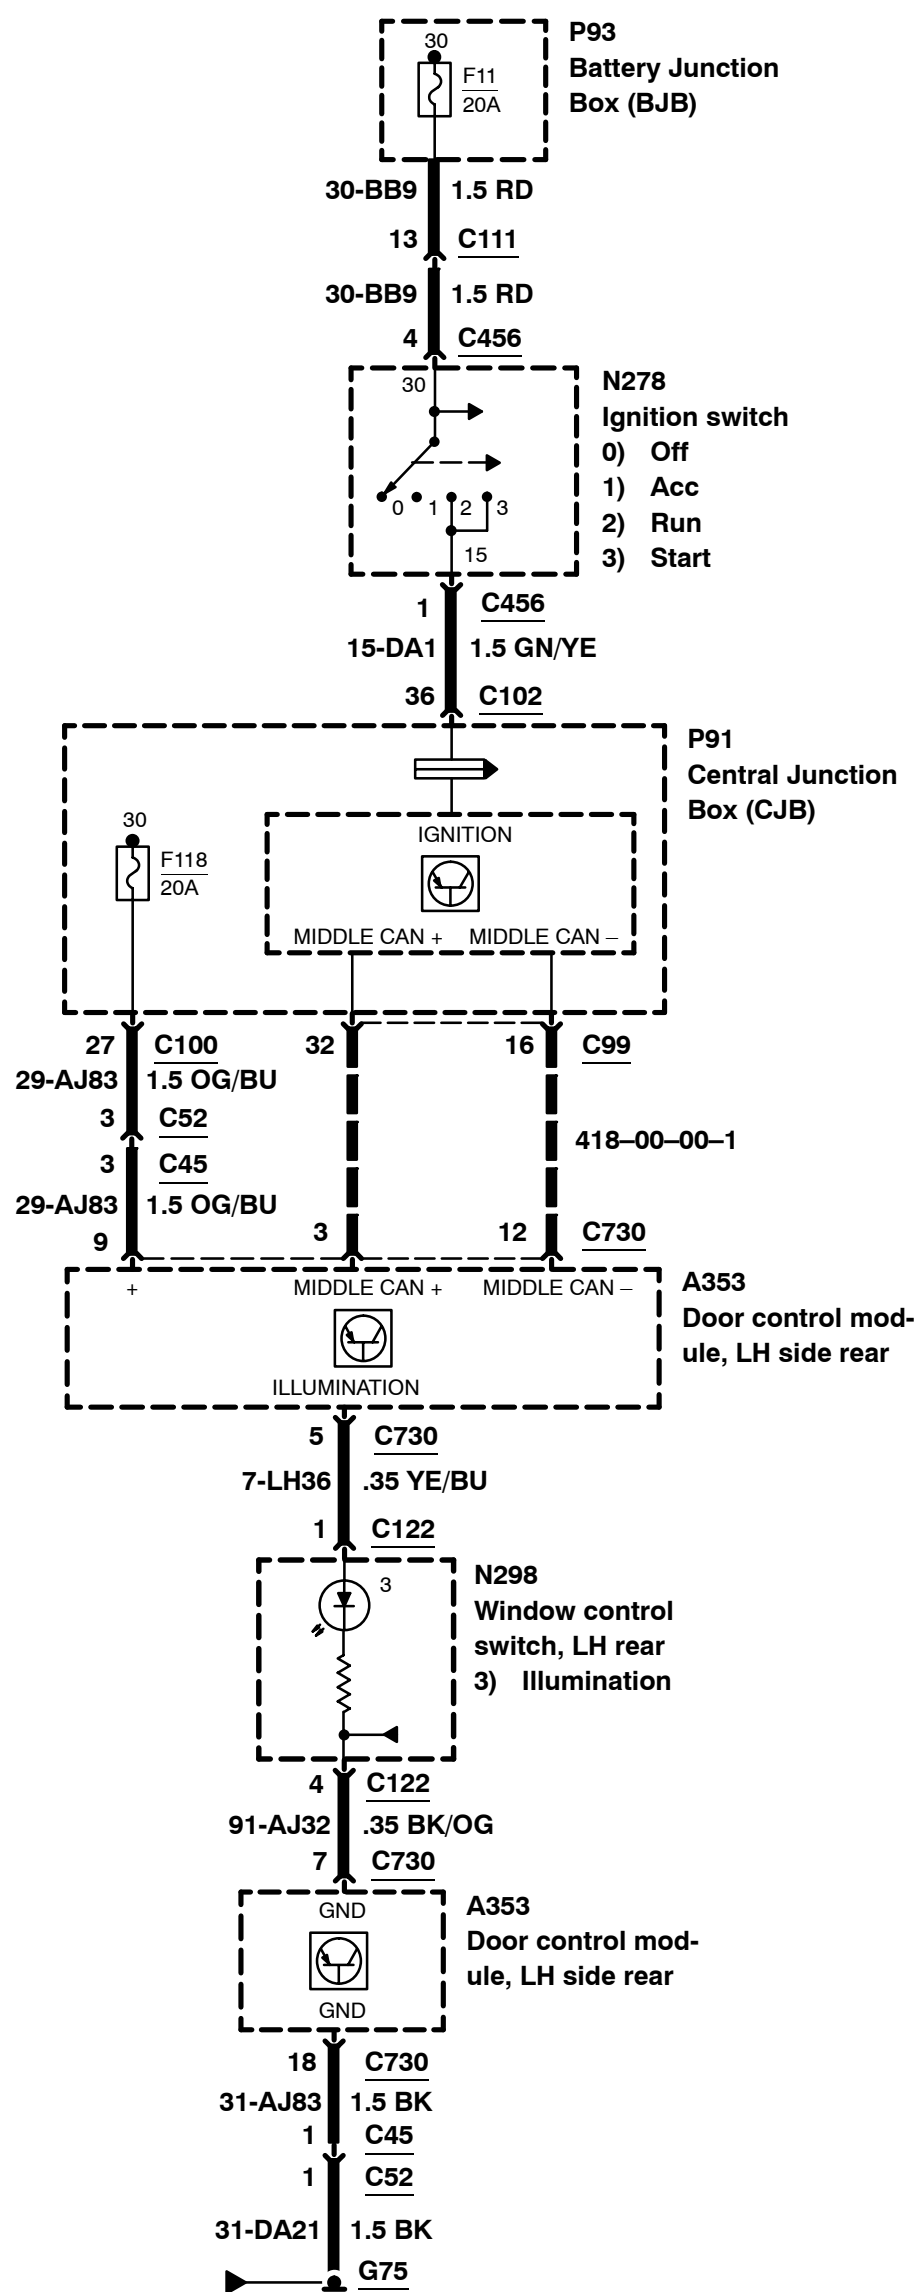

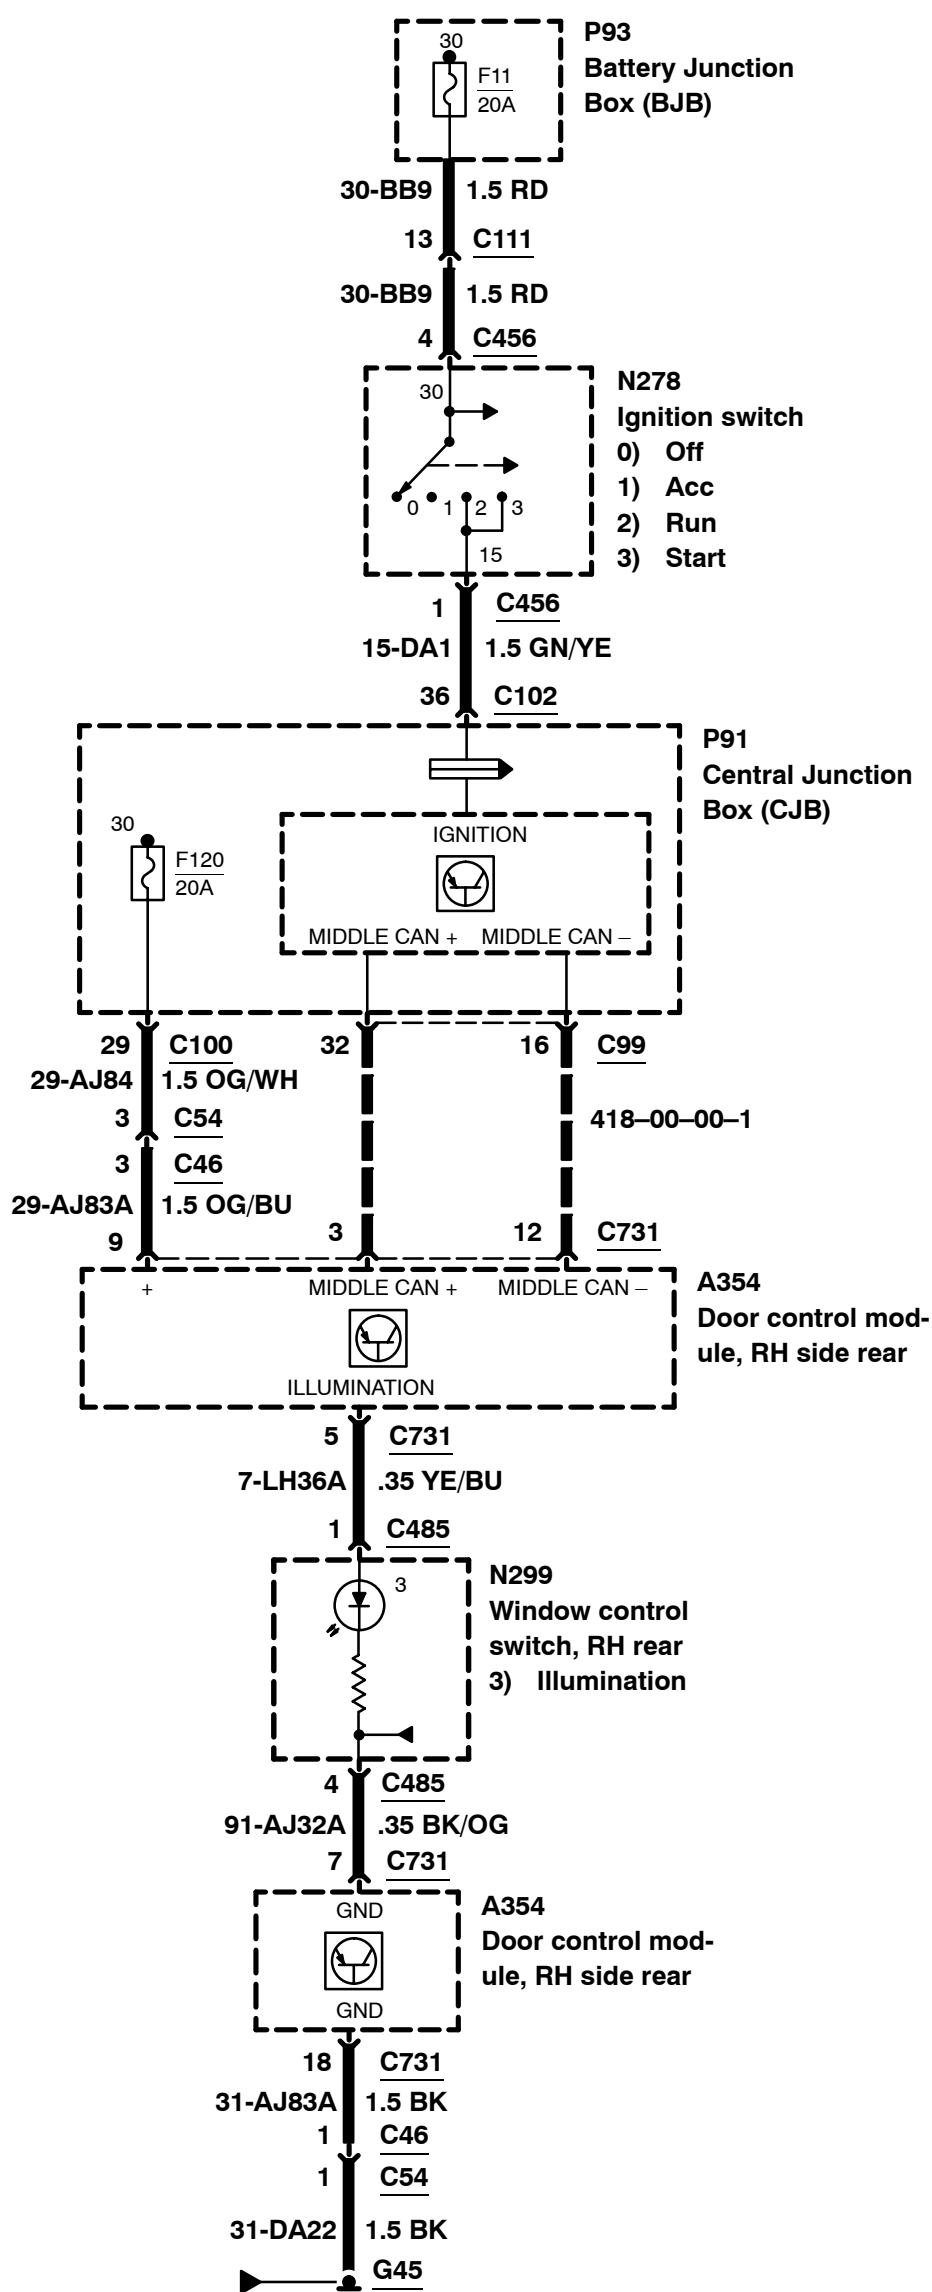


# Instrument Cluster and Panel Illumination

02/2008  
413-00-00-10  
2008.25  
Focus

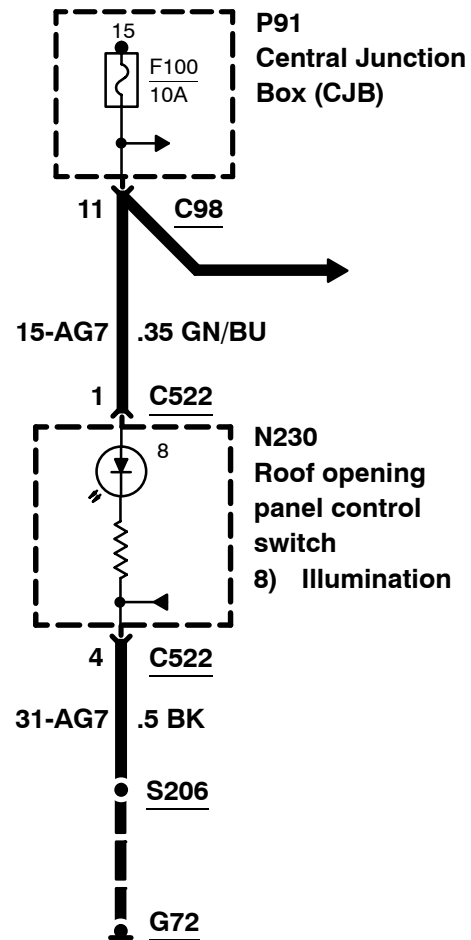


# Instrument Cluster

02/2008  
413-01-00-1  
2008.25  
Focus

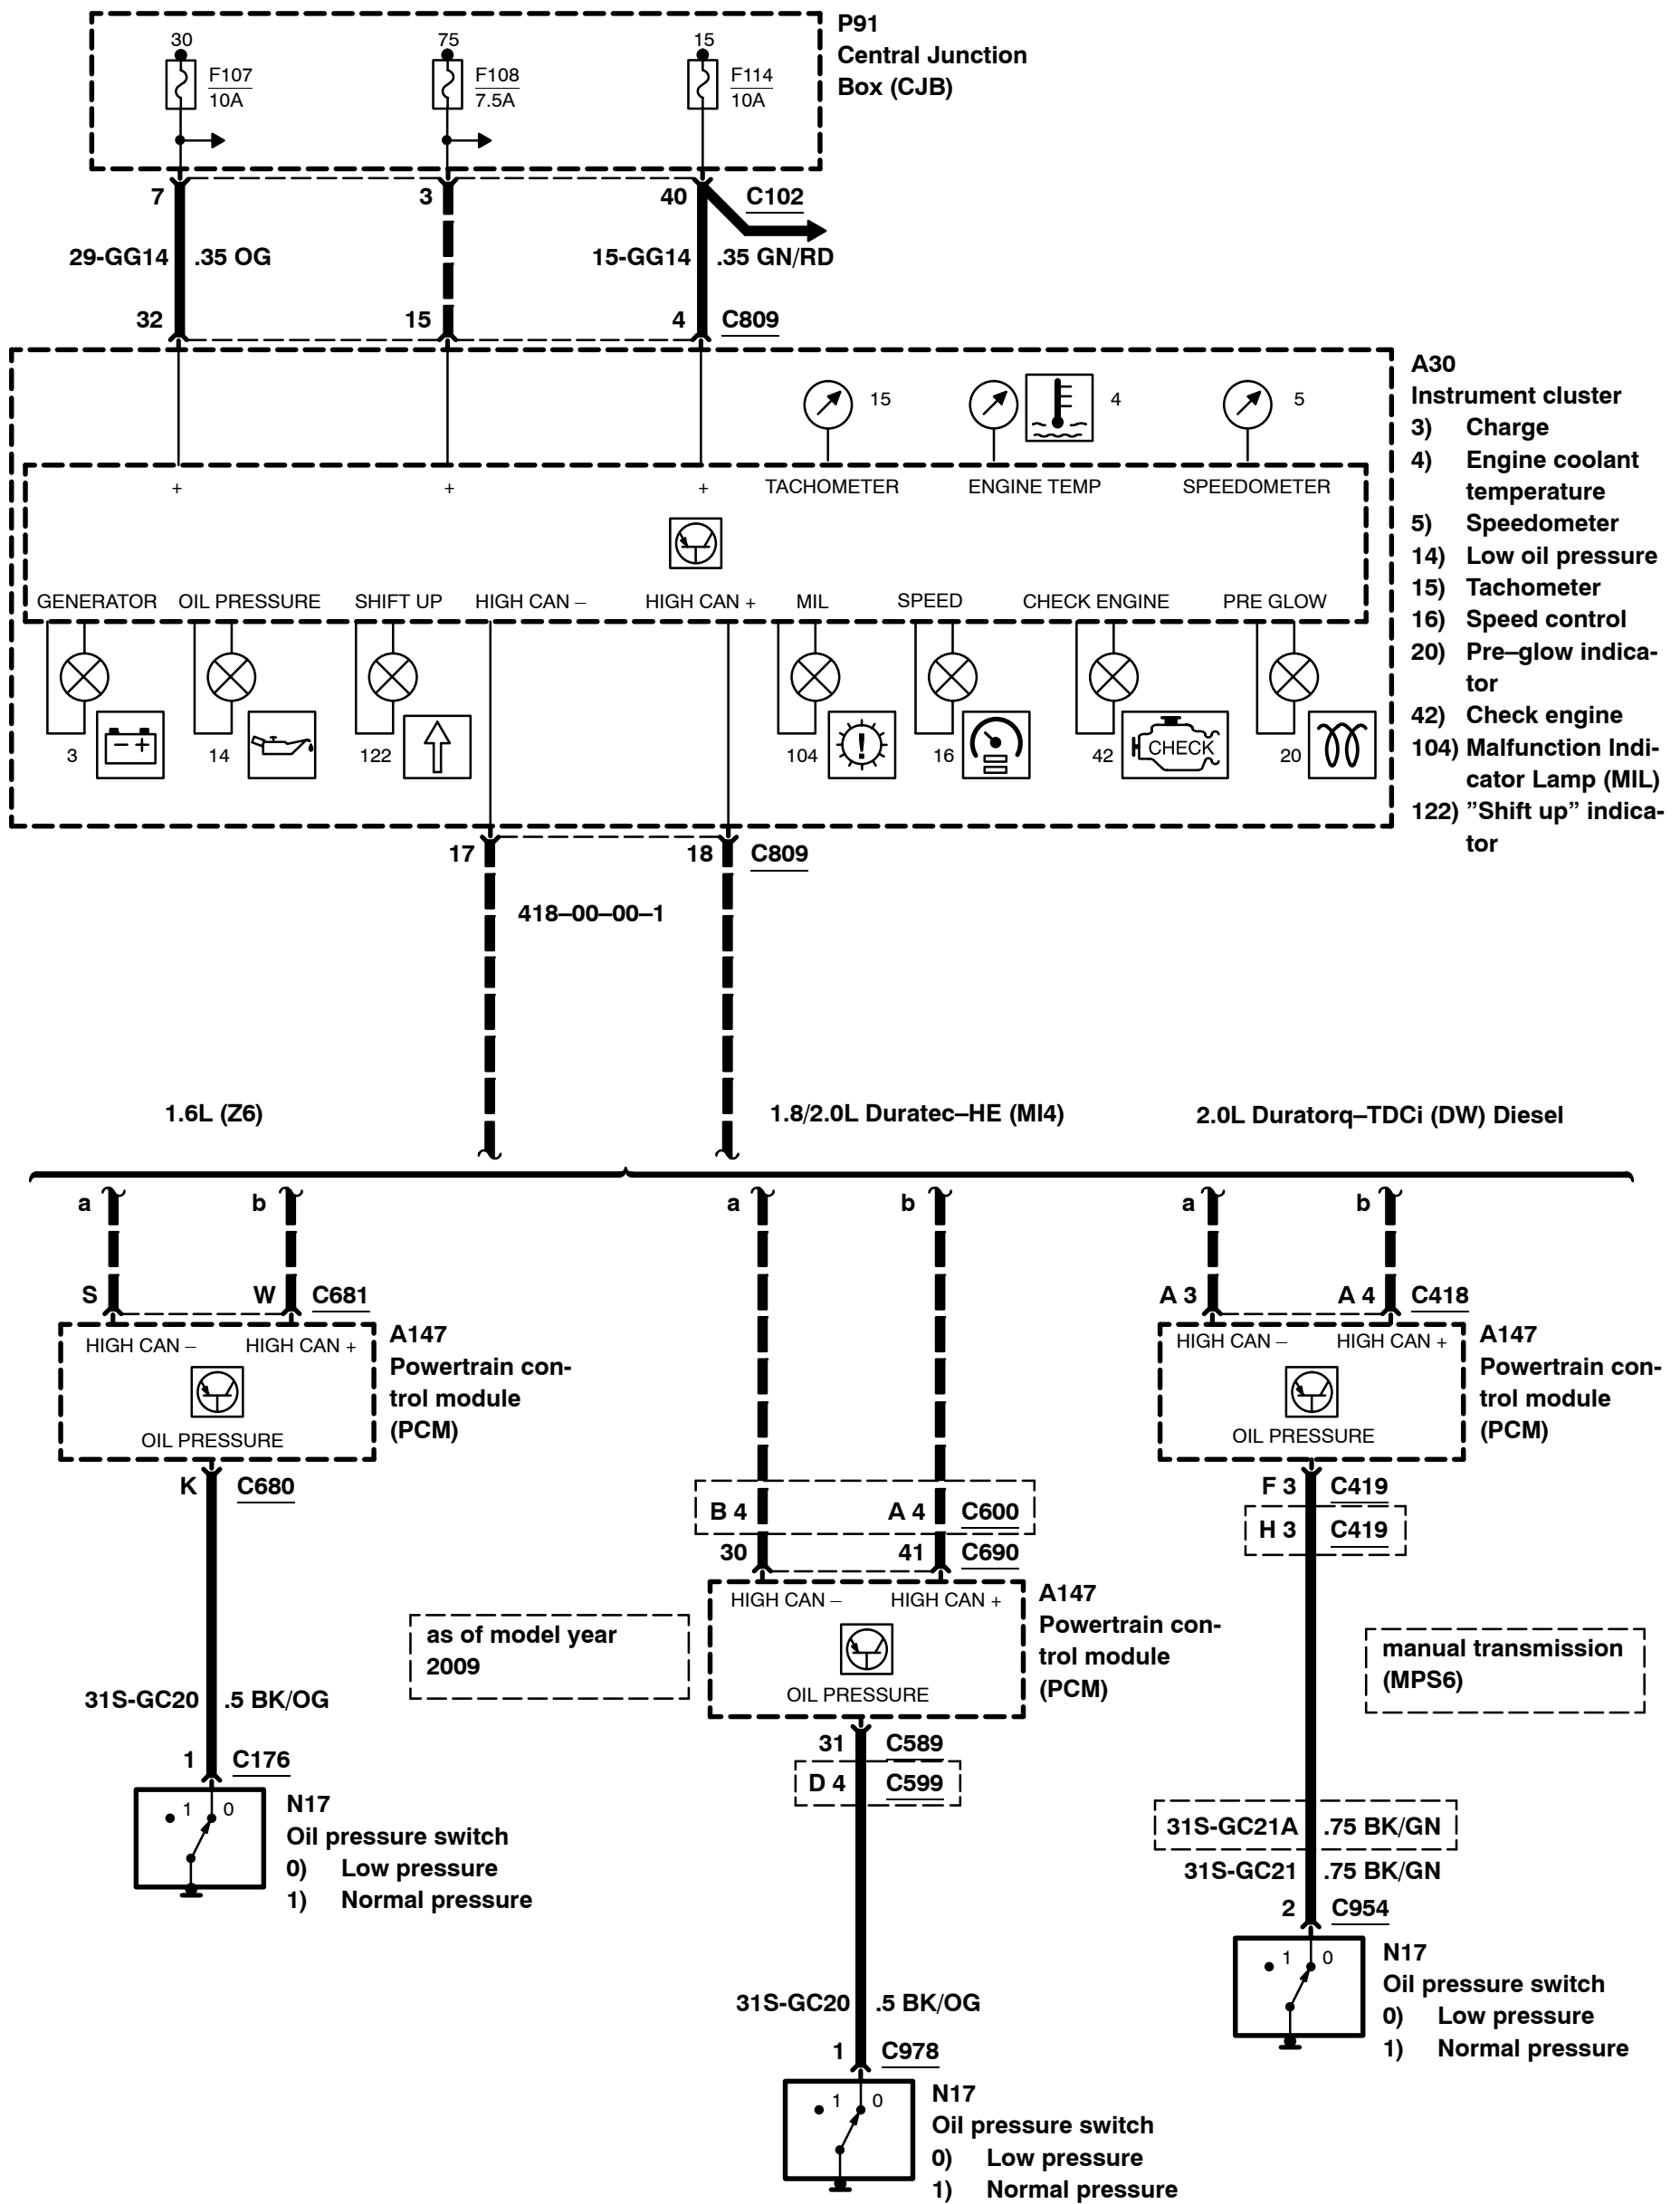




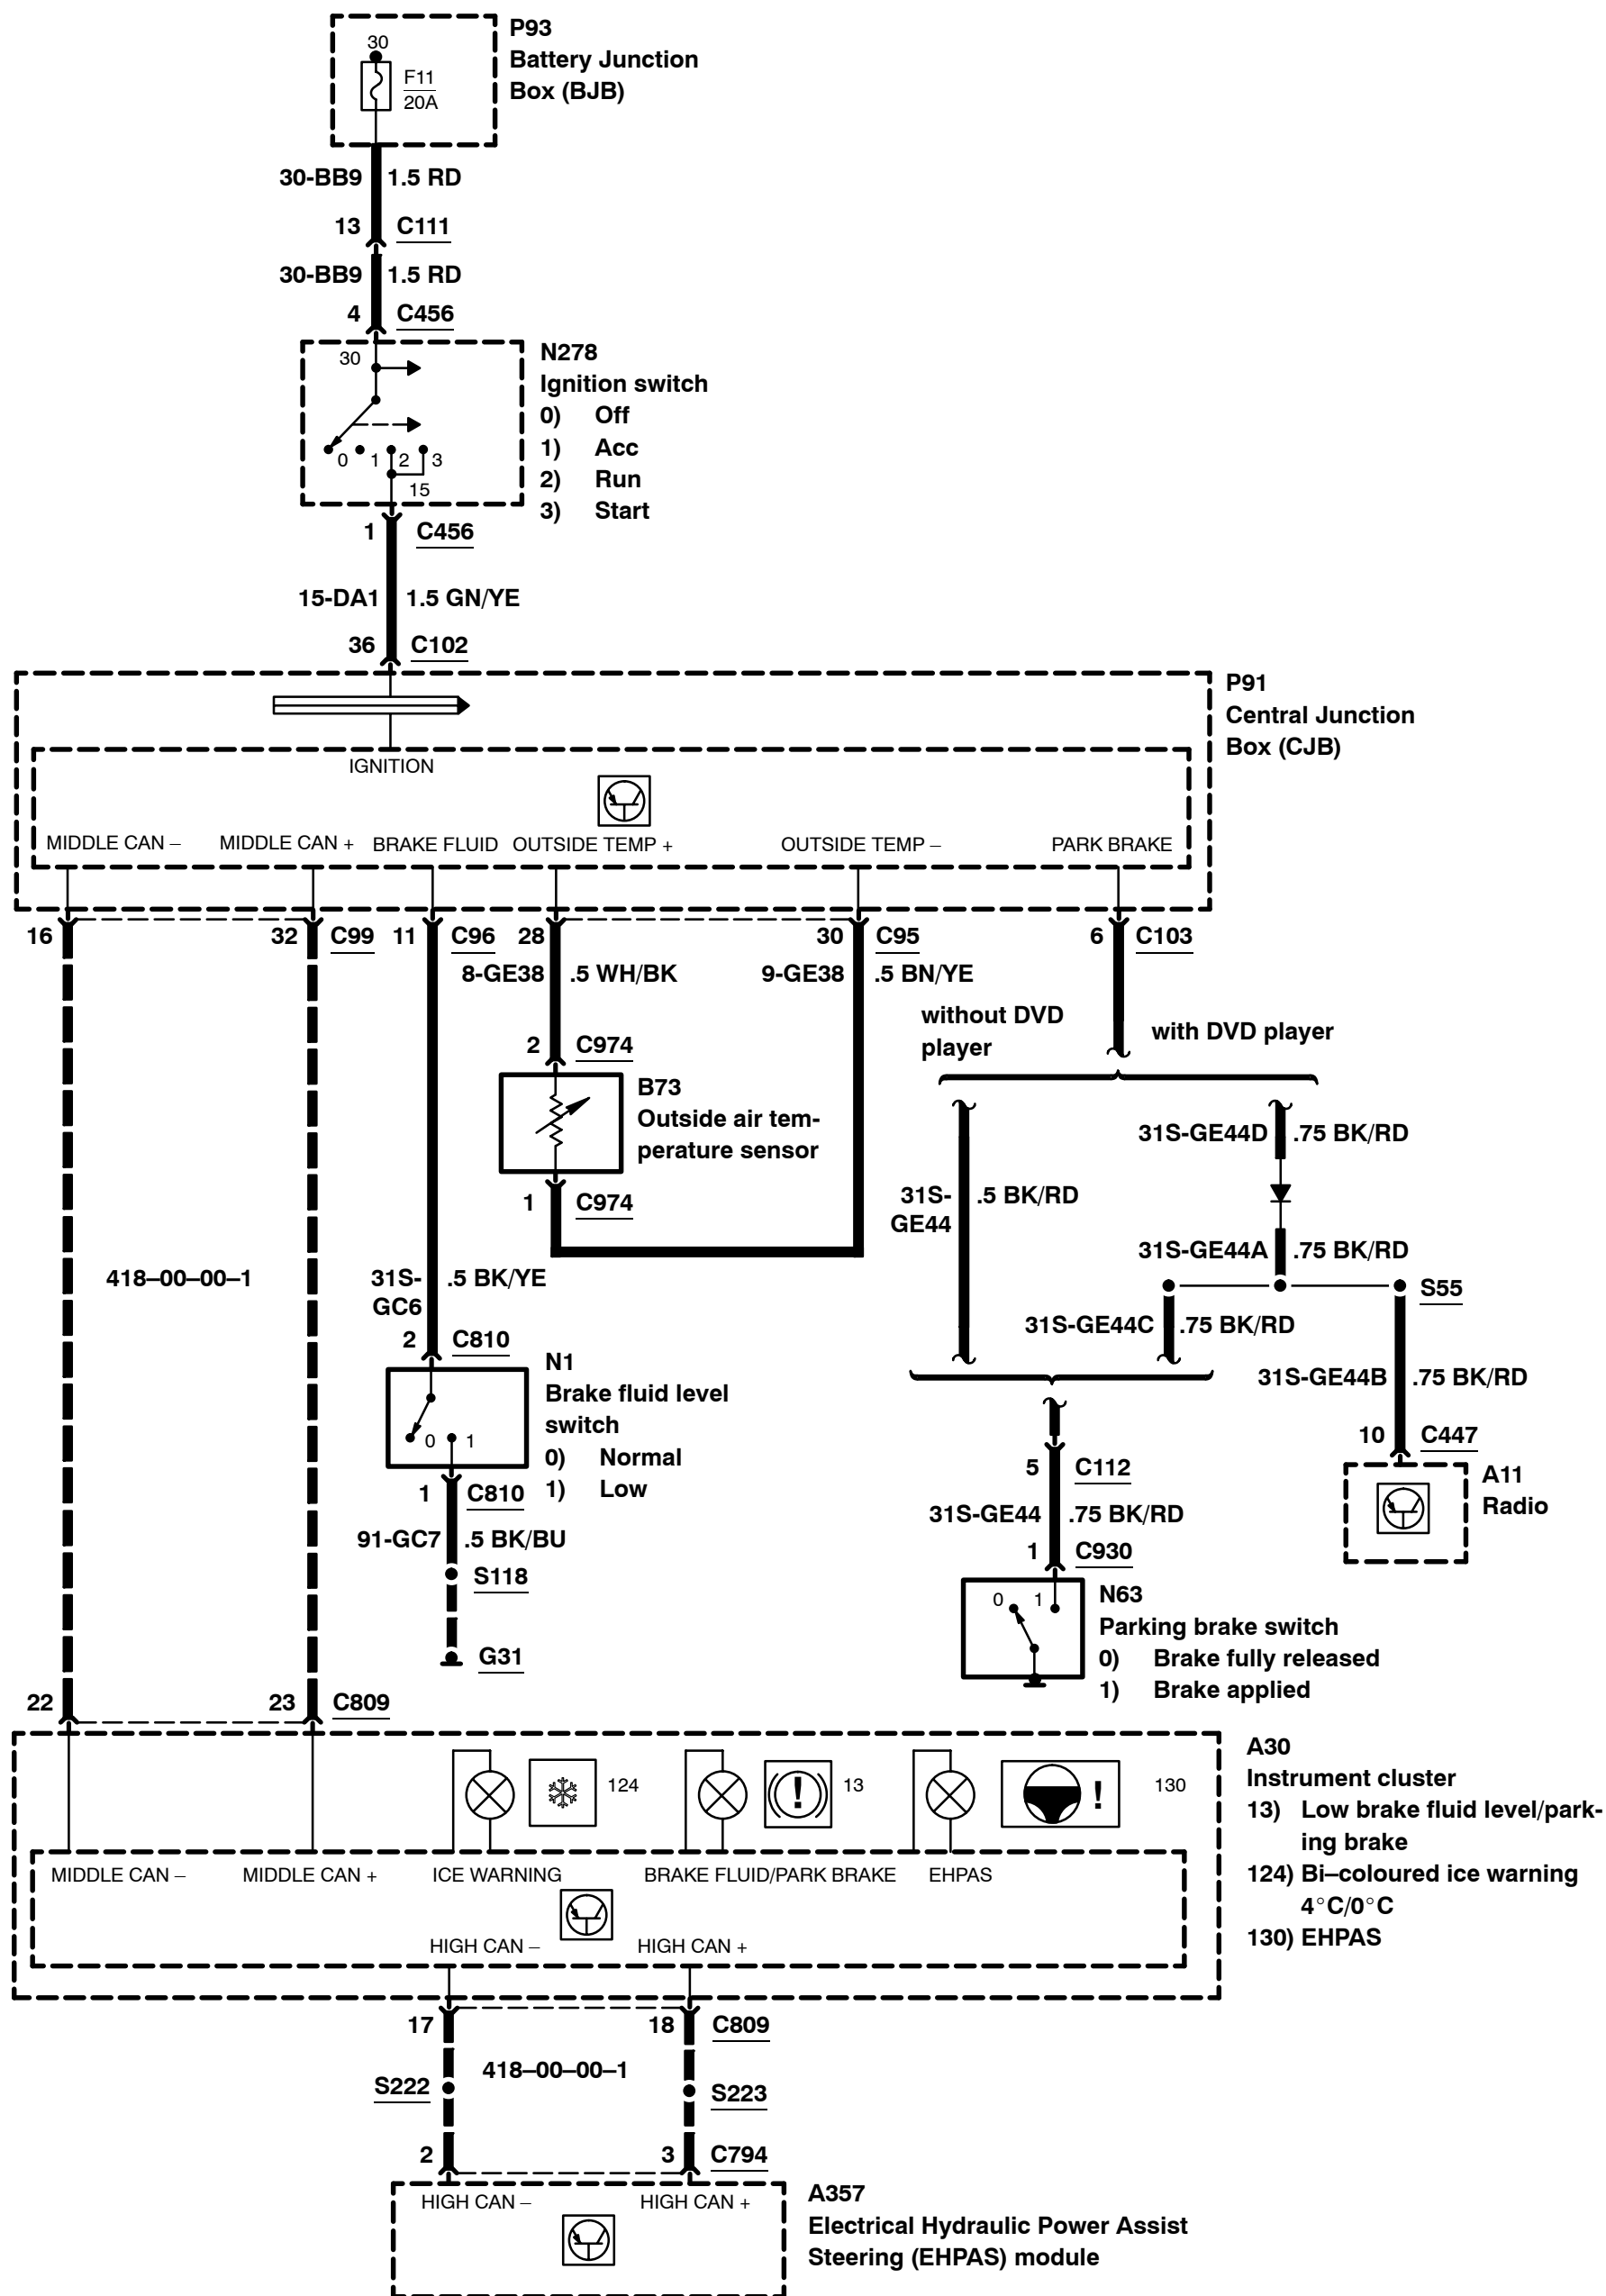

# Instrument Cluster


02/2008  
413-01-00-3  
2008.25  
Focus

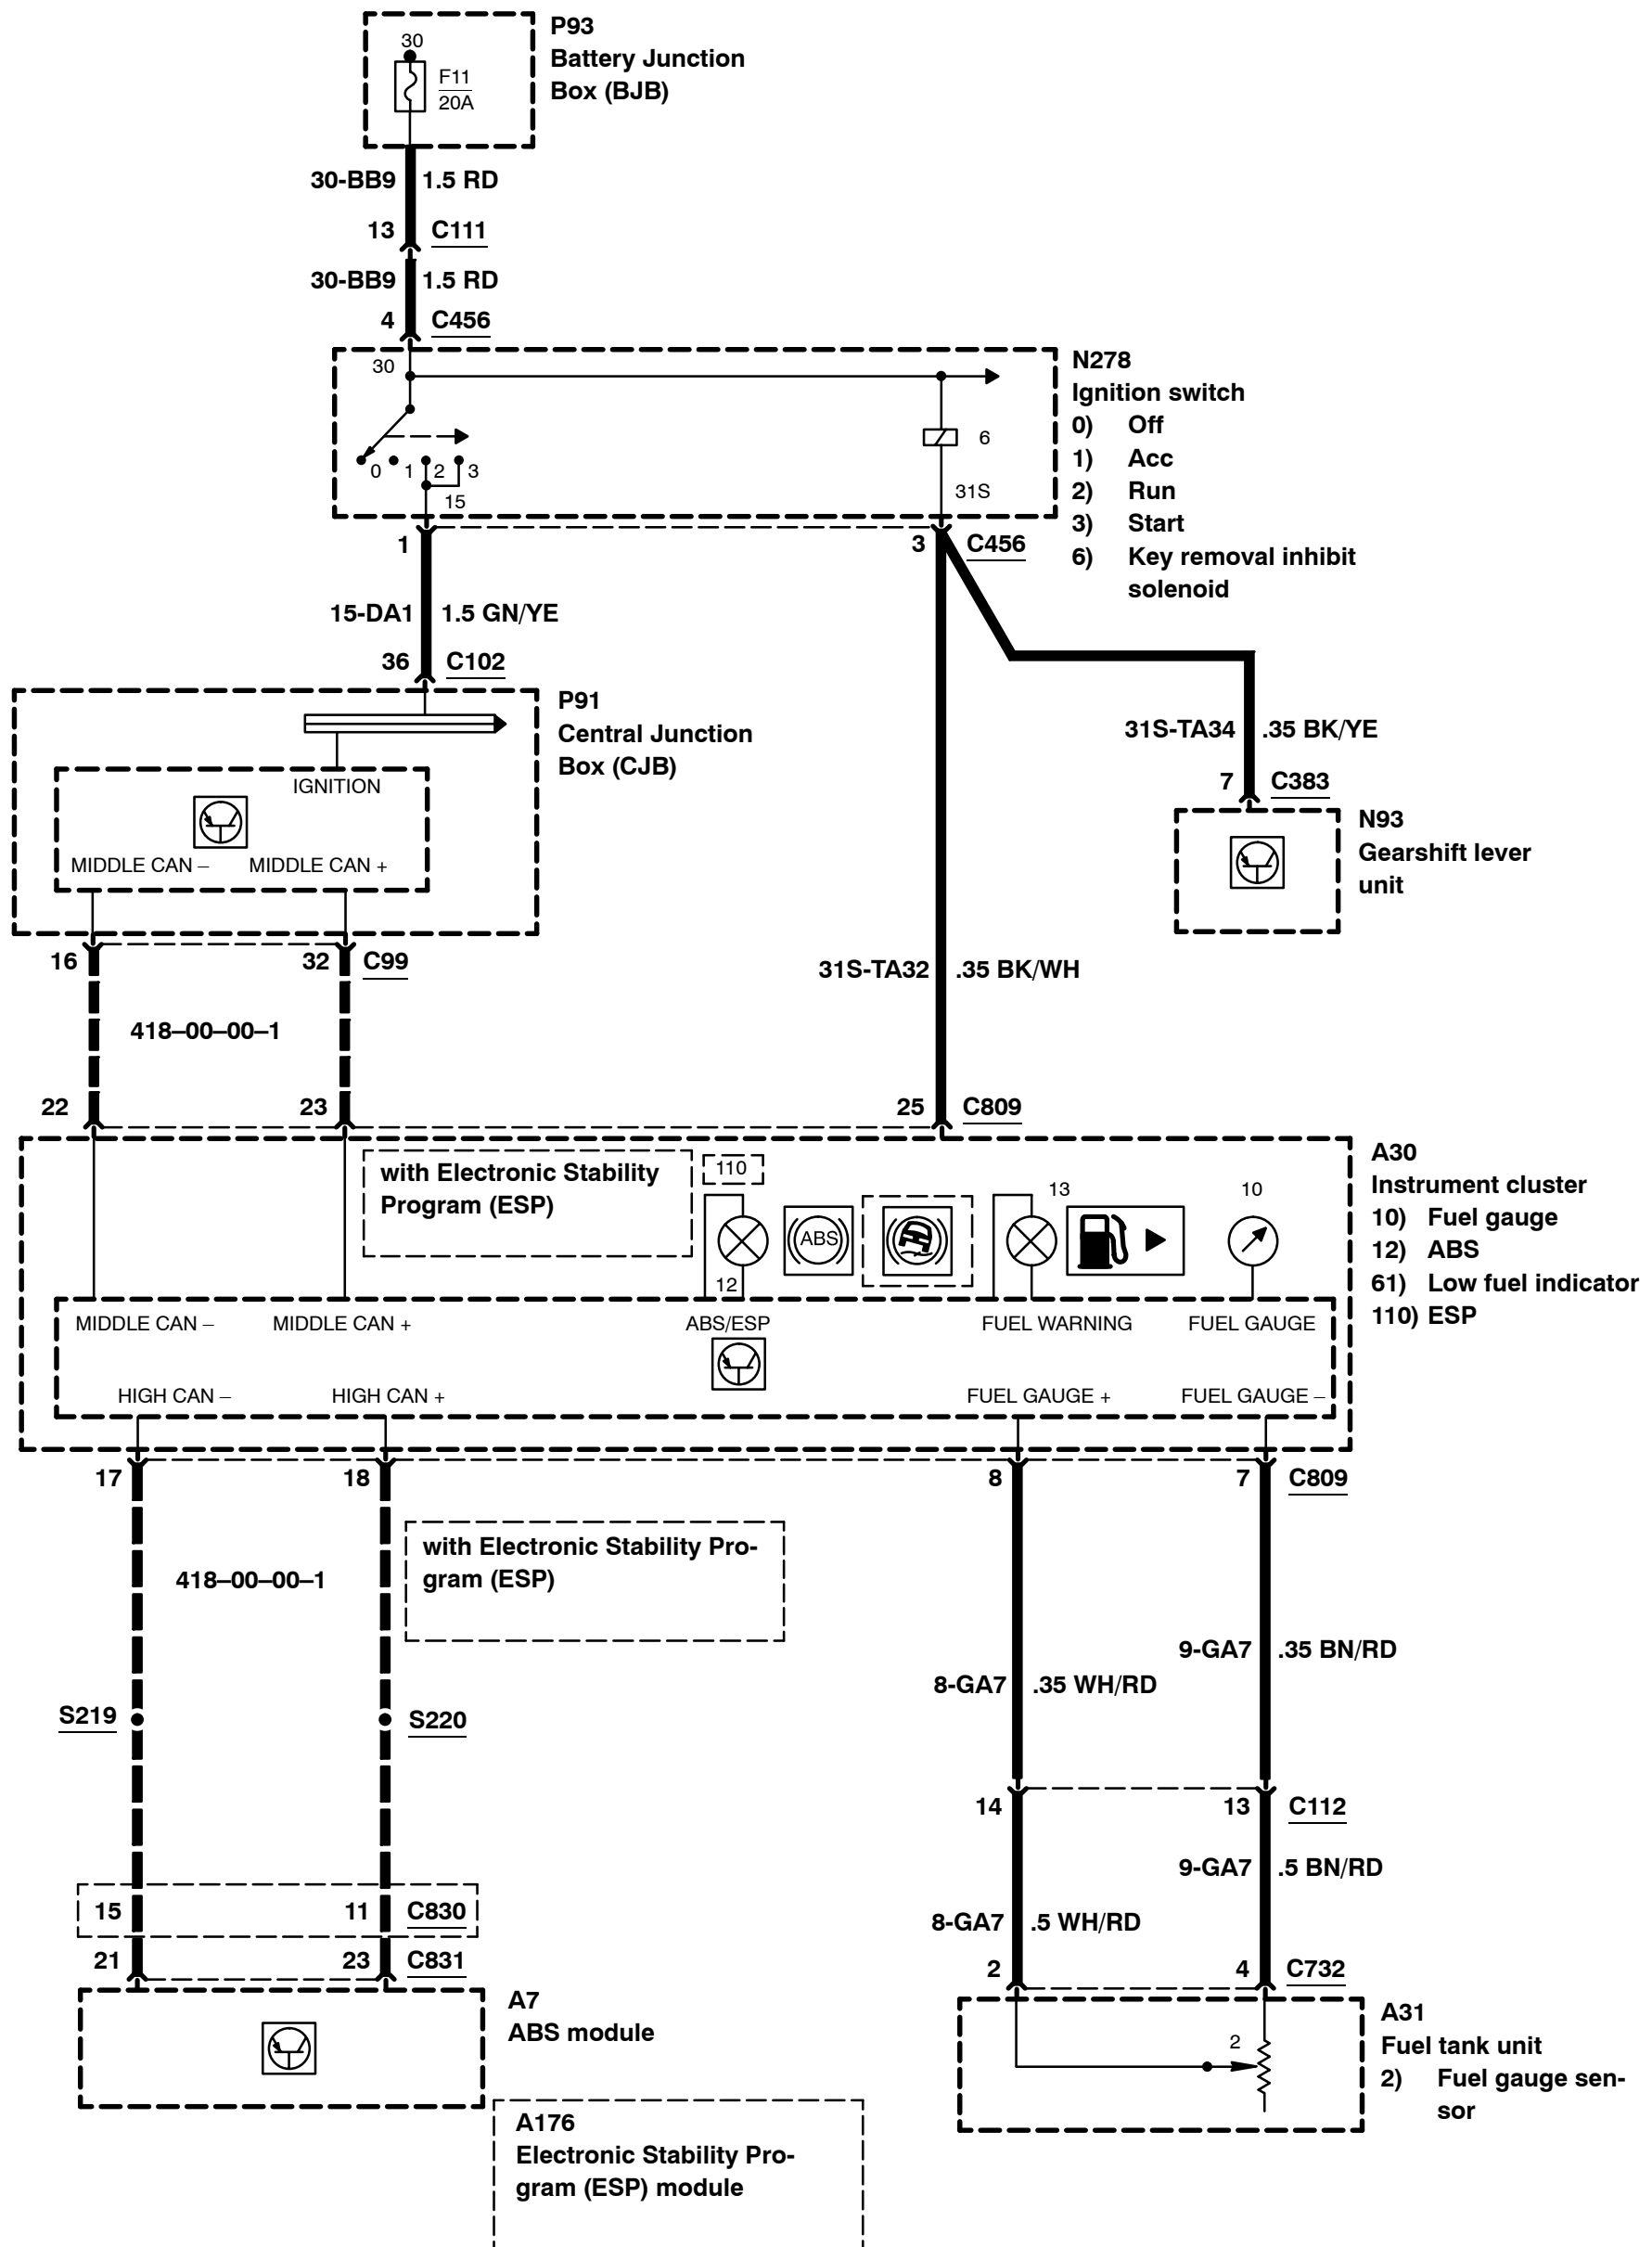




# Instrument Cluster


02/2008  
413-01-00-4  
2008.25  
Focus

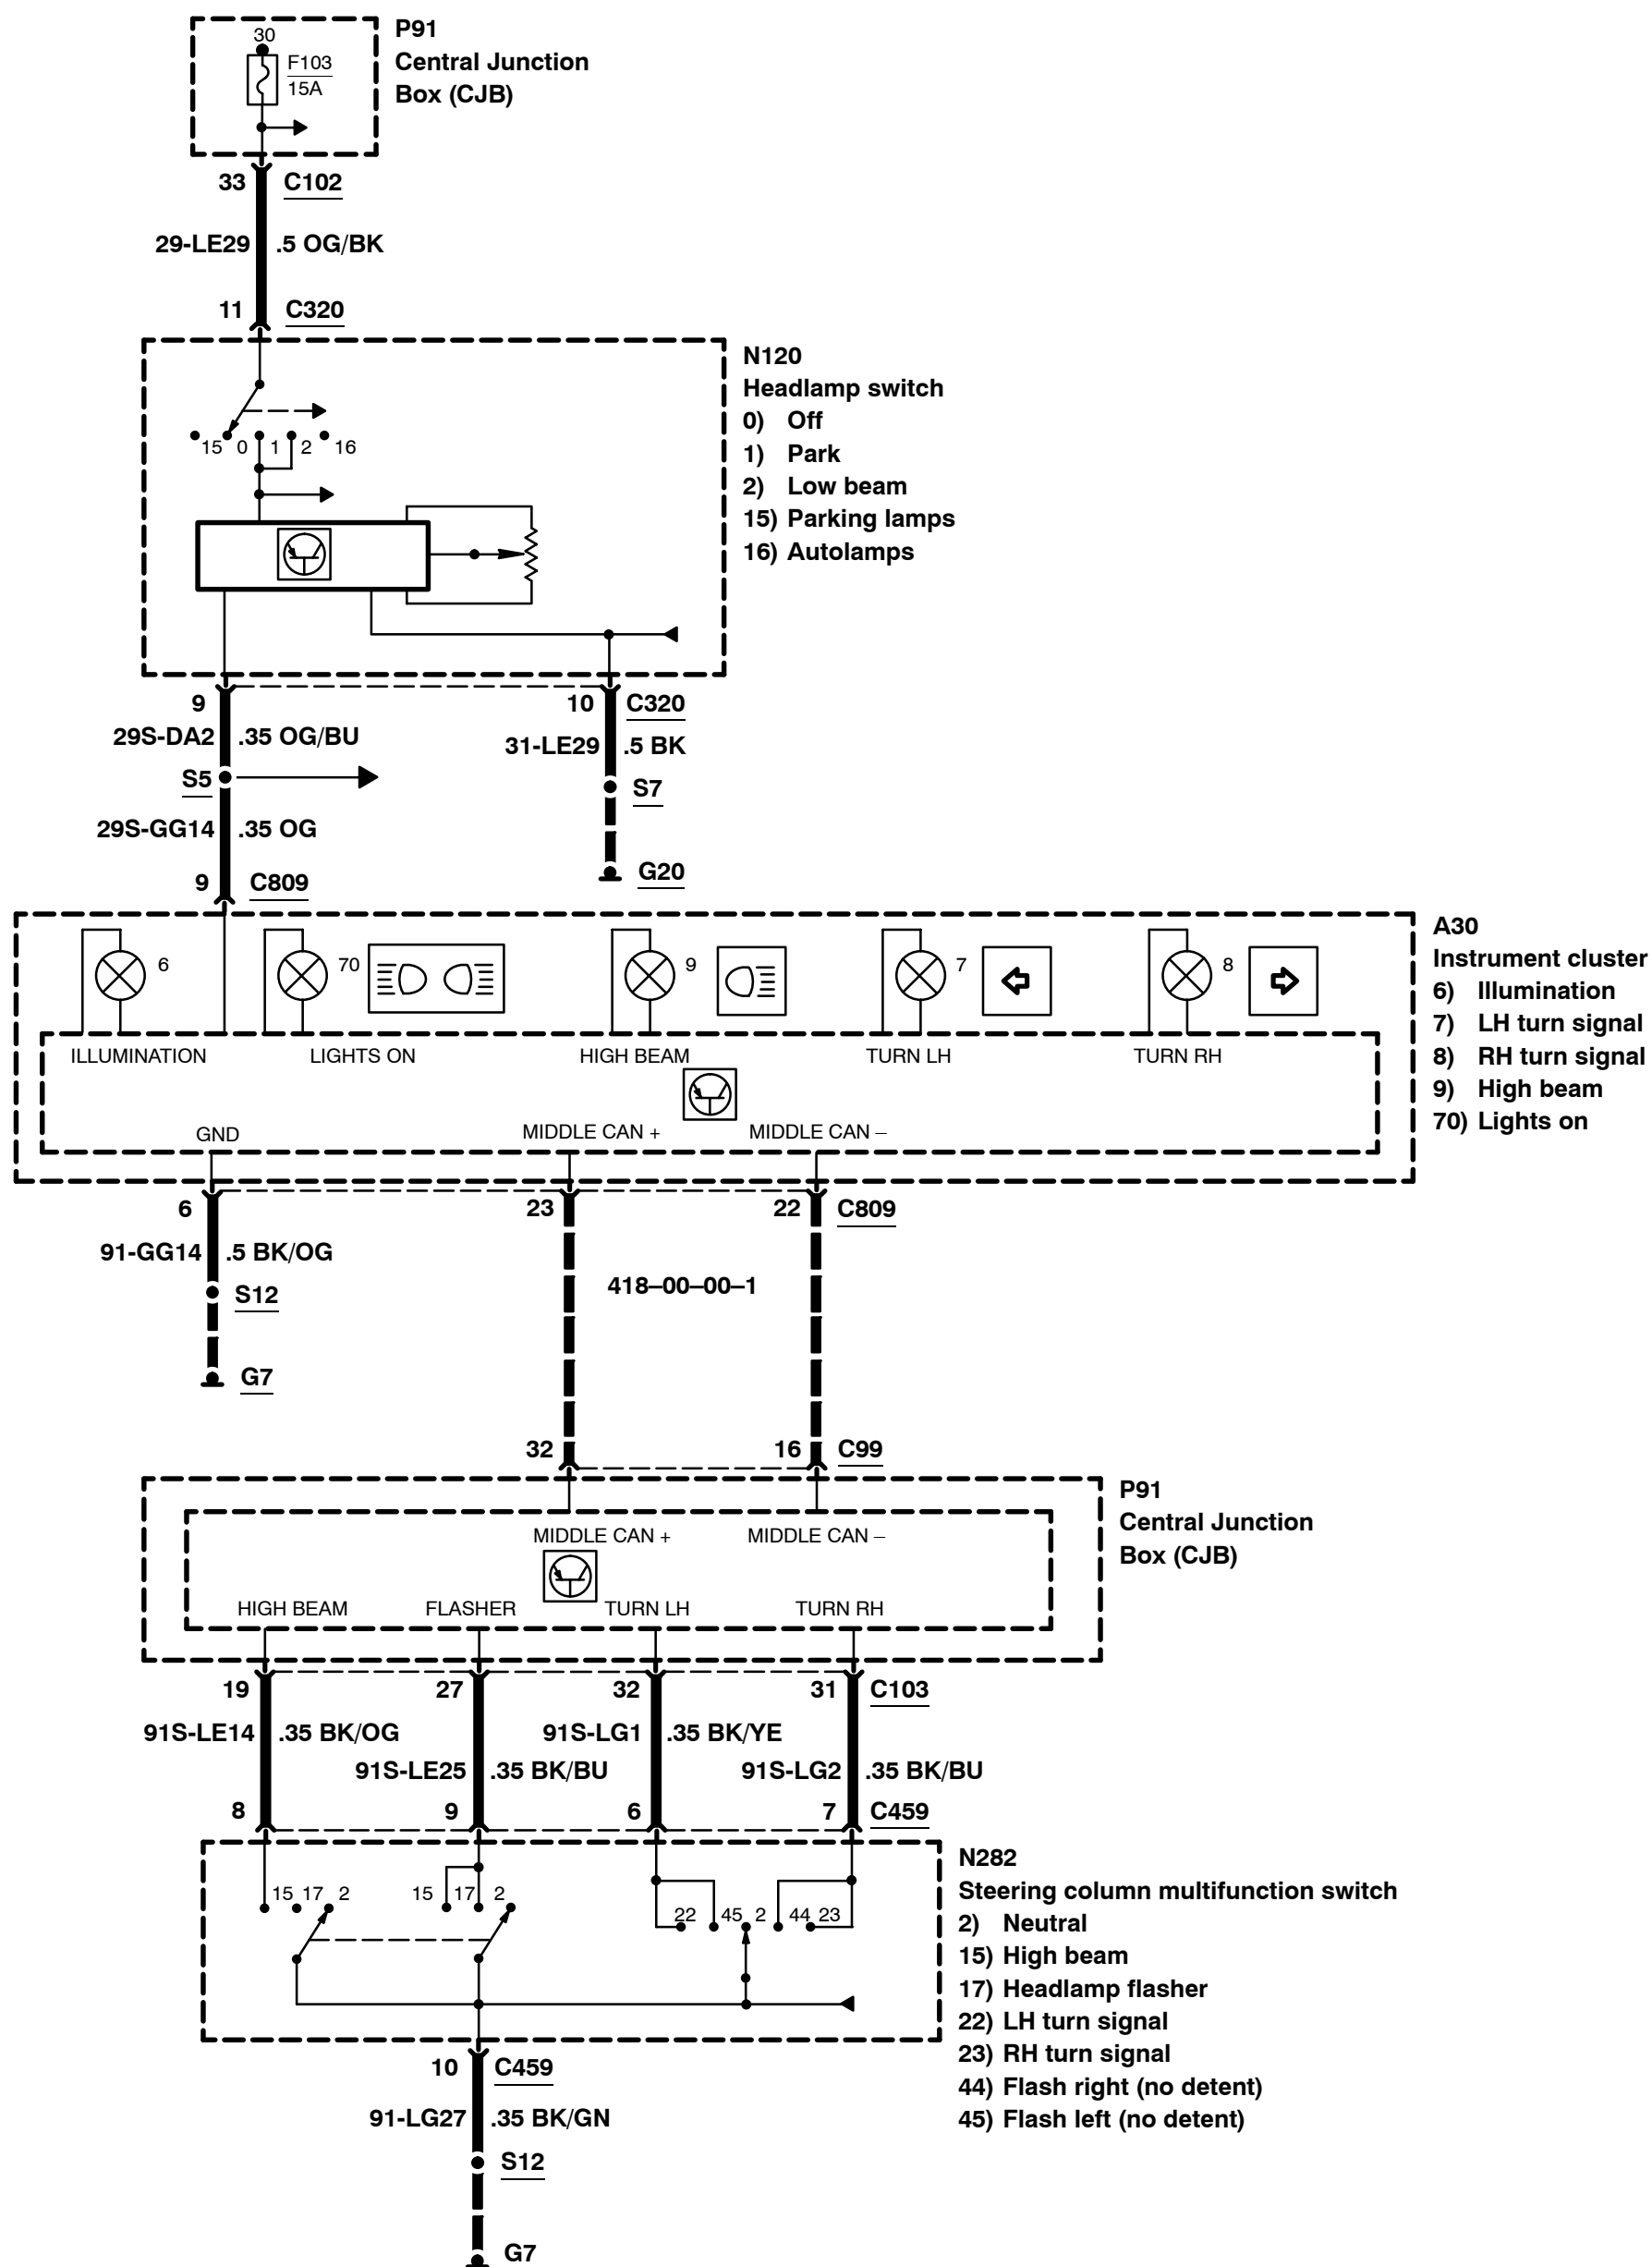

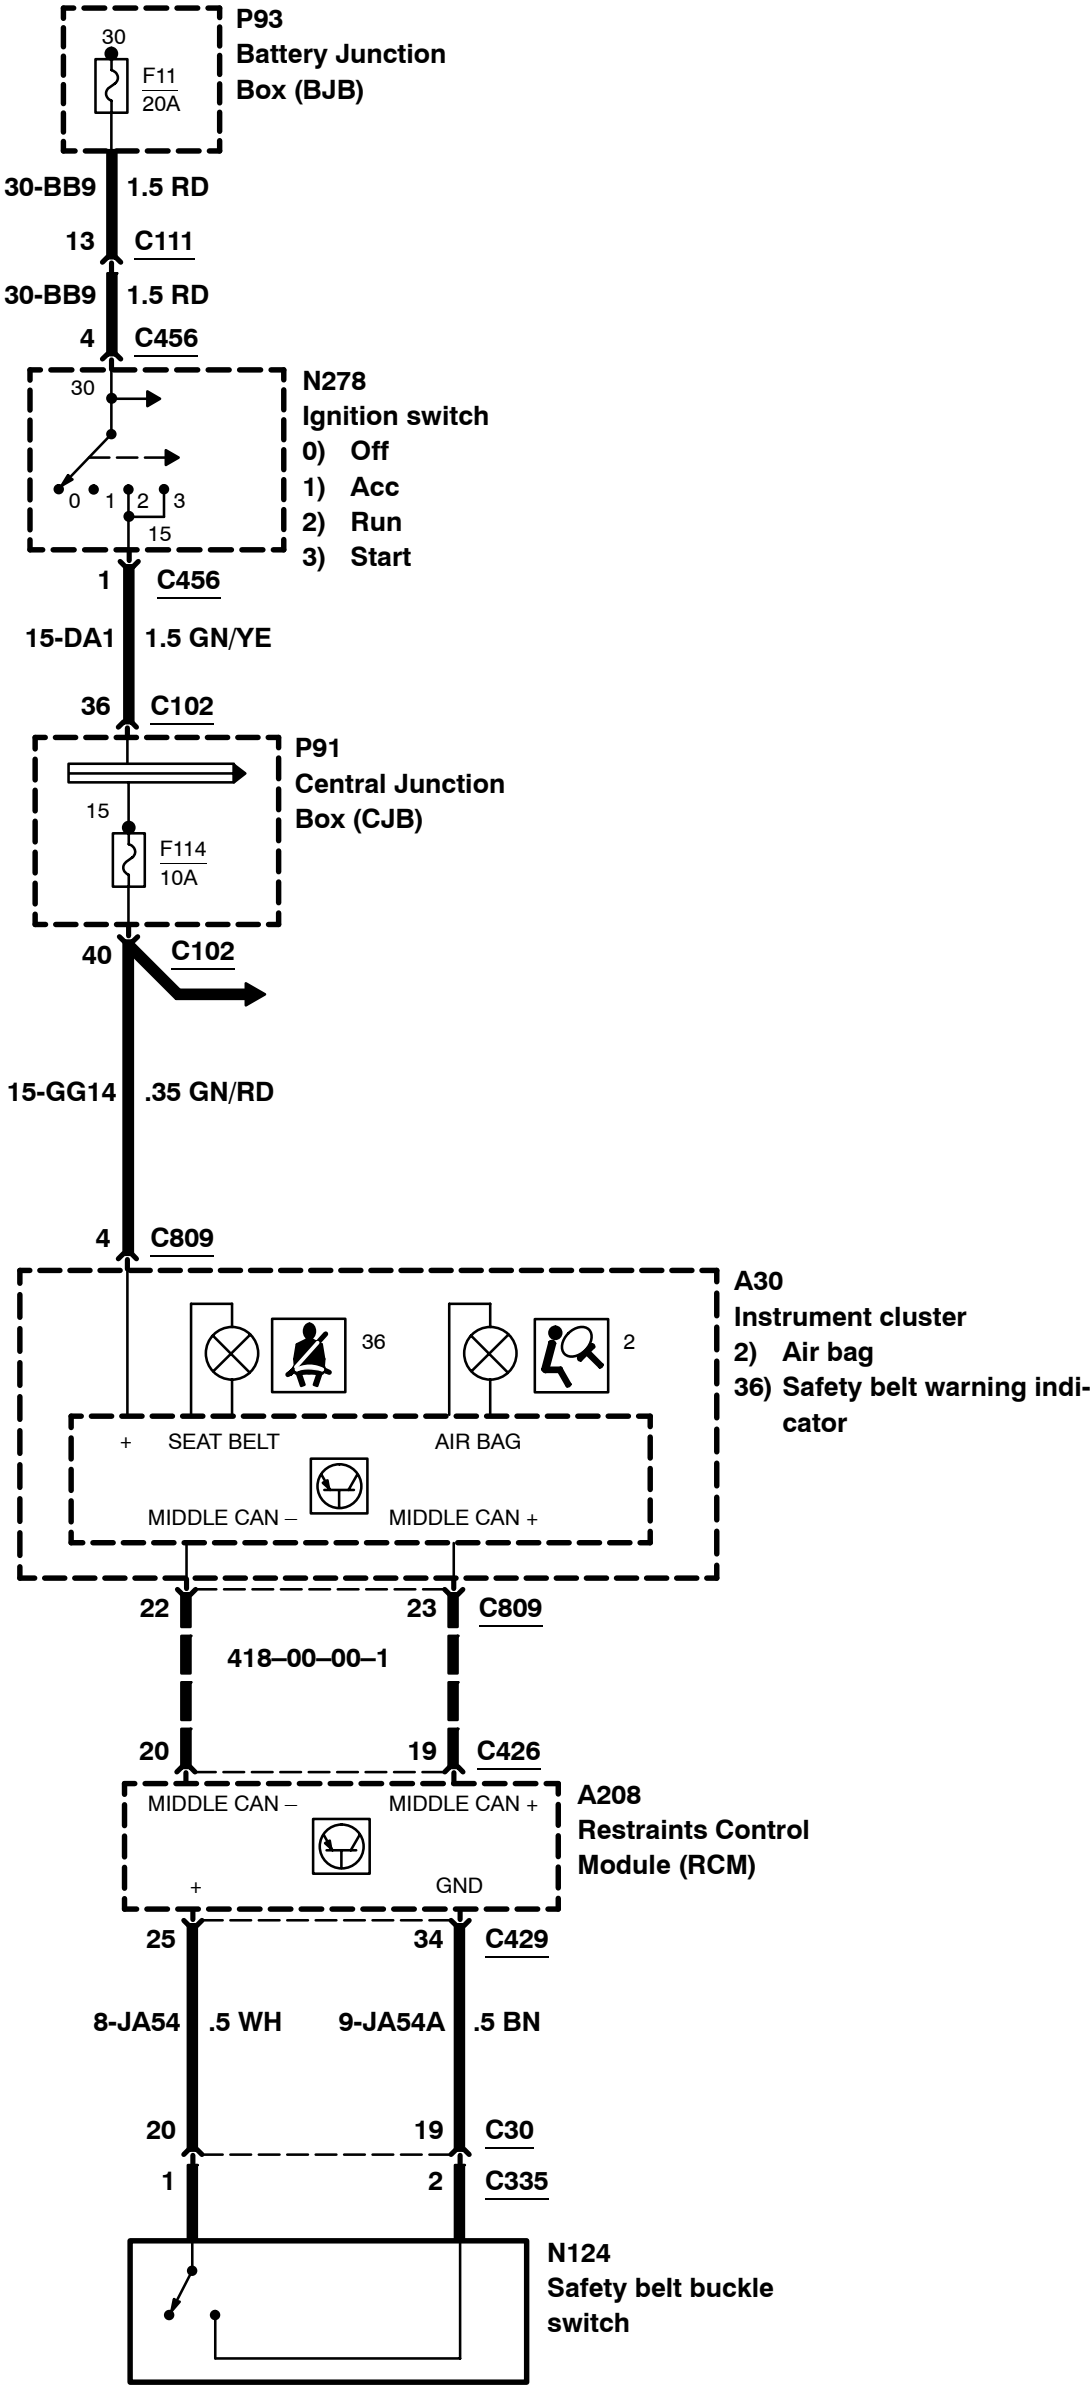


# Instrument Cluster

02/2008  
413-01-00-6  
2008.25  
Focus

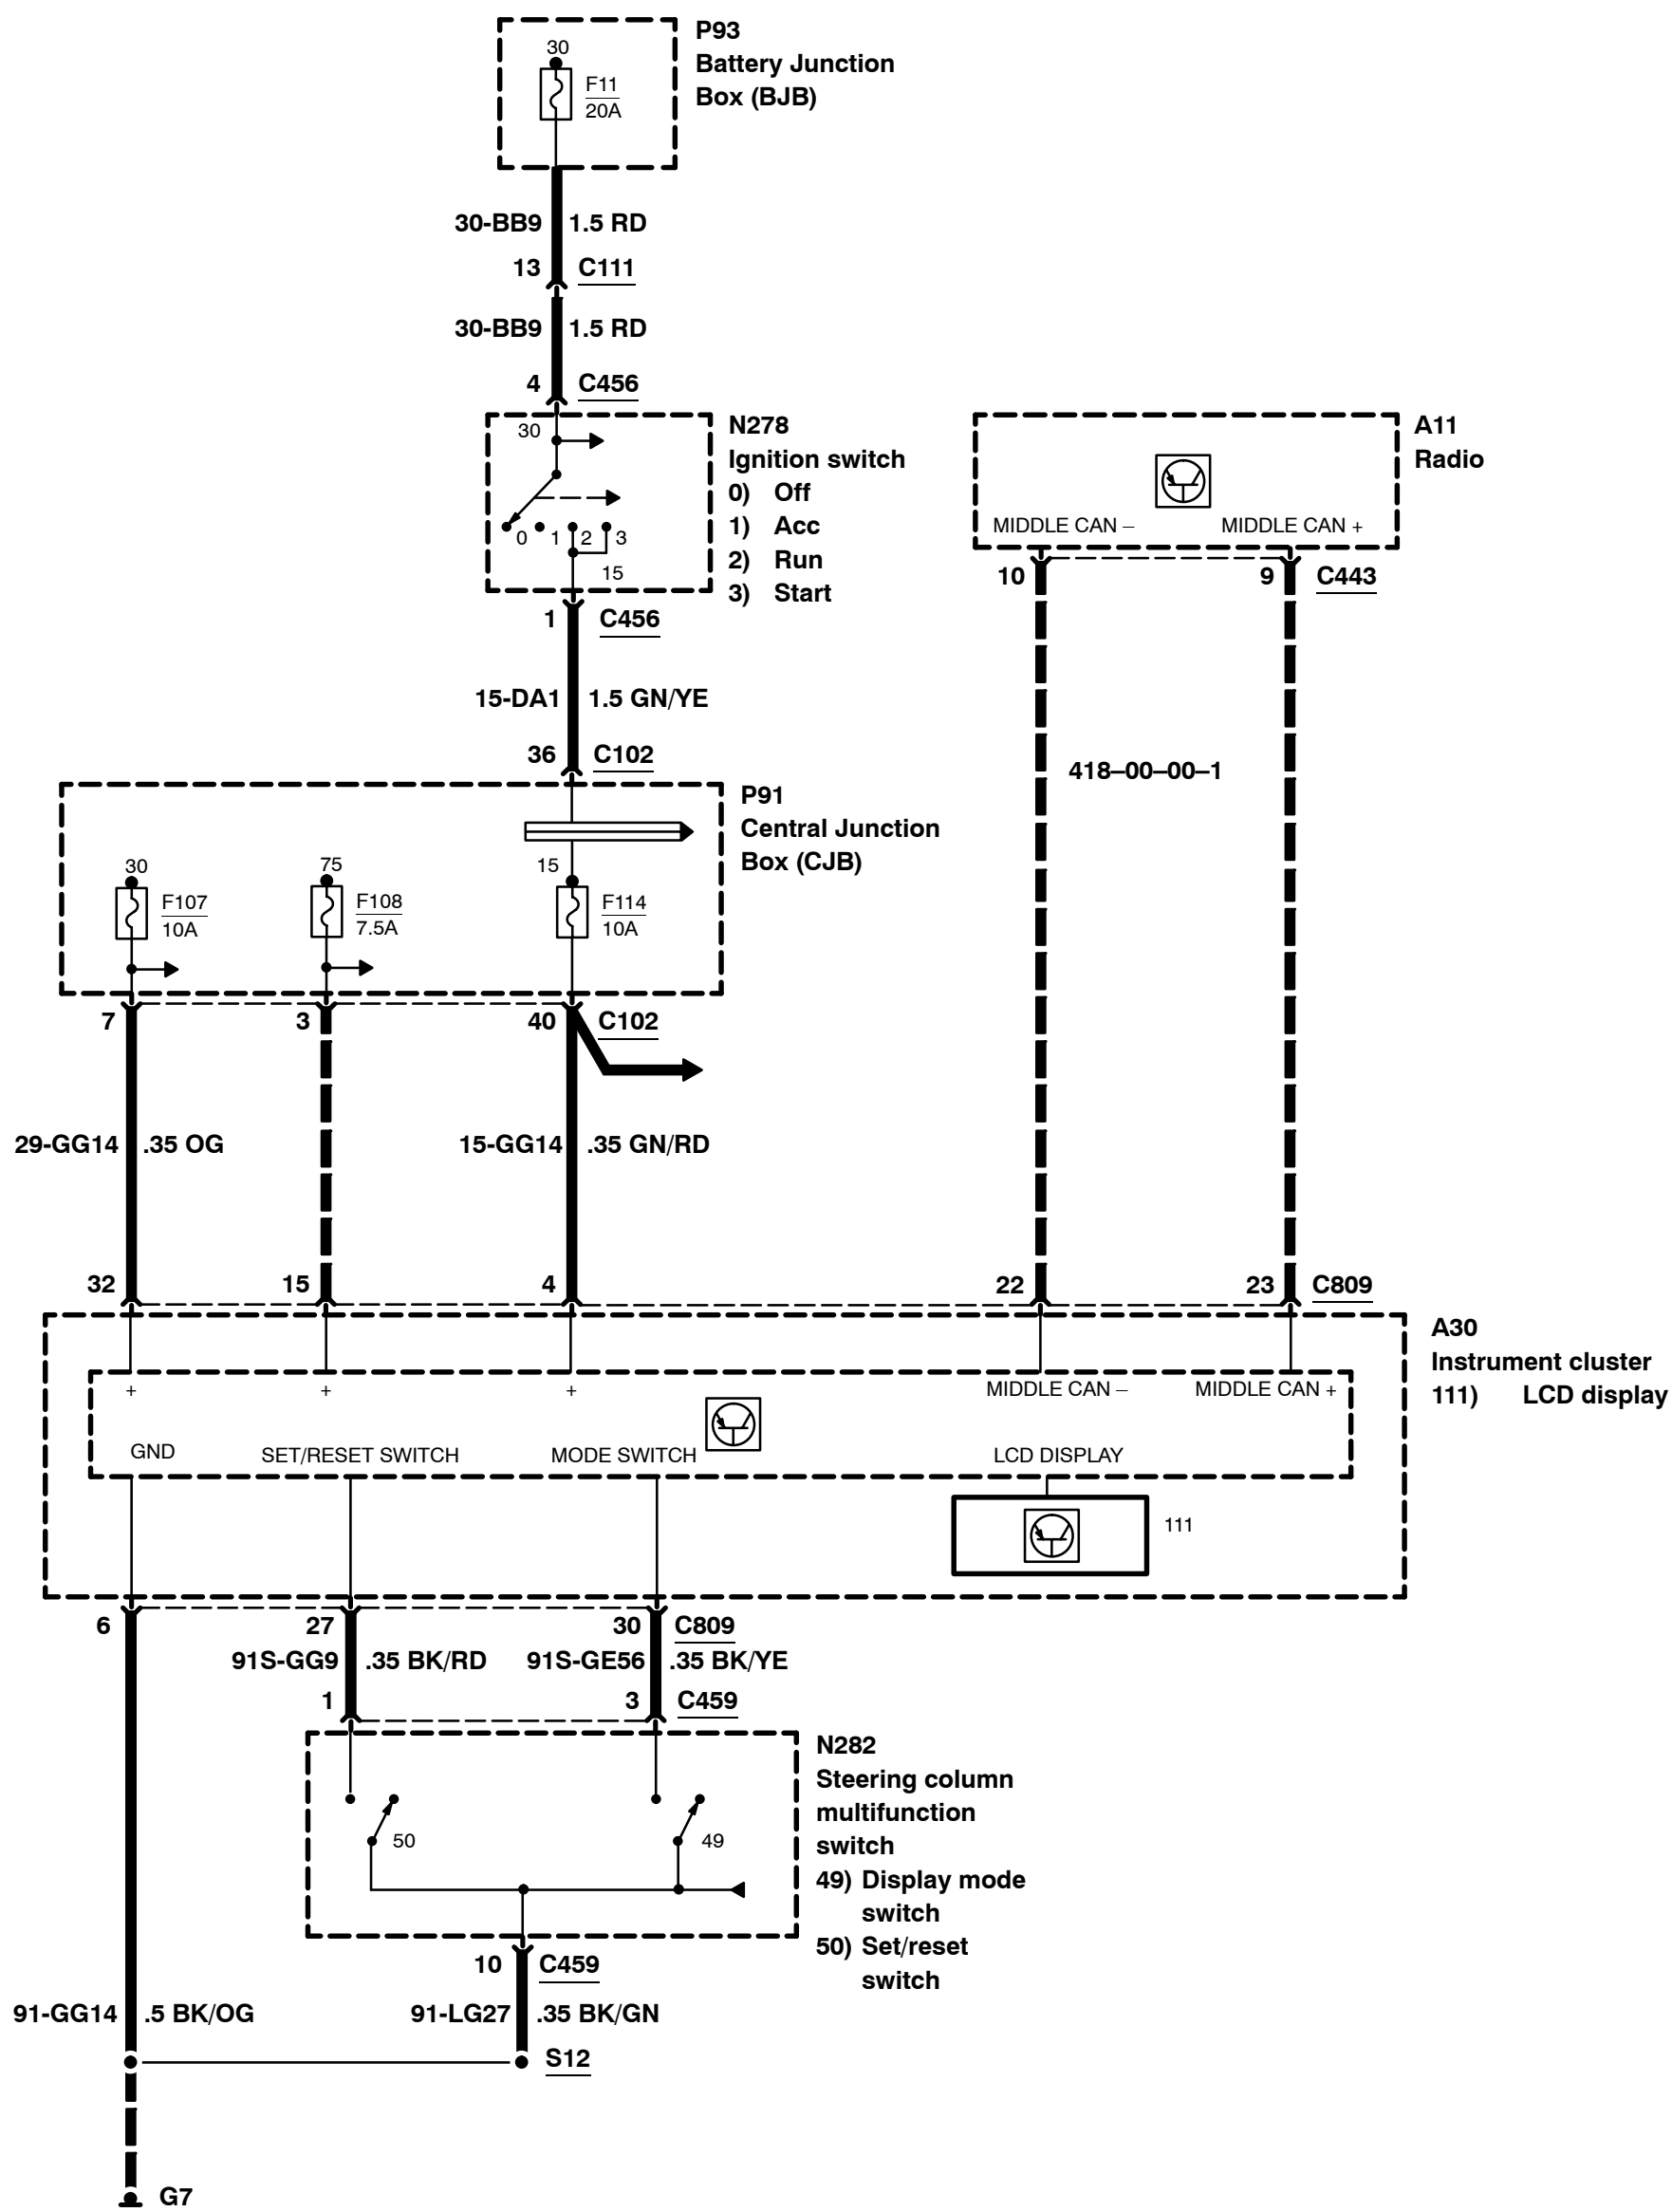


# Instrument Cluster – with front power windows

02/2008  
413-01-00-7  
2008.25  
Focus

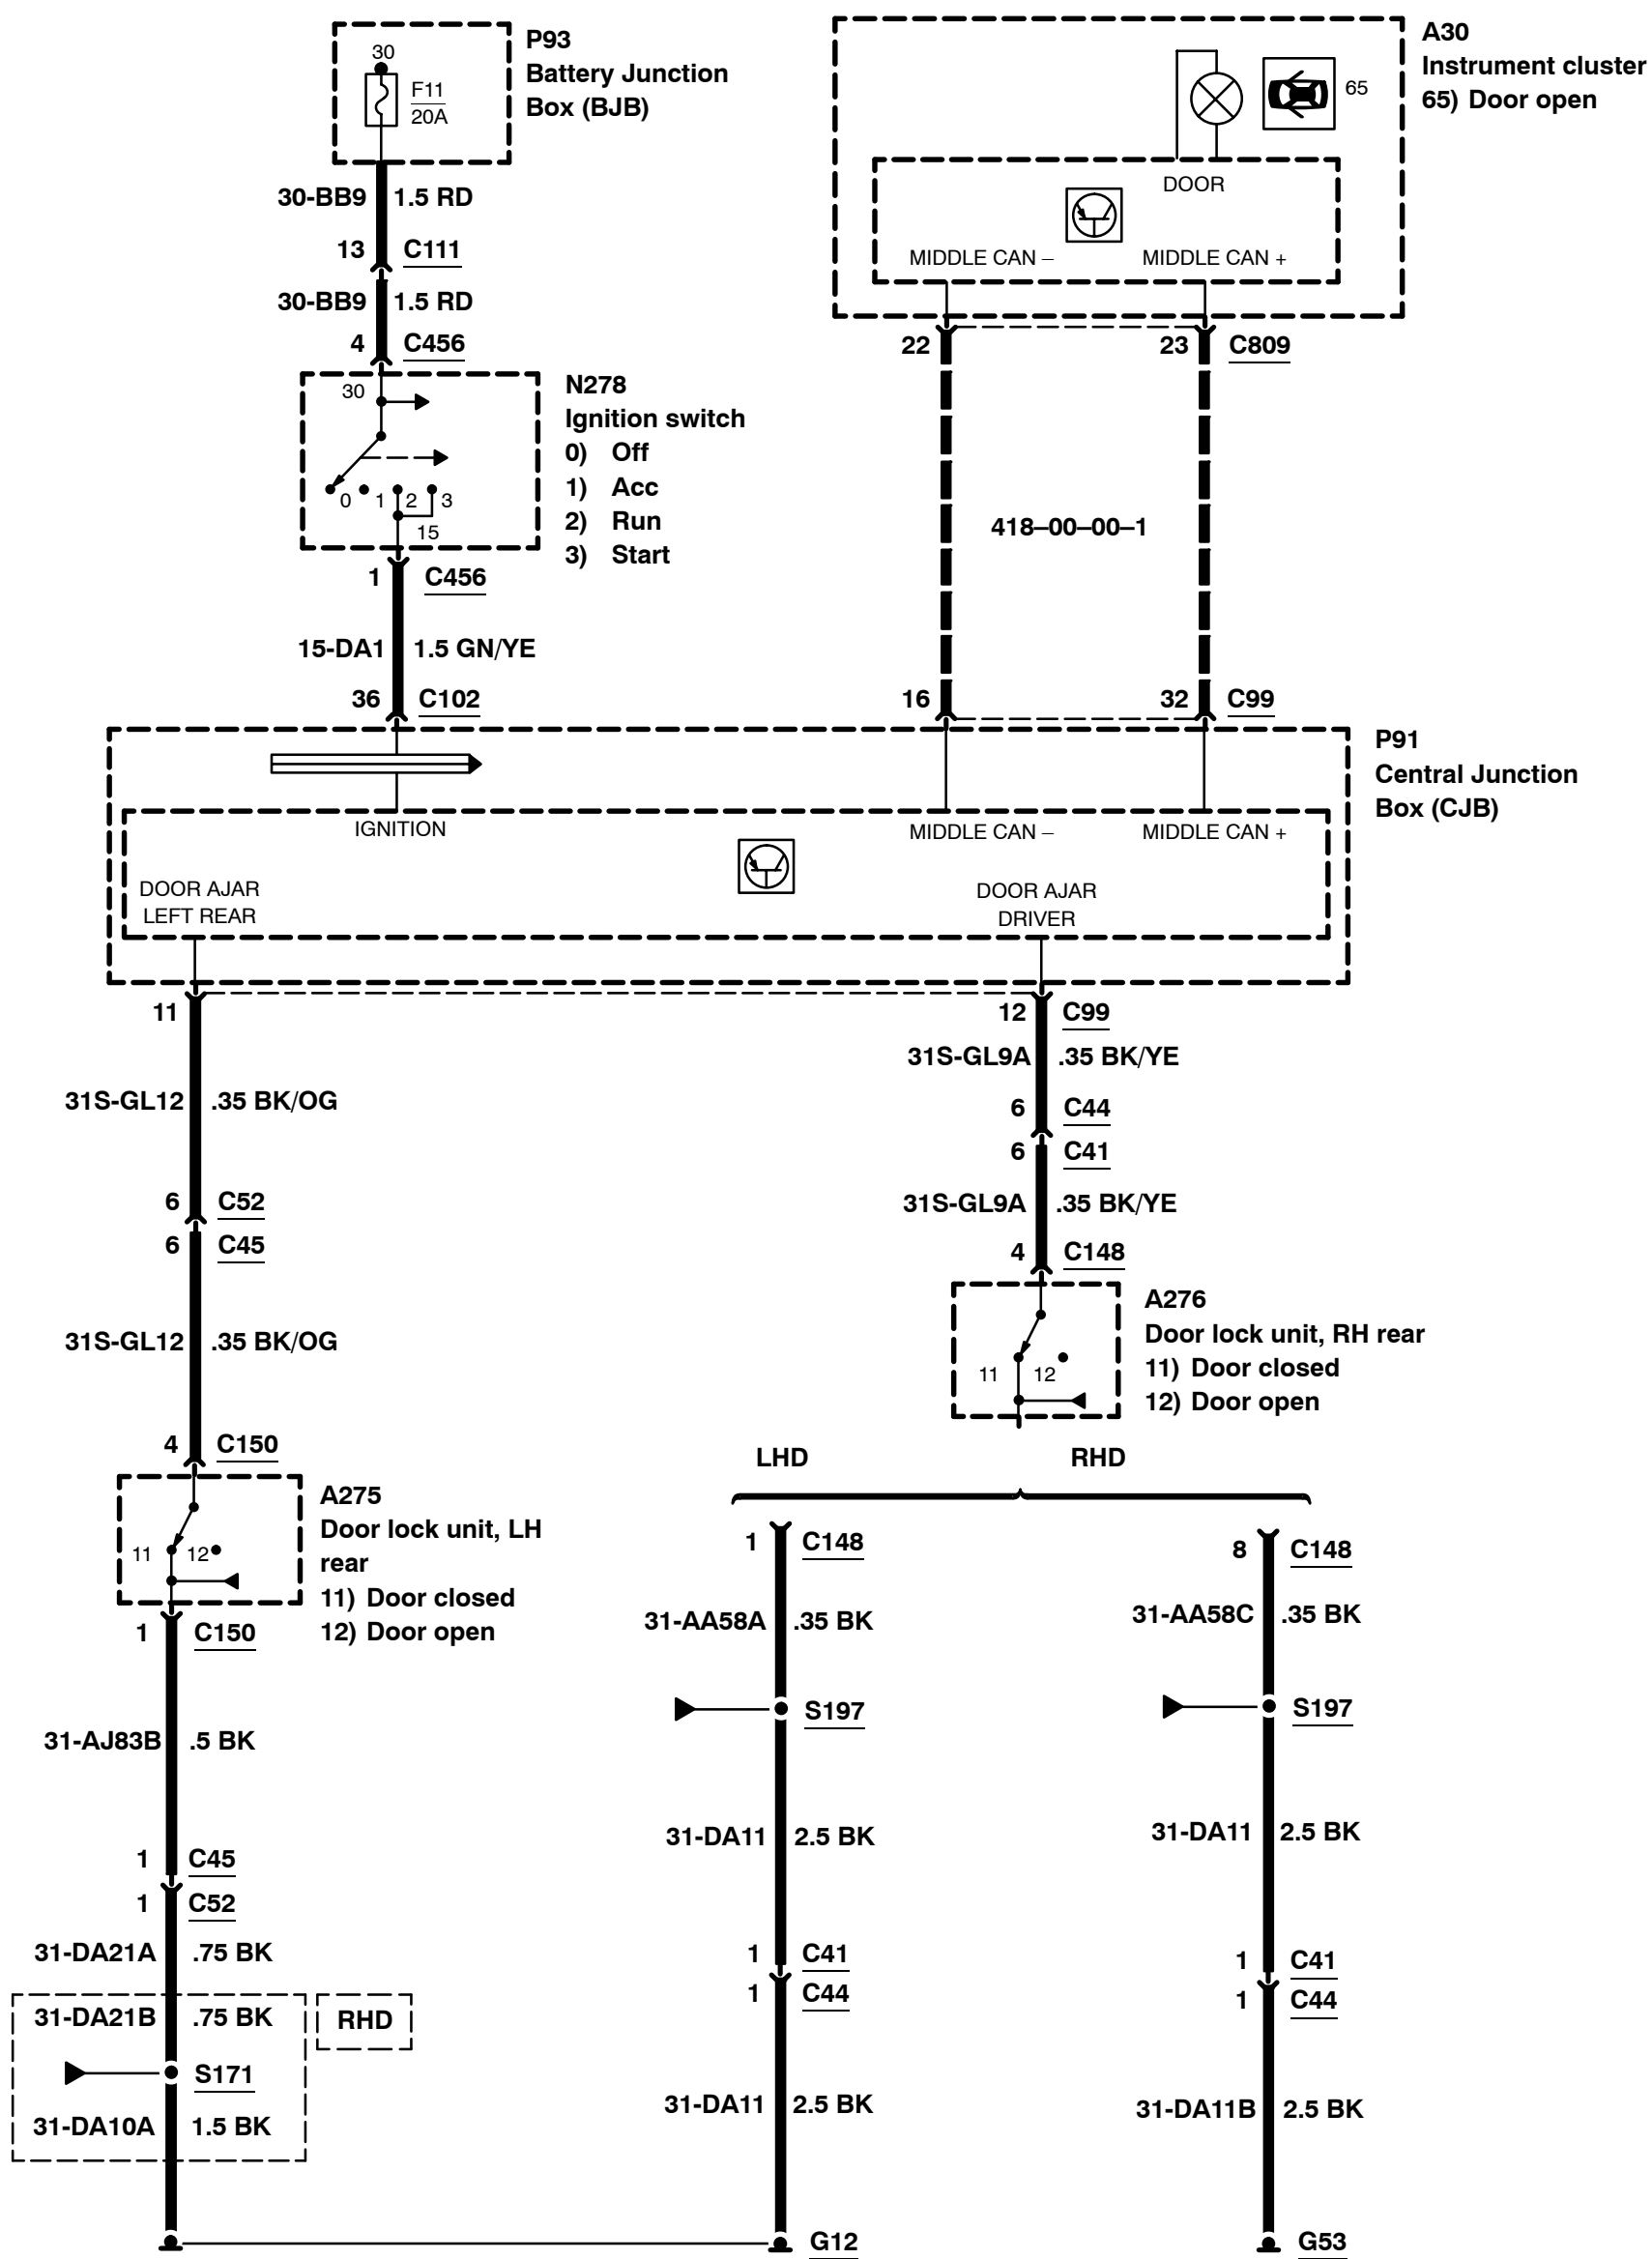


02/2008  
413-01-00-8  
2008.25  
Focus

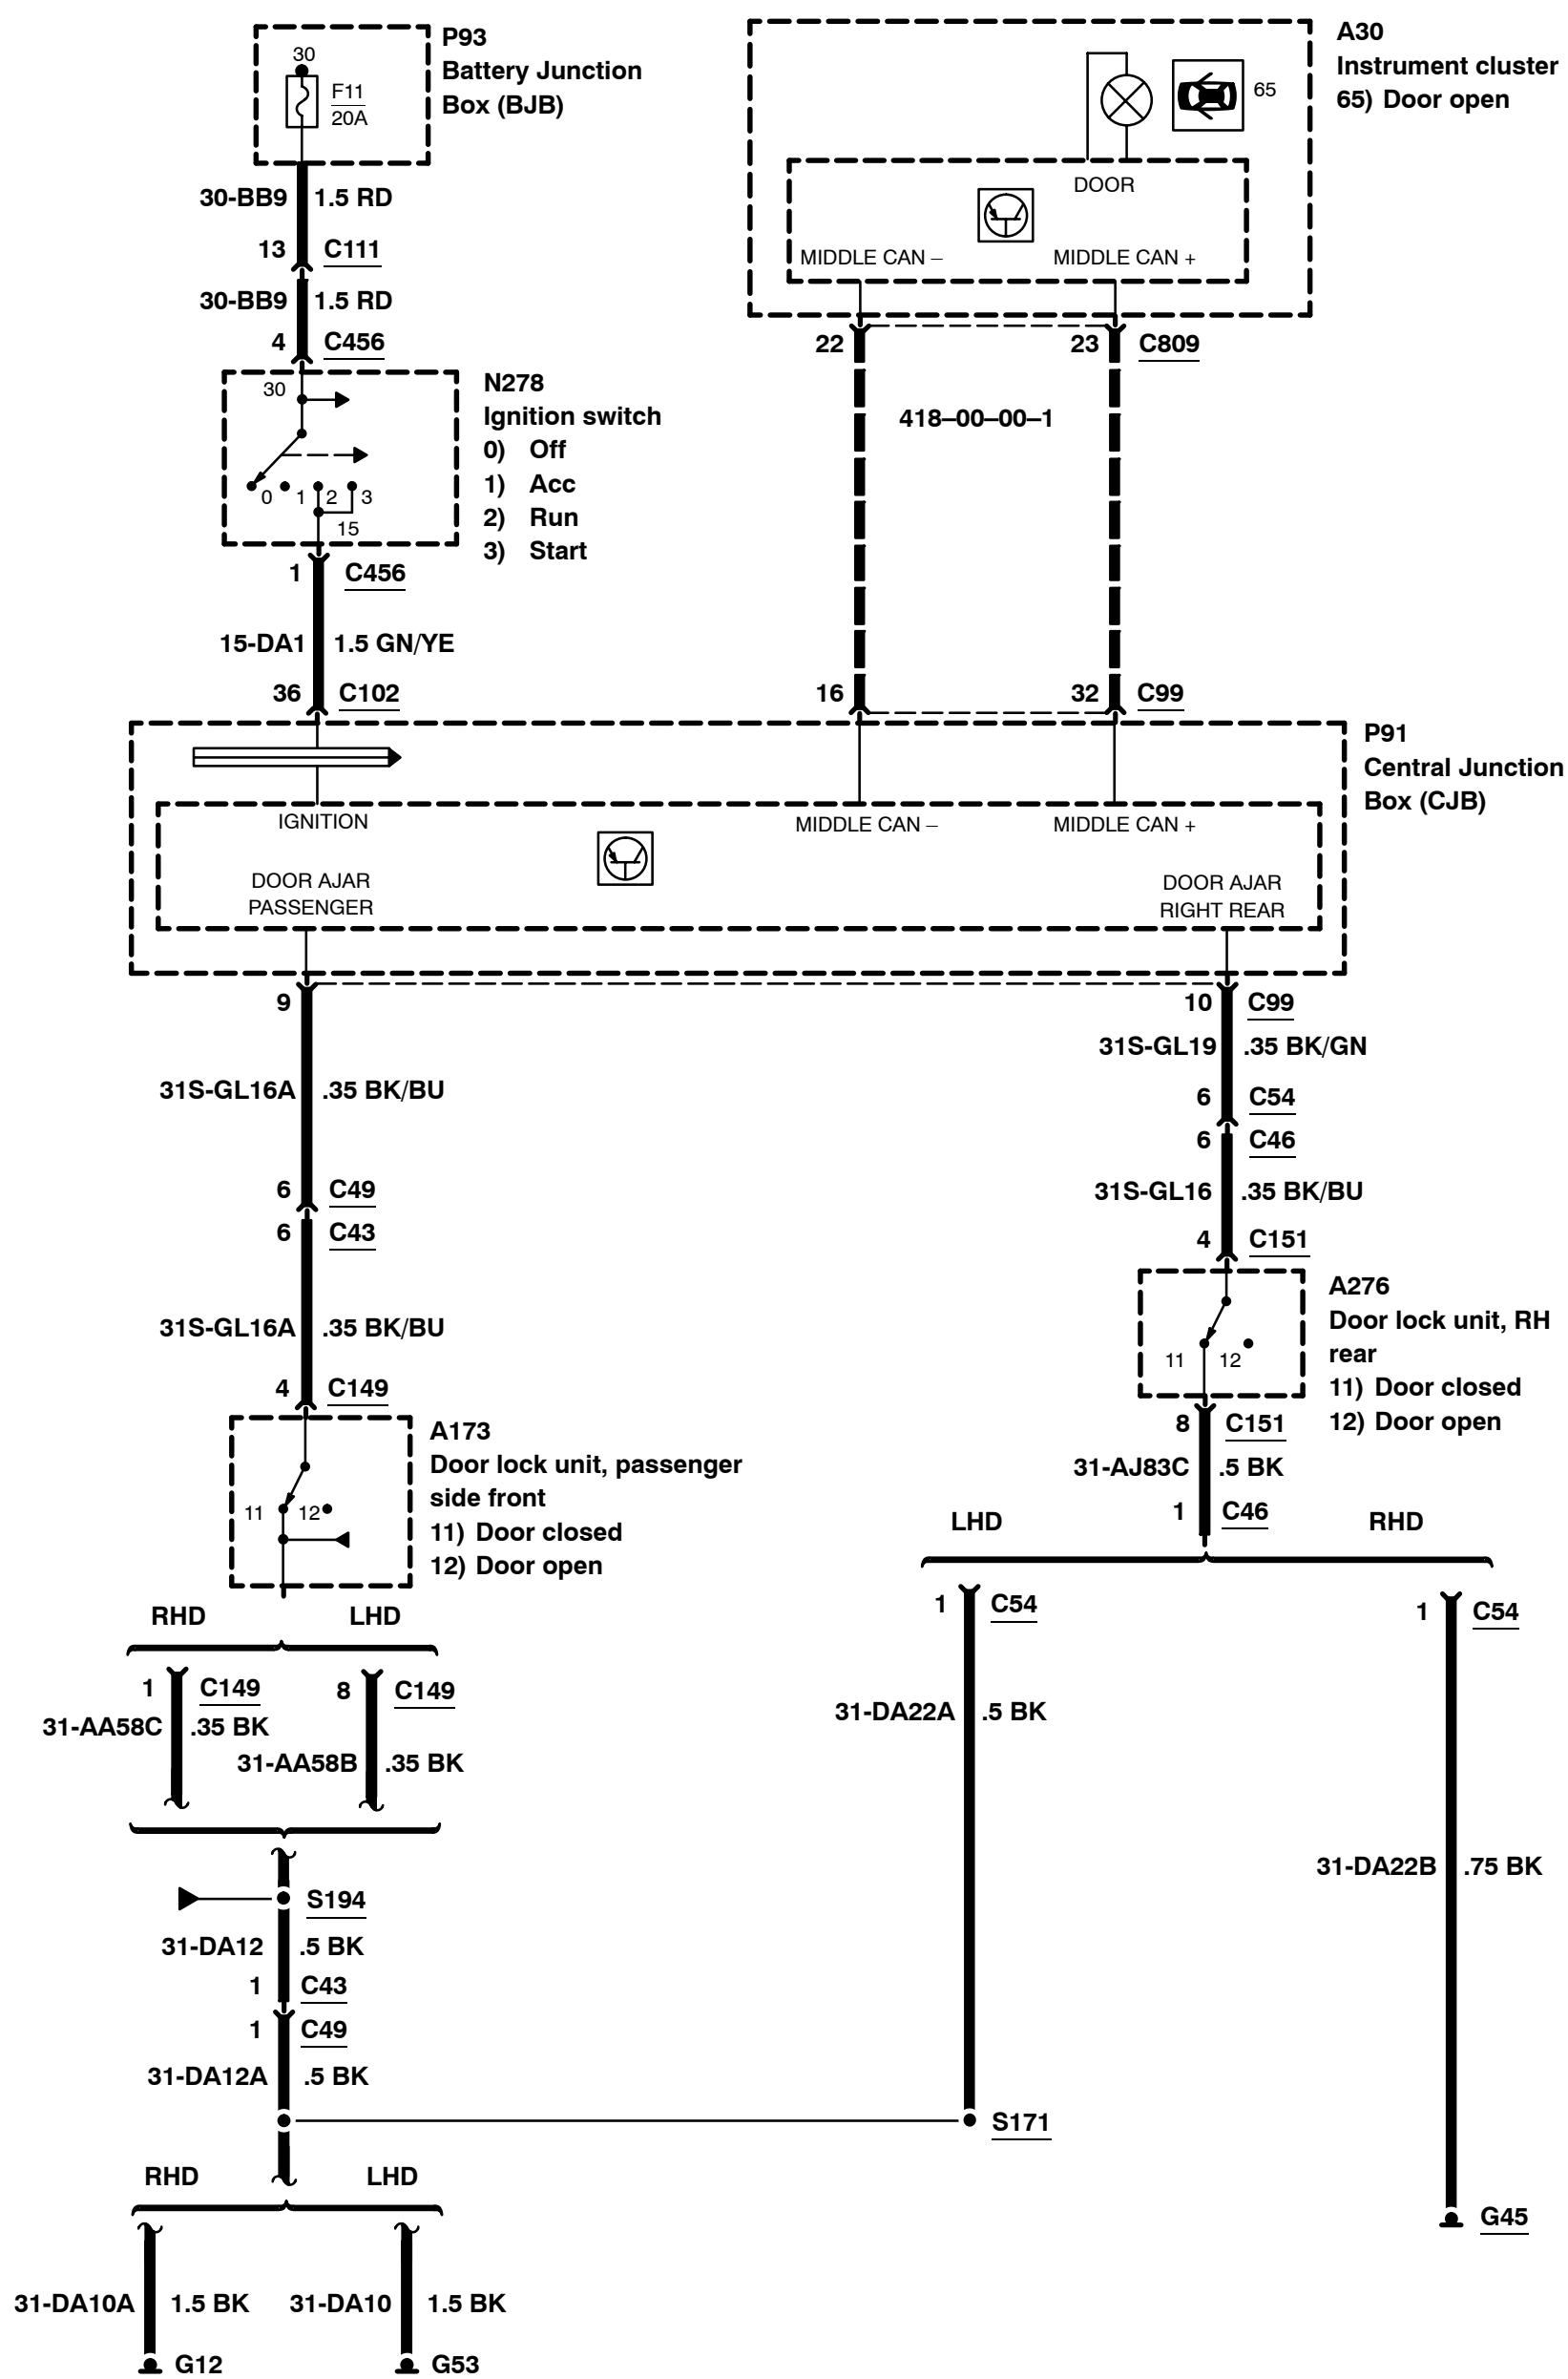


# Instrument Cluster – with front and rear power windows

02/2008  
413-01-00-9  
2008.25  
Focus

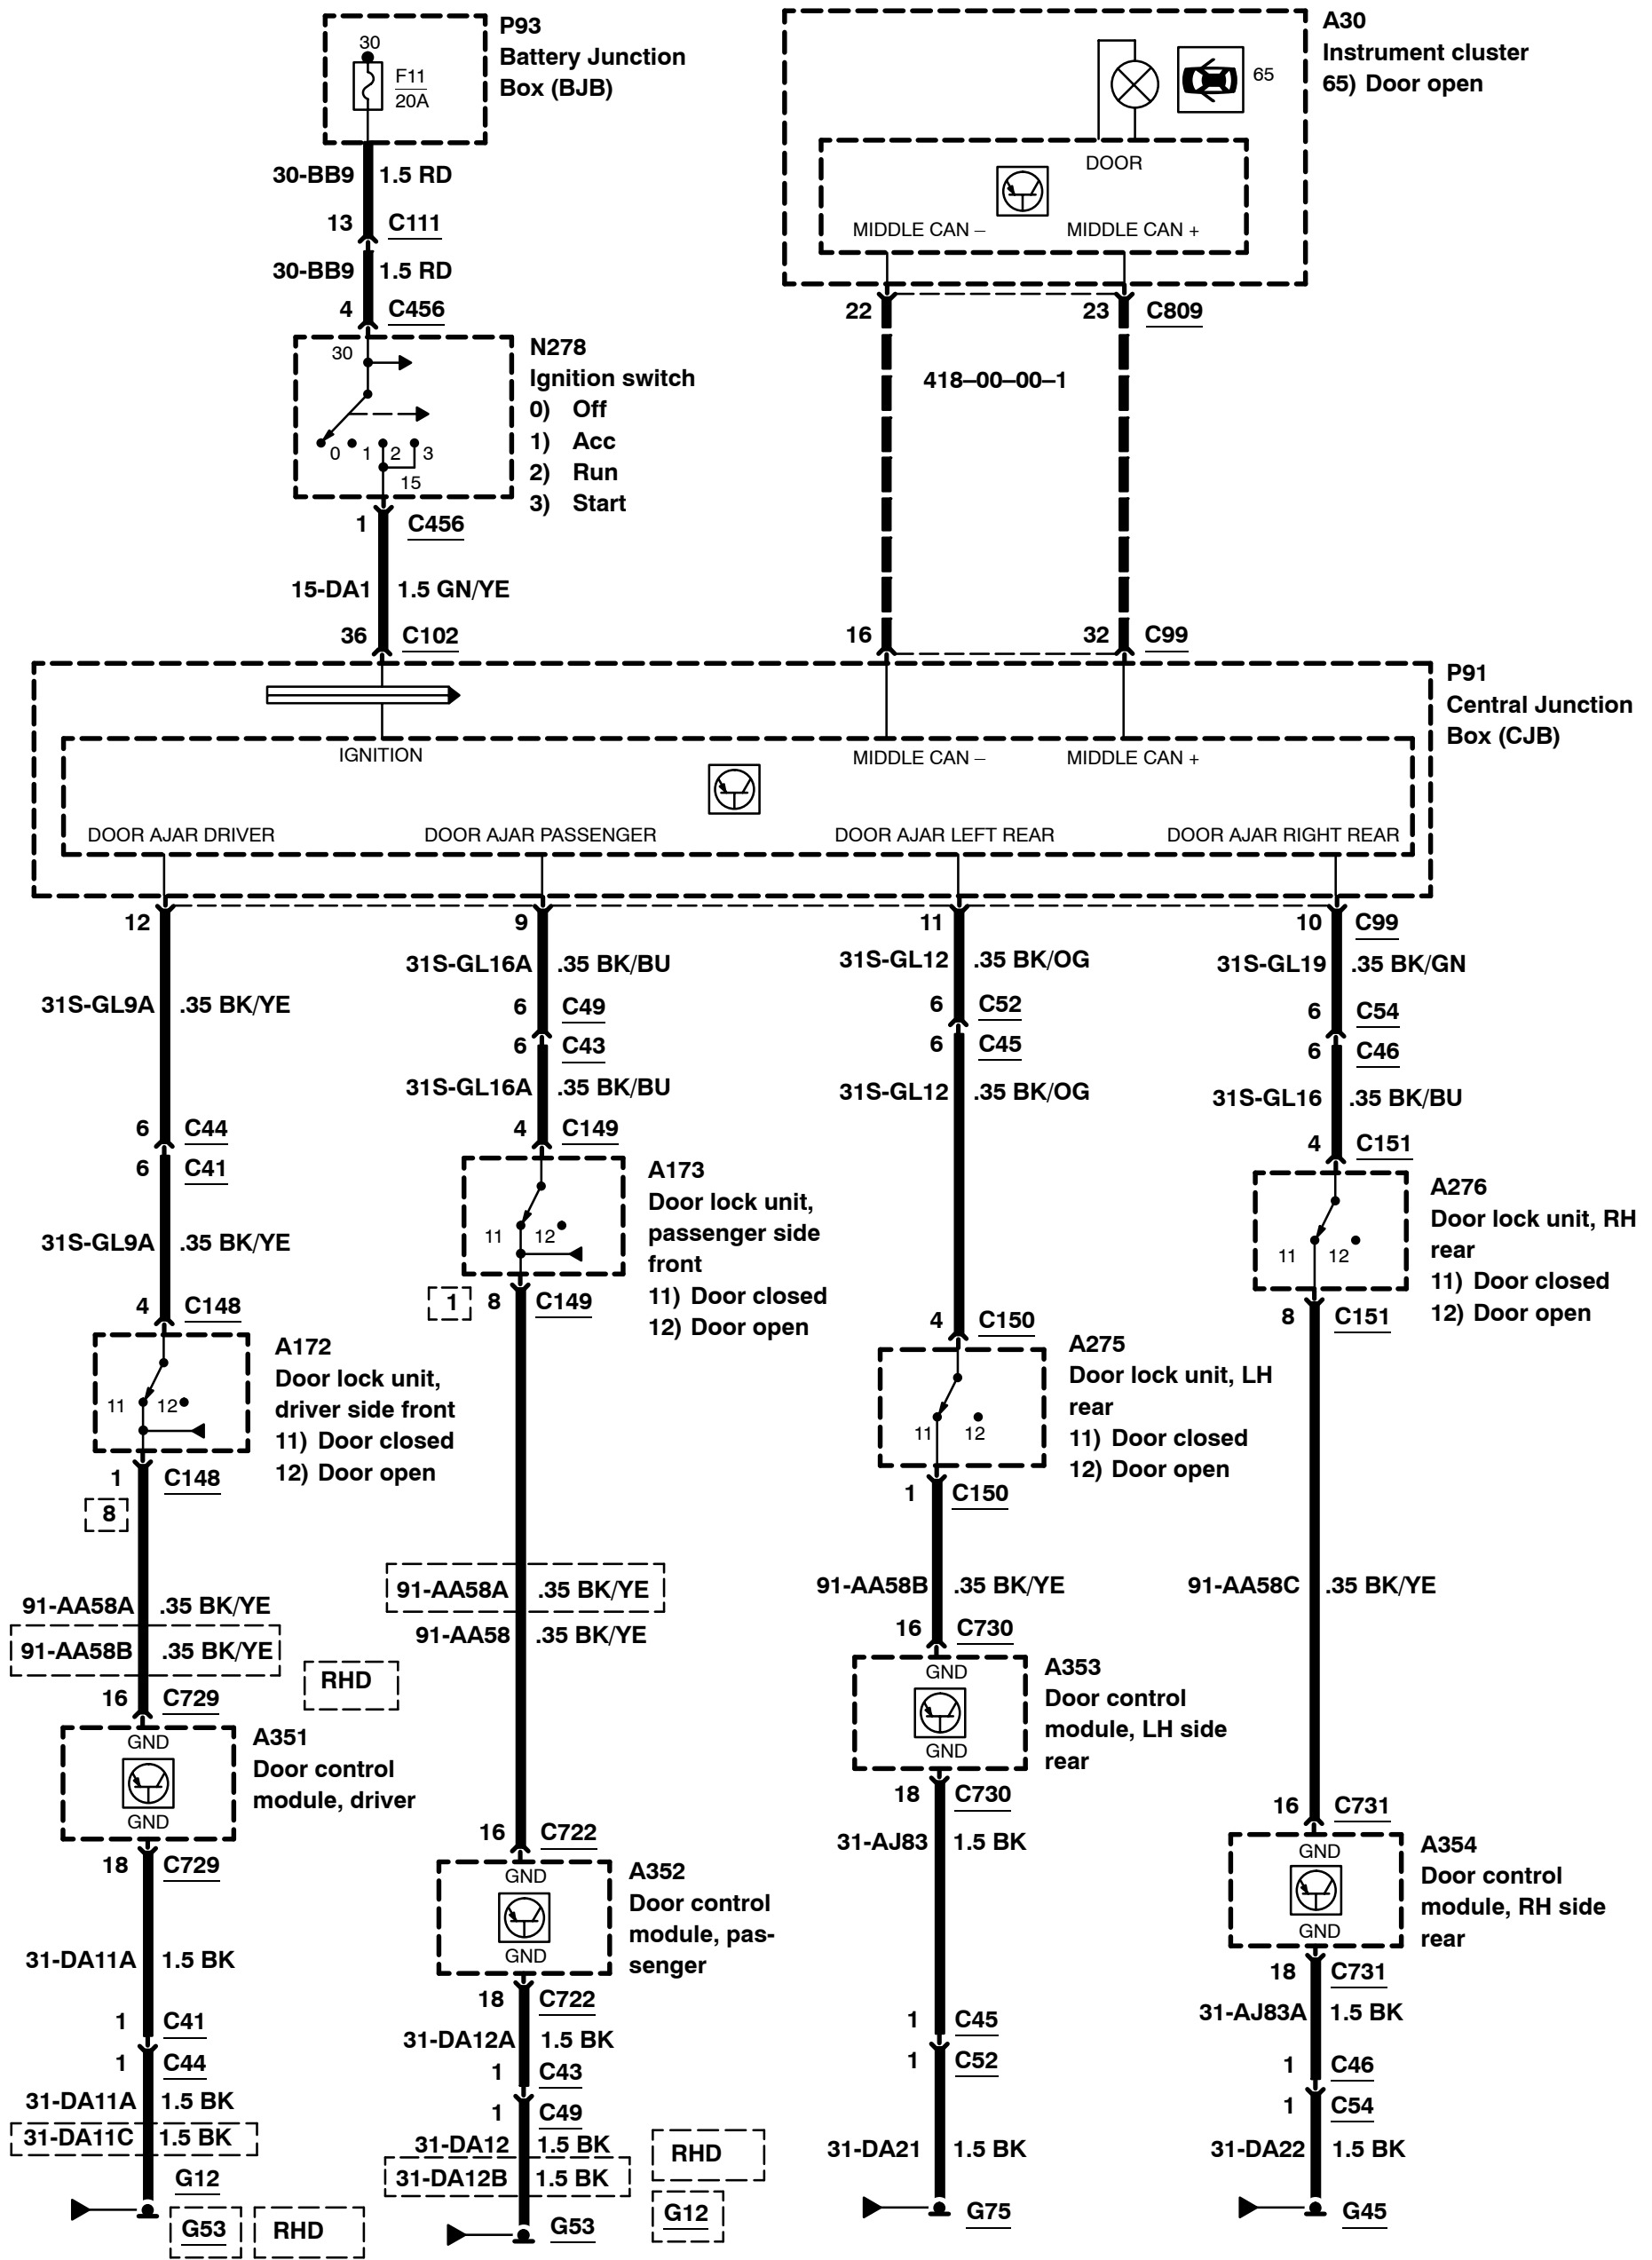




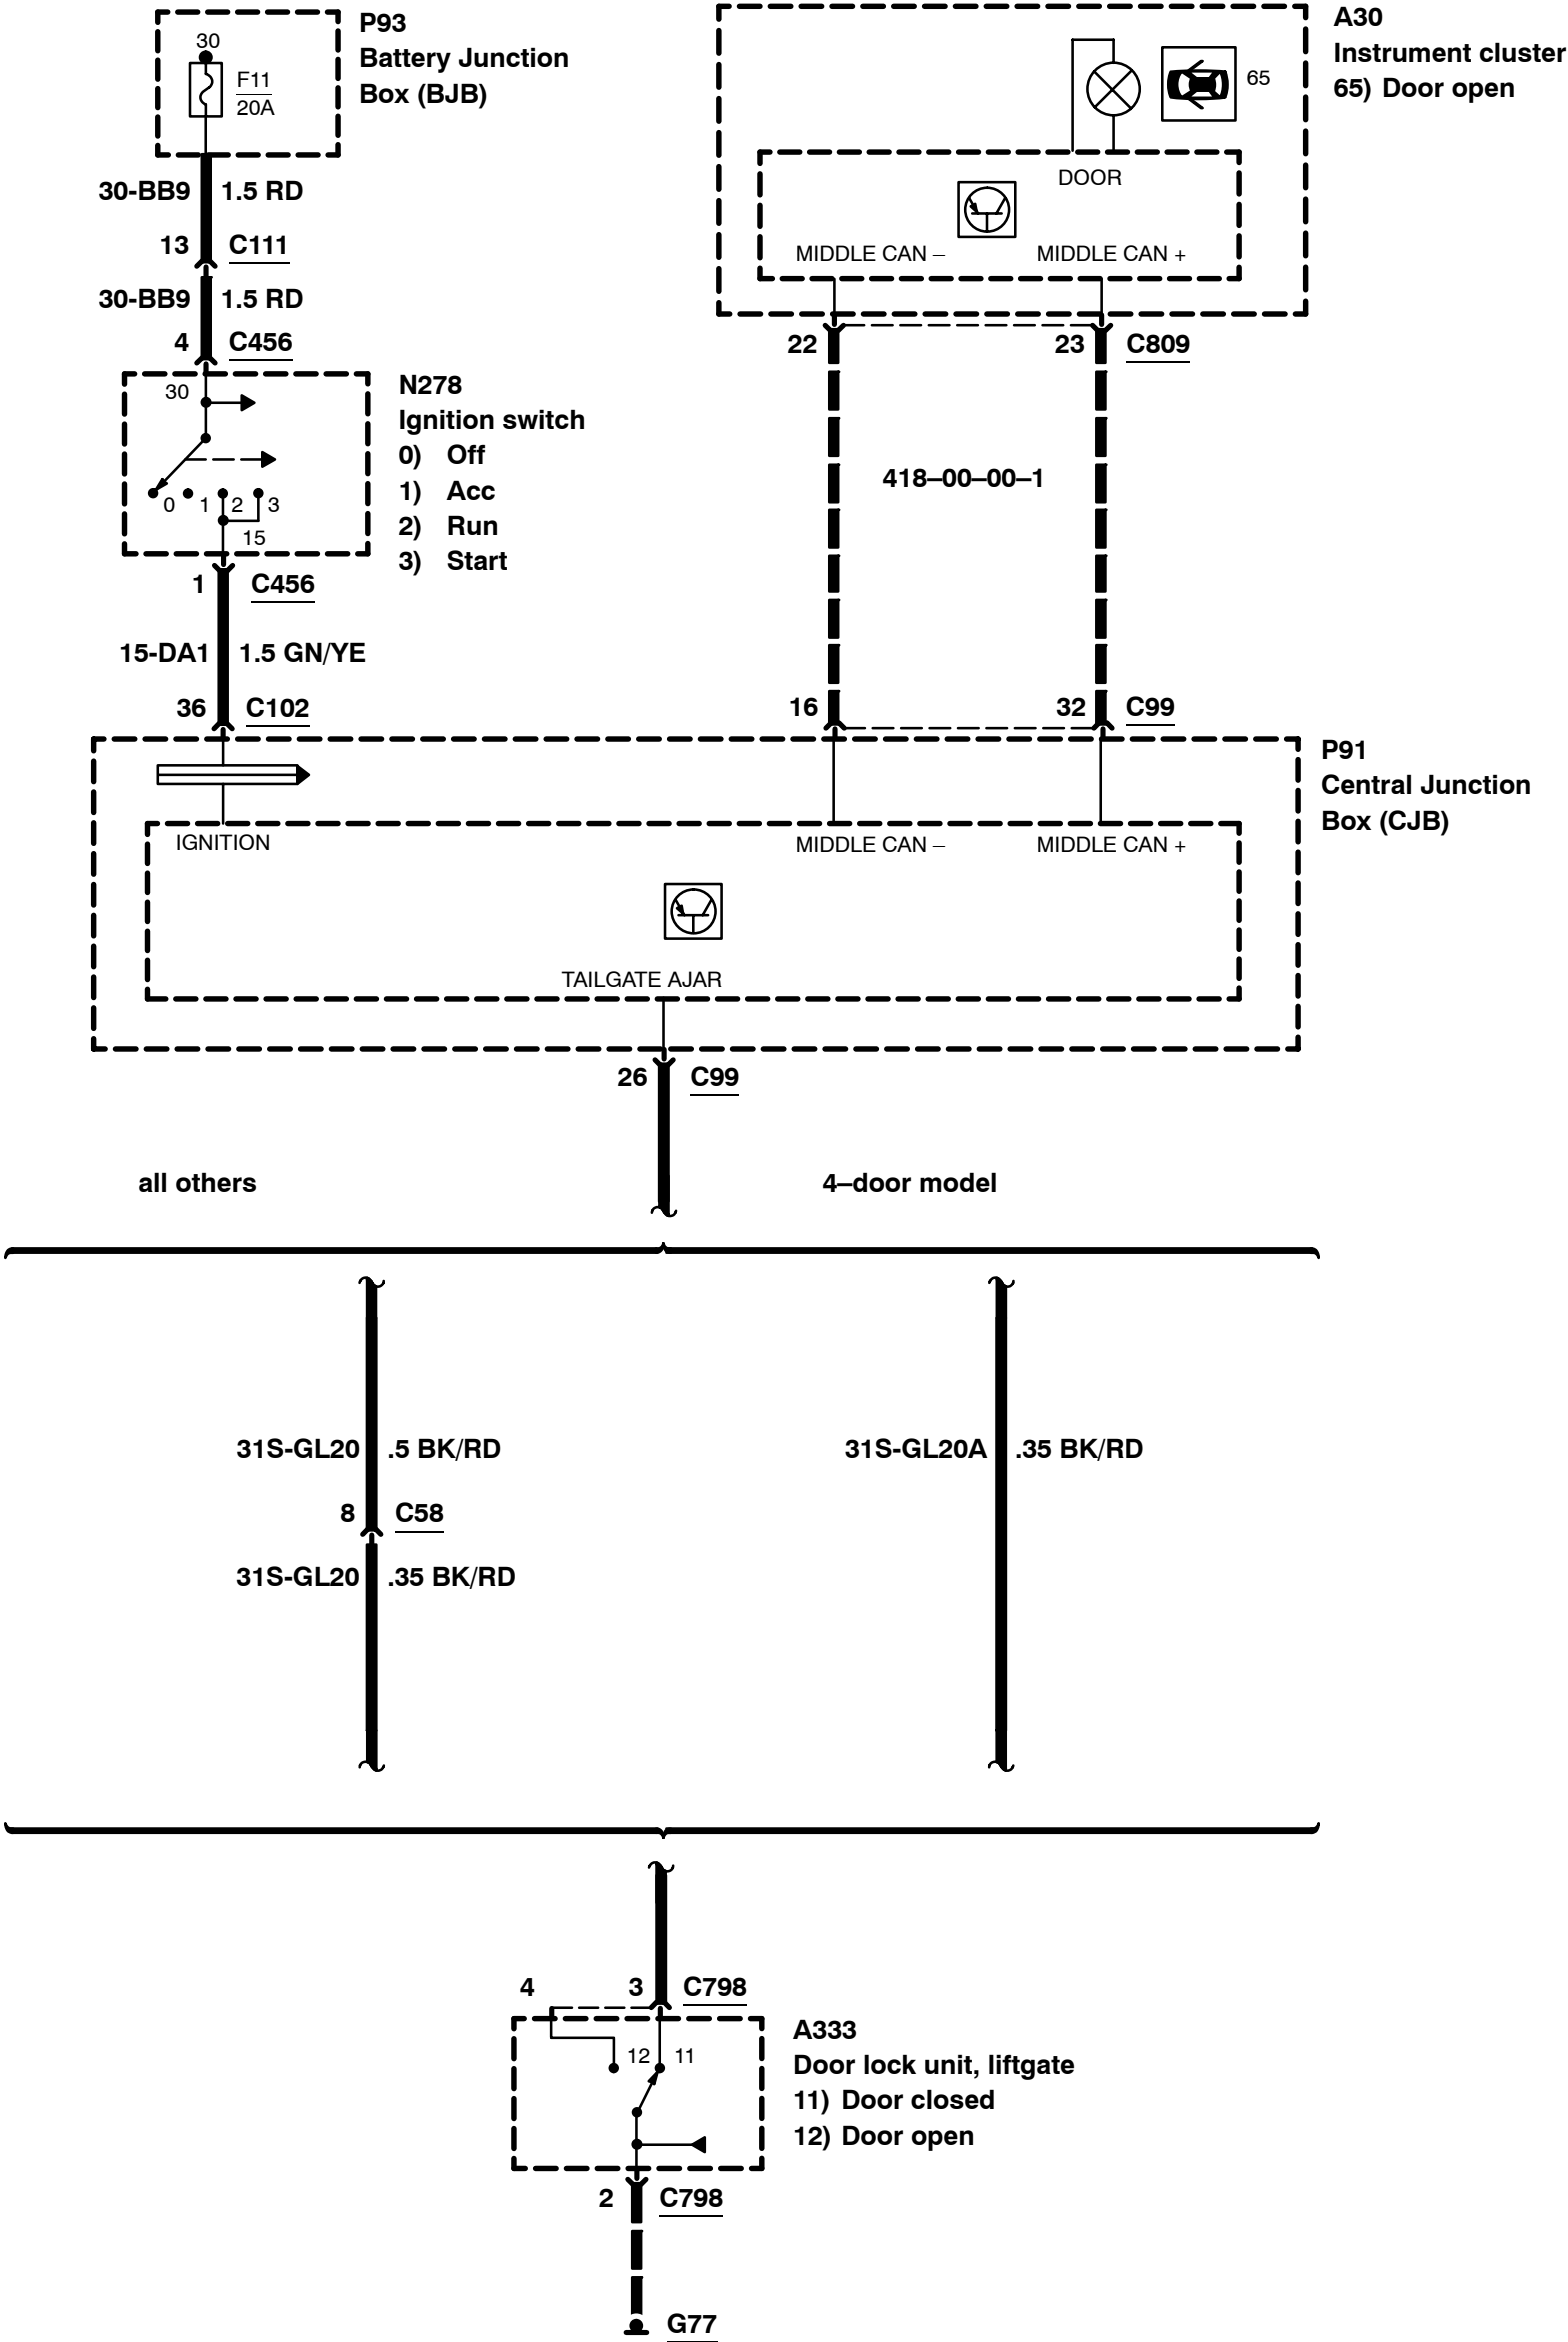


# Instrument Cluster – 1.6L (Z6) manual transmission

02/2008  
413-01-00-11  
2008.25  
Focus

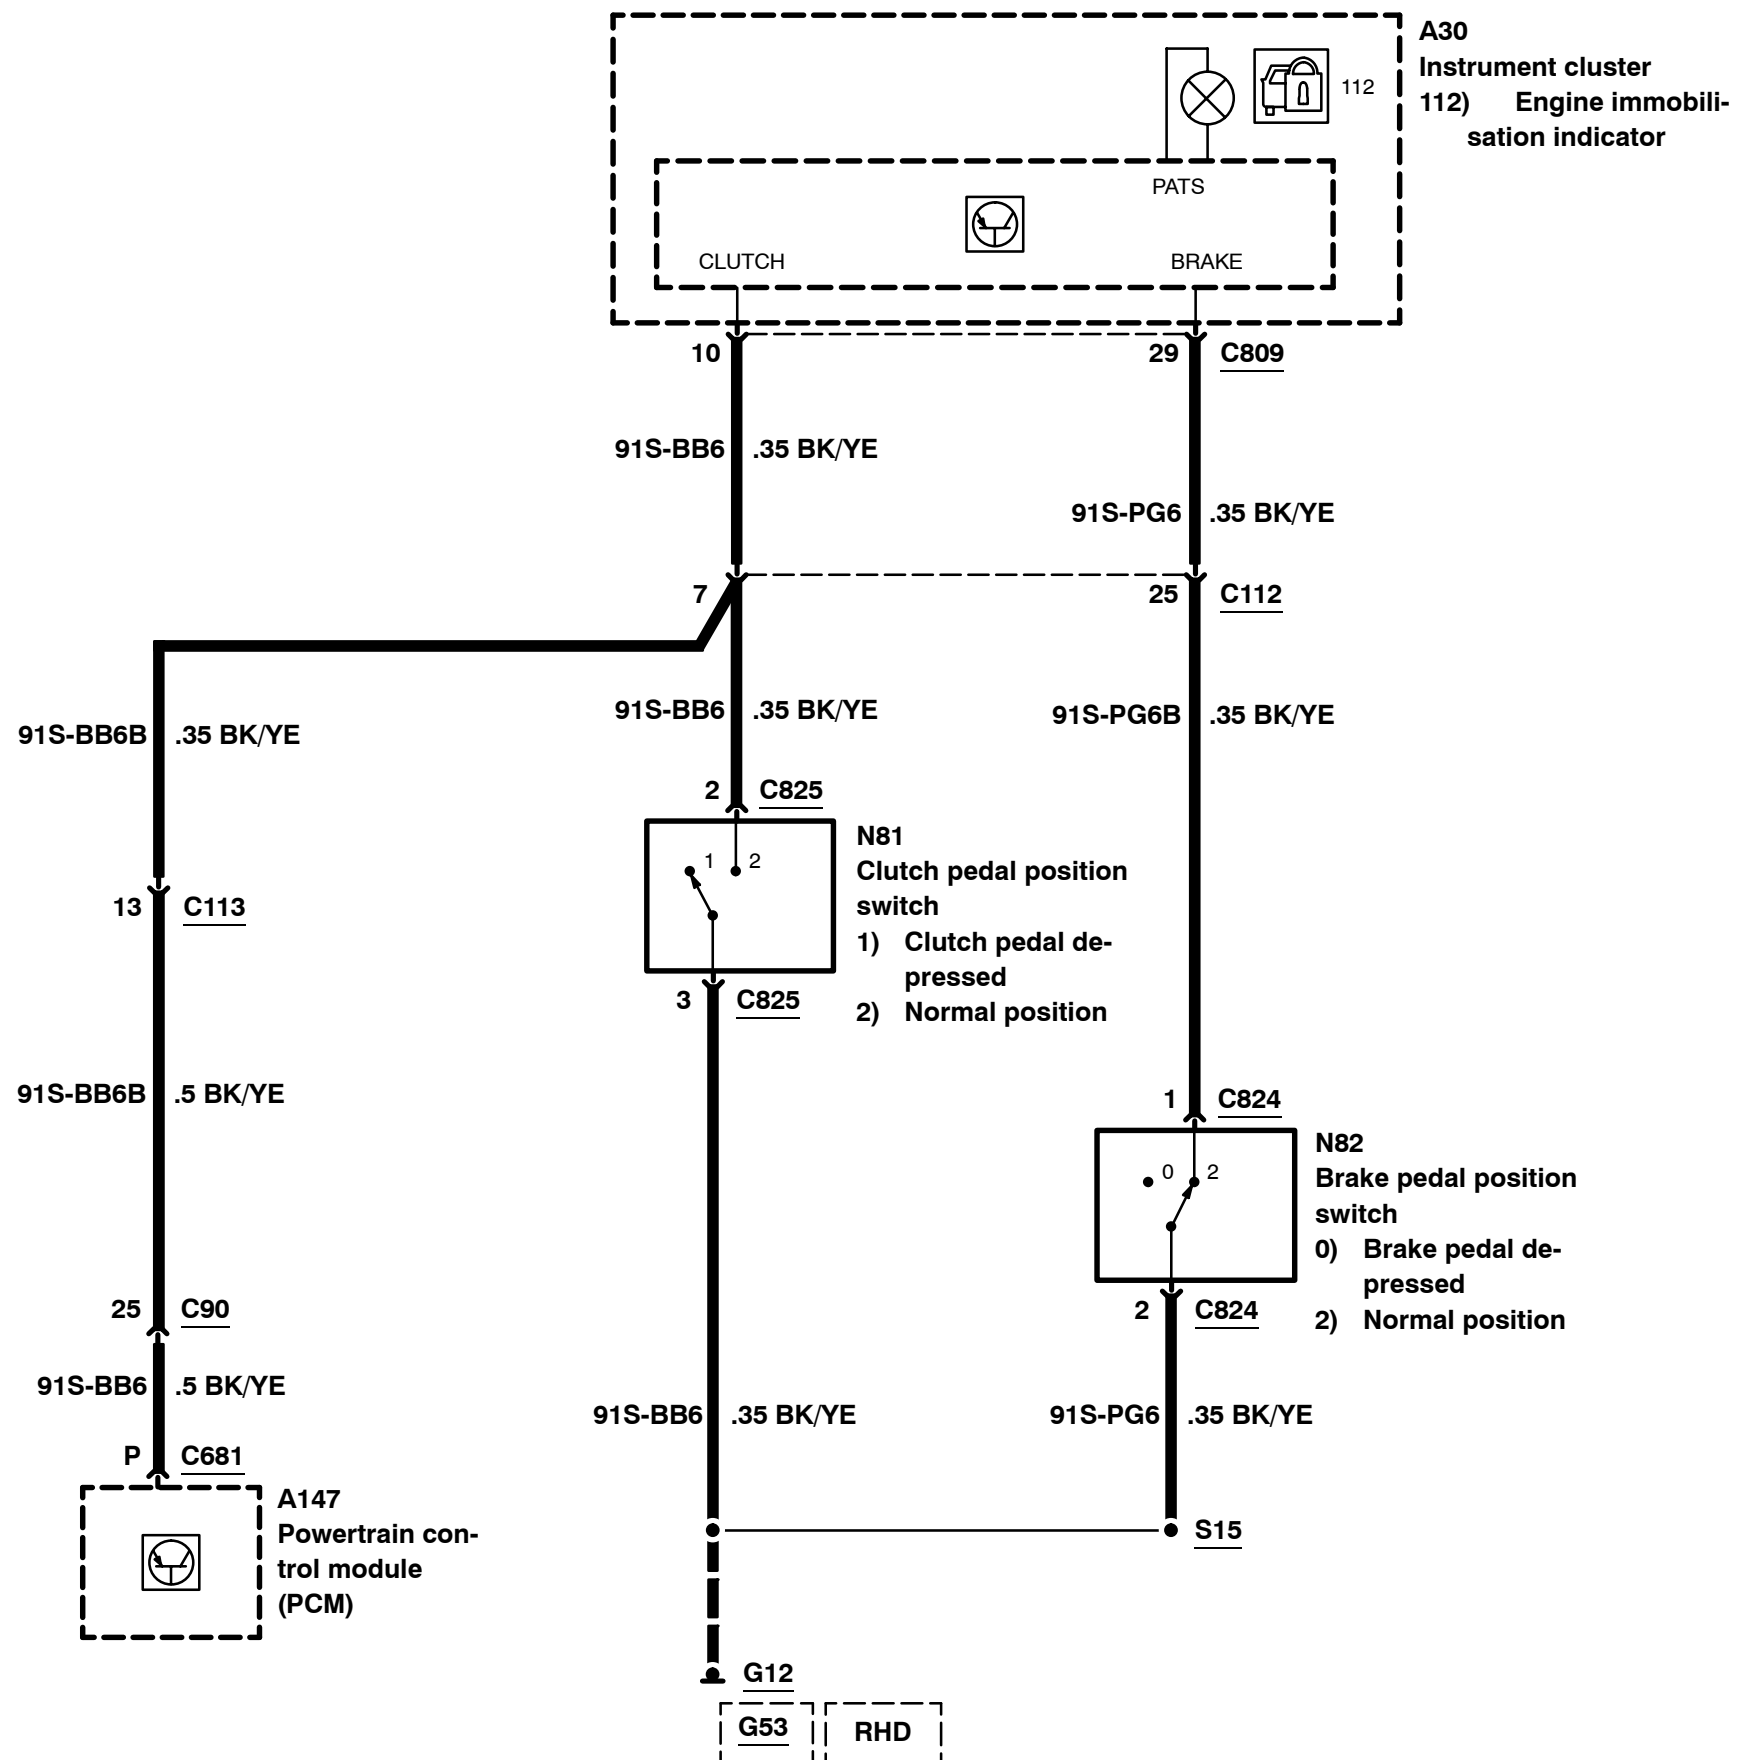





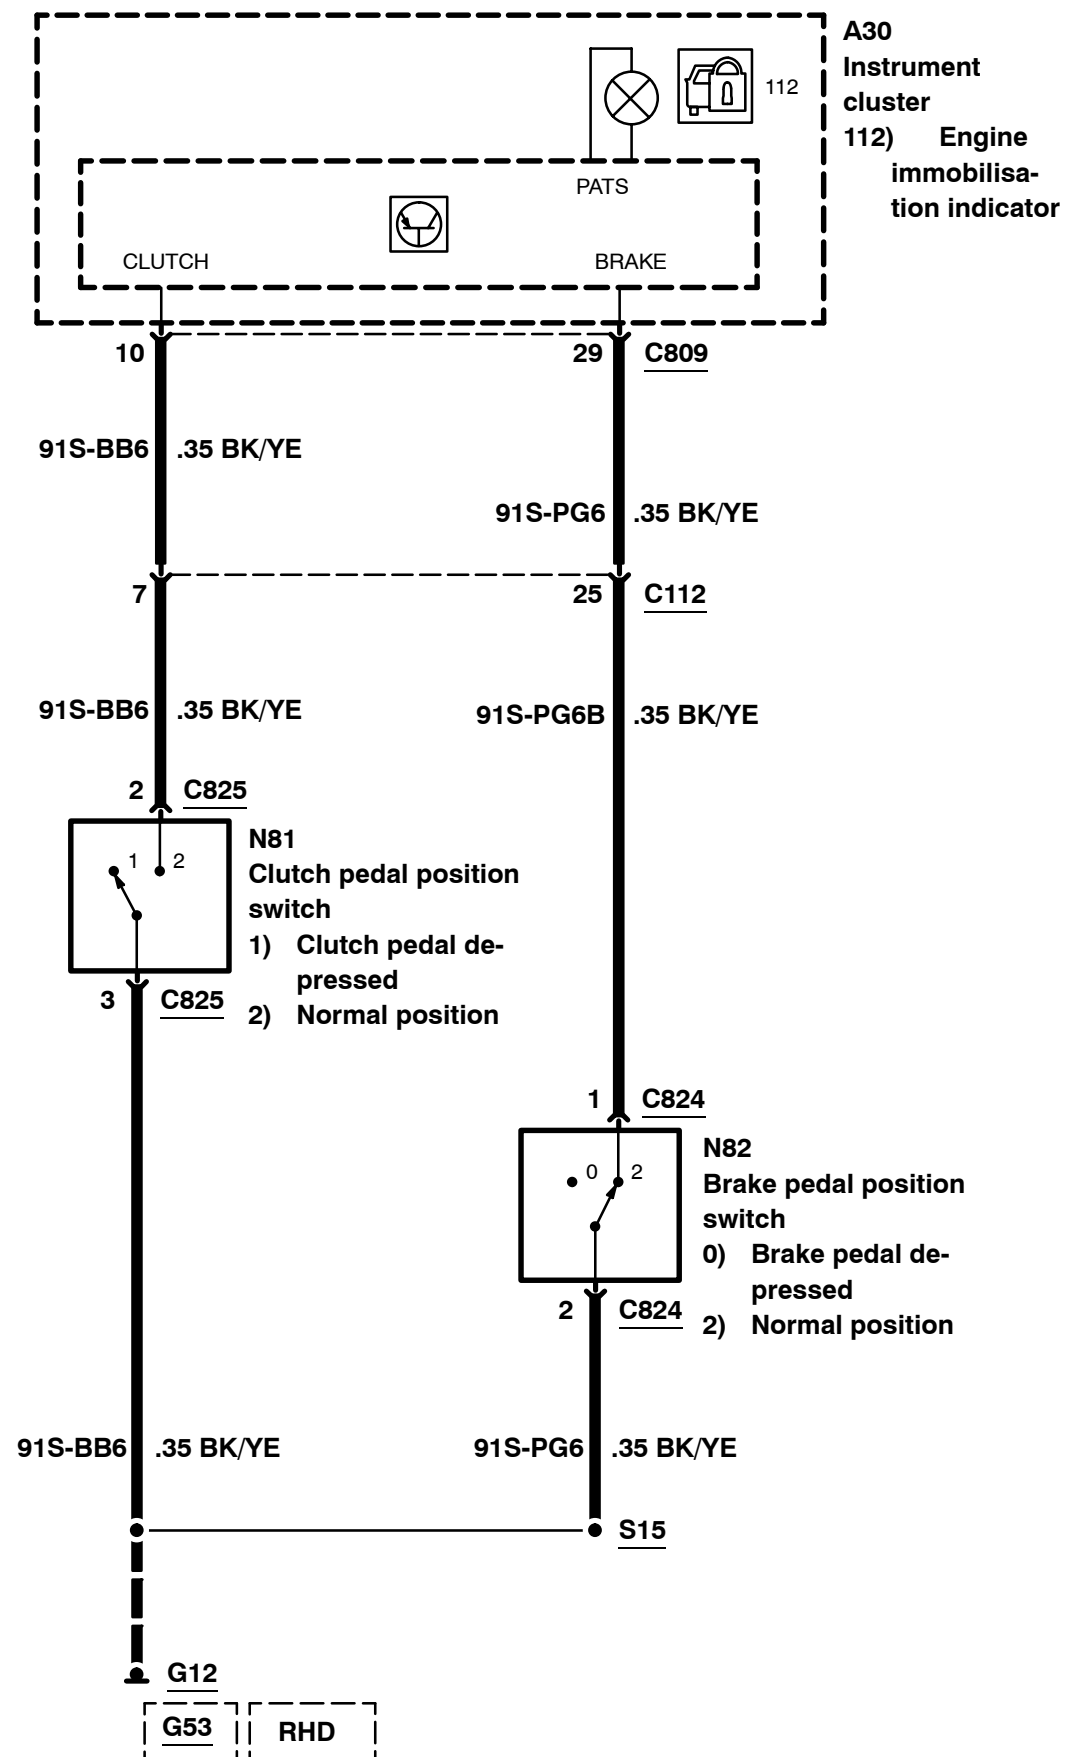

# Instrument Cluster


02/2008  
413-01-00-13  
2008.25  
Focus

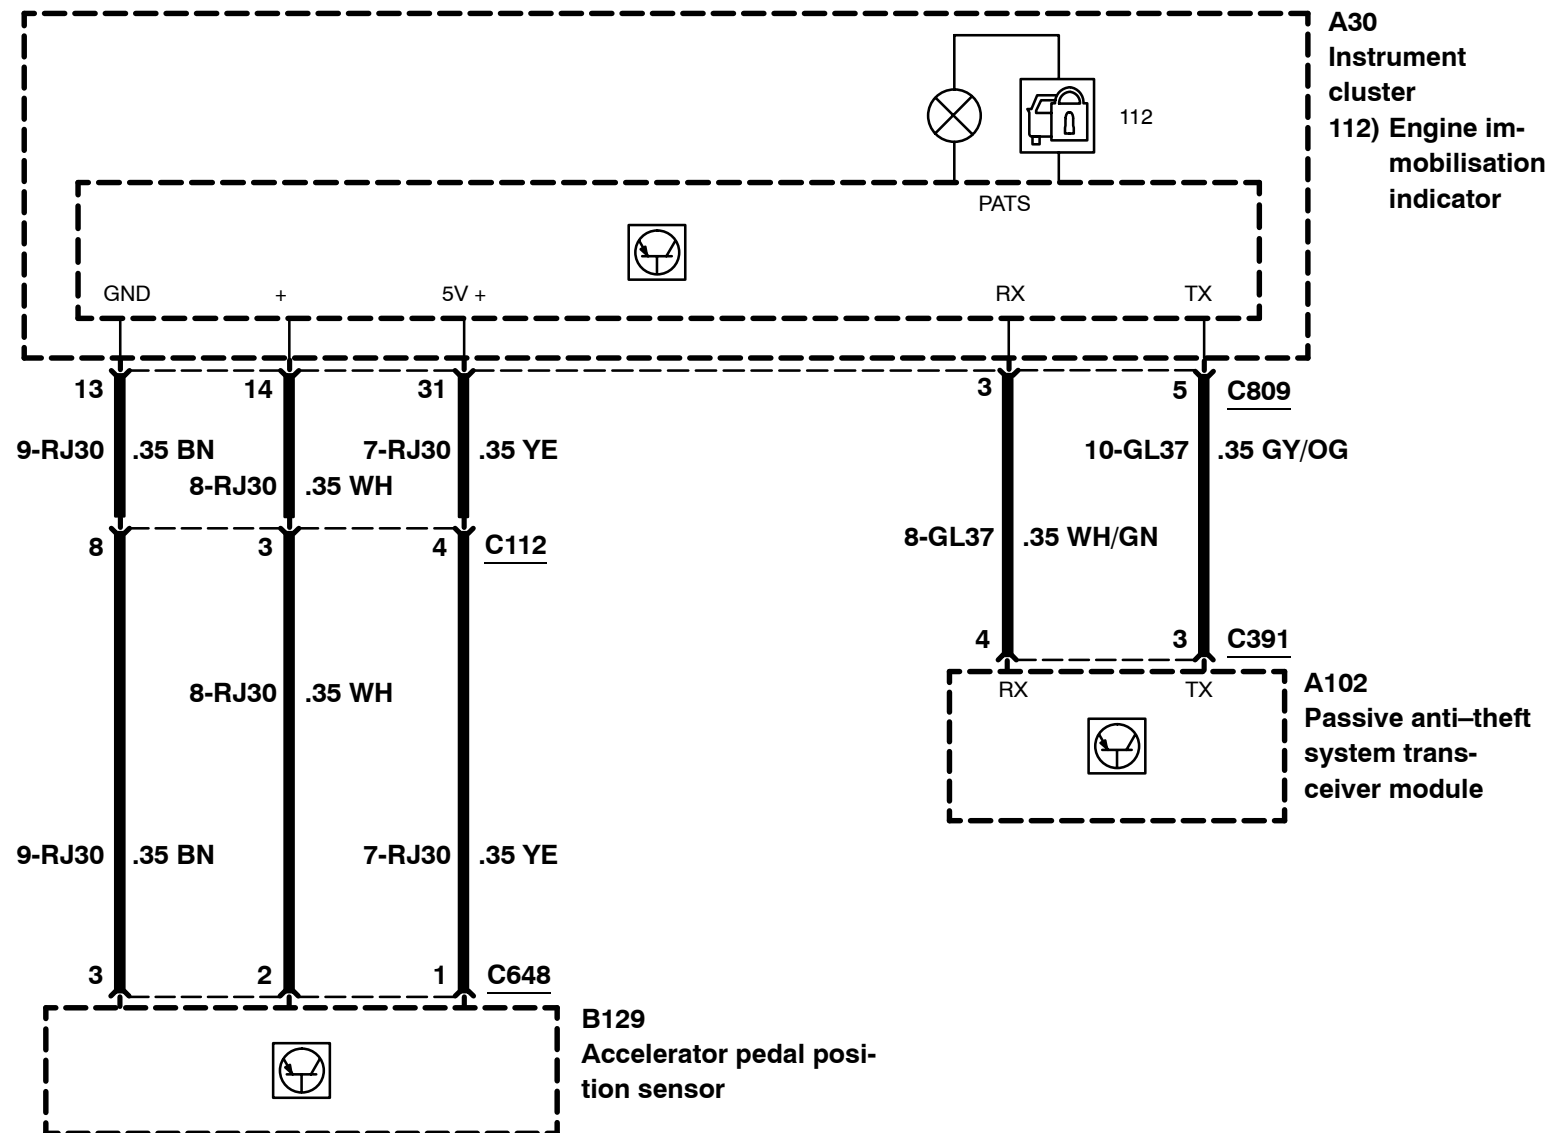

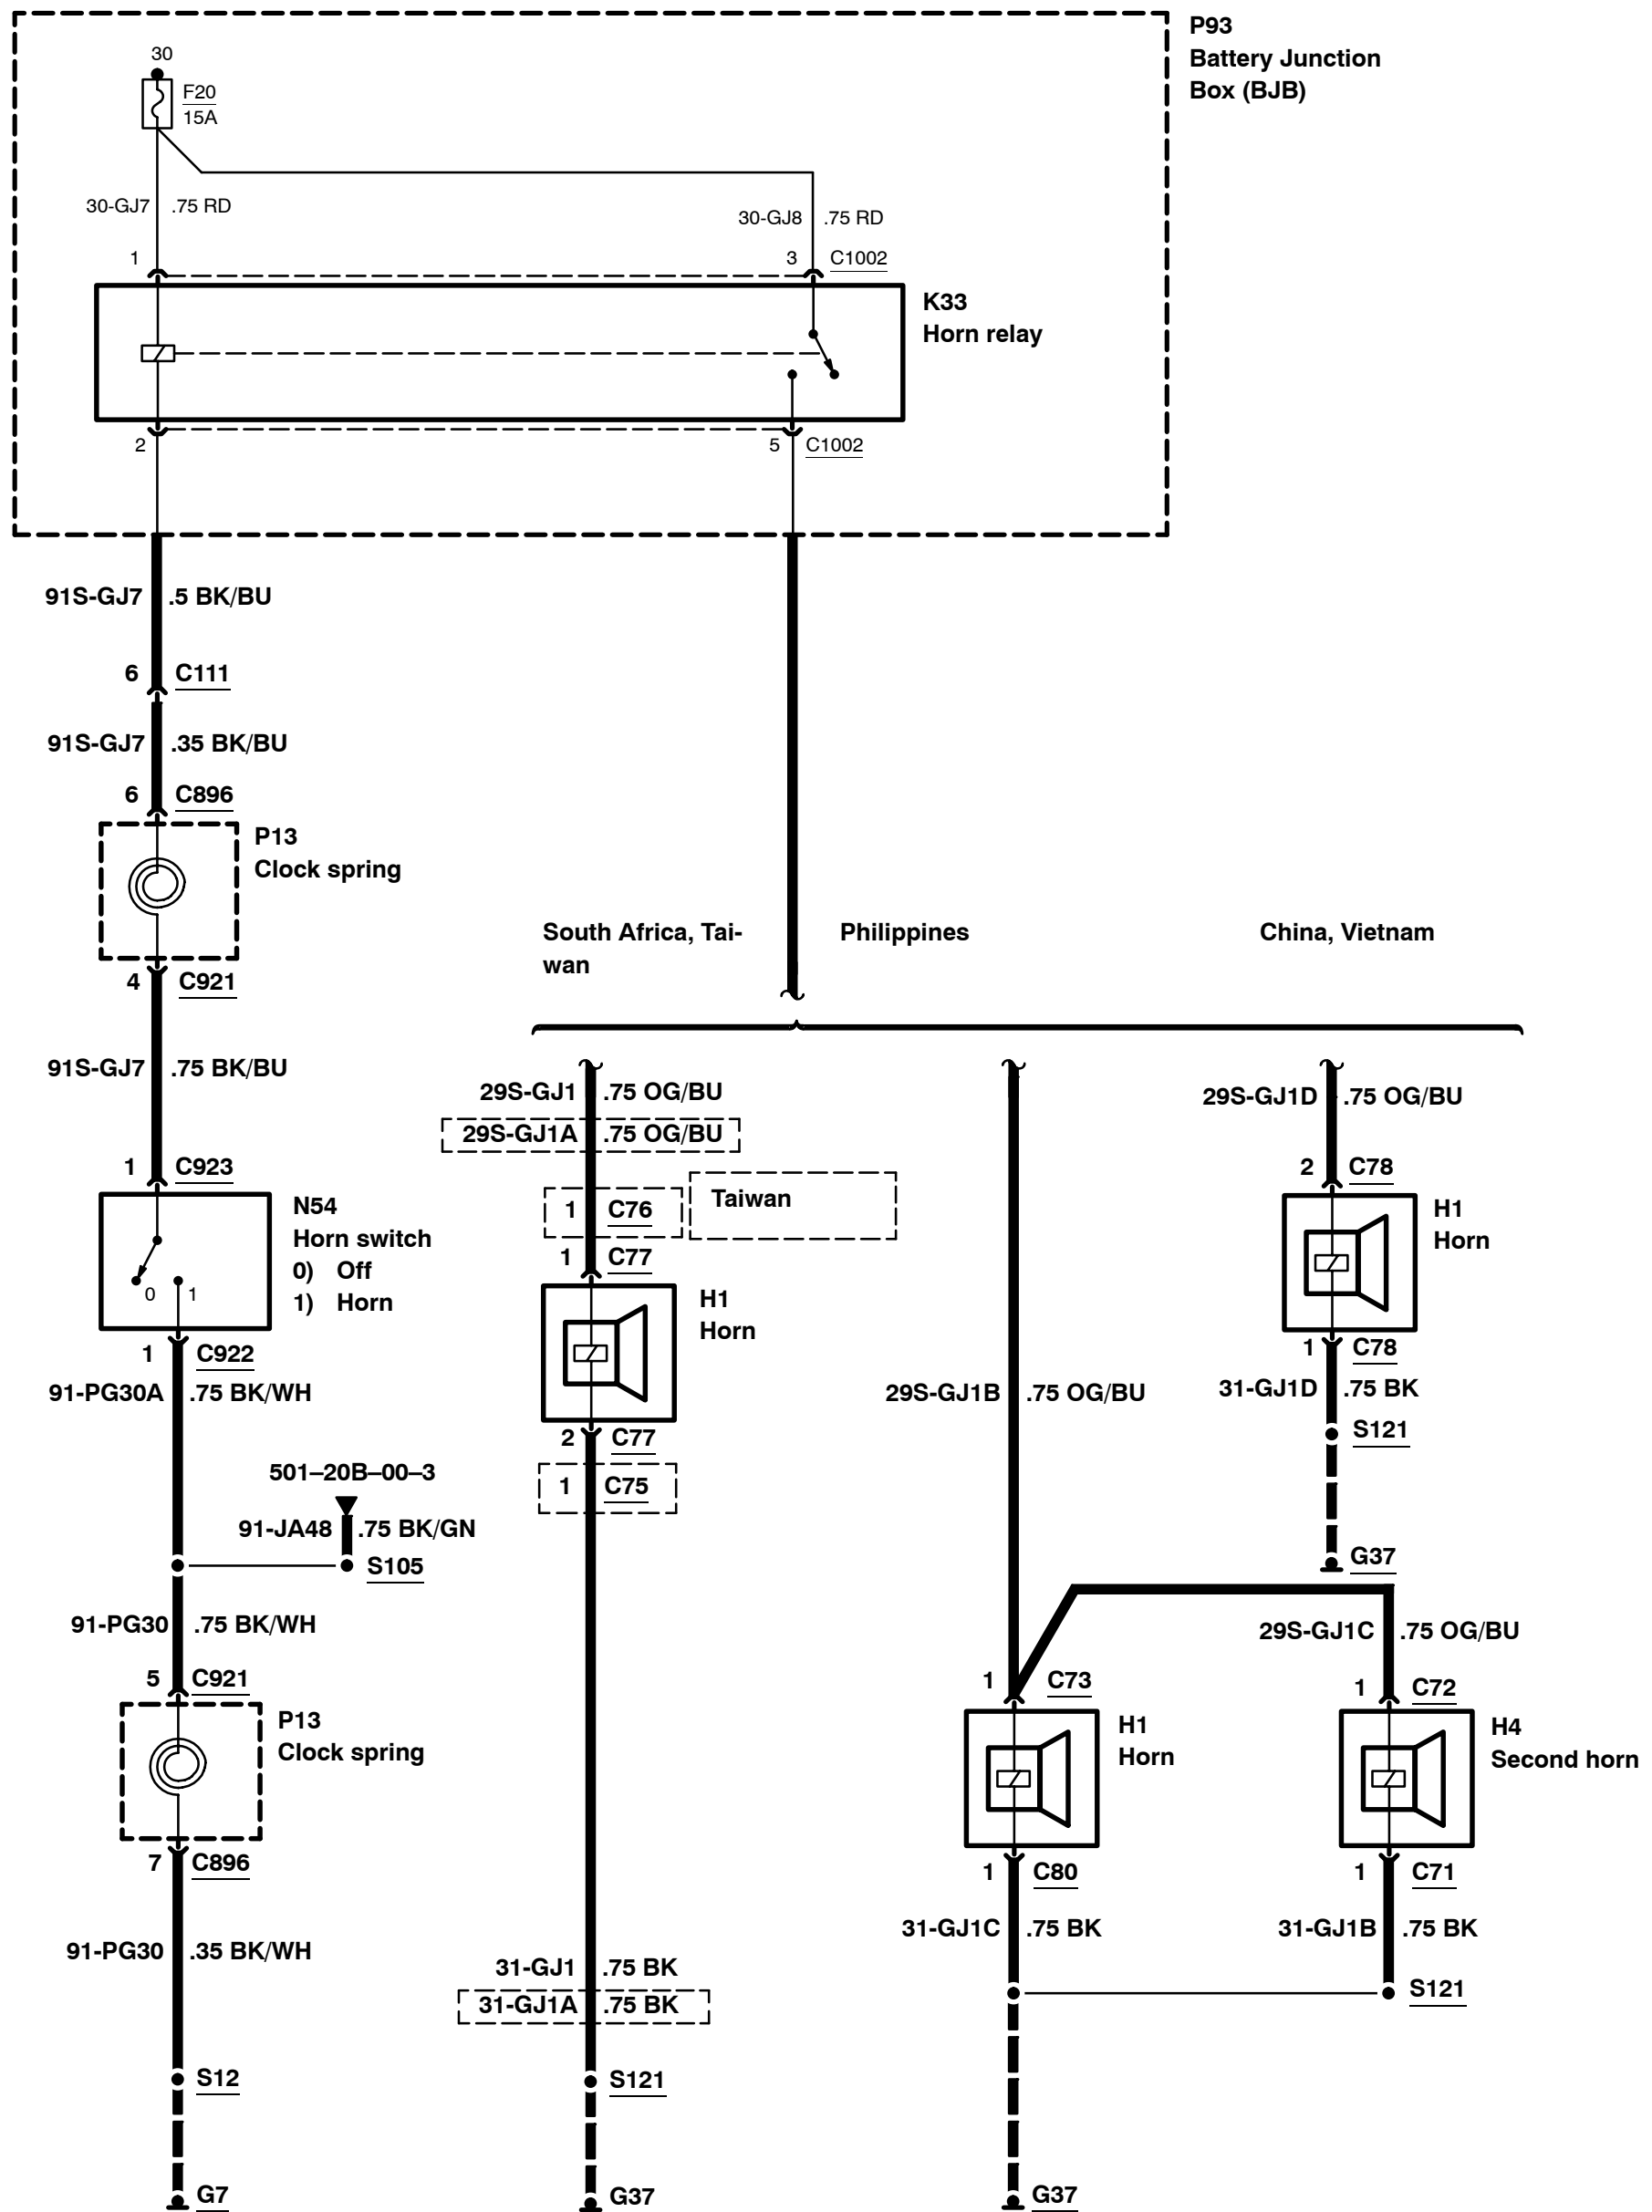


# Clock – without Sanyo radio

02/2008  
413-07-00-1  
2008.25  
Focus

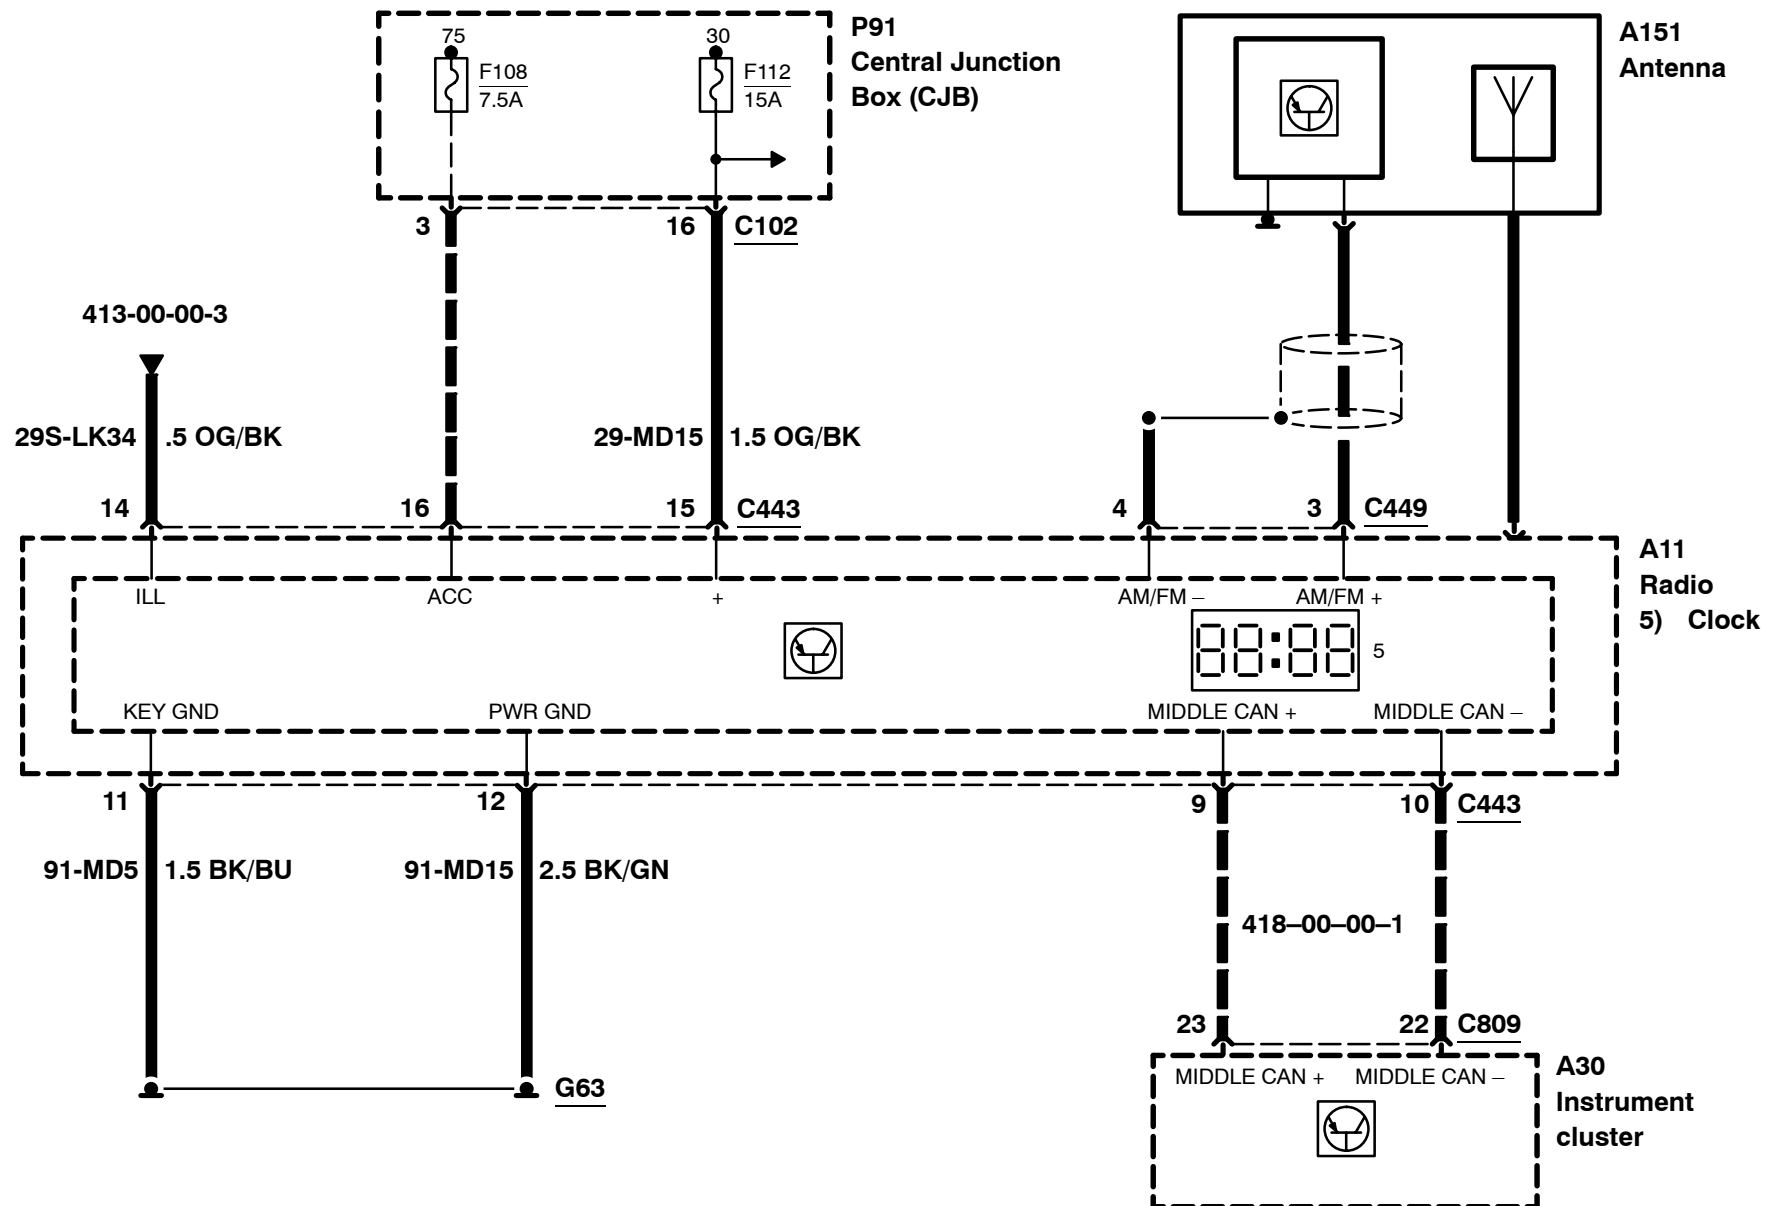

# Clock – with Sanyo radio


02/2008  
413-07-00-2  
2008.25  
Focus

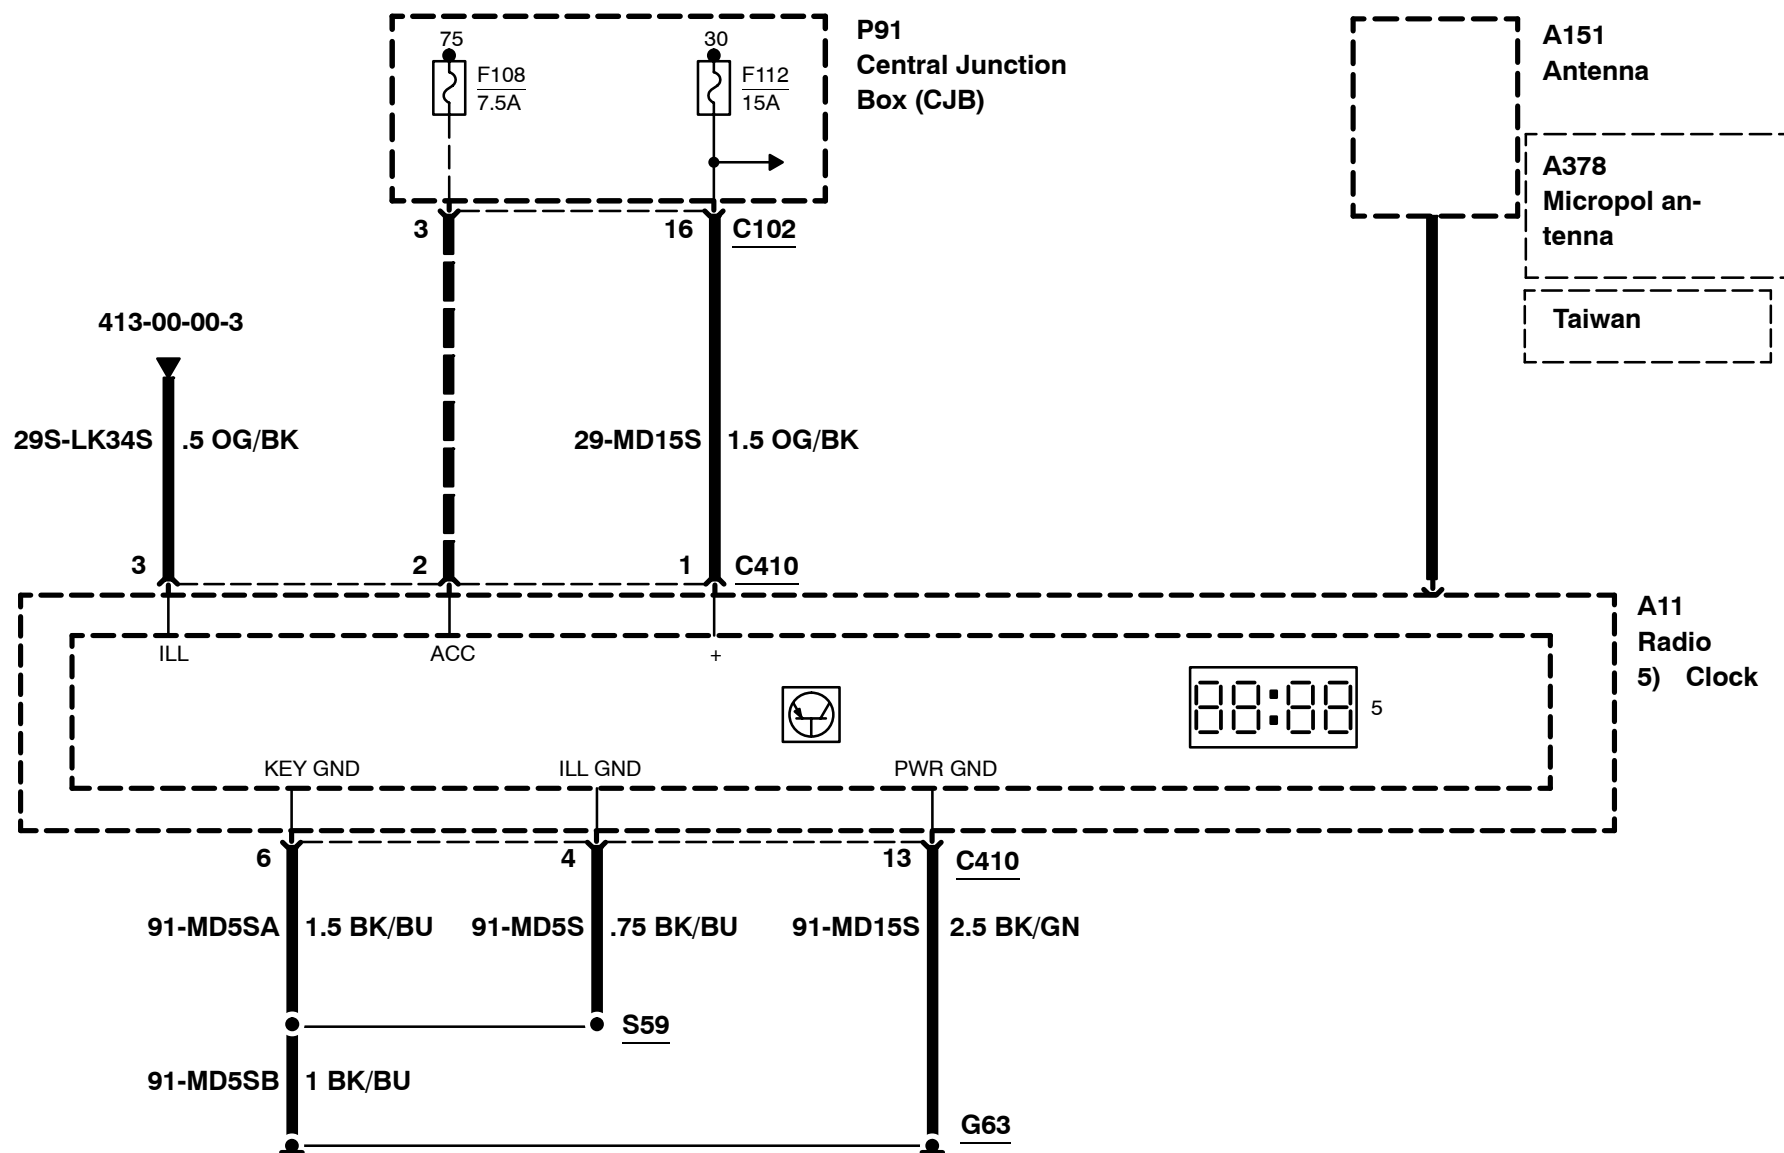

Parking Aid


02/2008  
413-13-00-1  
2008.25  
Focus

- 417-01-00-27 manual transmission, 4-door model
- 417-01-00-28 manual transmission, 5-door model
- 417-01-00-29 automatic transmission, 4-door model, except 1.6L (Z6)
- 417-01-00-30 automatic transmission, 5-door model, except 1.6L (Z6)
- 417-01-00-31 automatic transmission, 4-door model, 1.6L (Z6)
- 417-01-00-32 automatic transmission, 5-door model, 1.6L (Z6)

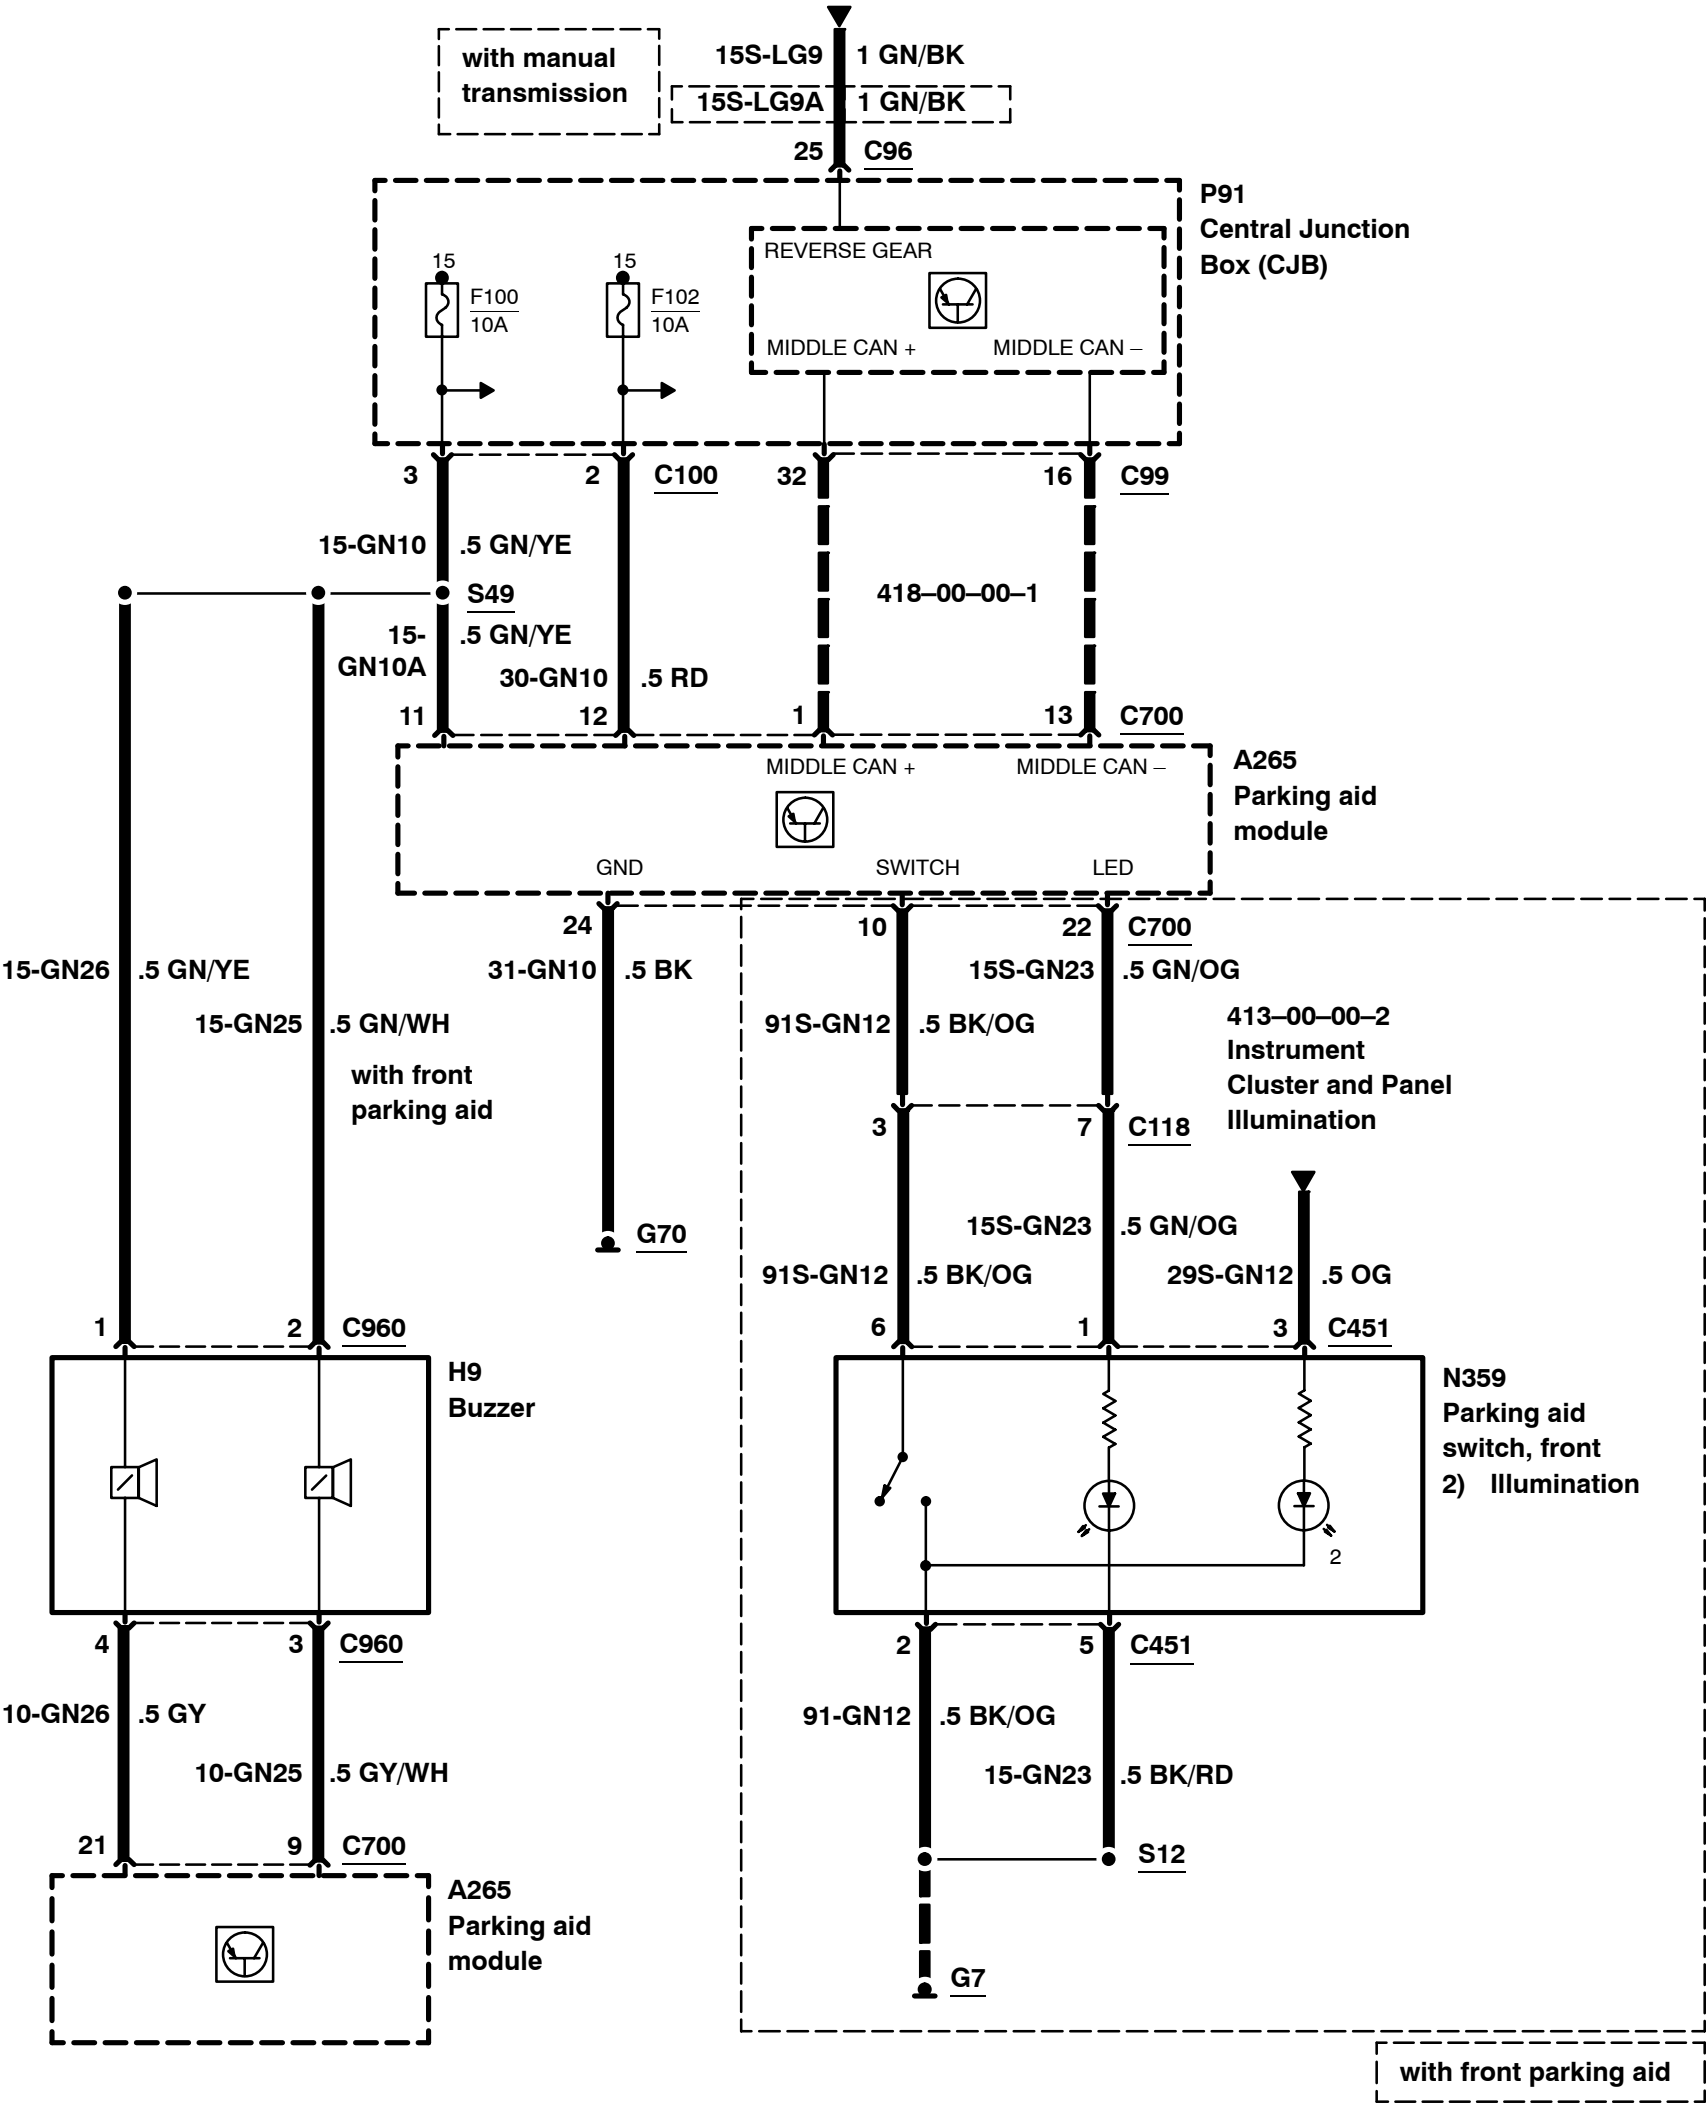


# Parking Aid – front bumper

02/2008  
413-13-00-2  
2008.25  
Focus

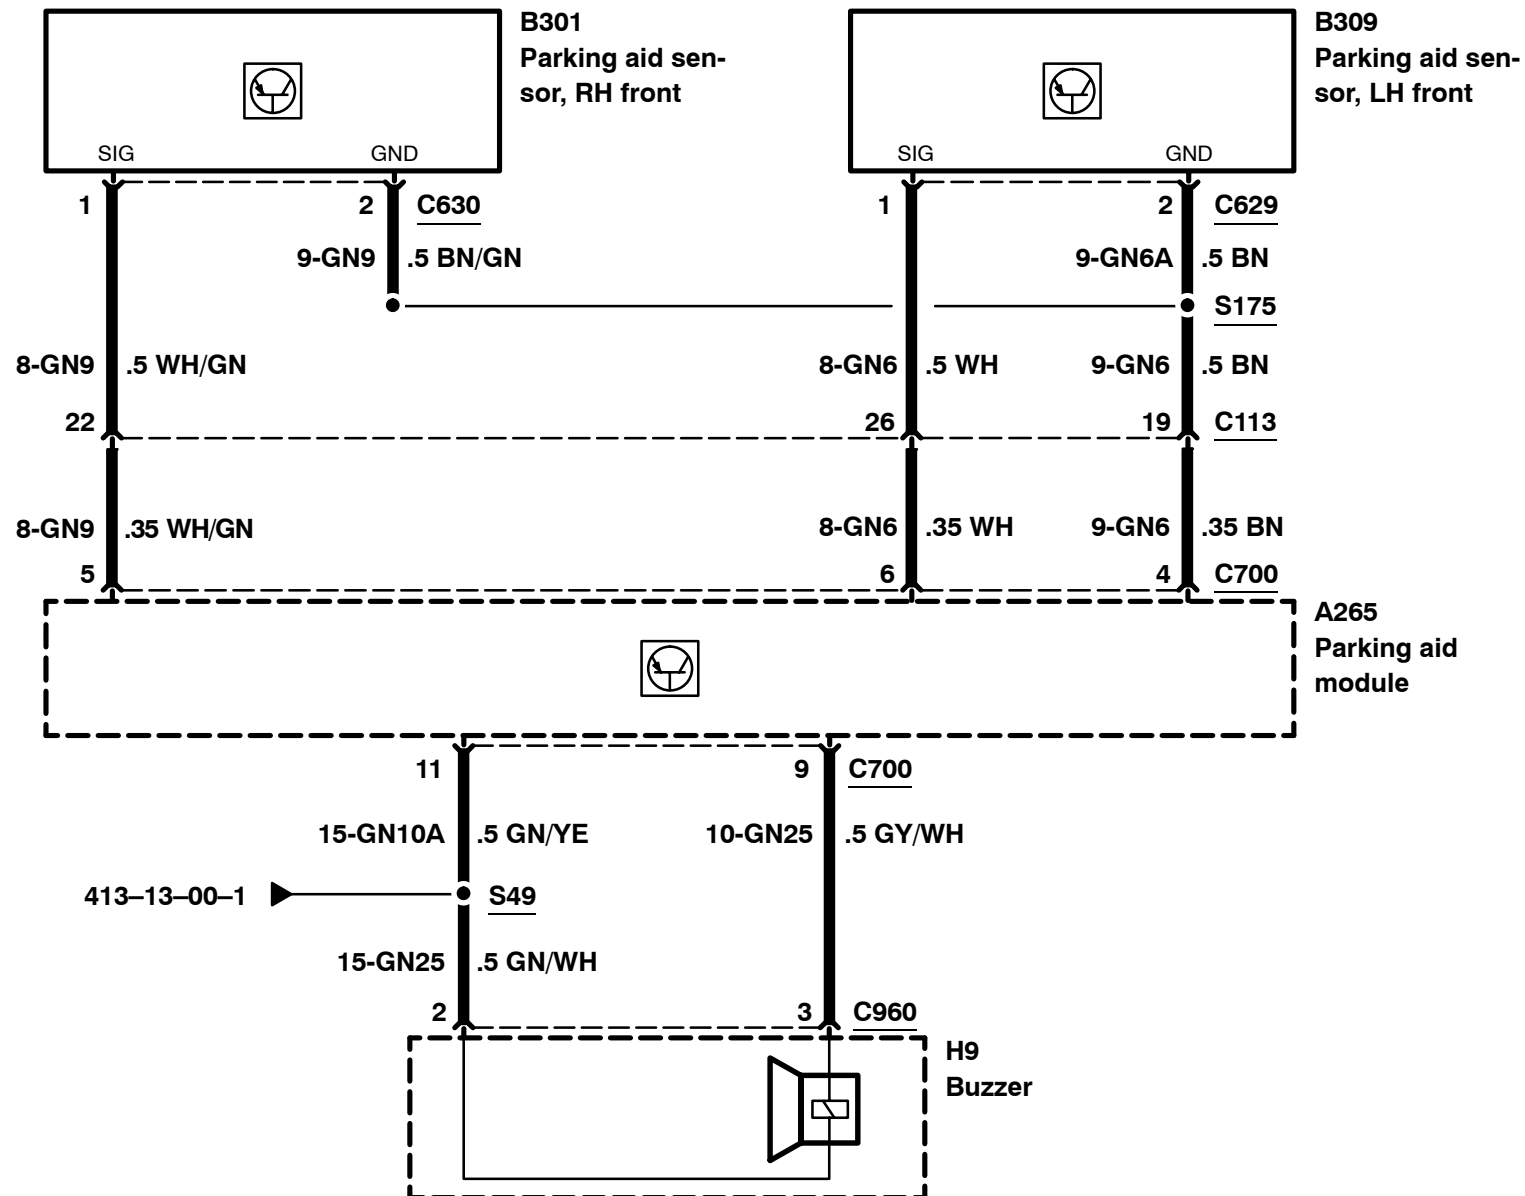

Parking Aid – rear bumper, before model year 2009


02/2008  
413-13-00-3  
2008.25  
Focus

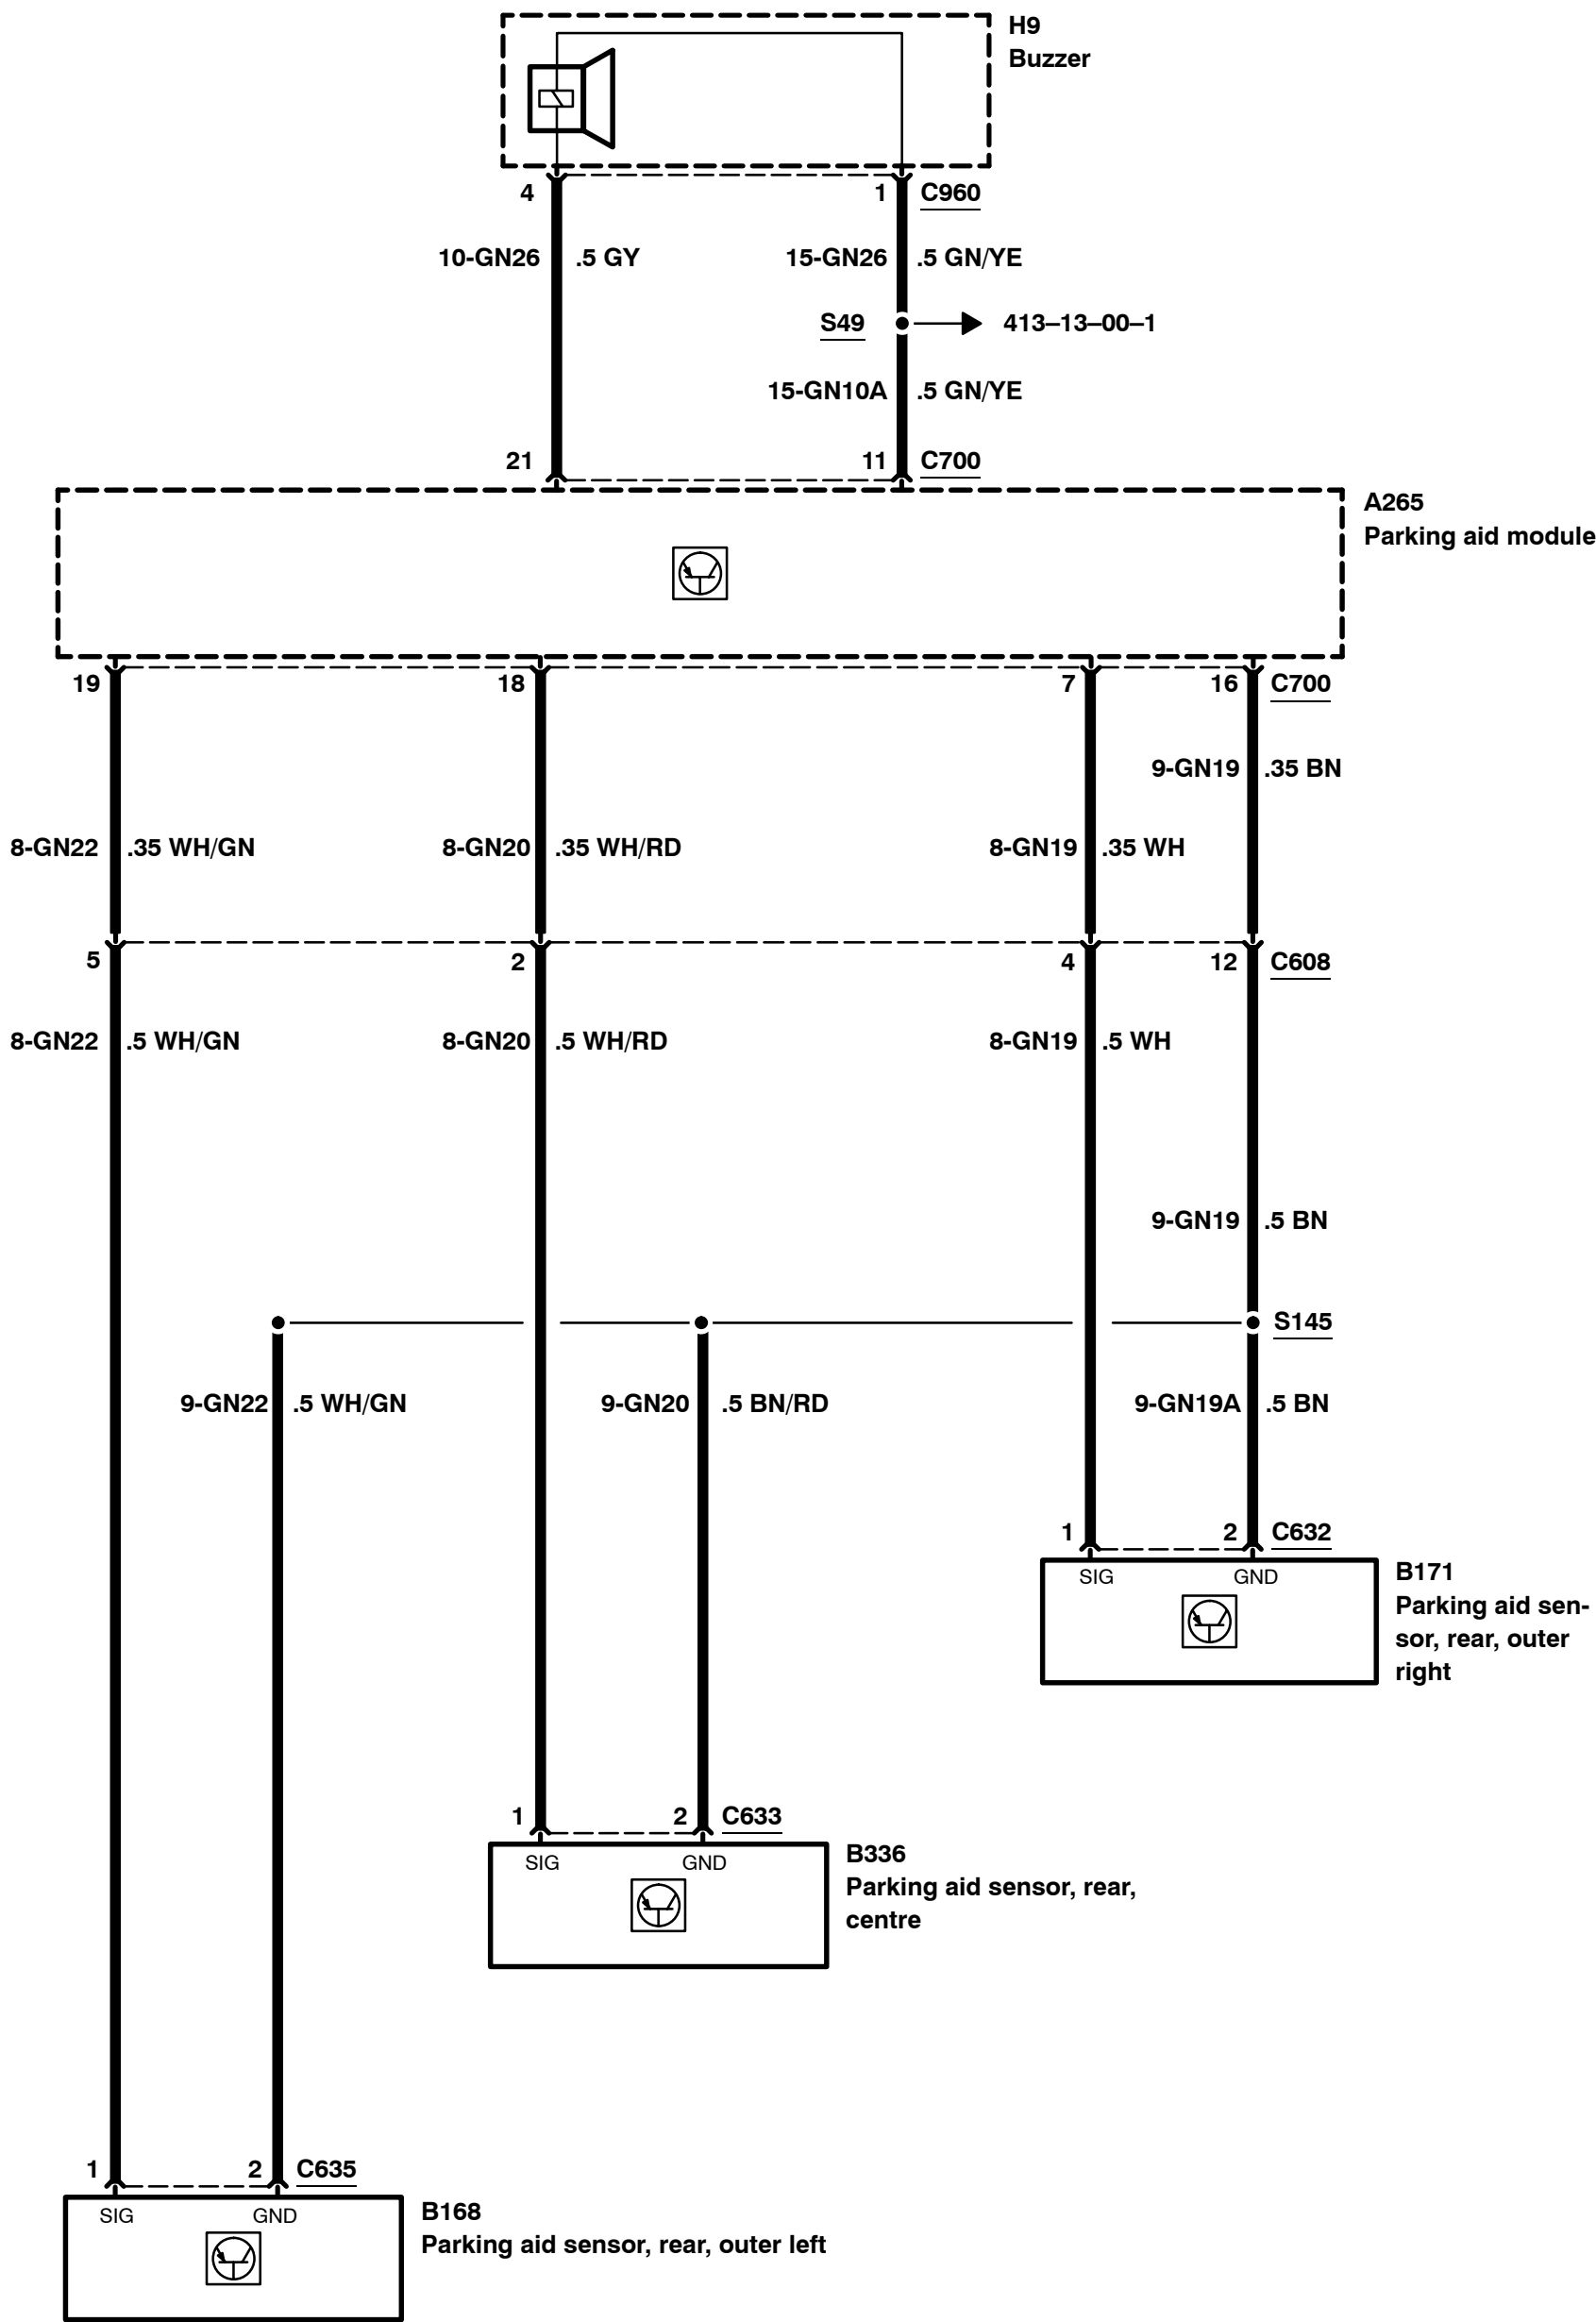




Parking Aid – rear bumper, as of model year 2009, 4–door model

02/2008  
413-13-00-4  
2008.25  
Focus

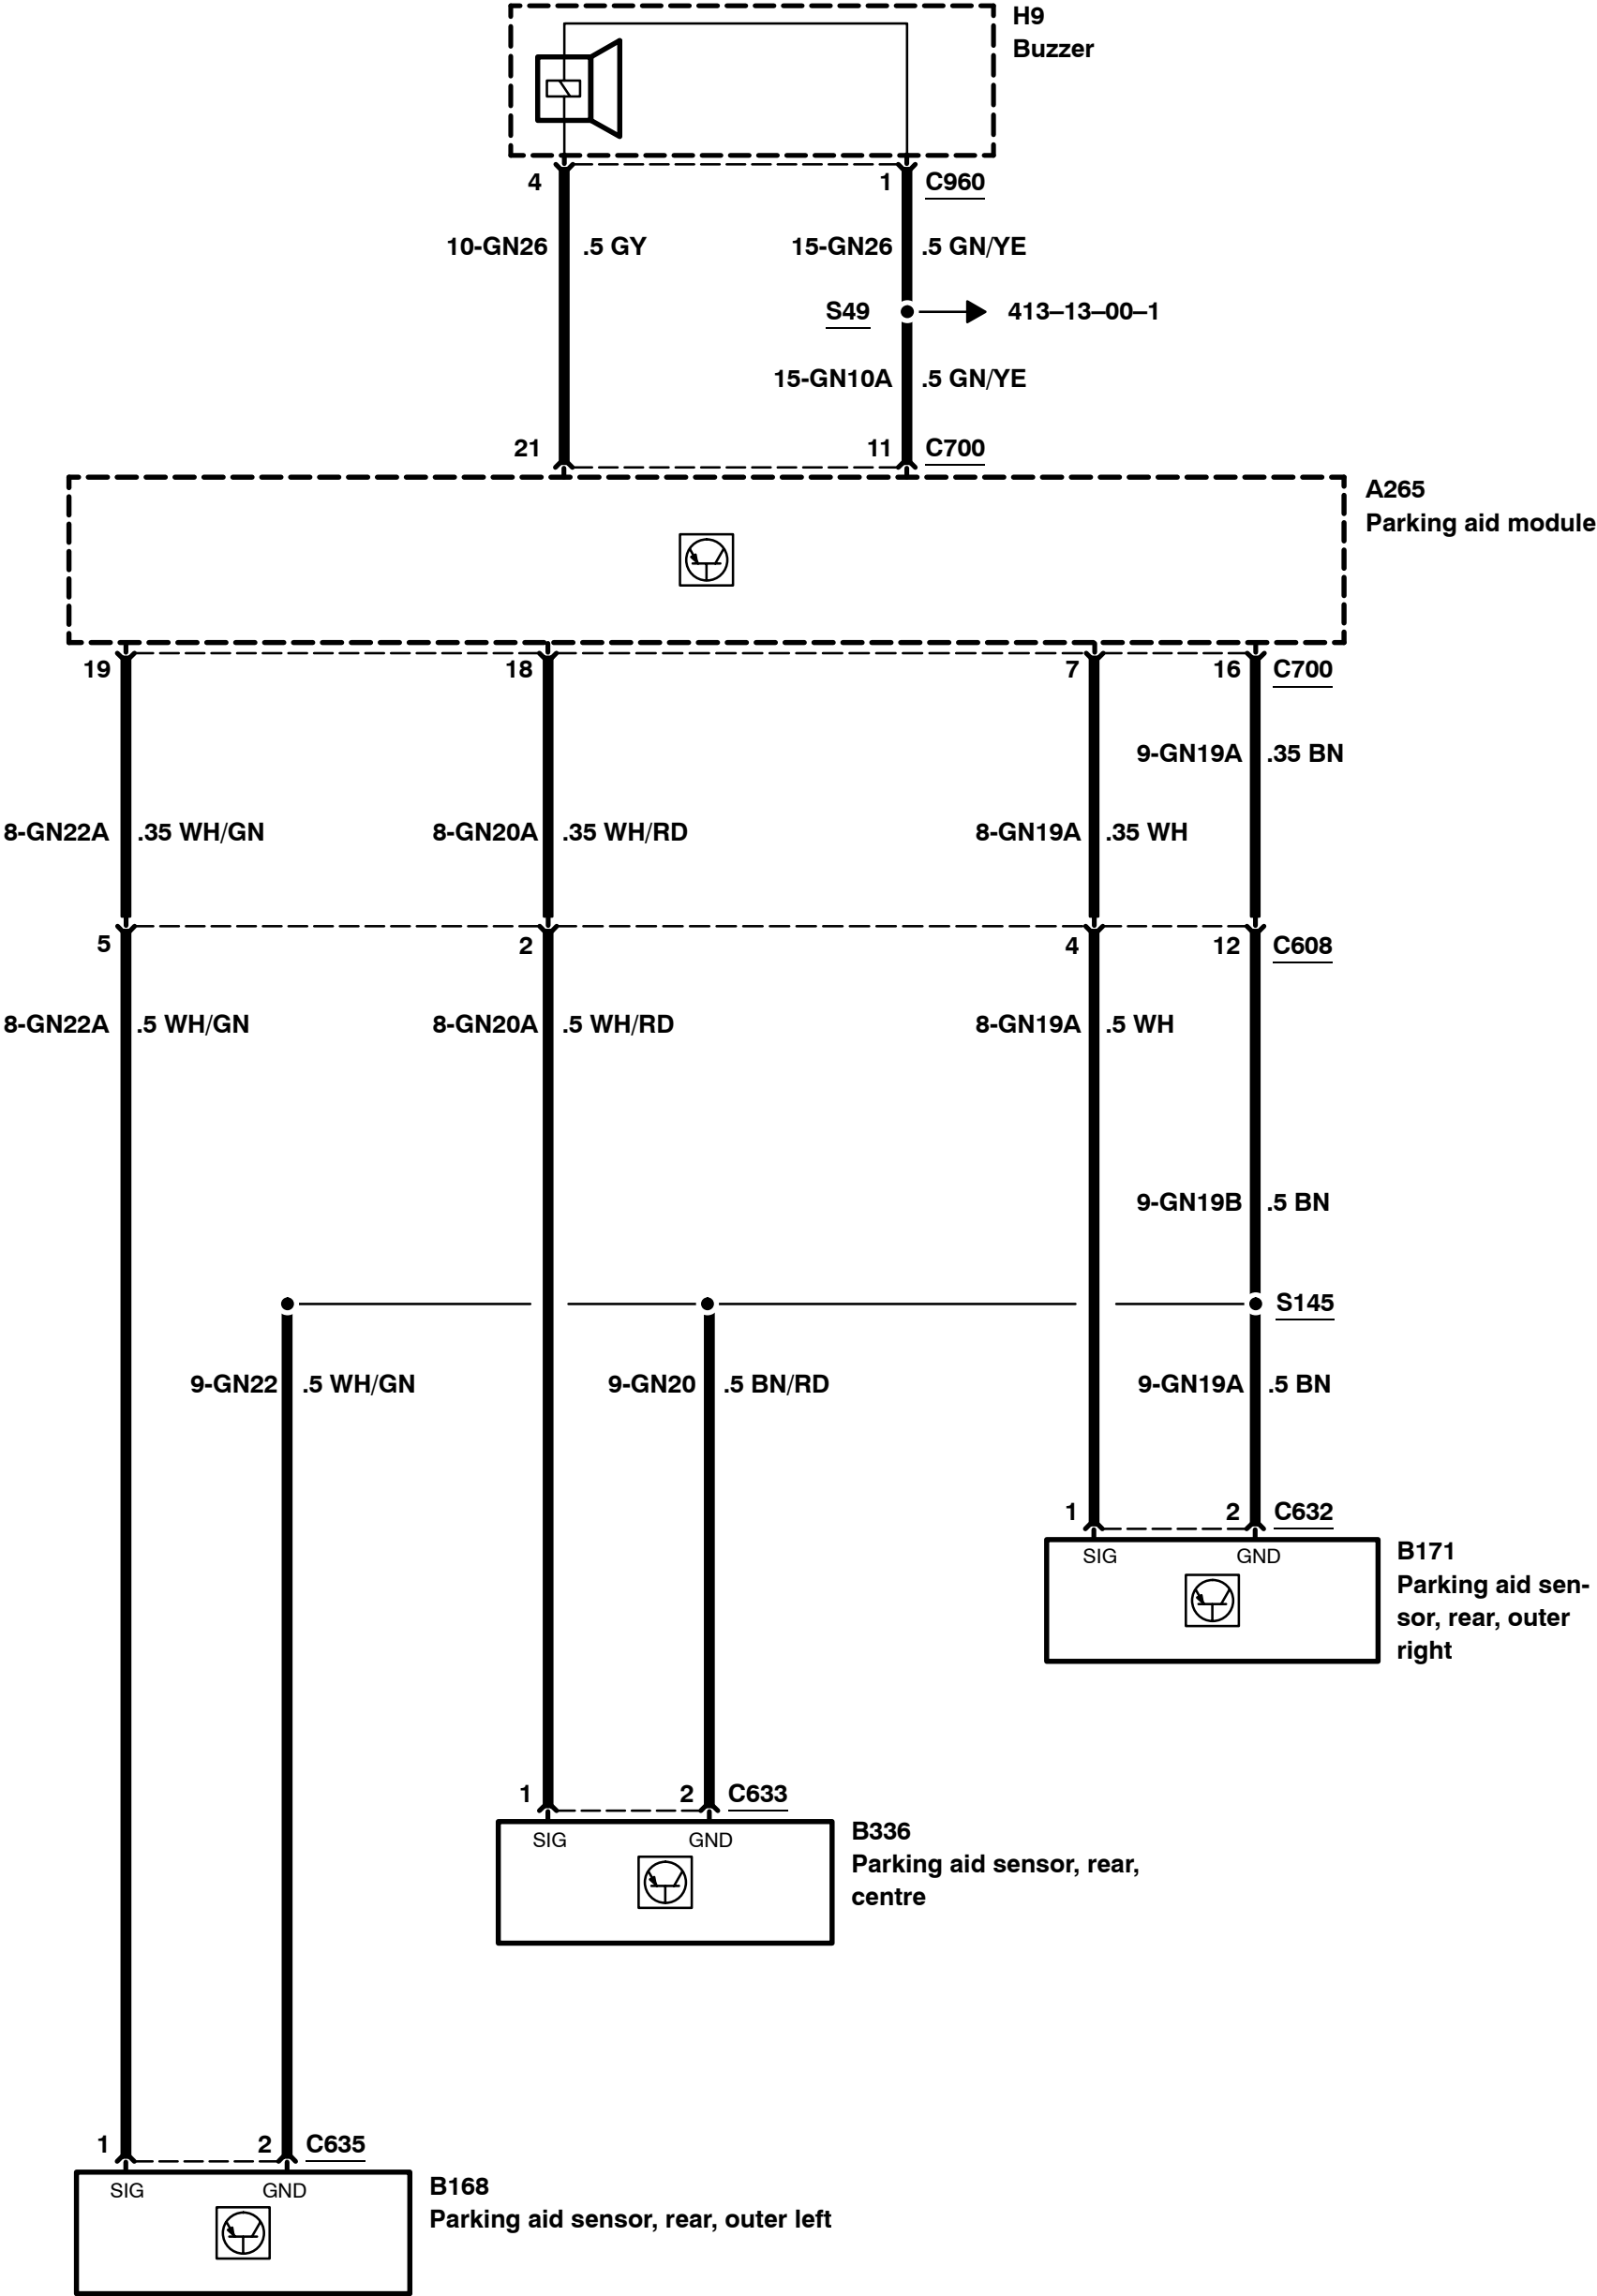


Parking Aid – rear bumper, as of model year 2009, 5–door model

02/2008  
413-13-00-5  
2008.25  
Focus

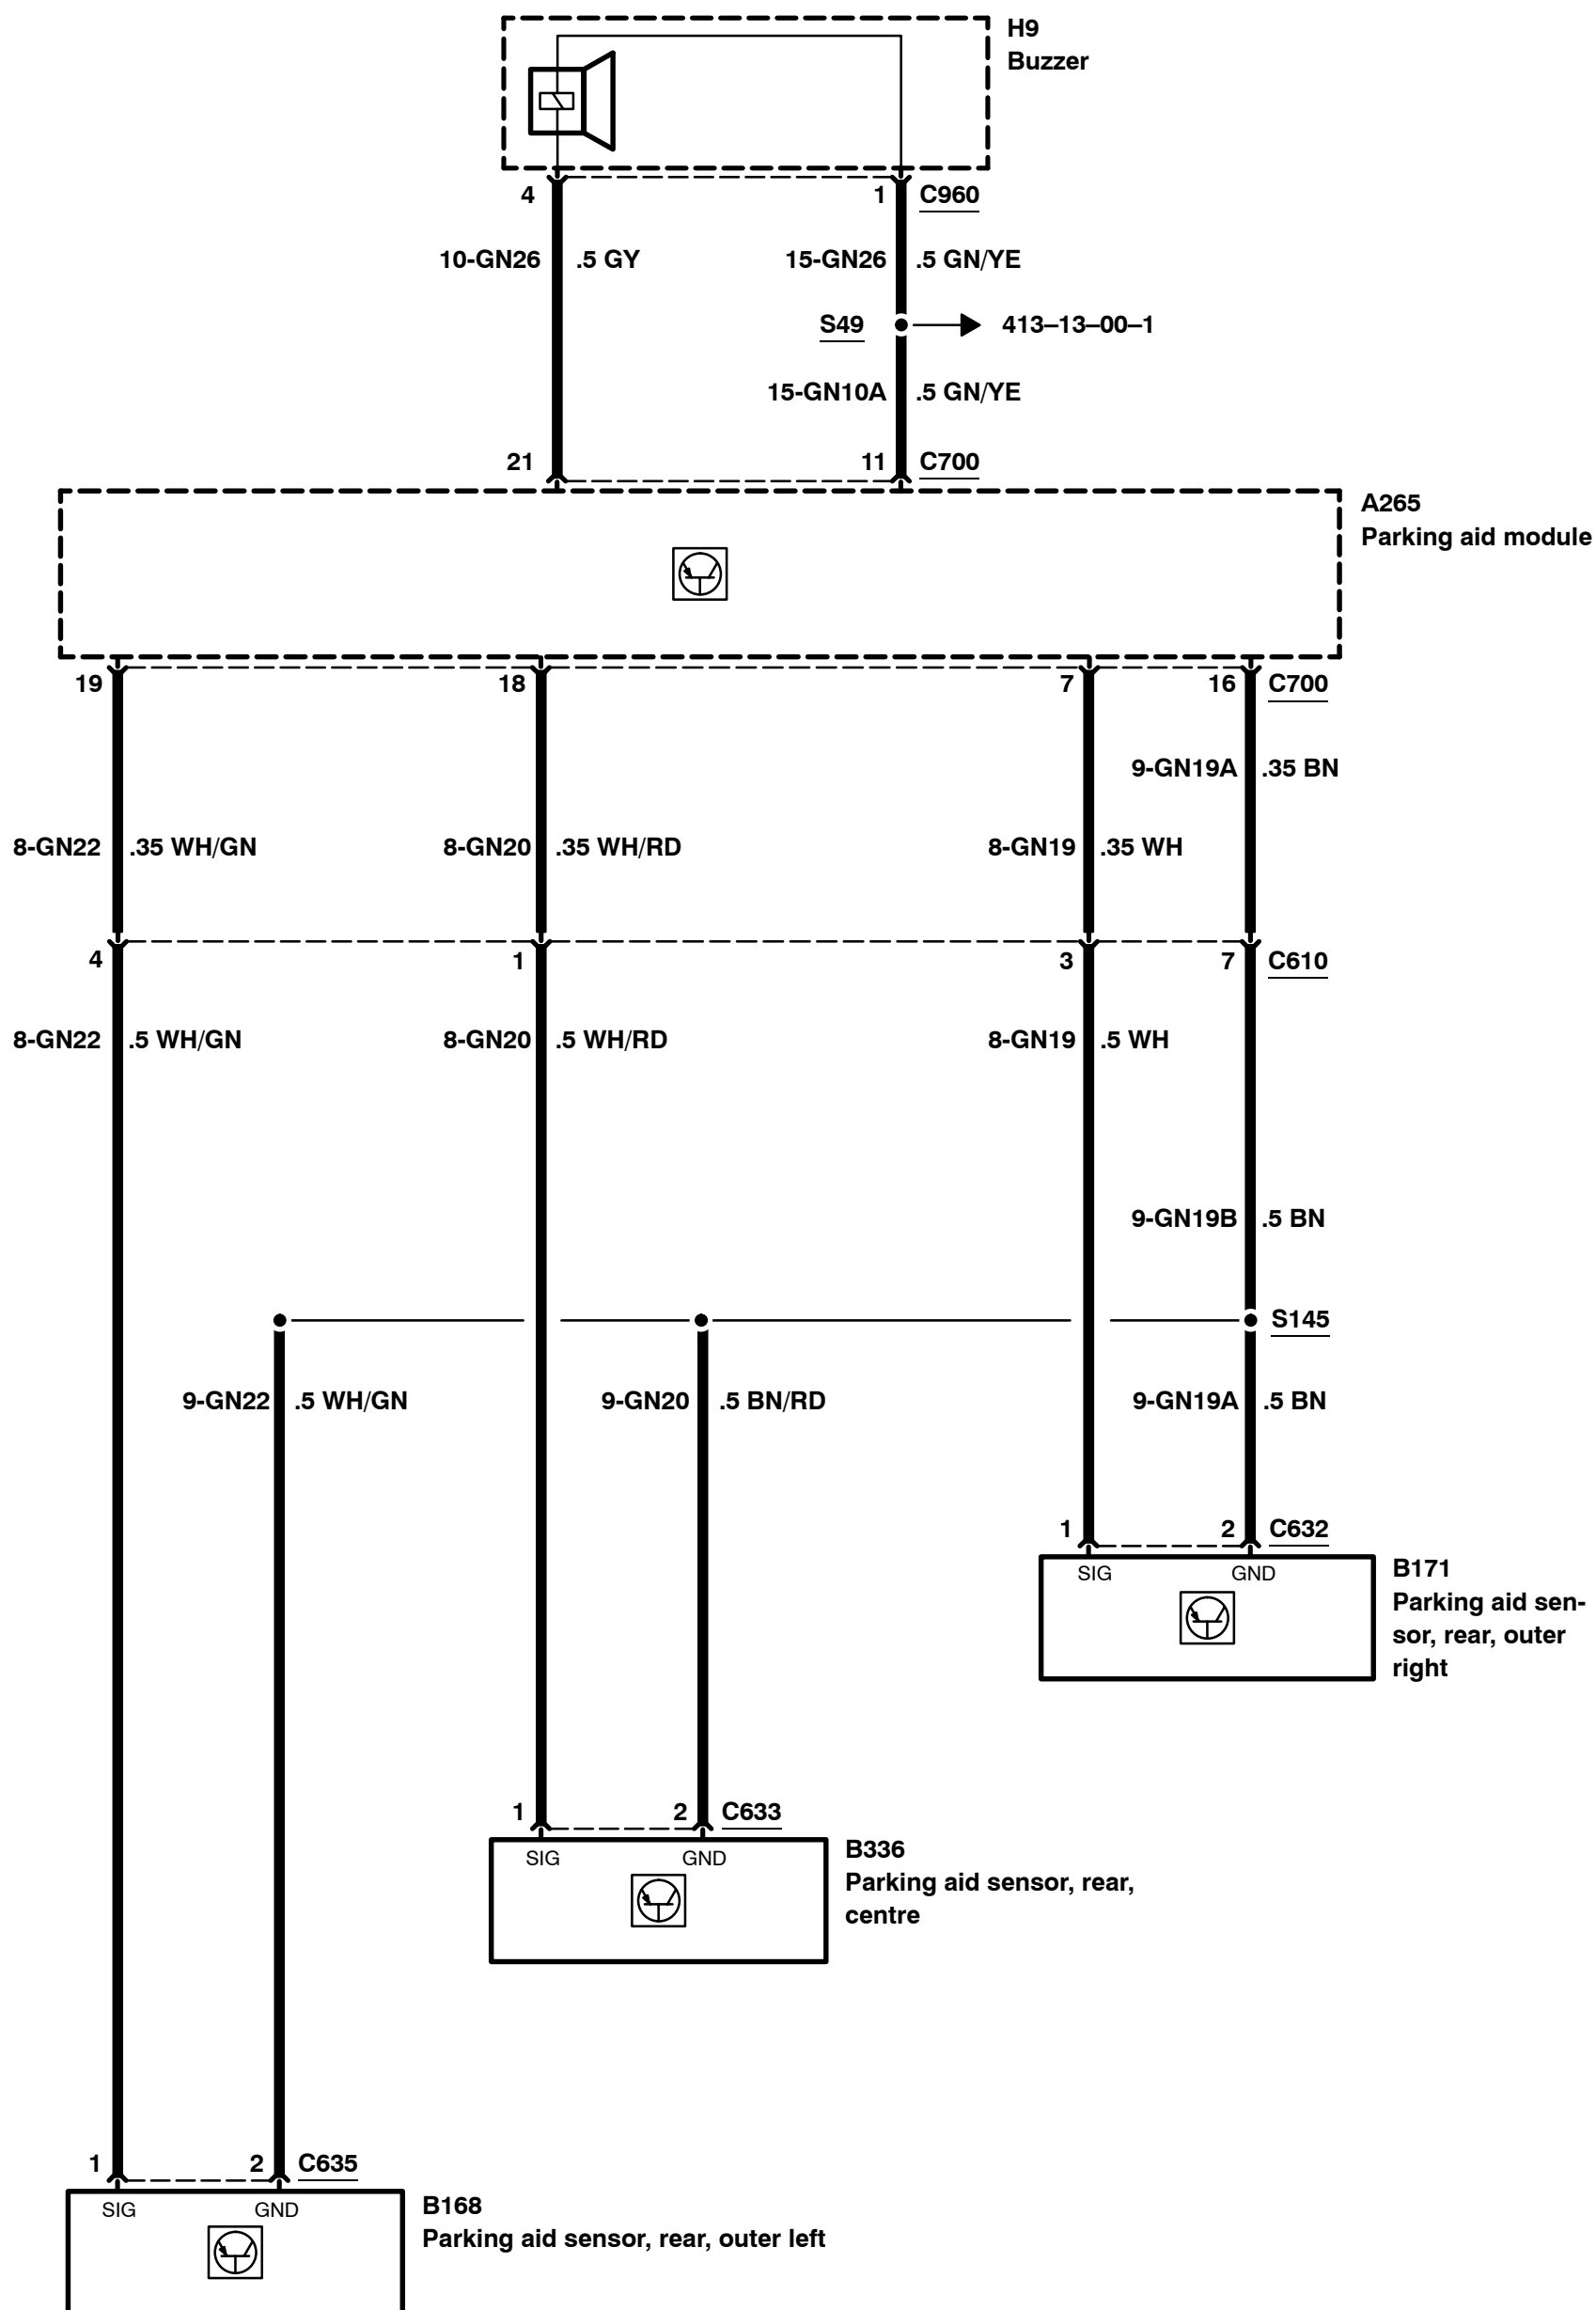


Generator and Regulator – 1.6L (Z6)


02/2008  
414-02A-00-1  
2008.25  
Focus

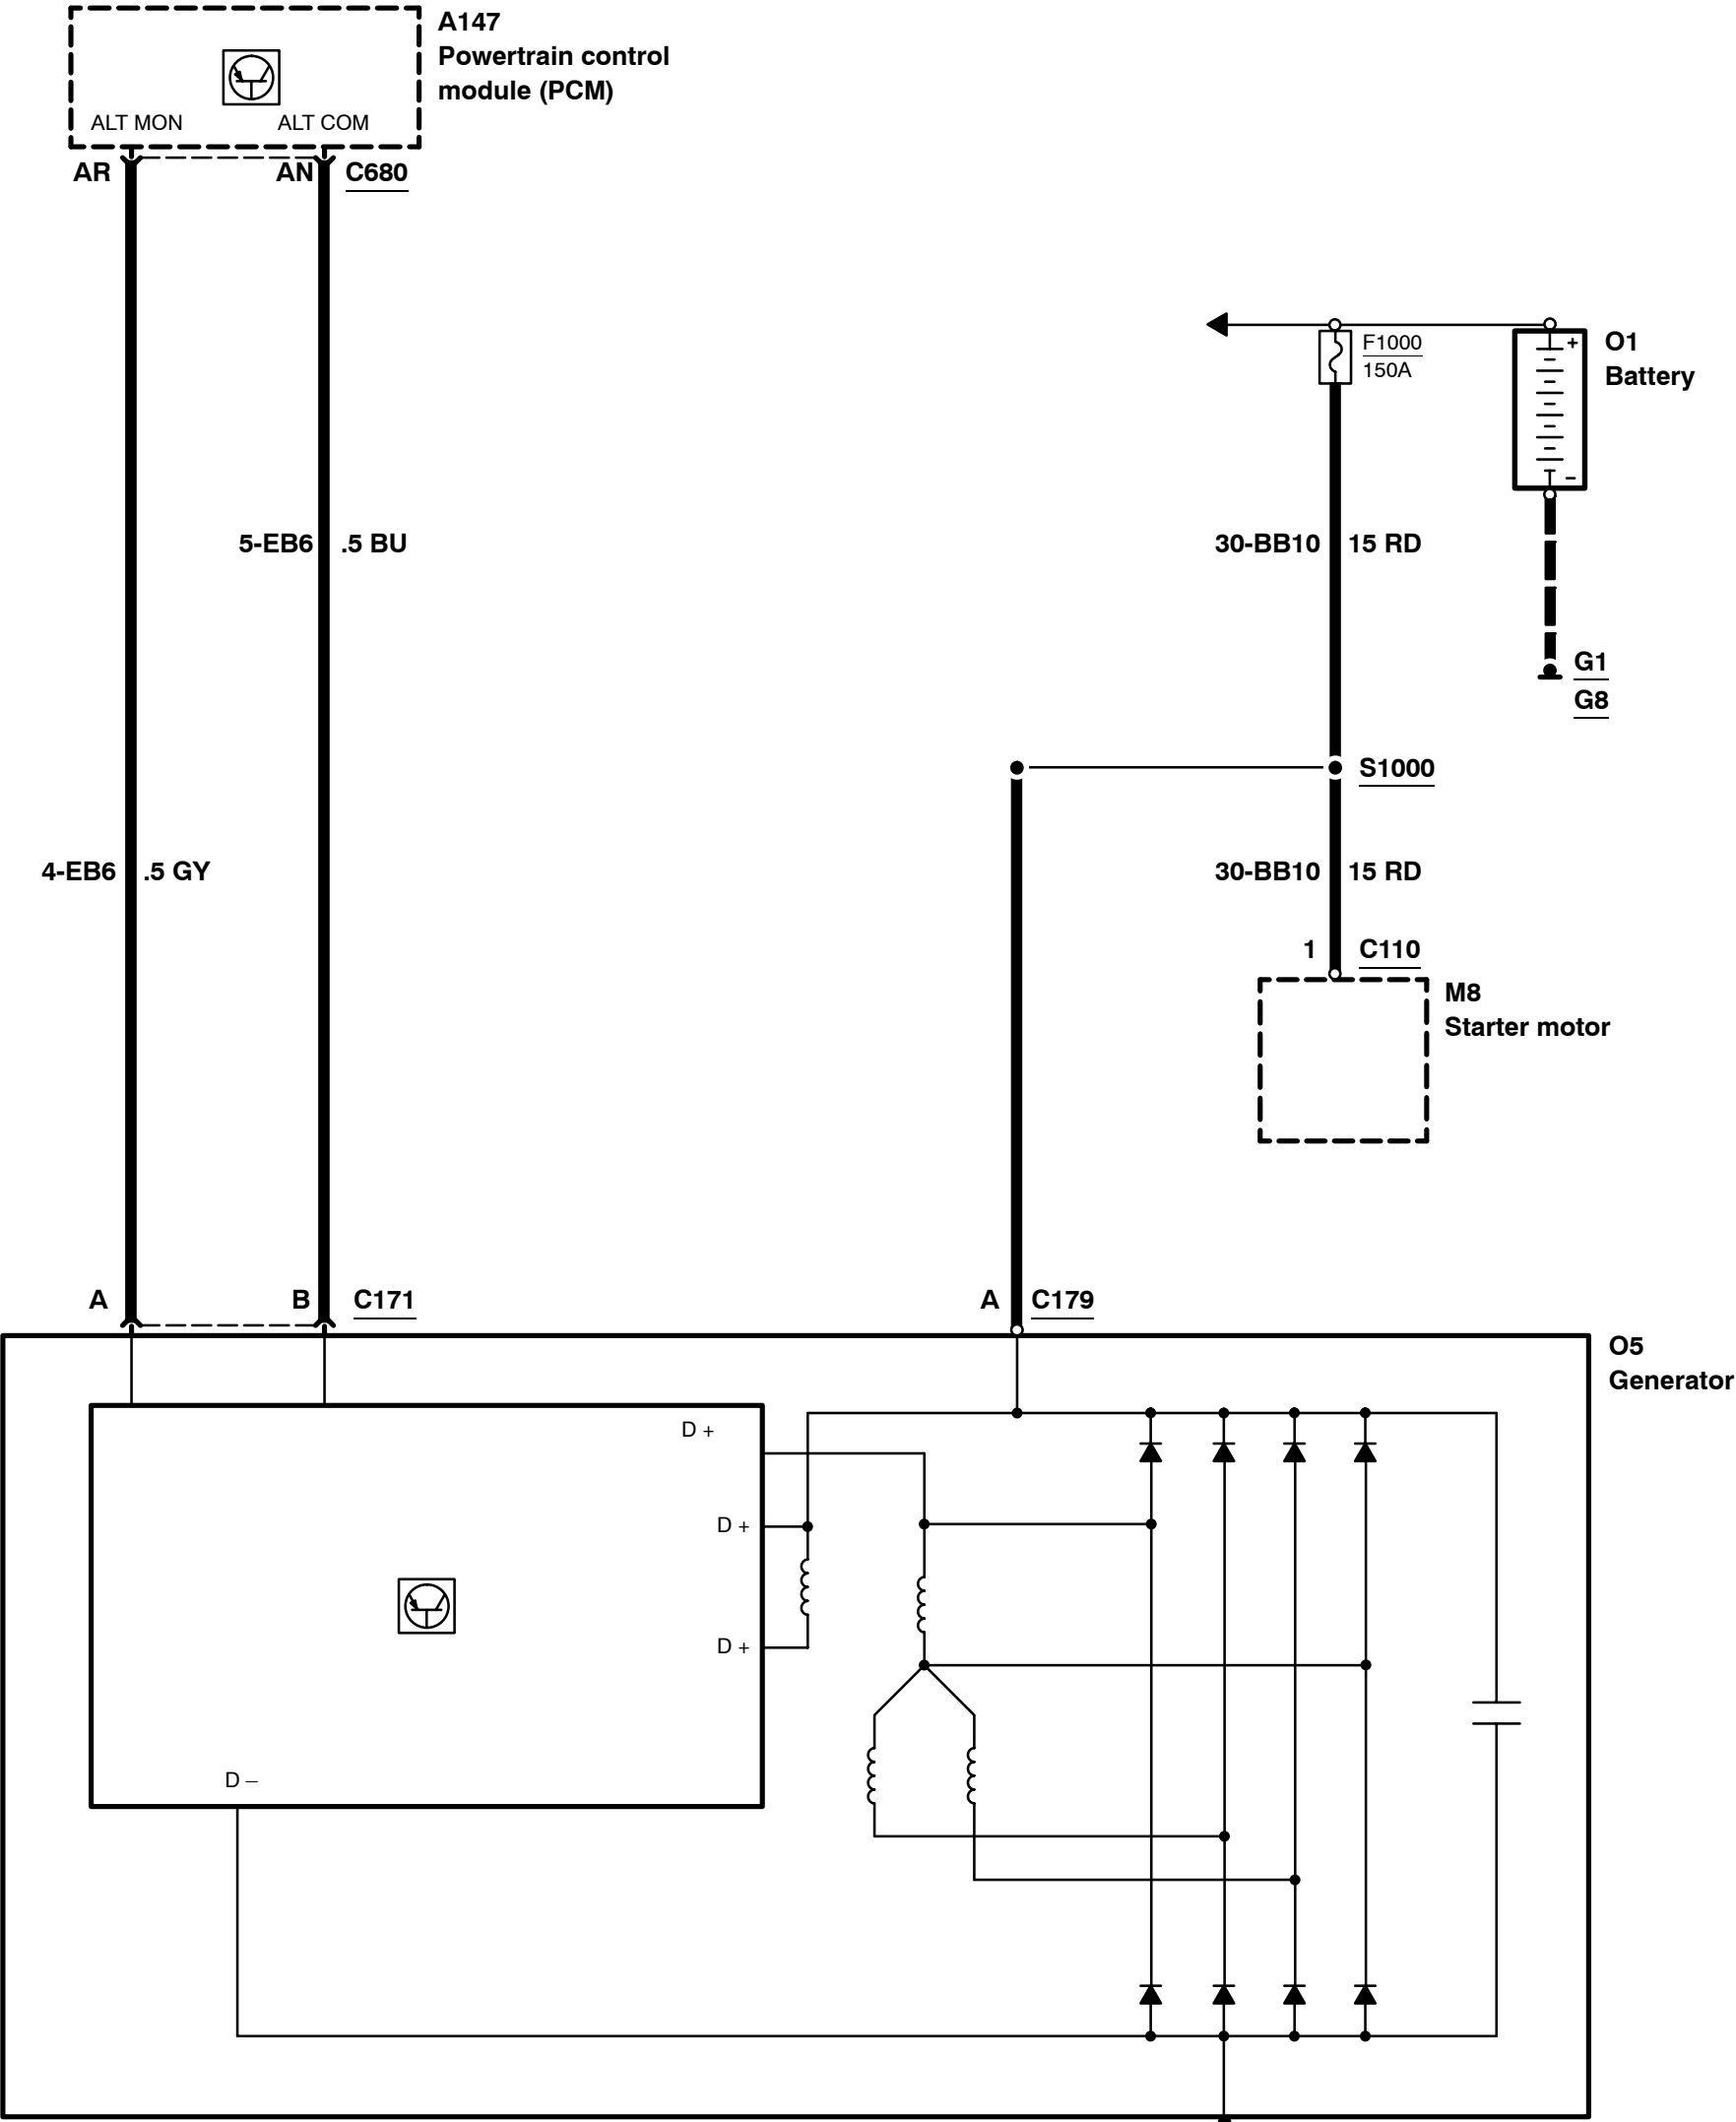

Generator and Regulator – 1.8/2.0L Duratec–HE (Ml4), before model year 2009


02/2008  
414-02B-00-1  
2008.25  
Focus

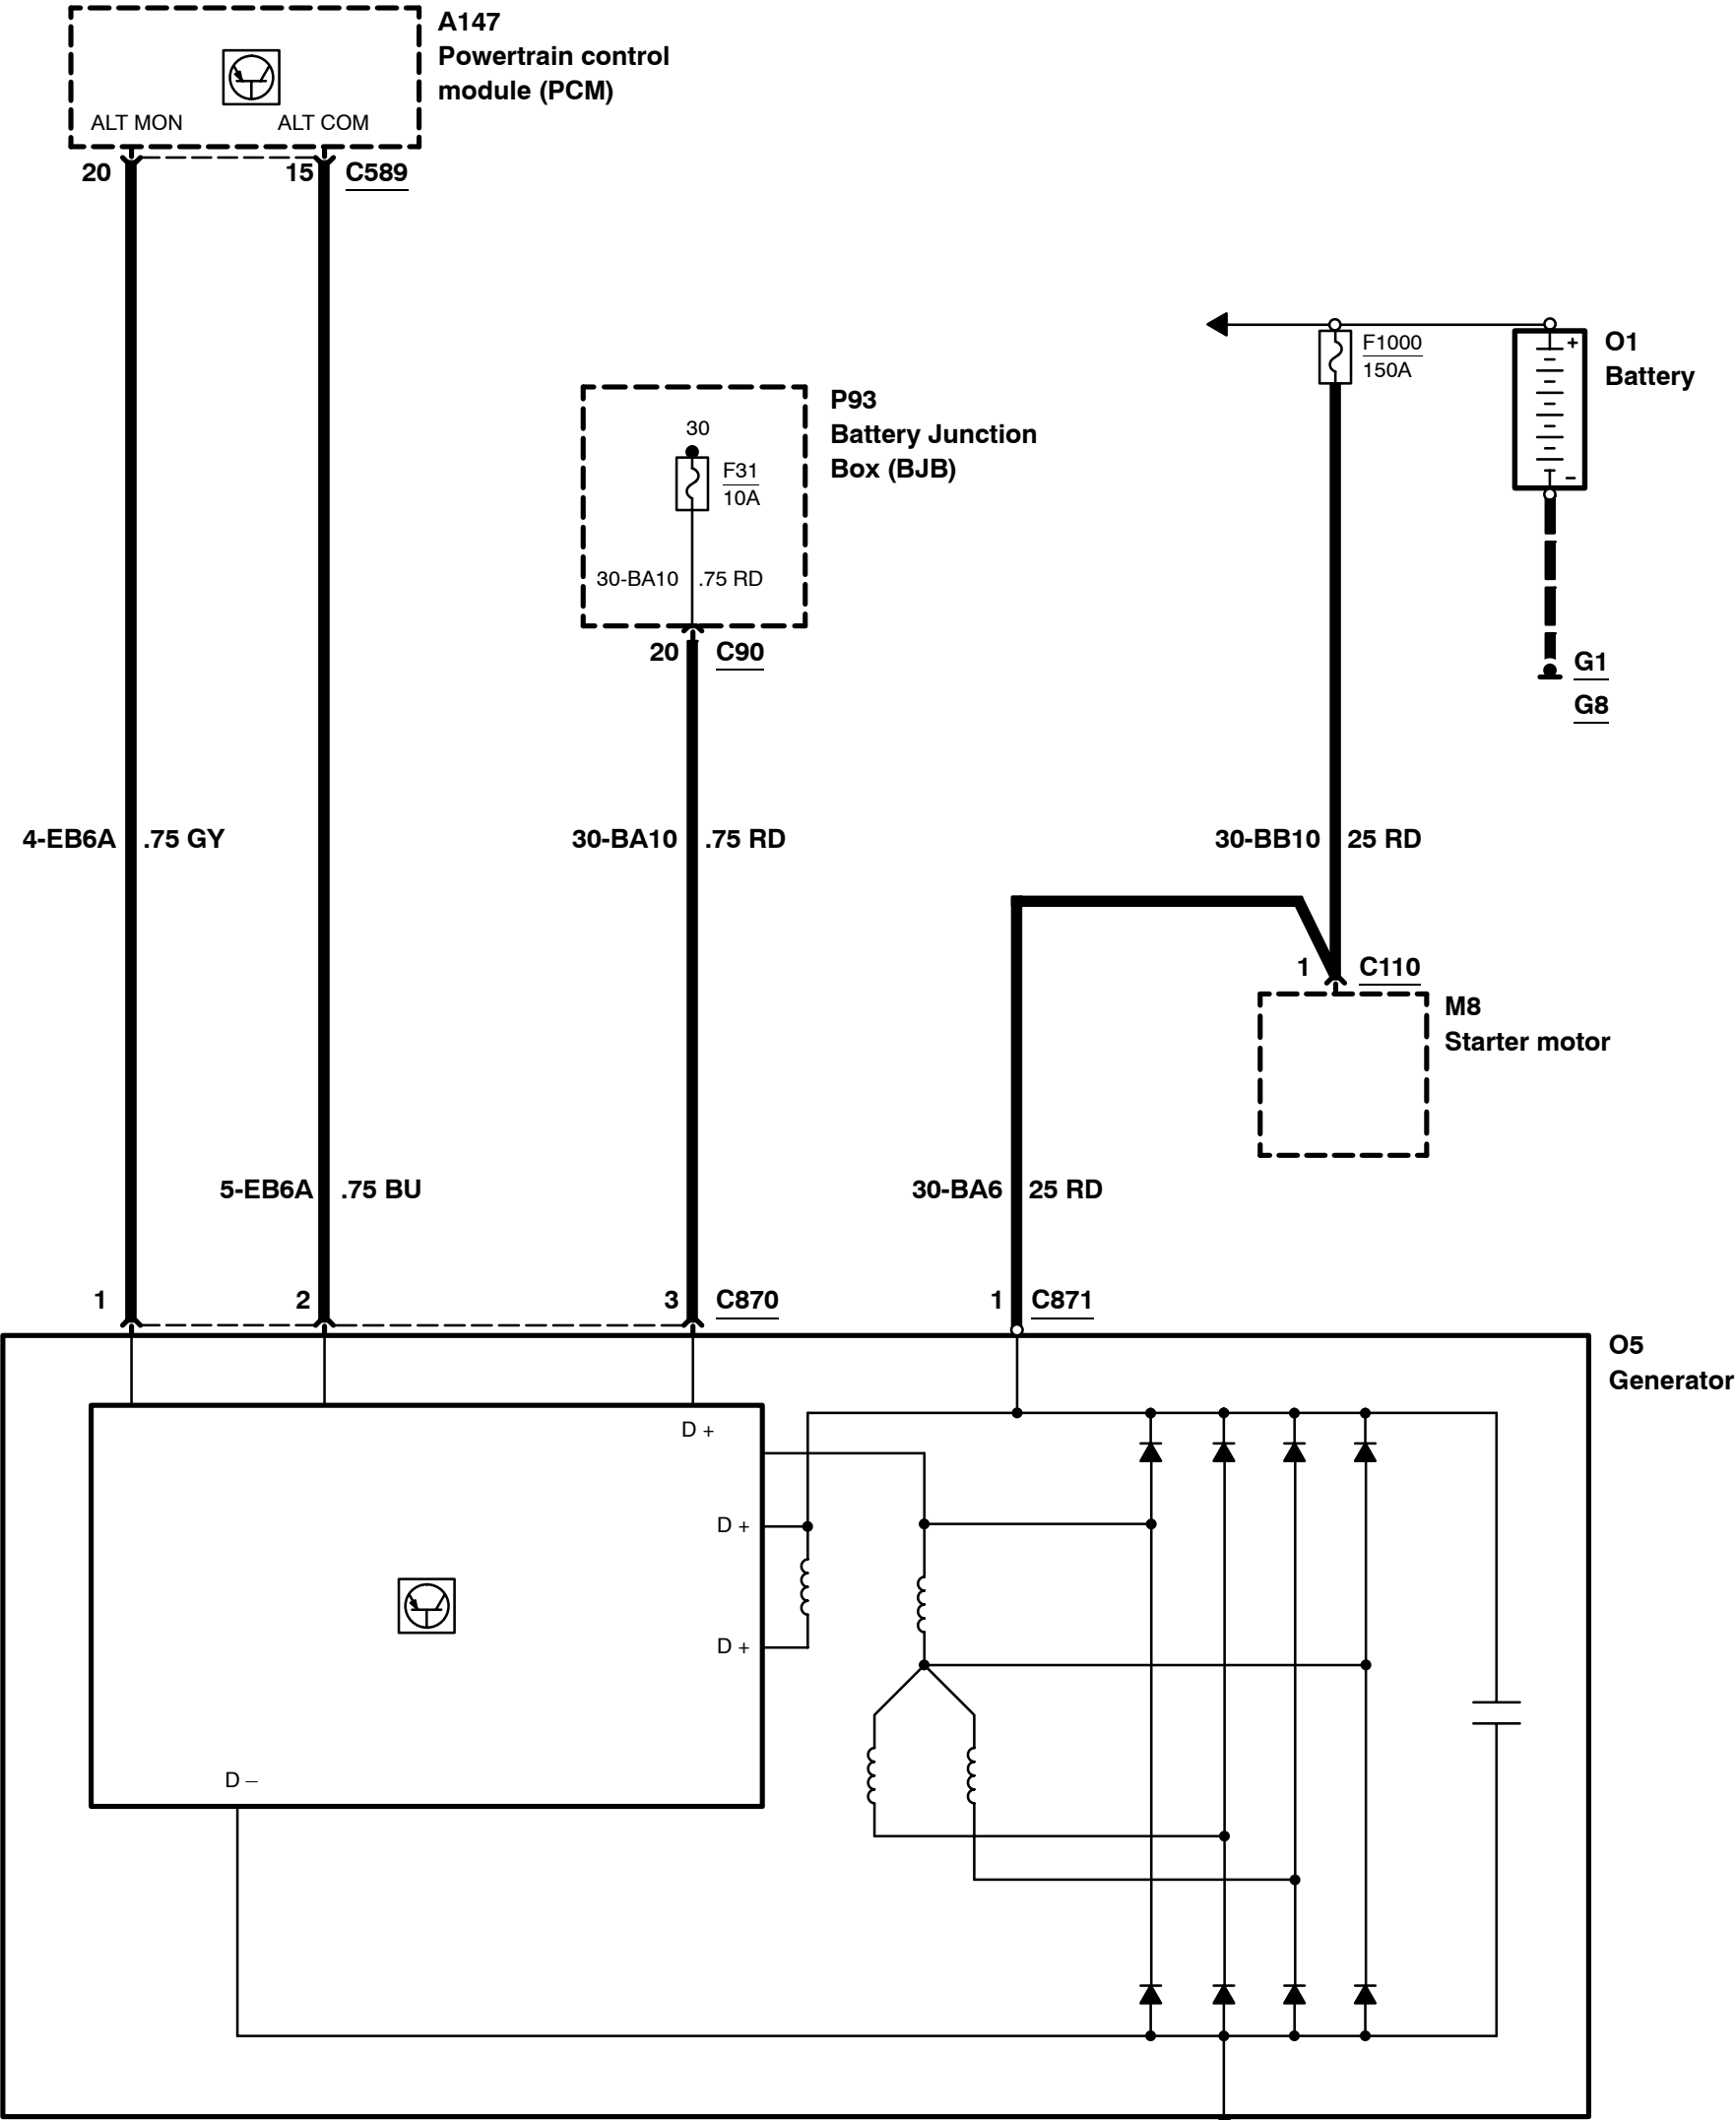

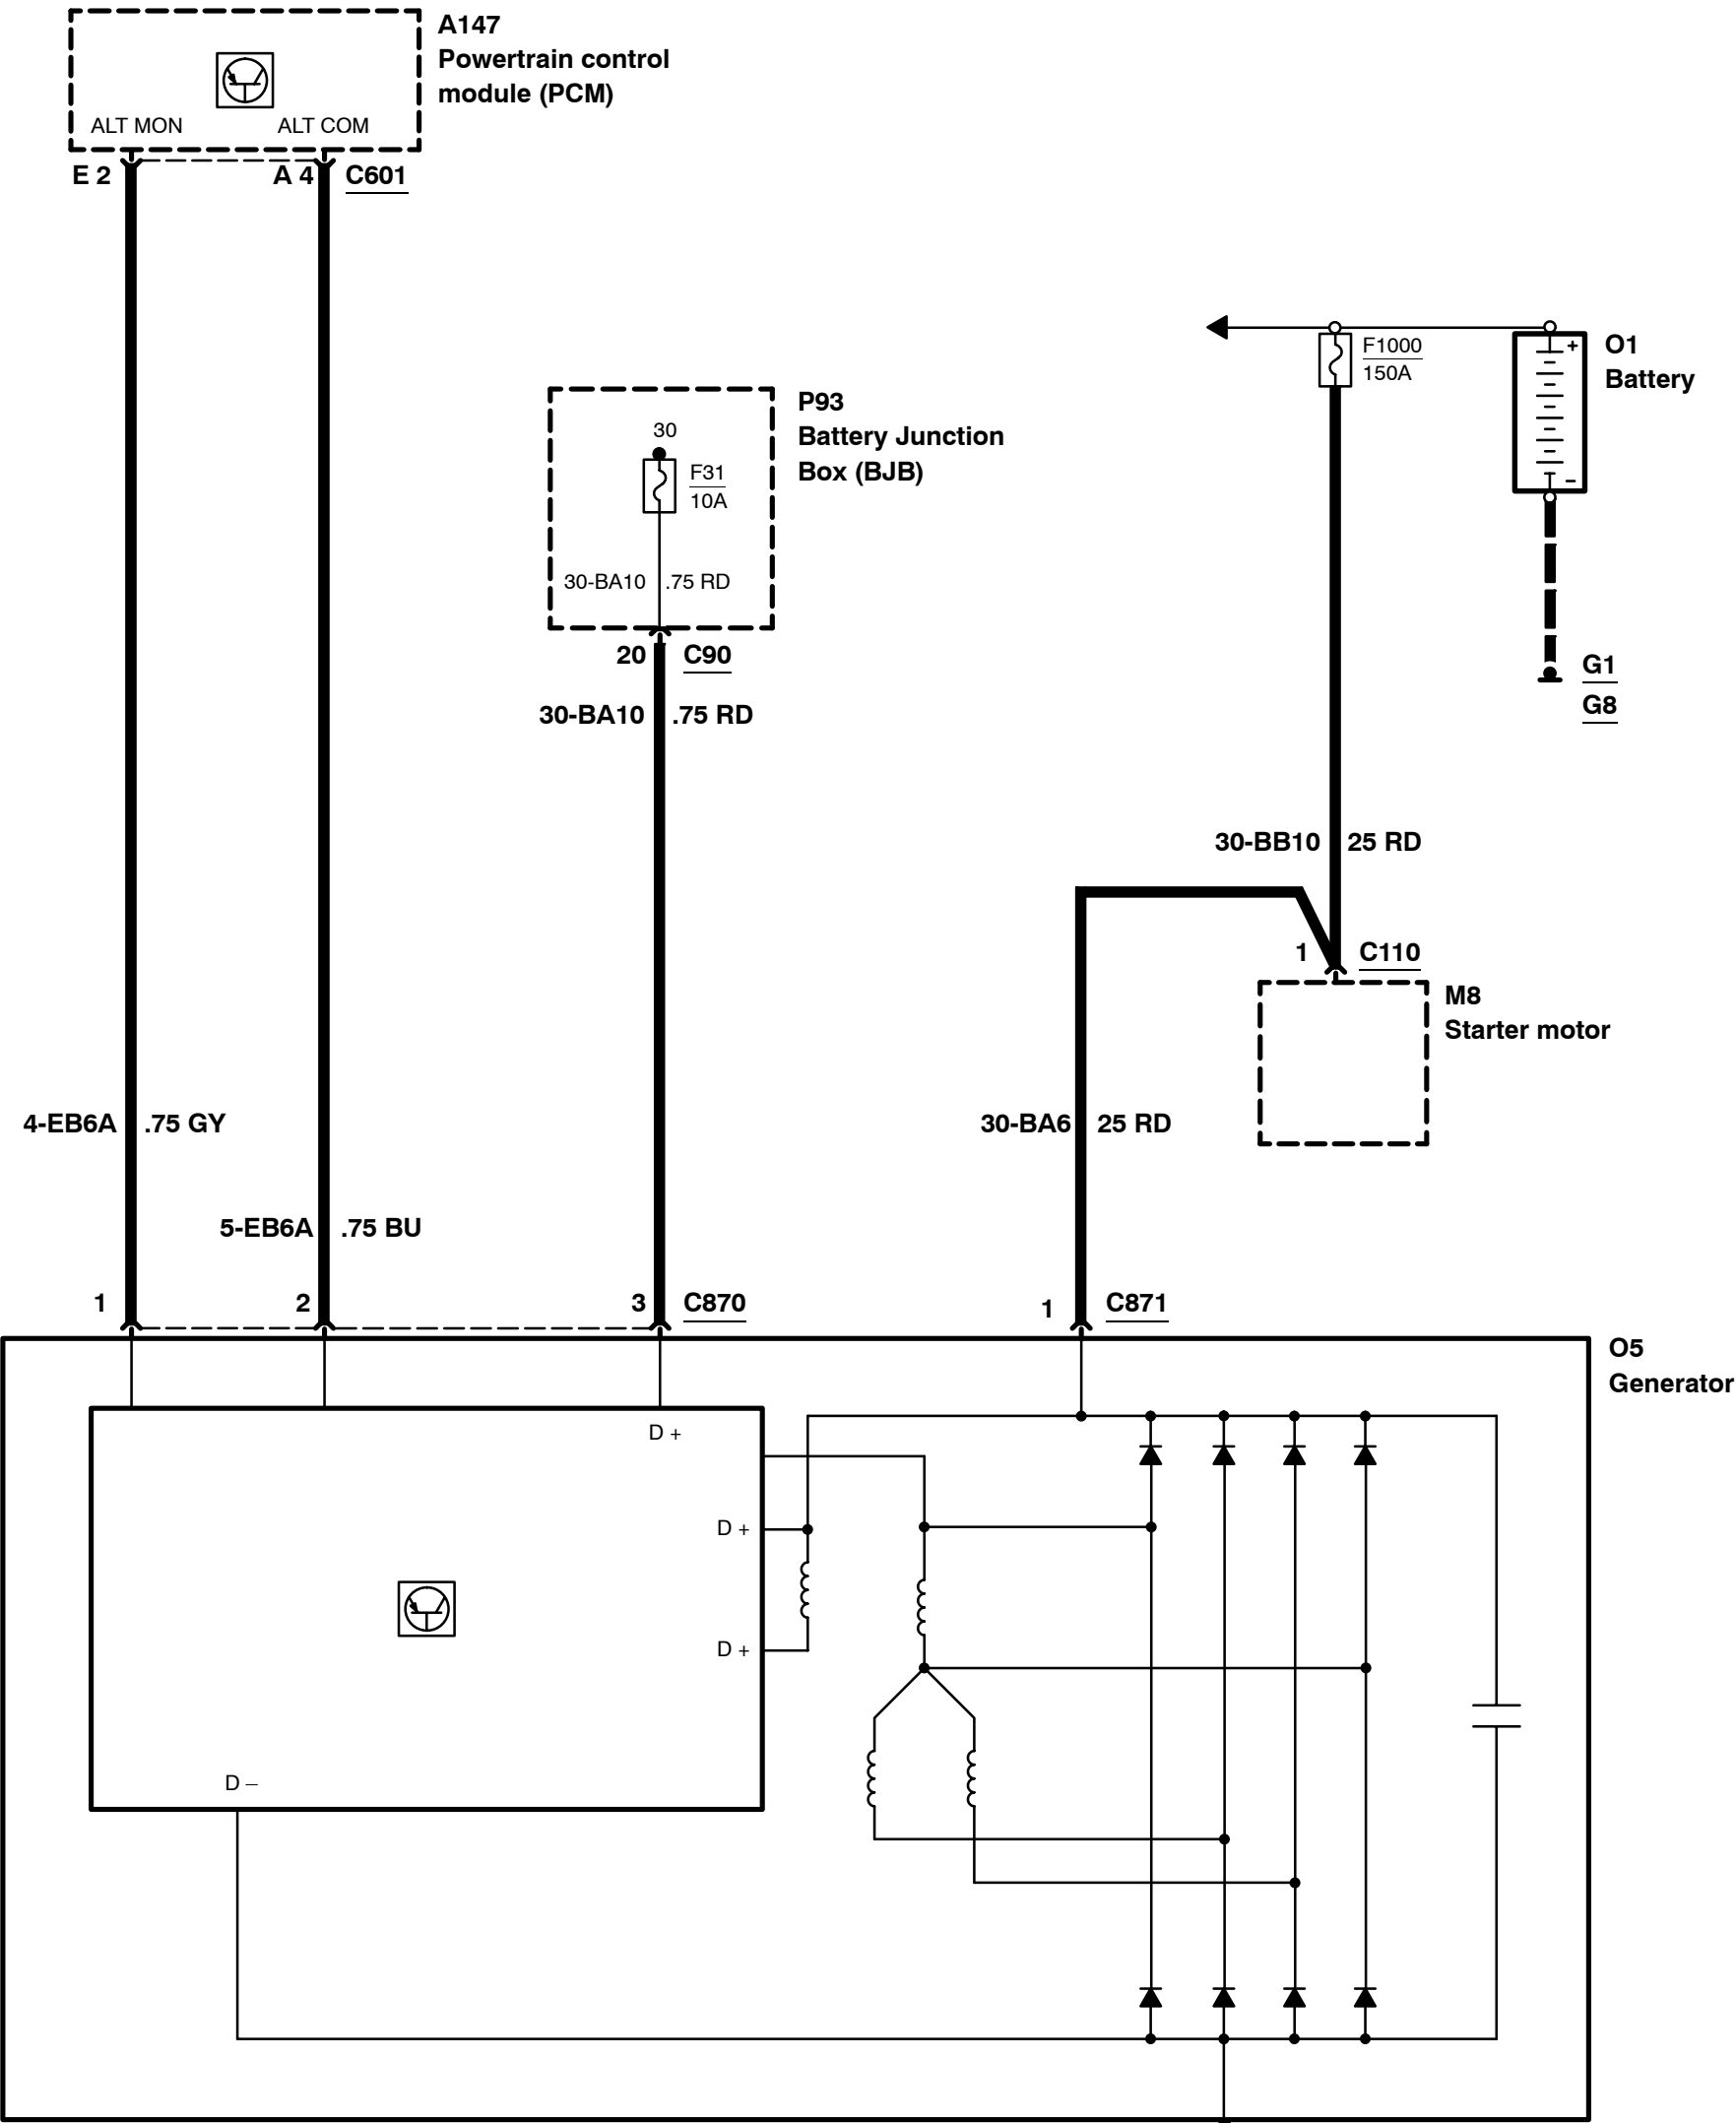

Generator and Regulator – 2.0L Duratorq–TDCi (DW) Diesel


02/2008  
414-02C-00-1  
2008.25  
Focus

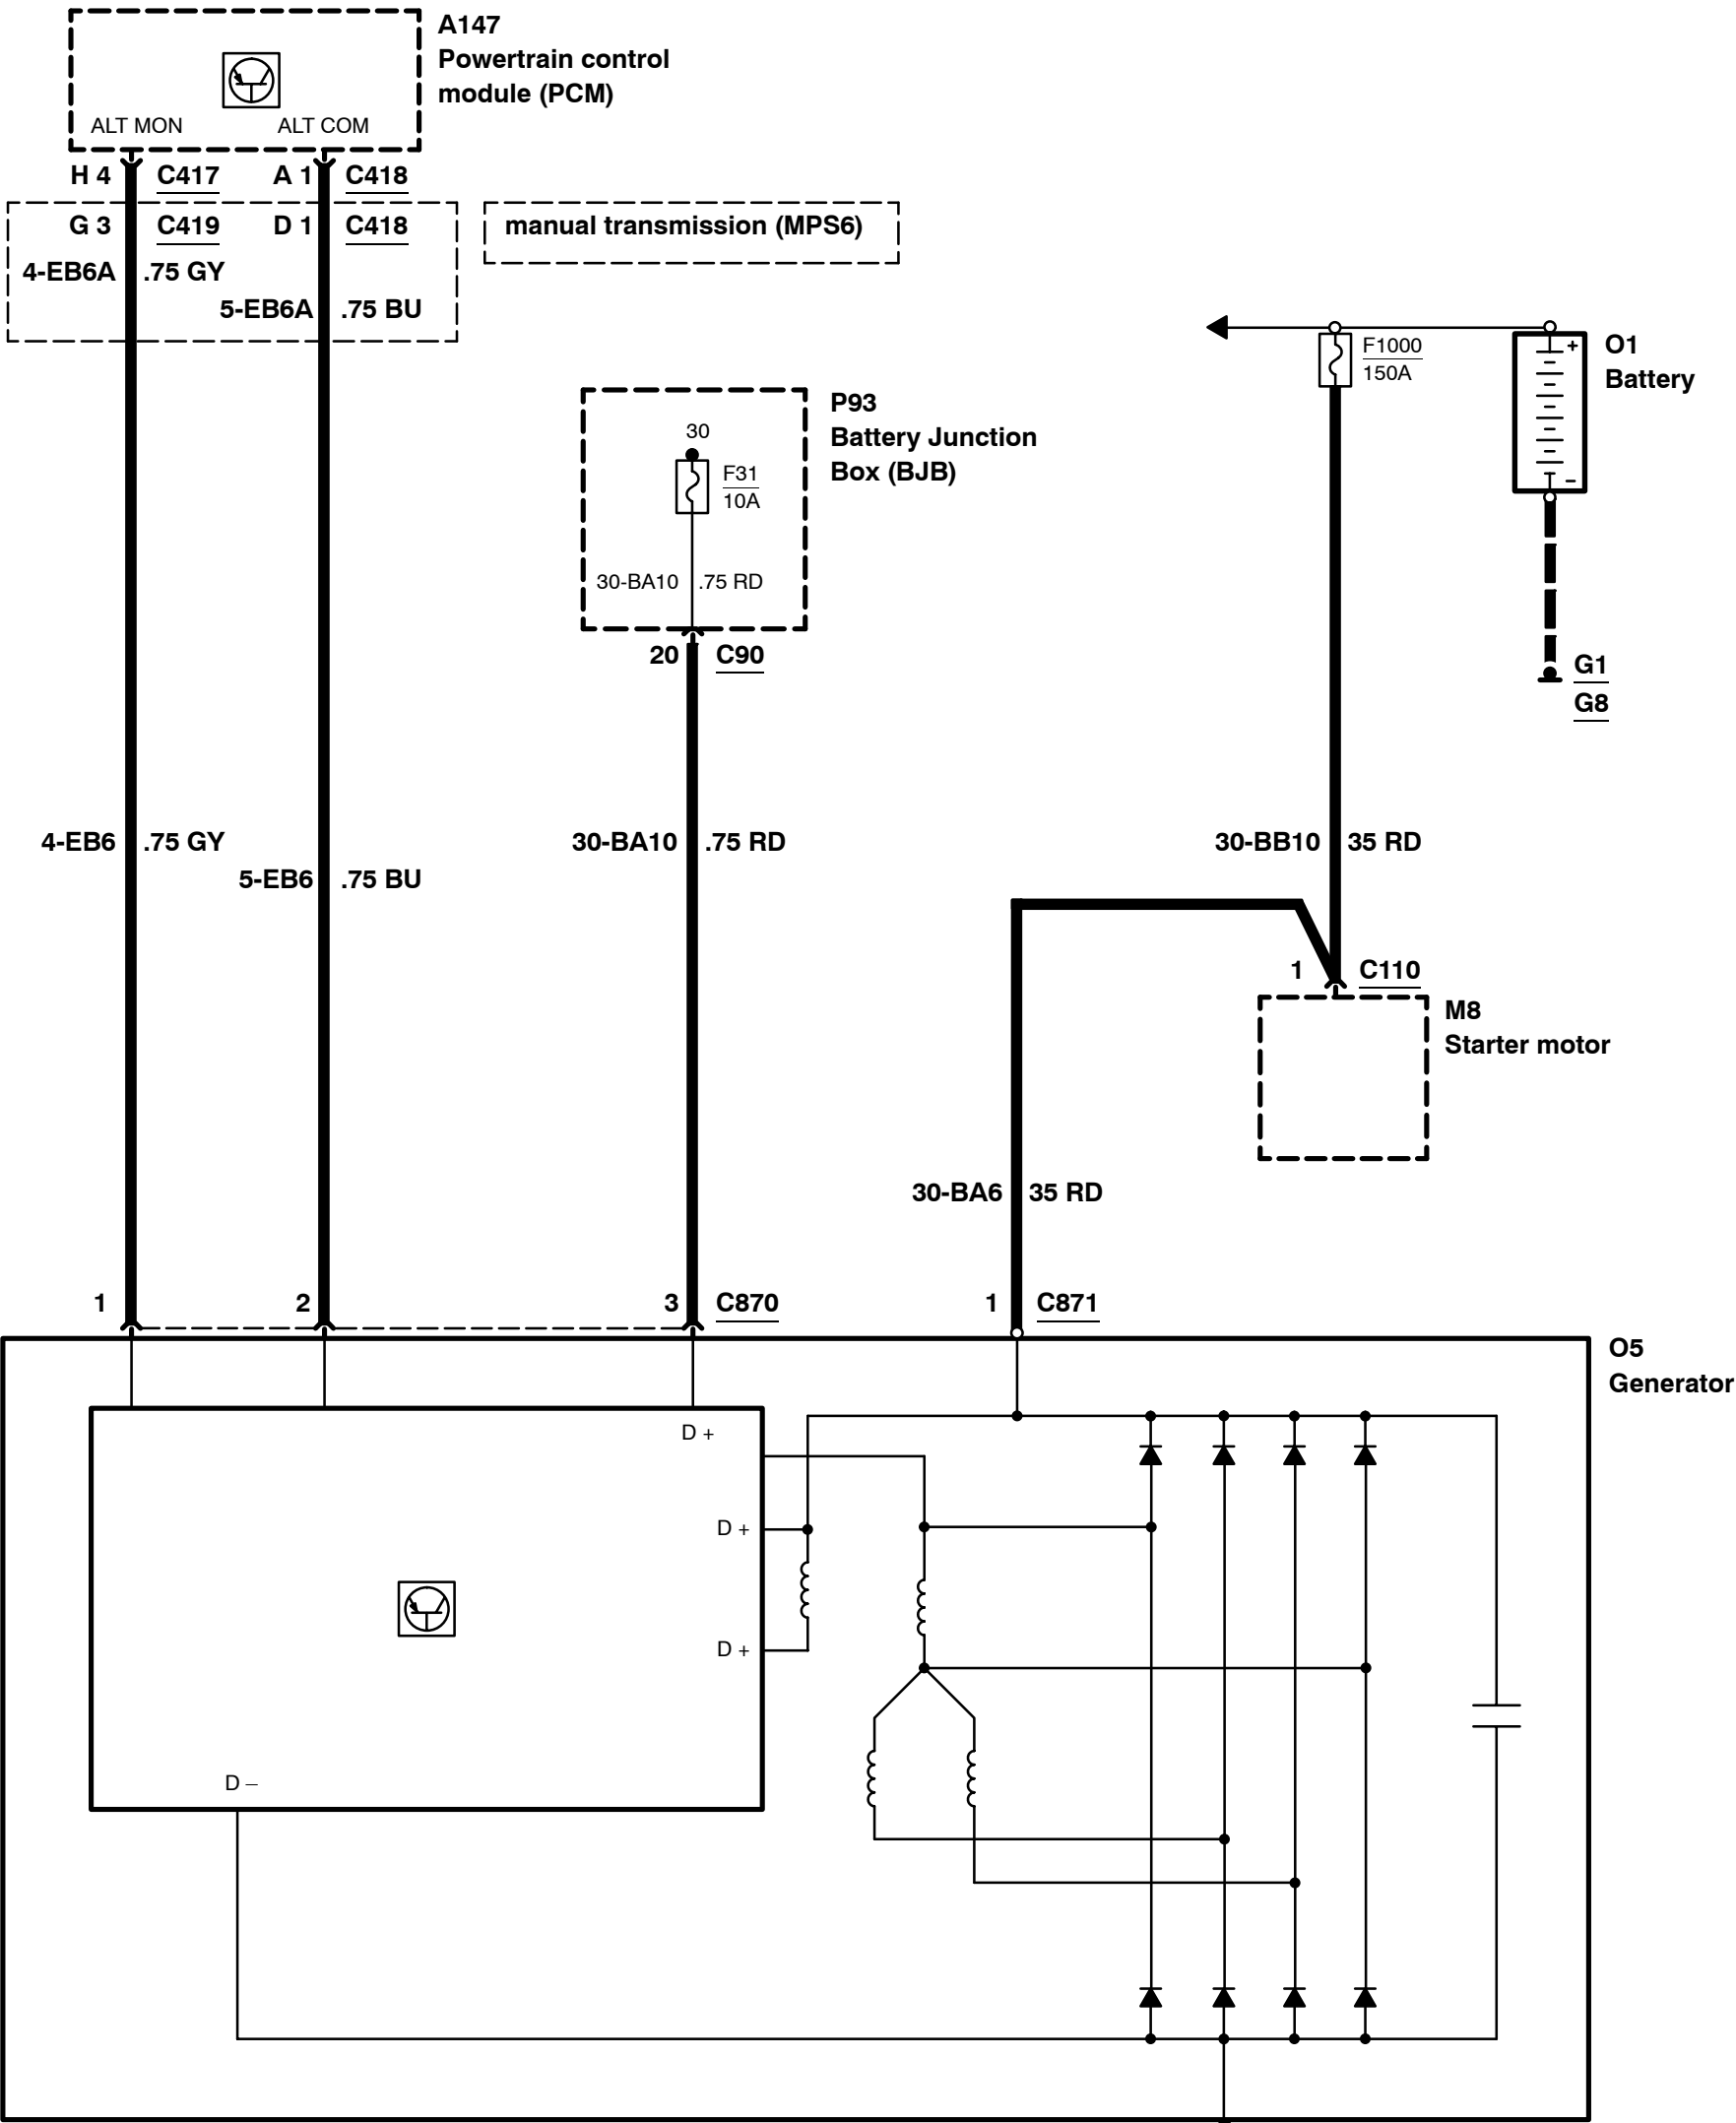




# Audio Unit – without Sanyo radio, higher option content

02/2008  
415-01-00-1  
2008.25  
Focus

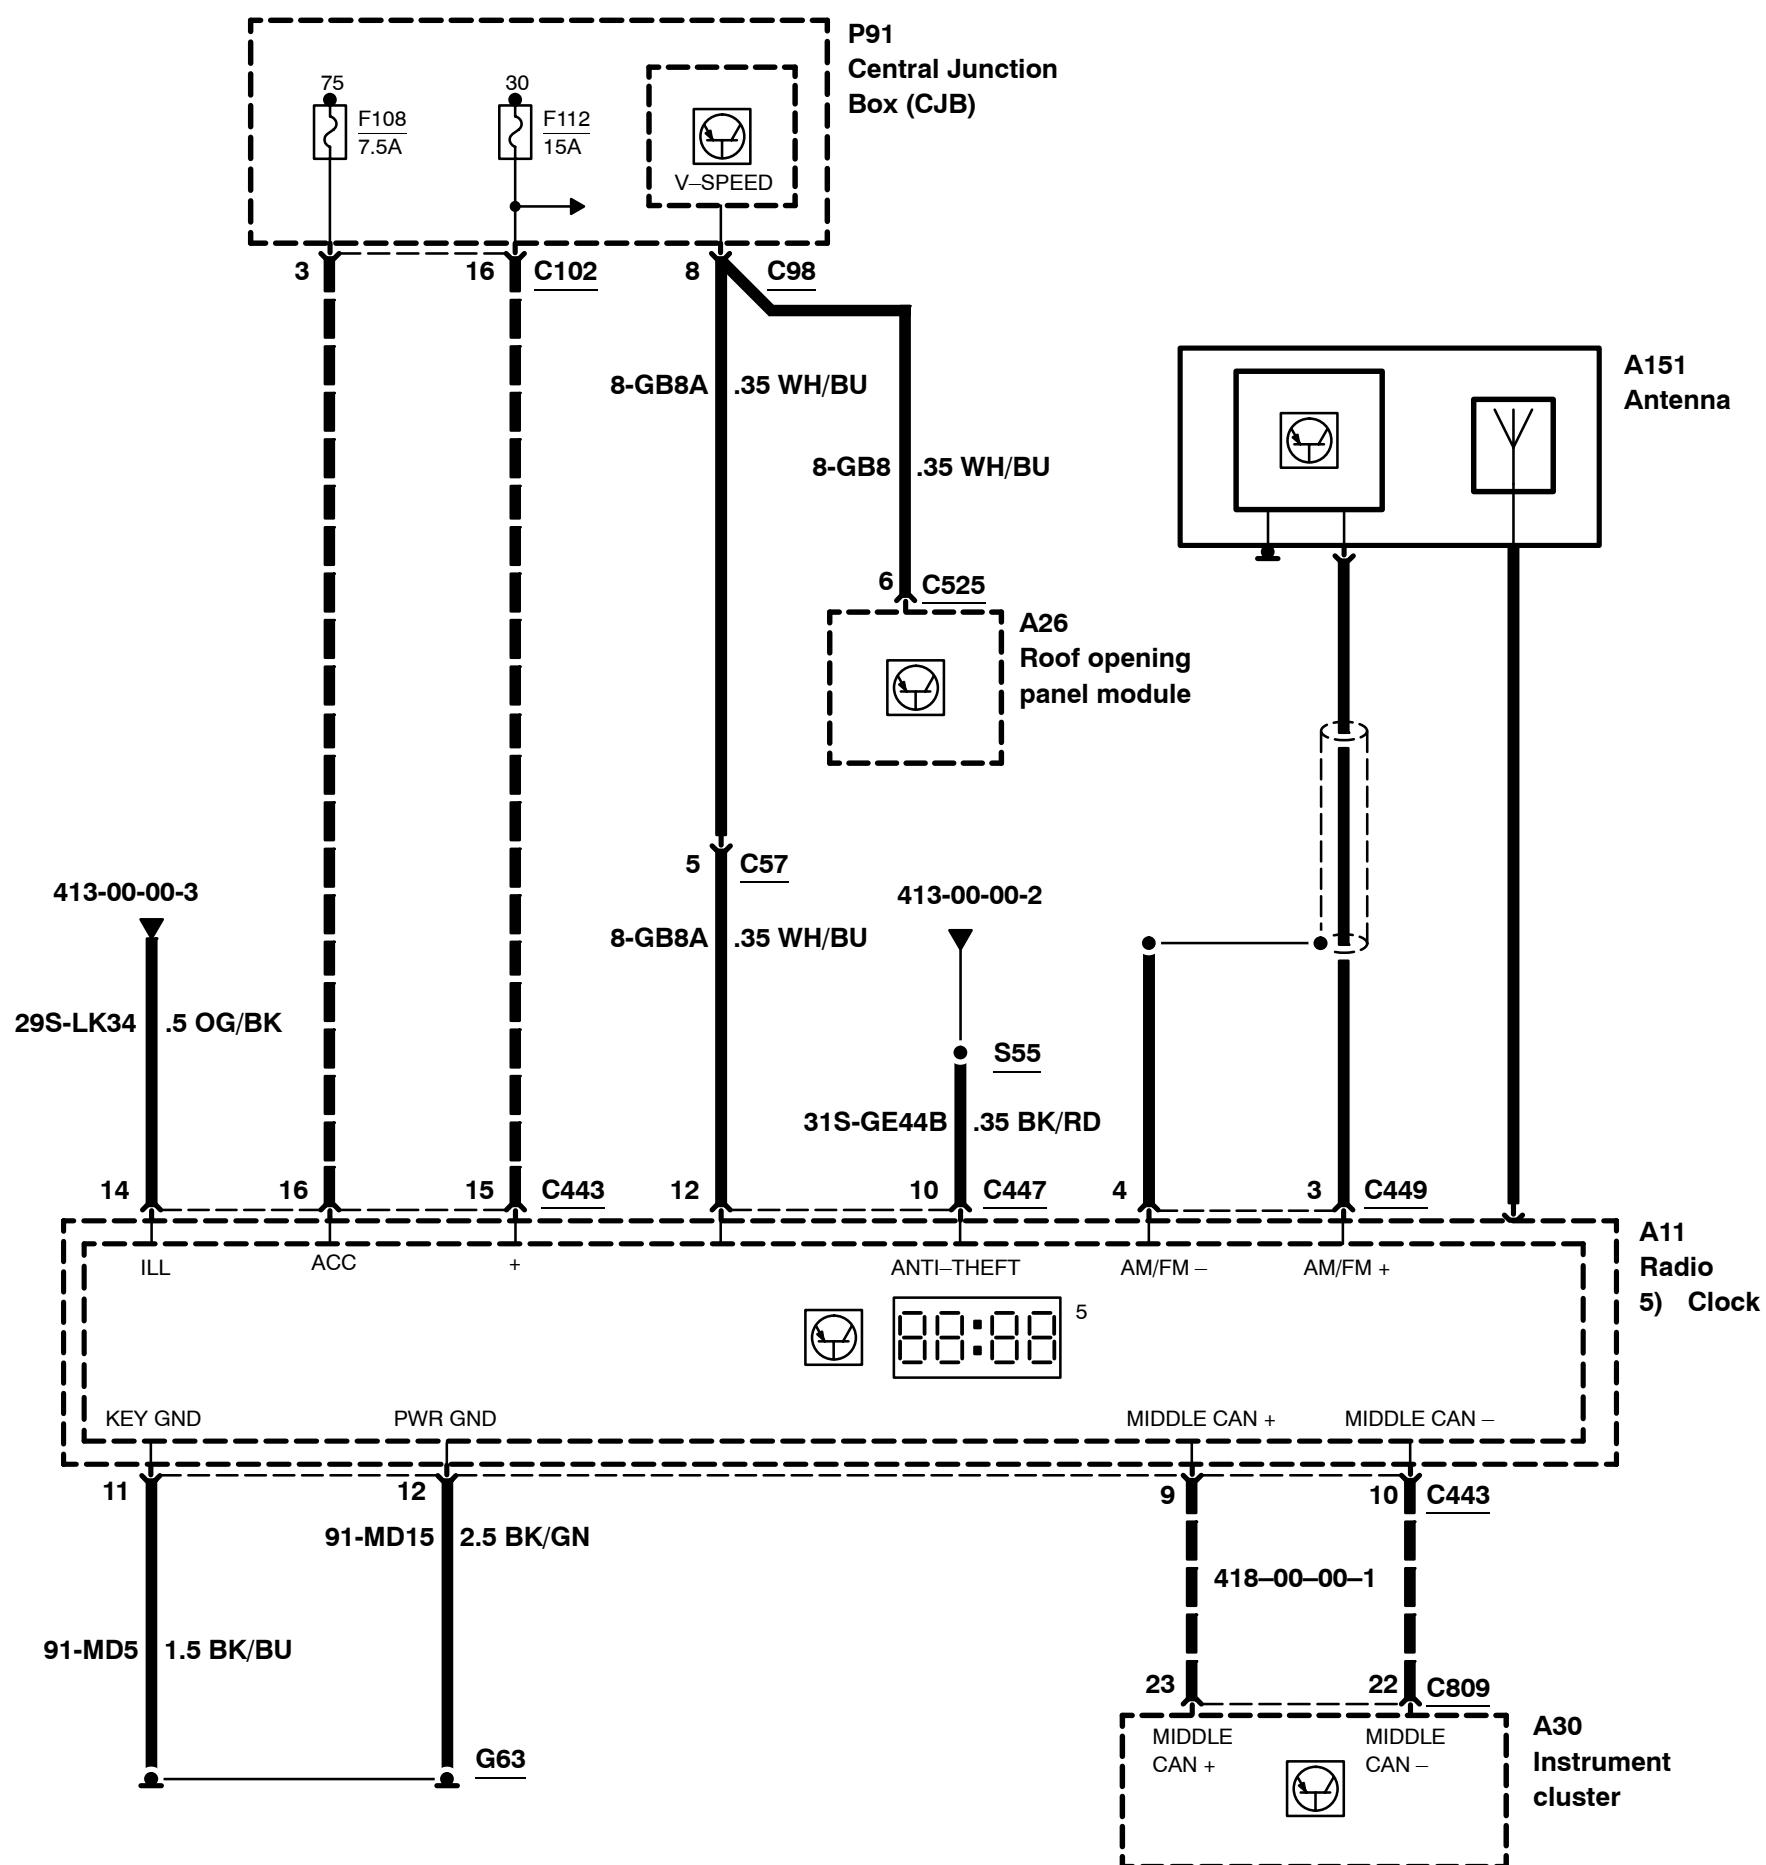

Audio Unit – without Sanyo radio, lower option content


02/2008  
415-01-00-2  
2008.25  
Focus

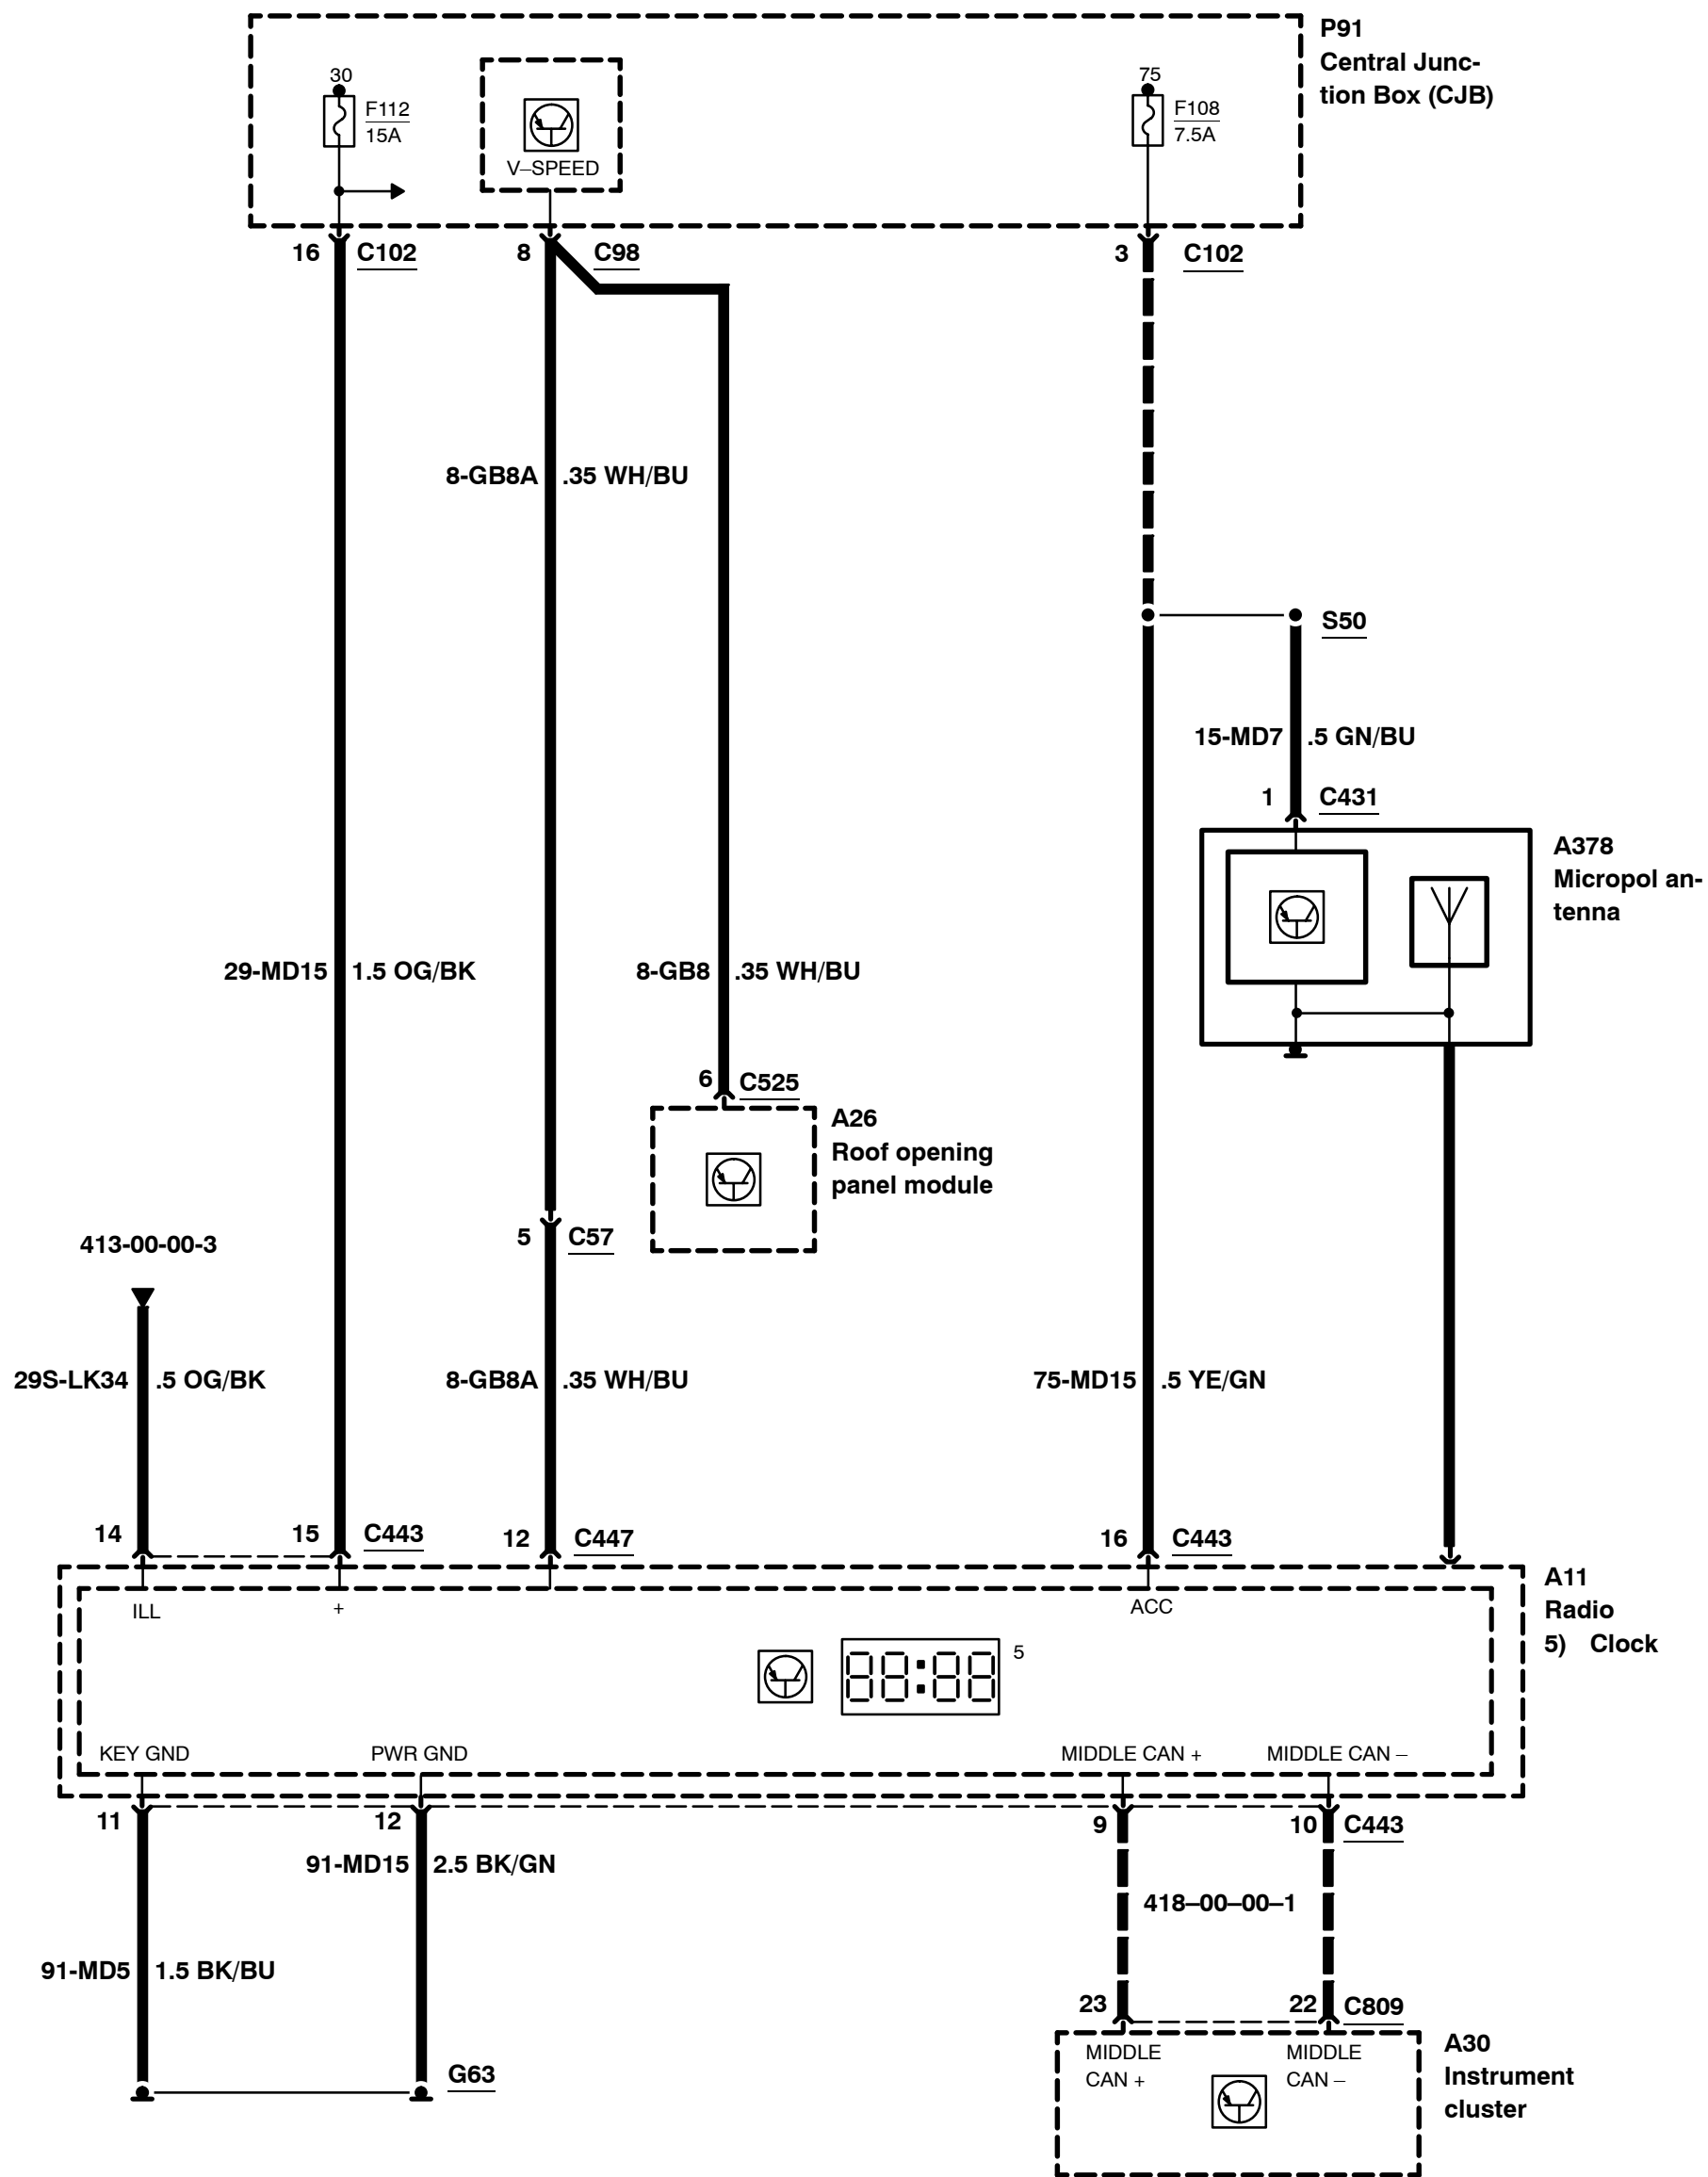




# Audio Unit – without Sanyo radio

02/2008  
415-01-00-3  
2008.25  
Focus

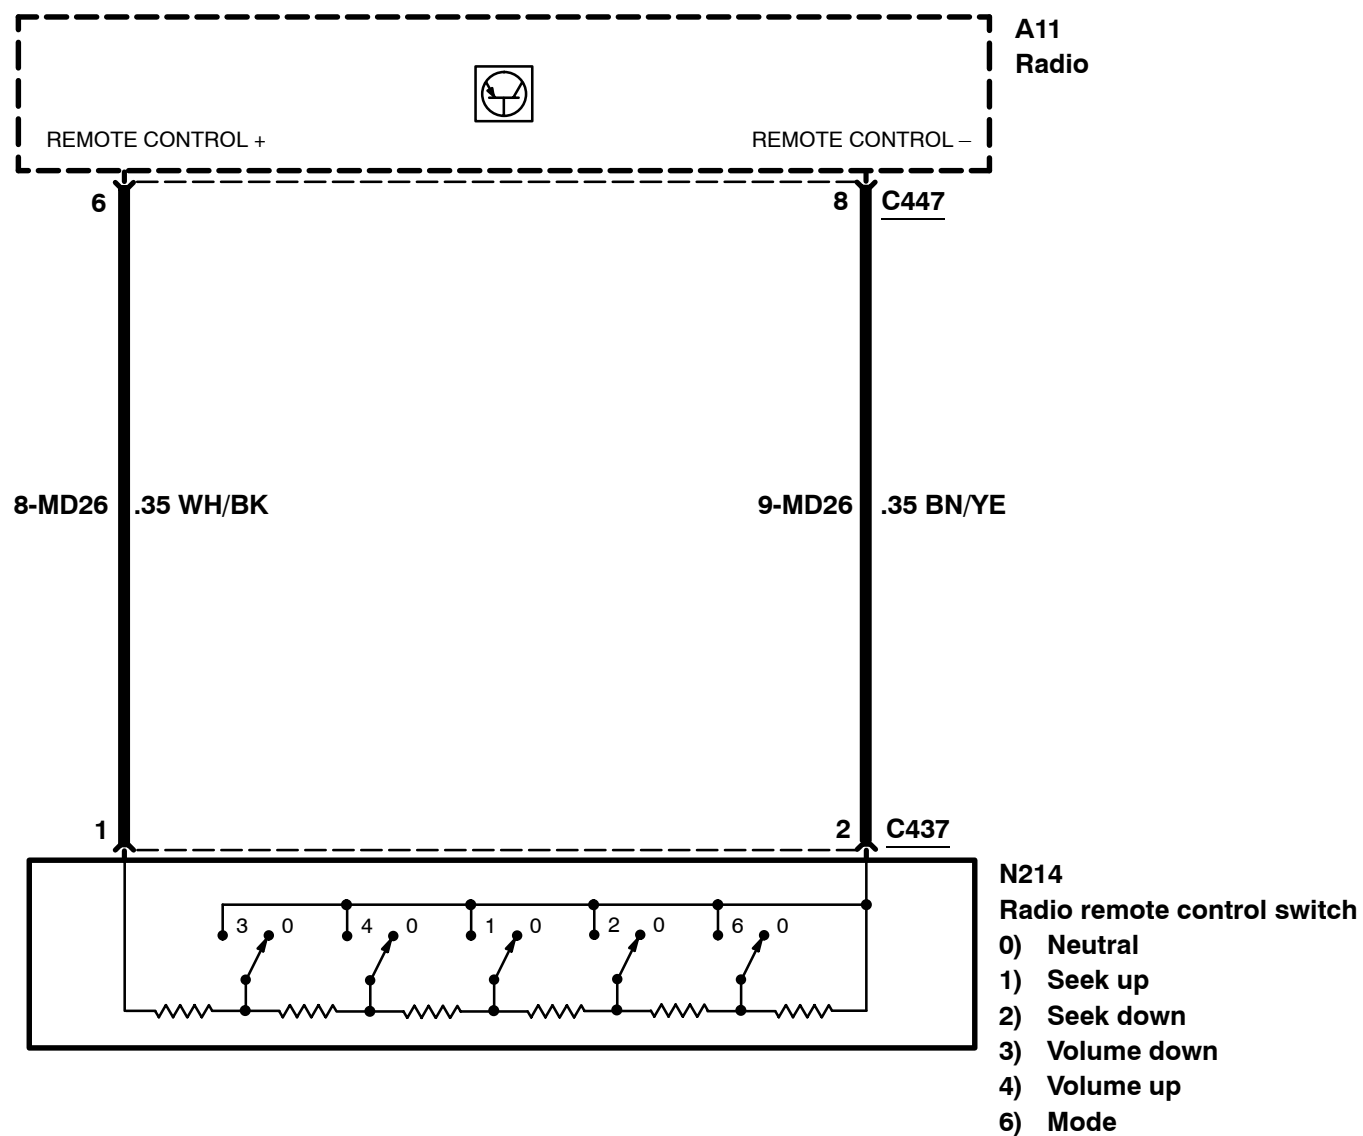


Audio Unit – without Sanyo radio, without USB adapter

02/2008  
415-01-00-4  
2008.25  
Focus

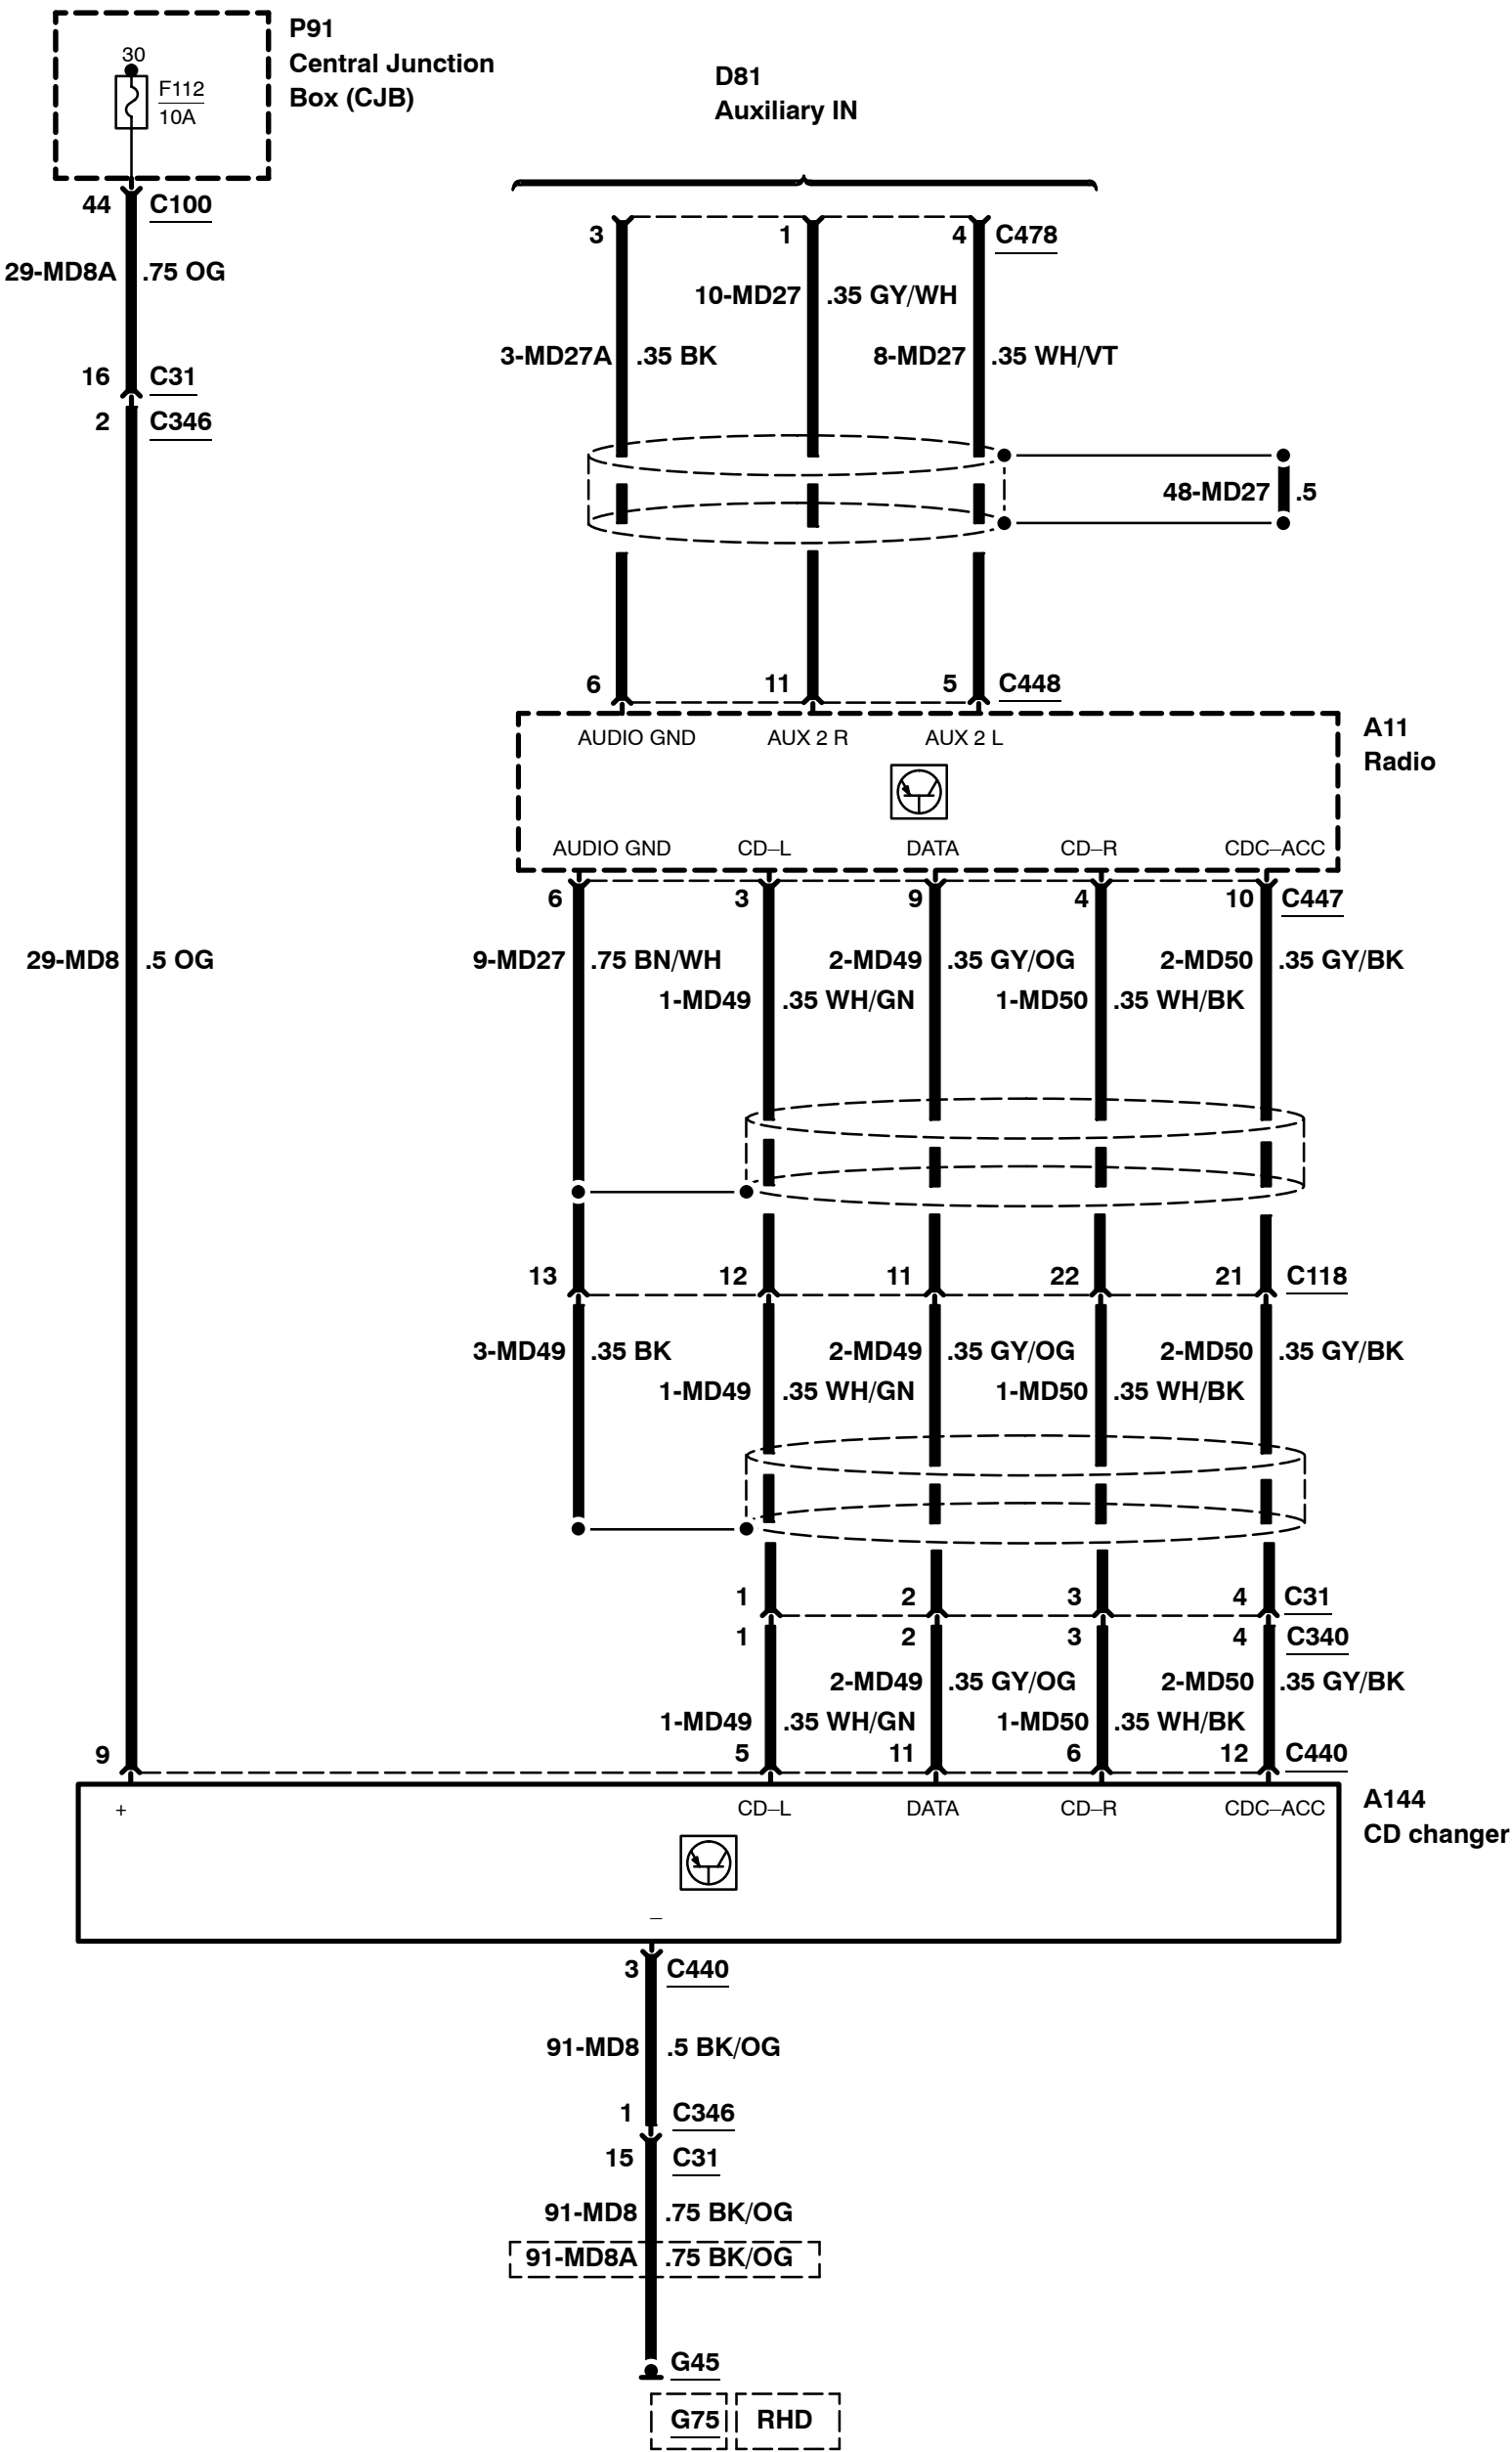


# Audio Unit – without Sanyo radio, with USB adapter


02/2008  
415-01-00-5  
2008.25  
Focus

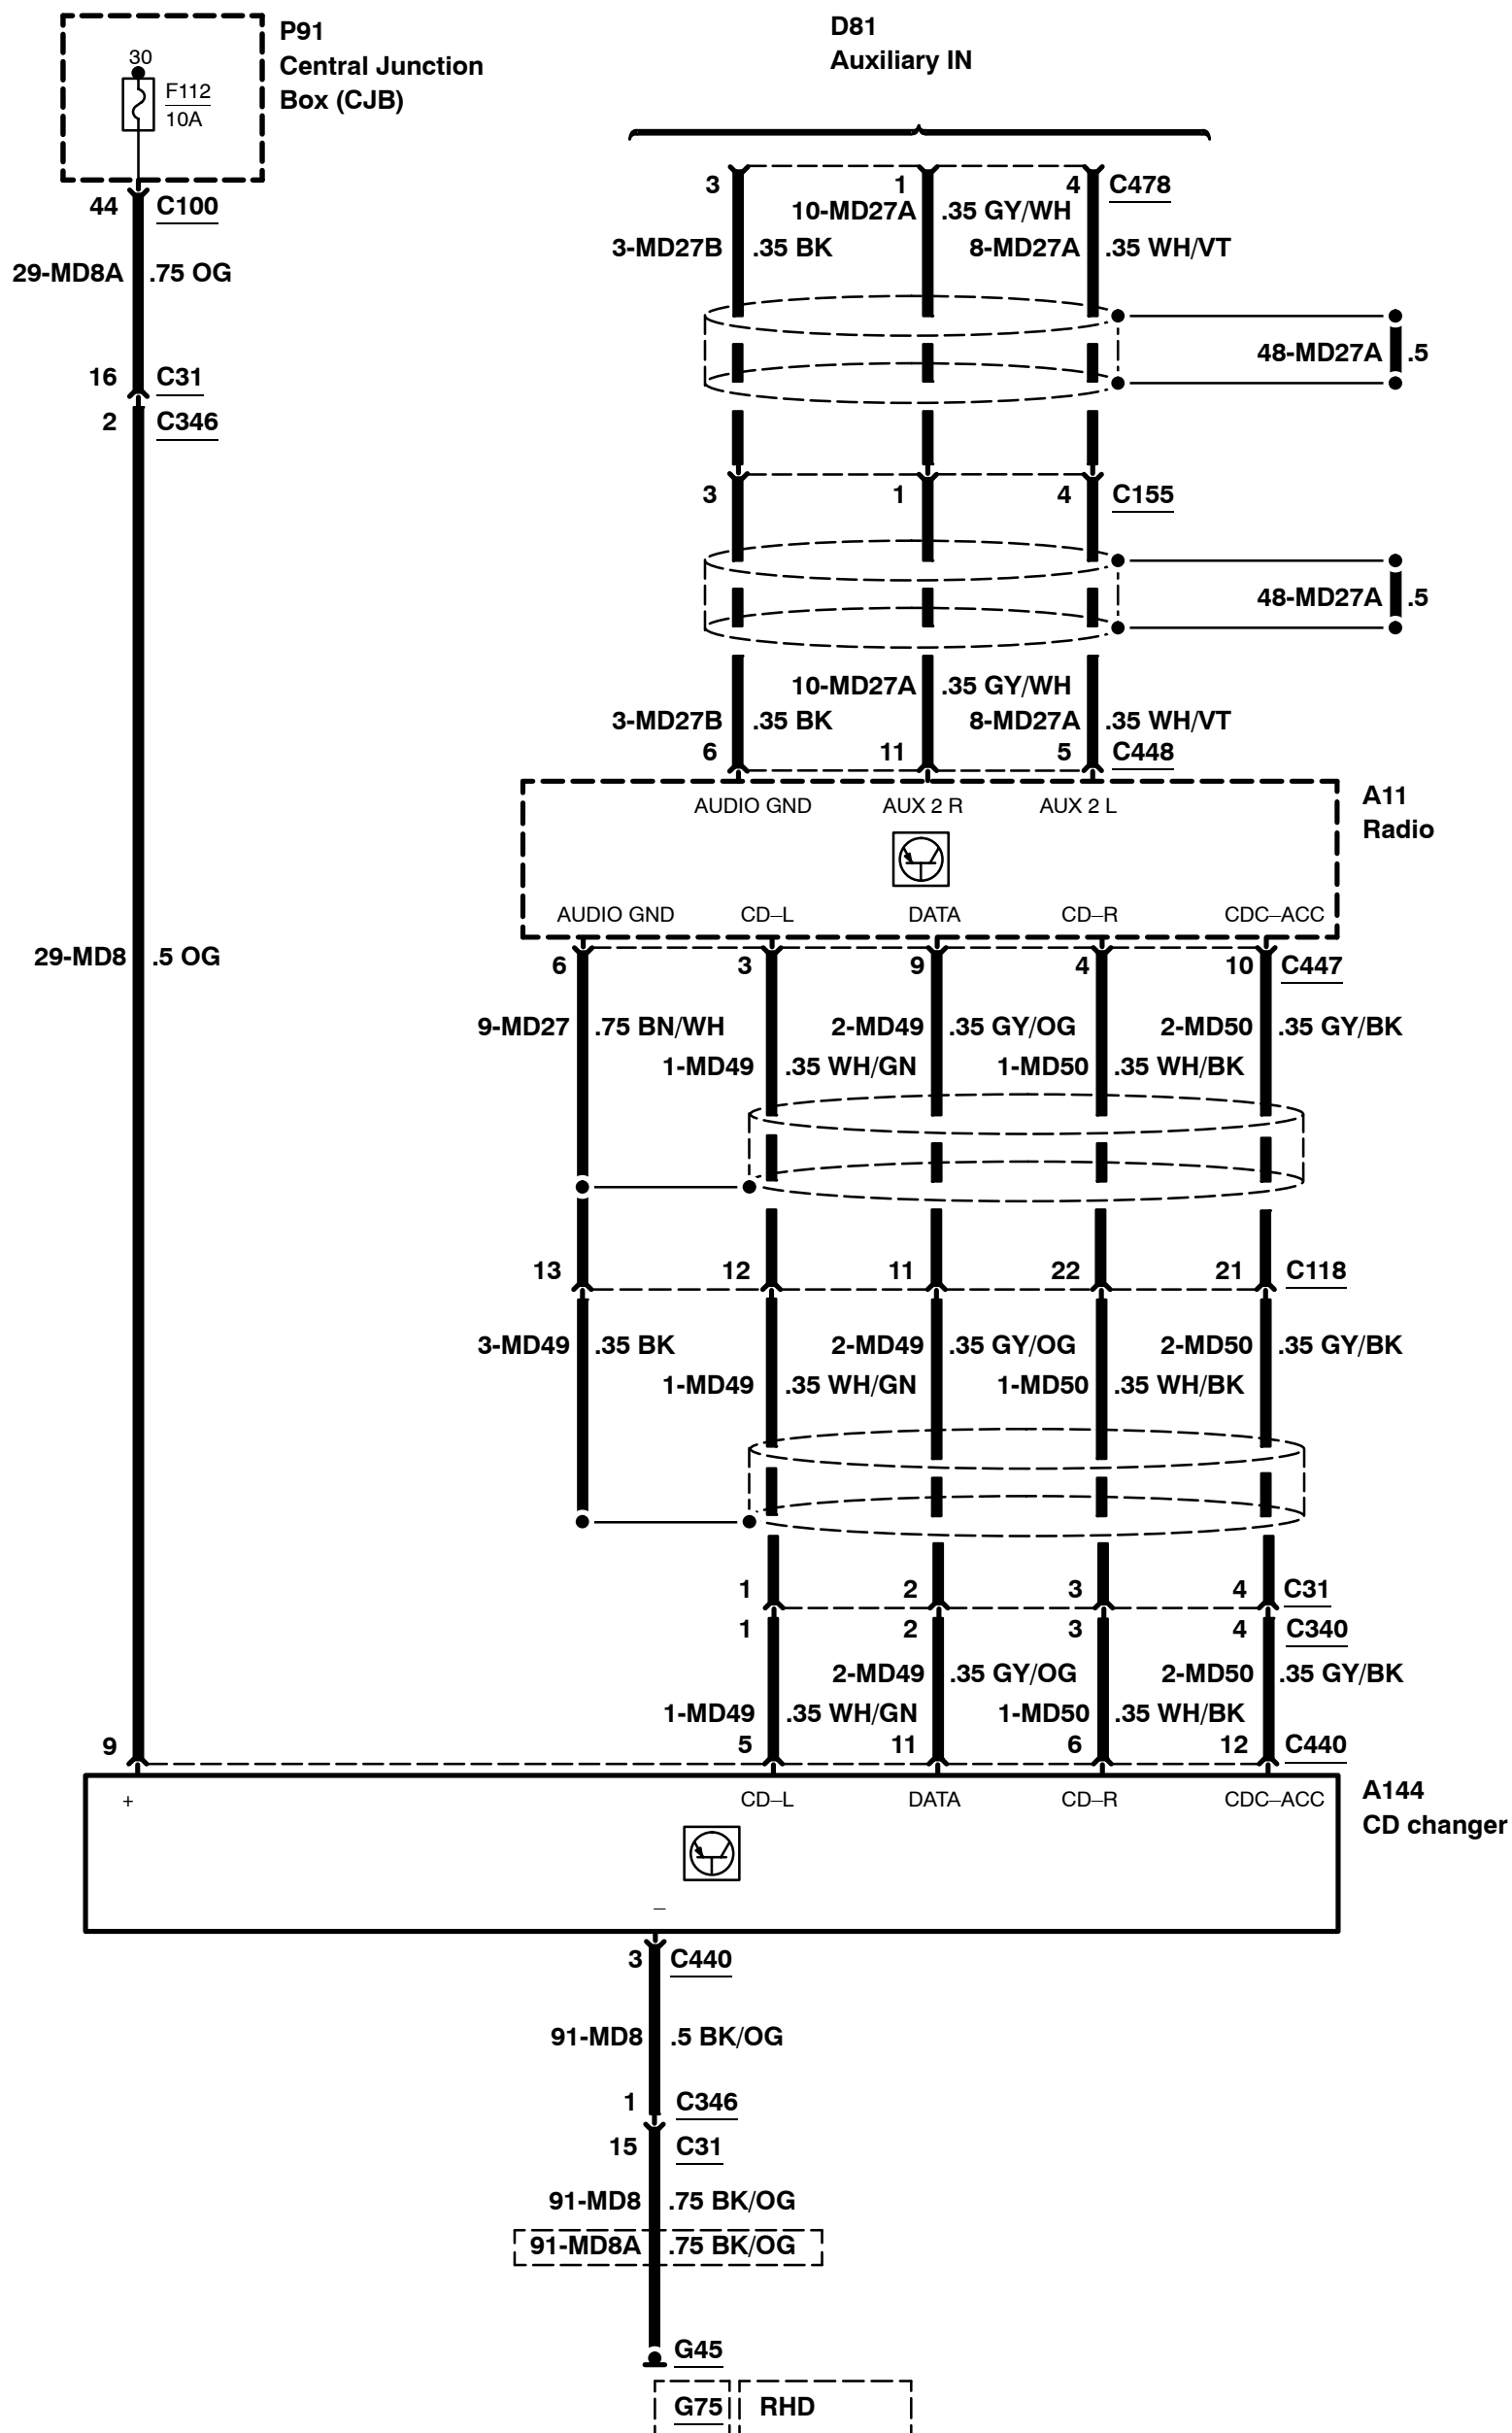

02/2008  
415-01-00-6  
2008.25  
Focus

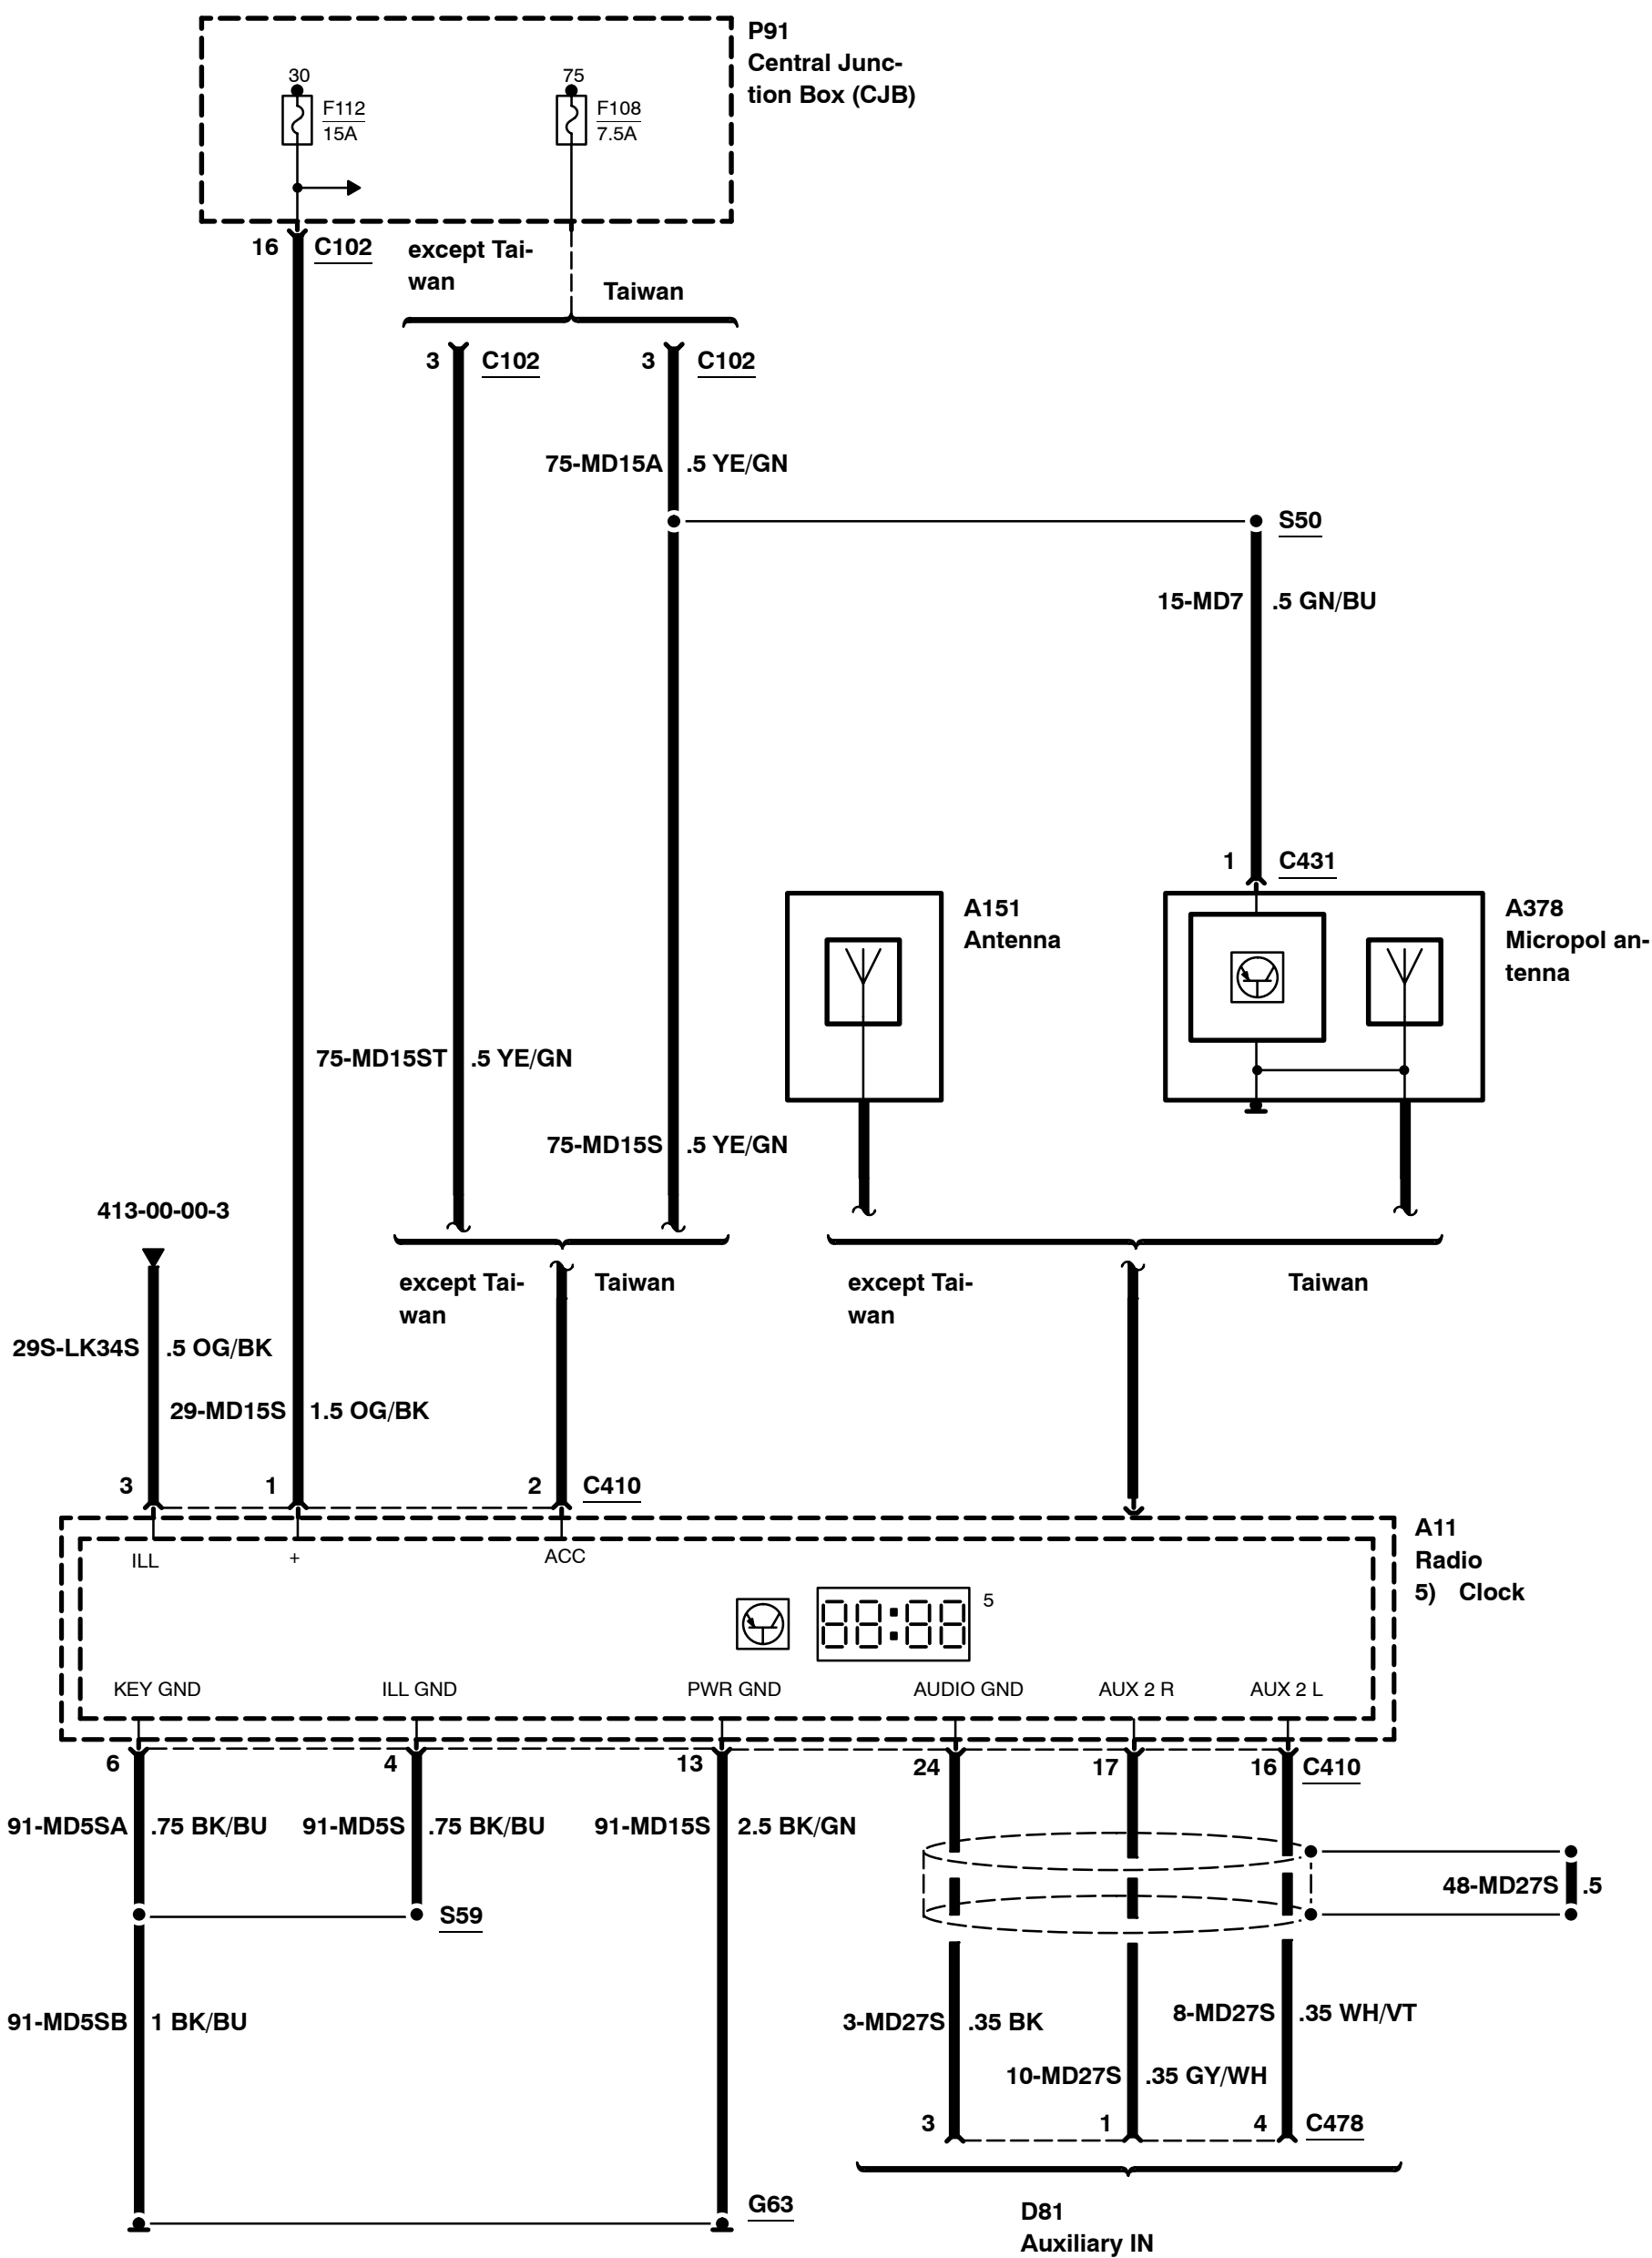


02/2008  
415-01-00-7  
2008.25  
Focus

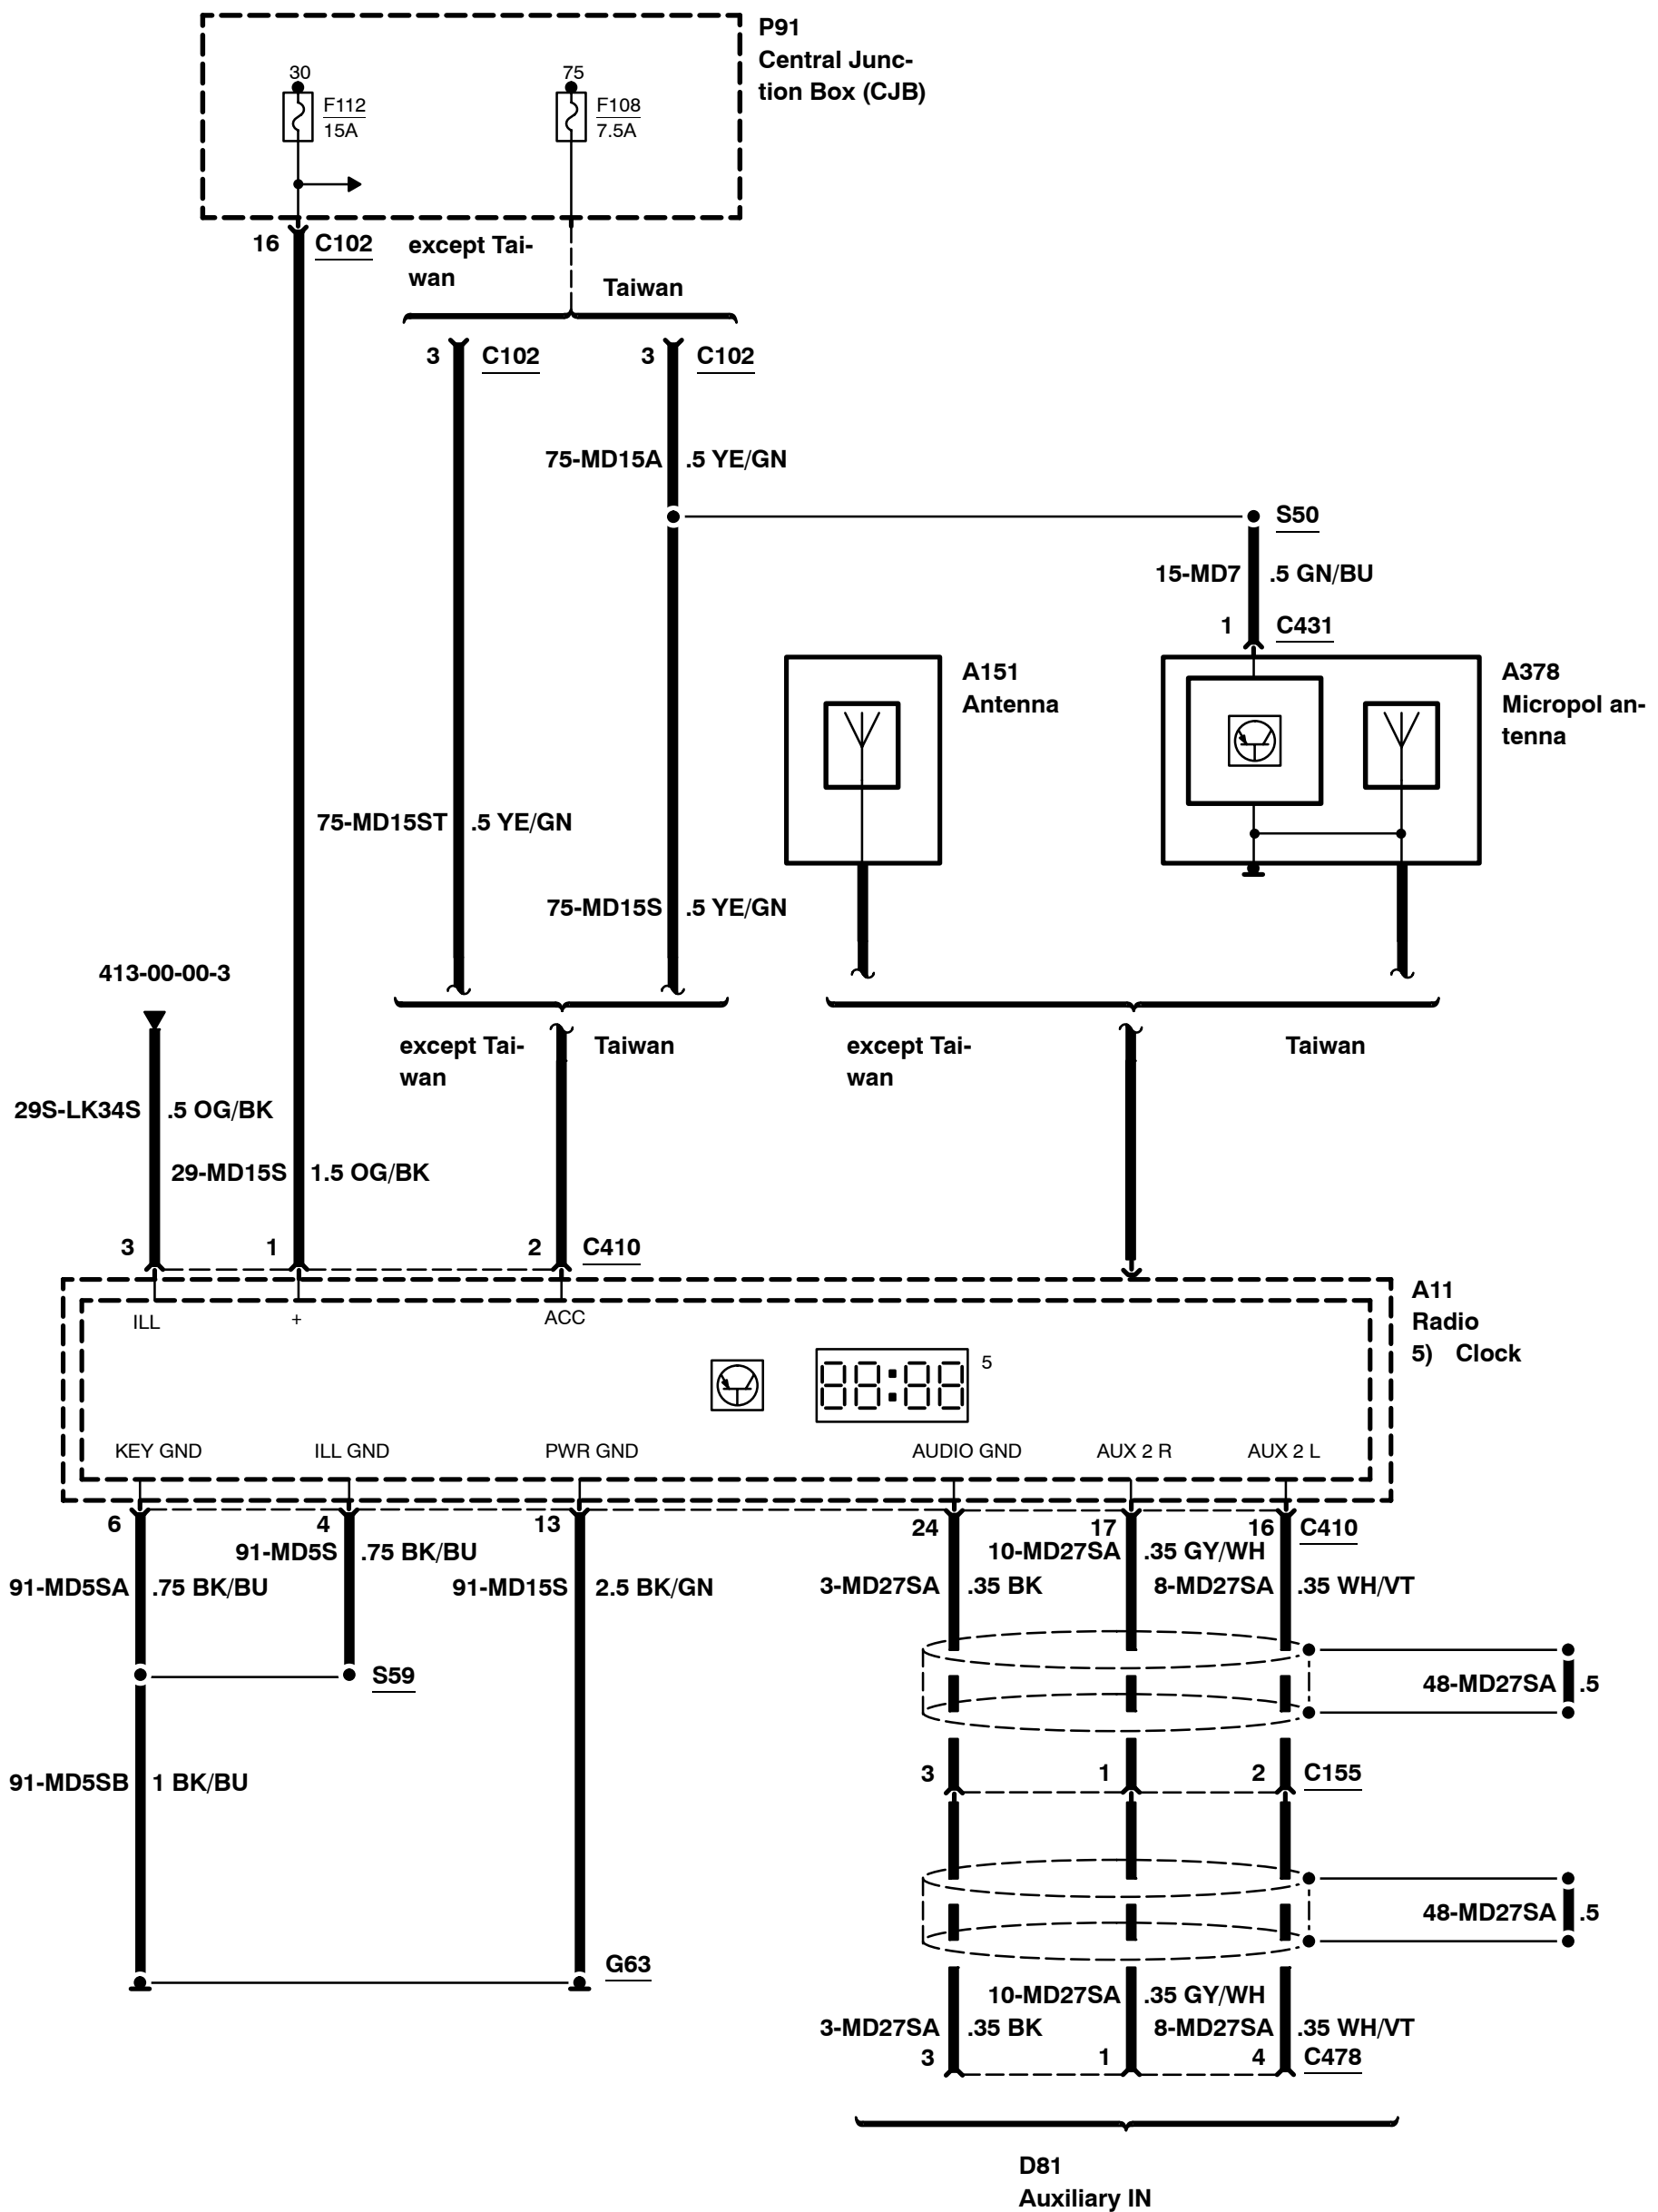


# Audio Unit – with Sanyo radio

02/2008  
415-01-00-8  
2008.25  
Focus

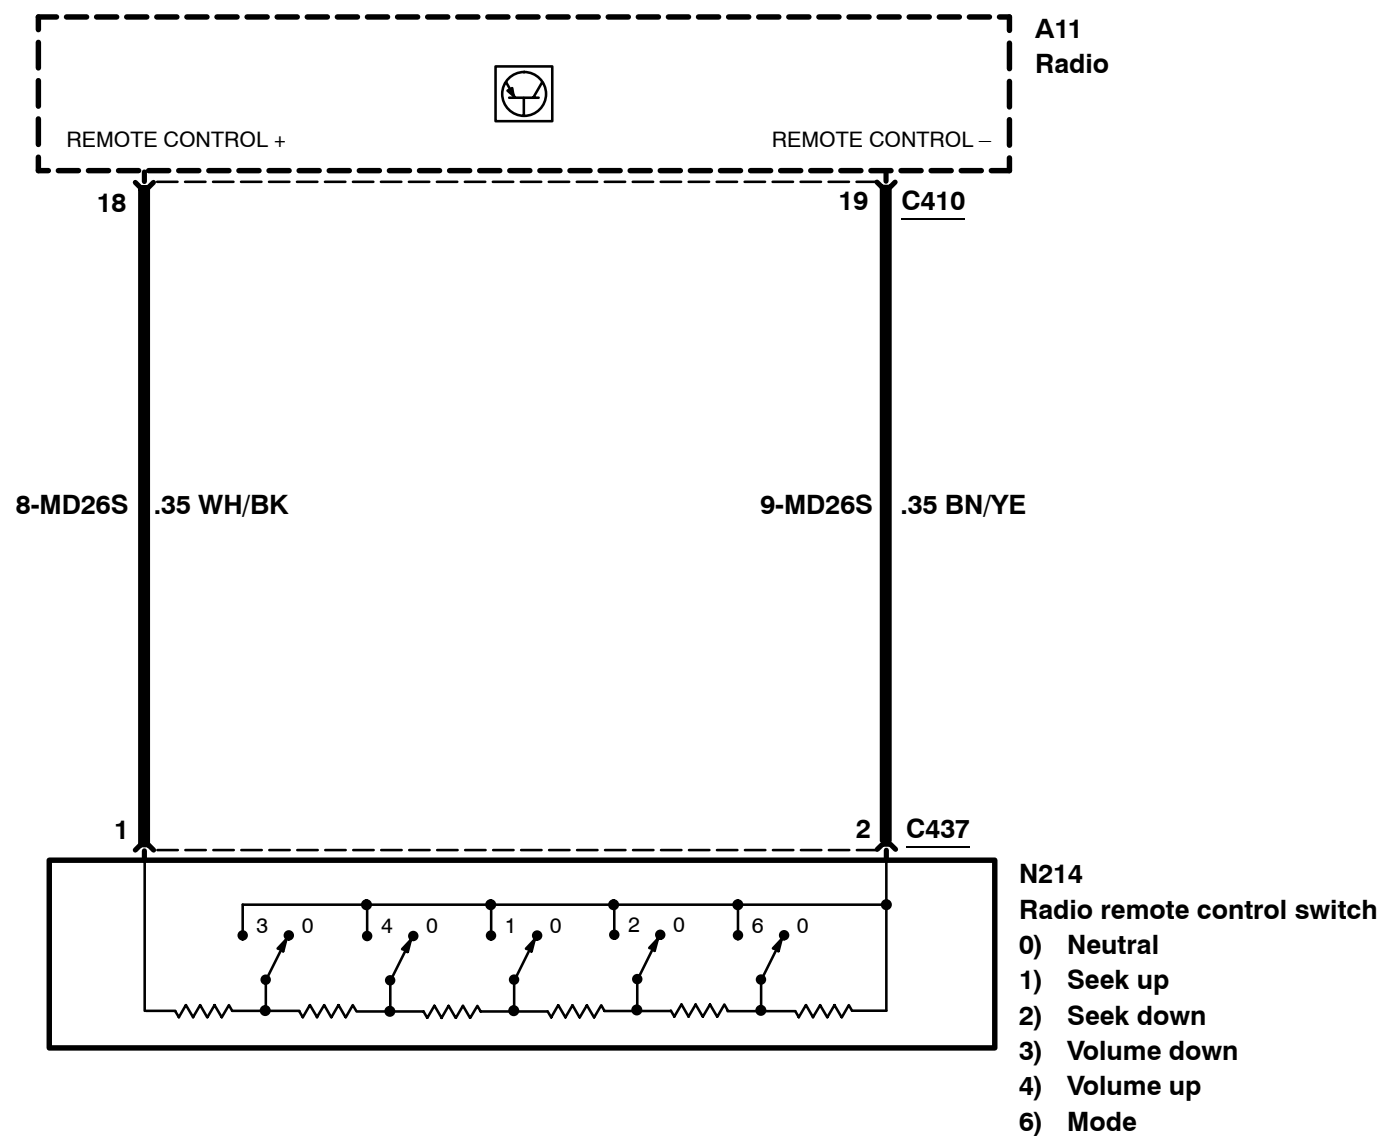

# Speakers – LHD, without Sanyo radio


02/2008  
415-03-00-1  
2008.25  
Focus

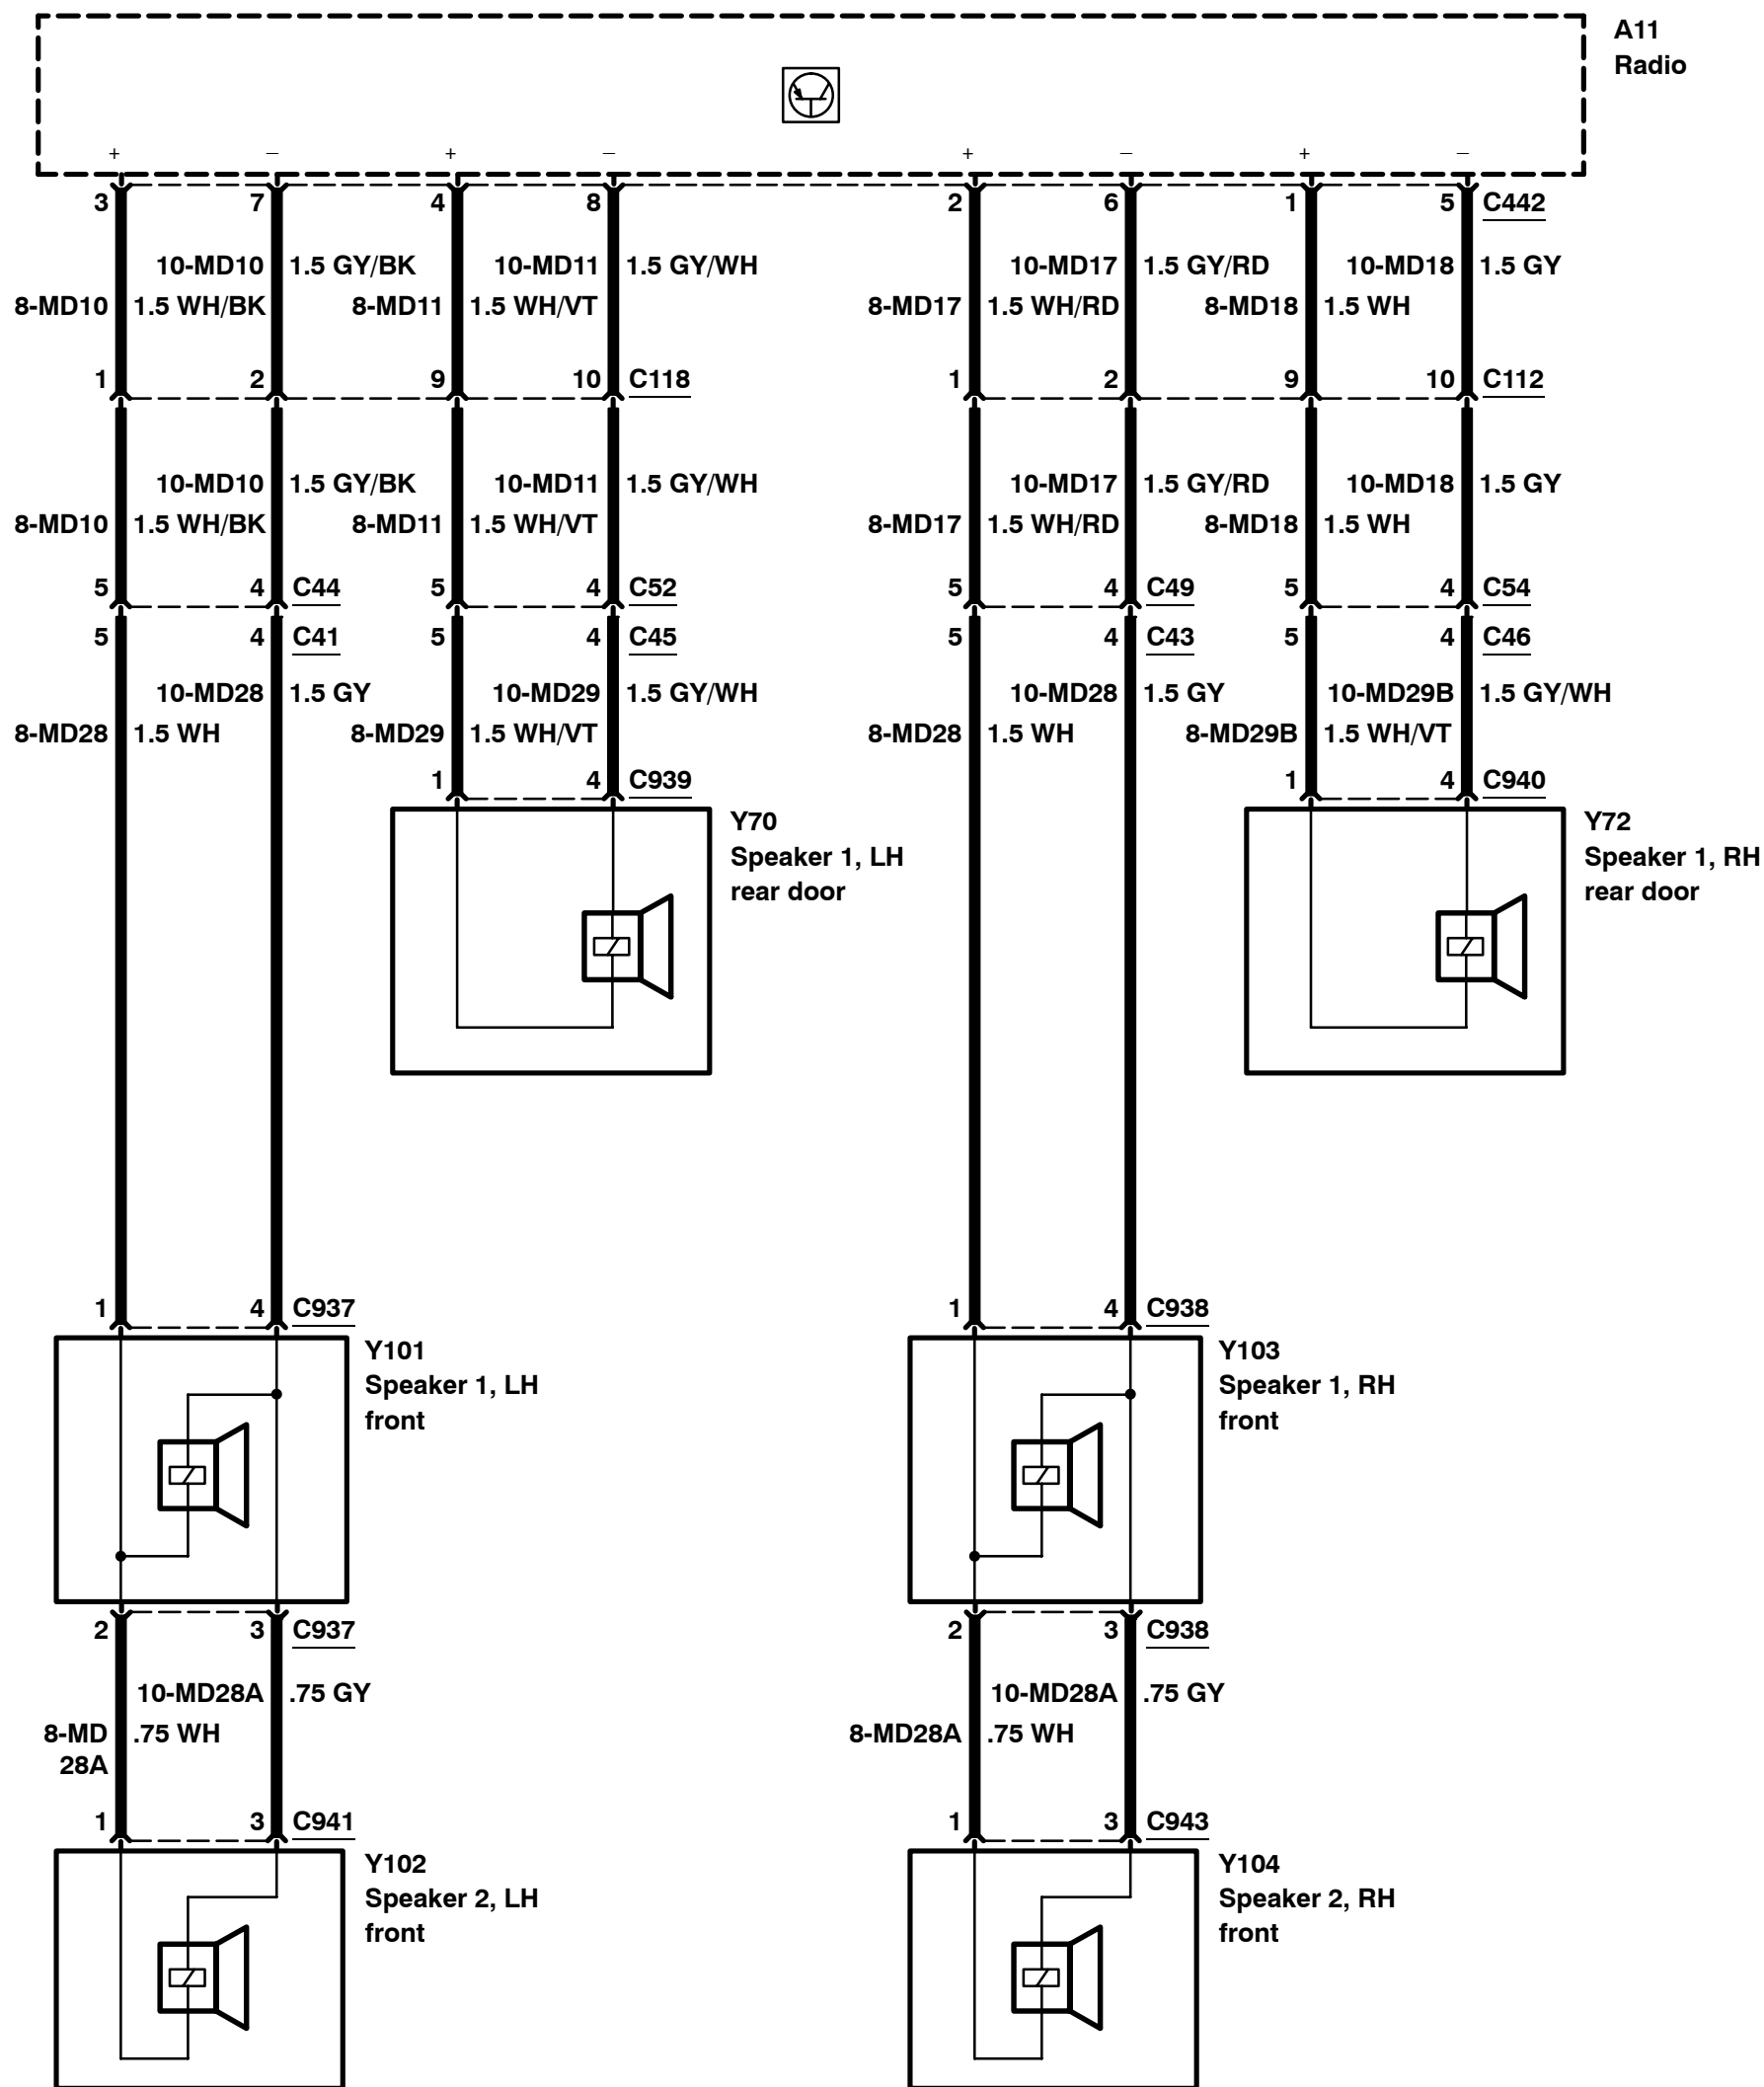




# Speakers – RHD, without Sanyo radio

02/2008  
415-03-00-2  
2008.25  
Focus

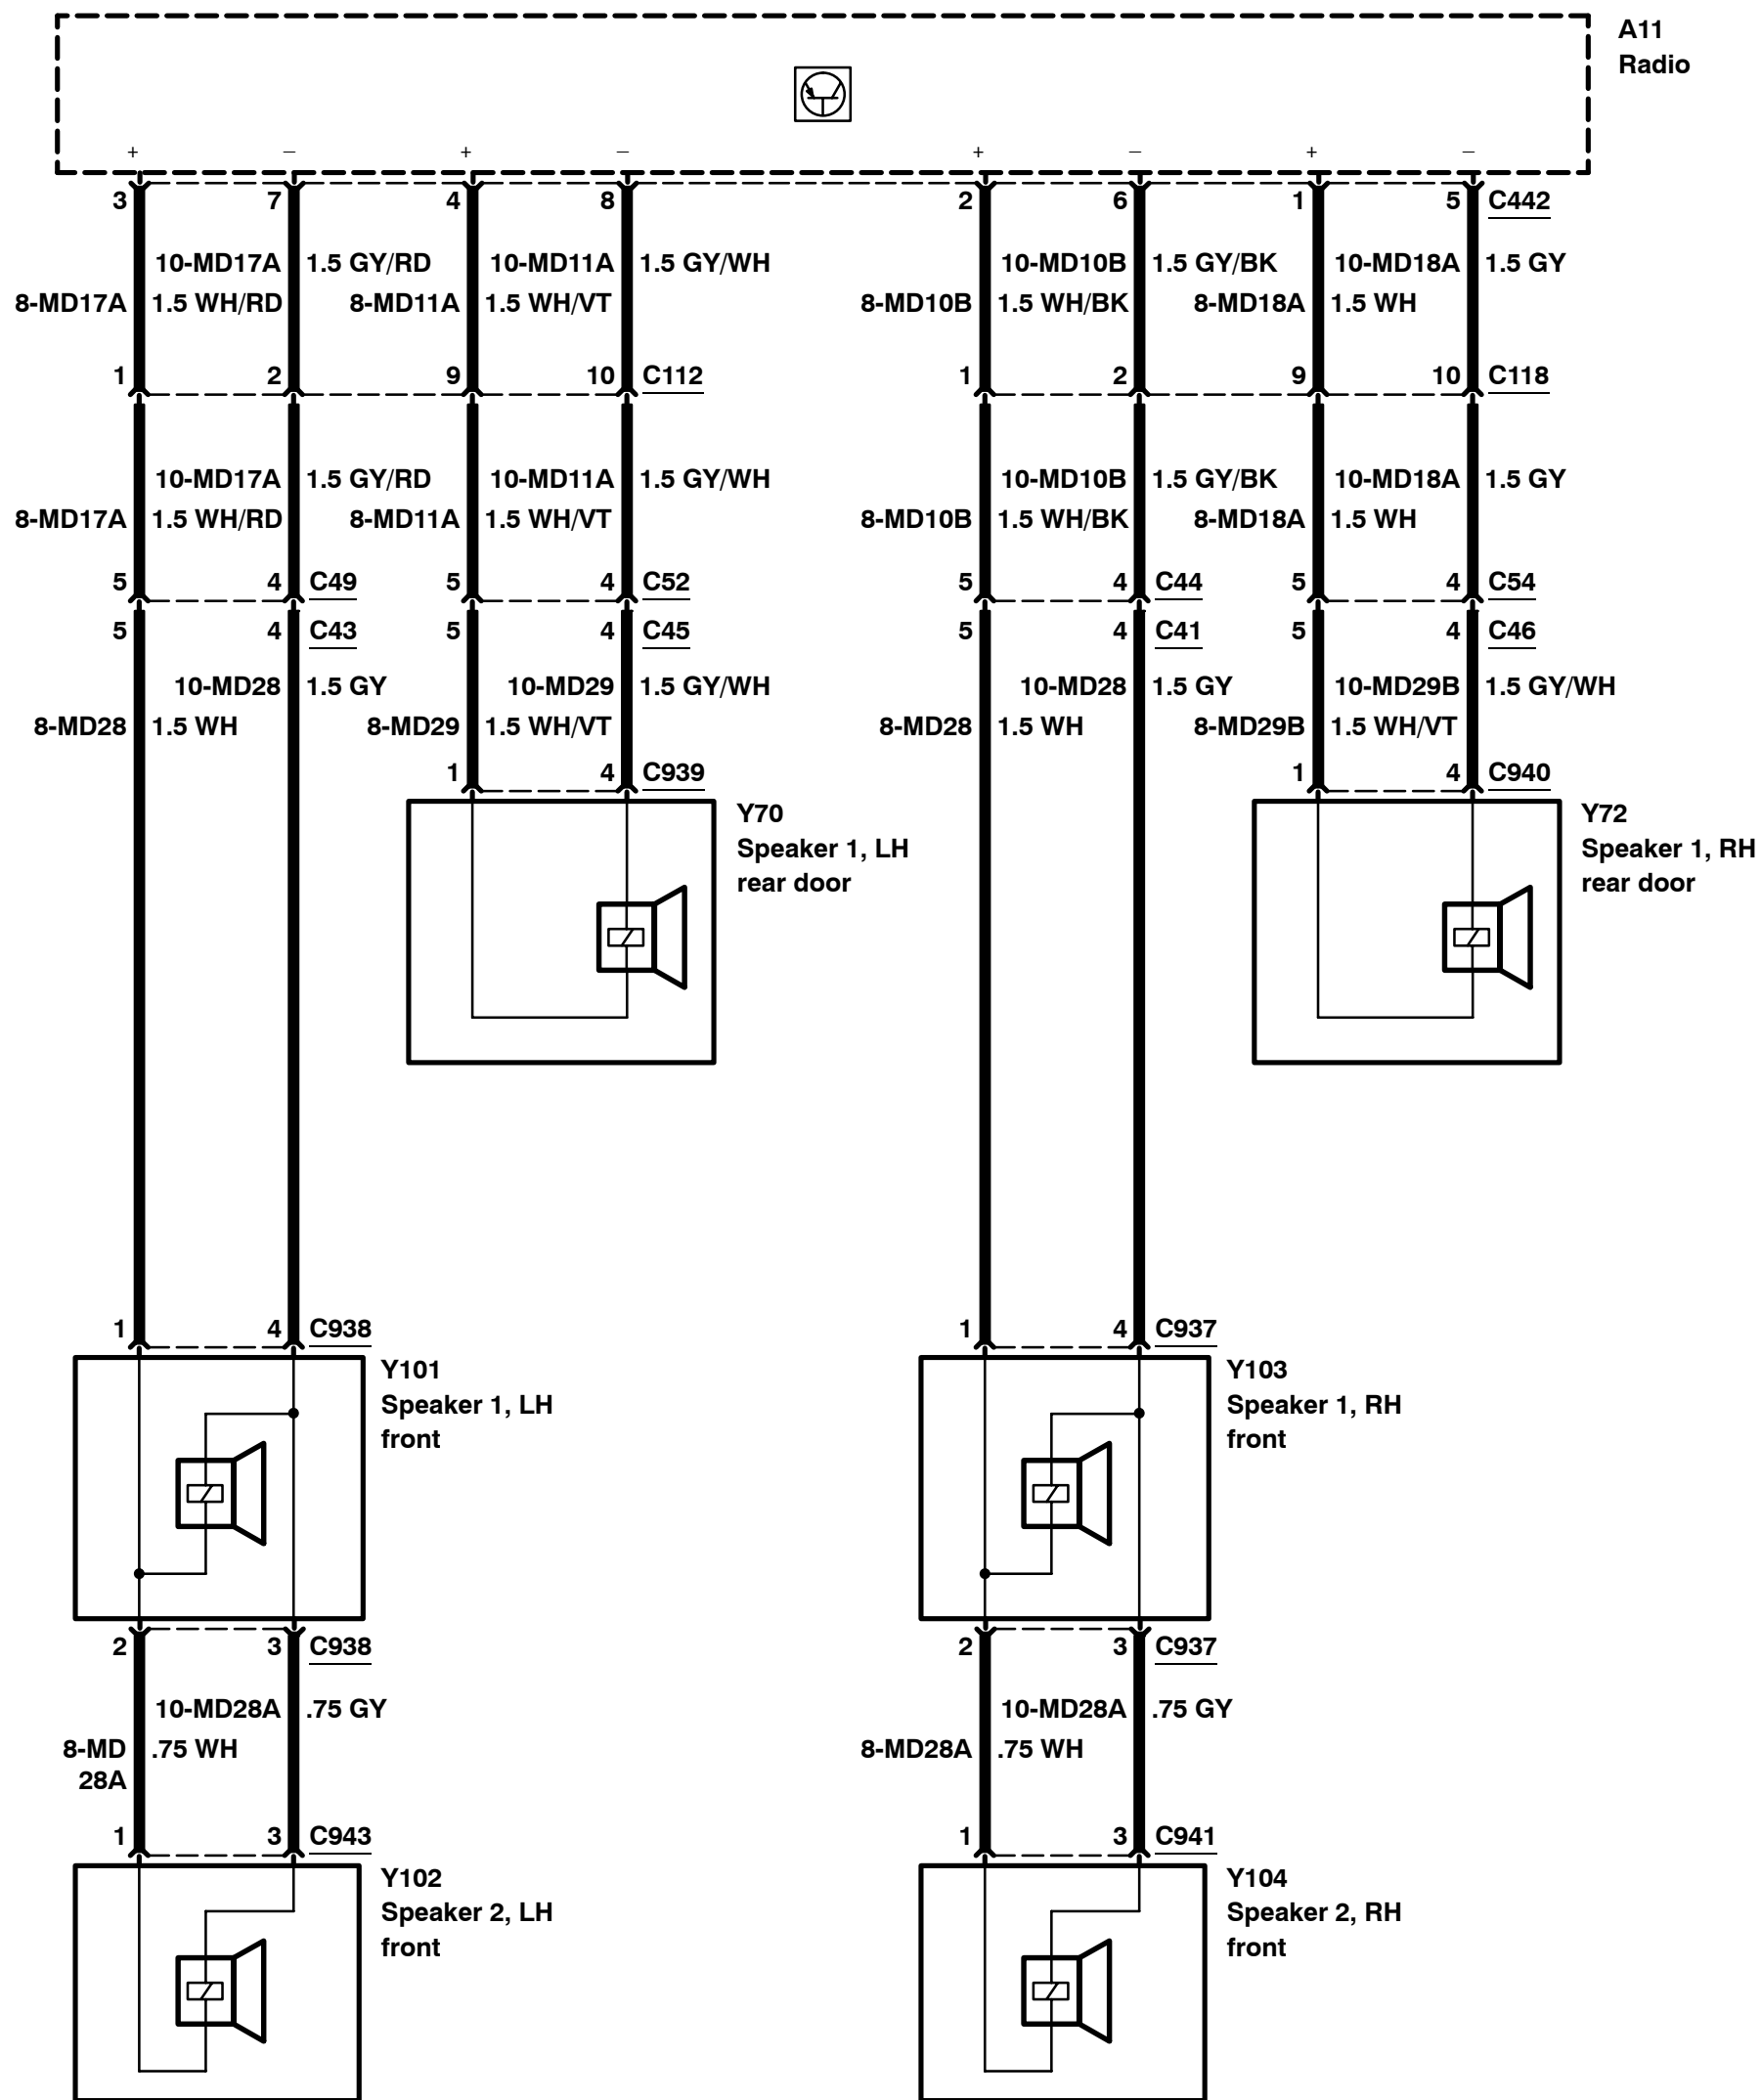




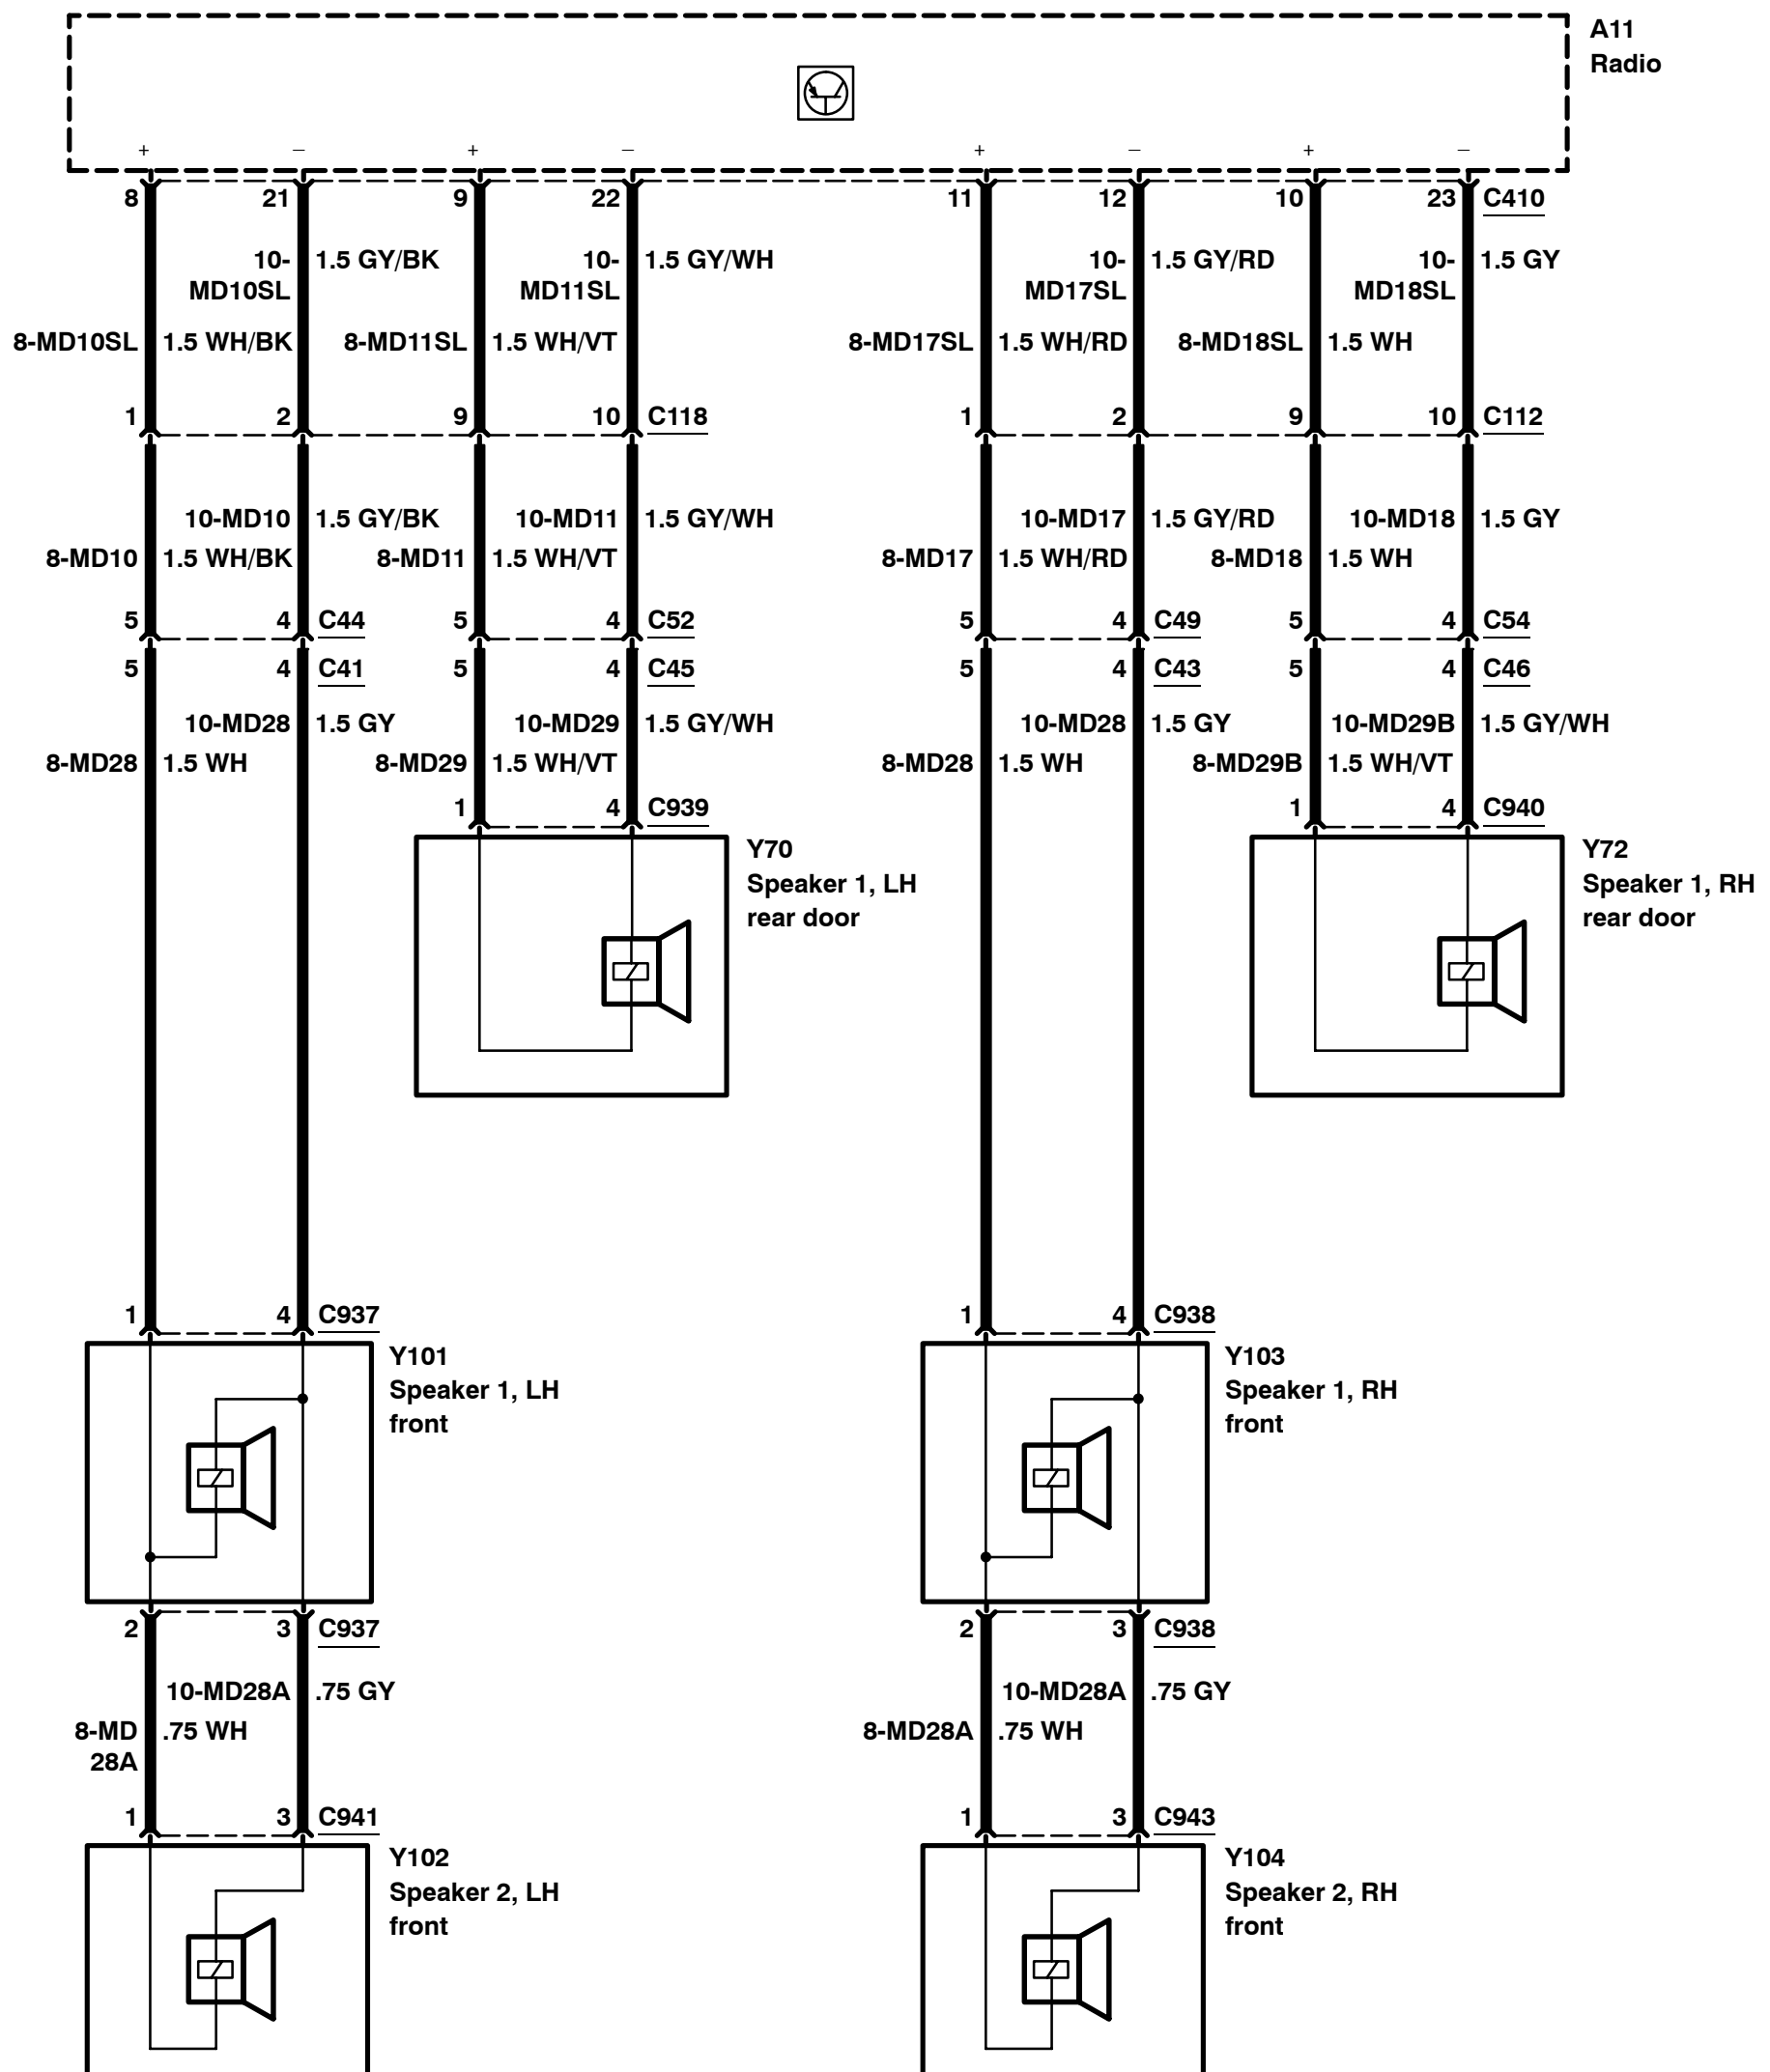


**Speakers – RHD, with Sanyo radio**

02/2008  
415-03-00-4  
2008.25  
Focus

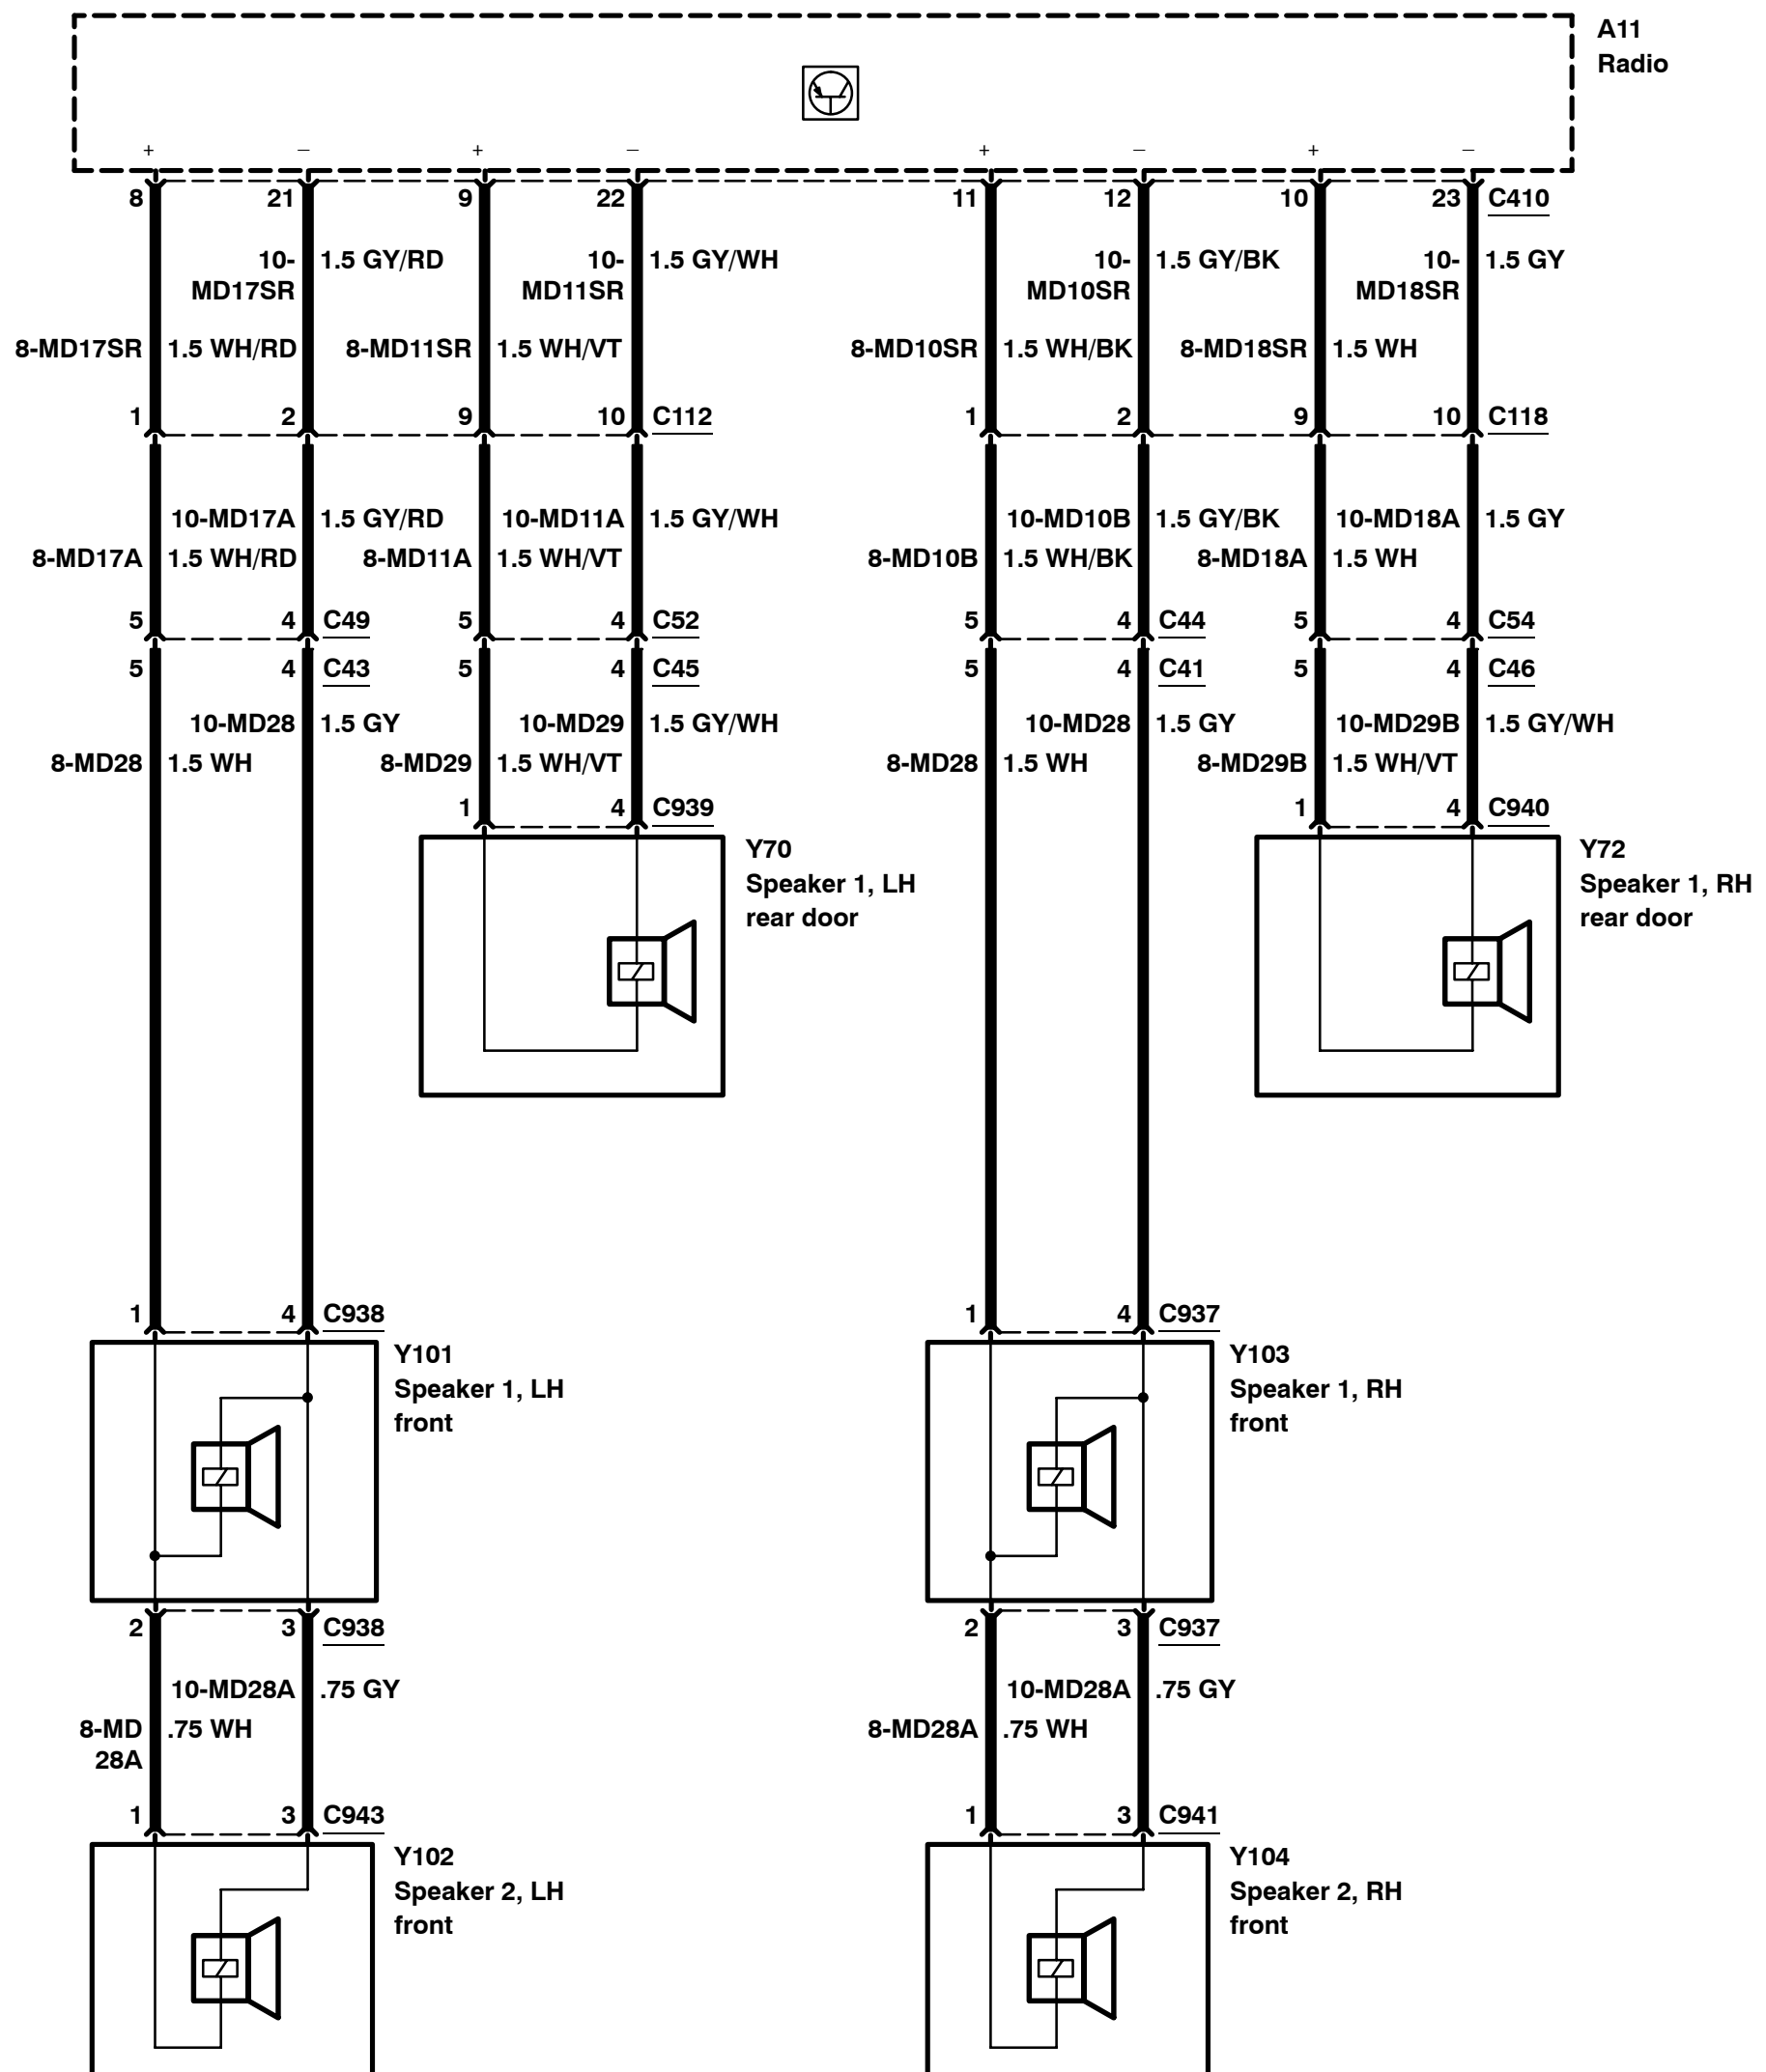


# Exterior Lighting – Headlamps, Low beam

02/2008  
417-01-00-1  
2008.25  
Focus

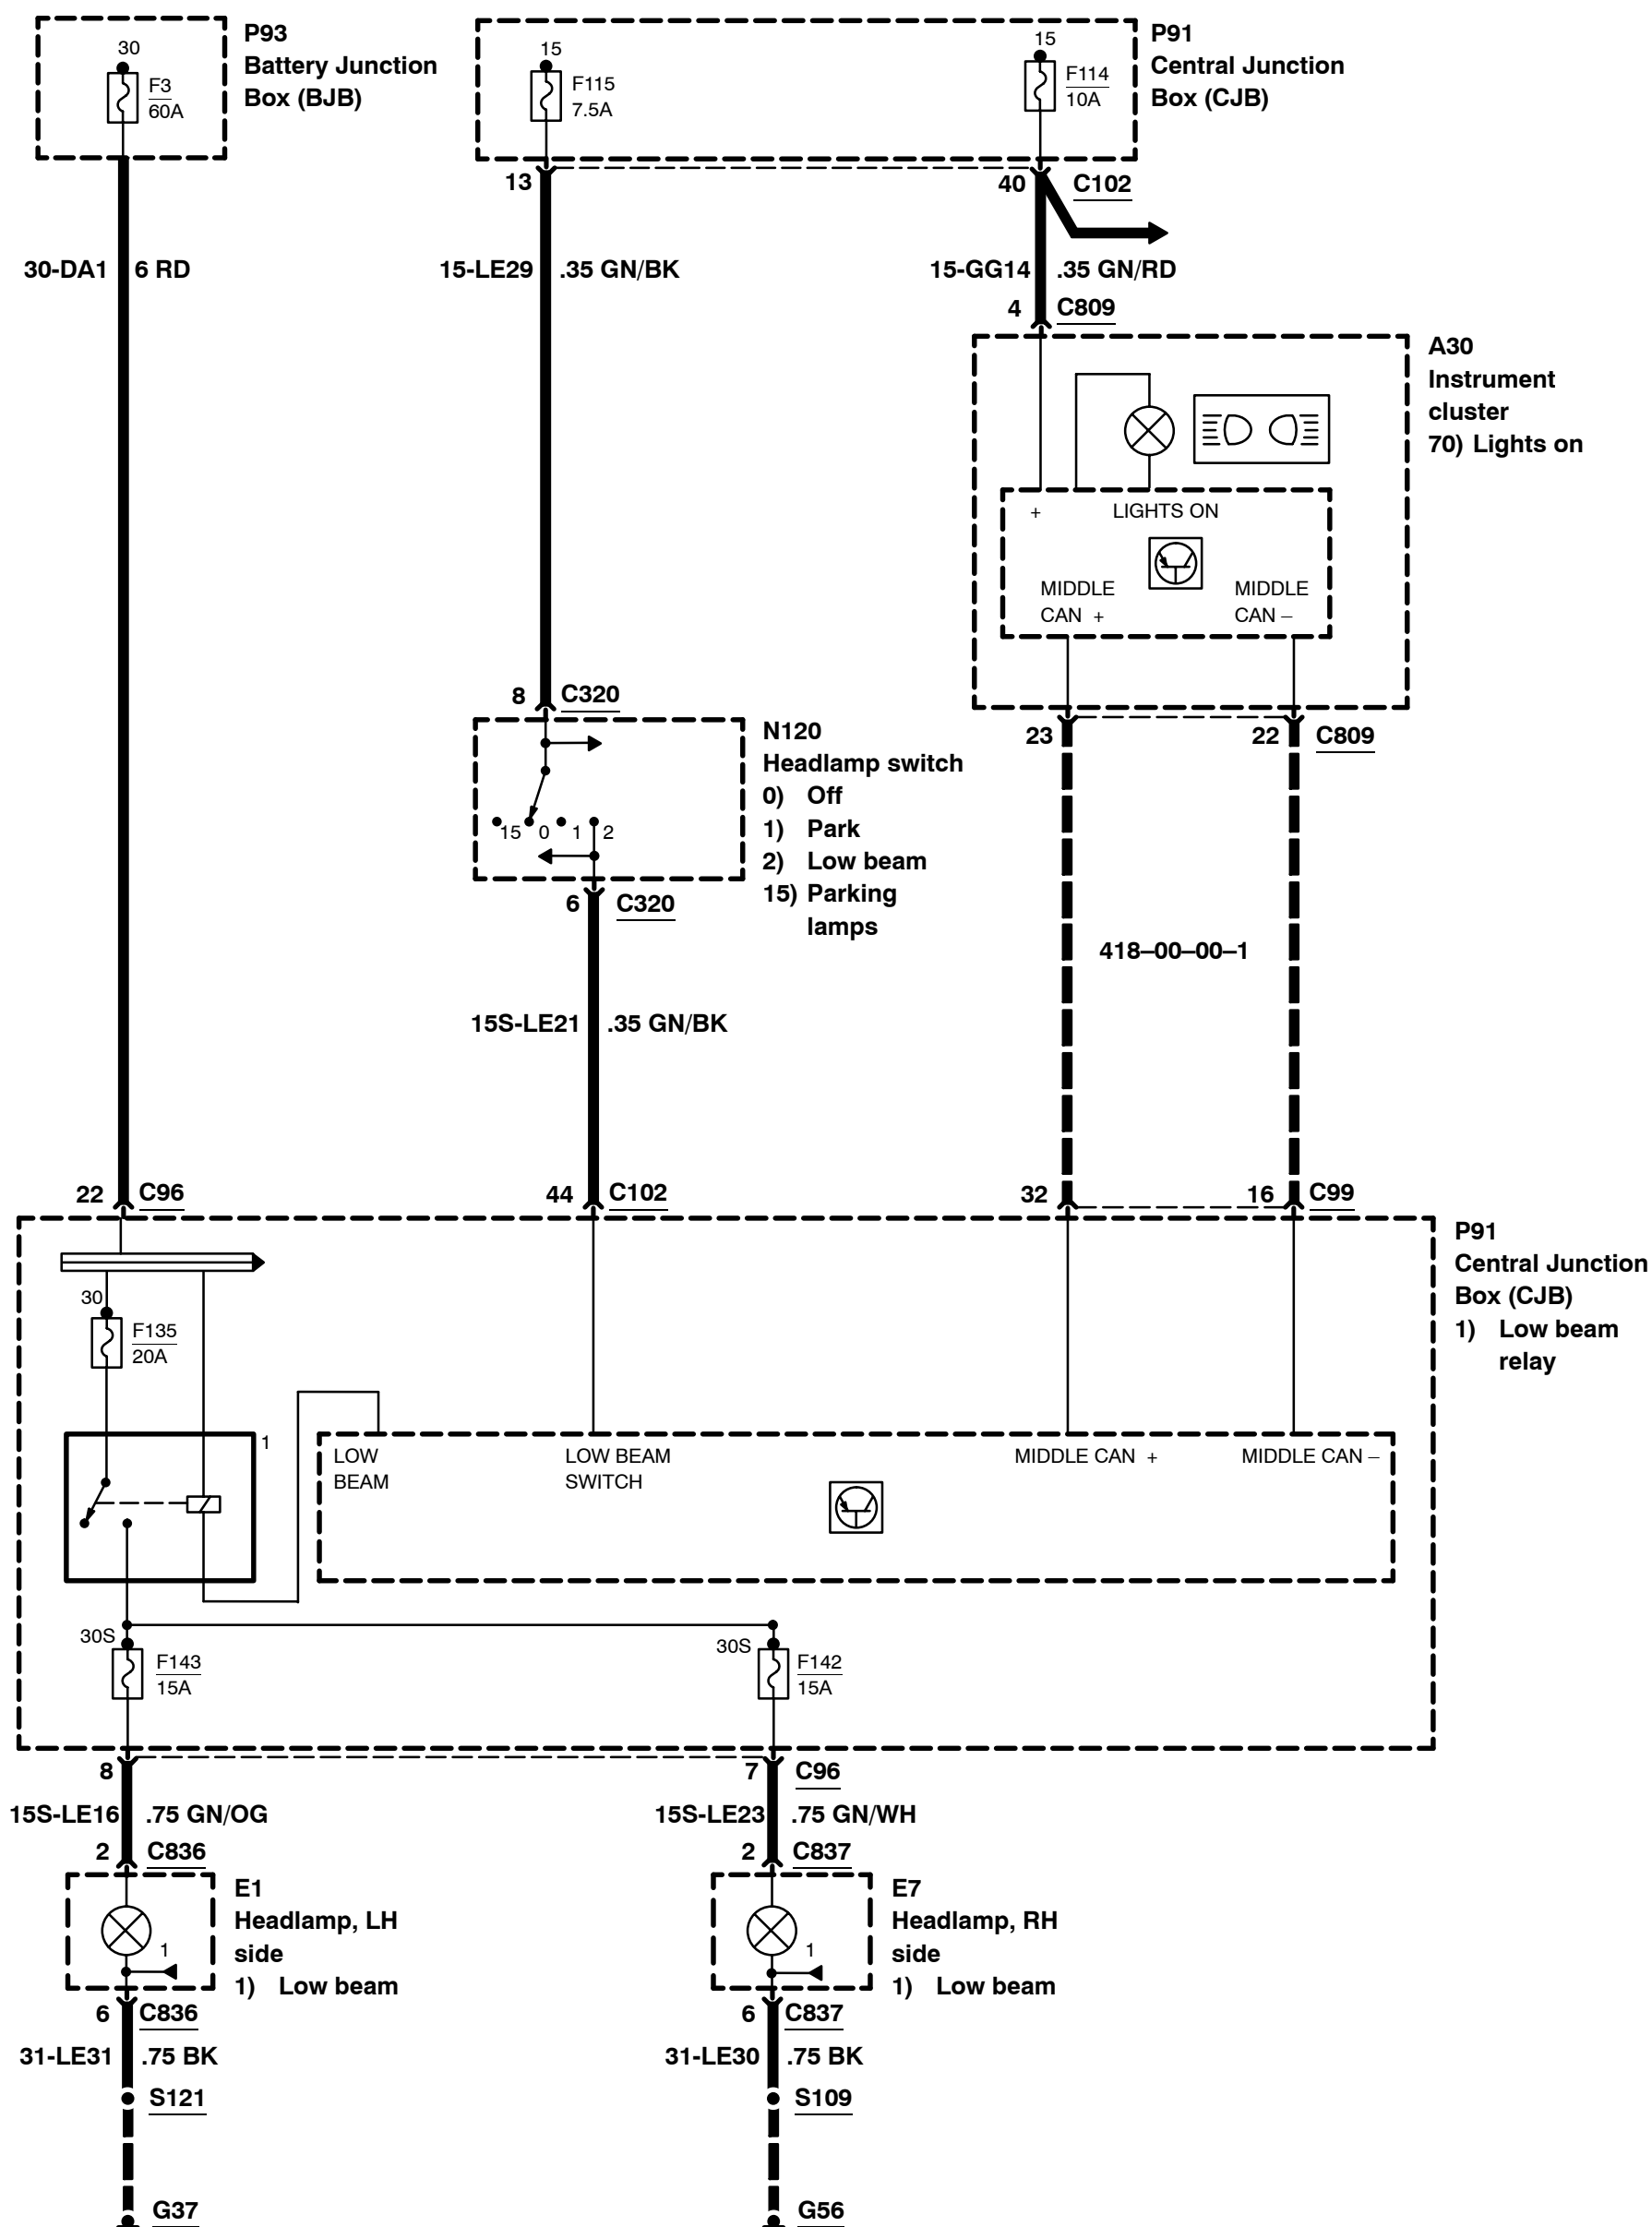


# Exterior Lighting – Headlamps, High beam

02/2008  
417-01-00-2  
2008.25  
Focus

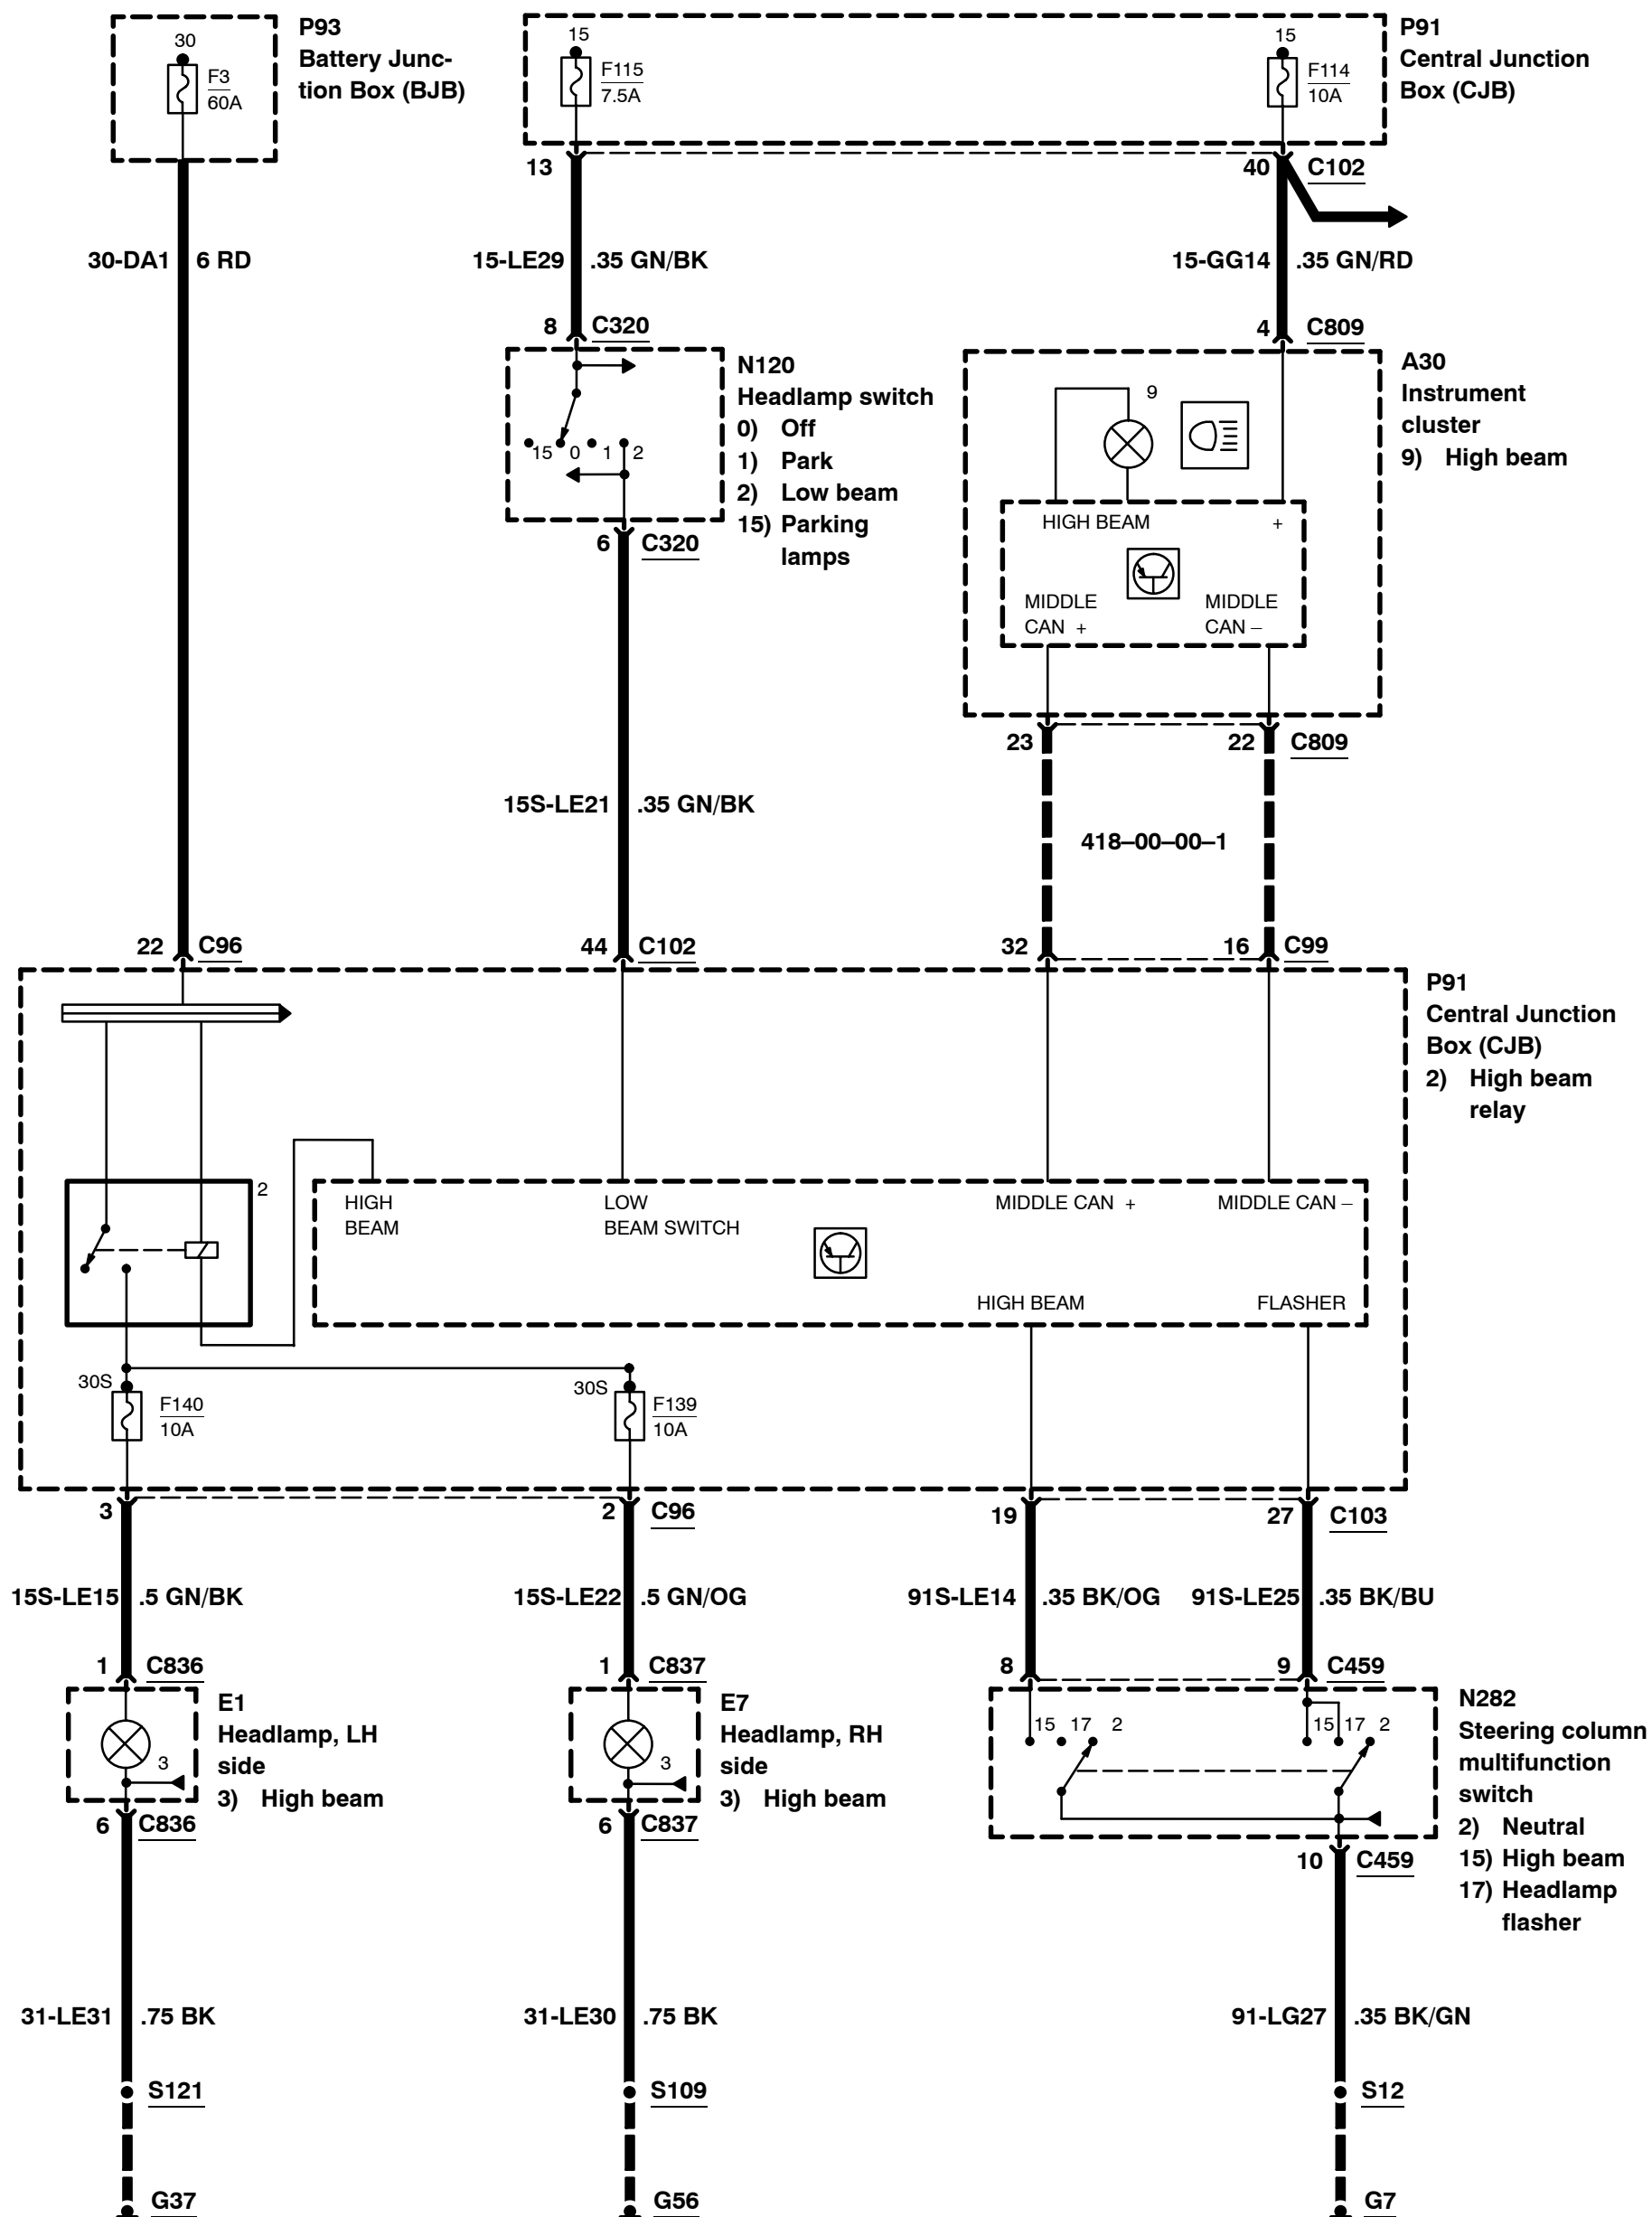


# Exterior Lighting – Headlamp leveling, without adaptive front lighting

02/2008  
417-01-00-3  
2008.25  
Focus

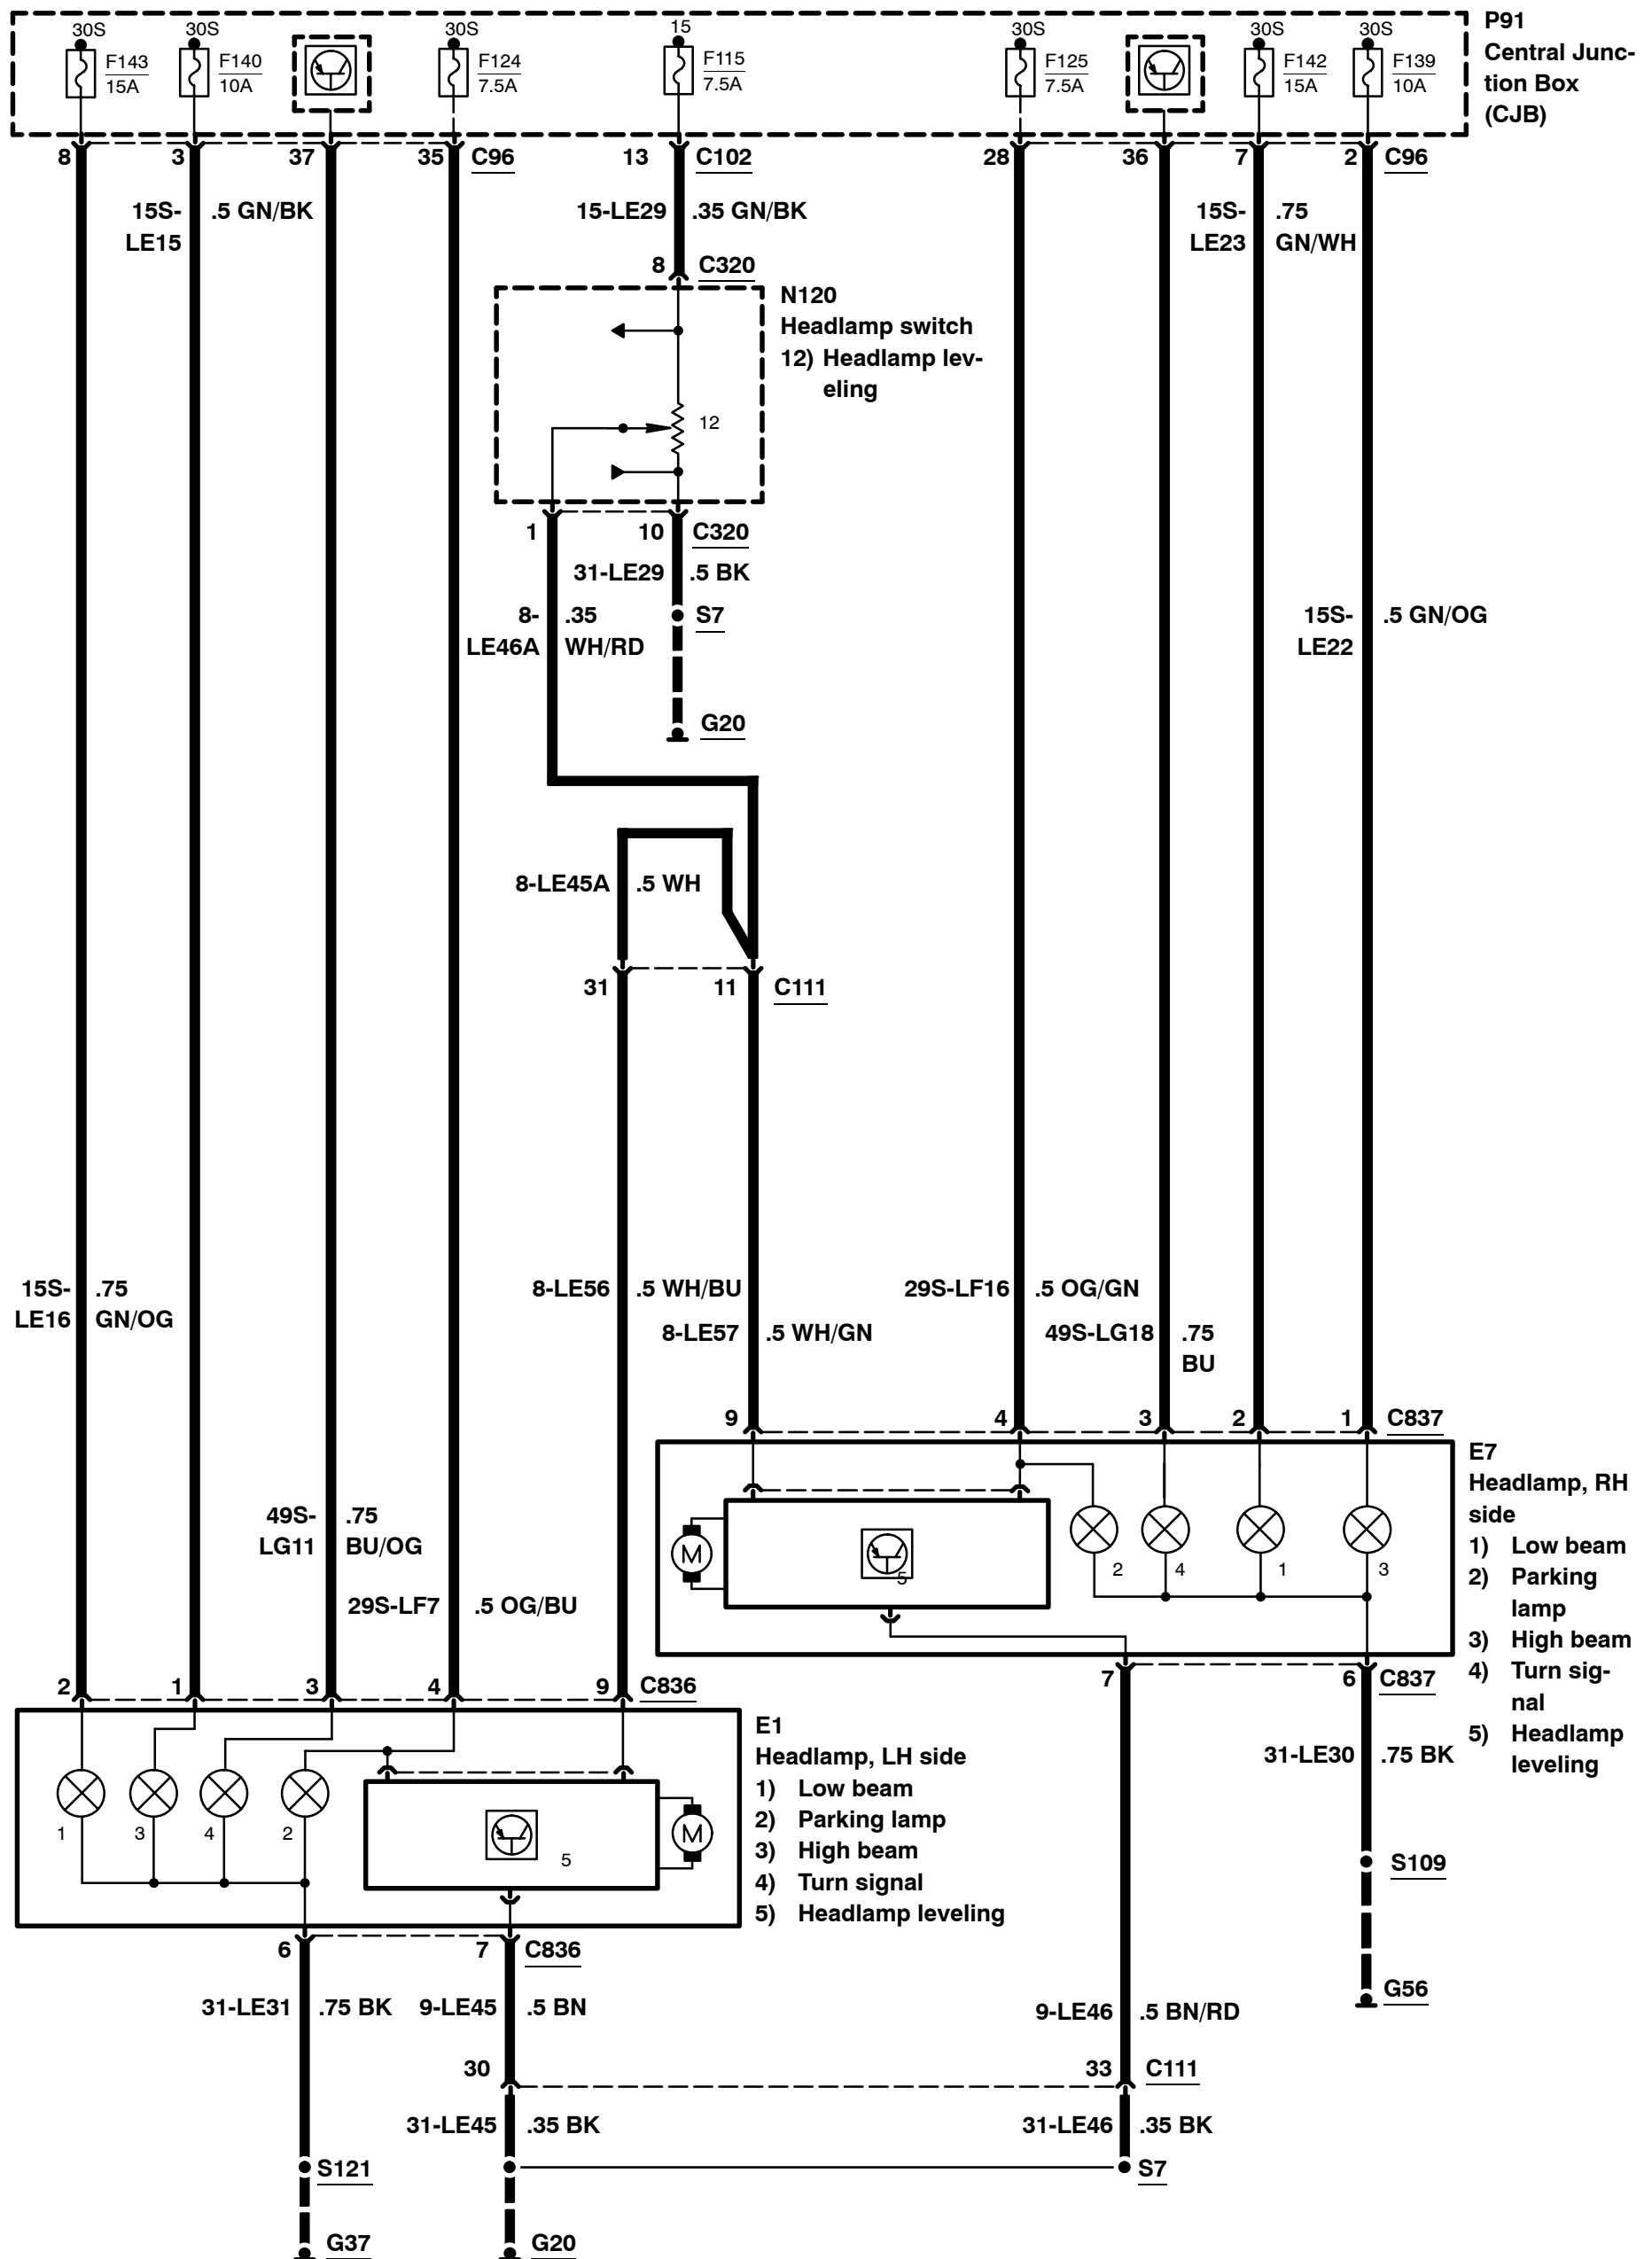

Exterior Lighting – Headlamp leveling, with adaptive front lighting


02/2008  
417-01-00-4  
2008.25  
Focus

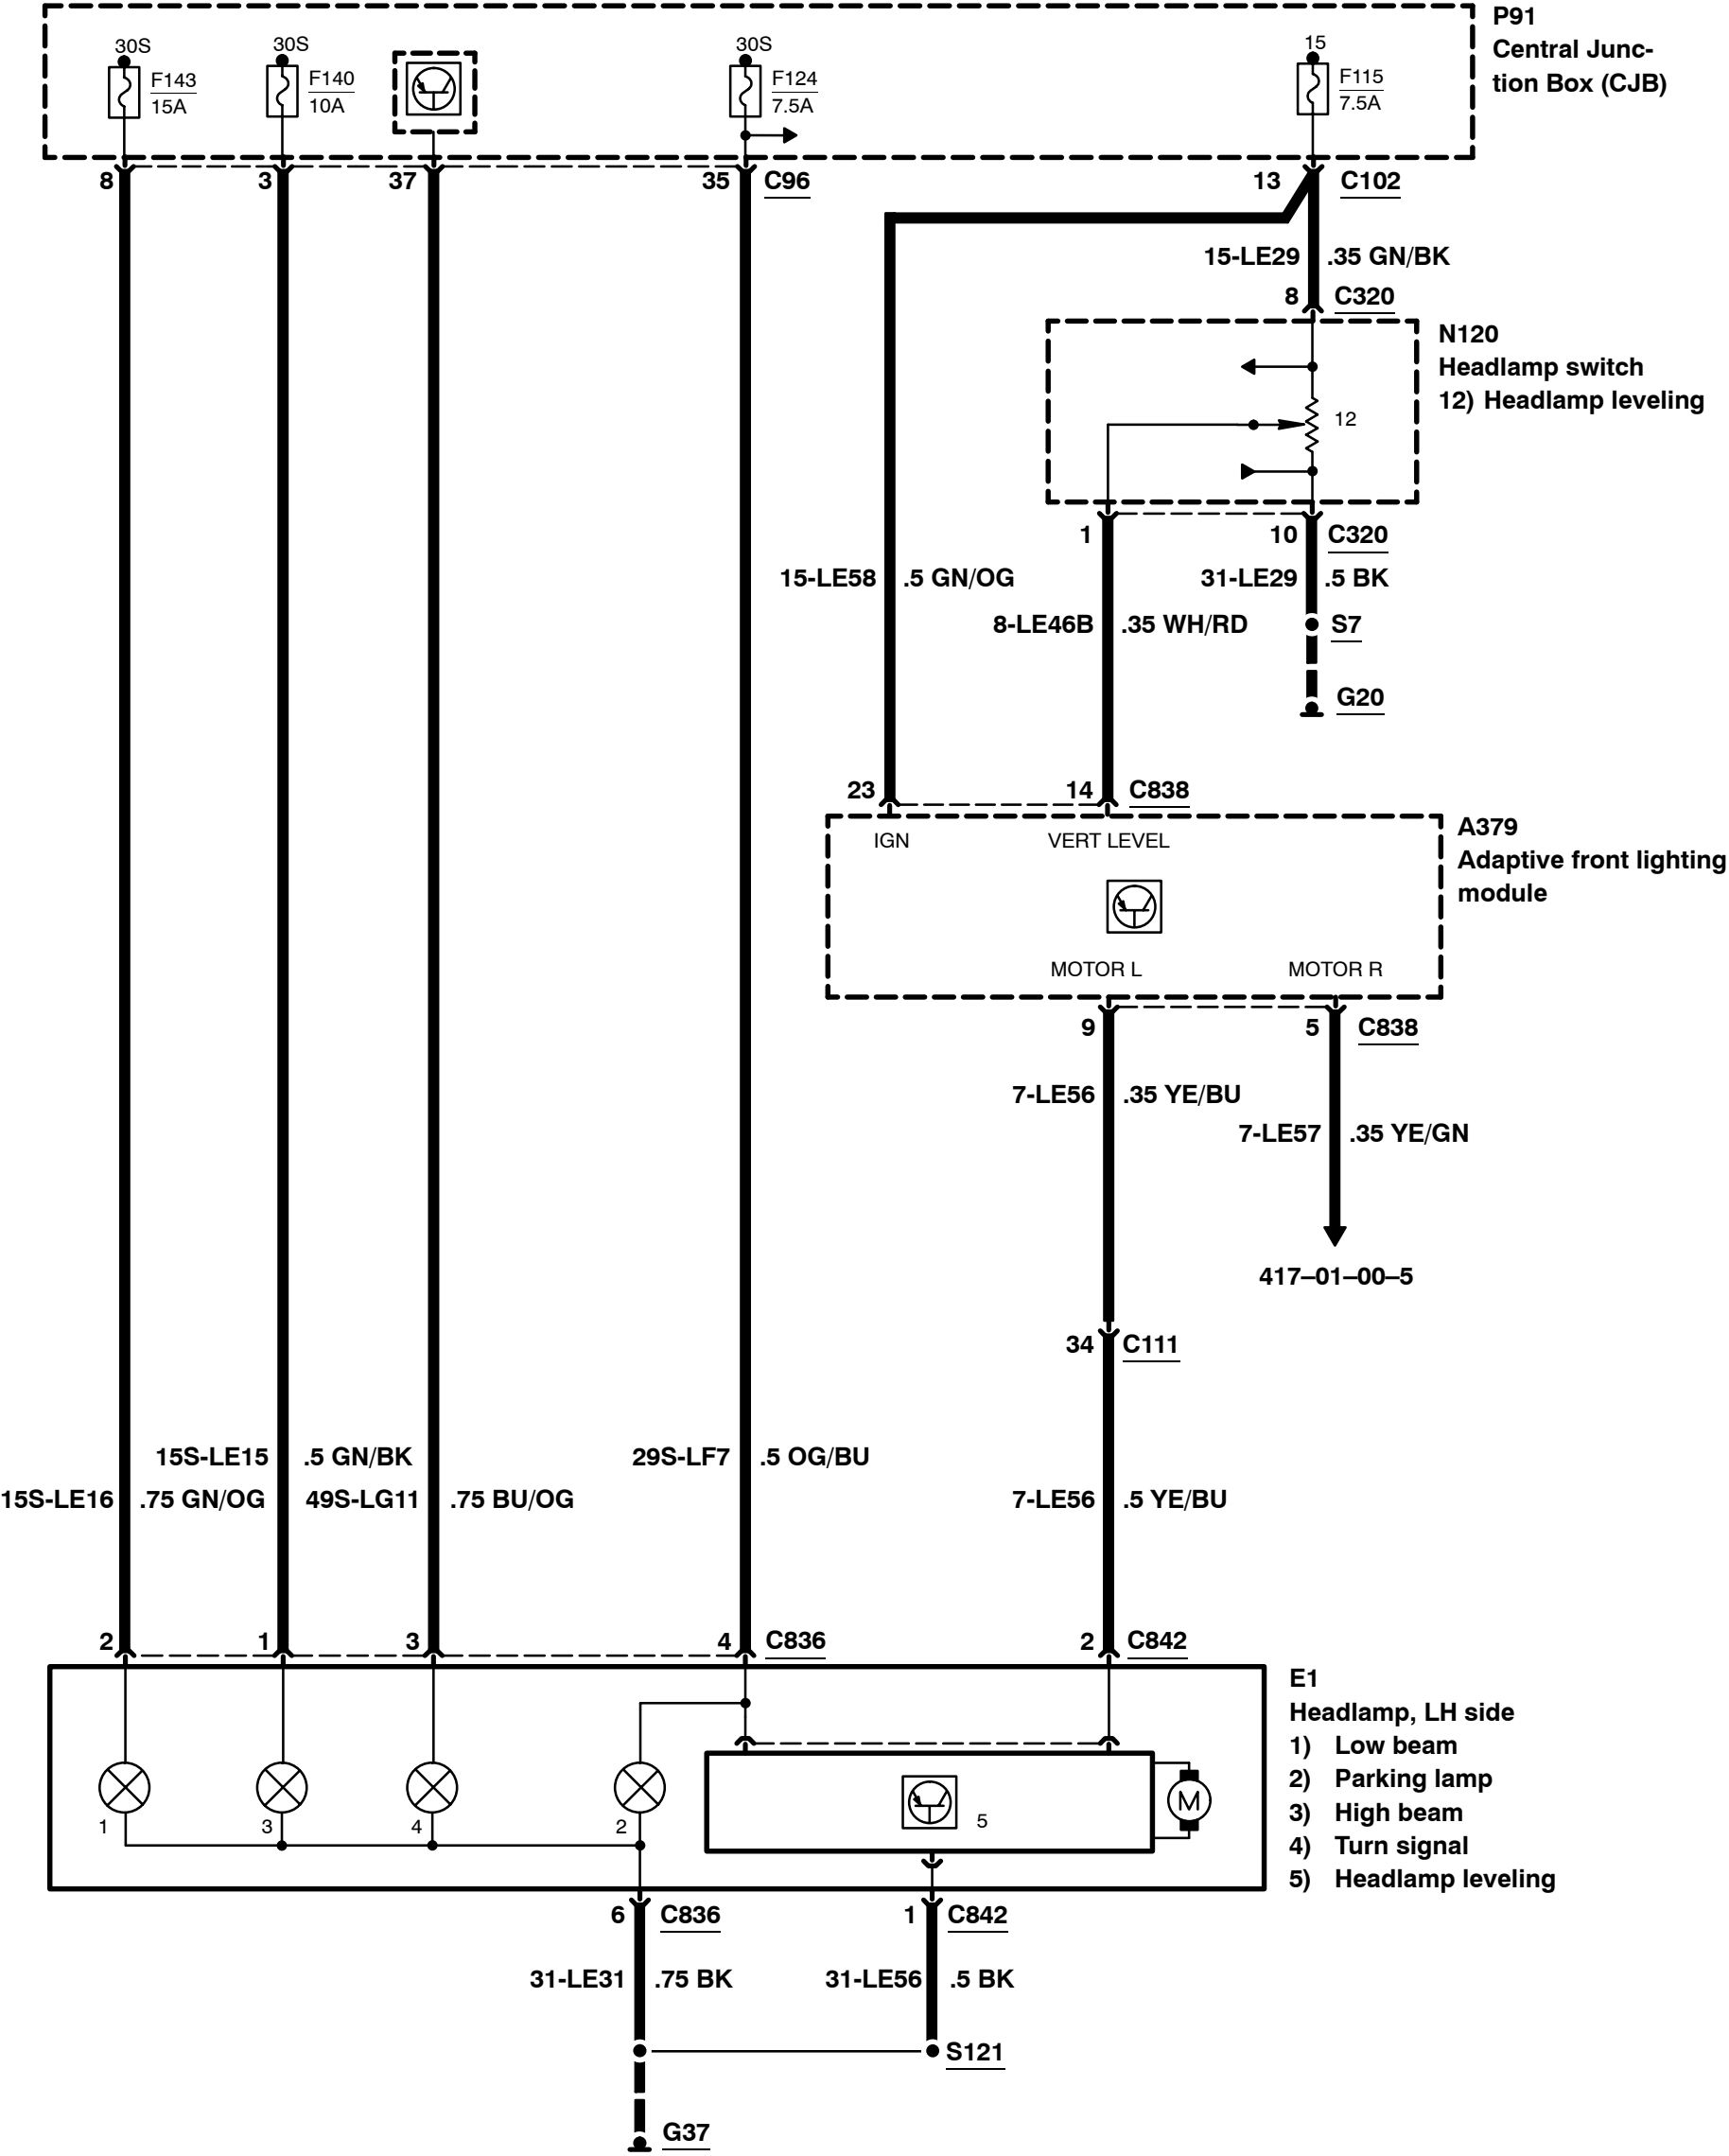




Exterior Lighting – Headlamp leveling, with adaptive front lighting

02/2008  
417-01-00-5  
2008.25  
Focus

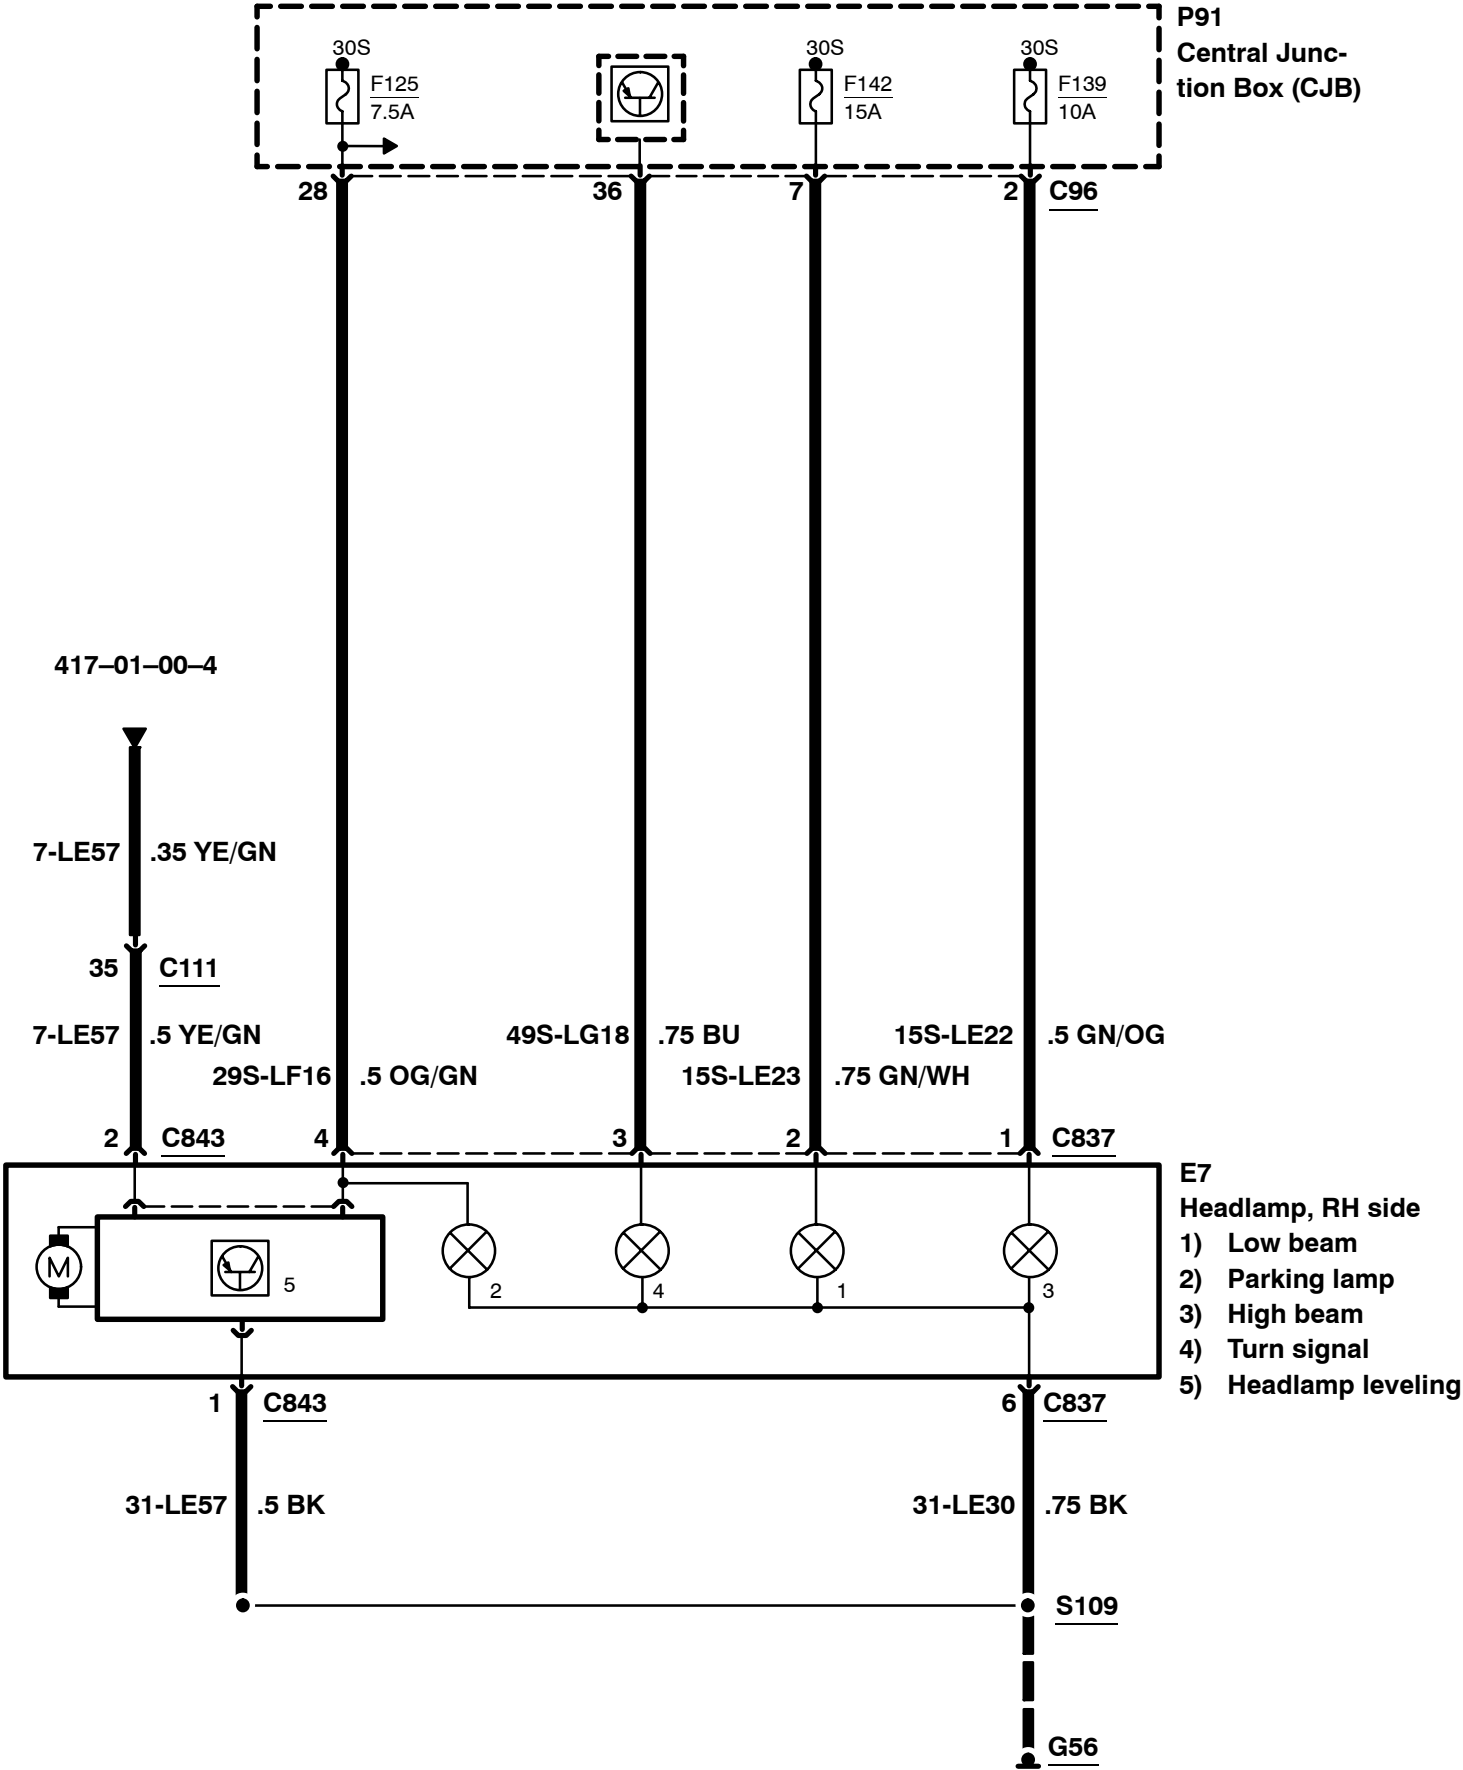

Exterior Lighting – Headlamp leveling, with adaptive front lighting


02/2008  
417-01-00-6  
2008.25  
Focus

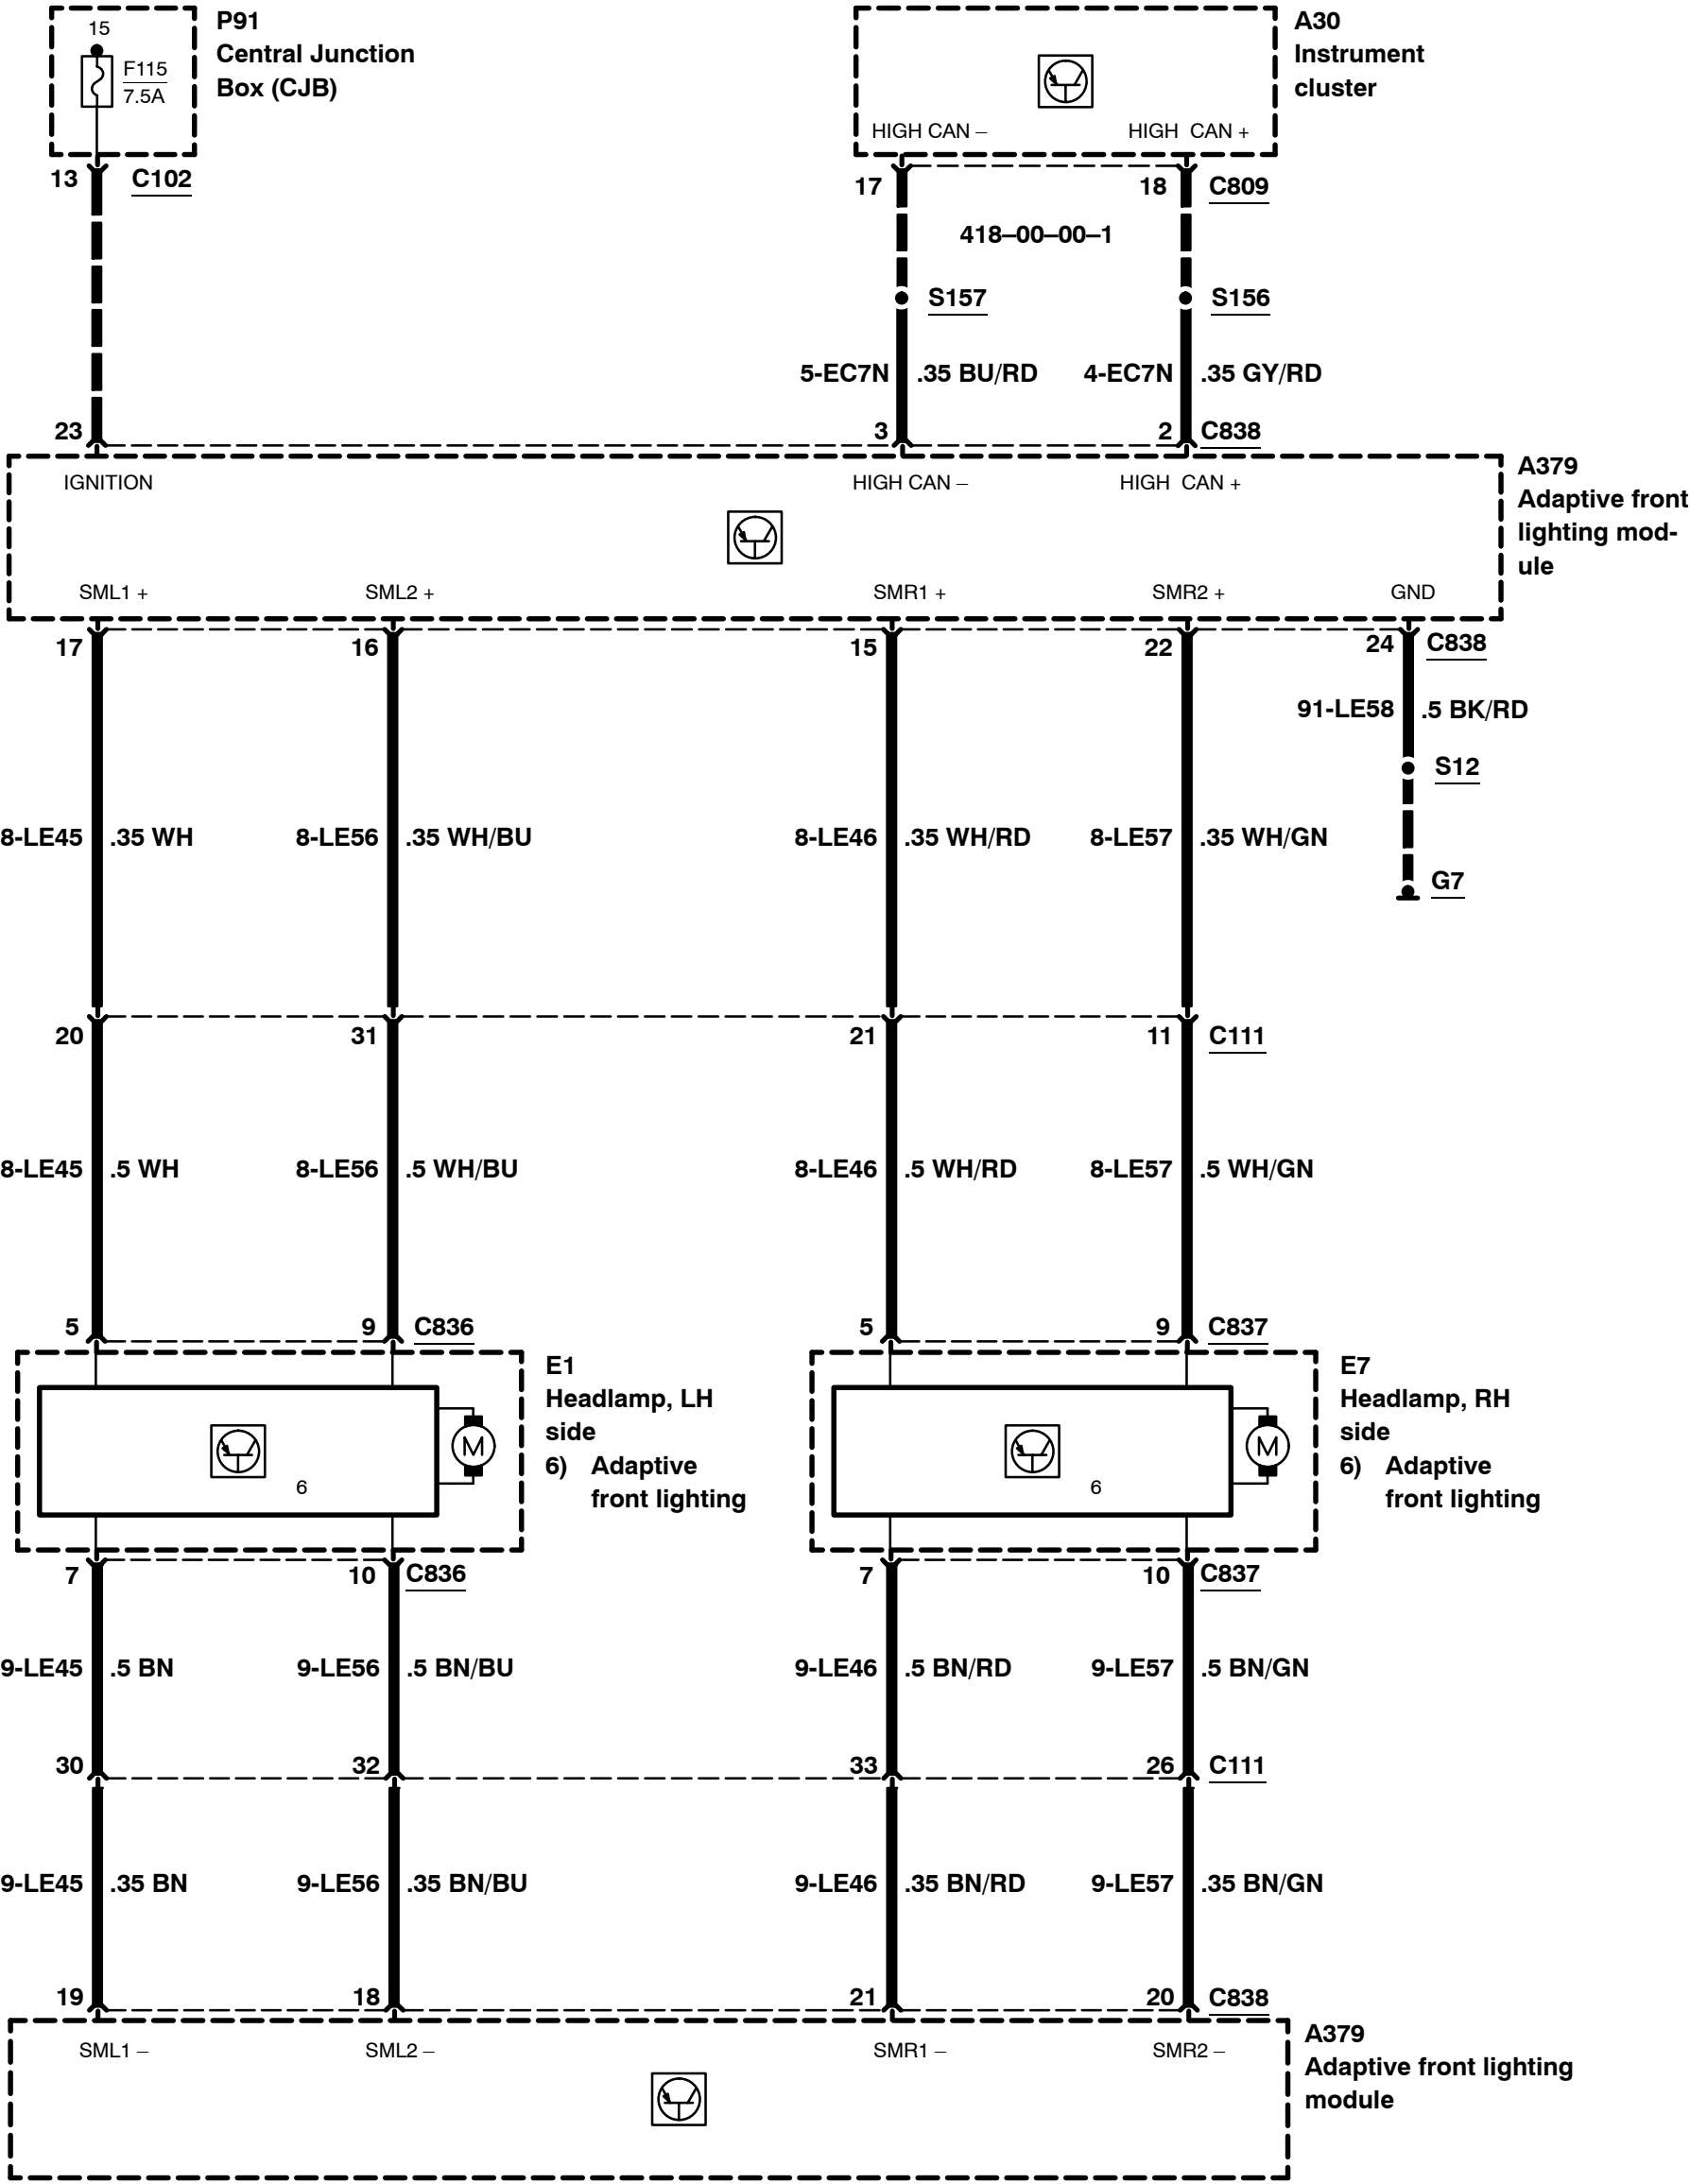




# Exterior Lighting – Headlamp leveling, with adaptive front lighting, with Electronic Stability Program (ESP)

02/2008  
417-01-00-7  
2008.25  
Focus

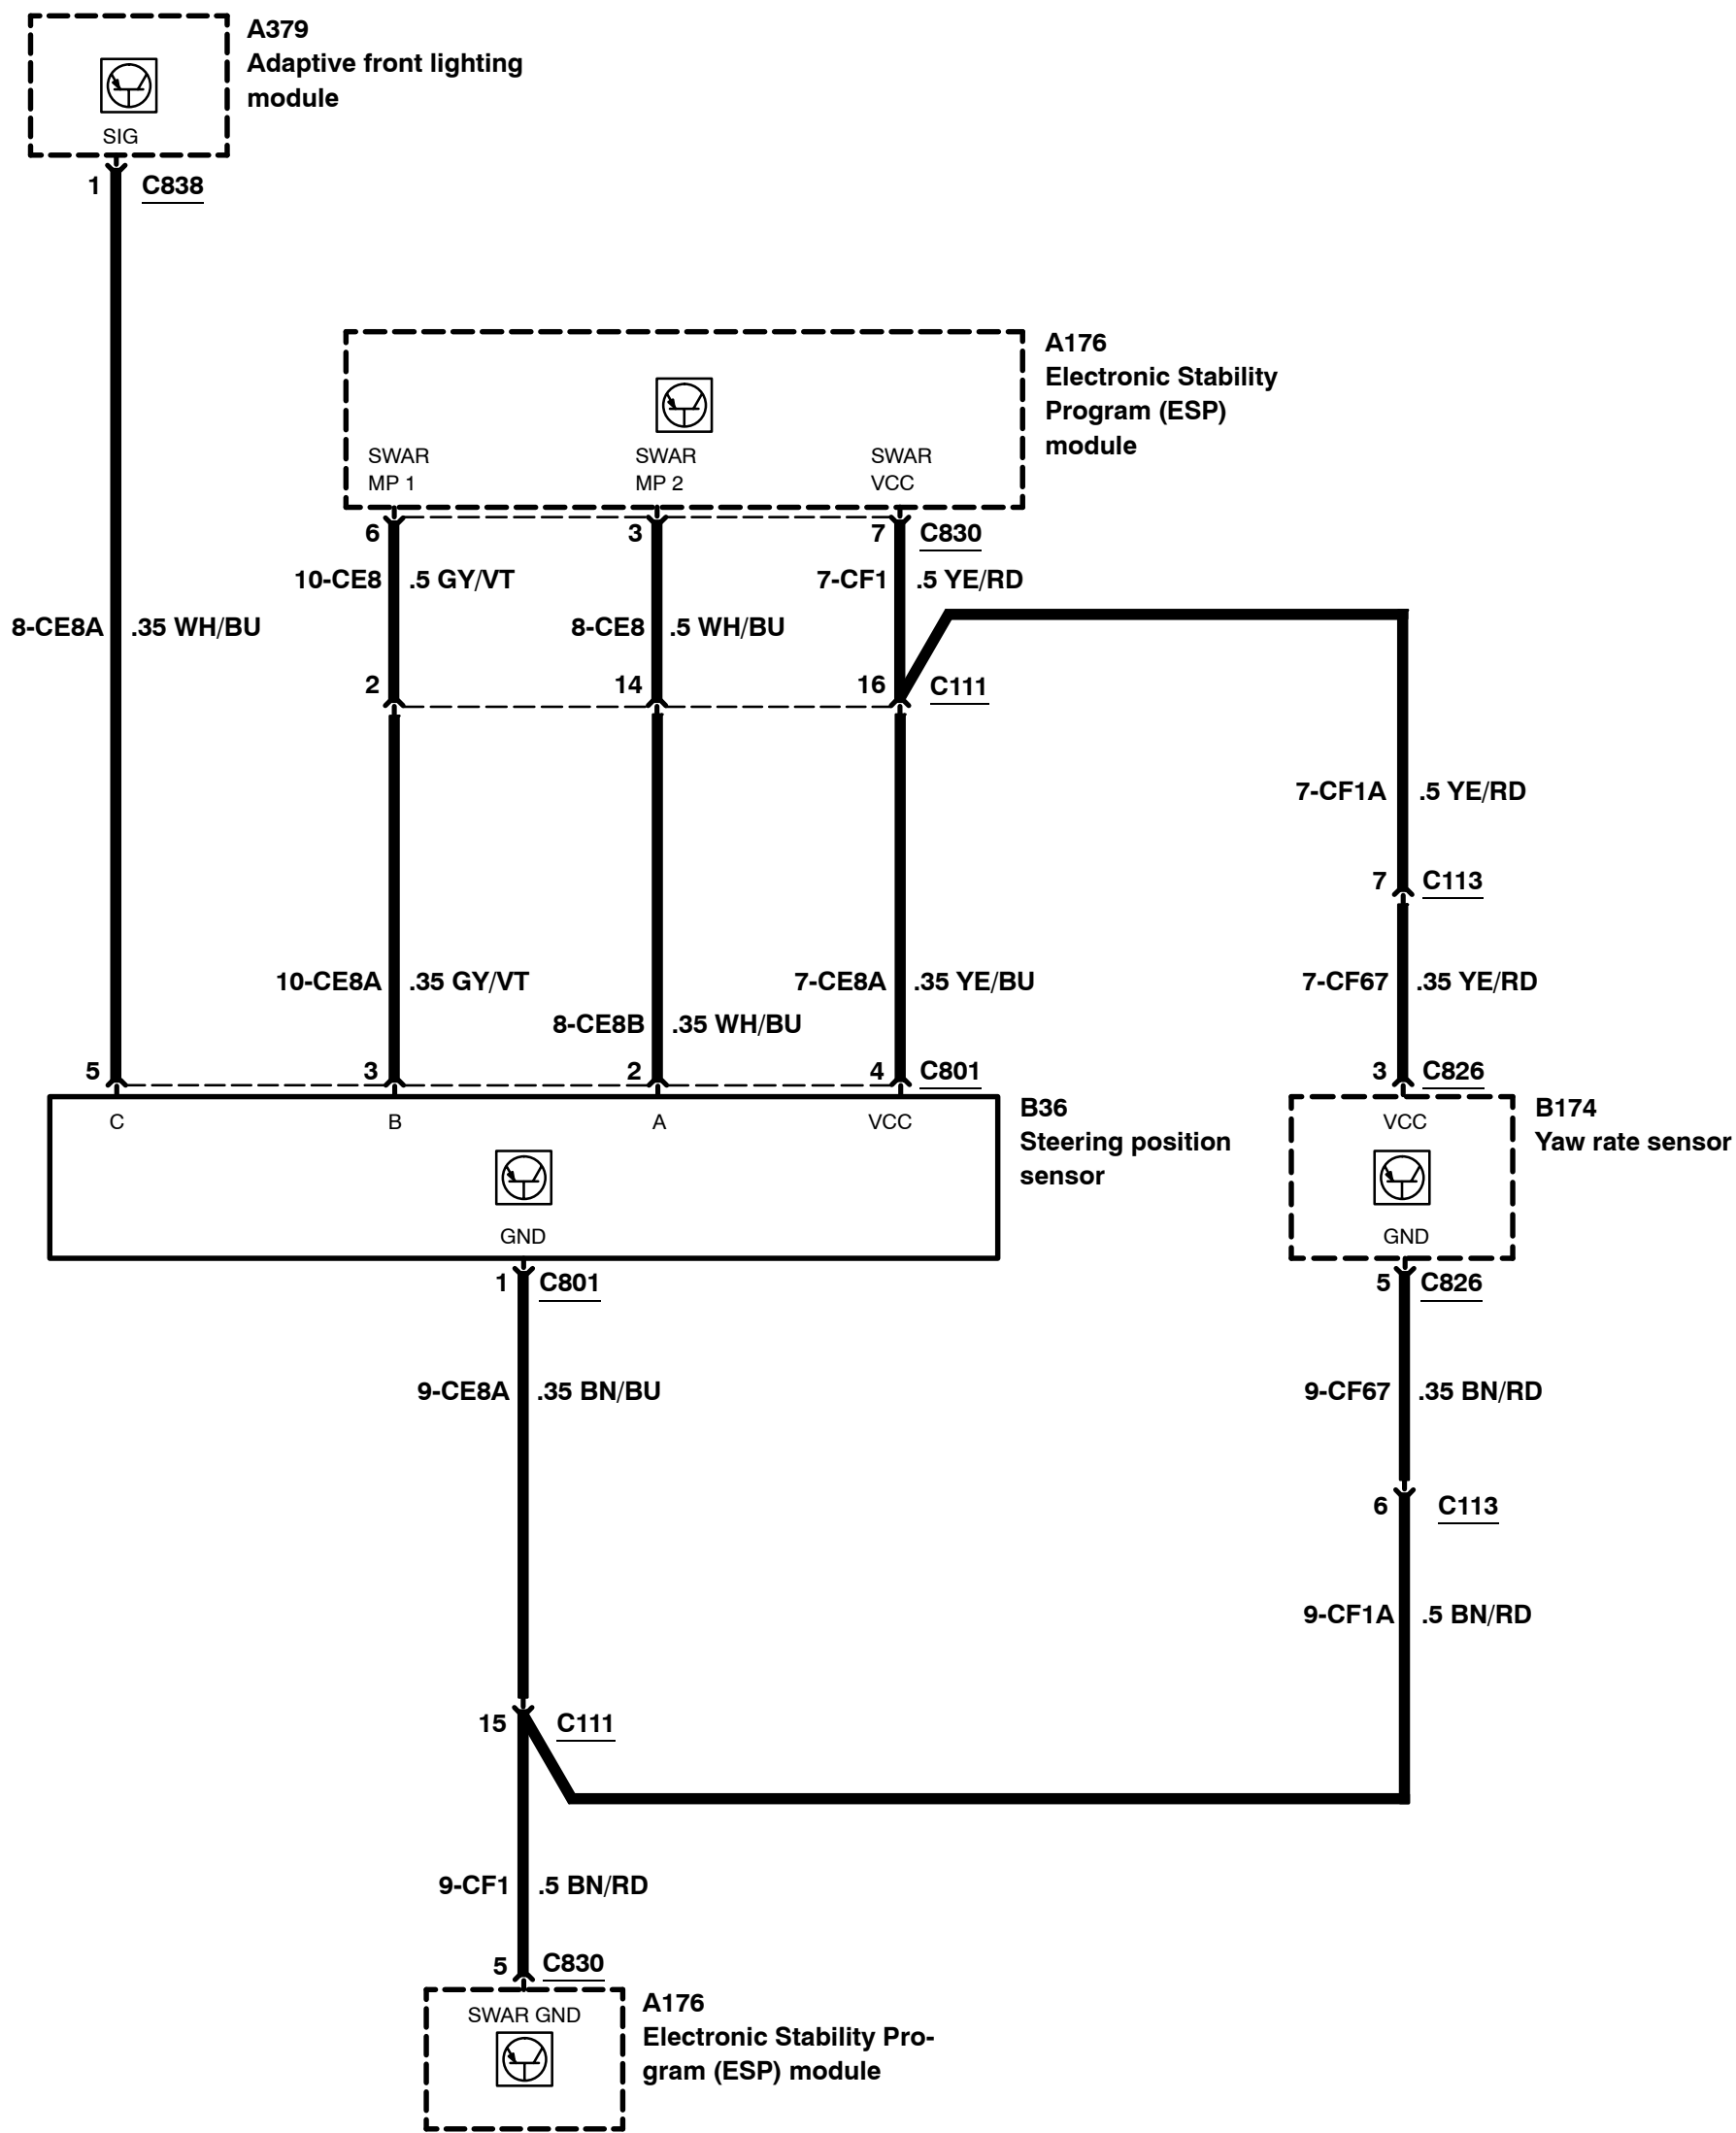



# Exterior Lighting – Headlamp leveling, with adaptive front lighting, without Electronic Stability Program (ESP)

02/2008  
417-01-00-8  
2008.25  
Focus

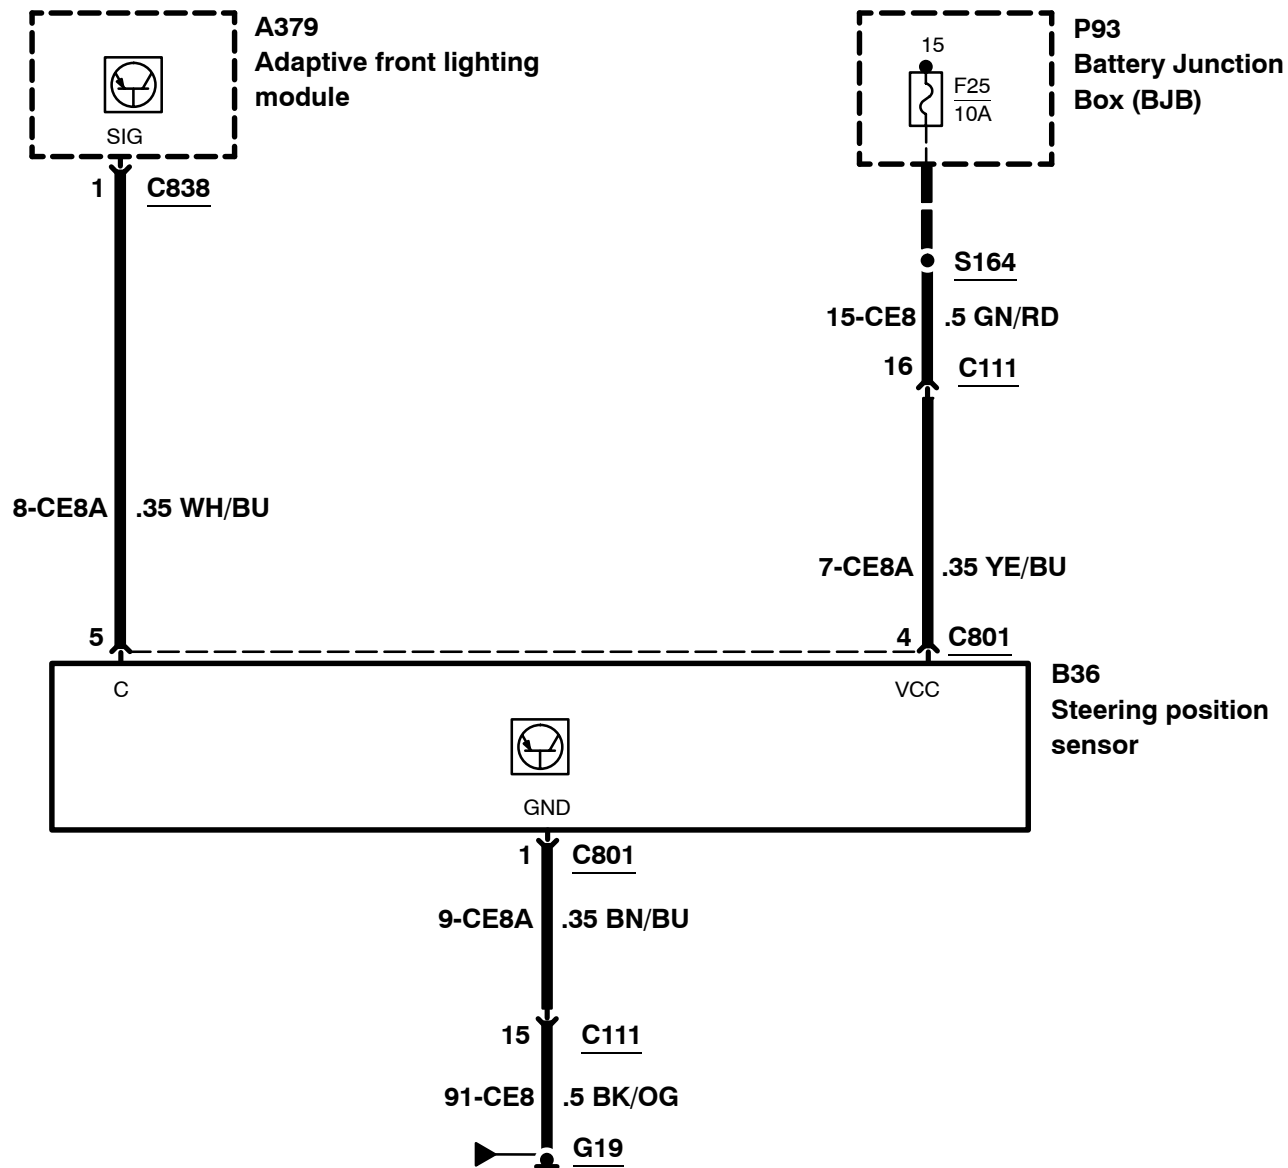


02/2008  
417-01-00-9  
2008.25  
Focus

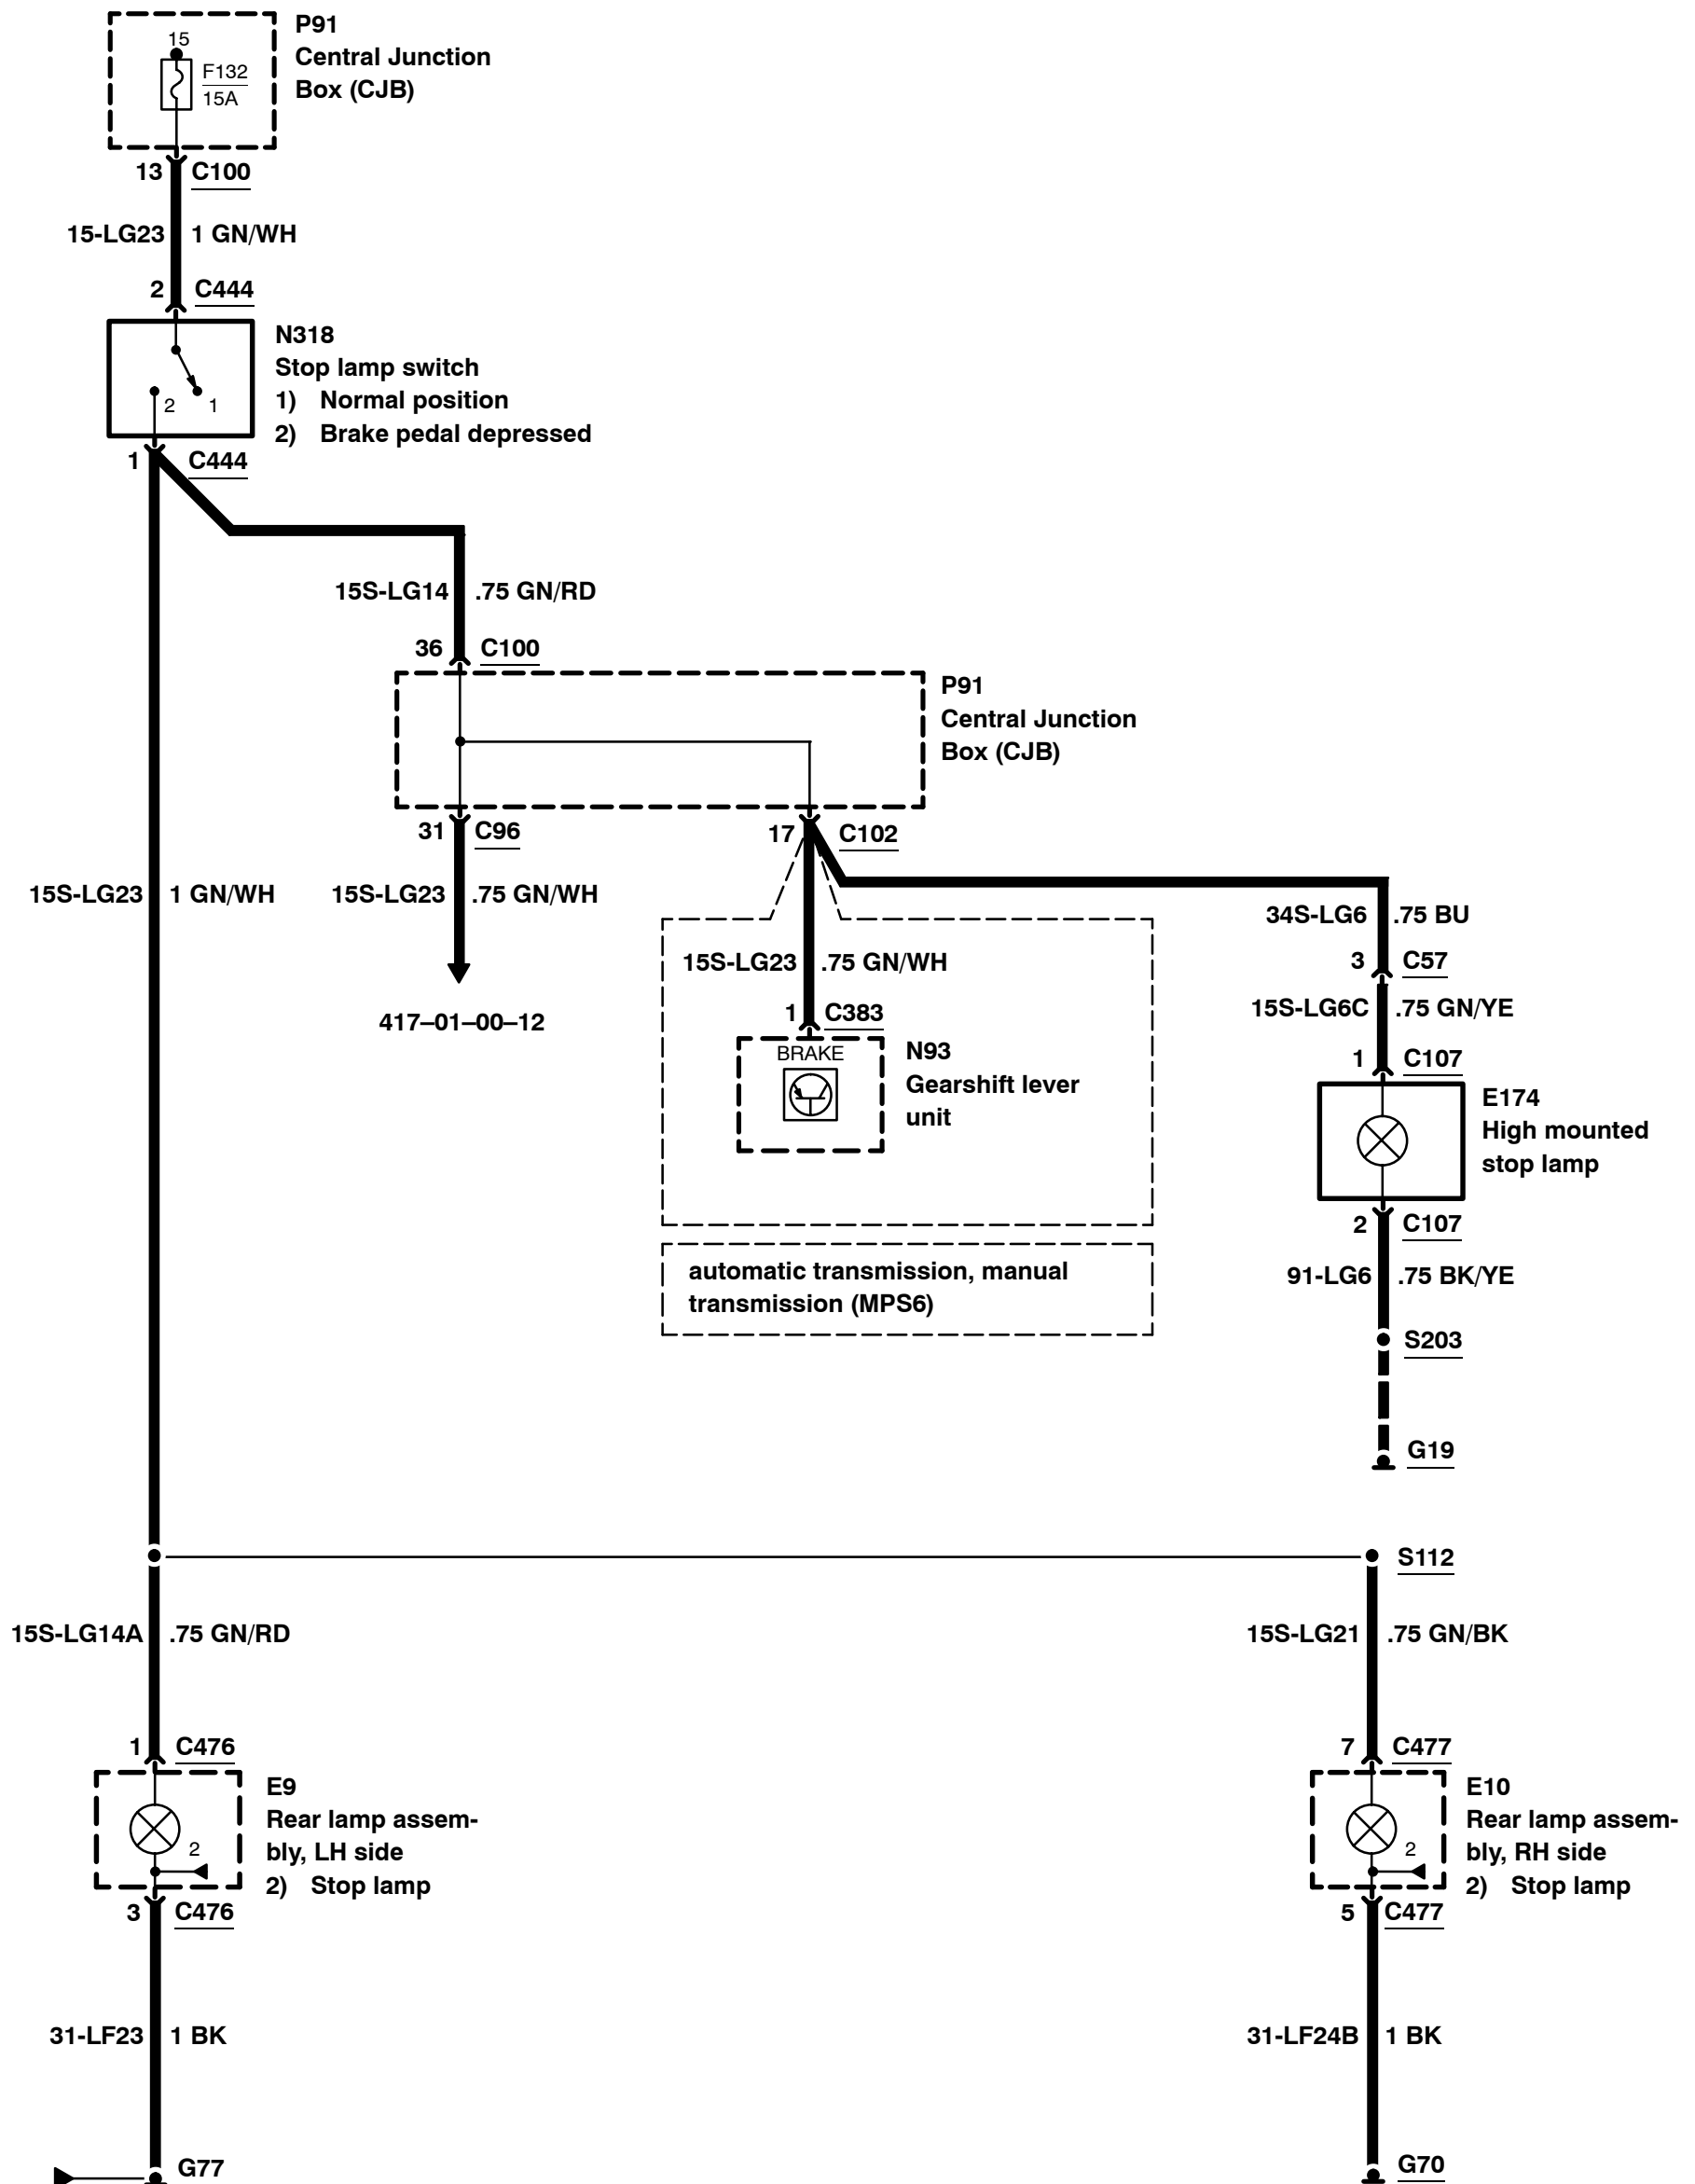


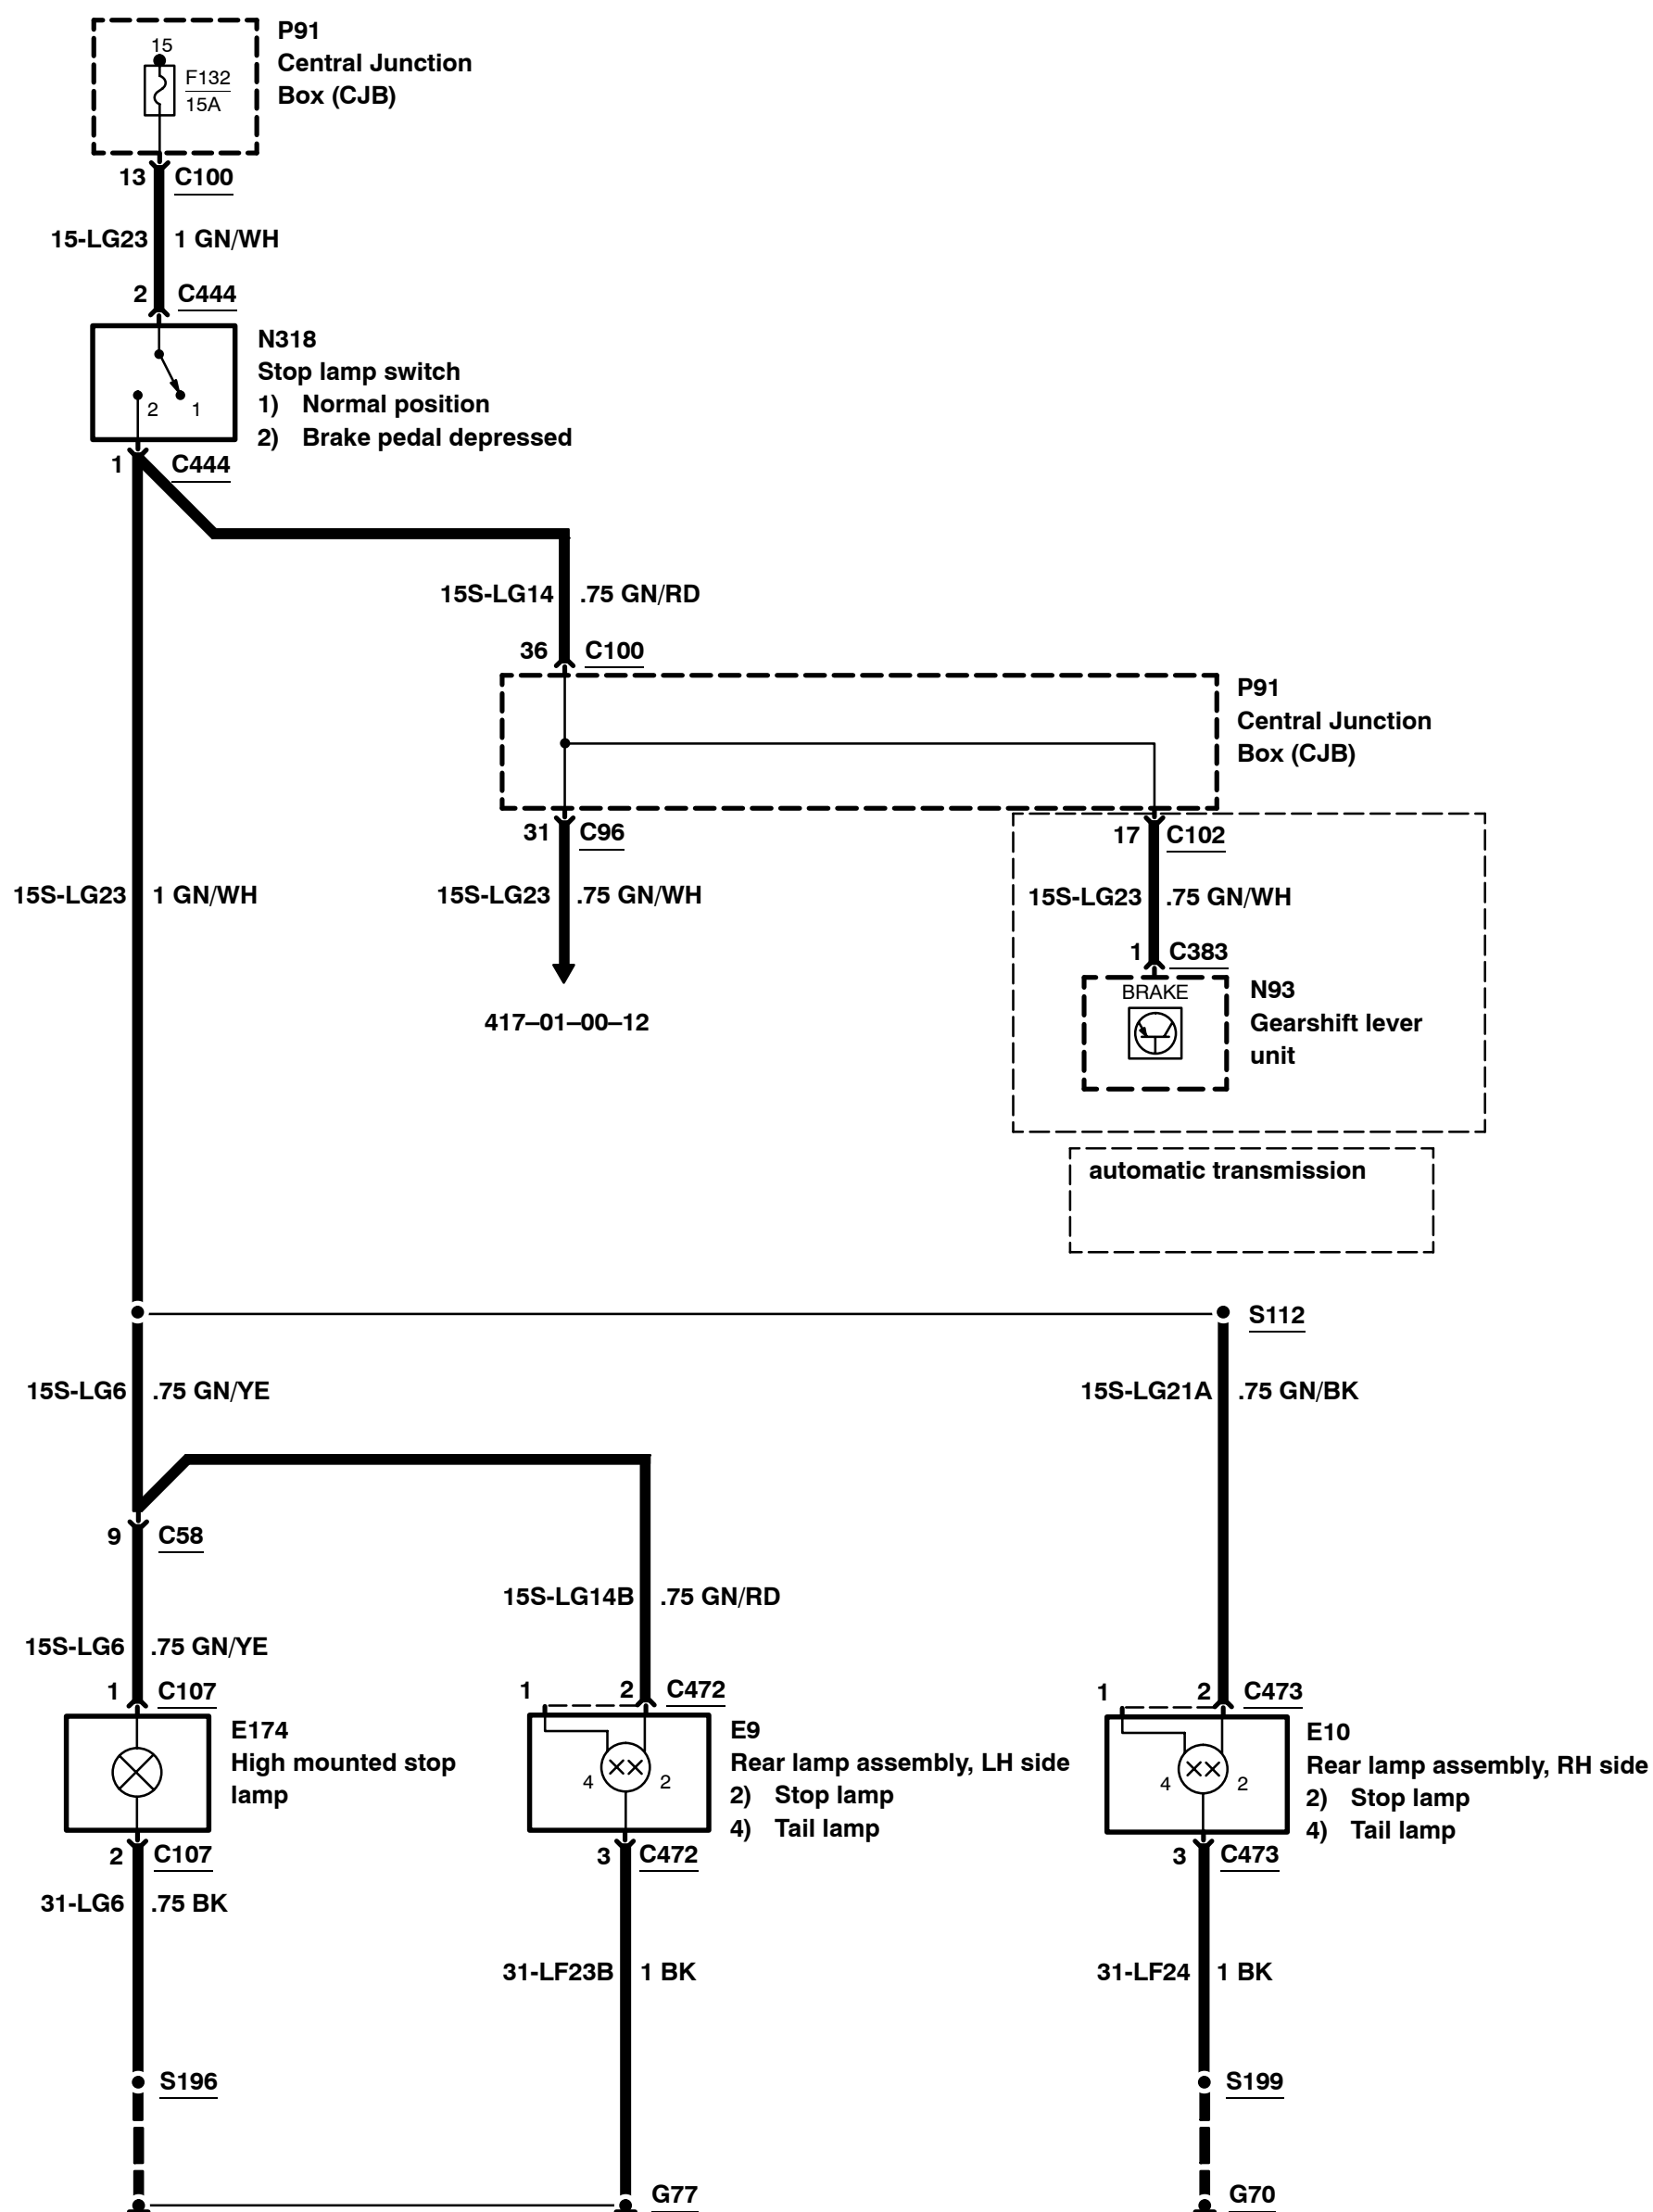

# Exterior Lighting – Stop Lamps – 5-door model, as of model year 2009


02/2008  
417-01-00-11  
2008.25  
Focus

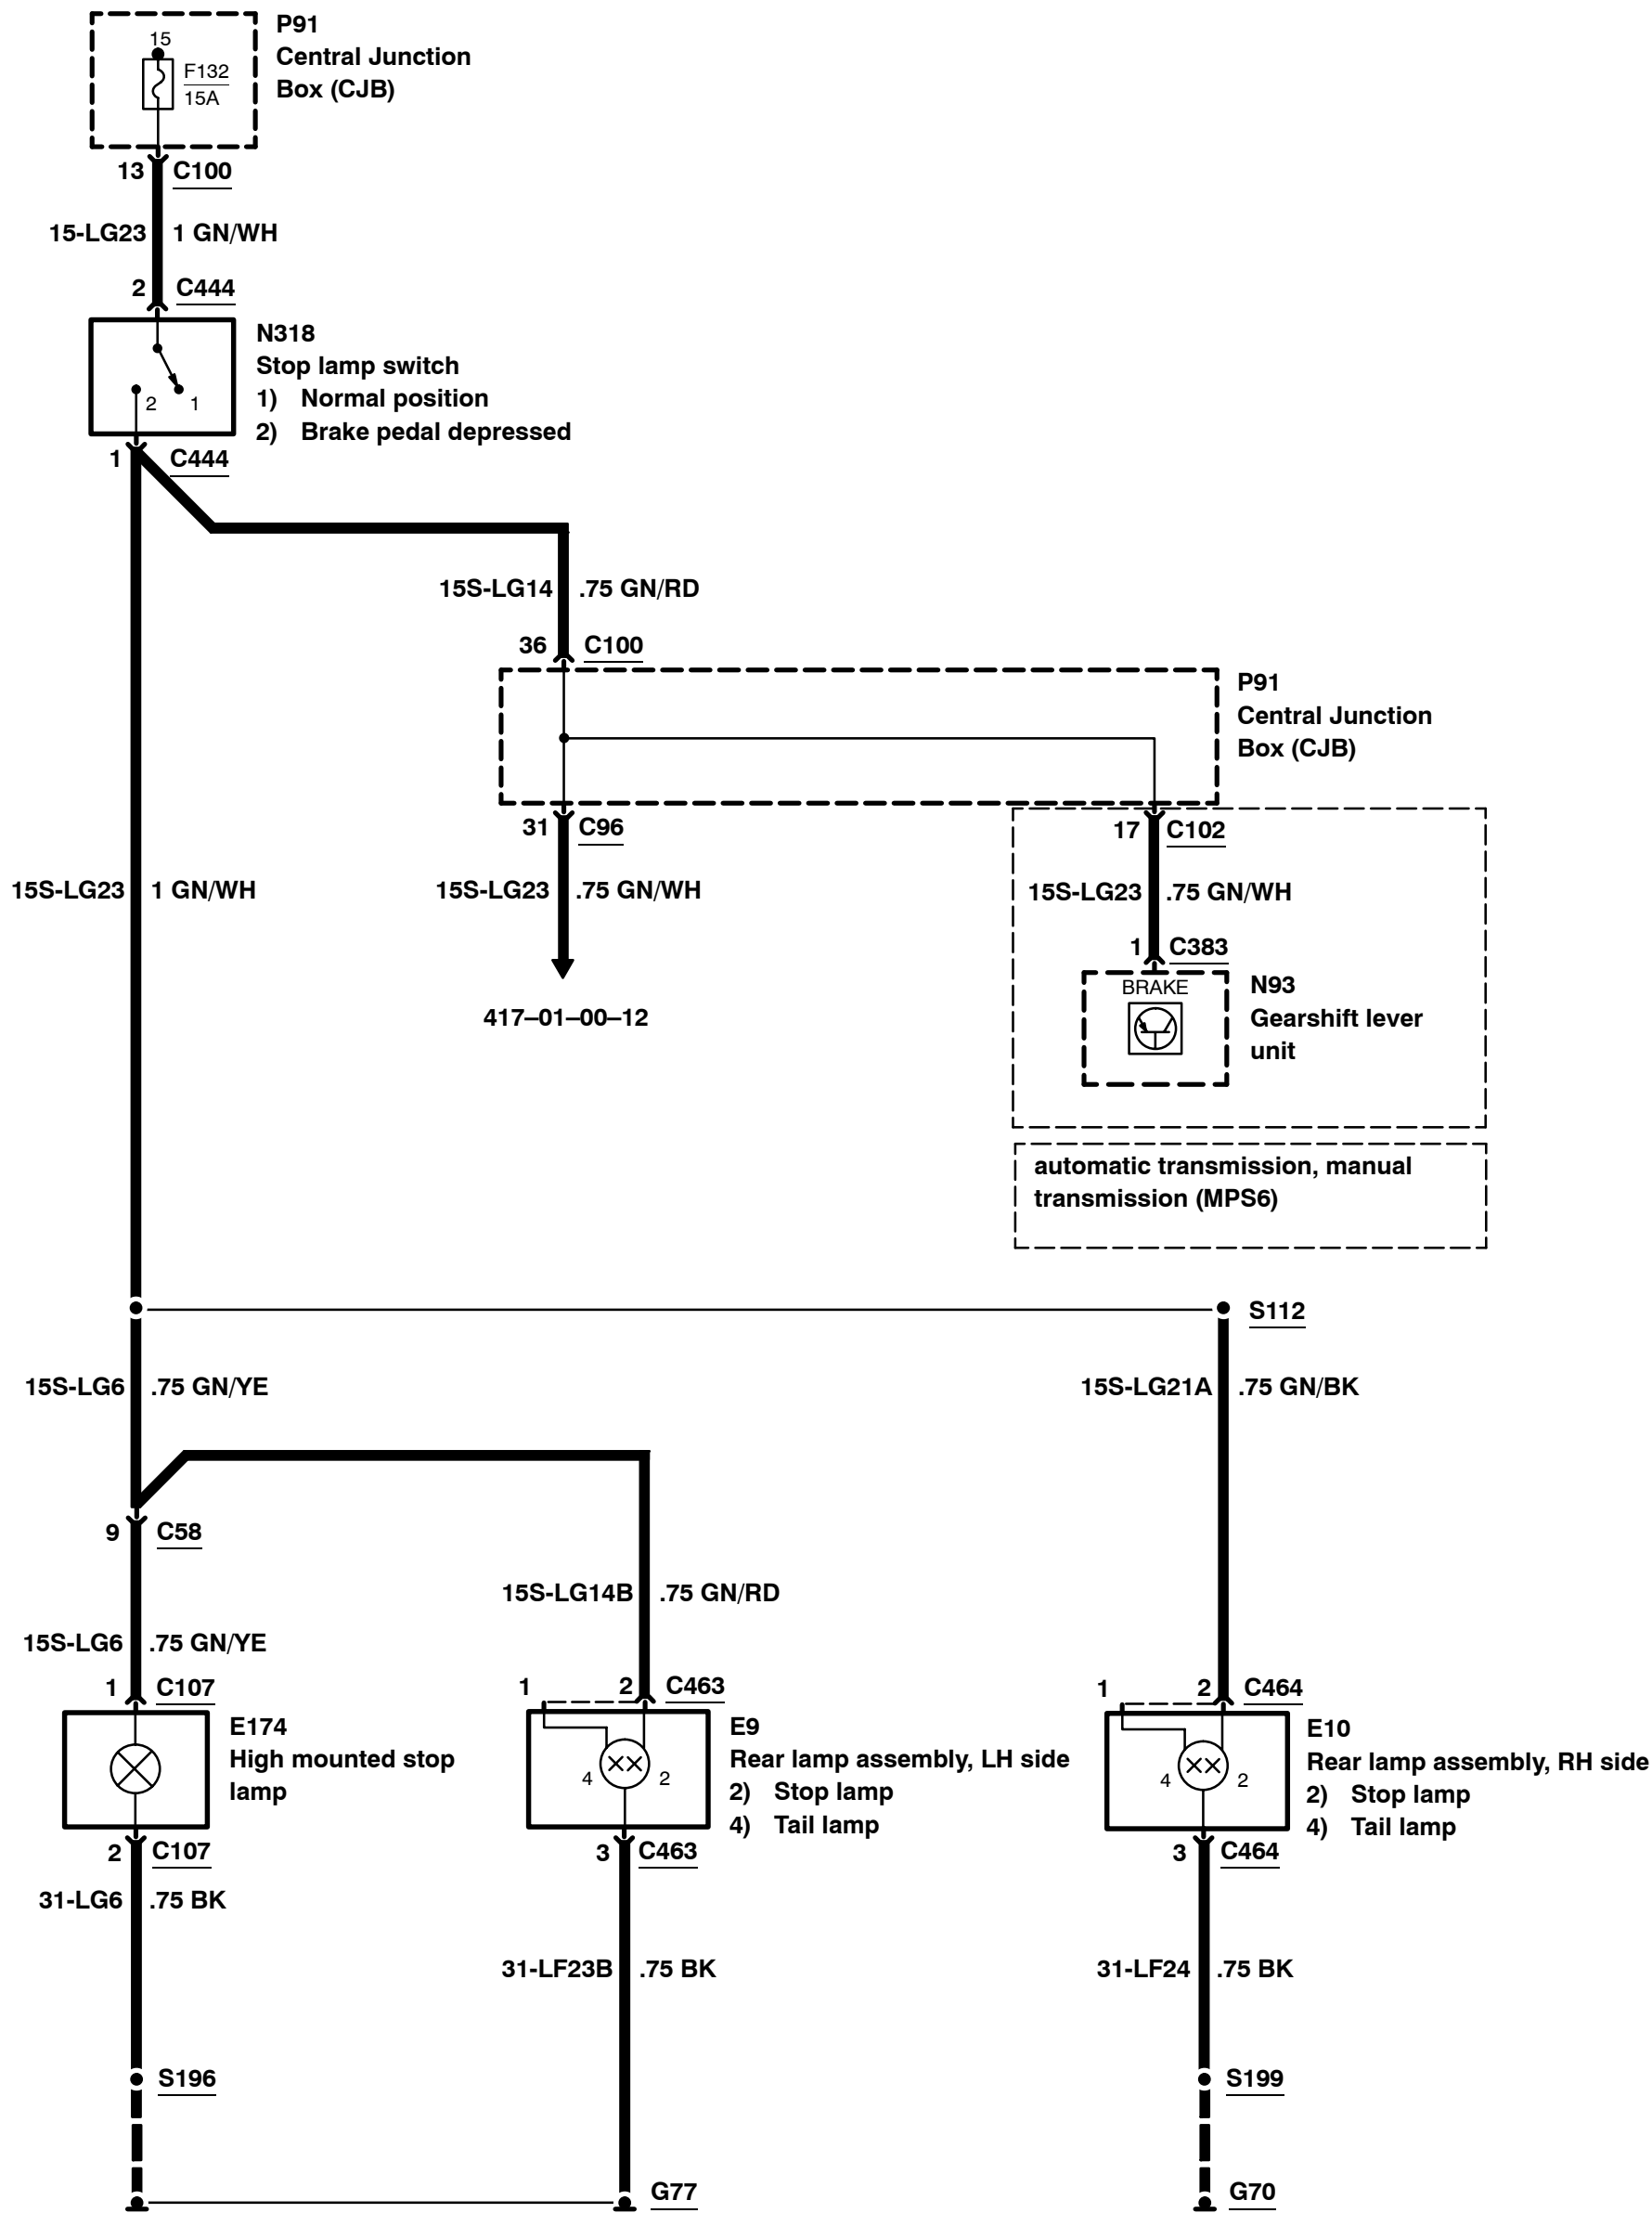

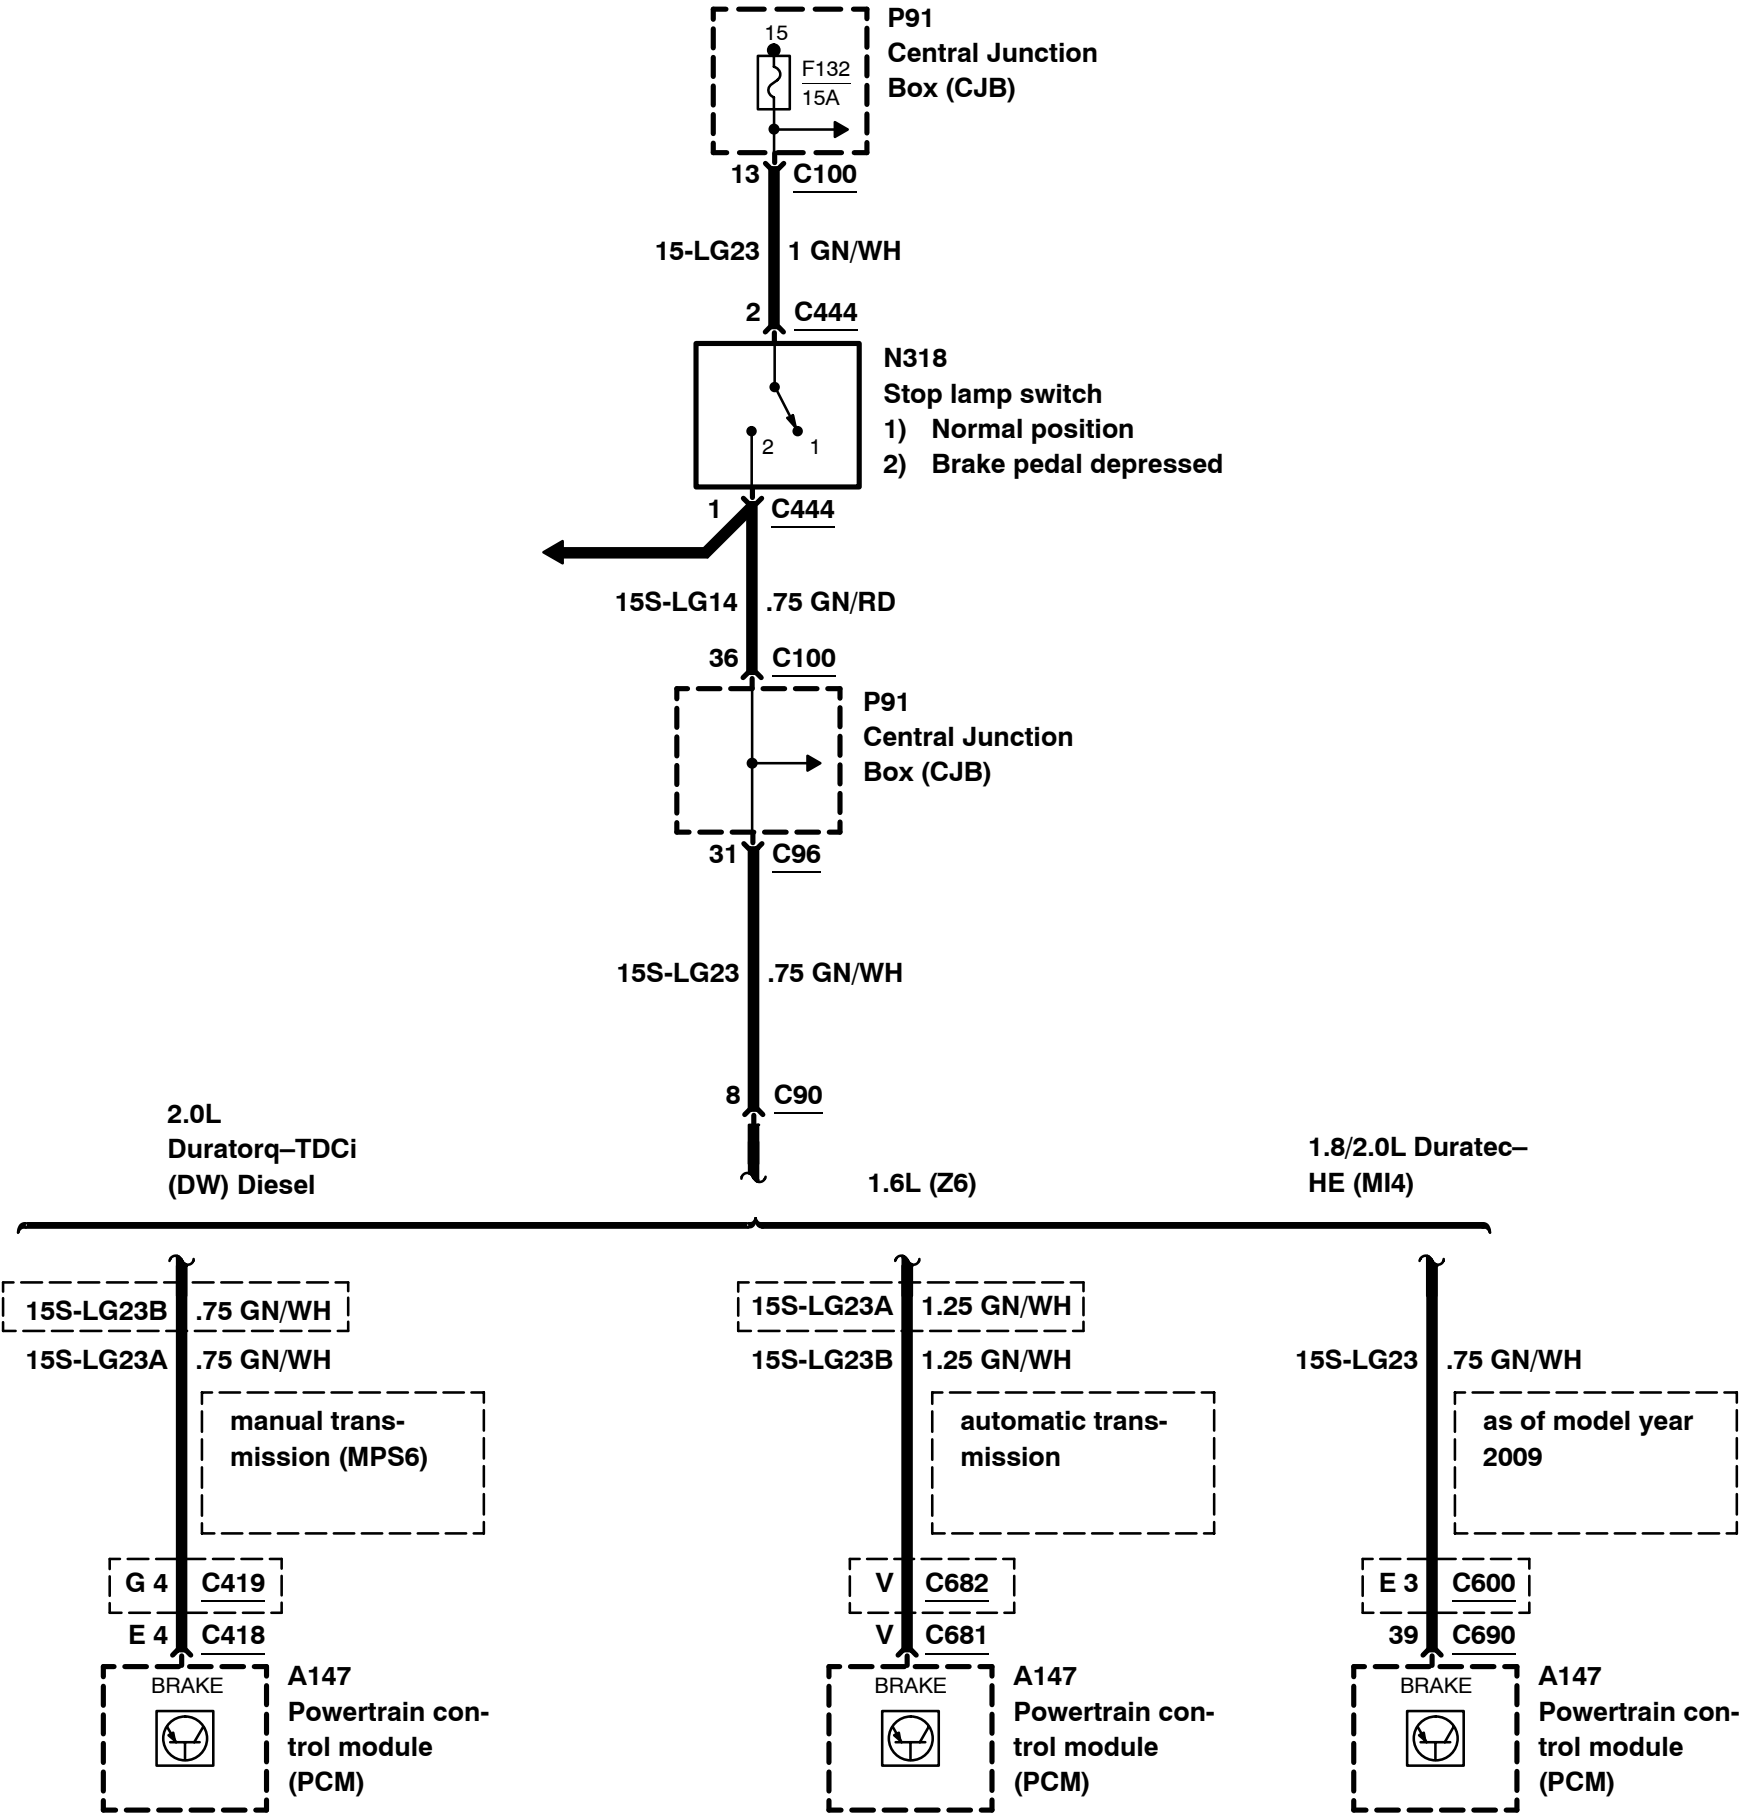




02/2008  
417-01-00-13  
2008.25  
Focus

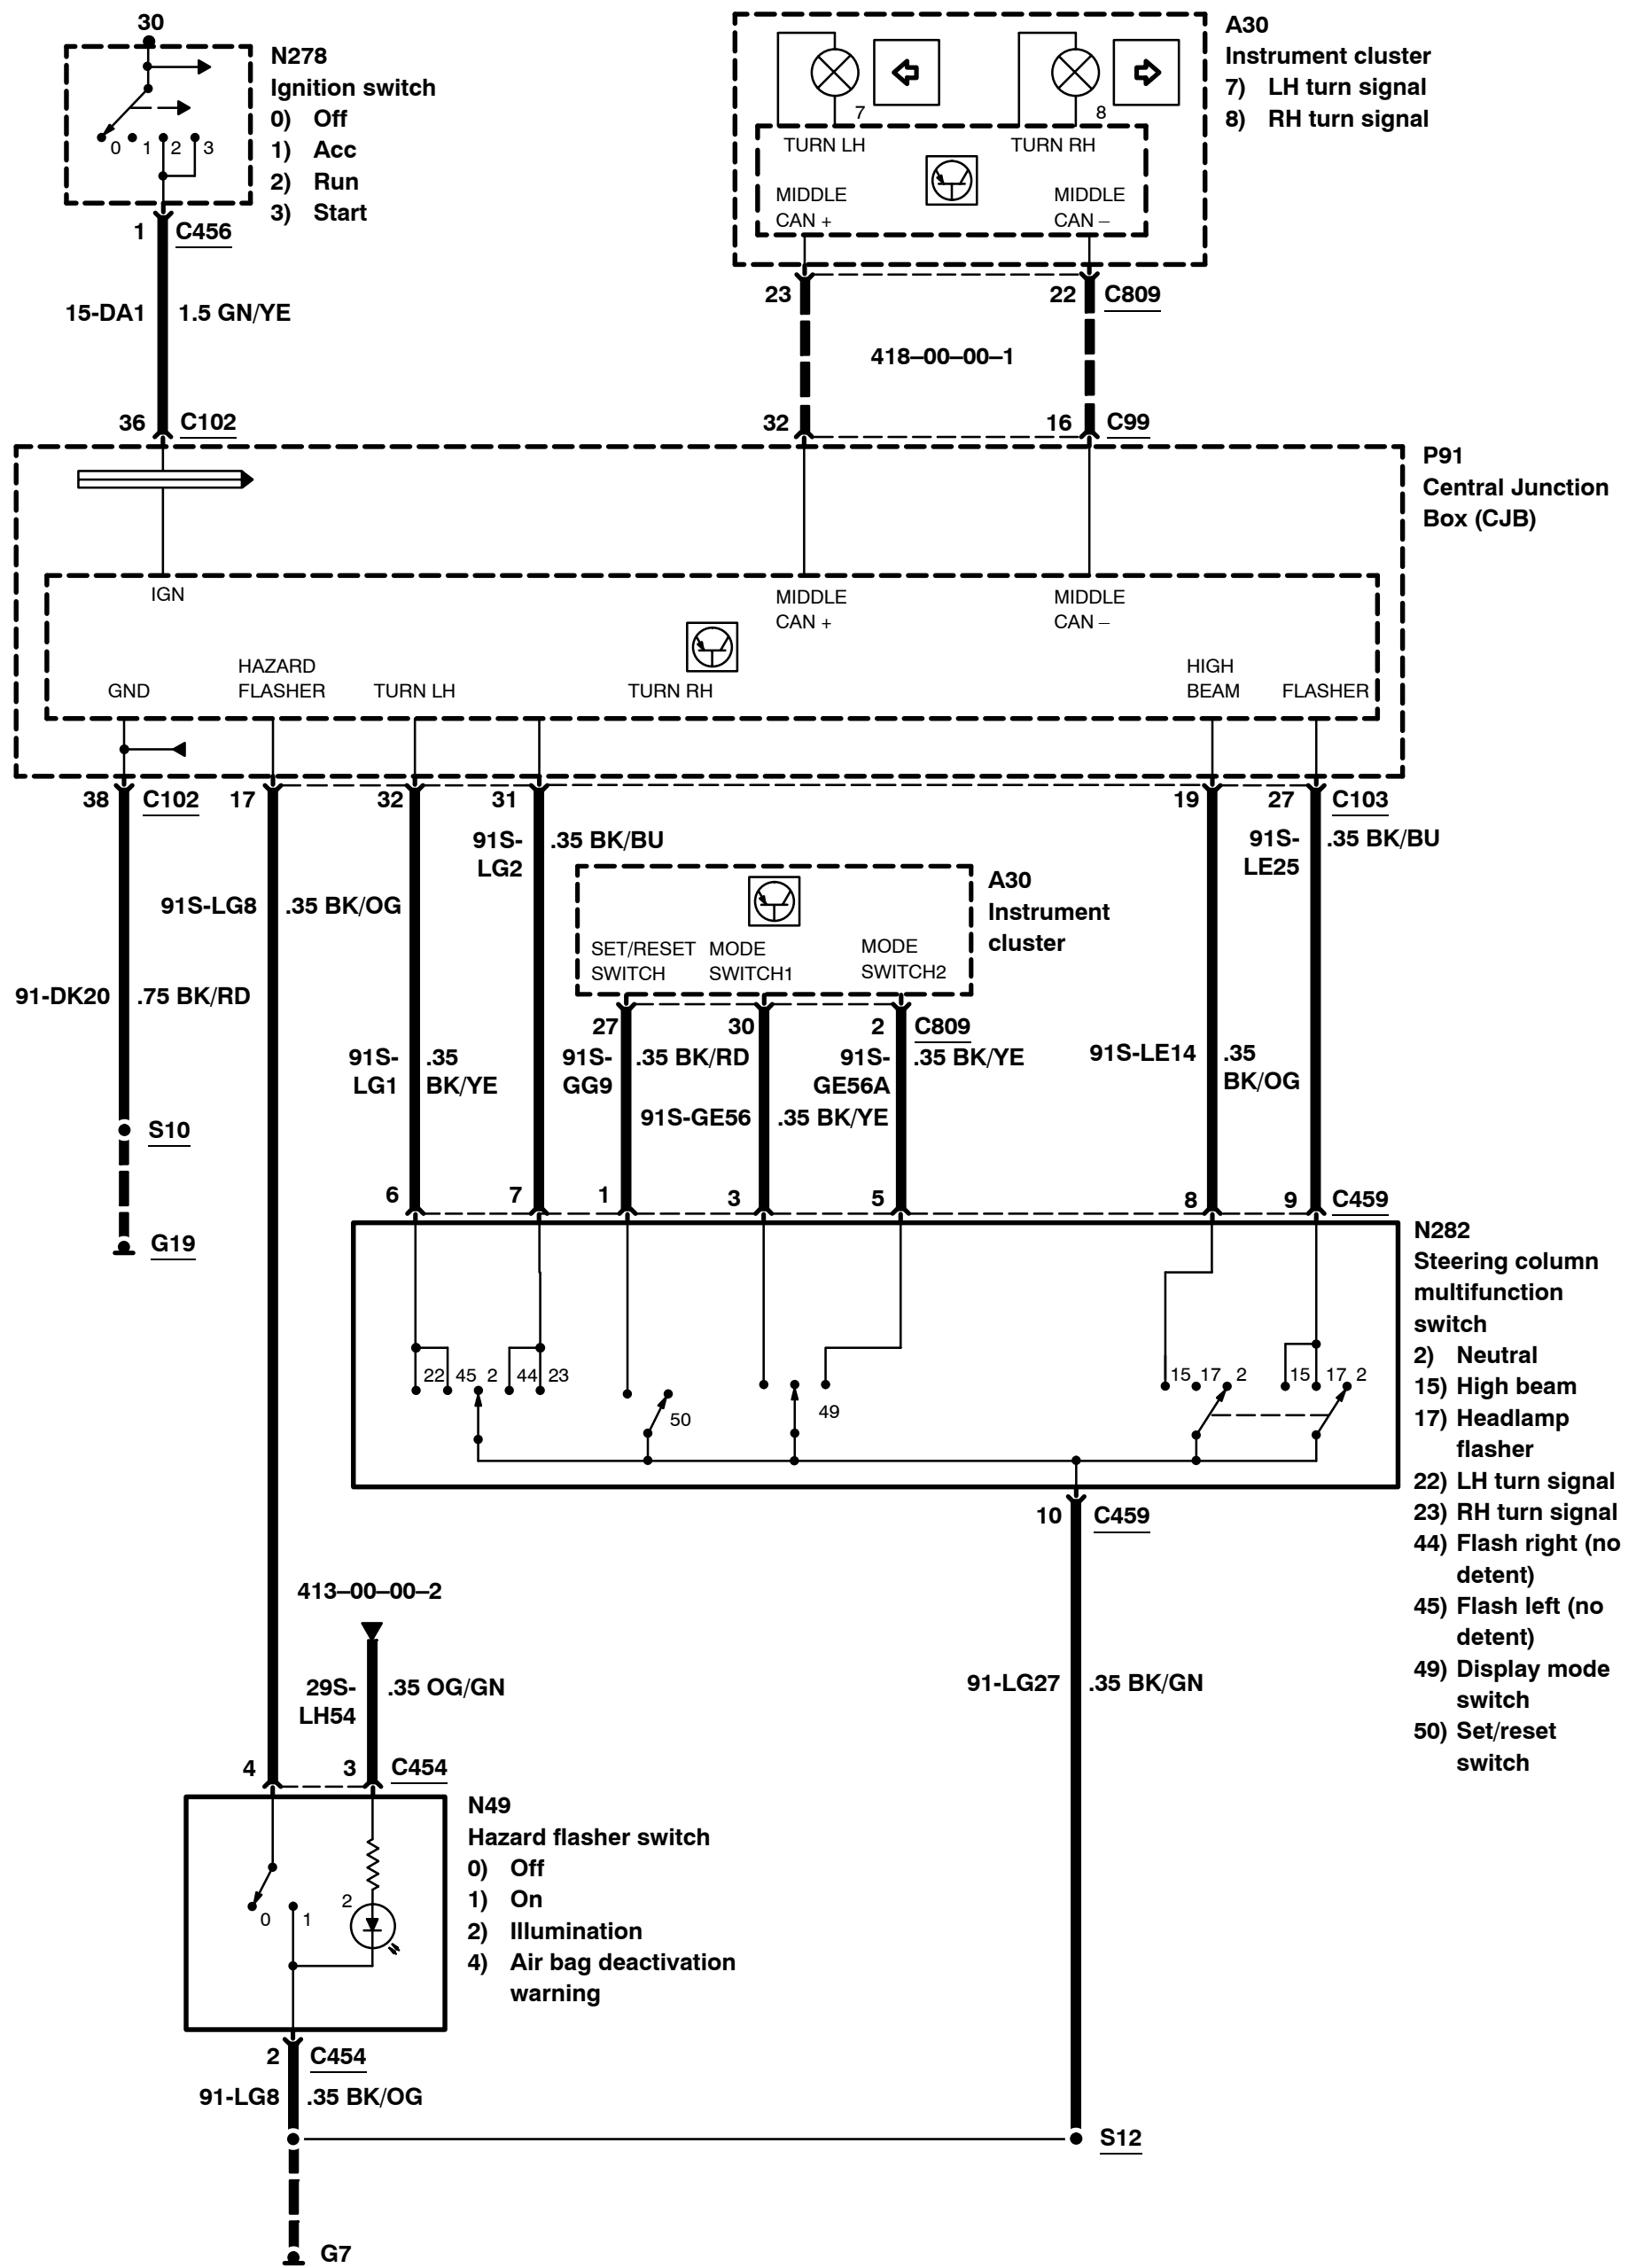

# Exterior Lighting – Turn Signal Lamps, front


02/2008  
417-01-00-14  
2008.25  
Focus

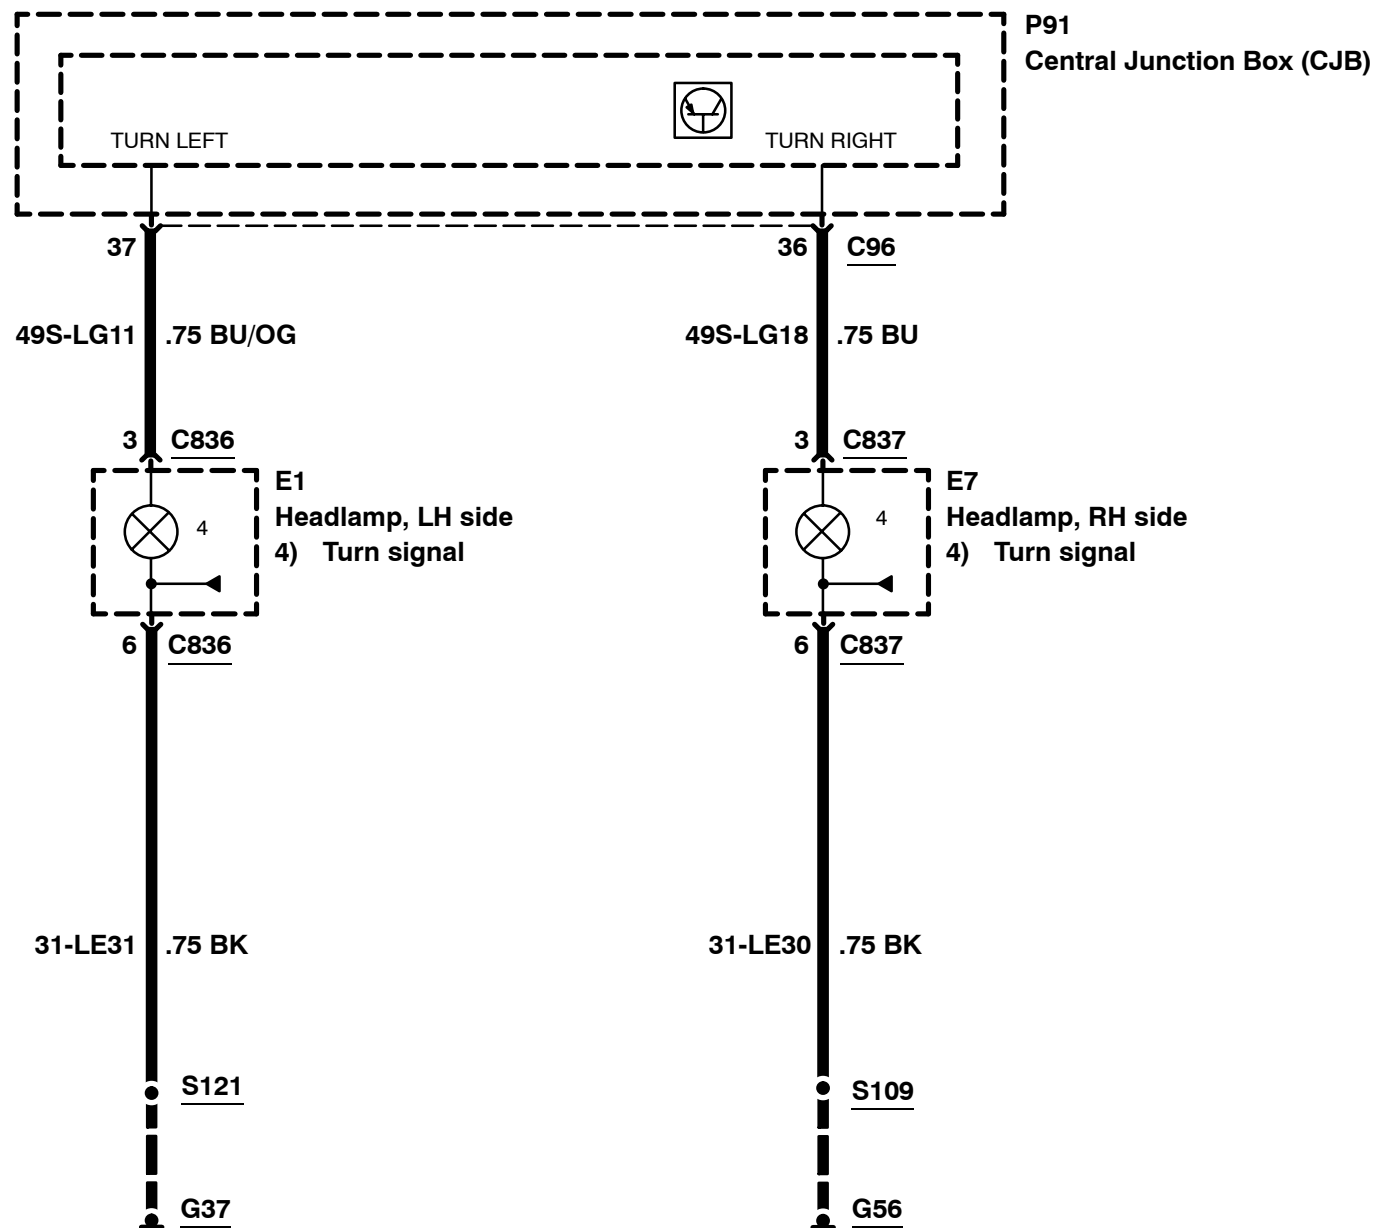




# Exterior Lighting – Turn Signal Lamps, rear, 5-door model, before model year 2009

02/2008  
417-01-00-15  
2008.25  
Focus

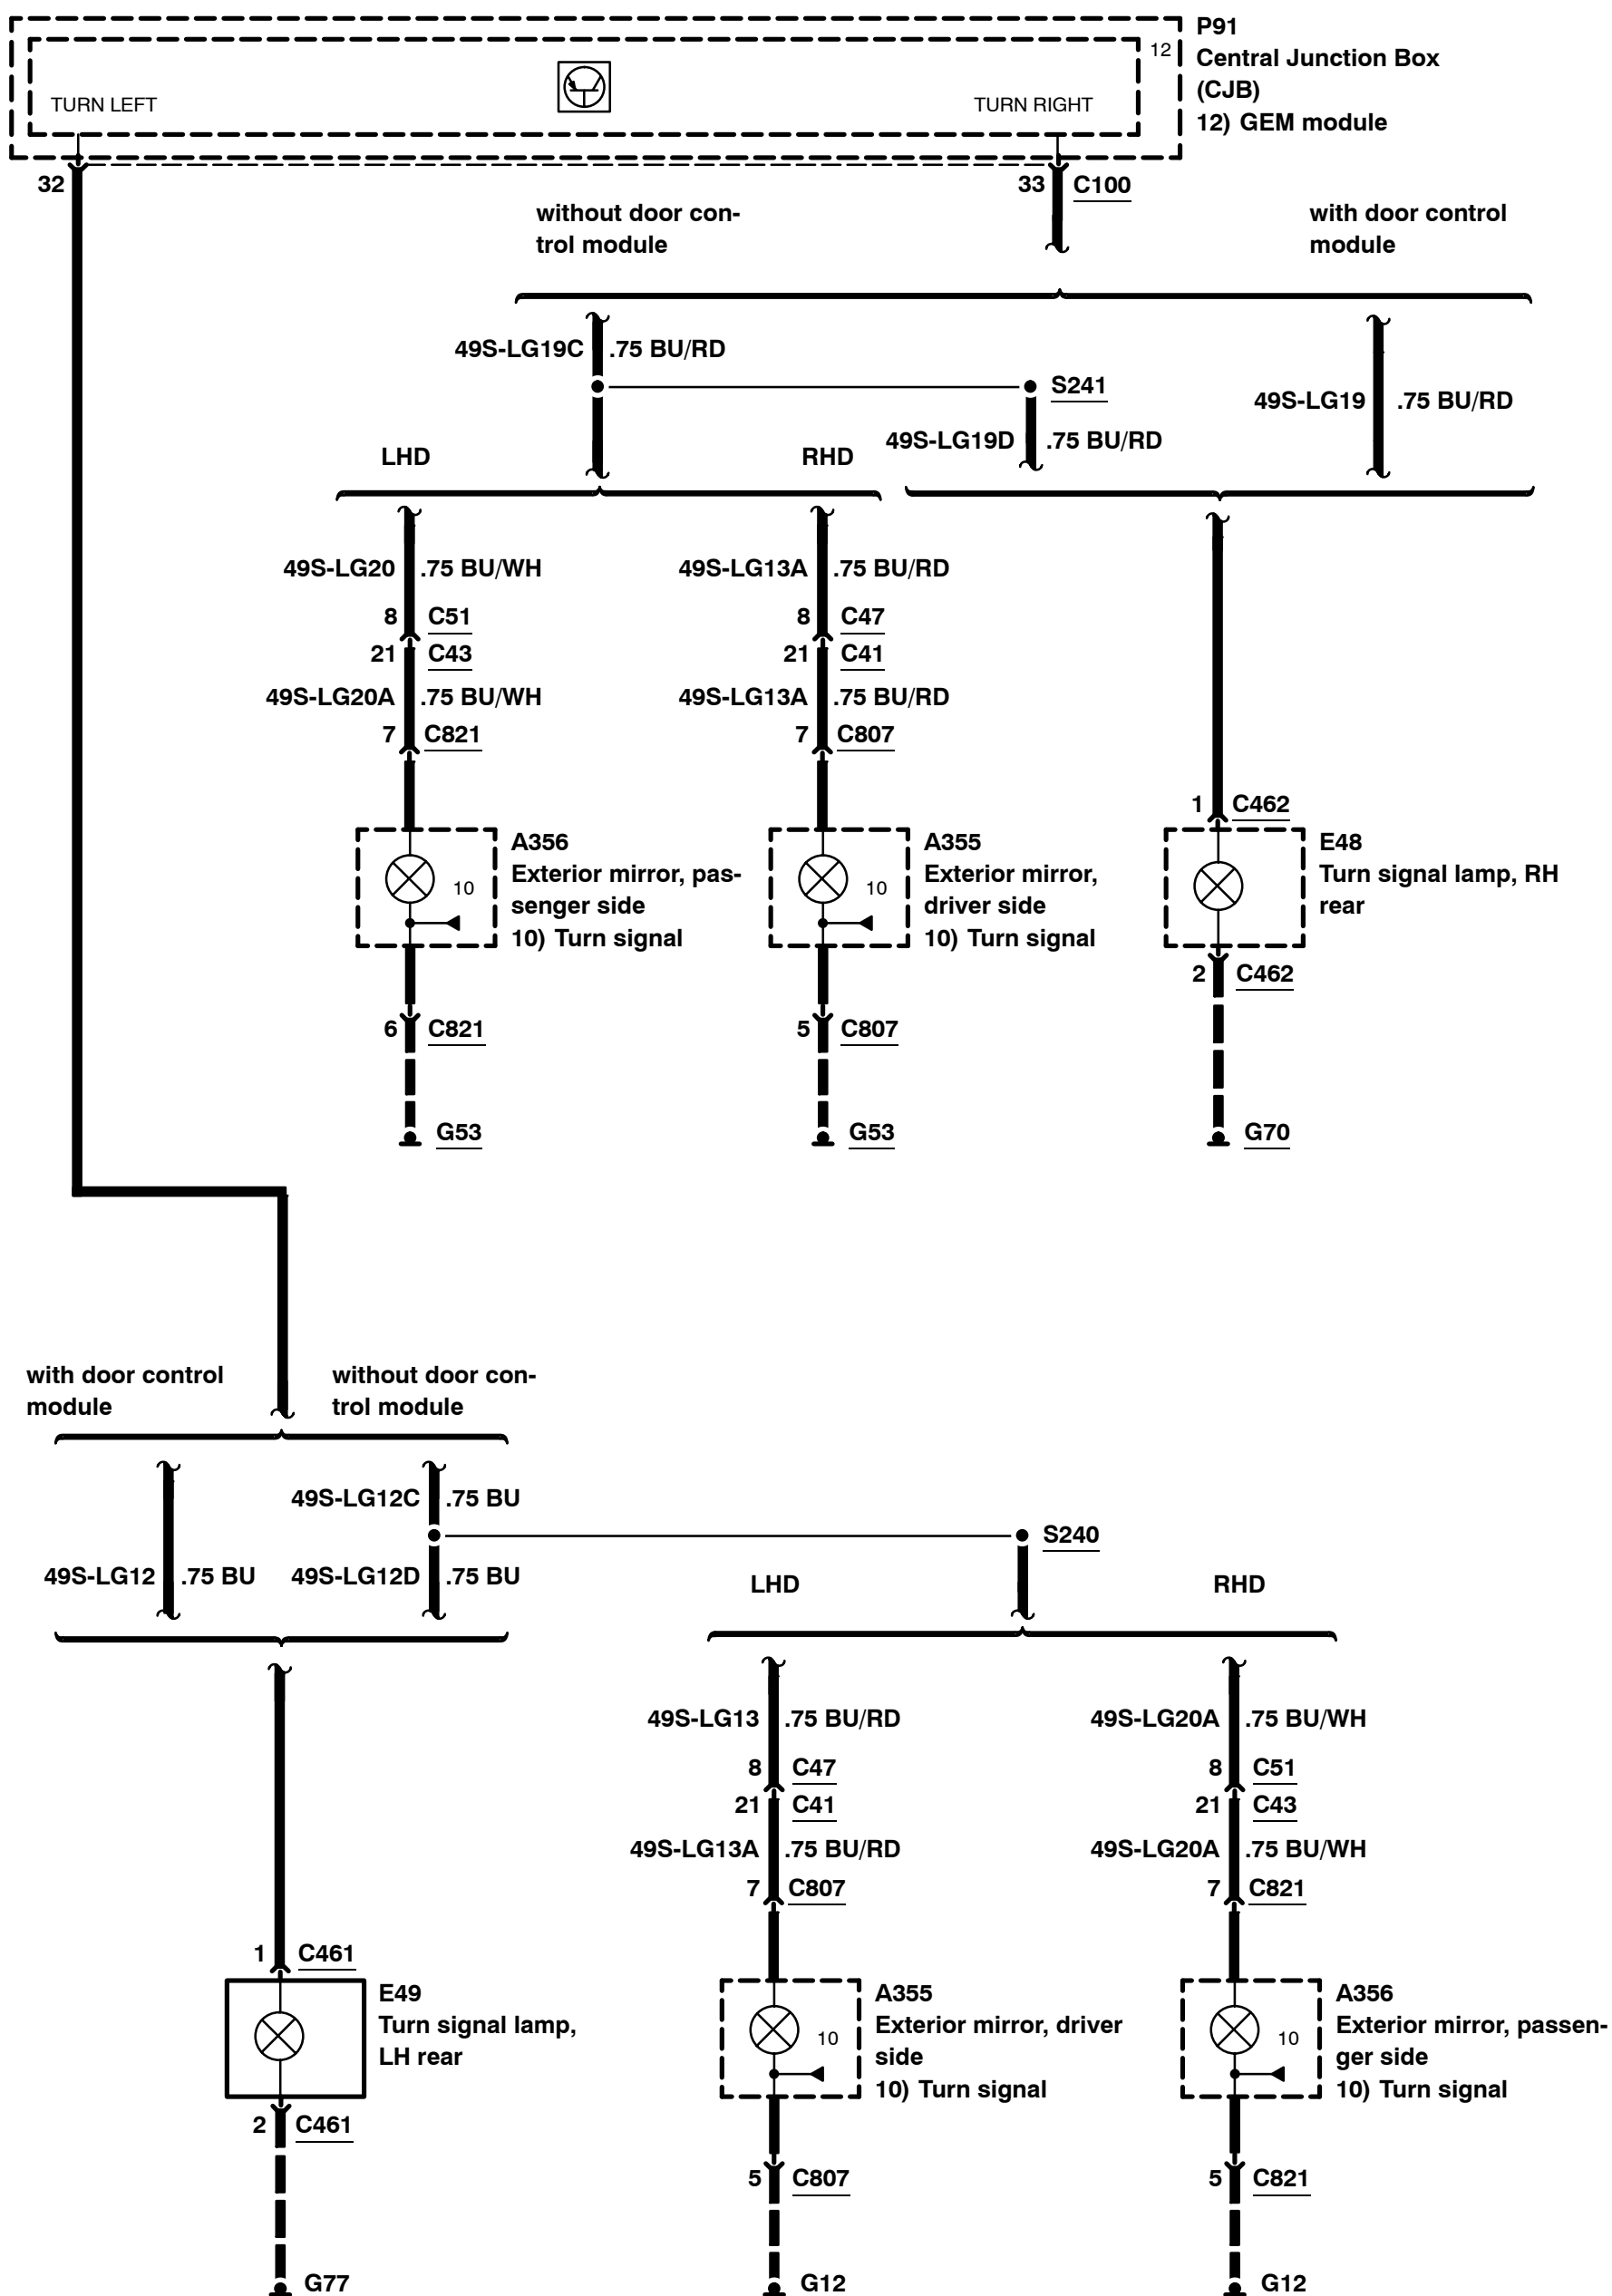


# Exterior Lighting – Turn Signal Lamps, rear, 5-door model, as of model year 2009

02/2008  
417-01-00-16  
2008.25  
Focus

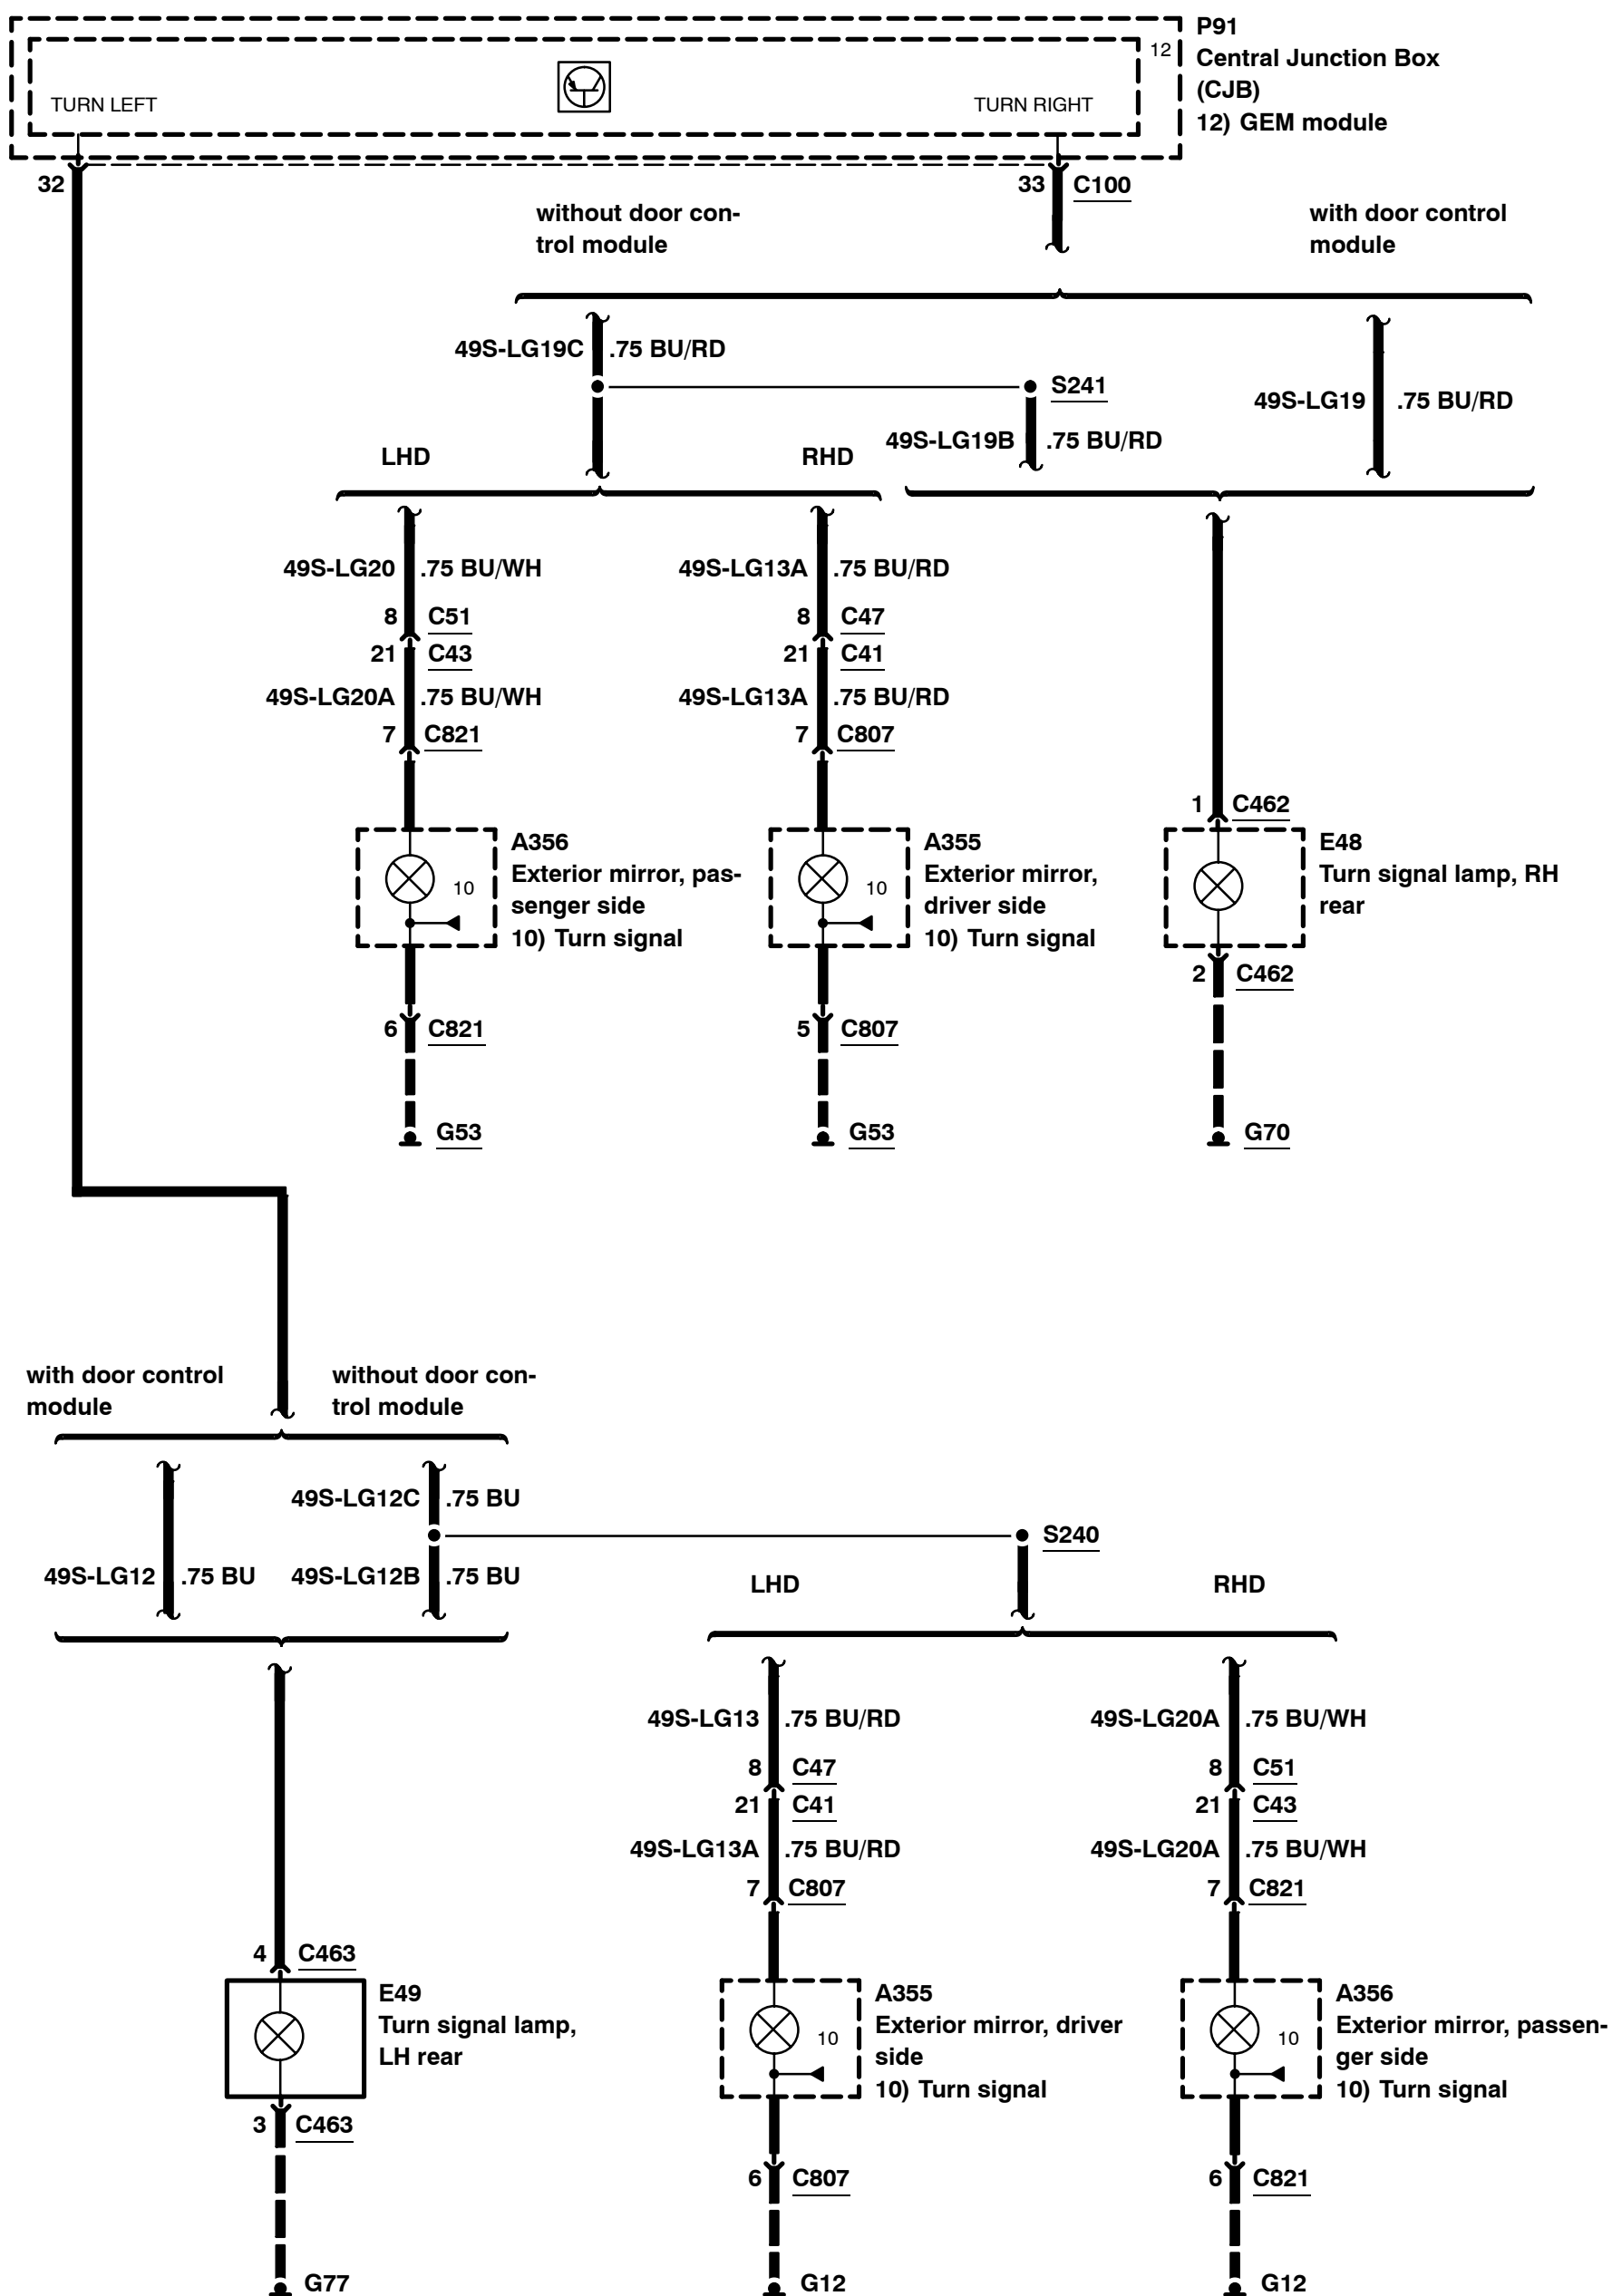


# Exterior Lighting – Turn Signal Lamps, rear, 4-door model, before model year 2009

02/2008  
417-01-00-17  
2008.25  
Focus

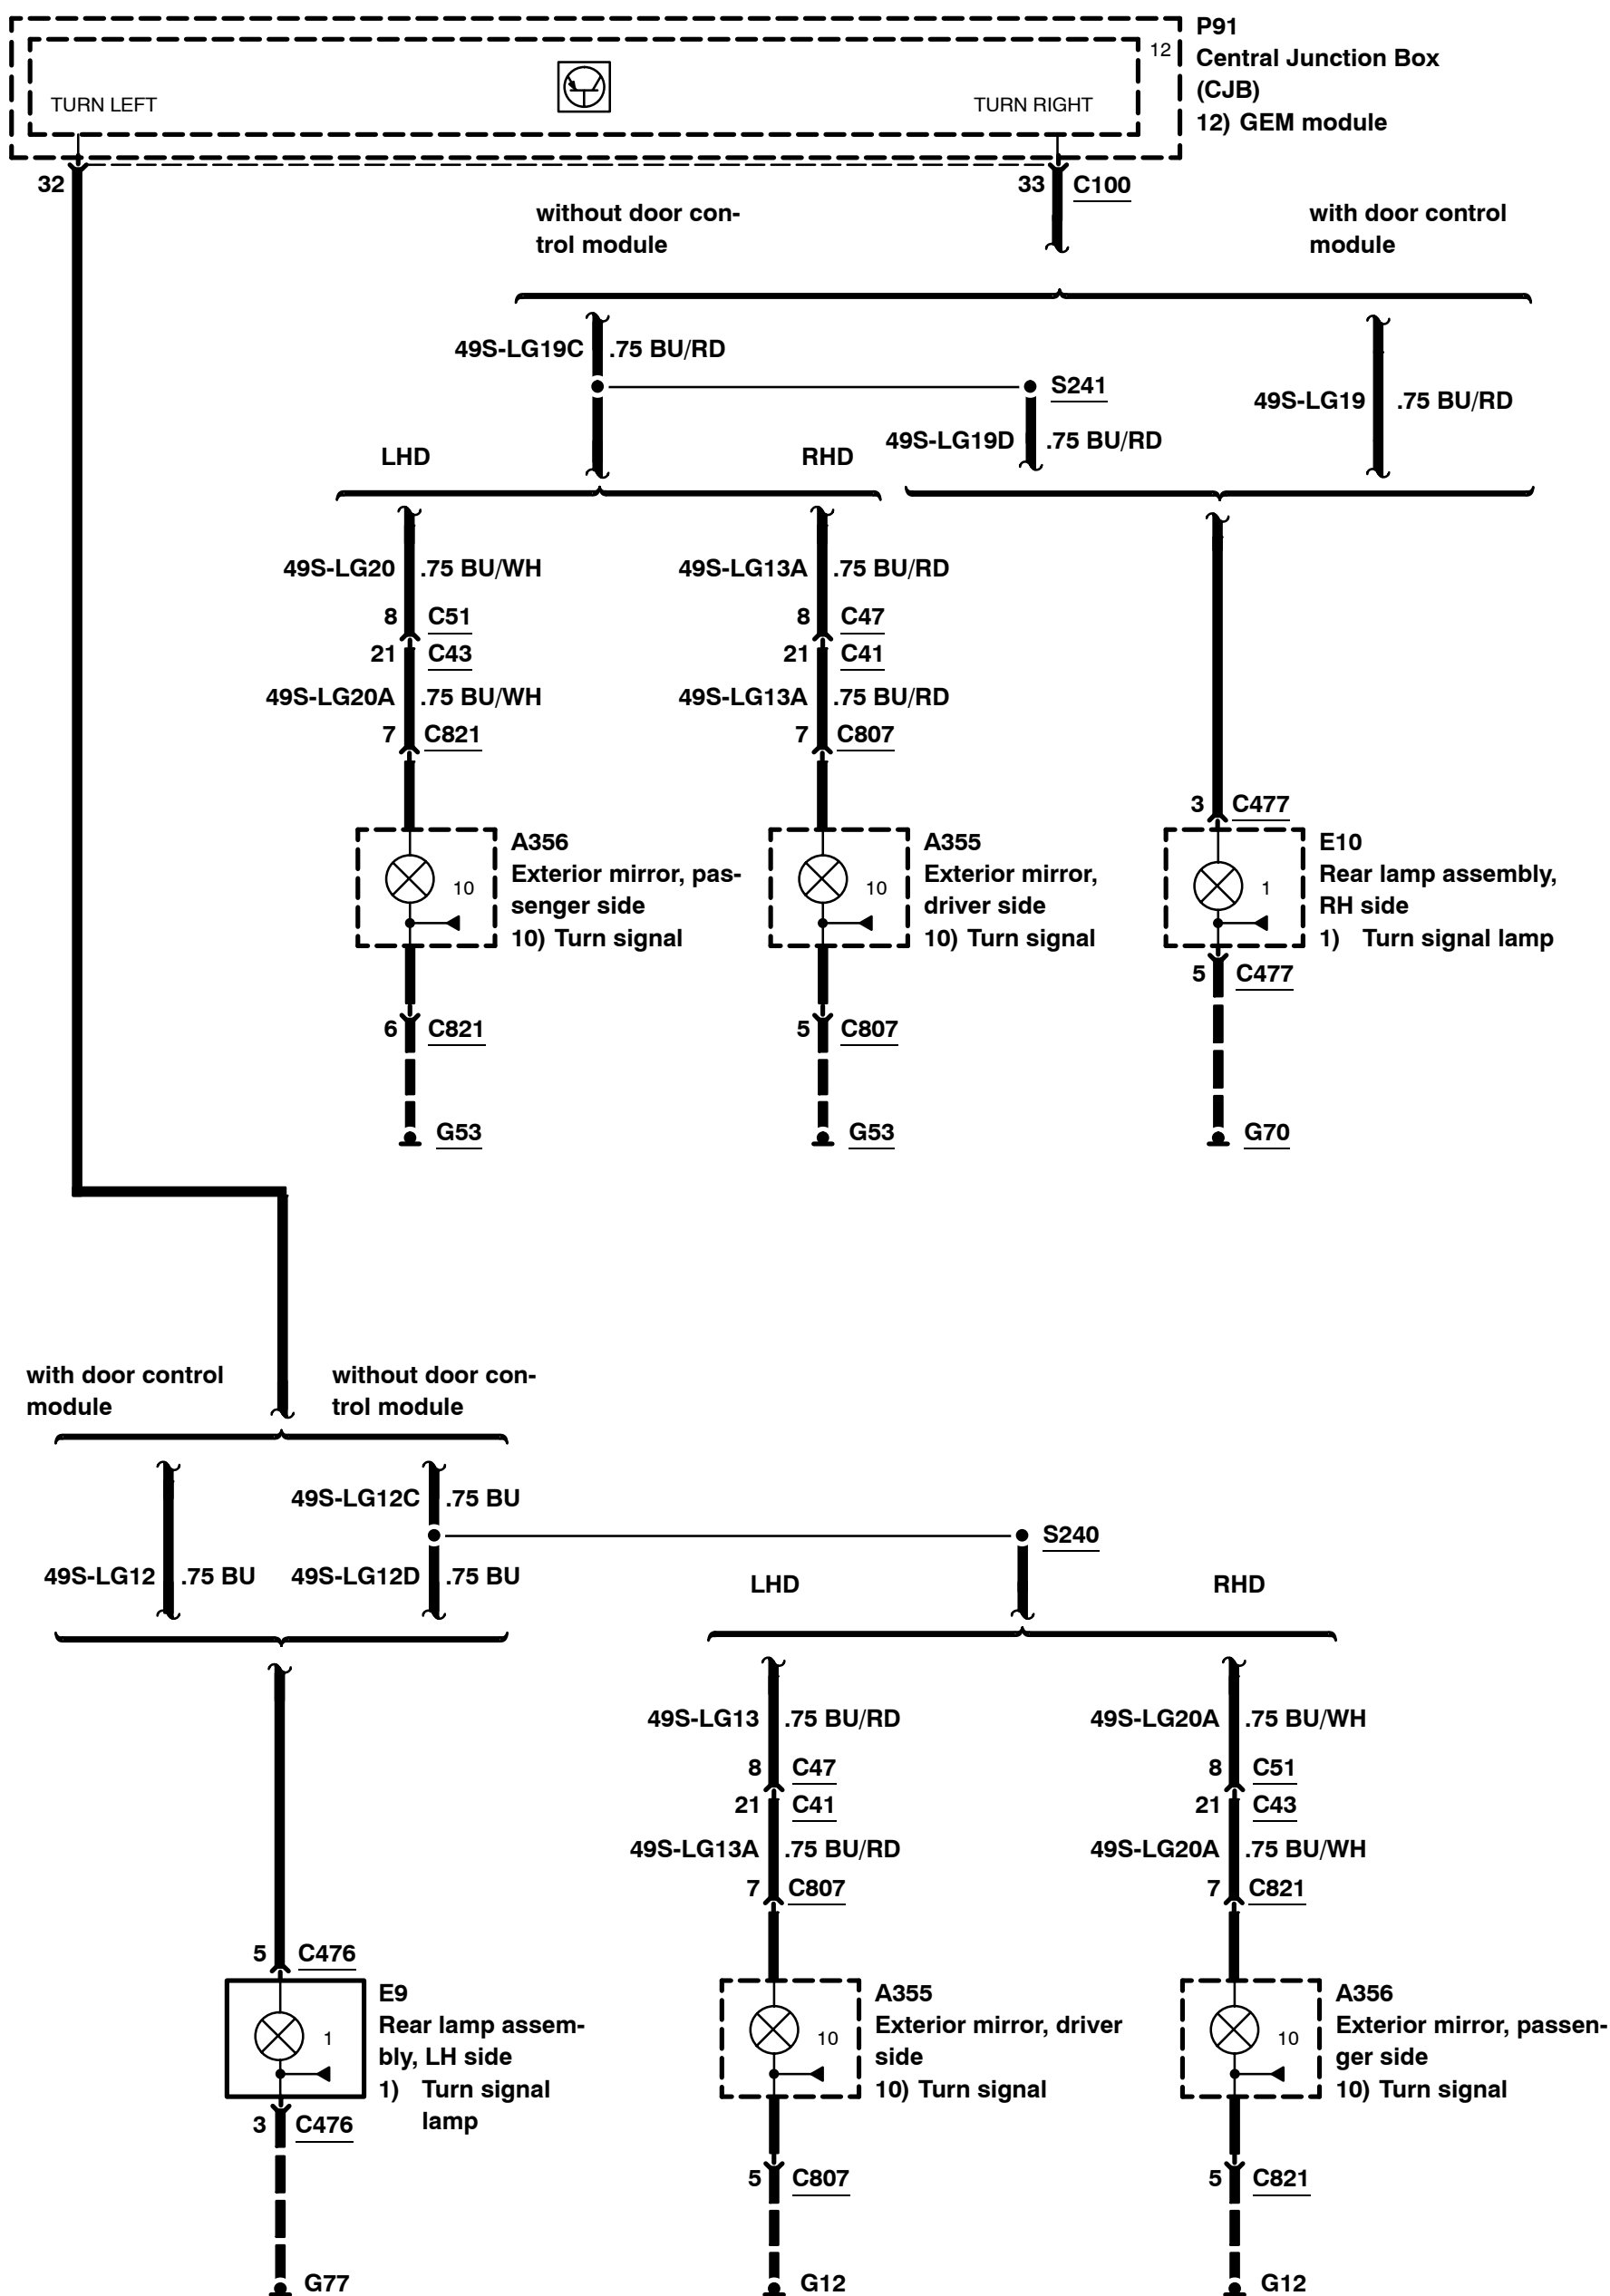



# Exterior Lighting – Turn Signal Lamps, rear, 4-door model, as of model year 2009

02/2008  
417-01-00-18  
2008.25  
Focus

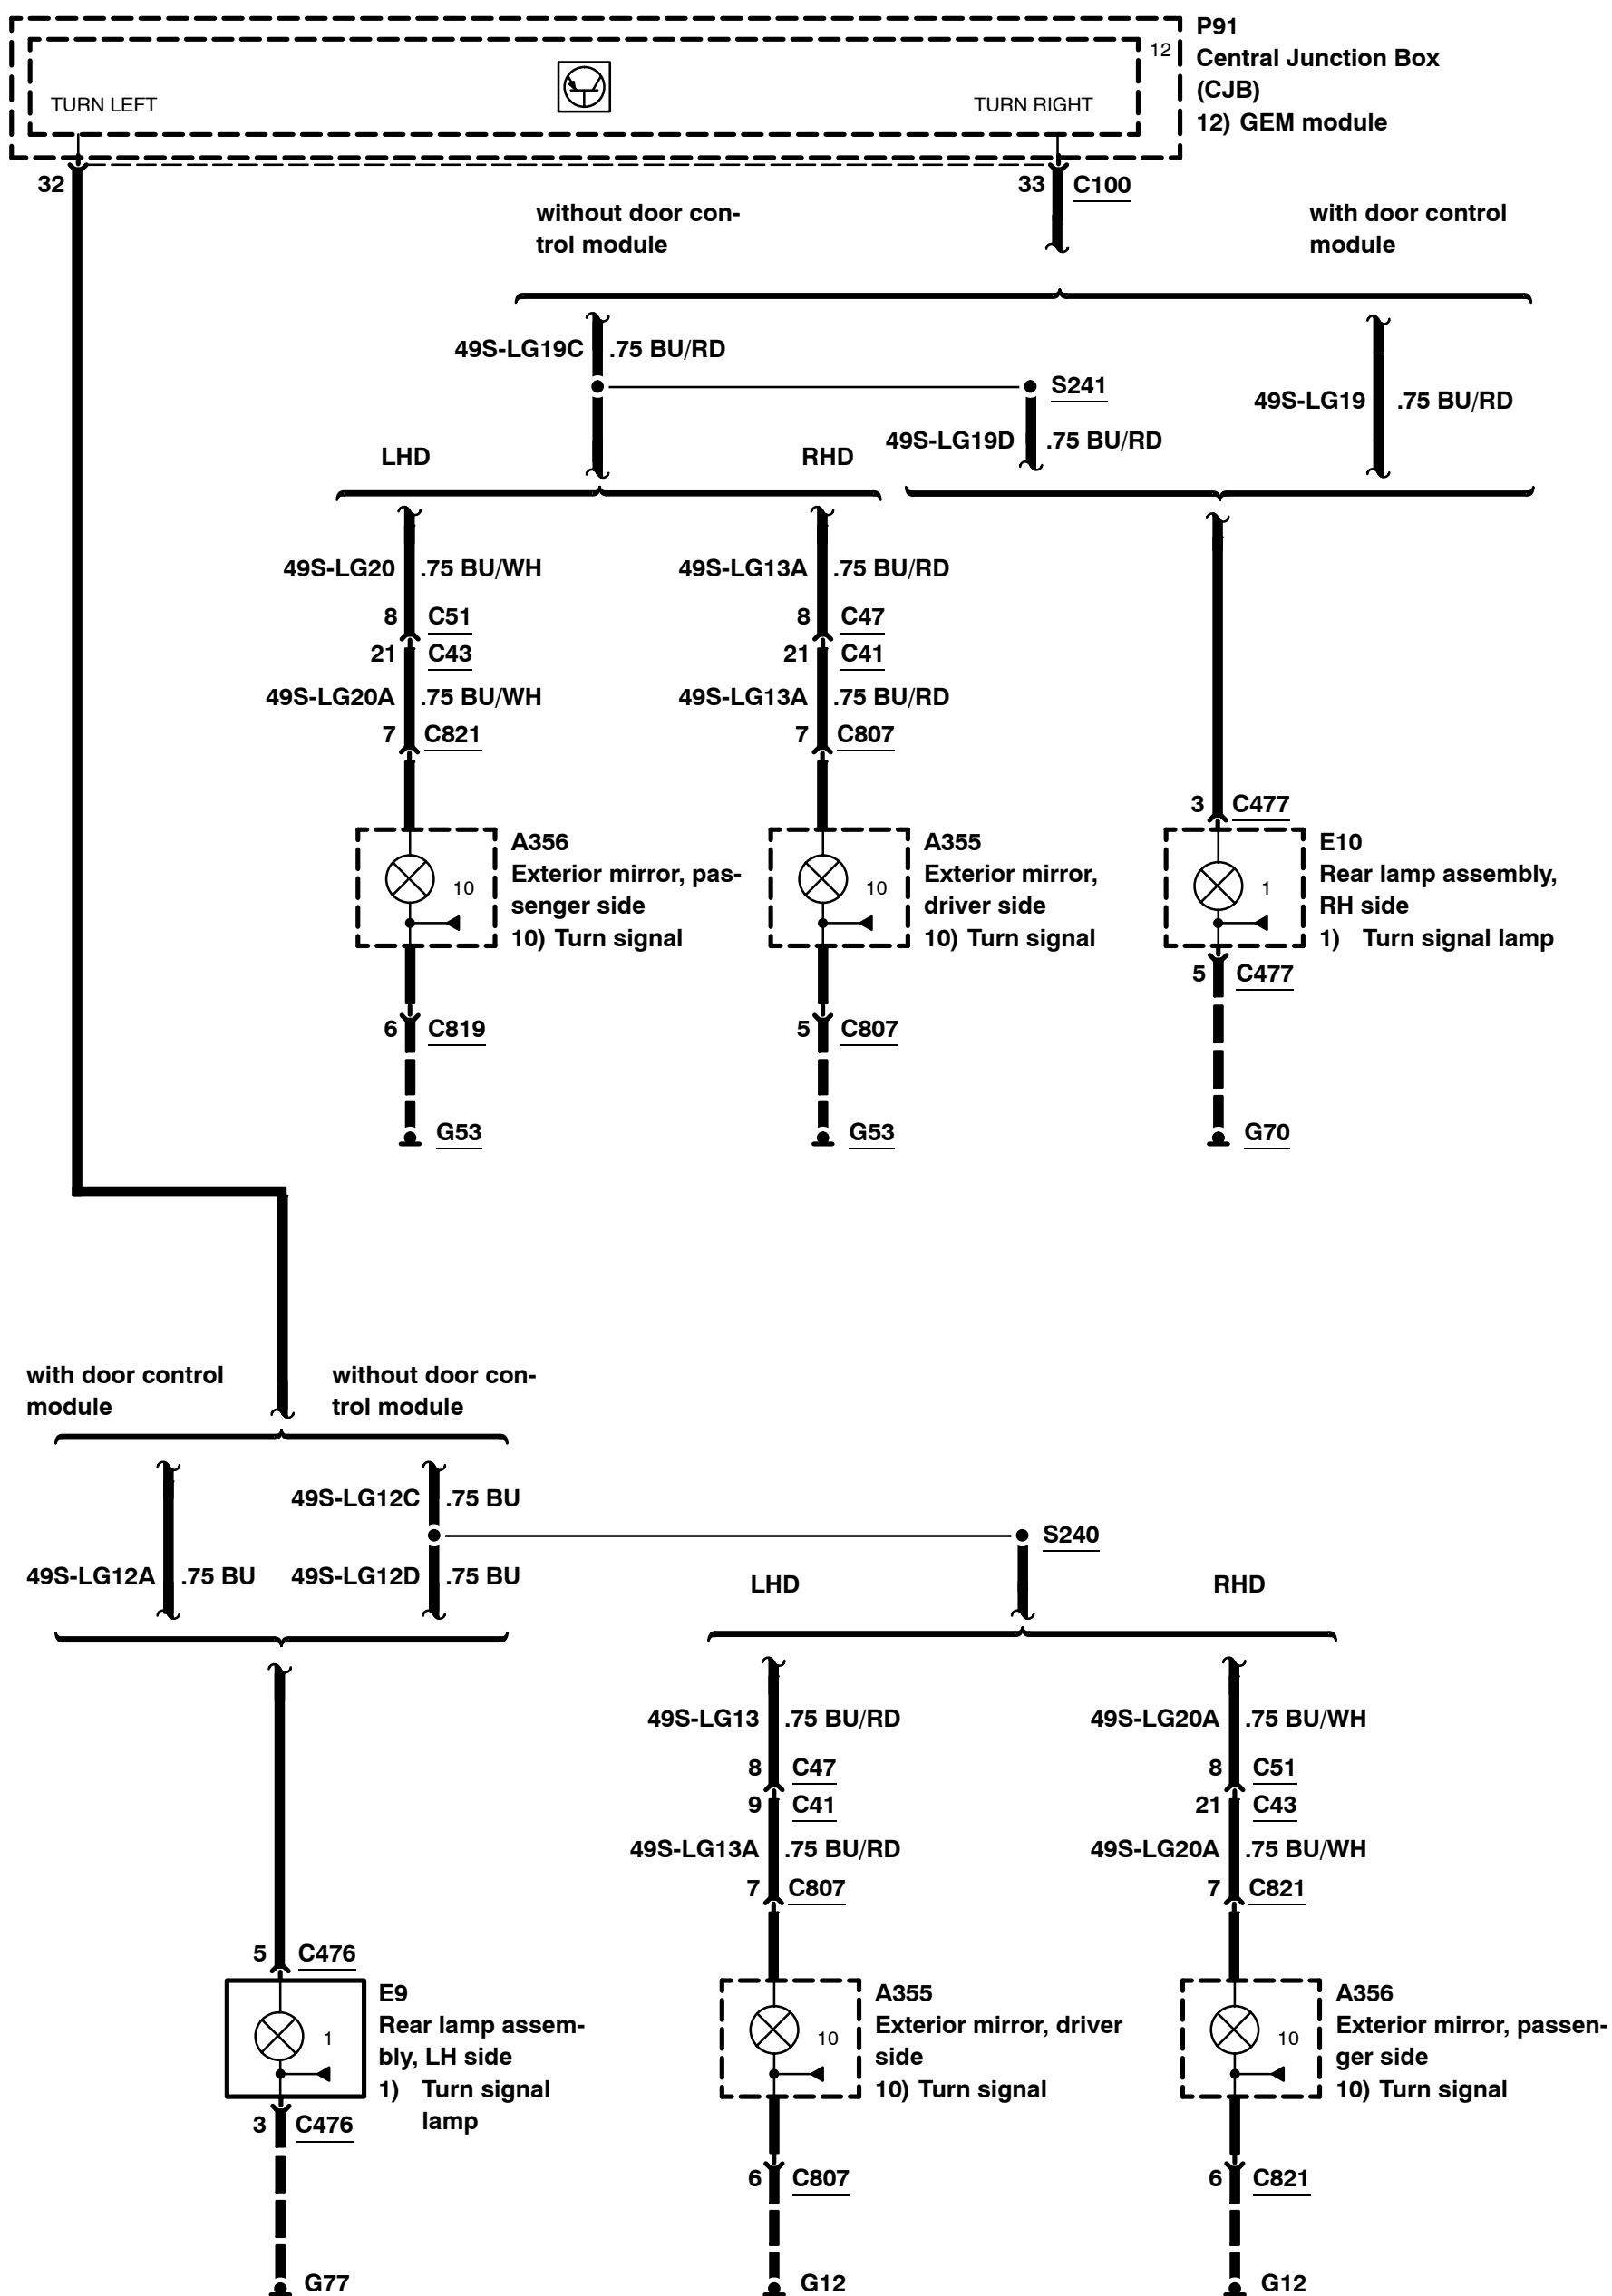


Exterior Lighting – Turn Signal Lamps, in exterior mirror, with front and rear power windows, before model year 2009

02/2008  
417-01-00-19  
2008.25  
Focus

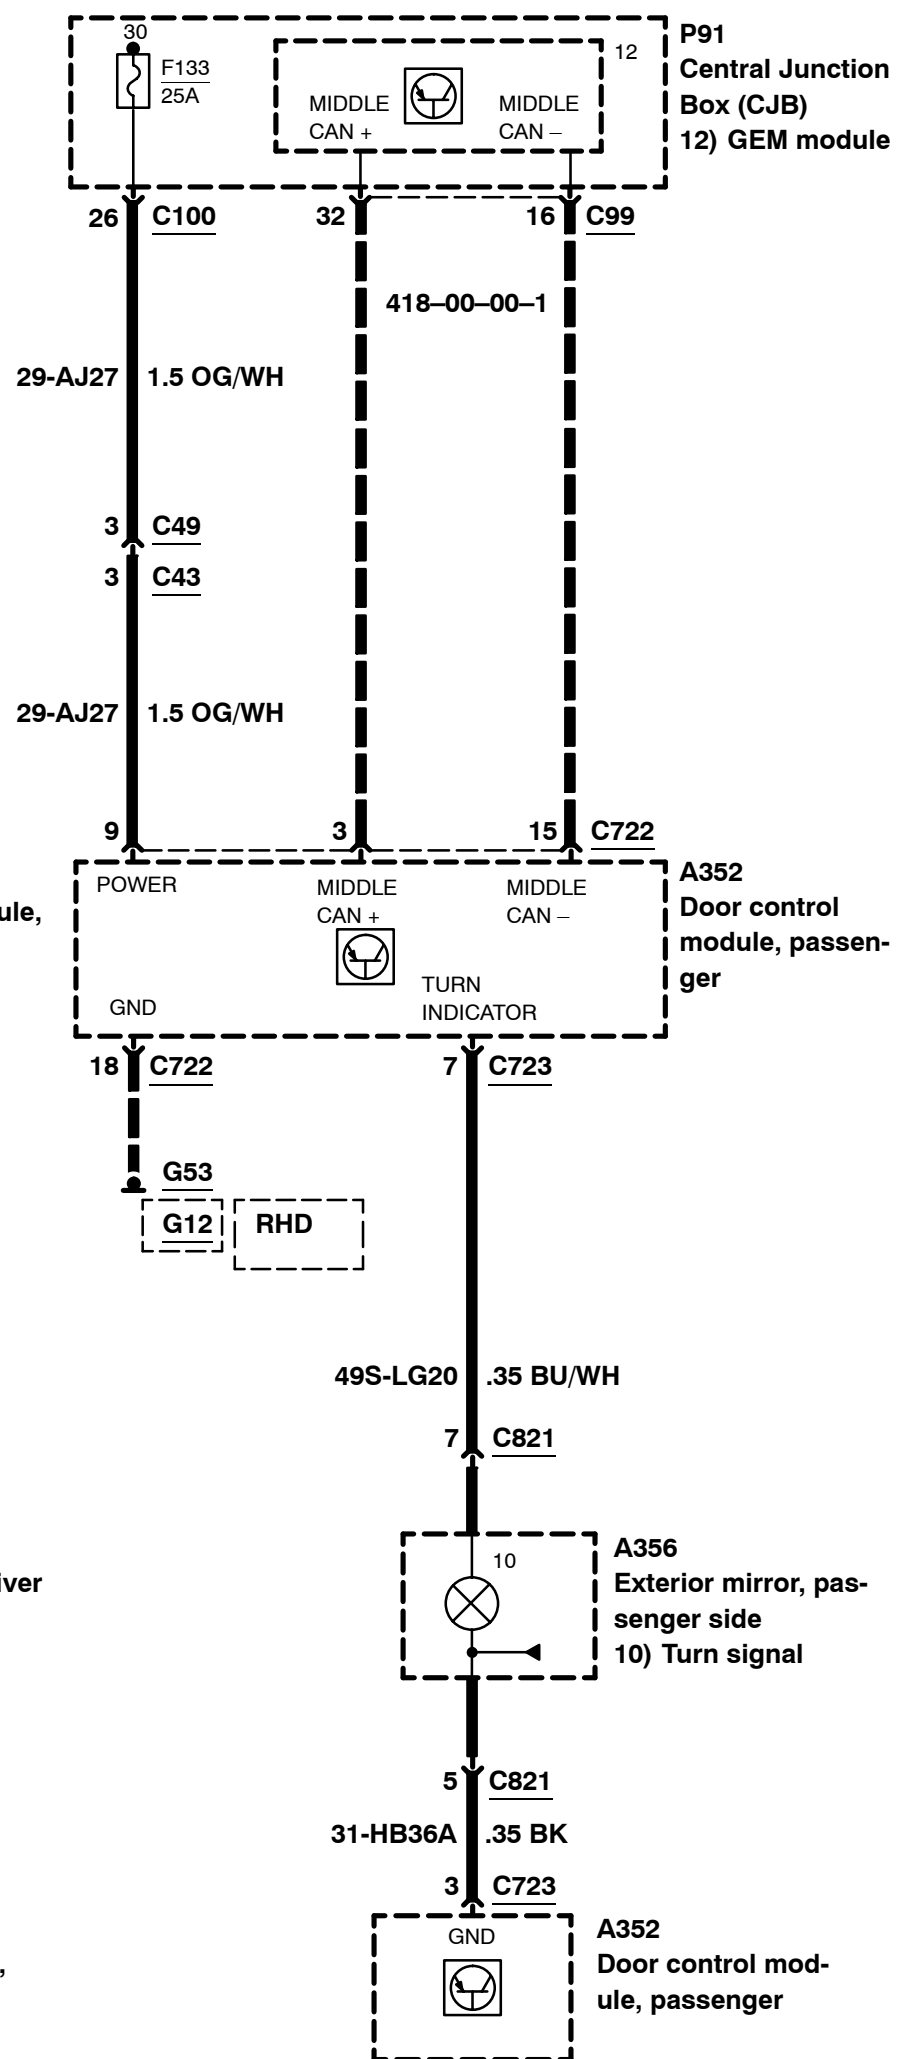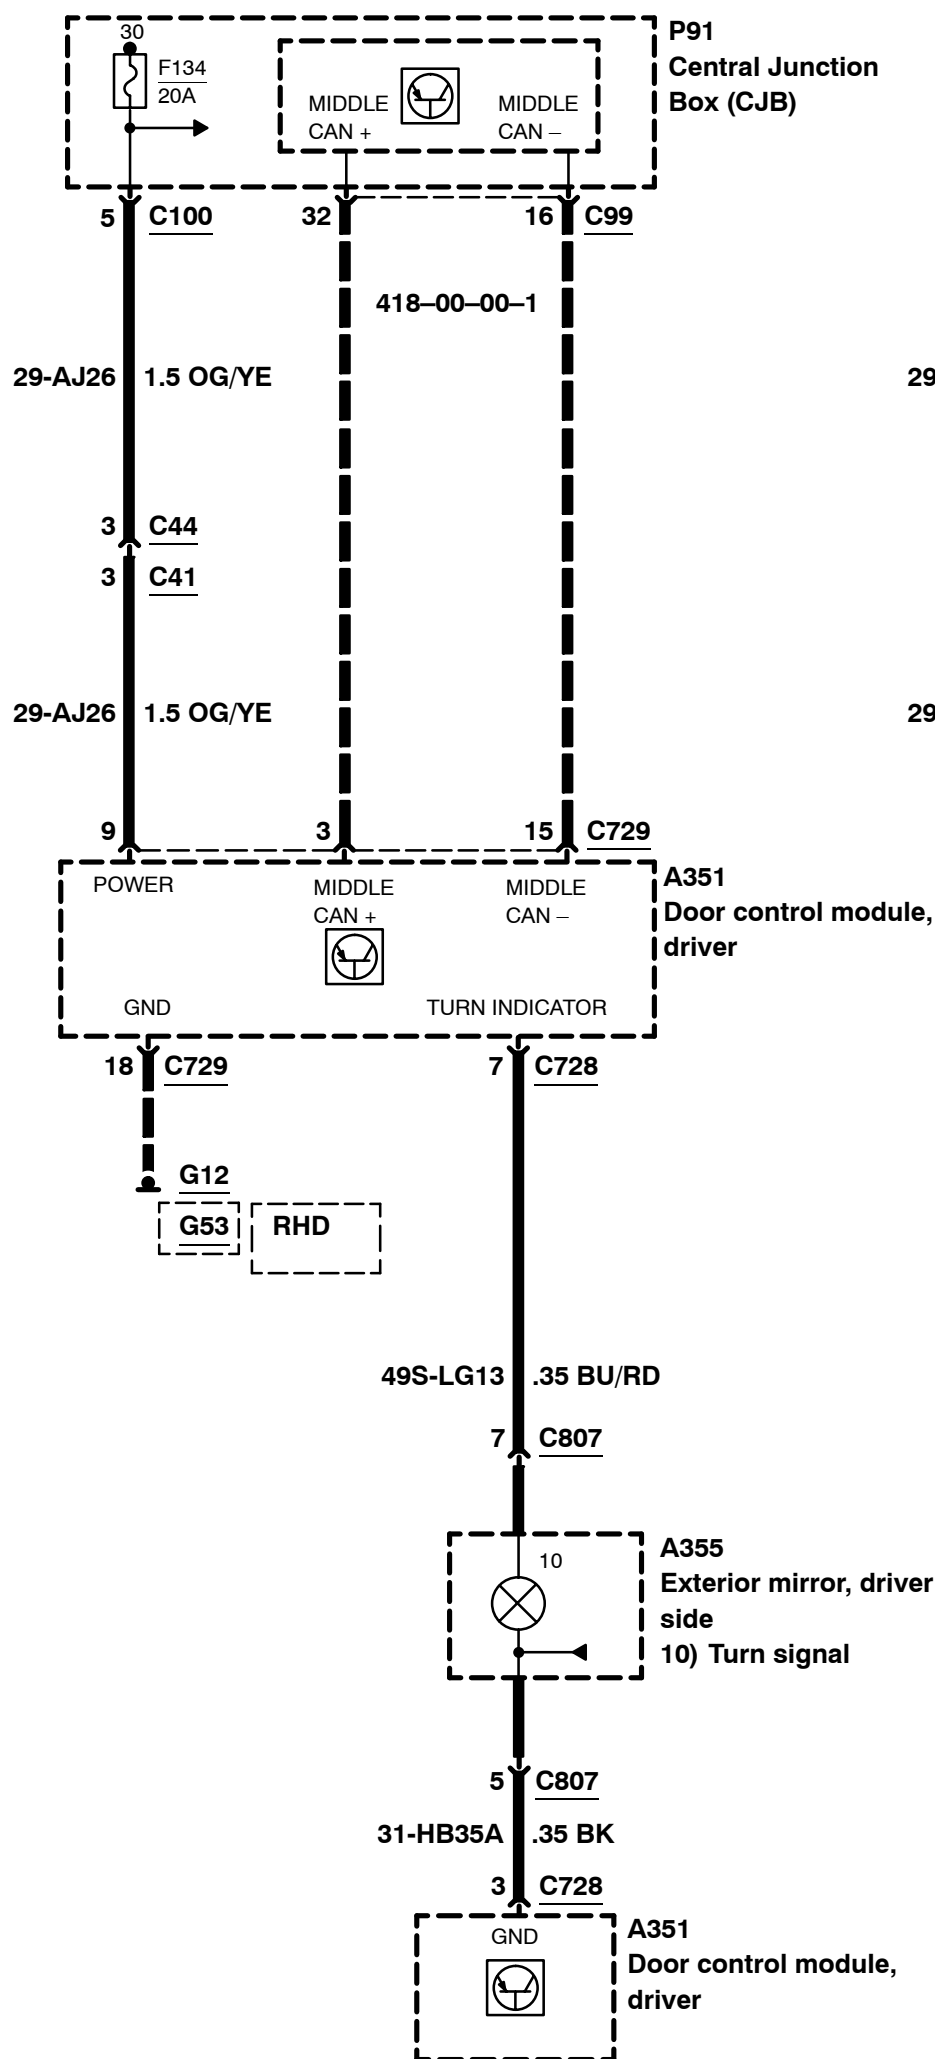

# Exterior Lighting – Turn Signal Lamps, in exterior mirror, with front and rear power windows, as of model year 2009


02/2008  
417-01-00-20  
2008.25  
Focus

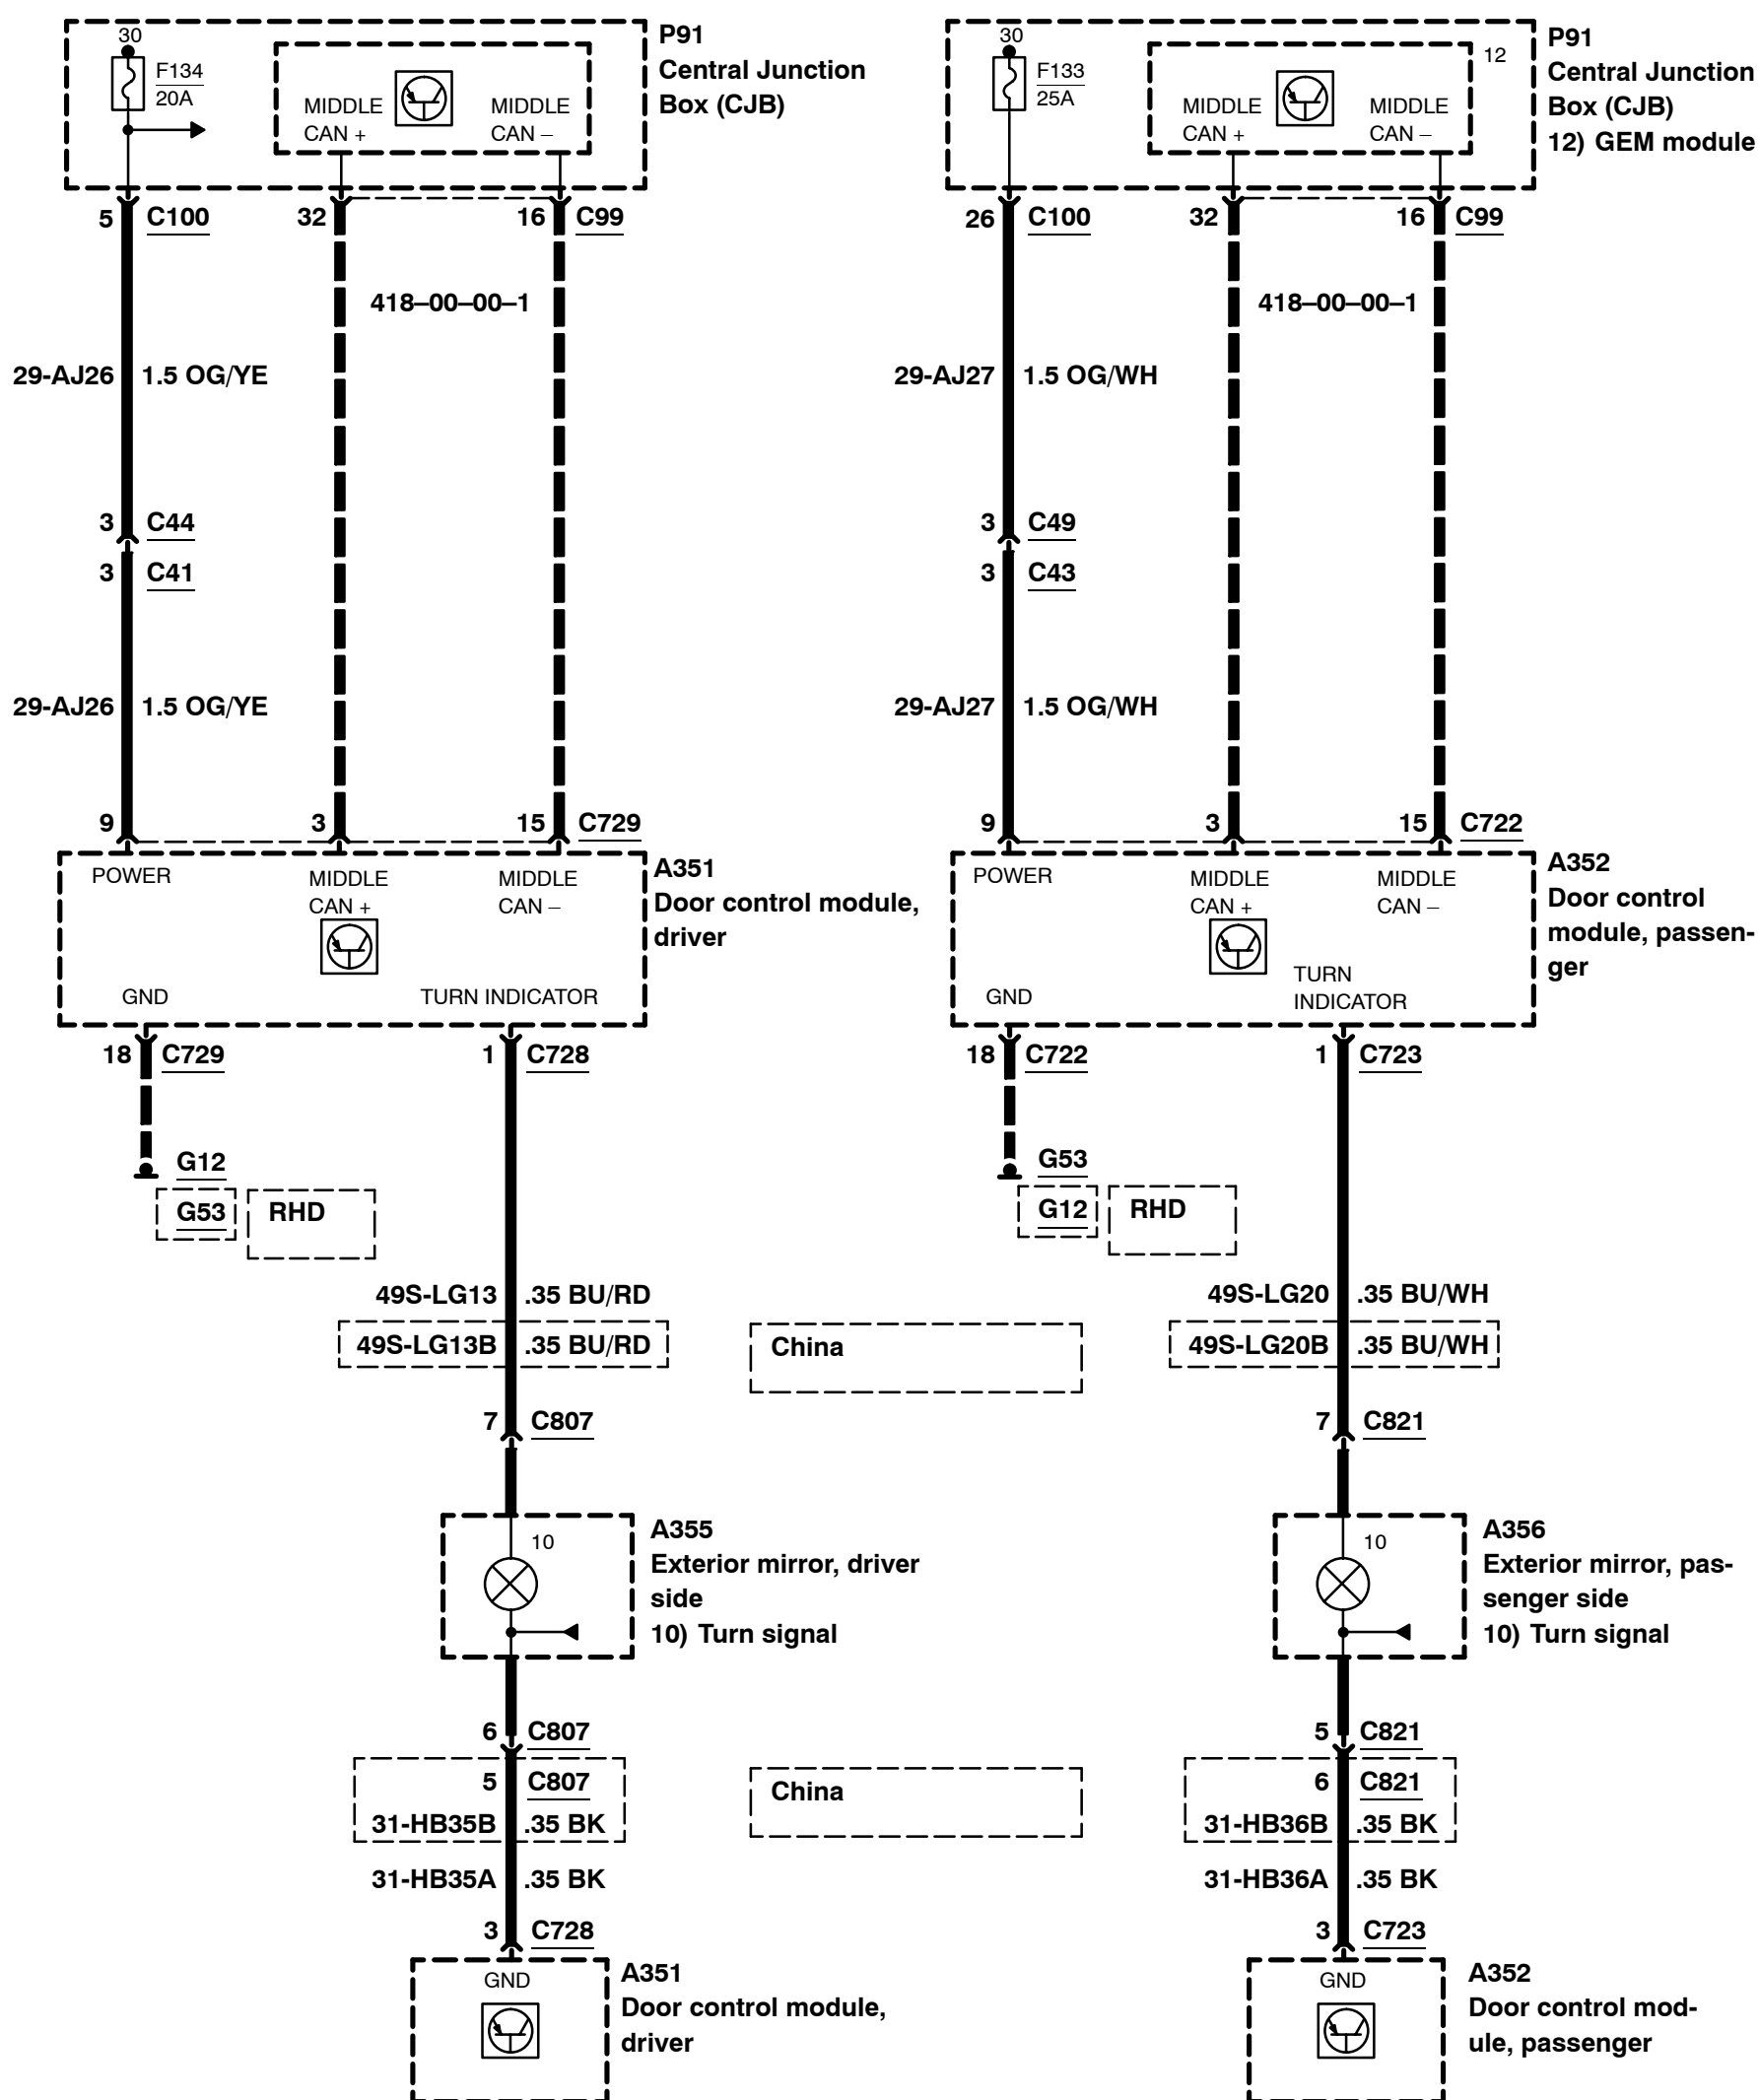




# Exterior Lighting – Position and Parking Lamps, 4-door model

02/2008  
417-01-00-21  
2008.25  
Focus

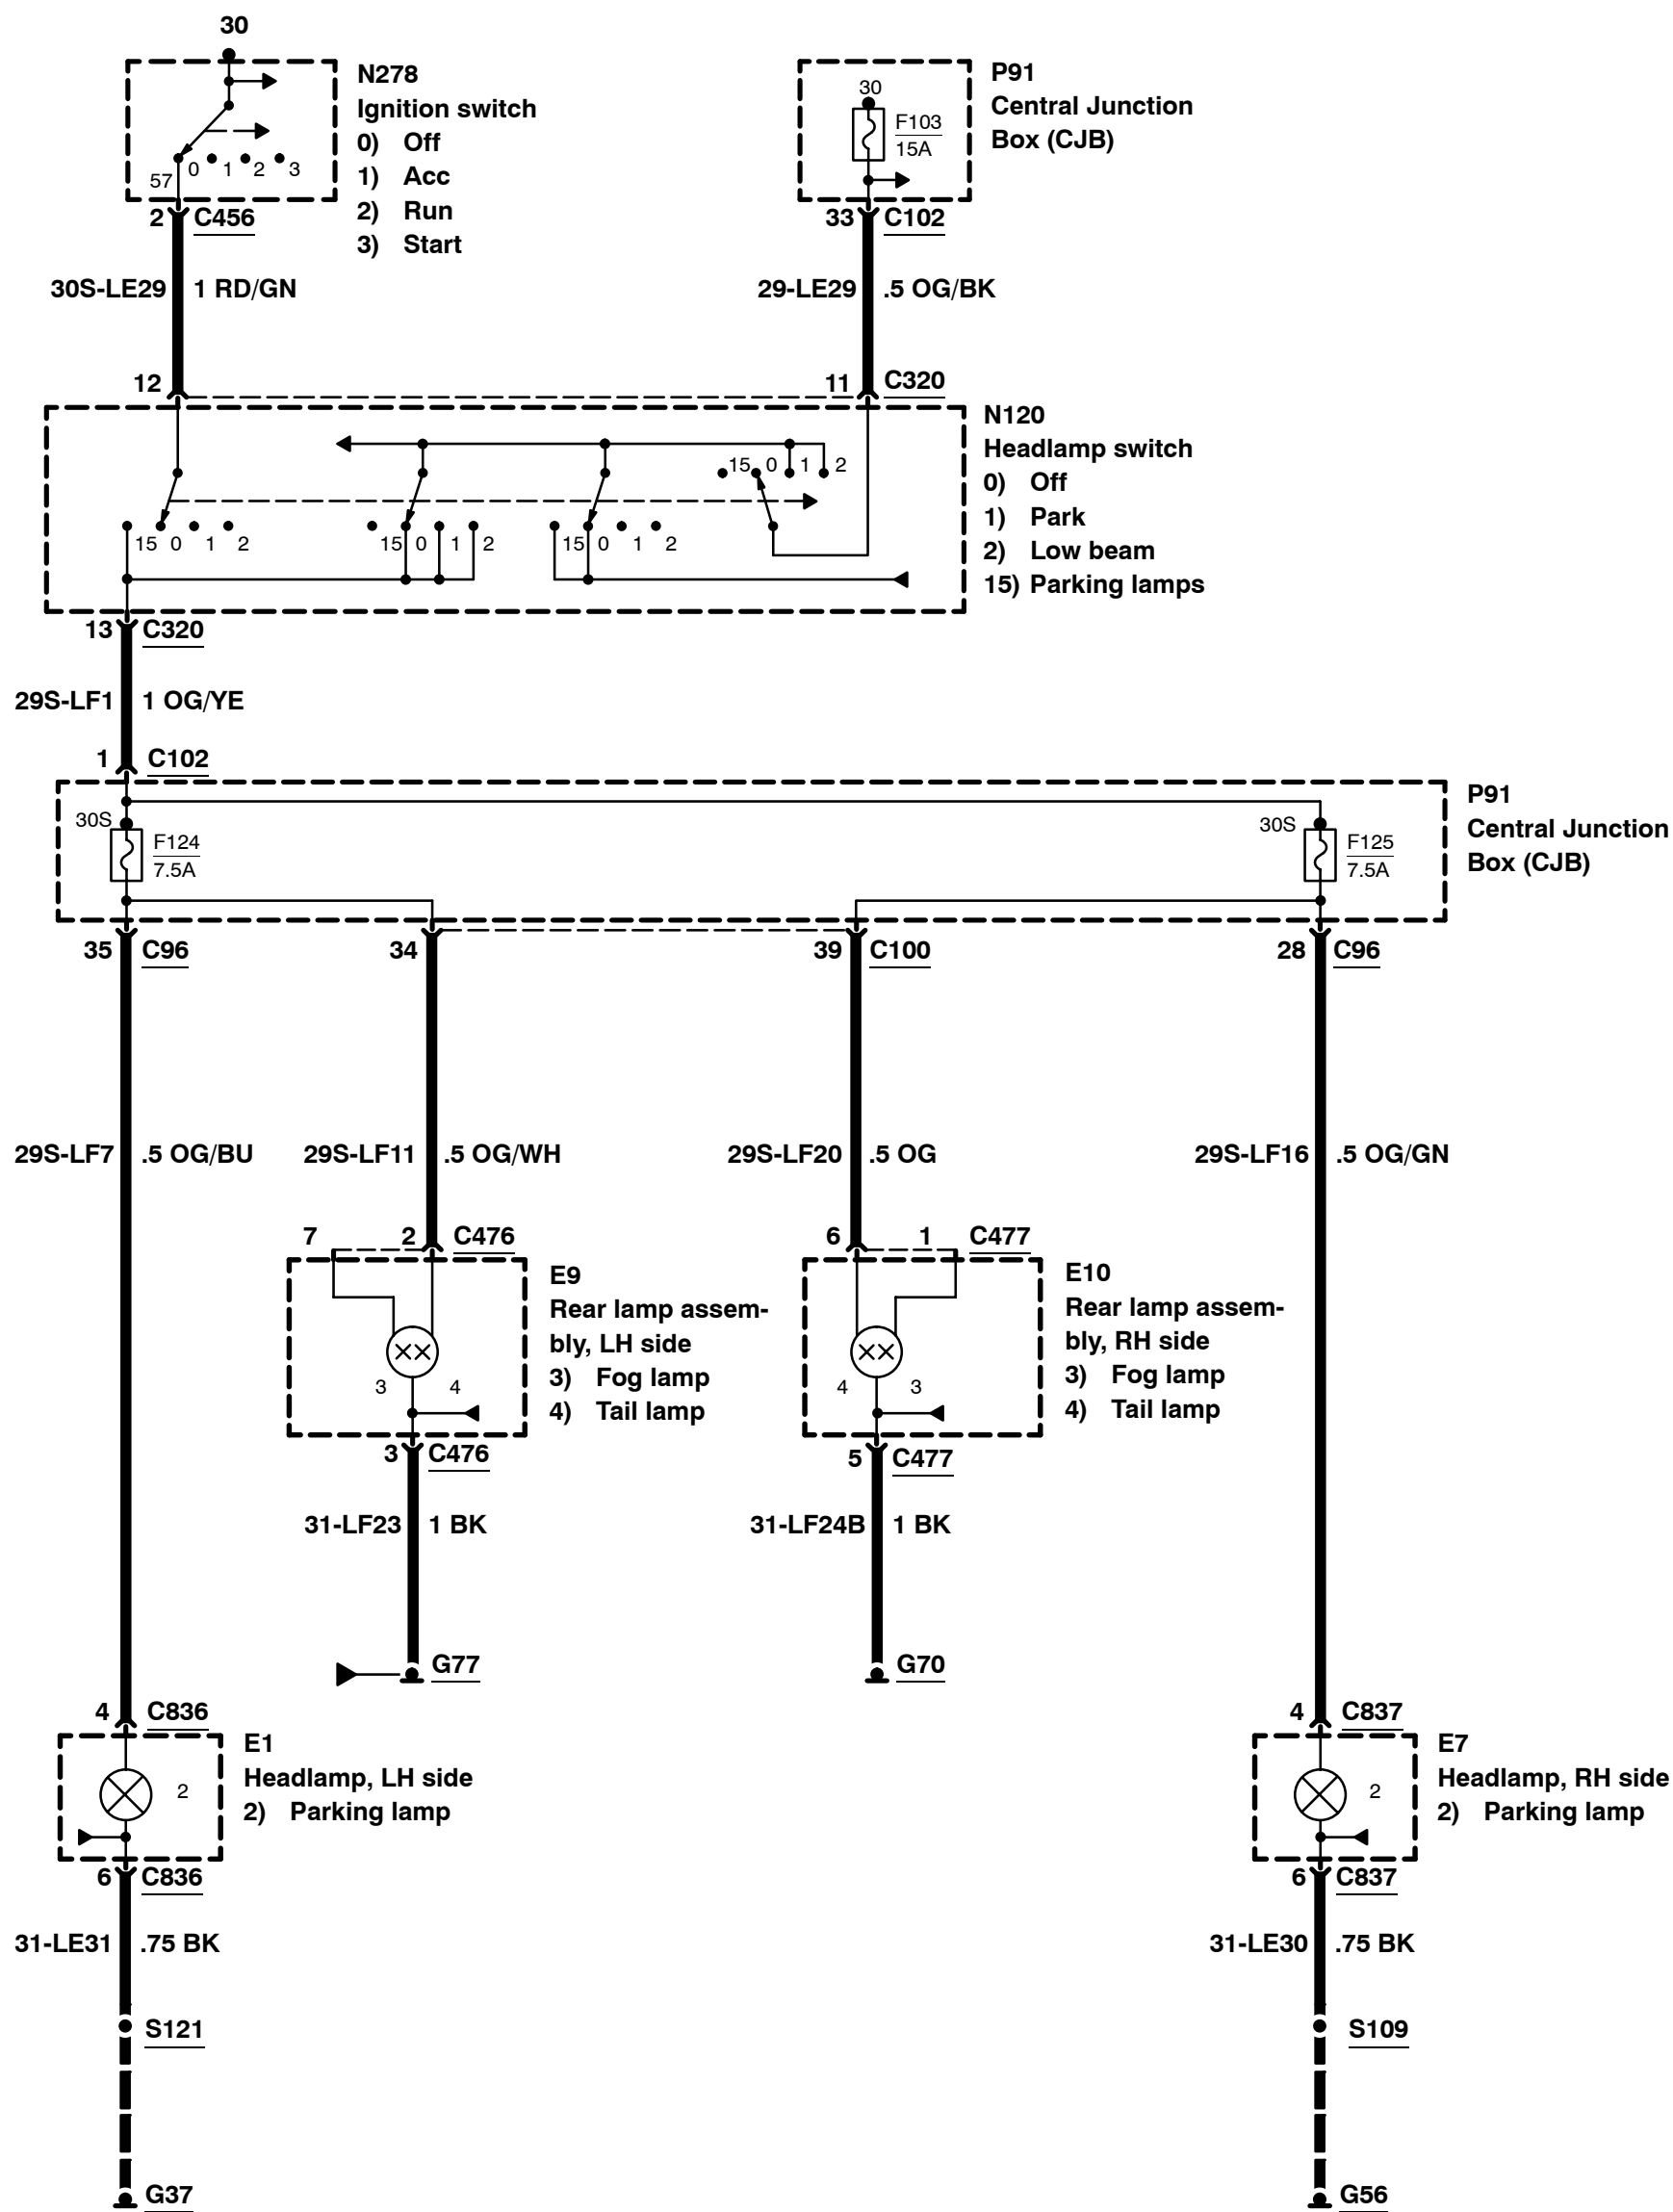

# Exterior Lighting – Position and Parking Lamps, 5-door model


02/2008  
417-01-00-22  
2008.25  
Focus

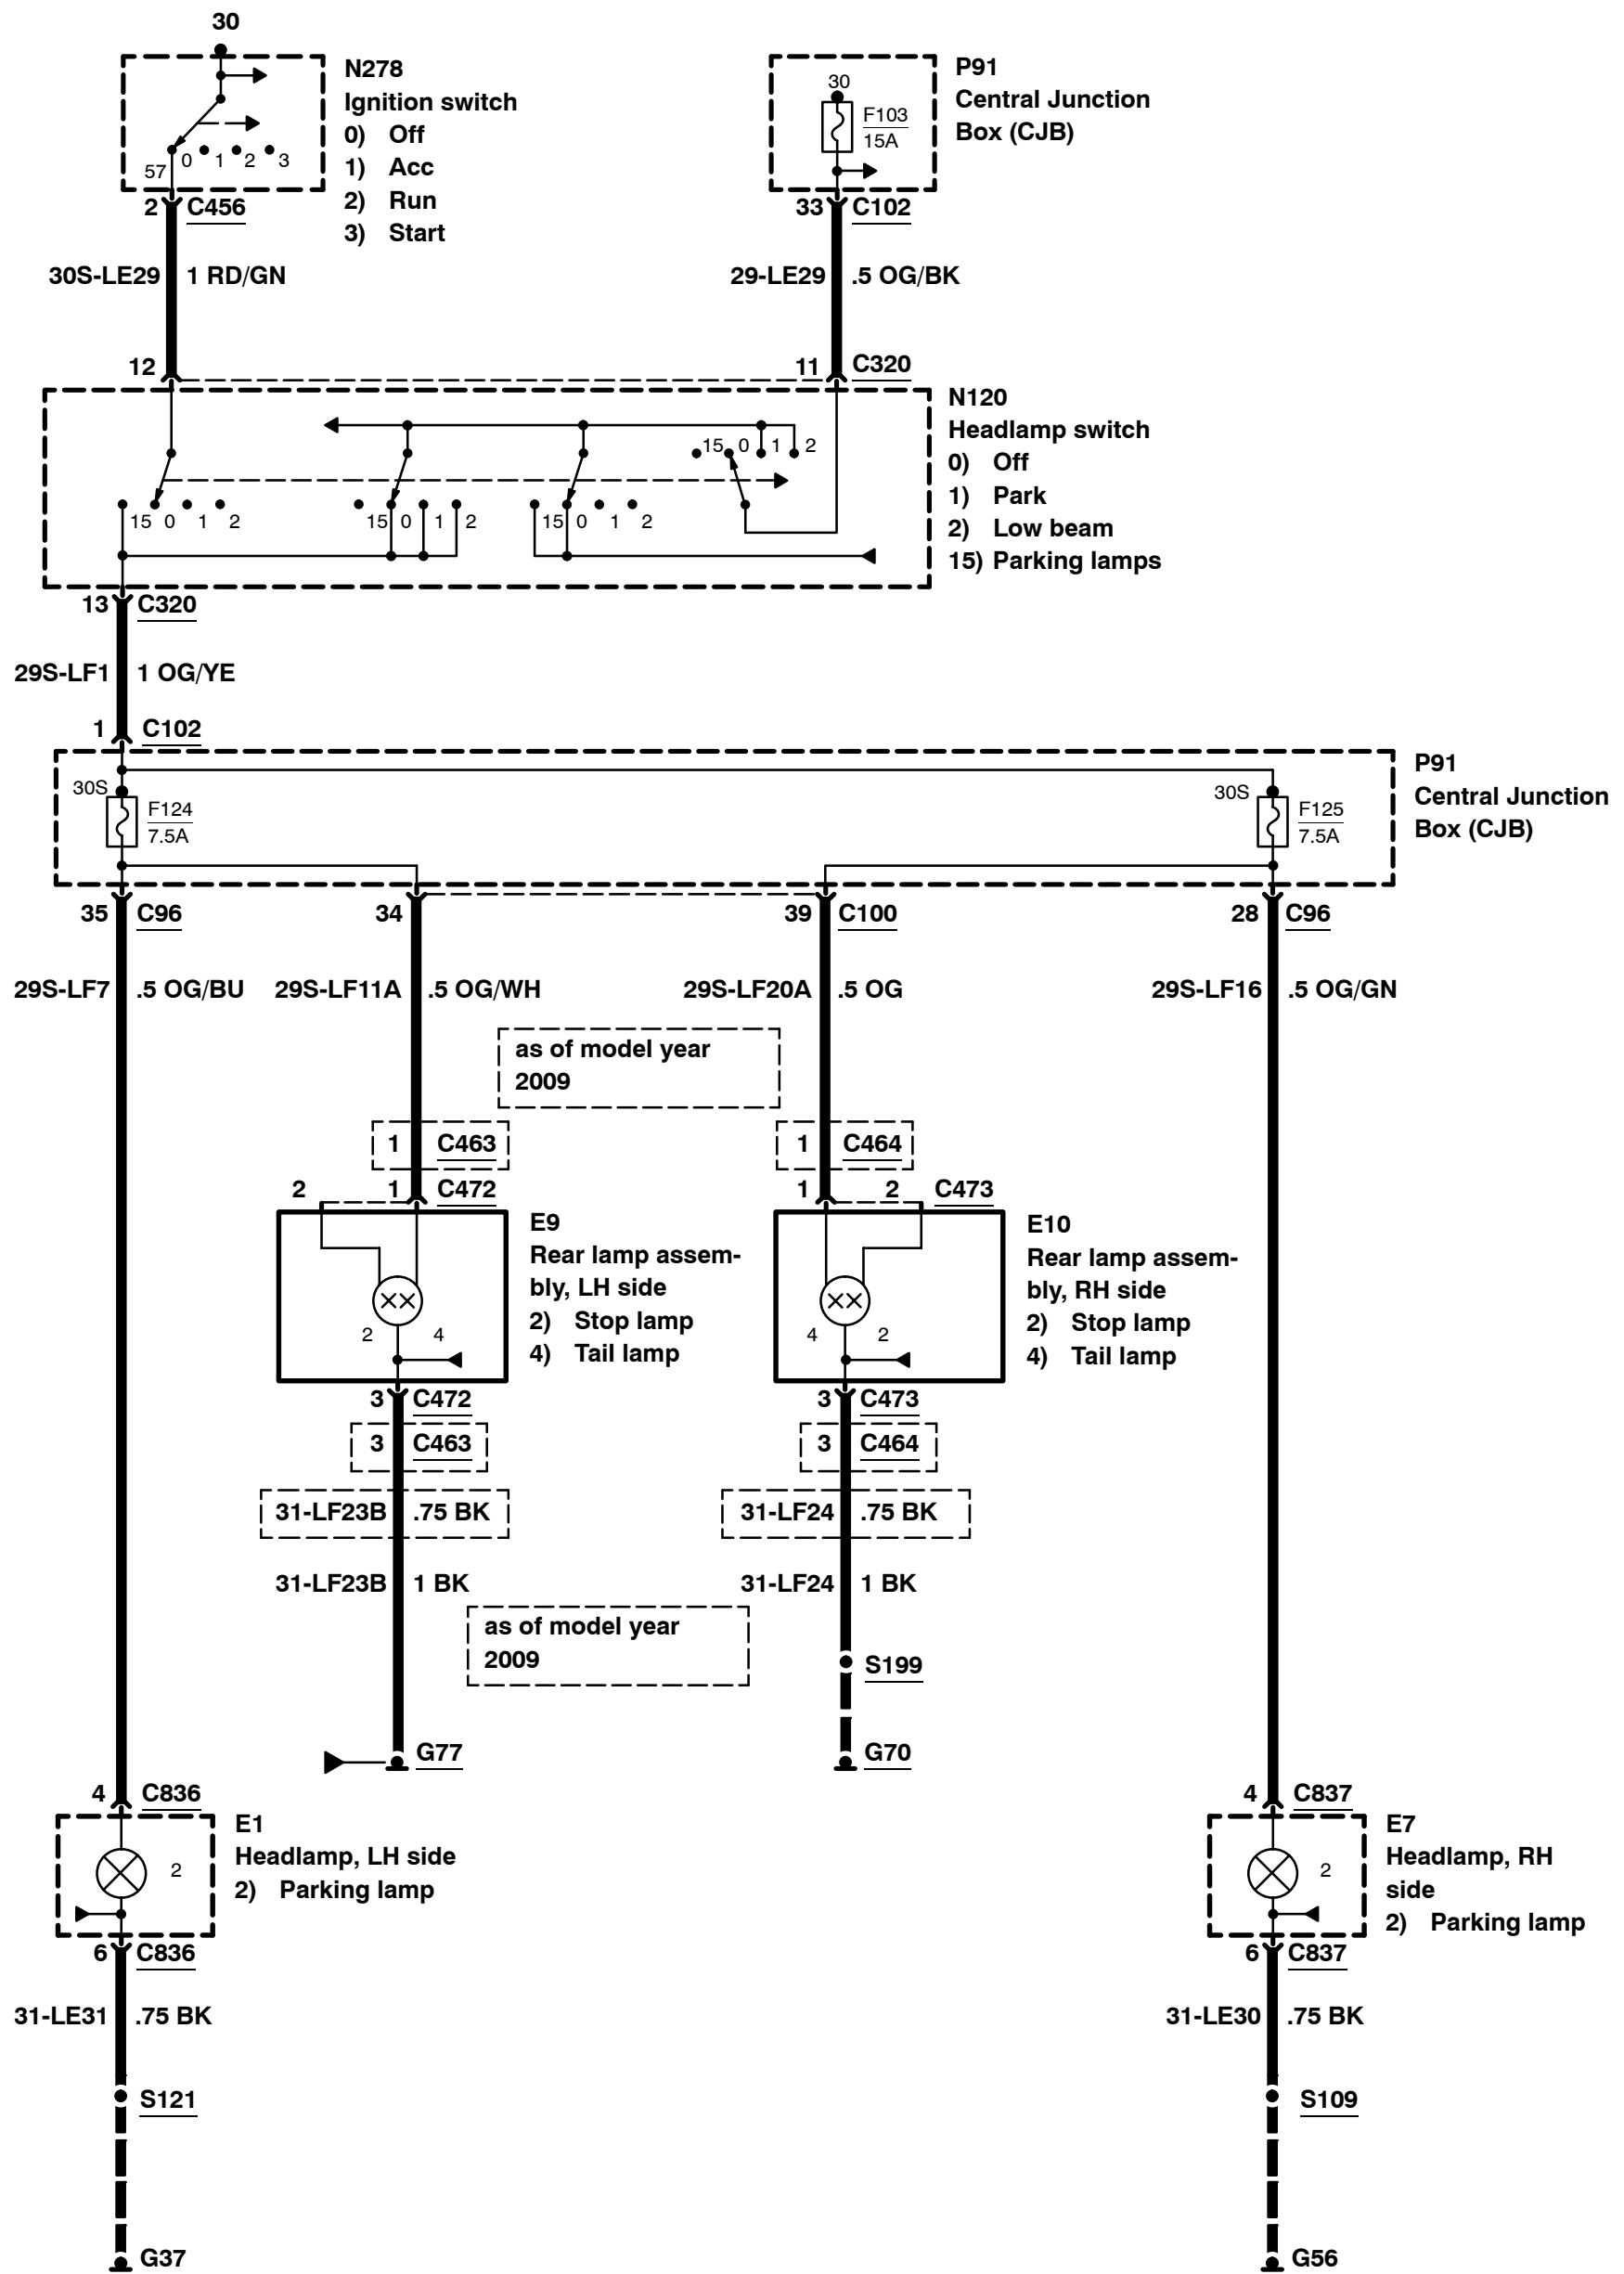




# Exterior Lighting – Licence Plate Illumination, before model year 2009


02/2008  
417-01-00-23  
2008.25  
Focus

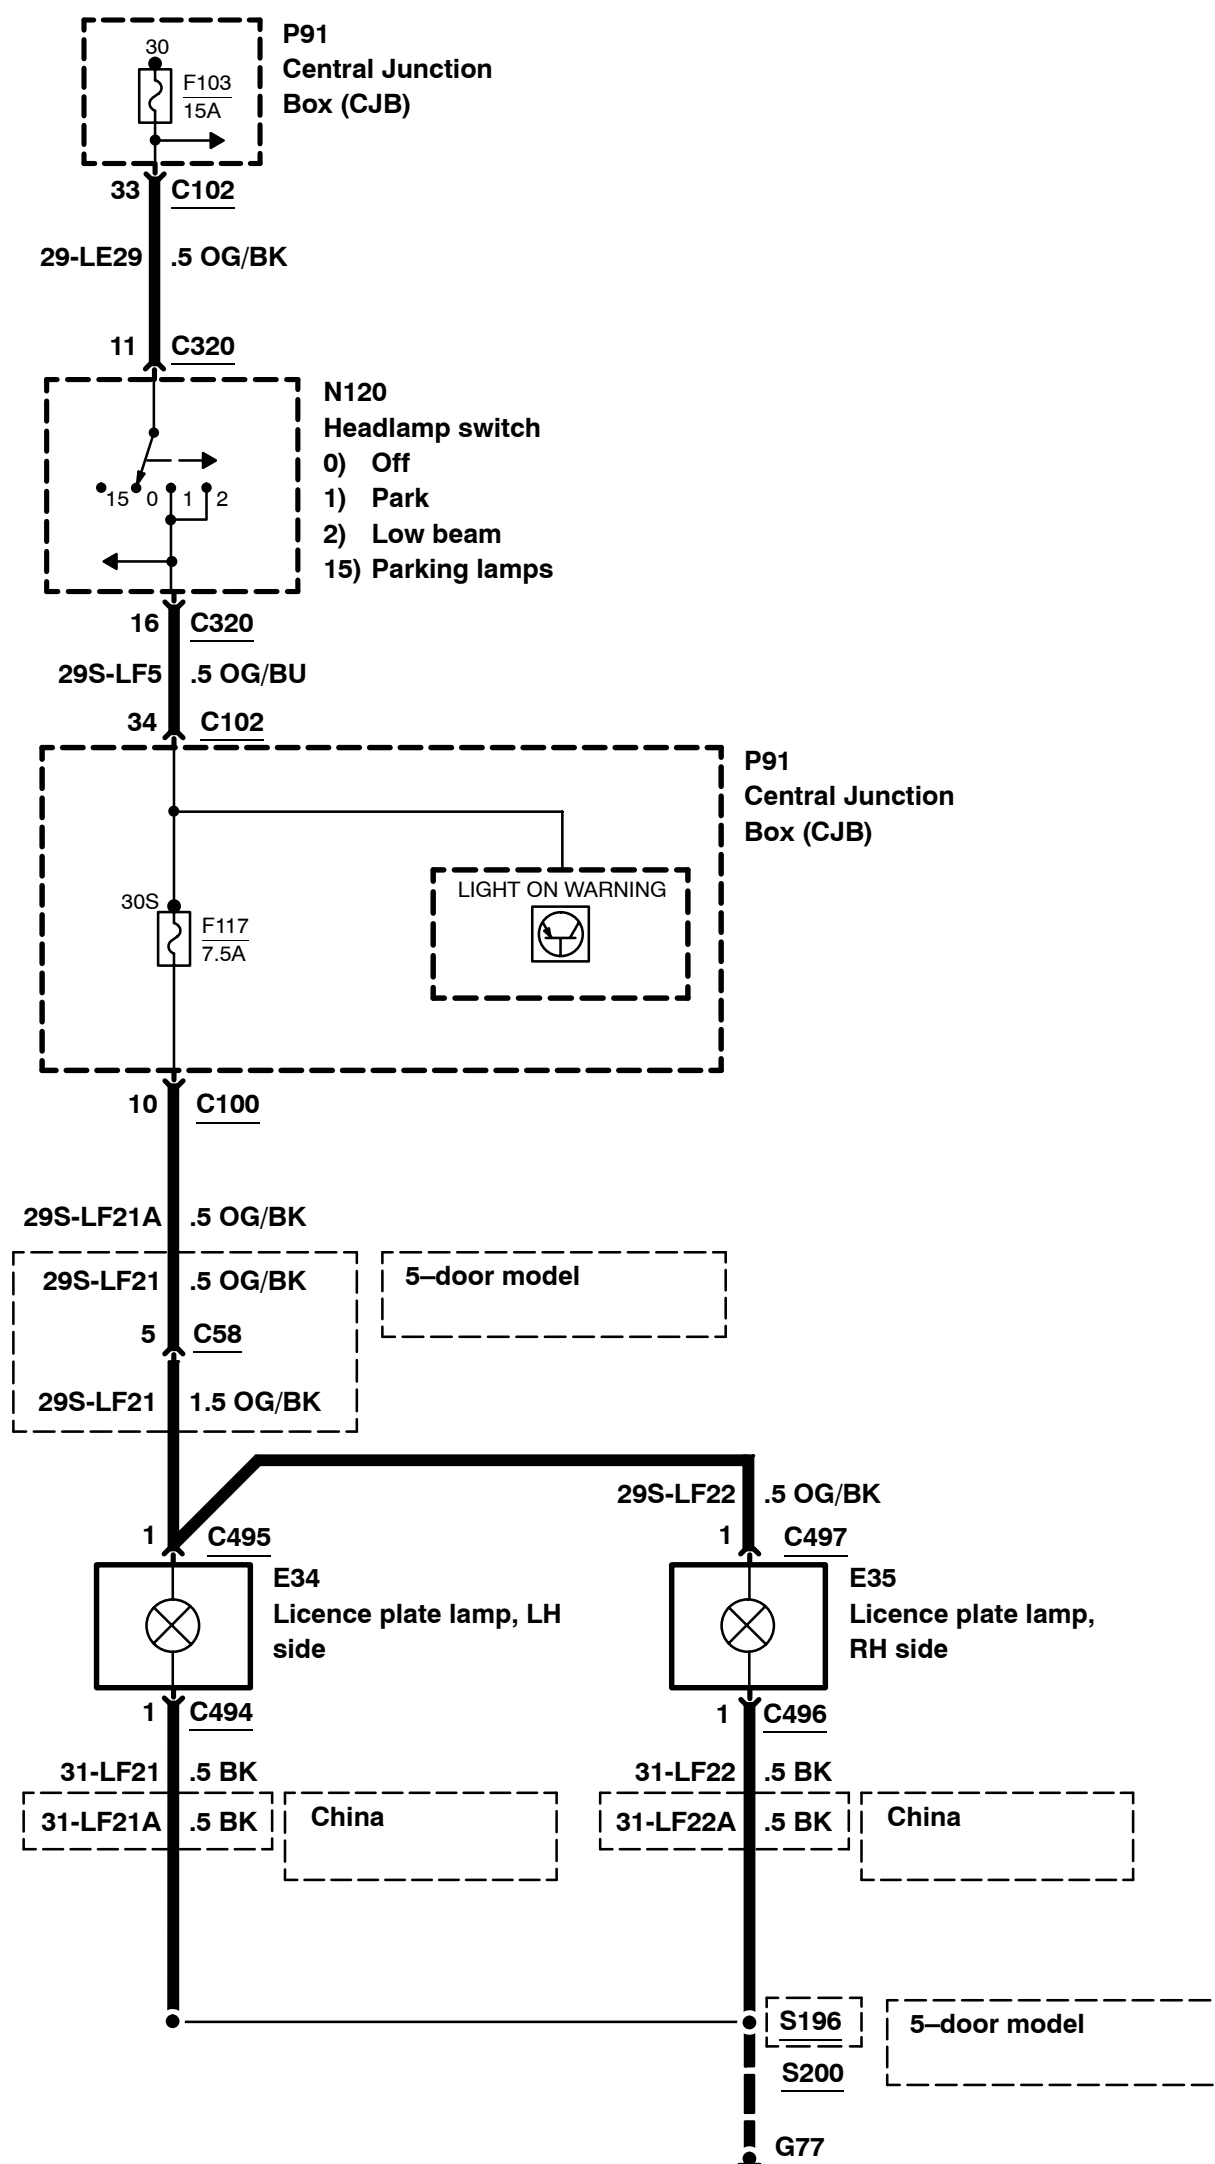

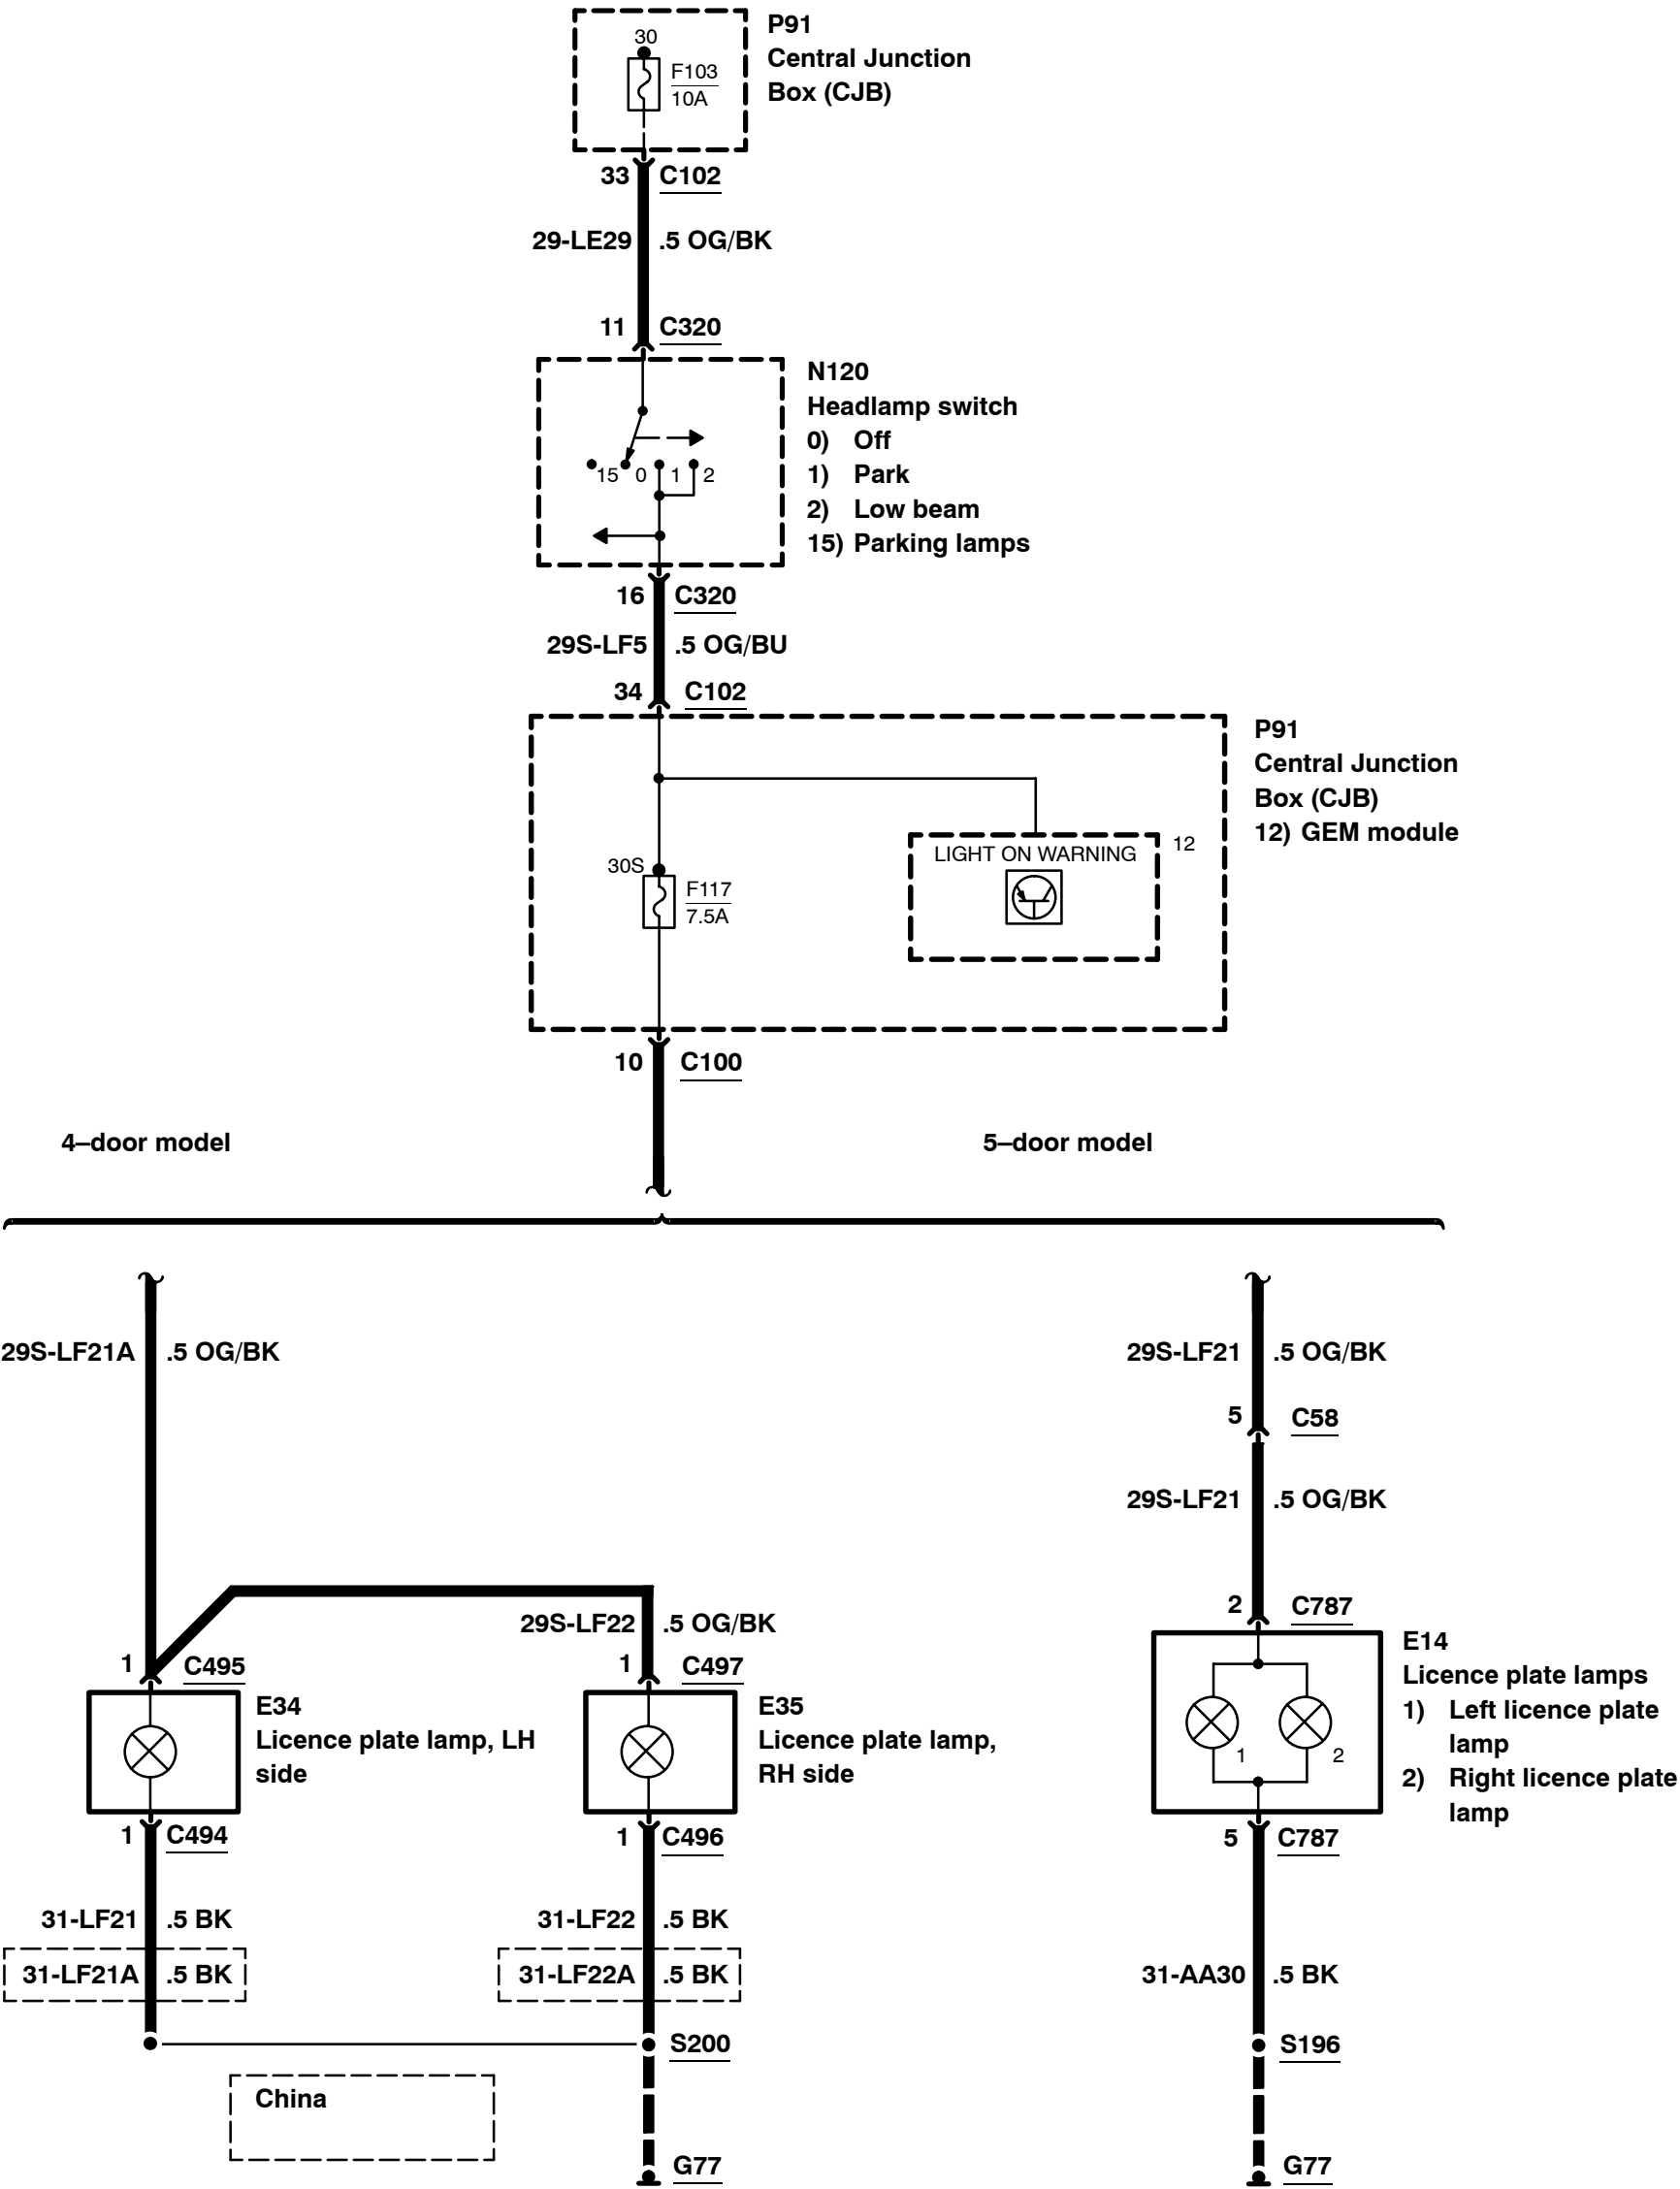


# Exterior Lighting – Fog lamps, 4-door model

02/2008  
417-01-00-25  
2008.25  
Focus

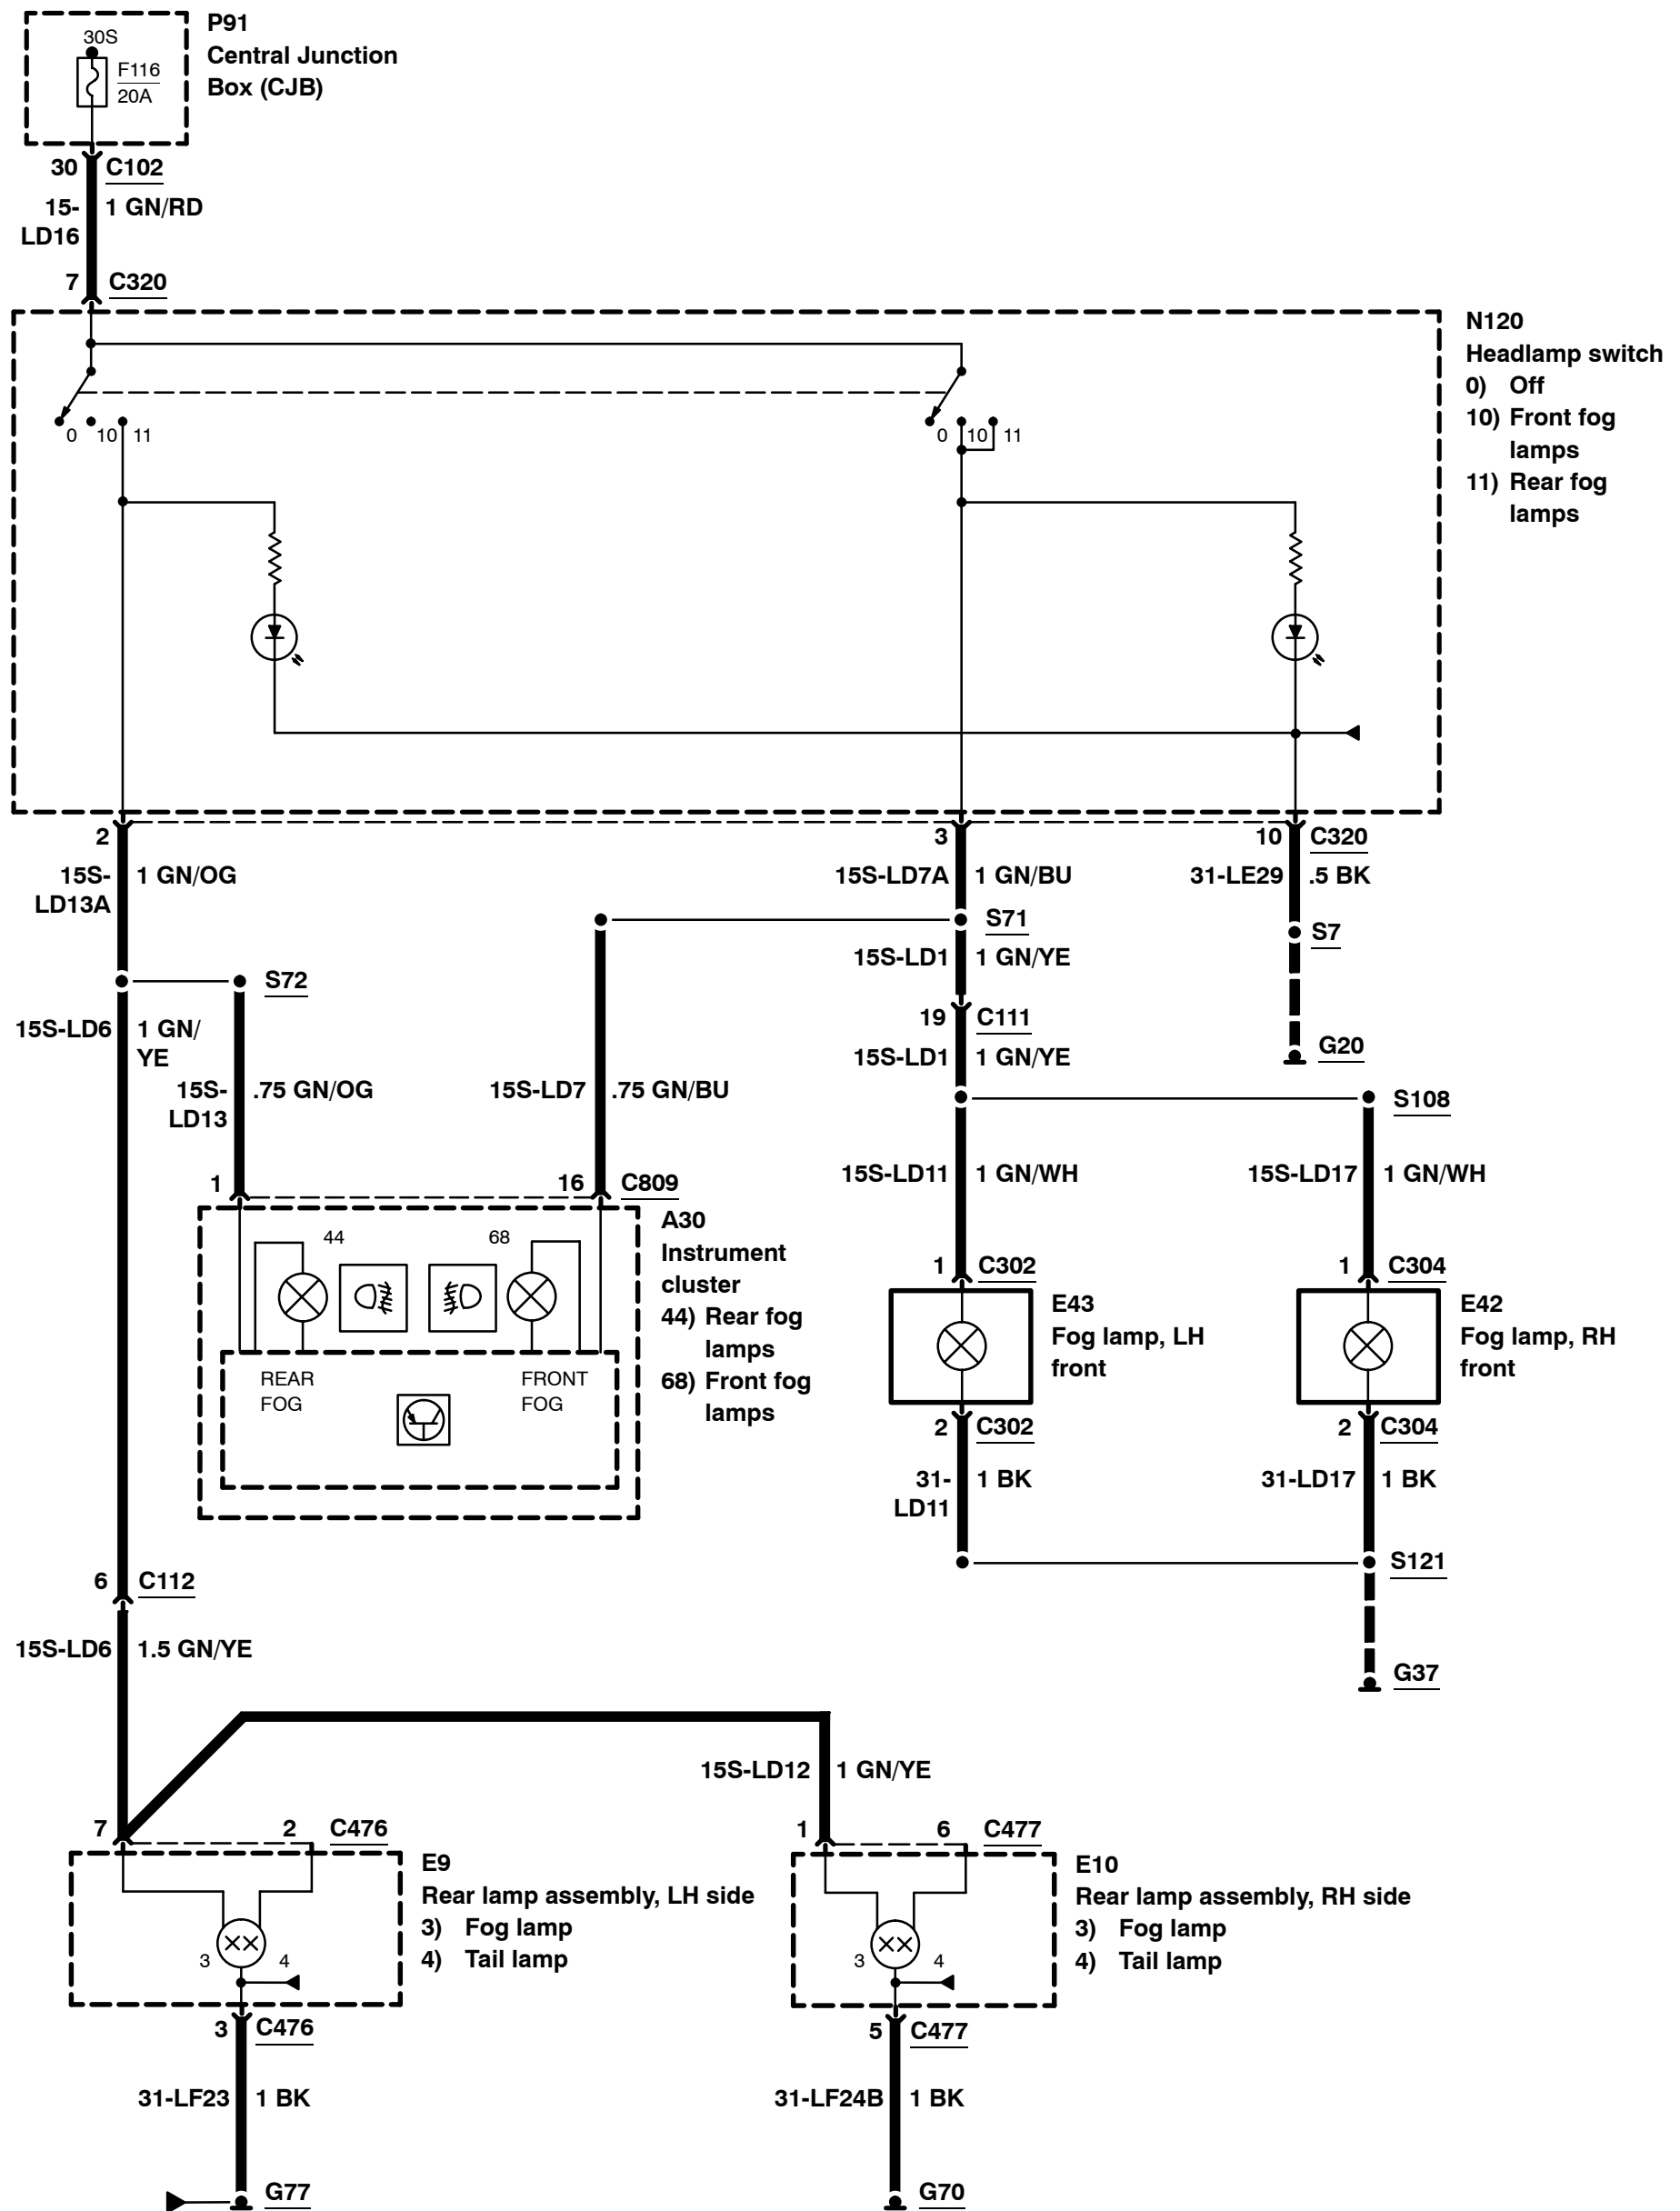


# Exterior Lighting – Fog lamps, 5-door model

02/2008  
417-01-00-26  
2008.25  
Focus

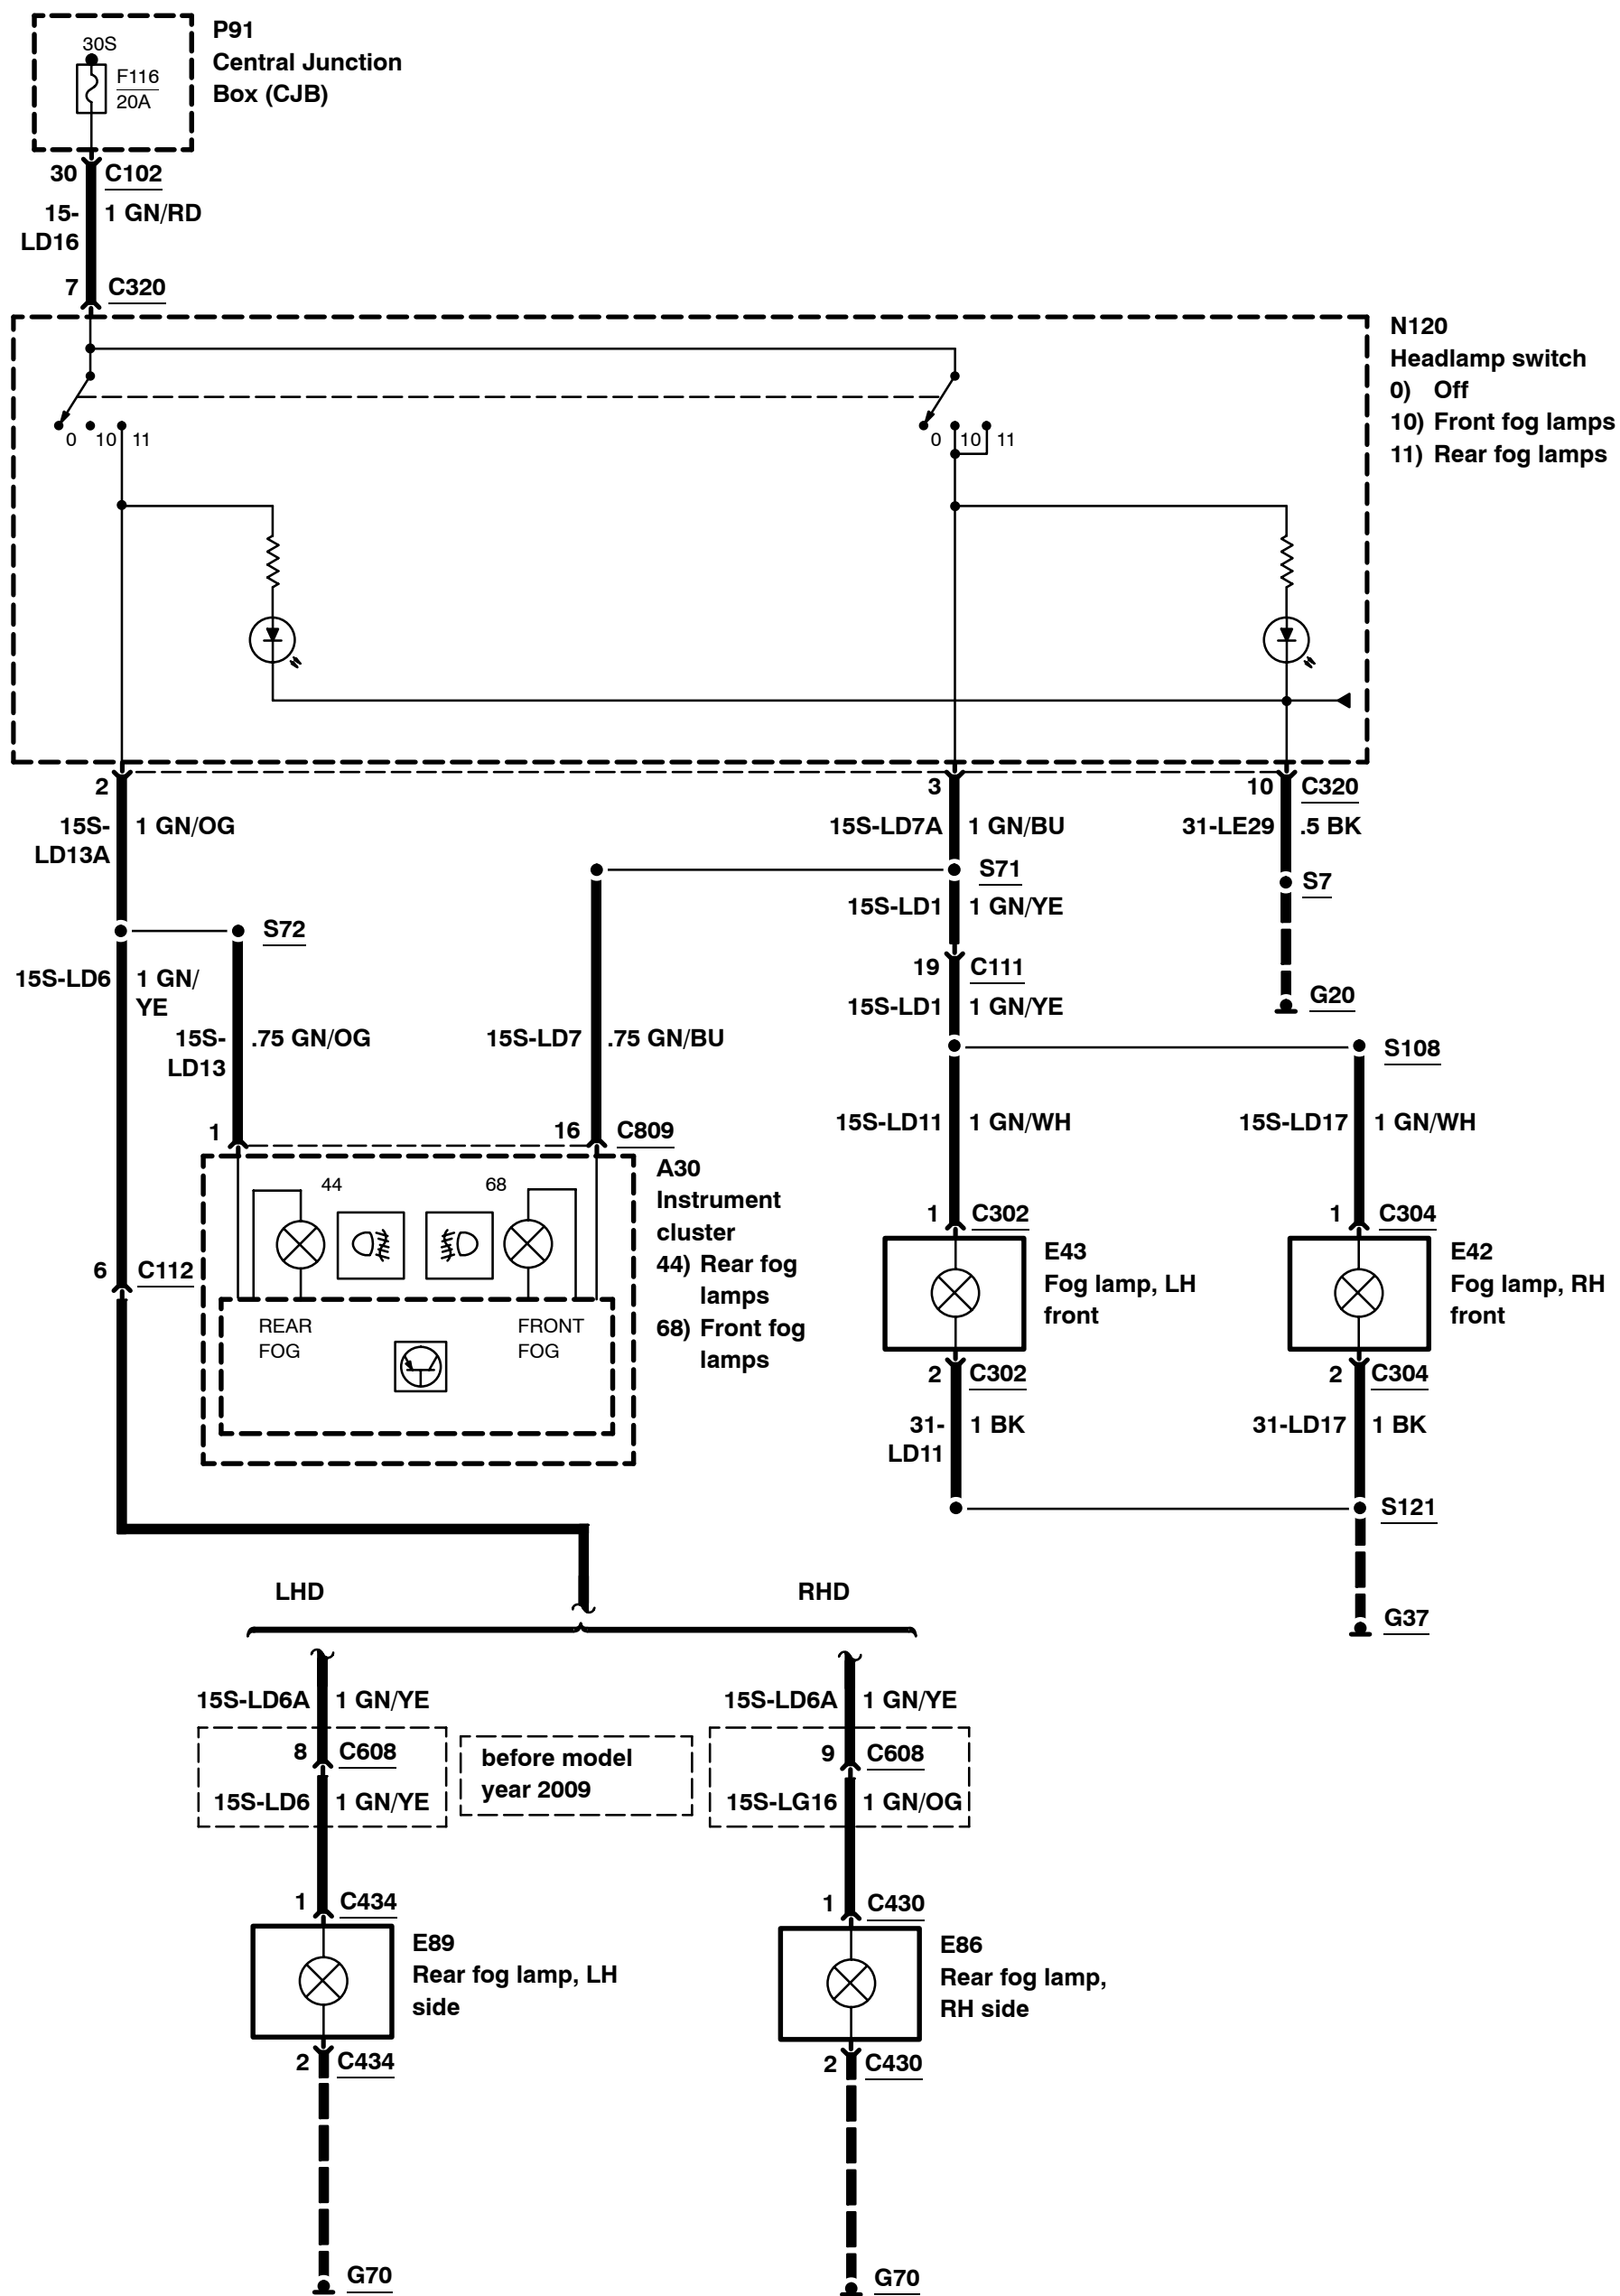


# Exterior Lighting – Reversing lamps, manual transmission, except manual transmission (MPS6), 4–door model

02/2008  
417-01-00-27  
2008.25  
Focus

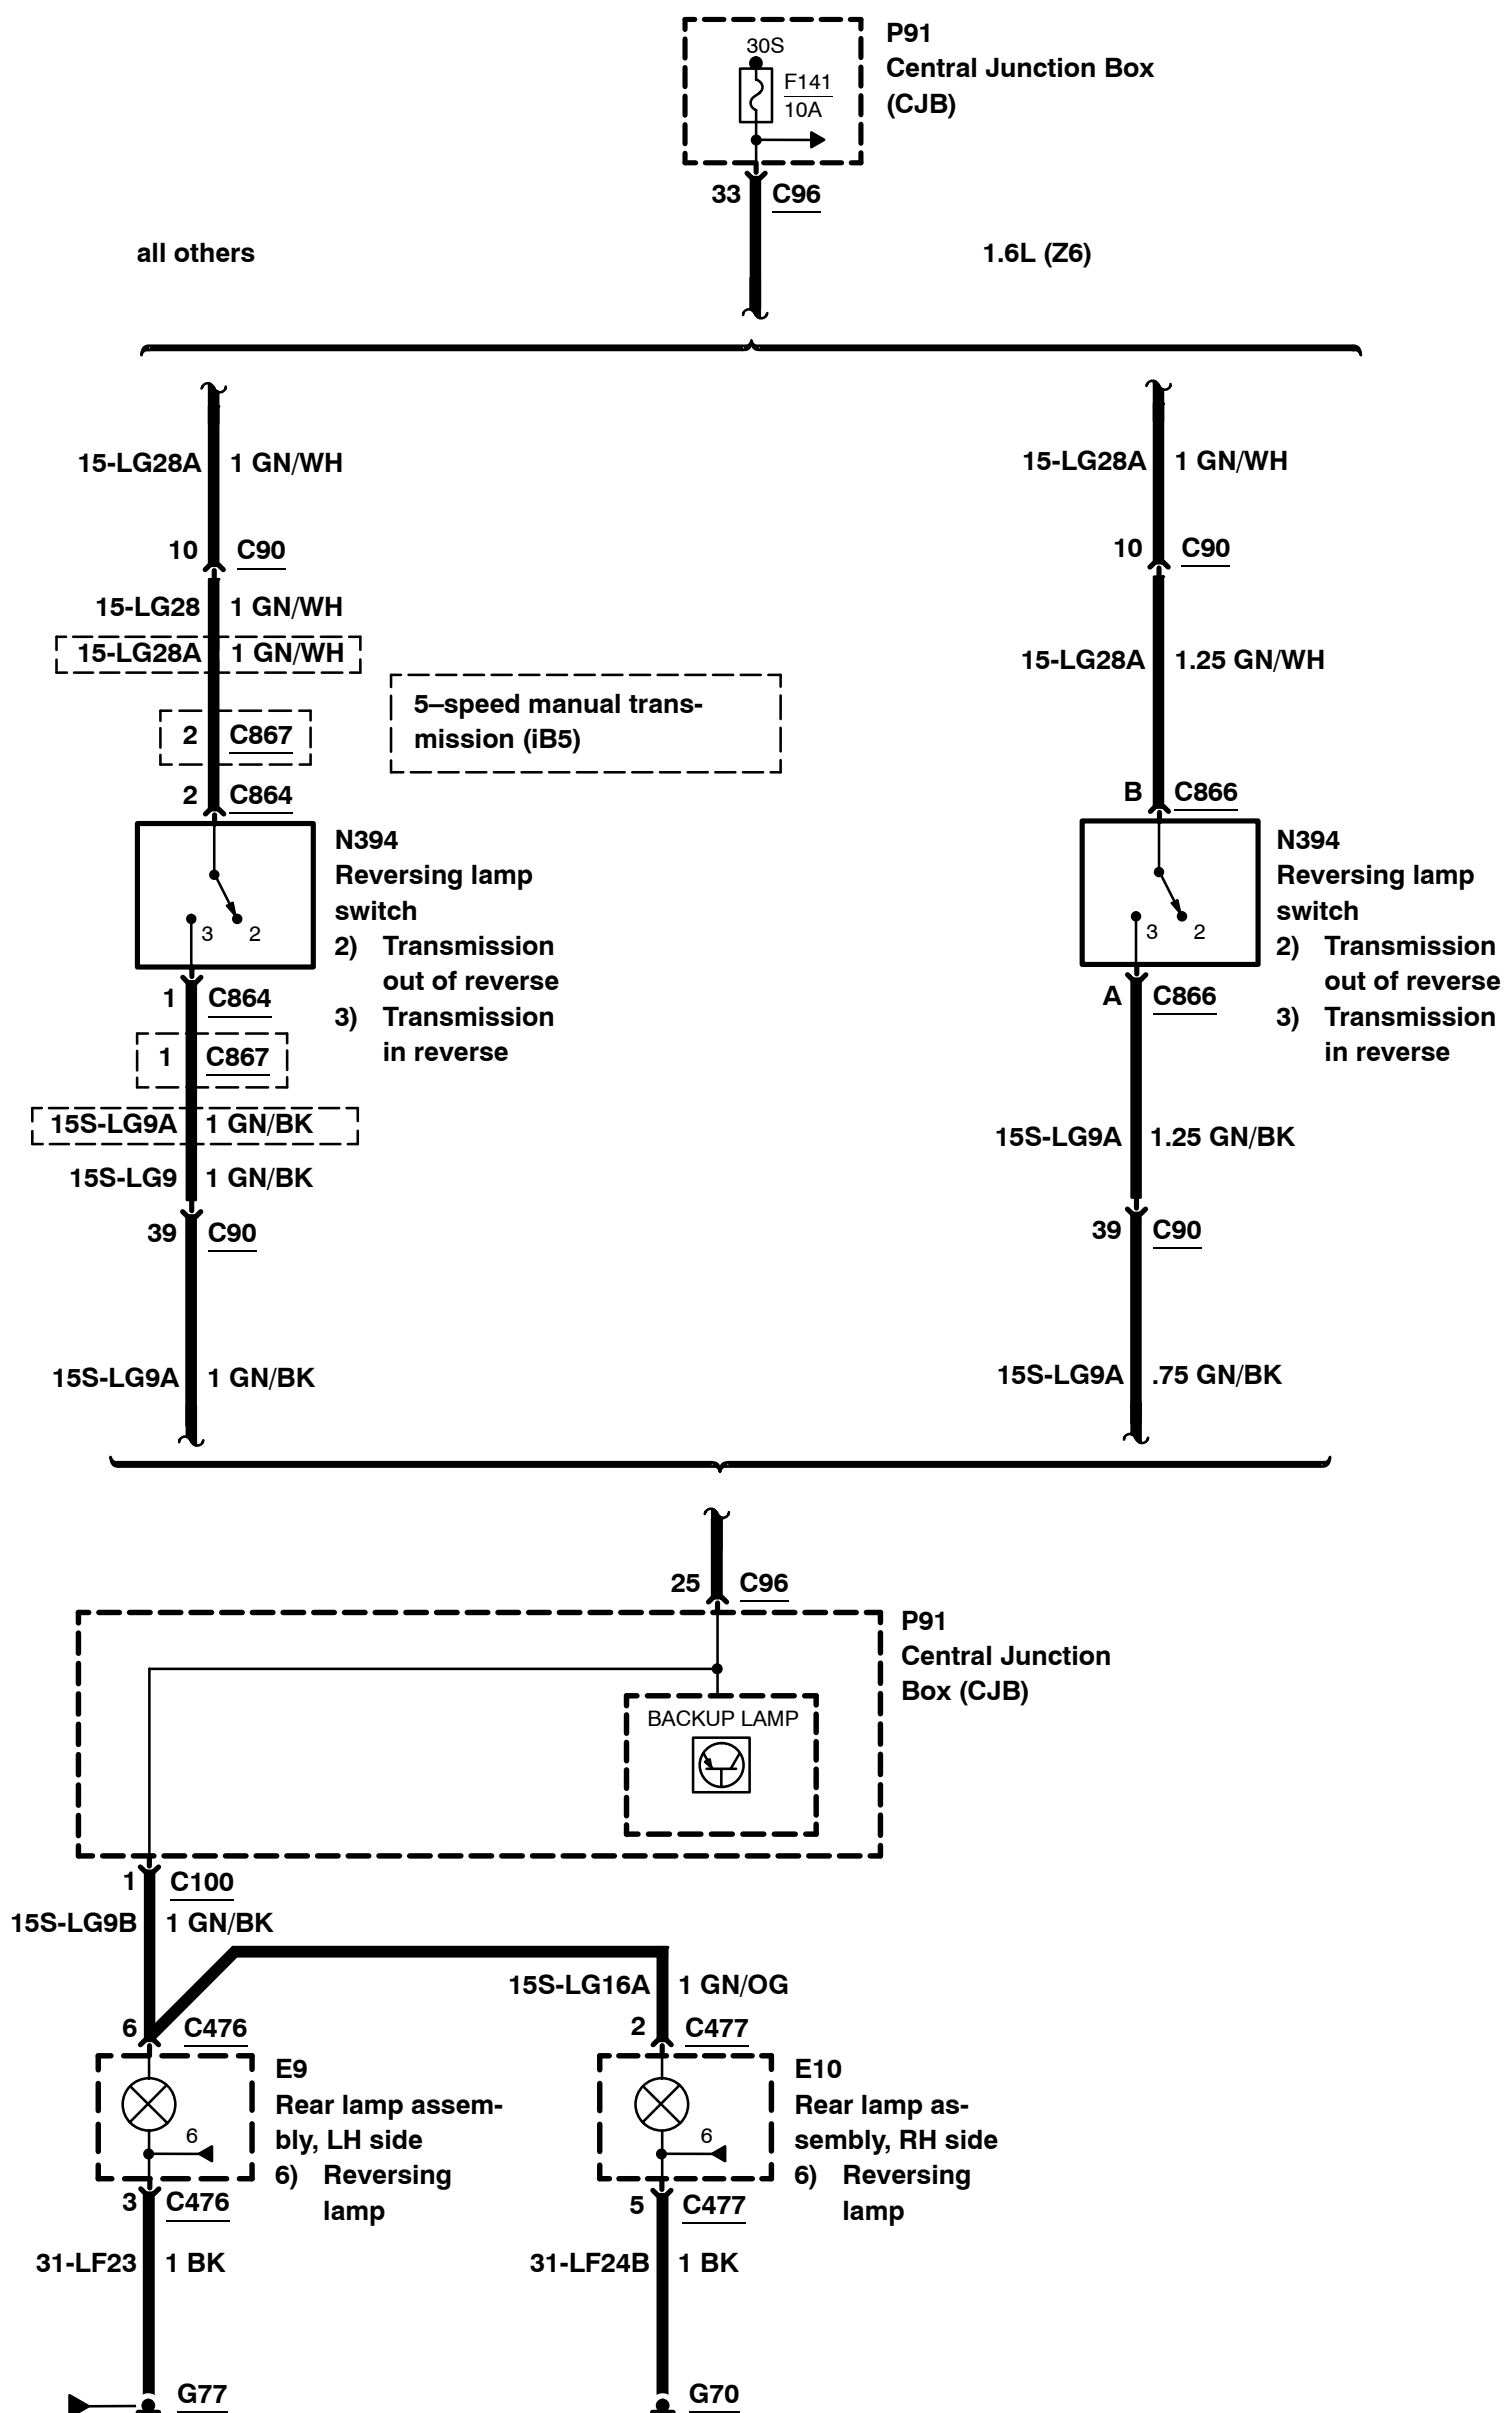

# Exterior Lighting – Reversing lamps, manual transmission, 5–door model


02/2008  
417-01-00-28  
2008.25  
Focus

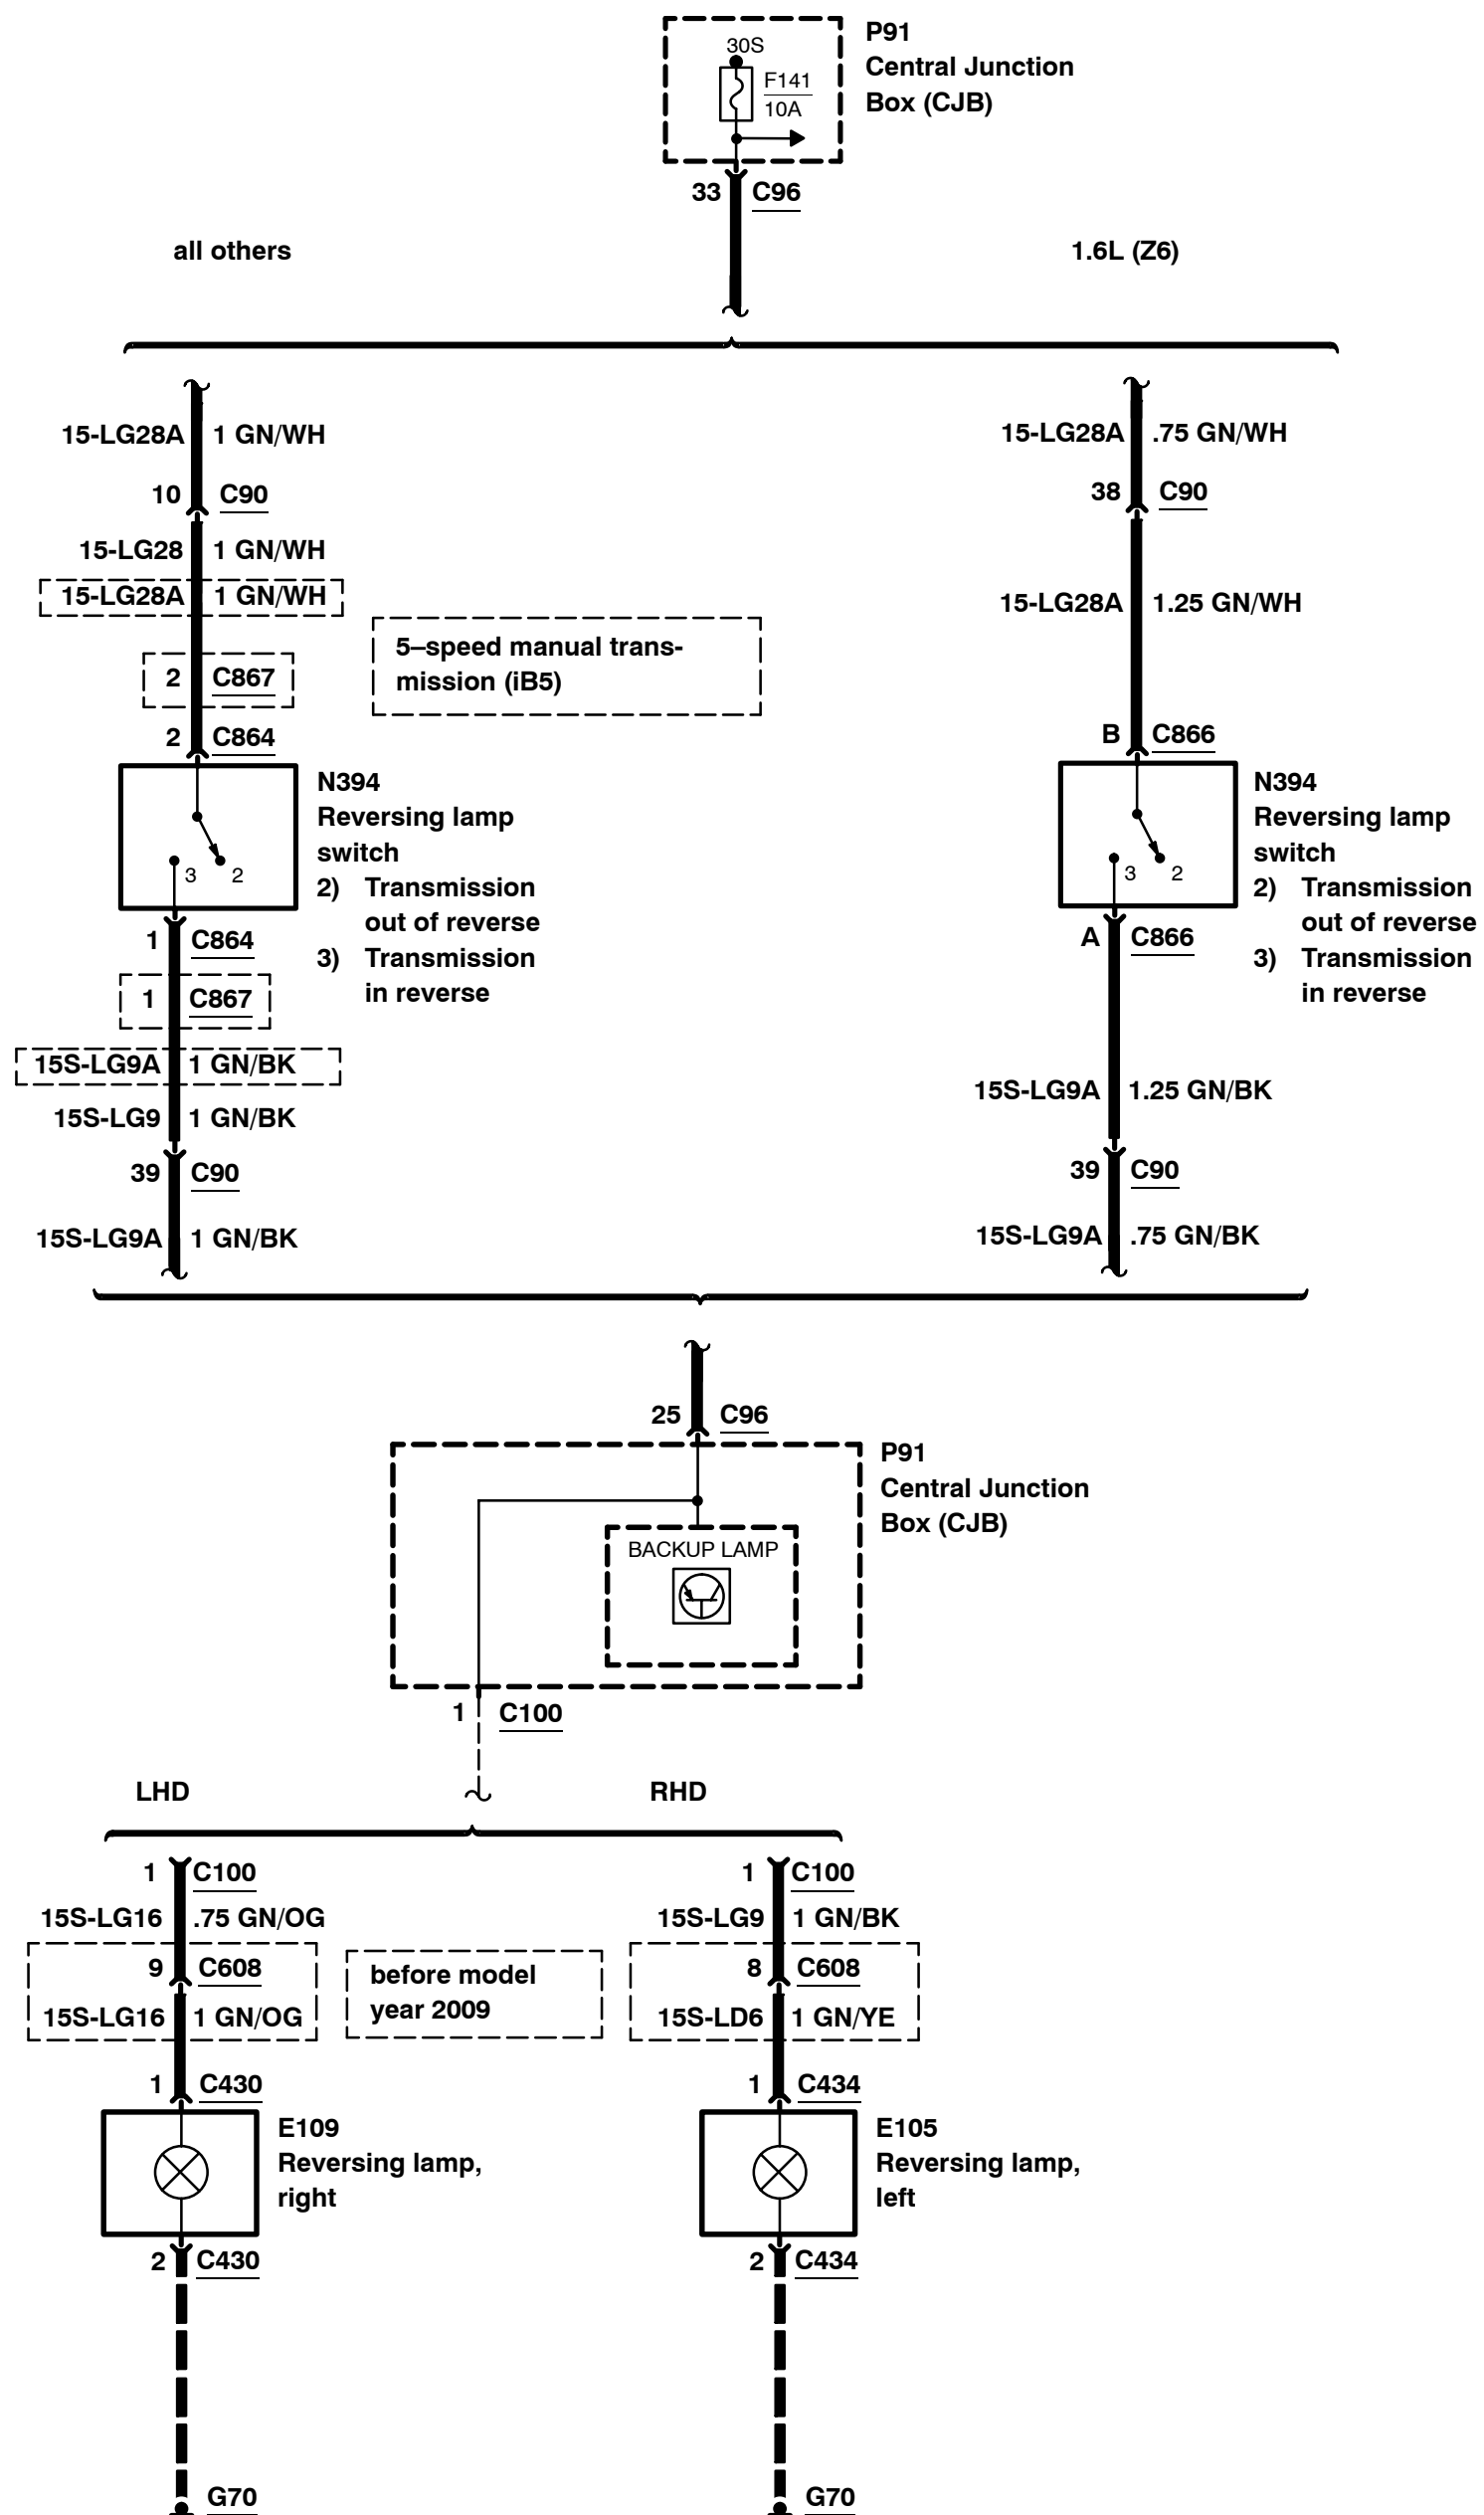




# Exterior Lighting – Reversing lamps, automatic transmission, manual transmission (MPS6), 4-door model

02/2008  
417-01-00-29  
2008.25  
Focus

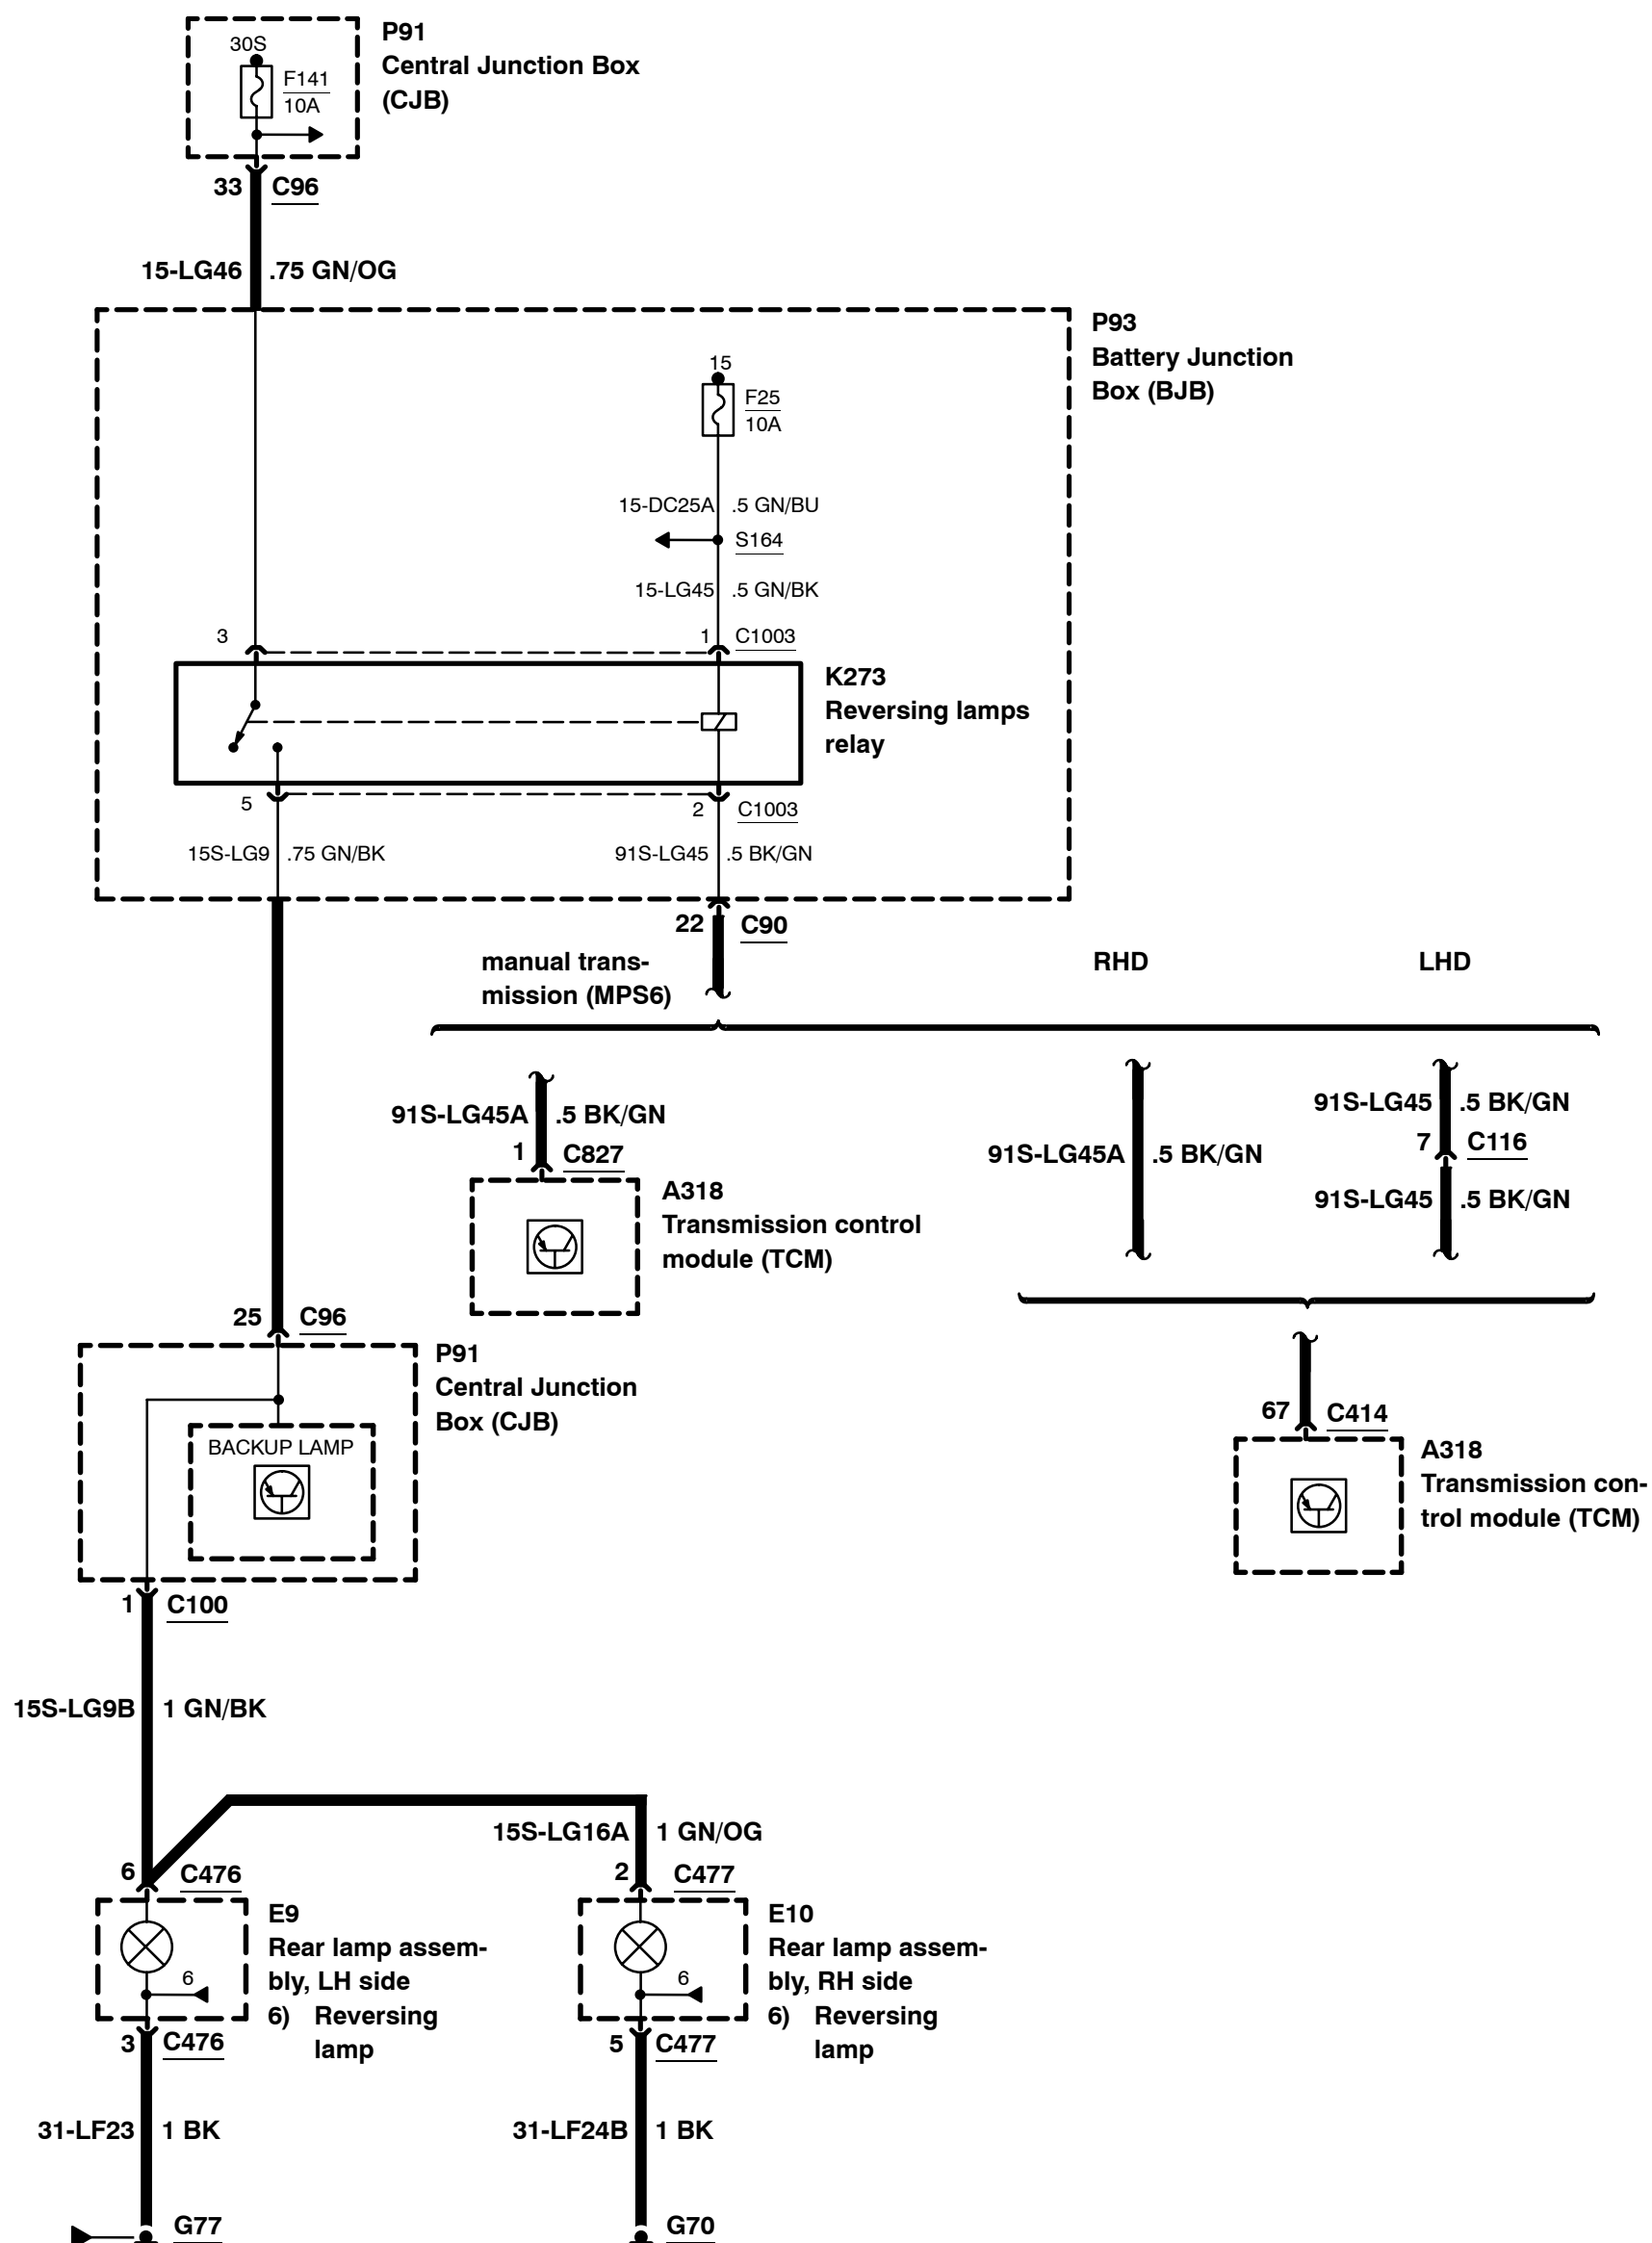

Exterior Lighting – Reversing lamps, automatic transmission, manual transmission (MPS6), 5-door model


02/2008  
417-01-00-30  
2008.25  
Focus

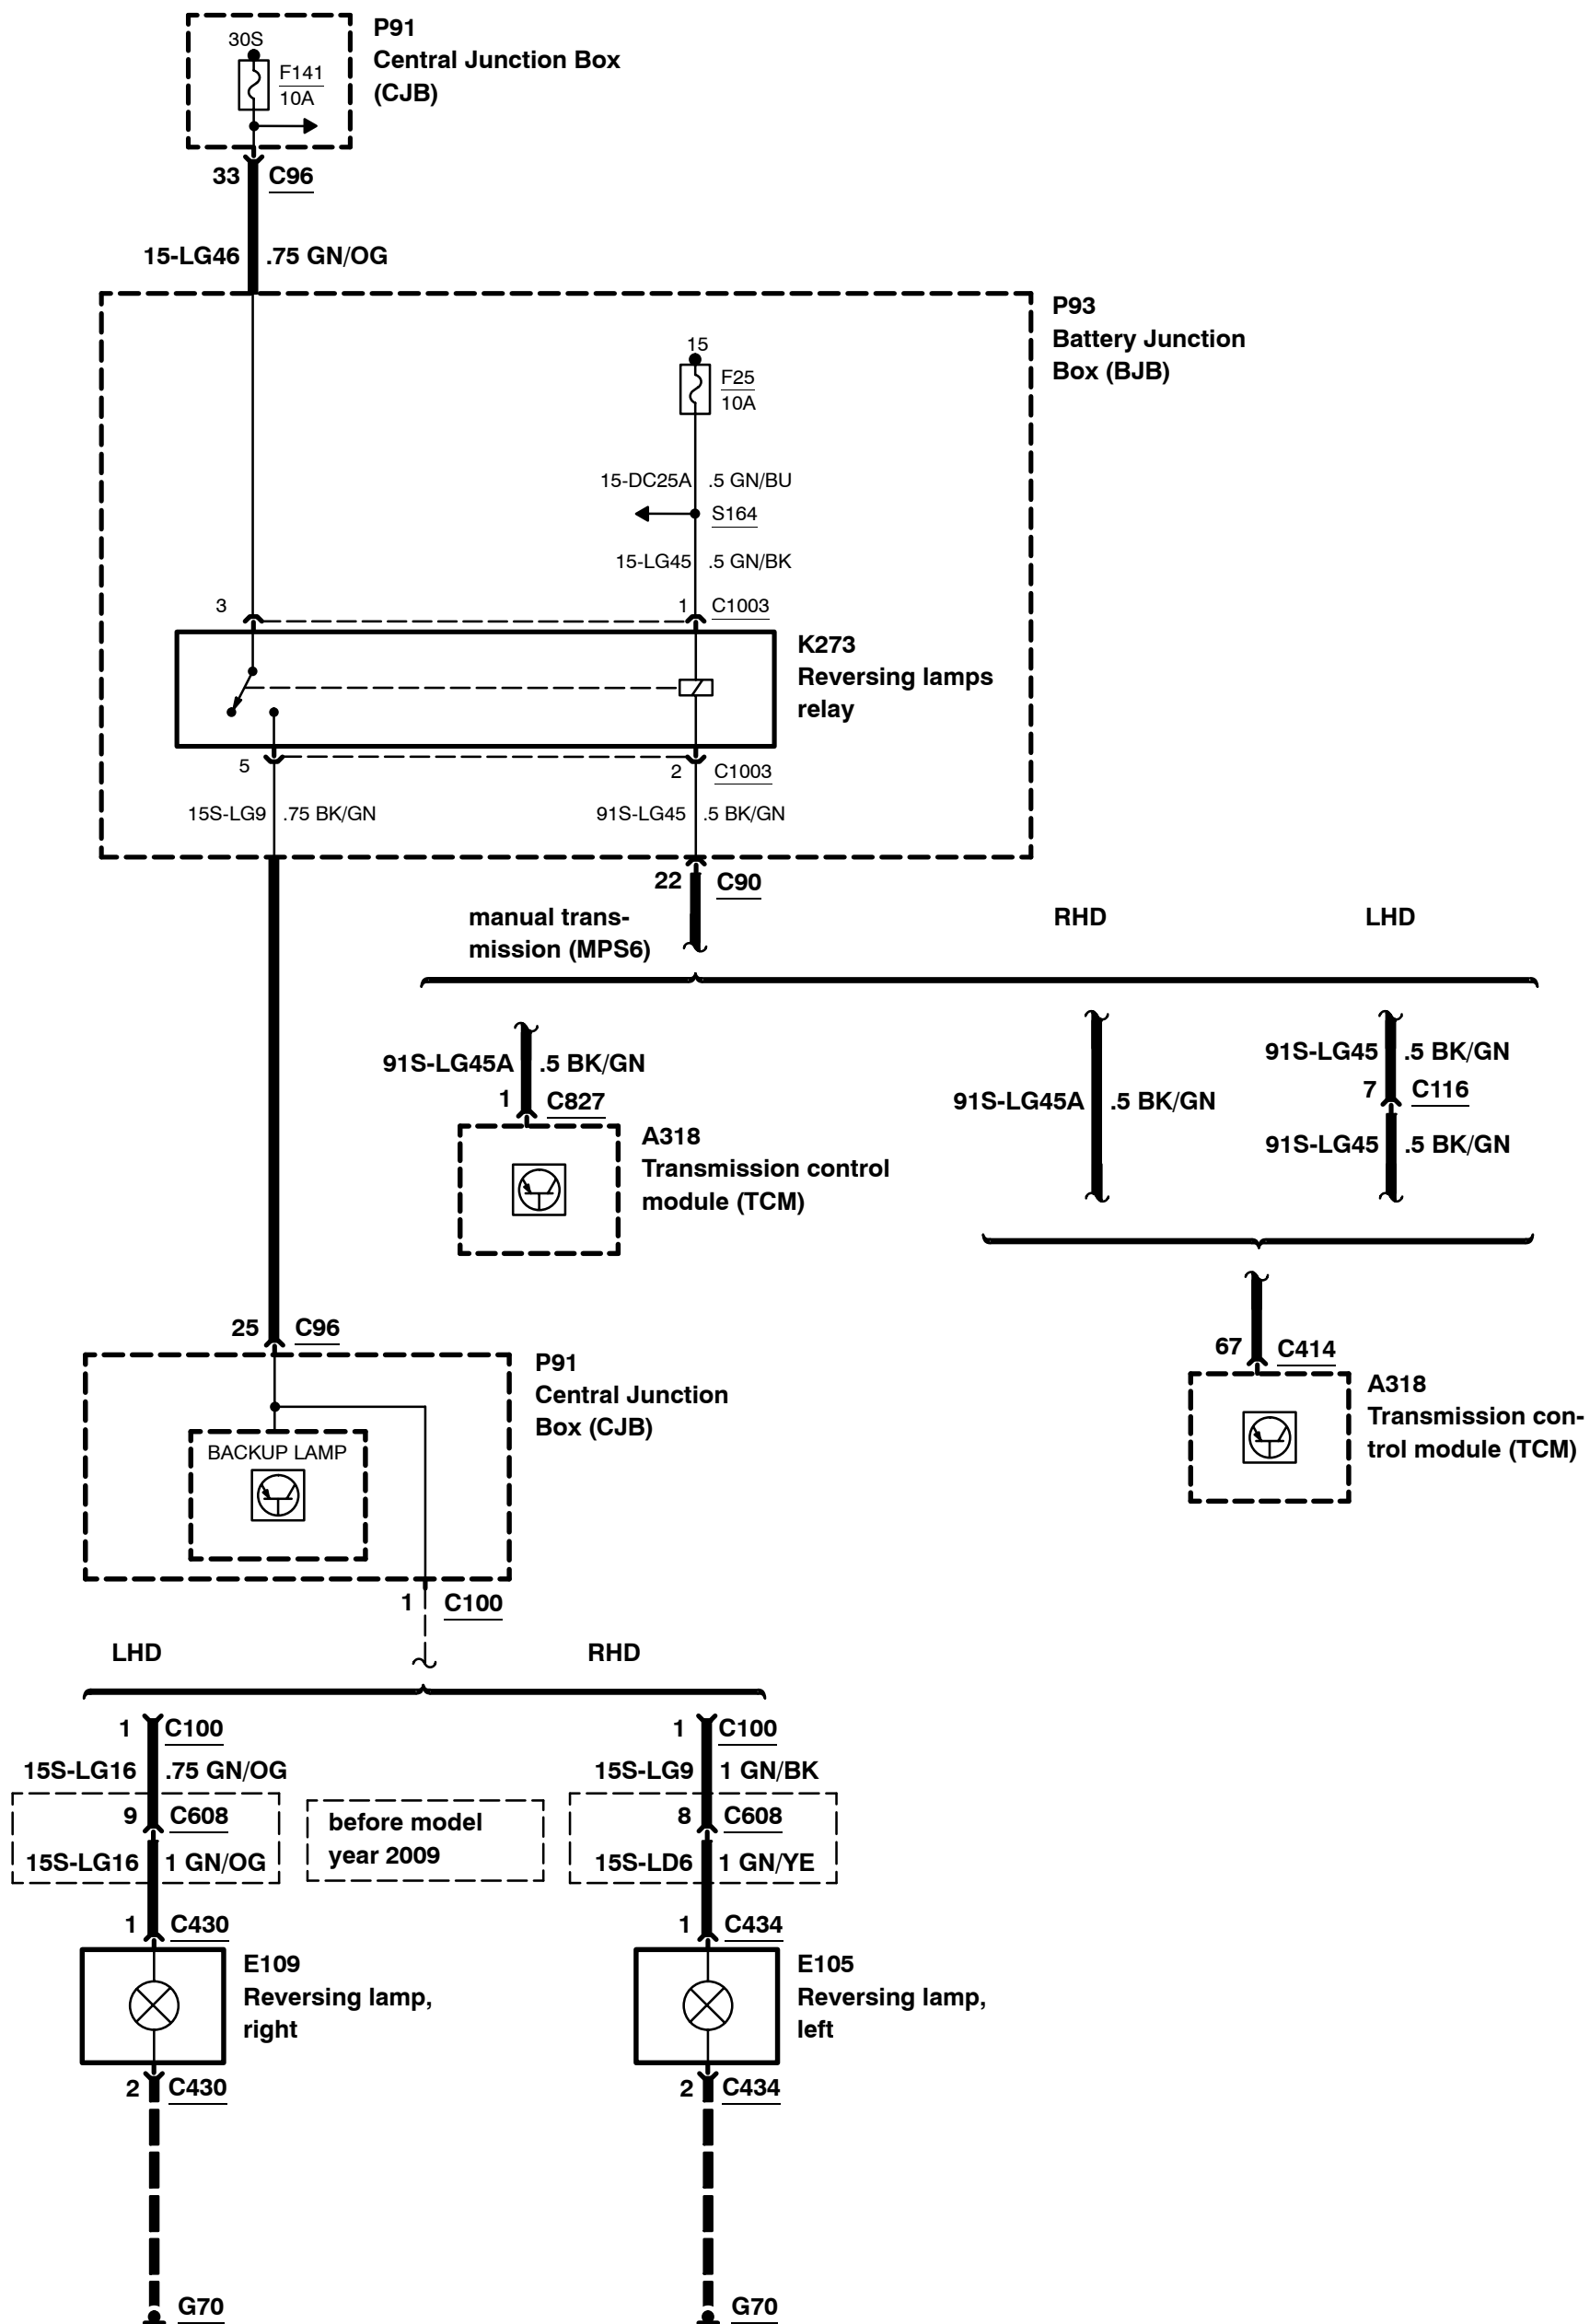




Exterior Lighting – Reversing lamps, automatic transmission, 1.6L (Z6), 4–door model


02/2008  
417-01-00-31  
2008.25  
Focus

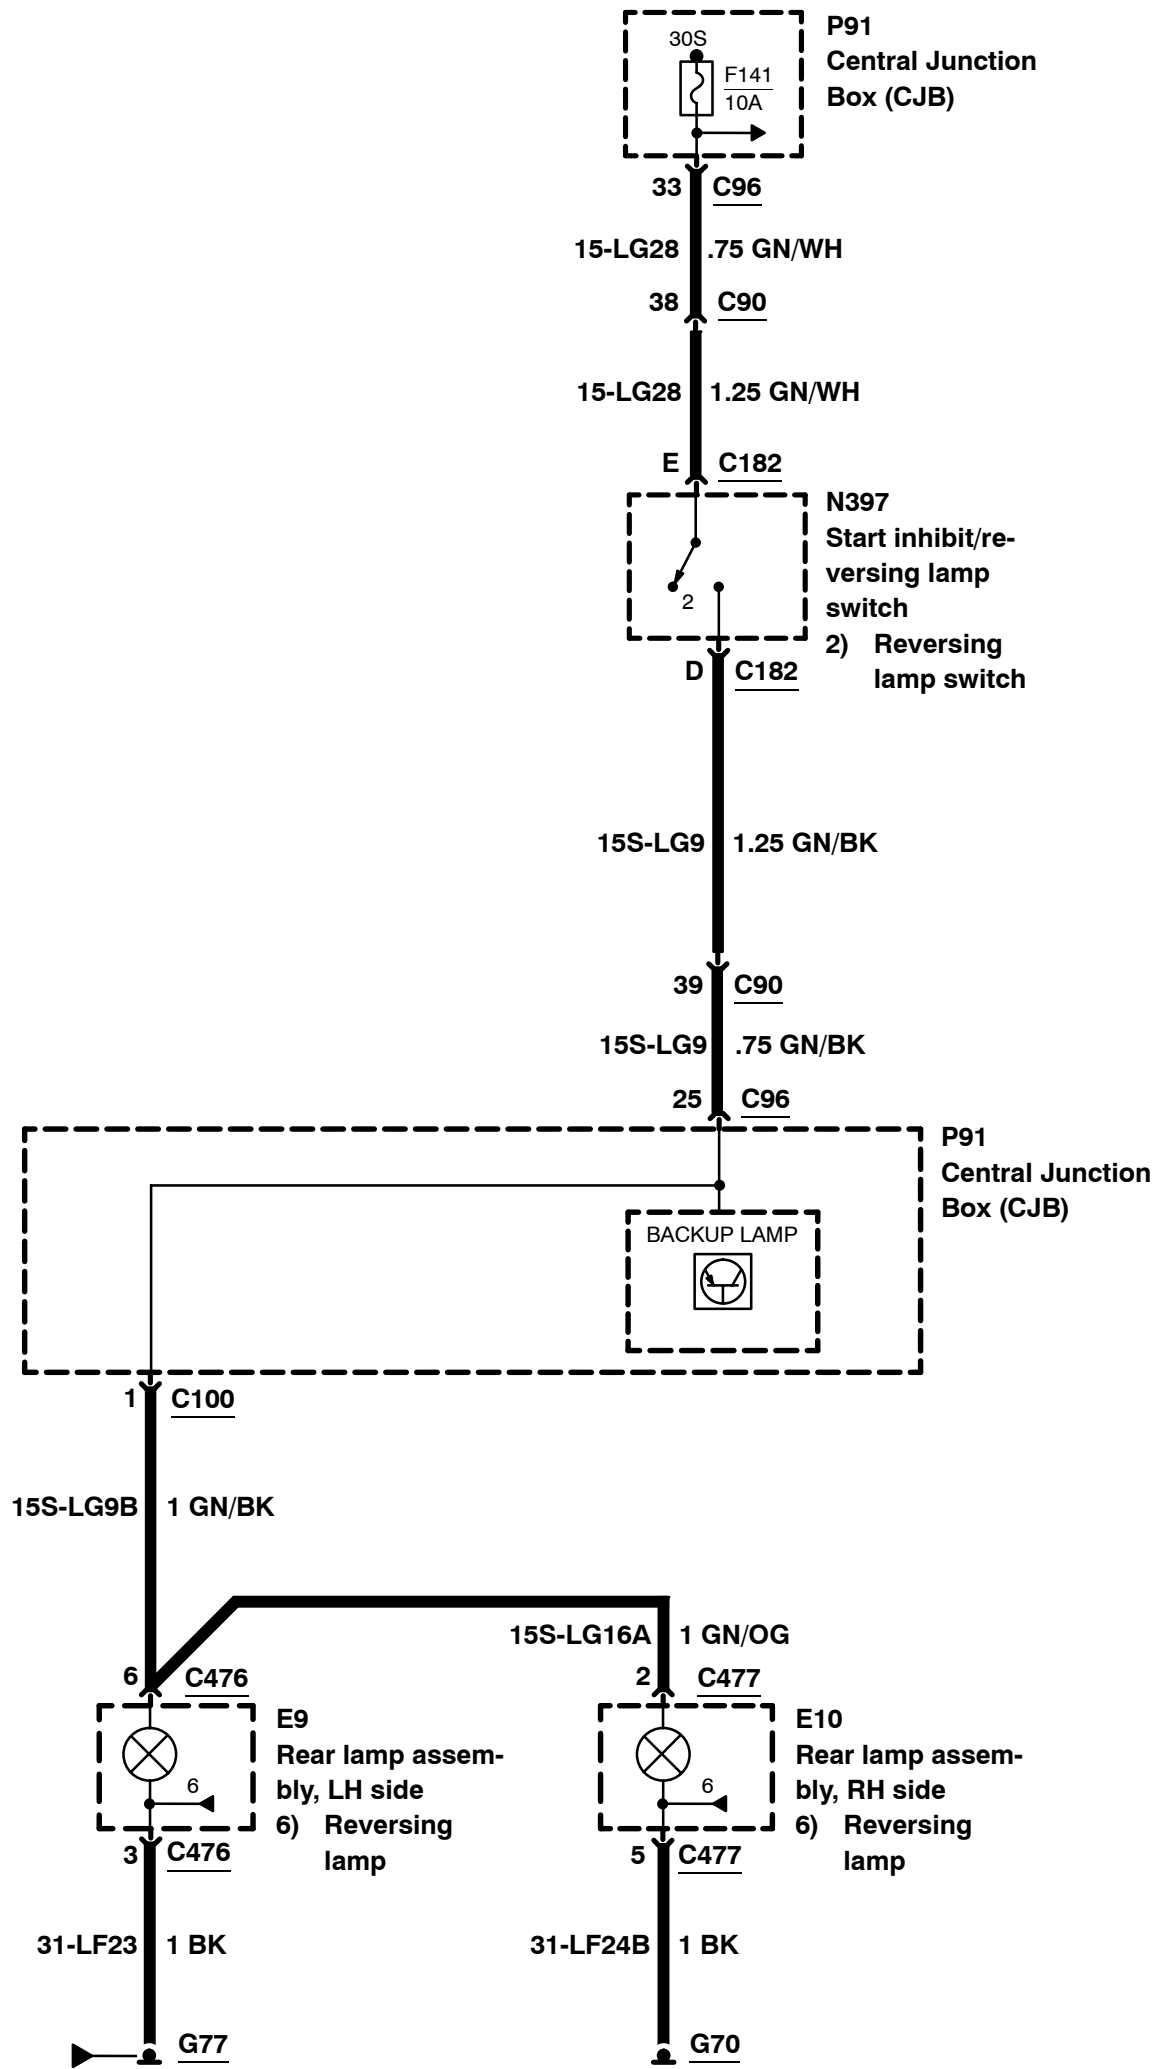


Exterior Lighting – Reversing lamps, automatic transmission, 1.6L (Z6), 5–door model

02/2008  
417-01-00-32  
2008.25  
Focus

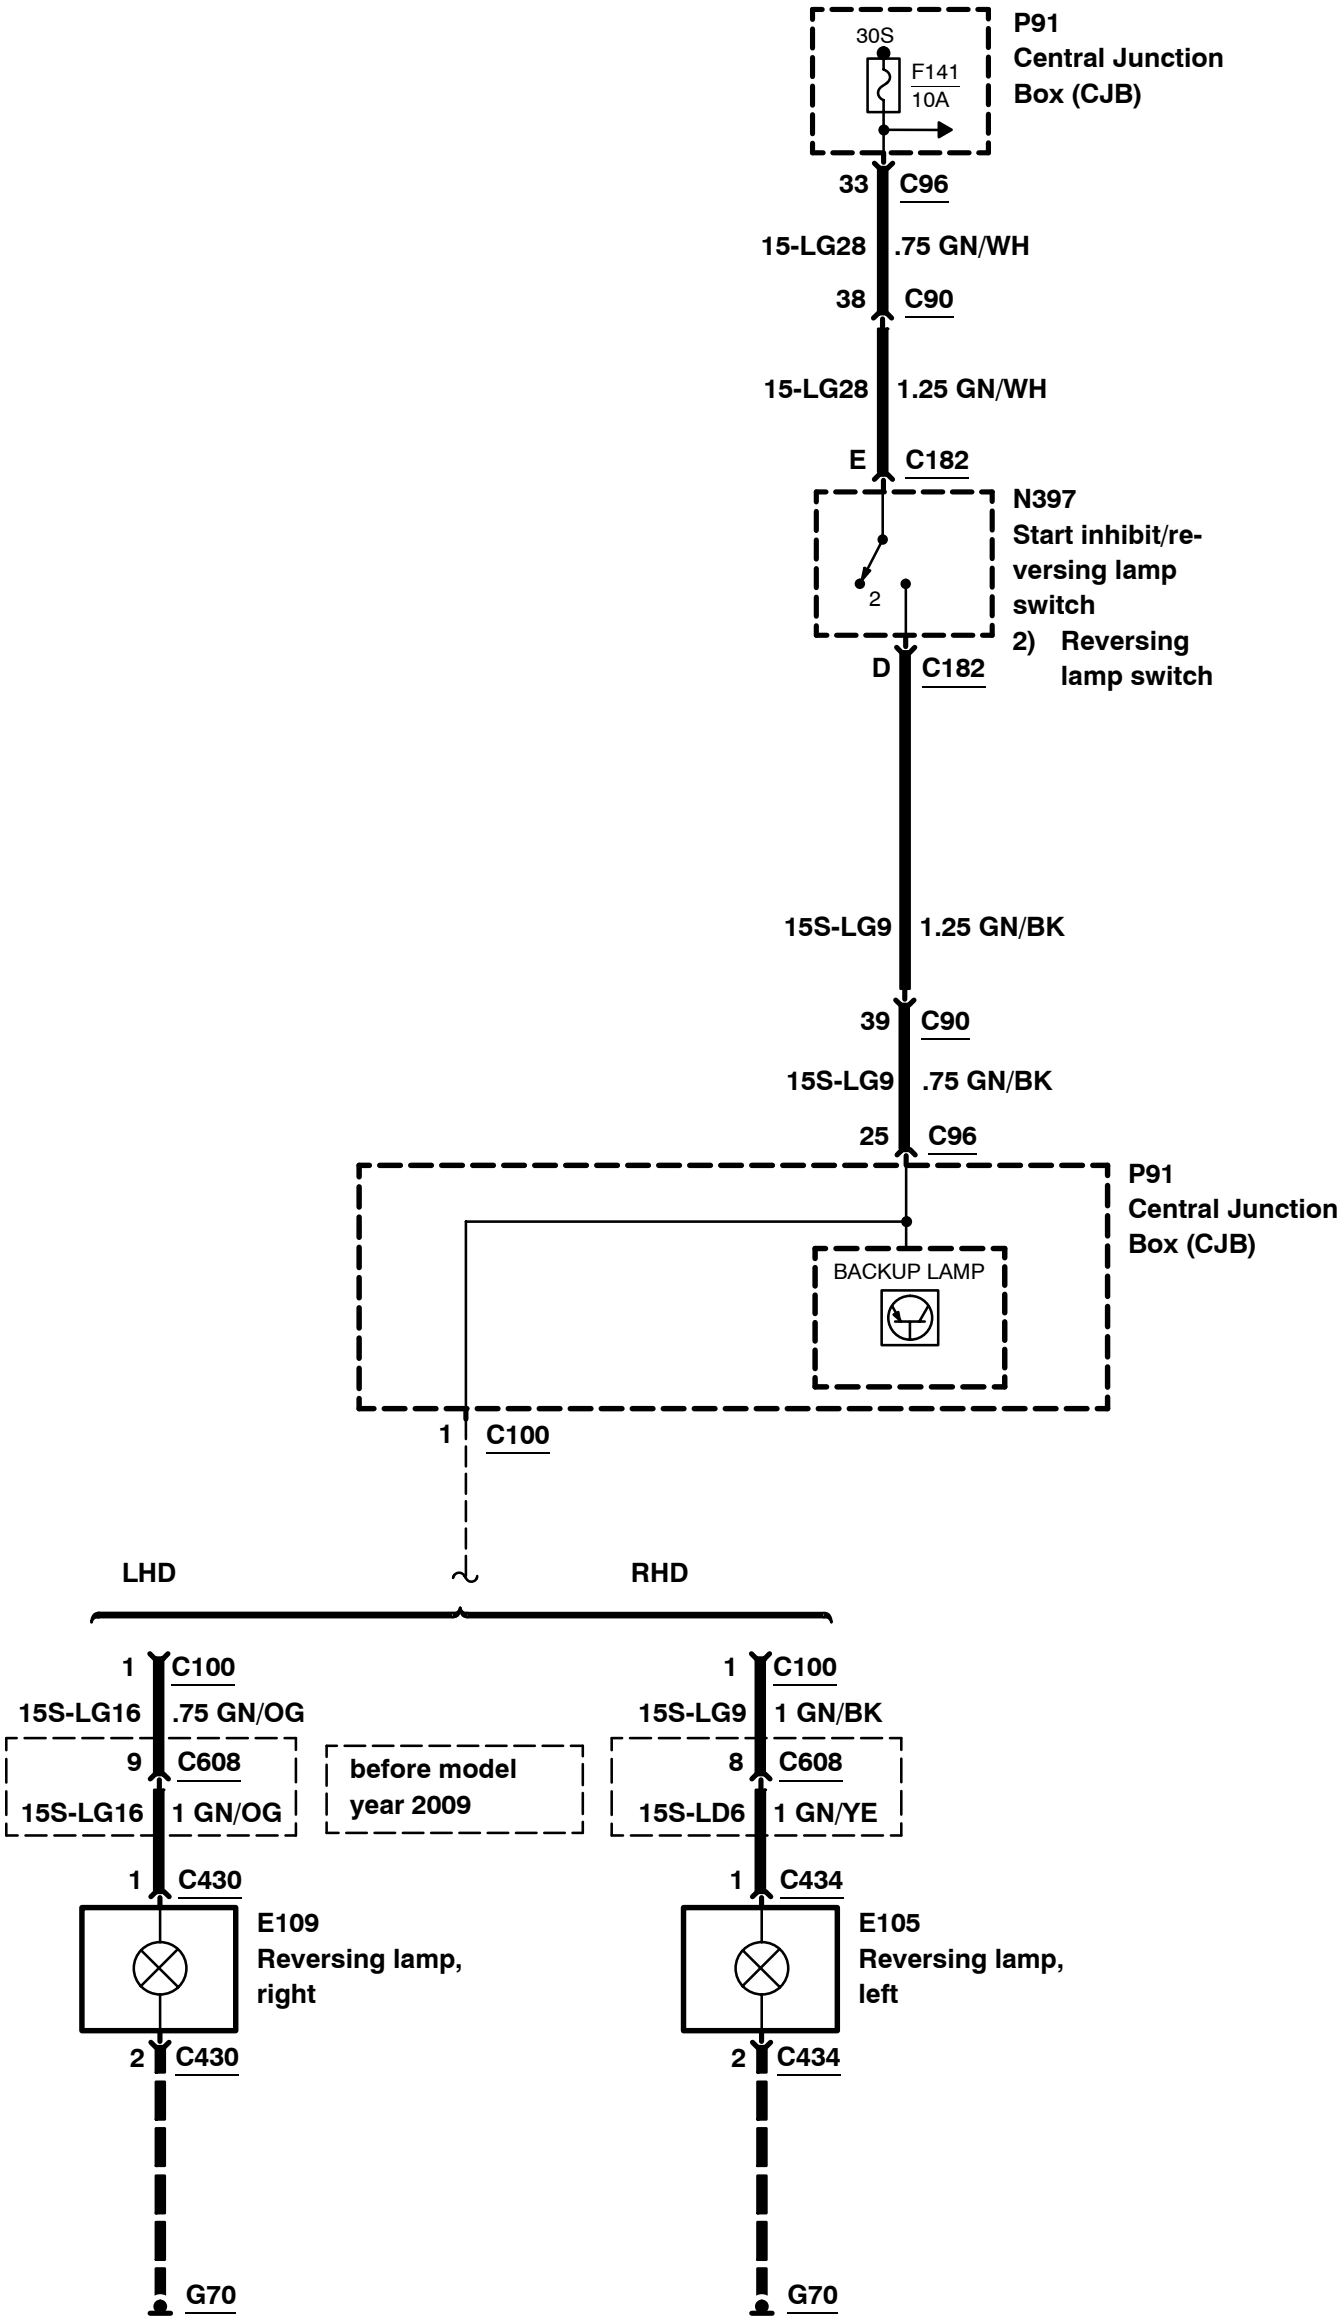


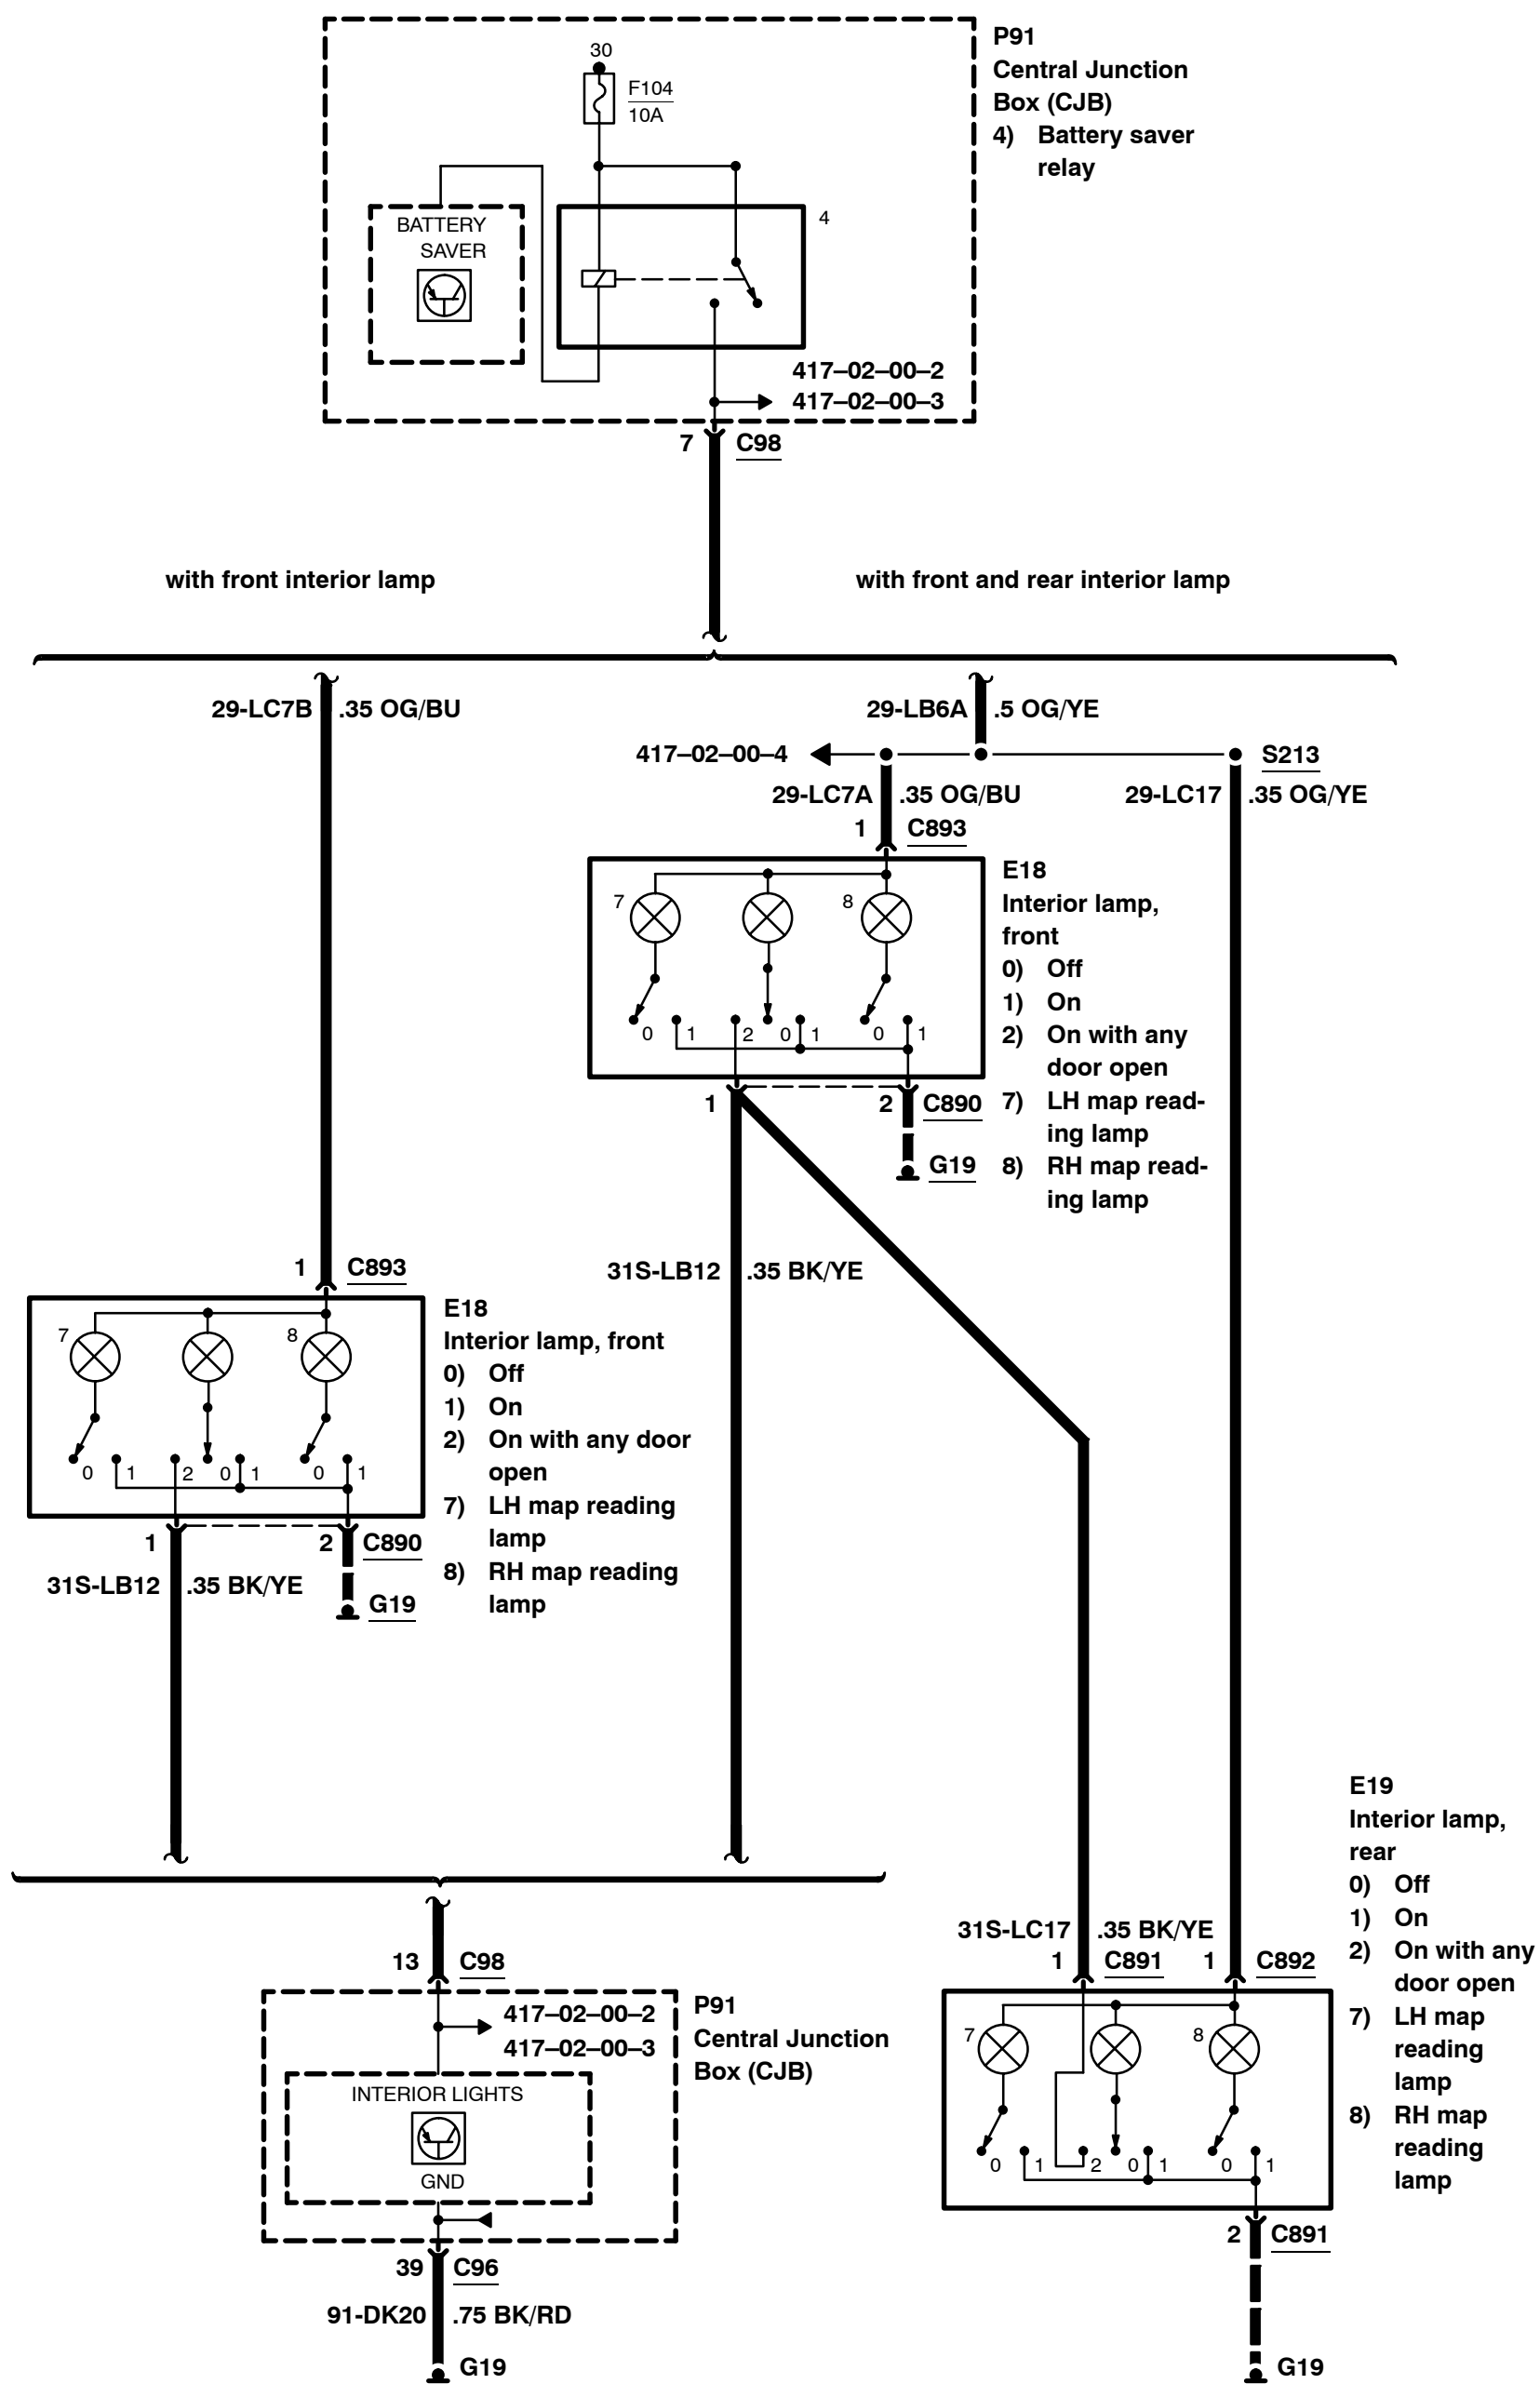

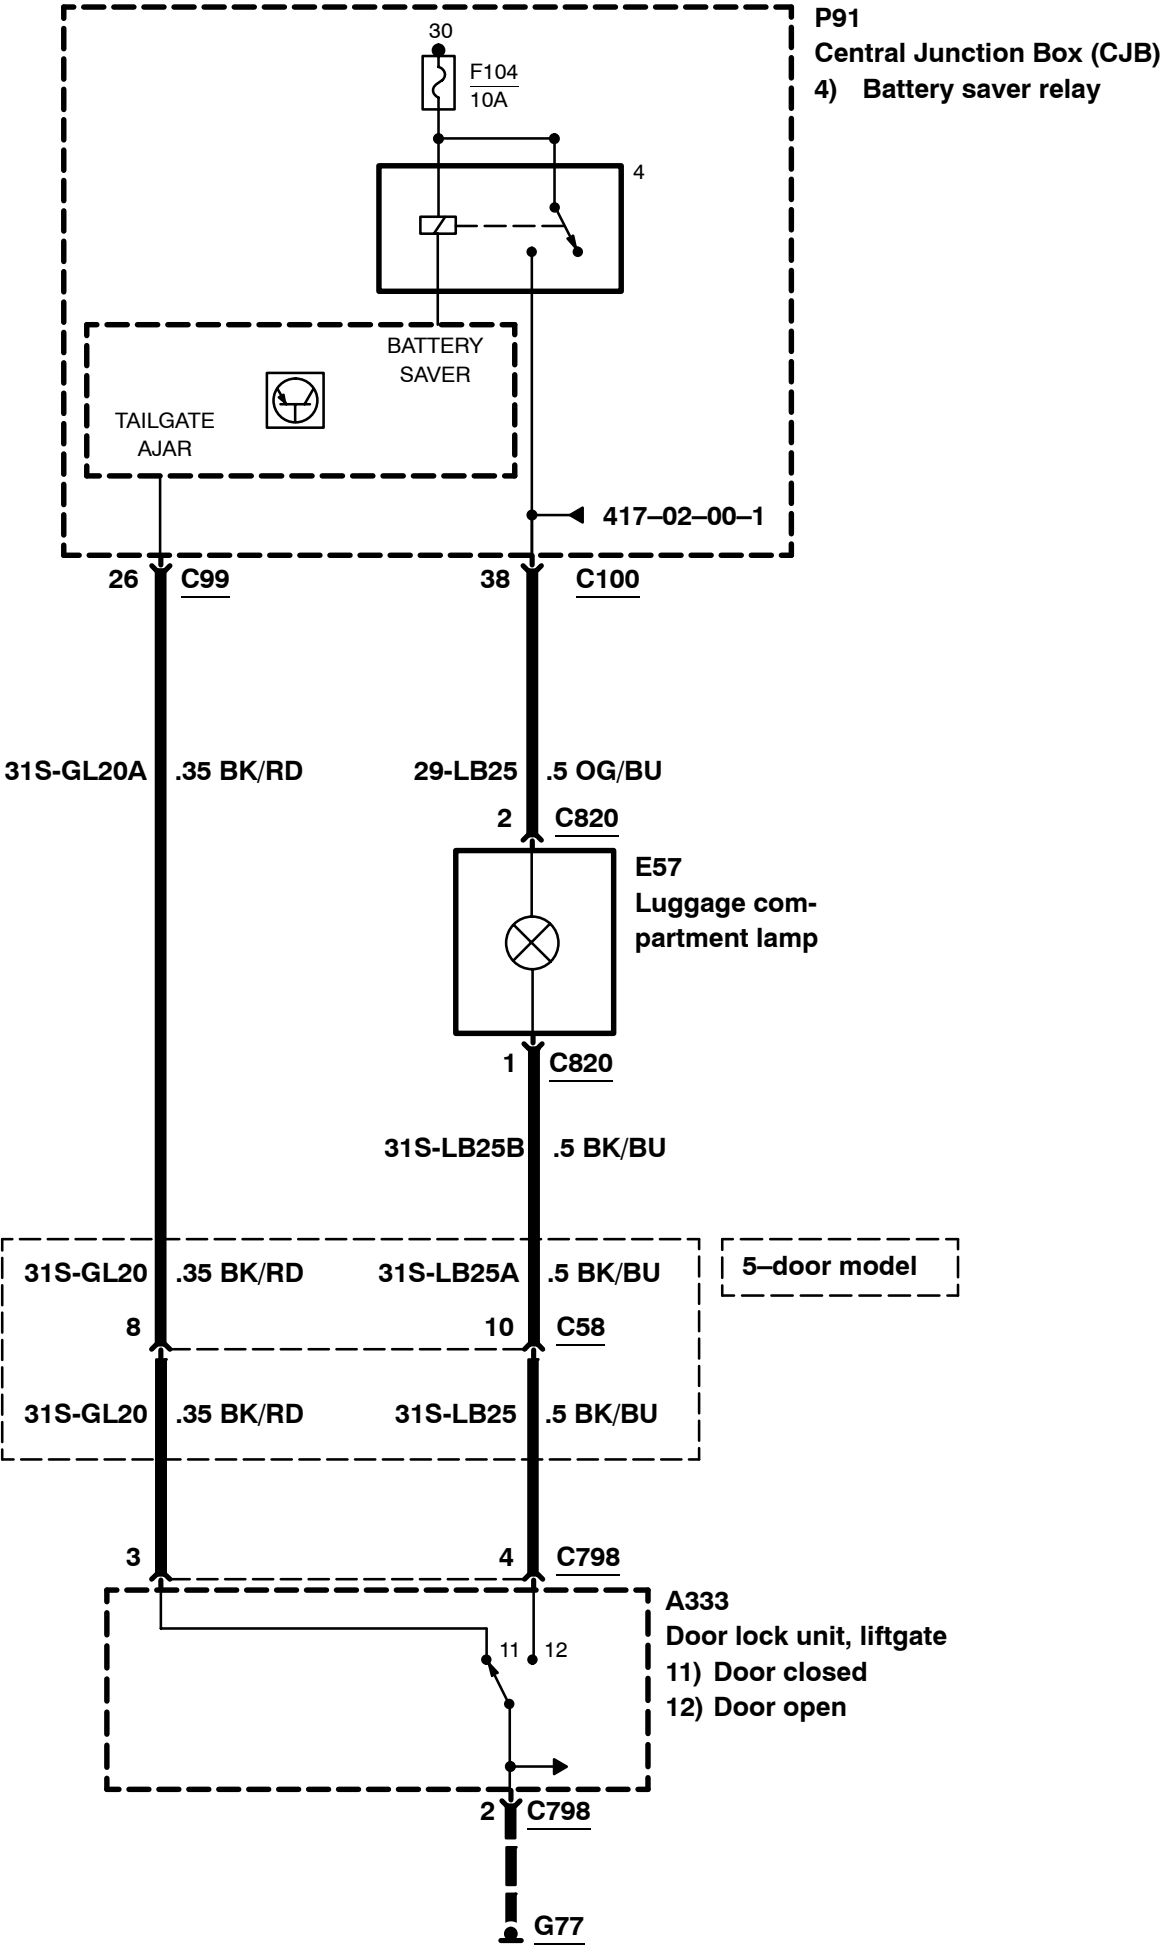


# Interior Lighting

02/2008  
417-02-00-3  
2008.25  
Focus

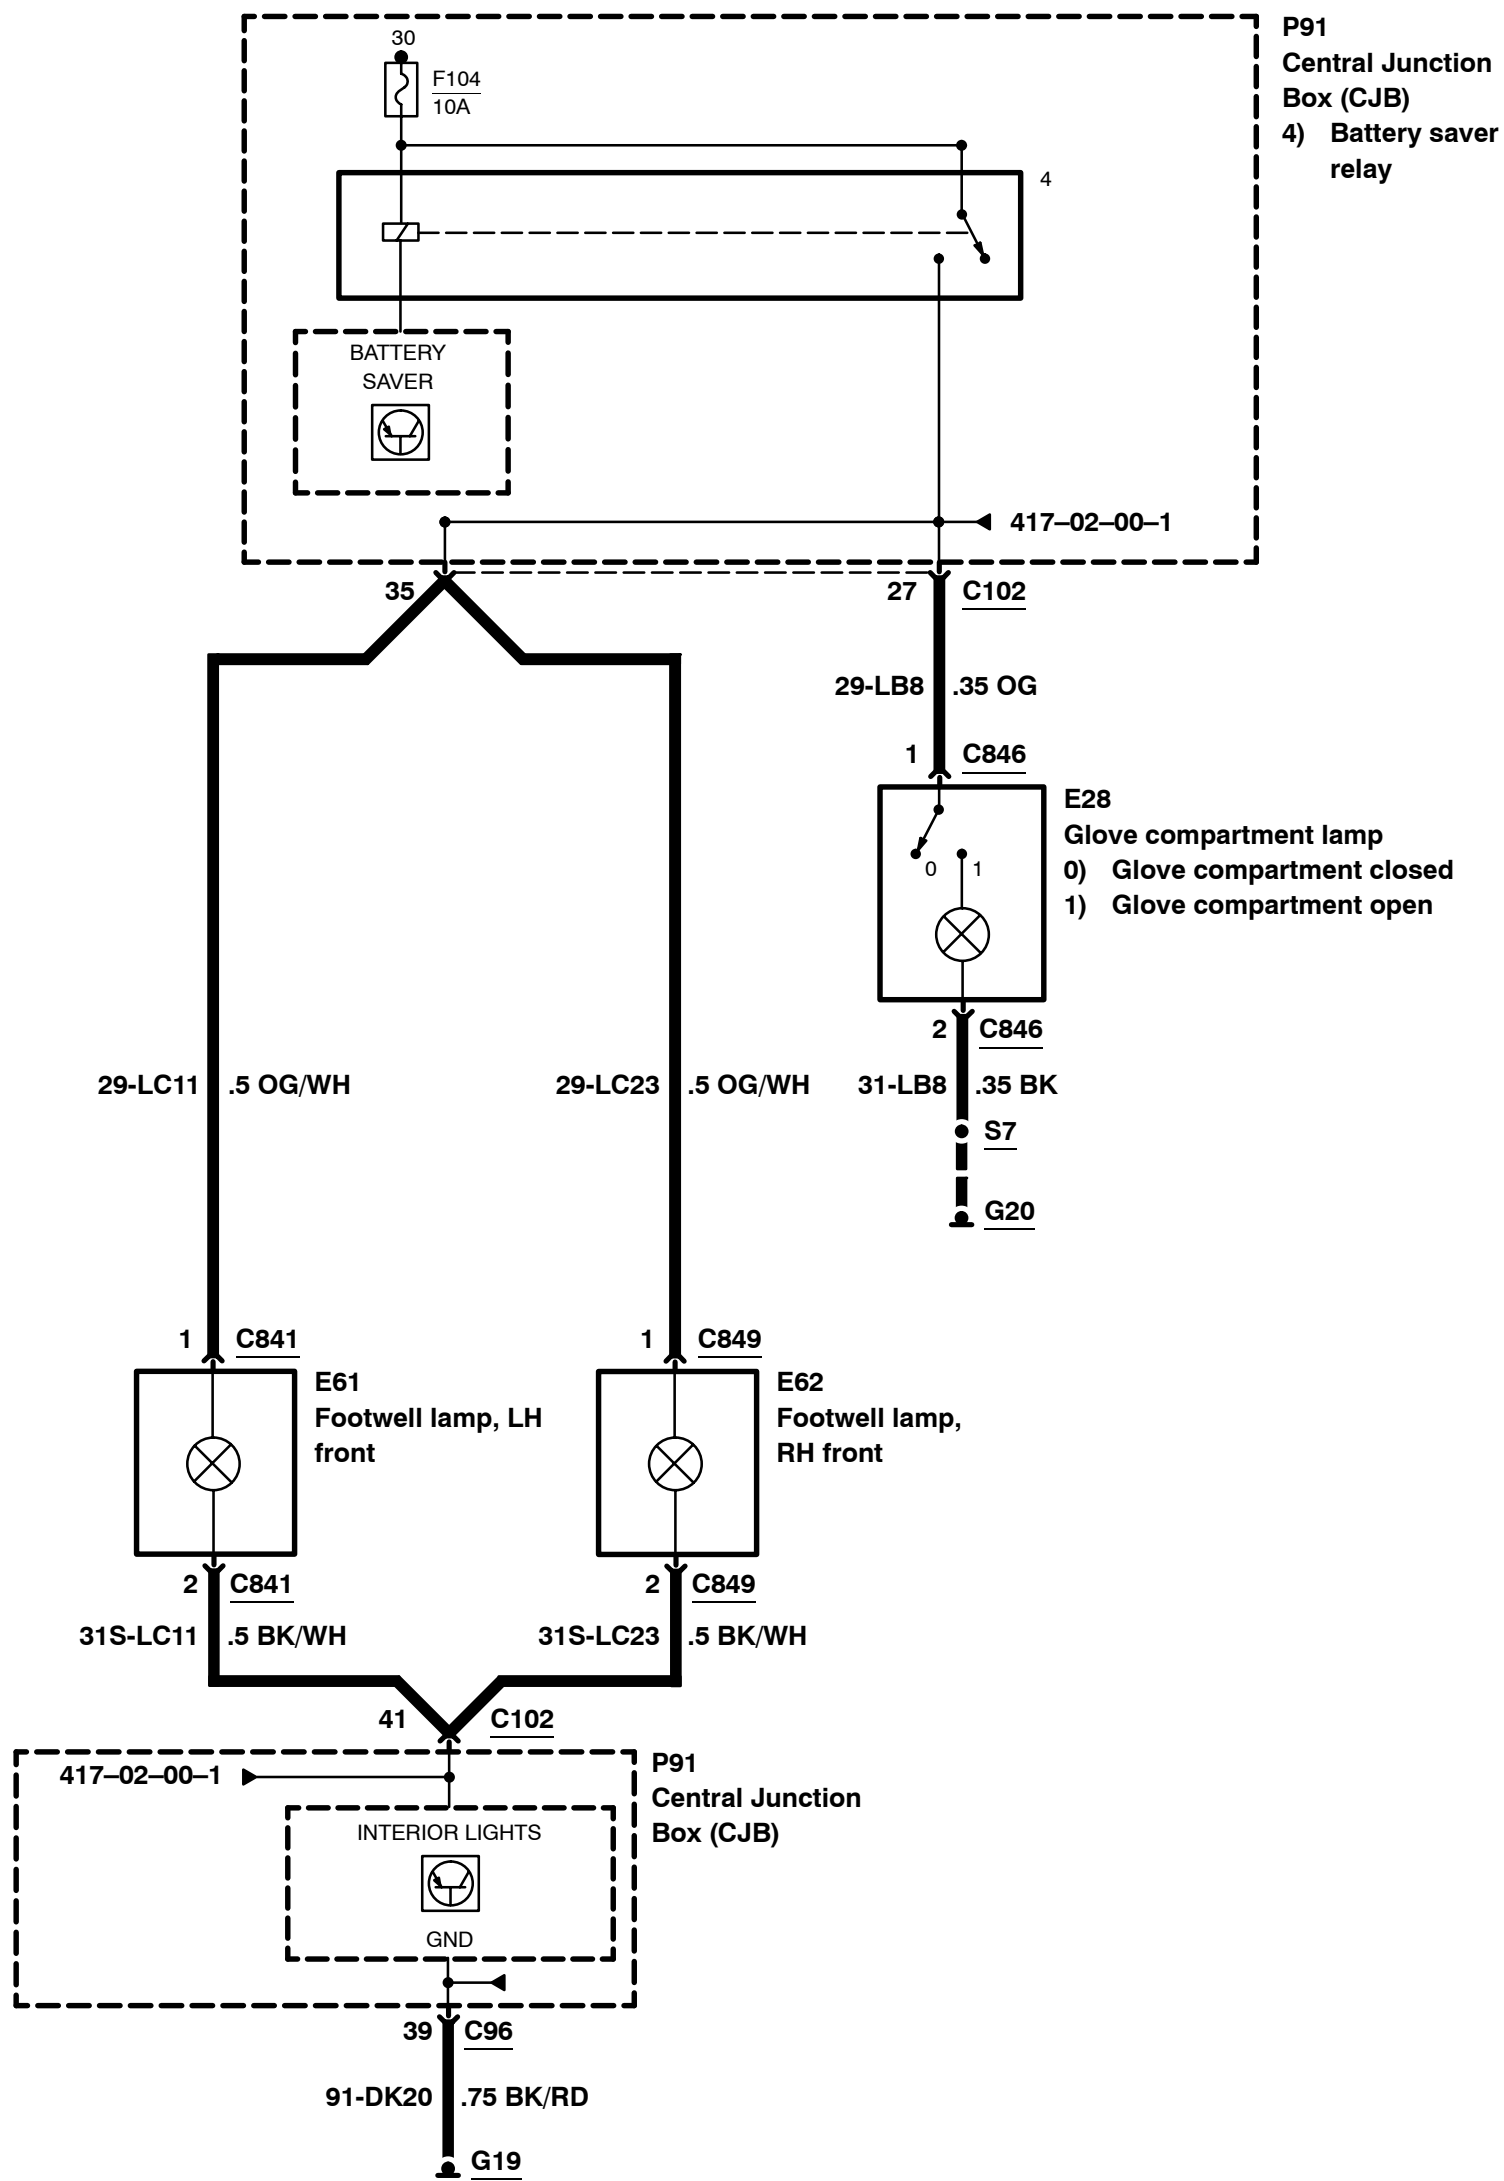


# Interior Lighting

02/2008  
417-02-00-4  
2008.25  
Focus

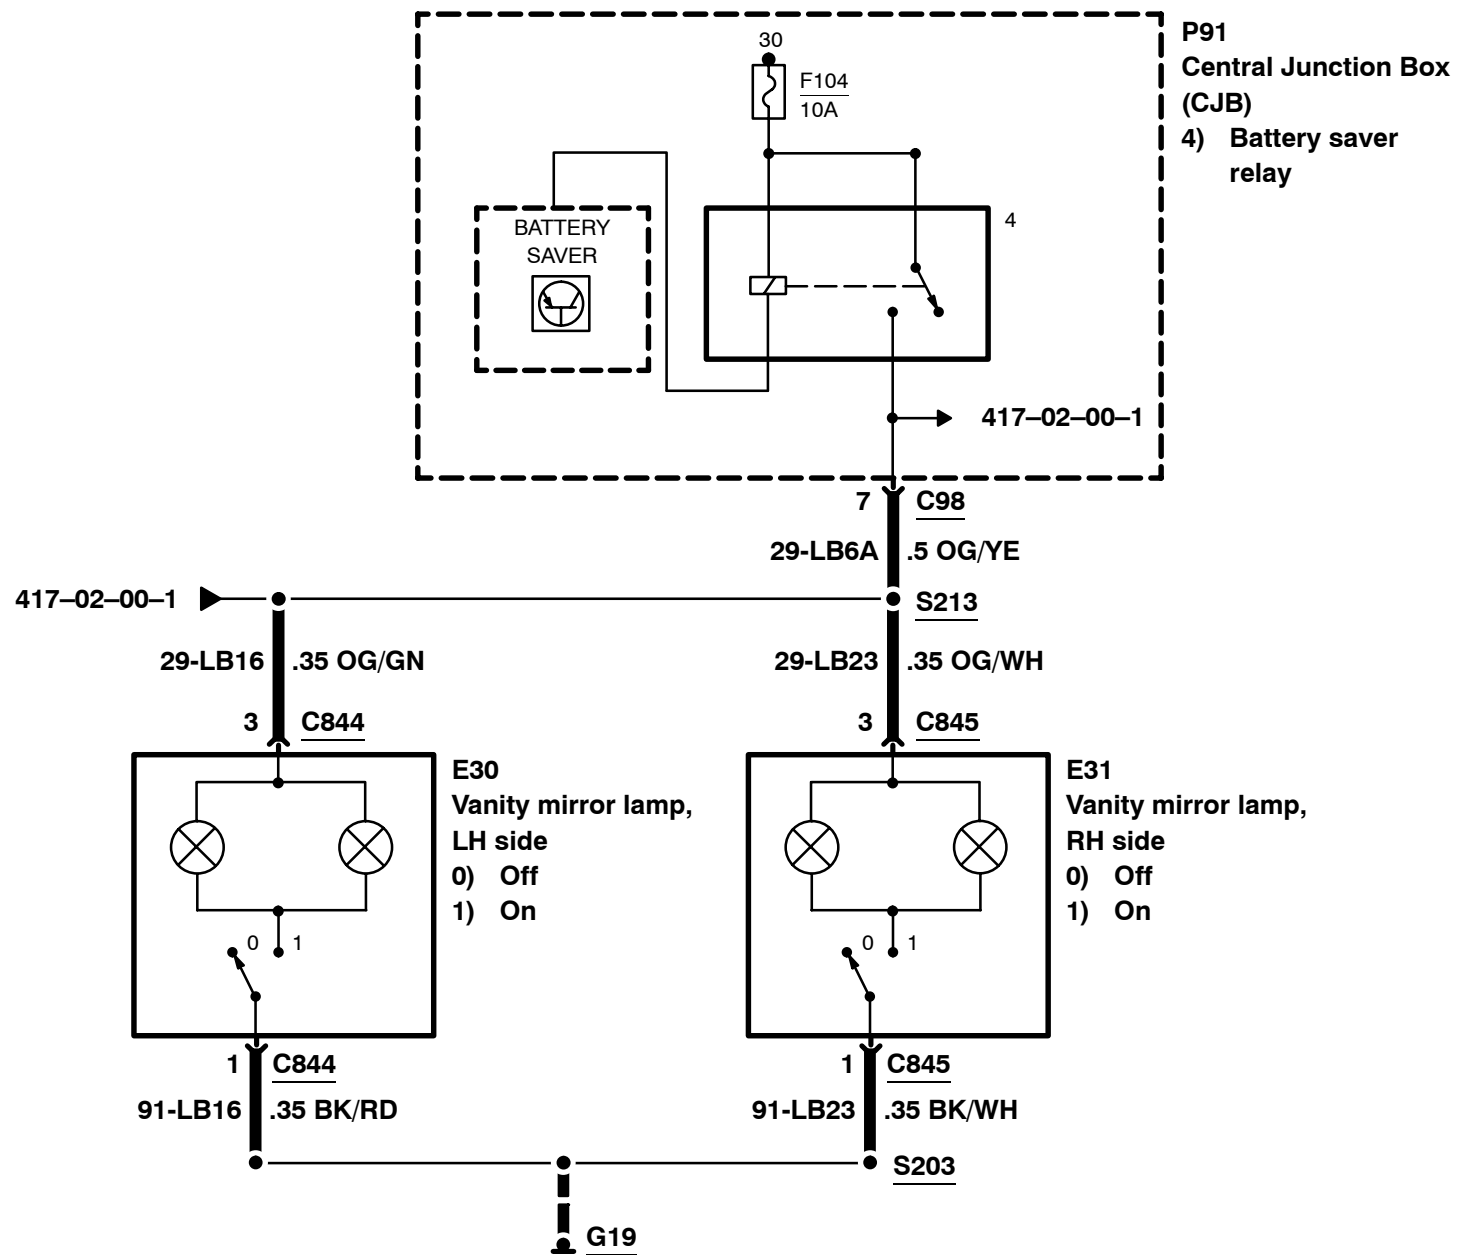




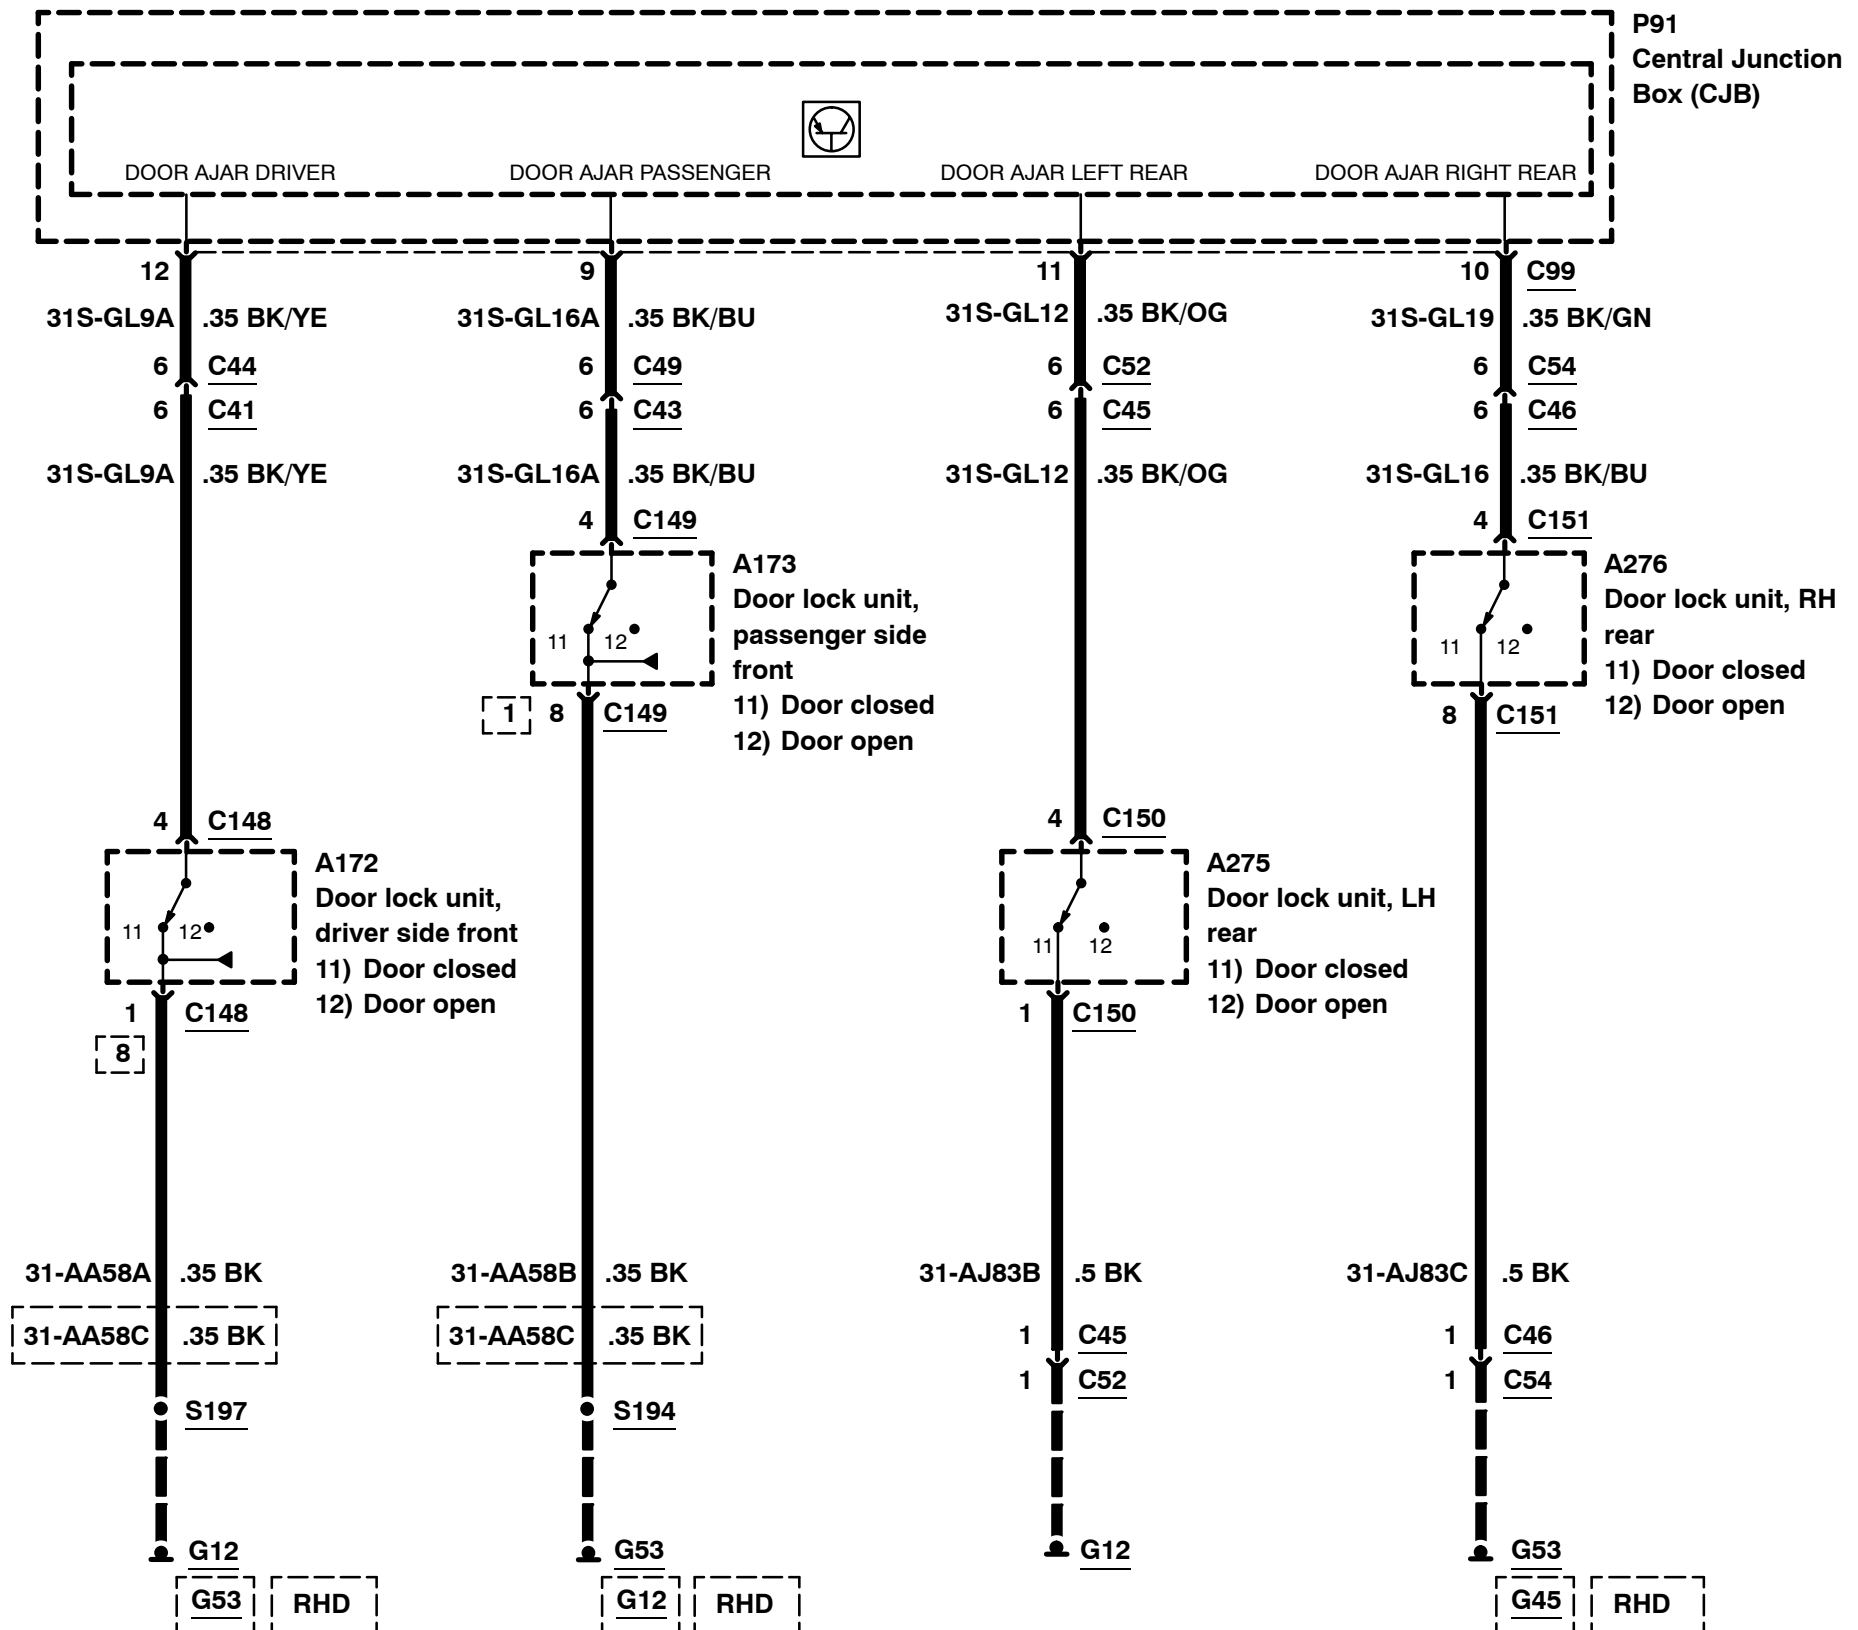



# Interior Lighting – with front and rear power windows

02/2008  
417-02-00-6  
2008.25  
Focus

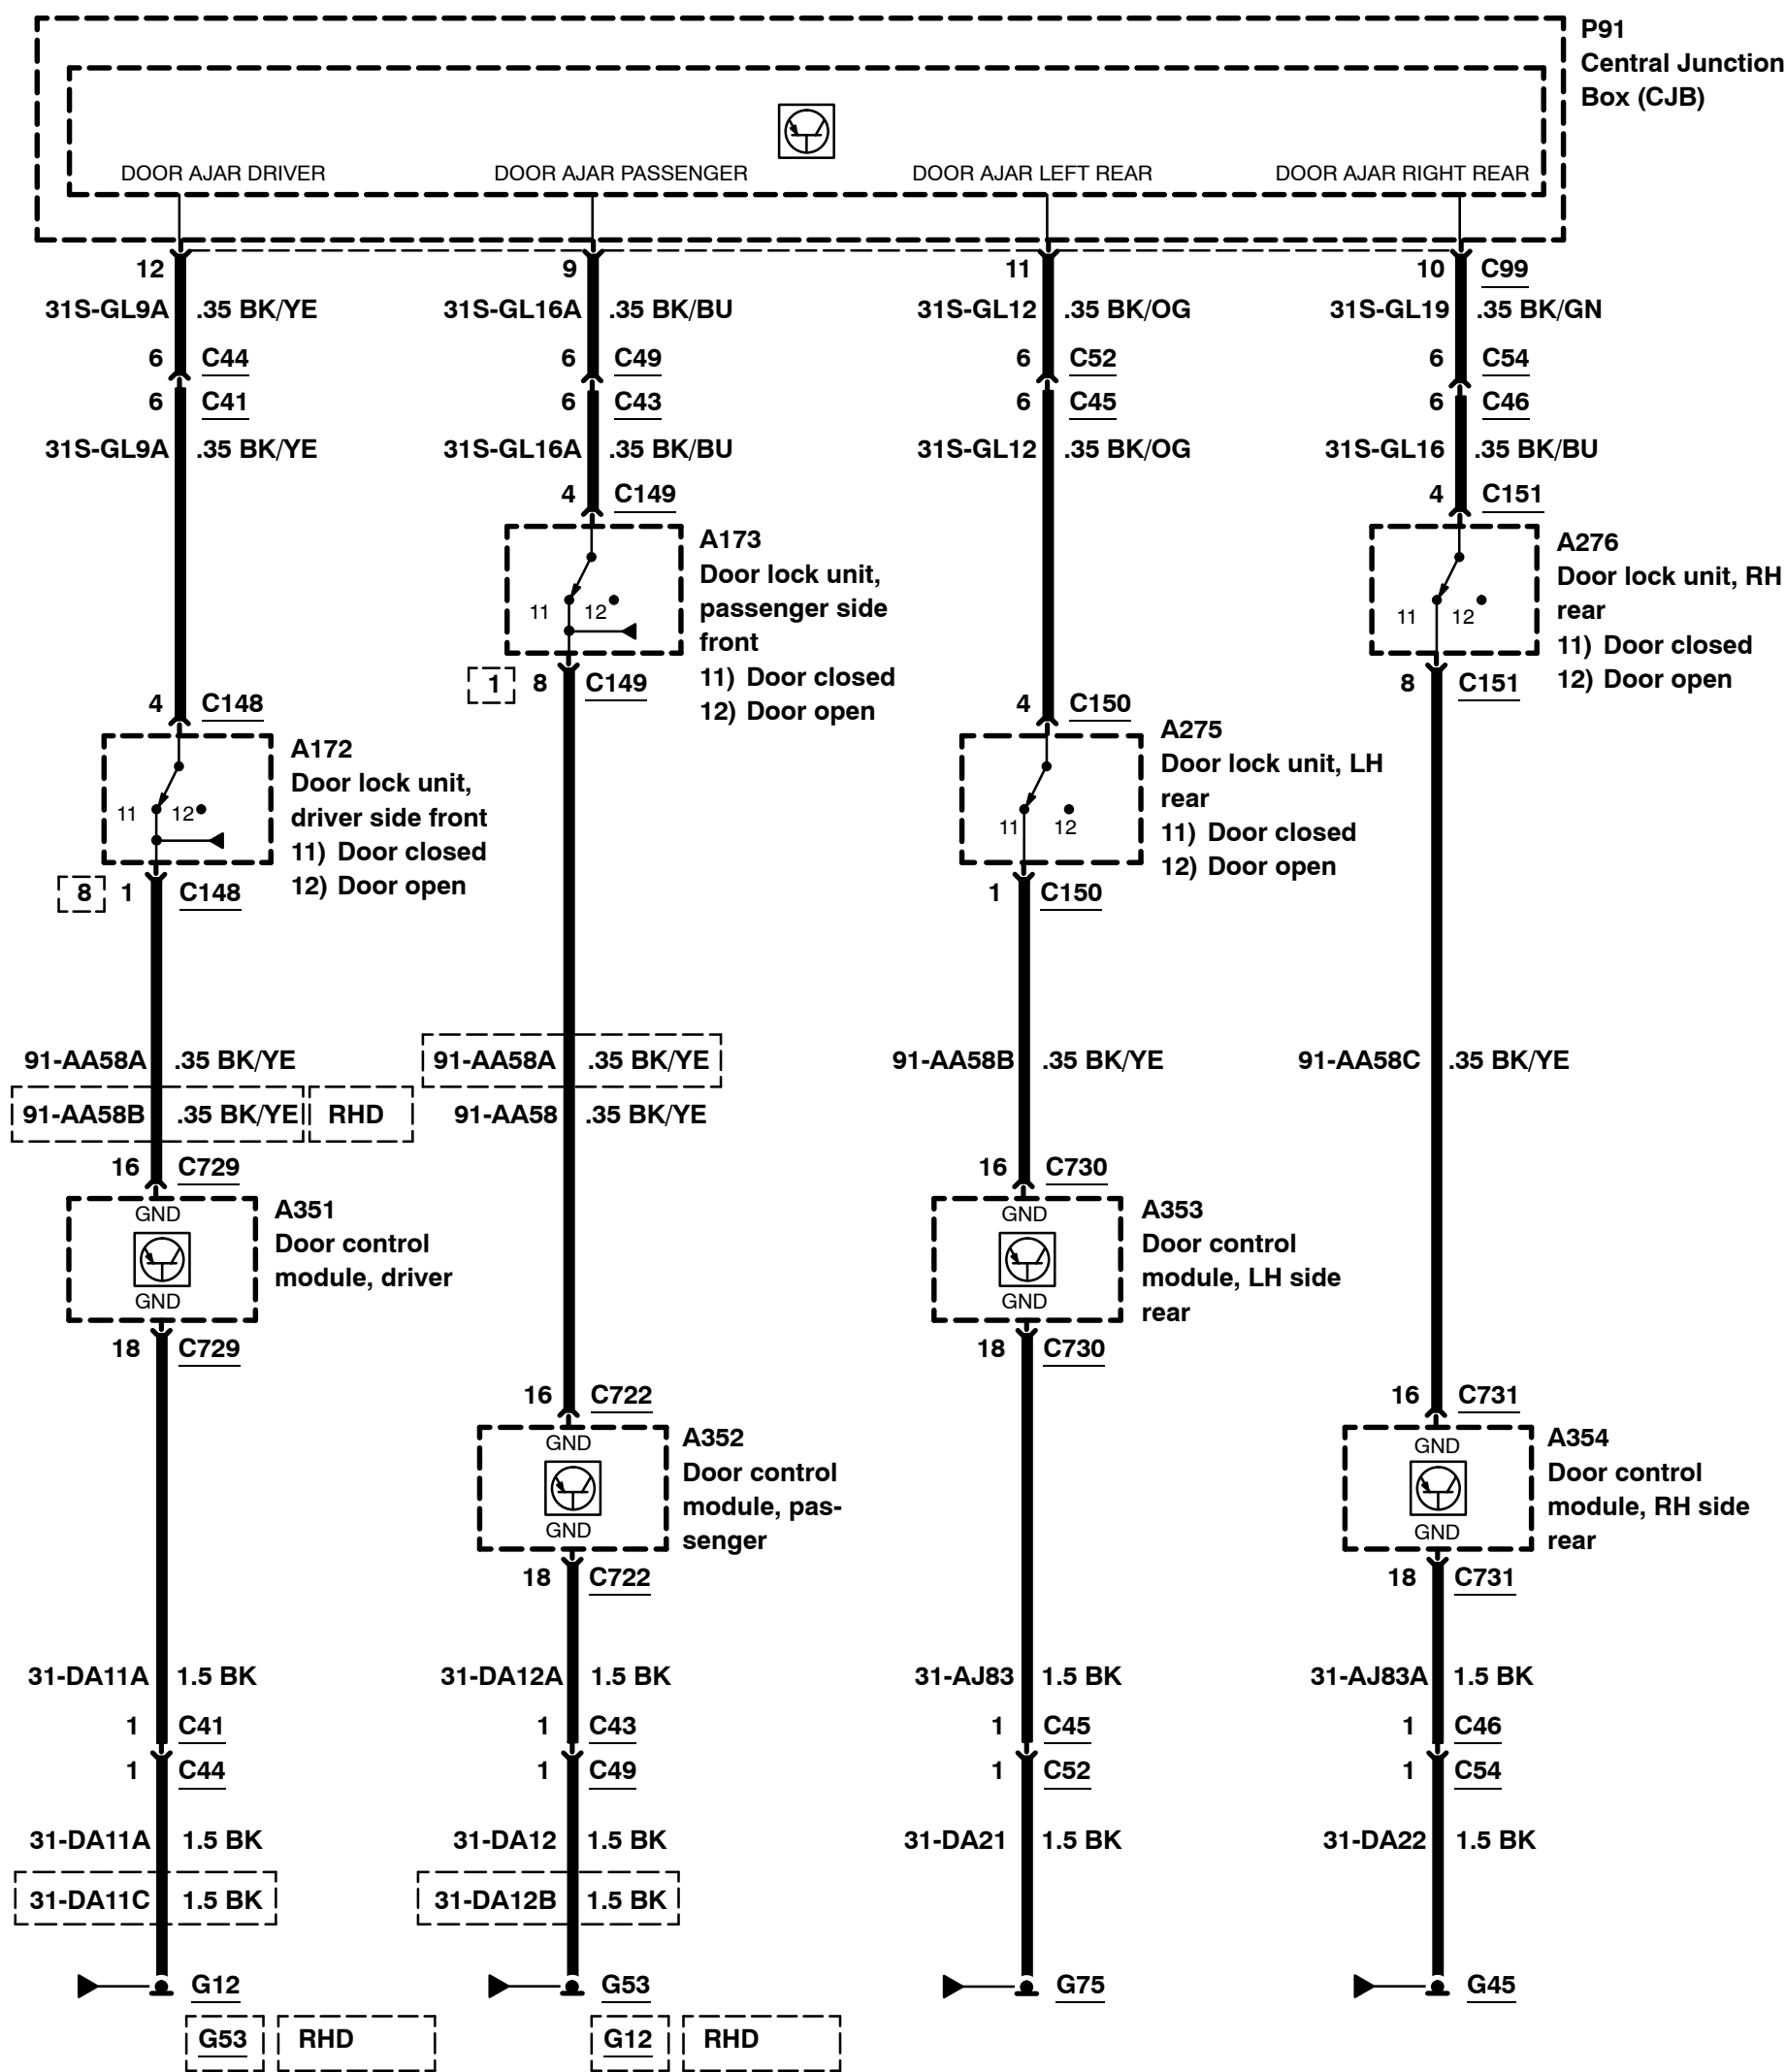




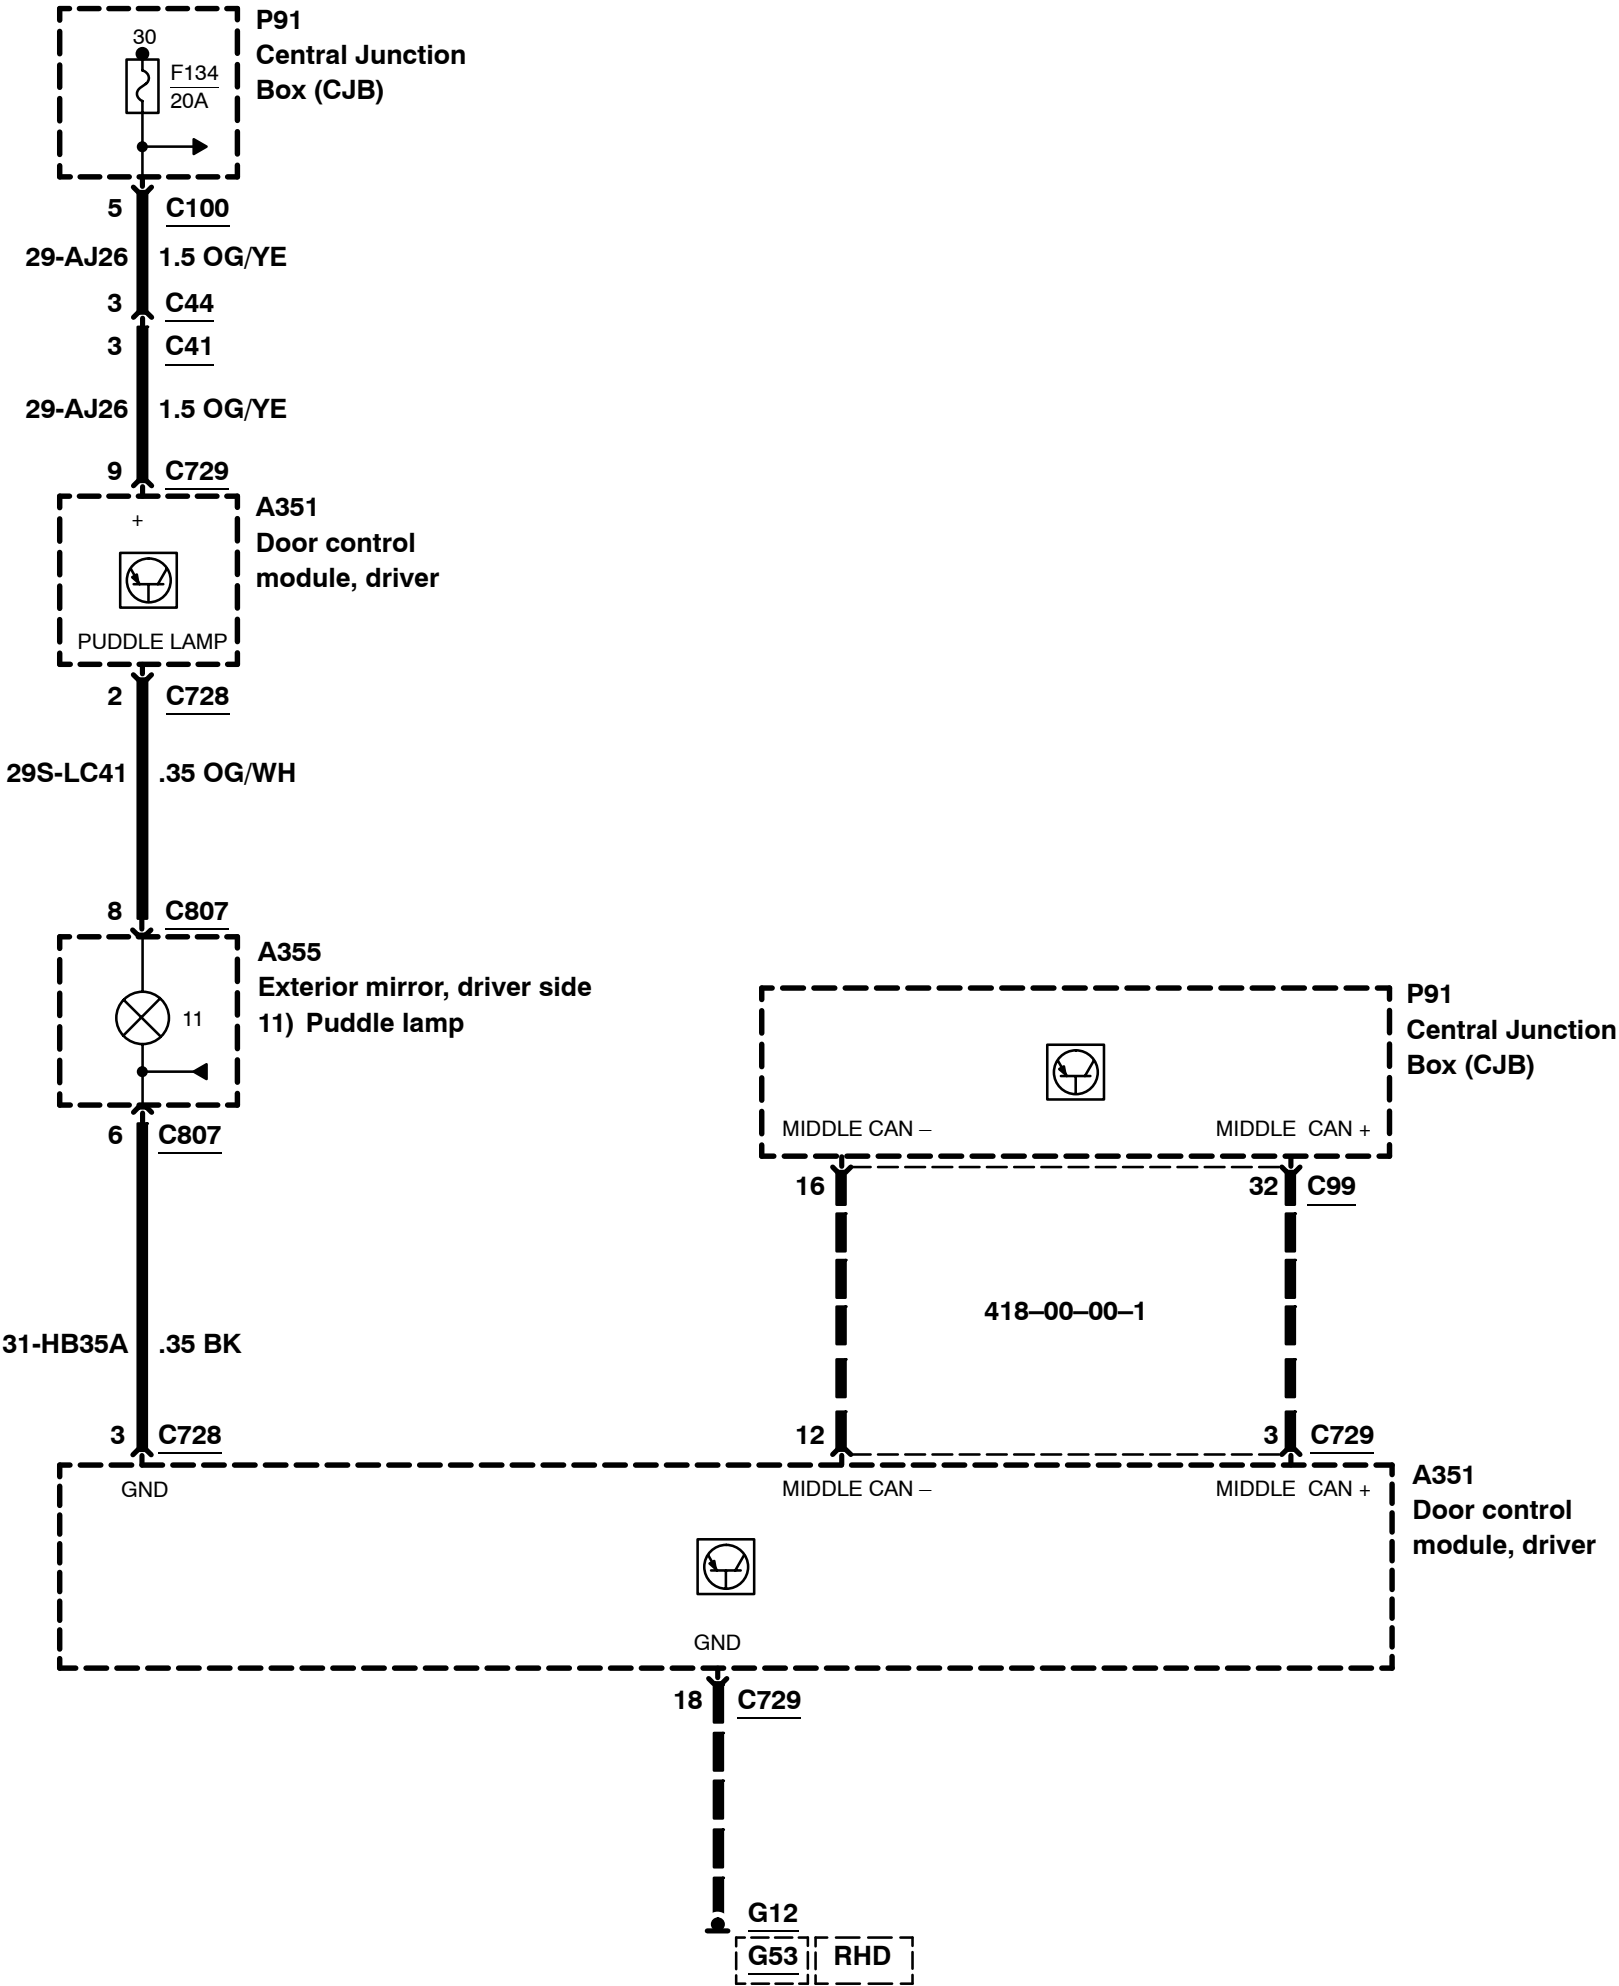


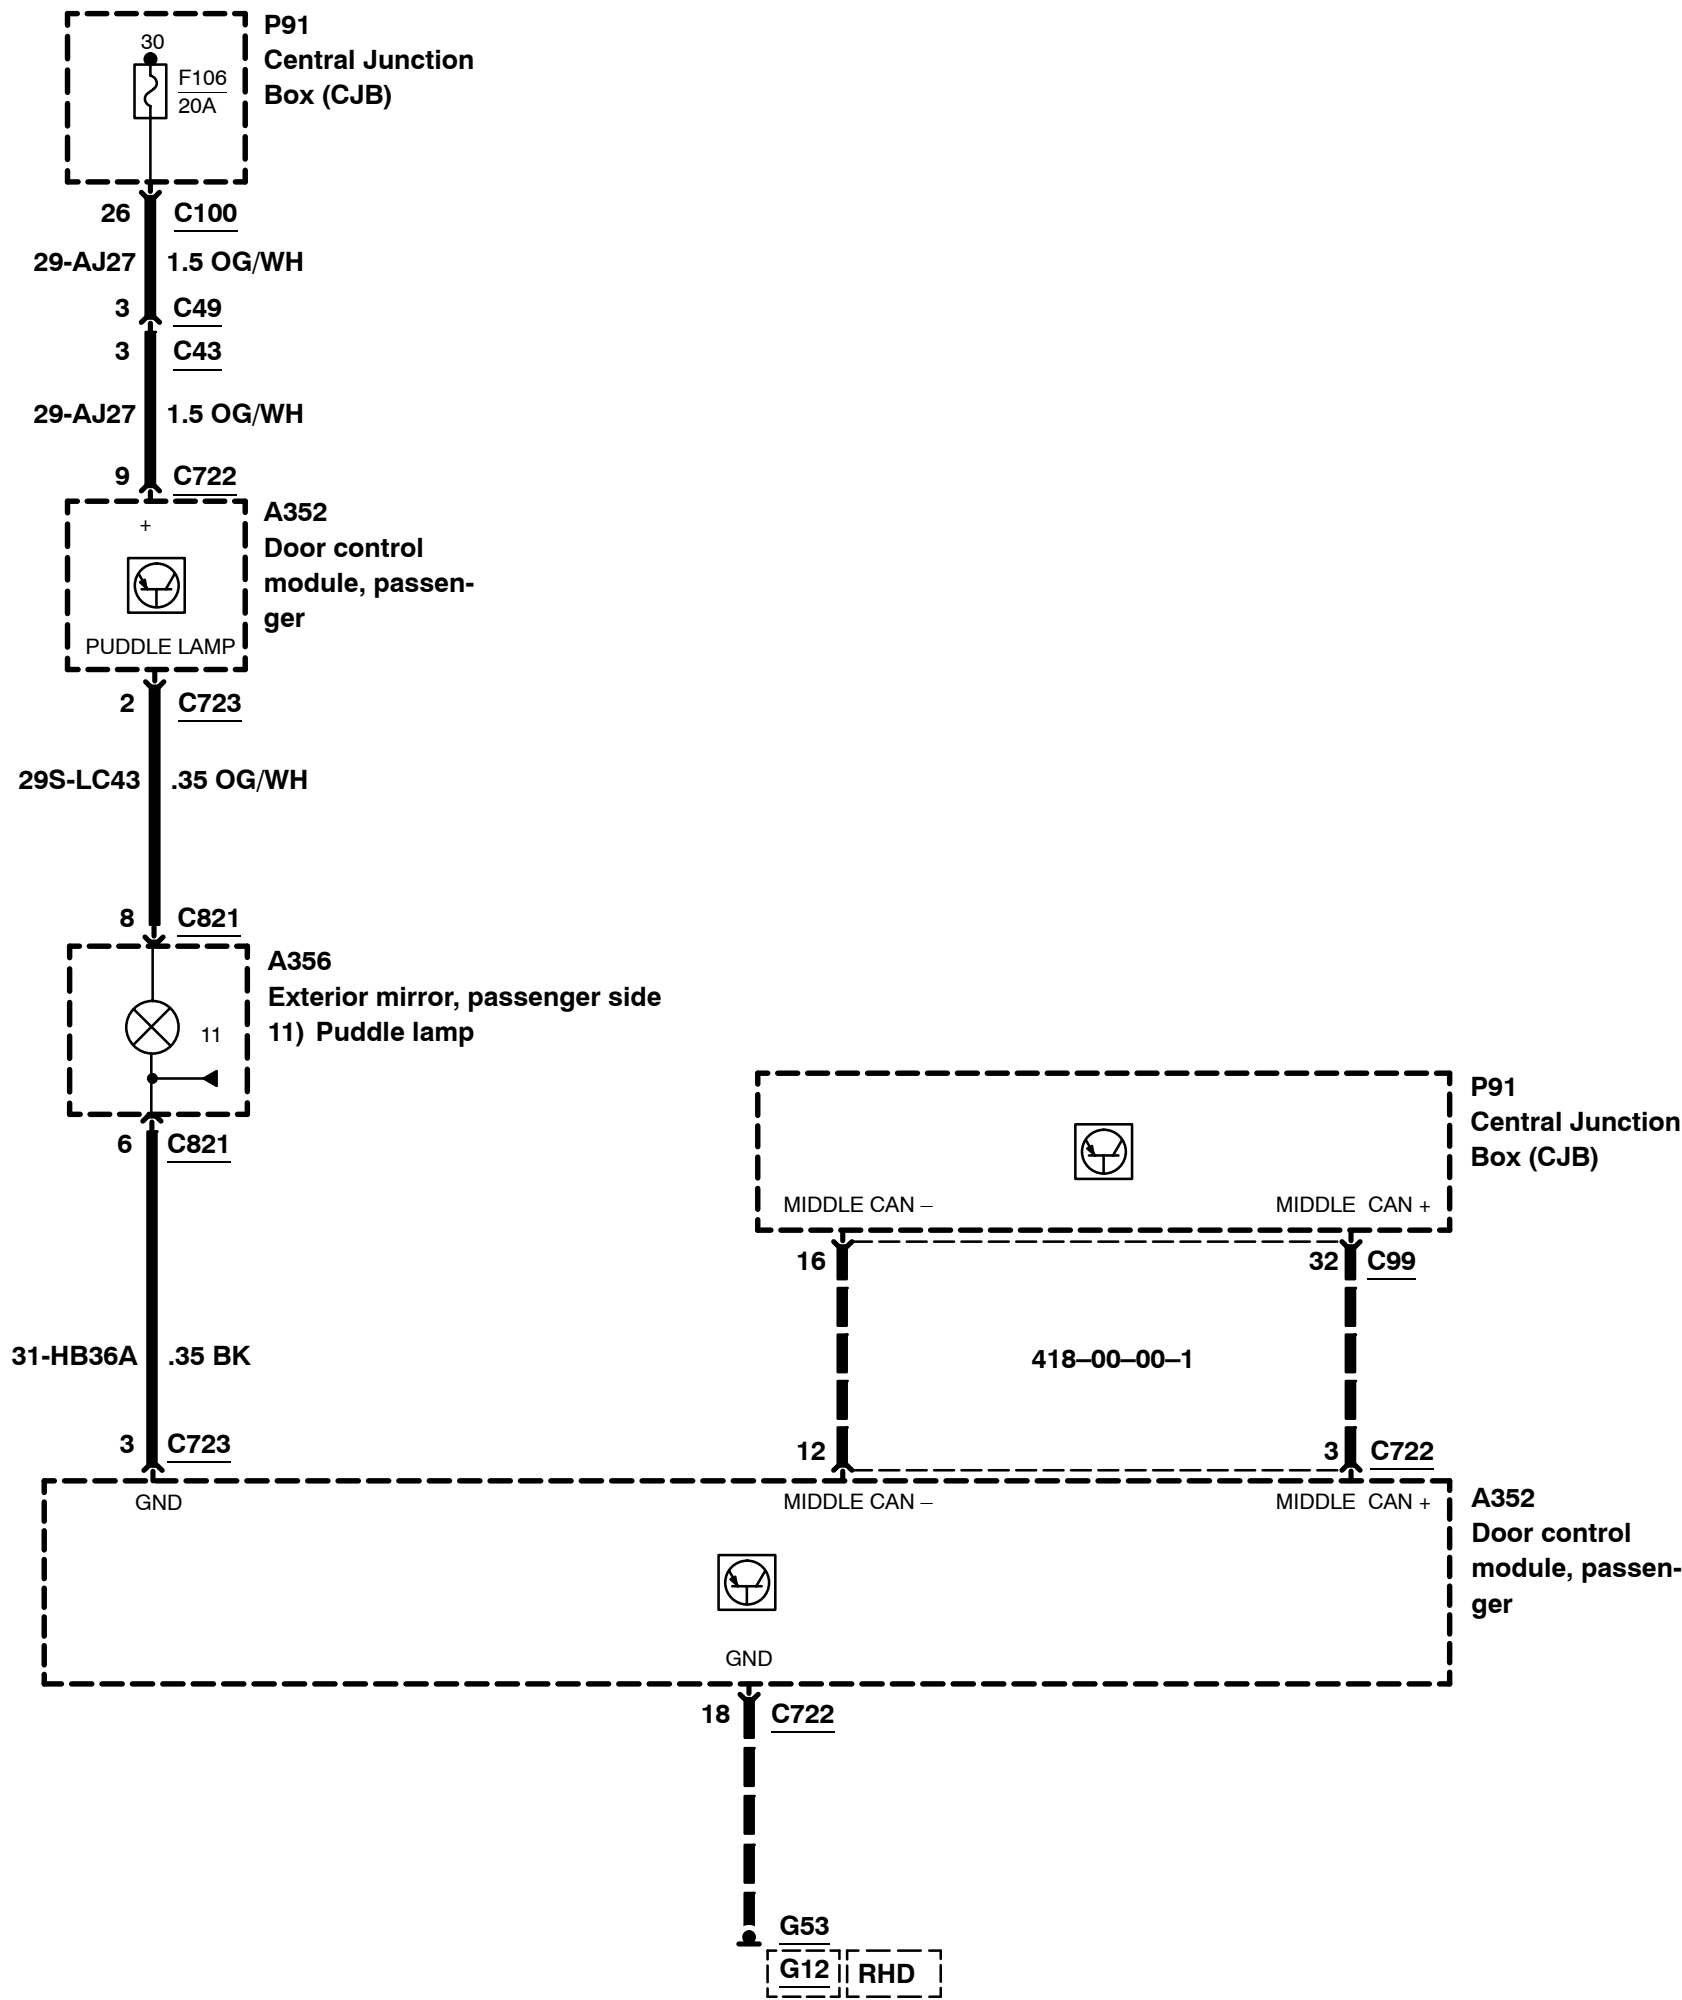

# Module Communications Network – Data link connector, pins 4, 5 and 16


02/2008  
418-00-00-1  
2008.25  
Focus

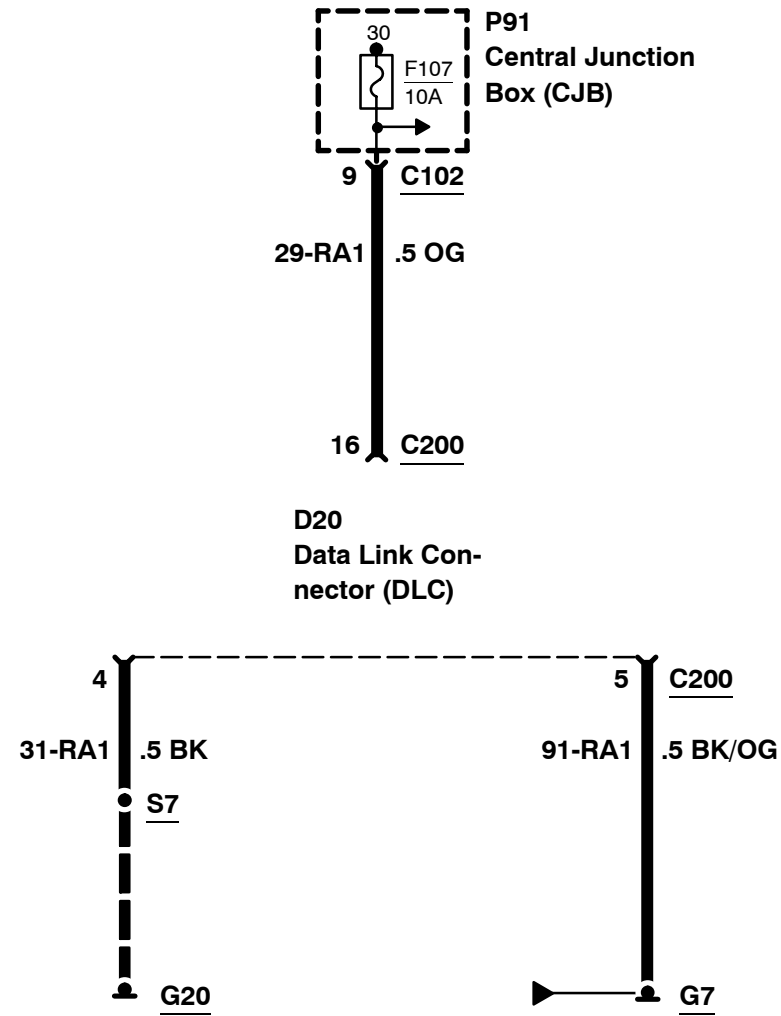

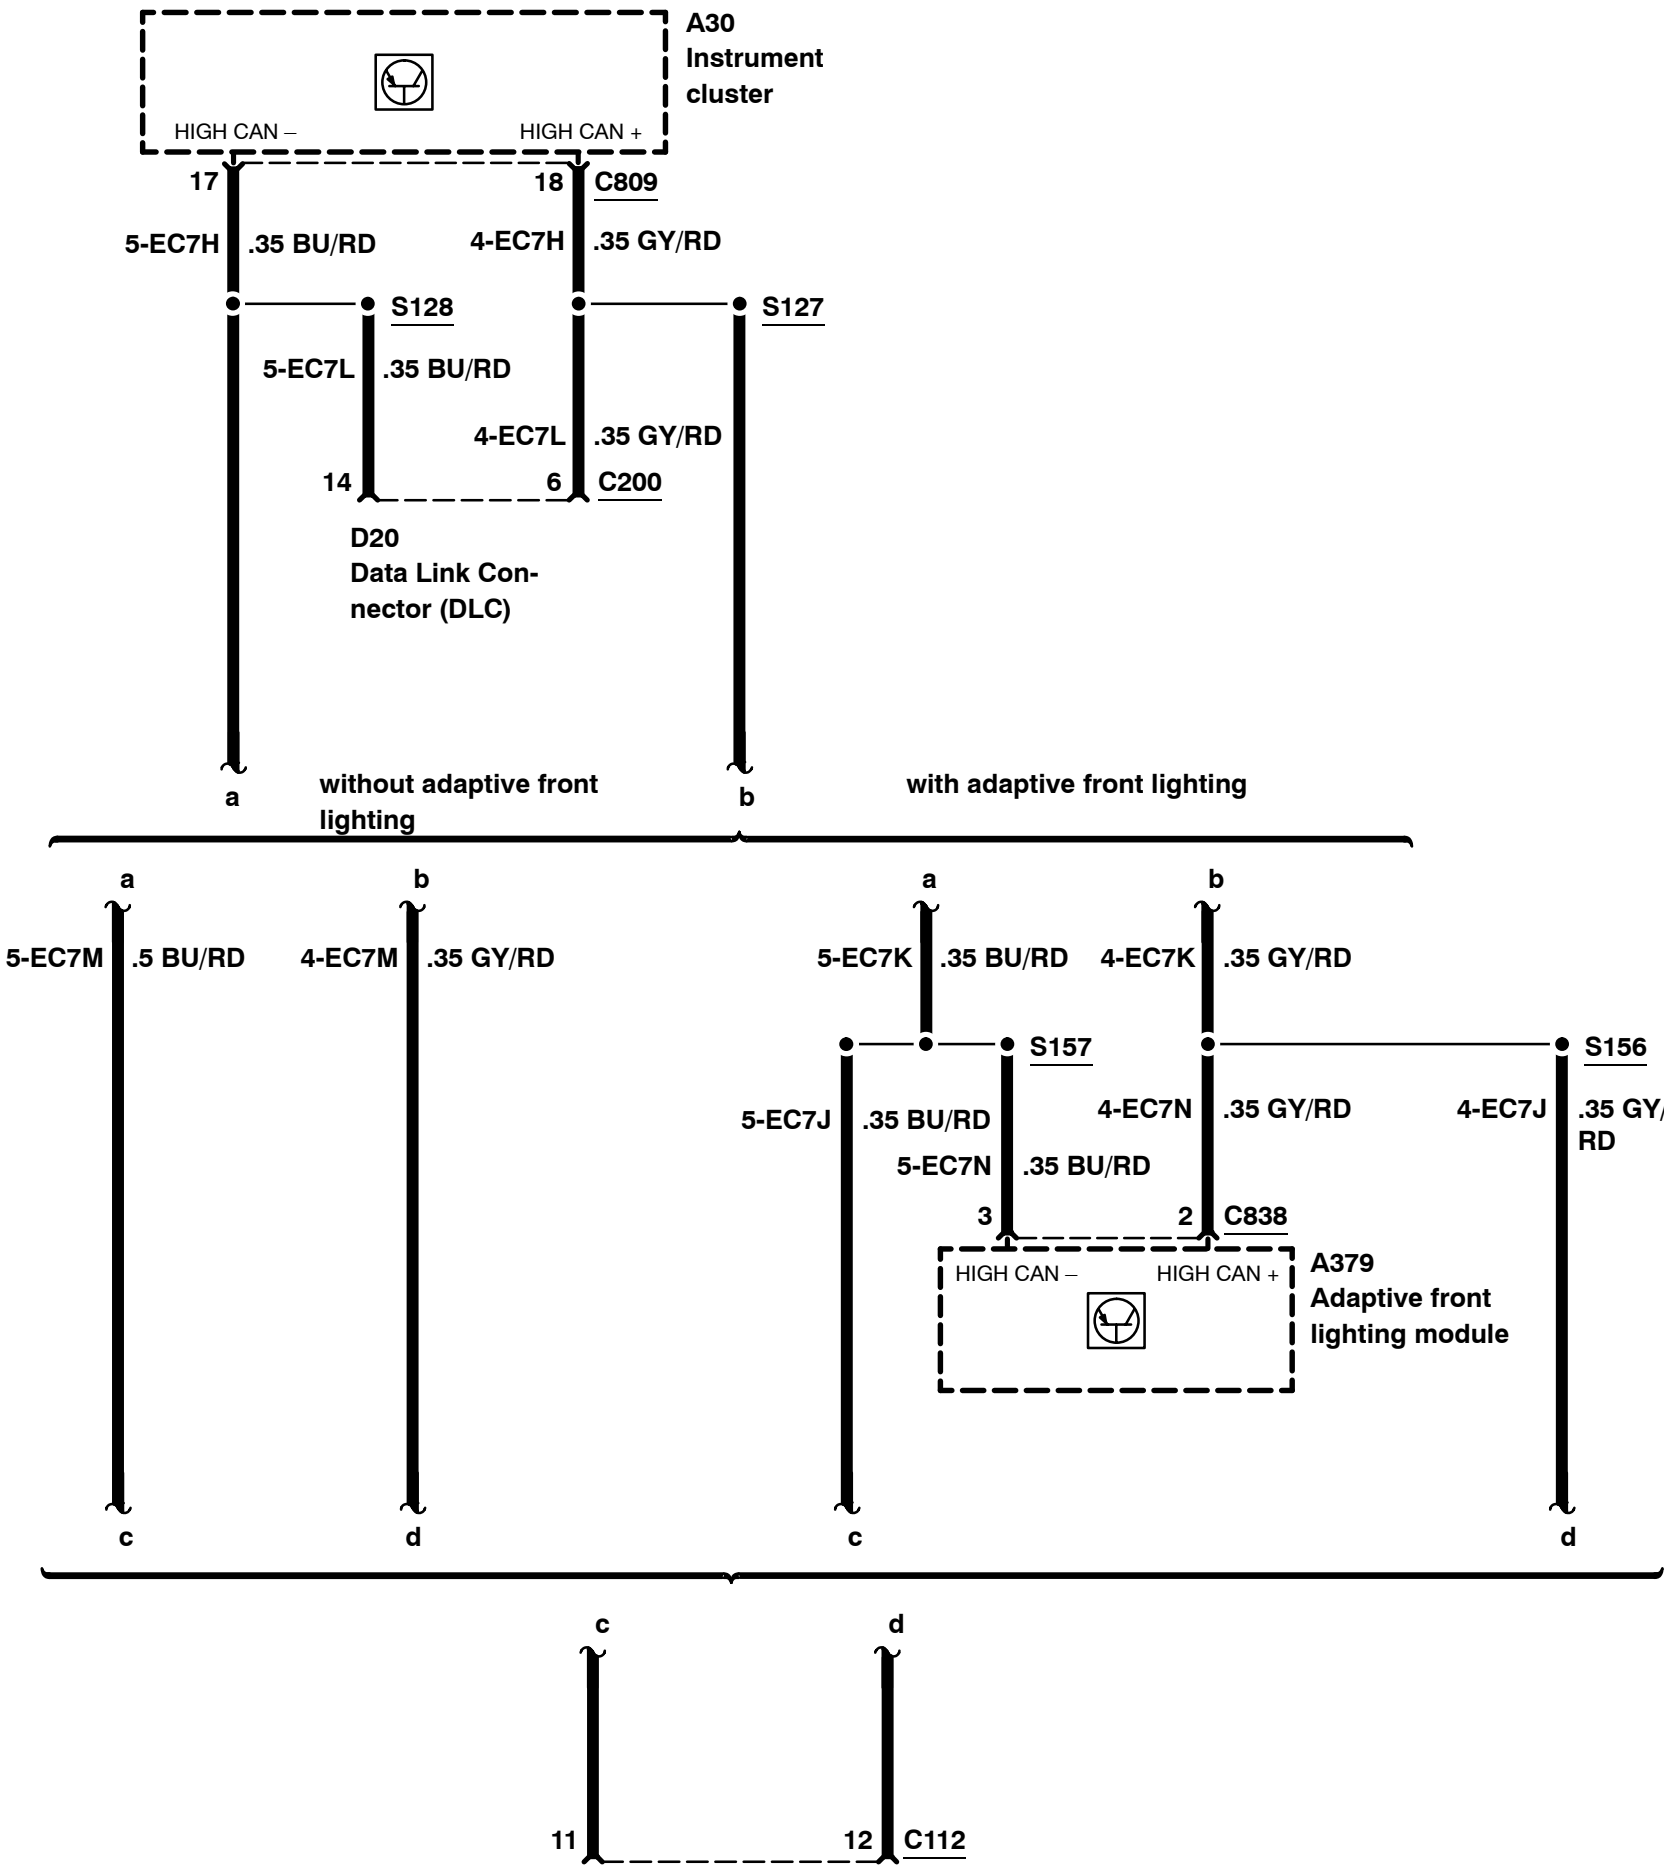


Module Communications Network – Data Link Connector (DLC)

02/2008  
418-00-00-3  
2008.25  
Focus

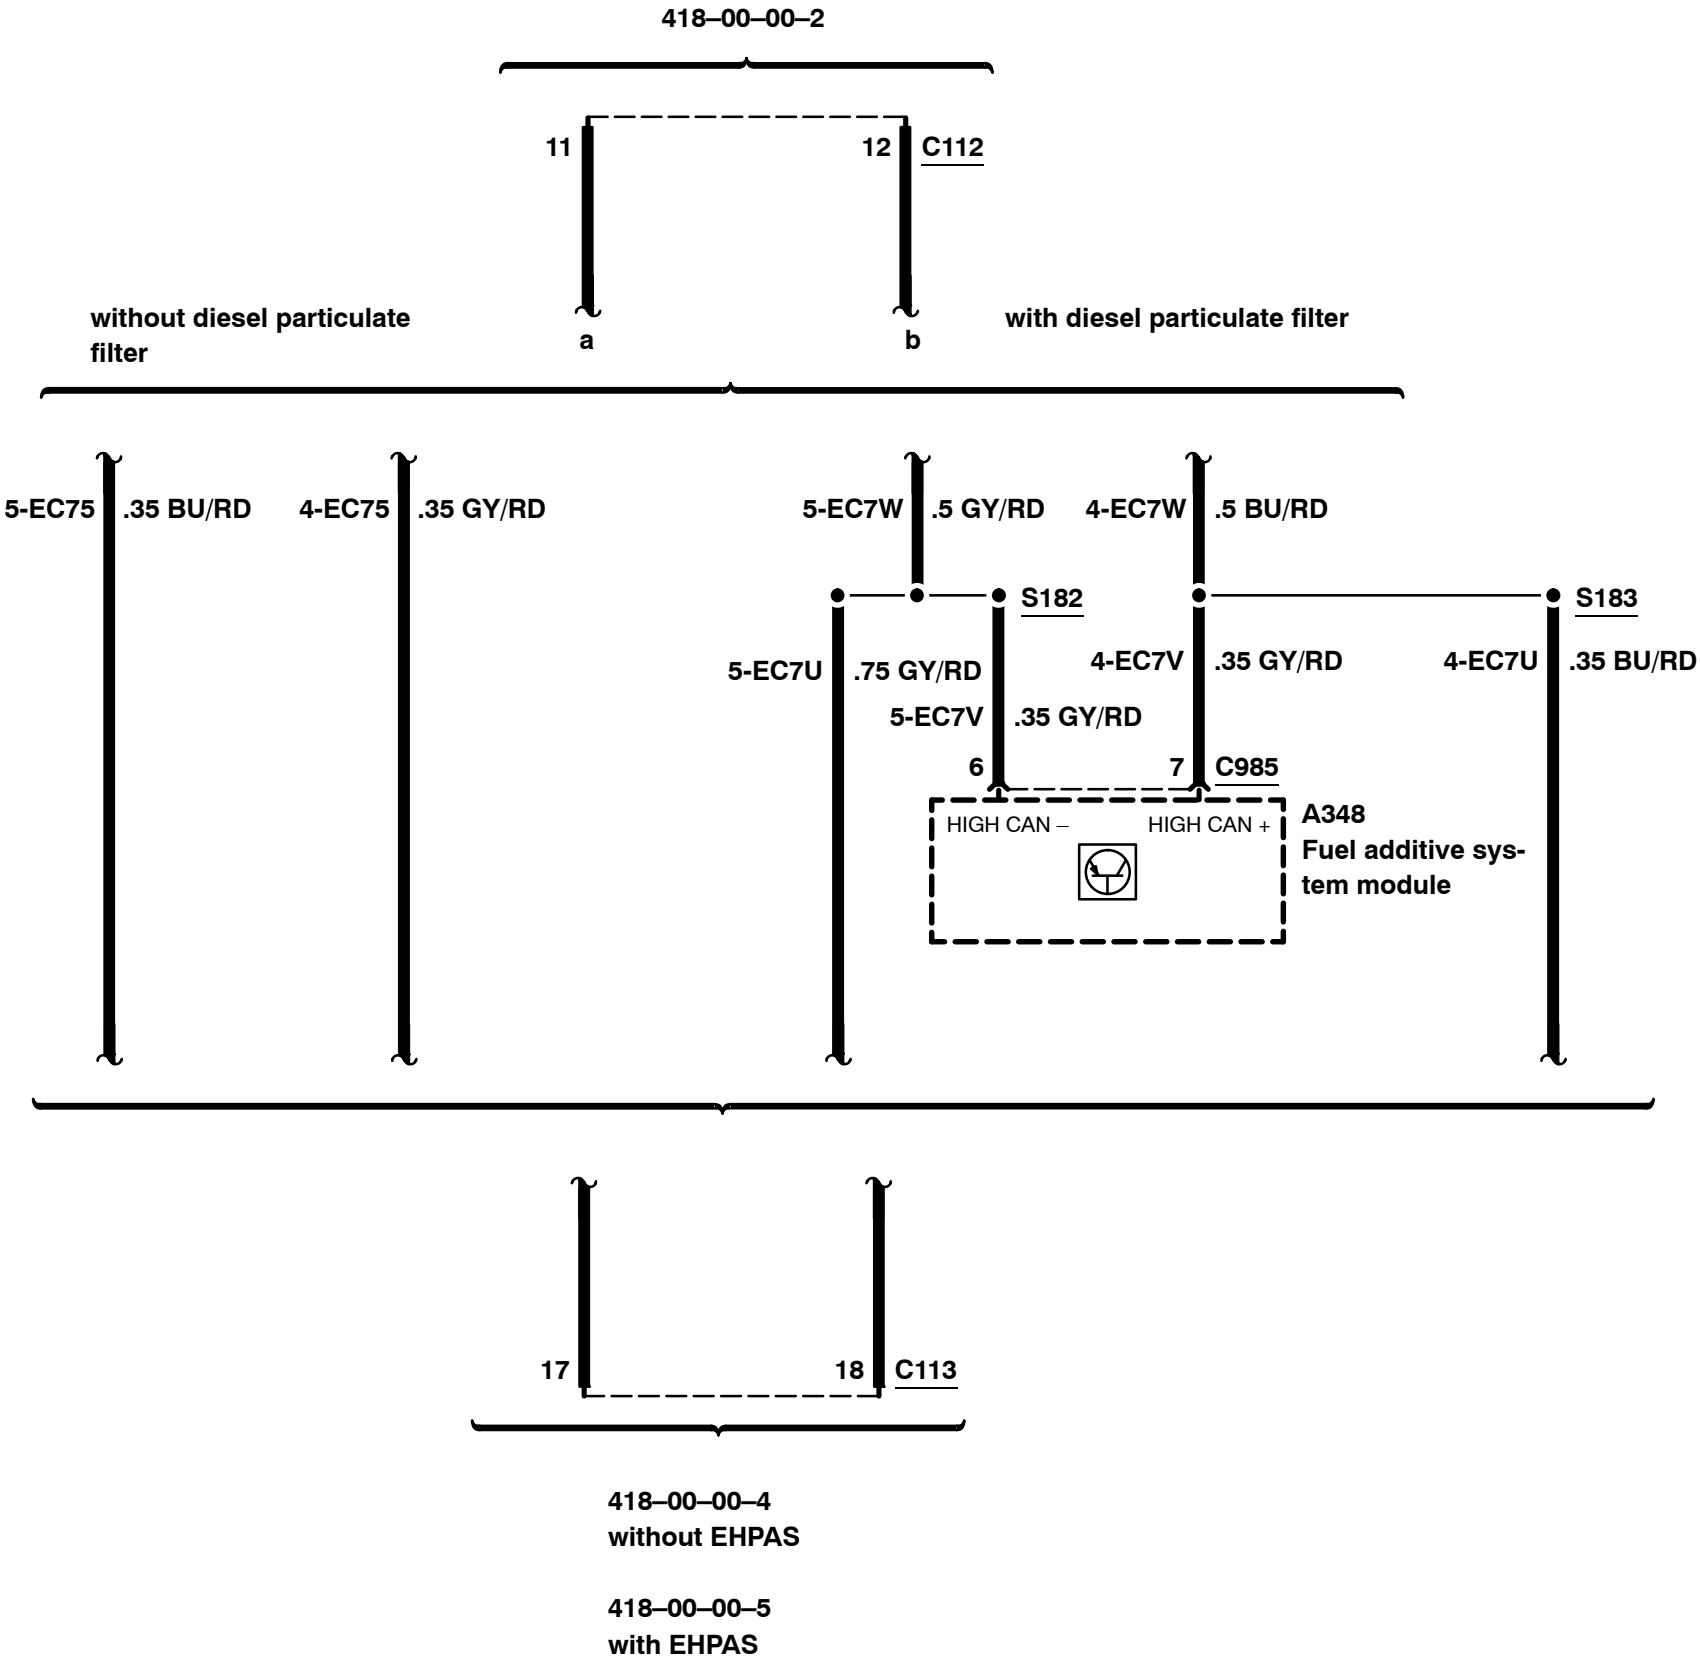





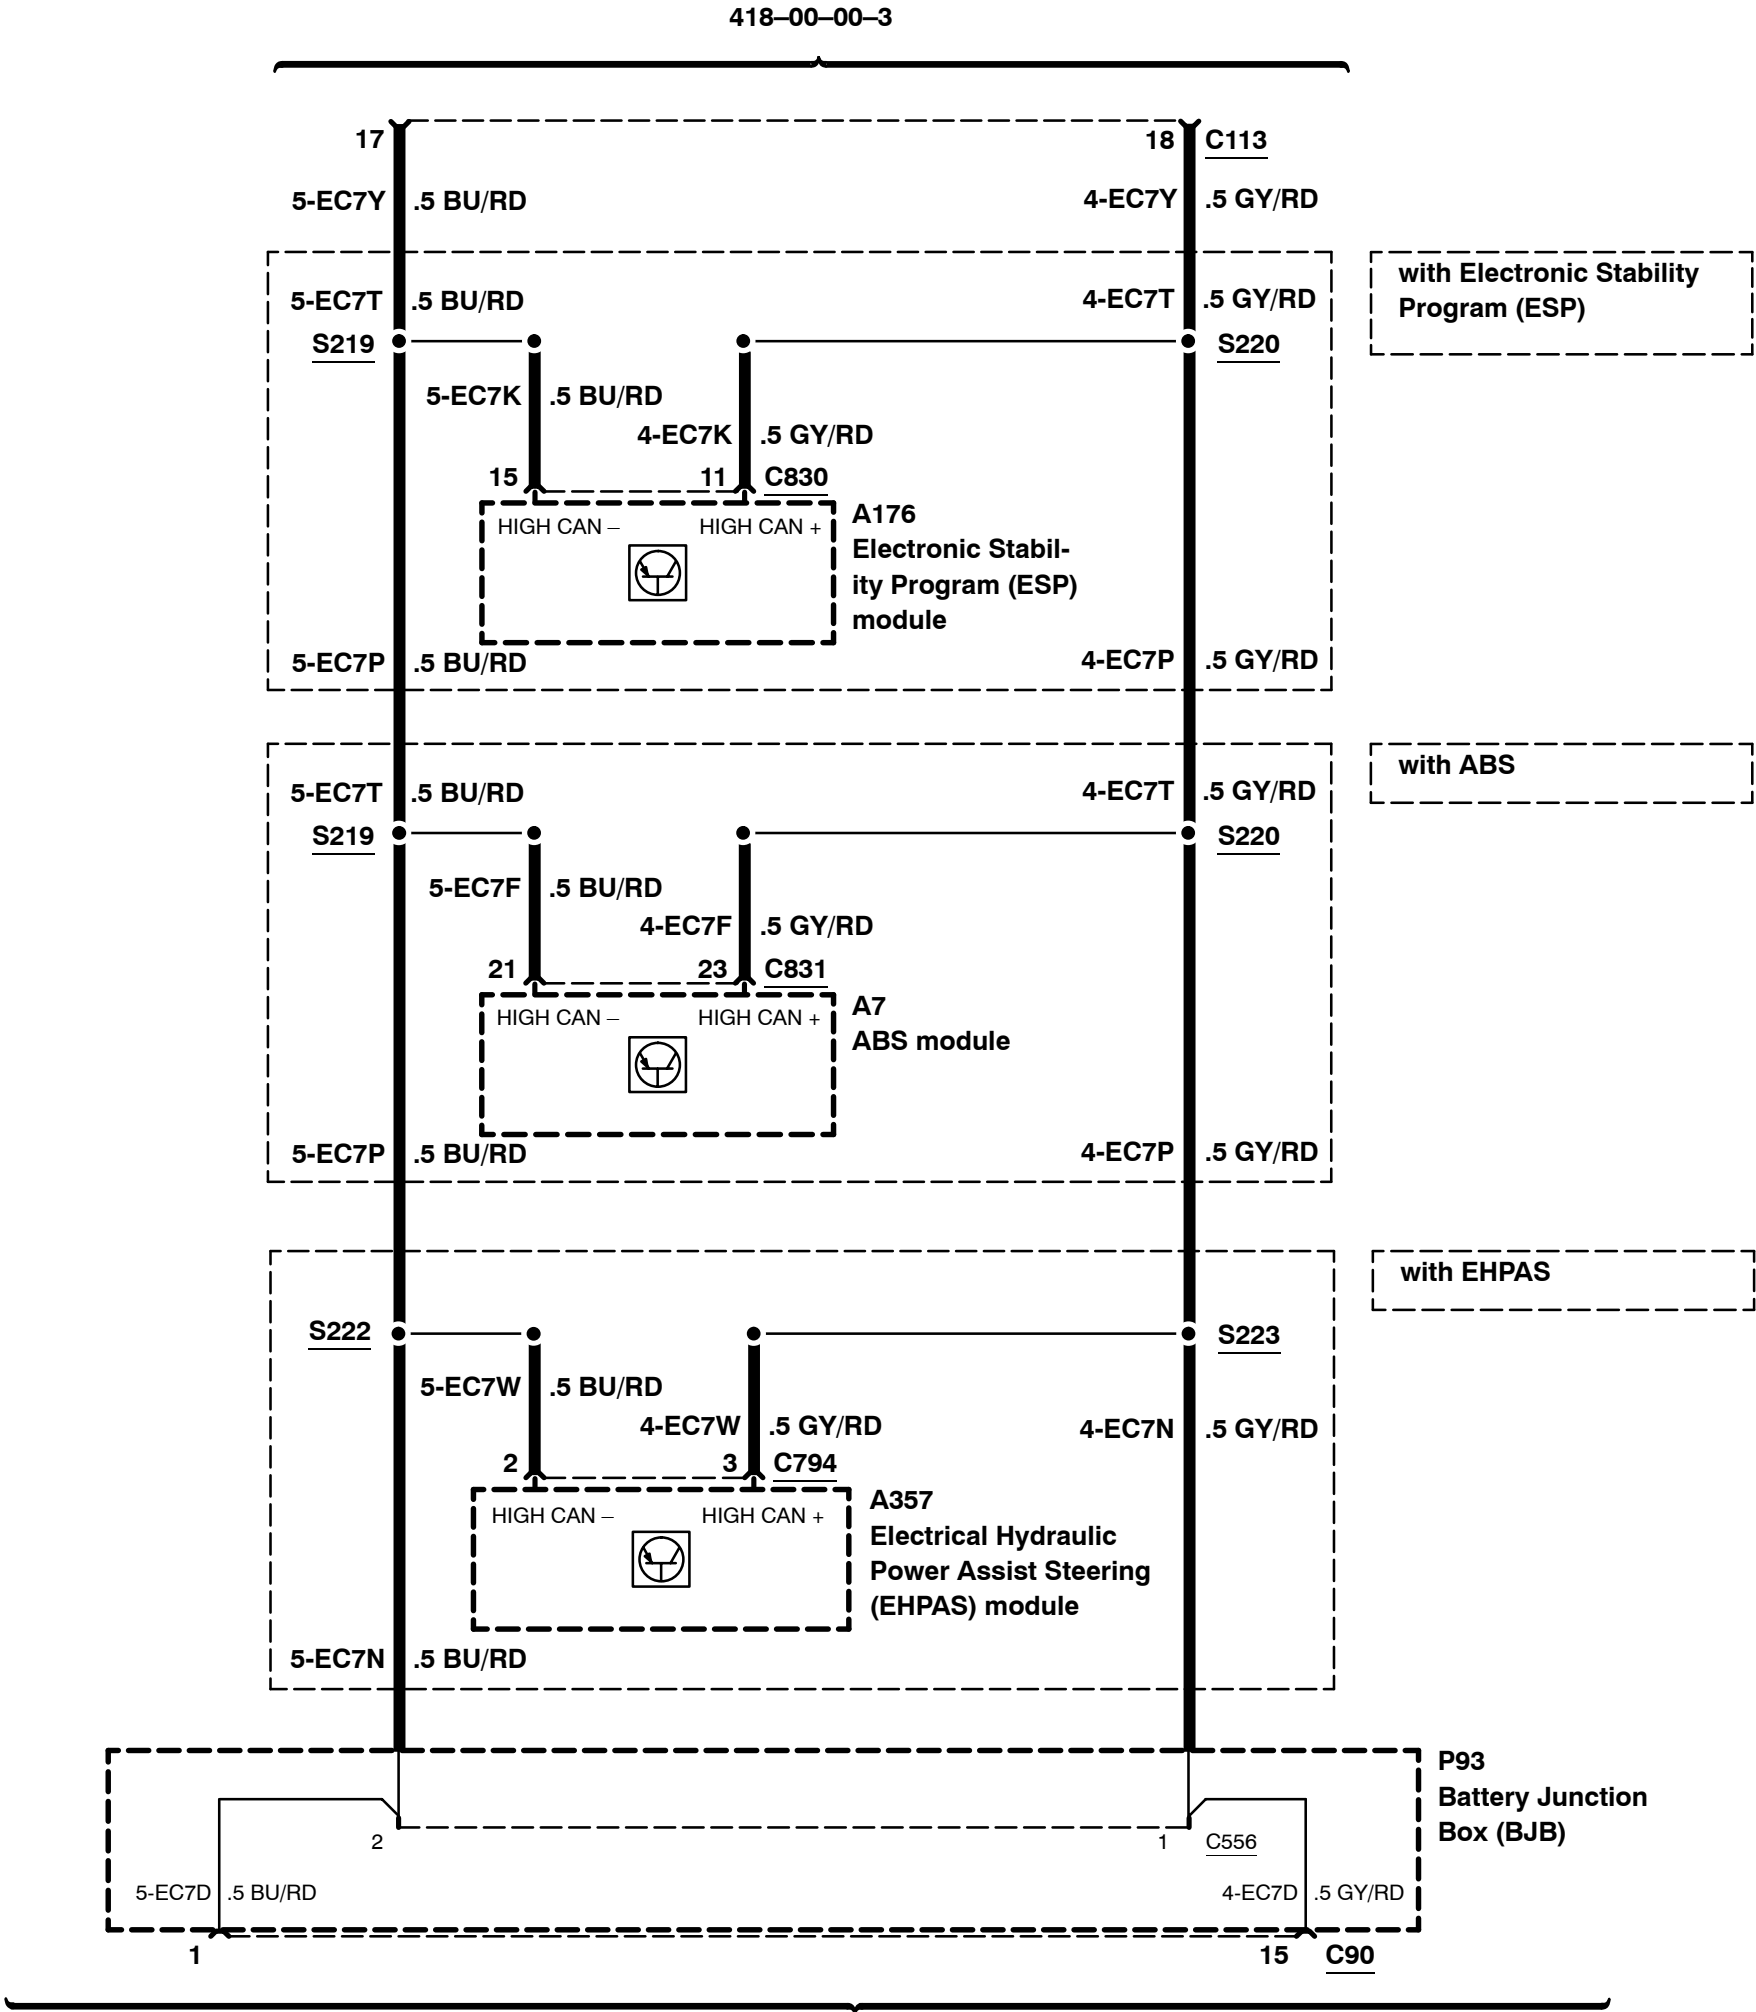


- 418-00-00-6 manual transmission, except manual transmission (MPS6)
- 418-00-00-7 manual transmission (MPS6)
- 418-00-00-8 automatic transmission

**Module Communications Network – Data Link Connector (DLC), manual transmission, except manual transmission (MPS6)**

**418-00-00-6**


## Focus

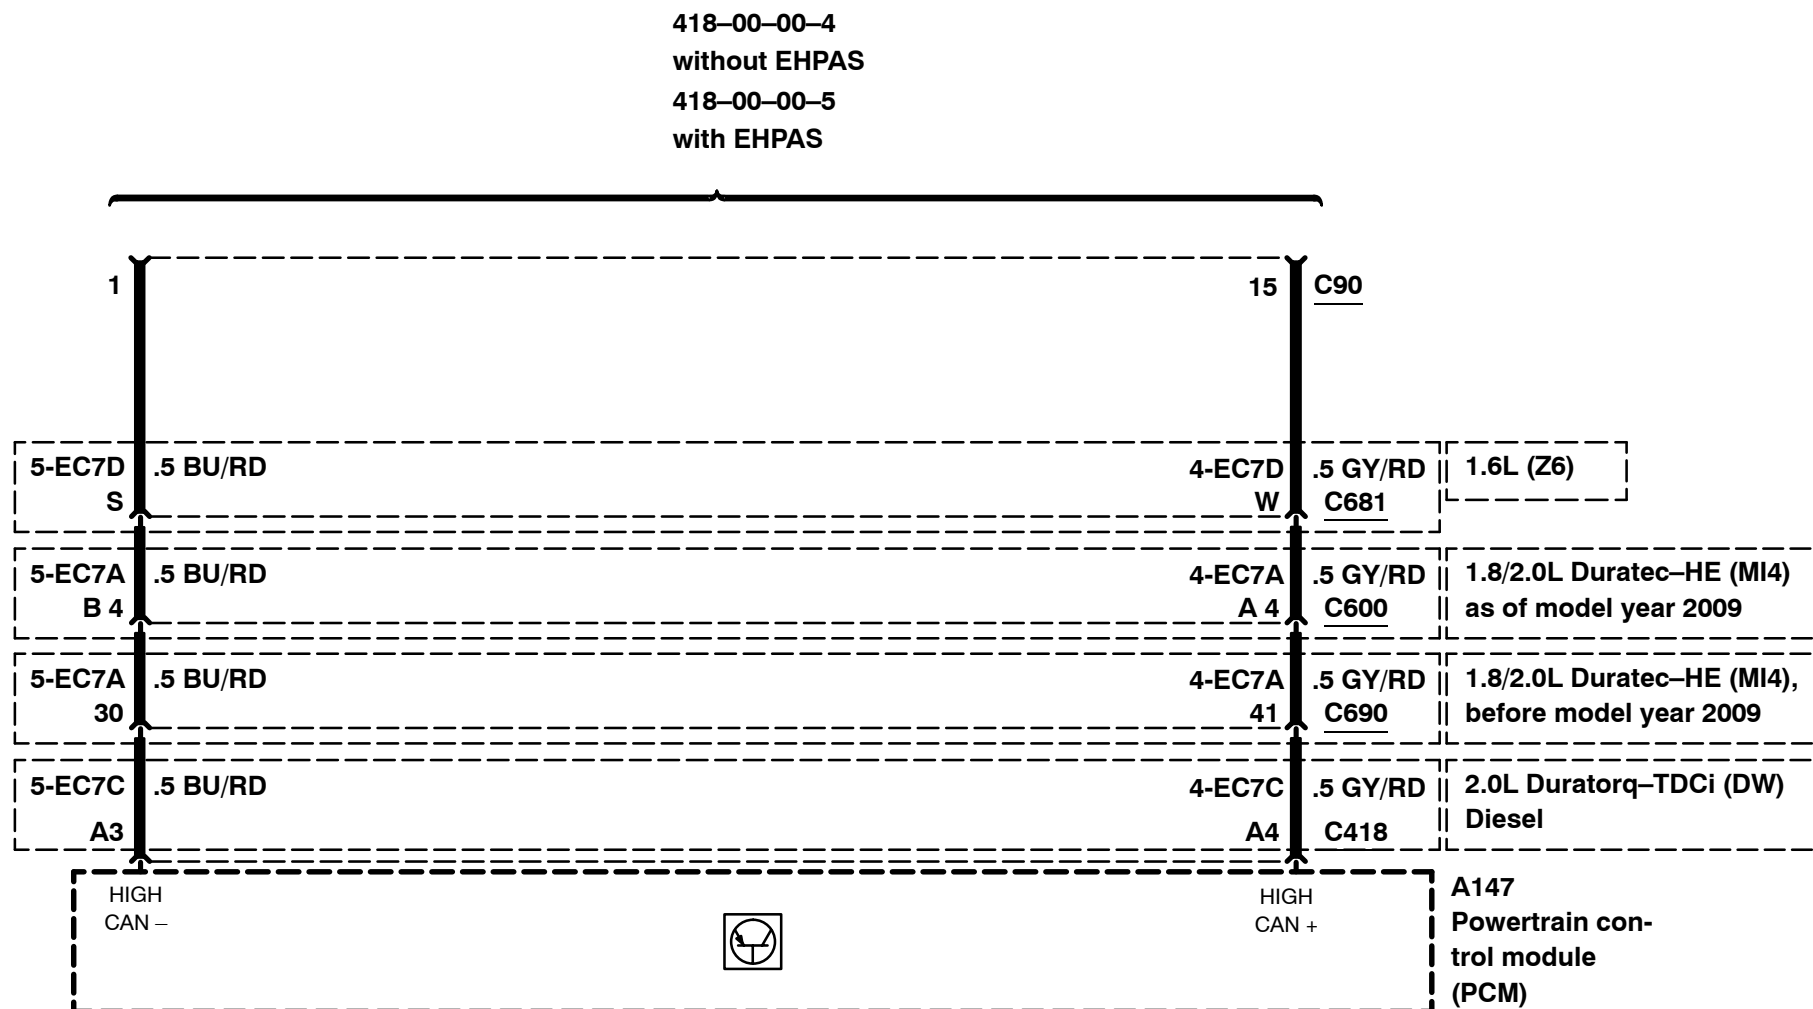



# Module Communications Network – Data Link Connector (DLC), manual transmission, manual transmission (MPS6)

02/2008  
418-00-00-7  
2008.25  
Focus

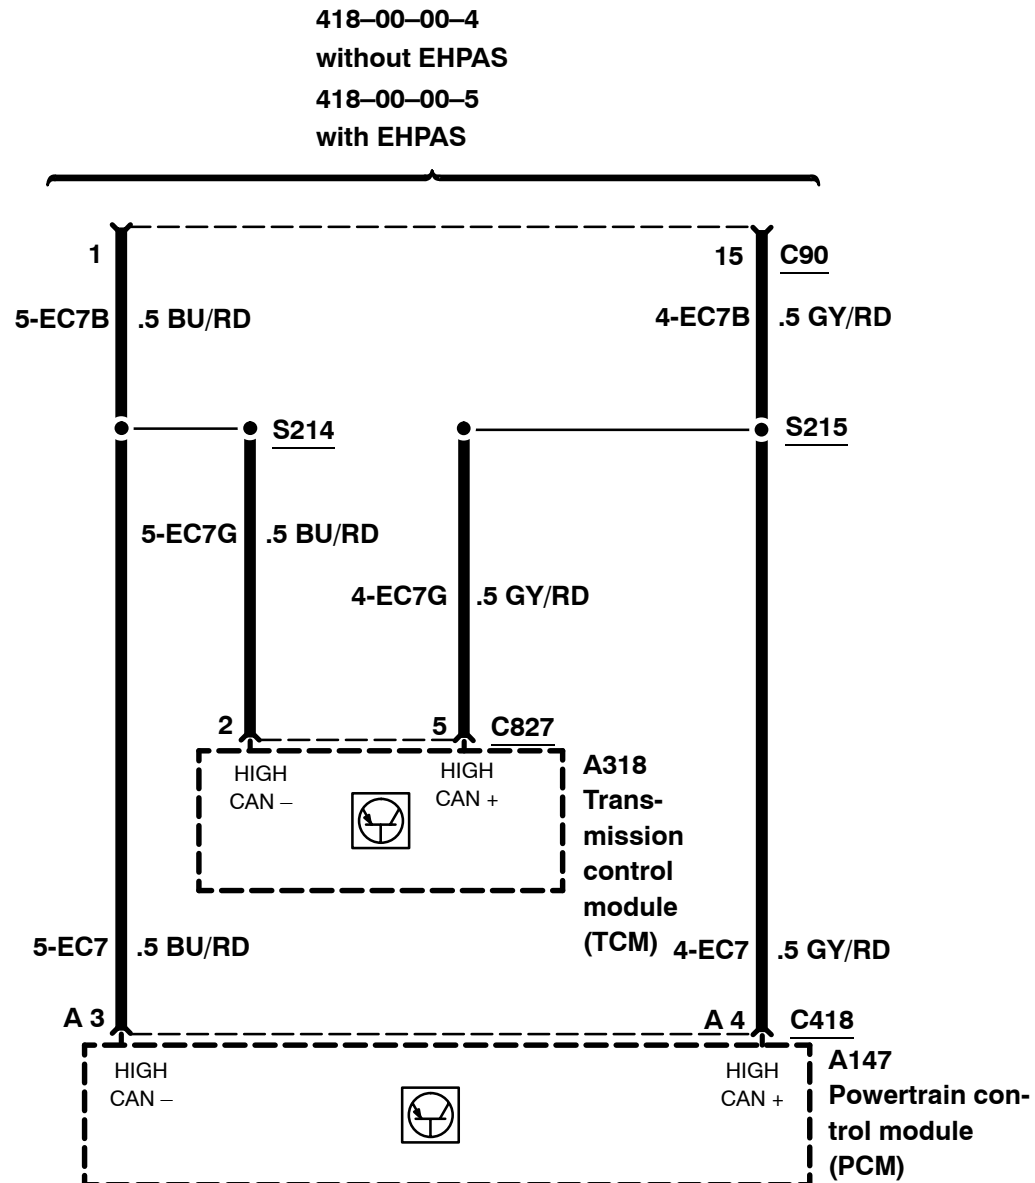


# Module Communications Network – Data Link Connector (DLC), automatic transmission

02/2008  
418-00-00-8  
2008.25  
Focus

418-00-00-4  
without EHPAS  
418-00-00-5  
with EHPAS


1.6L (Z6)

1.8/2.0L Duratec-HE (MI4)

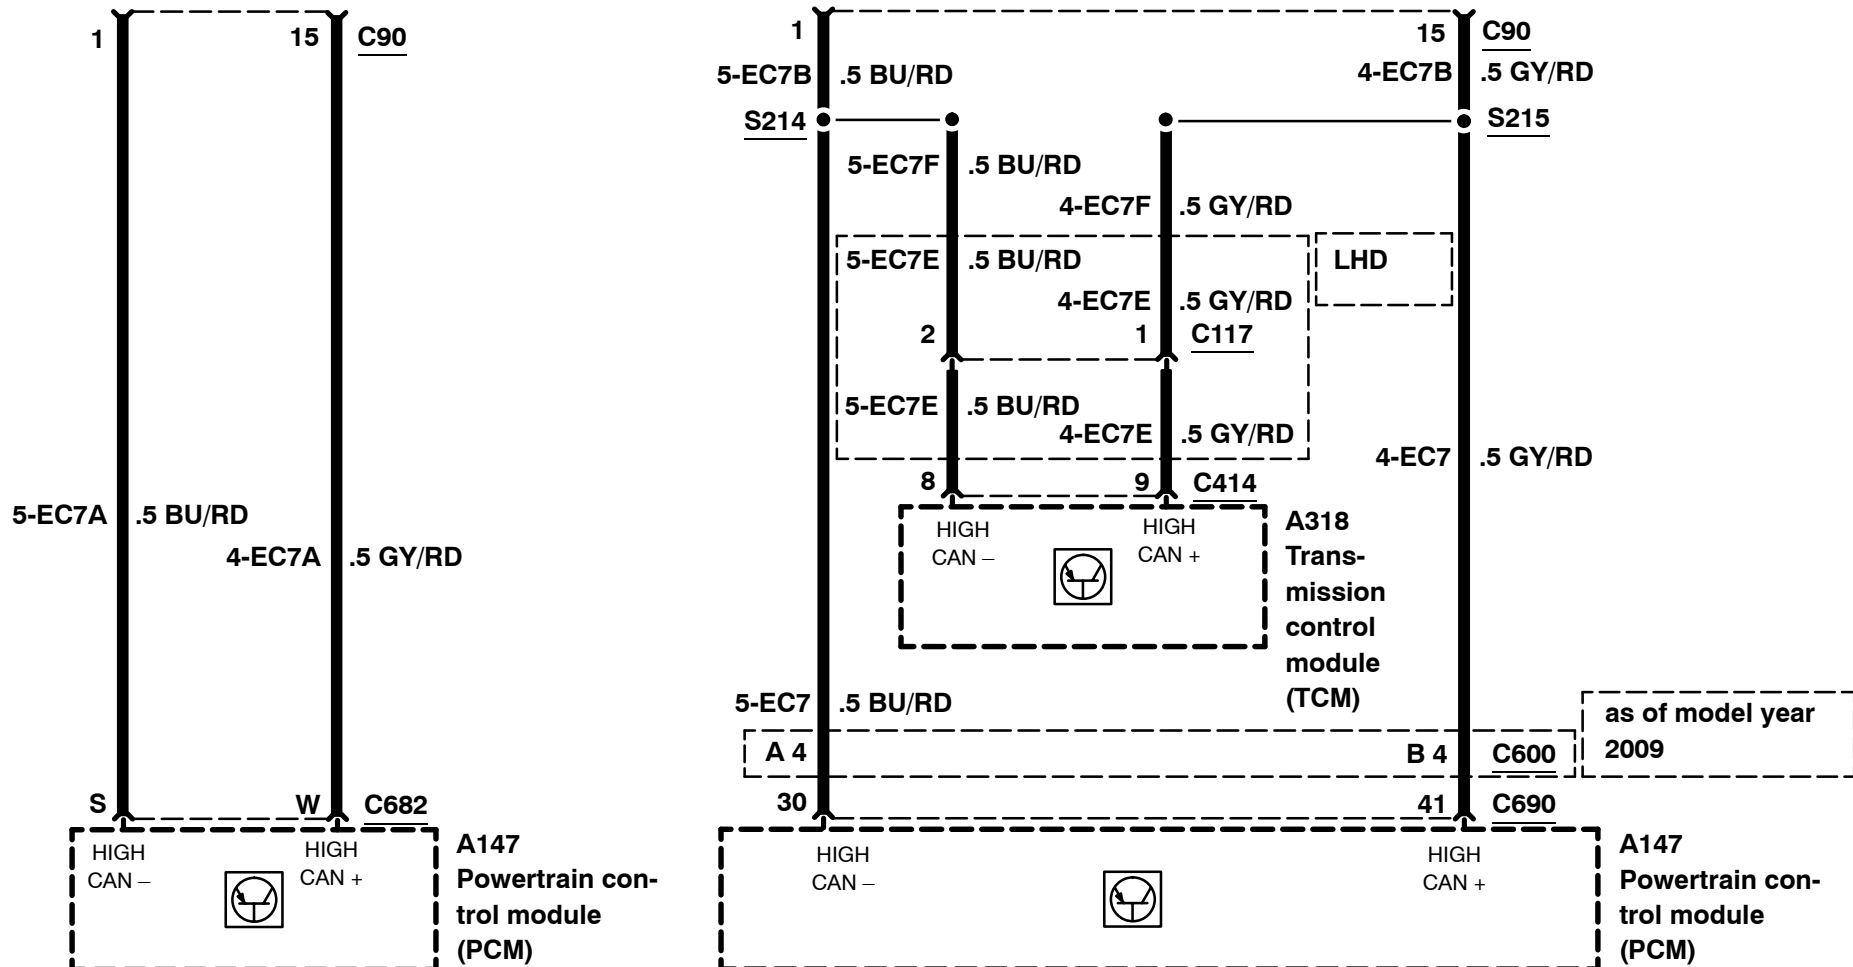


Module Communications Network – Data link connector, pins 3 and 11, without EATC, China, Taiwan with DVD player

02/2008  
418-00-00-9  
2008.25  
Focus

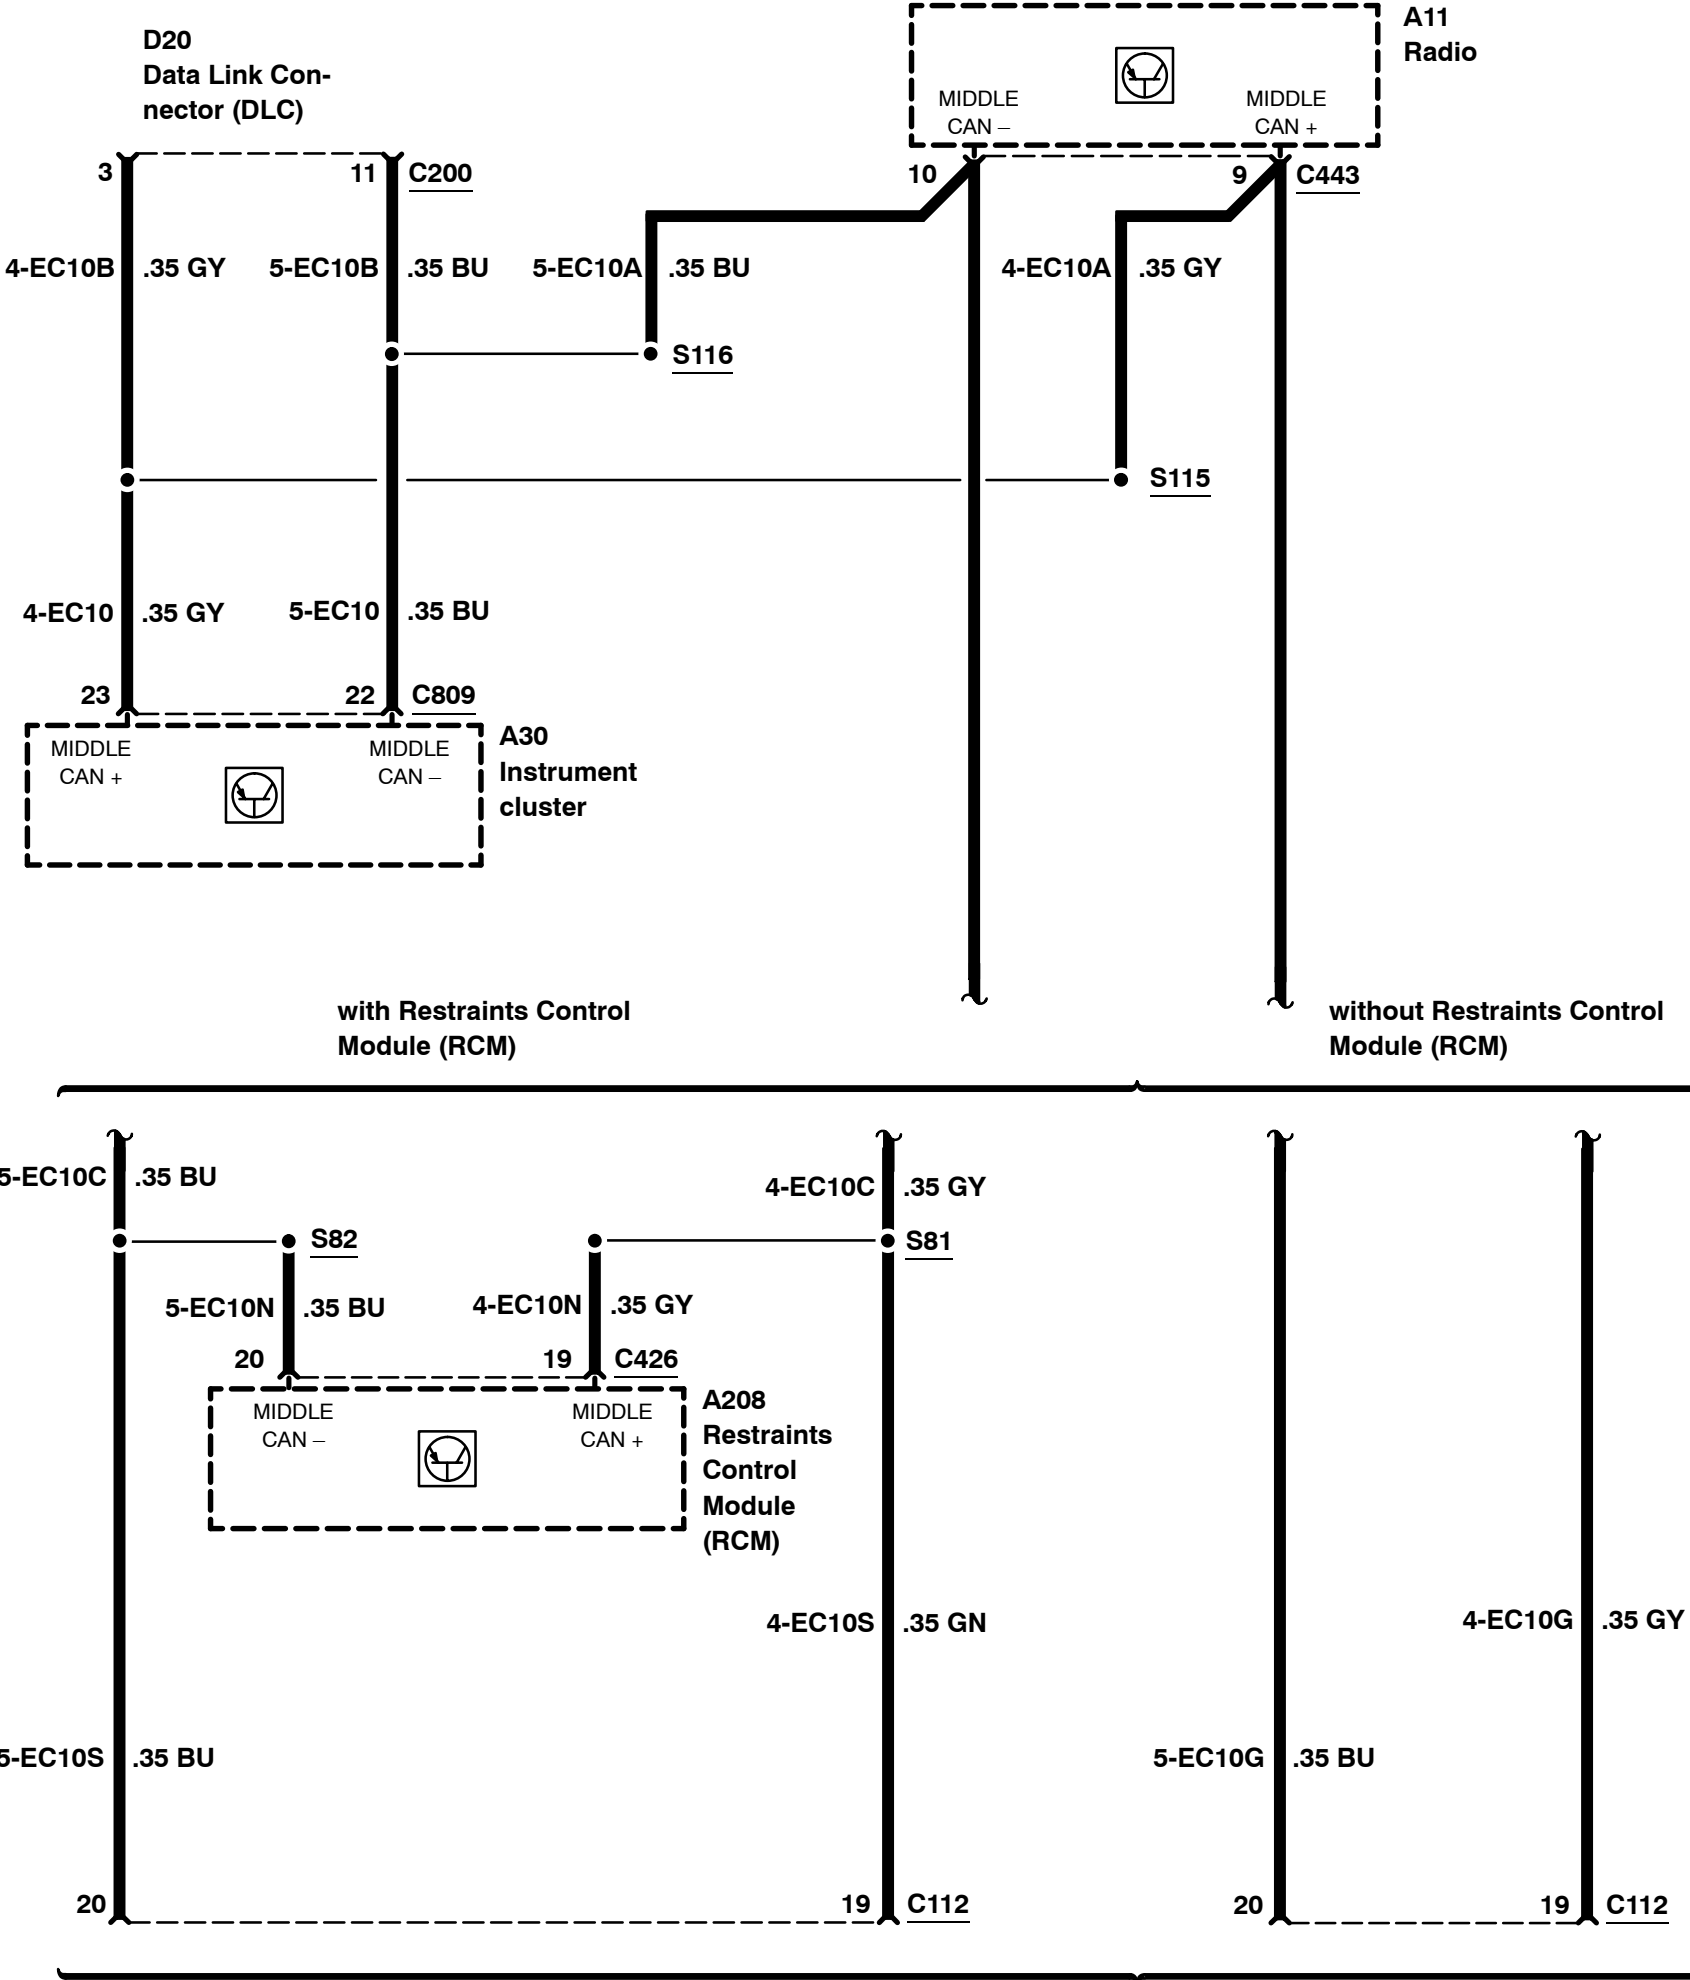

Module Communications Network – Data link connector, pins 3 and 11, with EATC, without air bags, China, Taiwan with DVD player


02/2008  
418-00-00-10  
2008.25  
Focus

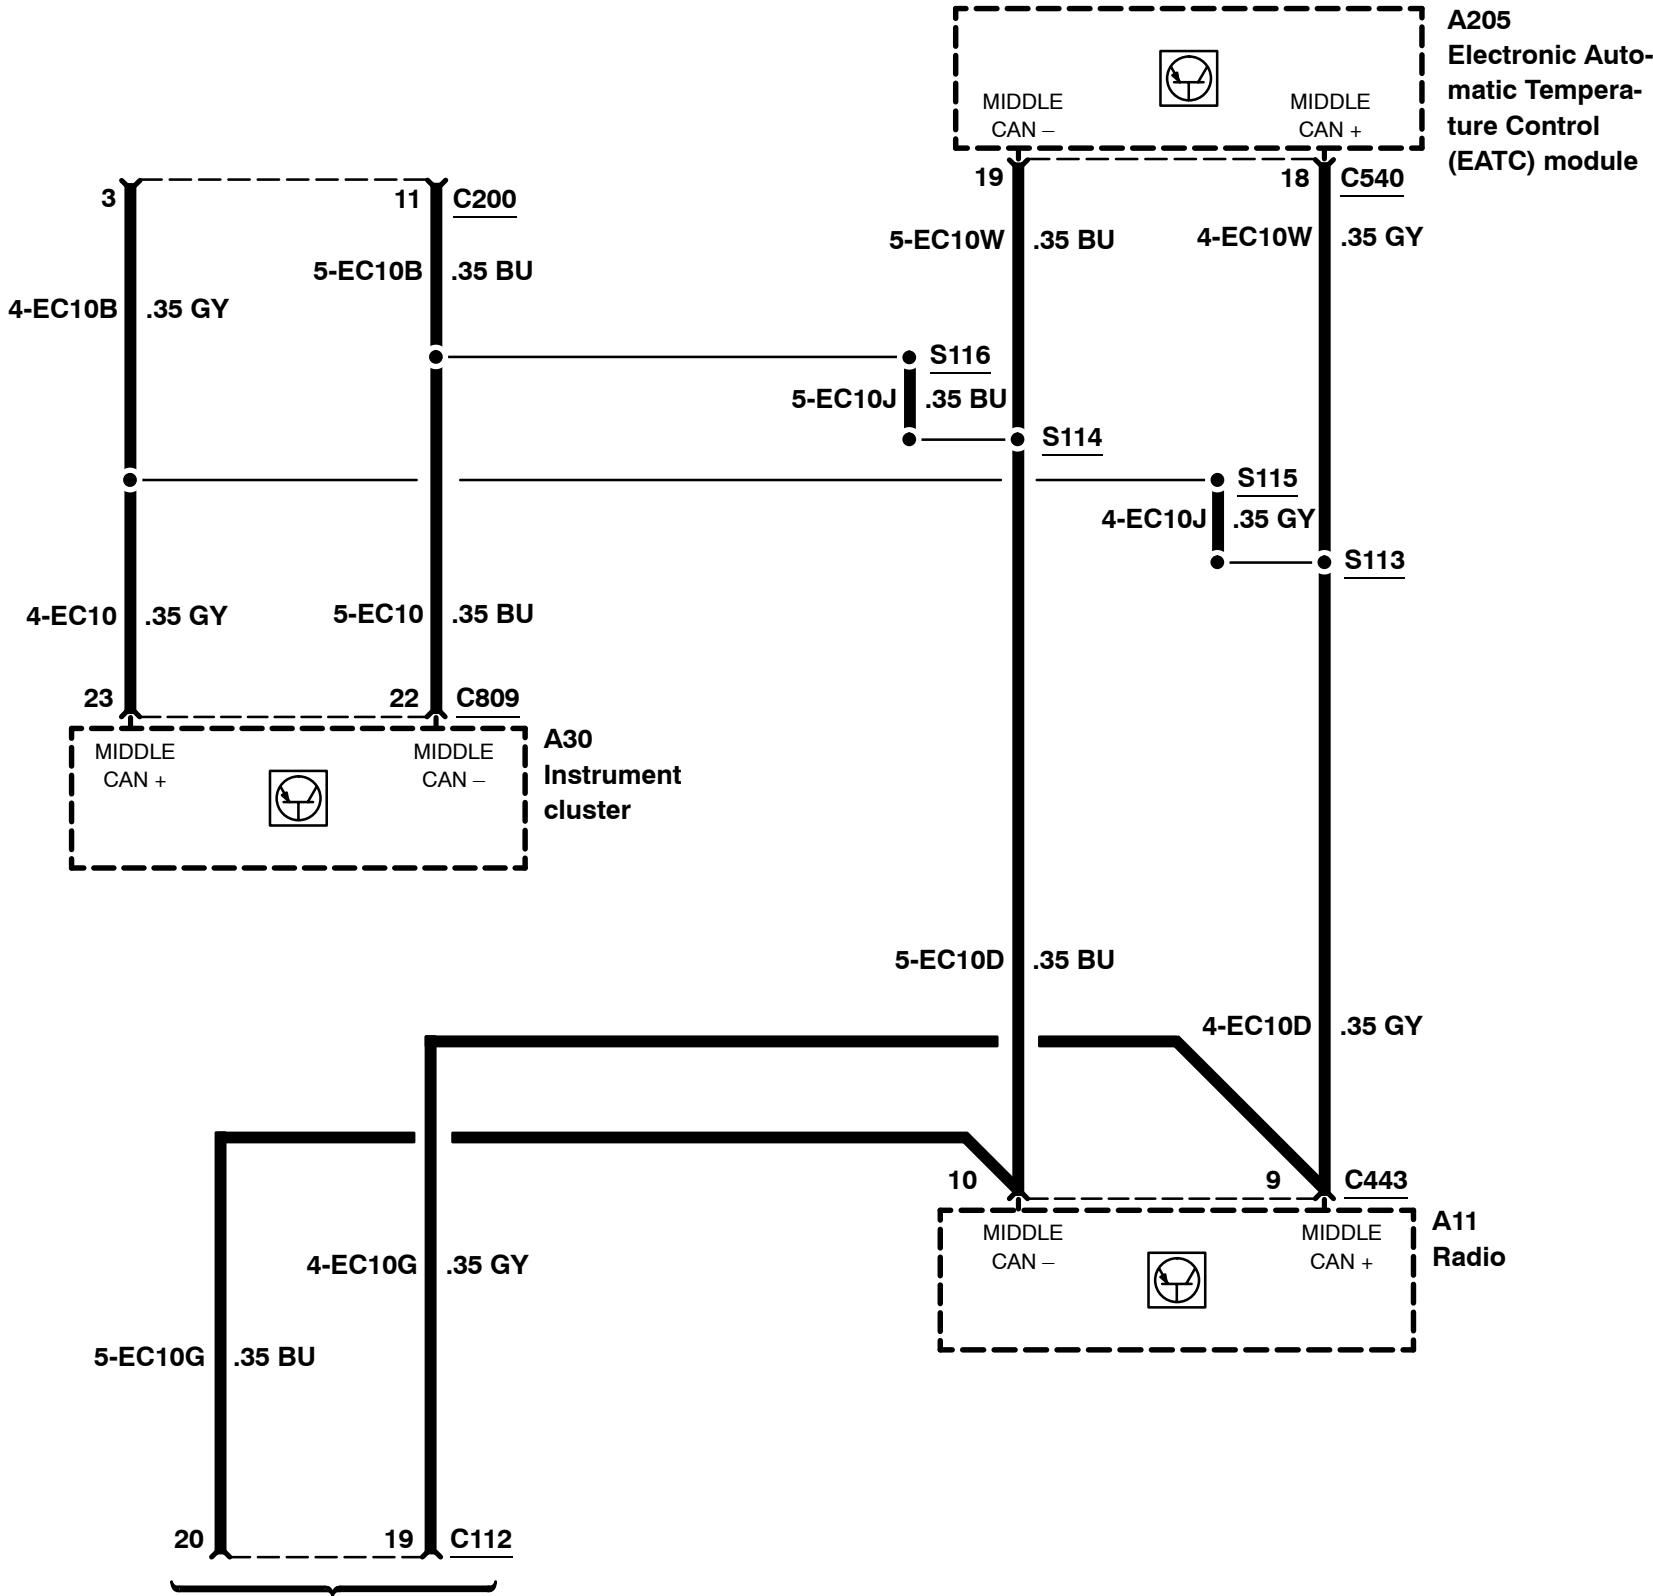


- 418-00-00-15 LHD, with parking aid, before model year 2009
- 418-00-00-16 LHD, without parking aid, before model year 2009
- 418-00-00-17 RHD, with parking aid, before model year 2009
- 418-00-00-18 RHD, without parking aid, before model year 2009
- 418-00-00-19 without parking aid, as of model year 2009
- 418-00-00-20 with parking aid, as of model year 2009
- 418-00-00-21 with front power windows

Module Communications Network – Data link connector, pins 3 and 11, with EATC, with air bags, China, Taiwan with DVD player


02/2008  
418-00-00-11  
2008.25  
Focus

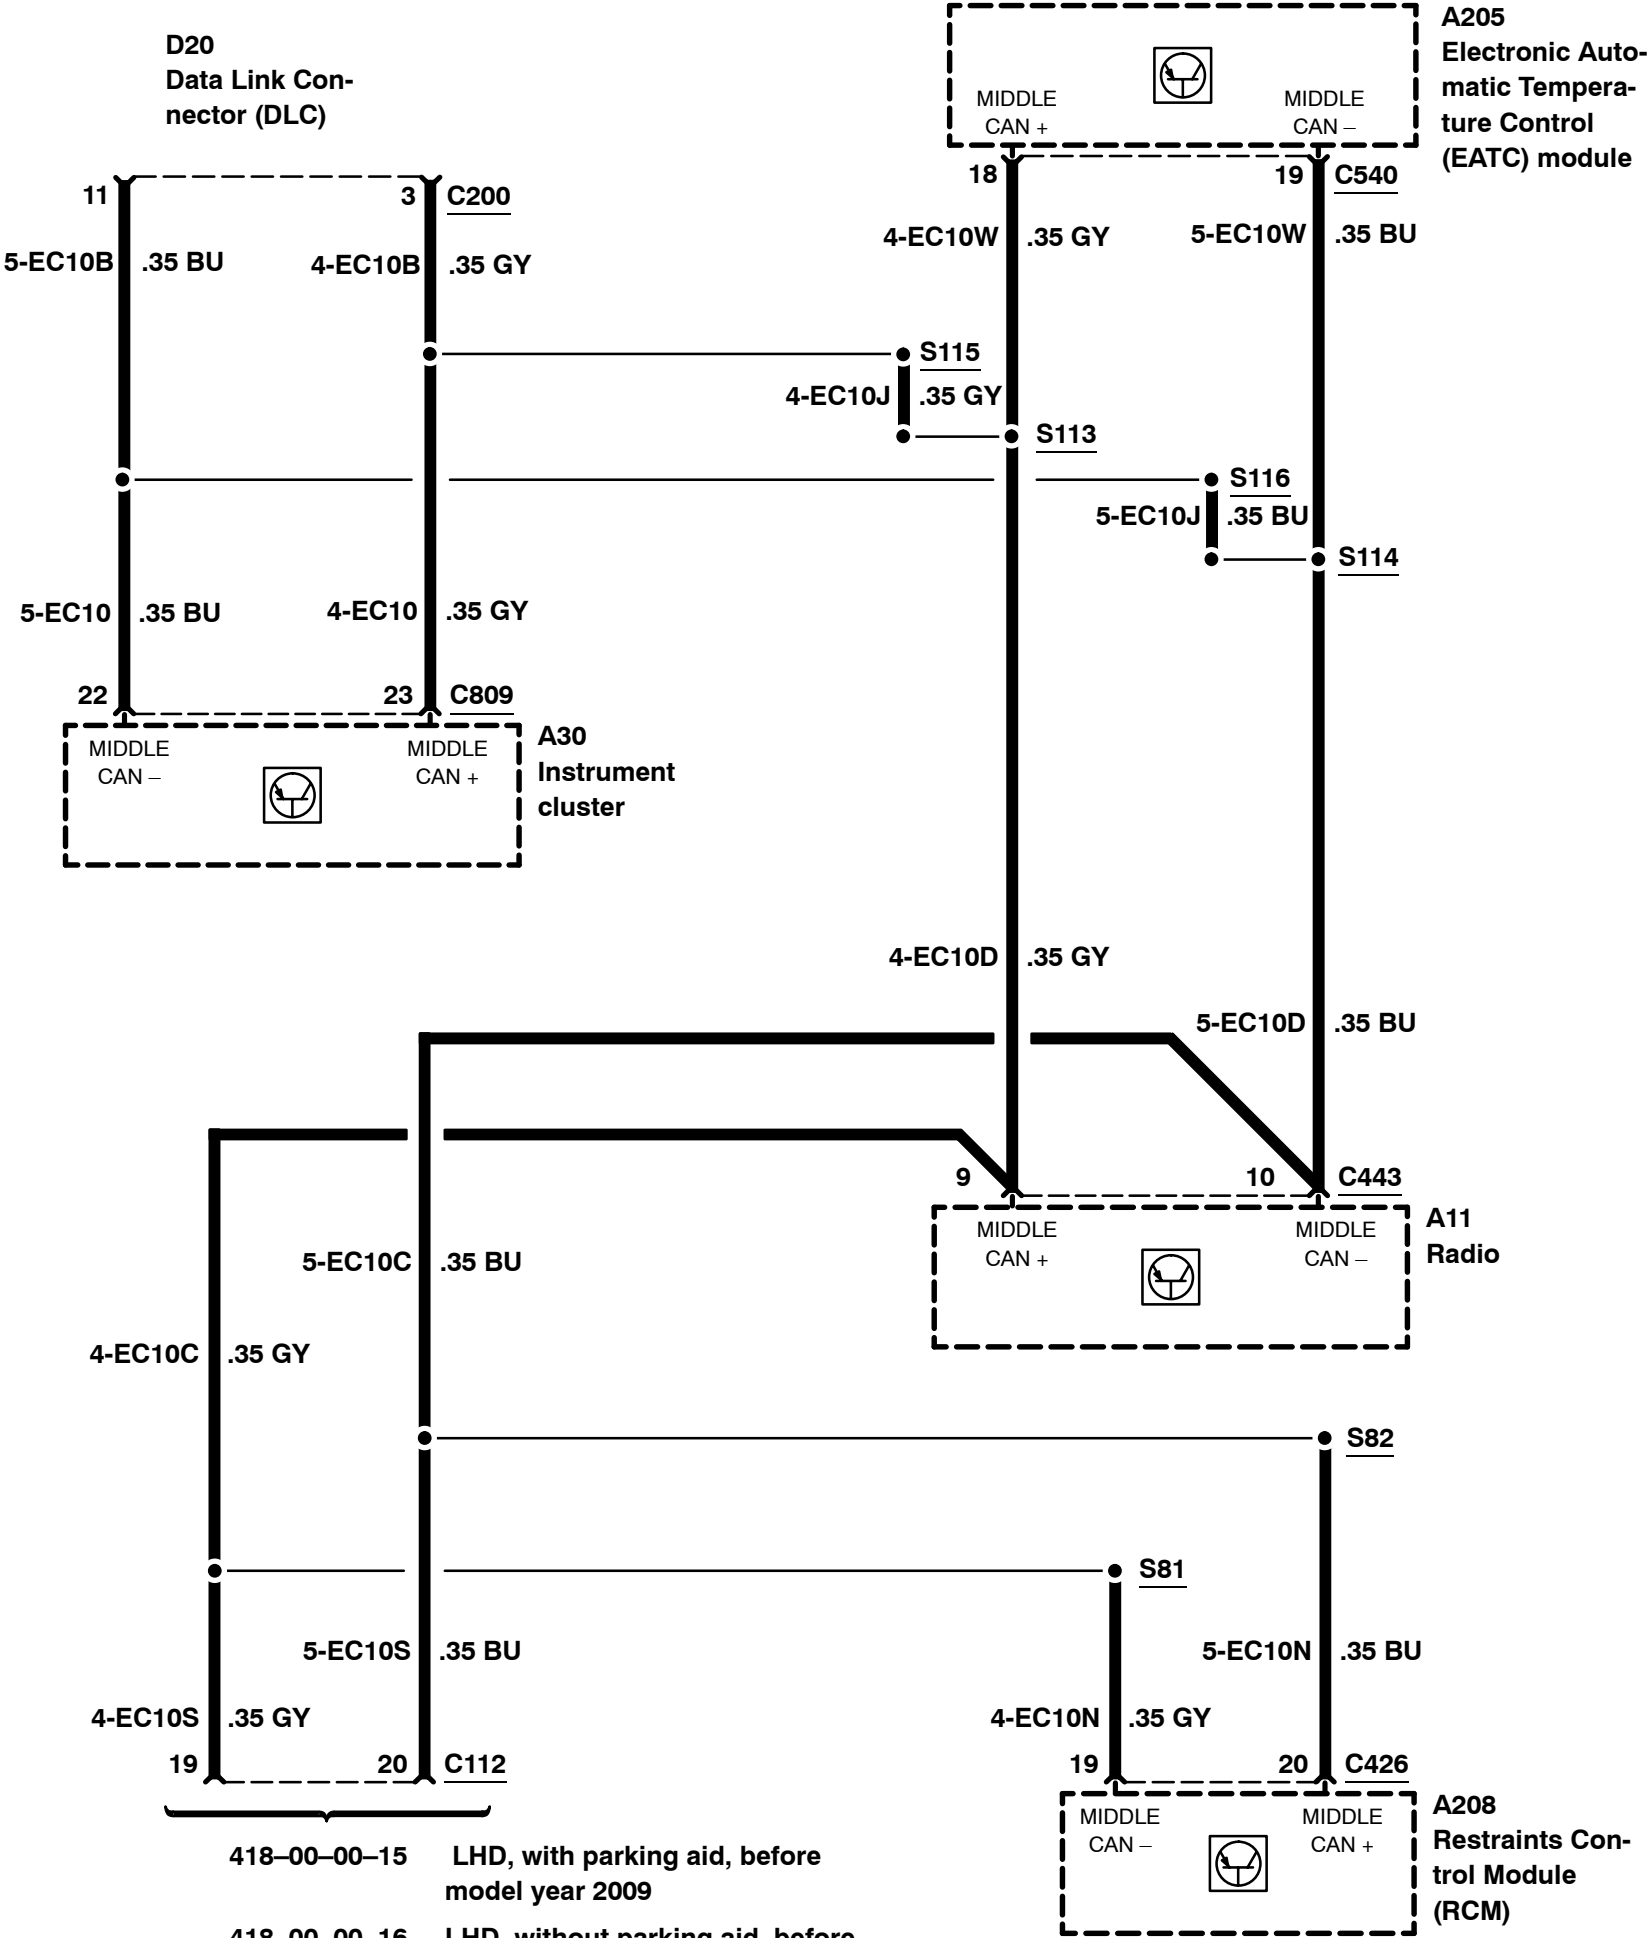

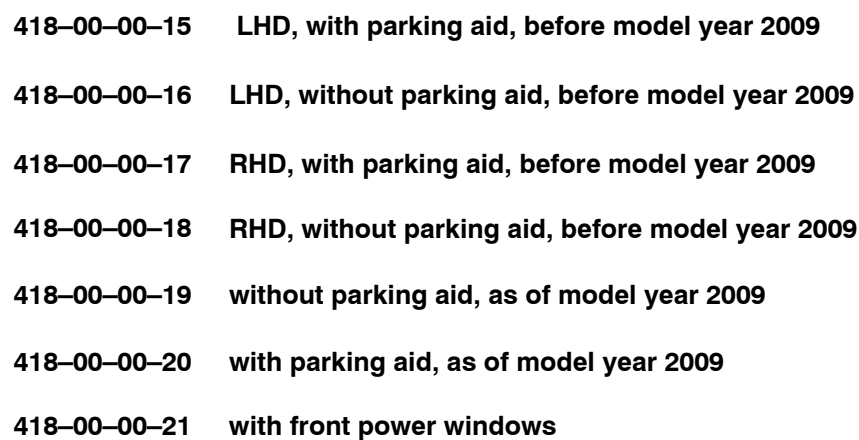


Module Communications Network – Data link connector, pins 3 and 11, with EATC, without air bags, except China, Taiwan without DVD player

02/2008  
418-00-00-13  
2008.25  
Focus

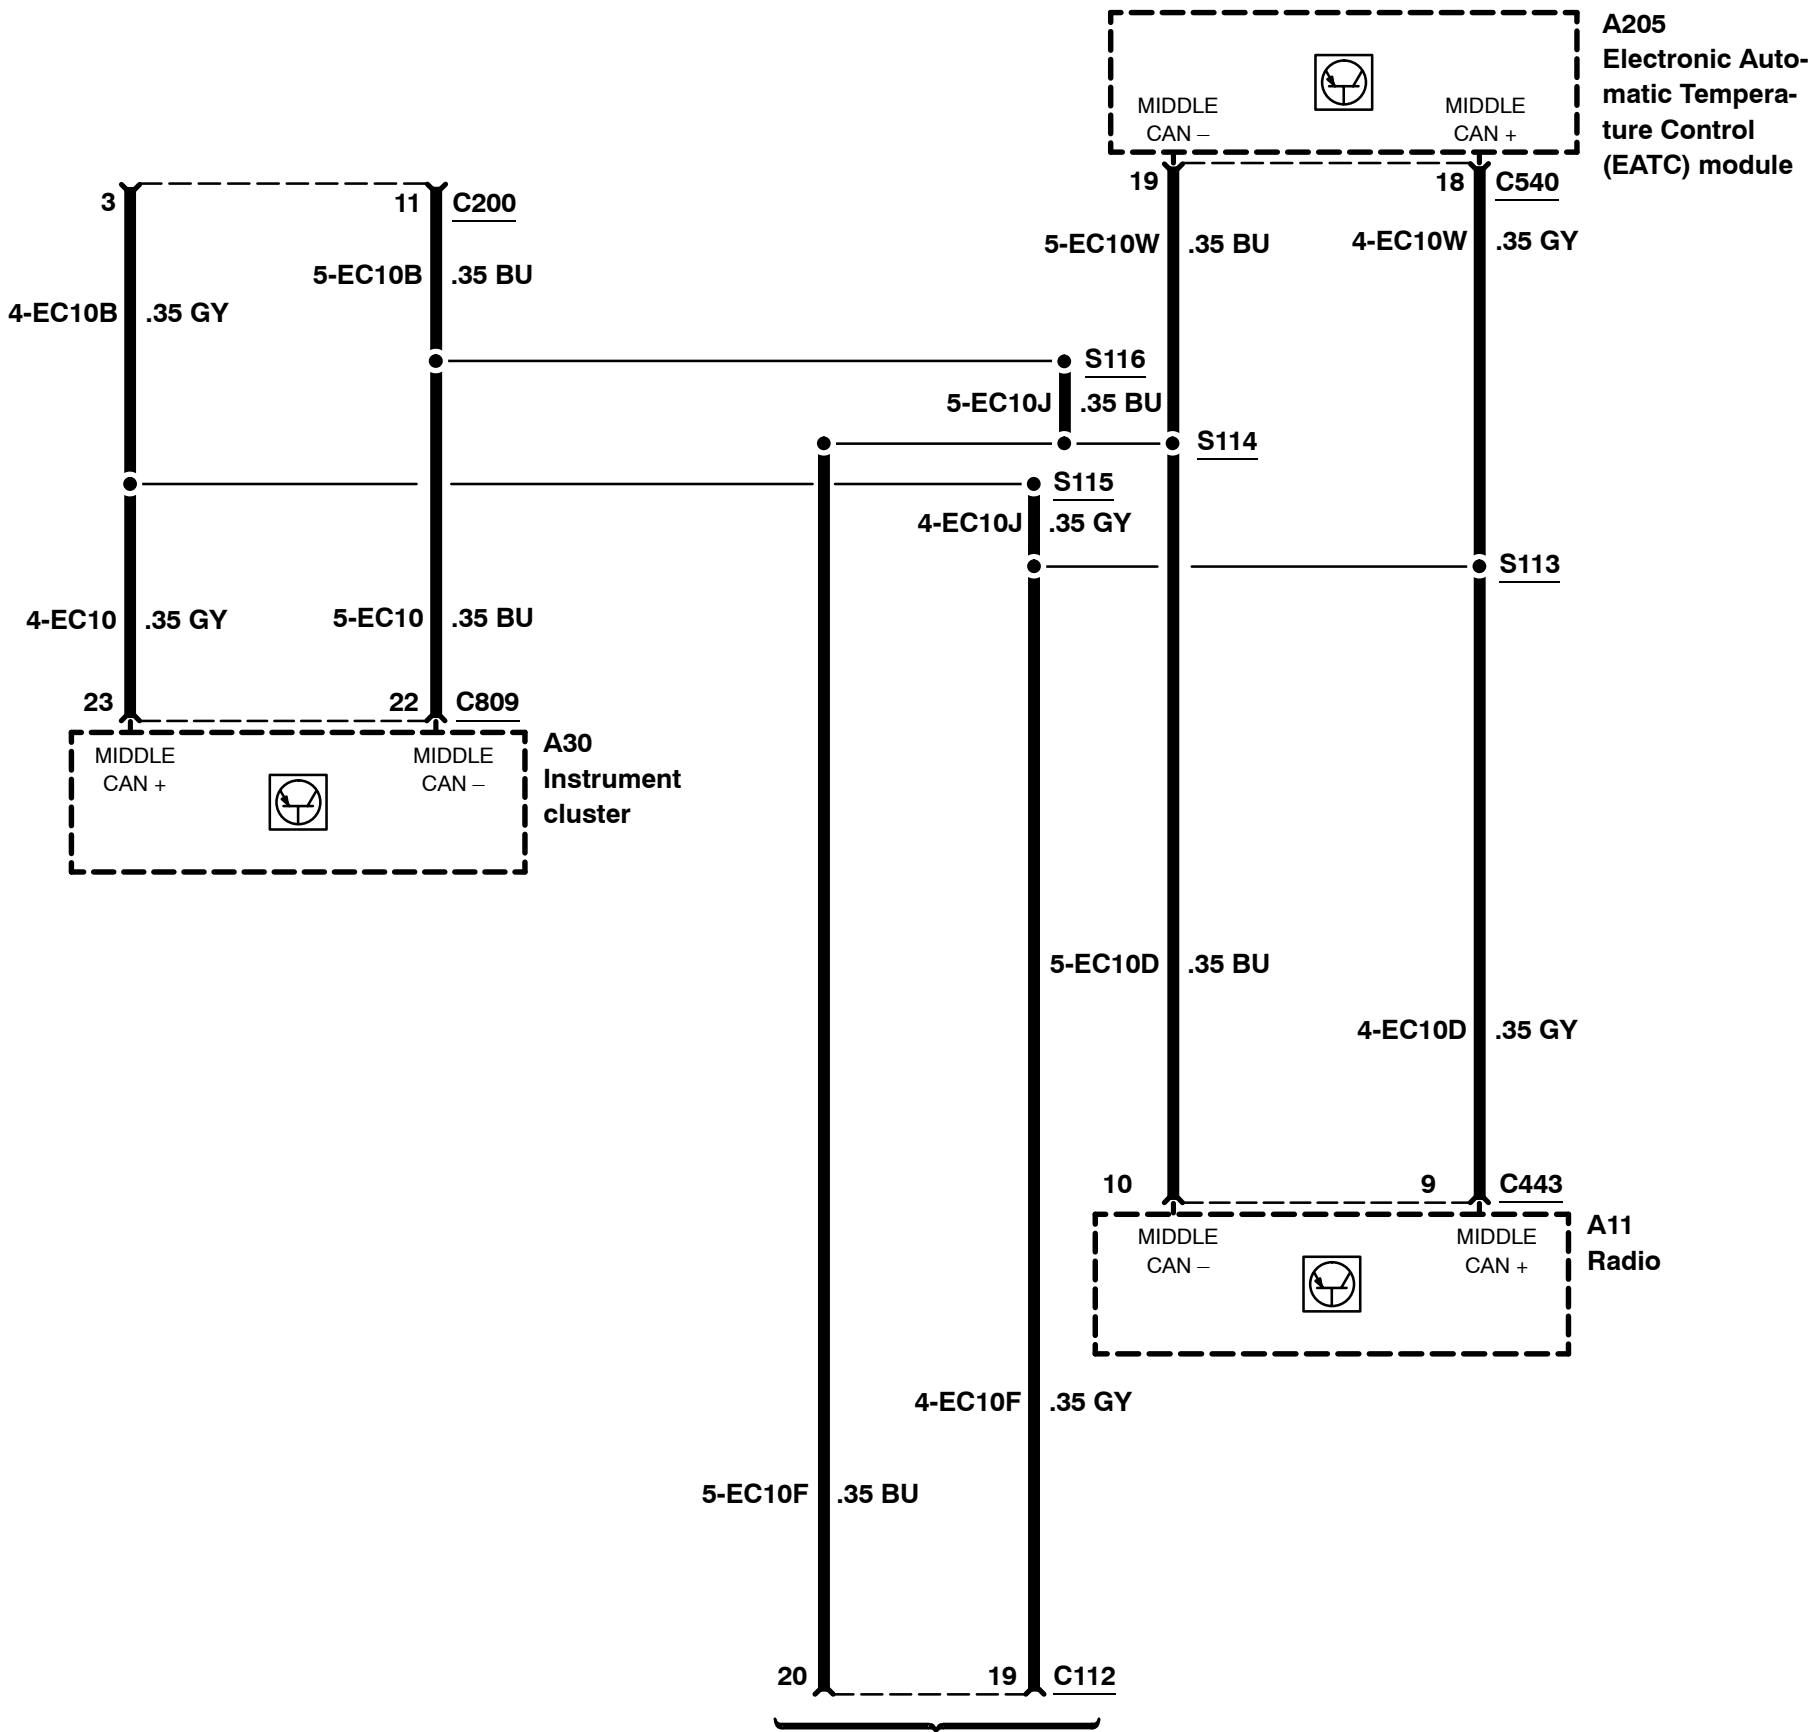

- 418-00-00-15 LHD, with parking aid, before model year 2009
- 418-00-00-16 LHD, without parking aid, before model year 2009
- 418-00-00-17 RHD, with parking aid, before model year 2009
- 418-00-00-18 RHD, without parking aid, before model year 2009
- 418-00-00-19 without parking aid, as of model year 2009
- 418-00-00-20 with parking aid, as of model year 2009
- 418-00-00-21 with front power windows




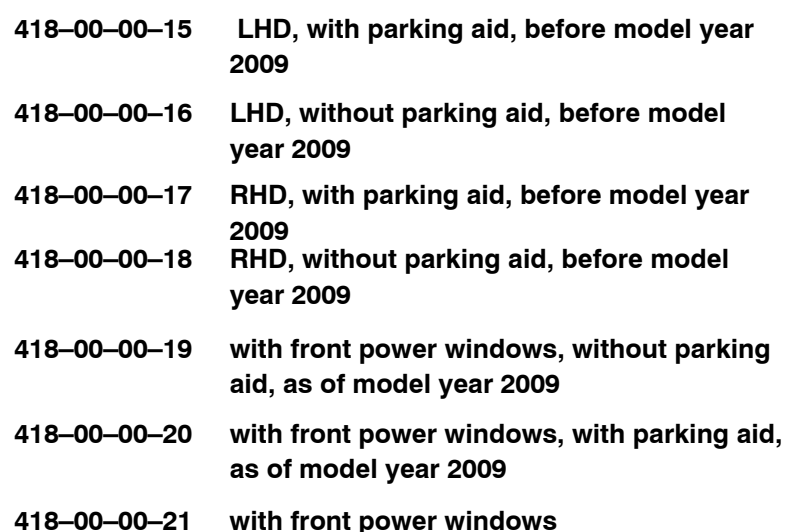




# Module Communications Network – Data Link Connector (DLC), with front and rear power windows, with parking aid, LHD, before model year 2009

02/2008  
418-00-00-15  
2008.25  
Focus

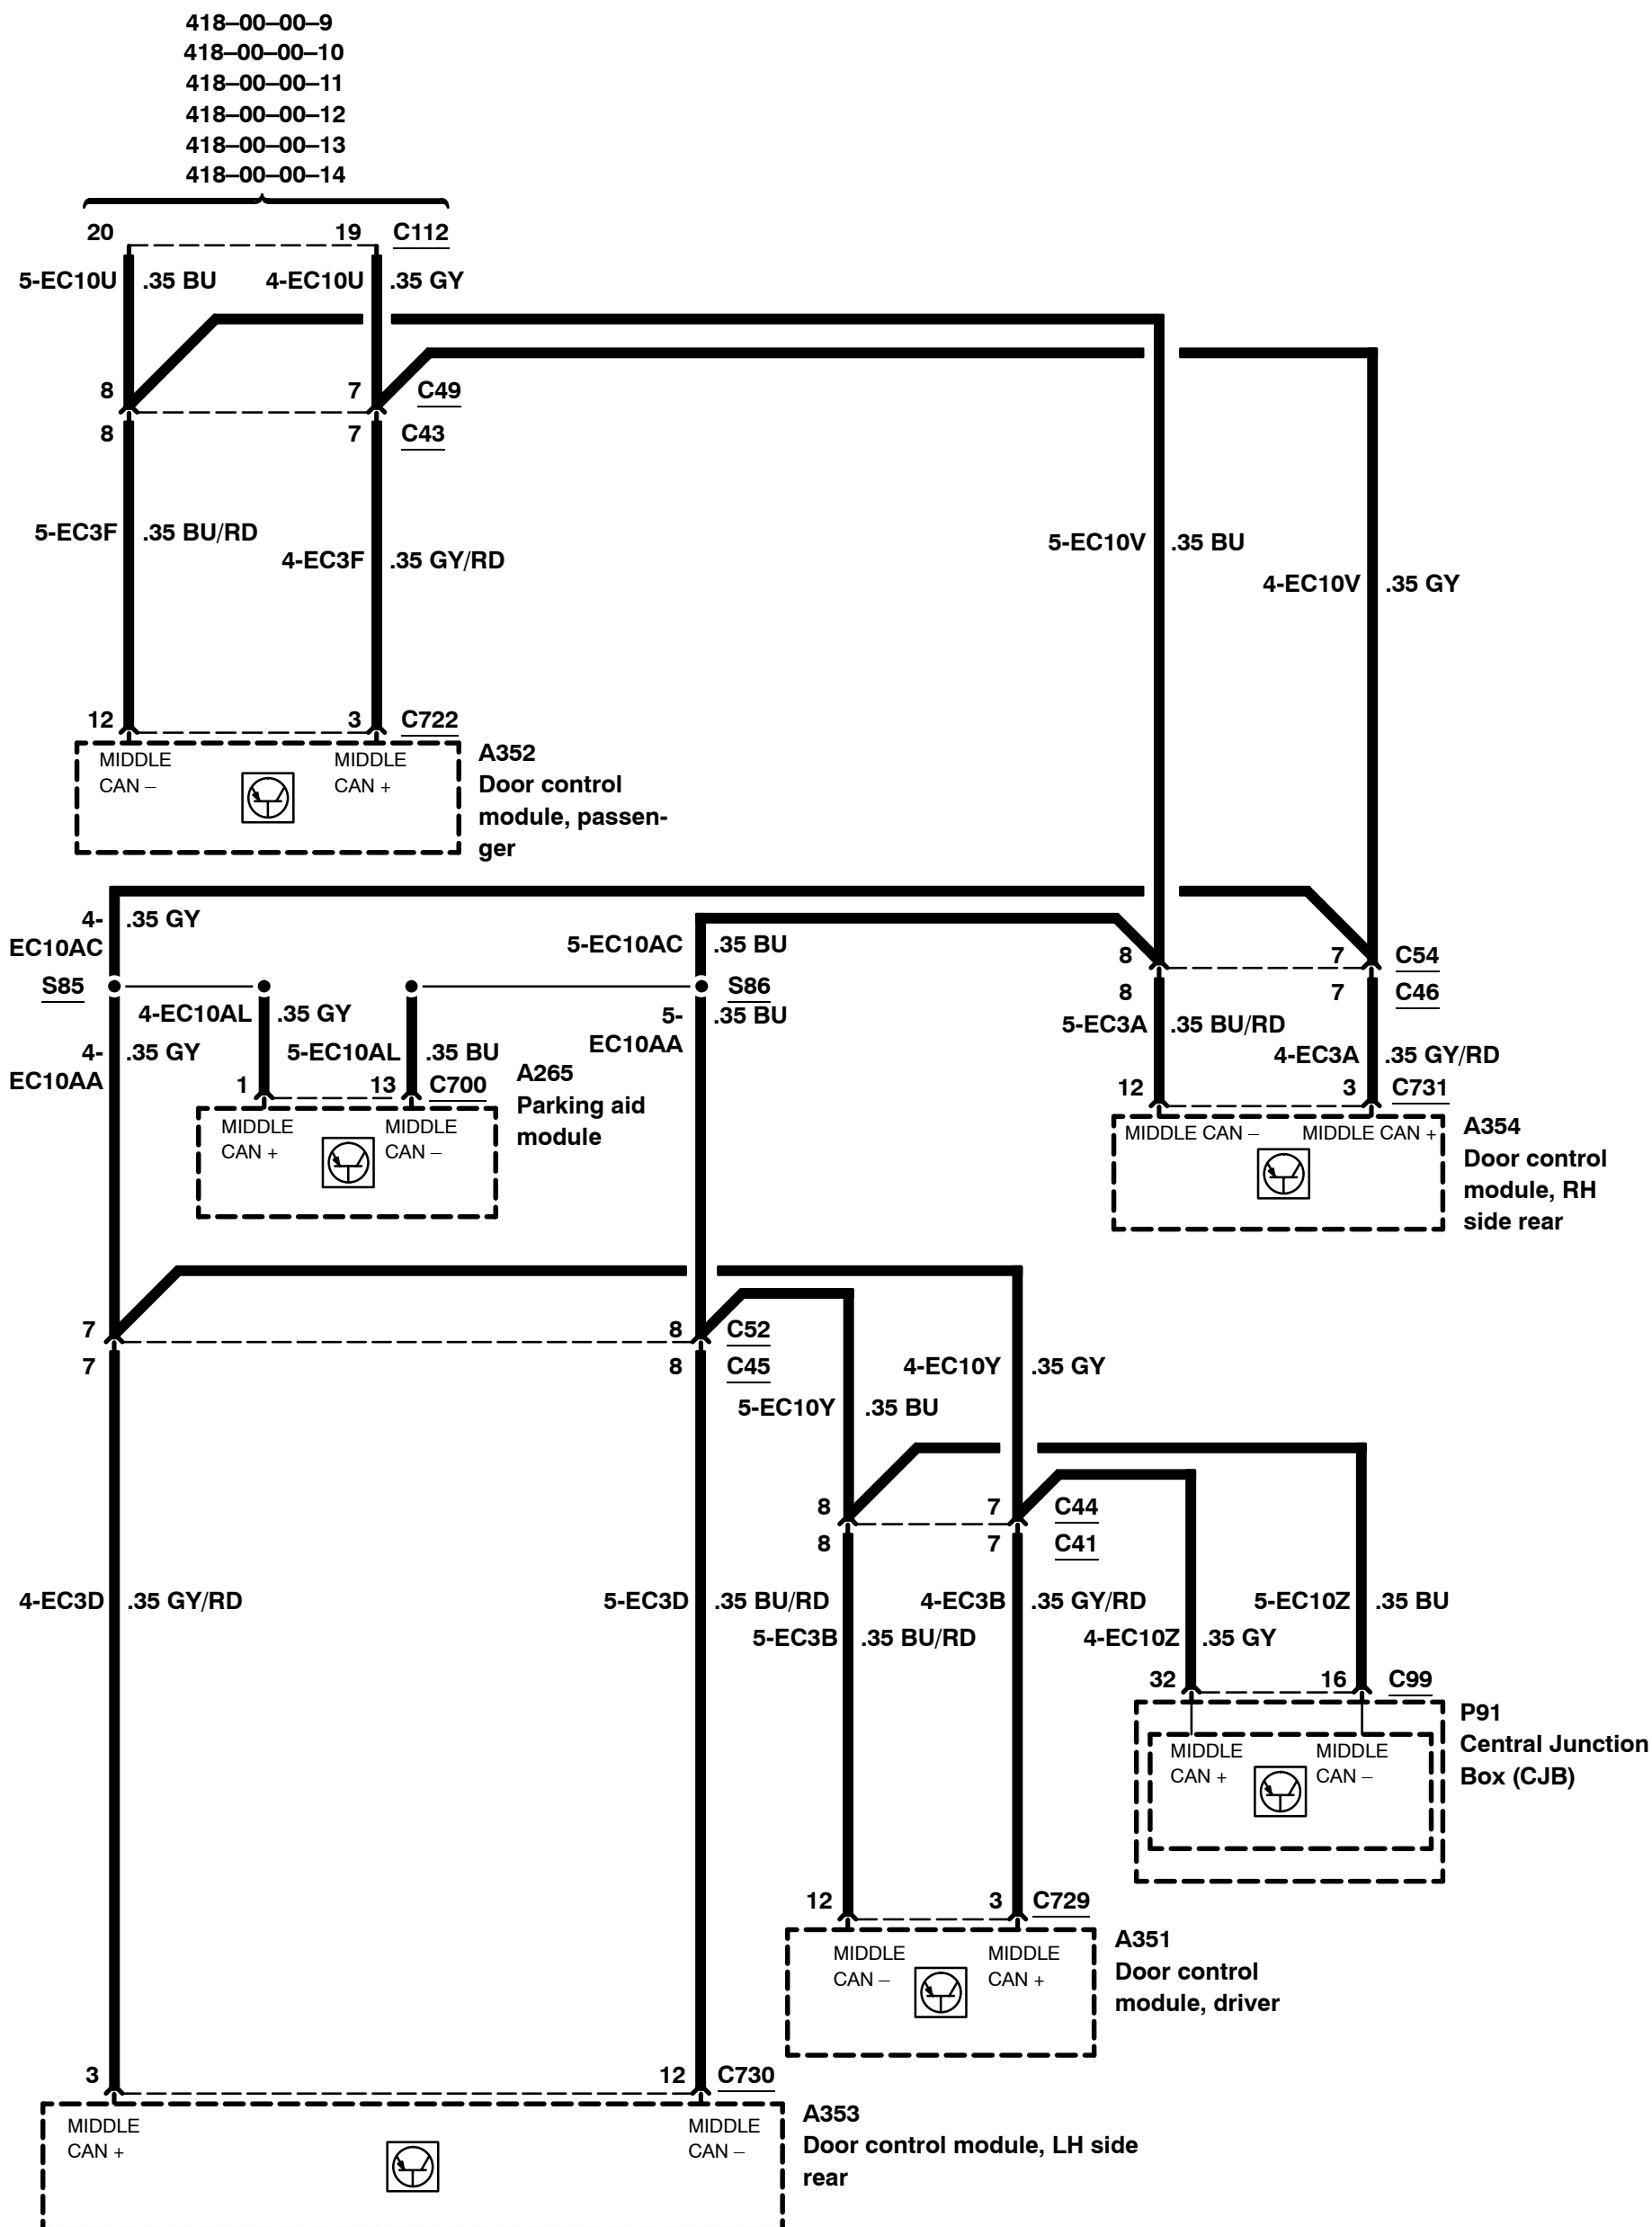


# Module Communications Network – Data Link Connector (DLC), with front and rear power windows, without parking aid, LHD, before model year 2009

02/2008  
418-00-00-16  
2008.25  
Focus

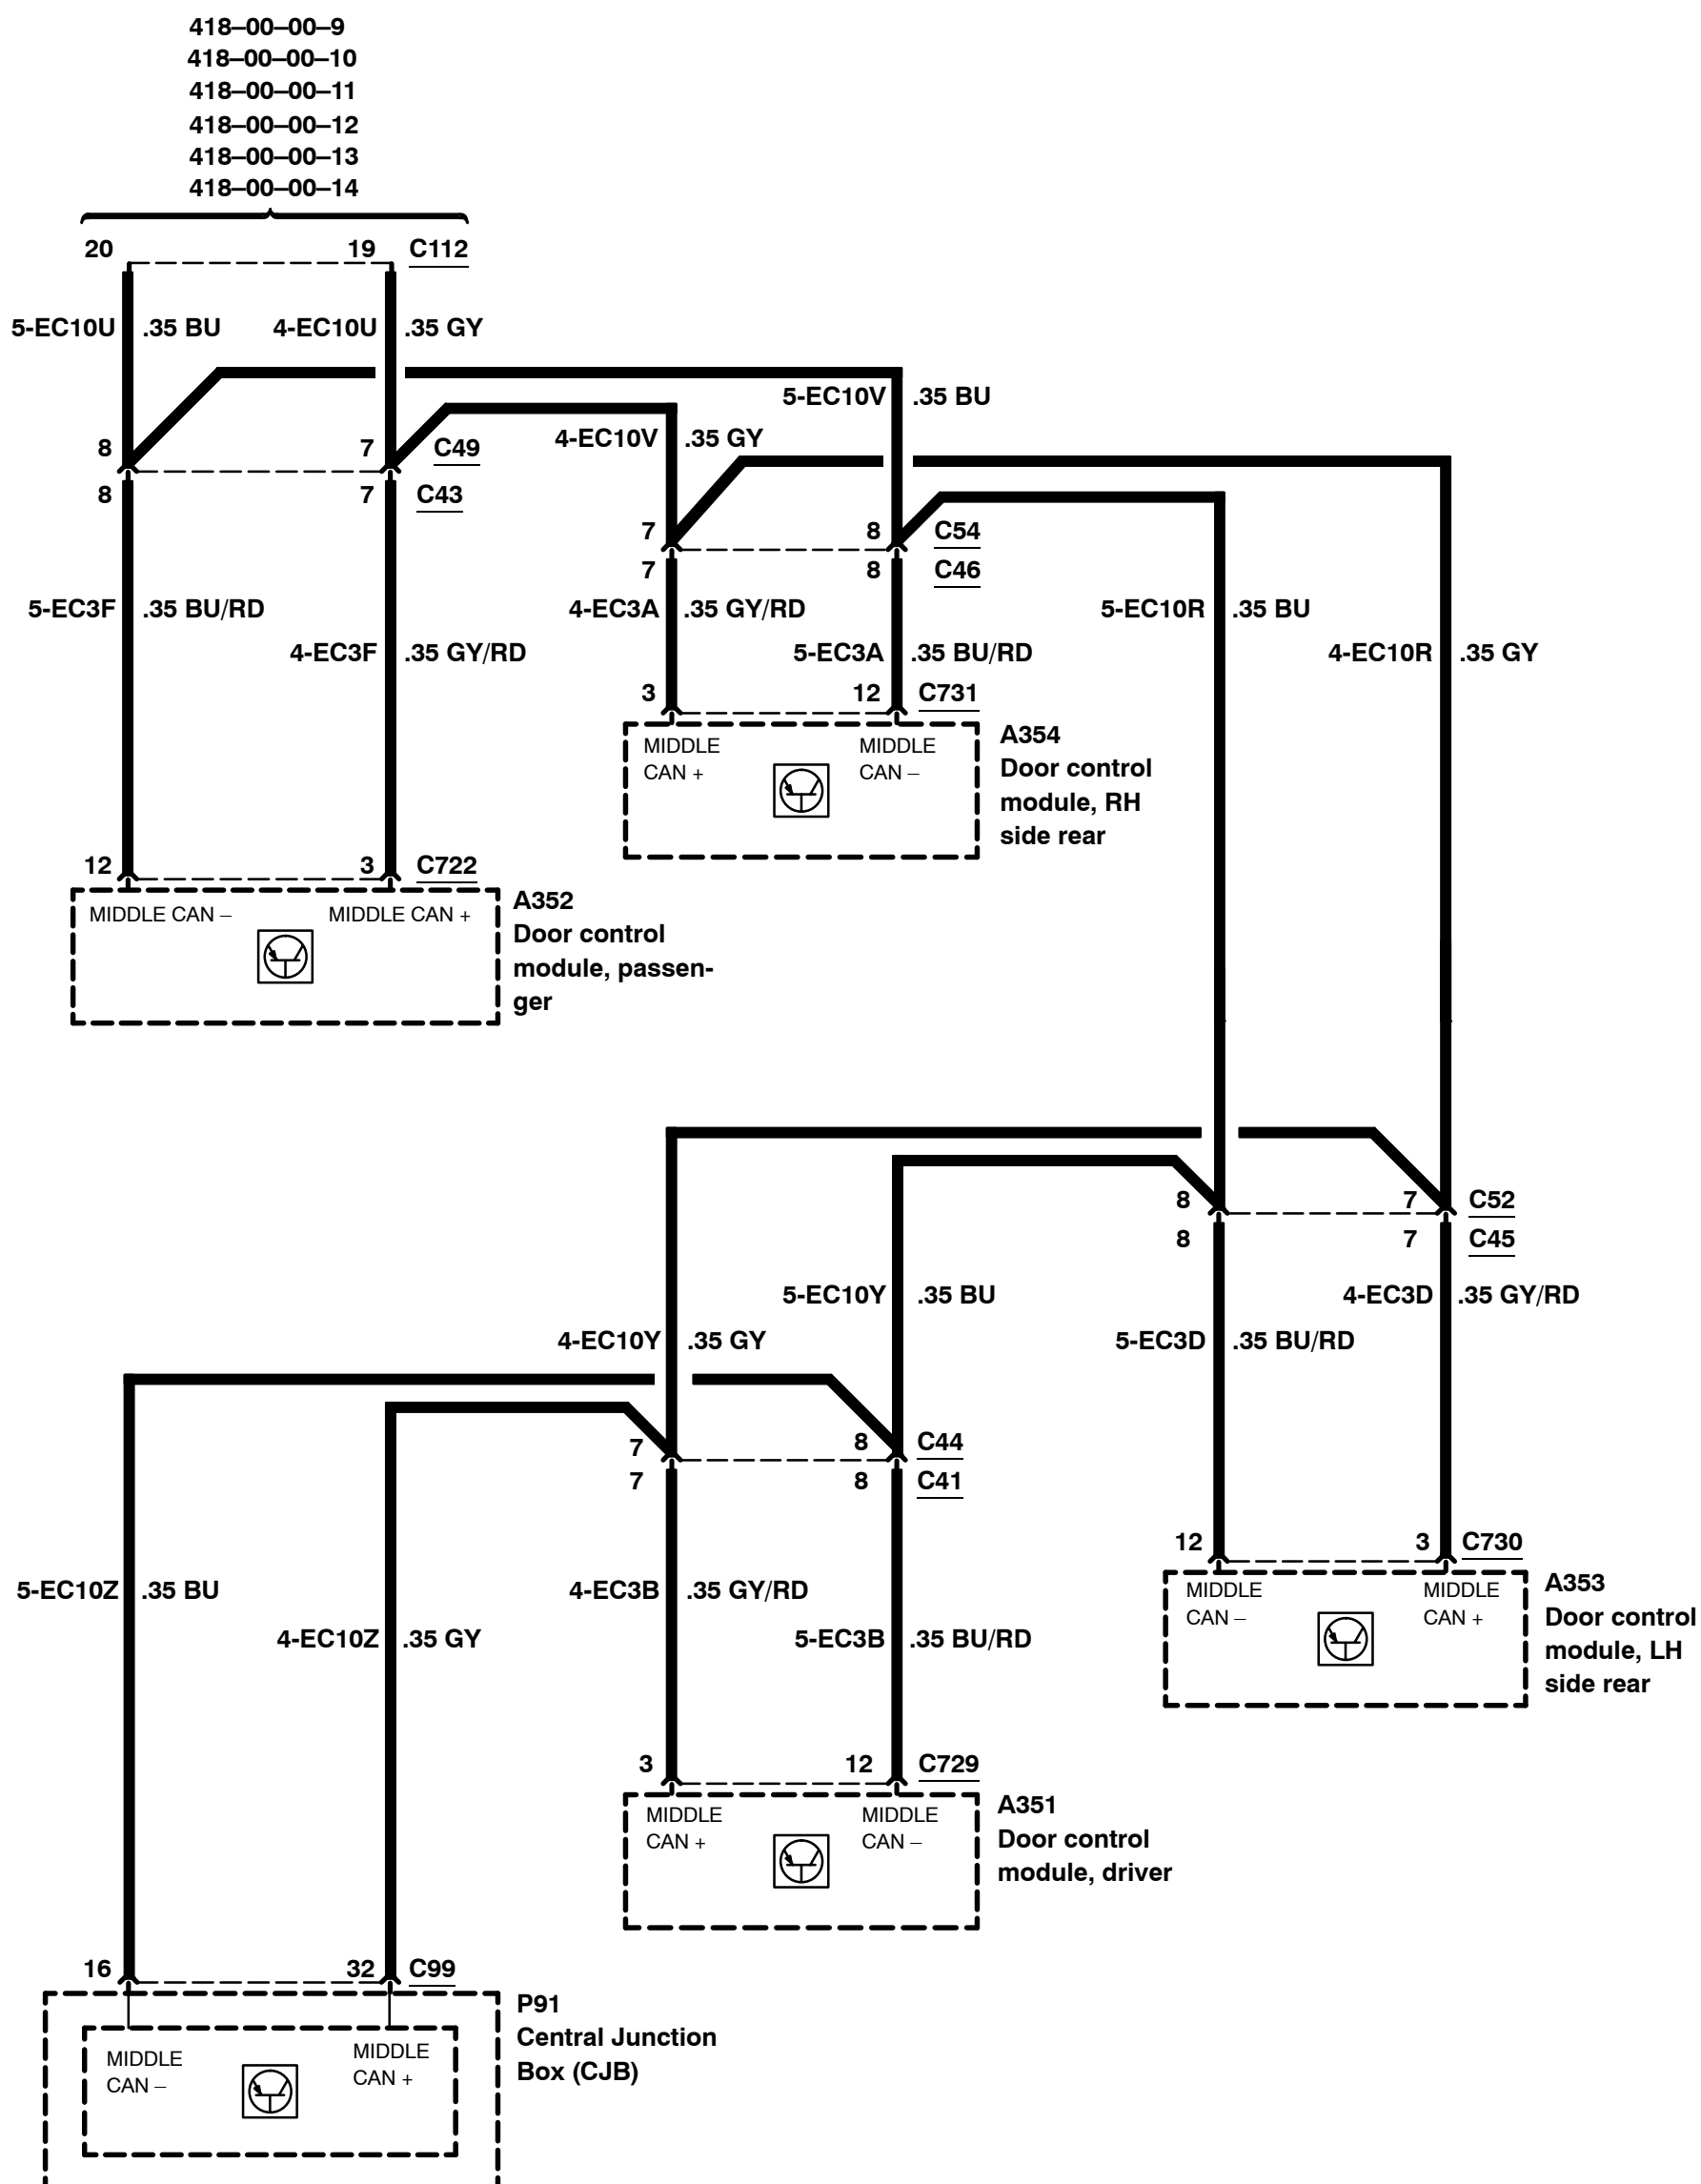


# Module Communications Network – Data Link Connector (DLC), with front and rear power windows, with parking aid, RHD, before model year 2009

02/2008  
418-00-00-17  
2008.25  
Focus

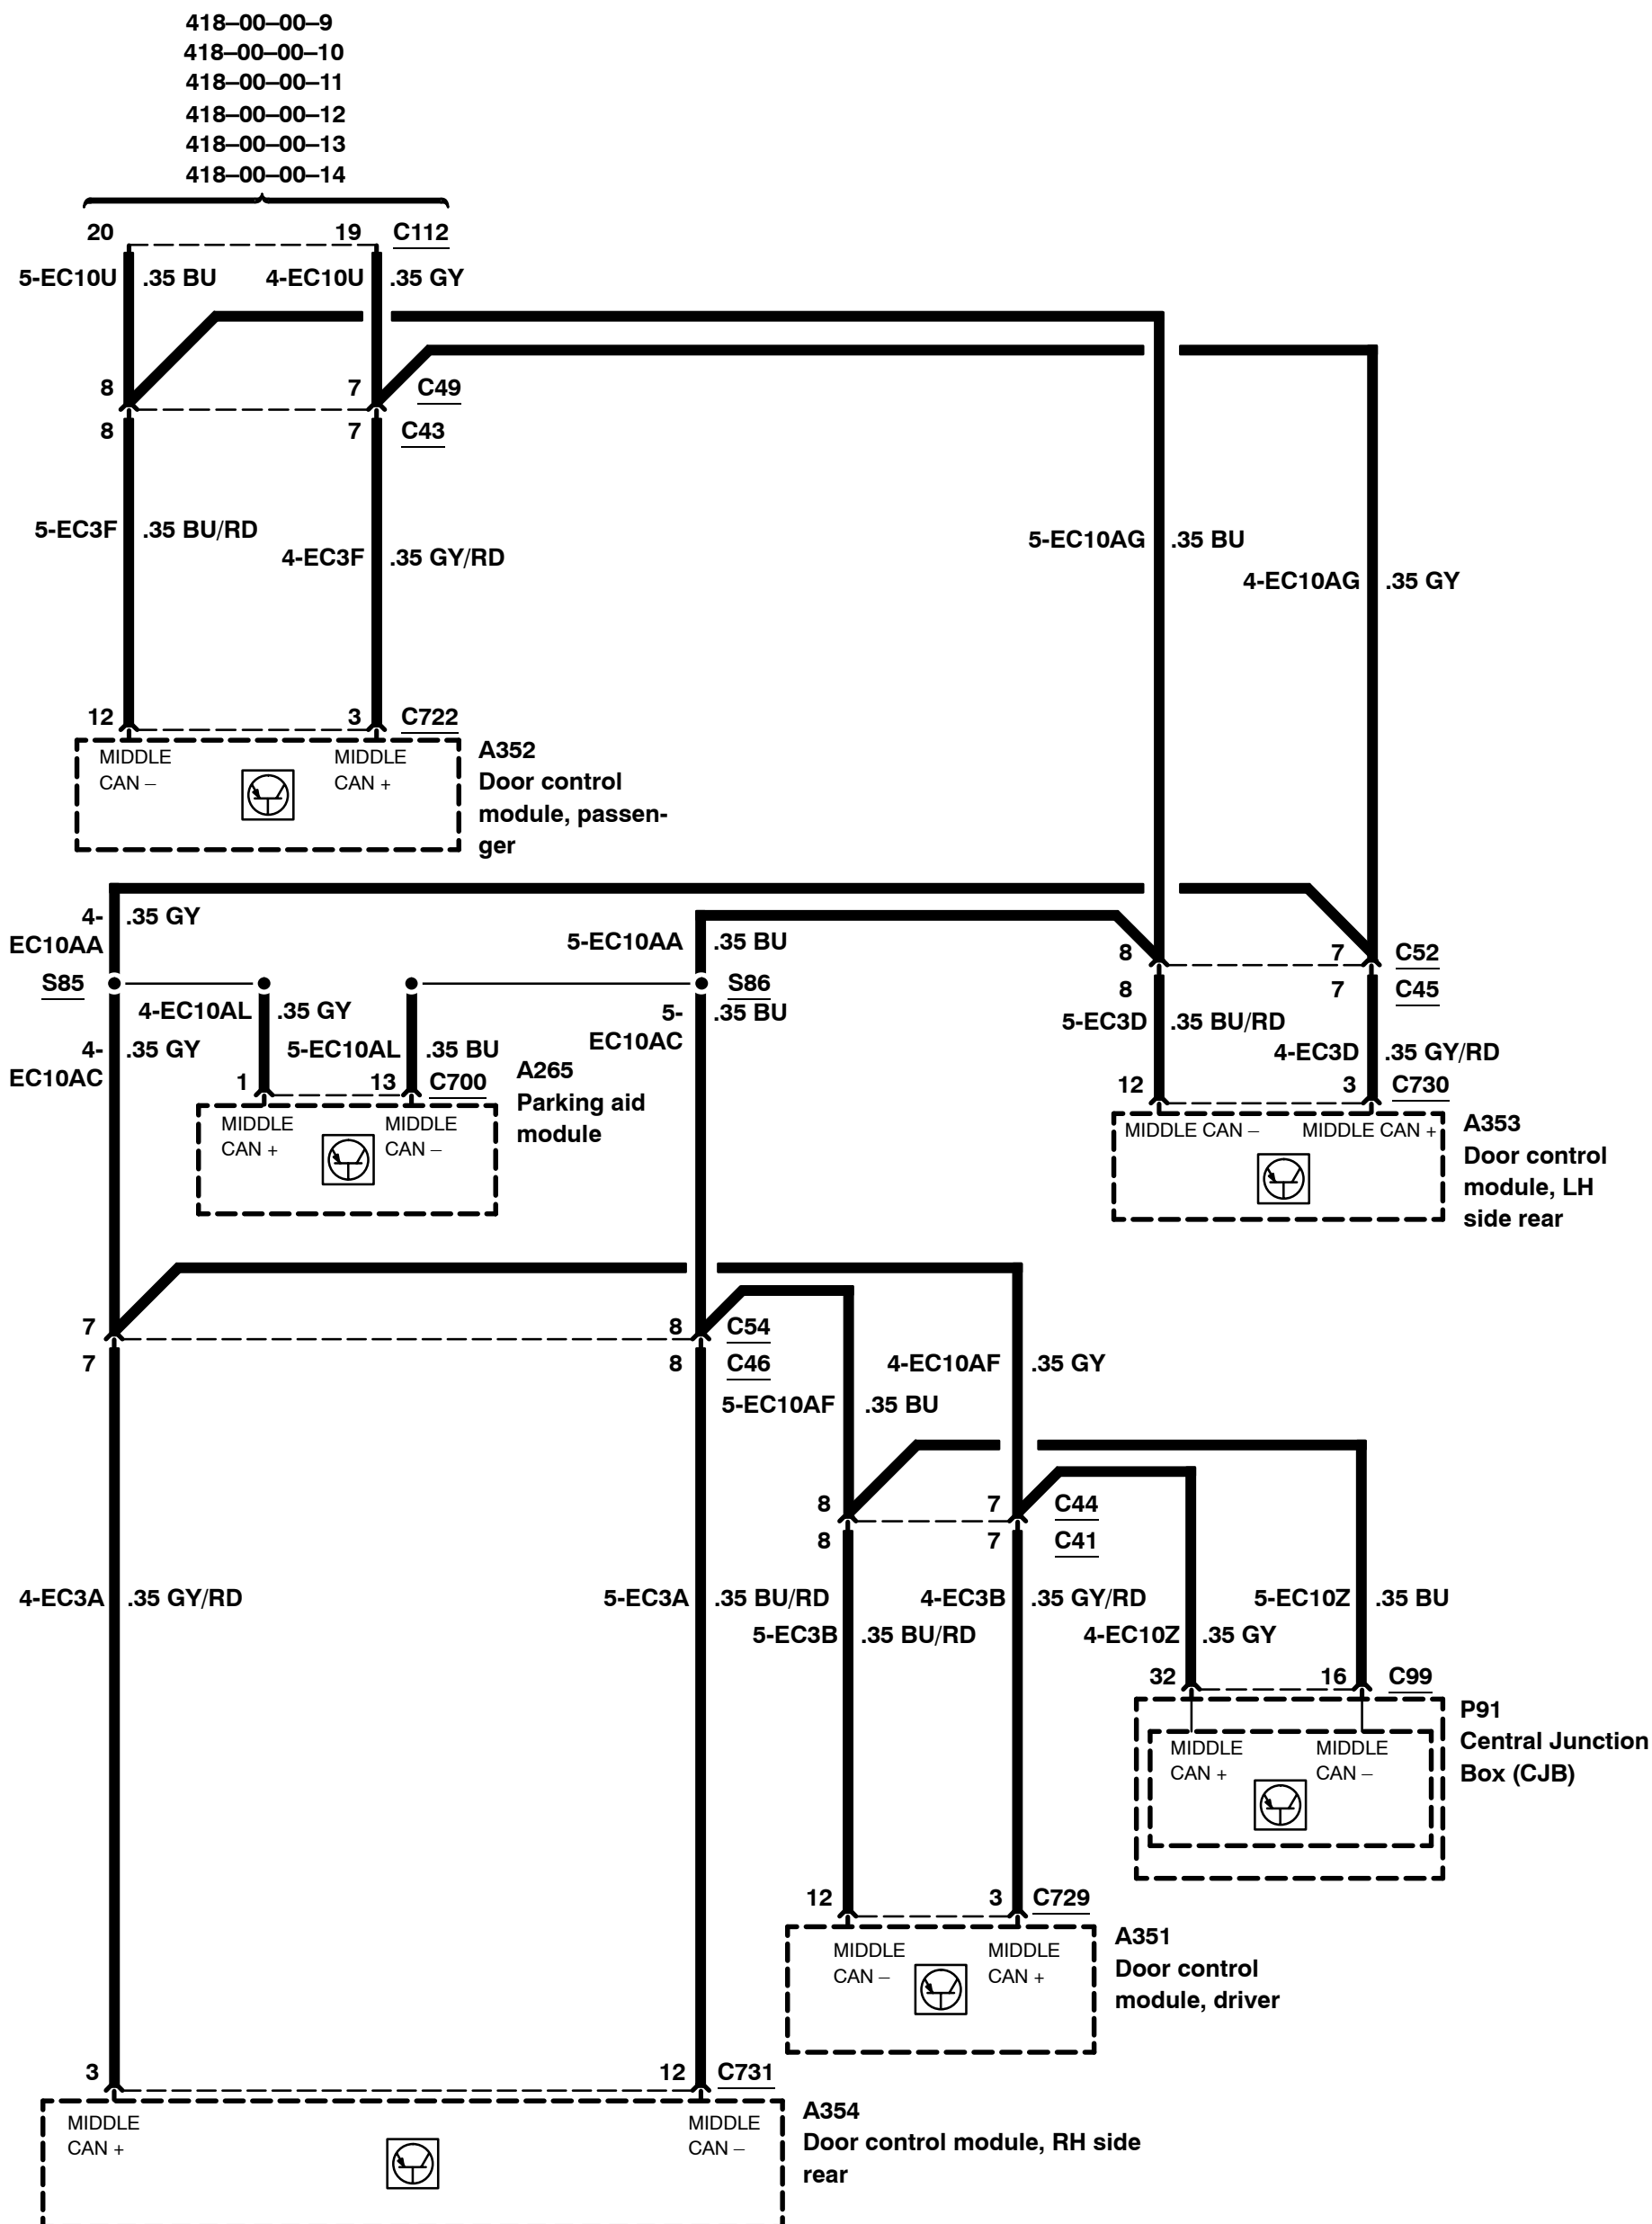


02/2008  
418-00-00-18  
2008.25  
Focus

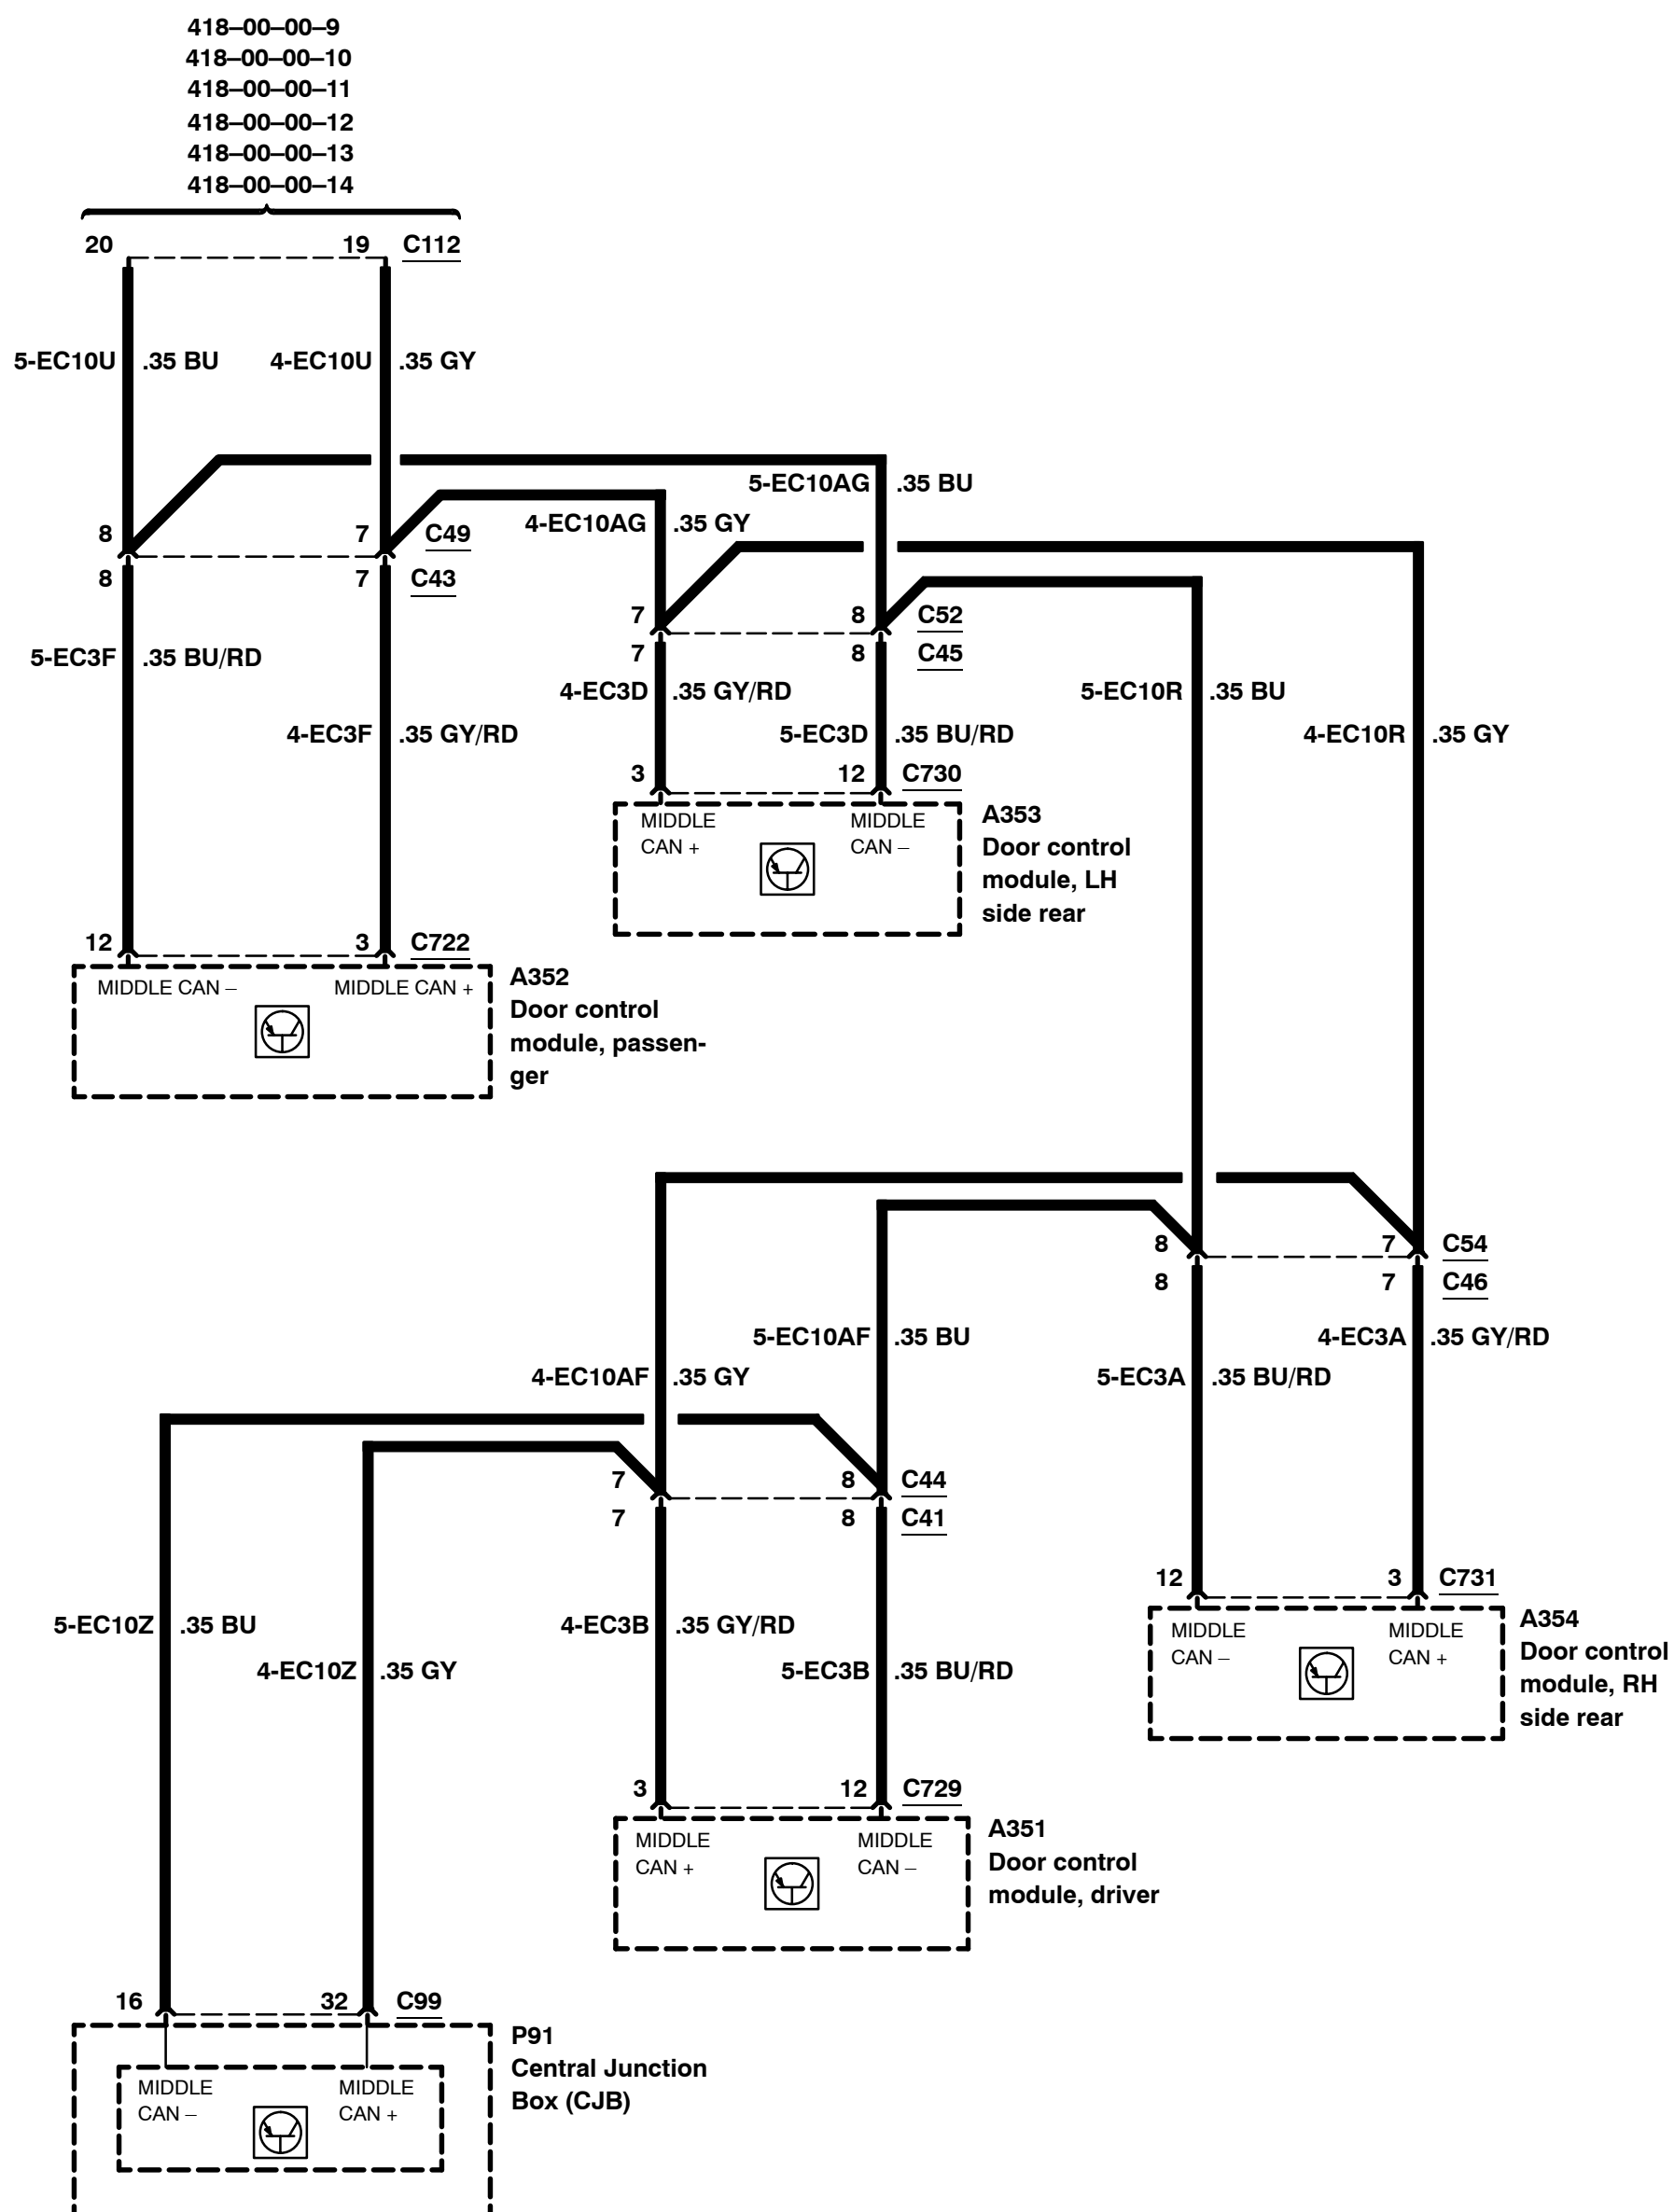


Module Communications Network – Data Link Connector (DLC), front and rear power windows, without parking aid, as of model year 2009

02/2008  
418-00-00-19  
2008.25  
Focus

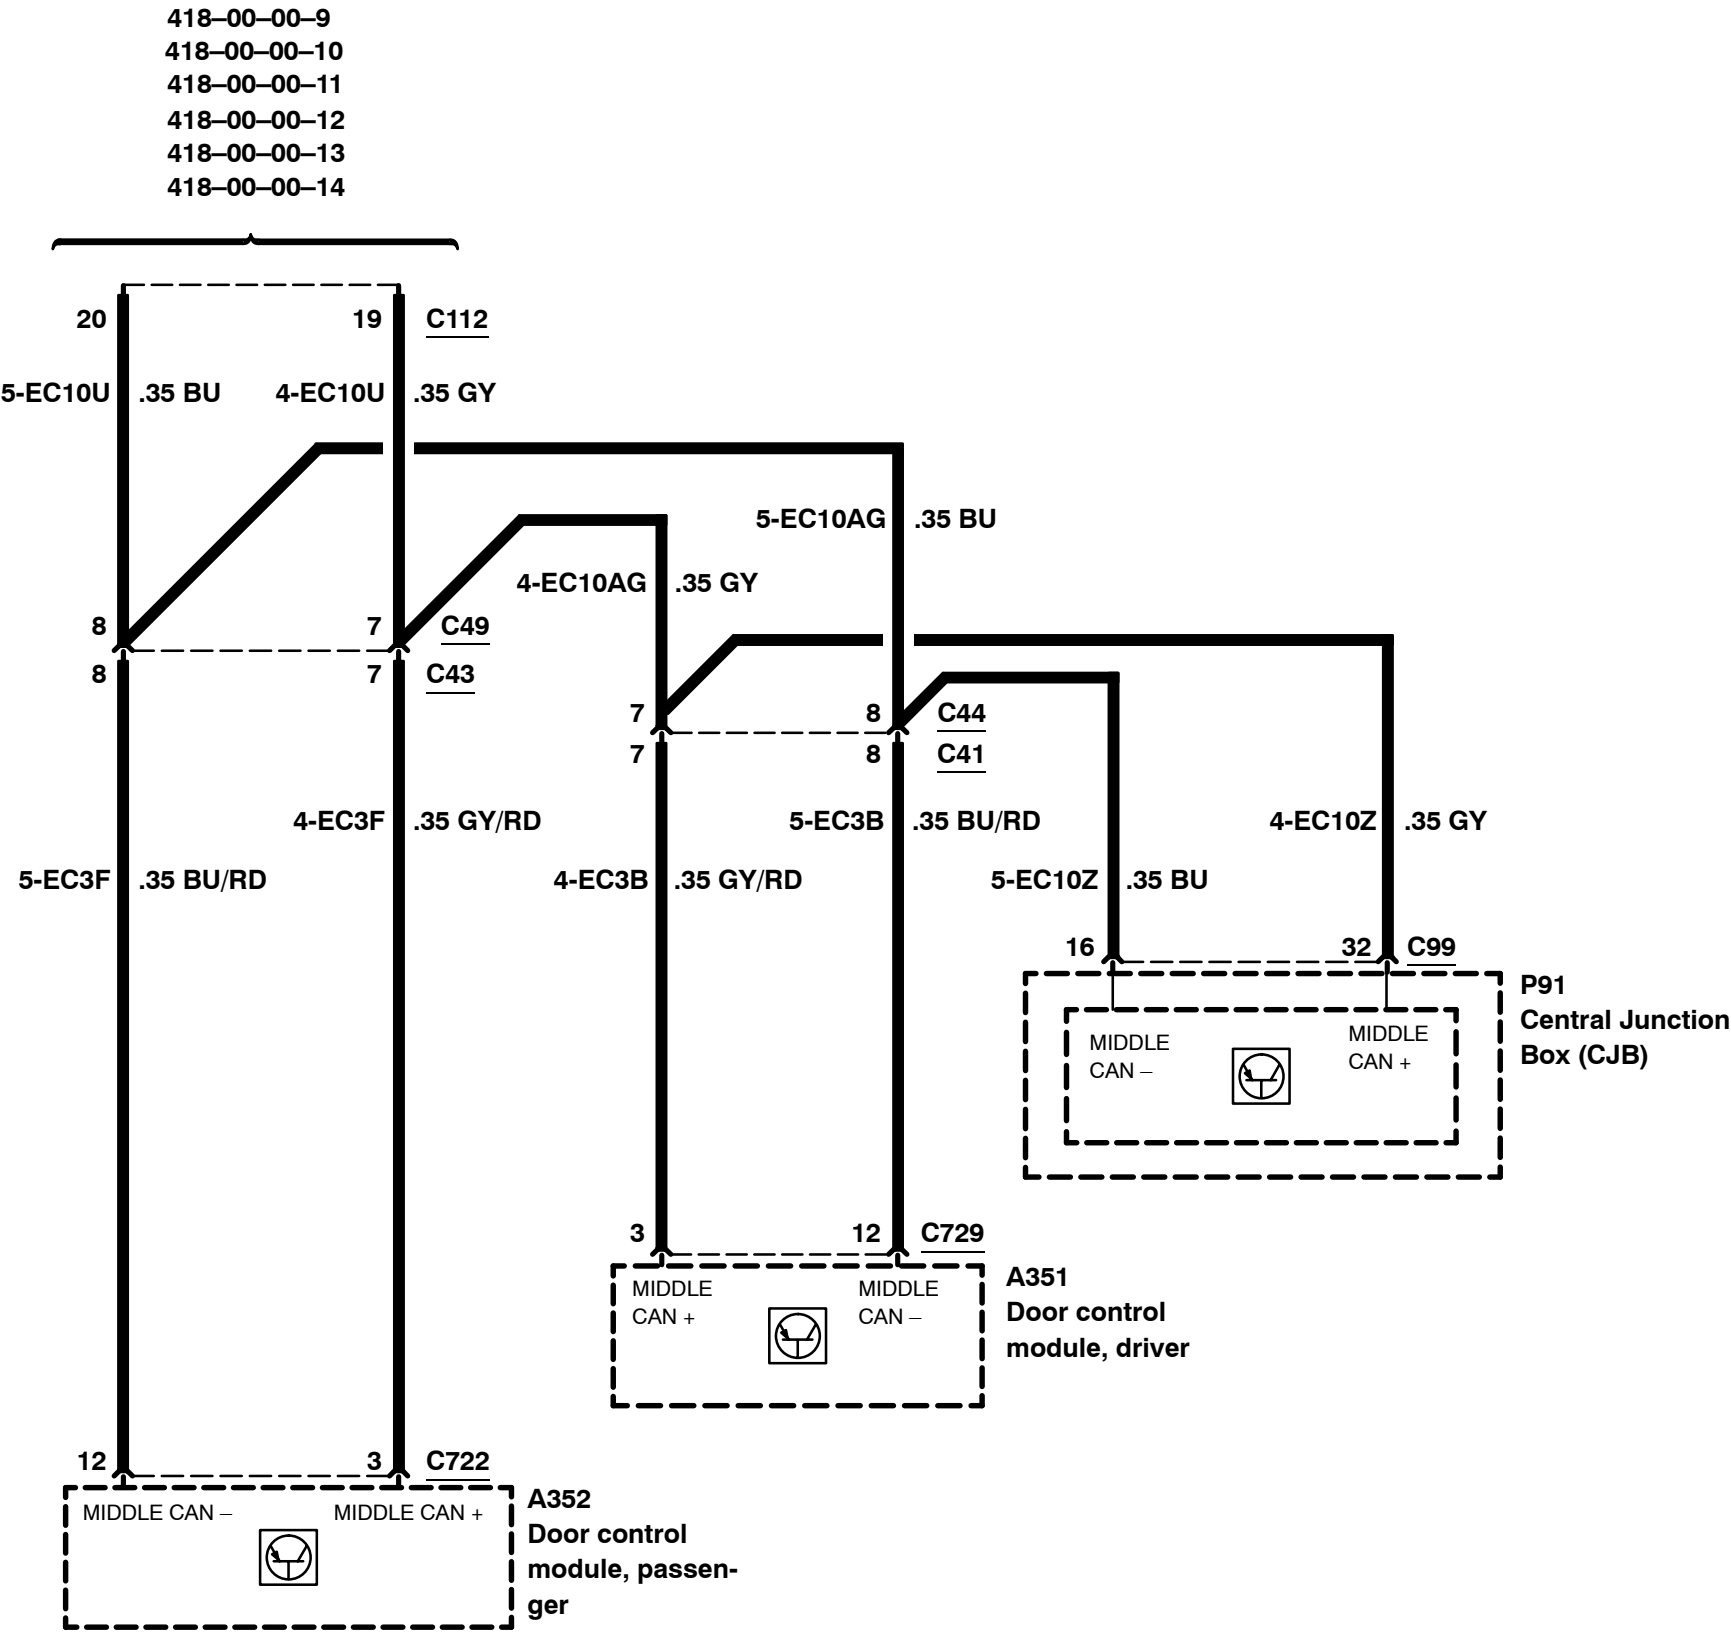

Module Communications Network – Data Link Connector (DLC), front and rear power windows, with parking aid, as of model year 2009


02/2008  
418-00-00-20  
2008.25  
Focus

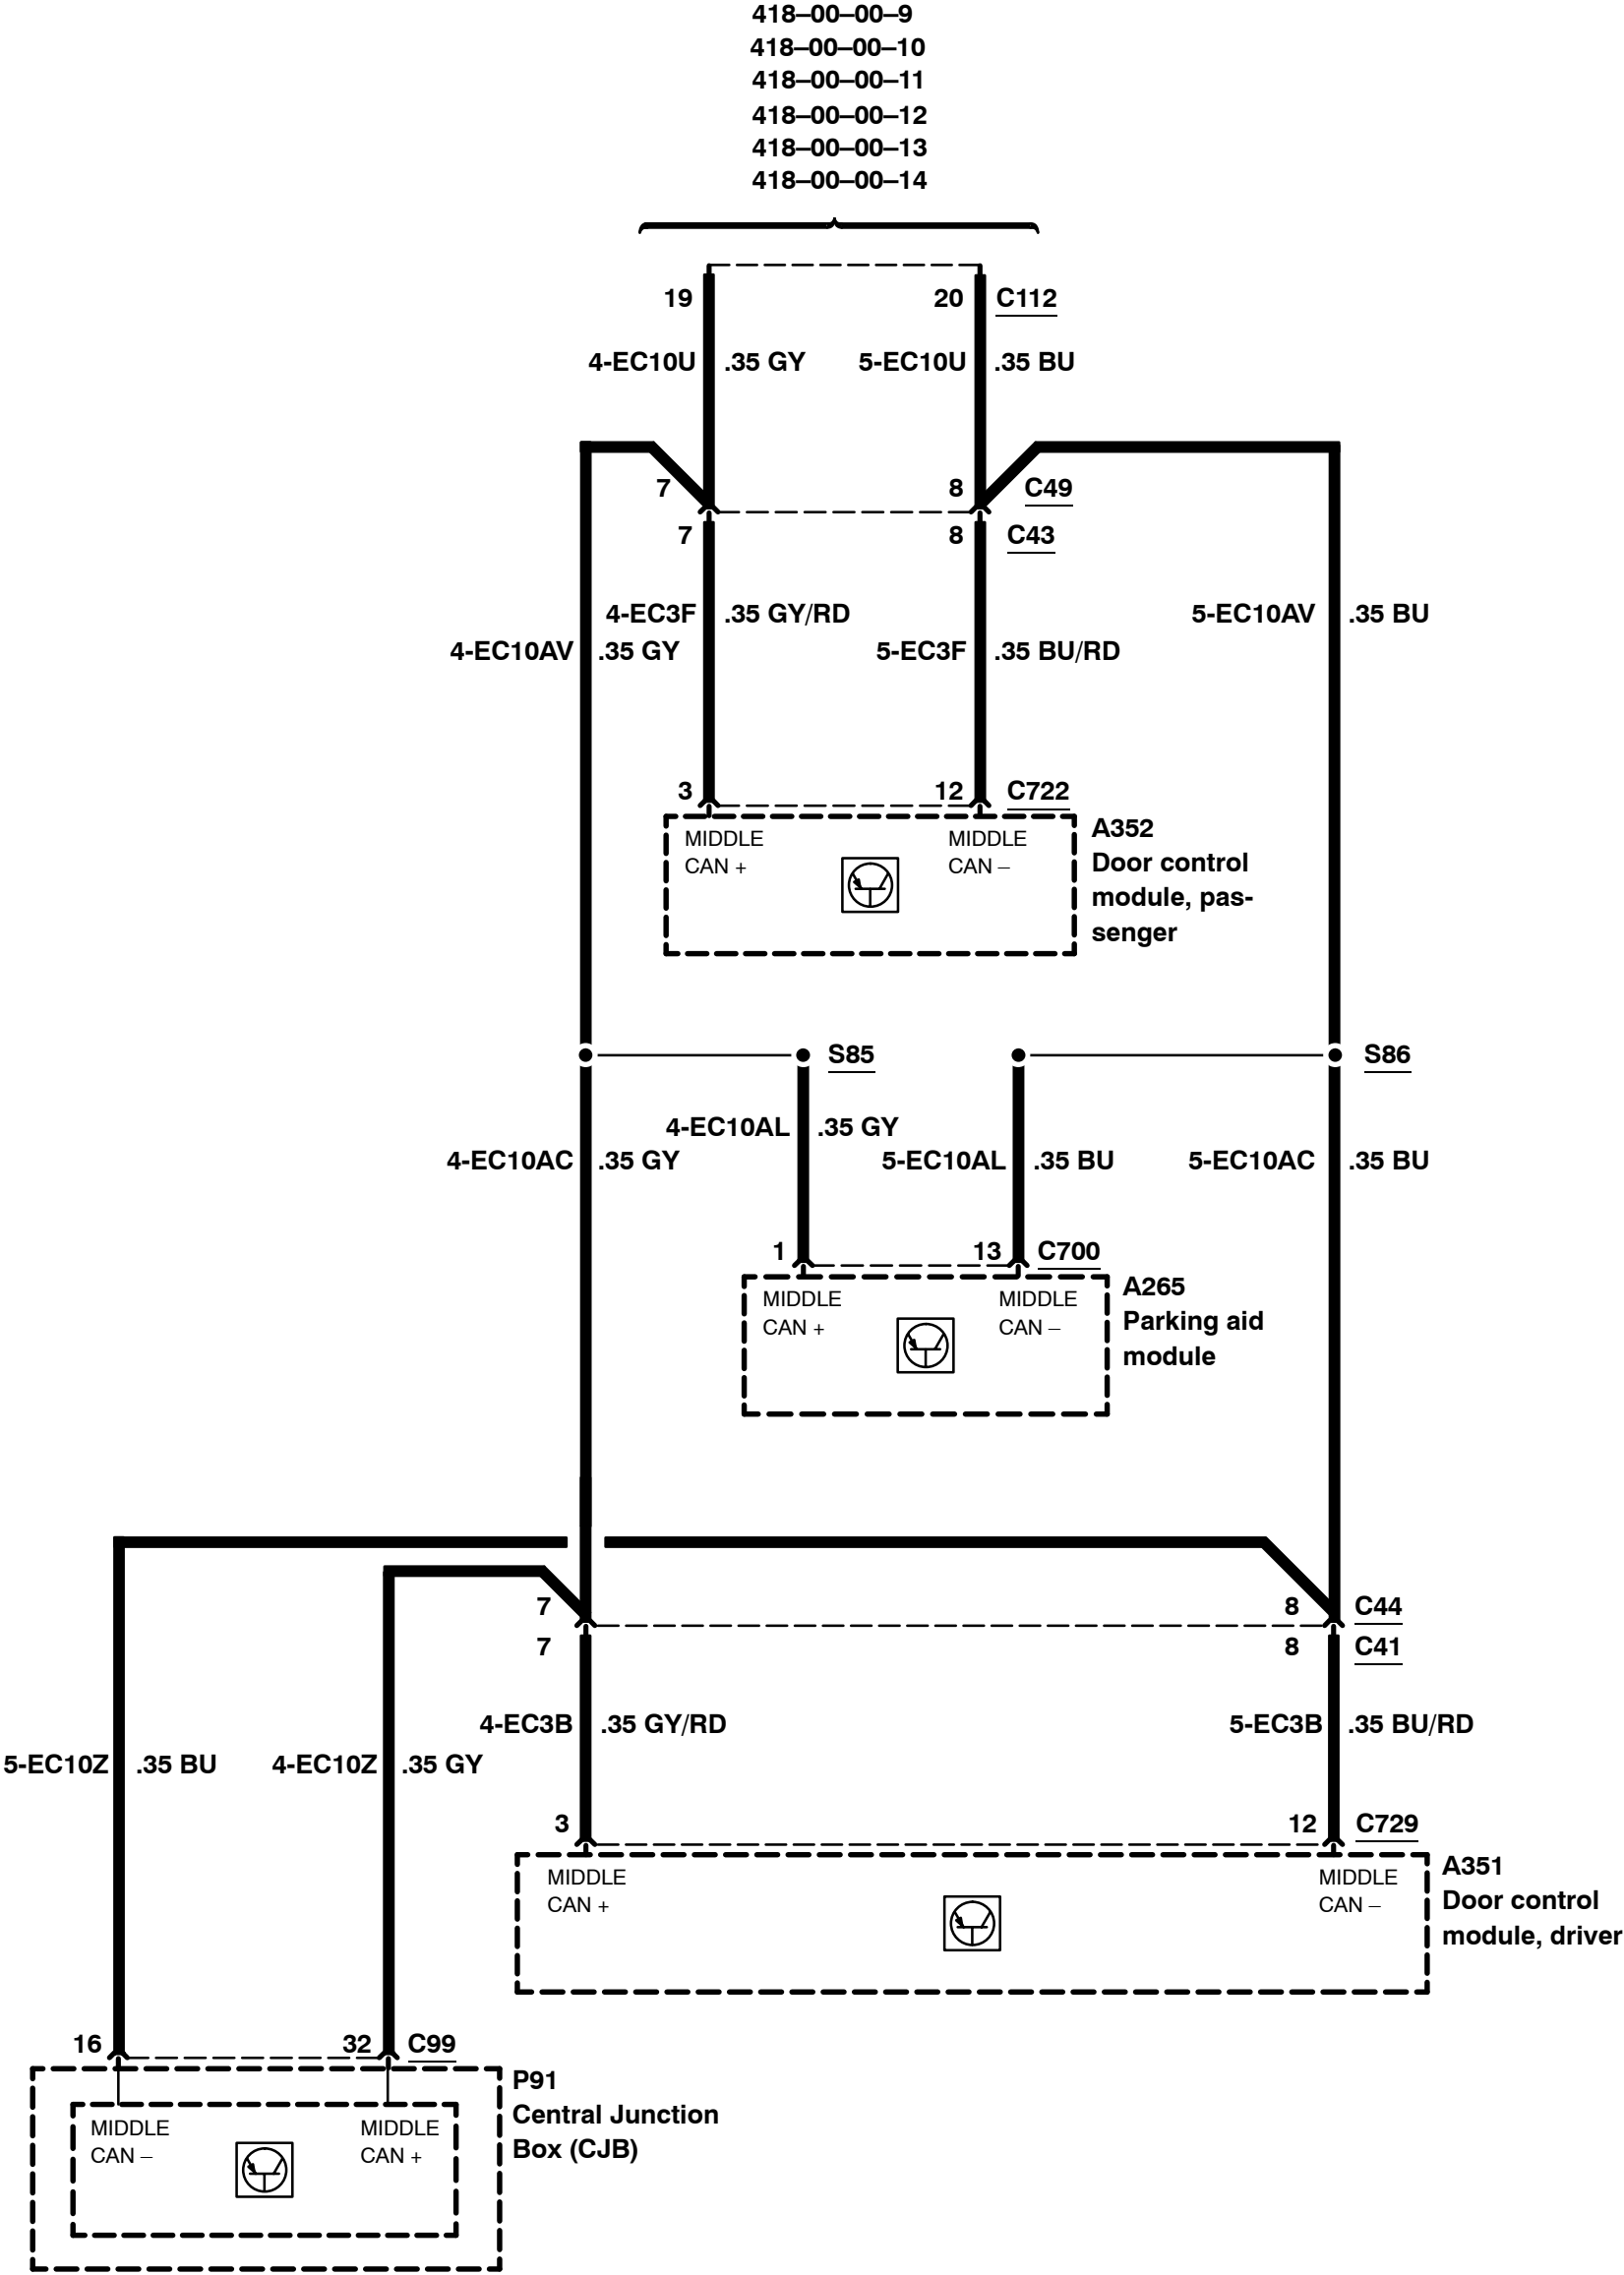




# Module Communications Network – Data Link Connector (DLC), with front power windows

02/2008  
418-00-00-21  
2008.25  
Focus

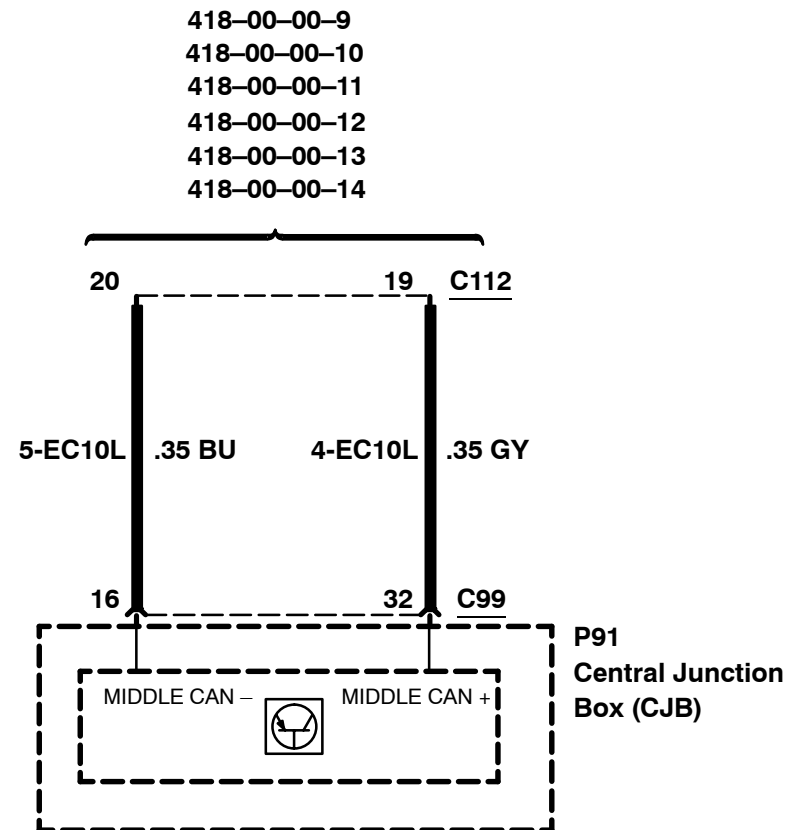

# Module Communications Network – LIN Bus, LHD


02/2008  
418-00-00-22  
2008.25  
Focus

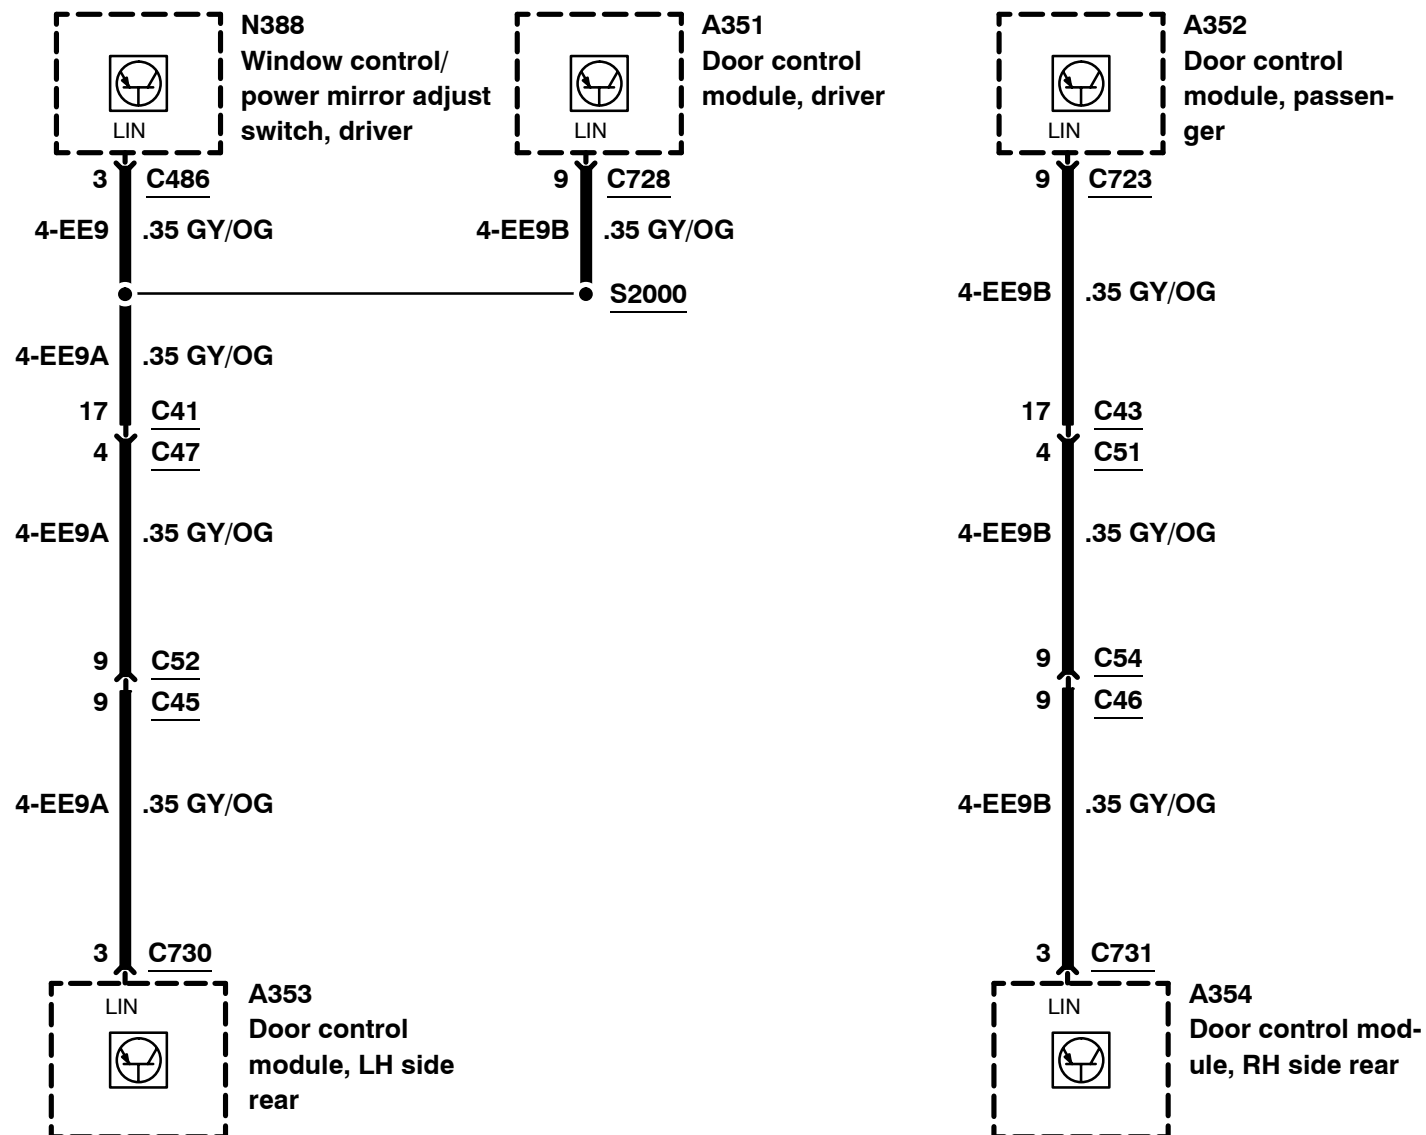



# Module Communications Network – LIN Bus, RHD

02/2008  
418-00-00-23  
2008.25  
Focus

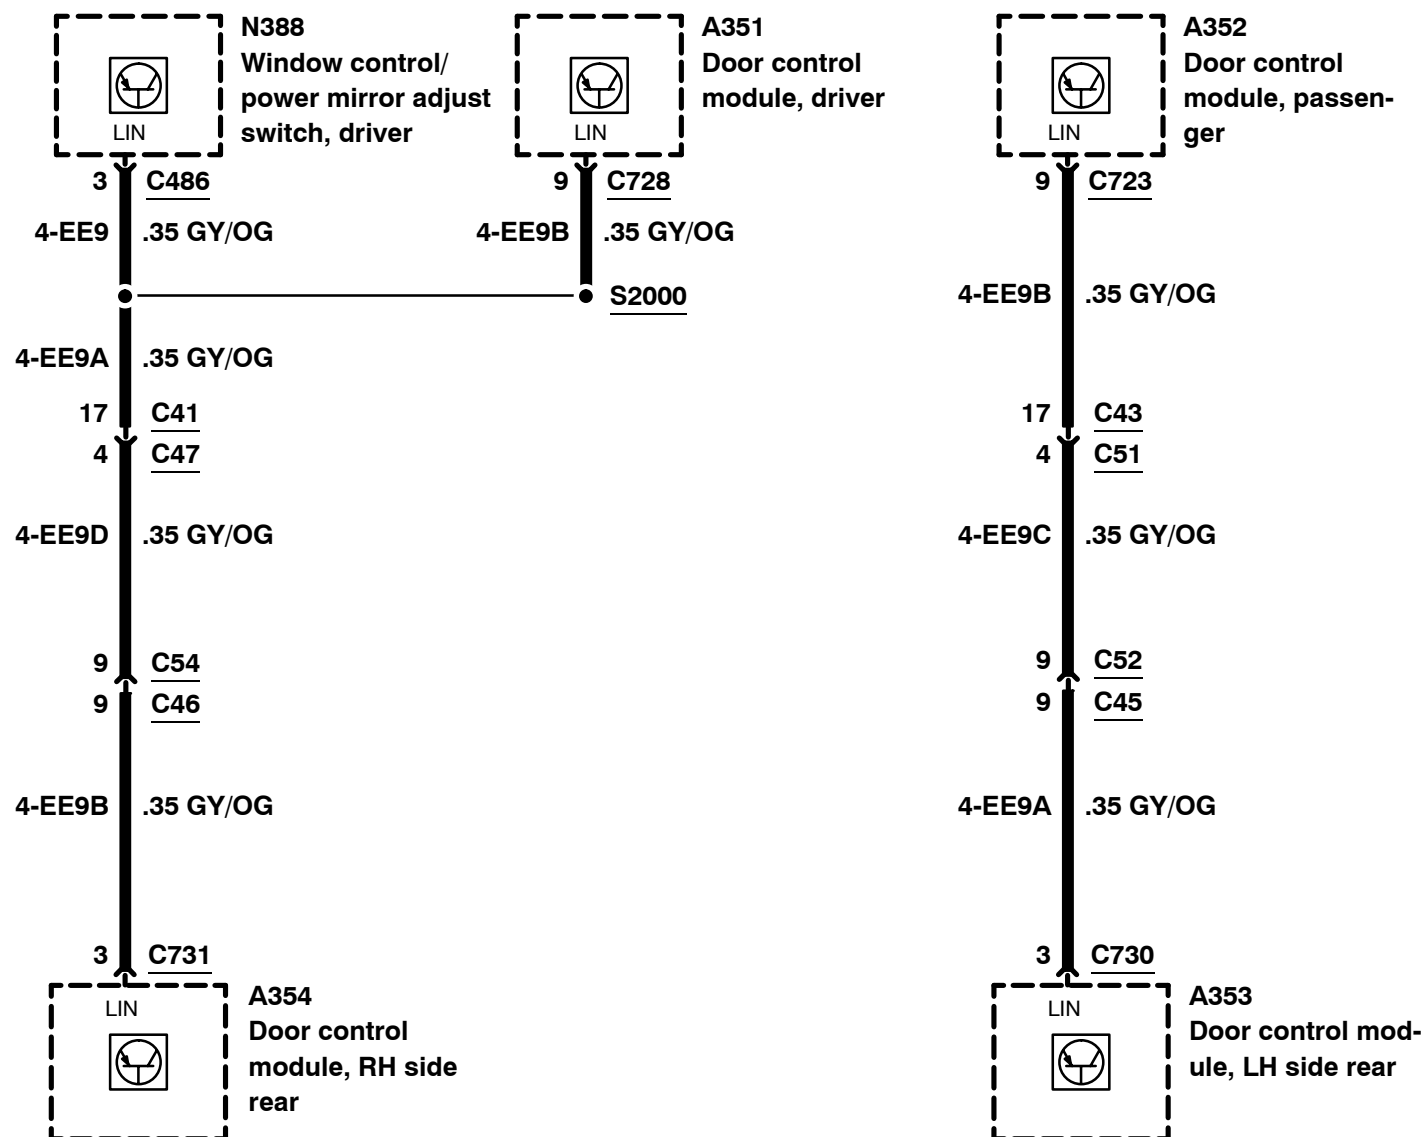


# Module Communications Network – Data Link Connector (DLC)


02/2008  
418-00-00-24  
2008.25  
Focus

## C200

F16079

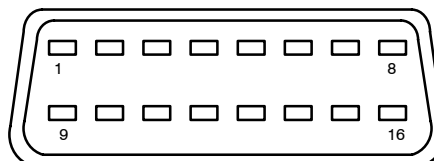


| Pin number | Description    | Wire colours |
|------------|----------------|--------------|
| 1          |                |              |
| 2          |                |              |
| 3          | CAN Bus +      | GY           |
| 4          | Chassis Ground | BK           |
| 5          | Signal Ground  | BK/OG        |
| 6          | CAN Bus +      | GY/RD        |
| 7          |                |              |
| 8          |                |              |
| 9          |                |              |
| 10         |                |              |
| 11         | CAN Bus –      | BU           |
| 12         |                |              |
| 13         |                |              |
| 14         | CAN Bus –      | BU/RD        |
| 15         |                |              |
| 16         | Battery Power  | OG           |

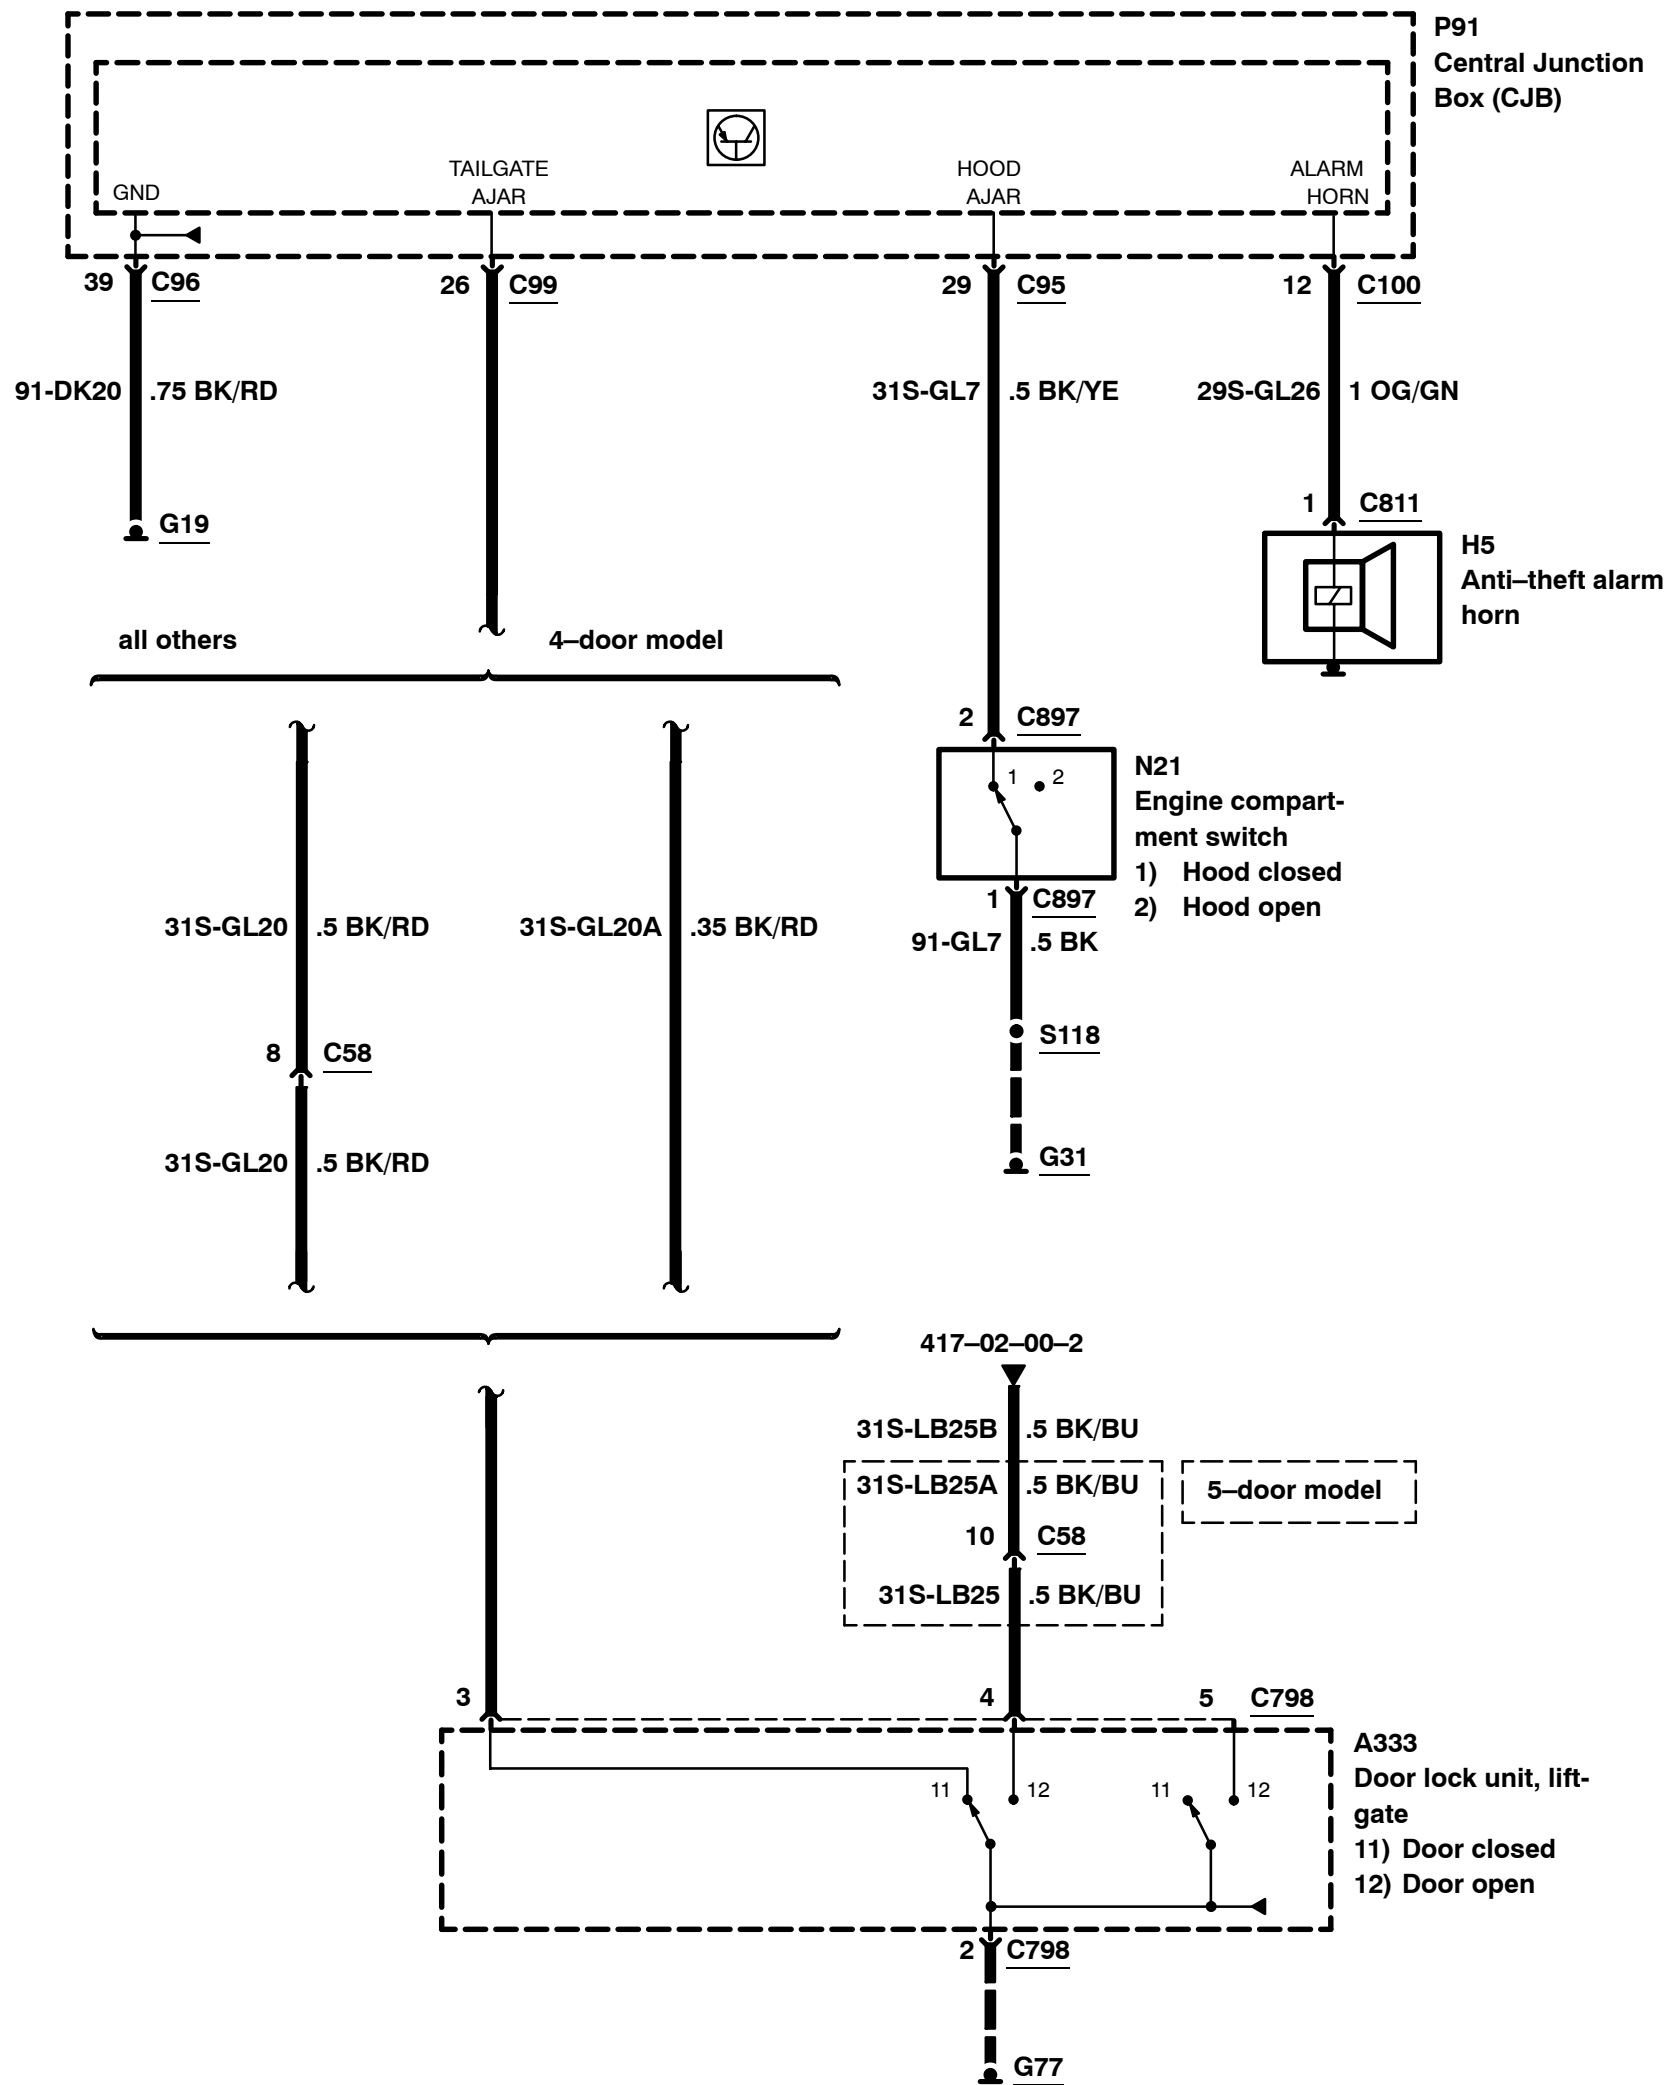


Anti-Theft – Active – with central locking, with front power windows


02/2008  
419-01A-00-2  
2008.25  
Focus

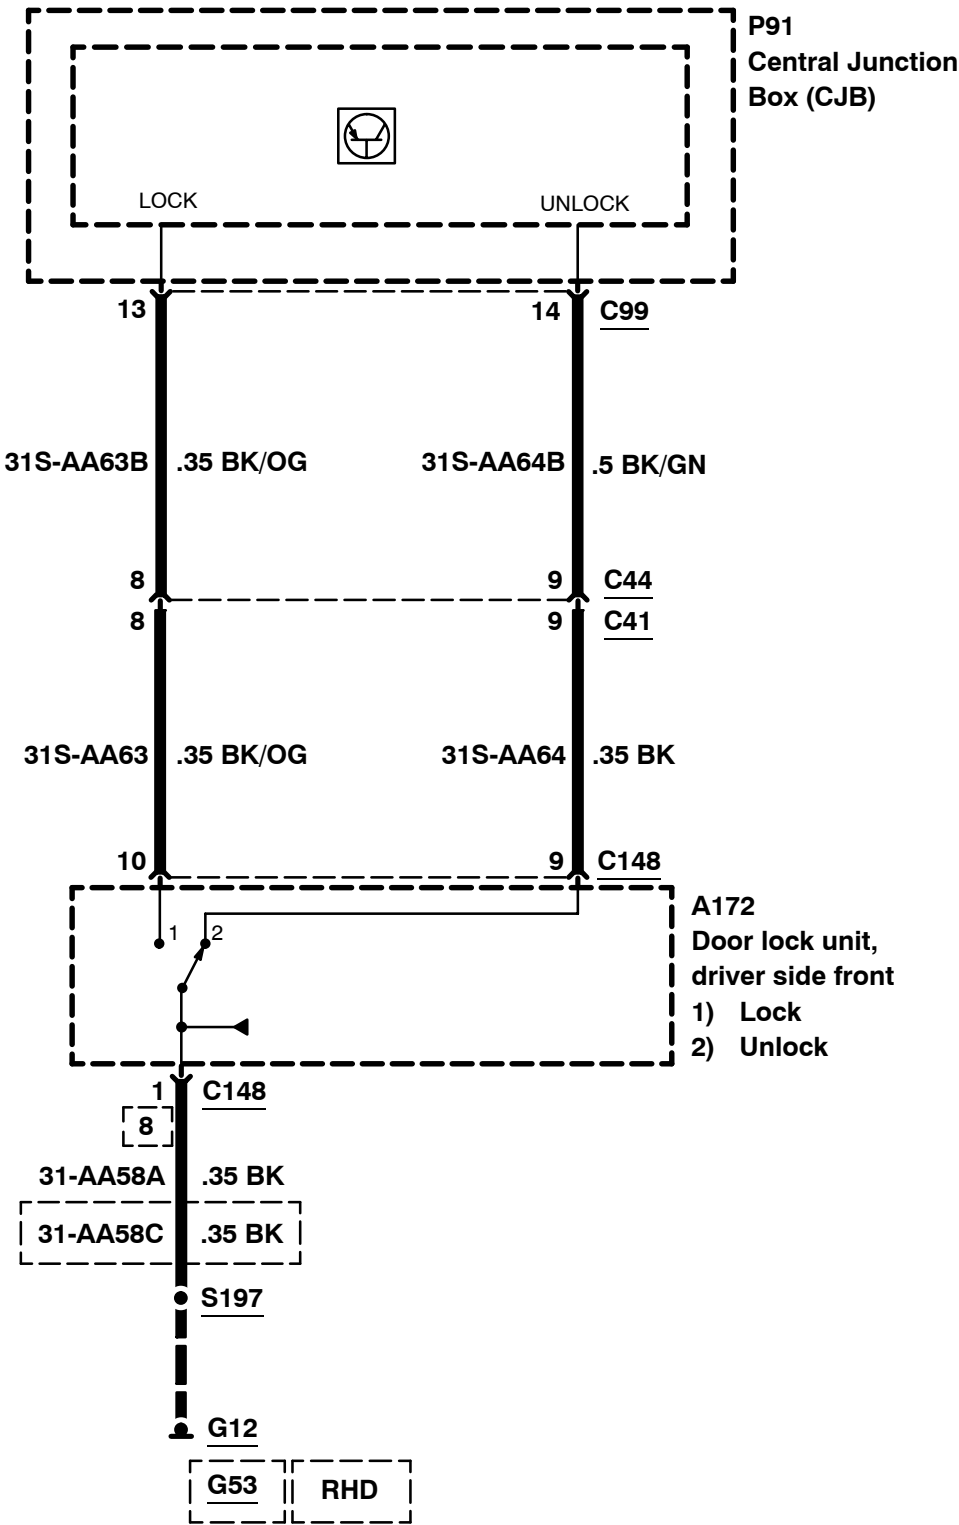

# Anti-Theft – Active – with central locking, with front and rear power windows


02/2008  
419-01A-00-3  
2008.25  
Focus

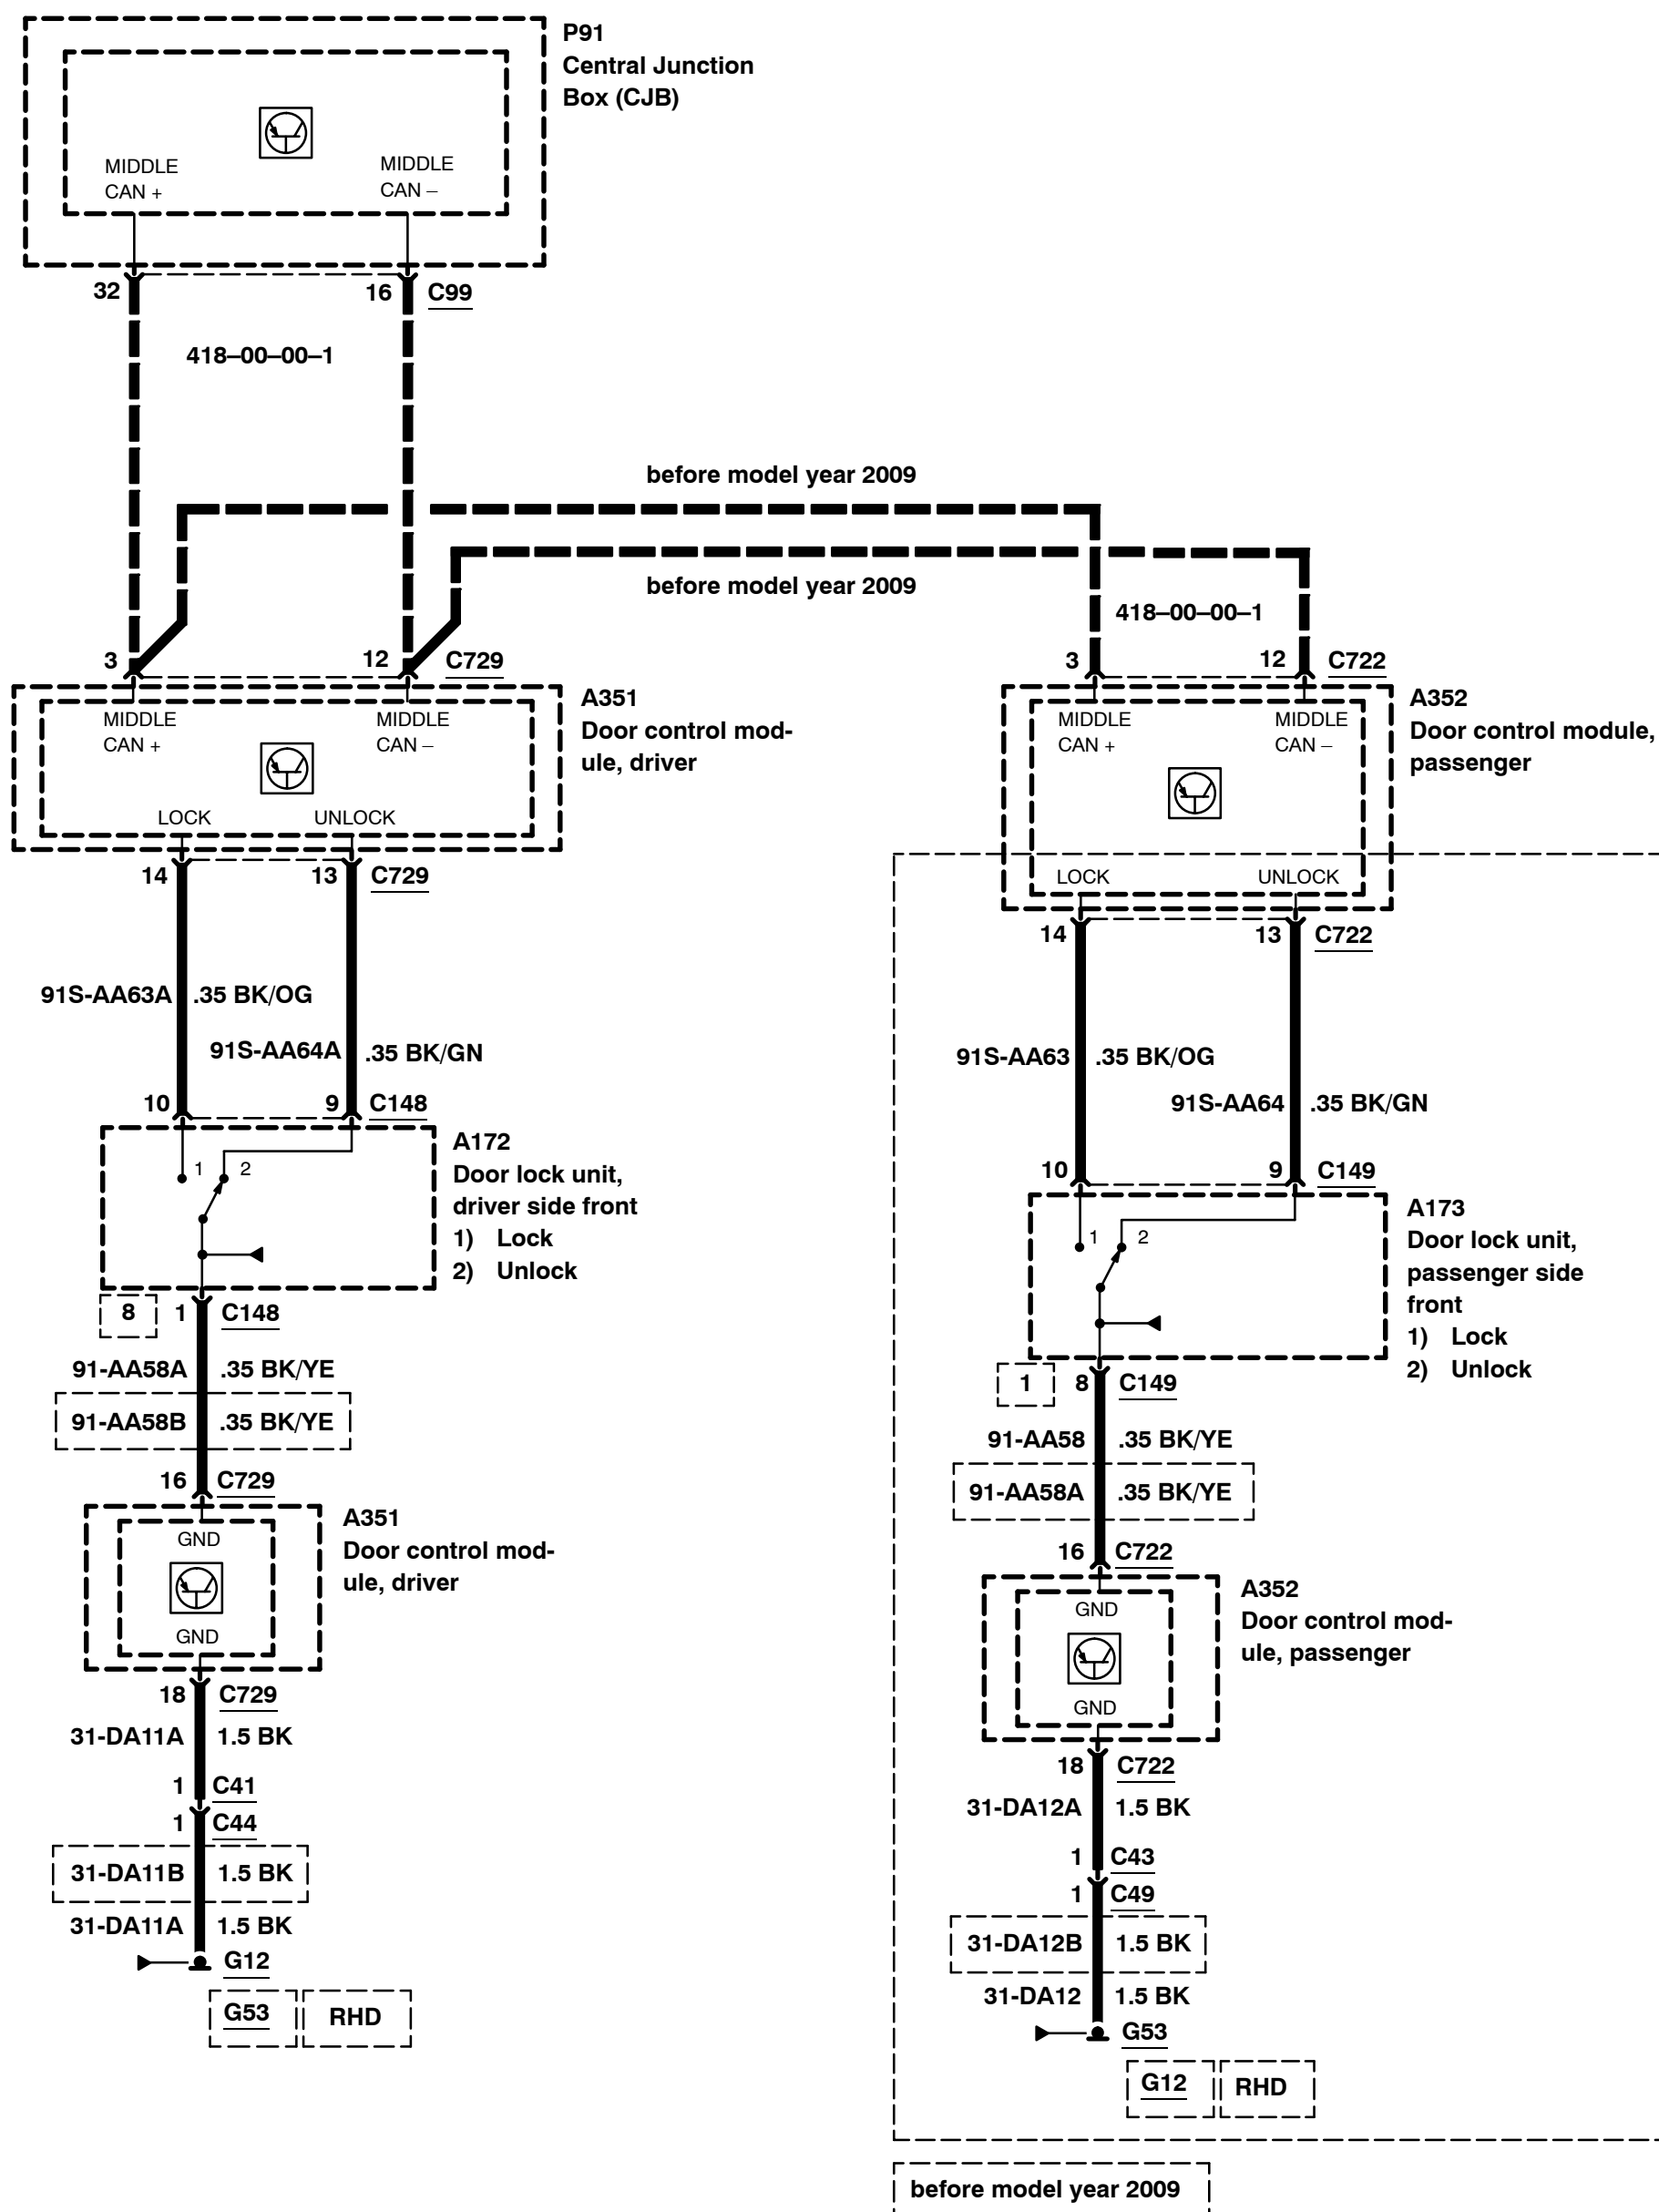

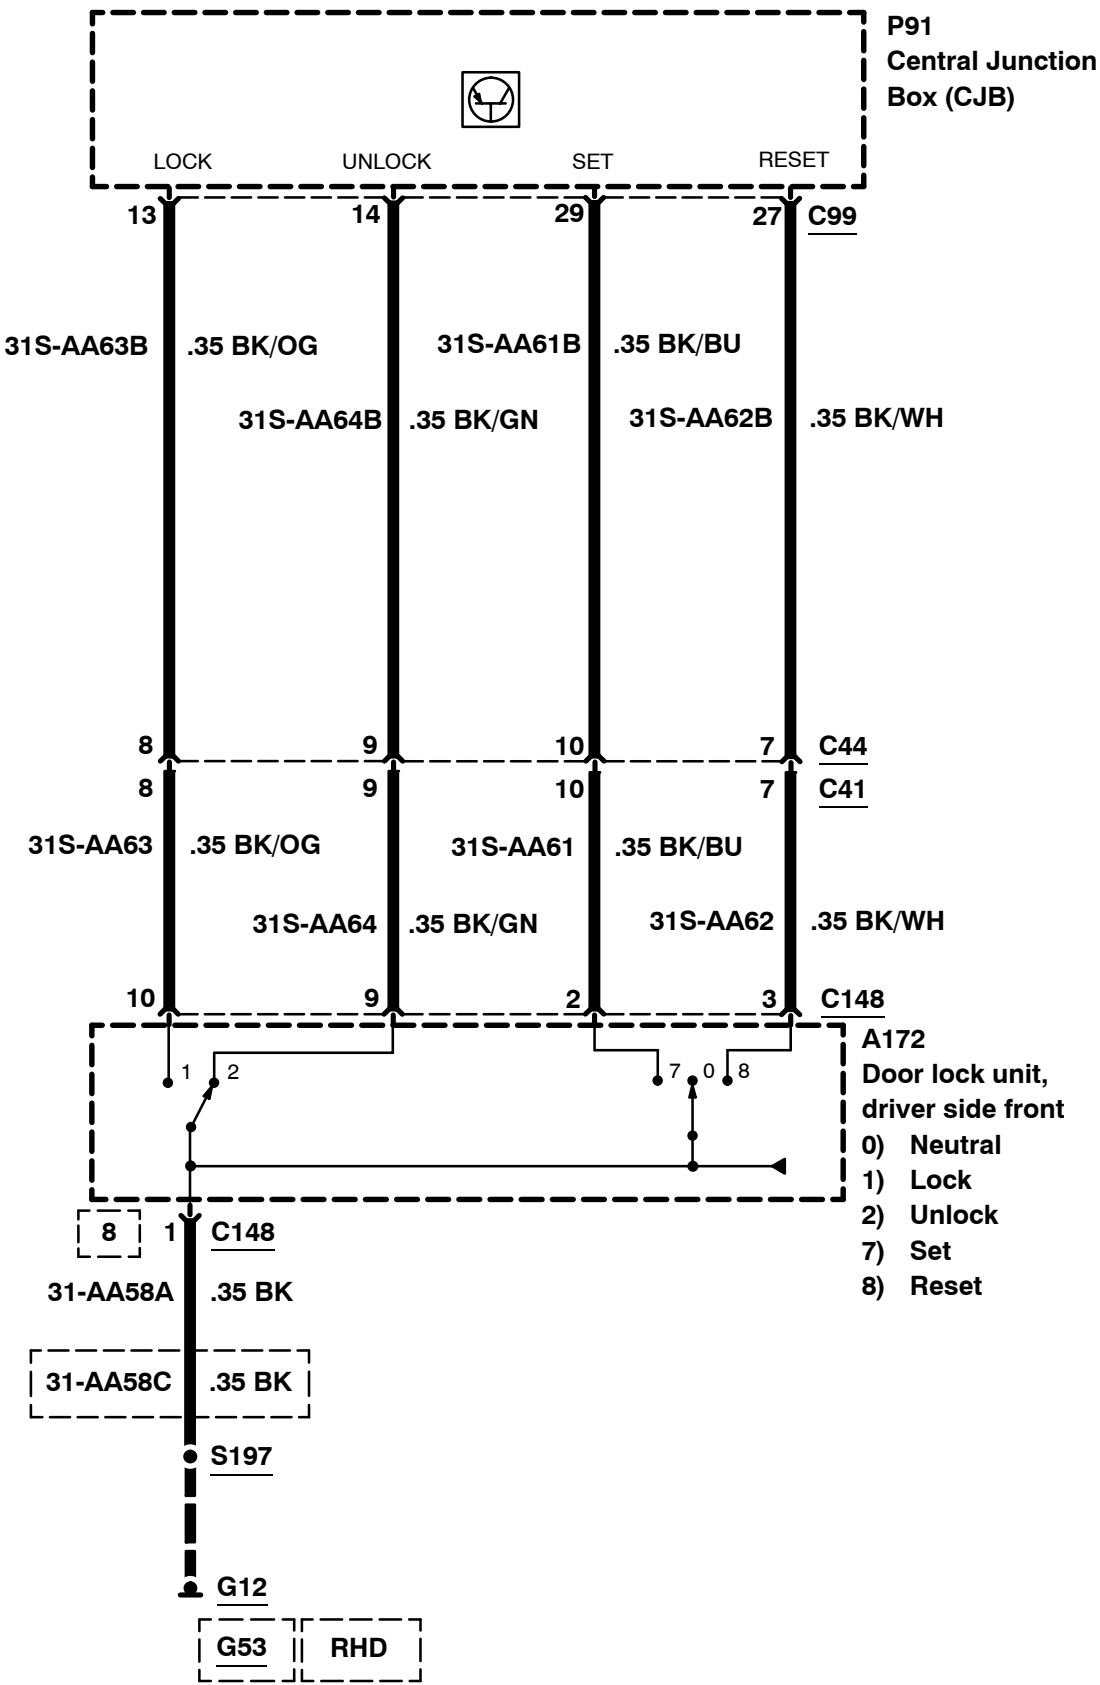


# Anti-Theft – Active – with front and rear power windows

02/2008  
419-01A-00-5  
2008.25  
Focus

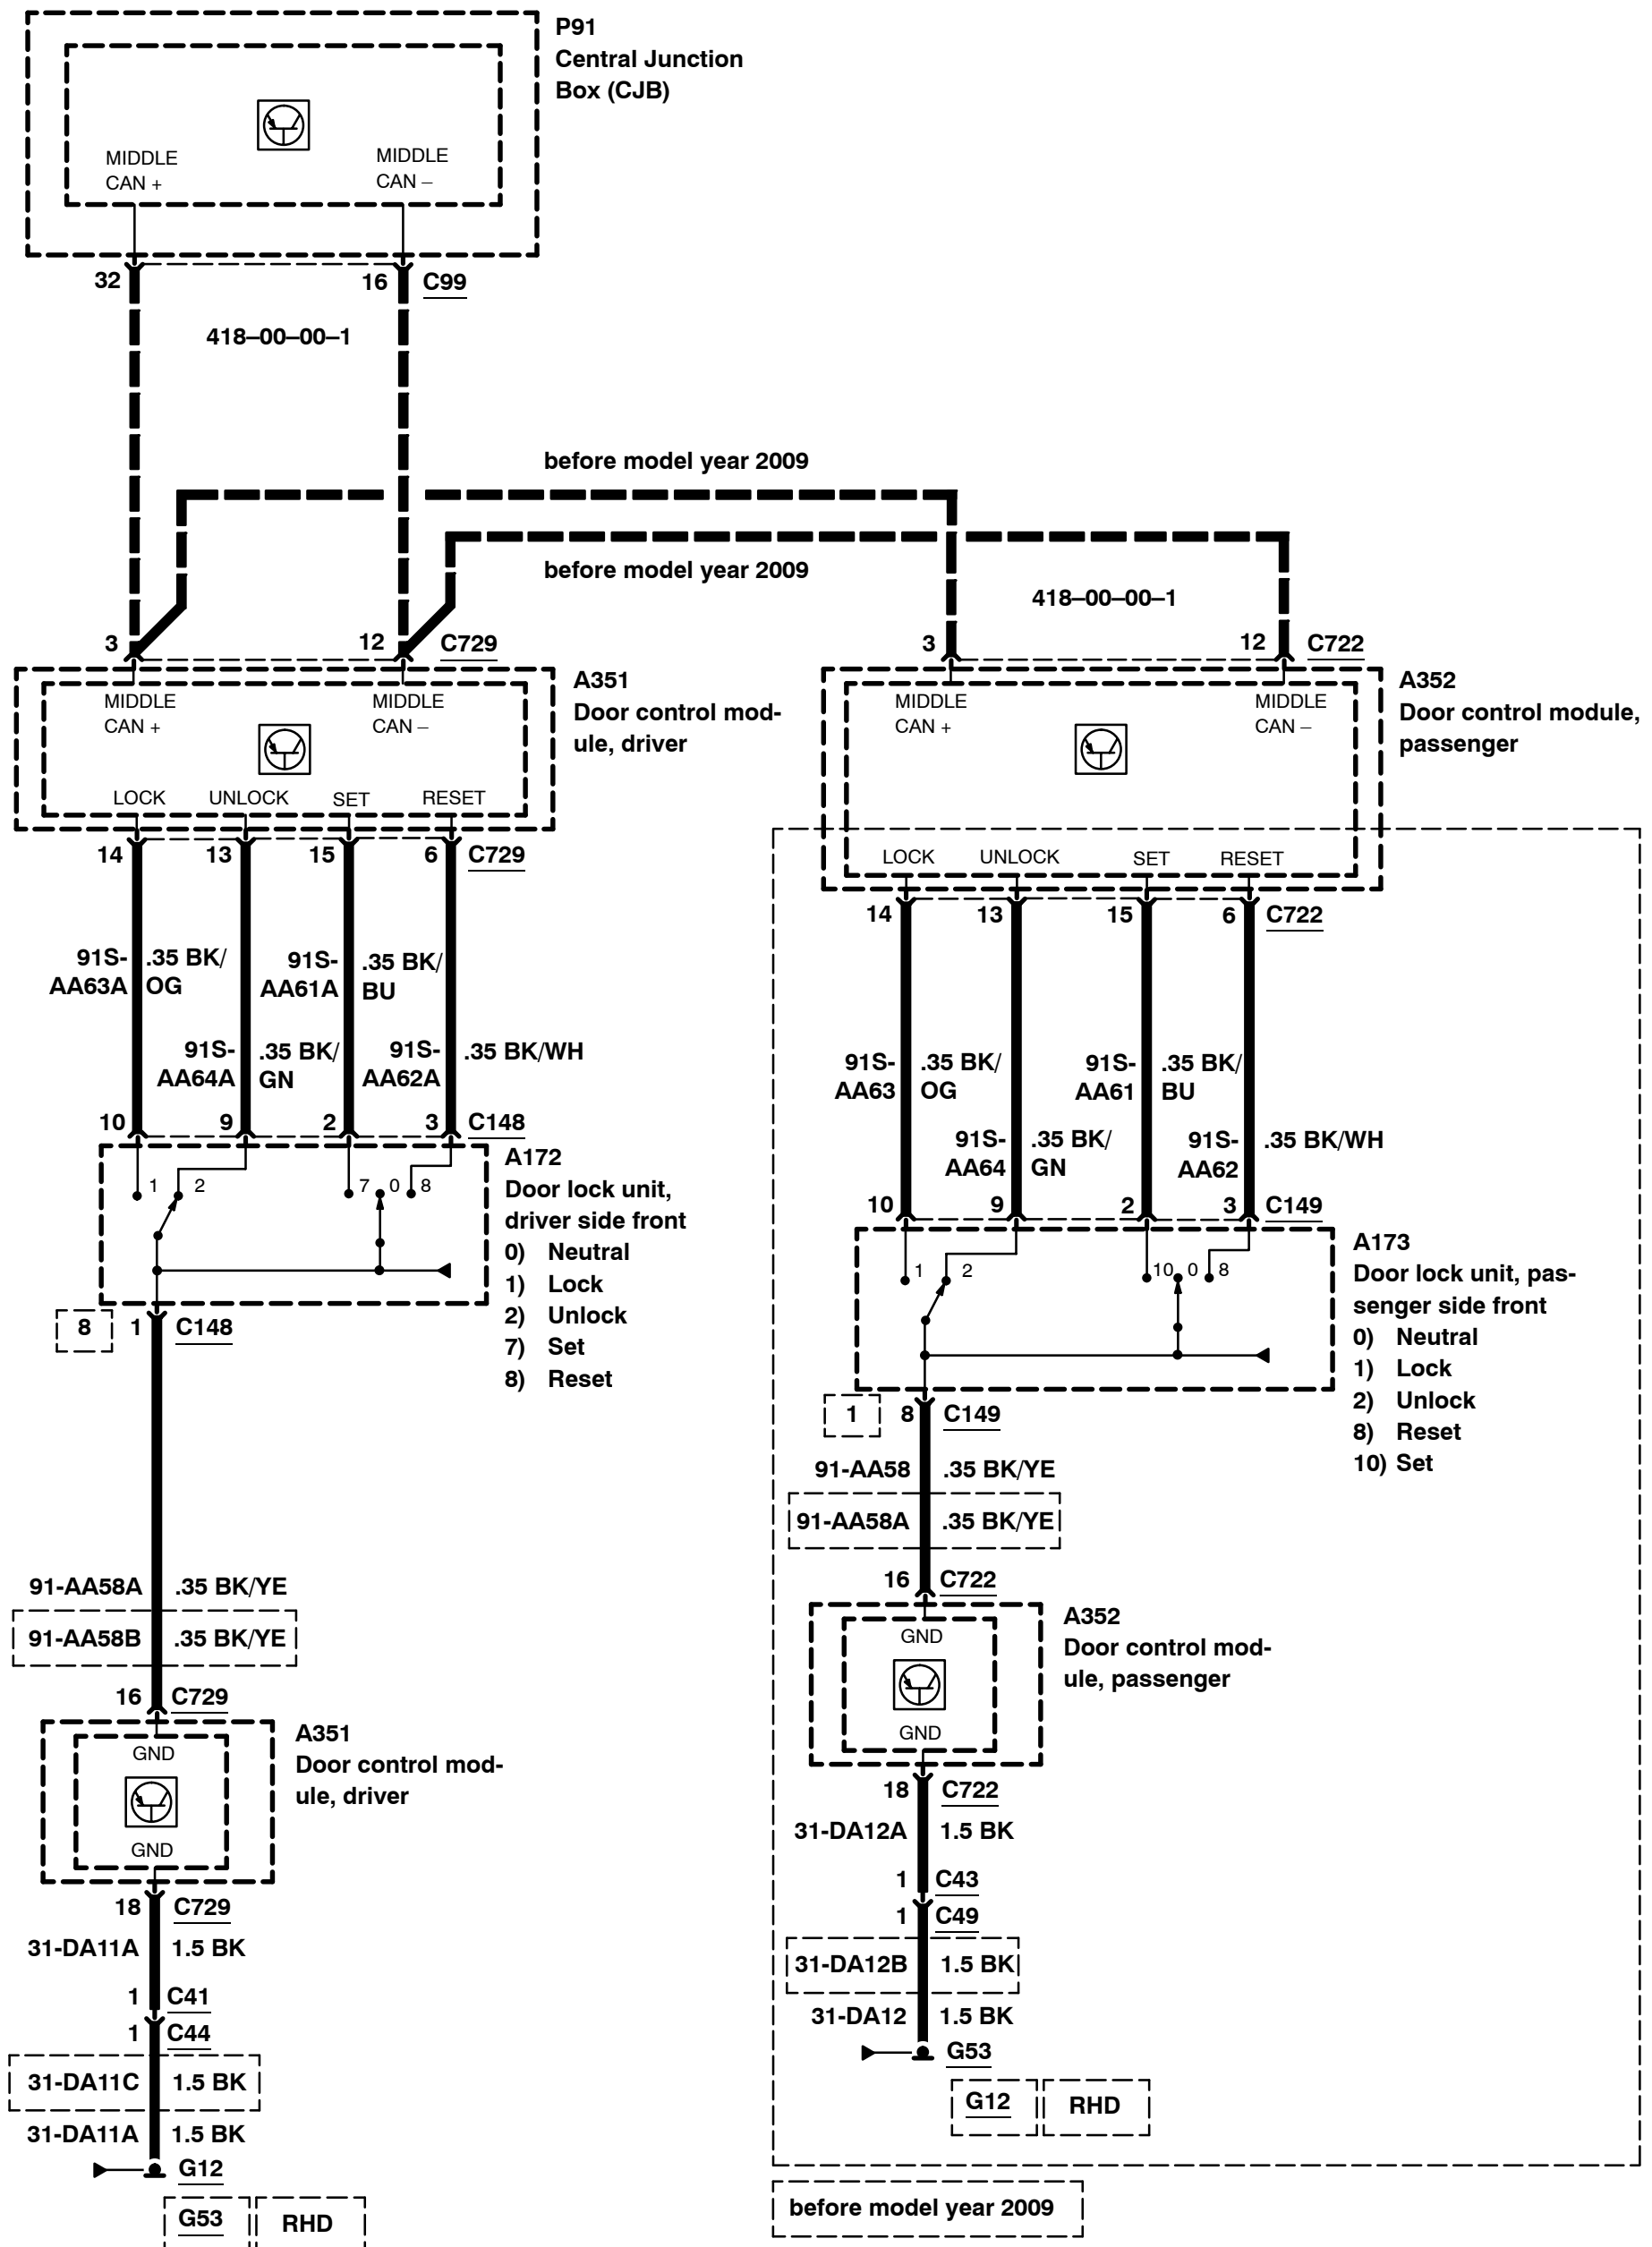




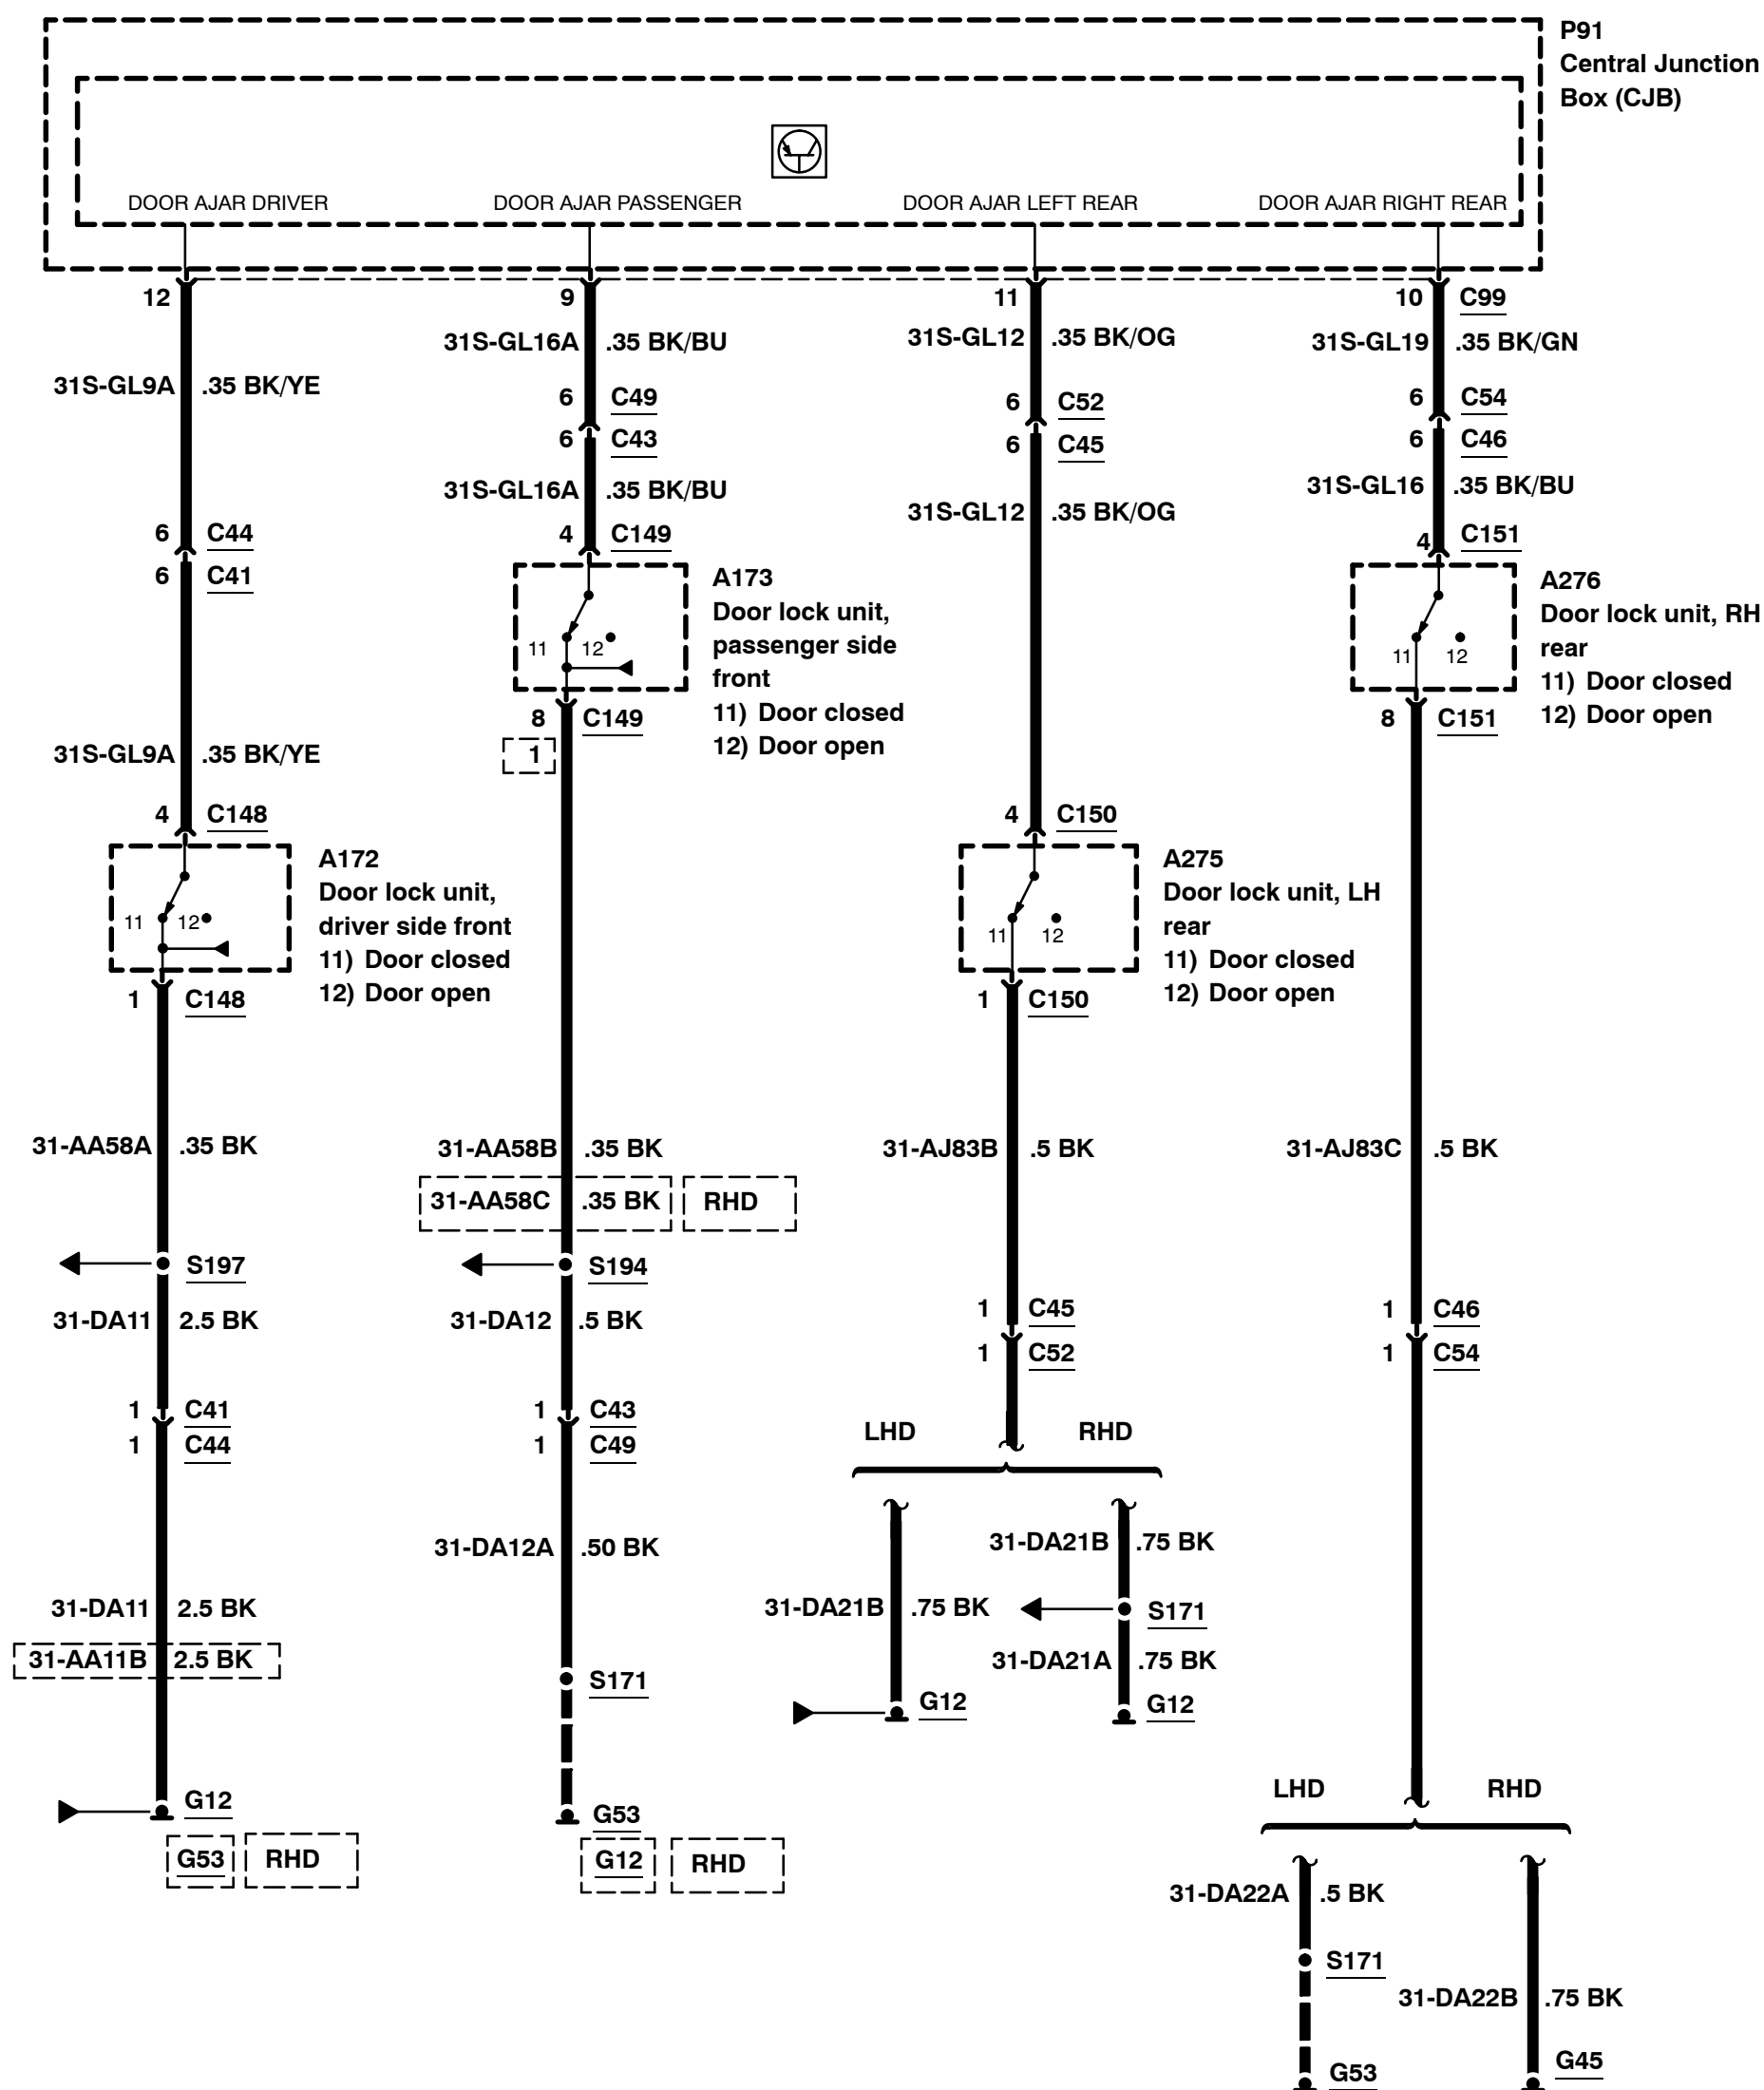




# Anti-Theft – Active – with front and rear power windows

02/2008  
419-01A-00-7  
2008.25  
Focus

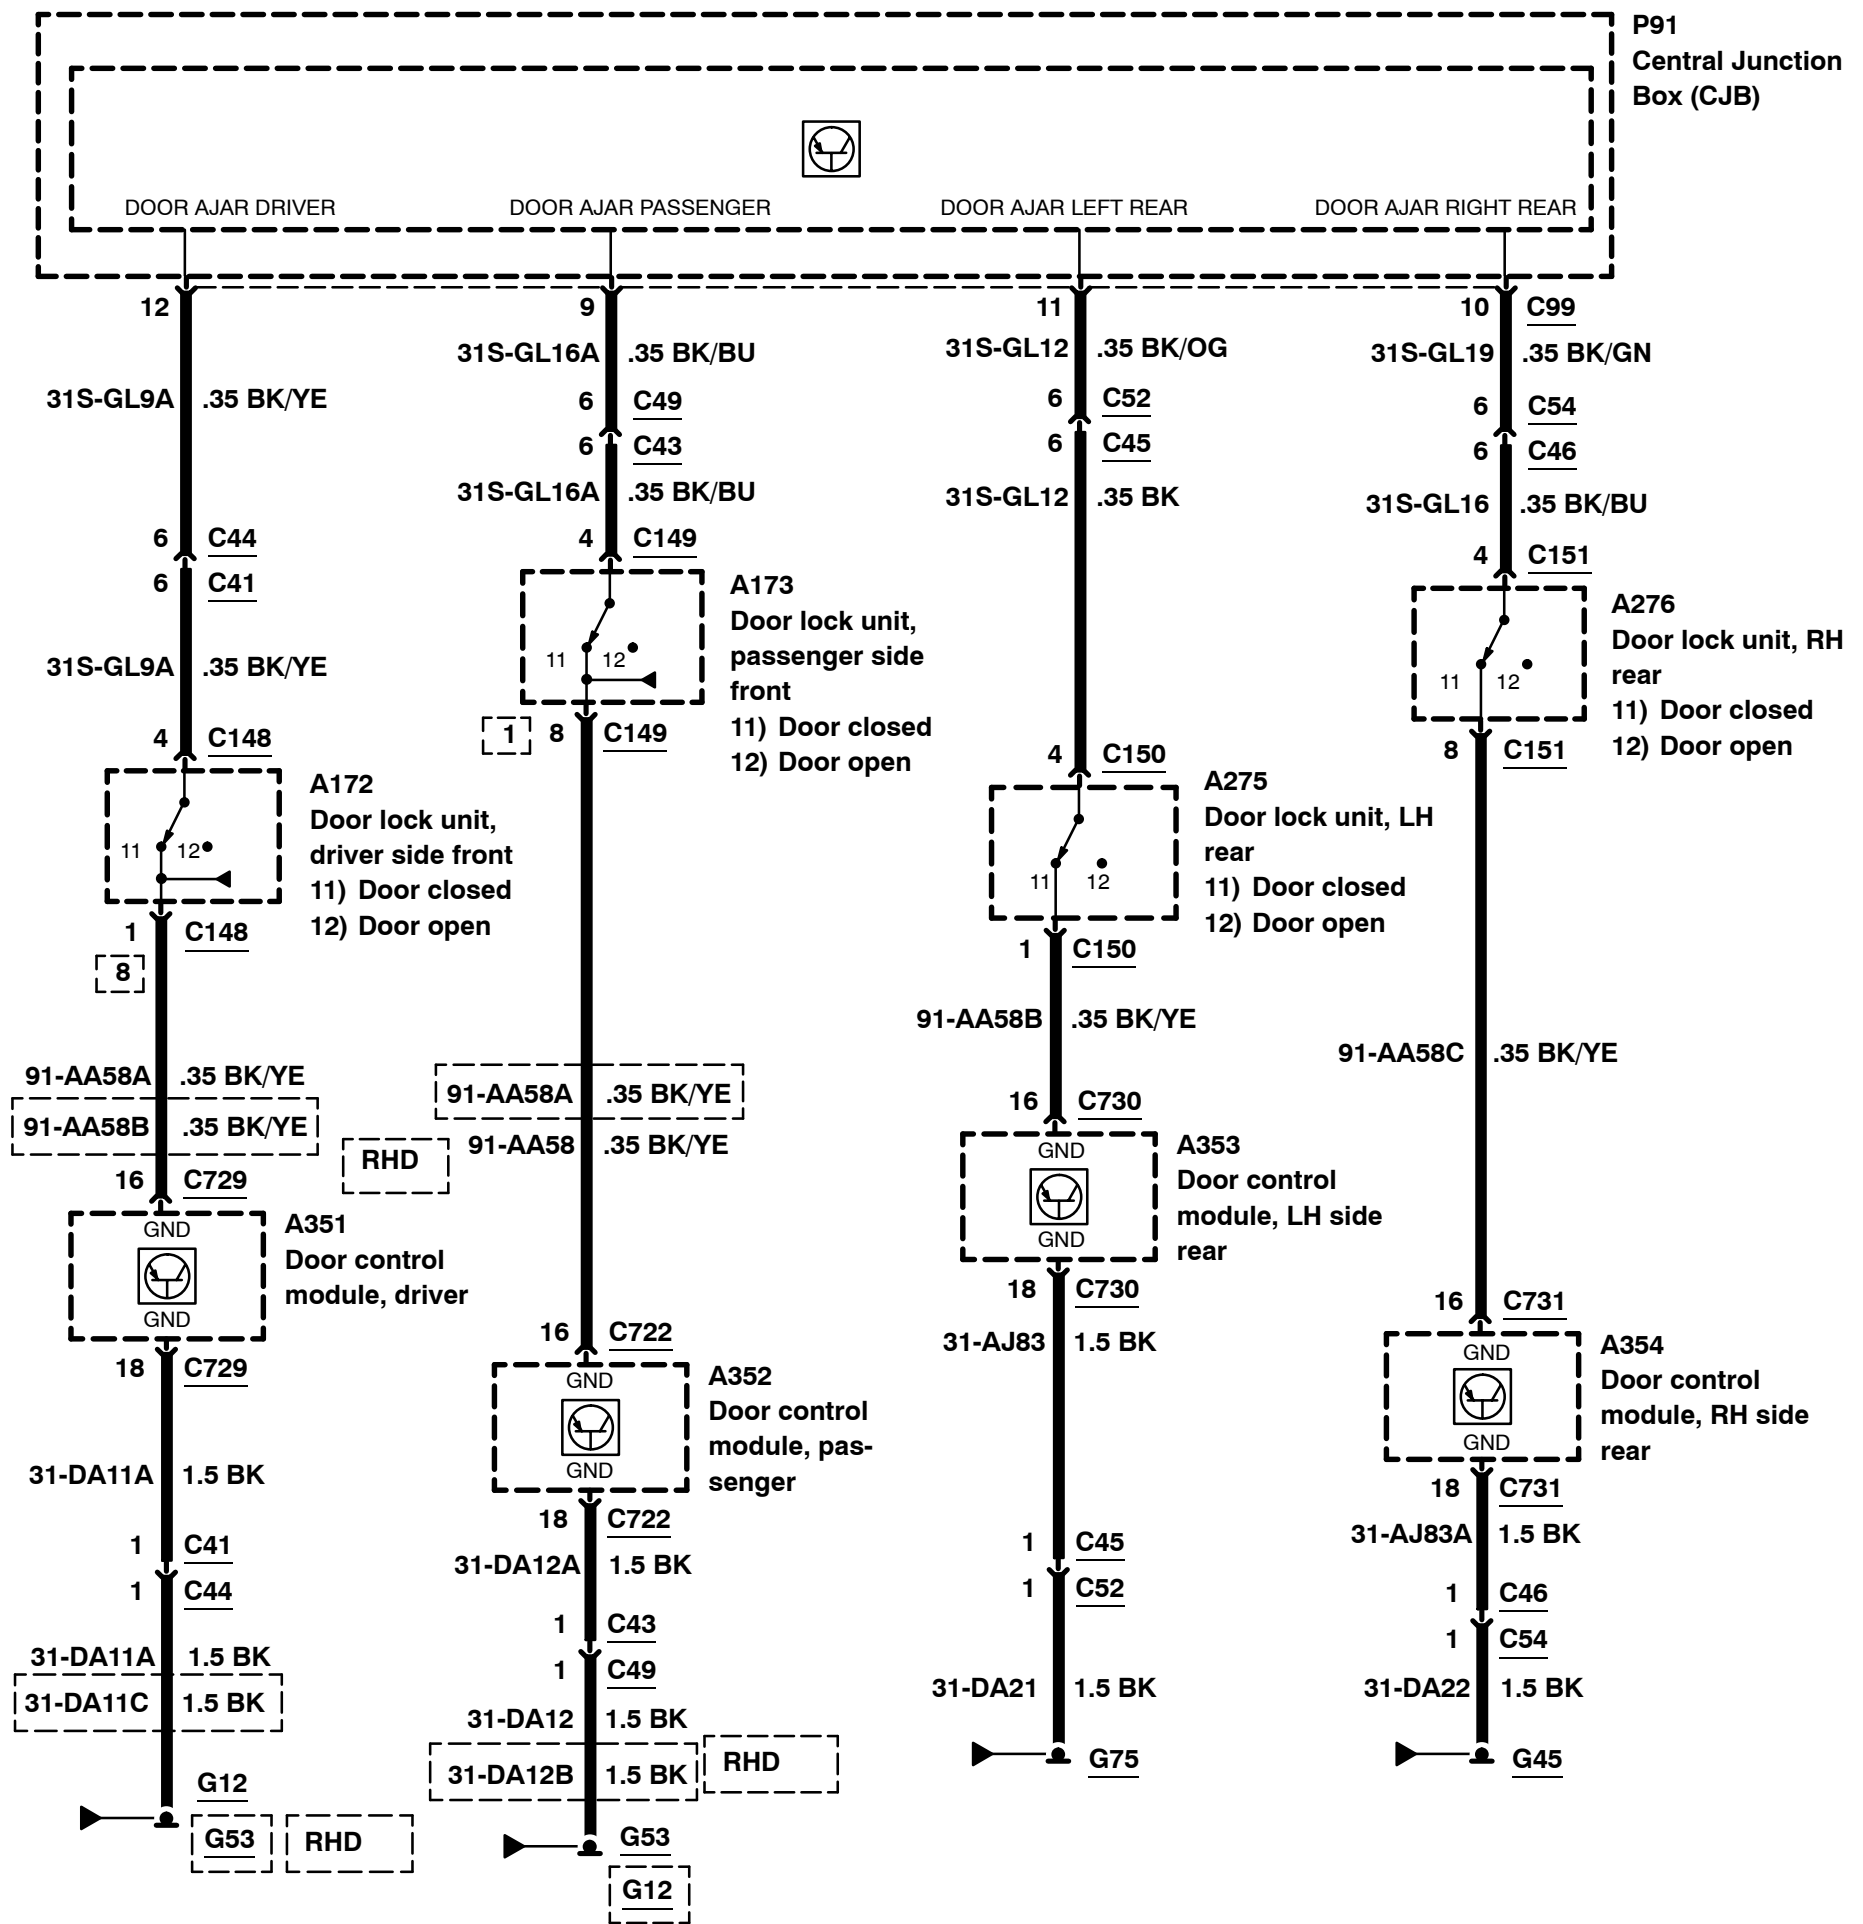


# Anti-Theft – Passive


02/2008  
419-01B-00-1  
2008.25  
Focus

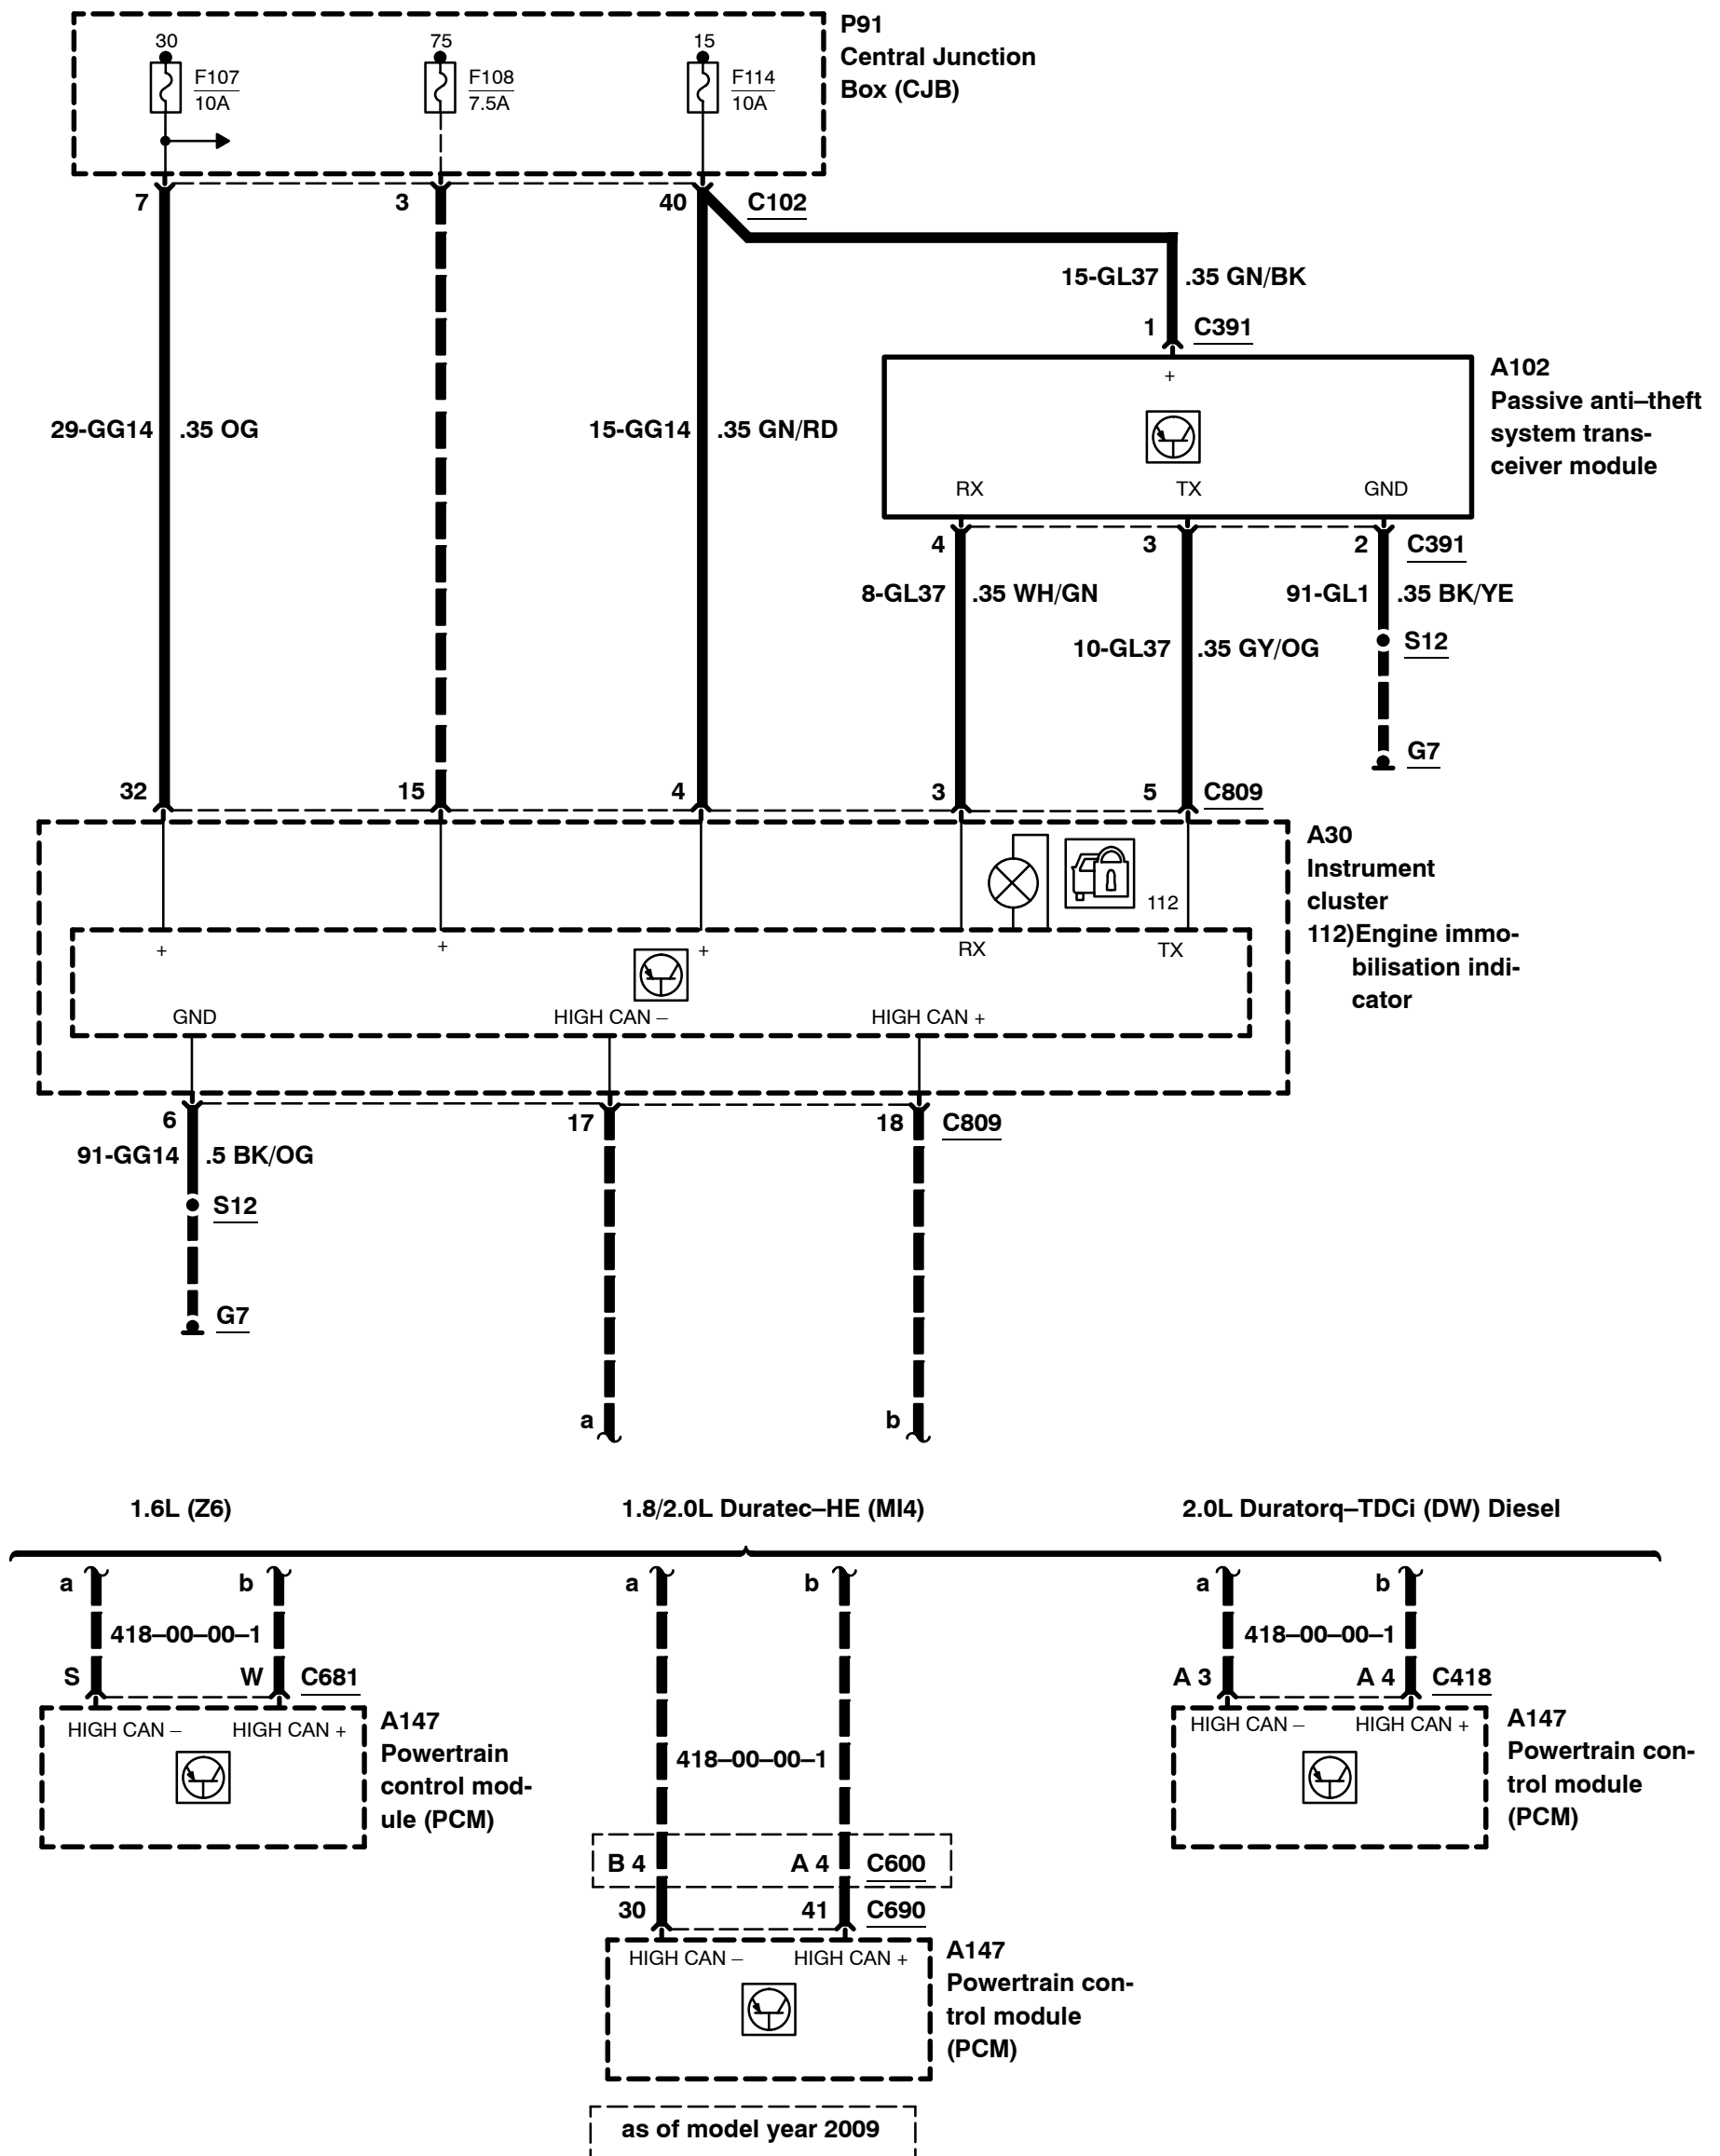

# Multifunction Electronic Control Modules


02/2008  
419-10-00-1  
2008.25  
Focus

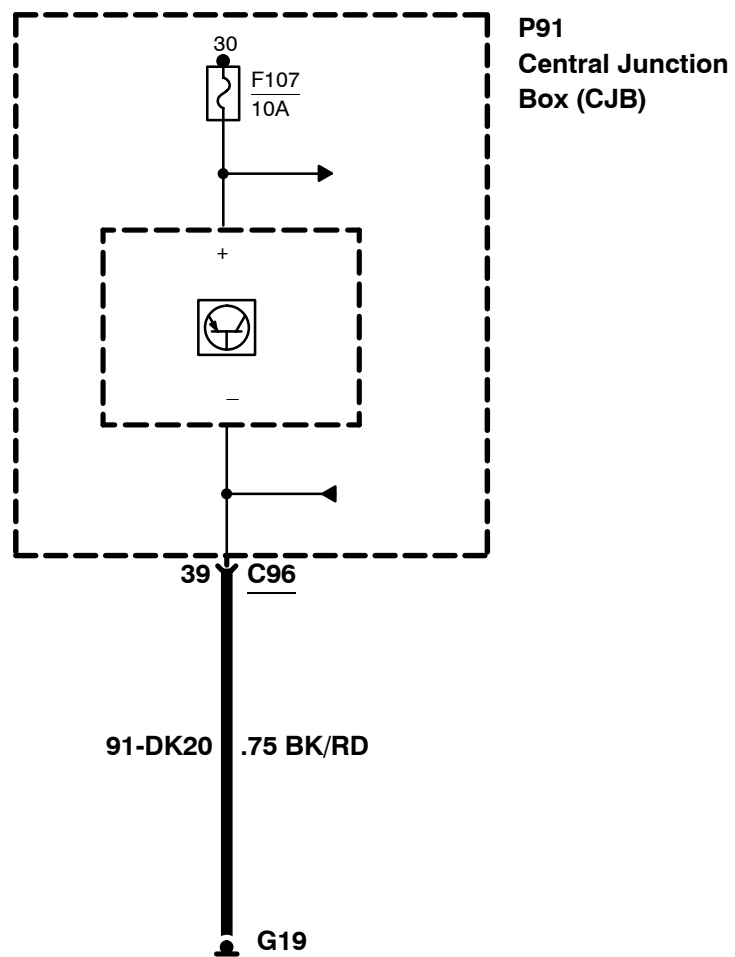

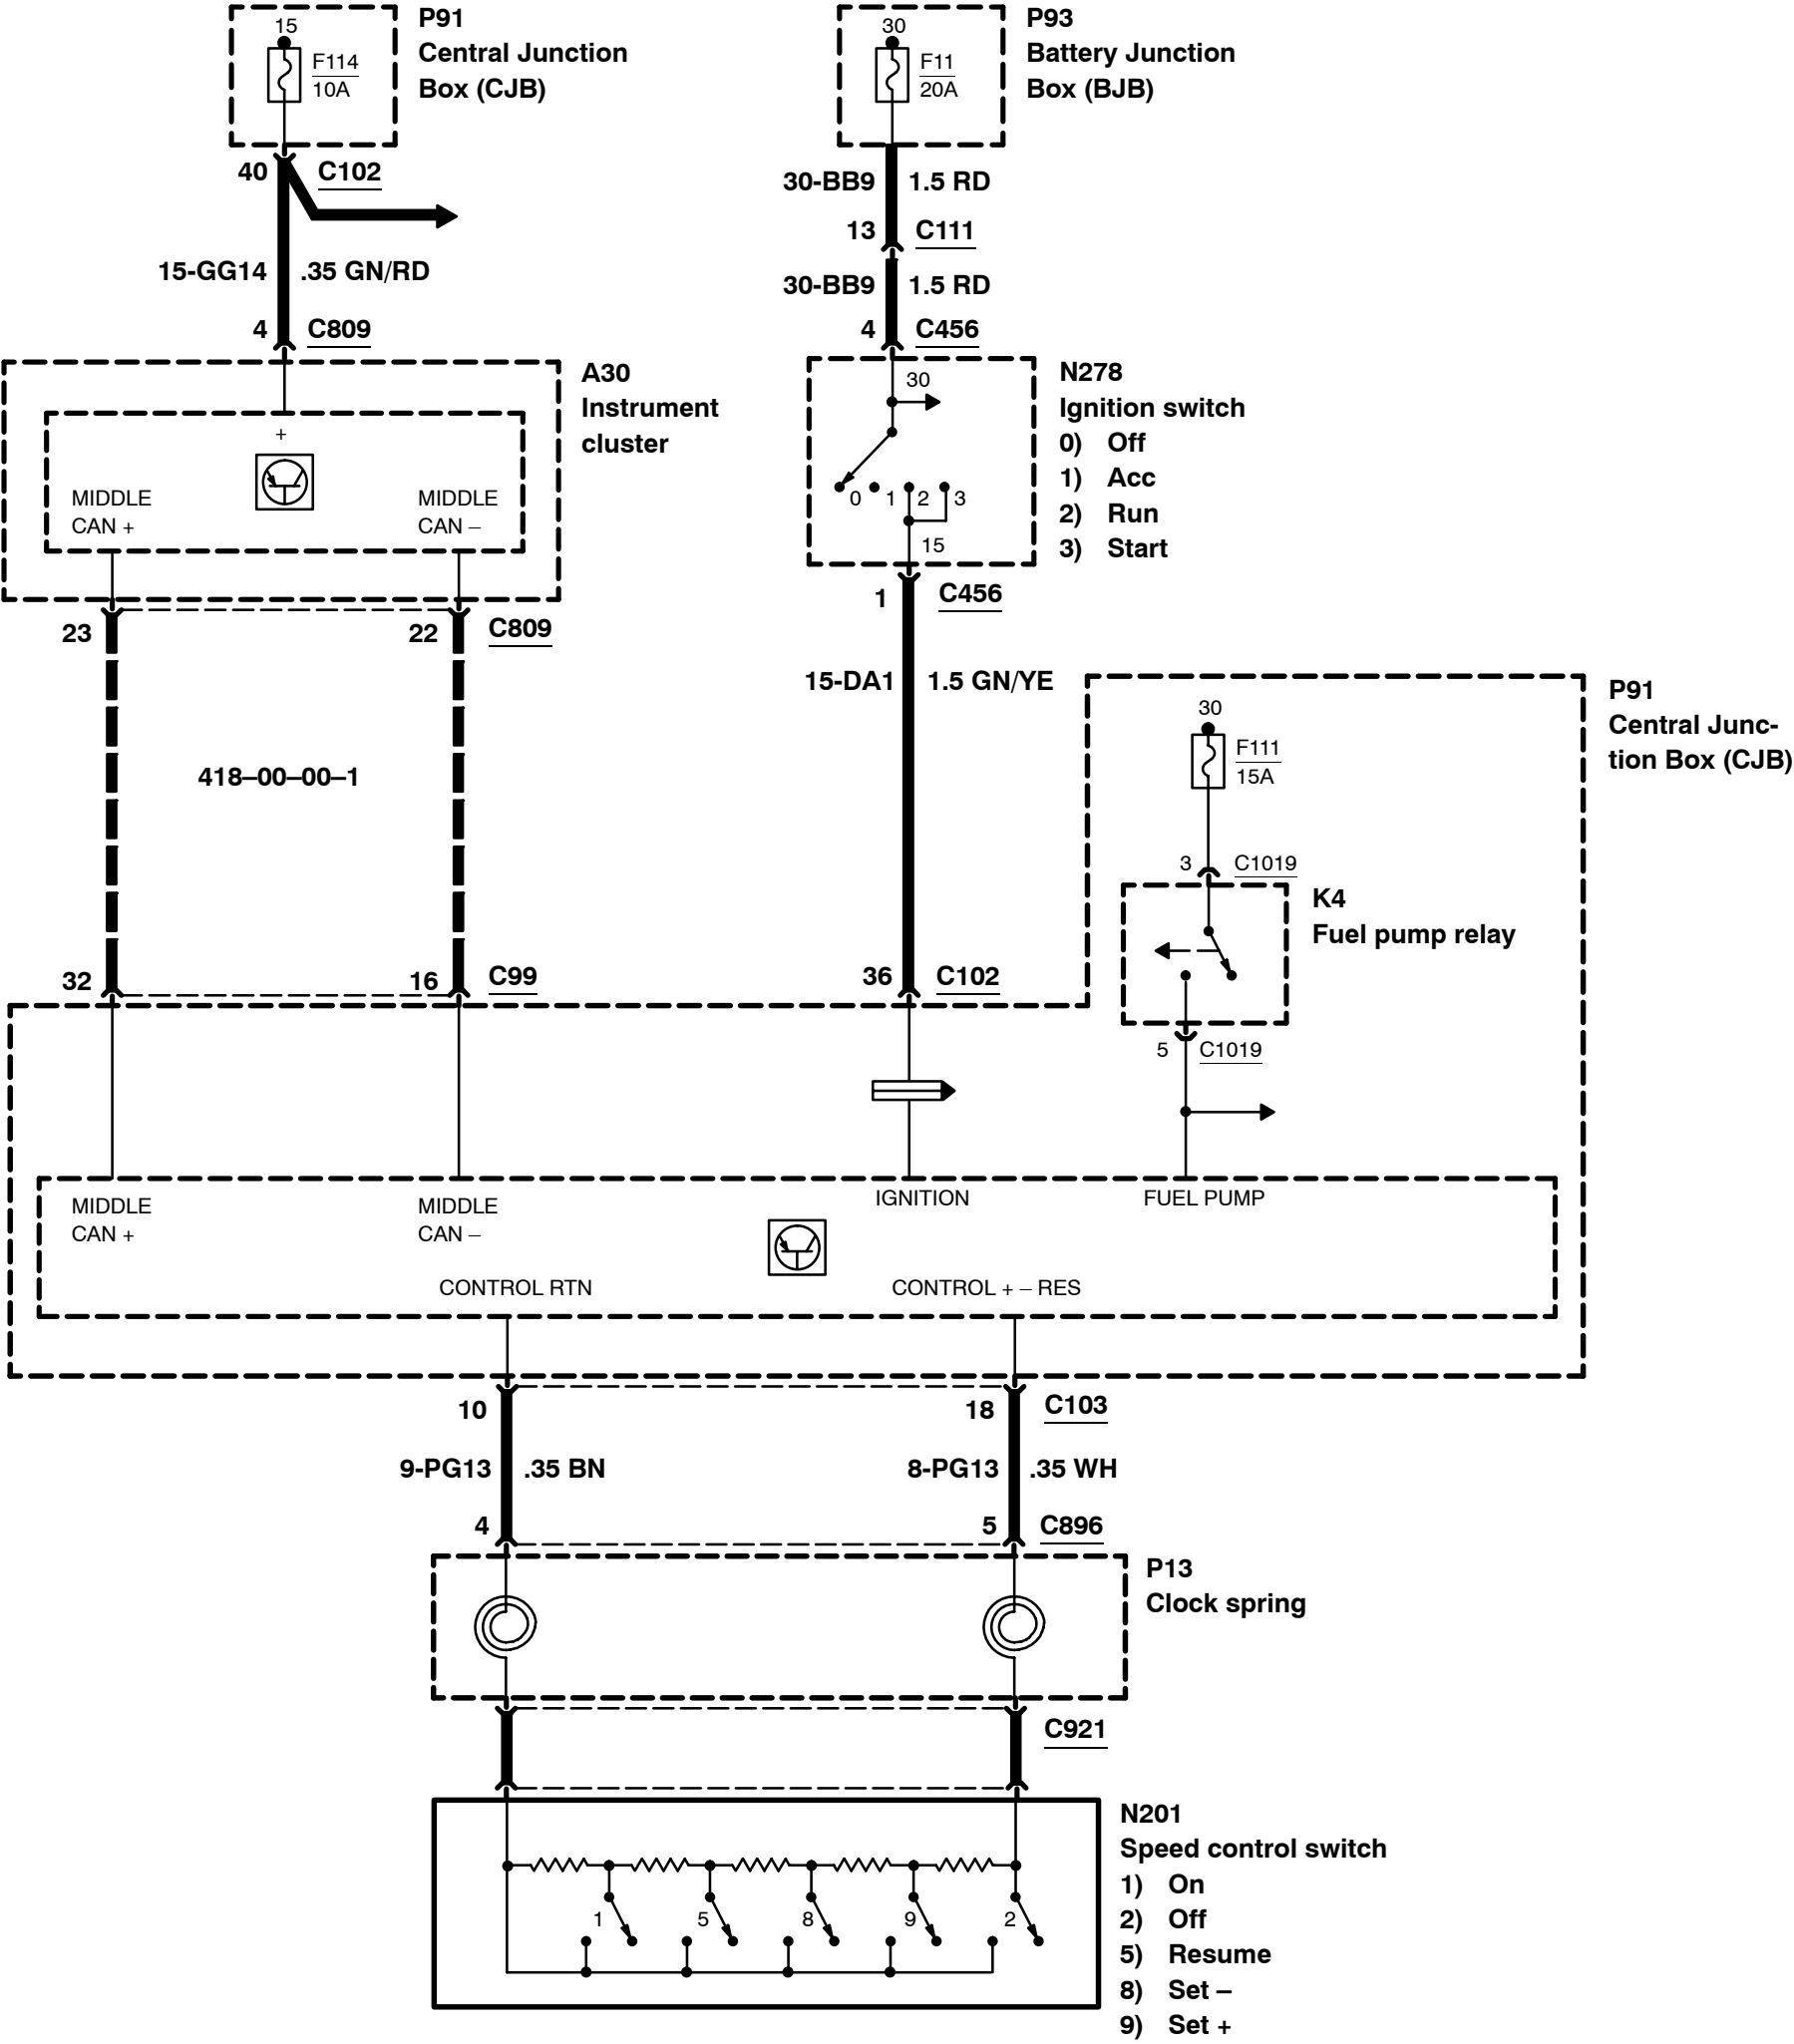


# Multifunction Electronic Control Modules

02/2008  
419-10-00-3  
2008.25  
Focus

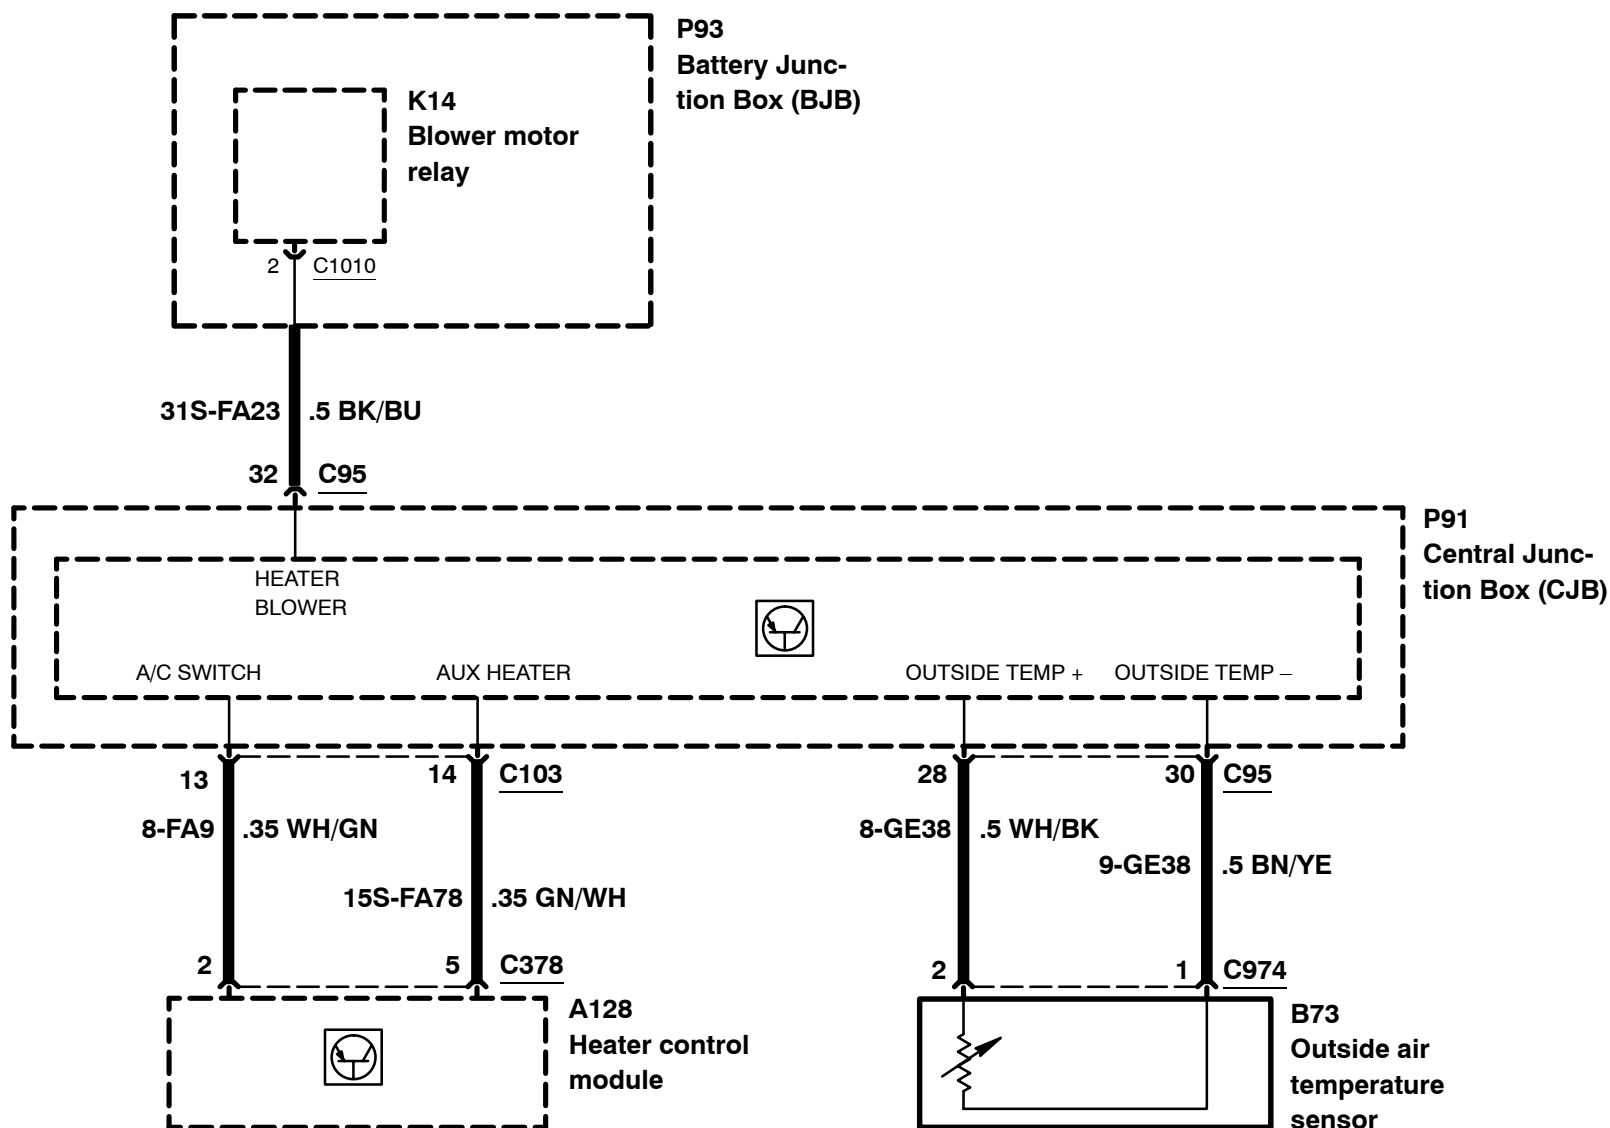


# Multifunction Electronic Control Modules


02/2008  
419-10-00-4  
2008.25  
Focus

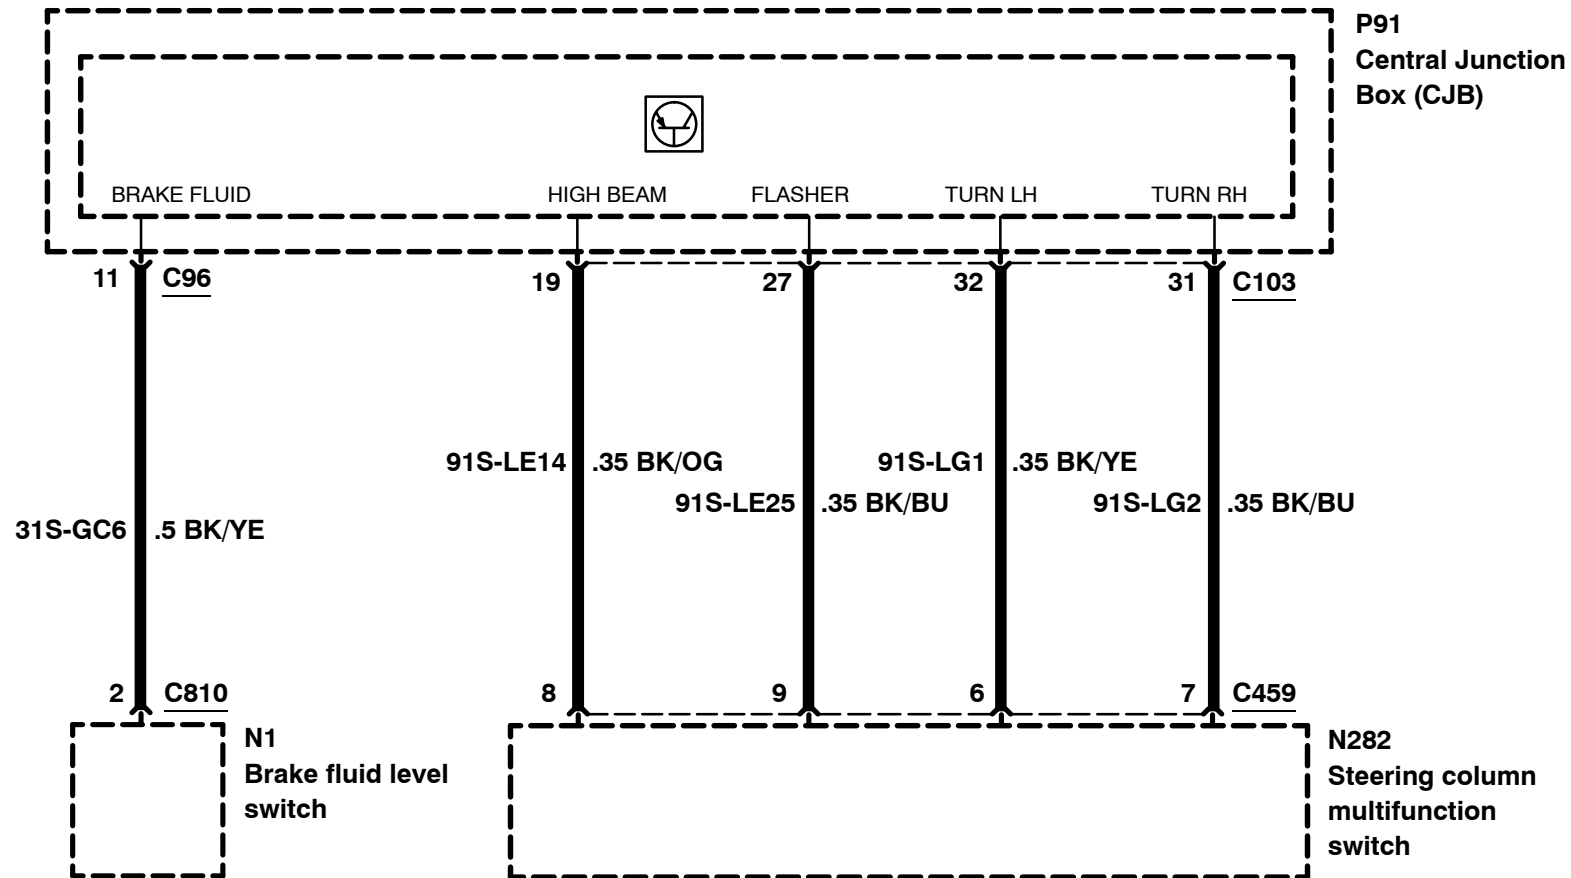


# Multifunction Electronic Control Modules

02/2008  
419-10-00-5  
2008.25  
Focus

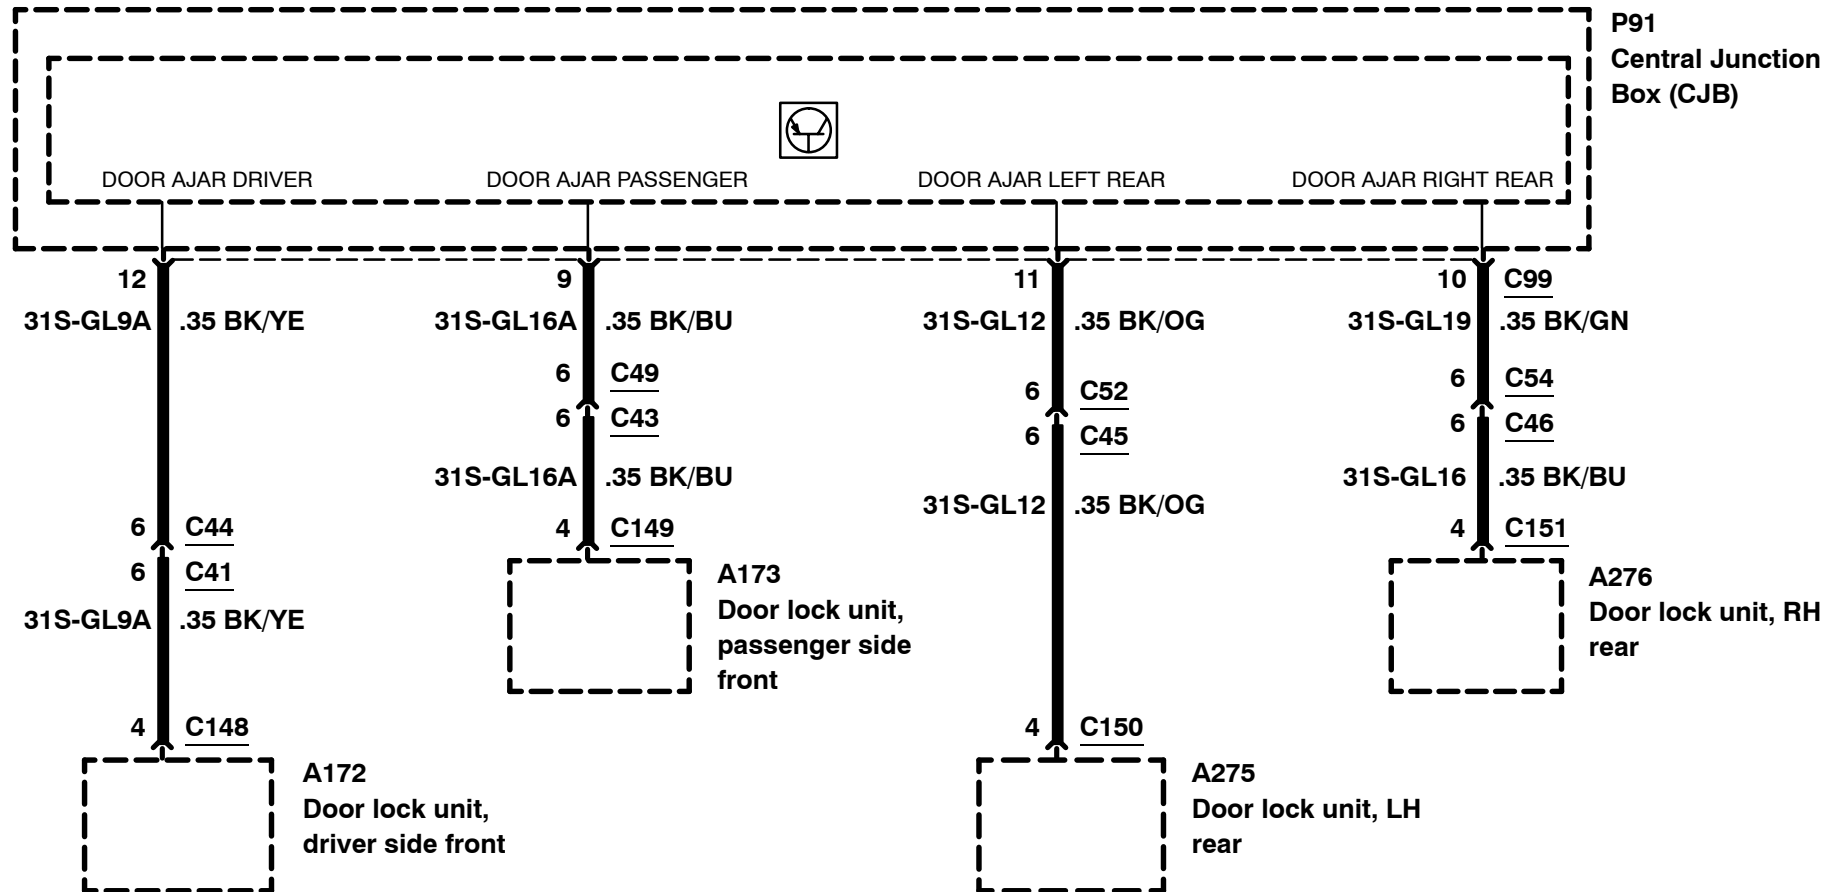

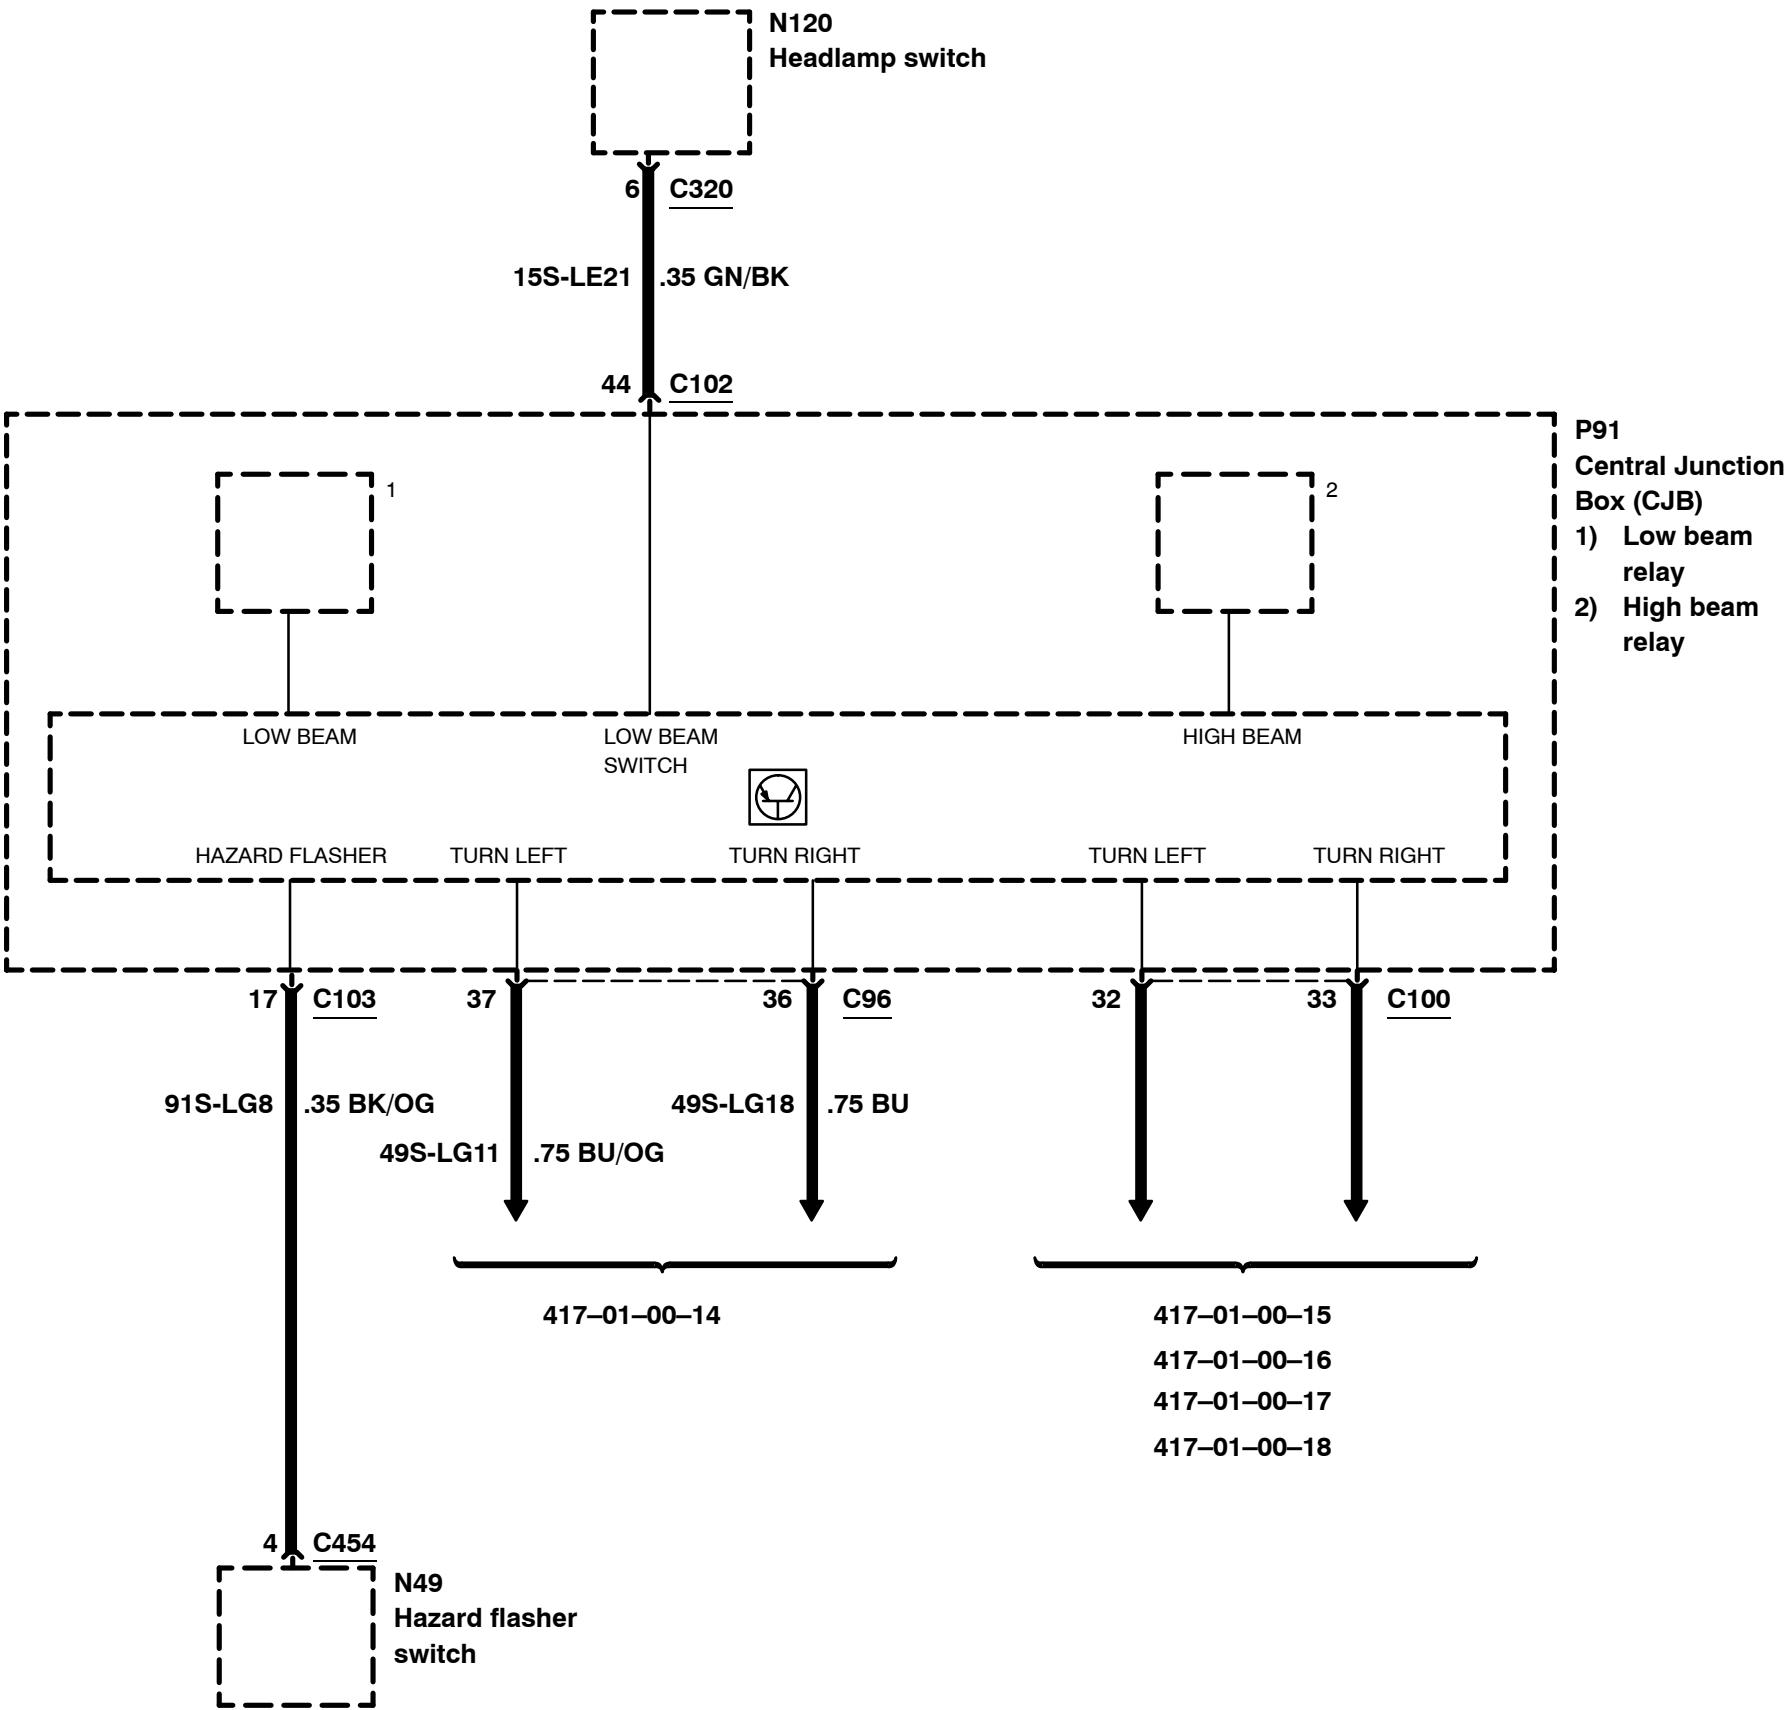




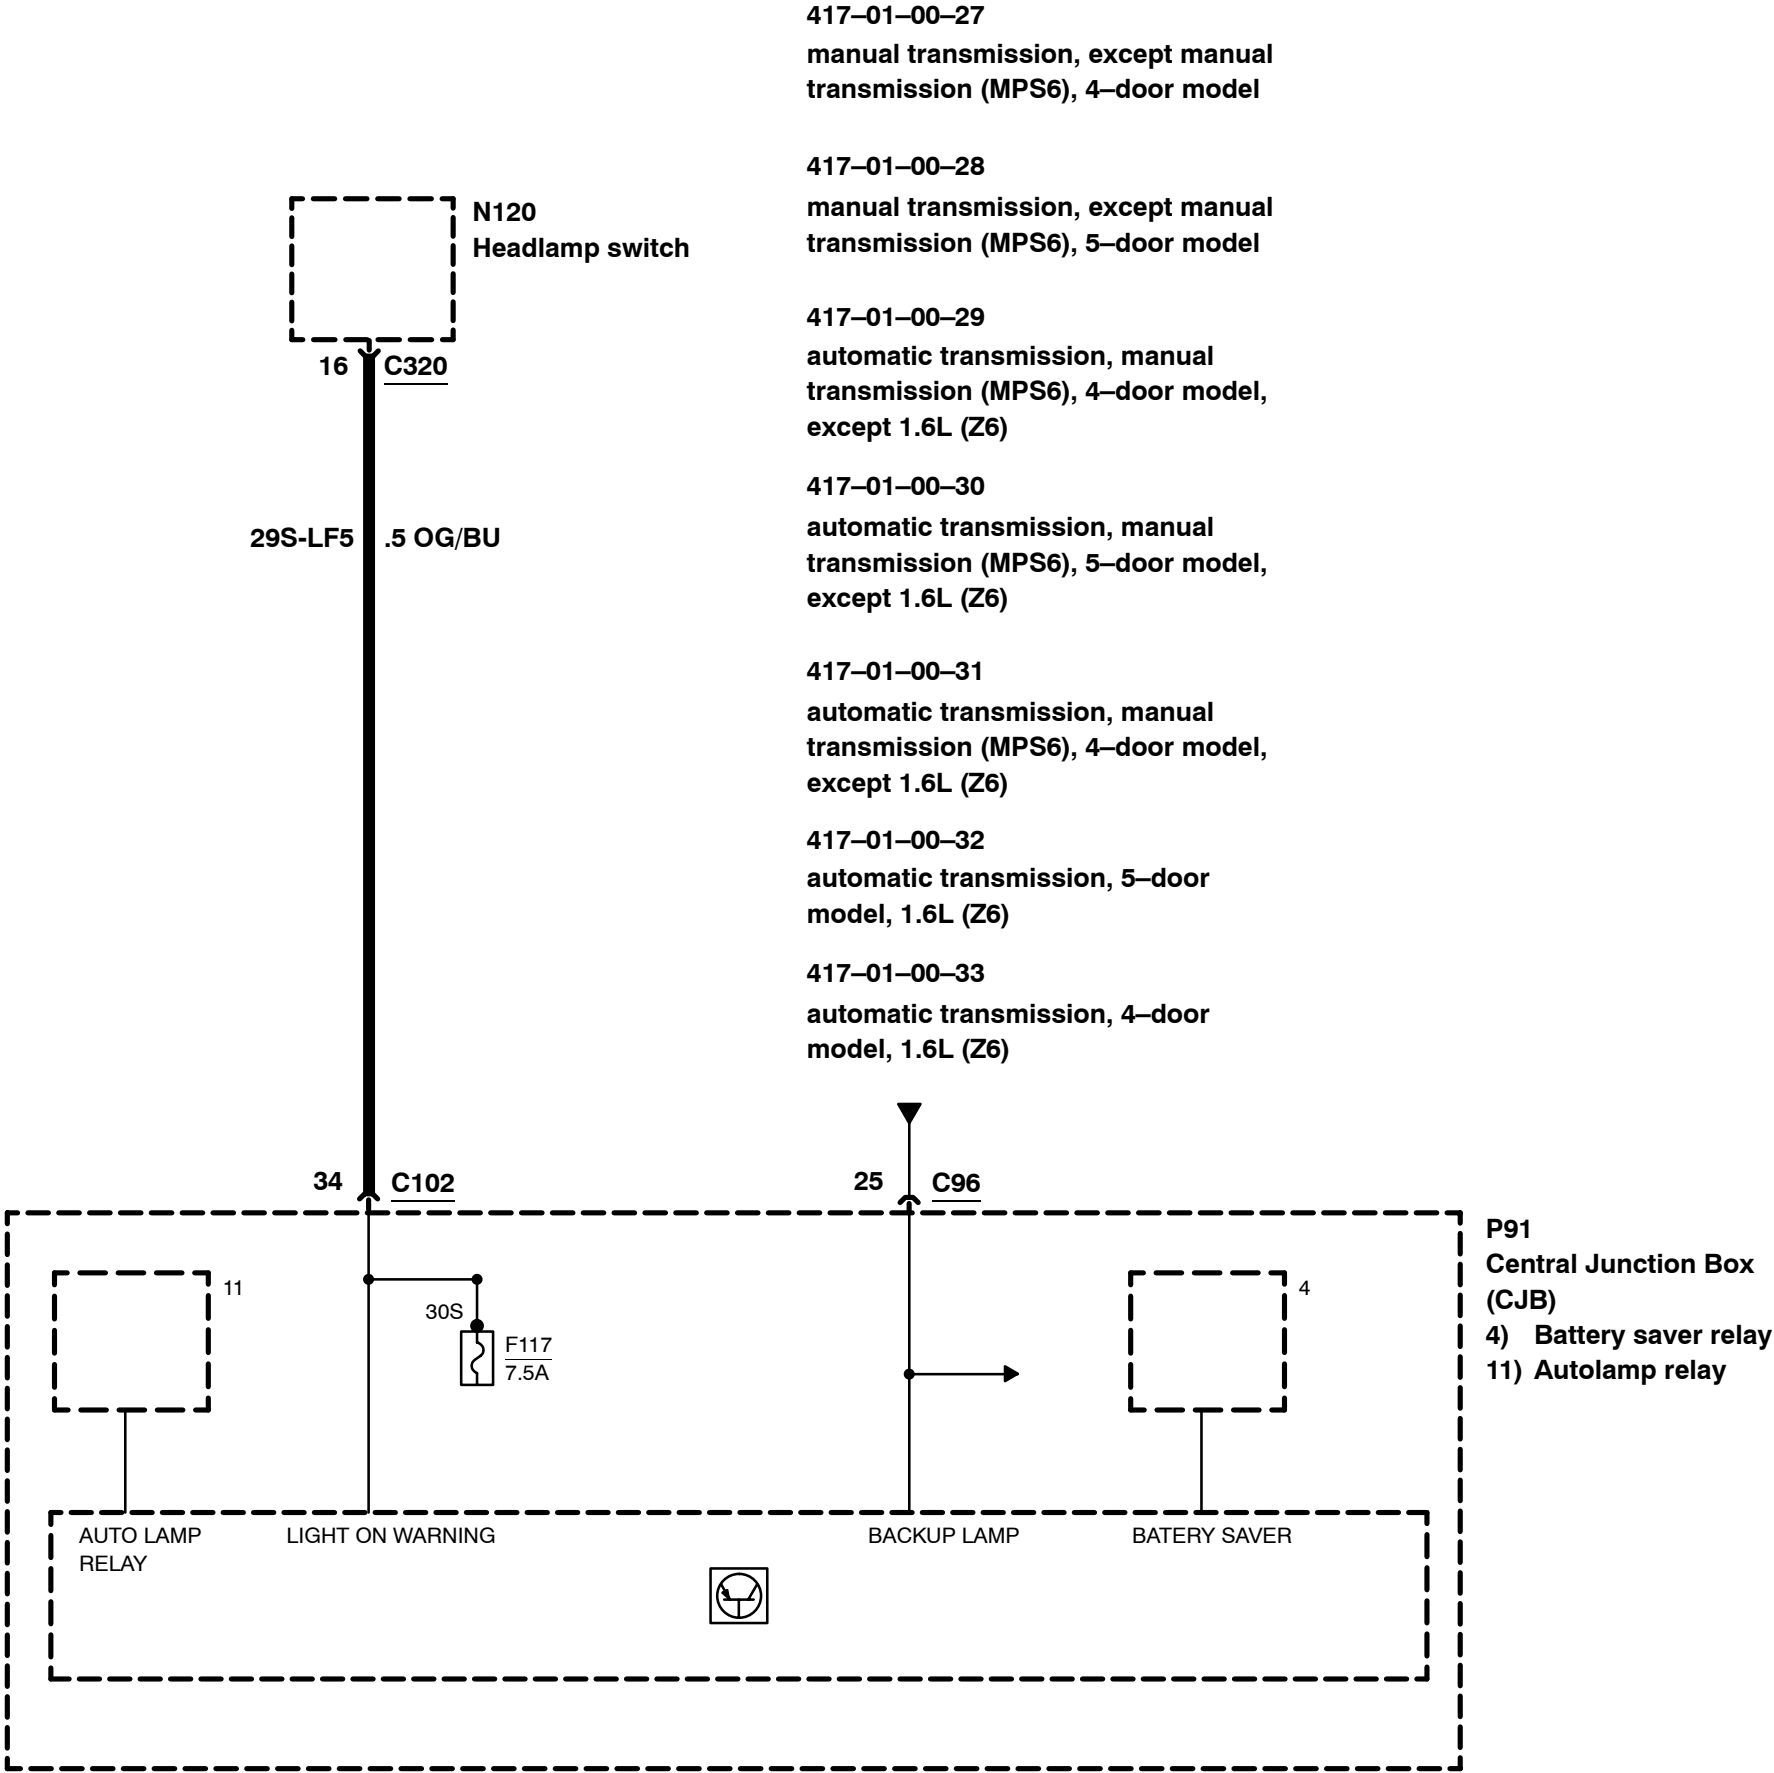


Multifunction Electronic Control Modules

02/2008  
419-10-00-8  
2008.25  
Focus

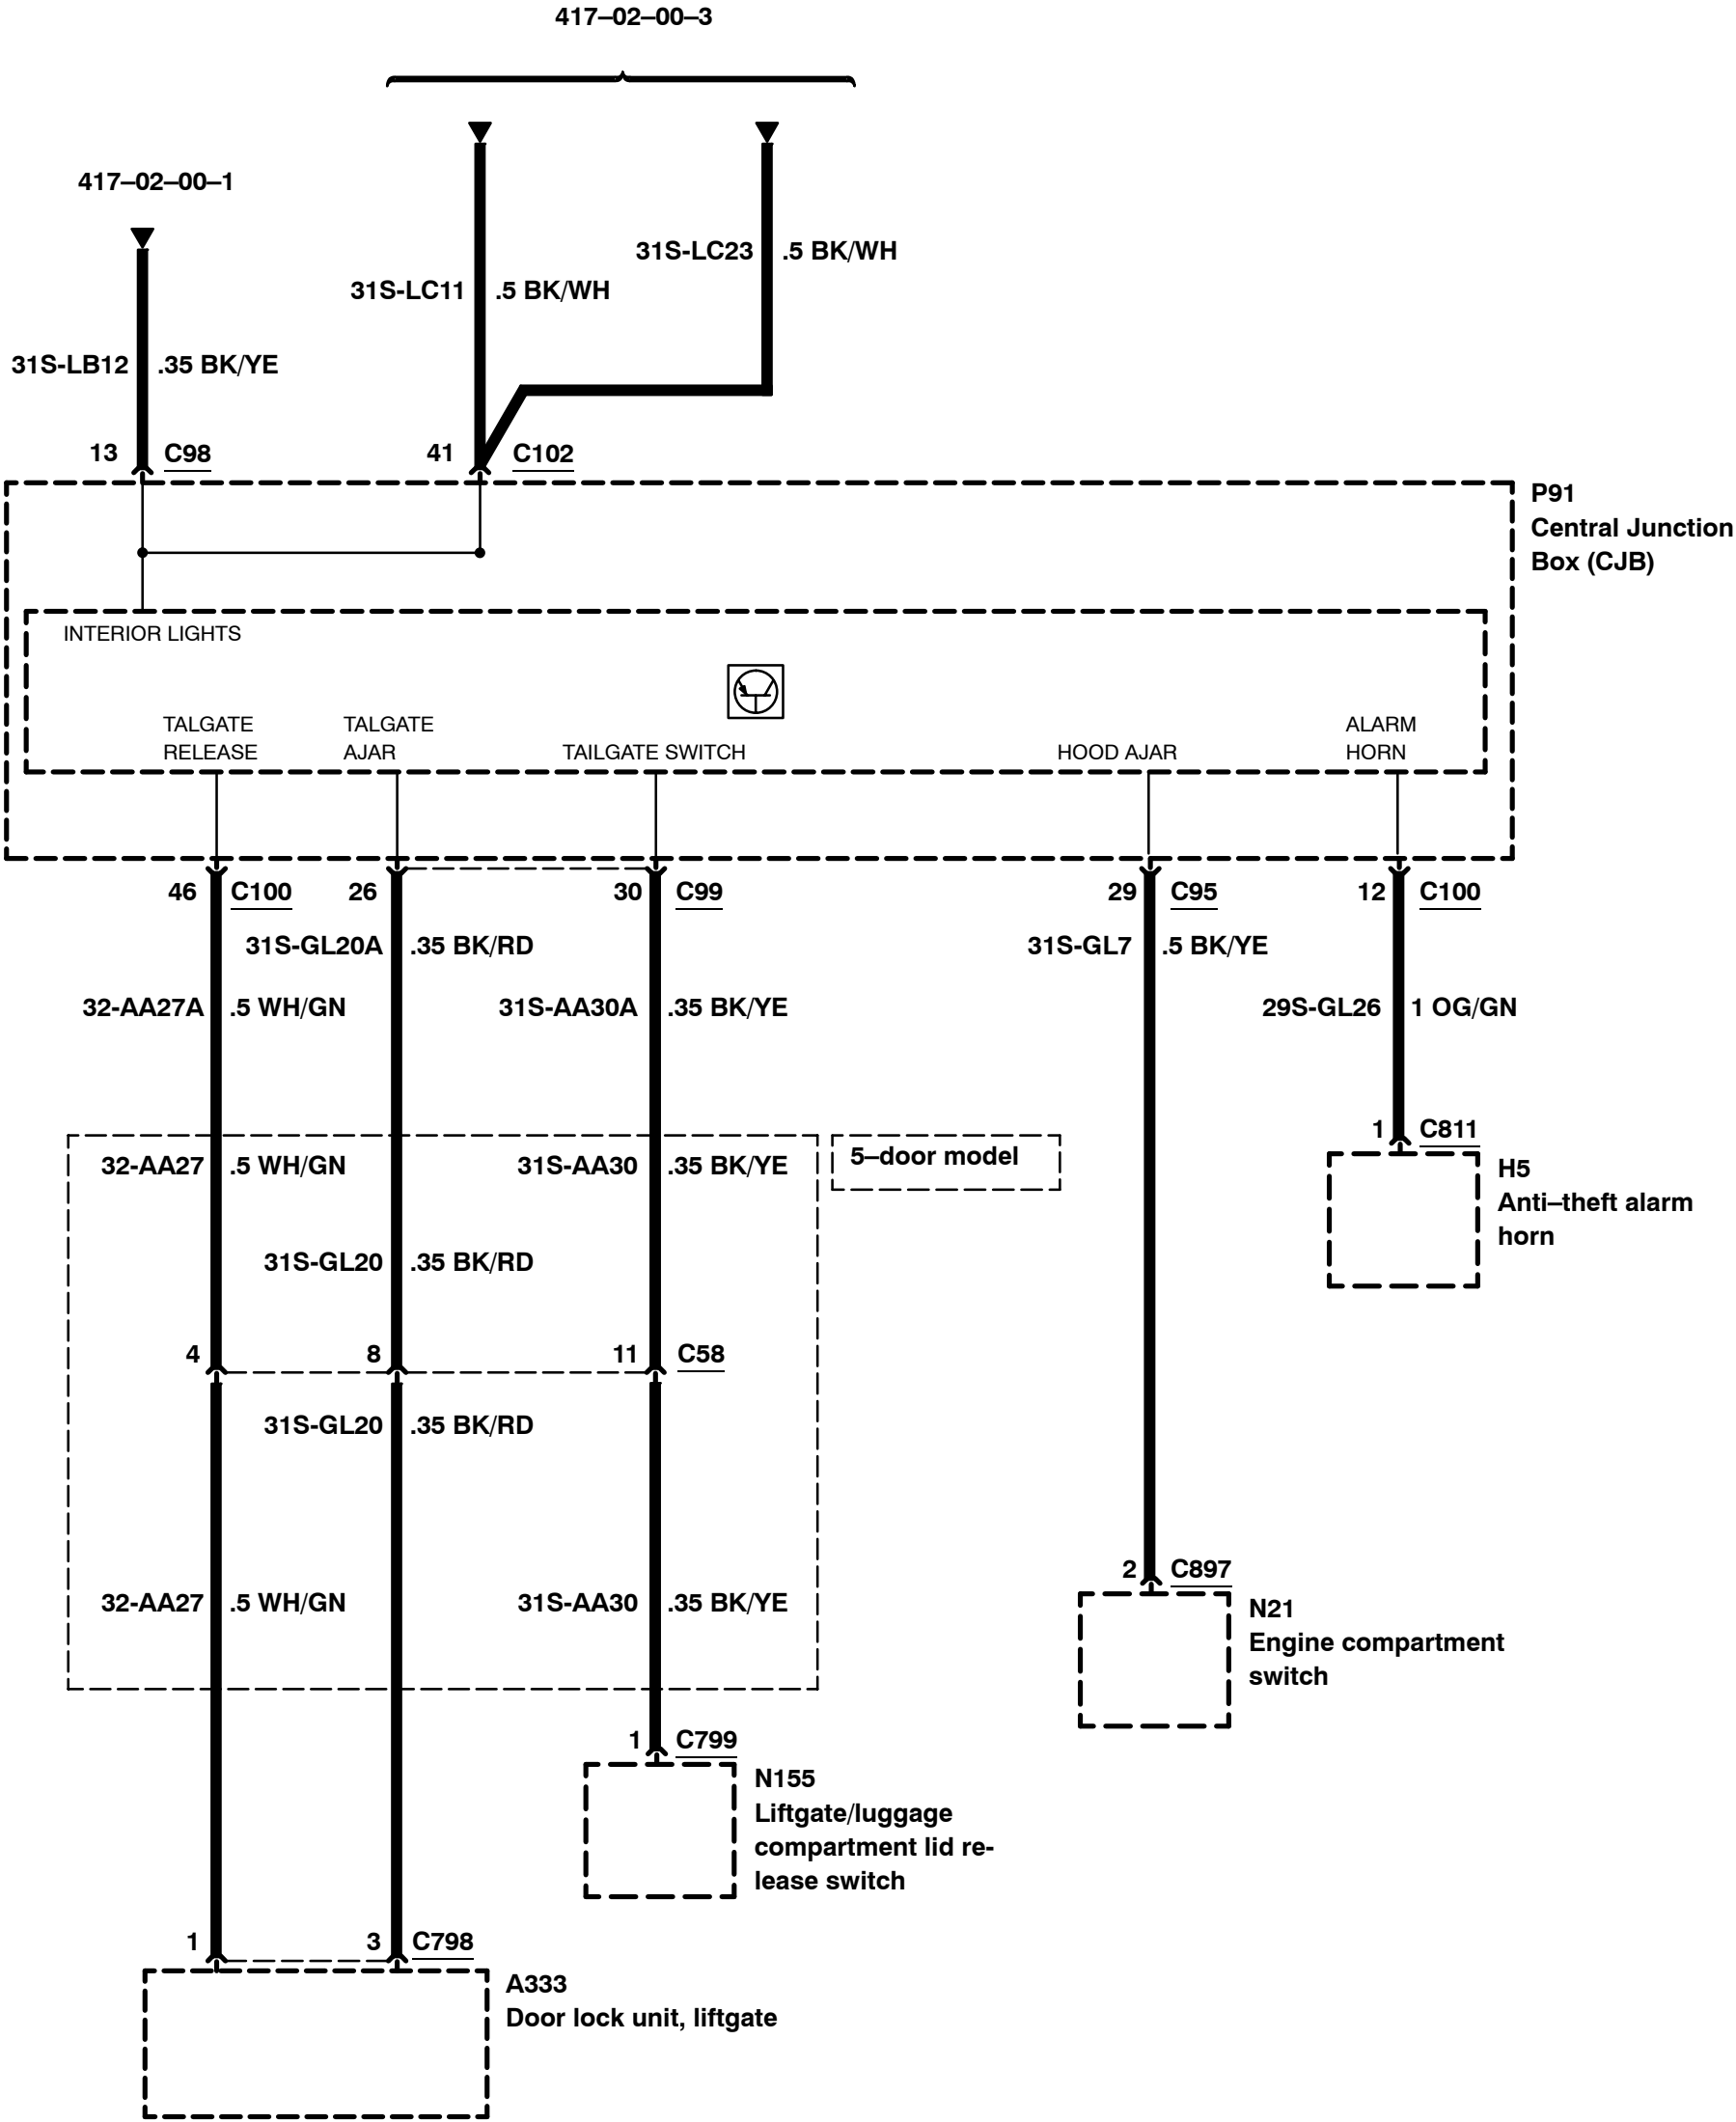


# Multifunction Electronic Control Modules


02/2008  
419-10-00-9  
2008.25  
Focus

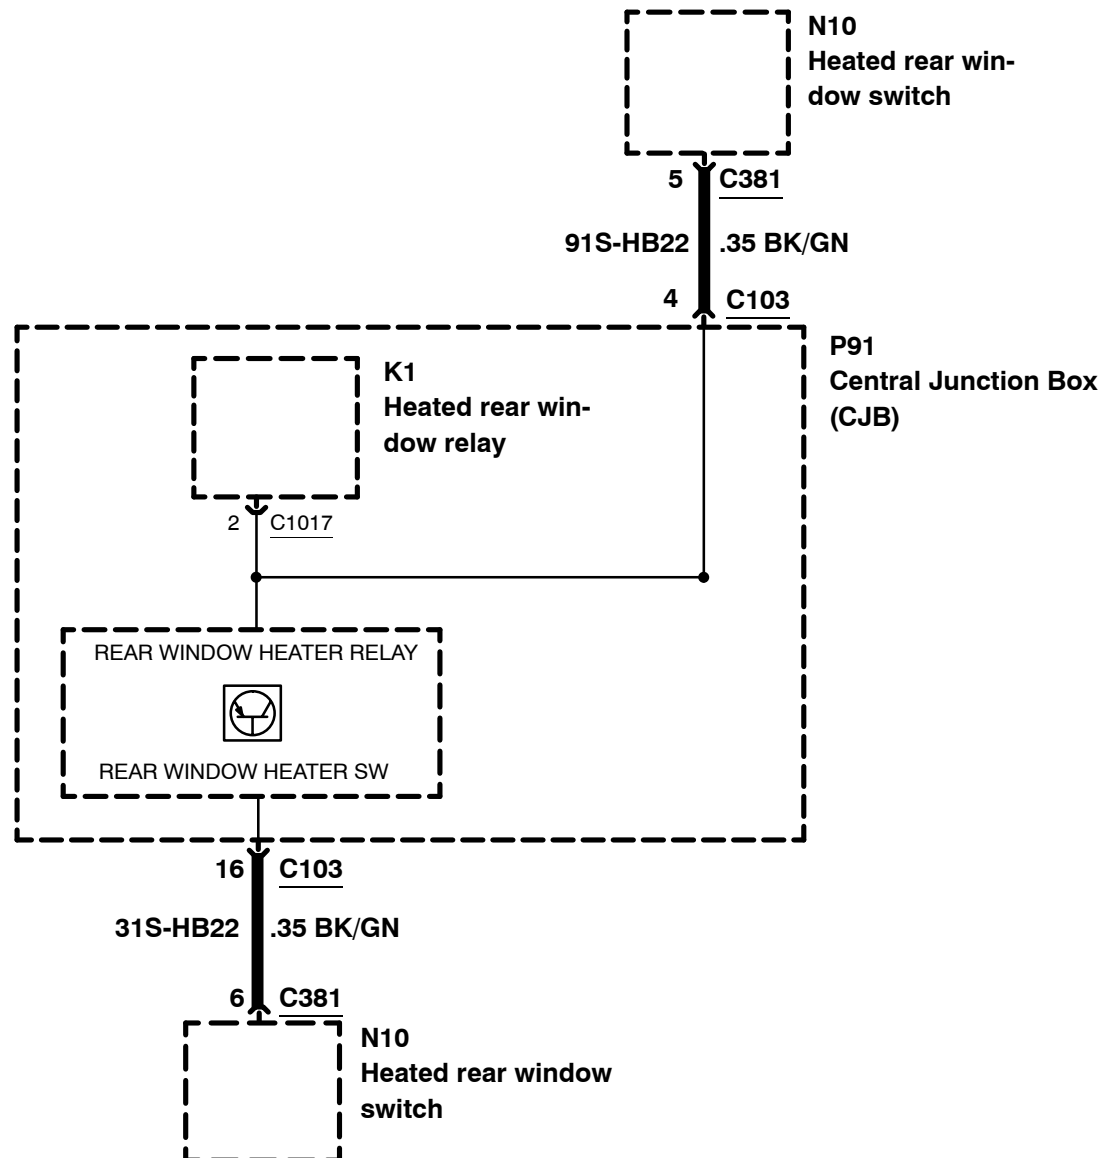

# Multifunction Electronic Control Modules


02/2008  
419-10-00-10  
2008.25  
Focus

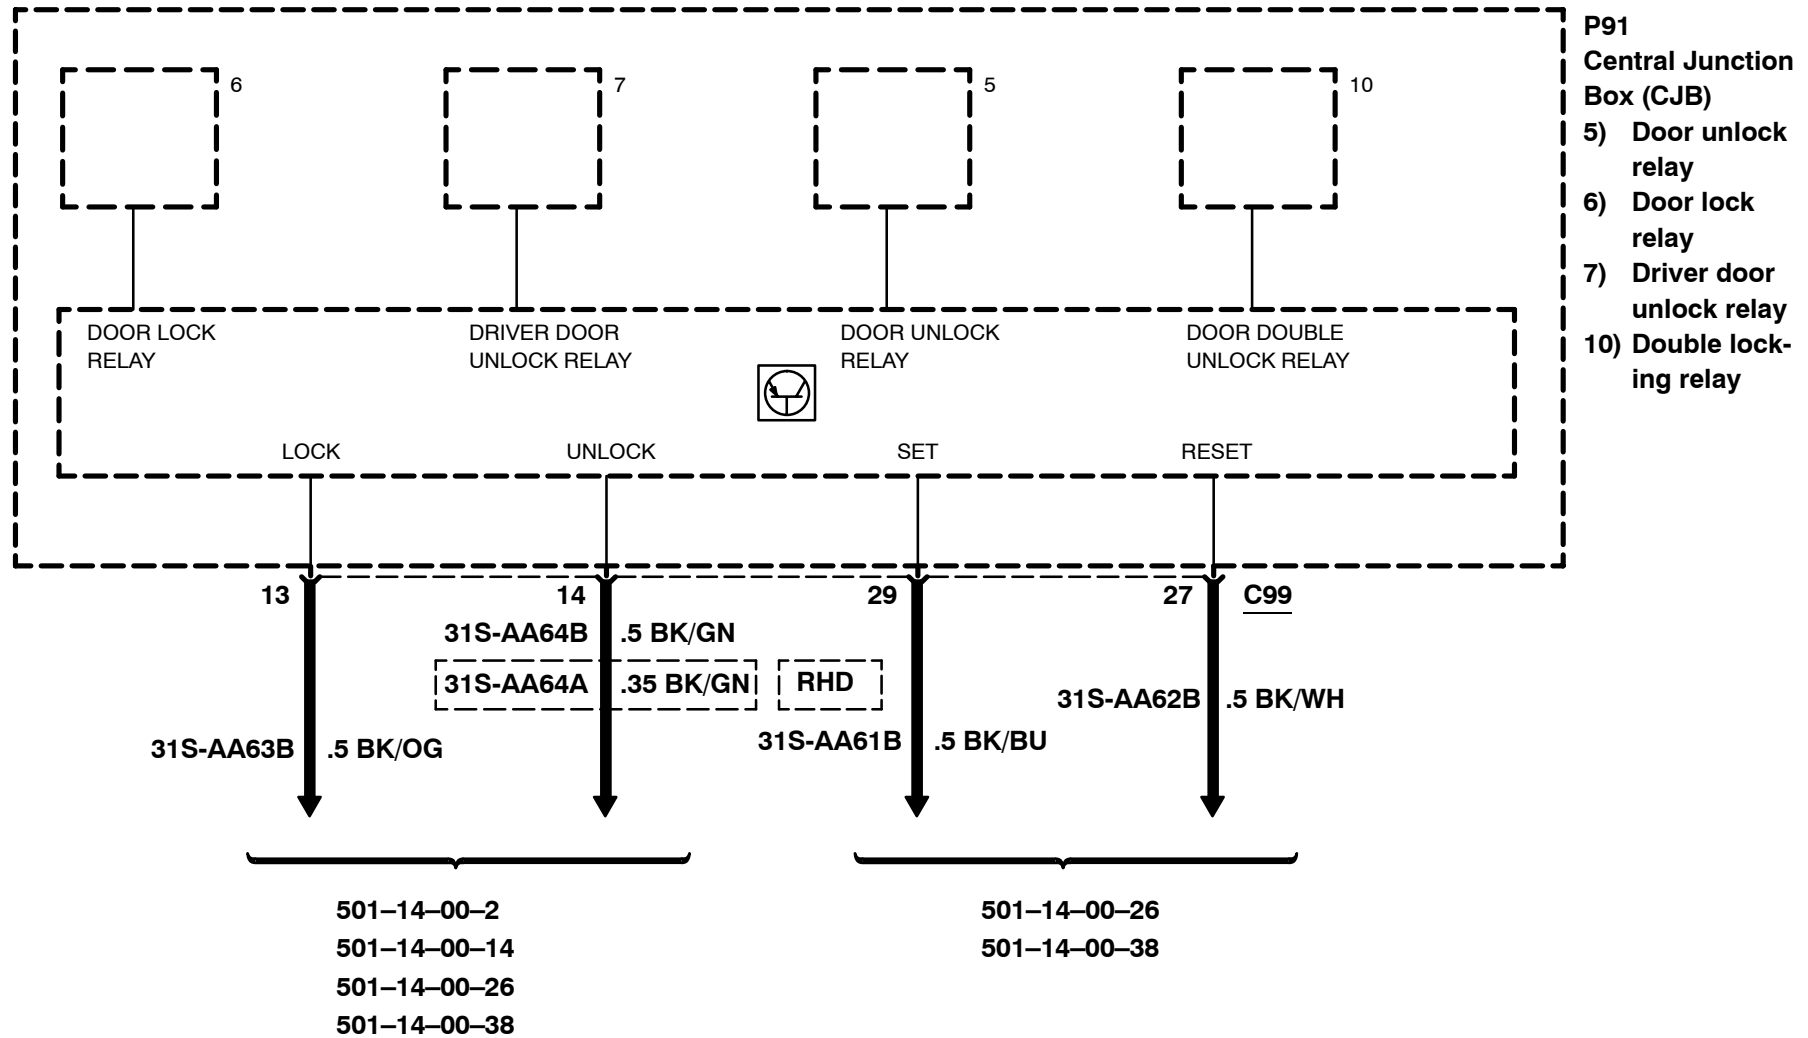

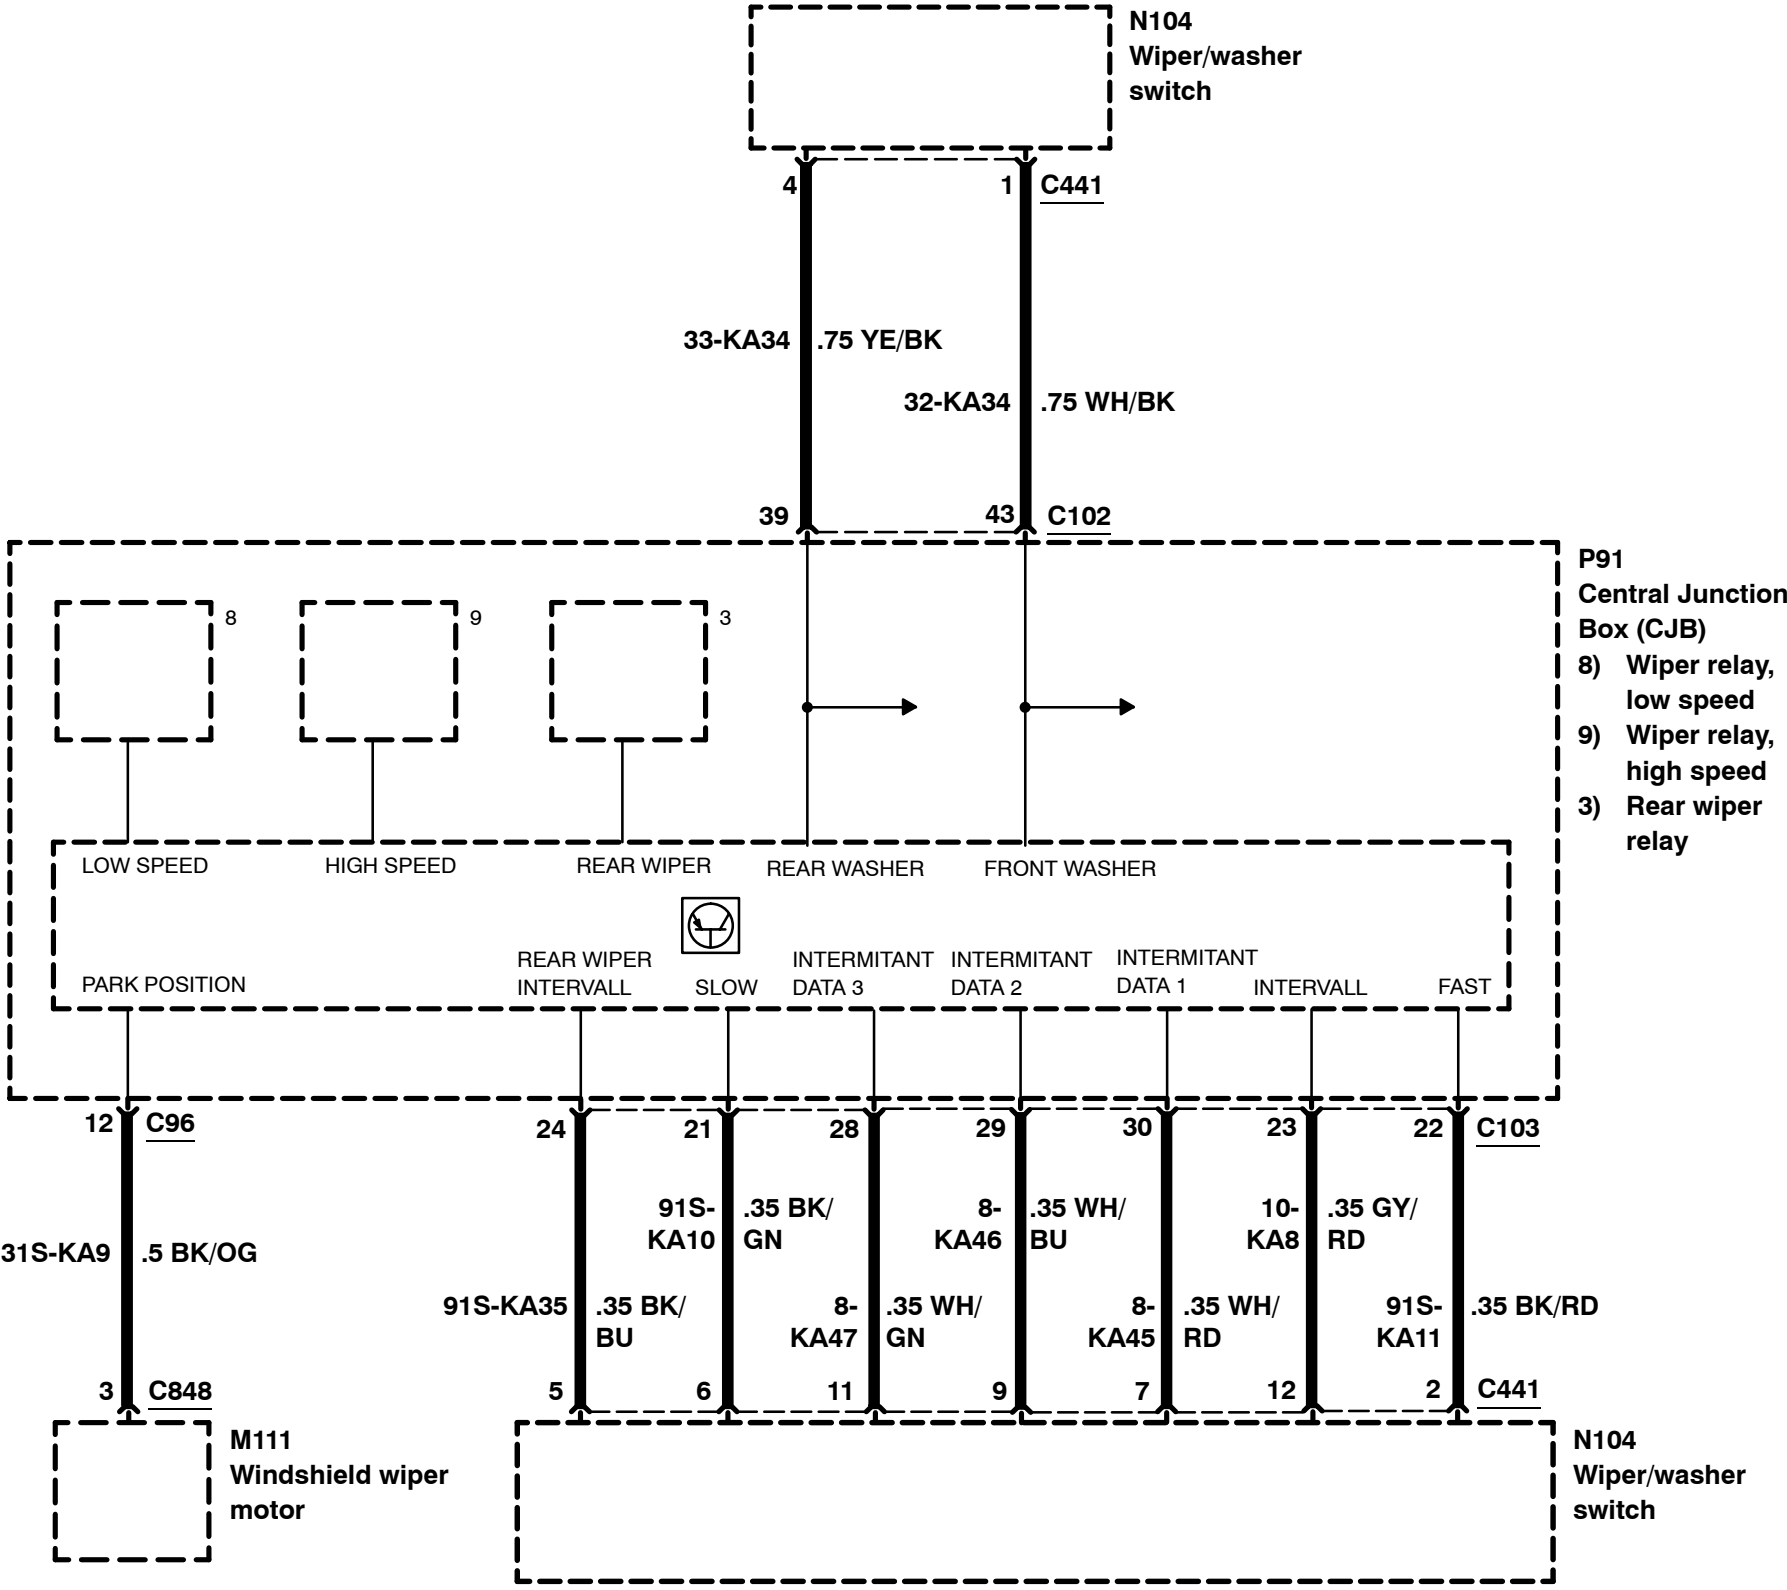


# Multifunction Electronic Control Modules

02/2008  
419-10-00-12  
2008.25  
Focus

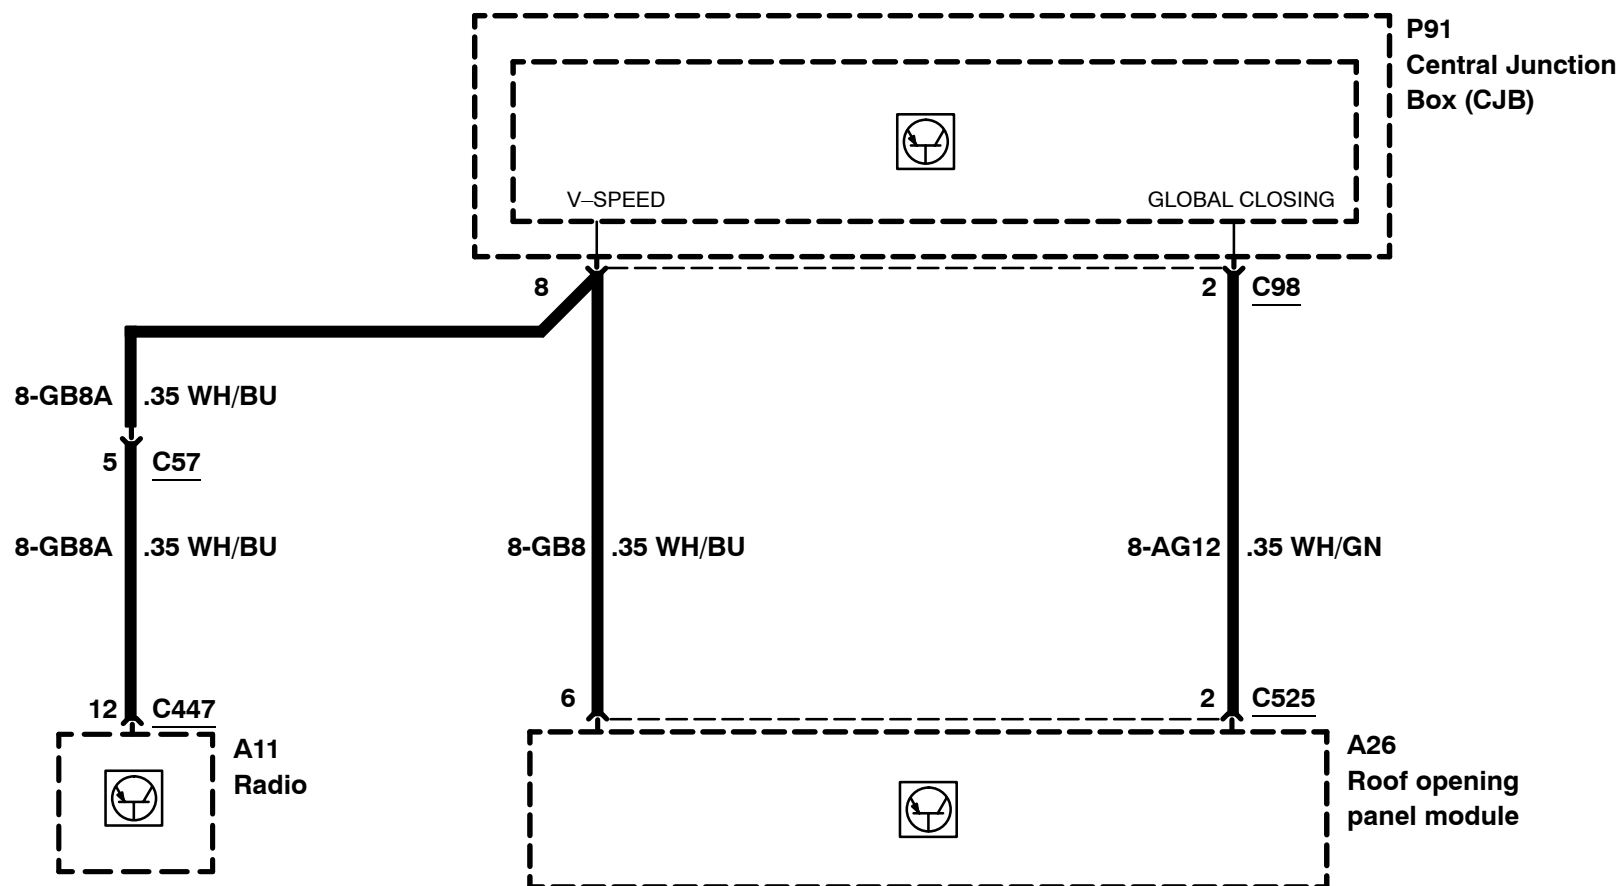

# Rear View Mirrors – LHD, with front power windows


02/2008  
501-09-00-1  
2008.25  
Focus

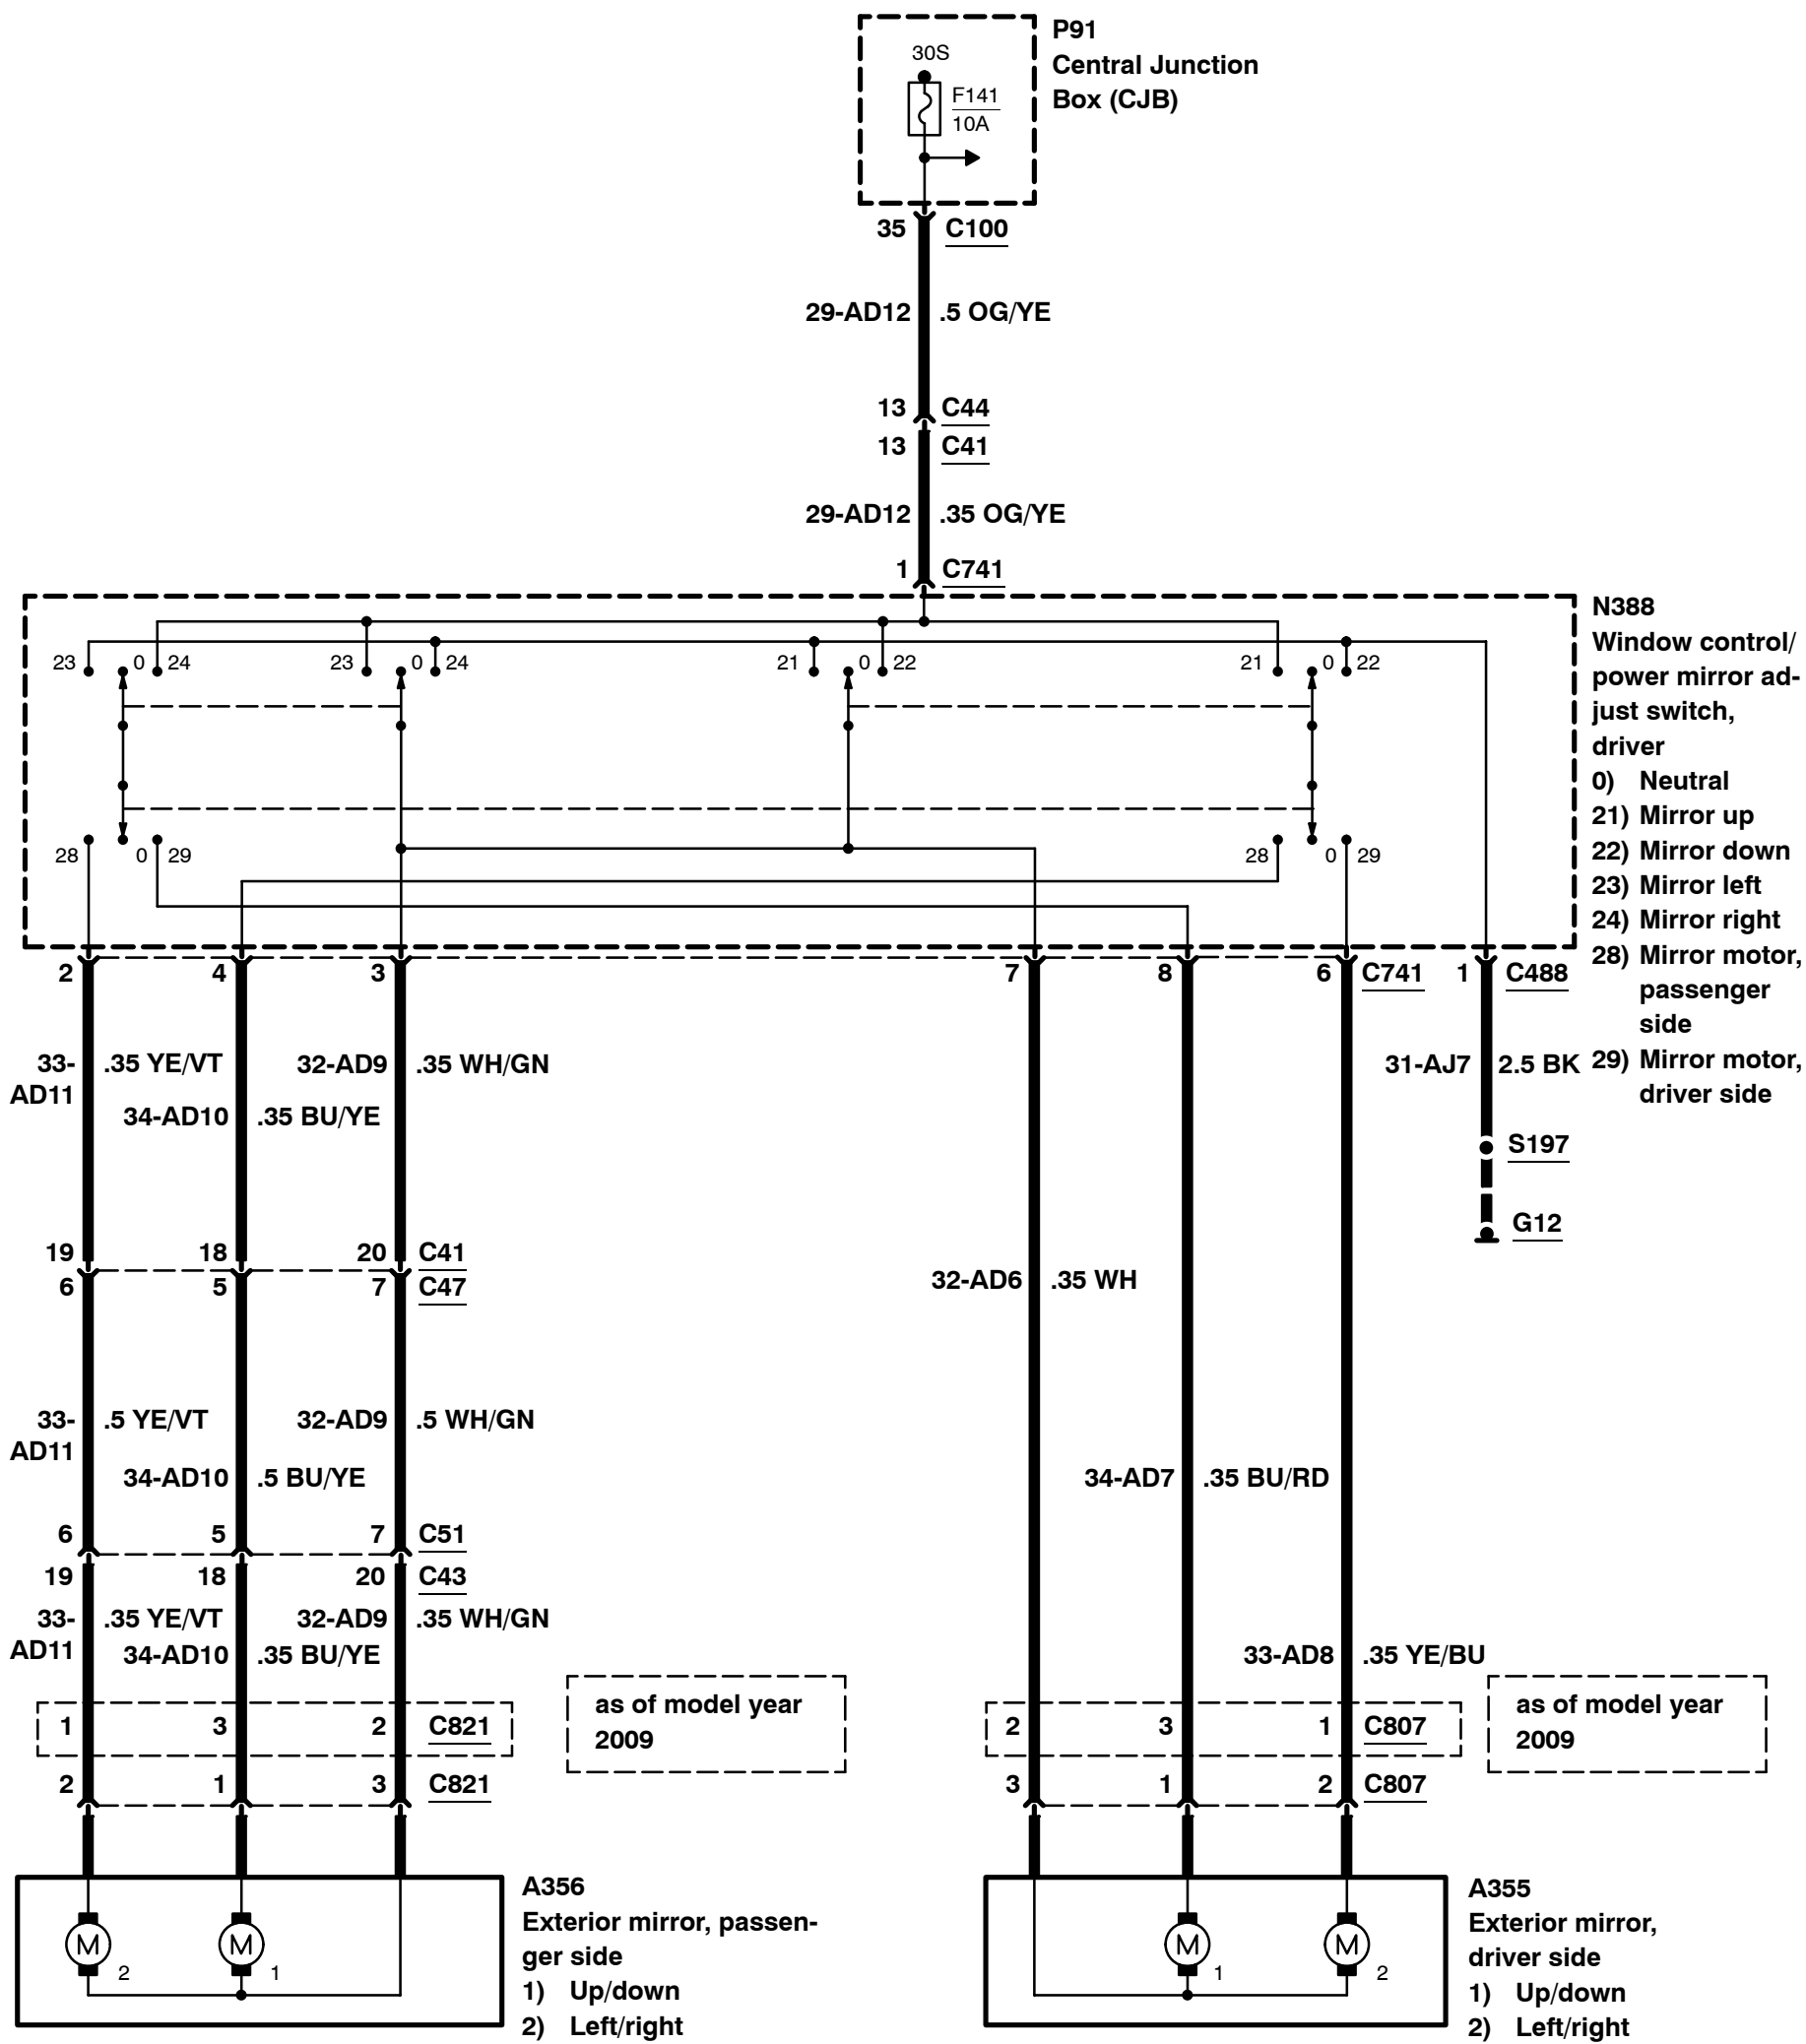



# Rear View Mirrors – RHD, with front power windows


02/2008  
501-09-00-2  
2008.25  
Focus

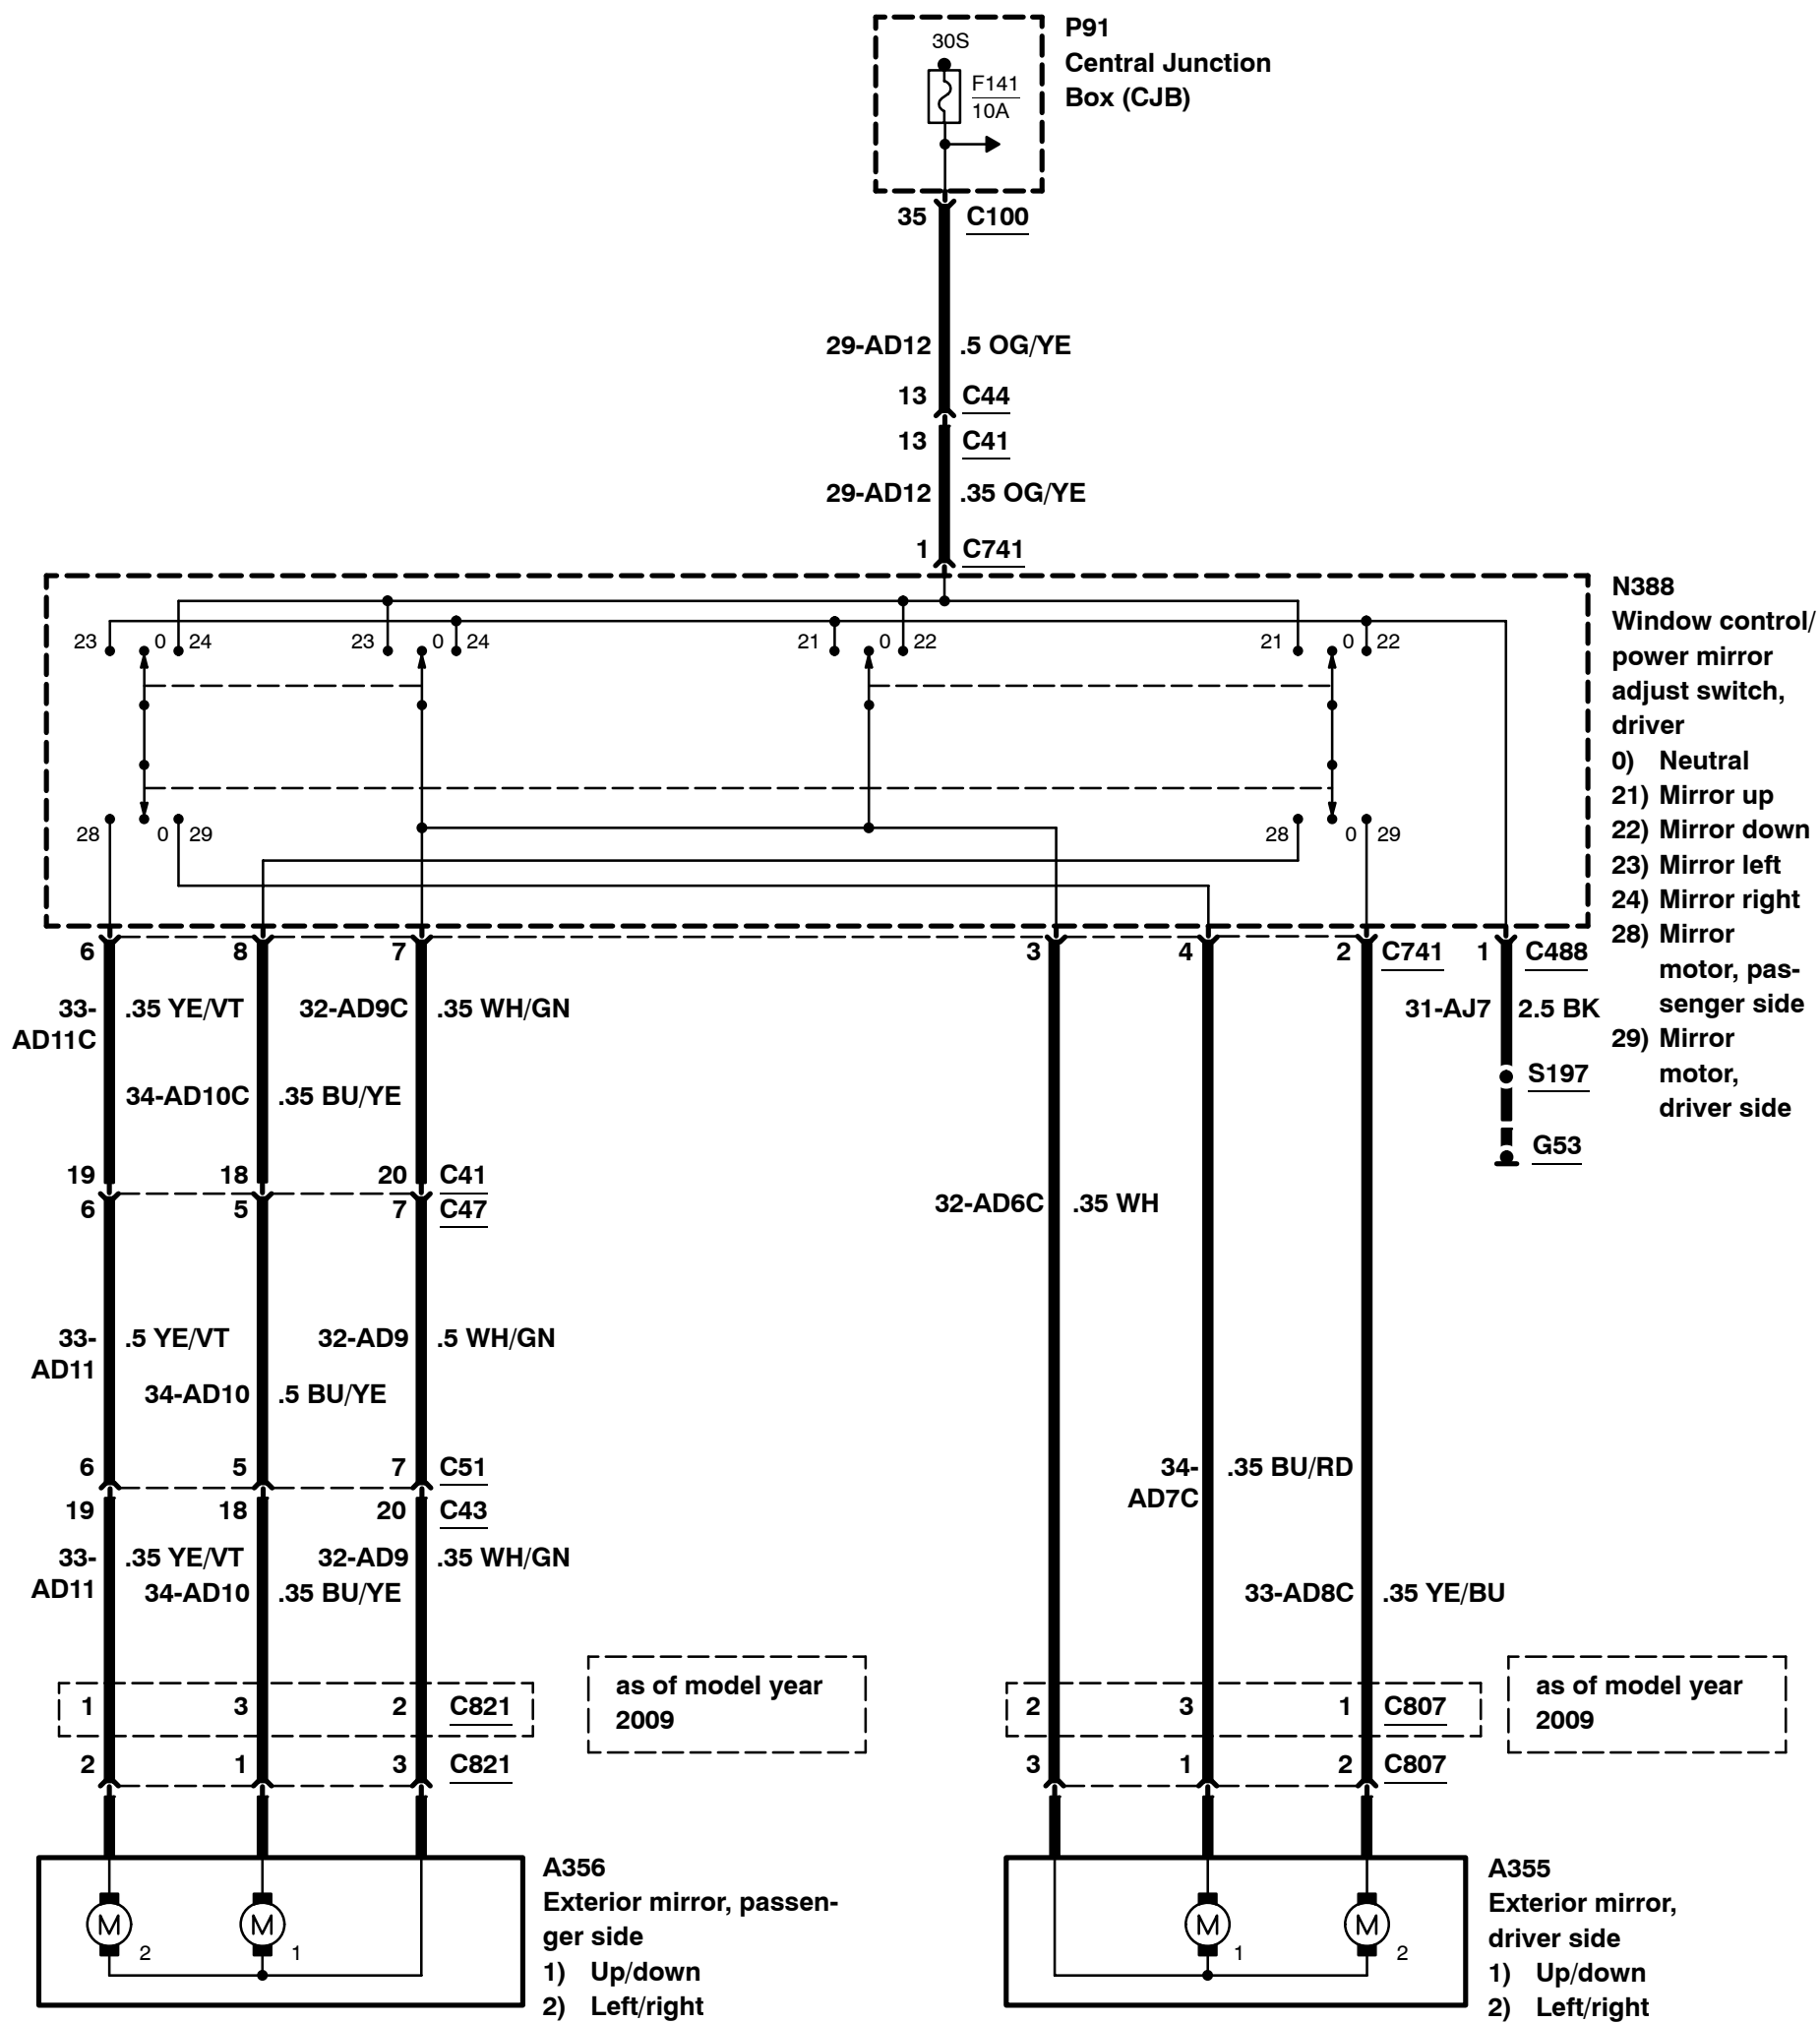




# Rear View Mirrors – with front and rear power windows, before model year 2009

02/2008  
501-09-00-3  
2008.25  
Focus

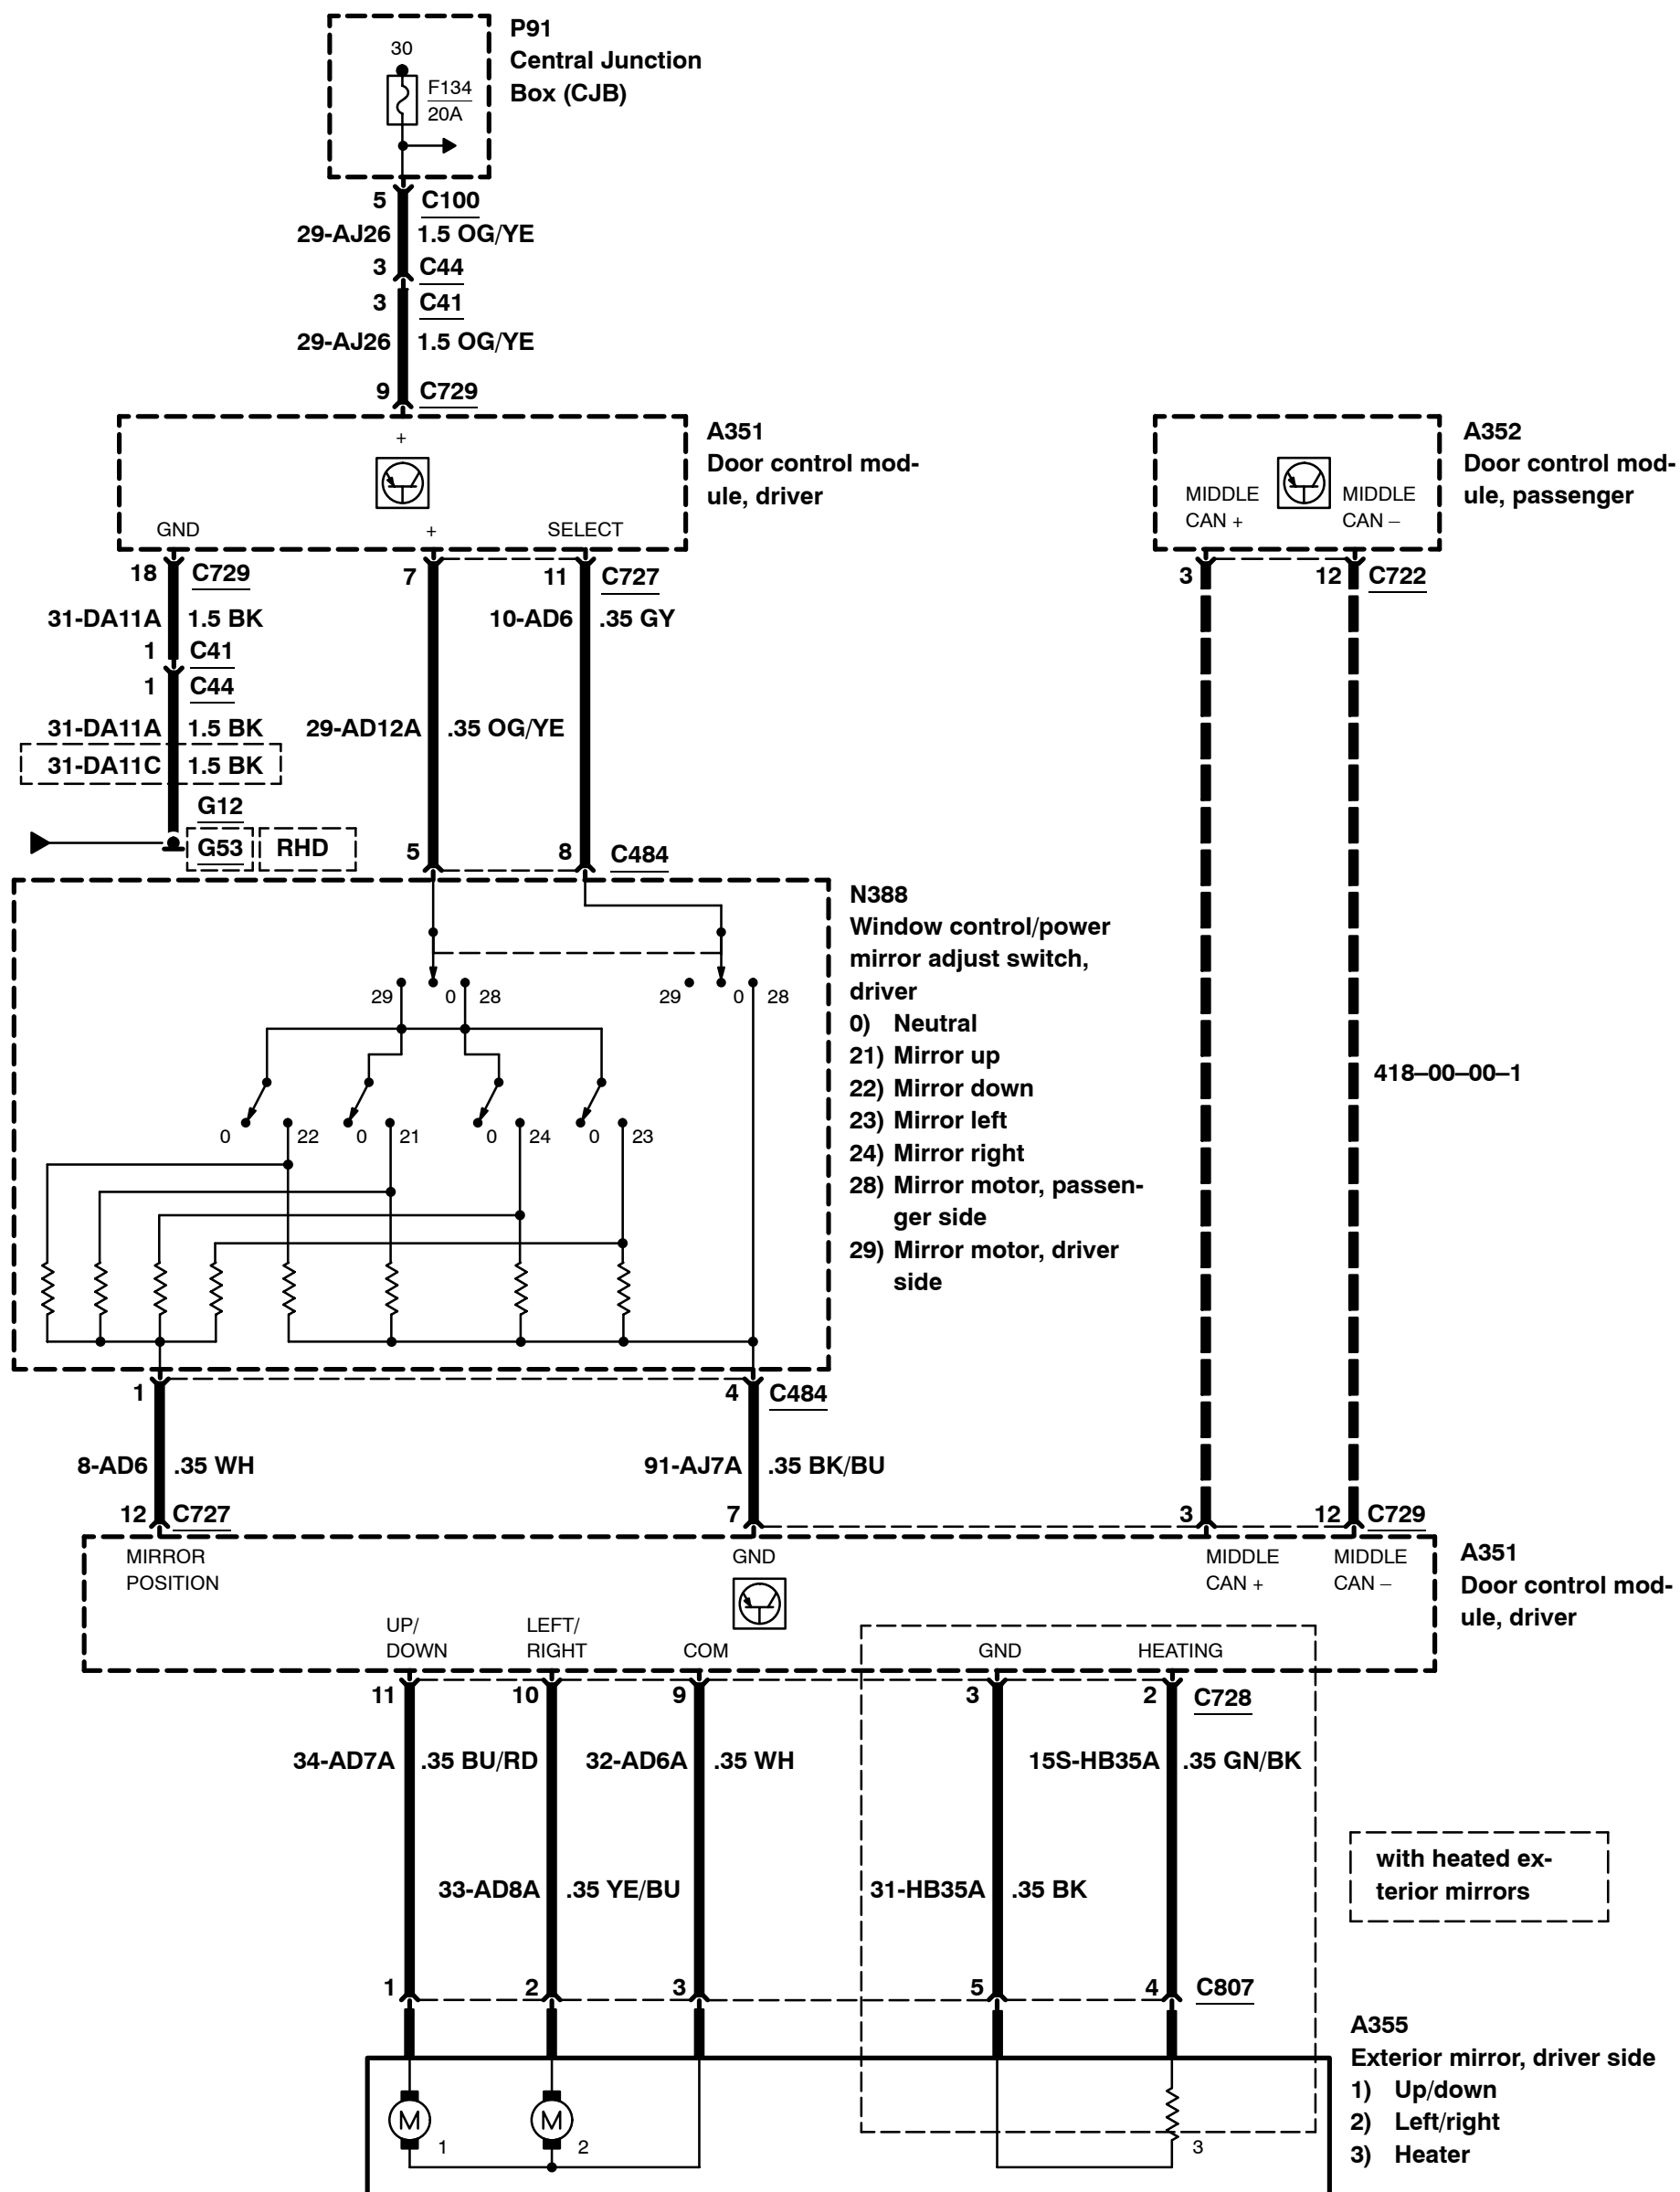


# Rear View Mirrors – with front and rear power windows, before model year 2009

02/2008  
501-09-00-4  
2008.25  
Focus

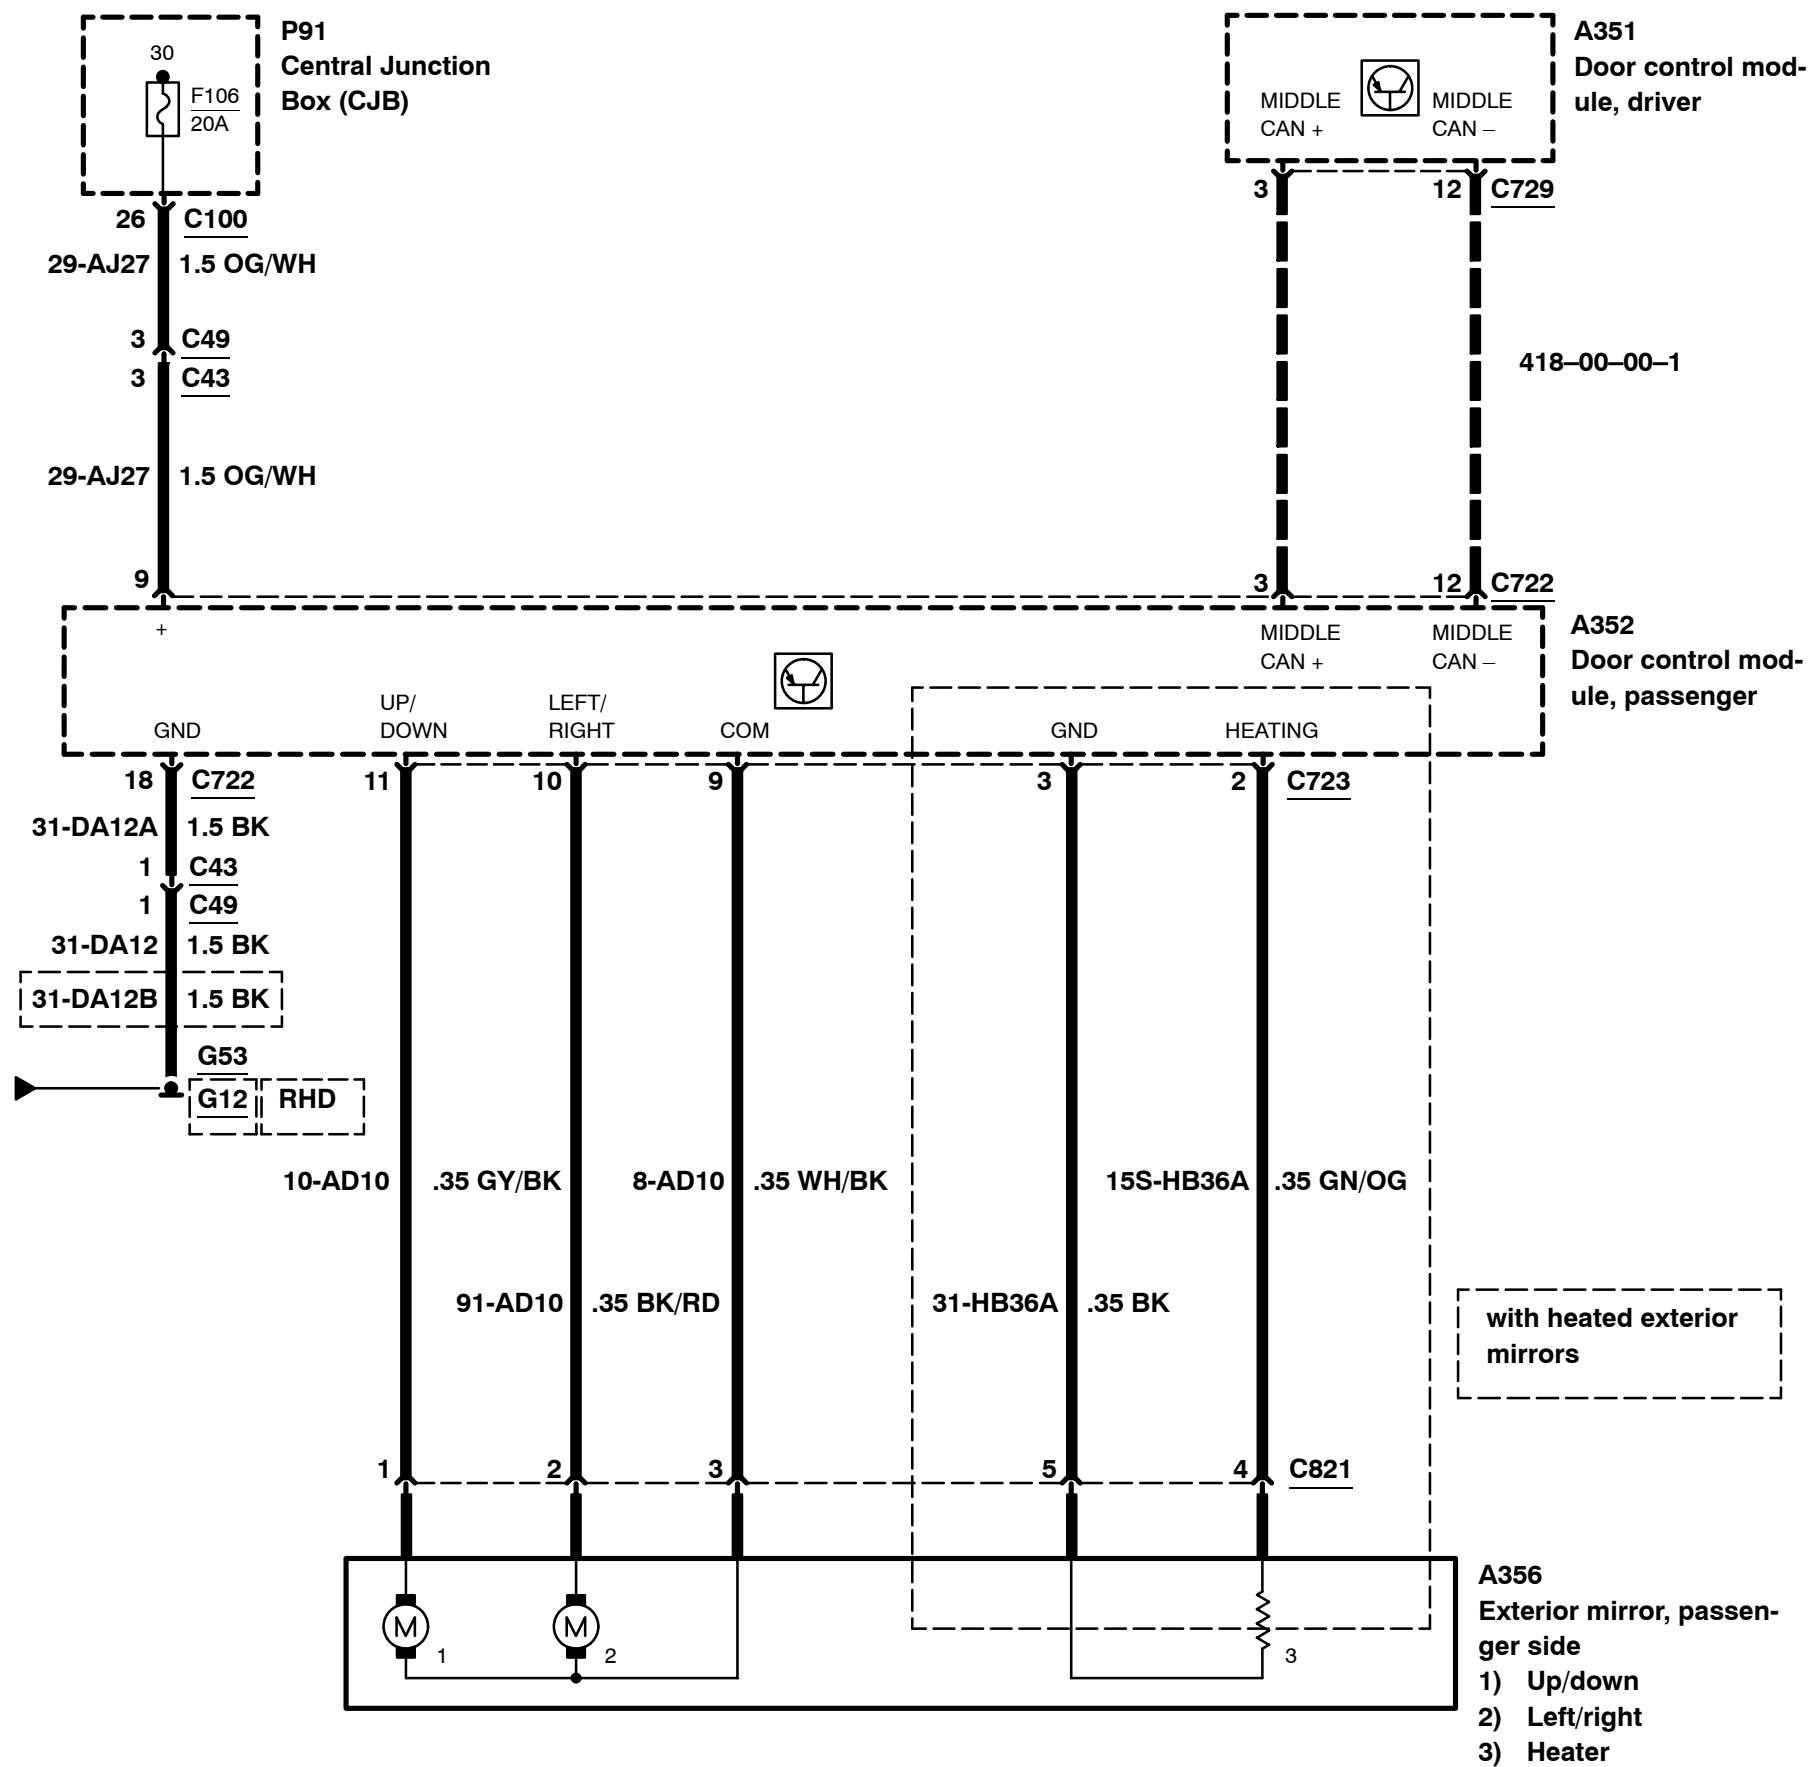


# Rear View Mirrors – with power folding mirrors, before model year 2009

02/2008  
501-09-00-5  
2008.25  
Focus

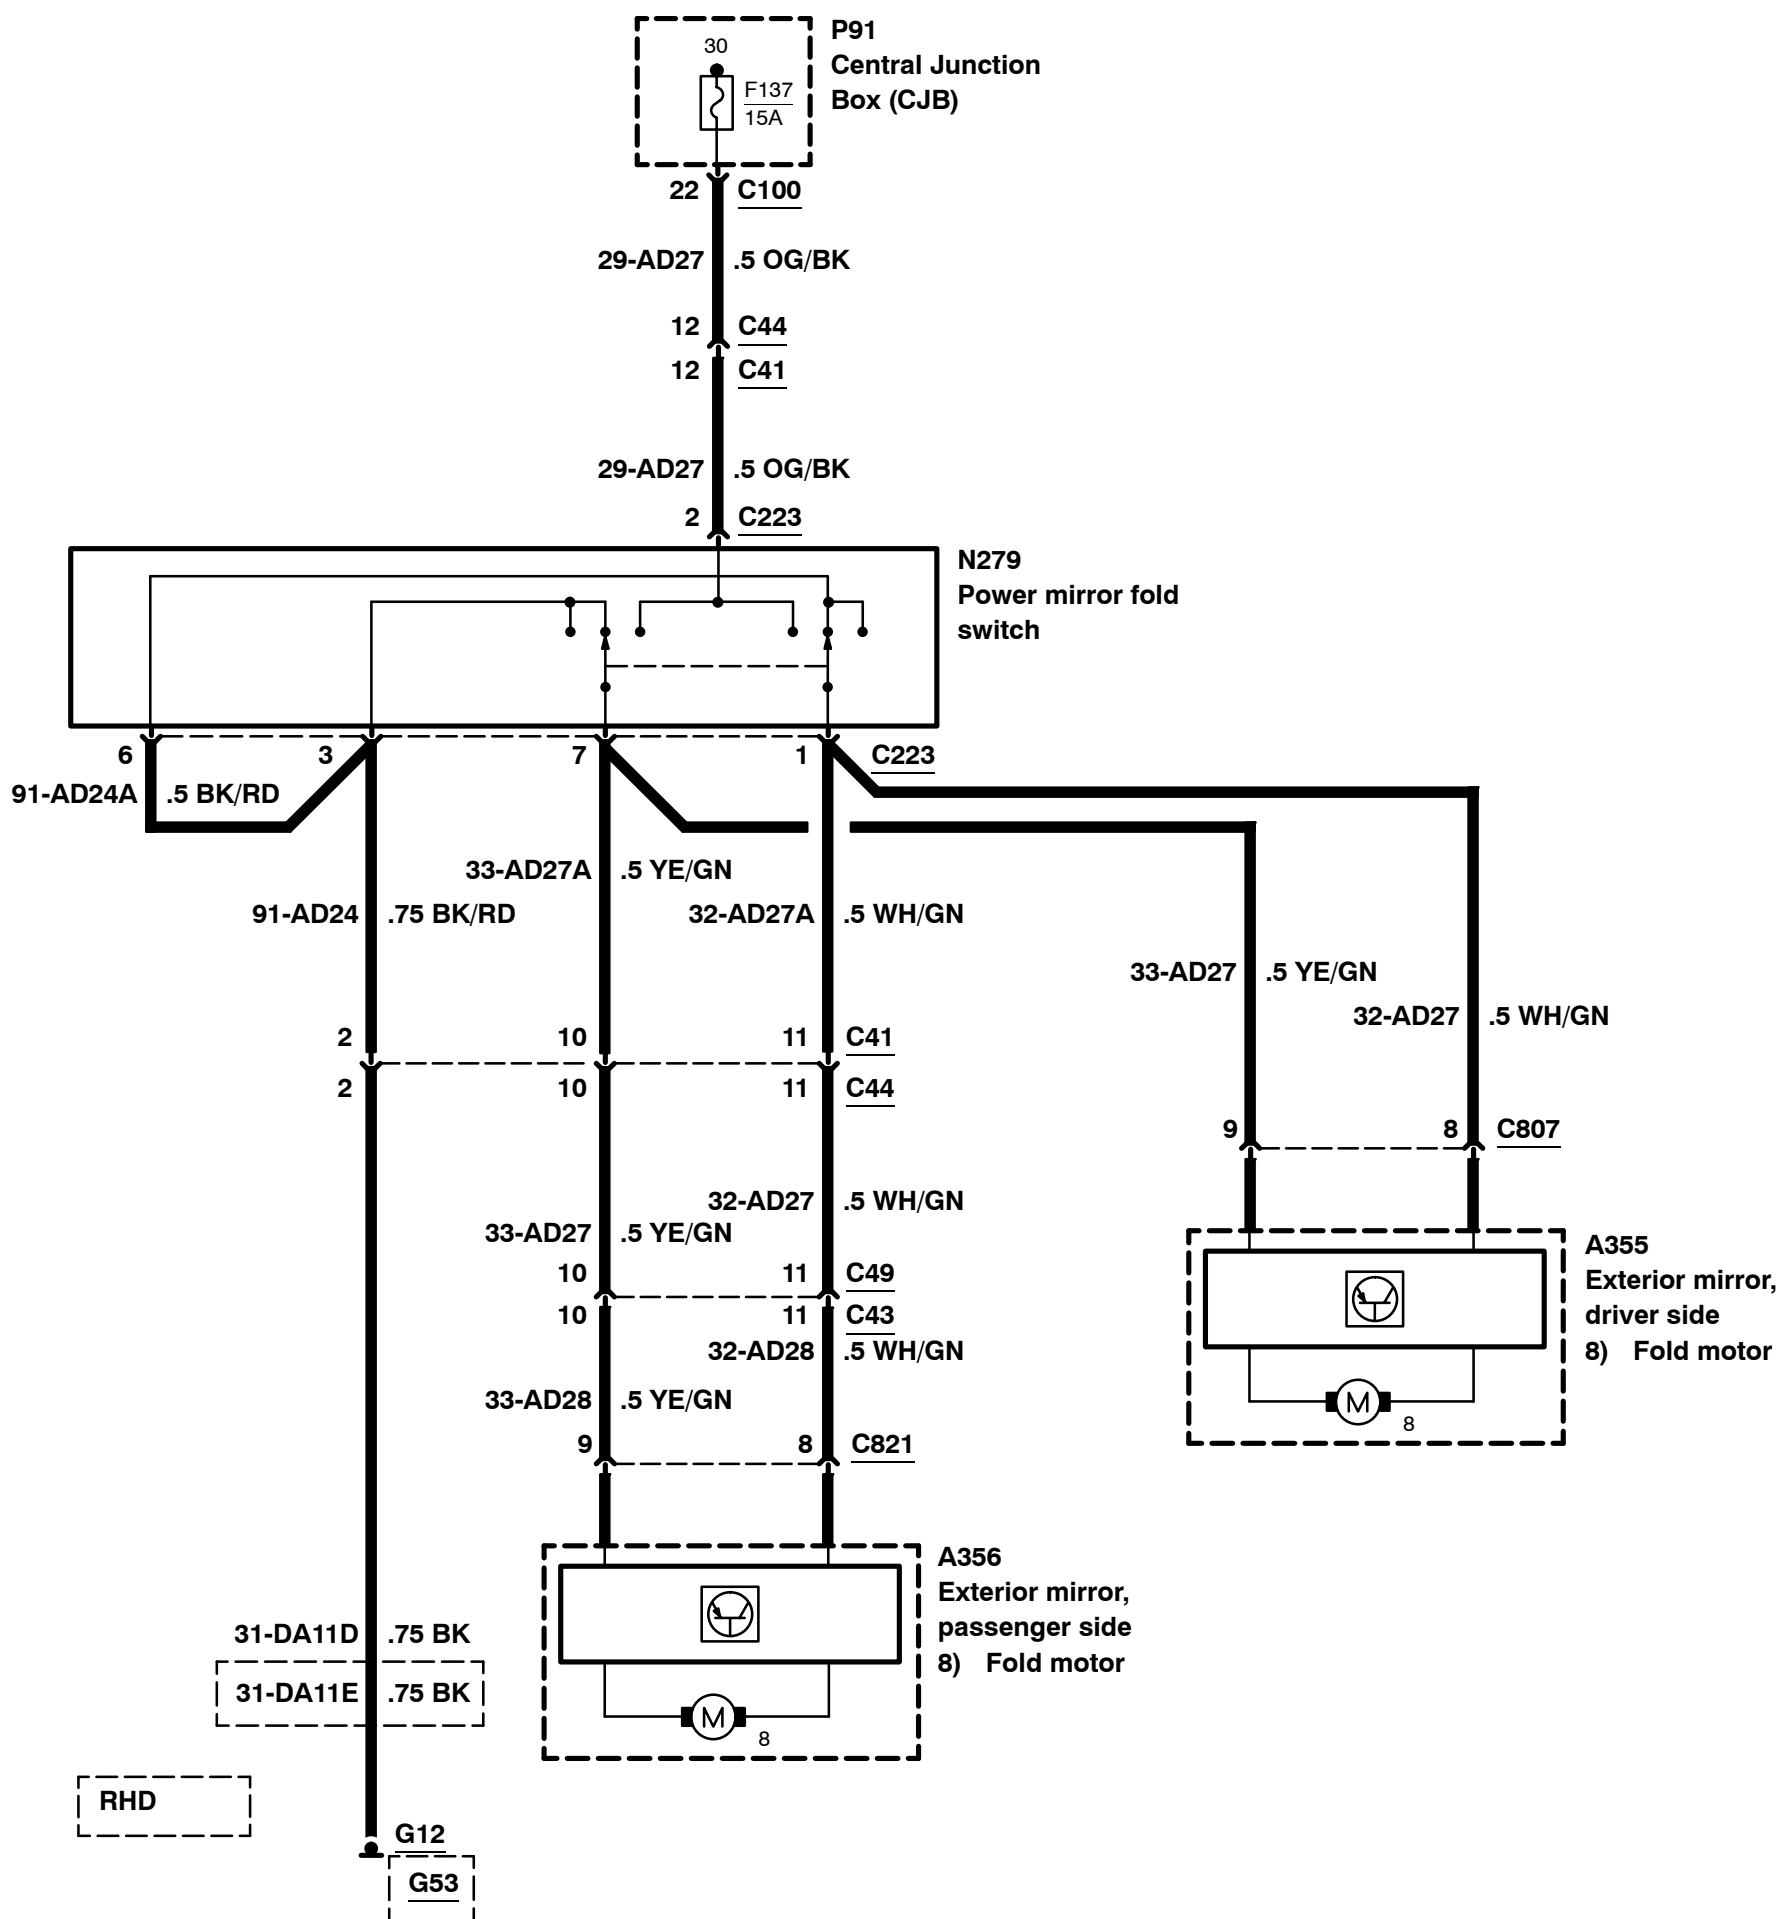


# Rear View Mirrors – with front and rear power windows, as of model year 2009, China

02/2008  
501-09-00-6  
2008.25  
Focus

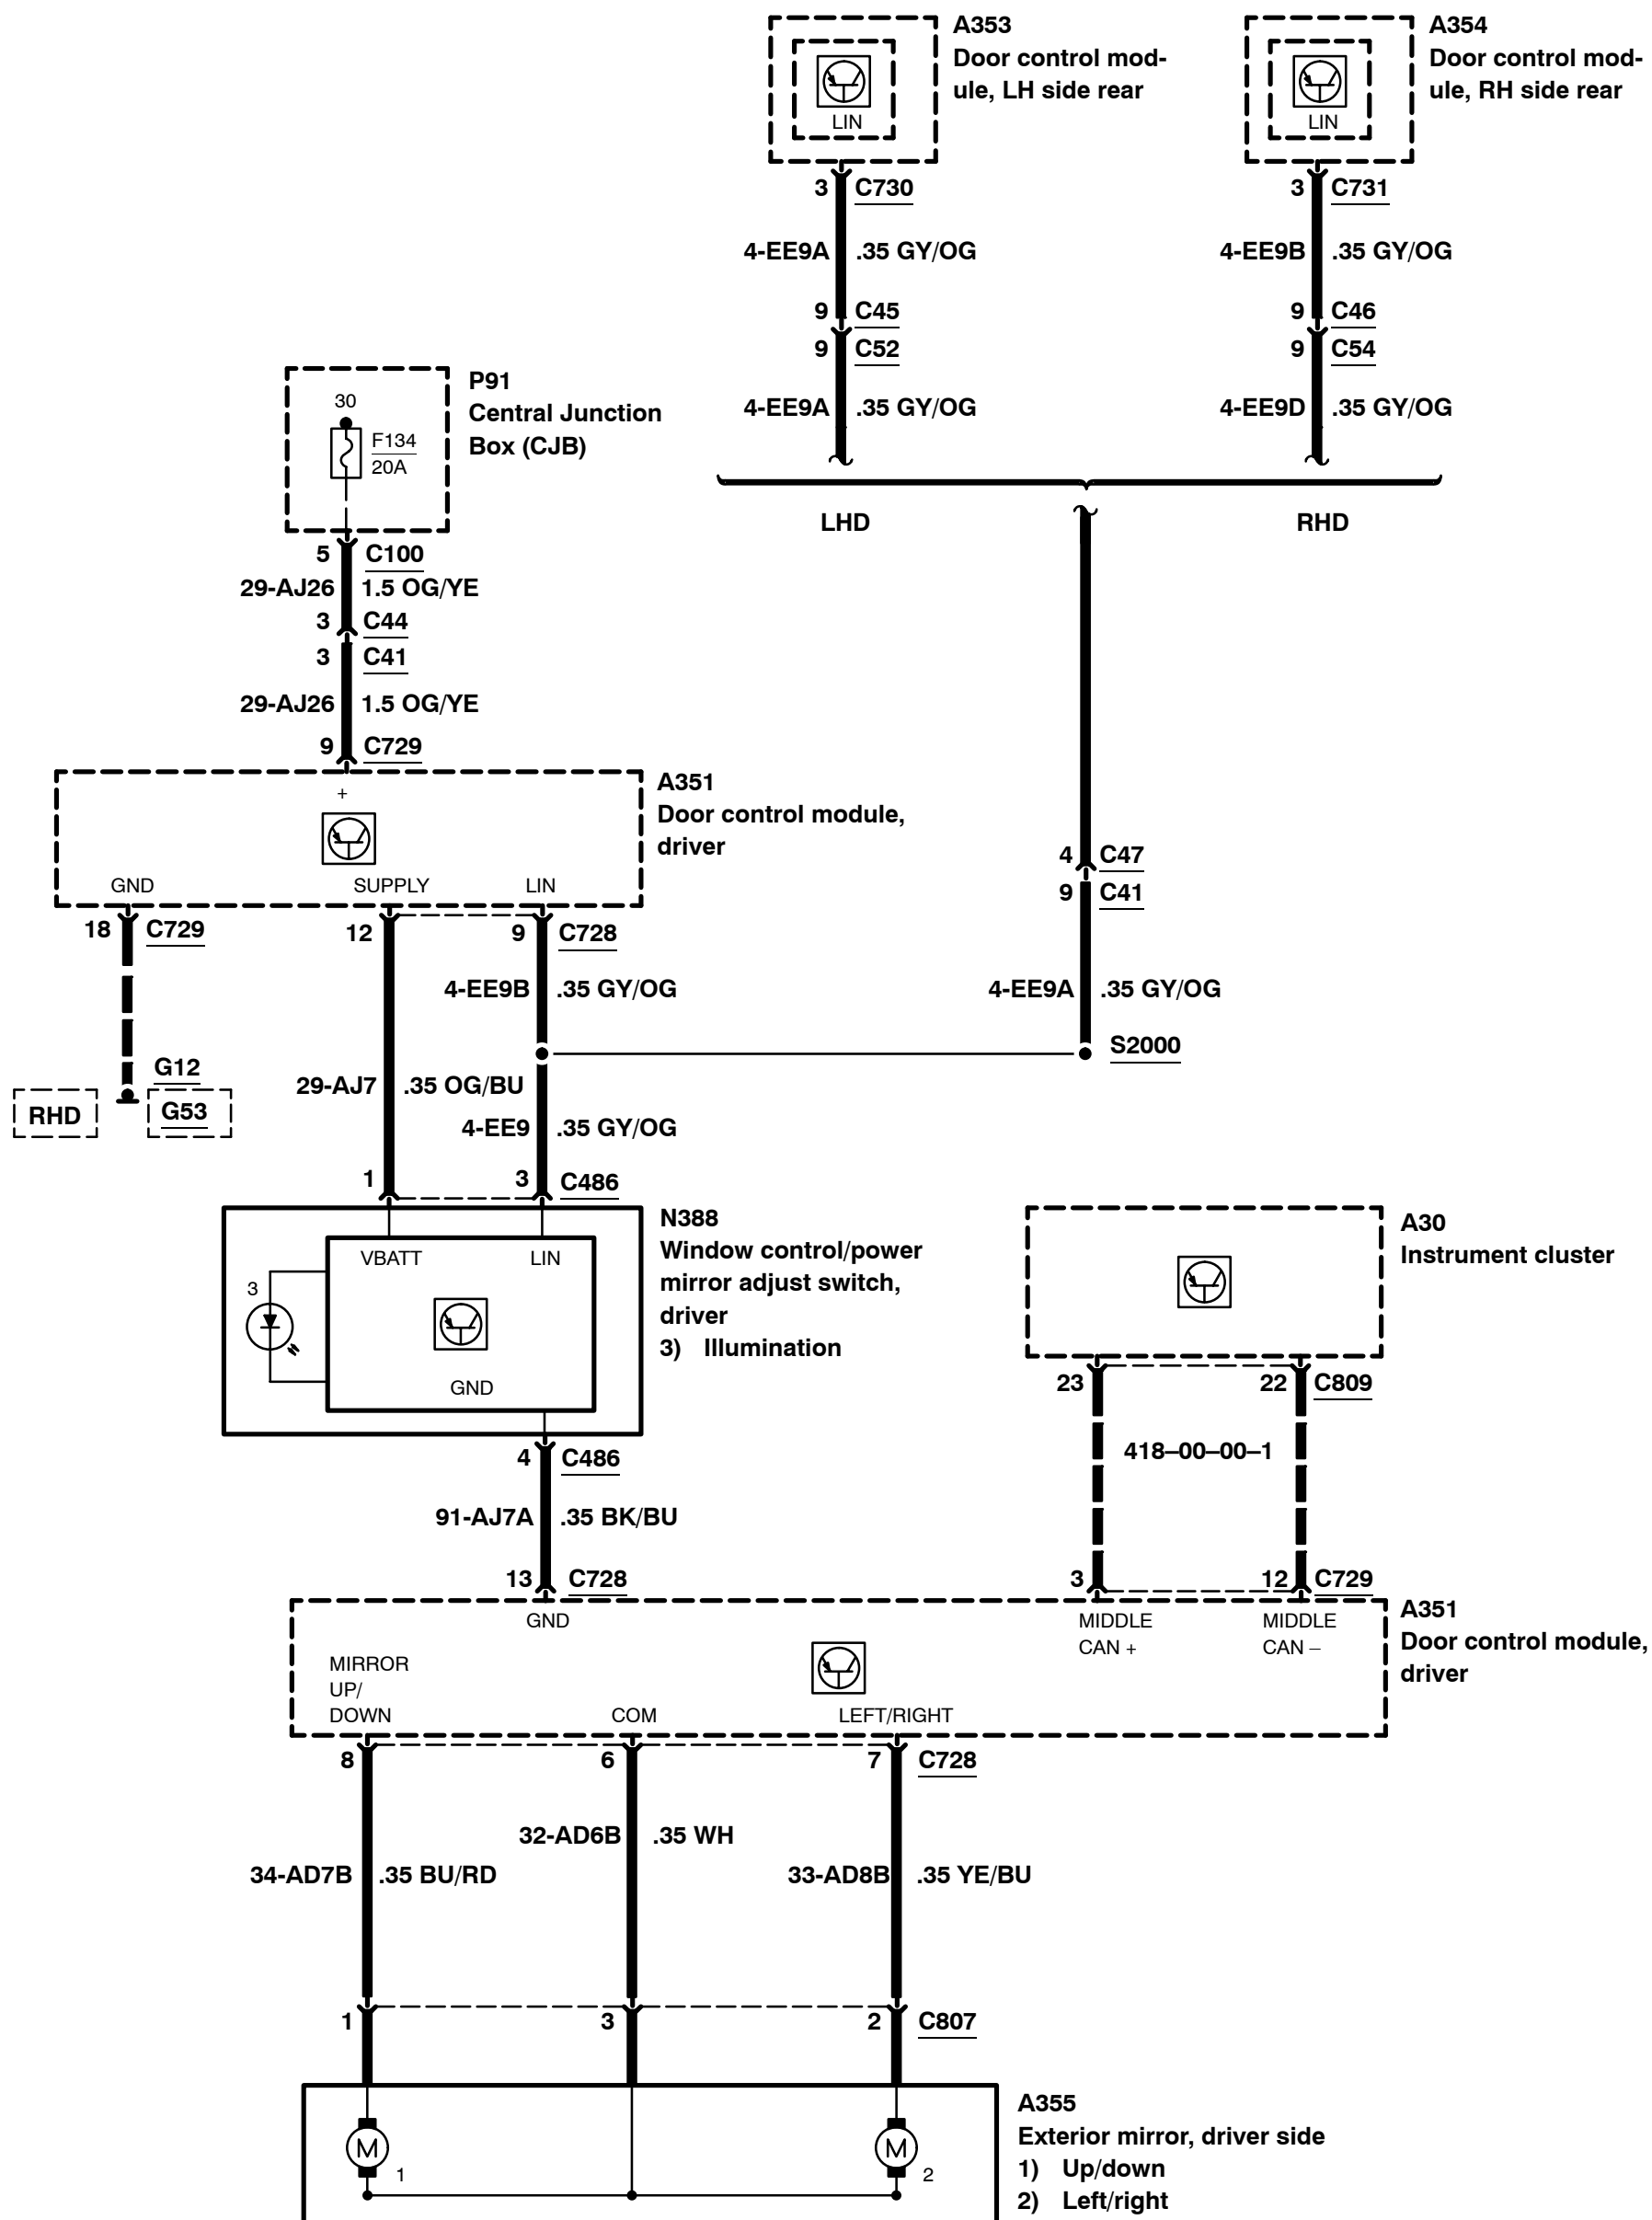


Rear View Mirrors – with front and rear power windows, as of model year 2009,  
China

02/2008  
501-09-00-7  
2008.25  
Focus

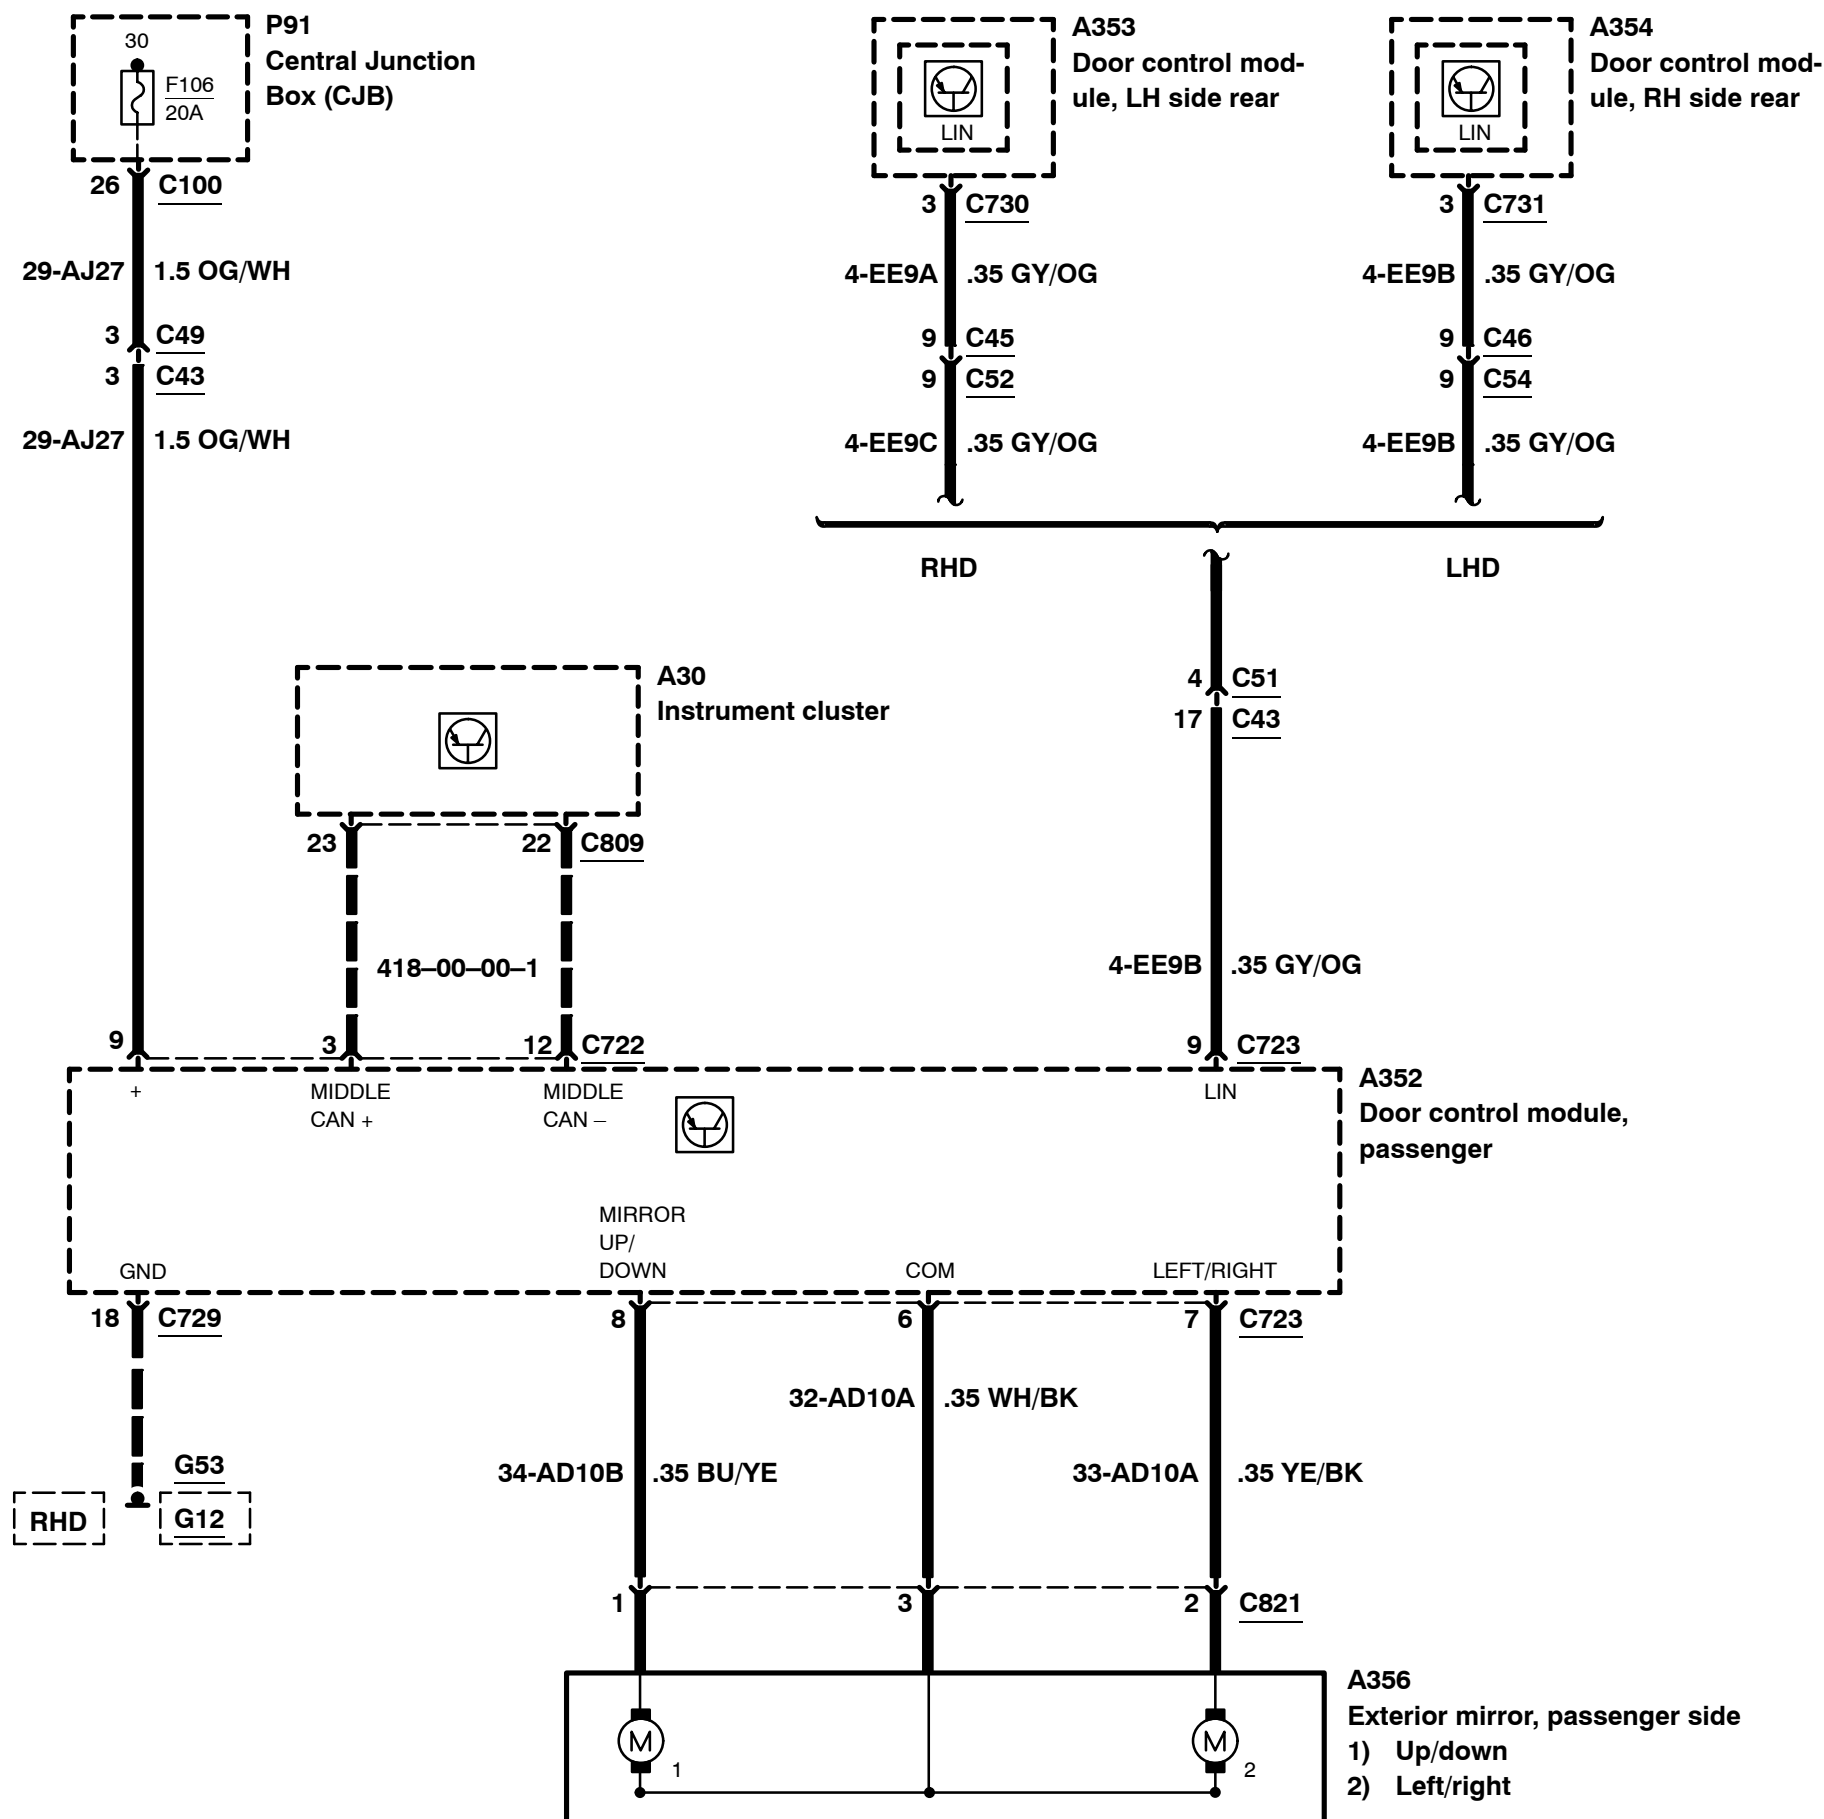

# Rear View Mirrors – with front and rear power windows, as of model year 2009, except China


02/2008  
501-09-00-8  
2008.25  
Focus

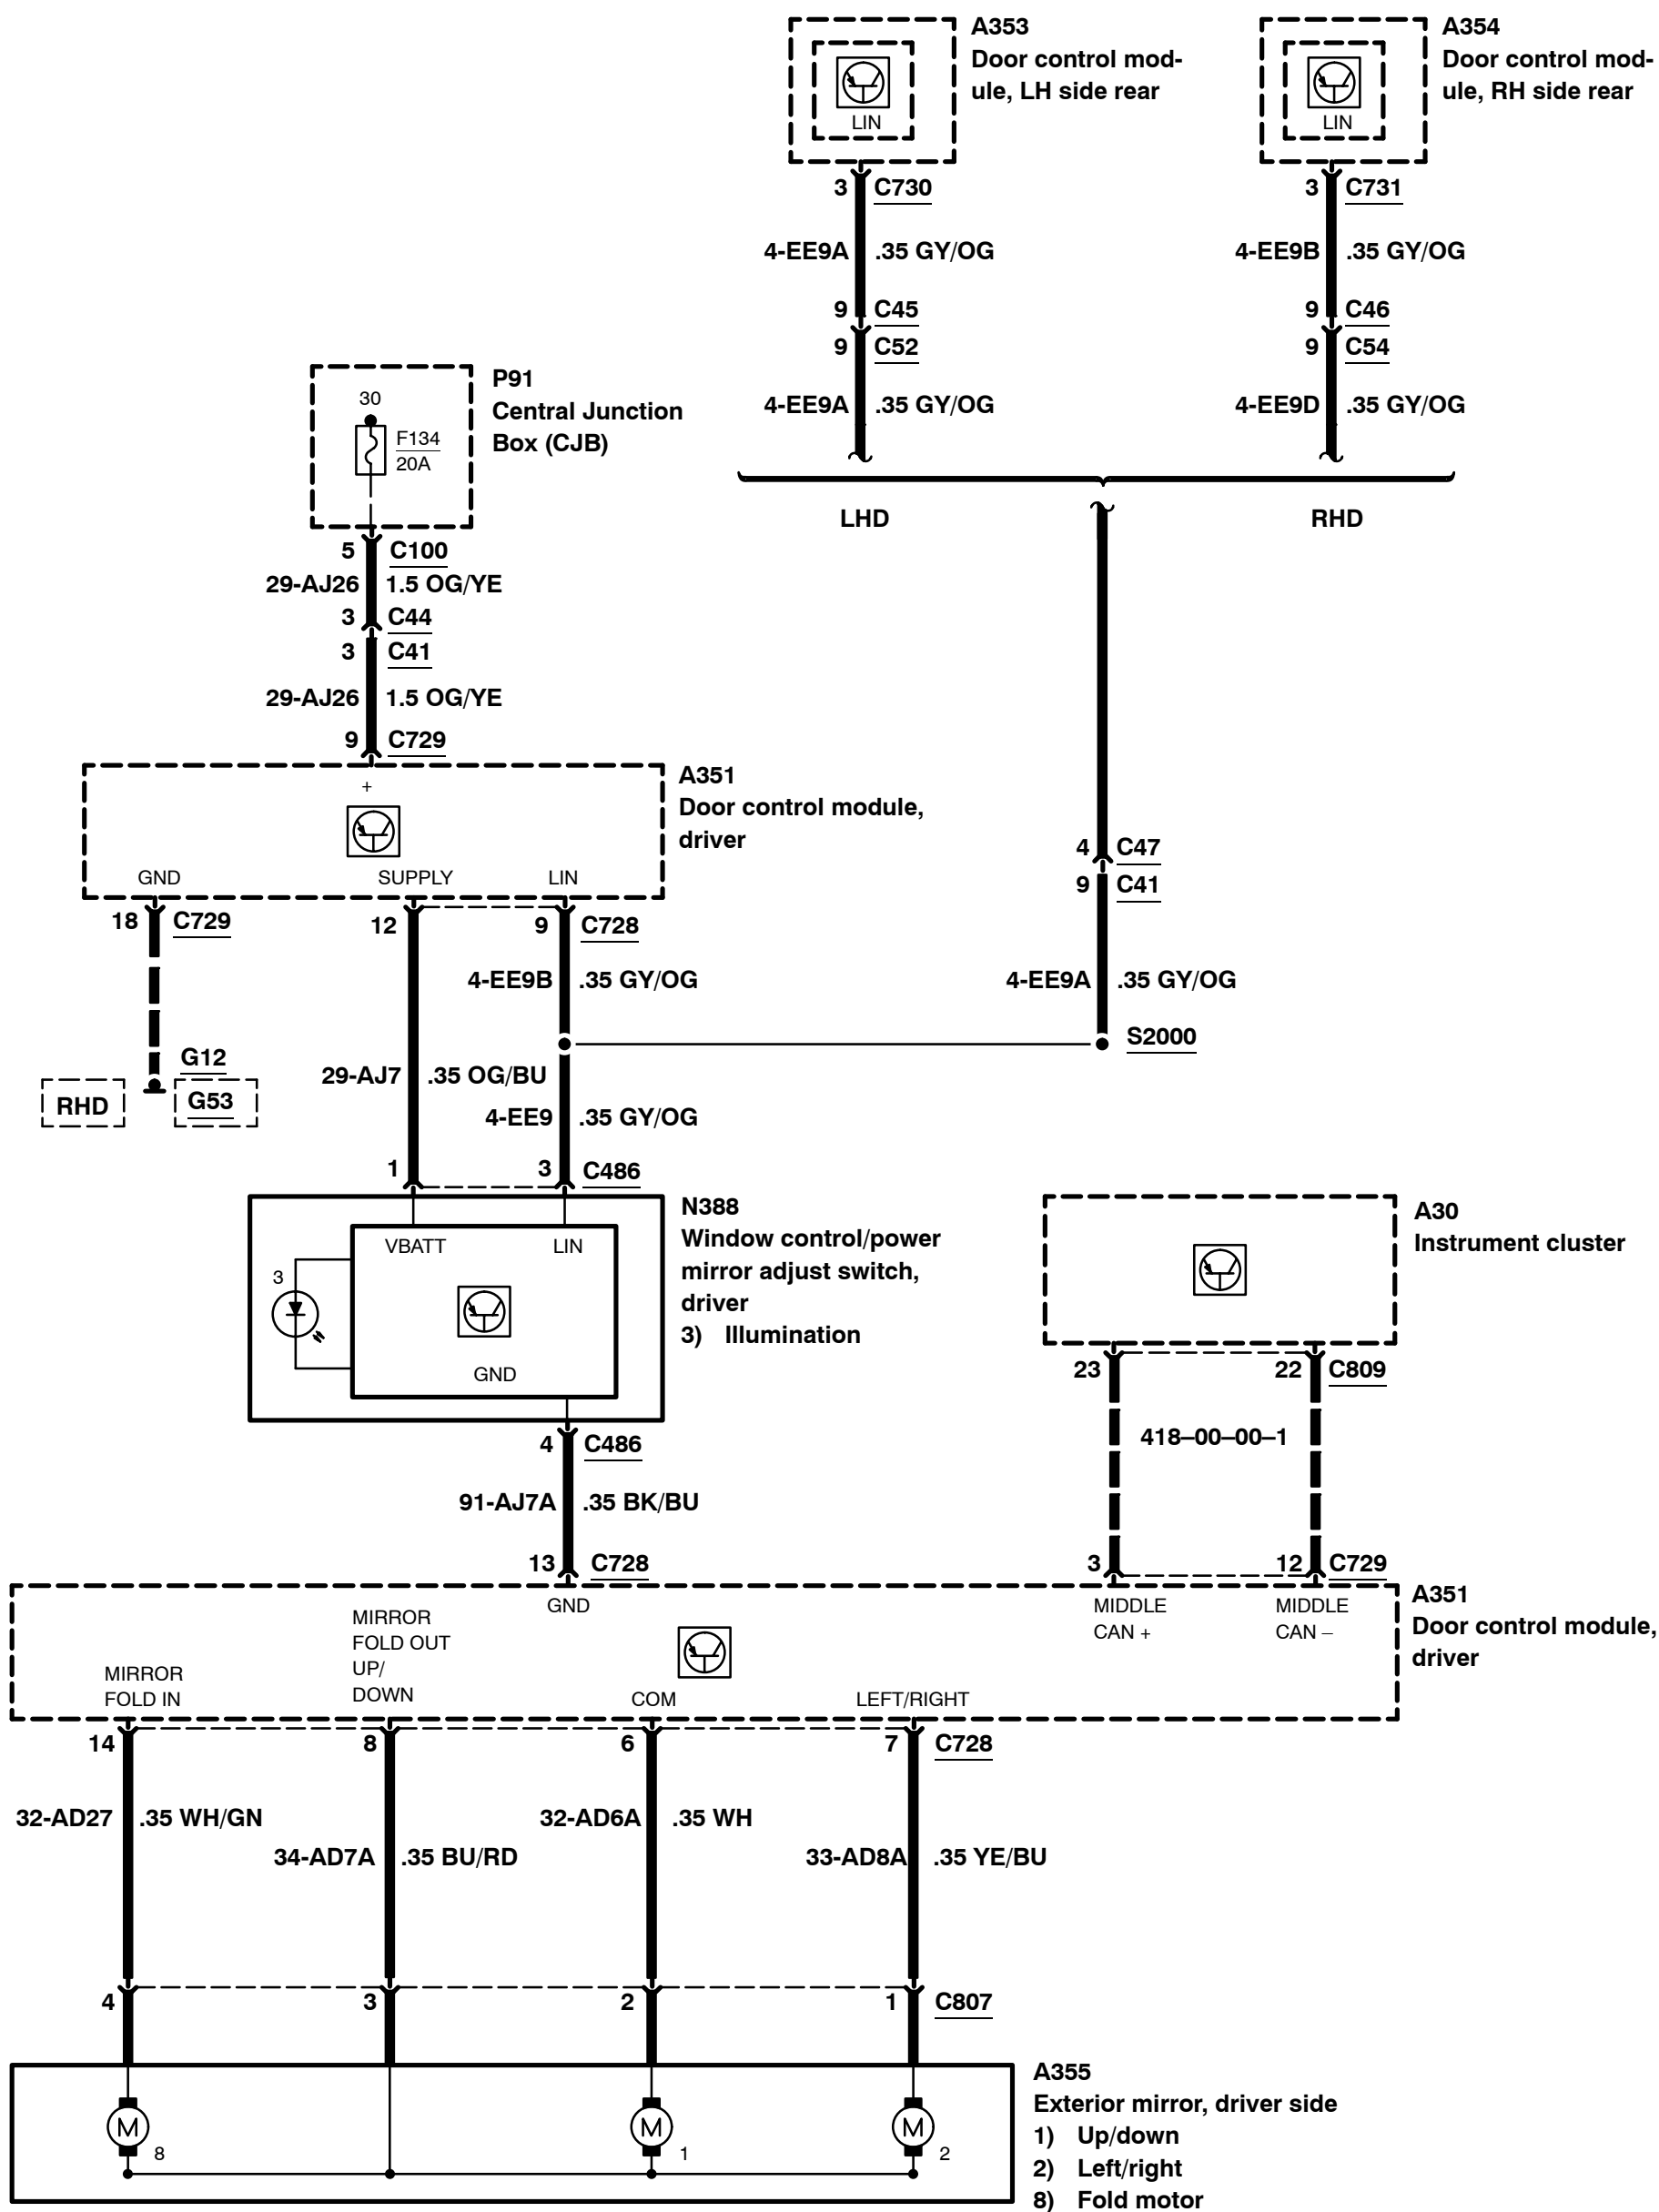




Rear View Mirrors – with front and rear power windows, as of model year 2009, except China

02/2008  
501-09-00-9  
2008.25  
Focus

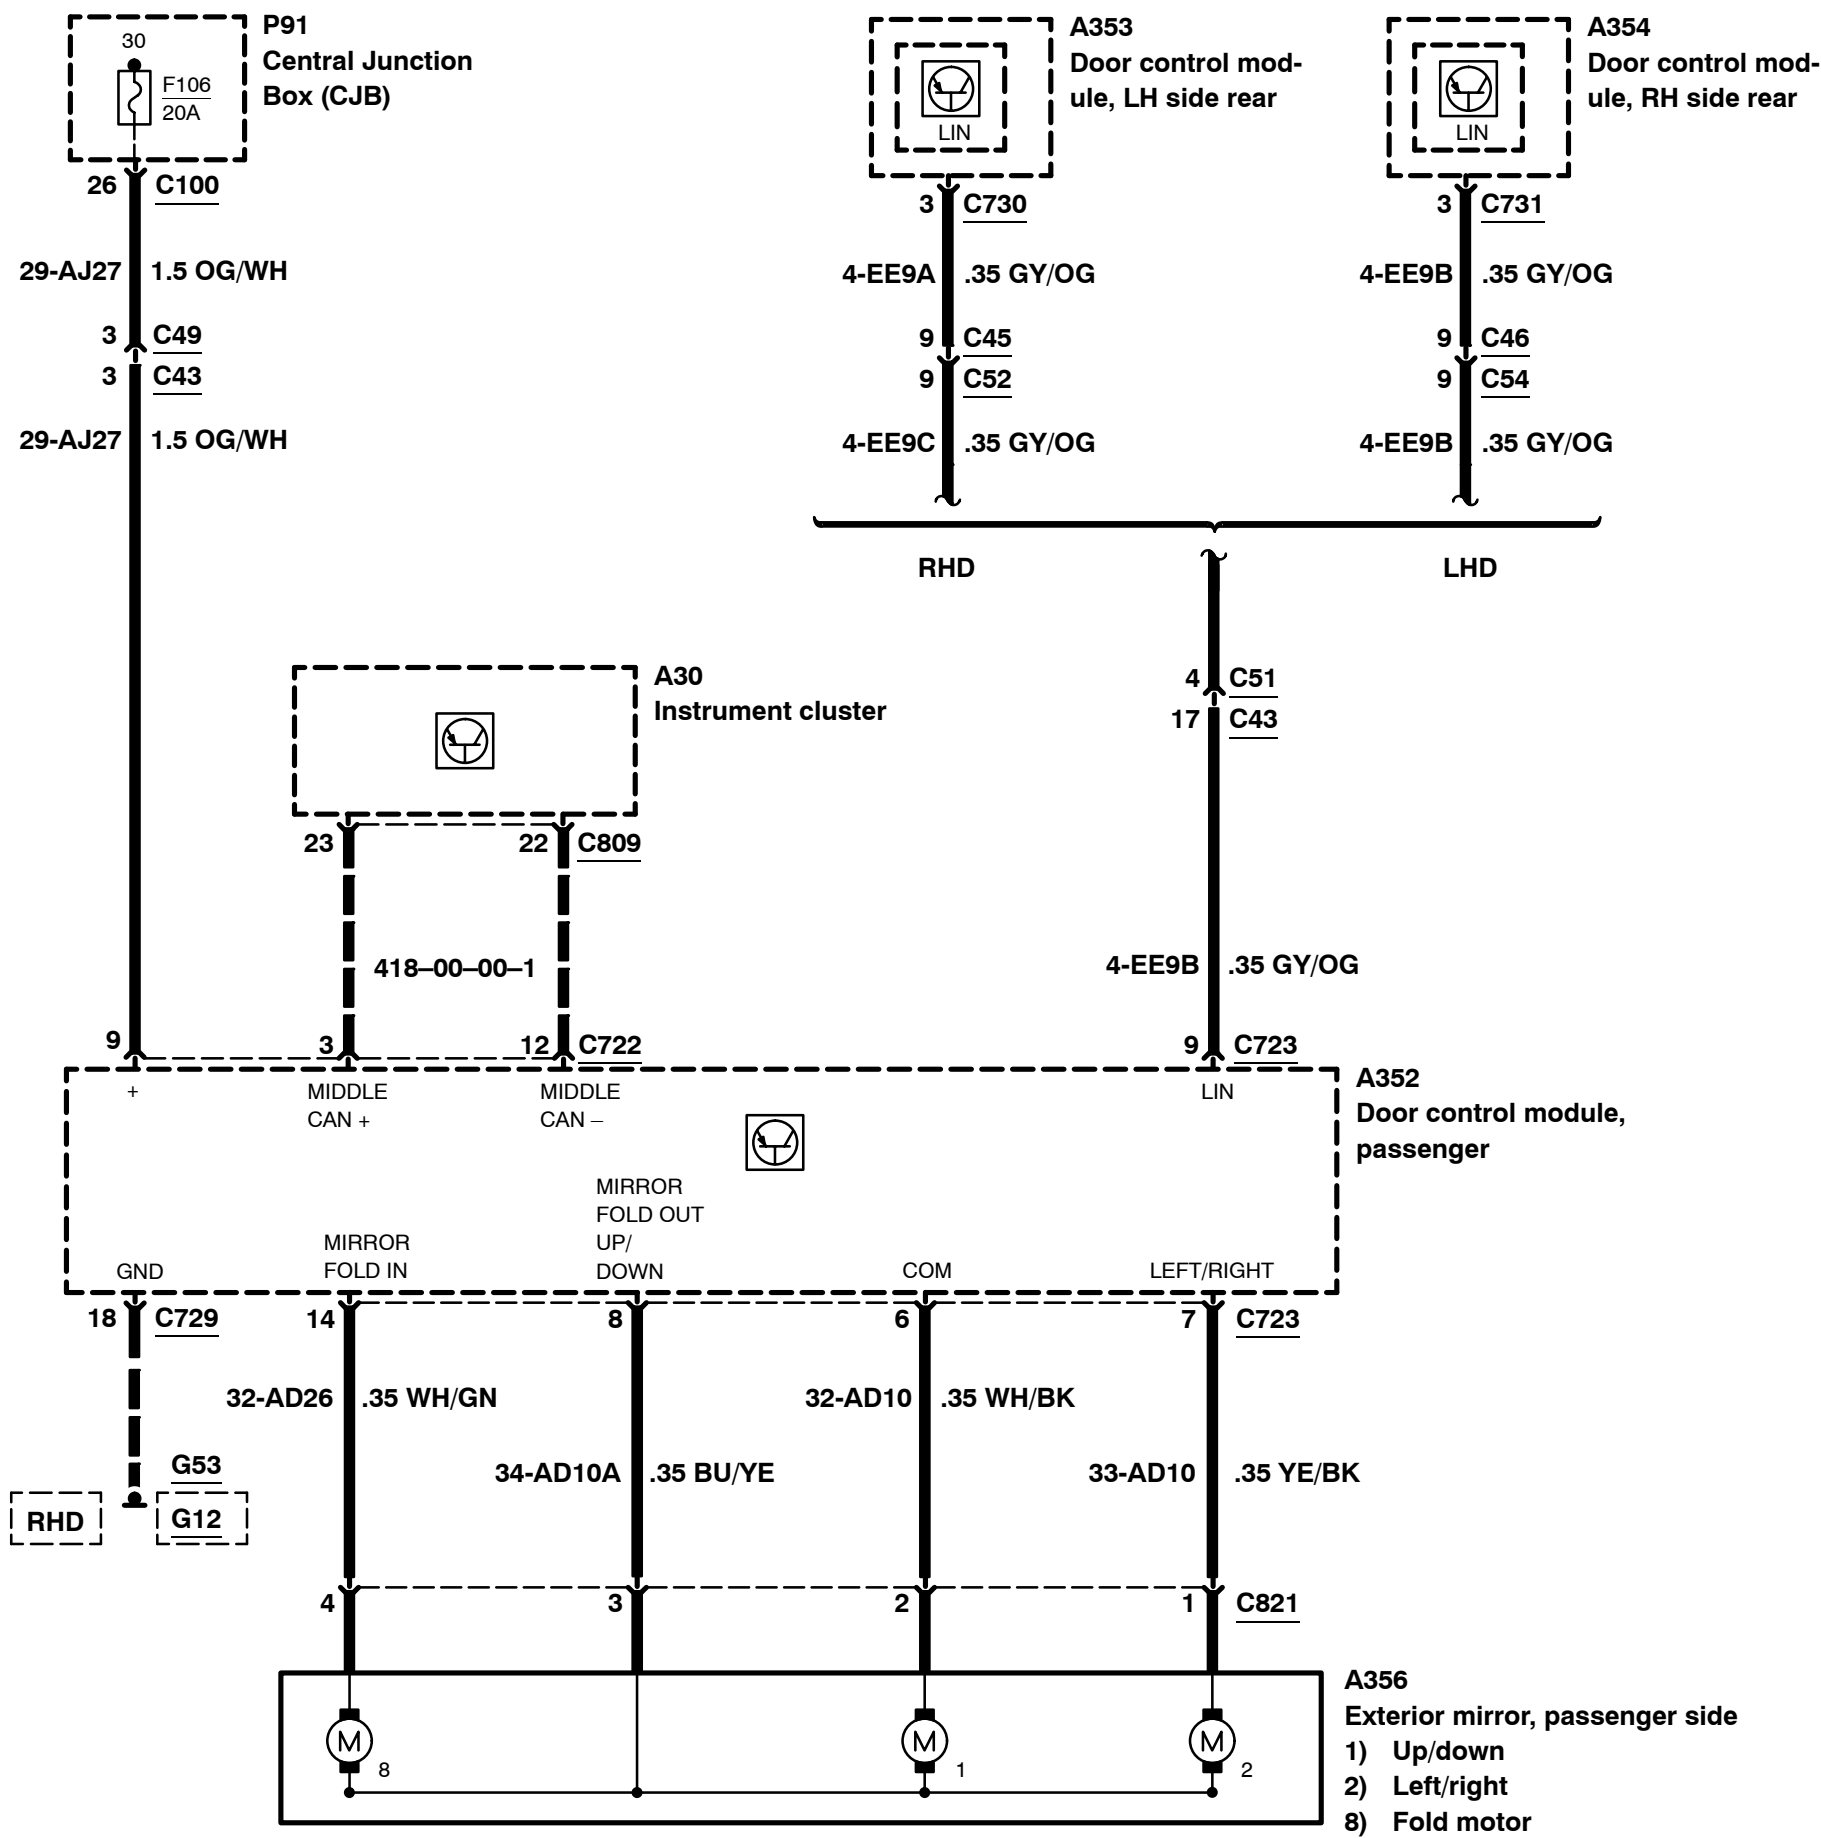


# Rear View Mirrors – with power folding mirrors, as of model year 2009

02/2008  
501-09-00-10  
2008.25  
Focus

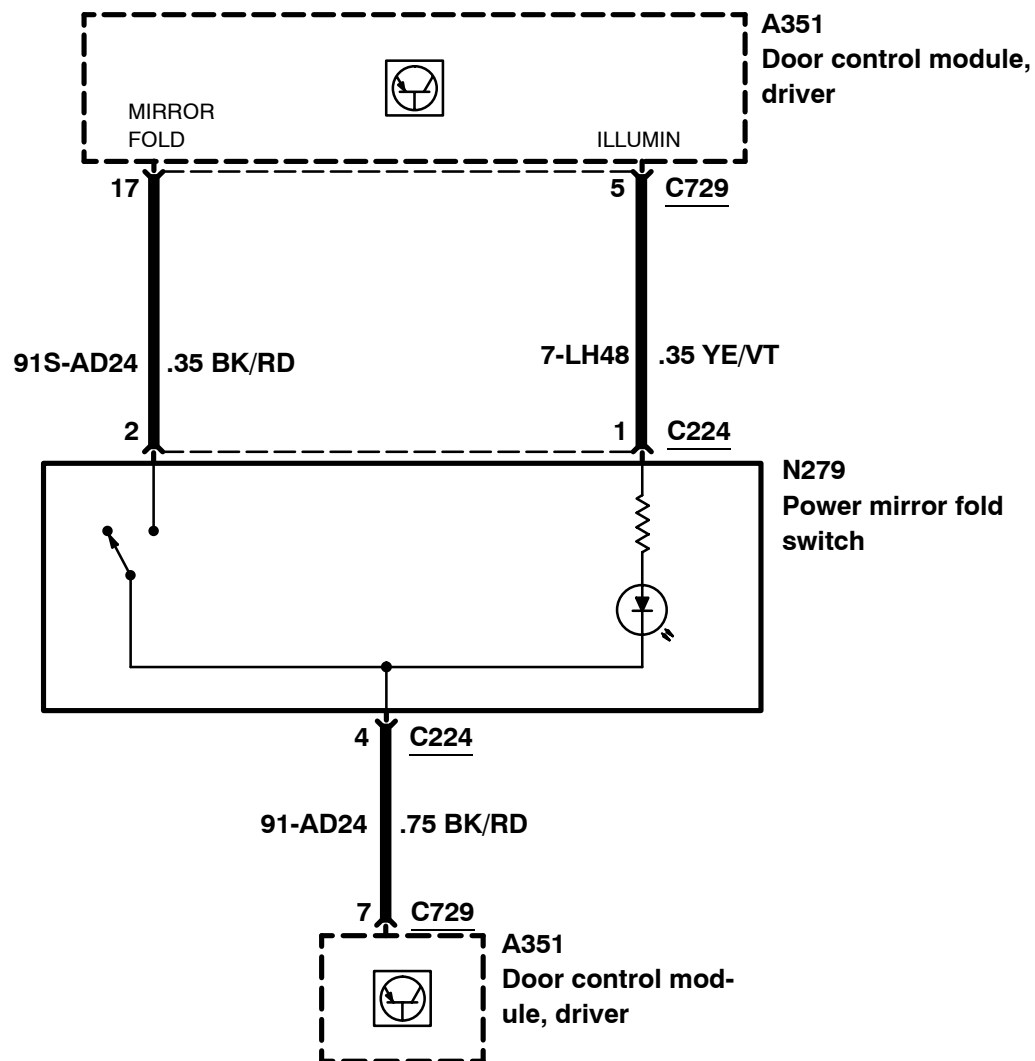




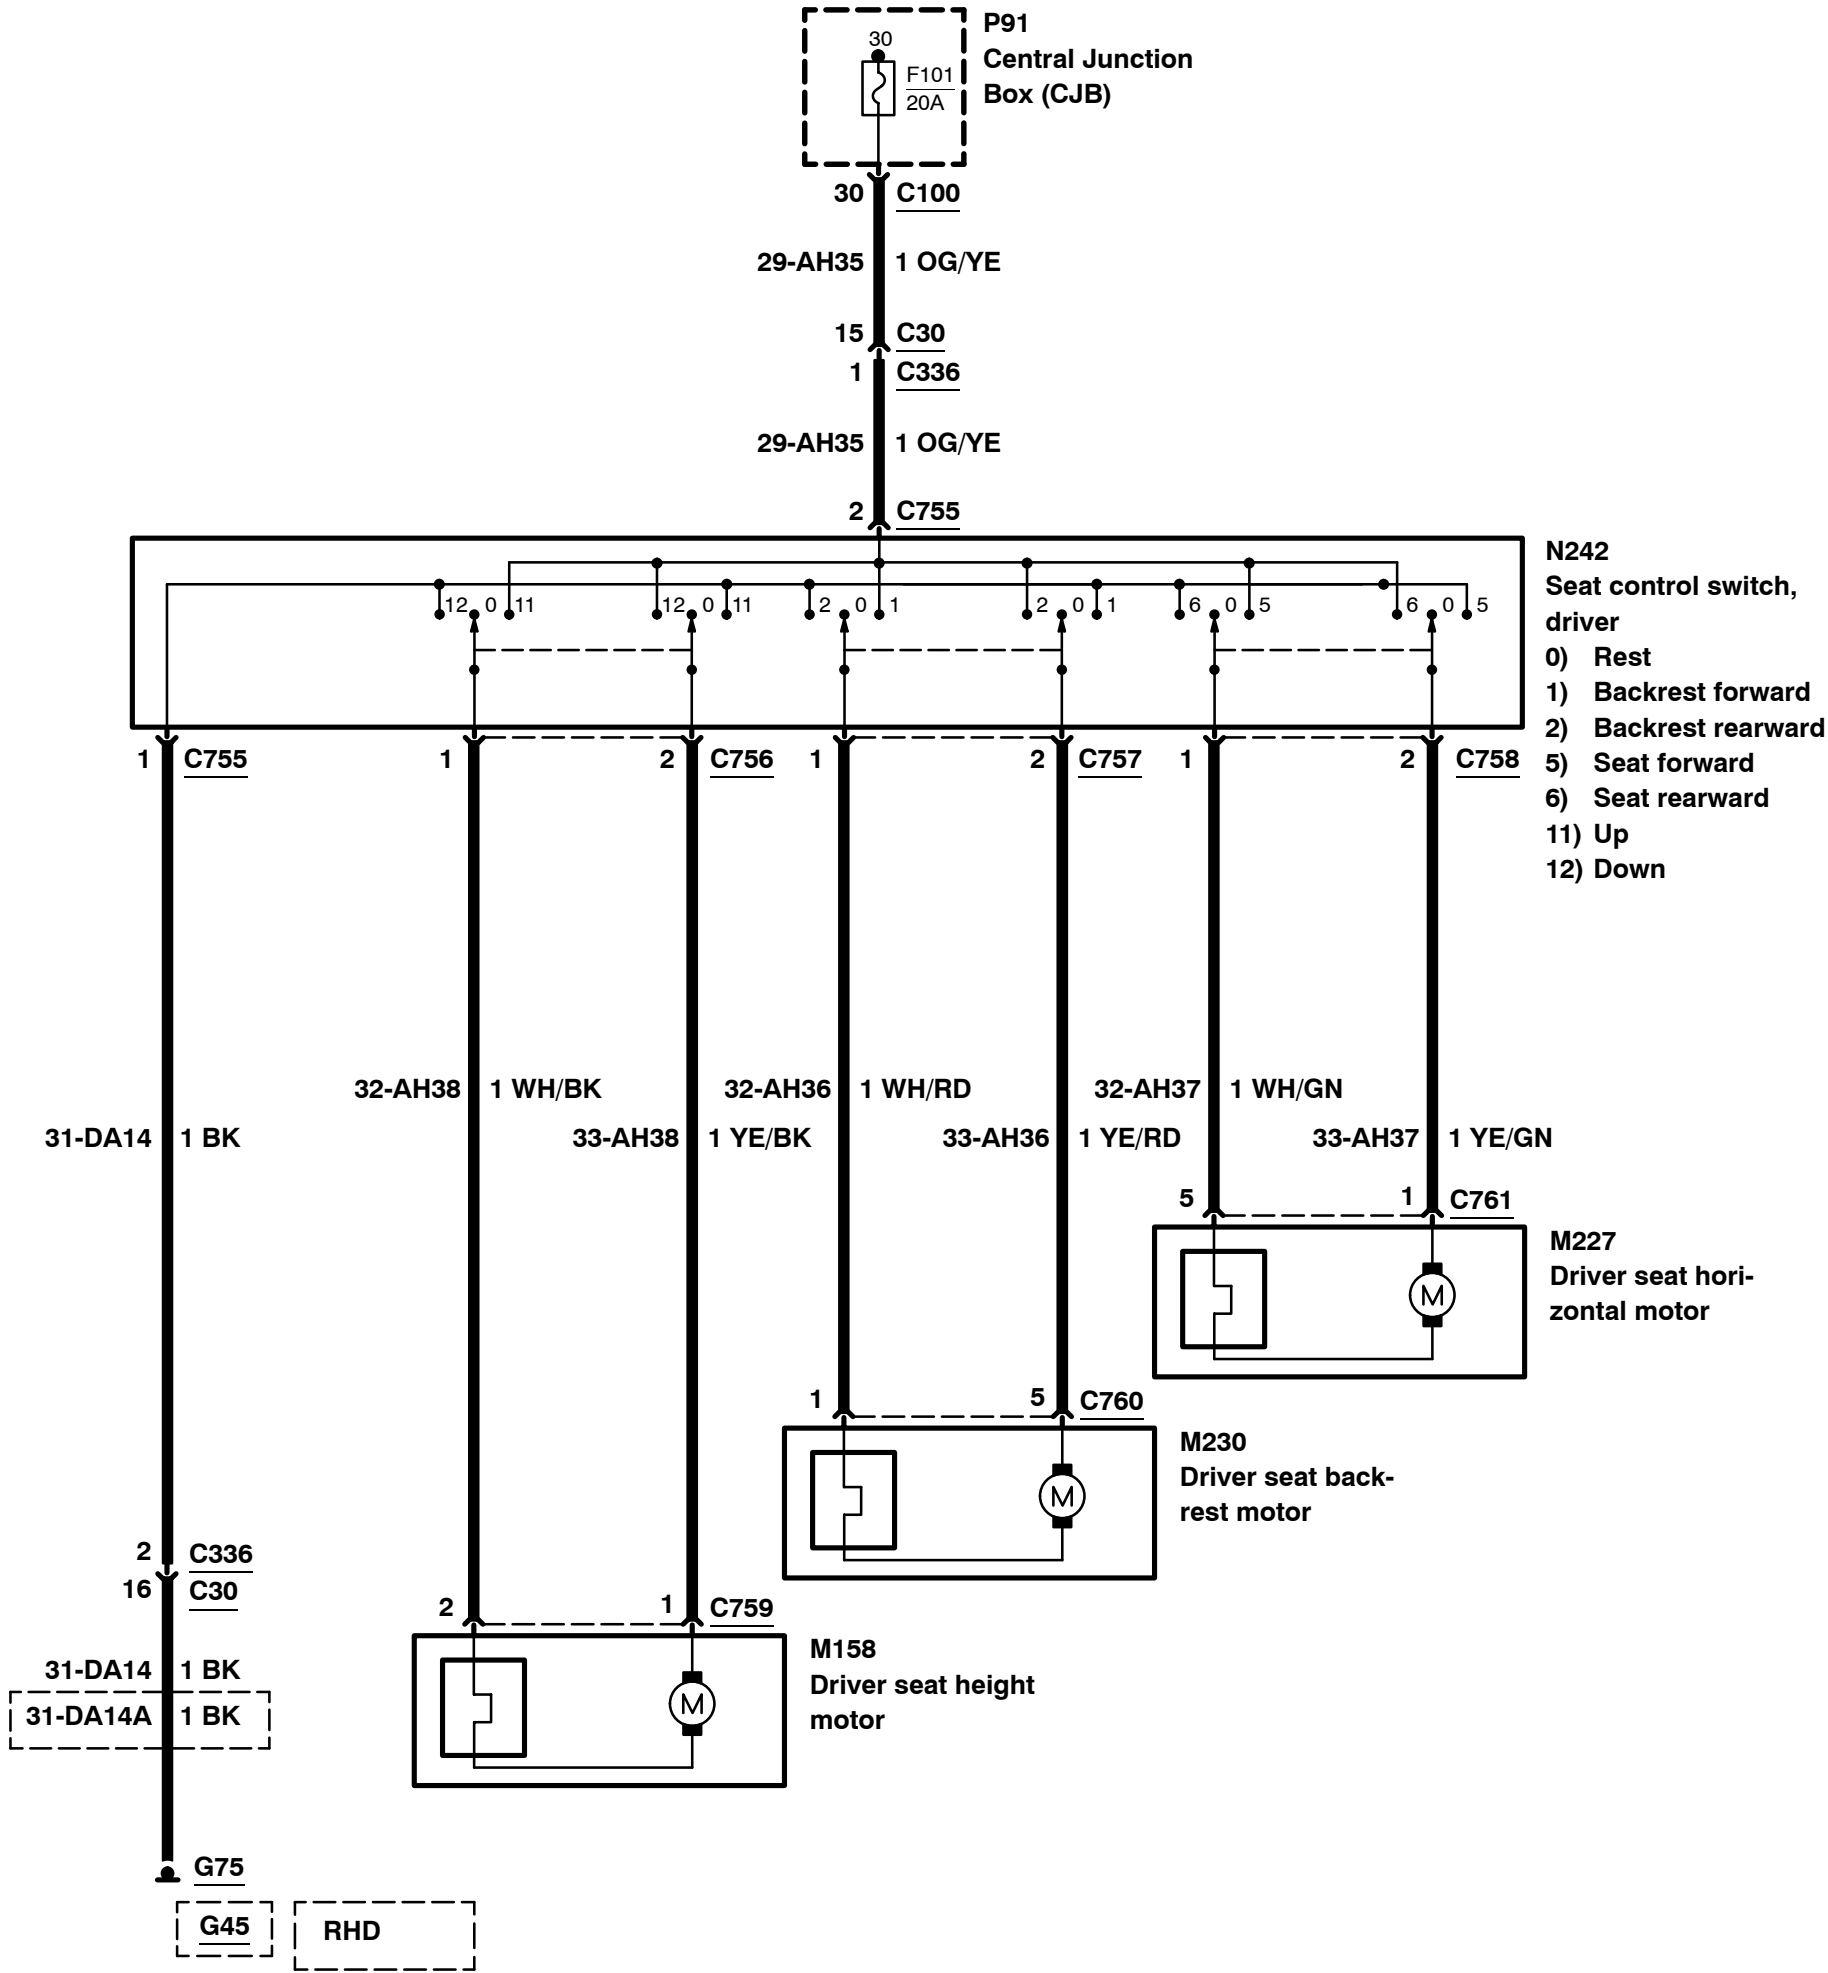


# Glass, Frames and Mechanisms – LHD, with front power windows

02/2008  
501-11-00-1  
2008.25  
Focus

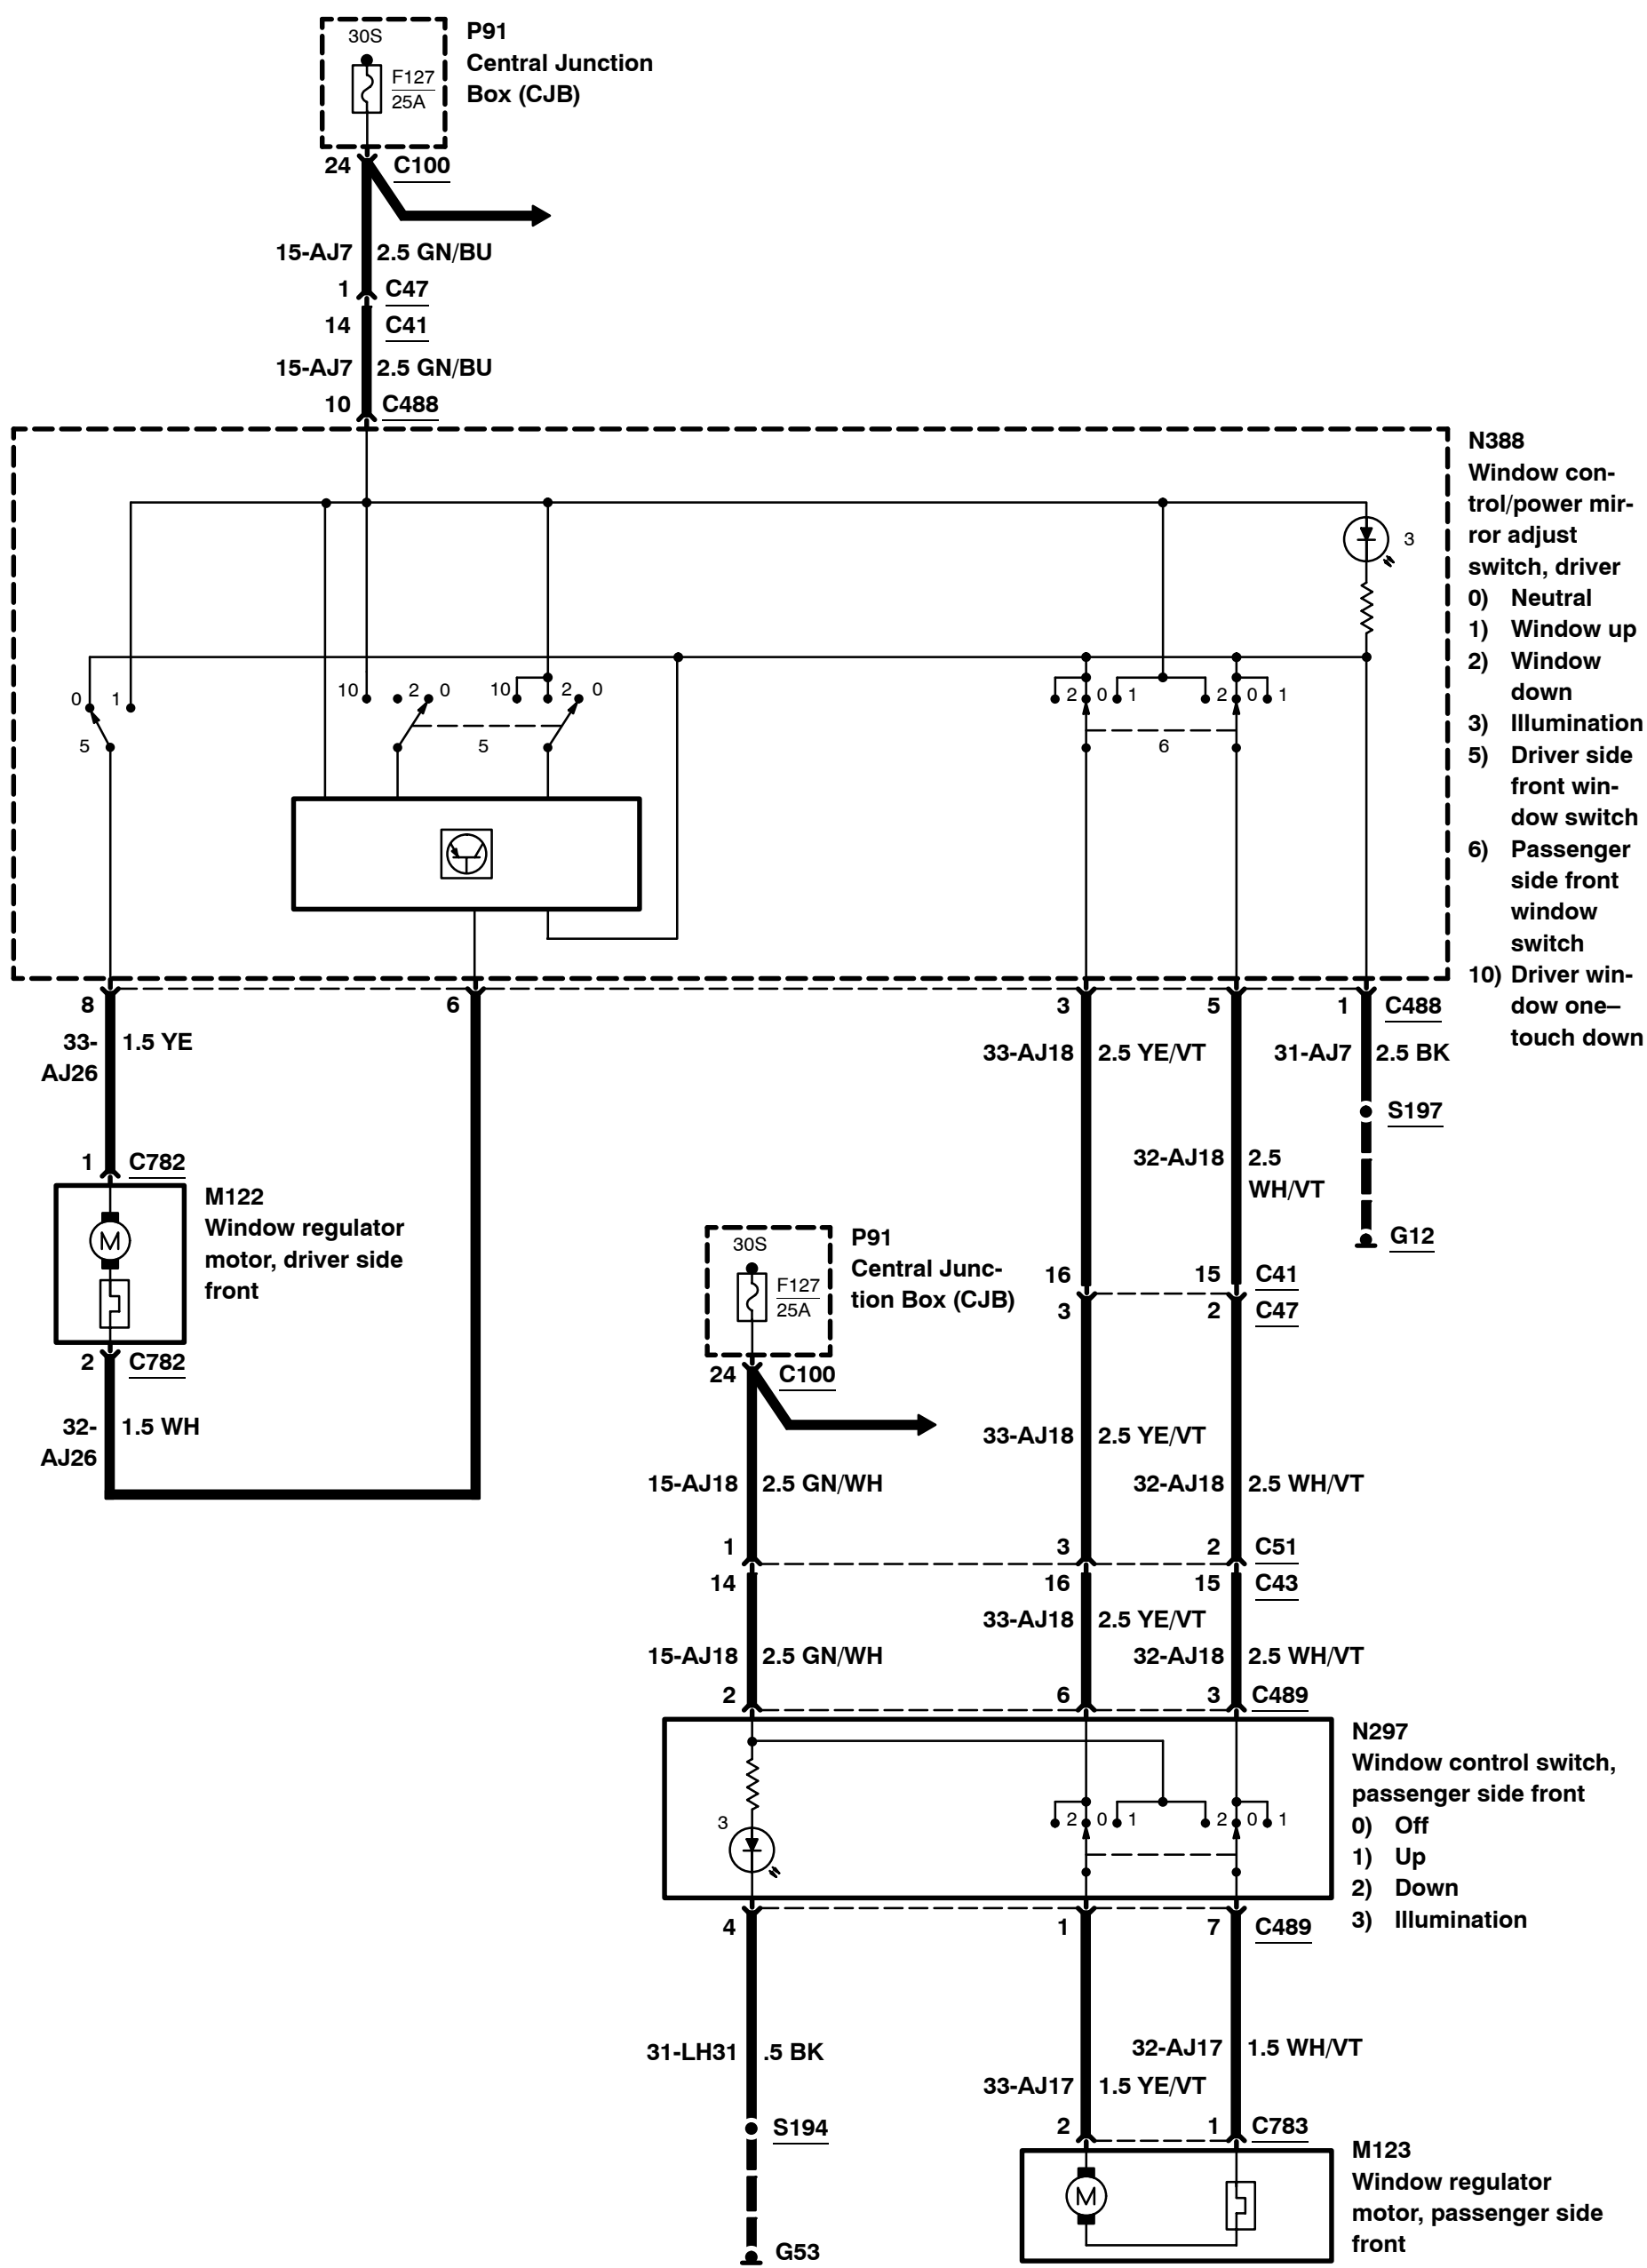


# Glass, Frames and Mechanisms – RHD, with front power windows

02/2008  
501-11-00-2  
2008.25  
Focus

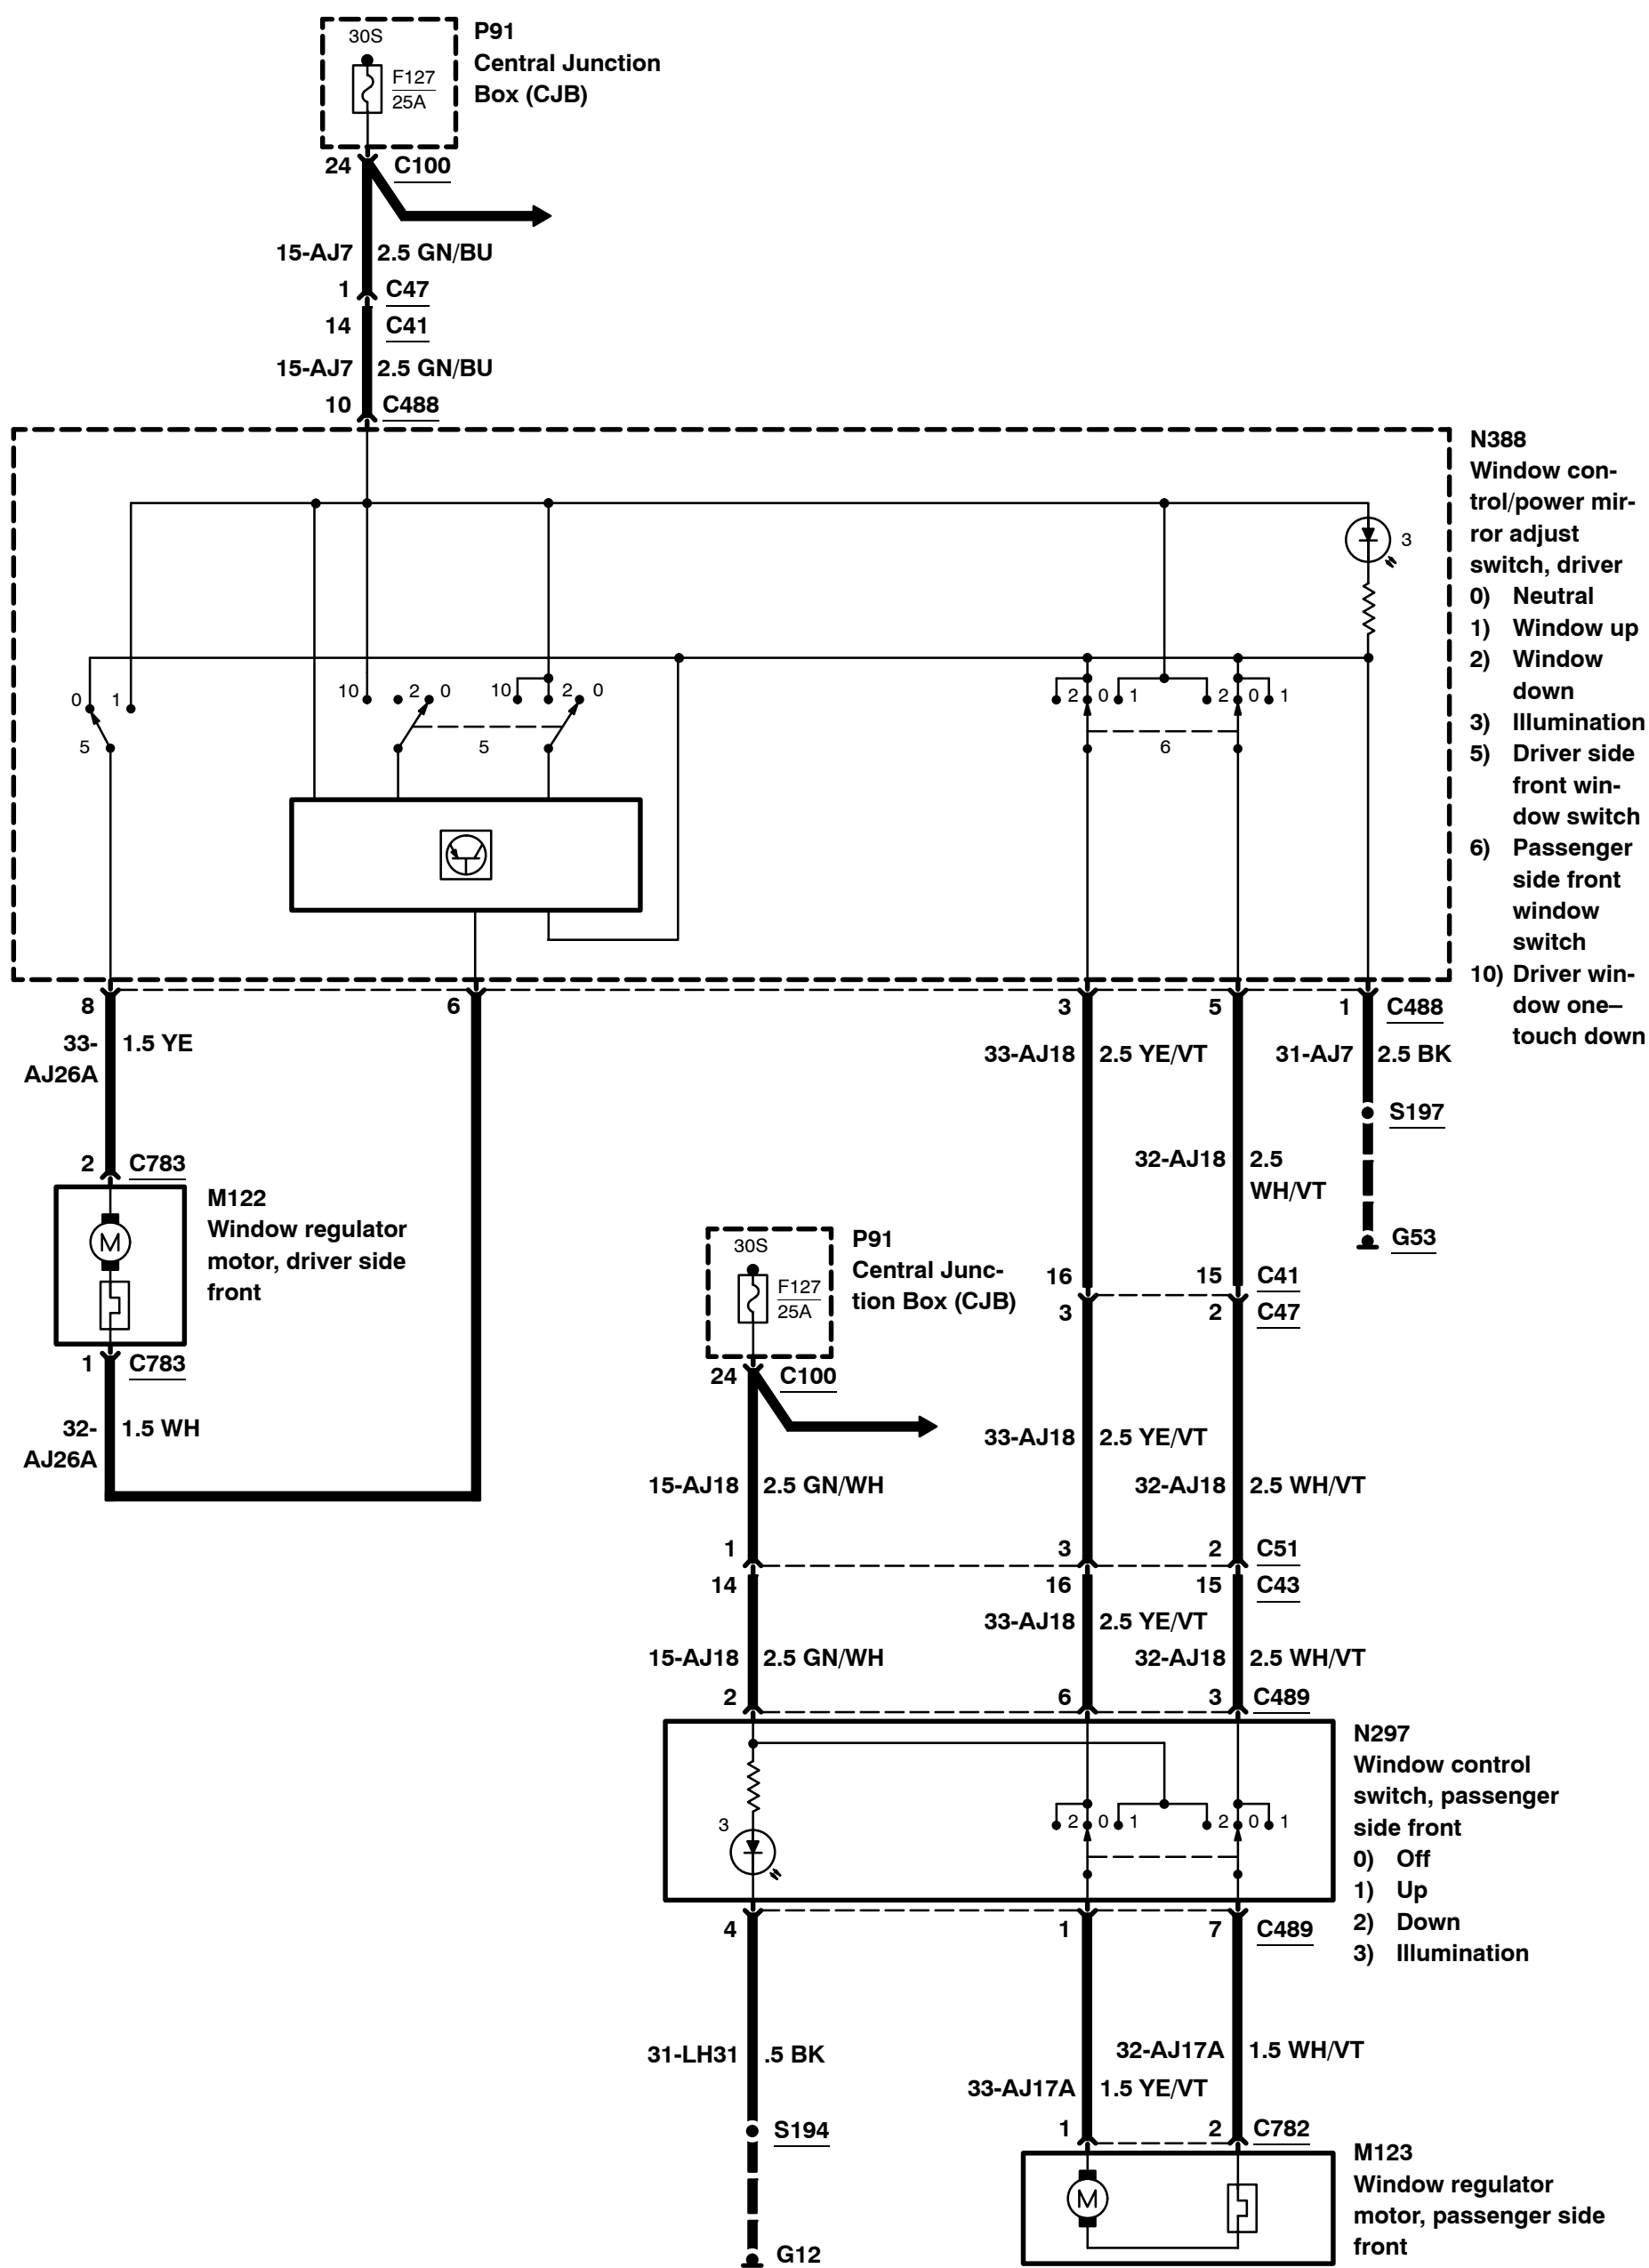


# Glass, Frames and Mechanisms – LHD, with front and rear power windows, before model year 2009

02/2008  
501-11-00-3  
2008.25  
Focus

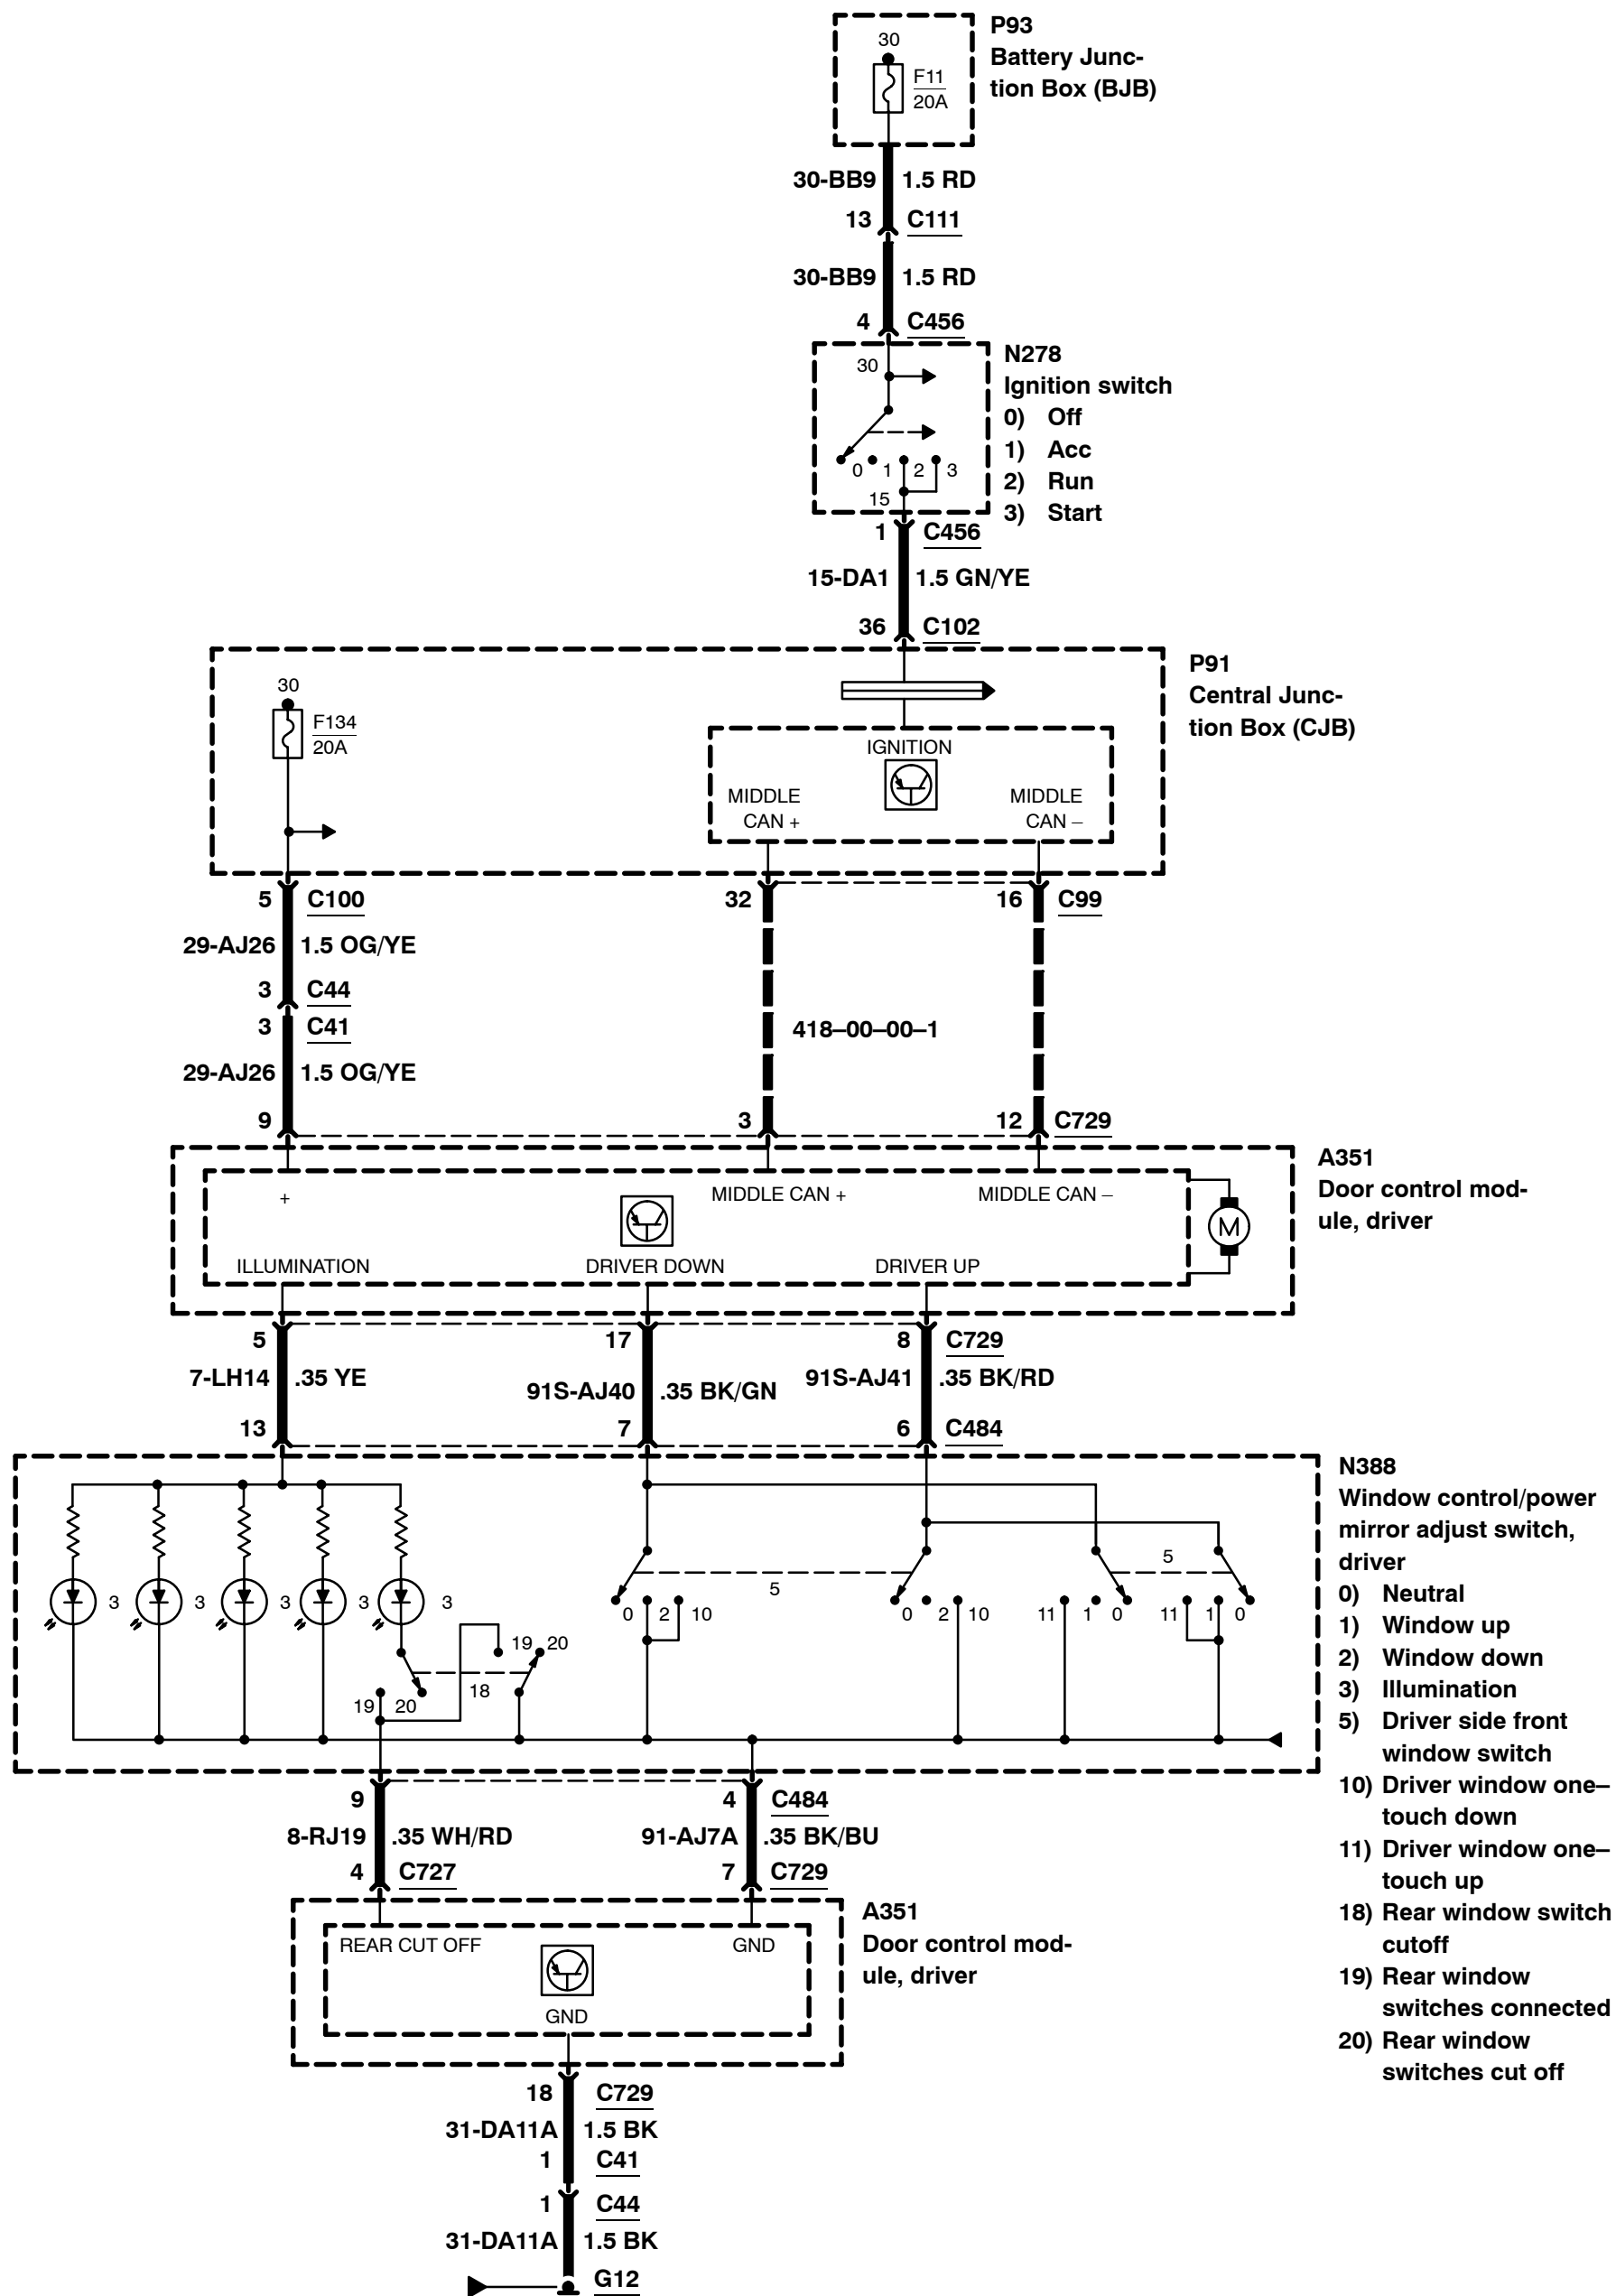


# Glass, Frames and Mechanisms – LHD, with front and rear power windows, before model year 2009

02/2008  
501-11-00-4  
2008.25  
Focus

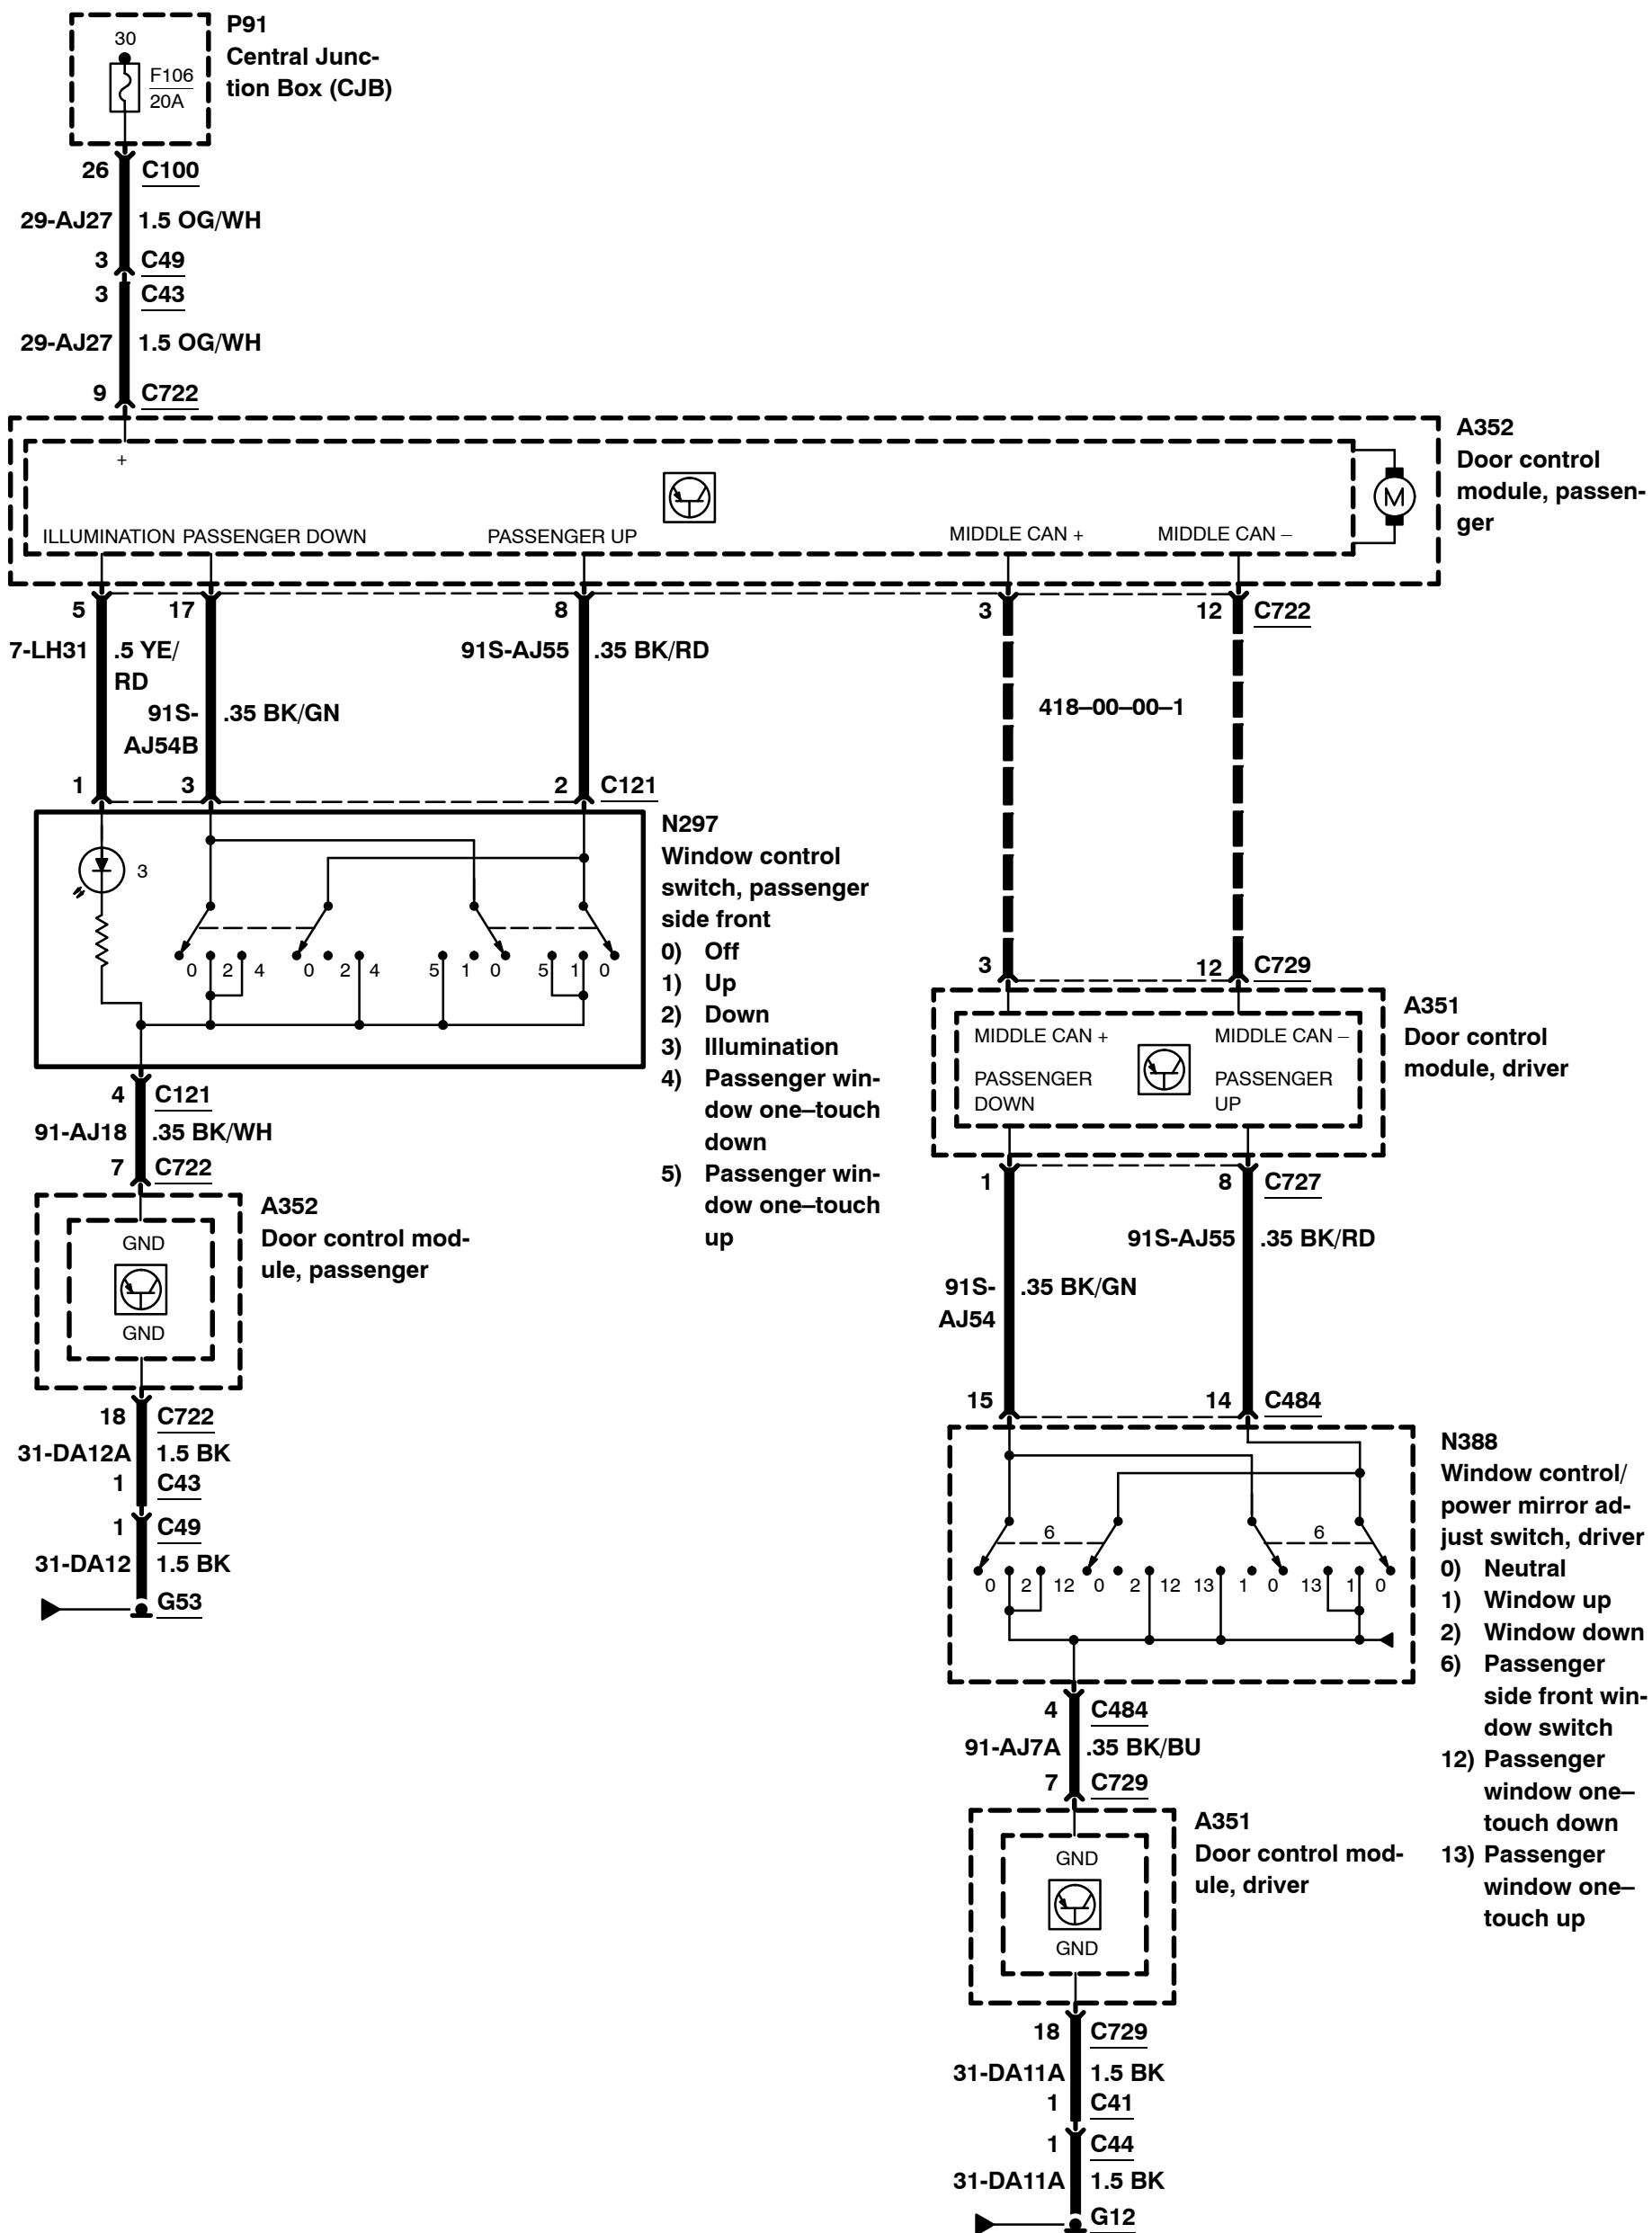

# Glass, Frames and Mechanisms – LHD, with front and rear power windows, before model year 2009


02/2008  
501-11-00-5  
2008.25  
Focus

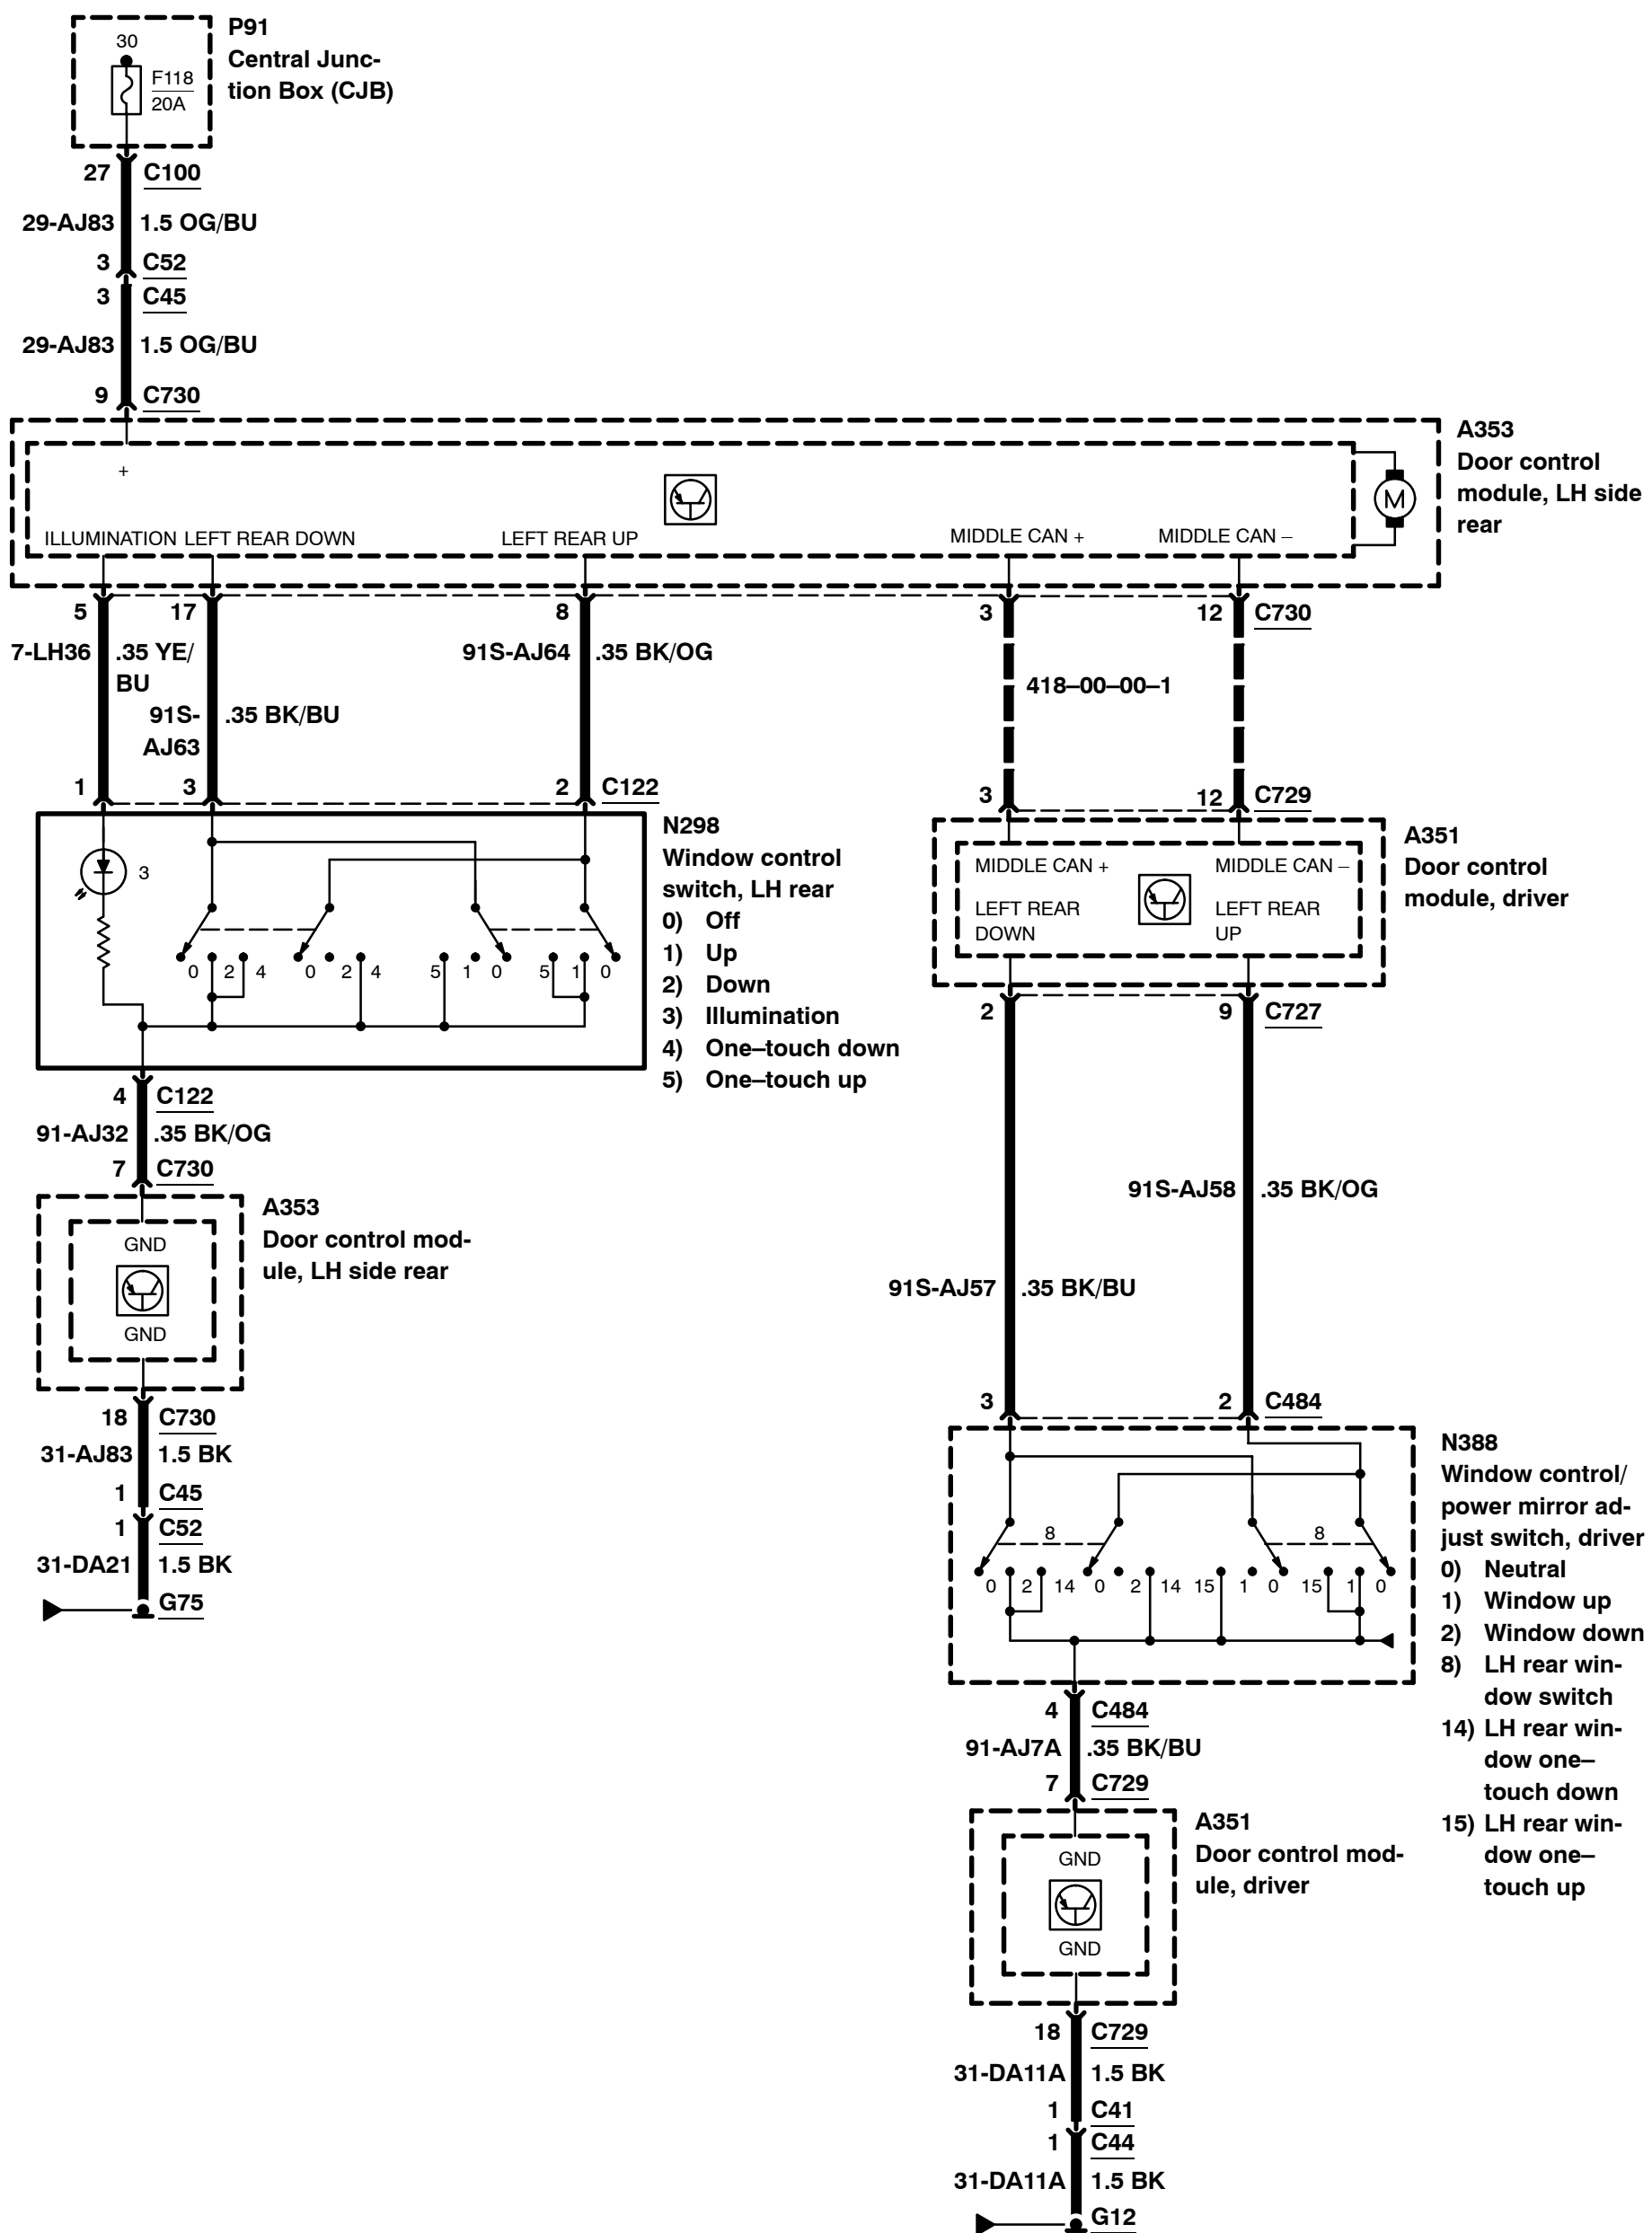




# Glass, Frames and Mechanisms – LHD, with front and rear power windows, before model year 2009

02/2008  
501-11-00-6  
2008.25  
Focus

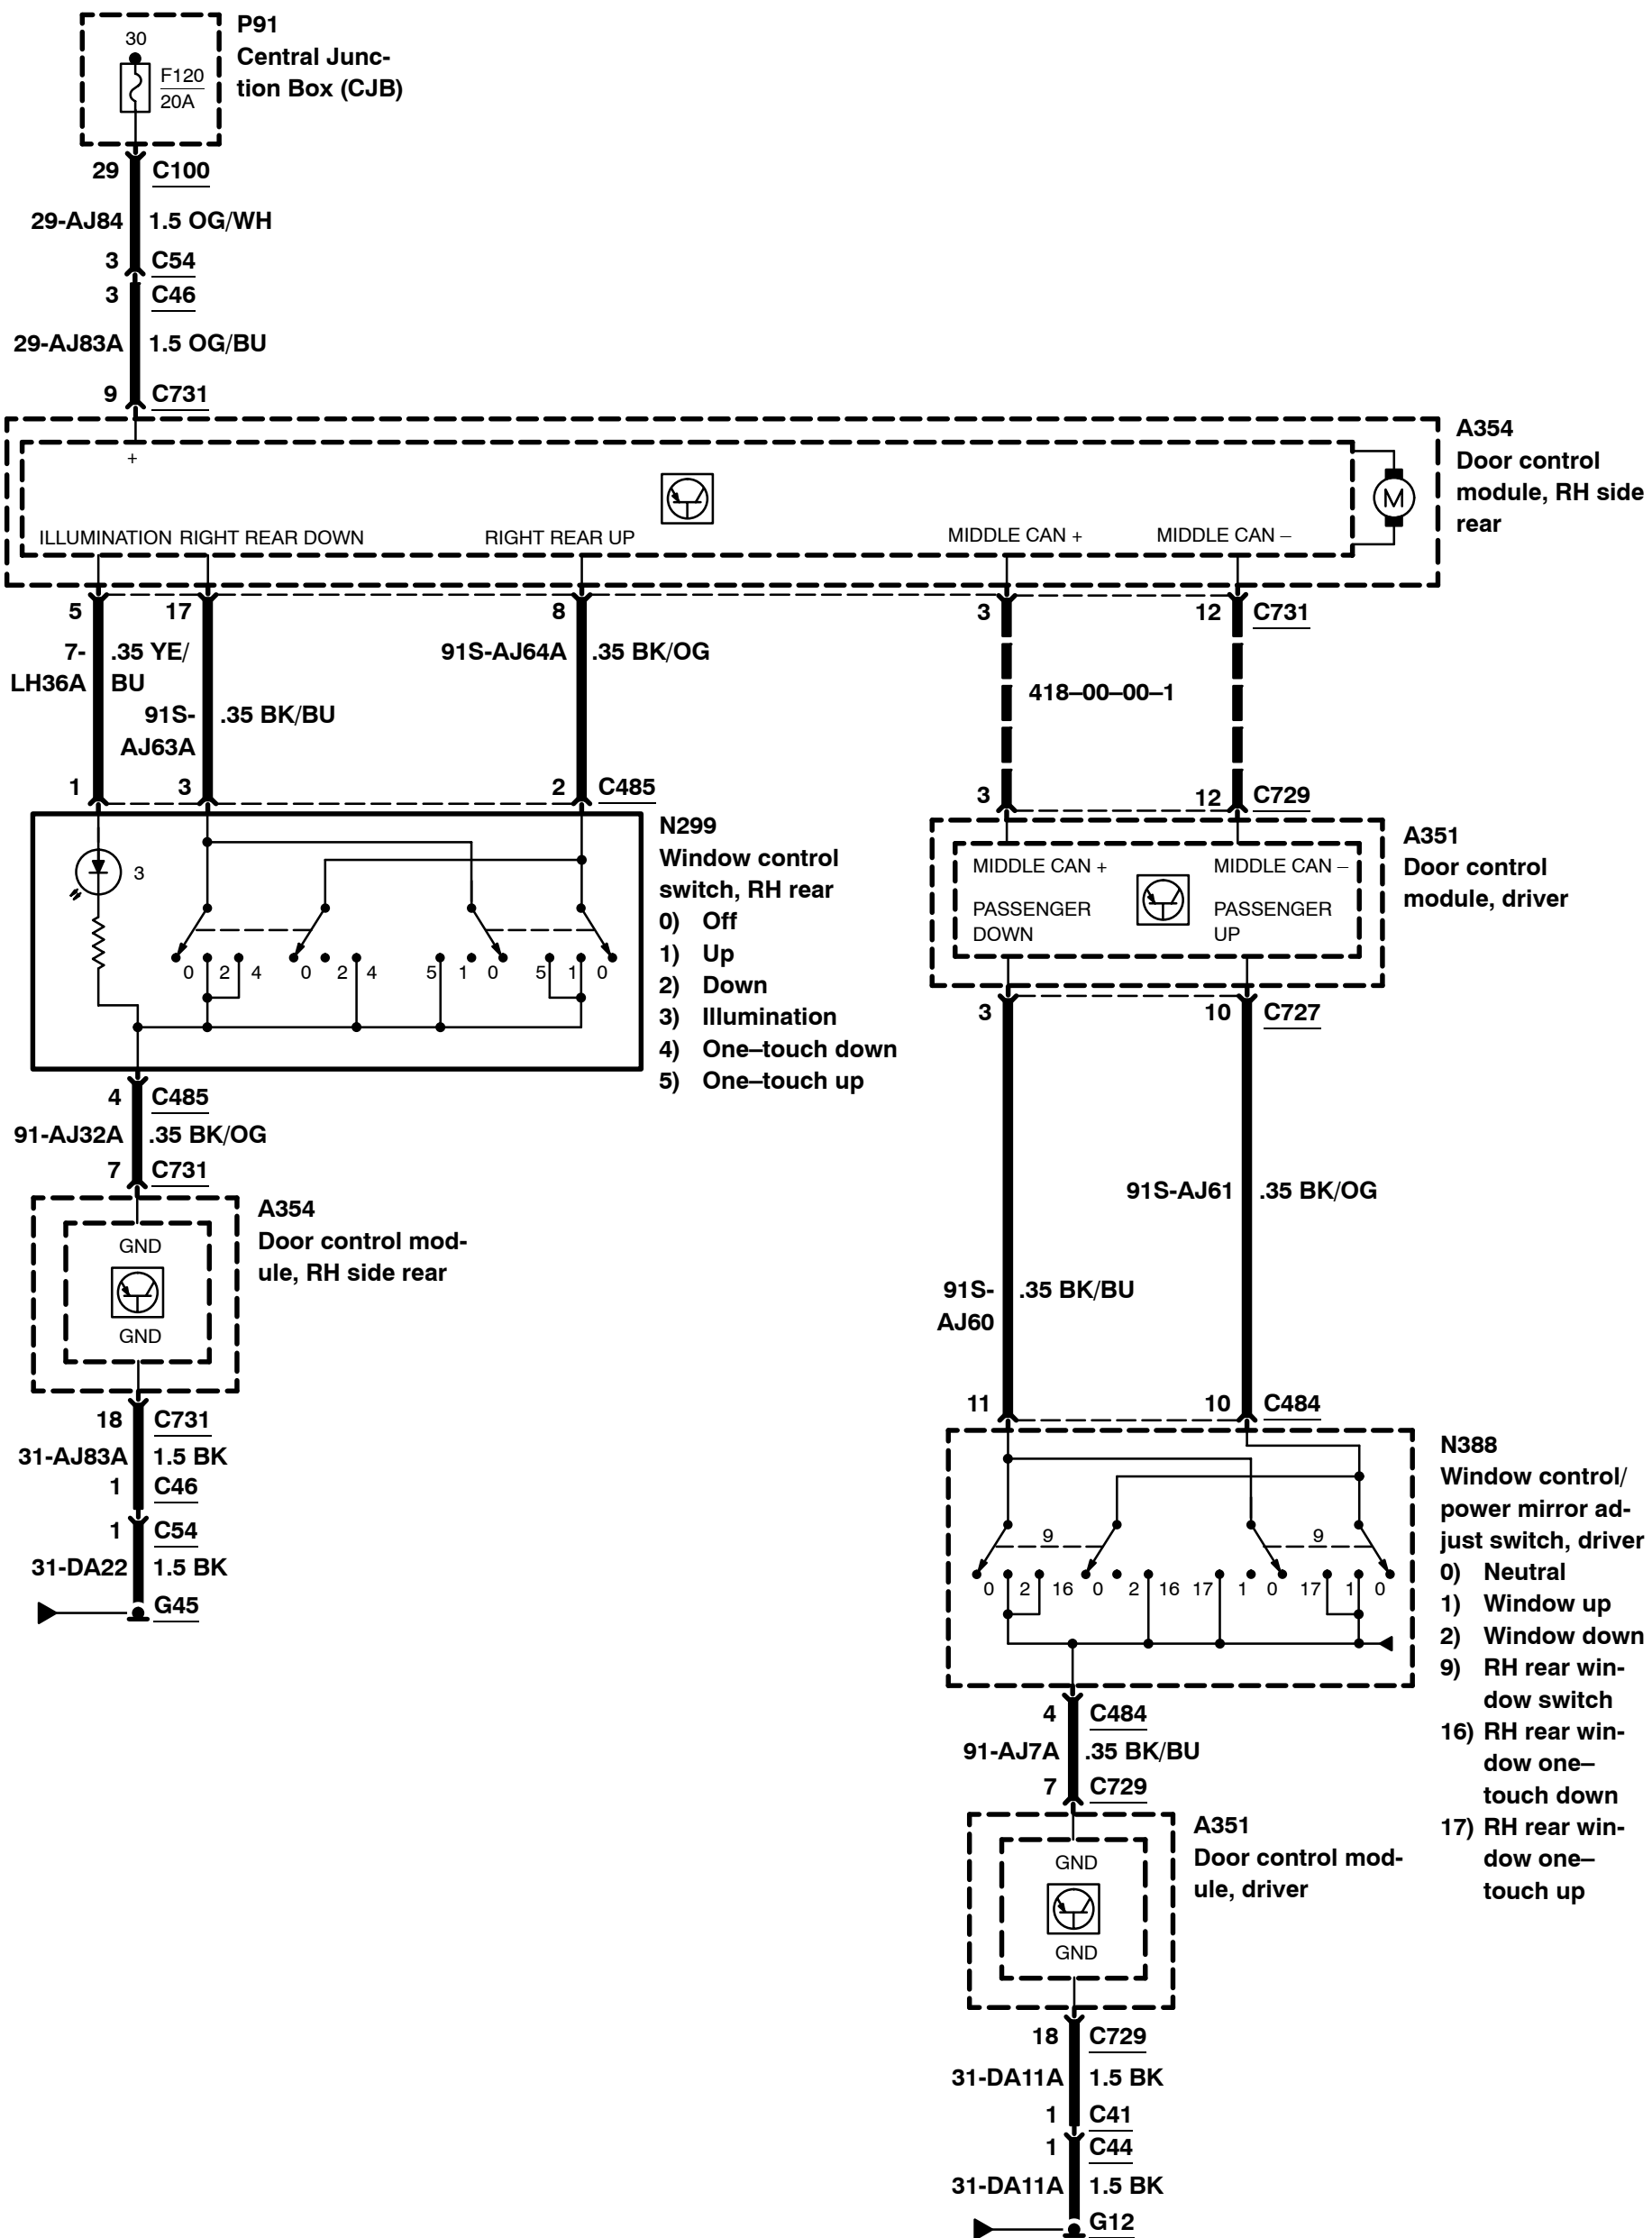

# Glass, Frames and Mechanisms – RHD, with front and rear power windows, before model year 2009


02/2008  
501-11-00-7  
2008.25  
Focus

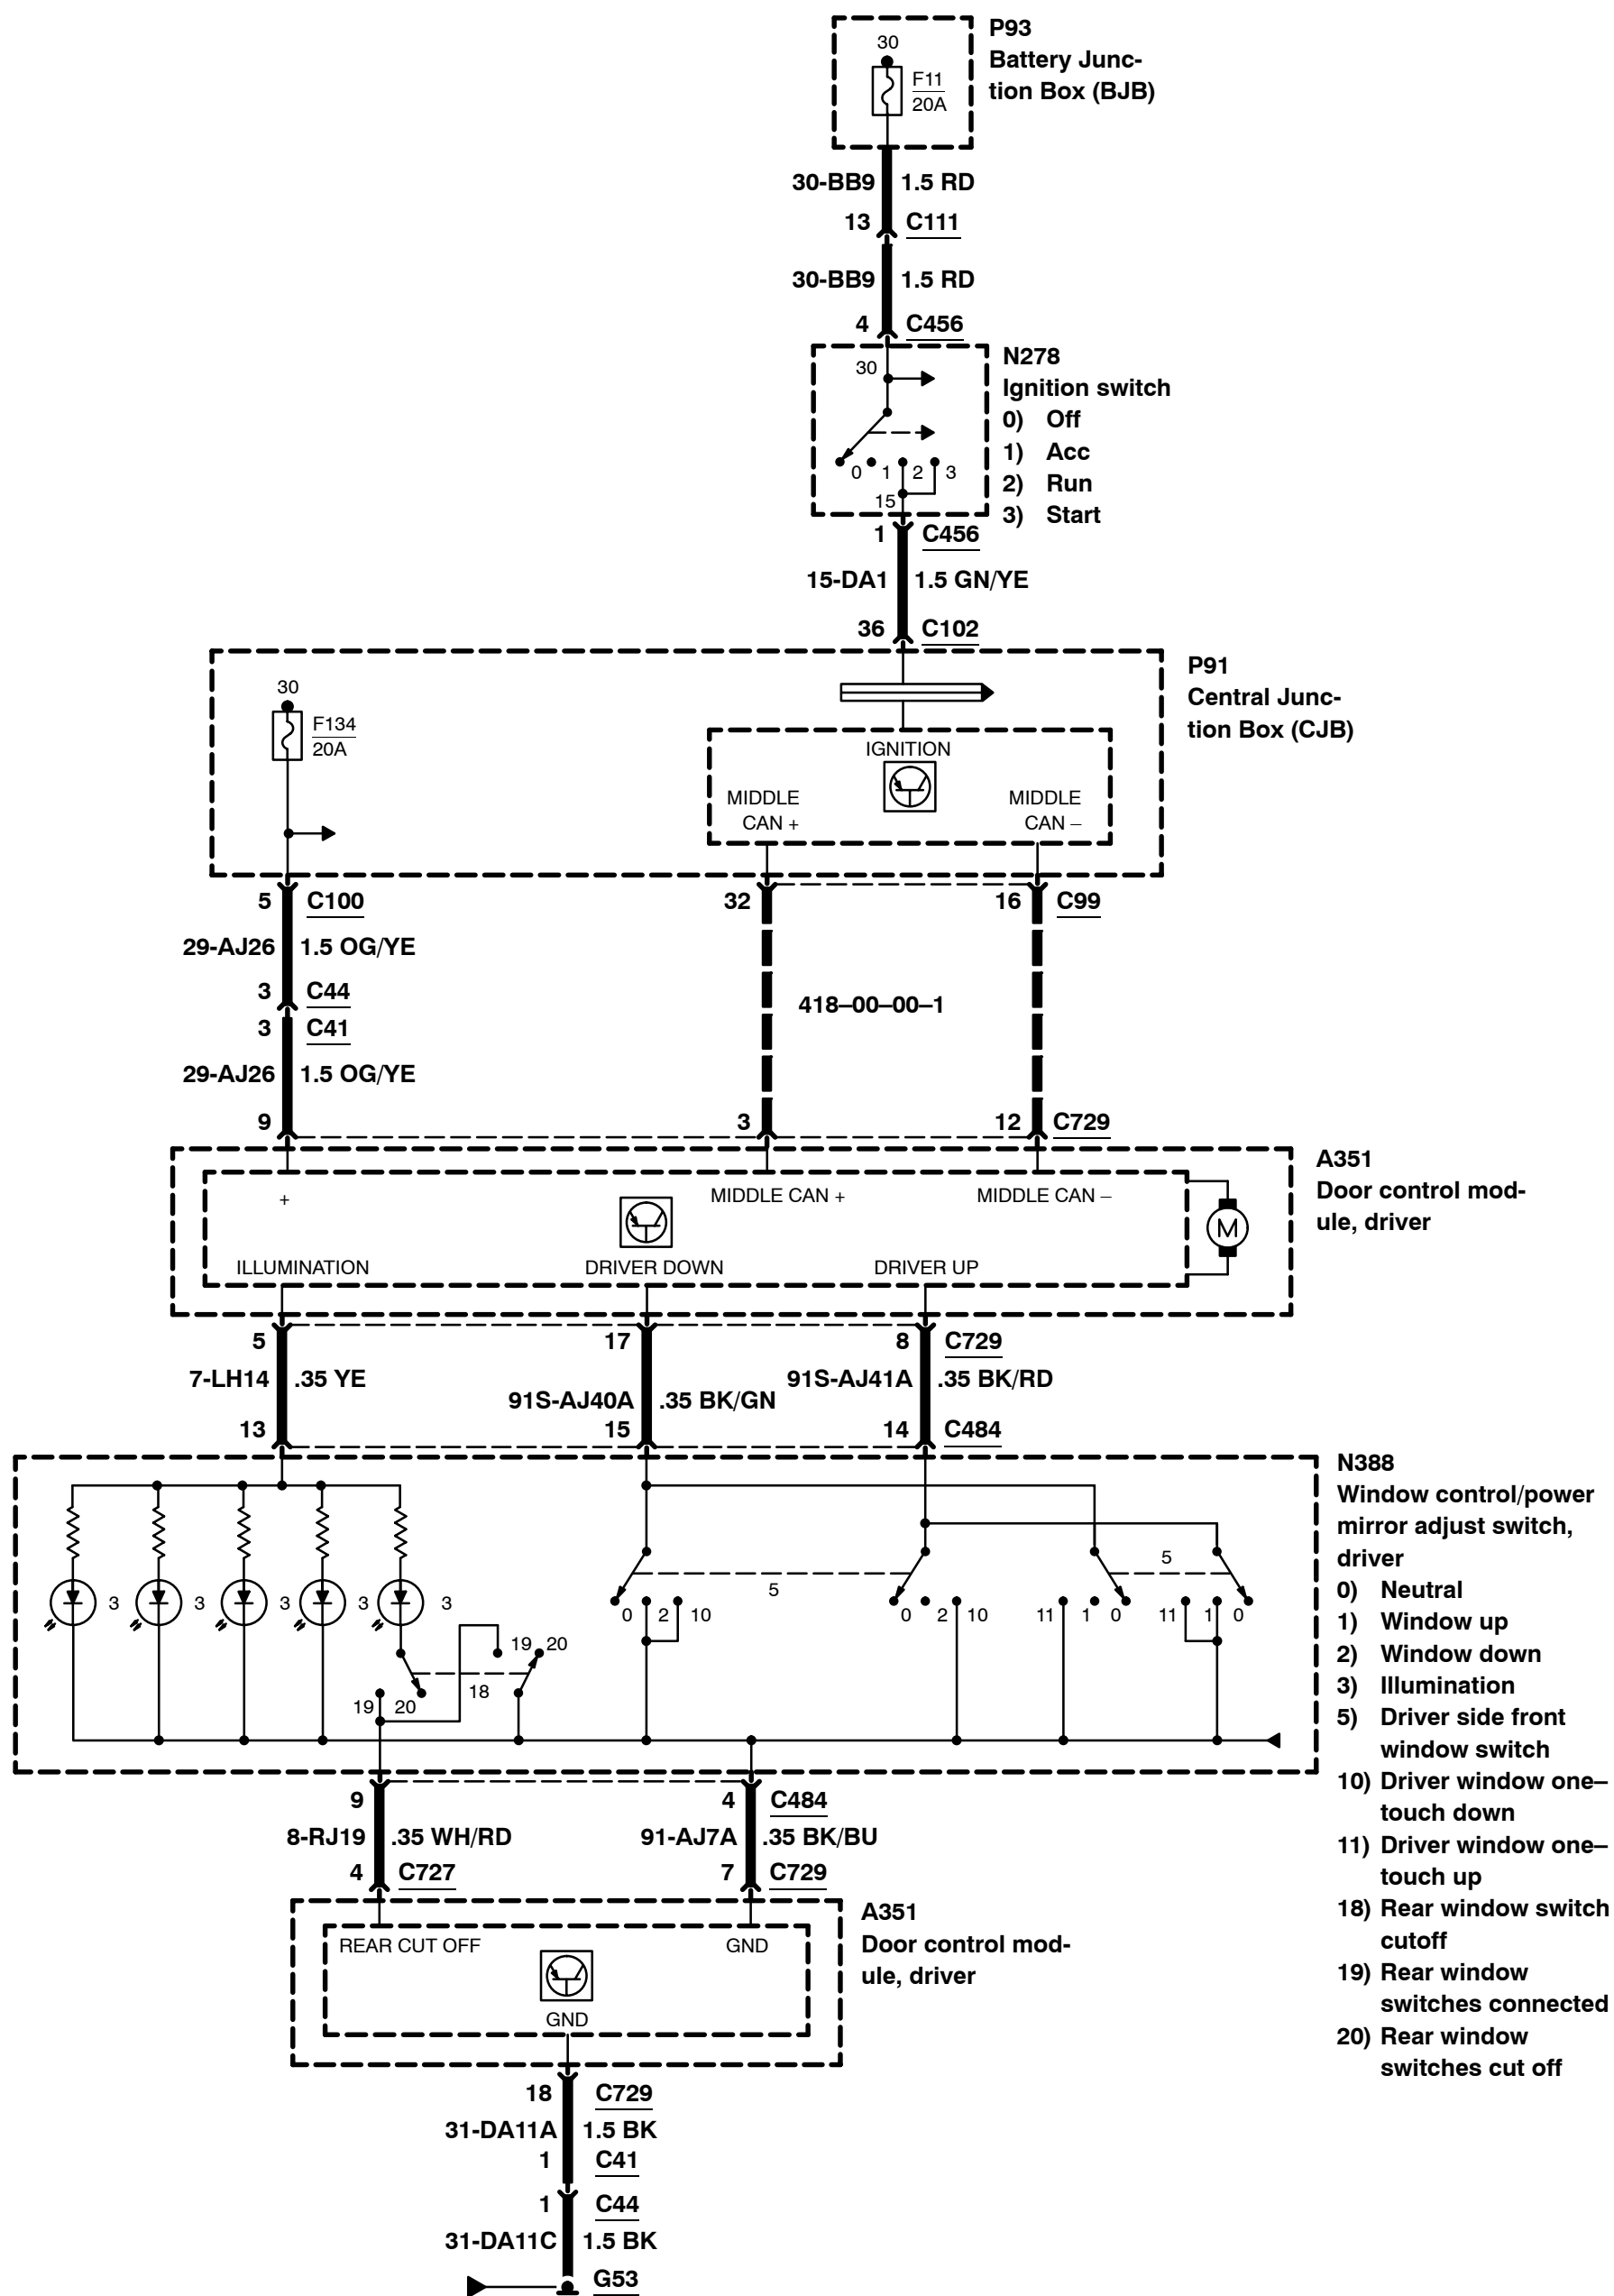




# Glass, Frames and Mechanisms – RHD, with front and rear power windows, before model year 2009

02/2008  
501-11-00-8  
2008.25  
Focus

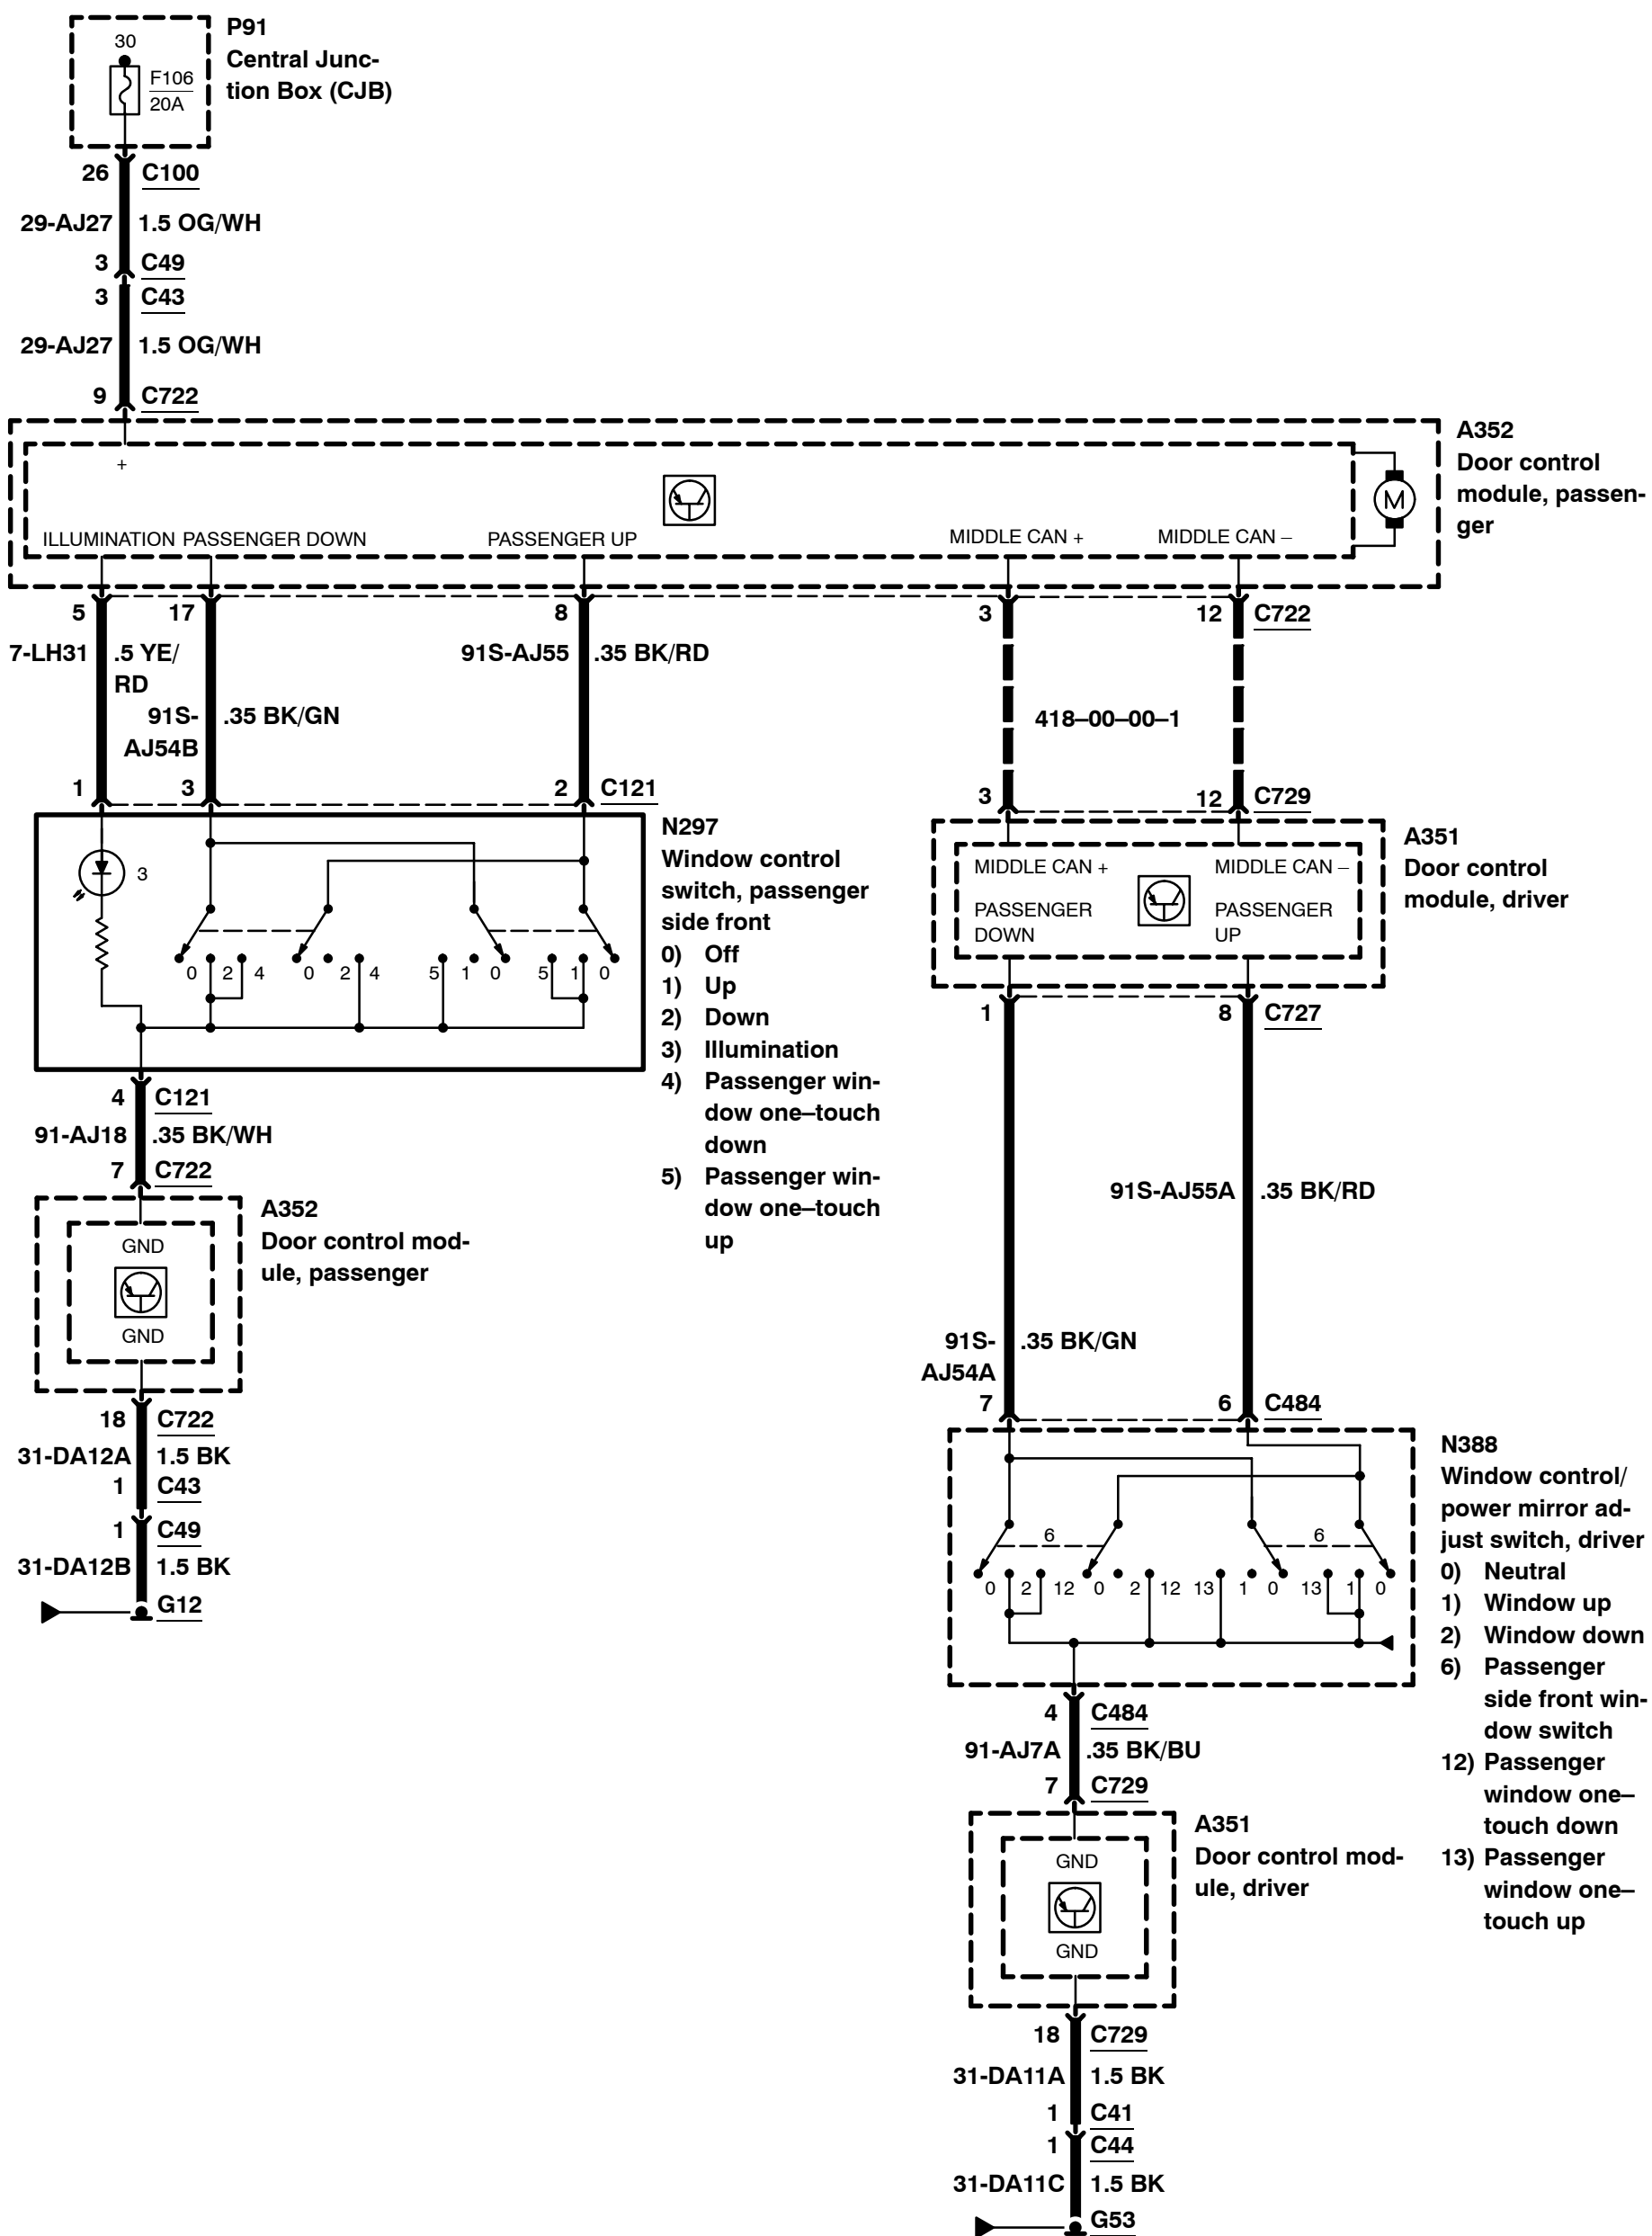


# Glass, Frames and Mechanisms – RHD, with front and rear power windows, before model year 2009

02/2008  
501-11-00-9  
2008.25  
Focus

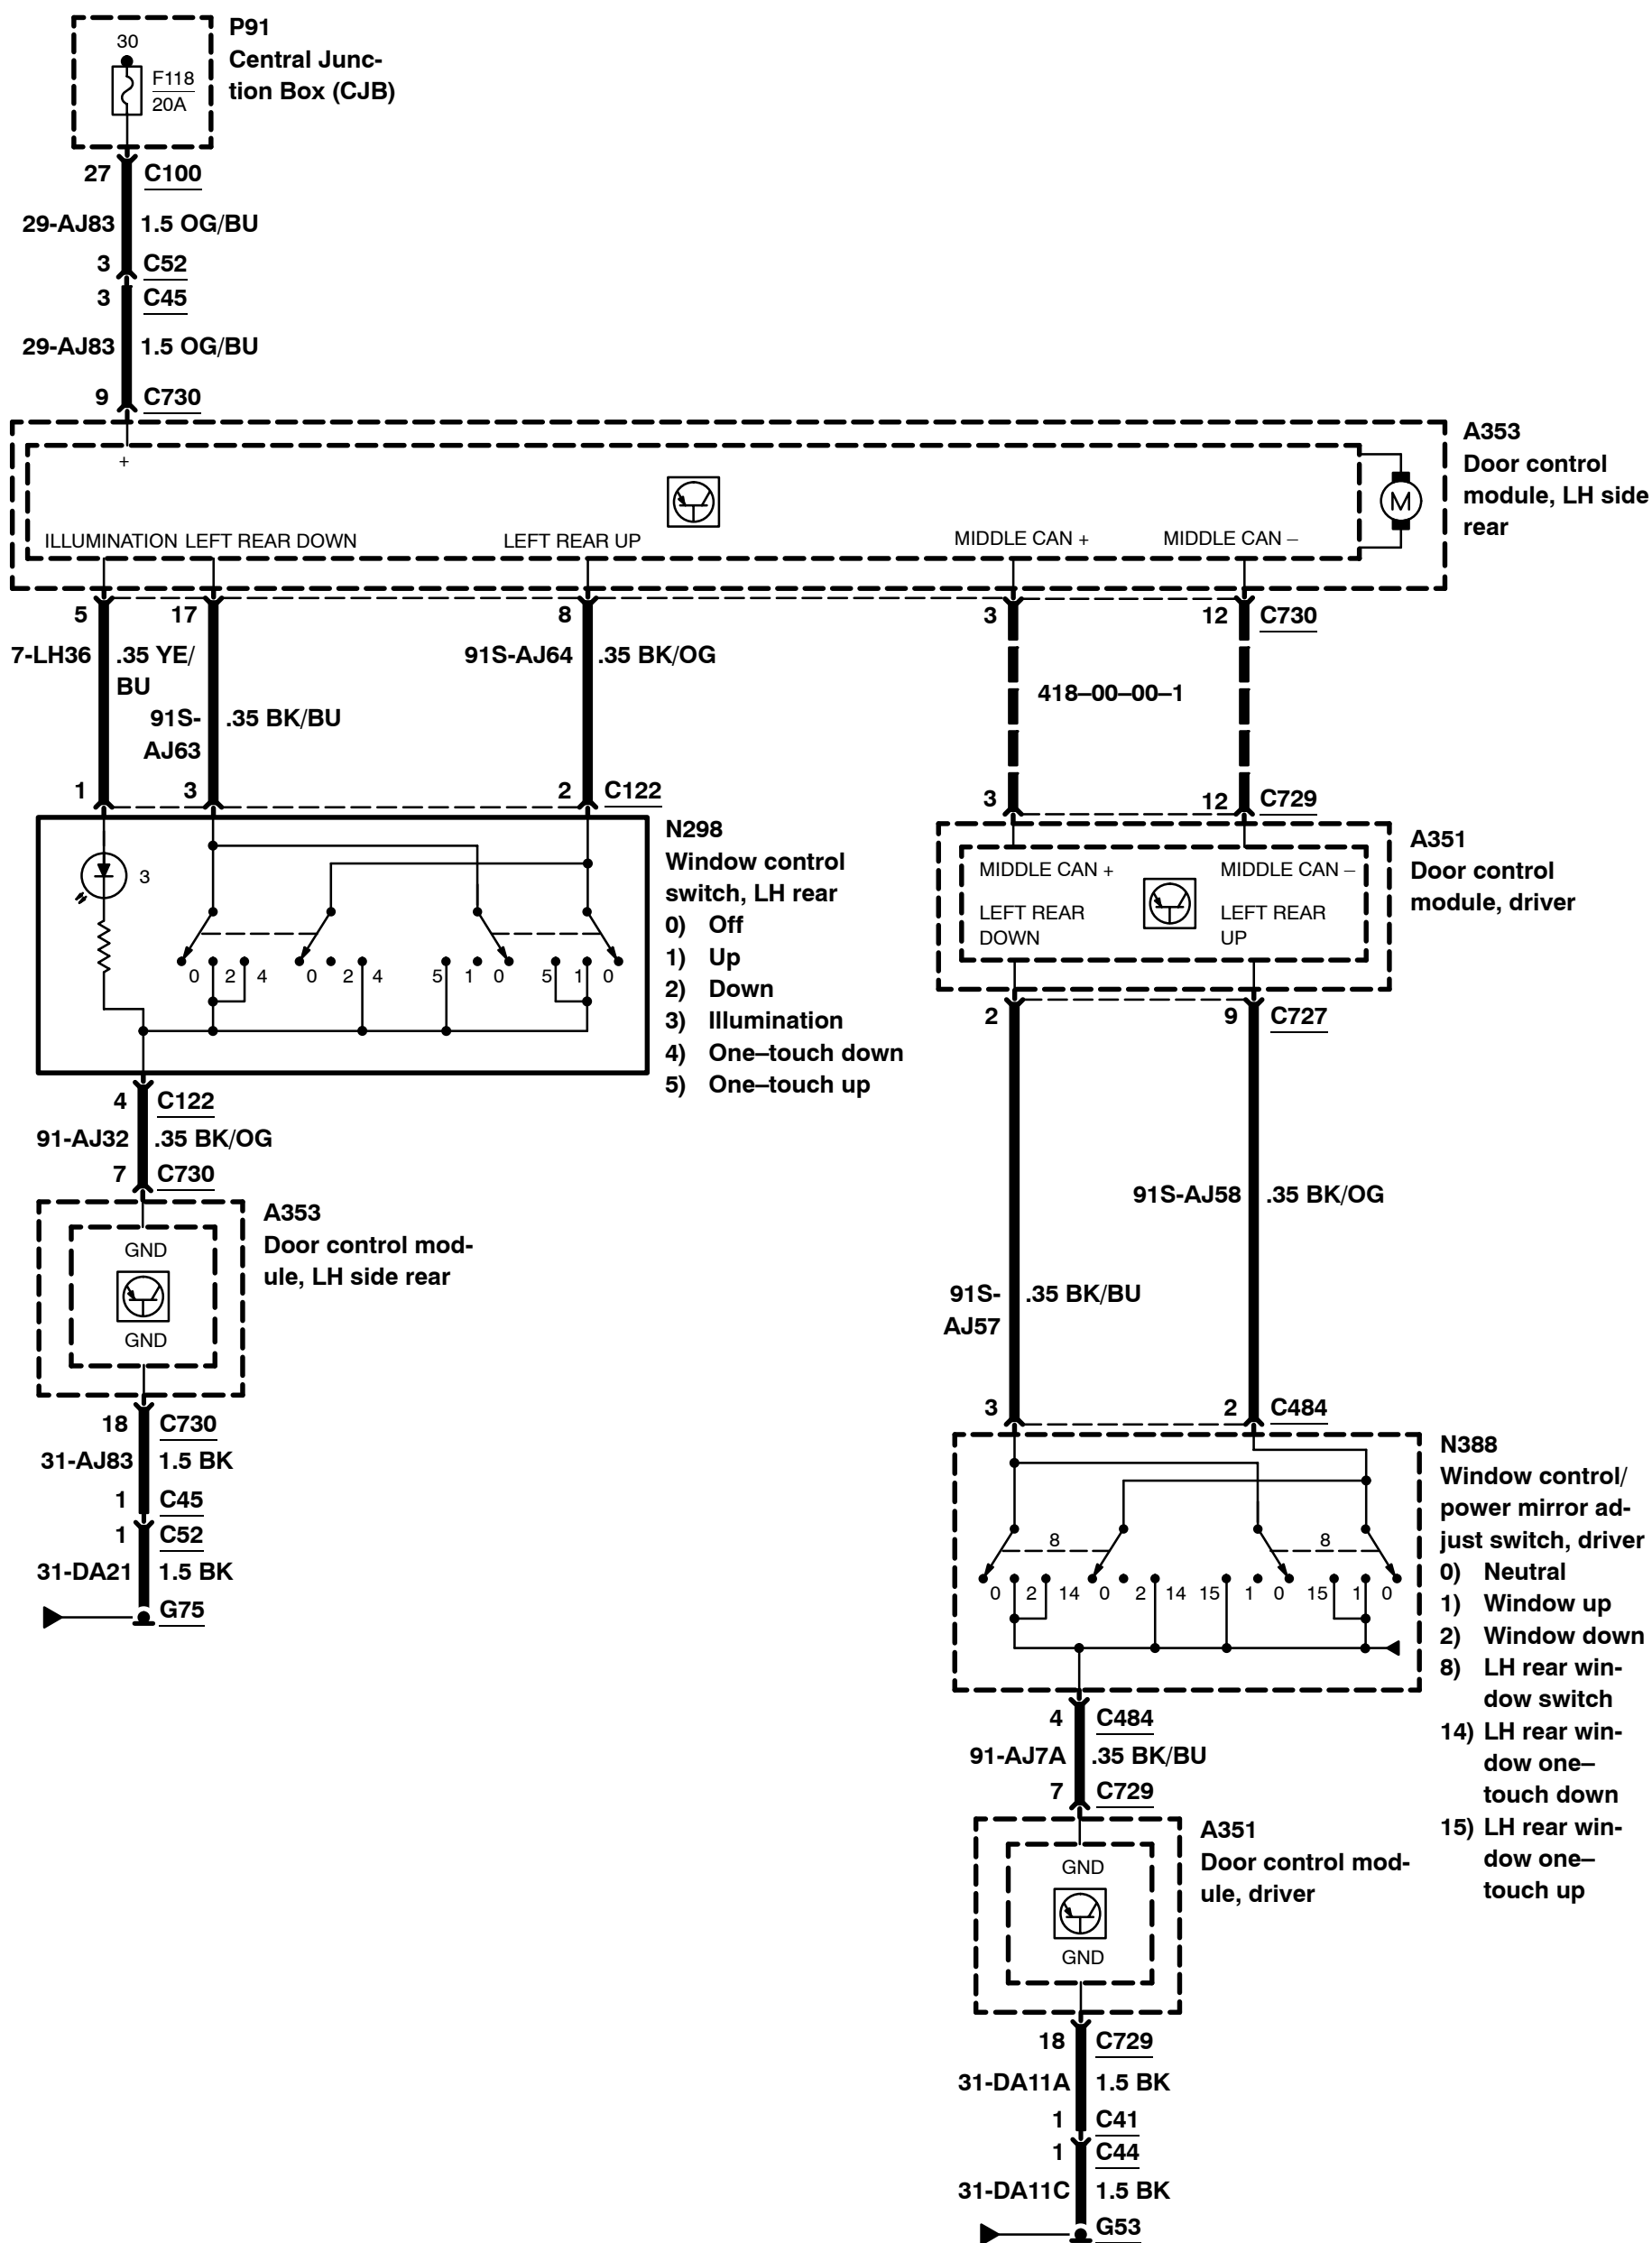


# Glass, Frames and Mechanisms – RHD, with front and rear power windows, before model year 2009

02/2008  
501-11-00-10  
2008.25  
Focus

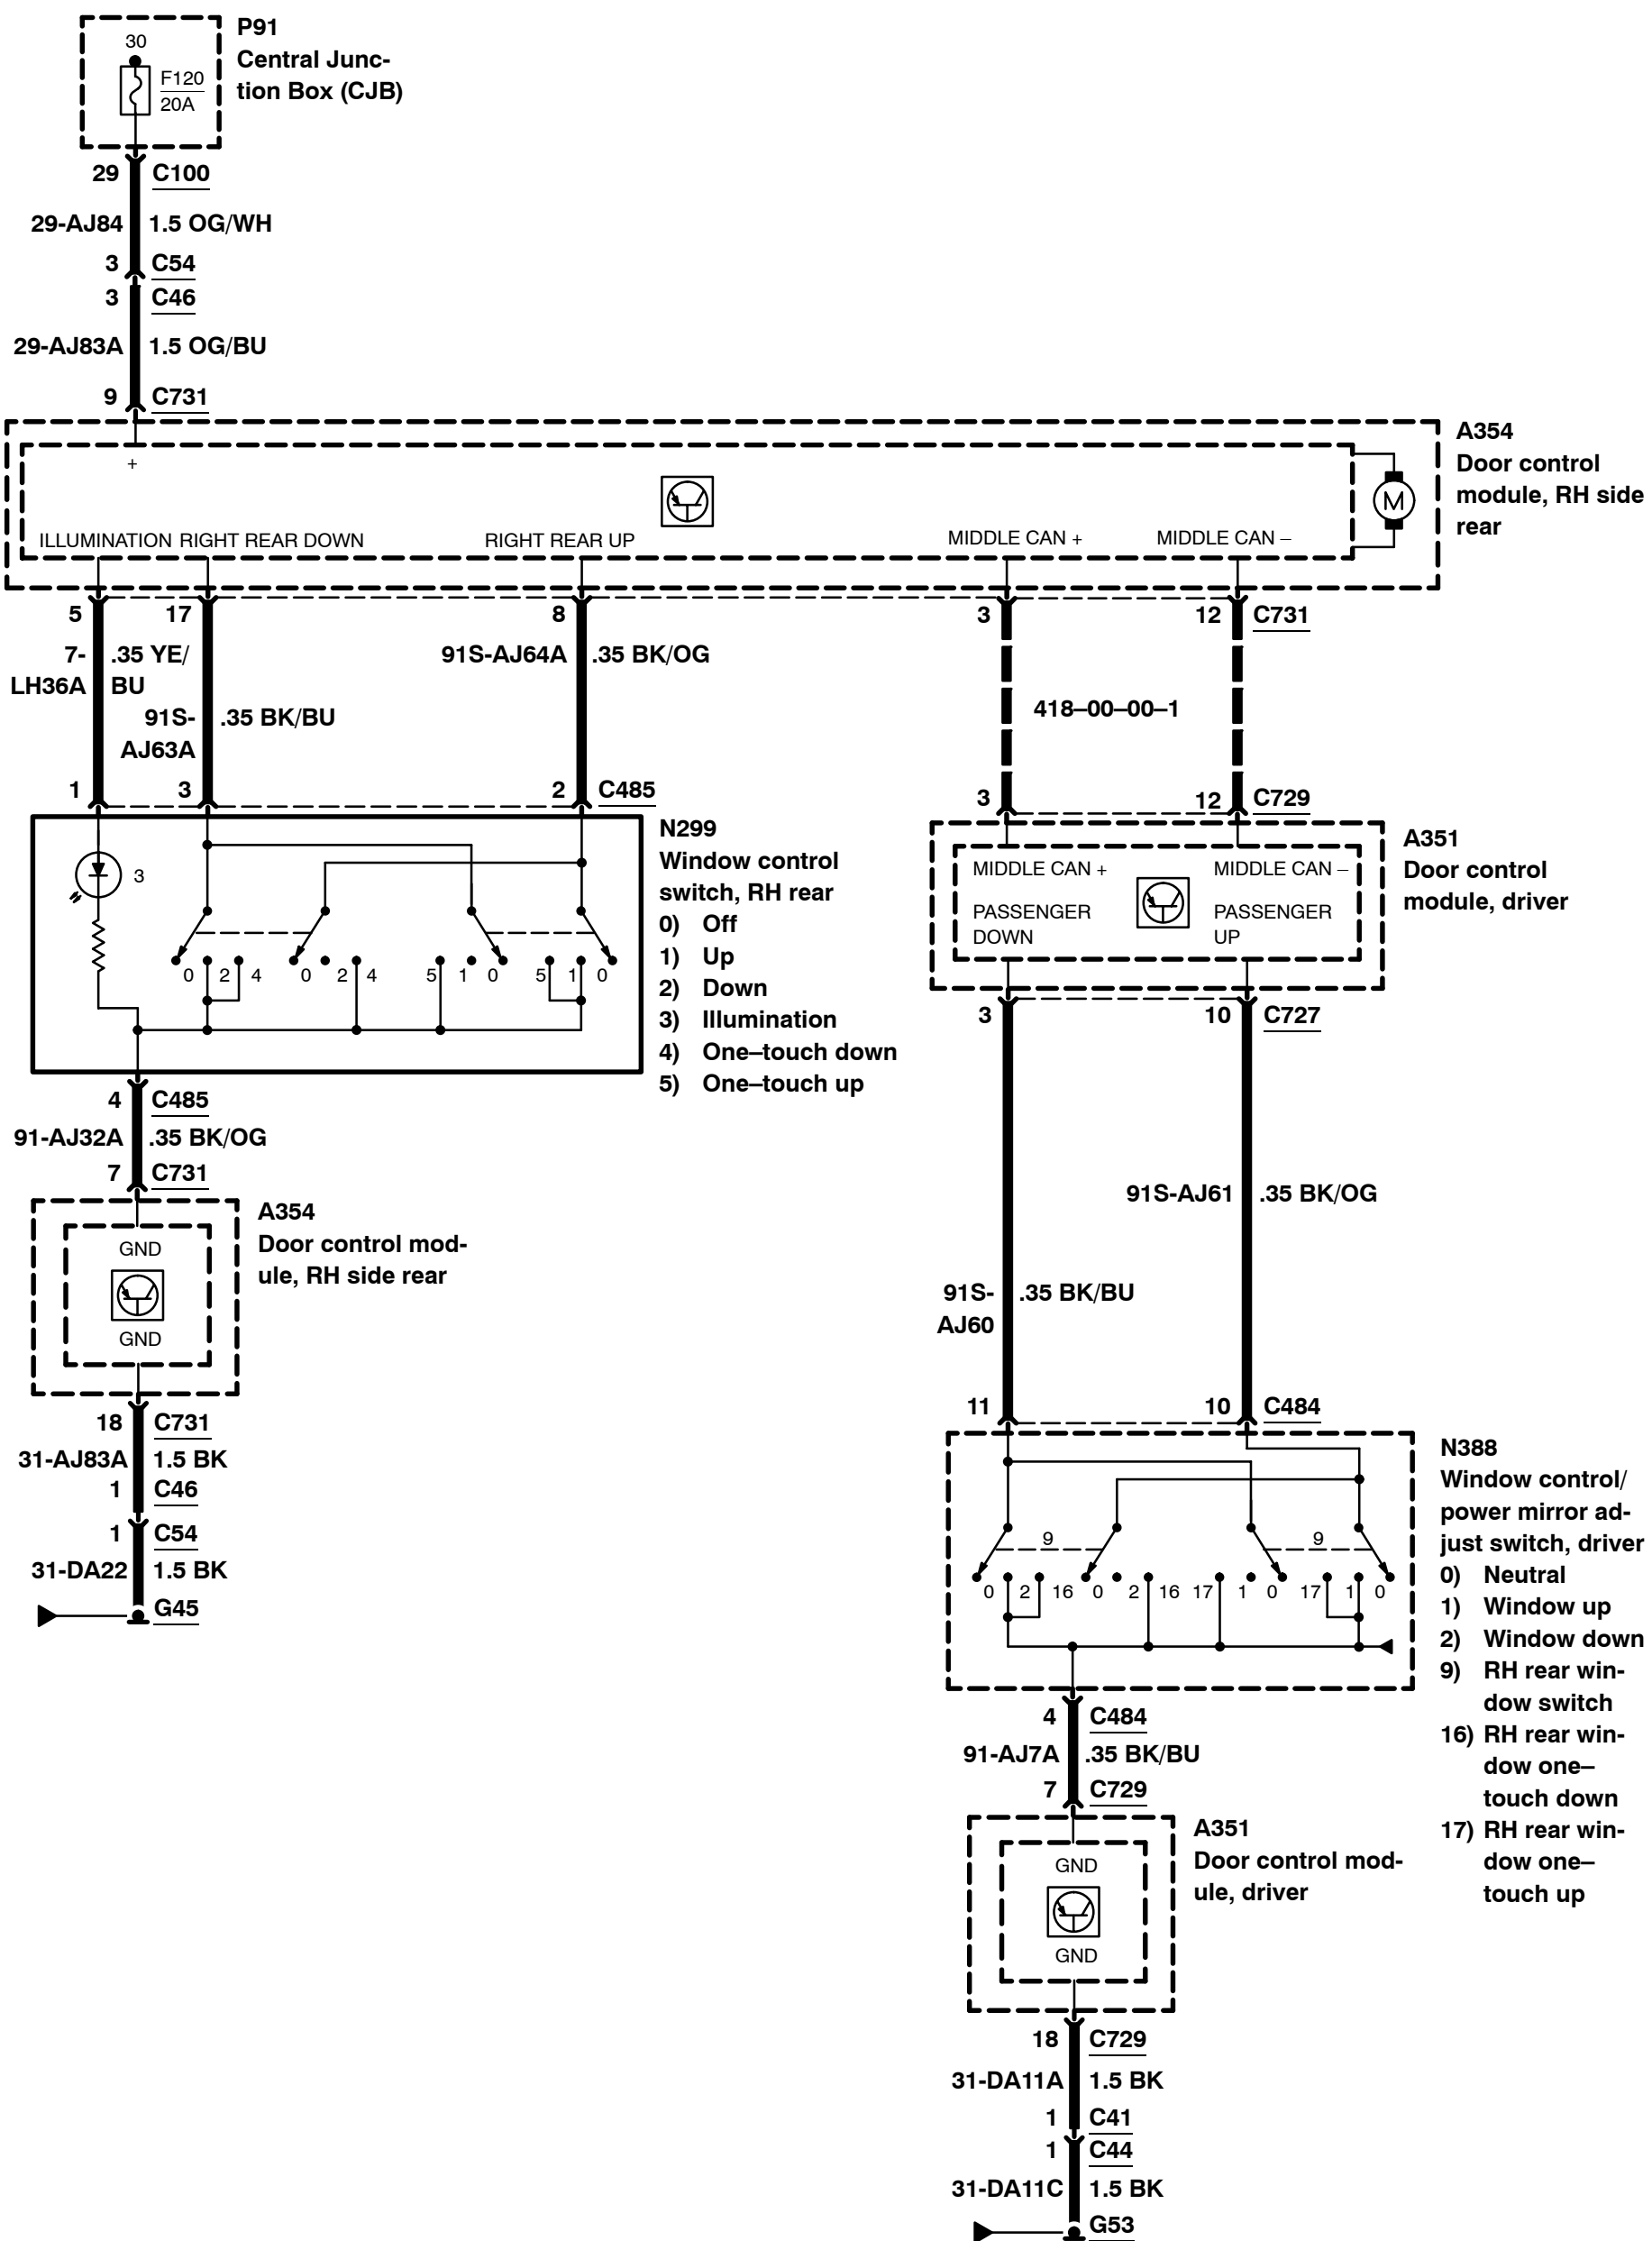


# Glass, Frames and Mechanisms – LHD, with front and rear power windows, as of model year 2009

02/2008  
501-11-00-11  
2008.25  
Focus

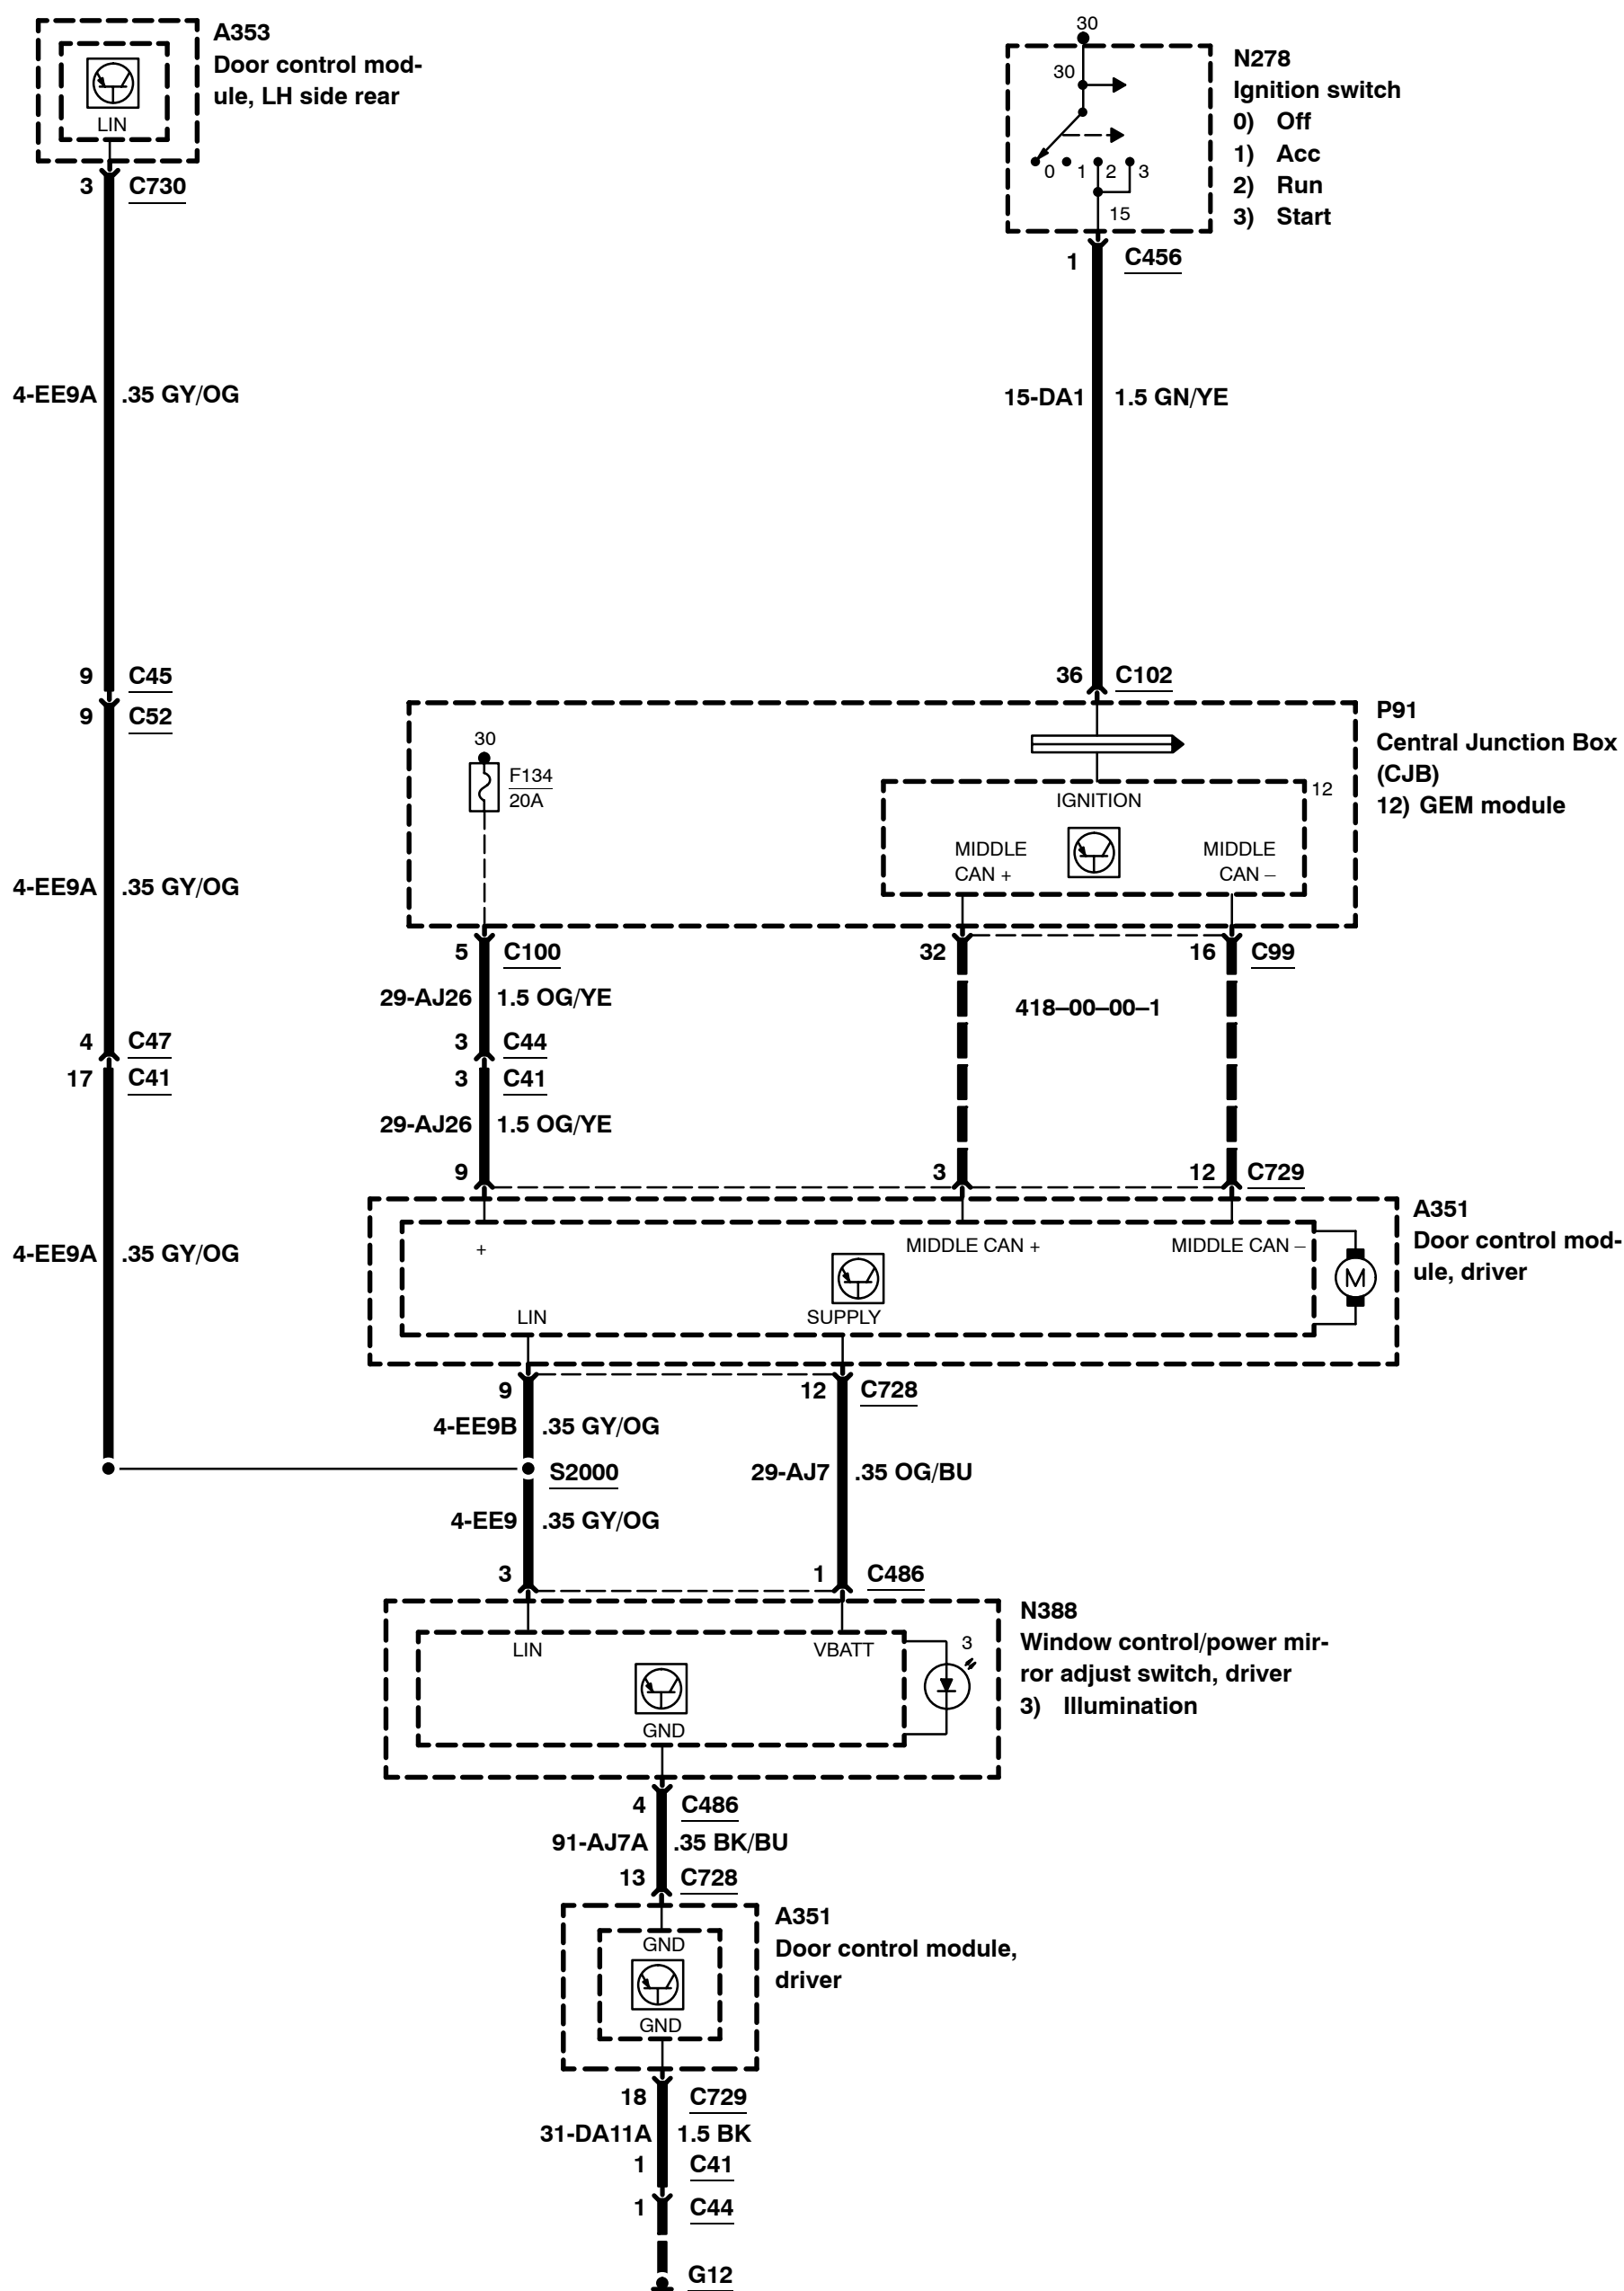


# Glass, Frames and Mechanisms – LHD, with front and rear power windows, as of model year 2009

02/2008  
501-11-00-12  
2008.25  
Focus

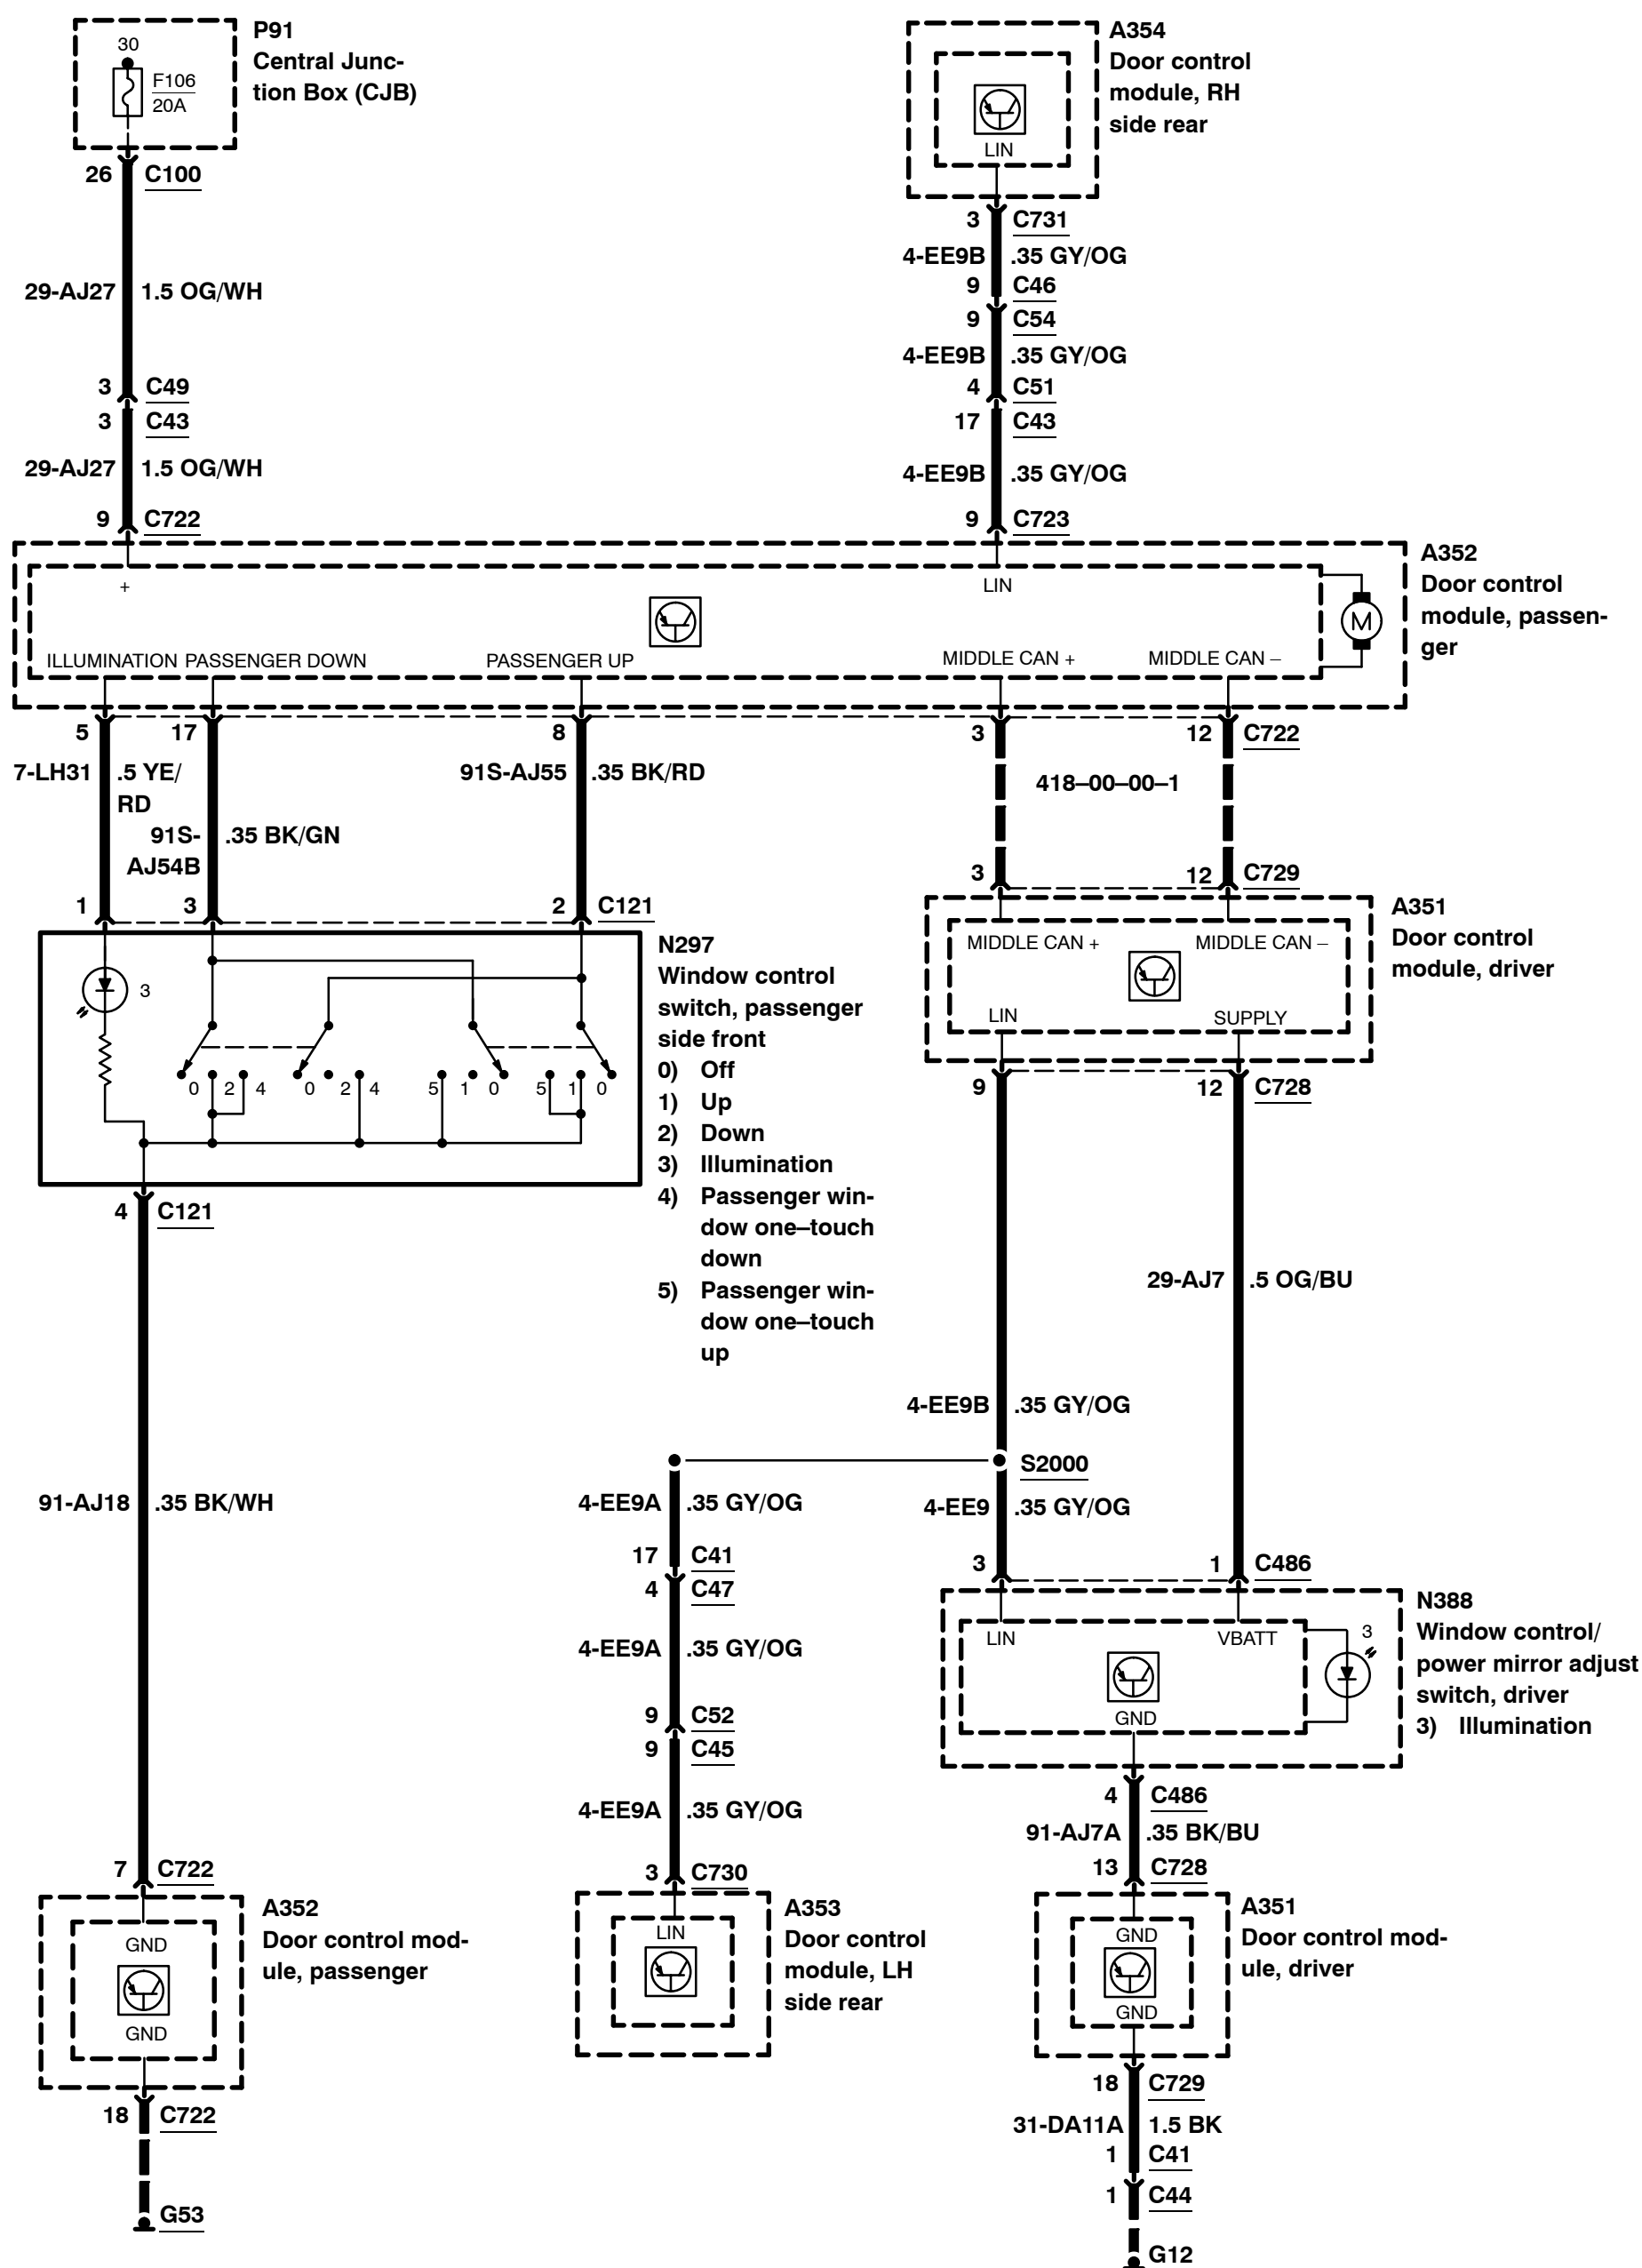

# Glass, Frames and Mechanisms – LHD, with front and rear power windows, as of model year 2009


02/2008  
501-11-00-13  
2008.25  
Focus

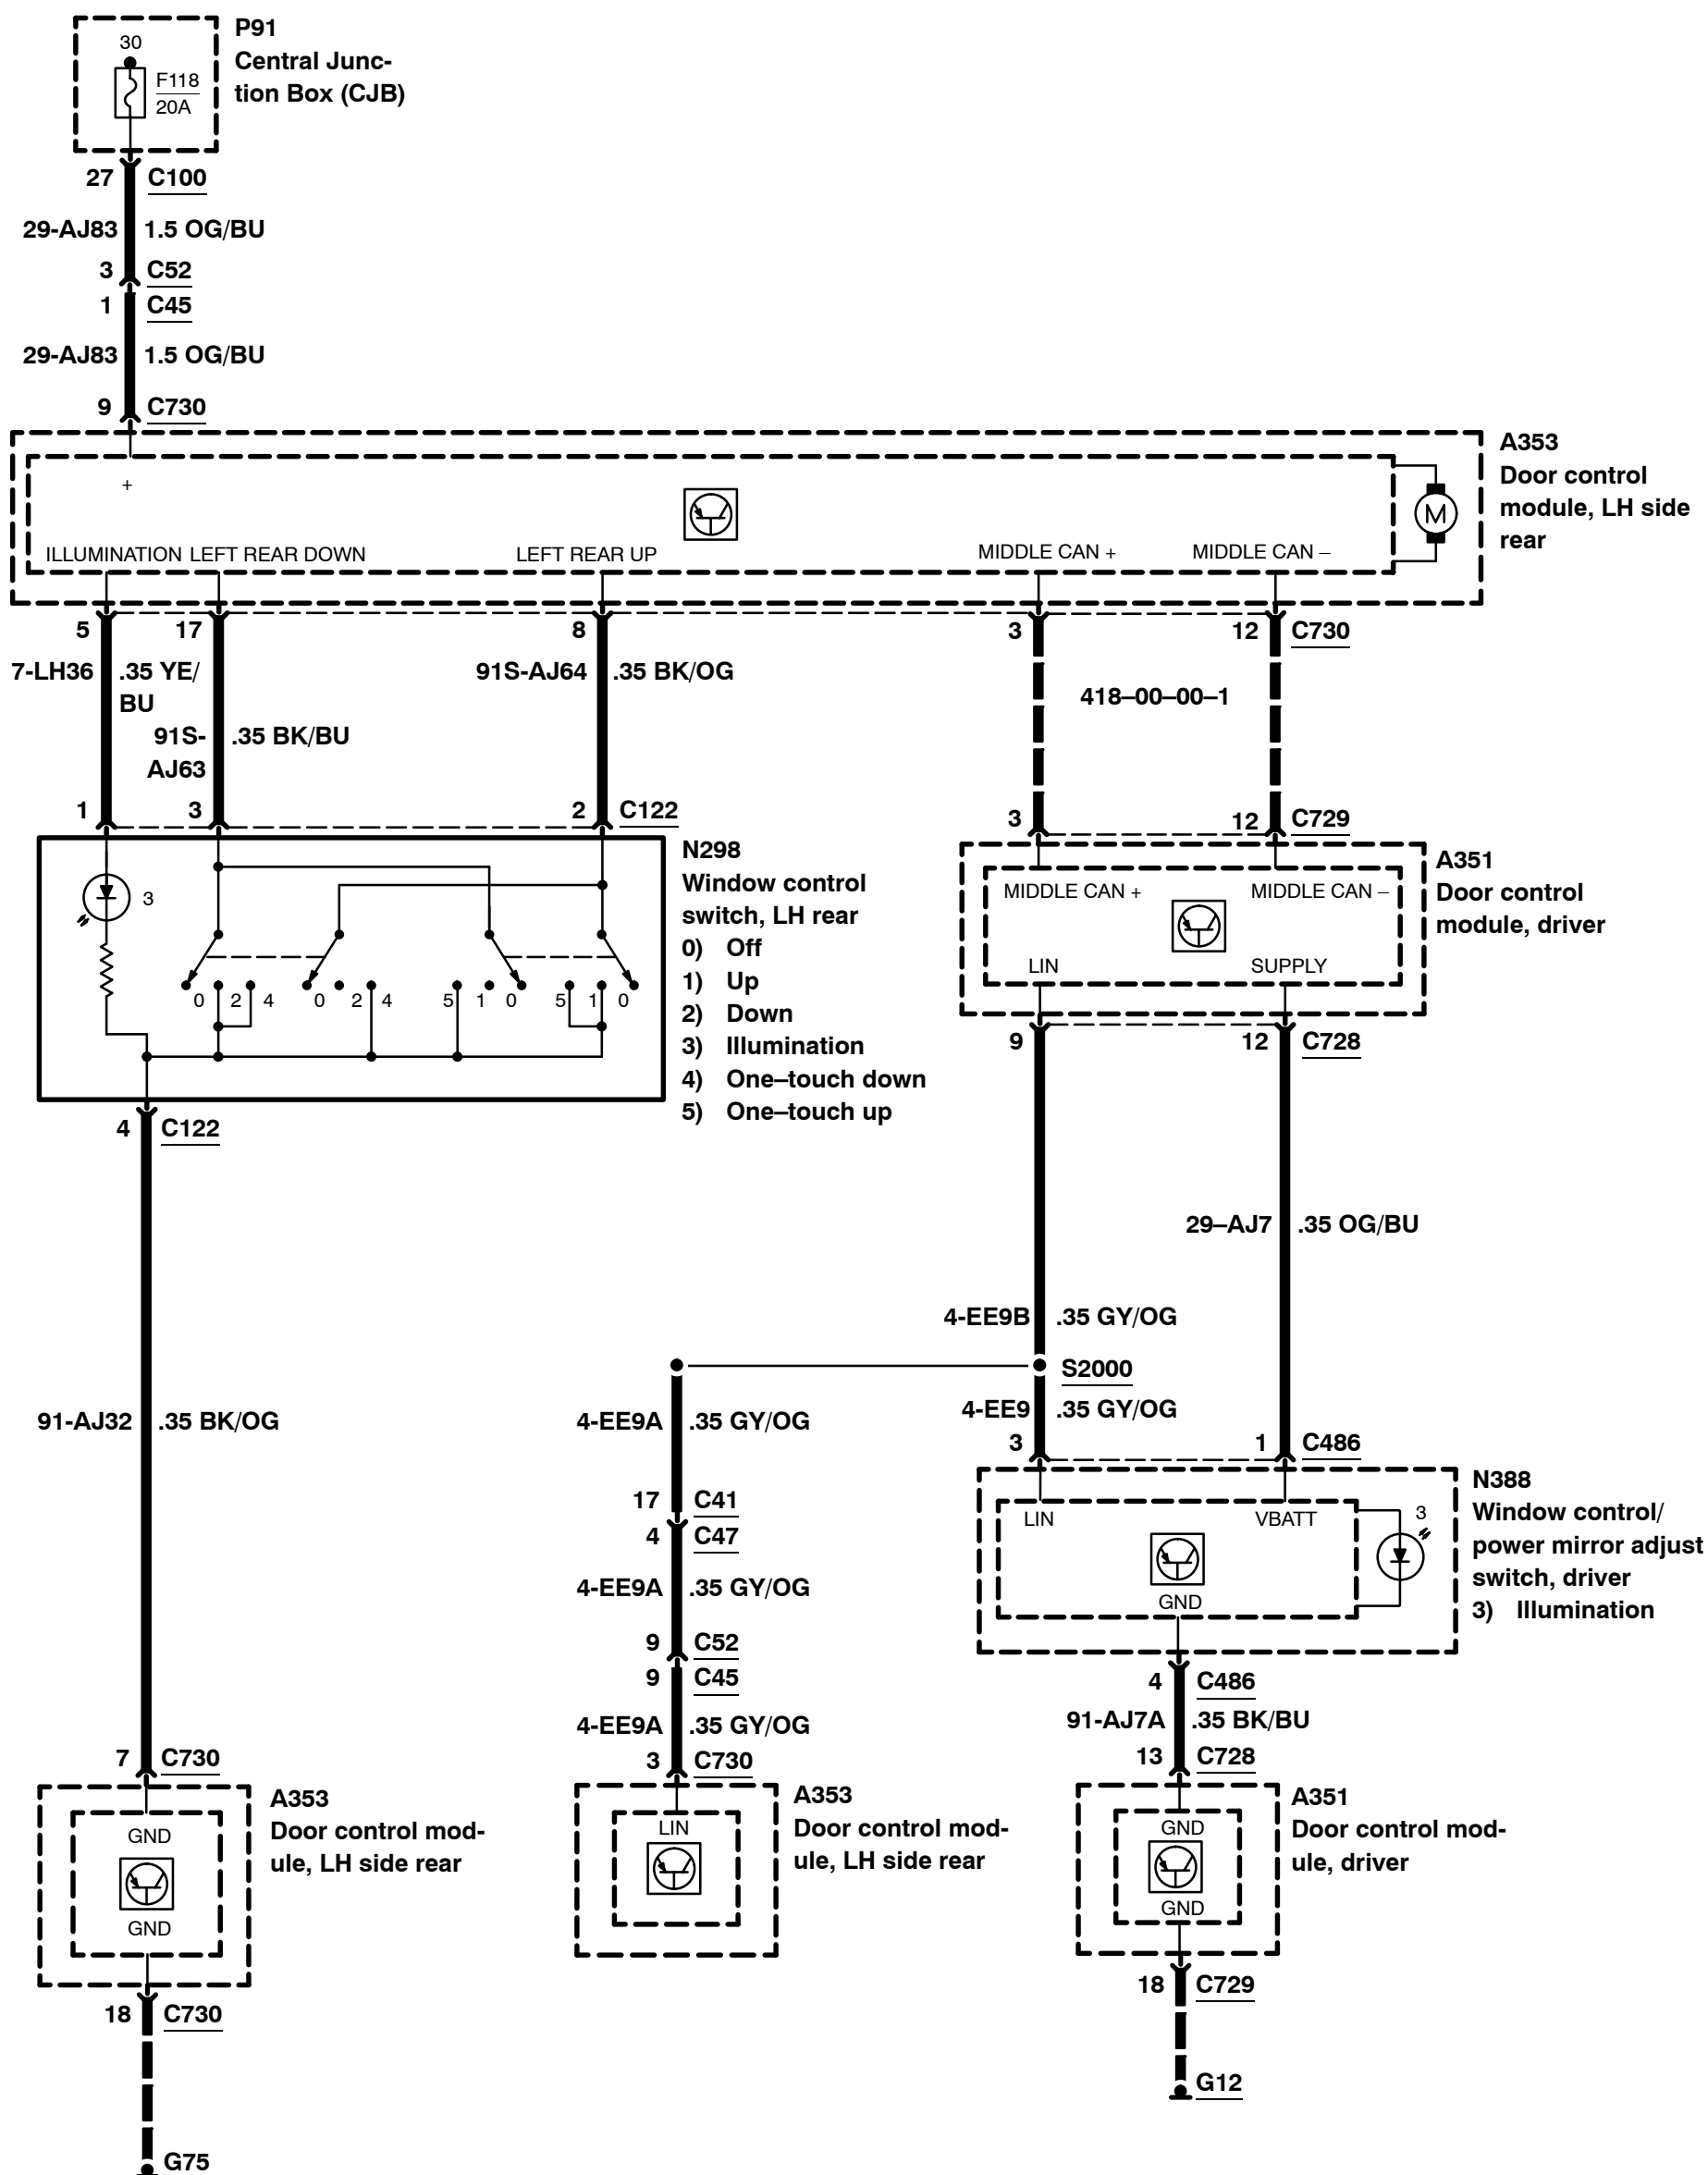




# Glass, Frames and Mechanisms – LHD, with front and rear power windows, as of model year 2009

02/2008  
501-11-00-14  
2008.25  
Focus

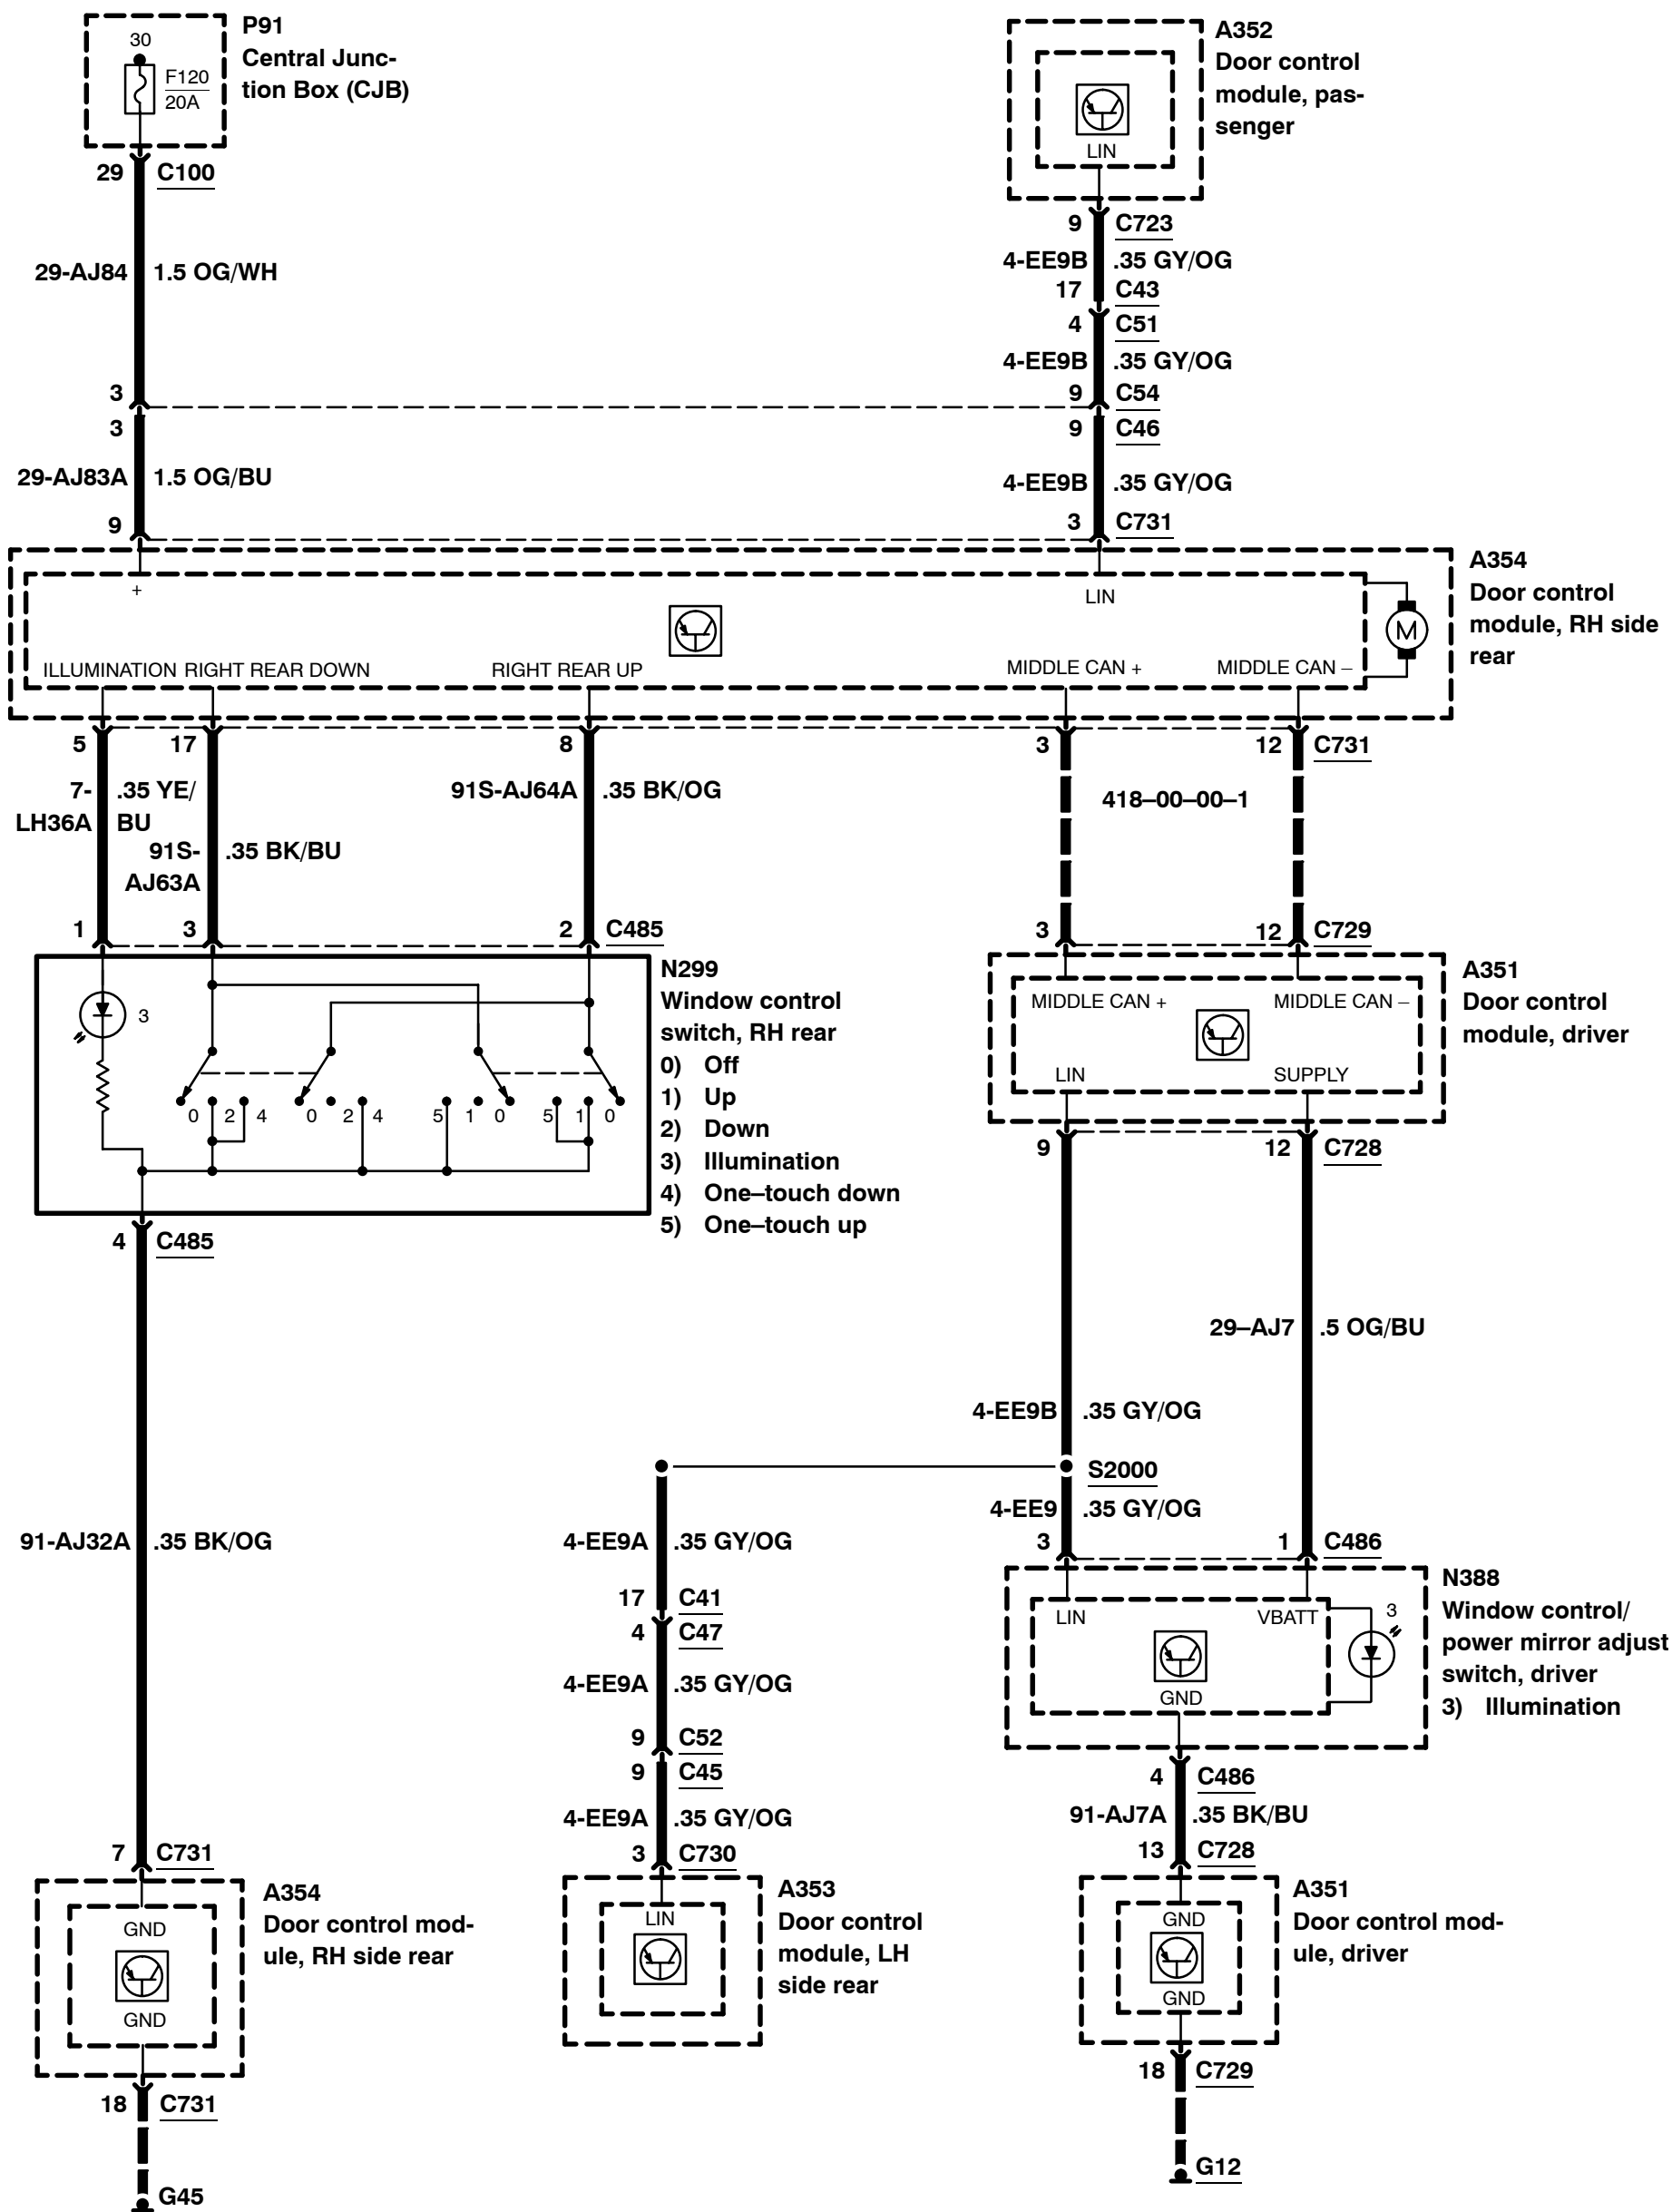

Glass, Frames and Mechanisms – RHD, with front and rear power windows, before model year 2009


02/2008  
501-11-00-15  
2008.25  
Focus

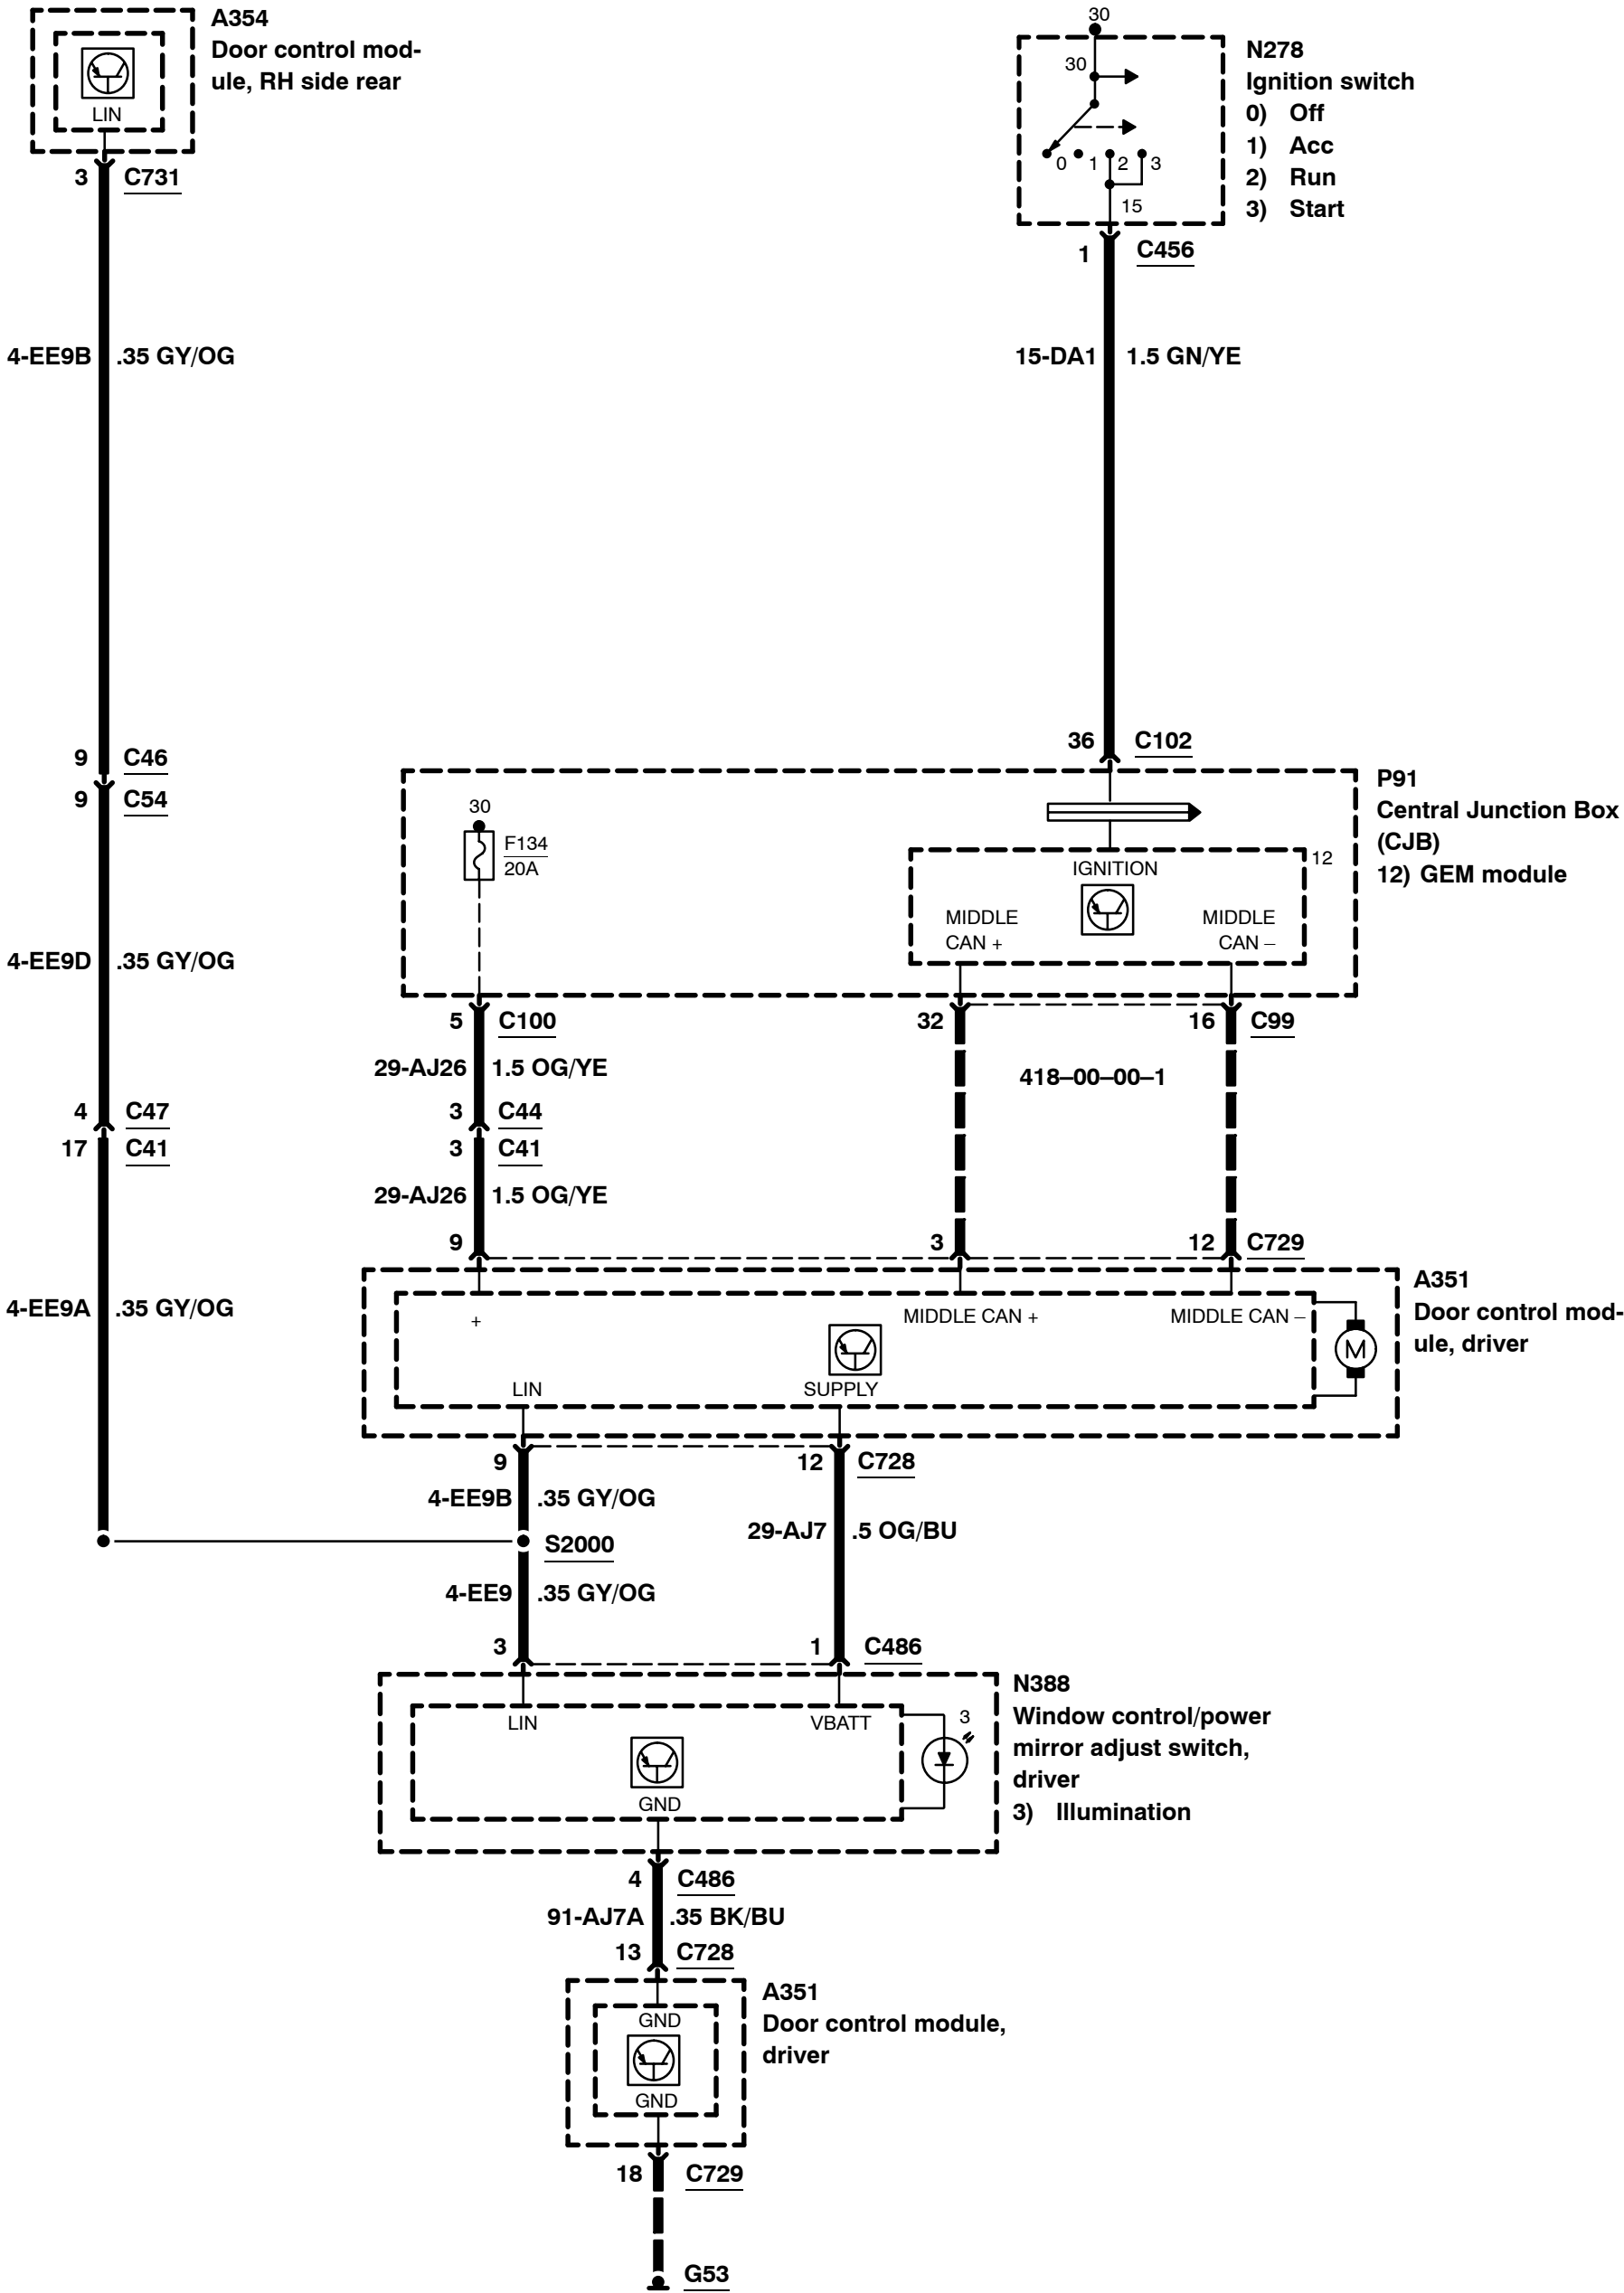




# Glass, Frames and Mechanisms – RHD, with front and rear power windows, as of model year 2009

02/2008  
501-11-00-16  
2008.25  
Focus

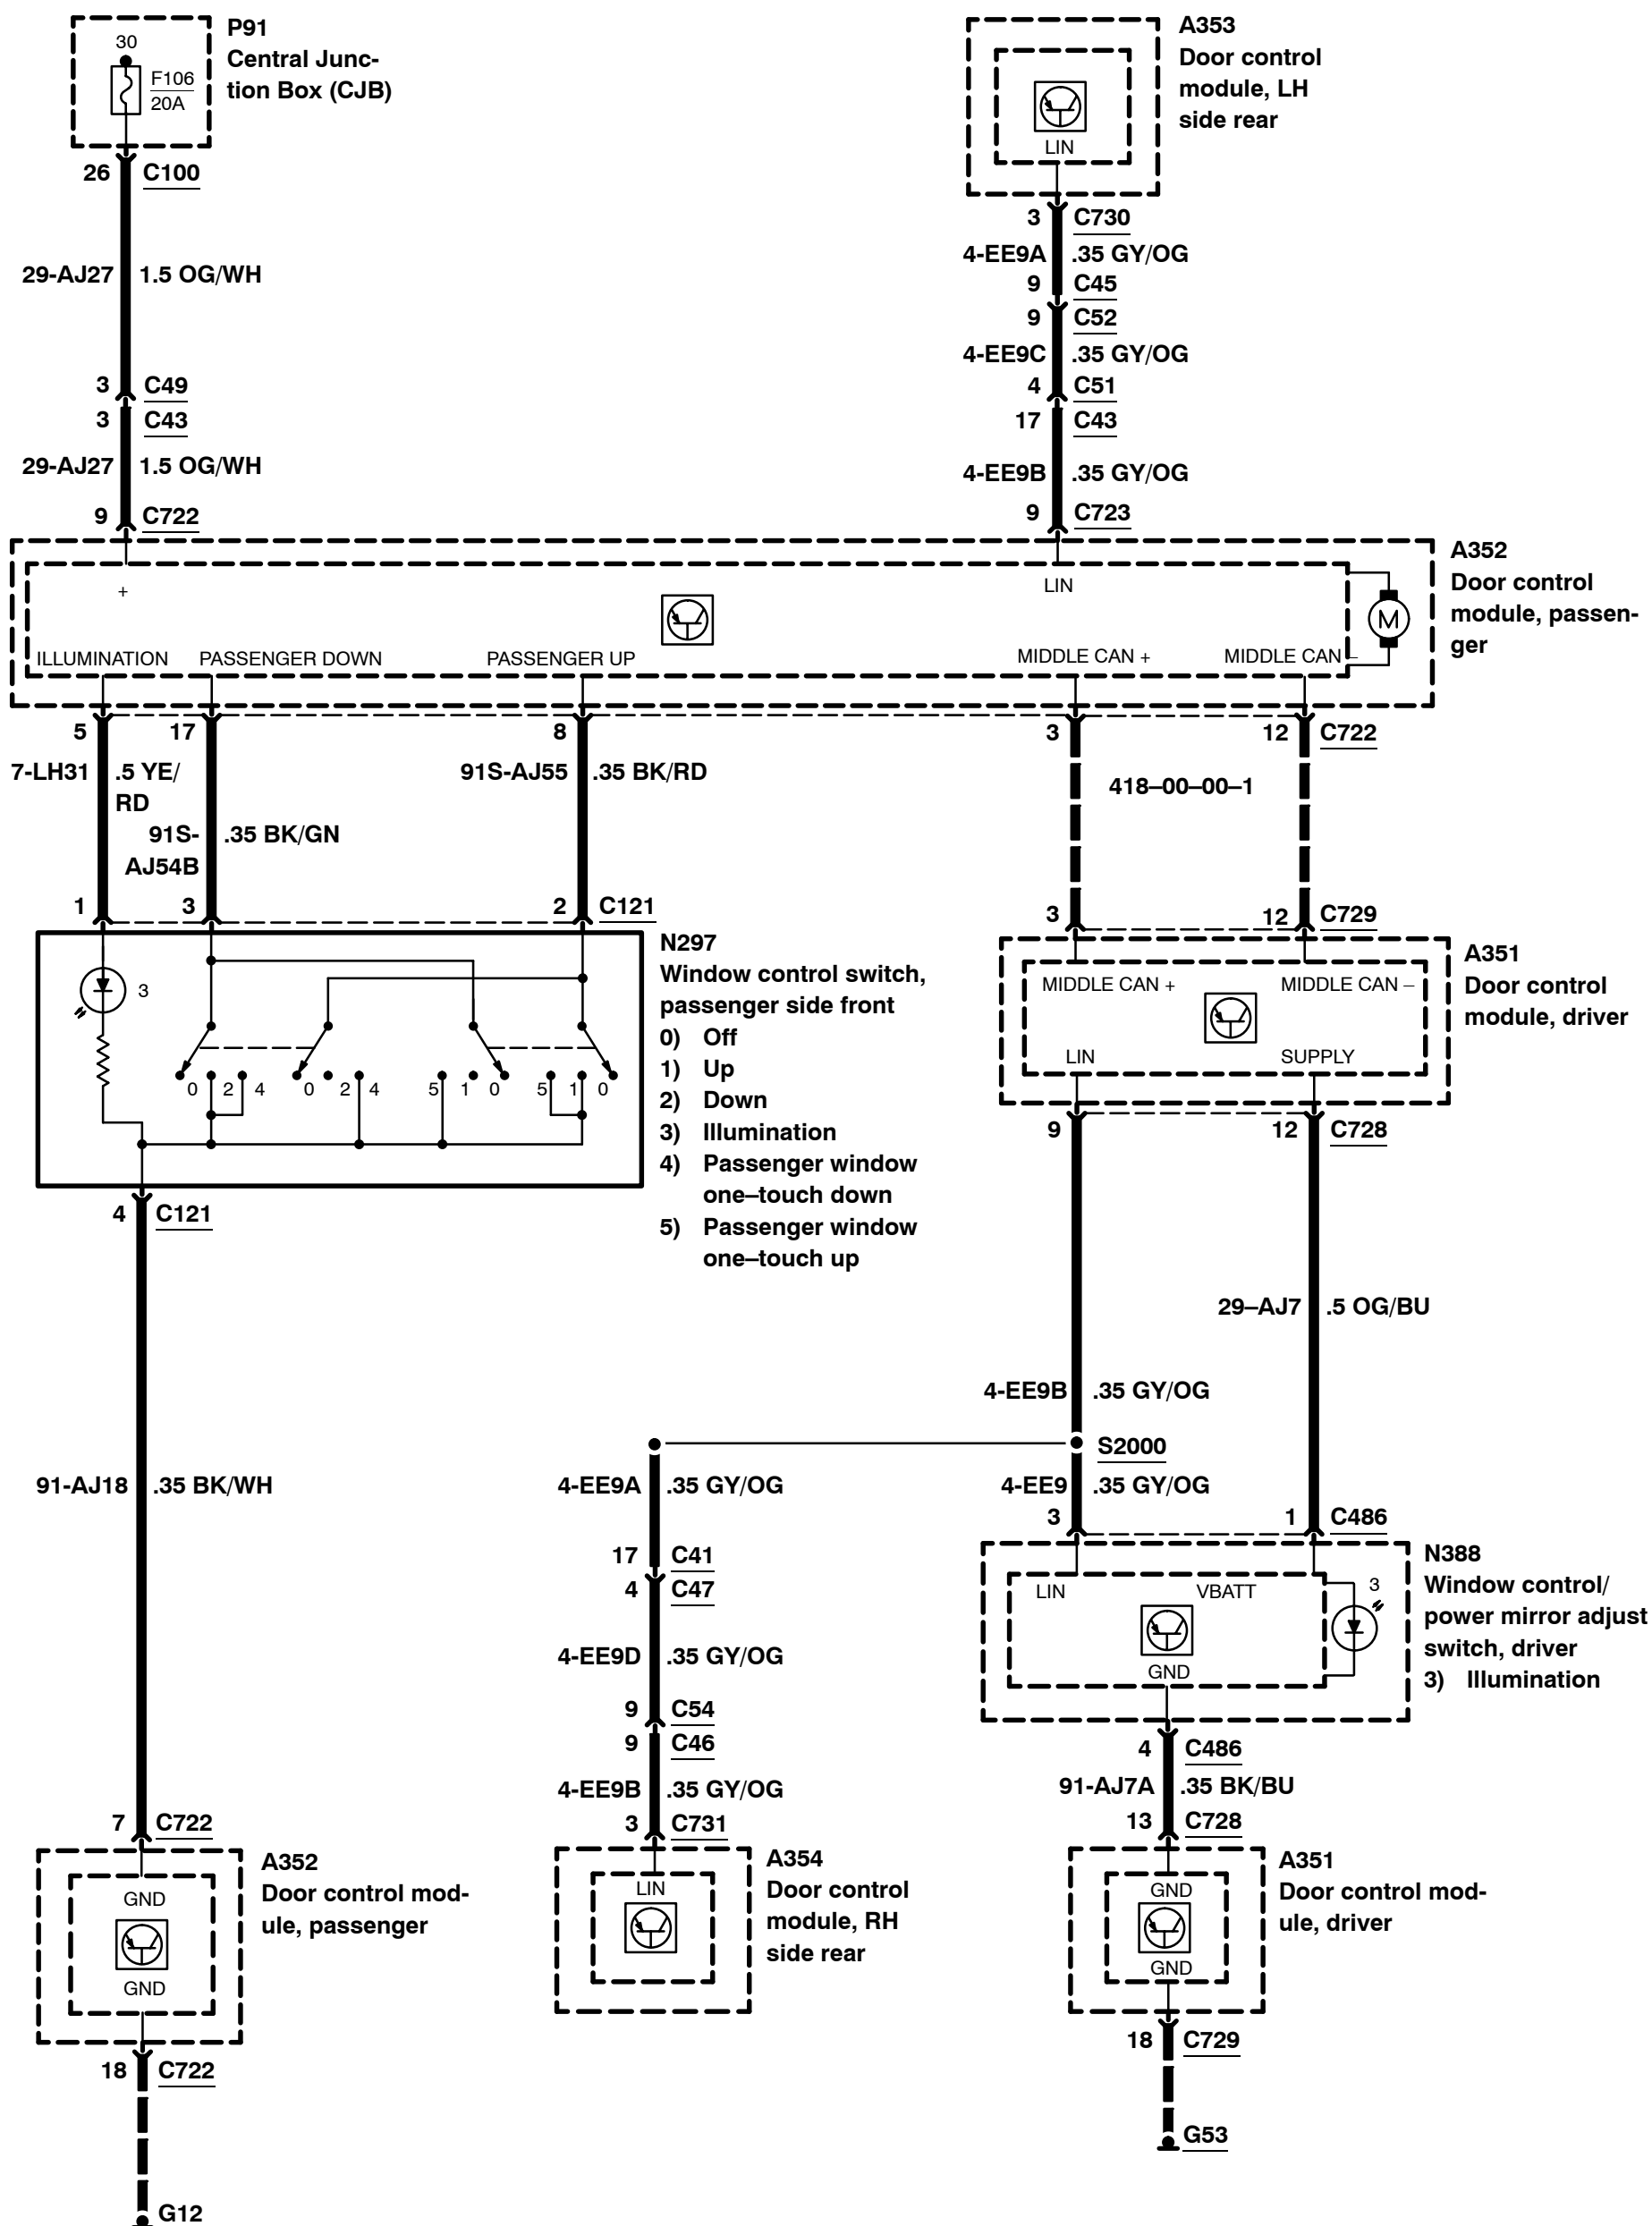


# Glass, Frames and Mechanisms – RHD, with front and rear power windows, as of model year 2009


02/2008  
501-11-00-17  
2008.25  
Focus

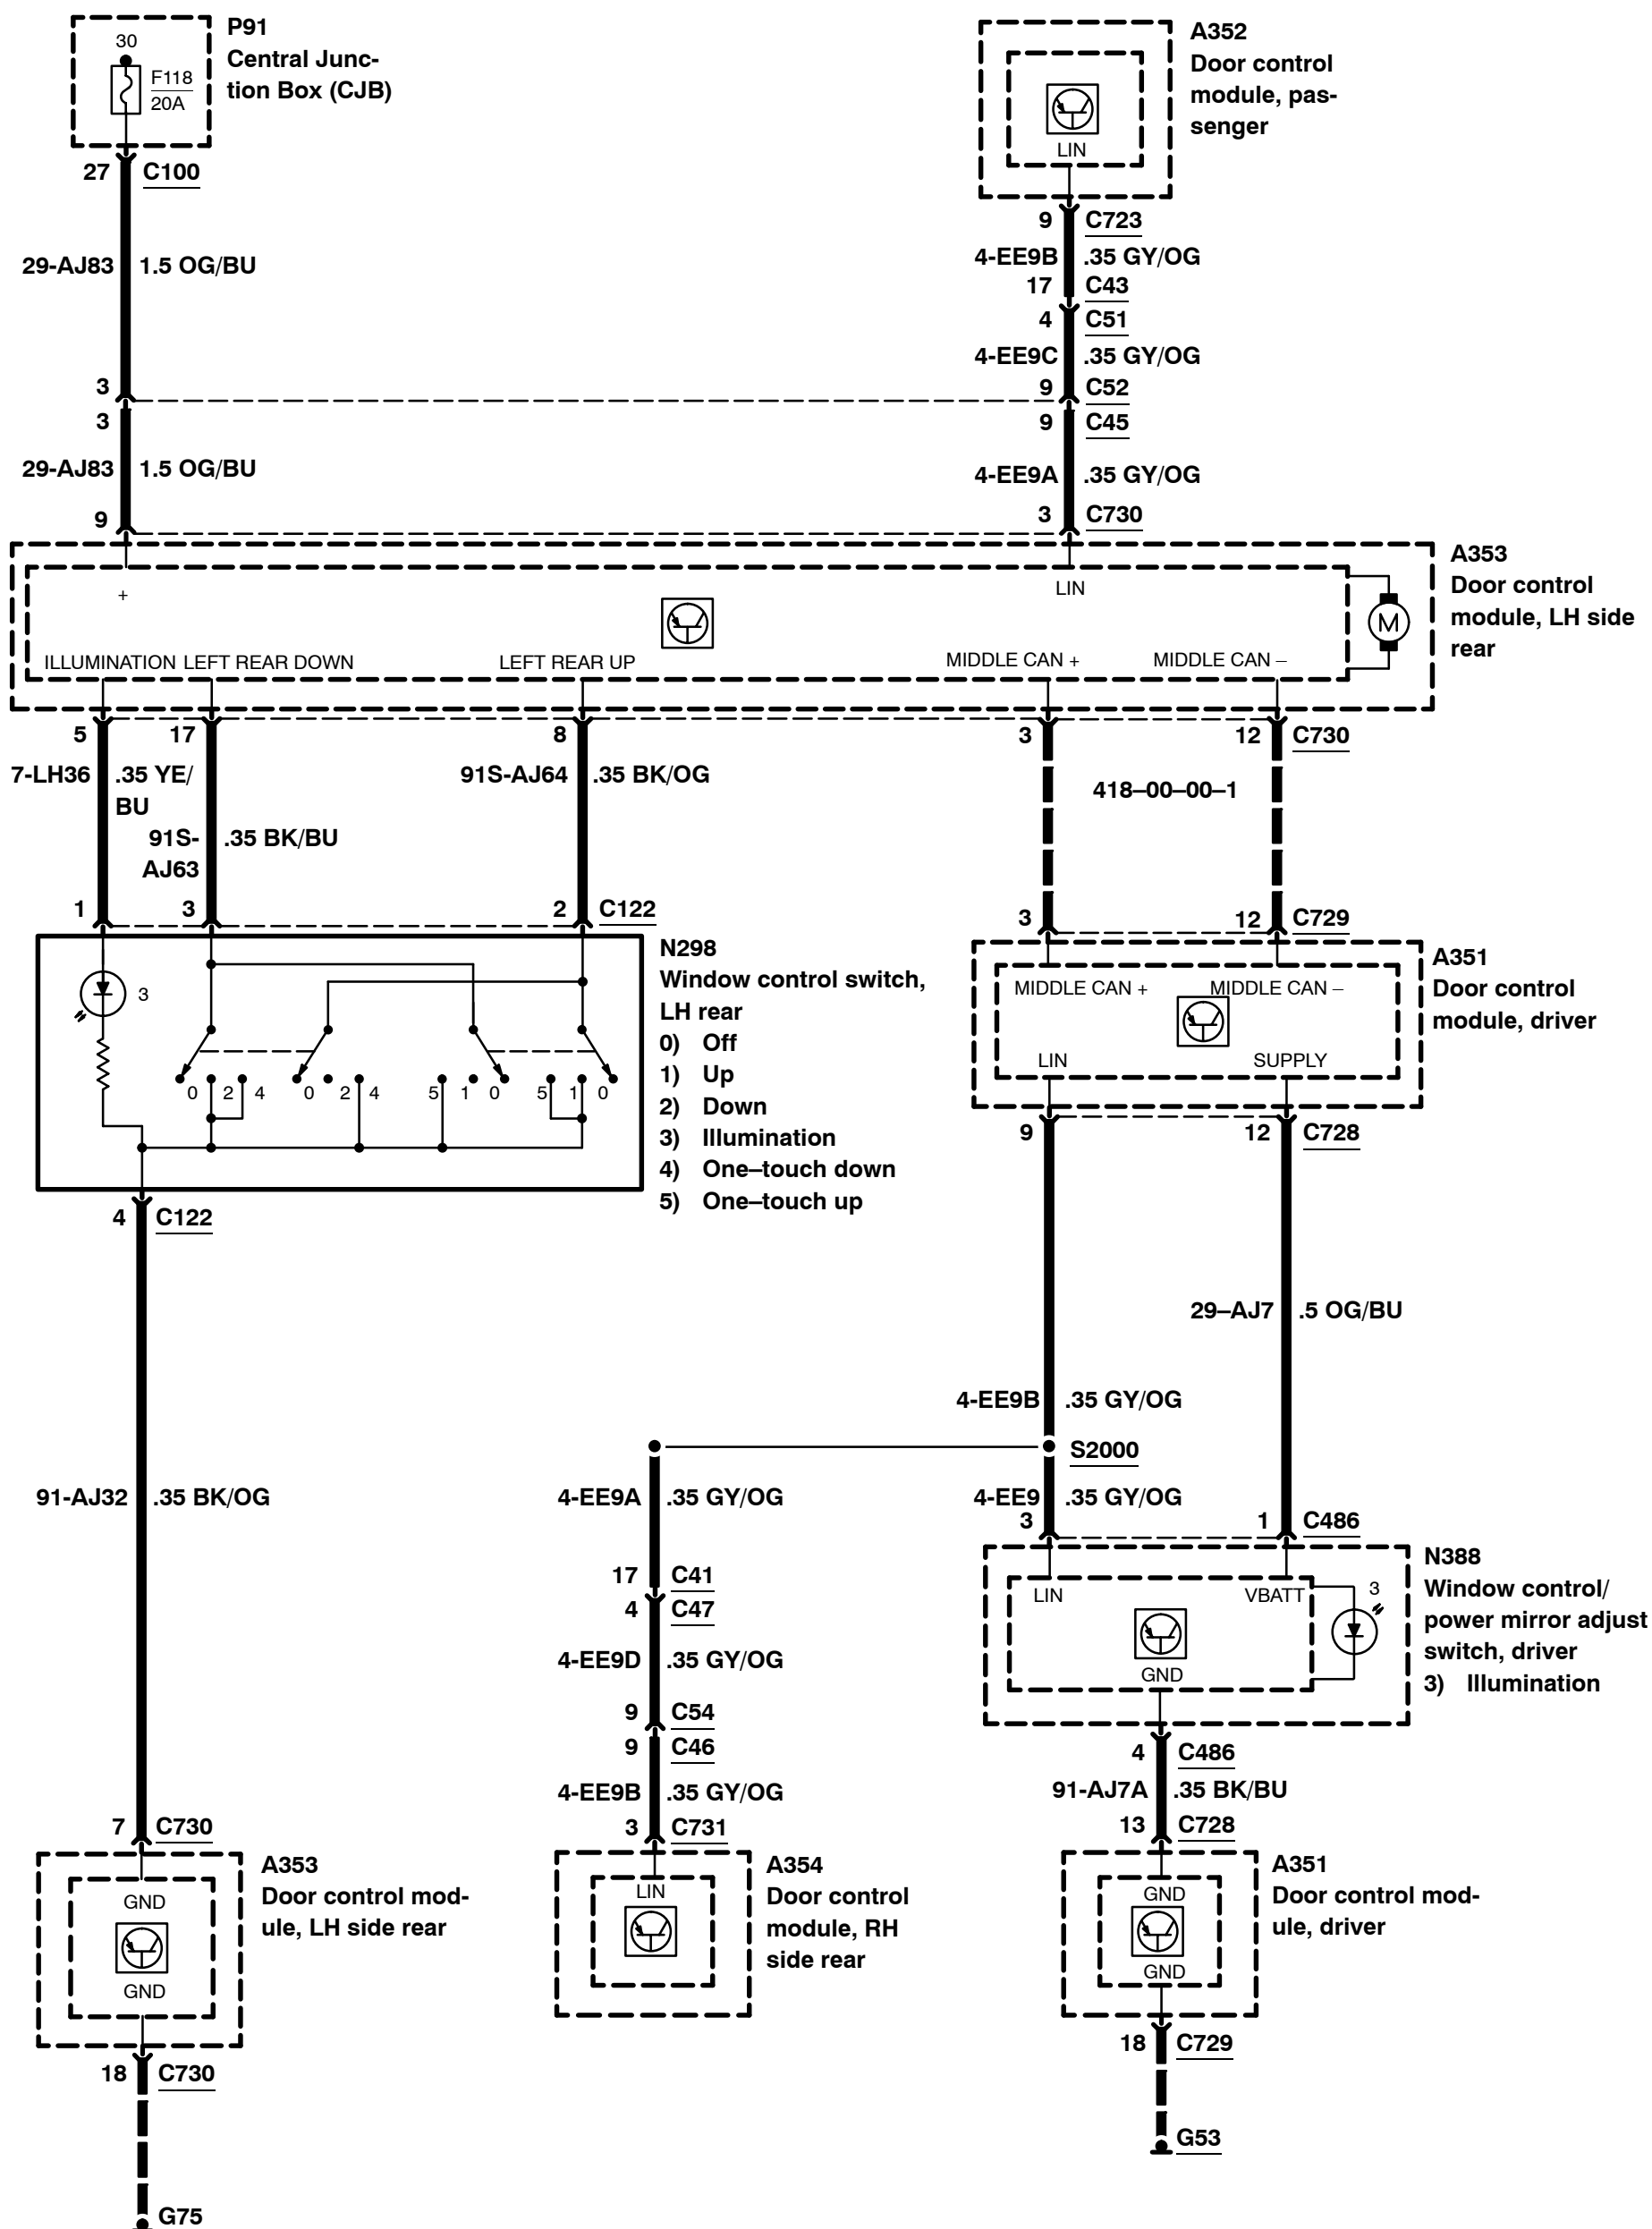


# Glass, Frames and Mechanisms – RHD, with front and rear power windows, as of model year 2009

02/2008  
501-11-00-18  
2008.25  
Focus

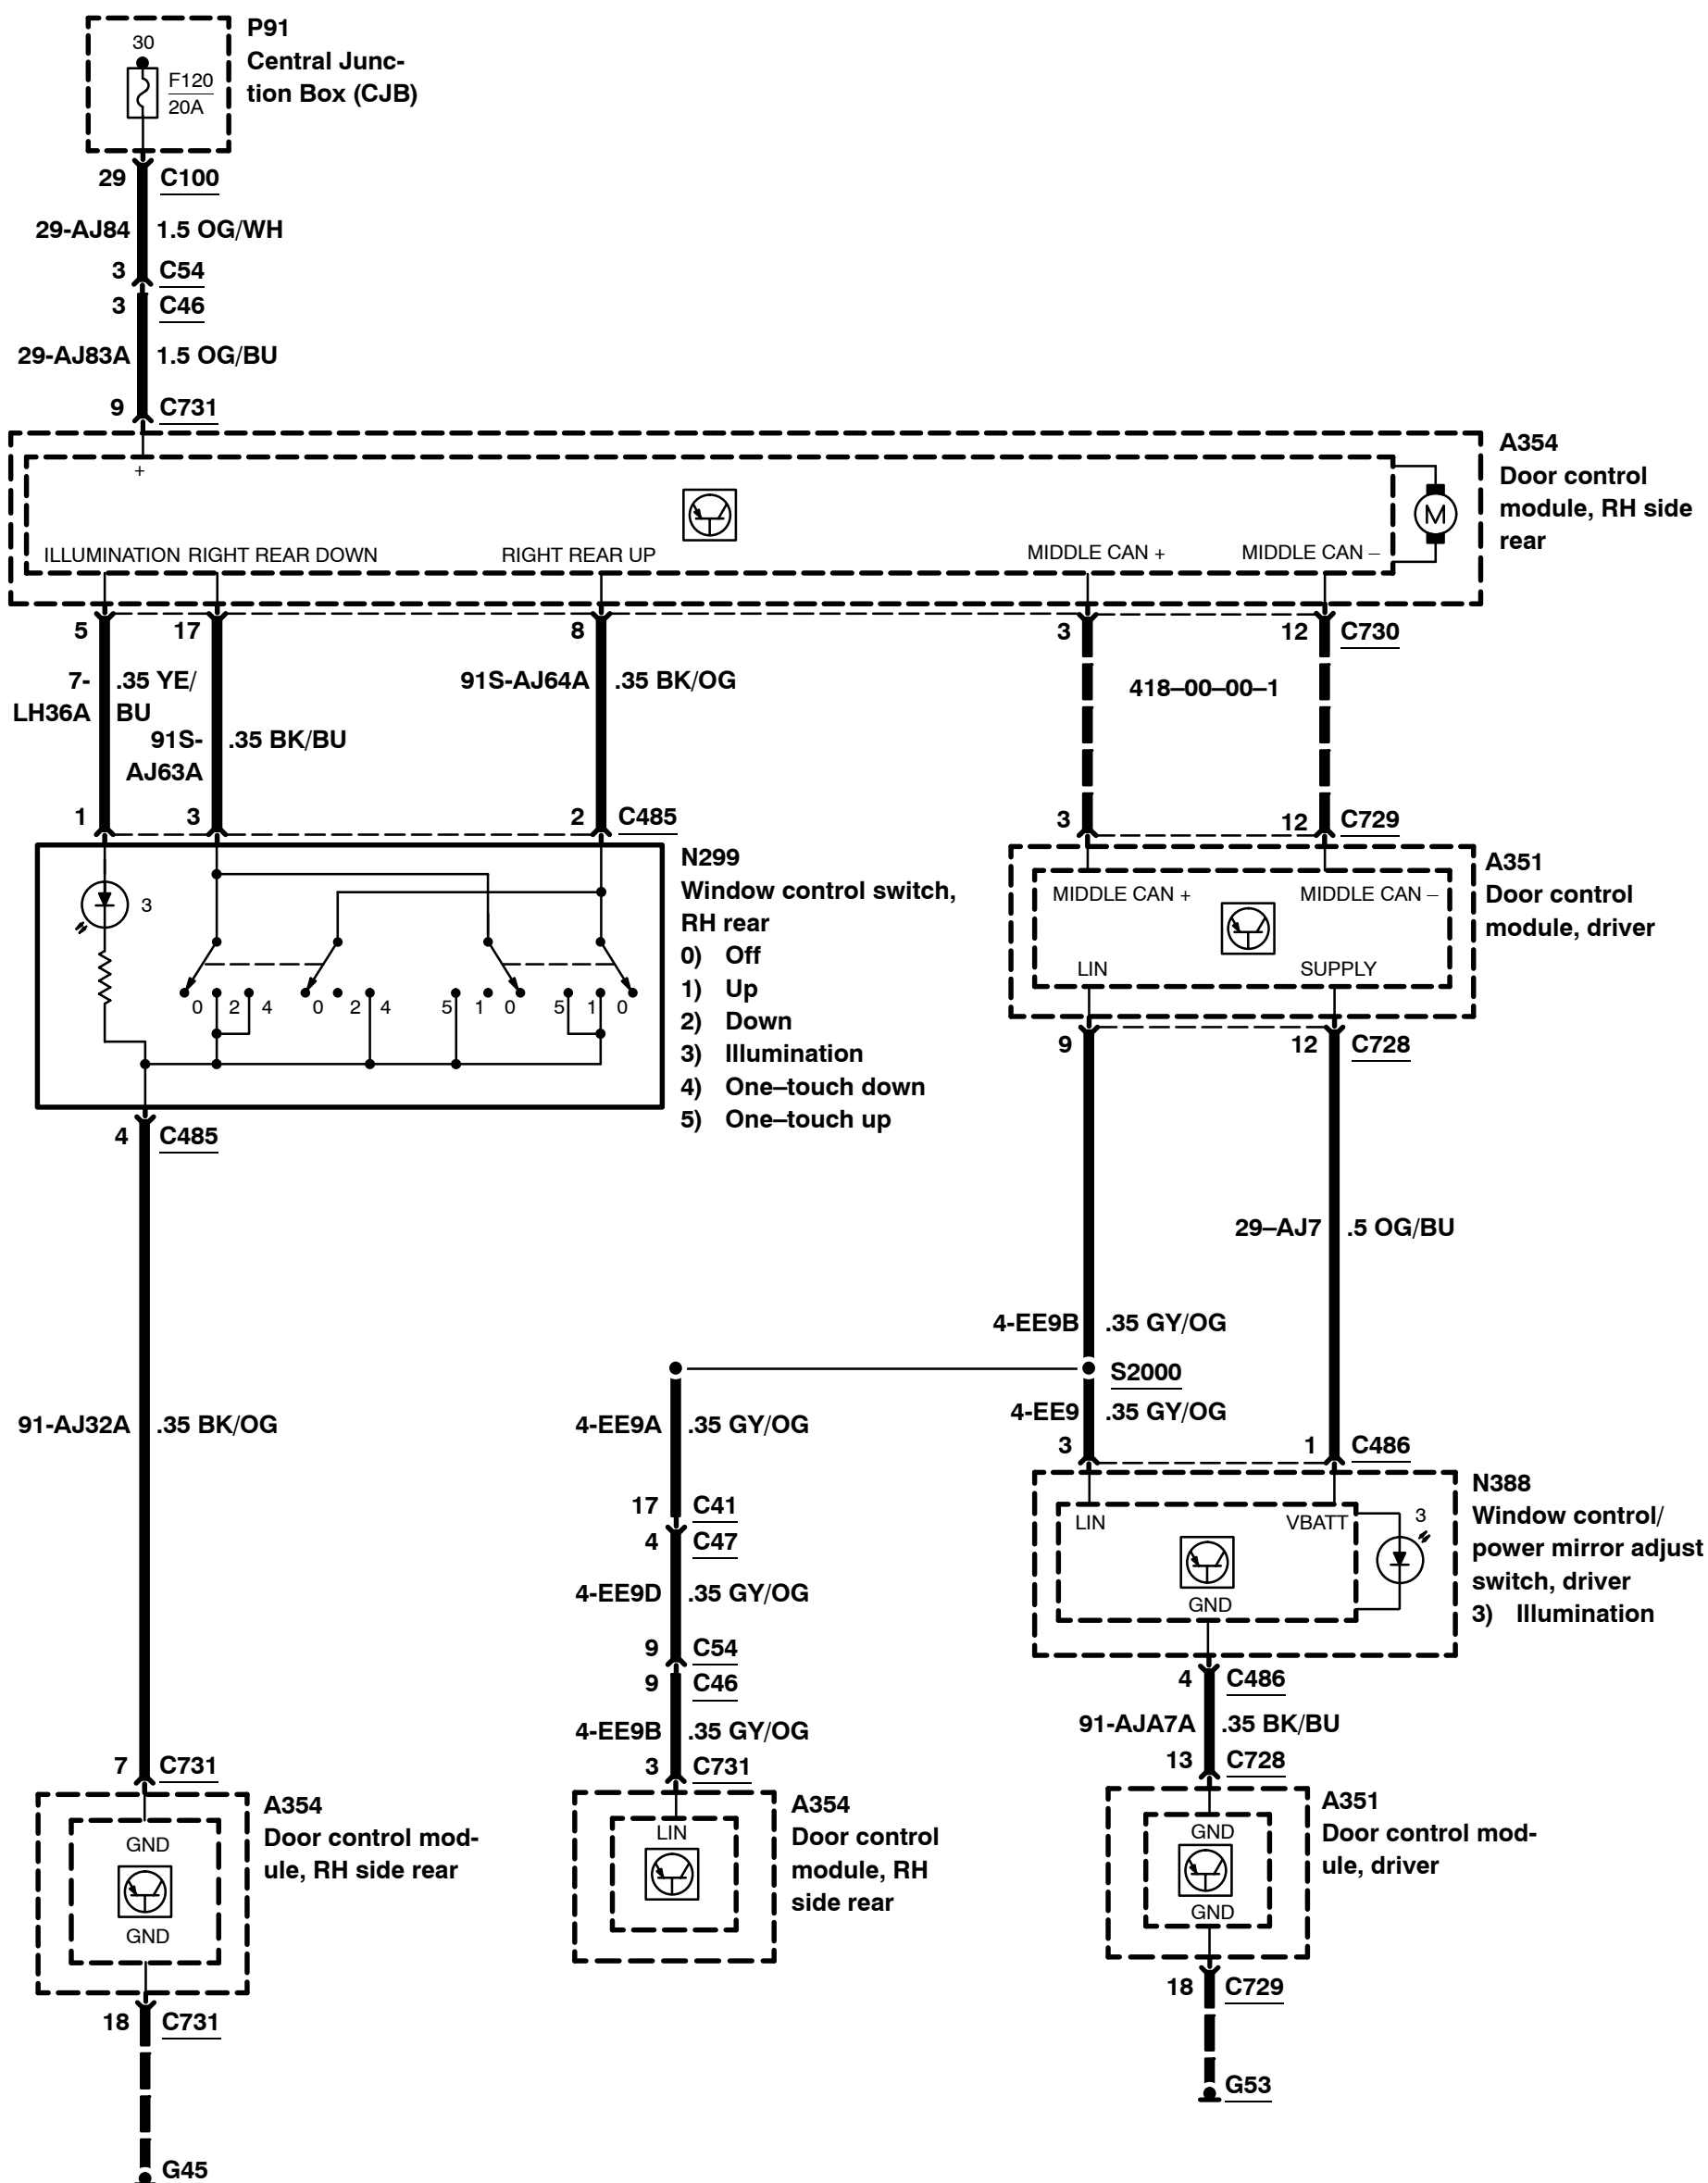


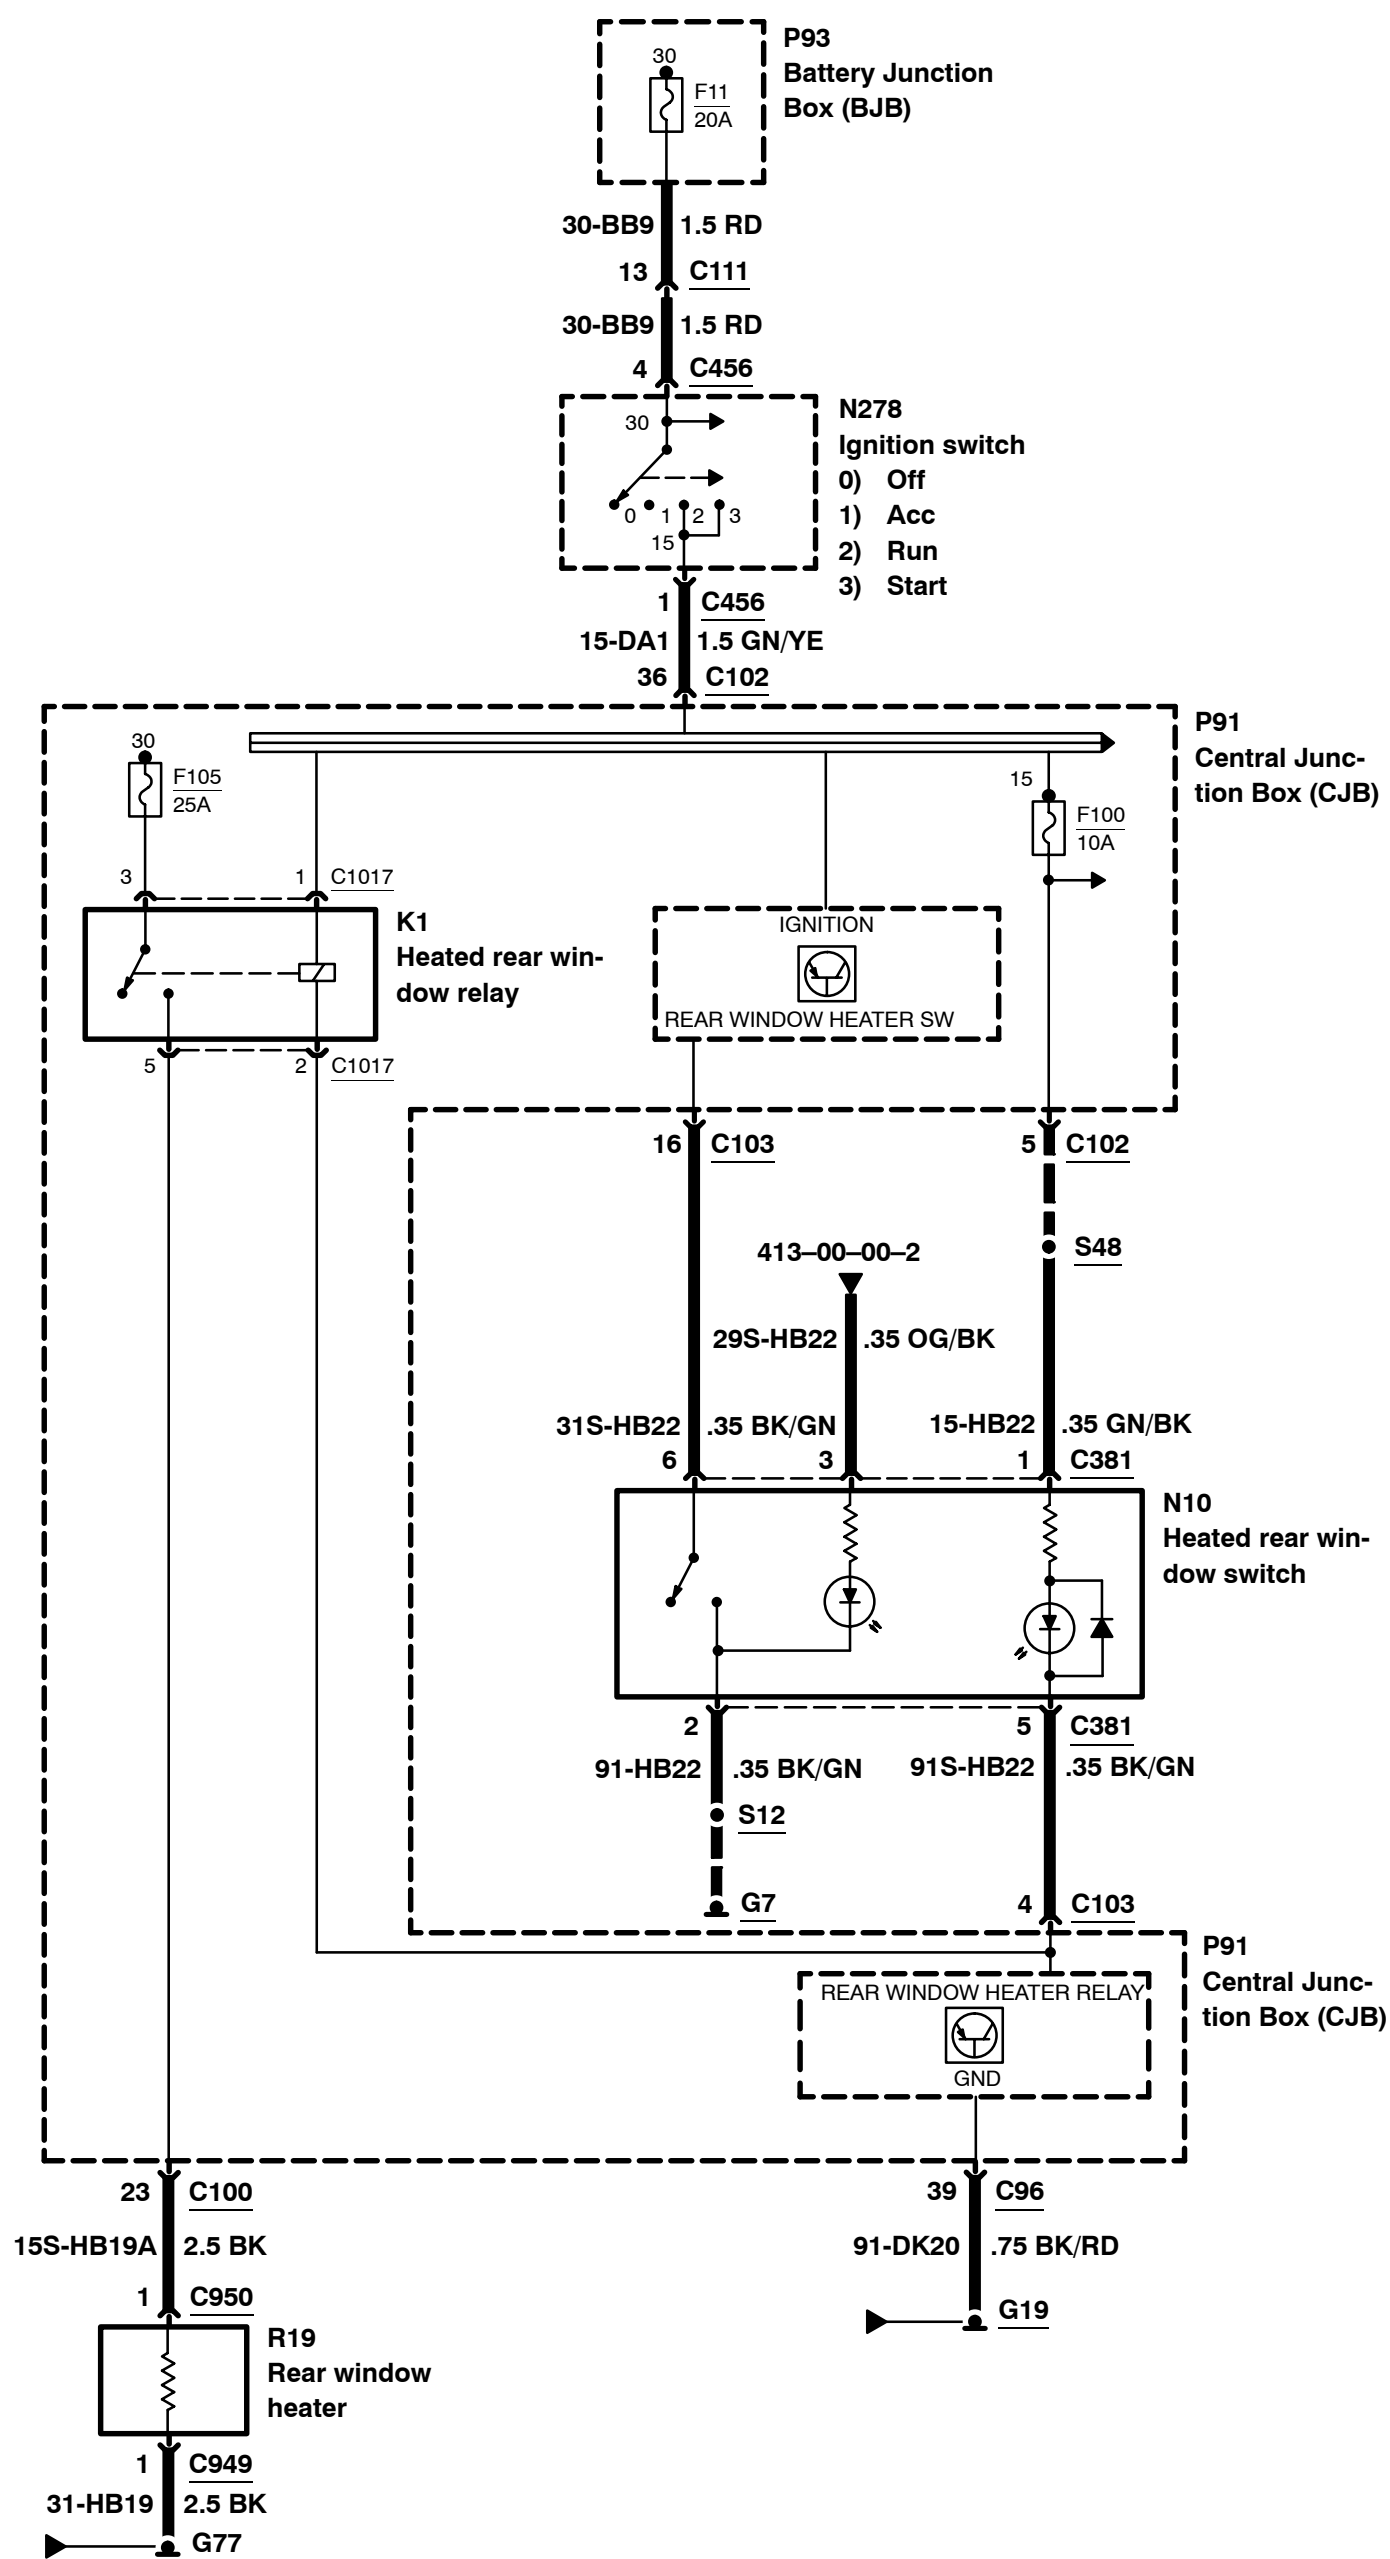

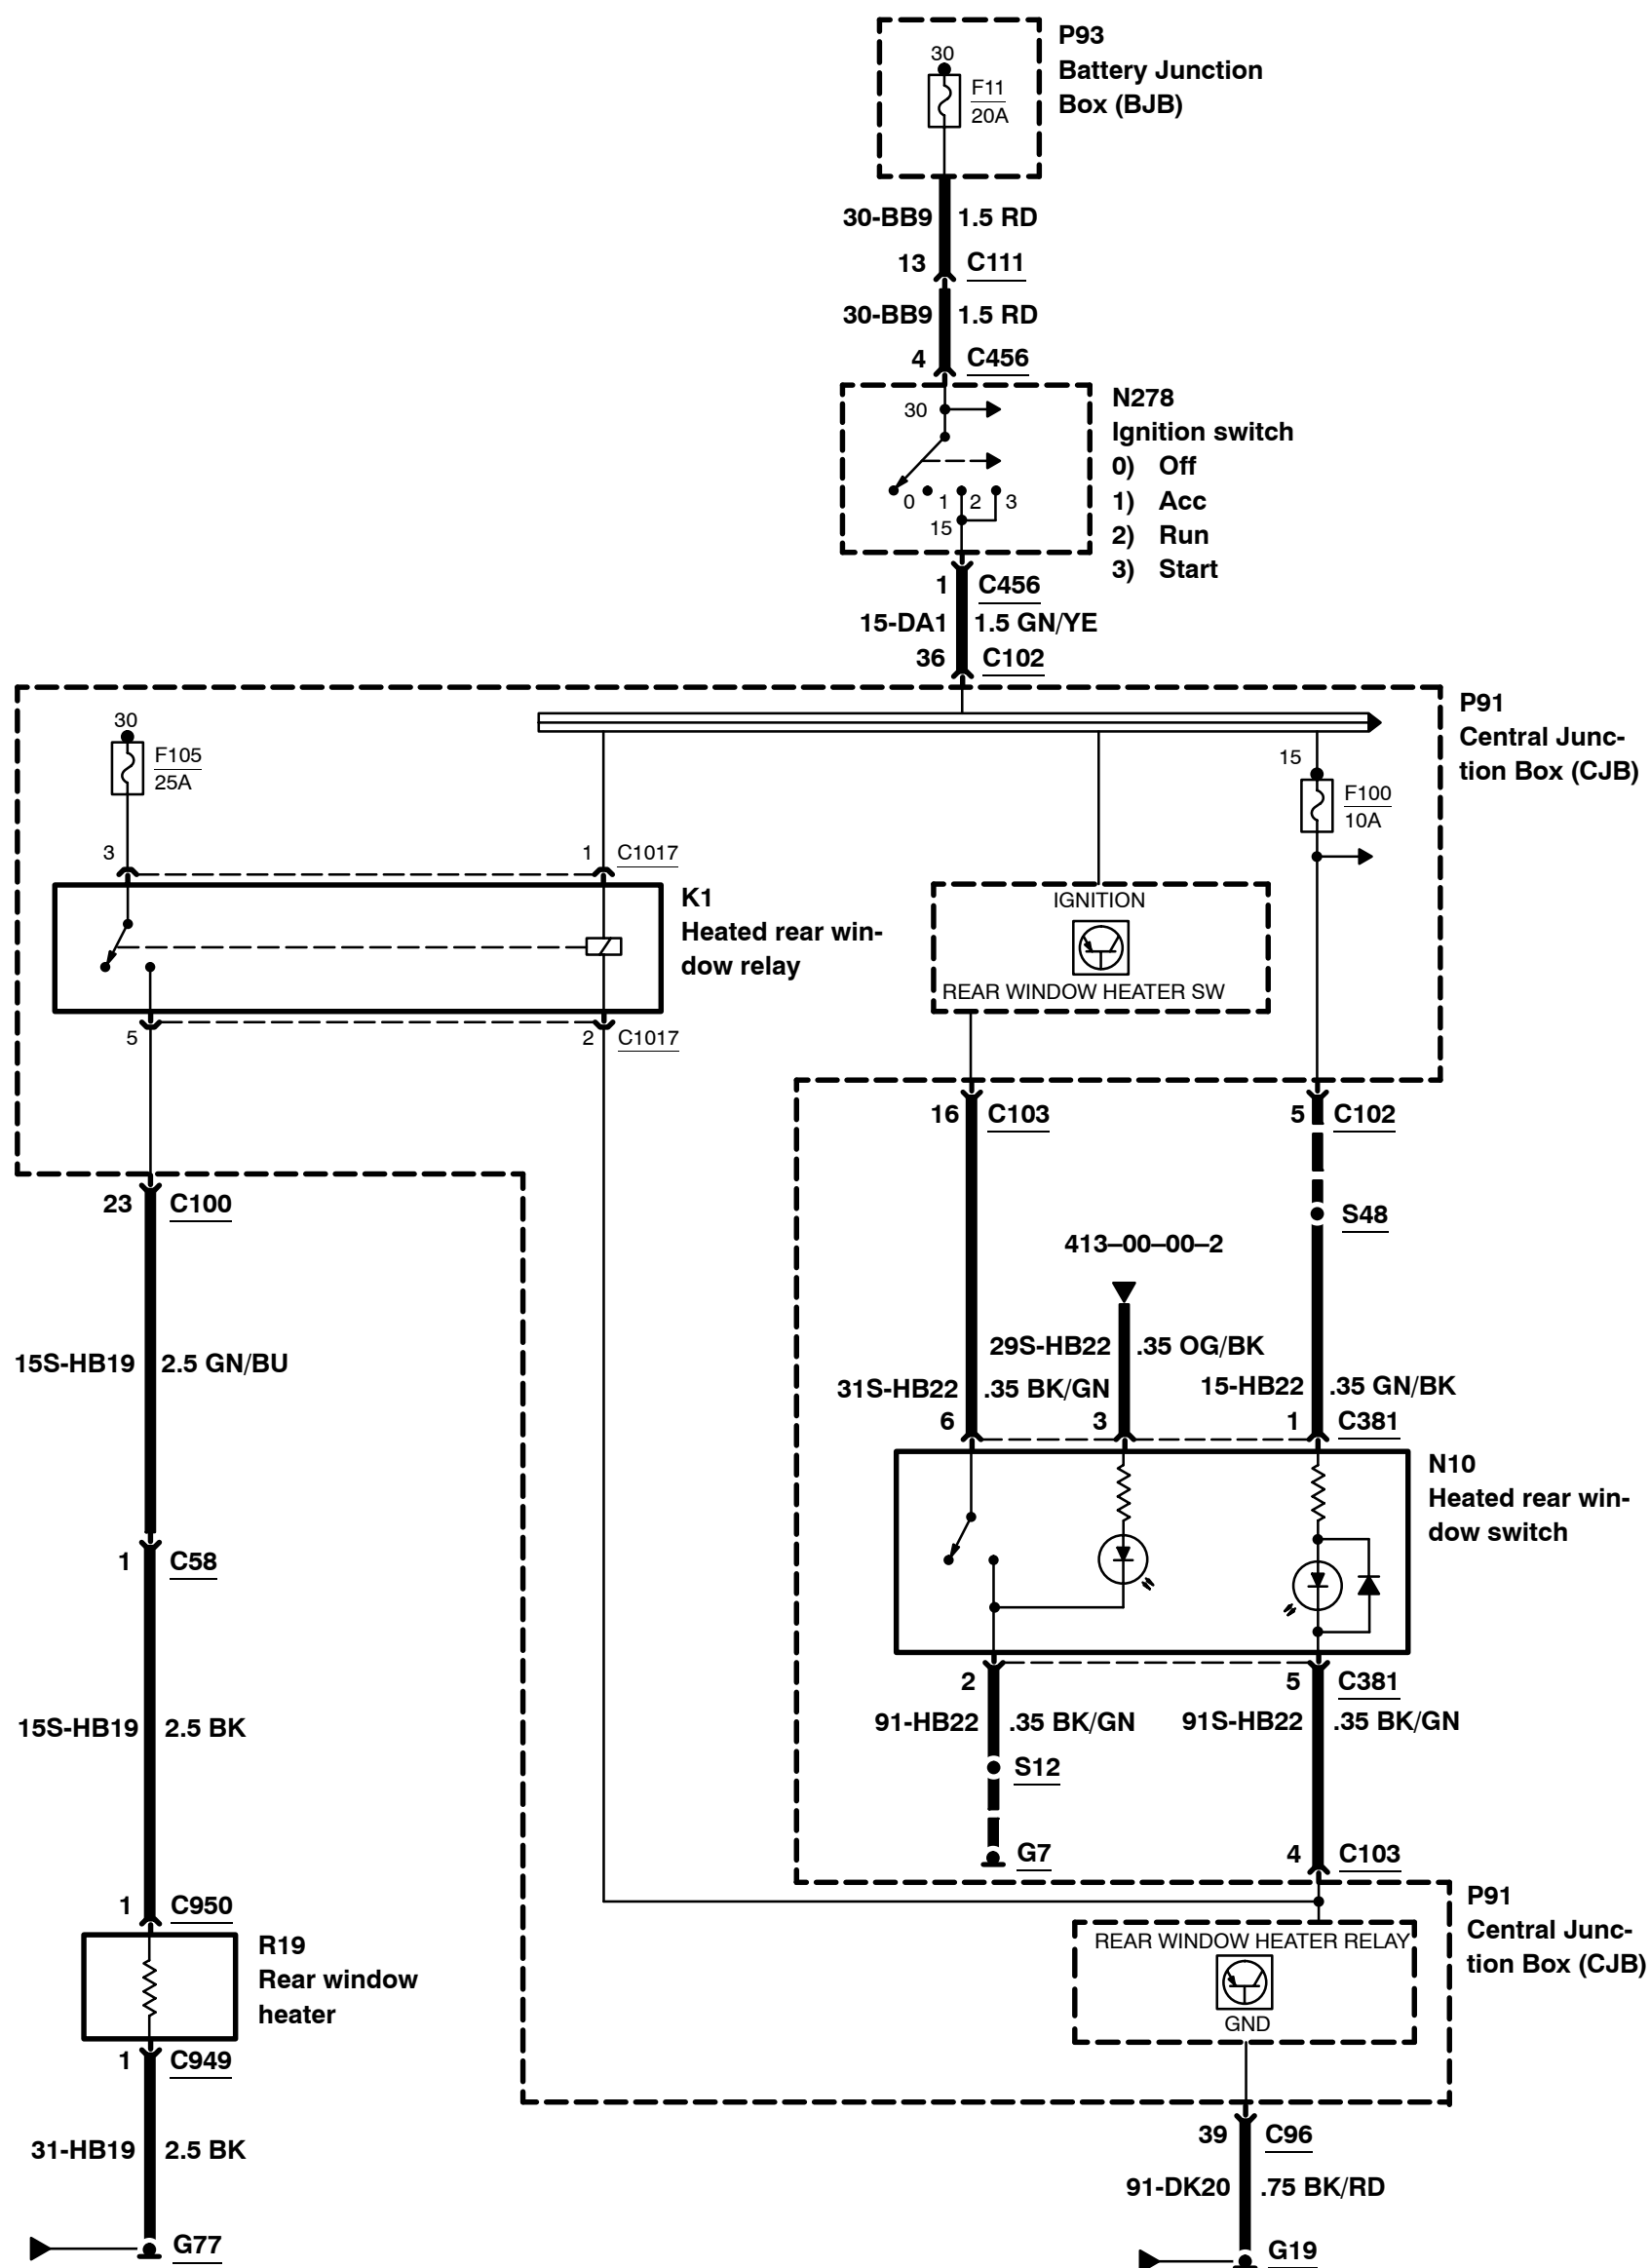

# Glass, Frames and Mechanisms – Heated power mirrors, with front and rear power windows


02/2008  
501-11-00-21  
2008.25  
Focus

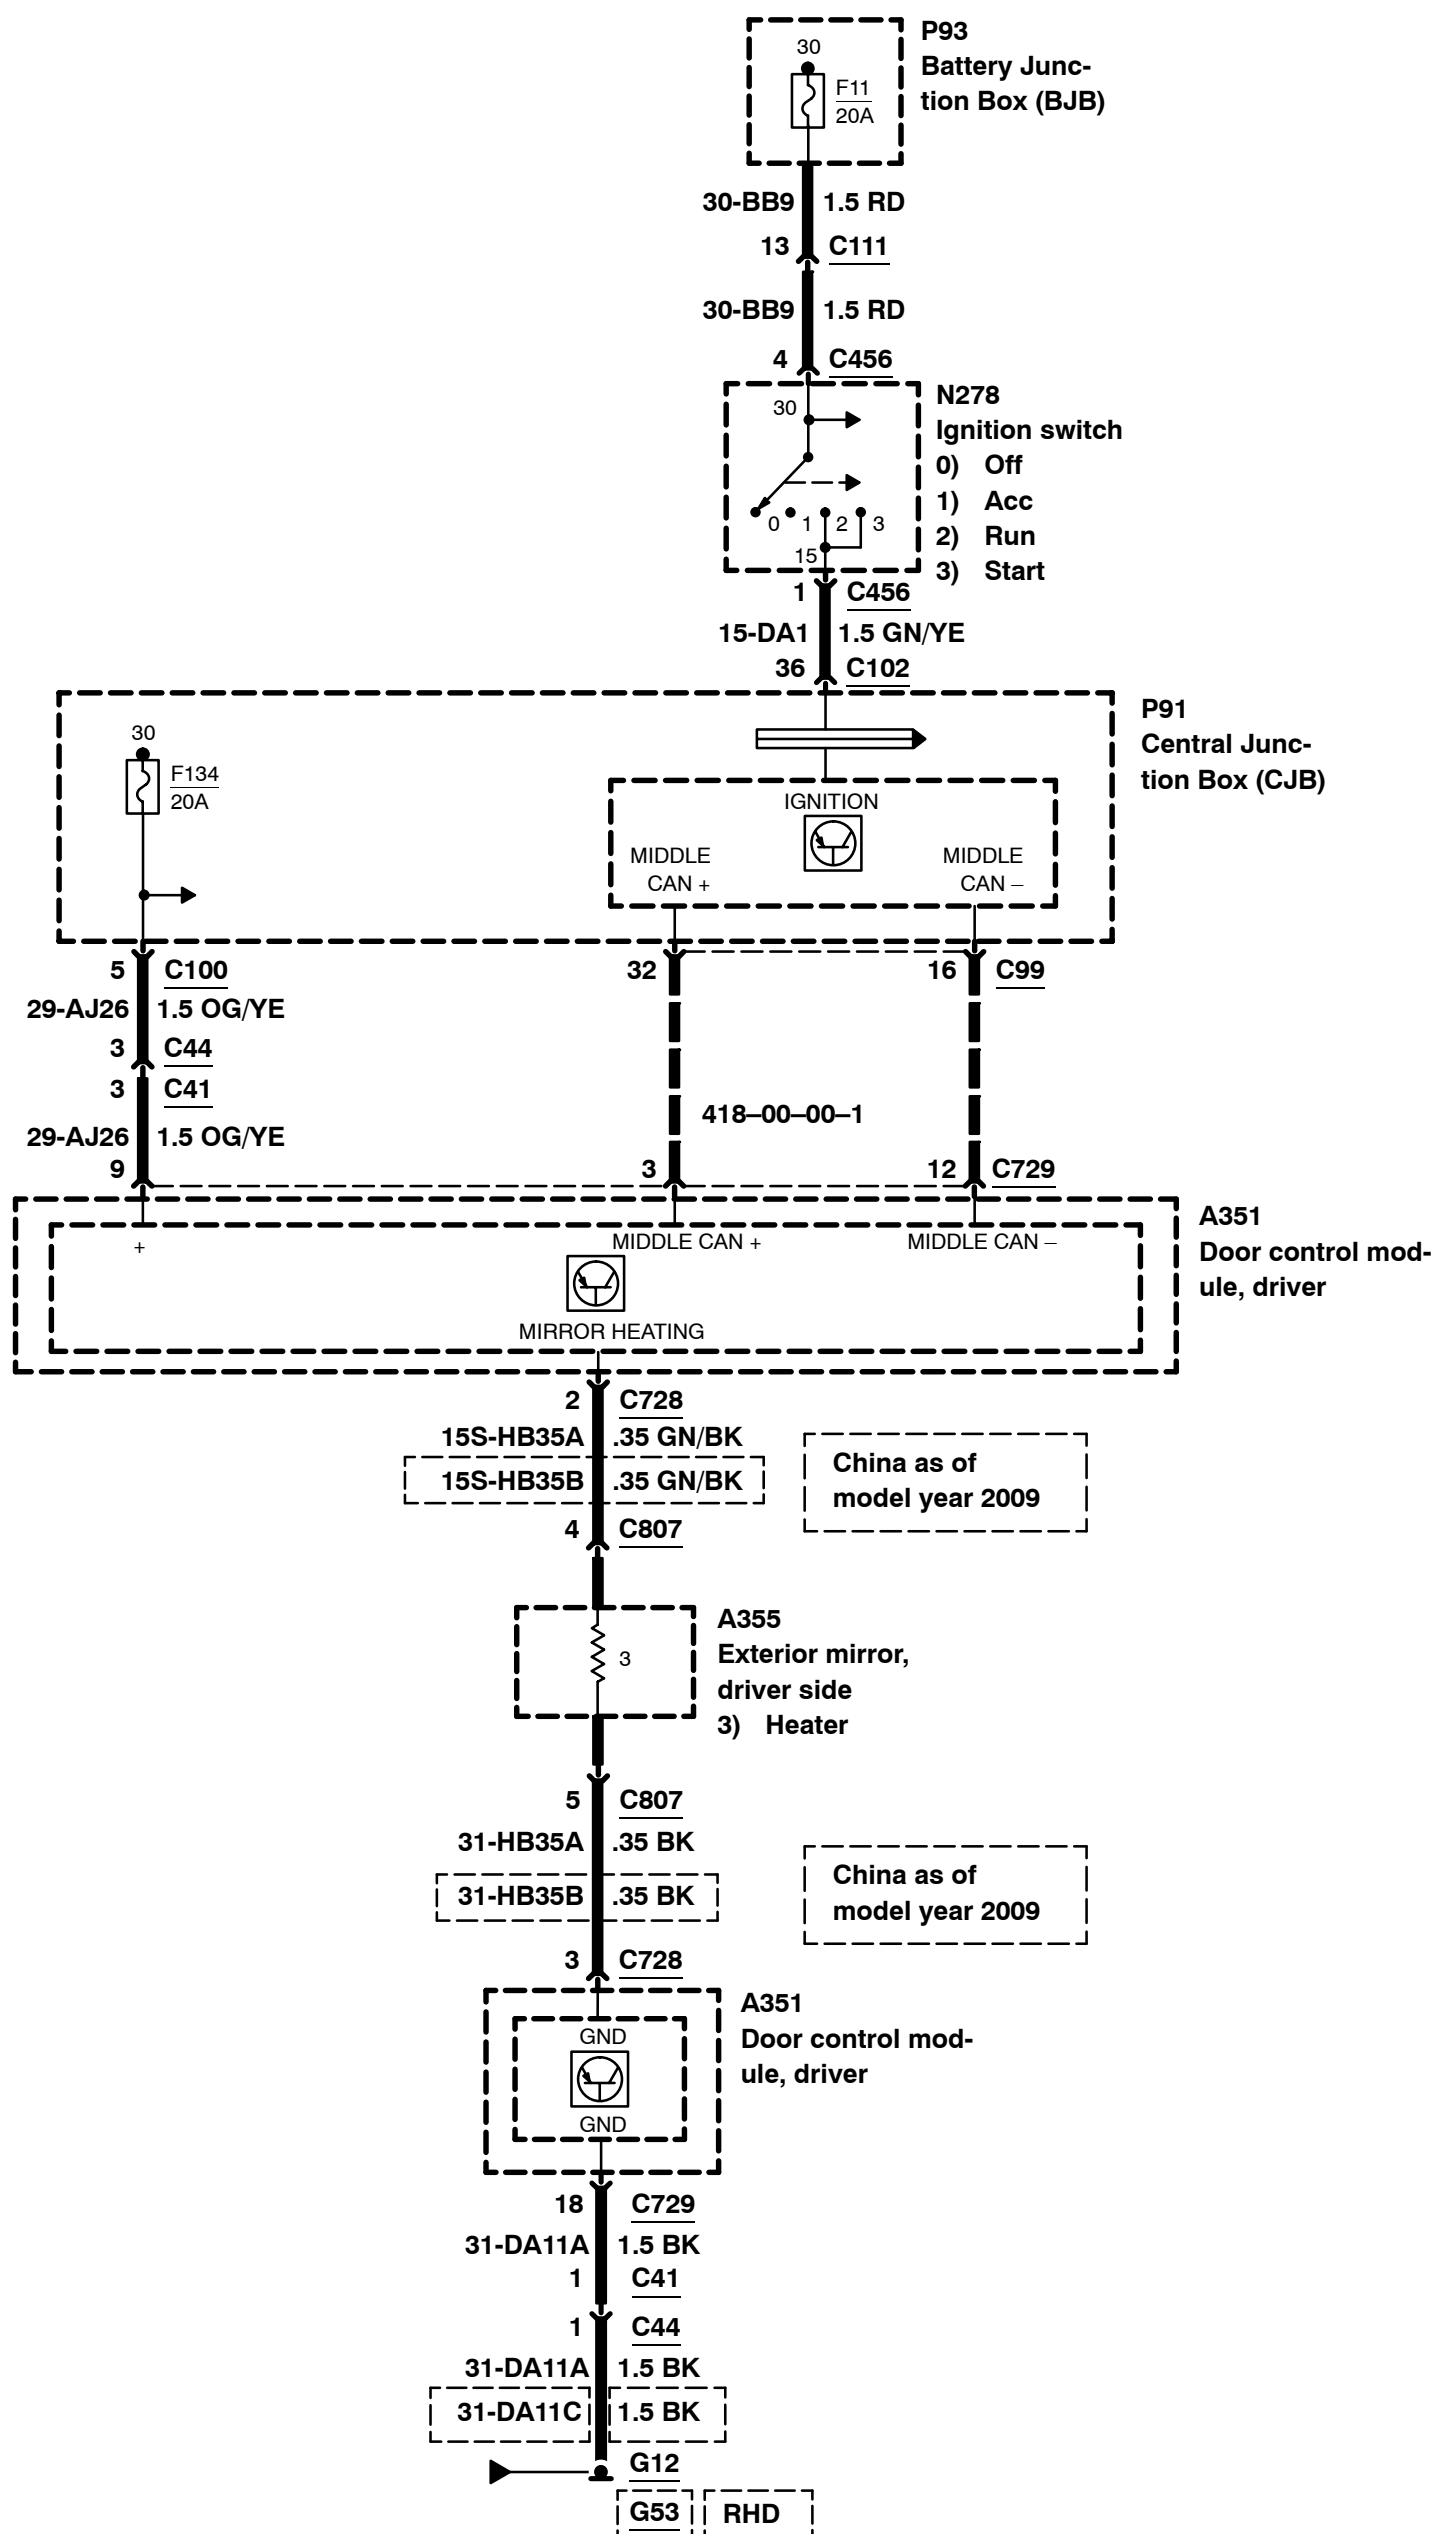




# Glass, Frames and Mechanisms – Heated power mirrors, with front and rear power windows

02/2008  
501-11-00-22  
2008.25  
Focus

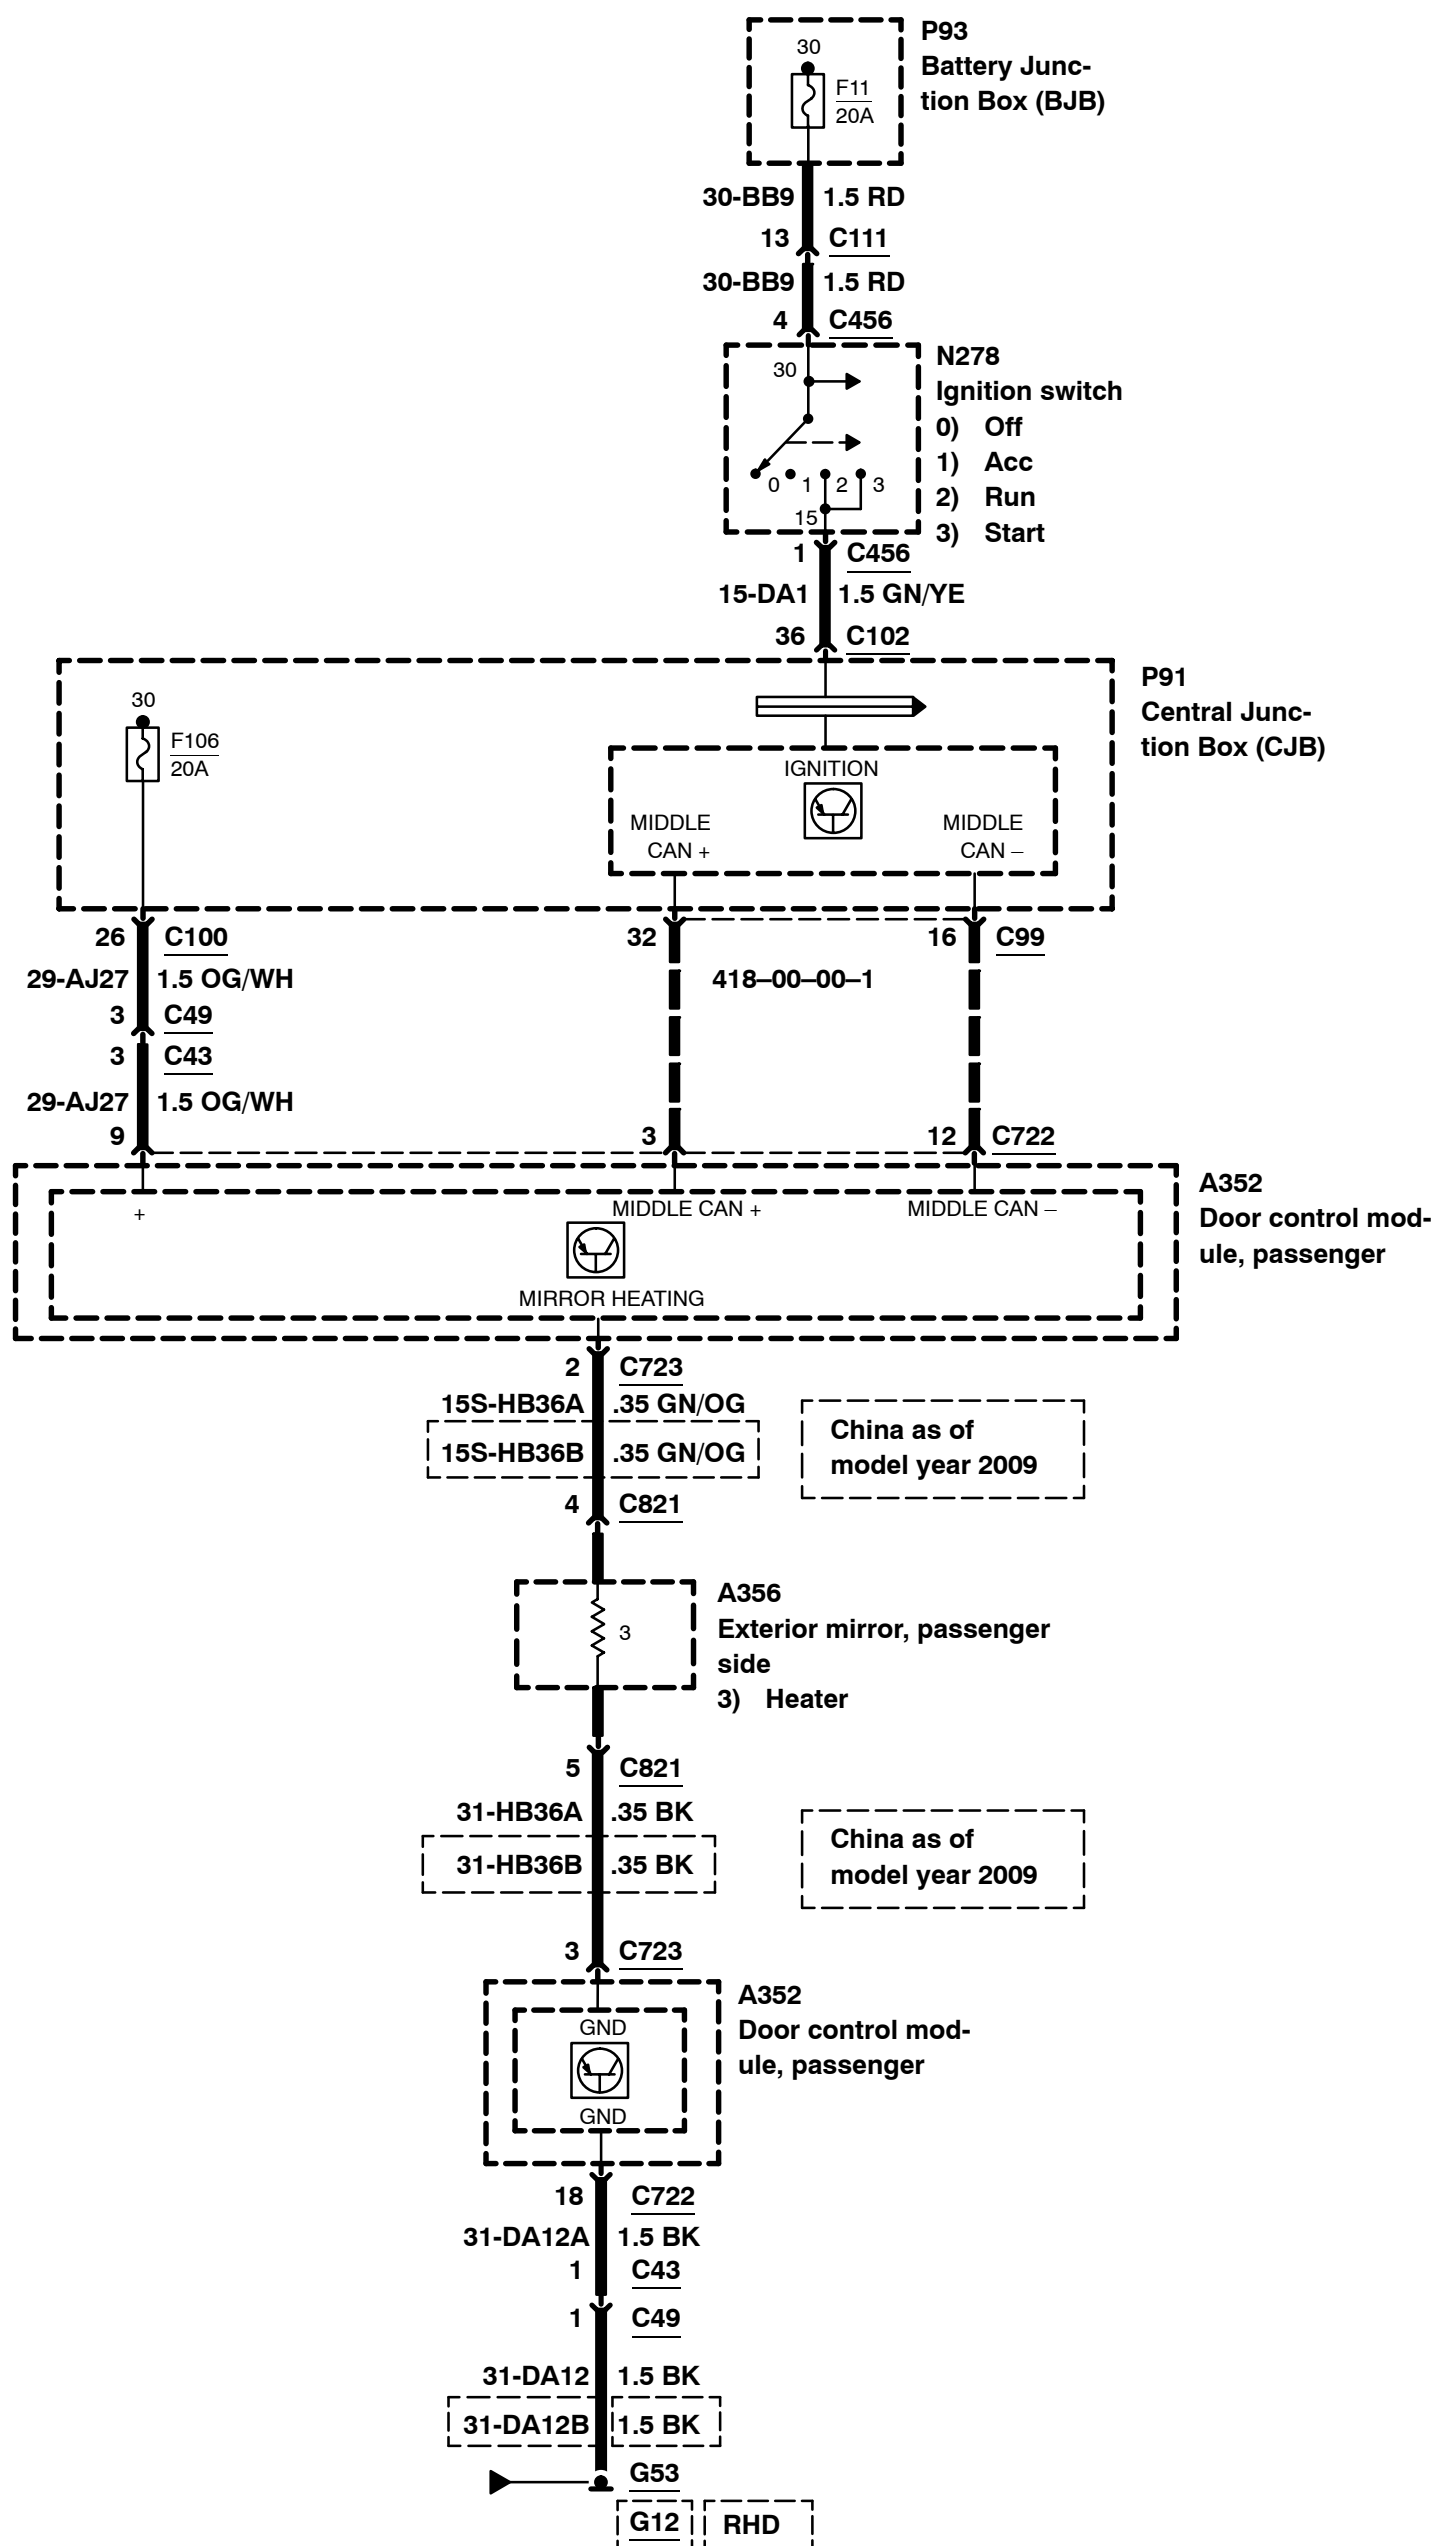


# Instrument Panel and Console

02/2008  
501-12-00-1  
2008.25  
Focus

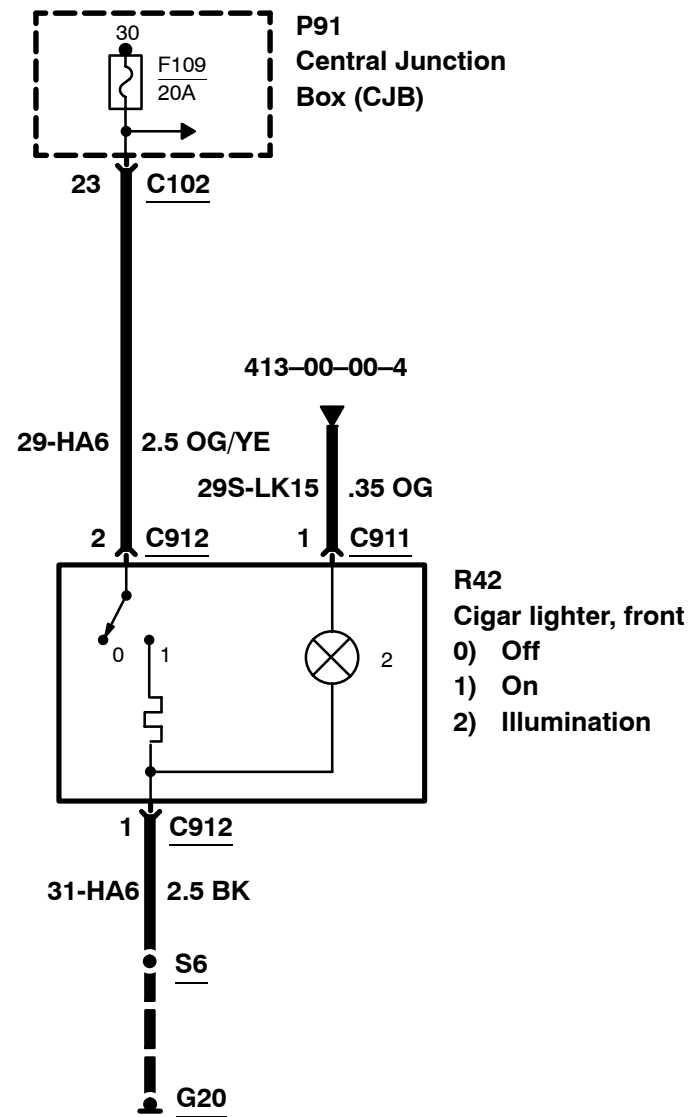





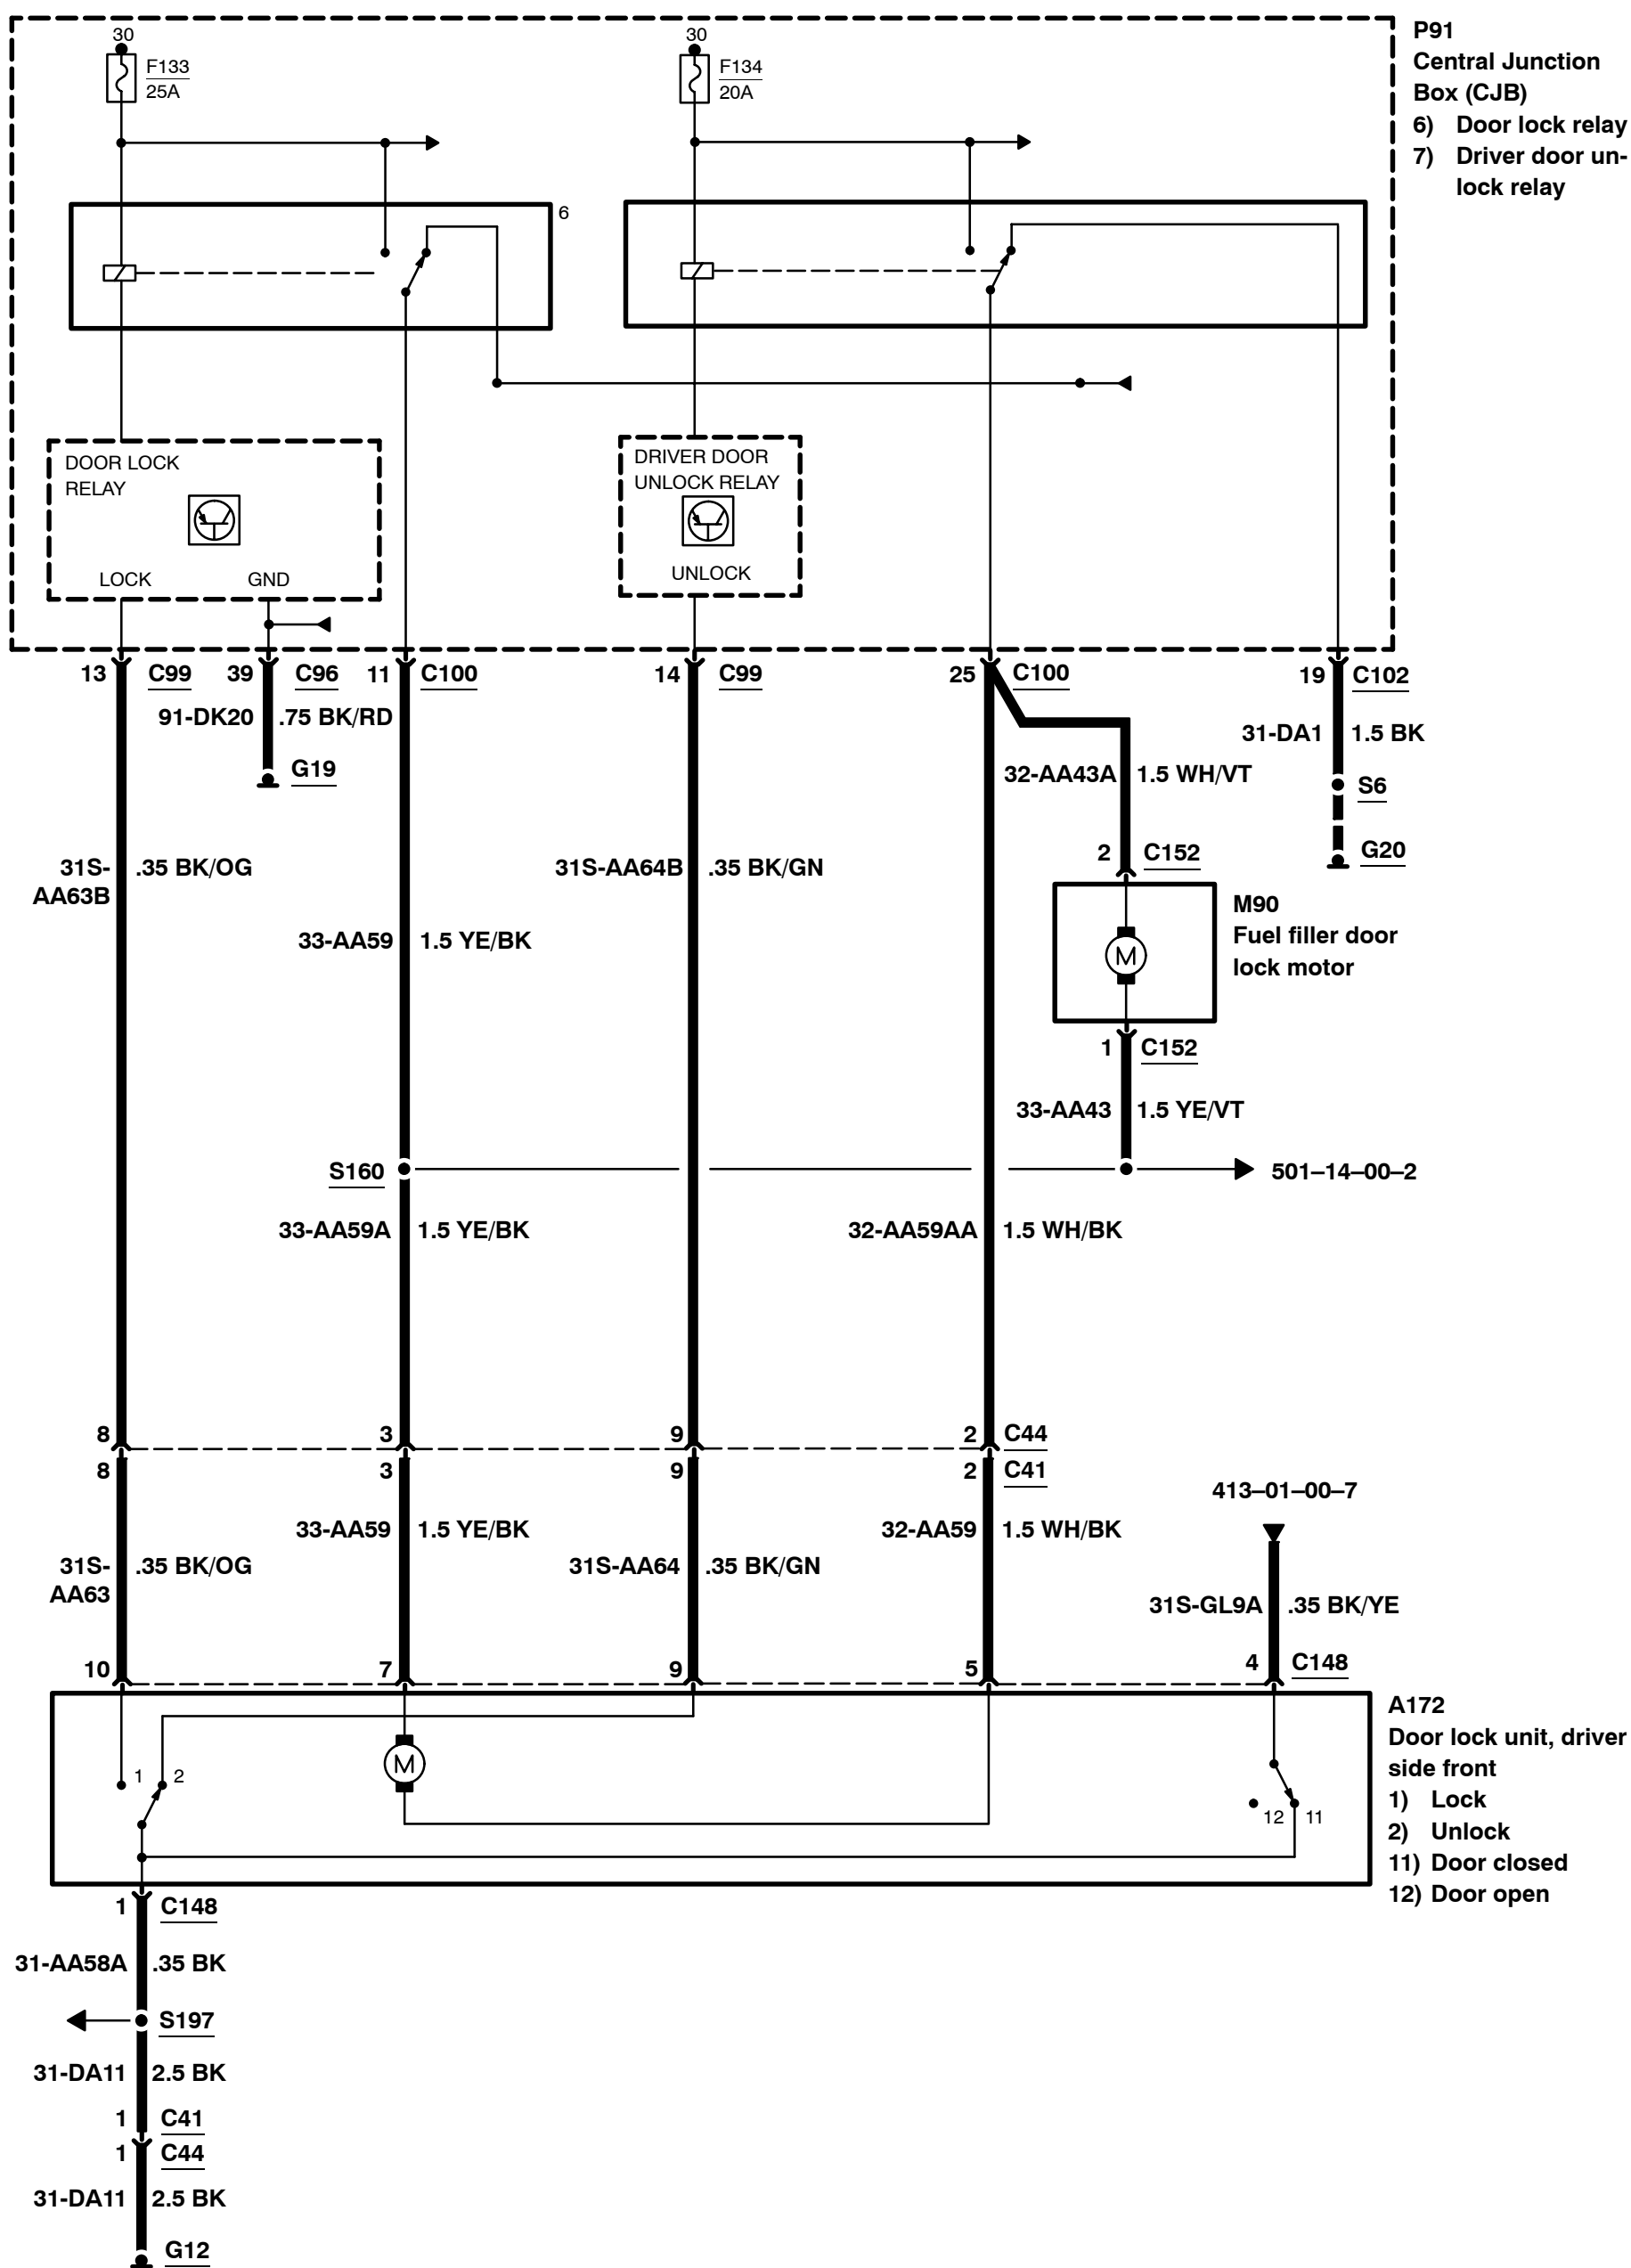

# Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front power windows


02/2008  
501-14-00-2  
2008.25  
Focus

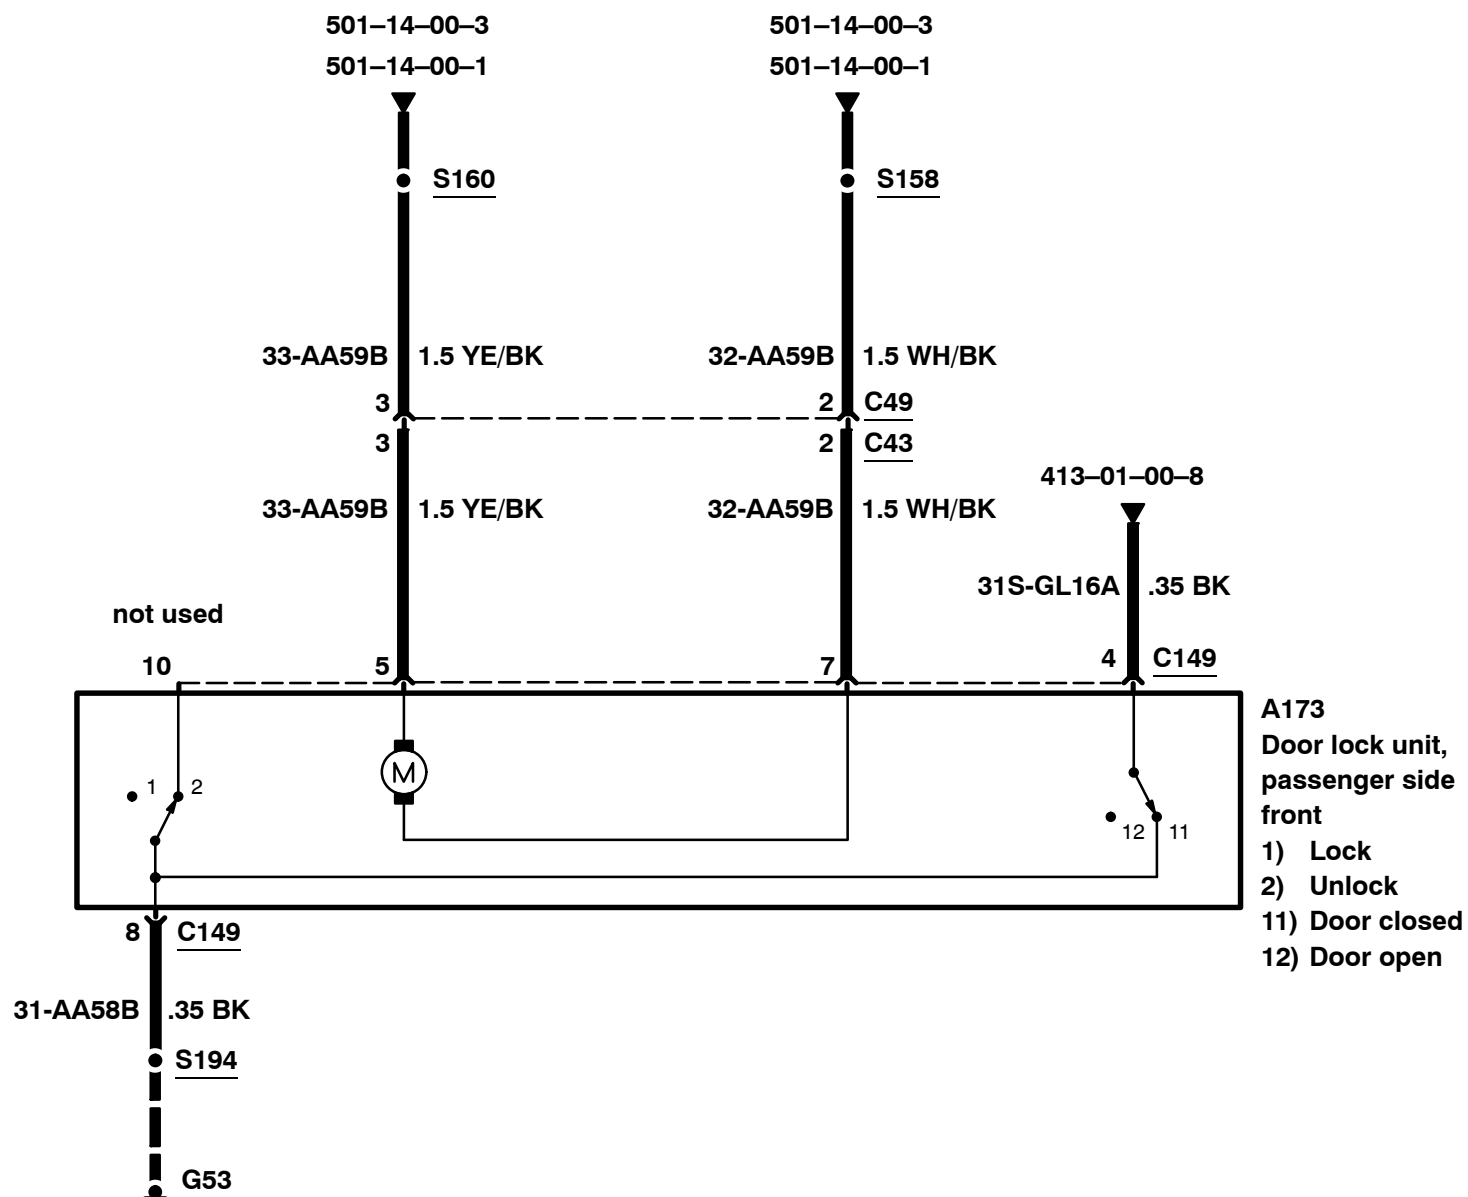

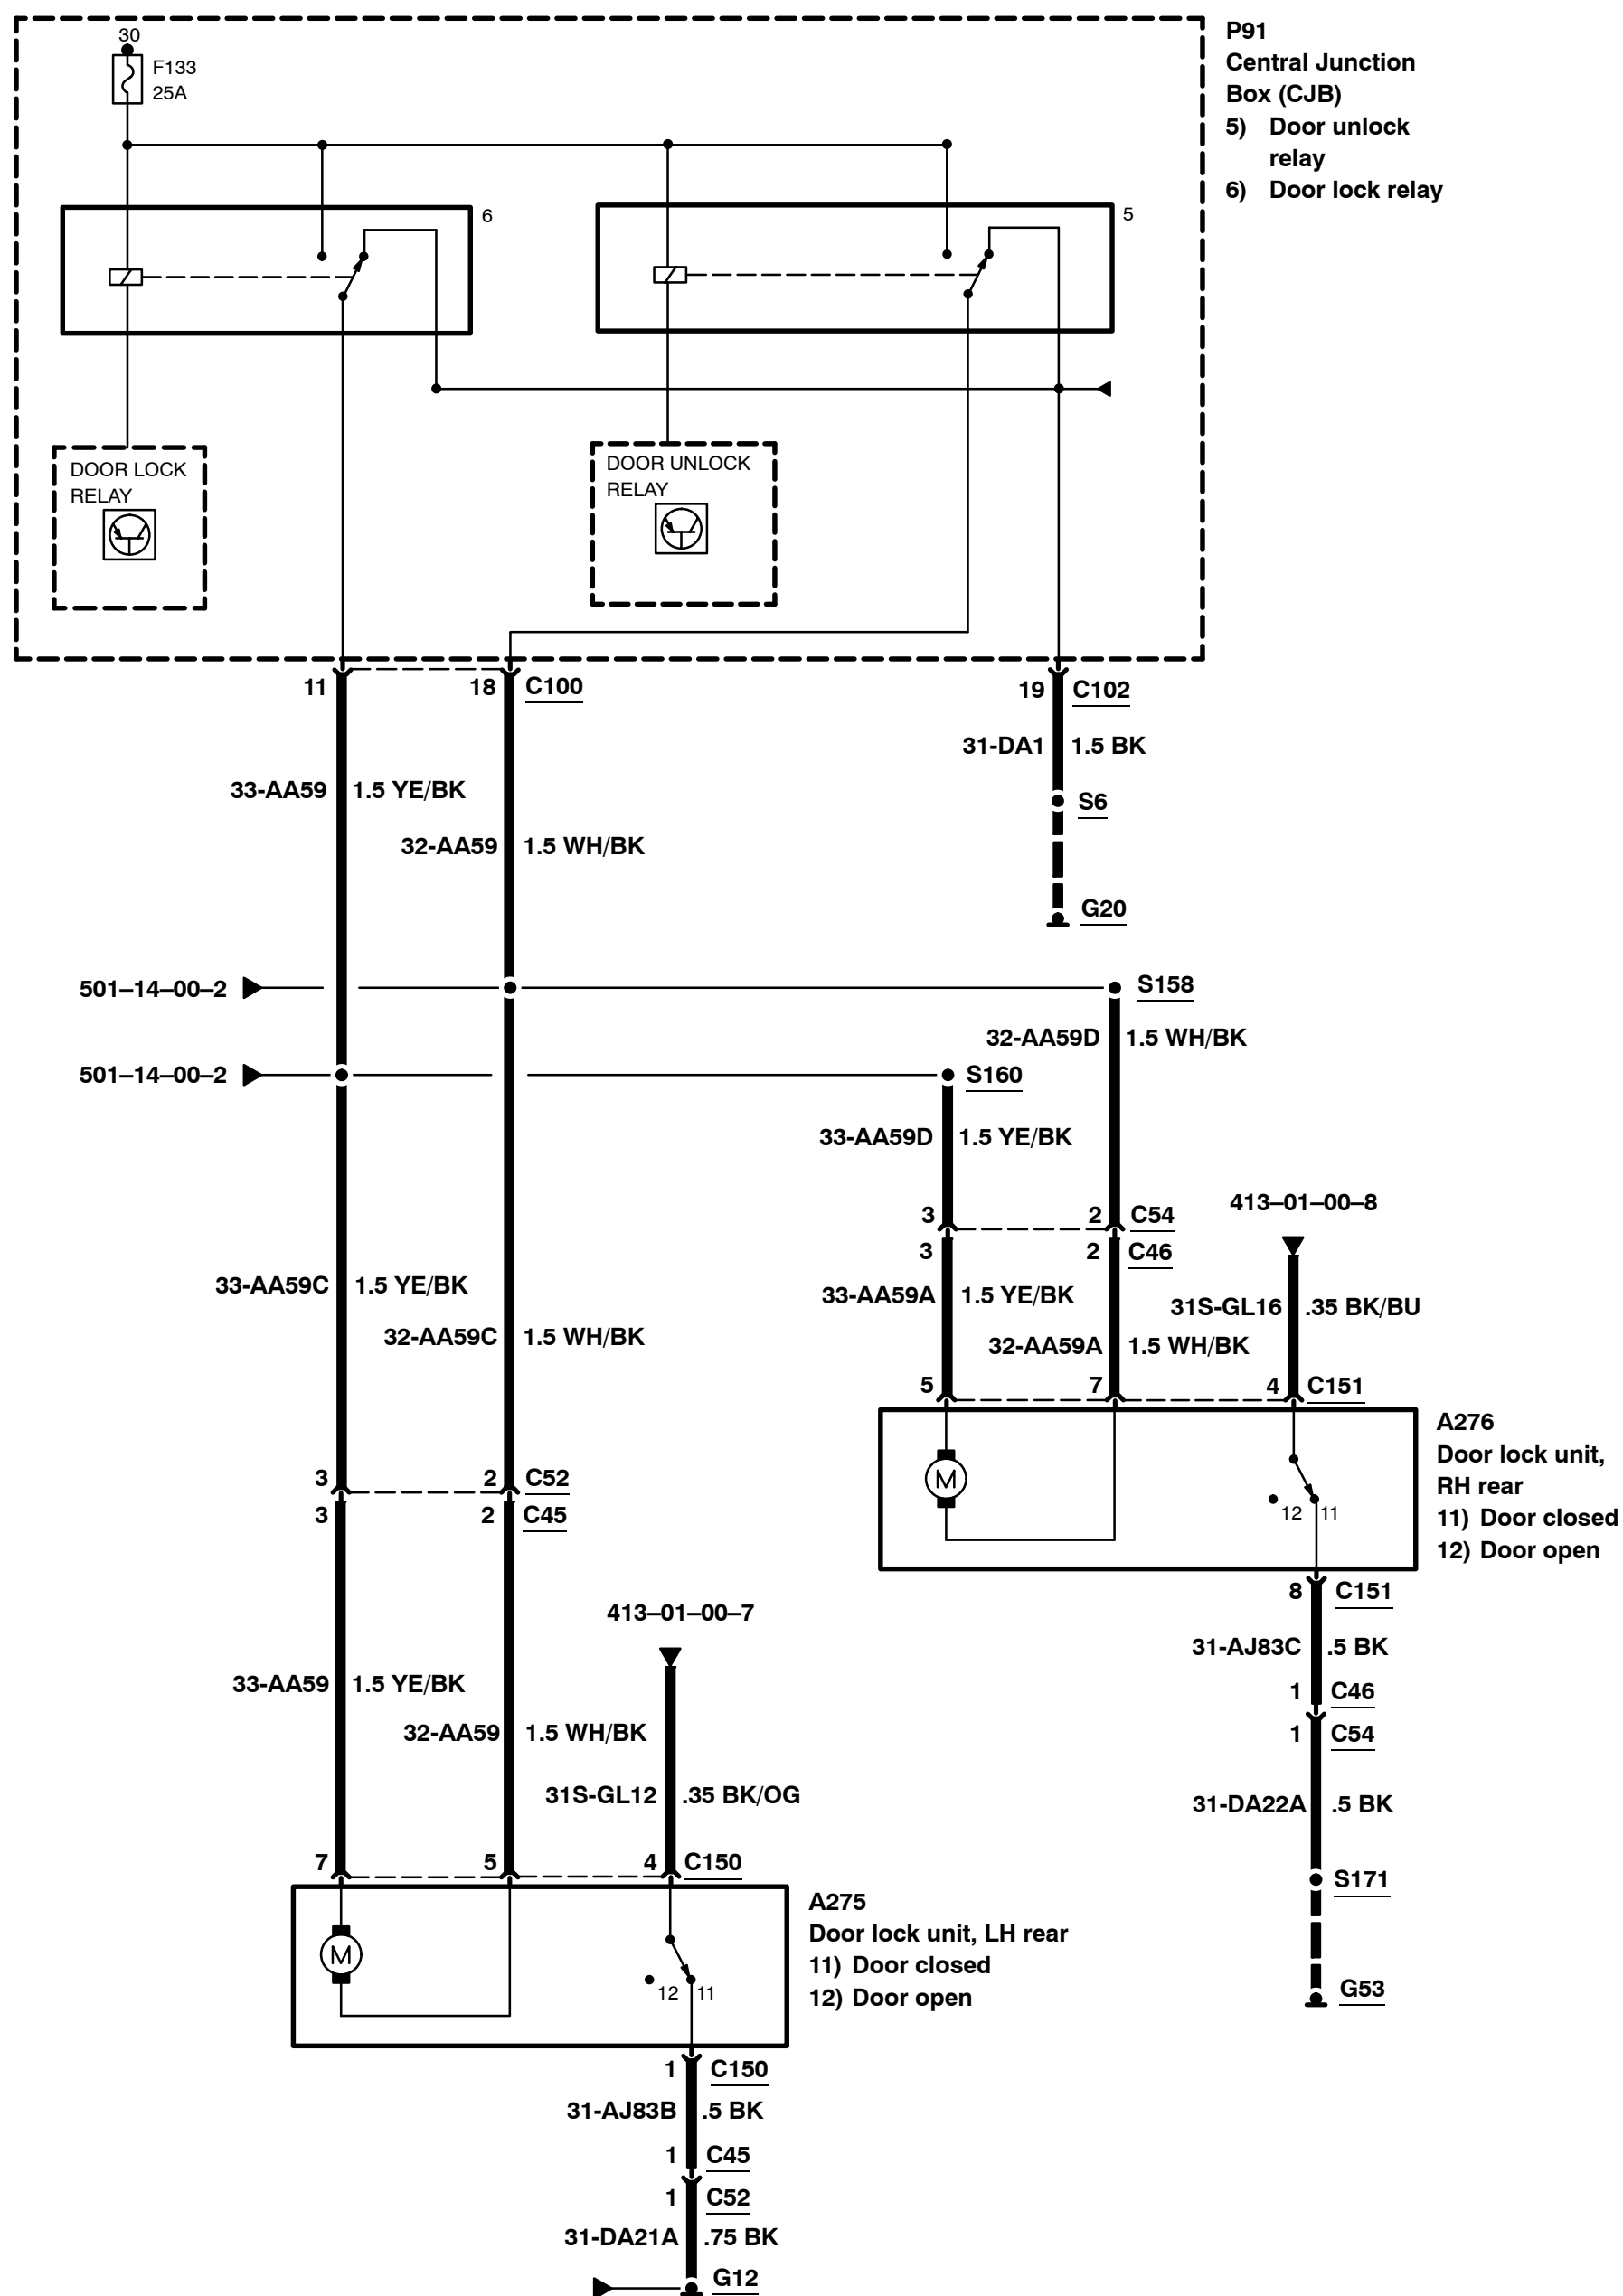


# Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front power windows

02/2008  
501-14-00-4  
2008.25  
Focus

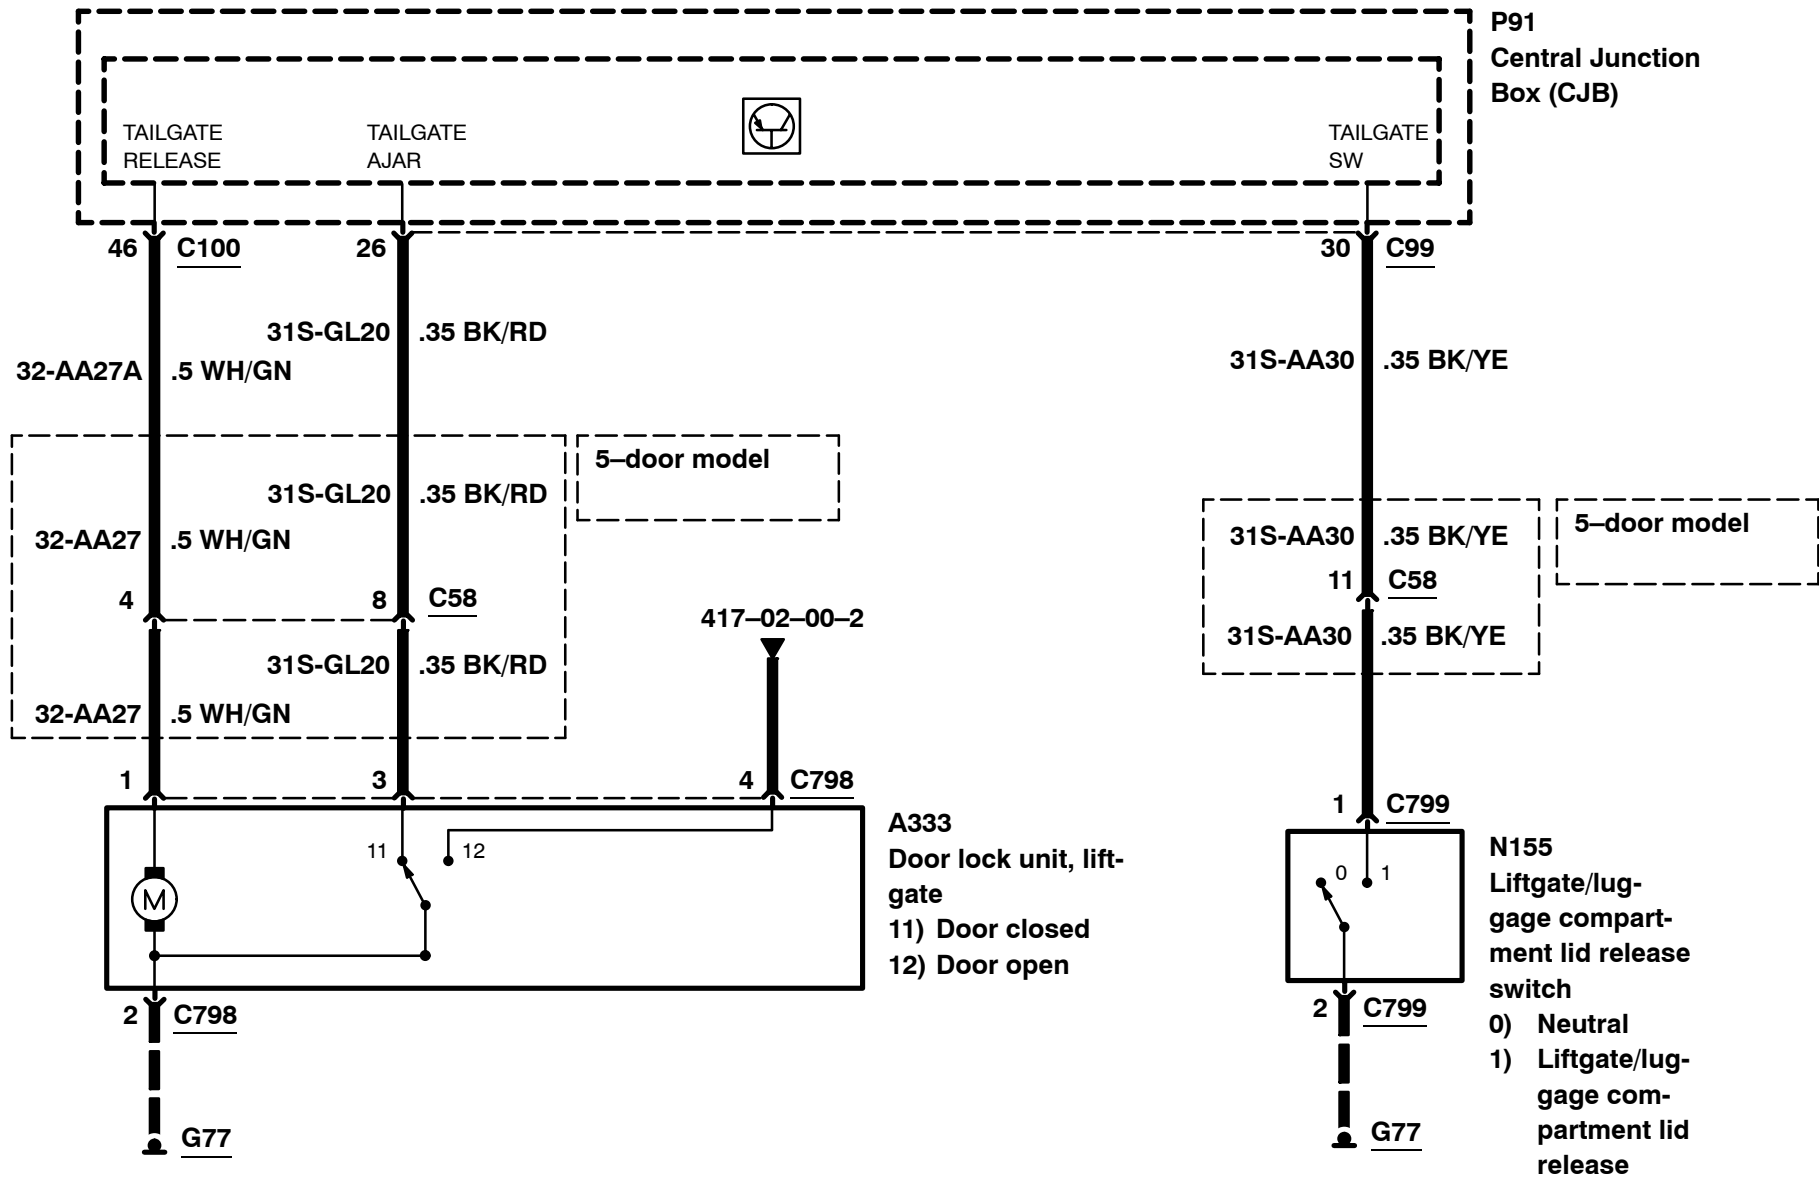


# Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows

02/2008  
501-14-00-5  
2008.25  
Focus

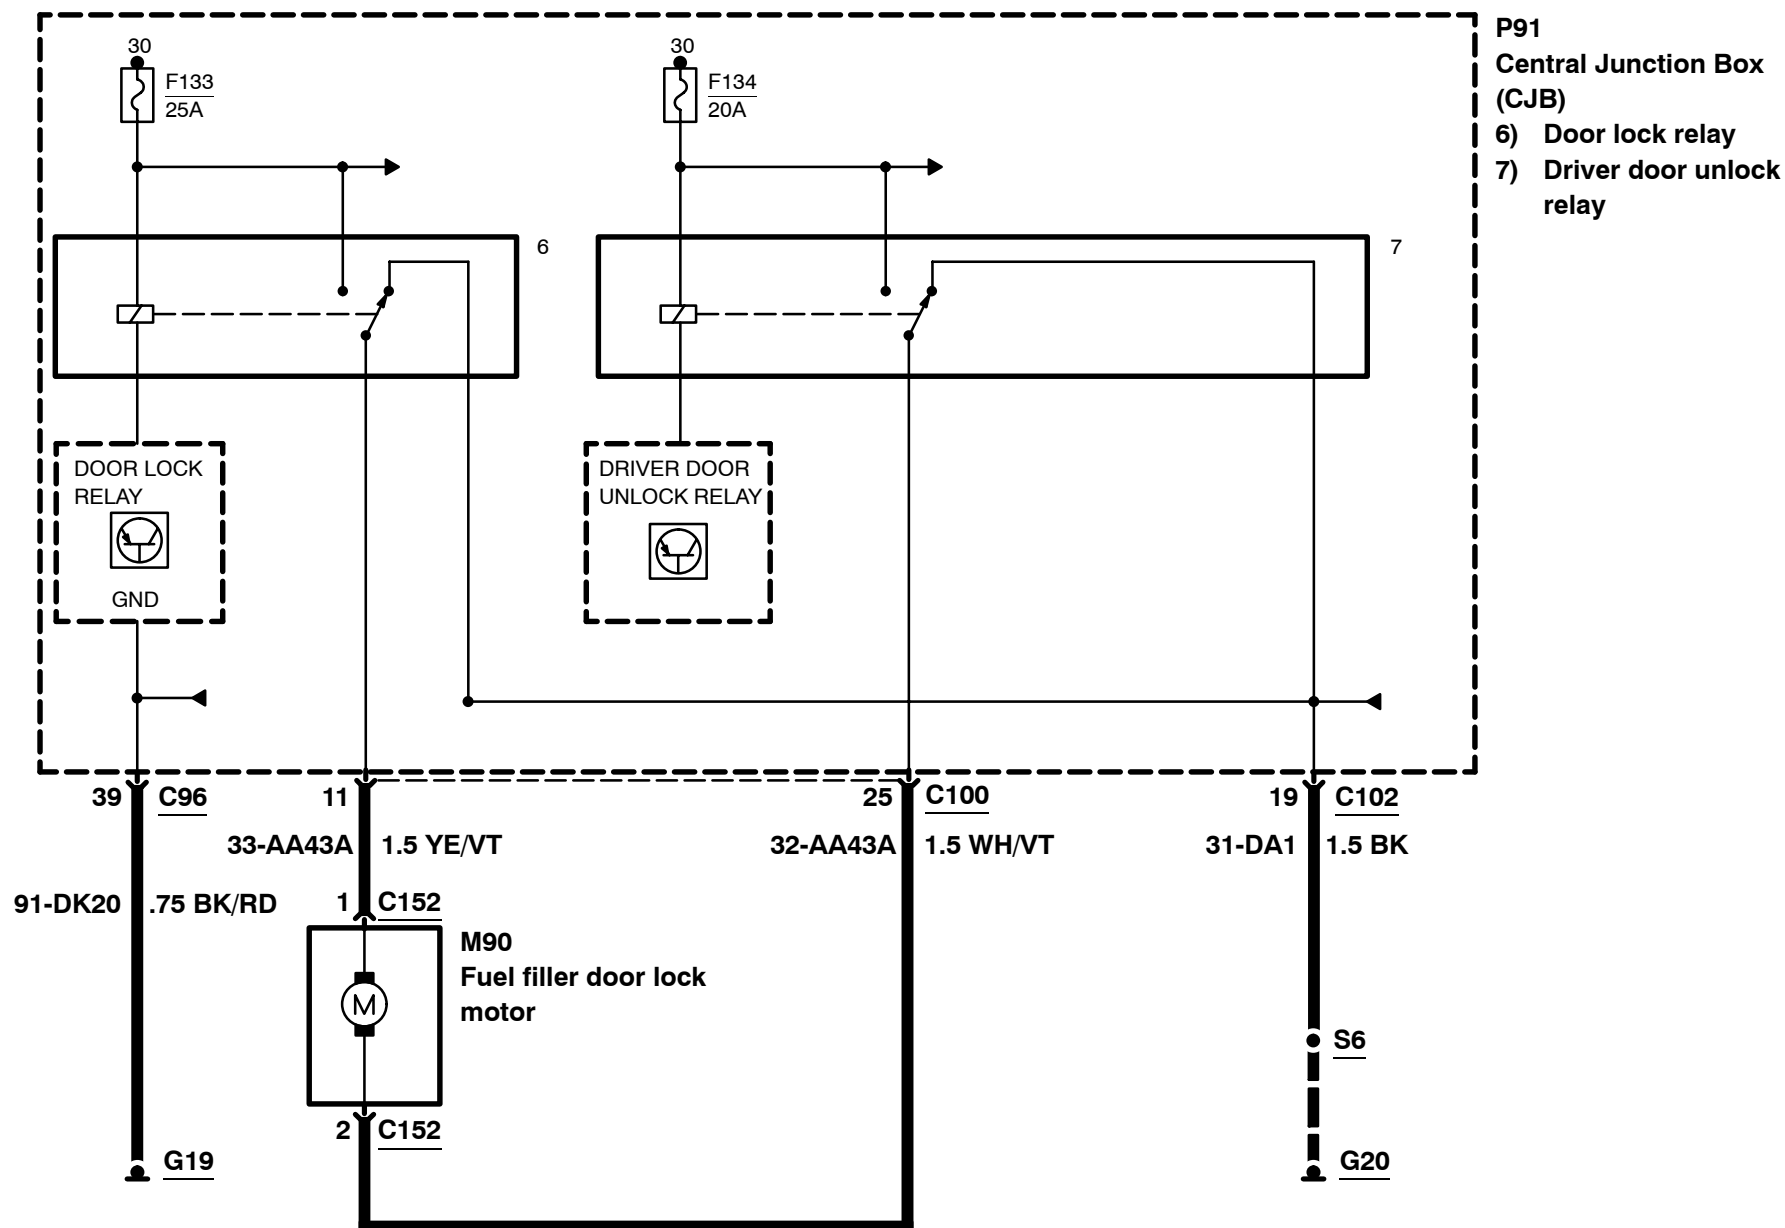


# Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows

02/2008  
501-14-00-6  
2008.25  
Focus

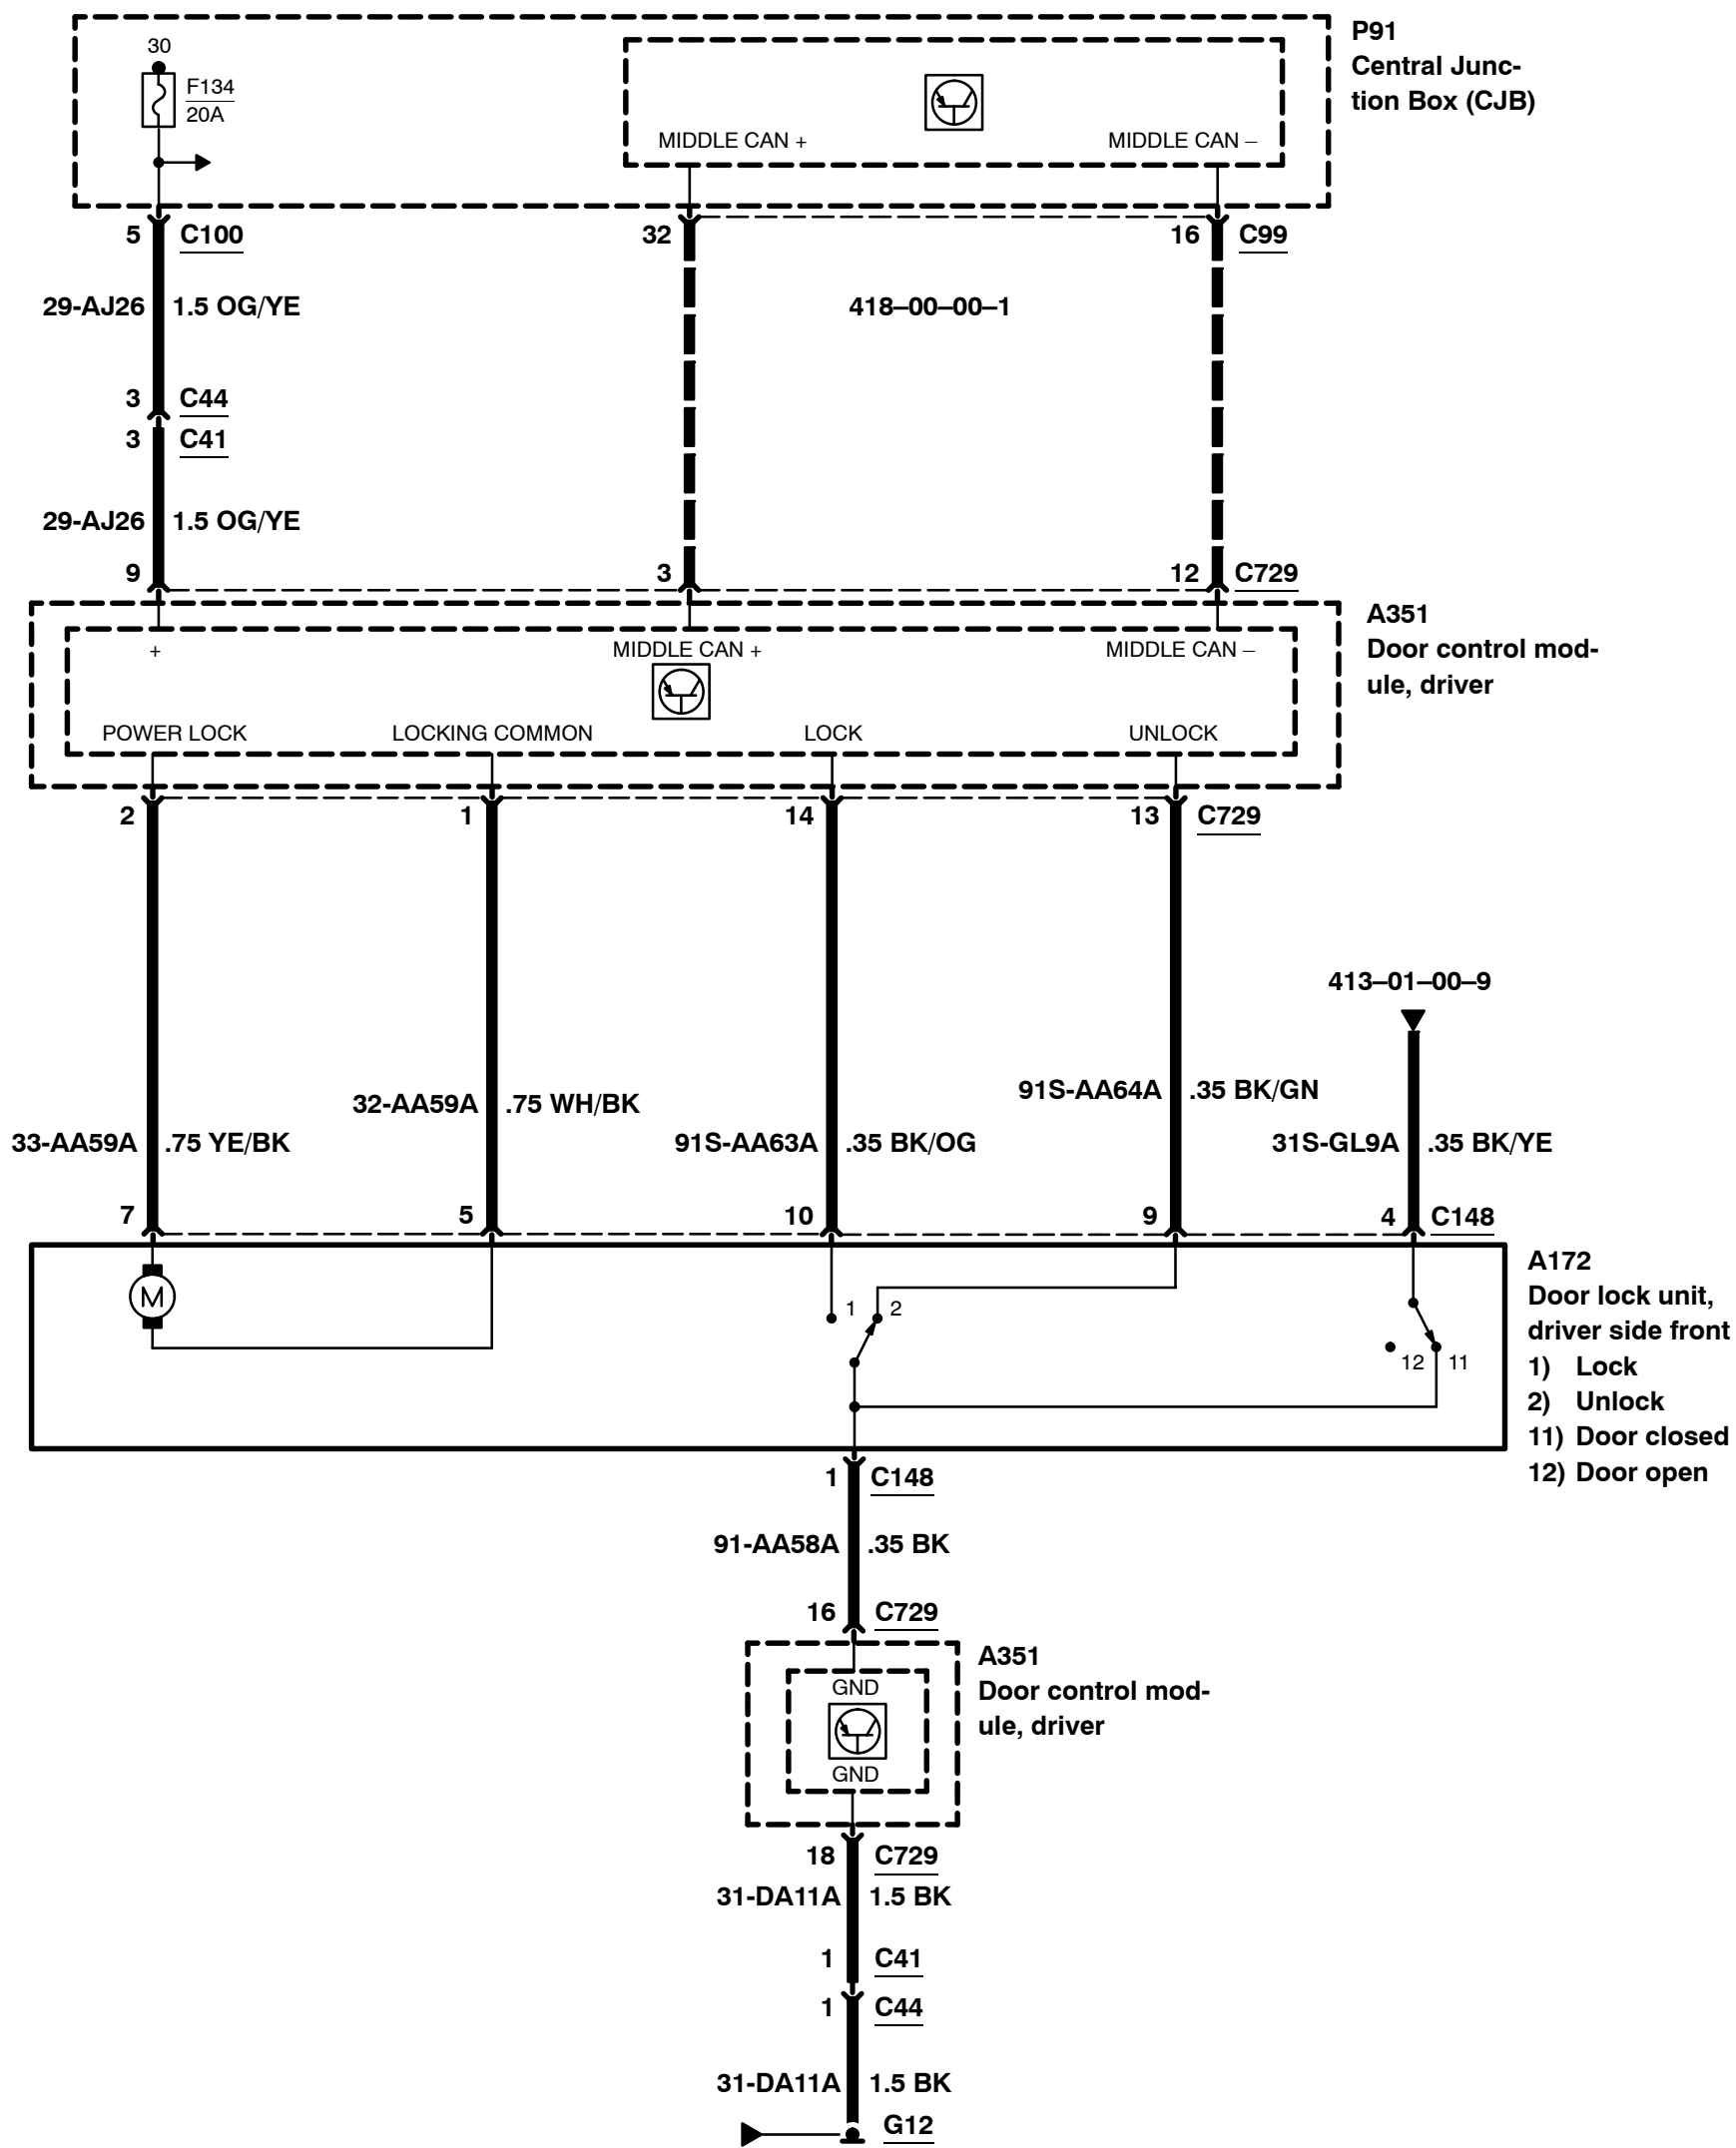

# Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows


02/2008  
501-14-00-7  
2008.25  
Focus

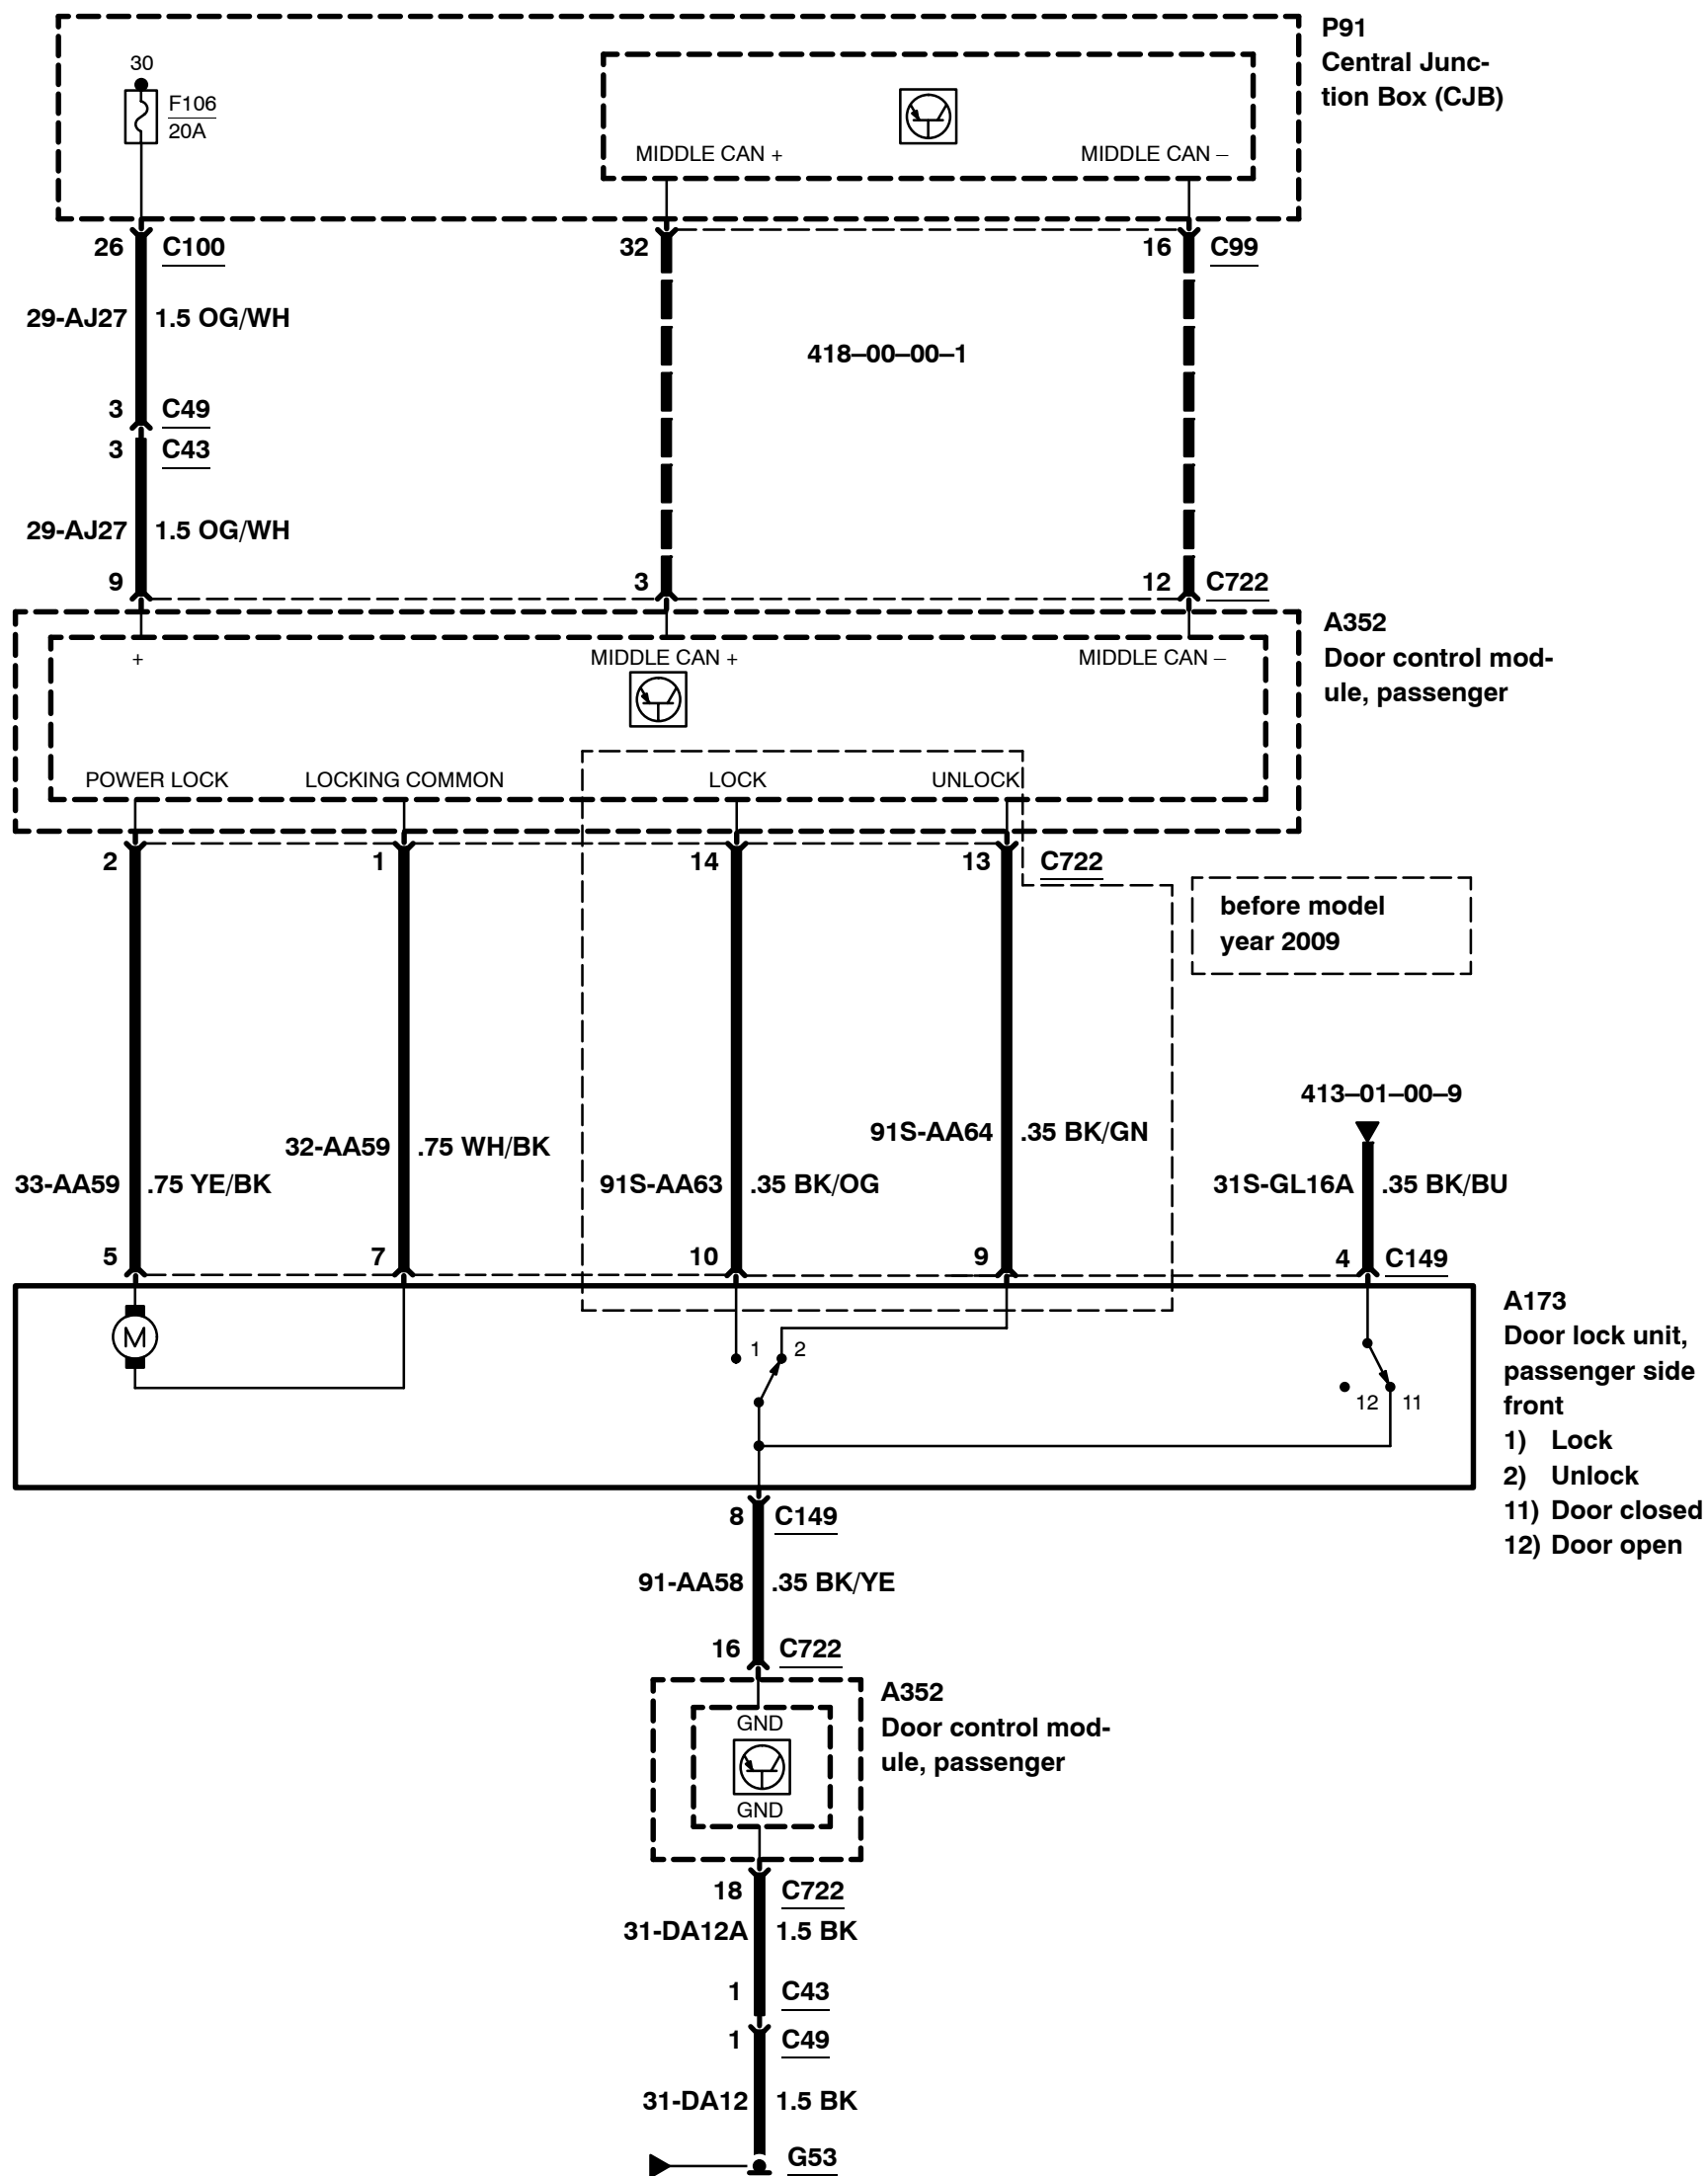



# Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows


02/2008  
501-14-00-8  
2008.25  
Focus

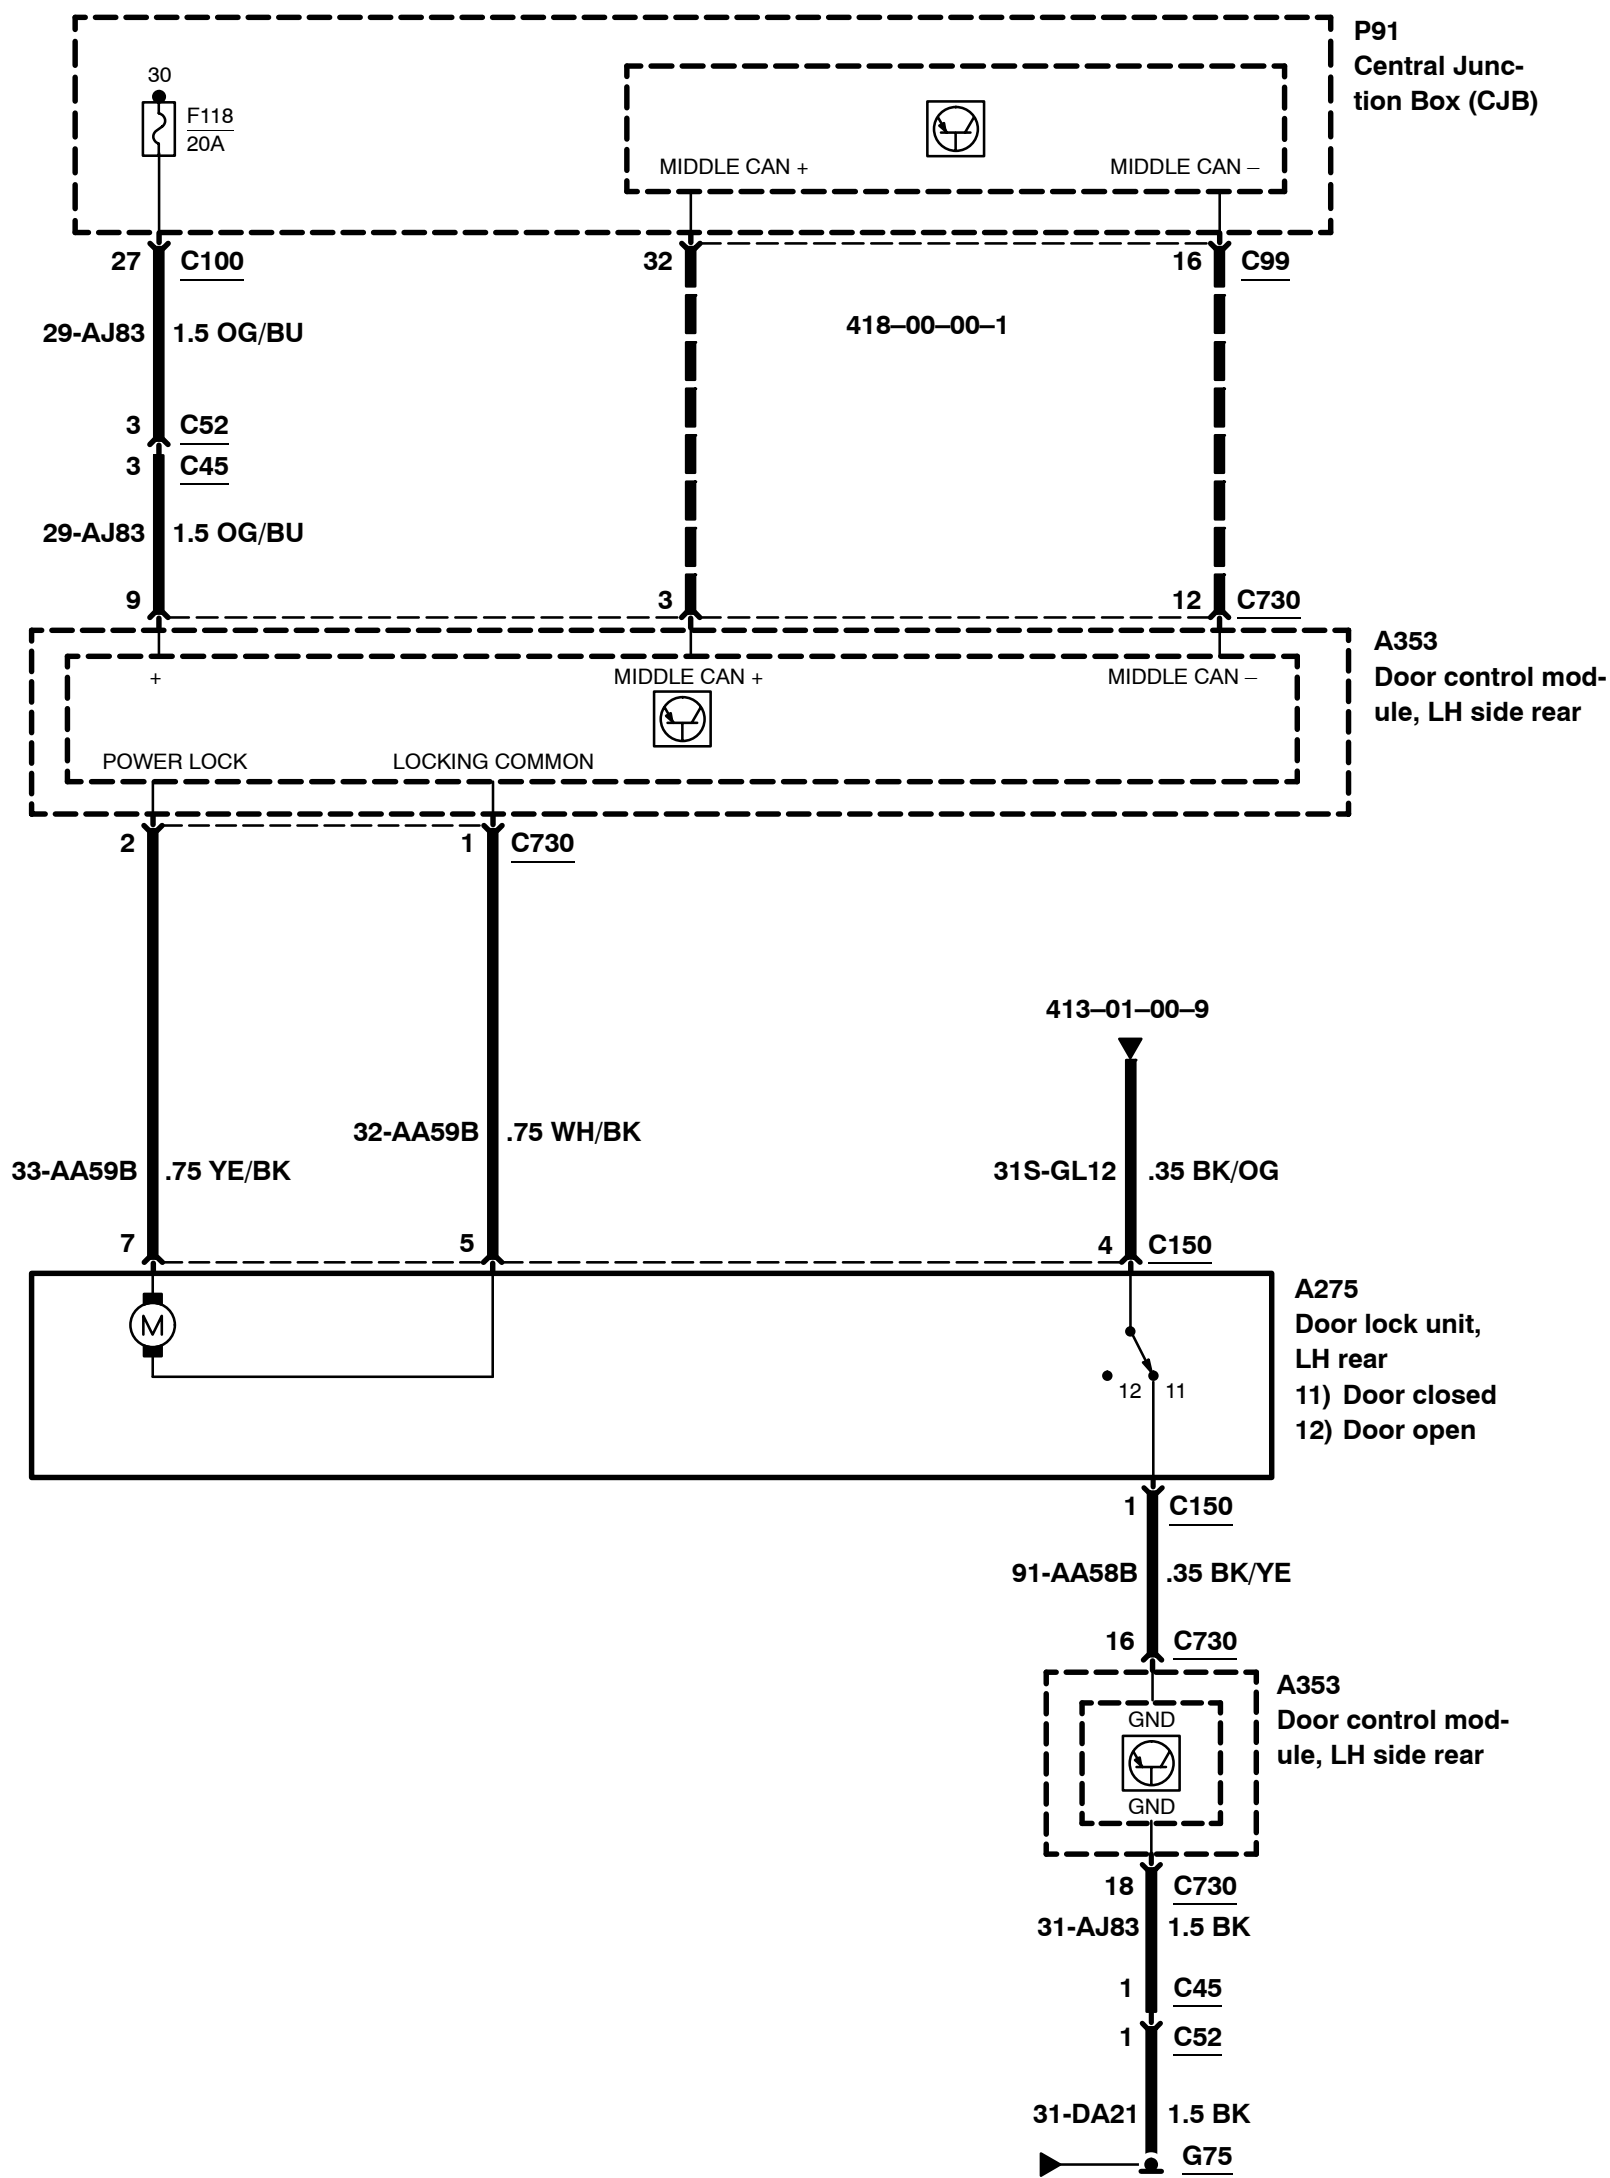




# Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows


02/2008  
501-14-00-9  
2008.25  
Focus

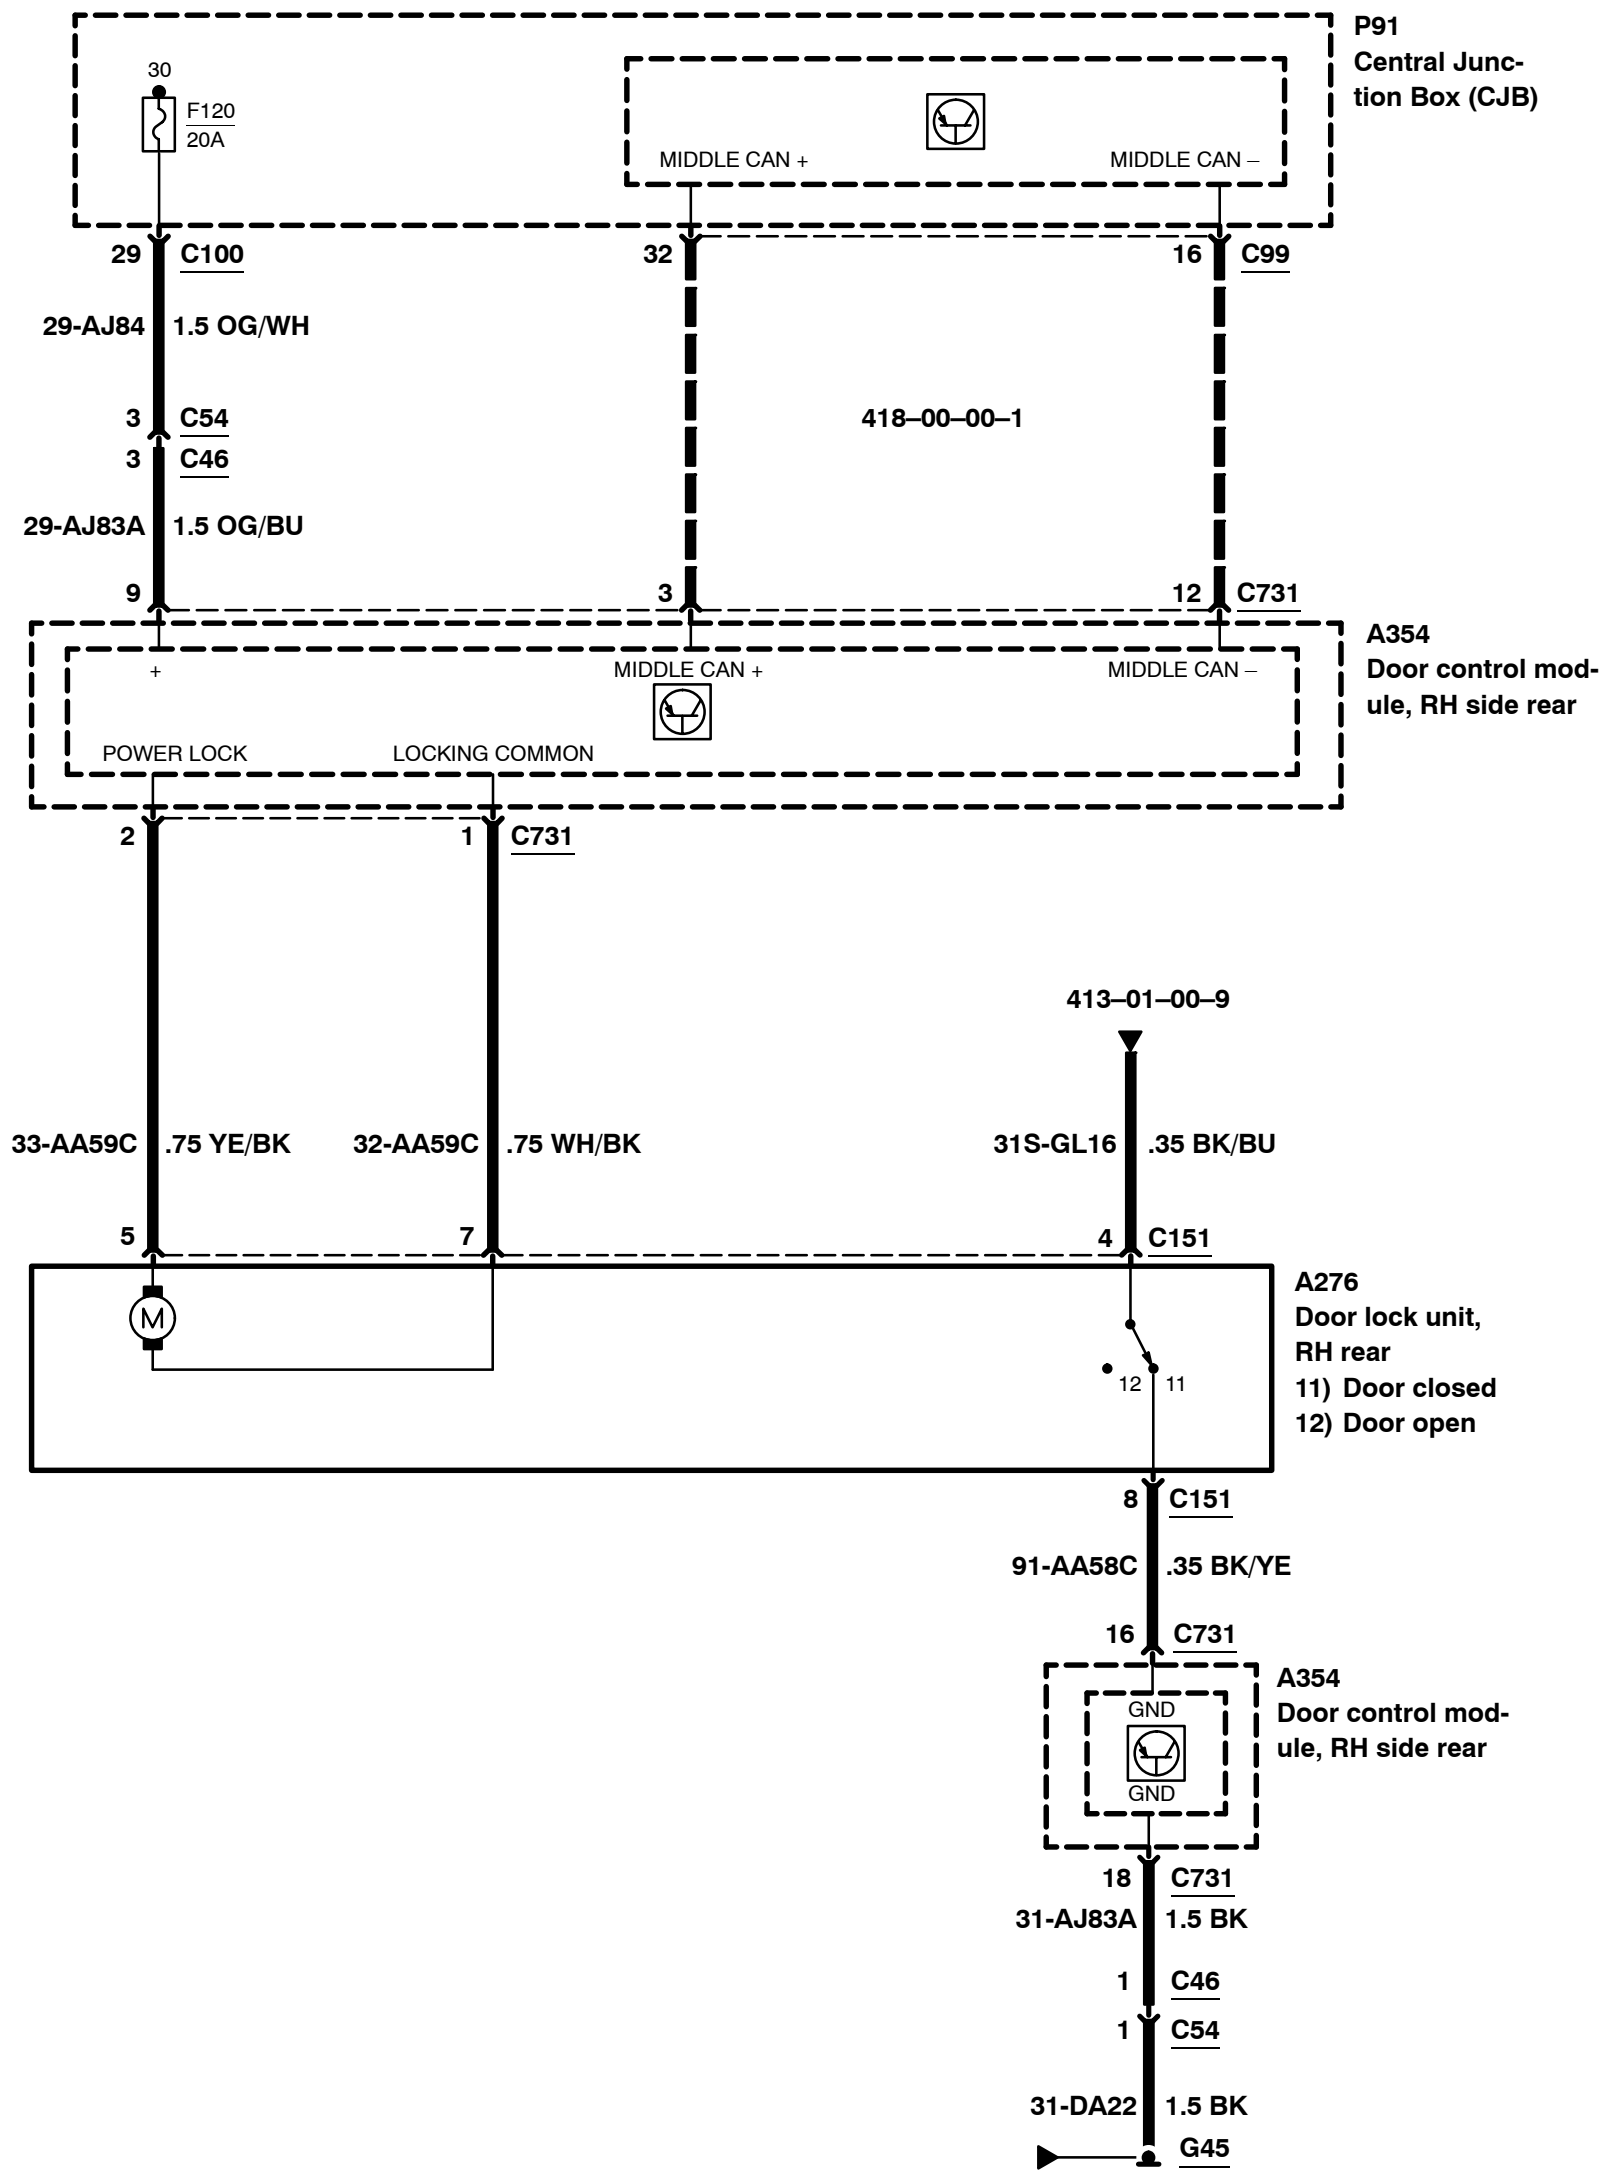

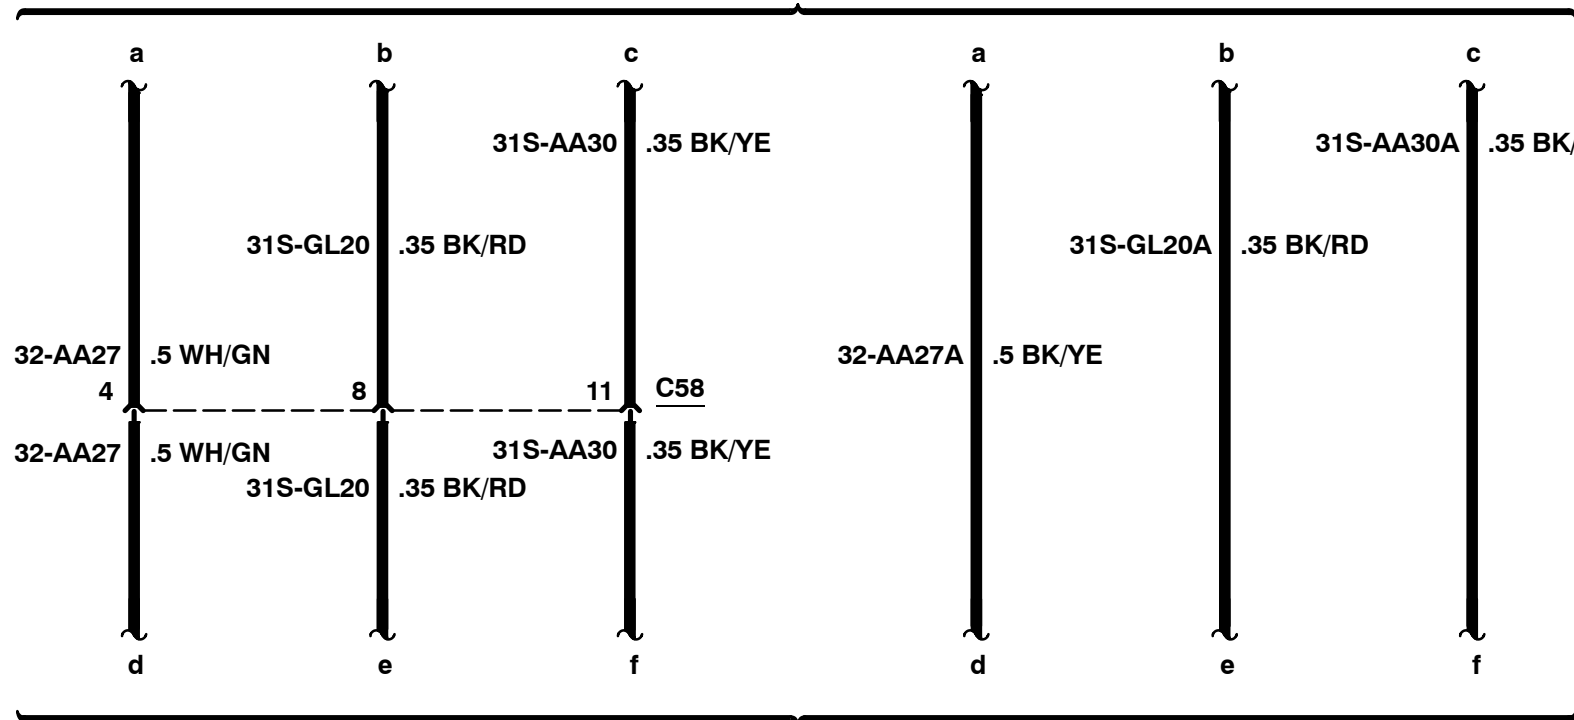


# Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front power windows


02/2008  
501-14-00-11  
2008.25  
Focus

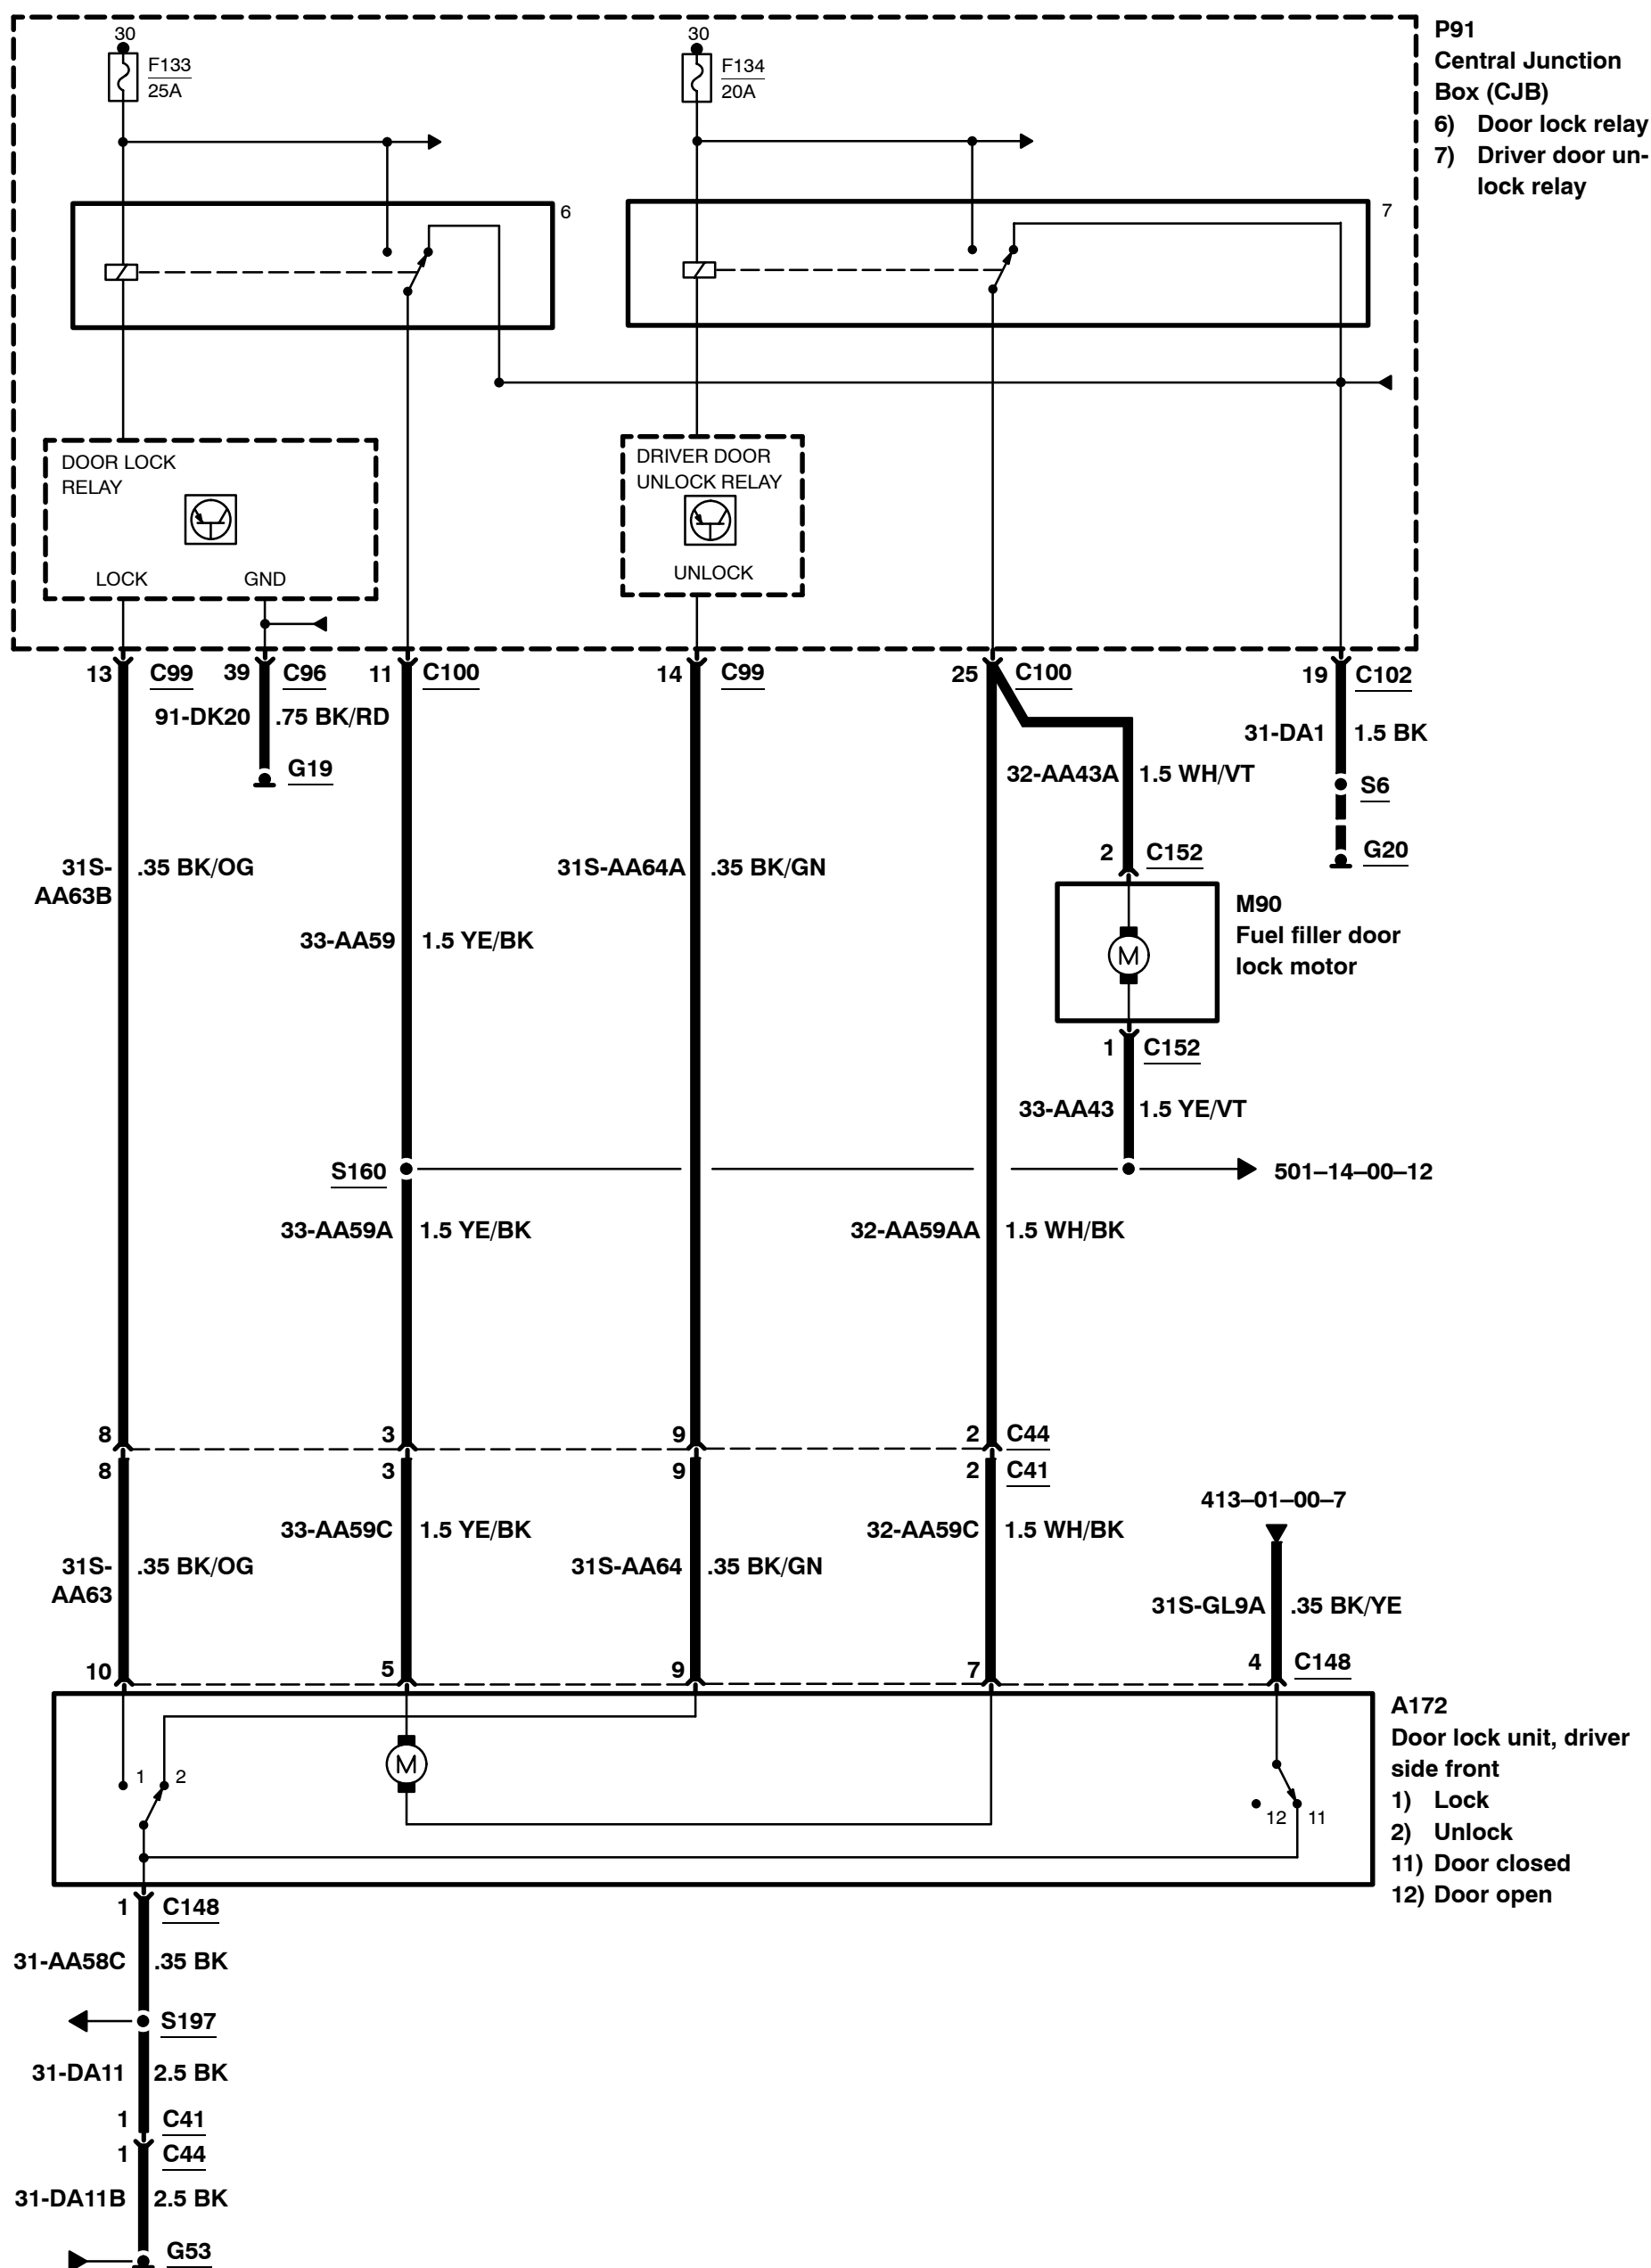


# Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front power windows

02/2008  
501-14-00-12  
2008.25  
Focus

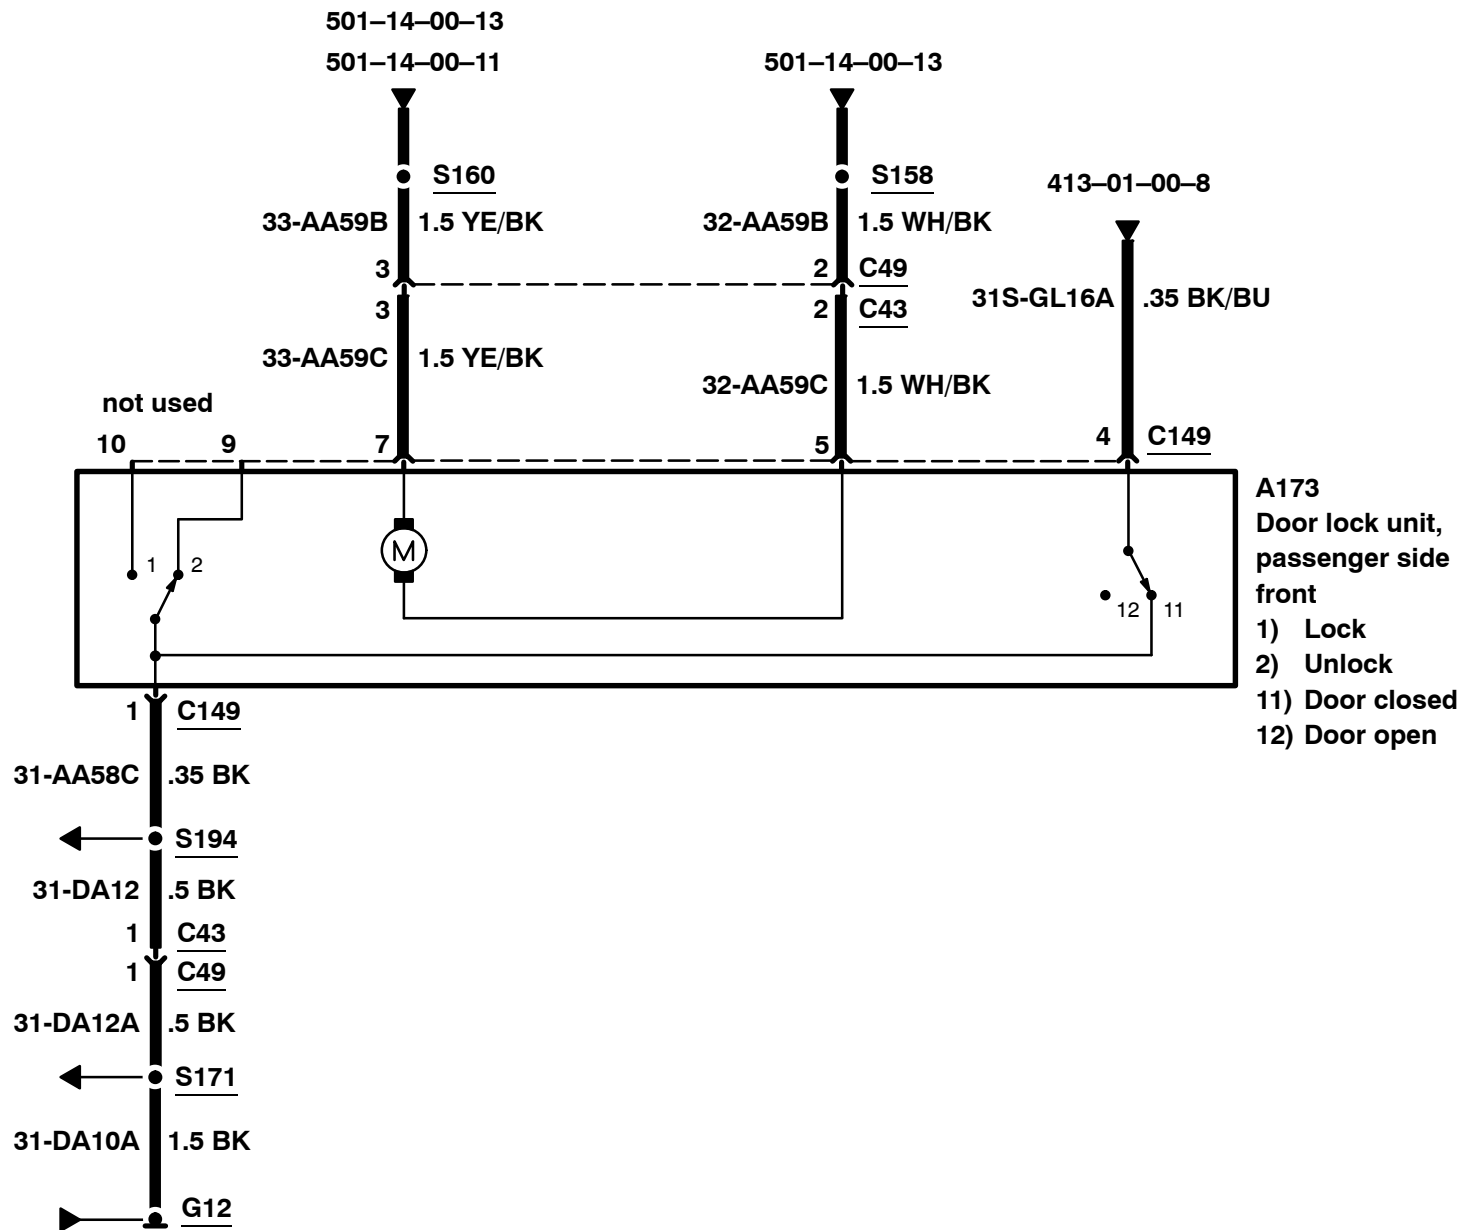

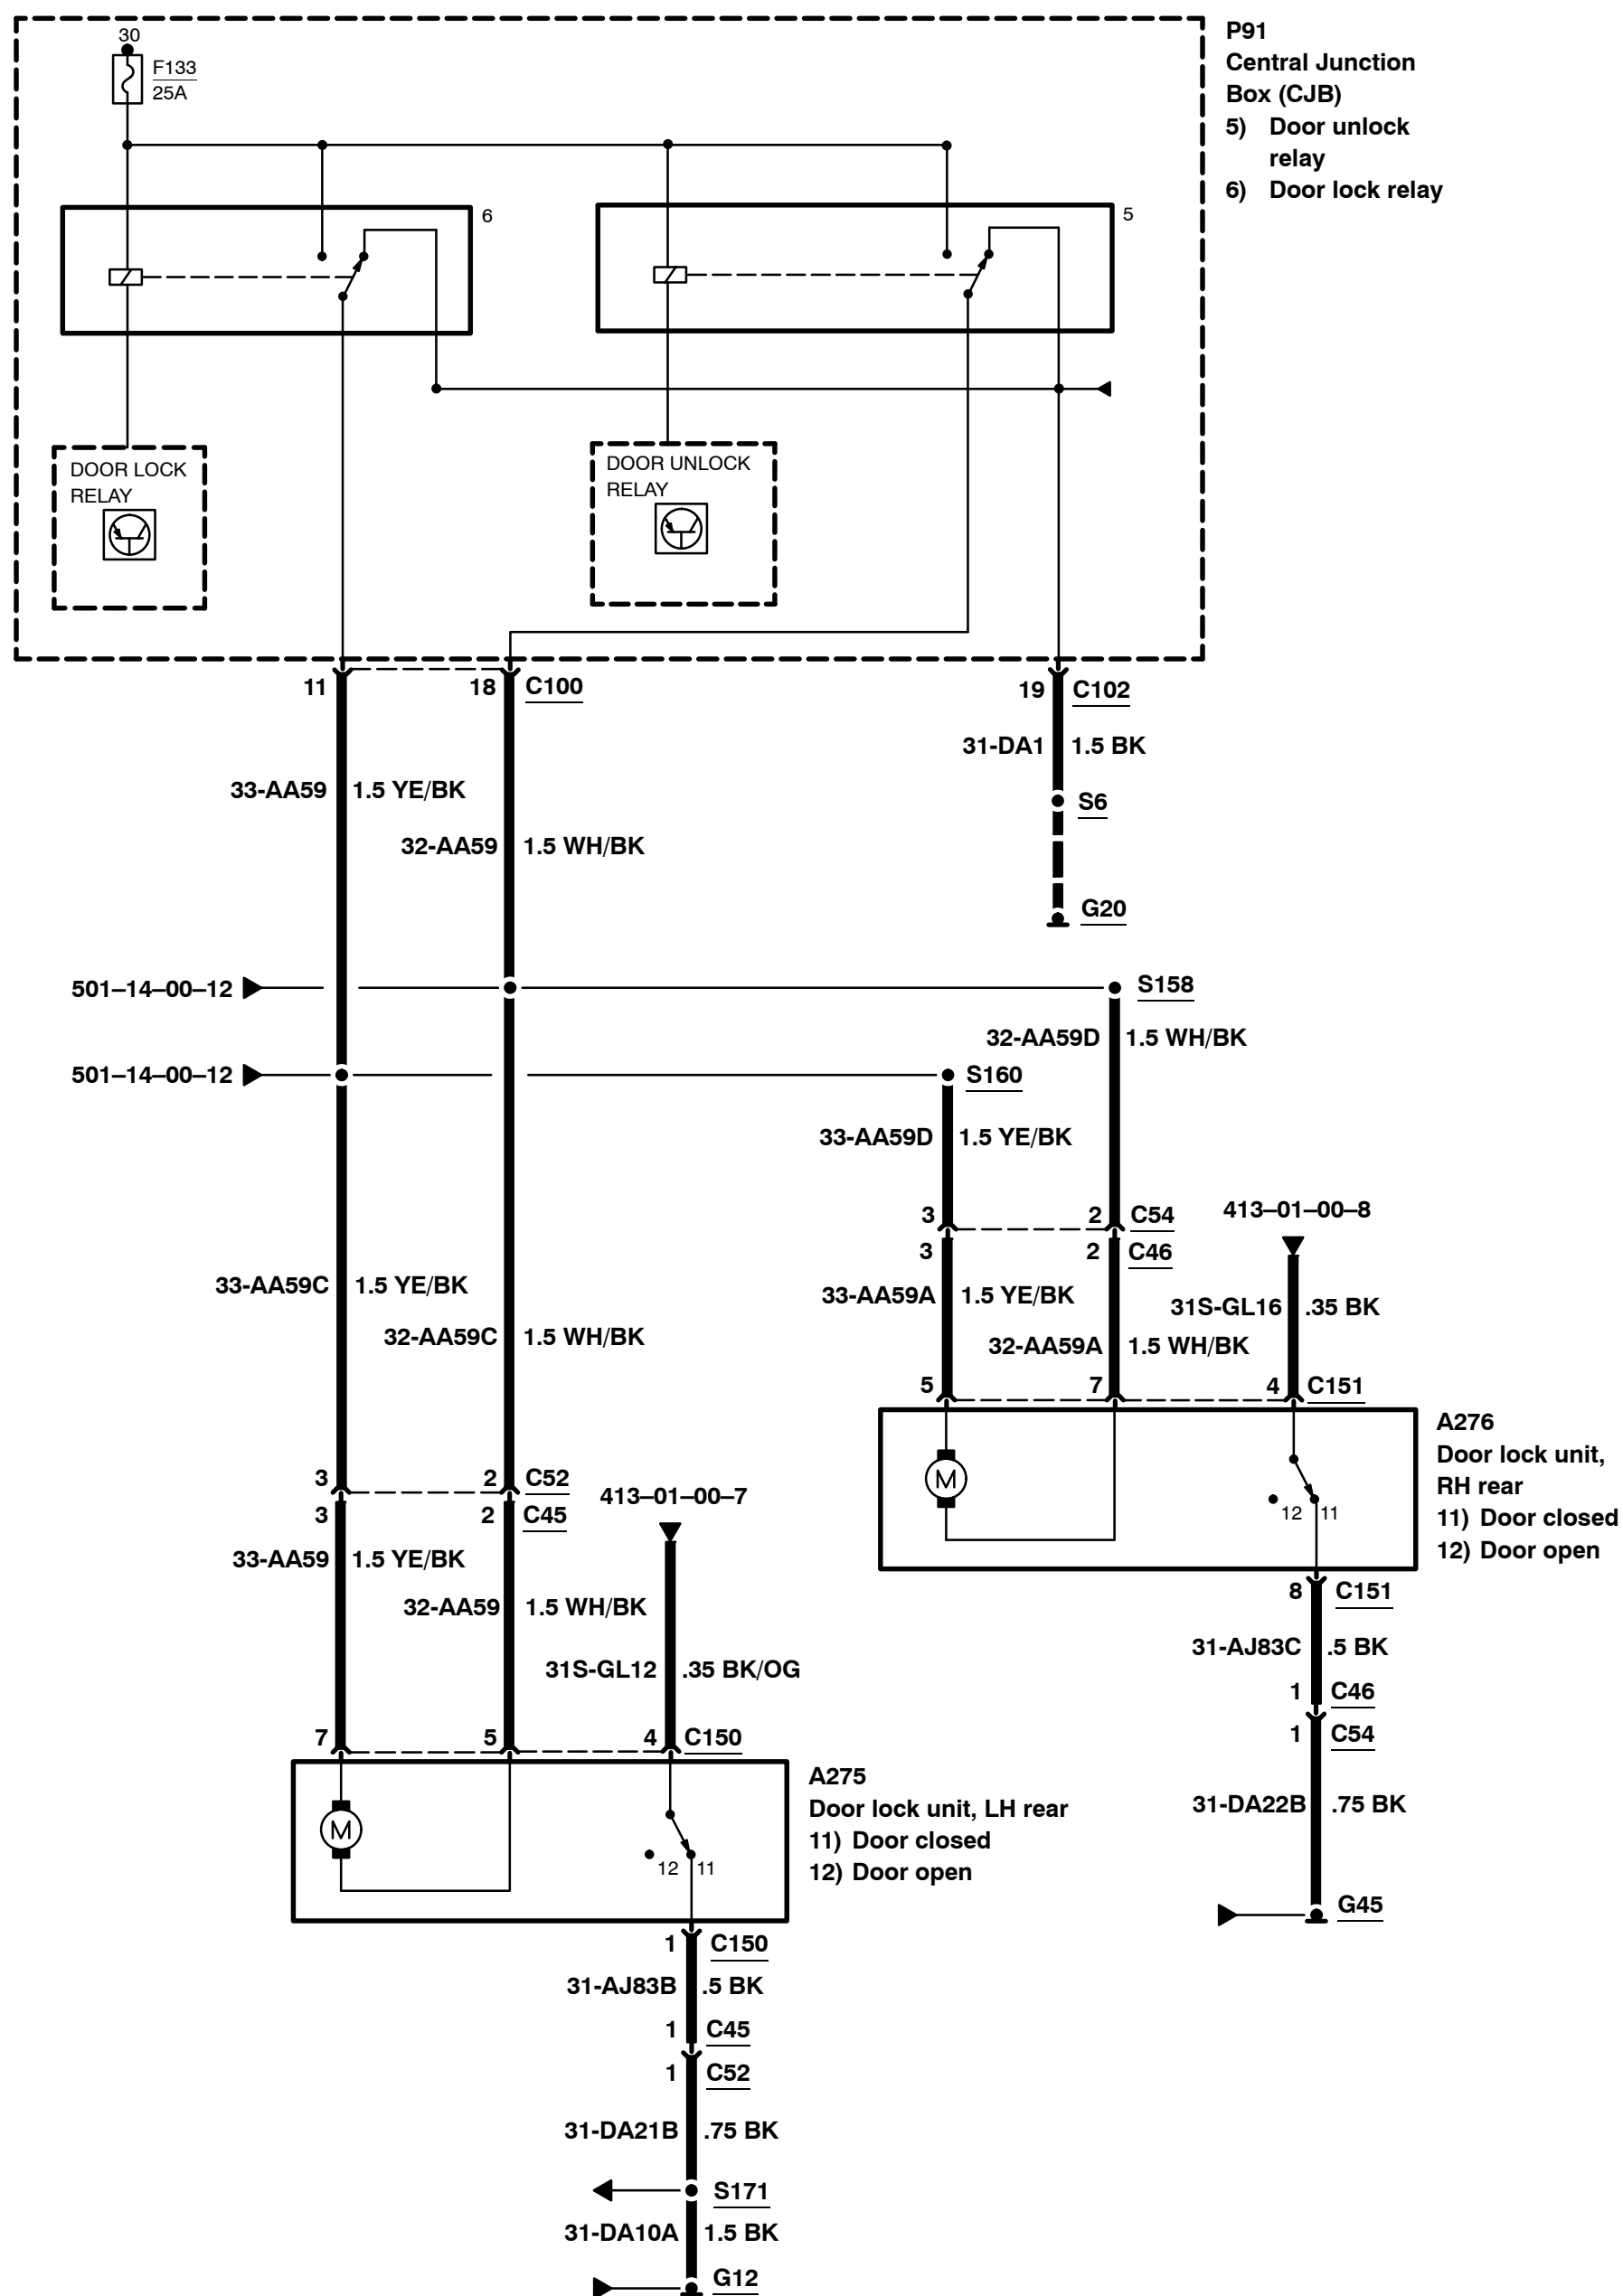


02/2008  
501-14-00-14  
2008.25  
Focus

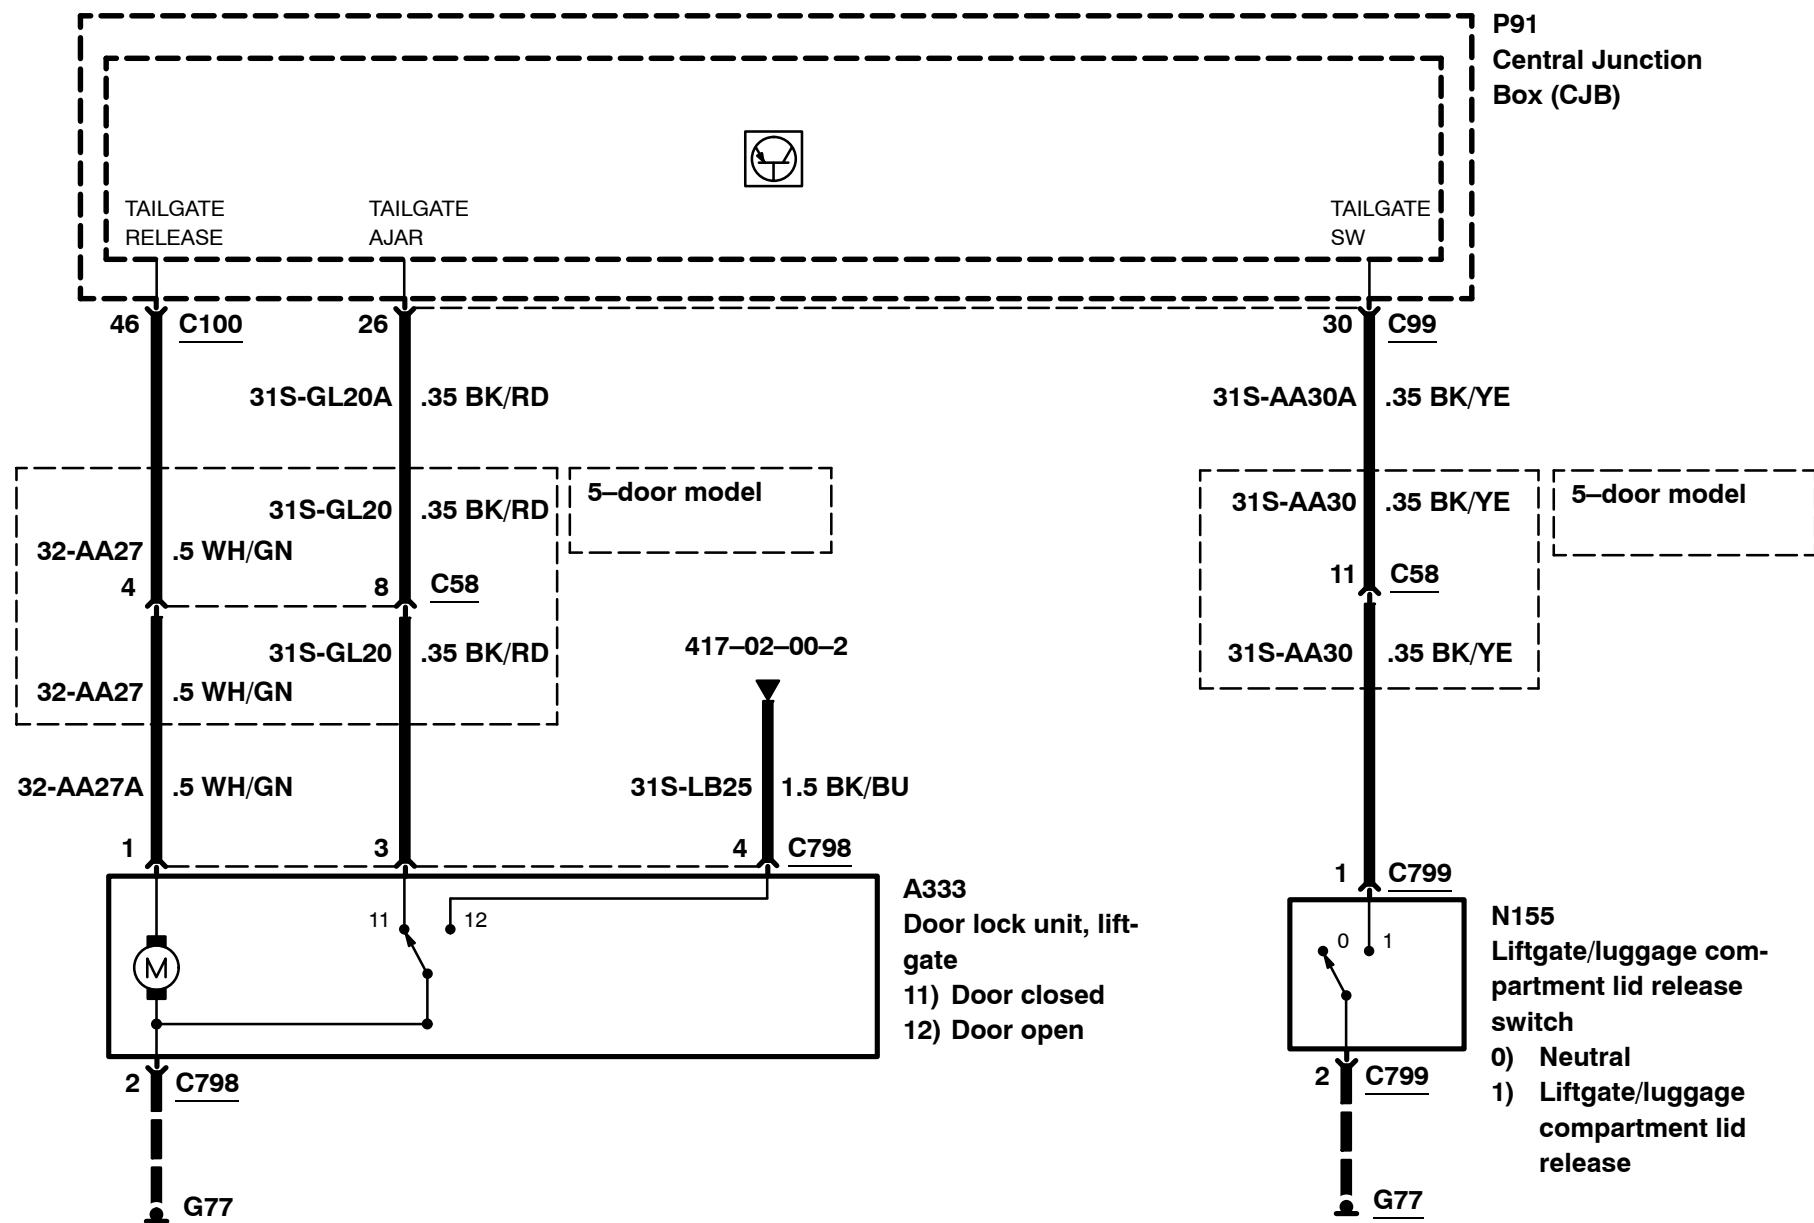

# Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows


02/2008  
501-14-00-15  
2008.25  
Focus

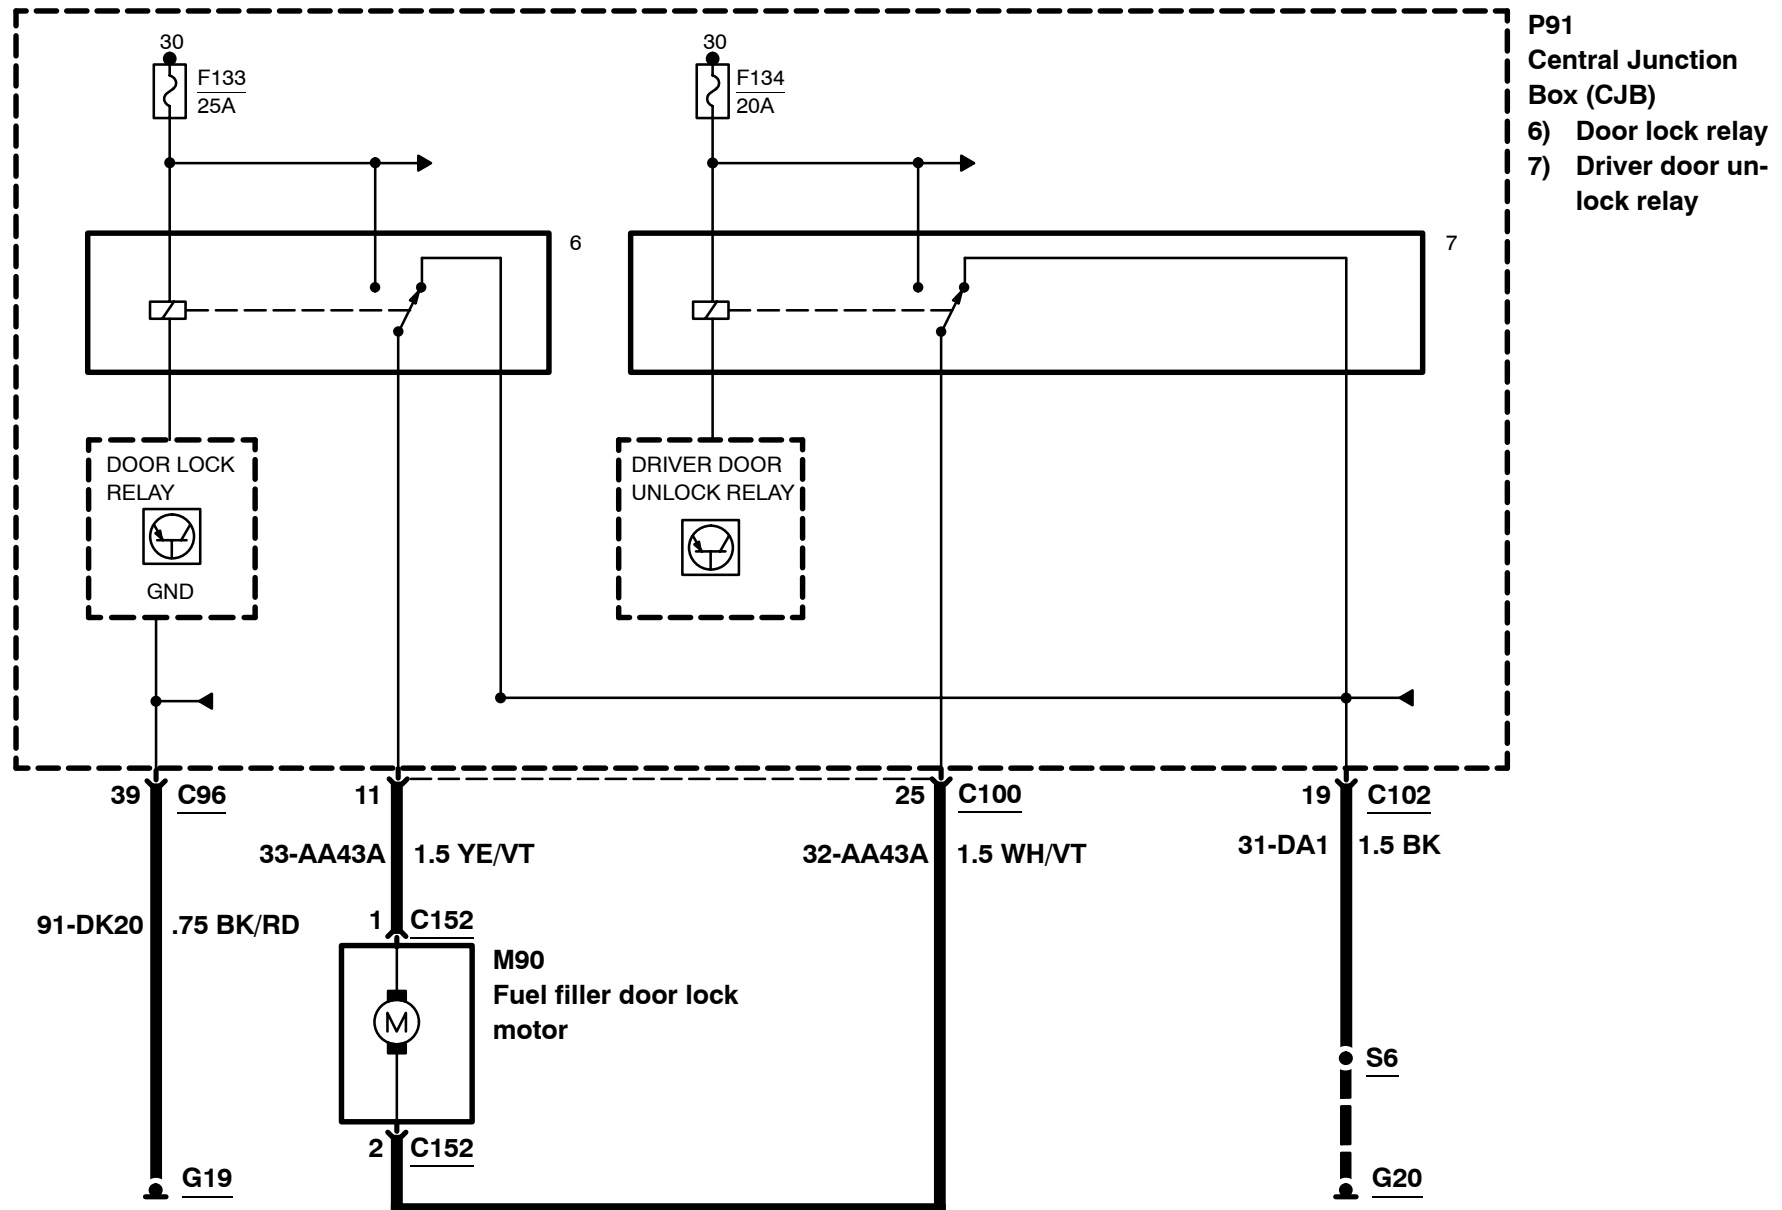



# Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows


02/2008  
501-14-00-16  
2008.25  
Focus

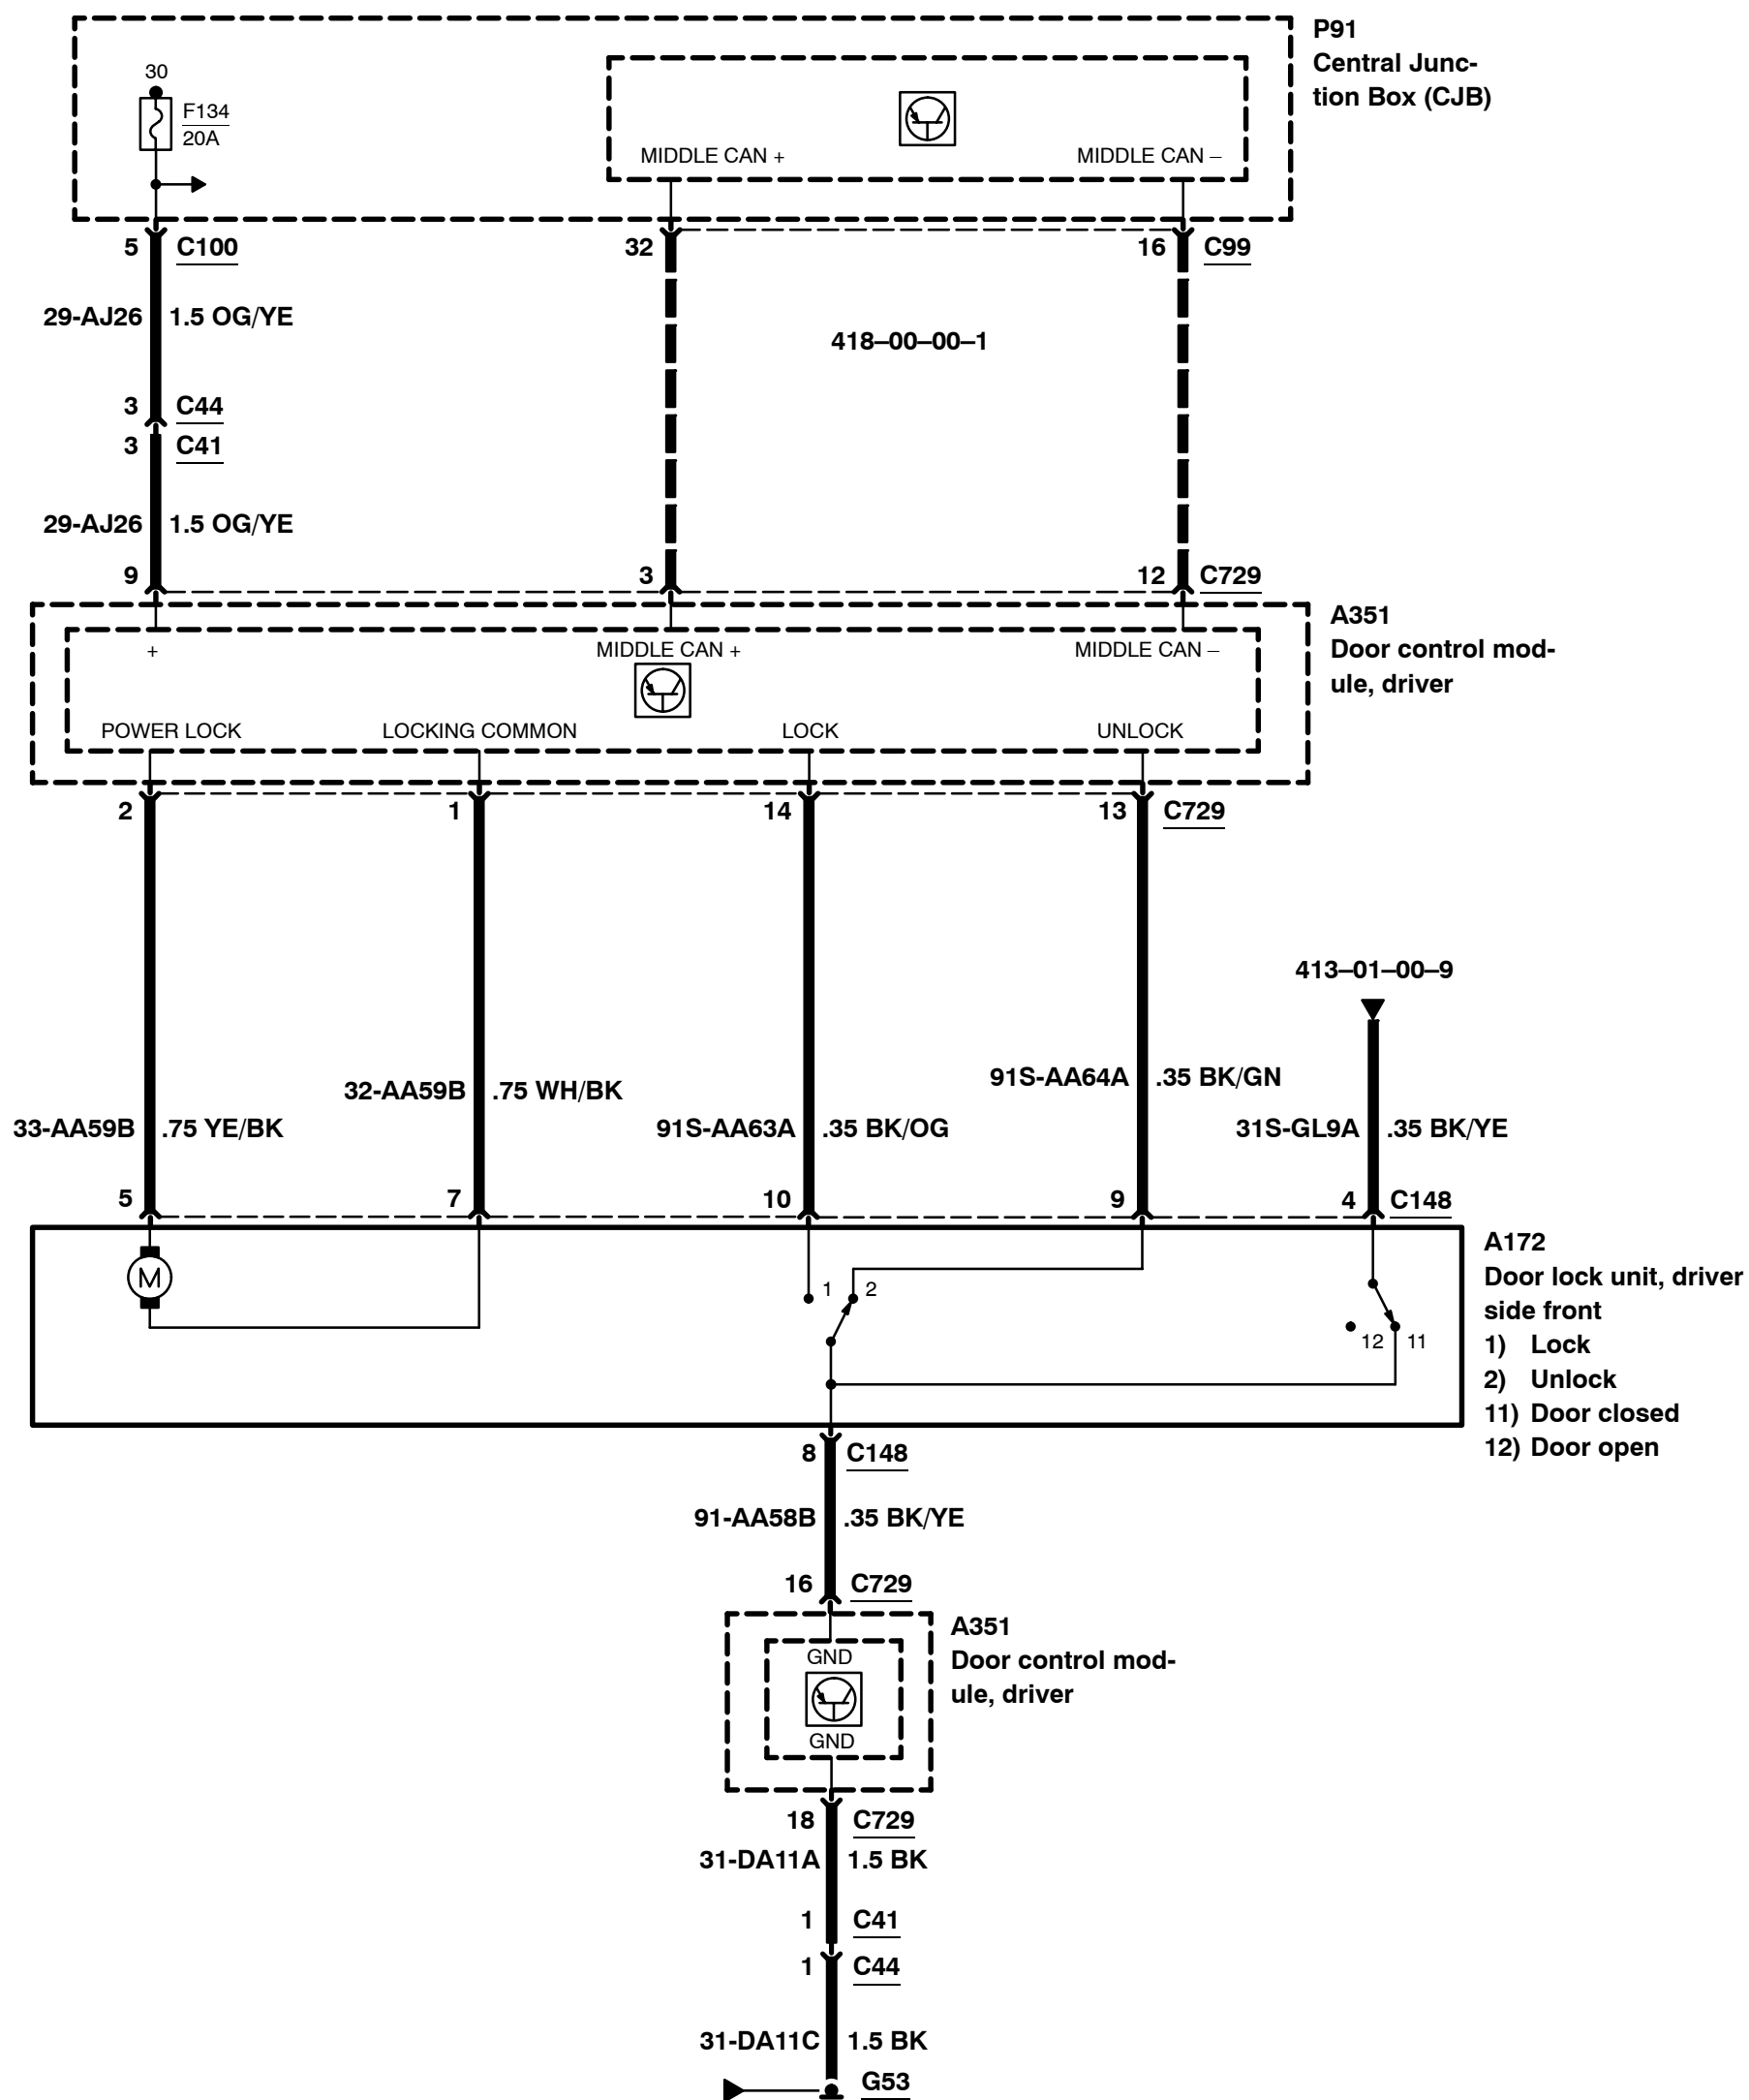




# Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows

02/2008  
501-14-00-17  
2008.25  
Focus

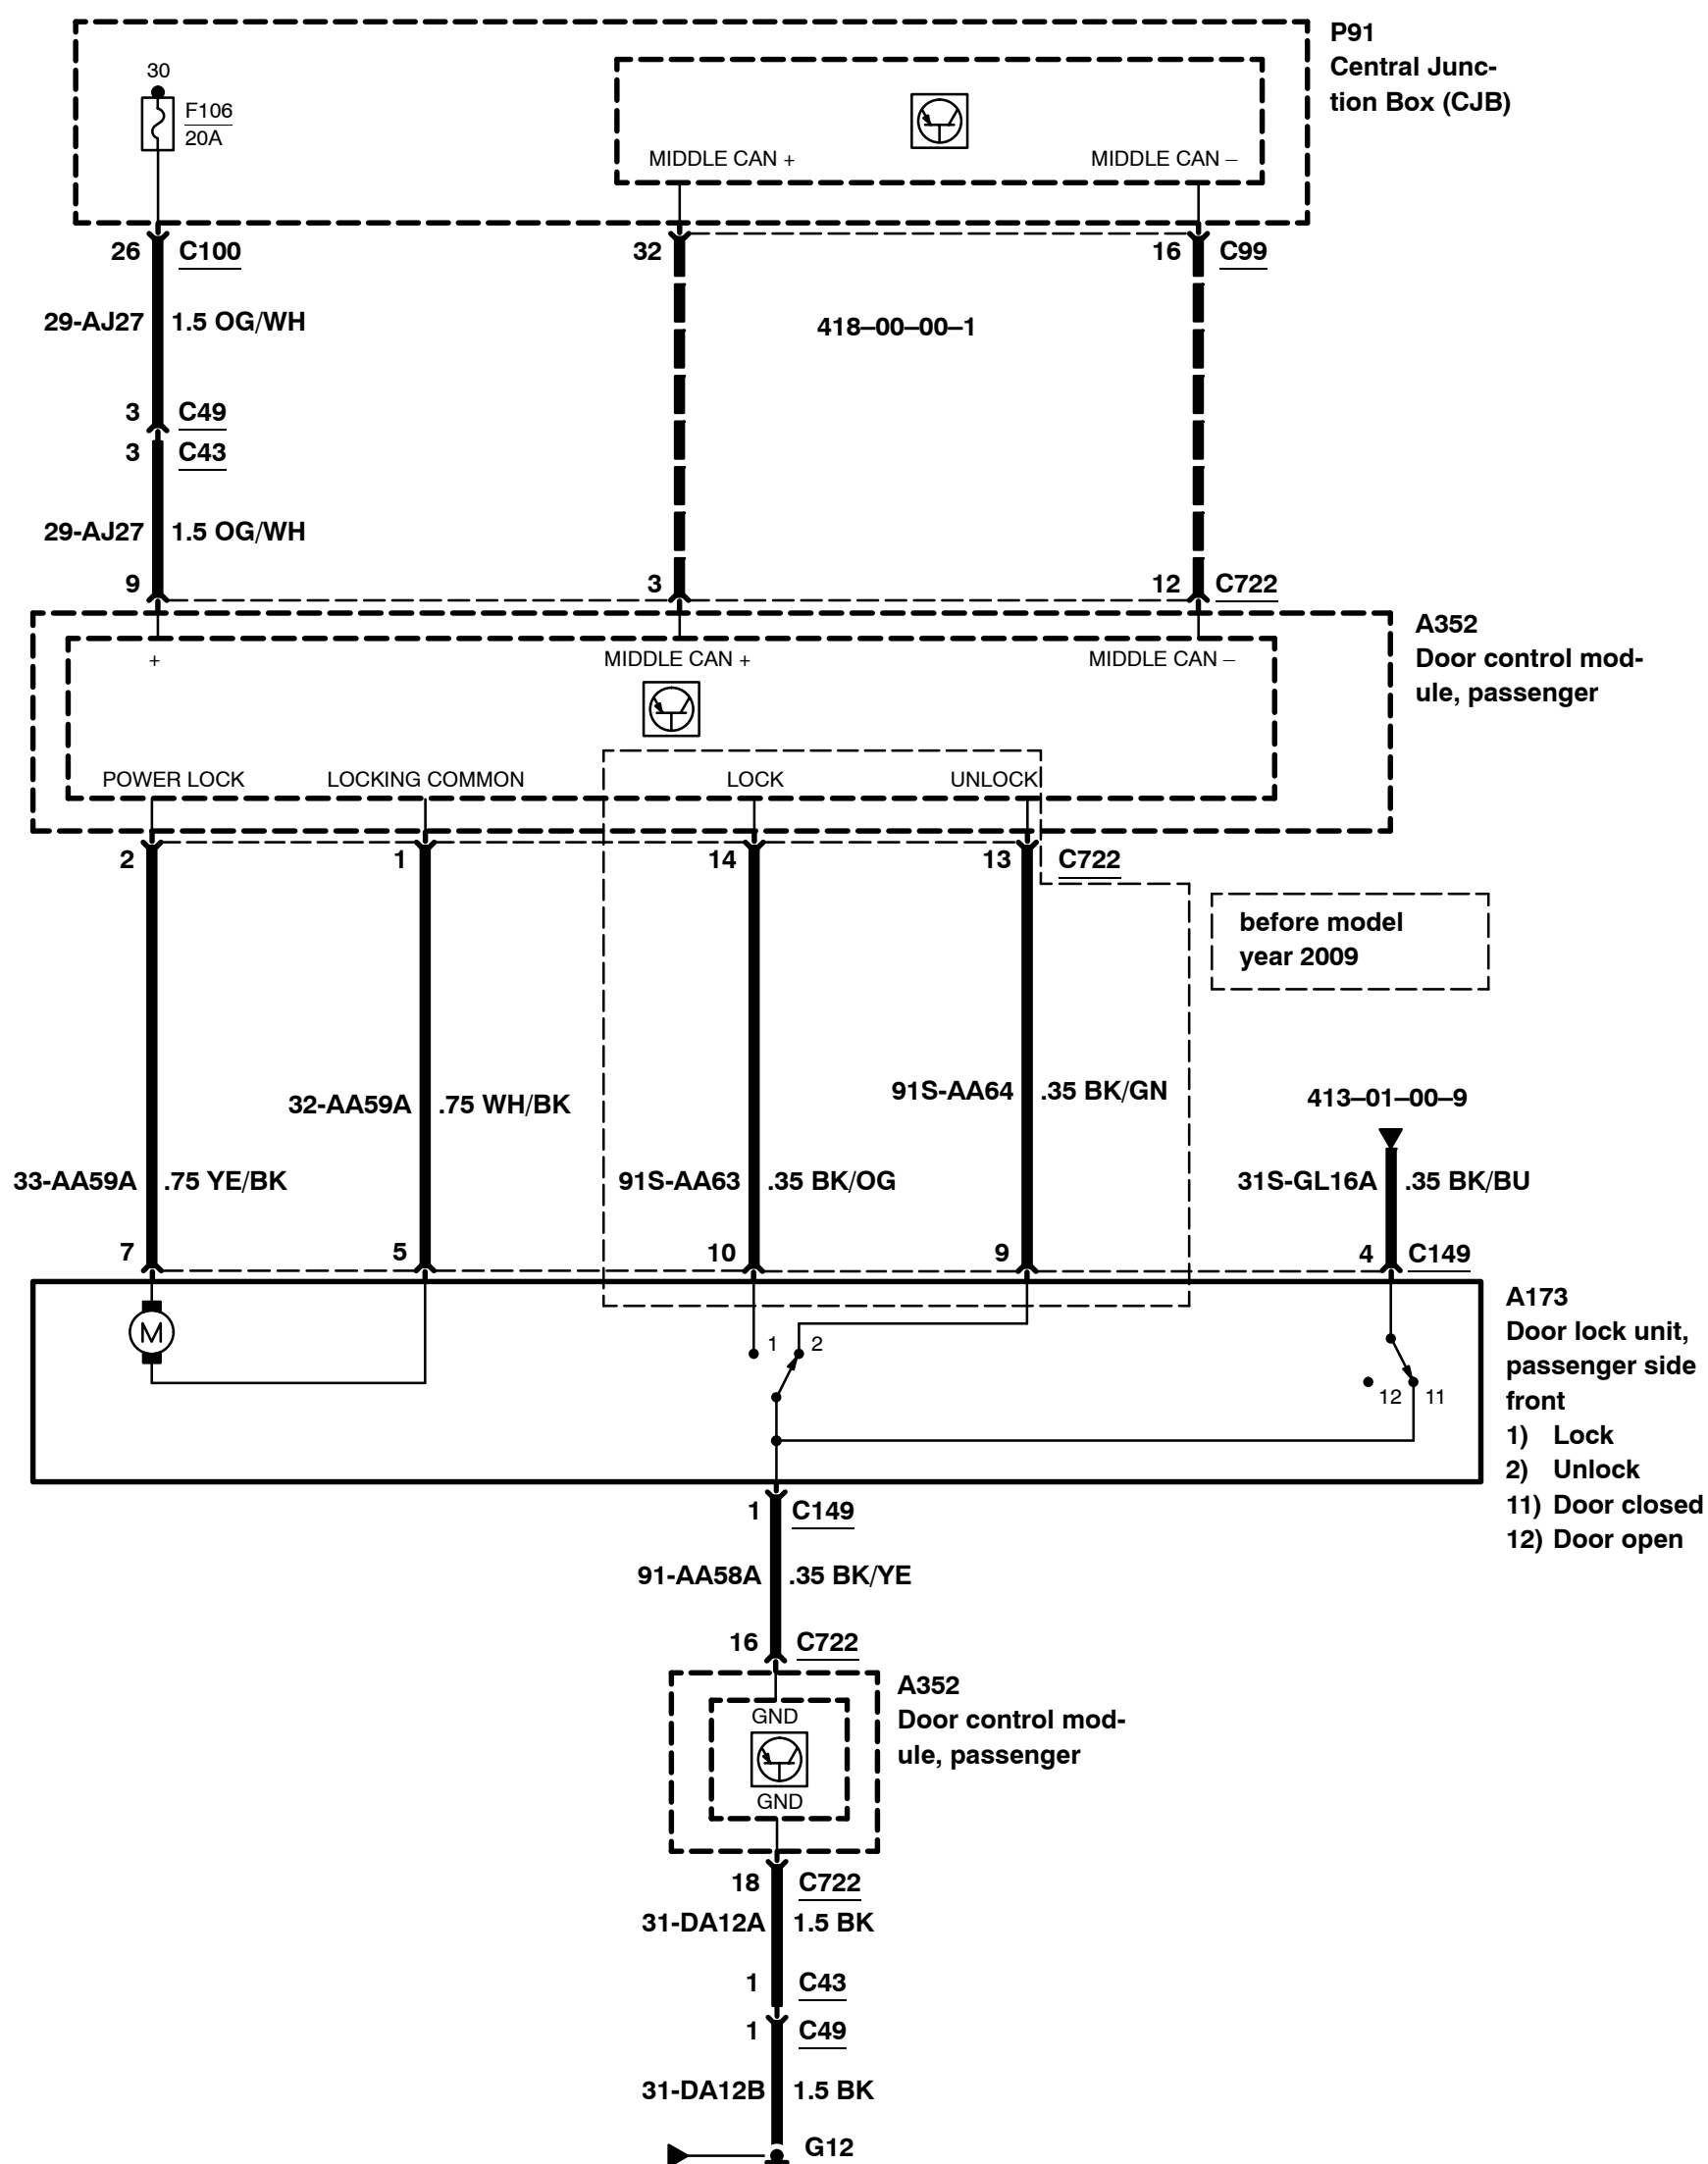


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows

02/2008  
501-14-00-18  
2008.25  
Focus

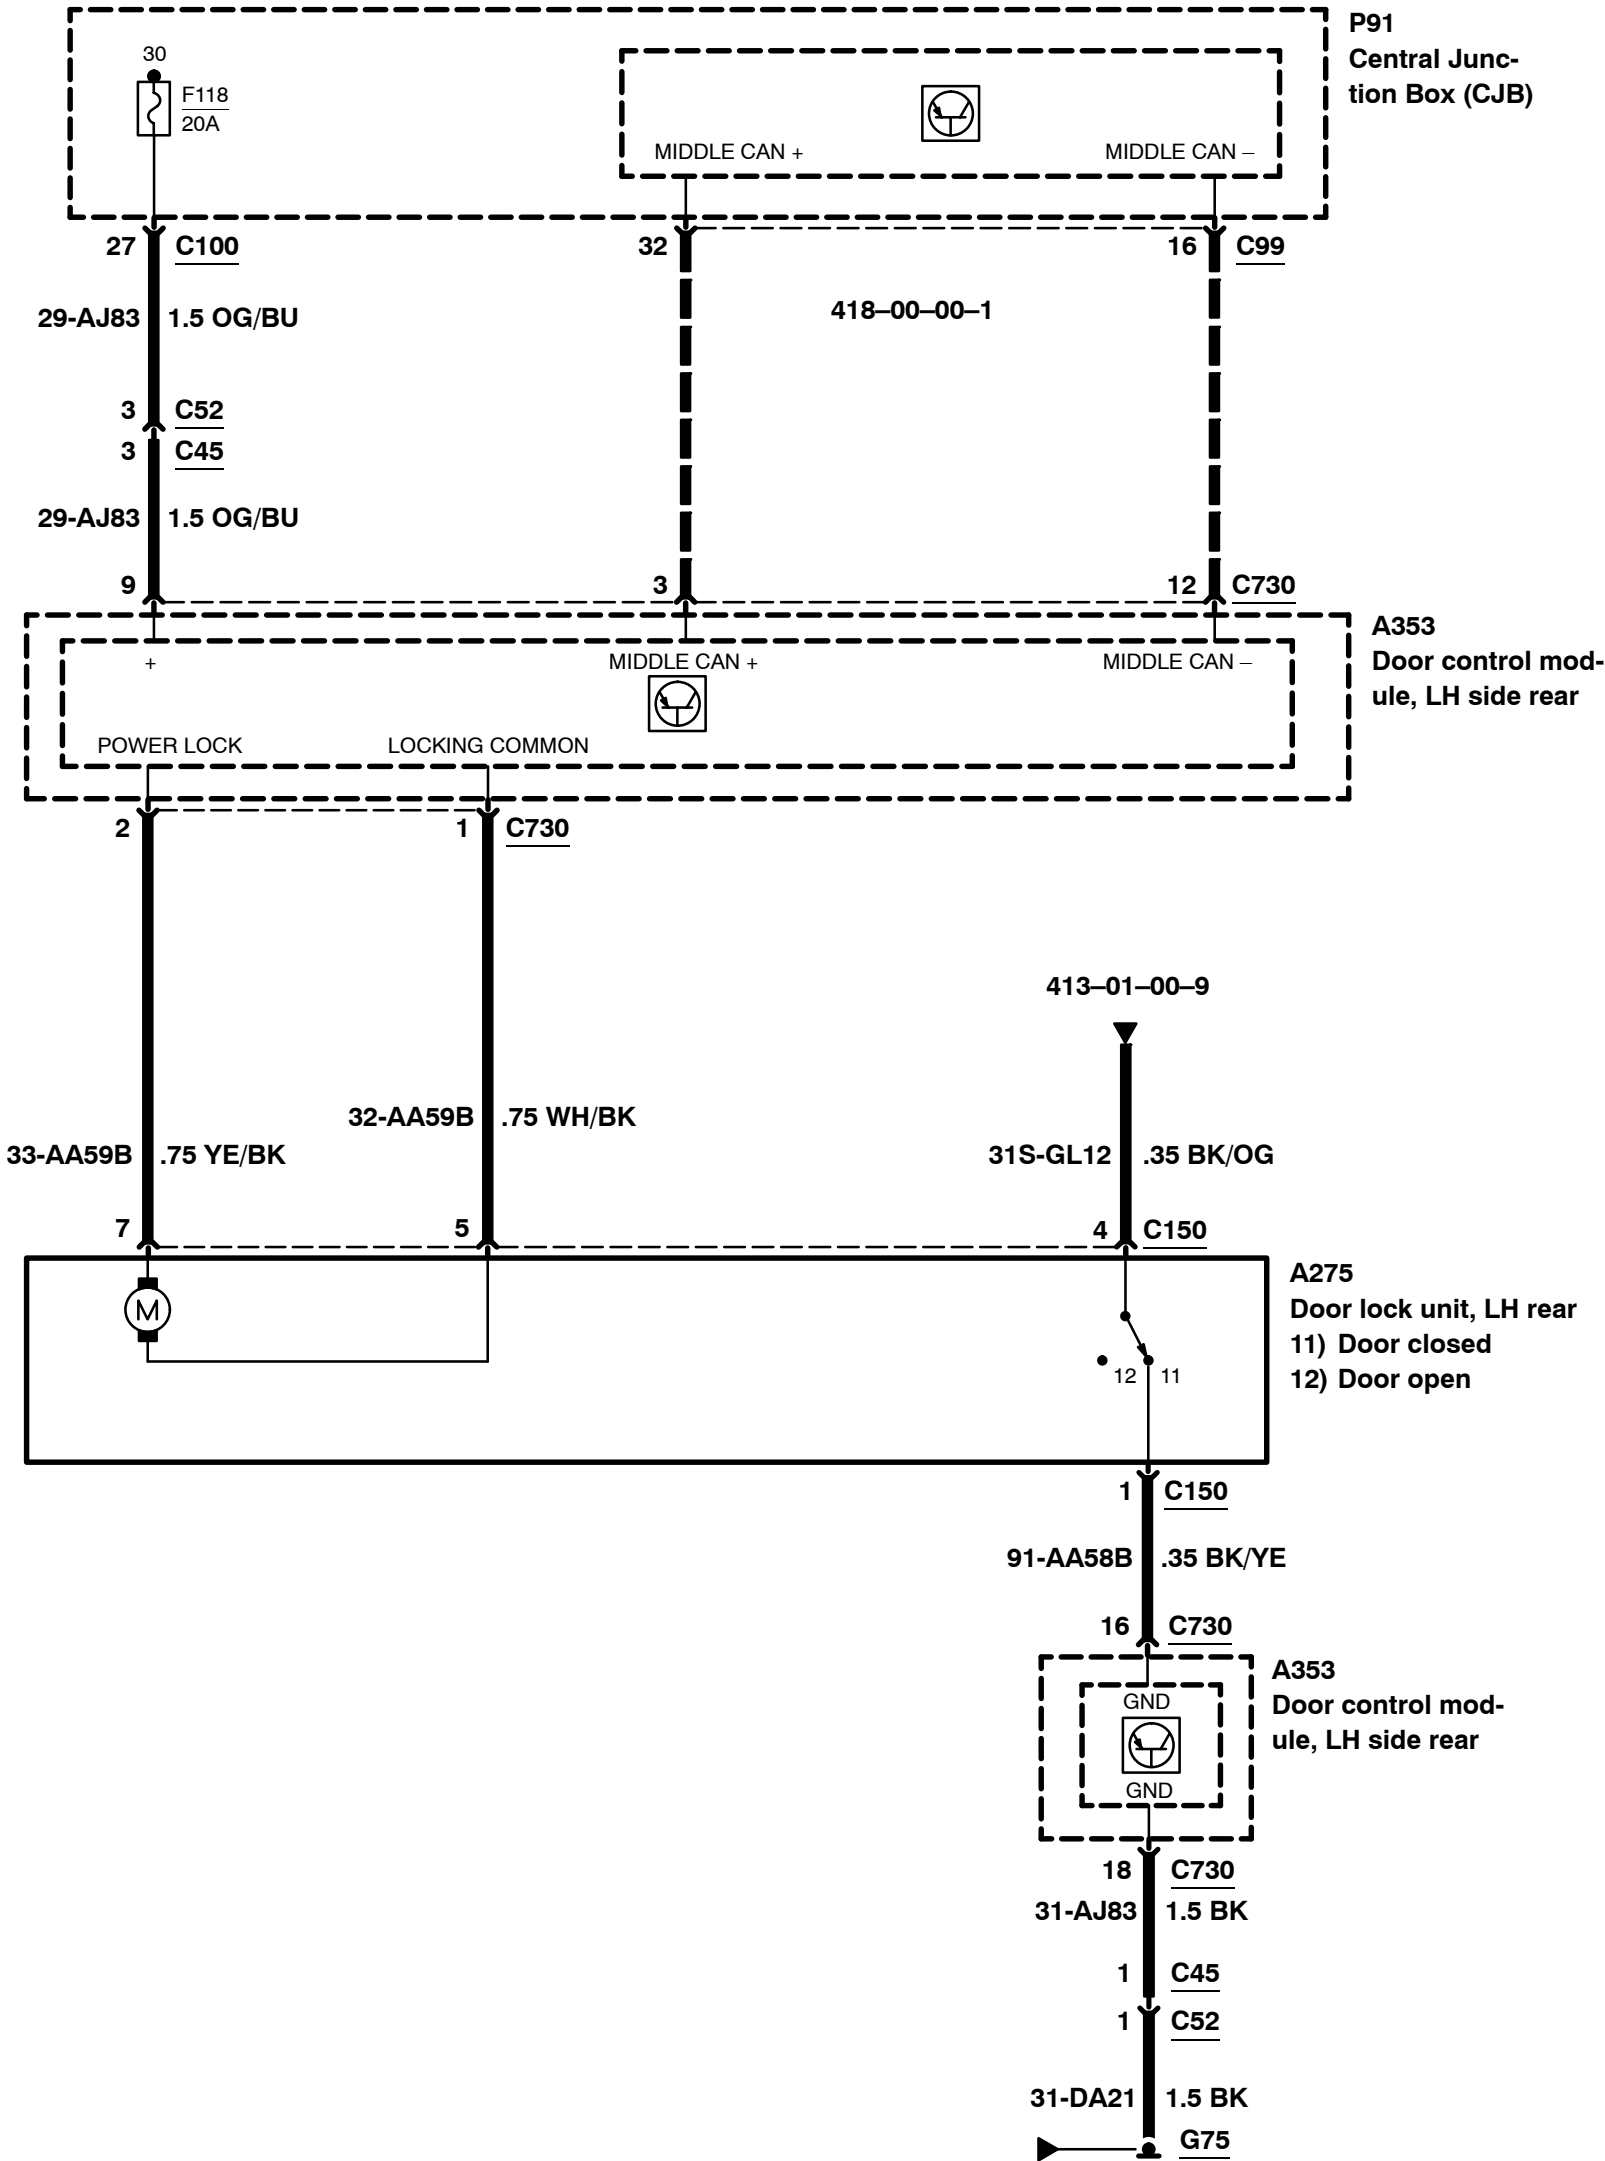


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows


02/2008  
501-14-00-19  
2008.25  
Focus

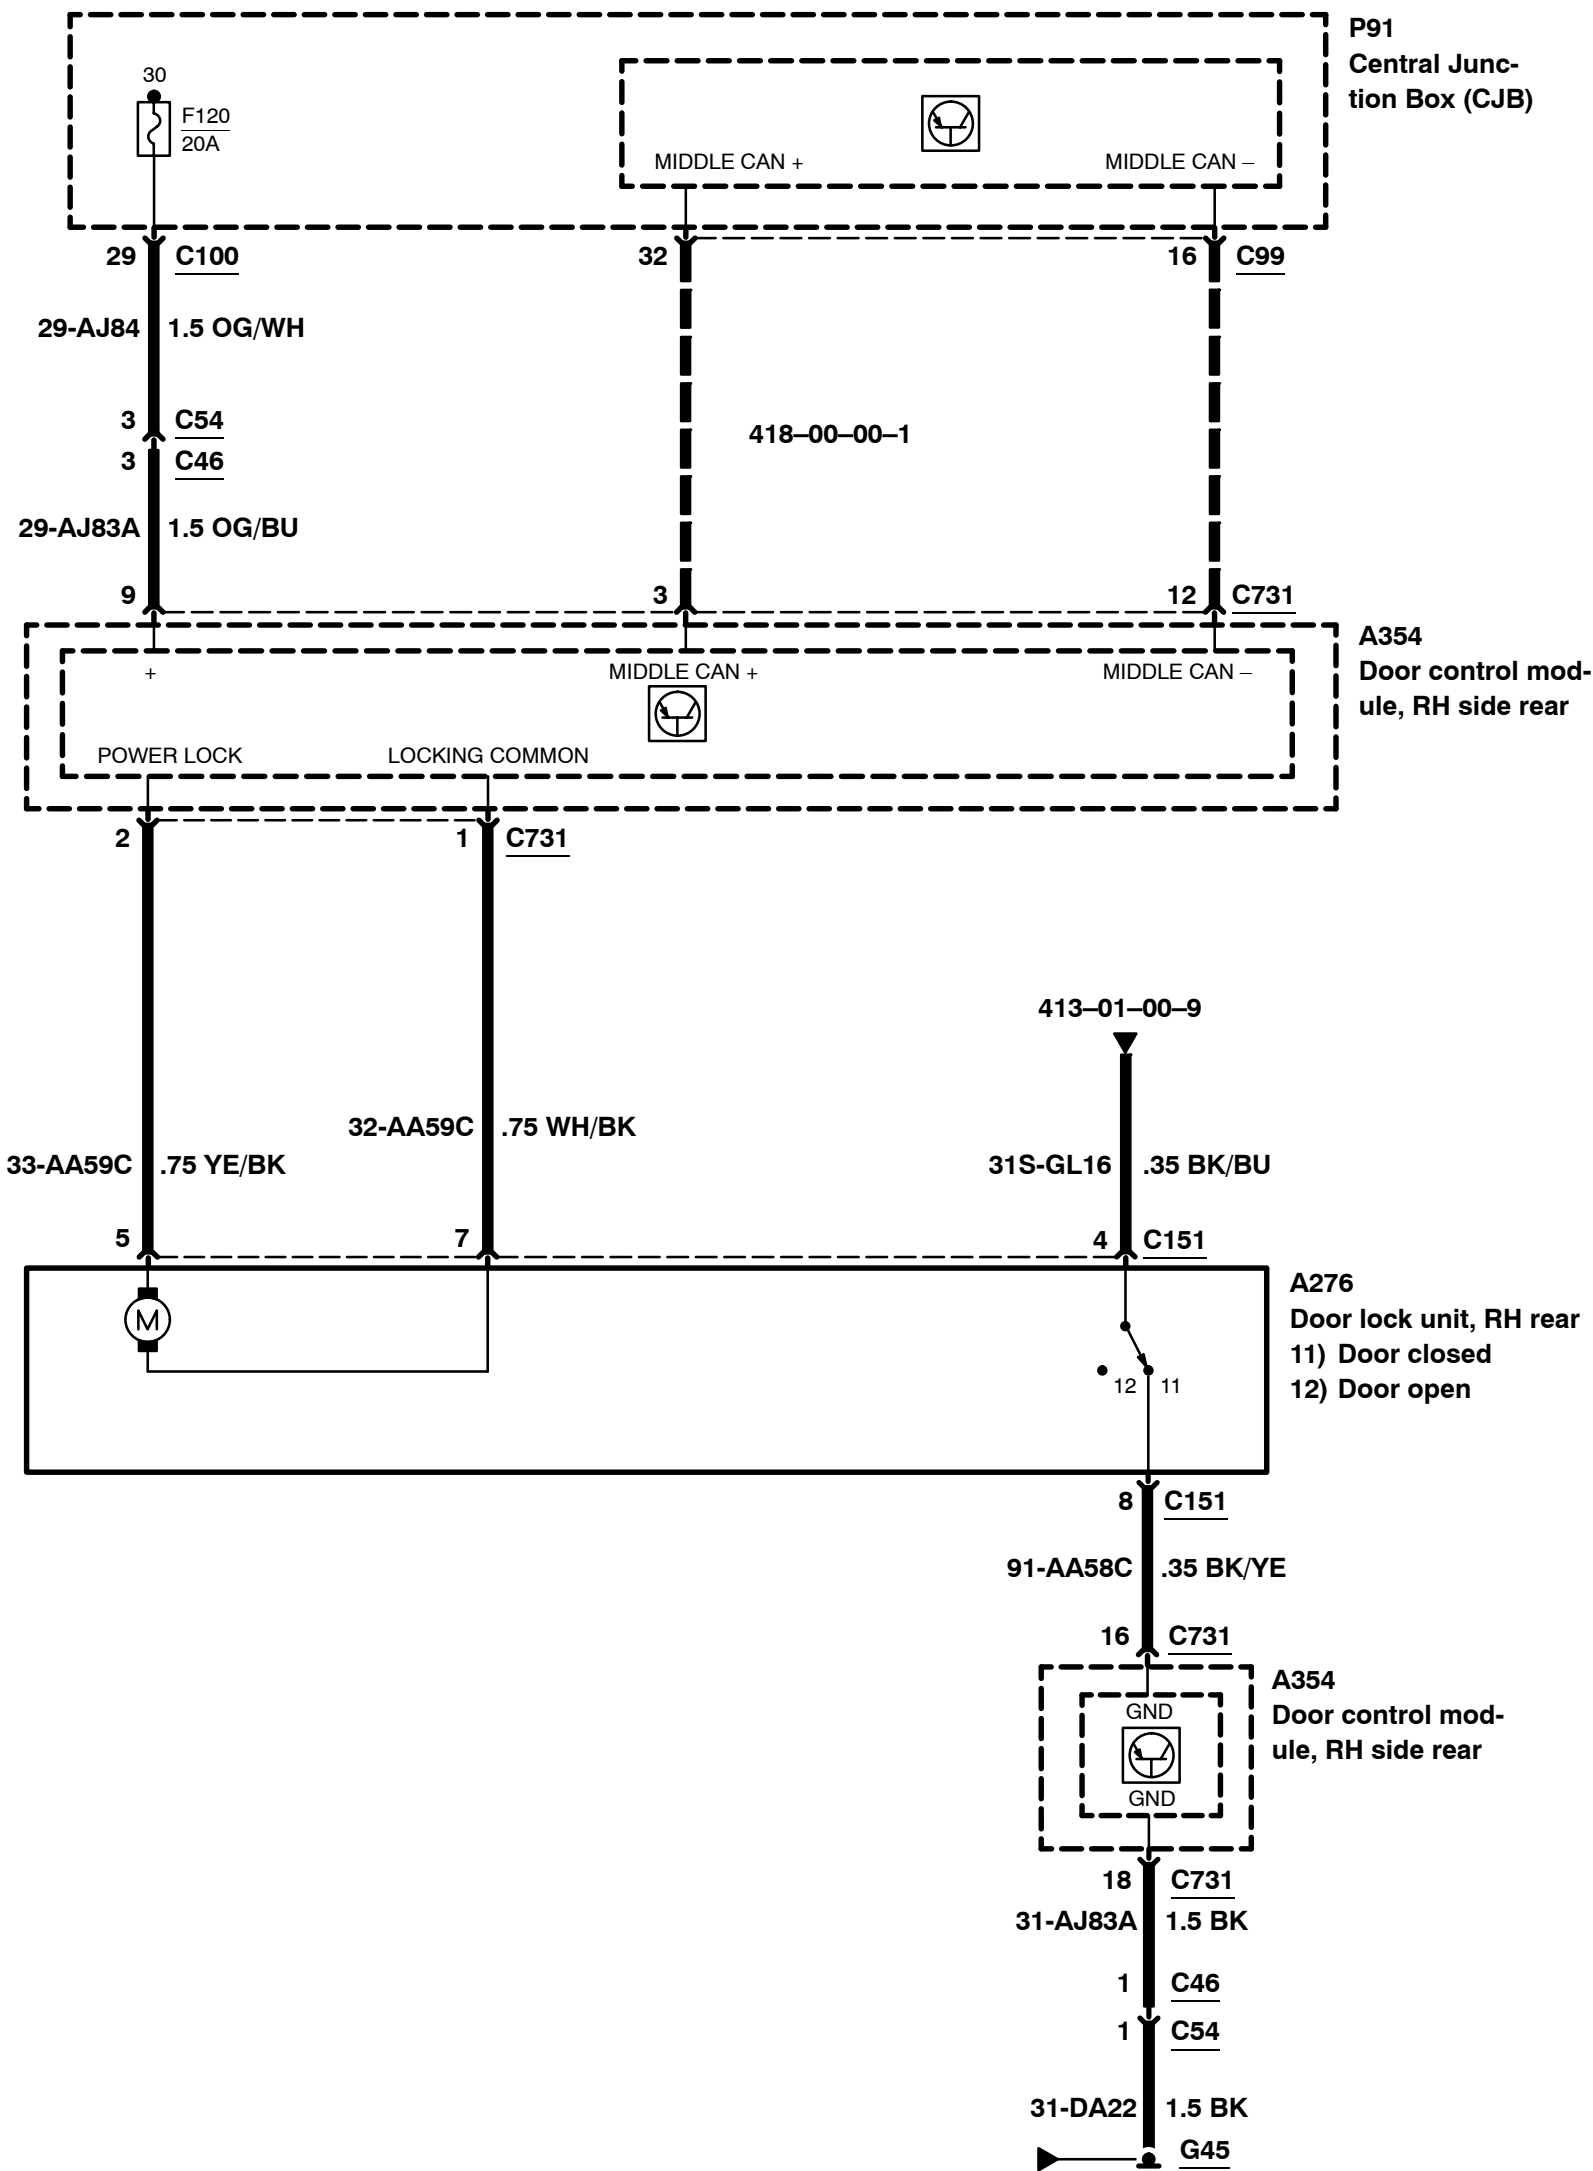

# Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows


02/2008  
501-14-00-20  
2008.25  
Focus

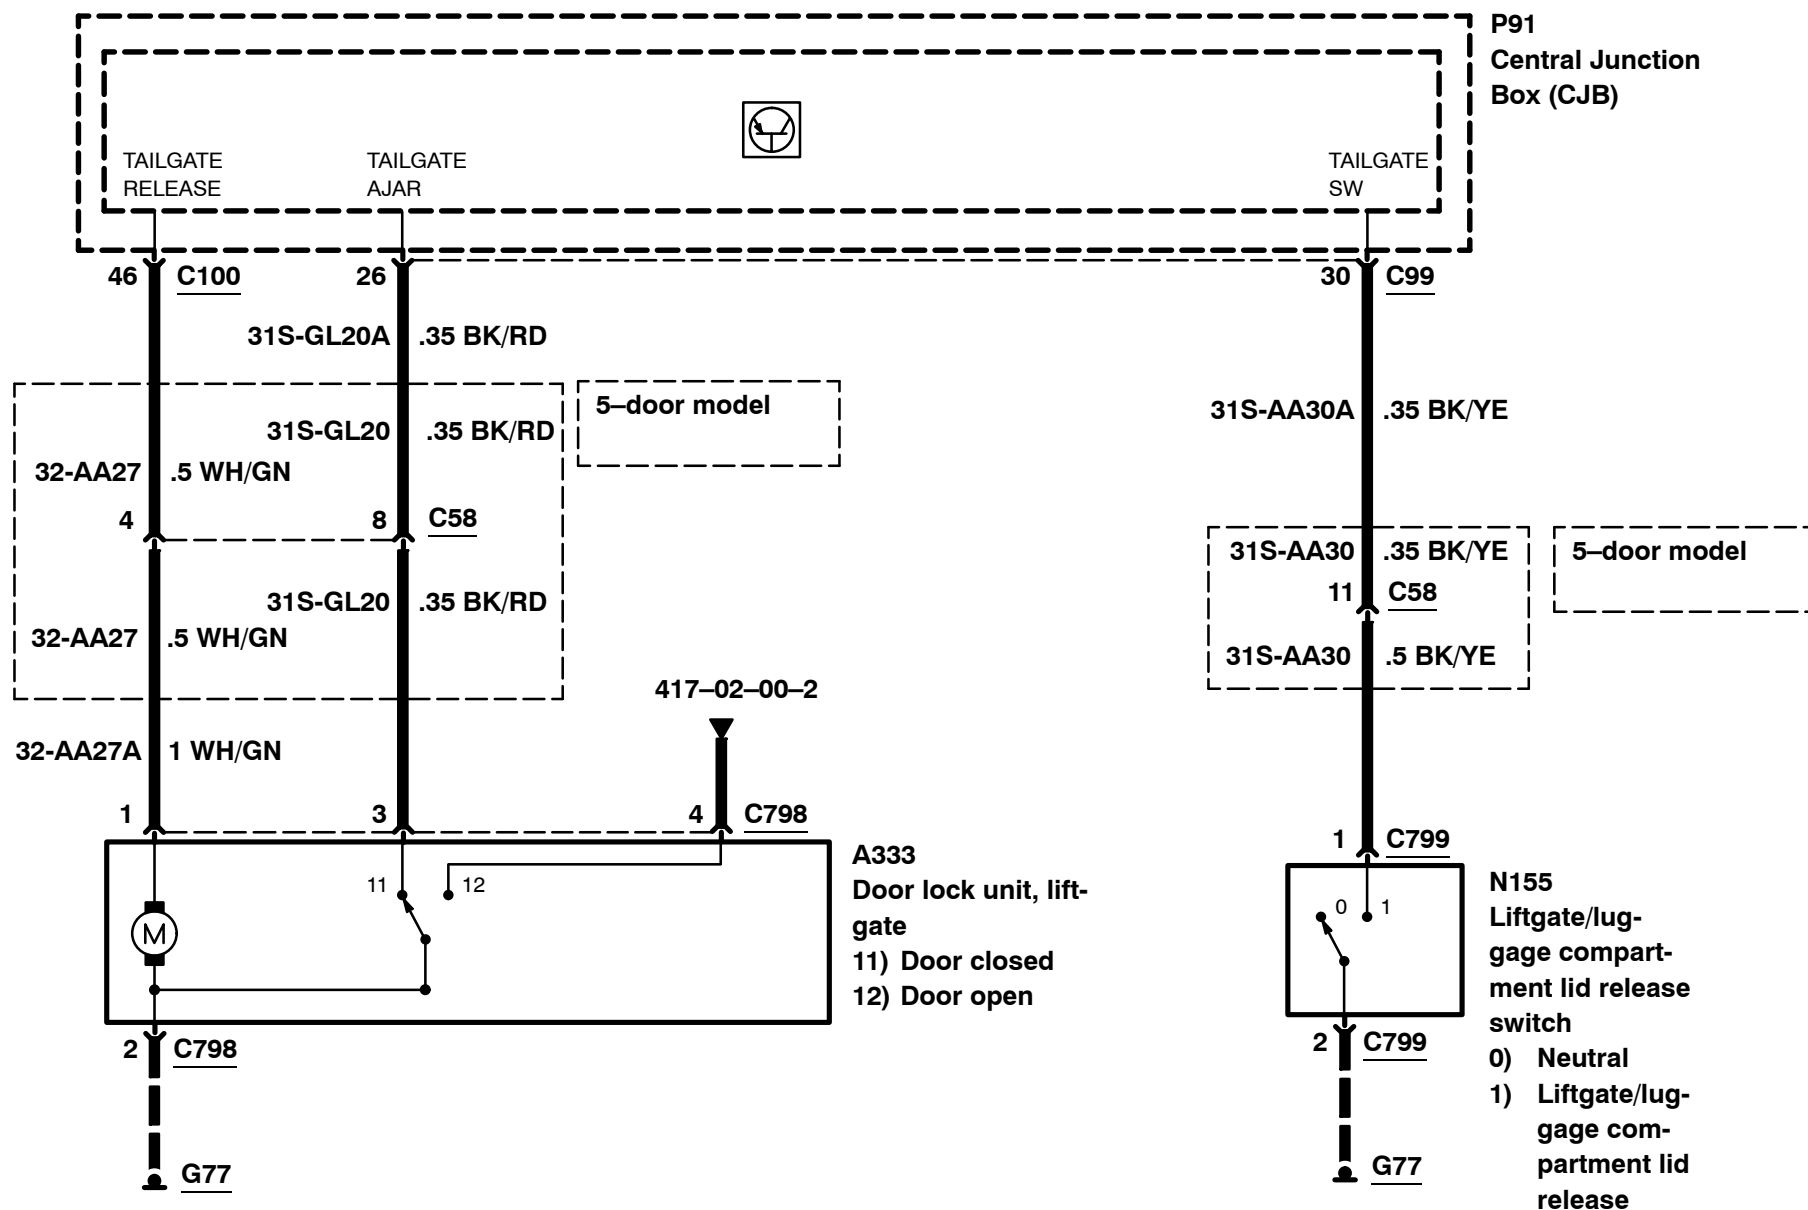

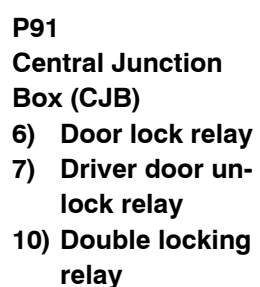

Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front power windows


02/2008  
501-14-00-22  
2008.25  
Focus

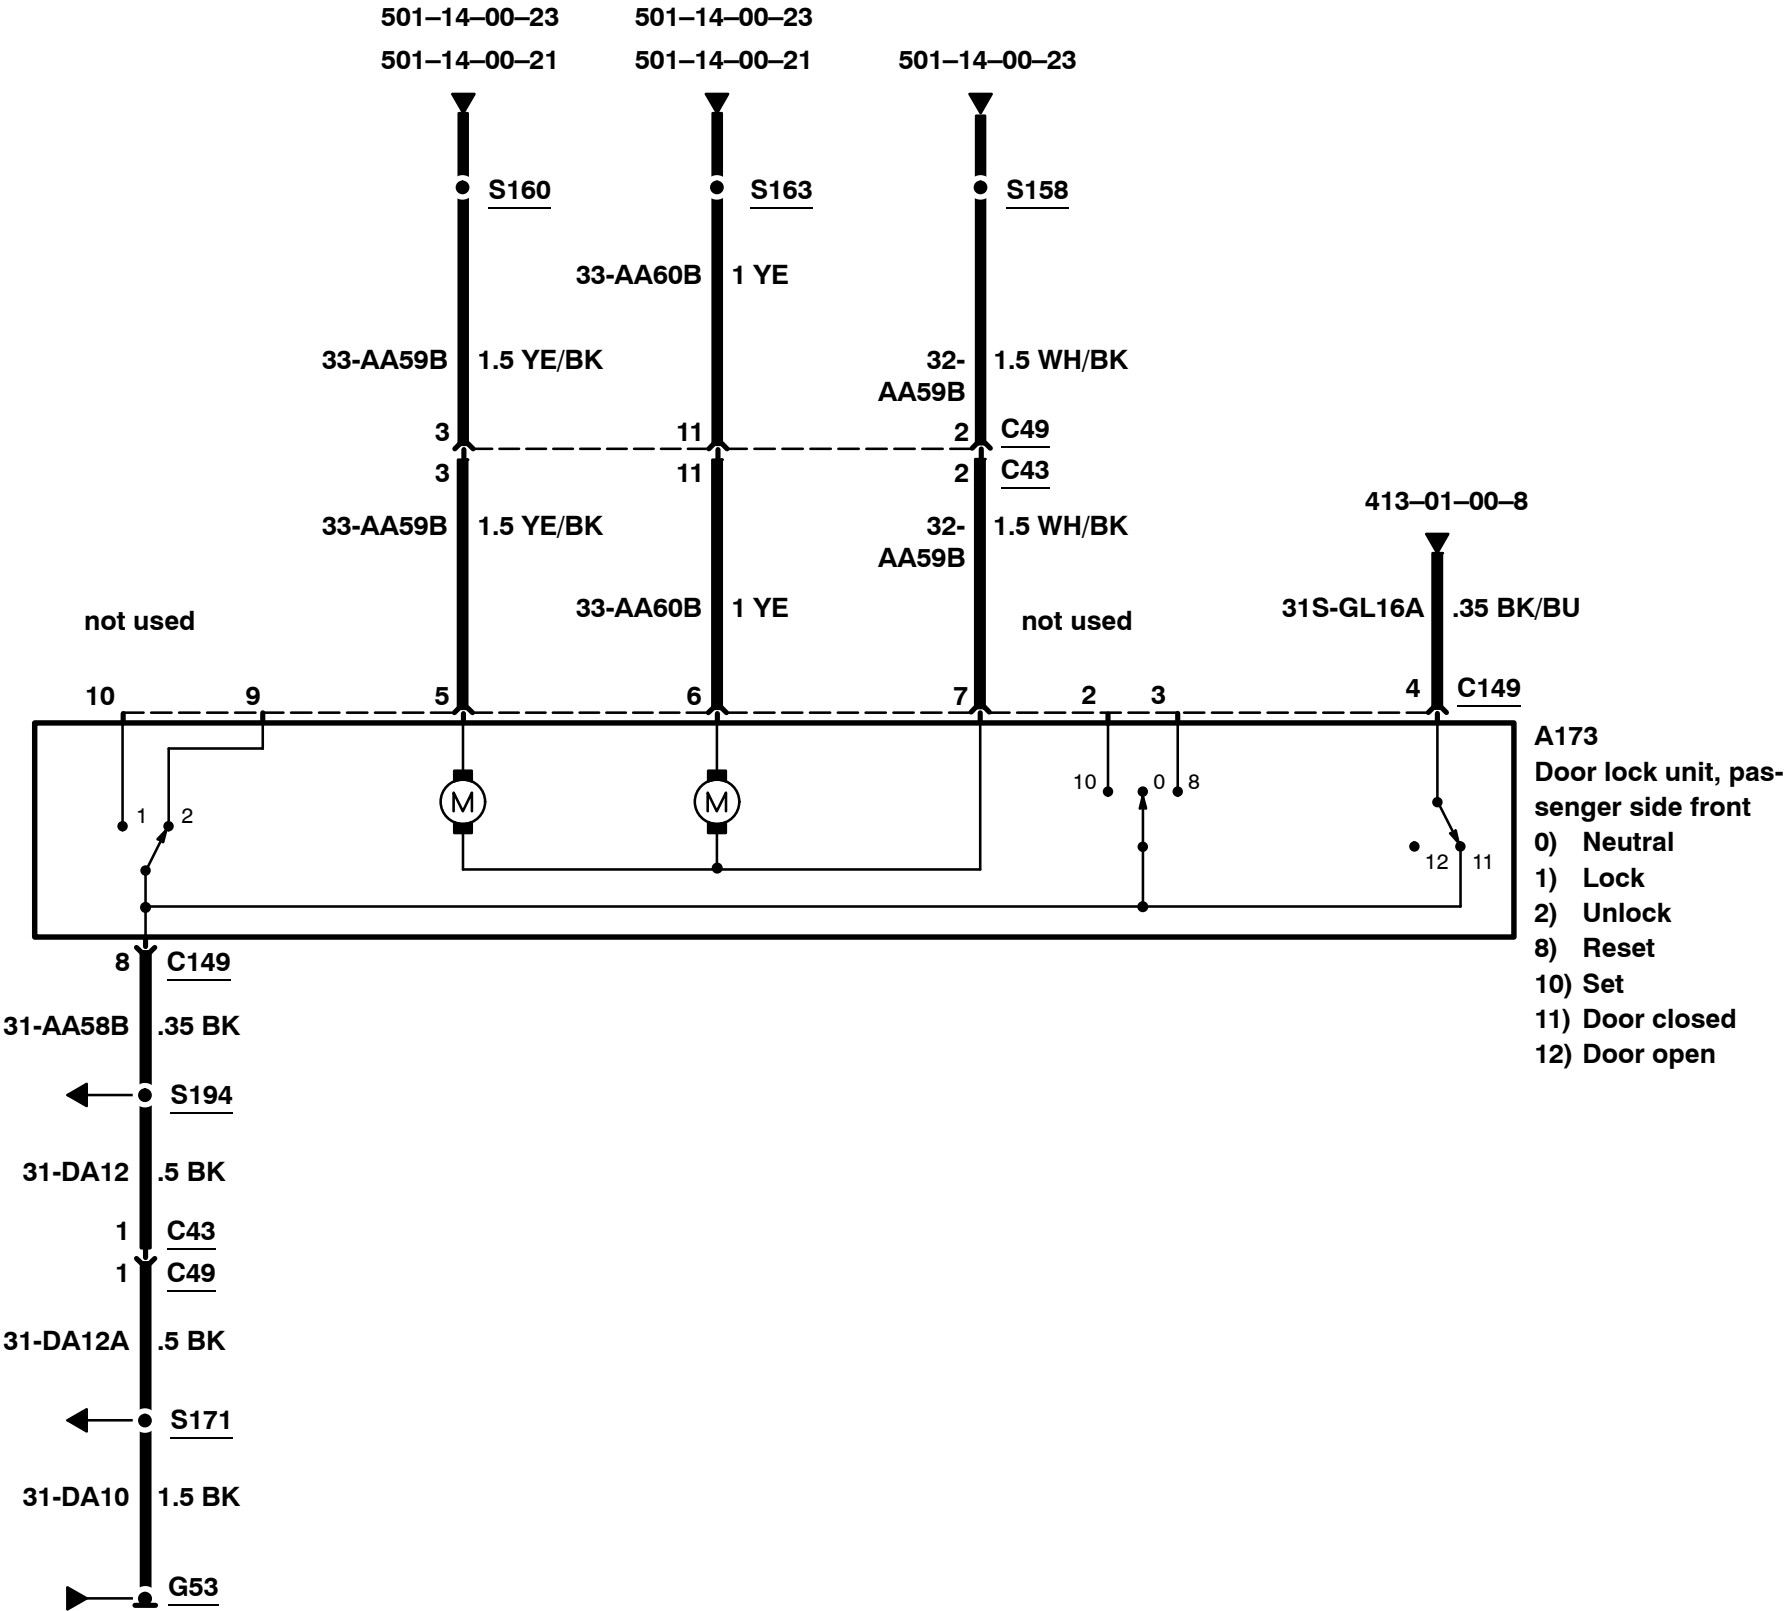




# Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front power windows

02/2008  
501-14-00-23  
2008.25  
Focus

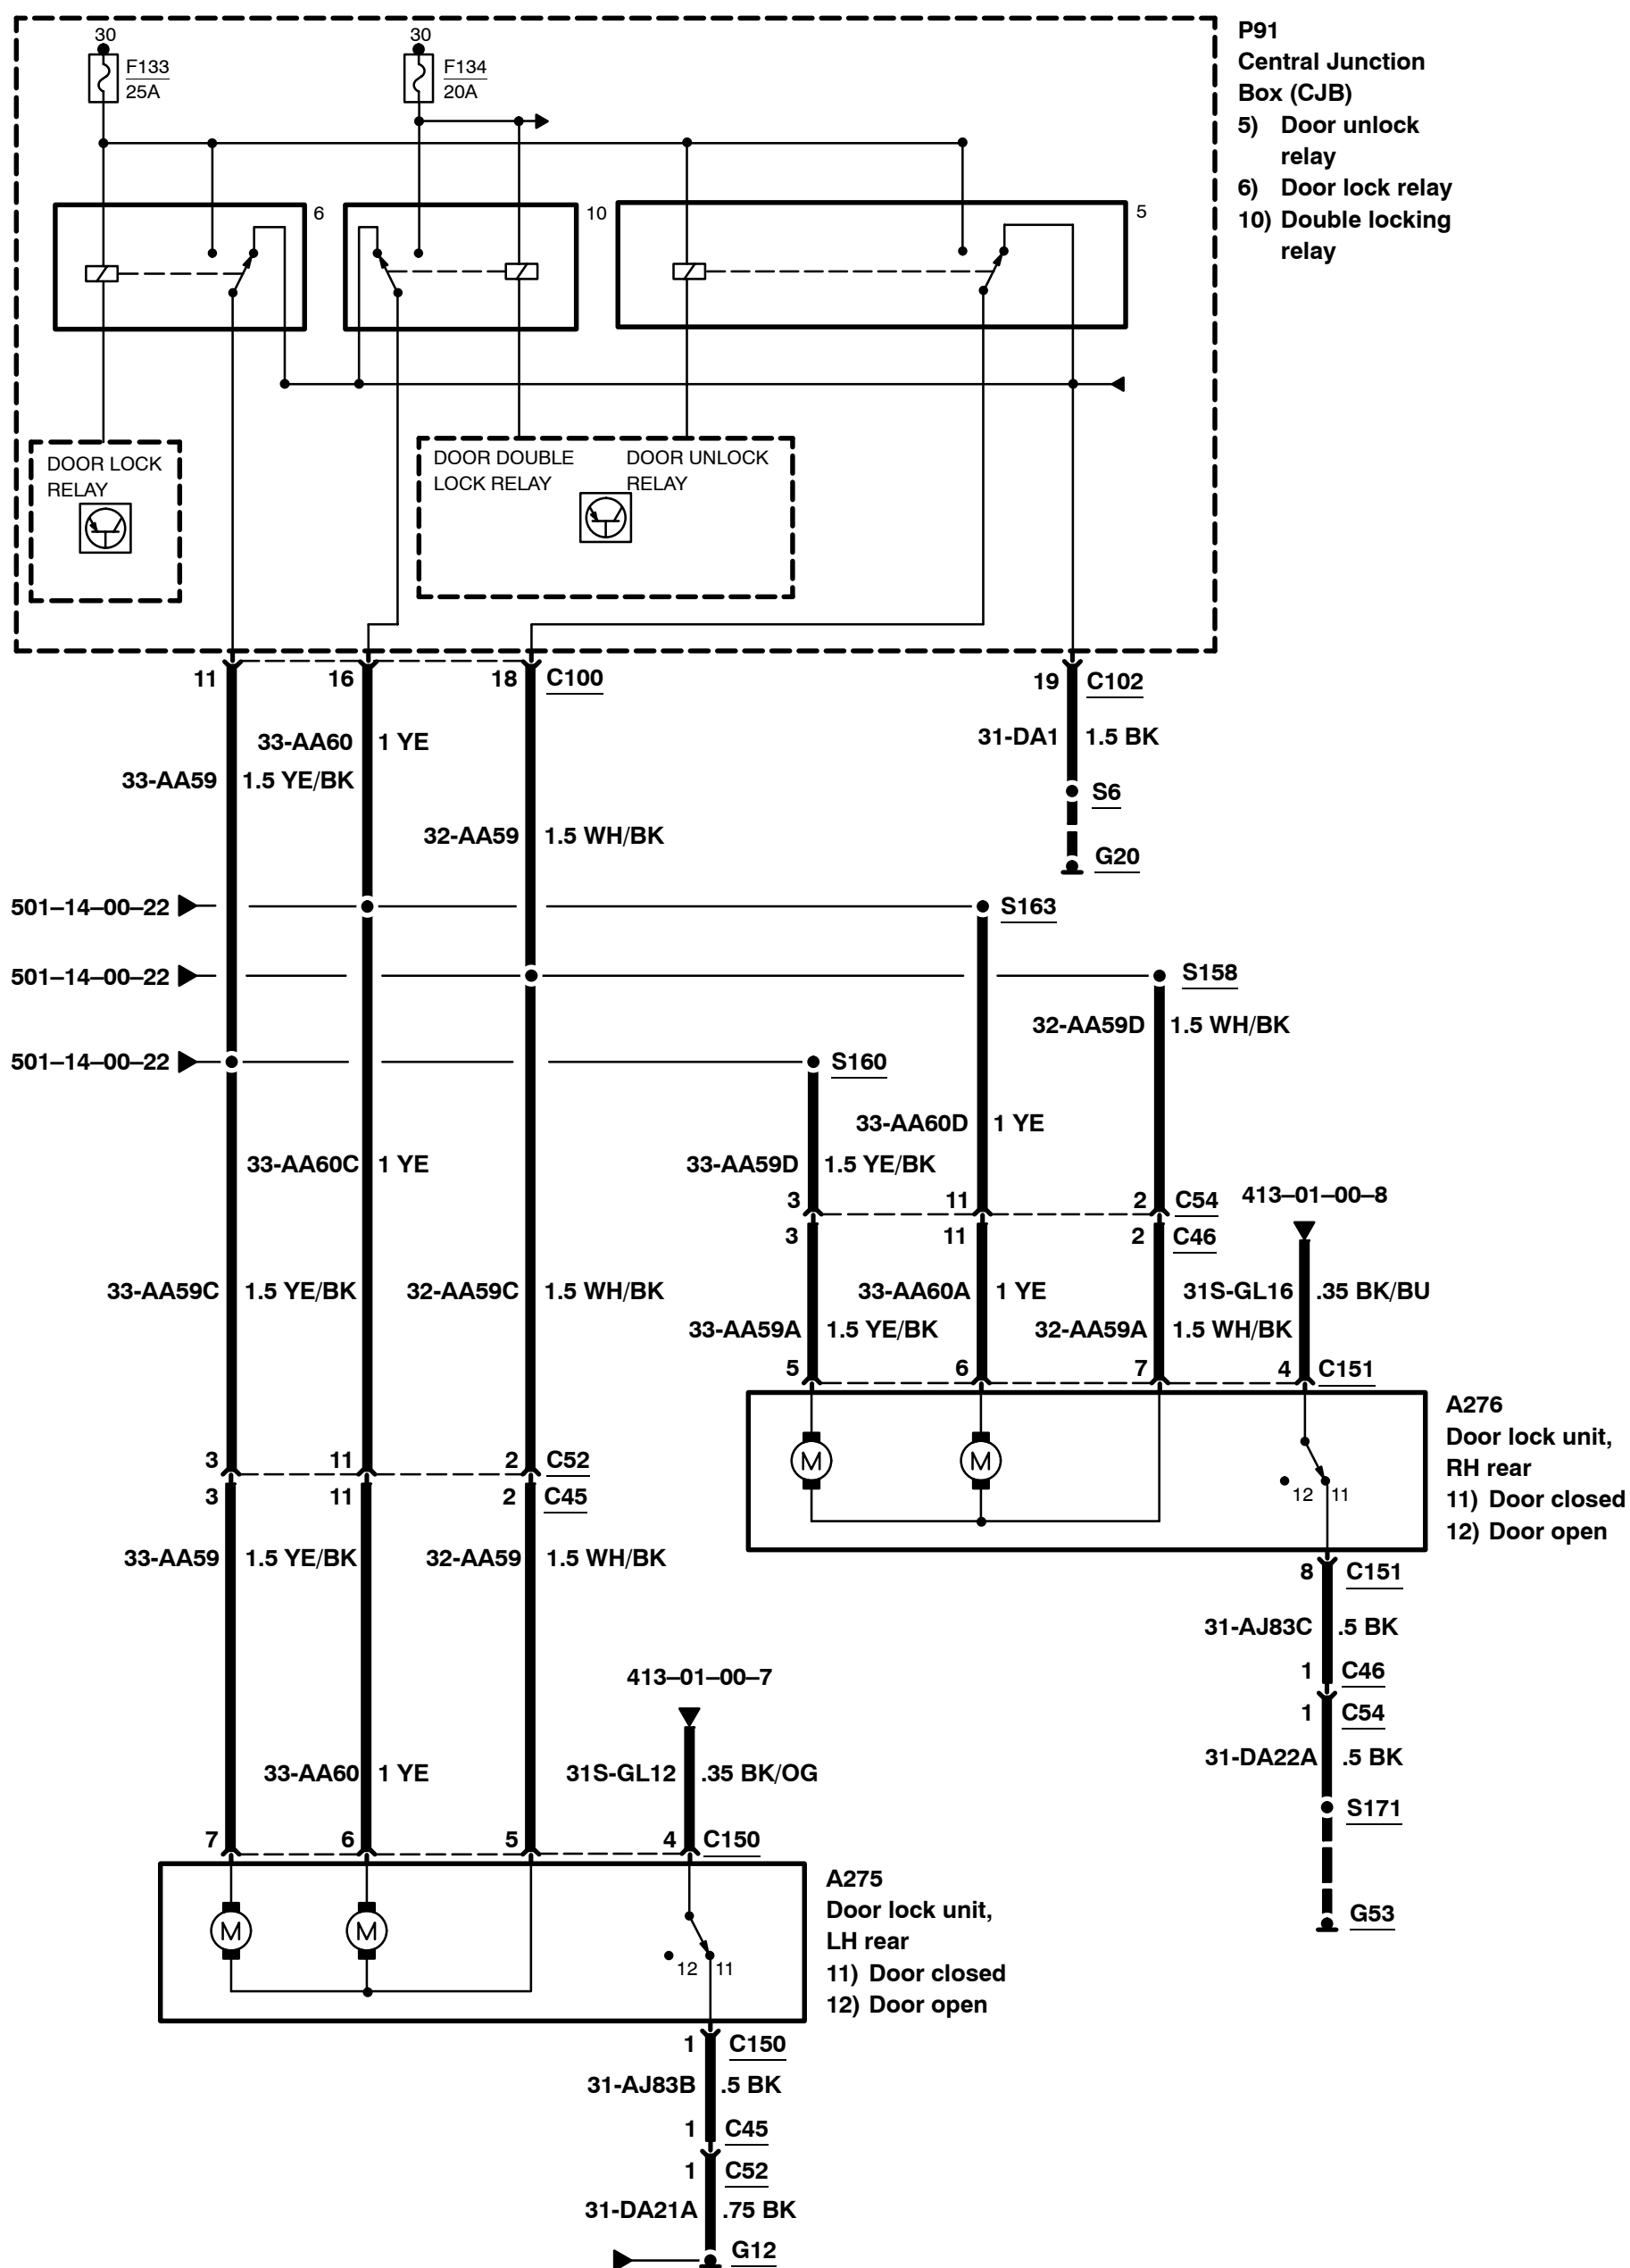

# Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front power windows


02/2008  
501-14-00-24  
2008.25  
Focus

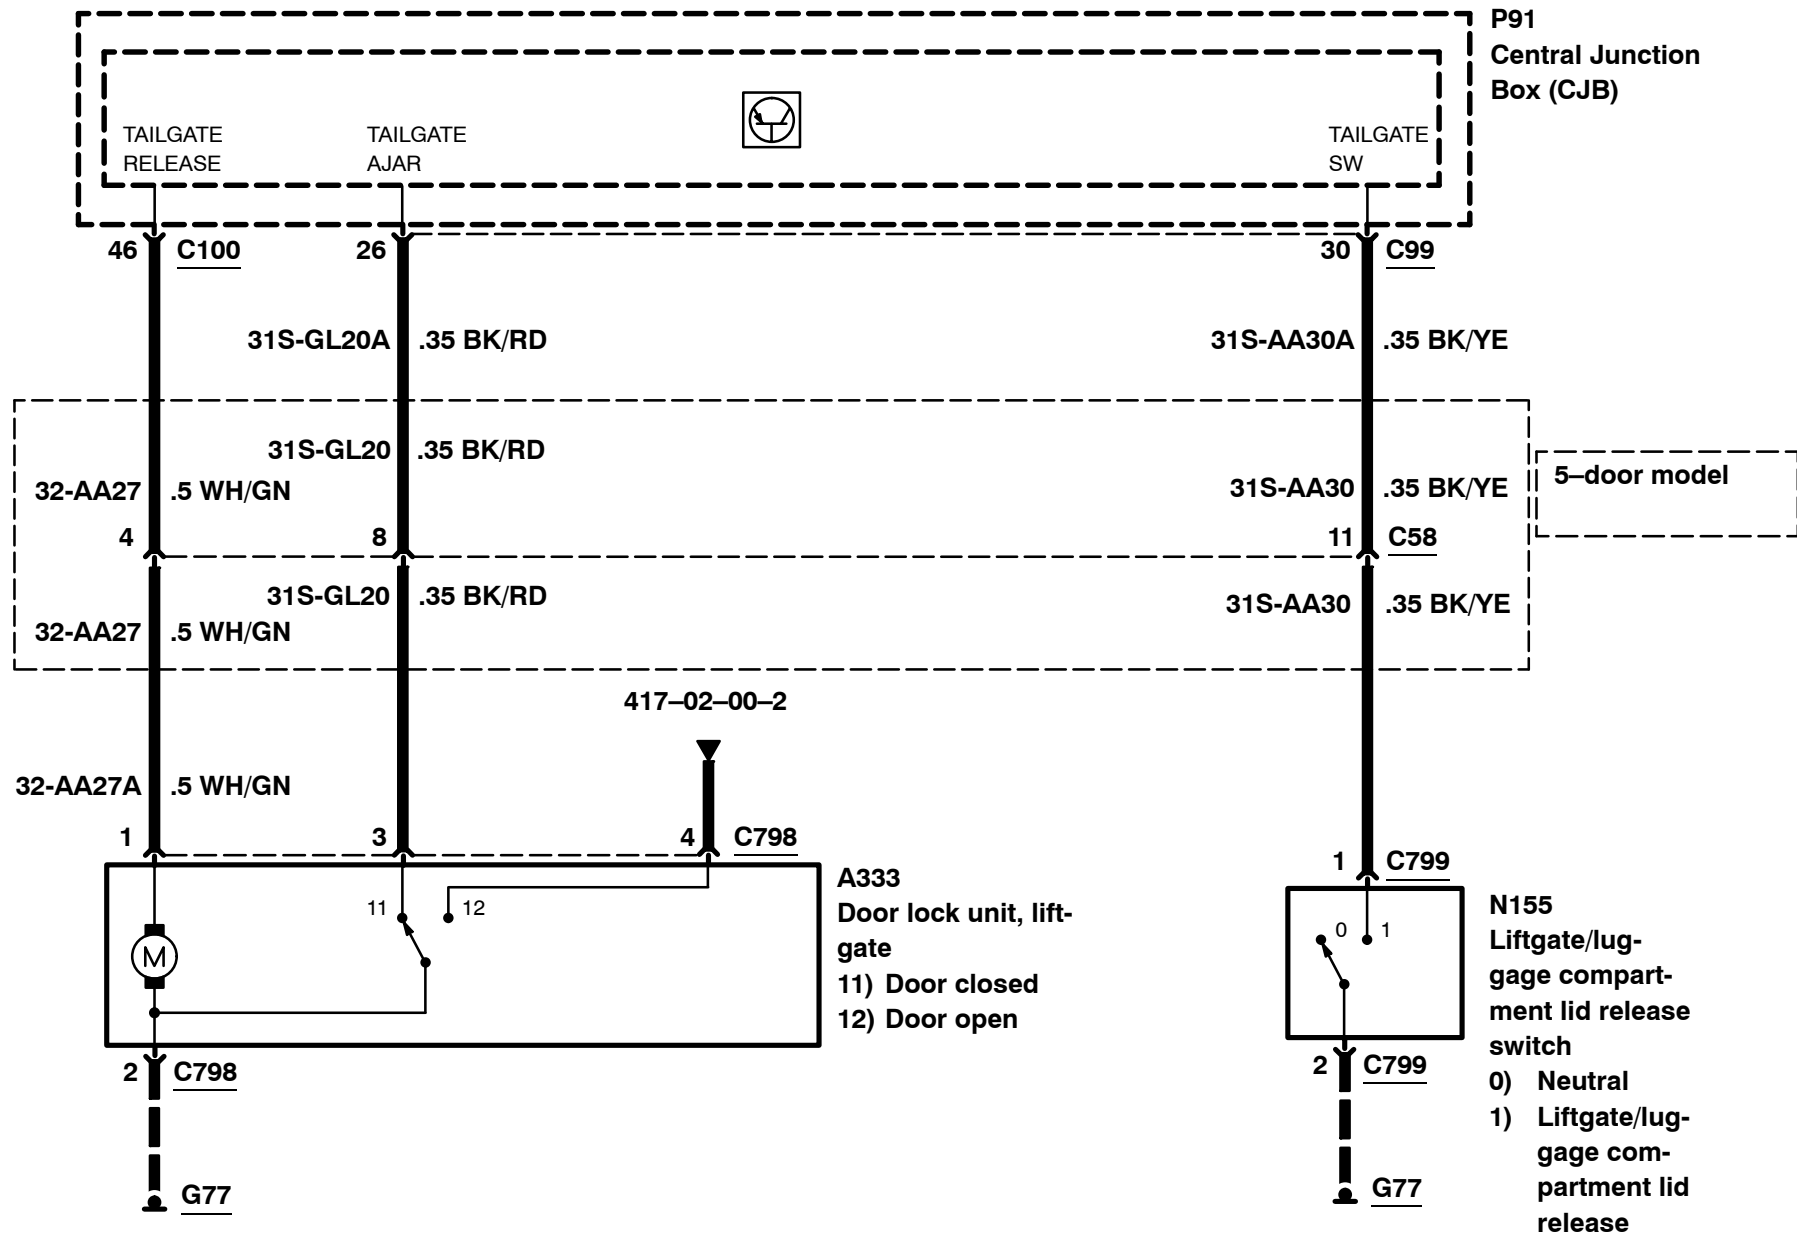




# Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows

02/2008  
501-14-00-25  
2008.25  
Focus

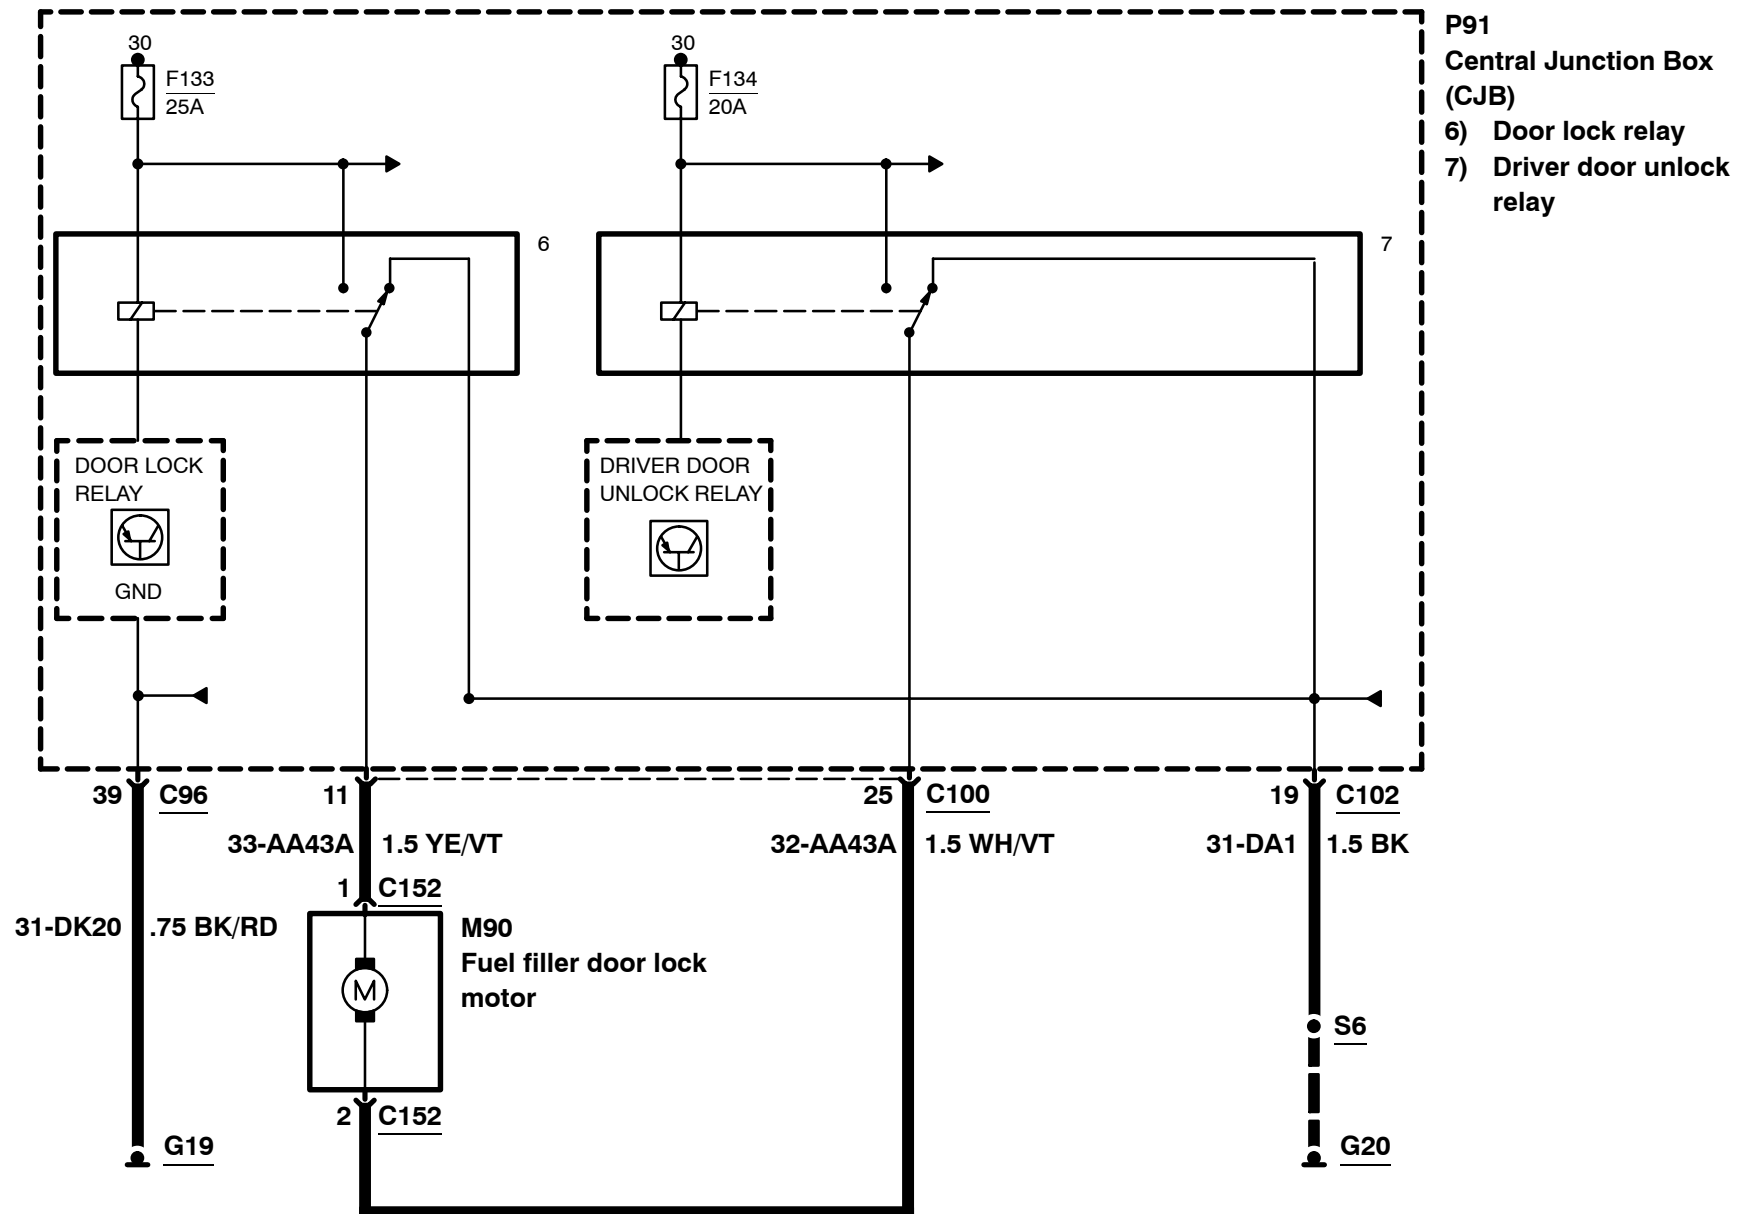


Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows

02/2008  
501-14-00-26  
2008.25  
Focus

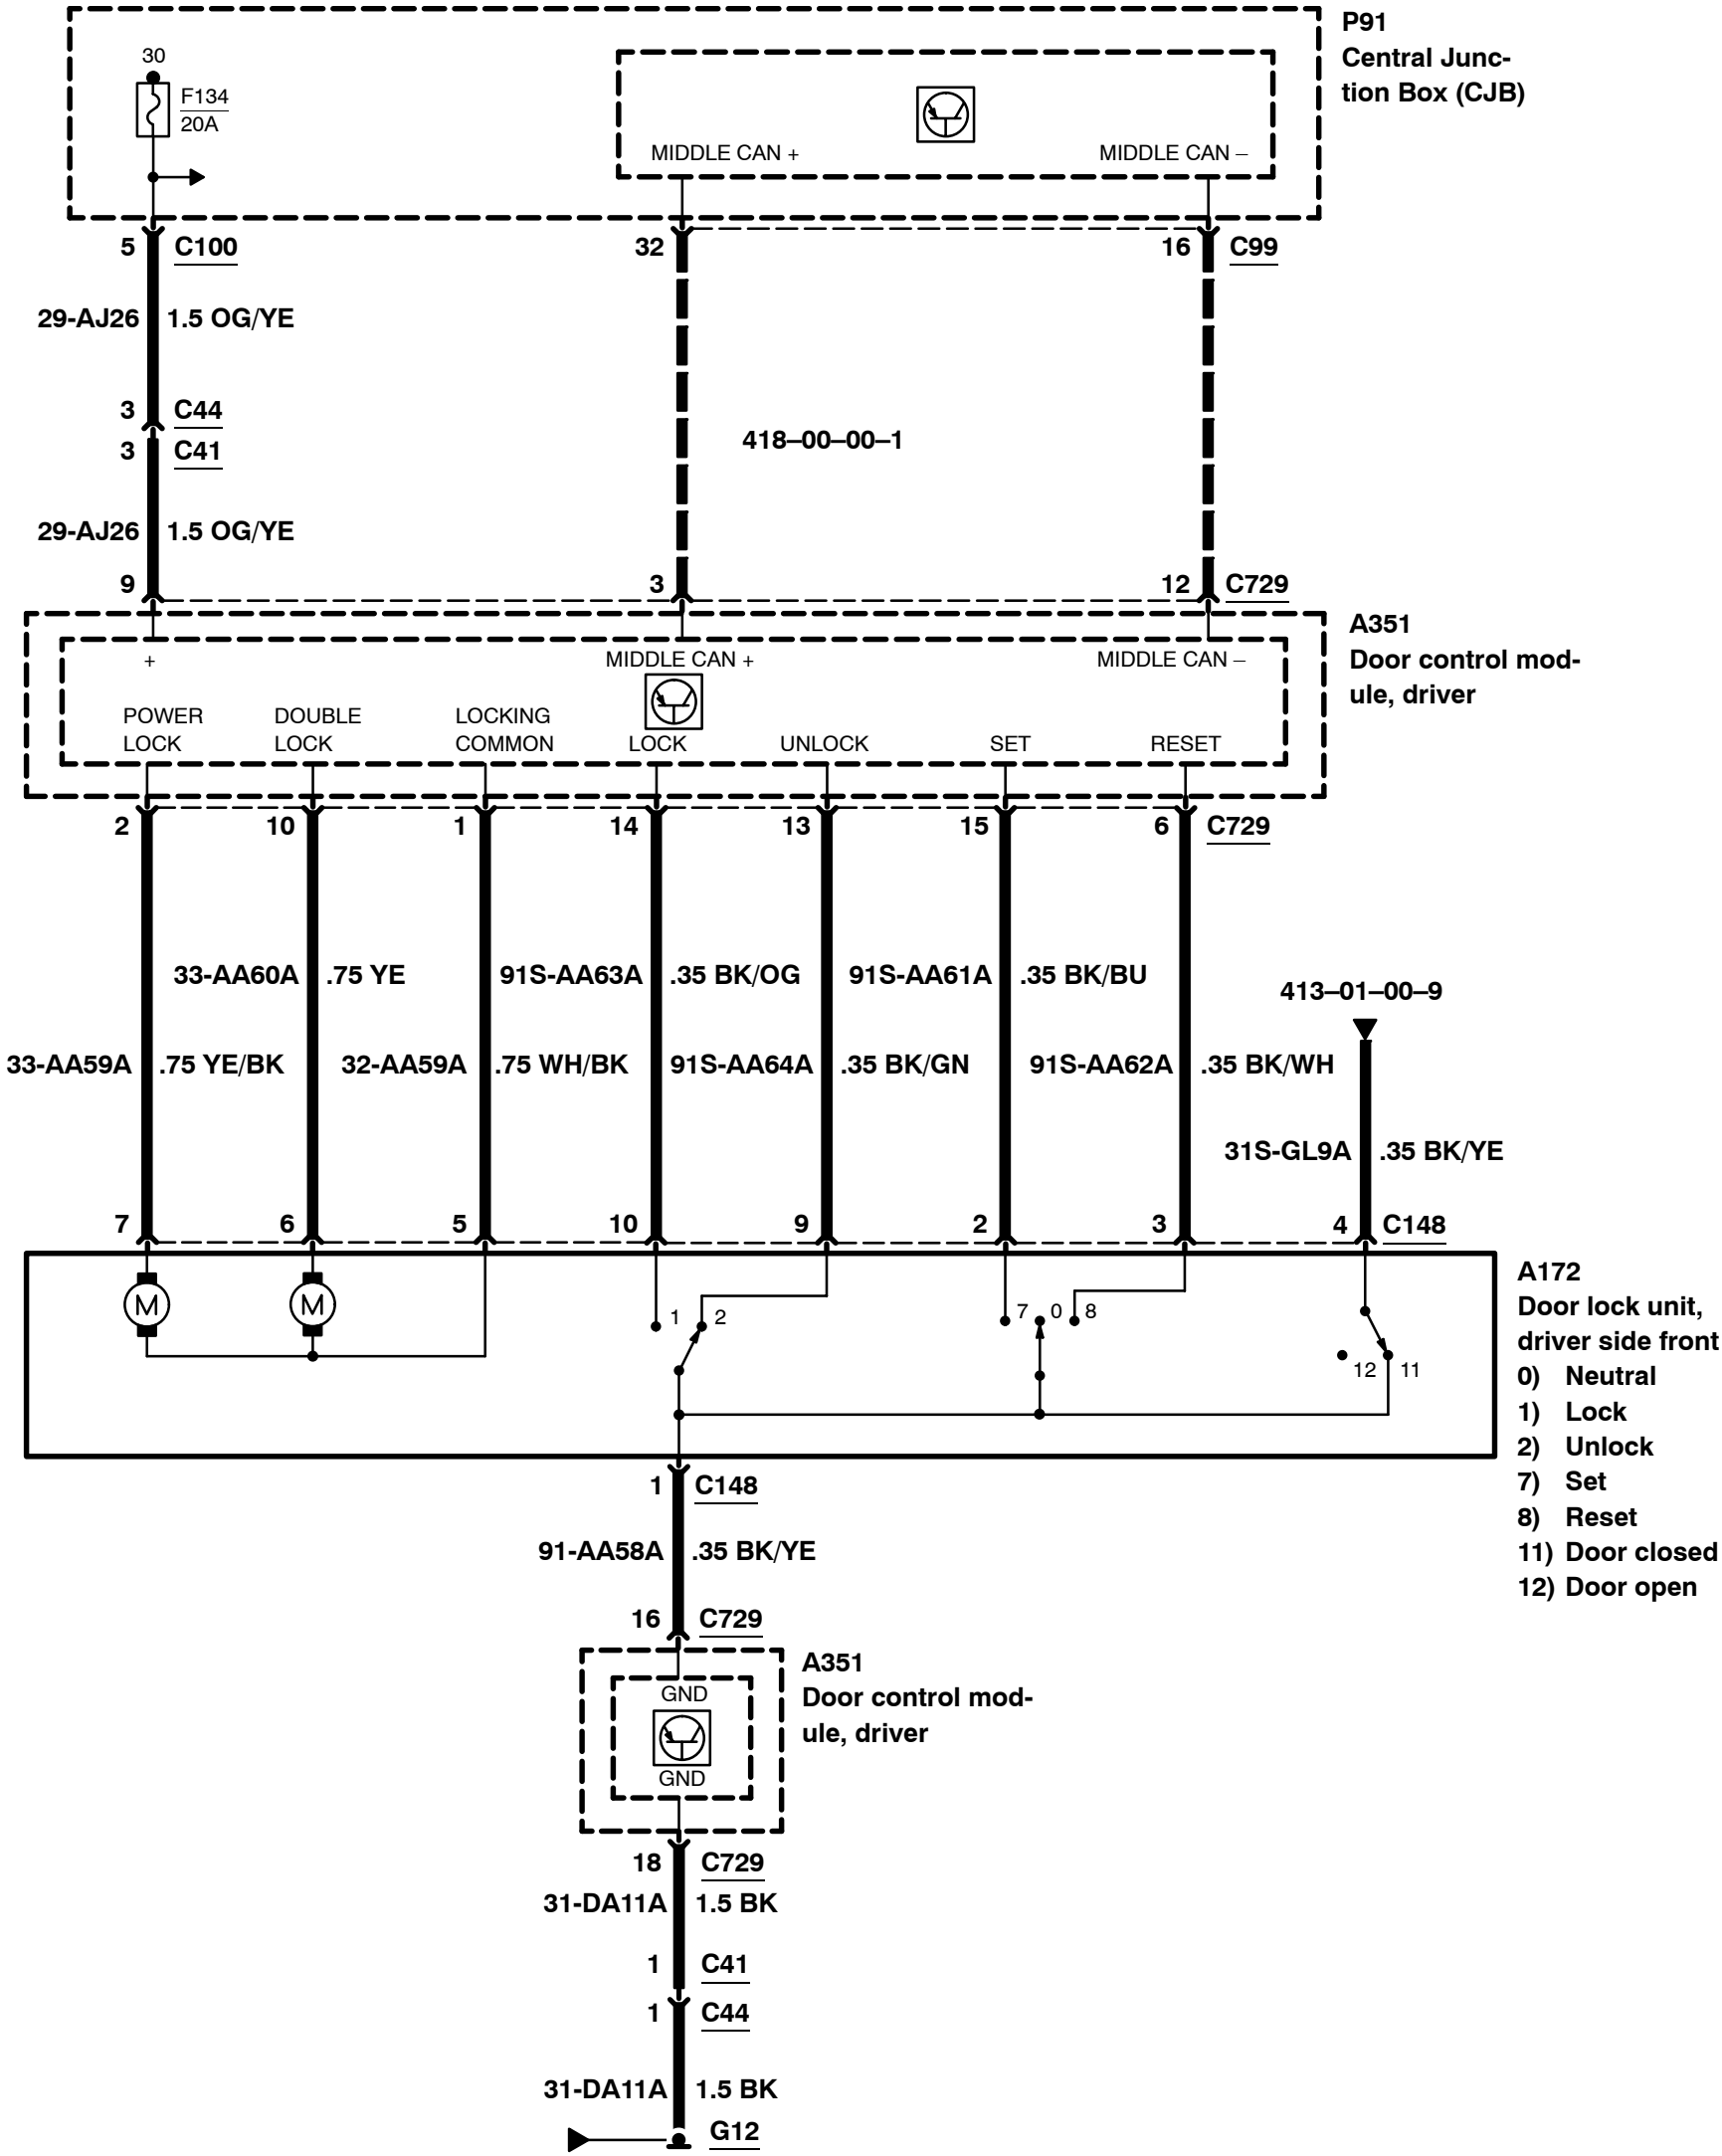


**Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows**


02/2008  
501-14-00-27  
2008.25  
Focus

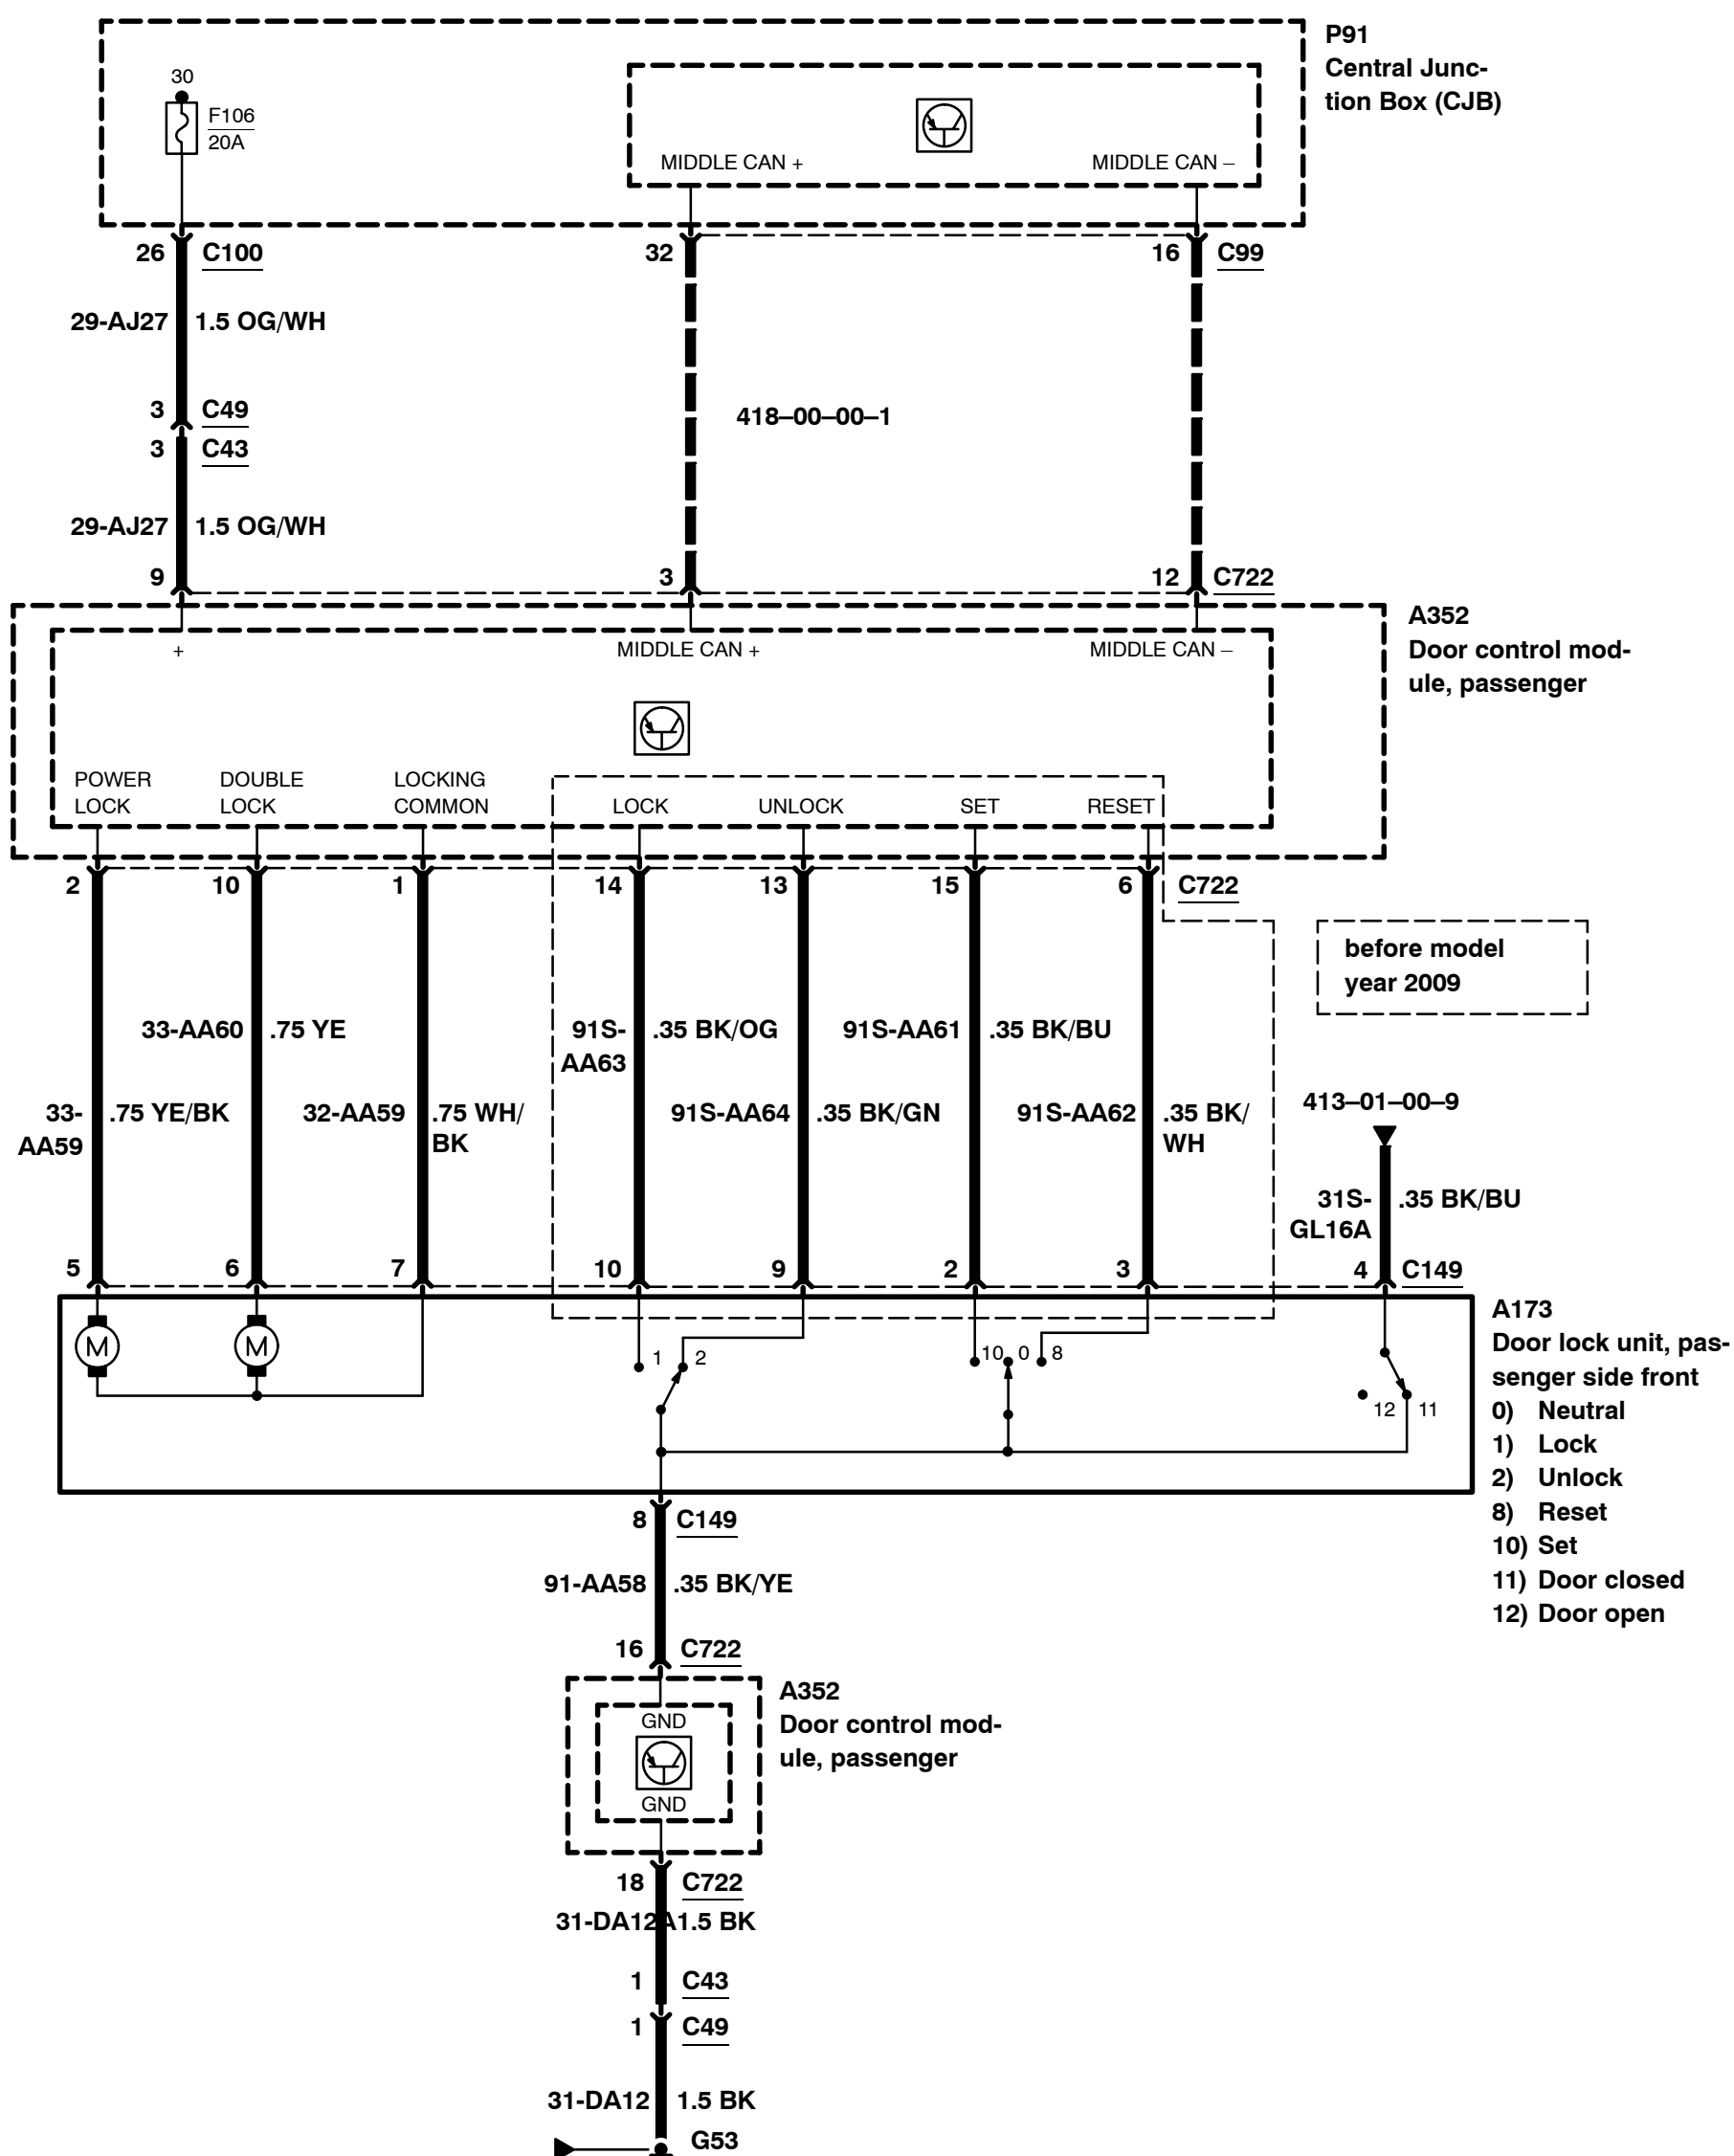

# Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows


02/2008  
501-14-00-28  
2008.25  
Focus

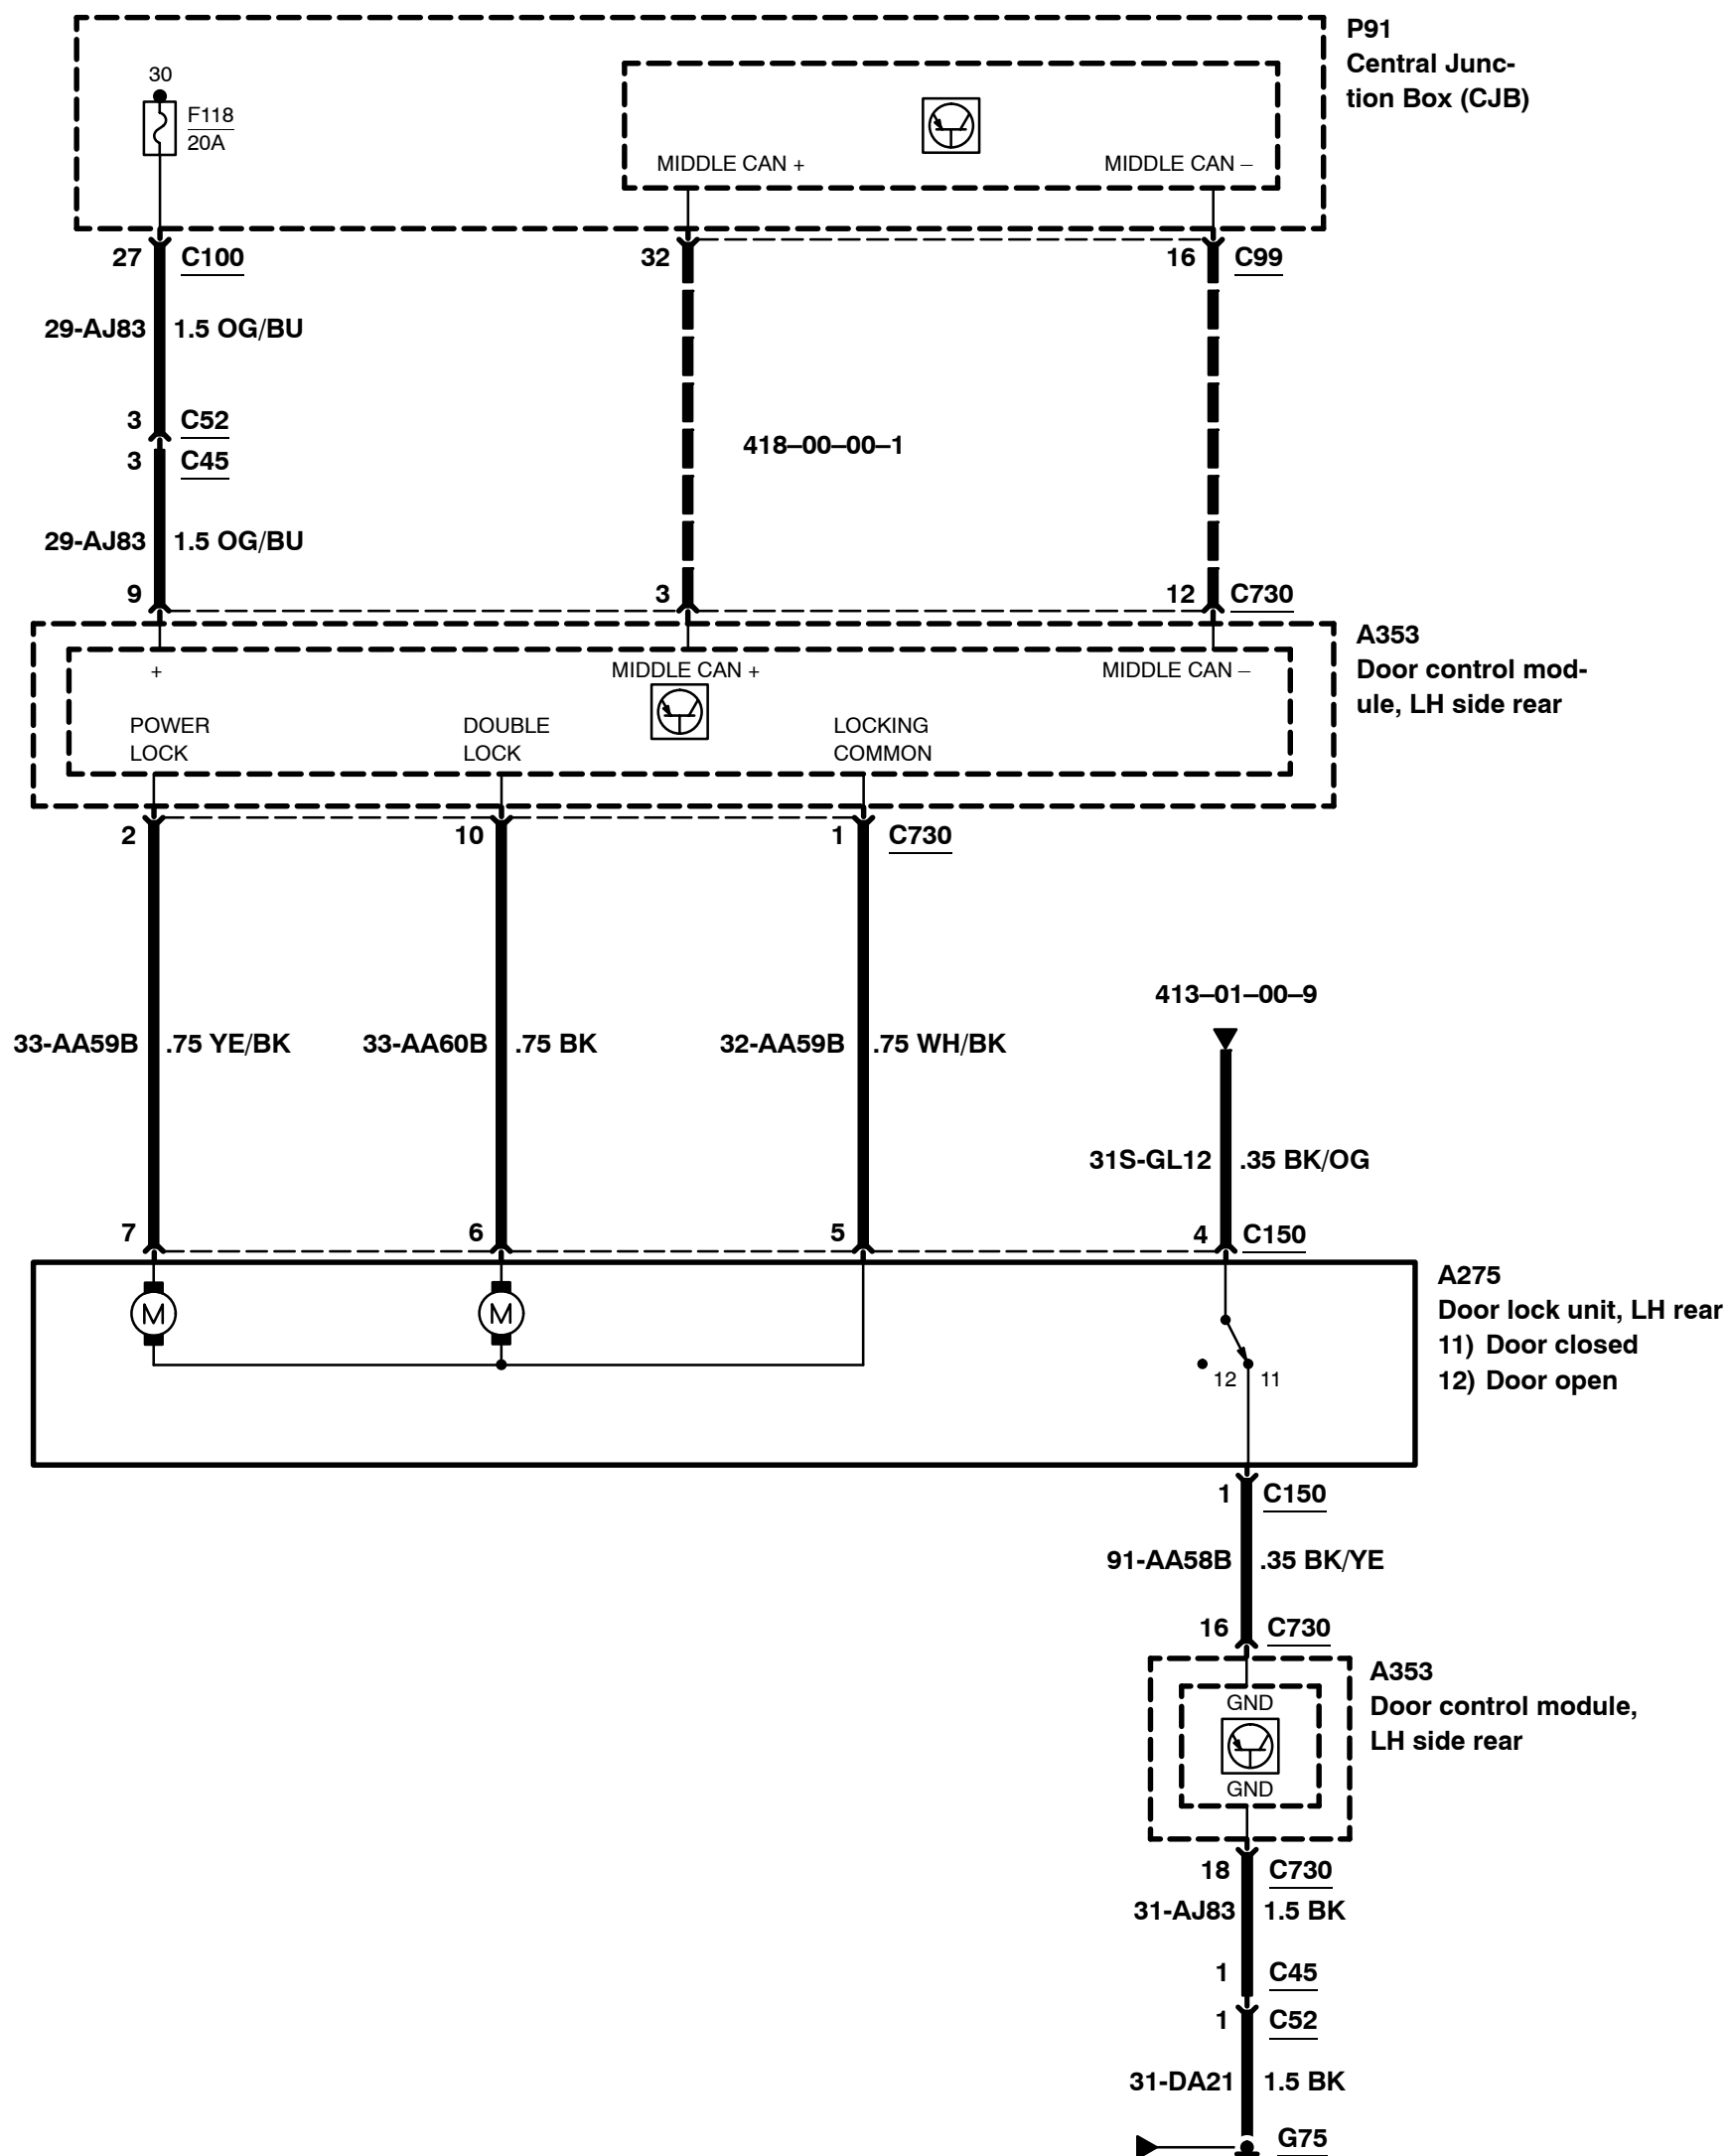

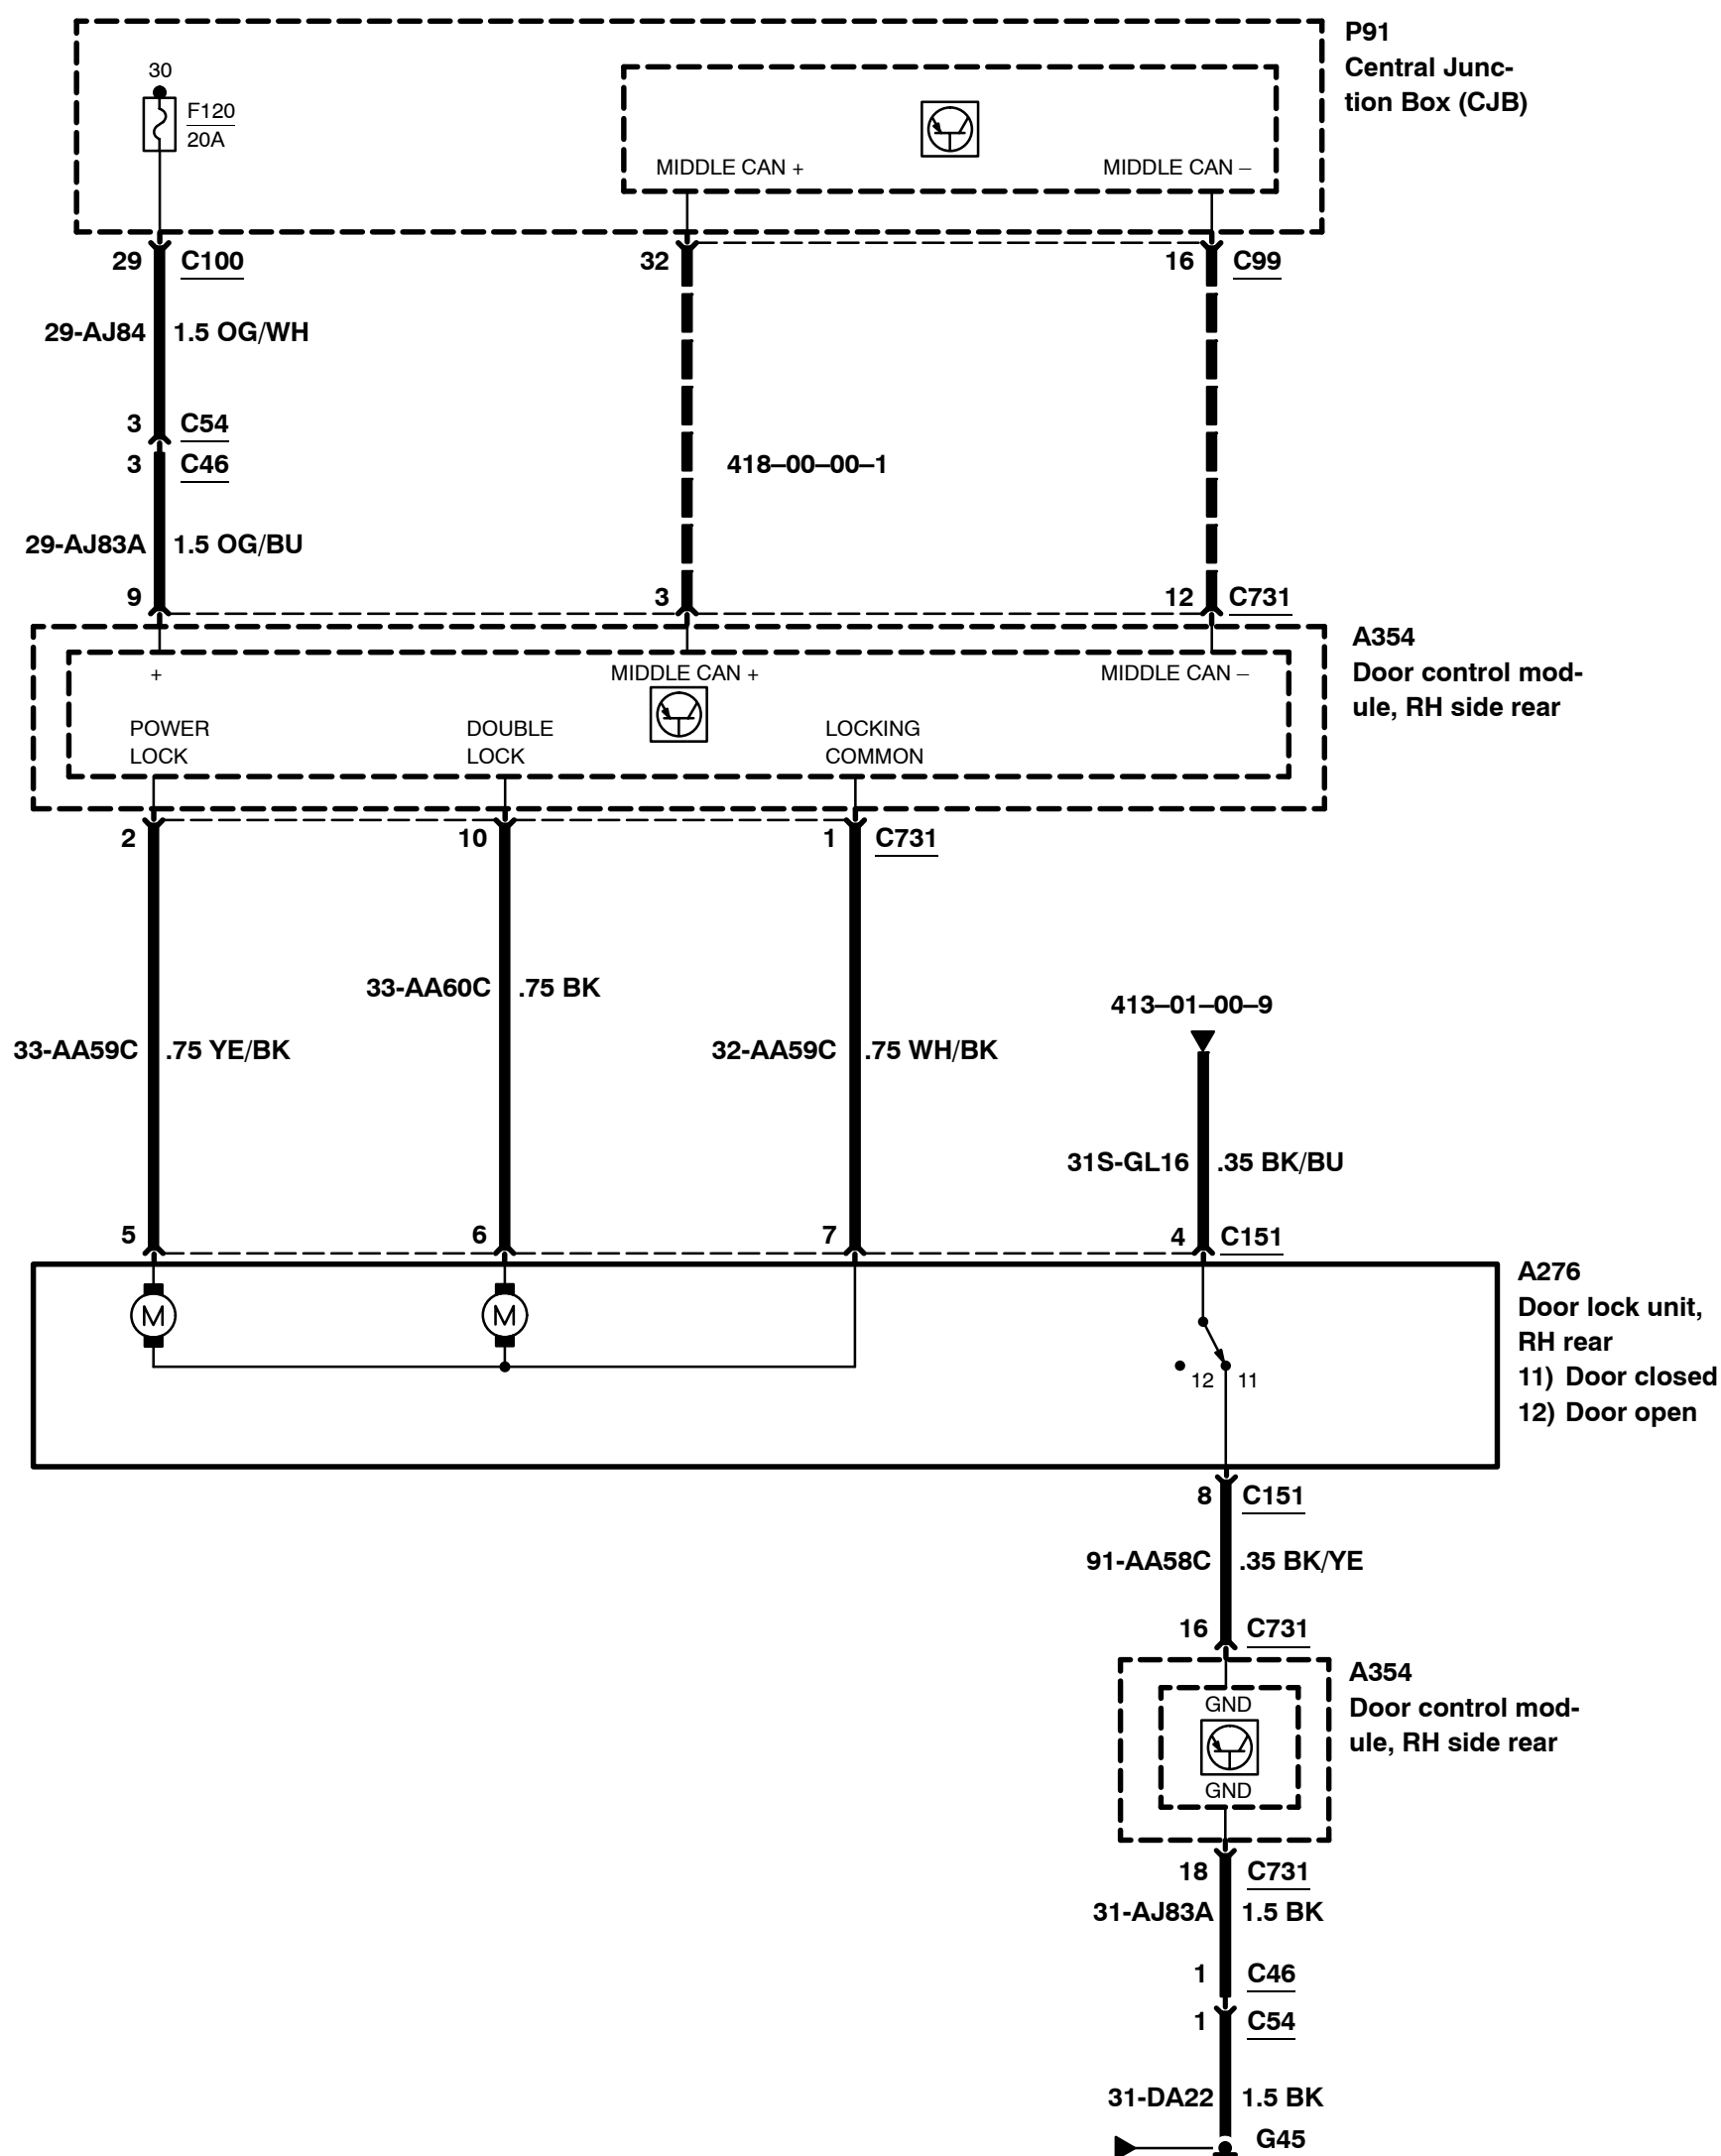

Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows


02/2008  
501-14-00-30  
2008.25  
Focus

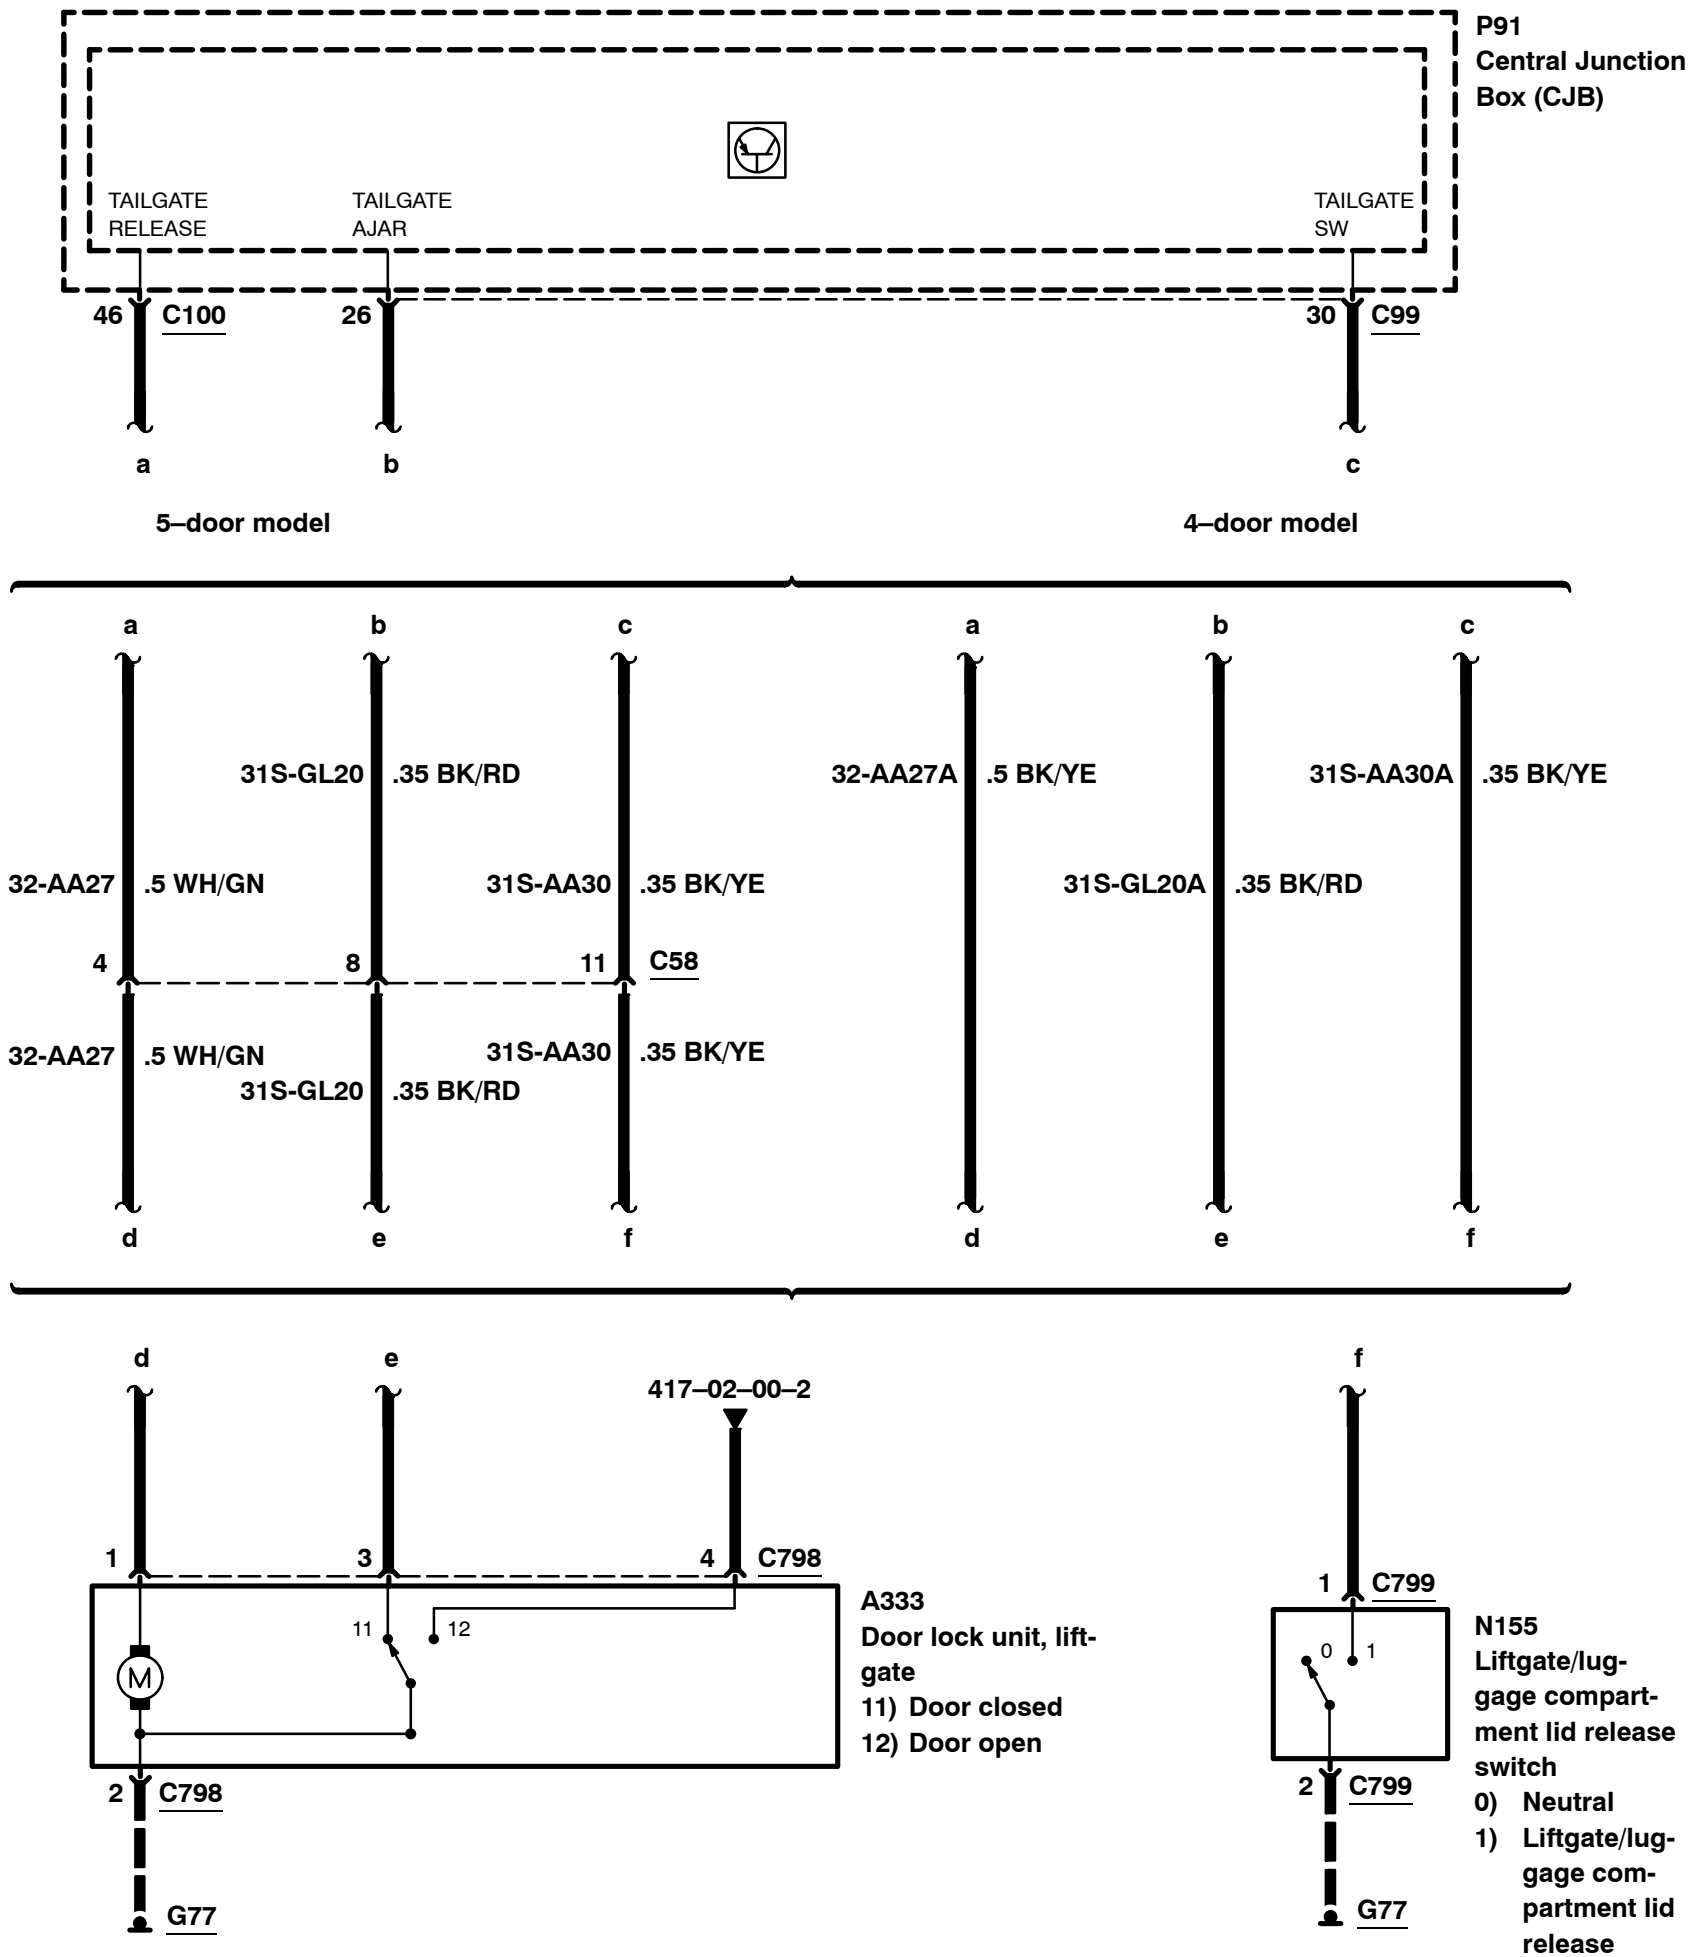




# Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front power windows

02/2008  
501-14-00-31  
2008.25  
Focus

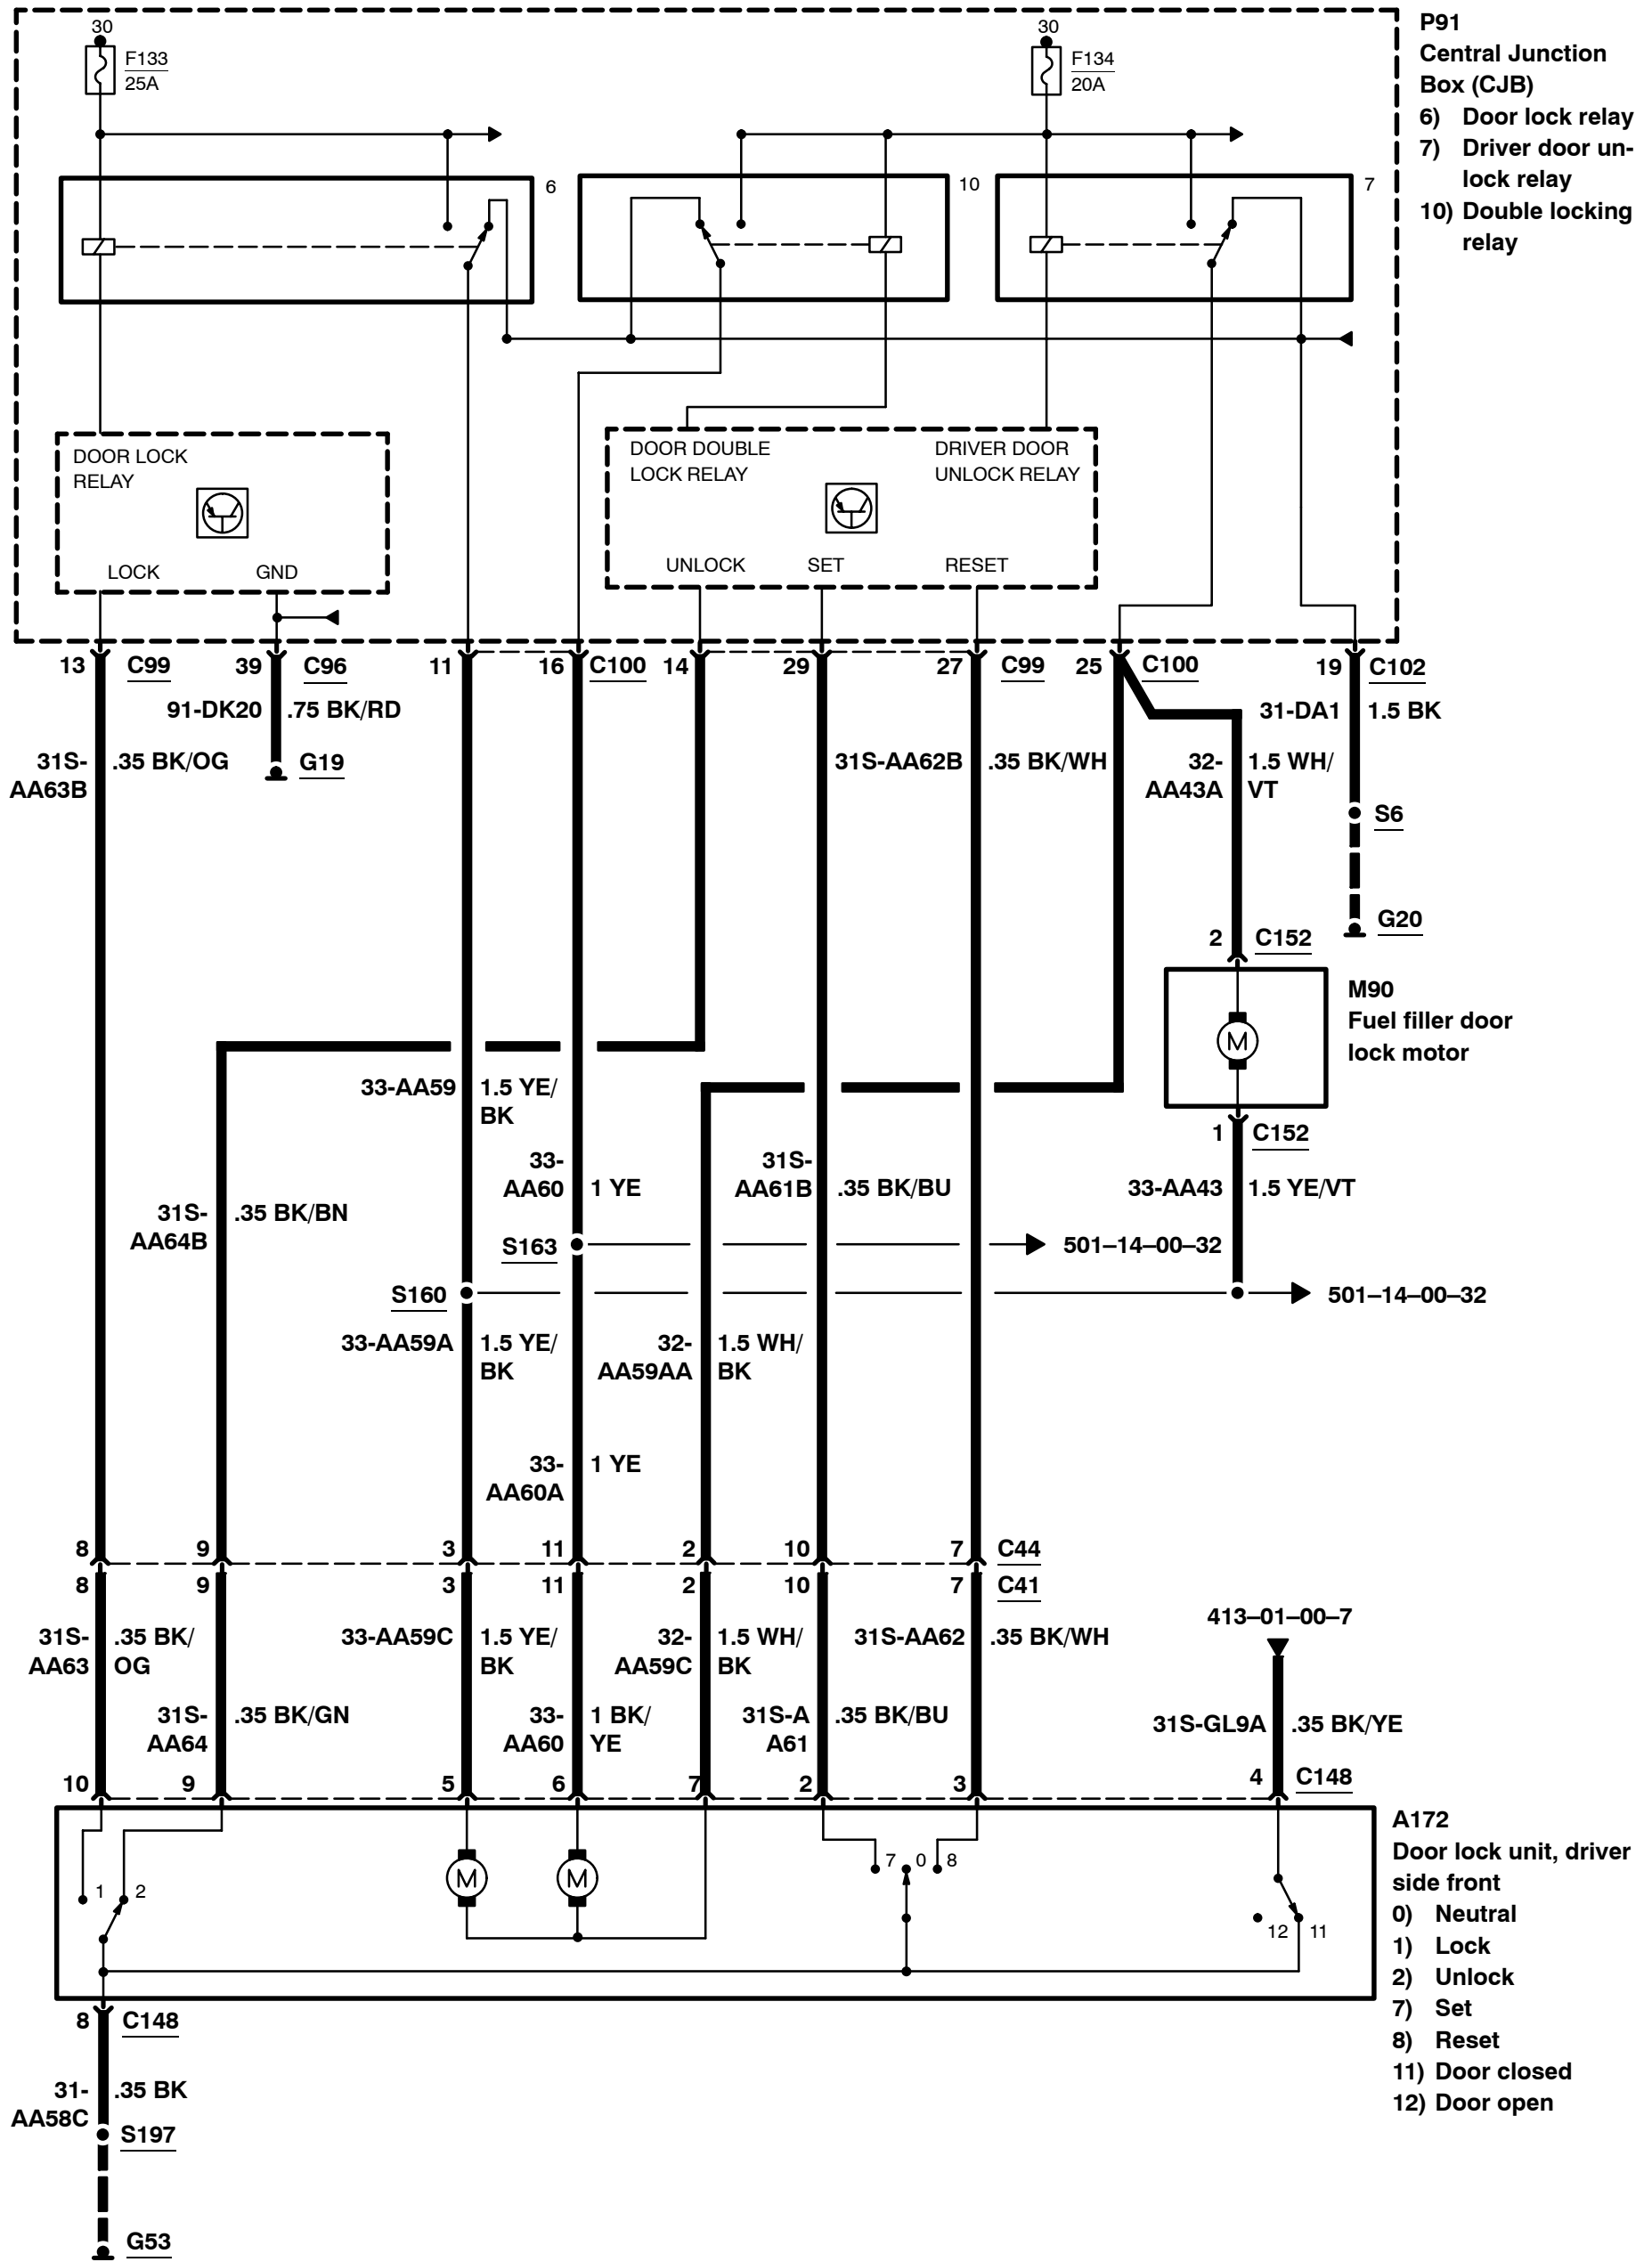

# Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front power windows


02/2008  
501-14-00-32  
2008.25  
Focus

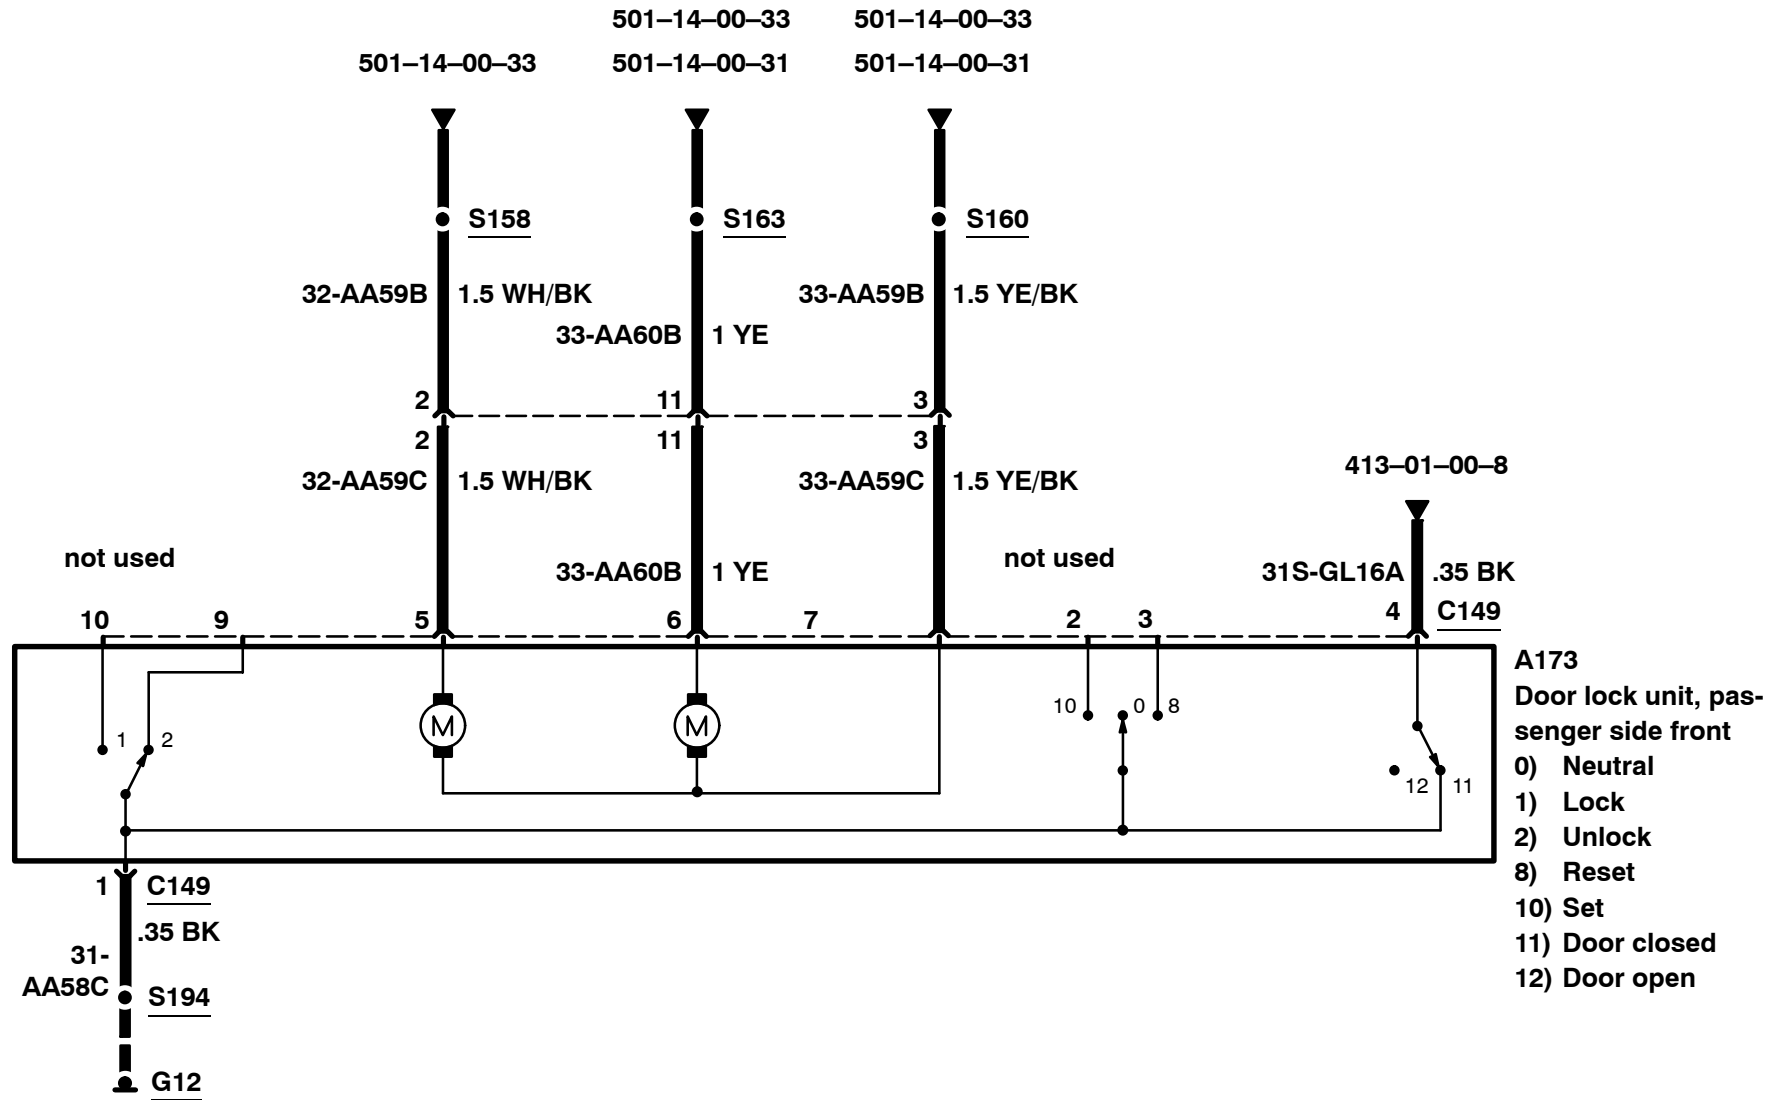




# Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front power windows

02/2008  
501-14-00-33  
2008.25  
Focus

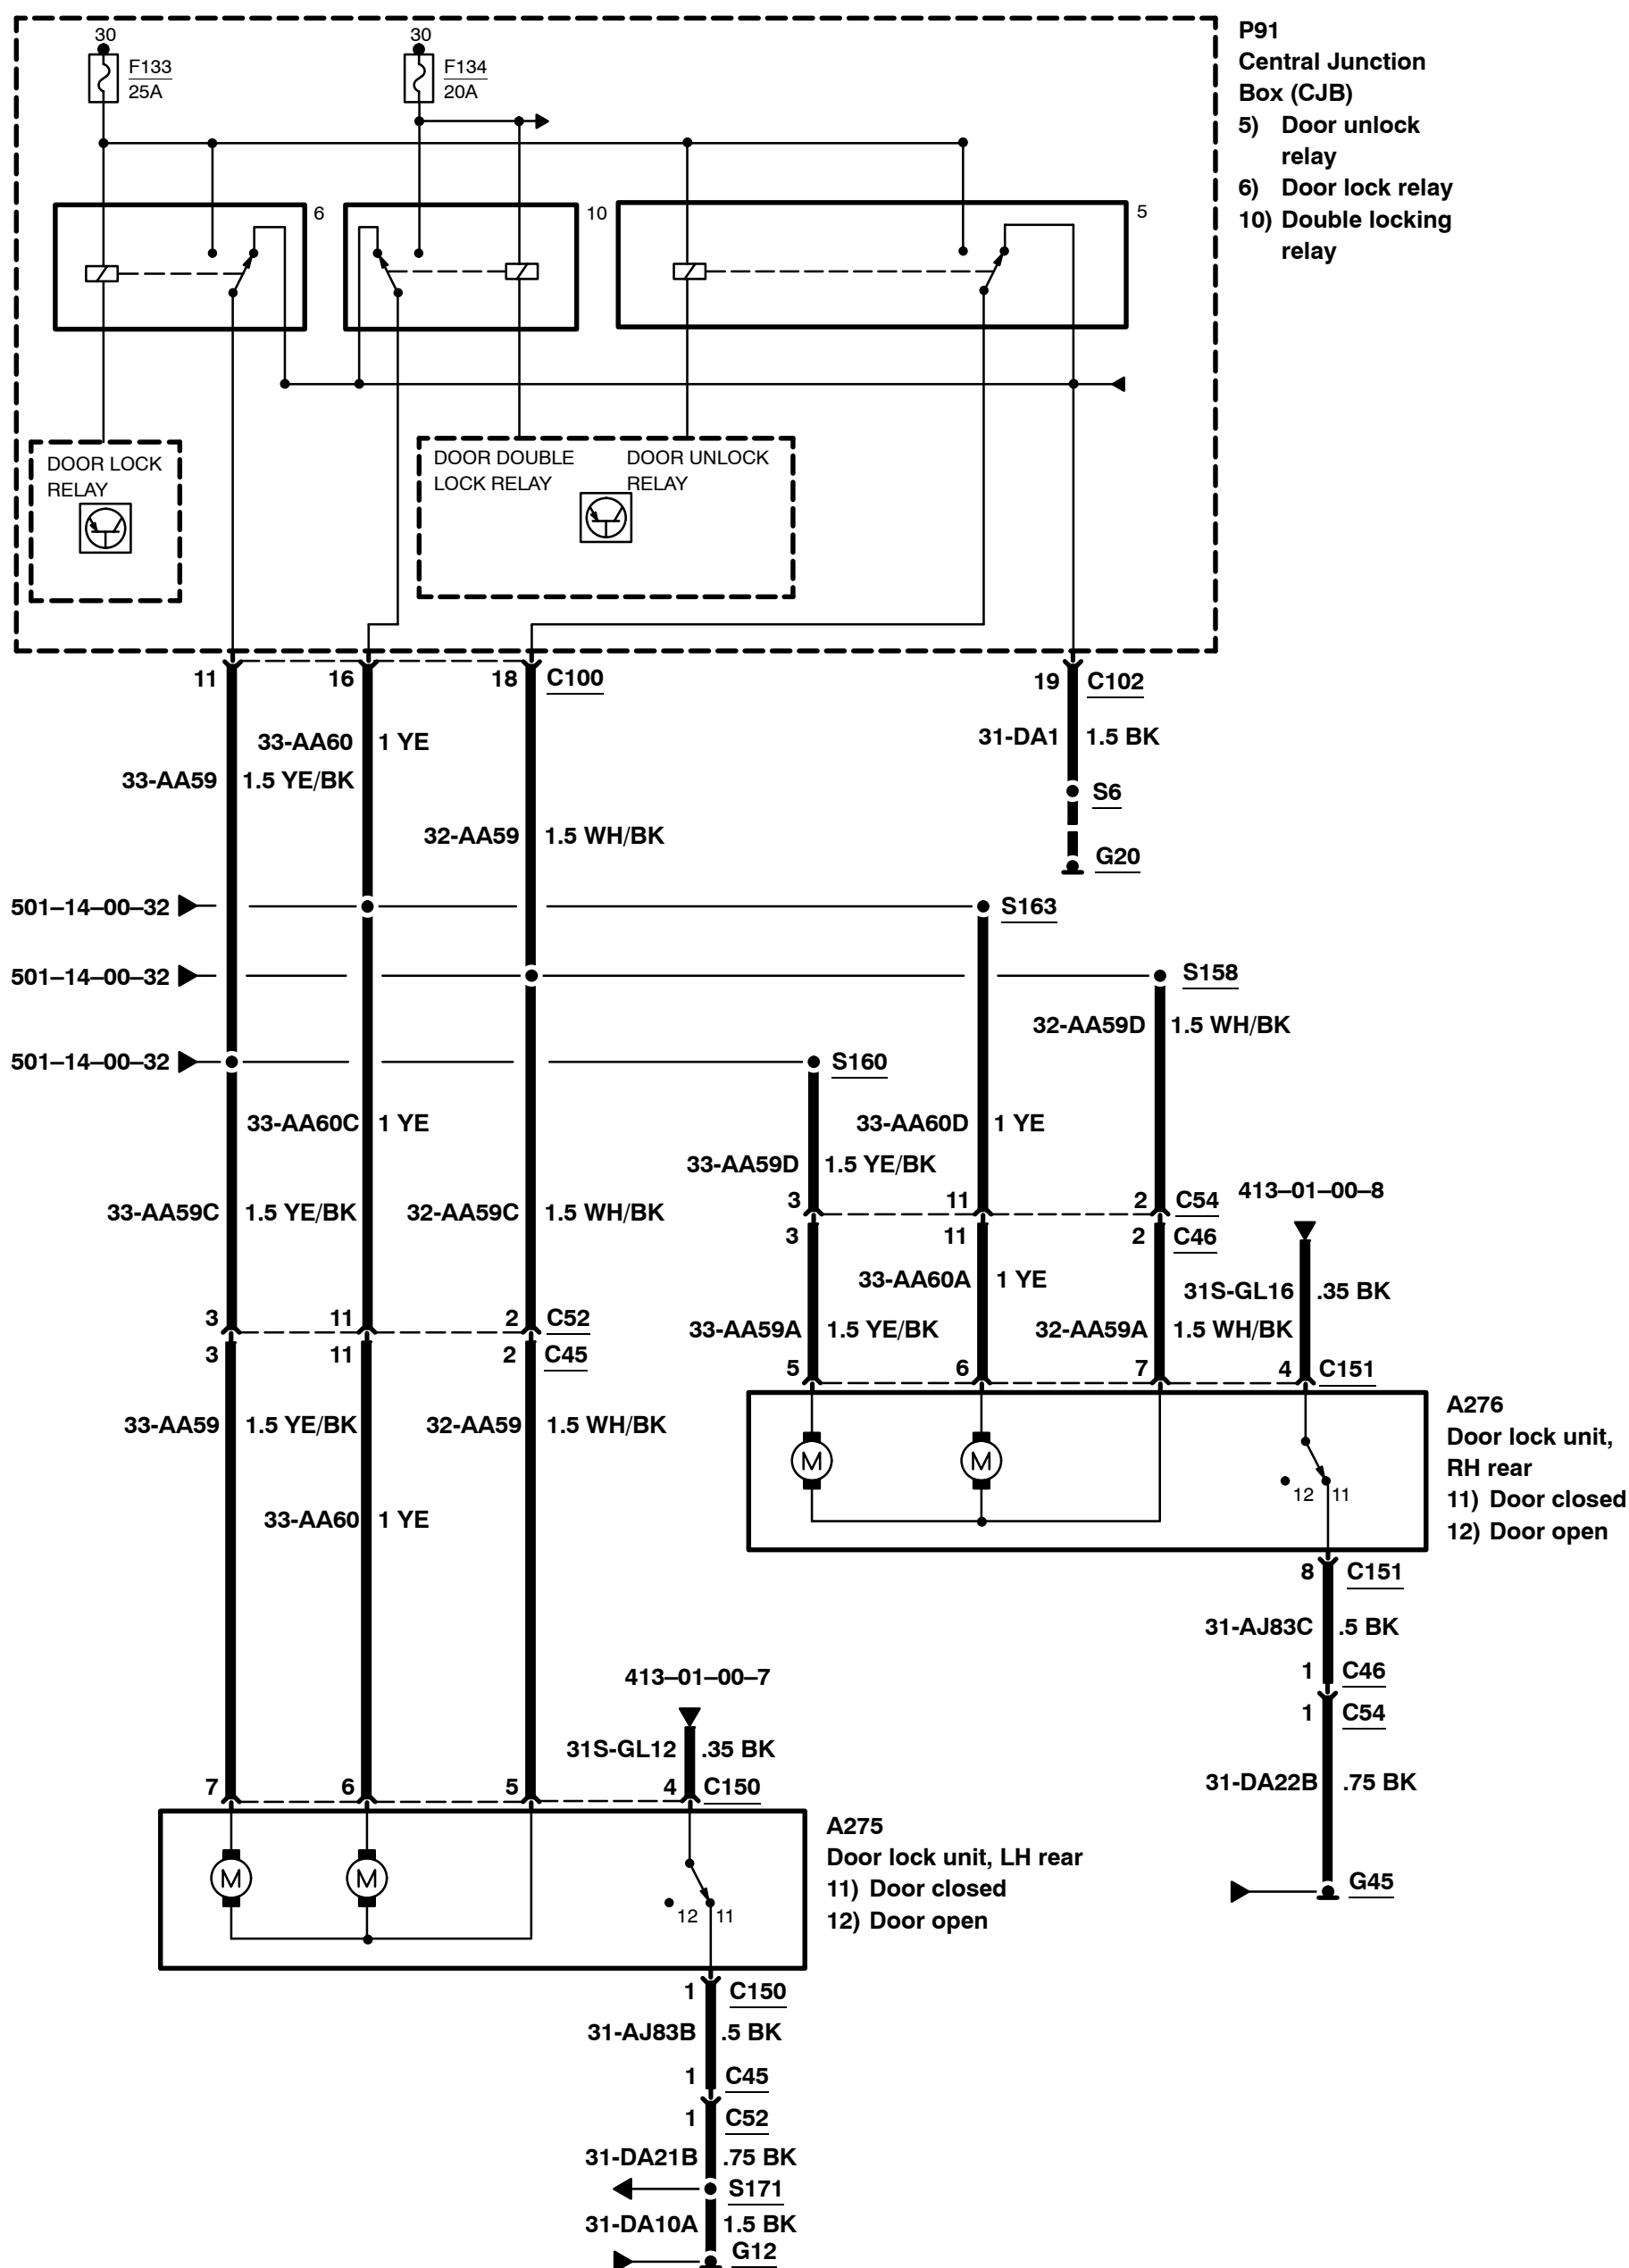


02/2008  
501-14-00-34  
2008.25  
Focus

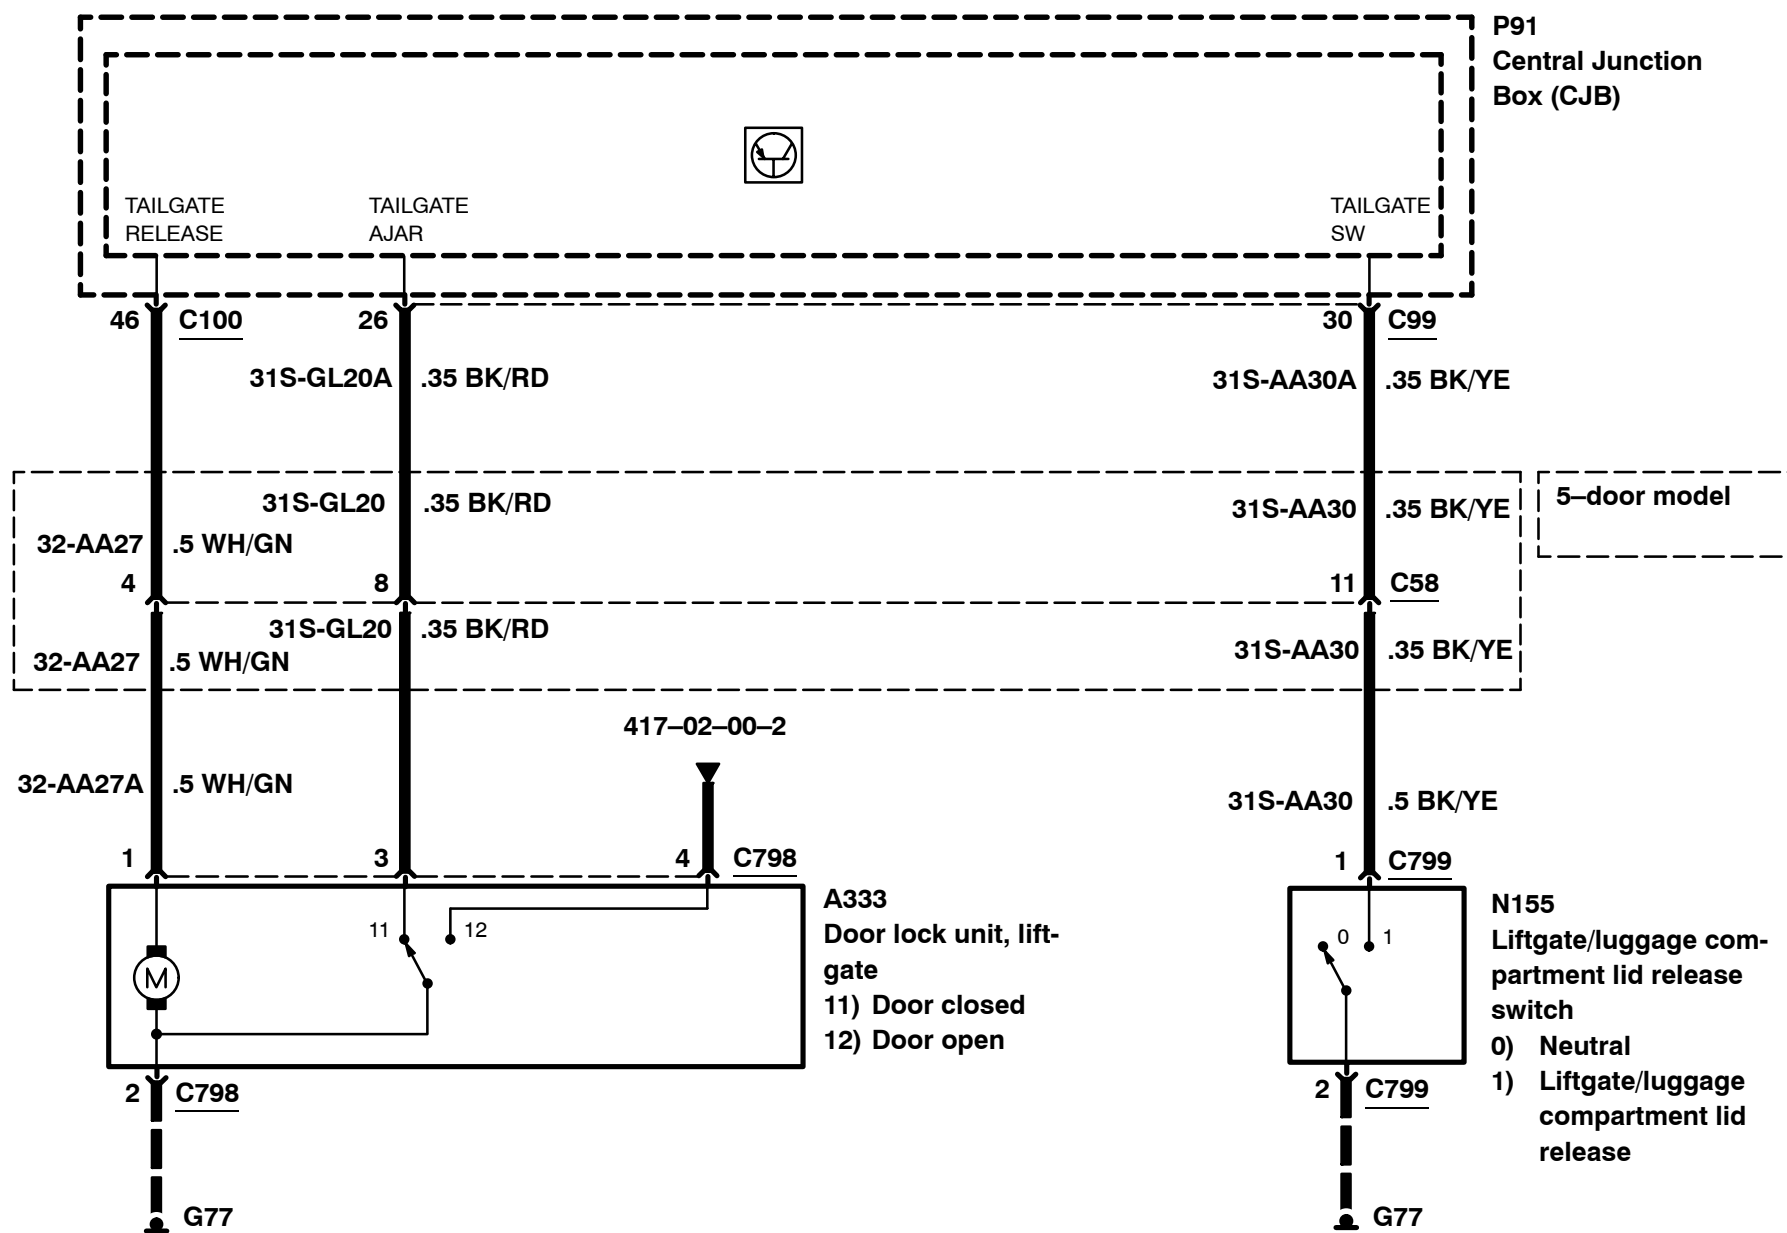


# Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

02/2008  
501-14-00-35  
2008.25  
Focus

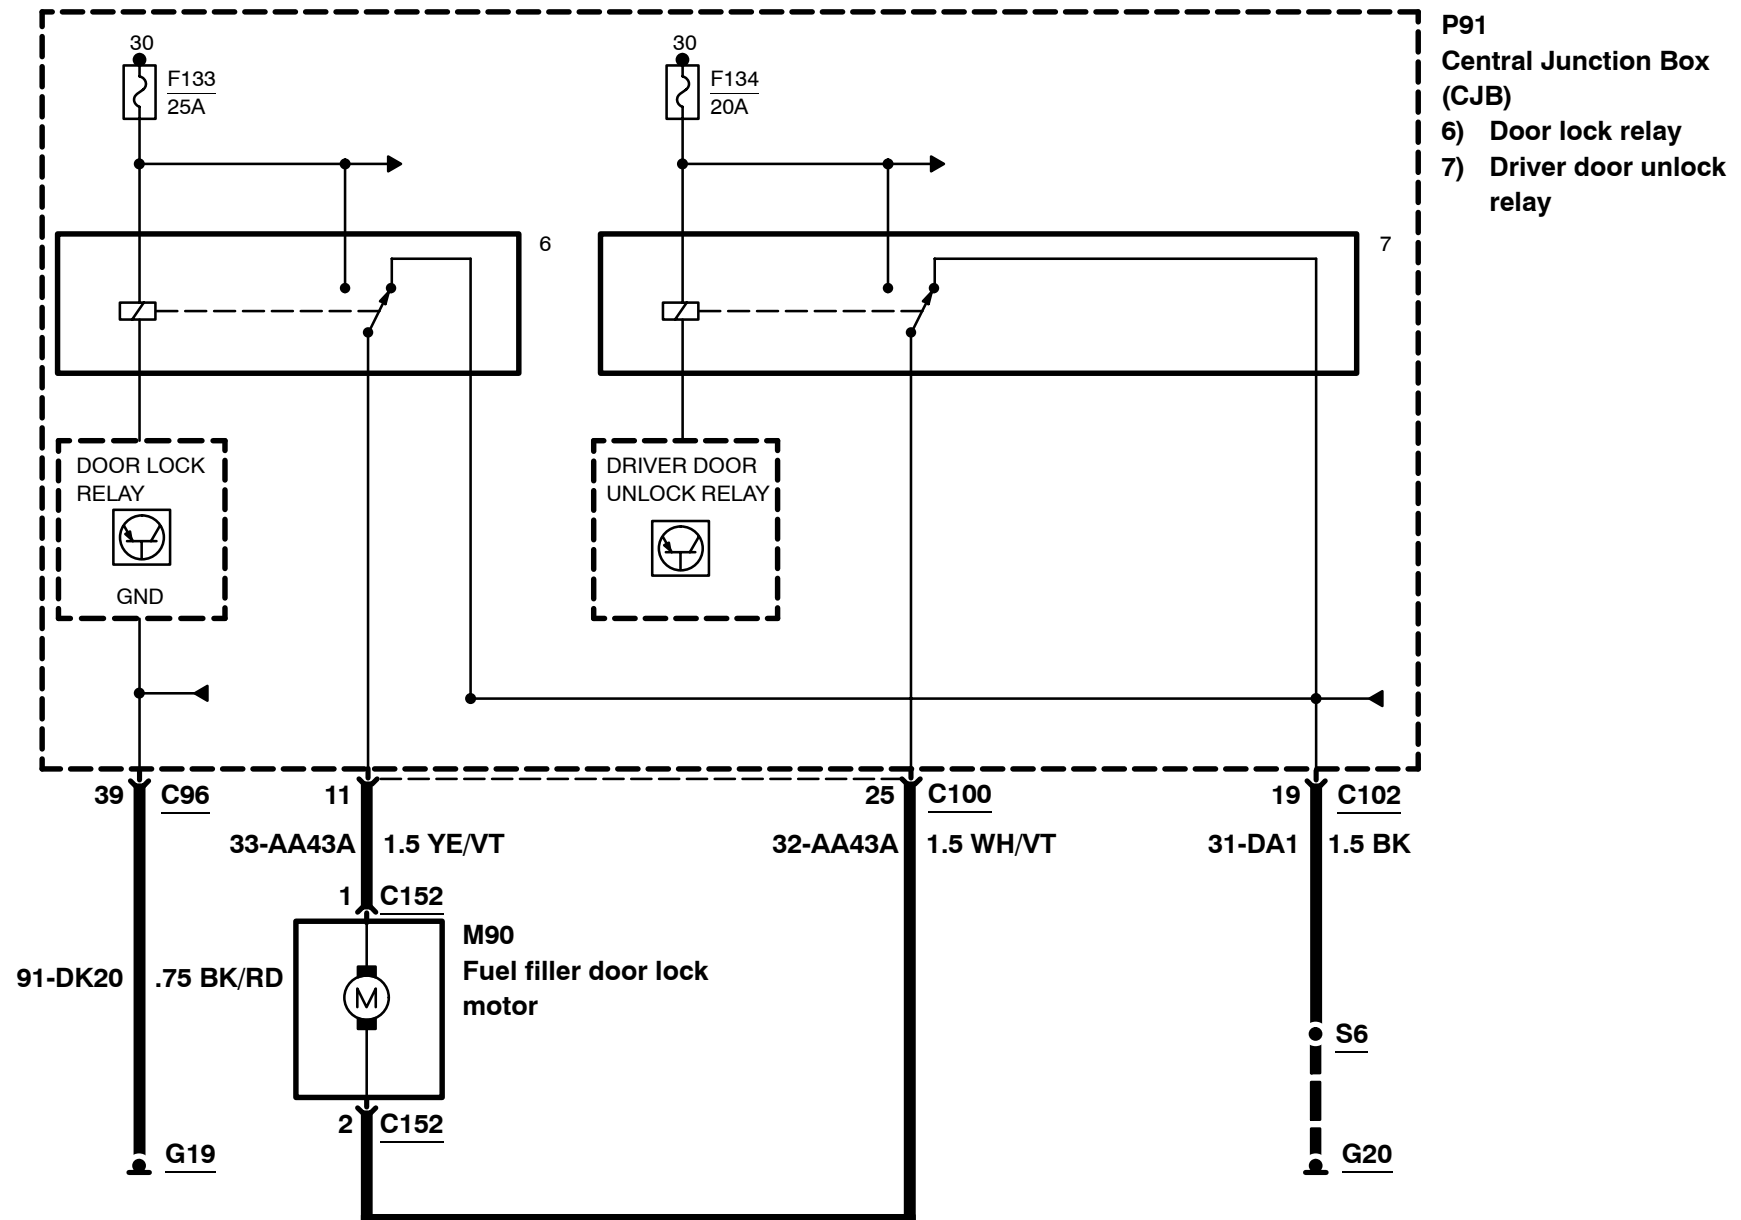


# Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

02/2008  
501-14-00-36  
2008.25  
Focus

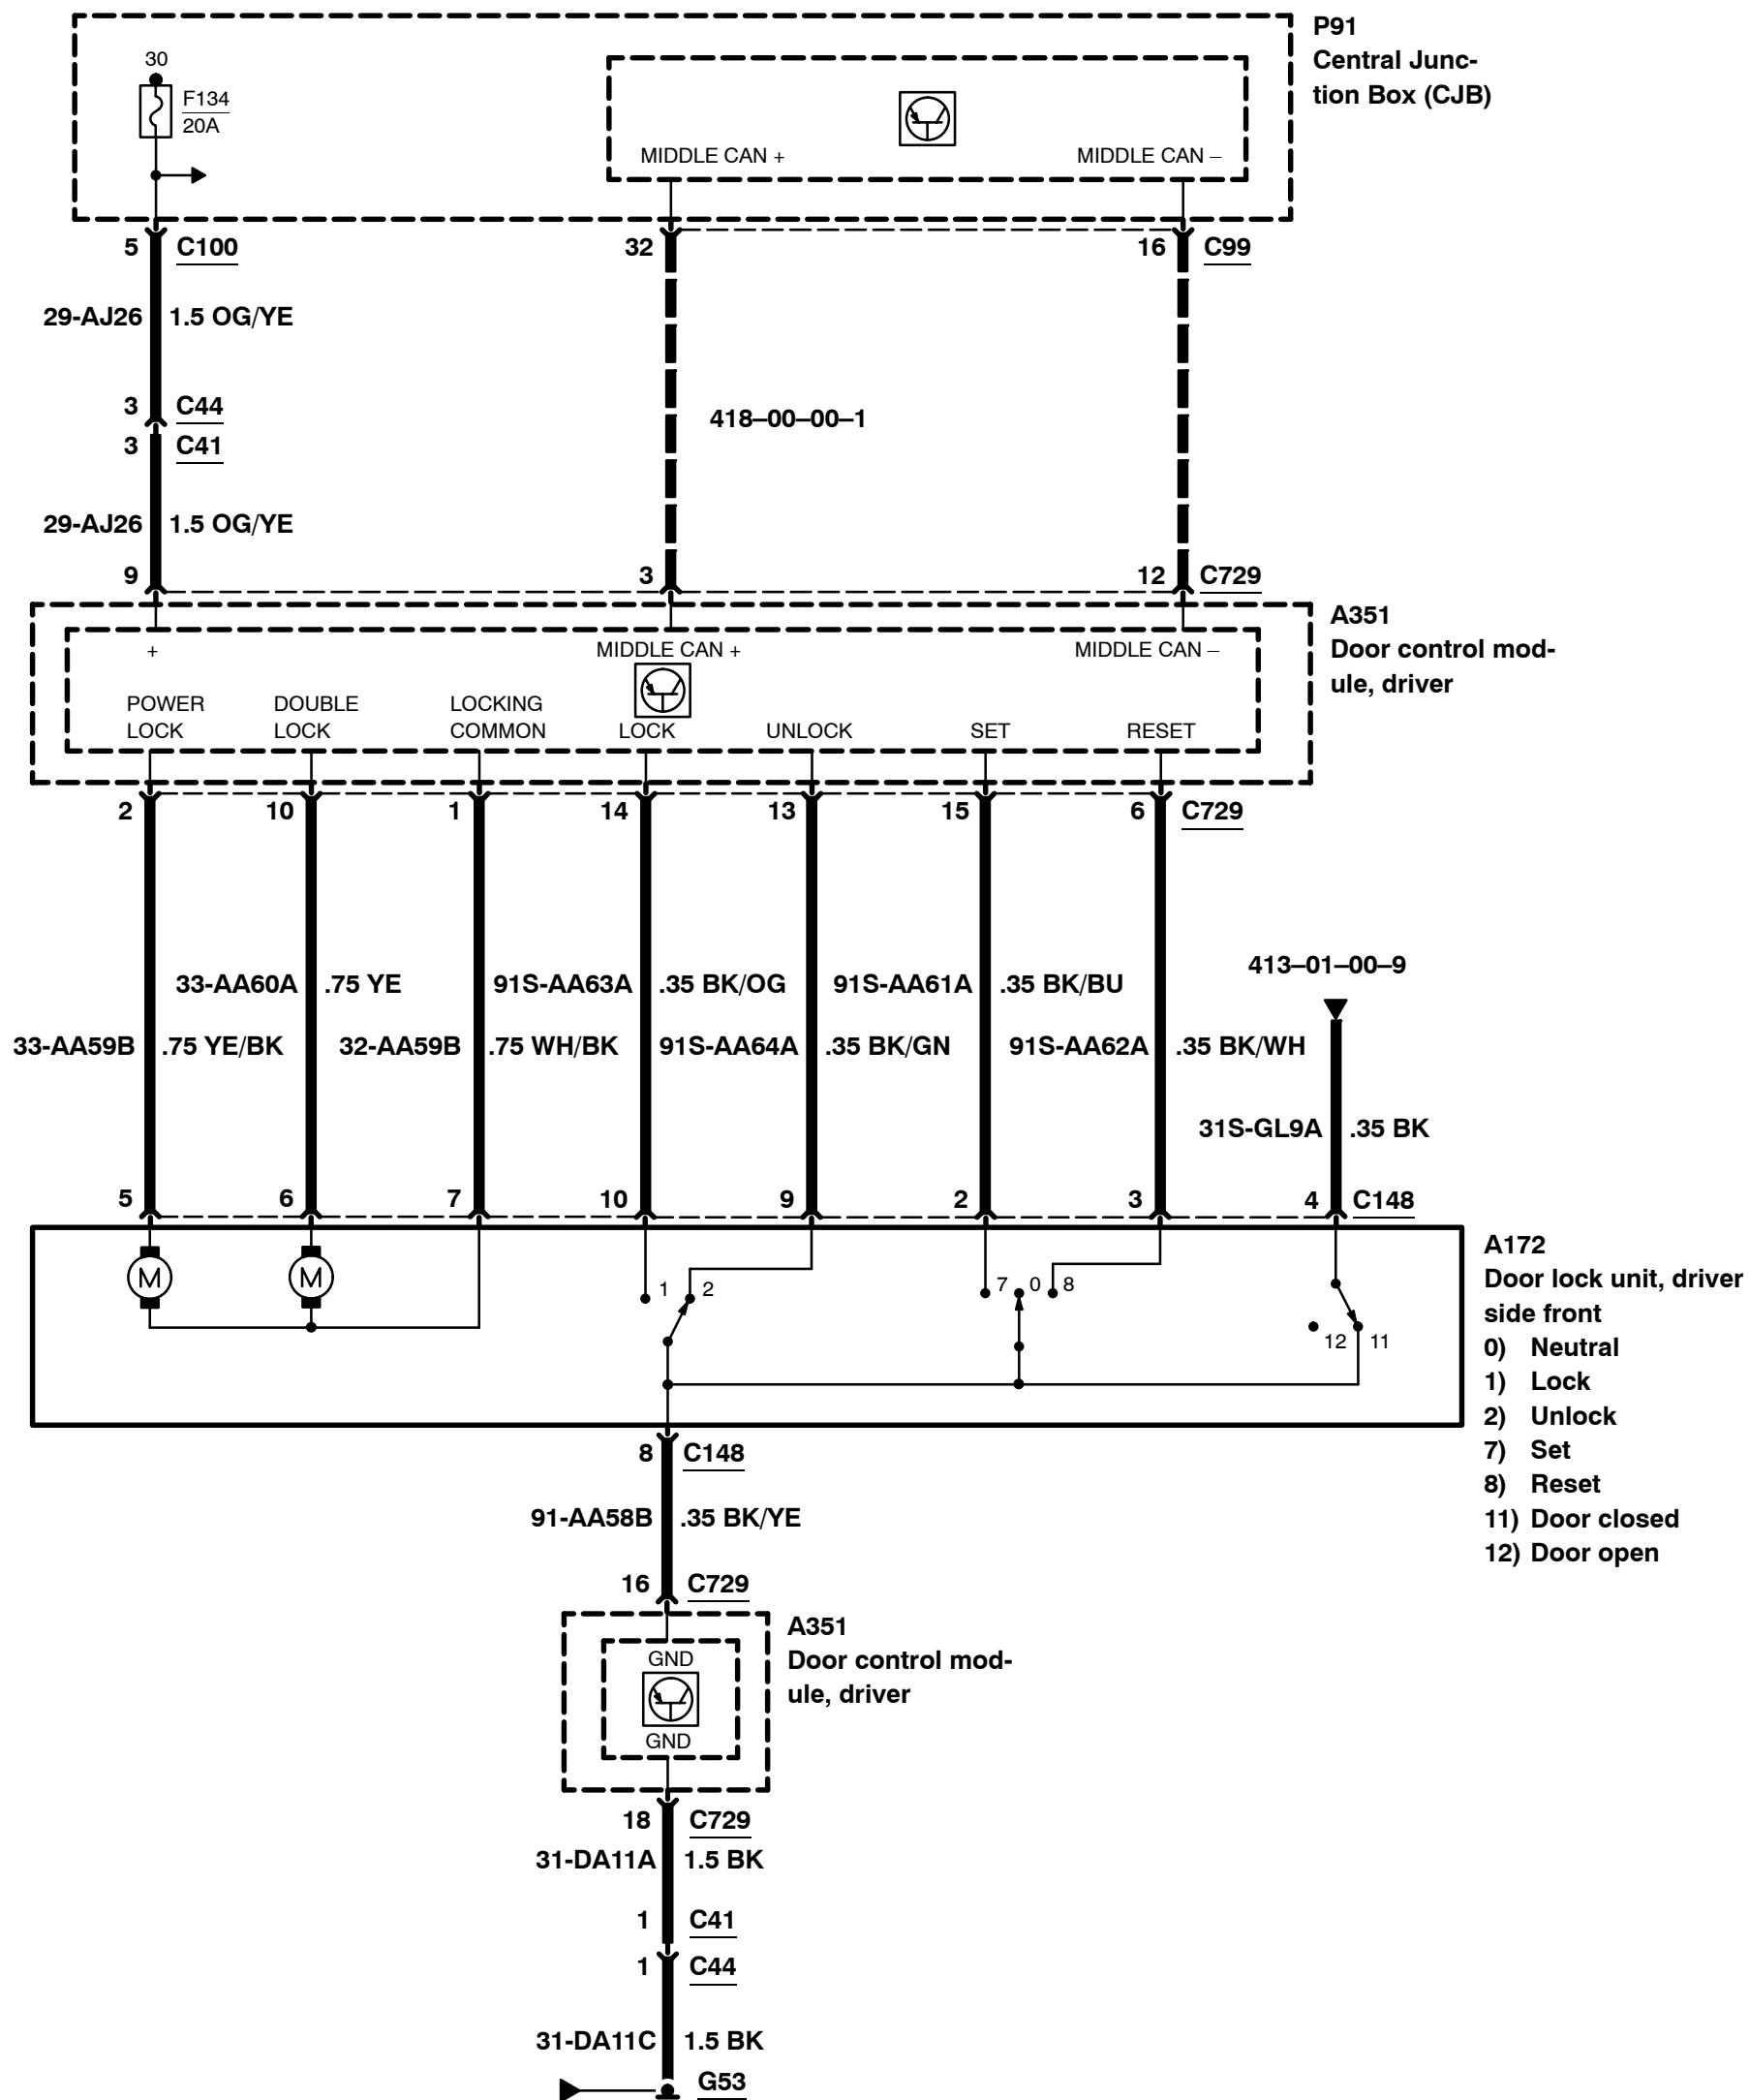


# Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

02/2008  
501-14-00-37  
2008.25  
Focus

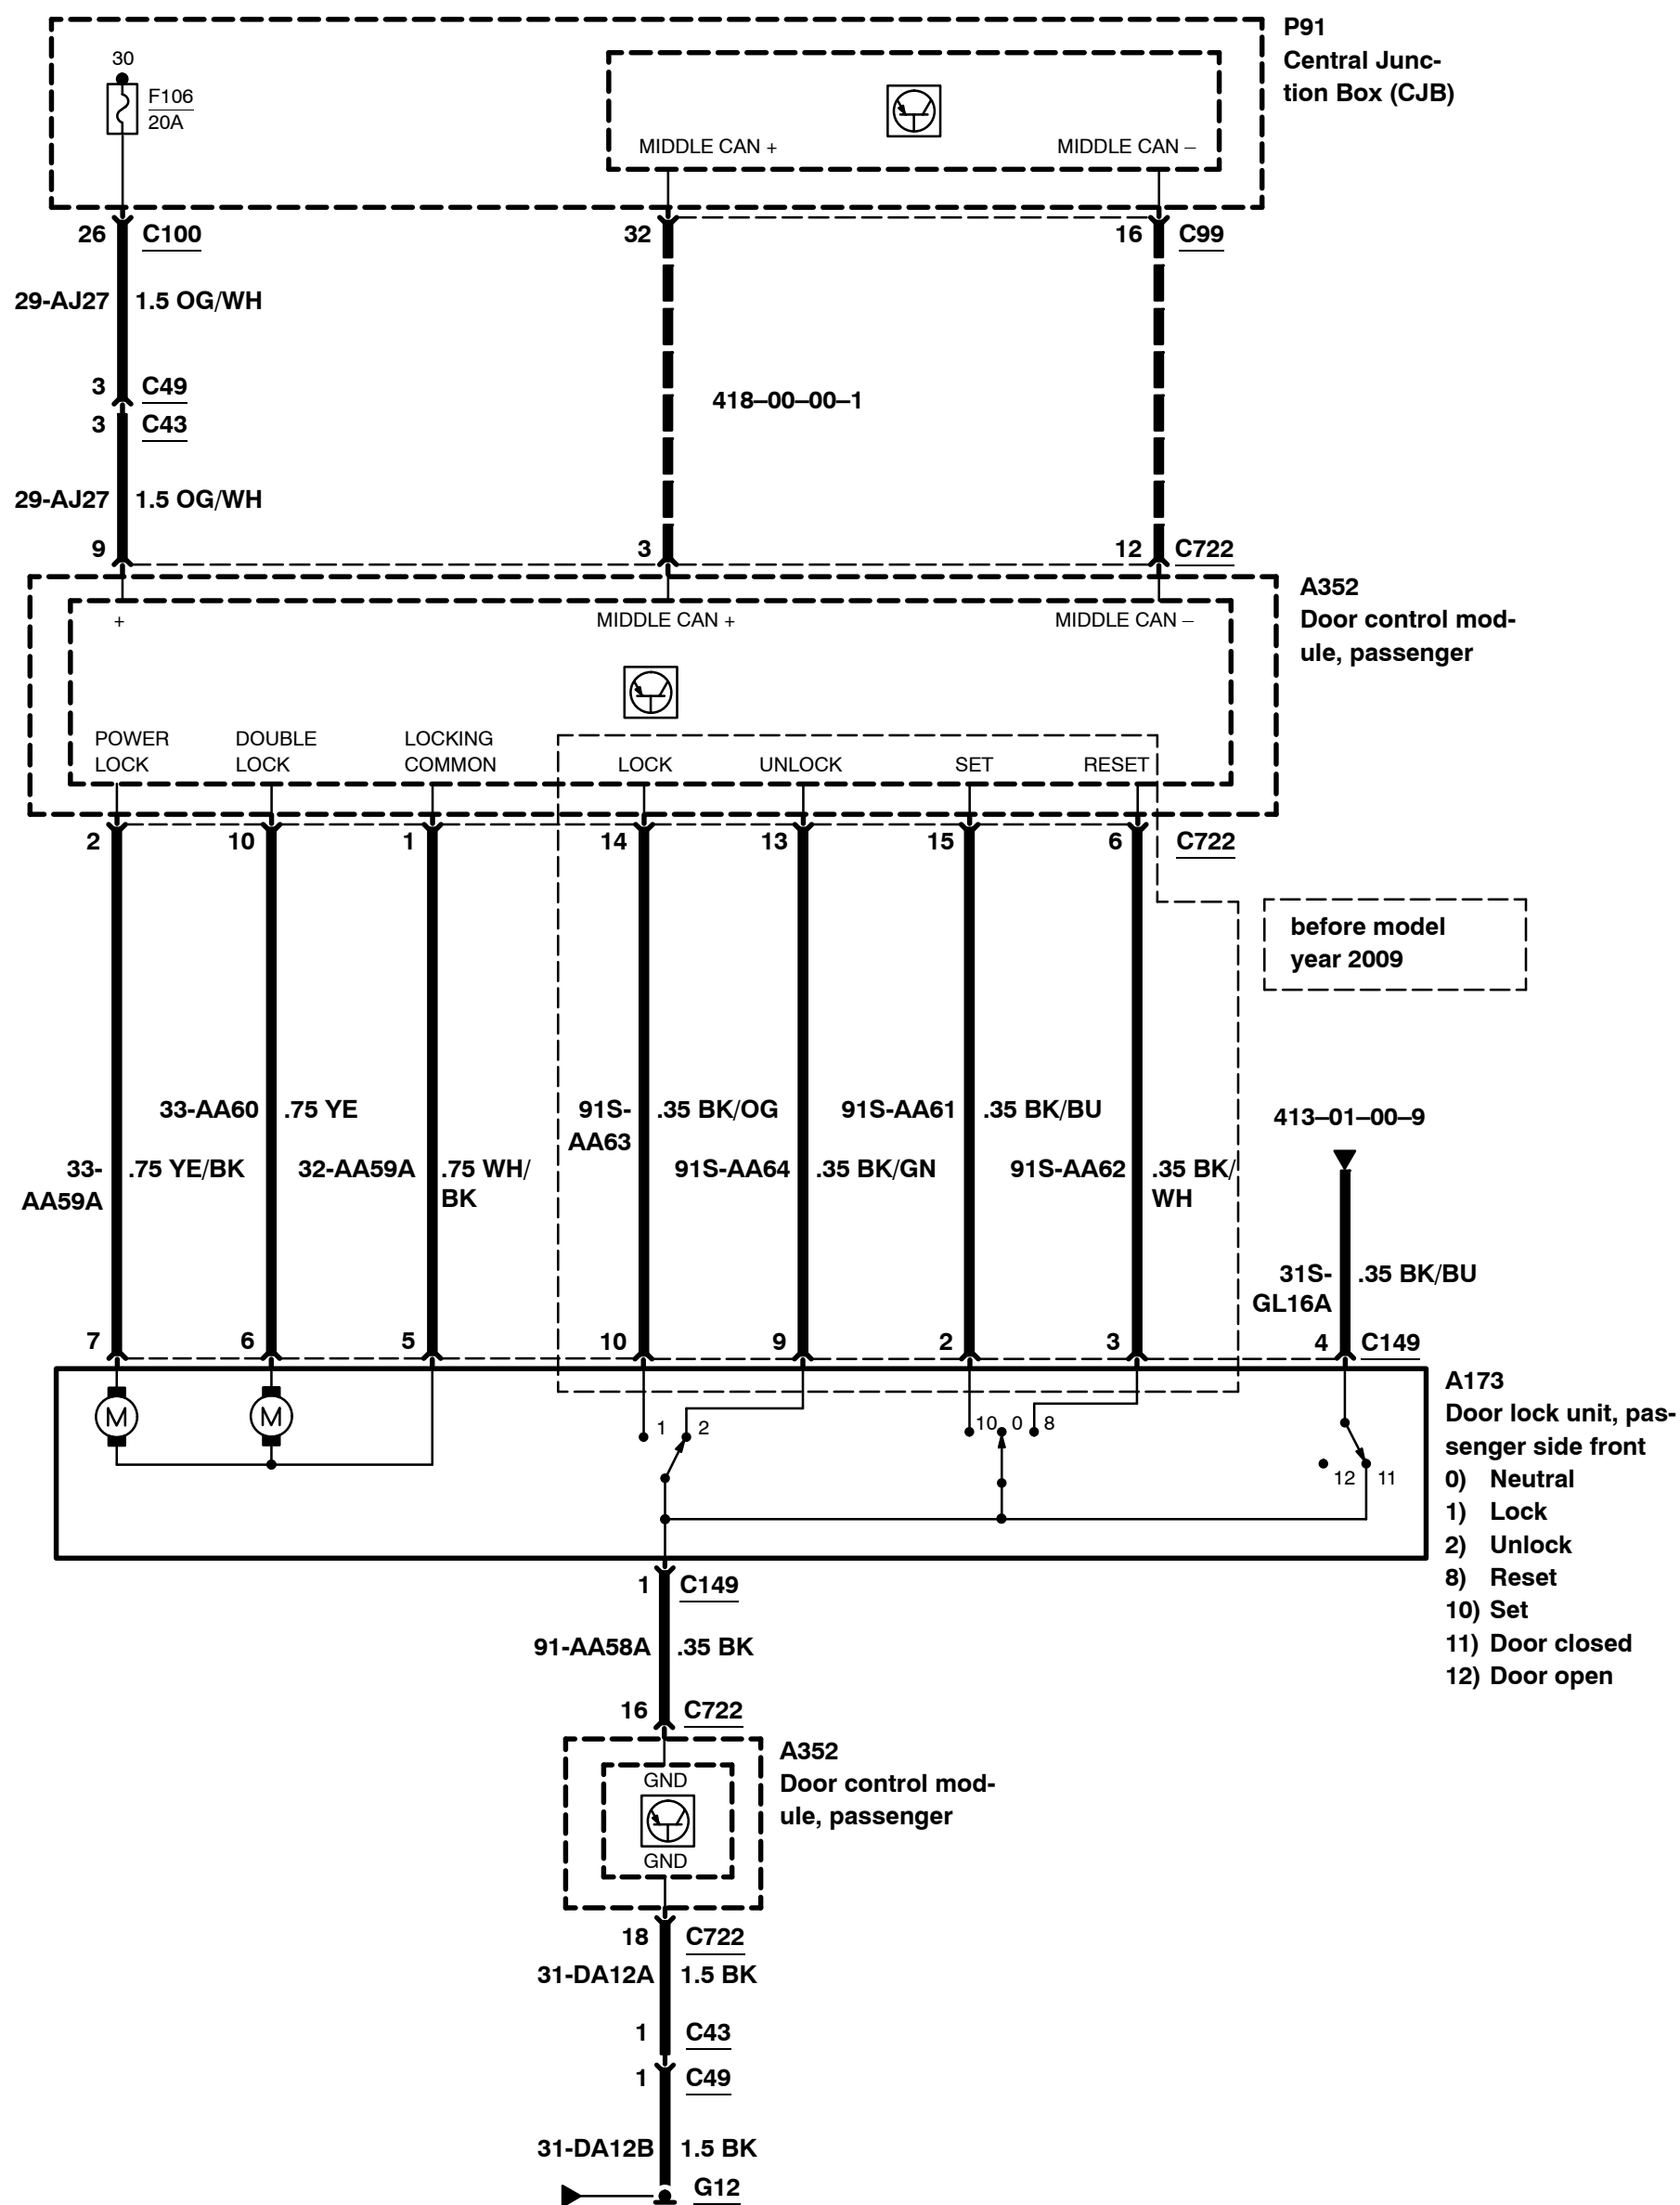


Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

02/2008  
501-14-00-38  
2008.25  
Focus

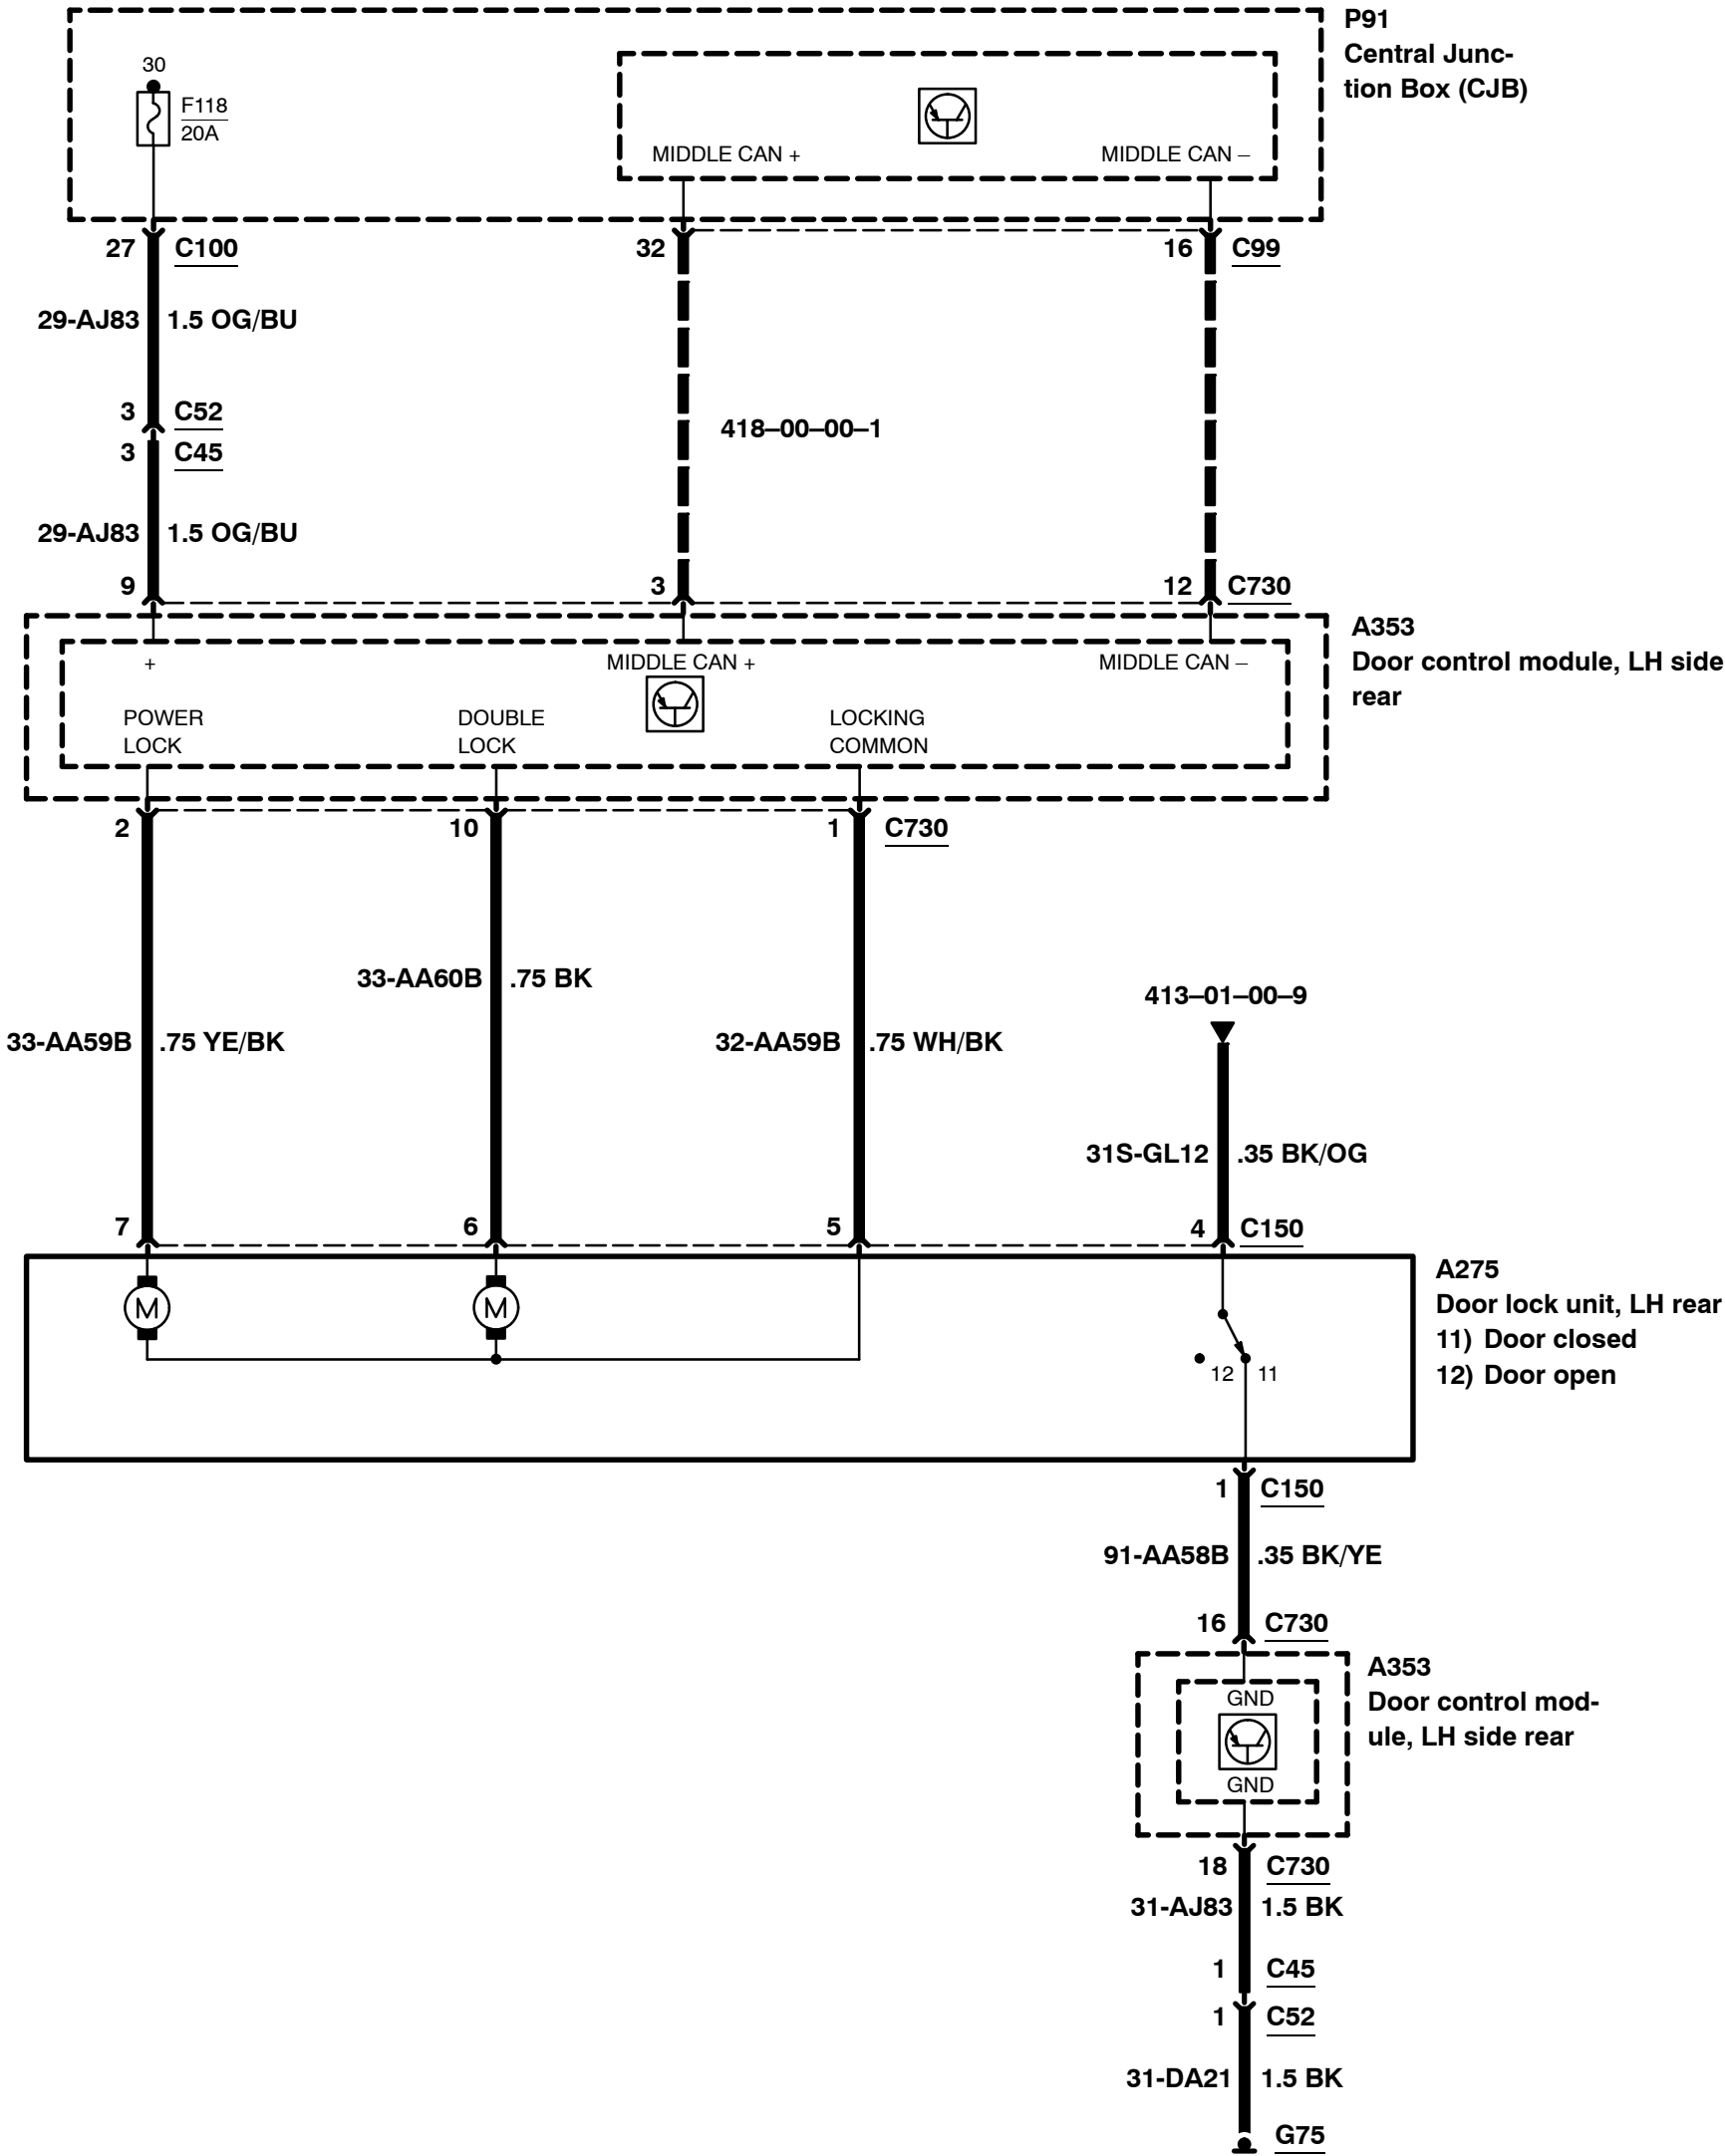


# Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

02/2008  
501-14-00-39  
2008.25  
Focus

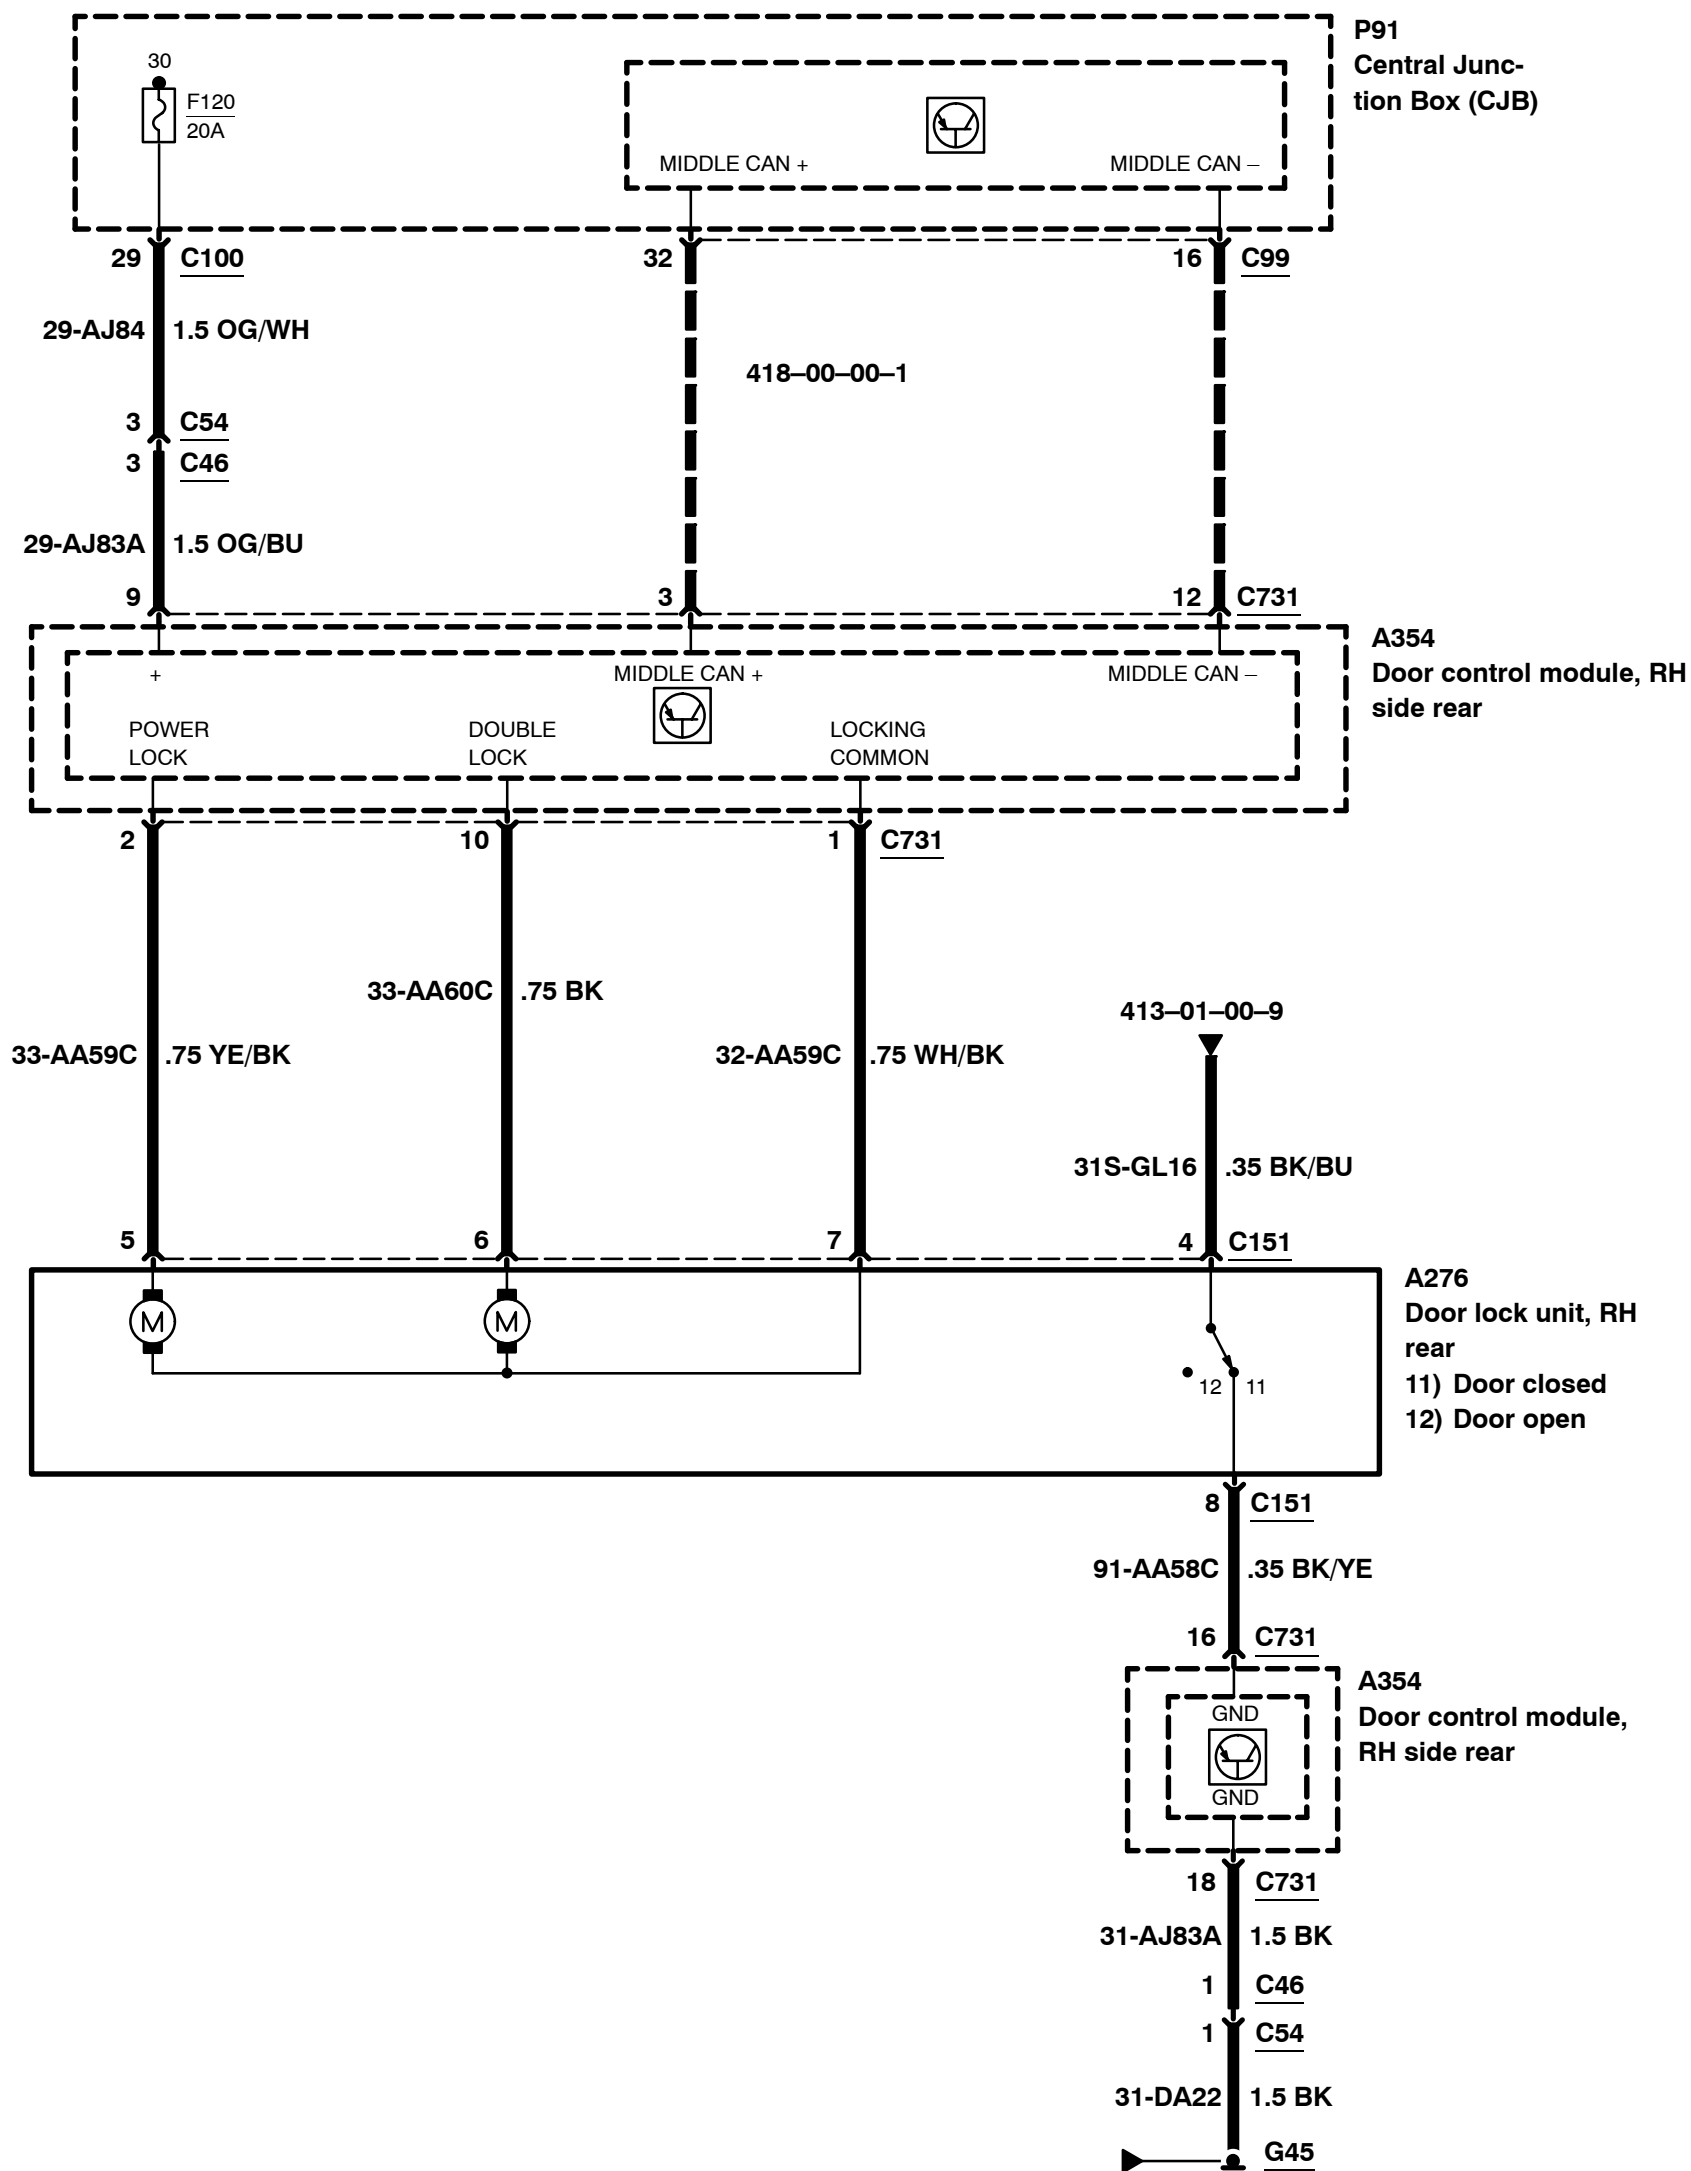




02/2008  
501-14-00-40  
2008.25  
Focus

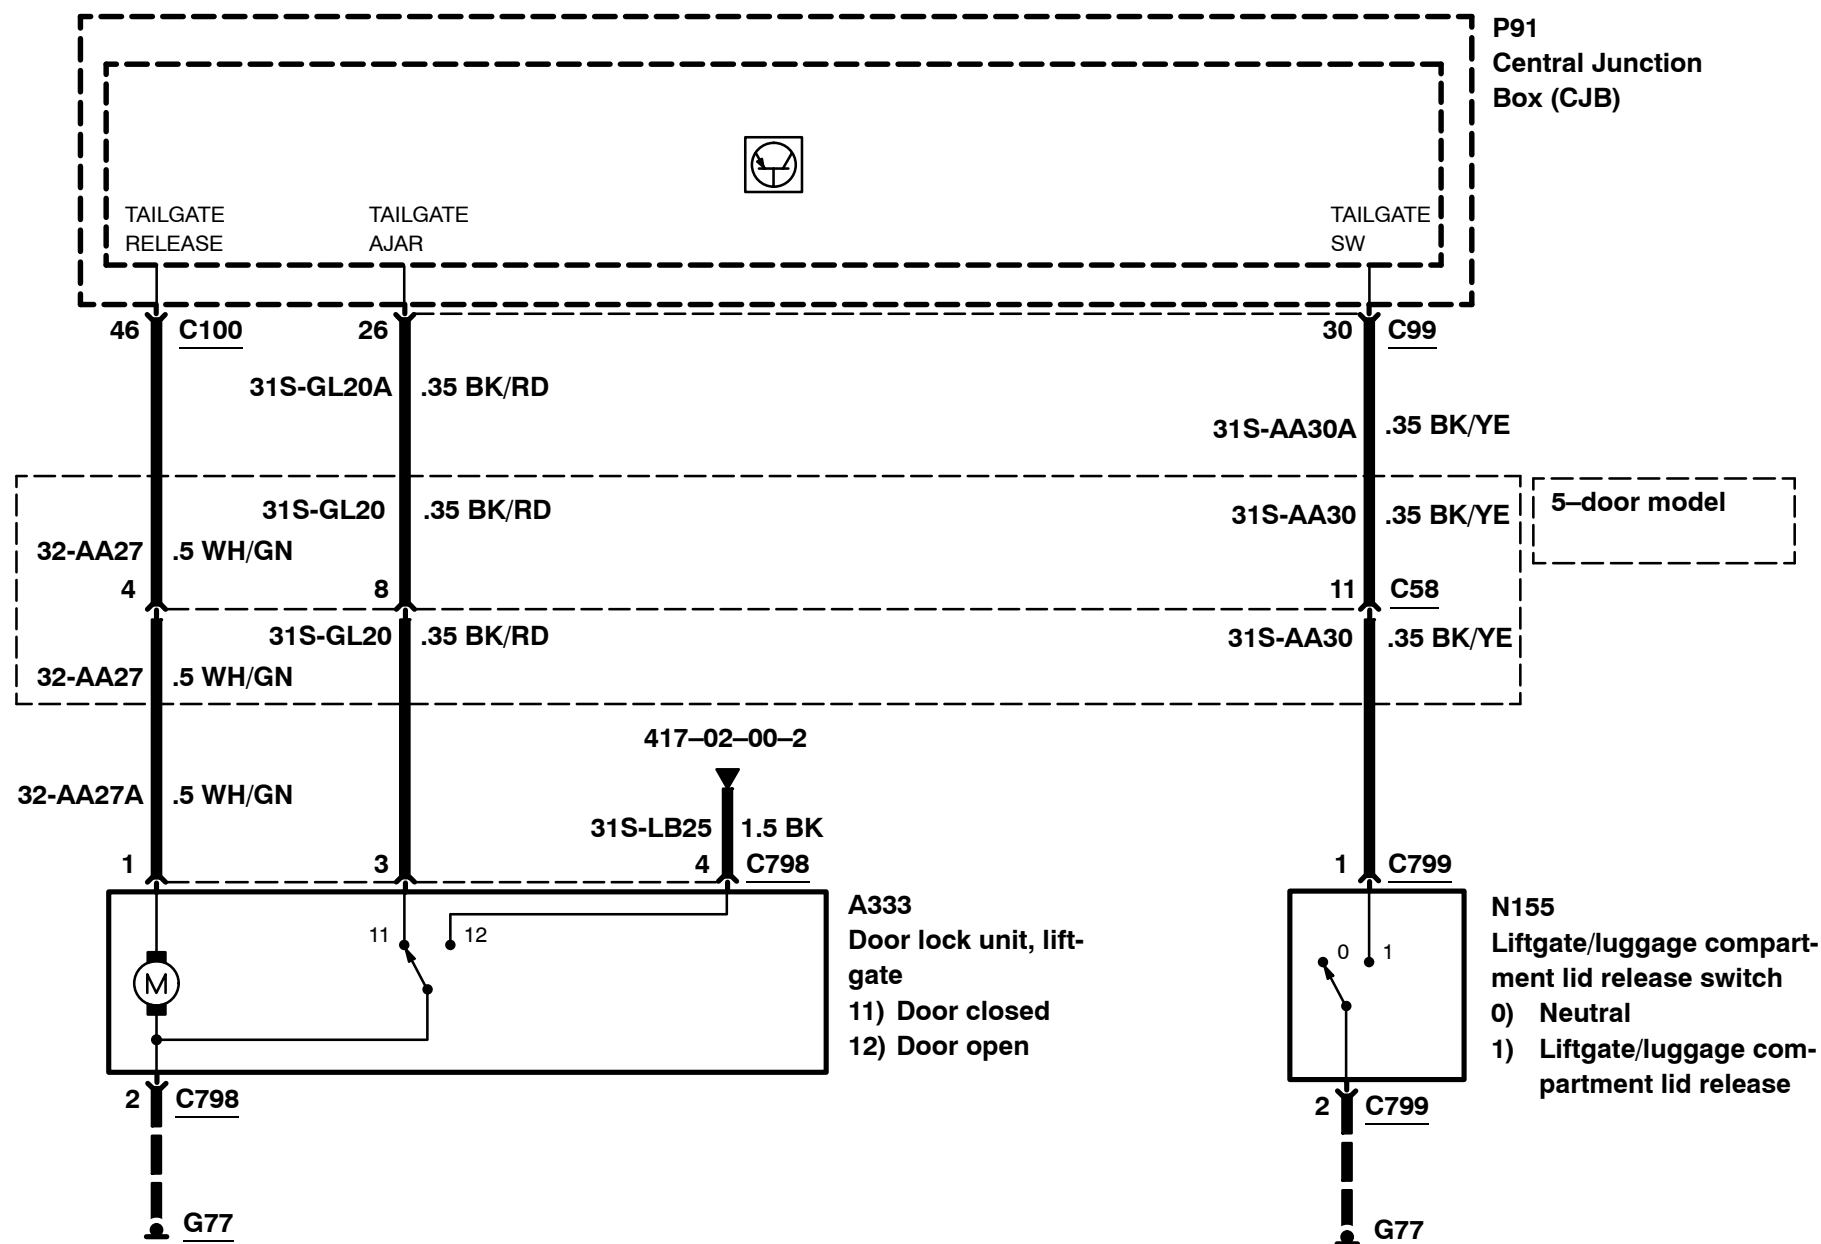




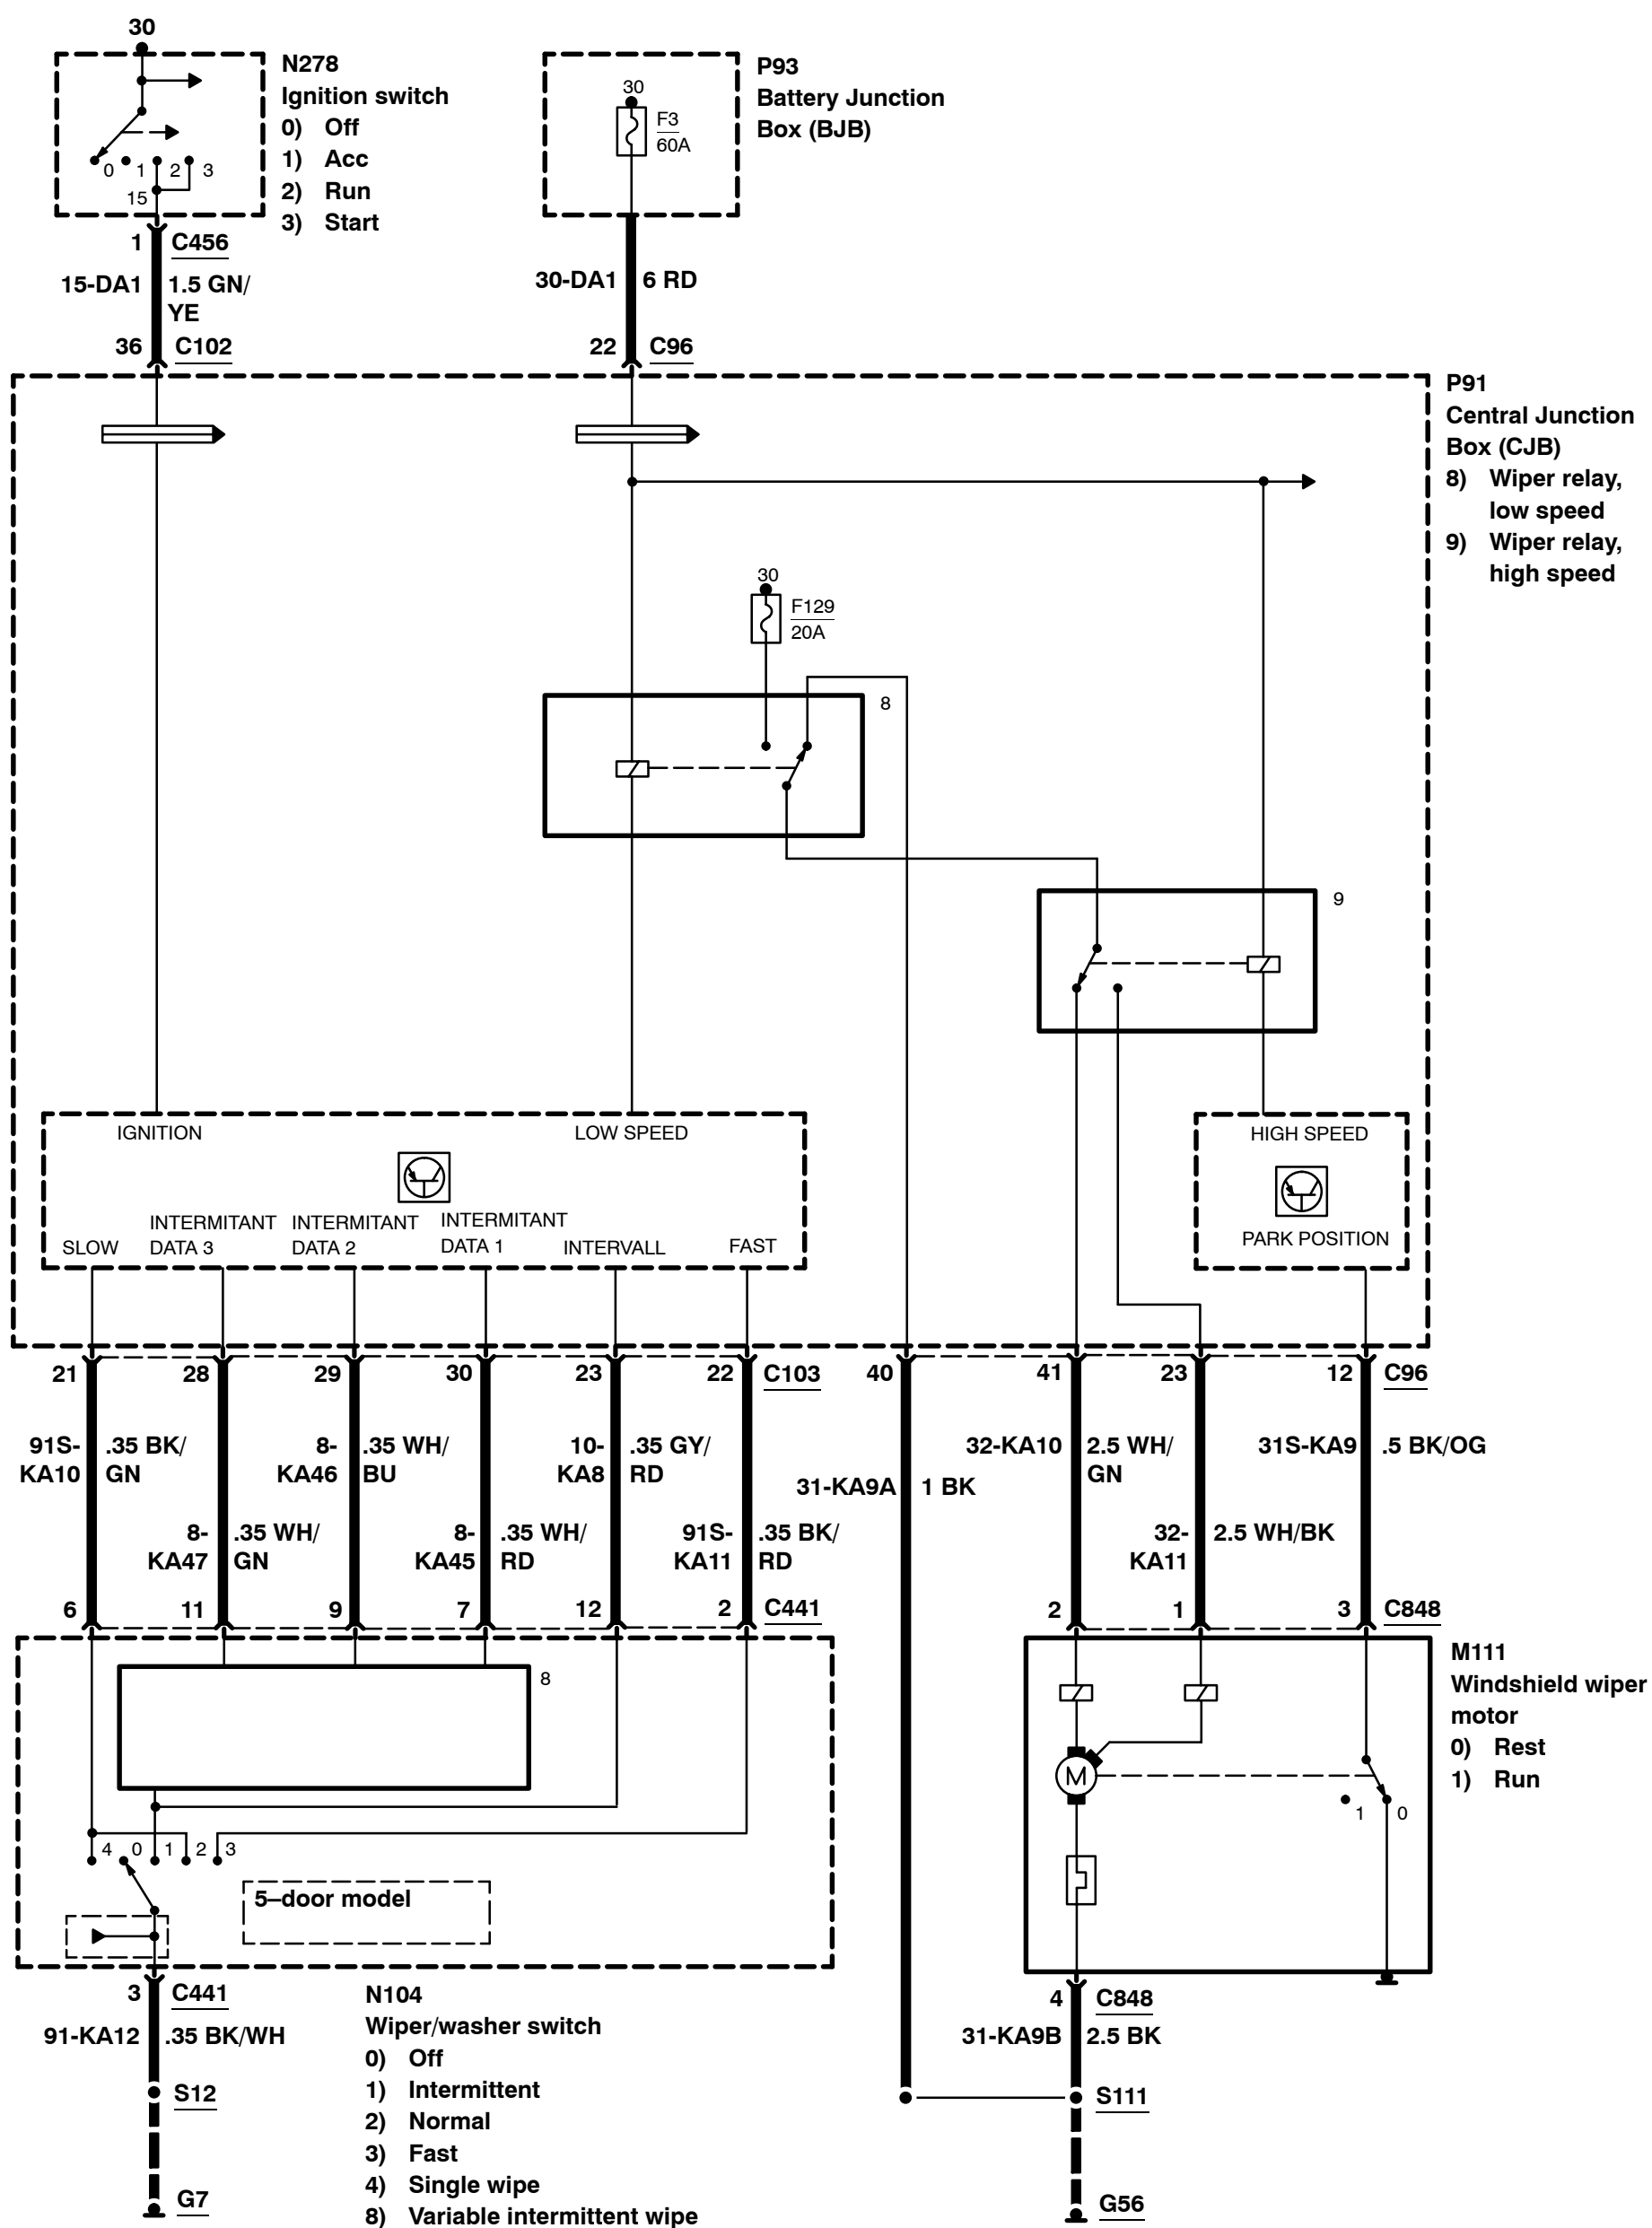


# Wipers and Washers – 5-door model


02/2008  
501-16-00-2  
2008.25  
Focus

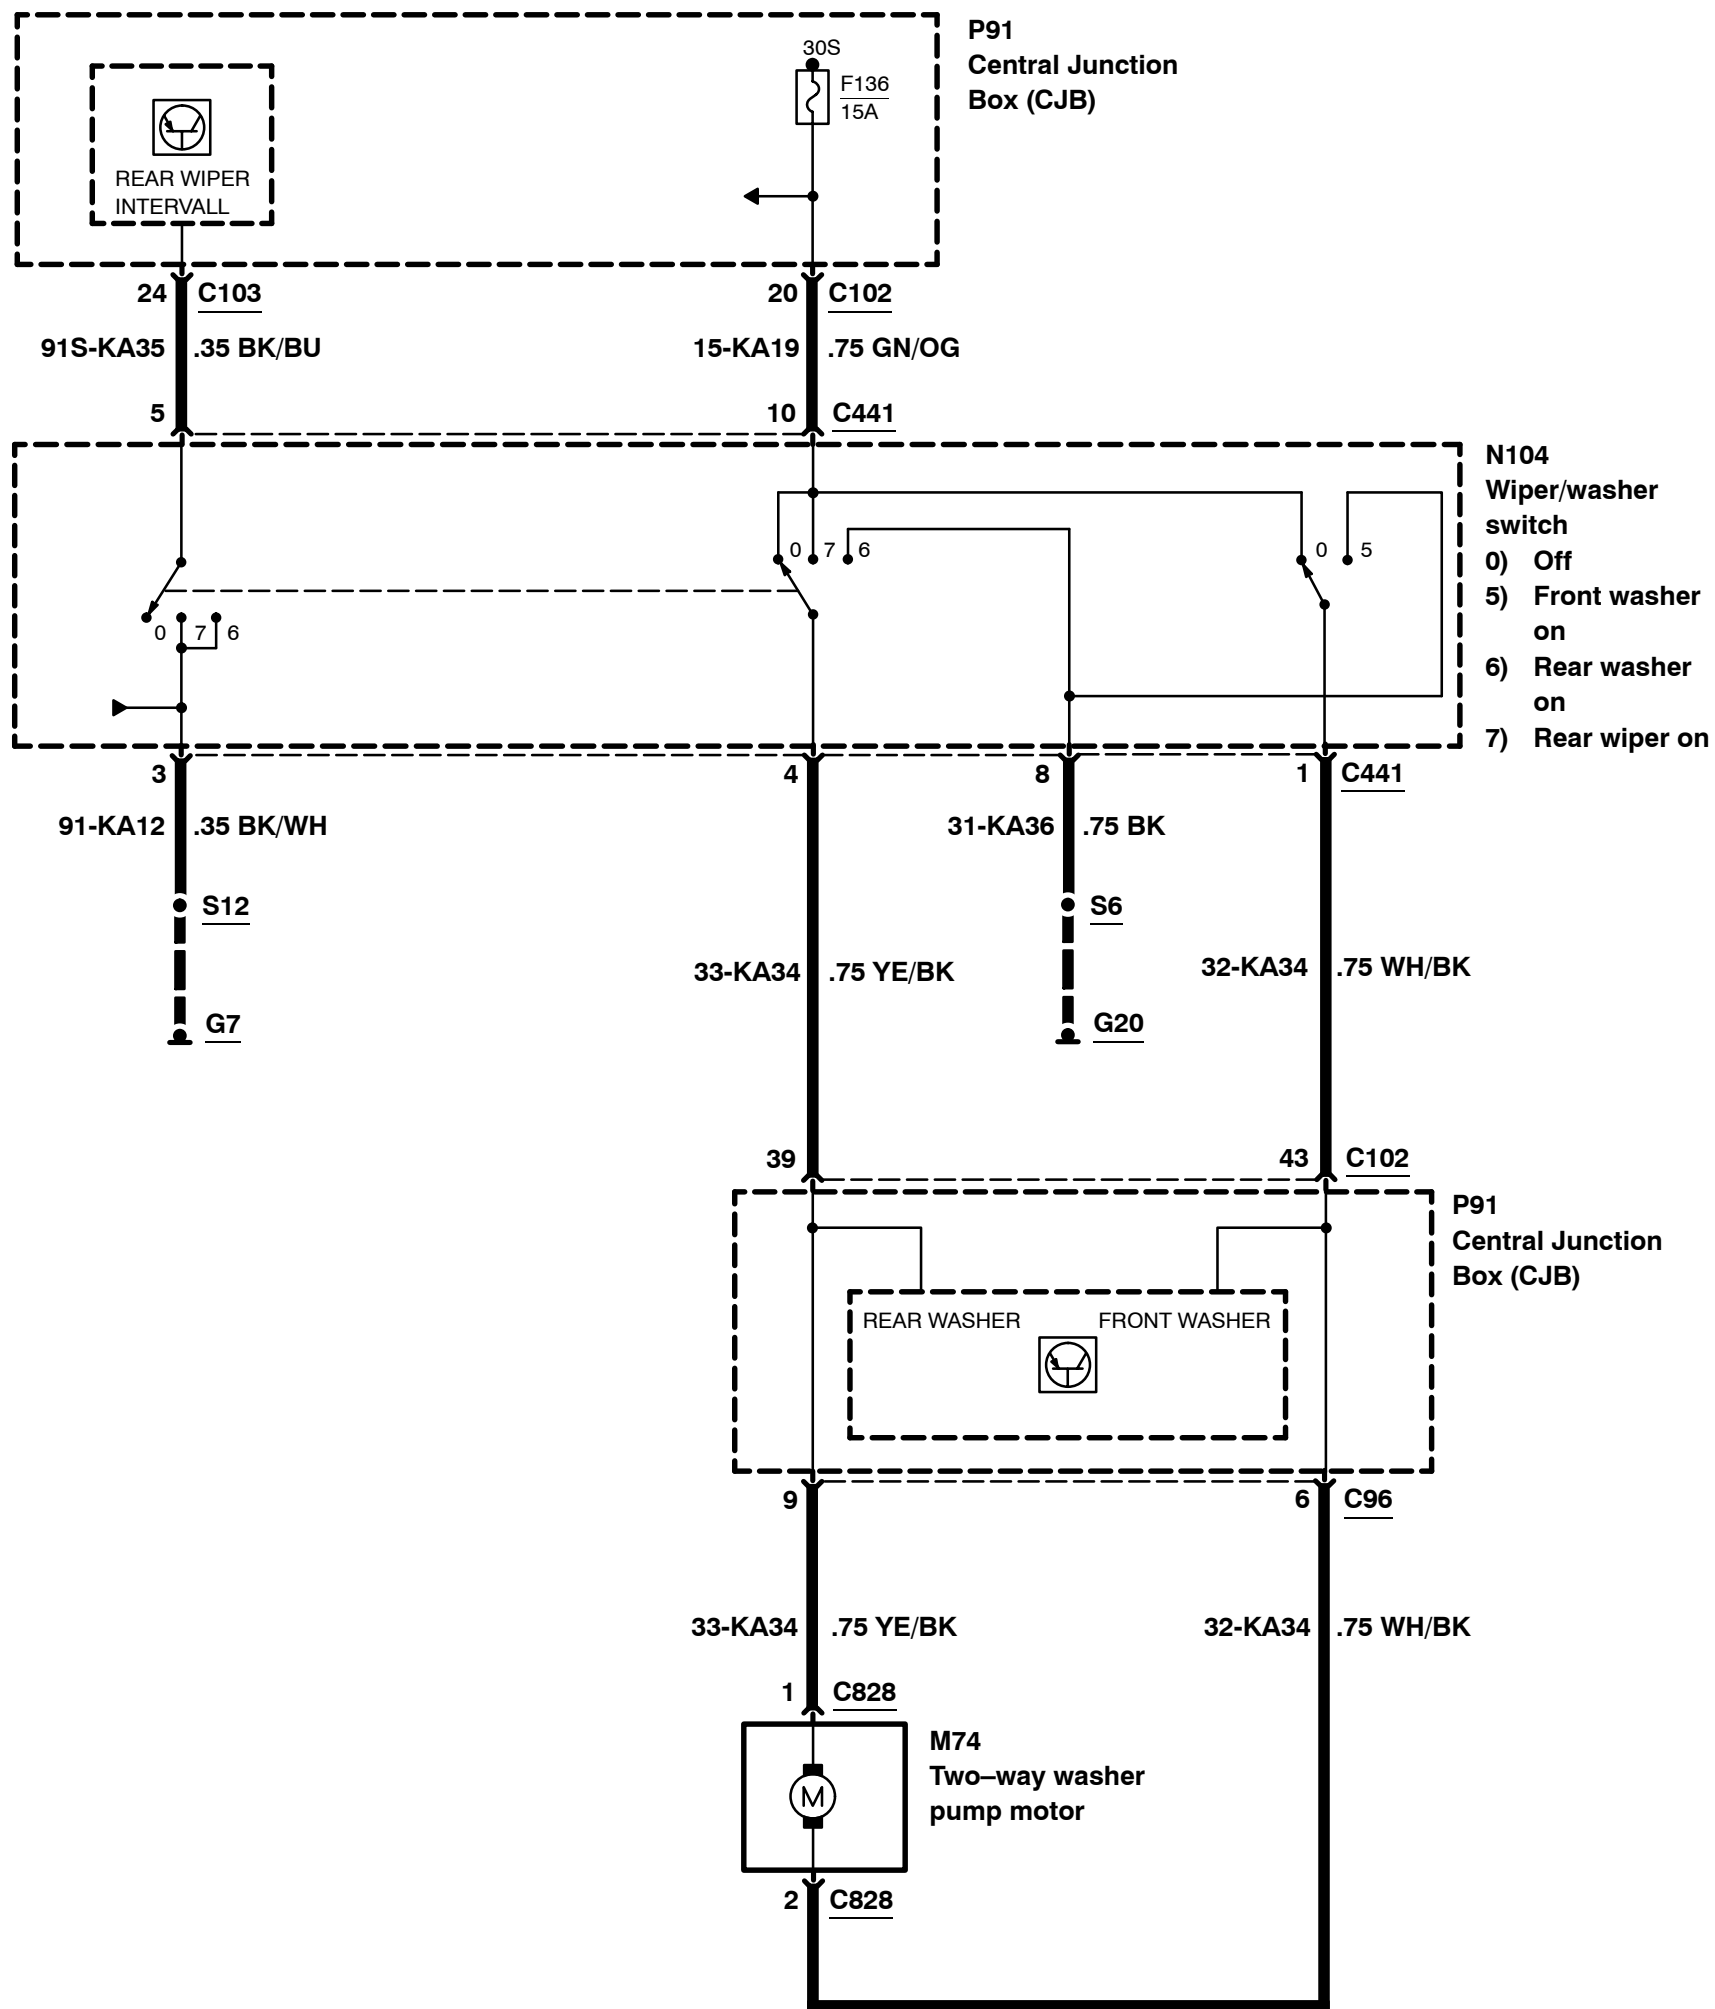


# Wipers and Washers – 4-door model

02/2008  
501-16-00-3  
2008.25  
Focus

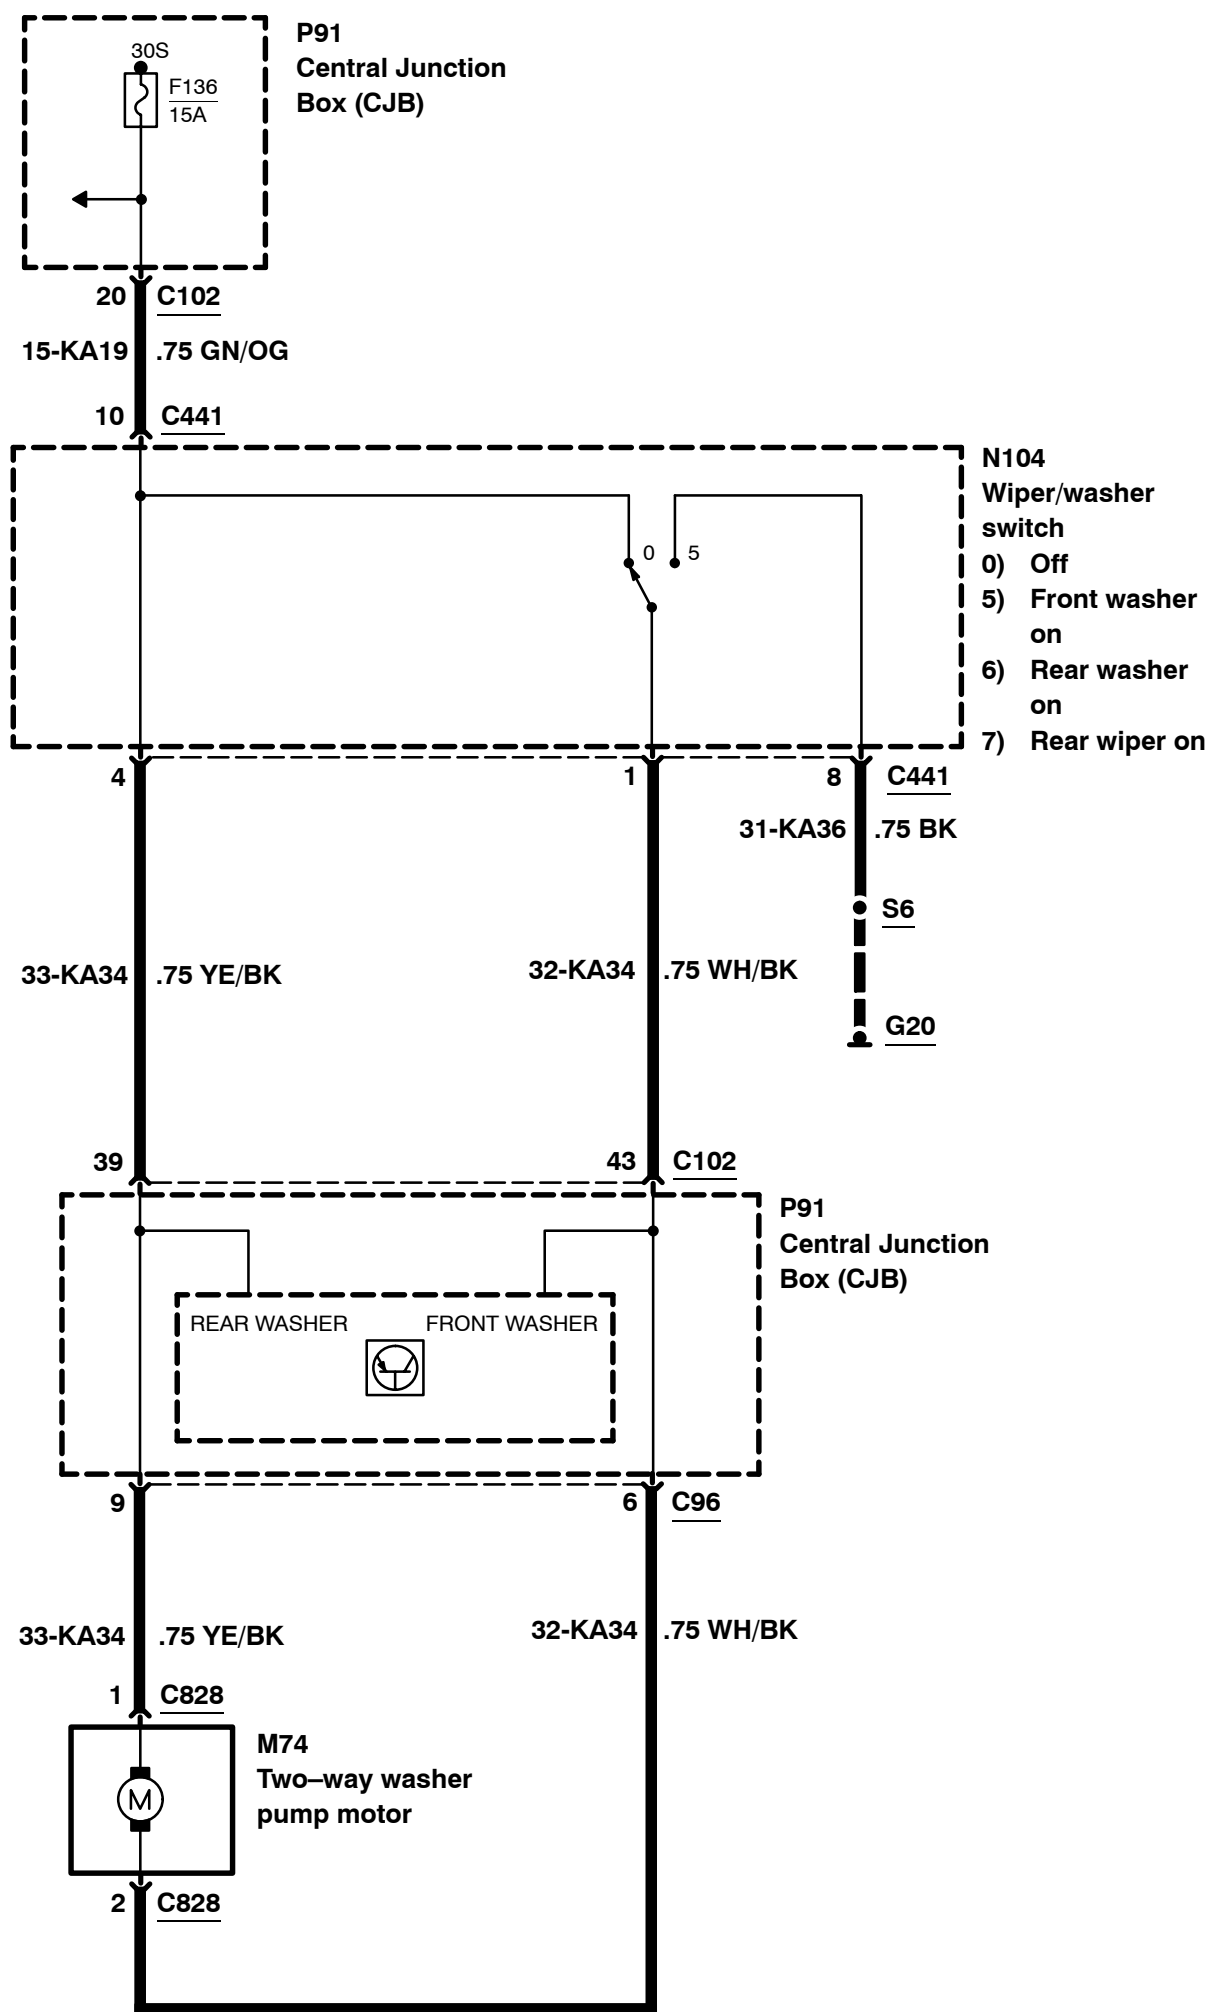

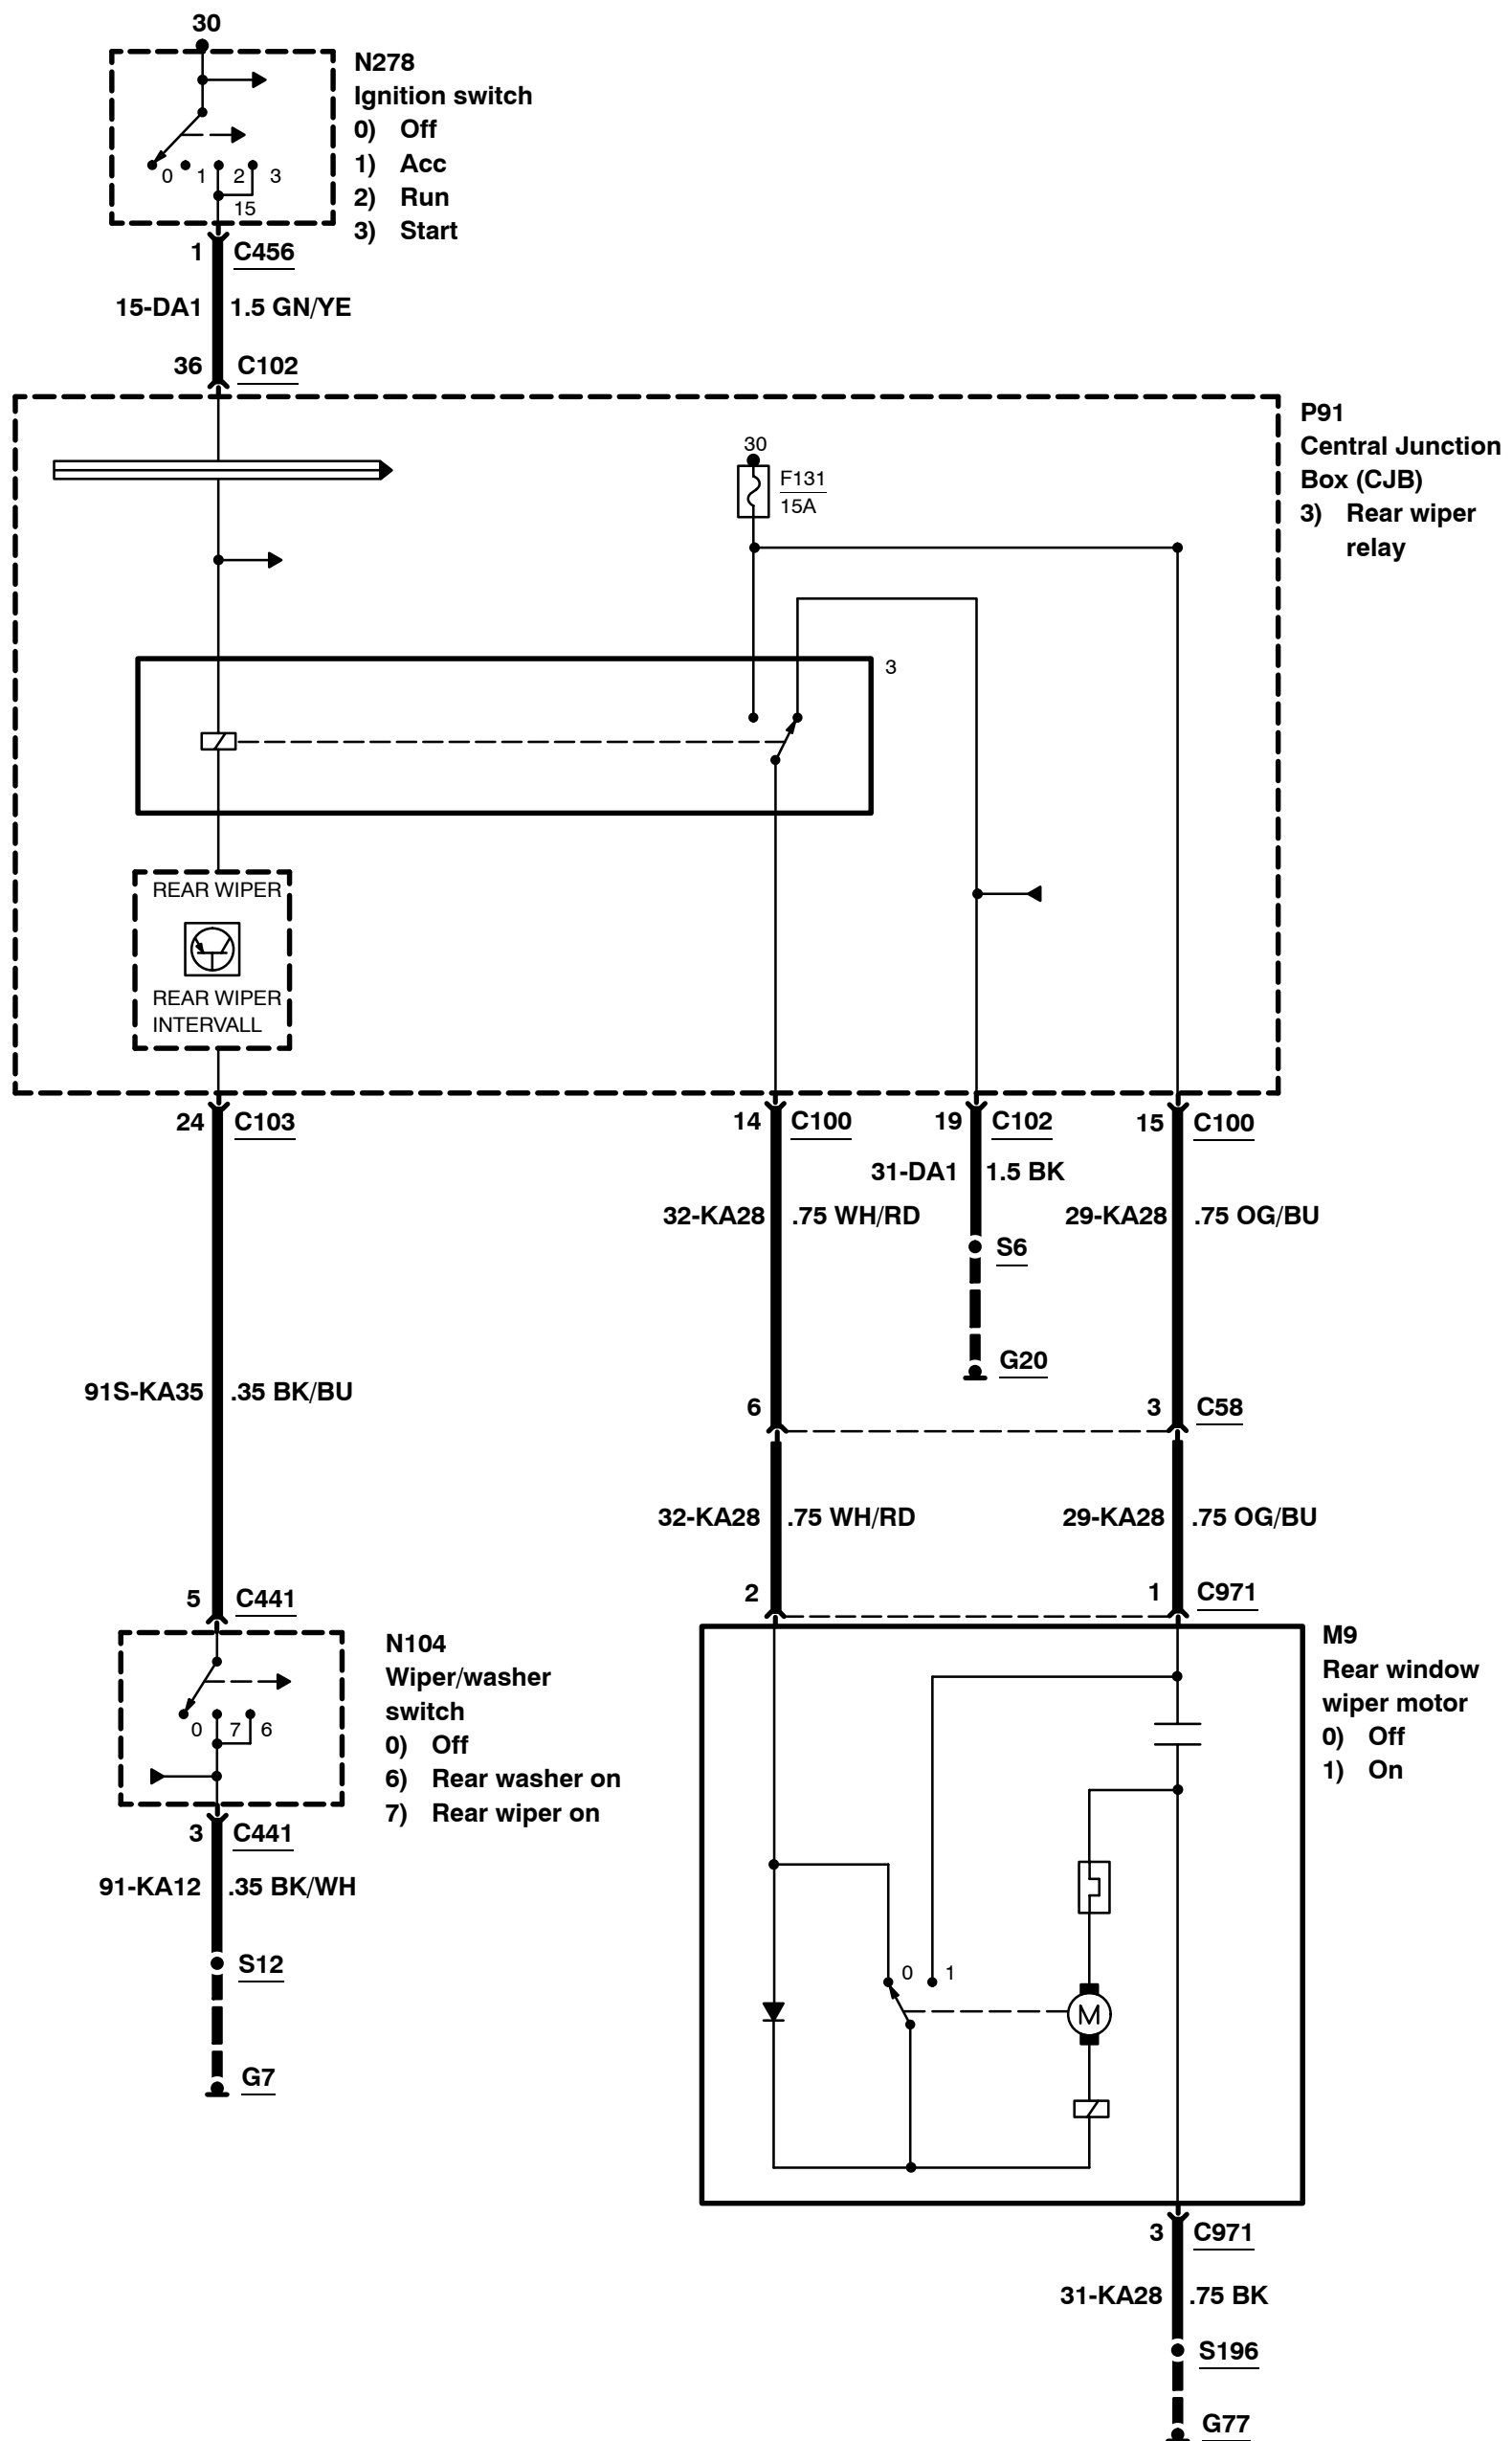


02/2008  
501-17-00-1  
2008.25  
Focus

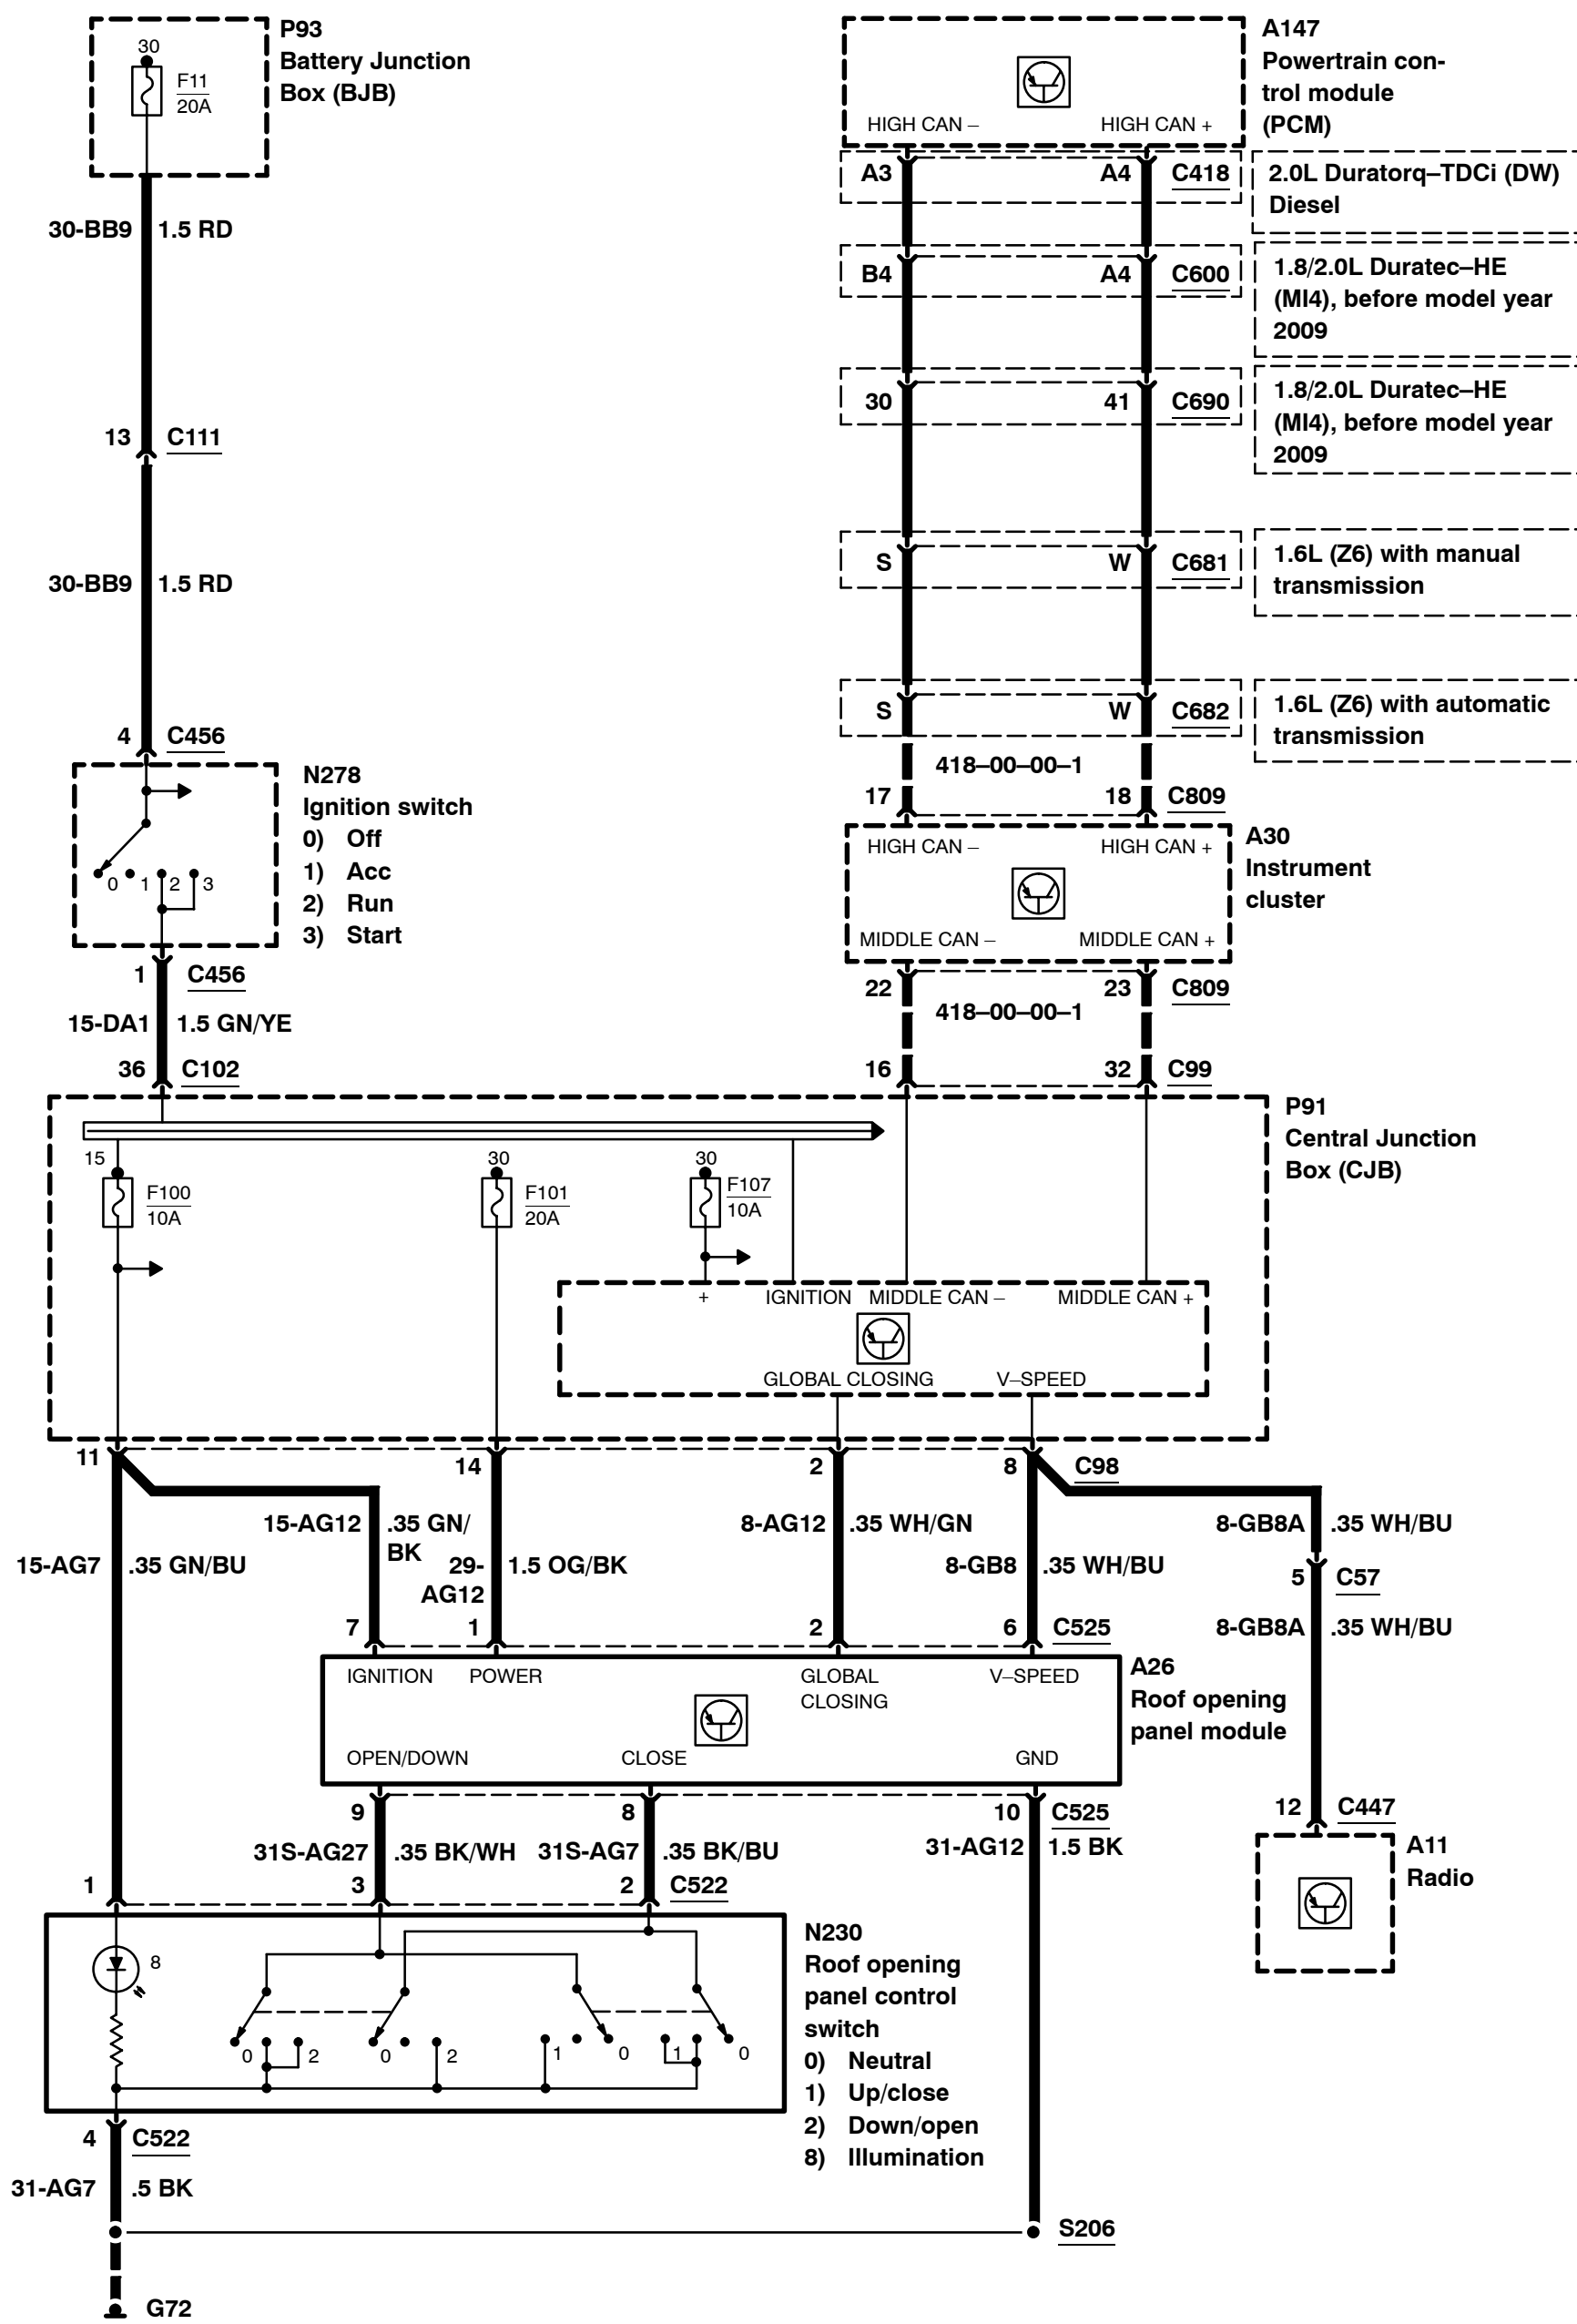

Safety Belt System


02/2008  
501-20A-00-1  
2008.25  
Focus

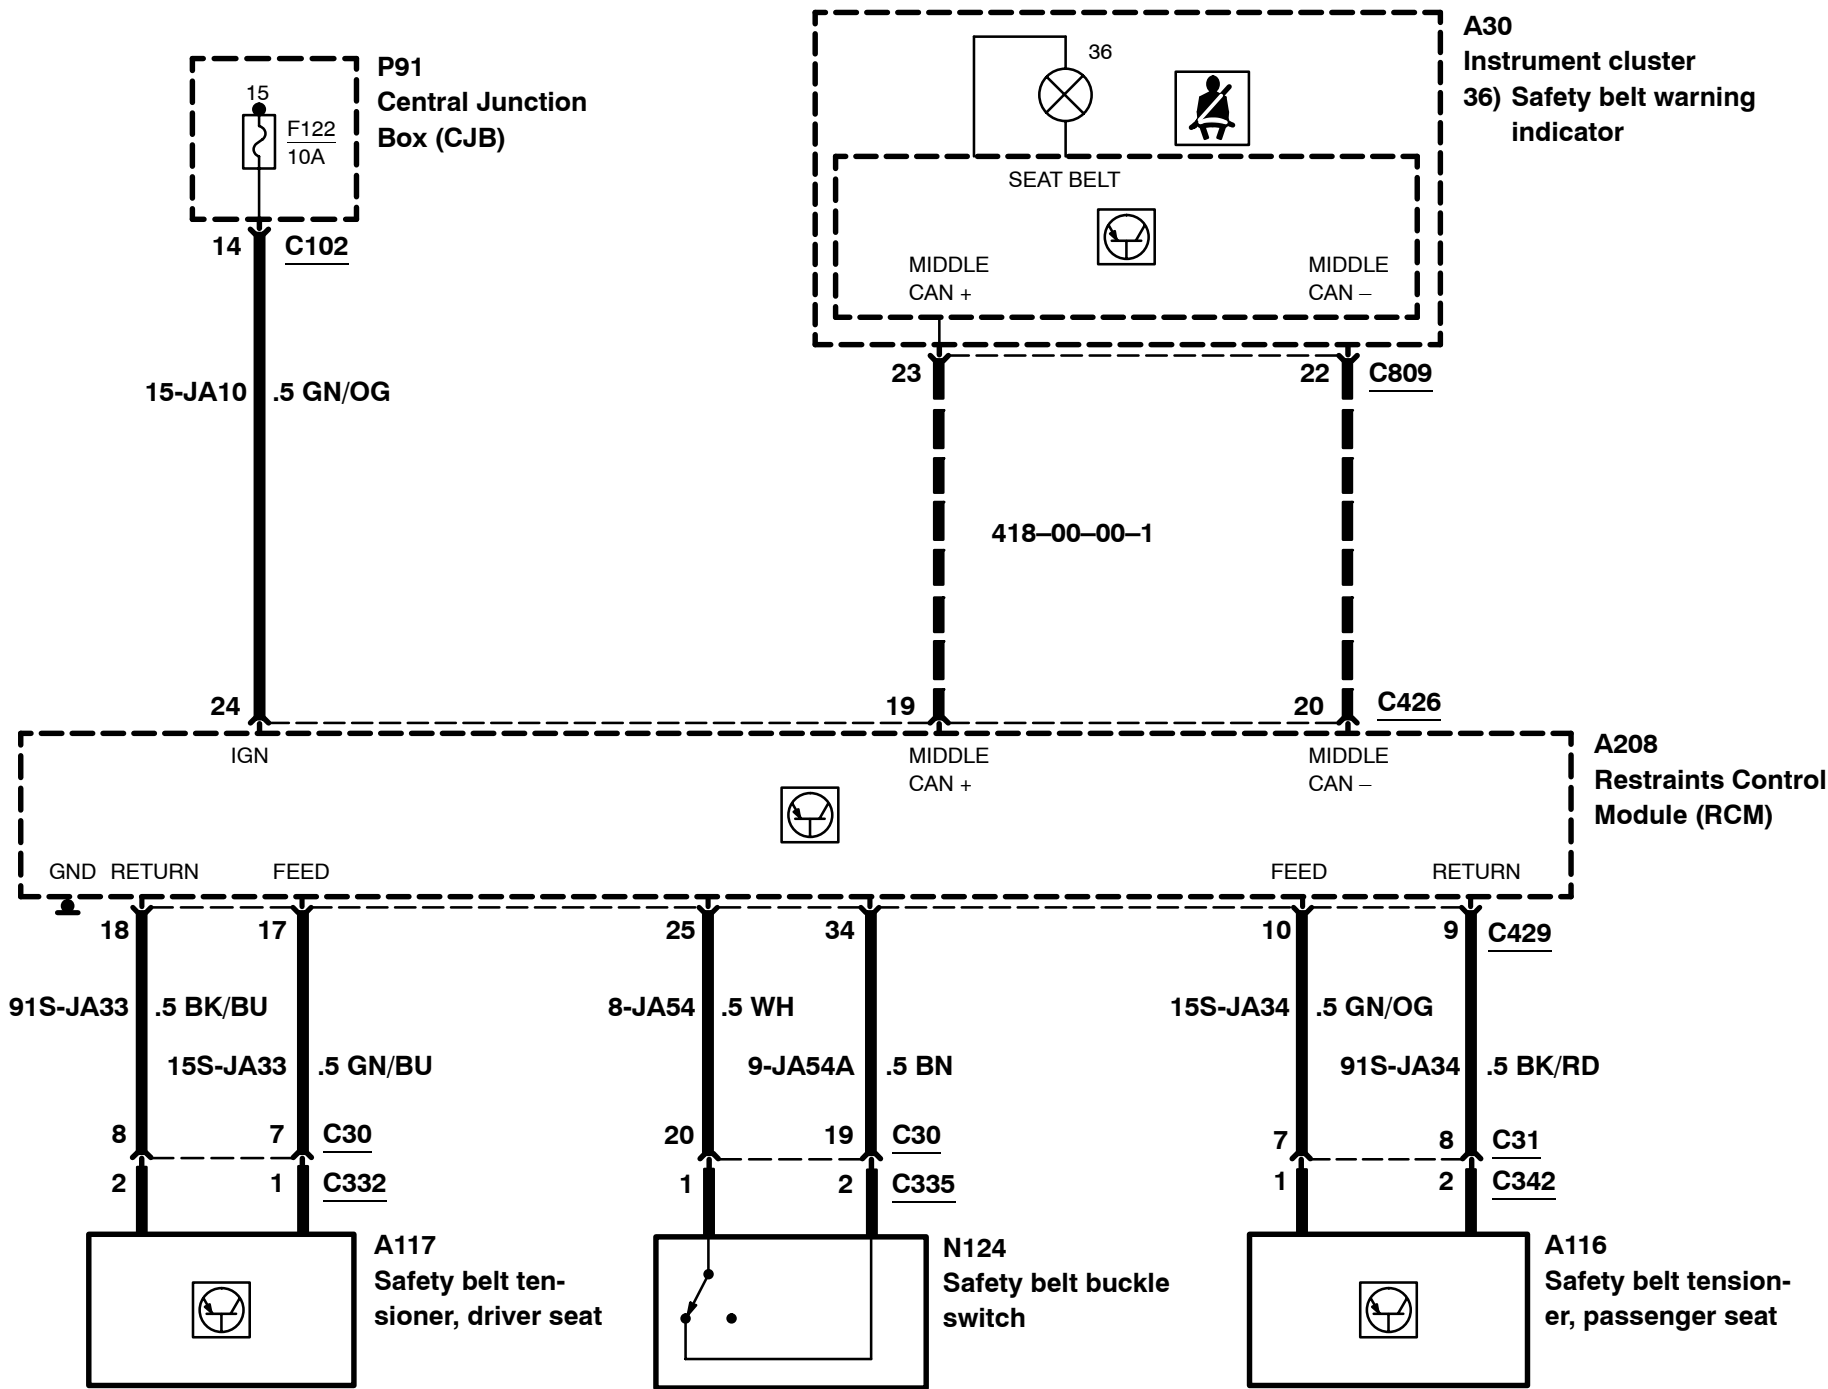




Supplemental Restraint System

02/2008  
501-20B-00-1  
2008.25  
Focus

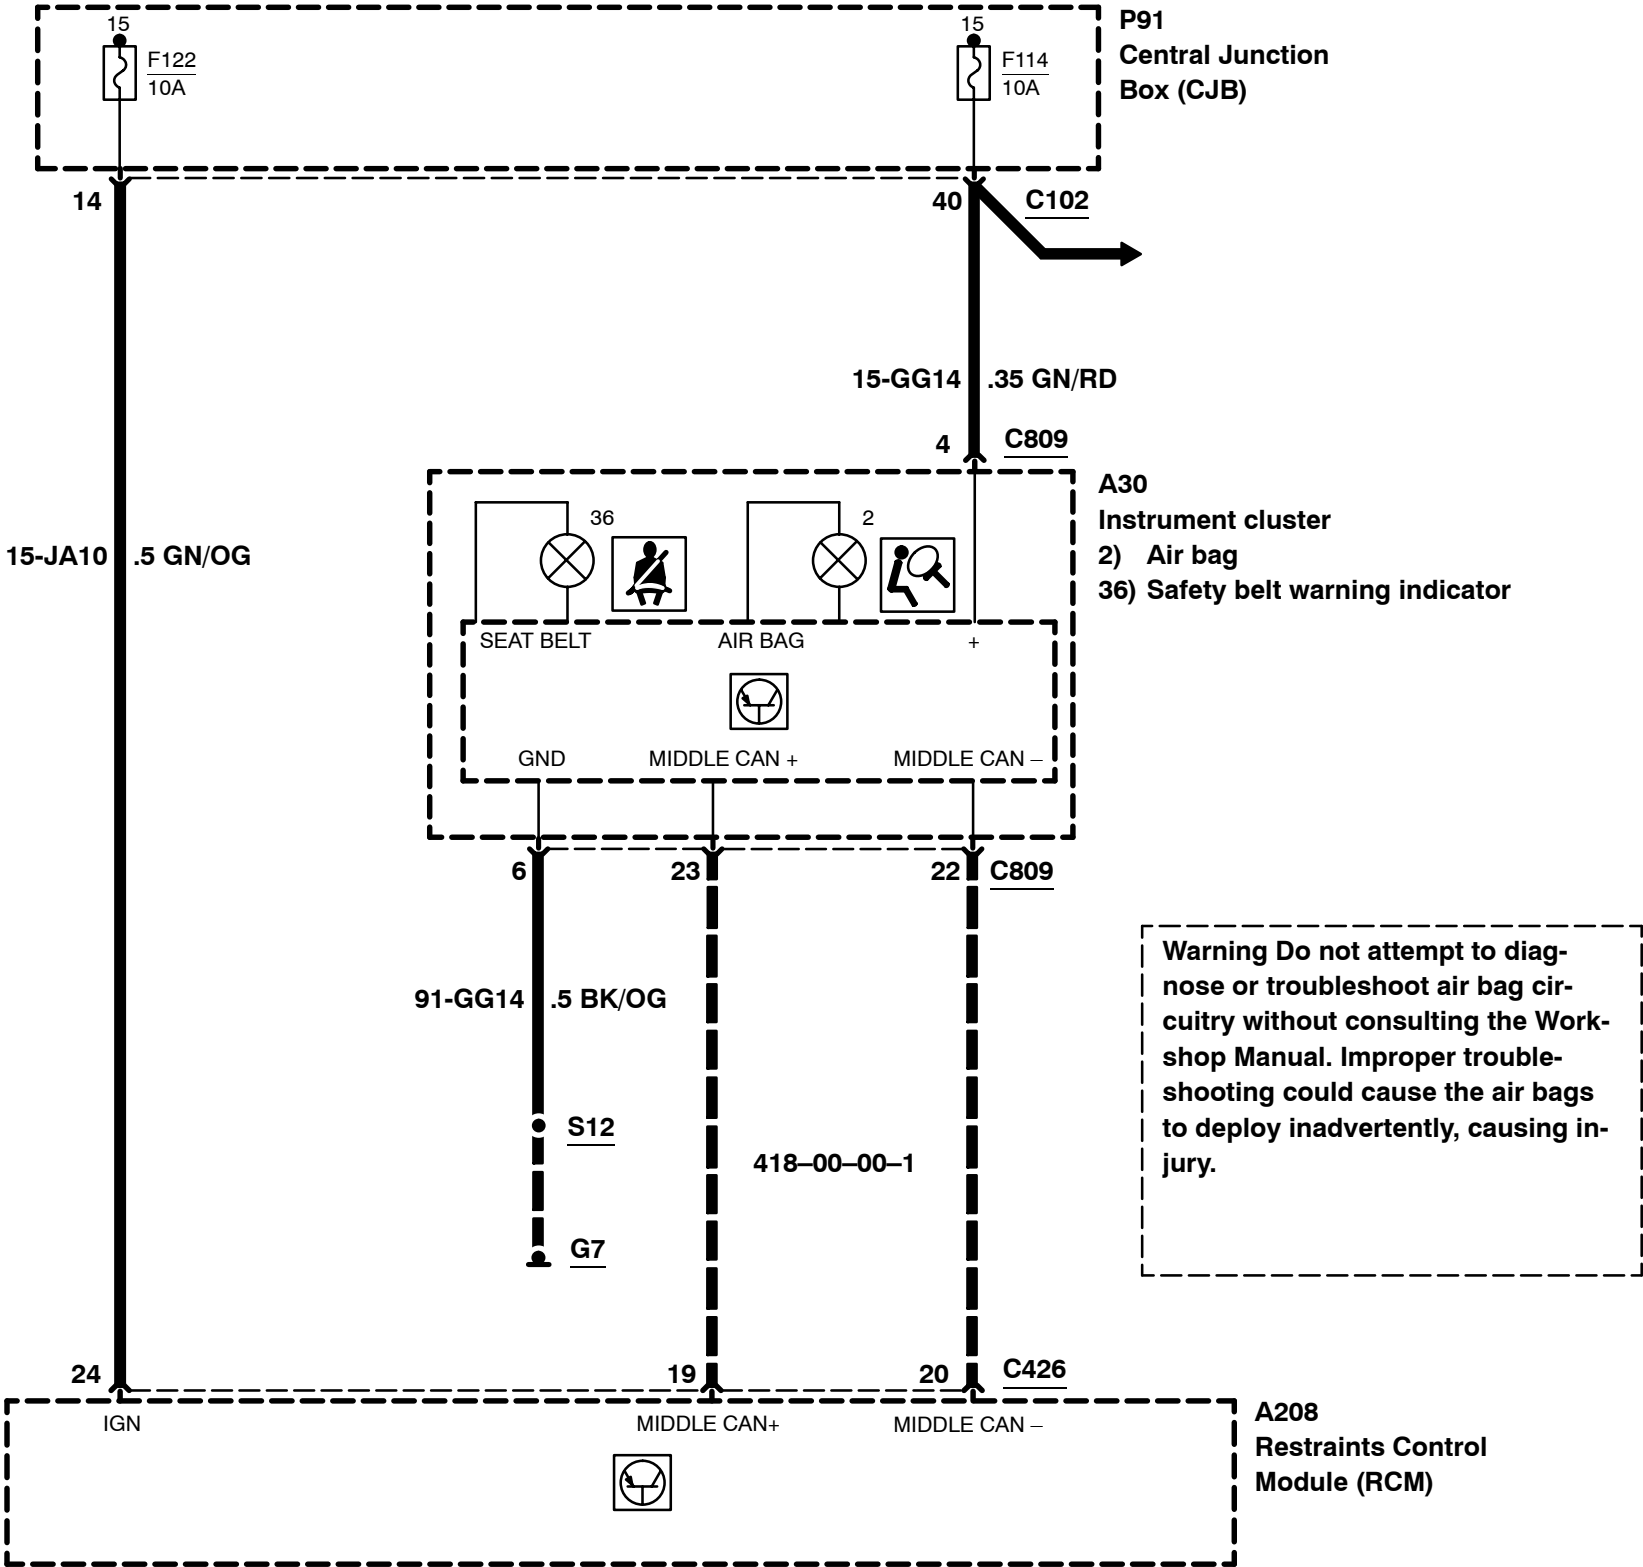

# Supplemental Restraint System


02/2008  
501-20B-00-2  
2008.25  
Focus

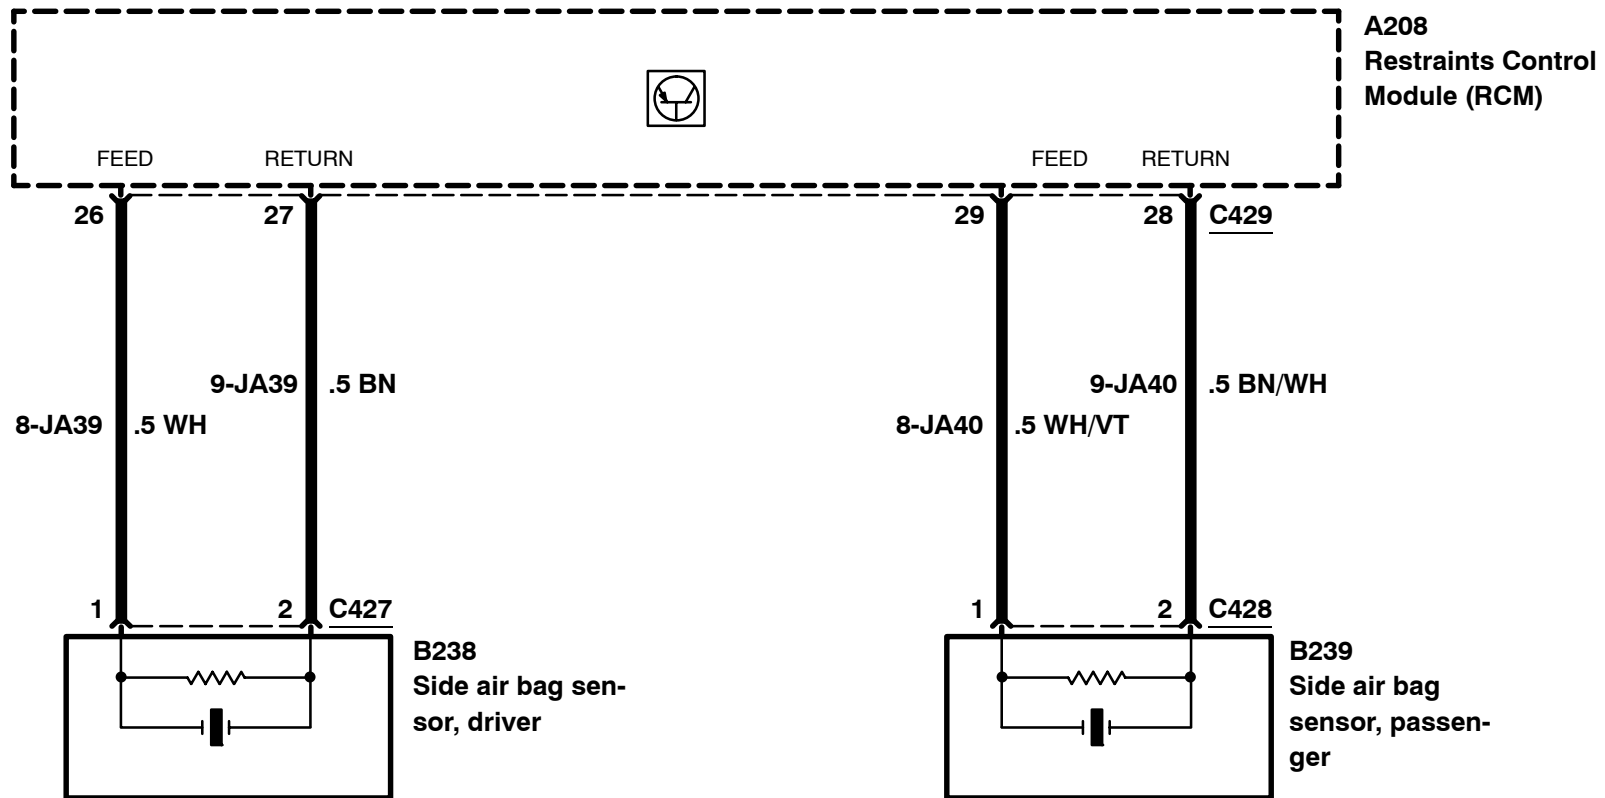




# Supplemental Restraint System – Driver air bag

02/2008  
501-20B-00-3  
2008.25  
Focus

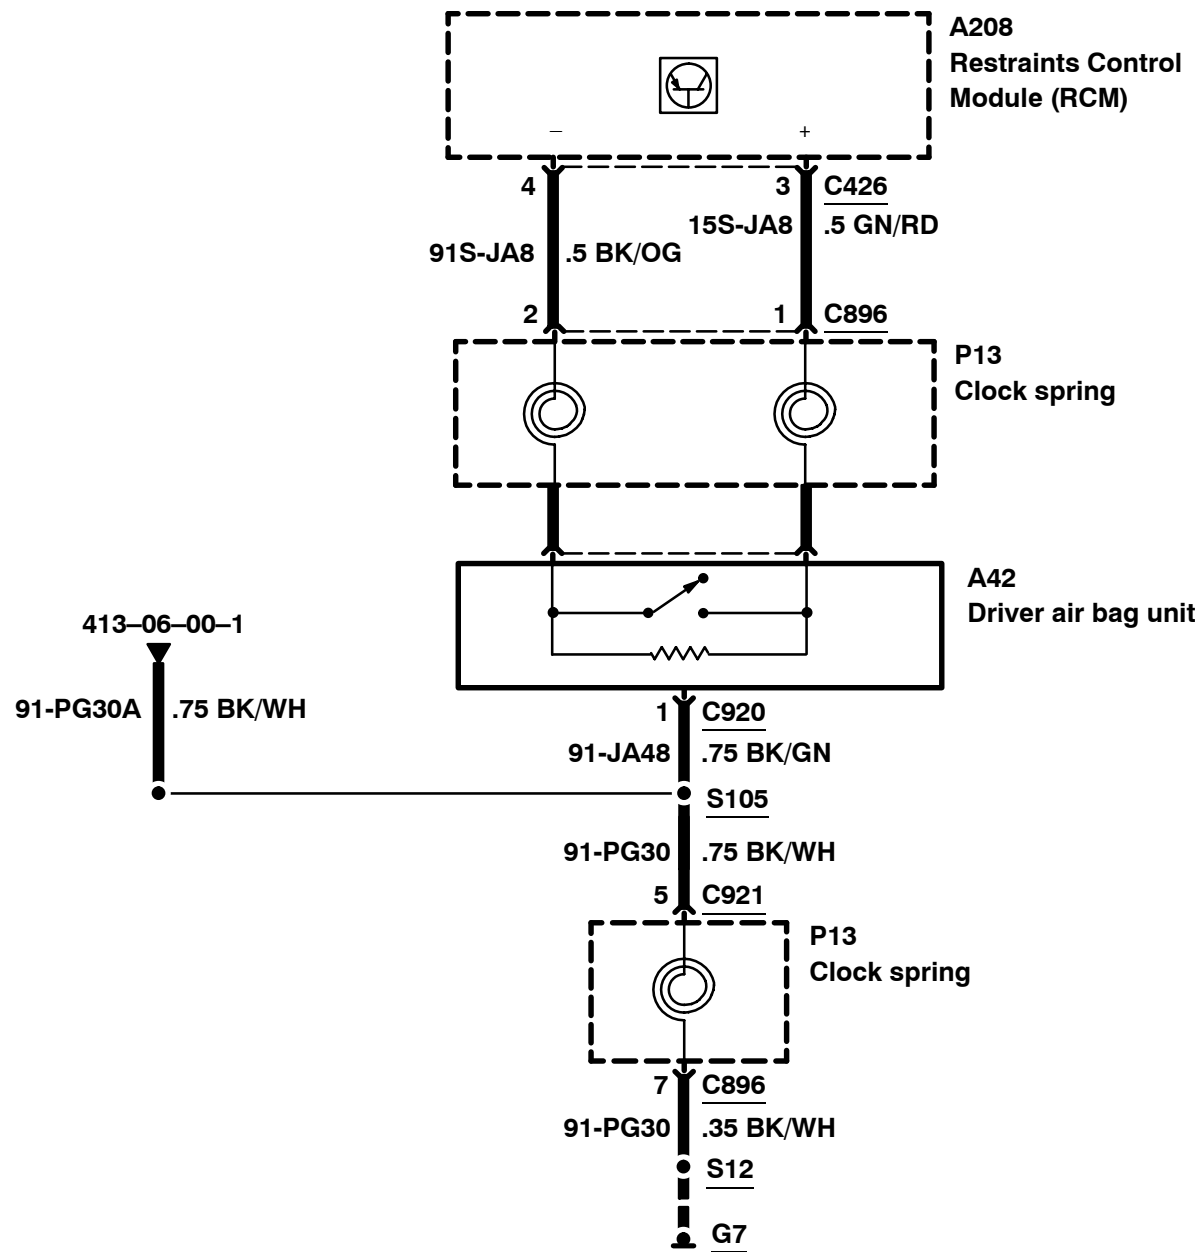


# Supplemental Restraint System – Passenger air bag

02/2008  
501-20B-00-4  
2008.25  
Focus

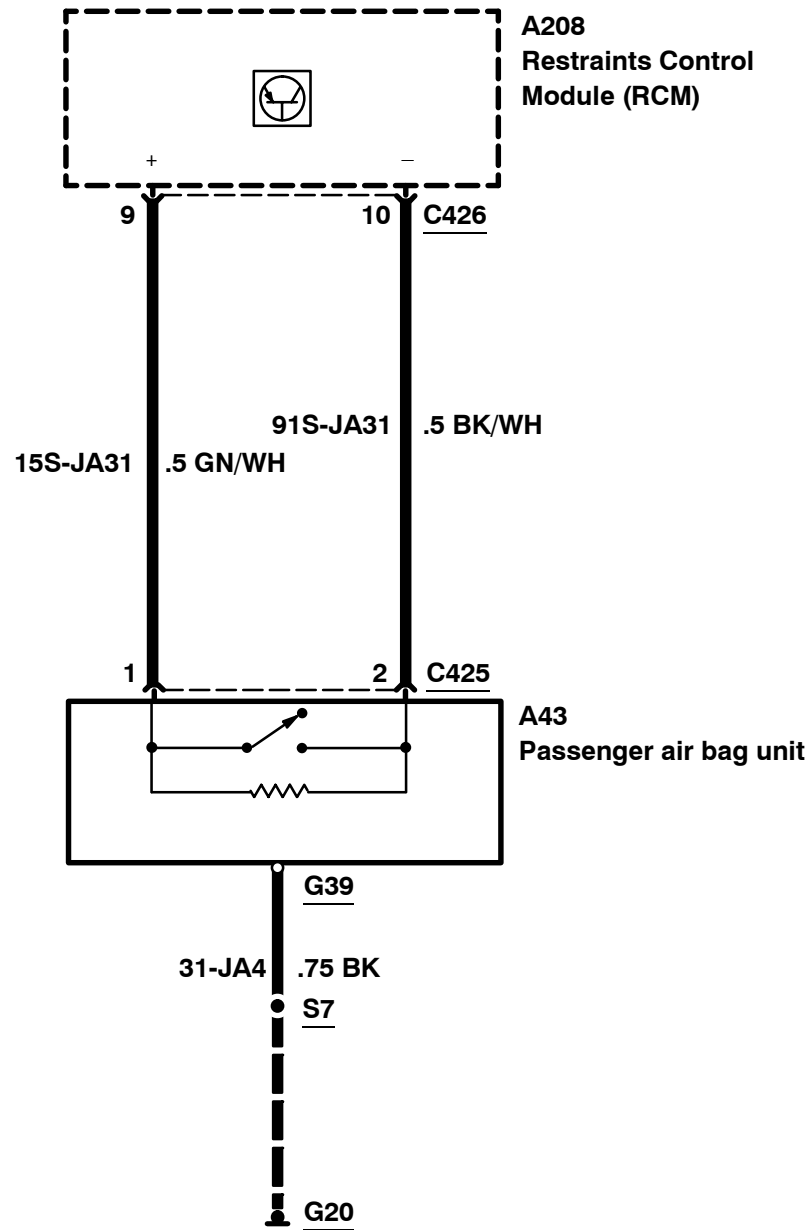


# Supplemental Restraint System – with side air bags

02/2008  
501-20B-00-5  
2008.25  
Focus

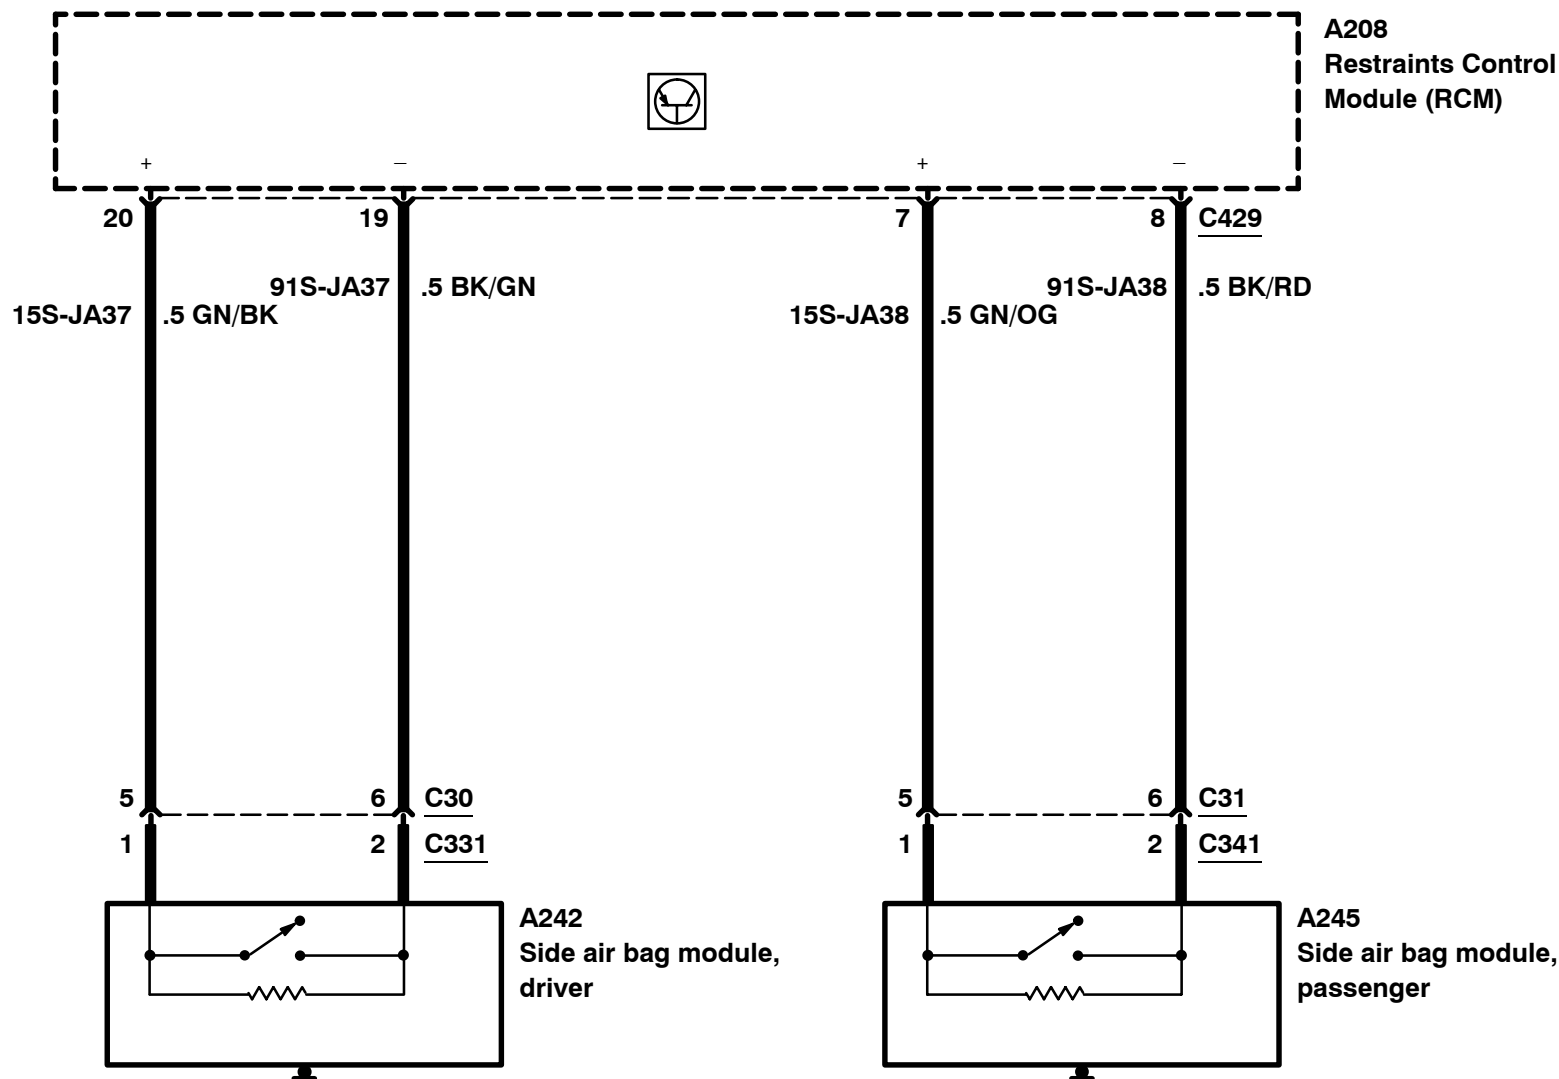


# Supplemental Restraint System – with side head air bags

02/2008  
501-20B-00-6  
2008.25  
Focus

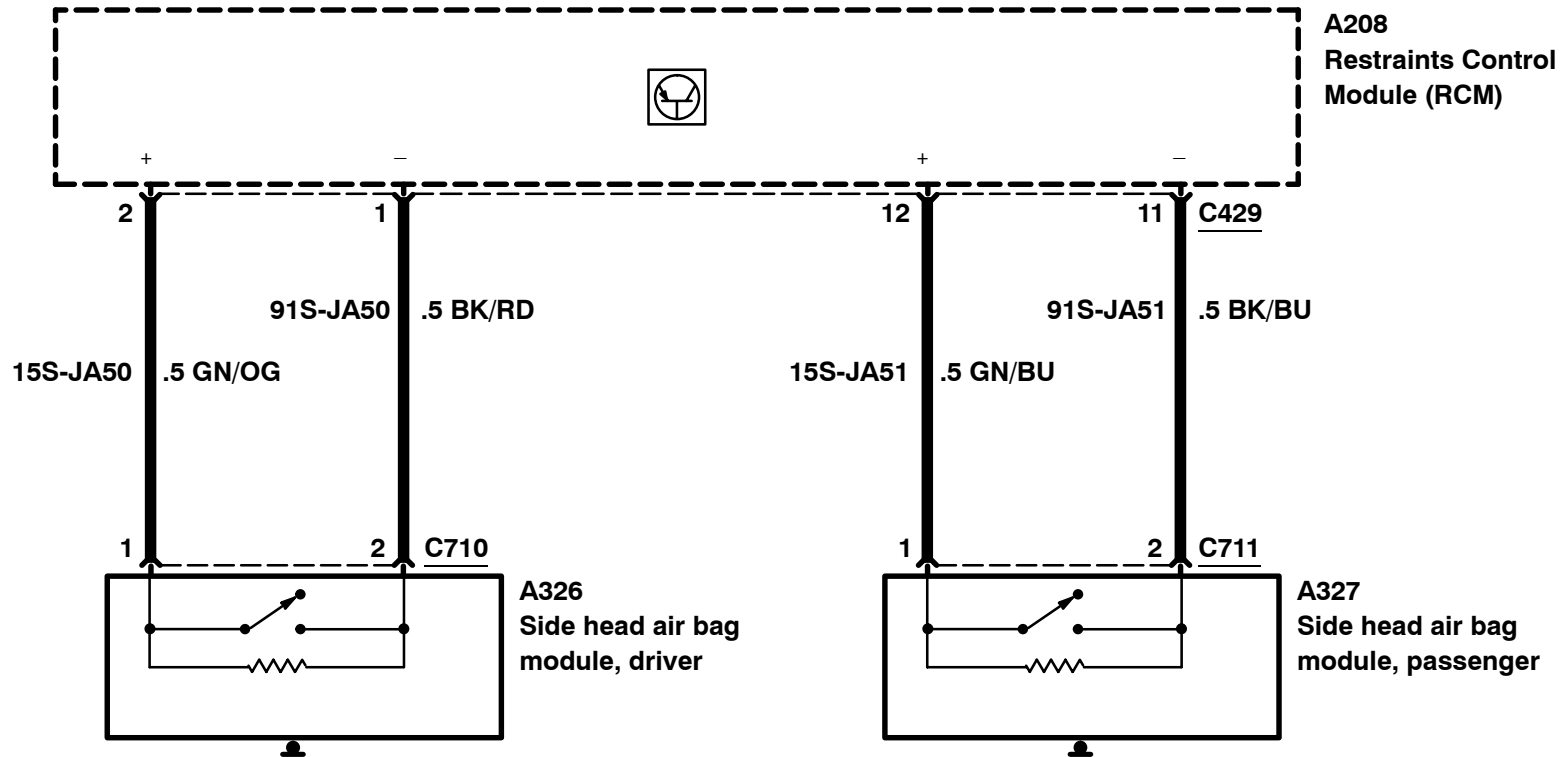


# Fuse and Relay Information – Central Junction Box (CJB), front

02/2008  
700-01-00-1  
2008.25  
Focus

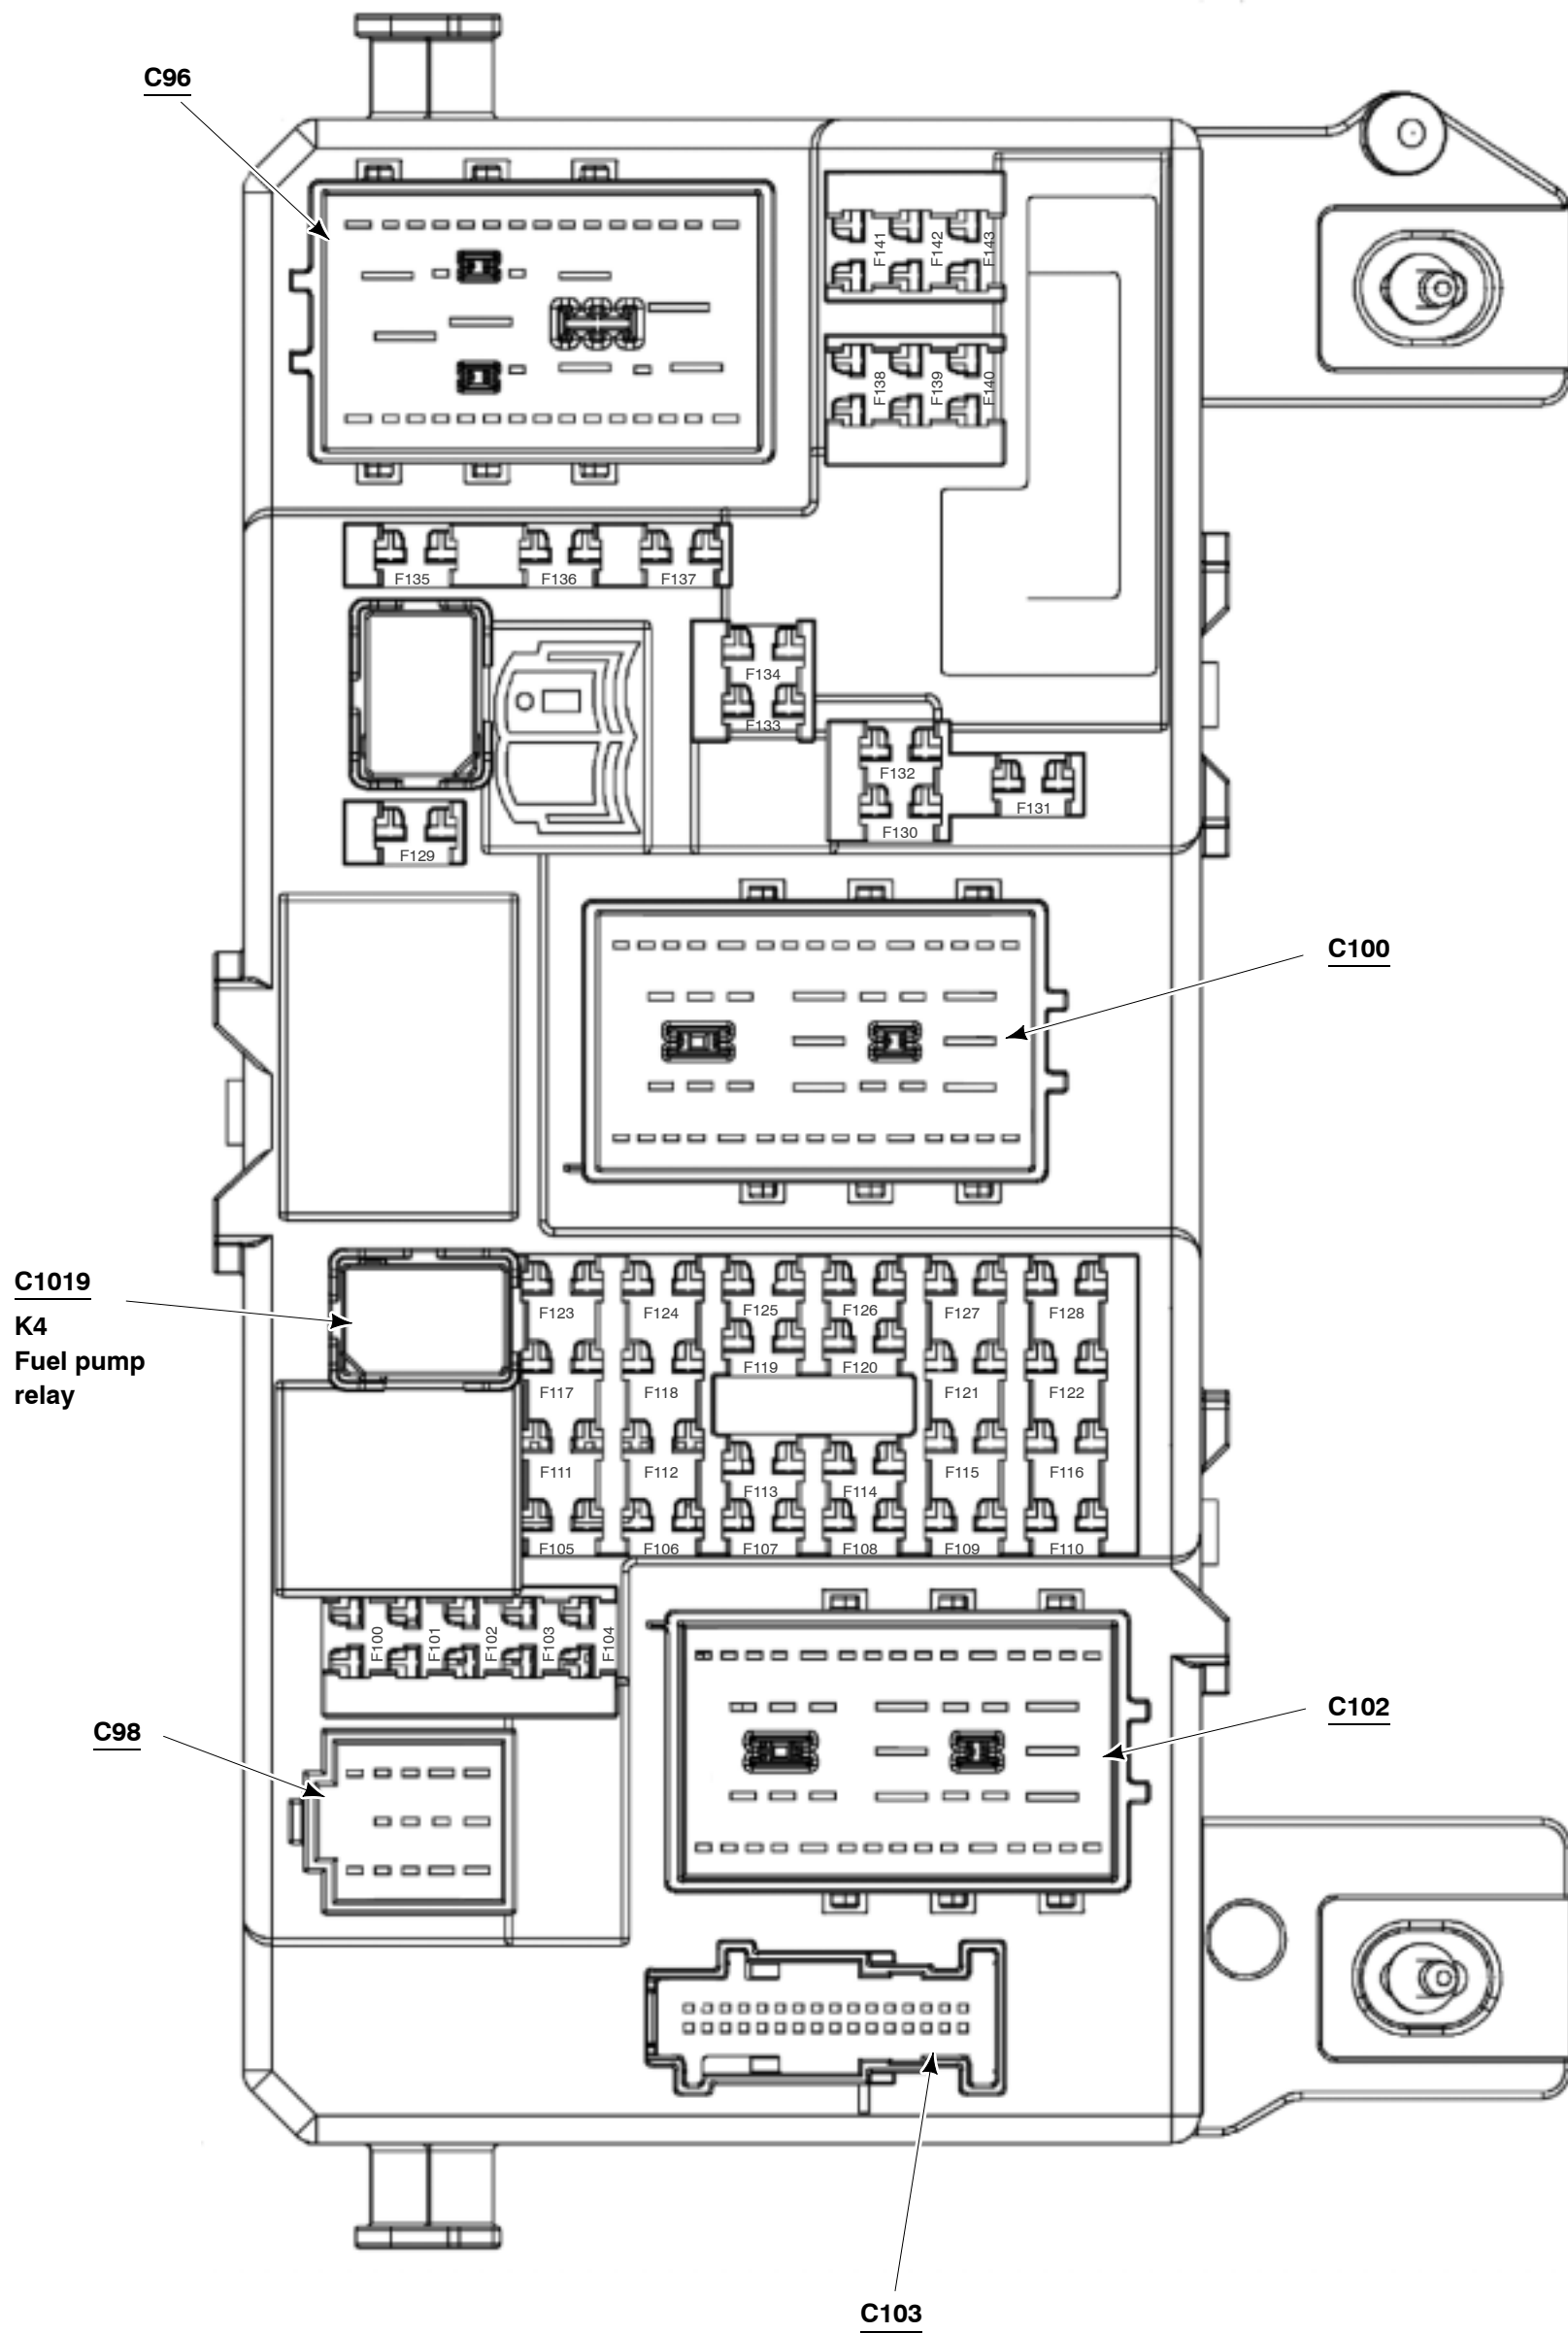


## Fuse and Relay Information – Central Junction Box (CJB), rear

02/2008  
700-01-00-2  
2008.25  
Focus

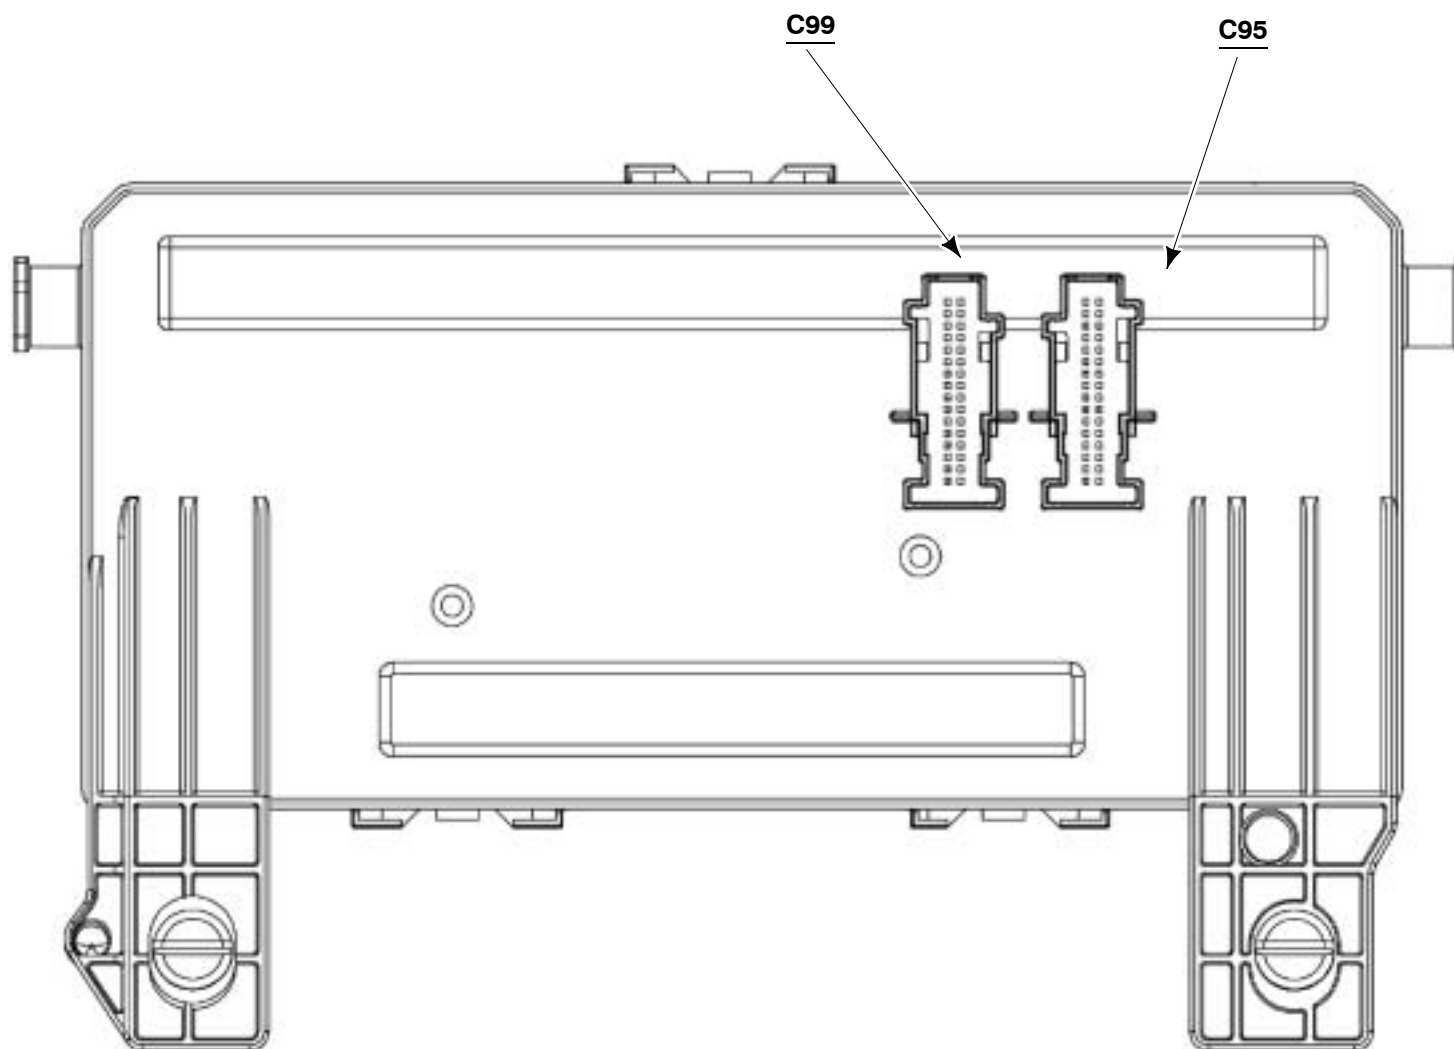

# Fuse and Relay Information – Battery Junction Box (BJB)

02/2008  
700-01-00-3  
2008.25  
Focus

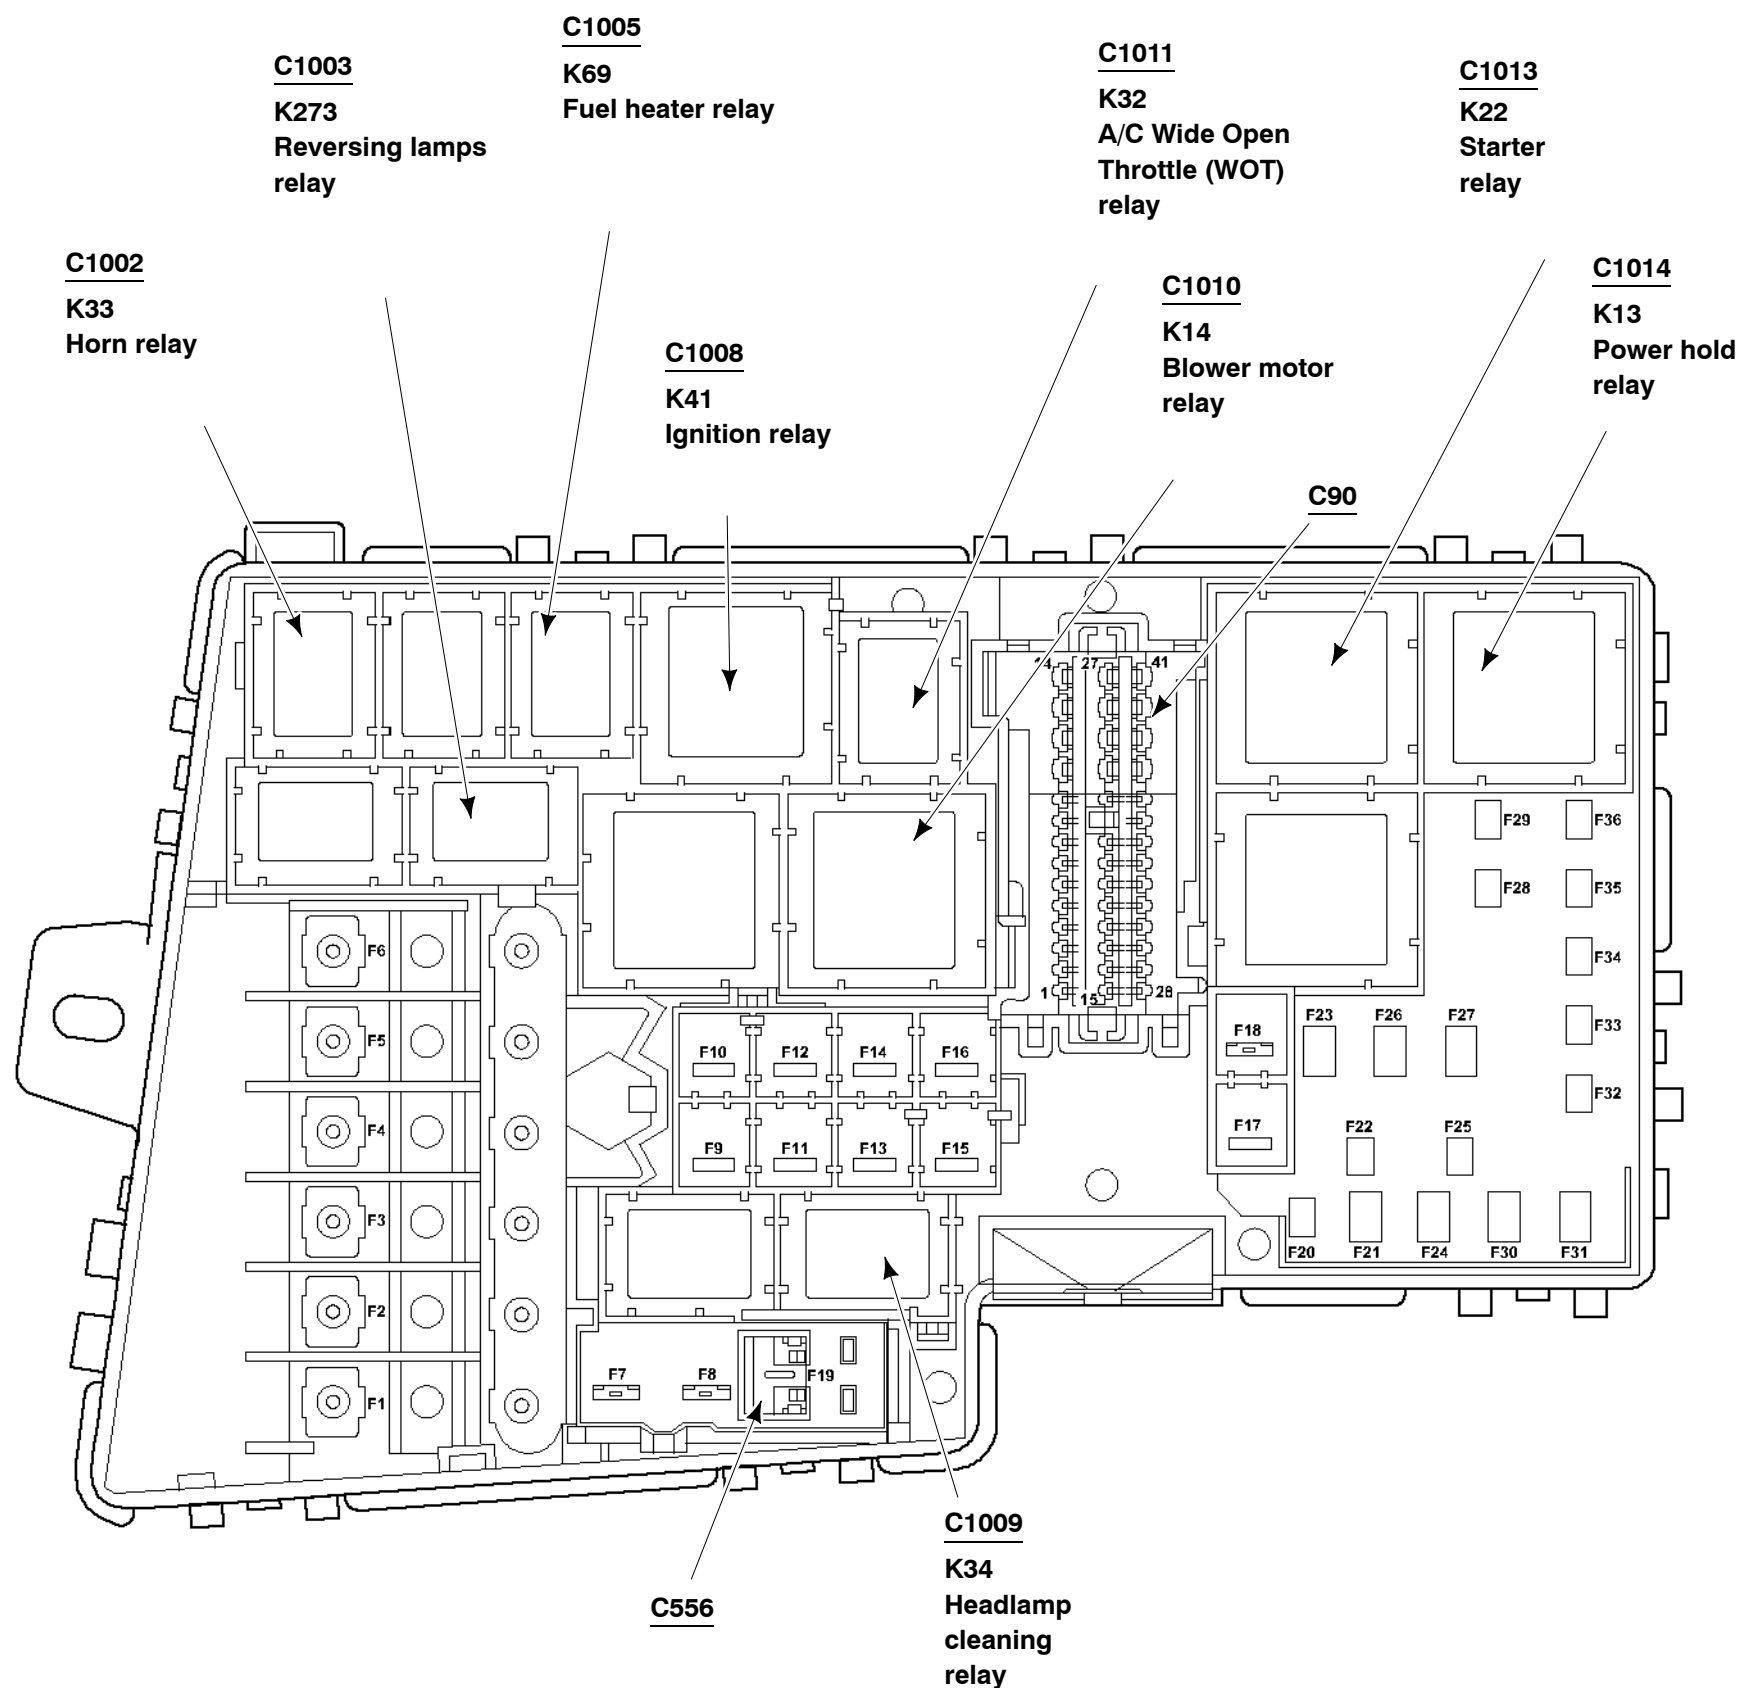

Fuse and Relay Information

02/2008  
700-01-00-4  
2008.25  
Focus

Central Junction Box (CJB)

|            |                                                             | Fuse number |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|------------|-------------------------------------------------------------|-------------|-----|-----|-----|-----|-----|-----|-----|------|-----|-----|-----|-----|-----|-----|------|-----|------|
|            |                                                             | 100         | 101 | 102 | 103 | 104 | 105 | 106 | 107 | 108  | 109 | 110 | 111 | 112 | 113 | 114 | 115  | 116 | 117  |
| Group      | Description                                                 | 10A         | 20A | 10A | 10A | 10A | 25A | 20A | 10A | 7.5A | 20A | 10A | 15A | 15A | 10A | 10A | 7.5A | 20A | 7.5A |
| 206-09A-00 | Anti–Lock Control                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 206-09C-00 | Anti–Lock Control – Stability Assist                        |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 211-02-00  | Power Steering                                              |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-03A-00 | Engine Cooling – 1.6L (Z6)                                  |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-03B-00 | Engine Cooling – 1.8/2.0L Duratec–HE (MI4)                  |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-03C-00 | Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel             |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-04A-00 | Fuel Charging and Controls – 1.6L (Z6)                      |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-04B-00 | Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)      |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-04C-00 | Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-06A-00 | Starting System – 1.6L (Z6)                                 |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-06B-00 | Starting System – 1.8/2.0L Duratec–HE (MI4)                 |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-06C-00 | Starting System – 2.0L Duratorq–TDCi (DW) Diesel            |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-07A-00 | Engine Ignition – 1.6L (Z6)                                 |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-07B-00 | Glow Plug System – 1.8/2.0L Duratec–HE (MI4)                |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-07C-00 | Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-14A-00 | Electronic Engine Controls – 1.6L (Z6)                      |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 303-14B-00 | Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)      |             |     |     |     |     |     |     |     |      |     |     | ●   |     |     |     |      |     |      |
| 303-14C-00 | Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel | ●           |     | ●   |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 307-01-00  | Automatic Transmission                                      | ●           |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 308-00-00  | Manual Transmission                                         | ●           |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 310-03-00  | Speed Control                                               |             |     |     |     |     |     |     | ●   |      |     |     |     |     |     |     |      |     |      |
| 412-02A-00 | Heating and Ventilation                                     | ●           |     | ●   |     |     |     |     | ●   |      |     |     |     |     |     |     |      |     |      |
| 412-03-00  | Air Conditioning                                            | ●           |     | ●   |     |     |     |     | ●   |      |     |     |     |     |     |     |      |     |      |
| 413-00-00  | Instrument Cluster and Panel Illumination                   | ●           |     |     | ●   |     |     | ●   |     |      |     |     |     |     |     |     | ●    |     |      |
| 413-01-00  | Instrument Cluster                                          |             |     |     | ●   |     |     |     | ●   | ●    |     |     |     |     |     | ●   |      |     |      |
| 413-06-00  | Horn                                                        |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 413-07-00  | Clock                                                       |             |     |     |     |     |     |     |     | ●    |     |     |     | ●   |     |     |      |     |      |
| 413-13-00  | Parking Aid                                                 | ●           |     | ●   |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 414-02A-00 | Generator and Regulator – 1.6L (Z6)                         |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 414-02B-00 | Generator and Regulator – 1.8/2.0L Duratec–HE (MI4)         |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 414-02C-00 | Generator and Regulator – 2.0L Duratorq–TDCi (DW) Diesel    |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 415-01-00  | Audio Unit                                                  |             |     |     |     |     |     |     |     | ●    |     |     |     | ●   |     |     |      |     |      |
| 415-03-00  | Speakers                                                    |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 417-01-00  | Exterior Lighting                                           |             |     |     | ●   |     |     | ●   |     |      |     |     |     |     |     | ●   | ●    | ●   | ●    |
| 417-02-00  | Interior Lighting                                           |             |     |     |     | ●   |     | ●   |     |      |     |     |     |     |     |     |      |     |      |
| 418-00-00  | Module Communications Network                               |             |     |     |     |     |     |     | ●   |      |     |     |     |     |     |     |      |     |      |
| 419-01A-00 | Anti–Theft – Active                                         |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 419-01B-00 | Anti–Theft – Passive                                        |             |     |     |     |     |     |     | ●   | ●    |     |     |     |     |     | ●   |      |     |      |
| 419-10-00  | Multifunction Electronic Control Modules                    |             |     |     |     |     |     |     | ●   |      |     |     | ●   |     |     | ●   |      |     | ●    |
|            |                                                             | 100         | 101 | 102 | 103 | 104 | 105 | 106 | 107 | 108  | 109 | 110 | 111 | 112 | 113 | 114 | 115  | 116 | 117  |
|            |                                                             | 10A         | 20A | 10A | 10A | 10A | 25A | 20A | 10A | 7.5A | 20A | 10A | 15A | 15A | 10A | 10A | 7.5A | 20A | 7.5A |



[illegible]

[illegible]

Fuse and Relay Information

02/2008  
700-01-00-7  
2008.25  
Focus

Central Junction Box (CJB)

|            |                                           | Fuse number |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|------------|-------------------------------------------|-------------|-----|-----|-----|-----|-----|-----|-----|------|-----|-----|-----|-----|-----|-----|------|-----|------|
|            |                                           | 100         | 101 | 102 | 103 | 104 | 105 | 106 | 107 | 108  | 109 | 110 | 111 | 112 | 113 | 114 | 115  | 116 | 117  |
|            |                                           | 10A         | 20A | 10A | 10A | 10A | 25A | 20A | 10A | 7.5A | 20A | 10A | 15A | 15A | 10A | 10A | 7.5A | 20A | 7.5A |
| Group      | Description                               |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 501-09-00  | Rear View Mirrors                         |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 501-10-00  | Seating                                   |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 501-11-00  | Glass, Frames and Mechanisms              |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 501-12-00  | Instrument Panel and Console              |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 501-14-00  | Handles, Locks, Latches and Entry Systems |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 501-16-00  | Wipers and Washers                        |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 501-17-00  | Roof Opening Panel                        |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 501-20A-00 | Safety Belt System                        |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
| 501-20B-00 | Supplemental Restraint System             |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |
|            |                                           |             |     |     |     |     |     |     |     |      |     |     |     |     |     |     |      |     |      |

Fuse and Relay Information

02/2008  
700-01-00-8  
2008.25  
Focus

Central Junction Box (CJB)

|            |                                           | Fuse number |     |     |     |     |      |      |      |     |     |     |     |     |     |     |     |     |
|------------|-------------------------------------------|-------------|-----|-----|-----|-----|------|------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
|            |                                           | 118         | 119 | 120 | 121 | 122 | 123  | 124  | 125  | 126 | 127 | 129 | 131 | 132 | 133 | 134 | 135 | 136 |
| Group      | Description                               | 20A         | 25A | 20A | 20A | 10A | 7.5A | 7.5A | 7.5A | 20A | 25A | 20A | 15A | 15A | 25A | 20A | 20A | 15A |
| 501-09-00  | Rear View Mirrors                         |             |     |     |     |     |      |      |      |     |     |     |     |     |     | ●   |     |     |
| 501-10-00  | Seating                                   |             |     |     |     |     |      |      |      |     |     |     |     |     |     |     |     |     |
| 501-11-00  | Glass, Frames and Mechanisms              | ●           |     | ●   |     |     |      |      |      |     | ●   |     |     |     | ●   | ●   |     |     |
| 501-12-00  | Instrument Panel and Console              |             |     |     |     |     |      |      |      |     |     |     |     |     |     |     |     |     |
| 501-14-00  | Handles, Locks, Latches and Entry Systems | ●           |     | ●   |     |     |      |      |      |     |     |     |     |     | ●   | ●   |     |     |
| 501-16-00  | Wipers and Washers                        |             |     |     |     |     |      |      |      |     |     | ●   | ●   |     |     |     |     | ●   |
| 501-17-00  | Roof Opening Panel                        |             |     |     |     |     |      |      |      |     |     |     |     |     |     |     |     |     |
| 501-20A-00 | Safety Belt System                        |             |     |     |     | ●   |      |      |      |     |     |     |     |     |     |     |     |     |
| 501-20B-00 | Supplemental Restraint System             |             |     |     |     | ●   |      |      |      |     |     |     |     |     |     |     |     |     |
|            |                                           | 118         | 119 | 120 | 121 | 122 | 123  | 124  | 125  | 126 | 127 | 129 | 131 | 132 | 133 | 134 | 135 | 136 |
|            |                                           | 20A         | 25A | 20A | 20A | 10A | 7.5A | 7.5A | 7.5A | 20A | 25A | 20A | 15A | 15A | 25A | 20A | 20A | 15A |

## Fuse and Relay Information

02/2008  
700-01-00-9  
2008.25  
Focus

### Central Junction Box (CJB)

[illegible]

Fuse and Relay Information

02/2008  
700-01-00-10  
2008.25  
Focus

Battery Junction Box (BJB)

|            |                                                             | Fuse number |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|------------|-------------------------------------------------------------|-------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Group      | Description                                                 | 1           | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  | 17  |
|            |                                                             | 60A         | 80A | 60A | 60A | 80A | 60A | 30A | 20A | 20A | 30A | 20A | 40A | 20A | 40A | 30A | 40A | 30A |
| 206-09A-00 | Anti-Lock Control                                           |             |     |     |     |     |     | ●   | ●   |     |     |     |     |     |     |     |     |     |
| 206-09C-00 | Anti-Lock Control – Stability Assist                        |             |     |     |     |     |     | ●   | ●   |     |     |     |     |     |     |     |     |     |
| 211-02-00  | Power Steering                                              |             | ●   |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 303-03A-00 | Engine Cooling – 1.6L (Z6)                                  | ●           |     |     |     |     |     |     |     |     |     |     |     |     |     | ●   |     |     |
| 303-03B-00 | Engine Cooling – 1.8/2.0L Duratec-HE (MI4)                  | ●           |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 303-03C-00 | Engine Cooling – 2.0L Duratorq-TDCi (DW) Diesel             | ●           |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 303-04A-00 | Fuel Charging and Controls – 1.6L (Z6)                      |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 303-04B-00 | Fuel Charging and Controls – 1.8/2.0L Duratec-HE (MI4)      |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 303-04C-00 | Fuel Charging and Controls – 2.0L Duratorq-TDCi (DW) Diesel |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 303-06A-00 | Starting System – 1.6L (Z6)                                 |             |     |     |     |     |     |     |     |     |     | ●   |     | ●   |     |     |     |     |
| 303-06B-00 | Starting System – 1.8/2.0L Duratec-HE (MI4)                 |             |     |     |     |     |     |     |     |     |     | ●   |     | ●   |     |     |     |     |
| 303-06C-00 | Starting System – 2.0L Duratorq-TDCi (DW) Diesel            |             |     |     |     |     |     |     |     |     |     | ●   |     | ●   |     |     |     |     |
| 303-07A-00 | Engine Ignition – 1.6L (Z6)                                 |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 303-07B-00 | Glow Plug System – 1.8/2.0L Duratec-HE (MI4)                |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 303-07C-00 | Glow Plug System – 2.0L Duratorq-TDCi (DW) Diesel           |             |     |     |     | ●   |     |     |     |     |     |     |     |     |     |     |     |     |
| 303-14A-00 | Electronic Engine Controls – 1.6L (Z6)                      |             |     |     |     |     |     |     |     | ●   |     | ●   |     |     |     |     |     |     |
| 303-14B-00 | Electronic Engine Controls – 1.8/2.0L Duratec-HE (MI4)      |             |     |     |     |     |     |     |     | ●   |     | ●   |     |     |     |     |     |     |
| 303-14C-00 | Electronic Engine Controls – 2.0L Duratorq-TDCi (DW) Diesel |             |     |     |     |     |     |     |     | ●   |     | ●   |     |     |     |     |     |     |
| 307-01-00  | Automatic Transmission                                      |             |     |     |     |     |     |     |     |     |     | ●   |     |     |     |     |     |     |
| 308-00-00  | Manual Transmission                                         |             |     |     |     |     |     |     |     |     |     | ●   |     |     |     |     |     |     |
| 310-03-00  | Speed Control                                               |             |     |     |     |     |     |     |     |     |     | ●   |     |     |     |     |     |     |
| 412-02A-00 | Heating and Ventilation                                     |             |     |     |     |     |     |     |     |     | ●   | ●   |     |     |     |     |     |     |
| 412-03-00  | Air Conditioning                                            |             |     |     |     |     |     |     |     |     | ●   | ●   |     |     |     |     |     |     |
| 413-00-00  | Instrument Cluster and Panel Illumination                   |             |     |     |     |     |     |     |     |     |     | ●   |     |     |     |     |     |     |
| 413-01-00  | Instrument Cluster                                          |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 413-06-00  | Horn                                                        |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 413-07-00  | Clock                                                       |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 413-13-00  | Parking Aid                                                 |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 414-02A-00 | Generator and Regulator – 1.6L (Z6)                         |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 414-02B-00 | Generator and Regulator – 1.8/2.0L Duratec-HE (MI4)         |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 414-02C-00 | Generator and Regulator – 2.0L Duratorq-TDCi (DW) Diesel    |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 415-01-00  | Audio Unit                                                  |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 415-03-00  | Speakers                                                    |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 417-01-00  | Exterior Lighting                                           |             | ●   |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 417-02-00  | Interior Lighting                                           |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 418-00-00  | Module Communications Network                               |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 419-01A-00 | Anti-Theft – Active                                         |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 419-01B-00 | Anti-Theft – Passive                                        |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 419-10-00  | Multifunction Electronic Control Modules                    |             |     |     |     |     |     |     |     |     |     | ●   |     |     |     |     |     |     |
|            |                                                             | 1           | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  | 17  |
|            |                                                             | 60A         | 80A | 60A | 60A | 80A | 60A | 30A | 20A | 20A | 30A | 20A | 40A | 20A | 40A | 30A | 40A | 30A |



Fuse and Relay Information

02/2008  
700-01-00-11  
2008.25  
Focus

Battery Junction Box (BJB)

|            |                                                             | Fuse number |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
|------------|-------------------------------------------------------------|-------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|-----|-----|-----|-----|------------|-----|
| Group      | Description                                                 | 19          | 20  | 21  | 22  | 23  | 24  | 25  | 26  | 27  | 28  | 29  | 30 | 31  | 32  | 33  | 34  | 35         | 36  |
|            |                                                             | 10A         | 15A | 20A | 10A | 30A | 15A | 10A | 10A | 10A | 10A | 10A | 3A | 10A | 10A | 10A | 10A | 10A<br>15A | 10A |
| 206-09A-00 | Anti-Lock Control                                           | ●           |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 206-09C-00 | Anti-Lock Control – Stability Assist                        | ●           |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 211-02-00  | Power Steering                                              |             |     |     | ●   |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 303-03A-00 | Engine Cooling – 1.6L (Z6)                                  |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 303-03B-00 | Engine Cooling – 1.8/2.0L Duratec-HE (M14)                  |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 303-03C-00 | Engine Cooling – 2.0L Duratorq-TDCi (DW) Diesel             |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 303-04A-00 | Fuel Charging and Controls – 1.6L (Z6)                      |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     | ●   | ●          | ●   |
| 303-04B-00 | Fuel Charging and Controls – 1.8/2.0L Duratec-HE (M14)      |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     | ●          |     |
| 303-04C-00 | Fuel Charging and Controls – 2.0L Duratorq-TDCi (DW) Diesel |             |     |     |     |     | ●   | ●   |     |     |     |     |    |     |     |     | ●   |            | ●   |
| 303-06A-00 | Starting System – 1.6L (Z6)                                 |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 303-06B-00 | Starting System – 1.8/2.0L Duratec-HE (M14)                 |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 303-06C-00 | Starting System – 2.0L Duratorq-TDCi (DW) Diesel            |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 303-07A-00 | Engine Ignition – 1.6L (Z6)                                 |             |     |     |     |     |     |     |     |     |     |     |    |     |     | ●   |     |            |     |
| 303-07B-00 | Glow Plug System – 1.8/2.0L Duratec-HE (M14)                |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     | ●   |            |     |
| 303-07C-00 | Glow Plug System – 2.0L Duratorq-TDCi (DW) Diesel           |             |     |     |     |     |     |     |     |     | ●   |     |    |     |     |     |     | ●          |     |
| 303-14A-00 | Electronic Engine Controls – 1.6L (Z6)                      |             |     |     |     |     |     |     |     |     |     |     | ●  |     |     |     | ●   | ●          | ●   |
| 303-14B-00 | Electronic Engine Controls – 1.8/2.0L Duratec-HE (M14)      |             |     |     |     |     |     |     |     |     |     |     |    |     |     | ●   |     | ●          | ●   |
| 303-14C-00 | Electronic Engine Controls – 2.0L Duratorq-TDCi (DW) Diesel |             |     |     |     |     |     |     |     |     |     |     | ●  |     |     | ●   | ●   | ●          | ●   |
| 307-01-00  | Automatic Transmission                                      |             |     |     |     |     |     |     |     |     |     |     | ●  |     | ●   |     |     |            |     |
| 308-00-00  | Manual Transmission                                         |             |     |     |     |     |     |     | ●   |     |     |     |    |     |     |     |     |            |     |
| 310-03-00  | Speed Control                                               |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 412-02A-00 | Heating and Ventilation                                     |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 412-03-00  | Air Conditioning                                            |             |     |     |     |     |     |     |     | ●   |     |     |    |     |     |     |     | ●          |     |
| 413-00-00  | Instrument Cluster and Panel Illumination                   |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 413-01-00  | Instrument Cluster                                          |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 413-06-00  | Horn                                                        |             | ●   |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 413-07-00  | Clock                                                       |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 413-13-00  | Parking Aid                                                 |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 414-02A-00 | Generator and Regulator – 1.6L (Z6)                         |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 414-02B-00 | Generator and Regulator – 1.8/2.0L Duratec-HE (M14)         |             |     |     |     |     |     |     |     |     |     |     |    | ●   |     |     |     |            |     |
| 414-02C-00 | Generator and Regulator – 2.0L Duratorq-TDCi (DW) Diesel    |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 415-01-00  | Audio Unit                                                  |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 415-03-00  | Speakers                                                    |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 417-01-00  | Exterior Lighting                                           |             |     |     |     |     |     | ●   |     |     |     |     |    |     |     |     |     |            |     |
| 417-02-00  | Interior Lighting                                           |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 418-00-00  | Module Communications Network                               |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 419-01A-00 | Anti-Theft – Active                                         |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 419-01B-00 | Anti-Theft – Passive                                        |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 419-10-00  | Multifunction Electronic Control Modules                    |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
|            |                                                             | 19          | 20  | 21  | 22  | 23  | 24  | 25  | 26  | 27  | 28  | 29  | 30 | 31  | 32  | 33  | 34  | 35         | 36  |
|            |                                                             | 10A         | 15A | 20A | 10A | 30A | 15A | 10A | 10A | 10A | 10A | 10A | 3A | 10A | 10A | 10A | 10A | 10A<br>15A | 10A |

Fuse and Relay Information

02/2008  
700-01-00-12  
2008.25  
Focus

Battery Junction Box (BJB)

| Group      | Description                               | Fuse number |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|------------|-------------------------------------------|-------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
|            |                                           | 1           | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  | 17  |
|            |                                           | 50A         | 80A | 60A | 60A | 80A | 60A | 30A | 20A | 20A | 30A | 20A | 40A | 20A | 40A | 30A | 40A | 30A |
| 501-09-00  | Rear View Mirrors                         |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 501-10-00  | Seating                                   |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 501-11-00  | Glass, Frames and Mechanisms              |             |     |     |     |     |     |     |     |     |     | ●   |     |     |     |     |     |     |
| 501-12-00  | Instrument Panel and Console              |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 501-14-00  | Handles, Locks, Latches and Entry Systems |             |     |     |     |     |     |     |     |     |     | ●   |     |     |     |     |     |     |
| 501-16-00  | Wipers and Washers                        |             |     | ●   |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 501-17-00  | Roof Opening Panel                        |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 501-20A-00 | Safety Belt System                        |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 501-20B-00 | Supplemental Restraint System             |             |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|            |                                           | 1           | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  | 17  |
|            |                                           | 50A         | 80A | 60A | 60A | 80A | 60A | 30A | 20A | 20A | 30A | 20A | 40A | 20A | 40A | 30A | 40A | 30A |



Fuse and Relay Information

02/2008  
700-01-00-13  
2008.25  
Focus

Battery Junction Box (BJB)

|            |                                           | Fuse number |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
|------------|-------------------------------------------|-------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|-----|-----|-----|-----|------------|-----|
| Group      | Description                               | 19          | 20  | 21  | 22  | 23  | 24  | 25  | 26  | 27  | 28  | 29  | 30 | 31  | 32  | 33  | 34  | 35         | 36  |
|            |                                           | 10A         | 15A | 20A | 10A | 30A | 15A | 10A | 10A | 10A | 10A | 10A | 3A | 10A | 10A | 10A | 10A | 10A<br>15A | 10A |
| 501-09-00  | Rear View Mirrors                         |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 501-10-00  | Seating                                   |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 501-11-00  | Glass, Frames and Mechanisms              |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 501-12-00  | Instrument Panel and Console              |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 501-14-00  | Handles, Locks, Latches and Entry Systems |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 501-16-00  | Wipers and Washers                        |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 501-17-00  | Roof Opening Panel                        |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 501-20A-00 | Safety Belt System                        |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
| 501-20B-00 | Supplemental Restraint System             |             |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |            |     |
|            |                                           | 19          | 20  | 21  | 22  | 23  | 24  | 25  | 26  | 27  | 28  | 29  | 30 | 31  | 32  | 33  | 34  | 35         | 36  |
|            |                                           | 10A         | 15A | 20A | 10A | 30A | 15A | 10A | 10A | 10A | 10A | 10A | 3A | 10A | 10A | 10A | 10A | 10A<br>15A | 10A |

Fuse and Relay Information

02/2008  
700-01-00-14  
2008.25  
Focus

Auxiliary fuses

|            |                                                             | Fuse number |  |
|------------|-------------------------------------------------------------|-------------|--|
|            |                                                             | 1000        |  |
| Group      | Description                                                 | 150A        |  |
| 206-09A-00 | Anti-Lock Control                                           |             |  |
| 206-09C-00 | Anti-Lock Control – Stability Assist                        |             |  |
| 211-02-00  | Power Steering                                              |             |  |
| 303-03A-00 | Engine Cooling – 1.6L (Z6)                                  |             |  |
| 303-03B-00 | Engine Cooling – 1.8/2.0L Duratec-HE (MI4)                  |             |  |
| 303-03C-00 | Engine Cooling – 2.0L Duratorq-TDCi (DW) Diesel             |             |  |
| 303-04A-00 | Fuel Charging and Controls – 1.6L (Z6)                      |             |  |
| 303-04B-00 | Fuel Charging and Controls – 1.8/2.0L Duratec-HE (MI4)      |             |  |
| 303-04C-00 | Fuel Charging and Controls – 2.0L Duratorq-TDCi (DW) Diesel |             |  |
| 303-06A-00 | Starting System – 1.6L (Z6)                                 | ●           |  |
| 303-06B-00 | Starting System – 1.8/2.0L Duratec-HE (MI4)                 | ●           |  |
| 303-06C-00 | Starting System – 2.0L Duratorq-TDCi (DW) Diesel            | ●           |  |
| 303-07A-00 | Engine Ignition – 1.6L (Z6)                                 |             |  |
| 303-07B-00 | Glow Plug System – 1.8/2.0L Duratec-HE (MI4)                |             |  |
| 303-07C-00 | Glow Plug System – 2.0L Duratorq-TDCi (DW) Diesel           |             |  |
| 303-14A-00 | Electronic Engine Controls – 1.6L (Z6)                      |             |  |
| 303-14B-00 | Electronic Engine Controls – 1.8/2.0L Duratec-HE (MI4)      |             |  |
| 303-14C-00 | Electronic Engine Controls – 2.0L Duratorq-TDCi (DW) Diesel |             |  |
| 307-01-00  | Automatic Transmission                                      |             |  |
| 308-00-00  | Manual Transmission                                         |             |  |
| 310-03-00  | Speed Control                                               |             |  |
| 412-02A-00 | Heating and Ventilation                                     |             |  |
| 412-03-00  | Air Conditioning                                            |             |  |
| 413-00-00  | Instrument Cluster and Panel Illumination                   |             |  |
| 413-01-00  | Instrument Cluster                                          |             |  |
| 413-06-00  | Horn                                                        |             |  |
| 413-07-00  | Clock                                                       |             |  |
| 413-13-00  | Parking Aid                                                 |             |  |
| 414-02A-00 | Generator and Regulator – 1.6L (Z6)                         | ●           |  |
| 414-02B-00 | Generator and Regulator – 1.8/2.0L Duratec-HE (MI4)         | ●           |  |
| 414-02C-00 | Generator and Regulator – 2.0L Duratorq-TDCi (DW) Diesel    | ●           |  |
| 415-01-00  | Audio Unit                                                  |             |  |
| 415-03-00  | Speakers                                                    |             |  |
| 417-01-00  | Exterior Lighting                                           |             |  |
| 417-02-00  | Interior Lighting                                           |             |  |
| 418-00-00  | Module Communications Network                               |             |  |
| 419-01A-00 | Anti-Theft – Active                                         |             |  |
| 419-01B-00 | Anti-Theft – Passive                                        |             |  |
| 419-10-00  | Multifunction Electronic Control Modules                    |             |  |
|            |                                                             | 1000        |  |
|            |                                                             | 150A        |  |

Fuse and Relay Information


02/2008  
700-01-00-15  
2008.25  
Focus

Auxiliary fuses

|            |                                           | Fuse number |  |
|------------|-------------------------------------------|-------------|--|
|            |                                           | 1000        |  |
| Group      | Description                               | 150A        |  |
| 501-09-00  | Rear View Mirrors                         |             |  |
| 501-10-00  | Seating                                   |             |  |
| 501-11-00  | Glass, Frames and Mechanisms              |             |  |
| 501-12-00  | Instrument Panel and Console              |             |  |
| 501-14-00  | Handles, Locks, Latches and Entry Systems |             |  |
| 501-16-00  | Wipers and Washers                        |             |  |
| 501-17-00  | Roof Opening Panel                        |             |  |
| 501-20A-00 | Safety Belt System                        |             |  |
| 501-20B-00 | Supplemental Restraint System             |             |  |
|            |                                           | 1000        |  |
|            |                                           | 150A        |  |


# Power Distribution

02/2008  
700-02-00-1  
2008.25  
Focus

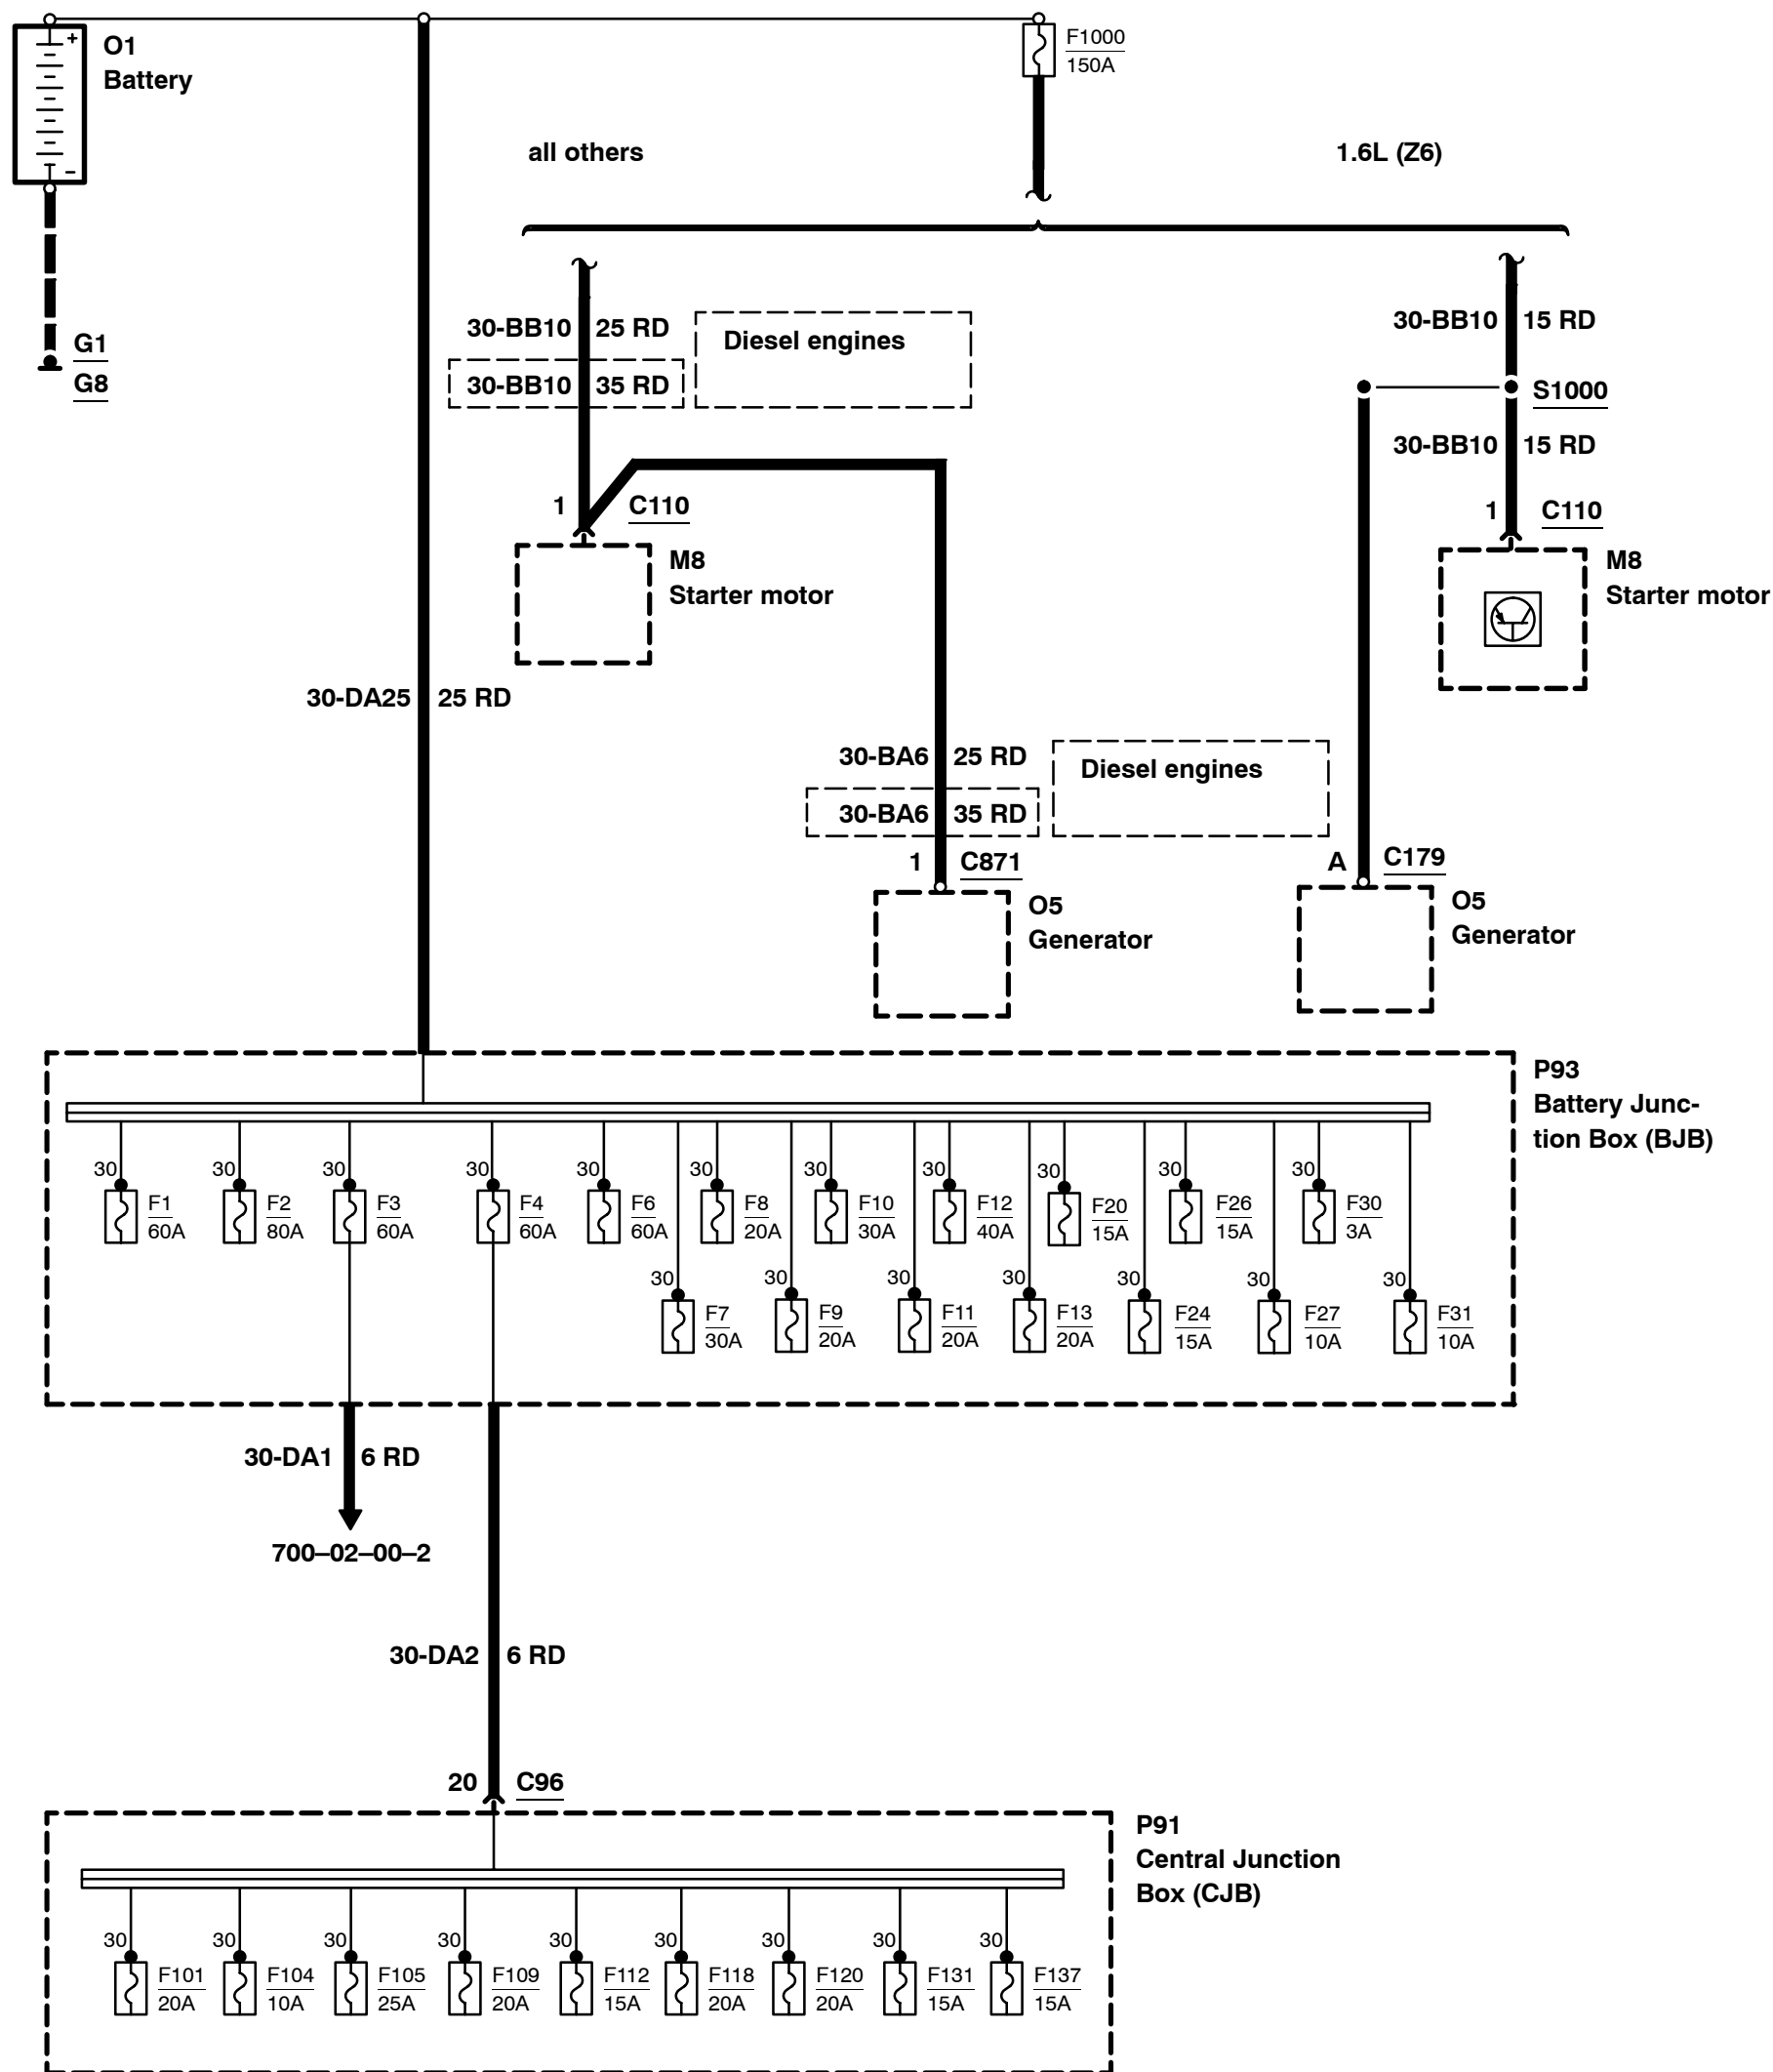


# Power Distribution

02/2008  
700-02-00-2  
2008.25  
Focus

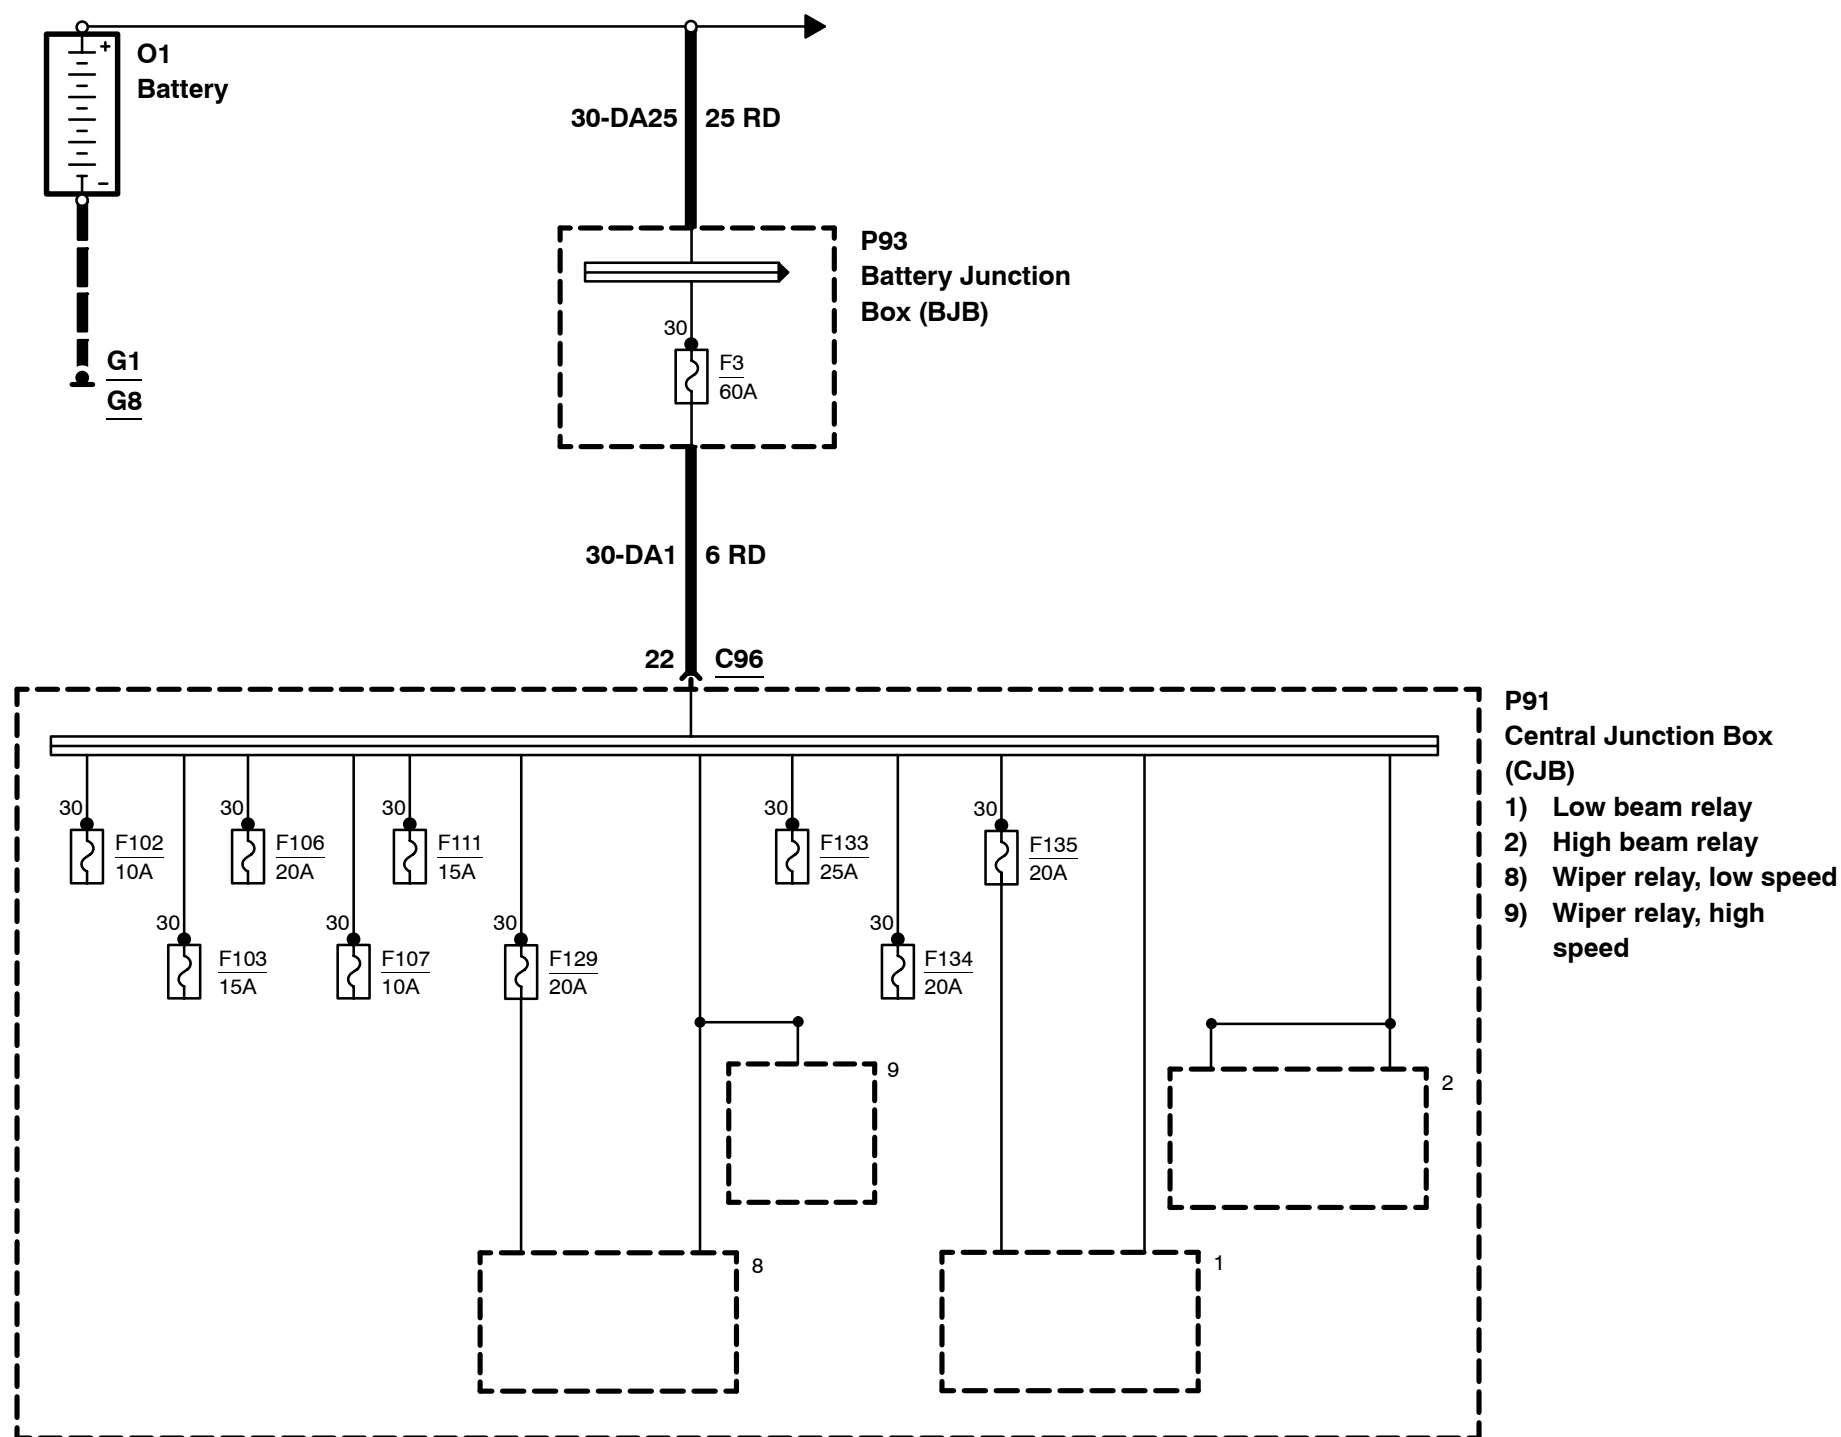



# Power Distribution – Ignition switch, manual transmission

02/2008  
700-02-00-3  
2008.25  
Focus

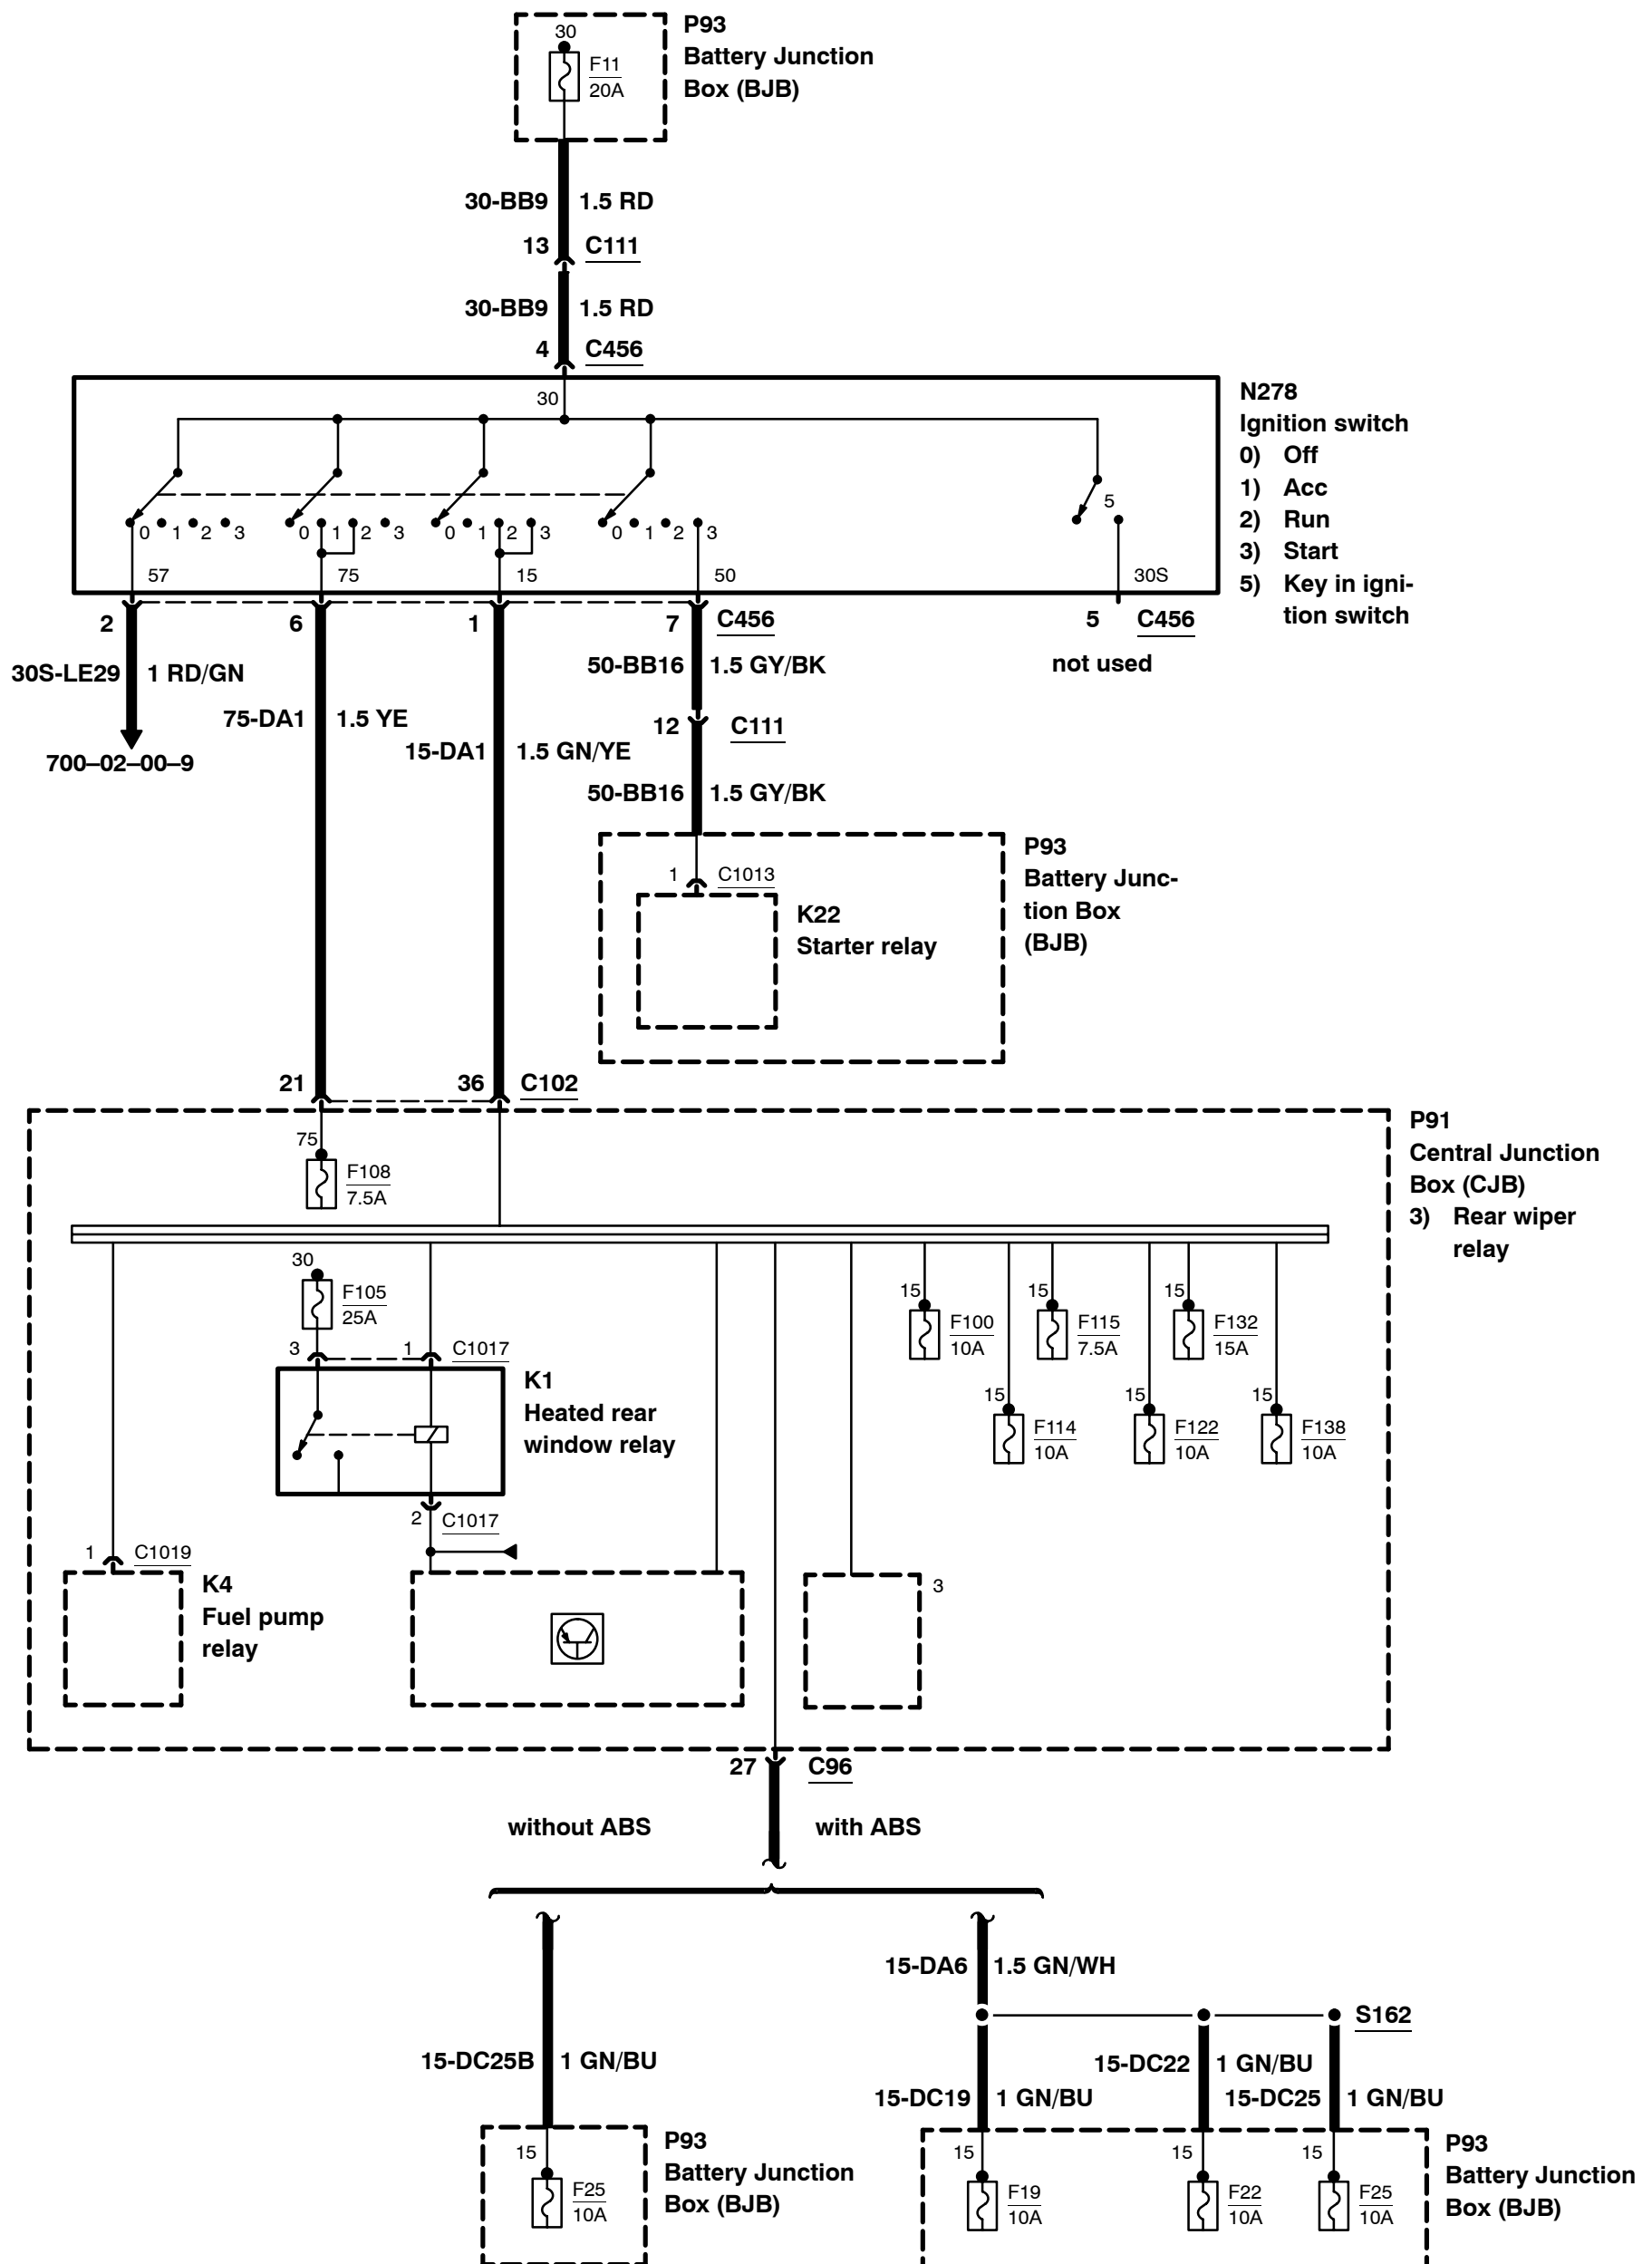



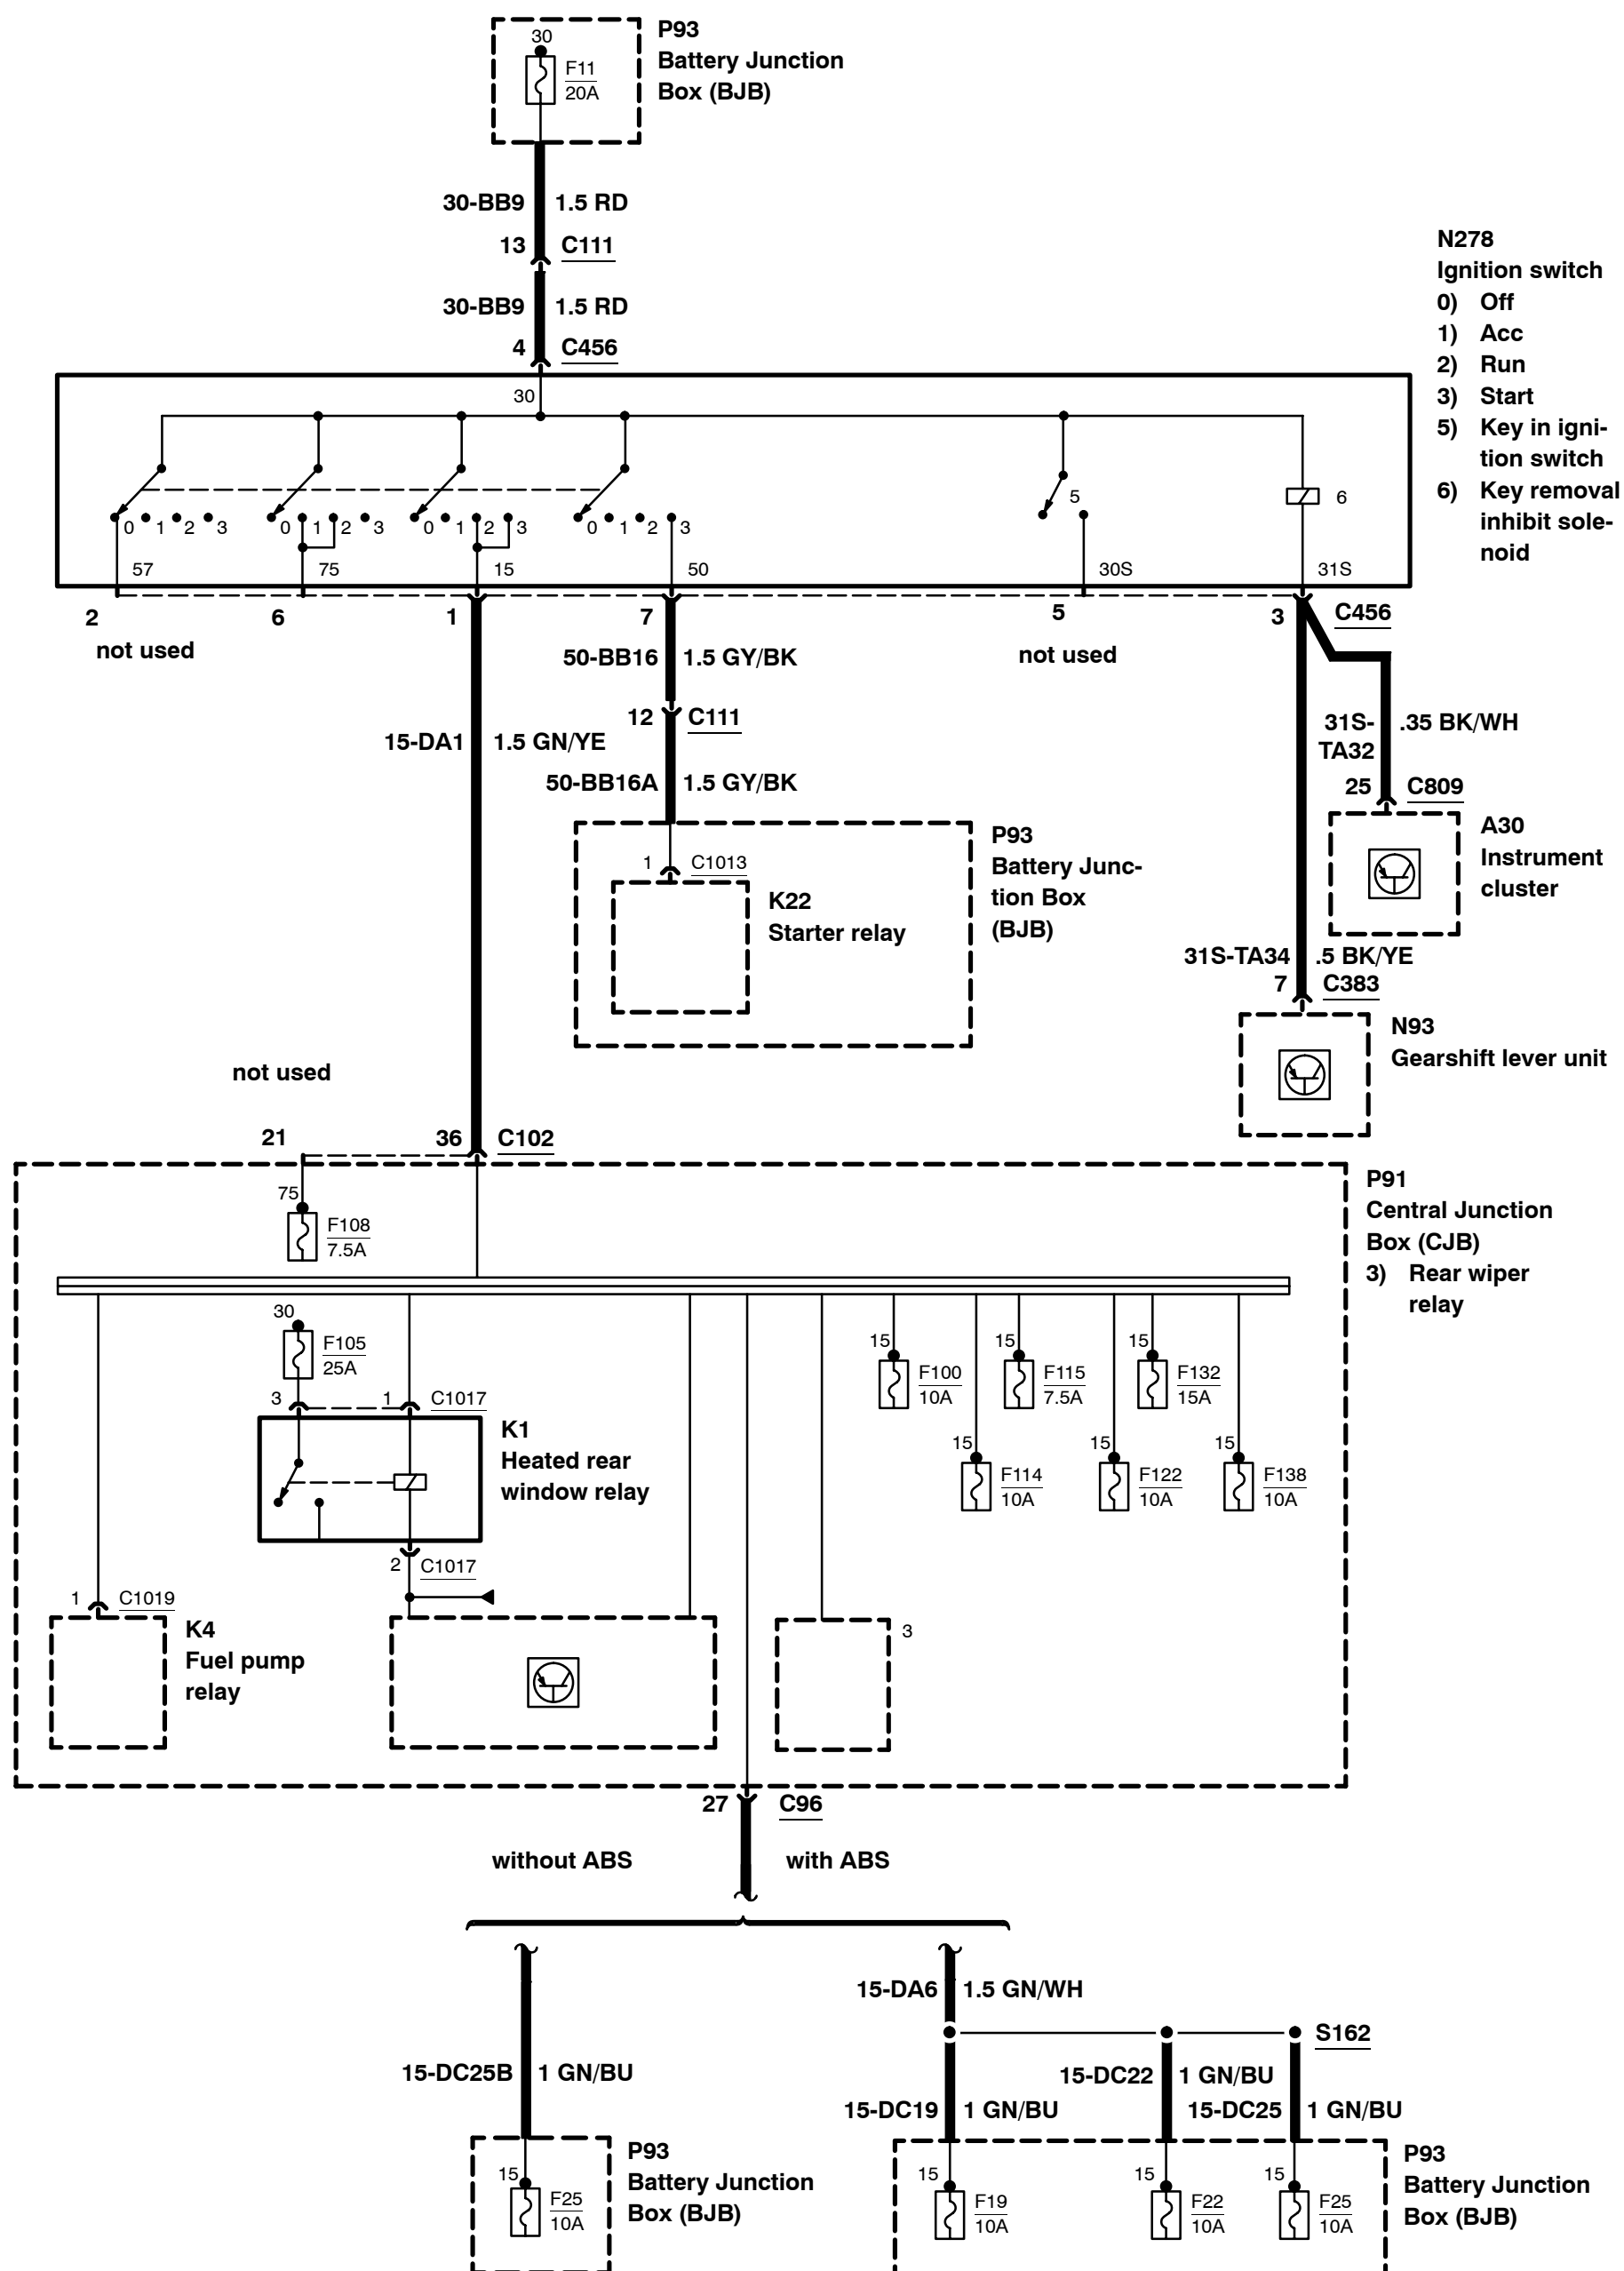


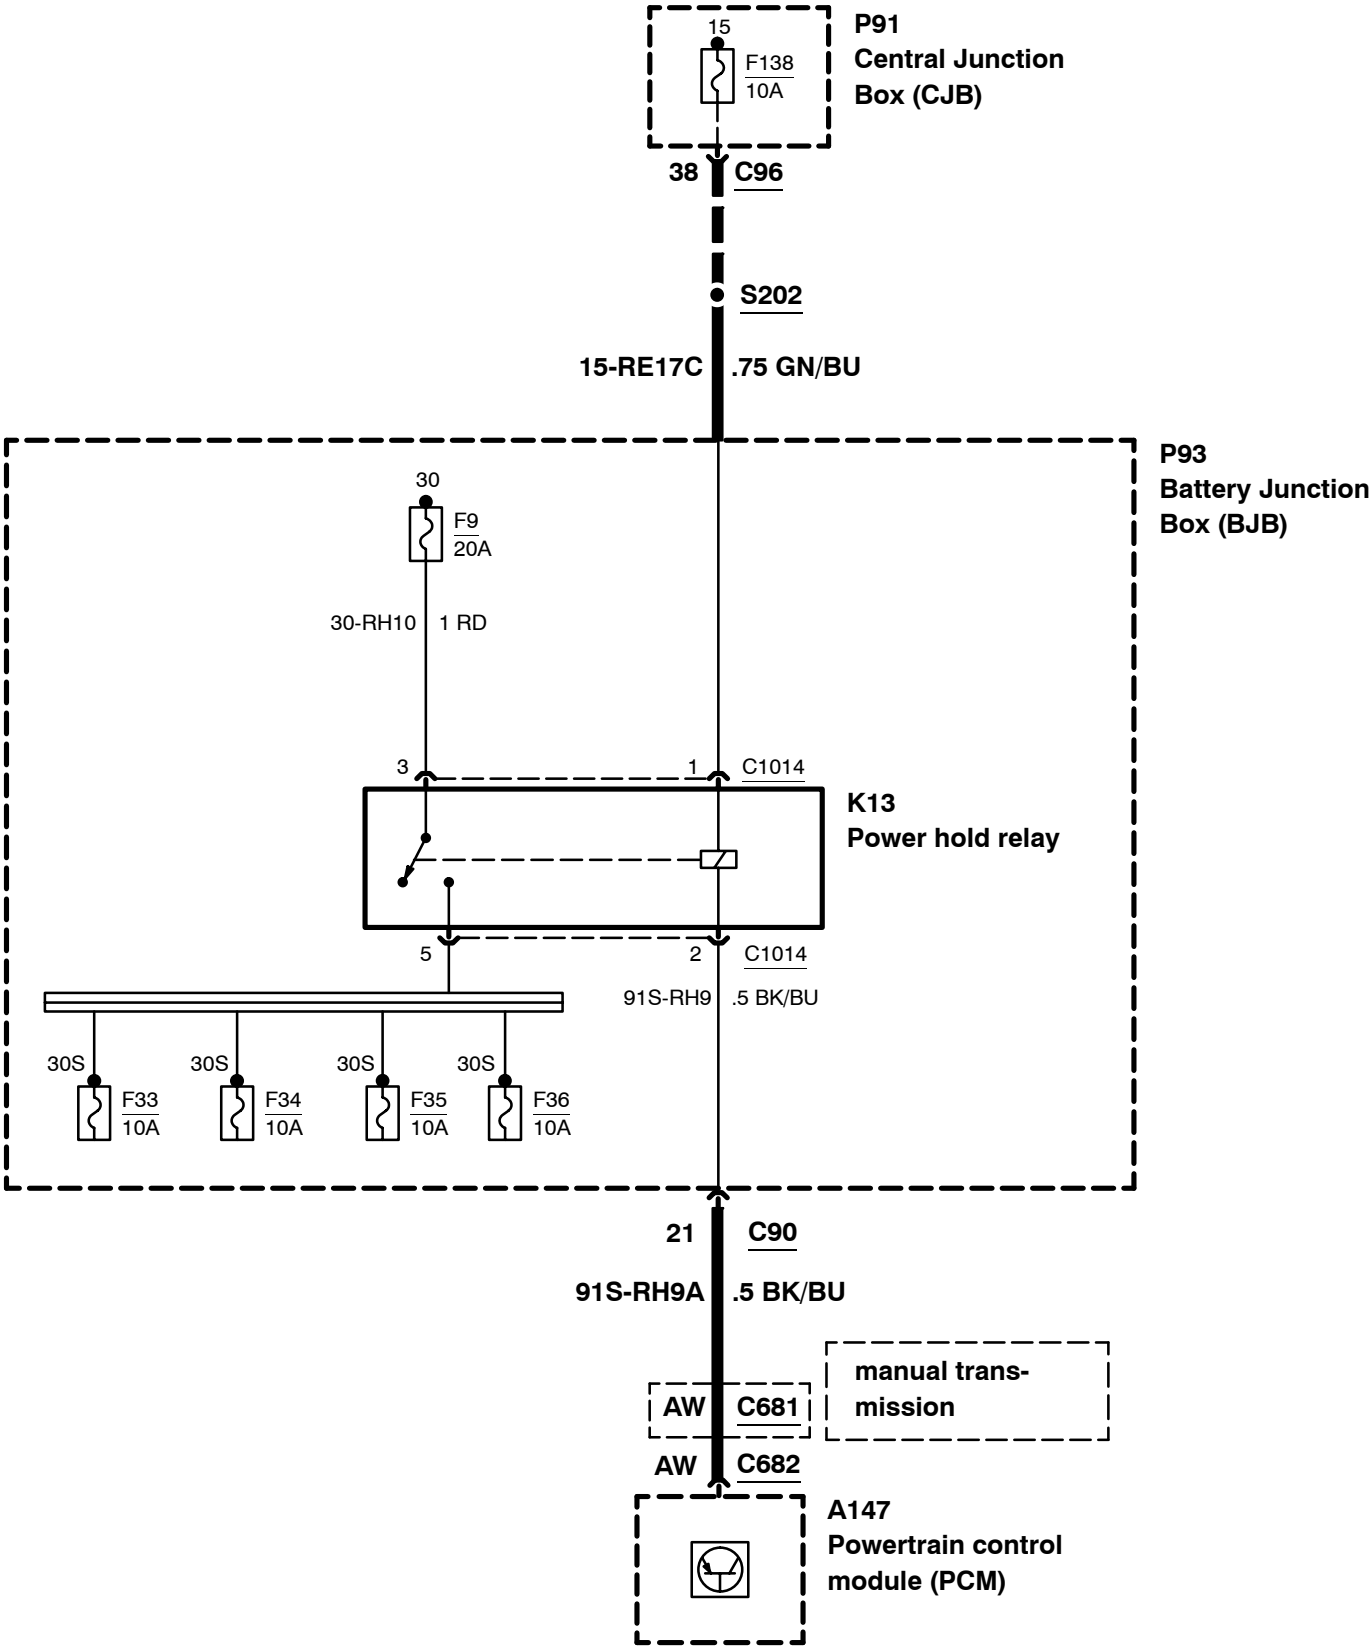




Power Distribution – 1.8/2.0L Duratec–HE (M14)


02/2008  
700-02-00-6  
2008.25  
Focus

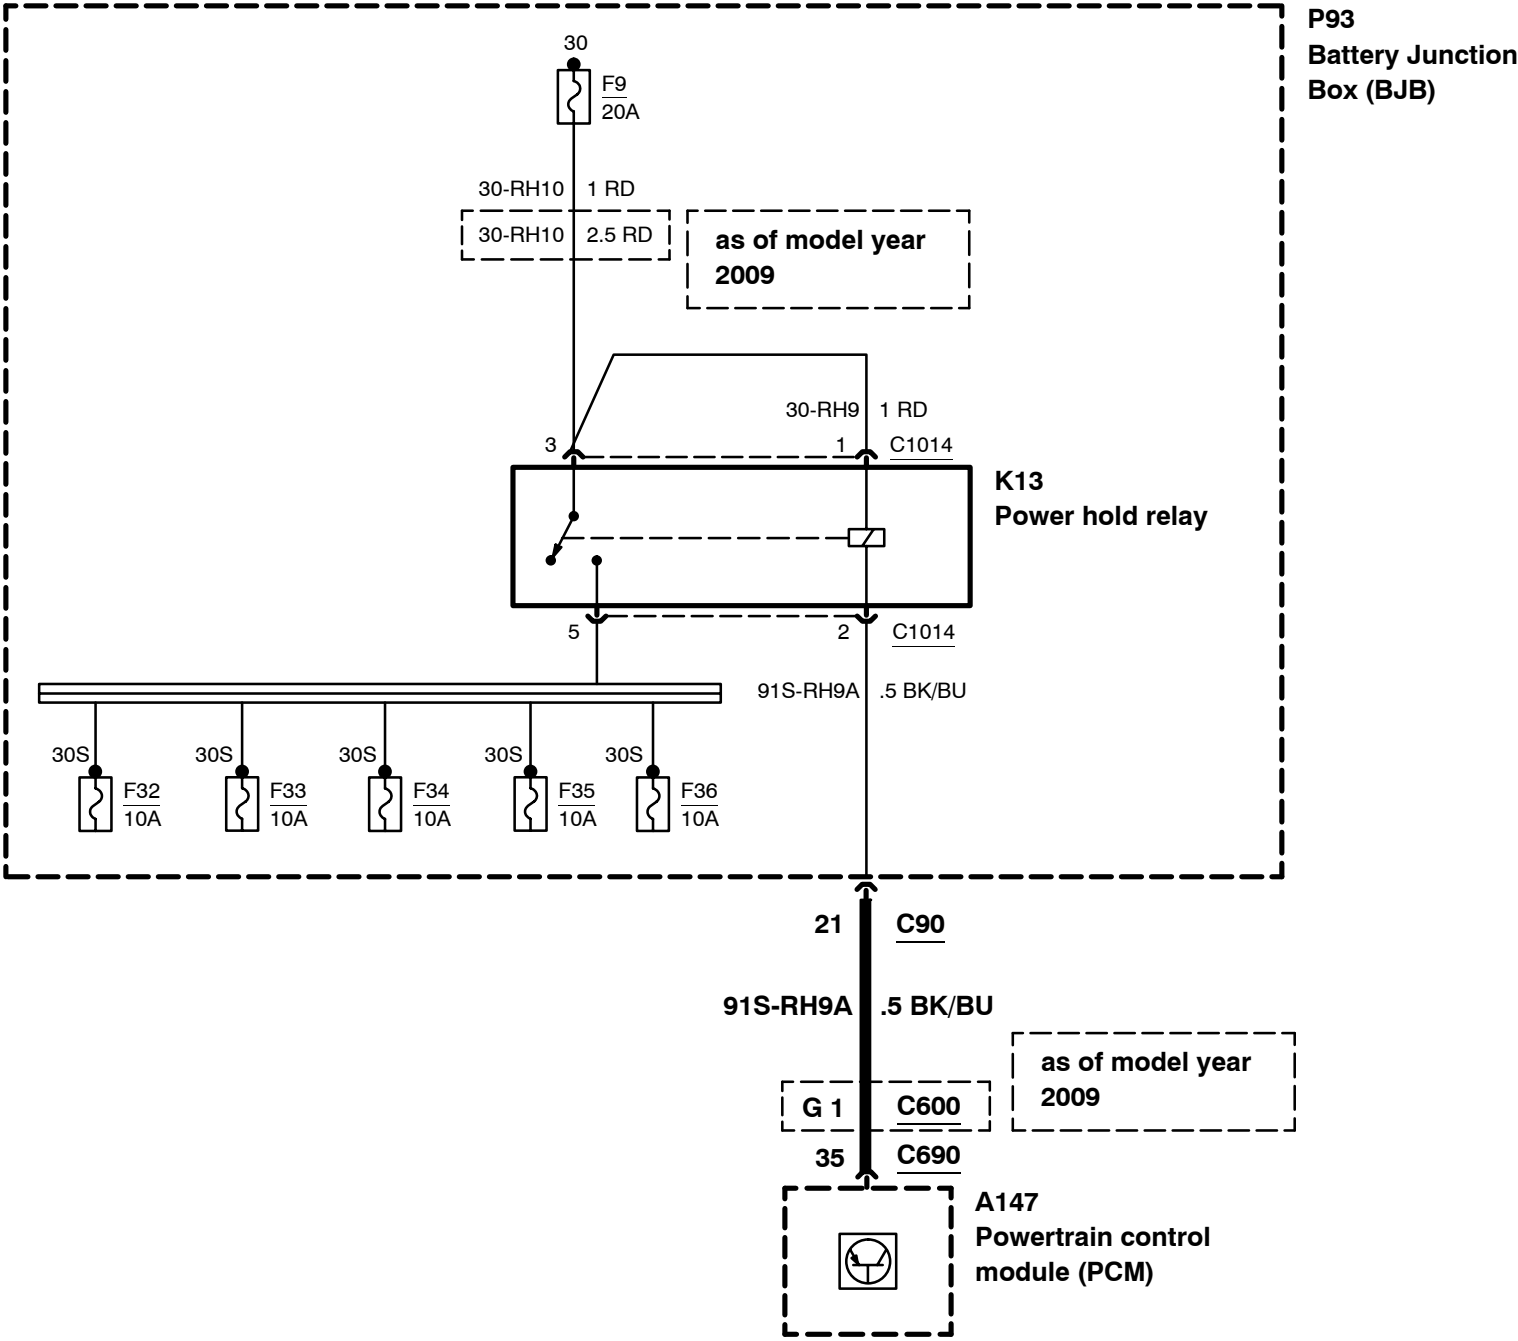

Power Distribution – 2.0L Duratorq–TDCi (DW) Diesel


02/2008  
700-02-00-7  
2008.25  
Focus

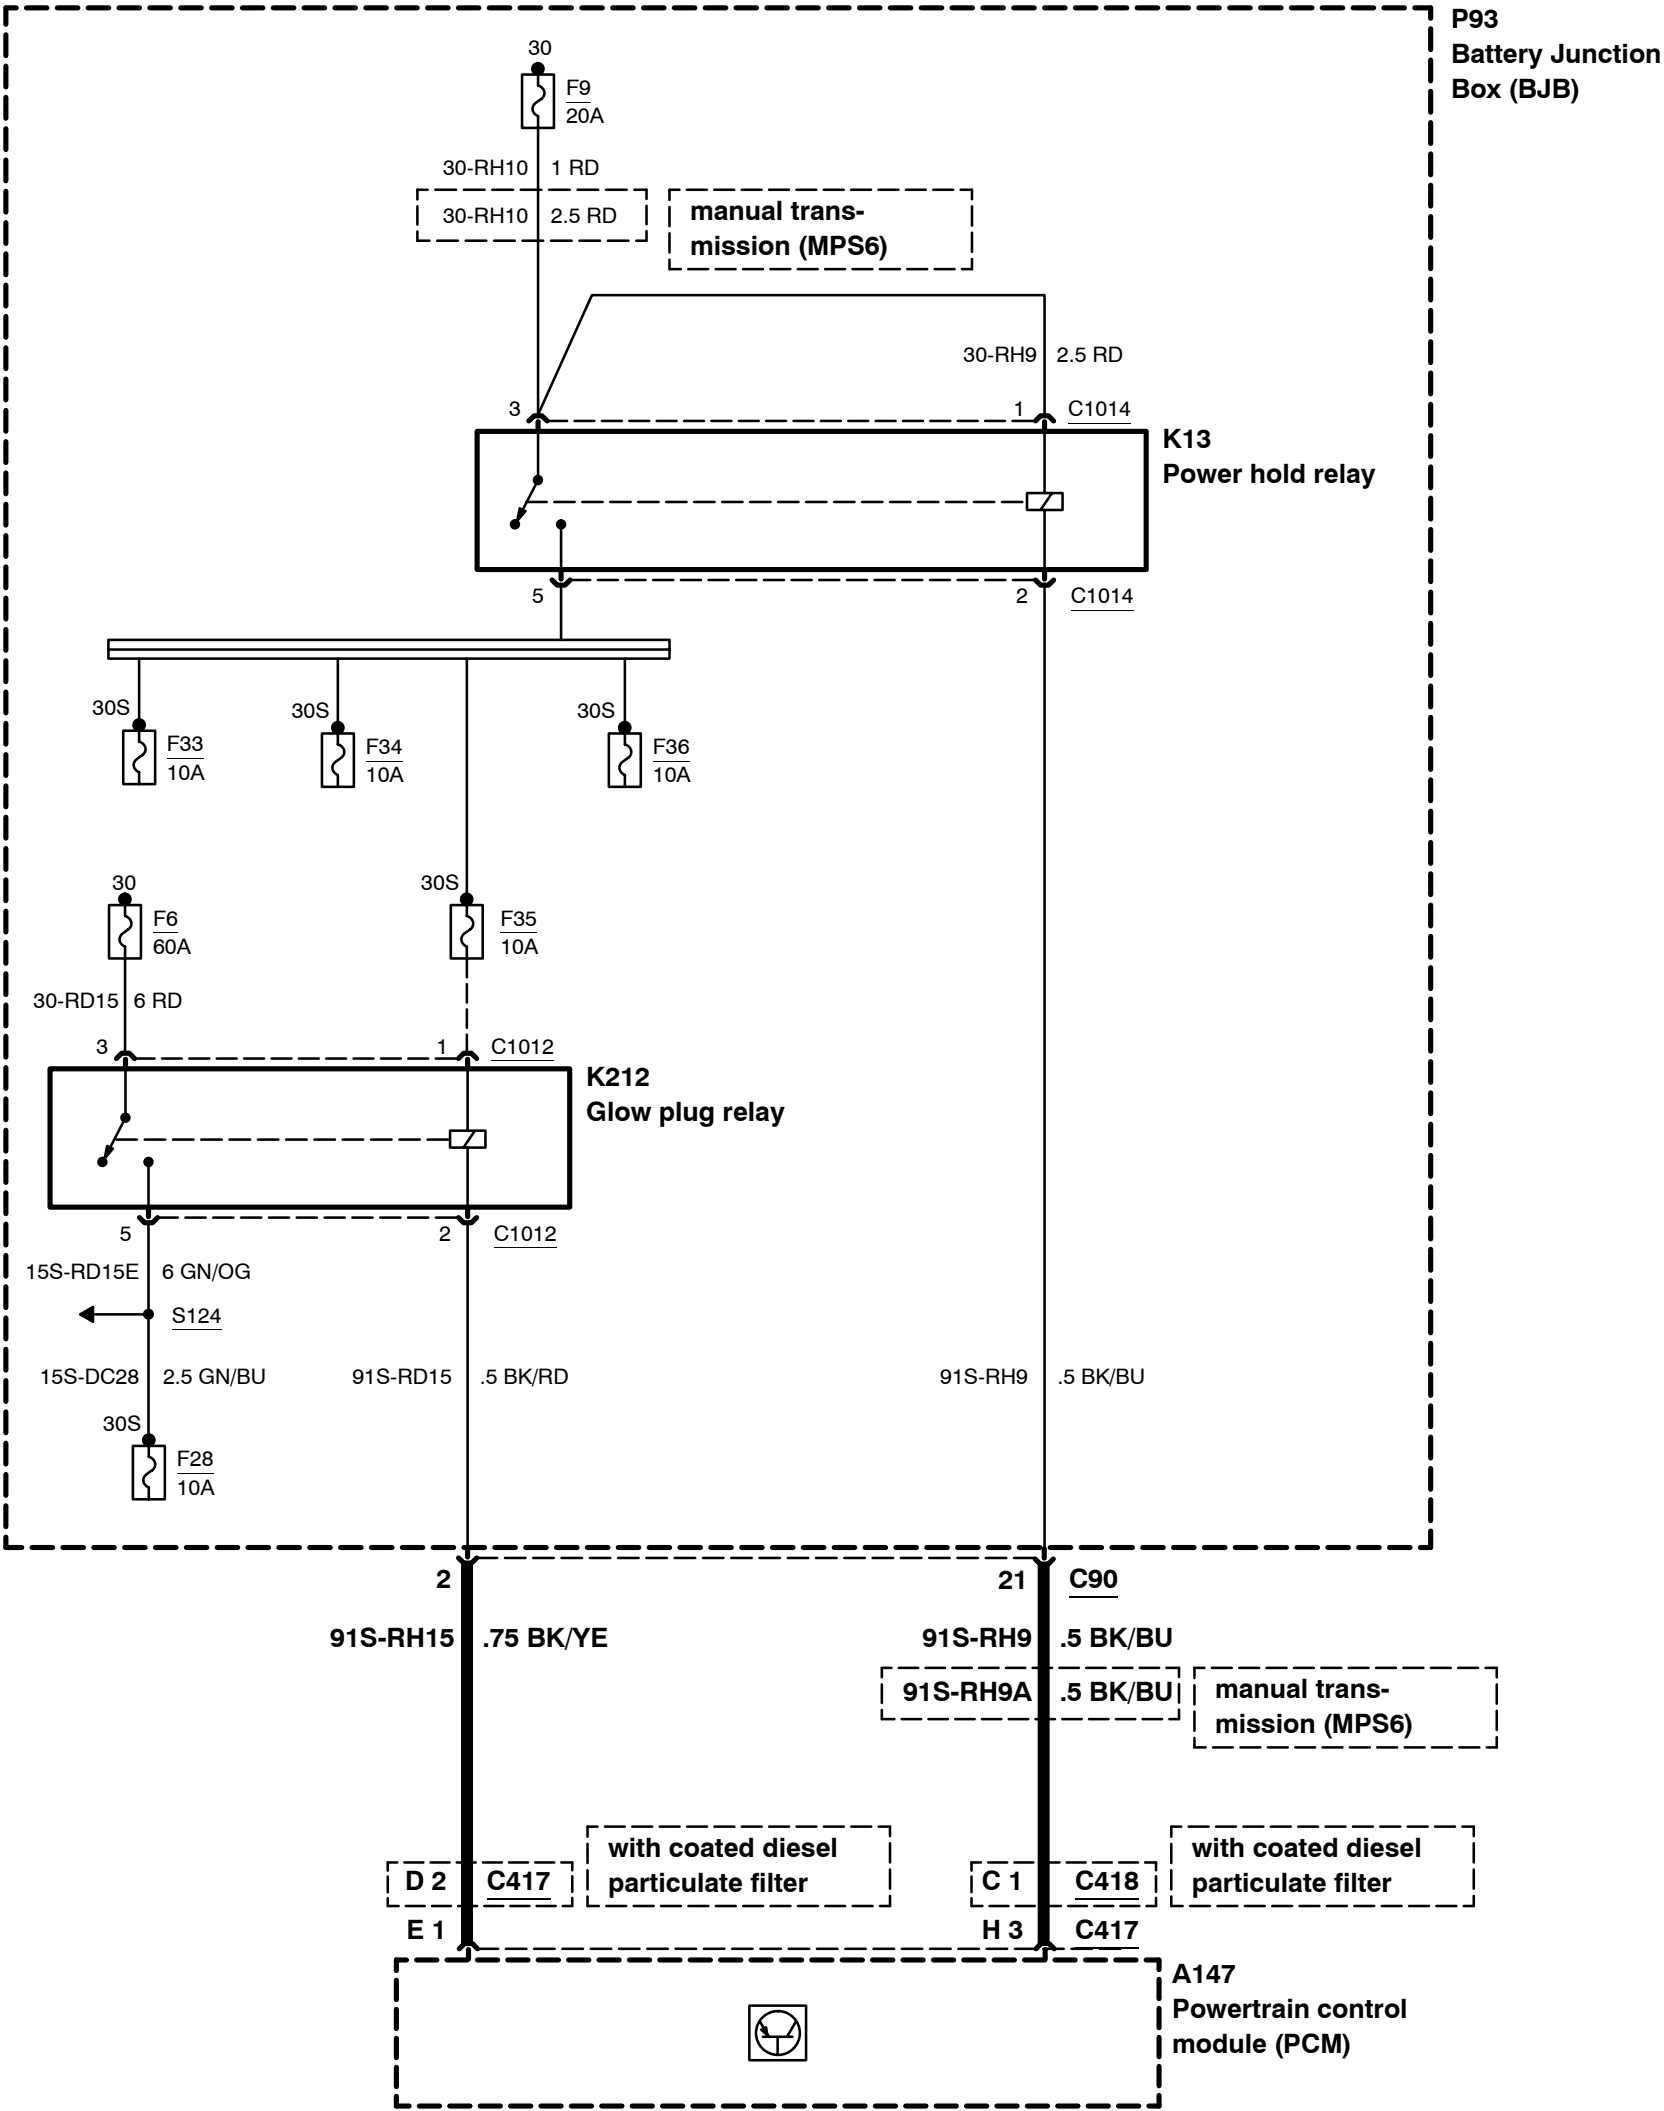

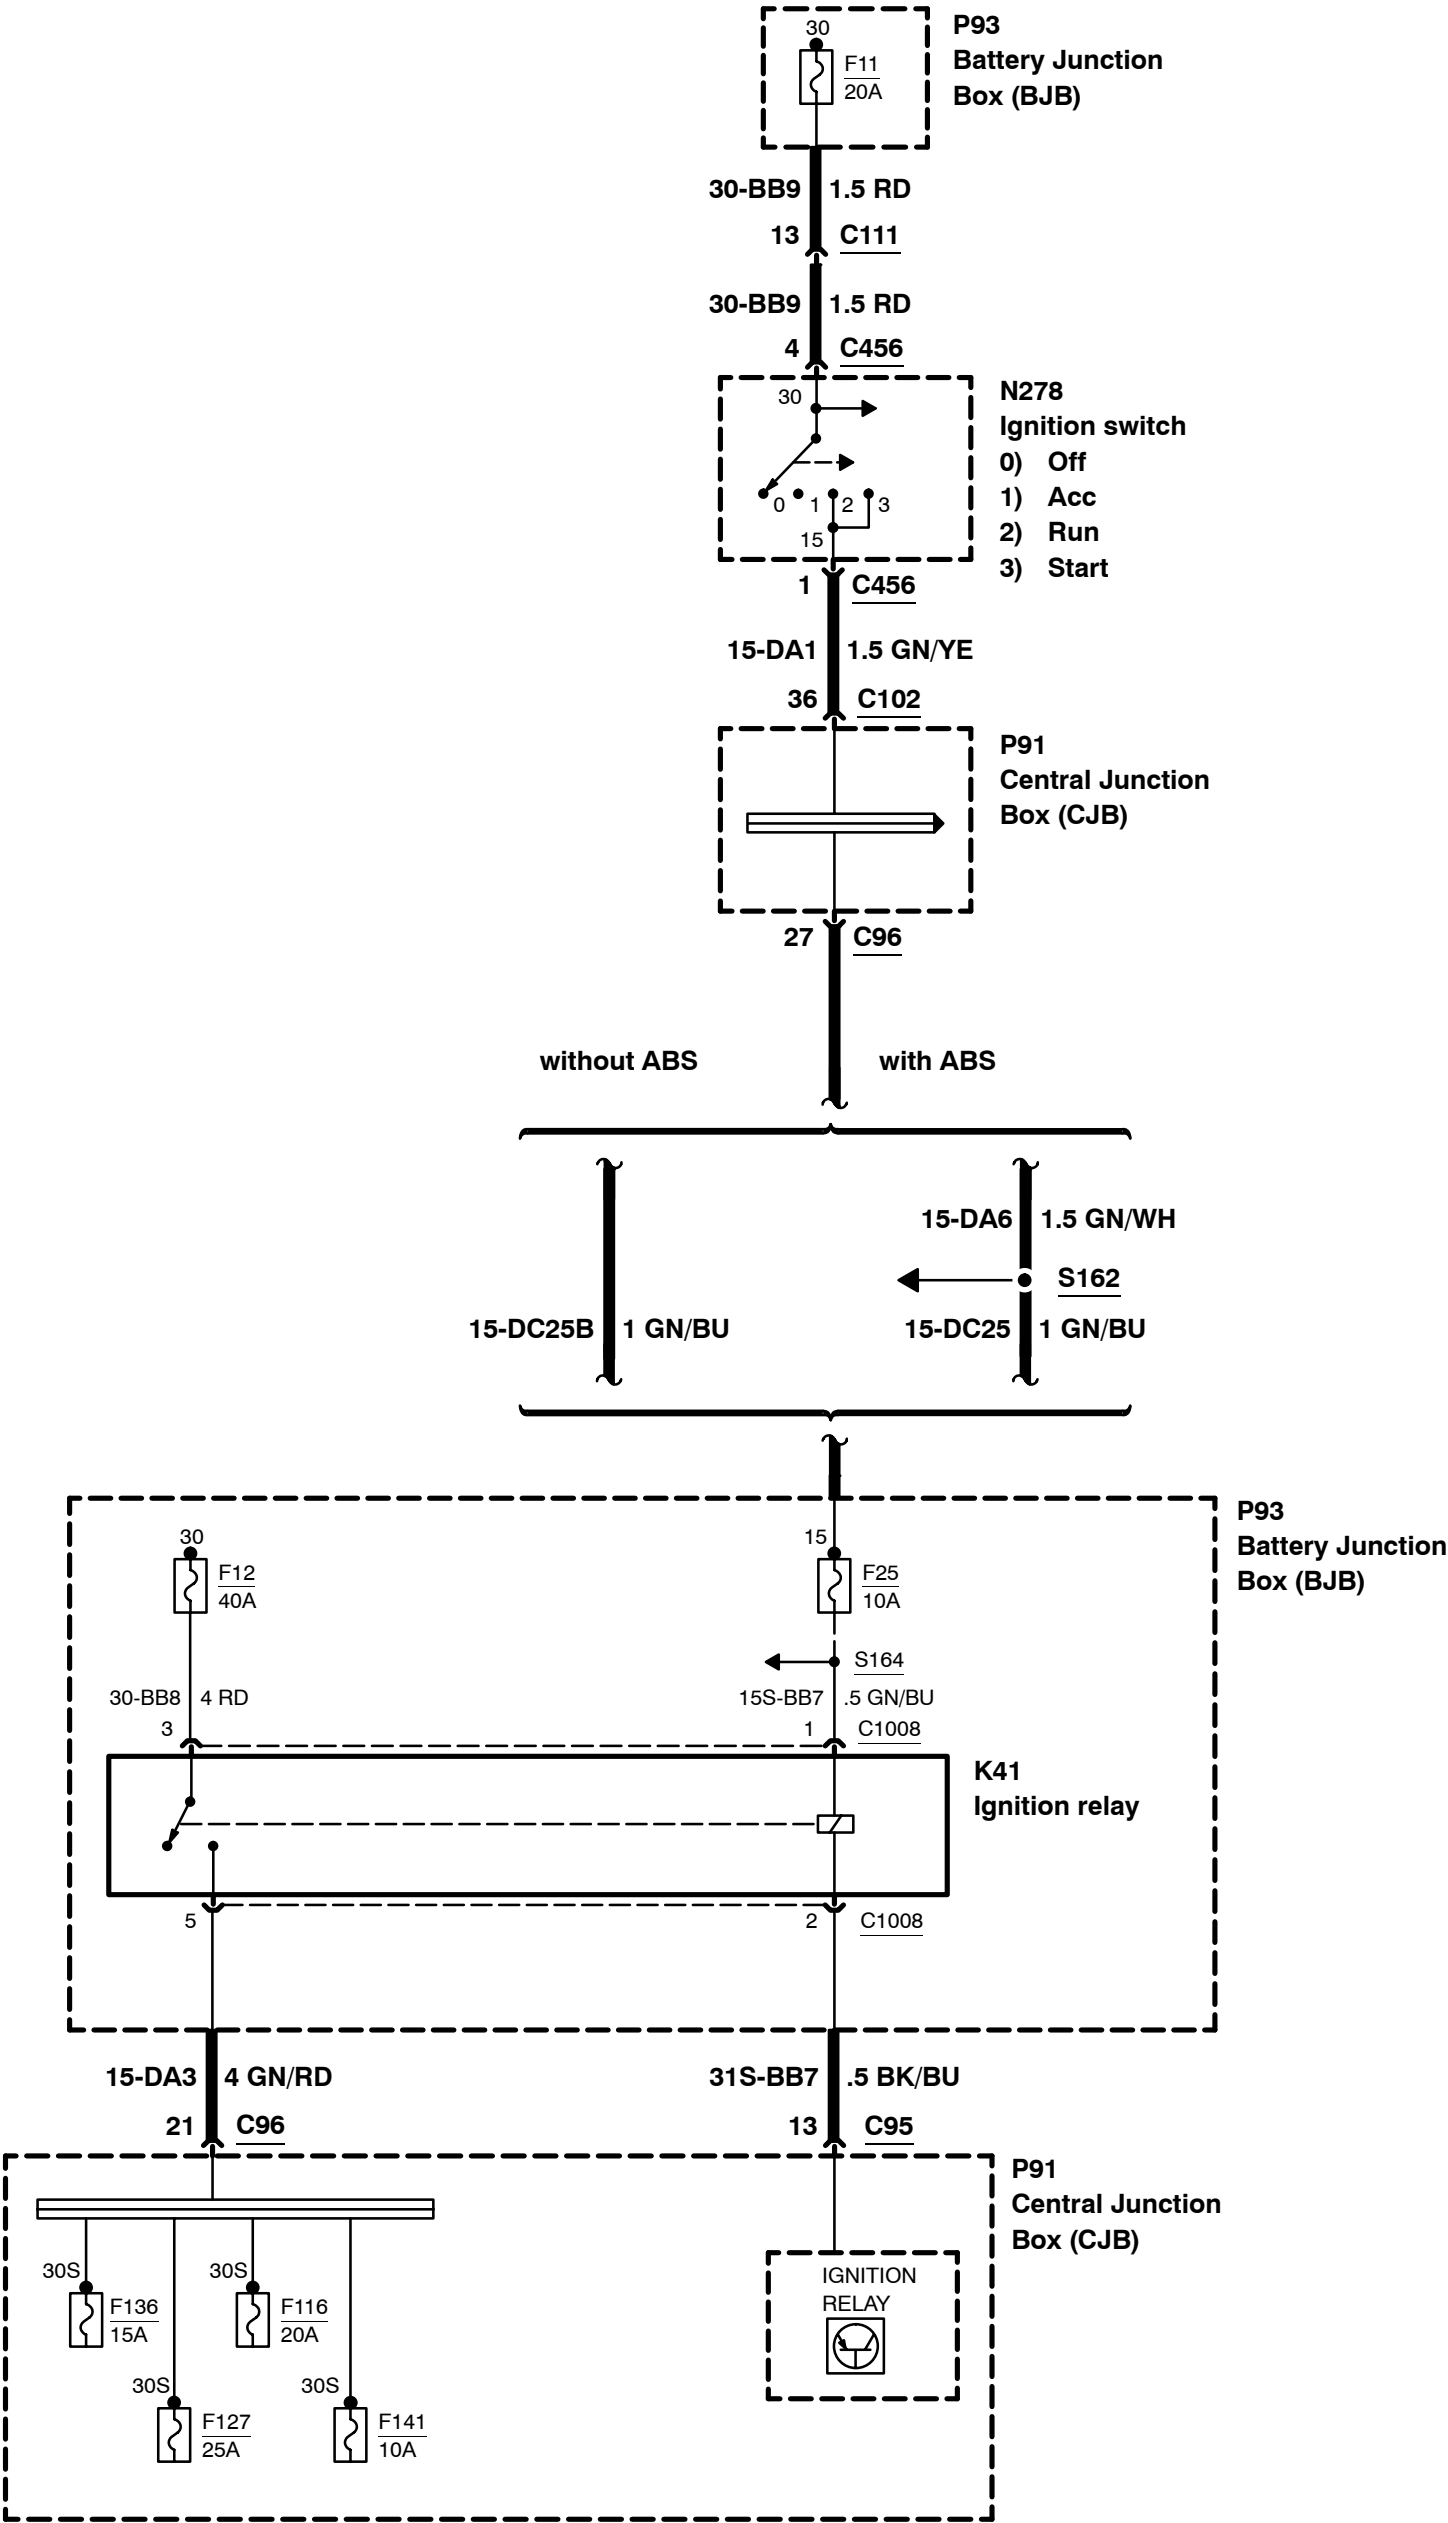


# Power Distribution

02/2008  
700-02-00-9  
2008.25  
Focus

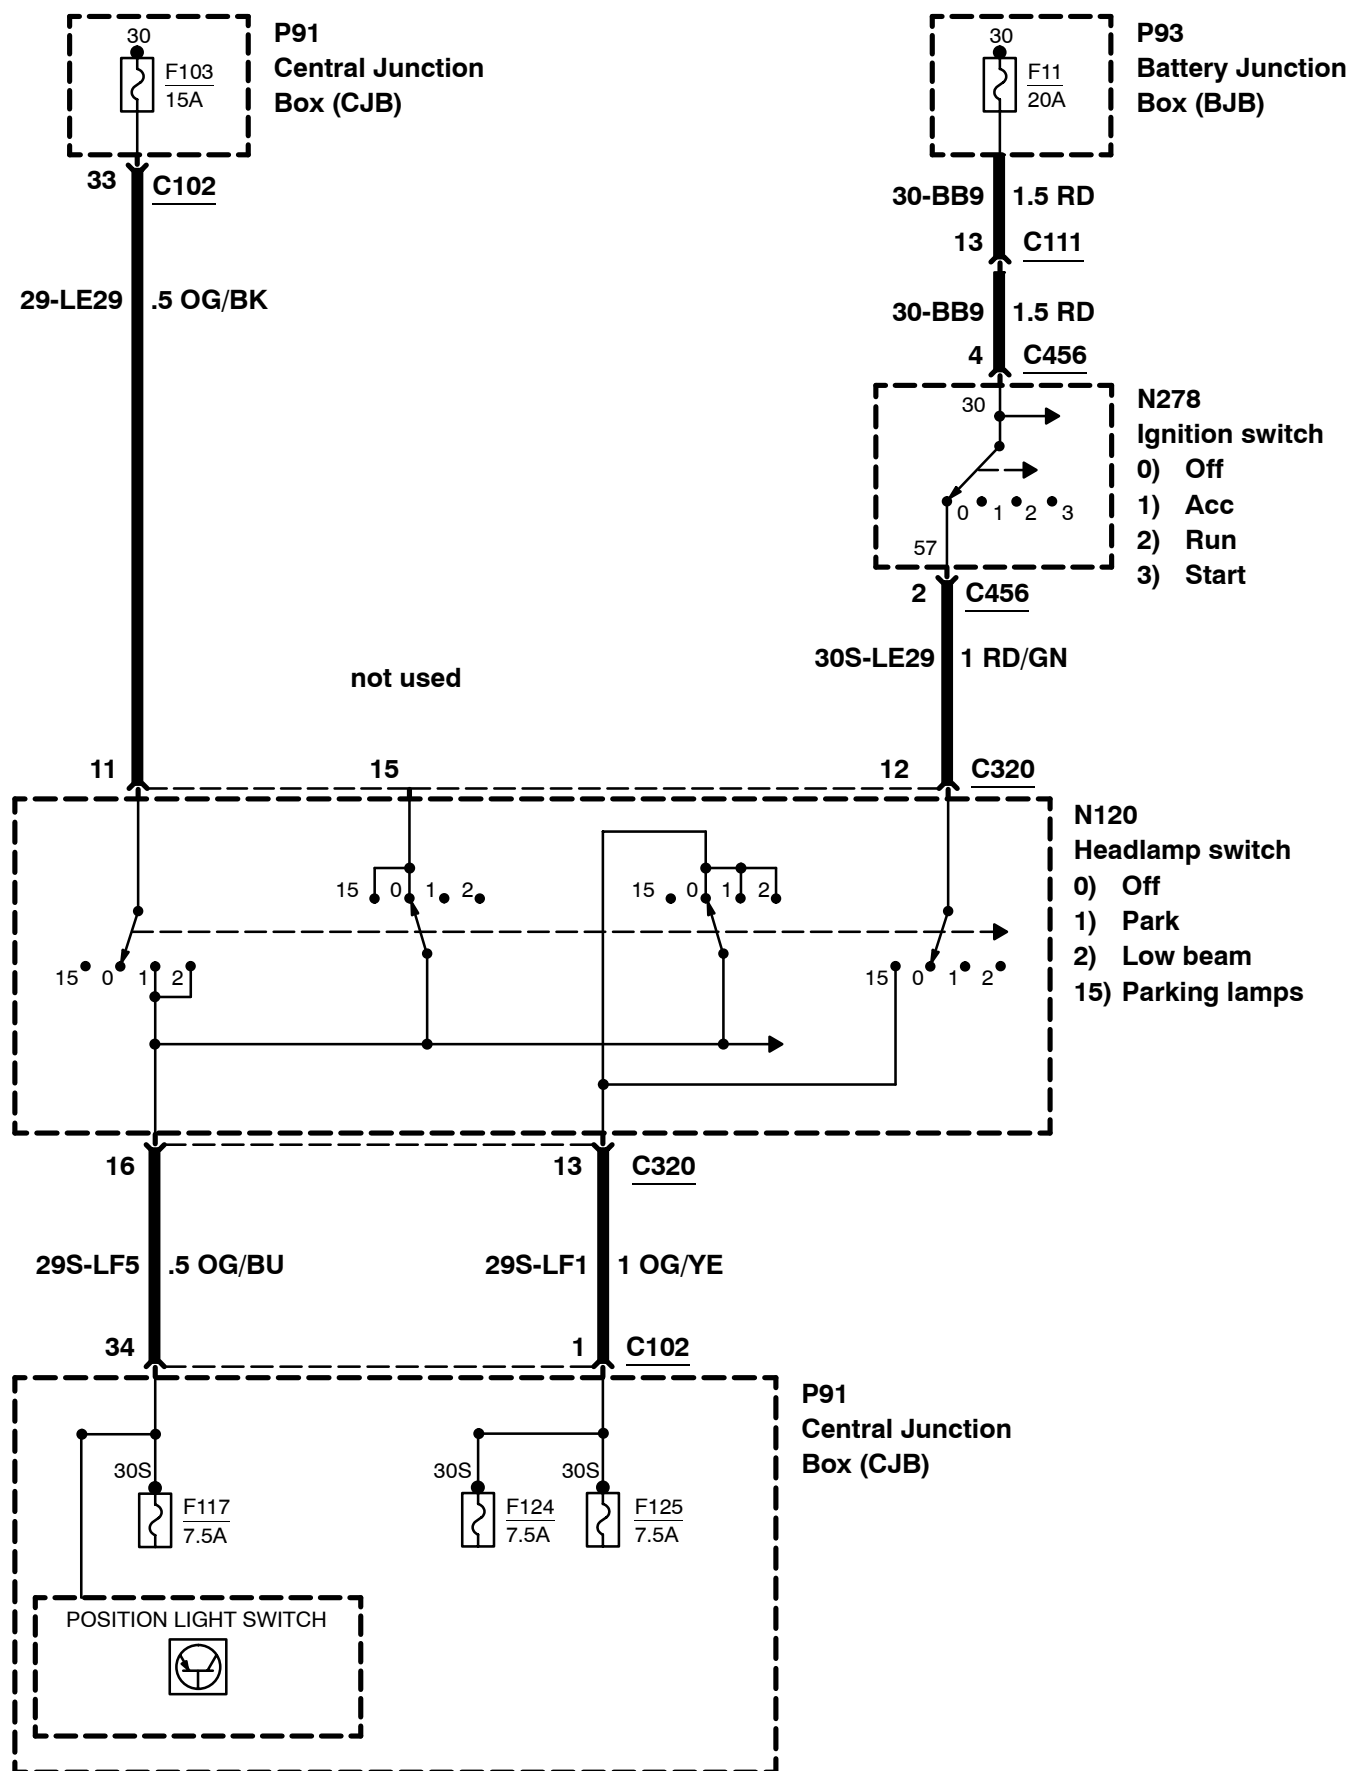


## Fuse Details – F1, F2

02/2008  
700-03-00-1  
2008.25  
Focus

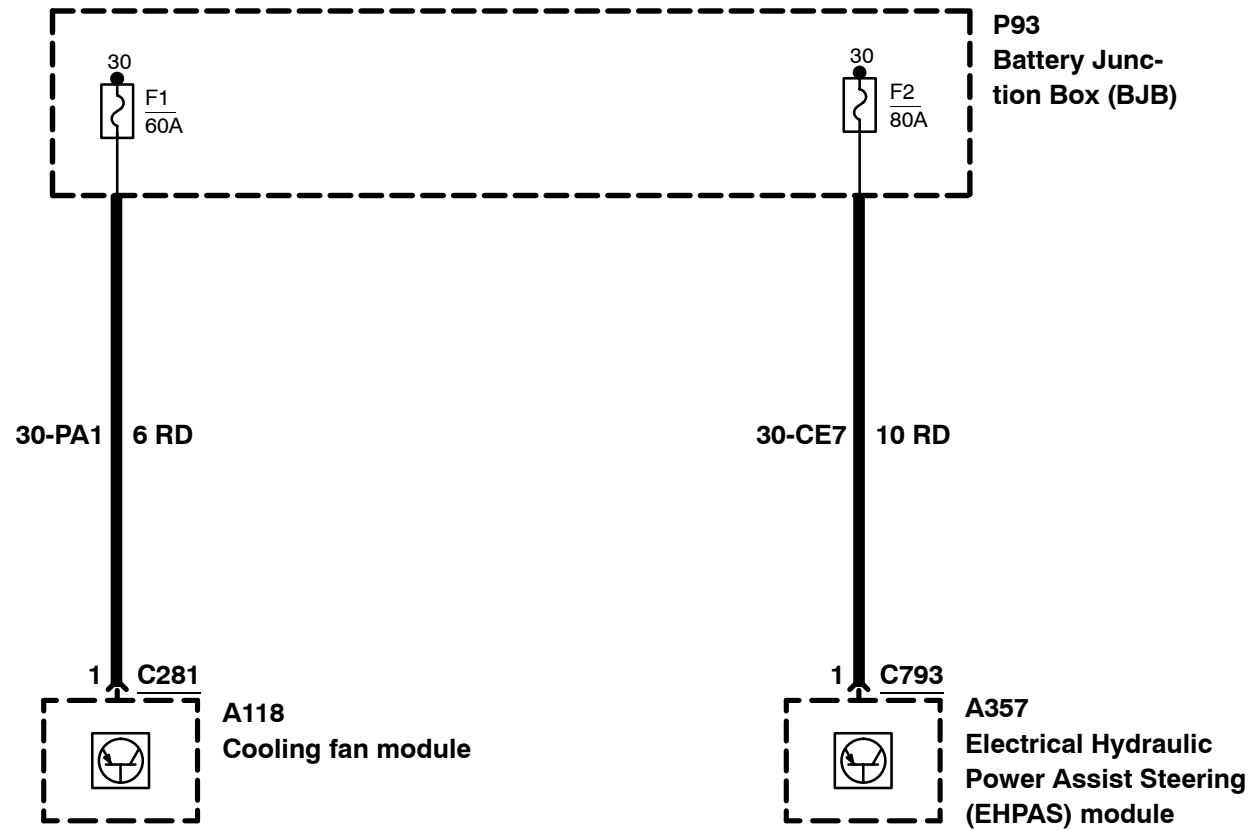


# Fuse Details – F3

02/2008  
700-03-00-2  
2008.25  
Focus

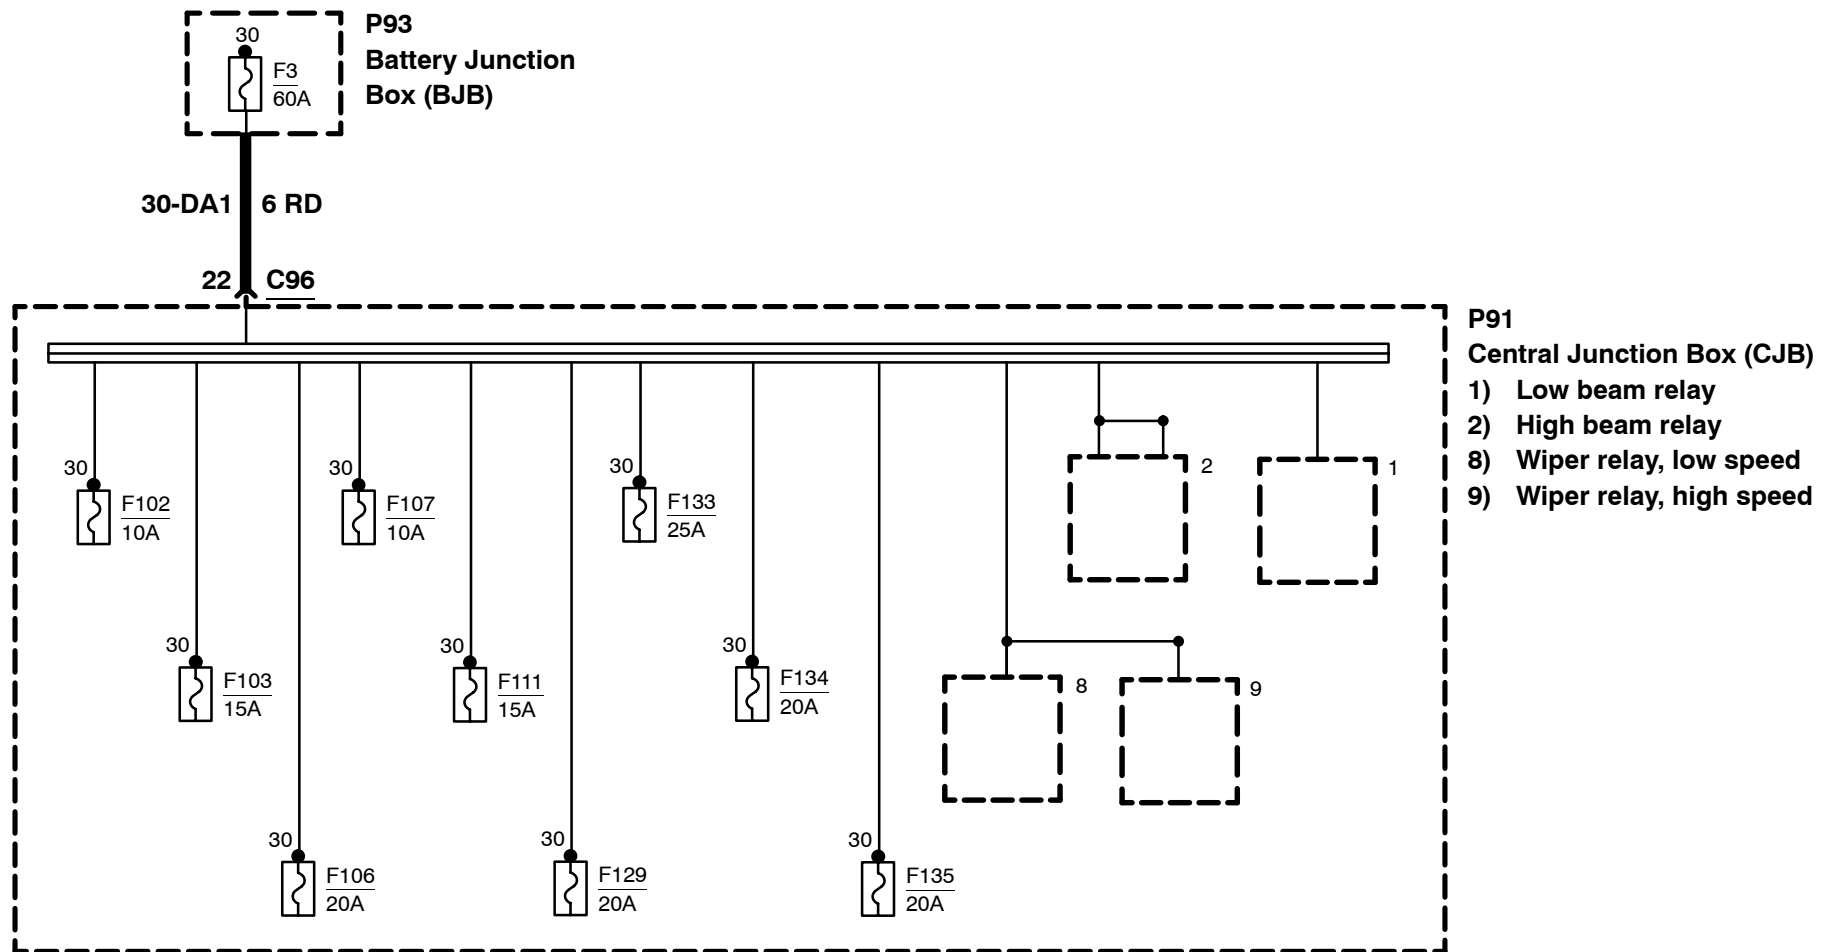


# Fuse Details – F4

02/2008  
700-03-00-3  
2008.25  
Focus

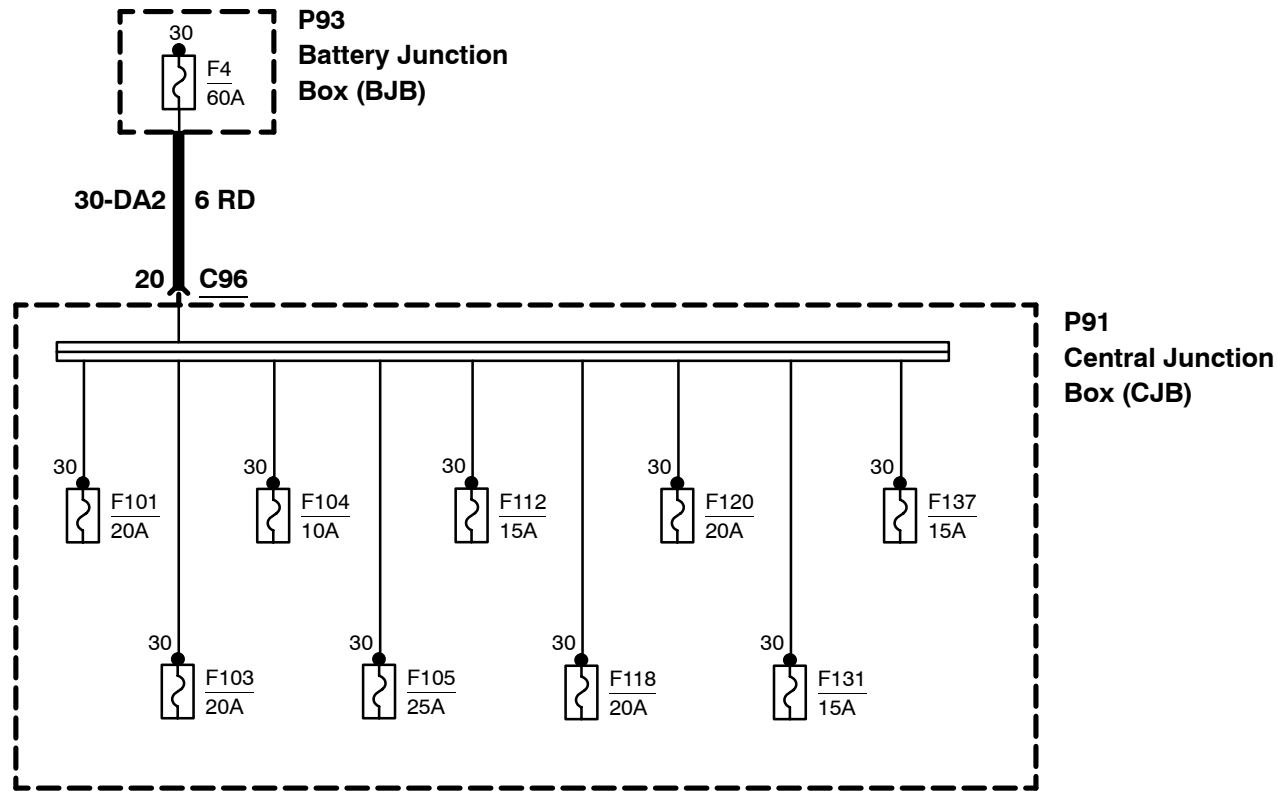

# Fuse Details – F6, F7, F8


02/2008  
700-03-00-4  
2008.25  
Focus

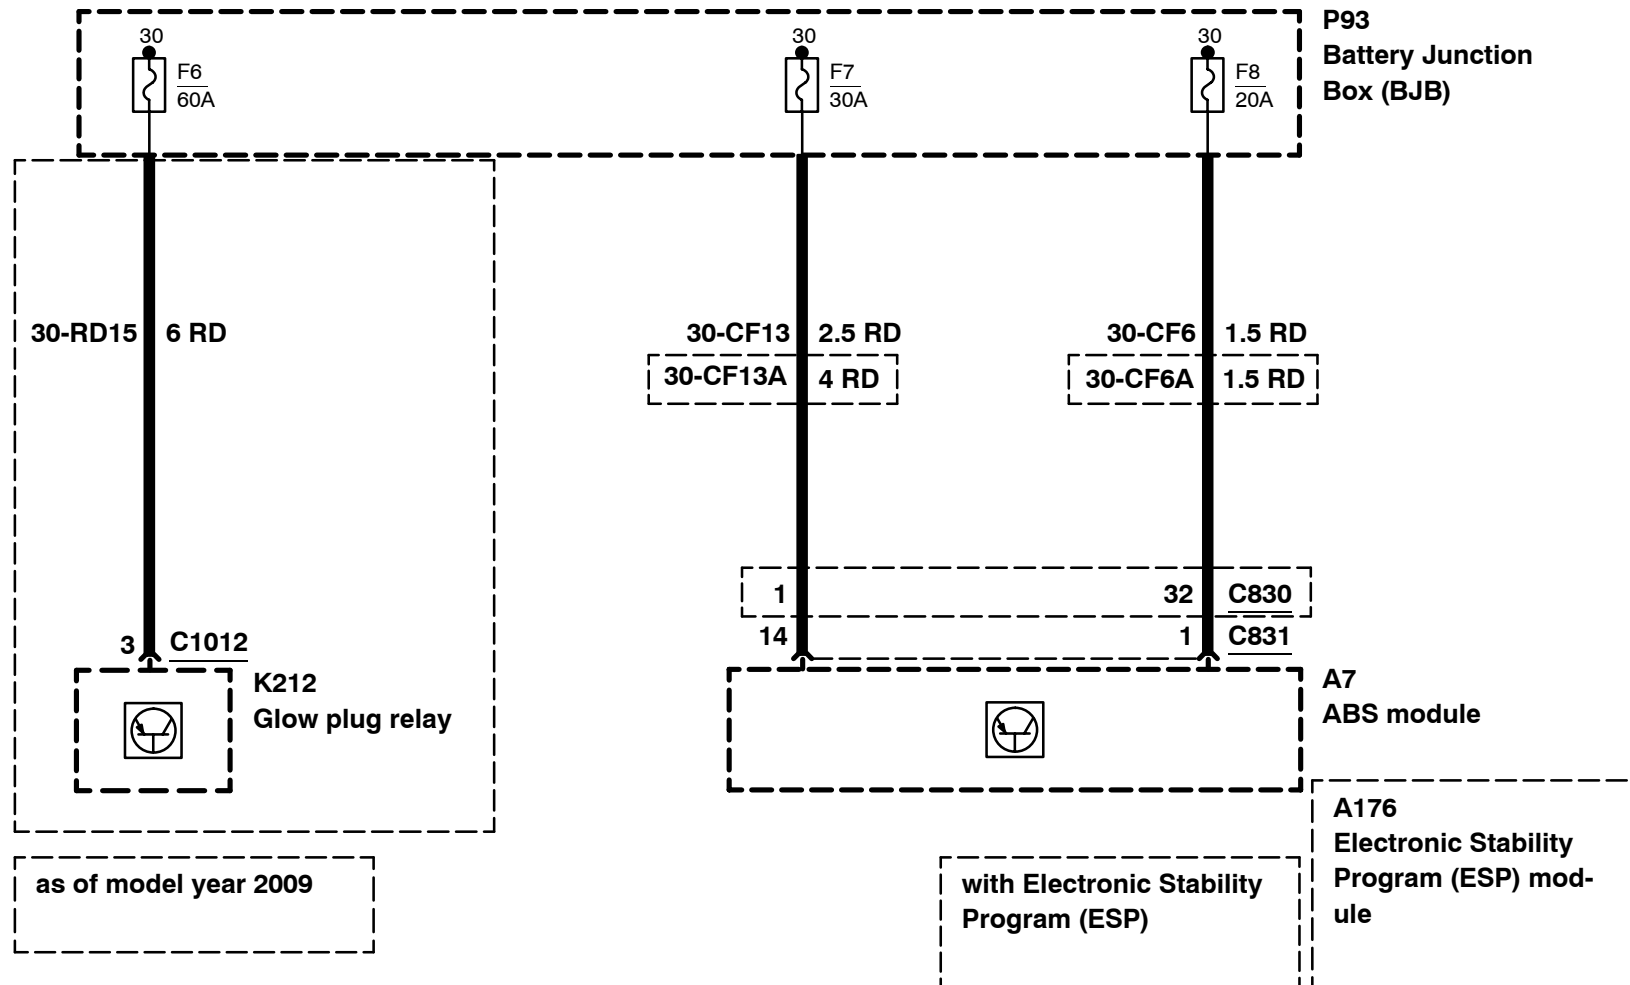




# Fuse Details – F9

02/2008  
700-03-00-5  
2008.25  
Focus

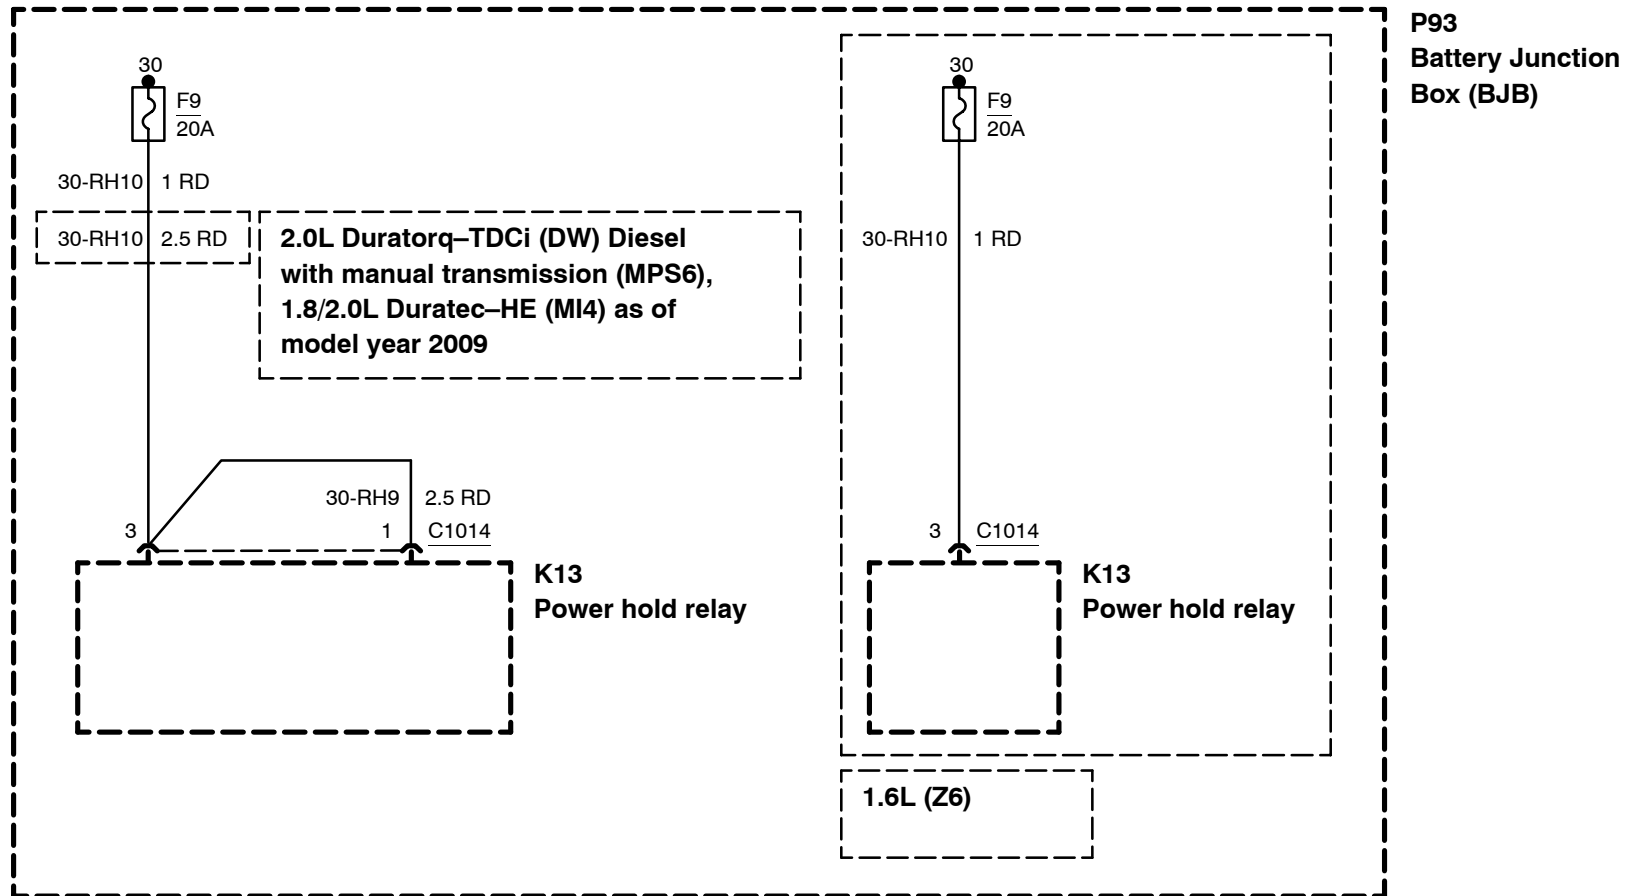


## Fuse Details – F10, before model year 2009

02/2008  
700-03-00-6  
2008.25  
Focus

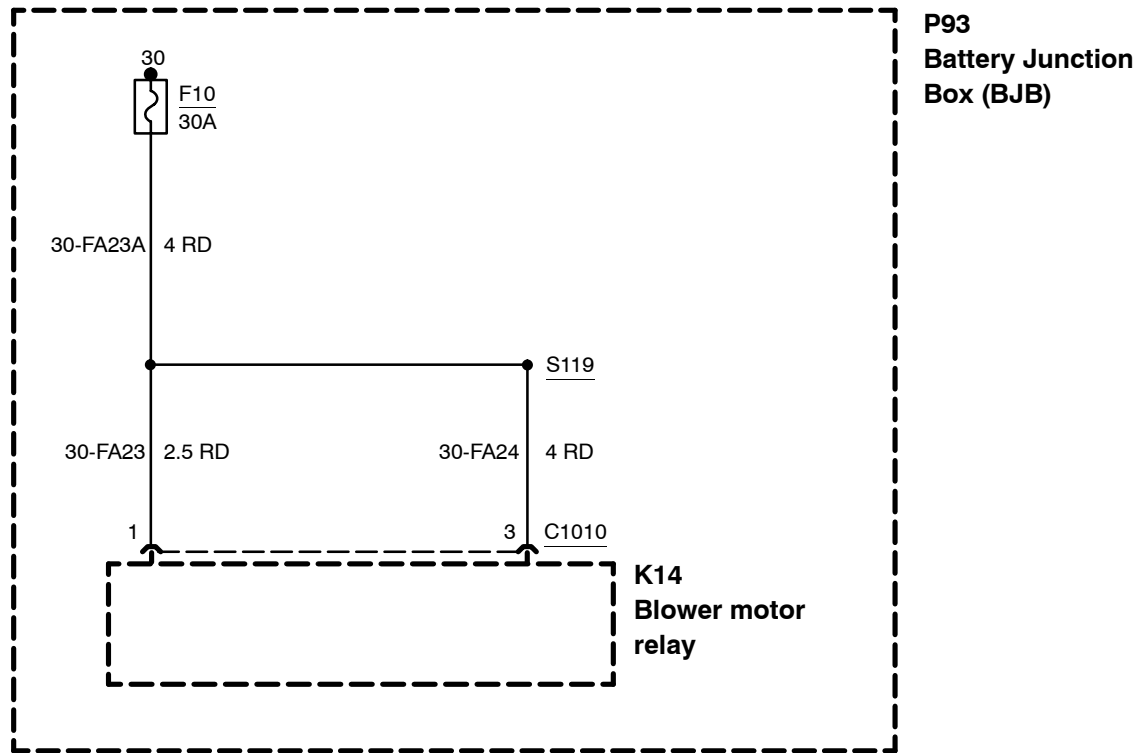


# Fuse Details – F10, as of model year 2009

02/2008  
700-03-00-7  
2008.25  
Focus

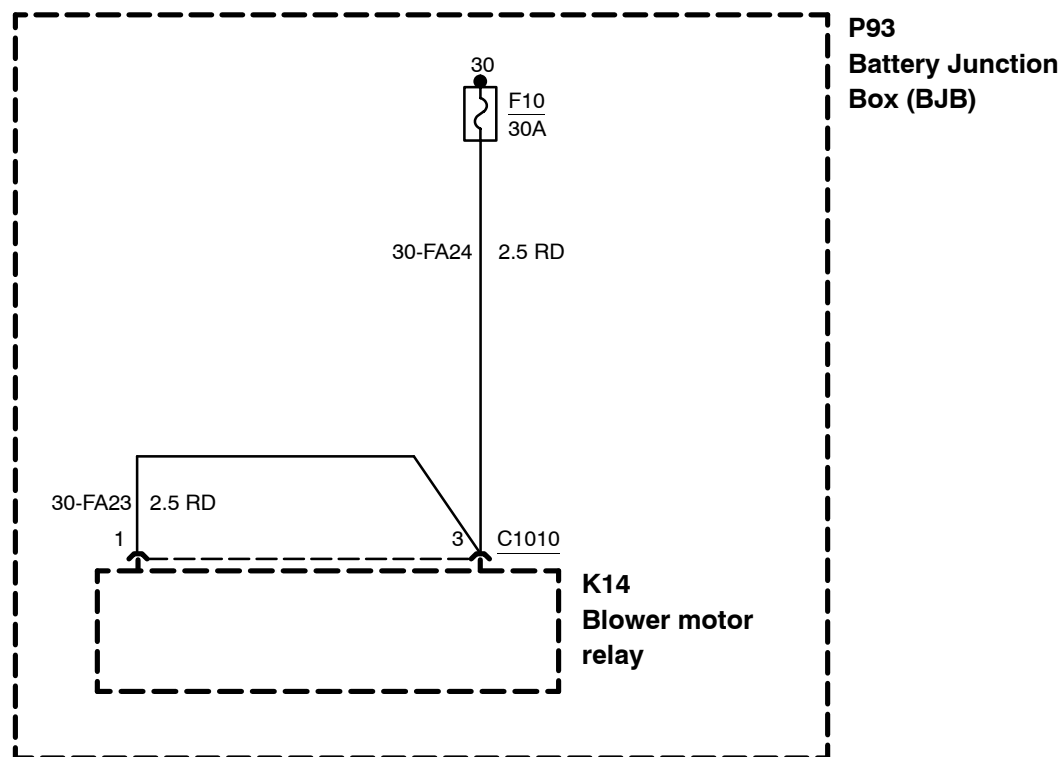


# Fuse Details – F11

02/2008  
700-03-00-8  
2008.25  
Focus

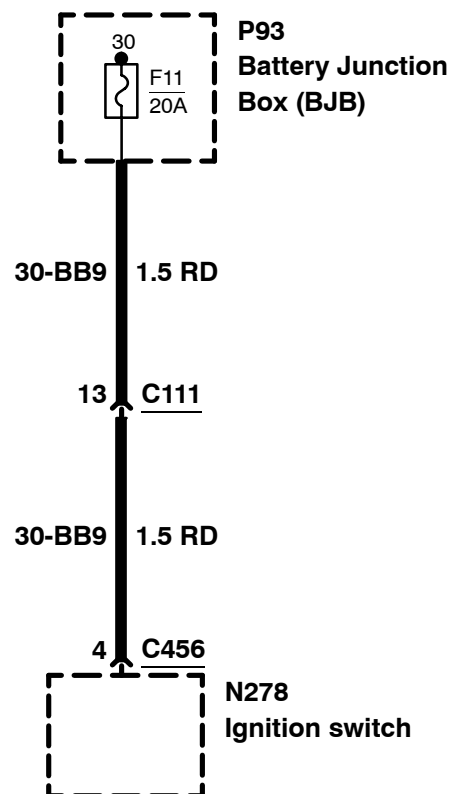


## Fuse Details – F12

02/2008  
700-03-00-9  
2008.25  
Focus

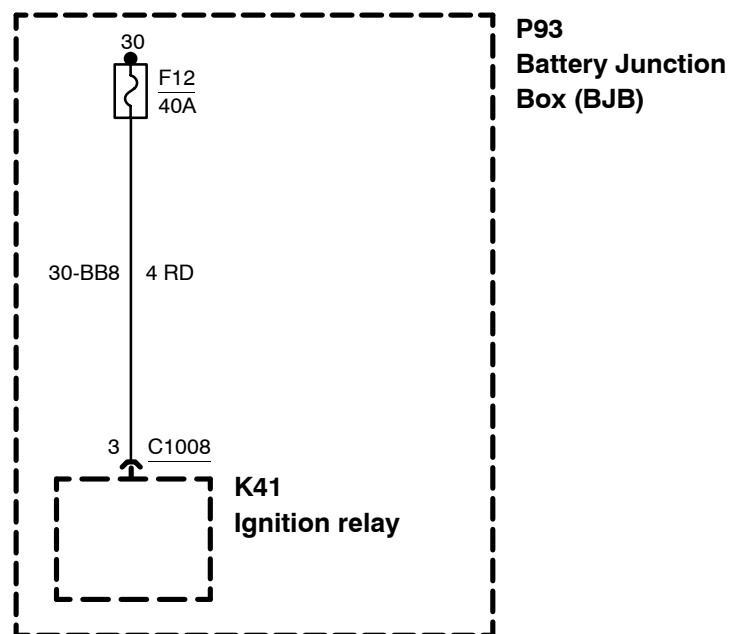


## Fuse Details – F13

02/2008  
700-03-00-10  
2008.25  
Focus

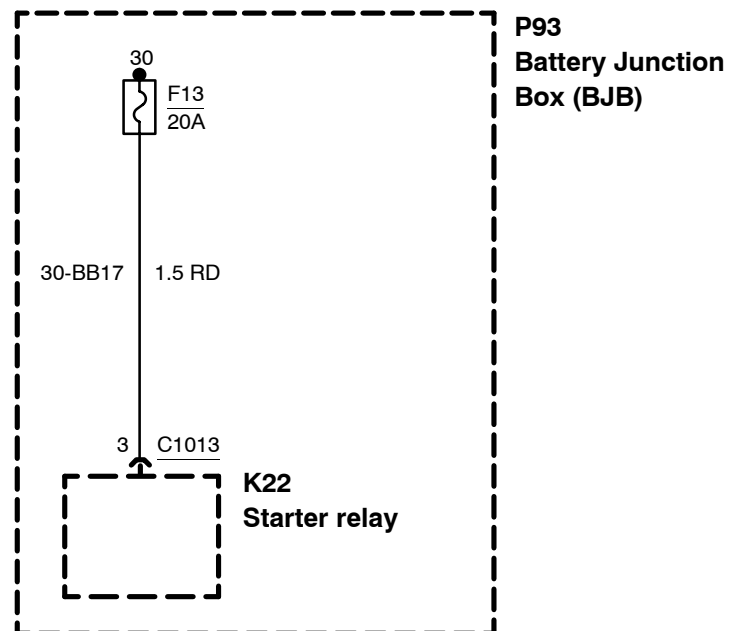


# Fuse Details – F19

02/2008  
700-03-00-11  
2008.25  
Focus

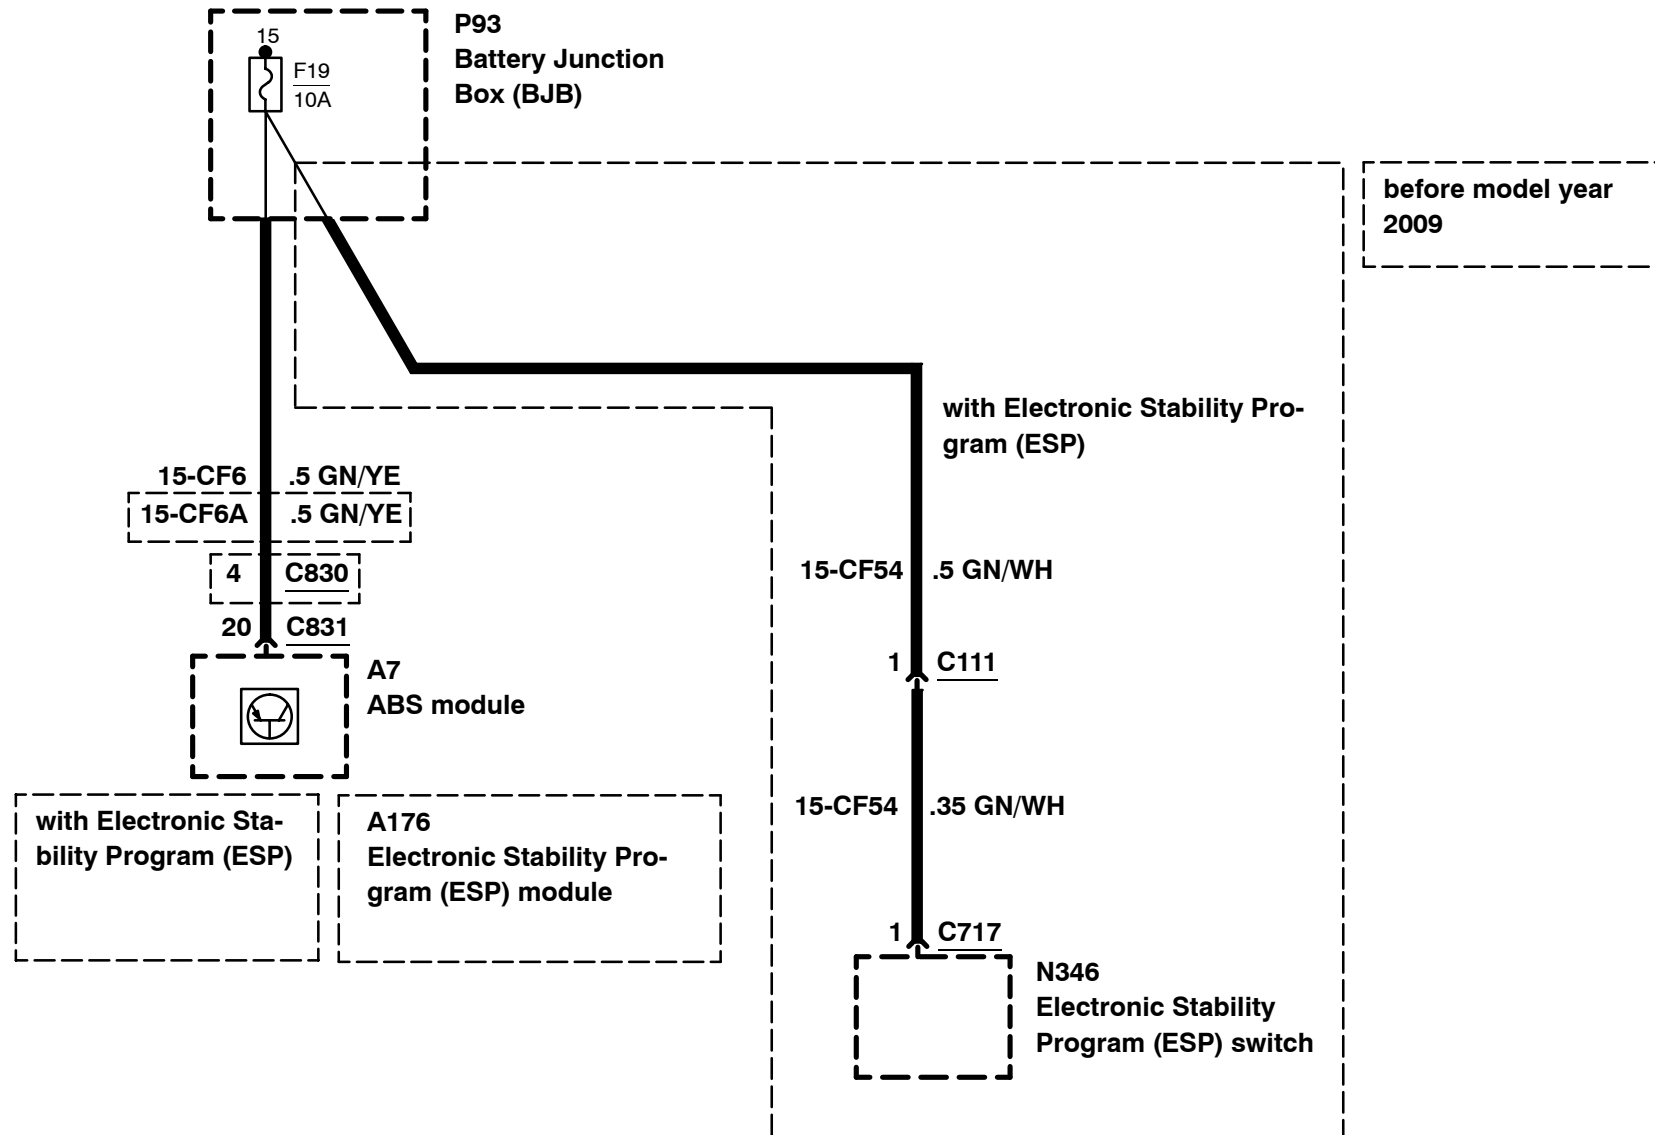

## Fuse Details – F20, F22


02/2008  
700-03-00-12  
2008.25  
Focus

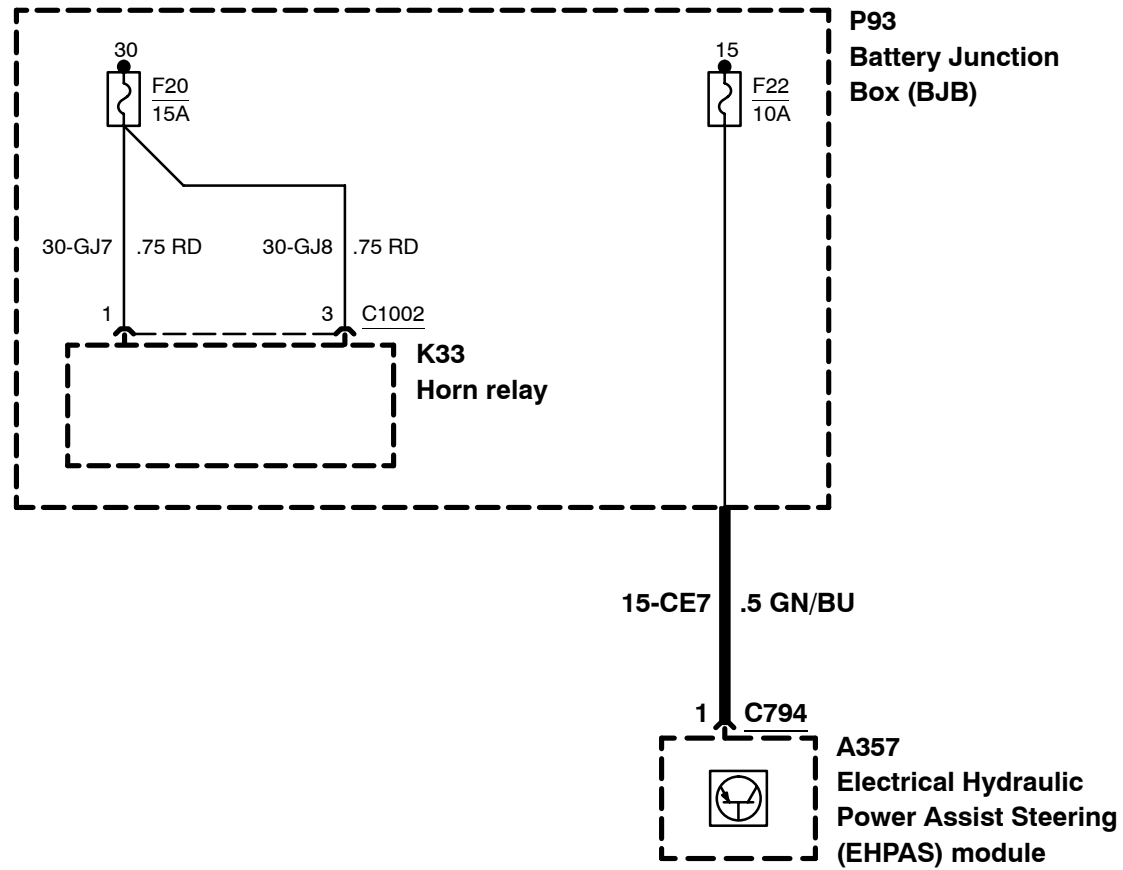




## Fuse Details – F24

02/2008  
700-03-00-13  
2008.25  
Focus

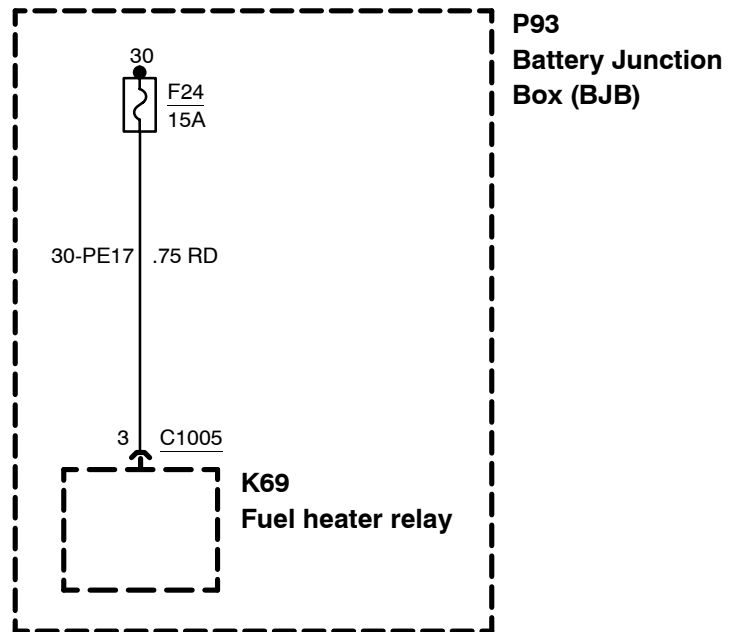


# Fuse Details – F25, except 2.0L Duratorq–TDCi (DW) Diesel manual trans- mission

02/2008  
700-03-00-14  
2008.25  
Focus

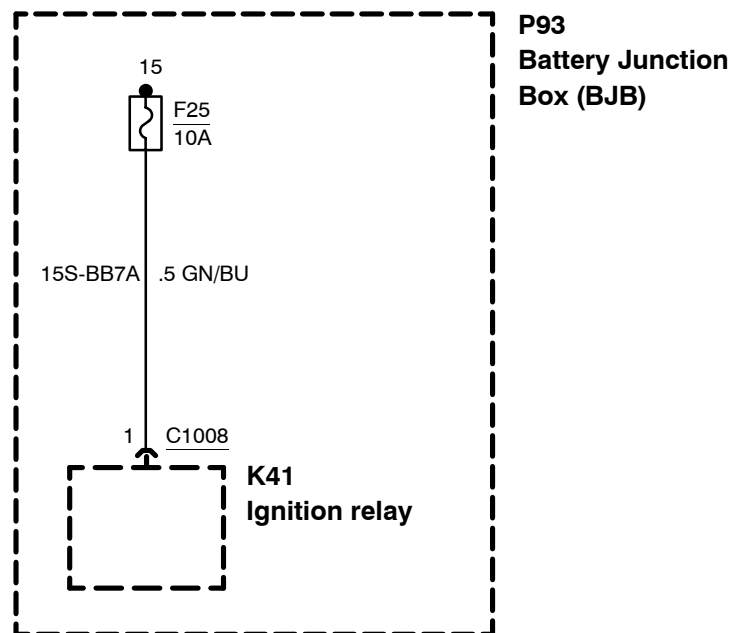


# Fuse Details – F25, except 2.0L Duratorq–TDCi (DW) Diesel automatic transmission

02/2008  
700-03-00-15  
2008.25  
Focus

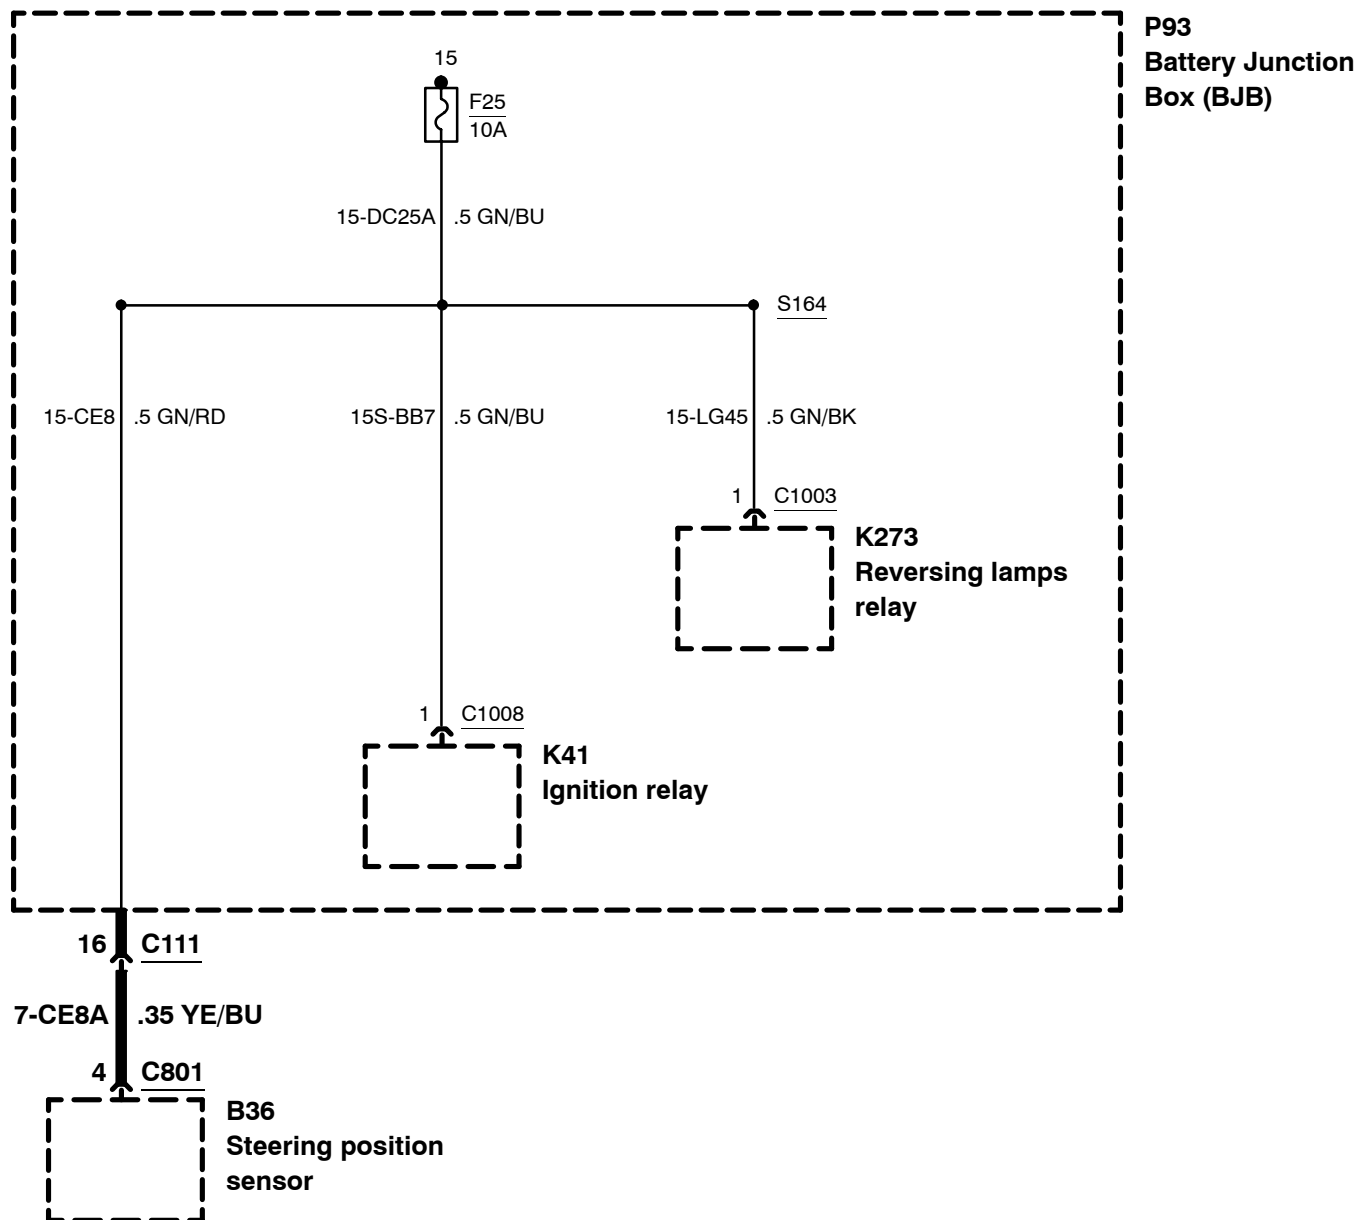


# Fuse Details – F25, 2.0L Duratorq–TDCi (DW) Diesel

02/2008  
700-03-00-16  
2008.25  
Focus

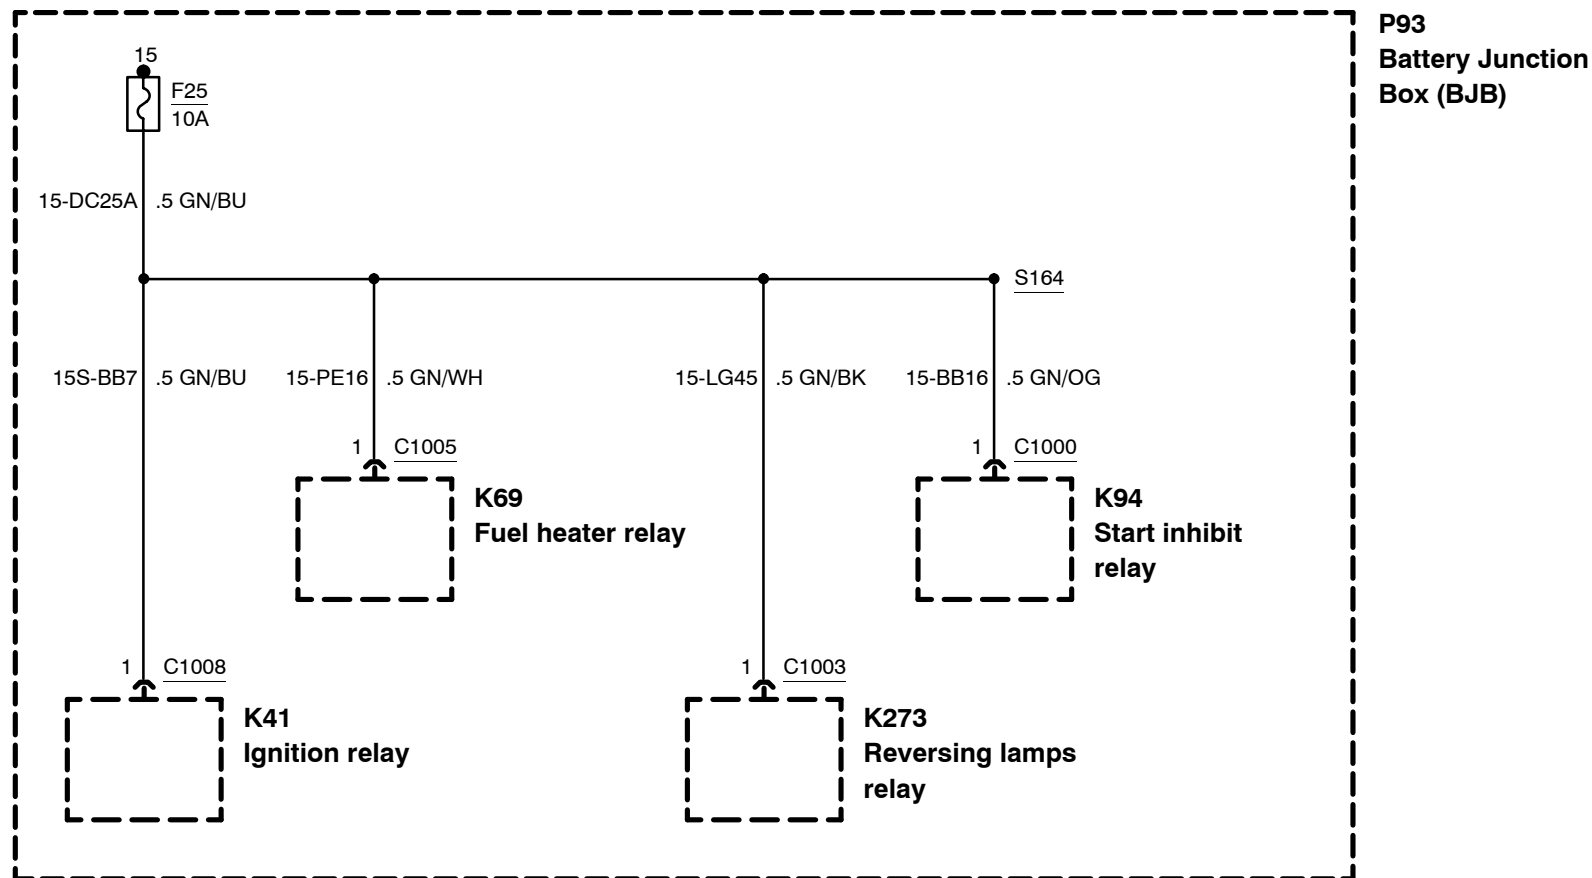


# Fuse Details – F26, F27, F28

02/2008  
700-03-00-17  
2008.25  
Focus

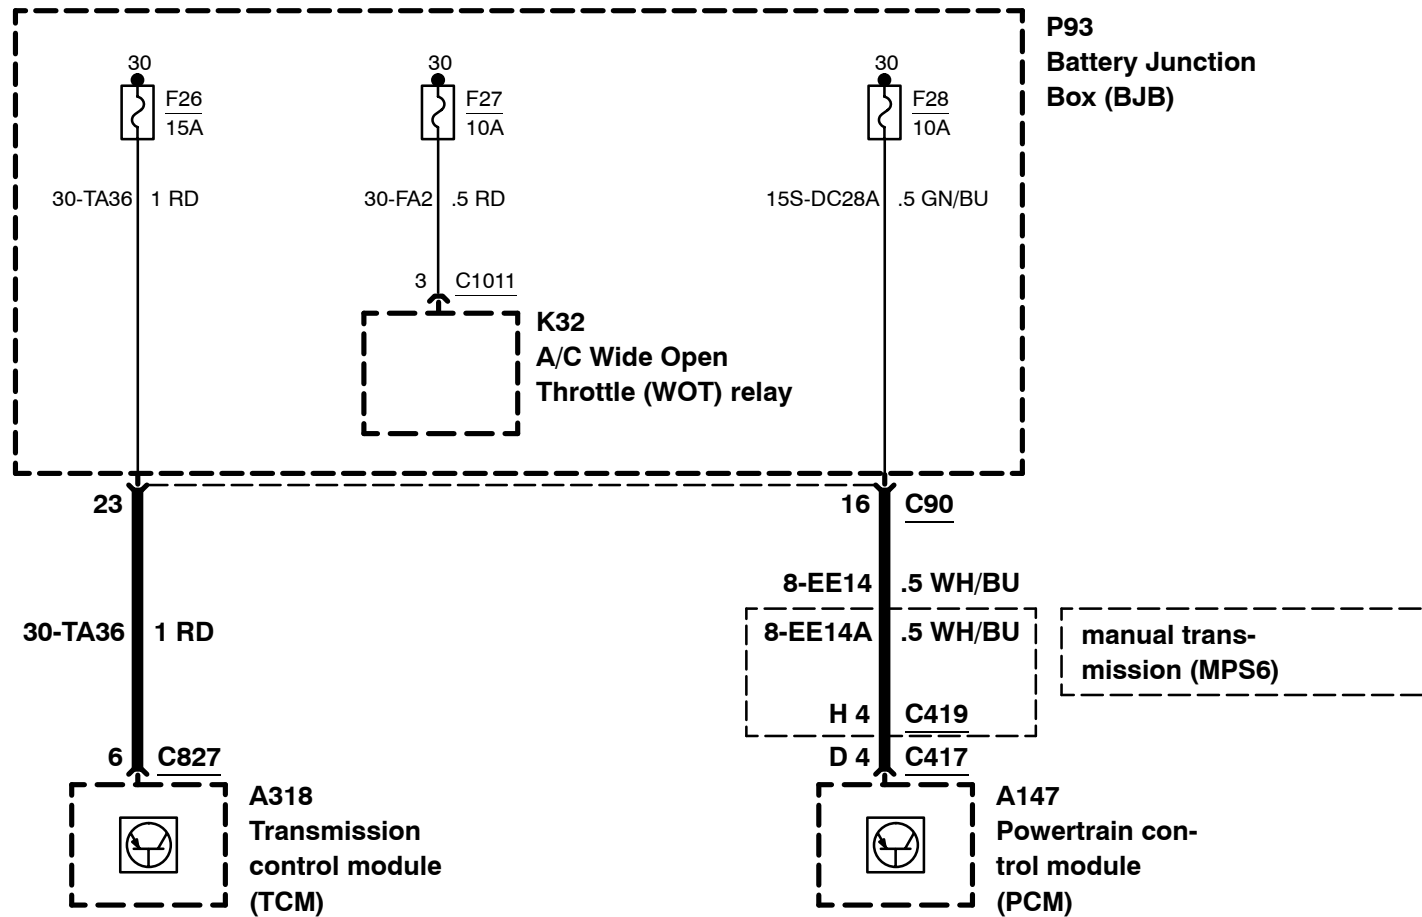


# Fuse Details – F30, 1.6L (Z6), 1.8/2.0L Duratec–HE (MI4) automatic transmission

02/2008  
700-03-00-18  
2008.25  
Focus

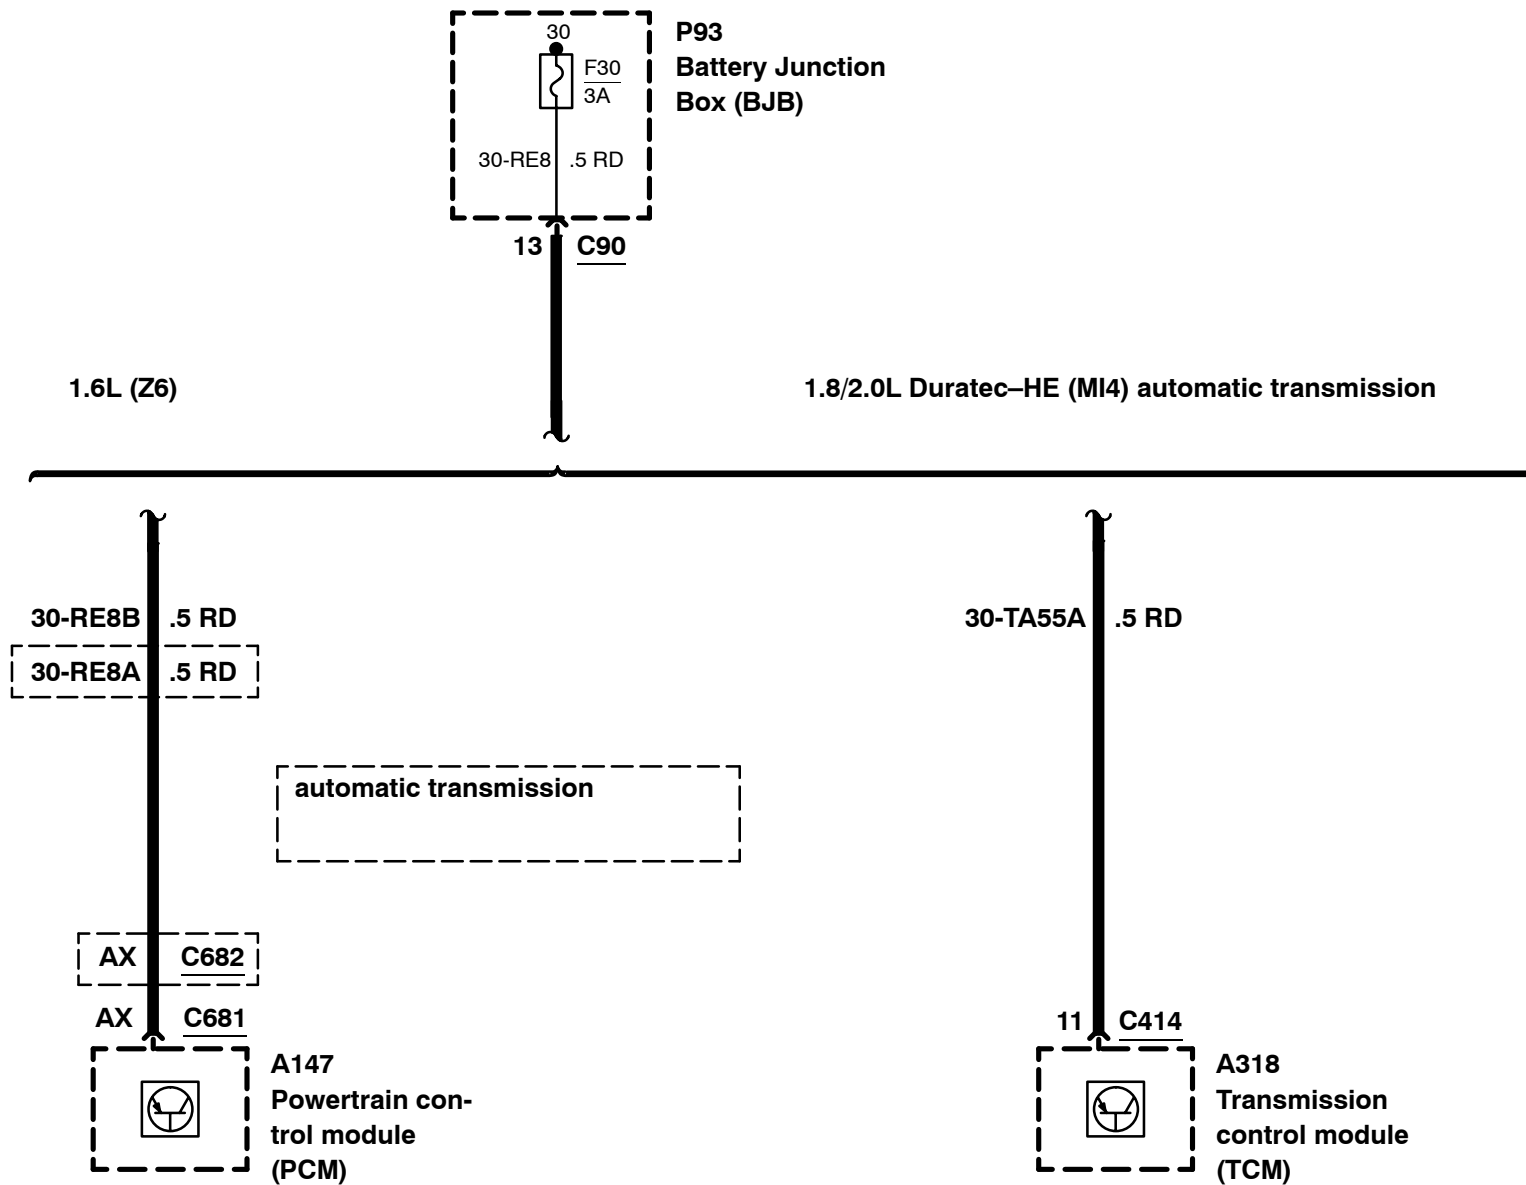


# Fuse Details – F30, 2.0L Duratorq–TDCi (DW) Diesel

02/2008  
700-03-00-19  
2008.25  
Focus

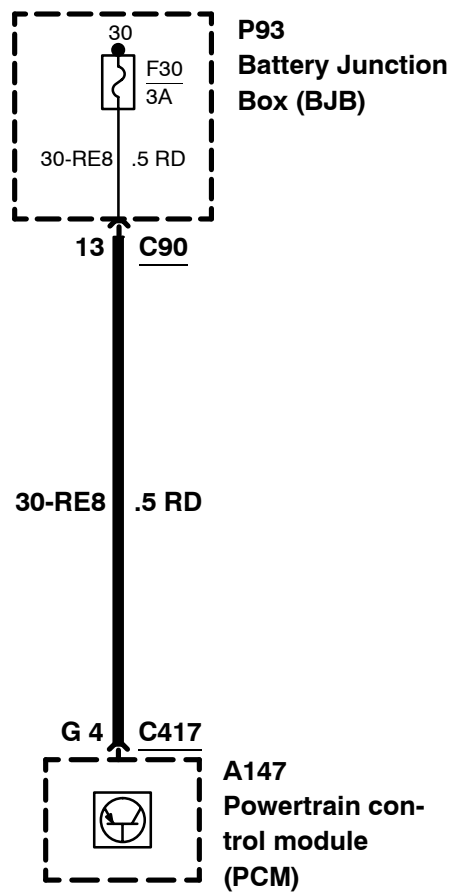

# Fuse Details – F31, except 1.6L (Z6)


02/2008  
700-03-00-20  
2008.25  
Focus

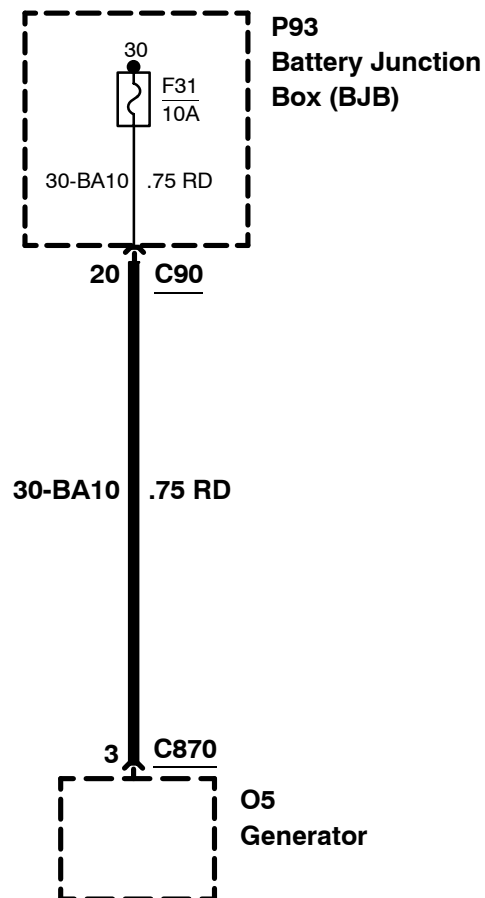




# Fuse Details – F32, automatic transmission

02/2008  
700-03-00-21  
2008.25  
Focus

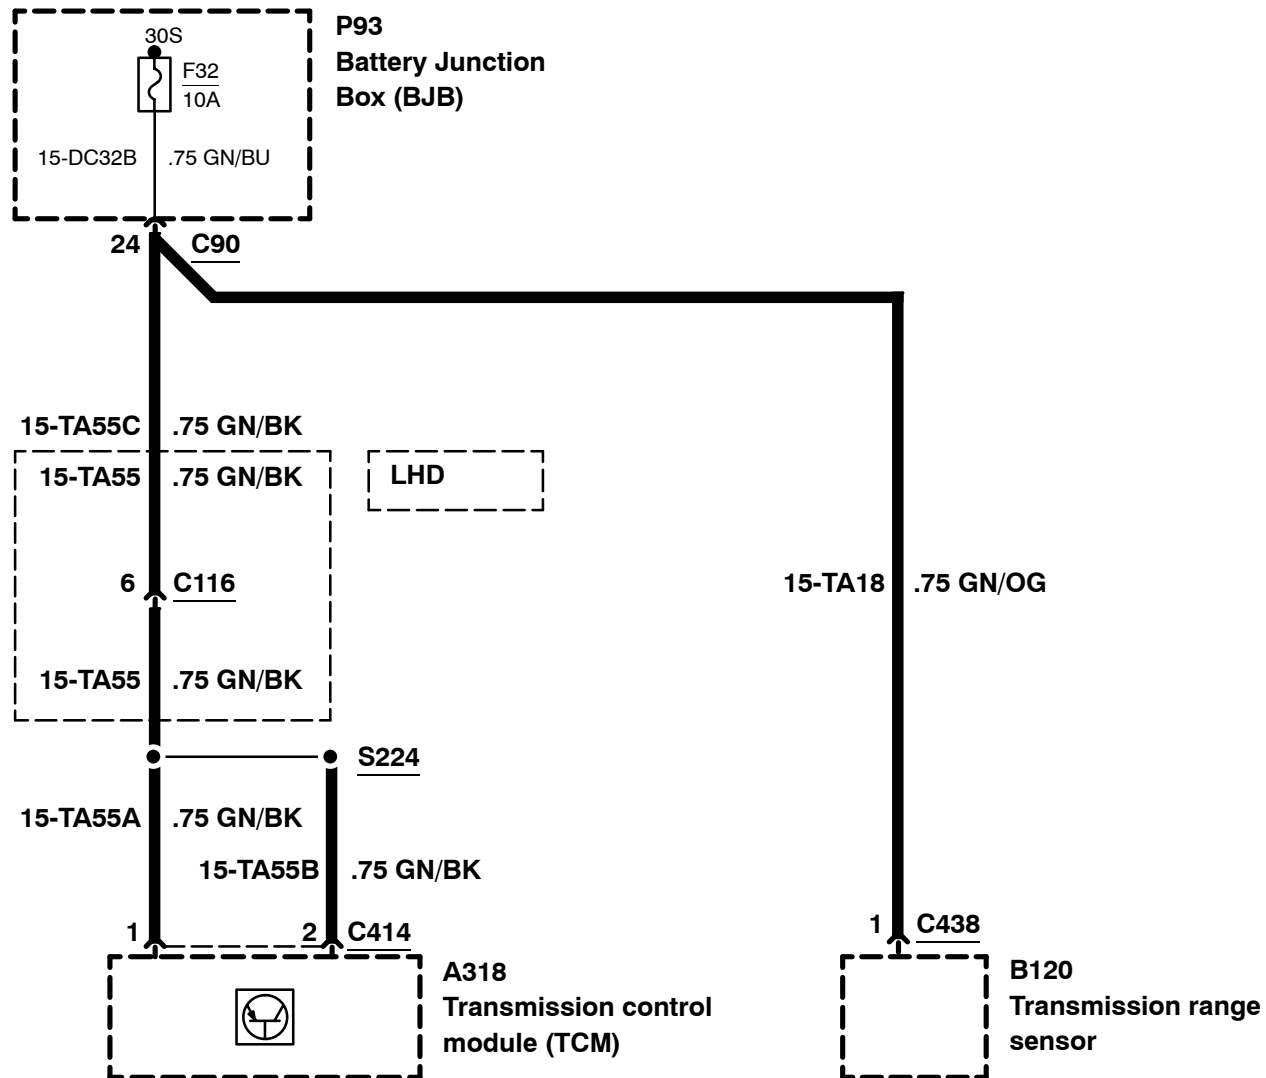


# Fuse Details – F33, 1.6L (Z6)

02/2008  
700-03-00-22  
2008.25  
Focus

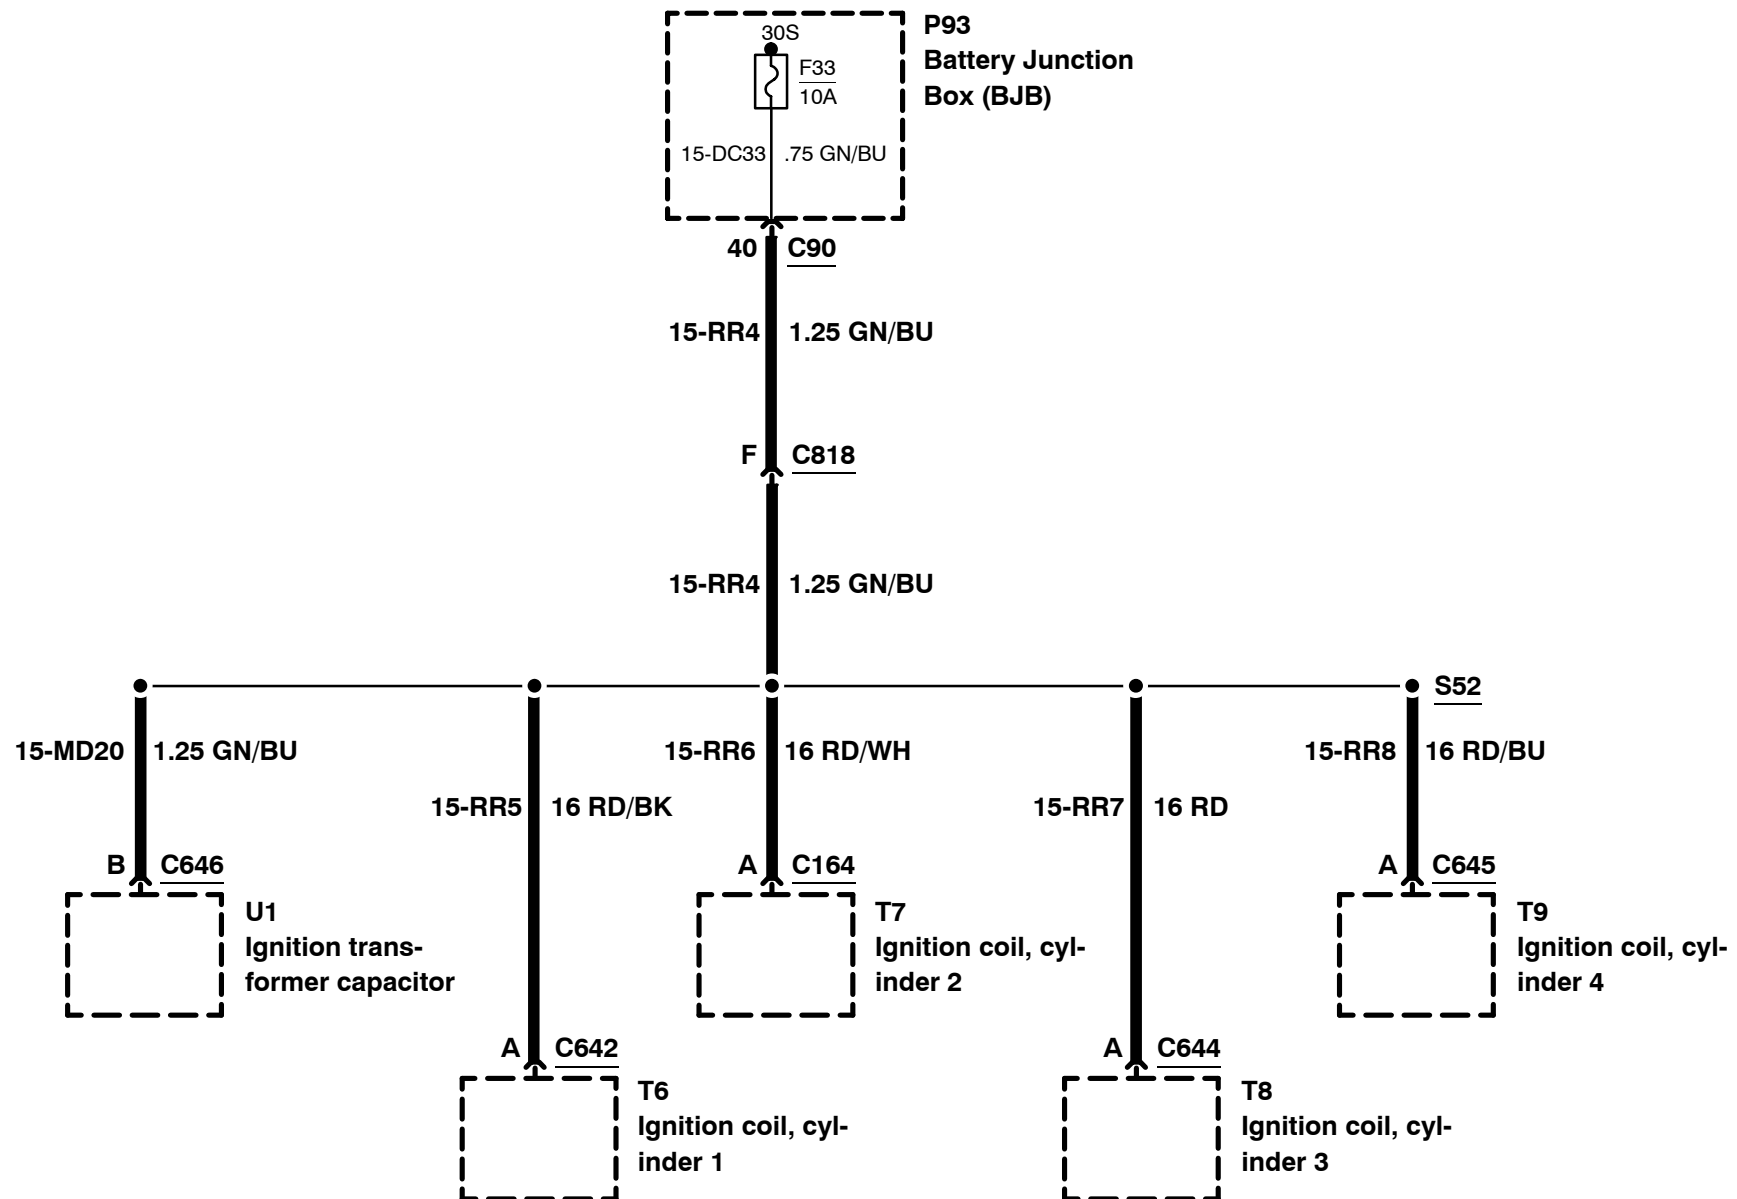


# Fuse Details – F33, 1.8/2.0L Duratec–HE (MI4)

02/2008  
700-03-00-23  
2008.25  
Focus

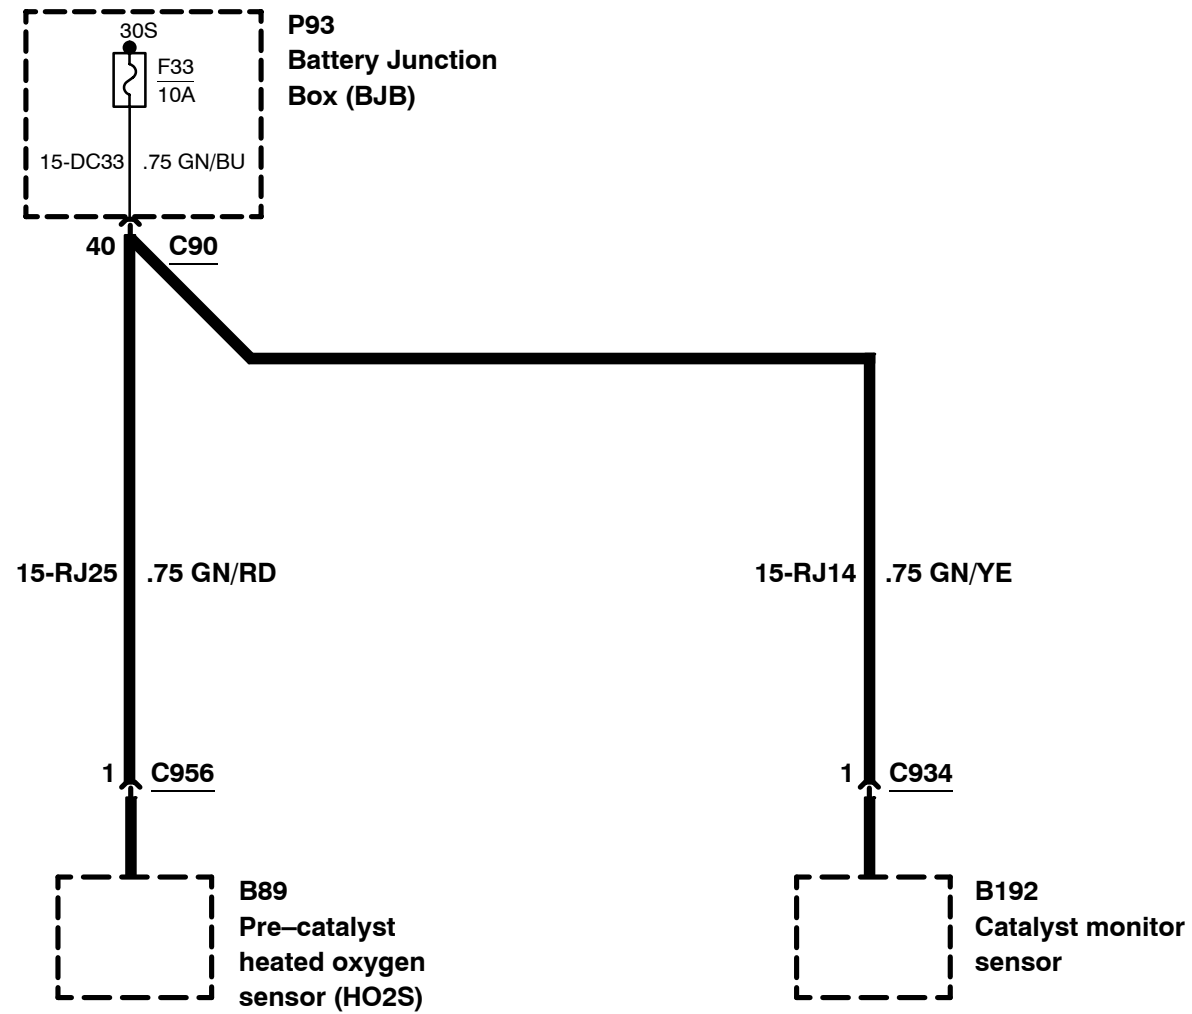


# Fuse Details – F33, 2.0L Duratorq–TDCi (DW) Diesel

02/2008  
700-03-00-24  
2008.25  
Focus

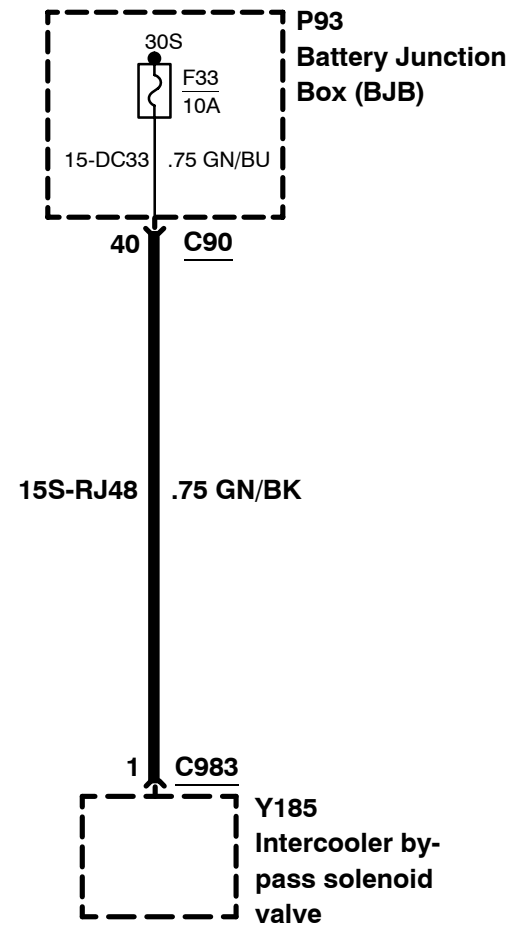


# Fuse Details – F34, 1.6L (Z6)

02/2008  
700-03-00-25  
2008.25  
Focus

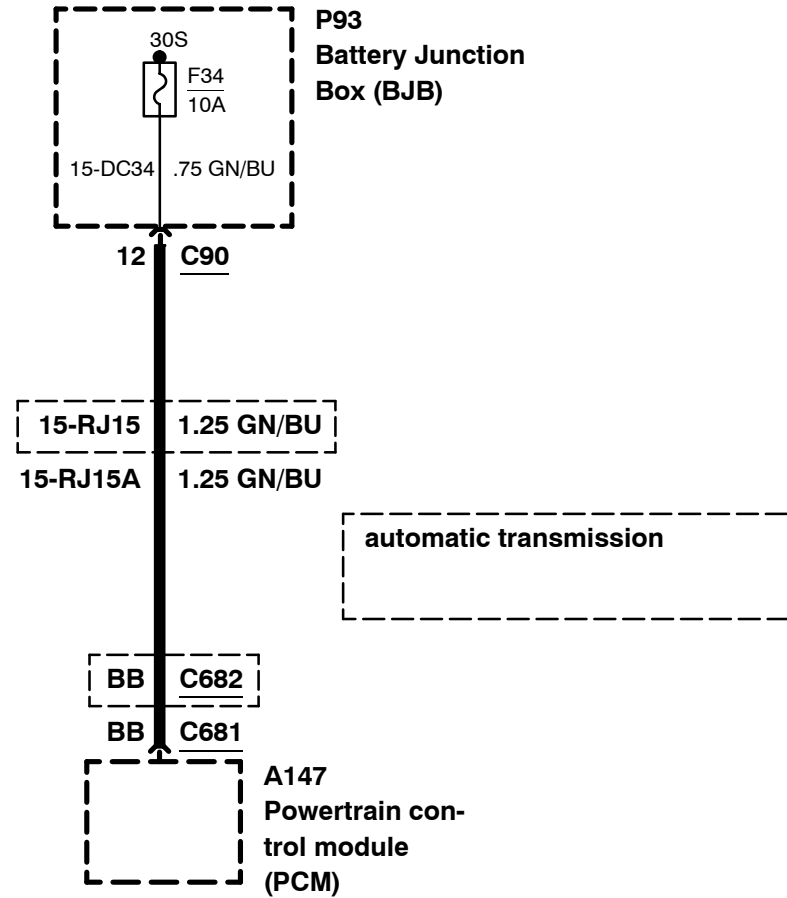


# Fuse Details – F34, 1.8/2.0L Duratec–HE (MI4)

02/2008  
700-03-00-26  
2008.25  
Focus

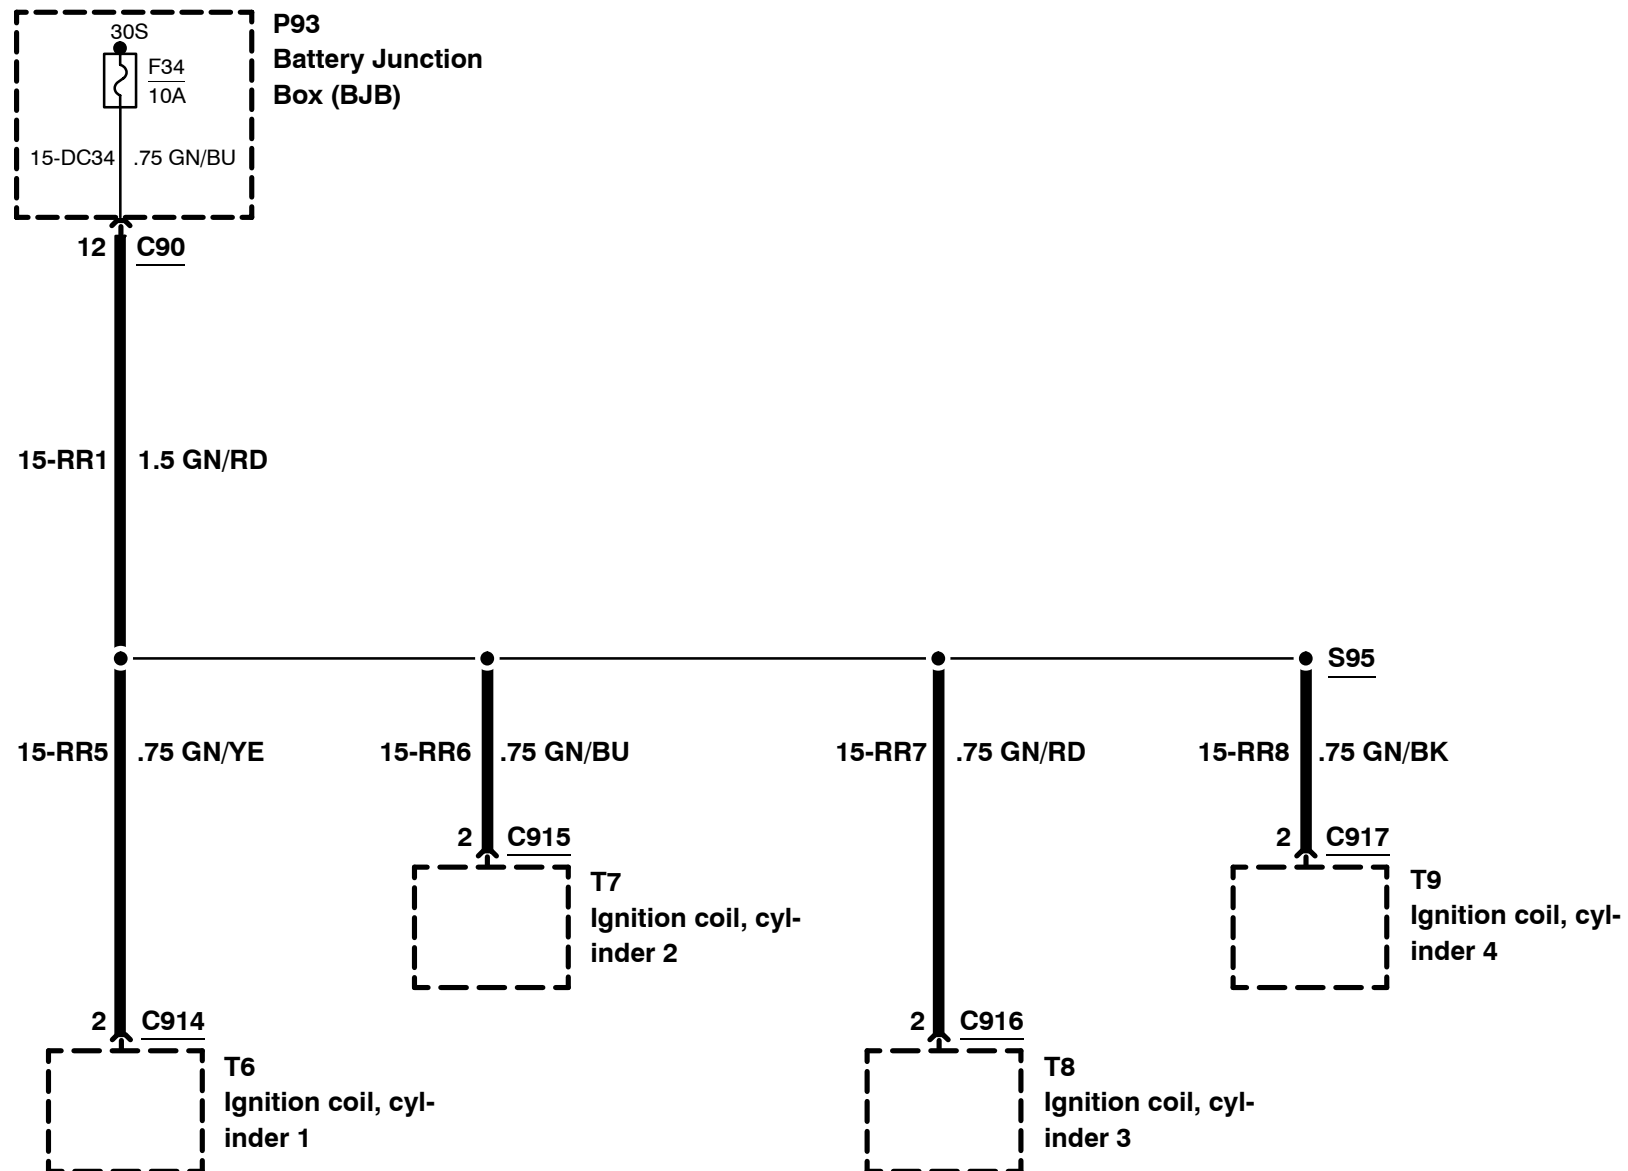


# Fuse Details – F34, 2.0L Duratorq–TDCi (DW) Diesel

02/2008  
700-03-00-27  
2008.25  
Focus

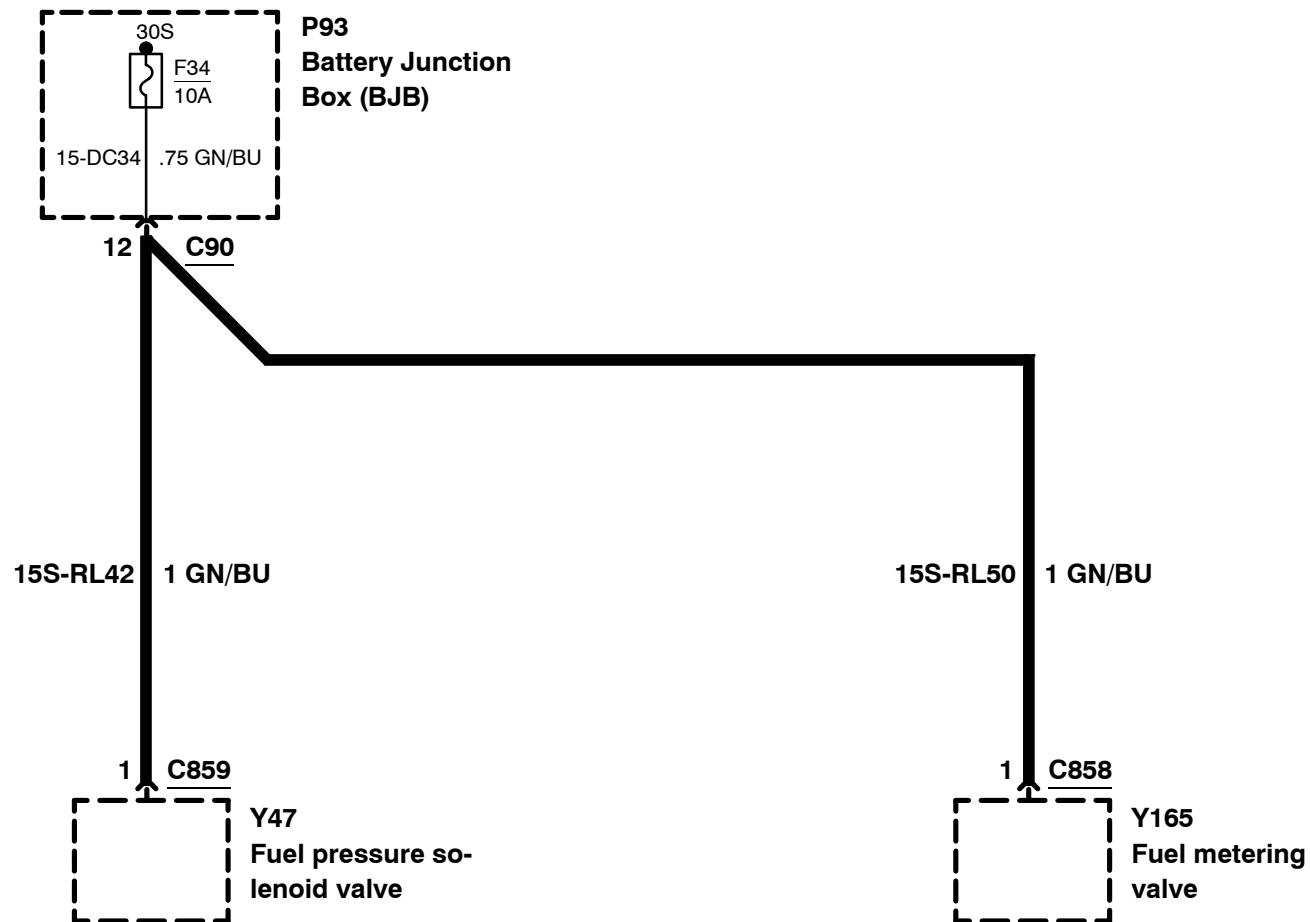

## Fuse Details – F35, 1.6L (Z6)


02/2008  
700-03-00-28  
2008.25  
Focus

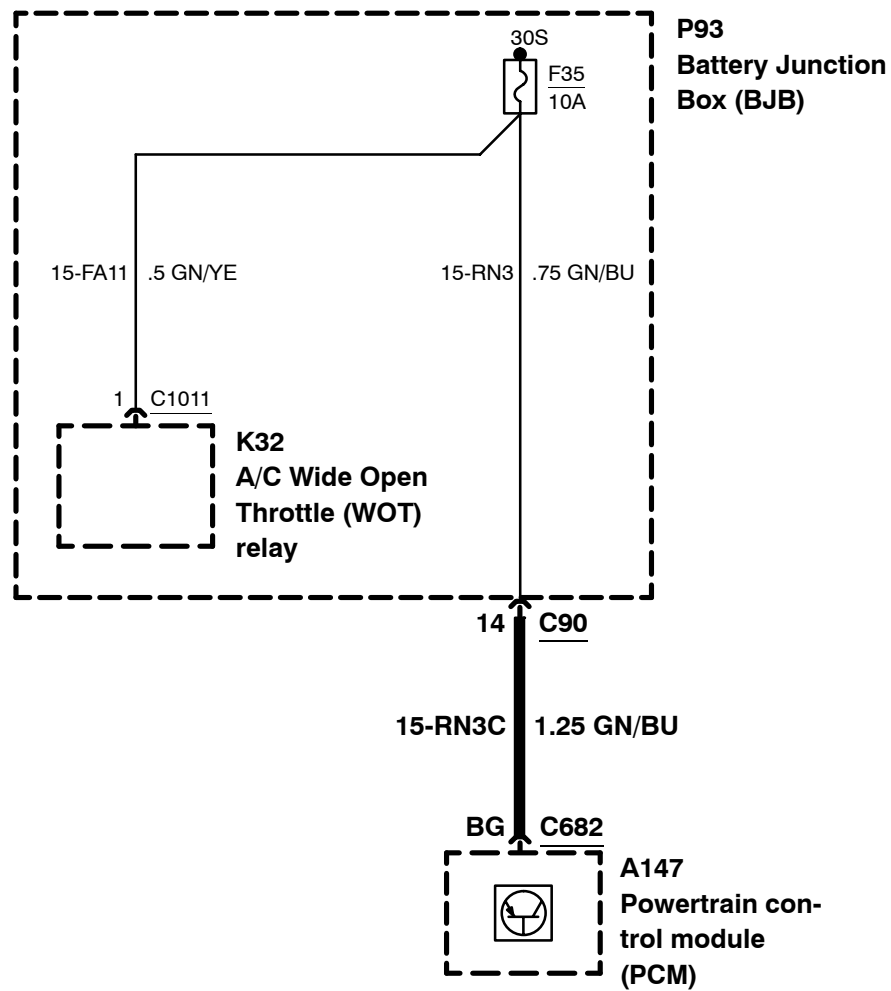




# Fuse Details – F35, 1.8/2.0L Duratec–HE (MI4)


02/2008  
700-03-00-29  
2008.25  
Focus

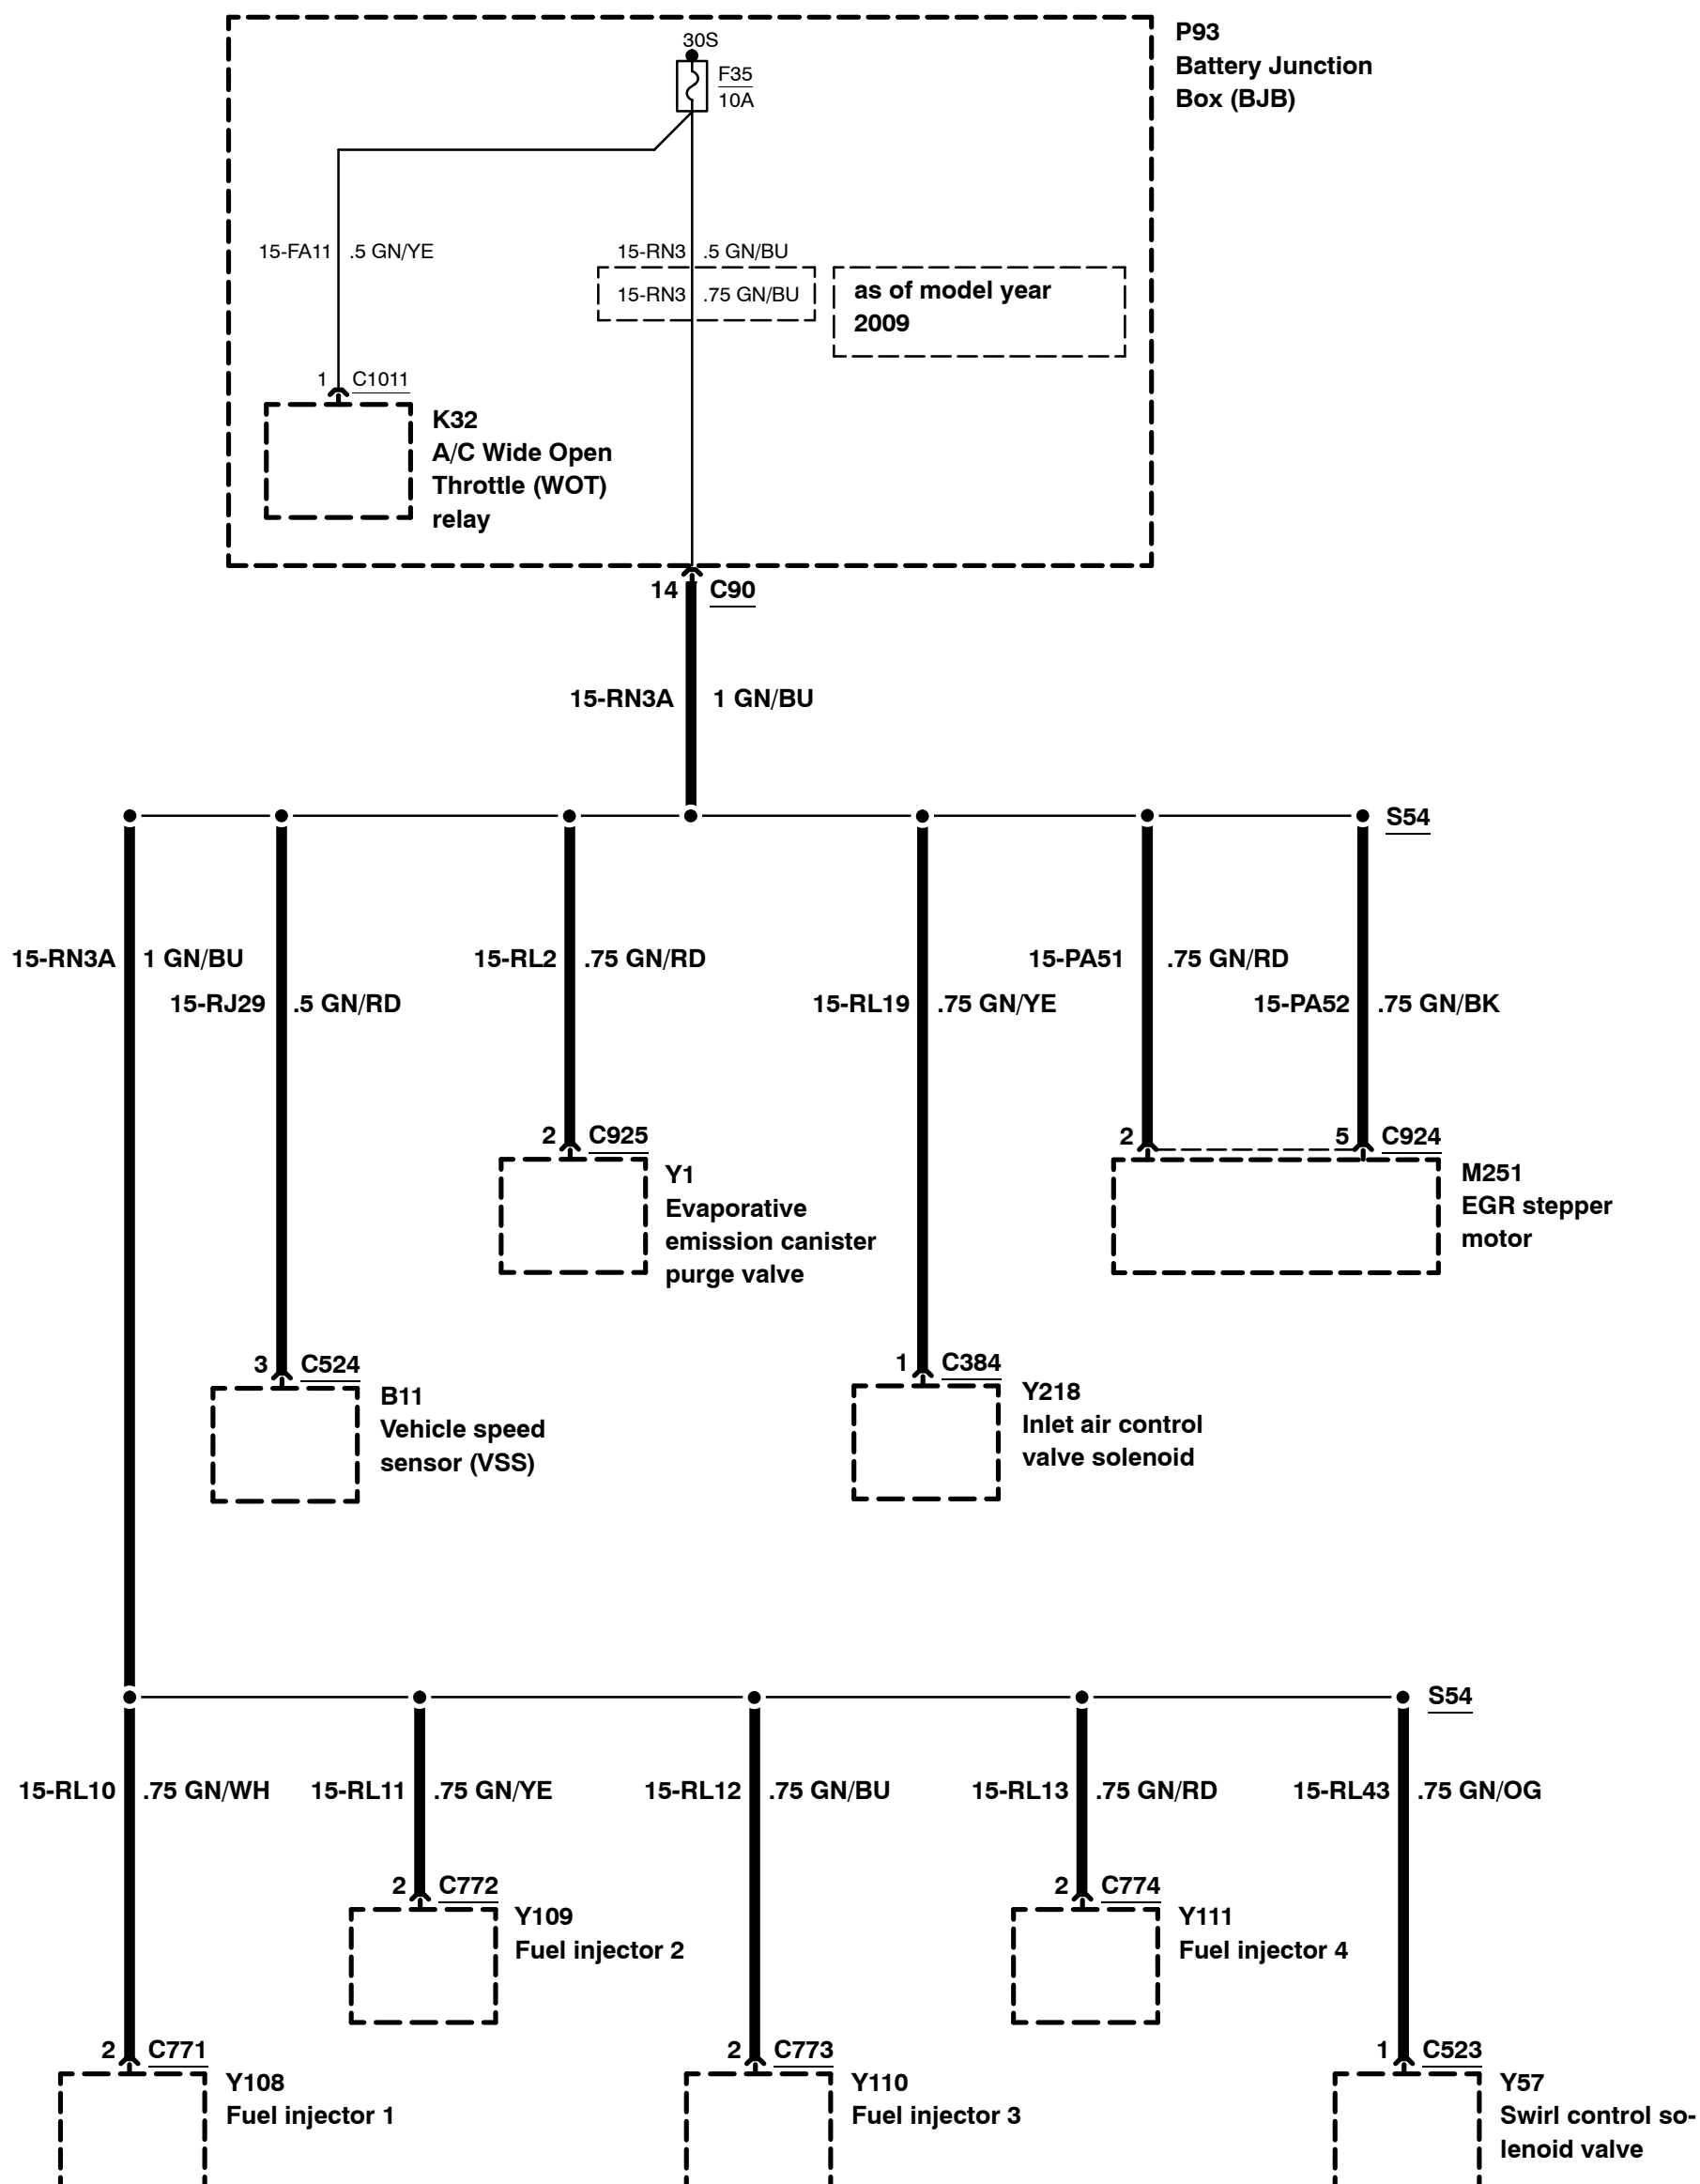

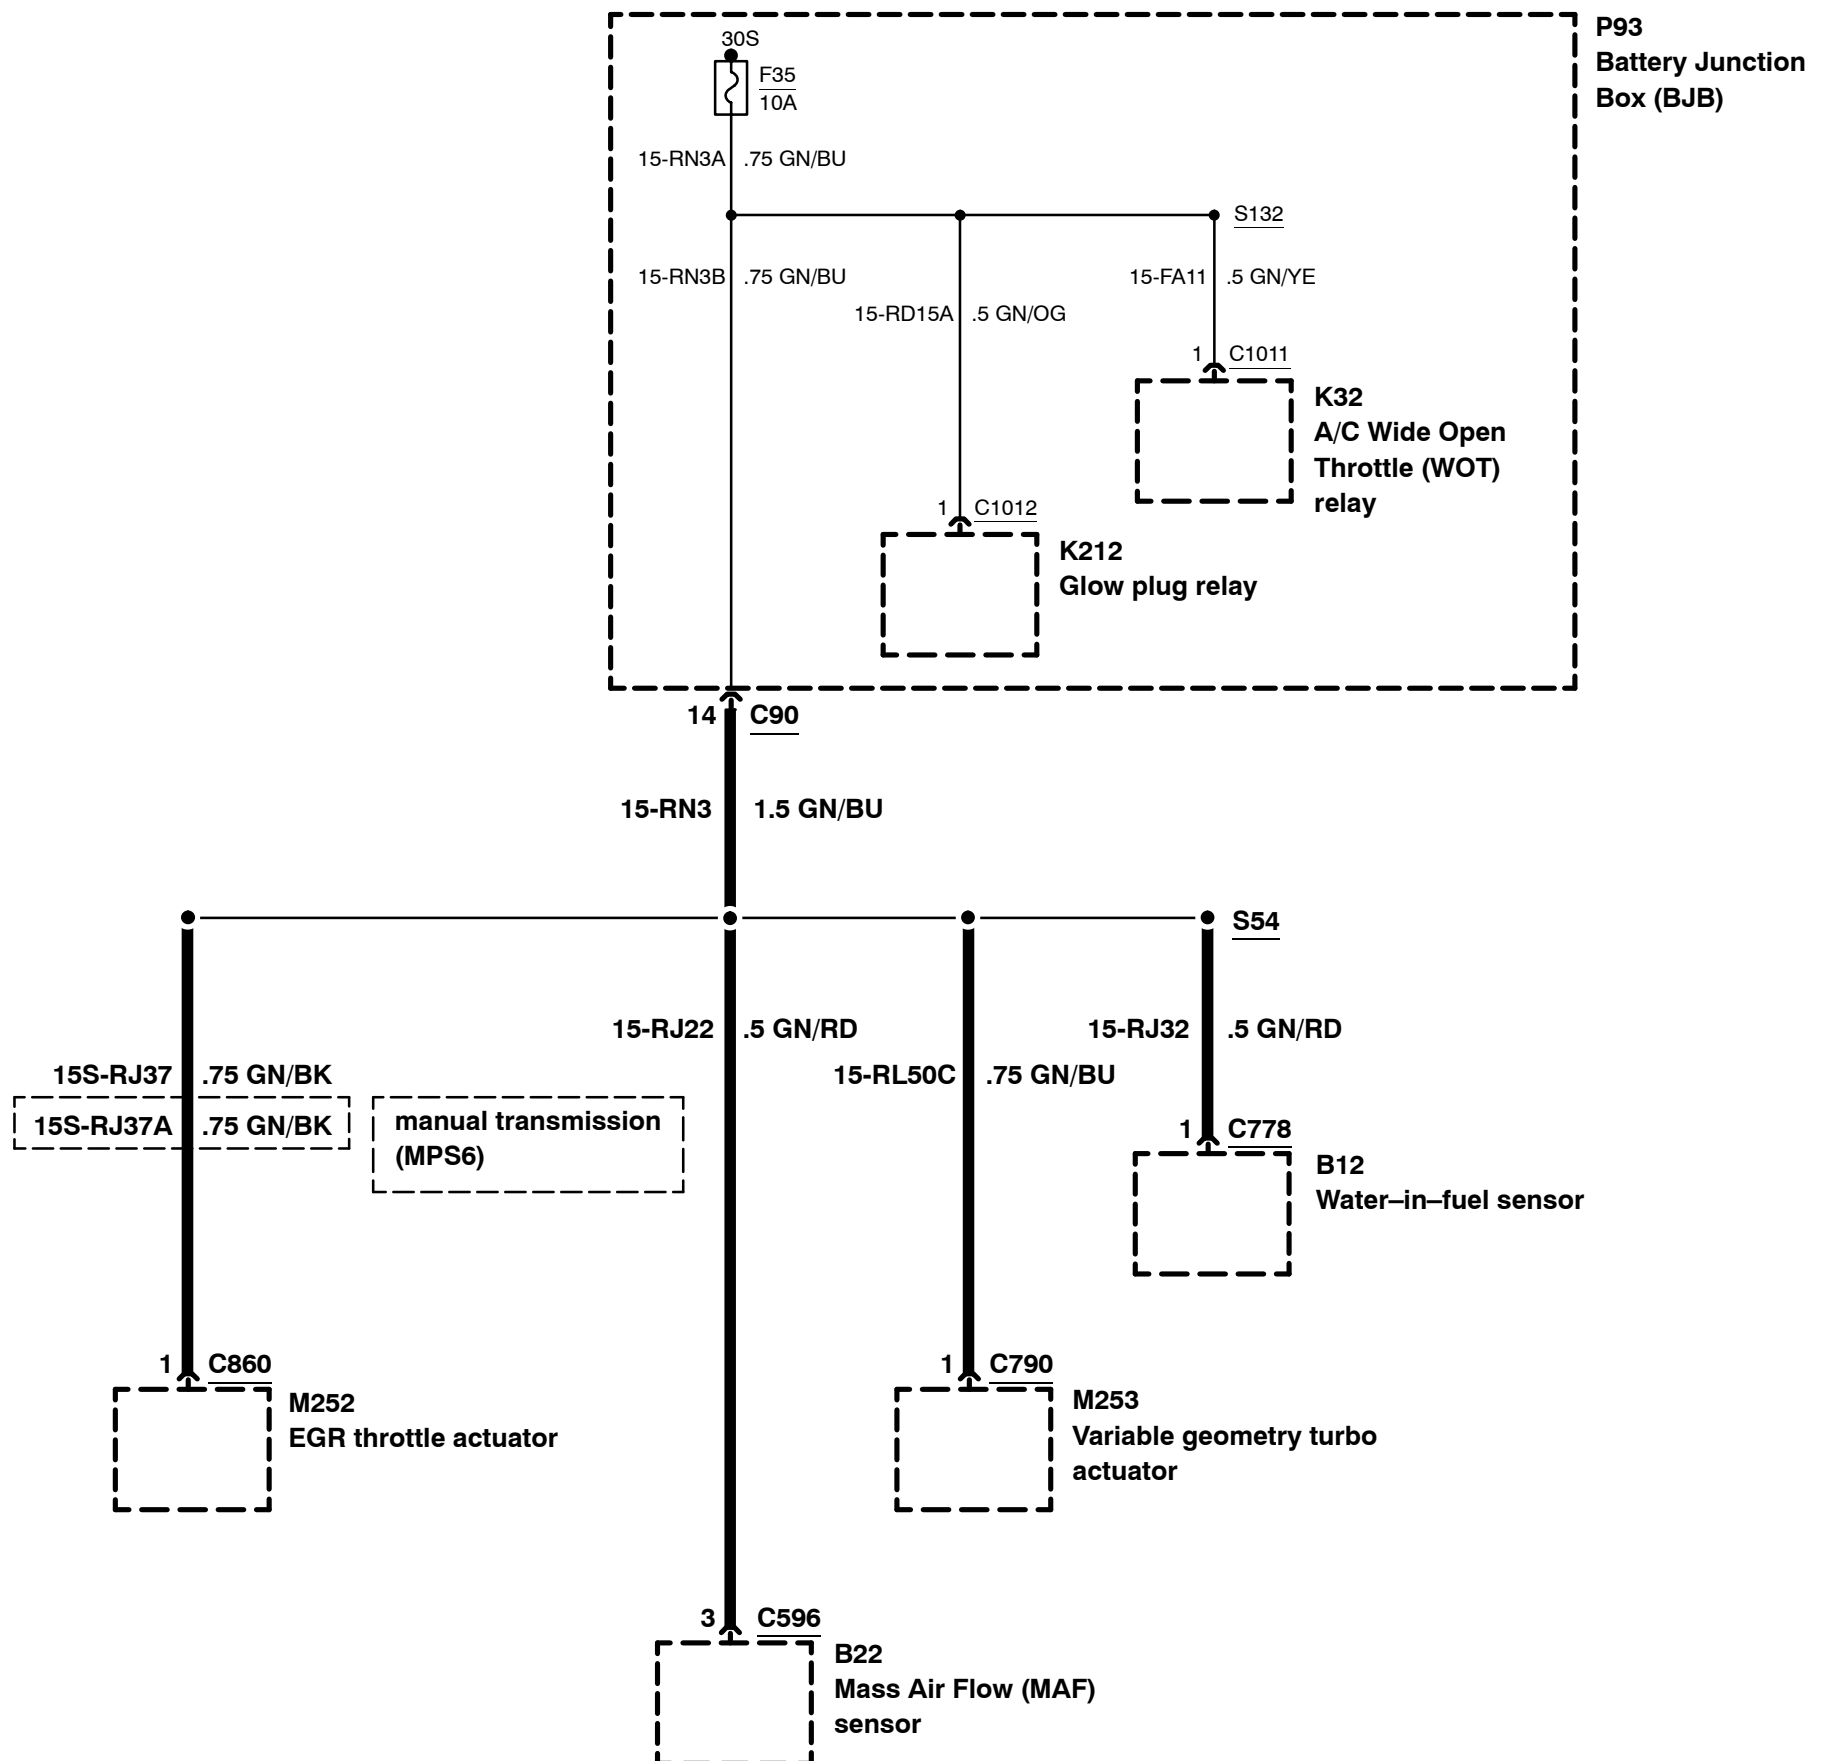


# Fuse Details – F36, 1.6L (Z6)

02/2008  
700-03-00-31  
2008.25  
Focus

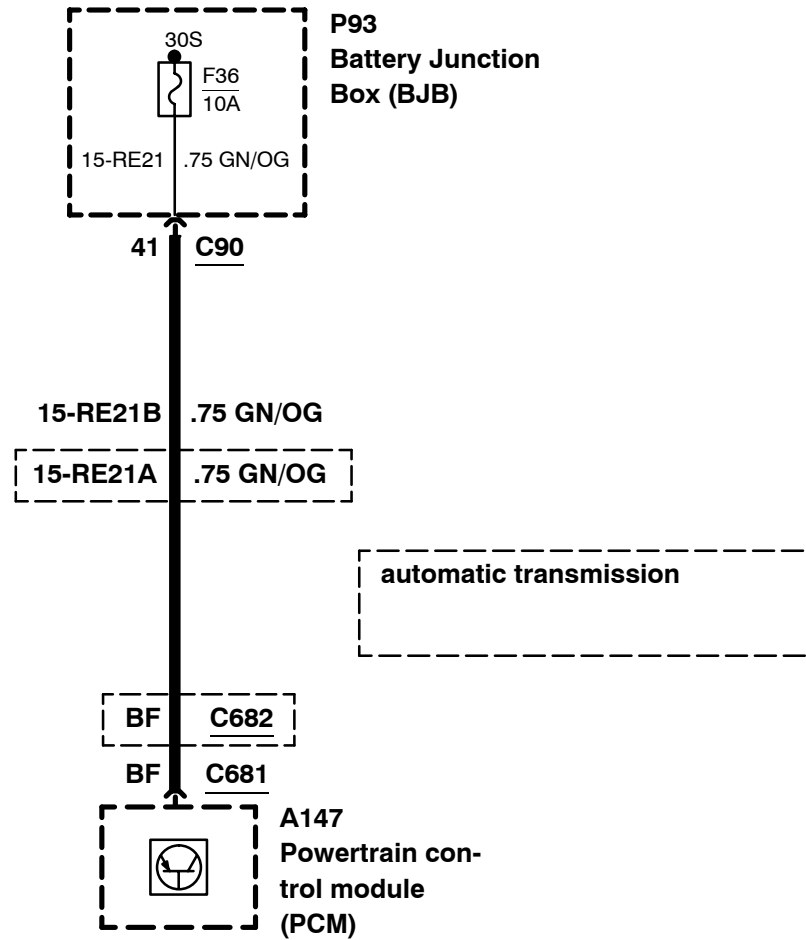


# Fuse Details – F36, 1.8/2.0L Duratec–HE (MI4)

02/2008  
700-03-00-32  
2008.25  
Focus

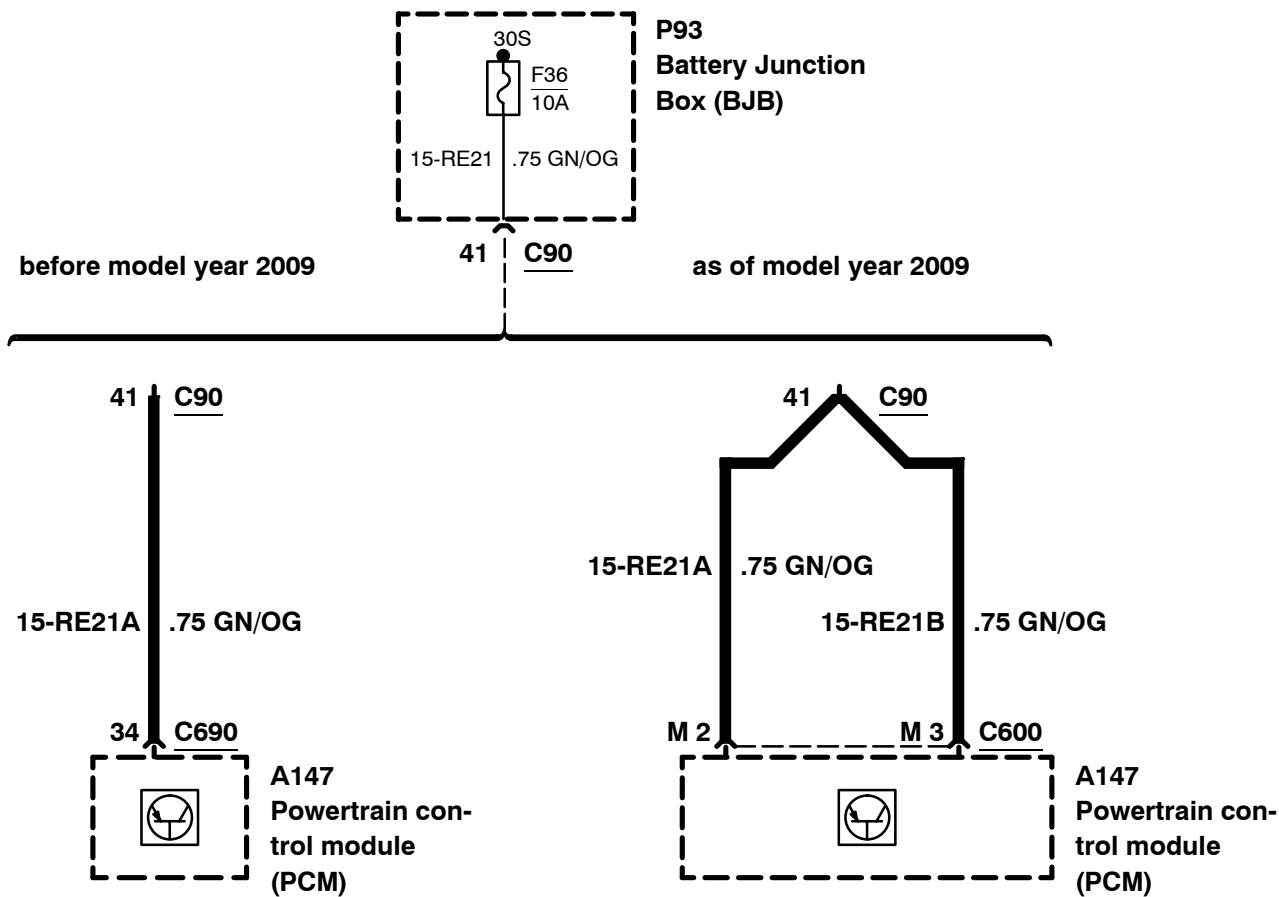


# Fuse Details – F36, 2.0L Duratorq–TDCi (DW) Diesel

02/2008  
700-03-00-33  
2008.25  
Focus

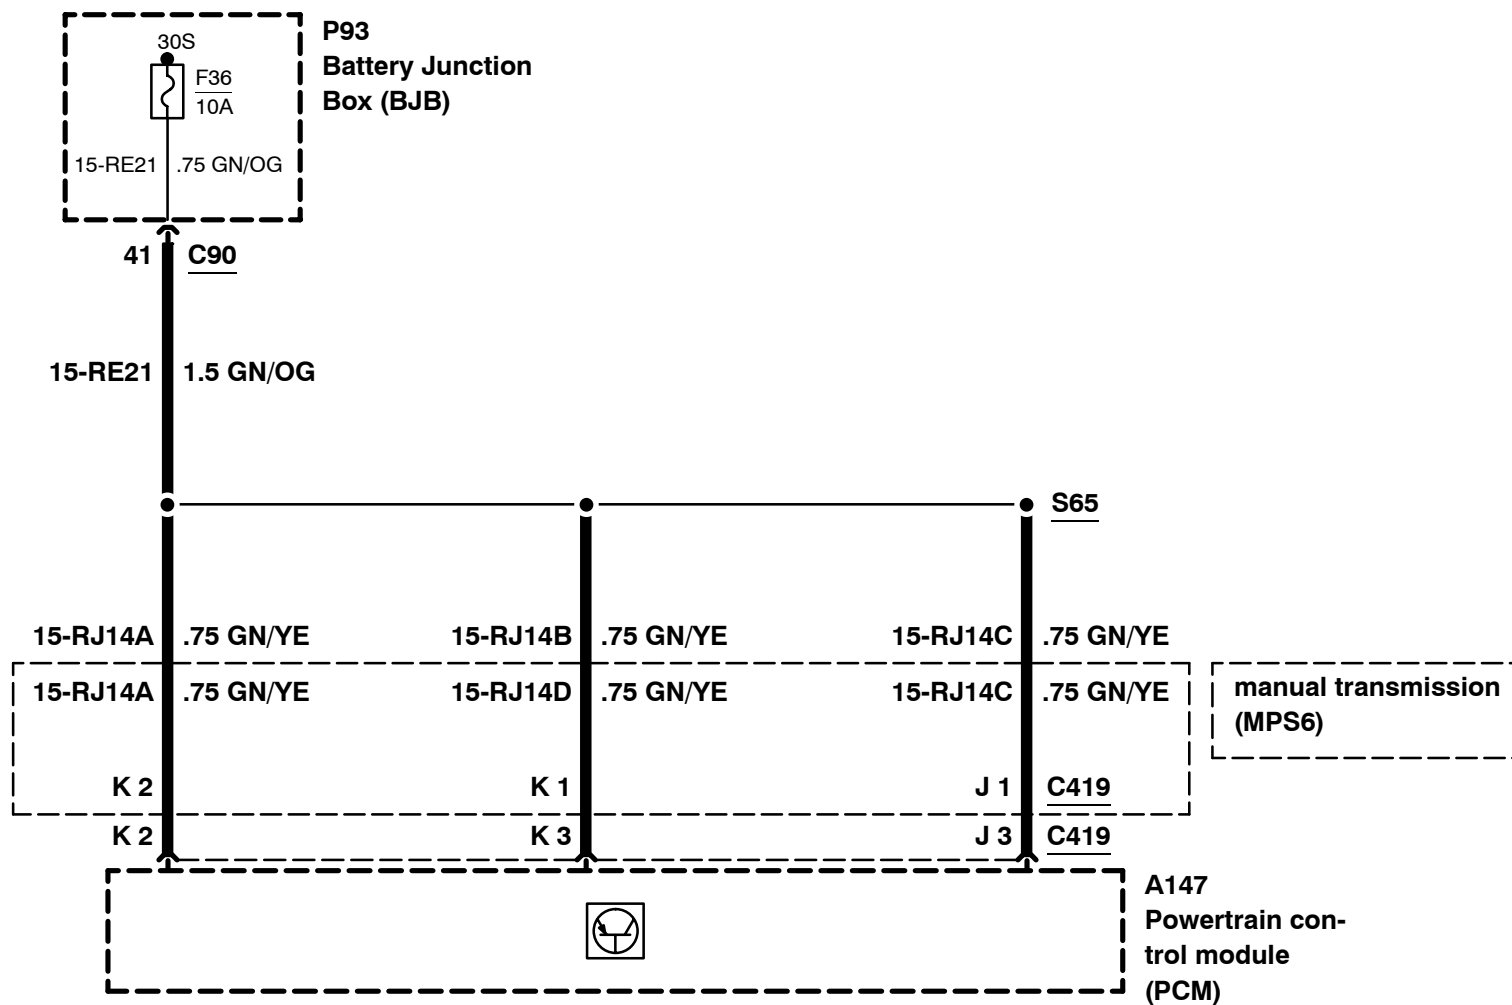


# Fuse Details – F100


02/2008  
700-03-00-34  
2008.25  
Focus

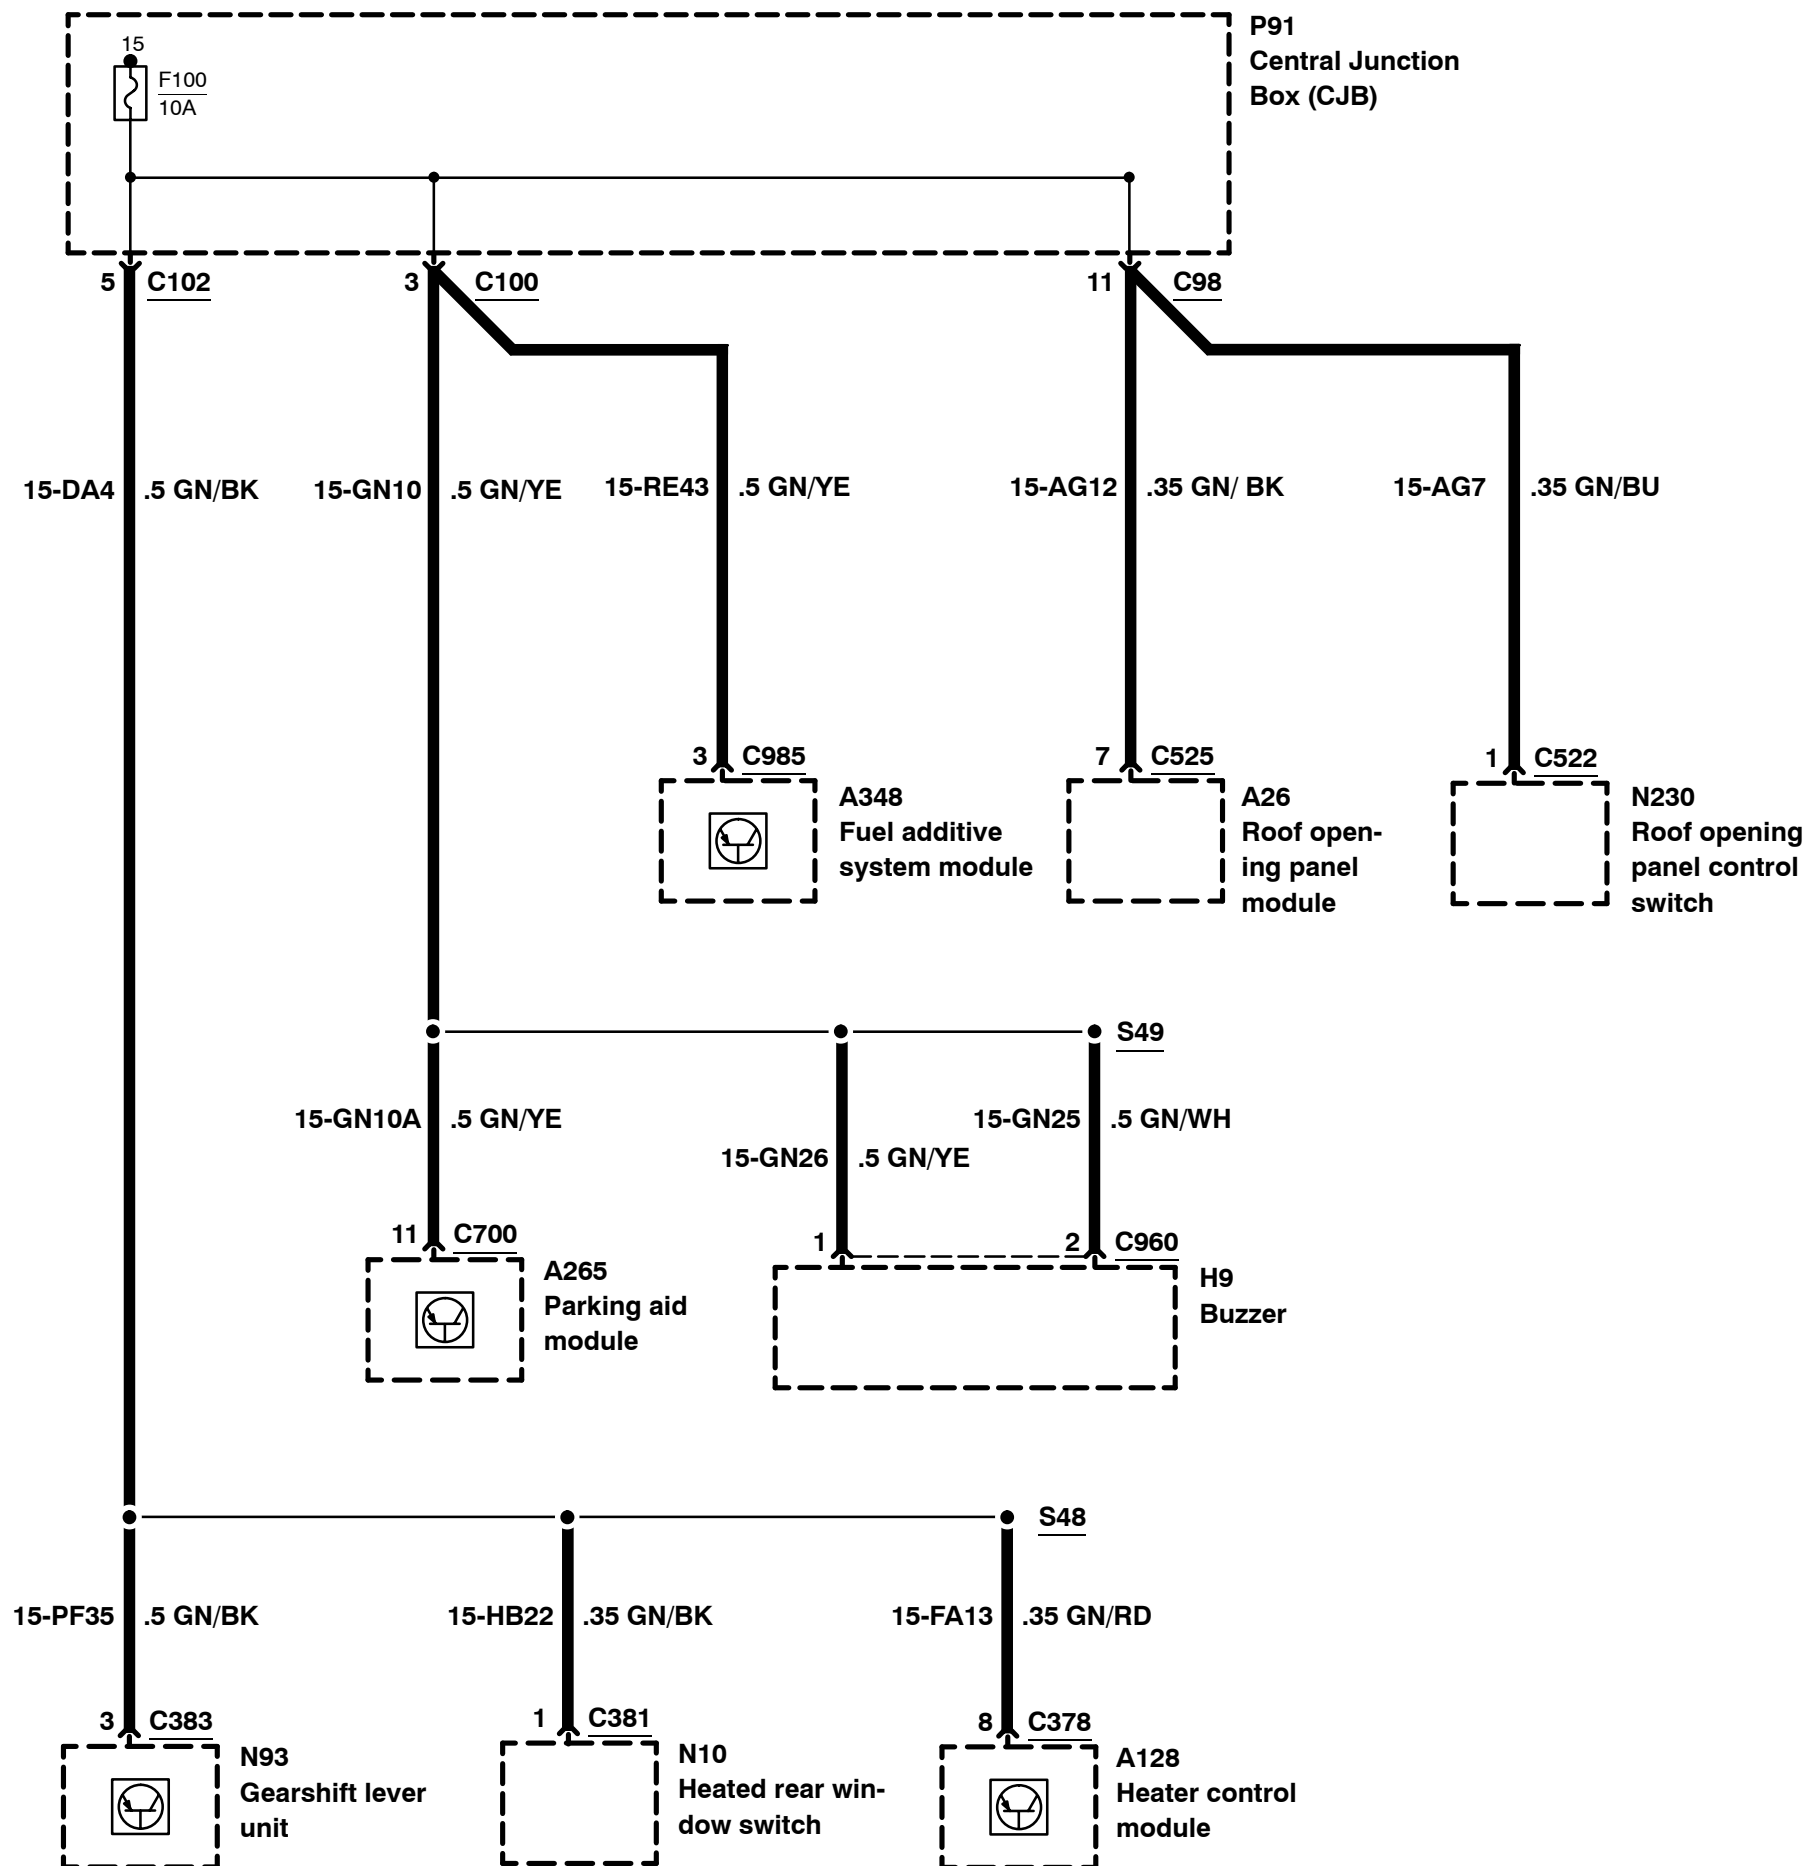

# Fuse Details – F101

02/2008  
700-03-00-35  
2008.25  
Focus

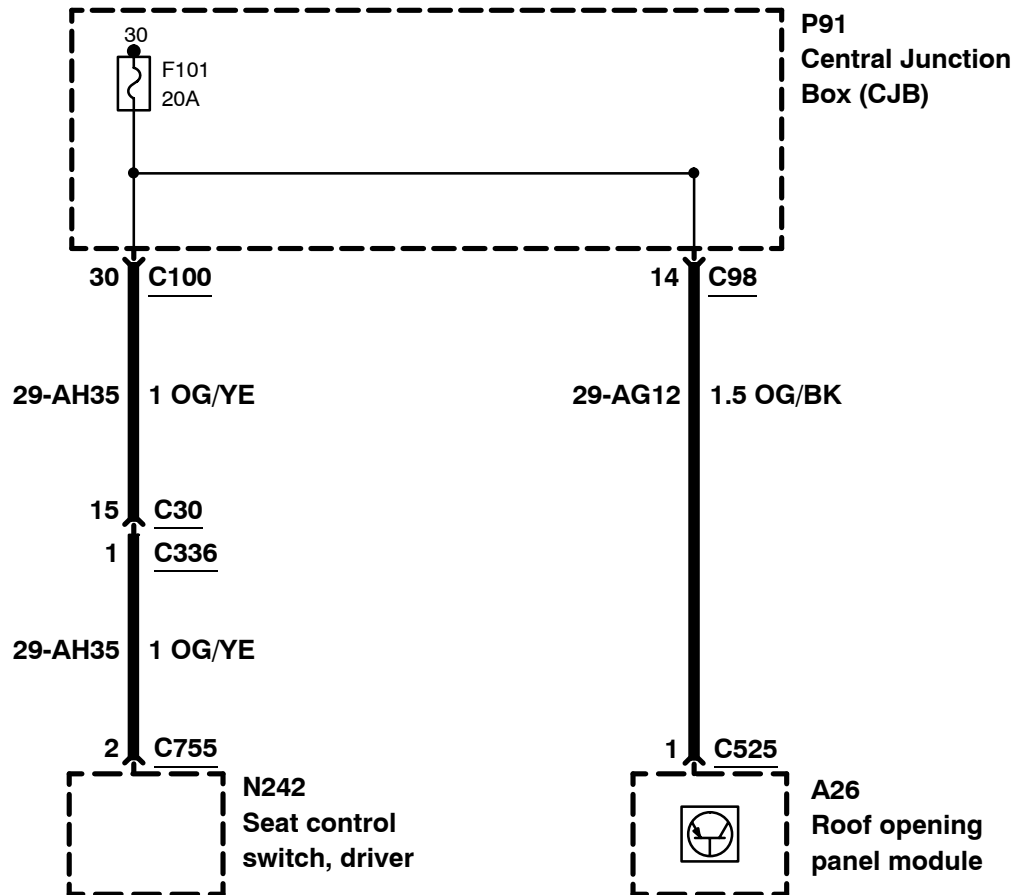


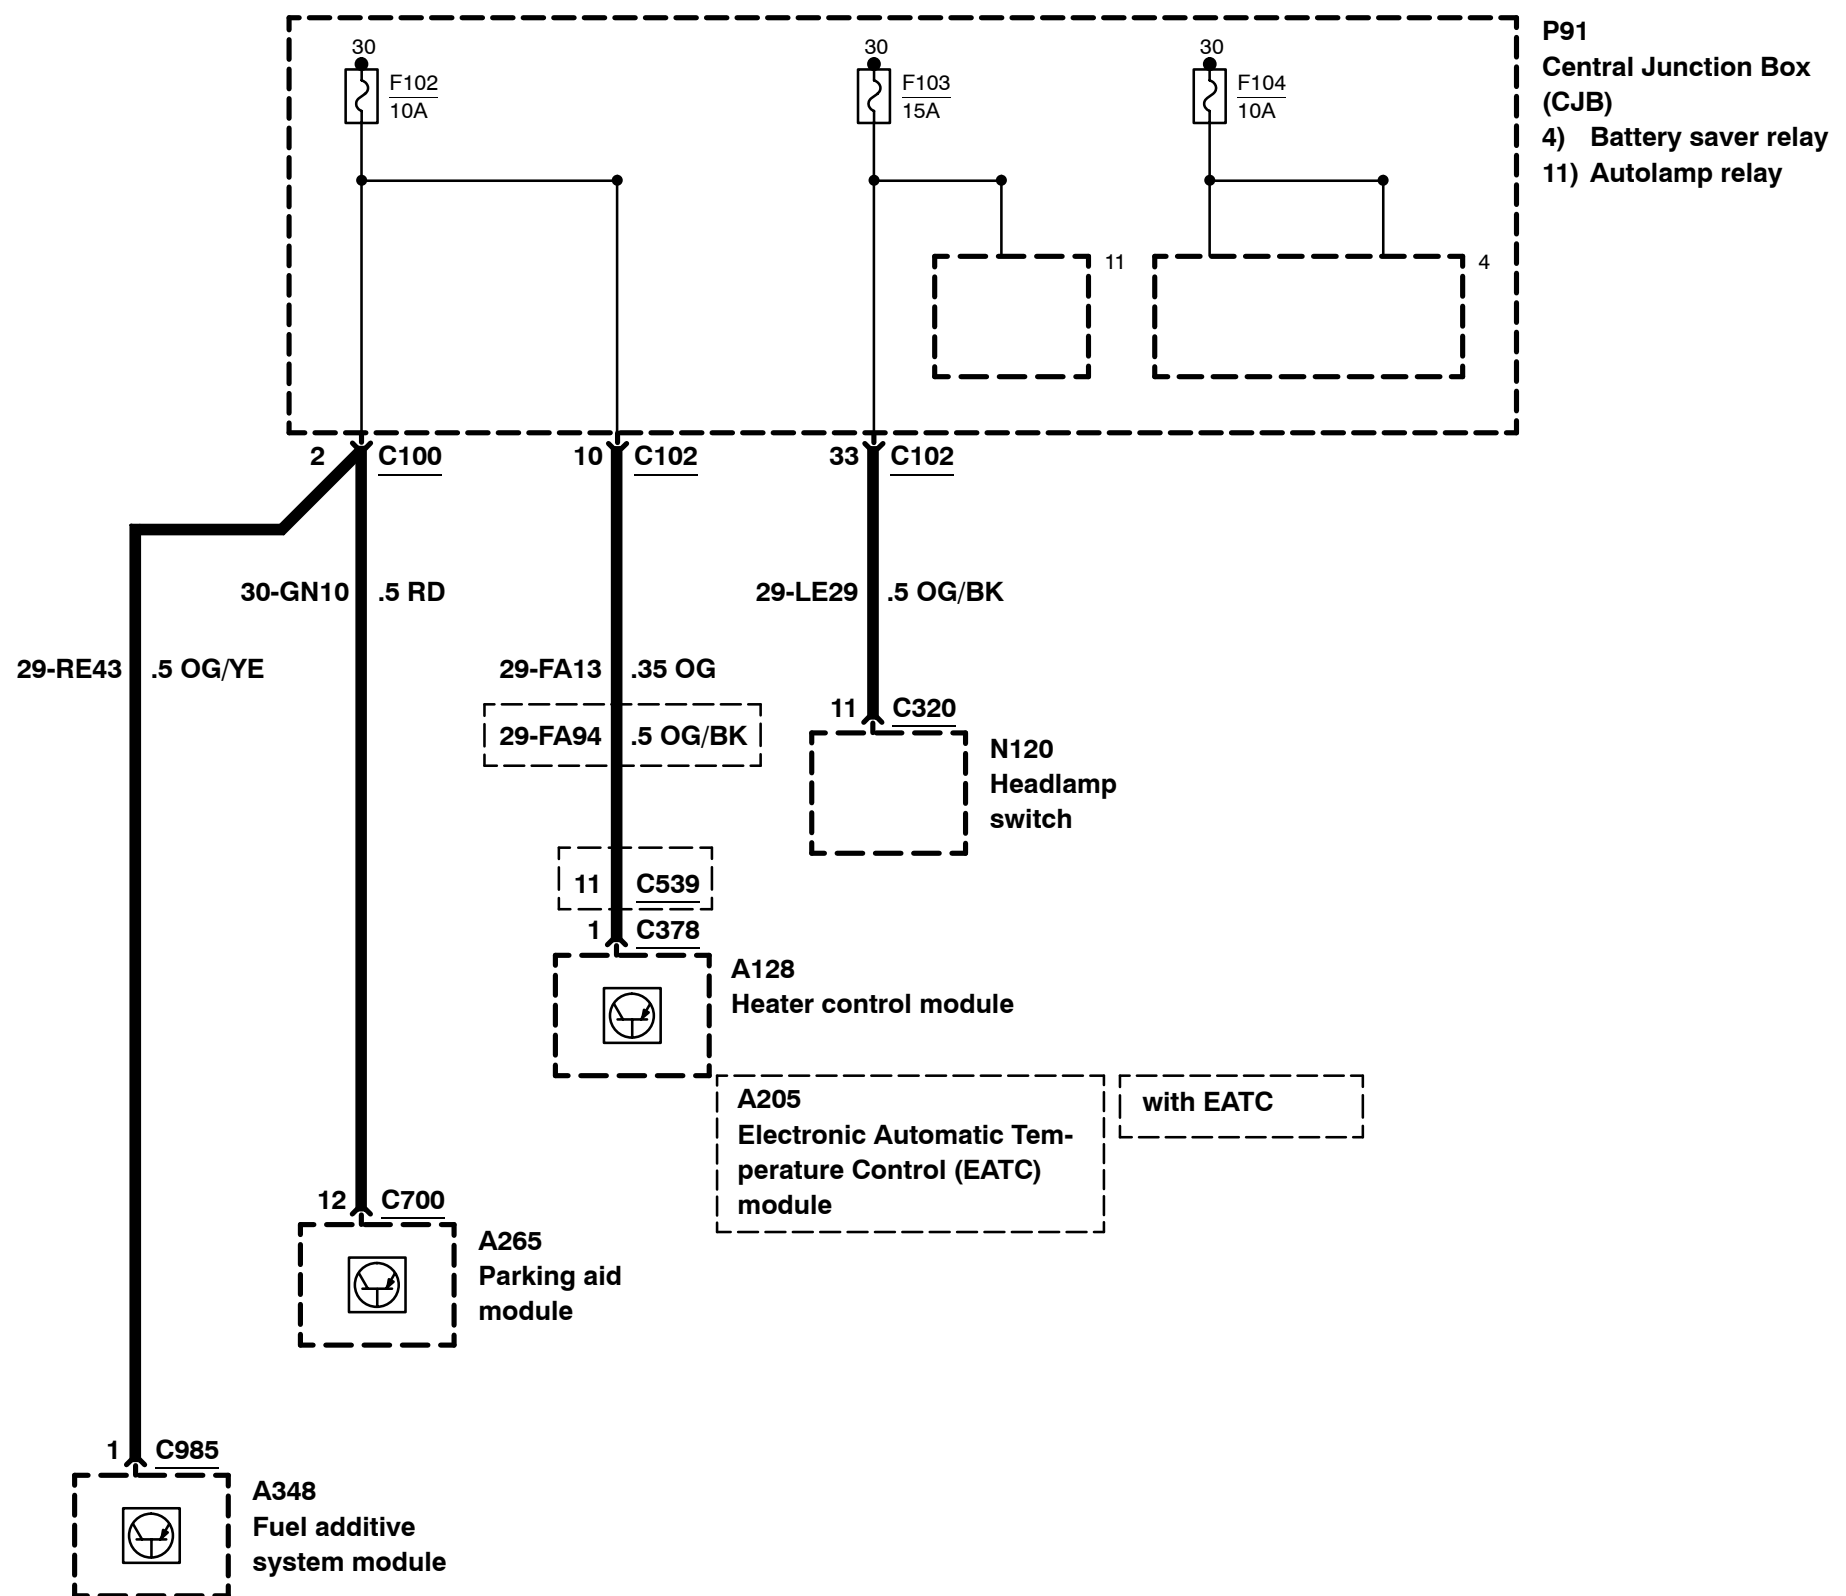




# Fuse Details – F105, F106, F107

02/2008  
700-03-00-37  
2008.25  
Focus

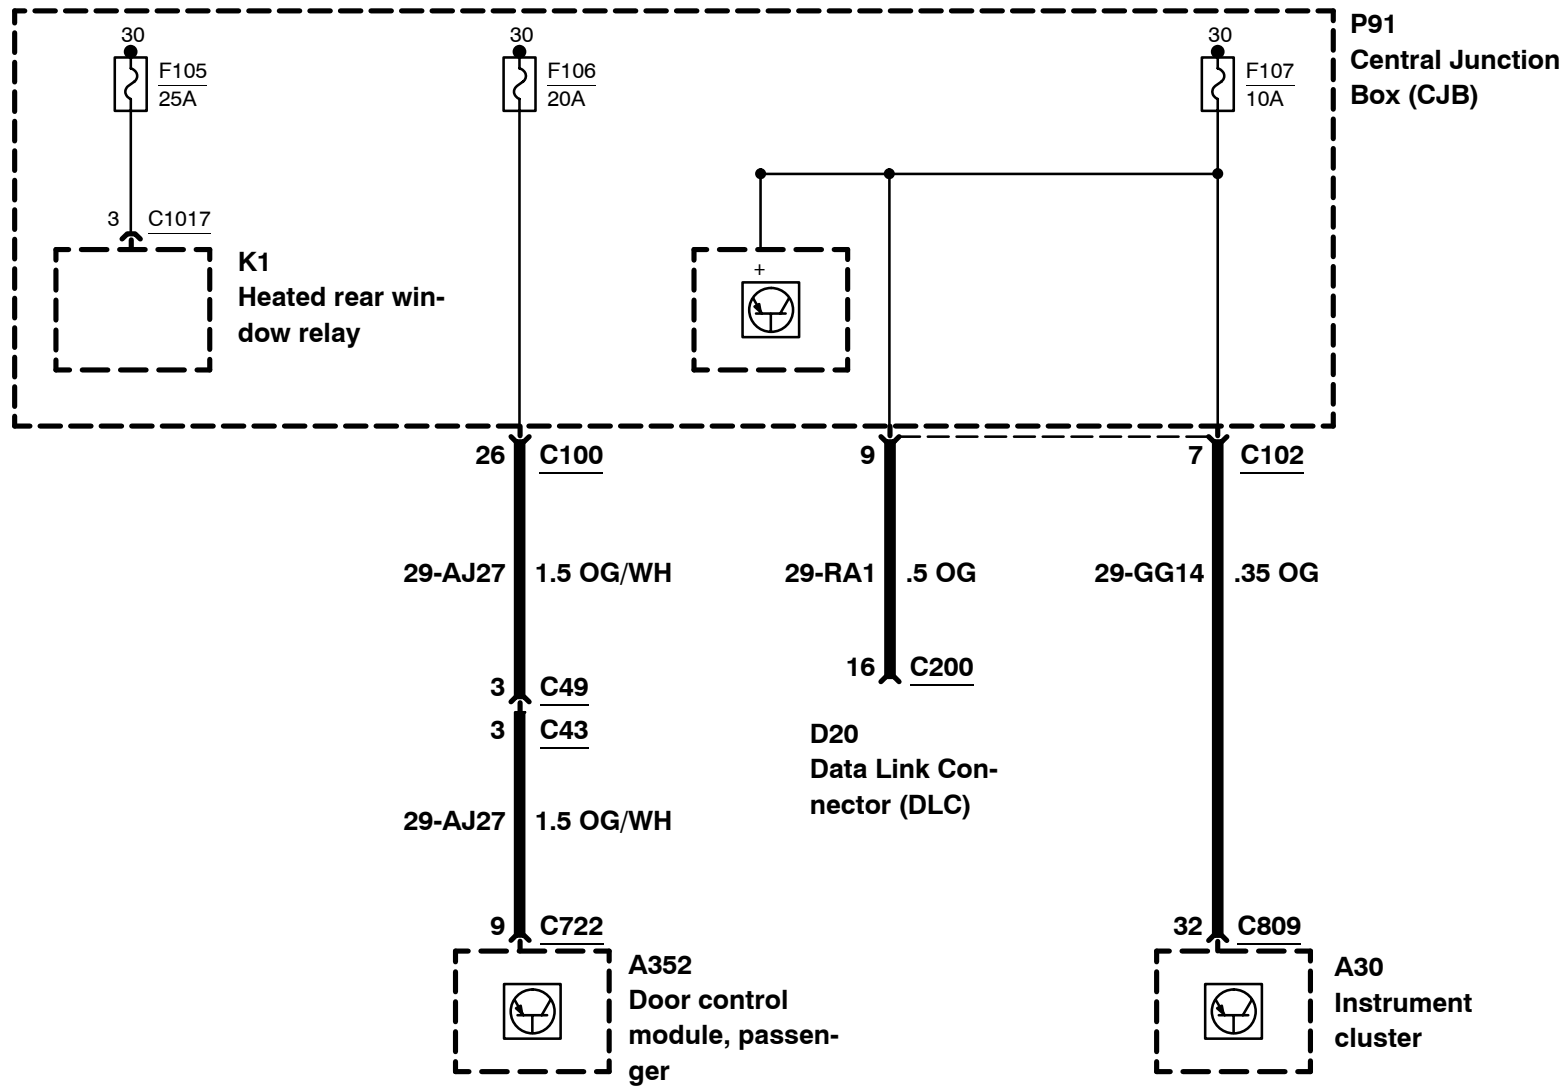


# Fuse Details – F108

02/2008  
700-03-00-38  
2008.25  
Focus

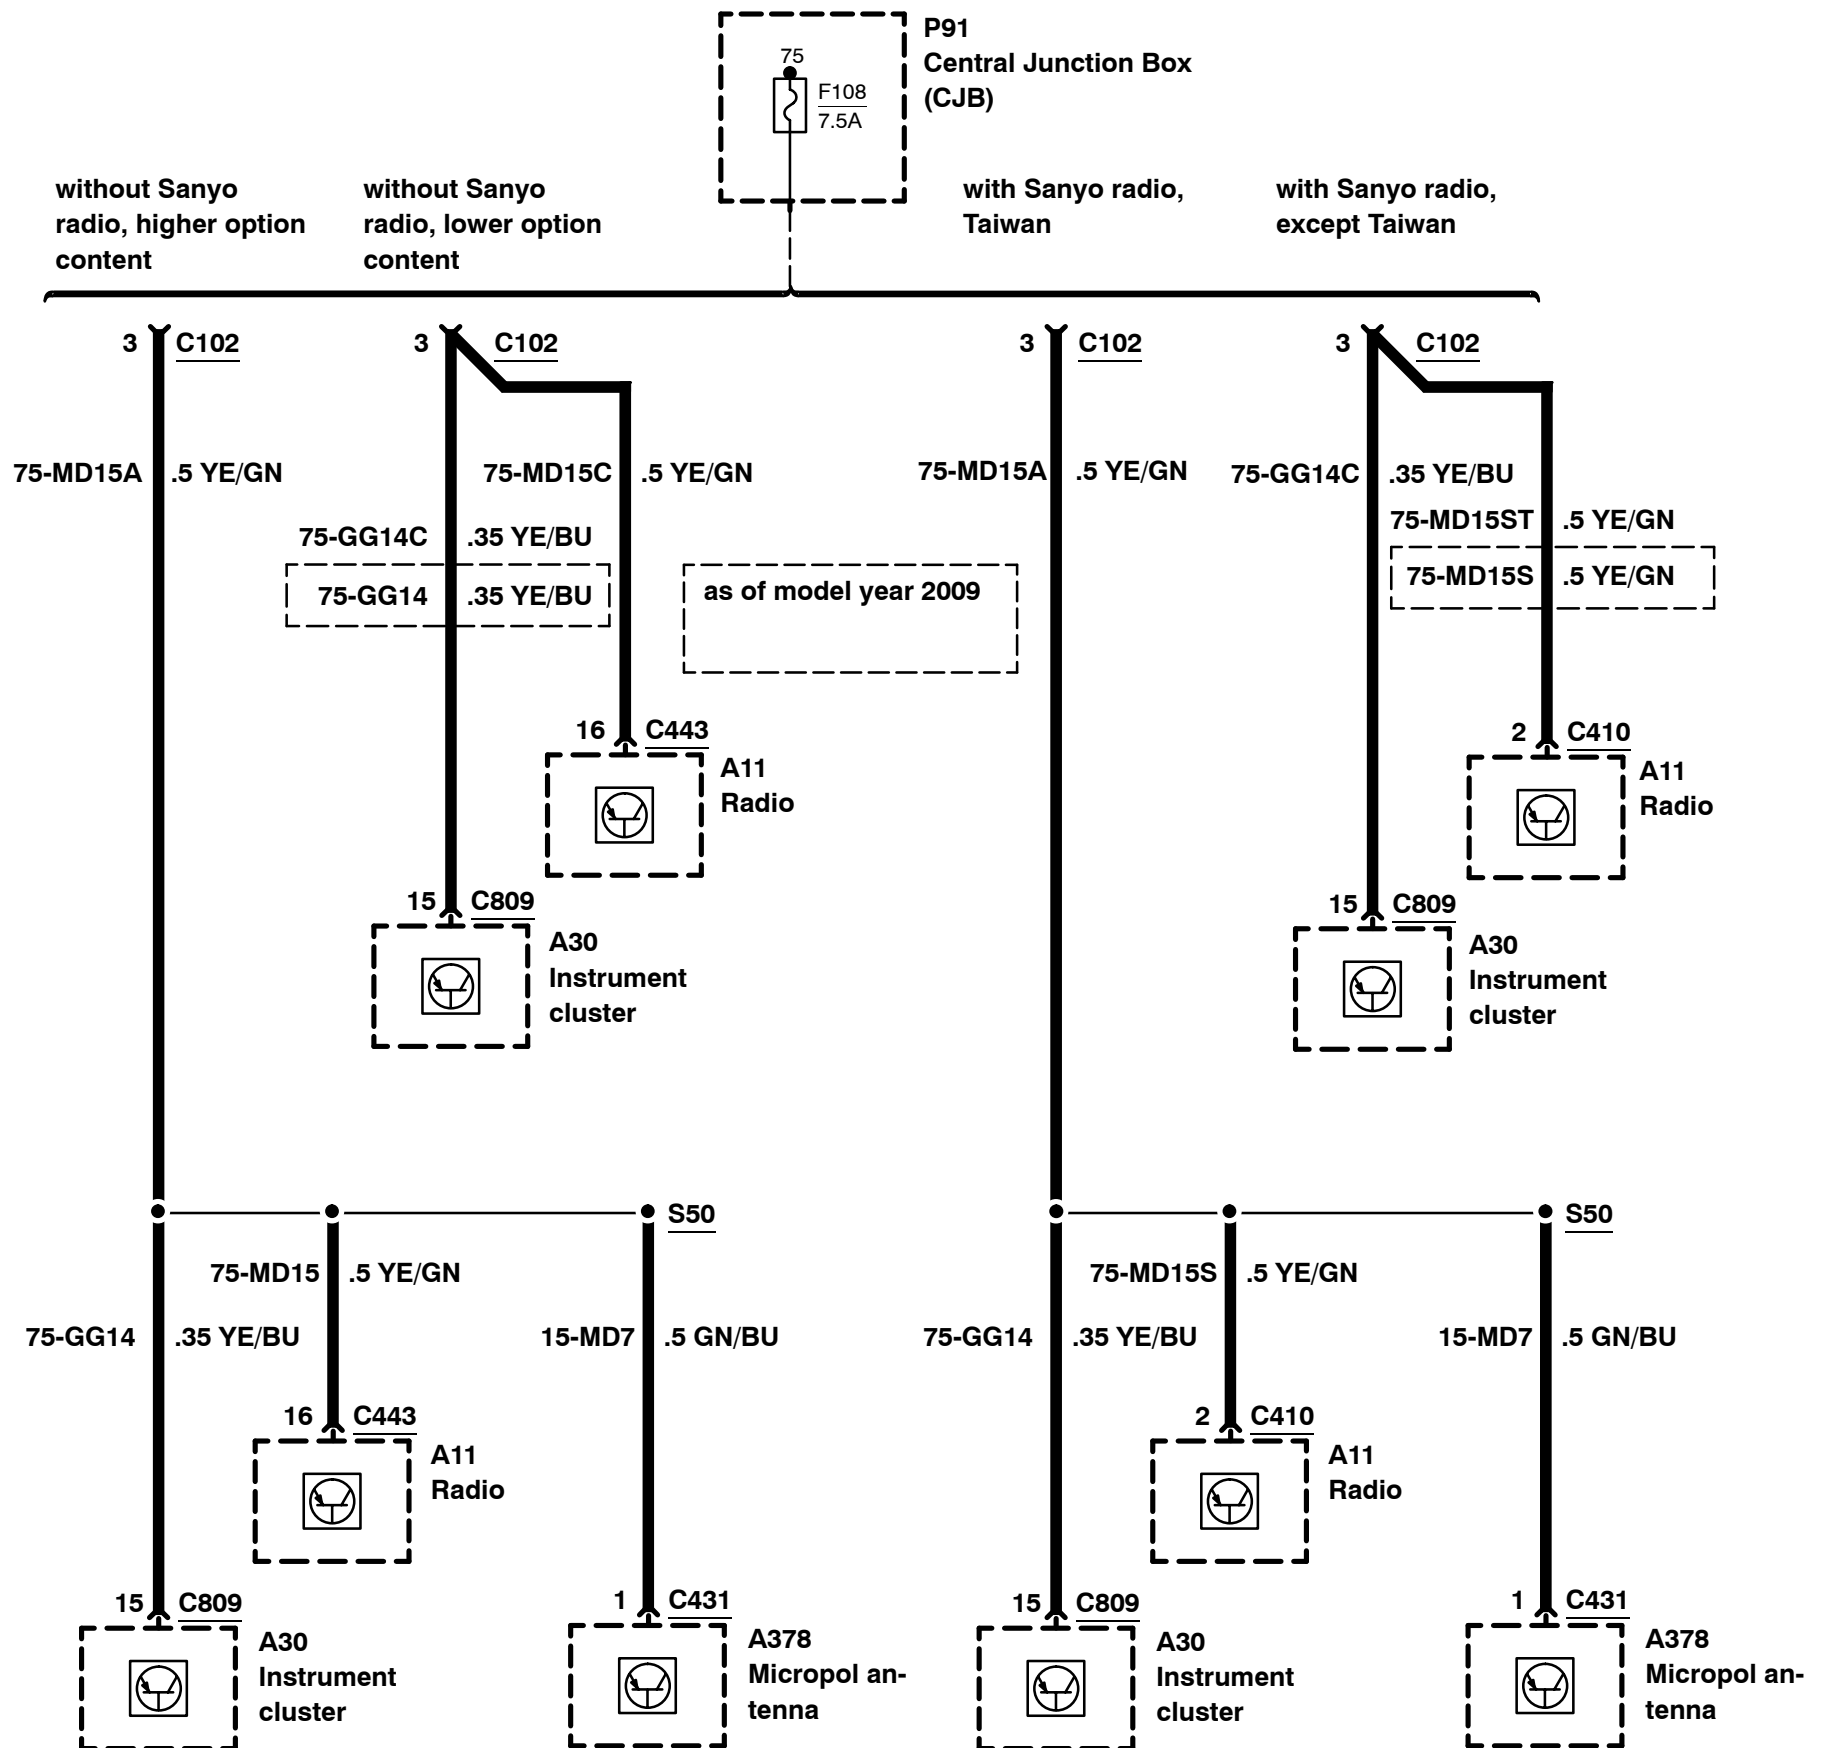


## Fuse Details – F109

02/2008  
700-03-00-39  
2008.25  
Focus

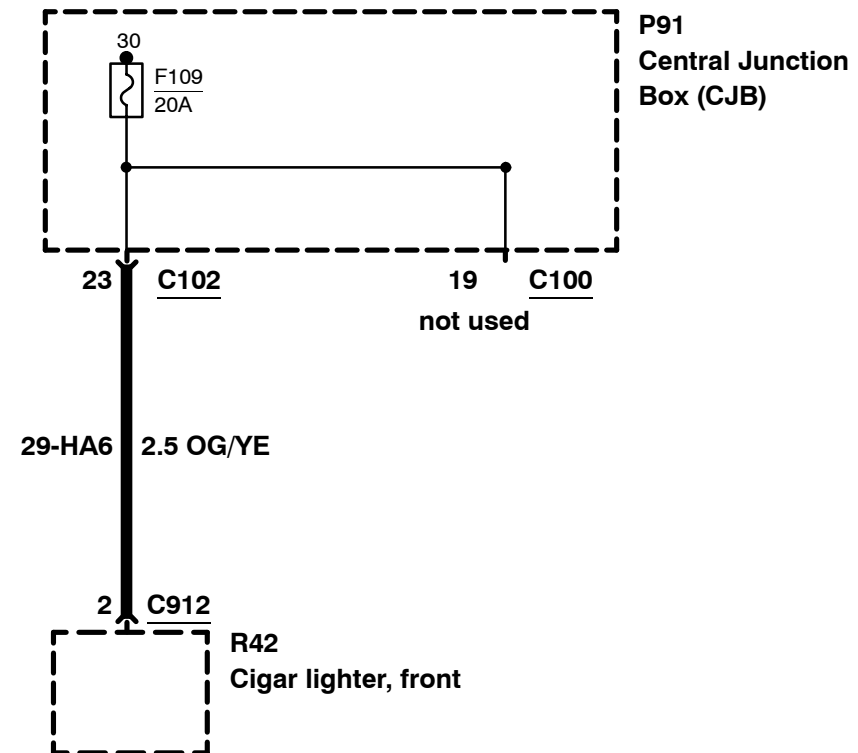


## Fuse Details – F111

02/2008  
700-03-00-40  
2008.25  
Focus

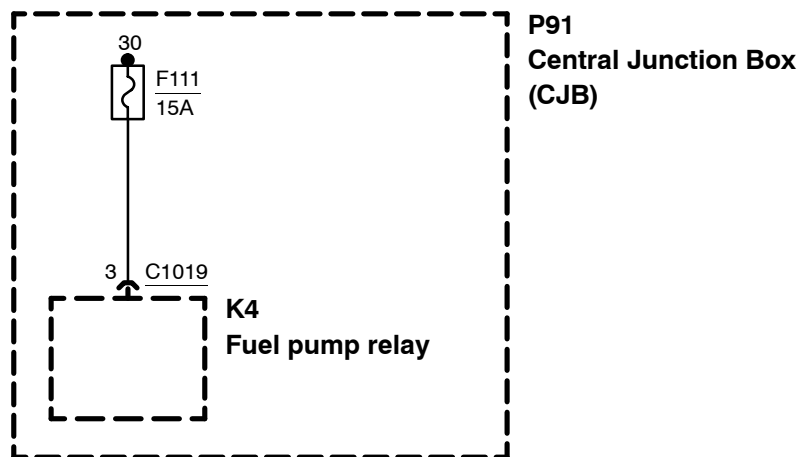


# Fuse Details – F112

02/2008  
700-03-00-41  
2008.25  
Focus

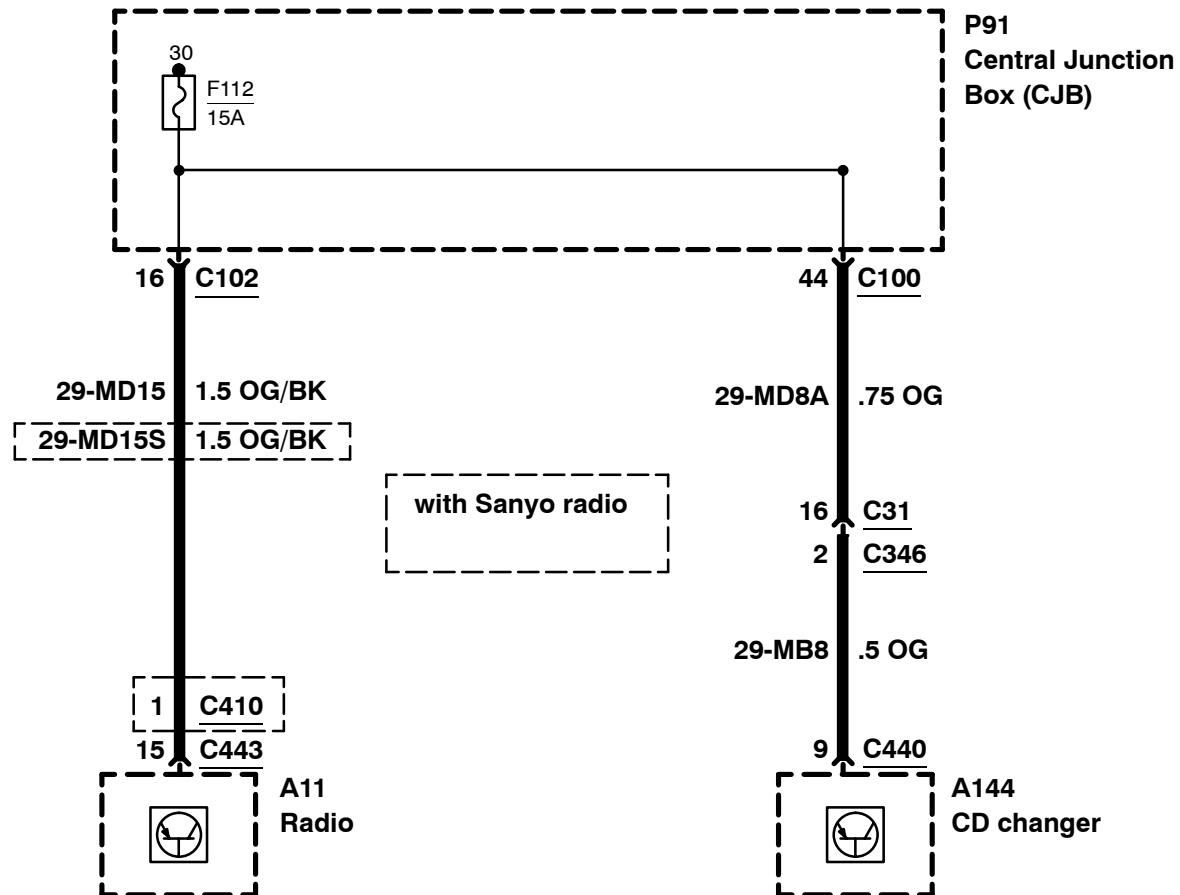


# Fuse Details – F114, F115

02/2008  
700-03-00-42  
2008.25  
Focus

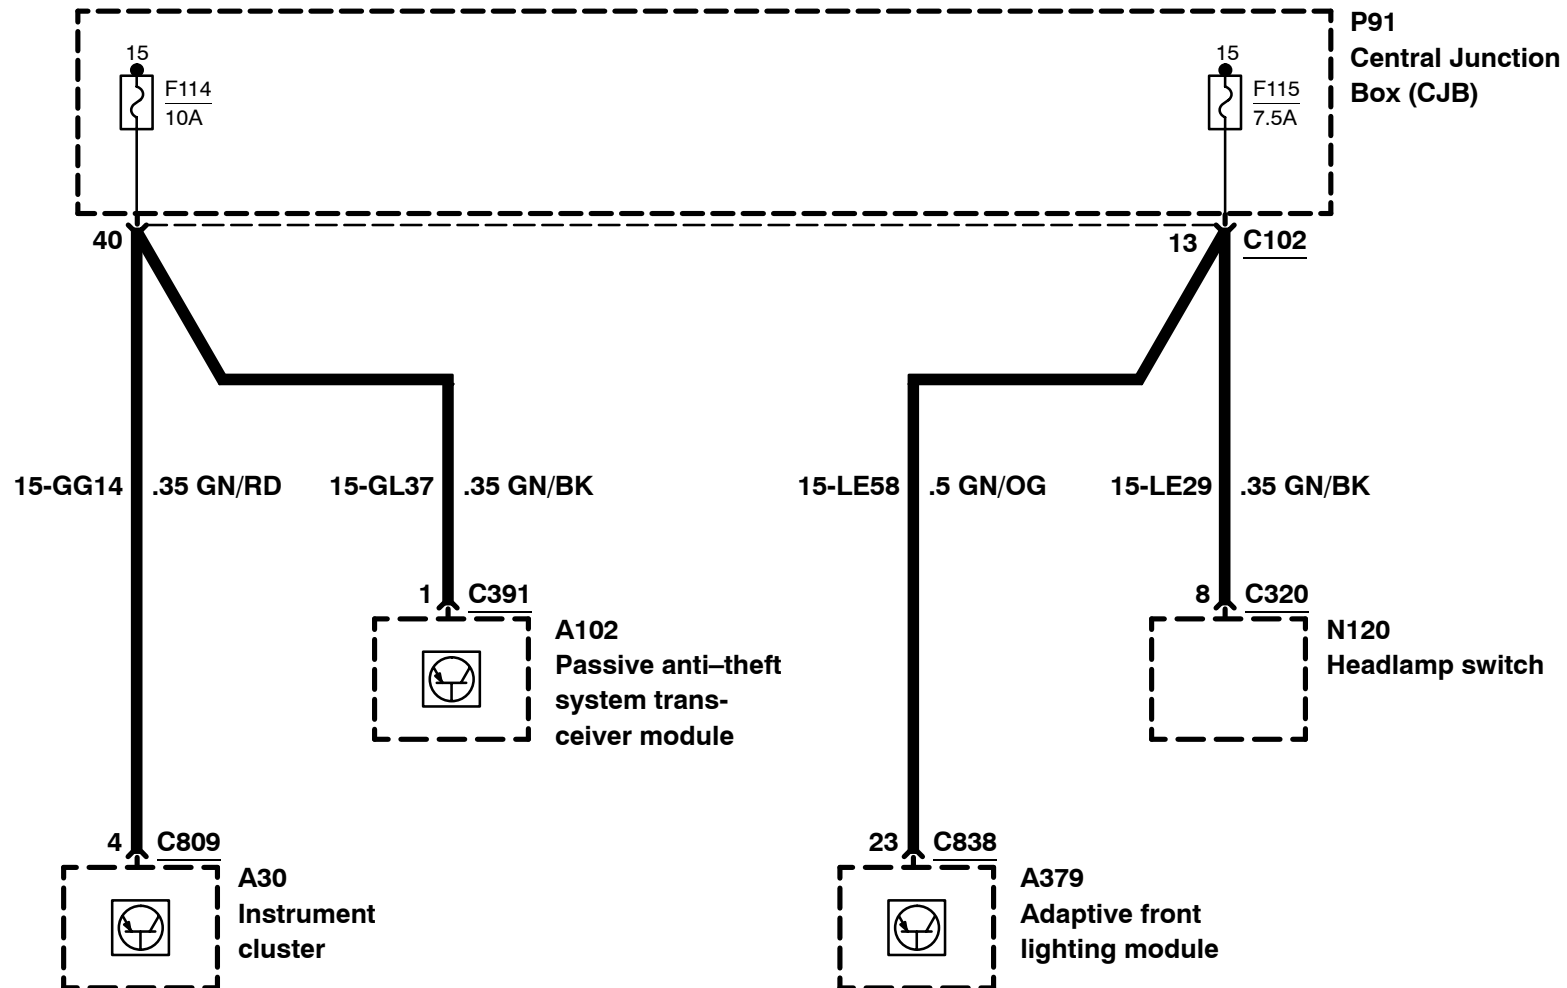


# Fuse Details – F116

02/2008  
700-03-00-43  
2008.25  
Focus

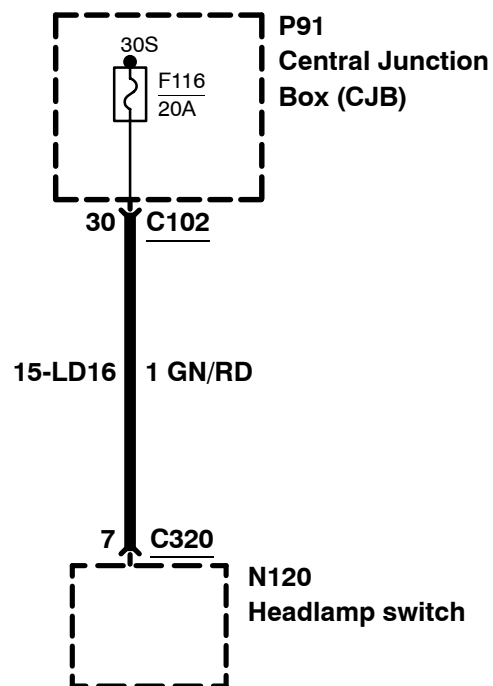

## Fuse Details – F117


02/2008  
700-03-00-44  
2008.25  
Focus

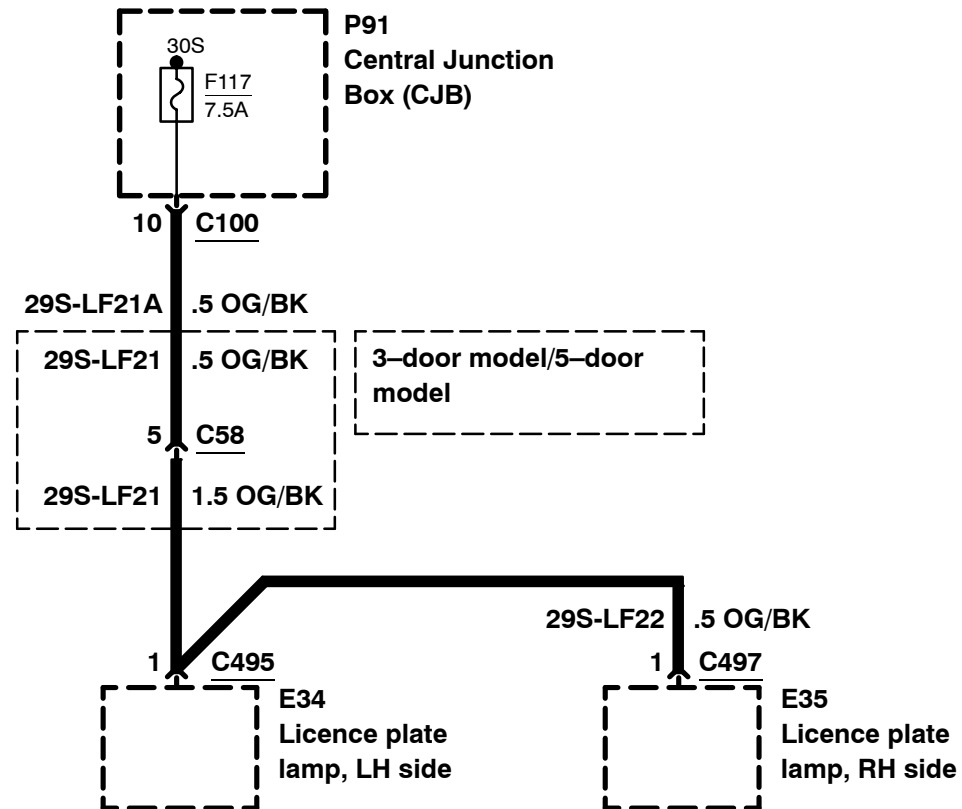




# Fuse Details – F118, F120

02/2008  
700-03-00-45  
2008.25  
Focus

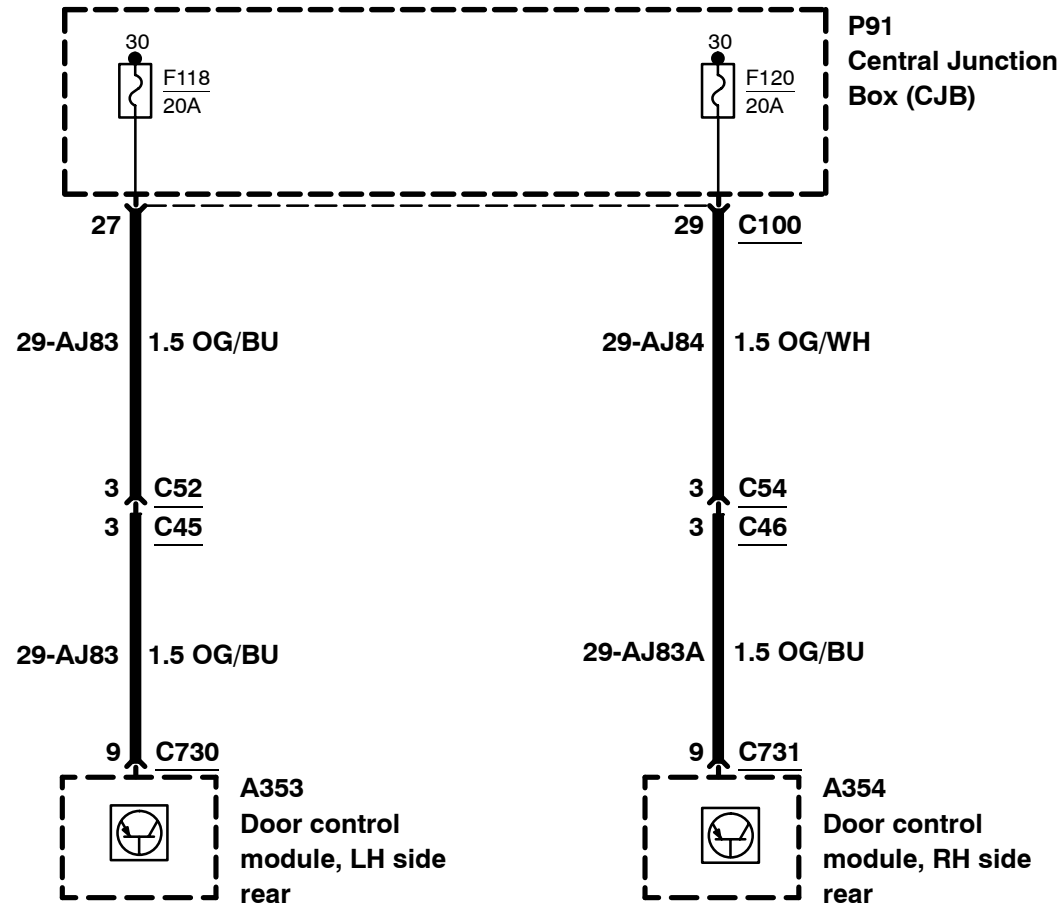


# Fuse Details – F122

02/2008  
700-03-00-46  
2008.25  
Focus

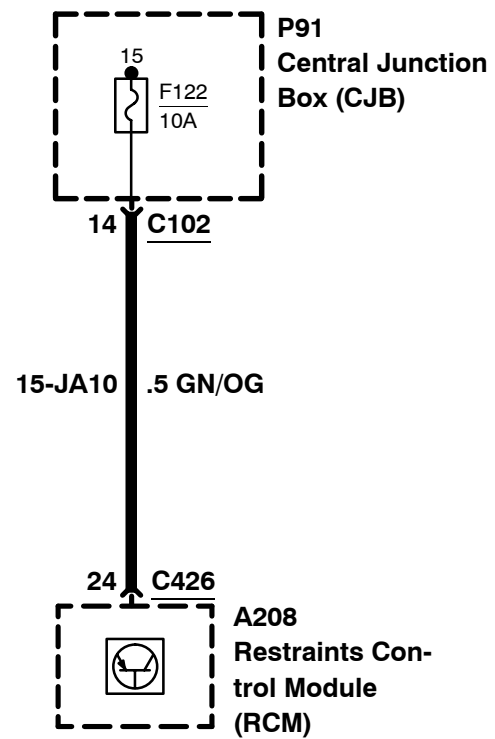


# Fuse Details – F124

02/2008  
700-03-00-47  
2008.25  
Focus

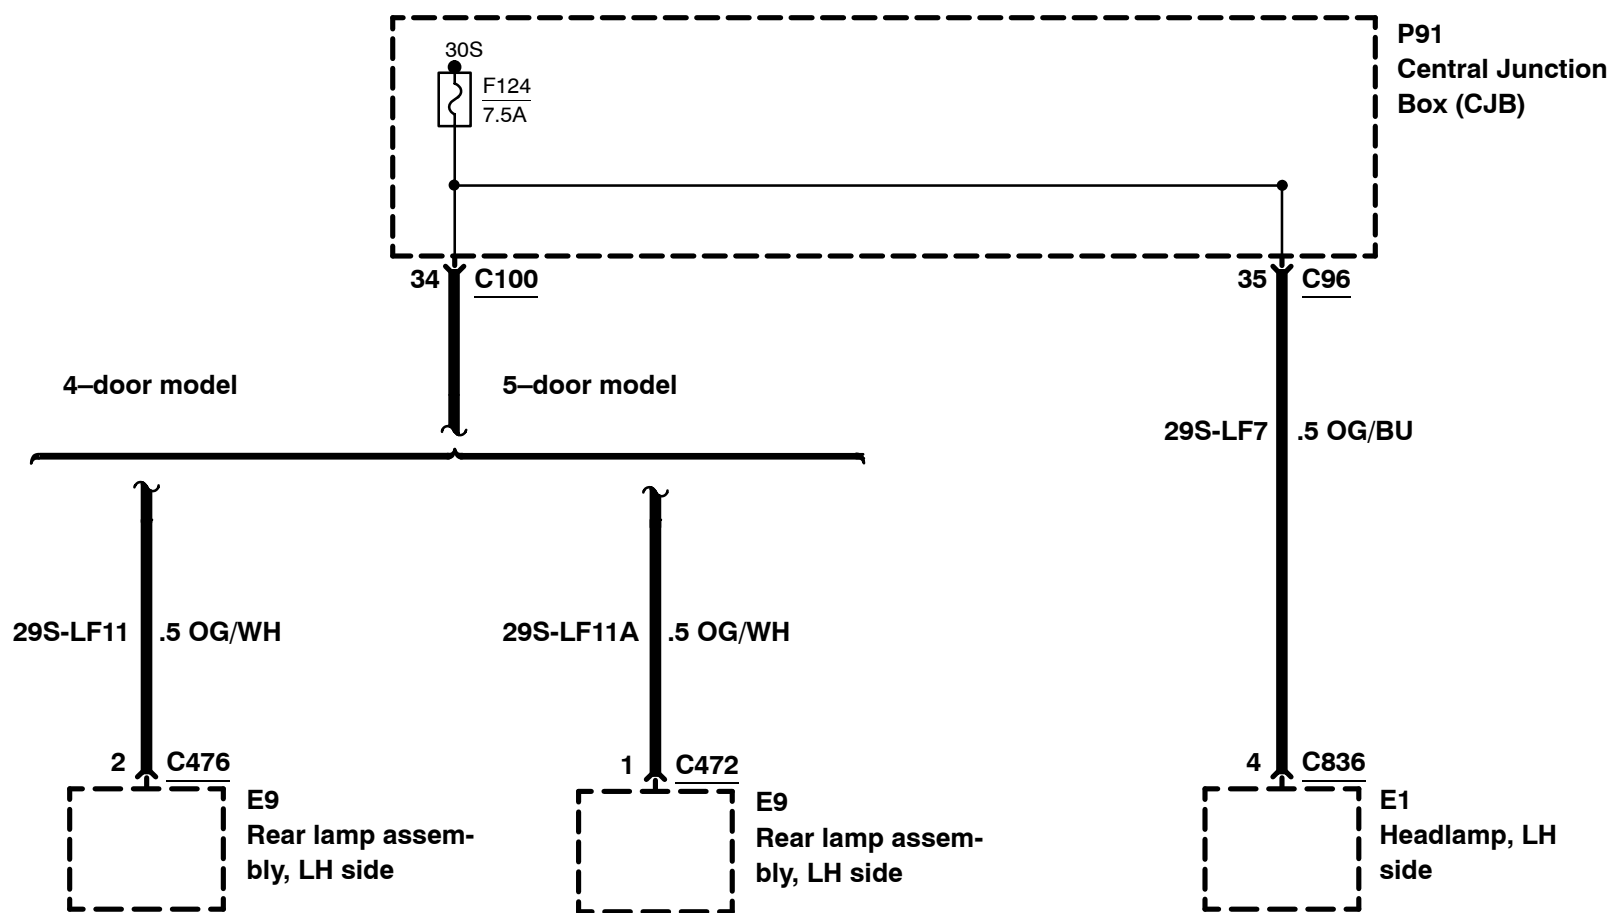


Fuse Details – F125

02/2008  
700-03-00-48  
2008.25  
Focus

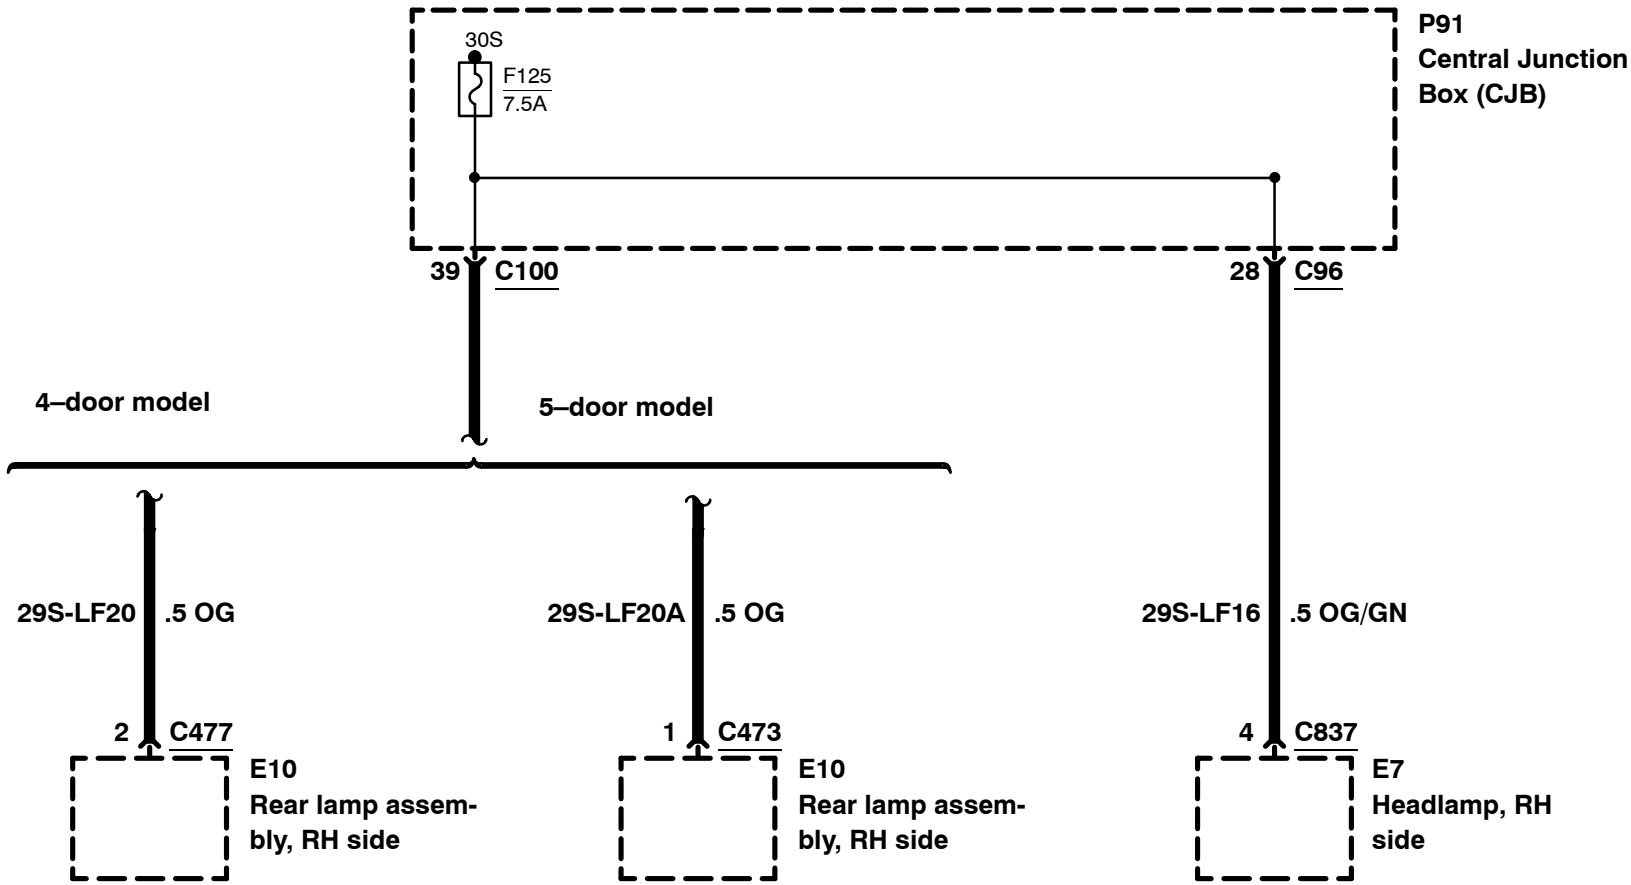


# Fuse Details – F127

02/2008  
700-03-00-49  
2008.25  
Focus

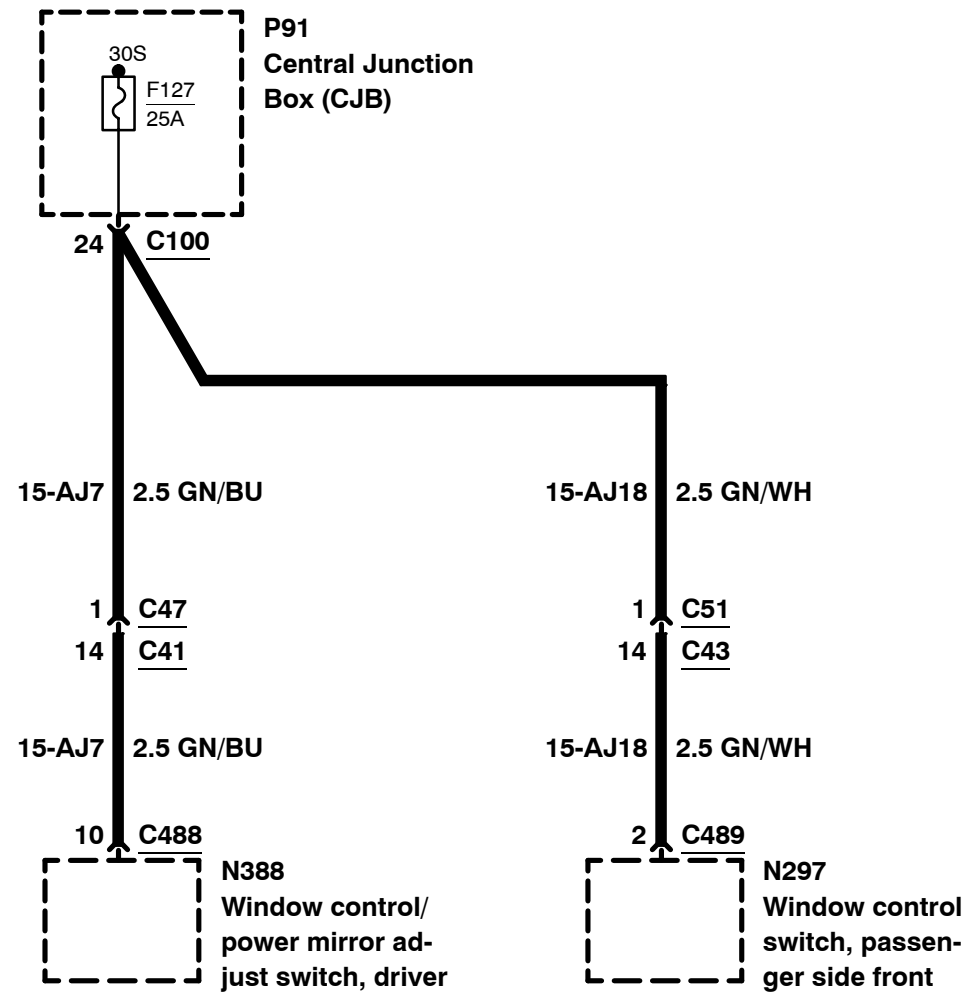


## Fuse Details – F129

02/2008  
700-03-00-50  
2008.25  
Focus

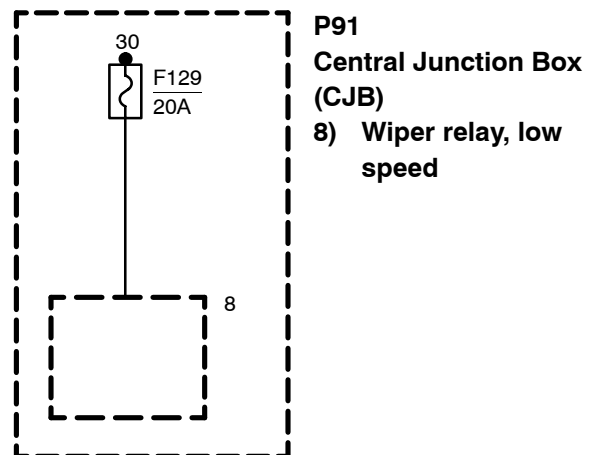


# Fuse Details – F131

02/2008  
700-03-00-51  
2008.25  
Focus

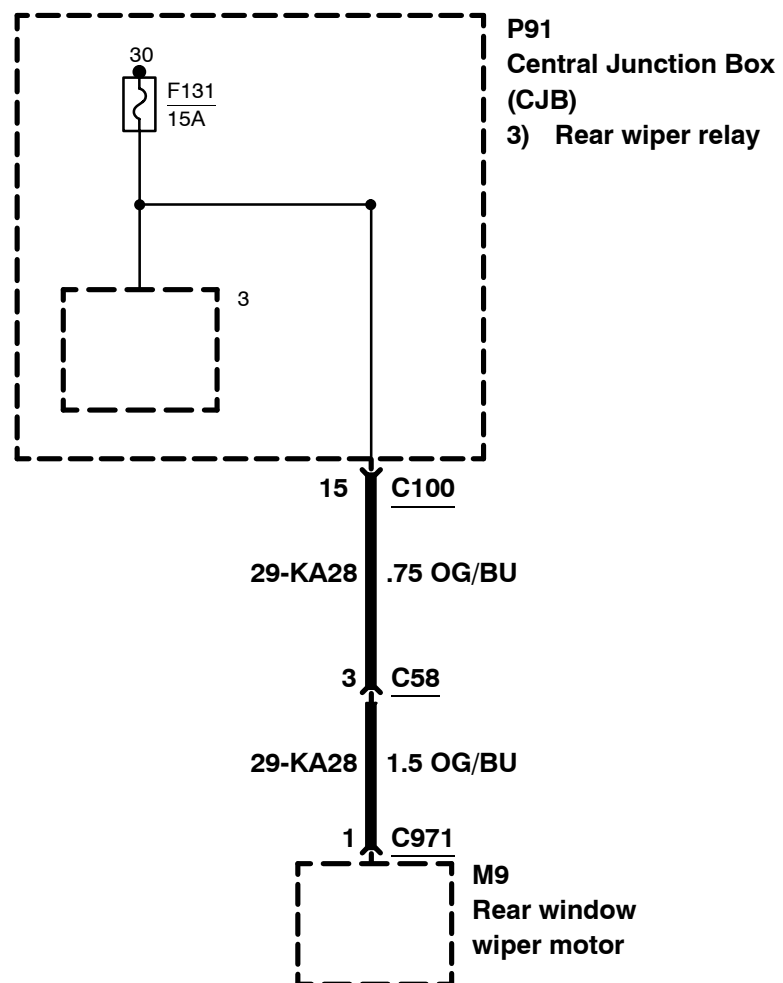

# Fuse Details – F132


02/2008  
700-03-00-52  
2008.25  
Focus

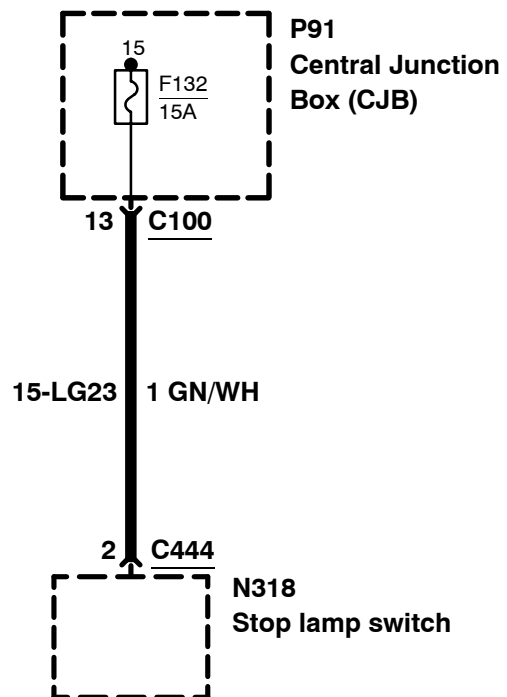




# Fuse Details – F133, F134

02/2008  
700-03-00-53  
2008.25  
Focus

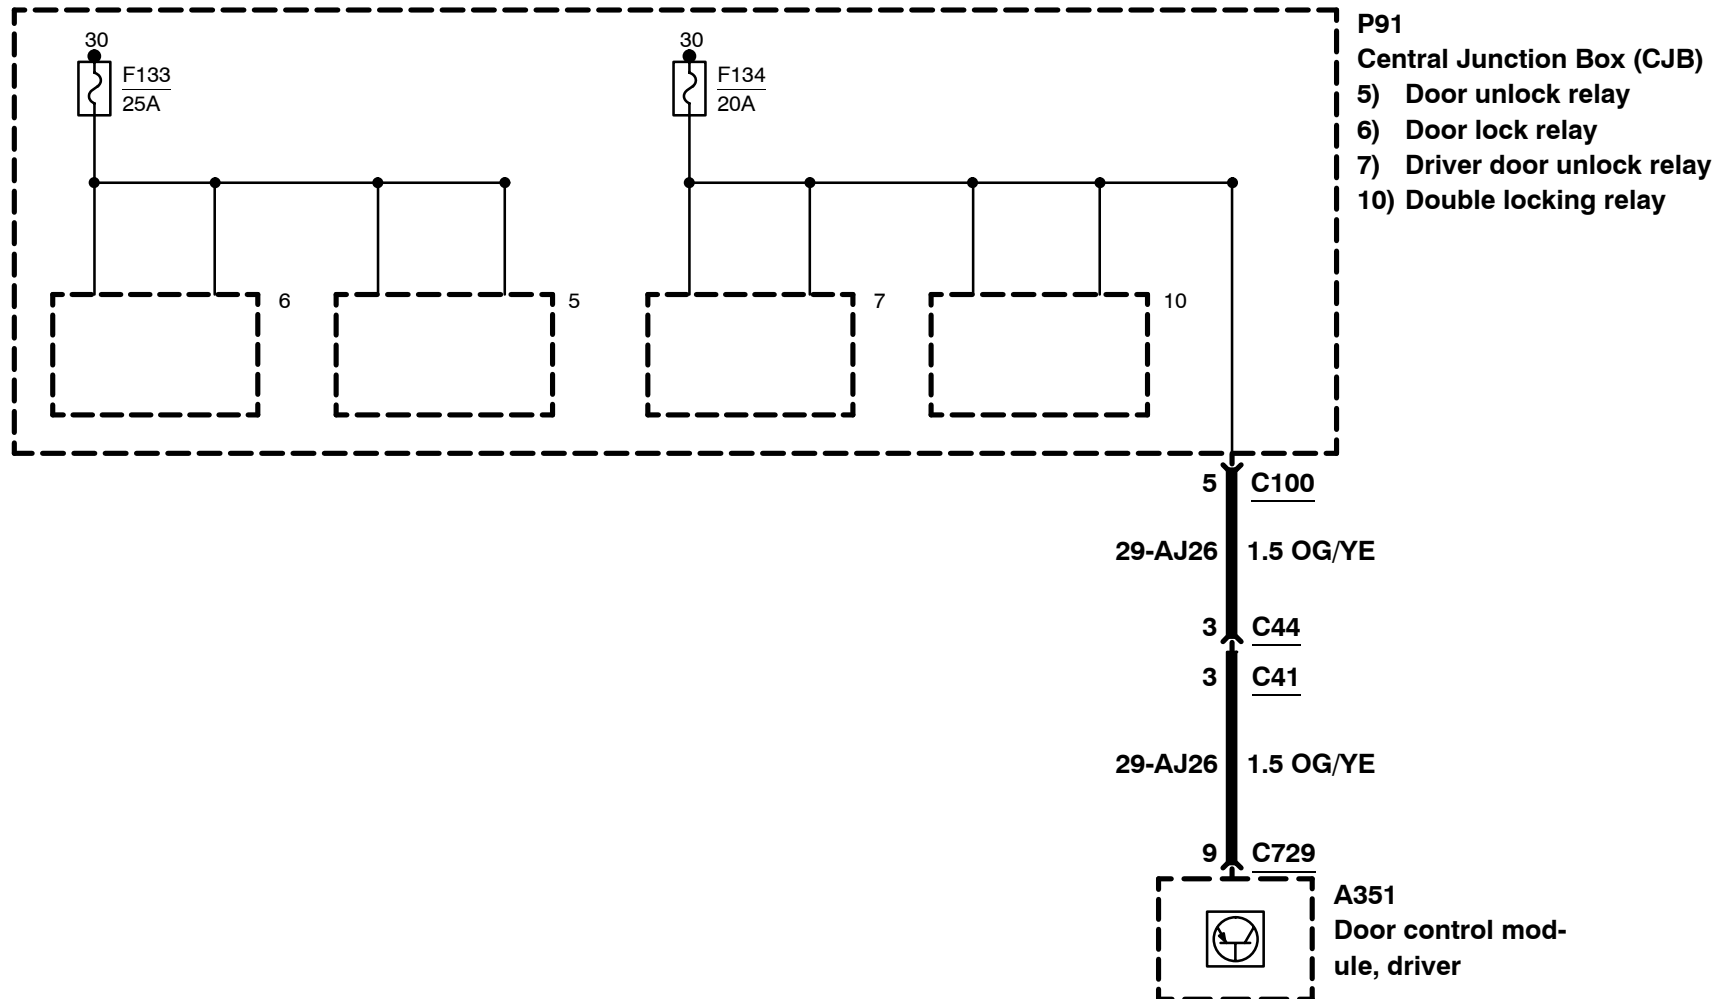


## Fuse Details – F135, F136

02/2008  
700-03-00-54  
2008.25  
Focus

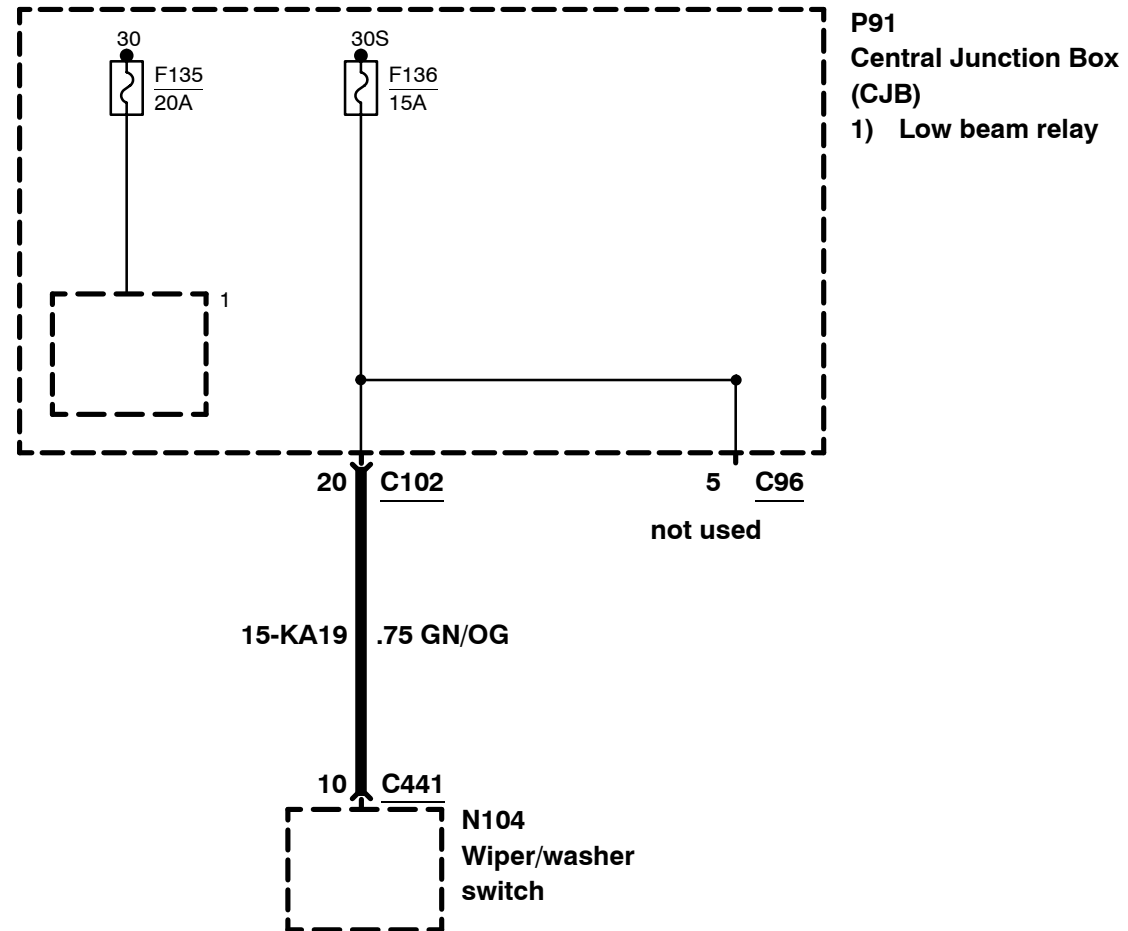


## Fuse Details – F137

02/2008  
700-03-00-55  
2008.25  
Focus

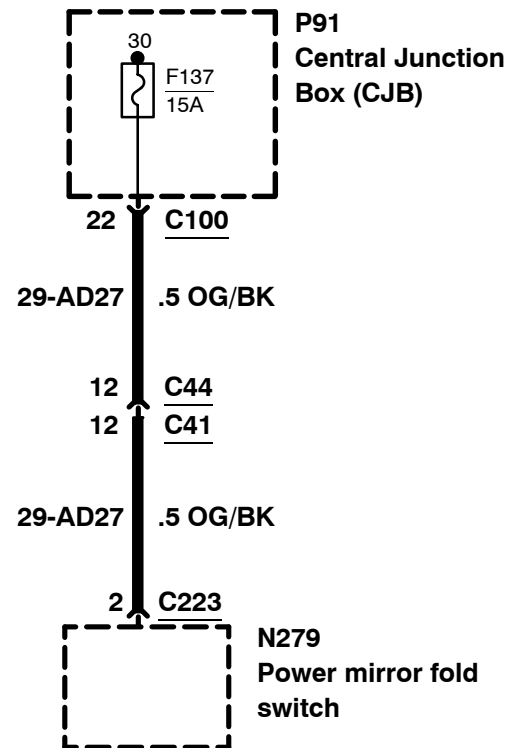


# Fuse Details – F138, 1.6L (Z6)

02/2008  
700-03-00-56  
2008.25  
Focus

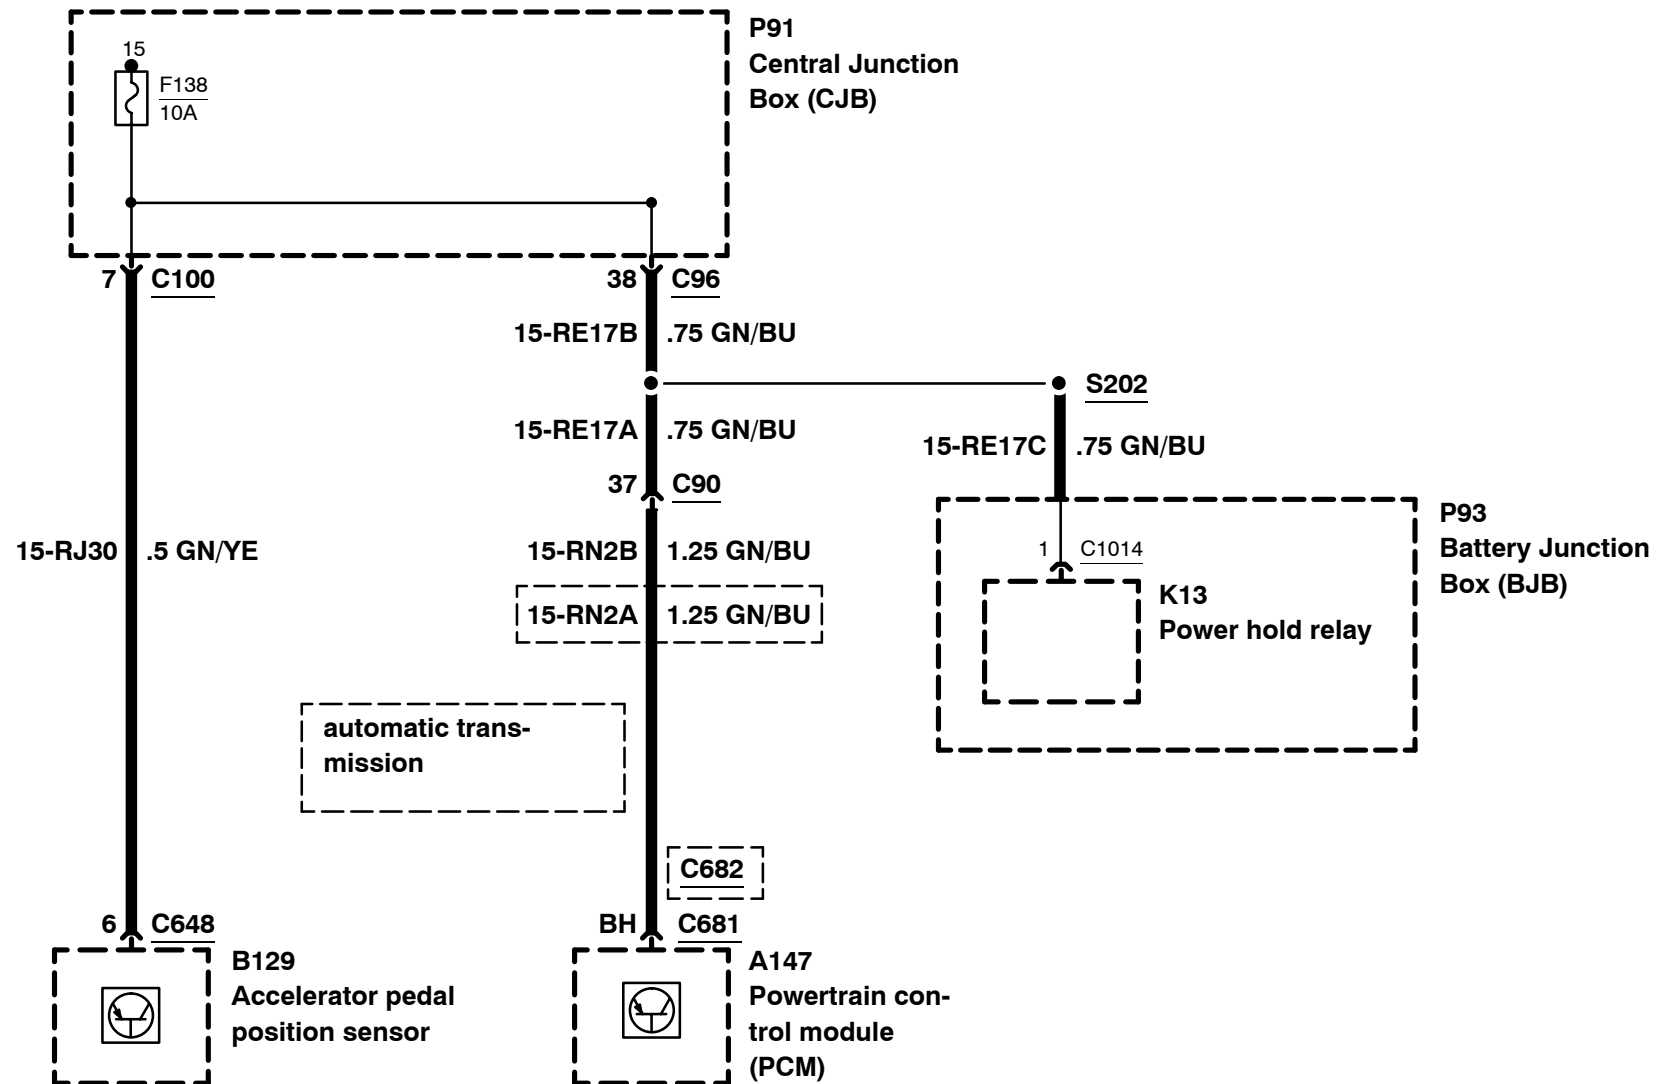


# Fuse Details – F138, 1.8/2.0L Duratec–HE (MI4)

02/2008  
700-03-00-57  
2008.25  
Focus

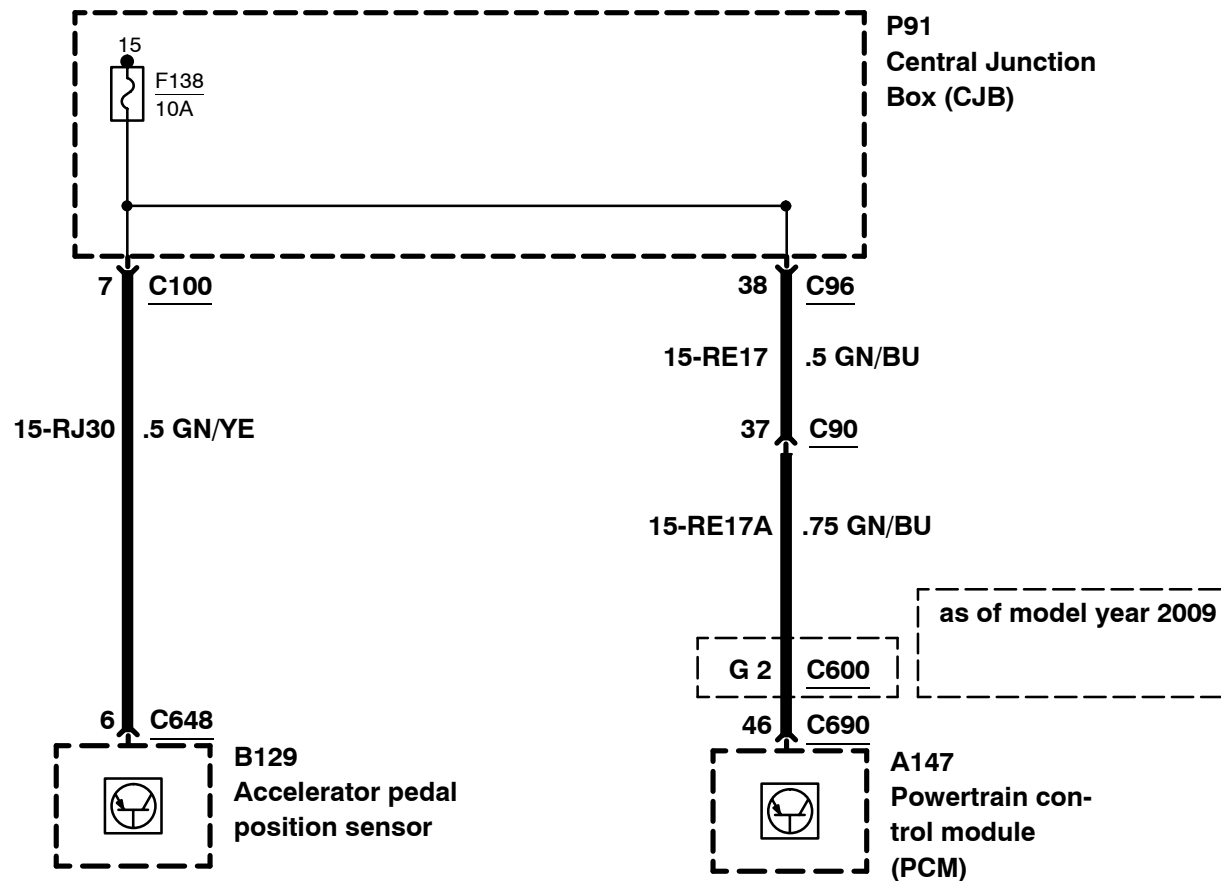


# Fuse Details – F138, 2.0L Duratorq–TDCi (DW) Diesel

02/2008  
700-03-00-58  
2008.25  
Focus

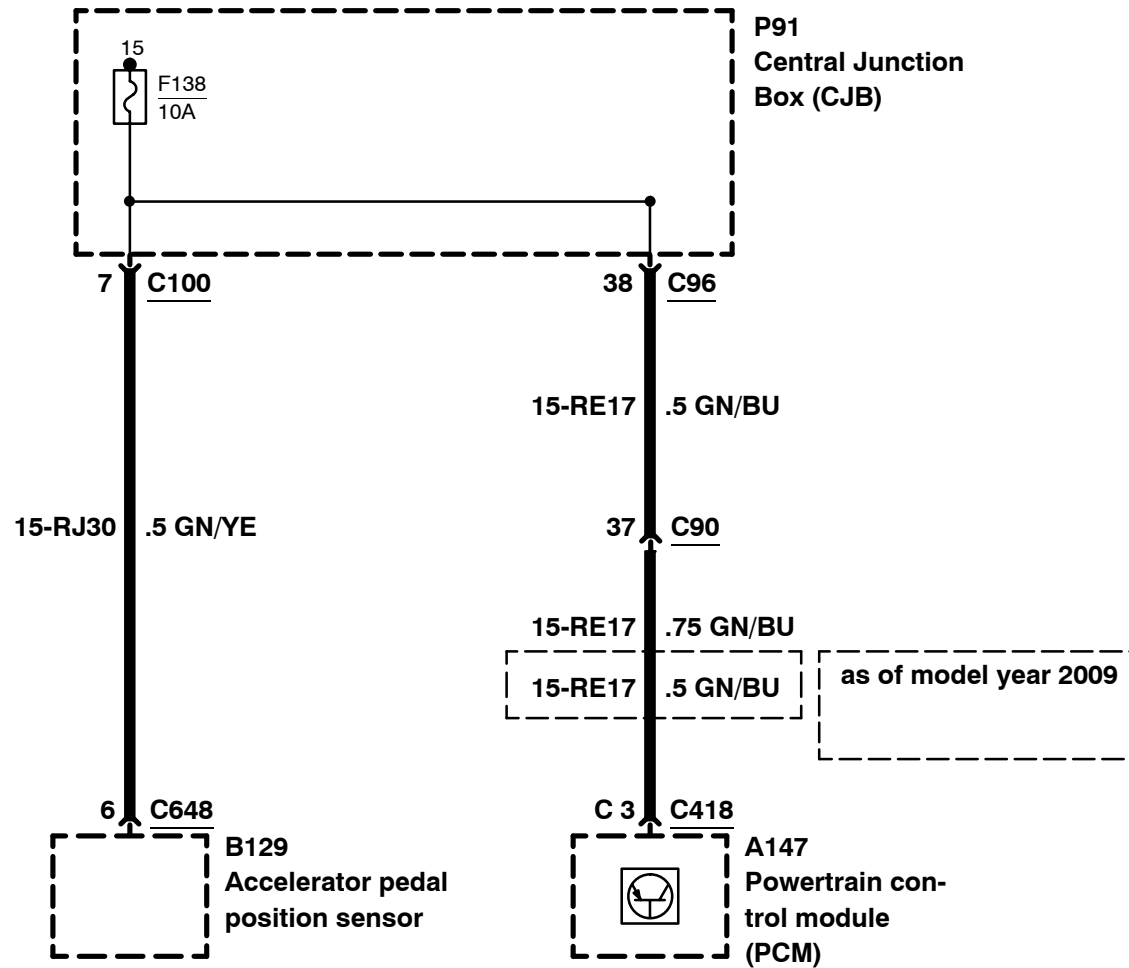


## Fuse Details – F139, F140

02/2008  
700-03-00-59  
2008.25  
Focus

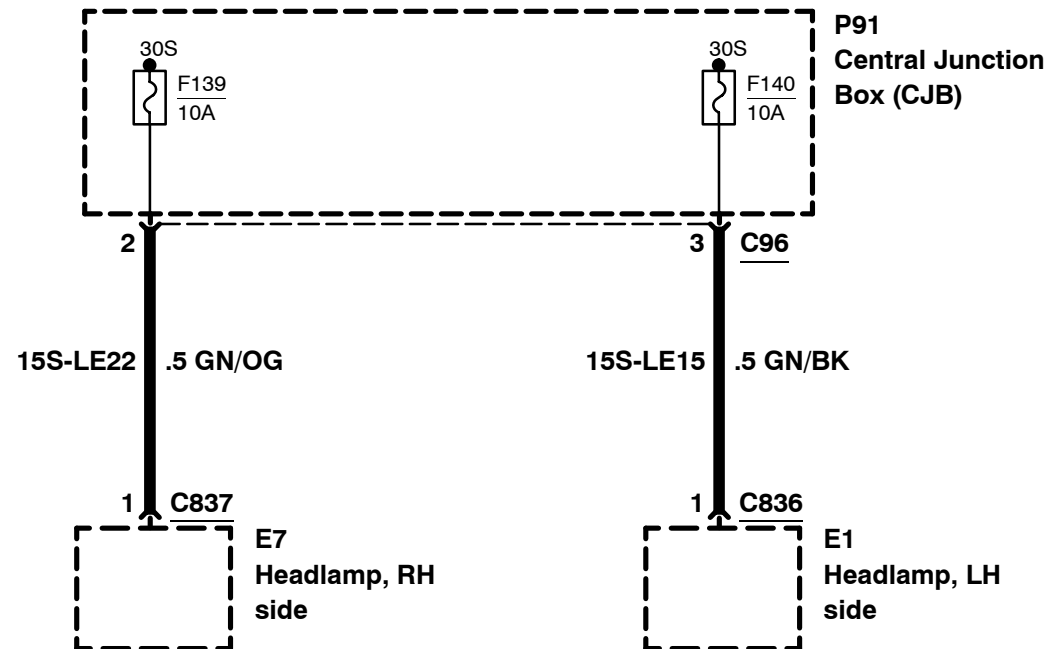

# Fuse Details – F141, manual transmission


02/2008  
700-03-00-60  
2008.25  
Focus

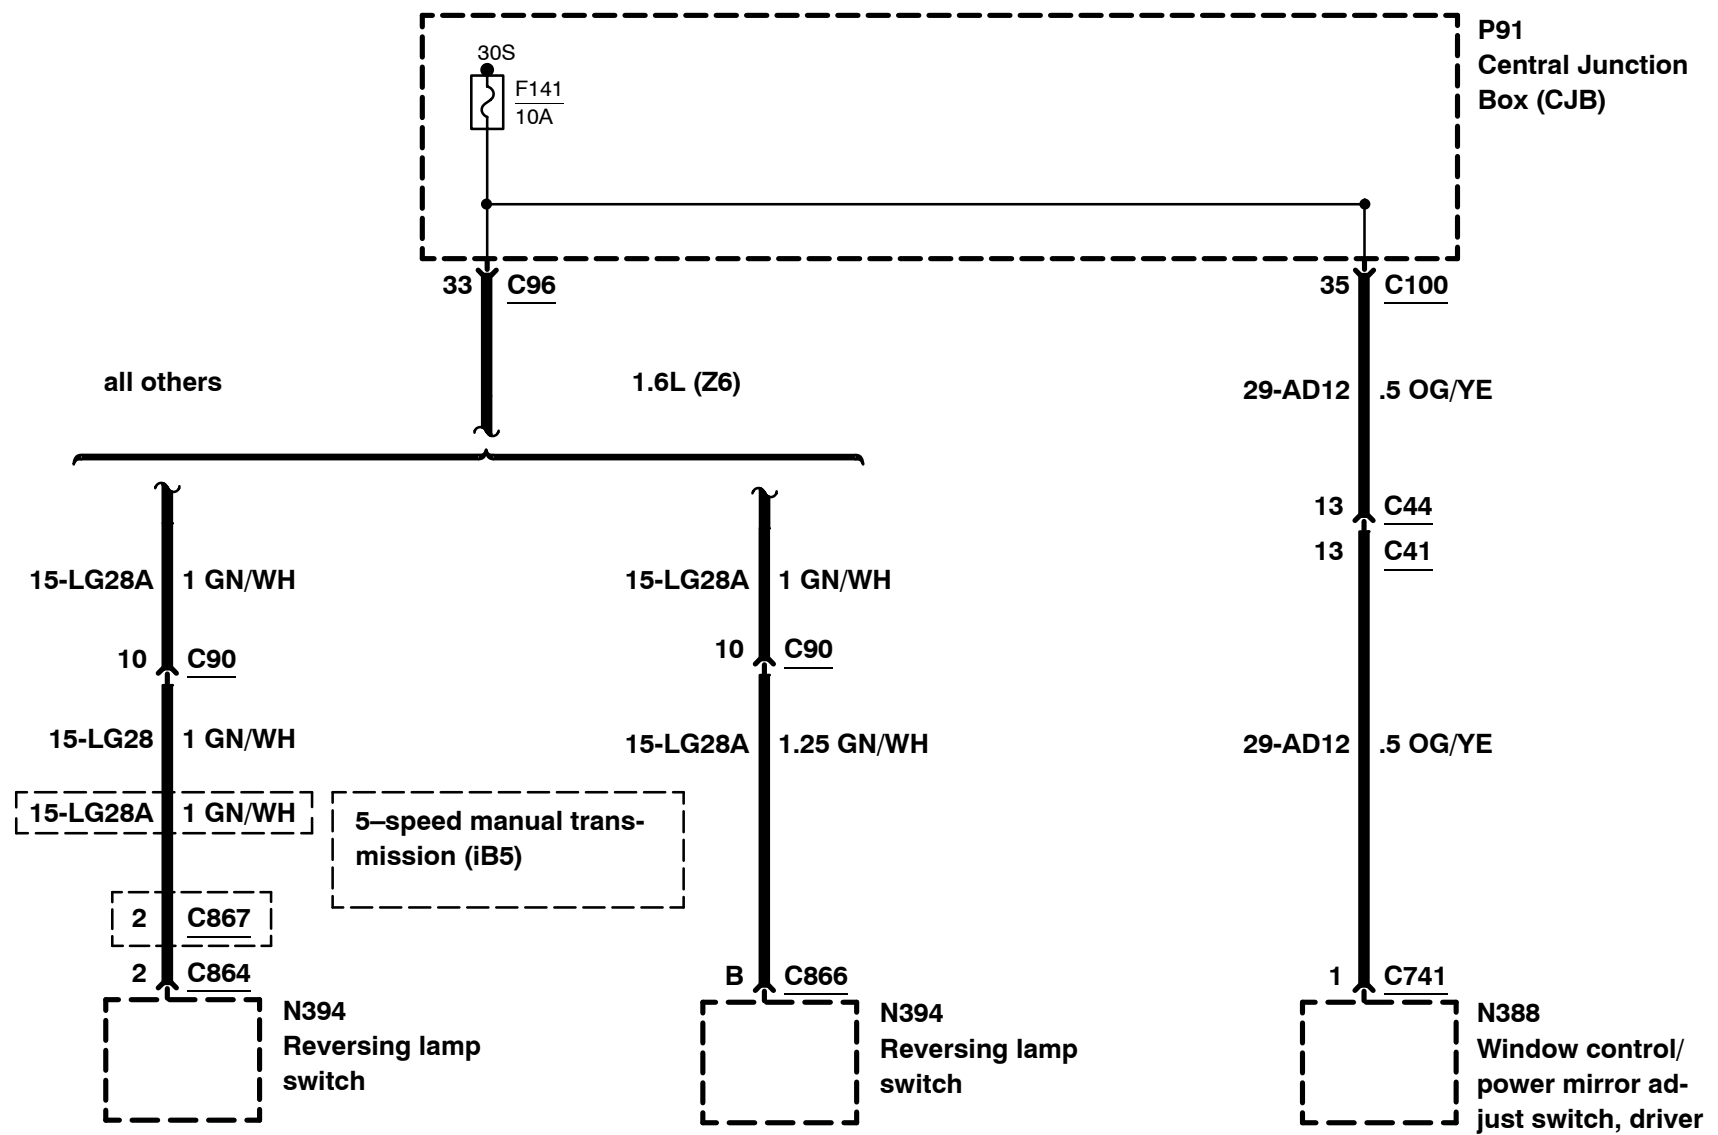




Fuse Details – F141, automatic transmission, manual transmission (MPS6)

02/2008  
700-03-00-61  
2008.25  
Focus

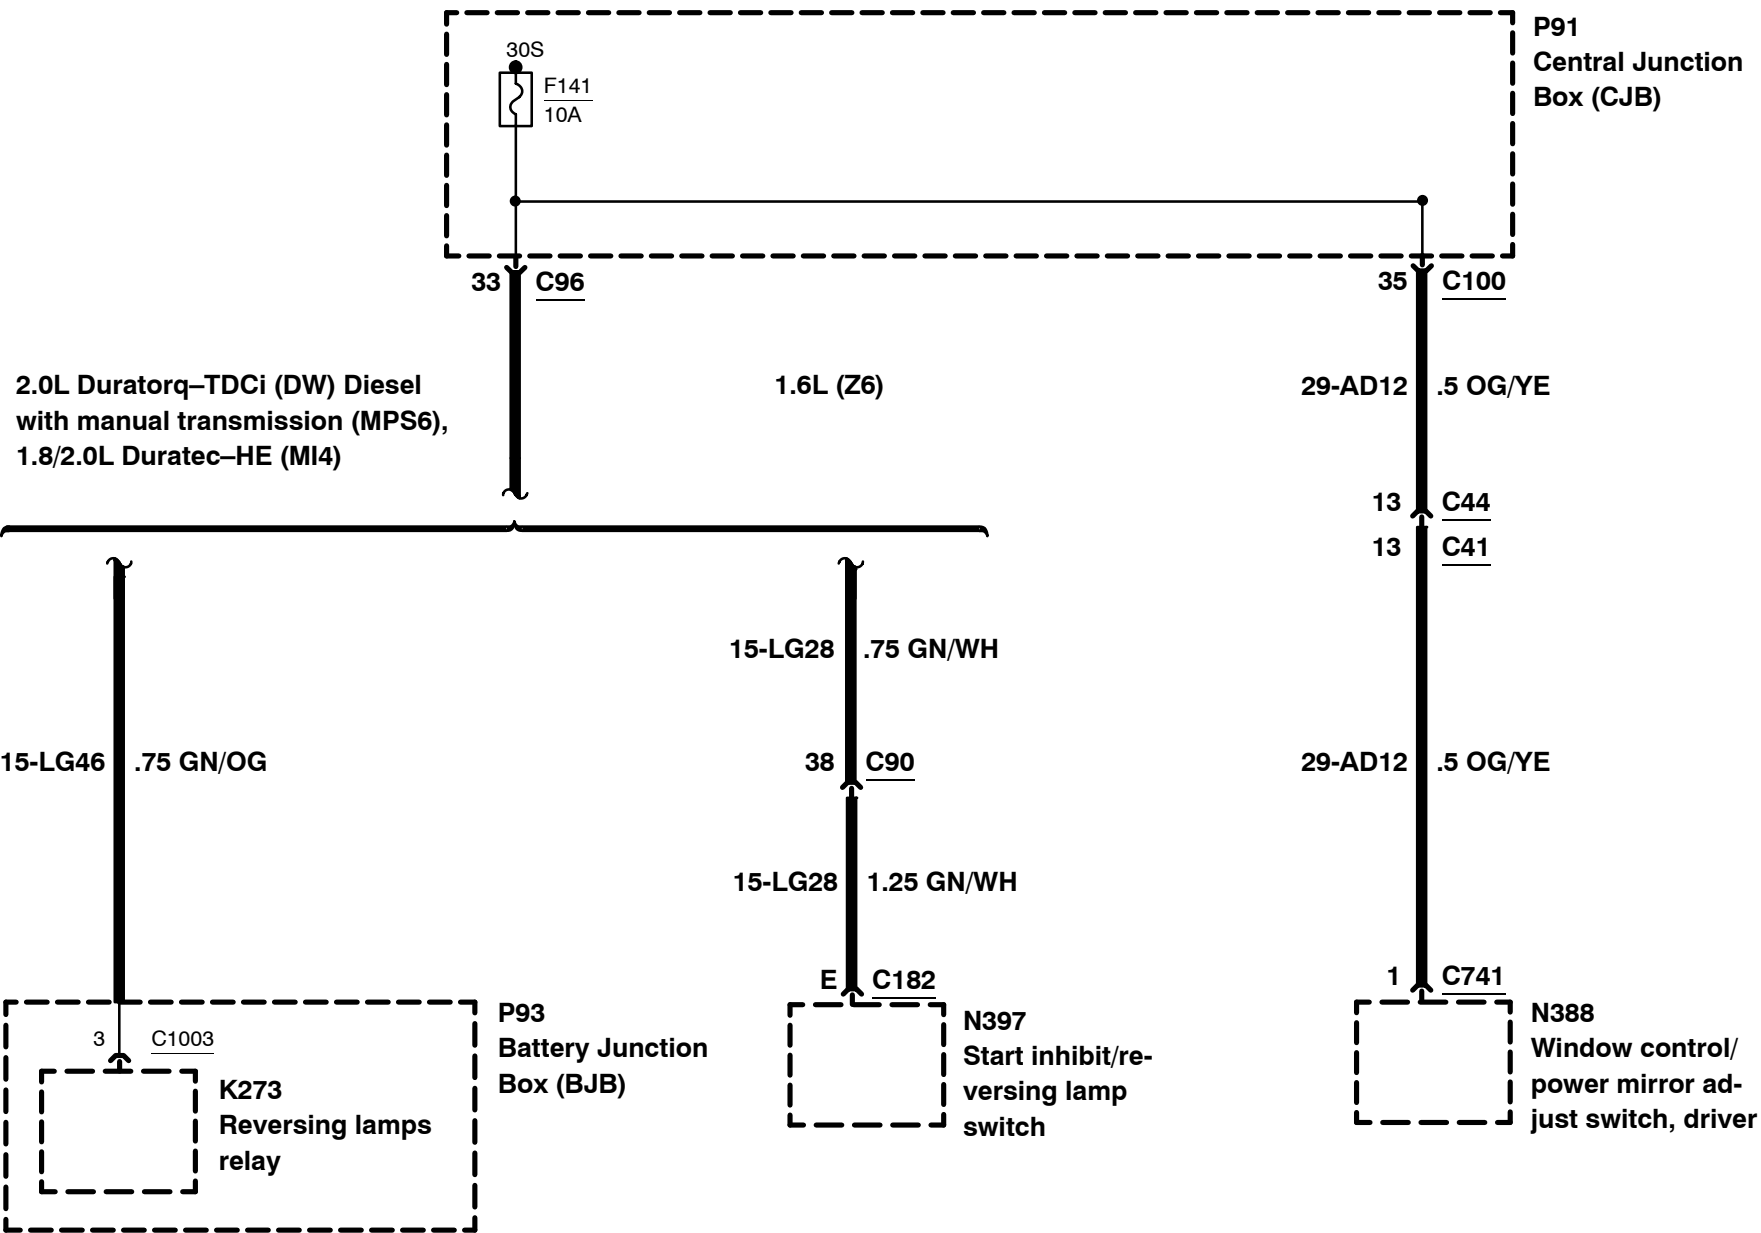


# Fuse Details – F142, F143

02/2008  
700-03-00-62  
2008.25  
Focus

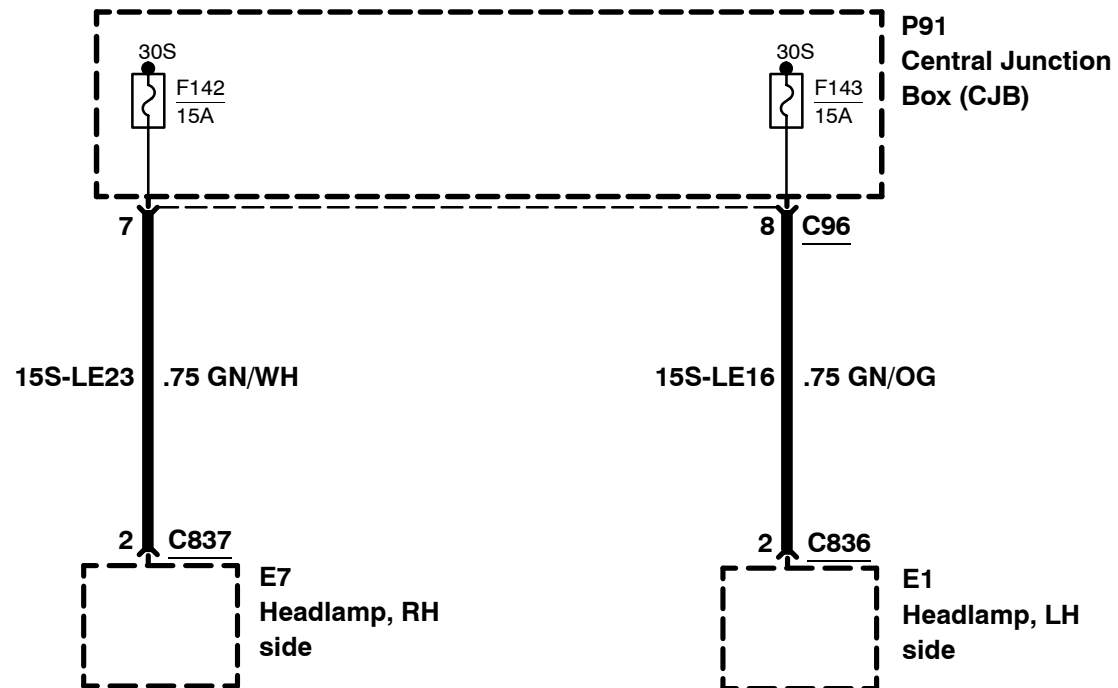


# Fuse Details – F1000, except 1.6L (Z6)

02/2008  
700-03-00-63  
2008.25  
Focus

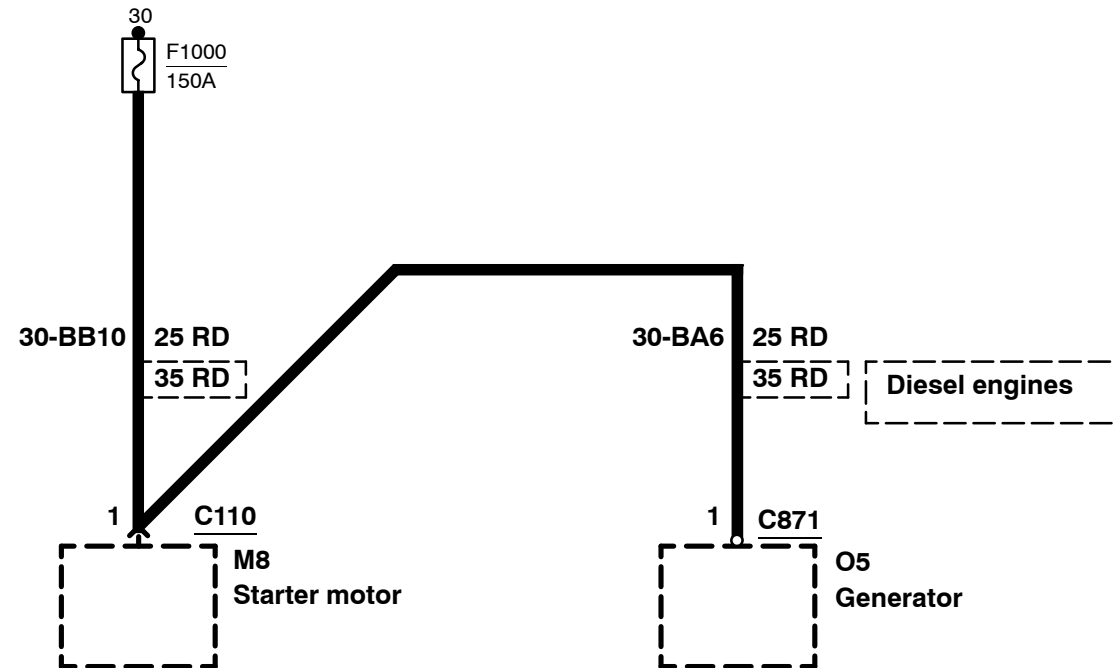


# Fuse Details – F1000, 1.6L (Z6)

02/2008  
700-03-00-64  
2008.25  
Focus

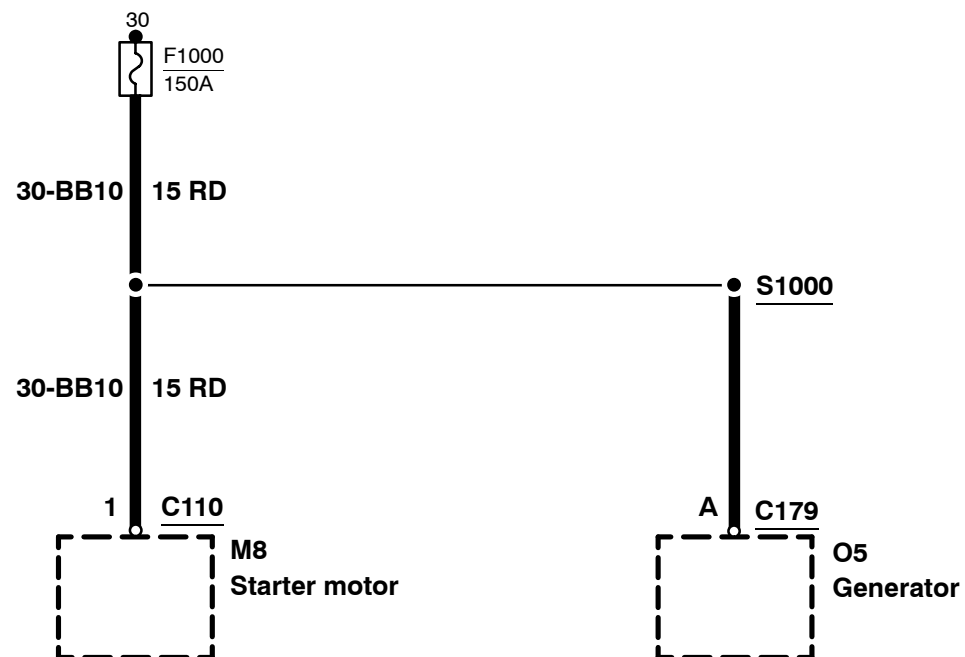


# Ground Distribution – G1, G8

02/2008  
700-04-00-1  
2008.25  
Focus

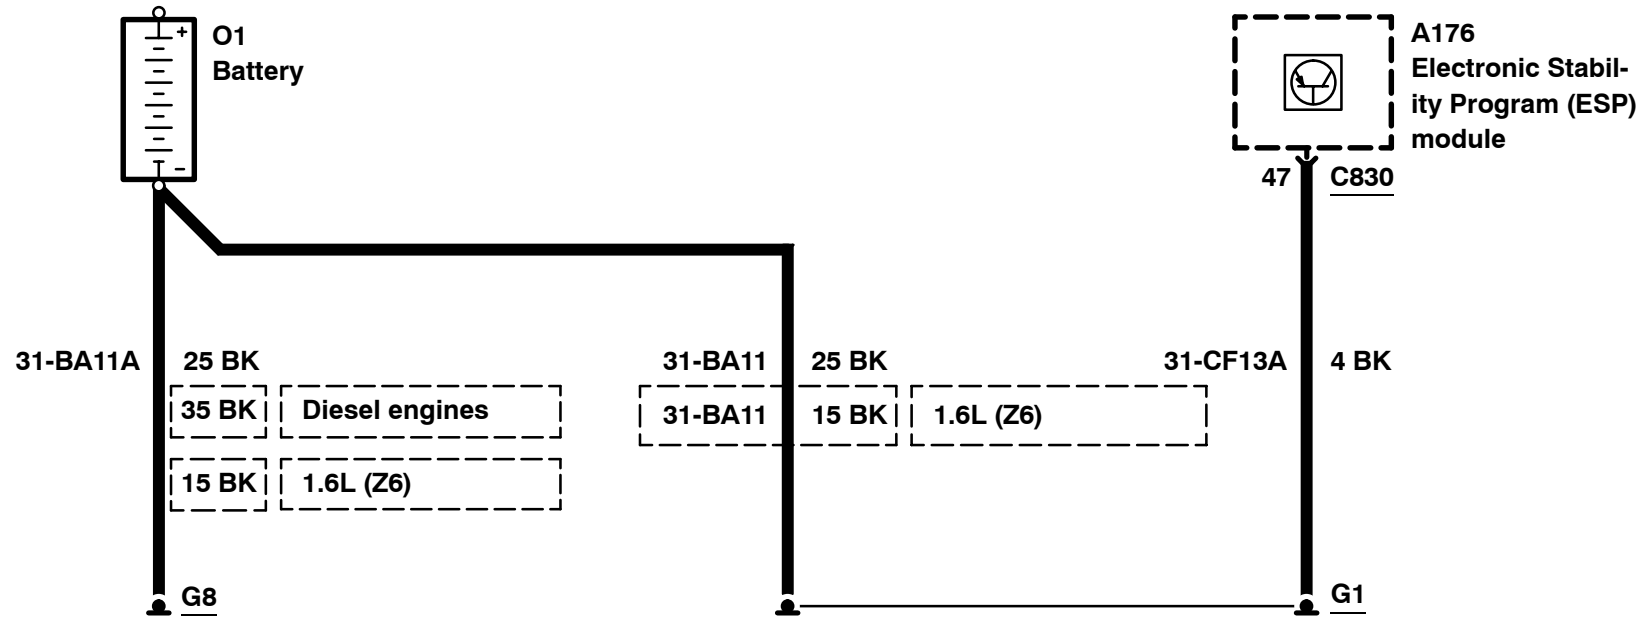


# Ground Distribution – G7

02/2008  
700-04-00-2  
2008.25  
Focus

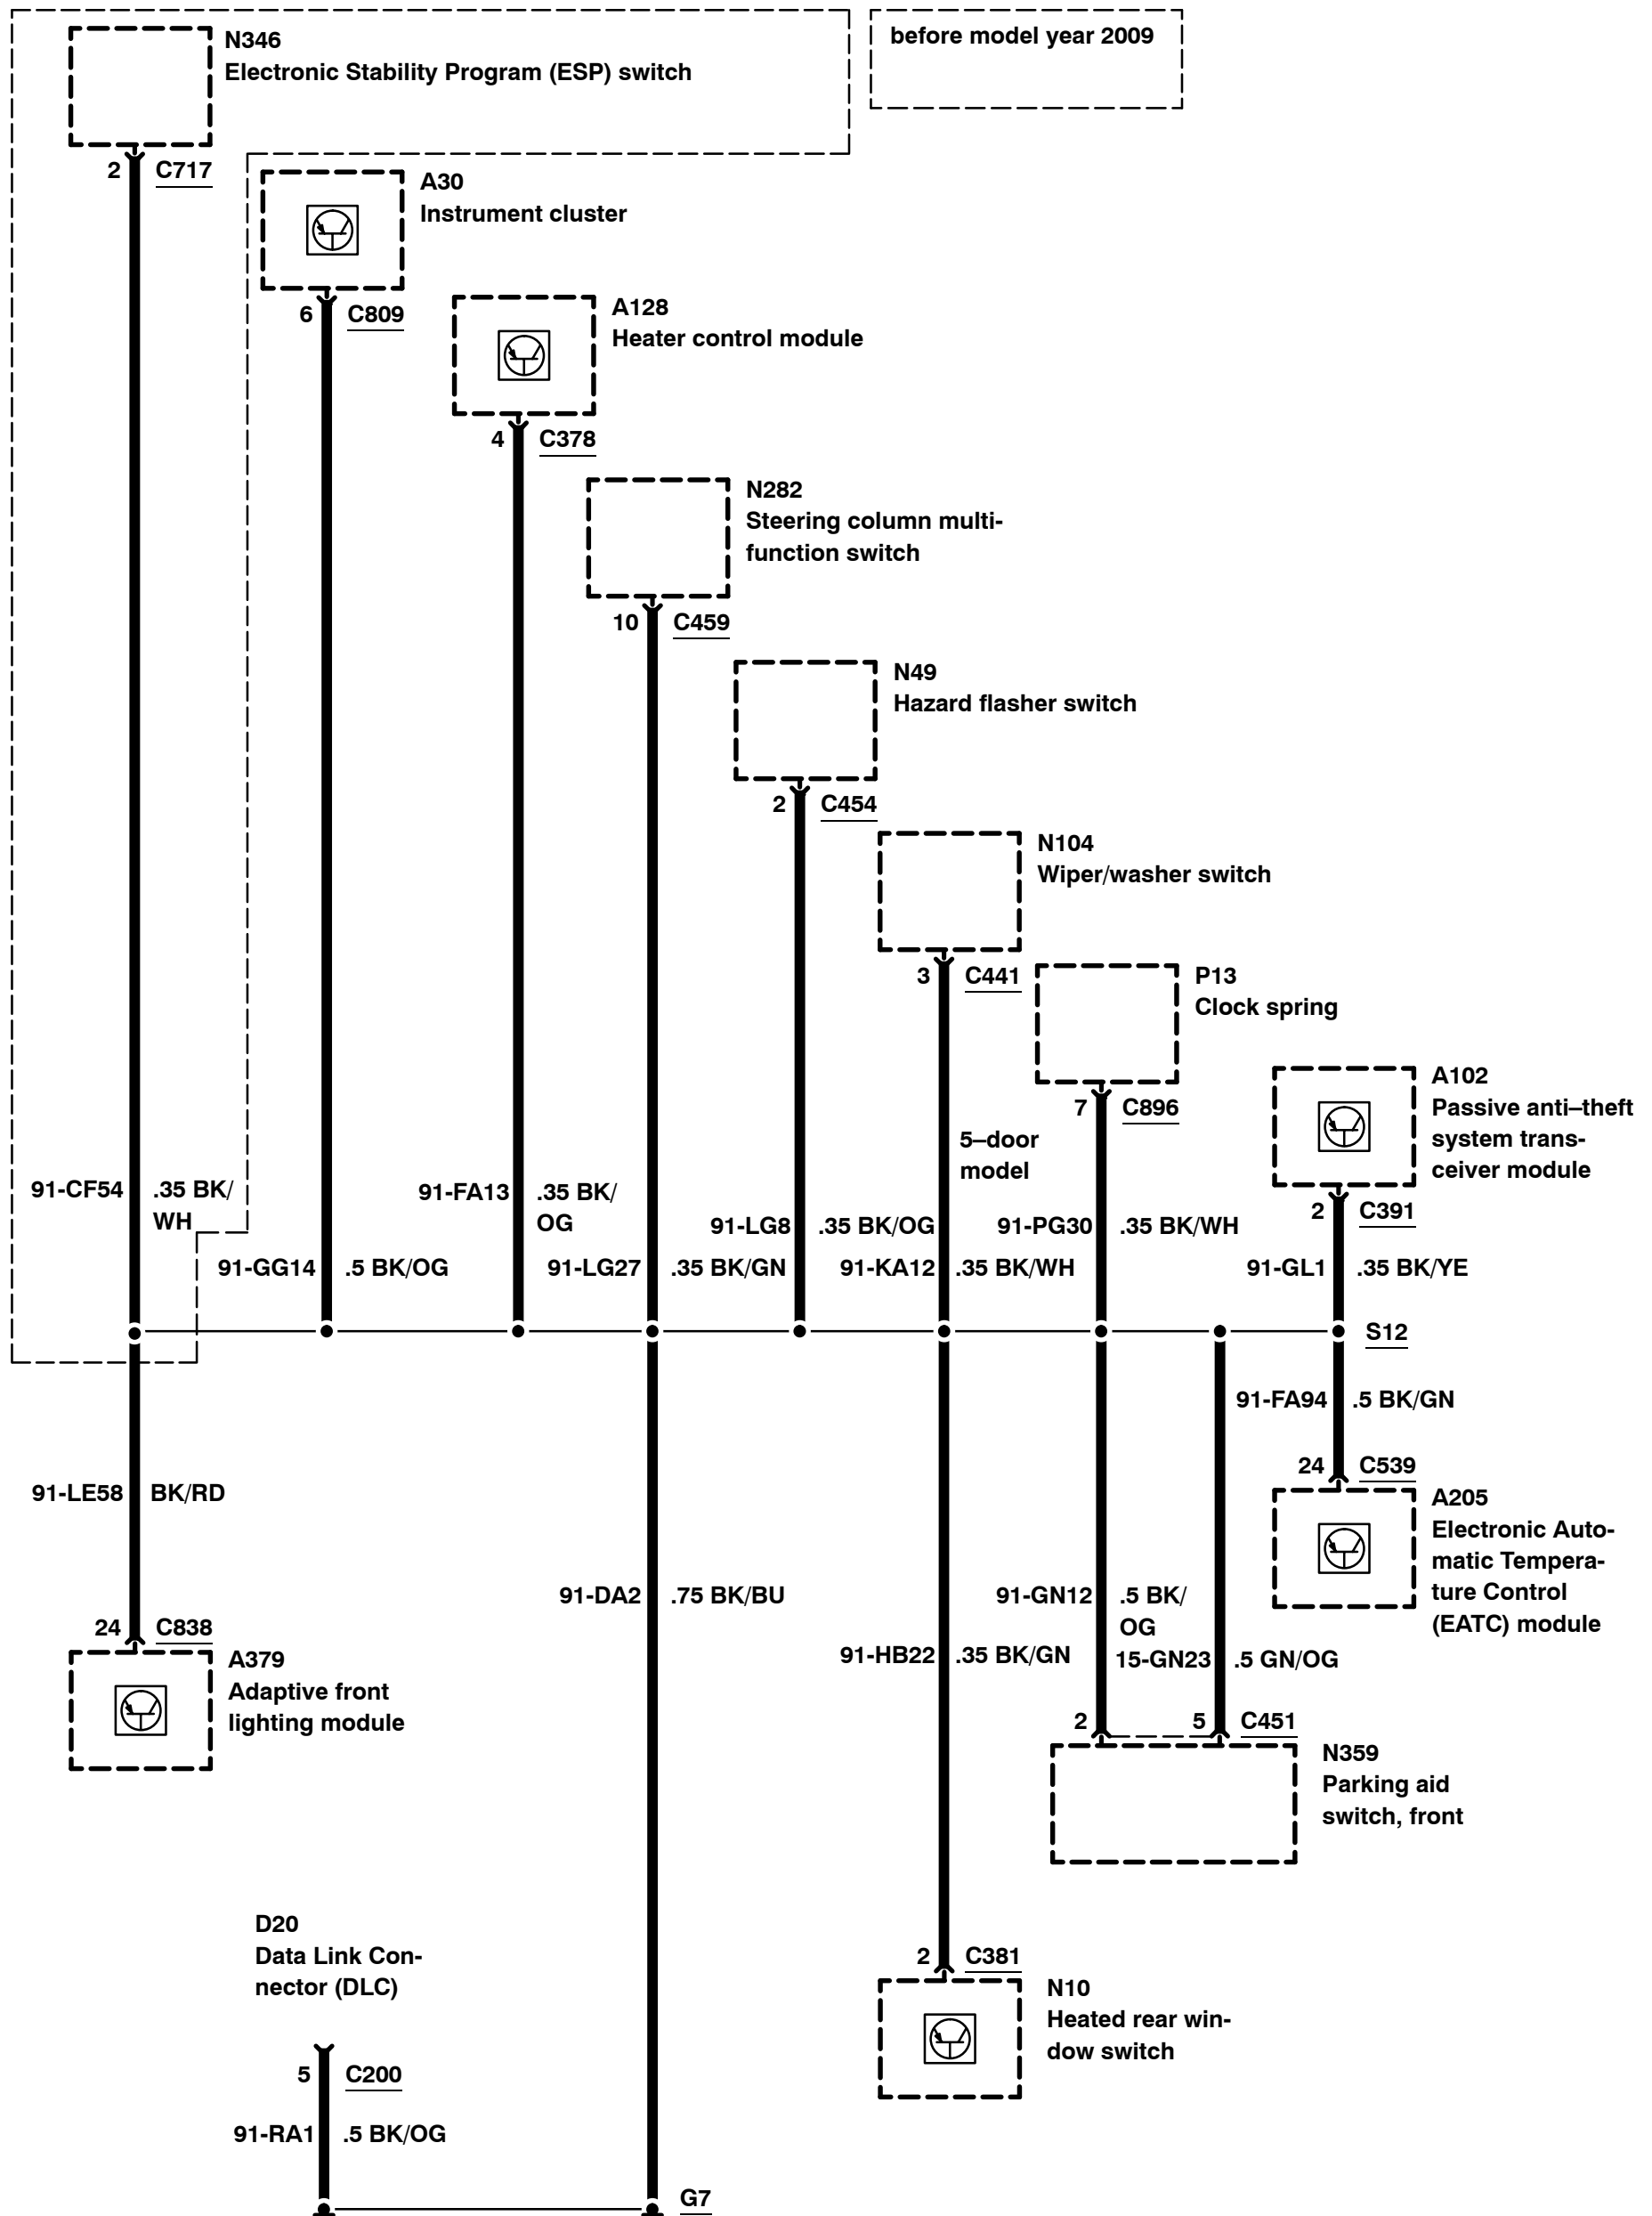

# Ground Distribution – G12, LHD

02/2008  
700-04-00-3  
2008.25  
Focus

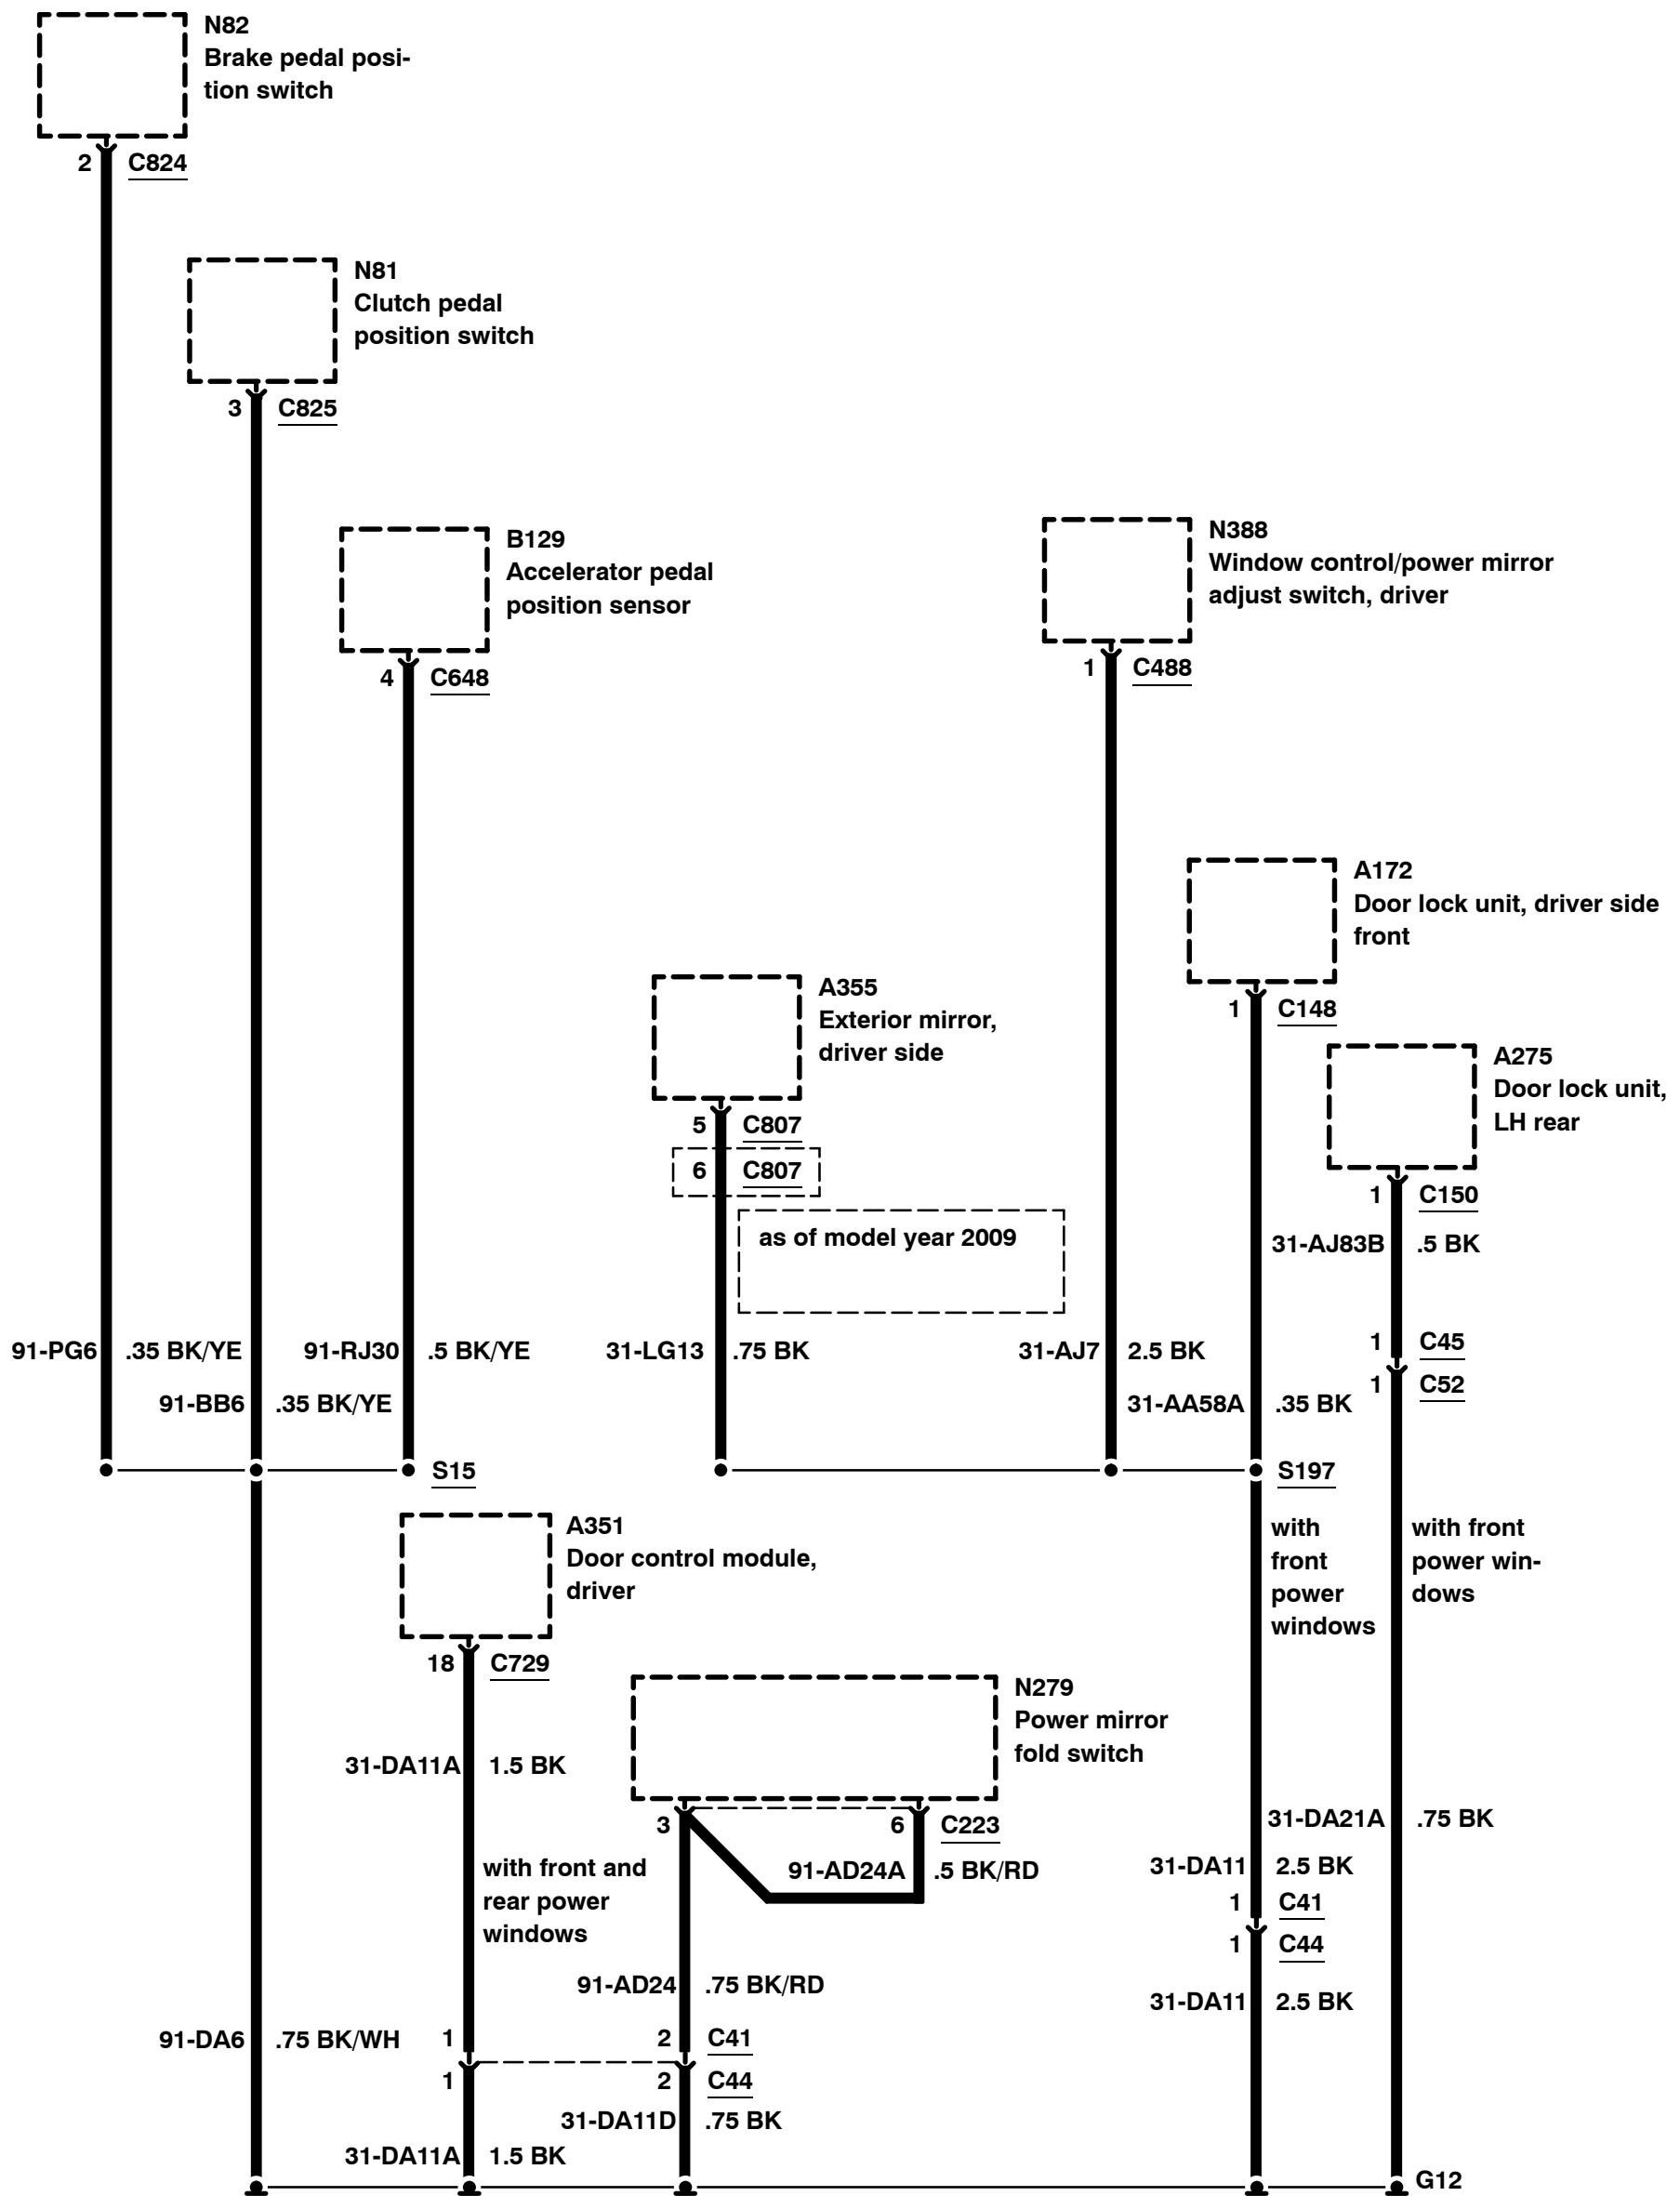


## Ground Distribution – G12, RHD


**700-04-00-4**

**2008.25**

## Focus

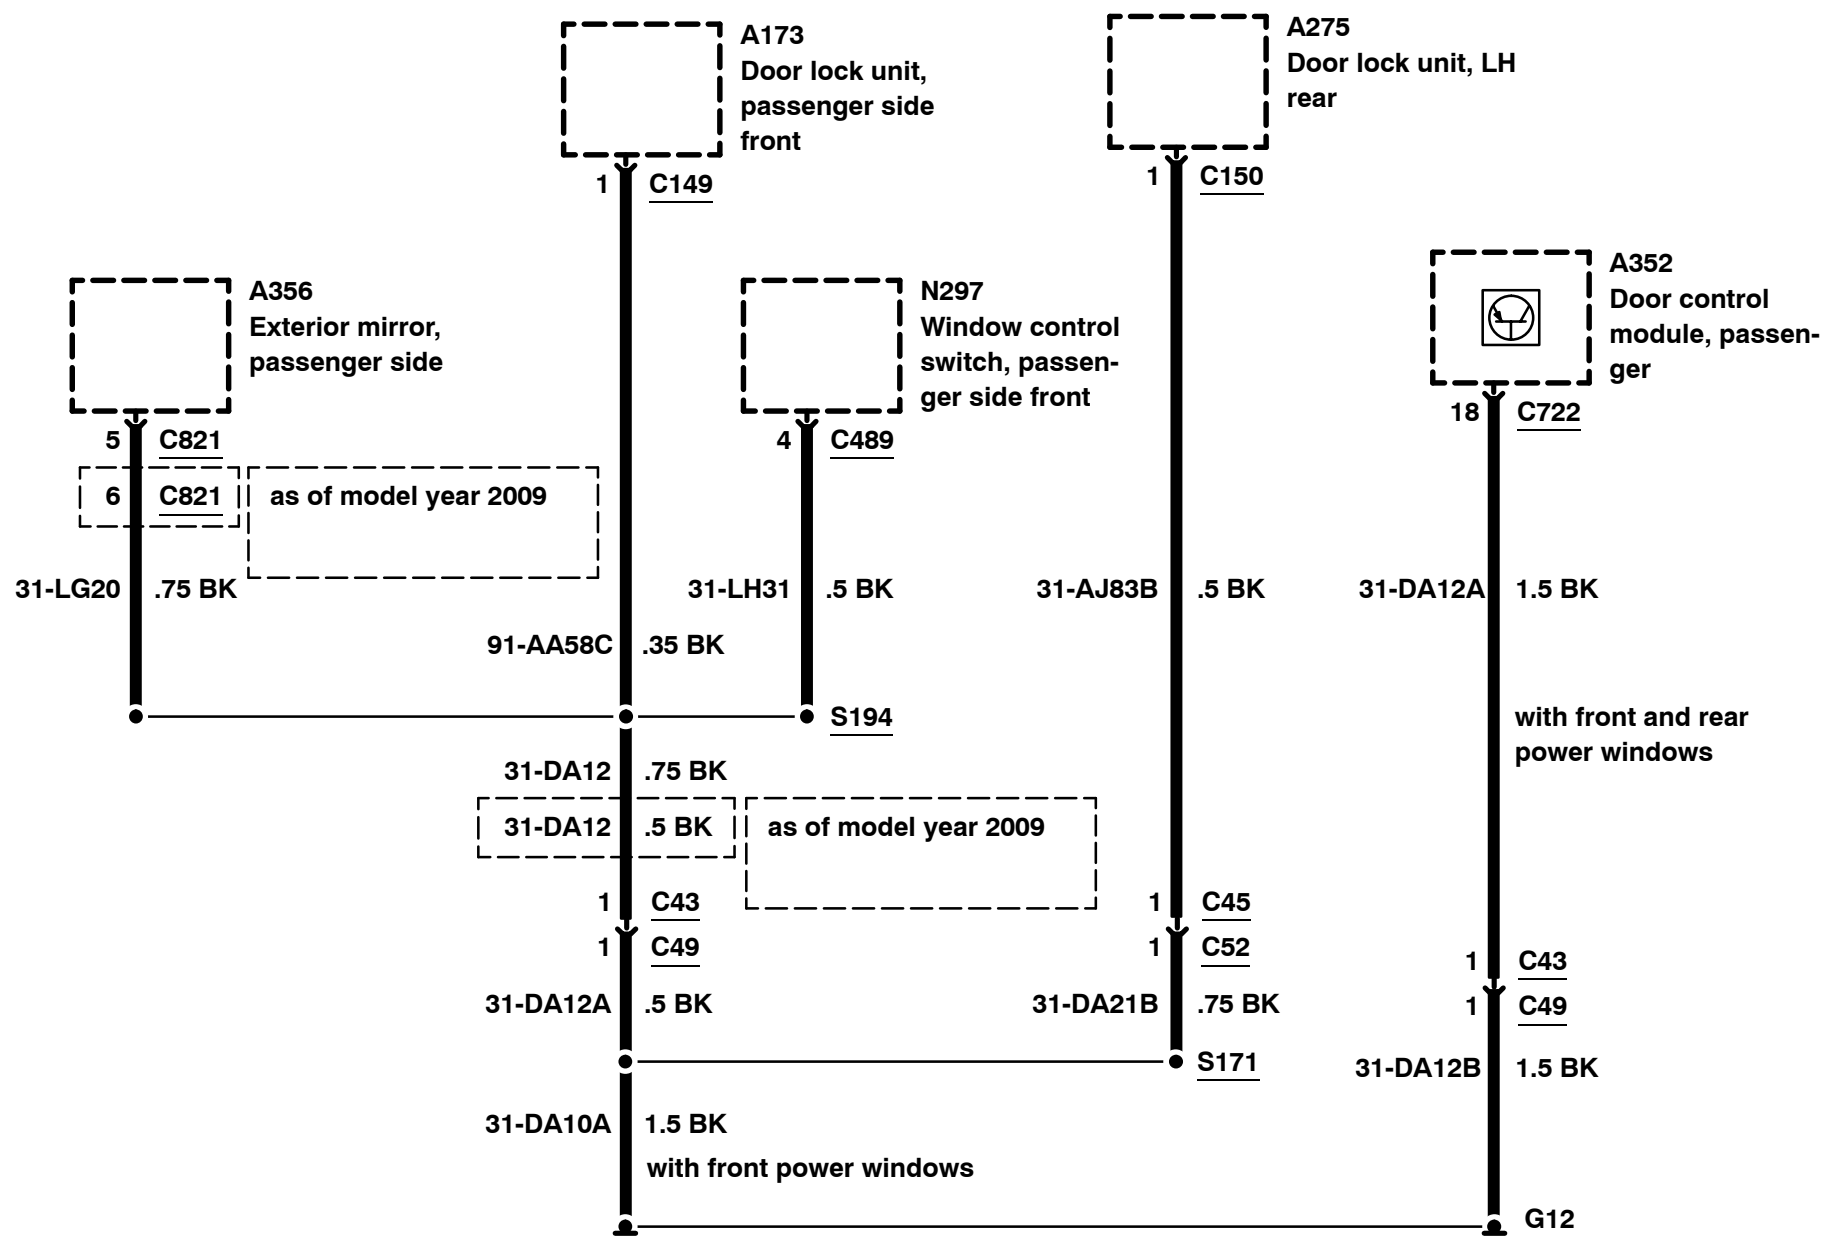




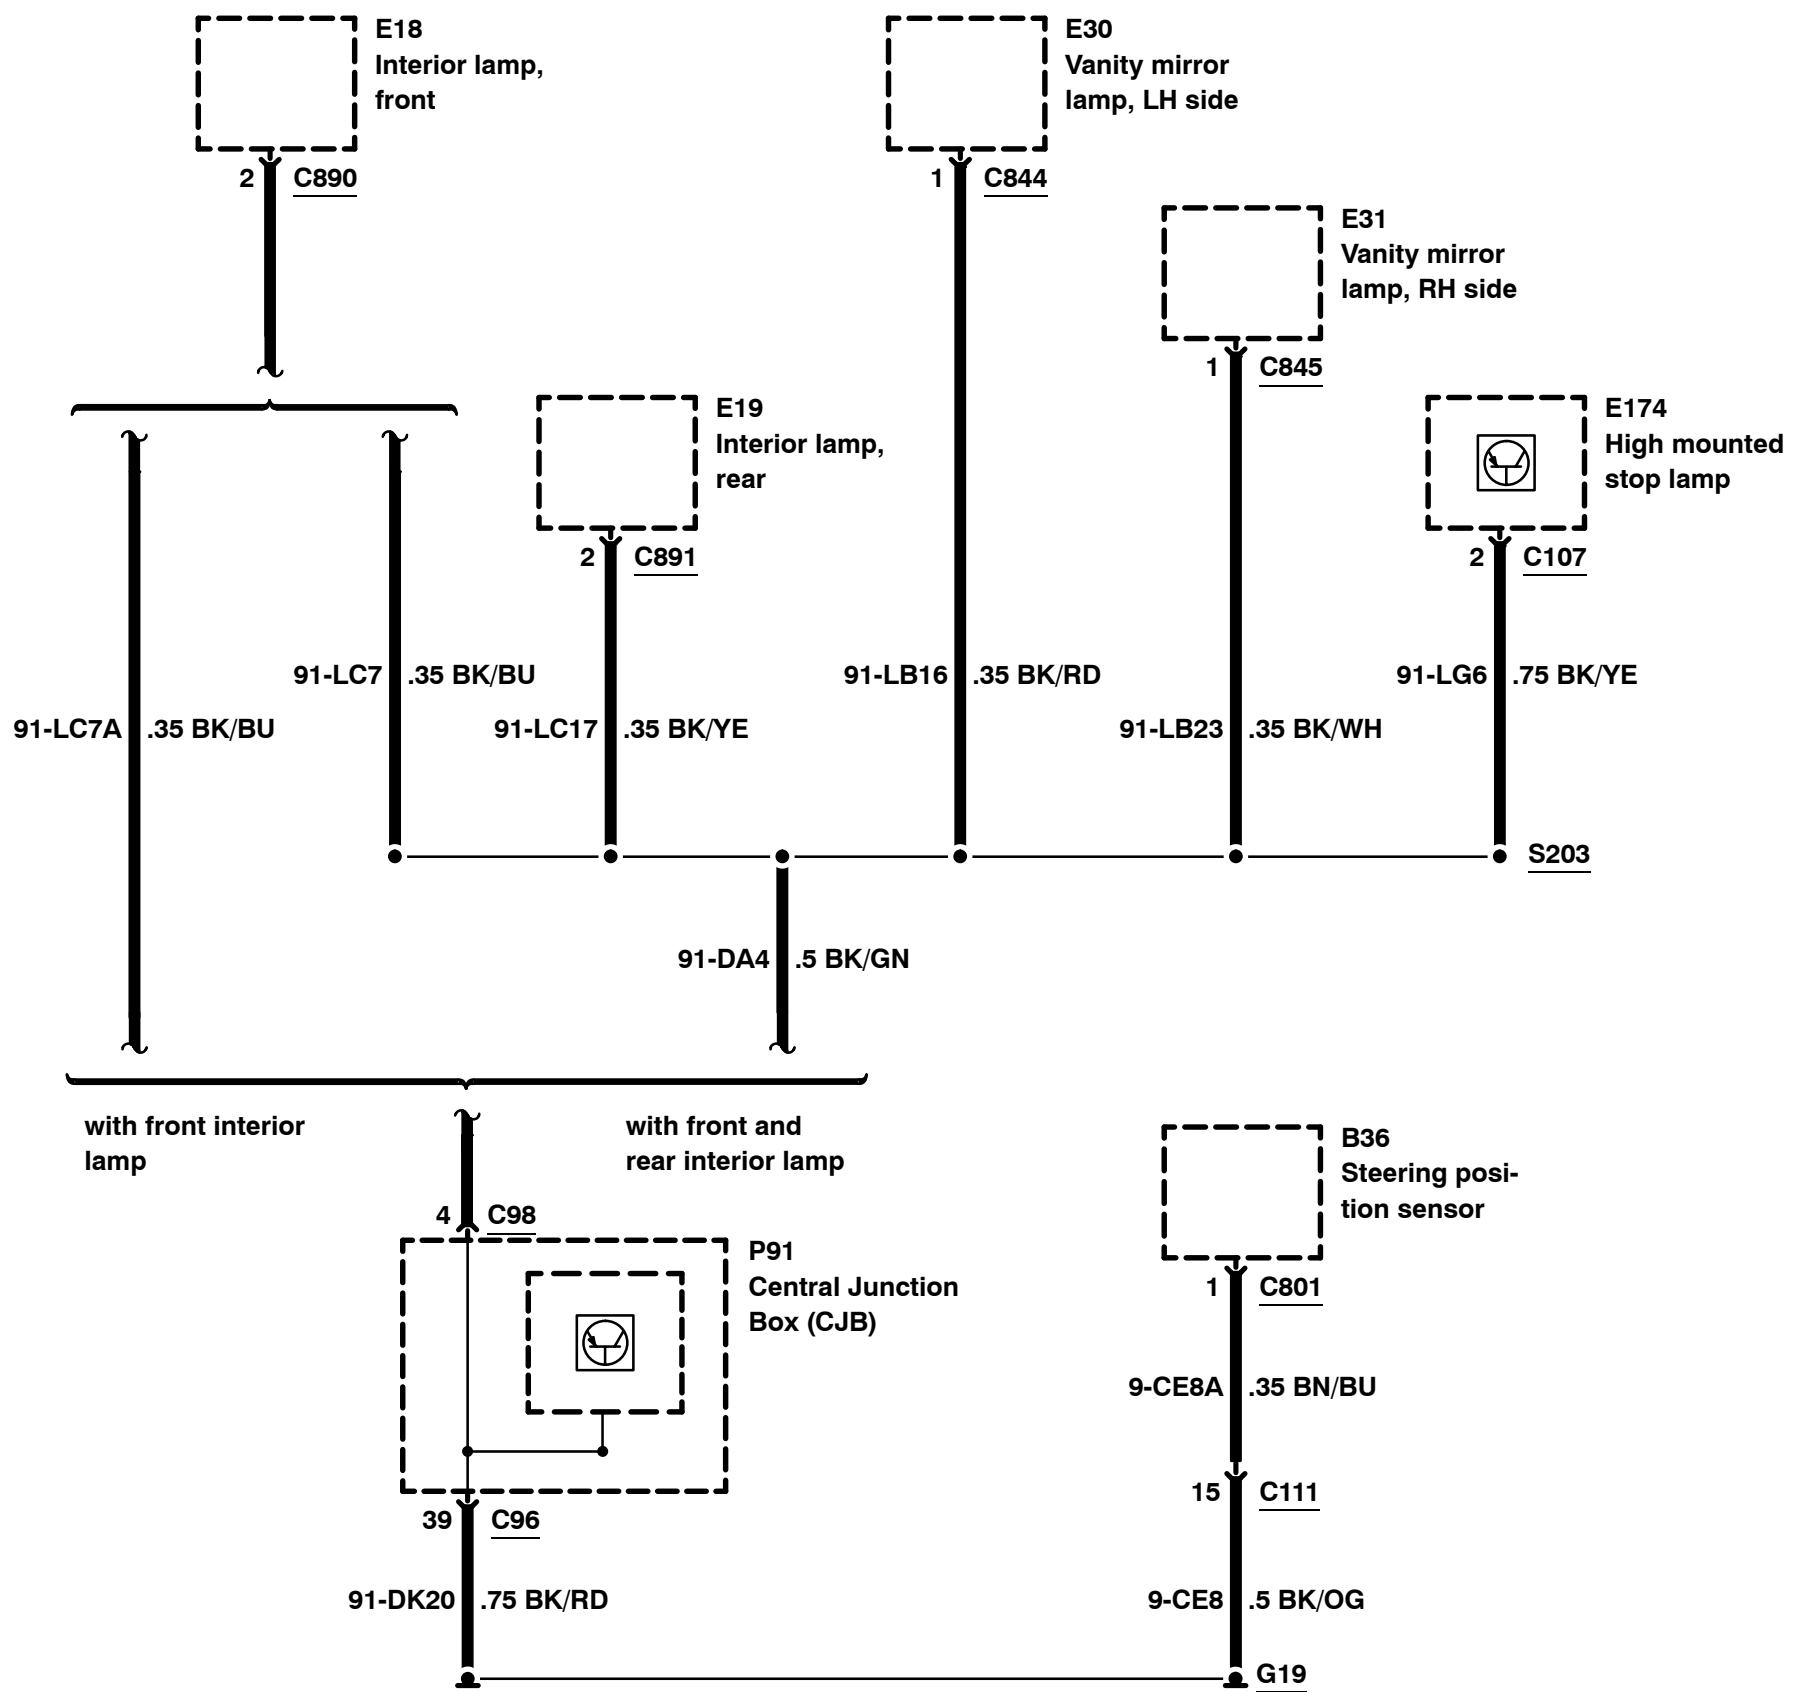


# Ground Distribution – G20

02/2008  
700-04-00-6  
2008.25  
Focus

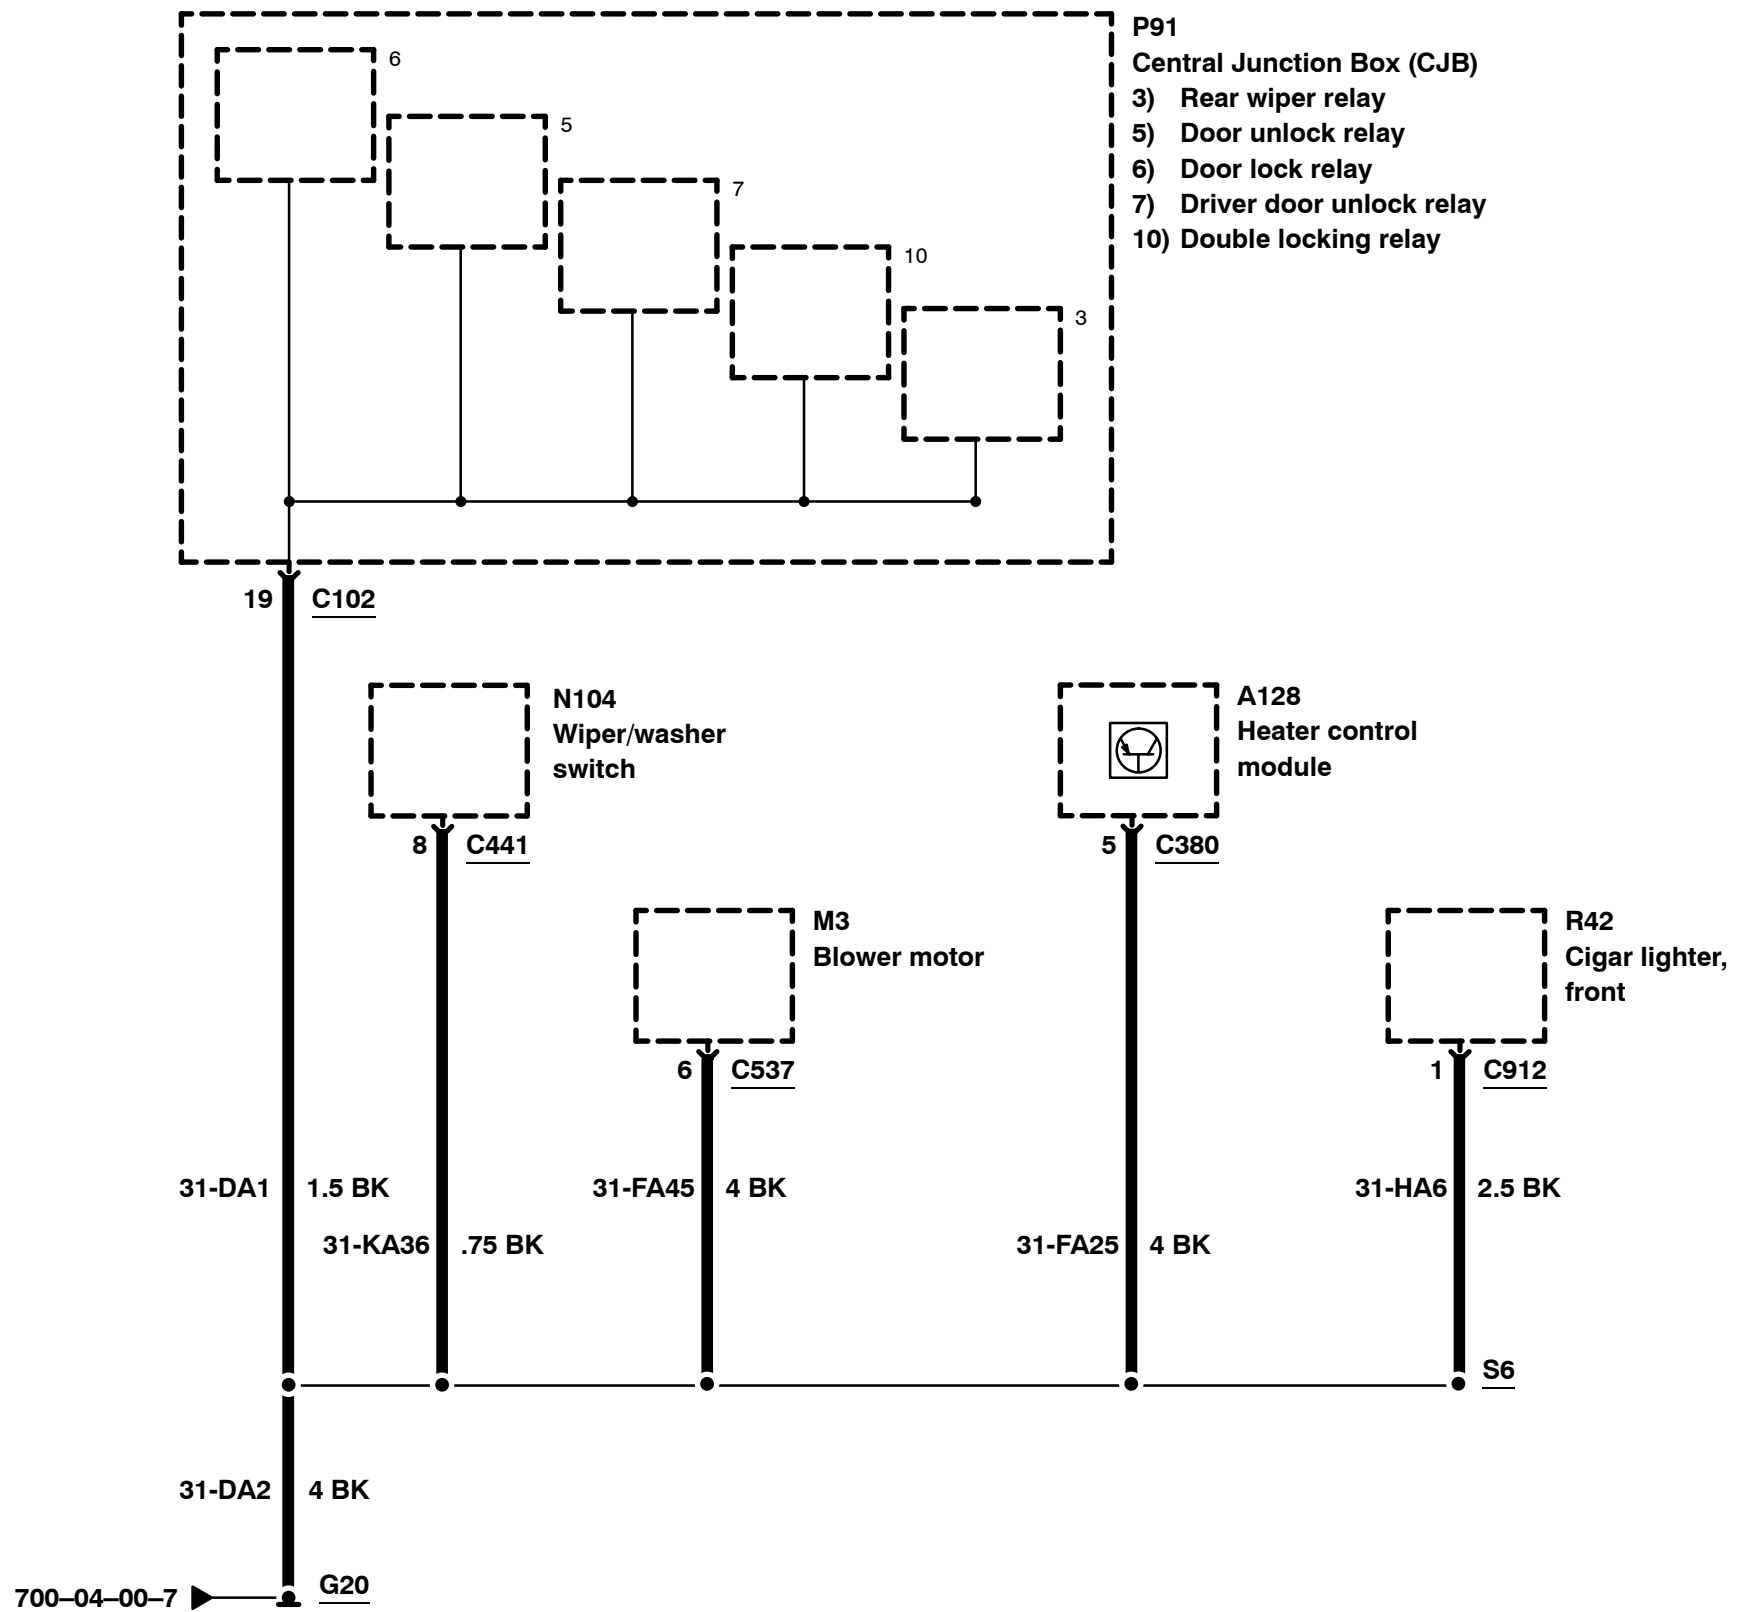


# Ground Distribution – G20, G39

02/2008  
700-04-00-7  
2008.25  
Focus

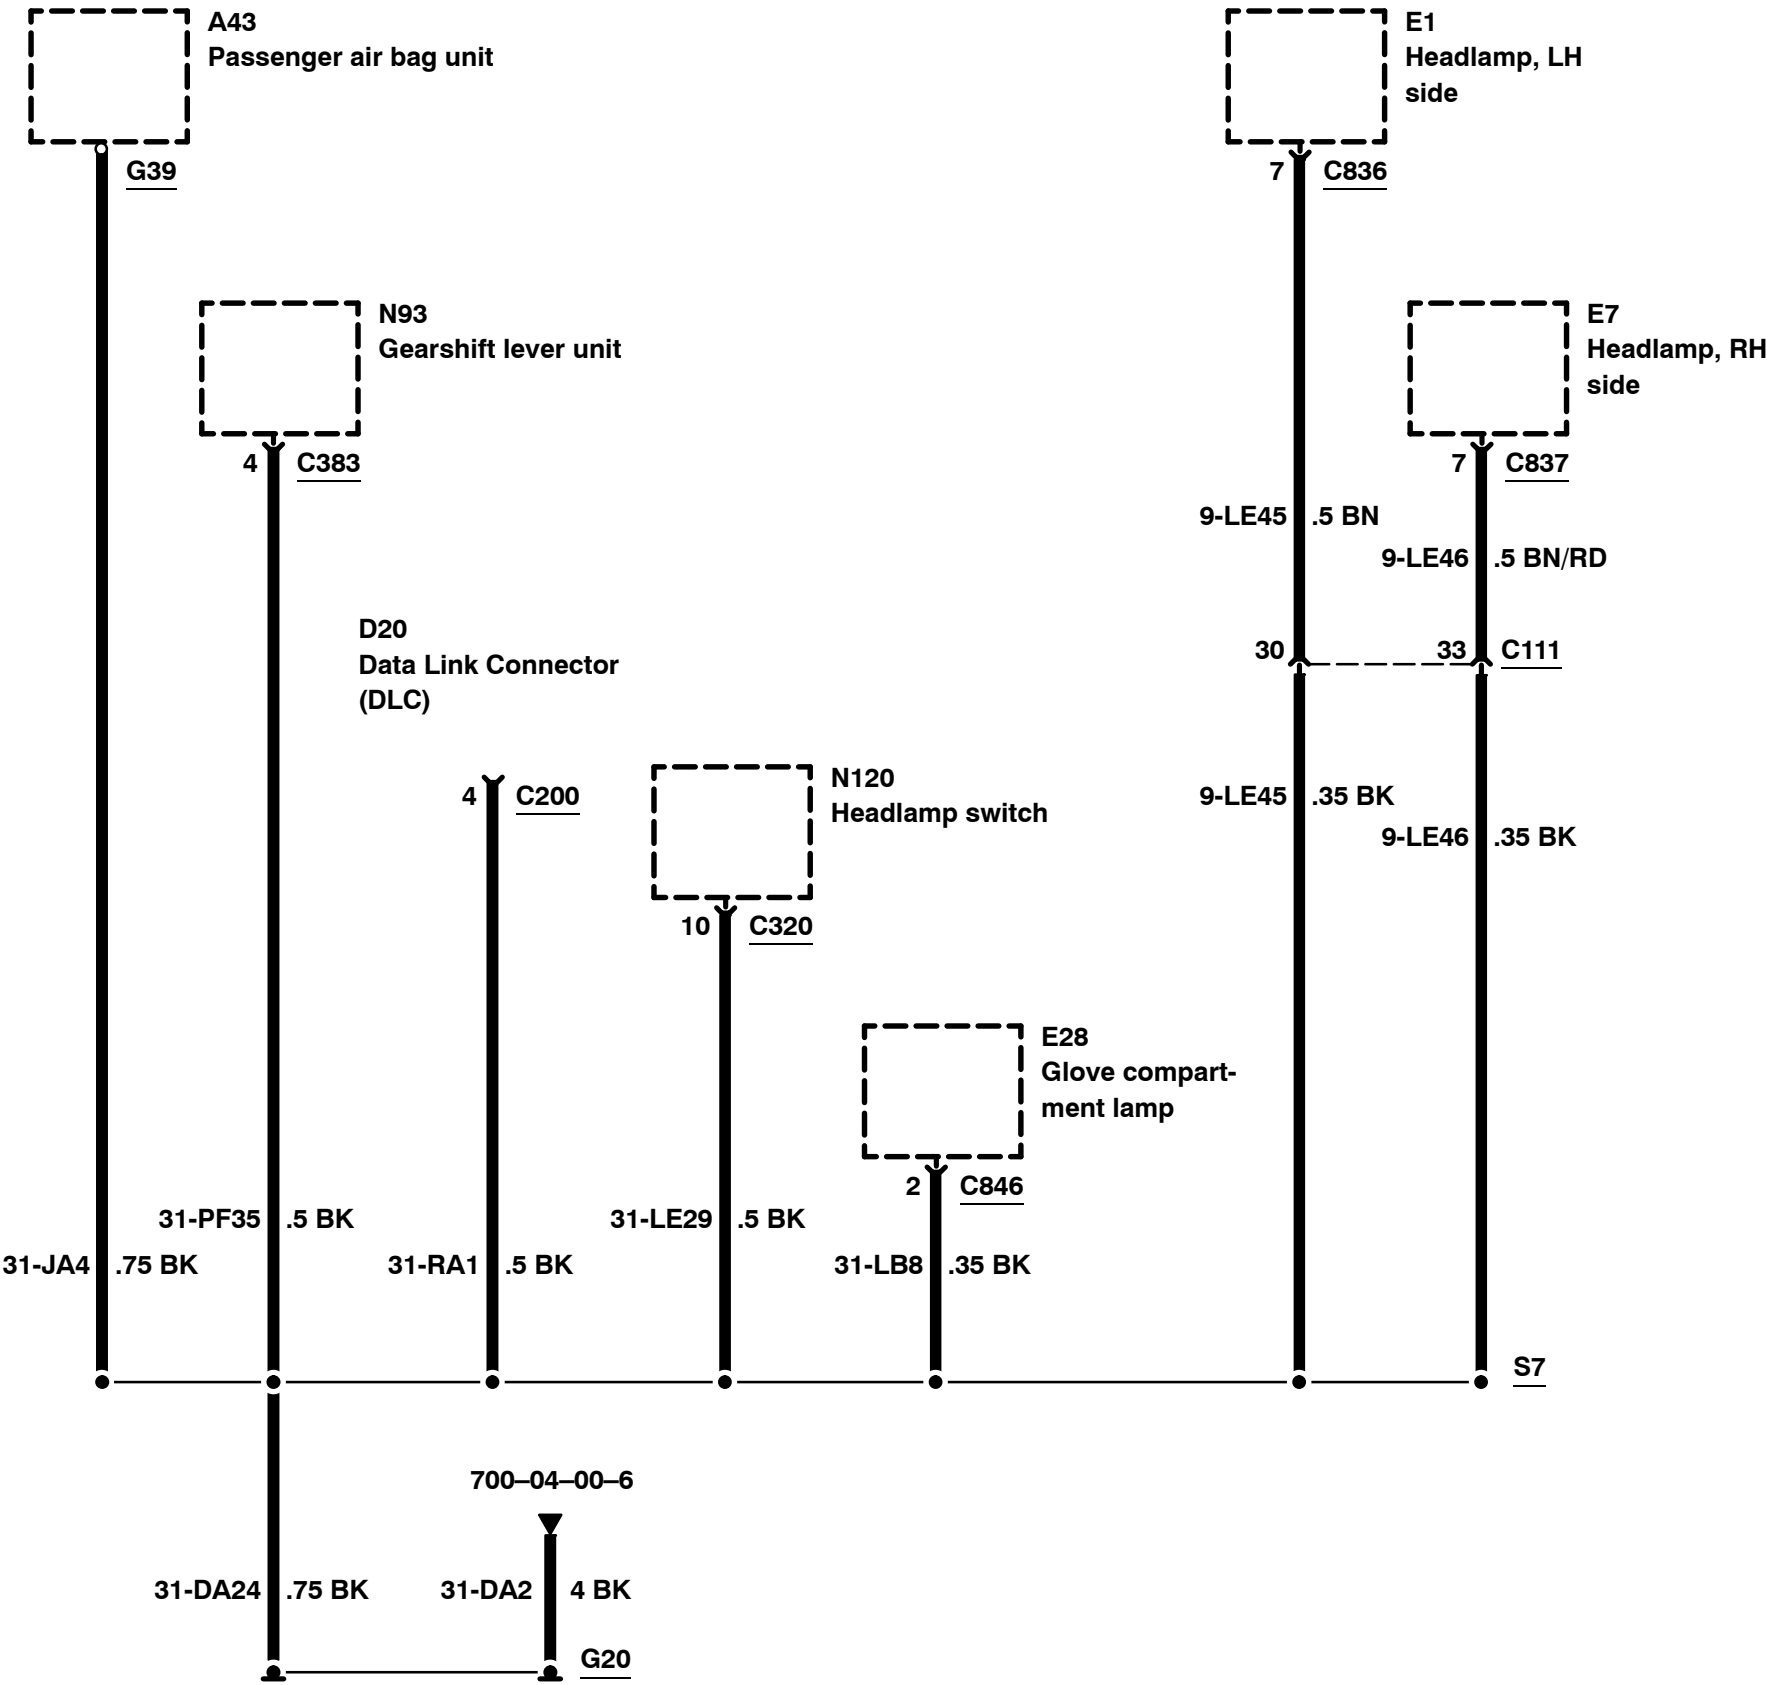


Ground Distribution – G31

02/2008  
700-04-00-8  
2008.25  
Focus

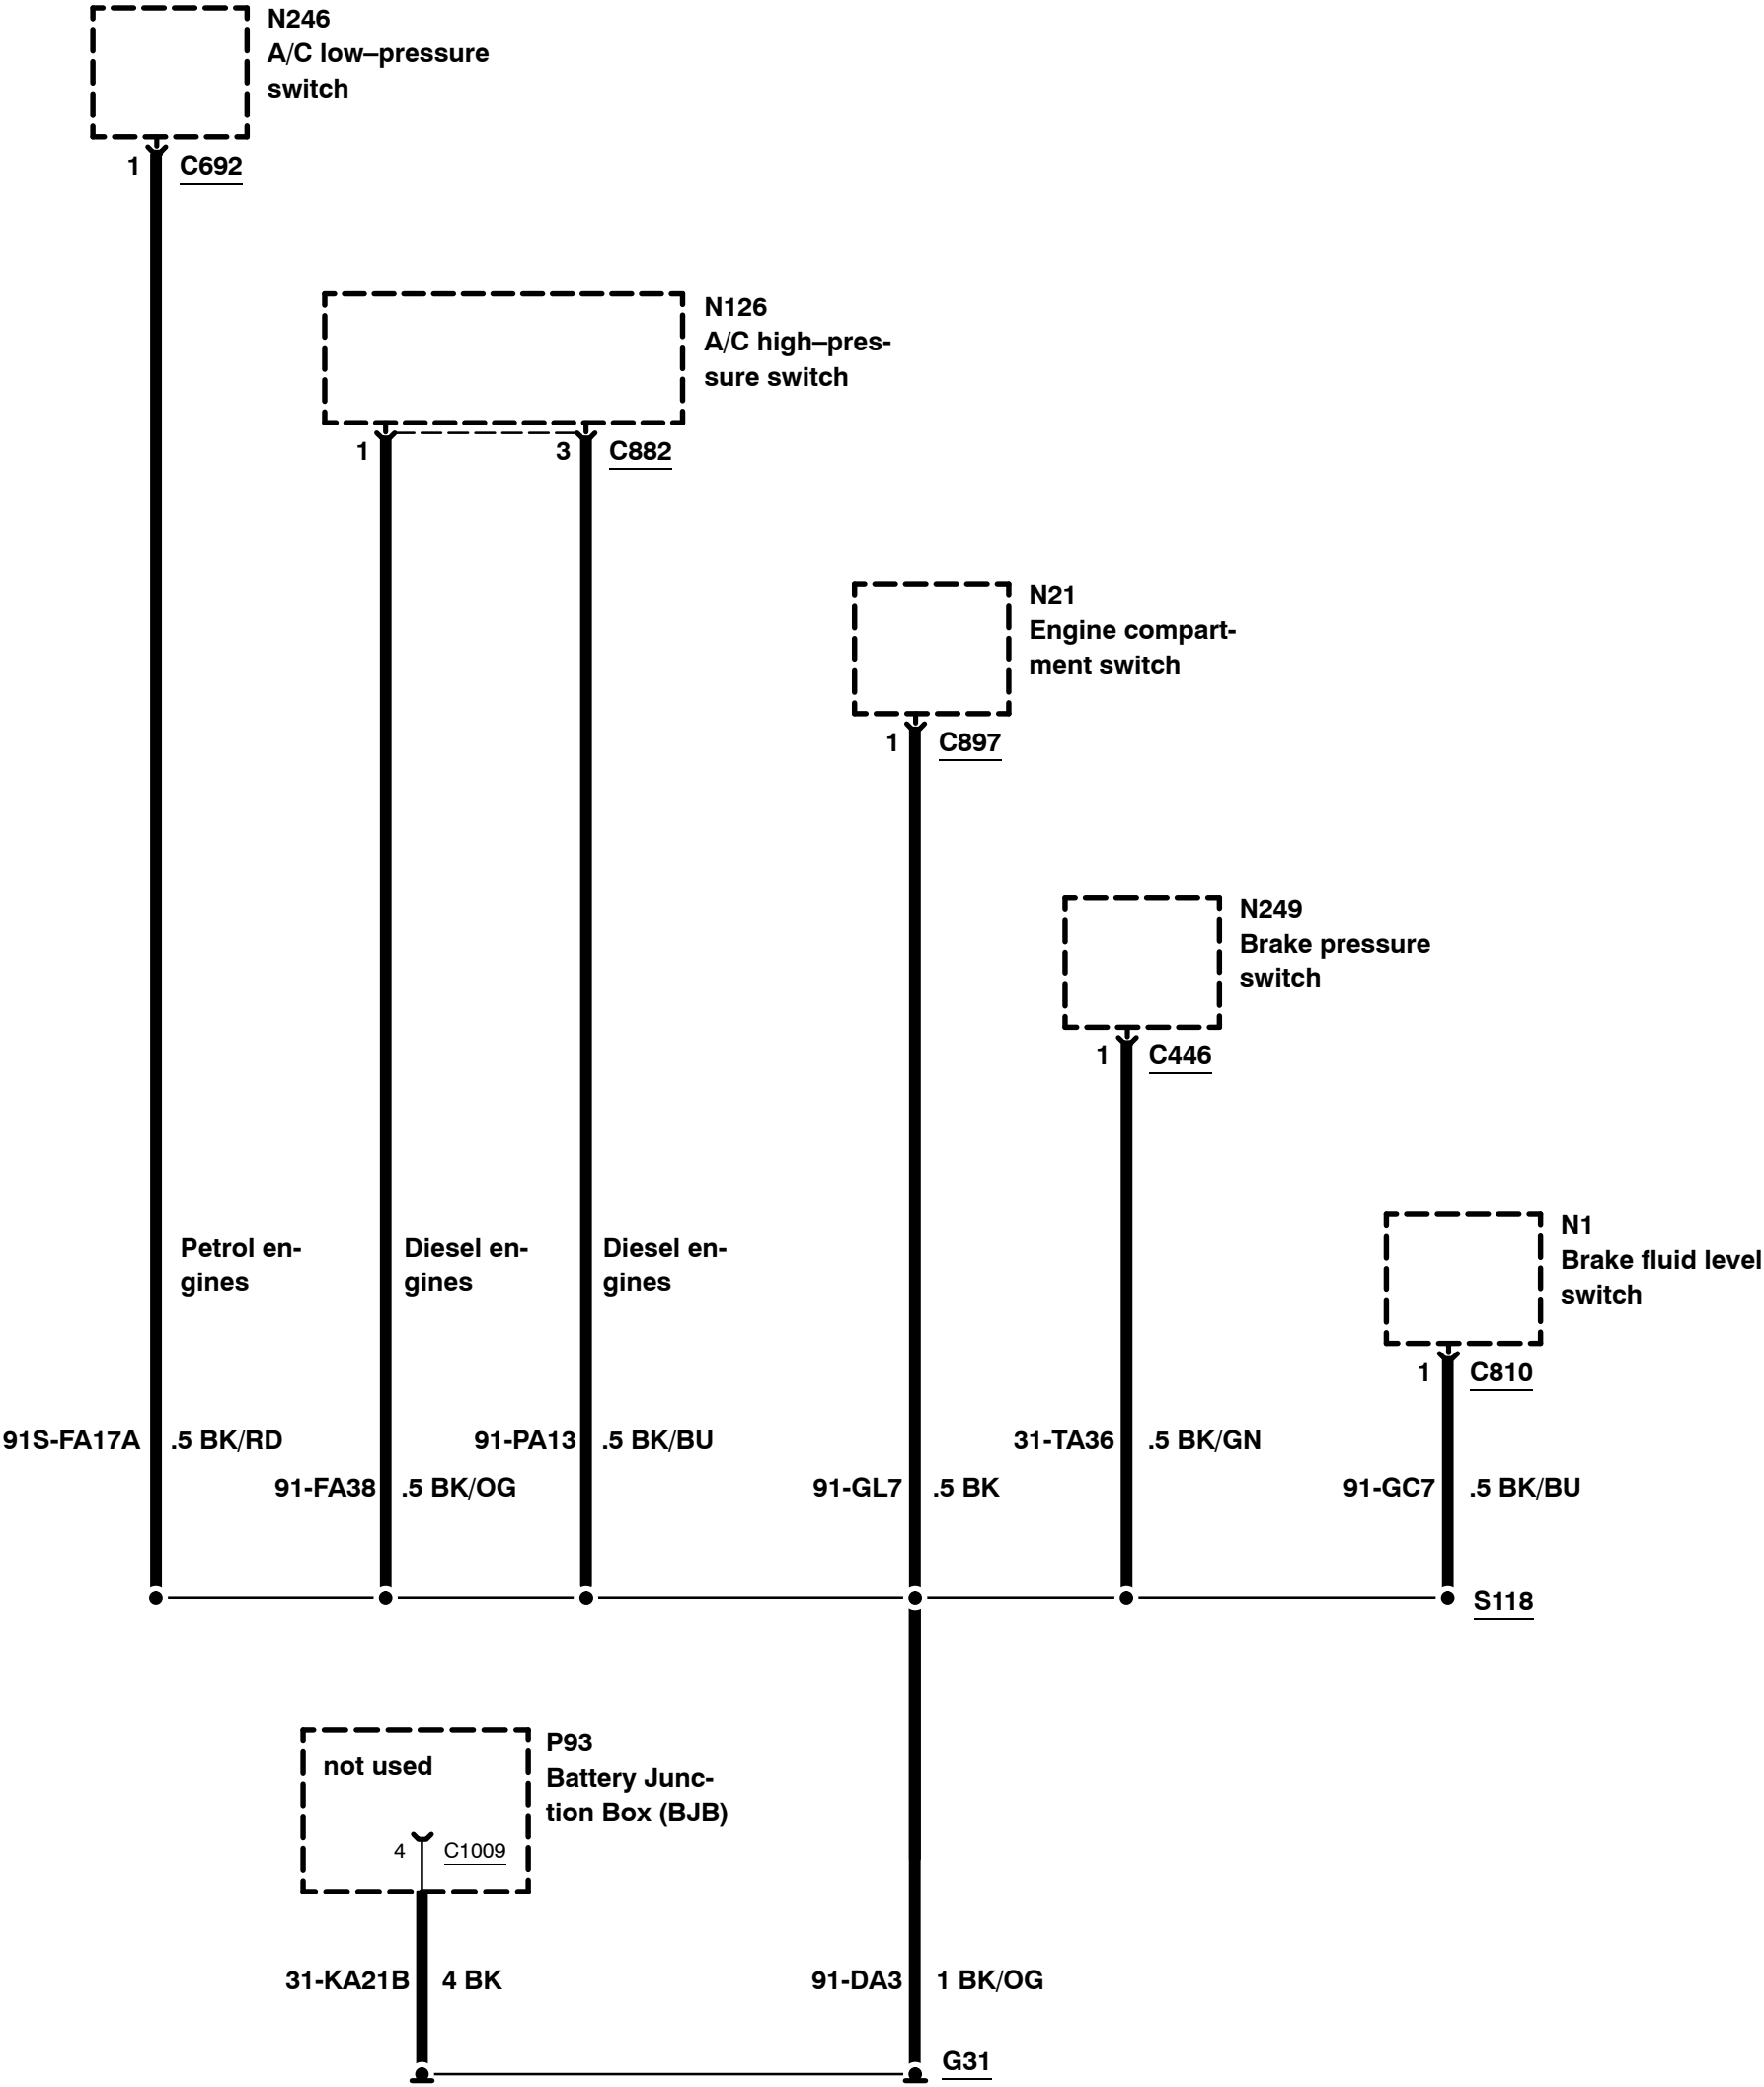


# Ground Distribution – G37

02/2008  
700-04-00-9  
2008.25  
Focus

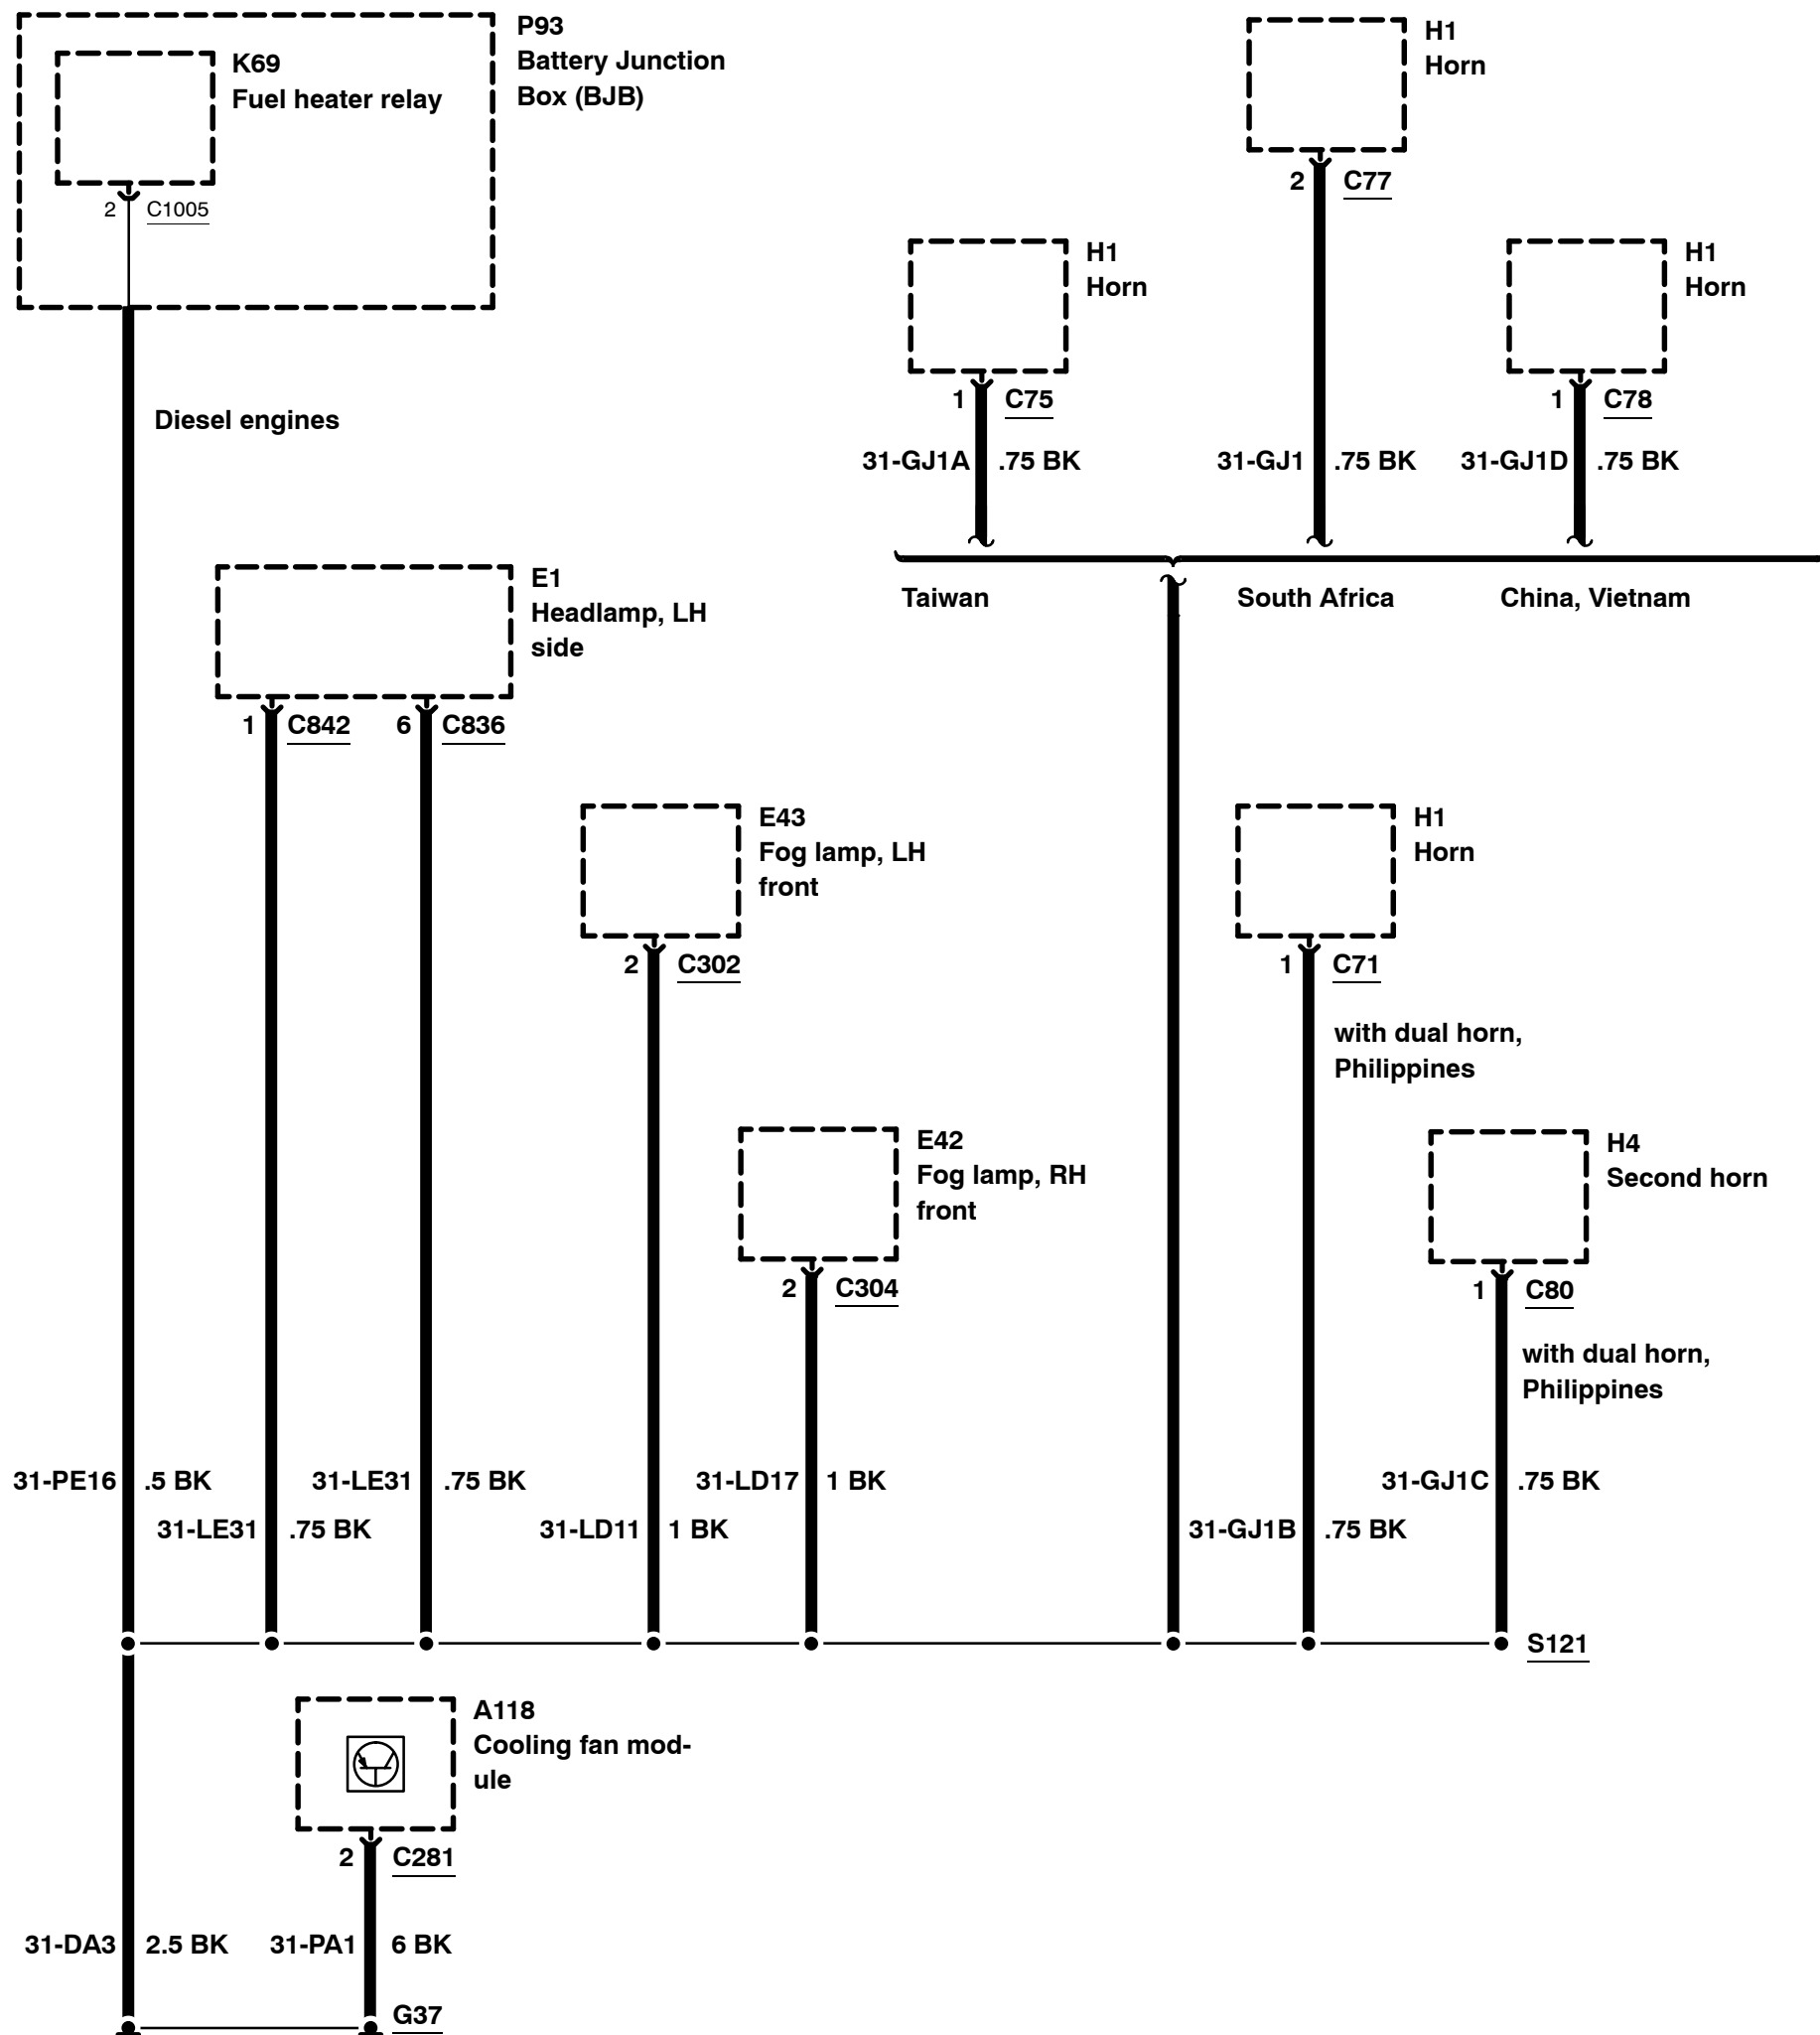


# Ground Distribution – G45, LHD

02/2008  
700-04-00-10  
2008.25  
Focus

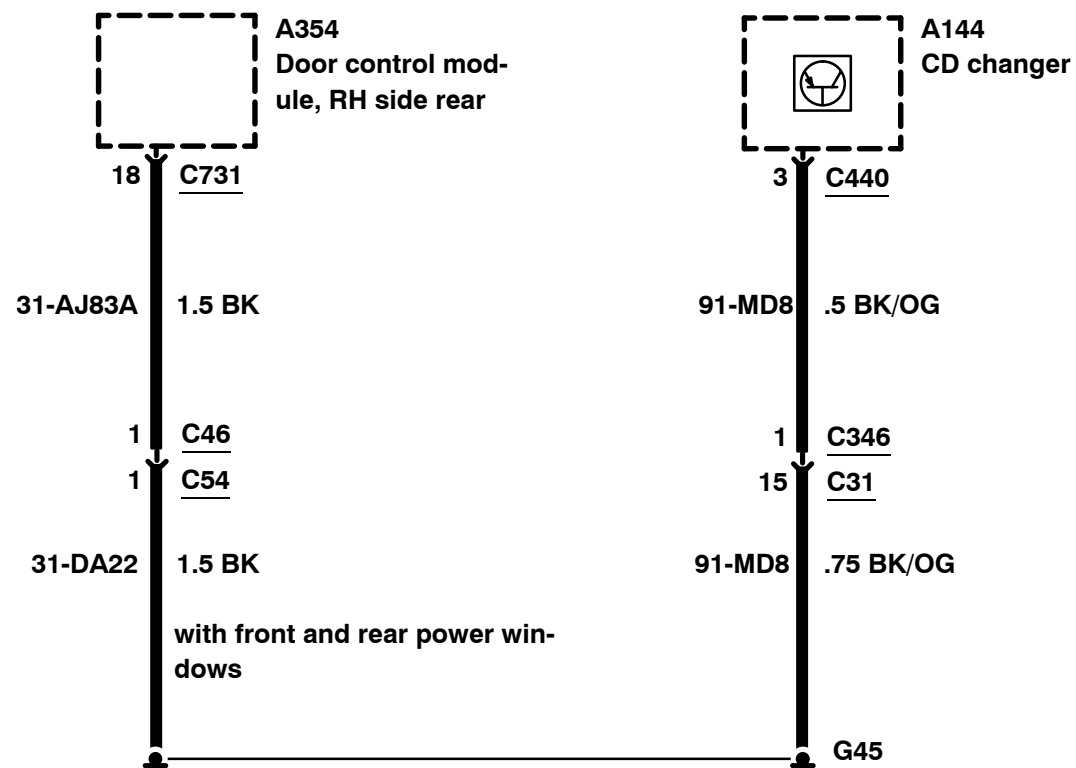

# Ground Distribution – G45, RHD


02/2008  
700-04-00-11  
2008.25  
Focus

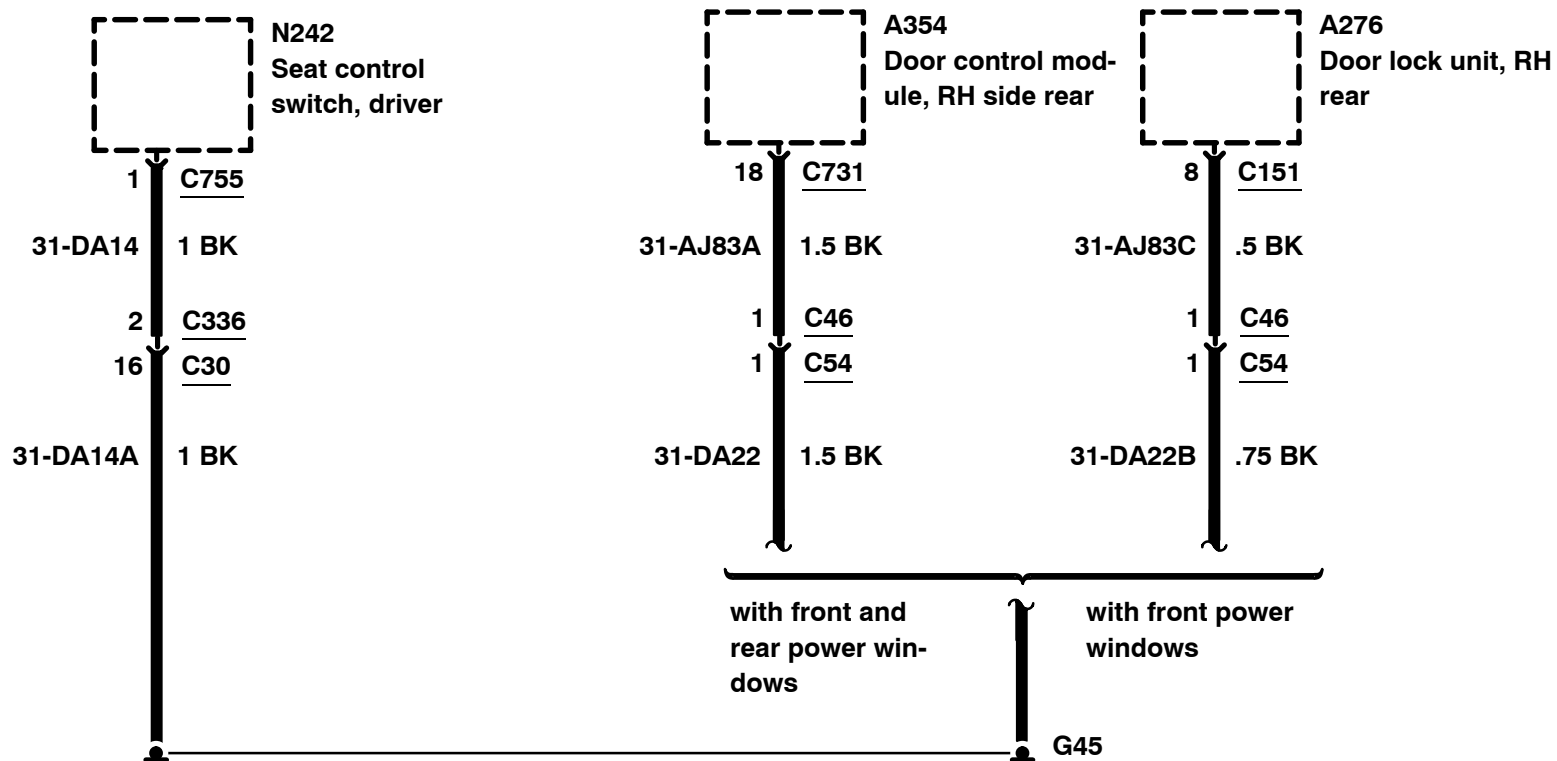



# Ground Distribution – G53, LHD, with front power windows


02/2008  
700-04-00-12  
2008.25  
Focus

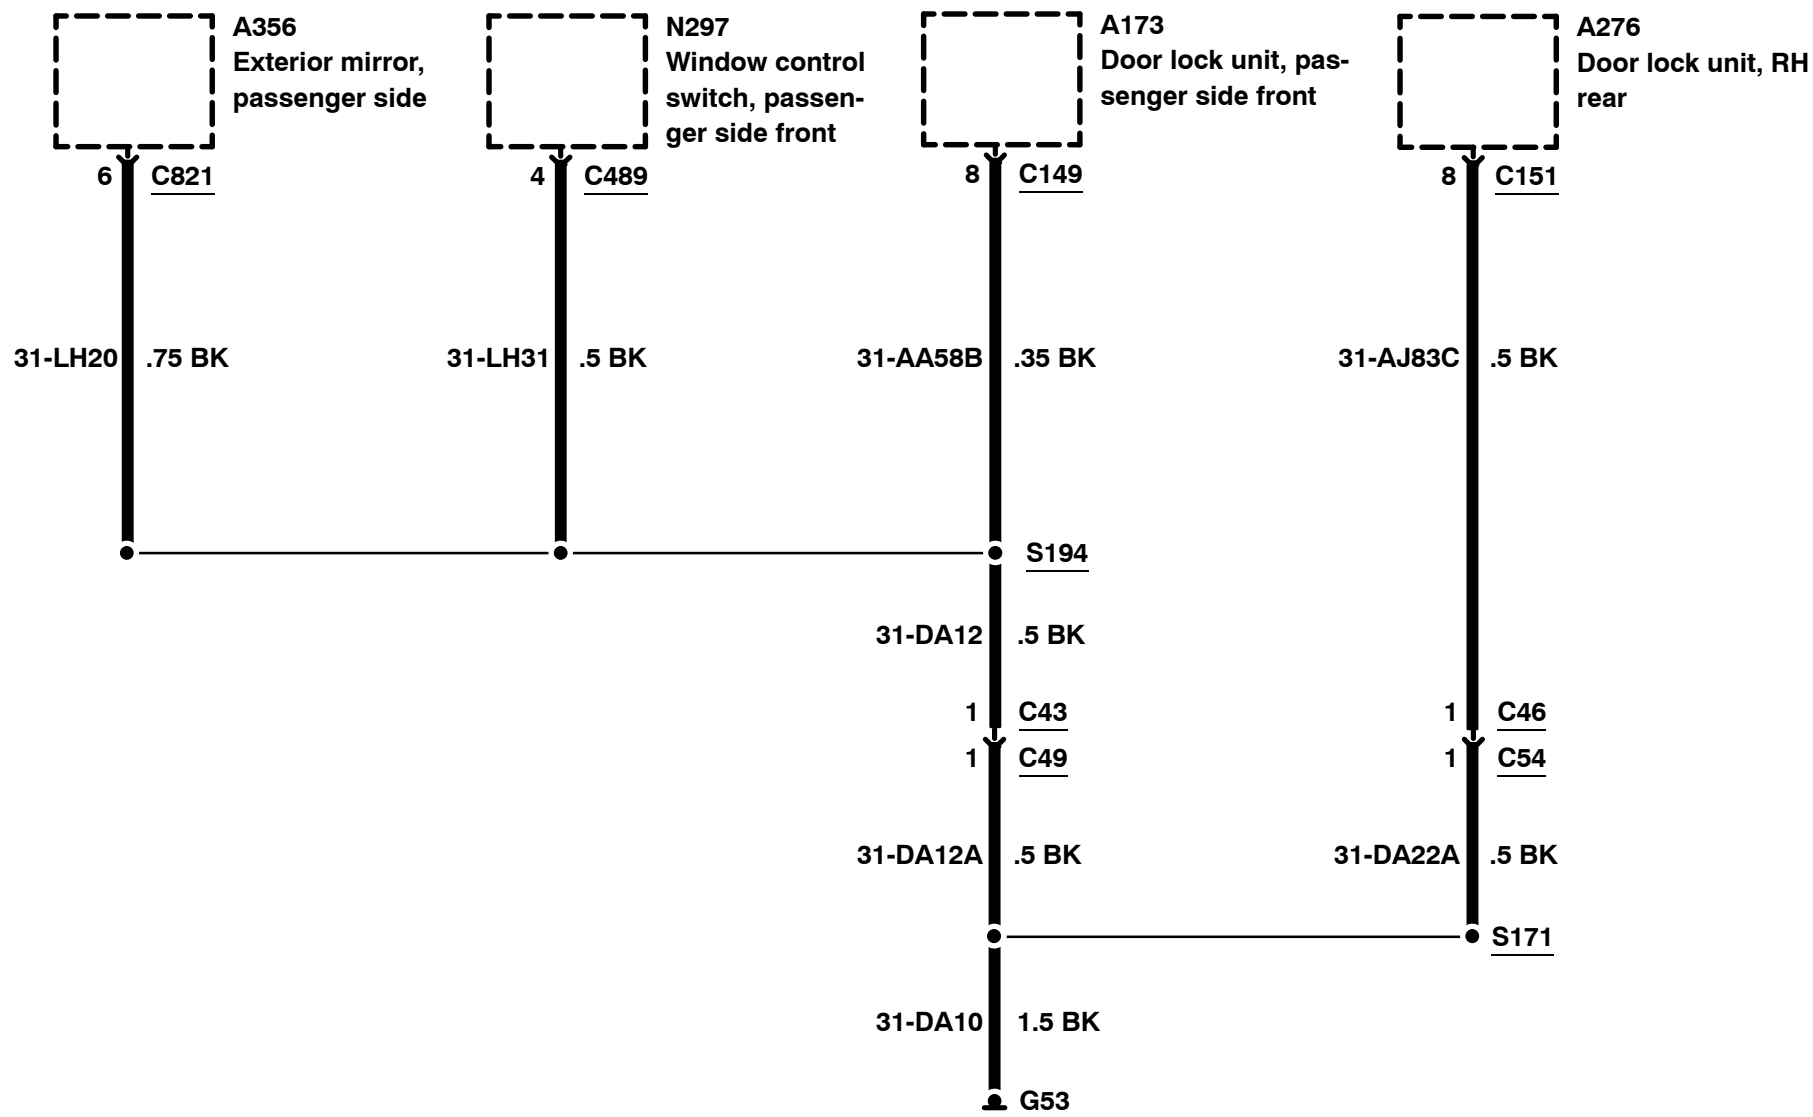




# Ground Distribution – G53, RHD, with front power windows

02/2008  
700-04-00-13  
2008.25  
Focus

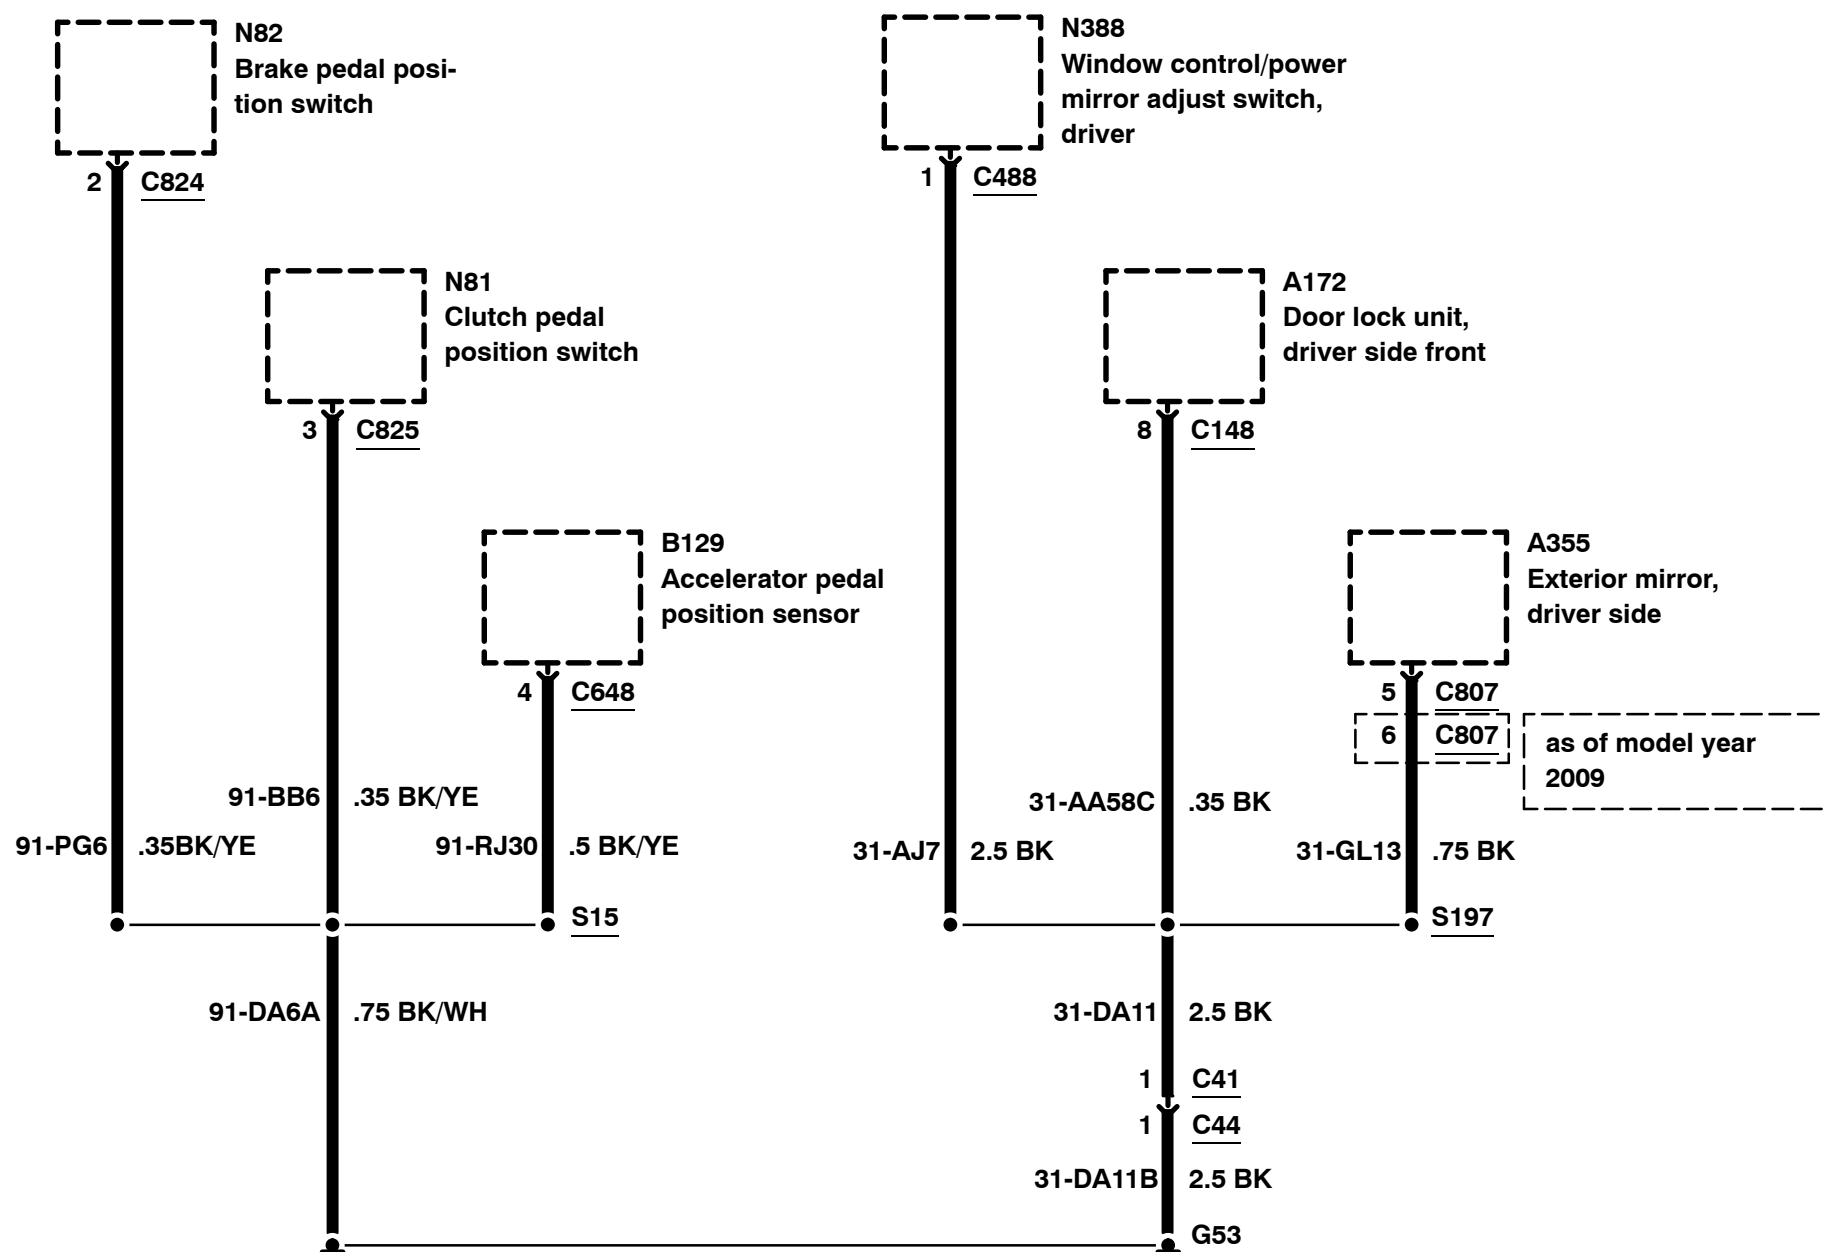


# Ground Distribution – G53, LHD, with front and rear power windows

02/2008  
700-04-00-14  
2008.25  
Focus

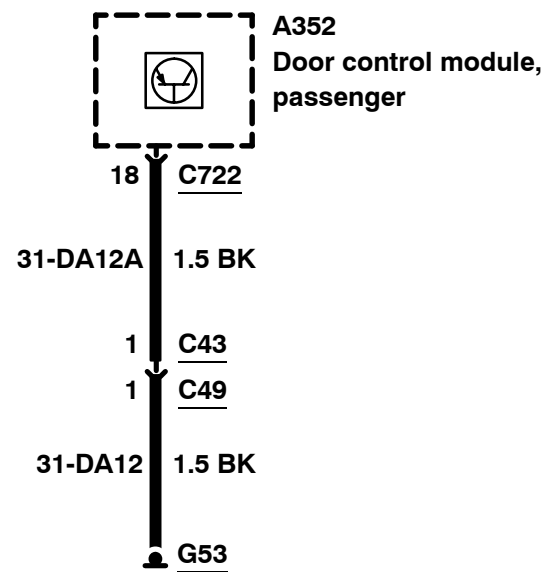


# Ground Distribution – G53, RHD, with front and rear power windows

02/2008  
700-04-00-15  
2008.25  
Focus

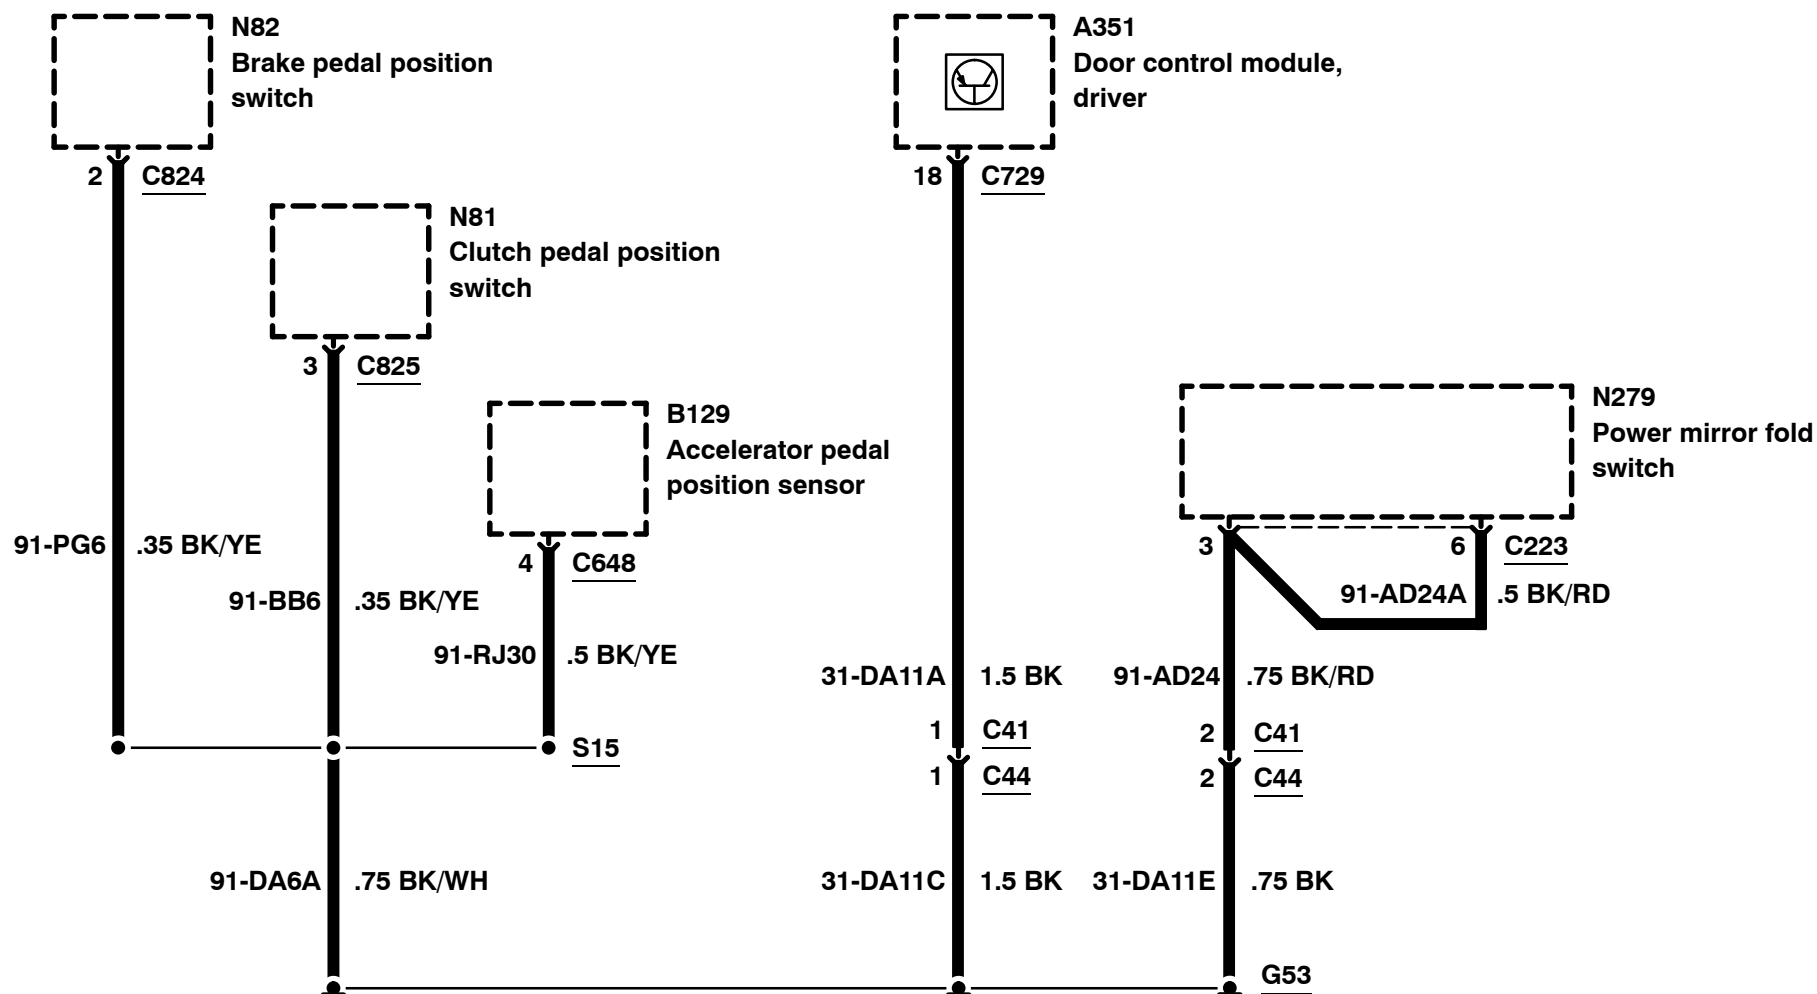


# Ground Distribution – G55

02/2008  
700-04-00-16  
2008.25  
Focus

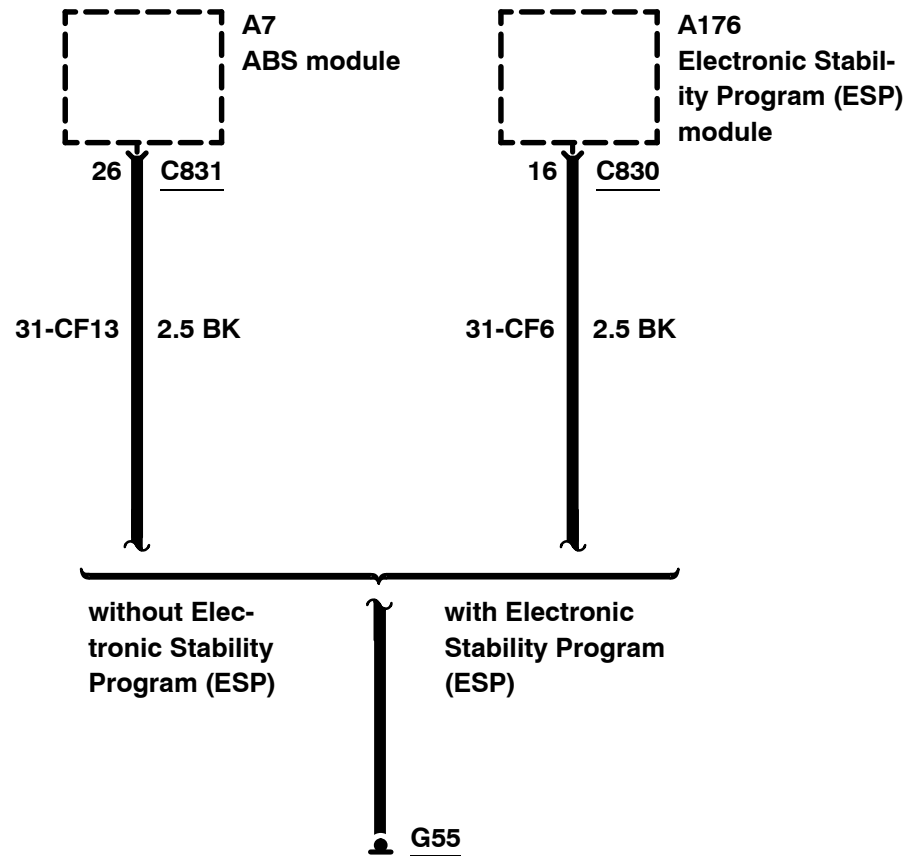


# Ground Distribution – G56

02/2008  
700-04-00-17  
2008.25  
Focus

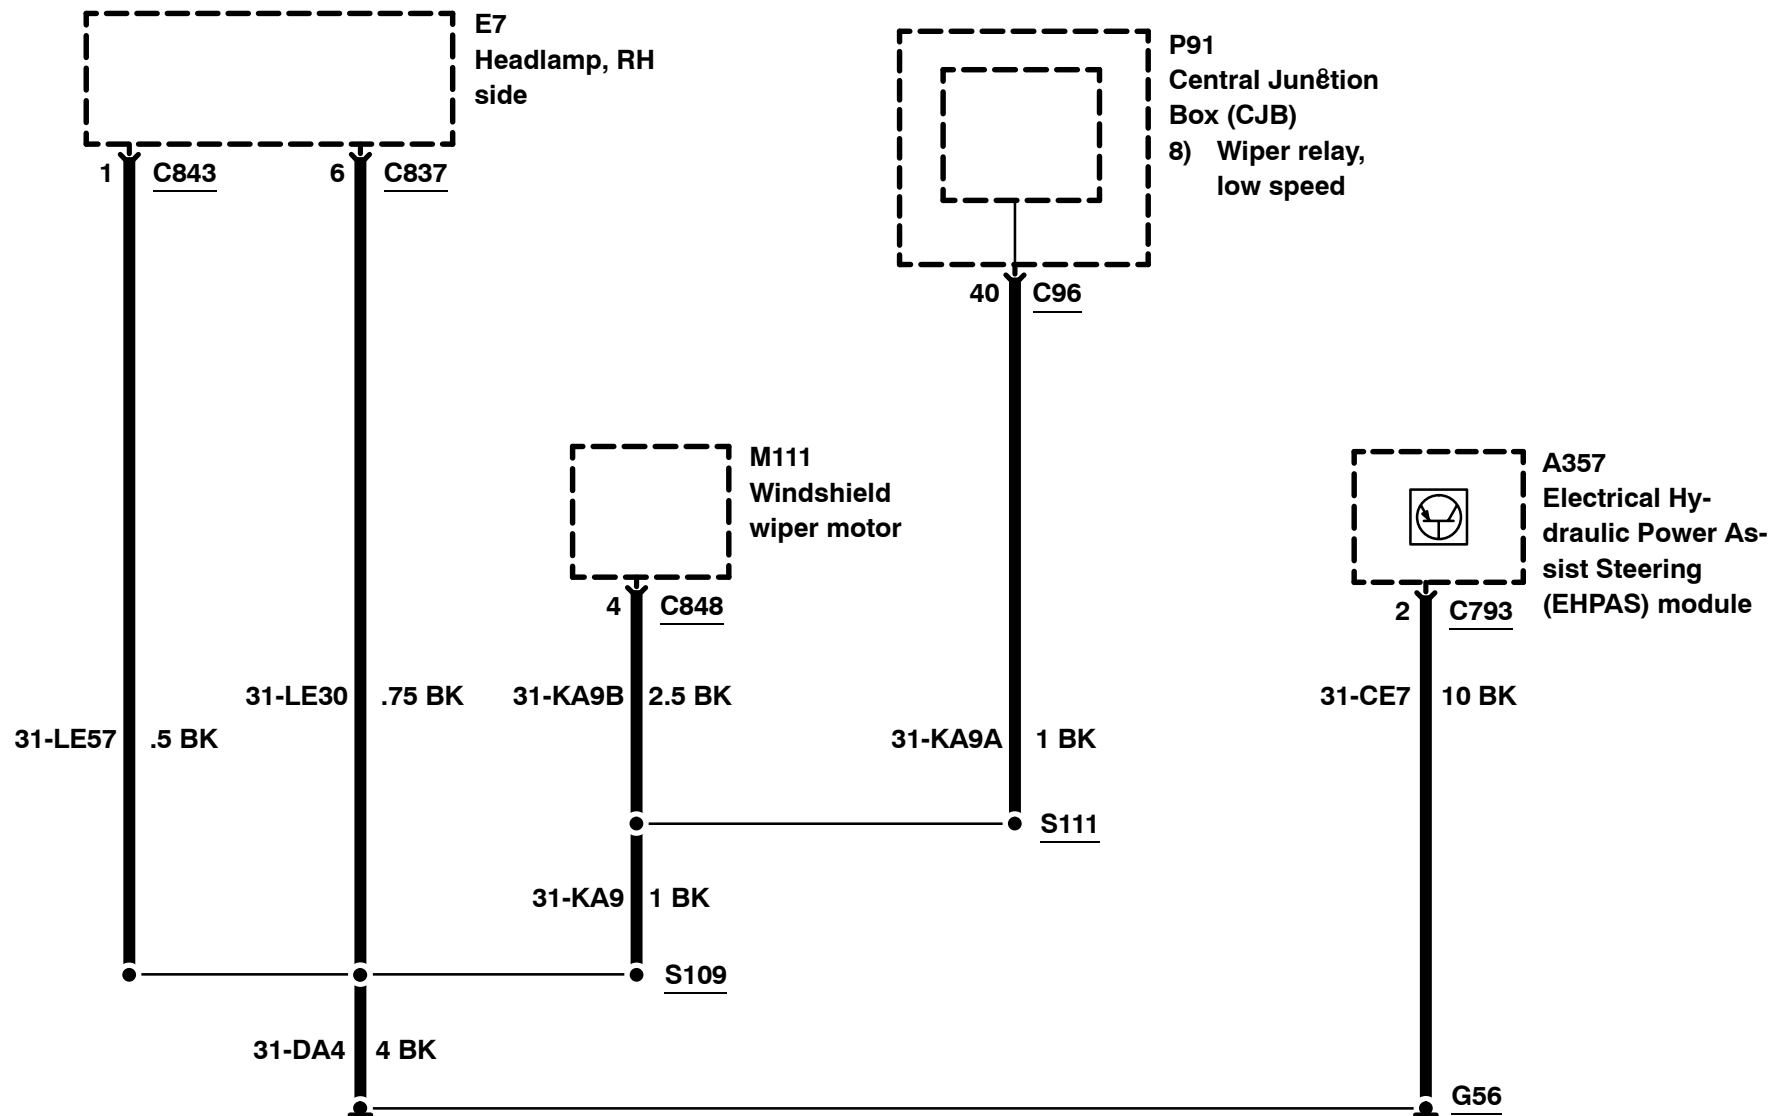


# Ground Distribution – G57, 2.0L Duratorq–TDCi (DW) Diesel, except manual transmission (MPS6)

02/2008  
700-04-00-18  
2008.25  
Focus

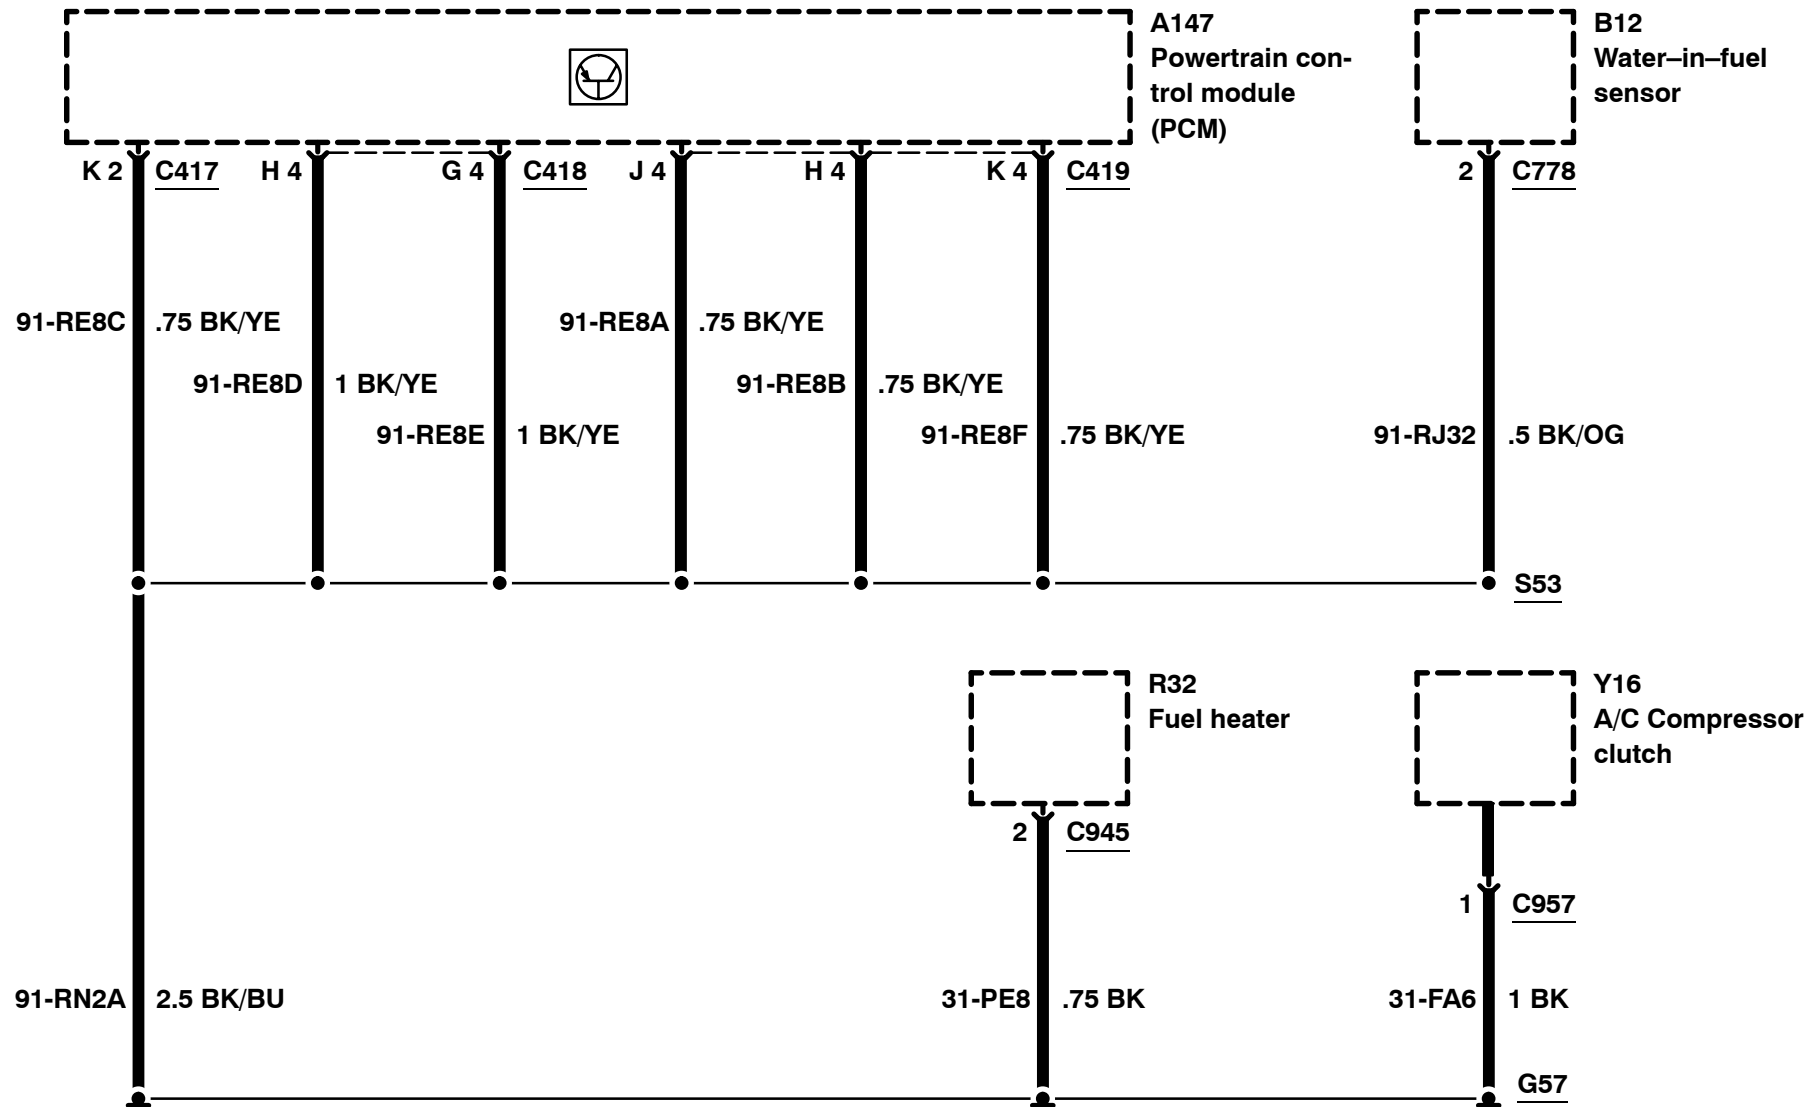


# Ground Distribution – G57, 2.0L Duratorq–TDCi (DW) Diesel, manual trans- mission (MPS6)

02/2008  
700-04-00-19  
2008.25  
Focus

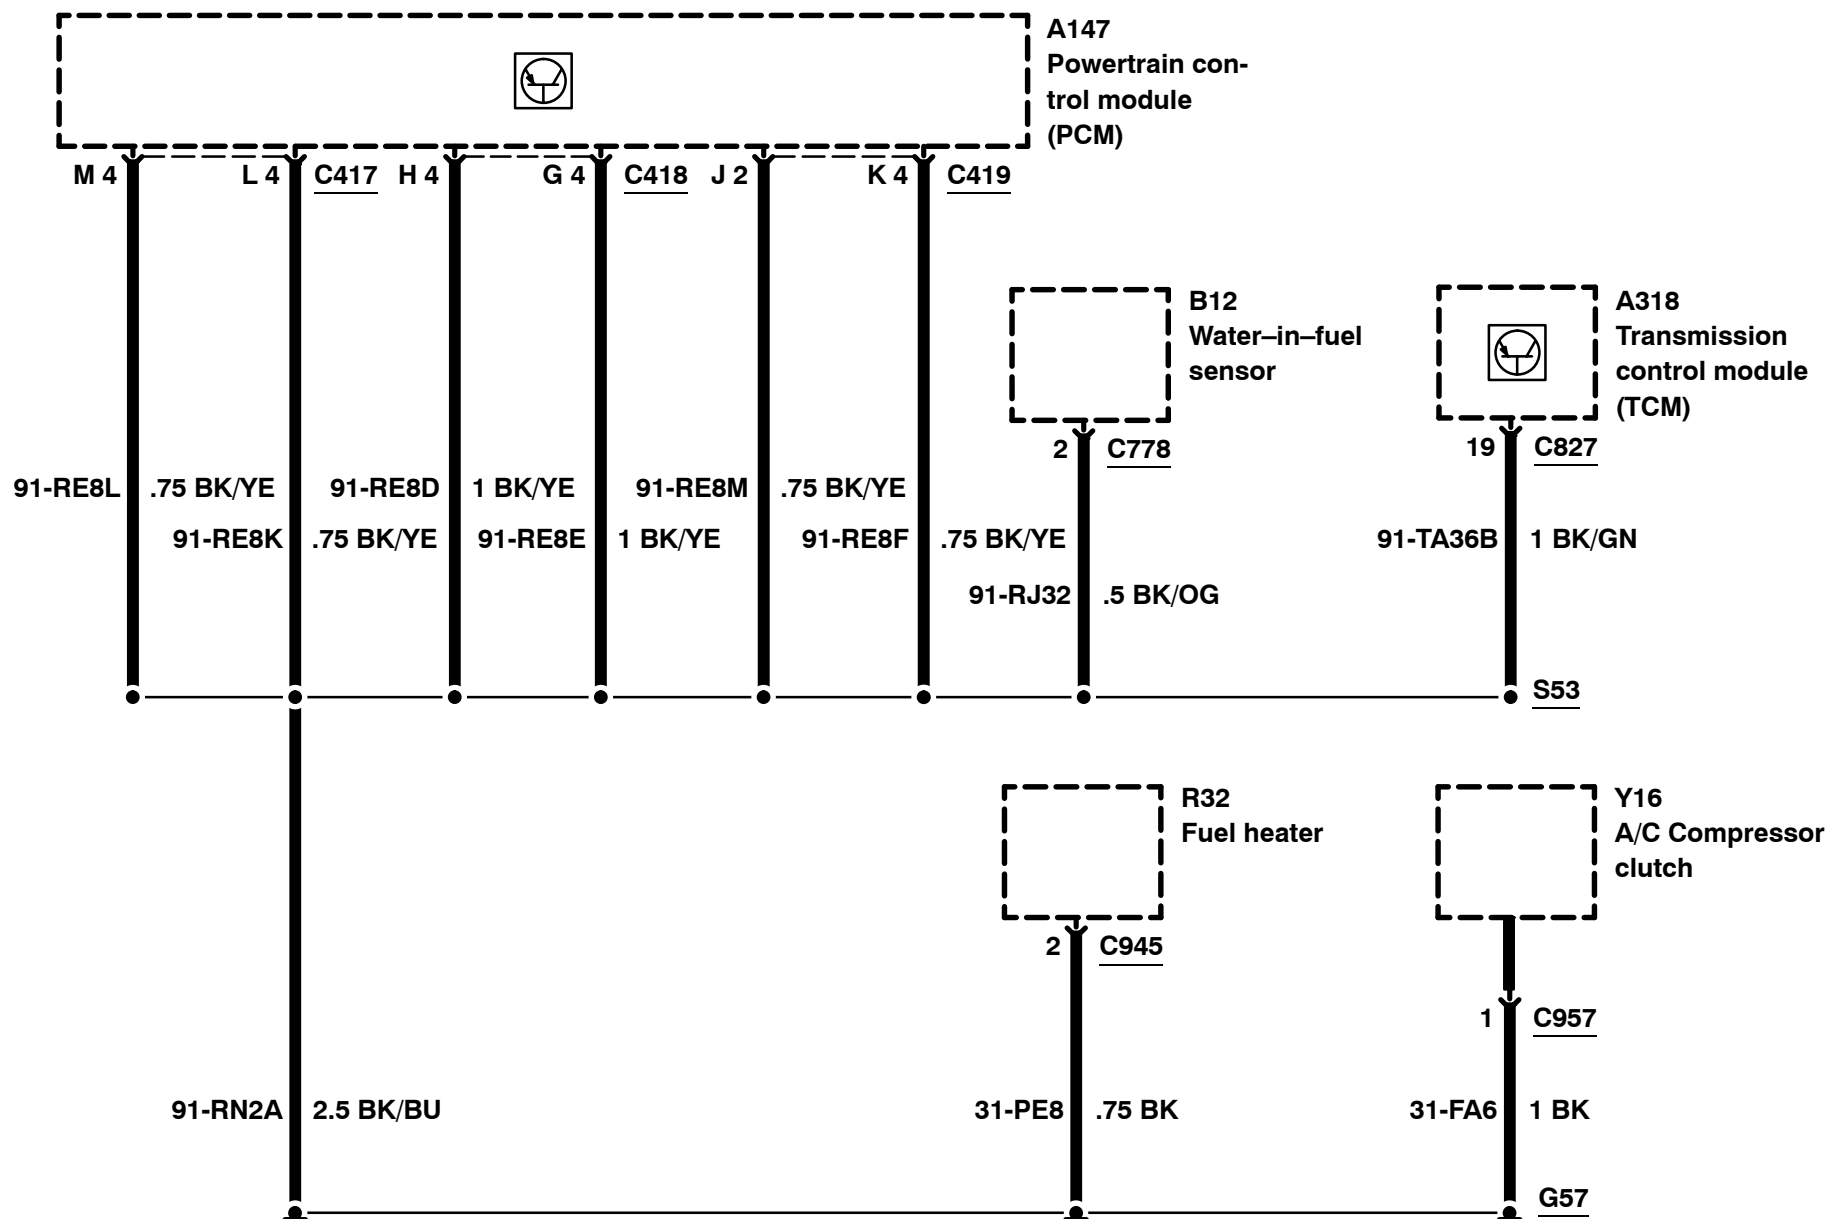

# Ground Distribution – G58, 1.6L (Z6)

02/2008  
700-04-00-20  
2008.25  
Focus

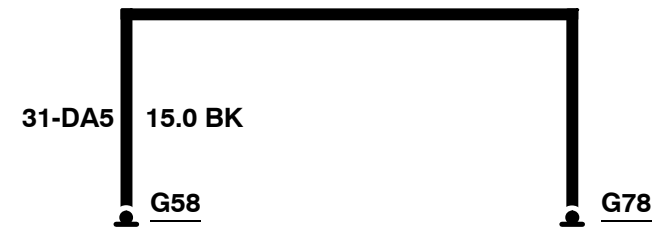




## Ground Distribution – G60, 1.6L (Z6)

02/2008

**700-04-00-21**


**2008.25**

## Focus

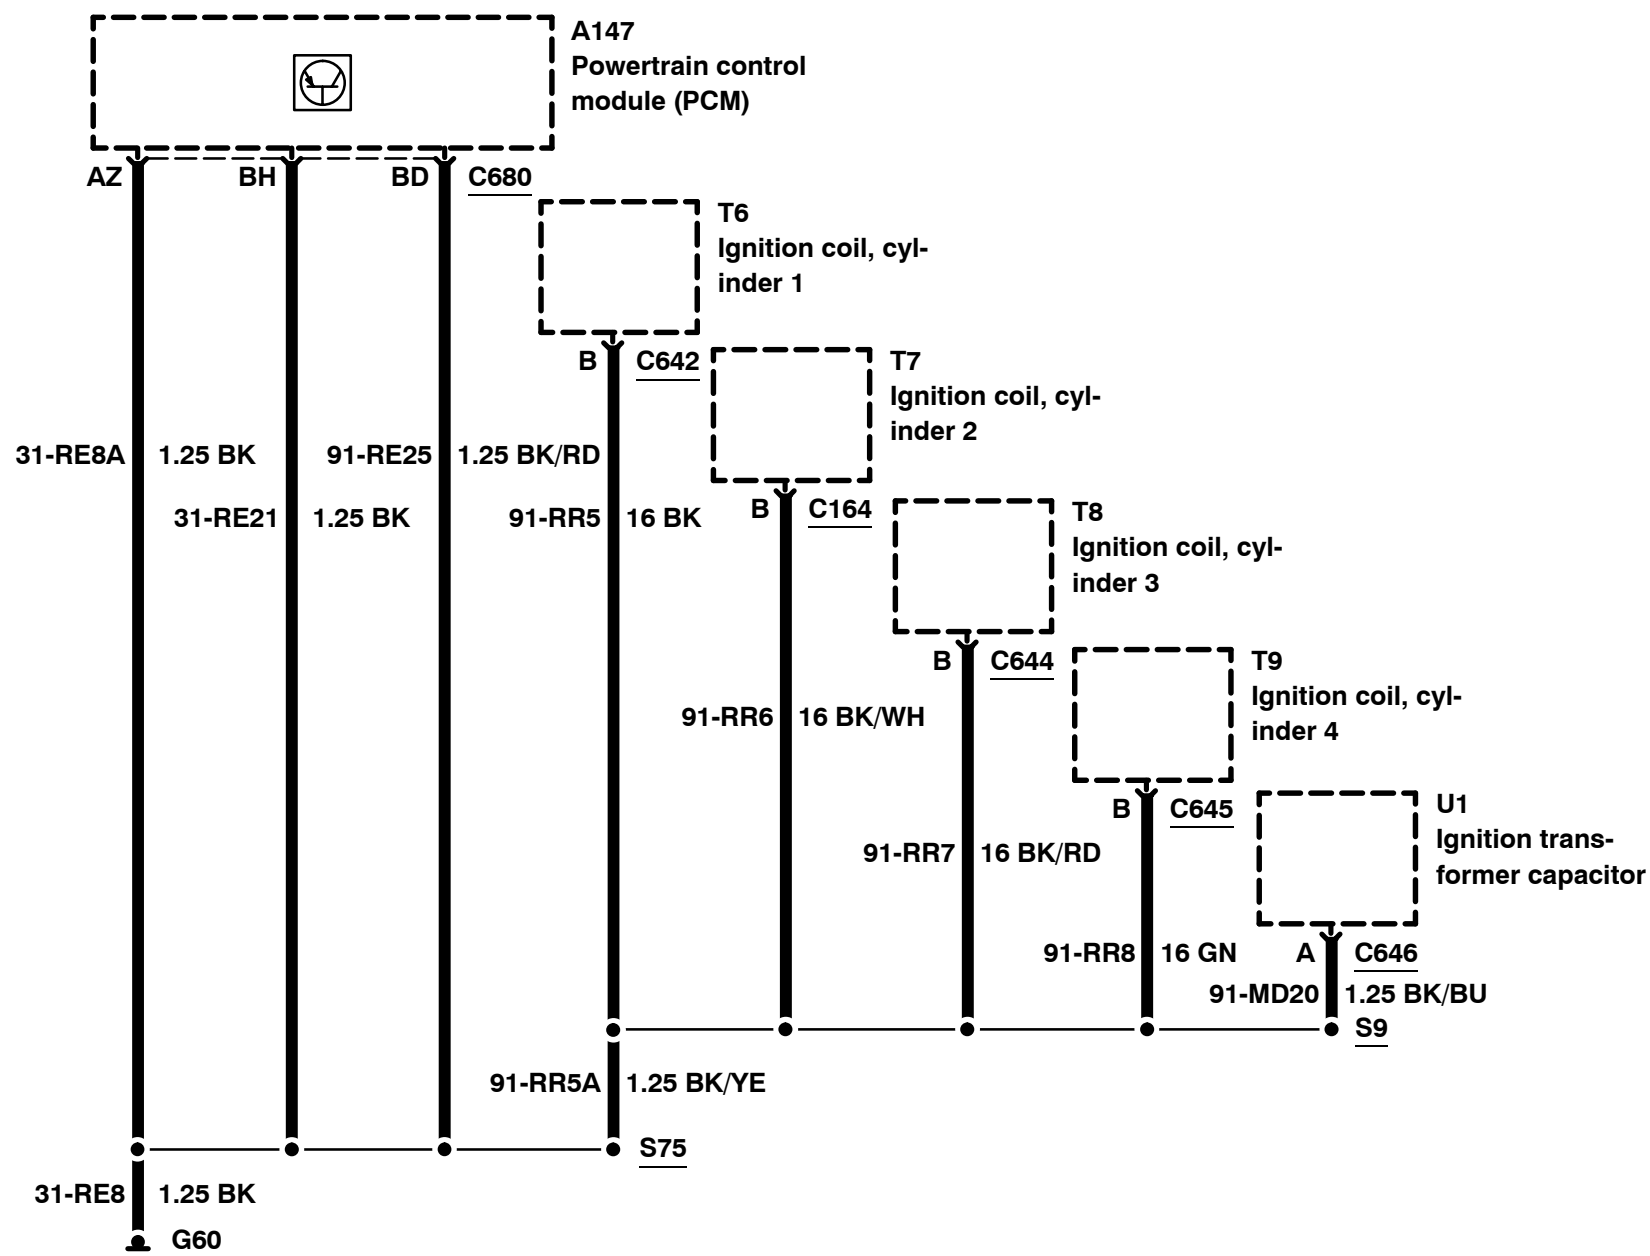


# Ground Distribution – G63

02/2008  
700-04-00-22  
2008.25  
Focus

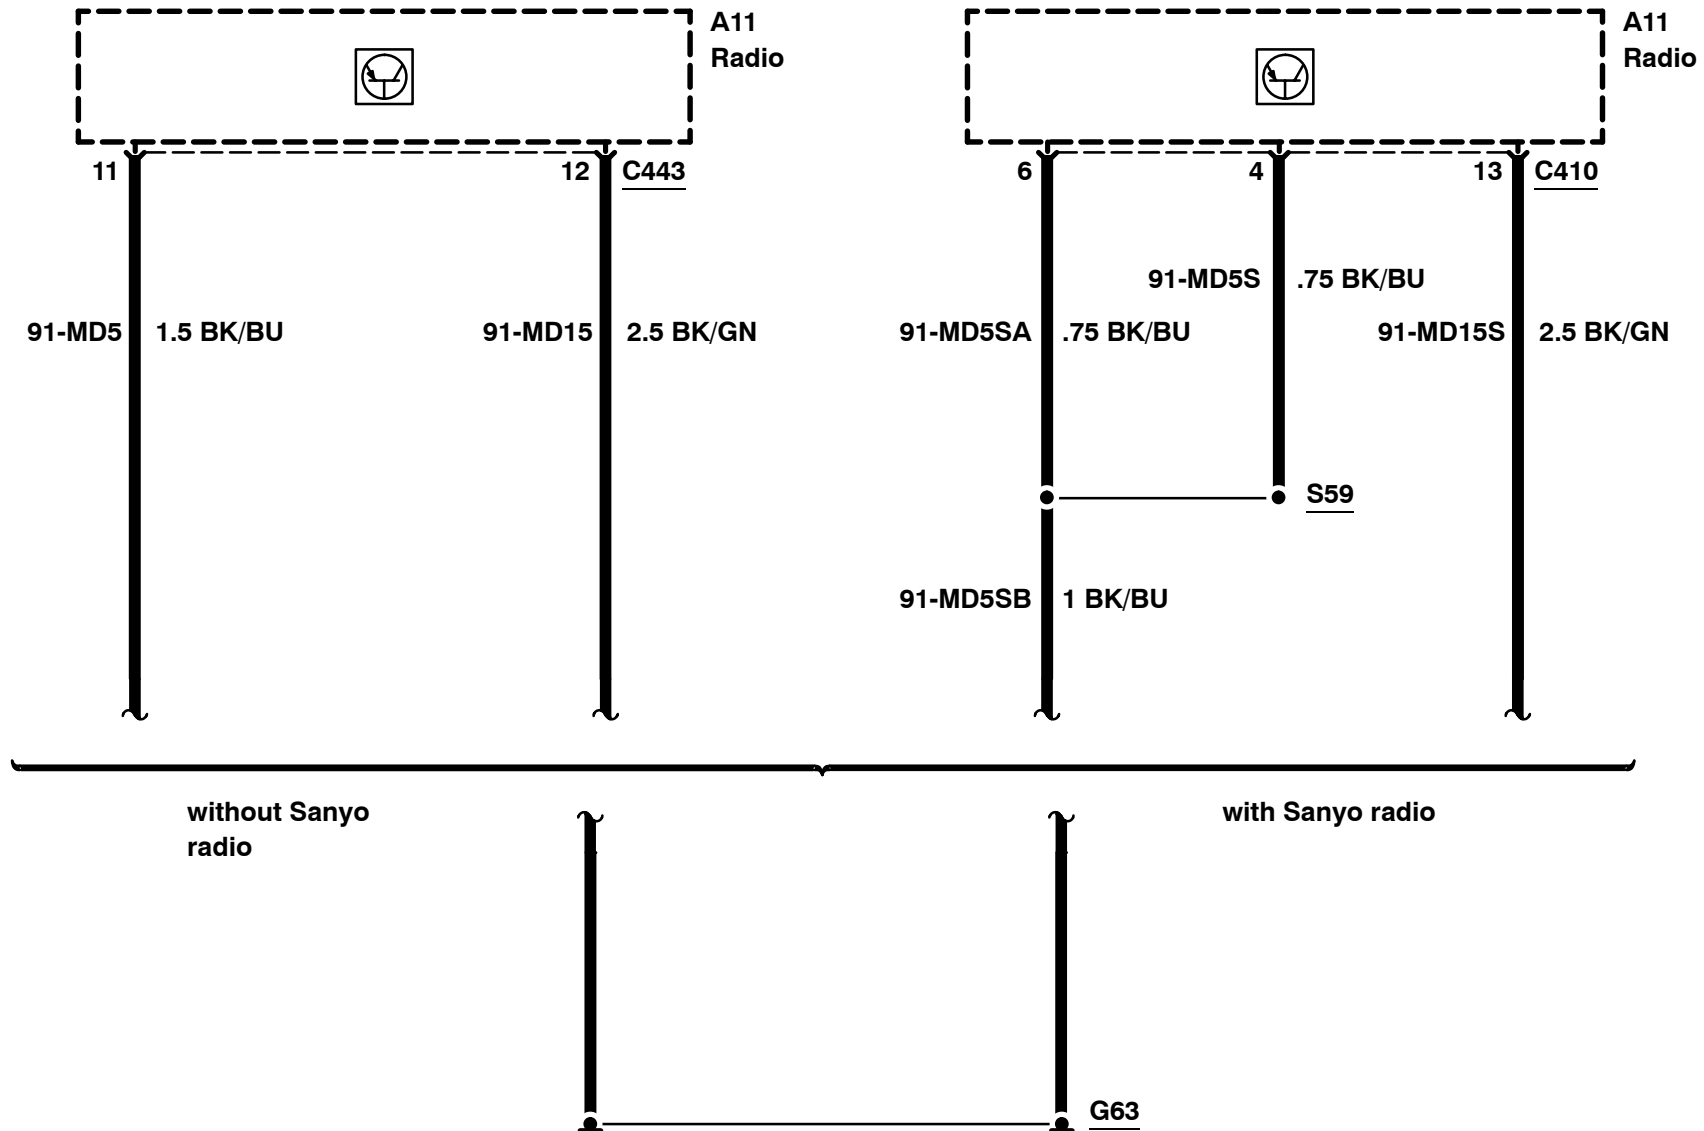


# Ground Distribution – G64, 1.6L (Z6), manual transmission

02/2008  
700-04-00-23  
2008.25  
Focus

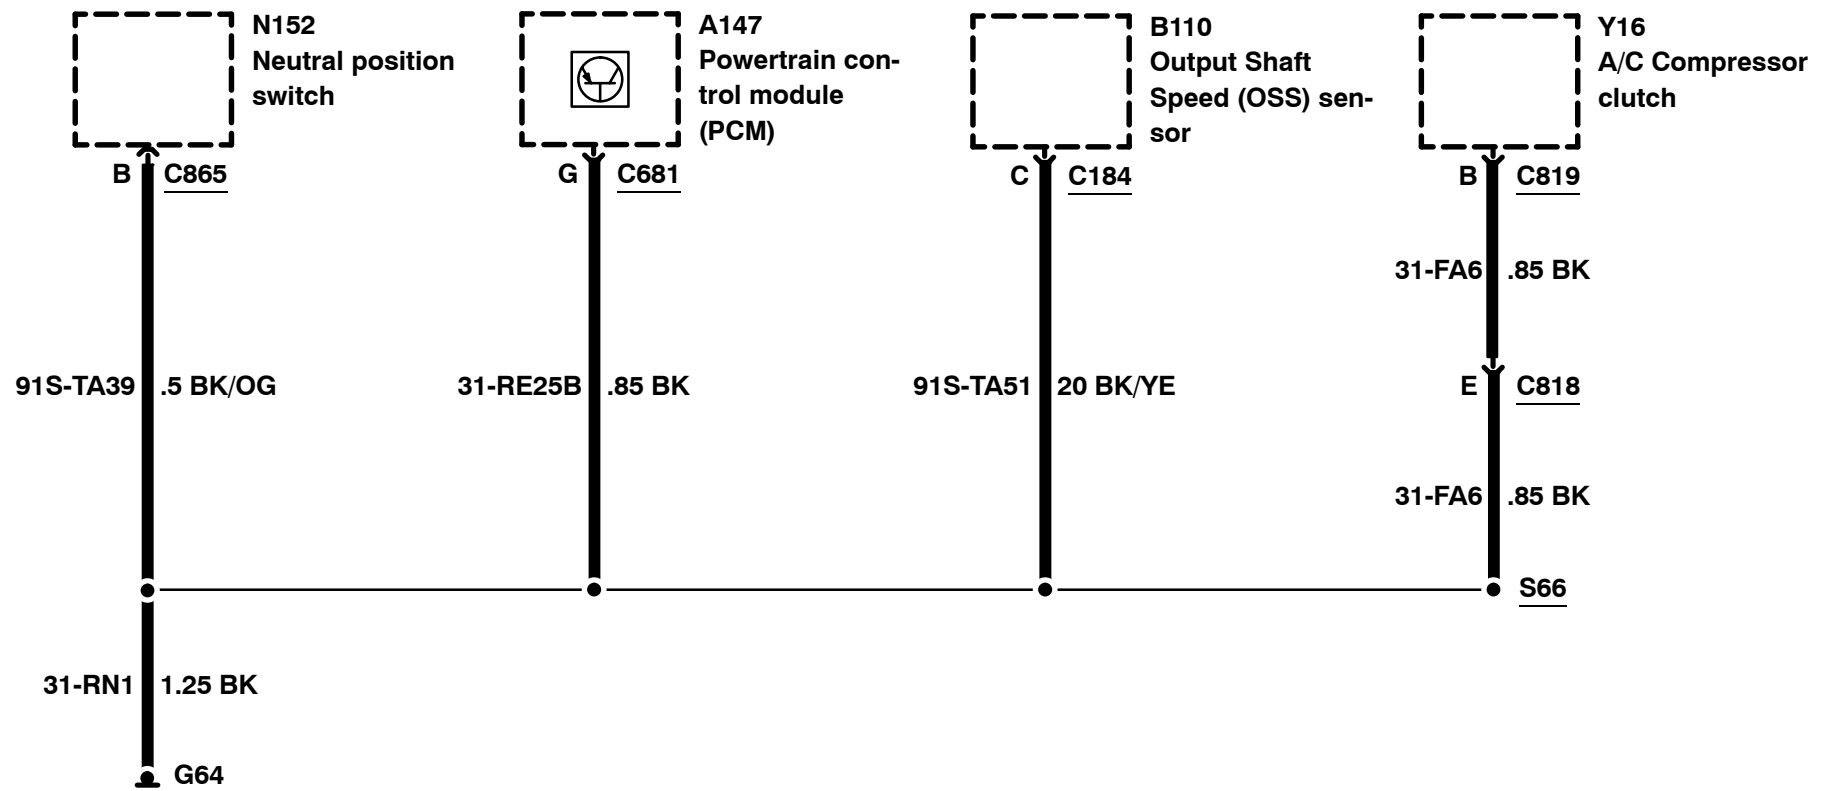


# Ground Distribution – G64, 1.6L (Z6), automatic transmission

02/2008  
700-04-00-24  
2008.25  
Focus

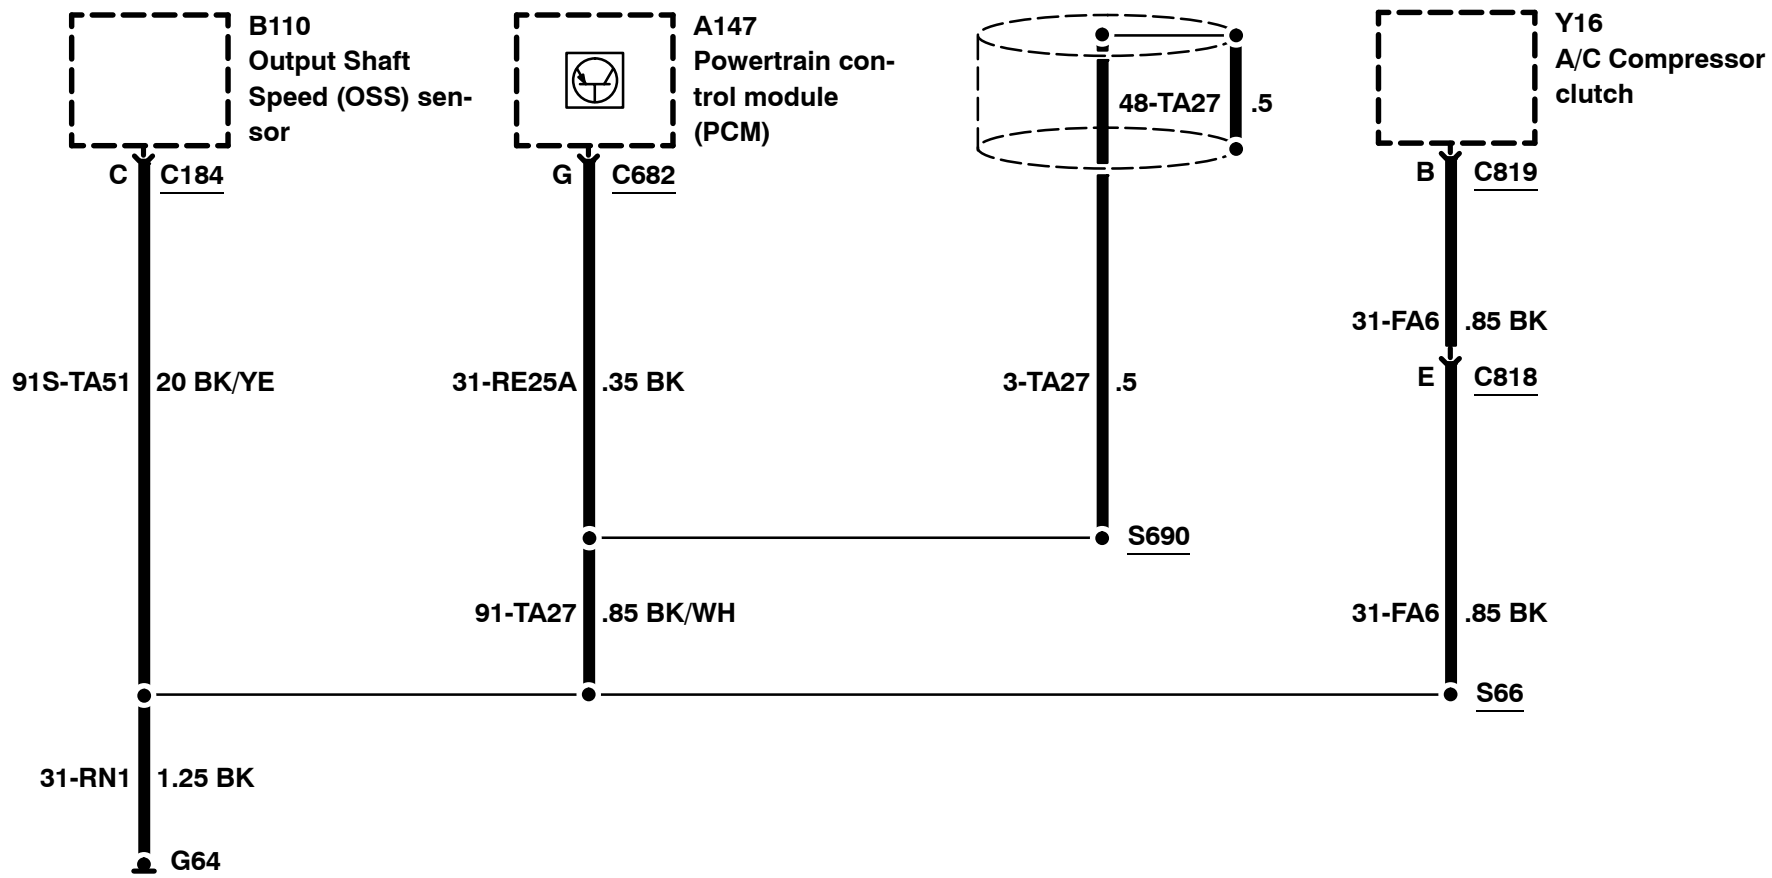


# Ground Distribution – G68, 1.8/2.0L Duratec–HE (MI4), manual transmission, before model year 2009

02/2008  
700-04-00-25  
2008.25  
Focus

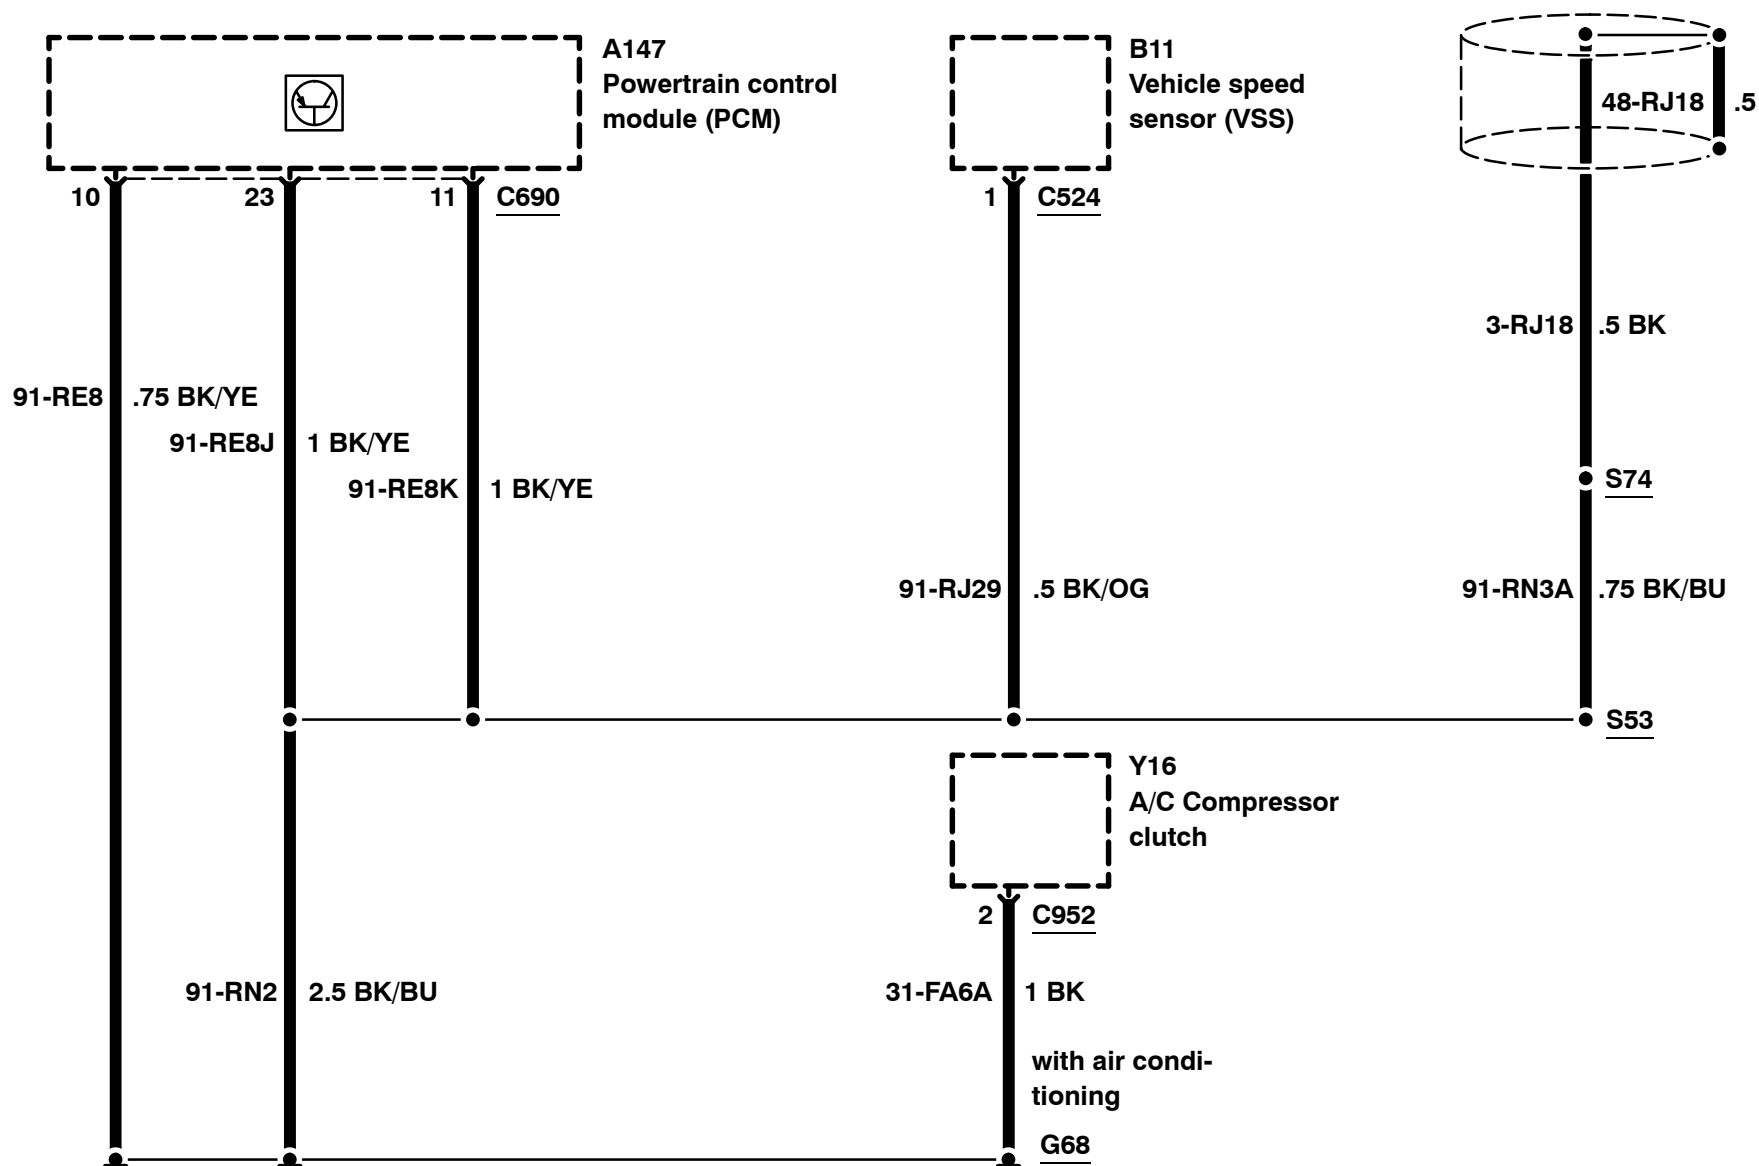


Ground Distribution – G68, 1.8/2.0L Duratec–HE (M14), before model year 2009,  
automatic transmission, LHD

02/2008  
700-04-00-26  
2008.25  
Focus

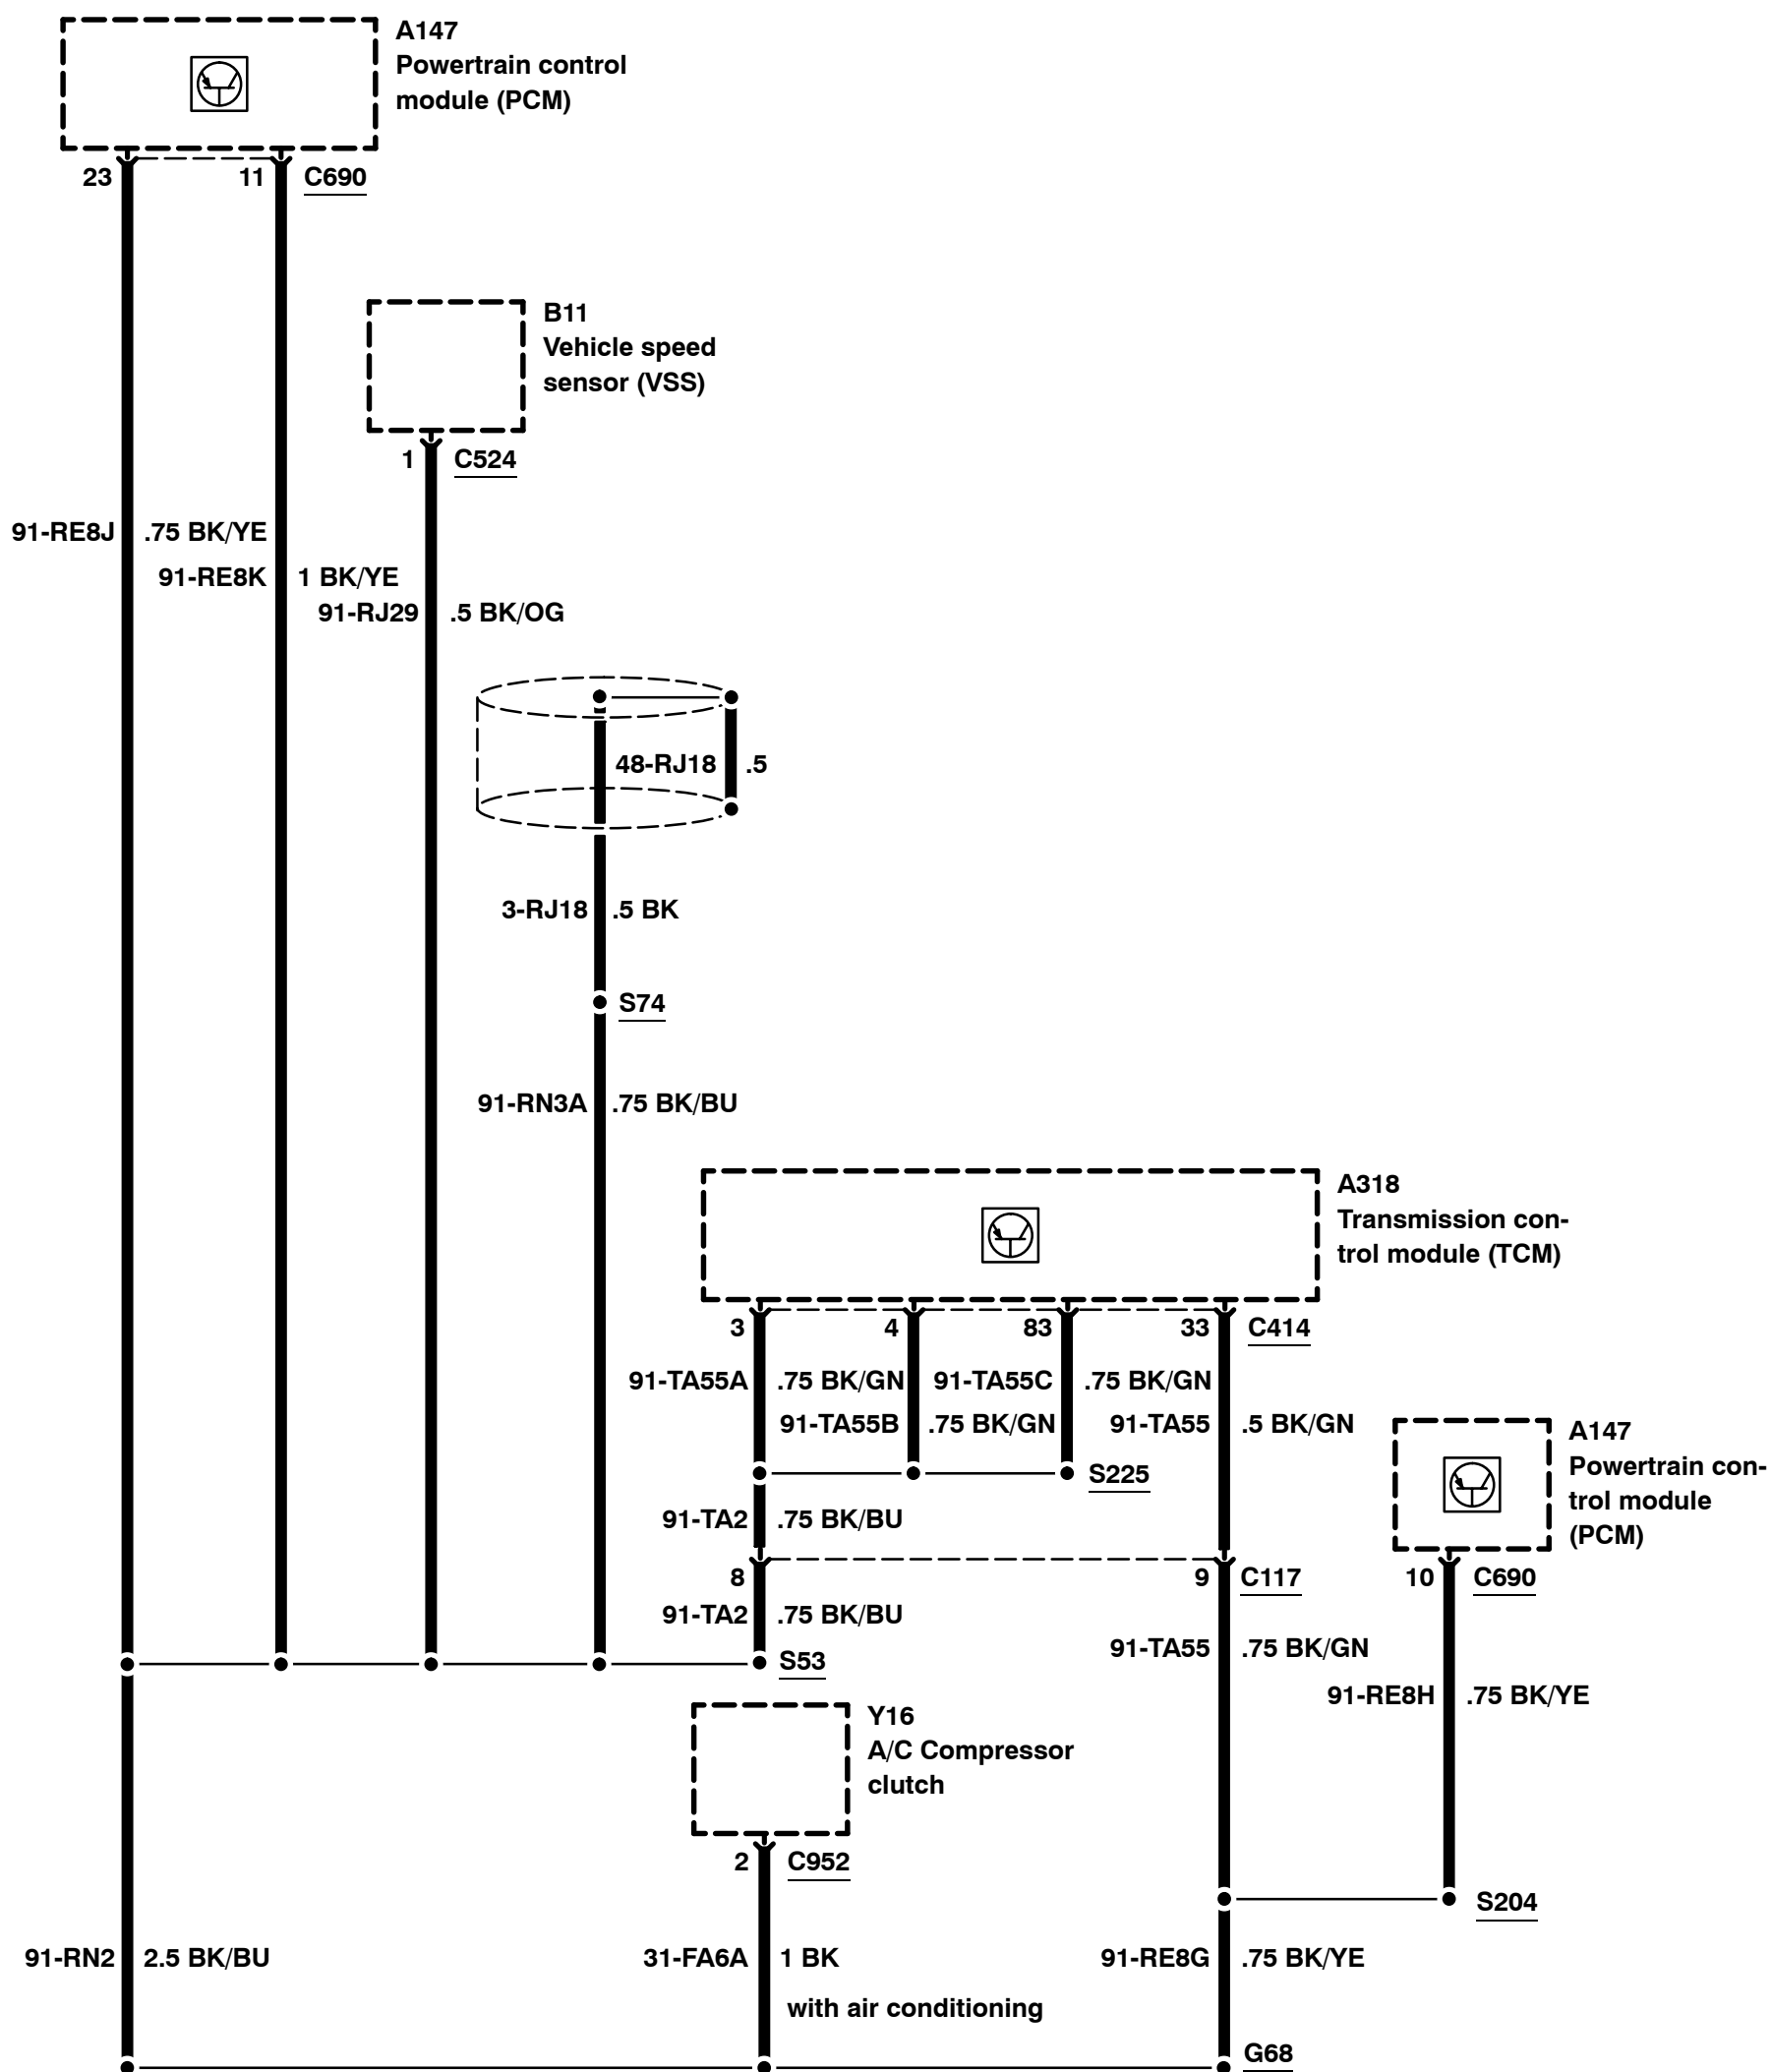


# Ground Distribution – G68, 1.8/2.0L Duratec–HE (M14), before model year 2009, automatic transmission, RHD

02/2008  
700-04-00-27  
2008.25  
Focus

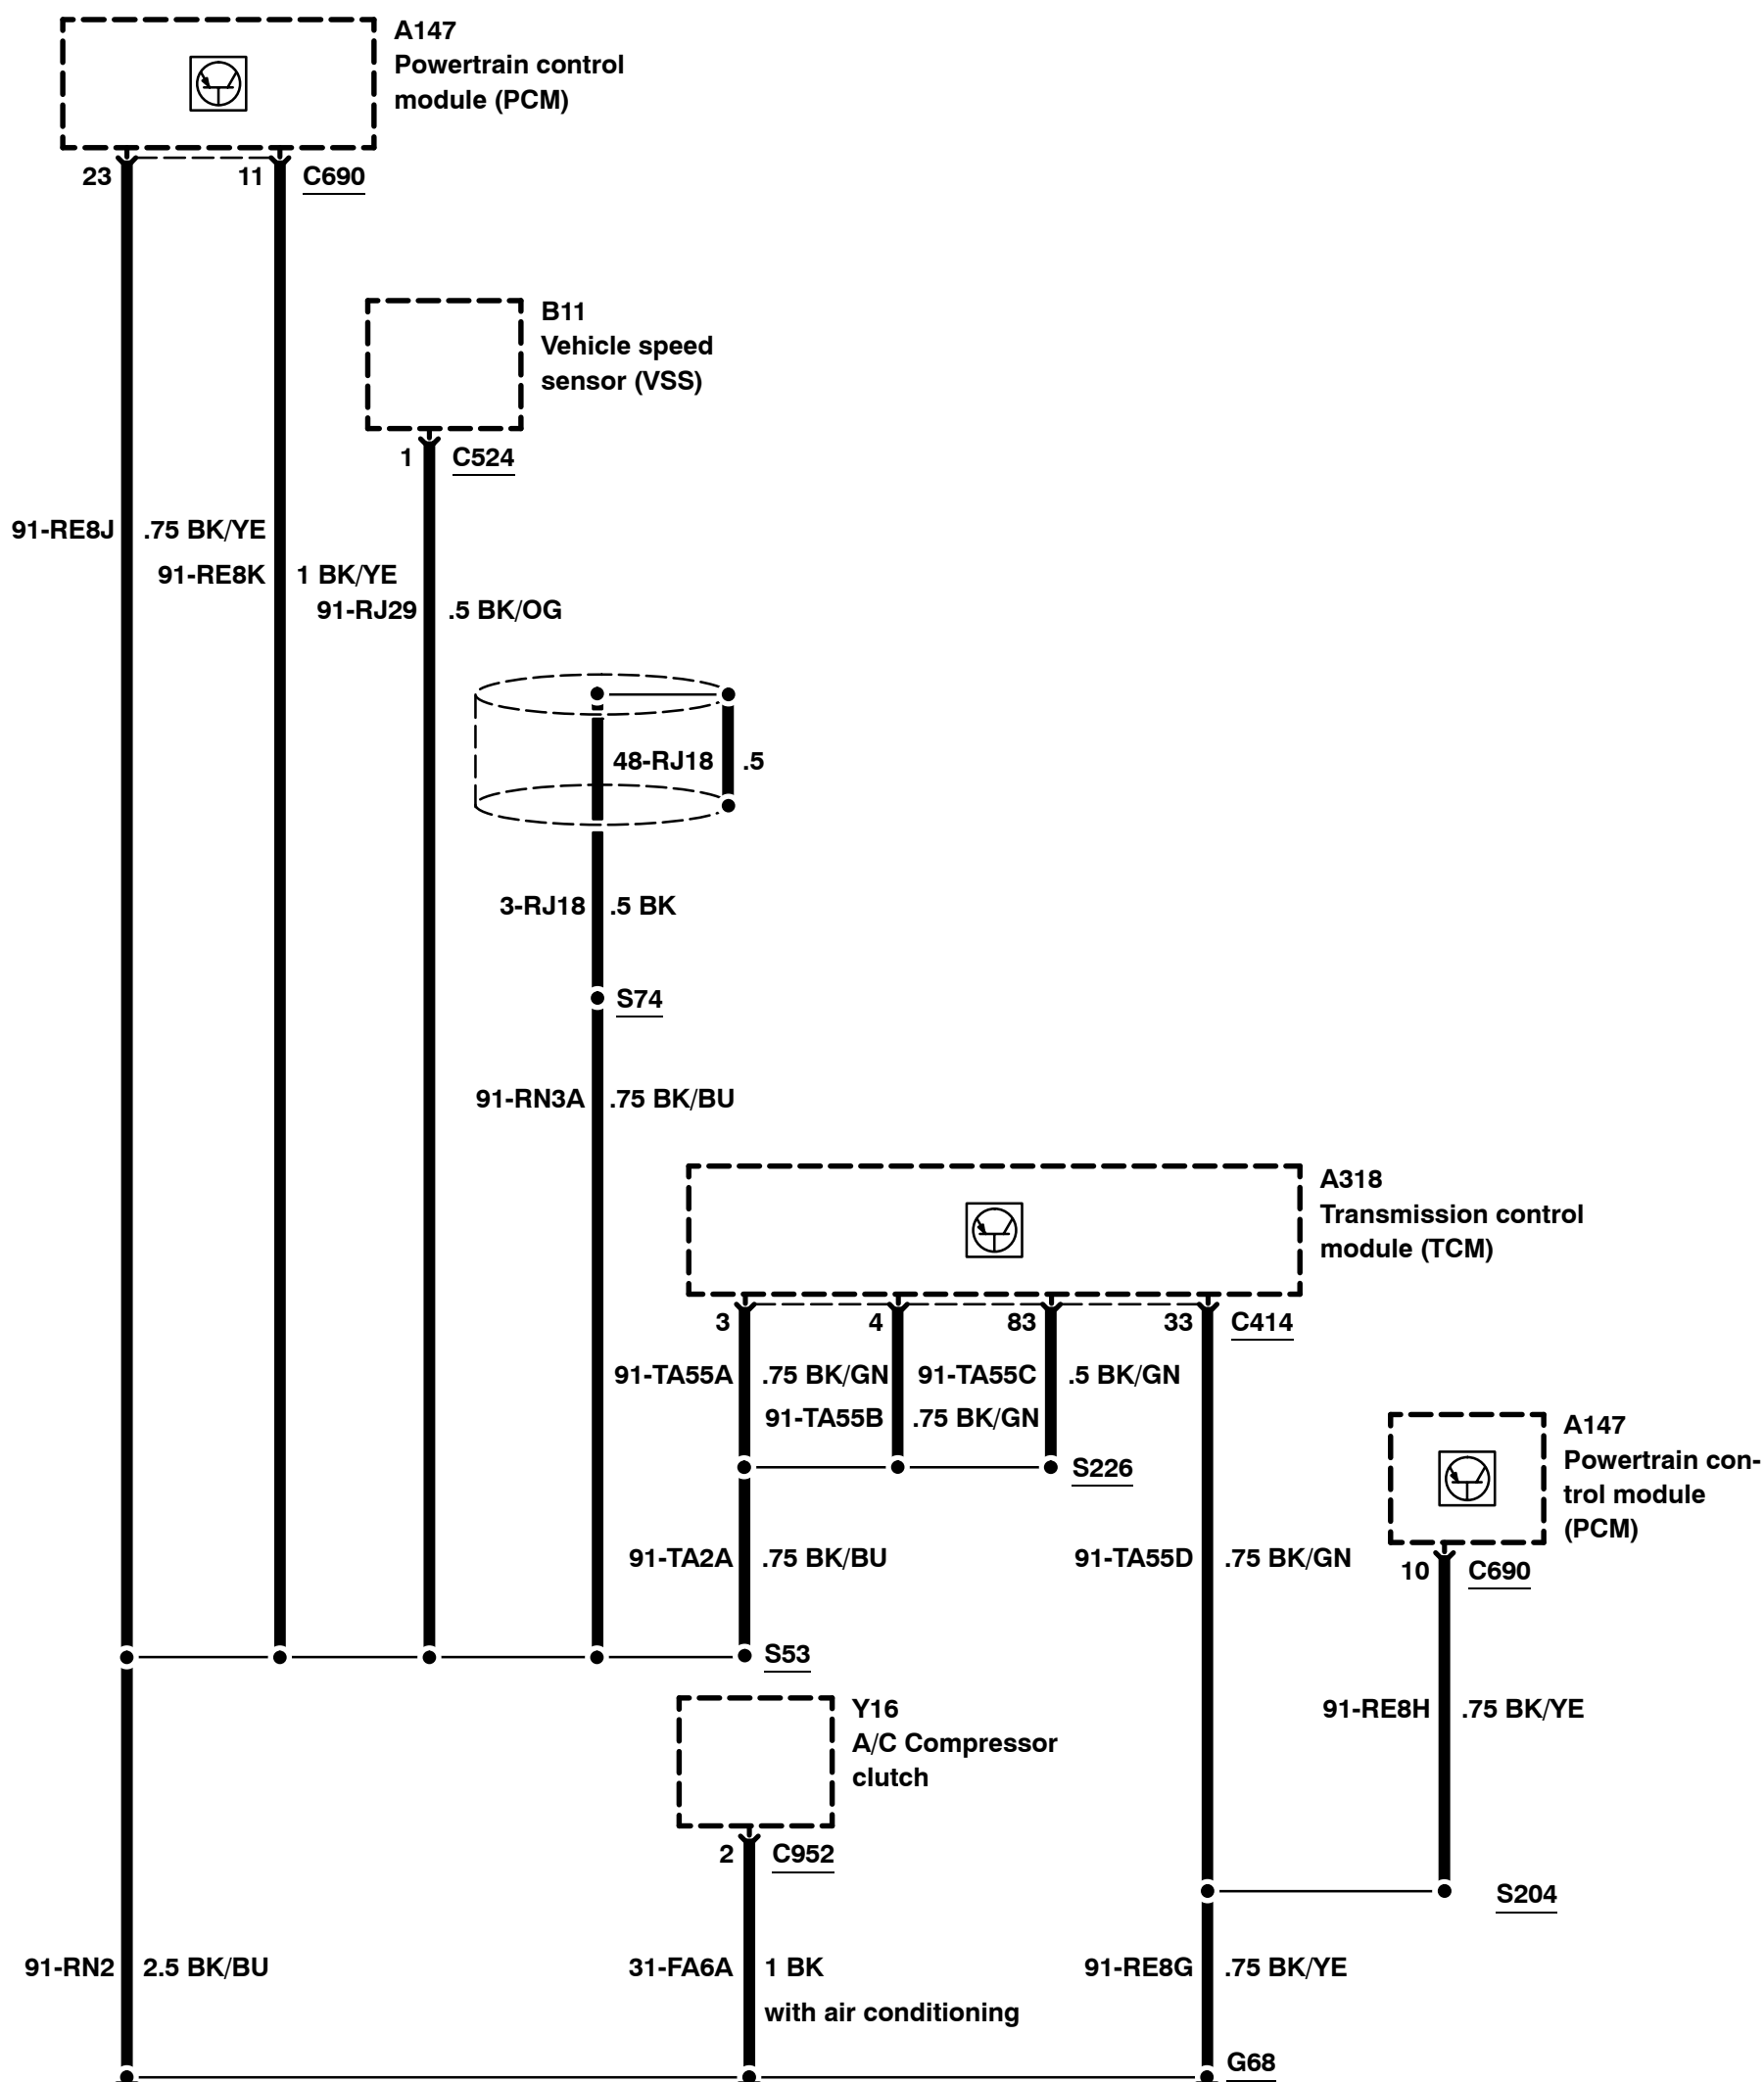


02/2008  
700-04-00-28  
2008.25  
Focus

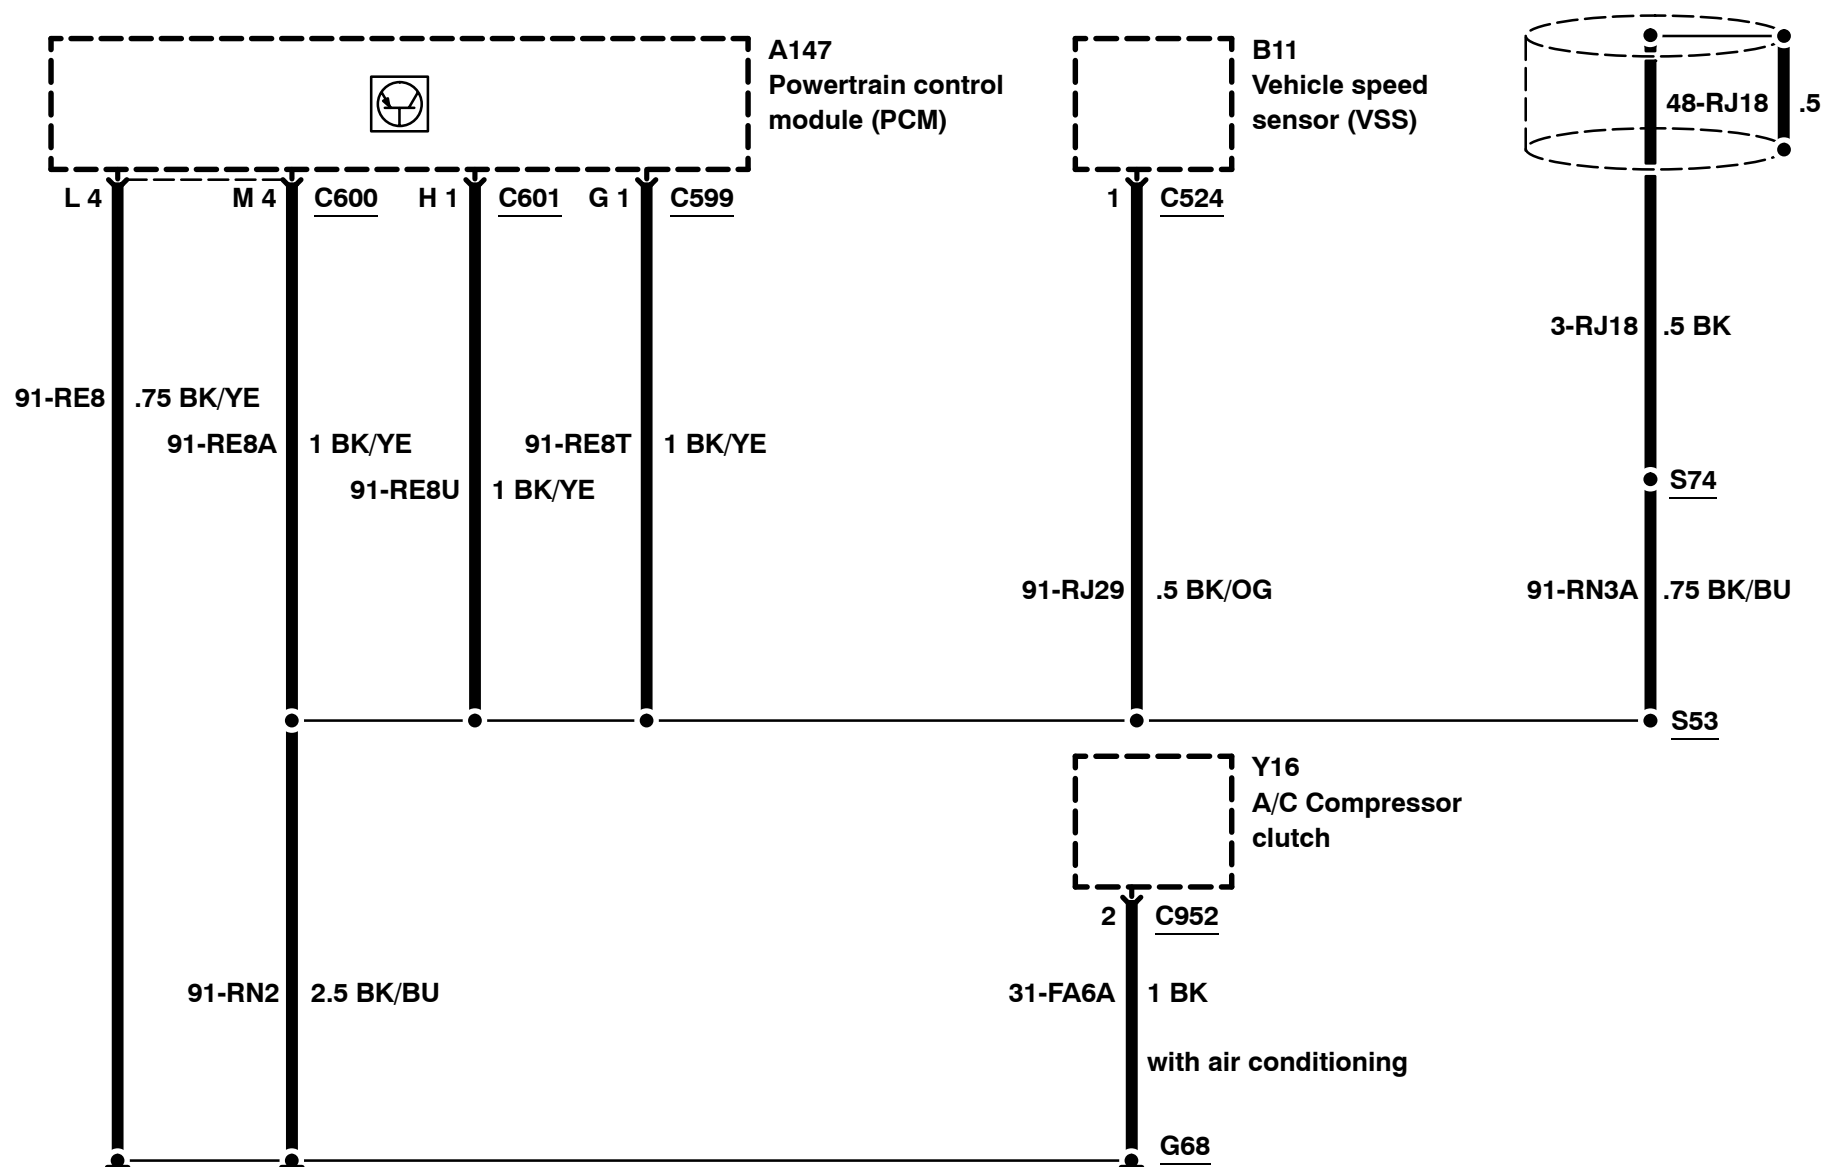




Ground Distribution – G68, 1.8/2.0L Duratec–HE (Ml4), as of model year 2009,  
automatic transmission, LHD

02/2008  
700-04-00-29  
2008.25  
Focus

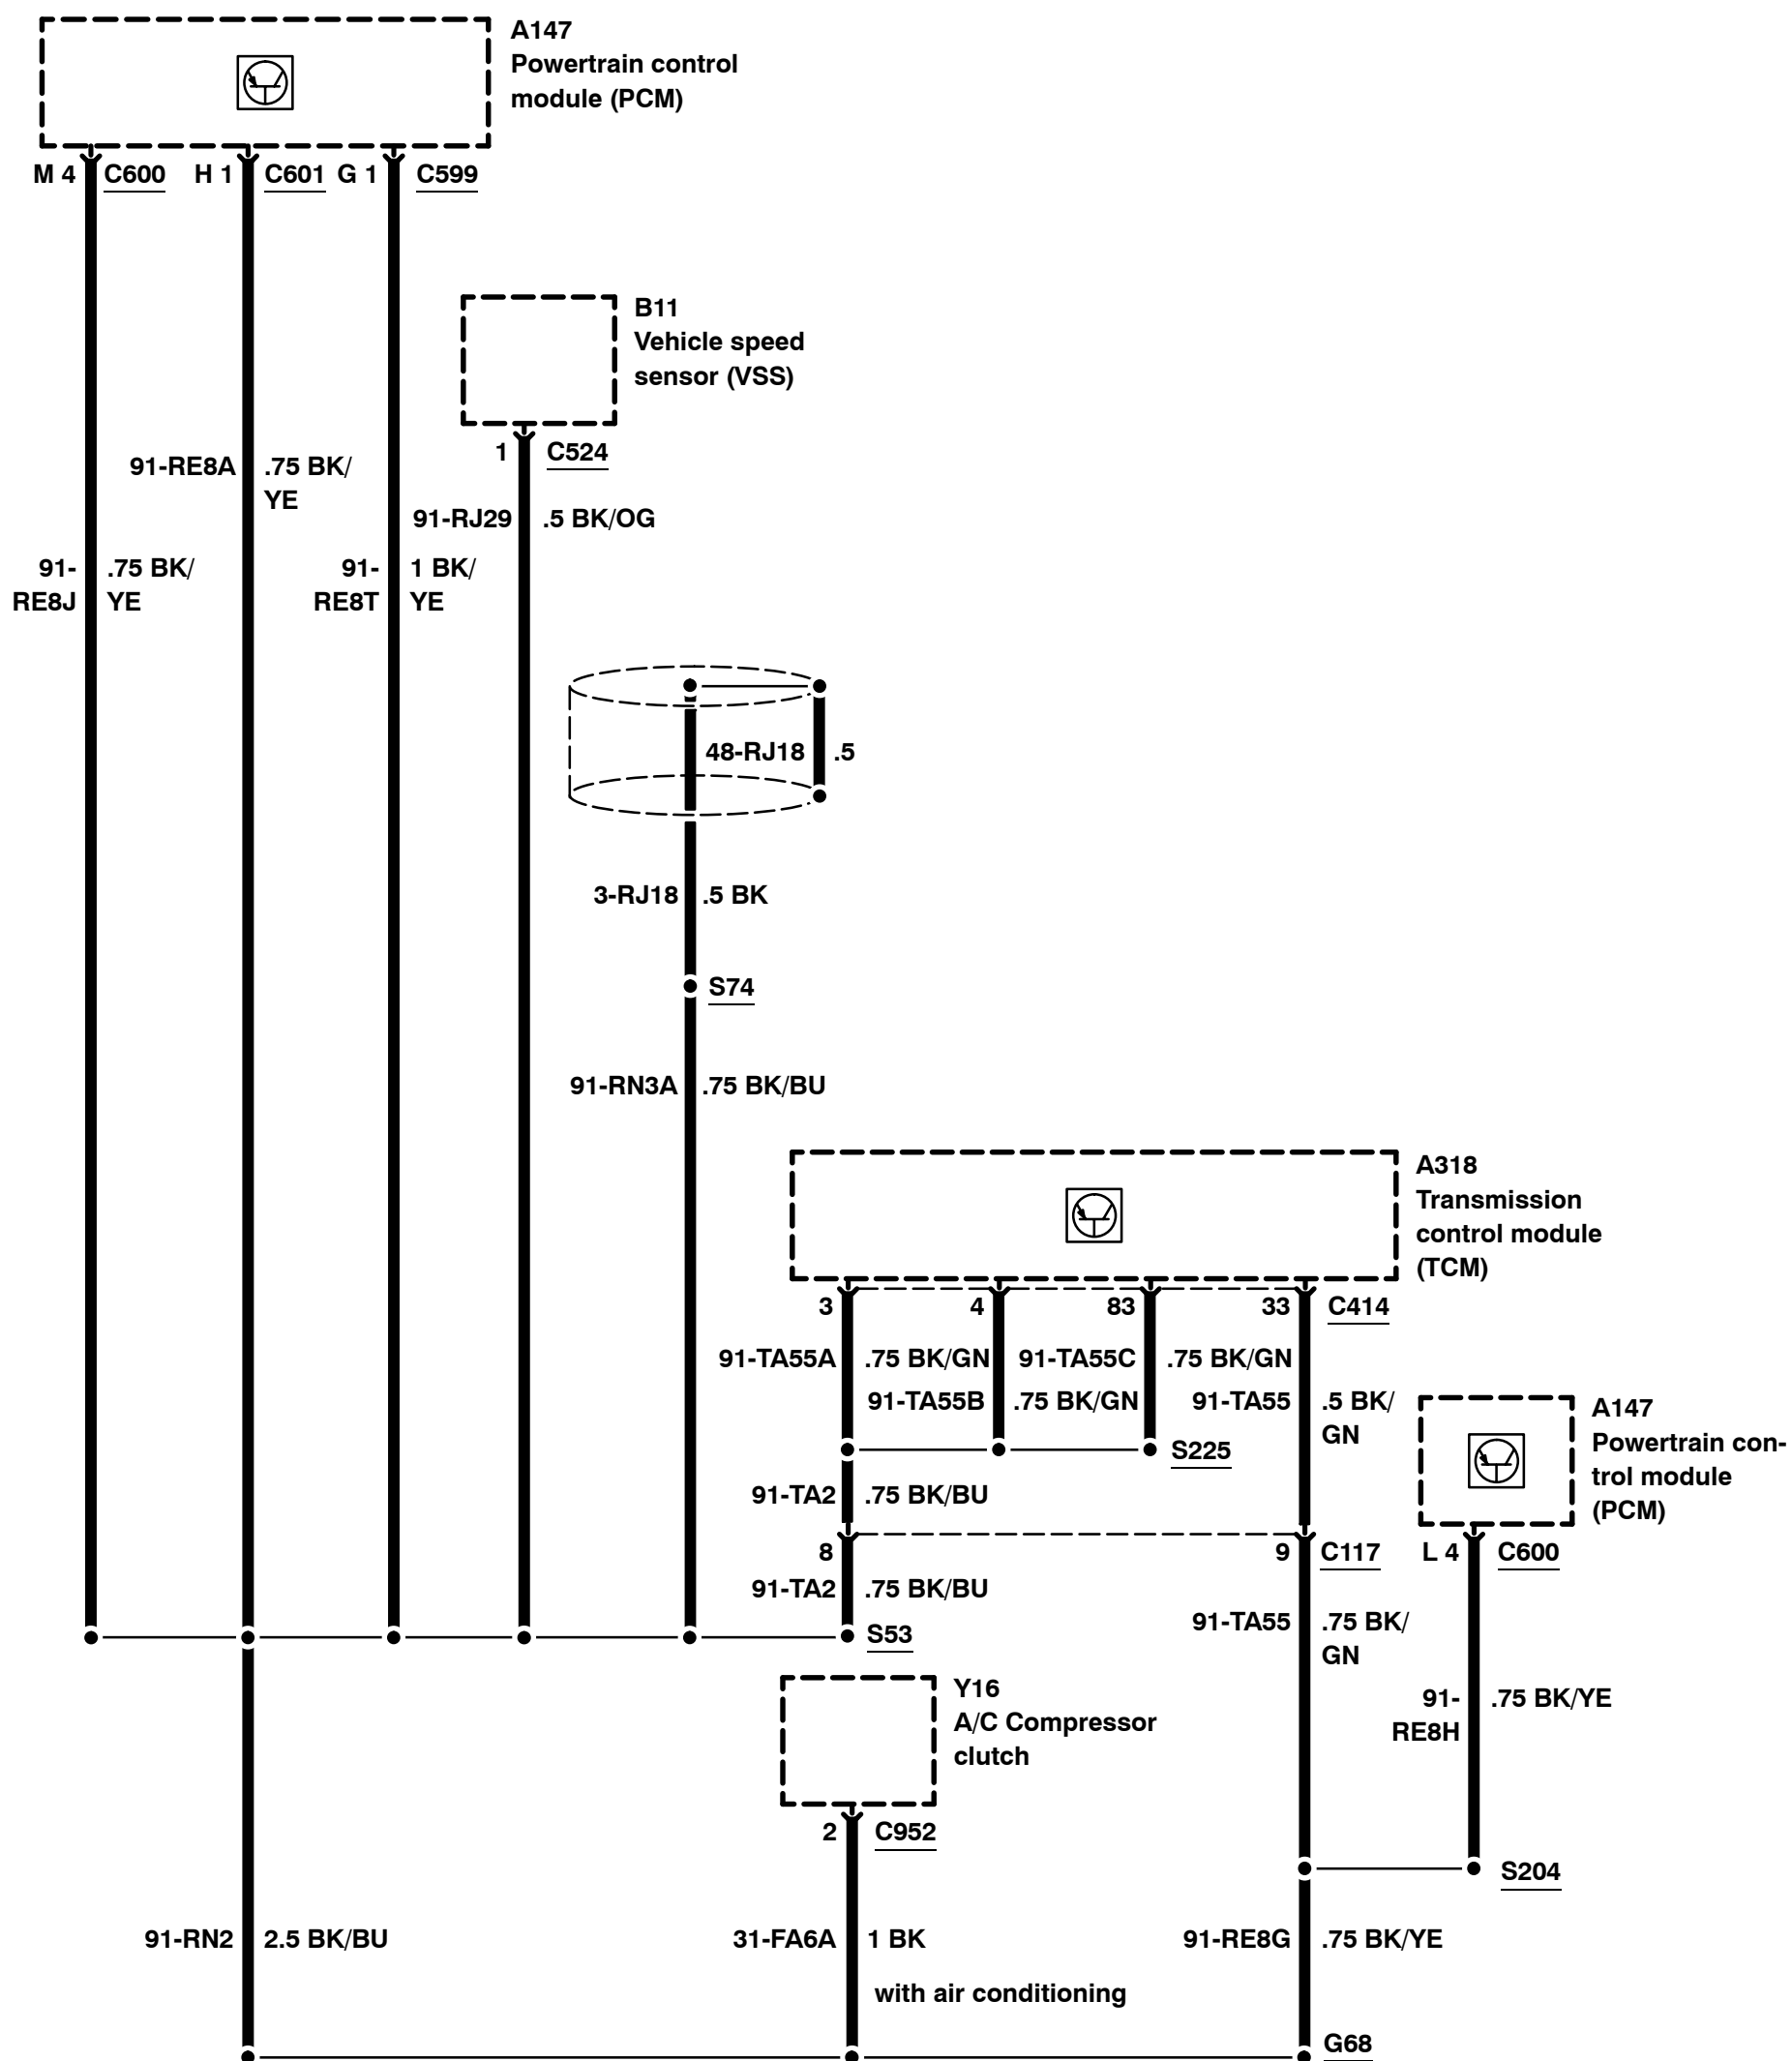


Ground Distribution – G68, 1.8/2.0L Duratec–HE (M14), as of model year 2009,  
automatic transmission, RHD

02/2008  
700-04-00-30  
2008.25  
Focus

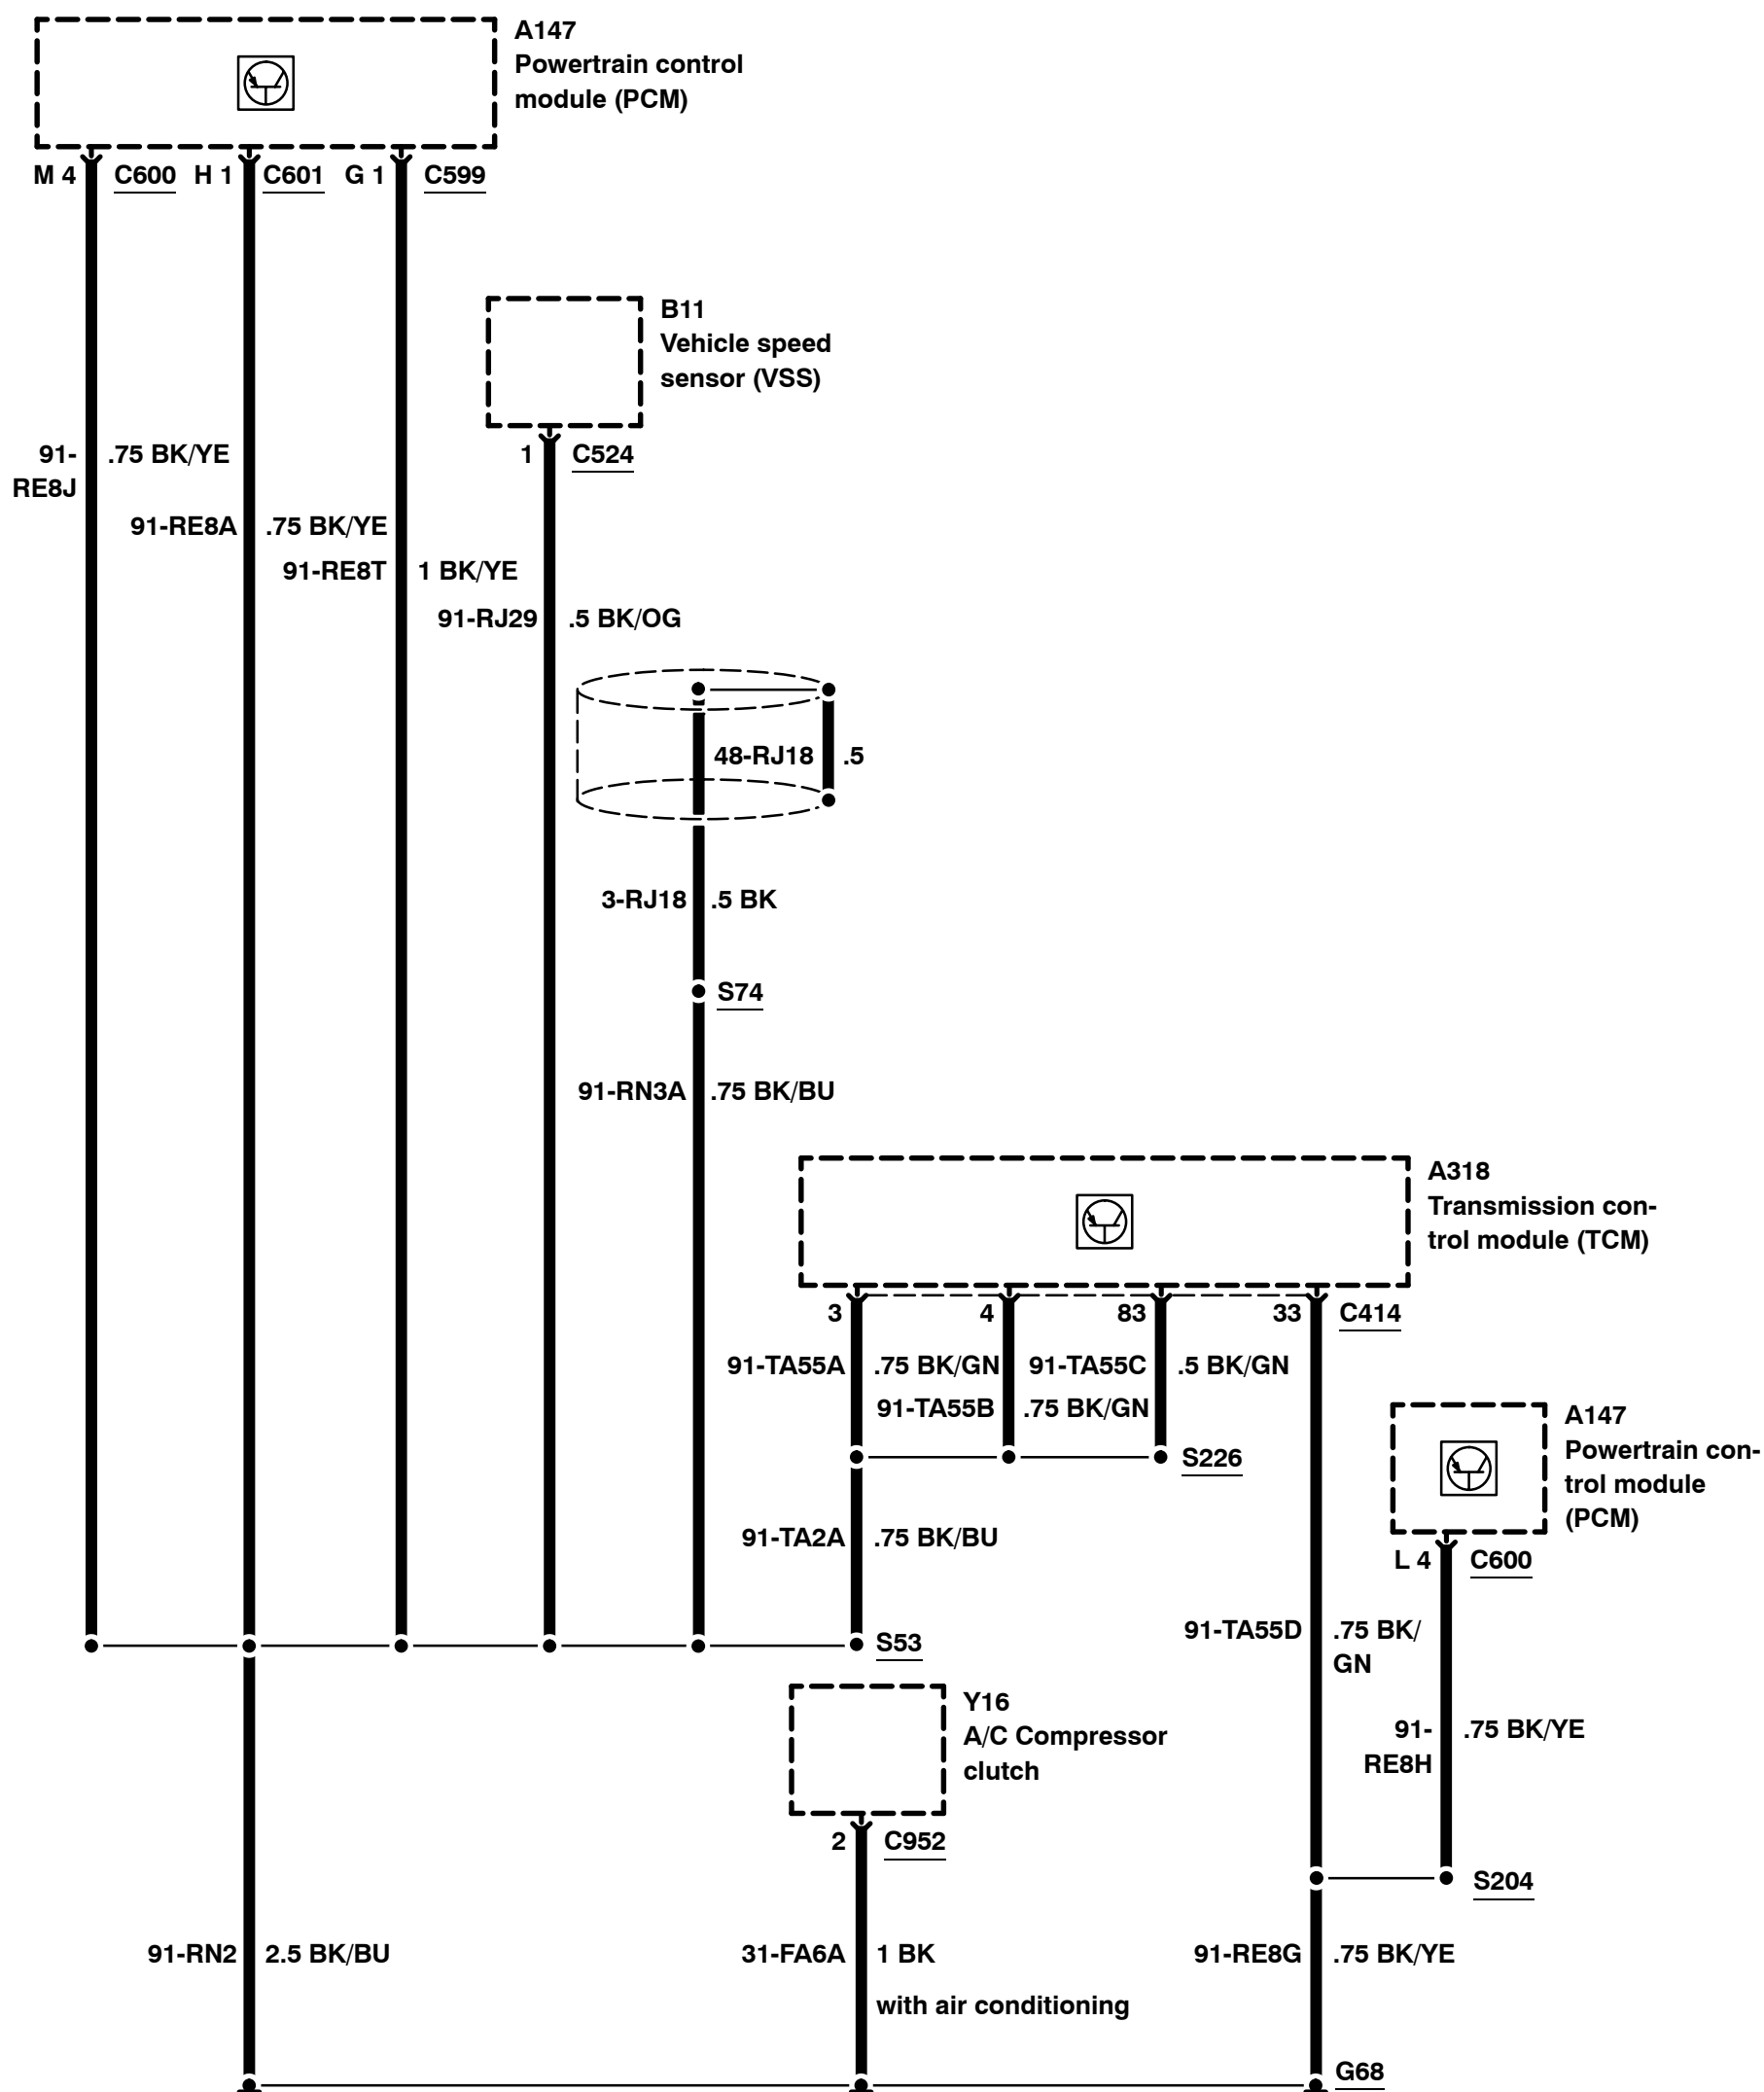


# Ground Distribution – G70, 4-door model

02/2008  
700-04-00-31  
2008.25  
Focus

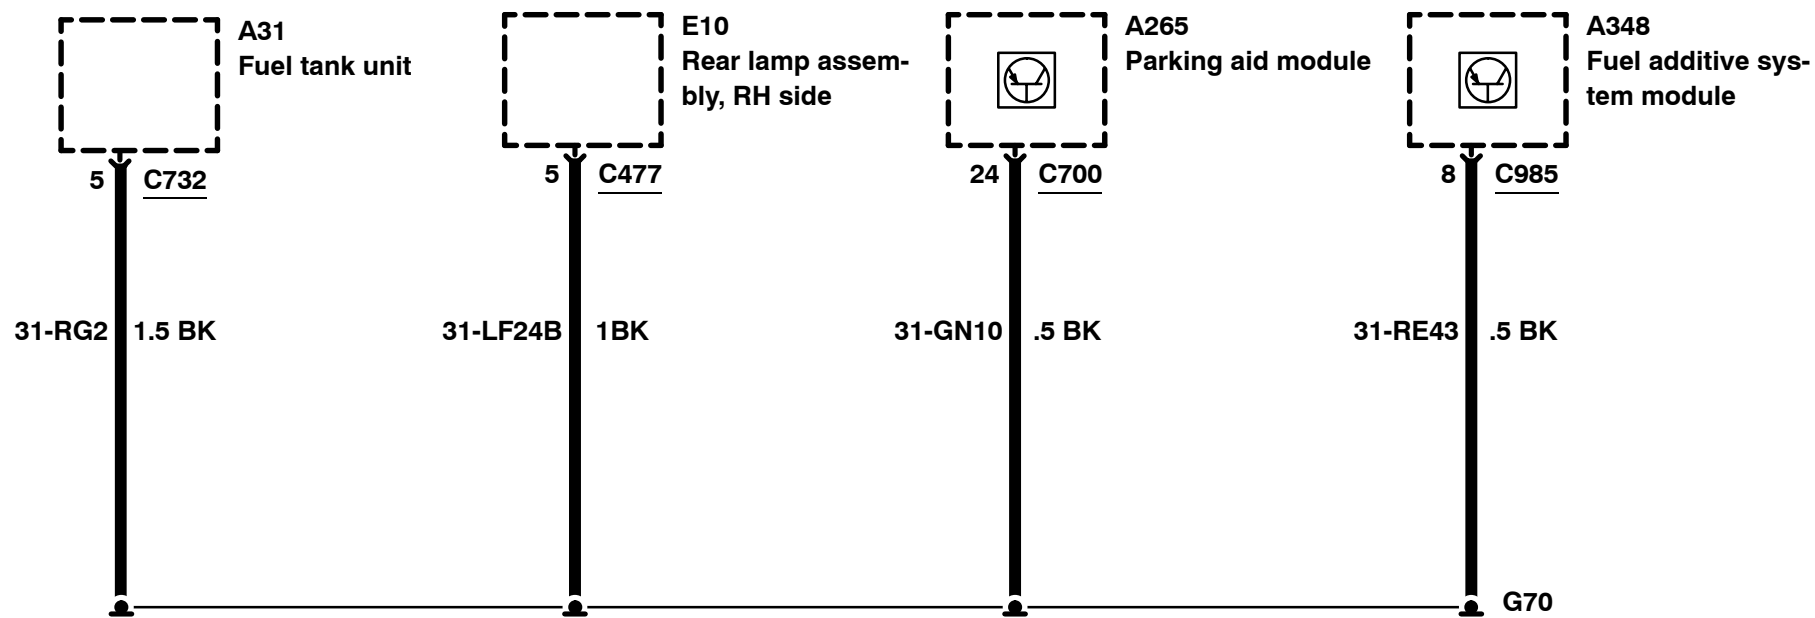


# Ground Distribution – G70, 5-door model

02/2008  
700-04-00-32  
2008.25  
Focus

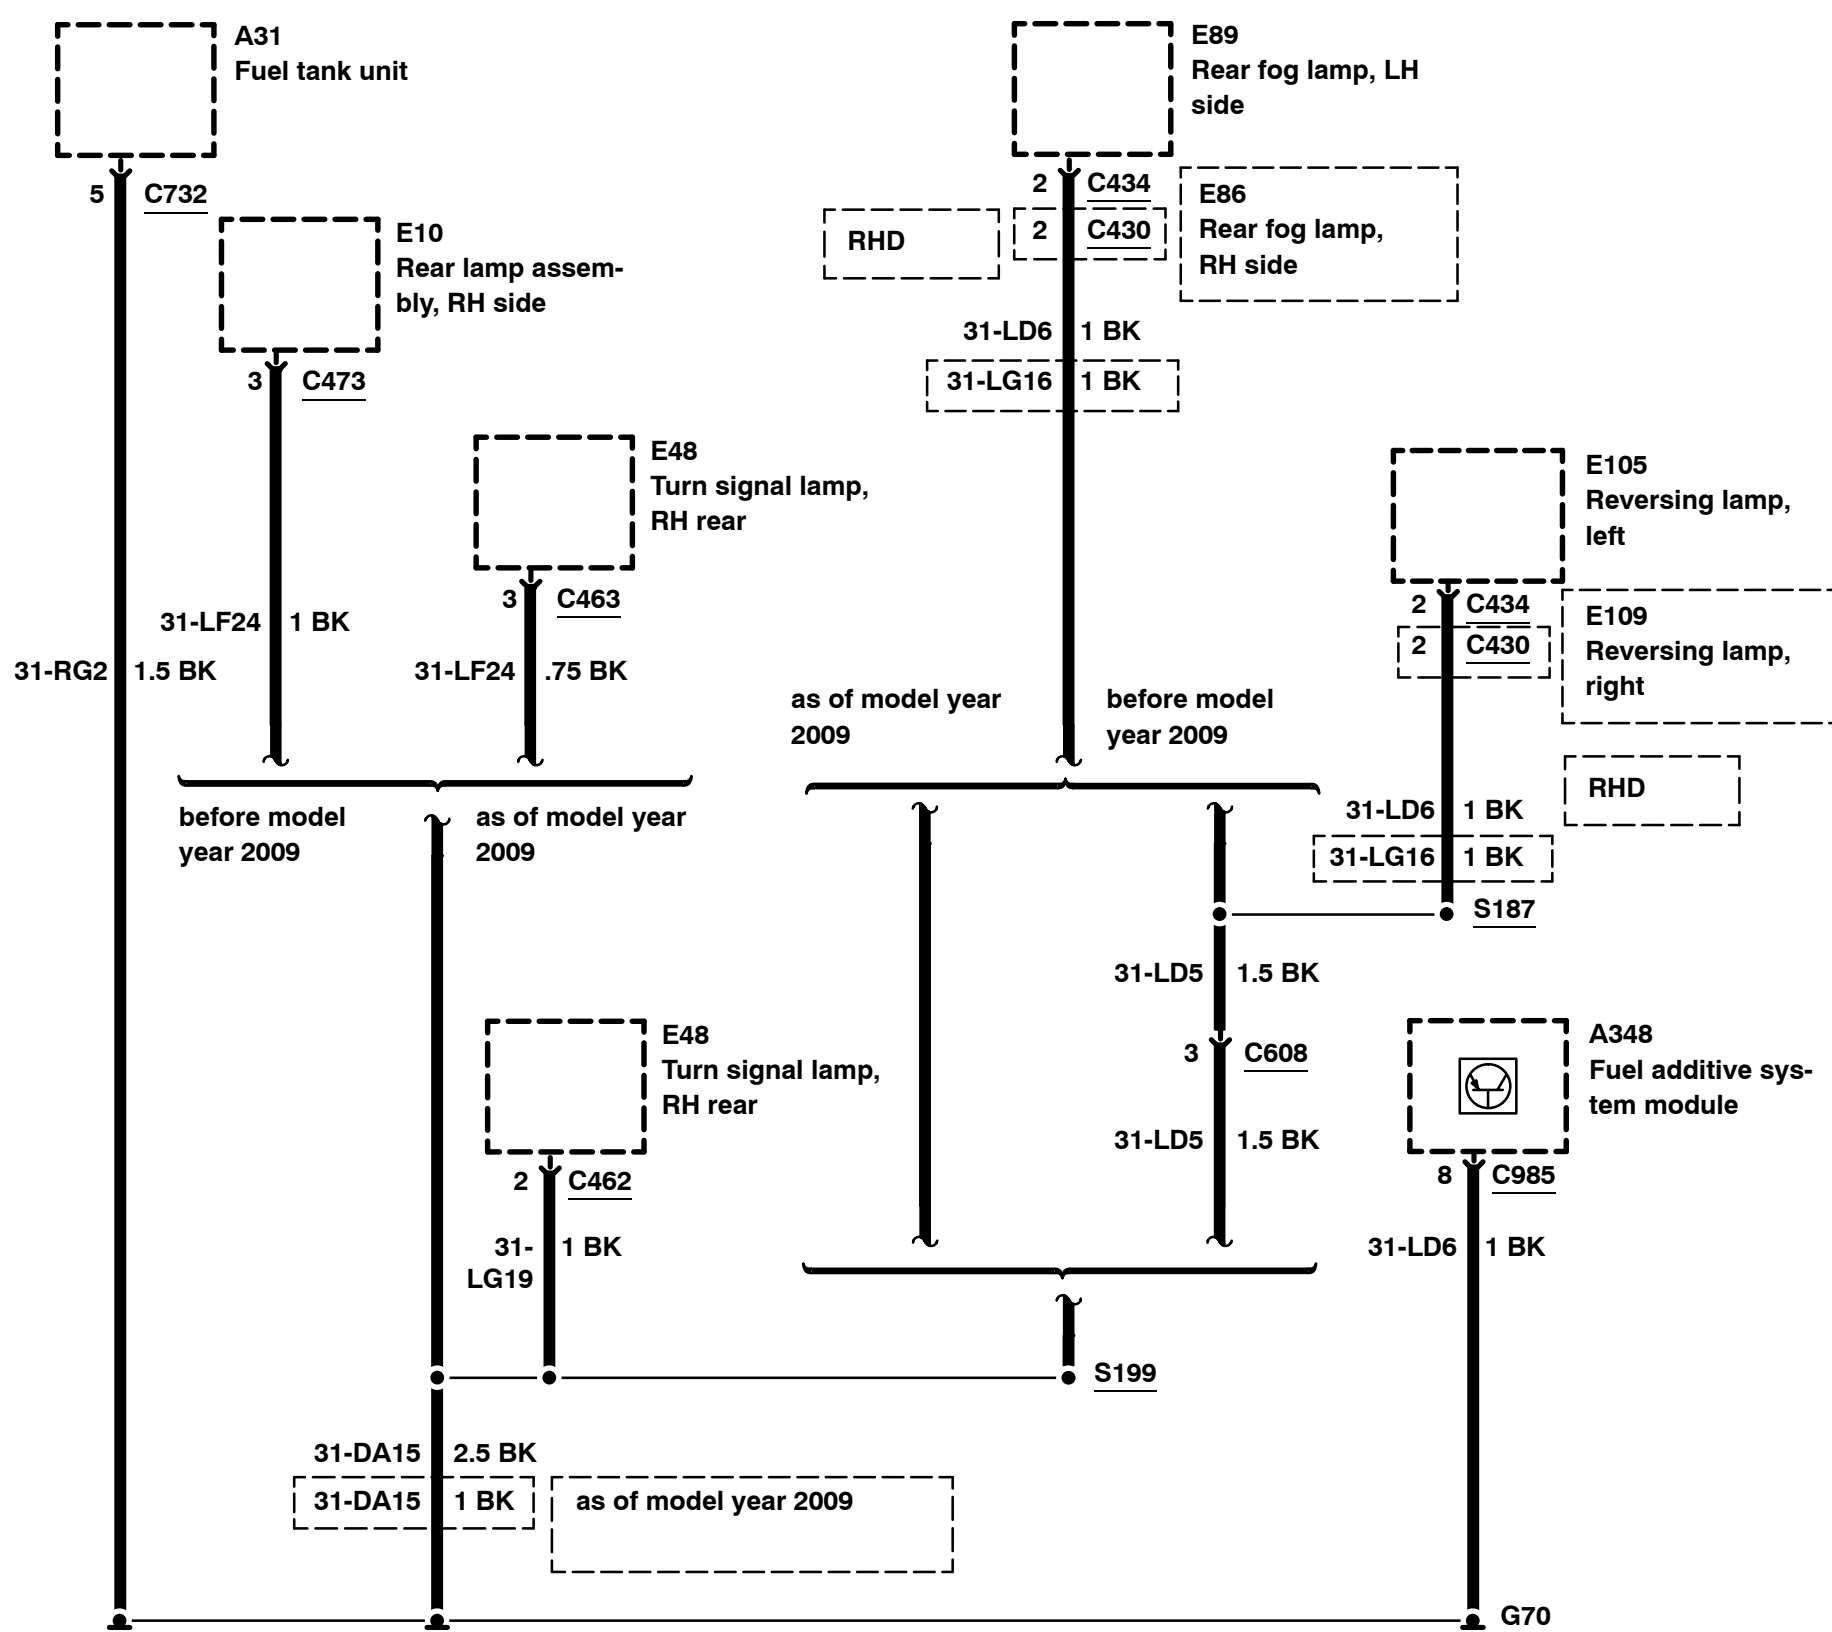


# Ground Distribution – G72

02/2008  
700-04-00-33  
2008.25  
Focus

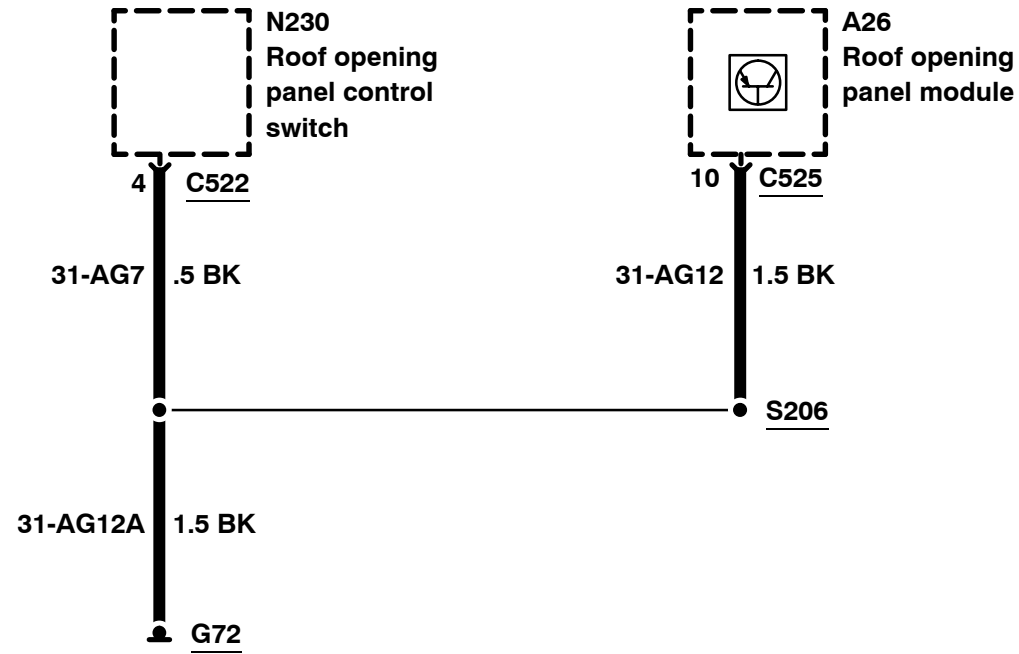


# Ground Distribution – G74, except 1.6L (Z6)

02/2008  
700-04-00-34  
2008.25  
Focus

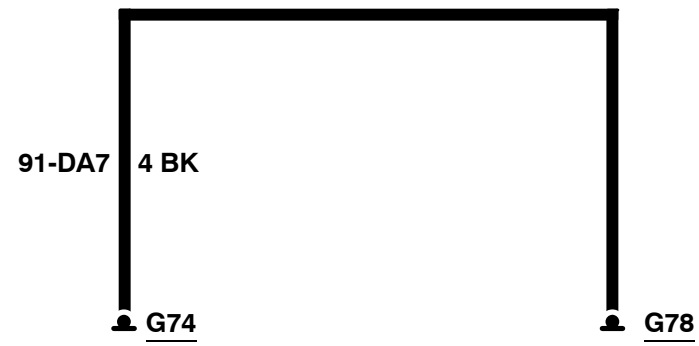

Ground Distribution – G75, LHD


02/2008  
700-04-00-35  
2008.25  
Focus

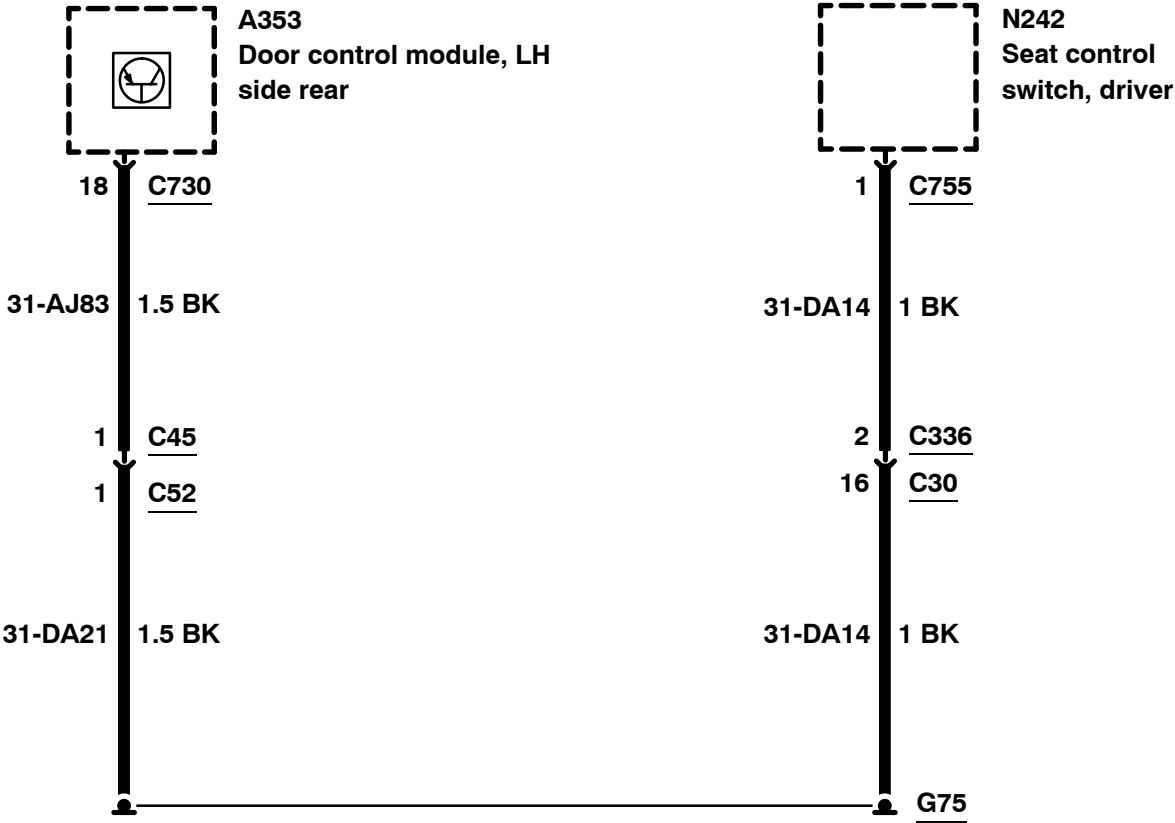



Ground Distribution – G75, RHD


02/2008  
700-04-00-36  
2008.25  
Focus

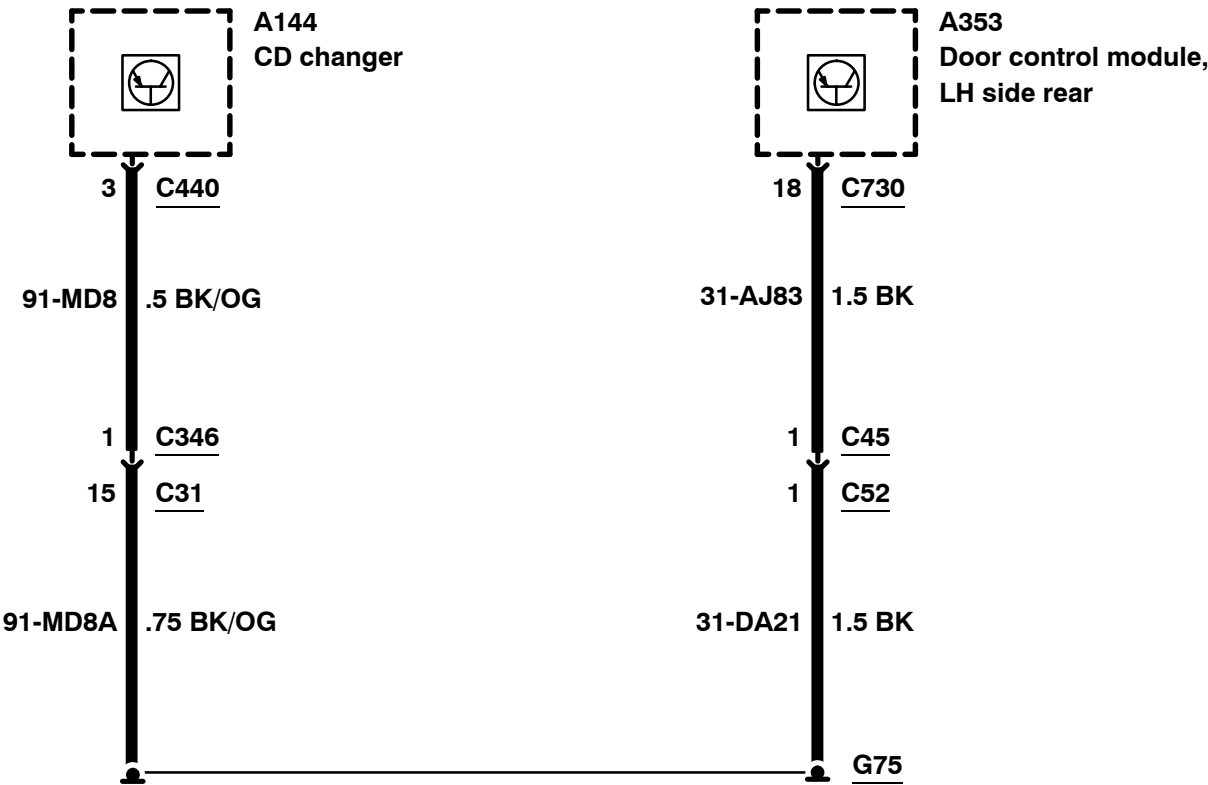




# Ground Distribution – G77, 4-door model

02/2008  
700-04-00-37  
2008.25  
Focus

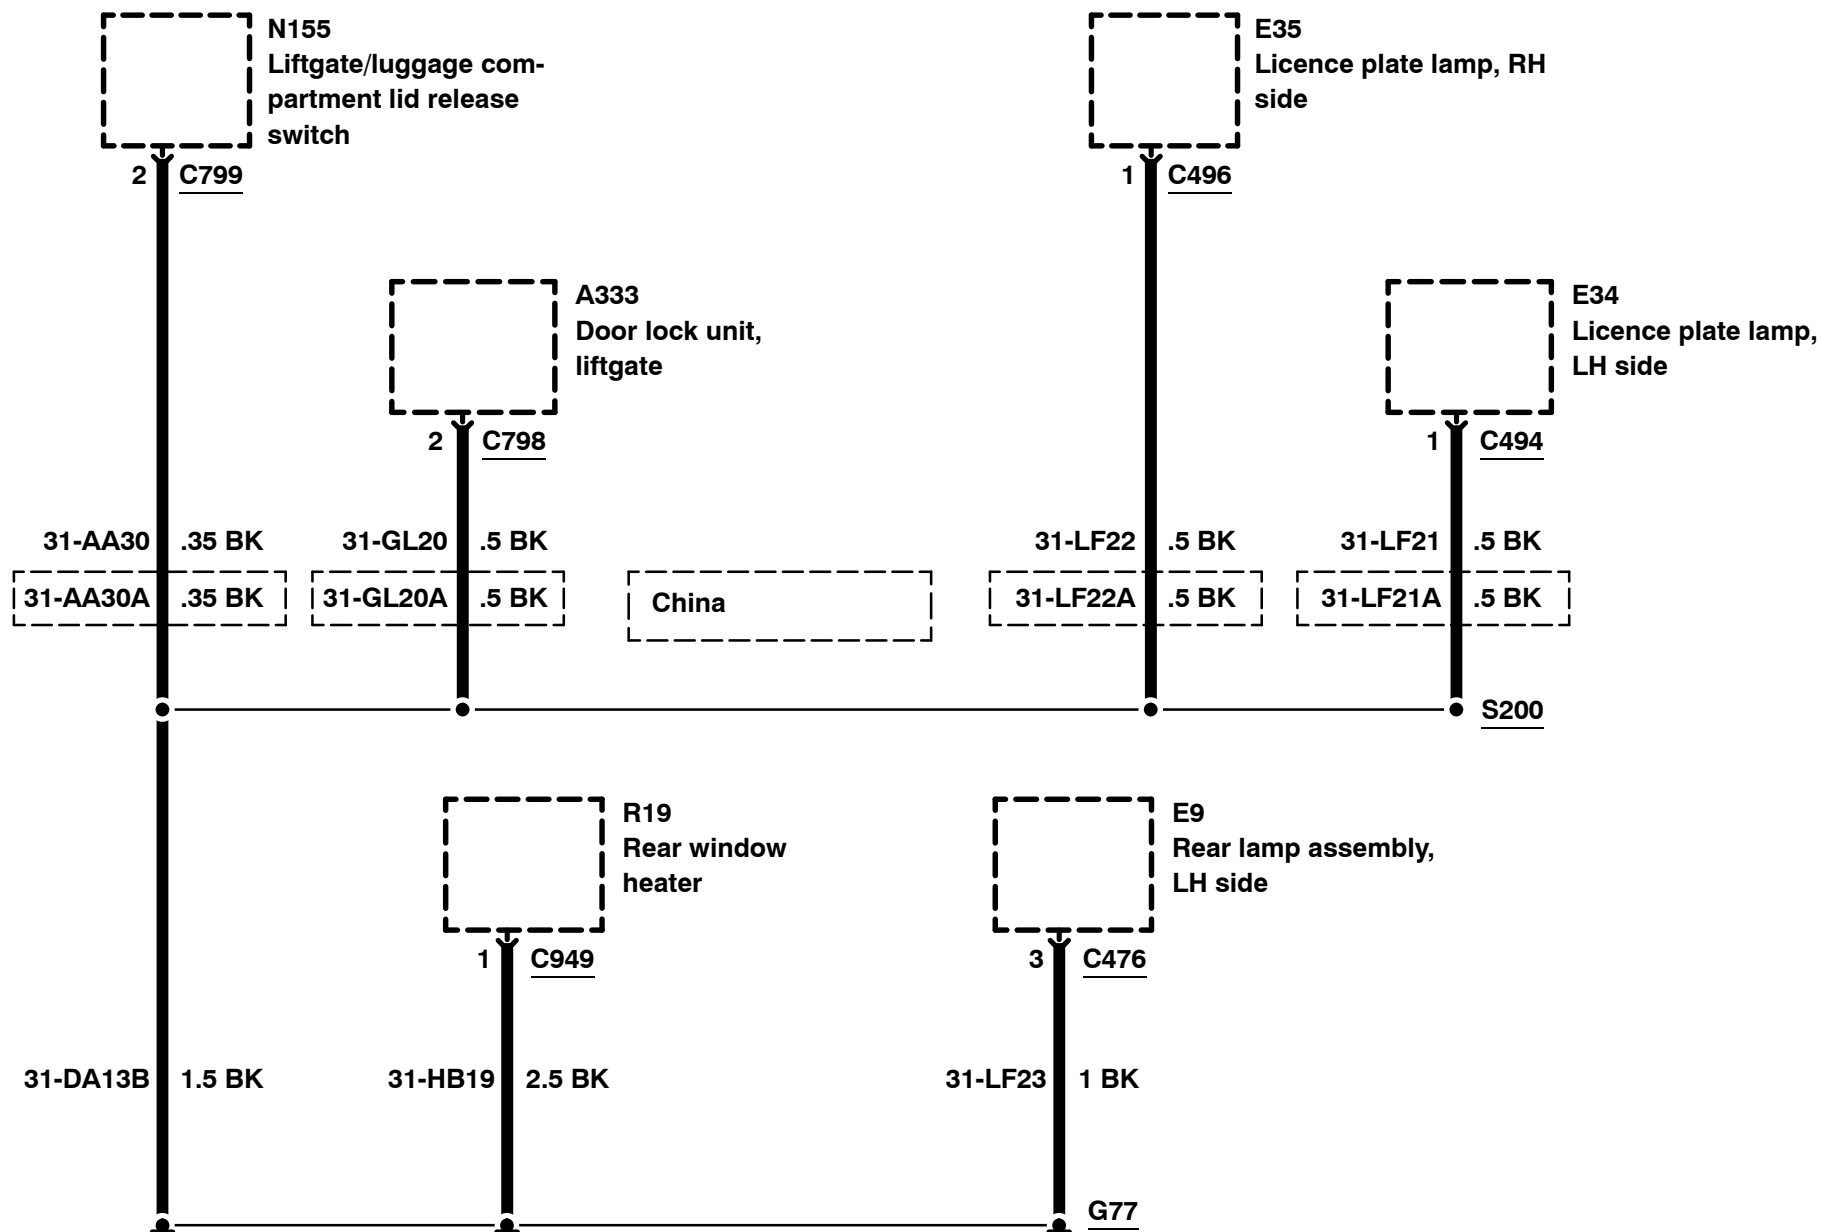

# Ground Distribution – G77, 5-door model

02/2008  
700-04-00-38  
2008.25  
Focus

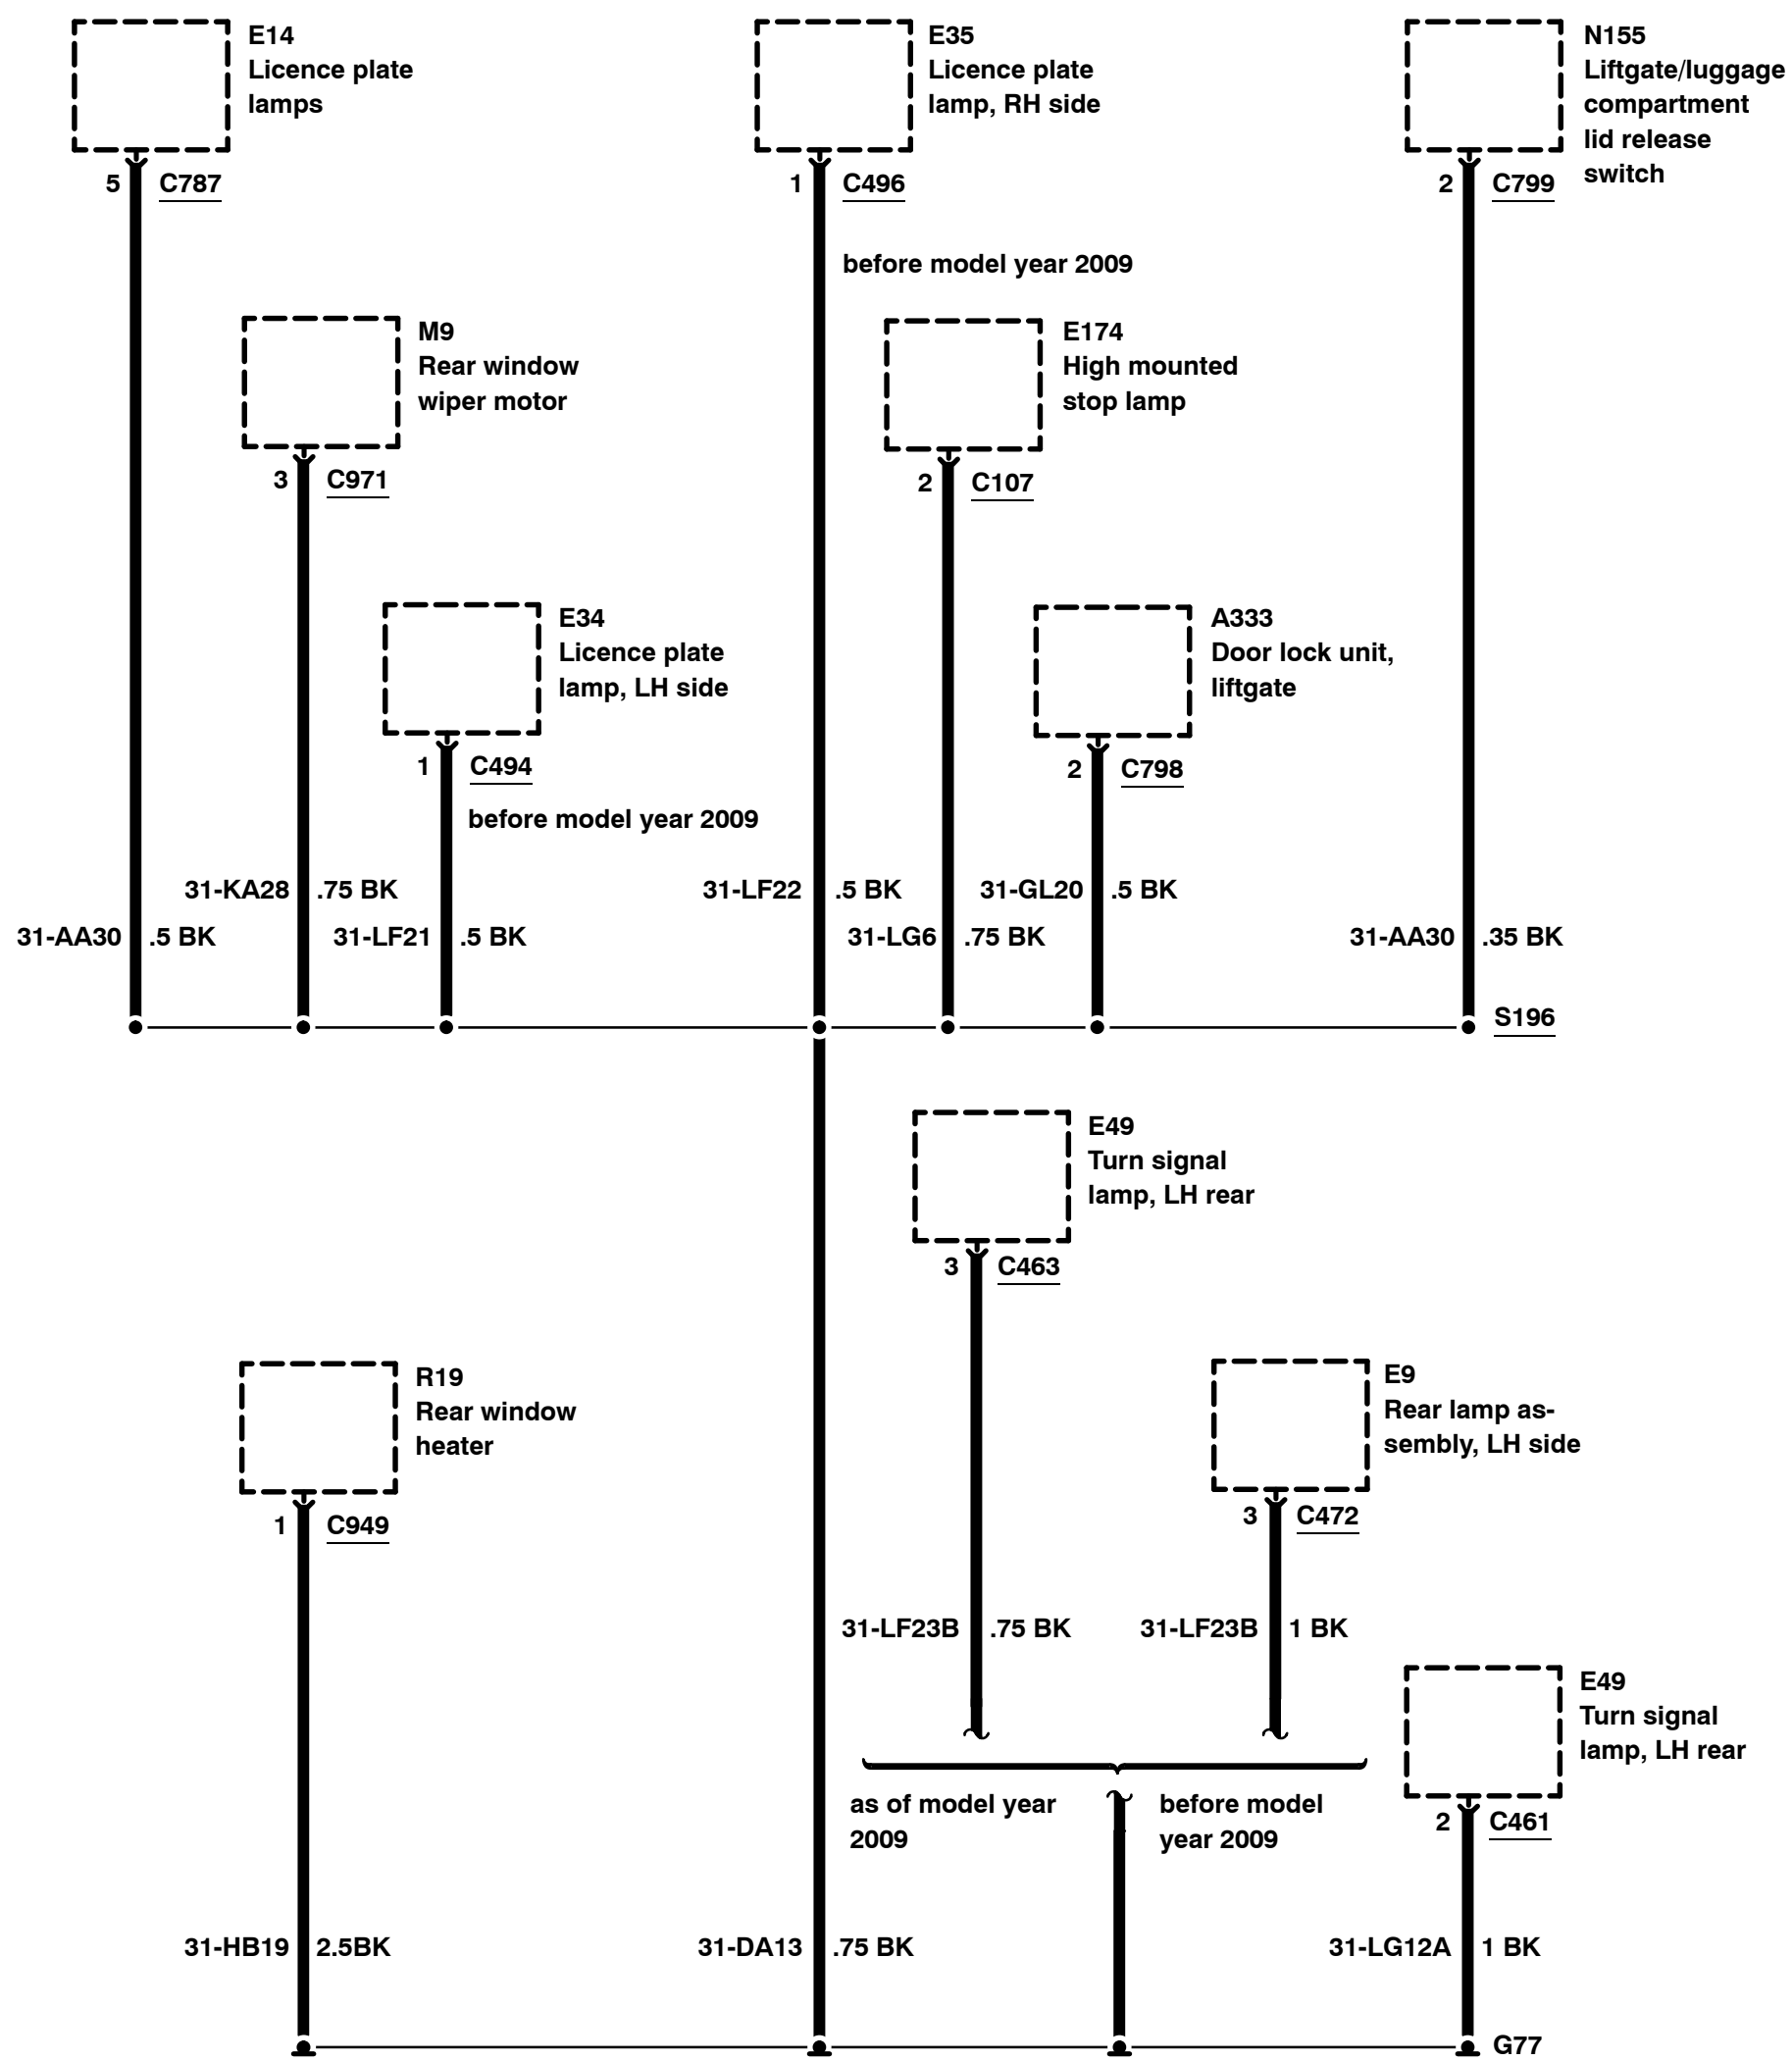

# Ground Distribution – G78, except 1.6L (Z6)

02/2008  
700-04-00-39  
2008.25  
Focus



# Ground Distribution – G78, 1.6L (Z6)

02/2008  
700-04-00-40  
2008.25  
Focus



**Components****Section 700-06-00**

|      | <b>Location</b>                                    | <b>Page/coordinates</b> |
|------|----------------------------------------------------|-------------------------|
| A7   | ABS module                                         |                         |
|      | Location . . . . .                                 | 11 – B 2                |
| A11  | Radio                                              |                         |
|      | dash panel, centre                                 |                         |
| A26  | Roof opening panel module                          |                         |
|      | left-hand-drive, 4-door model, Location . . . . .  | 25 – F 3                |
| A26  | Roof opening panel module                          |                         |
|      | right-hand-drive, 4-door model, Location . . . . . | 26 – F 3                |
| A26  | Roof opening panel module                          |                         |
|      | left-hand-drive, 5-door model, Location . . . . .  | 27 – F 3                |
| A26  | Roof opening panel module                          |                         |
|      | right-hand-drive, 5-door model, Location . . . . . | 28 – F 3                |
| A30  | Instrument cluster                                 |                         |
|      | right-hand-drive, Location . . . . .               | 35 – E 5                |
| A30  | Instrument cluster                                 |                         |
|      | left-hand-drive, Location . . . . .                | 36 – B 5                |
| A31  | Fuel tank unit                                     |                         |
|      | Location . . . . .                                 | 33 – C 2                |
| A40  | Transmission hardware unit                         |                         |
|      | automatic transmission                             |                         |
| A42  | Driver air bag unit                                |                         |
|      | in steering wheel                                  |                         |
| A43  | Passenger air bag unit                             |                         |
|      | right-hand-drive, Location . . . . .               | 35 – B 5                |
| A43  | Passenger air bag unit                             |                         |
|      | left-hand-drive, Location . . . . .                | 36 – F 4                |
| A102 | Passive anti-theft system transceiver module       |                         |
|      | Location . . . . .                                 | 43 – C 4                |
| A116 | Safety belt tensioner, passenger seat              |                         |
|      | under passenger's seat                             |                         |
| A117 | Safety belt tensioner, driver seat                 |                         |
|      | under driver's seat                                |                         |
| A118 | Cooling fan module                                 |                         |
|      | Petrol engines, Location . . . . .                 | 3 – C 5                 |
| A118 | Cooling fan module                                 |                         |
|      | Diesel engines, Location . . . . .                 | 4 – A 3                 |
| A128 | Heater control module                              |                         |
|      | dash panel, centre                                 |                         |
| A144 | CD changer                                         |                         |
|      | under passenger's seat                             |                         |
| A147 | Powertrain control module (PCM)                    |                         |
|      | 1.8/2.0L Duratec-HE (MI4), Location . . . . .      | 13 – A 5                |
| A147 | Powertrain control module (PCM)                    |                         |
|      | 1.8/2.0L Duratec-HE (MI4), Location . . . . .      | 13 – B 5                |
| A147 | Powertrain control module (PCM)                    |                         |
|      | 2.0L Duratorq-TDCi (DW) Diesel, Location . . . . . | 14 – E 2                |

**Components****Section 700-06-00****Location****Page/coordinates**

|      |                                                                                                |          |
|------|------------------------------------------------------------------------------------------------|----------|
| A147 | Powertrain control module (PCM)<br>1.6L (Z6), engine compartment                               |          |
| A151 | Antenna<br>roof                                                                                |          |
| A172 | Door lock unit, driver side front<br>Location . . . . .                                        | 44 – E 3 |
| A173 | Door lock unit, passenger side front<br>Location . . . . .                                     | 44 – E 3 |
| A176 | Electronic Stability Program (ESP) module<br>Location . . . . .                                | 11 – B 2 |
| A205 | Electronic Automatic Temperature Control (EATC) module<br>right-hand-drive, Location . . . . . | 35 – A 3 |
| A205 | Electronic Automatic Temperature Control (EATC) module<br>left-hand-drive, Location . . . . .  | 36 – A 3 |
| A208 | Restraints Control Module (RCM)<br>Location . . . . .                                          | 24 – E 5 |
| A208 | Restraints Control Module (RCM)<br>Location . . . . .                                          | 24 – A 2 |
| A242 | Side air bag module, driver<br>under driver's seat                                             |          |
| A245 | Side air bag module, passenger<br>under passenger's seat                                       |          |
| A265 | Parking aid module<br>Location . . . . .                                                       | 29 – E 3 |
| A275 | Door lock unit, LH rear<br>Location . . . . .                                                  | 45 – E 3 |
| A276 | Door lock unit, RH rear<br>Location . . . . .                                                  | 45 – E 3 |
| A318 | Transmission control module (TCM)<br>engine compartment                                        |          |
| A326 | Side head air bag module, driver<br>D-pillar, driver side                                      |          |
| A327 | Side head air bag module, passenger<br>D-pillar, passenger side                                |          |
| A333 | Door lock unit, liftgate<br>5-door model, Location . . . . .                                   | 46 – D 1 |
| A333 | Door lock unit, liftgate<br>Location . . . . .                                                 | 46 – D 1 |
| A333 | Door lock unit, liftgate<br>4-door model, Location . . . . .                                   | 47 – F 2 |
| A348 | Fuel additive system module<br>under rear seats                                                |          |
| A349 | Fuel additive system pump module<br>Location . . . . .                                         | 34 – A 2 |
| A351 | Door control module, driver<br>Location . . . . .                                              | 44 – E 2 |

**Components****Section 700-06-00**

|      | <b>Location</b>                                           | <b>Page/coordinates</b> |
|------|-----------------------------------------------------------|-------------------------|
| A352 | Door control module, passenger                            |                         |
|      | Location . . . . .                                        | 44 – E 2                |
| A353 | Door control module, LH side rear                         |                         |
|      | Location . . . . .                                        | 45 – B 2                |
| A354 | Door control module, RH side rear                         |                         |
|      | Location . . . . .                                        | 45 – B 2                |
| A355 | Exterior mirror, driver side                              |                         |
|      | Location . . . . .                                        | 44 – B 4                |
| A356 | Exterior mirror, passenger side                           |                         |
|      | Location . . . . .                                        | 44 – B 4                |
| A357 | Electrical Hydraulic Power Assist Steering (EHPAS) module |                         |
|      | Location . . . . .                                        | 5 – A 2                 |
| A357 | Electrical Hydraulic Power Assist Steering (EHPAS) module |                         |
|      | Location . . . . .                                        | 5 – B 2                 |
| A378 | Micropol antenna                                          |                         |
|      | Location . . . . .                                        | 42 – B 5                |
| A379 | Adaptive front lighting module<br>behind dash panel       |                         |
| A464 | Electronic Throttle Control (ETC) module                  |                         |
|      | 1.8/2.0L Duratec-HE (MI4), Location . . . . .             | 12 – A 1                |
| B8   | Throttle Position Sensor (TPS)<br>engine                  |                         |
| B10  | Engine Coolant Temperature (ECT) sensor                   |                         |
|      | 1.8/2.0L Duratec-HE (MI4), Location . . . . .             | 13 – A 4                |
| B10  | Engine Coolant Temperature (ECT) sensor                   |                         |
|      | 2.0L Duratorq-TDCi (DW) Diesel, Location . . . . .        | 14 – E 3                |
| B10  | Engine Coolant Temperature (ECT) sensor<br>engine         |                         |
| B11  | Vehicle speed sensor (VSS)                                |                         |
|      | 1.8/2.0L Duratec-HE (MI4), Location . . . . .             | 13 – B 1                |
| B12  | Water-in-fuel sensor                                      |                         |
|      | 2.0L Duratorq-TDCi (DW) Diesel, Location . . . . .        | 14 – B 5                |
| B14  | Wheel speed sensor, RH side front                         |                         |
|      | Location . . . . .                                        | 16 – A 3                |
| B15  | Wheel speed sensor, LH side front                         |                         |
|      | Location . . . . .                                        | 17 – F 3                |
| B16  | Wheel speed sensor, RH side rear                          |                         |
|      | Location . . . . .                                        | 34 – D 2                |
| B17  | Wheel speed sensor, LH side rear                          |                         |
|      | Location . . . . .                                        | 19 – A 4                |
| B22  | Mass Air Flow (MAF) sensor                                |                         |
|      | 2.0L Duratorq-TDCi (DW) Diesel, Location . . . . .        | 14 – E 4                |
| B36  | Steering position sensor                                  |                         |
|      | Location . . . . .                                        | 43 – A 3                |
| B41  | Camshaft position sensor                                  |                         |
|      | 1.8/2.0L Duratec-HE (MI4), Location . . . . .             | 12 – D 5                |

**Components****Section 700-06-00****Location****Page/coordinates**

|      |                                                                                       |          |
|------|---------------------------------------------------------------------------------------|----------|
| B41  | Camshaft position sensor<br>2.0L Duratorq-TDCi (DW) Diesel, Location .....            | 15 – D 5 |
| B41  | Camshaft position sensor<br>engine                                                    |          |
| B43  | Crankshaft position sensor<br>1.8/2.0L Duratec-HE (MI4), Location .....               | 13 – D 1 |
| B43  | Crankshaft position sensor<br>2.0L Duratorq-TDCi (DW) Diesel, Location .....          | 15 – E 2 |
| B43  | Crankshaft position sensor<br>engine                                                  |          |
| B44  | Turbine Shaft Speed (TSS) sensor<br>automatic transmission                            |          |
| B45  | Knock sensor<br>engine                                                                |          |
| B70  | Barometric Absolute Pressure (BAP) sensor<br>engine                                   |          |
| B72  | Sunload sensor<br>dash panel                                                          |          |
| B73  | Outside air temperature sensor<br>behind dash panel                                   |          |
| B80  | Transmission speed sensor<br>engine                                                   |          |
| B89  | Pre-catalyst heated oxygen sensor (HO2S)<br>1.8/2.0L Duratec-HE (MI4), Location ..... | 13 – C 5 |
| B89  | Pre-catalyst heated oxygen sensor (HO2S)<br>in exhaust system                         |          |
| B105 | Knock sensor 1<br>1.8/2.0L Duratec-HE (MI4), Location .....                           | 13 – E 4 |
| B106 | Knock sensor 2<br>1.8/2.0L Duratec-HE (MI4), Location .....                           | 12 – B 3 |
| B108 | Boost pressure sensor<br>engine                                                       |          |
| B109 | Fuel temperature sensor<br>2.0L Duratorq-TDCi (DW) Diesel, Location .....             | 14 – C 5 |
| B110 | Output Shaft Speed (OSS) sensor<br>automatic transmission                             |          |
| B120 | Transmission range sensor<br>automatic transmission                                   |          |
| B129 | Accelerator pedal position sensor<br>right-hand-drive, Location .....                 | 41 – D 1 |
| B129 | Accelerator pedal position sensor<br>Location .....                                   | 41 – D 1 |
| B129 | Accelerator pedal position sensor<br>left-hand-drive, Location .....                  | 42 – D 1 |
| B129 | Accelerator pedal position sensor<br>Location .....                                   | 42 – D 1 |



**Components****Section 700-06-00**

|      | <b>Location</b>                                                                            | <b>Page/coordinates</b> |
|------|--------------------------------------------------------------------------------------------|-------------------------|
| B142 | Temperature manifold absolute pressure sensor<br>1.8/2.0L Duratec-HE (MI4), Location ..... | 12 – B 1                |
| B168 | Parking aid sensor, rear, outer left<br>Location .....                                     | 2 – B 5                 |
| B171 | Parking aid sensor, rear, outer right<br>Location .....                                    | 2 – E 1                 |
| B174 | Yaw rate sensor<br>Location .....                                                          | 19 – E 1                |
| B187 | Pre-catalyst exhaust gas temperature sensor<br>in exhaust system                           |                         |
| B188 | Post-catalyst exhaust gas temperature sensor<br>in exhaust system                          |                         |
| B189 | Diesel particulate filter differential pressure feedback sensor<br>engine                  |                         |
| B190 | Fuel tank filler cap sensor<br>behind luggage compartment lining, RH side                  |                         |
| B192 | Catalyst monitor sensor<br>1.8/2.0L Duratec-HE (MI4), Location .....                       | 13 – A 4                |
| B192 | Catalyst monitor sensor<br>in exhaust system                                               |                         |
| B196 | Turbo geometry position sensor<br>2.0L Duratorq-TDCi (DW) Diesel, Location .....           | 15 – C 1                |
| B206 | In-vehicle temperature sensor<br>right-hand-drive, Location .....                          | 35 – B 2                |
| B206 | In-vehicle temperature sensor<br>left-hand-drive, Location .....                           | 36 – B 2                |
| B213 | Intake Air Temperature (IAT) sensor<br>2.0L Duratorq-TDCi (DW) Diesel, Location .....      | 14 – B 4                |
| B218 | Steering column position sensor<br>engine                                                  |                         |
| B225 | Fuel rail pressure transducer sensor<br>2.0L Duratorq-TDCi (DW) Diesel, Location .....     | 14 – C 5                |
| B238 | Side air bag sensor, driver<br>Location .....                                              | 18 – D 5                |
| B238 | Side air bag sensor, driver<br>Location .....                                              | 19 – C 5                |
| B239 | Side air bag sensor, passenger<br>Location .....                                           | 18 – D 5                |
| B239 | Side air bag sensor, passenger<br>Location .....                                           | 19 – C 5                |
| B301 | Parking aid sensor, RH front<br>Location .....                                             | 1 – F 4                 |
| B304 | Discharge temperature sensor, floor, LH side<br>air conditioning housing                   |                         |
| B305 | Discharge temperature sensor, floor, RH side<br>air conditioning housing                   |                         |

| Components |                                                                            | Section 700-06-00 |
|------------|----------------------------------------------------------------------------|-------------------|
|            | Location                                                                   | Page/coordinates  |
| B306       | Discharge temperature sensor, panel, LH side<br>air conditioning housing   |                   |
| B307       | Discharge temperature sensor, panel, RH side<br>Location . . . . .         | 35 – D 5          |
| B308       | A/C pressure sensor<br>engine compartment                                  |                   |
| B309       | Parking aid sensor, LH front<br>Location . . . . .                         | 1 – B 5           |
| B336       | Parking aid sensor, rear, centre<br>Location . . . . .                     | 2 – C 4           |
| B433       | Mass Air Flow/Intake Air Temperature (MAF/IAT) sensor<br>engine            |                   |
| D20        | Data Link Connector (DLC)<br>right-hand-drive, Location . . . . .          | 35 – F 3          |
| D20        | Data Link Connector (DLC)<br>left-hand-drive, Location . . . . .           | 36 – B 4          |
| D20        | Data Link Connector (DLC)<br>Location . . . . .                            | 36 – B 4          |
| D81        | Auxiliary IN<br>in glove compartment                                       |                   |
| E1         | Headlamp, LH side<br>left-hand-drive, Location . . . . .                   | 8 – F 3           |
| E1         | Headlamp, LH side<br>right-hand-drive, Location . . . . .                  | 10 – F 3          |
| E7         | Headlamp, RH side<br>left-hand-drive, Location . . . . .                   | 7 – A 3           |
| E7         | Headlamp, RH side<br>right-hand-drive, Location . . . . .                  | 9 – A 3           |
| E9         | Rear lamp assembly, LH side<br>5-door model, Location . . . . .            | 31 – B 5          |
| E9         | Rear lamp assembly, LH side<br>4-door model, Location . . . . .            | 32 – A 4          |
| E10        | Rear lamp assembly, RH side<br>5-door model, Location . . . . .            | 29 – D 5          |
| E10        | Rear lamp assembly, RH side<br>4-door model, Location . . . . .            | 30 – F 5          |
| E14        | Licence plate lamps<br>liftgate                                            |                   |
| E18        | Interior lamp, front<br>left-hand-drive, 4-door model, Location . . . . .  | 25 – D 1          |
| E18        | Interior lamp, front<br>right-hand-drive, 4-door model, Location . . . . . | 26 – D 1          |
| E18        | Interior lamp, front<br>left-hand-drive, 5-door model, Location . . . . .  | 27 – D 1          |
| E18        | Interior lamp, front<br>right-hand-drive, 5-door model, Location . . . . . | 28 – D 1          |

**Components****Section 700-06-00**

|     | <b>Location</b>                                                               | <b>Page/coordinates</b> |
|-----|-------------------------------------------------------------------------------|-------------------------|
| E19 | Interior lamp, rear<br>left-hand-drive, 4-door model, Location .....          | 25 – D 5                |
| E19 | Interior lamp, rear<br>right-hand-drive, 4-door model, Location .....         | 26 – D 5                |
| E19 | Interior lamp, rear<br>left-hand-drive, 5-door model, Location .....          | 27 – D 5                |
| E19 | Interior lamp, rear<br>right-hand-drive, 5-door model, Location .....         | 28 – D 5                |
| E28 | Glove compartment lamp<br>right-hand-drive, Location .....                    | 35 – A 5                |
| E28 | Glove compartment lamp<br>left-hand-drive, Location .....                     | 36 – F 3                |
| E30 | Vanity mirror lamp, LH side<br>left-hand-drive, 4-door model, Location .....  | 25 – B 5                |
| E30 | Vanity mirror lamp, LH side<br>right-hand-drive, 4-door model, Location ..... | 26 – B 5                |
| E30 | Vanity mirror lamp, LH side<br>left-hand-drive, 5-door model, Location .....  | 27 – B 5                |
| E30 | Vanity mirror lamp, LH side<br>right-hand-drive, 5-door model, Location ..... | 28 – B 5                |
| E30 | Vanity mirror lamp, LH side<br>left-hand-drive, 5-door model, Location .....  | 28 – B 5                |
| E31 | Vanity mirror lamp, RH side<br>left-hand-drive, 4-door model, Location .....  | 25 – A 5                |
| E31 | Vanity mirror lamp, RH side<br>right-hand-drive, 4-door model, Location ..... | 26 – A 4                |
| E31 | Vanity mirror lamp, RH side<br>left-hand-drive, 5-door model, Location .....  | 27 – A 4                |
| E31 | Vanity mirror lamp, RH side<br>right-hand-drive, 4-door model, Location ..... | 27 – A 4                |
| E31 | Vanity mirror lamp, RH side<br>right-hand-drive, 5-door model, Location ..... | 28 – A 4                |
| E34 | Licence plate lamp, LH side<br>5-door model, Location .....                   | 46 – E 3                |
| E34 | Licence plate lamp, LH side<br>4-door model, Location .....                   | 47 – E 5                |
| E35 | Licence plate lamp, RH side<br>5-door model, Location .....                   | 46 – C 1                |
| E35 | Licence plate lamp, RH side<br>4-door model, Location .....                   | 47 – D 5                |
| E42 | Fog lamp, RH front<br>front bumper                                            |                         |
| E43 | Fog lamp, LH front<br>Location .....                                          | 6 – C 2                 |
| E44 | Side turn signal lamp, RH side<br>left-hand-drive, Location .....             | 7 – B 5                 |

**Components****Section 700-06-00****Location****Page/coordinates**

|      |                                                                    |          |
|------|--------------------------------------------------------------------|----------|
| E44  | Side turn signal lamp, RH side<br>right-hand-drive, Location ..... | 9 – B 5  |
| E48  | Turn signal lamp, RH rear<br>RH D-pillar                           |          |
| E49  | Turn signal lamp, LH rear<br>Location .....                        | 31 – D 5 |
| E57  | Luggage compartment lamp<br>4-door model, Location .....           | 29 – E 4 |
| E57  | Luggage compartment lamp<br>5-door model, Location .....           | 30 – D 5 |
| E61  | Footwell lamp, LH front<br>in LH front footwell                    |          |
| E62  | Footwell lamp, RH front<br>right-hand-drive, Location .....        | 35 – F 2 |
| E62  | Footwell lamp, RH front<br>left-hand-drive, Location .....         | 36 – A 4 |
| E86  | Rear fog lamp, RH side<br>Location .....                           | 2 – B 2  |
| E86  | Rear fog lamp, RH side<br>Location .....                           | 2 – B 3  |
| E89  | Rear fog lamp, LH side<br>Location .....                           | 2 – E 3  |
| E105 | Reversing lamp, left<br>rear bumper                                |          |
| E109 | Reversing lamp, right<br>rear bumper                               |          |
| E174 | High mounted stop lamp<br>Location .....                           | 46 – F 4 |
| E174 | High mounted stop lamp<br>rear window                              |          |
| H1   | Horn<br>Location .....                                             | 6 – E 2  |
| H4   | Second horn<br>Location .....                                      | 6 – E 2  |
| H5   | Anti-theft alarm horn<br>Location .....                            | 29 – B 4 |
| H9   | Buzzer<br>Location .....                                           | 29 – B 5 |
| K1   | Heated rear window relay<br>in Central Junction Box (CJB)          |          |
| K4   | Fuel pump relay<br>Location .....                                  | 48 – C 5 |
| K13  | Power hold relay<br>Location .....                                 | 50 – F 5 |
| K14  | Blower motor relay<br>Location .....                               | 50 – E 2 |

**Components****Section 700-06-00**

|      | <b>Location</b>                                                    | <b>Page/coordinates</b> |
|------|--------------------------------------------------------------------|-------------------------|
| K22  | Starter relay                                                      |                         |
|      | Location . . . . .                                                 | 50 – E 5                |
| K32  | A/C Wide Open Throttle (WOT) relay                                 |                         |
|      | Location . . . . .                                                 | 50 – D 5                |
| K33  | Horn relay                                                         |                         |
|      | Location . . . . .                                                 | 50 – B 5                |
| K41  | Ignition relay                                                     |                         |
|      | Location . . . . .                                                 | 50 – C 5                |
| K69  | Fuel heater relay                                                  |                         |
|      | Location . . . . .                                                 | 50 – C 5                |
| K94  | Start inhibit relay                                                |                         |
|      | in Battery Junction Box (BJB)                                      |                         |
| K212 | Glow plug relay                                                    |                         |
|      | in Battery Junction Box (BJB)                                      |                         |
| K273 | Reversing lamps relay                                              |                         |
|      | Location . . . . .                                                 | 50 – B 5                |
| M3   | Blower motor                                                       |                         |
|      | right-hand-drive, Location . . . . .                               | 37 – F 1                |
| M3   | Blower motor                                                       |                         |
|      | left-hand-drive, Location . . . . .                                | 38 – C 4                |
| M8   | Starter motor                                                      |                         |
|      | 1.8/2.0L Duratec-HE (MI4), manual transmission, Location . . . . . | 12 – D 1                |
| M8   | Starter motor                                                      |                         |
|      | engine                                                             |                         |
| M9   | Rear window wiper motor                                            |                         |
|      | Location . . . . .                                                 | 46 – E 4                |
| M69  | Recirculated air actuator                                          |                         |
|      | right-hand-drive, Location . . . . .                               | 37 – C 4                |
| M69  | Recirculated air actuator                                          |                         |
|      | left-hand-drive, Location . . . . .                                | 38 – F 2                |
| M74  | Two-way washer pump motor                                          |                         |
|      | left-hand-drive, Location . . . . .                                | 7 – E 4                 |
| M74  | Two-way washer pump motor                                          |                         |
|      | right-hand-drive, Location . . . . .                               | 7 – E 5                 |
| M74  | Two-way washer pump motor                                          |                         |
|      | right-hand-drive, Location . . . . .                               | 9 – E 5                 |
| M90  | Fuel filler door lock motor                                        |                         |
|      | 5-door model, Location . . . . .                                   | 29 – A 3                |
| M90  | Fuel filler door lock motor                                        |                         |
|      | 4-door model, Location . . . . .                                   | 30 – B 3                |
| M100 | Air temperature door motor, LH side                                |                         |
|      | right-hand-drive, Location . . . . .                               | 37 – D 2                |
| M100 | Air temperature door motor, LH side                                |                         |
|      | left-hand-drive, Location . . . . .                                | 38 – D 2                |
| M101 | Air temperature door motor, RH side                                |                         |
|      | right-hand-drive, Location . . . . .                               | 37 – C 5                |

**Components****Section 700-06-00****Location****Page/coordinates**

|      |                                                                        |          |
|------|------------------------------------------------------------------------|----------|
| M101 | Air temperature door motor, RH side<br>left-hand-drive, Location ..... | 38 – C 5 |
| M111 | Windshield wiper motor<br>left-hand-drive, Location .....              | 7 – F 3  |
| M111 | Windshield wiper motor<br>right-hand-drive, Location .....             | 9 – E 4  |
| M122 | Window regulator motor, driver side front<br>Location .....            | 44 – E 2 |
| M123 | Window regulator motor, passenger side front<br>Location .....         | 44 – E 2 |
| M158 | Driver seat height motor<br>under driver's seat                        |          |
| M210 | Defrost mode actuator<br>right-hand-drive, Location .....              | 37 – D 5 |
| M210 | Defrost mode actuator<br>left-hand-drive, Location .....               | 38 – D 5 |
| M227 | Driver seat horizontal motor<br>under driver's seat                    |          |
| M230 | Driver seat backrest motor<br>under driver's seat                      |          |
| M250 | Panel/floor mode actuator<br>right-hand-drive, Location .....          | 37 – B 4 |
| M250 | Panel/floor mode actuator<br>left-hand-drive, Location .....           | 38 – C 3 |
| M251 | EGR stepper motor<br>engine                                            |          |
| M252 | EGR throttle actuator<br>engine                                        |          |
| M253 | Variable geometry turbo actuator<br>engine                             |          |
| N1   | Brake fluid level switch<br>left-hand-drive, Location .....            | 8 – B 5  |
| N1   | Brake fluid level switch<br>Location .....                             | 8 – B 5  |
| N1   | Brake fluid level switch<br>right-hand-drive, Location .....           | 9 – F 5  |
| N10  | Heated rear window switch<br>right-hand-drive, Location .....          | 35 – C 2 |
| N10  | Heated rear window switch<br>left-hand-drive, Location .....           | 36 – C 2 |
| N17  | Oil pressure switch<br>1.8/2.0L Duratec-HE (MI4), Location .....       | 12 – C 1 |
| N17  | Oil pressure switch<br>2.0L Duratorq-TDCi (DW) Diesel, Location .....  | 14 – B 1 |
| N17  | Oil pressure switch<br>engine                                          |          |

**Components****Section 700-06-00**

|      | <b>Location</b>                                                                     | <b>Page/coordinates</b> |
|------|-------------------------------------------------------------------------------------|-------------------------|
| N21  | Engine compartment switch<br>Location . . . . .                                     | 6 – E 4                 |
| N49  | Hazard flasher switch<br>right-hand-drive, Location . . . . .                       | 35 – A 4                |
| N49  | Hazard flasher switch<br>left-hand-drive, Location . . . . .                        | 36 – C 5                |
| N54  | Horn switch<br>in steering wheel                                                    |                         |
| N63  | Parking brake switch<br>Location . . . . .                                          | 24 – E 2                |
| N81  | Clutch pedal position switch<br>right-hand-drive, Location . . . . .                | 41 – B 5                |
| N81  | Clutch pedal position switch<br>Location . . . . .                                  | 41 – B 5                |
| N81  | Clutch pedal position switch<br>left-hand-drive, Location . . . . .                 | 42 – B 4                |
| N81  | Clutch pedal position switch<br>Location . . . . .                                  | 42 – B 4                |
| N82  | Brake pedal position switch<br>Location . . . . .                                   | 41 – C 5                |
| N82  | Brake pedal position switch<br>right-hand-drive, Location . . . . .                 | 41 – C 5                |
| N82  | Brake pedal position switch<br>left-hand-drive, Location . . . . .                  | 42 – C 5                |
| N82  | Brake pedal position switch<br>Location . . . . .                                   | 42 – C 5                |
| N93  | Gearshift lever unit<br>right-hand-drive, Location . . . . .                        | 35 – B 1                |
| N93  | Gearshift lever unit<br>left-hand-drive, Location . . . . .                         | 36 – B 1                |
| N96  | Power steering pressure switch<br>engine compartment                                |                         |
| N104 | Wiper/washer switch<br>Location . . . . .                                           | 43 – C 5                |
| N120 | Headlamp switch<br>right-hand-drive, Location . . . . .                             | 35 – F 4                |
| N120 | Headlamp switch<br>left-hand-drive, Location . . . . .                              | 36 – A 5                |
| N124 | Safety belt buckle switch<br>under driver's seat                                    |                         |
| N126 | A/C high-pressure switch<br>engine compartment                                      |                         |
| N152 | Neutral position switch<br>manual transmission                                      |                         |
| N155 | Liftgate/luggage compartment lid release switch<br>5-door model, Location . . . . . | 46 – D 3                |

**Components****Section 700-06-00****Location****Page/coordinates**

|      |                                                                                         |          |
|------|-----------------------------------------------------------------------------------------|----------|
| N155 | Liftgate/luggage compartment lid release switch<br>4-door model, Location . . . . .     | 47 – E 3 |
| N201 | Speed control switch<br>in steering wheel                                               |          |
| N214 | Radio remote control switch<br>Location . . . . .                                       | 43 – A 2 |
| N230 | Roof opening panel control switch<br>left-hand-drive, 4-door model, Location . . . . .  | 25 – E 3 |
| N230 | Roof opening panel control switch<br>right-hand-drive, 4-door model, Location . . . . . | 26 – E 2 |
| N230 | Roof opening panel control switch<br>left-hand-drive, 5-door model, Location . . . . .  | 27 – E 2 |
| N230 | Roof opening panel control switch<br>right-hand-drive, 5-door model, Location . . . . . | 28 – E 2 |
| N242 | Seat control switch, driver<br>under driver's seat                                      |          |
| N246 | A/C low-pressure switch<br>Location . . . . .                                           | 5 – D 2  |
| N249 | Brake pressure switch<br>engine compartment, LH side                                    |          |
| N278 | Ignition switch<br>Location . . . . .                                                   | 43 – C 1 |
| N279 | Power mirror fold switch<br>in driver's door                                            |          |
| N282 | Steering column multifunction switch<br>Location . . . . .                              | 43 – A 3 |
| N297 | Window control switch, passenger side front<br>Location . . . . .                       | 44 – E 5 |
| N298 | Window control switch, LH rear<br>Location . . . . .                                    | 45 – C 5 |
| N299 | Window control switch, RH rear<br>Location . . . . .                                    | 45 – C 5 |
| N316 | Inertia Fuel Shutoff (IFS) switch<br>left-hand-drive, Location . . . . .                | 21 – B 3 |
| N316 | Inertia Fuel Shutoff (IFS) switch<br>right-hand-drive, Location . . . . .               | 22 – E 3 |
| N318 | Stop lamp switch<br>left-hand-drive, Location . . . . .                                 | 41 – C 4 |
| N318 | Stop lamp switch<br>right-hand-drive, Location . . . . .                                | 42 – C 4 |
| N346 | Electronic Stability Program (ESP) switch<br>right-hand-drive, Location . . . . .       | 35 – C 1 |
| N346 | Electronic Stability Program (ESP) switch<br>left-hand-drive, Location . . . . .        | 36 – C 1 |
| N359 | Parking aid switch, front<br>behind dash panel                                          |          |



**Components****Section 700-06-00**

|      | <b>Location</b>                                                         | <b>Page/coordinates</b> |
|------|-------------------------------------------------------------------------|-------------------------|
| N388 | Window control/power mirror adjust switch, driver                       |                         |
|      | Location . . . . .                                                      | 44 – E 5                |
| N394 | Reversing lamp switch                                                   |                         |
|      | 1.8/2.0L Duratec-HE (MI4), manual transmission, Location . . . . .      | 12 – E 3                |
| N394 | Reversing lamp switch                                                   |                         |
|      | 2.0L Duratorq-TDCi (DW) Diesel, manual transmission, Location . . . . . | 14 – F 3                |
| N397 | Start inhibit/reversing lamp switch                                     |                         |
|      | automatic transmission                                                  |                         |
| O1   | Battery                                                                 |                         |
|      | left-hand-drive, Location . . . . .                                     | 8 – E 4                 |
| O1   | Battery                                                                 |                         |
|      | right-hand-drive, Location . . . . .                                    | 10 – E 4                |
| O5   | Generator                                                               |                         |
|      | Location . . . . .                                                      | 12 – A 2                |
| O5   | Generator                                                               |                         |
|      | Location . . . . .                                                      | 12 – A 3                |
| O5   | Generator                                                               |                         |
|      | Location . . . . .                                                      | 14 – B 3                |
| O5   | Generator                                                               |                         |
|      | Location . . . . .                                                      | 14 – A 3                |
| O5   | Generator                                                               |                         |
|      | engine                                                                  |                         |
| P13  | Clock spring                                                            |                         |
|      | Location . . . . .                                                      | 43 – B 4                |
| P16  | Glow plug 1                                                             |                         |
|      | engine                                                                  |                         |
| P17  | Glow plug 2                                                             |                         |
|      | engine                                                                  |                         |
| P18  | Glow plug 3                                                             |                         |
|      | engine                                                                  |                         |
| P19  | Glow plug 4                                                             |                         |
|      | engine                                                                  |                         |
| P91  | Central Junction Box (CJB)                                              |                         |
|      | left-hand-drive, Location . . . . .                                     | 39 – C 1                |
| P91  | Central Junction Box (CJB)                                              |                         |
|      | right-hand-drive, Location . . . . .                                    | 40 – B 1                |
| P93  | Battery Junction Box (BJB)                                              |                         |
|      | left-hand-drive, Location . . . . .                                     | 8 – F 4                 |
| P93  | Battery Junction Box (BJB)                                              |                         |
|      | right-hand-drive, Location . . . . .                                    | 10 – F 4                |
| P136 | Spark plugs                                                             |                         |
|      | engine                                                                  |                         |
| R19  | Rear window heater                                                      |                         |
|      | Location . . . . .                                                      | 46 – B 5                |
| R19  | Rear window heater                                                      |                         |
|      | Location . . . . .                                                      | 46 – D 5                |

**Components****Section 700-06-00****Location****Page/coordinates**

|     |                                           |          |
|-----|-------------------------------------------|----------|
| R19 | Rear window heater                        |          |
|     | Location .....                            | 47 – A 4 |
| R19 | Rear window heater                        |          |
|     | Location .....                            | 47 – C 5 |
| R21 | Blower motor resistor                     |          |
|     | right-hand-drive, Location .....          | 37 – A 4 |
| R21 | Blower motor resistor                     |          |
|     | left-hand-drive, Location .....           | 38 – A 4 |
| R32 | Fuel heater                               |          |
|     | engine compartment                        |          |
| R42 | Cigar lighter, front                      |          |
|     | Location .....                            | 24 – C 3 |
| T6  | Ignition coil, cylinder 1                 |          |
|     | engine                                    |          |
| T7  | Ignition coil, cylinder 2                 |          |
|     | engine                                    |          |
| T8  | Ignition coil, cylinder 3                 |          |
|     | engine                                    |          |
| T9  | Ignition coil, cylinder 4                 |          |
|     | engine                                    |          |
| U1  | Ignition transformer capacitor            |          |
|     | engine                                    |          |
| Y1  | Evaporative emission canister purge valve |          |
|     | engine compartment                        |          |
| Y2  | Exhaust Gas Recirculation (EGR) valve     |          |
|     | Location .....                            | 14 – F 5 |
| Y13 | Idle speed control valve                  |          |
|     | engine                                    |          |
| Y16 | A/C Compressor clutch                     |          |
|     | Location .....                            | 13 – E 1 |
| Y16 | A/C Compressor clutch                     |          |
|     | Location .....                            | 14 – B 2 |
| Y47 | Fuel pressure solenoid valve              |          |
|     | Location .....                            | 14 – F 3 |
| Y57 | Swirl control solenoid valve              |          |
|     | Location .....                            | 12 – E 4 |
| Y57 | Swirl control solenoid valve              |          |
|     | engine                                    |          |
| Y70 | Speaker 1, LH rear door                   |          |
|     | left-hand-drive, Location .....           | 45 – E 2 |
| Y70 | Speaker 1, LH rear door                   |          |
|     | right-hand-drive, Location .....          | 45 – E 2 |
| Y72 | Speaker 1, RH rear door                   |          |
|     | left-hand-drive, Location .....           | 45 – E 1 |
| Y72 | Speaker 1, RH rear door                   |          |
|     | right-hand-drive, Location .....          | 45 – E 1 |

**Components****Section 700-06-00**

|      | <b>Location</b>                   | <b>Page/coordinates</b> |
|------|-----------------------------------|-------------------------|
| Y101 | Speaker 1, LH front               |                         |
|      | left-hand-drive, Location .....   | 44 – B 2                |
| Y101 | Speaker 1, LH front               |                         |
|      | right-hand-drive, Location .....  | 44 – B 2                |
| Y102 | Speaker 2, LH front               |                         |
|      | left-hand-drive, Location .....   | 44 – B 5                |
| Y102 | Speaker 2, LH front               |                         |
|      | right-hand-drive, Location .....  | 44 – B 5                |
| Y103 | Speaker 1, RH front               |                         |
|      | left-hand-drive, Location .....   | 44 – B 1                |
| Y103 | Speaker 1, RH front               |                         |
|      | right-hand-drive, Location .....  | 44 – B 1                |
| Y104 | Speaker 2, RH front               |                         |
|      | left-hand-drive, Location .....   | 44 – B 4                |
| Y104 | Speaker 2, RH front               |                         |
|      | right-hand-drive, Location .....  | 44 – B 4                |
| Y108 | Fuel injector 1                   |                         |
|      | Location .....                    | 12 – B 5                |
| Y108 | Fuel injector 1                   |                         |
|      | Location .....                    | 14 – E 5                |
| Y108 | Fuel injector 1                   |                         |
|      | engine                            |                         |
| Y109 | Fuel injector 2                   |                         |
|      | Location .....                    | 12 – C 5                |
| Y109 | Fuel injector 2                   |                         |
|      | Location .....                    | 14 – D 5                |
| Y109 | Fuel injector 2                   |                         |
|      | engine                            |                         |
| Y110 | Fuel injector 3                   |                         |
|      | Location .....                    | 12 – C 5                |
| Y110 | Fuel injector 3                   |                         |
|      | Location .....                    | 14 – D 5                |
| Y110 | Fuel injector 3                   |                         |
|      | engine                            |                         |
| Y111 | Fuel injector 4                   |                         |
|      | Location .....                    | 12 – D 5                |
| Y111 | Fuel injector 4                   |                         |
|      | Location .....                    | 14 – C 5                |
| Y111 | Fuel injector 4                   |                         |
|      | engine                            |                         |
| Y165 | Fuel metering valve               |                         |
|      | engine                            |                         |
| Y185 | Intercooler bypass solenoid valve |                         |
|      | Location .....                    | 14 – A 2                |
| Y191 | Oil control valve                 |                         |
|      | engine                            |                         |

**Components****Section 700-06-00****Location****Page/coordinates**

|      |                                                    |          |
|------|----------------------------------------------------|----------|
| Y218 | Inlet air control valve solenoid<br>Location ..... | 12 – E 5 |
| Y218 | Inlet air control valve solenoid<br>engine         |          |

## Connectors

## Section 700-06-00

|      | Location                                                 | Page/coordinates |
|------|----------------------------------------------------------|------------------|
| C30  | right-hand-drive, Location                               | 18 – B 5         |
| C30  | left-hand-drive, Location                                | 19 – E 4         |
| C31  | left-hand-drive, Location                                | 18 – B 5         |
| C31  | right-hand-drive, Location                               | 19 – E 4         |
| C41  | left-hand-drive, Location                                | 21 – B 4         |
| C41  | right-hand-drive, Location                               | 22 – E 4         |
| C43  | left-hand-drive, Location                                | 20 – E 4         |
| C43  | right-hand-drive, Location                               | 23 – B 4         |
| C44  | left-hand-drive, Location                                | 21 – B 4         |
| C44  | right-hand-drive, Location                               | 22 – E 4         |
| C45  | Location                                                 | 19 – D 5         |
| C46  | Location                                                 | 18 – C 5         |
| C47  | left-hand-drive, Location                                | 21 – B 4         |
| C47  | right-hand-drive, Location                               | 22 – E 4         |
| C49  | left-hand-drive, Location                                | 20 – E 4         |
| C49  | right-hand-drive, Location                               | 23 – B 4         |
| C51  | left-hand-drive, Location                                | 20 – E 4         |
| C51  | right-hand-drive, Location                               | 23 – B 4         |
| C52  | Location                                                 | 19 – D 5         |
| C54  | Location                                                 | 18 – C 5         |
| C57  | under parcel shelf                                       |                  |
| C58  | 5-door model, Location                                   | 31 – E 4         |
| C58  | 4-door model, Location                                   | 32 – A 3         |
| C71  | Location                                                 | 6 – E 2          |
| C72  | Location                                                 | 6 – E 1          |
| C73  | Location                                                 | 6 – E 1          |
| C75  | engine compartment, front, LH side                       |                  |
| C76  | engine compartment, front, LH side                       |                  |
| C77  | Location                                                 | 6 – E 1          |
| C78  | engine compartment, front                                |                  |
| C80  | Location                                                 | 6 – E 1          |
| C90  | manual transmission, Location                            | 12 – F 3         |
| C90  | 1.8/2.0L Duratec-HE (MI4), manual transmission, Location | 12 – F 3         |
| C90  | Location                                                 | 14 – E 3         |
| C90  | 2.0L Duratorq-TDCi (DW) Diesel, Location                 | 14 – E 3         |
| C90  | Location                                                 | 50 – E 5         |
| C90  | in Battery Junction Box (BJB)                            |                  |
| C95  | Location                                                 | 49 – E 5         |
| C96  | Location                                                 | 48 – E 5         |
| C98  | Location                                                 | 48 – B 5         |
| C99  | Location                                                 | 49 – D 5         |
| C100 | Location                                                 | 48 – D 5         |
| C102 | Location                                                 | 48 – C 1         |
| C103 | Location                                                 | 48 – A 2         |
| C107 | 5-door model, Location                                   | 46 – F 4         |
| C107 | rear window                                              |                  |

**Connectors****Section 700-06-00**

|      | <b>Location</b>                           | <b>Page/coordinates</b> |
|------|-------------------------------------------|-------------------------|
| C110 | 1.8/2.0L Duratec-HE (MI4), Location ..... | 12 – D 1                |
| C110 | except 1.8/2.0L Duratec-HE (MI4), engine  |                         |
| C111 | left-hand-drive, Location .....           | 20 – E 3                |
| C111 | right-hand-drive, Location .....          | 23 – B 3                |
| C112 | left-hand-drive, Location .....           | 20 – B 1                |
| C112 | right-hand-drive, Location .....          | 23 – B 2                |
| C113 | left-hand-drive, Location .....           | 20 – D 5                |
| C113 | right-hand-drive, Location .....          | 23 – D 5                |
| C116 | engine compartment                        |                         |
| C117 | engine compartment                        |                         |
| C118 | left-hand-drive, Location .....           | 21 – B 3                |
| C118 | right-hand-drive, Location .....          | 22 – E 3                |
| C120 | Location .....                            | 14 – C 2                |
| C120 | engine                                    |                         |
| C121 | Location .....                            | 44 – E 5                |
| C122 | Location .....                            | 45 – C 5                |
| C148 | Location .....                            | 44 – E 3                |
| C149 | Location .....                            | 44 – E 3                |
| C150 | Location .....                            | 45 – E 3                |
| C151 | Location .....                            | 45 – E 3                |
| C152 | 5-door model, Location .....              | 29 – A 3                |
| C152 | 4-door model, Location .....              | 30 – B 3                |
| C155 | centre console                            |                         |
| C161 | engine                                    |                         |
| C162 | engine                                    |                         |
| C163 | engine                                    |                         |
| C164 | engine                                    |                         |
| C169 | engine                                    |                         |
| C170 | engine compartment                        |                         |
| C171 | generator                                 |                         |
| C173 | engine                                    |                         |
| C174 | engine                                    |                         |
| C175 | engine                                    |                         |
| C176 | engine                                    |                         |
| C177 | in exhaust system                         |                         |
| C178 | in exhaust system                         |                         |
| C179 | generator                                 |                         |
| C182 | automatic transmission                    |                         |
| C183 | automatic transmission                    |                         |
| C184 | automatic transmission                    |                         |
| C185 | automatic transmission                    |                         |
| C189 | on starter                                |                         |
| C200 | right-hand-drive, Location .....          | 35 – F 3                |
| C200 | left-hand-drive, Location .....           | 36 – B 4                |
| C223 | in driver's door                          |                         |
| C224 | centre console                            |                         |

**Connectors****Section 700-06-00**

|      | <b>Location</b>                         | <b>Page/coordinates</b> |
|------|-----------------------------------------|-------------------------|
| C234 | under rear seats                        |                         |
| C281 | Location . . . . .                      | 3 – C 5                 |
| C281 | Petrol engines, Location . . . . .      | 3 – C 5                 |
| C281 | Location . . . . .                      | 4 – A 3                 |
| C281 | Diesel engines, Location . . . . .      | 4 – A 3                 |
| C300 | Location . . . . .                      | 15 – E 5                |
| C302 | Location . . . . .                      | 6 – C 2                 |
| C304 | front bumper                            |                         |
| C320 | right-hand-drive, Location . . . . .    | 35 – F 4                |
| C320 | left-hand-drive, Location . . . . .     | 36 – A 5                |
| C331 | under driver's seat                     |                         |
| C332 | under driver's seat                     |                         |
| C335 | under driver's seat                     |                         |
| C336 | under driver's seat                     |                         |
| C340 | under passenger's seat                  |                         |
| C341 | under passenger's seat                  |                         |
| C342 | under passenger's seat                  |                         |
| C346 | under passenger's seat                  |                         |
| C378 | behind dash panel                       |                         |
| C380 | behind dash panel                       |                         |
| C381 | right-hand-drive, Location . . . . .    | 35 – C 2                |
| C381 | left-hand-drive, Location . . . . .     | 36 – C 2                |
| C383 | right-hand-drive, Location . . . . .    | 35 – B 1                |
| C383 | left-hand-drive, Location . . . . .     | 36 – B 1                |
| C384 | manual transmission, Location . . . . . | 12 – E 5                |
| C391 | Location . . . . .                      | 43 – C 4                |
| C410 | behind dash panel                       |                         |
| C414 | engine compartment                      |                         |
| C417 | Location . . . . .                      | 14 – E 2                |
| C418 | Location . . . . .                      | 14 – E 2                |
| C419 | Location . . . . .                      | 14 – E 2                |
| C425 | right-hand-drive, Location . . . . .    | 35 – B 5                |
| C425 | left-hand-drive, Location . . . . .     | 36 – F 4                |
| C426 | Location . . . . .                      | 24 – E 5                |
| C426 | Location . . . . .                      | 24 – A 2                |
| C427 | right-hand-drive, Location . . . . .    | 18 – D 5                |
| C427 | left-hand-drive, Location . . . . .     | 19 – C 5                |
| C428 | left-hand-drive, Location . . . . .     | 18 – D 5                |
| C428 | right-hand-drive, Location . . . . .    | 19 – C 5                |
| C429 | Location . . . . .                      | 24 – E 5                |
| C429 | Location . . . . .                      | 24 – A 2                |
| C430 | Location . . . . .                      | 2 – B 2                 |
| C431 | Location . . . . .                      | 42 – B 5                |
| C434 | Location . . . . .                      | 2 – E 3                 |
| C437 | Location . . . . .                      | 43 – A 2                |
| C438 | automatic transmission                  |                         |

**Connectors****Section 700-06-00****Location****Page/coordinates**

|      |                                                    |          |
|------|----------------------------------------------------|----------|
| C439 | automatic transmission                             |          |
| C440 | under passenger's seat                             |          |
| C441 | Location . . . . .                                 | 43 – C 5 |
| C442 | behind dash panel                                  |          |
| C443 | behind dash panel                                  |          |
| C444 | right-hand-drive, Location . . . . .               | 41 – C 3 |
| C444 | left-hand-drive, Location . . . . .                | 42 – C 4 |
| C446 | engine compartment, LH side                        |          |
| C447 | behind dash panel                                  |          |
| C448 | behind dash panel                                  |          |
| C449 | behind dash panel                                  |          |
| C451 | behind dash panel                                  |          |
| C454 | right-hand-drive, Location . . . . .               | 35 – A 4 |
| C454 | left-hand-drive, Location . . . . .                | 36 – C 5 |
| C456 | Location . . . . .                                 | 43 – C 1 |
| C459 | Location . . . . .                                 | 43 – A 3 |
| C461 | Location . . . . .                                 | 31 – D 5 |
| C462 | Location . . . . .                                 | 29 – C 5 |
| C463 | 5-door model, Location . . . . .                   | 31 – B 5 |
| C464 | 5-door model, Location . . . . .                   | 29 – D 5 |
| C464 | 4-door model, Location . . . . .                   | 30 – F 5 |
| C470 | right-hand-drive, Location . . . . .               | 37 – A 4 |
| C470 | left-hand-drive, Location . . . . .                | 38 – A 4 |
| C472 | Location . . . . .                                 | 31 – B 5 |
| C473 | Location . . . . .                                 | 29 – D 5 |
| C476 | Location . . . . .                                 | 32 – A 4 |
| C477 | Location . . . . .                                 | 30 – F 5 |
| C478 | in glove compartment                               |          |
| C484 | Location . . . . .                                 | 44 – E 5 |
| C485 | Location . . . . .                                 | 45 – C 5 |
| C486 | Location . . . . .                                 | 44 – E 5 |
| C488 | Location . . . . .                                 | 44 – E 5 |
| C489 | Location . . . . .                                 | 44 – E 5 |
| C494 | 5-door model, Location . . . . .                   | 46 – E 3 |
| C494 | 4-door model, Location . . . . .                   | 47 – E 5 |
| C495 | 5-door model, Location . . . . .                   | 46 – E 3 |
| C495 | 4-door model, Location . . . . .                   | 47 – E 5 |
| C496 | 5-door model, Location . . . . .                   | 46 – C 1 |
| C496 | 4-door model, Location . . . . .                   | 47 – D 5 |
| C497 | 5-door model, Location . . . . .                   | 46 – C 1 |
| C497 | 4-door model, Location . . . . .                   | 47 – D 5 |
| C521 | engine                                             |          |
| C522 | left-hand-drive, 4-door model, Location . . . . .  | 25 – E 3 |
| C522 | right-hand-drive, 4-door model, Location . . . . . | 26 – E 3 |
| C522 | left-hand-drive, 5-door model, Location . . . . .  | 27 – E 3 |
| C522 | right-hand-drive, 5-door model, Location . . . . . | 28 – E 3 |



**Connectors****Section 700-06-00**

|      | <b>Location</b>                          | <b>Page/coordinates</b> |
|------|------------------------------------------|-------------------------|
| C523 | manual transmission, Location            | 12 – E 4                |
| C524 | Location                                 | 13 – B 1                |
| C525 | left-hand-drive, 4-door model, Location  | 25 – F 3                |
| C525 | right-hand-drive, 4-door model, Location | 26 – F 3                |
| C525 | left-hand-drive, 5-door model, Location  | 27 – F 3                |
| C525 | right-hand-drive, 5-door model, Location | 28 – F 3                |
| C527 | engine                                   |                         |
| C528 | engine                                   |                         |
| C529 | engine                                   |                         |
| C532 | right-hand-drive, Location               | 37 – D 5                |
| C532 | left-hand-drive, Location                | 38 – D 5                |
| C533 | right-hand-drive, Location               | 37 – B 4                |
| C533 | left-hand-drive, Location                | 38 – C 3                |
| C534 | right-hand-drive, Location               | 37 – C 5                |
| C534 | left-hand-drive, Location                | 38 – C 5                |
| C536 | air conditioning housing                 |                         |
| C537 | right-hand-drive, Location               | 37 – F 1                |
| C537 | left-hand-drive, Location                | 38 – C 4                |
| C538 | right-hand-drive, Location               | 37 – C 4                |
| C538 | left-hand-drive, Location                | 38 – F 2                |
| C539 | right-hand-drive, Location               | 35 – A 3                |
| C539 | left-hand-drive, Location                | 36 – A 3                |
| C540 | right-hand-drive, Location               | 35 – A 3                |
| C540 | left-hand-drive, Location                | 36 – A 3                |
| C541 | right-hand-drive, Location               | 37 – C 3                |
| C541 | left-hand-drive, Location                | 38 – F 2                |
| C542 | air conditioning housing                 |                         |
| C543 | right-hand-drive, Location               | 35 – D 5                |
| C543 | air conditioning housing                 |                         |
| C544 | air conditioning housing                 |                         |
| C546 | engine                                   |                         |
| C547 | engine                                   |                         |
| C553 | right-hand-drive, Location               | 37 – D 2                |
| C553 | left-hand-drive, Location                | 38 – D 2                |
| C554 | dash panel                               |                         |
| C556 | Location                                 | 50 – C 1                |
| C586 | Location                                 | 14 – C 5                |
| C589 | Location                                 | 13 – A 5                |
| C593 | manual transmission, Location            | 12 – A 1                |
| C596 | Location                                 | 14 – E 4                |
| C599 | Location                                 | 13 – B 5                |
| C600 | Location                                 | 13 – B 5                |
| C601 | Location                                 | 13 – B 5                |
| C608 | Location                                 | 2 – A 2                 |
| C610 | in luggage compartment, RH side          |                         |
| C629 | Location                                 | 6 – D 2                 |

**Connectors****Section 700-06-00****Location****Page/coordinates**

|      |                                               |          |
|------|-----------------------------------------------|----------|
| C630 | front bumper                                  |          |
| C632 | Location .....                                | 2 – E 1  |
| C633 | Location .....                                | 2 – D 2  |
| C635 | Location .....                                | 2 – B 5  |
| C638 | in exhaust system                             |          |
| C639 | in exhaust system                             |          |
| C640 | engine                                        |          |
| C642 | engine                                        |          |
| C643 | Location .....                                | 13 – D 1 |
| C644 | engine                                        |          |
| C645 | engine                                        |          |
| C646 | engine                                        |          |
| C648 | right-hand-drive, Location .....              | 41 – D 1 |
| C648 | left-hand-drive, Location .....               | 42 – D 1 |
| C655 | Location .....                                | 14 – B 4 |
| C680 | engine compartment                            |          |
| C681 | engine compartment                            |          |
| C682 | engine compartment                            |          |
| C690 | Location .....                                | 13 – B 5 |
| C692 | Location .....                                | 5 – D 2  |
| C700 | 5-door model, Location .....                  | 29 – E 3 |
| C700 | 4-door model, in luggage compartment, RH side |          |
| C710 | D-pillar, driver side                         |          |
| C711 | D-pillar, passenger side                      |          |
| C717 | right-hand-drive, Location .....              | 35 – C 1 |
| C717 | left-hand-drive, Location .....               | 36 – C 1 |
| C722 | Location .....                                | 44 – E 2 |
| C723 | Location .....                                | 44 – E 1 |
| C727 | Location .....                                | 44 – E 2 |
| C728 | Location .....                                | 44 – E 2 |
| C729 | Location .....                                | 44 – E 2 |
| C730 | Location .....                                | 45 – B 2 |
| C731 | Location .....                                | 45 – B 2 |
| C732 | Location .....                                | 33 – C 2 |
| C741 | in driver's door                              |          |
| C755 | under driver's seat                           |          |
| C756 | under driver's seat                           |          |
| C757 | under driver's seat                           |          |
| C758 | under driver's seat                           |          |
| C759 | under driver's seat                           |          |
| C760 | under driver's seat                           |          |
| C761 | under driver's seat                           |          |
| C771 | manual transmission, Location .....           | 12 – B 5 |
| C771 | Location .....                                | 14 – E 5 |
| C772 | manual transmission, Location .....           | 12 – C 5 |
| C772 | Location .....                                | 14 – D 5 |

## Connectors

## Section 700-06-00

|      | Location                             | Page/coordinates |
|------|--------------------------------------|------------------|
| C773 | manual transmission, Location .....  | 12 – C 5         |
| C773 | Location .....                       | 14 – D 5         |
| C774 | manual transmission, Location .....  | 12 – D 5         |
| C774 | Location .....                       | 14 – C 5         |
| C776 | right-hand-drive, Location .....     | 35 – B 2         |
| C776 | left-hand-drive, Location .....      | 36 – B 2         |
| C778 | Location .....                       | 14 – B 5         |
| C779 | Location .....                       | 13 – A 4         |
| C779 | Location .....                       | 14 – E 3         |
| C782 | Location .....                       | 44 – E 2         |
| C783 | Location .....                       | 44 – E 2         |
| C784 | Location .....                       | 43 – A 3         |
| C785 | Location .....                       | 14 – C 5         |
| C787 | liftgate                             |                  |
| C789 | air conditioning housing             |                  |
| C790 | engine                               |                  |
| C792 | Location .....                       | 5 – A 2          |
| C793 | Location .....                       | 5 – A 2          |
| C794 | Location .....                       | 5 – B 2          |
| C795 | engine                               |                  |
| C798 | 5-door model, Location .....         | 46 – D 1         |
| C798 | 4-door model, Location .....         | 47 – F 2         |
| C799 | 5-door model, Location .....         | 46 – D 3         |
| C799 | 4-door model, Location .....         | 47 – E 3         |
| C800 | engine                               |                  |
| C801 | Location .....                       | 43 – A 3         |
| C802 | engine                               |                  |
| C803 | manual transmission, Location .....  | 12 – D 5         |
| C804 | engine                               |                  |
| C805 | engine                               |                  |
| C806 | engine                               |                  |
| C807 | Location .....                       | 44 – B 4         |
| C809 | right-hand-drive, Location .....     | 35 – E 5         |
| C809 | left-hand-drive, Location .....      | 36 – B 5         |
| C810 | left-hand-drive, Location .....      | 8 – B 5          |
| C810 | right-hand-drive, Location .....     | 9 – F 5          |
| C811 | 5-door model, Location .....         | 29 – B 4         |
| C811 | 4-door model, in luggage compartment |                  |
| C814 | Location .....                       | 17 – F 3         |
| C815 | Location .....                       | 16 – A 3         |
| C816 | Location .....                       | 19 – A 4         |
| C817 | Location .....                       | 34 – D 2         |
| C818 | Location .....                       | 16 – B 4         |
| C819 | Location .....                       | 17 – F 4         |
| C820 | 5-door model, Location .....         | 29 – E 4         |
| C820 | 4-door model, Location .....         | 30 – D 5         |

**Connectors****Section 700-06-00**

|      | <b>Location</b>                                    | <b>Page/coordinates</b> |
|------|----------------------------------------------------|-------------------------|
| C821 | Location . . . . .                                 | 44 – B 4                |
| C823 | automatic transmission                             |                         |
| C824 | right-hand-drive, Location . . . . .               | 41 – C 5                |
| C824 | left-hand-drive, Location . . . . .                | 42 – C 5                |
| C825 | right-hand-drive, Location . . . . .               | 41 – B 5                |
| C825 | left-hand-drive, Location . . . . .                | 42 – B 4                |
| C826 | Location . . . . .                                 | 19 – E 1                |
| C827 | engine compartment                                 |                         |
| C828 | left-hand-drive, Location . . . . .                | 7 – E 4                 |
| C828 | right-hand-drive, Location . . . . .               | 9 – E 5                 |
| C830 | Location . . . . .                                 | 11 – B 2                |
| C831 | Location . . . . .                                 | 11 – B 2                |
| C833 | Location . . . . .                                 | 14 – F 5                |
| C836 | left-hand-drive, Location . . . . .                | 8 – F 3                 |
| C836 | right-hand-drive, Location . . . . .               | 10 – F 3                |
| C837 | left-hand-drive, Location . . . . .                | 7 – A 3                 |
| C837 | right-hand-drive, Location . . . . .               | 9 – A 3                 |
| C838 | behind dash panel                                  |                         |
| C841 | in LH front footwell                               |                         |
| C842 | front of vehicle, LH side                          |                         |
| C843 | front of vehicle, RH side                          |                         |
| C844 | left-hand-drive, 4-door model, Location . . . . .  | 25 – B 5                |
| C844 | right-hand-drive, 4-door model, Location . . . . . | 26 – B 4                |
| C844 | left-hand-drive, 5-door model, Location . . . . .  | 27 – B 5                |
| C844 | right-hand-drive, 5-door model, Location . . . . . | 28 – B 5                |
| C845 | left-hand-drive, 4-door model, Location . . . . .  | 25 – A 5                |
| C845 | right-hand-drive, 4-door model, Location . . . . . | 26 – A 4                |
| C845 | left-hand-drive, 5-door model, Location . . . . .  | 27 – A 4                |
| C845 | right-hand-drive, 5-door model, Location . . . . . | 28 – A 4                |
| C846 | right-hand-drive, Location . . . . .               | 35 – A 5                |
| C846 | left-hand-drive, Location . . . . .                | 36 – F 3                |
| C848 | left-hand-drive, Location . . . . .                | 7 – F 3                 |
| C848 | right-hand-drive, Location . . . . .               | 9 – E 4                 |
| C849 | right-hand-drive, Location . . . . .               | 35 – F 2                |
| C849 | left-hand-drive, Location . . . . .                | 36 – A 4                |
| C854 | engine                                             |                         |
| C855 | engine                                             |                         |
| C856 | engine                                             |                         |
| C857 | engine                                             |                         |
| C858 | engine                                             |                         |
| C859 | Location . . . . .                                 | 14 – F 3                |
| C860 | engine                                             |                         |
| C864 | 1.8/2.0L Duratec-HE (MI4), Location . . . . .      | 12 – E 3                |
| C864 | 2.0L Duratorq-TDCi (DW) Diesel, Location . . . . . | 14 – F 3                |
| C865 | manual transmission                                |                         |
| C866 | manual transmission                                |                         |

## Connectors

## Section 700-06-00

|      | Location                                                 | Page/coordinates |
|------|----------------------------------------------------------|------------------|
| C867 | 1.8/2.0L Duratec-HE (MI4), Location                      | 12 – E 3         |
| C867 | 2.0L Duratorq-TDCi (DW) Diesel, Location                 | 14 – F 3         |
| C870 | manual transmission, Location                            | 12 – A 2         |
| C870 | 1.8/2.0L Duratec-HE (MI4), manual transmission, Location | 12 – A 2         |
| C870 | Location                                                 | 14 – B 3         |
| C870 | 2.0L Duratorq-TDCi (DW) Diesel, Location                 | 14 – B 3         |
| C870 | generator                                                |                  |
| C871 | Location                                                 | 12 – A 3         |
| C871 | manual transmission, Location                            | 12 – A 3         |
| C871 | 1.8/2.0L Duratec-HE (MI4), manual transmission, Location | 12 – A 3         |
| C871 | Location                                                 | 14 – A 3         |
| C871 | 2.0L Duratorq-TDCi (DW) Diesel, Location                 | 14 – A 3         |
| C871 | generator                                                |                  |
| C882 | engine compartment                                       |                  |
| C890 | left-hand-drive, 4-door model, Location                  | 25 – E 4         |
| C890 | left-hand-drive, 4-door model, Location                  | 25 – D 2         |
| C890 | right-hand-drive, 4-door model, Location                 | 26 – D 1         |
| C890 | right-hand-drive, 4-door model, Location                 | 26 – D 5         |
| C890 | left-hand-drive, 5-door model, Location                  | 27 – D 1         |
| C890 | left-hand-drive, 5-door model, Location                  | 27 – D 5         |
| C890 | right-hand-drive, 5-door model, Location                 | 28 – D 1         |
| C890 | right-hand-drive, 5-door model, Location                 | 28 – D 5         |
| C891 | left-hand-drive, 4-door model, Location                  | 25 – E 4         |
| C891 | right-hand-drive, 4-door model, Location                 | 26 – D 5         |
| C891 | left-hand-drive, 5-door model, Location                  | 27 – D 5         |
| C891 | right-hand-drive, 5-door model, Location                 | 28 – D 5         |
| C892 | roof, rear                                               |                  |
| C893 | left-hand-drive, 4-door model, Location                  | 25 – D 1         |
| C893 | right-hand-drive, 4-door model, Location                 | 26 – D 1         |
| C893 | left-hand-drive, 5-door model, Location                  | 27 – D 1         |
| C893 | right-hand-drive, 5-door model, Location                 | 28 – D 1         |
| C895 | manual transmission, Location                            | 12 – B 1         |
| C895 | automatic transmission, engine                           |                  |
| C896 | Location                                                 | 43 – B 5         |
| C897 | Location                                                 | 6 – E 4          |
| C900 | engine compartment                                       |                  |
| C903 | Location                                                 | 13 – E 4         |
| C904 | manual transmission, Location                            | 12 – B 3         |
| C904 | automatic transmission, engine                           |                  |
| C906 | Location                                                 | 15 – D 5         |
| C911 | Location                                                 | 24 – C 3         |
| C912 | Location                                                 | 24 – C 3         |
| C914 | engine                                                   |                  |
| C915 | engine                                                   |                  |
| C916 | engine                                                   |                  |
| C917 | engine                                                   |                  |

**Connectors****Section 700-06-00****Location****Page/coordinates**

|       |                                                                |          |
|-------|----------------------------------------------------------------|----------|
| C920  | in steering wheel                                              |          |
| C921  | in steering wheel                                              |          |
| C922  | Location .....                                                 | 43 – B 4 |
| C923  | in steering wheel                                              |          |
| C924  | engine                                                         |          |
| C925  | engine                                                         |          |
| C926  | Location .....                                                 | 15 – E 2 |
| C928  | automatic transmission                                         |          |
| C930  | Location .....                                                 | 24 – E 2 |
| C933  | left-hand-drive, Location .....                                | 21 – B 3 |
| C933  | right-hand-drive, Location .....                               | 22 – E 3 |
| C934  | Location .....                                                 | 13 – A 4 |
| C937  | Location .....                                                 | 44 – B 2 |
| C938  | Location .....                                                 | 44 – B 1 |
| C939  | Location .....                                                 | 45 – E 1 |
| C940  | Location .....                                                 | 45 – E 1 |
| C941  | Location .....                                                 | 44 – B 5 |
| C943  | Location .....                                                 | 44 – B 4 |
| C945  | engine compartment                                             |          |
| C949  | 5-door model, Location .....                                   | 46 – B 5 |
| C949  | 4-door model, Location .....                                   | 47 – A 4 |
| C950  | 5-door model, Location .....                                   | 46 – D 5 |
| C950  | 4-door model, Location .....                                   | 47 – C 5 |
| C952  | Location .....                                                 | 13 – E 1 |
| C953  | engine                                                         |          |
| C954  | Location .....                                                 | 14 – B 1 |
| C956  | Location .....                                                 | 13 – C 5 |
| C957  | Location .....                                                 | 14 – B 2 |
| C960  | 5-door model, Location .....                                   | 29 – B 5 |
| C960  | 4-door model, in luggage compartment, RH side                  |          |
| C965  | engine compartment                                             |          |
| C971  | 5-door model, Location .....                                   | 46 – E 4 |
| C974  | behind dash panel                                              |          |
| C978  | 1.8/2.0L Duratec-HE (MI4), manual transmission, Location ..... | 12 – C 1 |
| C983  | Location .....                                                 | 14 – A 2 |
| C984  | Location .....                                                 | 15 – C 1 |
| C985  | under rear seats                                               |          |
| C986  | behind luggage compartment lining, RH side                     |          |
| C987  | Location .....                                                 | 34 – A 2 |
| C1000 | in Battery Junction Box (BJB)                                  |          |
| C1002 | Location .....                                                 | 50 – B 5 |
| C1003 | Location .....                                                 | 50 – B 5 |
| C1005 | Location .....                                                 | 50 – C 5 |
| C1008 | Location .....                                                 | 50 – C 5 |
| C1009 | Location .....                                                 | 50 – D 1 |
| C1010 | Location .....                                                 | 50 – E 2 |

| Connectors |                               | Section 700-06-00 |
|------------|-------------------------------|-------------------|
|            | Location                      | Page/coordinates  |
| C1011      | Location .....                | 50 – D 5          |
| C1012      | in Battery Junction Box (BJB) |                   |
| C1013      | Location .....                | 50 – E 5          |
| C1014      | Location .....                | 50 – F 5          |
| C1017      | in Central Junction Box (CJB) |                   |
| C1019      | Location .....                | 48 – C 5          |

**Ground points****Section 700-06-00**

|     | <b>Location</b>                                | <b>Page/coordinates</b> |
|-----|------------------------------------------------|-------------------------|
| G1  | engine compartment, LH side                    |                         |
| G7  | left-hand-drive, Location .....                | 21 – A 2                |
| G7  | right-hand-drive, Location .....               | 22 – E 1                |
| G8  | engine                                         |                         |
| G12 | Location .....                                 | 19 – E 3                |
| G19 | left-hand-drive, Location .....                | 20 – E 3                |
| G19 | right-hand-drive, Location .....               | 23 – B 1                |
| G20 | left-hand-drive, Location .....                | 20 – E 3                |
| G20 | right-hand-drive, Location .....               | 23 – B 1                |
| G31 | Location .....                                 | 6 – B 2                 |
| G37 | Location .....                                 | 6 – C 5                 |
| G39 | behind dash panel, passenger side              |                         |
| G45 | under rear seats, RH side                      |                         |
| G53 | Location .....                                 | 18 – B 4                |
| G55 | left-hand-drive, Location .....                | 8 – C 5                 |
| G55 | right-hand-drive, Location .....               | 10 – C 5                |
| G56 | left-hand-drive, Location .....                | 7 – A 1                 |
| G56 | engine compartment, RH side, right-hand-drive  |                         |
| G57 | engine compartment, LH side                    |                         |
| G58 | engine                                         |                         |
| G60 | engine                                         |                         |
| G63 | behind dash panel, centre                      |                         |
| G64 | engine                                         |                         |
| G68 | engine compartment, LH side                    |                         |
| G70 | 5-door model, Location .....                   | 29 – E 3                |
| G70 | 4-door model, Location .....                   | 30 – F 3                |
| G72 | left-hand-drive, 4-door model, Location .....  | 25 – E 3                |
| G72 | right-hand-drive, 4-door model, Location ..... | 26 – D 3                |
| G72 | left-hand-drive, 5-door model, Location .....  | 27 – D 3                |
| G72 | right-hand-drive, 5-door model, Location ..... | 28 – D 3                |
| G74 | engine compartment                             |                         |
| G75 | Location .....                                 | 19 – C 4                |
| G77 | 5-door model, Location .....                   | 31 – B 4                |
| G77 | 4-door model, in luggage compartment, LH side  |                         |
| G78 | engine                                         |                         |



**Splices****Location**

|      |                             |
|------|-----------------------------|
| S5   | behind dash panel           |
| S6   | A-pillar, passenger side    |
| S7   | A-pillar, passenger side    |
| S9   | engine                      |
| S10  | A-pillar, passenger side    |
| S11  | behind dash panel           |
| S12  | A-pillar, driver side       |
| S15  | LH A-pillar                 |
| S24  | behind dash panel           |
| S25  | behind dash panel           |
| S48  | behind dash panel           |
| S49  | in luggage compartment      |
| S50  | behind dash panel           |
| S51  | engine                      |
| S52  | engine                      |
| S53  | engine compartment, LH side |
| S54  | engine                      |
| S55  | engine                      |
| S58  | engine compartment, LH side |
| S59  | behind dash panel           |
| S63  | engine                      |
| S65  | engine                      |
| S66  | engine                      |
| S67  | engine                      |
| S71  | behind dash panel           |
| S72  | behind dash panel           |
| S74  | engine                      |
| S75  | engine                      |
| S77  | engine                      |
| S80  | engine                      |
| S81  | under centre console        |
| S82  | under centre console        |
| S85  | vehicle floor               |
| S86  | vehicle floor               |
| S95  | engine                      |
| S105 | on steering column          |
| S108 | engine compartment          |
| S109 | engine compartment, RH side |
| S111 | engine bulkhead             |
| S112 | vehicle floor               |
| S113 | behind dash panel, centre   |
| S114 | behind dash panel, centre   |
| S115 | behind dash panel, centre   |
| S116 | behind dash panel, centre   |
| S118 | engine compartment, LH side |
| S119 | engine compartment, LH side |

**Splices****Location**

|      |                               |
|------|-------------------------------|
| S121 | engine compartment, LH side   |
| S124 | engine compartment, LH side   |
| S127 | behind dash panel, centre     |
| S128 | behind dash panel, centre     |
| S132 | engine compartment, LH side   |
| S145 | rear bumper                   |
| S156 | behind dash panel             |
| S157 | behind dash panel             |
| S158 | A-pillar, passenger side      |
| S160 | A-pillar, passenger side      |
| S162 | engine compartment, LH side   |
| S163 | A-pillar, passenger side      |
| S164 | engine compartment, LH side   |
| S171 | RH A-pillar                   |
| S175 | front bumper                  |
| S179 | behind dash panel             |
| S180 | behind dash panel             |
| S182 | under rear seats              |
| S183 | under rear seats              |
| S187 | rear bumper                   |
| S194 | in passenger's door           |
| S196 | in liftgate                   |
| S197 | in driver's door              |
| S199 | RH D-pillar                   |
| S200 | in liftgate                   |
| S202 | in Battery Junction Box (BJB) |
| S203 | A-pillar, passenger side      |
| S204 | engine compartment, LH side   |
| S206 | roof                          |
| S213 | A-pillar, passenger side      |
| S214 | engine                        |
| S215 | engine                        |
| S219 | engine compartment, LH side   |
| S220 | engine compartment, LH side   |
| S222 | engine compartment, LH side   |
| S223 | engine compartment, LH side   |
| S224 | engine compartment            |
| S225 | engine compartment            |
| S226 | engine compartment            |
| S230 | wheelwell, front, LH side     |
| S231 | wheelwell, front, LH side     |
| S232 | wheelwell, front, RH side     |
| S233 | wheelwell, front, RH side     |
| S234 | vehicle underbody, LH side    |
| S235 | vehicle underbody, LH side    |
| S236 | vehicle underbody, LH side    |

Splices


|       | Location                        |
|-------|---------------------------------|
| S237  | vehicle underbody, LH side      |
| S240  | dash panel, LH side             |
| S241  | dash panel, RH side             |
| S690  | engine                          |
| S1000 | engine compartment              |
| S2000 | in luggage compartment, LH side |

**Fuses****Section 700-06-00**

|      | <b>Location</b>               | <b>Page/coordinates</b> |
|------|-------------------------------|-------------------------|
| F1   | Location .....                | 50 – B 2                |
| F2   | Location .....                | 50 – B 2                |
| F3   | Location .....                | 50 – B 2                |
| F4   | Location .....                | 50 – B 3                |
| F6   | Location .....                | 50 – B 3                |
| F7   | Location .....                | 50 – C 2                |
| F8   | Location .....                | 50 – C 2                |
| F9   | Location .....                | 50 – C 3                |
| F10  | Location .....                | 50 – C 3                |
| F11  | Location .....                | 50 – C 3                |
| F12  | Location .....                | 50 – C 3                |
| F13  | Location .....                | 50 – D 3                |
| F19  | Location .....                | 50 – D 2                |
| F20  | Location .....                | 50 – E 3                |
| F22  | Location .....                | 50 – E 3                |
| F24  | Location .....                | 50 – E 3                |
| F25  | Location .....                | 50 – E 3                |
| F26  | Location .....                | 50 – E 3                |
| F27  | Location .....                | 50 – E 3                |
| F28  | Location .....                | 50 – E 4                |
| F30  | Location .....                | 50 – E 3                |
| F31  | Location .....                | 50 – E 3                |
| F32  | Location .....                | 50 – F 3                |
| F33  | Location .....                | 50 – F 3                |
| F34  | Location .....                | 50 – F 3                |
| F35  | Location .....                | 50 – F 4                |
| F36  | Location .....                | 50 – F 4                |
| F100 | in Central Junction Box (CJB) |                         |
| F101 | in Central Junction Box (CJB) |                         |
| F102 | in Central Junction Box (CJB) |                         |
| F103 | in Central Junction Box (CJB) |                         |
| F104 | in Central Junction Box (CJB) |                         |
| F105 | in Central Junction Box (CJB) |                         |
| F106 | in Central Junction Box (CJB) |                         |
| F107 | in Central Junction Box (CJB) |                         |
| F108 | in Central Junction Box (CJB) |                         |
| F109 | in Central Junction Box (CJB) |                         |
| F111 | in Central Junction Box (CJB) |                         |
| F112 | in Central Junction Box (CJB) |                         |
| F114 | in Central Junction Box (CJB) |                         |
| F115 | in Central Junction Box (CJB) |                         |
| F116 | in Central Junction Box (CJB) |                         |
| F117 | in Central Junction Box (CJB) |                         |
| F118 | in Central Junction Box (CJB) |                         |
| F120 | in Central Junction Box (CJB) |                         |
| F122 | in Central Junction Box (CJB) |                         |


**Fuses****Section 700-06-00****Location****Page/coordinates**

|       |                               |
|-------|-------------------------------|
| F124  | in Central Junction Box (CJB) |
| F125  | in Central Junction Box (CJB) |
| F127  | in Central Junction Box (CJB) |
| F129  | in Central Junction Box (CJB) |
| F131  | in Central Junction Box (CJB) |
| F132  | in Central Junction Box (CJB) |
| F133  | in Central Junction Box (CJB) |
| F134  | in Central Junction Box (CJB) |
| F135  | in Central Junction Box (CJB) |
| F136  | in Central Junction Box (CJB) |
| F137  | in Central Junction Box (CJB) |
| F138  | in Central Junction Box (CJB) |
| F139  | in Central Junction Box (CJB) |
| F140  | in Central Junction Box (CJB) |
| F141  | in Central Junction Box (CJB) |
| F142  | in Central Junction Box (CJB) |
| F143  | in Central Junction Box (CJB) |
| F1000 | Battery                       |

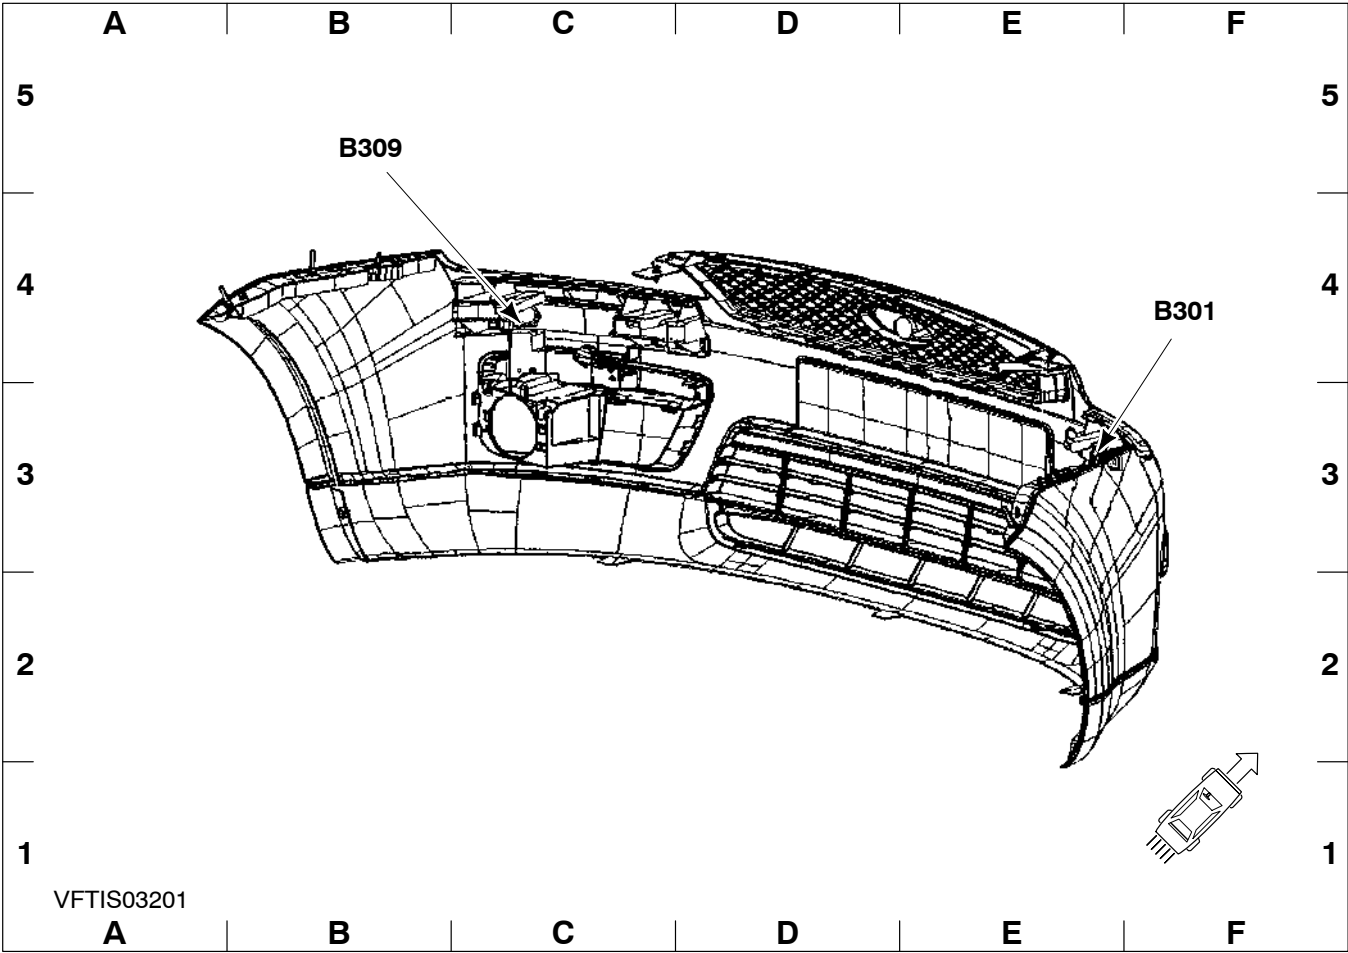


front bumper

B301 . Parking aid sensor, RH front . . . . . F 4      B309 . Parking aid sensor, LH front . . . . . B 5

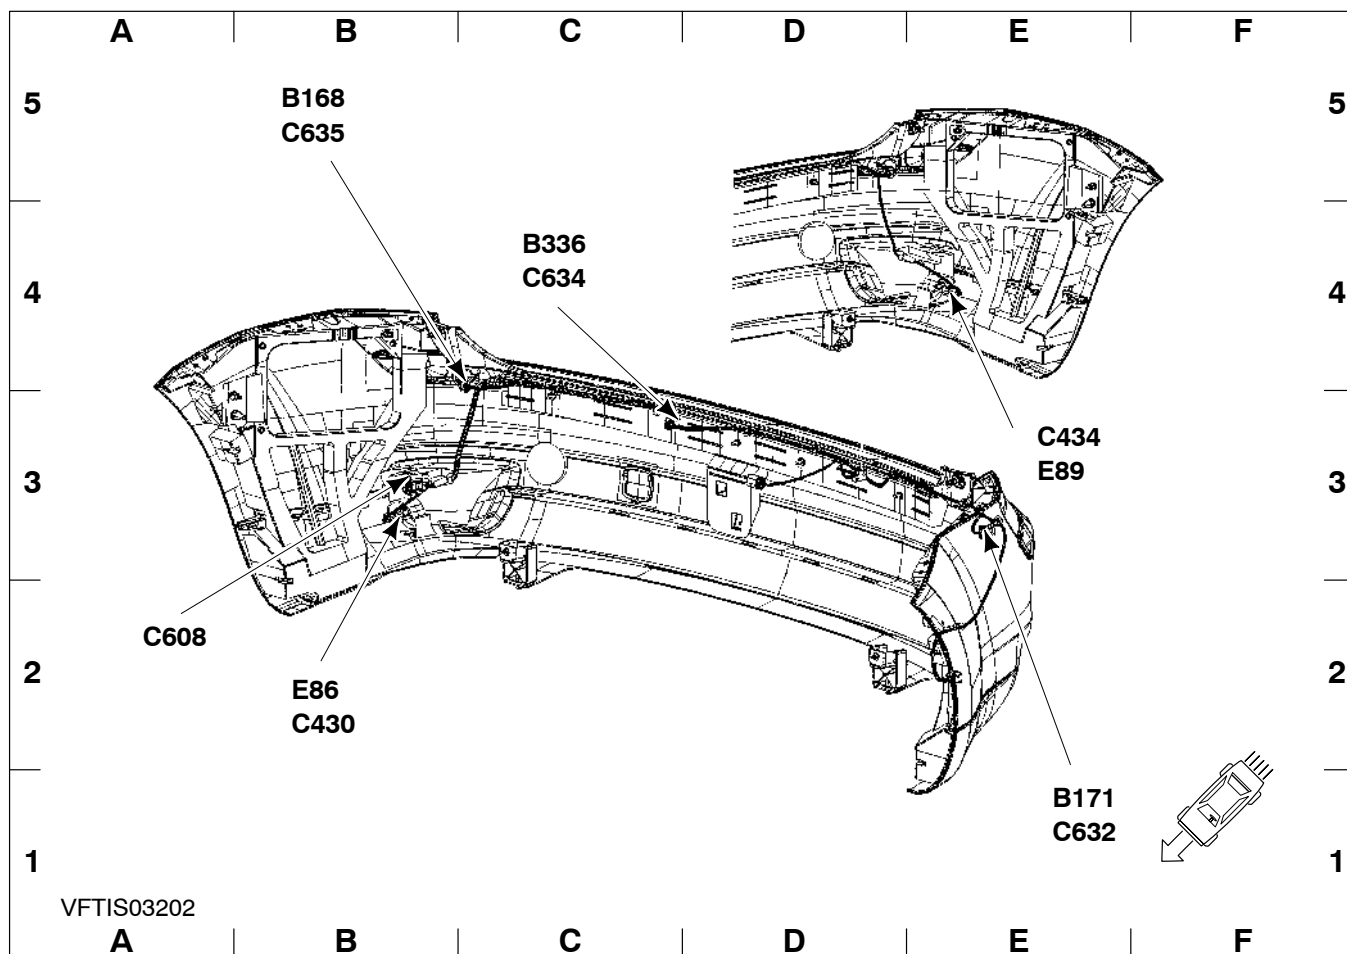

### rear bumper


|            |                                      |       |     |            |                        |       |     |
|------------|--------------------------------------|-------|-----|------------|------------------------|-------|-----|
| B168 .     | Parking aid sensor, rear, outer left | ..... | B 5 | C632 ..... | E 1                    |       |     |
| B336 .     | Parking aid sensor, rear, centre     | ..... | C 4 | C634 ..... | C 4                    |       |     |
| C430 ..... |                                      |       | B 2 | C635 ..... | B 5                    |       |     |
| C434 ..... |                                      |       | E 3 | E86 ..     | Rear fog lamp, RH side | ..... | B 2 |
| C608 ..... |                                      |       | A 2 | E89 ..     | Rear fog lamp, LH side | ..... | E 3 |

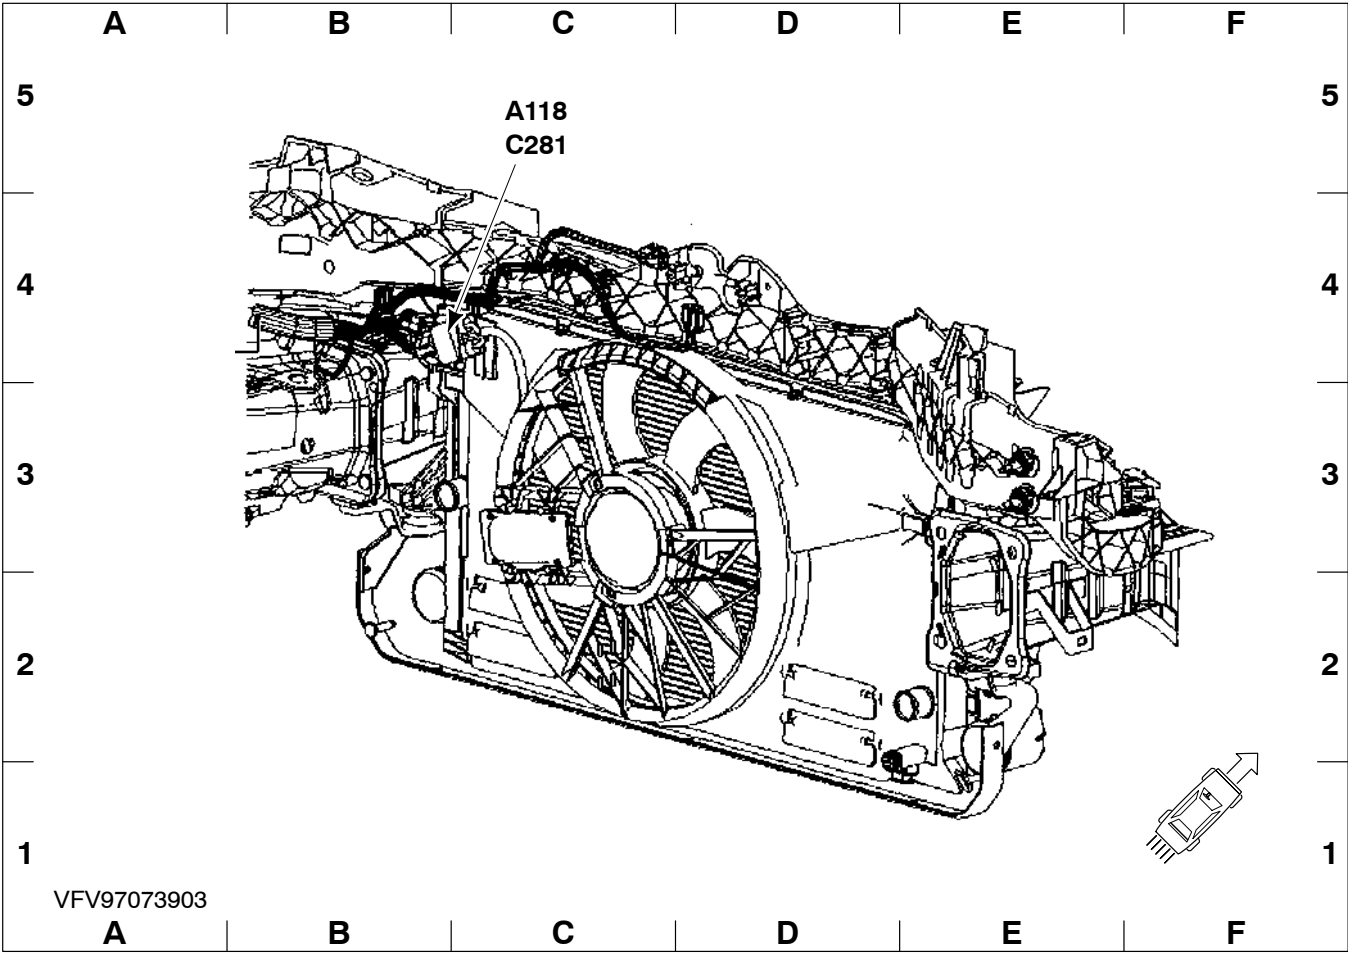

**radiator, petrol engines**


A118 . Cooling fan module ..... C 5      C281 ..... C 5



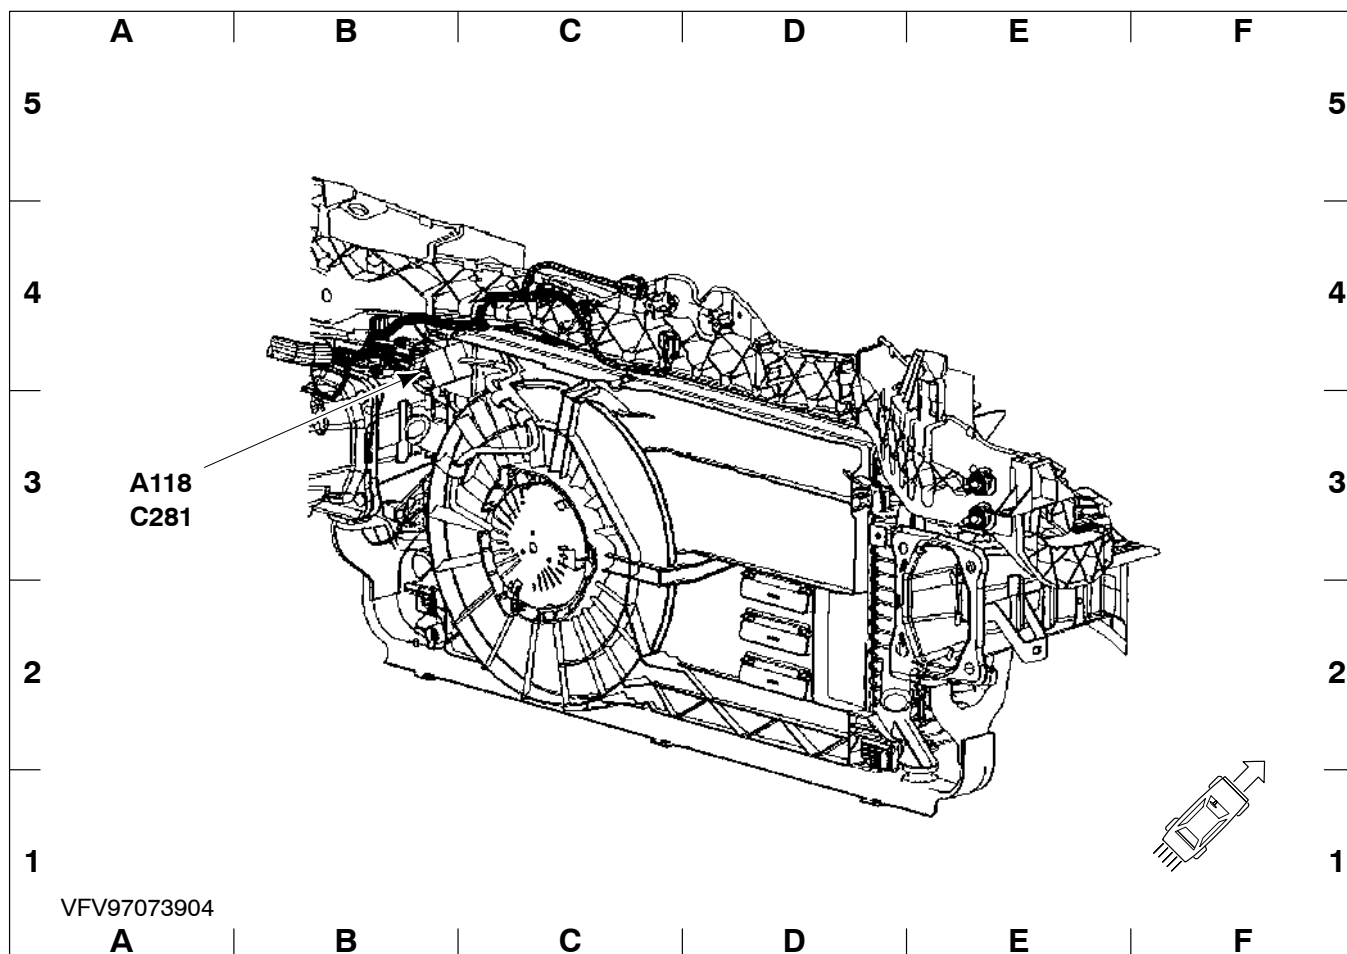


### radiator, Diesel engines

A118 . Cooling fan module ..... A 3      C281 ..... A 3

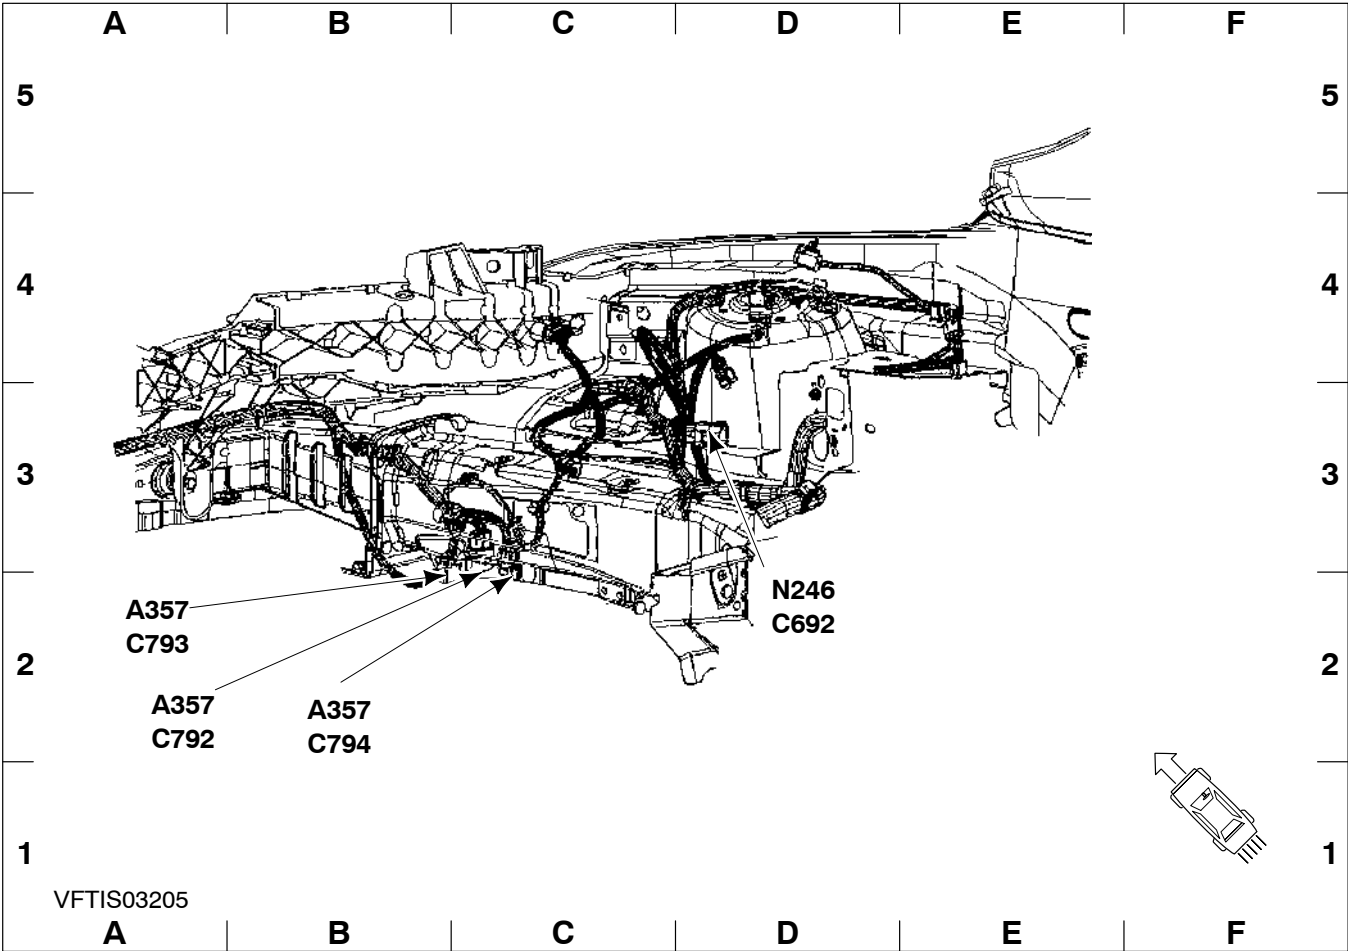


engine compartment, RH side, front

|                                                                  |       |     |                                |           |
|------------------------------------------------------------------|-------|-----|--------------------------------|-----------|
| A357 . Electrical Hydraulic Power Assist Steering (EHPAS) module | ..... | A 2 | C692 .....                     | D 2       |
| A357 . Electrical Hydraulic Power Assist Steering (EHPAS) module | ..... | A 2 | C792 .....                     | A 2       |
| A357 . Electrical Hydraulic Power Assist Steering (EHPAS) module | ..... | A 2 | C793 .....                     | A 2       |
| A357 . Electrical Hydraulic Power Assist Steering (EHPAS) module | ..... | B 2 | C794 .....                     | B 2       |
|                                                                  |       |     | N246 . A/C low-pressure switch | ..... D 2 |

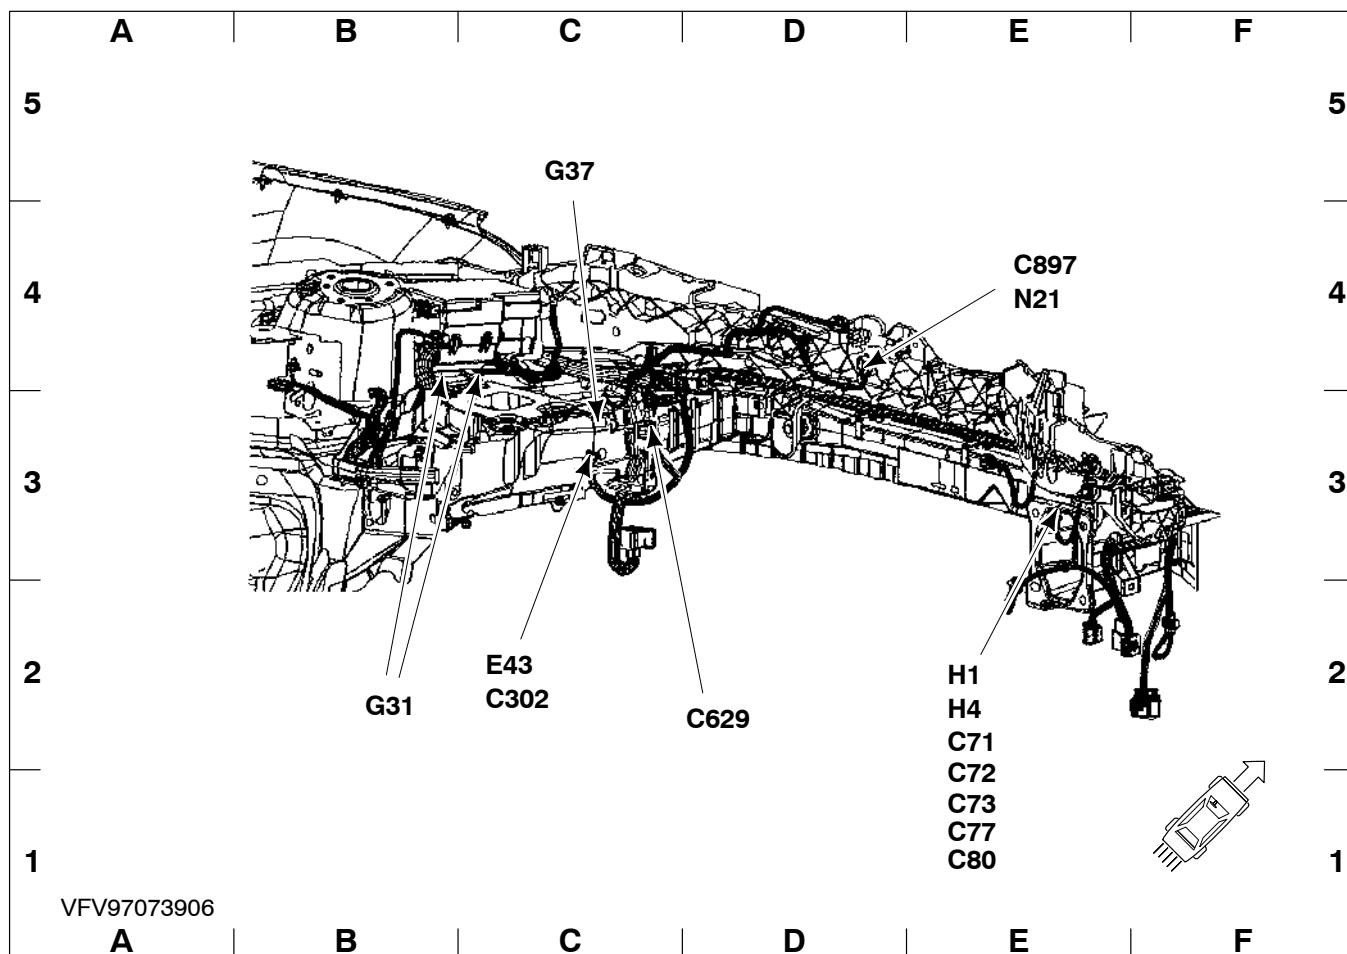


### engine compartment, LH side, front

|            |     |                                        |     |
|------------|-----|----------------------------------------|-----|
| C71 .....  | E 2 | C897 .....                             | E 4 |
| C72 .....  | E 1 | E43 .. Fog lamp, LH front .....        | C 2 |
| C73 .....  | E 1 | G31 .....                              | B 2 |
| C77 .....  | E 1 | G37 .....                              | C 5 |
| C80 .....  | E 1 | H1 ... Horn .....                      | E 2 |
| C302 ..... | C 2 | H4 ... Second horn .....               | E 2 |
| C629 ..... | D 2 | N21 .. Engine compartment switch ..... | E 4 |

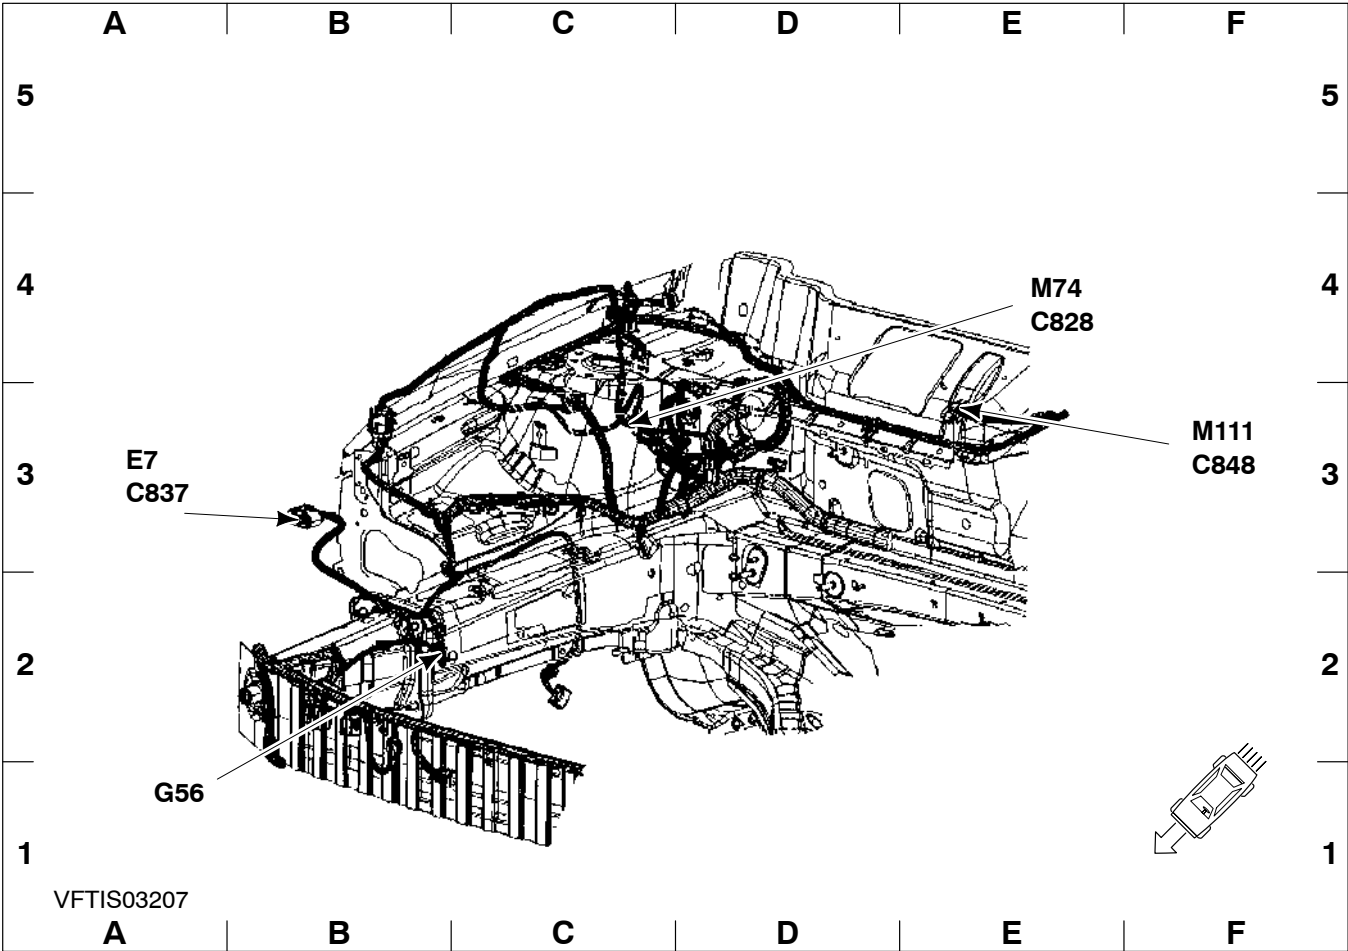

engine compartment, RH side, LHD


|      |                       |     |      |                             |     |
|------|-----------------------|-----|------|-----------------------------|-----|
| C828 | .....                 | E 4 | G56  | .....                       | A 1 |
| C837 | .....                 | A 3 | M74  | . Two-way washer pump motor | E 4 |
| C848 | .....                 | F 3 | M111 | Windshield wiper motor      | F 3 |
| E7   | ... Headlamp, RH side | A 3 |      |                             |     |

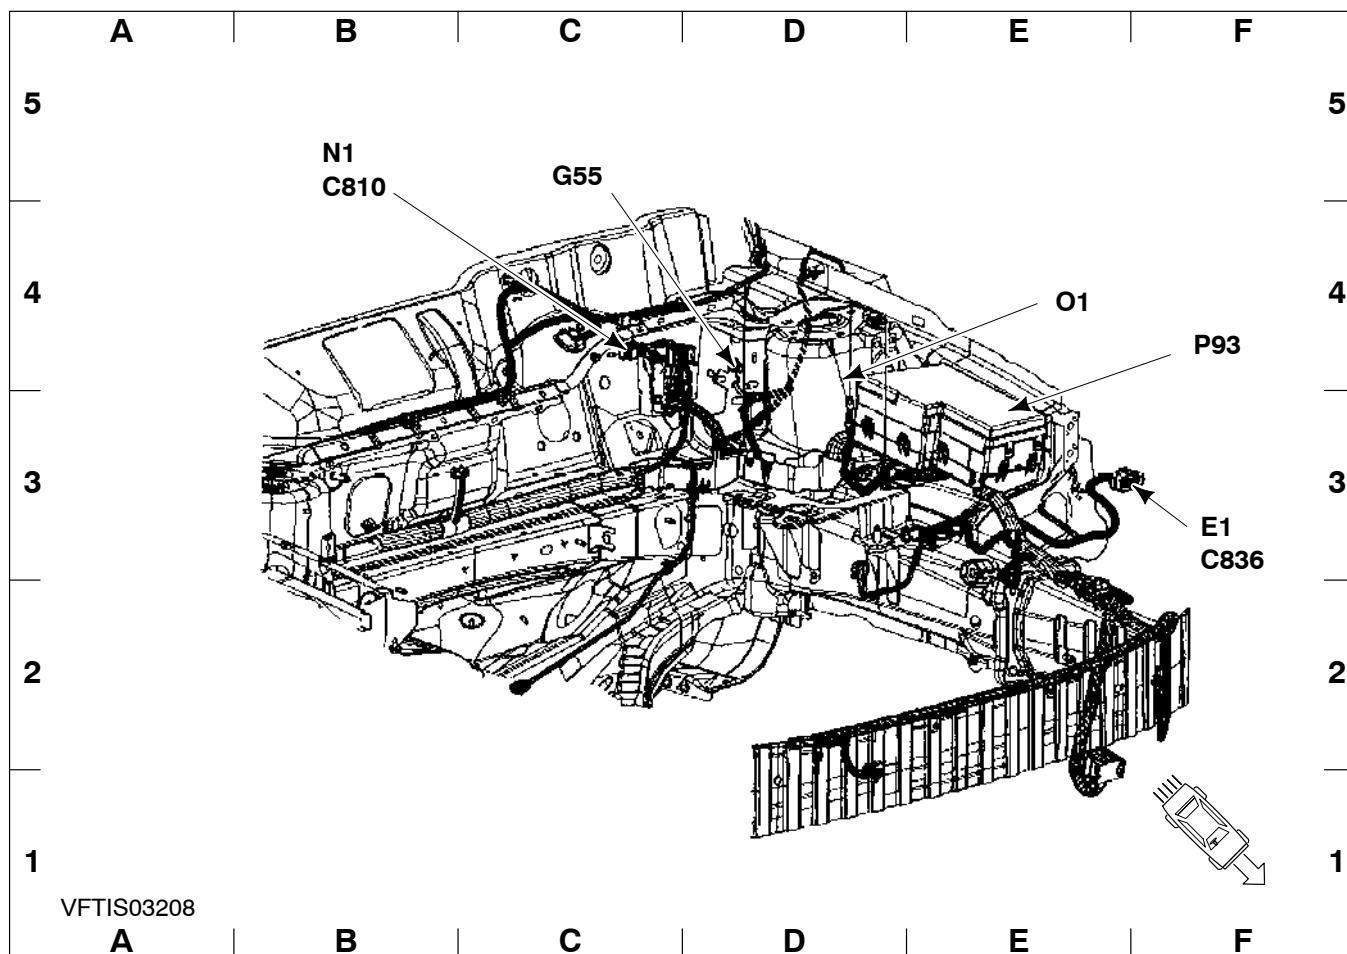

### engine compartment, LH side, LHD


C810 ..... B 5  
 C836 ..... F 3  
 E1 ... Headlamp, LH side ..... F 3  
 G55 ..... C 5

N1 ... Brake fluid level switch ..... B 5  
 O1 ... Battery ..... E 4  
 P93 .. Battery Junction Box (BJB) ..... F 4

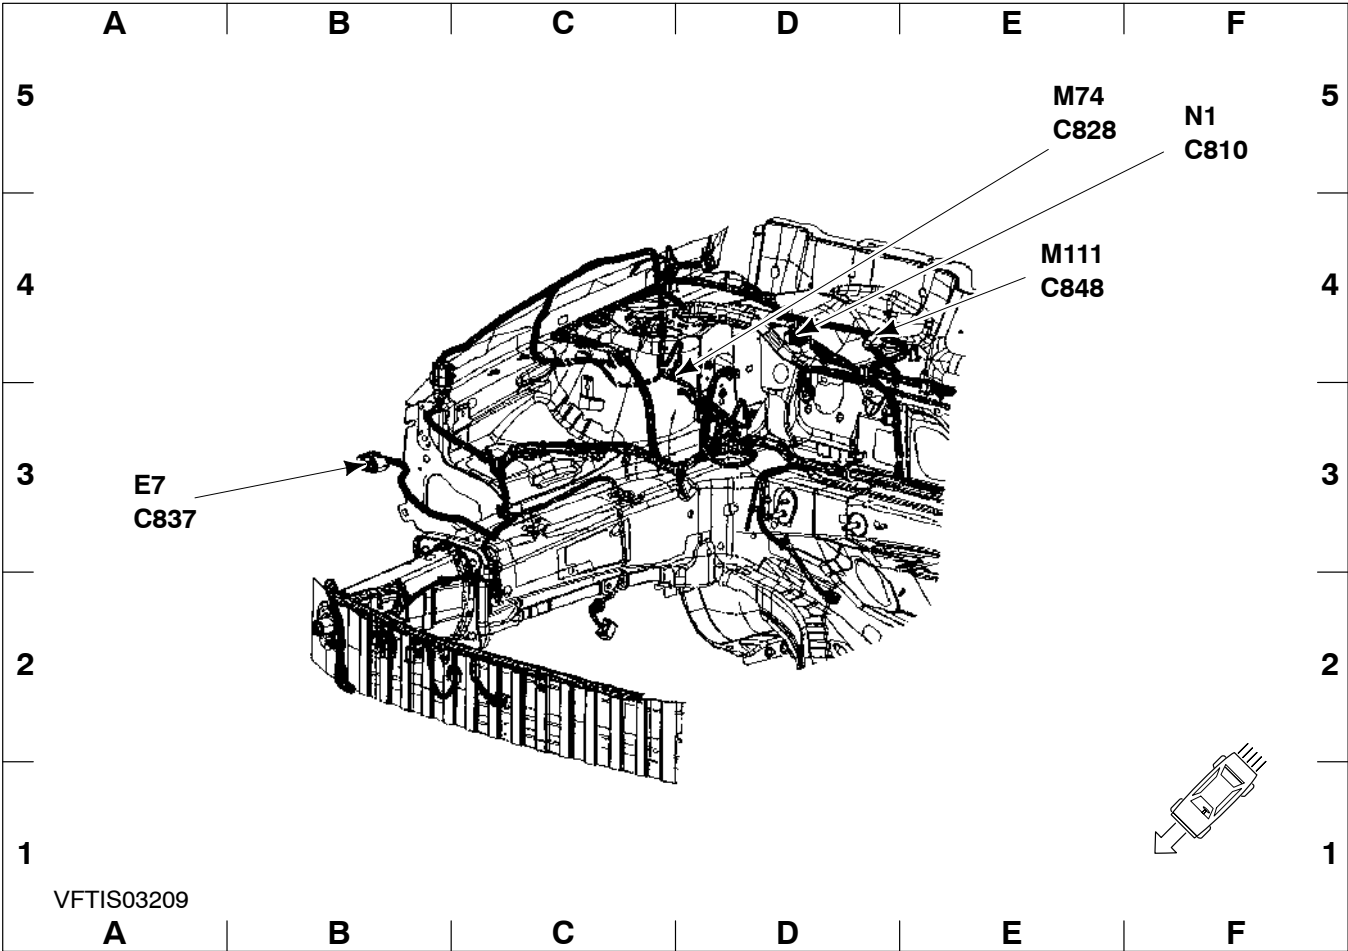

**engine compartment, RH side, RHD**


|            |     |                                       |     |
|------------|-----|---------------------------------------|-----|
| C810 ..... | F 5 | E7 ... Headlamp, RH side .....        | A 3 |
| C828 ..... | E 5 | M74 . Two-way washer pump motor ..... | E 5 |
| C837 ..... | A 3 | M111 Windshield wiper motor .....     | E 4 |
| C848 ..... | E 4 | N1 ... Brake fluid level switch ..... | F 5 |

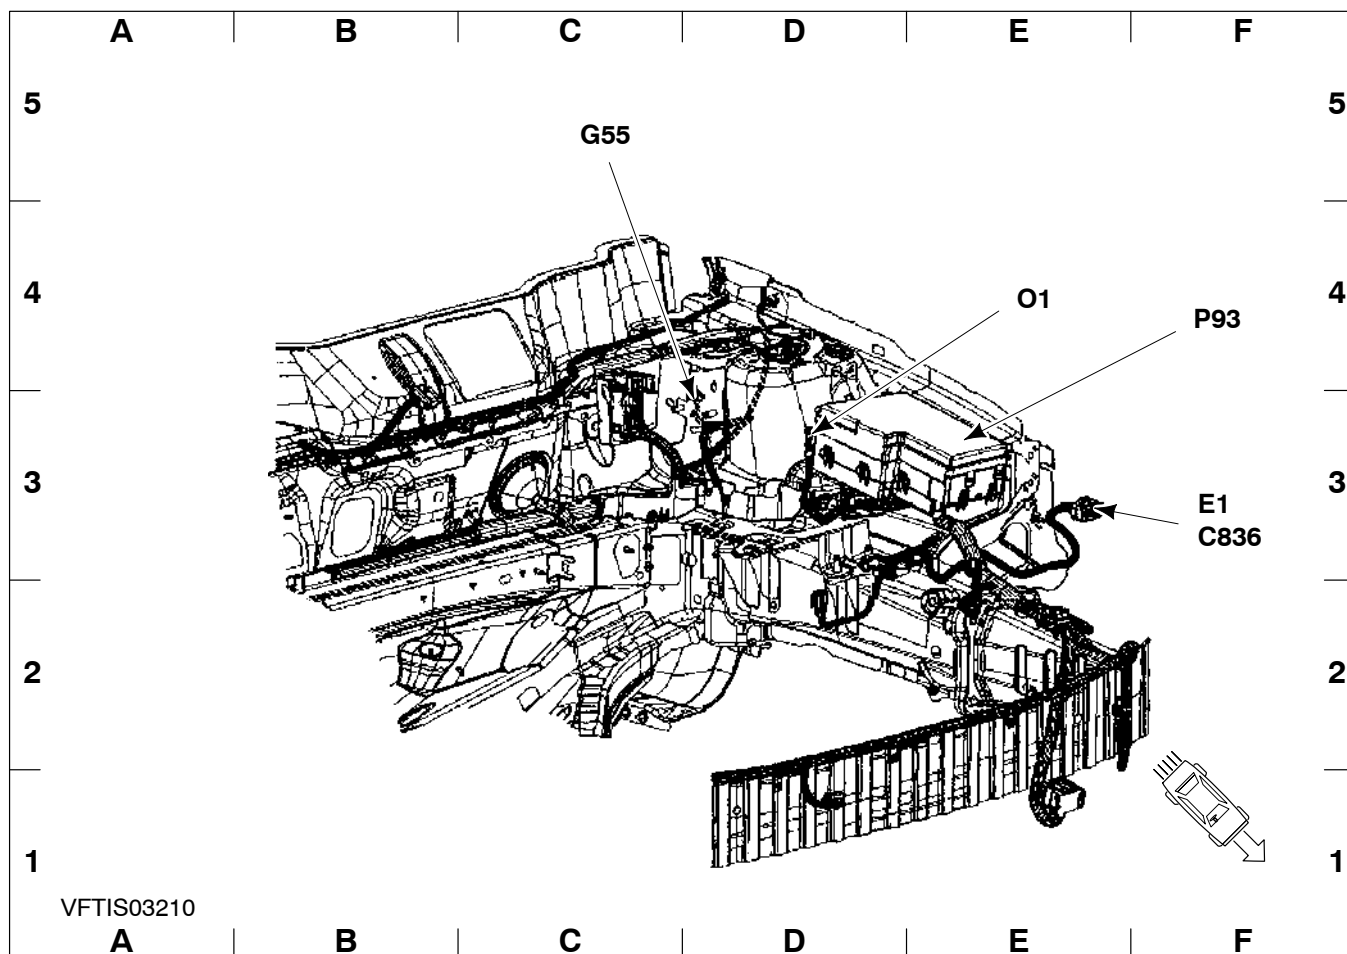

### engine compartment, LH side, RHD

C836 ..... F 3  
 E1 ... Headlamp, LH side ..... F 3  
 G55 ..... C 5


O1 ... Battery ..... E 4  
 P93 .. Battery Junction Box (BJB) ..... F 4

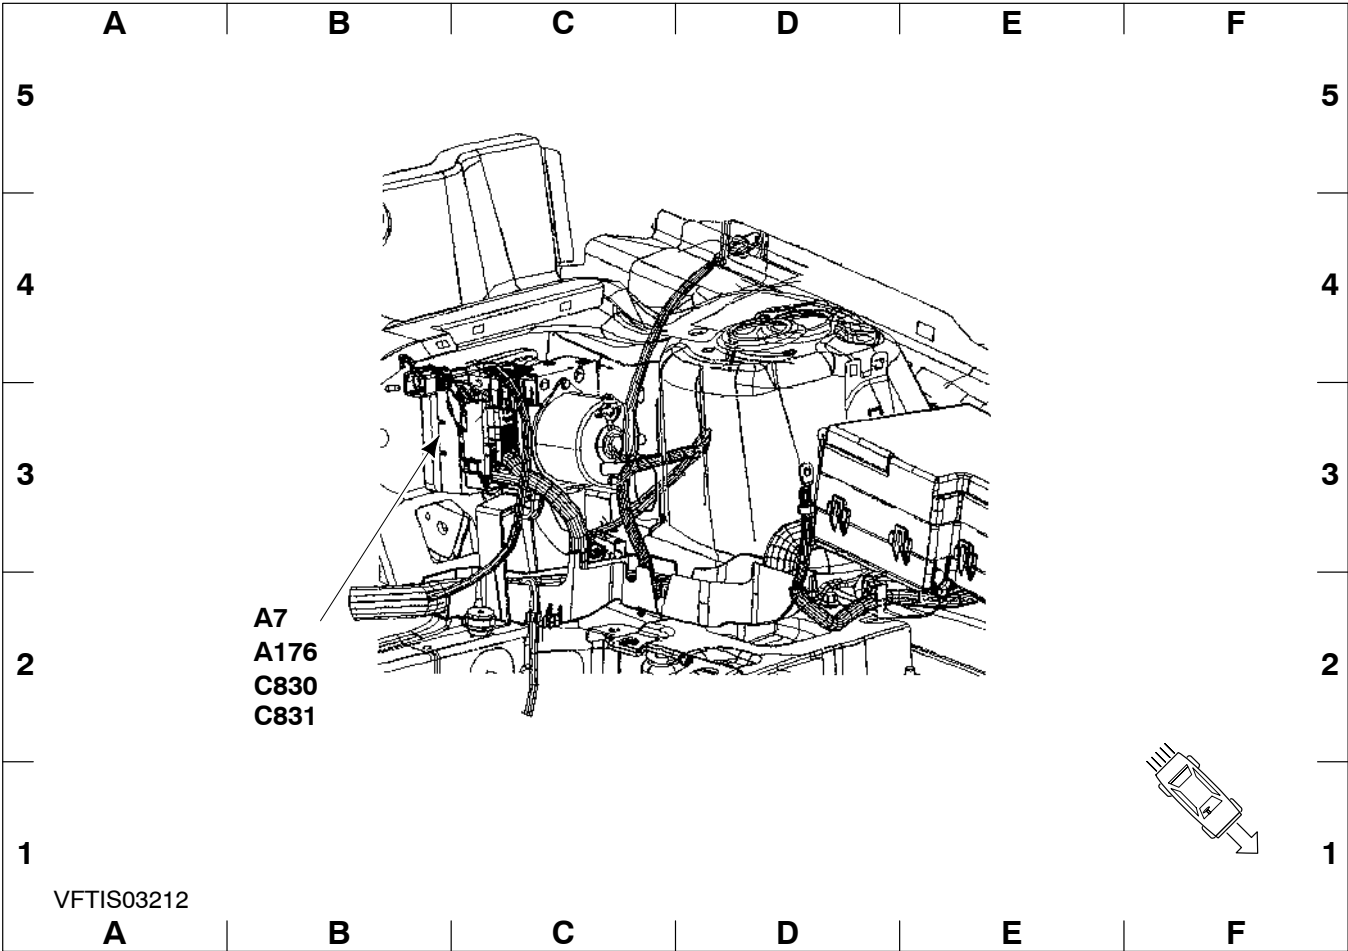

engine compartment, LH side, rear


|                  |                                    |     |                |     |
|------------------|------------------------------------|-----|----------------|-----|
| A7 . . . . .     | ABS module . . . . .               | B 2 | C830 . . . . . | B 2 |
| A176 . . . . .   | Electronic Stability Program (ESP) |     | C831 . . . . . | B 2 |
| module . . . . . |                                    | B 2 |                |     |



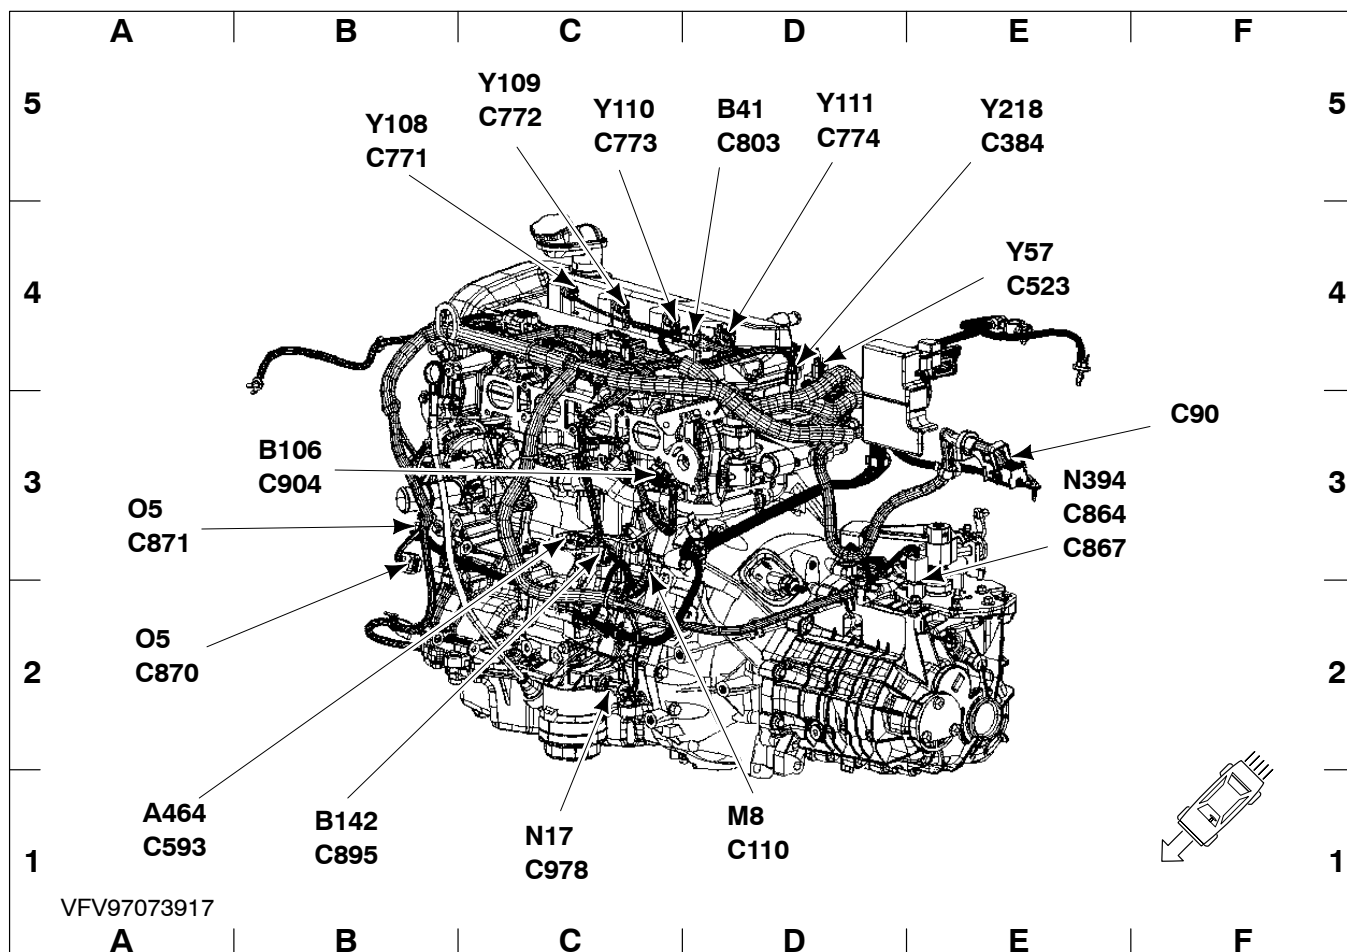


### engine, front, 1.8/2.0L Duratec-HE (MI4), manual transmission

|                                                                |     |                                                   |     |
|----------------------------------------------------------------|-----|---------------------------------------------------|-----|
| A464 . Electronic Throttle Control (ETC) module . . . . .      | A 1 | C867 . . . . .                                    | E 3 |
| B41 . . Camshaft position sensor . . . . .                     | D 5 | C870 . . . . .                                    | A 2 |
| B106 . Knock sensor 2 . . . . .                                | B 3 | C871 . . . . .                                    | A 3 |
| B142 . Temperature manifold absolute pressure sensor . . . . . | B 1 | C895 . . . . .                                    | B 1 |
| C90 . . . . .                                                  | F 3 | C904 . . . . .                                    | B 3 |
| C110 . . . . .                                                 | D 1 | C978 . . . . .                                    | C 1 |
| C384 . . . . .                                                 | E 5 | M8 . . Starter motor . . . . .                    | D 1 |
| C523 . . . . .                                                 | E 4 | N17 . . Oil pressure switch . . . . .             | C 1 |
| C593 . . . . .                                                 | A 1 | N394 . Reversing lamp switch . . . . .            | E 3 |
| C771 . . . . .                                                 | B 5 | O5 . . Generator . . . . .                        | A 2 |
| C772 . . . . .                                                 | C 5 | O5 . . Generator . . . . .                        | A 3 |
| C773 . . . . .                                                 | C 5 | Y57 . . Swirl control solenoid valve . . . . .    | E 4 |
| C774 . . . . .                                                 | D 5 | Y108 . Fuel injector 1 . . . . .                  | B 5 |
| C803 . . . . .                                                 | D 5 | Y109 . Fuel injector 2 . . . . .                  | C 5 |
| C864 . . . . .                                                 | E 3 | Y110 . Fuel injector 3 . . . . .                  | C 5 |
|                                                                |     | Y111 . Fuel injector 4 . . . . .                  | D 5 |
|                                                                |     | Y218 . Inlet air control valve solenoid . . . . . | E 5 |

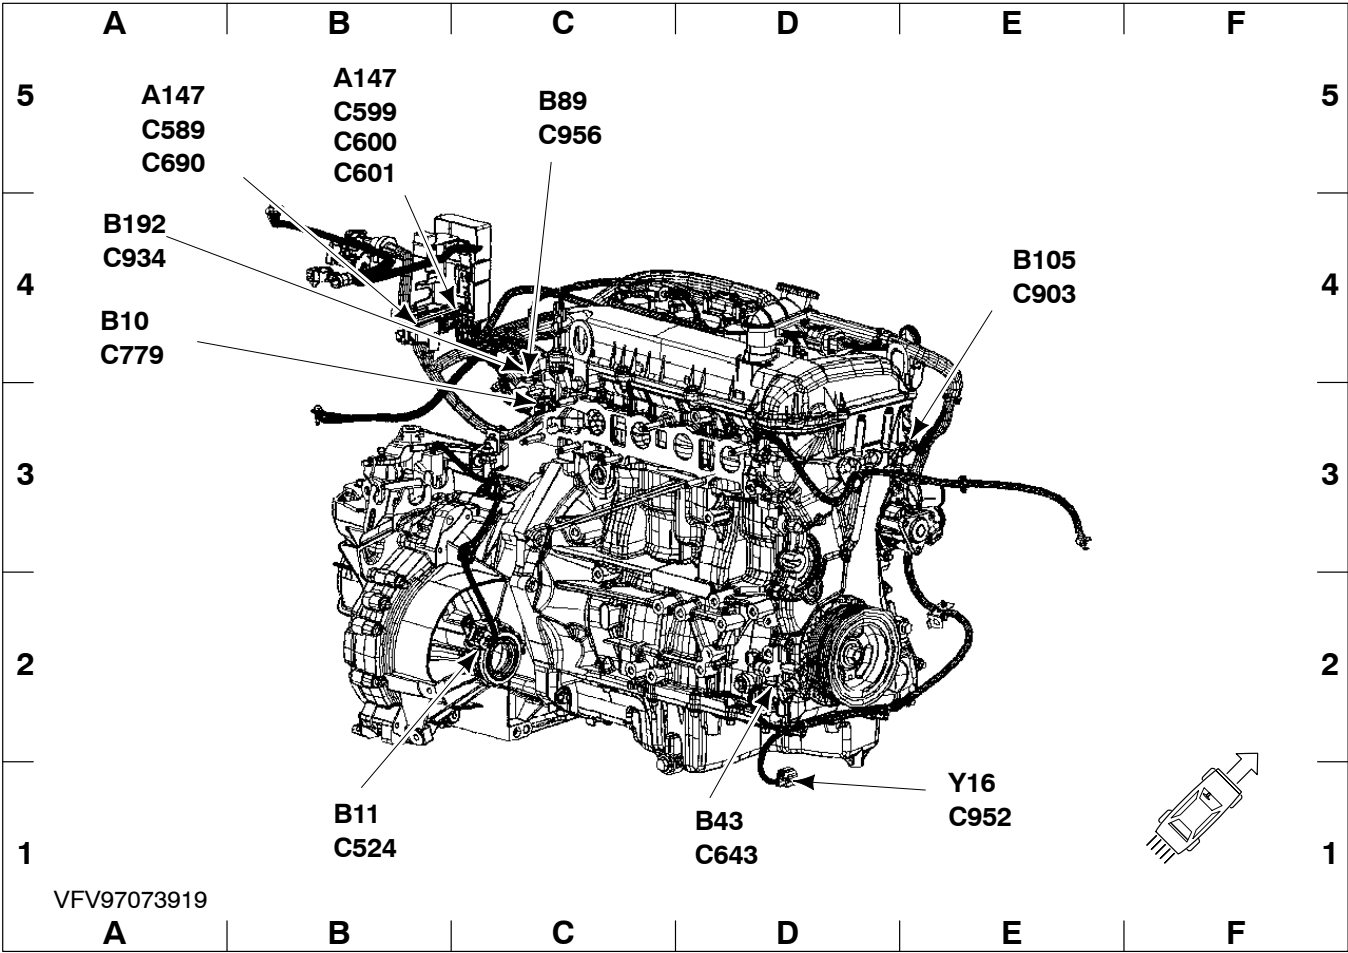


engine, rear, 1.8/2.0L Duratec-HE (MI4)

|                |                                                       |     |                |                                 |     |
|----------------|-------------------------------------------------------|-----|----------------|---------------------------------|-----|
| A147 .         | Powertrain control module (PCM) . . . . .             | B 5 | C599 . . . . . | B 5                             |     |
| A147 .         | Powertrain control module (PCM) . . . . .             | A 5 | C600 . . . . . | B 5                             |     |
| B10 ..         | Engine Coolant Temperature (ECT)<br>sensor . . . . .  | A 4 | C601 . . . . . | B 5                             |     |
| B11 ..         | Vehicle speed sensor (VSS) . . . . .                  | B 1 | C643 . . . . . | D 1                             |     |
| B43 ..         | Crankshaft position sensor . . . . .                  | D 1 | C690 . . . . . | A 5                             |     |
| B89 ..         | Pre-catalyst heated oxygen sensor<br>(HO2S) . . . . . | C 5 | C779 . . . . . | A 4                             |     |
| B105 .         | Knock sensor 1 . . . . .                              | E 4 | C903 . . . . . | E 4                             |     |
| B192 .         | Catalyst monitor sensor . . . . .                     | A 4 | C934 . . . . . | A 4                             |     |
| C524 . . . . . |                                                       | B 1 | C952 . . . . . | E 1                             |     |
| C589 . . . . . |                                                       | A 5 | C956 . . . . . | C 5                             |     |
|                |                                                       |     | Y16 ..         | A/C Compressor clutch . . . . . | E 1 |

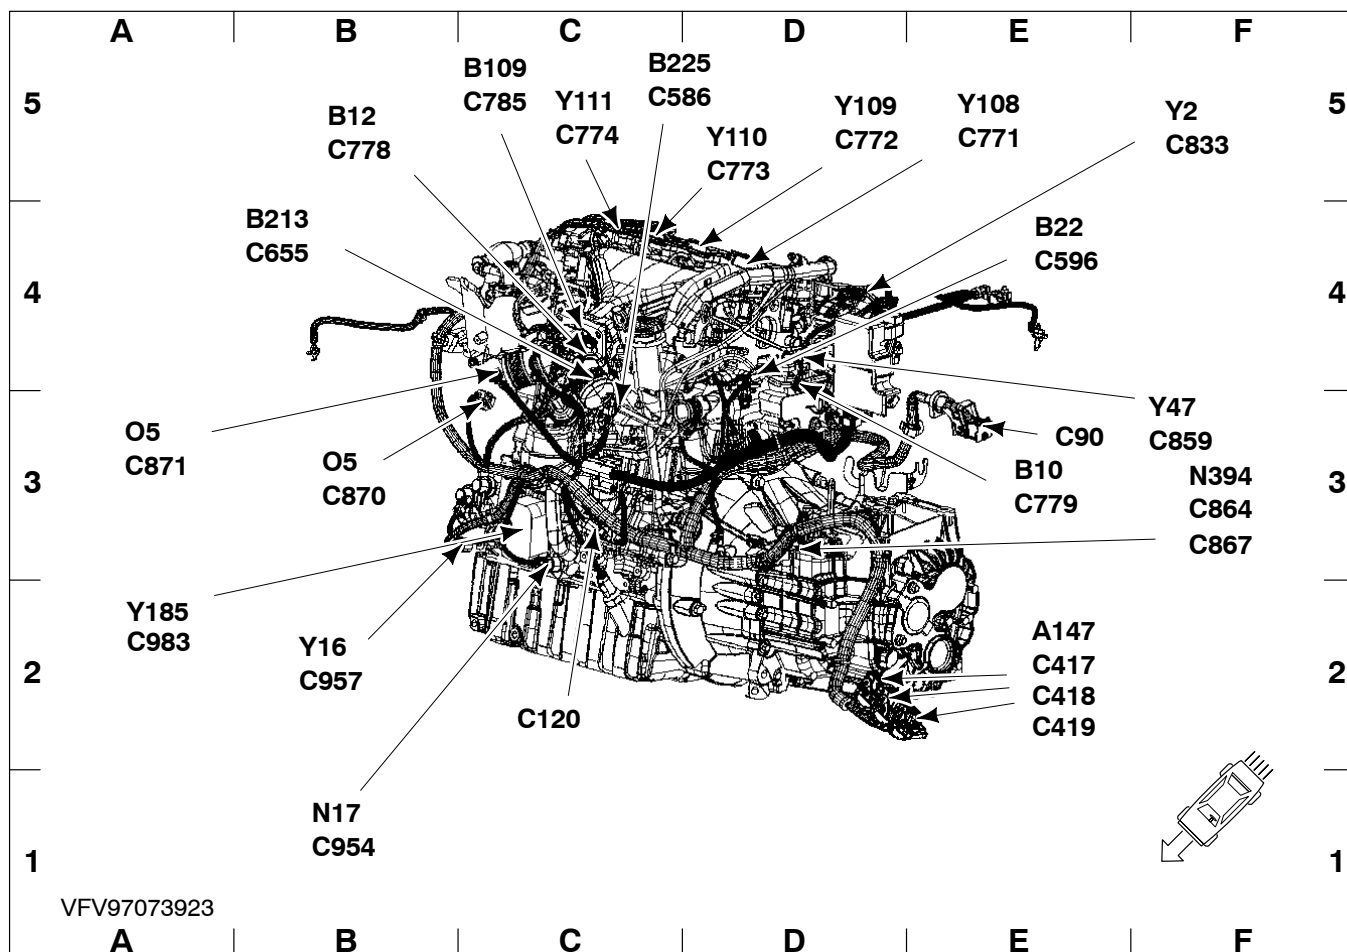


### engine, front, 2.0L Duratorq-TDCi (DW) Diesel

|         |                                                      |     |                |                                             |     |
|---------|------------------------------------------------------|-----|----------------|---------------------------------------------|-----|
| A147 .  | Powertrain control module (PCM) . . . . .            | E 2 | C785 . . . . . | C 5                                         |     |
| B10 . . | Engine Coolant Temperature (ECT)<br>sensor . . . . . | E 3 | C833 . . . . . | F 5                                         |     |
| B12 . . | Water-in-fuel sensor . . . . .                       | B 5 | C859 . . . . . | F 3                                         |     |
| B22 . . | Mass Air Flow (MAF) sensor . . . . .                 | E 4 | C864 . . . . . | F 3                                         |     |
| B109 .  | Fuel temperature sensor . . . . .                    | C 5 | C867 . . . . . | F 3                                         |     |
| B213 .  | Intake Air Temperature (IAT) sensor . . .            | B 4 | C870 . . . . . | B 3                                         |     |
| B225 .  | Fuel rail pressure transducer sensor . . . .         | C 5 | C871 . . . . . | A 3                                         |     |
| C90 . . | . . . . .                                            | E 3 | C954 . . . . . | B 1                                         |     |
| C120 .  | . . . . .                                            | C 2 | C957 . . . . . | B 2                                         |     |
| C417 .  | . . . . .                                            | E 2 | C983 . . . . . | A 2                                         |     |
| C418 .  | . . . . .                                            | E 2 | N17 . .        | Oil pressure switch . . . . .               | B 1 |
| C419 .  | . . . . .                                            | E 2 | N394 .         | Reversing lamp switch . . . . .             | F 3 |
| C586 .  | . . . . .                                            | C 5 | O5 . .         | Generator . . . . .                         | B 3 |
| C596 .  | . . . . .                                            | E 4 | O5 . .         | Generator . . . . .                         | A 3 |
| C655 .  | . . . . .                                            | B 4 | Y2 . .         | Exhaust Gas Recirculation (EGR) valve .     | F 5 |
| C771 .  | . . . . .                                            | E 5 | Y16 . .        | A/C Compressor clutch . . . . .             | B 2 |
| C772 .  | . . . . .                                            | D 5 | Y47 . .        | Fuel pressure solenoid valve . . . . .      | F 3 |
| C773 .  | . . . . .                                            | D 5 | Y108 .         | Fuel injector 1 . . . . .                   | E 5 |
| C774 .  | . . . . .                                            | C 5 | Y109 .         | Fuel injector 2 . . . . .                   | D 5 |
| C778 .  | . . . . .                                            | B 5 | Y110 .         | Fuel injector 3 . . . . .                   | D 5 |
| C779 .  | . . . . .                                            | E 3 | Y111 .         | Fuel injector 4 . . . . .                   | C 5 |
|         |                                                      |     | Y185 .         | Intercooler bypass solenoid valve . . . . . | A 2 |

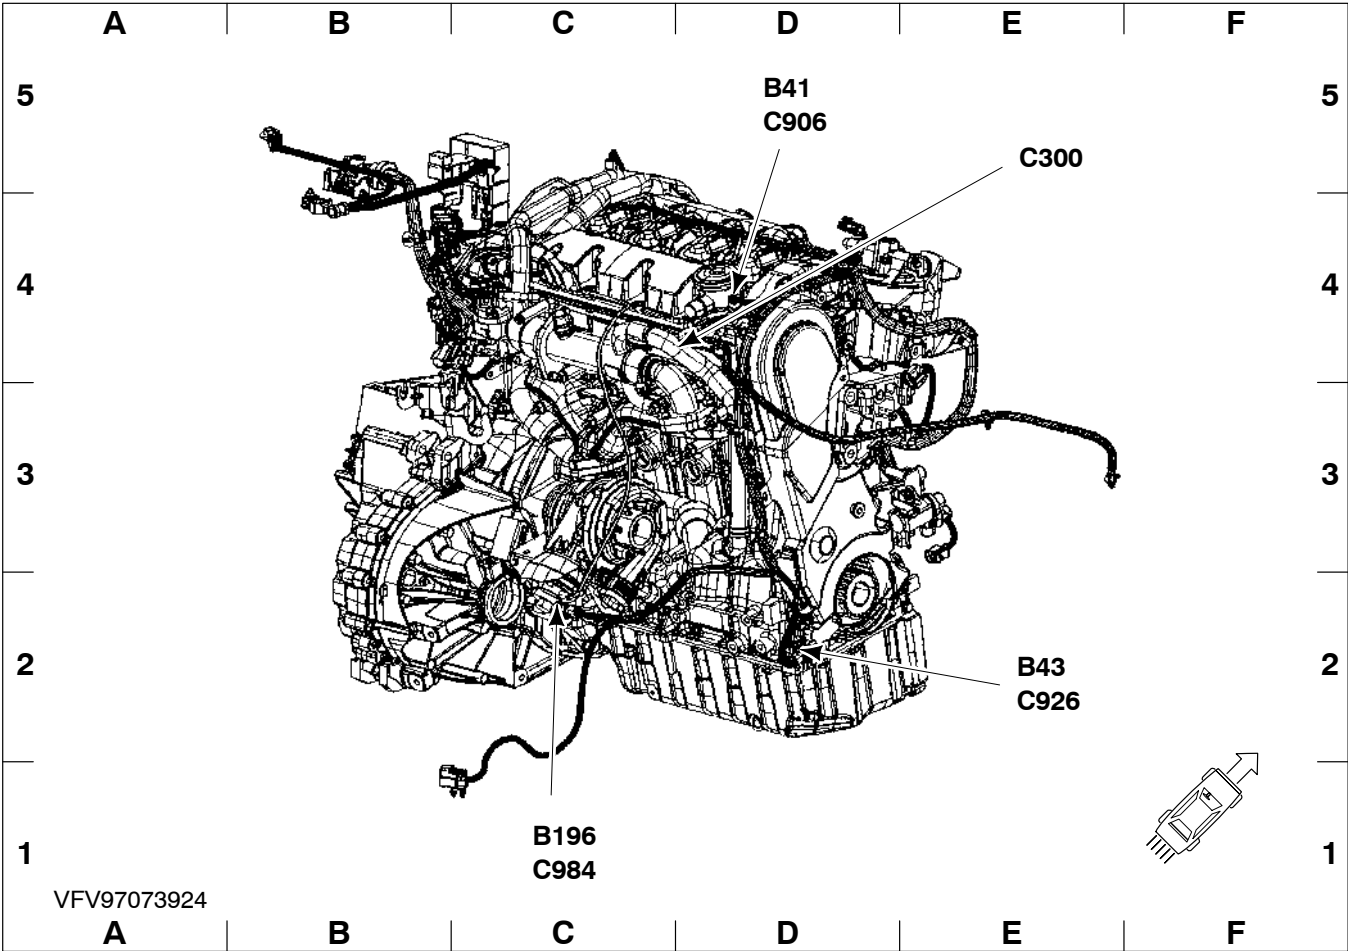


engine, rear, 2.0L Duratorq–TDCi (DW) Diesel

|                                             |     |            |     |
|---------------------------------------------|-----|------------|-----|
| B41 .. Camshaft position sensor .....       | D 5 | C906 ..... | D 5 |
| B43 .. Crankshaft position sensor .....     | E 2 | C926 ..... | E 2 |
| B196 . Turbo geometry position sensor ..... | C 1 | C984 ..... | C 1 |
| C300 .....                                  | E 5 |            |     |

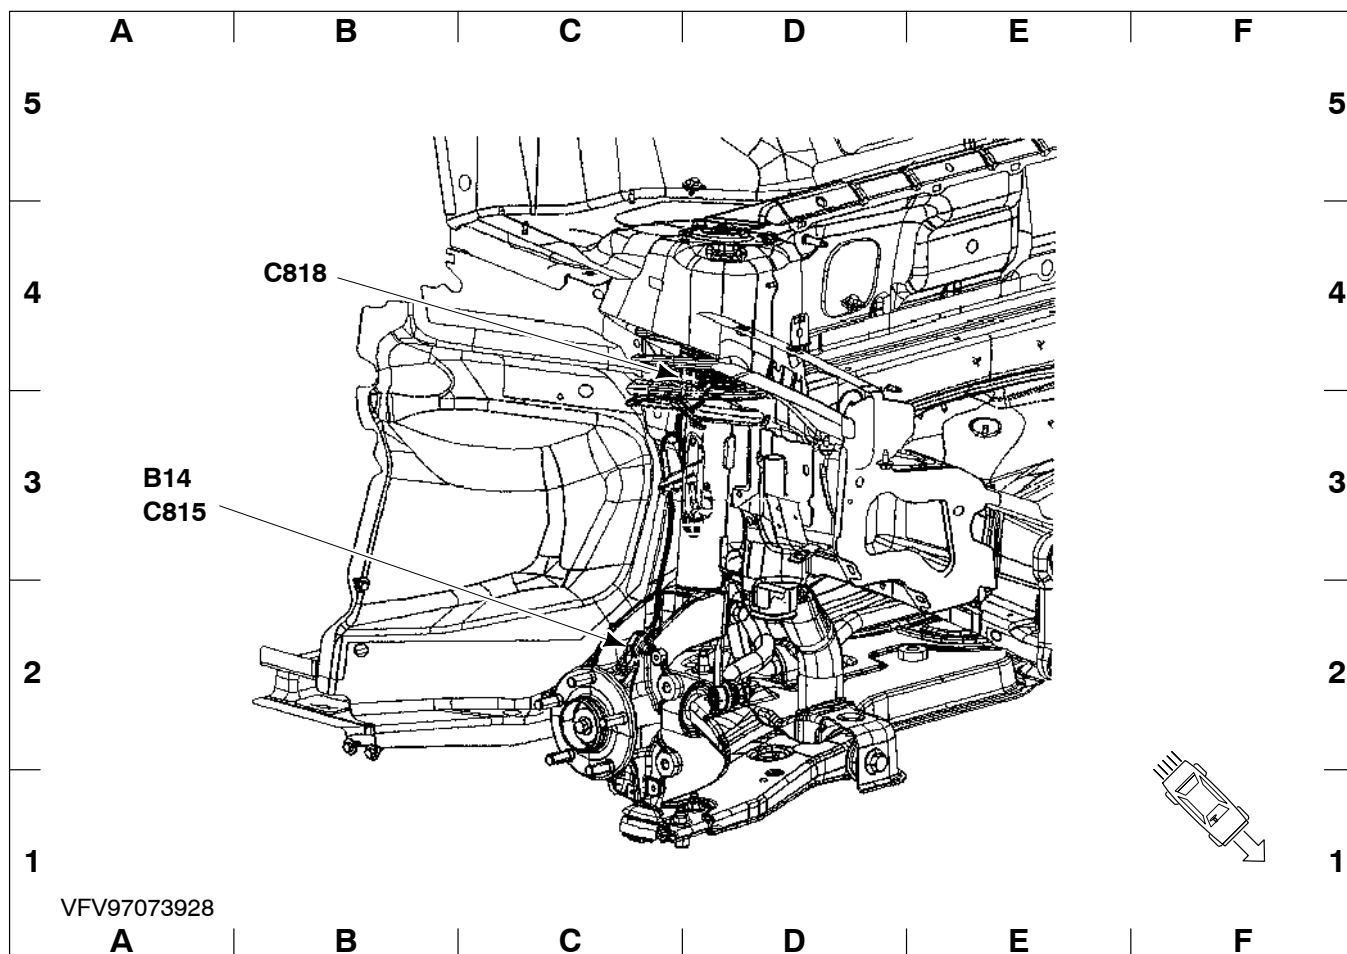


### front axle, RH side

|                                                       |     |                |     |
|-------------------------------------------------------|-----|----------------|-----|
| B14 . . . Wheel speed sensor, RH side front . . . . . | A 3 | C818 . . . . . | B 4 |
| C815 . . . . .                                        | A 3 |                |     |

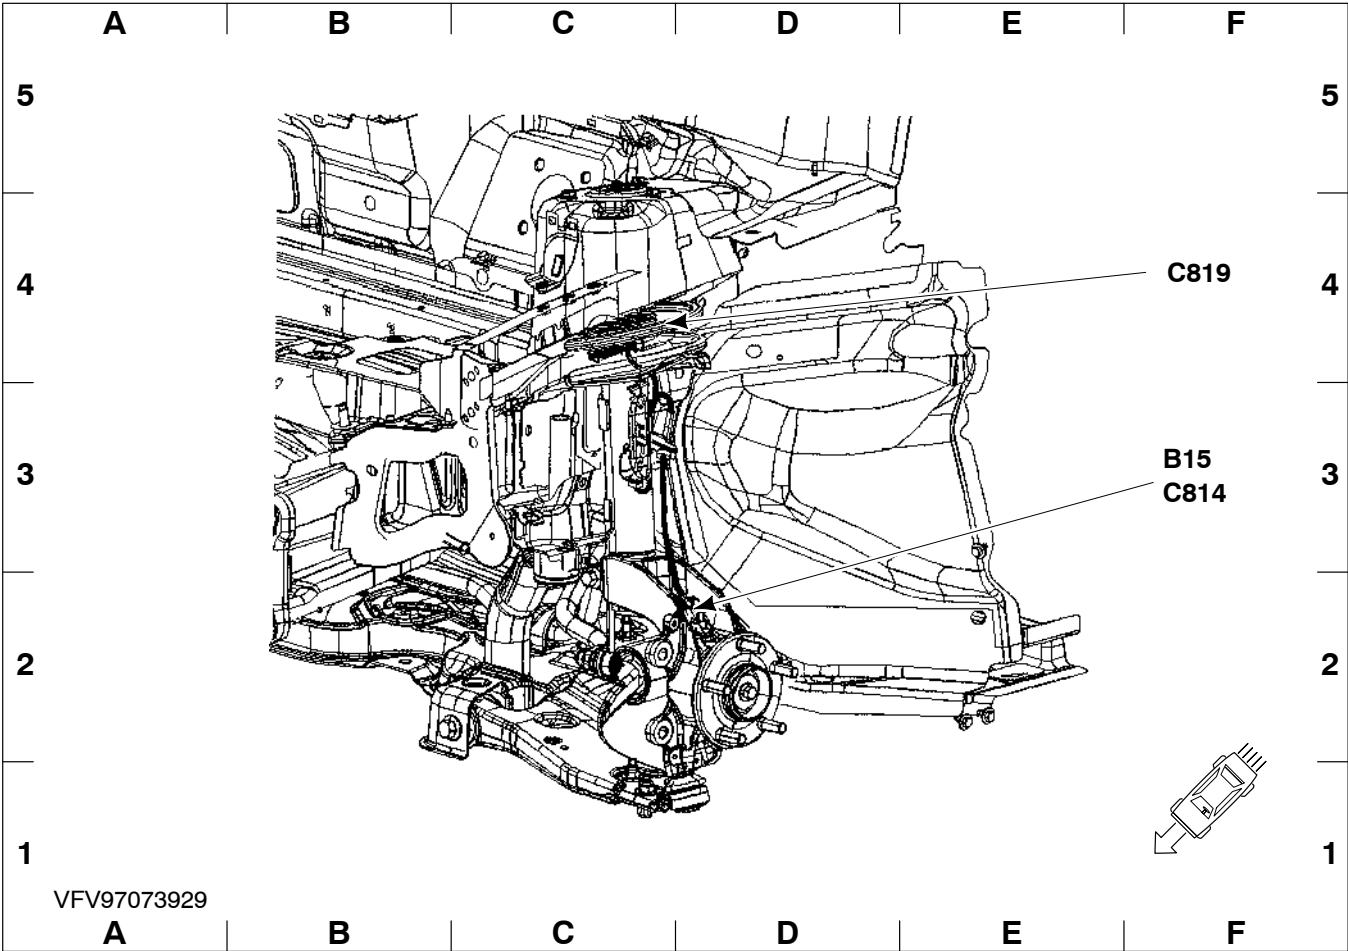


front axle, LH side

- B15 . . Wheel speed sensor, LH side front . . . . . F 3
- C814 . . . . . F 3
- C819 . . . . . F 4

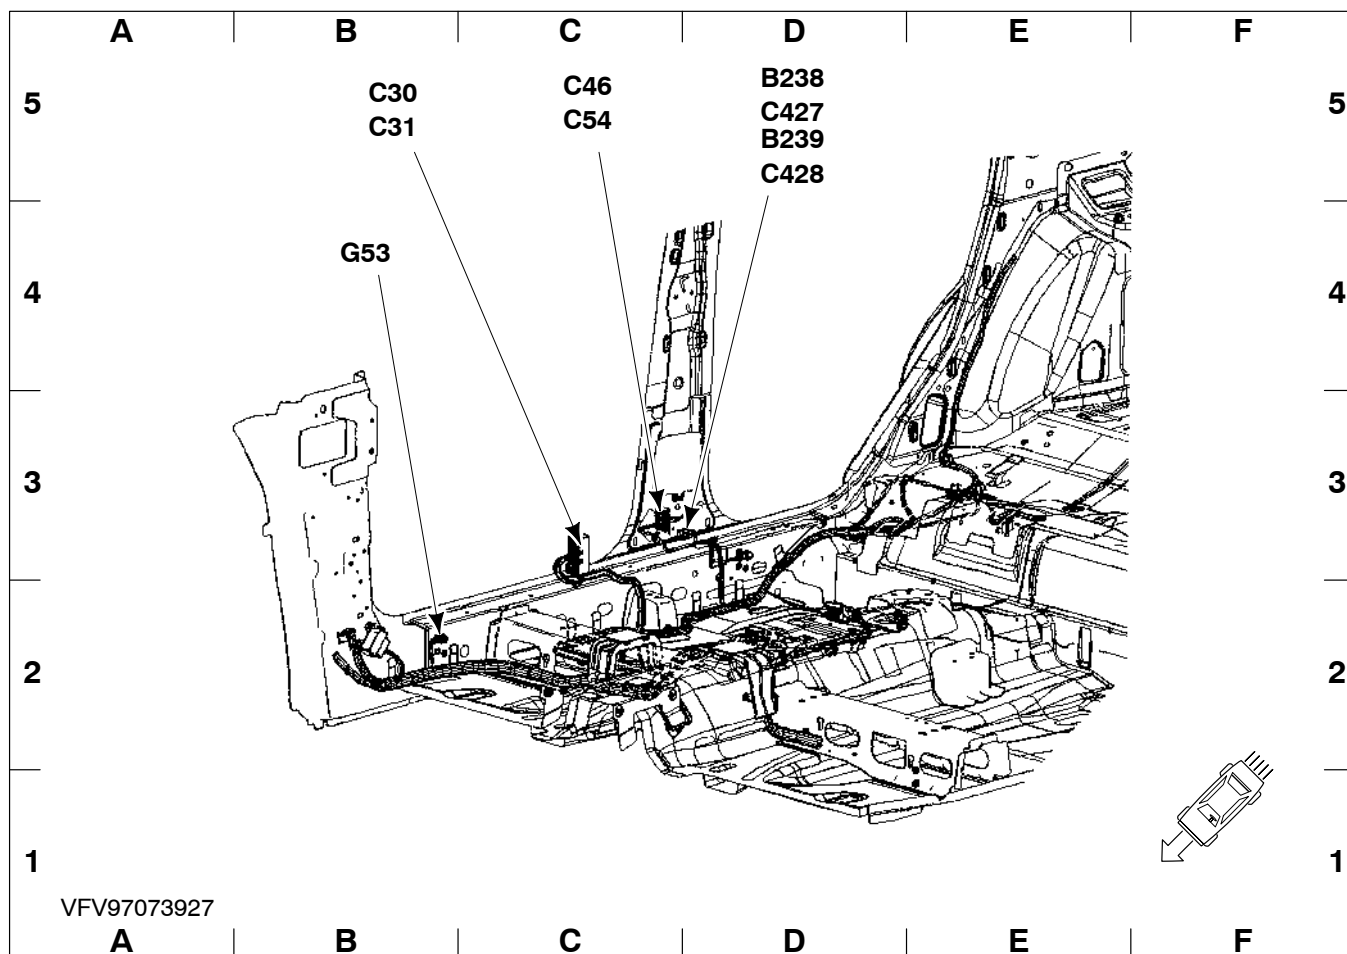

### vehicle floor, RH side


|                                       |     |      |     |
|---------------------------------------|-----|------|-----|
| B238 . Side air bag sensor, driver    | D 5 | C54  | C 5 |
| B239 . Side air bag sensor, passenger | D 5 | C427 | D 5 |
| C30                                   | B 5 | C428 | D 5 |
| C31                                   | B 5 | G53  | B 4 |
| C46                                   | C 5 |      |     |

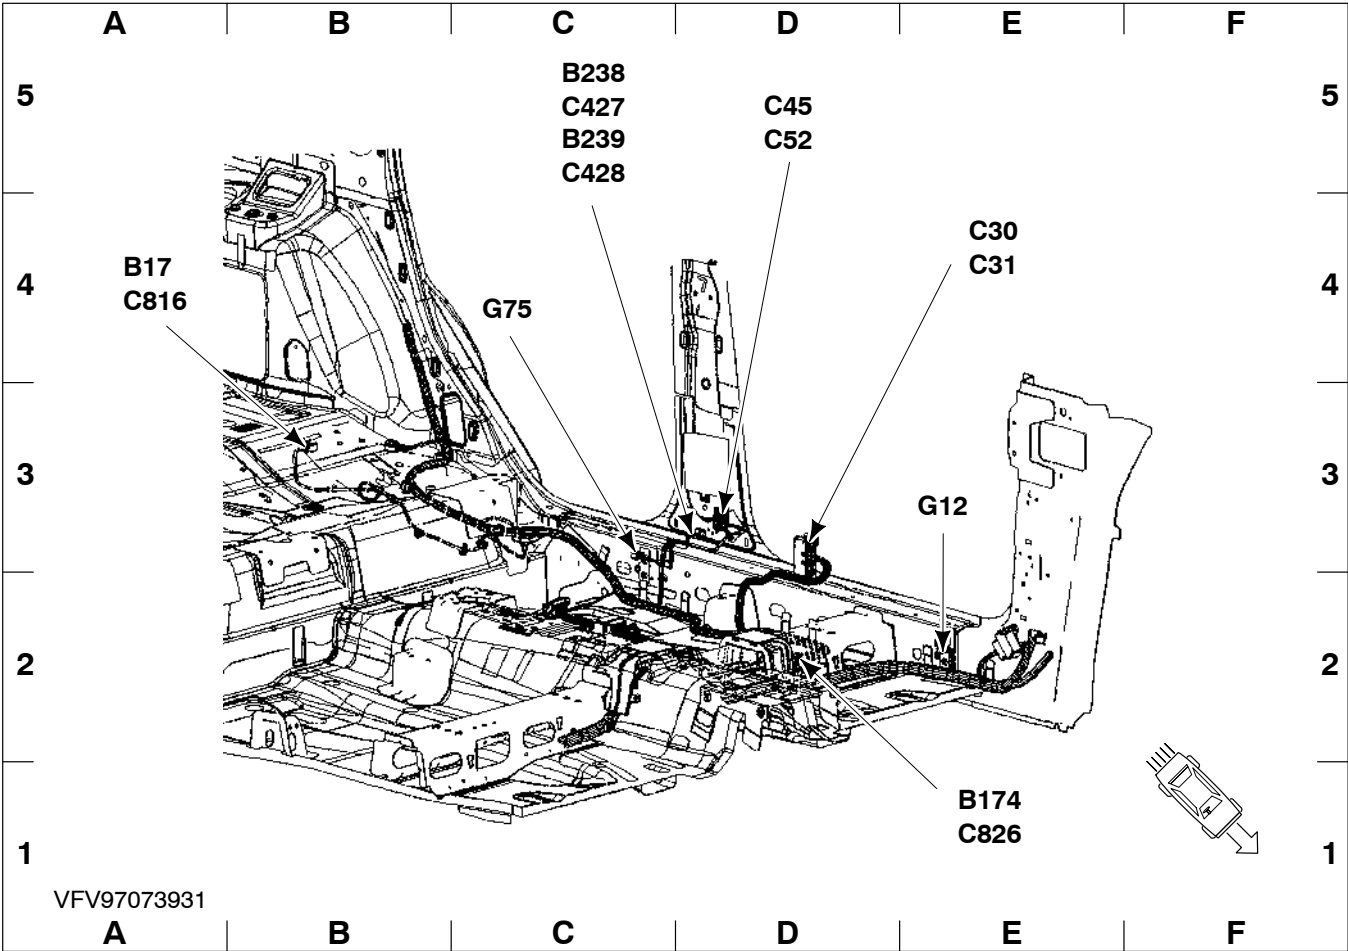

vehicle floor, LH side


|                                                      |     |                |     |
|------------------------------------------------------|-----|----------------|-----|
| B17 . . . Wheel speed sensor, LH side rear . . . . . | A 4 | C52 . . . . .  | D 5 |
| B174 . . . Yaw rate sensor . . . . .                 | E 1 | C427 . . . . . | C 5 |
| B238 . . . Side air bag sensor, driver . . . . .     | C 5 | C428 . . . . . | C 5 |
| B239 . . . Side air bag sensor, passenger . . . . .  | C 5 | C816 . . . . . | A 4 |
| C30 . . . . .                                        | E 4 | C826 . . . . . | E 1 |
| C31 . . . . .                                        | E 4 | G12 . . . . .  | E 3 |
| C45 . . . . .                                        | D 5 | G75 . . . . .  | C 4 |



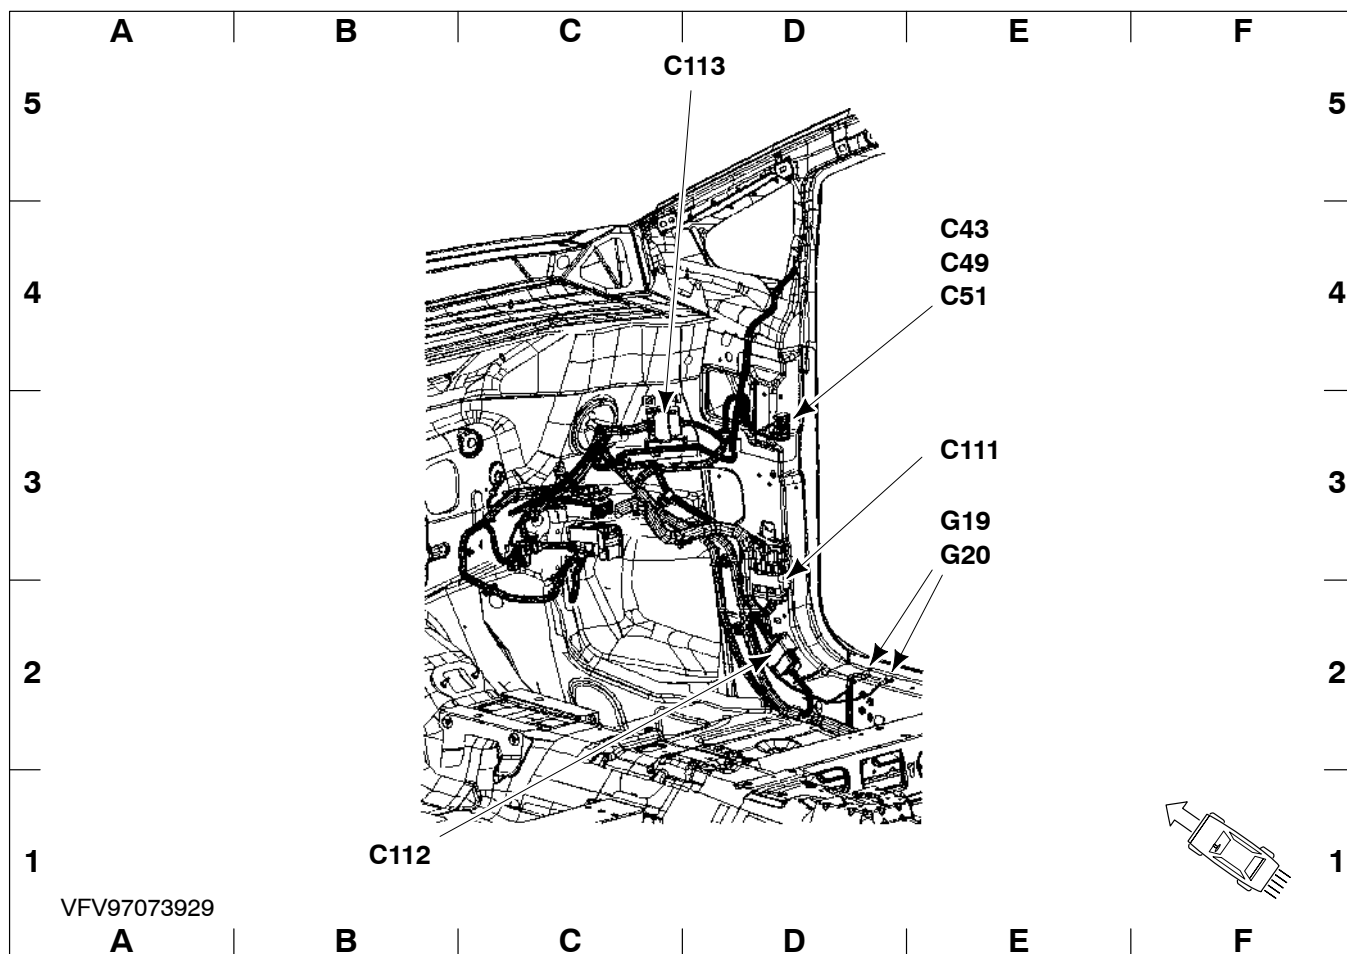


### RH A-pillar, LHD

|            |     |            |     |
|------------|-----|------------|-----|
| C43 .....  | E 4 | C112 ..... | B 1 |
| C49 .....  | E 4 | C113 ..... | D 5 |
| C51 .....  | E 4 | G19 .....  | E 3 |
| C111 ..... | E 3 | G20 .....  | E 3 |

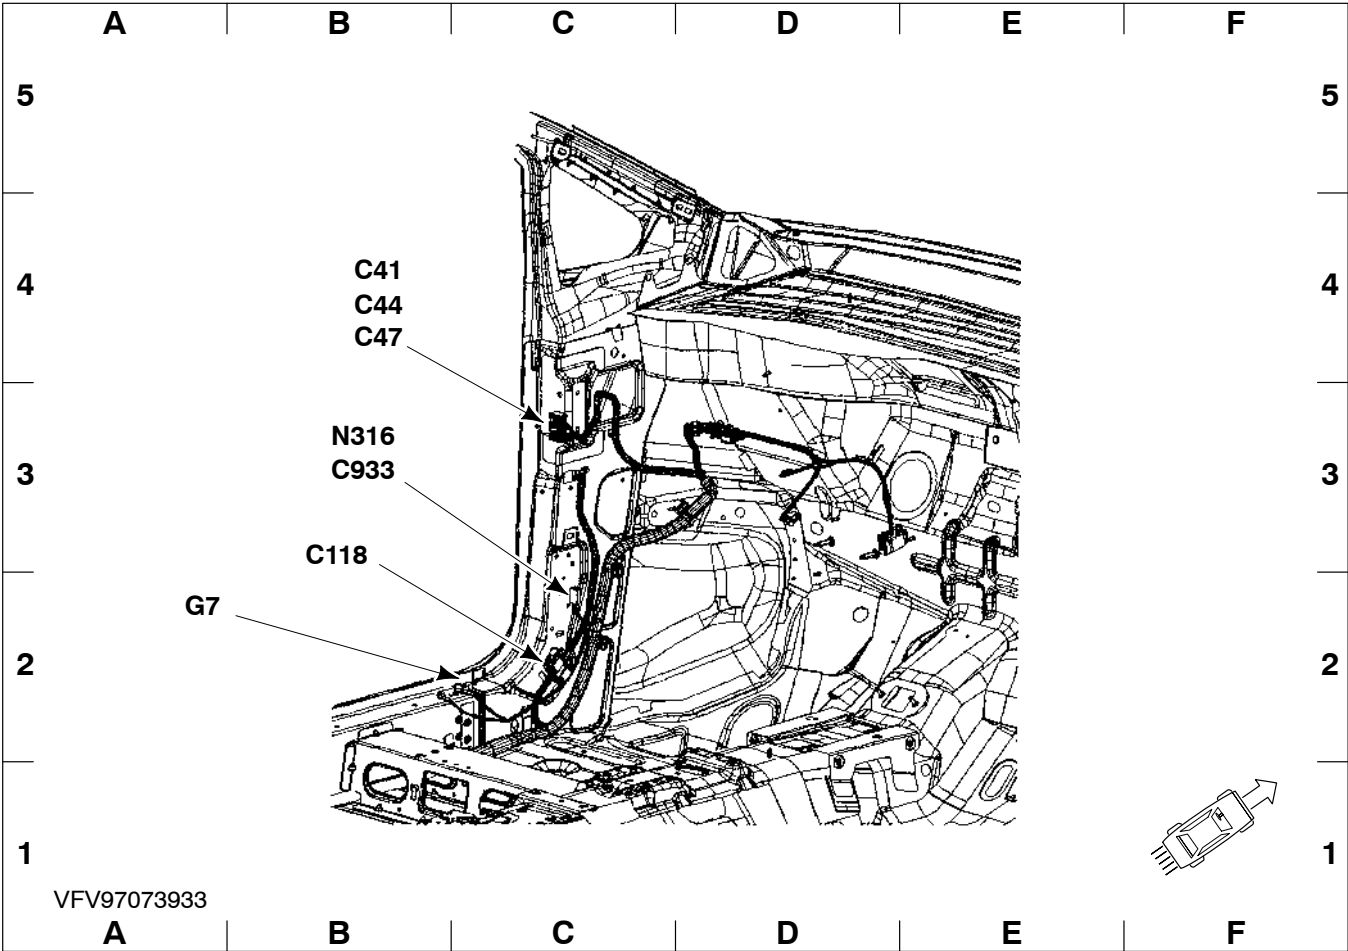


LH A-pillar, LHD

|            |     |                                                |     |
|------------|-----|------------------------------------------------|-----|
| C41 .....  | B 4 | C933 .....                                     | B 3 |
| C44 .....  | B 4 | G7 .....                                       | A 2 |
| C47 .....  | B 4 | N316 . Inertia Fuel Shutoff (IFS) switch ..... | B 3 |
| C118 ..... | B 3 |                                                |     |

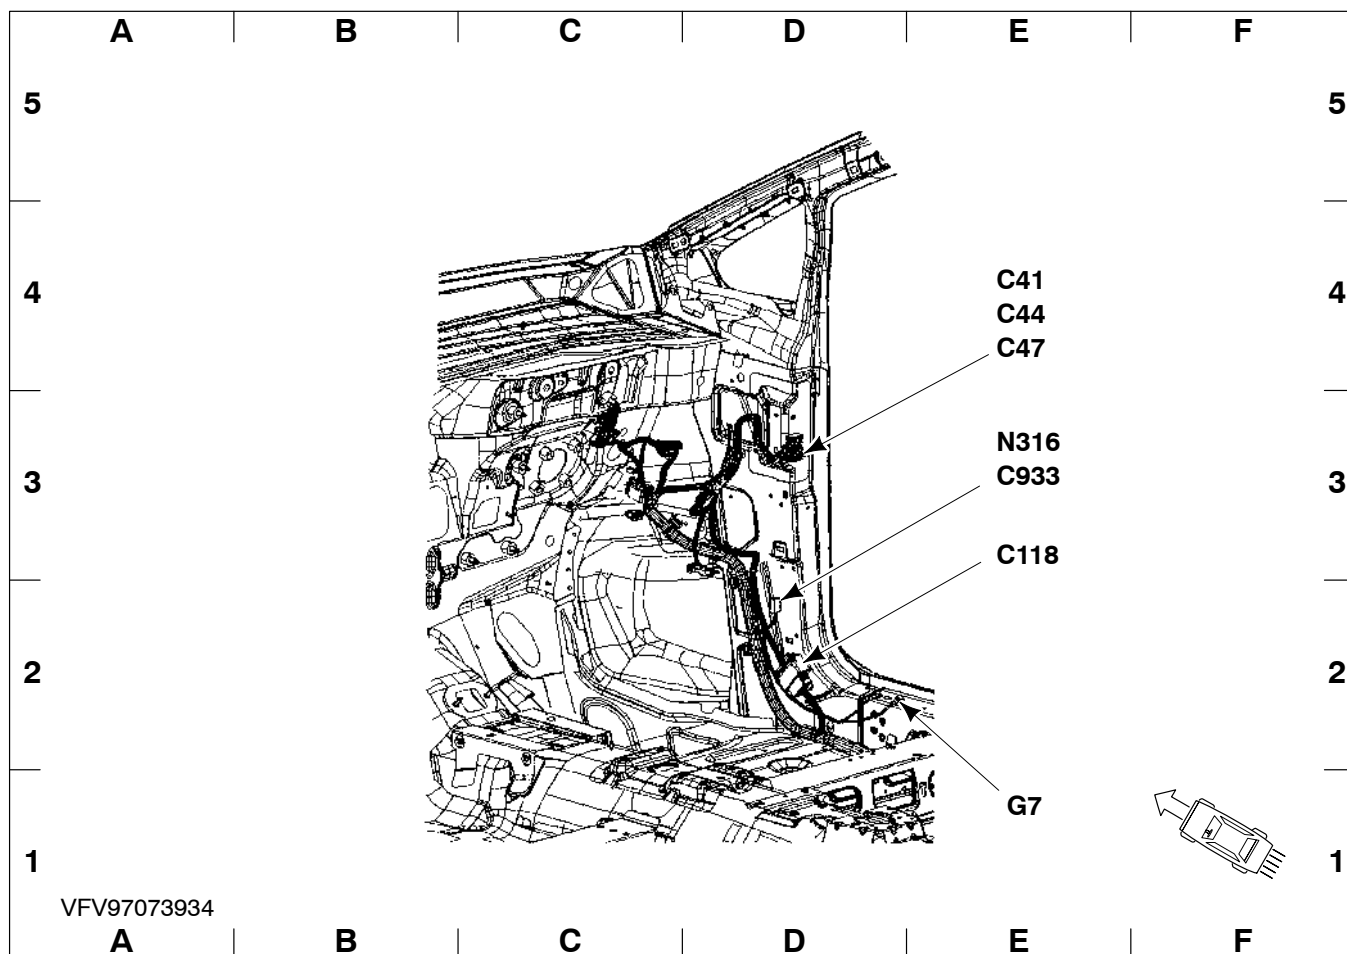


### RH A-pillar, RHD

|            |     |                                                |     |
|------------|-----|------------------------------------------------|-----|
| C41 .....  | E 4 | C933 .....                                     | E 3 |
| C44 .....  | E 4 | G7 .....                                       | E 1 |
| C47 .....  | E 4 | N316 . Inertia Fuel Shutoff (IFS) switch ..... | E 3 |
| C118 ..... | E 3 |                                                |     |

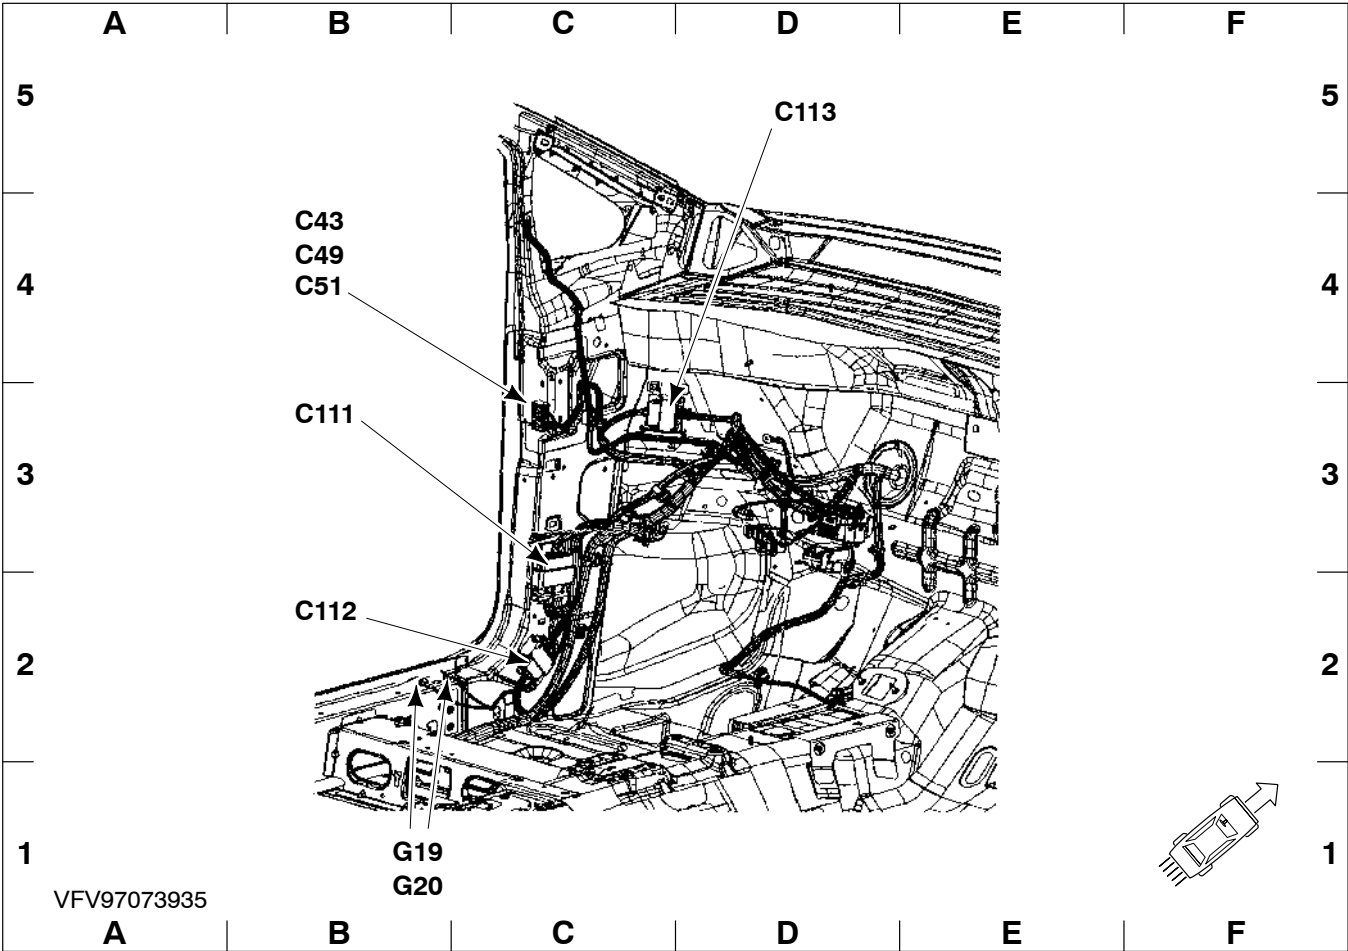


LH A-pillar, RHD

|            |     |            |     |
|------------|-----|------------|-----|
| C43 .....  | B 4 | C112 ..... | B 2 |
| C49 .....  | B 4 | C113 ..... | D 5 |
| C51 .....  | B 4 | G19 .....  | B 1 |
| C111 ..... | B 3 | G20 .....  | B 1 |

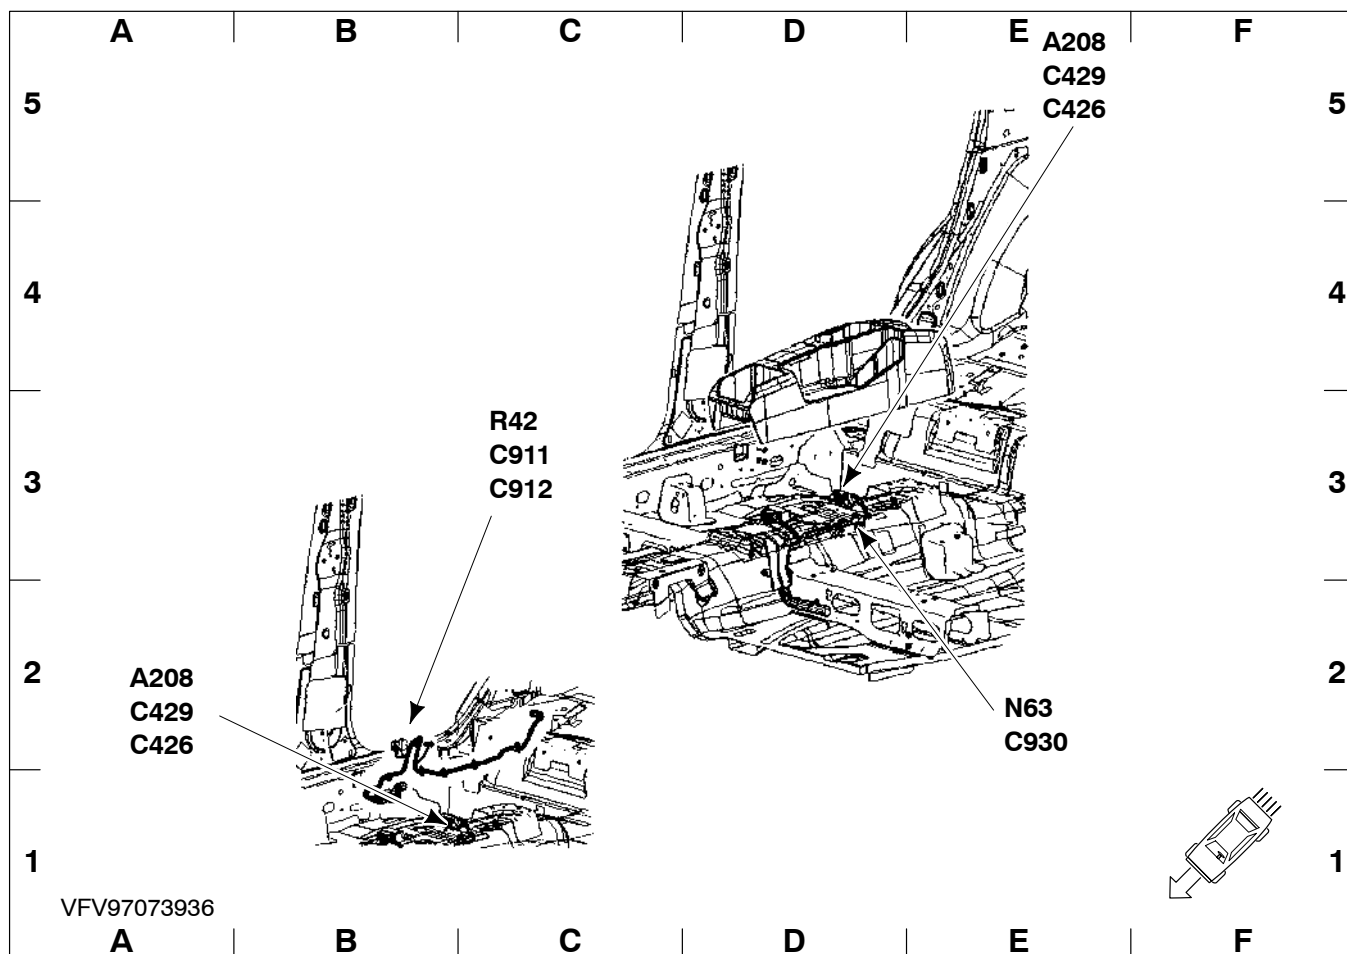


### under centre console

|                                                  |     |                                        |     |
|--------------------------------------------------|-----|----------------------------------------|-----|
| A208 . Restraints Control Module (RCM) . . . . . | E 5 | C911 . . . . .                         | C 3 |
| A208 . Restraints Control Module (RCM) . . . . . | A 2 | C912 . . . . .                         | C 3 |
| C426 . . . . .                                   | E 5 | C930 . . . . .                         | E 2 |
| C426 . . . . .                                   | A 2 | N63 . . Parking brake switch . . . . . | E 2 |
| C429 . . . . .                                   | E 5 | R42 . . Cigar lighter, front . . . . . | C 3 |
| C429 . . . . .                                   | A 2 |                                        |     |

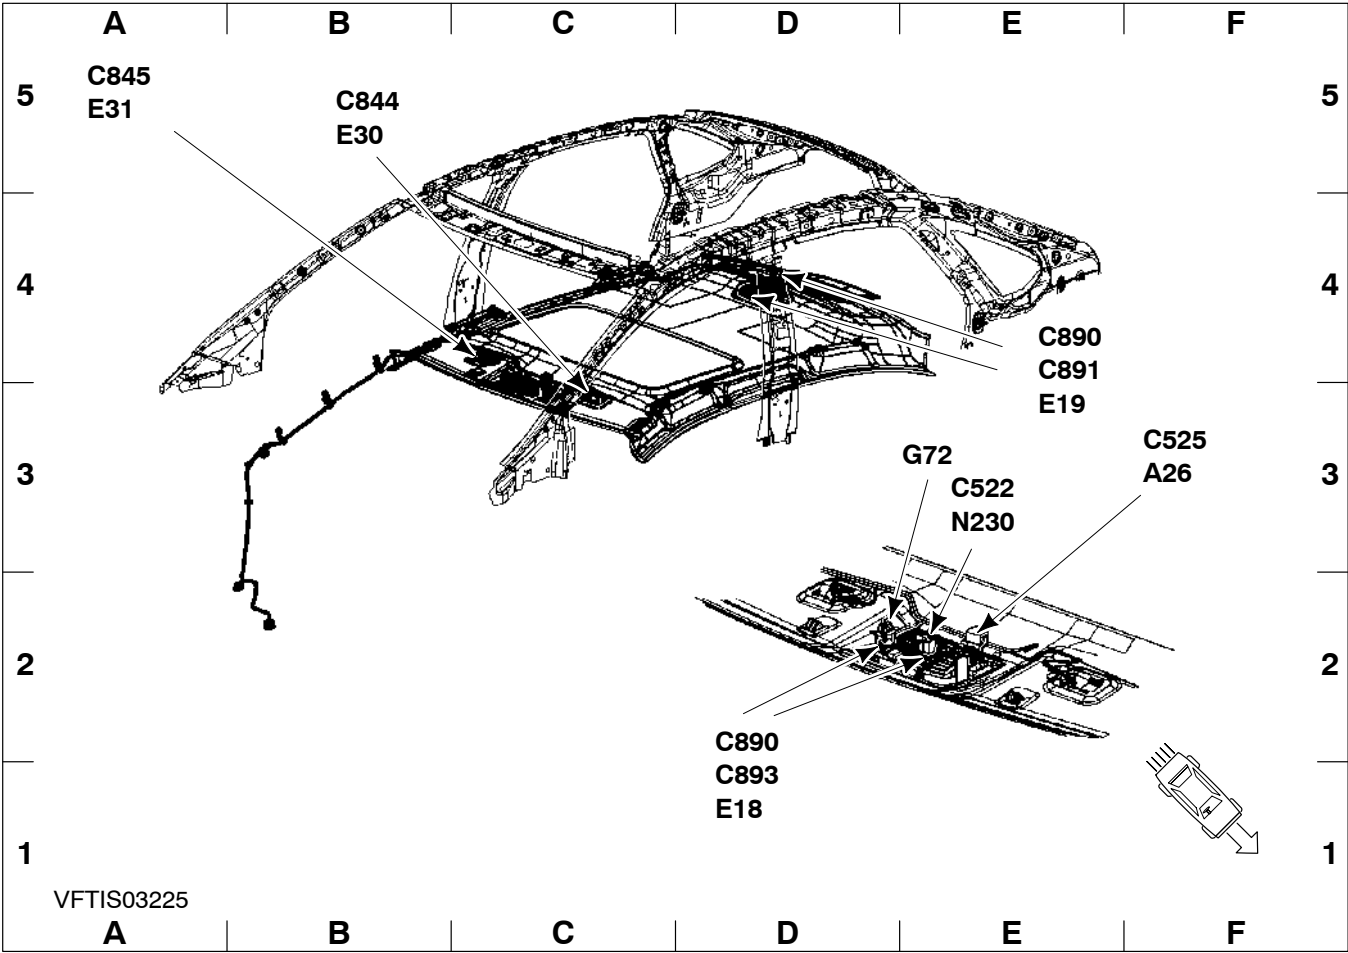


roof, LHD, 4-door model

|                                               |     |                                                    |     |
|-----------------------------------------------|-----|----------------------------------------------------|-----|
| A26 . . . Roof opening panel module . . . . . | F 3 | C893 . . . . .                                     | D 1 |
| C522 . . . . .                                | E 3 | E18 . . Interior lamp, front . . . . .             | D 1 |
| C525 . . . . .                                | F 3 | E19 . . Interior lamp, rear . . . . .              | E 3 |
| C844 . . . . .                                | B 5 | E30 . . Vanity mirror lamp, LH side . . . . .      | B 5 |
| C845 . . . . .                                | A 5 | E31 . . Vanity mirror lamp, RH side . . . . .      | A 5 |
| C890 . . . . .                                | E 4 | G72 . . . . .                                      | E 3 |
| C890 . . . . .                                | D 2 | N230 . Roof opening panel control switch . . . . . | E 3 |
| C891 . . . . .                                | E 4 |                                                    |     |

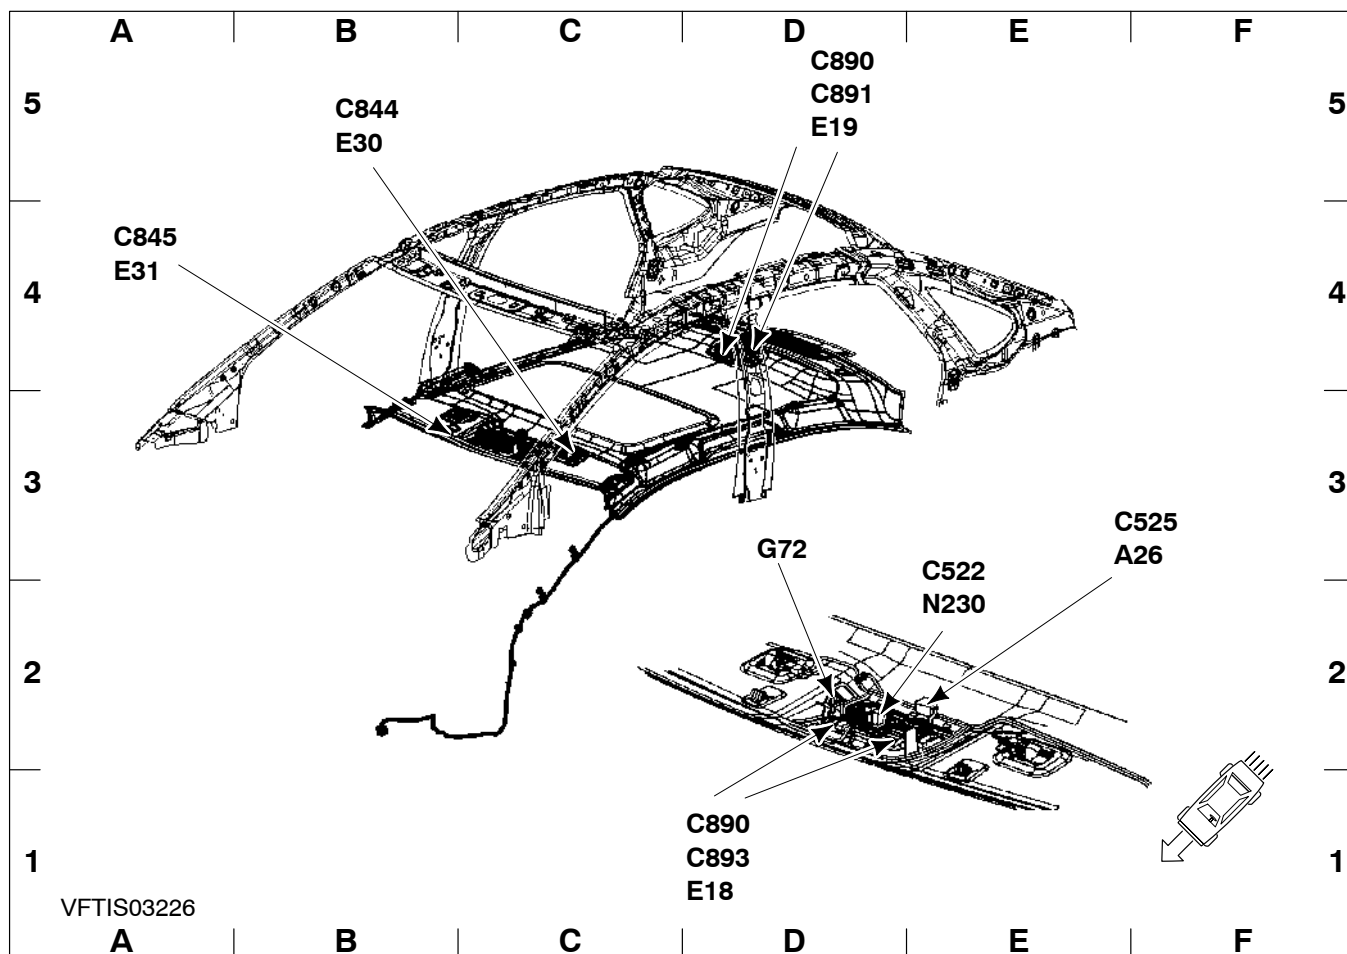

### roof, RHD, 4-door model


|                                               |     |                                                    |     |
|-----------------------------------------------|-----|----------------------------------------------------|-----|
| A26 . . . Roof opening panel module . . . . . | F 3 | C893 . . . . .                                     | D 1 |
| C522 . . . . .                                | E 3 | E18 . . Interior lamp, front . . . . .             | D 1 |
| C525 . . . . .                                | F 3 | E19 . . Interior lamp, rear . . . . .              | D 5 |
| C844 . . . . .                                | B 5 | E30 . . Vanity mirror lamp, LH side . . . . .      | B 5 |
| C845 . . . . .                                | A 4 | E31 . . Vanity mirror lamp, RH side . . . . .      | A 4 |
| C890 . . . . .                                | D 1 | G72 . . . . .                                      | D 3 |
| C890 . . . . .                                | D 5 | N230 . Roof opening panel control switch . . . . . | E 2 |
| C891 . . . . .                                | D 5 |                                                    |     |

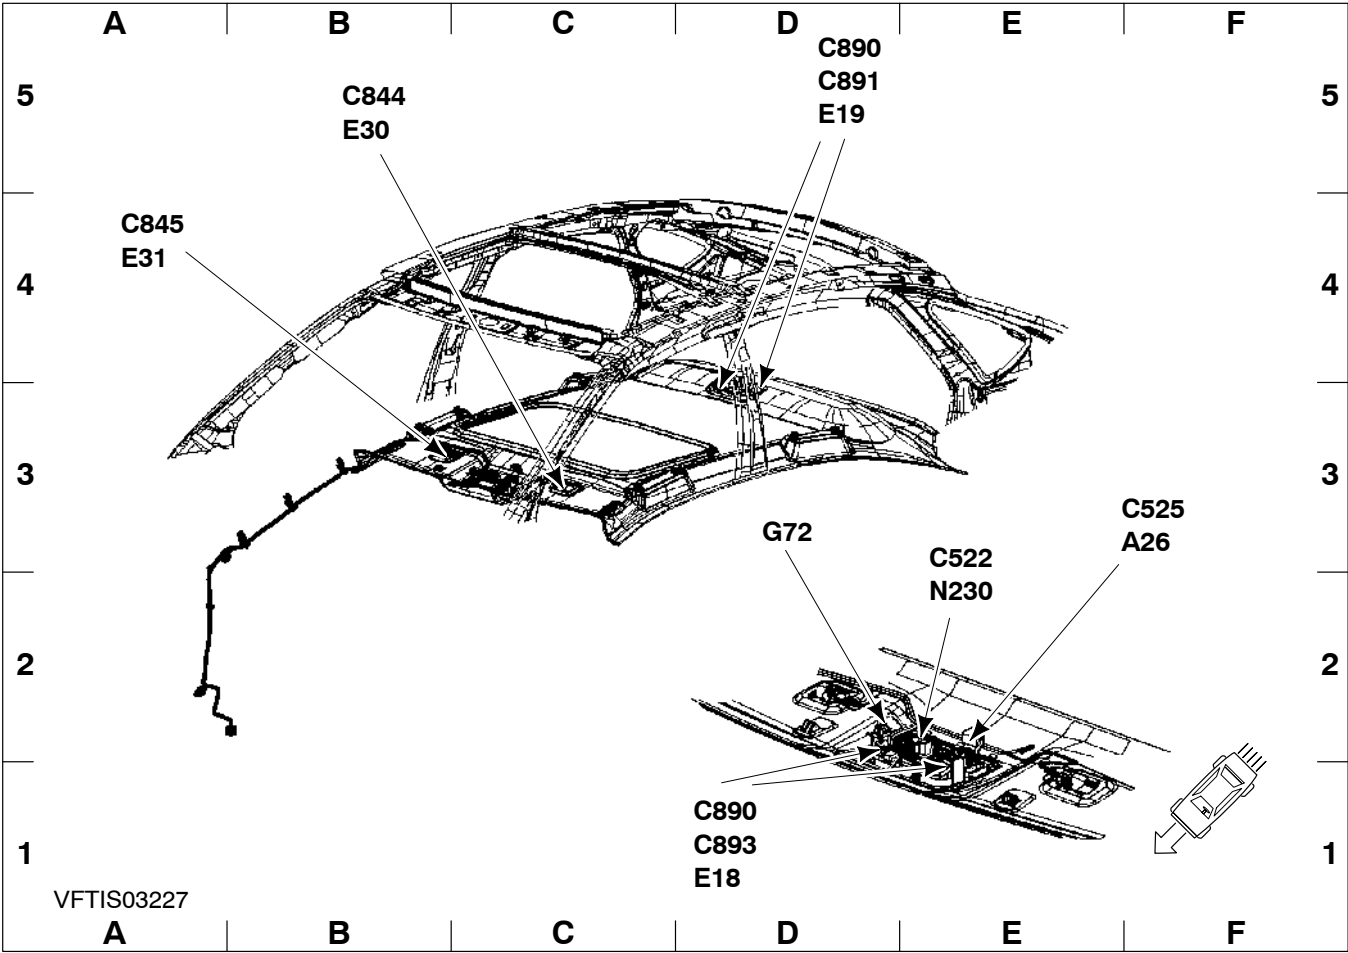

roof, LHD, 5-door model


|                                               |     |                                                    |     |
|-----------------------------------------------|-----|----------------------------------------------------|-----|
| A26 . . . Roof opening panel module . . . . . | F 3 | C893 . . . . .                                     | D 1 |
| C522 . . . . .                                | E 3 | E18 . . Interior lamp, front . . . . .             | D 1 |
| C525 . . . . .                                | F 3 | E19 . . Interior lamp, rear . . . . .              | D 5 |
| C844 . . . . .                                | B 5 | E30 . . Vanity mirror lamp, LH side . . . . .      | B 5 |
| C845 . . . . .                                | A 4 | E31 . . Vanity mirror lamp, RH side . . . . .      | A 4 |
| C890 . . . . .                                | D 1 | G72 . . . . .                                      | D 3 |
| C890 . . . . .                                | D 5 | N230 . Roof opening panel control switch . . . . . | E 2 |
| C891 . . . . .                                | D 5 |                                                    |     |



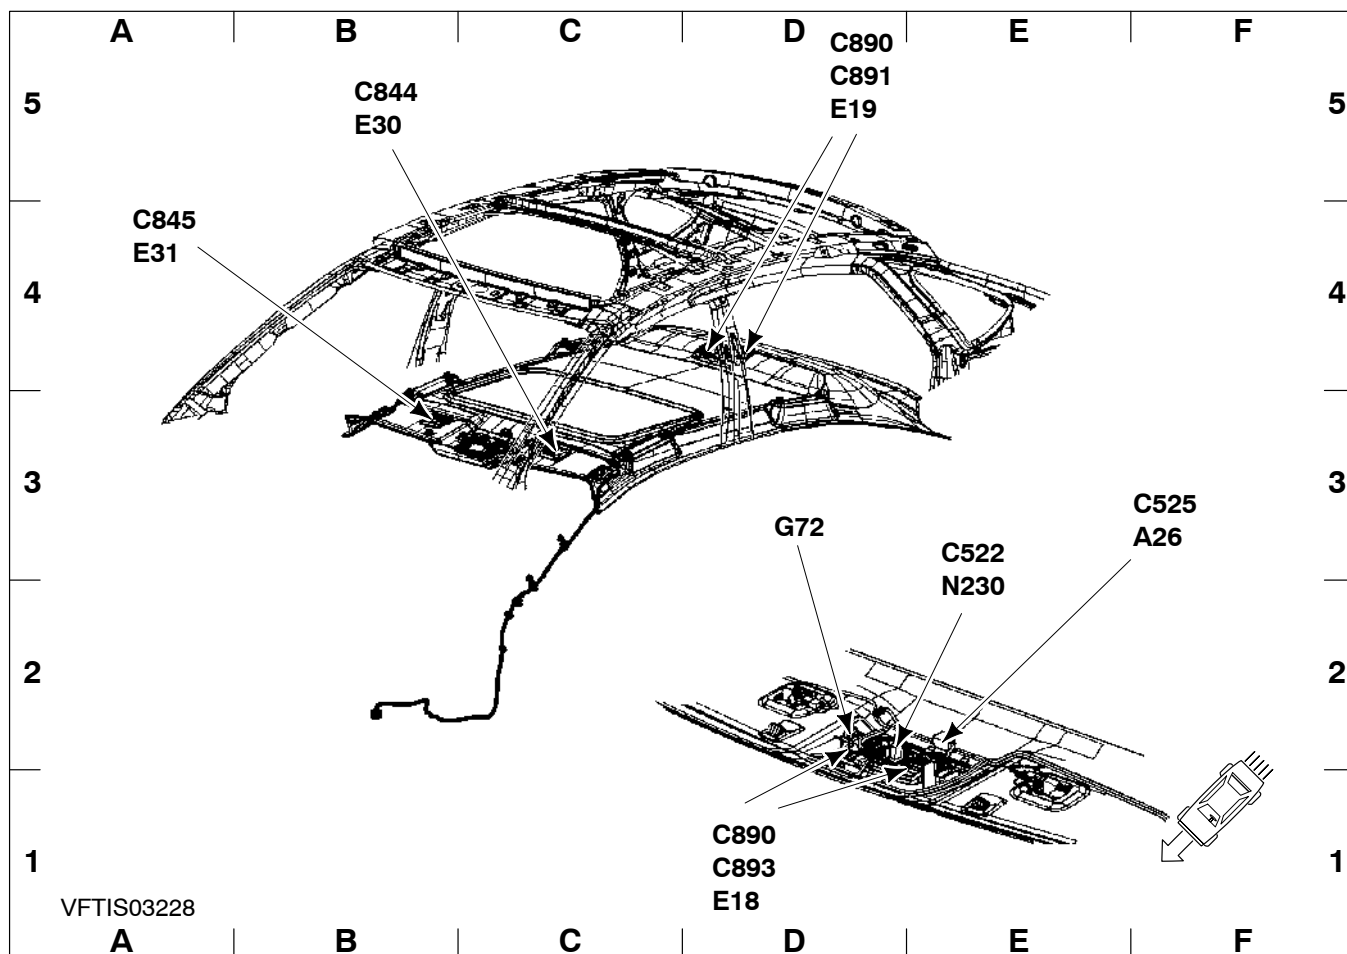


### roof, RHD, 5-door model

|                                               |     |                                                    |     |
|-----------------------------------------------|-----|----------------------------------------------------|-----|
| A26 . . . Roof opening panel module . . . . . | F 3 | C893 . . . . .                                     | D 1 |
| C522 . . . . .                                | E 3 | E18 . . Interior lamp, front . . . . .             | D 1 |
| C525 . . . . .                                | F 3 | E19 . . Interior lamp, rear . . . . .              | D 5 |
| C844 . . . . .                                | B 5 | E30 . . Vanity mirror lamp, LH side . . . . .      | B 5 |
| C845 . . . . .                                | A 4 | E31 . . Vanity mirror lamp, RH side . . . . .      | A 4 |
| C890 . . . . .                                | D 1 | G72 . . . . .                                      | D 3 |
| C890 . . . . .                                | D 5 | N230 . Roof opening panel control switch . . . . . | E 2 |
| C891 . . . . .                                | D 5 |                                                    |     |

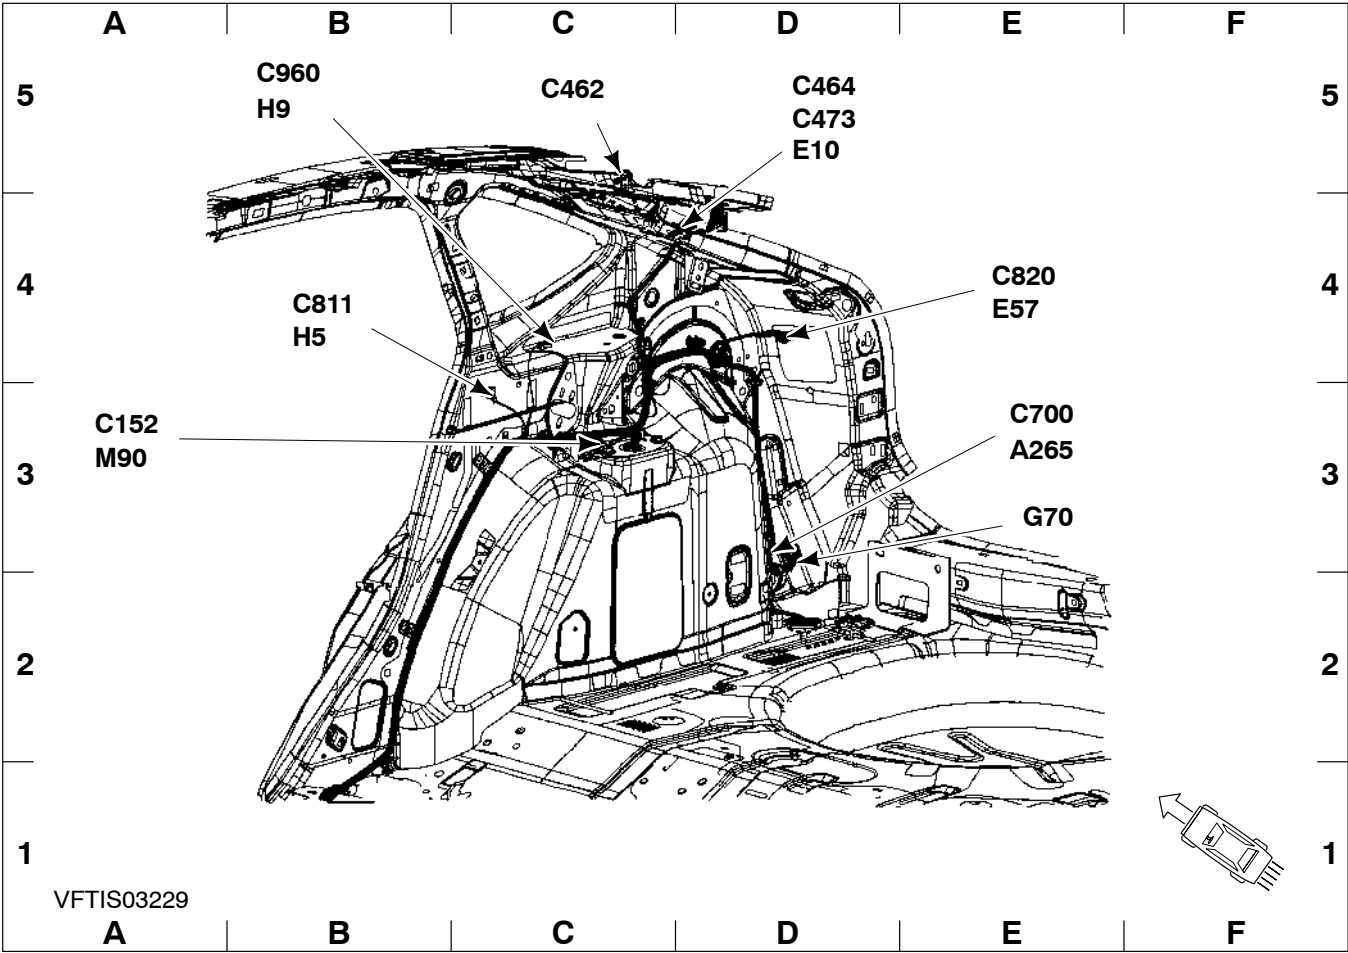


Luggage compartment, RH side, 5-door model

|                           |     |                                    |     |
|---------------------------|-----|------------------------------------|-----|
| A265 . Parking aid module | E 3 | C960                               | B 5 |
| C152                      | A 3 | E10 .. Rear lamp assembly, RH side | D 5 |
| C462                      | C 5 | E57 .. Luggage compartment lamp    | E 4 |
| C464                      | D 5 | G70                                | E 3 |
| C473                      | D 5 | H5 ... Anti-theft alarm horn       | B 4 |
| C700                      | E 3 | H9 ... Buzzer                      | B 5 |
| C811                      | B 4 | M90 . Fuel filler door lock motor  | A 3 |
| C820                      | E 4 |                                    |     |

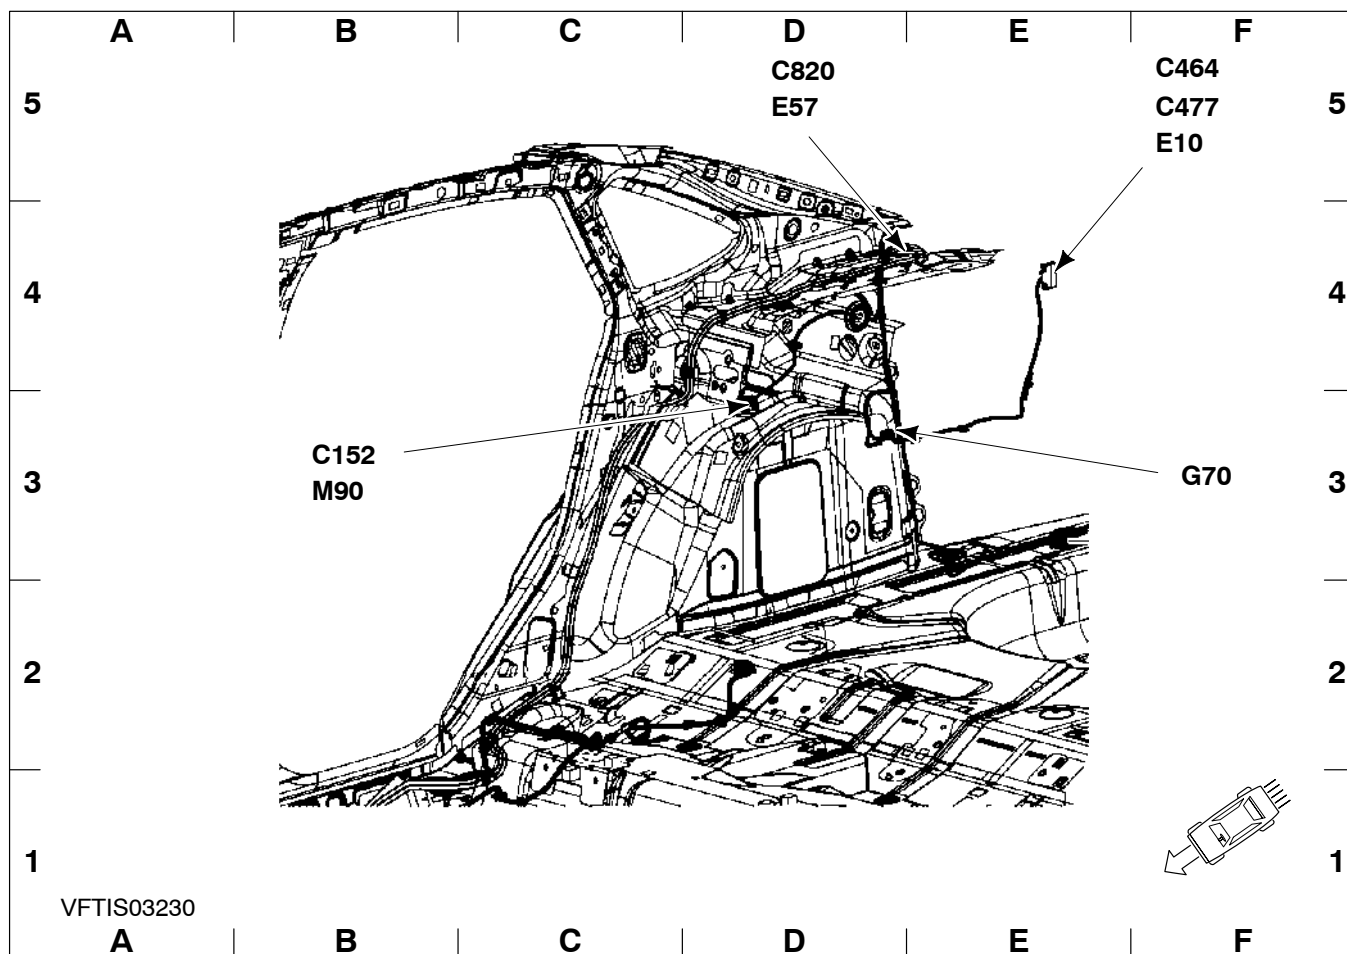


### Luggage compartment, RH side, 4-door model

|            |     |                                          |     |
|------------|-----|------------------------------------------|-----|
| C152 ..... | B 3 | E10 .. Rear lamp assembly, RH side ..... | F 5 |
| C464 ..... | F 5 | E57 .. Luggage compartment lamp .....    | D 5 |
| C477 ..... | F 5 | G70 .....                                | F 3 |
| C820 ..... | D 5 | M90 . Fuel filler door lock motor .....  | B 3 |

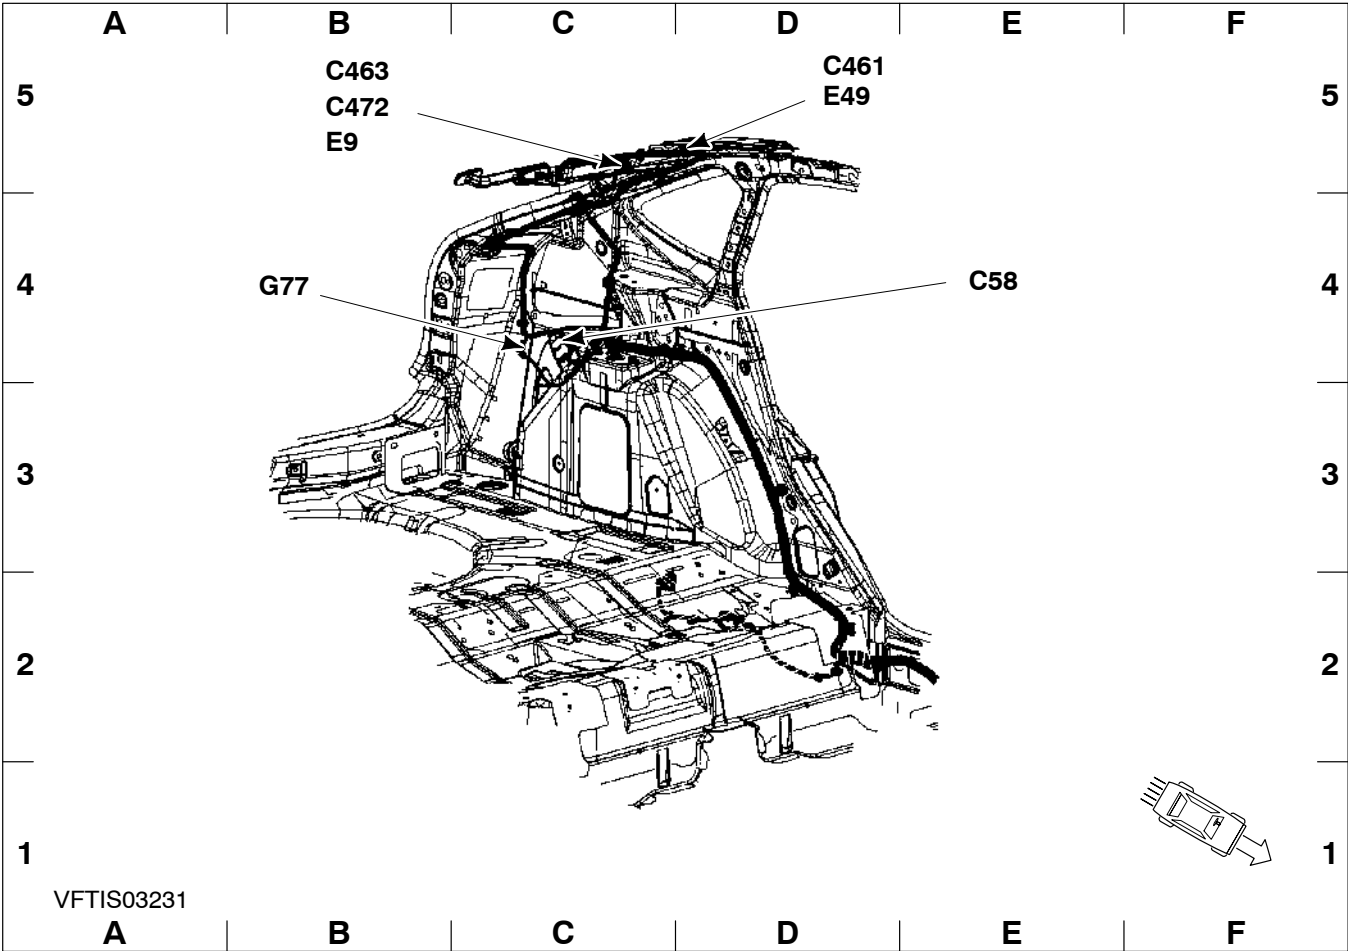


Luggage compartment, LH side, 5-door model

|            |     |                                          |     |
|------------|-----|------------------------------------------|-----|
| C58 .....  | E 4 | E9 ... Rear lamp assembly, LH side ..... | B 5 |
| C461 ..... | D 5 | E49 .. Turn signal lamp, LH rear .....   | D 5 |
| C476 ..... | B 5 | G77 .....                                | B 4 |

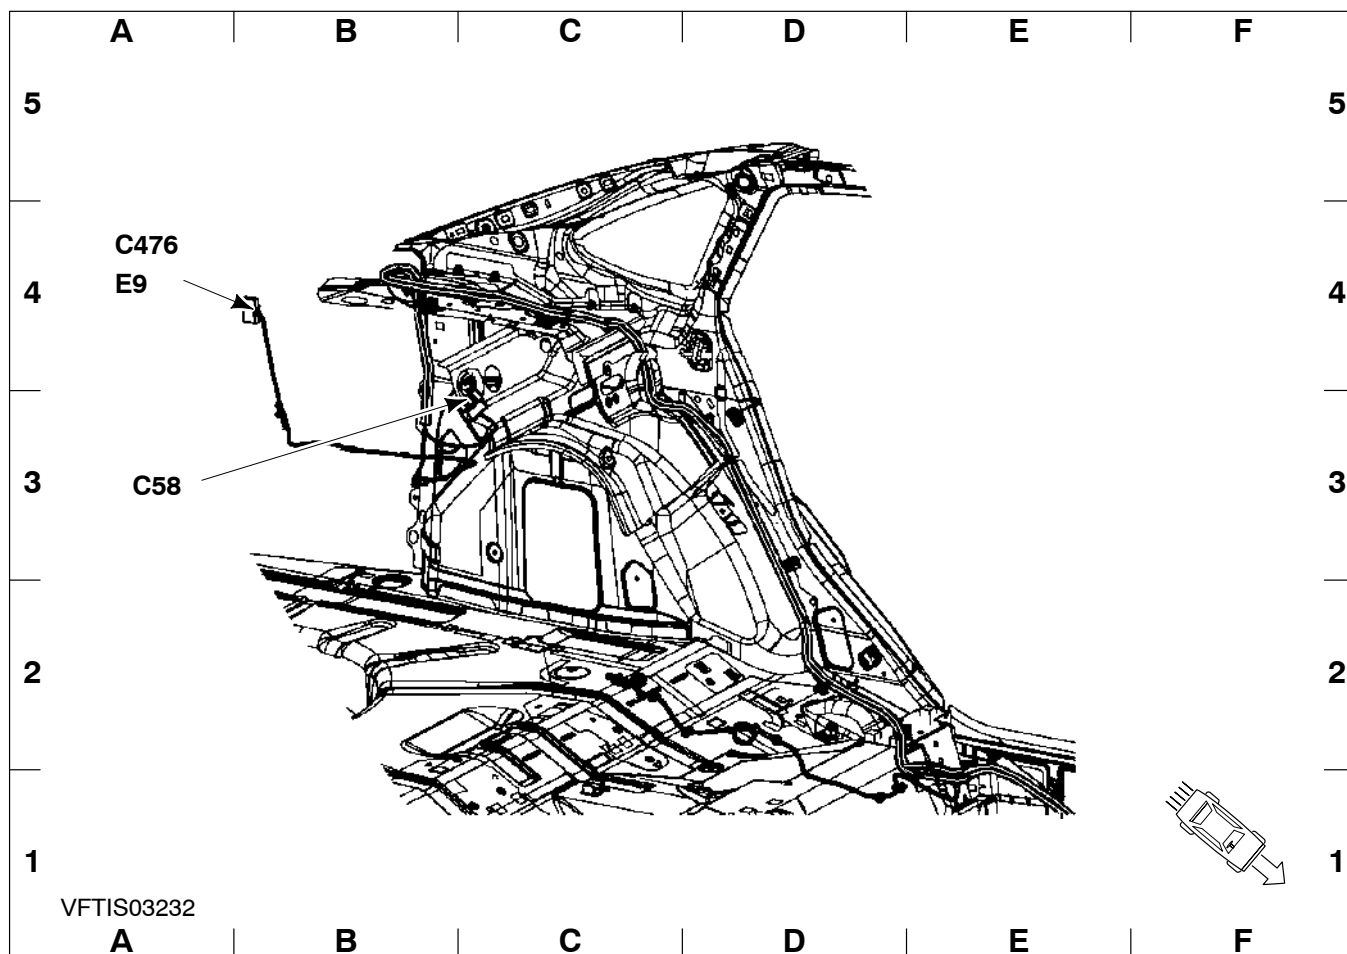


### Luggage compartment, LH side, 4-door model

|            |     |                                          |     |
|------------|-----|------------------------------------------|-----|
| C58 .....  | A 3 | E9 ... Rear lamp assembly, LH side ..... | A 4 |
| C476 ..... | A 4 |                                          |     |

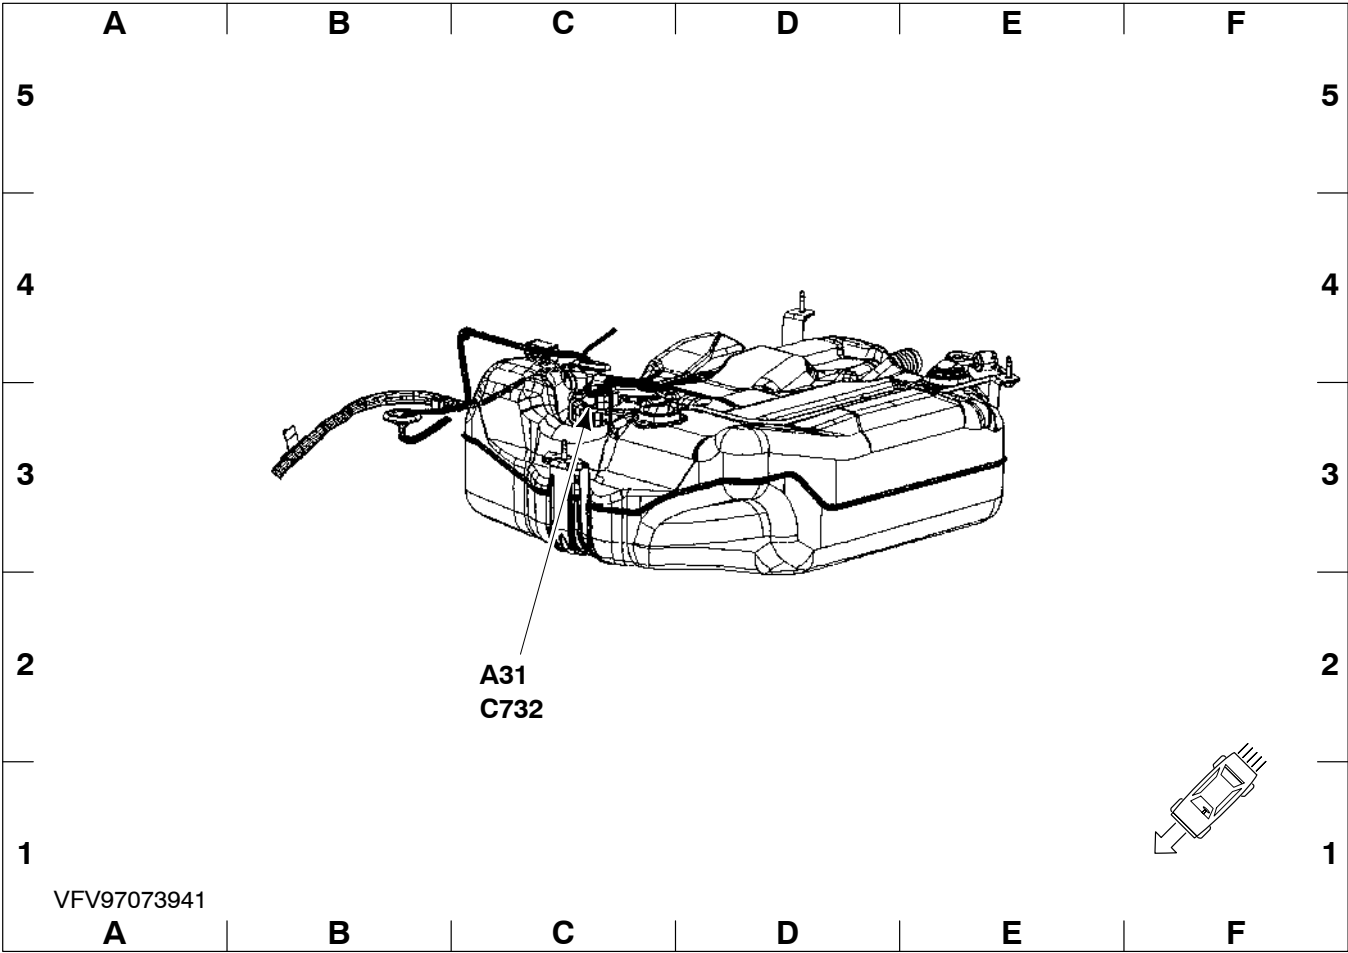


Fuel tank

A31 . . . Fuel tank unit . . . . . C 2      C732 . . . . . C 2

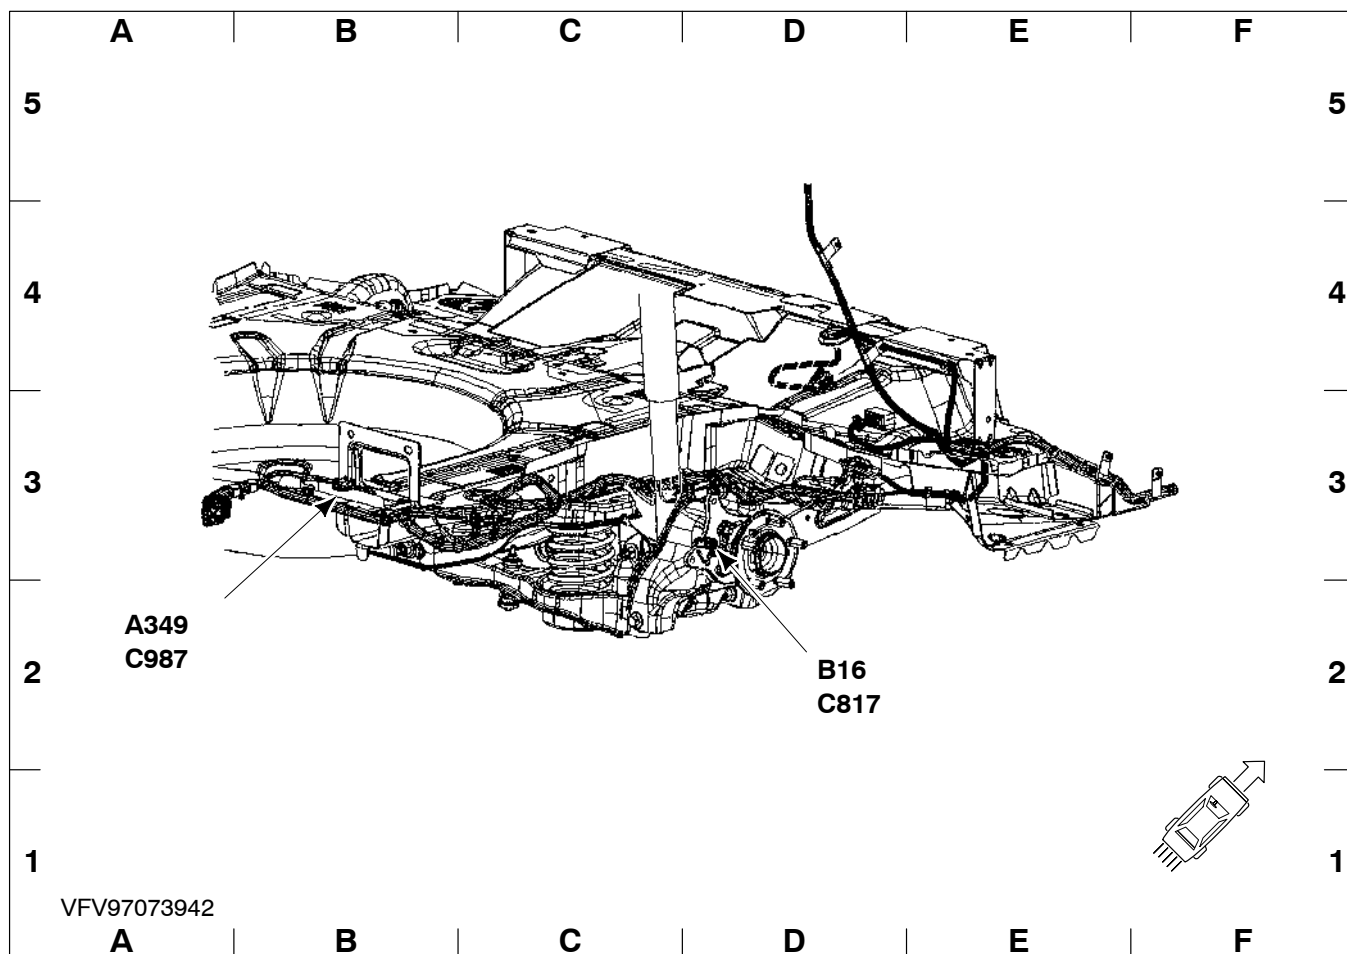

### rear axle


|                                                    |     |                |     |
|----------------------------------------------------|-----|----------------|-----|
| A349 . Fuel additive system pump module . . . .    | A 2 | C817 . . . . . | D 2 |
| B16 . . Wheel speed sensor, RH side rear . . . . . | D 2 | C987 . . . . . | A 2 |

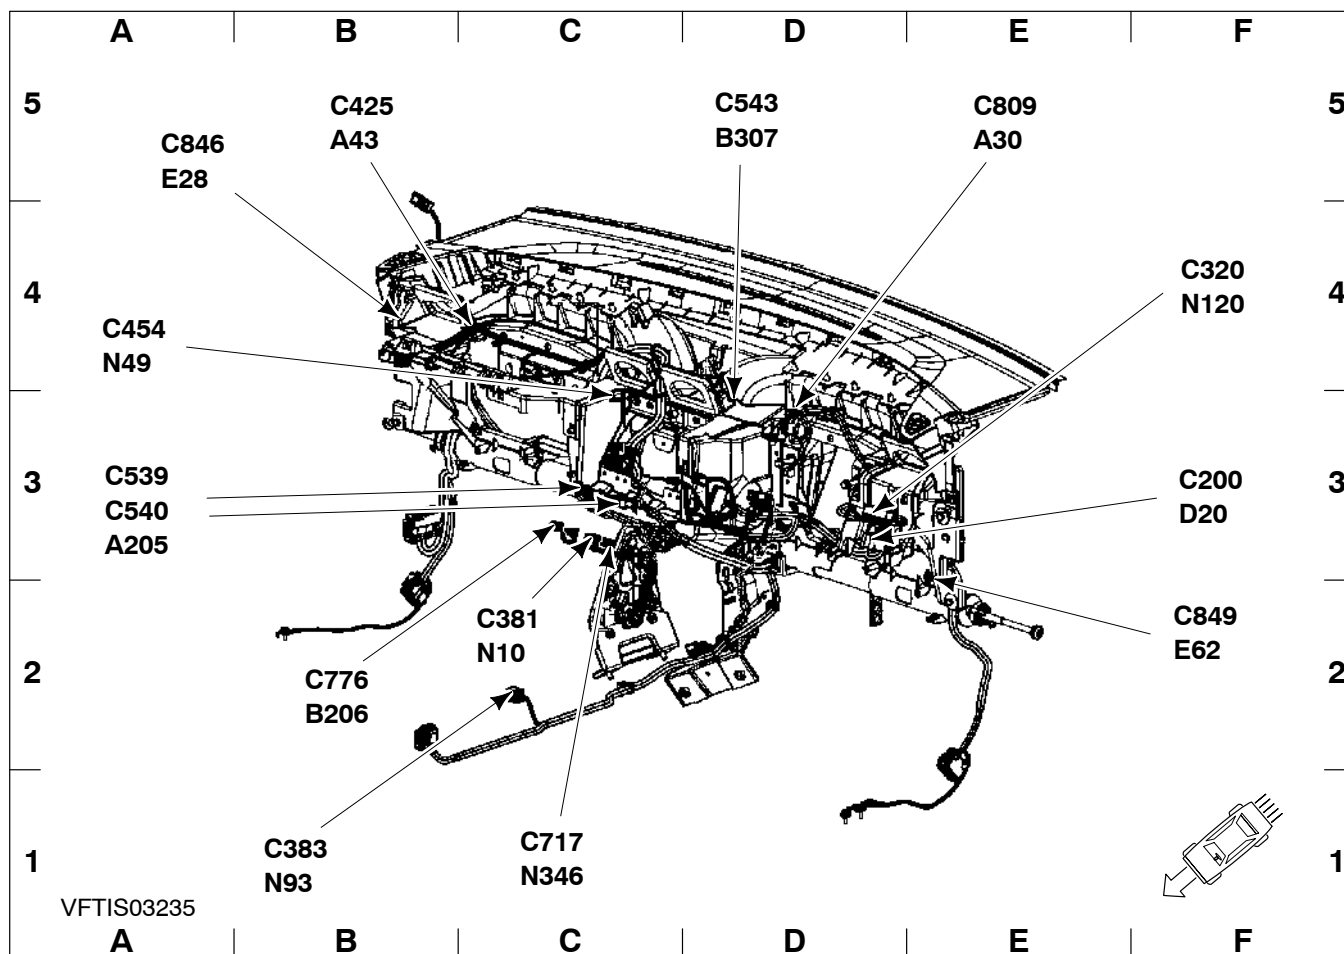

### behind dash panel, RHD


|                                                                             |     |                                                                |     |
|-----------------------------------------------------------------------------|-----|----------------------------------------------------------------|-----|
| A30 . . . Instrument cluster . . . . .                                      | E 5 | C543 . . . . .                                                 | D 5 |
| A43 . . . Passenger air bag unit . . . . .                                  | B 5 | C717 . . . . .                                                 | C 1 |
| A205 . . . Electronic Automatic Temperature Control (EATC) module . . . . . | A 3 | C776 . . . . .                                                 | B 2 |
| B206 . . . In-vehicle temperature sensor . . . . .                          | B 2 | C809 . . . . .                                                 | E 5 |
| B307 . . . Discharge temperature sensor, panel, RH side . . . . .           | D 5 | C846 . . . . .                                                 | A 5 |
| C200 . . . . .                                                              | F 3 | C849 . . . . .                                                 | F 2 |
| C320 . . . . .                                                              | F 4 | D20 . . . Data Link Connector (DLC) . . . . .                  | F 3 |
| C381 . . . . .                                                              | C 2 | E28 . . . Glove compartment lamp . . . . .                     | A 5 |
| C383 . . . . .                                                              | B 1 | E62 . . . Footwell lamp, RH front . . . . .                    | F 2 |
| C425 . . . . .                                                              | B 5 | N10 . . . Heated rear window switch . . . . .                  | C 2 |
| C454 . . . . .                                                              | A 4 | N49 . . . Hazard flasher switch . . . . .                      | A 4 |
| C539 . . . . .                                                              | A 3 | N93 . . . Gearshift lever unit . . . . .                       | B 1 |
| C540 . . . . .                                                              | A 3 | N120 . . . Headlamp switch . . . . .                           | F 4 |
|                                                                             |     | N346 . . . Electronic Stability Program (ESP) switch . . . . . | C 1 |



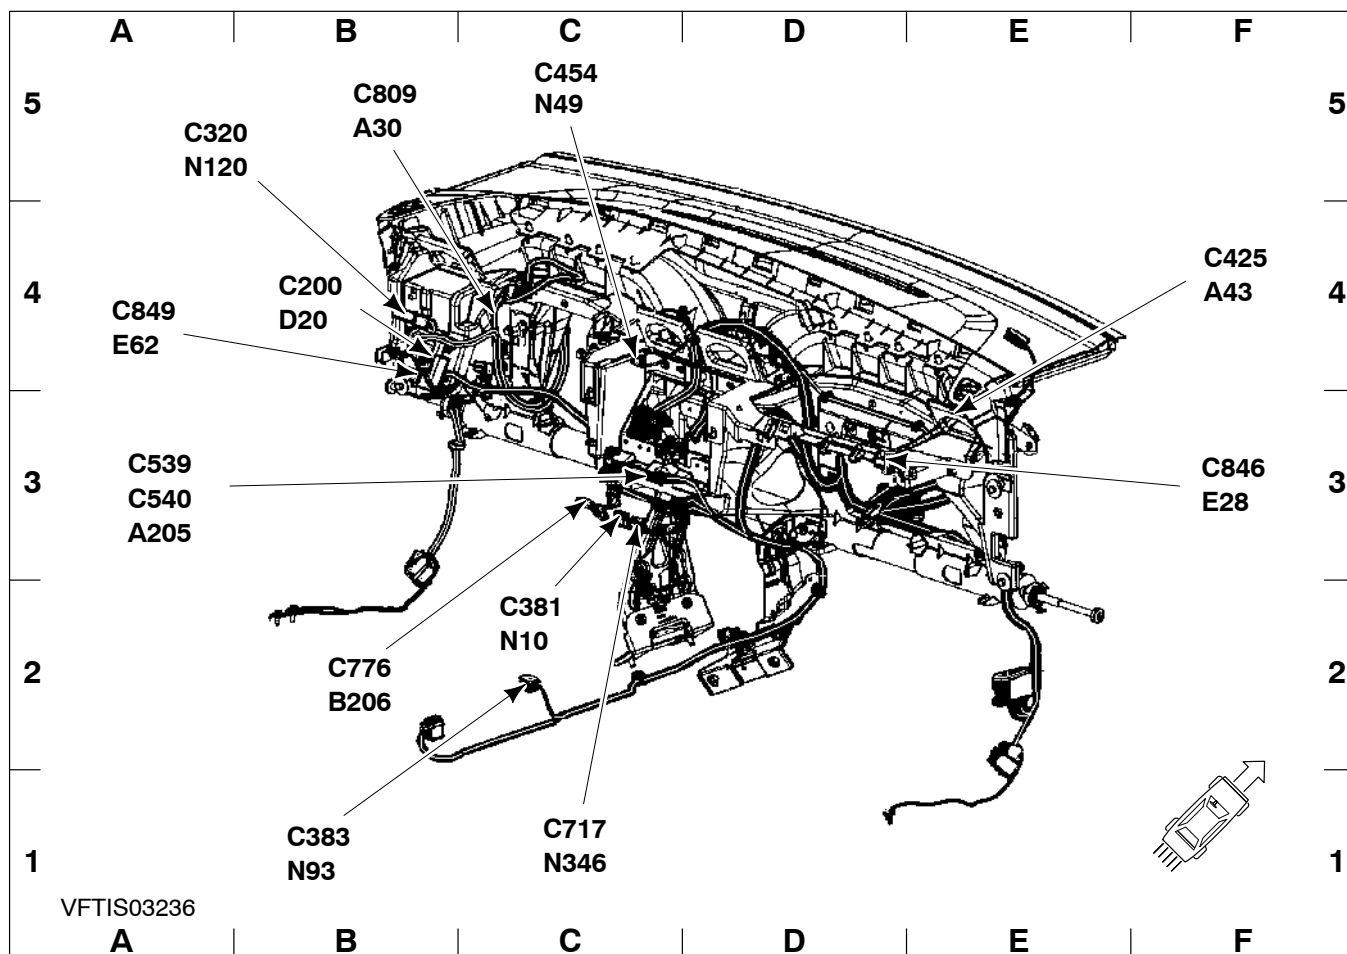


### behind dash panel, LHD

|                                                                             |     |                                                                |     |
|-----------------------------------------------------------------------------|-----|----------------------------------------------------------------|-----|
| A30 . . . Instrument cluster . . . . .                                      | B 5 | C776 . . . . .                                                 | B 2 |
| A43 . . . Passenger air bag unit . . . . .                                  | F 4 | C809 . . . . .                                                 | B 5 |
| A205 . . . Electronic Automatic Temperature Control (EATC) module . . . . . | A 3 | C846 . . . . .                                                 | F 3 |
| B206 . . . In-vehicle temperature sensor . . . . .                          | B 2 | C849 . . . . .                                                 | A 4 |
| C200 . . . . .                                                              | B 4 | D20 . . . Data Link Connector (DLC) . . . . .                  | B 4 |
| C320 . . . . .                                                              | A 5 | E28 . . . Glove compartment lamp . . . . .                     | F 3 |
| C381 . . . . .                                                              | C 2 | E62 . . . Footwell lamp, RH front . . . . .                    | A 4 |
| C383 . . . . .                                                              | B 1 | N10 . . . Heated rear window switch . . . . .                  | C 2 |
| C425 . . . . .                                                              | F 4 | N49 . . . Hazard flasher switch . . . . .                      | C 5 |
| C454 . . . . .                                                              | C 5 | N93 . . . Gearshift lever unit . . . . .                       | B 1 |
| C539 . . . . .                                                              | A 3 | N120 . . . Headlamp switch . . . . .                           | A 5 |
| C540 . . . . .                                                              | A 3 | N346 . . . Electronic Stability Program (ESP) switch . . . . . | C 1 |
| C717 . . . . .                                                              | C 1 |                                                                |     |

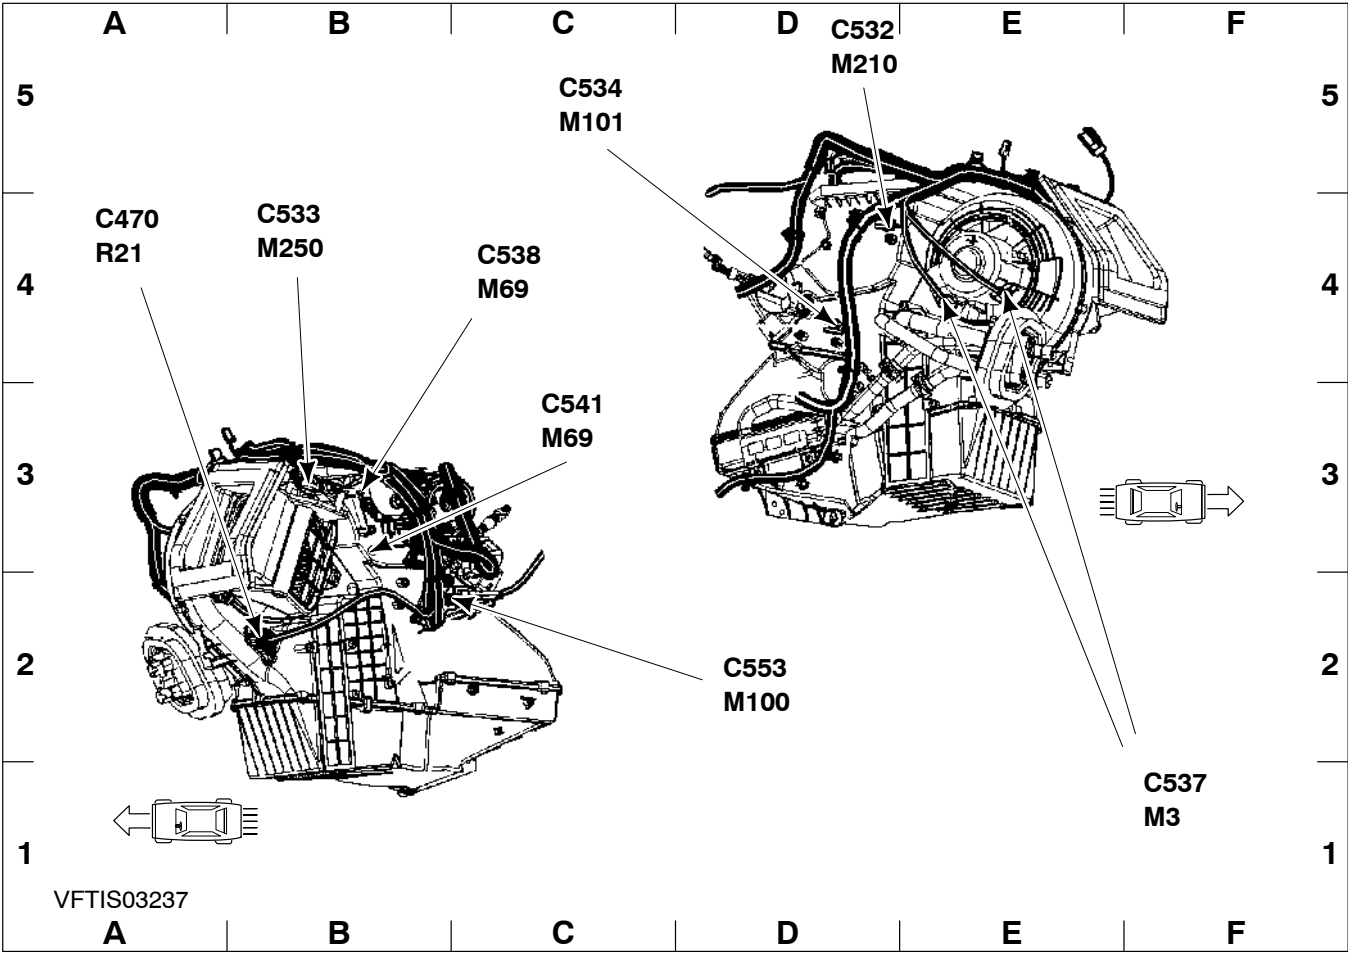


heating/air conditioning housing, RHD

|            |     |         |                                         |     |
|------------|-----|---------|-----------------------------------------|-----|
| C470 ..... | A 4 | M3 ..   | Blower motor .....                      | F 1 |
| C532 ..... | D 5 | M69 ..  | Recirculated air actuator .....         | C 4 |
| C533 ..... | B 4 | M100 .. | Air temperature door motor, LH side ... | D 2 |
| C534 ..... | C 5 | M101 .. | Air temperature door motor, RH side ... | C 5 |
| C537 ..... | F 1 | M210 .. | Defrost mode actuator .....             | D 5 |
| C538 ..... | C 4 | M250 .. | Panel/floor mode actuator .....         | B 4 |
| C541 ..... | C 3 | R21 ..  | Blower motor resistor .....             | A 4 |
| C553 ..... | D 2 |         |                                         |     |

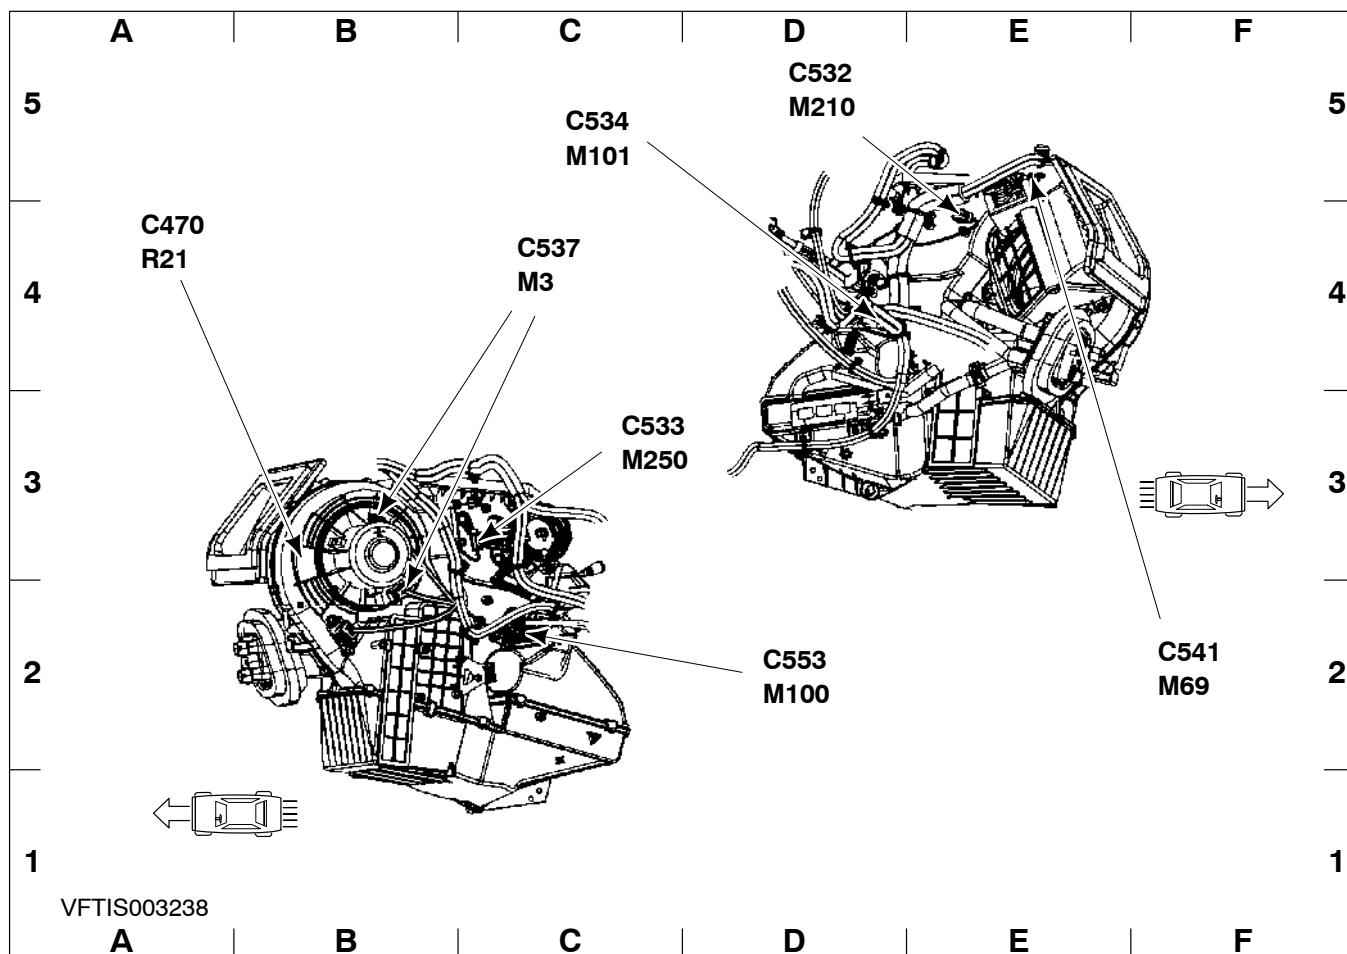


### heating/air conditioning housing, LHD

|            |     |        |                                         |     |
|------------|-----|--------|-----------------------------------------|-----|
| C470 ..... | A 4 | M3 ..  | Blower motor .....                      | C 4 |
| C532 ..... | D 5 | M69 .. | Recirculated air actuator .....         | F 2 |
| C533 ..... | C 3 | M100   | Air temperature door motor, LH side ... | D 2 |
| C534 ..... | C 5 | M101   | Air temperature door motor, RH side ... | C 5 |
| C537 ..... | C 4 | M210   | Defrost mode actuator .....             | D 5 |
| C541 ..... | F 2 | M250   | Panel/floor mode actuator .....         | C 3 |
| C553 ..... | D 2 | R21 .. | Blower motor resistor .....             | A 4 |

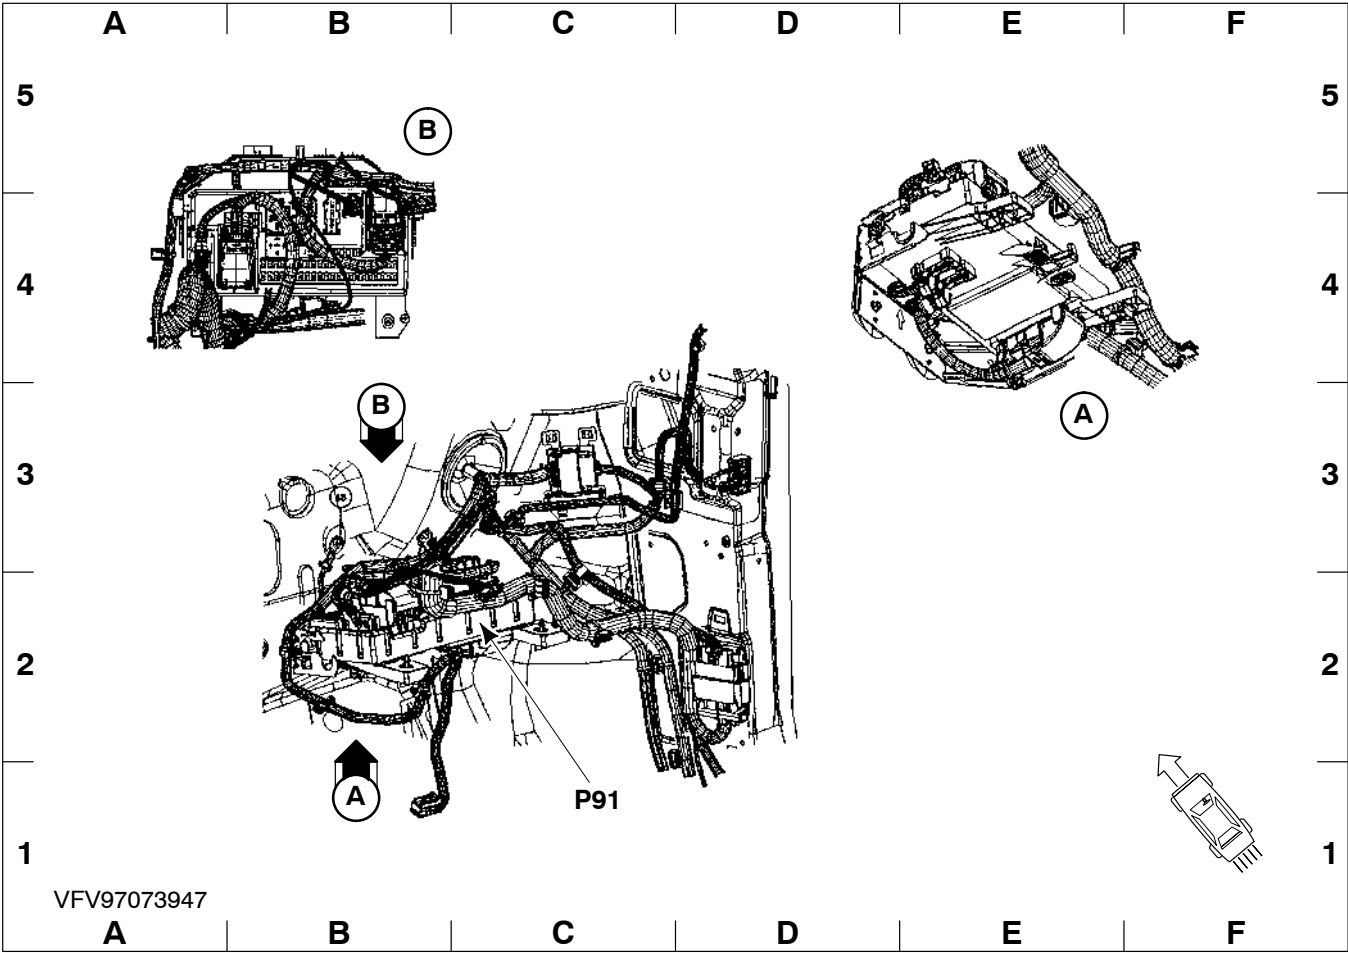


**behind dash panel, RH side, LHD**

P91 . . Central Junction Box (CJB) . . . . . C 1

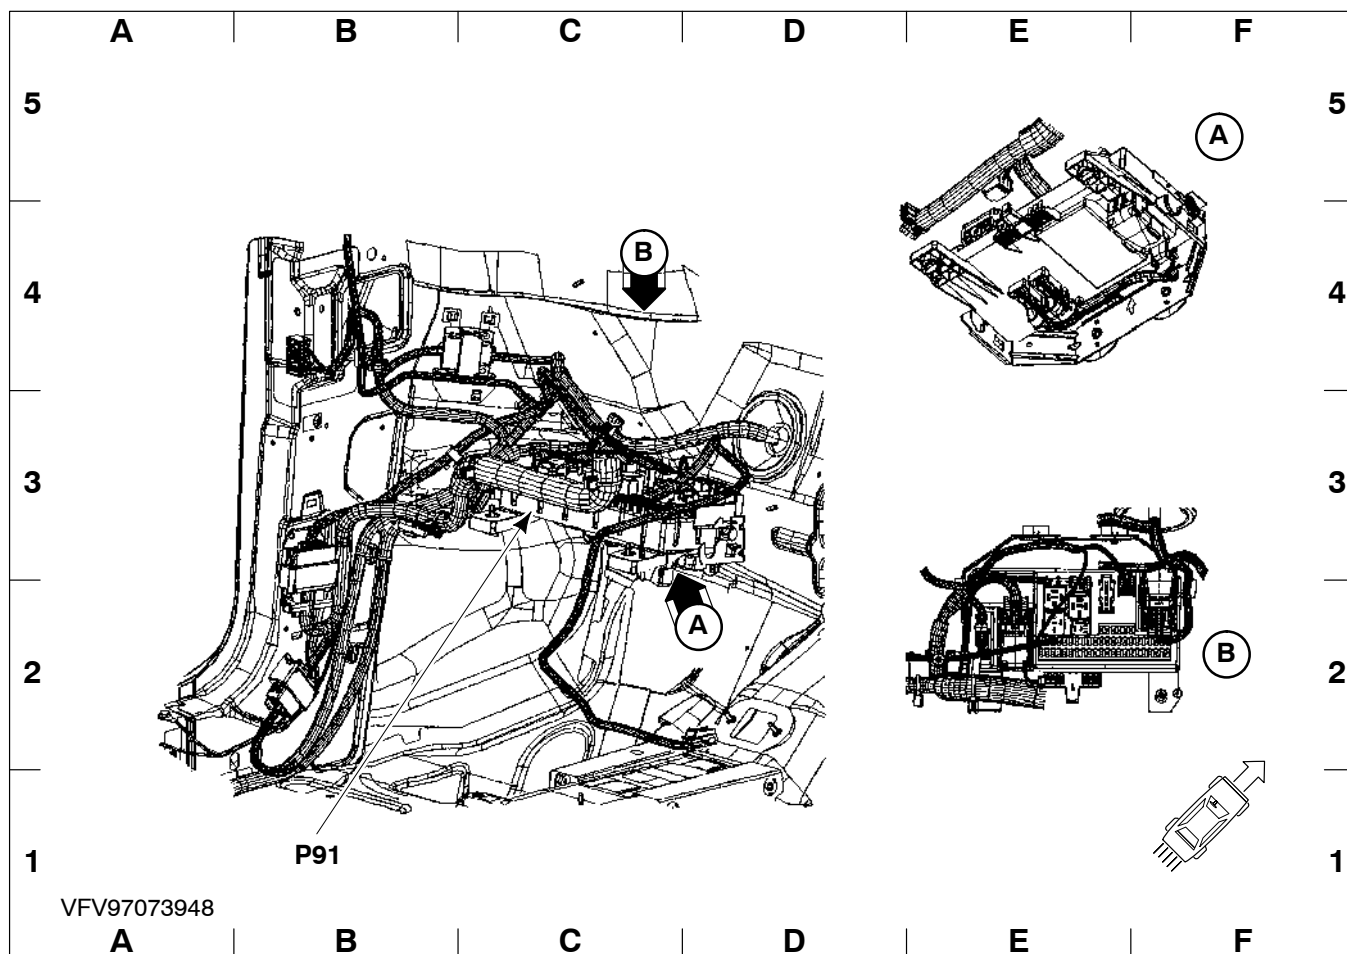


### behind dash panel, LH side, RHD

P91 . . . Central Junction Box (CJB) . . . . . B 1

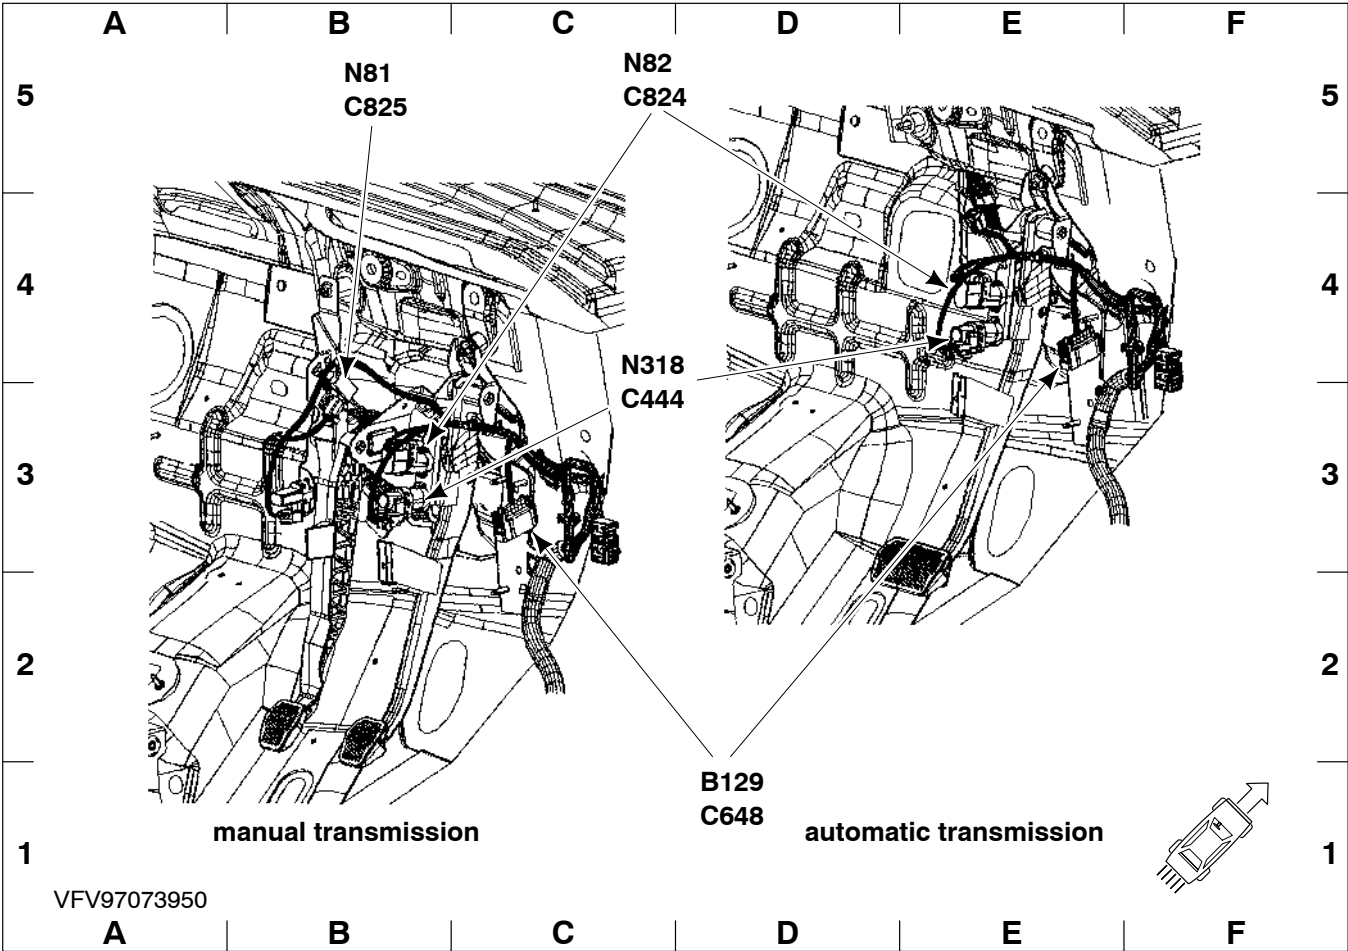


in footwell, RHD

|                                                    |     |                                                |     |
|----------------------------------------------------|-----|------------------------------------------------|-----|
| B129 . Accelerator pedal position sensor . . . . . | D 1 | C825 . . . . .                                 | B 5 |
| C444 . . . . .                                     | C 3 | N81 . . Clutch pedal position switch . . . . . | B 5 |
| C648 . . . . .                                     | D 1 | N82 . . Brake pedal position switch . . . . .  | C 5 |
| C824 . . . . .                                     | C 5 | N318 . Stop lamp switch . . . . .              | C 4 |

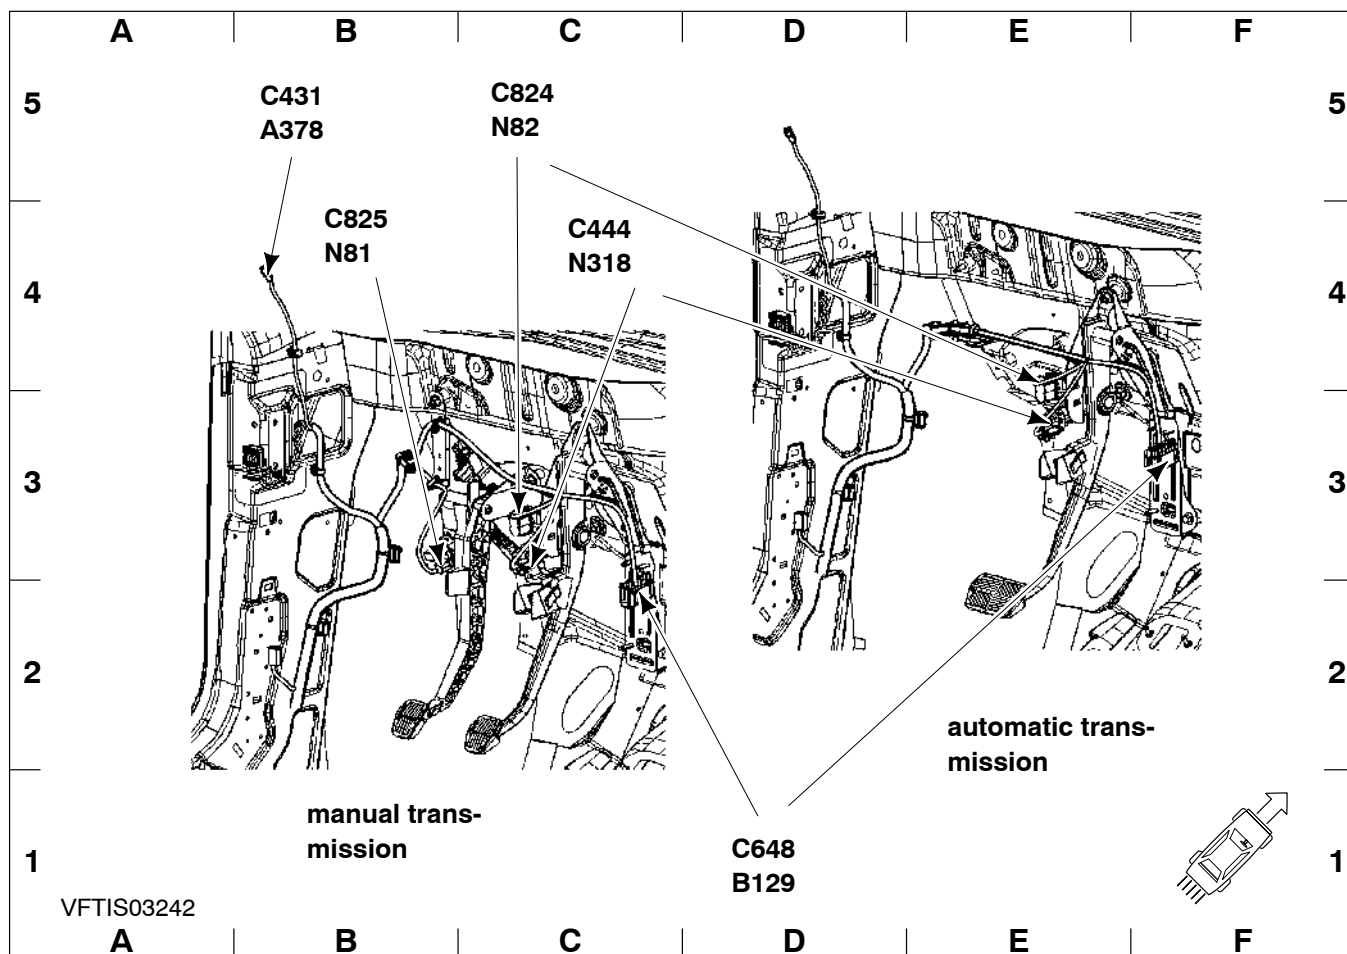

### in footwell, LHD


|                                                    |     |                                                |     |
|----------------------------------------------------|-----|------------------------------------------------|-----|
| A378 . Micropol antenna . . . . .                  | B 5 | C824 . . . . .                                 | C 5 |
| B129 . Accelerator pedal position sensor . . . . . | D 1 | C825 . . . . .                                 | B 4 |
| C431 . . . . .                                     | B 5 | N81 . . Clutch pedal position switch . . . . . | B 4 |
| C444 . . . . .                                     | C 4 | N82 . . Brake pedal position switch . . . . .  | C 5 |
| C648 . . . . .                                     | D 1 | N318 . Stop lamp switch . . . . .              | C 4 |

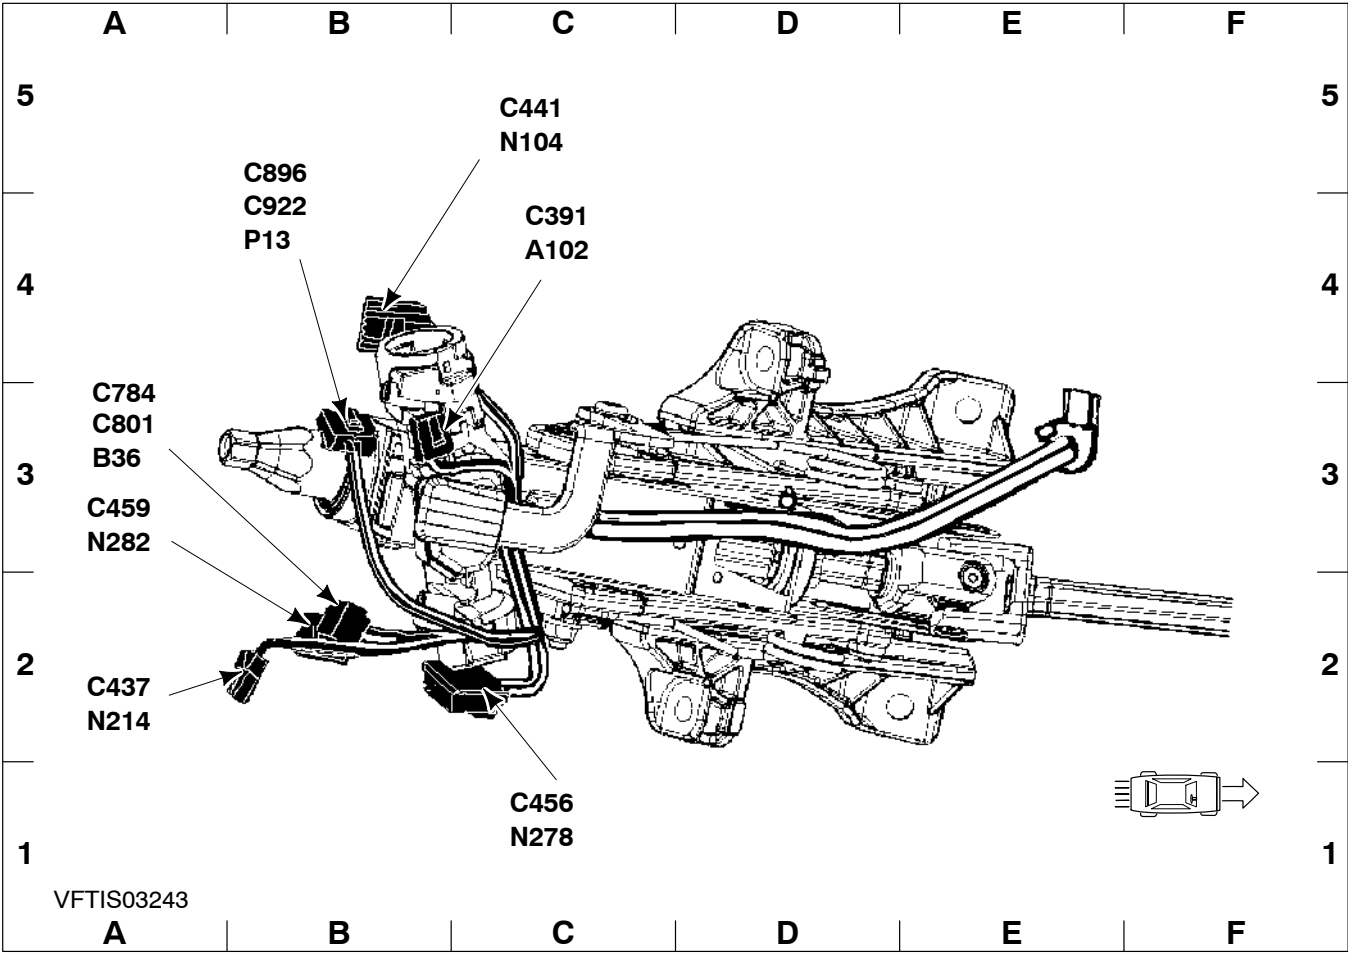

on steering column


|                                                               |     |                                                 |     |
|---------------------------------------------------------------|-----|-------------------------------------------------|-----|
| A102 . Passive anti-theft system transceiver module . . . . . | C 4 | C801 . . . . .                                  | A 3 |
| B36 . . Steering position sensor . . . . .                    | A 3 | C896 . . . . .                                  | B 5 |
| C391 . . . . .                                                | C 4 | C922 . . . . .                                  | B 4 |
| C437 . . . . .                                                | A 2 | N104 . Wiper/washer switch . . . . .            | C 5 |
| C441 . . . . .                                                | C 5 | N214 . Radio remote control switch . . . . .    | A 2 |
| C456 . . . . .                                                | C 1 | N278 . Ignition switch . . . . .                | C 1 |
| C459 . . . . .                                                | A 3 | N282 . Steering column multifunction switch . . | A 3 |
| C784 . . . . .                                                | A 3 | P13 . . Clock spring . . . . .                  | B 4 |



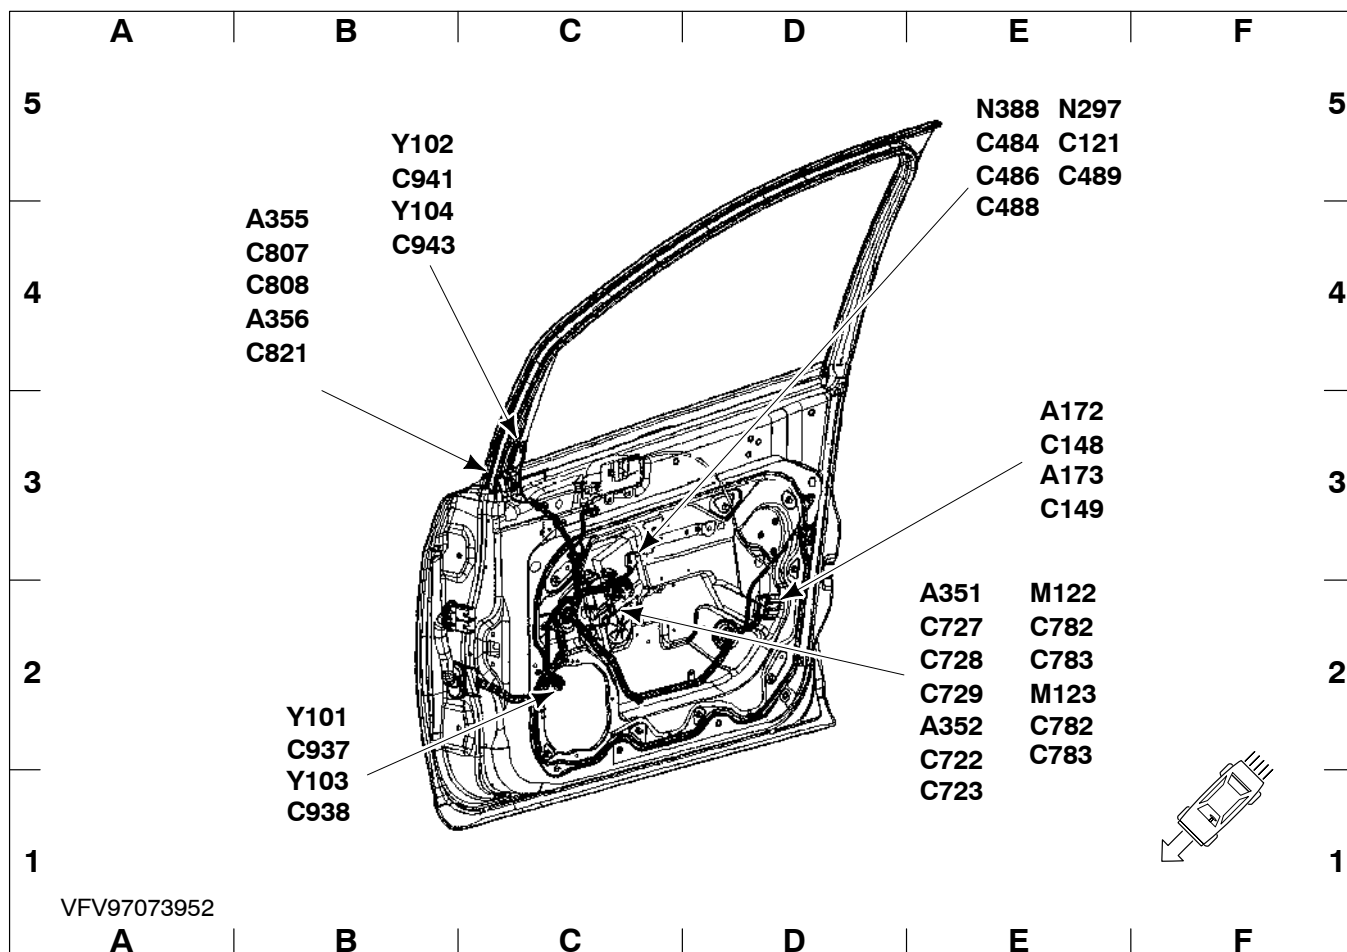


### RH front door, LH similar

|                                                       |     |                                                                    |     |
|-------------------------------------------------------|-----|--------------------------------------------------------------------|-----|
| A172 . Door lock unit, driver side front . . . . .    | E 3 | C783 . . . . .                                                     | E 2 |
| A173 . Door lock unit, passenger side front . . . . . | E 3 | C807 . . . . .                                                     | B 4 |
| A351 . Door control module, driver . . . . .          | E 2 | C808 . . . . .                                                     | B 4 |
| A352 . Door control module, passenger . . . . .       | E 2 | C821 . . . . .                                                     | B 4 |
| A355 . Exterior mirror, driver side . . . . .         | B 4 | C937 . . . . .                                                     | B 2 |
| A356 . Exterior mirror, passenger side . . . . .      | B 4 | C938 . . . . .                                                     | B 1 |
| C121 . . . . .                                        | E 5 | C941 . . . . .                                                     | B 5 |
| C148 . . . . .                                        | E 3 | C943 . . . . .                                                     | B 4 |
| C149 . . . . .                                        | E 3 | M122 . Window regulator motor, driver side front . . . . .         | E 2 |
| C484 . . . . .                                        | E 5 | M123 . Window regulator motor, passenger side front . . . . .      | E 2 |
| C486 . . . . .                                        | E 5 | N297 . Window control switch, passenger side front . . . . .       | E 5 |
| C488 . . . . .                                        | E 4 | N388 . Window control/power mirror adjust switch, driver . . . . . | E 5 |
| C489 . . . . .                                        | E 5 | Y101 . Speaker 1, LH front . . . . .                               | B 2 |
| C722 . . . . .                                        | E 2 | Y102 . Speaker 2, LH front . . . . .                               | B 5 |
| C723 . . . . .                                        | E 1 | Y103 . Speaker 1, RH front . . . . .                               | B 1 |
| C727 . . . . .                                        | E 2 | Y104 . Speaker 2, RH front . . . . .                               | B 4 |
| C728 . . . . .                                        | E 2 |                                                                    |     |
| C729 . . . . .                                        | E 2 |                                                                    |     |
| C782 . . . . .                                        | E 2 |                                                                    |     |
| C782 . . . . .                                        | E 2 |                                                                    |     |
| C783 . . . . .                                        | E 2 |                                                                    |     |

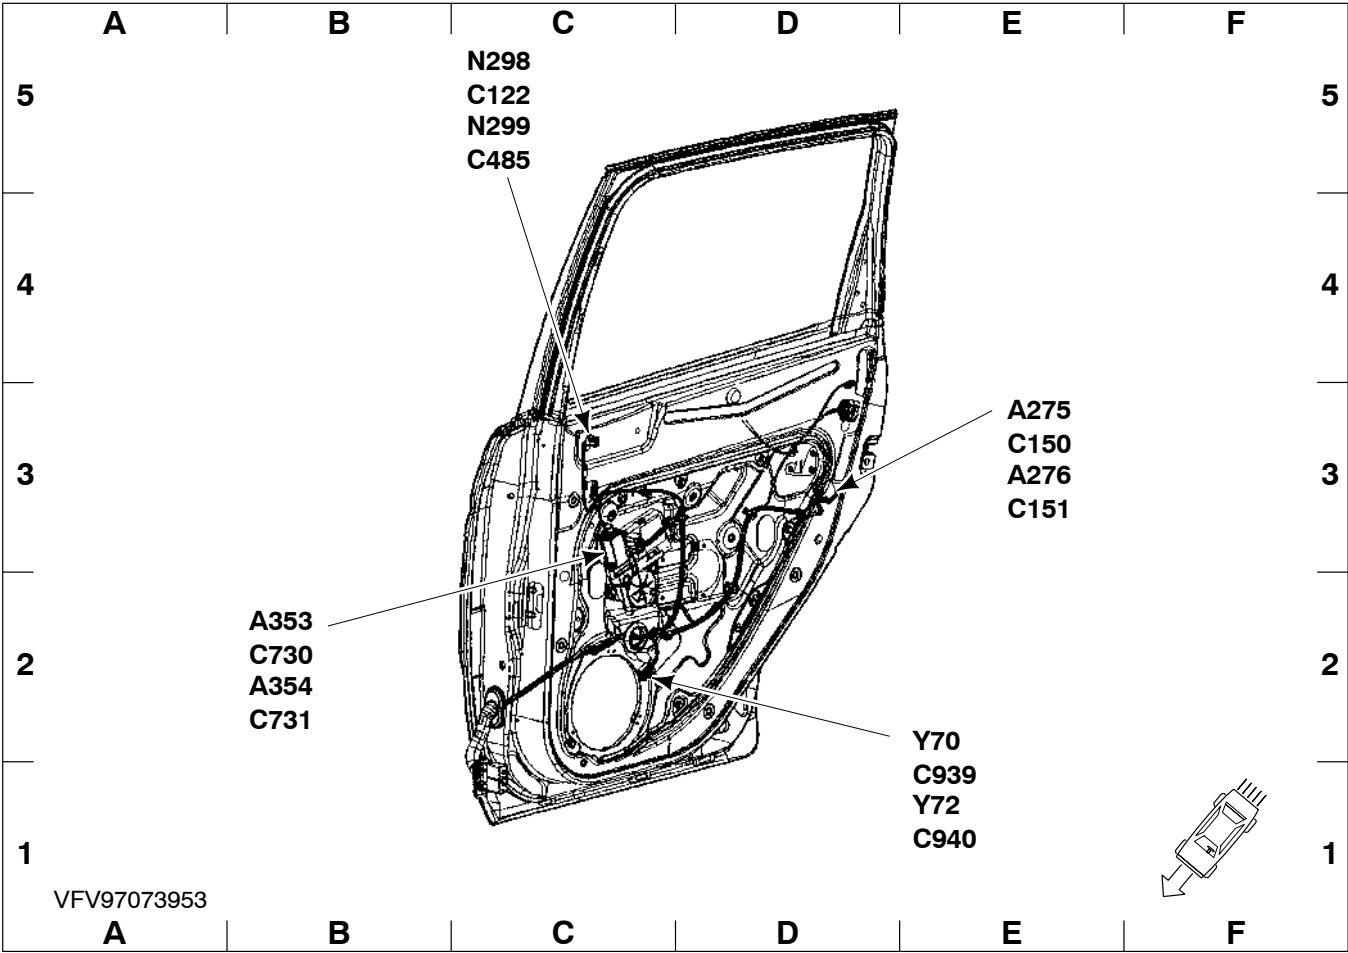


**RH rear door, LH similar**

|                                                  |     |                                                 |     |
|--------------------------------------------------|-----|-------------------------------------------------|-----|
| A275 . Door lock unit, LH rear . . . . .         | E 3 | C730 . . . . .                                  | B 2 |
| A276 . Door lock unit, RH rear . . . . .         | E 3 | C731 . . . . .                                  | B 2 |
| A353 . Door control module, LH side rear . . . . | B 2 | C939 . . . . .                                  | E 1 |
| A354 . Door control module, RH side rear . . . . | B 2 | C940 . . . . .                                  | E 1 |
| C122 . . . . .                                   | C 5 | N298 . Window control switch, LH rear . . . . . | C 5 |
| C150 . . . . .                                   | E 3 | N299 . Window control switch, RH rear . . . . . | C 5 |
| C151 . . . . .                                   | E 3 | Y70 . . Speaker 1, LH rear door . . . . .       | E 2 |
| C485 . . . . .                                   | C 5 | Y72 . . Speaker 1, RH rear door . . . . .       | E 1 |

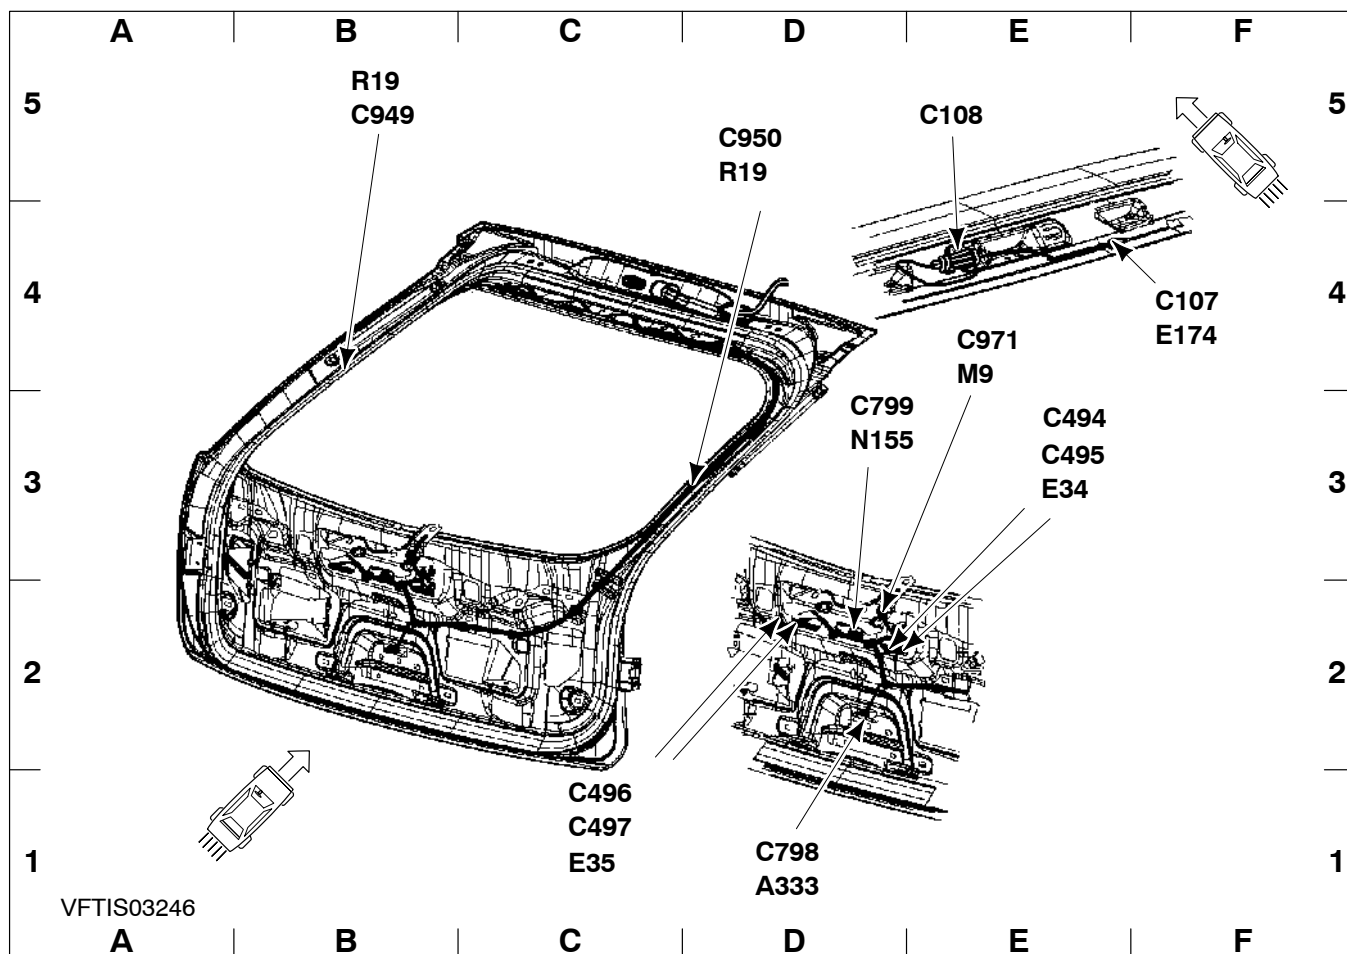


### liftgate, 5-door model

|                                           |     |                                                 |     |
|-------------------------------------------|-----|-------------------------------------------------|-----|
| A333 . Door lock unit, liftgate . . . . . | D 1 | C950 . . . . .                                  | D 5 |
| C107 . . . . .                            | F 4 | C971 . . . . .                                  | E 4 |
| C108 . . . . .                            | E 5 | E34 . . Licence plate lamp, LH side . . . . .   | E 3 |
| C494 . . . . .                            | E 3 | E35 . . Licence plate lamp, RH side . . . . .   | C 1 |
| C495 . . . . .                            | E 3 | E174 . High mounted stop lamp . . . . .         | F 4 |
| C496 . . . . .                            | C 1 | M9 . . Rear window wiper motor . . . . .        | E 4 |
| C497 . . . . .                            | C 1 | N155 . Liftgate/luggage compartment lid release |     |
| C798 . . . . .                            | D 1 | switch . . . . .                                | D 3 |
| C799 . . . . .                            | D 3 | R19 . . Rear window heater . . . . .            | B 5 |
| C949 . . . . .                            | B 5 | R19 . . Rear window heater . . . . .            | D 5 |

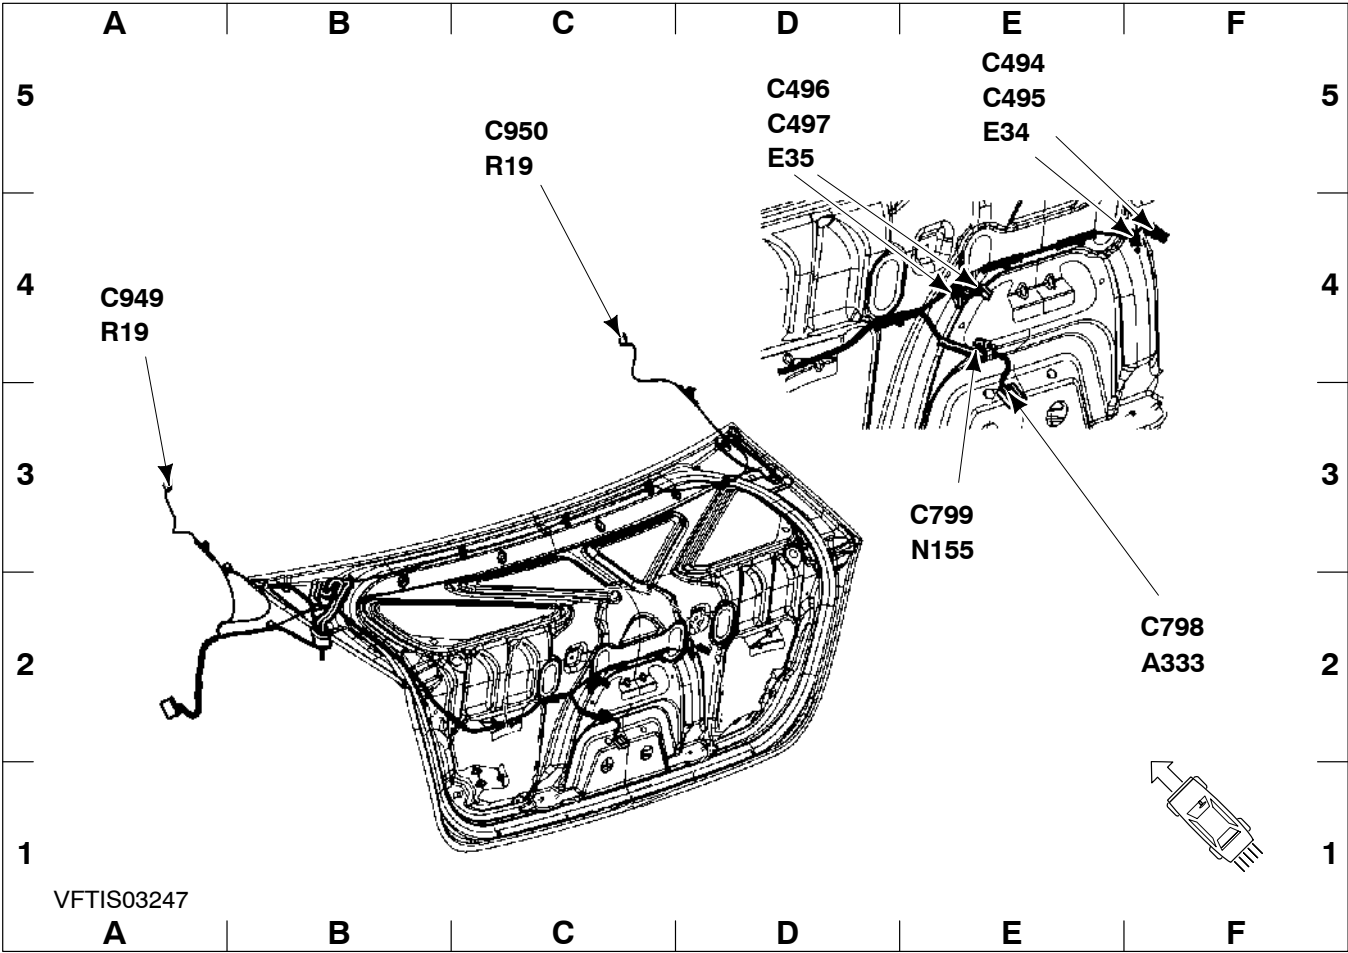


**luggage compartment lid, 4-door model**

|                                           |     |                                                 |     |
|-------------------------------------------|-----|-------------------------------------------------|-----|
| A333 . Door lock unit, liftgate . . . . . | F 2 | C950 . . . . .                                  | C 5 |
| C494 . . . . .                            | E 5 | E34 . . Licence plate lamp, LH side . . . . .   | E 5 |
| C496 . . . . .                            | D 5 | E35 . . Licence plate lamp, RH side . . . . .   | D 5 |
| C497 . . . . .                            | D 5 | N155 . Liftgate/luggage compartment lid release |     |
| C495 . . . . .                            | E 5 | switch . . . . .                                | E 3 |
| C798 . . . . .                            | F 2 | R19 . . Rear window heater . . . . .            | A 4 |
| C799 . . . . .                            | E 3 | R19 . . Rear window heater . . . . .            | C 5 |
| C949 . . . . .                            | A 4 |                                                 |     |

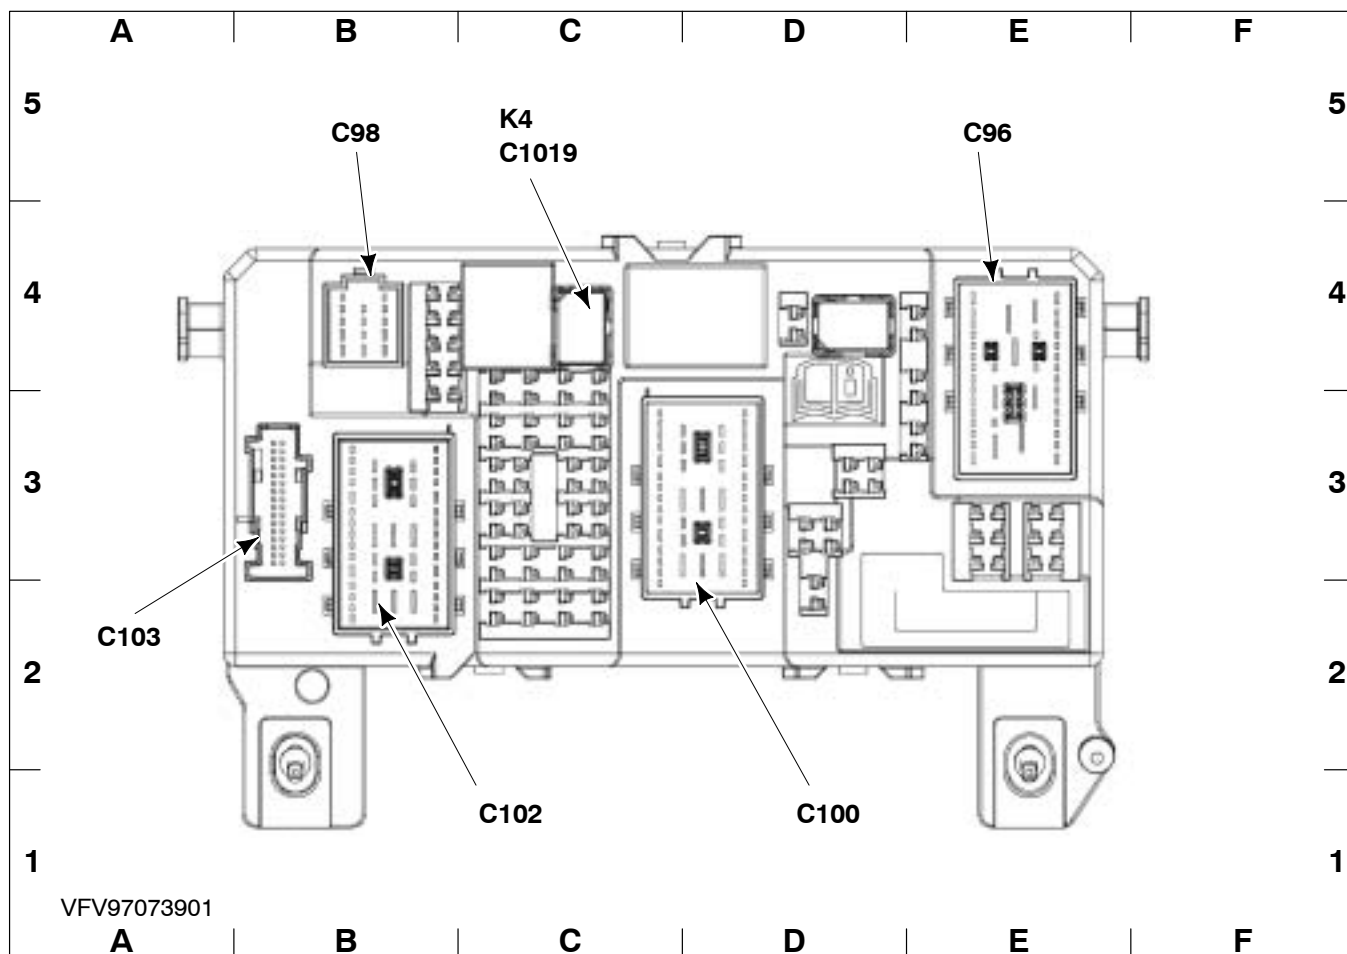


### Central Junction Box (CJB), front

|            |     |                              |     |
|------------|-----|------------------------------|-----|
| C96 .....  | E 5 | C103 .....                   | A 2 |
| C98 .....  | B 5 | C1019 .....                  | C 5 |
| C100 ..... | D 1 | K4 ... Fuel pump relay ..... | C 5 |
| C102 ..... | C 1 |                              |     |

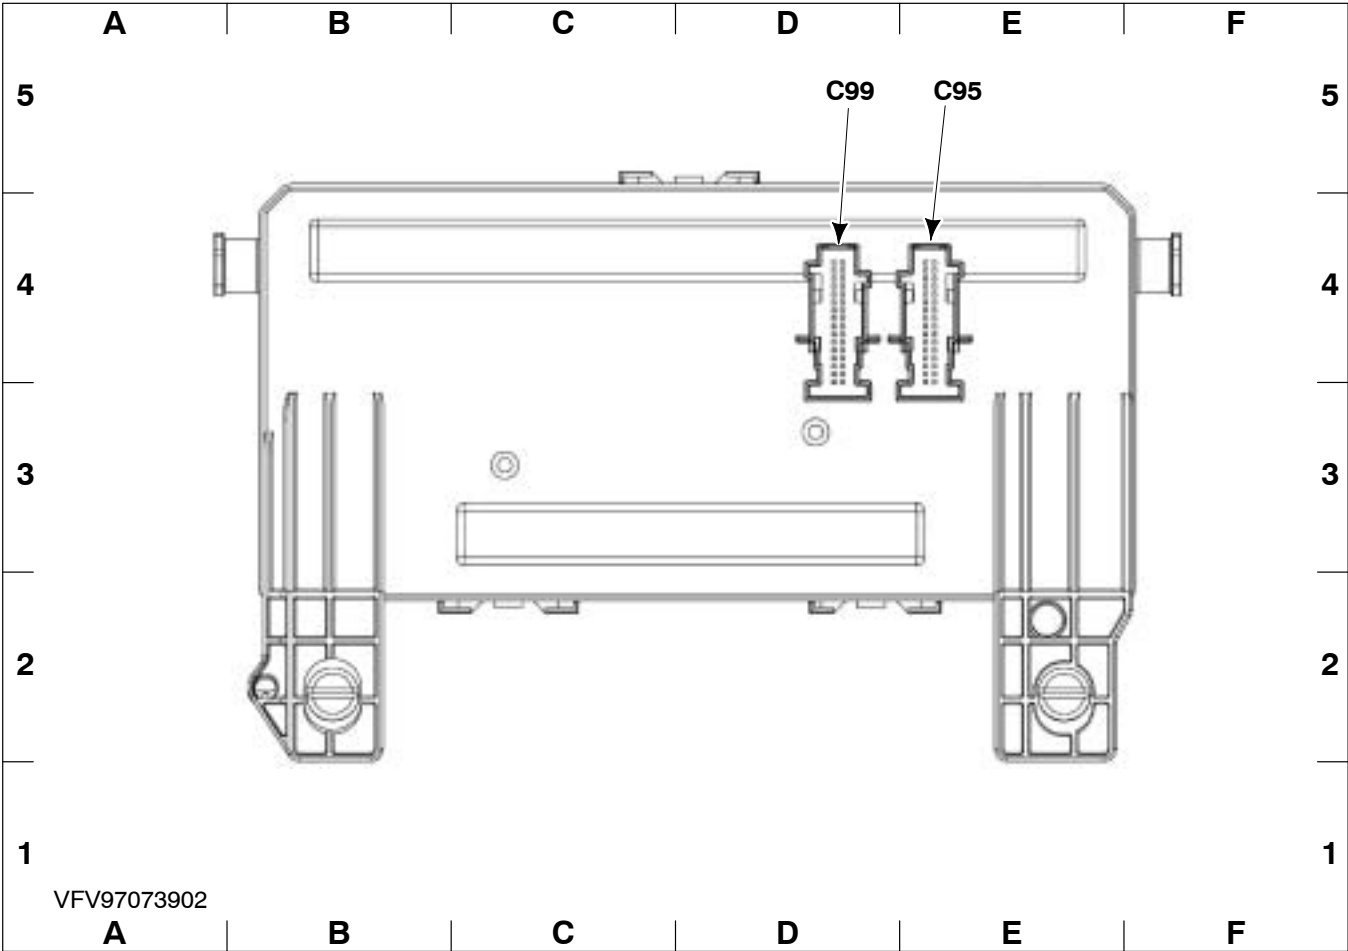

Central Junction Box (CJB), rear

C95 ..... E 5      C99 ..... D 5

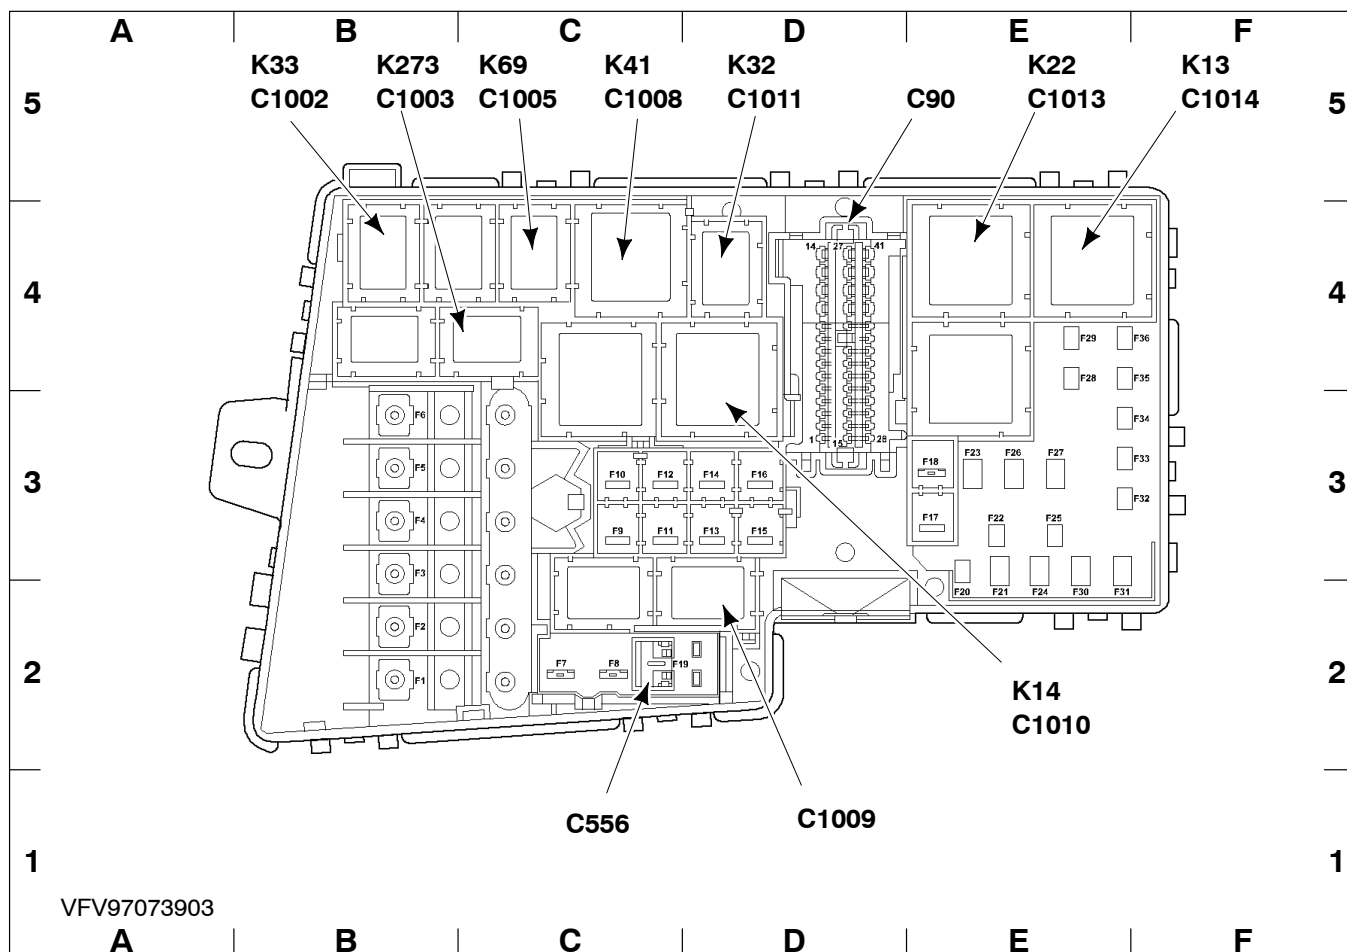


### Battery Junction Box (BJB)

|             |     |                                              |     |
|-------------|-----|----------------------------------------------|-----|
| C90 .....   | E 5 | C1014 .....                                  | F 5 |
| C556 .....  | C 1 | K13 .. Power hold relay .....                | F 5 |
| C1002 ..... | B 5 | K14 .. Blower motor relay .....              | E 2 |
| C1003 ..... | B 5 | K22 .. Starter relay .....                   | E 5 |
| C1005 ..... | C 5 | K32 .. A/C Wide Open Throttle (WOT) relay .. | D 5 |
| C1008 ..... | C 5 | K33 .. Horn relay .....                      | B 5 |
| C1009 ..... | D 1 | K41 .. Ignition relay .....                  | C 5 |
| C1010 ..... | E 2 | K69 .. Fuel heater relay .....               | C 5 |
| C1011 ..... | D 5 | K273 .. Reversing lamps relay .....          | B 5 |
| C1013 ..... | E 5 |                                              |     |

C30


14014

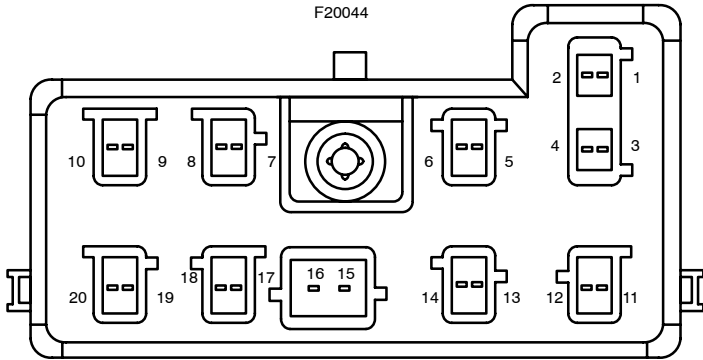

- |                      |                      |
|----------------------|----------------------|
| (1)                  | (12)                 |
| (2)                  | (13) 8-JA54(WH)      |
| (3)                  | (14) 9-JA54 (BN)     |
| (4)                  | (15) 29-AH35 (OG/YE) |
| (5) 15S-JA37 (GN/BK) | (16) 31-DA14 (BK)    |
| (6) 91S-JA37 (BK/GN) | 31-DA14A (BK)        |
| (7) 15S-JA33 (GN/BU) | 31-DA14 (BK) +       |
| (8) 91S-JA33 (BK/BU) | 31-DA14A (BK)        |
| (9)                  | (17) 31-DA14A (BK)   |
| (10)                 | (18)                 |
| (11)                 | (19) 9-JA54A (BN)    |
|                      | (20) 8-JA54 (WH)     |

C31

14014

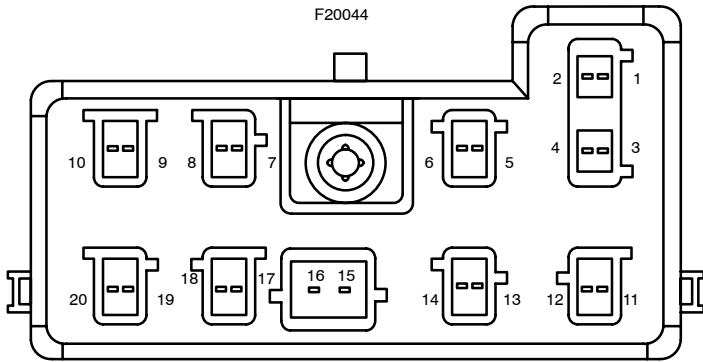


- |                      |                      |                     |
|----------------------|----------------------|---------------------|
| (1) 1-MD49 (WH/GN)   | (8) 91S-JA34 (BK/RD) | (15) 91-MD8 (BK/OG) |
| (2) 2-MD49 (GY/OG)   | (9)                  | 91-MD8A (BK/OG)     |
| (3) 1-MD50 (WH/BK)   | (10)                 | 91-MD8 (BK/OG) +    |
| (4) 2-MD50 (GY/BK)   | (11)                 | 91-MD8A (BK/OG)     |
| (5) 15S-JA38 (GN/OG) | (12)                 | (16) 29-MD8A (OG)   |
| (6) 91S-JA38 (BK/RD) | (13)                 | (17)                |
| (7) 15S-JA34 (GN/OG) | (14)                 | (18)                |
|                      |                      | (19)                |
|                      |                      | (20)                |



**C41****14A584**


F26034

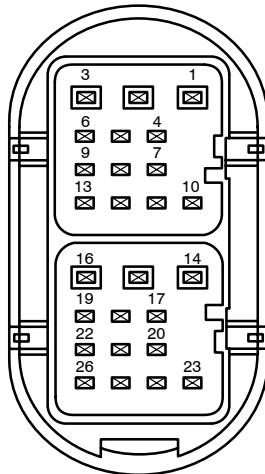

- |                      |                       |                       |
|----------------------|-----------------------|-----------------------|
| (1) 31-DA11 (BK)     | (8) 5-EC3B (BU/RD)    | (17)                  |
| 31-DA11A (BK)        | 31S-AA63 (BK)         | (18) 34-AD10C (BU/YE) |
| (2) 32-AA59 (WH/BK)  | (9) 31S-AA64 (BK/GN)  | (19) 33-AD11C (YE/VT) |
| 32-AA59C (WH/BK)     | (10) 31S-AA61 (BK)    | (20) 32-AD9C (WH/GN)  |
| 91-AD24 (BK/RD)      | 33-AD27A (YE/GN)      | (21)                  |
| (3) 29-AJ26 (OG/YE)  | (11) 32-AD27A (WH/GN) | (22)                  |
| 33-AA59 (YE/BK)      | 33-AA60 (YE)          | (23)                  |
| 33-AA59C (YE/BK)     | (12) 29-AD27 (OG/BK)  | (24)                  |
| (4) 10-MD28 (GY)     | (13) 29-AD12 (OG/YE)  | (25)                  |
| (5) 8-MD28 (WH)      | (14) 15-AJ7 (GN/BU)   | (26)                  |
| (6) 31S-GL9A (BK/YE) | (15) 32-AJ18 (WH/VT)  |                       |
| (7) 4-EC3B (GY/RD)   | (16) 33-AJ18 (YE/VT)  |                       |
| 31S-AA62 (BK/WH)     |                       |                       |

**C43****14K138**

F26034

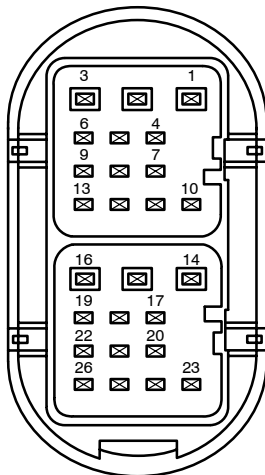


- |                       |                        |                        |
|-----------------------|------------------------|------------------------|
| (1) 31-DA12 (BK)      | (9) 31S-AA64B (BK/GN)  | (18) 34-AD10 (BU/YE)   |
| 31-DA12A (BK)         | (10) 31S-AA61B (BK/BU) | (19) 33-AD11 (YE/VT)   |
| (2) 32-AA59B (WH/BK)  | 33-AD28 (YE/GN)        | (20) 32-AD9 (WH/GN)    |
| 32-AA59C (WH/BK)      | (11) 32-AD28 (WH/GN)   | (21) 49S-LG20A (BU/WH) |
| (3) 29-AJ27 (OG/WH)   | 33-AA60B (BK/YE)       | (22)                   |
| 33-AA59B (YE/BK)      | (12)                   | (23)                   |
| 33-AA59C (YE/BK)      | (13)                   | (24)                   |
| (4) 10-MD28 (GY)      | (14) 15-AJ18 (GN/WH)   | (25)                   |
| (5) 8-MD28 (WH)       | (15) 32-AJ18 (WH/VT)   | (26)                   |
| (6) 31S-GL16A (BK/BU) | (16) 33-AJ18 (YE/VT)   |                        |
| (7) 4-EC3F (GY/RD)    | (17) 4-EE9B (GY/OG)    |                        |
| (8) 5-EC3F (BU/RD)    |                        |                        |

C44

14014

F13028

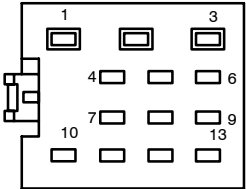


- |                                                                                             |                                                                                                                                                      |
|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1) 31-DA11 (BK) +<br>31-DA11B (BK)<br>31-DA11A (BK) +<br>31-DA11C (BK)                     | (7) 4-EC10Z (GY) + 4-EC10Y (GY)<br>4-EC10Z (GY) + 4 EC10AF (GY)<br>4-EC10Z (GY) + 4-EC10AC (GY)<br>4-EC10Z (GY) + 4-EC10AG (GY)<br>31S-AA62B (BK/WH) |
| (2) 32-AA59AA (WH/BK)<br>31-DA11A (BK)<br>31-DA11E (BK)<br>31-DA11D (BK) +<br>31-DA11E (BK) | (8) 5-EC10Z (BU) + 5 EC10Y (BU)<br>5-EC10Z (BU) + 5-EC10AF (BU)<br>5-EC10Z (BU) + 5-EC10AC (BU)<br>5-EC10Z (BU) + 5-EC10AG (BU)<br>31S-AA63B (BK/OG) |
| (3) 29-AJ26 (OG/YE)<br>33-AA59A (YE/BK)                                                     | (9) 31S-AA64B (BK/GN)                                                                                                                                |
| (4) 10-MD10 (GY/BK)<br>10-MD10B (GY/BK)                                                     | (10) 31S-AA61B (BK/BU)<br>33-AD27 (YE/GN)                                                                                                            |
| (5) 8-MD10 (WH/BK)<br>8-MD10B (WH/BK)                                                       | (11) 32-AD27 (WH/GN)<br>33-AA60A (YE)                                                                                                                |
| (6) 31S-GL9A (BK/YE)                                                                        | (12) 29-AD27 (OG/BK)                                                                                                                                 |
|                                                                                             | (13) 29-AD12 (OG/YE)                                                                                                                                 |

C45

14240


F26034

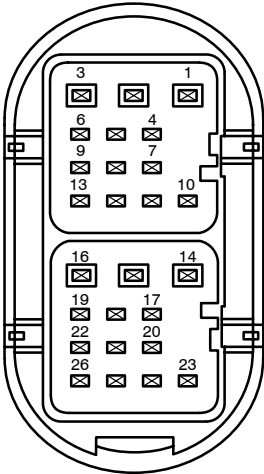

- |                                        |                    |      |
|----------------------------------------|--------------------|------|
| (1) 31-AJ83 (BK)<br>31-AJ83B (BK)      | (9) 4-EE9A (GY/OG) | (18) |
| (2) 32-AA59 (WH/BK)                    | (10)               | (19) |
| (3) 29-AJ83 (OG/BU)<br>33-AA59 (YE/BK) | (11) 33-AA60 (YE)  | (20) |
| (4) 10-MD29 (GY/WH)                    | (12)               | (21) |
| (5) 8-MD29 (WH/VT)                     | (13)               | (22) |
| (6) 31S-GL12 (BK/OG)                   | (14)               | (23) |
| (7) 4-EC3D (GY/RD)                     | (15)               | (24) |
| (8) 5-EC3D (BU/RD)                     | (16)               | (25) |
|                                        | (17)               | (26) |

**C46****14240**


F26034

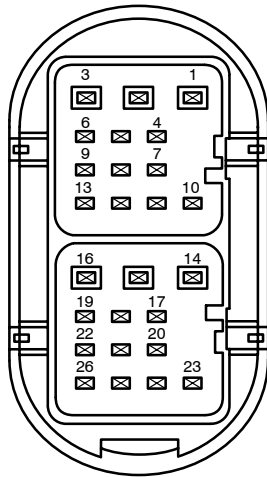

- |                      |                    |      |
|----------------------|--------------------|------|
| (1) 31-AJ83A (BK)    | (9) 4-EE9B (GY/OG) | (18) |
| 31-AJ83C (BK)        | (10)               | (19) |
| (2) 32-AA59A (WH/BK) | (11) 33-AA60A (YE) | (20) |
| (3) 29-AJ83A (OG/BU) | (12)               | (21) |
| 33-AA59A (YE/BK)     | (13)               | (22) |
| (4) 10-MD29B (GY/WH) | (14)               | (23) |
| (5) 8-MD29B (WH/VT)  | (15)               | (24) |
| (6) 31S-GL16 (BK/BU) | (16)               | (25) |
| (7) 4-EC3A (GY/RD)   | (17)               | (26) |
| (8) 5-EC3A (BU/RD)   |                    |      |

**C47****14014**

F13026

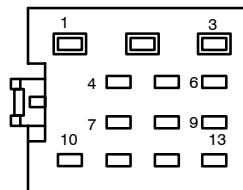


- |                     |                      |
|---------------------|----------------------|
| (1) 15-AJ7 (GN/BU)  | (8) 49S-LG13 (BU/RD) |
| (2) 32-AJ18 (WH/VT) | 49S-LG13A (BU/RD)    |
| (3) 33-AJ18 (YE/VT) | (9)                  |
| (4) 4-EE9A (GY/OG)  | (10)                 |
| 4-EE9D (GY/OG)      | (11)                 |
| (5) 34-AD10 (BU/YE) | (12)                 |
| (6) 33-AD11 (YE/VT) | (13)                 |
| (7) 32-AD9 (WH/GN)  |                      |

C49

14014

F13028

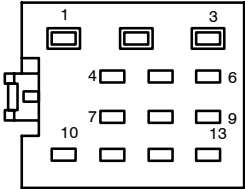

- (1) 31-DA12 (BK)  
31-DA12A (BK)  
31-DA12B (BK)

(2) 32-AA59B (WH/BK)

(3) 29-AJ27 (OG/WH)  
33-AA59B (YE/BK)

(4) 10-MD17 (GY/RD)  
10-MD17A (GY/RD)

(5) 8-MD17 (WH/RD)  
8-MD17A (WH/RD)

(6) 31S-GL16A (BK/BU)

(7) 4-EC10AG (GY) + 4-EC10U (GY)  
4-EC10AV (GY) + 4-EC10U (GY)  
4-EC10V (GY) + 4-EC10U (GY)
- (8) 5-EC10AG (BU) + 5-EC10U (BU)  
5-EC10AV (BU) + 5-EC10U (BU)  
5-EC10V (BU) + 5-EC10U (BU)

(9) 31S-AA64B (BK/GN) + 31S-AA64A (BK/GN)

(10) 31S-AA61B (BK/BU) + 31S-AA61A (BK/BU)  
33-AD27 (YE/GN)

(11) 32-AD27 (WH/GN)  
33-AA60B (YE)


(12)

(13)

C51

14014

F13026

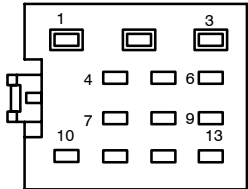

- (1) 15-AJ18 (GN/WH)

(2) 32-AJ18 (WH/VT)

(3) 33-AJ18 (YE/VT)

(4) 4-EE9B (GY/OG)  
4-EE9C (GY/OG)

(5) 34-AD10 (BU/YE)

(6) 33-AD11 (YE/VT)

(7) 32-AD9 (WH/GN)
- (8) 49S-LG20 (BU/WH)  
49S-LG20A (BU/WH)

(9)

(10)

(11)


(12)

(13)

C52

14014

F13028

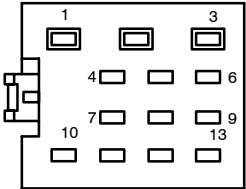

- (1) 31-DA21 (BK)  
31-DA21A (BK)  
31-DA21B (BK)

(2) 32-AA59C (WH/BK)

(3) 29-AJ83 (OG/BU)  
33-AA59C (YE/BK)

(4) 10-MD11 (GY/WH)  
10-MD11A (GY/WH)

(5) 8-MD11 (WH/VT)  
8-MD11A (WH/VT)

(6) 31S-GL12 (BK/OG)
- (7) 4-EC10AG (GY) + 4-EC10AA (GY)  
4-EC10R (GY) + 4-EC10Y (GY)  
4-EC10AG (GY) + 4-EC10R (GY)

(8) 5-EC10R (BU) + 5-EC10Y (BU)  
5-EC10AG (BU) + 5-EC10R (BU)  
5-EC10AA (BU) + 5-EC10AG (BU)

(9) 4-EE9A (GY/OG)  
4-EE9C (GY/OG)

(10)


(11) 33-AC60C (YE)

(12)

(13)

**C54****14014**


F13028

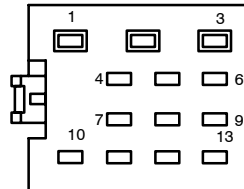


- |                                                                                                  |                                                                                                                                 |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| (1) 31-DA22 (BK)<br>31-DA22A (BK)<br>31-DA22B (BK)                                               | (8) 5-EC10R (BU) + 5-EC10V (BU)<br>5-EC10S (BU) + 5-EC10R (BU)<br>5-EC10AF (BU) + 5-EC10AC (BU)<br>5-EC10AF (BU) + 5-EC10R (BU) |
| (2) 32-AA59D (WH/BK)                                                                             | (9) 4-EE9B (GY/OG)<br>4-EE9D (GY/OG)                                                                                            |
| (3) 29-AJ84 (OG/WH)<br>33-AA59D (YE/BK)                                                          | (10)                                                                                                                            |
| (4) 10-MD18 (GY)<br>10-MD18A (GY)                                                                | (11) 33-AA60D (YE)                                                                                                              |
| (5) 8-MD18 (WH)<br>8-MD18A (WH)                                                                  | (12)                                                                                                                            |
| (6) 31S-GL19 (BK/GN)                                                                             | (13)                                                                                                                            |
| (7) 4-EC10R (GY) + 4-EC10V (GY)<br>4-EC10AF (GY) + 4-EC10AC (GY)<br>4-EC10AF (GY) + 4-EC10R (GY) |                                                                                                                                 |

**C57****14335**

F06109

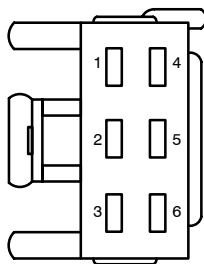**14401**

F06112


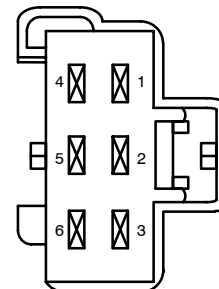


- |                                      |                    |
|--------------------------------------|--------------------|
| (1) 8-MC8 (WH/RD)                    | (4)                |
| (2) 3-MC8 (BK)                       | (5) 8-GB8A (WH/BU) |
| (3) 15S-LG6C (GN/YE)<br>34S-LG6 (BU) | (6)                |

C58

14014

17N400

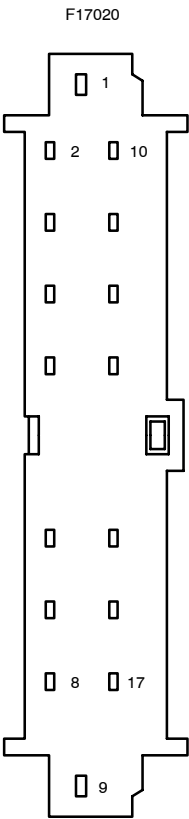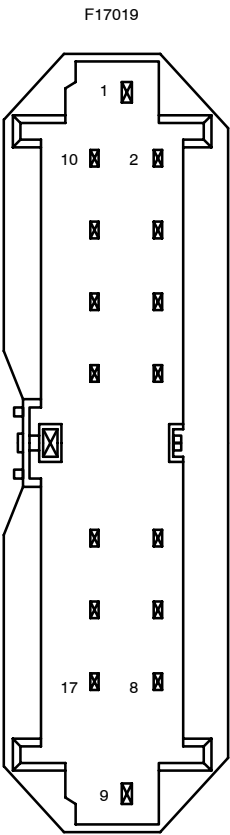

- (1) 15S-HB19 (GN/BU)
- (2)
- (3) 29-KA28 (OG/BU)
- (4) 32-AA27 (WH/GN)
- (5) 29S-LF21 (OG/BK)
- (6) 32-KA28 (WH/RD)
- (7)


- (8) 31S-GL20 (BK/RD)
- (9) 15S-LG6 (GN/YE)
- (10) 31S-LB25 (BK/BU)
- (11) 31S-AA30 (BK/YE)
- (12)
- (13)

- (1) 15S-HB19 (BK)
- (2)
- (3) 29-KA28 (OG/BU)
- (4) 32-AA27 (WH/GN)
- (5) 29S-LF21 (OG/BK)
- (6) 32-KA28 (WH/RD)
- (7)

- (8) 31S-GL20 (BK/RD)
- (9) 15S-LG14B (GN/RD)
- (10) 31S-LB25A (BK/BU)
- (11) 31S-AA30 (BK/YE)
- (12)
- (13)


|                                                                                                                                                                                                      |                                                                                                                                                                                                             |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>C71</b><br/><b>14K733</b></p> <p>F01015</p>  <p>(1)</p> <p>(1) 31-GJ1B (BK)</p> <p>H4<br/>Second horn</p>     | <p><b>C76</b><br/><b>14K733</b></p> <p>F01015</p>  <p>(1)</p> <p>(1) 29S-GJ1A (OG/BU)</p> <p>H1<br/>Horn</p>             |
| <p><b>C72</b><br/><b>14K733</b></p> <p>F01015</p>  <p>(1)</p> <p>(1) 29S-GJ1C (OG/BU)</p> <p>H4<br/>Second horn</p> | <p><b>C77</b><br/><b>14K733</b></p> <p>F02590</p>  <p>(1) 29S-GJ1 (OG/BU)<br/>(2) 31-GJ1 (BK)</p> <p>H1<br/>Horn</p>    |
| <p><b>C73</b><br/><b>14K733</b></p> <p>F01015</p>  <p>(1)</p> <p>(1) 29S-GJ1C (OG/BU)</p> <p>H1<br/>Horn</p>      | <p><b>C78</b><br/><b>14K733</b></p> <p>F02590</p>  <p>(1) 31-GJ1D (BK)<br/>(2) 29S-GJ1D (OG/BU)</p> <p>H1<br/>Horn</p> |
| <p><b>C75</b><br/><b>14K733</b></p> <p>F01015</p>  <p>(1)</p> <p>(1) 31-GJ1A (BK)</p> <p>H1<br/>Horn</p>          | <p><b>C80</b><br/><b>14K733</b></p> <p>F01015</p>  <p>(1)</p> <p>(1) 31-GJ1C (BK)</p> <p>H1<br/>Horn</p>               |

C84  
14U733

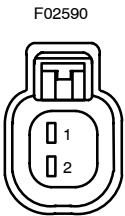

- (1) 31-GJ1E (BK)
- (2) 29S-GJ1E (OG/BU)

C90 (BK)  
12A690

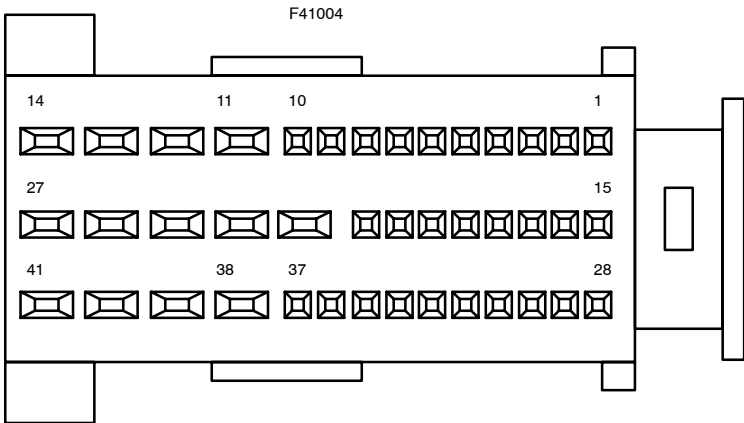

- (1) 5-EC7B (BU/RD)

(2) 91S-RD15 (BK/RD)

(3) 91S-TA36 (BK/GN)

(4) 31S-BB16 (BK/RD)

(5) 91S-RE8A (BK/YE)

(6) 91S-RH5 (BK/BU)

(7) 15S-LG23 (GN/WH)

(8) 15S-LG23B (GN/WH)

(9) 15S-LG28 (GN/WH)

(10) 15S-LG28A (GN/WH)
- (11) 50-BB12 (GY)

(12) 15-RJ15 (GN/BU)

(13) 30-RE8 (RD)

(14) 15-RN3A (GN/BU)

(15) 4-EC7 (GY/RD)

(16) 15-DC28A (GN/BU)

(17) 31S-FA11 (BK/YE)

(18) 15S-FA6 (GN/YE)

(19) 91S-PA13A (BK/BU)
- (20) 30-BA10 (RD)

(21) 91S-RH9A (BK/BU)

(22) 91S-LG45 (BK/GN)

(23) 30-TA36 (RD)

(24) 15S-RD15D (GN/OG)

(25) 15S-RD15C (GN/OG)

(26) 15S-RD15B (GN/OG)

(27) 15S-RD15A (GN/OG)

(28) 10-RJ30 (GY)

(29) 7-FA88 (YE/VT)

(30) 8-PF36 (WH/GN)
- (31) 31S-TA36 (BK/GN)

(32) 10-PF36 (GY/OG)

(33) 10-PF36A (GY/OG)

(34) 15-RE17 (GN/BU)

(35) 15S-LG9 (GN/BK)

(36) 15S-LG9A (GN/BK)

(37) 15-DC33 (GN/BU)

(38) 15-RJ14 (GN/YE)


(39) 15S-LG9A (GN/BK)

(40) 15-DC33 (GN/BU)

(41) 15-RE21 (GN/OG)

P93  
Battery Junction  
Box (BJB)

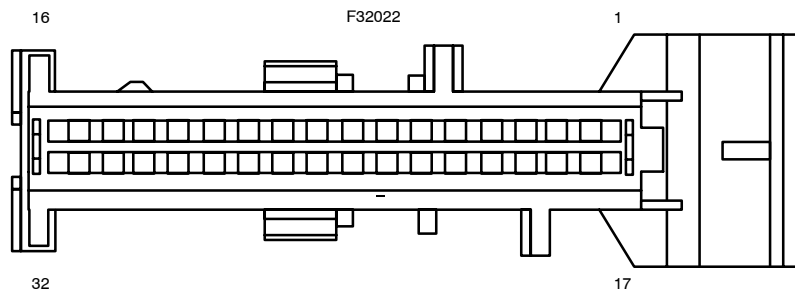


**C95****14K733**

|      |                       |                       |
|------|-----------------------|-----------------------|
| (1)  | (12)                  | (23)                  |
| (2)  | (13) 31S-BB7 (BK/BU)  | (24)                  |
| (3)  | (14)                  | (25)                  |
| (4)  | (15)                  | (26)                  |
| (5)  | (16) 31S-FA78 (BK/WH) | (27)                  |
| (6)  | (17)                  | (28) 8-GE38 (WH/BK)   |
| (7)  | (18)                  | (29) 31S-GL7 (BK/YE)  |
| (8)  | (19)                  | (30) 9-GE38 (BN/YE)   |
| (9)  | (20)                  | (31)                  |
| (10) | (21)                  | (32) 31S-FA23 (BK/BU) |
| (11) | (22)                  |                       |

P91  
Central Junction  
Box (CJB)

C96  
14K733

F41002

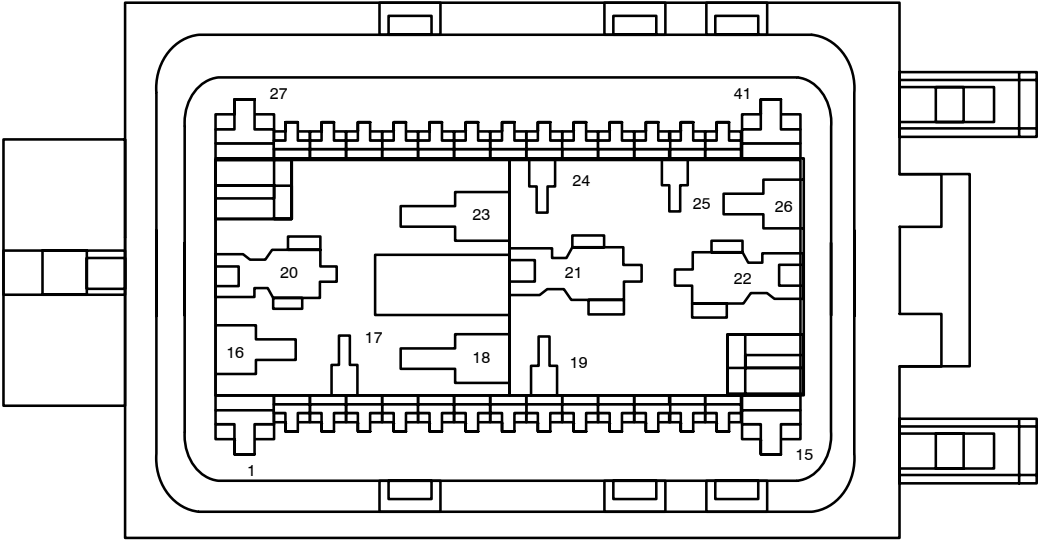


- |                      |                       |                        |
|----------------------|-----------------------|------------------------|
| (1)                  | (17) 29-AD27 (OG/BK)  | (32) 49S-LG13 (BU/RD)  |
| (2) 15S-LE22 (GN/OG) | (18)                  | (33) 15-LG28A (GN/WH)  |
| (3) 15S-LE15 (GN/BK) | (19)                  | 15-LG46 (GN/OG)        |
| (4)                  | (20) 30-DA2 (RD)      | 15-LG28 (GN/WH)        |
| (5)                  | (21) 15-DA3 (GN/RD)   | (34) 49S-LG20 (BU/WH)  |
| (6) 32-KA34 (WH/BK)  | (22) 30-DA1 (RD)      | (35) 29S-LF7 (OG/BU)   |
| (7) 15S-LE23 (GN/WH) | (23) 32-KA11 (WH/BK)  | (36) 49S-LG11 (BU/OG)  |
| (8) 15S-LE16 (GN/OG) | (24)                  | 49S-LG18 (BU)          |
| (9) 33-KA34 (YE/BK)  | (25) 15S-LG9A (GN/BK) | 49S-LG18A (BU)         |
| (10)                 | 15S-LG9 (GN/BK)       | (37) 49S-LG11A (BU/OG) |
| (11) 31S-GC6 (BK/YE) | (26)                  | 49S-LG11 (BU/OG)       |
| (12) 31S-KA9 (BK/OG) | (27) 15-DA6 (GN/WH)   | 49S-LG18 (BU)          |
| (13)                 | (28) 29S-LF16 (OG/GN) | (38) 15-RE17 (GN/BU)   |
| (14)                 | (29)                  | (39) 91-DK20 (BK/RD)   |
| (15)                 | (30)                  | (40) 31-KA9A (BK)      |
| (16)                 | (31) 15S-LG23 (GN/WH) | (41) 32-KA10 (WH/GN)   |

P91  
Central Junction  
Box (CJB)

**C98****14335**

F14018

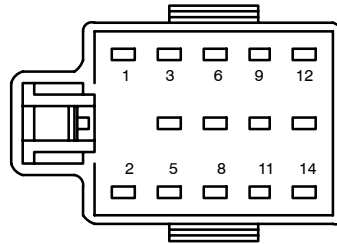


P91  
Central Junction  
Box (CJB)

- |                     |                       |
|---------------------|-----------------------|
| (1)                 | (9)                   |
| (2) 8-AG12 (WH/GN)  | (10) 29-AA57 (OG/YE)  |
| (3)                 | (11) 15-AG7 (GN/BU) + |
| (4) 91-DA4 (BK/GN)  | 15-AG12 (GN/BK)       |
| 91-LC7A (BK/BU)     | 15-AG12A (GN/BK)      |
| (5)                 | (12)                  |
| (6) 8-AA57 (WH)     | (13) 31S-LB12 (BK/YE) |
| (7) 29-LB6A (OG/YE) | (14) 29-AG12 (OG/BK)  |
| 29-LC7B (OG/BU)     |                       |
| (8) 8-GB8 (WH/BU)   |                       |
| 8-GB8 (WH/BU) +     |                       |
| 8-GB8A (WH/BU)      |                       |

**C99****14014**

F32020

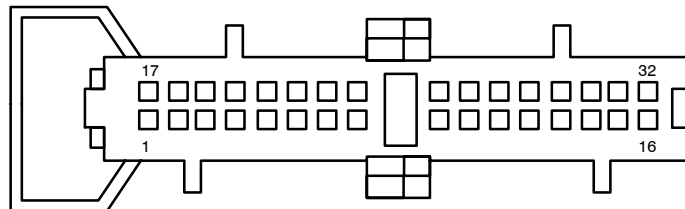


P91  
Central Junction  
Box (CJB)

- |                        |                        |                        |
|------------------------|------------------------|------------------------|
| (1)                    | (13) 31S-AA63B (BK/OG) | (26) 31S-GL20 (BK/RD)  |
| (2)                    | (14) 31S-AA64B (BK/GN) | 31S-GL20A (BK/YE)      |
| (3)                    | (15)                   | (27) 31S-AA62B (BK/WH) |
| (4)                    | (16) 5-EC10Z (BU)      | (28)                   |
| (5)                    | (17)                   | (29) 31S-AA61B (BK/BU) |
| (6)                    | (18)                   | (30) 31S-AA30 (BK/YE)  |
| (7)                    | (19)                   | 31S-AA30A (BK/YE)      |
| (8)                    | (20)                   | (31)                   |
| (9) 31S-GL16A (BK/BU)  | (21)                   | (32) 4-EC10L (GY)      |
| (10) 31S-GL19 (BK/GN)  | (22)                   | 4-EC10Z (GY)           |
| (11) 31S-GL12 (BK/OG)  | (23)                   | 49S-LG12 (BU)          |
| (12) 31S-GL19A (BK/YE) | (24)                   | 49S-LG12C (BU)         |
| 31S-GL9A (BK/YE)       | (25)                   | 49S-LG19 (BU/RD)       |
|                        |                        | 49S-LG19C (BU/RD)      |

C100

14014

F46006

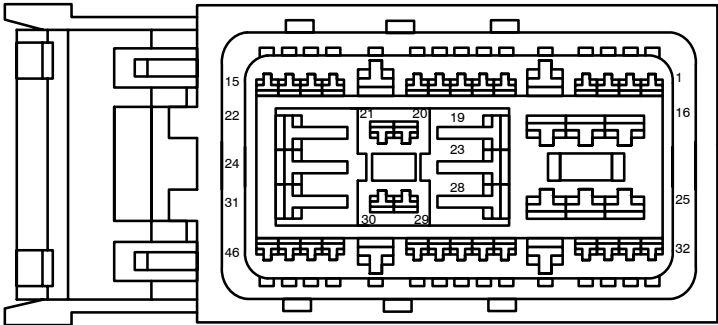


- |                       |                          |                       |
|-----------------------|--------------------------|-----------------------|
| (1) 15S-LG9B (GN/BK)  | (17) 15S-RG2 (GN/OG)     | (33) 49S-LG19 (BU/RD) |
| 15S-LG16 (GN/OG)      | (18) 32-AA59 (WH/BK)     | (34) 29S-LF11 (OG/WH) |
| 15S-LG9 (GN/BK)       | (19)                     | 29S-LF11A (OG/WH)     |
| (2) 30-GN10 (RD)      | (20)                     | (35) 29-AD12 (OG/YE)  |
| (3) 15-GN10 (GN/YE)   | (21)                     | 15-MD7 (GN/BU)        |
| (4)                   | (22)                     | 15S-KA28 (GN/BU)      |
| (5) 29-AJ26 (OG/YE)   | (23) 15S-HB19A (BK)      | (36) 15S-LG14 (GN/RD) |
| (6)                   | 15S-HB19 (GN/BU)         | (37) 91S-RP3 (BK/RD)  |
| (7) 15-RJ30 (GN/YE)   | (24) 15-AJ18 (GN/WH) +   | (38) 29-LB25 (OG/BU)  |
| (8)                   | 15-AJ7 (GN/BU)           | (39) 29S-LF20(OG)     |
| (9) 15-MD7 (GN/BU)    | (25) 32-AA59AA (WH/BK) + | 29S-LF20A (OG)        |
| (10) 29S-LF21 (OG/BK) | 32-AA43A (WH/VT)         | (40)                  |
| (11) 33-AA43A (YE/VT) | (26) 29-AJ27 (OG/WH)     | (41)                  |
| 33-AA59 (YE/BK)       | (27) 29-AJ83 (OG/BU)     | (42)                  |
| (12) 29S-GL26 (OG/GN) | (28) 30-LF29 (RD)        | (43)                  |
| (13) 15-LG23 (GN/WH)  | (29) 29-AJ84 (OG/WH)     | (44) 29-MD8A (OG)     |
| (14) 32-KA28 (WH/RD)  | (30) 29-AH35 (OG/YE)     | (45)                  |
| (15) 29-KA28 (OG/BU)  | (31)                     | (46) 32-AA27 (WH/GN)  |
| (16) 33-AA60 (YE)     | (32) 49S-LG12 (BU)       | 32-AA27A (WH/GN)      |

P91  
Central Junction  
Box (CJB)

**C102** (BU)  
**14401**

F46006

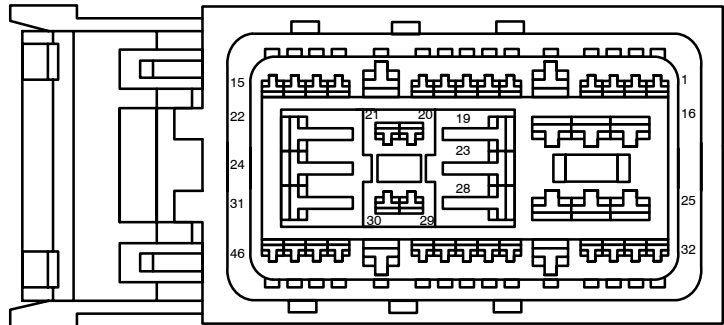


- |                                                                                                              |                                                             |                                             |
|--------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|---------------------------------------------|
| (1) 29S-LF1 (OG/YE)                                                                                          | (14) 15-JA10 (GN/OG) +<br>15-JA56 (GN/OG)                   | (30) 15-LD16 (GN/RD)                        |
| (2)                                                                                                          | (15)                                                        | (31)                                        |
| (3) 75-GG14C (YE/BU) +<br>75-MD15C (YE/GN) +<br>75-GG14C (YE/BU) +<br>75-MD15S (YE/GN) +<br>75-MD15A (YE/GN) | (16) 29-MD1 (OG/YE)<br>29-MD15 (OG/BK)<br>29-MD15S (OG/BK)  | (32)                                        |
| (4)                                                                                                          | (17) 15S-LG23 (GN/WH)<br>15S-LG23 (GN/WH) +<br>34S-LG6 (BU) | (33) 29-LE29 (OG/BK)                        |
| (5) 15-DA4 (GN/BK)                                                                                           | (18)                                                        | (34) 29S-LF5 (OG/BU)                        |
| (6)                                                                                                          | (19) 31-DA1 (BK)                                            | (35) 29-LC11 (OG/WH) +<br>29-LC23 (OG/WH)   |
| (7) 29-GG14 (OG)                                                                                             | (20) 15-KA19 (GN/OG)                                        | (36) 15-DA1 (GN/YE)                         |
| (8)                                                                                                          | (21) 75-DA1 (YE)                                            | (37)                                        |
| (9) 29-RA1 (OG)                                                                                              | (22)                                                        | (38) 91-DK20 (BK/RD)                        |
| (10) 29-FA13 (OG)<br>29-FA94 (OG/BK)                                                                         | (23) 29-HA6 (OG/YE)                                         | (39) 33-KA34 (YE/BK)                        |
| (11)                                                                                                         | (24)                                                        | (40) 15-GG14 (GN/RD) +<br>15-GL37 (GN/BK)   |
| (12)                                                                                                         | (25)                                                        | (41) 31S-LC11 (BK/WH) +<br>31S-LC23 (BK/WH) |
| (13) 15-LE29 (GN/BK) +<br>15-LE58 (GN/OG)                                                                    | (26)                                                        | (42)                                        |
|                                                                                                              | (27) 29-LB8 (OG)                                            | (43) 32-KA34 (WH/BK)                        |
|                                                                                                              | (28)                                                        | (44) 15S-LE21 (GN/BK)                       |
|                                                                                                              | (29)                                                        | (45)                                        |
|                                                                                                              |                                                             | (46)                                        |

P91  
Central Junction  
Box (CJB)

C103

14401

F32022

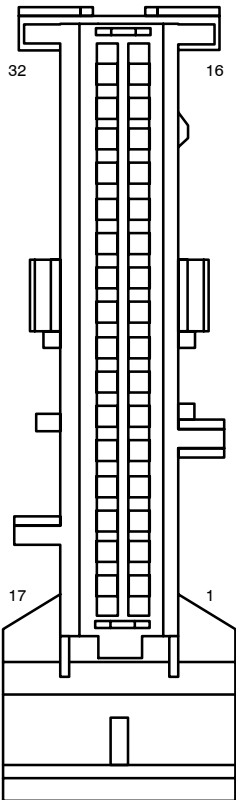


- |                      |                       |                       |
|----------------------|-----------------------|-----------------------|
| (1)                  | (11)                  | (22) 91S-KA11 (BK/RD) |
| (2)                  | (12)                  | (23) 10-KA8 (GY/RD)   |
| (3)                  | (13) 8-FA9 (WH/GN)    | (24) 91S-KA35 (BK/BU) |
| (4) 91S-HB22 (BK/GN) | (14) 15S-FA78 (GN/WH) | (25)                  |
| (5)                  | (15)                  | (26)                  |
| (6) 31S-GE44 (BK/RD) | (16) 31S-HB22 (BK/GN) | (27) 91S-LE25 (BK/BU) |
| 31S-GE44D (BK/RD)    | (17) 91S-LG8 (BK/OG)  | (28) 8-KA47 (WH/GN)   |
| (7)                  | (18) 8-PG13 (WH)      | (29) 8-KA46 (WH/BU)   |
| (8)                  | (19) 91S-LE14 (BK/OG) | (30) 8-KA45 (WH/RD)   |
| (9)                  | (20)                  | (31) 91S-LG2 (BK/BU)  |
| (10) 9-PG13 (BN)     | (21) 91S-KA10 (BK/GN) | (32) 91S-LG1 (BK/YE)  |

P91  
Central Junction  
Box (CJB)

**C107****17N400**

 F02056



E174  
High mounted  
stop lamp


- (1) 15S-LG6 (GN/YE)  
15S-LG6C (GN/YE)
- (2) 31-LG6 (BK)  
91-LG6 (BK/YE)

**C110****14A280**

- (1) 30-BB10 (RD)
- (2) 50-BB12 (GY)


C111  
14401

F45004

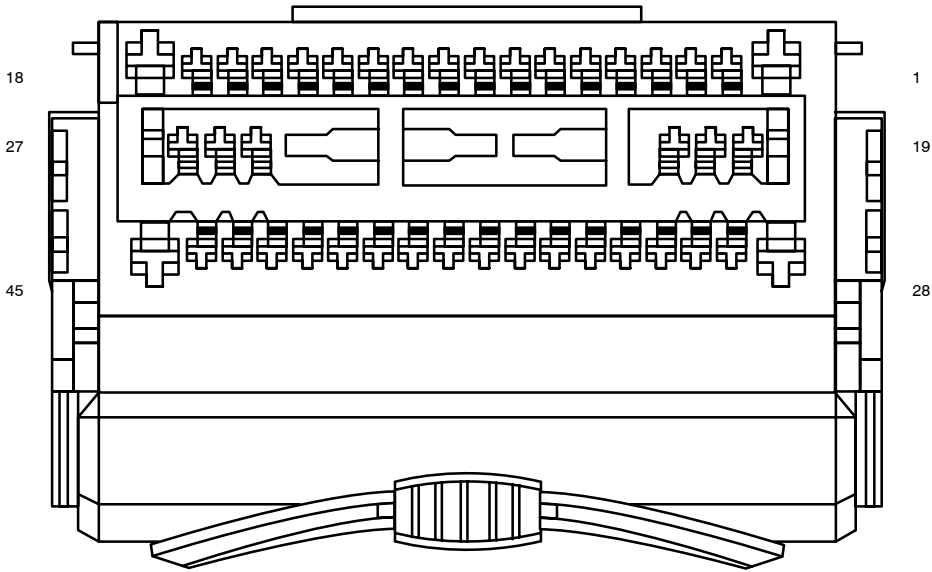

14K733

F45002

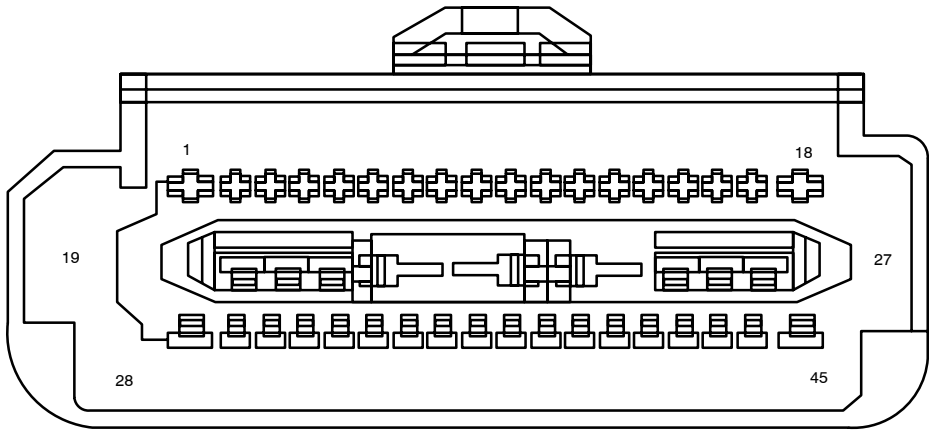


- |                       |                      |                      |                      |
|-----------------------|----------------------|----------------------|----------------------|
| (1) 15-CF54 (GN/WH)   | (12) 50-BB16 (GY/BK) | (20) 8-LE45 (WH)     | (33) 9-LE46 (BN/RD)  |
| (2) 10-CE8 (GY/VT)    | (13) 30-BB9 (RD)     | (21) 8-LE46 (WH/RD)  | (34) 7-LE56 (YE/BU)  |
| 10-CE8A (GY/VT)       | (14) 8-CE8 (WH/BU)   | (22) 15-FA18 (GN/OG) | (35) 7-LE57 (YE/GN)  |
| (3) 4-EC7T (GY/RD)    | 8-CE8B (WH/BU)       | 15-FA18A (GN/OG)     | (36)                 |
| 4-EC7M (GY/RD)        | (15) 9-CE8 (BN/BU)   | (23)                 | (37) 10-PF36 (GY/OG) |
| 4-EC7Z (GY/RD)        | 9-CE8A (BN/BU)       | (24)                 | (38)                 |
| (4) 5-EC7T (BU/RD)    | 9-CF1 (BN/RD) +      | (25)                 | (39)                 |
| 5-EC7M (BU/RD)        | 9-CF1A (BN/RD)       | (26) 9-LE57 (BN/GN)  | (40)                 |
| 5-EC7Z (BU/RD)        | 91-CE8 (BK/OG)       | (27)                 | (41) 8-PF36 (WH/GN)  |
| (5) 31S-CF54 (BK/WH)  | (16) 7-CE8 (YE/BU)   | (28)                 | (42)                 |
| (6) 91S-GJ7 (BK/BU)   | 7-CE8A (YE/BU)       | (29)                 | (43)                 |
| (7)                   | 7-CF1 (YE/RD) +      | (30) 9-LE45 (BN)     | (44)                 |
| (8) 9-JA49 (BN)       | 7-CF1A (YE/RD)       | (31) 8-LE56 (WH/BU)  | (45)                 |
| (9) 8-JA49 (WH)       | 15-CE8 (GN/RD)       | 8-LE45A (WH)         |                      |
| (10) 91S-CF54 (BK/WH) | (17)                 | (32) 9-LE56 (BN/BU)  |                      |
| (11) 8-LE57 (WH/GN)   | (18)                 |                      |                      |
| 8-LE45A (WH) +        | (19) 15S-LD1 (GN/YE) |                      |                      |
| 8-LE46A (WH/RD)       |                      |                      |                      |



**C112****14014**


F29004

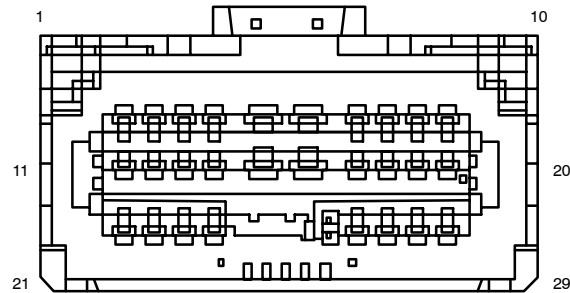

- |                       |                       |                   |                      |
|-----------------------|-----------------------|-------------------|----------------------|
| (1) 8-MD17 (WH/RD)    | (8) 9-RJ30 (BN)       | (16)              | (21)                 |
| 8-MD17A (WH/RD)       | (9) 8-MD11A (WH/VT)   | (17)              | (22)                 |
| (2) 10-MD17 (GY/RD)   | 8-MD18 (WH)           | (18)              | (23)                 |
| 10-MD17A (GY/RD)      | (10) 10-MD11A (GY/WH) | (19) 4-EC10F (GY) | (24)                 |
| (3) 8-RJ30 (WH)       | 10-MD18 (GY)          | 4-EC10G (GY)      | (25) 91S-PG6 (BK/YE) |
| (4) 7-RJ30 (YE)       | (11) 5-EC7J (BU/RD)   | 4-EC10H (GY)      | (26)                 |
| (5) 31S-GE44 (BK/RD)  | 5-EC7M (BU/RD)        | 4-EC10S (GY)      | (27)                 |
| (6) 15S-LD6 (GN/YE)   | (12) 4-EC7J (GY/RD)   | (20) 5-EC10F (BU) | (28)                 |
| (7) 91S-BB6 (BK/YE) + | 4-EC7M (GY/RD)        | 5-EC10G (BU)      | (29)                 |
| 91S-BB6B (BK/YE)      | (13) 9-GA7 (BN/RD)    | 5-EC10H (BU)      |                      |
| 91S-BB6 (BK/YE)       | (14) 8-GA7 (WH/RD)    | 5-EC10S (BU)      |                      |
|                       | (15)                  |                   |                      |

**14401**

F29006

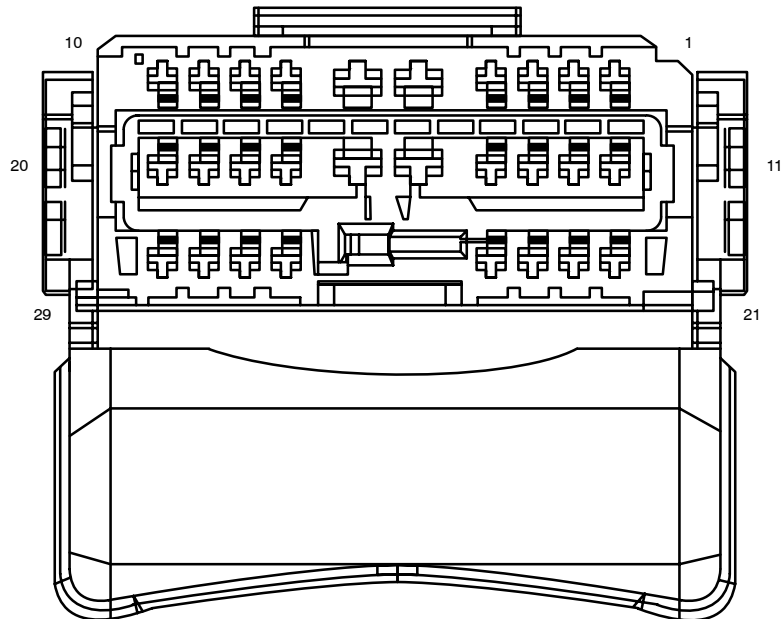


- |                      |                       |                     |                       |
|----------------------|-----------------------|---------------------|-----------------------|
| (1) 8-MD17SR (WH/RD) | (7) 91S-BB6 (BK/YE)   | (12) 4-EC7S (GY/RD) | (20) 5-EC10L (BU)     |
| 8-MD17SL (WH/RD)     | (8) 9-RJ30 (BN)       | 4-EC7W (GY/RD)      | 5-EC10U (BU)          |
| 8-MD17 (WH/RD)       | (9) 8-MD11A (WH/VT)   | 4-EC10U (GY)        | (21)                  |
| 8-MD17A (WH/RD)      | 8-MD18 (WH)           | 5-EC10U (BU)        | (22)                  |
| (2) 10-MD17 (GY/RD)  | 8-MD18SL (WH)         | (13) 9-GA7 (BN/RD)  | (23)                  |
| 10-MD17A (GY/RD)     | 8-MD11SR (WH/VT)      | (14) 8-GA7 (WH/RD)  | (24)                  |
| 10-MD17SL (GY/RD)    | (10) 10-MD11A (GY/WH) | (15)                | (25) 91S-PG6B (BK/YE) |
| 10-MD17SR (GY/RD)    | 10-MD18 (GY)          | (16)                | (26)                  |
| (3) 8-RJ30 (WH)      | 10-MD18SL (GY)        | (17)                | (27)                  |
| (4) 7-RJ30 (YE)      | 10-MD11SR (GY/WH)     | (18)                | (28)                  |
| (5) 31S-GE44 (BK/RD) | (11) 5-EC7S (BU/RD)   | (19) 4-EC10L (GY)   | (29)                  |
| 31S-GE44C (BK/RD)    | 5-EC7W (BU/RD)        | 4-EC10U (GY)        |                       |
| (6) 15S-LD6 (GN/YE)  | 5-EC10U (BU)          |                     |                       |

C113

14014


F29004

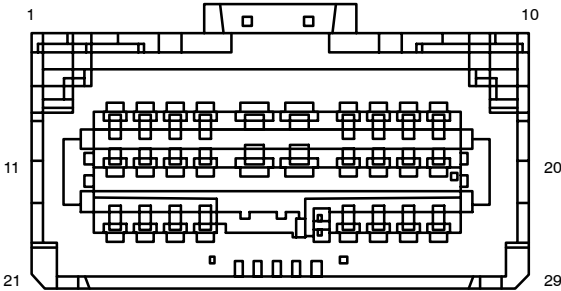

- |                     |                       |                     |                      |
|---------------------|-----------------------|---------------------|----------------------|
| (1) 9-CF34B (BN/BU) | (7) 7-CF67 (YE/RD)    | (16)                | (22) 8-GN9 (WH/GN)   |
| 9-CF34A (BN/BU)     | (8) 5-EC12 (BU/RD)    | (17) 5-EC7S (BU/RD) | (23)                 |
| (2) 8-CF34 (WH/BU)  | (9) 4-EC12 (GY/RD)    | 5-EC7U (BU/RD)      | (24)                 |
| 8-CF34A (WH/BU)     | (10)                  | (18) 4-EC7S (GY/RD) | (25)                 |
| (3) 9-CF40A (BN/GN) | (11)                  | 4-EC7U (GY/RD)      | (26) 8-GN6 (WH)      |
| 9-CF40 (BN/GN)      | (12)                  | 8-MD27SA (WH/VT)    | (27) 91S-RH5 (BK/BU) |
| (4) 8-CF40A (WH/GN) | (13) 91S-BB6B (BK/YE) | (19) 9-GN6 (BN)     | (28)                 |
| 8-CF40A (WH/GN)     | (14) 29-AD27 (OG/BK)  | (20)                | (29)                 |
| (5) 10-RJ30 (GY)    | (15)                  | (21)                |                      |
| (6) 9-CF67 (BN/RD)  |                       |                     |                      |

14K733


F29006

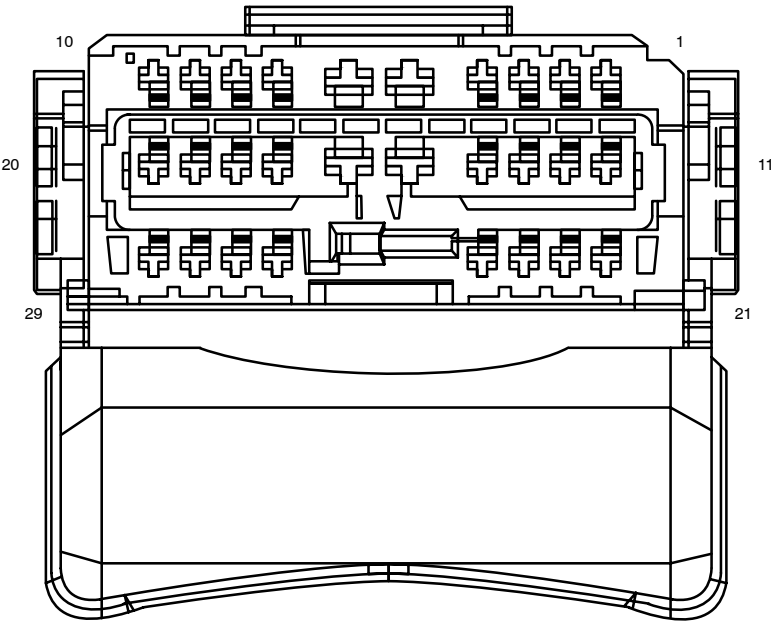


- |                    |                       |                     |                      |
|--------------------|-----------------------|---------------------|----------------------|
| (1) 9-CF34 (BN/BU) | (7) 7-CF1A (YE/RD)    | (15)                | (22) 8-GN9 (WH/GN)   |
| 9-CF34A (BN/BU)    | (8) 5-EC12 (BU/RD)    | (16)                | (23)                 |
| (2) 8-CF34 (WH/BU) | (9) 4-EC12 (GY/RD)    | (17) 5-EC7Y (BU/RD) | (24)                 |
| 8-CF34A (WH/BU)    | (10)                  | 5-EC7Z (BU/RD)      | (25)                 |
| (3) 9-CF40 (BN/GN) | (11)                  | (18) 4-EC7Y (GY/RD) | (26) 8-GN6 (WH)      |
| 9-CF40A (BN/GN)    | (12)                  | 4-EC7Z (GY/RD)      | (27) 91S-RH5 (BK/BU) |
| (4) 8-CF40 (WH/GN) | (13) 91S-BB6B (BK/YE) | (19) 9-GN6 (BN)     | (28)                 |
| 8-CF40A(WH/GN)     | (14) 29-AD27 (OG/BK)  | (20)                | (29)                 |
| (5) 10-RJ30 (GY)   |                       | (21)                |                      |
| (6) 9-CF1A (BN/RD) |                       |                     |                      |

**C116****12A690**

F16020

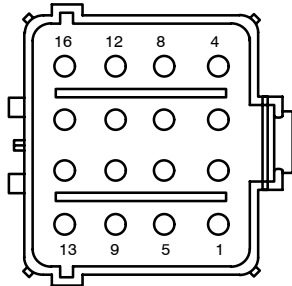**14K039**


F16020.01

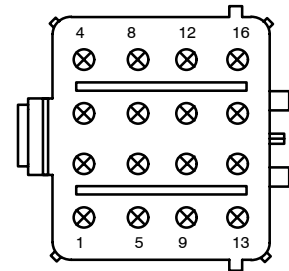


- |                      |                       |
|----------------------|-----------------------|
| (1) 15S-TA37 (GN/YE) | (9) 9-TA36 (BN/GN)    |
| (2) 15S-TA38 (GN/BU) | (10) 8-TA36 (WH/GN)   |
| (3) 15S-TA40 (GN/BK) | (11) 91S-TA17 (BK/RD) |
| (4) 15S-TA39 (GN/RD) | (12) 15S-TA24 (GN/BU) |
| (5)                  | (13)                  |
| (6) 15-TA55 (GN/BK)  | (14) 15S-TA65 (GN/WH) |
| (7) 91S-LG45 (BK/GN) | (15) 15S-TA64 (GN/OG) |
| (8) 15S-TA17 (GN/OG) | (16) 15S-TA63 (GN/BK) |

**C117****12A690**

F16034

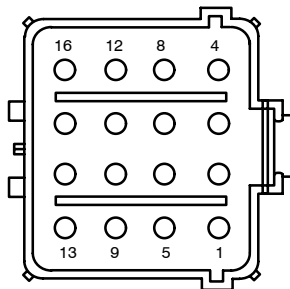**14K039**

F16036

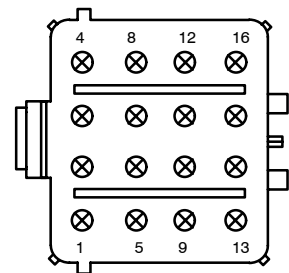


- |                     |                       |
|---------------------|-----------------------|
| (1) 4-EC7E (GY/RD)  | (7) 8-RJ29 (WH/BU)    |
| (2) 5-EC7E (BU/RD)  | (8) 91-TA2 (BK/BU)    |
| (3)                 | (9) 91-TA55 (BK/GN)   |
| (4) 10-PF36 (GY/OG) | (10) 8-TA27 (WH/VT)   |
| 10-PF36A (GY/OG)    | (11) 9-TA27 (BN/WH)   |
| (5) 8-PF36 (WH/GN)  | (12) 30-TA55 (RD)     |
| 8-PF36A (WH/GN)     | (13) 15S-TA23 (GN/YE) |
| (6) 9-RJ29 (BN/BU)  |                       |

C118

14014


F29004

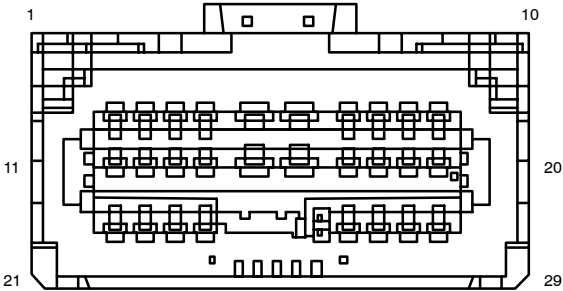

- |                      |                      |                     |      |
|----------------------|----------------------|---------------------|------|
| (1) 8-MD10 (WH/BK)   | (8)                  | (15)                | (23) |
| 8-MD10B (WH/BK)      | (9) 8-MD11 (WH/VT)   | (16)                | (24) |
| (2) 10-MD10 (GY/BK)  | 8-MD18A (WH)         | (17)                | (25) |
| 10-MD10B (GY/BK)     | (10) 10-MD11 (GY/WH) | (18)                | (26) |
| (3) 91S-GN12 (BK/OG) | 10-MD18A (GY)        | (19)                | (27) |
| (4)                  | (11) 2-MD49 (GY/OG)  | (20)                | (28) |
| (5)                  | (12) 1-MD49 (WH/GN)  | (21) 2-MD50 (GY/BK) | (29) |
| (6)                  | (13) 3-MD49 (BK)     | (22) 1-MD50 (WH/BK) |      |
| (7) 15S-GN23 (GN/OG) | (14)                 |                     |      |

14401


F29006

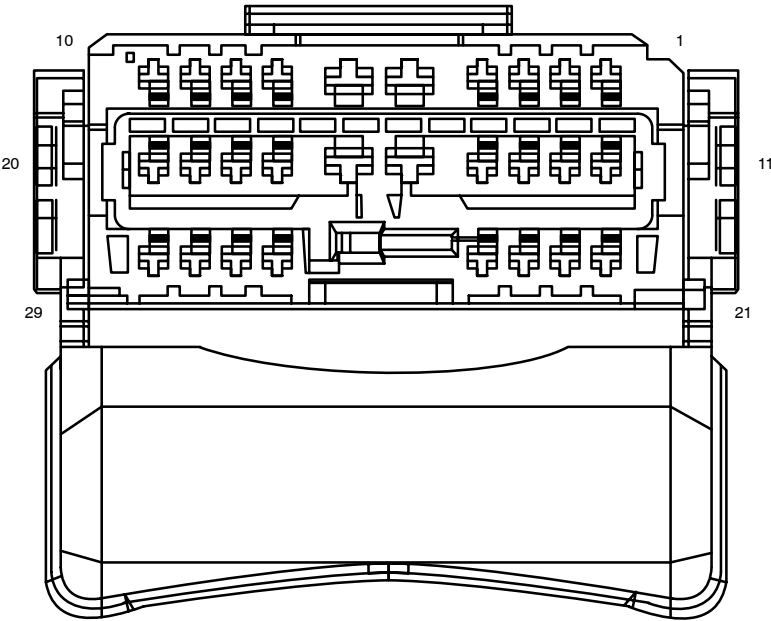

- |                      |                      |                     |                     |
|----------------------|----------------------|---------------------|---------------------|
| (1) 8-MD10SL (WH/BK) | (7) 15S-GN23 (GN/OG) | (12) 1-MD49 (WH/GN) | (21) 2-MD50 (GY/BK) |
| 8-MD10SR (WH/BK)     | (8)                  | (13) 9-MO27 (BN/WH) | (22) 1-MD50 (WH/BK) |
| 8-MD10 (WH/BK)       | (9) 8-MD11 (WH/VT)   | (14)                | (23)                |
| 8-MD10B (WH/BK)      | 8-MD18A (WH)         | (15)                | (24)                |
| (2) 10-MD10 (GY/BK)  | 8-MD18SR (WH)        | (16)                | (25)                |
| 10-MD10B (GY/BK)     | 8-MD10SL (WH/VT)     | (17)                | (26)                |
| 10-MD10SR (GY/BK)    | (10) 10-MD11 (GY/WH) | (18)                | (27)                |
| 10-MD10SL (GY/BK)    | 10-MD18A (GY)        | (19)                | (28)                |
| (3) 91S-GN12 (BK/OG) | 10-MD18SR (GY)       | (20)                | (29)                |
| (4)                  | 10-MD11SL (GY/WH)    |                     |                     |
| (5)                  | (11) 2-MD49 (GY/OG)  |                     |                     |
| (6)                  |                      |                     |                     |

**C120** (BK)**12A690**

 F01009



- (1) 50-BB12 (GY)  
50S-BB12A (GY)  
50-BB12 (GY) +  
50S-BB12A (GY)


**14A280**

F01010

**C121****14K138**

as of model year 2009


F04272

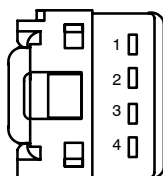

- |                       |     |
|-----------------------|-----|
| (1) 7-LH31 (YE/RD)    | (5) |
| (2) 91S-AJ55 (BK/RD)  | (6) |
| (3) 91S-AJ54B (BK/GN) | (7) |
| (4) 91-AJ18 (BK/WH)   | (8) |

before model year 2009

F08280

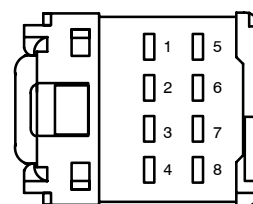


N297  
Window control  
switch, passenger  
side front

**C122****14240**

as of model year 2009


F04272

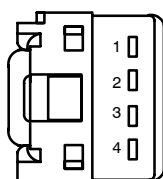

- |                      |     |
|----------------------|-----|
| (1) 7-LH36 (YE/BU)   | (5) |
| (2) 91S-AJ64 (BK/OG) | (6) |
| (3) 91S-AJ63 (BK/BU) | (7) |
| (4) 91-AJ32 (BK/OG)  | (8) |

before model year 2009


F08280

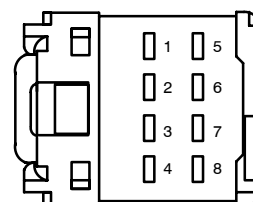

N298  
Window control  
switch, LH rear

**C148****14A584**

F10146

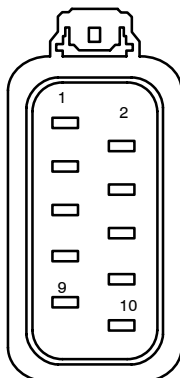


A172  
Door lock unit, driver  
side front

- |                                                                                 |                                                                                 |
|---------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| (1) 31-AA58A (BK)<br>91-AA58A (BK/YE)                                           | (6) 33-AA60 (YE)<br>33-AA60A (YE)                                               |
| (2) 31S-AA61 (BK/BU)<br>91S-AA61A (BK/BU)                                       | (7) 32-AA59B (WH/BK)<br>32-AA59C (WH/BK)<br>33-AA59 (YE/BK)<br>33-AA59A (YE/BK) |
| (3) 31S-AA62 (BK/WH)<br>91S-AA62A (BK/WH)                                       | (8) 31-AA58C (BK)<br>91-AA58B (BK/YE)                                           |
| (4) 31S-GL9A (BK/YE)                                                            | (9) 31S-AA64 (BK/GN)<br>91S-AA64A (BK/GN)                                       |
| (5) 32-AA59 (WH/BK)<br>32-AA59A (WH/BK)<br>33-AA59B (YE/BK)<br>33-AA59C (YE/BK) | (10) 31S-AA63 (BK/OG)<br>91S-AA63A (BK/OG)                                      |

C149

14K138

F10146

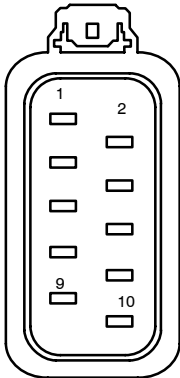


- |                                                                                 |                                                                                 |
|---------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| (1) 31-AA58C (BK)<br>91-AA58A (BK/YE)                                           | (6) 33-AA60 (YE)<br>33-AA60B (YE)                                               |
| (2) 31S-AA61B (BK/BU)<br>91S-AA61 (BK/BU)                                       | (7) 32-AA59 (WH/BK)<br>32-AA59B (WH/BK)<br>33-AA59A (YE/BK)<br>33-AA59C (YE/BK) |
| (3) 31S-AA62B (BK/WH)<br>91S-AA62 (BK/WH)                                       | (8) 31-AA58B (BK)<br>91-AA58 (BK/YE)                                            |
| (4) 31S-GL16A (BK/BU)                                                           | (9) 31S-AA64B (BK/GN)<br>91S-AA64 (BK/GN)                                       |
| (5) 32-AA59A (WH/BK)<br>32-AA59C (WH/BK)<br>33-AA59 (YE/BK)<br>32-AA59B (YE/BK) | (10) 31S-AA63B (BK/OG)<br>91S-AA63 (BK/OG)                                      |

A173  
Door lock unit,  
passenger side  
front

C151

14240

F10146

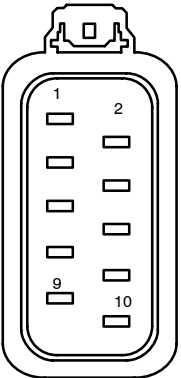


- |                                       |                                       |
|---------------------------------------|---------------------------------------|
| (1)                                   | (7) 32-AA59A (WH/BK)<br>32-AA59C (BK) |
| (2)                                   | (8) 31-AJ83C (BK)<br>91-AA58C (BK)    |
| (3)                                   | (9)                                   |
| (4) 31S-GL16 (BK/BU)                  | (10)                                  |
| (5) 33-AA59A (YE/BK)<br>33-AA59C (BK) |                                       |
| (6) 33-AA60A (YE)<br>33-AA60C (BK)    |                                       |

A276  
Door lock unit, RH  
rear

C150

14240

F10146

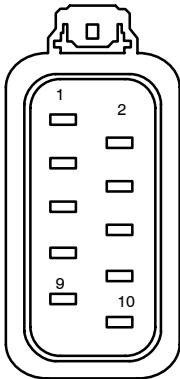

- |                                      |                                      |
|--------------------------------------|--------------------------------------|
| (1) 31-AJ83B (BK)<br>91-AA58B (BK)   | (6) 33-AA60 (BK)<br>33-AA60B (BK)    |
| (2)                                  | (7) 33-AA59 (YE/BK)<br>33-AA59B (BK) |
| (3)                                  | (8)                                  |
| (4) 31S-GL12 (BK/OG)                 | (9)                                  |
| (5) 32-AA59 (WH/BK)<br>32-AA59B (BK) | (10)                                 |


A275  
Door lock unit, LH  
rear

C152

(GY)

14014

F02074

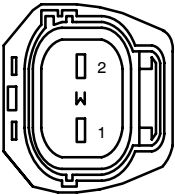


M90  
Fuel filler door  
lock motor

- |                                         |
|-----------------------------------------|
| (1) 33-AA43 (YE/VT)<br>33-AA43A (YE/VT) |
| (2) 32-AA43A (WH/VT)                    |

C155

14401


F04272

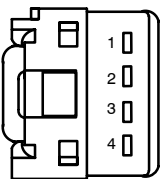

- |                                           |
|-------------------------------------------|
| (1) 10-MD27A (GY/WH)<br>10-MD27SA (GY/WH) |
| (2) 8-MD27SA (WH/VT)                      |
| (3) 3-MD27B (BK)<br>3-MD27SA (BK)         |
| (4) 8-MD27A (WH/VT)                       |

**C161****67020**

 F05142




B433  
Mass Air Flow/In-  
take Air Tempera-  
ture (MAF/IAT)  
sensor

- (A) 15-RN6 (GN/BU)
- (B) 91S-RJ22 (BK/OG)
- (C) 8-RJ21 (WH/RD)
- (D) 8-RJ22 (WH/BU)
- (E) 9-RJ22 (BN/BU)

**C169****67020**

F02624

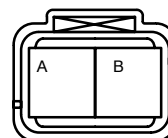

B10  
Engine Coolant  
Temperature  
(ECT) sensor

- (A) 8-RJ5 (WH)
- (B) 9-RJ5 (BN)

**C162****67020**

- (A) 15-RJ39 (GN/BU)
- (B) 8-RJ39 (WH/RD)
- (C) 91-RJ39 (BK/BU)

B41  
Camshaft position  
sensor

**C170****67020**

F01042




N96  
Power steering  
pressure switch

- (A) 7-CE6 (YE)

**C163****67020**

F02624

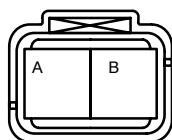


Y13  
Idle speed control  
valve

- (A) 8-RL9 (WH)
- (B) 9-RL9 (BN)

**C171****67020**

 F02618




O5  
Generator

- (A) 4-EB6 (GY)
- (B) 5-EB6 (BU)

**C164****67020**

F03328

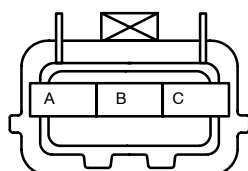


T7  
Ignition coil, cylin-  
der 2

- (A) 15-RR6 (RD/WH)
- (B) 91-RR6 (BK/WH)
- (C) 8-RR6A (WH/RD)






**C173****67020**

 F01044



- (A) 8-RJ18 (WH/BK)

 
B45  
Knock sensor
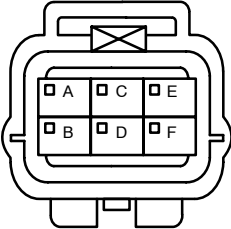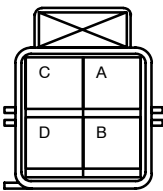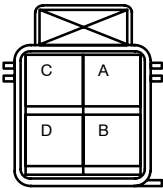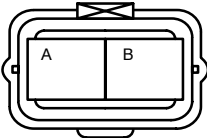
|                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><div><div>C174</div><div>67020</div><div>F06294</div><div></div></div><div><div>(A) 91S-PA53 (BK/RD)</div><div>(B) 91S-PA52 (BK/GN)</div><div>(C) 15S-PA53 (GN/BU)</div><div>(D) 15-PA51 (GN)</div><div>(E) 91S-PA54 (BK/WH)</div><div>(F) 91S-PA51 (BK/OG)</div></div><div><div>M251</div><div>EGR stepper motor</div></div></div> | <div><div><div>C177</div><div>67020</div><div>F04286</div><div></div></div><div><div>(A) 8-RJ25 (WH/BU)</div><div>(B) 9-RJ25 (BN/BU)</div><div>(C) 15-RJ25 (GN/RD)</div><div>(D) 91S-RJ25 (BK/OG)</div></div><div><div>B89</div><div>Pre-catalyst heated oxygen sensor (HO2S)</div></div></div> <div><div><div>C178</div><div>67020</div><div>F04288</div><div></div></div><div><div>(A) 8-RJ26 (WH/GN)</div><div>(B) 9-RJ26 (BN/GN)</div><div>(C) 15-RJ26 (GN/BK)</div><div>(D) 91S-RJ26 (BK/GN)</div></div><div><div>B192</div><div>Catalyst monitor sensor</div></div></div> |
| <div><div><div>C175</div><div>67020</div><div>F02616</div><div></div></div><div><div>(A) 15-RN5 (GN/BU)</div><div>(B) 31S-RL2 (BK/OG)</div></div><div><div>Y1</div><div>Evaporative emission canister purge valve</div></div></div>                                                                                                    | <div><div><div>C179</div><div>67070</div><div>F01014</div><div></div></div><div><div>O5</div><div>Generator</div></div></div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <div><div><div>C176</div><div>67070</div><div>F01042</div><div></div></div><div><div>(A) 31S-GC20 (BK/OG)</div></div><div><div>N17</div><div>Oil pressure switch</div></div></div>                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |



**C182****67070**

F06296

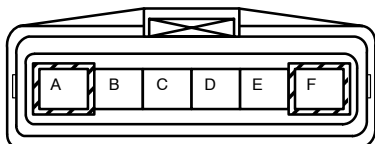


- (A) 31S-BB14 (BK/BU)
- (B) 15S-TA18A (GN/OG)
- (C) 91S-TA18 (BK/RD)
- (D) 15S-LG9 (GN/BK)
- (E) 15-LG28 (GN/WH)
- (F) 31S-BB16A (BK/RD)

N397  
Start inhibit/re-  
versing lamp  
switch

**C184****67070**

F03334

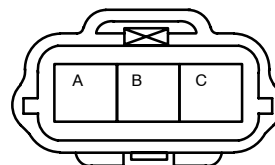


B110  
Output Shaft  
Speed (OSS) sen-  
sor

- (A) 15-TA51A (GN)
- (B) 8-TA51 (WH/RD)
- (C) 91S-TA51 (BK/YE)

**C185****67070**

F09036

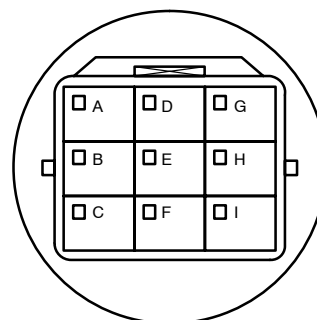


- (A) 15S-TA65A (GN/WH)
- (B) 15S-TA63A (GN/BK)
- (C) 15S-TA23A (GN/YE)
- (D) 91S-TA17A (BK/RD)
- (E) 8-TA36A (WH/GN)
- (F) 15S-TA64A (GN/OG)
- (G) 15S-TA24A (GN/BU)
- (H) 15S-TA11 (GN/WH)
- (I) 15S-TA17A (GN/OG)

A40  
Transmission  
hardware unit

**C183****67070**

F02622

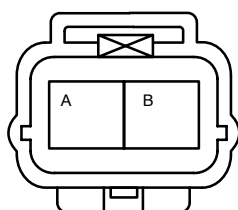

- (A) 9-TA27A (BN/WH)
- (B) 8-TA27A (WH/VT)

B44  
Turbine Shaft  
Speed (TSS) sen-  
sor

**C189****67070**

F01042




- (A) 50-BB12 (GY)

M8  
Starter motor

**C200** (BK)

14401

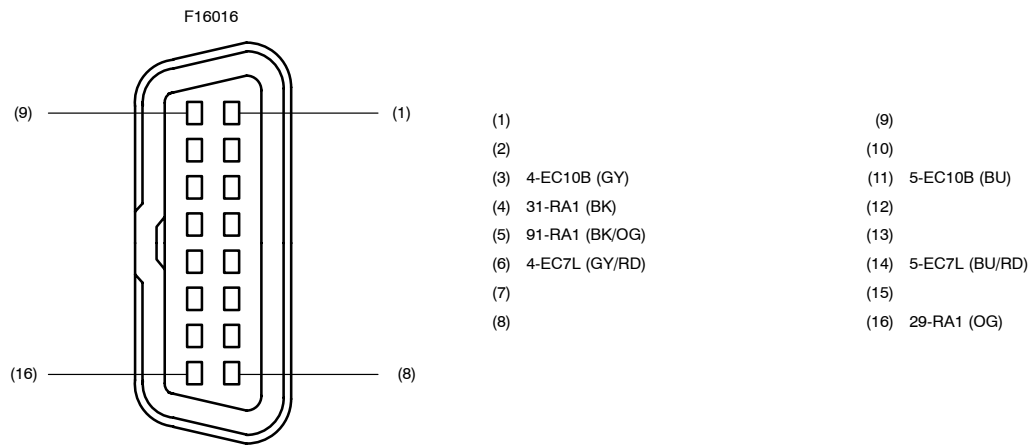


D20  
Data Link Con-  
nector (DLC)

**C223**

14A584

F07056

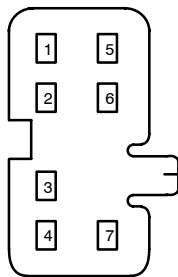


- |                      |                      |
|----------------------|----------------------|
| (1) 32-AD27A (WH/GN) | (5)                  |
| (2) 29-AD27 (OG/BK)  | (6) 91-AD27A (BK/RD) |
| (3) 91-AD27A (BK/RD) | (7) 33-AD27 (YE/GN)  |
| (4)                  |                      |

N279  
Power mirror fold  
switch

**C224**

14A584


F08303

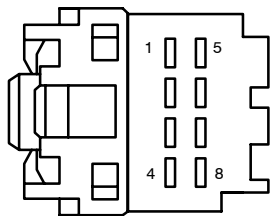

- |                      |
|----------------------|
| (1) 7-LH48 (YE/VT)   |
| (2) 91S-AD24 (BK/RD) |
| (3)                  |
| (4) 91-AD24 (BK/RD)  |
| (5)                  |
| (6)                  |
| (7)                  |
| (8)                  |

**14014**

F12130

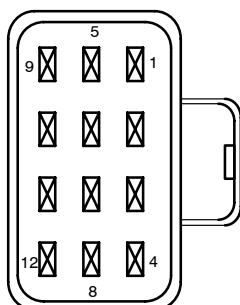


- (1) 31-RS22 (BK)
- (2) 15S-RS22 (GN/BK)
- (3)
- (4)
- (5)
- (6)

**C234**

- (7)
- (8) 7-RS22 (YE/GN)
- (9)
- (10)
- (11)
- (12)


**2B325**

F12132

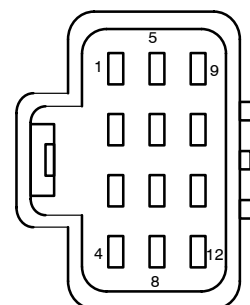**C281****14K733**

F04270


A118  
Cooling fan mod-  
ule

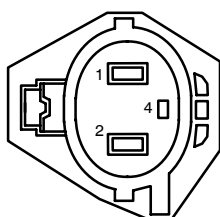

- (1) 30-PA1 (RD)
- (2) 31-PA1 (BK)
- (3)
- (4) 49-PA6 (BU)

**C304****14K733**

 F02648




E42  
Fog lamp, RH  
front

- (1) 15S-LD17 (GN/WH)
- (2) 31-LD17 (BK)

**C300**


F04306

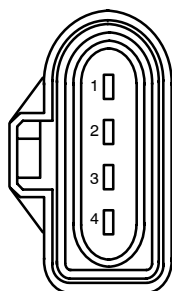

- (1) 15S-RD15A (GN/OG)  
15S-RD15D (GN/OG)
- (2) 15S-RD15B (GN/OG)  
15S-RD15C (GN/OG)
- (3) 15S-RD15C (GN/OG)  
15S-RD15B (GN/OG)
- (4) 15S-RD15D (GN/OG)  
15S-RD15A (GN/OG)

**C305****14014**


F02050

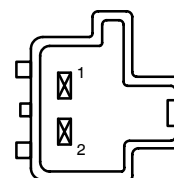

- (1) 30-LF29 (RD)
- (2)

**C302****14K733**

 F02648




E43  
Fog lamp, LH front

- (1) 15S-LD11 (GN/WH)
- (2) 31-LD11 (BK)



**C341**

F02204

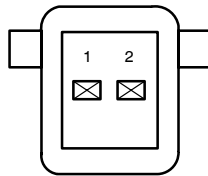


A245  
Side air bag module, passenger

- (1)  
(2)

**C378**

14401

F08278

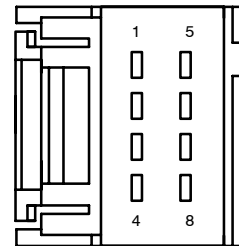


- |                       |                     |
|-----------------------|---------------------|
| (1) 29-FA13 (OG)      | (6) 33-FA76 (YE/BU) |
| (2) 8-FA9 (WH/GN)     | 33-FA76 (YE/BU) +   |
| (3) 29S-LE10A (OG/GN) | 33-FA76A (YE/BU)    |
| (4) 91-FA13 (BK/OG)   | (7) 32-FA76 (WH/BU) |
| (5)                   | 32-FA76 (WH/BU) +   |
|                       | 32-FA76A (WH/BU)    |
|                       | (8) 15-FA13 (GN/RD) |

A128  
Heater control module

**C342**

F02138

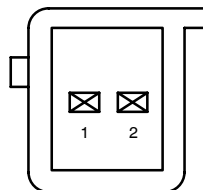


A116  
Safety belt tensioner, passenger seat

- (1)  
(2)

**C346**

18K926

F02140

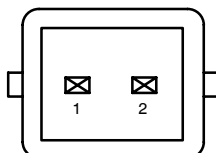


- (1) 91-MD8 (BK/OG)  
(2) 29-MD8 (OG)

**C380**

 14401

F06033




- (1) 31S-FA30 (BK/WH)  
(2) 31S-FA31 (BK/YE)  
(3) 31S-FA32 (BK/BU)  
(4) 31S-FA33 (BK/OG)  
(5) 31-FA25 (BK)

A128  
Heater control module

**C381****14401**

F06278

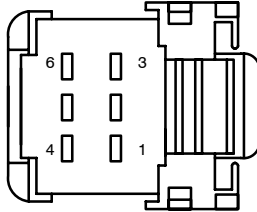


- (1) 15-HB22 (GN/BK)
- (2) 91-HB22 (BK/GN)
- (3) 29S-HB22 (OG/BK)
- (4)
- (5) 91S-HB22 (BK/GN)
- (6) 31S-HB22 (BK/GN)

N10  
Heated rear win-  
dow switch

**C384****14A290**

F02578

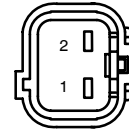


- (1) 15-RL19 (GN/YE)
- (2) 91S-RL19 (BK/YE)

Y218  
Inlet air control  
valve solenoid

**C383** (GY)**14401**

F10042

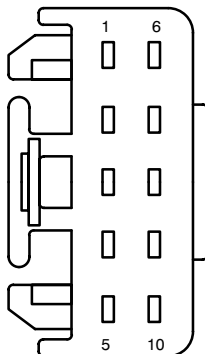


- |                      |                      |
|----------------------|----------------------|
| (1) 15S-LG23 (GN/WH) | (6) 10-PF36 (GY/OG)  |
| (2) 29S-PF35 (OG/BK) | (7) 31S-TA34 (BK/YE) |
| (3) 15-PF35 (GN/BK)  | (8)                  |
| (4) 31-PF35 (BK)     | (9)                  |
| (5) 8-PF36 (WH/GN)   | (10)                 |

N93  
Gearshift lever  
unit

**C391****14401**

F04272

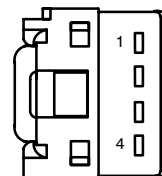


A102  
Passive anti-theft  
system trans-  
ceiver module

- (1) 15-GL37 (GN/BK)
- (2) 91-GL1 (BK/YE)
- (3) 10-GL37 (GY/OG)
- (4) 8-GL37 (WH/GN)

**C410****14401**

F24012

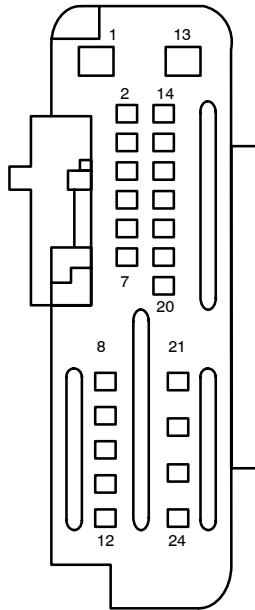

- |                       |                        |                        |
|-----------------------|------------------------|------------------------|
| (1) 29-MD15S (OG/BK)  | (10) 8-MD18SL (WH)     | (18) 8-MD26S (WH/BK)   |
| (2) 75-MD15S (YE/GN)  | 8-MD18SR (WH)          | (19) 9-MD26S (BN/YE)   |
| (3) 29S-LK34S (OG/BK) | (11) 8-MD17SL (WH/RD)  | (20)                   |
| (4) 91-MD5S (BK/BU)   | 8-MD10SR (WH/BK)       | (21) 10-MD10SL (GY/BK) |
| (5)                   | (12) 10-MD17SL (GY/RD) | 10-MD17SR (GY/RD)      |
| (6) 91-MD5SA (BK/BU)  | 10-MD10SR (GY/BK)      | (22) 10-MD11SL (GY/WH) |
| (7)                   | (13) 91-MD15S (BK/GN)  | 10-MD11SR (GY/WH)      |
| (8) 8-MD10SL (WH/BK)  | (14)                   | (23) 10-MD18SL (GY)    |
| 8-MD17SR (WH/RD)      | (15)                   | 10-MD18SR (GY)         |
| (9) 8-MD11SL (WH/VT)  | (16) 8-MD27S (WH/VT)   | (24) 3-MD27S (BK)      |
| 8-MD11SR (WH/VT)      | 8-MD27SA (WH/VT)       | 3-MD27SA (BK)          |
|                       | (17) 10-MD27S (GY/WH)  |                        |
|                       | 10-MD27SA (GY/WH)      |                        |

A11  
Radio


A318  
Transmission control module (TCM)

|      |                   |      |                   |      |                   |
|------|-------------------|------|-------------------|------|-------------------|
| (1)  | 15-TA55A (GN/BK)  | (32) |                   | (64) | 9-TA27 (BN/WH)    |
| (2)  | 15-TA55B (GN/BK)  | (33) | 91-TA55 (BK/GN)   |      | 9-TA27A (BN/WH)   |
| (3)  | 91-TA55A (BK/GN)  |      | 91-TA55D (BK/GN)  | (65) | 8-RJ29 (WH/BU)    |
| (4)  | 91-TA55B (BK/GN)  | (34) |                   |      | 8-RJ29A (WH/BU)   |
| (5)  |                   | (35) |                   |      | 8-RJ29B (WH/BU)   |
| (6)  | 15S-TA17 (GN/OG)  | (36) |                   | (66) |                   |
|      | 15S-TA17A (GN/OG) | (37) |                   | (67) | 91S-LG45 (BK/GN)  |
| (7)  | 15S-TA64 (GN/OG)  | (38) | 8-TA36 (WH/GN)    |      | 91S-LG45A (BK/GN) |
|      | 15S-TA64A (GN/OG) |      | 8-TA36A (WH/GN)   | (68) |                   |
| (8)  | 5-EC7E (BU/RD)    | (39) |                   | (69) |                   |
|      | 5-EC7F (BU/RD)    | (40) |                   | (70) |                   |
| (9)  | 4-EC7E (GY/RD)    | (41) |                   | (71) |                   |
|      | 4-EC7F (GY/RD)    | (42) |                   | (72) |                   |
| (10) |                   | (43) |                   | (73) |                   |
| (11) | 30-TA55 (RD)      | (44) |                   | (74) | 15S-TA37 (GN/YE)  |
|      | 30-TA55A (RD)     |      |                   |      | 15S-TA37A (GN/YE) |
| (12) | 15S-TA23 (GN/YE)  | (45) |                   | (75) |                   |
|      | 15S-TA23A (GN/YE) | (46) |                   | (76) |                   |
| (13) | 15S-TA24 (GN/BU)  | (47) |                   | (77) |                   |
|      | 15S-TA24A (GN/BU) | (48) |                   | (78) |                   |
| (14) | 9-TA36 (BN/GN)    | (49) |                   | (79) |                   |
|      | 9-TA36A (BN/GN)   | (50) |                   | (80) |                   |
| (15) |                   |      |                   |      |                   |
| (16) |                   | (51) | 15S-TA63 (GN/BK)  | (81) | 10-PF36A (GY/OG)  |
|      |                   |      | 15S-TA63A (GN/BK) |      | 10-PF36 (GY/OG)   |
| (17) |                   | (52) | 15S-TA39 (GN/RD)  | (82) |                   |
| (18) |                   |      | 15S-TA39A (GN/RD) |      |                   |
| (19) |                   | (53) | 15S-TA38 (GN/BU)  | (83) | 91-TA55C (BK/GN)  |
| (20) |                   |      | 15S-TA38A (GN/BU) | (84) |                   |
| (21) |                   | (54) | 15S-TA40 (GN/BK)  | (85) |                   |
| (22) |                   |      | 15S-TA40A (GN/BK) | (86) | 9-RJ29 (BN/BU)    |
| (23) |                   | (55) |                   |      | 9-RJ29A (BN/BU)   |
| (24) |                   | (56) |                   | (87) |                   |
| (25) |                   | (57) |                   | (88) |                   |
| (26) |                   | (58) |                   | (89) |                   |
| (27) |                   | (59) | 8-PF36 (WH/GN)    | (90) |                   |
|      |                   |      | 8-PF36A (WH/GN)   | (91) |                   |
| (28) |                   | (60) |                   | (92) | 91S-TA17 (BK/RD)  |
| (29) | 15S-TA65 (GN/WH)  | (61) |                   |      | 91S-TA17A (BK/RD) |
|      | 15S-TA65A (GN/WH) |      |                   | (93) |                   |
| (30) |                   | (62) | 8-TA27 (WH/VT)    | (94) |                   |
|      |                   |      | 8-TA27A (WH/VT)   |      |                   |
| (31) |                   | (63) |                   | (95) |                   |



**C417** (BN)**12A690**

F48008

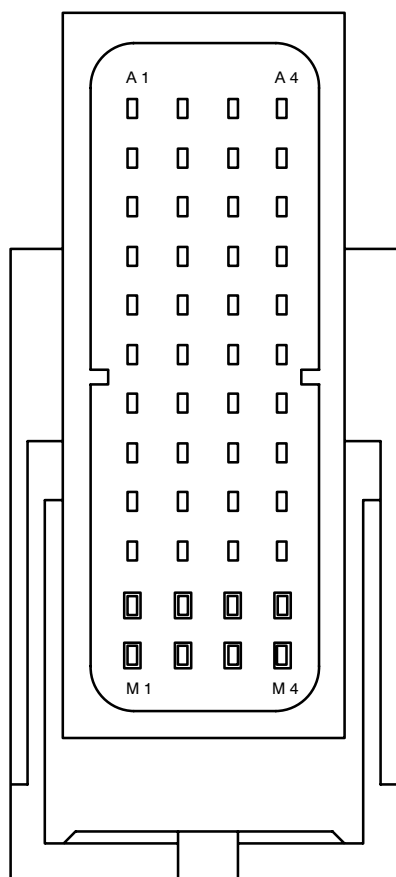


|       |                   |       |                  |
|-------|-------------------|-------|------------------|
| (A 1) | 8-RJ50A (WH/VT)   | (B 3) | 9-RJ22A (BN/BU)  |
| (B 1) | 8-RL22A (WH/BK)   | (C 3) | 9-RL7 (BN/GN)    |
| (C 1) | 8-RJ4A (WH/RD)    |       | 9-RL22A (BN/YE)  |
|       | 8-RJ22 (WH/BU)    | (D 3) | 9-RJ50 (BN/WH)   |
| (D 1) | 7-RL22 (YE/BK)    |       | 7-RL7A (YE/GN)   |
| (E 1) | 91S-RH15 (BK/YE)  | (E 3) | 9-RJ11A (BN/GN)  |
|       | 8-RJ11A (WH/GN)   | (F 3) |                  |
| (F 1) | 8-RJ22A (WH/BU)   | (G 3) | 9-RJ17 (BN/WH)   |
| (G 1) | 8-RJ46A (WH/RD)   |       | 9-RJ47A (BN/BU)  |
| (H 1) | 8-RJ12A (WH/BU)   | (H 3) | 91S-RH9 (BK/BU)  |
| (J 1) |                   | (J 3) | 9-RJ46A (BN/RD)  |
| (K 1) |                   | (K 3) | 9-RJ12A (BN/BU)  |
| (L 1) | 15S-RL7A (GN/BK)  | (L 3) | 91S-RJ48 (BK/GN) |
| (M 1) | 91S-RL50C (BK/BU) | (M 3) | 15-RJ37 (GN/BK)  |
| (A 2) | 8-RJ17A (WH/VT)   | (A 4) | 7-RJ50A (YE/VT)  |
| (B 2) | 8-RJ50 (WH/VT)    | (B 4) | 8-RJ47 (WH/BU)   |
| (C 2) | 7-RJ50 (YE/VT)    |       | 7-RL22A (YE/BK)  |
|       | 9-RJ4A (BN/RD)    | (C 4) | 8-RL22 (WH/BK)   |
| (D 2) | 8-RL7 (WH/GN)     |       | 49-RJ22A (BU/WH) |
| (E 2) | 7-RL7 (YE/GN)     |       | 7-RJ37A (YE/GN)  |
|       | 8-RJ37A (WH/GN)   |       | 8-RL22 (WH/BK)   |
| (F 2) | 9-RJ37A (BN/GN)   | (D 4) | 8-EE14 (WH/BU)   |
| (G 2) | 9-RJ22 (BN/BU)    |       | 9-RL7A (BN/GN)   |
|       | 8-RJ47A (WH/BU)   | (E 4) | 9-RL22 (BN/YE)   |
| (H 2) | 9-RJ46 (BN/RD)    |       | 7-RJ11A (YE/GN)  |
| (J 2) | 9-RJ47 (BN/BU)    | (F 4) |                  |
| (K 2) | 91-RE8C (BK/YE)   | (G 4) | 30-RE8 (RD)      |
|       | 31S-BB16C (BK/RD) | (H 4) | 4-EB6 (GY)       |
| (L 2) | 91S-RL7 (BK/GN)   |       | 7-RJ4A (YE/RD)   |
| (M 2) | 15S-RL7 (GN/BK)   | (J 4) |                  |
|       | 15-RJ37A (GN/BK)  | (K 4) |                  |
| (A 3) | 8-RJ46 (WH/RD)    | (L 4) | 91-RE8K (BK/YE)  |
|       | 9-RJ50A (BN/WH)   |       | 91S-RL42 (BK/BU) |
|       |                   | (M 4) | 91-RE8L (BK/YE)  |
|       |                   |       | 91S-RL50 (BK/BU) |

A147  
Powertrain control  
module (PCM)

**C418** (BK)**12A690**

F32034

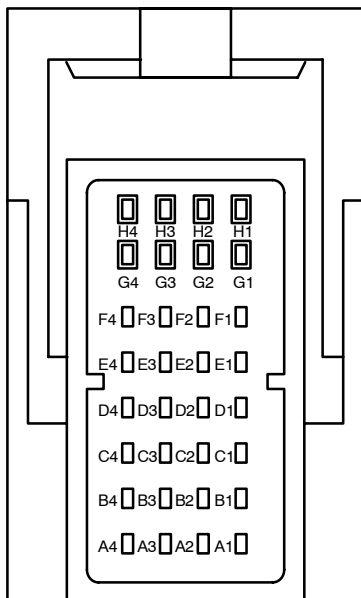


A147  
Powertrain control  
module (PCM)

- |                         |                         |
|-------------------------|-------------------------|
| (A 1) 5-EB6 (BU)        | (H 2) 91S-RE8 (BK/YE)   |
| 8-RJ28 (WH)             | (A 3) 5-EC7 (BU/RD)     |
| (B 1)                   | 5-EC7C (BU/RD)          |
| (C 1) 91S-RH9A (BK/BU)  | (B 3) 9-RJ22A (BN/BU)   |
| (D 1) 5-EB6A (BU)       | (C 3) 15-RE17 (GN/BU)   |
| 31S-BB16B (BK/RD)       | (D 3) 9-RJ17A (BN/WH)   |
| (E 1)                   | (E 3) 9-RJ28 (BN)       |
| (F 1)                   | (F 3) 10-RJ30A (GY)     |
| (G 1) 91S-RL50A (BK/BU) | (G 3)                   |
| (H 1)                   | (H 3)                   |
| (A 2) 8-RJ5 (WH)        | (A 4) 4-EC7 (GY/RD)     |
| 8-RJ5A (WH)             | 4-EC7C (GY/RD)          |
| (B 2) 49-PA6A (BU)      | (B 4) 9-RJ5 (BN)        |
| 8-RJ17A (WH/VT)         | 9-RJ5A (BN)             |
| (C 2) 49-PA6A (BU)      | (C 4) 49-RJ22A (BU/WH)  |
| 49-PA6B (BU)            | (D 4) 7-RJ28 (YE)       |
| (D 2) 91S-PA13 (BK/BU)  | 31S-FA11 (BK/YE)        |
| 91S-RH15A (BK/YE)       | (E 4) 15S-LG23A (GN/WH) |
| (E 2)                   | (F 4)                   |
| (F 2) 31S-FA11A (BK/YE) | (G 4) 91-RE8E (BK/YE)   |
| (G 2) 91S-RL42A (BK/BU) | (H 4) 91-RE8D (BK/YE)   |

**C419** (GY)**12A690**


F48006

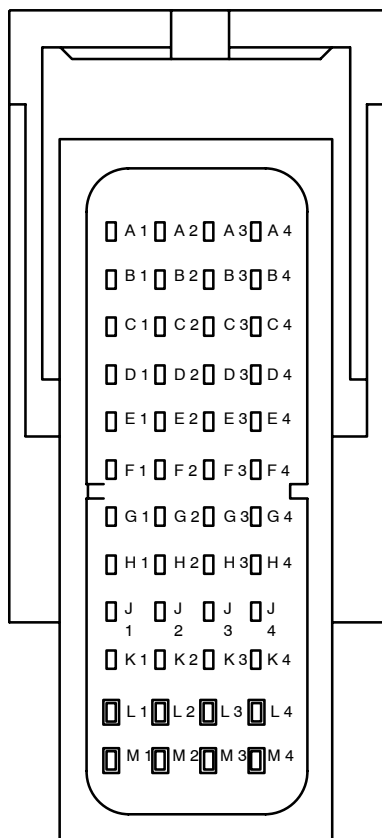

A147  
Powertrain control  
module (PCM)

- |                        |                         |                         |
|------------------------|-------------------------|-------------------------|
| (A 1)                  | (G 2)                   | (L 3) 91S-RL10 (BK/WH)  |
| (B 1) 8-RJ37 (WH/GN)   | (H 2) 8-RJ32 (WH/BU)    | 91S-RL11A (BK/YE)       |
| (C 1) 8-RJ3 (WH/VT)    | (J 2) 91-RE8M (BK/YE)   | (M 3) 15-RL10 (GN/WH)   |
| (D 1) 9-RJ37 (BN/GN)   | (K 2) 15-RJ14A (GN/YE)  | 15-RL11A (GN/YE)        |
| (E 1)                  | (L 2) 91S-RL12 (BK/BU)  | (A 4) 7-RJ11 (YE/GN)    |
| (F 1) 9-RJ4 (BN/RD)    | 91S-RL12A (BK/BU)       | (B 4) 8-RJ4 (WH/RD)     |
| (G 1) 9-RJ5B (BN)      | (M 2) 15-RL11 (GN/YE)   | (C 4) 8-RJ3A (WH/VT)    |
| (H 1)                  | 15-RL12A (GN/BU)        | (D 4) 9-RJ3 (BN/WH)     |
| (J 1) 9-RJ12 (BN/BU)   | (A 3) 8-RJ12 (WH/BU)    | (E 4) 91S-RE8A (BK/YE)  |
| 15-RJ14C (GN/YE)       | (B 3) 9-RJ11 (BN/GN)    | 91S-RE8B (BK/YE)        |
| 15-RJ14E (GN/YE)       | 91S-PA13A (BK/BU)       | (F 4) 7-RJ4 (YE/RD)     |
| (K 1) 15-RJ14D (GN/YE) | (C 3)                   | 31S-TA36 (BK/GN)        |
| (L 1) 91S-RL11 (BK/YE) | (D 3)                   | (G 4) 8-RJ13A (WH/VT)   |
| 91S-RL13A (BK/OG)      | (E 3) 7-RJ3 (YE/VT)     | 15S-LG23B (GN/WH)       |
| (M 1) 15-RL13 (GN/RD)  | 10-RJ30B (GY)           | (H 4) 8-EE14A (WH/BU)   |
| (A 2) 7-RJ3A (YE/VT)   | (F 3) 31S-GC21 (BK/GN)  | 91-RE8B (BK/YE)         |
| 8-RJ5 (WH)             | (G 3) 4-EB6A (GY)       | (J 4) 91-RE8A (BK/YE)   |
| (B 2) 8-RJ11 (WH/GN)   | (H 3) 31S-GC21A (BK/GN) | (K 4) 91-RE8F (BK/YE)   |
| (C 2) 9-RJ3A (BN/WH)   | 49-RJ22 (BU/WH)         | (L 4) 91S-RL10A (BK/WH) |
| (D 2)                  | (J 3) 15-RJ14C (GN/YE)  | 91S-RL13 (BK/OG)        |
| (E 2) 7-RJ37 (YE/GN)   | 8-RJ32A (WH/BU)         | (M 4) 15-RL10A (GN/WH)  |
| (F 2)                  | (K 3) 15-RJ14B (GN/YE)  | 15-RL12 (GN/BU)         |

F02484

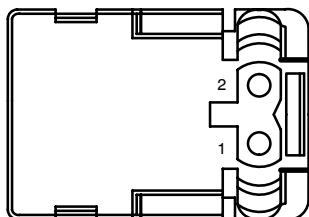

### C425

#### 14401


- (1) 15S-JA31 (GN/WH)  
(2) 91S-JA31 (BK/WH)

A43  
Passenger air bag  
unit

### C426

#### 14401

F24017

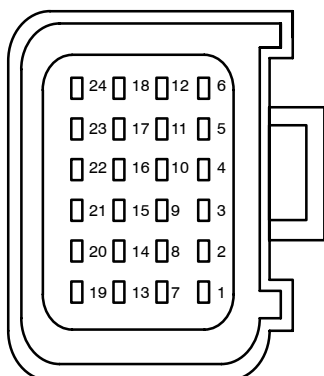


- |                     |                       |                       |
|---------------------|-----------------------|-----------------------|
| (1)                 | (9) 15S-JA31 (GN/WH)  | (17) 91S-JA56 (BK/RD) |
| (2)                 | (10) 91S-JA31 (BK/WH) | (18) 31S-JA31 (BK/WH) |
| (3) 15S-JA8 (GN/RD) | (11)                  | (19) 4-EC10N (GY)     |
| (4) 91S-JA8 (BK/OG) | (12)                  | (20) 5-EC10N (BU)     |
| (5)                 | (13) 9-JA49 (BN)      | (21) 31S-JA47 (BK/OG) |
| (6)                 | (14) 8-JA49 (WH)      | (22)                  |
| (7)                 | (15)                  | (23)                  |
| (8)                 | (16)                  | (24) 15-JA10 (GN/OG)  |

A208  
Restraints Control  
Module (RCM)

### C427

#### 14014

F02574

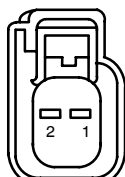


B238  
Side air bag sen-  
sor, driver

- (1) 8-JA39 (WH)  
(2) 9-JA39 (BN)

### C428

#### 14014


F02574

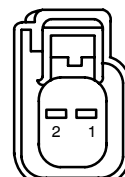

B239  
Side air bag sen-  
sor, passenger

- (1) 8-JA40 (WH/VT)  
(2) 9-JA40 (BN/WH)


C429  
14014

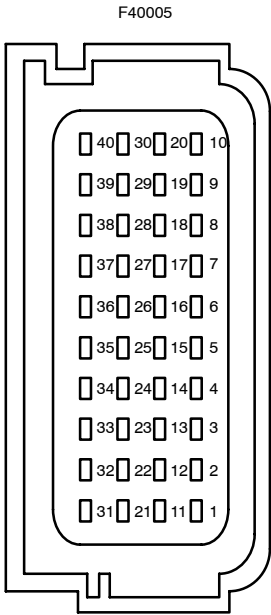

- |                       |                       |                     |
|-----------------------|-----------------------|---------------------|
| (1) 91S-JA50 (BK/RD)  | (15)                  | (28) 9-JA40 (BN/WH) |
| (2) 15S-JA50 (GN/OG)  | (16)                  | (29) 8-JA40 (WH/VT) |
| (3)                   | (17) 15S-JA33 (GN/BU) | (30)                |
| (4)                   | (18) 91S-JA33 (BK/BU) | (31)                |
| (5)                   | (19) 91S-JA37 (BK/GN) | (32)                |
| (6)                   | (20) 15S-JA37 (GN/BK) | (33)                |
| (7) 15S-JA38 (GN/OG)  | (21)                  | (34) 9-JA54A (BN)   |
| (8) 91S-JA38 (BK/RD)  | (22)                  | (35)                |
| (9) 91S-JA34 (BK/RD)  | (23)                  | (36)                |
| (10) 15S-JA34 (GN/OG) | (24)                  | (37)                |
| (11) 91S-JA51 (BK/BU) | (25) 8-JA54 (WH)      | (38)                |
| (12) 15S-JA51 (GN/BU) | (26) 8-JA39 (WH)      | (39)                |
| (13)                  | (27) 9-JA39 (BN)      | (40)                |
| (14)                  |                       |                     |


A208  
Restraints Control  
Module (RCM)

C430  
14014

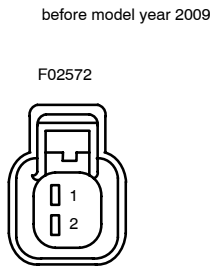

E86  
Rear fog lamp, RH  
side

E109  
Reversing lamp,  
right

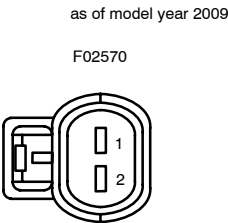


- (1) 15S-LG16A (GN/OG)  
15S-LG16 (GN/OG)
- (2) 31-LG16 (BK)

C431  
14014

A378  
Micropol antenna

- (1) 15-MD7 (GN/BU)

C434  
14014

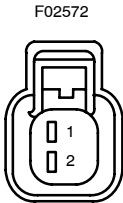


E89  
Rear fog lamp, LH  
side

E105  
Reversing lamp,  
left

- (1) 15S-LC9 (GN/BK)  
15S-LD6 (GN/YE)  
15S-LD6A (GN/YE)
- (2) 31-LD6 (BK)

**C437****14401**

F03298

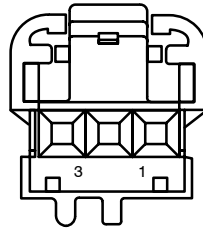


- (1) 8-MD26 (WH/BK)  
8-MD26S (WH/BK)
- (2) 9-MD26 (BN/YE)  
9-MD26S (BN/YE)
- (3)

N214  
Radio remote control switch

**C438****12A690**

F09018

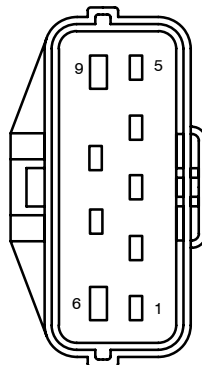


B120  
Transmission range sensor

- |                                           |                                           |
|-------------------------------------------|-------------------------------------------|
| (1) 15-TA18 (GN/OG)                       | (6) 50-BB14A (GY/RD)                      |
| (2) 15S-TA40 (GN/BK)<br>15S-TA40A (GN/BK) | (7)                                       |
| (3)                                       | (8) 15S-TA39 (GN/RD)<br>15S-TA39A (GN/RD) |
| (4) 15S-TA38 (GN/BU)<br>15S-TA38A (GN/BU) | (9) 50S-BB12A (GY)                        |
| (5) 15S-TA37 (GN/YE)<br>15S-TA37A (GN/YE) |                                           |

### C439

#### 12A690

F09020

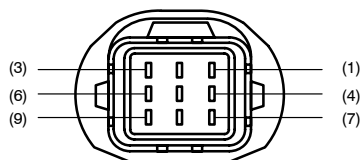


- |                                           |                                           |
|-------------------------------------------|-------------------------------------------|
| (1) 15-TA65 (GN/WH)<br>15-TA65A (GN/WH)   | (6) 15S-TA23 (GN/YE)<br>15S-TA23A (GN/YE) |
| (2) 15S-TA17 (GN/OG)<br>15S-TA17A (GN/OG) | (7) 91S-TA17 (BK/RD)<br>91S-TA17A (BK/RD) |
| (3) 15S-TA63 (GN/BK)<br>15S-TA63A (GN/BK) | (8) 15S-TA24 (GN/BU)<br>15S-TA24A (GN/BU) |
| (4) 9-TA36 (BN/GN)<br>9-TA36A (BN/GN)     | (9) 15S-TA64 (GN/OG)<br>15S-TA64A (GN/OG) |
| (5) 8-TA36 (WH/GN)<br>8-TA36A (WH/GN)     |                                           |

A40  
Transmission  
hardware unit

### C441 (GY)

#### 14401

F12084

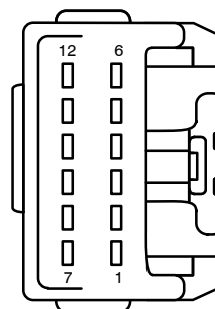


- |                      |                      |
|----------------------|----------------------|
| (1) 32-KA34 (WH/BK)  | (7) 8-KA45 (WH/RD)   |
| (2) 91S-KA11 (BK/RD) | (8) 31-KA36 (BK)     |
| (3) 91-KA12 (BK/WH)  | (9) 8-KA46 (WH/BU)   |
| (4) 33-KA34 (YE/BK)  | (10) 15-KA19 (GN/OG) |
| (5) 91S-KA35 (BK/BU) | (11) 8-KA47 (WH/GN)  |
| (6) 91S-KA10 (BK/GN) | (12) 10-KA8 (GY/RD)  |

N104  
Wiper/washer  
switch

### C440

#### 14B723

F12110

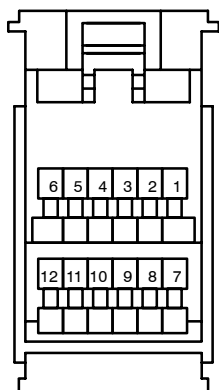


- |                    |                     |
|--------------------|---------------------|
| (1)                | (7)                 |
| (2)                | (8)                 |
| (3) 91-MD8 (BK/OG) | (9) 29-MD8 (OG)     |
| (4)                | (10)                |
| (5) 1-MD49 (WH/GN) | (11) 2-MD49 (GY/OG) |
| (6) 1-MD50 (WH/BK) | (12) 2-MD50 (GY/BK) |

A144  
CD changer

### C442

#### 14401

F08266

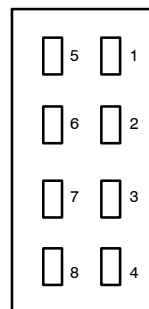


- |                                       |                                         |
|---------------------------------------|-----------------------------------------|
| (1) 8-MD18 (WH)<br>8-MD18A (WH)       | (5) 10-MD18 (GY)<br>10-MD18A (GY)       |
| (2) 8-MD17 (WH/RD)<br>8-MD10B (WH/BK) | (6) 10-MD17 (GY/RD)<br>10-MD10B (GY/BK) |
| (3) 8-MD10 (WH/BK)<br>8-MD17A (WH/RD) | (7) 10-MD10 (GY/BK)<br>10-MD17A (GY/RD) |
| (4) 8-MD11 (WH/VT)<br>8-MD11A (WH/VT) | (8) 10-MD11 (GY/WH)<br>10-MD11A (GY/WH) |

A11  
Radio

**C443****14401**


F16066

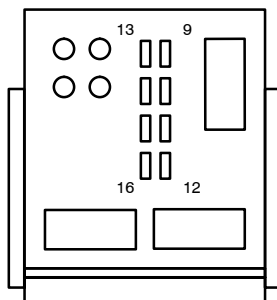A11  
Radio

- |                    |                       |
|--------------------|-----------------------|
| (1)                | (10) 5-EC10A (BU) +   |
| (2)                | 5-EC10C (BU)          |
| (3)                | 5-EC10A (BU) +        |
| (4)                | 5-EC10G (BU)          |
| (5)                | 5-EC10A (BU)          |
| (6)                | 5-EC10D (BU)          |
| (7)                | (11) 91-MD5 (BK/BU)   |
| (8)                | 91-MD5A (BK/BU)       |
| (9) 4-EC10A (GY) + | (12) 91-MD15 (BK/GN)  |
| 4-EC10C (GY)       | (13)                  |
| 4-EC10A (GY) +     | (14) 29S-LK34 (OG/BK) |
| 4-EC10G (GY)       | (15) 29-MD15 (OG/BK)  |
| 4-EC10A (GY)       | (16) 75-MD15 (YE/GN)  |
| 4-EC10D (GY)       | 75-MD15C (YE/GN)      |

**C447****14401**


F12102

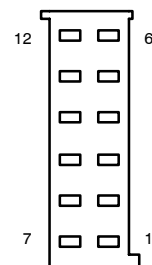

- |                    |                     |
|--------------------|---------------------|
| (1)                | (8) 9-MD26 (BN/YE)  |
| (2) 15-MD7 (GN/BU) | (9) 2-MD49 (GY/OG)  |
| (3) 1-MD49 (WH/GN) | (10) 2-MD50 (GY/BK) |
| (4) 1-MD50 (WH/BK) | 31S-GE44B (BK/RD)   |
| (5)                | (11)                |
| (6) 8-MD26 (WH/BK) | (12) 8-GB8A (WH/BU) |
| (7)                |                     |

A11  
Radio**C444** (GY)**14014**


F02053

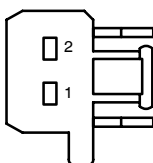N318  
Stop lamp switch

- |                        |
|------------------------|
| (1) 15S-LG14 (GN/RD) + |
| 15S-LG23 (GN/WH)       |
| (2) 15-LG23 (GN/WH)    |

**C448****14401**

F12102.1

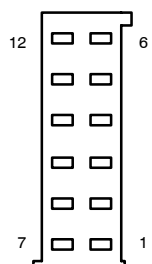

- |                    |                      |
|--------------------|----------------------|
| (1)                | (7)                  |
| (2)                | (8)                  |
| (3)                | (9)                  |
| (4)                | (10)                 |
| (5) 8-MD27 (WH/VT) | (11) 10-MD27 (GY/WH) |
| 8-MD27A (WH/VT)    | 10-MD27A (GY/WH)     |
| (6) 3-MD27A (BK)   | (12)                 |
| 3-MD27B (BK)       |                      |
| 9-MD27 (BN/WH)     |                      |

A11  
Radio**C446**


- |                      |
|----------------------|
| (1) 91-TA36 (BK/GN)  |
| (2) 91S-TA36 (BK/GN) |





**C459****14401**

F10148

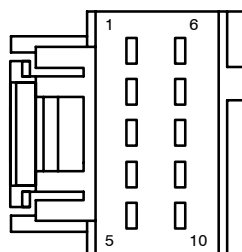


- |                       |                      |
|-----------------------|----------------------|
| (1) 91S-GG9 (BK/RD)   | (6) 91S-LG1 (BK/YE)  |
| (2) 91S-GE56 (BK/YE)  | (7) 91S-LG2 (BK/BU)  |
| (3) 91S-GE56 (BK/YE)  | (8) 91S-LE14 (BK/OG) |
| (4) 91S-GE56A (BK/YE) | (9) 91S-LE25 (BK/BU) |
|                       | (10) 91-LG27 (BK/GN) |

N282  
Steering column  
multifunction  
switch

**C463****14014**


F04105

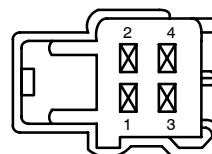

- |                       |                                           |
|-----------------------|-------------------------------------------|
| (1) 29S-LF11A (OG/WH) | (3) 31-LF23B (BK)                         |
| (2) 15S-LG14B (GN/RD) | (4) 49S-LG19 (BU/RD)<br>49S-LG19B (BU/RD) |

**C464****14014**


F04105

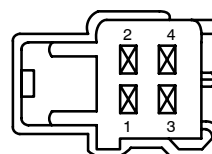

- |                       |                                     |
|-----------------------|-------------------------------------|
| (1) 29S-LF20A (OG)    | (3) 31-LF24 (BK)                    |
| (2) 15S-LG21A (GN/BK) | (4) 49S-LG12 (BU)<br>49S-LG12B (BU) |

**C461****14014**

F02572

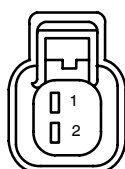


- |                                     |
|-------------------------------------|
| (1) 49S-LG12 (BU)<br>49S-LG12D (BU) |
| (2) 31-LG12A (BK)                   |

E49  
Turn signal lamp,  
LH rear

**C470****14401**

F04278

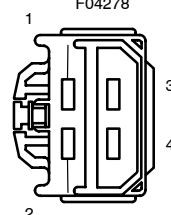


- |                       |
|-----------------------|
| (1) 31S-FA31 (BK/YE)  |
| (2) 31S-FA30 (BK/WH)  |
| (3) 31S-FA32 (BK/BU)  |
| (4) 31S-FA33A (BK/OG) |

R21  
Blower motor re-  
sistor

**C462****14014**

F02572

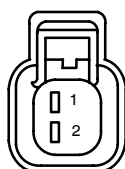


- |                                           |
|-------------------------------------------|
| (1) 49S-LG19 (BU/RD)<br>49S-LG19D (BU/RD) |
| (2) 31-LG19 (BK)                          |

E48  
Turn signal lamp, RH rear

**C472****14014**

F03094

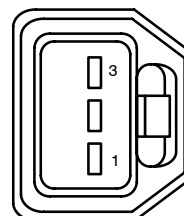


- |                       |
|-----------------------|
| (1) 29S-LF11A (OG/WH) |
| (2) 15S-LG14B (GN/RD) |
| (3) 31-LF23B (BK)     |

E9  
Rear lamp assem-  
bly, LH side

C473

14014

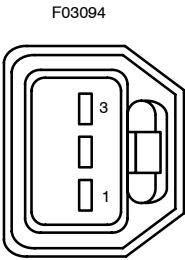


- (1) 29S-LF20A (OG)
- (2) 15S- LG21A (GN/BK)
- (3) 31-LF24 (BK)

E10  
Rear lamp assem-  
bly, RH side

C477

 14014




- (1) 15S-LD12 (GN/YE)
- (2) 15S-LG16A (GN/OG)
- (3) 49S-LG19 (BU/RD)  
49S-LG19A (BU/RD)  
49S-LG19D (BU/RD)
- (4)
- (5) 31-LF24B (BK)
- (6) 29S-LF20 (OG)
- (7) 15S-LG21 (GN/BK)

E10  
Rear lamp assem-  
bly, RH side

C476

 14014




- (1) 15S-LG14A (GN/RD)
- (2) 29S-LF11 (OG/WH)
- (3) 31-LF23 (BK) +  
49S-LG19D (BU/RD)
- (4)
- (5) 49S-LG12A (BU)  
49S-LG12D (BU)
- (6) 15S-LG9B (GN/BK) +  
15S-LG16A (GN/OG)
- (7) 15S-LD6 (GN/YE) +  
15S-LD12 (GN/YE)

E9  
Rear lamp assem-  
bly, LH side

C478

14401

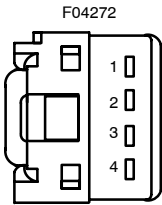


- (1) 10-MD27 (GY/WH)  
10-MD27A (GY/WH)  
10-MD27S (GY/WH)  
10-MD27SA (GY/WH)
- (2)
- (3) 3-MD27A (BK)  
3-MD27B (BK)  
3-MD27S (BK)  
3-MD27SA (BK)
- (4) 8-MD27 (WH/VT)  
8-MD27A (WH/VT)  
8-MD27S (WH/VT)  
8-MD27SA (WH/VT)

D81  
Auxiliary IN

**C484****14A584**

F16008

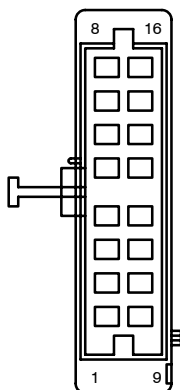

- |                      |                        |
|----------------------|------------------------|
| (1) 8-AD6 (WH)       | (9) 8-AJ19 (WH/RD)     |
| (2) 91S-AJ58 (BK/OG) | (10) 91S-AJ61 (BK/OG)  |
| (3) 91S-AJ57 (BK/BU) | (11) 91S-AJ60 (BK/BU)  |
| (4) 91-AJ7A (BK/BU)  | (12)                   |
| (5) 29-AD12A (OG/YE) | (13) 7-LH14 (YE)       |
| (6) 91S-AJ41 (BK/RD) | (14) 91S-AJ41A (BK/RD) |
| 91S-AJ55A (BK/RD)    | 91S-AJ55 (BK/RD)       |
| (7) 91S-AJ40 (BK/GN) | (15) 91S-AJ40A (BK/GN) |
| 91S-AJ54A (BK/GN)    | 91S-AJ54 (BK/GN)       |
| (8) 10-AD6 (GY)      | (16)                   |


N388

Window control/power mirror adjust  
switch, driver

before model year 2009

**C485****14240**

F08280

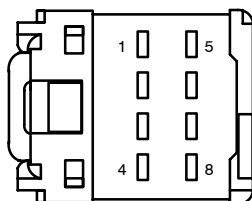


- |                       |     |
|-----------------------|-----|
| (1) 7-LH36A (YE/BU)   | (5) |
| (2) 91S-AJ64A (BK/OG) | (6) |
| (3) 91S-AJ63A (BK/BU) | (7) |
| (4) 91-AJ32A (BK/OG)  | (8) |

N299


Window control  
switch, RH rear

as of model year 2009

F04272

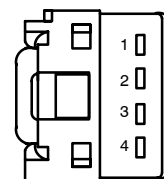**C486****14A584**


F04272

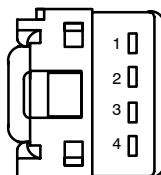

- |                     |
|---------------------|
| (1) 29-AJ7 (OG/BU)  |
| (2)                 |
| (3) 4-EE9 (GY/OG)   |
| (4) 91-AJ7A (BK/BU) |

**C488** (GY)**14A584**

F10140

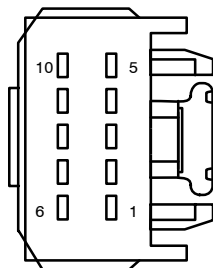


- |                     |                      |
|---------------------|----------------------|
| (1) 31-AJ7 (BK)     | (7) 33-AJ26 (YE)     |
| (2) 33-AJ18 (YE/VT) | (8) 33-AJ26A (YE/BU) |
| (3) 33-AJ18 (YE/VT) | 33-AJ26 (YE) +       |
| (4) 32-AJ18 (WH/VT) | 33-AJ26A (YE/BU)     |
| (5) 32-AJ18 (WH/VT) | (9) 15-AJ7 (GN/BU)   |
| (6) 32-AJ26 (WH)    |                      |
| 32-AJ26A (WH)       |                      |
| 32-AJ26 (WH) +      |                      |
| 32-AJ26A (WH)       |                      |

N388  
Window control/power mirror adjust switch,  
driver

**C494****14014**

 F01005




- (1) 31-LF21 (BK)  
31-LF21A (BK)

E34  
Licence plate  
lamp, LH side

**C495****14014**

 F01005




- (1) 29S-LF21 (OG/BK)  
29S-LF21A (OG/BK)

E34  
Licence plate  
lamp, LH side

**C489****14K138**

F07056

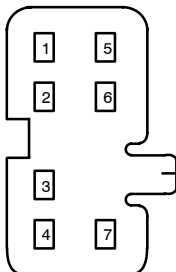


- |                      |                      |
|----------------------|----------------------|
| (1) 33-AJ17A (YE/VT) | (5) 33-AJ18 (YE/VT)  |
| (2) 15-AJ18 (GN/WH)  | (6) 33-AJ18 (YE/VT)  |
| (3) 32-AJ18 (WH/VT)  | (7) 32-AJ17A (WH/VT) |
| (4) 31-LH31 (BK)     | (8)                  |

N297  
Window control  
switch, passenger  
side front

**C496****14014**

 F01005




- (1) 31-LF22 (BK)  
31-LF22A (BK)

E35  
Licence plate  
lamp, RH side

**C497****14014**

 F01005




- (1) 29S-LF22 (OG/BK)

E35  
Licence plate  
lamp, RH side

**C521****67020**

F03326

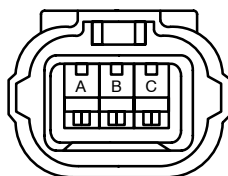


- (A) 15S-RJ4 (GN/BU)  
 (B) 8-RJ4 (WH/RD)  
 (C) 91-RJ4 (BK/BU)

B43  
 Crankshaft position sensor

**C522****14335**

before model year 2009


F08280

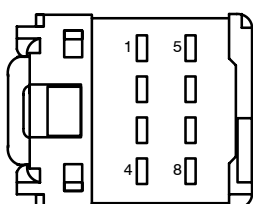

- |                      |     |
|----------------------|-----|
| (1) 15-AG7 (GN/BU)   | (5) |
| (2) 31S-AG7 (BK/BU)  | (6) |
| (3) 31S-AG27 (BK/WH) | (7) |
| (4) 31-AG7 (BK)      | (8) |

as of model year 2009


F04272

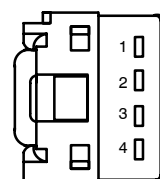

N230  
 Roof opening panel control switch

**C523 (BK)****12A690**

F02578

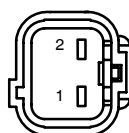


Y57  
 Swirl control solenoid valve

- (1) 15-RL43 (GN/OG)  
 (2) 91S-RL43 (BK/RD)

**C525 (GY)****14335**

F10091

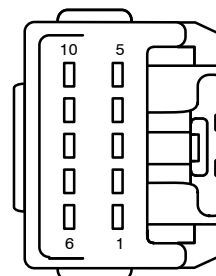


- |                     |                      |
|---------------------|----------------------|
| (1) 29-AG12 (OG/BK) | (6) 8-GB8 (WH/BU)    |
| (2) 8-AG12 (WH/GN)  | (7) 15-AG12 (GN/BK)  |
| (3)                 | (8) 31S-AG7 (BK/BU)  |
| (4)                 | (9) 31S-AG27 (BK/WH) |
| (5)                 | (10) 31-AG12 (BK)    |

A26  
 Roof opening panel module

**C524**







F03312

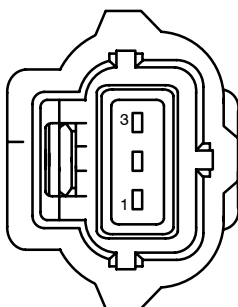


- (1) 91-RJ29 (BK/OG)  
 (2) 8-RJ29A (WH/BU)  
 (3) 15-RJ29 (GN/RD)

B11  
 Vehicle speed sensor (VSS)

|                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><div>C527</div><div></div><div>(A) 8-RL2 (WH/BU)<br/>(B) 9-RL2 (BN/BU)</div></div>                                                                   | <div><div>C529</div><div>67020</div><div><div>F02618</div><div><div><div>A</div><div>B</div></div></div></div><div>(A) 91S-RL43 (BK/RD)<br/>(B) 15-RL43 (GN/OG)</div><div>Y57<br/>Swirl control sole-<br/>noid valve</div></div>                                                                                                                                   |
| <div><div>C528</div><div>67020</div><div>(A) 91S-RL21 (BK/WH)<br/>(B) 15-RL19 (GN/YE)</div><div>Y218<br/>Inlet air control<br/>valve solenoid</div></div> | <div><div>C532</div><div><div>F06065</div><div><div><div>3</div><div>6</div></div><div><div></div><div></div></div><div><div>1</div><div>4</div></div></div></div><div>(1) 31S-FB15 (BK/OG)<br/>(2) 15S-FB14 (GN/BU)<br/>(3) 31S-FB16 (BK/GN)<br/>(4) 31S-FB17 (BK/RD)<br/>(5)<br/>(6) 31S-FB18 (BK/WH)</div><div>M210<br/>Defrost mode ac-<br/>tuator</div></div> |
 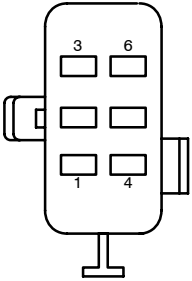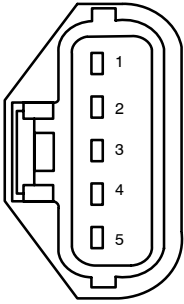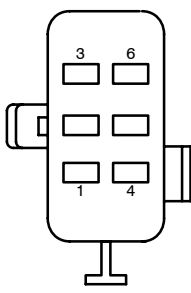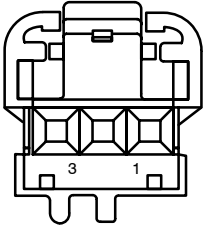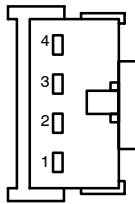
|                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                         |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>before model year 2009</p> <p><b>C533</b></p> <p>F06065</p>  <ul style="list-style-type: none"> <li>(1) 31S-FB20 (BK/BU)</li> <li>(2) 15S-FB19 (GN/YE)</li> <li>(3) 31S-FB21 (BK/OG)</li> <li>(4) 31S-FB22 (BK/GN)</li> <li>(5)</li> <li>(6) 31S-FB23 (BK/RD)</li> </ul> <p>M250<br/>Panel/floor mode<br/>actuator</p> | <p>as of model year 2009</p> <p>F05124</p>  <ul style="list-style-type: none"> <li>(1) 31S-FB20 (BK/BU)</li> <li>(2) 15S-FB19 (GN/YE)</li> <li>(3) 31S-FB21 (BK/OG)</li> <li>(4) 31S-FB22 (BK/GN)</li> <li>(5)</li> </ul>                                            |
| <p><b>C534</b></p> <p>F06065</p>  <ul style="list-style-type: none"> <li>(1) 31S-FB10 (BK/GN)</li> <li>(2) 15S-FB9 (GN/RD)</li> <li>(3) 31S-FB11 (BK/RD)</li> <li>(4) 31S-FB12 (BK/WH)</li> <li>(5)</li> <li>(6) 31S-FB13 (BK/YE)</li> </ul> <p>M101<br/>Air temperature<br/>door motor, RH<br/>side</p>                 | <p><b>C537</b></p> <p>14401</p> <p>F06282</p>  <ul style="list-style-type: none"> <li>(1) 15-FA18A (GN/OG)</li> <li>(2) 49S-FA45 (BU/WH)</li> <li>(3) 9-FA45 (BN/BU)</li> <li>(4)</li> <li>(5)</li> <li>(6) 31-FA45 (BK)</li> </ul> <p>M3<br/>Blower motor</p>      |
| <p><b>C536</b></p> <p>14401</p> <p>F03298</p>  <ul style="list-style-type: none"> <li>(1) 8-FA51 (WH/BK)</li> <li>(2)</li> <li>(3) 9-FA51 (BN/YE)</li> </ul> <p>B305<br/>Discharge tem-<br/>perature sensor,<br/>floor, RH side</p>                                                                                     | <p><b>C538</b></p> <p>14401</p> <p>F04166</p>  <ul style="list-style-type: none"> <li>(1)</li> <li>(2) 32-FA76 (WH/BU)<br/>32-FA76A (WH/BU)</li> <li>(3)</li> <li>(4) 33-FA76 (YE/BU)<br/>33-FA76A (YE/BU)</li> </ul> <p>M69<br/>Recirculated air<br/>actuator</p> |


C539 (BK)

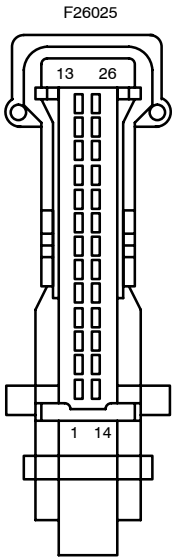

- |                      |                       |                       |
|----------------------|-----------------------|-----------------------|
| (1) 31S-FA54 (BK/BU) | (10) 31S-FB11 (BK/RD) | (18) 31S-FB22 (BK/GN) |
| 31S-FA54A (BK/BU)    | (11) 29-FA94 (OG/BK)  | (19) 31S-FB23 (BK/RD) |
| (2) 31S-FA55 (BK/OG) | (12) 15S-FA46 (GN/BU) | (20) 31S-FB17 (BK/RD) |
| 31S-FA55A (BK/OG)    | (13) 15S-FB14 (GN/BU) | (21) 31S-FB18 (BK/WH) |
| (3) 31S-FA58 (BK/OG) | (14) 31S-FA56 (BK/GN) | (22) 31S-FB12 (BK/WH) |
| (4) 31S-FA59 (BK/GN) | 31S-FA56A (BK/GN)     | (23) 31S-FB13 (BK/YE) |
| (5) 31S-FB20 (BK/BU) | (15) 31S-FA57 (BK/RD) | (24) 91-FA94 (BK/GN)  |
| (6) 31S-FB21 (BK/OG) | 31S-FA57A (BK/RD)     | (25) 15S-FB9 (GN/RD)  |
| (7) 31S-FB15 (BK/OG) | (16) 31S-FA60 (BK/RD) | (26) 15S-FB19 (GN/YE) |
| (8) 31S-FB16 (BK/GN) | (17) 31S-FA61 (BK/WH) |                       |
| (9) 31S-FB10 (BK/GN) |                       |                       |

A205  
Electronic Auto-  
matic Temperature  
Control (EATC)  
module


C540 (WH)

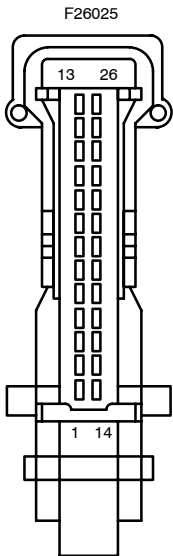

- |                      |                       |                      |
|----------------------|-----------------------|----------------------|
| (1) 15S-FA95 (GN/BK) | (10) 8-FA47 (WH/GN)   | (19) 5-EC10W (BU)    |
| (2) 31-FA95 (BK)     | (11)                  | (20) 9-FA47A (BN/GN) |
| (3) 29S-LE10 (OG/GN) | (12)                  | (21) 8-FA95 (WH/GN)  |
| (4)                  | (13)                  | (22) 8-FA53 (WH/BU)  |
| (5)                  | (14) 15S-FA42 (GN/YE) | (23) 10-FA53 (GY/VT) |
| (6)                  | (15) 49S-FA45 (BU/WH) | (24)                 |
| (7) 8-FA51 (WH/BK)   | (16) 9-FA45 (BN/BU)   | (25)                 |
| (8) 8-FA52 (WH/BK)   | (17) 9-FA1 (BN/RD)    | (26)                 |
| (9) 8-FA48 (WH/GN)   | (18) 4-EC10W (GY)     |                      |

A205  
Electronic Auto-  
matic Temperature  
Control (EATC)  
module

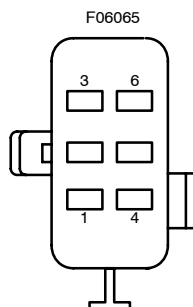

**C541**


- (1) 31S-FA54 (BK/BU)  
31S-FA56A (BK/GN)
- (2) 15S-FA42 (GN/YE)
- (3) 31S-FA55 (BK/OG)  
31S-FA57A (BK/RD)
- (4) 31S-FA54A (BK/BU)  
31S-FA56 (BK/GN)
- (5)
- (6) 31S-FA55A (BK/OG)  
31S-FA57 (BK/RD)

M69  
Recirculated air  
actuator

**C544****14401**

F03298


B304  
Discharge tem-  
perature sensor,  
floor, LH side

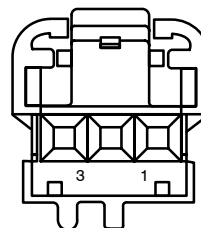

- (1) 8-FA48 (WH/GN)
- (2)
- (3) 9-FA48 (BN/GN)

**C546**

F03330

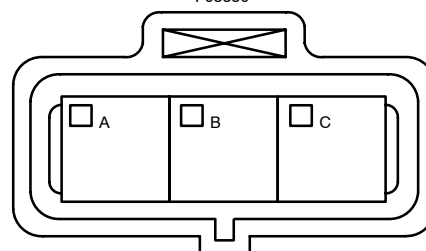


- (A) 9-RJ17 (BN/WH)
- (B) 8-RJ17 (WH/VT)
- (C) 7-RJ17 (YE)

B70  
Barometric Abso-  
lute Pressure  
(BAP) sensor

**C542****14401**

F03298

B306  
Discharge tem-  
perature sensor,  
panel, LH side

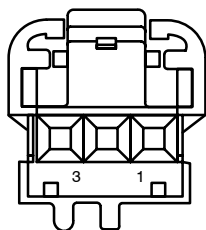


- (1) 8-FA47 (WH/GN)
- (2)
- (3) 9-FA47 (BN/GN)

**C543****14401**

F03298


B307  
Discharge tem-  
perature sensor,  
panel, RH side

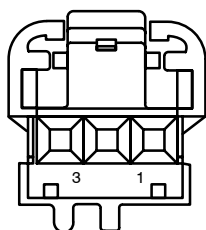

- (1) 8-FA52 (WH/BK)
- (2)
- (3) 9-FA52 (BN/YE)




**C547****67020**

F03324

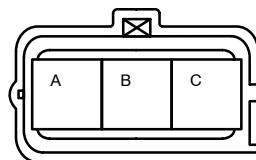


- (A) 7-RJ28A (YE)  
15-RJ28A (GN/YE)
- (B) 9-RJ28 (BN)
- (C) 8-RJ28 (WH)

B8  
Throttle Position Sensor  
(TPS)
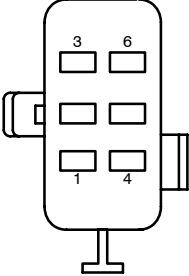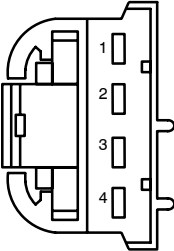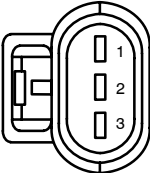
|                                                                                                                                                                                 |                                                                                                                                                                                                                                          |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><p>F06065</p></div> <div><p>M100<br/>Air temperature door<br/>motor, LH side</p></div>    | <div><p><b>C553</b></p><div><p>(1) 31S-FA58 (BK/OG)</p><p>(2) 15S-FA46 (GN/BU)</p><p>(3) 31S-FA59 (BK/GN)</p><p>(4) 31S-FA60 (BK/RD)</p><p>(5)</p><p>(6) 31S-FA61 (BK/WH)</p></div></div>                                                |
| <div><p>F04296</p></div> <div><p>B72<br/>Sunload sensor</p></div>                             | <div><p><b>C554</b></p><p><b>14401</b></p><div><p>(1) 8-FA53 (WH/BU)</p><p>(2) 10-FA53 (GY/VT)</p><p>(3) 9-FA53 (BN/BU)</p><p>(4)</p></div></div>                                                                                        |
|                                                                                                                                                                                 | <div><p><b>C556</b></p><p><b>14K733</b></p><div><p>(1) 4-EC7D (GY/RD) +<br/>4-EC7X (GY/RD)<br/>4-EC7D (GY/RD) +<br/>4-EC7N (GY/RD)</p><p>(2) 5-EC7D (BU/RD) +<br/>5-EC7X (BU/RD)<br/>5-EC7D (BU/RD) +<br/>5-EC7N (BU/RD)</p></div></div> |
| <div><p>F03308</p></div> <div><p>B225<br/>Fuel rail pressure<br/>transducer sensor</p></div> | <div><p><b>C586</b> (RD)</p><p><b>12A690</b></p><div><p>(1) 8-RJ11 (WH/GN)<br/>8-RJ11A (WH/GN)</p><p>(2) 9-RJ11 (BN/GN)<br/>9-RJ11A (BN/GN)</p><p>(3) 7-RJ11 (YE/GN)<br/>7-RJ11A (YE/GN)</p></div></div>                                 |

**C589** (BK)**12A690**

F46008

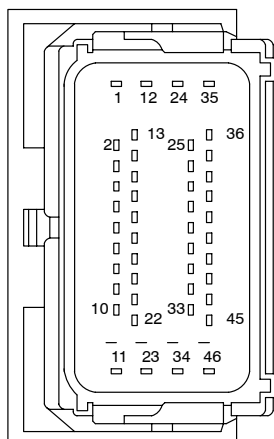


- |                       |                       |                       |
|-----------------------|-----------------------|-----------------------|
| (1)                   | (17) 9-RJ4A (BN/RD)   | (32) 91S-PA53 (BK/RD) |
| (2) 31S-RL10 (BK/WH)  | (18)                  | (33) 91S-PA51 (BK/OG) |
| (3) 31S-RL11 (BK/YE)  | (19)                  | (34) 8-RR8 (WH/GN)    |
| (4)                   | (20) 4-EB6A (GY)      | (35)                  |
| (5)                   | (21)                  | (36) 7-RJ40 (YE/GN)   |
| (6) 8-RJ4A (WH/RD)    | (22) 15S-RG3 (GN/RD)  | (37) 8-RG3 (WH/BU)    |
| (7)                   | (23) 8-RR7 (WH/BU)    | (38) 9-RG3 (BN/BU)    |
| (8) 91S-RL19 (BK/YE)  | (24)                  | (39) 8-RJ40 (WH/GN)   |
| (9) 91S-RL43 (BK/RD)  | (25) 32-RG3 (WH/BU)   | (40)                  |
| (10) 91S-RG3 (BK/OG)  | (26) 33-RG3 (YE/BU)   | (41) 9-RJ18 (BN/YE)   |
| (11) 8-RR5 (WH)       | (27) 8-RJ17 (WH/VT)   | 9-RJ18 (YE)           |
| (12)                  | (28)                  | (42)                  |
| (13) 31S-RL12 (BK/BU) | (29) 8-RJ18 (WH/BK)   | (43)                  |
| (14) 31S-RL13 (BK/OG) | 8-RJ18 (BK)           | (44) 91S-PA54 (BK/WH) |
| (15) 5-EB6A (BU)      | (30) 9-RJ5 (BN)       | (45) 91S-PA52 (BK/GN) |
| (16) 8-RJ5A (WH)      | (31) 31S-GC20 (BK/OG) | (46) 8-RR6 (WH/RD)    |

A147  
Powertrain control  
module (PCM)

**C593****12A690**

F06202

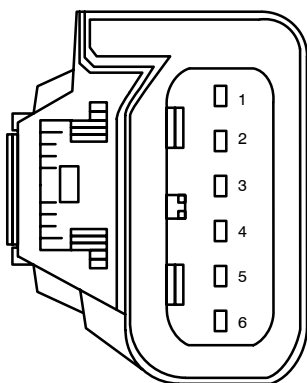


- (1) 15S-RG3 (GN/RD)
- (2) 91S-RG3 (BK/OG)
- (3) 8-RG3 (WH/BU)
- (4) 9-RG3 (BN/BU)
- (5) 32-RG3 (WH/BU)
- (6) 33-RG3 (YE/BU)

A464  
Electronic Throttle  
Control (ETC)  
module


**C596****12A690**

F06316

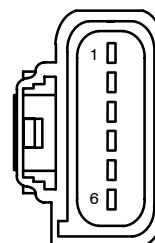

- (1)
- (2) 8-RJ22 (WH/BU)
- 8-RJ22A (WH/BU)
- (3) 15-RJ22 (GN/RD)
- (4) 9-RJ22 (BN/BU)
- 9-RJ22A (BN/BU)
- (5) 49-RJ22 (BU/WH)
- 49-RJ22A (BU/WH)
- (6)

F32034

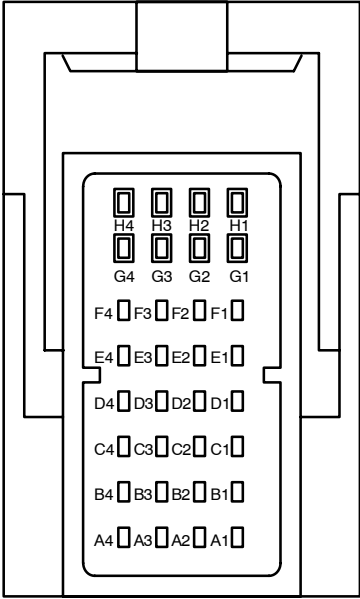


C599

12A690

|                      |                        |                       |
|----------------------|------------------------|-----------------------|
| (A 1)                | (C 3)                  | (F 3)                 |
| (A 2) 8-RJ17 (WH/VT) | (D 1) 91S-RL10 (BK/WH) | (F 4)                 |
| (A 3)                | (D 2) 91S-RL11 (BK/YE) | (G 1) 91-RE8T (BK/YE) |
| (A 4)                | (D 3)                  | (G 2)                 |
| (B 1) 8-RJ40 (WH/GN) | (D 4) 31S-GC20 (BK/OG) | (G 3)                 |
| (B 2) 9-RJ4A (BN/RD) | (E 1) 91S-RL12 (BK/BU) | (G 4)                 |
| (B 3) 8-RJ4A (WH/RD) | (E 2) 91S-RL13 (BK/OG) | (H 1) 8-RR5 (WH)      |
| (B 4)                | (E 3) 8-RJ18 (WH/BK)   | (H 2) 8-RR7 (WH/BU)   |
| (C 1)                | (E 4) 9-RJ18 (BN/YE)   | (H 3) 8-RR8 (WH/GN)   |
| (C 2)                | (F 1)                  | (H 4) 8-RR6 (WH/RD)   |
| (C 3) 8-RJ5A (WH)    | (F 2)                  |                       |


F48008

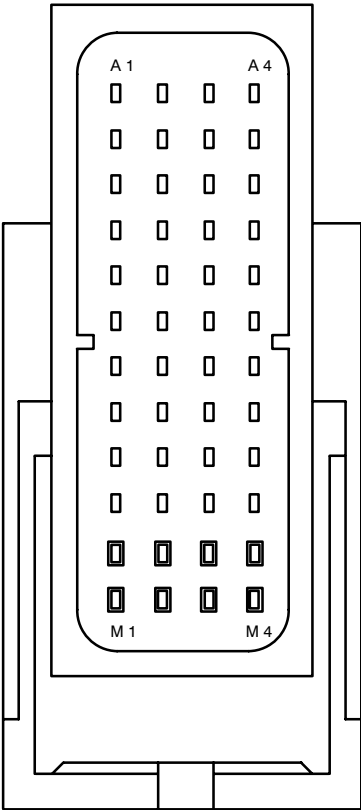


C600

12A690

|                         |                        |                         |
|-------------------------|------------------------|-------------------------|
| (A 1)                   | (D 4)                  | (J 1)                   |
| (A 2) 7-RJ40 (YE/GN)    | (E 1) 8-RJ25A (WH/BU)  | (J 2)                   |
| (A 3)                   | (E 2) 8-RJ26 (WH/GN)   | (J 3)                   |
| (A 4) 4-EC7 (GY/RD)     | (E 3) 15S-LG23 (GN/WH) | (J 4)                   |
| 4-EC7A (GY/RD)          | (E 4)                  | (K 1)                   |
| (B 1) 31S-FA11A (BK/YE) | (F 1) 8-FA88 (WH/VT)   | (K 2) 91S-RH5 (BK/BU)   |
| (B 2)                   | (F 2) 91S-RE8A (WH/VT) | (K 3)                   |
| (B 3)                   | (F 3)                  | (K 4)                   |
| (B 4) 5-EC7 (BU/RD)     | (F 4)                  | (L 1)                   |
| 5-EC7A (BU/RD)          | (G 1) 91S-RH9A (BK/BU) | (L 2) 31S-BB16A (BK/RD) |
| (C 1) 91S-RJ26A (BK/GN) | (G 2) 15-RE17A (GN/BU) | (L 3)                   |
| (C 2) 49-PA6 (BU)       | (G 3)                  | (L 4) 91-RE8 (BK/YE)    |
| (C 3)                   | (G 4)                  | 91-RE8H (BK/YE)         |
| (C 4)                   | (H 1) 31S-RL2 (BK/OG)  | (M 1) 9-RE8 (BN)        |
| (D 1) 91S-RJ26 (BK/GN)  | (H 2)                  | (M 2) 15-RE21A (GN/OG)  |
| (D 2) 10-RJ30 (GY)      | (H 3)                  | (M 3) 15-RE21B (GN/OG)  |
| (D 3)                   | (H 4)                  | (M 4) 91-RE8A (BK/YE)   |

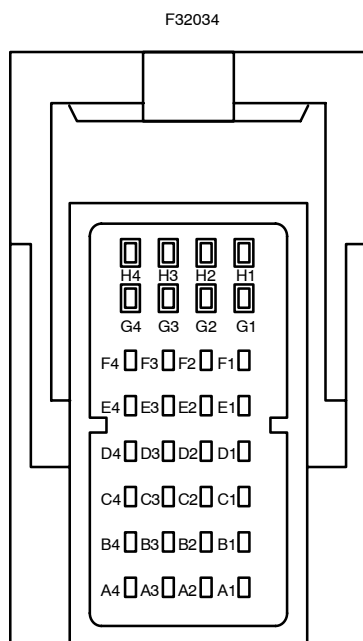
**C601****12A690**

- |                        |                        |                       |
|------------------------|------------------------|-----------------------|
| (A 1)                  | (C 4) 7-FA88 (YE/VT)   | (F 3) 33-RG3 (YE/BU)  |
| (A 2)                  | (D 1) 91S-RL19 (BK/YE) | (F 4)                 |
| (A 3)                  | (D 2) 91S-RL43 (BK/RD) | (G 1) 8-RG3 (WH/BU)   |
| (A 4) 5-EB6A (BU)      | (D 3)                  | (G 2)                 |
| (B 1) 91S-PA51 (BK/OG) | (D 4)                  | (G 3)                 |
| (B 2) 91S-PA52 (BK/GN) | (E 1) 9-RJ5 (BN)       | (G 4)                 |
| (B 3) 8-RJ29A (WH/BU)  | (E 2) 4-EB6A (GY)      | (H 1) 91-RE8U (BK/YE) |
| (B 4)                  | (E 3)                  | (H 2)                 |
| (C 1) 91S-PA53 (BK/RD) | (E 4) 32-RG3 (WH/BU)   | (H 3) 15S-RG3 (GN/RD) |
| (C 2) 91S-PA54 (BK/WH) | (F 1) 9-RG3 (BN/BU)    | (H 4) 91S-RG3 (BK/OG) |
| (C 3)                  | (F 2)                  |                       |

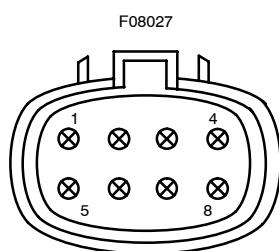**C608****15K868**

- (1)
- (2) 8-GN20 (WH/RD)  
8-GN20A (WH/RD)
- (3) 31-LD5 (BK)
- (4) 8-GN19A (WH)


- (5) 8-GN22 (WH/GN)  
8-GN22A (WH/GN)
- (6)
- (7)
- (8) 15S-LD6 (GN/YE)  
15S-LG9 (GN/BK)

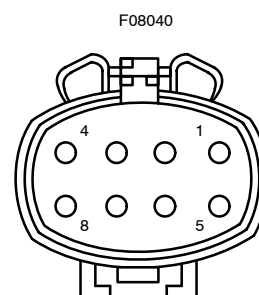**14014**

- (9)
- (10)
- (11)
- (12) 9-GN19A (BN)  
9-GN19B (BN)

C610

14014

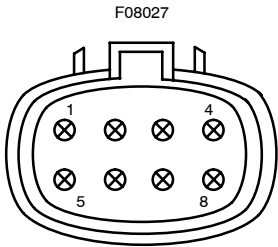


- (1) 8-GN20 (WH/RD)
- (2)
- (3) 8-GN19 (WH)
- (4) 8-GN22 (WH/GN)
- (5)
- (6)
- (7) 9-GN19 (BN)  
9-GN19A (BN)  
9-GN19B (BN)
- (8)

C629

14K733

F02091

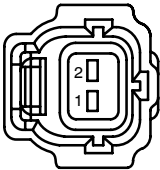


- (1) 8-GN6 (WH)
- (2) 9-GN6 (BN)

B309  
Parking aid sensor,  
LH front

C633

15K868

F02091

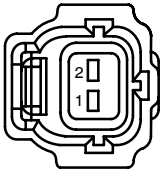

- (1) 8-GN20 (WH/RD)  
8-GN20A (WH/RD)  
9-GN20 (BN/RD)
- (2) 8-GN20 (WH/RD)


B170  
Parking aid sensor, rear,  
inner right

as of model year 2009

C630

14K733

F03308

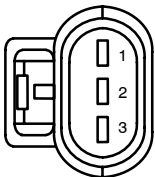


- (1) 9-RJ28 (BN)
- (2) 8-RJ28 (WH)
- (3) 7-RJ28 (YE)

B301  
Parking aid sensor, RH front

before model year 2009

F02091

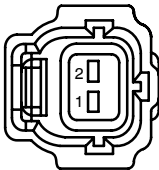


- (1) 9-GN9 (BN/GN)
- (2) 8-GN9 (WH/GN)

C634

15K868

before 11/2004

F02610

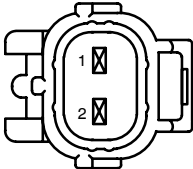


B169  
Parking aid sensor,  
rear, inner left

- (1) 8-GN21 (WH/BU)
- (2) 9-GN21 (BN/BU)

C632

15K868

F02091

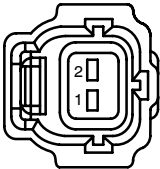


- (1) 8-GN19 (WH)  
8-GN19A (WH)  
9-GN19A (BN)
- (2) 8-GN19 (WH)

B171  
Parking aid sensor, rear, outer right

C635

15K868

F02091

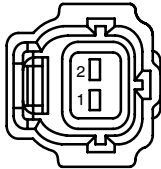


- (1) 8-GN22 (WH/GN)  
8-GN22A (WH/GN)  
9-GN22 (WH/GN)
- (2) 8-GN22 (WH/GN)

B168  
Parking aid sensor, rear, outer  
left

**C638**  
**12A690**


F02055

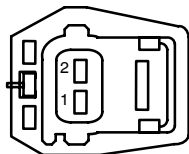

- (1) 8-RJ47 (WH/BU)  
8-RJ47A (WH/BU)
- (2) 9-RJ47 (BN/BU)  
9-RJ47A (BN/BU)

**C643** (BK)  
**12A690**

F02091

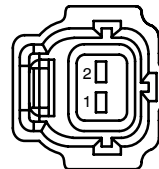


- (1) 9-RJ4A (BN/RD)
- (2) 8-RJ4A (WH/RD)

B43  
Crankshaft position sensor

**C639**  
**12A690**


F02055

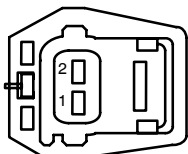

- (1) 8-RJ46 (WH/RD)  
8-RJ46A (WH/RD)
- (2) 9-RJ46 (BN/RD)  
9-RJ46A (BN/RD)

**C644**  
**67020**

F03328

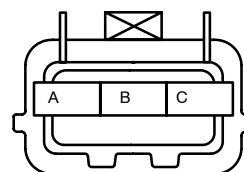


T8  
Ignition coil, cylinder 3

- (A) 15-RR7 (RD)
- (B) 91-RR7 (BK/RD)
- (C) 8-RR7A (WH/BU)

**C640**  
**12A690**


F03306

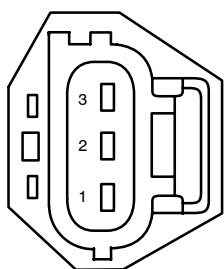

- (1) 8-RJ50 (WH/VT)  
8-RJ50A (WH/VT)
- (2) 9-RJ50 (BN/WH)  
9-RJ50A (BN/WH)
- (3) 7-RJ50 (YE/VT)  
7-RJ50A (YE/VT)

**C645**  
**67020**

F03328

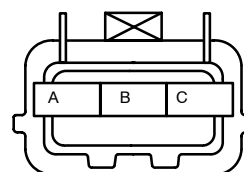


T9  
Ignition coil, cylinder 4

- (A) 15-RR8 (RD/BU)
- (B) 91-RR8 (GN)
- (C) 8-RR8A (WH/GN)

**C642**  
**67020**

F03328

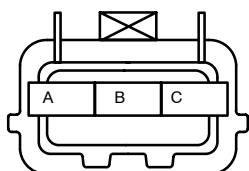


T6  
Ignition coil, cylinder 1

- (A) 15-RR5 (RD/BK)
- (B) 91-RR5 (BK)
- (C) 8-RR5A (WH)

**C646**  
**67020**

F02626

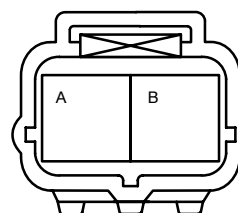


U1  
Ignition transformer capacitor

- (A) 91-MD20 (BK/BU)
- (B) 15-MD20 (GN/BU)

**C648**

**14014**

F06276

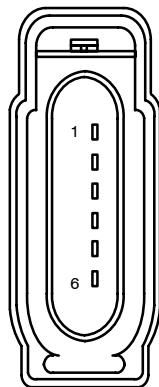


- (1) 7-RJ30 (YE)
- (2) 8-RJ30 (WH)
- (3) 9-RJ30 (BN)
- (4) 91-RJ30 (BK/YE)
- (5) 10-RJ30 (GY)
- (6) 15-RJ30 (GN/YE)

B129  
Accelerator pedal  
position sensor

**C655**

**12A690**

F02580

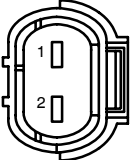


- (1) 8-RJ17A (WH/VT)
- (2) 9-RJ17 (BN/WH)

B213  
Intake Air Tem-  
perature (IAT)  
sensor



**C680****67020**

F60006

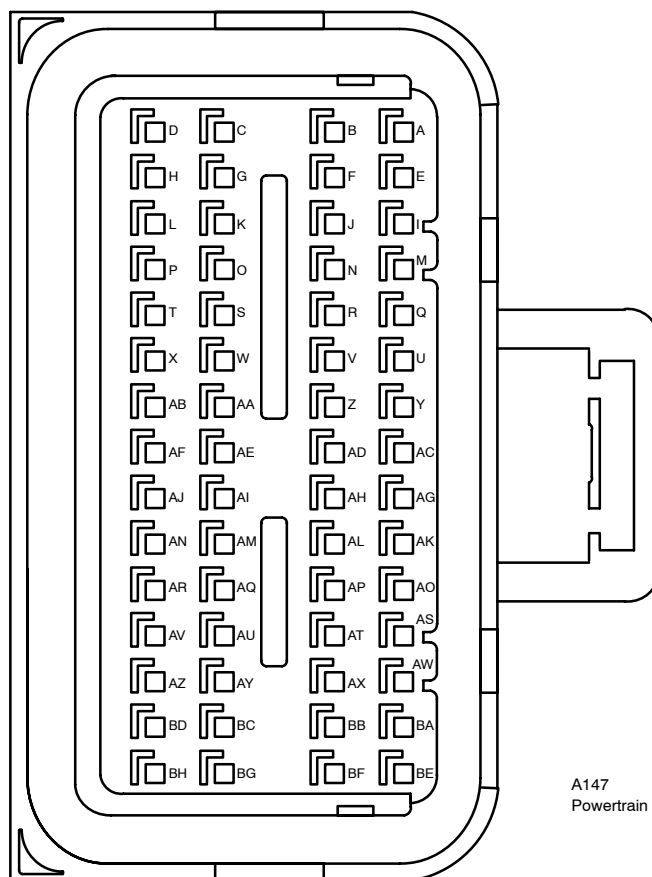

A147  
Powertrain control module (PCM)


(A) 15-RL12 (GN/BU)  
 (B) 15-RL10 (GN/WH)  
 (C) 15-RL11 (GN/YE)  
 (D)  
 (E) 31S-RL10 (BK/WH)  
 (F) 31S-RL11 (BK/YE)  
 (G) 31S-RL12 (BK/BU)  
 (H) 15-RL13 (GN/RD)  
 (I) 8-RJ26 (WH/GN)  
 (J) 8-RJ5 (WH)  
 (K) 31S-GC20 (BK/OG)  
 (L) 31S-RL13 (BK/OG)  
 (M) 8-RR8A (WH/GN)  
 (N)  
 (O) 91S-PA51 (BK/OG)  
 (P) 8-RJ4 (WH/RD)  
 (Q) 8-RR7A (WH/BU)  
 (R) 8-RJ17 (WH/VT)  
 (S) 91S-PA52 (BK/GN)  
 (T) 15S-RJ15 (GN/BU)

(U) 8-RR6A (WH/RD)  
 (V) 7-RJ28 (YE)  
 (W) 91S-PA53 (BK/RD)  
 (X) 8-RL9 (WH)  
 (Y) 8-RR5A (WH)  
 (Z) 8-RJ28 (WH)  
 (AA) 91S-PA54 (BK/WH)  
 (AB) 9-RL9 (BN)  
 (AC)  
 (AD) 8-RJ21 (WH/RD)  
 (AE) 9-RJ28 (BN)  
 (AF) 15-RL43 (GN/OG)  
 (AG) 9-RL2 (BN/BU)  
 (AH) 8-RJ25 (WH/BU)  
 (AI)  
 (AJ) 91S-RL43 (BK/RD)  
 (AK) 8-RL2 (WH/BU)  
 (AL)  
 (AM) 91S-RJ25 (BK/OG)  
 (AN) 5-EB6 (BU)

(AO) 91S-RL21 (BK/WH)  
 (AP)  
 (AQ) 8-RJ22 (WH/BU)  
 (AR) 4-EB6 (GY)  
 (AS) 15-RL19 (GN/YE)  
 (AT) 91S-RJ26 (BK/GN)  
 (AU)  
 (AV) 31S-RL2 (BK/OG)  
 (AW)  
 (AX) 9-RE8 (BN)  
 (AY) 9-RJ22 (BN/BU)  
 (AZ) 31-RE8A (BK)  
 (BA) 8-RJ18 (WH/BK)  
 (BB) 8-RJ39 (WH/RD)  
 (BC) 91S-RJ22 (BK/OG)  
 (BD) 91-RE25 (BK/RD)  
 (BE)  
 (BF) 91-RE27 (BK/RD)  
 (BG) 15S-PA1 (GN/BU)  
 (BH) 31-RE21 (BK)

C681  
67070

F60005

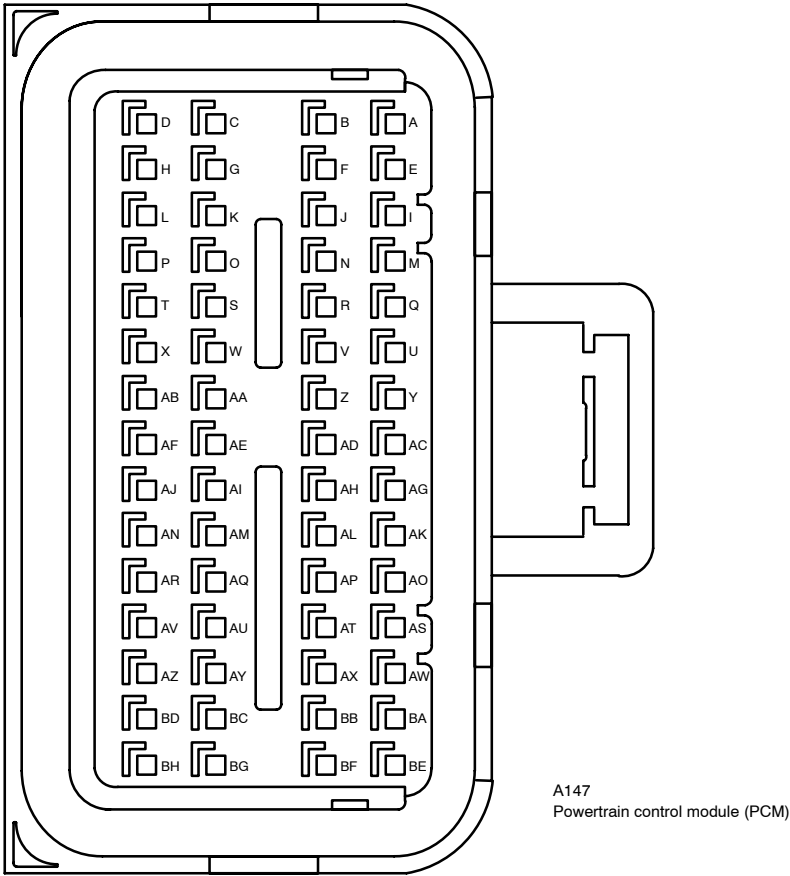


- (A)
- (B)
- (C)
- (D)
- (E)
- (F)
- (G) 31-RE25B (BK)
- (H)
- (I)
- (J)
- (K)
- (L)
- (M)
- (N)
- (O)
- (P) 91S-BB6 (BK/YE)
- (Q)
- (R) 31S-FA11A (BK/YE)
- (S) 5-EC7D (BU/RD)
- (T)

- (U) 8-FA88B (WH/VT)
- (V) 15S-LG23B (GN/WH)
- (W) 4-EC7D (GY/RD)
- (X)
- (Y) 9-TA27B (BN/WH)
- (Z)
- (AA)
- (AB) 91-TA39 (BK/OG)
- (AC) 91S-RH5B (BK/BU)
- (AD)
- (AE)
- (AF)
- (AG) 8-TA27B (WH/VT)
- (AH)
- (AI)
- (AJ)
- (AK)
- (AL) 91S-RE8A (BK/YE)
- (AM) 31S-BB16 (BK/RD)
- (AN)

- (AO)
- (AP) 49-PA6B (BU)
- (AQ)
- (AR)
- (AS)
- (AT)
- (AU)
- (AV)
- (AW) 91S-RH9B (BK/BU)
- (AX) 30-RE8B (RD)
- (AY)
- (AZ)
- (BA)
- (BB) 15-RJ15A (GN/BU)
- (BC)
- (BD)
- (BE)
- (BF) 15-RE21B (GN/OG)
- (BG)
- (BH) 15-RN2B (GN/BU)

**C682****67070**

F60006

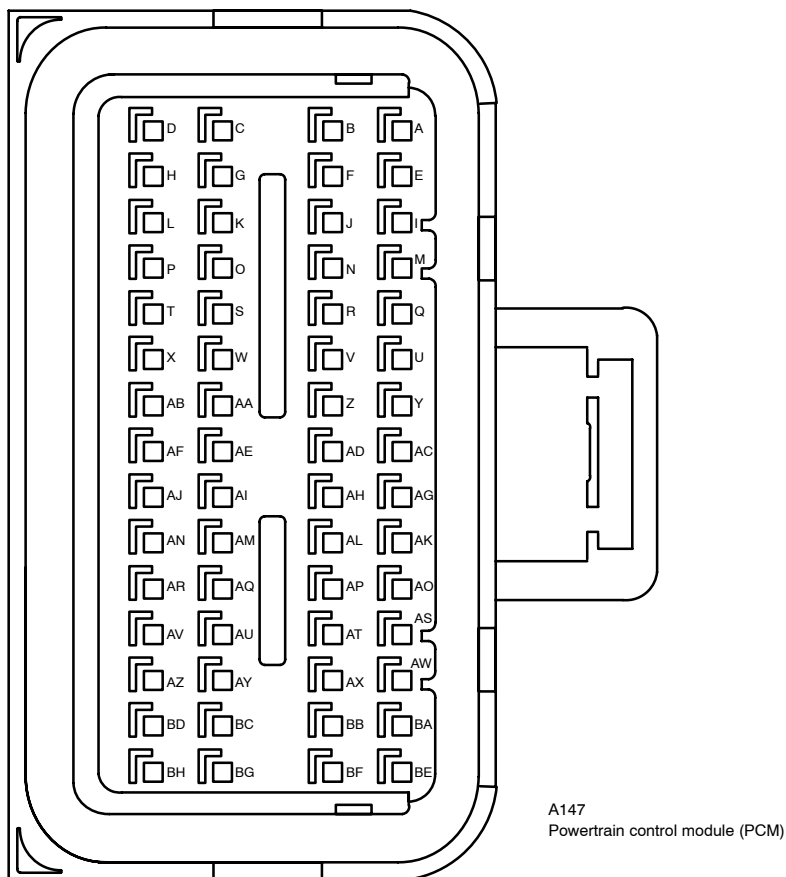

(A)  
 (B)  
 (C)  
 (D)  
 (E)  
 (F)  
 (G) 31-RE25A (BK)  
 (H)  
 (I)  
 (J)  
 (K)  
 (L)  
 (M) 9-TA27A (BN/WH)  
 (N)  
 (O)  
 (P) 8-PF36A (WH/GN)  
 (Q) 8-TA27A (WH/VT)  
 (R) 31S-FA11A (BK/YE)  
 (S) 5-EC7A (BU/RD)  
 (T)


(U) 8-FA88A (WH/VT)  
 (V) 15S-LG23A (GN/WH)  
 (W) 4-EC7A (GY/RD)  
 (X) 91S-TA18 (BK/RD)  
 (Y)  
 (Z)  
 (AA)  
 (AB) 10-PF36A (GY/OG)  
 (AC) 91S-RH5A (BK/BU)  
 (AD)  
 (AE)  
 (AF) 91S-TA17A (BK/RD)  
 (AG)  
 (AH)  
 (AI)  
 (AJ) 15S-TA63A (GN/BK)  
 (AK) 8-TA36A (WH/GN)  
 (AL) 91S-RE8A (BK/YE)  
 (AM) 31S-BB14 (BK/BU)  
 (AN) 9-RN2 (BN/RD)

(AO)  
 (AP) 49-PA6A (BU)  
 (AQ)  
 (AR) 15S-TA64A (GN/OG)  
 (AS)  
 (AT)  
 (AU)  
 (AV) 15S-TA17A (GN/OG)  
 (AW) 91S-RH9A (BK/BU)  
 (AX) 30-RE8A (RD)  
 (AY) 8-TA51 (WH/RD)  
 (AZ) 15S-TA65A (GN/WH)  
 (BA)  
 (BB) 15-RJ15 (GN/BU)  
 (BC) 15-TA51A (GN)  
 (BD) 15S-TA24A (GN/BU)  
 (BE) 15S-TA23A (GN/YE)  
 (BF) 15-RE21A (GN/OG)  
 (BG) 15-RN3C (GN/BU)  
 (BH) 15-RN2A (GN/BU)

C690 (BK)

12A690

F46004

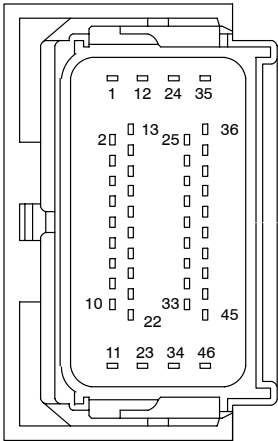


- |                                            |                      |                                      |
|--------------------------------------------|----------------------|--------------------------------------|
| (1) 31S-FA11A (BK/YE)                      | (16)                 | (32) 10-RJ30 (GY)                    |
| (2)                                        | (17)                 | (33)                                 |
| (3) 31S-RL2 (BK/OG)                        | (18)                 | (34) 15-RE21A (GN/OG)                |
| (4) 31S-BB16A (BK/RD)<br>31S-BB16B (BK/RD) | (19) 91S-RH5 (BK/BU) | (35) 91S-RH9A (BK/BU)                |
| (5) 91S-RJ26A (BK/GN)                      | (20)                 | (36)                                 |
| (6)                                        | (21)                 | (37)                                 |
| (7) 91S-RJ26 (BK/GN)                       | (22)                 | (38)                                 |
| (8)                                        | (23) 91-RE8J (BK/YE) | (39) 15S-LG23 (GN/WH)                |
| (9)                                        | (24)                 | (40)                                 |
| (10) 91-RE8 (BK/YE)<br>91-RE8H (BK/YE)     | (25) 9-RE8 (BN)      | (41) 4-EC7 (GY/RD)<br>4-EC7A (GY/RD) |
| (11) 91-RE8K (BK/YE)                       | (26) 8-RJ25A (WH/BU) | (42)                                 |
| (12) 49-PA6 (BU)                           | (27) 8-RJ26 (WH/GN)  | (43)                                 |
| (13) 8-FA88 (WH/VT)                        | (28) 7-FA88 (YE/VT)  | (44)                                 |
| (14) 91S-RE8A (BK/YE)                      | (29) 8-RJ29A (WH/BU) | (45)                                 |
| (15)                                       | (30)                 | (46) 15-RE17A (GN/BU)                |
|                                            | (31)                 |                                      |

A147  
Powertrain control module (PCM)

C692  
14K733

F04083

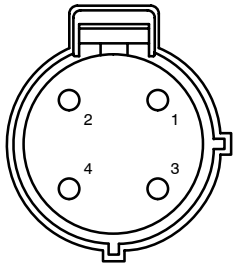


- |                                           |
|-------------------------------------------|
| (1) 91S-FA17 (BK/RD)<br>91S-FA17A (BK/RD) |
| (2)                                       |
| (3)                                       |
| (4) 91S-RE8 (BK/YE)                       |

N246  
A/C low-pressure  
switch

**C700****14014**

F24022

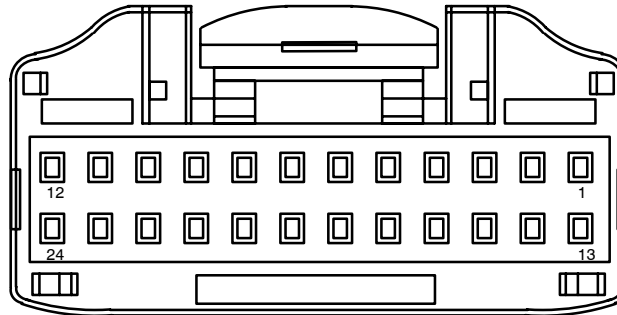


A265  
Parking aid module

- |                     |                       |                       |
|---------------------|-----------------------|-----------------------|
| (1) 4-EC10AL (GY)   | (10) 91S-GN12 (BK/OG) | (18) 8-GN20 (WH/RD)   |
| (2) 10-GN26 (GY)    | (11) 15-GN10A (GN/YE) | 8-GN20A (WH/RD)       |
| (3)                 | (12) 30-GN10 (RD)     | 8-GN20 (WH/RD) +      |
| (4) 9-GN6 (BN)      | (13) 5-EC10AL (BU)    | 8-GN20A (WH/RD)       |
| (5) 8-GN9 (WH/GN)   | (14)                  | (19) 8-GN22 (WH/GN)   |
| (6) 8-GN6 (WH)      | (15)                  | 8-GN22A (WH/GN)       |
| (7) 8-GN19 (WH)     | (16) 9-GN19 (BN)      | 8-GN22 (WH/GN) +      |
| 8-GN19A (WH)        | 9-GN19A (BN)          | 8-GN22A (WH/GN)       |
| 8-GN19 (WH) +       | 9-GN19 (BN) +         | (20)                  |
| 8-GN19A (WH)        | 9-GN19A (BN)          | (21) 10-GN26 (GY)     |
| (8)                 | (17)                  | (22) 15S-GN23 (GN/OG) |
| (9) 10-GN25 (GY/WH) |                       | (23)                  |
|                     |                       | (24) 31-GN10 (BK)     |

**C710****14014**


F02670

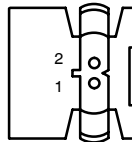

- (1) 15S-JA50 (GN/OG)  
(2) 91S-JA50 (BK/RD)

**C711****14014**


F02670

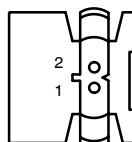

- (1) 15S-JA51 (GN/BU)  
(2) 91S-JA51 (BK/BU)

**C717****14401**

F06278

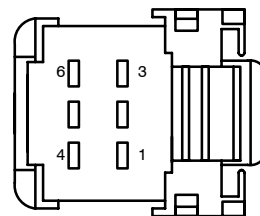


- (1) 15-CF54 (GN/WH)  
(2) 91-CF54 (BK/WH)  
(3) 29S-LH45 (OG/WH)  
(4)  
(5) 31S-CF54 (BK/WH)  
(6) 91S-CF54 (BK/WH)

N346  
Electronic Stability Program (ESP)  
switch

C722

14K138

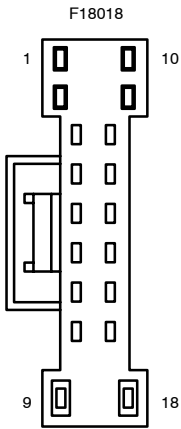


- |                      |                        |
|----------------------|------------------------|
| (1) 32-AA59 (WH/BK)  | (10) 33-AA60 (YE)      |
| 32-AA59A (WH/BK)     | (11)                   |
| (2) 33-AA59 (YE/BK)  | (12) 5-EC3F (BU/RD)    |
| 33-AA59A (YE/BK)     | (13) 91S-AA64 (BK/GN)  |
| (3) 4-EC3F (GY/RD)   | (14) 91S-AA63 (BK/OG)  |
| (4)                  | (15) 91S-AA61 (BK/BU)  |
| (5) 7-LH31 (YE/RD)   | (16) 91-AA58 (BK/YE)   |
| (6) 91S-AA62 (BK/WH) | 91-AA58A (BK/YE)       |
| (7) 91-AJ18 (BK/WH)  | (17) 91S-AJ54B (BK/GN) |
| (8) 91S-AJ55 (BK/RD) | (18) 31-DA12A (BK)     |
| (9) 29-AJ27 (OG/WH)  |                        |

A352  
Door control module, passenger

C723

14K138

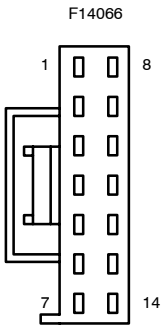


- |                       |                      |                      |
|-----------------------|----------------------|----------------------|
| (1) 49S-LG20 (BU/WH)  | (6) 32-AD10 (WH/BK)  | (10) 91-AD10 (BK/RD) |
| 49S-LG20B (BU/WH)     | (7) 49S-LG20 (BU/WH) | (11) 10-AD10 (GY/BK) |
| (2)                   | 33-AD10 (YE/BK)      | (12)                 |
| (3) 31-HB36A (BK)     | (8) 34-AD10A (BU/YE) | (13)                 |
| 31-HB36B (BK)         | (9) 8-AD10 (WH/BK)   | (14) 32-AD26 (WH/GN) |
| (4) 15S-HB36B (GN/OG) | 4-EE9B (GY/OG)       |                      |
| (5)                   |                      |                      |

A352  
Door control module, passenger

**C727****14A584**

F14066.01

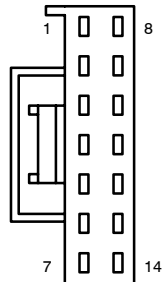


- |                      |                       |
|----------------------|-----------------------|
| (1) 91S-AJ54 (BK/GN) | (8) 91S-AJ55 (BK/RD)  |
| 91S-AJ54A (BK/GN)    | 91S-AJ55A (BK/RD)     |
| (2) 91S-AJ57 (BK/BU) | (9) 91S-AJ58 (BK/OG)  |
| (3) 91S-AJ60 (BK/BU) | (10) 91S-AJ61 (BK/OG) |
| (4) 8-AJ19 (WH/RD)   | (11) 10-AD6 (GY)      |
| (5)                  | (12) 8-AD6 (WH)       |
| (6)                  | (13)                  |
| (7) 29-AD12A (OG/YE) | (14)                  |

A351  
Door control module, driver

**C728****14A584**

F14066

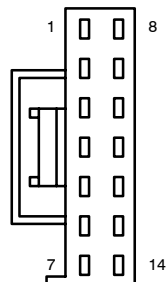


- |                       |                      |
|-----------------------|----------------------|
| (1) 49S-LG13B (BU/RD) | (8) 34-AD7A (BU/RD)  |
| (2) 29S-LC41 (OG/WH)  | 34-AD7B (BU/RD)      |
| (3) 31-HB35A (BK)     | 34-AD10B (BU/YE)     |
| 31-HB35B (BK)         | (9) 4-EE9B (GY/OG)   |
| (4) 15S-HB35B (GN/BK) | (10) 33-AD8A (YE/BU) |
| (5) 32-AD6A (WH)      | (11) 34-AD7A (BU/RD) |
| (6) 32-AD6A (WH)      | (12) 29-AJ7 (OG/BU)  |
| 32-AD6B (WH)          | (13) 91-AJ7A (BK/BU) |
| 32-AD10A (WH/BK)      | (14) 32-AD27 (WH/GN) |
| (7) 33-AD8A (YE/BU)   |                      |
| 33-AD8B (YE/BU)       |                      |
| 33-AD10A (YE/BK)      |                      |
| 49S-LG13 (YE/BK)      |                      |

A351  
Door control module, driver

C729

14A584

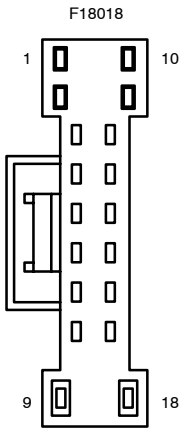


- |                       |                        |
|-----------------------|------------------------|
| (1) 32-AA59A (WH/BK)  | (10) 33-AA60A (YE)     |
| 32-AA59B (WH/BK)      | (11)                   |
| (2) 33-AA59A (YE/BK)  | (12) 5-EC3B (BU/RD)    |
| 33-AA59B (YE/BK)      | (13) 91S-AA64A (BK/GN) |
| (3) 4-EC3B (GY/RD)    | (14) 91S-AA63A (BK/OG) |
| (4)                   | (15) 91S-AA61A (BK/BU) |
| (5) 7-LH14 (YE)       | (16) 91-AA58A (BK/YE)  |
| 7-LH48 (YE/VT)        | 91-AA58B (BK/YE)       |
| (6) 91S-AA62A (BK/WH) | (17) 91S-AD24 (BK/RD)  |
| (7) 91-AD24 (BK/RD)   | 91S-AJ40 (BK/GN)       |
| 91-AJ7A (BK/BU)       | 91S-AJ40A (BK/GN)      |
| (8) 91S-AJ41 (BK/RD)  | (18) 31-DA11A (BK)     |
| 91S-AJ41A (BK/RD)     |                        |
| (9) 29-AJ26 (OG/YE)   |                        |

A351  
Door control module, driver

C730


14240

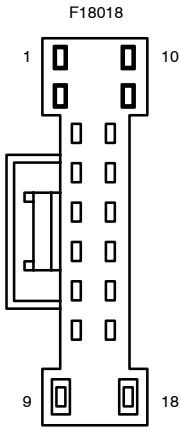

- |                      |                       |
|----------------------|-----------------------|
| (1) 32-AA59B (BK)    | (10) 33-AA60B (BK)    |
| (2) 33-AA59B (BK)    | (11)                  |
| (3) 4-EC3D (GY/RD)   | (12) 5-EC3D (BU/RD)   |
| 4-EE9A (GY/OG)       | (13)                  |
| (4)                  | (14)                  |
| (5) 7-LH36 (YE/BU)   | (15)                  |
| (6)                  | (16) 91-AA58B (BK)    |
| (7) 91-AJ32 (BK/OG)  | (17) 91S-AJ63 (BK/BU) |
| (8) 91S-AJ64 (BK/OG) | (18) 31-AJ83 (BK)     |
| (9) 29-AJ83 (OG/BU)  |                       |

A353  
Door control module, LH side rear

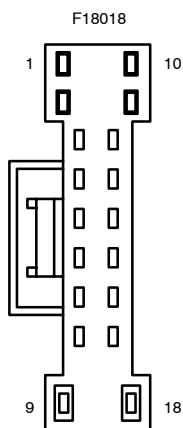


**C731****14240**

- |                       |                        |
|-----------------------|------------------------|
| (1) 32-AA59C (BK)     | (10) 33-AA60C (BK)     |
| (2) 33-AA59C (BK)     | (11)                   |
| (3) 4-EC3A (GY/RD)    | (12) 5-EC3A (BU/RD)    |
| 4-EE9B (GY/OG)        | (13)                   |
| (4)                   | (14)                   |
| (5) 7-LH36A (YE/BU)   | (15)                   |
| (6)                   | (16) 91-AA58C (BK)     |
| (7) 91-AJ32A (BK/OG)  | (17) 91S-AJ63A (BK/BU) |
| (8) 91S-AJ64A (BK/OG) | (18) 31-AJ83A (BK)     |
| (9) 29-AJ83A (OG/BU)  |                        |

A354  
Door control module, RH side rear

**C732****14014**

F06234

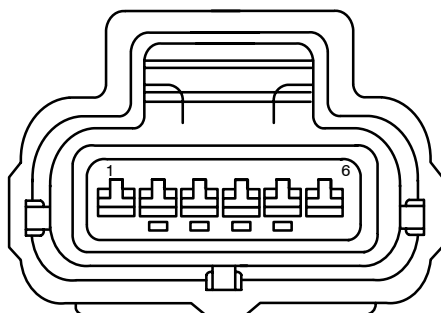


- |                     |
|---------------------|
| (1) 15S-RG2 (GN/OG) |
| (2) 8-GA7 (WH/RD)   |
| (3)                 |
| (4) 9-GA7 (BN/RD)   |
| (5) 31-RG2 (BK)     |
| (6)                 |

A31  
Fuel tank unit











**C741****14A584**








F08280

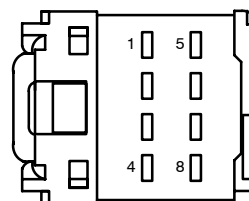

- |                     |                    |
|---------------------|--------------------|
| (1) 29-AD12 (OG/YE) | (5)                |
| (2) 33-AD8C (YE/BU) | (6) 33-AD8 (YE/BU) |
| 33-AD11 (YE/VT)     | 33-AD11C (YE/VT)   |
| (3) 32-AD6C (WH)    | (7) 32-AD6 (WH)    |
| 32-AD9 (WH/GN)      | 32-AD9C (WH/GN)    |
| (4) 34-AD7C (BU/RD) | (8) 34-AD7 (BU/RD) |
| 34-AD10 (BU/YE)     | 34-AD10C (BU/YE)   |

    N388  
Window control/power mirror adjust  
switch, driver

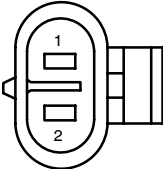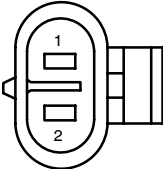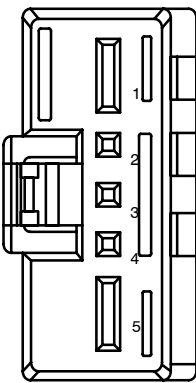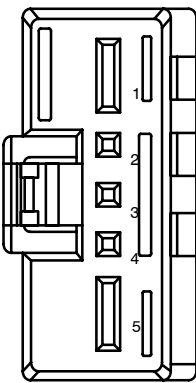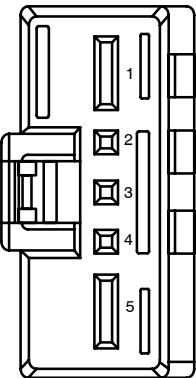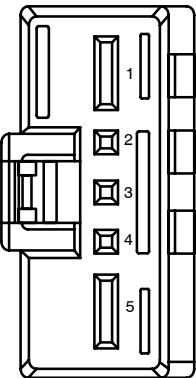
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><div><div>C755</div><div>14B723</div><div>F02636</div><div></div></div><div><div>N242</div><div>Seat control switch, driver</div></div><div><div>(1) 31-DA14 (BK)</div><div>(2) 29-AH35 (OG/YE)</div></div></div> <td><div><div><div>C759</div><div>14B723</div><div>F02038</div><div></div></div><div><div>M158</div><div>Driver seat height motor</div></div><div><div>(1) 33-AH38 (YE/BK)</div><div>(2) 32-AH38 (WH/BK)</div></div></div></td>                                                                | <div><div><div>C759</div><div>14B723</div><div>F02038</div><div></div></div><div><div>M158</div><div>Driver seat height motor</div></div><div><div>(1) 33-AH38 (YE/BK)</div><div>(2) 32-AH38 (WH/BK)</div></div></div>                                                           |
| <div><div><div>C756</div><div>14B723</div><div>F02638</div><div></div></div><div><div>N242</div><div>Seat control switch, driver</div></div><div><div>(1) 32-AH38 (WH/BK)</div><div>(2) 33-AH38 (YE/BK)</div></div></div> <td><div><div><div>F05146</div><div></div></div><div><div>C760</div><div>14B723</div></div><div><div>(1) 32-AH36 (WH/RD)</div><div>(2)</div><div>(3)</div><div>(4)</div><div>(5) 33-AH36 (YE/RD)</div></div><div><div>M230</div><div>Driver seat backrest motor</div></div></div></td>      | <div><div><div>F05146</div><div></div></div><div><div>C760</div><div>14B723</div></div><div><div>(1) 32-AH36 (WH/RD)</div><div>(2)</div><div>(3)</div><div>(4)</div><div>(5) 33-AH36 (YE/RD)</div></div><div><div>M230</div><div>Driver seat backrest motor</div></div></div>    |
| <div><div><div>C757</div><div>14B723</div><div>F02638</div><div></div></div><div><div>N242</div><div>Seat control switch, driver</div></div><div><div>(1) 32-AH36 (WH/RD)</div><div>(2) 33-AH36 (YE/RD)</div></div></div> <td><div><div><div>F05146</div><div></div></div><div><div>C761</div><div>14B723</div></div><div><div>(1) 33-AH37 (YE/GN)</div><div>(2)</div><div>(3)</div><div>(4)</div><div>(5) 32-AH37 (WH/GN)</div></div><div><div>M227</div><div>Driver seat horizontal motor</div></div></div></td> | <div><div><div>F05146</div><div></div></div><div><div>C761</div><div>14B723</div></div><div><div>(1) 33-AH37 (YE/GN)</div><div>(2)</div><div>(3)</div><div>(4)</div><div>(5) 32-AH37 (WH/GN)</div></div><div><div>M227</div><div>Driver seat horizontal motor</div></div></div> |
| <div><div><div>C758</div><div>14B723</div><div>F02636</div><div></div></div><div><div>N242</div><div>Seat control switch, driver</div></div><div><div>(1) 32-AH37 (WH/GN)</div><div>(2) 33-AH37 (YE/GN)</div></div></div> <td></td>                                                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                    |
 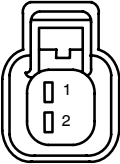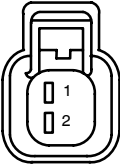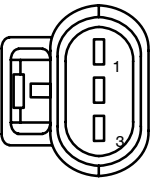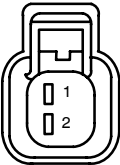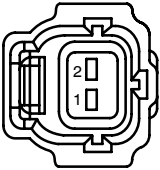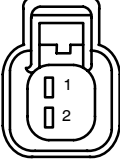
|                                                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>C771</b><br/><b>12A690</b><br/>F02572</p>  <p>(1) 31S-RL10 (BK/WH)<br/>91S-RL10 (BK/WH)<br/>91S-RL10A (BK/WH)</p> <p>(2) 15-RL10 (GN/WH)<br/>15-RL10A (GN/WH)</p> <p>Y108<br/>Fuel injector 1</p>   | <p>F06313</p>  <p><b>C776</b><br/><b>14401</b></p> <p>(1) 15S-FA95 (GN/BK)</p> <p>(2)</p> <p>(3) 31-FA95 (BK)</p> <p>(4) 8-FA95 (WH/GN)</p> <p>(5)</p> <p>(6) 9-FA95 (BN/GN)</p> <p>B206<br/>In-vehicle temperature sensor</p> |
| <p><b>C772</b><br/><b>12A690</b><br/>F02572</p>  <p>(1) 31S-RL11 (BK/YE)<br/>91S-RL11 (BK/YE)<br/>91S-RL11A (BK/YE)</p> <p>(2) 15-RL11 (GN/YE)<br/>15-RL11A (GN/YE)</p> <p>Y109<br/>Fuel injector 2</p>  | <p><b>C778</b><br/><b>12A690</b><br/>F03308</p>  <p>(1) 15-RJ32 (GN/RD)</p> <p>(2) 91-RJ32 (BK/OG)</p> <p>(3) 8-RJ32 (WH/BU)<br/>8-RJ32A (WH/BU)</p> <p>B12<br/>Water-in-fuel sensor</p>                                     |
| <p><b>C773</b><br/><b>12A690</b><br/>F02572</p>  <p>(1) 31S-RL12 (BK/BU)<br/>91S-RL12 (BK/BU)<br/>91S-RL12A (BK/BU)</p> <p>(2) 15-RL12 (GN/BU)<br/>15-RL12A (GN/BU)</p> <p>Y110<br/>Fuel injector 3</p> | <p><b>C779</b><br/><b>9H589, 12A690</b><br/>F02091</p>  <p>(1) 8-RJ5 (WH)</p> <p>(2) 9-RJ5 (BN)</p> <p>B10<br/>Engine Coolant Temperature (ECT) sensor</p>                                                                  |
| <p><b>C774</b><br/><b>12A690</b><br/>F02572</p>  <p>(1) 31S-RL13 (BK/OG)<br/>91S-RL13 (BK/OG)<br/>91S-RL13A (BK/OG)</p> <p>(2) 15-RL13 (GN/RD)<br/>15-RL13 (BK/OG)</p> <p>Y111<br/>Fuel injector 4</p>  |                                                                                                                                                                                                                                                                                                                  |



**C792****14K733**

F03278

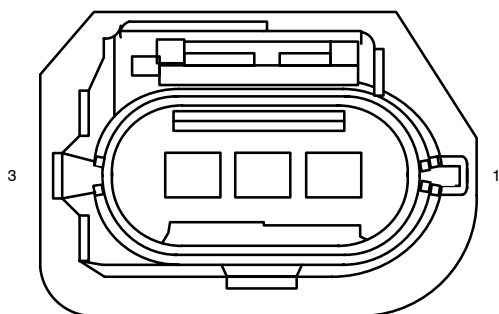


- (1) 7-CE10 (YE/VT)
- (2) 9-CE10 (BN/WH)
- (3) 8-CE10 (WH/VT)

A357  
Electrical Hydraulic Power  
Assist Steering (EHPAS)  
module

**C793****14K733**

F02666

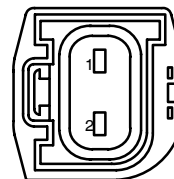


- (1) 30-CE7 (RD)
- (2) 31-CE7 (BK)

A357  
Electrical Hydraulic  
Power Assist Steering  
(EHPAS) module

**C794****14K733**

F03278

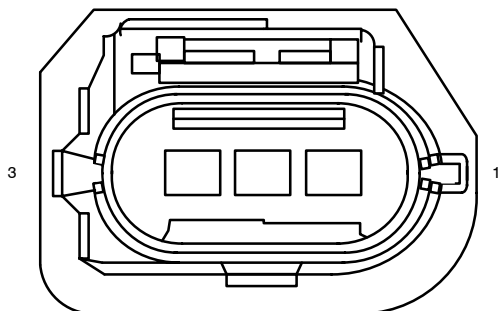


- (1) 15-CE7 (GN/BU)
- (2) 5-EC7W (BU/RD)
- (3) 4-EC7W (GY/RD)

A357  
Electrical Hydraulic Power As-  
sist Steering (EHPAS) module








**C795****14K733**

F03110

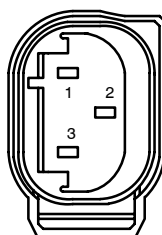


- (1) 8-CE10 (WH/VT)
- (2) 9-CE10 (BN/WH)
- (3) 7-CE10 (YE/VT)

B218  
Steering column  
position sensor
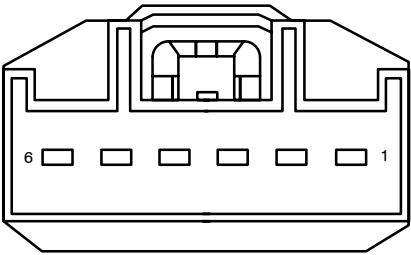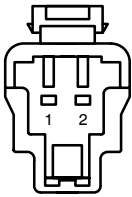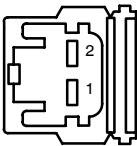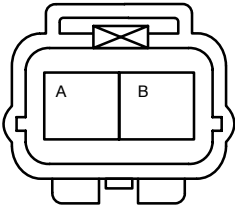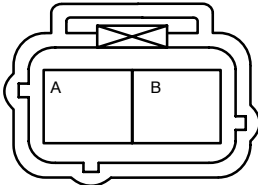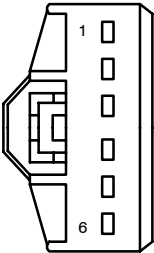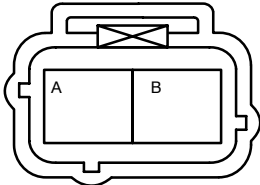
|                                                                                                                                                                                                                                                                                              |  |                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><p>F06230</p></div> <div><p>A333<br/>Door lock unit, liftgate</p></div>                                                                                                                                |  | <div><p><b>C798</b><br/><b>17N400</b></p><div><div><p>(1) 32-AA27 (WH/GN)<br/>32-AA27A (WH/GN)</p><p>(2) 31-GL20 (BK)<br/>31-GL20A (BK)<br/>31-GL20 (BK) +<br/>31-GL20A (BK)</p></div><div><p>(3) 31S-GL20 (BK)<br/>31S-GL20A (BK)</p><p>(4) 31S-LB25 (BK/BU)<br/>31S-LB25A (BK/BU)<br/>31S-LB25B (BK/BU)</p><p>(5)</p><p>(6)</p></div></div></div> |
| <div><p>before model year 2009</p><p>F02548</p></div> <div><p>N155<br/>Liftgate/luggage compartment lid release switch</p></div>                                                                           |  | <div><p>as of model year 2009</p><p>F02102</p></div> <div><p><b>C799</b><br/><b>14014</b></p><div><p>(1) 31S-AA30 (BK/YE)<br/>31S-AA30A (BK/YE)</p><p>(2) 31-AA30 (BK)<br/>31-AA30A (BK)<br/>31-AA30 (BK) +<br/>31-AA30A (BK)</p></div></div>                    |
| <div><p><b>C800</b><br/><b>67070</b></p><p>F02622</p></div> <div><p>B80<br/>Transmission speed sensor</p><div><p>(A) 9-TA27B (BN/WH)</p><p>(B) 8-TA27B (WH/VT)</p></div></div>                            |  | <div><p><b>C802</b><br/><b>67020</b></p><p>F02628</p></div> <div><p>Y111<br/>Fuel injector 4</p><div><p>(A) 31S-RL13 (BK/OG)</p><p>(B) 15-RL13 (GN/RD)</p></div></div>                                                                                          |
| <div><p>F06314</p></div> <div><p><b>C801</b></p><div><p>(1) 9-CE8A (BN/BU)</p><p>(2) 8-CE8B (WH/BU)</p><p>(3) 10-CE8A (GY/VT)</p><p>(4) 7-CE8A (YE/BU)</p><p>(5) 8-CE8A (WH/BU)</p><p>(6)</p></div></div> |  | <div><p><b>C804</b><br/><b>67020</b></p><p>F02628</p></div> <div><p>Y108<br/>Fuel injector 1</p><div><p>(A) 31S-RL10 (BK/WH)</p><p>(B) 15-RL10 (GN/WH)</p></div></div>                                                                                          |

**C805****67020**

F02628

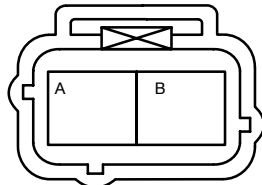


Y109  
Fuel injector 2

- (A) 31S-RL11 (BK/YE)  
(B) 15-RL11 (GN/YE)

**C806****67020**

F02628

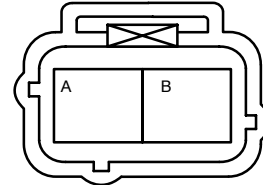


Y110  
Fuel injector 3

- (A) 31S-RL12 (BK/BU)  
(B) 15-RL12 (GN/BU)

**C807****14A584**

before model year 2009

F10096

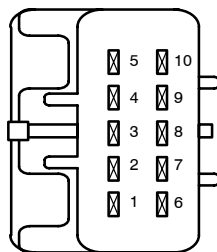


- (1) 33-AD8 (YE/BU)  
33-AD8A (YE/BU)  
33-AD8C (YE/BU)  
34-AD7A (BU/RD)  
34-AD7B (BU/RD)
- (2) 32-AD6 (WH)  
32-AD6A (WH)  
32-AD6C (WH)  
33-AD8A (YE/BU)  
33-AD8B (YE/BU)

- (3) 34-AD7 (BU/RD)  
34-AD7A (BU/RD)  
32-AD6A (WH)  
32-AD6B (WH)
- (4) 15S-HB35A (GN/BK)  
15S-HB35B (GN/BK)  
32-AD27 (WH/GN)
- (5) 31-HB35A (BK)  
31-HB35B (BK)  
31-LG13 (BK)

as of model year 2009


F08305

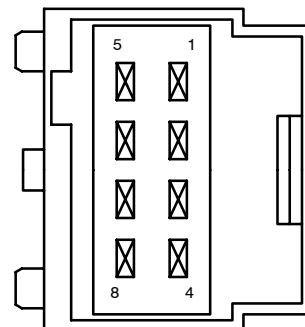

- (6) 31-LG13 (BK)  
31-HB35A (BK)
- (7) 49S-LG13 (BU/RD)  
49S-LG13A (BU/RD)  
49S-LG13B (BU/RD)
- (8) 29S-LC41 (OG/WH)  
32-AD27 (WH/GN)
- (9) 33-AD27 (YE)
- (10)

A355  
Exterior mirror, driver side

**C809** (BK)  
14401

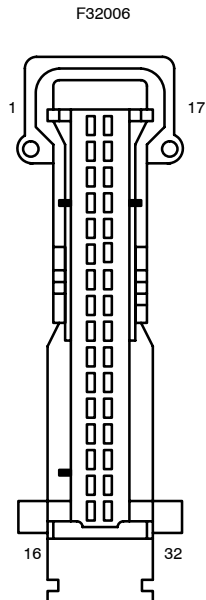


- |                       |                      |                       |
|-----------------------|----------------------|-----------------------|
| (1) 15S-LD13 (GN/OG)  | (13) 9-RJ30 (BN)     | (23) 4-EC10 (GY)      |
| (2) 91S-GE56A (BK/YE) | (14) 8-RJ30 (WH)     | 4-EC10A (GY)          |
| (3) 8-GL37 (WH/GN)    | (15) 75-GG14 (YE/BU) | (24)                  |
| (4) 15-GG14 (GN/RD)   | 75-GG14C (YE/BU)     | (25) 31S-TA32 (BK/WH) |
| (5) 10-GL37 (GY/OG)   | (16) 15S-LD7 (GN/BU) | (26)                  |
| (6) 91-GG14 (BK/OG)   | (17) 5-EC7H (BU/RD)  | (27) 91S-GG9 (BK/RD)  |
| (7) 9-GA7 (BN/RD)     | (18) 4-EC7H (GY/RD)  | (28)                  |
| (8) 8-GA7 (WH/RD)     | (19)                 | (29) 91S-PG6 (BK/YE)  |
| (9) 29S-GG14 (OG)     | (20)                 | (30) 91S-GE56 (BK/YE) |
| (10) 91S-BB6 (BK/YE)  | (21)                 | (31) 7-RJ30 (YE)      |
| (11)                  | (22) 5-EC10 (BU)     | (32) 29-GG14 (OG)     |
| (12)                  | 5-EC10A (BU)         |                       |



**C816****14014**

 F02058




- (1) 8-CF34B (WH)  
(2) 9-CF34B (BN)

B17  
Wheel speed sensor,  
LH side rear

**C819****67020**

 F02634




- (A) 15S-FA6A (GN/YE)  
(B) 31-FA6 (BK)

Y16  
A/C Compressor  
clutch

**C817****14014**

 F02058




B16  
Wheel speed sensor,  
RH side rear


- (1) 8-CF40B (WH)  
(2) 9-CF40B (BN)

**C818****67020**

F06294

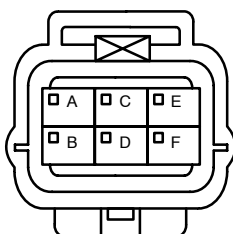**67070**


F06298

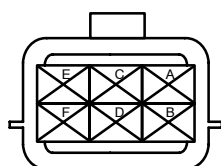

- (A)  
(B)  
(C)  
(D) 15S-FA6A (GN/YE)  
(E) 31-FA6 (BK)  
(F) 15-RR4 (GN/BU)

**C820** (GY)**14014**

F02518

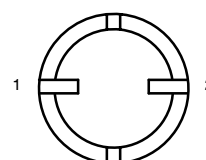

- (1) 31S-LB25A (BK/BU)  
31S-LB25B (BK/BU)  
(2) 29-LB25 (OG/BU)

E57  
Luggage compartment  
lamp


C821

14K138

as of model year 2009


before model year 2009

F08305

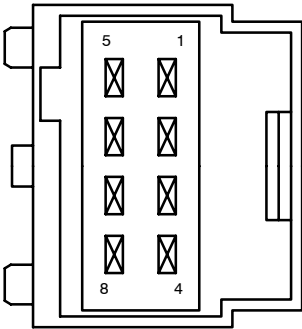

- (1) 33-AD10 (YE/BK)  
33-AD11 (YE/VT)  
34-AD10 (BU/YE)  
34-AD10B (BU/YE)
- (2) 32-AD9 (WH/GN)  
32-AD10 (WH/BK)  
33-AD10A (WH/BK)  
33-AD11 (YE/VT)

- (3) 32-AD9 (WH/GN)  
32-AD10A (BU/YE)  
34-AD10 (BU/YE)
- (4) 15S-HB36A (GN/OG)  
15S-HB36B (GN/OG)  
32-AD26 (WH/GN)
- (5) 31-HB36A (BK)  
31-HB36B (BK)

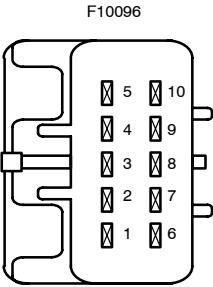


- (6) 31-LG20 (BK)  
31-HB36A (BK)  
31-HB36B (BK)
- (7) 49S-LG20 (BU/WH)  
49S-LG20A (BU/WH)  
49S-LG20B (BU/WH)
- (8) 29S-LC43 (OG/WH)  
32-AD28 (WH/GN)
- (9) 33-AD28 (YE/GN)
- (10)

A356  
Exterior mirror,  
passenger side

C823

12A690

F02070

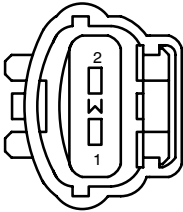


- (1)
- (2)

B110  
Output Shaft  
Speed (OSS) sen-  
sor

C825

14014

F04272

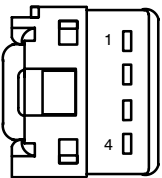


- (1)
- (2) 91S-BB6 (BK/YE)
- (3) 91-BB6 (BK/YE)
- (4)

C824

14014

F02588

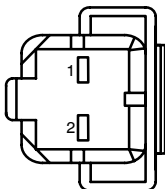


N82  
Brake pedal posi-  
tion switch

- (1) 91S-PG6B (BK/YE)
- (2) 91-PG6 (BK/YE)

N81  
Clutch pedal posi-  
tion switch

**C826****14014**

F06126

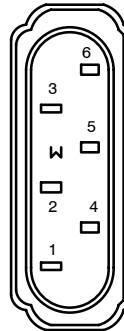

- (1) 5-EC12 (BU/RD)
- (2) 4-EC12 (GY/RD)
- (3) 7-CF67 (YE/RD)
- (4)
- (5) 9-CF67 (BN/RD)
- (6)

B174  
Yaw rate sensor

**C827**


- (1) 91S-LG45A (BK/GN)
- (2)
- (3)
- (4)
- (5)
- (6) 30-TA36 (RD)
- (7)

- (8) 91S-TA36A (BK/GN)
- (9)
- (10)
- (11) 15S-TA36A (GN/BK)
- (12)
- (13)
- (14) 31S-TA36 (BK/GN)
- 31S-TA36A (BK/GN)

- (15)
- (16) 10-PF36B (GY/OG)
- (17)
- (18)
- (19) 91-TA36B (BK/GN)
- (20) 8-PF36B (WH/GN)

**C828****14K733**


F02602

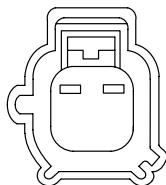

- (1) 33-KA34 (YE/BK)
- (2) 32-KA34 (WH/BK)

M74  
Two-way washer  
pump motor

C830  
14K733

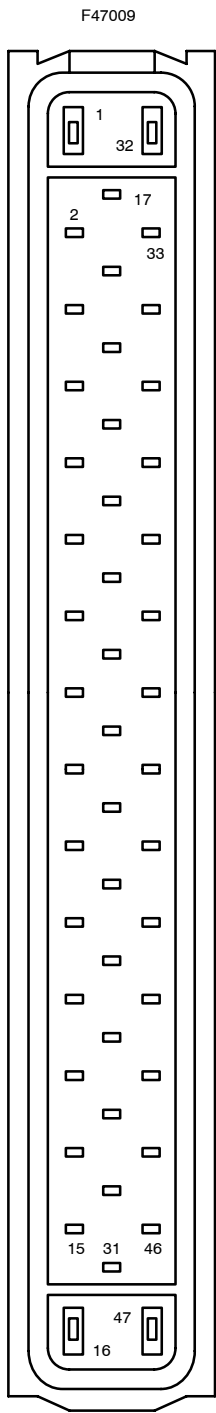


- |                      |                     |                       |
|----------------------|---------------------|-----------------------|
| (1) 30-CF13A (RD)    | (17)                | (33) 9-CF38A (BN/RD)  |
| (2)                  | (18)                | (34) 8-CF38A (WH/RD)  |
| (3) 8-CE8 (WH/BU)    | (19)                | (35)                  |
| (4) 15-CF6A (GN/YE)  | (20)                | (36) 8-CF34A (WH/BU)  |
| (5) 9-CF1 (BN/RD)    | (21)                | (37) 9-CF34A (BN/BU)  |
| (6) 10-CE8 (GY/VT)   | (22)                | (38) 91S-CF54 (BK/WH) |
| (7) 7-CF1 (YE/RD)    | (23)                | (39)                  |
| (8) 31S-CF54 (BK/WH) | (24)                | (40)                  |
| (9)                  | (25) 5-EC12 (BU/RD) | (41)                  |
| (10)                 | (26)                | (42) 9-CF40A (BN/GN)  |
| (11) 4-EC7K (GY/RD)  | (27)                | (43) 8-CF40A (WH/GN)  |
| (12)                 | (28)                | (44)                  |
| (13)                 | (29) 4-EC12 (GY/RD) | (45) 8-CF32A (WH)     |
| (14)                 | (30)                | (46) 9-CF32A (BN)     |
| (15) 5-EC7K (BU/RD)  | (31)                | (47) 31-CF13A (BK)    |
| (16) 31-CF6 (BK)     | (32) 30-CF6A (RD)   |                       |

A176  
Electronic Stability  
Program (ESP)  
module

**C831****14K733**

F26036

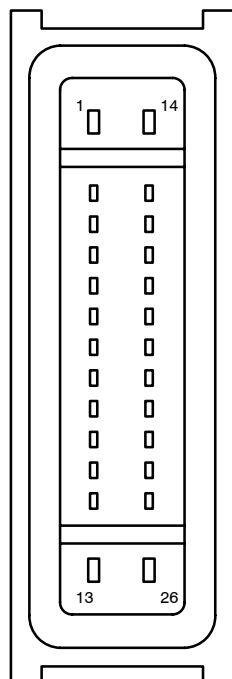


- |                     |                     |
|---------------------|---------------------|
| (1) 30-CF6 (RD)     | (14) 30-CF13 (RD)   |
| (2) 9-CF34 (BN/BU)  | (15)                |
| (3) 8-CF34 (WH/BU)  | (16)                |
| (4)                 | (17)                |
| (5) 8-CF38 (WH/RD)  | (18)                |
| (6) 9-CF38 (BN/RD)  | (19)                |
| (7)                 | (20) 15-CF6 (GN/YE) |
| (8) 9-CF32 (BN)     | (21) 5-EC7F (BU/RD) |
| (9) 8-CF32 (WH)     | (22)                |
| (10)                | (23) 4-EC7F (GY/RD) |
| (11) 8-CF40 (WH/GN) | (24)                |
| (12) 9-CF40 (BN/GN) | (25)                |
| (13)                | (26) 31-CF13 (BK)   |

A7  
ABS module

**C833****12A690**

F06272

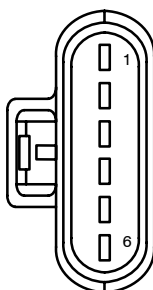


- |                     |
|---------------------|
| (1) 9-RL7 (BN/GN)   |
| 9-RL7A (BN/GN)      |
| (2)                 |
| (3) 91S-RL7 (BK/GN) |
| (4) 15S-RL7 (GN/BK) |
| 15S-RL7A (GN/BK)    |
| (5) 7-RL7 (YE/GN)   |
| 7-RL7A (YE/GN)      |
| (6) 8-RL7 (WH/GN)   |

Y2  
Exhaust Gas Re-  
circulation (EGR)  
valve

**C836****14K733**

F10080

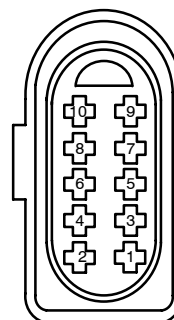


- |                      |                     |
|----------------------|---------------------|
| (1) 15S-LE15 (GN/BK) | (6) 31-LE31 (BK)    |
| (2) 15S-LE16 (GN/OG) | (7) 9-LE45 (BN)     |
| (3) 49S-LG11 (BU/OG) | (8)                 |
| (4) 29S-LF7 (OG/BU)  | (9) 8-LE56 (WH/BU)  |
| 29S-LF9 (OG/BU)      | (10) 9-LE56 (BN/BU) |
| (5) 8-LE45 (WH)      |                     |

E1  
Headlamp, LH  
side

**C837**

**14K733**

F10080

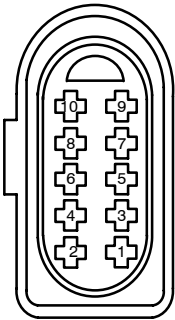


- |                      |                     |
|----------------------|---------------------|
| (1) 15S-LE22 (GN/OG) | (6) 31-LE30 (BK)    |
| (2) 15S-LE23 (GN/WH) | (7) 9-LE46 (BN/RD)  |
| (3) 49S-LG18 (BU)    | (8)                 |
| (4) 29S-LF16 (OG/GN) | (9) 8-LE57 (WH/GN)  |
| (5) 8-LE46 (WH/RD)   | (10) 9-LE57 (BN/GN) |

E7  
Headlamp, RH  
side

**C838**

**14401**


F26026

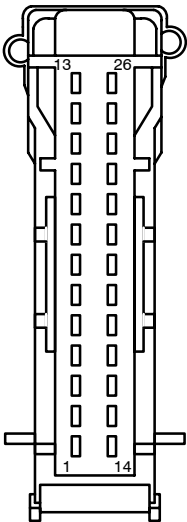

- |                    |                      |                      |
|--------------------|----------------------|----------------------|
| (1) 8-CE8A (WH/BU) | (10)                 | (19) 9-LE45 (BN)     |
| (2) 4-EC7N (GY/RD) | (11)                 | (20) 9-LE57 (BN/GN)  |
| (3) 5-EC7N (BU/RD) | (12)                 | (21) 9-LE46 (BN/RD)  |
| (4)                | (13)                 | (22) 8-LE57 (WH/GN)  |
| (5) 7-LE57 (YE/GN) | (14) 8-LE46B (WH/RD) | (23) 15-LE58 (GN/OG) |
| (6)                | (15) 8-LE46 (WH/RD)  | (24) 91-LE58 (BK/RD) |
| (7)                | (16) 8-LE56 (WH/BU)  | (25)                 |
| (8)                | (17) 8-LE45 (WH)     | (26)                 |
| (9) 7-LE56 (YE/BU) | (18) 9-LE56 (BN/BU)  |                      |

**C841** (GY)

F02019

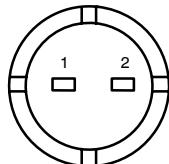


E61  
Footwell lamp, LH  
front

- (1) 29-LC11 (OG/WH)  
(2) 31S-LC11 (BK/WH)

**C845** (BK)

F03182

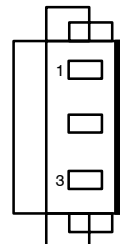


E31  
Vanity mirror lamp,  
RH side

- (1) 91-LB23 (BK/WH)  
(2) 29-LB23 (OG/WH)  
(3) 29-LB23 (OG/WH)

**C842**  
**14K733**

 
F02566



- (1) 31-LE56 (BK)  
(2) 7-LE56 (YE/BU)

**C846**  
**14401**

F02588

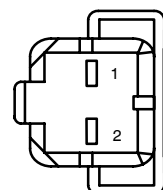


- (1) 29-LB8 (OG)  
(2) 31-LB8 (BK)

E28  
Glove compart-  
ment lamp

**C843**  
**14K733**

 
F02566



- (1) 31-LE57 (BK)  
(2) 7-LE57 (YE/GN)

**C848**  
**14K733**

F04190

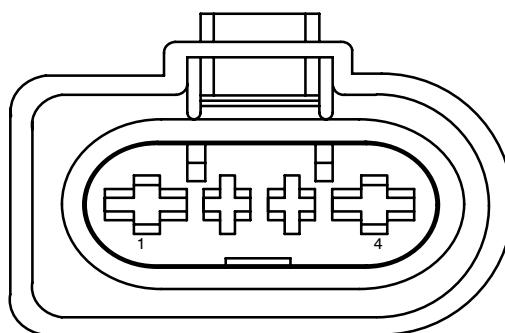


- (1) 32-KA11 (WH/BK)  
(2) 32-KA10 (WH/GN)  
(3) 31S-KA9 (BK/OG)  
(4) 31-KA9B (BK)

M111  
Windshield wiper  
motor









**C844** (BK)

F03182

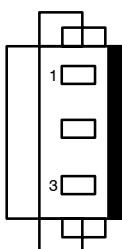

E30  
Vanity mirror lamp,  
LH side


- (1) 91-LB16 (BK/RD)  
(2) 29-LB16 (OG/GN)  
(3) 29-LB16 (OG/GN)
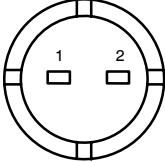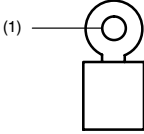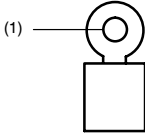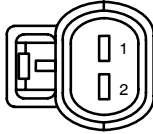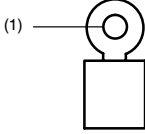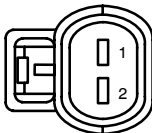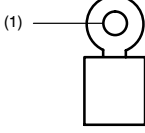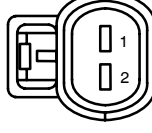
|                                                                                                                                                                                                                                                              |                                                                                                                                                                                                                                                                                                                 |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><div>C849 (GY)</div><div>F02019</div><div></div><div><div>E62<br/>Footwell lamp, RH<br/>front</div><div>(1) 29-LC23 (OG/WH)<br/>(2) 31S-LC23 (BK/WH)</div></div></div> | <div><div>C857</div><div>F01002</div><div></div><div><div>P16<br/>Glow plug 1</div><div>(1) 15S-RD15D (GN/OG)</div></div></div>                                                                                               |
| <div><div>C854</div><div>F01002</div><div></div><div><div>P19<br/>Glow plug 4</div><div>(1) 15S-RD15A (GN/OG)</div></div></div>                                             | <div><div>C858</div><div>12A690</div><div>F02570</div><div></div><div><div>Y165<br/>Fuel metering<br/>valve</div><div>(1) 15S-RL50 (GN/BU)<br/>(2) 91S-RL50 (BK/BU)</div></div></div>                                         |
| <div><div>C855</div><div>F01002</div><div></div><div><div>P18<br/>Glow plug 3</div><div>(1) 15S-RD15B (GN/OG)</div></div></div>                                           | <div><div>C859</div><div>12A690</div><div>F02570</div><div></div><div><div>Y47<br/>Fuel pressure so-<br/>lenoid valve</div><div>(1) 15S-RL42 (GN/BU)<br/>(2) 91S-RL42 (BK/BU)<br/>91S-RL42A (BK/BU)</div></div></div>       |
| <div><div>C856</div><div>F01002</div><div></div><div><div>P17<br/>Glow plug 2</div><div>(1) 15S-RD15C (GN/OG)</div></div></div>                                           | <div><div>C860</div><div>12A690</div><div>F02570</div><div></div><div><div>M252<br/>EGR throttle actuator</div><div>(1) 15S-RJ37 (GN/BK)<br/>(2) 15-RJ37 (GN/BK)<br/>15-RJ37A (GN/BK)<br/>91-RE8L (BK/YE)</div></div></div> |



**C864**

F02572

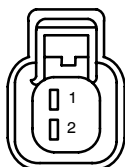


- (1) 15S-LG9 (GN/BK)
- (2) 15-LG28 (GN/WH)

N394  
Reversing lamp  
switch

**C870**

F03312

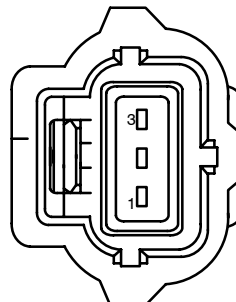


- (1) 4-EB6 (GY)  
4-EB6A (GY)
- (2) 5-EB6 (BU)  
5-EB6A (BU)
- (3) 30-BA10 (RD)

O5  
Generator

**C865****67070**

F02620

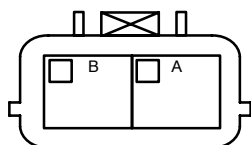

N152  
Neutral position  
switch


- (A) 91-TA39 (BK/OG)
- (B) 91S-TA39 (BK/OG)

**C866**

(BK)

**67070**

F02622

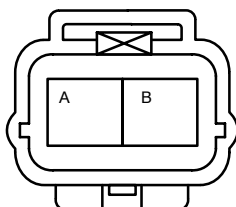


N394  
Reversing lamp  
switch

- (A) 15S-LG9A (GN/BK)
- (B) 15-LG28A (GN/WH)

**C871****14A280**

 F01014



O5  
Generator

- (1) 30-BA6 (RD)  
30-BA6A (RD)

**C867****12A690**

F02590




- (1) 15S-LG9A (GN/BK)
- (2) 15-LG28A (GN/WH)

N394  
Reversing lamp  
switch

**C882**

F04170

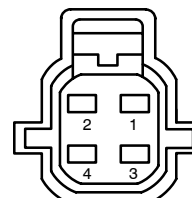


N126  
A/C high-pressure  
switch

- (1) 91-FA38 (BK/OG)
- (2) 91S-PA13 (BK/BU)
- (3) 91-PA13 (BK/BU)
- (4) 91S-FA17 (BK/RD)

C890

 F02009



(1) 31S-LB12 (BK/YE) +  
31S-LC17 (BK/YE)

 
(2) 91-LC7 (BK/BU)  
91-LC7A (BK/BU)

E18

Interior lamp, front

C891

F02009



(1) 31S-LC17 (BK/YE)

(2) 91-LC17 (BK/YE)

 
E19

Interior lamp, rear

C892

14335

F01005



(1) 29-LC17 (OG/YE)

 
E19

Interior lamp, rear

C893

14335

F01005



(1) 29-LC7A (OG/BU)  
29-LC7B (OG/BU)


E18

Interior lamp, front

C895 (BK)

12A690

F04217

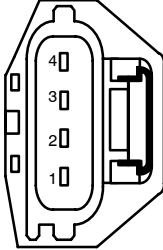

(1) 8-RJ40 (WH/GN)

(2) 7-RJ40 (YE/GN)

(3) 8-RJ17 (WH/VT)

(4) 9-RJ40 (BN/GN)


B142

Temperature  
manifold absolute  
pressure sensor

C896 (BK)

14401

F09024

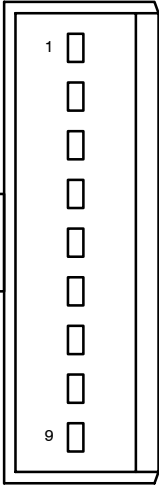

(1) 15S-JA8 (GN/RD)

(2) 91S-JA8 (BK/OG)

(3)

(4) 9-PG13 (BN)

(5) 8-PG13 (WH)

(6) 91S-GJ7 (BK/BU)





 
(7) 91-PG30 (BK/WH)

(8)

(9)

P13


Clock spring
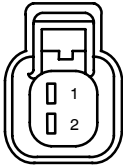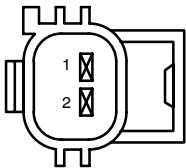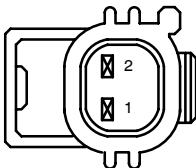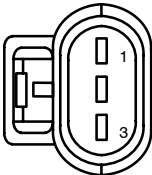
|                                                                                                                                                                                                                                                                                                              |                                                                                                                                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>C897</b><br/><b>14K733</b><br/>F02572</p>  <p>N21<br/>Engine compartment switch</p> <p>(1) 91-GL7 (BK)<br/>(2) 31S-GL7 (BK/YE)</p>                                                                                    | <p><b>C900</b></p> <p>67020                      67070</p> <p>(A) 7-FA88 (YE/VT)<br/>7-FA88A (YE/VT)<br/>(B) 9-FA88 (BN/WH)<br/>9-FA88A (BN/WH)</p>                                                                    |
| <p>before model year 2009</p> <p>F02066</p>  <p>B105<br/>Knock sensor 1</p>                                                                                                                                                 | <p><b>C903</b><br/><b>12A690</b></p> <p>(1) 9-RJ18 (BN/YE)<br/>(2) 8-RJ18 (WH/BK)</p> <p>as of model year 2009</p> <p>F02064</p>    |
| <p><b>C906</b><br/><b>12A690</b></p> <p>F03308</p>  <p>B41<br/>Camshaft position sensor</p> <p>(1) 7-RJ3 (YE/VT)<br/>7-RJ3A (YE/VT)<br/>(2) 8-RJ3 (WH/VT)<br/>8-RJ3A (WH/VT)<br/>(3) 9-RJ3 (BN/WH)<br/>9-RJ3A (BN/WH)</p> |                                                                                                                                                                                                                        |
| <p><b>C911</b><br/><b>14401</b><br/>F01005</p>  <p>(1) 29S-LK15 (OG)</p> <p>R42<br/>Cigar lighter, front</p>                                                                                                              | <p><b>C912</b><br/><b>14401</b><br/>F02009</p>  <p>(1) 31-HA6 (BK)<br/>(2) 29-HA6 (OG/YE)</p> <p>R42<br/>Cigar lighter, front</p> |



**C924****12A690**

F06110

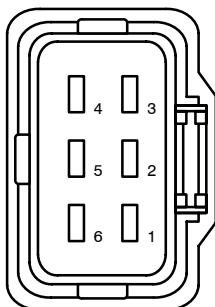


- |                      |                      |
|----------------------|----------------------|
| (1) 91S-PA51 (BK/OG) | (4) 91S-PA53 (BK/RD) |
| (2) 15-PA51 (GN/RD)  | (5) 15-PA52 (GN/BK)  |
| (3) 91S-PA52 (BK/GN) | (6) 91S-PA54 (BK/WH) |

M251  
EGR stepper  
motor

**C926** (BK)**12A690**

F03308

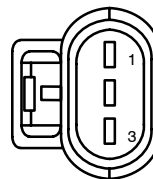


- |                   |
|-------------------|
| (1) 9-RJ4 (BN/RD) |
| 9-RJ4A (BN/RD)    |
| (2) 8-RJ4 (WH/RD) |
| 8-RJ4A (WH/RD)    |
| (3) 7-RJ4 (YE/RD) |
| 7-RJ4A (YE/RD)    |

B43  
Crankshaft posi-  
tion sensor

**C925****12A690**

 F02586




- |                     |
|---------------------|
| (1) 31S-RL2 (BK/OG) |
| (2) 15-RL2 (GN/RD)  |

Y1  
Evaporative  
emission canister  
purge valve

**C928****12A690**

F02070

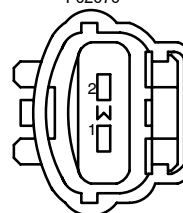


- |                    |
|--------------------|
| (1) 8-TA27 (WH/VT) |
| 8-TA27A (WH/VT)    |
| (2) 9-TA27 (BN/WH) |
| 9-TA27A (BN/WH)    |

B44  
Turbine Shaft  
Speed (TSS) sen-  
sor

**C930****14401**

 
F01005



- |                      |
|----------------------|
| (1) 31S-GE44 (BK/RD) |
|----------------------|

N63  
Parking brake  
switch

**C933** (GY)

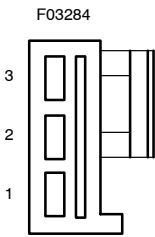


- (1) 91S-RP3 (BK/RD)
- (2) 91S-RH5 (BK/BU)
- (3)

N316  
Inertia Fuel Shut-  
off (IFS) switch

**C937**

**14A584**

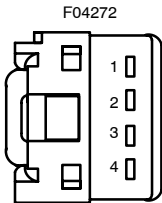


- (1) 8-MD28 (WH)
- (2) 8-MD28A (WH)
- (3) 10-MD28A (GY)
- (4) 10-MD28 (GY)

Y101  
Speaker 1, LH front

Y103  
Speaker 1, RH  
front

**C934** (BU)

**12A690**

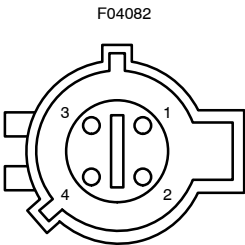


- (1) 15-RJ14 (GN/YE)
- (2) 91S-RJ26 (BK/GN)
- (3) 9-RJ15 (BN/RD)
- (4) 8-RJ26 (WH/GN)

B192  
Catalyst monitor  
sensor

**C938**


**14K138**

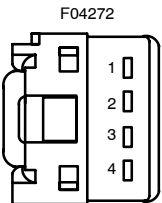

- (1) 8-MD28 (WH)
- (2) 8-MD28A (WH)
- (3) 10-MD28A (GY)
- (4) 10-MD28 (GY)


Y103  
Speaker 1, RH  
front

Y101  
Speaker 1, LH front

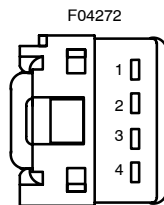**C939****14240**

- (1) 8-MD29 (WH/VT)
- (2) 8-MD29A (WH/VT)
- (3) 10-MD29A (GY/WH)
- (4) 10-MD29 (GY/WH)


Y70  
Speaker 1, LH  
rear door

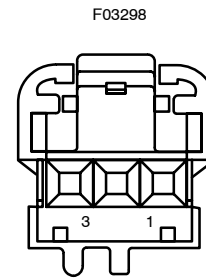**C941****14A584**

- (1) 8-MD28A (WH)
- (2)
- (3) 10-MD28A (GY)


Y102  
Speaker 2, LH front

Y104  
Speaker 2, RH front

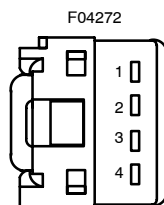**C940****14240**

- (1) 8-MD29B (WH/VT)
- (2) 8-MD29C (WH/VT)
- (3) 10-MD29C (GY/WH)
- (4) 10-MD29B (GY/WH)

Y72  
Speaker 1, RH  
rear door

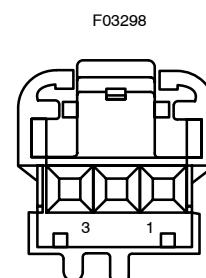**C943****14K138**

- (1) 8-MD28A (WH)
- (2)
- (3) 10-MD28A (GY)

Y104  
Speaker 2, RH front


Y102  
Speaker 2, LH front





**C960**

F04272

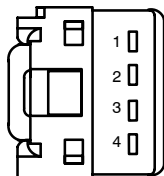

- (1) 15-GN26 (GN/YE)
- (2) 15-GN25 (GN/WH)
- (3) 10-GN25 (GY/WH)
- (4) 10-GN26 (GY)

H9  
Buzzer

**C974****14K733**

F02005




B73  
Outside air tem-  
perature sensor

- (1) 9-GE38 (BN/YE)
- (2) 8-GE38 (WH/BK)

**C978****12A690**

F01016

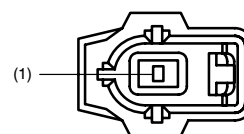


- (1) 31S-GC20 (BK/OG)

N17  
Oil pressure  
switch

**C965****14K733**

F04195

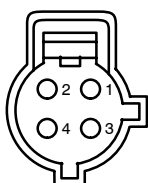


B308  
A/C pressure sen-  
sor

- (1) 9-FA88 (BN/WH)
- (2) 7-FA88 (YE/VT)
- (3) 8-FA88 (WH/VT)

**C983****12A690**


F02570

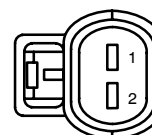

- (1) 15S-RJ48 (GN/BK)
- (2) 91S-RJ48 (BK/GN)

**C971** (GY)**17N400**

F03196

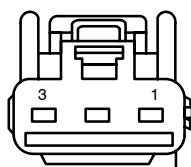


M9  
Rear window  
wiper motor

- (1) 29-KA28 (OG/BU)
- (2) 32-KA28 (WH/RD)
- (3) 31-KA28 (BK)

**C984****12A690**

F03130

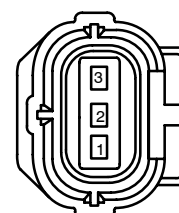


B196  
Turbo geometry  
position sensor

- (1) 9-RL22 (BN/YE)
- 9-RL22A (BN/YE)
- (2) 7-RL22 (YE/BK)
- 7-RL22A (YE/BK)
- (3) 8-RL22 (WH/BK)
- 8-RL22A (WH/BK)



**C1003****14K733**

F05064

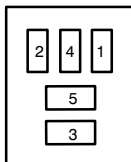


- (1) 15-LG45 (GN/BK)
- (2) 91S-LG45 (BK/GN)
- (3) 15-LG46 (GN/OG)
- (4)
- (5) 15-LG9 (GN/BK)

K273  
Reversing lamps  
relay

**C1010****14K733**

F05051

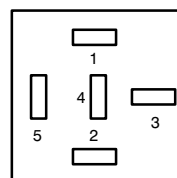


- (1) 30-FA23 (RD)
- (2) 31S-FA23 (BK/BU)
- (3) 30-FA24 (RD) +  
30-FA23 (RD)
- (4)
- (5) 15-FA18 (GN/OG)

K14  
Blower motor  
relay

**C1005****14K733**

F05064

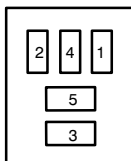


- (1) 15-PE16 (GN/WH)
- (2) 31-PE16 (BK)
- (3) 30-PE17 (RD)
- (4)
- (5) 15S-PE8 (GN/RD)

K69  
Fuel heater relay

**C1011****14K733**

F05064

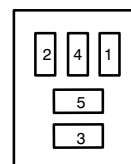


- (1) 15-FA11 (GN/YE)
- (2) 31S-FA11 (BK/YE)
- (3) 30-FA2 (RD)
- (4)
- (5) 15S-FA6 (GN/YE)

K32  
A/C Wide Open  
Throttle (WOT)  
relay

**C1008****14K733**

F05090

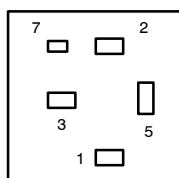

- (1) 15S-BB7 (GN/BU)
- (2) 31S-BB7 (BK/BU)
- (3) 30-BB8 (RD)
- (4)
- (5) 15-DA3 (GN/RD)


K41  
Ignition relay

**C1012**

- (1) 15-RD15A (GN/OG)
- (2) 91S-RD15 (BK/RD)
- (3) 30-RD15 (RD)
- (4)
- (5) 15S-RD15E (GN/OG)

**C1009****14K733**


F05064

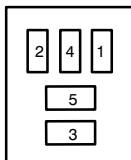

- (1)
- (2)
- (3)
- (4) 31-KA21B (BK)
- (5)

**C1013****14K733**

F05051

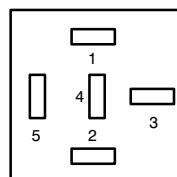


- (1) 50-BB16 (GY/BK)  
50-BB16A (GY/BK)  
50-BB16C (GY/BK)
- (2) 31S-BB16 (BK/RD)
- (3) 30-BB17 (RD)
- (4)
- (5) 50-BB12 (GY)

K22  
Starter relay

**C1014**

**14K733**

F05051

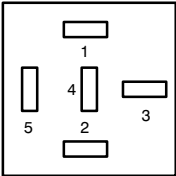


- (1) 30-RH9 (RD)
- (2) 91S-RH9 (BK/BU)  
91S-RH9A (BK/BU)
- (3) 30-RH10 (RD) +  
30-RH9 (RD)
- (4)
- (5) 30S

K13  
Power hold relay

**C1017**

F05051

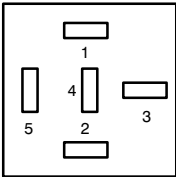


- (1) 15
- (2) 91S
- (3) 30
- (4)
- (5) 15S

K1  
Heated rear win-  
dow relay

**C1019**

F05064

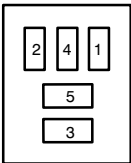

- (1) 15
- (2) 91S
- (3) 30
- (4)
- (5) 15S

K4  
Fuel pump relay