




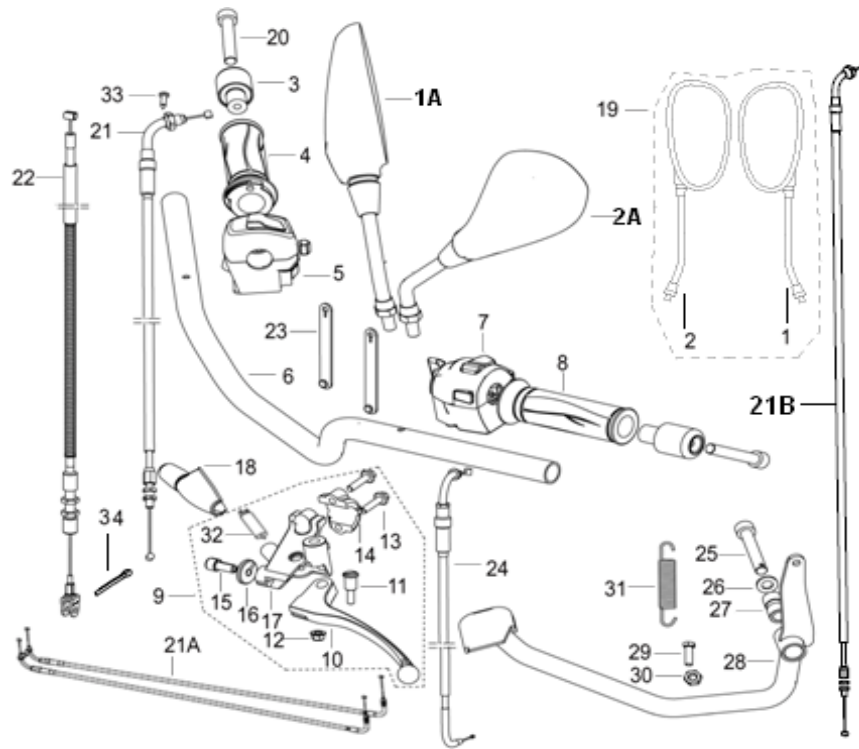


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F01-1A	40480J300006	MIRROR ASSY.,RR VIEW,R.	1
RKV 125-200S-AERO 200	F01-2A	40450J300003	MIRROR ASSY.,RR VIEW,L.	1
RKV 125-200S-AERO 200	F01-3	40031J000022	BALANCER ASSY.	2
RKV 200S	F01-4	40210M030000	GRIP ASSY.,HANDLE,R.	1
RKV 200S-AERO 200	F01-4	40210J670000	GRIP ASSY.,HANDLE,R.	1
RKV 200S	F01-5	40600M030000	SWITCH ASSY.,R.	1
RKV 200S	F01-5	40600K670001	SWITCH ASSY., R.headlghts lit	1
RKV 200S-AERO 200	F01-5	40600K670000	SWITCH ASSY.,R.	1
RKV 125-200S-AERO 200	F01-6	40100K670021	HANDLE BAR ASSY	1
RKV 125-200S-AERO 200	F01-7	40500K670000	SWITCH ASSY., L.	1
RKV 200S-AERO 200	F01-8	40001J670000	GRIP ASSY.,L.	1
RKV 125-RKV 200S-AERO 200	F01-9	40080K740001	LEVER ASSY., L.mark:2	1
RKV 125-RKV 200S-AERO 200	F01-10	40002K740000	LEVER., L.mark:2	1
RKV 125-200S-AERO 200	F01-11	40083K010000	MOUNTING BOLT,HANDLE	1
RKV 125-200S-AERO 200	F01-12	B04170600064	NUT M6	1
RKV 125-200S-AERO 200	F01-13	B01400602365	BOLT M6×23	2
RKV 125-200S-AERO 200	F01-14	45023K010000	COVER,FIX	1
RKV 125-200S-AERO 200	F01-15	45083K010000	SCREW,ADJUSTING	1
RKV 125-200S-AERO 200	F01-16	55064K010000	NUT,ADJUSTING	1
RKV 125-RKV 200S-AERO 200	F01-17	40085K740001	MIRROR SEAT,RR. VIEW,L,mark:2	1
RKV 125-200S-AERO 200	F01-18	40017J130000	JACKET, CABLE	1
RKV 125-200S-AERO 200	F01-20	B02050603565	SCREW M6×35	2
RKV 200S	F01-21A	40300M030001	CABLE ASSY.,THROTTLE	1
RKV 200S-AERO 200	F01-21B	40300J830000	CABLE ASSY.,THROTTLE	1
RKV 200S-AERO 200	F01-22	40400M030000	CABLE ASSY.,CLUTCH	1

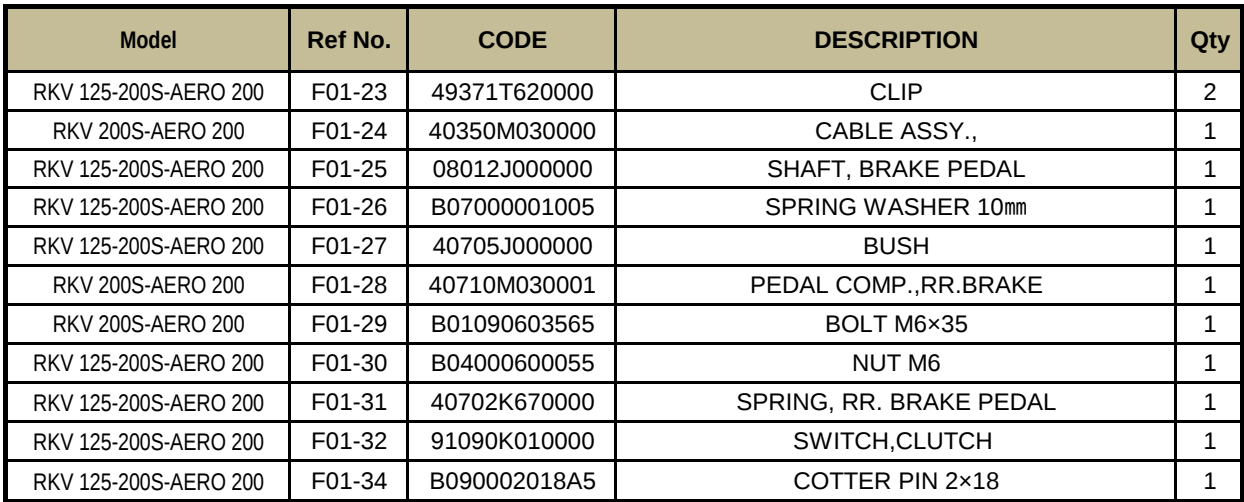


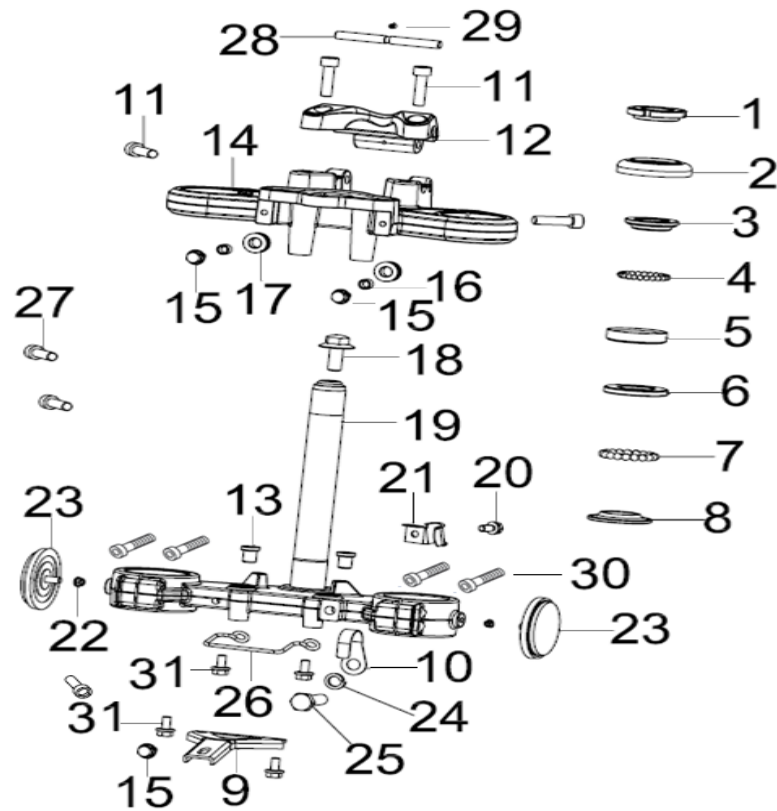


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F02-1	43008G130010	NUT	1
RKV 125-200S-AERO 200	F02-2	43005G130000	DUST COVER	1
RKV 125-200S-AERO 200	F02-3	43001G130000	RACE, UPPER BEARING, UPPER	1
RKV 125-200S-AERO 200	F02-4	B06010140000	STEEL BALL, 3/16"	23
RKV 125-200S-AERO 200	F02-5	43002G130000	RACE, UPPER BEARING, LOWER	1
RKV 125-200S-AERO 200	F02-6	43003N040000	RACE, UPPER, BOTTOM BEARING	1
RKV 125-200S-AERO 200	F02-7	B06010200000	STEEL SHOT 1/4"	19
RKV 125-200S-AERO 200	F02-8	43004J000000	RACE, LOWER, BOTTOM BEARING	1
RKV 125-200S-AERO 200	F02-9	08345K690000	BRACKET, LOWER	1
RKV 125-200S-AERO 200	F02-10	43057J000070	CLIP	1
RKV 125-200S-AERO 200	F02-11	08003K670000	BOLT 8X30	4
RKV 125-200S-AERO 200	F02-12	43014J800001	SEAT, HANDLERBAR, UPPER	1
RKV 125-200S-AERO 200	F02-13	08333J040000	SUPPORT UNDER THE RUBBER PAD	2
RKV 125-200S-AERO 200	F02-14	43011J800020	UPPER BRACKET ASSY,	1
RKV 125-200S-AERO 200	F02-15	B01090601665	BOLT M6×16	3
RKV 125-200S-AERO 200	F02-16	08061K670000	CUSHION, BUFFER	2
RKV 125-200S-AERO 200	F02-17	47028G220000	BUFFER RUBBER	2
RKV 125-200S-AERO 200	F02-18	43049J050051	BOLT, LOCKING, COLUMN M10×1.25×33	1
RKV 125-200S-AERO 200	F02-19	43100J800000	UNDER BRACKET COMP.	1
RKV 125-200S-AERO 200	F02-20	B13110601205	SCREW W/WASHER M6×12	1

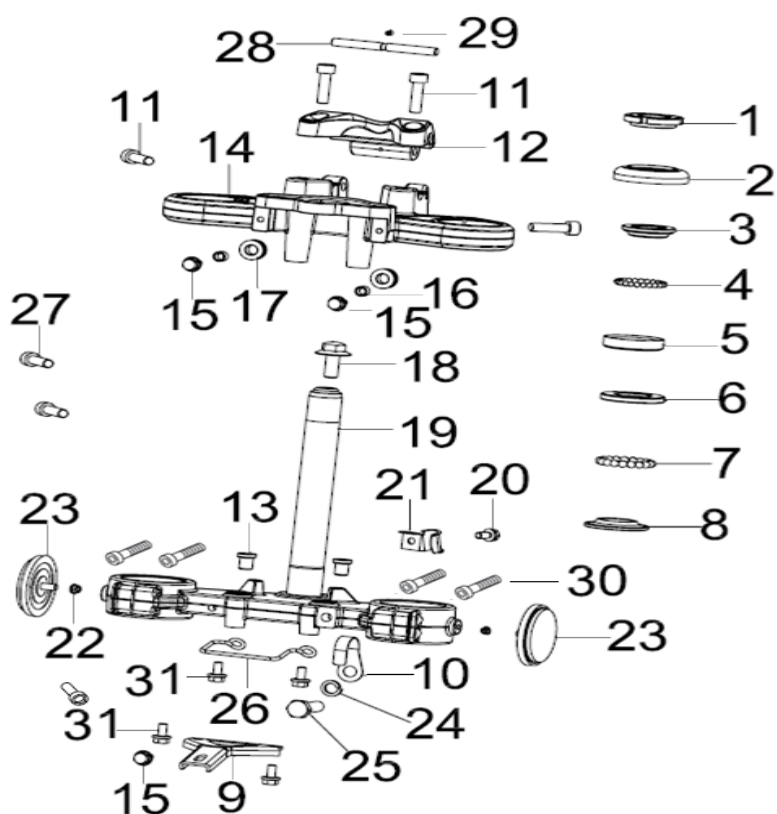


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F02-21	43035J000004	CLIP,DISC BRAKE	1
RKV 125-200S-AERO 200	F02-22	B04000600055	NUT M6	2
RKV 125-200S-AERO 200	F02-23	86300N060000	REFLECTOR ASSY	2
RKV 125-200S-AERO 200	F02-24	B07000001005	WASHER 10mm	1
RKV 125-200S-AERO 200	F02-25	B01091001665	BOLT M10×16	1
RKV 125-200S-AERO 200	F02-26	43035J300000	CLIP	1
RKV 125-200S-AERO 200	F02-27	B13010601605	SCREW W/WASHER M6×16	2
RKV 125-200S-AERO 200	F02-28	43061K670000	PIN	1
RKV 125-200S-AERO 200	F02-29	43255S010000	SCREW M4×6	1
RKV 125-200S-AERO 200	F02-30	08002K670000	BOLT M16×30	4
RKV 125-200S-AERO 200	F02-31	B01090601265	BOLT M6×12	4

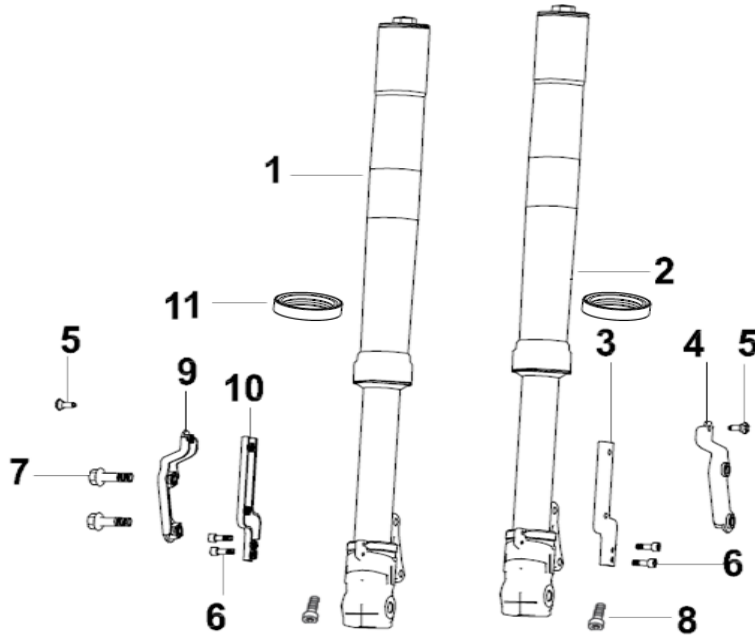


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F03-1	43300M040000	ABSORBER ASSY.,FR.,RH.BROWN	1
RKV 125-200S-AERO 200	F03-2	43200M040000	ABSORBER ASSY.,FR.,LH.BROWN	1
RKV 200S	F03-1	43300K670010	ABSORBER ASSY.,FR.,RH.BLACK	1
RKV 200S	F03-2	43200K670010	ABSORBER ASSY.,FR.,LH.BLACK	1
RKV 125-200S-AERO 200	F03-3	65130J800010	BRACKET I.,FRONT FENDER,LH.	1
RKV 125-200S-AERO 200	F03-4	65150J800010	BRACKET II, FRONT FENDE LH.	1
RKV 125-200S-AERO 200	F03-5	B0284060150A	SCREW M6×15.2	2
RKV 125-200S-AERO 200	F03-6	08001K670000	SCREW M6×16	4
RKV 125-200S-AERO 200	F03-7	08011K670010	BOLT M10×1.25×30	2
RKV 125-200S-AERO 200	F03-8	08002K670000	BOLT M16×30	2
RKV 125-200S-AERO 200	F03-9	65160J800010	BRACKET II.,FRONT FENDER,RH.	1
RKV 125-200S-AERO 200	F03-10	65140J800010	BRACKET I, FRONT FENDE RH.	1
RKV 125-200S-AERO 200	F03-11	43260N100000	OIL SEAL	2

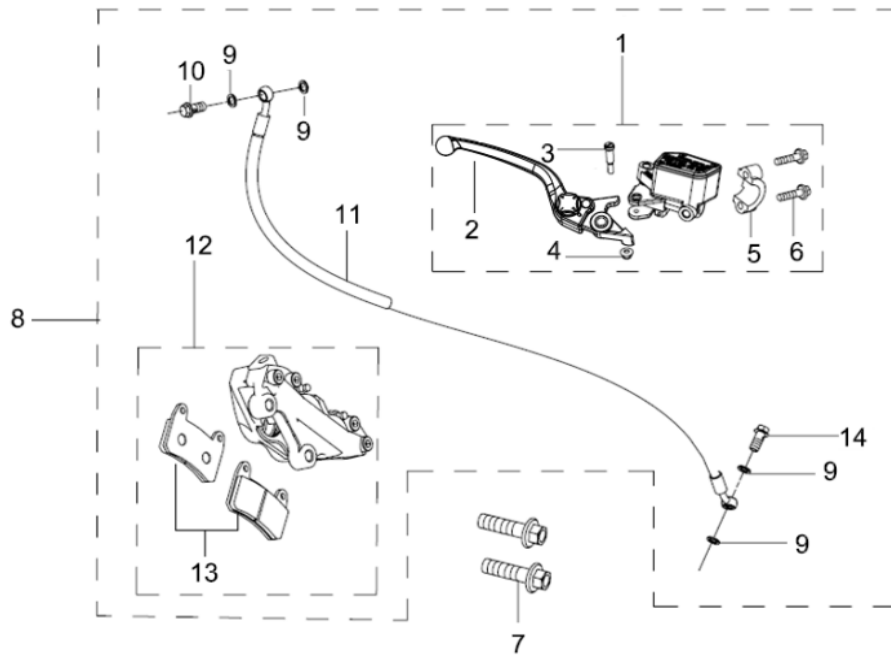


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F04-1	45400J800001	OIL PUMP ASSY.	1
RKV 125-200S-AERO 200	F04-2	45020J820000	LEVER, BRAKE,CHROMEPLATE	1
RKV 125-200S-AERO 200	F04-3	45076K010010	MOUNTING BOLT,HANDLE	1
RKV 125-200S-AERO 200	F04-4	B04170600055	NUT M6	1
RKV 125-200S-AERO 200	F04-5	45023K010000	COVER, FIX	1
RKV 125-200S-AERO 200	F04-6	B01400602365	BOLT M6×23	2
RKV 125-200S-AERO 200	F04-7	45036K670000	BOLT M10×1.25×34	2
RKV 125-200S-AERO 200	F04-8	45900J800001	FRONT DISK BRAKE ASSY.	1
RKV 125-200S-AERO 200	F04-9	45180J000000	WASHER	4
RKV 125-200S-AERO 200	F04-10	45037J000000	BOLT	1
RKV 125-200S-AERO 200	F04-11	45200J800000	HOSE ASSY , FRONT DISK BRAKE	1
RKV 125-200S-AERO 200	F04-12	45600J800010	CALIPER ASSY.FRONT DISK BRAKE	1
RKV 125-200S-AERO 200	F04-13	45120J800000	BRAKE PAD COMP.FRONT DISK BRAKE	1
RKV 125-200S-AERO 200	F04-14	45037P300000	BOLT	1

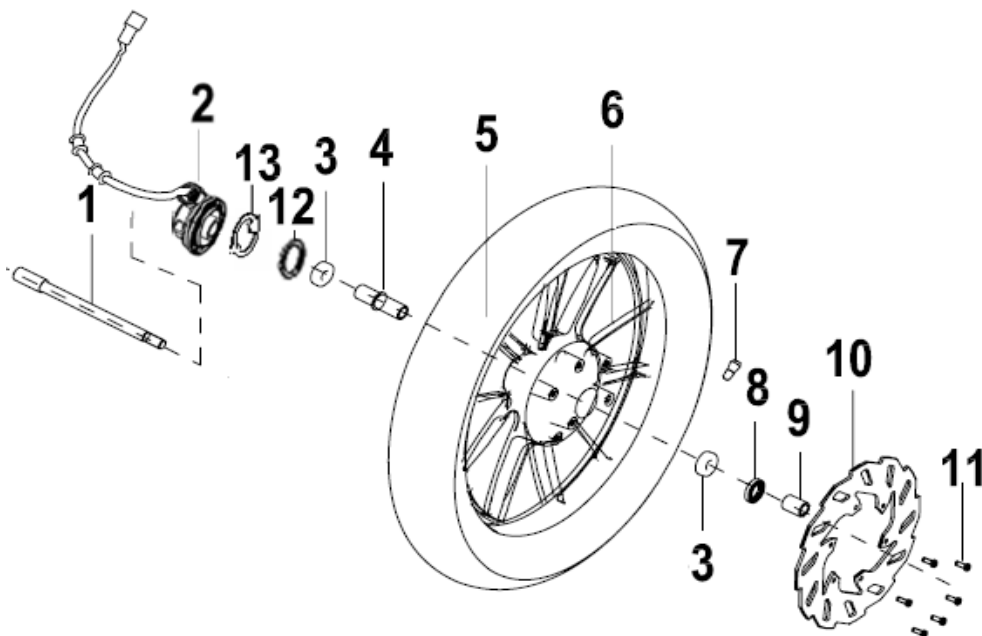


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F05-1	44004J800000	AXLE, FRONT WHEEL	1
RKV 125-200S-AERO 200	F05-2	44200K690000	SPEEDOMETER DRIVE ASSY	1
RKV 125-200S-AERO 200	F05-3	B12016020200	BEARING	2
RKV 125-200S-AERO 200	F05-4	44600J800000	INTERMEDIATE SHAFT SLEEVE,FRONT WHEEL AS	1
RKV 200S-AERO 200	F05-5	B140105E1706	TYRE 100/80-17	1
RKV 125-200S-AERO 200	F05-6	44101J800001	FRONT WHEEL	1
RKV 125-200S-AERO 200	F05-7	B1403Z201100	VALVE INSIDE	1
RKV 125-200S-AERO 200	F05-8	44300B910000	OIL SEAL ASSY,FRONT WHEEL	1
RKV 125-200S-AERO 200	F05-9	44005J800000	LEFT SHAFT SLEEVE,FRONT WHEEL	1
RKV 125-200S-AERO 200	F05-10	45033J800000	BRAKE DISK	1
RKV 125-200S-AERO 200	F05-11	45036D010000	BOLT, FIXING M6×16	6
RKV 125-200S-AERO 200	F05-12	44230J000000	SEAL ASSY	1
RKV 125-200S-AERO 200	F05-13	44023J000000	DRIVING PLATE	1

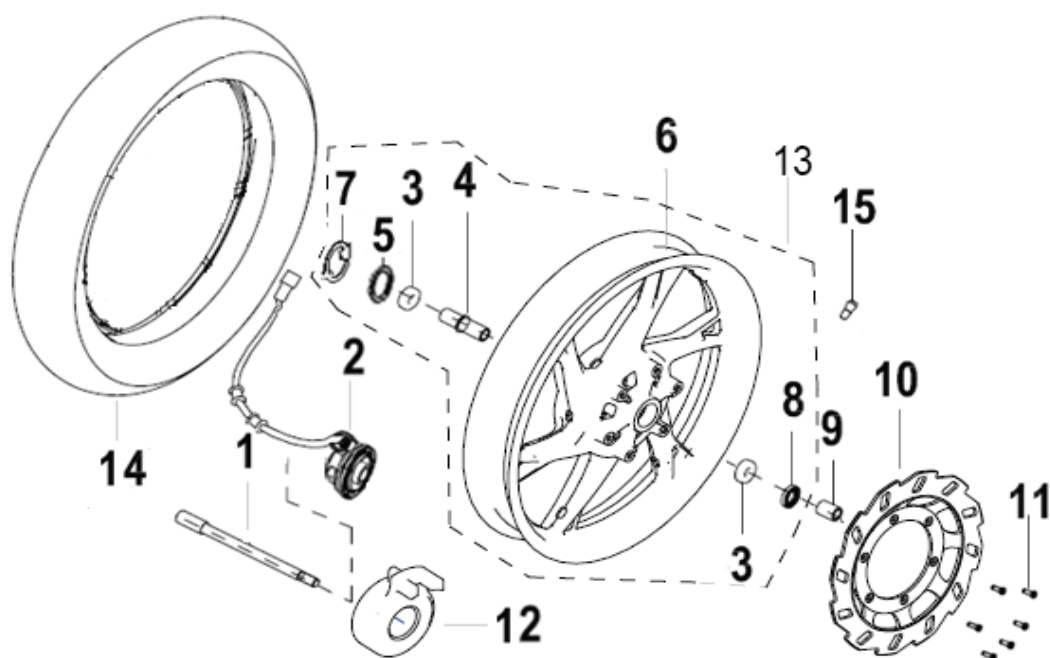


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S	F05_1-1	44004J800000	AXLE, FRONT WHEEL	1
RKV 200S	F05_1-2	44200K690000	SPEEDOMETER DRIVE ASSY	1
RKV 200S	F05_1-3	B12016020200	BEARING	2
RKV 200S	F05_1-4	44600N210000	BUSH,FRONT WHEEL ASSY	1
RKV 200S	F05_1-5	44230J000000	SEAL ASSY	1
RKV 200S	F05_1-6	44101N210010	FRONT WHEEL	1
RKV 200S	F05_1-7	44023J000000	DRIVING PLATE	1
RKV 200S	F05_1-8	44300B910000	OIL SEAL ASSY,FRONT WHEEL	1
RKV 200S	F05_1-9	44005J800000	LEFT SHAFT SLEEVE,FRONT WHEEL	1
RKV 200S	F05_1-10	45033K740000	BRAKE DISK	1
RKV 200S	F05_1-11	45036D010000	BOLT, FIXING M6×16	6
RKV 200S	F05_1-12	44016K740000	BUSH,FRONT WHEEL ASSY,RIGHT	1
RKV 200S	F05_1-13	44100N21000Z	FRONT WHEEL ASSY.COMP.	1
RKV 200S	F05_1-14	B140105E1706	TYRE 100/80-17	1
RKV 200S	F05_1-15	B1403Z201100	VALVE INSIDE	1

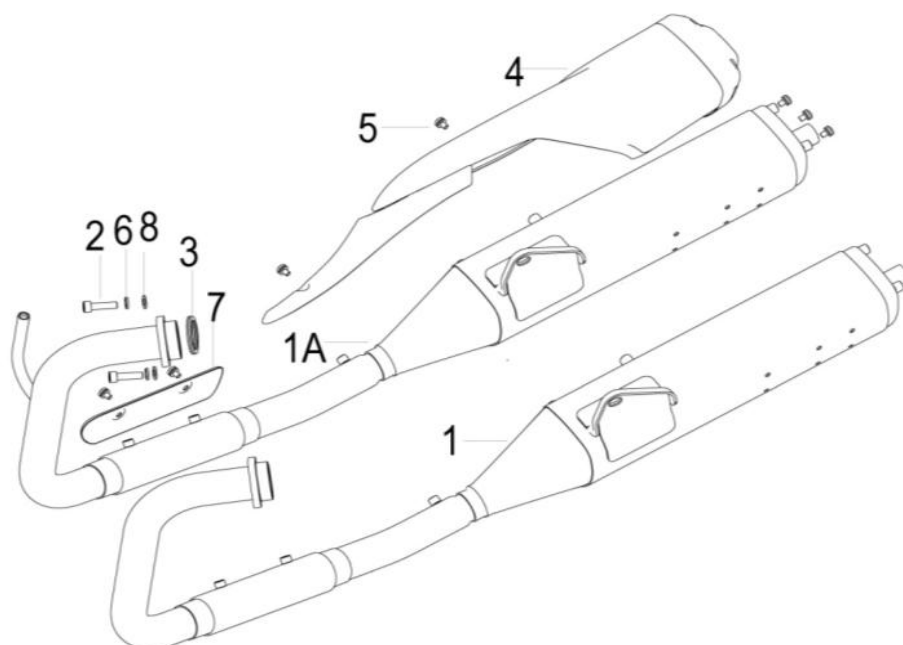


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S-AERO 200	F06-1	47100M030004	MUFFLER COMP.without catalyzer	1
RKV 200S	F06-1A	47100M030002	MUFFLER COMP.with single catalyzer	1
RKV 125-200S-AERO 200	F06-2	B0205080256A	BOLT M8×25	2
RKV 200S-AERO 200	F06-3	47800M030000	GASKTE ASSY,EXHAUST PIPE	1
RKV 125-200S	F06-4	47010J800011	LER TAIL COVER COMPONENTS,BLACK,mark:KE	1
RKV 200S	F06-4	47010J800001	TAIL COVER COMPONENTS,SILVER WHITE,mark	1
RKV 200S	F06-4	47010J800010	FLER TAIL COVER COMPONENTS,black,without r	1
AERO 200	F06-4	47010J800000	ER TAIL COVER COMPONENTS,silver white,witho	1
RKV 125-200S-AERO 200	F06-5	B1304060100L	SCREW W/WASHER M6×10	7
RKV 125-200S-AERO 200	F06-6	B07000000804	SPRING WASHER 8MM	2
RKV 125-200S-AERO 200	F06-7	47009K670000	COVER, DECORATION	1
RKV 125-200S-AERO 200	F06-8	B07030000804	WASHER 8MM	2

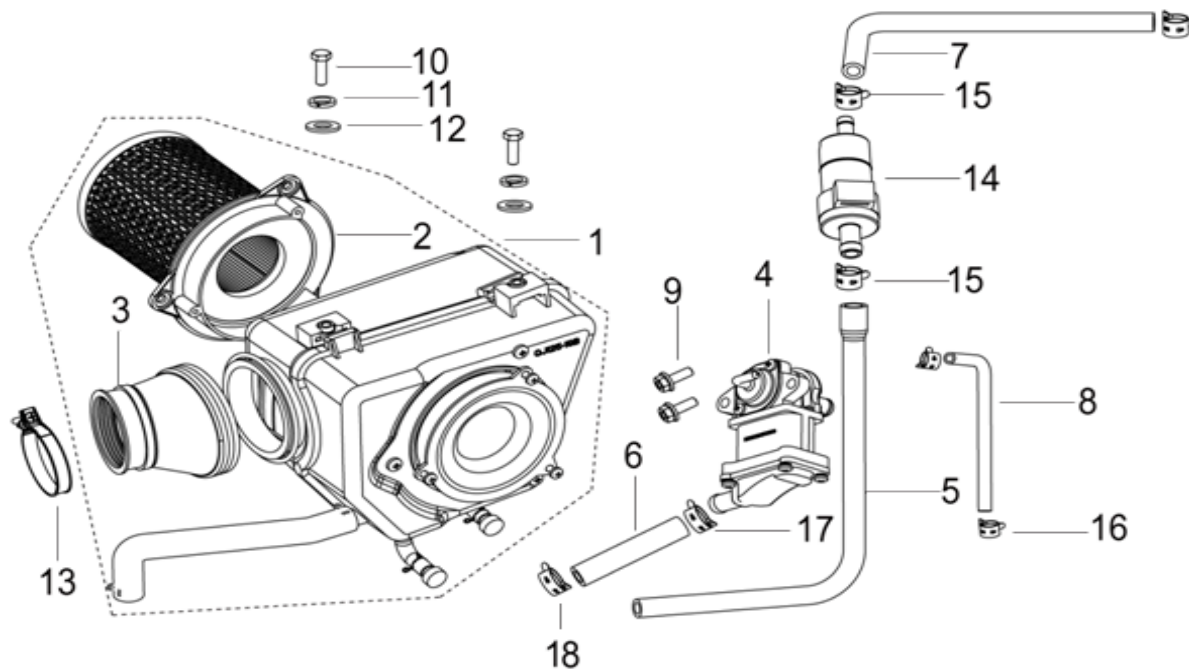


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S-AERO 200	F07_1-1	49100M030001	AIR CLEANER ASSY	1
RKV 200S-AERO 200	F07_1-2	49200J320000	FILTER ASSY,material:paper	1
RKV 200S-AERO 200	F07_1-3	49005M030001	PIPE.AIR OUT	1
RKV 200S	F07_1-4	49810J830000	VALVE BODY ASSY.	1
RKV 200S	F07_1-5	49856J300000	PIPE,SMALL CLEANER&VALVE BODY ASSY	1
RKV 200S	F07_1-6	49856M030000	PIPE,VALVE BODY ASSY&MUFFLER	1
RKV 200S	F07_1-7	49859J300000	PIPE,SMALL CLEANER	1
RKV 200S	F07_1-8	B16010B23801	TUBE $\phi 3.5 \times 7.5 \times 380$	1
RKV 200S	F07_1-9	B01090602065	BOLT M6×20	2
RKV 200S-AERO 200	F07_1-10	B01010601625	BOLT M6×16	2
RKV 200S-AERO 200	F07_1-11	B07000000605	WASHER 6MM	2
RKV 200S-AERO 200	F07_1-12	B07030000605	WASHER 6MM	2
RKV 200S-AERO 200	F07_1-13	49350M030000	CLAMP ASSY.	1
RKV 200S	F07_1-14	49870J300000	SAMLL CLEANER	1
RKV 200S	F07_1-15	50307J140000	CLIP $\phi 13.5 \times 12 \times 0.8$	3
RKV 200S	F07_1-16	50306T450000	PLATE CLAMP $\phi 8$	2
RKV 200S	F07_1-17	49805G120000	PLATE CLAMP $\phi 14.5 \times 12 \times 0.8$	1
RKV 200S	F07_1-18	49855J000000	PLATE CLAMP $\phi 16.5$	1

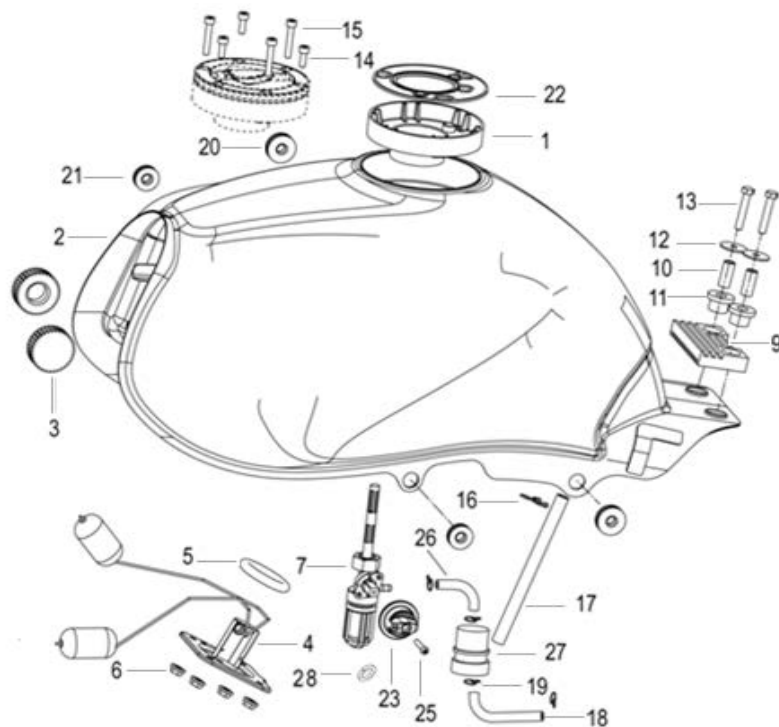


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F08-1	50210J800000	SUPPORTING COMPONENTS FUEL TANK CAP	1
RKV 200S	F08-2	50100M03001Z	FUEL TANK COMP.,BLUE EX	1
RKV 200S	F08-2	50100M03002Z	FUEL TANK COMP.,WHITE WF	1
RKV 200S	F08-2	50100M03003Z	FUEL TANK COMP.,BLACK BC	1
RKV 200S	F08-2	50100M03004Z	FUEL TANK COMP.,RED TL	1
RKV 200S	F08-2	50100M03005Z	FUEL TANK ASSY. SILVER CJ	1
RKV 200S	F08-2	50100M03006Z	FUEL TANK COMP.,ORANGE M9	1
RKV 125-200S-AERO 200	F08-3	50005J820000	MOUNTING PAD,FUEL TANK	2
RKV 125-200S-AERO 200	F08-4	50800J800000	SENSOR ASSY	1
RKV 125-200S-AERO 200	F08-5	50002K020000	CUSHION	1
RKV 125-200S-AERO 200	F08-6	B04070600055	NUT M6	4
RKV 125-200S-AERO 200	F08-7	50310J800000	SWITCH , FUEL TANK	1
RKV 125-200S-AERO 200	F08-9	50006J000001	MOUNTING PAD,FUEL TANK	1
RKV 125-200S-AERO 200	F08-10	50221J000001	BUSH	2
RKV 125-200S-AERO 200	F08-11	50222J000001	SLEEVE,RUBBER	2
RKV 125-200S-AERO 200	F08-12	08023J000020	WASHER	2
RKV 125-200S-AERO 200	F08-13	B01000603563	BOLT M6×35	2
RKV 125-200S-AERO 200	F08-14	B0280050140A	SCREW M5×14	3
RKV 125-200S-AERO 200	F08-15	B0280050300A	SCREW M5×30	4
RKV 125-200S	F08-16	B17010105003	CLIP 10.5MM	1
RKV 125-200S	F08-17	B16010724001	TUBE Φ7×11×400	1
RKV 125-200S	F08-18	B16010C21351	TUBE Φ4.5×8.5×135	1
RKV 125-200S-AERO 200	F08-18	B16010C21901	TUBE Φ4.5×8.5×190	1
RKV 125-200S-AERO 200	F08-19	B17010080003	CLIP 8MM	4
RKV 125-200S-AERO 200	F08-20	65618J000000	CUSHION	2
RKV 125-200S-AERO 200	F08-21	65618J800000	CUSHION	2
RKV 125-200S-AERO 200	F08-22	50202J800000	GASKET,FUEL TANK CAP	1

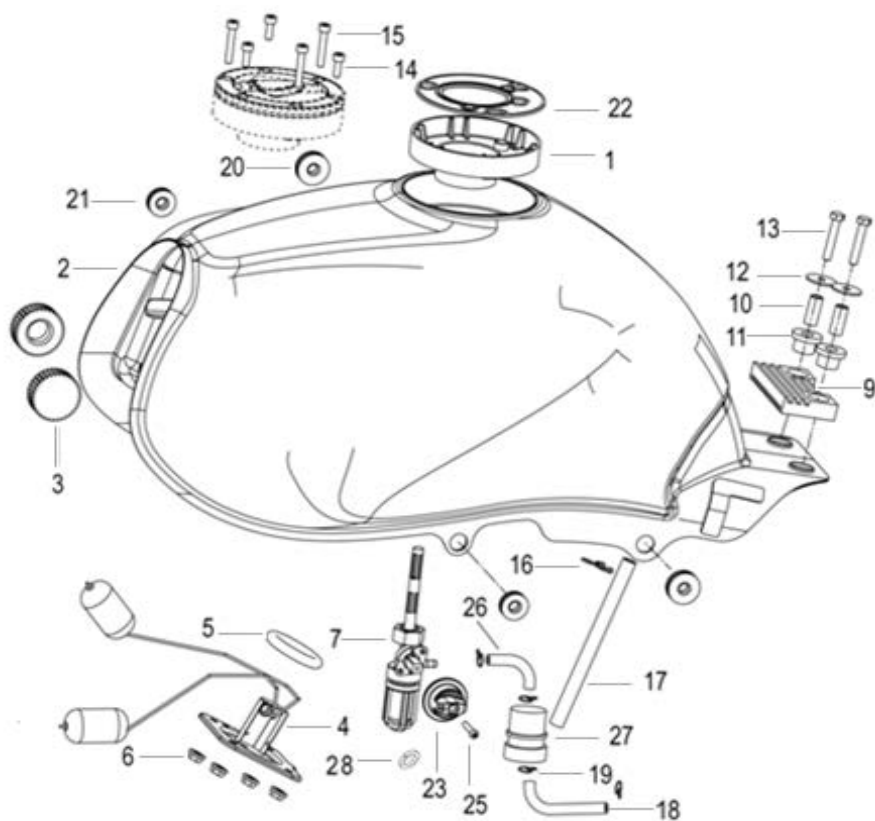


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F08-23	50334K670001	HANDLE,SWITCH	1
RKV 125-200S-AERO 200	F08-25	B02000402525	BOLT M4×25	1
RKV 125-200S-AERO 200	F08-26	50301J000002	TUBE Φ4.5×Φ8.5	1
RKV 125-200S-AERO 200	F08-27	50340G120003	FUEL FILTER	1
RKV 125-200S-AERO 200	F08-28	B07000000505	SPRING WASHER 5	1

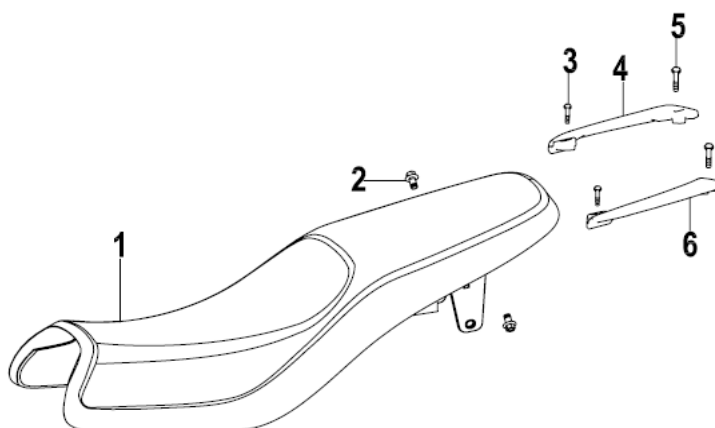


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S	F09-1	51100J800009	SEAT ASSY	1
RKV 125-200S-AERO 200	F09-2	B01090802065	BOLT M8×20	2
RKV 125-200S-AERO 200	F09-3	52018J800000	SCREW I	2
RKV 125-200S-AERO 200	F09-4	52002J80B400	RR. ARM REST , R.BLACK B4	1
RKV 125-200S-AERO 200	F09-5	52019J800000	SCREW II	2
RKV 125-200S-AERO 200	F09-6	52001J80B400	RR. ARM REST , L.BLACK B4	1

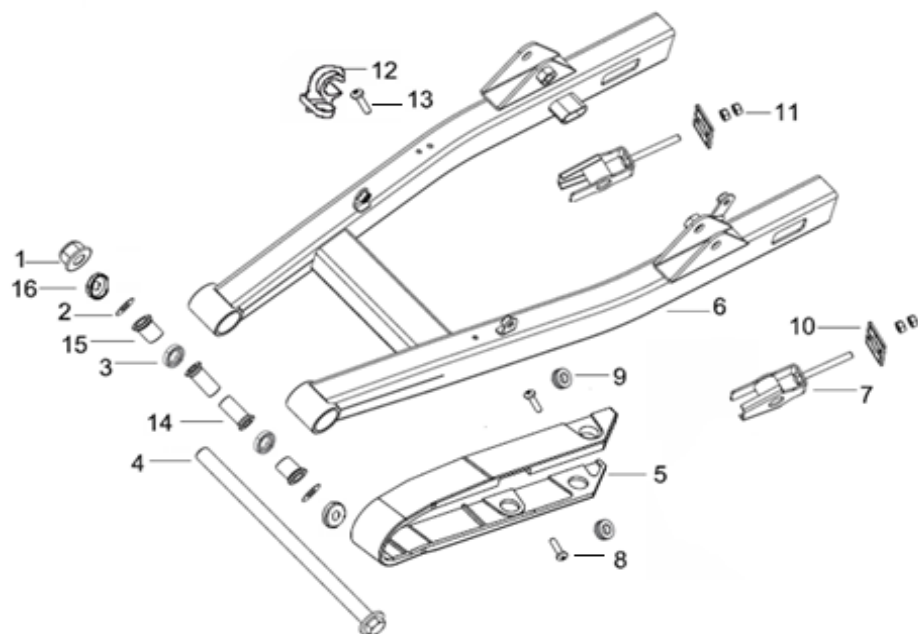


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F10-1	B04171415055	NUT M14×1.5	1
RKV 125-200S-AERO 200	F10-2	53018K690000	WASHER	2
RKV 125-200S-AERO 200	F10-3	53210J060000	WASHER	2
RKV 125-200S-AERO 200	F10-4	53001J000002	SHAFT, FIX, RR. SWING ARM	1
RKV 125-200S-AERO 200	F10-5	53004J800000	CHAIN SHIELD BLOCK	1
RKV 125-200S-AERO 200	F10-6	53100K690011	REAR SWING ARM ASSY	1
RKV 125-200S-AERO 200	F10-7	53230N030030	CHAIN ADJUSTER	2
RKV 125-200S-AERO 200	F10-8	B02000501225	SCREW M5×12	2
RKV 125-200S-AERO 200	F10-9	53056D010050	BUSH 2	2
RKV 125-200S-AERO 200	F10-10	53234N030020	PLATE, CHAIN ADJUSTER	2
RKV 125-200S-AERO 200	F10-11	B04000800055	NUT M8	4
RKV 125-200S-AERO 200	F10-12	40022N050002	CLIP	1
RKV 125-200S-AERO 200	F10-13	B02010601225	SCREW M6×12	1
RKV 125-200S-AERO 200	F10-14	53005K690000	FRONT WHEEL ASSY	2
RKV 125-200S-AERO 200	F10-15	53013K690000	CUSHION, BUFFER	2
RKV 125-200S-AERO 200	F10-16	53220J060000	DUST COVER ASSY	2

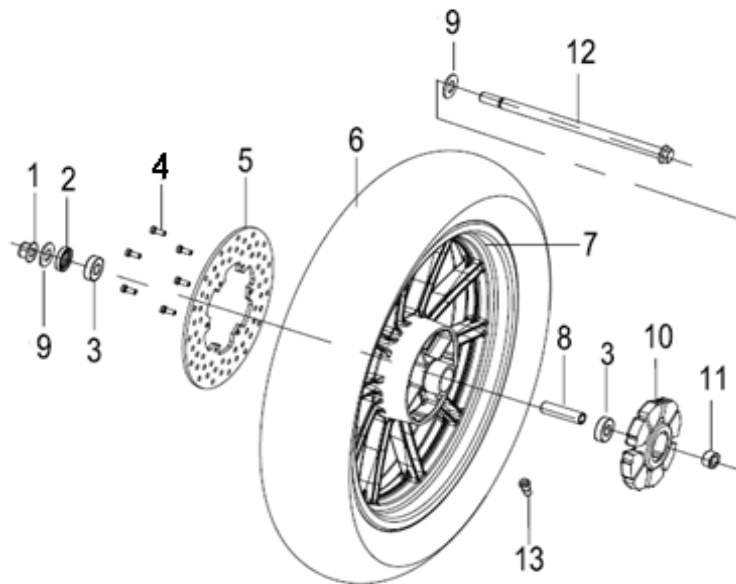


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F11-1	B04171415055	NUT M14×1.5	1
RKV 125-200S-AERO 200	F11-2	44300B910000	OIL SEAL COMPONENTS	1
RKV 125-200S-AERO 200	F11-3	B12016020200	BEARING 6202-2RS	2
RKV 125-200S-AERO 200	F11-4	45036D010000	BOLT M6×16	6
RKV 125-200S-AERO 200	F11-5	55033J410000	REAR DISK BRAKE	1
RKV 200S-AERO 200	F11-6	B140108D1705	TYRE 130/70-17	1
RKV 125-200S-AERO 200	F11-7	54101K690001	REAR WHEEL	1
RKV 125-200S-AERO 200	F11-8	54006J800000	SPACER BUSH	1
RKV 125-200S-AERO 200	F11-9	08021K670000	WASHER Φ16×Φ32×2	2
RKV 125-200S-AERO 200	F11-10	54024J000000	BUFFER BLOCK,REAR WHEEL	1
RKV 125-200S-AERO 200	F11-11	54016J800000	BUSH,LEFT REAR WHEEL ASSY	1
RKV 125-200S-AERO 200	F11-12	54004J670000	AXLE,REAR WHEEL	1
RKV 125-200S-AERO 200	F11-13	B1403Z201100	VALVE INSIDE	1

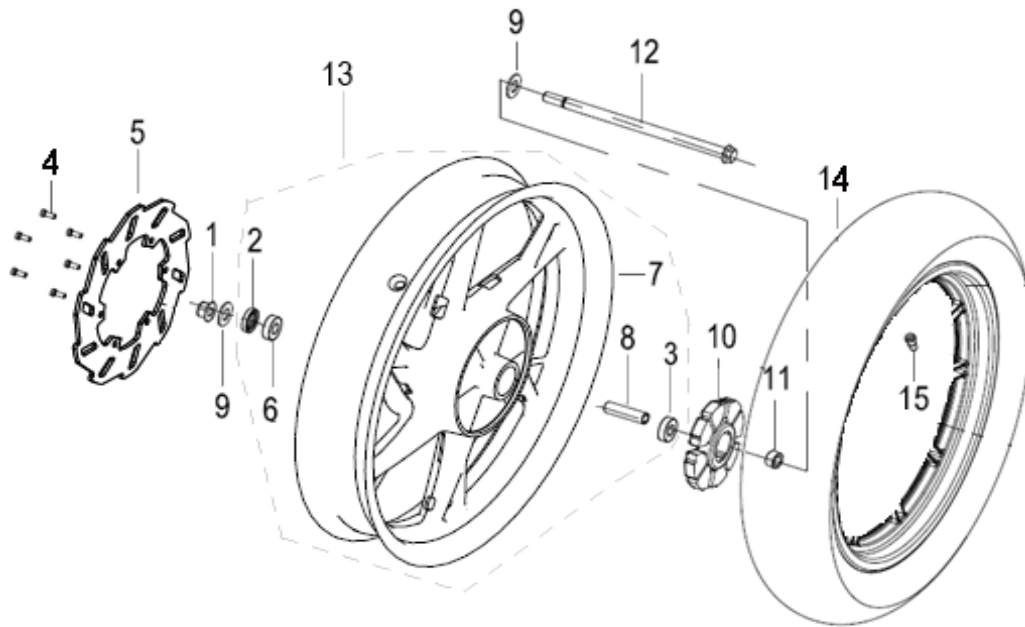


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S	F11_1-1	B04171415055	NUT M14×1.5	1
RKV 200S	F11_1-2	44300J040000	OIL SEAL COMPONENTS	1
RKV 200S	F11_1-3	B12016020200	BEARING 6202-2RS	1
RKV 200S	F11_1-4	45036D010000	BOLT M6×16	6
RKV 200S	F11_1-5	55033J410000	REAR DISK BRAKE	1
RKV 200S	F11_1-6	B12016030200	BEARING 6302-2RS	1
RKV 200S	F11_1-7	54101N210010	REAR WHEEL	1
RKV 200S	F11_1-8	54006J800000	SPACER BUSH	1
RKV 200S	F11_1-9	08021K670000	WASHER Φ16×Φ32×2	2
RKV 200S	F11_1-10	54024N210000	BUFFER BLOCK,REAR WHEEL	6
RKV 200S	F11_1-11	54016J800000	BUSH,LEFT REAR WHEEL ASSY	1
RKV 200S	F11_1-12	54004J670000	AXLE,REAR WHEEL	1
RKV 200S	F11_1-13	54100N21000Z	REAR WHEEL ASSY.COMP.	1
RKV 200S	F11_1-14	B140108D1705	TYRE 130/70-17	1
RKV 200S	F11_1-15	B1403Z201100	VALVE INSIDE	1

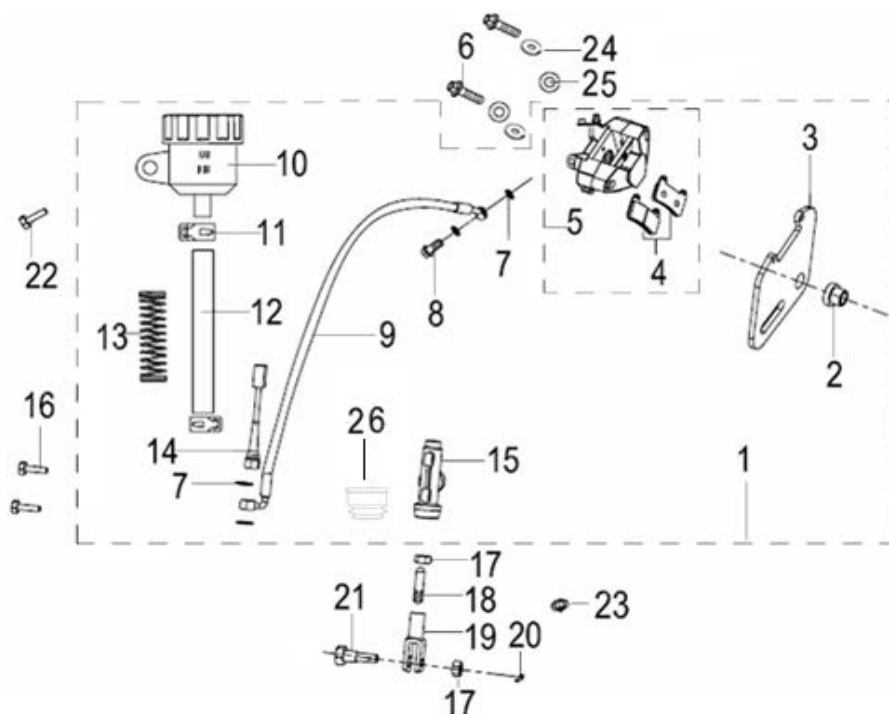


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F12-1	55900J800000	REAR DISK BRAKE	1
RKV 125-200S-AERO 200	F12-2	55095J800000	BUSH II	1
RKV 125-200S-AERO 200	F12-3	55025J800000	UNITED BOARD	1
RKV 200S-AERO 200	F12-1	55900M040000	REAR DISK BRAKE	1
RKV 200S-AERO 200	F12-2	55095K740000	BUSH II	1
RKV 200S-AERO 200	F12-3	55025K740000	UNITED BOARD	1
RKV 125-200S-AERO 200	F12-4	55120J410000	BRAKE PAD ASSY, REAR DISK BRAKE	1
RKV 125-200S-AERO 200	F12-5	55600J800000	CALIPER ASSY , BRAKE	1
RKV 125-200S-AERO 200	F12-6	B01090802265	BOLT M8×22	2
RKV 125-200S-AERO 200	F12-7	55180J410000	GASKET	4
RKV 125-200S-AERO 200	F12-8	55037J410000	HEX FLANG BOLTS	1
RKV 125-200S-AERO 200	F12-9	55200J410000	HOSE ASSY , REAR DISK BRAKE	1
RKV 125-200S-AERO 200	F12-10	55140J410000	OIL CUP COMPONENTS	1
RKV 125-200S-AERO 200	F12-11	55067J410000	DEAM CLAMP	2
RKV 125-200S-AERO 200	F12-12	55065J410000	OIL TUBE	1
RKV 125-200S-AERO 200	F12-13	55017J410000	PROTECT SPRING	1
RKV 125-200S-AERO 200	F12-14	55300J410000	BRAKING SWITCH COMPONENTS	1
RKV 125-200S-AERO 200	F12-15	55400J410000	HYDRAULIC BRAKE PUMP COMPONENTS	1
RKV 125-200S-AERO 200	F12-16	B01090602065	BOLT M6×20	2
RKV 125-200S-AERO 200	F12-17	B04000600055	NUT M6	2
RKV 125-200S-AERO 200	F12-18	40716D010000	DRAWHEAD	1
RKV 125-200S-AERO 200	F12-19	40715D010000	ROD END YOKE	1
RKV 125-200S-AERO 200	F12-20	B090002018A5	COTTER PIN 2×18	1
RKV 125-200S-AERO 200	F12-21	40717D010000	FIXED BOLT	1
RKV 125-200S-AERO 200	F12-22	B01090601265	BOLT M6×12	1
RKV 125-200S-AERO 200	F12-23	B07030000605	WASHER 6MM	1
RKV 125-200S-AERO 200	F12-24	B07000000805	WASHER 8MM	2
RKV 125-200S-AERO 200	F12-25	B07030000805	WASHER 8MM	2
RKV 125-200S-AERO 200	F12-26	55003J000000	DUSTPROOF COVER	1

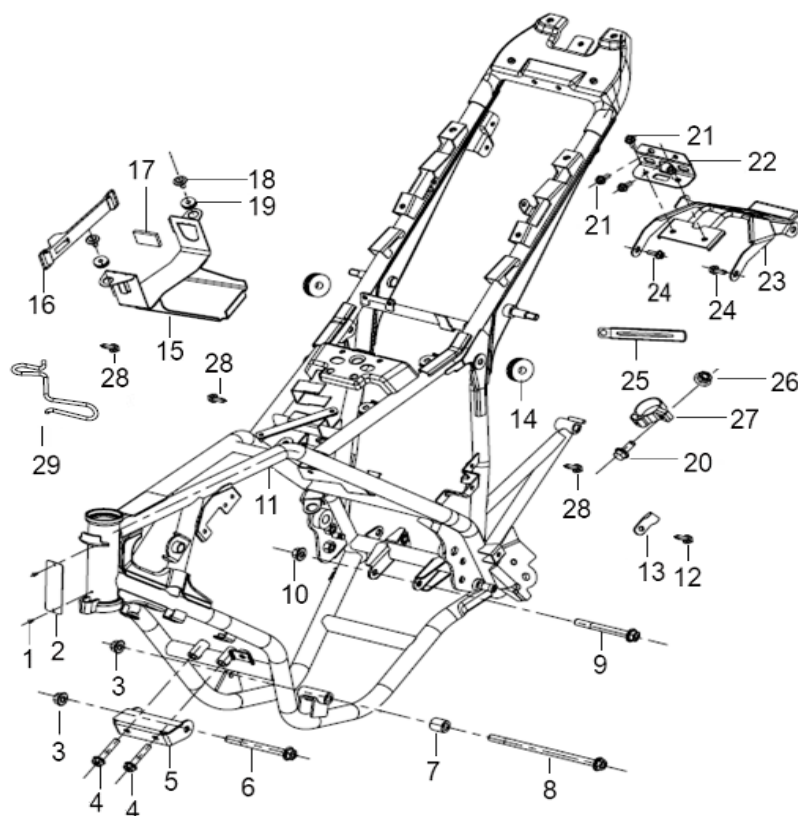


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S-AERO 200	F13_2-1	B10000300600	RIVET 3×6	2
RKV 200S	F13_2-2	57001M030001	FRAME PLATE	1
RKV 200S	F13_2-2	57001M040001	FRAME PLATE	1
RKV 200S	F13_2-2	57001M030002	FRAME PLATE	1
RKV 200S-AERO 200	F13_2-2	57001M030004	FRAME PLATE	1
RKV 200S-AERO 200	F13_2-3	B04181012555	NUT M10×1.25	2
RKV 200S-AERO 200	F13_2-4	B01090804565	BOLT M8×45	2
RKV 200S-AERO 200	F13_2-5	57420M030000	BRACKET,ENGINE,FRONT	1
RKV 200S-AERO 200	F13_2-6	B01591010065	BOLT M10×1.25×100	1
RKV 200S-AERO 200	F13_2-7	57713M030010	THE ENGINE MOUNTING SLEEVES II	1
RKV 200S-AERO 200	F13_2-8	B01591017865	BOLT M10×1.25×178	1
RKV 200S-AERO 200	F13_2-9	B01591009065	BOLT M10×1.25×90	1
RKV 200S-AERO 200	F13_2-10	B04181012555	NUT M10×1.25	1
RKV 200S-AERO 200	F13_2-11	57100M030001	FRAME JOINTING COMP.	1
RKV 200S-AERO 200	F13_2-29	B01090601265	BOLT M6×12	1
RKV 200S-AERO 200	F13_2-30	43070D010020	CLIP,SPEEDOMETER ASSY	1
RKV 200S-AERO 200	F13_2-31	65618J000000	RUBBER CUSHION	2
RKV 200S-AERO 200	F13_2-15	58750J800000	KIT ASSY.	1
RKV 200S-AERO 200	F13_2-16	02200J0000A0	BATTERY WITH COMPONENTS	1
RKV 200S-AERO 200	F13_2-17	58752J00000A	CUSHION,FOAM	9
RKV 200S-AERO 200	F13_2-18	B13060601605	SCREW W/WASHER M6×16	2

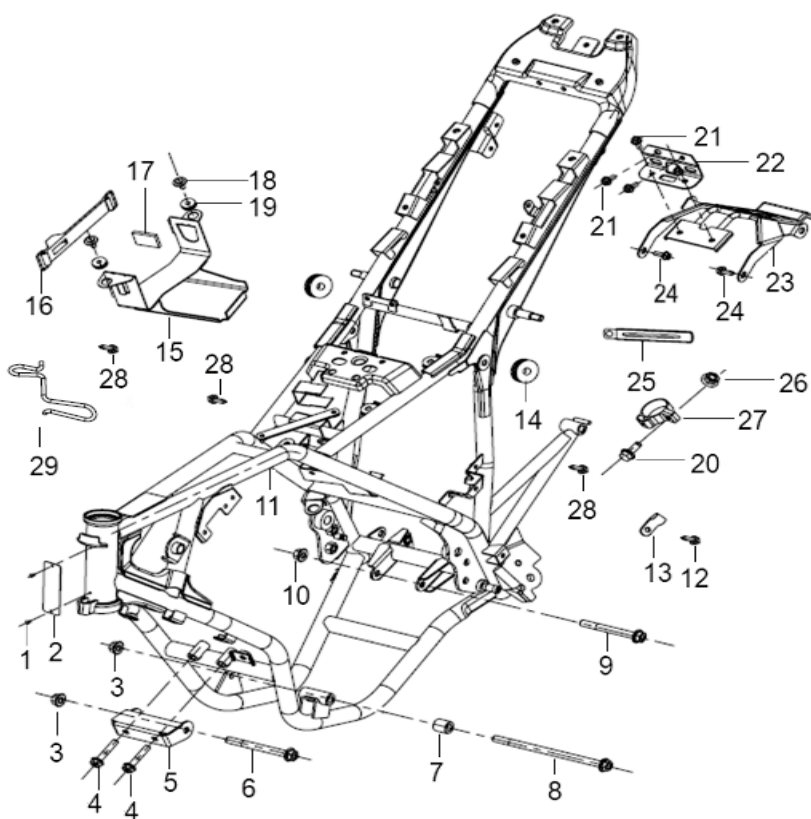


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S-AERO 200	F13_2-19	08027J000000	RUBBER WASHER	2
RKV 200S-AERO 200	F13_2-20	B02000502525	SCREW M5×25	1
RKV 200S-AERO 200	F13_2-21	B01090601665	BOLT M6×16	4
RKV 200S-AERO 200	F13_2-22	65721J800000	REINFORCEMENT PLATE	1
RKV 200S-AERO 200	F13_2-23	65770K670000	BRACKER ASSY.,REAR FENDER	1
RKV 200S-AERO 200	F13_2-24	B01090601665	BOLT M6×16	2
RKV 200S-AERO 200	F13_2-25	58430J000000	CLIP COMPONENTS	1
RKV 200S-AERO 200	F13_2-26	B04000500055	NUT M5	1
RKV 200S-AERO 200	F13_2-27	57013M030000	CLIP CLUTCH LINE	1
RKV 200S-AERO 200	F13_2-28	B01090601265	BOLT M6×12	3
RKV 200S-AERO 200	F13_2-29	57012M030000	CLIP	1
				1

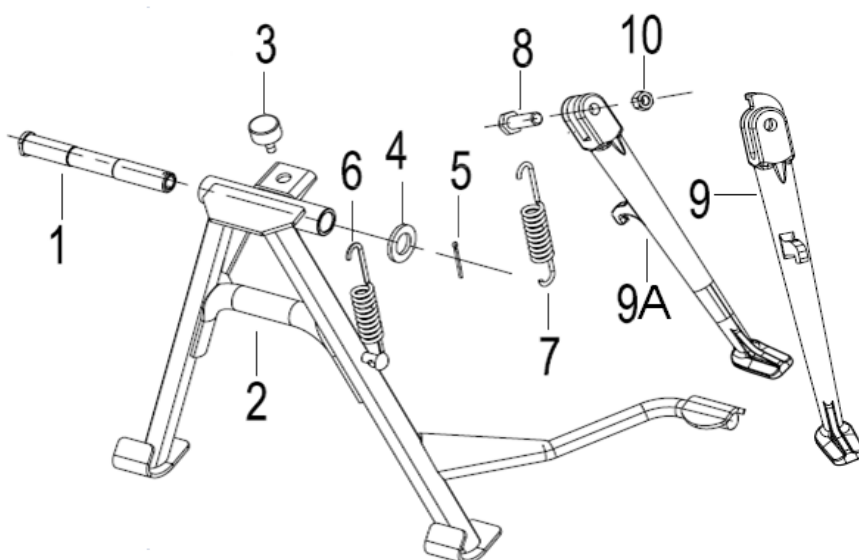


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F14-1	58501J000010	SHAFT, MID STAND	1
RKV 200S-AERO 200	F14-2	58520K670010	MID STAND COMP.	1
RKV 125-200S-AERO 200	F14-3	58507H170000	BUFFER BLOCK,MAIN STAND	1
RKV 125-200S-AERO 200	F14-4	B07010001605	WASHER 16mm	1
RKV 125-200S-AERO 200	F14-5	B090003025A5	COTTER PIN 3×25	1
RKV 200S-AERO 200	F14-6	58502J000070	SPRING,MID STAND	1
RKV 200S-AERO 200	F14-7	57003M030000	SPRING,SIDE STAND	1
RKV 125-200S-AERO 200	F14-8	57005N030020	FIXING BOLT,SIDE STAND M10×1.25×35	1
RKV 200S-AERO 200	F14-9A	58701K670000	SIDE STAND	1
RKV 125-200S-AERO 200	F14-10	B04011012555	NUT M10×1.25	1

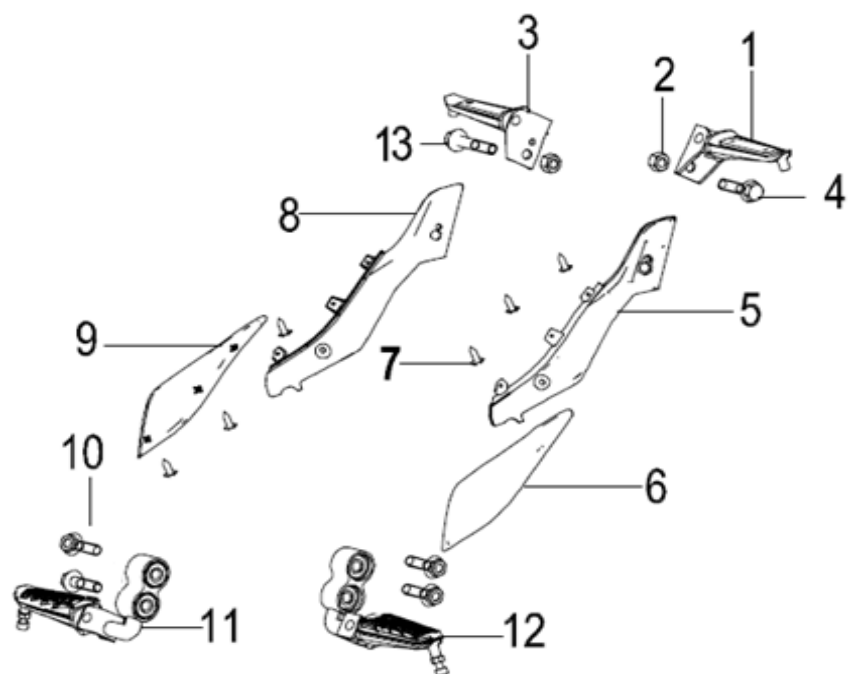


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F15-1	58260K670000	FOOTREST ASSY., RR.L.	1
RKV 125-200S-AERO 200	F15-2	B04181012555	NUT M10×1.25	1
RKV 125-200S-AERO 200	F15-3	58280K670000	FOOTREST ASSY., RR.R.	1
RKV 125-200S-AERO 200	F15-4	B01091004565	BOLT M10×45	1
RKV 125-200S-AERO 200	F15-5	58211J800000	DECORATING BOARD,L	1
RKV 125-200S-AERO 200	F15-6	58212J80CS00	DECORATING BOARD,L SILVER CS	1
RKV 125-200S-AERO 200	F15-7	B05004201305	SCREW ST4.2×13	6
RKV 125-200S-AERO 200	F15-8	58311J800000	DECORATING BOARD,R	1
RKV 125-200S-AERO 200	F15-9	58312J80CS00	DECORATING BOARD,R SILVER CS	1
RKV 125-200S-AERO 200	F15-10	B01591003565	BOLT M10×1.25×35	4
RKV 125-200S-AERO 200	F15-11	58240K670000	FR.PEDAL ASSY(R)	1
RKV 125-200S-AERO 200	F15-12	58220K670000	FR.PEDAL ASSY(L)	1
RKV 125-200S-AERO 200	F15-13	B01591005565	BOLT M10×1.25×55	1

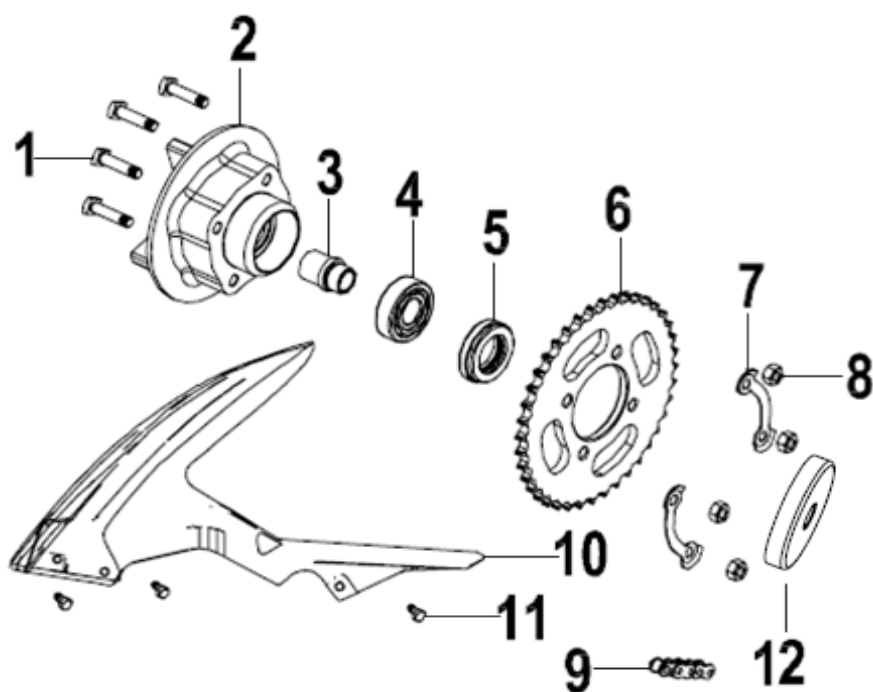


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F16-1	60015J000010	BOLT, SPROCKET MOUNTING M8×33	4
RKV 125-200S-AERO 200	F16-2	60001J000020	DRUM,SPROCKET MOUNTING	1
RKV 125-200S-AERO 200	F16-3	60006J000000	DRIVE SHAFT SLEEVE,CHAIN	1
RKV 125-200S-AERO 200	F16-4	B12016020400	BEARING 6204-2RS	1
RKV 125-200S-AERO 200	F16-5	60200J000001	OIL SEAL	1
RKV 200S-AERO 200	F16-6	60002J000000	SPROCKET 40 TEETH	1
RKV 125-200S-AERO 200	F16-7	60004J000050	LOOSE-PROOF LOCK SLICE, SPROCKET WHEEL	2
RKV 125-200S-AERO 200	F16-8	B04000800055	NUT M8	4
RKV 200S-AERO 200	F16-9	B1502W1124B0	CHAIN 428HG-1×124	1
RKV 125-200S-AERO 200	F16-10	60101J800000	CASE,CHAIN	1
RKV 125-200S-AERO 200	F16-11	08011H010000	BOLT M6×14	3
RKV 200S-AERO 200	F16-12	60027J040010	COVER,DUST	1

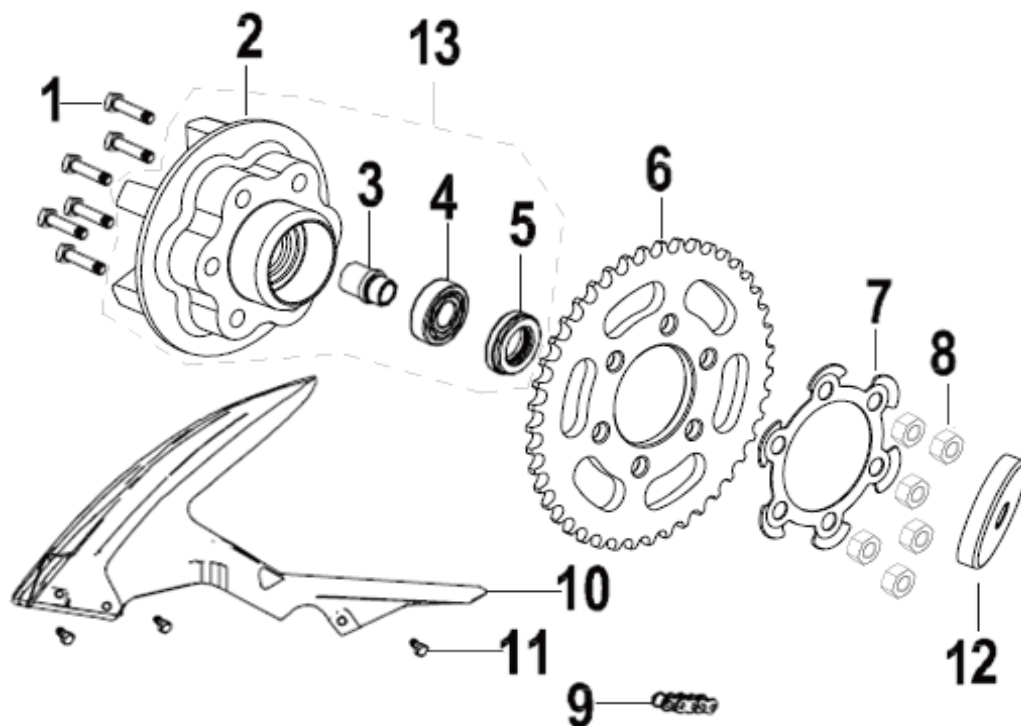


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S-AERO 200	F16_1-1	60015J410000	BOLT, SPROCKET MOUNTING M10×1.25×38	6
RKV 200S-AERO 200	F16_1-2	60001N210000	DRUM,SPROCKET MOUNTING	1
RKV 200S-AERO 200	F16_1-3	60006J000000	DRIVE SHAFT SLEEVE,CHAIN	1
RKV 200S-AERO 200	F16_1-4	B12016020400	BEARING 6204-2RS	1
RKV 200S-AERO 200	F16_1-5	60200J000001	DUSTPROOF	1
RKV 200S-AERO 200	F16_1-6	60002M030001	SPROCKET 40 TEETH	1
RKV 200S-AERO 200	F16_1-7	60004N210000	LOOSE-PROOF LOCK SLICE, SPROCKET WHEEL	1
RKV 200S-AERO 200	F16_1-8	B04011012554	NUT M10×1.25	6
RKV 200S-AERO 200	F16_1-9	B1502W1124B0	CHAIN 428HG-1×124	1
RKV 200S-AERO 200	F16_1-10	60101J800000	CASE,CHAIN	1
RKV 200S-AERO 200	F16_1-11	08011H010000	BOLT M6×14	3
RKV 200S-AERO 200	F16_1-12	60027J040010	COVER,DUST	1
RKV 200S-AERO 200	F16_1-13	60001M03000Z	DRUM ASSY	1

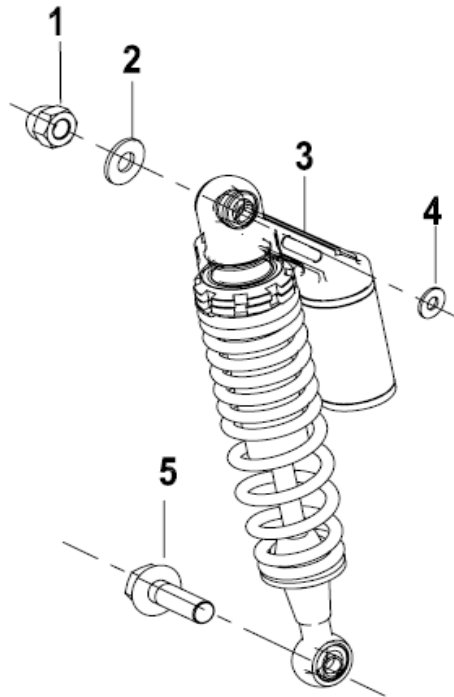


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F17-1	08052J000000	NUT, COVER STYL	2
RKV 125-200S-AERO 200	F17-2	63013J000050	WASHER	2
RKV 125-200S-AERO 200	F17-3	63800M040000	REAR ABSORBER COMP.spring in red	2
RKV200S	F17-3	63800K670020	REAR ABSORBER COMP.spring in black	2
RKV 125-200S-AERO 200	F17-4	B07030001205	WASHER Φ 12mm	2
RKV 125-200S-AERO 200	F17-5	B01591004065	BOLT M10 $\times$ 1.25 $\times$ 40	2

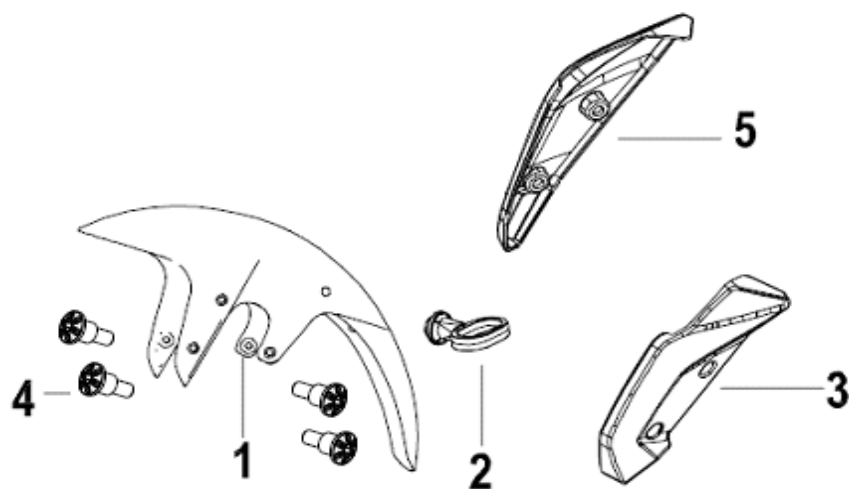


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F18-1	65101J800180	FRONT FENDER,WHITE/BLACK WF/B4	1
RKV 125-200S-AERO 200	F18-1	65101J800130	FRONT FENDER,BLACK/BLACK BC/B4	1
RKV 125-200S-AERO 200	F18-1	65101J800140	FRONT FENDER,RED/BLACK TL/B4	1
RKV 125-200S	F18-1	65101J800120	FRONT FENDER,BLUE/BLACK EX/B4	1
RKV 125-200S	F18-1	65101J800160	FRONT FENDER,ORANGE/BLACK M9/B4	1
RKV 125-200S	F18-1	65101J800150	FRONT FENDER, SILVER/BLACK CJ/B4	1
RKV 125-200S-AERO 200	F18-2	65113J000000	RUBBER RING	1
RKV 125-200S-AERO 200	F18-3	65108K670000	DECORATIVE , FRONT FENDER LH	1
RKV 125-200S-AERO 200	F18-4	65117K670000	SCREW , FRONT FENDER	4
RKV 125-200S-AERO 200	F18-5	65116K670000	DECORATIVE , FRONT FENDER RH	1

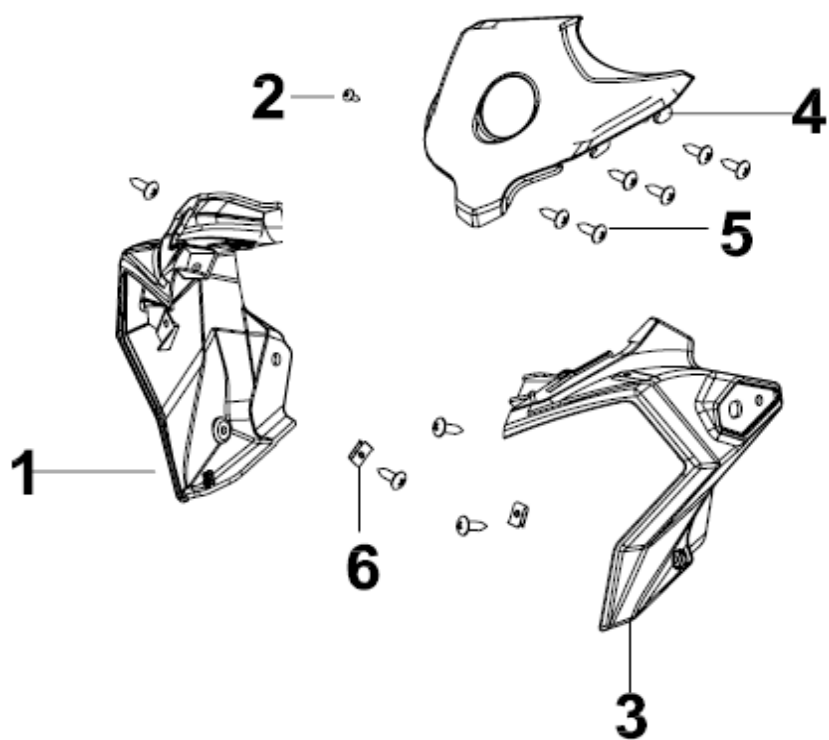


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F19-1	65531K69HP00	BRACKET ASSY., COWLING,R GRAY HP	1
RKV 125-200S-AERO 200	F19-2	B05004001025	SCREW ST4×10	1
RKV 125-200S-AERO 200	F19-3	65521K69HP00	BRACKET ASSY., COWLING,L GRAY HP	1
RKV 125-200S-AERO 200	F19-4	65541K690000	BRACKET ASSY.,COWLING	1
RKV 125-200S-AERO 200	F19-5	B05004201305	SCREW ST4.2×13	10
RKV 125-200S-AERO 200	F19-6	65801T020020	INSERT ST4.2	6

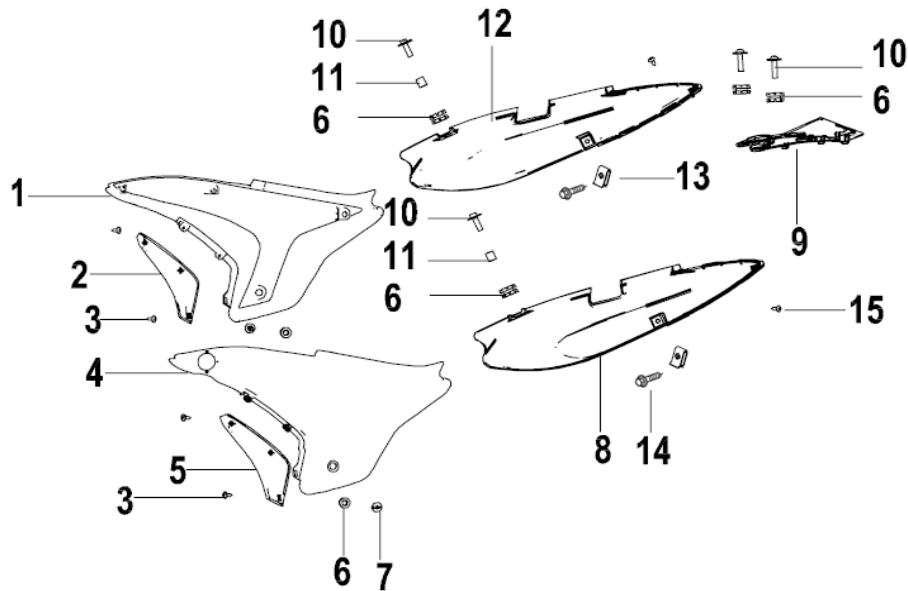


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F20-1	65602J80HP00	SIDE COVER, R GRAY HP,without sticker	1
RKV 125-200S-AERO 200	F20-2	65622J80B400	SIDECOVER,R BLACK B4	1
RKV 125-200S-AERO 200	F20-3	B05004201305	SCREW ST4.2×13	4
RKV 125-200S-AERO 200	F20-4	65601J80HP00	REAR TAIL COVER,L GRAY HP	1
RKV 125-200S-AERO 200	F20-5	65621J80B400	SIDECOVER,L BLACK B4	1
RKV 125-200S-AERO 200	F20-6	47028G220000	RUBBER SLEEVE	6
RKV 125-200S-AERO 200	F20-7	08001J800000	SCREW M6×11.5	2
RKV 125-200S-AERO 200	F20-8	65901J80WF00	COVER,PROTECTIVE,L,WHITE WF	1
RKV 125-200S-AERO 200	F20-8	65901J80BC00	COVER,PROTECTIVE,L,BLACK BC	1
RKV 125-200S-AERO 200	F20-8	65901J80TL00	COVER,PROTECTIVE,L,RED TL	1
RKV 125-200S	F20-8	65901J80EX00	COVER,PROTECTIVE,L,BLUE EX	1
RKV 125-200S	F20-8	65901J80M900	COVER,PROTECTIVE,L,ORANGE M9	1
RKV 125-200S	F20-8	65901J80CJ00	COVER,PROTECTIVE,L, SILVER CJ	1
RKV 200S	F20-8	65901J80041Z	COVER,PROTECTIVE,L,WHITE WF,with RKV 200 sticker	1
RKV 200S	F20-8	65901J80042Z	COVER,PROTECTIVE,L,BLACK BC,with RKV 200 sticker	1
RKV 200S	F20-8	65901J80043Z	COVER,PROTECTIVE,L,RED TL,with RKV 200 sticker	1
RKV 200S	F20-8	65901J80040Z	COVER,PROTECTIVE,L,BLUE EX,with RKV 200 sticker	1
RKV 200S	F20-8	65901J80045Z	COVER,PROTECTIVE,L,ORANGE M9,with RKV 200 sticker	1
RKV 200S	F20-8	65901J80044Z	COVER,PROTECTIVE,L, SILVER CJ,with RKV 200 sticker	1
RKV 125-200S-AERO 200	F20-9	65605J80B400	CONNECTING PIECES,SIDE COVER BLACK B4	1
RKV 125-200S-AERO 200	F20-10	B13060601605	COMBINATION SCREW M6×16	4
RKV 125-200S-AERO 200	F20-11	08061K670000	BUSH	2
RKV 125-200S-AERO 200	F20-12	65902J80WF00	COVER,PROTECTIVE,RH,WHITE WF	1
RKV 125-200S-AERO 200	F20-12	65902J80BC00	COVER,PROTECTIVE,RH,BLACK BC	1
RKV 125-200S-AERO 200	F20-12	65902J80TL00	COVER,PROTECTIVE,RH,RED TL	1
RKV 125-200S	F20-12	65902J80EX00	COVER,PROTECTIVE,RH,BLUE EX	1
RKV 125-200S	F20-12	65902J80M900	COVER,PROTECTIVE,RH,ORANGE M9	1
RKV 125-200S	F20-12	65902J80CJ00	COVER,PROTECTIVE,RH, SILVER CJ	1
RKV 200S	F20-12	65902J80041Z	COVER,PROTECTIVE,RH,WHITE WF,with RKV 200 sticker	1
RKV 200S	F20-12	65902J80042Z	COVER,PROTECTIVE,RH,BLACK BC,with RKV 200 sticker	1

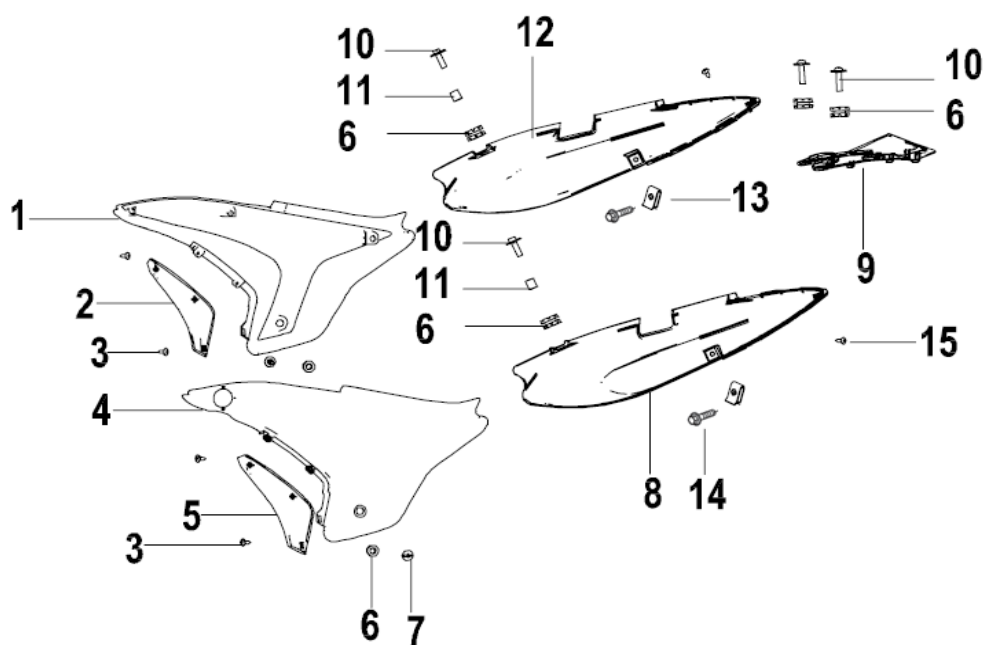


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S	F20-12	65902J80043Z	VER,PROTECTIVE,RH,RED TRH,with RKV 200 stic	1
RKV 200S	F20-12	65902J80040Z	VER,PROTECTIVE,RH,BLUE EX,with RKV 200 stic	1
RKV 200S	F20-12	65902J80045Z	ER,PROTECTIVE,RH,ORANGE M9,with RKV 200 s	1
RKV 200S	F20-12	65902J80044Z	VER,PROTECTIVE,RH, SILVER CJ,with RKV 200 st	1
RKV 125-200S-AERO 200	F20-13	08053T020010	NUT	2
RKV 125-200S-AERO 200	F20-14	B01090601665	BOLT M6×16	2
RKV 125-200S-AERO 200	F20-15	B05004201305	SCREW ST4.2×13	2

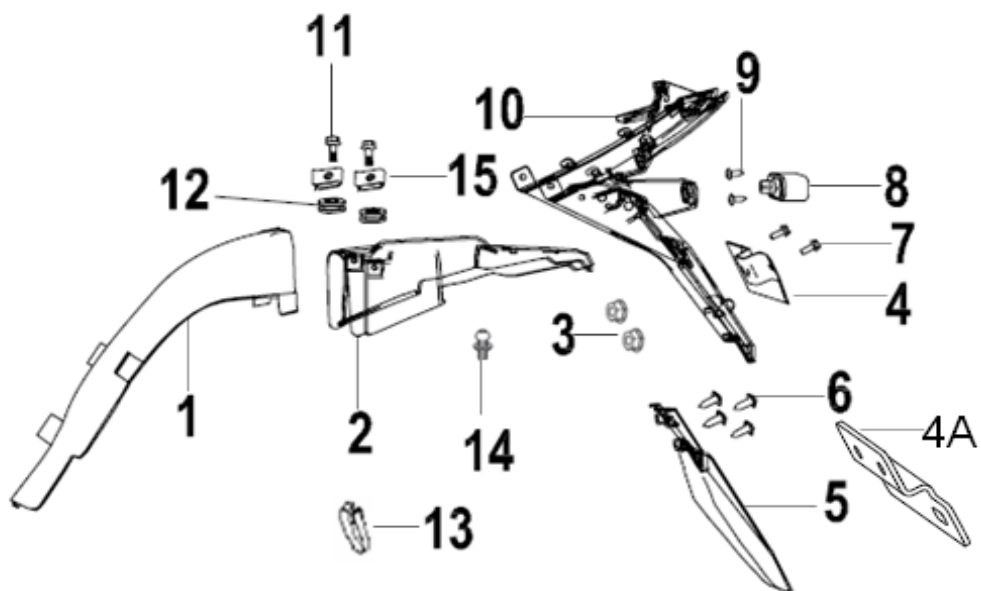


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F21-1	65731J00000A	FORESIDE, REAR. FENDER	1
RKV 125-200S-AERO 200	F21-2	65732J800000	FORESIDE 2, REAR. FENDER	1
RKV 125-200S-AERO 200	F21-3	B04070600055	NUT M6	2
RKV 125-200S-AERO 200	F21-4	08252J820000	SUPPORT,LINCENSE PLATE	1
RKV 200S	F21-4A	08252K660000	SUPPORT,LINCENSE PLATE	1
RKV 125-200S-AERO 200	F21-5	65709J800000	REAR FENDER 2	1
RKV 125-200S-AERO 200	F21-6	B05004201305	SCREW ST4.2×13	4
RKV 125-200S-AERO 200	F21-7	B01090603065	BOLT M6×30	2
RKV 125-200S-AERO 200	F21-8	82900D010000	LAMP,LICENCE	1
RKV 125-200S-AERO 200	F21-9	B05074201305	SCREW ST4.2×13	2
RKV 125-200S-AERO 200	F21-10	65701J800000	REAR FENDER 1	1
RKV 125-200S-AERO 200	F21-11	B01090601665	BOLT M6×16	2
RKV 125-200S-AERO 200	F21-12	65704J000000	WASHER,RUBBER	2
RKV 125-200S-AERO 200	F21-13	65708J000000	CLIP	1
RKV 125-200S-AERO 200	F21-14	B13060601605	SCREW W/WASHER M6×16	1
RKV 125-200S-AERO 200	F21-15	65625J560000	NUT	2

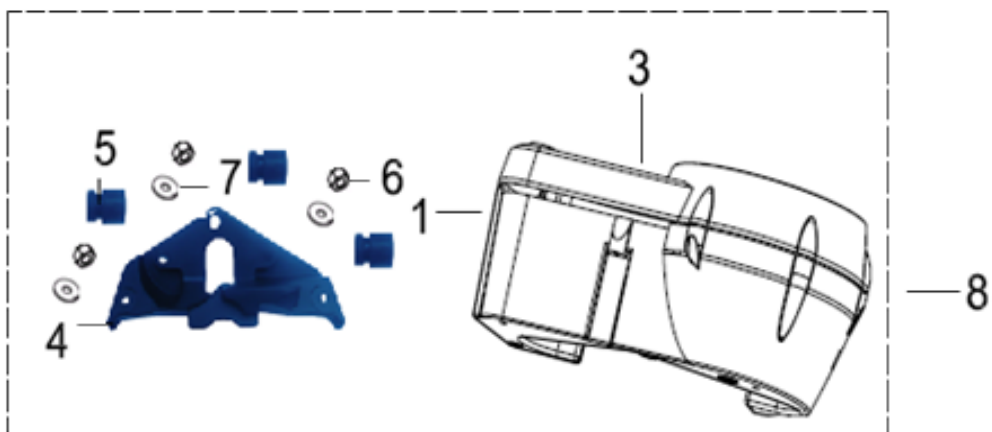


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S-AERO 200	F22-1	70000K690001	SPEEDOMETER ASSY	1
RKV 125-200S-AERO 200	F22-3	70001J300000	COVER,SPEEDOMETER	1
RKV 125-200S-AERO 200	F22-4	65543K690000	FIXING BORAD,SPEEDOMETER	1
RKV 125-200S-AERO 200	F22-5	70027J000000	CUSHION	3
RKV 125-200S-AERO 200	F22-6	B04000600053	NUT 6MM	3
RKV 125-200S-AERO 200	F22-7	B07020000603	WASHER 6MM	3
RKV 200S-AERO 200	F22-8	70000M04000Z	SPEEDOMETER ASSY.COMP	1

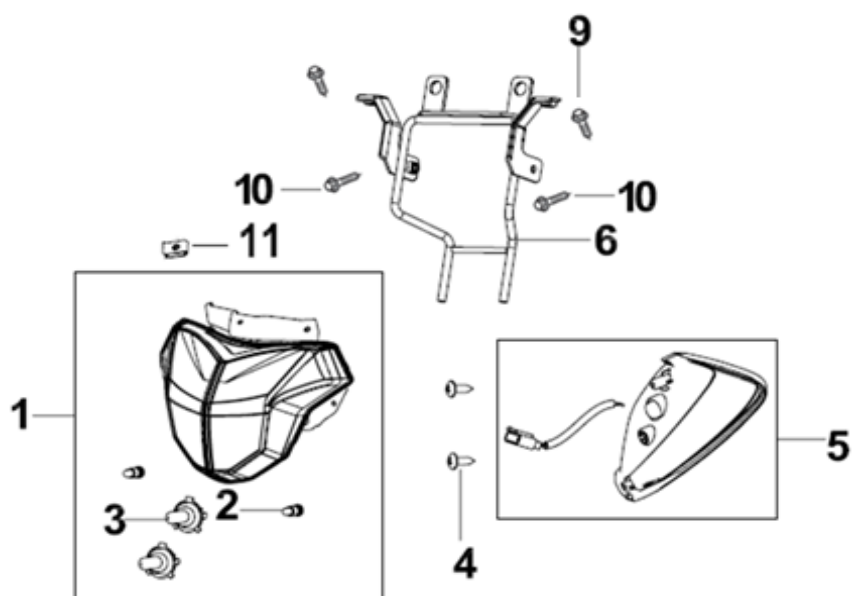


Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F23-1	80000K670000	HEAD LIGHT	1
RKV 125-200S-AERO 200	F23-2	B24013120000	BULB W5W	2
RKV 125-200S-AERO 200	F23-3	B24010320000	BULB HS1	2
RKV 125-200S-AERO 200	F23-4	B05004801605	SCREW ST4.8×16	2
RKV 125-200S-AERO 200	F23-5	82000J800000	REAR LAMP	1
RKV 125-200S-AERO 200	F23-6	08330K690000	BRACKET ASSY,HEAD LIGHT	1
RKV 125-200S-AERO 200	F23-9	B01090601665	BOLT M6×16	2
RKV 125-200S-AERO 200	F23-10	B01090602065	BOLT M6×20	2
RKV 125-200S-AERO 200	F23-11	65625J560000	NUT	1

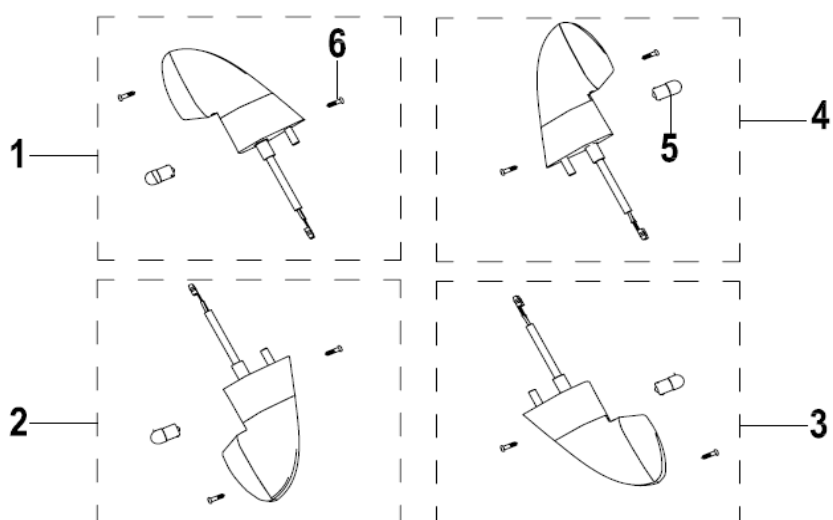

Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 125-200S-AERO 200	F24-1	81300J800000	TURN SIGNAL, FR., RH.	1
RKV 125-200S-AERO 200	F24-2	81100J800000	TURN SIGNAL, FR., LH.	1
RKV 125-200S-AERO 200	F24-3	81700J800000	TURN SIGNAL, RR., RH.	1
RKV 125-200S-AERO 200	F24-4	81500J800000	TURN SIGNAL, RR., LH.	1
RKV 125-200S-AERO 200	F24-5	B24014020000	BULB RY10	4
RKV 125-200S-AERO 200	F24-6	B0500300120A	SCREW SELF-TAPPING ST3.0×12	4

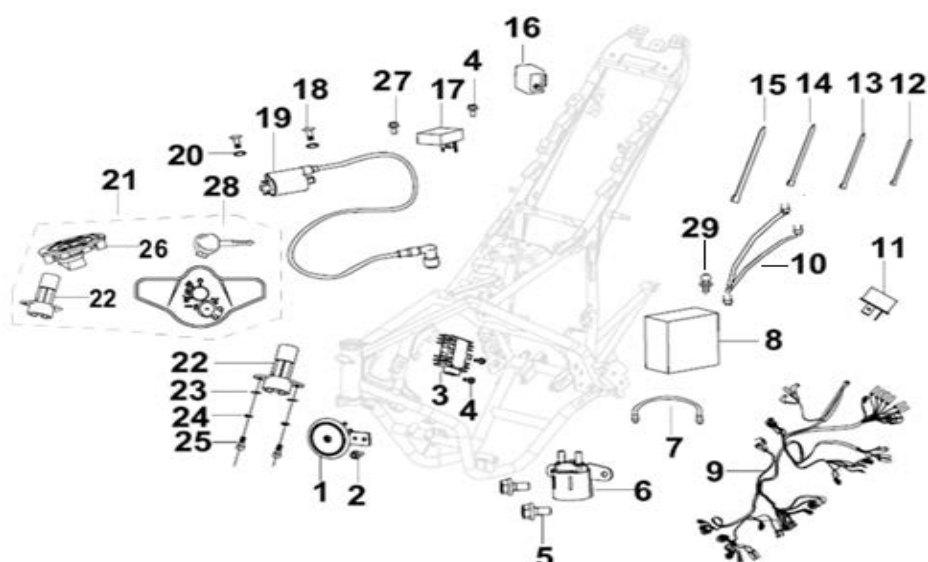

Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S-AERO 200	F25_2-1	95100M030000	HORN	1
RKV 200S-AERO 200	F25_2-2	B01090801265	BOLT M8×12	1
RKV 200S-AERO 200	F25_2-3	299083090010	RECTIFIER ASSY.	1
RKV 200S-AERO 200	F25_2-4	B01090602065	BOLT M6×20	2
RKV 200S-AERO 200	F25_2-5	B01090601265	BOLT M6×12	2
RKV 200S-AERO 200	F25_2-6	94100J000002	START-UP RELAY	1
RKV 200S-AERO 200	F25_2-7	92200J000000	ELECTRIC CABLE	1
RKV 200S-AERO 200	F25_2-8	96010J000020	BATTERY 12N9-4B	1
RKV 200S-AERO 200	F25_2-9	92000M030001	CABLE ASSY	1
RKV 200S-AERO 200	F25_2-10	92500J400000	EARTH WIRE	1
RKV 200S-AERO 200	F25_2-11	96700K060000	ACTUATING DIODE	1
RKV 200S-AERO 200	F25_2-12	96001J000000	CLAMP 150MM	6
RKV 200S-AERO 200	F25_2-13	96002J000000	CLAMP 200MM	2
RKV 200S-AERO 200	F25_2-14	96003J000000	CLAMP 250MM	2
RKV 200S-AERO 200	F25_2-15	96004J000000	CLAMP 300MM	1
RKV 200S-AERO 200	F25_2-16	96400K010001	FLASHER	1
RKV 200S-AERO 200	F25_2-17	299055140000	C.D.I	1
RKV 200S-AERO 200	F25_2-18	B02000501225	SCREW M5×12	2
RKV 200S-AERO 200	F25_2-19	96200J060001	COIL ASSY.,IGNITION	1
RKV 200S-AERO 200	F25_2-20	B07210000501	WASHER 5mm	2
RKV 200S	F25_2-21	88000K690000	LOCK SETS	1
RKV 200S-AERO 200	F25_2-21	88000M040000	LOCK SETS,without mark	1
RKV 200S	F25_2-22	88100K690000	MAIN SWITCH ASSY.	1
RKV 200S-AERO 200	F25_2-22	88100M040000	MAIN SWITCH ASSY.,without mark	1
RKV 200S-AERO 200	F25_2-23	B07000000804	WASHER 8mm	2
RKV 200S-AERO 200	F25_2-24	B07030000804	WASHER 8mm	2
RKV 200S-AERO 200	F25_2-25	B02050802064	BOLT M8×20	2
RKV 200S	F25_2-26	88400K690000	CAP COMP,FUEL TANIK	1
RKV 200S-AERO 200	F25_2-26	88400M040000	CAP COMP,FUEL TANIK,without mark	1
RKV 200S-AERO 200	F25_2-27	B01090601665	BOLT M6×16	2
RKV 200S-AERO 200	F25_2-28	88900K690000	KEY NUT	1
RKV 200S-AERO 200	F25_2-29	B13170601205	SCREW W/WASHER M6×12	1

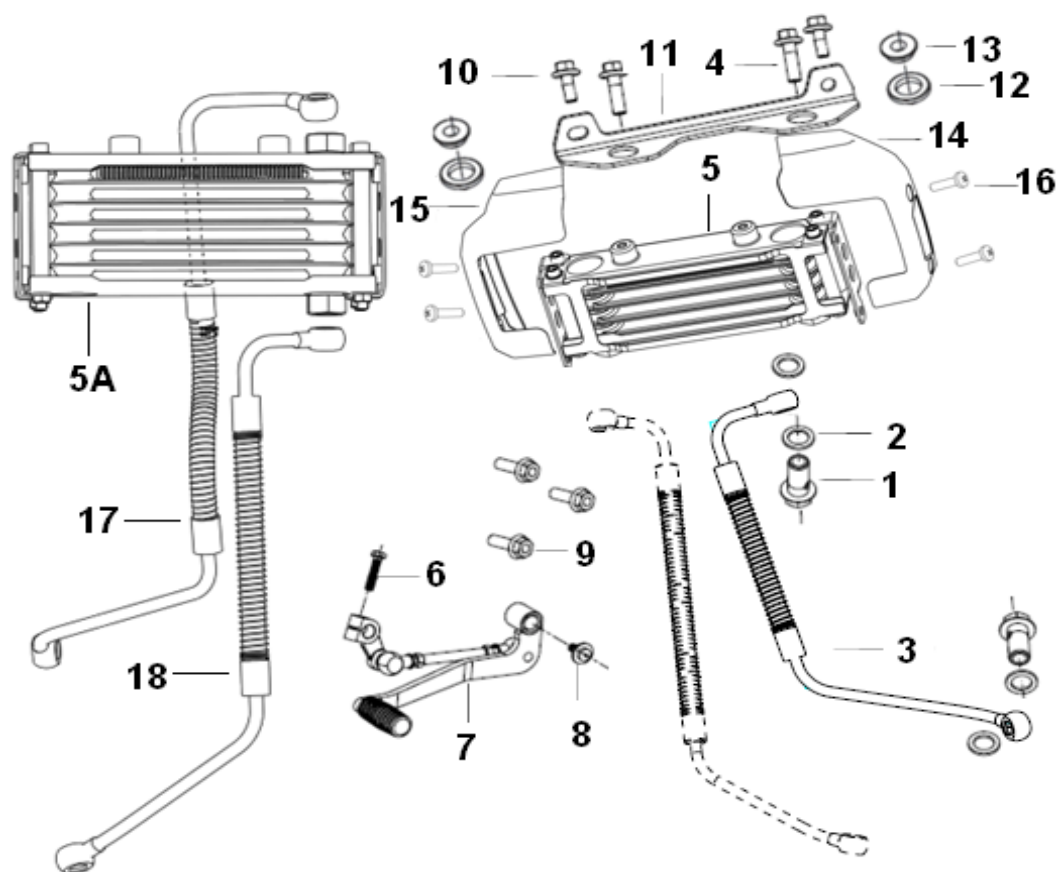

Model	Ref No.	CODE	DESCRIPTION	Qty
RKV 200S-AERO 200	F26_2-1	15006404001X	BOLT	2
RKV 200S-AERO 200	F26_2-2	270105100000	WASHER	4
RKV 200S	F26_2-3	270085140001	PIPE,INTAKE	1
RKV 200S-AERO 200	F26_2-4	B01090602065	BOLT M6×20	2
RKV 200S	F26_2-5	279235140001	OIL COOLER	1
RKV 200S-AERO 200	F26_2-5A	279235140002	OIL COOLER	1
RKV 200S-AERO 200	F26_2-6	B01030602265	BOLT M6×22	1
RKV 200S-AERO 200	F26_2-7	08370M030000	GEAR-SHIFT PEDAL LEVER ASSY	1
RKV 200S-AERO 200	F26_2-8	B13060601605	SCREW W/WASHER M6×16	1
RKV 200S-AERO 200	F26_2-9	B01070603064	BOLT M6×30	3
RKV 200S-AERO 200	F26_2-10	B01090601265	BOLT M6×12	2
RKV 200S	F26_2-11	58161M030000	FIXING BOARD,OIL COOLER	1
RKV 200S-AERO 200	F26_2-11	58161M030001	FIXING BOARD,OIL COOLER	1
RKV 200S-AERO 200	F26_2-12	08331J040000	WASHER	2
RKV 200S-AERO 200	F26_2-13	08305J040050	BUSH	2
RKV 200S-AERO 200	F26_2-14	65402M030000	DECORATIVE BOARD,OIL COOLER,LEFT	1
RKV 200S-AERO 200	F26_2-15	65422M030000	DECORATIVE BOARD,OIL COOLER,RIGHT	1
RKV 200S-AERO 200	F26_2-16	B0200060162L	SCREW M6×16	4
RKV 200S-AERO 200	F26_2-17	270085140002	PIPE,	1
RKV 200S-AERO 200	F26_2-18	270075140002	PIPE,INTAKE	1