 
 


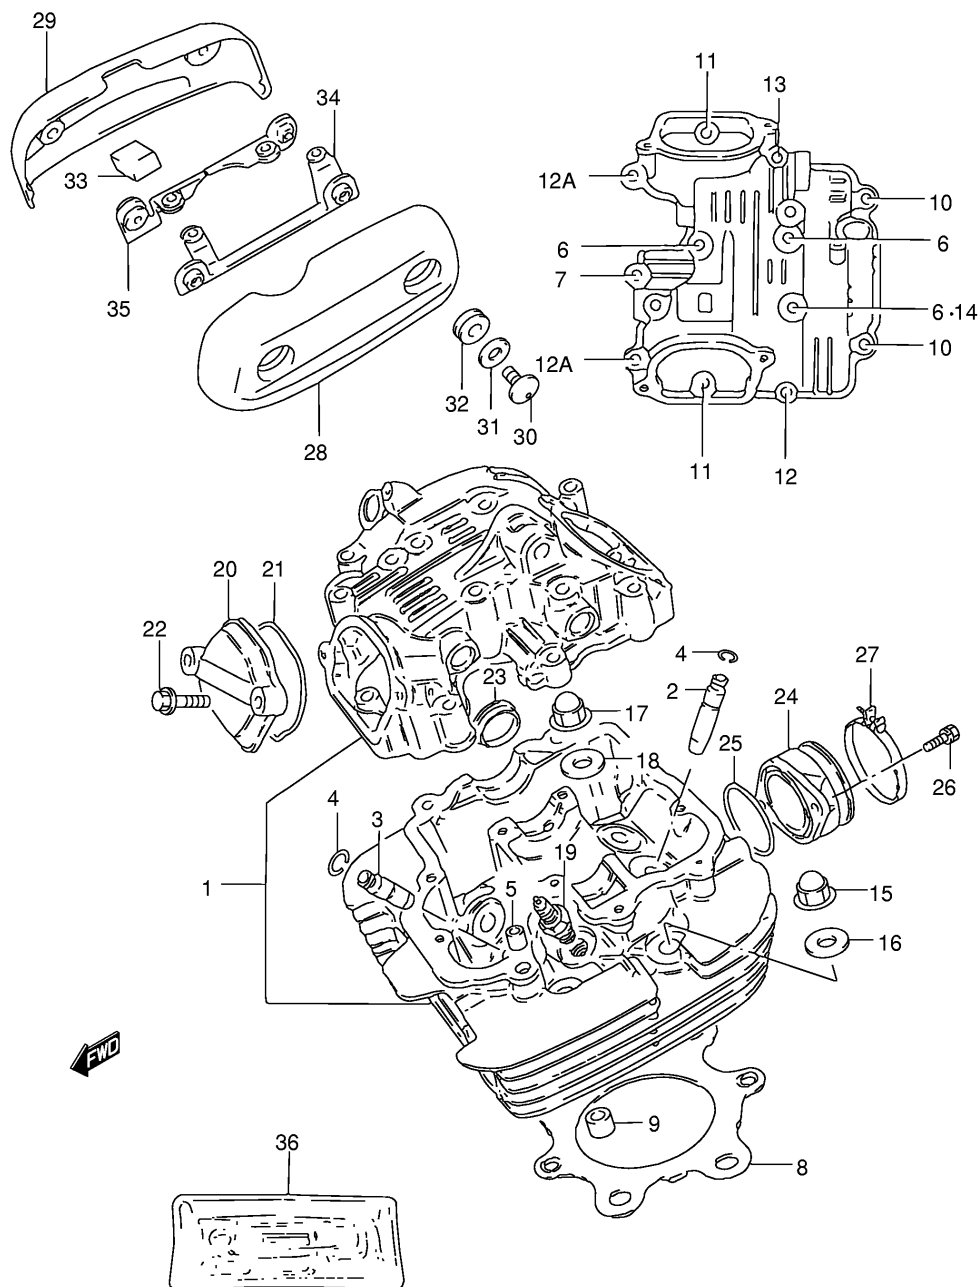




Ref No	Part No	Description
1	11100-25D00	Head Assy, Cylinder
1	11100-25D01	Head Assy, Cylinder
2	11115-38270	. . Guide, Valve
3	11115-05270	. . Guide, Valve
4	09381-10004	. . Snap Ring
5	09206-08001	. . Pin (6.2x8x11)
6	01550-06607	. . Bolt (chrome)
6	01550-06603	. . Bolt (green)
7	01550-06307	. . Bolt (chrome)
7	01550-06303	. . Bolt (green)
8	11141-38201	Gasket, Cylinder Head
9	04211-13189	Pin
10	09103-06148	Bolt (6x120)
11	01550-06307	Bolt (chrome)
11	01550-06303	Bolt (green)
12	01550-06457	Bolt (chrome)
12	01550-06453	Bolt (green)
12a	01550-06507	Bolt (chrome)
12a	01550-06503	Bolt (green)
13	01550-06607	Bolt (chrome)
13	01550-06603	Bolt (green)
14	09168-06023	Gasket (5.8x13x1.2)
15	09159-10026	Nut
16	09160-10060	Washer
17	09159-10069	Nut
18	09168-10017	Gasket (10.5x22x2)
19	09482-00399	Spark Plug (ngk,dr8ea)
19	09482-00223	Spark Plug (denso,x24esr-u)
20	11175-38202	Cap, Inspection
21	09280-55003	O Ring
22	01550-06257	Bolt (chrome)
22	01550-06253	Bolt (green)
23	09241-30004	Plug
24	13110-13F00	Pipe, Intake
25	09280-40010	O Ring (d:2.4,id:39.7)
26	02122-06163	Screw
27	09402-48208	Clamp
28	11171-13F00	Cap, Cylinder Head Cover Lh
29	11172-13F00	Cap, Cylinder Head Cover Rh
30	11178-12F10	Bolt, Head Cover Cap
31	09160-06134	Washer (6.5x24x1.6)
32	09320-13015	Cushion
33	11178-13F00	Damper, Head Cap Rh
34	11179-13F00	Bracket, Head Cap Lh
35	11179-13F10	Bracket, Head Cap Rh
36	11401-13821	Gasket Set

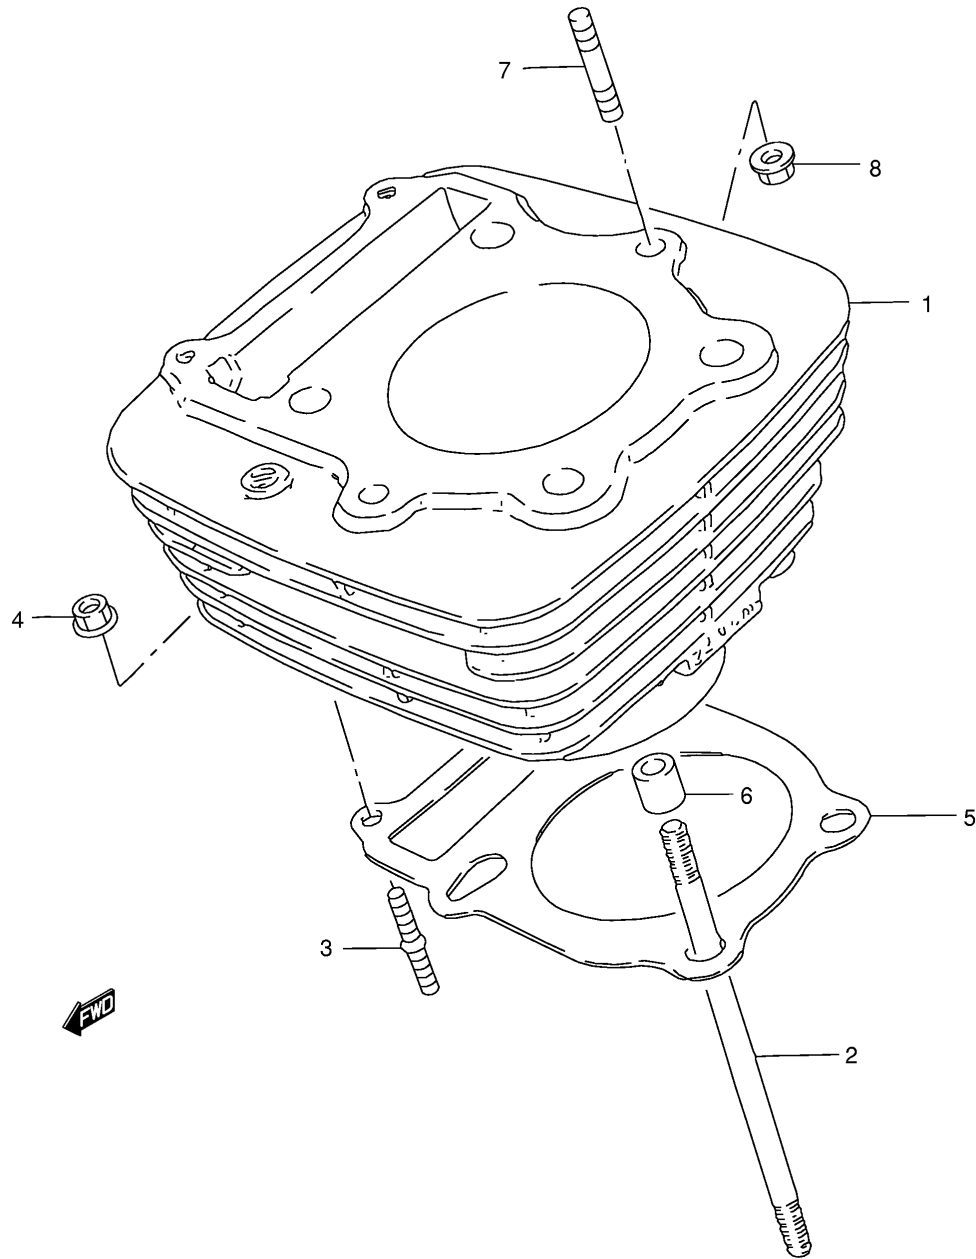


Ref No	Part No	Description
1	11210-38203-0F0	Cylinder
1	11210-38204-0F0	Cylinder
2	09108-10030	Stud Bolt (l:141)
3	01421-06208	Stud Bolt
4	08316-10067	Nut
5	11241-38301	Gasket, Cylinder
6	04211-13189	Pin
7	01421-06307	Stud Bolt
8	08316-10067	Nut

Ref No	Part No	Description
1	11300-38863	Crankcase Set
2	04211-13189	• Pin
3	01547-06357	• Bolt
4	01547-06457	• Bolt
5	01547-06553	• Bolt
6	01547-06603	• Bolt
7	09280-10016	• O Ring (d:1.9,id:9.8)
8	09103-08037	Bolt (8x67)
9	09103-08070	Bolt (8x100)
10	09103-08081	Bolt (8x50)
11	08319-31087	Nut

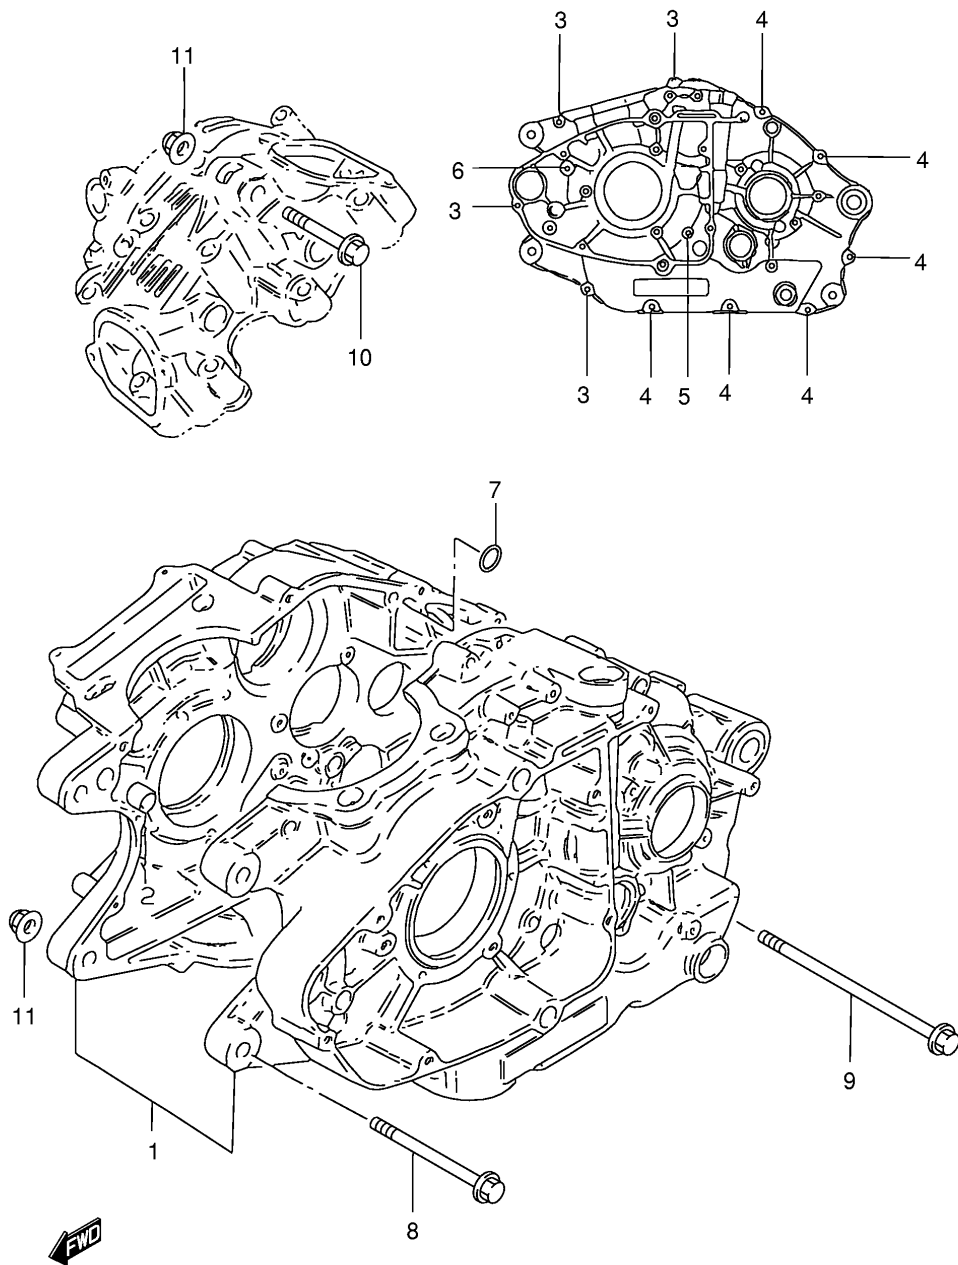 

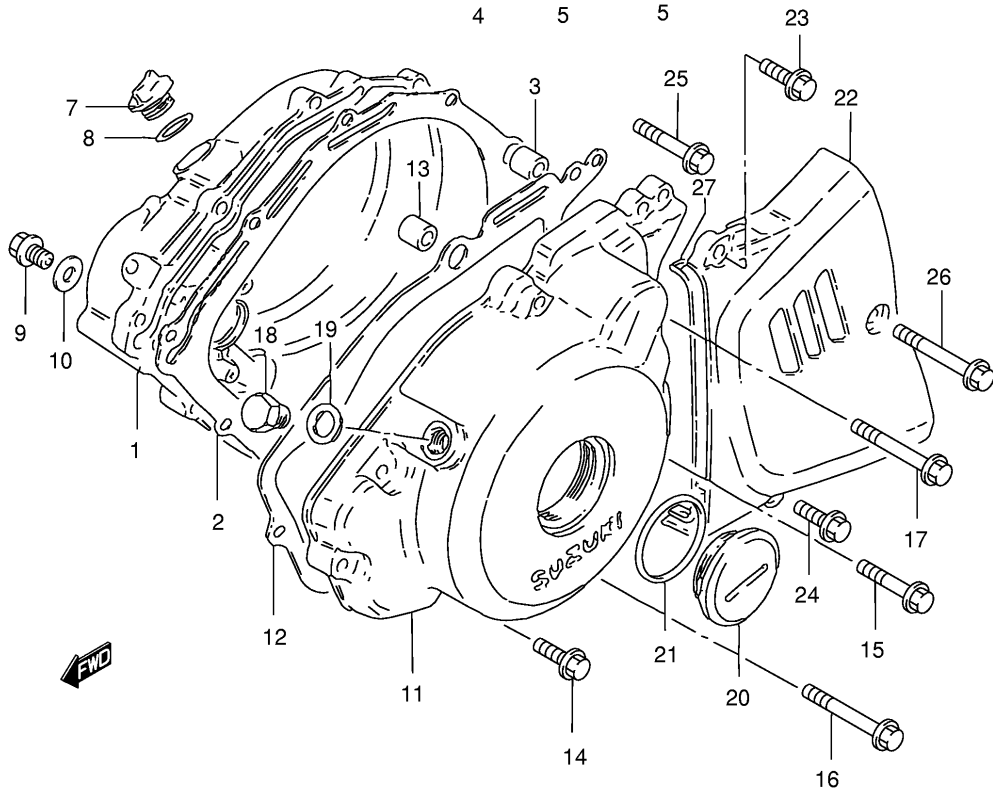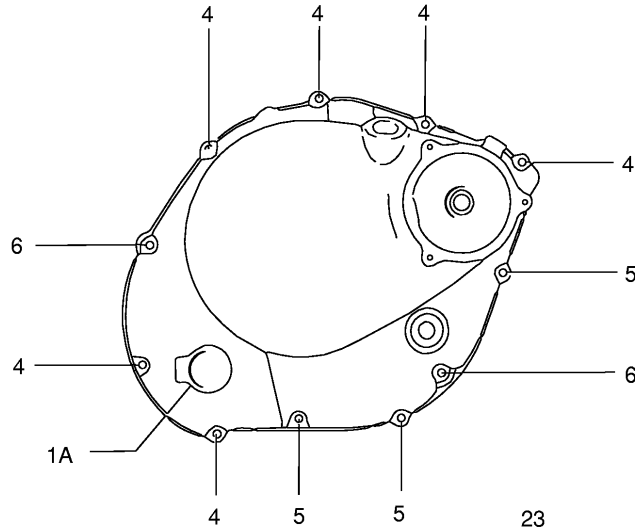  

Ref No	Part No	Description
1	11340-38302	Cover, Clutch
1a	11971-45010	• . Lens, Oil Level Check
2	11482-38311	Gasket, Clutch Cover
3	04211-13189	Pin
4	01547-06257	Bolt
5	01547-06357	Bolt
6	01547-06457	Bolt
7	09259-20007	Plug (20x10)
8	09280-17003	O Ring (d:3.1,id:16.8)
9	09247-14012	Plug
10	09168-14002	Gasket (13.8x18.8x0.4)
11	11351-38300	Cover, Magneto
12	11483-37D00	Gasket, Magneto Cover
13	04211-13189	Pin
14	01547-06257	Bolt
15	01547-06357	Bolt
16	01547-06507	Bolt
17	01547-06607	Bolt
18	09247-12104	Plug
19	09168-12002	Gasket (12.1x16.2x3.7)
20	09259-36011	Plug
21	09280-33004	O Ring (d:3.1,id:32.7)
22	11361-38300	Cover, Engine Sprocket
23	01547-05207	Bolt
24	01547-05257	Bolt
25	01547-05307	Bolt
26	01547-05457	Bolt
27	11362-38300	Damper, Engine Sprocket Cover

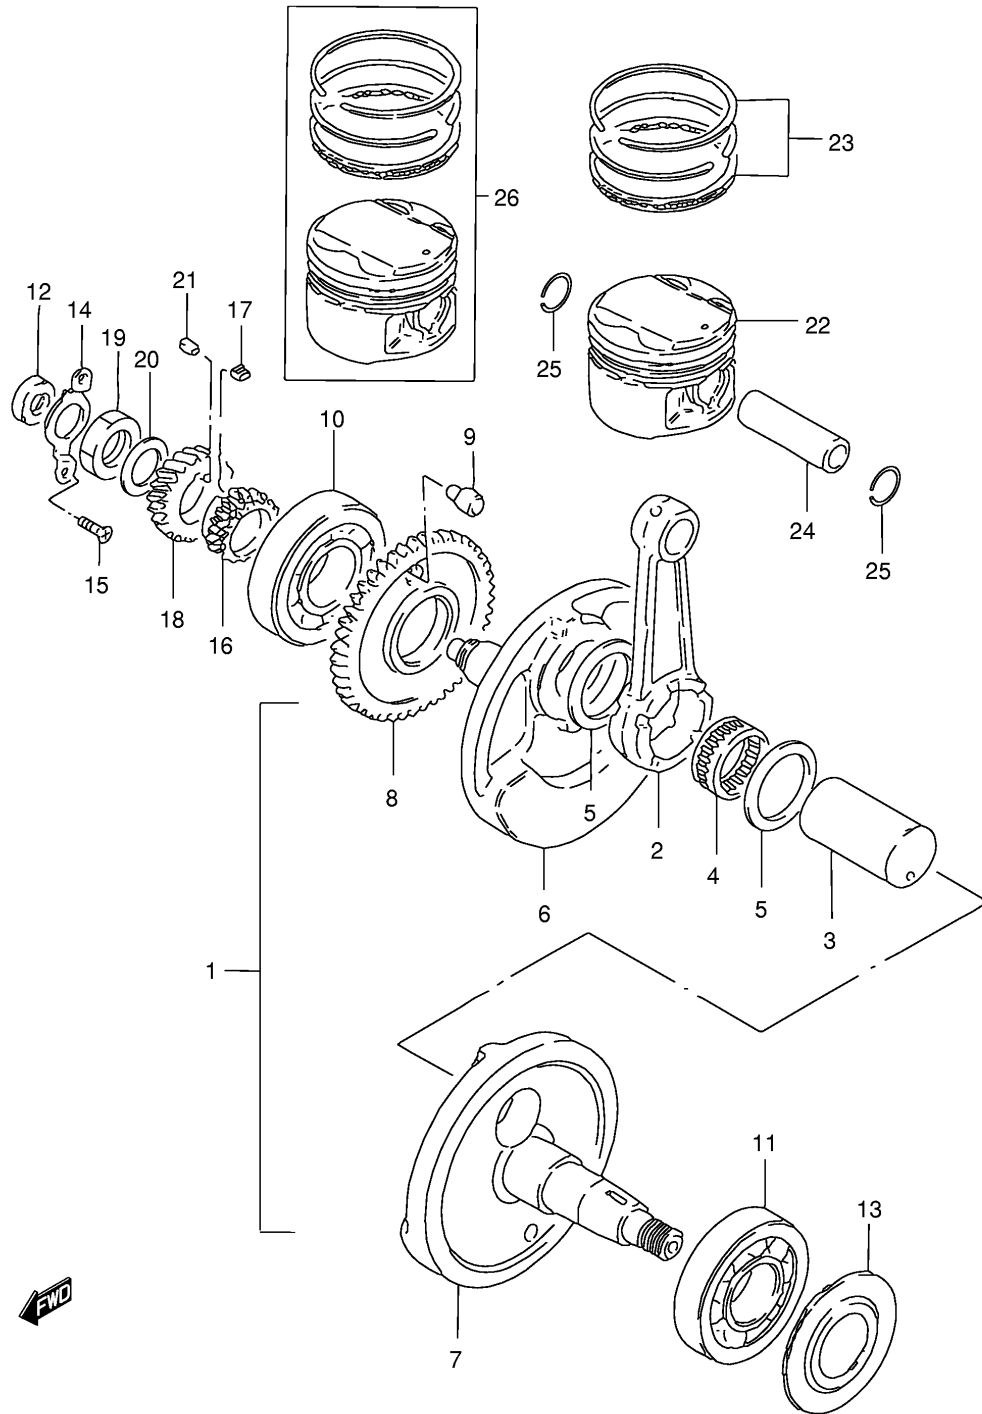 


Ref No	Part No	Description
1	12200-38310	Crankshaft Assy
2	12161-38201	• . Rod, Connecting
3	12211-38211	• . Pin, Crank
4	09263-31004	• . Bearing (31x39x21)
5	09160-31002	• . Washer (31x48.5x1)
6	12221-38200	• . Crankshaft, Rh
7	12261-38300	• . Crankshaft, Lh
8	12661-38202	• . Gear, Crank Balancer Drive
9	09209-12006	• . Pin
10	09262-30077	Bearing (30x72x19)
11	09262-35028	Bearing (35x80x21)
12	09282-14001	Oil Seal (14x26x6)
13	12521-38300	Washer, Crankshaft Oil Sealing
14	12548-38200	Retainer, Cshaft Oil Seal Rh
15	02122-05103	Screw
16	12731-38200	Sprocket, Cam Chain Drive
17	12749-32400	Key, Sprocket
18	21111-38200	Gear, Primary Drive (nt:21)
19	09140-20008	Nut
20	09164-20003	Washer
21	09421-07002	Key
22	12111-38201-0F0	Piston
23	12140-49270	Ring Set, Piston
24	12151-15501	Pin, Piston
25	09381-18002	Snap Ring
26	12100-38200-050	Piston Set (os:0.5)
26	12100-38200-100	Piston Set (os:1.0)


(nt:21)




Ref No	Part No	Description
1	12611-38300	Gear, Starter Idler (nt:19/51)
2	09206-13007	Pin
3	12600-38813	Clutch Set, Starter
4	12633-31000	• . Piece, Push
5	09261-14001	• . Roller
6	09440-04015	• . Spring
7	01500-08203	Bolt
8	12649-49300	Shim, Starter Clutch Hub
9	09160-27005	Washer (27x40x2.5)
10	09263-27004	Bearing
11	09289-52002	Oil Seal

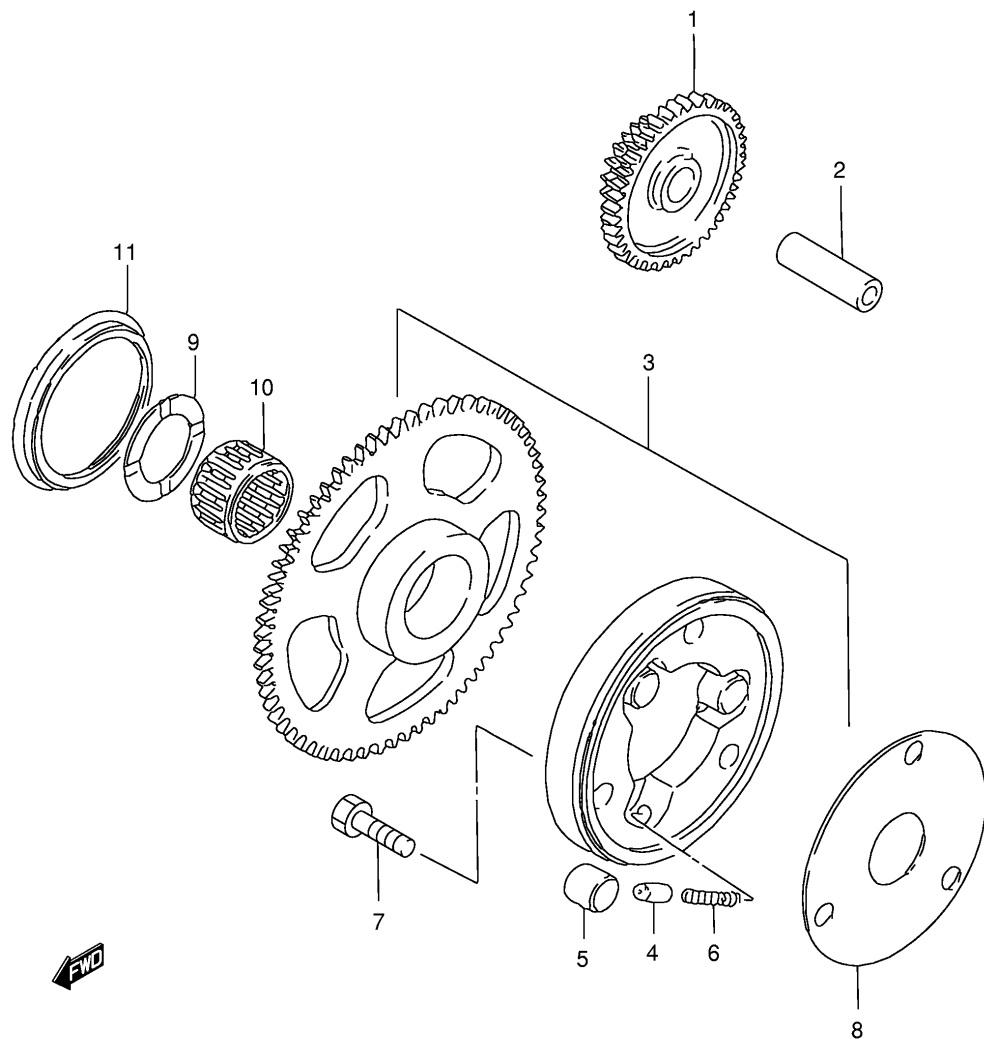 

Ref No	Part No	Description
1	12651-38202	Shaft, Crank Balancer
2	09262-25084	Bearing (25x62x17)
3	12663-38200	Washer
4	12666-38200	Gear, Crank Balancer Driven
5	12669-38200	Race, Crank Balancer Driven
6	09181-25186	Shim (t:0.50)
7	09202-04017	Pin (d:4.5,l:9.5)
8	09420-04008	Key
9	09440-09015	Spring
10	01500-12163	Bolt
11	09160-12076	Thrust Washer

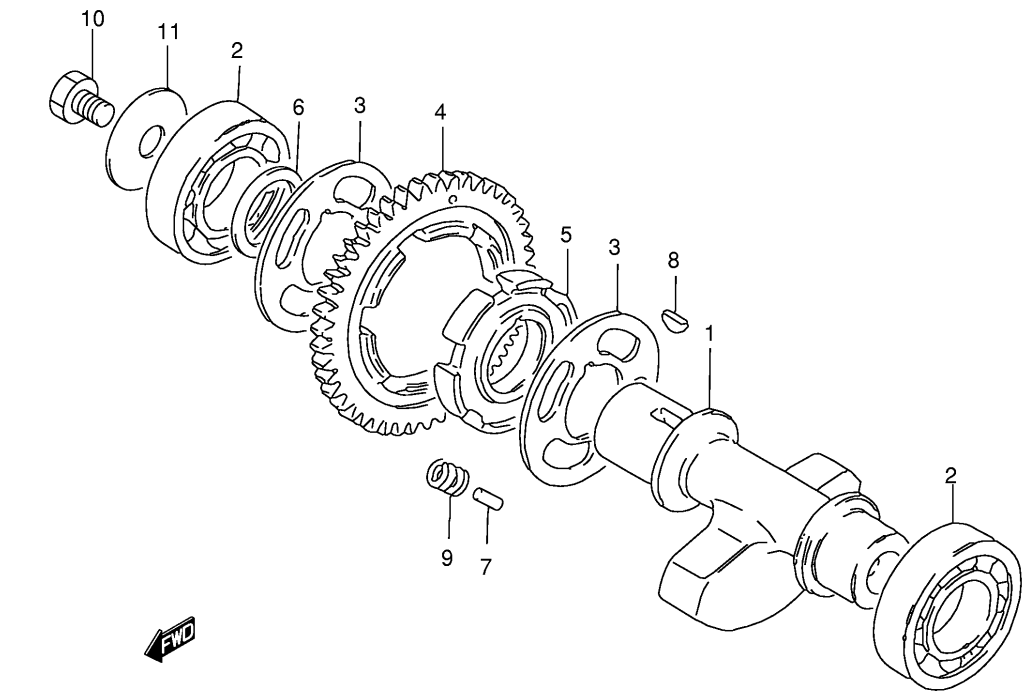 


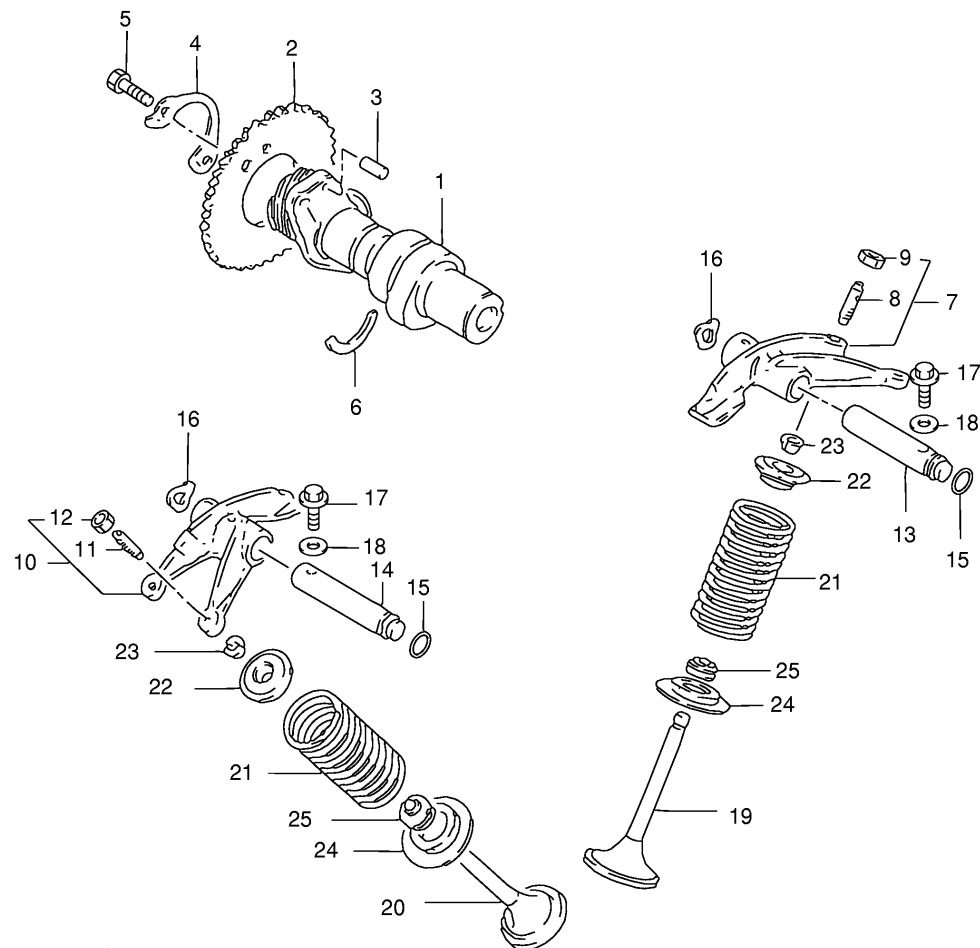 


Ref No	Part No	Description
1	12711-13F00	Cam Shaft
2	12741-37400	Sprocket, Cam Shaft (nt:42)
3	04221-05109	Pin
4	12747-44000	Washer, Sprocket
5	09111-06027	Bolt (6x12.5)
6	09390-25003	C Ring
7	12840-13F00	Arm, Valve Rocker In
8	12842-49201	• . Screw, Tappet Adjusting
9	12843-27A00	• . Nut, Tappet Adjusting
10	12850-13F00	Arm, Valve Rocker Ex
11	12842-49201	• . Screw, Tappet Adjusting
12	12843-27A00	• . Nut, Tappet Adjusting
13	12861-38200	Shaft, Valve Rocker Arm Intake
14	12871-38200	Shaft, Valve Rocker Arm Exhaust
15	09280-09005	O Ring (d:1.9,id:8.6)
16	09164-12018	Washer
17	01550-06303	Bolt
18	09168-06023	Gasket (5.8x13x1.2)
19	12911-38200	Valve, Intake
20	12912-38201	Valve, Exhaust
21	12921-38211	Spring, Valve
22	12931-49200	Retainer, Valve Spring
23	12932-49200	Cotter, Valve
24	12933-38200	Seat, Valve Spring
25	09289-05015	Oil Seal



Ref No	Part No	Description
1	12760-13F00	Chain, Cam Shaft Drive
2	12771-38200	Guide, Cam Chain
3	12811-38200	Tensioner, Cam Chain
4	12812-32400	Bolt, Cam Chain Tensioner
5	09168-08008	Gasket (8.2x14x1)
6	12830-38201	Adjuster Assy, Tensioner
7	12838-38200-H17	• . Gasket, Adjuster Cap
8	12837-24A10	Gasket, Tensioner Adjuster
9	12839-38200	Plug, Adjuster
10	07130-06257	Bolt

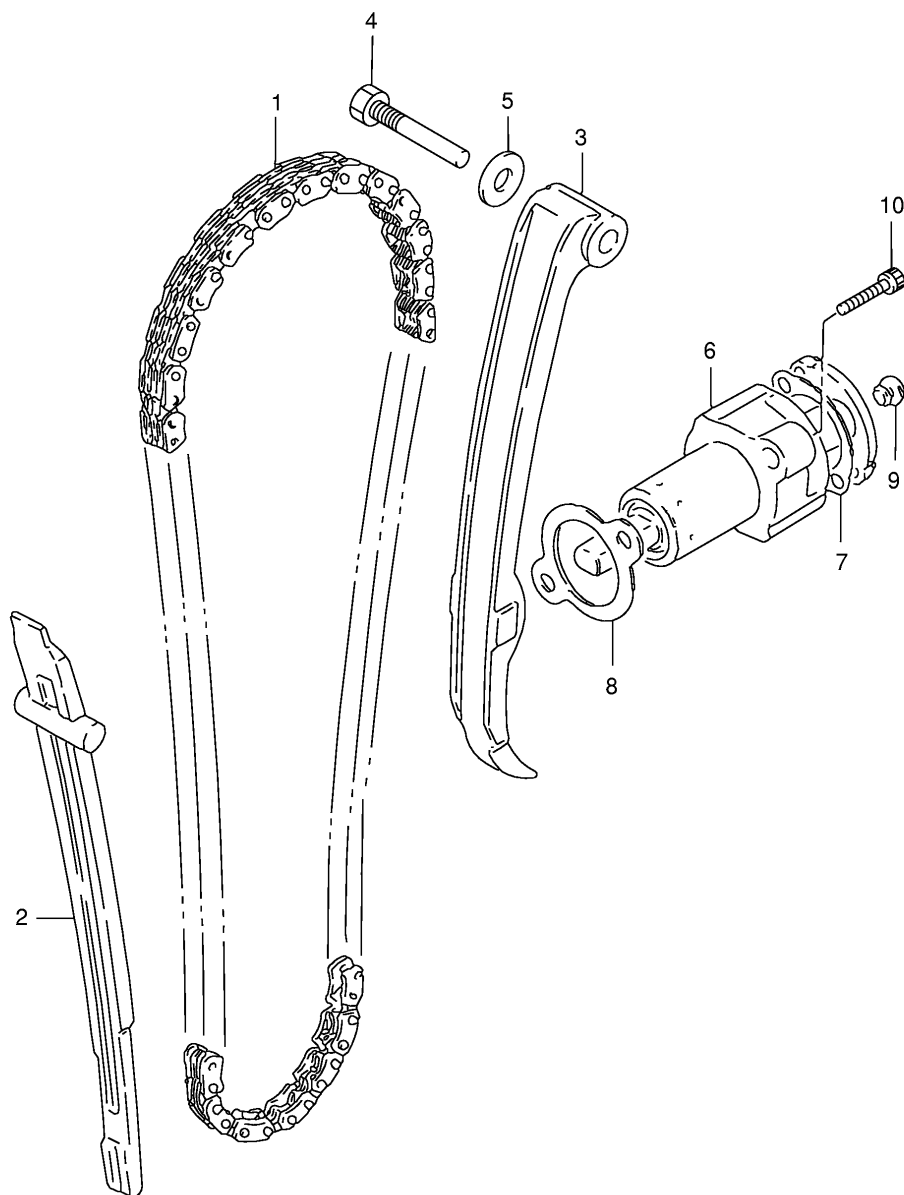 


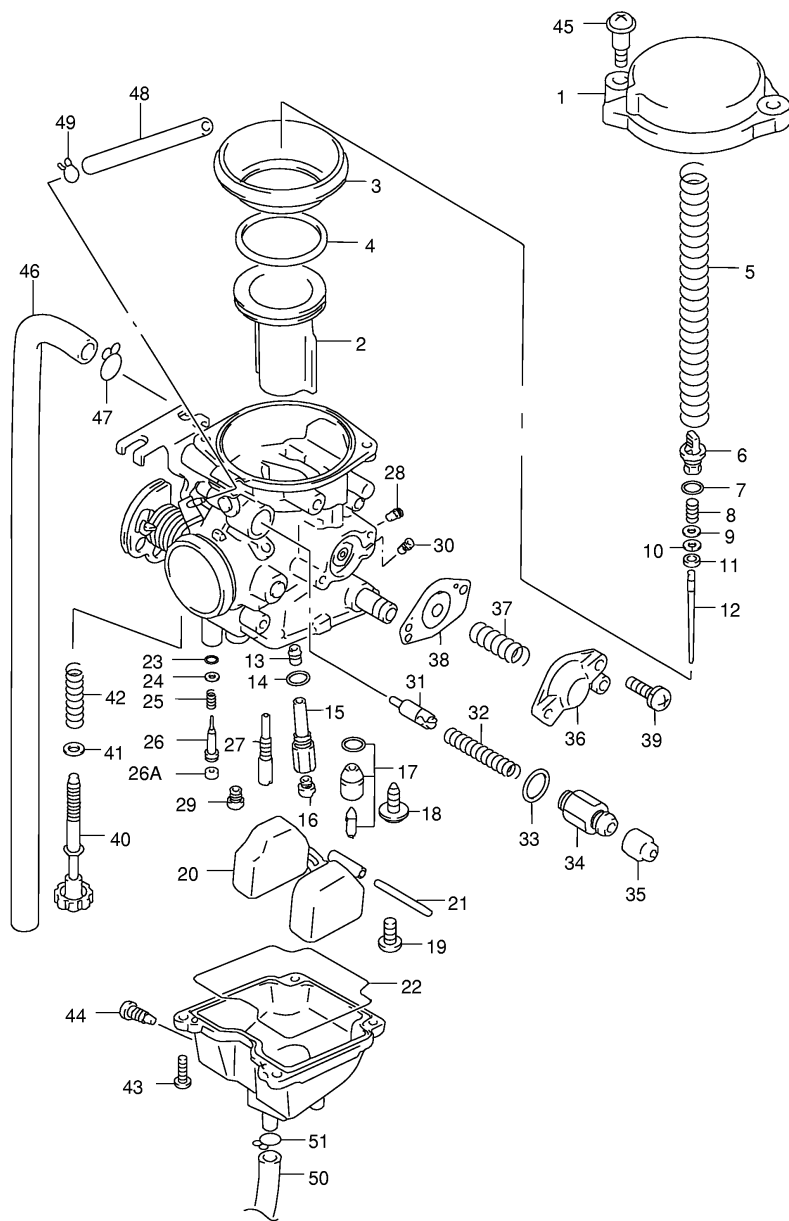 


GZ250Y E01_010
CARBURETOR

Ref No	Part No	Description
	13200-13F00	Carburetor Assy
	13200-13F20	Carburetor Assy
	13200-13F50	Carburetor Assy
1	13502-19E00	. Diaphragm Cover
2	13501-13F00	. Valve, Piston
3	13507-19E00	. Diaphragm
4	13504-16E00	. Ring
5	13573-04F00	. Spring
6	13418-33E00	. Holder
7	09280-05004	. O Ring (d:1.9,id:4.8)
8	13481-04F00	. Spring
9	13382-19E00	. Washer
10	13394-17E60	. E Ring, Multiple Jet Nozzle
11	13387-33E00	. Ring
12	13383-13F00	. Needle, Jet
13	09494-00910	. Jet, Needle (p-0)
14	13246-43010	. O Ring
15	13385-13F00	. Holder, Jet
16	09491-23012	. Jet, Main (115)
17	13370-04F00	. Valve Assy, Needle
18	13602-05A10	. Screw
19	02112-04083	. Screw
20	13250-04F00	. Float Assy
21	13254-01010	. Pin, Float
22	13258-04F00	. Gasket
23	13295-29900	. O Ring
24	13291-29900	. Washer
25	13268-48700	. Spring
26	13279-13F00	. Adjuster (2 1/2)
26	13279-13F00	. Adjuster (1 3/8)
26	13279-13F00	. Adjuster (1 3/4)
26a	13281-05A00	. Plug
27	09492-17016	. Jet
28	09492-87002	. Jet, Main (87.5)
29	09491-52003	. Jet, Main (52.5)
30	09493-28013	. Jet, Pilot Air (140)
30	09493-24013	. Jet, Pilot Air (120)
30	09492-26002	. Jet, Pilot Air (130)
31	13411-24D00	. Plunger
32	13417-07F00	. Spring
33	13278-47090	. O Ring
34	13418-07F00	. Holder, Guide
35	13681-04010	. Cap, Carburetor
36	13502-10F00	. Cover Assy
37	13271-13F00	. Spring
38	13480-13F00	. Diaphragm Assy
39	13601-04148	. Screw
40	13267-13F00	. Adjust Screw Assy
41	13285-07F00	. Packing
42	13342-82370	. Spring
43	02112-04107	. Screw
44	13247-13A00	. Screw, Drain
45	13247-33E00	. Screw

Ref No	Part No	Description
46	13686-13F00	. Hose
47	13671-06A10	. Clip
48	13686-13F10	. Hose
49	13671-13F00	. Clip
50	13686-13F20	. Hose
51	09401-08410	. Clip

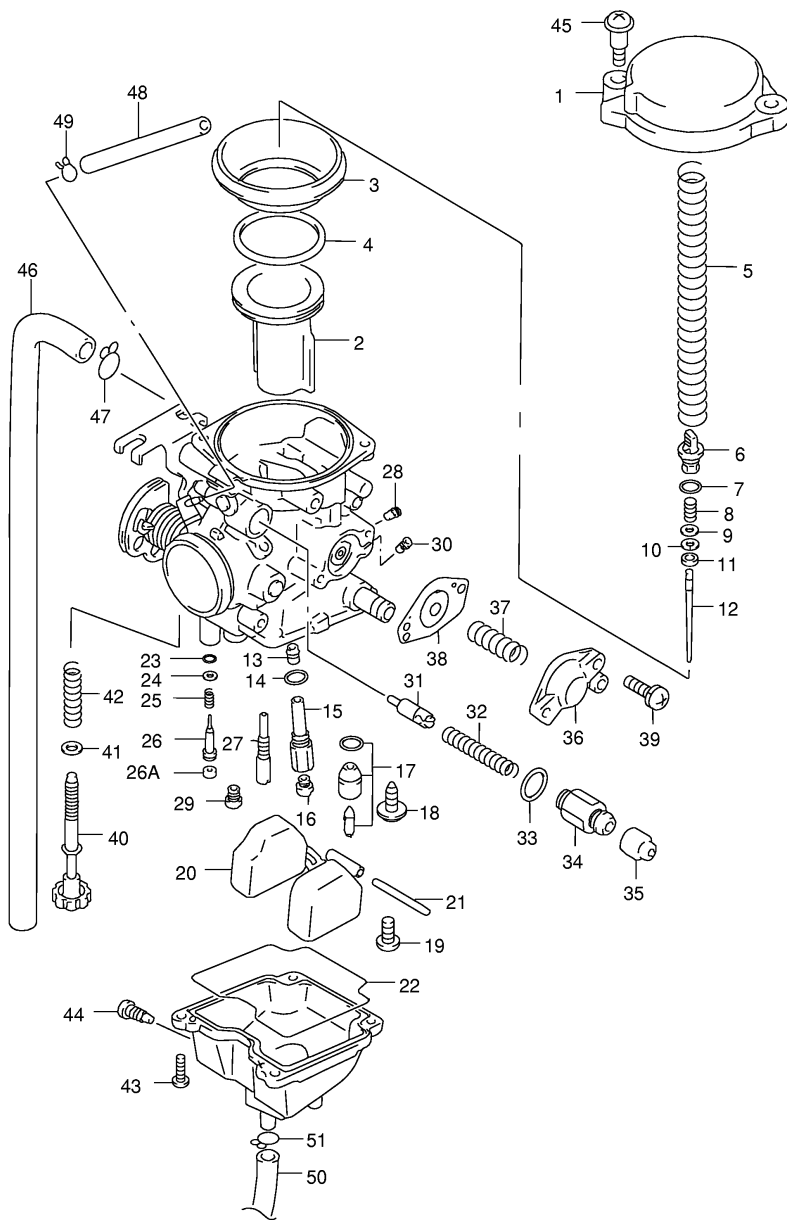 


GZ250Y E01_010
CARBURETOR

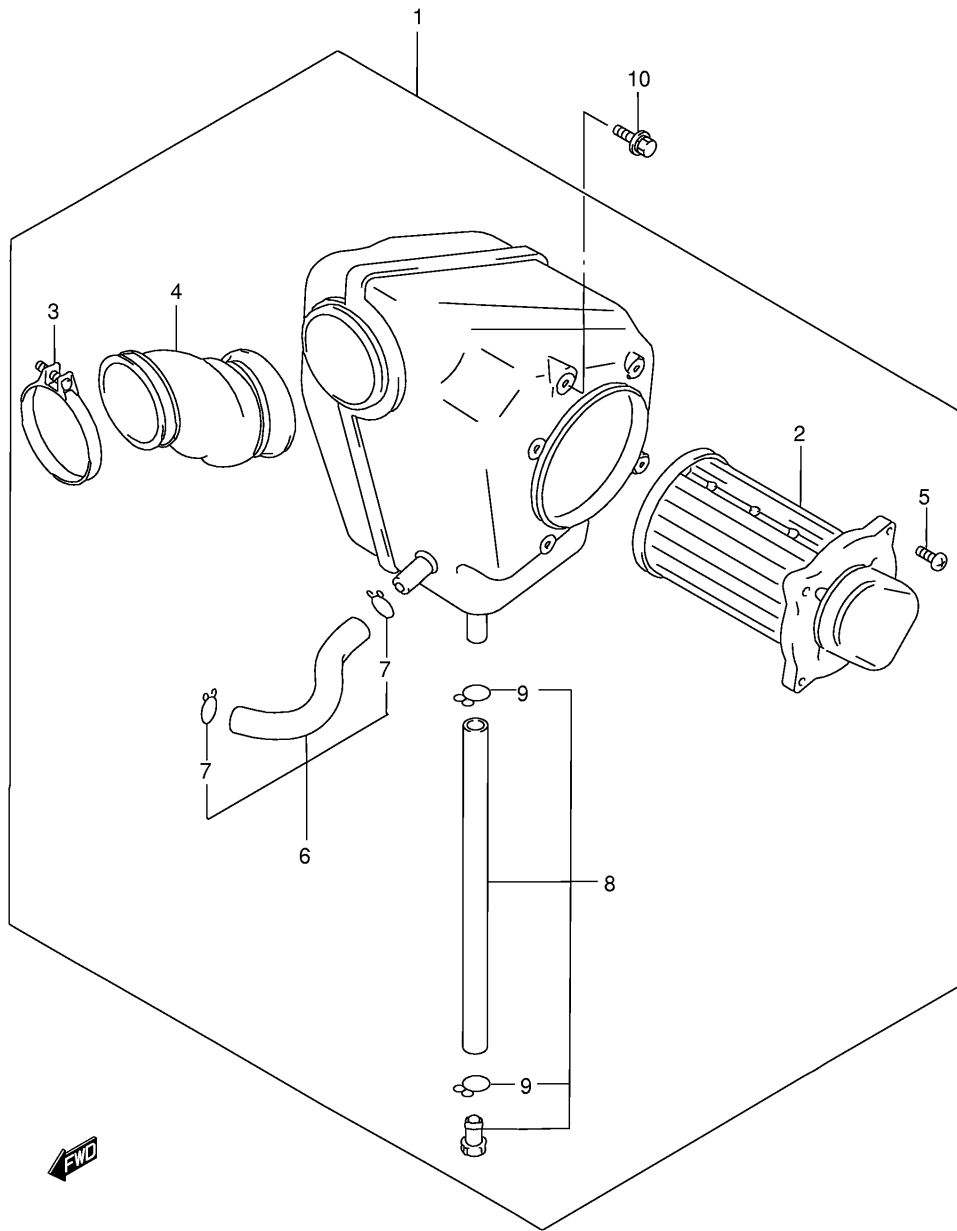 


Ref No	Part No	Description
1	13700-13F00	Cleaner Assy, Air
2	13780-13F00	• . Filter, Air Cleaner
3	09402-58208	• . Clamp
4	13881-13F00	• . Tube, Outlet
5	02142-05163	• . Screw
6	13850-13F00	• . Tube, Breather
7	09401-14301	•• .. Clip
8	13870-12F00	• . Tube, Drain
9	09401-14301	•• .. Clip
10	01580-06163	Bolt




Ref No	Part No	Description
1	14160-13F00	Pipe, Exhaust Lh
2	14181-37D00	Gasket, Exhaust Pipe
3	14182-37D00	Clamp, Exhaust Pipe Lh
4	09103-06203	Bolt
5	14305-13F20	Muffler
5	14305-13F00-H01	Muffler
6	01580-10303	Bolt
7	08322-01103	Washer
8	14771-19B00	Connector, Muffler
9	01550-08353	Bolt
10	14780-13F00	Cover, Muffler
11	14785-38301	Clamp, Muffler Cover
12	02112-05163	Screw
13	02112-76103	Screw

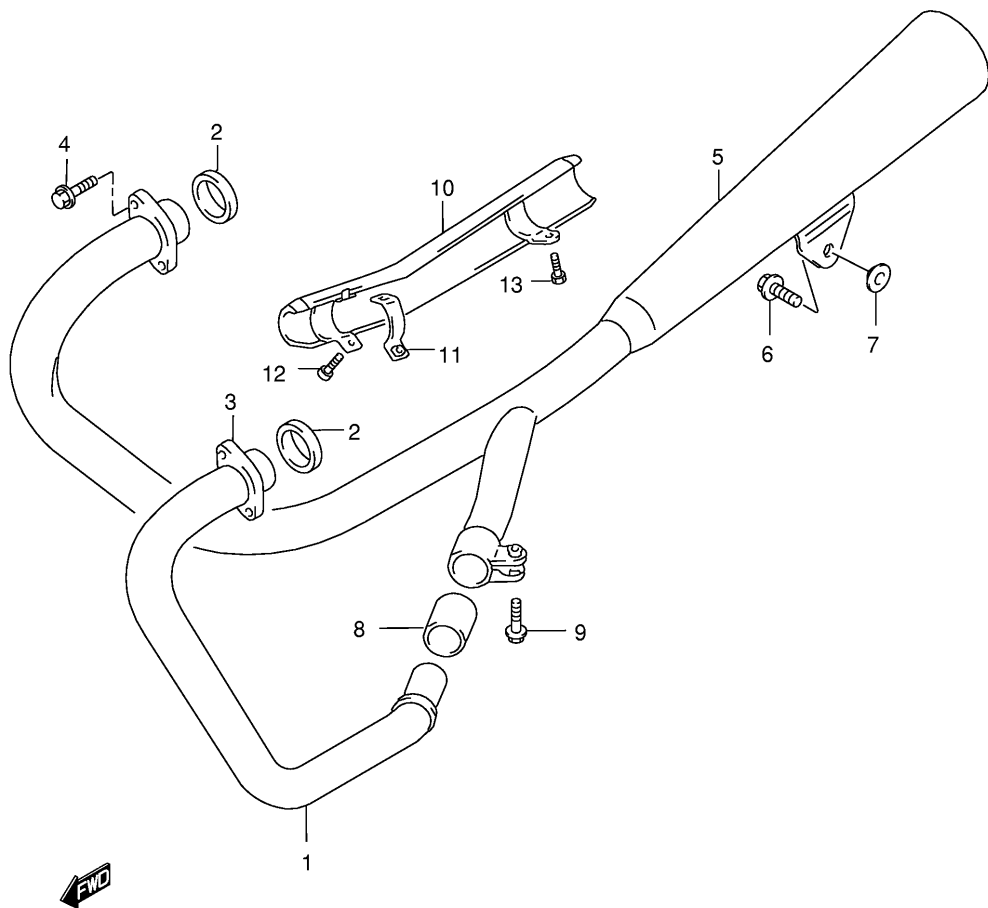 


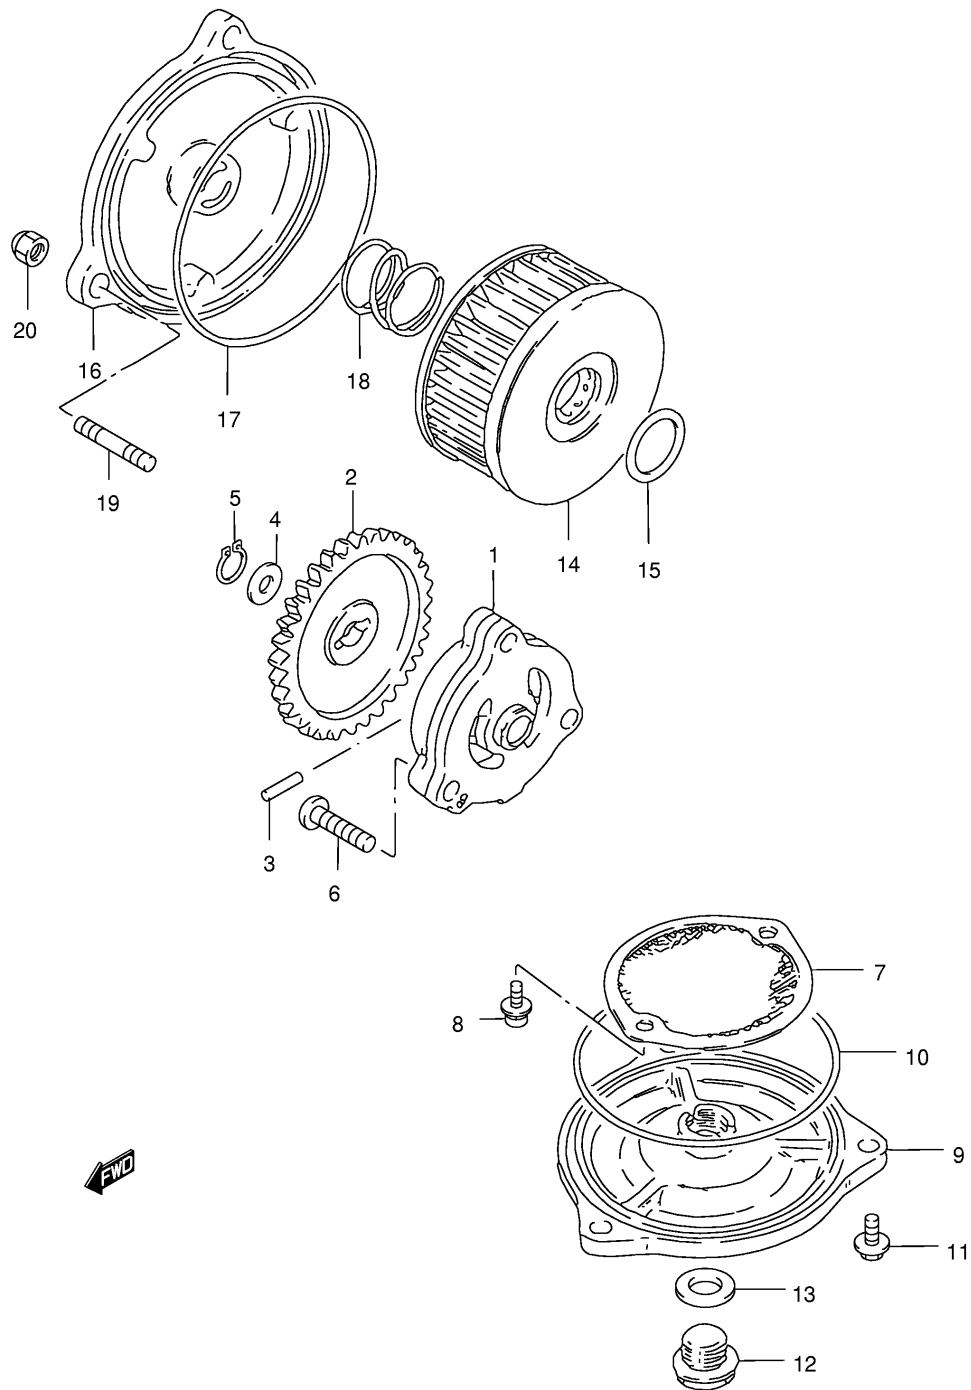 


Ref No	Part No	Description
1	16400-38200	Pump Assy, Engine Oil
2	16331-38200	Gear, Oil Pump Driven (nt:33)
3	09261-04009	Pin (4x15.8)
4	09181-10158	Shim
5	08331-31106	Circlip
6	02112-06253	Screw
7	16520-37400	Strainer, Engine Oil
8	02112-75123	Screw
9	16523-38200	Cap, Oil Strainer
10	09280-82001	O Ring (d:2.4,id:82)
11	01547-06203	Bolt
12	09247-14026	Plug
13	09168-14002	Gasket (13.8x18.8x0.4)
14	16510-38240	Filter, Engine Oil
15	09280-15007	O Ring (d:1.4,id:15.8)
16	16512-38220	Cap, Engine Oil Filter
17	09280-72001	O Ring (d:2.4,id:73)
18	09440-21006	Spring
19	01421-06128	Stud Bolt
20	08313-10067	Nut

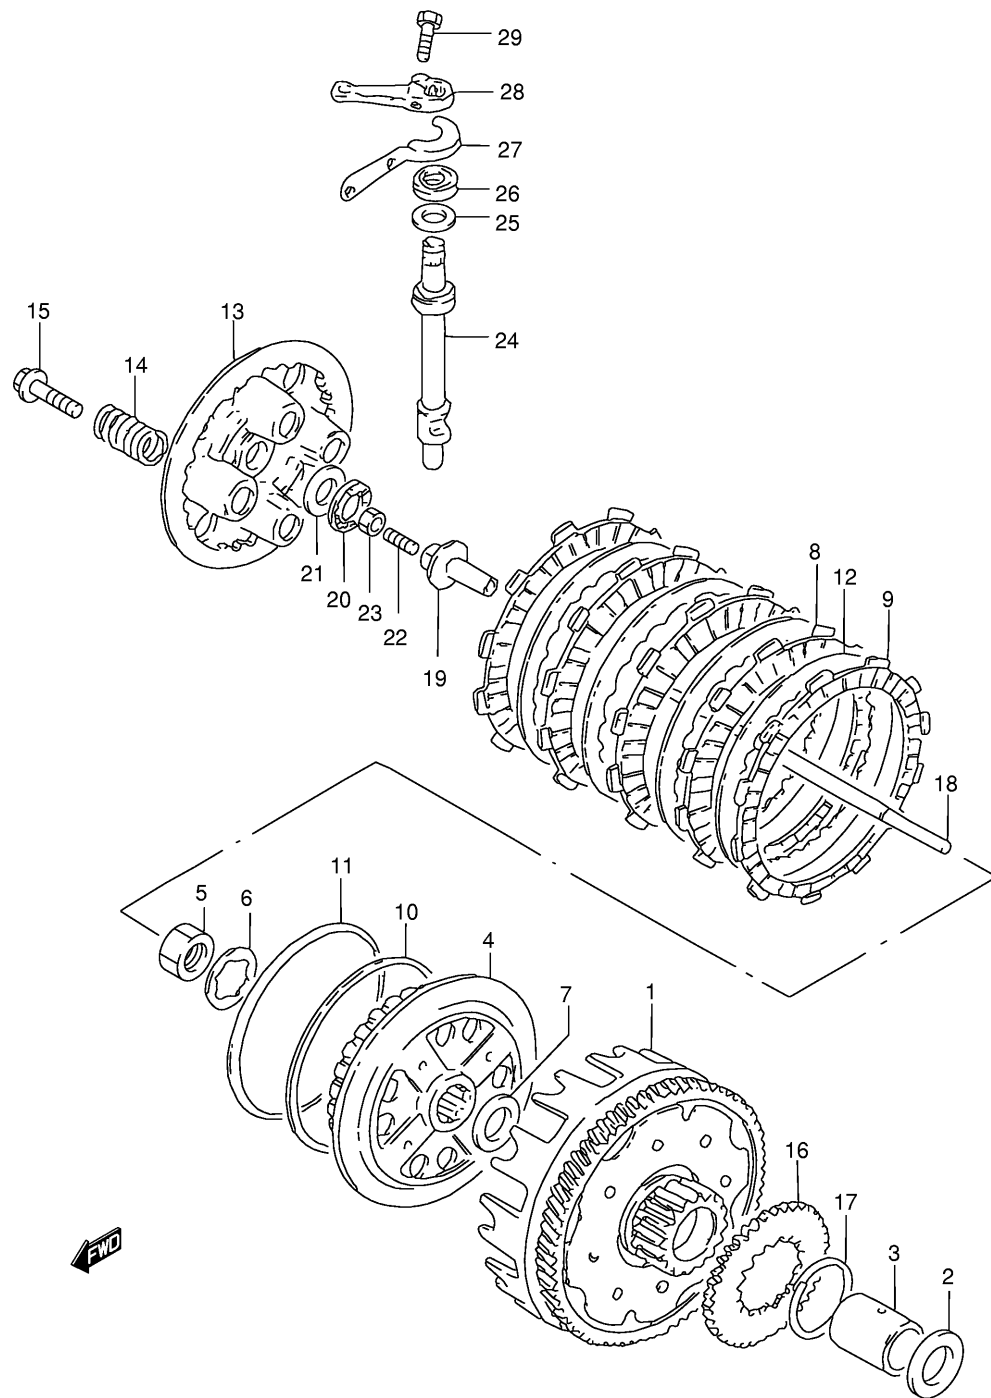 


Ref No	Part No	Description
1	21200-38201	Gear Assy, Primary Driven
2	08211-22363	Thrust Washer
3	09180-22024	Spacer (22x28x37.5)
4	21411-38200	Hub, Clutch Sleeve
5	09140-22005	Nut
6	09167-22010	Lock Washer
7	08211-22363	Thrust Washer
8	21441-37430	Plate, Clutch Drive
9	21442-37401	Plate, Clutch Drive (t:3.5)
10	21471-37400	Seat, Wave Washer (t:1.4)
11	09164-00004	Washer (110.5x119x0.90)
12	21451-14A00	Plate, Clutch Driven (t:1.6)
13	21462-27A00	Disc, Clutch Pressure
14	21413-13F00	Spring, Clutch
15	09116-06168	Bolt (6x16)
16	16321-38200	Gear, Engine Oil Pump Drive (nt:38)
17	09380-50001	Circlip
18	23110-38201	Rod, Clutch Push
19	23121-38201	Piece, Clutch Push
20	09263-15003	Bearing (15x28x2)
21	09160-15045	Washer (15.5x28x1)
22	09134-06010	Screw
23	09140-06023	Nut
24	23122-38200	Cam Shaft, Clutch Release
25	09160-14054	Washer (14.5x22x1.0)
26	09285-12002	Oil Seal (12x22x9)
27	23117-38200	Plate, Oil Seal
28	23271-49100	Arm, Clutch Release
29	01500-06207	Bolt

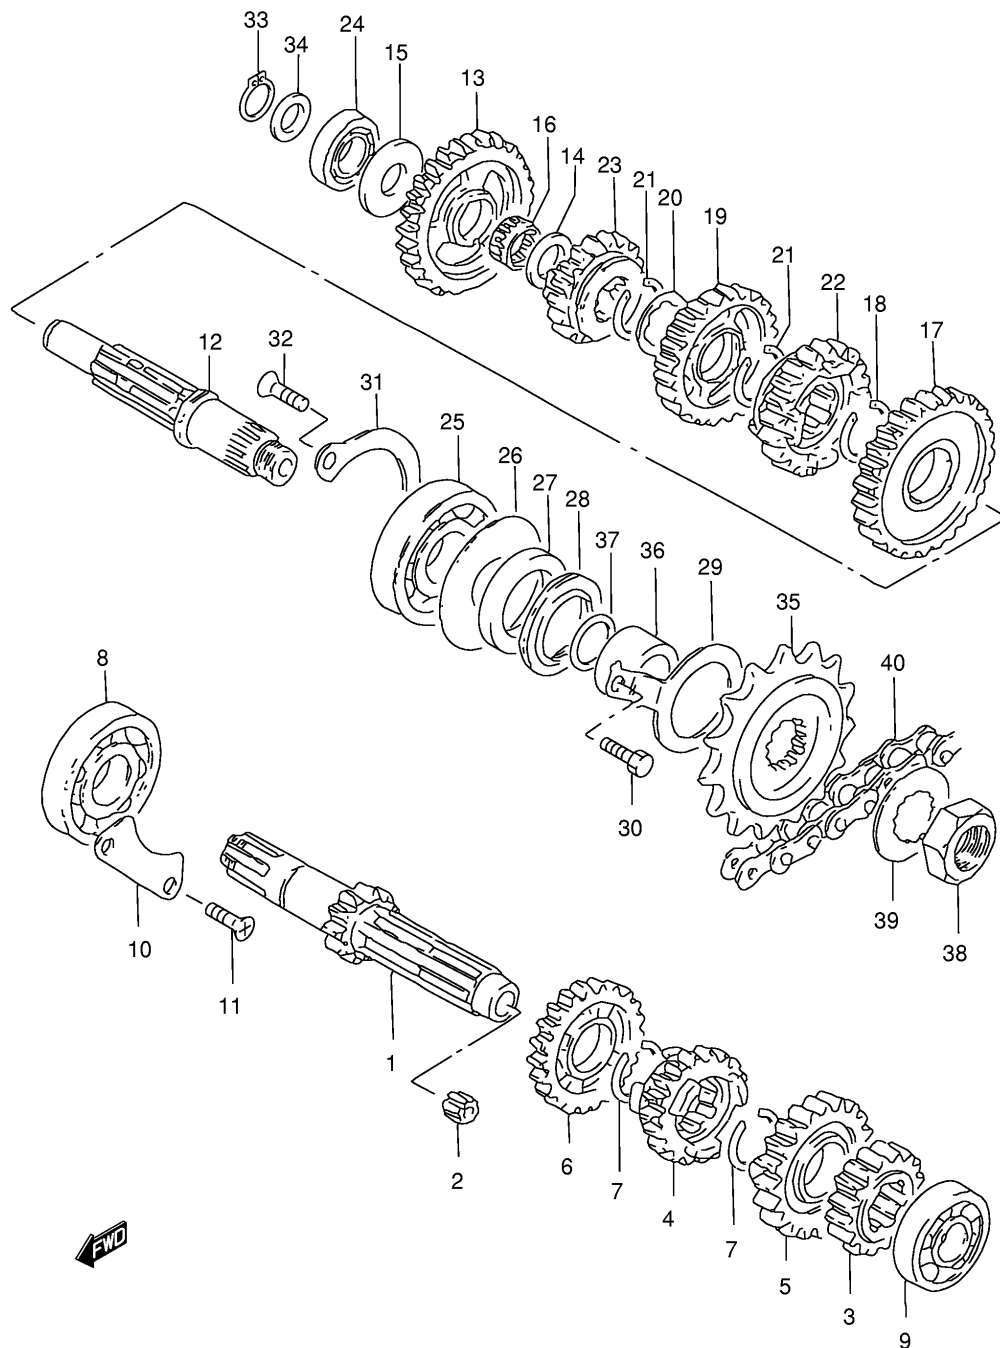 

Ref No	Part No	Description
1	24120-38202	Shaft, Counter (nt:11)
2	24125-38201	• Bush
3	24221-32412	Gear, 2nd Drive (nt:16)
4	24231-38201	Gear, 3rd Drive (nt:19)
5	24241-32401	Gear, 4th Drive (nt:20)
6	24251-32402	Gear, 5th Drive (nt:22)
7	09380-22006	Circlip
8	09262-22028	Bearing, Rh (22x56x16)
9	09262-17027	Bearing, Lh (17x40x12)
10	24741-38200	Retainer, Bearing
11	02112-06123	Screw
12	24130-38301	Shaft, Drive
13	24311-32401	Gear, 1st Driven (nt:29)
14	09181-17195	Washer (17x28x1.0)
15	08211-17363	Thrust Washer
16	09263-17004	Bearing (17x21x9.8)
17	24320-32411	Gear, 2nd Driven (nt:27)
18	09380-22006	Circlip
19	24330-38202	Gear, 3rd Driven (nt:24)
20	09167-22011	Lock Washer
21	09380-22006	Circlip
22	24341-38201	Gear, 4th Driven (nt:20)
23	24351-38201	Gear, 5th Driven (nt:18)
24	09264-17001	Bearing (17x36x12)
25	09262-22013	Bearing (22x56x16)
26	09160-35007	Washer (35x55x1)
27	09282-30003	Oil Seal (30x43x5)
28	09283-30040	Oil Seal (30x43x7)
29	24751-38201	Retainer, Oil Seal
30	01500-06123	Bolt
31	24752-32400	Retainer, Bearing
32	02122-06123	Screw
33	08331-31176	Circlip
34	09181-17139	Washer (17x24x1.0)
35	27510-25D00	Sprocket, Engine (nt:15)
36	27531-38300	Spacer
37	09280-21008	O Ring (d:2.5,id:21)
38	09140-18008	Nut
39	09167-22012	Lock Washer
40	27600-14A10-110	Chain Assy (did520vc5,110le)

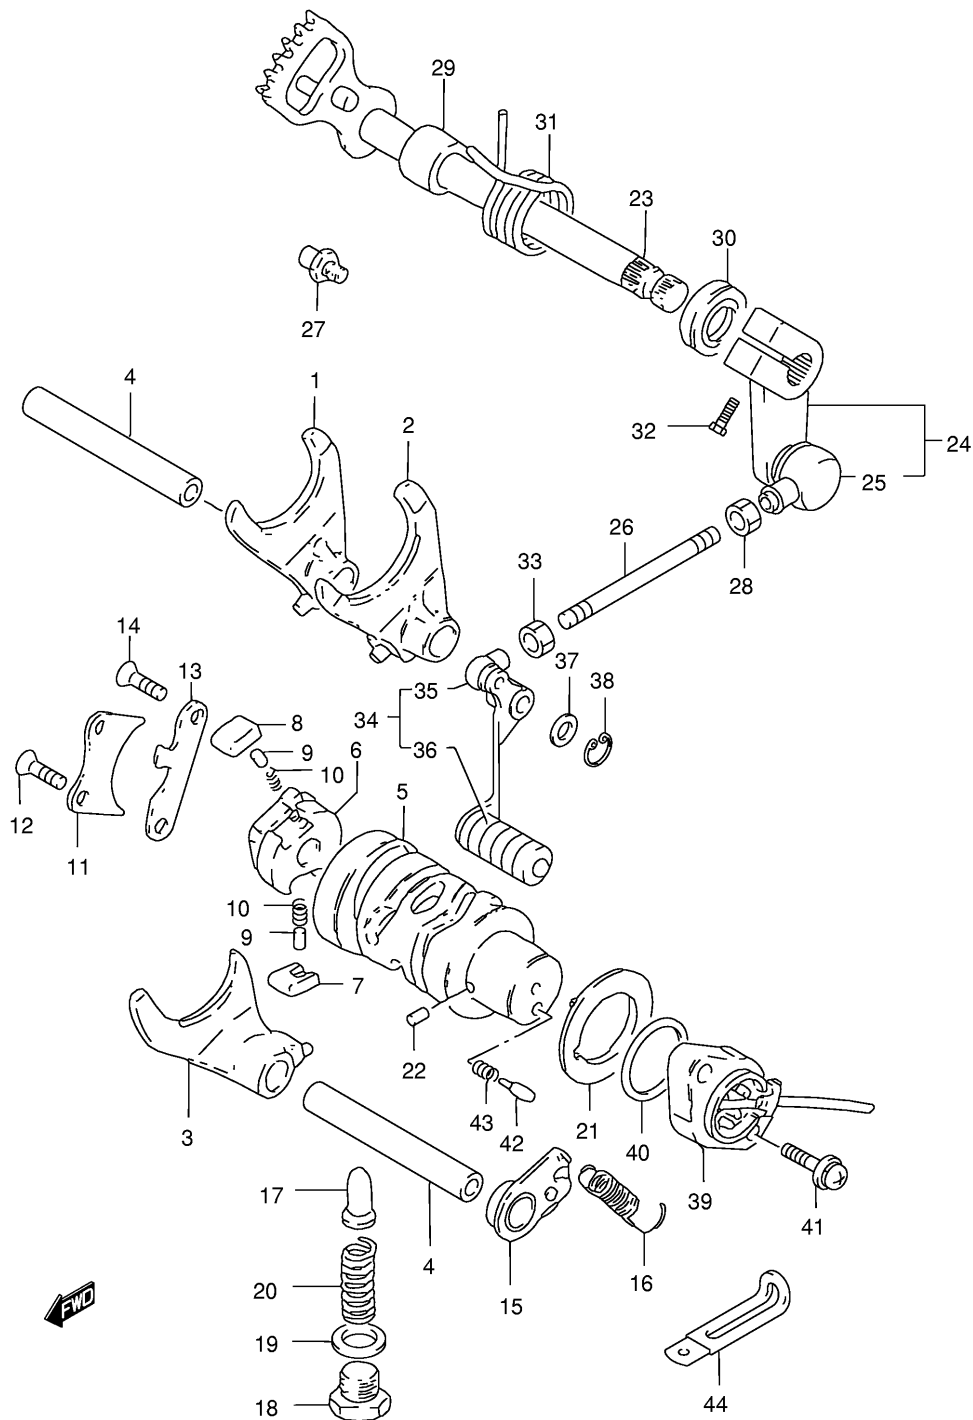 



Ref No	Part No	Description
1	25211-32402	Fork, Gear Shift No.1
2	25221-32403	Fork, Gear Shift No.2
3	25231-13F00	Fork, Gear Shift No.3
4	25411-14331	Shaft, Gear Shift Fork
5	25310-13F00	Cam, Gear Shift
6	25322-31310	Gear, Gear Shift Cam Driven
7	25323-34201	Pole, Gear Shift No.1
8	25324-34201	Pole, Gear Shift No.2
9	09261-05003	Roller (5x8)
10	09440-04003	Spring
11	25331-38201	Lifter, Gear Shift Pole
12	02122-06123	Screw
13	25341-38200	Guide, Gear Shift Cam
14	02122-06123	Screw
15	25350-34000	Stopper, Gear Shift Cam
16	09443-08026	Spring
17	25351-30010	Stopper, Gear Shift Cam No.2
18	09247-14012	Plug
19	09168-14002	Gasket (13.8x18.8x0.4)
20	09440-11026	Spring
21	25381-13F00	Plate, Gear Shift Cam Stopper
22	04221-04069	Pin
23	25510-38200	Shaft, Gear Shift
24	25520-22A00	Arm, Gear Shift Link
25	25526-47000	• . Cover, Dust
26	25525-13F00	Rod, Gear Shift Link
27	25671-01000	Stopper, Return Spring
28	09140-06011	Nut
29	09180-12068	Spacer (12x20x15.3)
30	09285-12002	Oil Seal (12x22x9)
31	09444-26004	Spring
32	01500-06207	Bolt
33	08310-00067	Nut
34	25600-13F00	Lever Assy, Gear Shift
35	25526-47000	• . Cover, Dust
36	25652-20C00	• . Rubber, Gear Shift Pedal
37	09160-12011	Washer (12.5x20x1)
38	08331-31126	Circlip
39	37720-47D00	Base Assy, Terminal
40	09280-26003	O Ring (d:2.4,id:26.2)
41	02112-75203	Screw
42	09209-05011	Contact
43	09440-04010	Spring
44	09404-06432	Clamp (l:80)

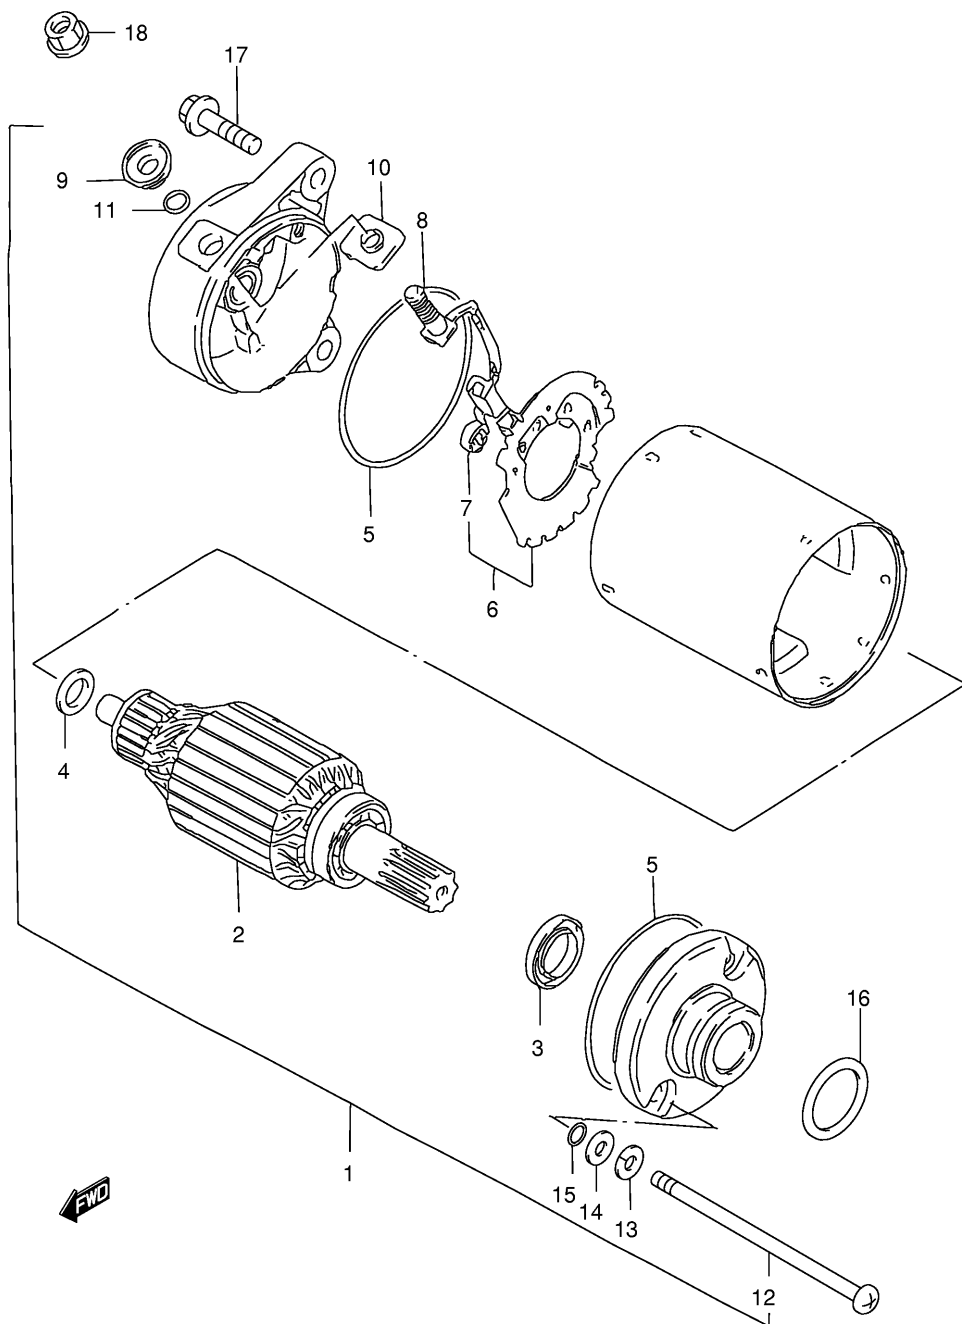 


Ref No	Part No	Description
1	31100-38300-H17	Motor Assy, Starting
2	31311-49211-H17	• . Armature
3	31153-49210	• . Oil Seal
4	31170-43400	• . Shim Set
5	31264-44110	• . O Ring
6	31132-27A01	• . Holder, Brush
7	31135-65010	• . Spring
8	31130-38300	• . Brush (+)
9	31172-38300	• . Bush
10	31171-38300	• . Bush, B
11	31143-38300	• . O Ring
12	31281-87402	• . Bolt
13	08321-01067	• . Lock Washer
14	31161-38300	• . Washer
15	31156-38300	• . O Ring
16	09280-24003	• . O Ring (d:3,id:24.5)
17	01550-06257	Bolt
18	08361-35068	Nut

Ref No	Part No	Description
1	32101-13F00	Stator Assy
2	32102-13F01	Rotor Assy
3	02112-06253	Screw
4	31792-49200	Nut, Generator
5	08341-31039	Key
6	07130-05123	Bolt
7	31497-45000	Clamp, Generator Lead Wire
8	02142-35083	Screw

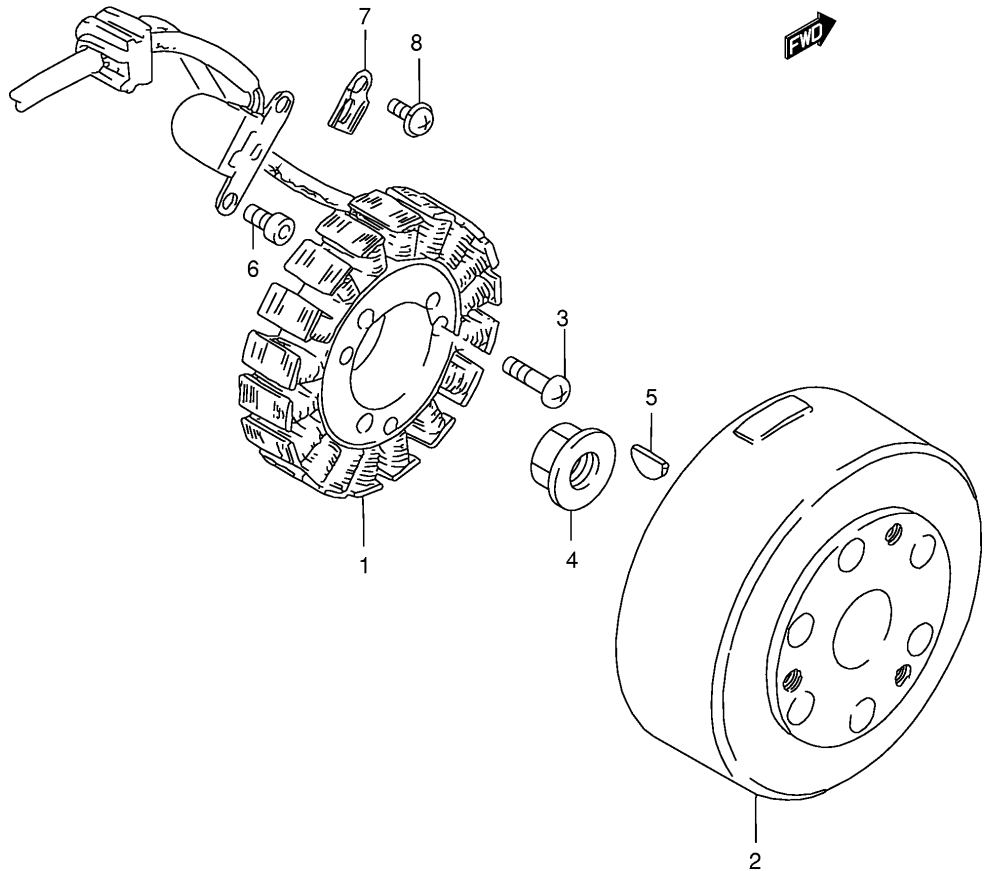 

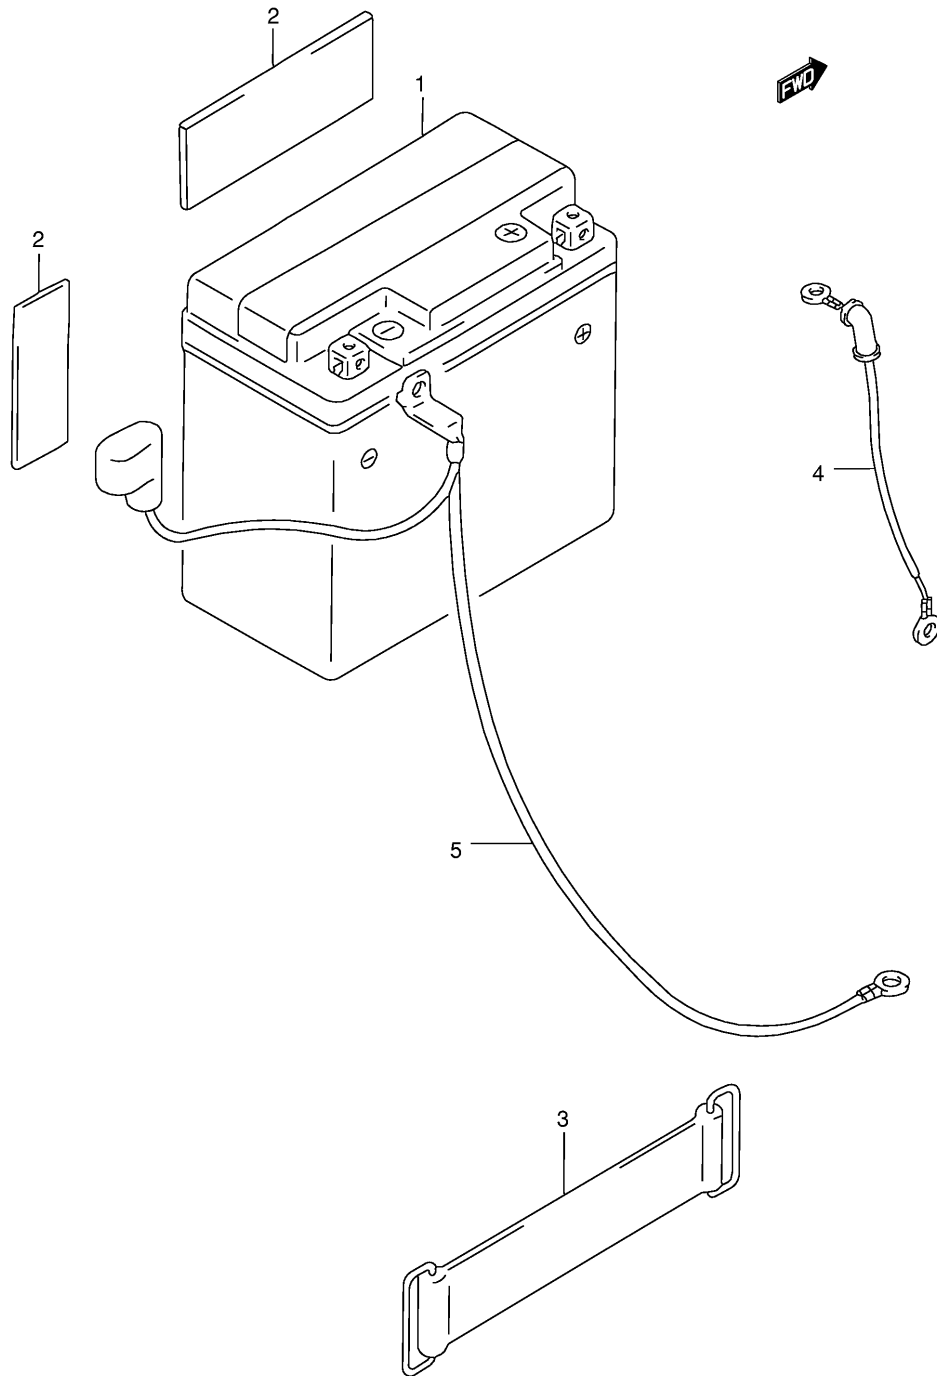 


Ref No	Part No	Description
1	33610-12F10	Battery Assy (ftx7l-bs,12v6ah)
2	33651-37000	Protector (170x95x3.0)
3	09462-00043	Band
4	33820-12F00	Wire, Battery (+)
5	33860-12F00	Wire, Battery (-)

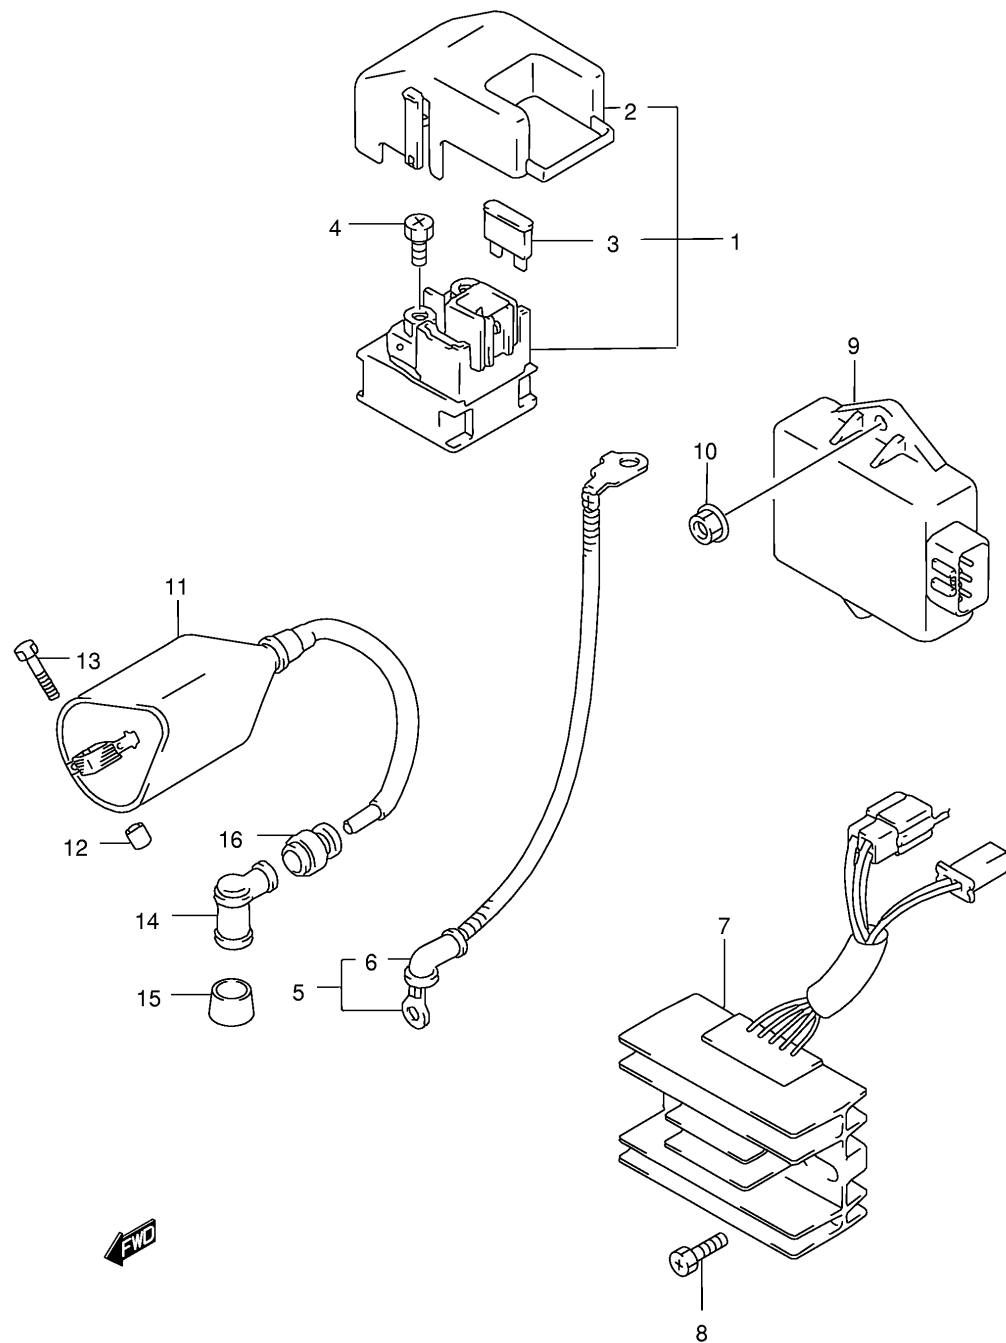 


Ref No	Part No	Description
1	31800-47E00	Relay Assy, Starting Motor
2	31861-47E00	• . Cover
3	09481-20102	• . Fuse (20a)
4	09128-06013	Screw (6x8)
5	33810-13F00	Wire, Starter Motor Lead
6	31861-48B10	• . Cap, Starter Motor Lead
7	32800-29B00	Rectifier Assy, Regulator
8	09128-06057	Bolt
9	32900-13F00	Igniter Assy
10	08316-10063	Nut
11	33410-13F00	Coil Assy, Ignition
12	09180-06174	Spacer (6.2x12x14)
13	01500-05353	Bolt
14	33510-45010	Cap, Spark Plug
15	33541-24510	Seal, Spark Plug Cap
16	33542-38B00	Seal, High Tension Cord




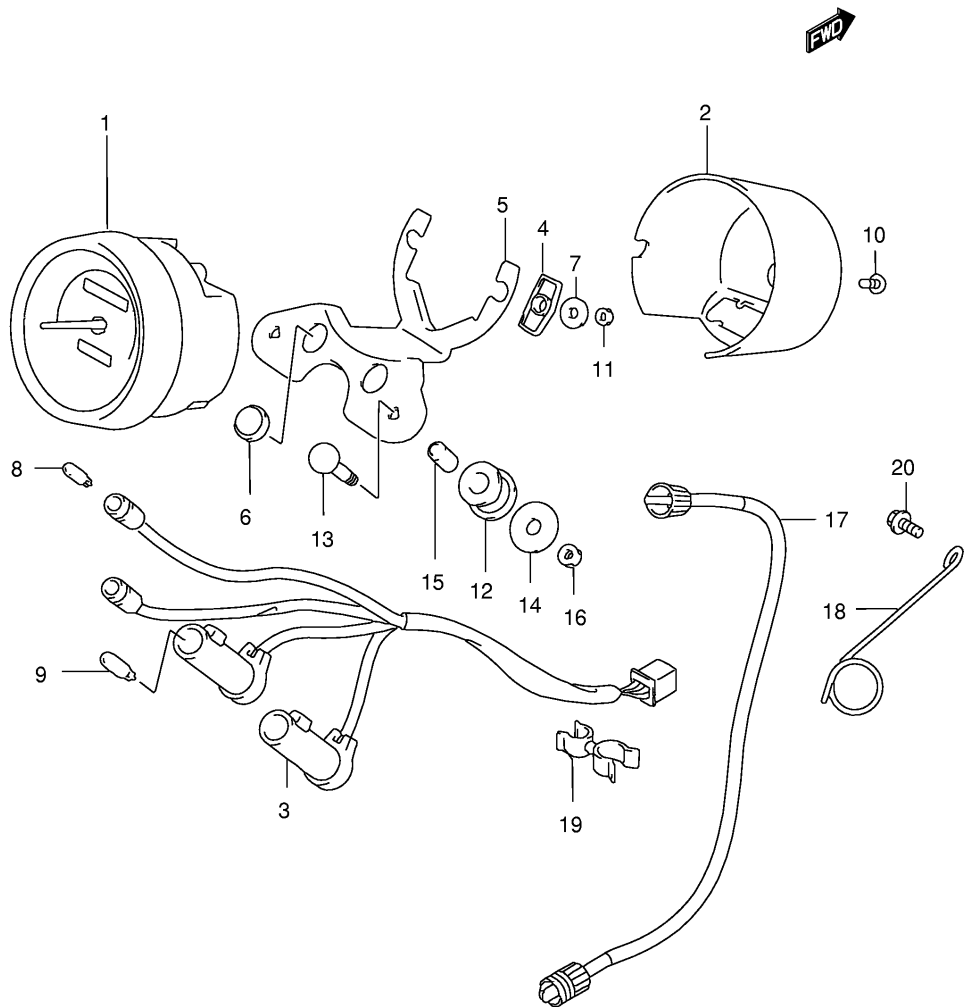 


Ref No	Part No	Description
1	34110-13F00	Speedometer (kilo)
1	34110-13F10	Speedometer (mile/kilo)
2	34111-25D00	Cover, Under
3	34170-25D10	Socket Assy
4	34191-25D00	Cushion, Damper
5	34950-25D00	Bracket, Meter
6	36321-25D00	Lens, Neutral (green)
7	09160-05013	Washer (5.2x16x1)
8	09471-12028	Bulb (12v,3.4w)
9	09471-12108	Bulb (12v,1.7w)
10	03541-14123	Screw
11	08310-00057	Nut
12	34956-31001	Cushion, Meter Bracket
13	09107-06003	Bolt (6x30)
14	09160-06136	Washer (6.5x28x1.6)
15	09180-06294	Spacer (6.5x10x15.7)
16	08310-00063	Nut
17	34910-12F00	Cable Assy, Speedometer
18	34938-37000	Guide, Speedometer Cable
19	09408-00056	Clip
20	01550-06123	Bolt

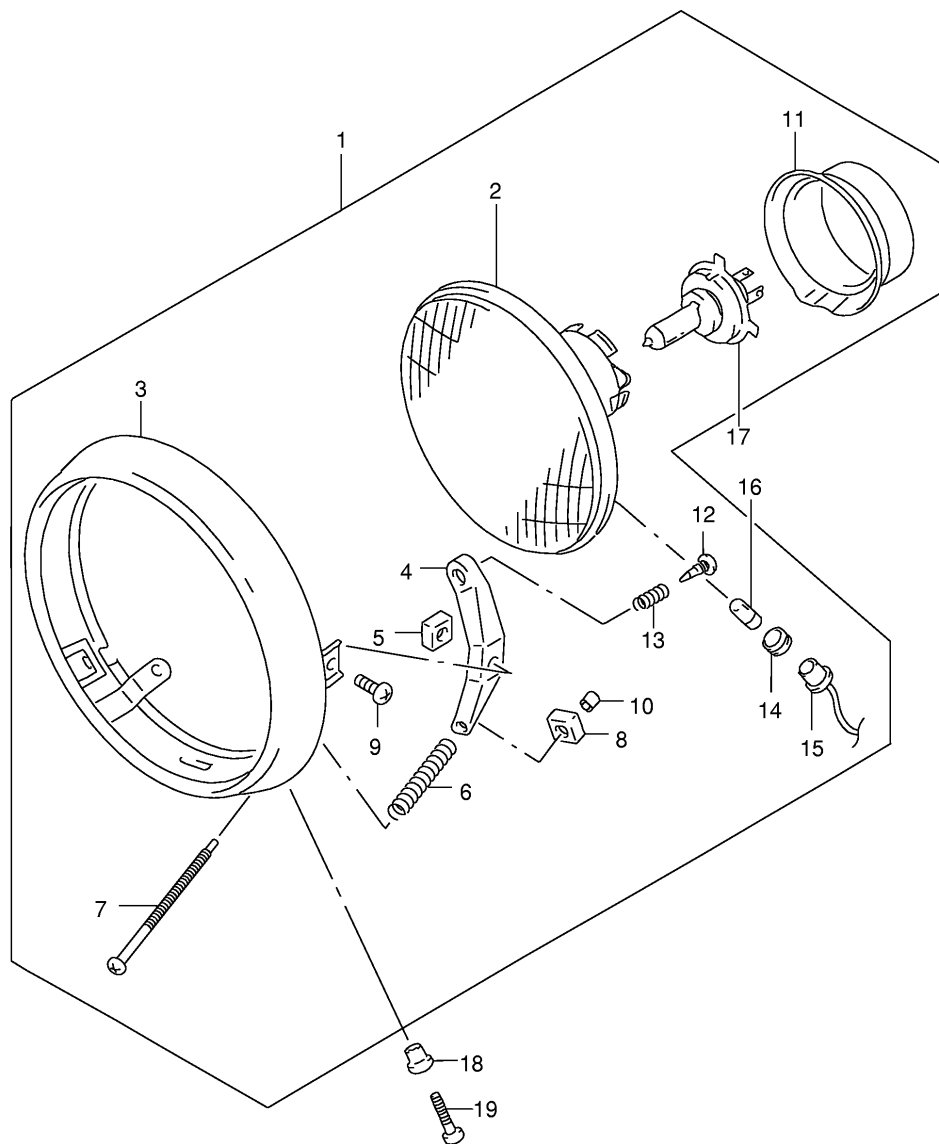 


Ref No	Part No	Description
1	35100-13F10-999	Headlamp Assy
1	35100-13F20-999	Headlamp Assy
2	35121-13F10	• Unit
2	35121-13F20	• Unit
3	35111-13F00	• Rim
4	35131-13F00	• Stay
5	35135-45900	• Nut
6	35145-13F00	• Spring
7	35151-13F00	• Adjust, Screw
8	35152-45600	• Nut
9	35161-13F00	• Screw
10	35165-13F00	• Cap, Screw
11	35173-38A00	• Cover, Socket
12	35181-13F00	• Screw
13	35154-13F00	• Spring
14	36116-22630	• Joint Rubber
15	36118-12E20	• Socket
16	09471-12063	Bulb (12v,4w)
17	09471-12185	Bulb (12v,60/55w)
18	35192-13F00	Spacer, Hedlamp
19	02112-05167	Screw

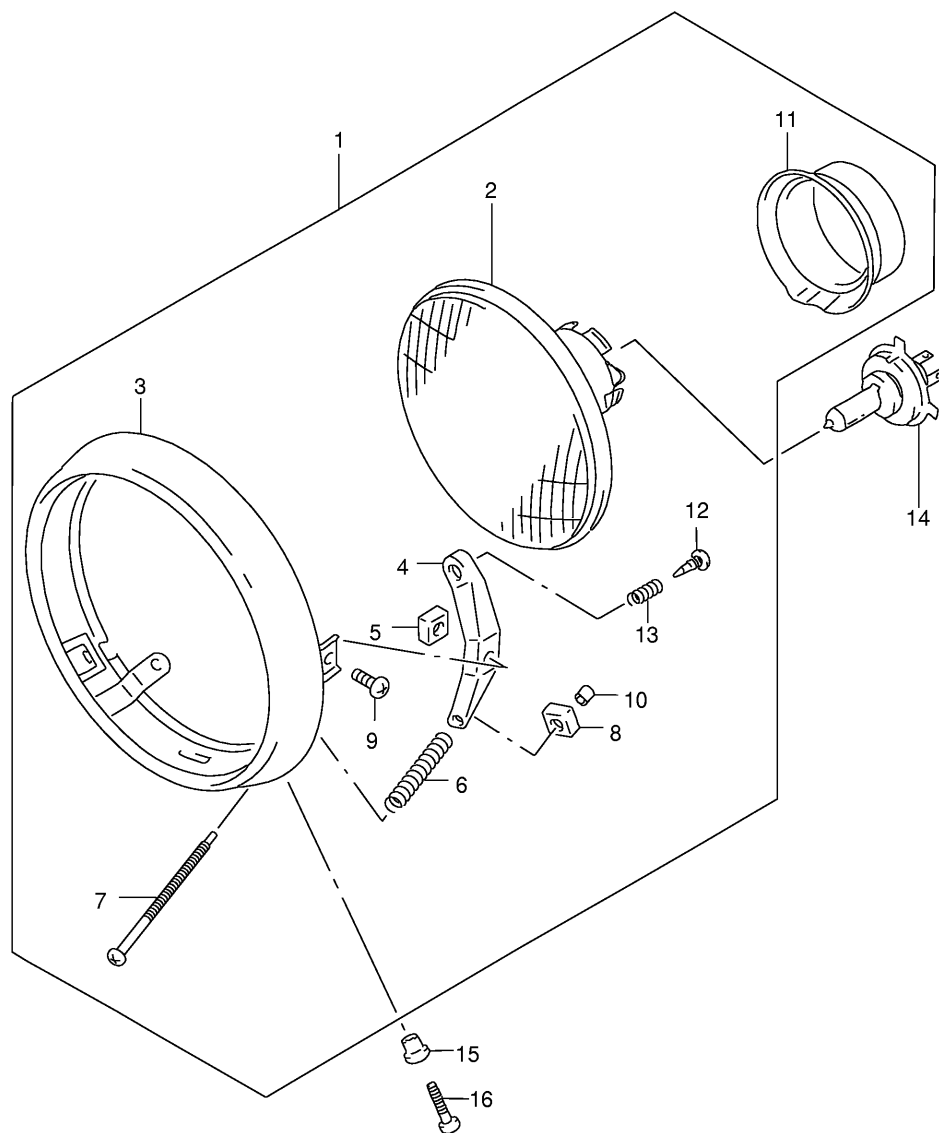 


Ref No	Part No	Description
1	35100-13F00-999	Headlamp Assy
2	35121-13F00	• . Unit
3	35111-13F00	• . Rim
4	35131-13F00	• . Stay
5	35135-45900	• . Nut
6	35145-13F00	• . Spring
7	35151-13F00	• . Adjust Screw
8	35152-45600	• . Nut
9	35161-13F00	• . Screw
10	35165-13F00	• . Cap, Screw
11	35173-38A00	• . Cover, Socket
12	35181-13F00	• . Screw
13	35154-13F00	• . Spring
14	09471-12185	Bulb (12v,60/55w)
15	35192-13F00	Spacer, Headlamp
16	02112-05167	Screw

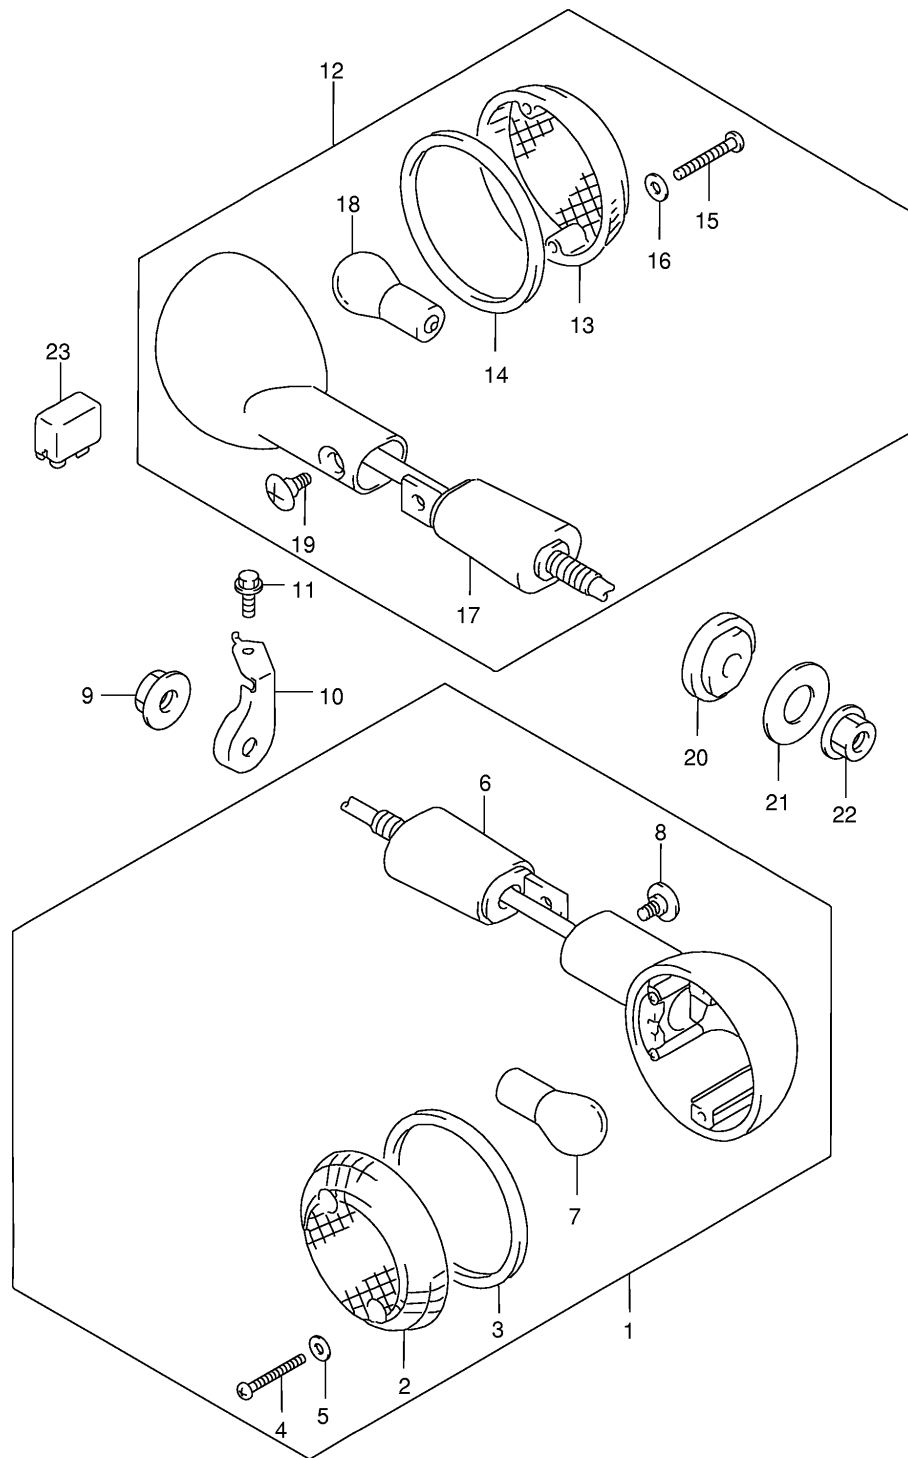 



Ref No	Part No	Description
1	35601-33D30	Lamp Assy, Front Turn
2	35612-38A01	• . Lens
3	35613-38A00	• . Gasket
4	03211-04253	• . Screw
5	35627-43010	• . Gasket
6	35619-45C10	• . Stay, Turn Signal
7	09471-12045	• . Bulb (12v,21w)
8	35623-38A01	• . Screw
9	08316-10103	Nut
10	35670-12F00	Bracket, Fr Rh
10	35680-12F00	Bracket, Fr Lh
11	01550-06123	Bolt, Bracket
12	35603-33D60	Lamp Assy, Rear Turn
13	35652-38A21	• . Lens
14	35613-38A00	• . Gasket
15	03211-04253	• . Screw
16	35627-43010	• . Gasket
17	35659-45C10	• . Stay, Turn Signal
18	09471-12045	• . Bulb (12v,21w)
19	35623-38A01	• . Screw
20	35695-17C00	Spacer
21	09160-10501	Washer (10.5x30x2.3)
22	08316-10103	Nut
23	38610-03F00	Relay Assy, Turn Signal

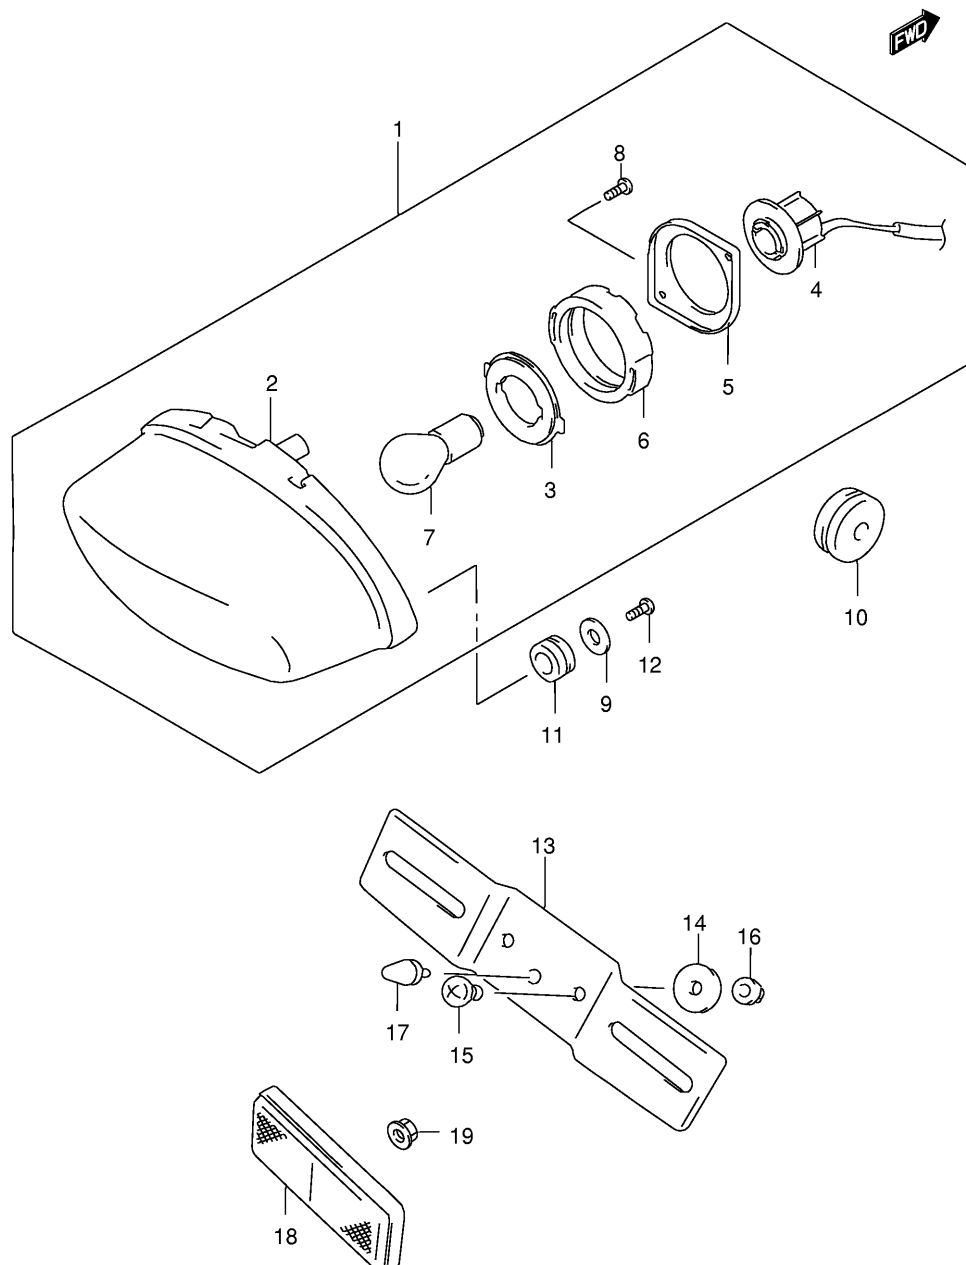 


Ref No	Part No	Description
1	35710-12F00	Lamp Assy, Rear Comb
2	35740-42E11	• . Lamp Unit
3	35716-48B21	• . Plate, No.1
4	35718-12F00	• . Socket & Cord
5	35736-48B21	• . Plate
6	35765-42E00	• . Cushion
7	09471-12083	• . Bulb (12v,21/5w)
8	03211-04123	• . Screw
9	09160-05501	Washer, Rear Comb
10	09308-08007	Grommet
11	09320-10015	Cushion, Rear Comb
12	03541-05123	Screw, Rear Comb
13	35927-44110	Bracket, License Plate
14	09160-06088	Washer, License
15	02142-06123	Screw, License
16	08316-10063	Nut, License
17	09321-06028	Cushion, License Plate
18	35970-07F00	Reflex Reflector Assy, Rear
19	08316-10053	Nut

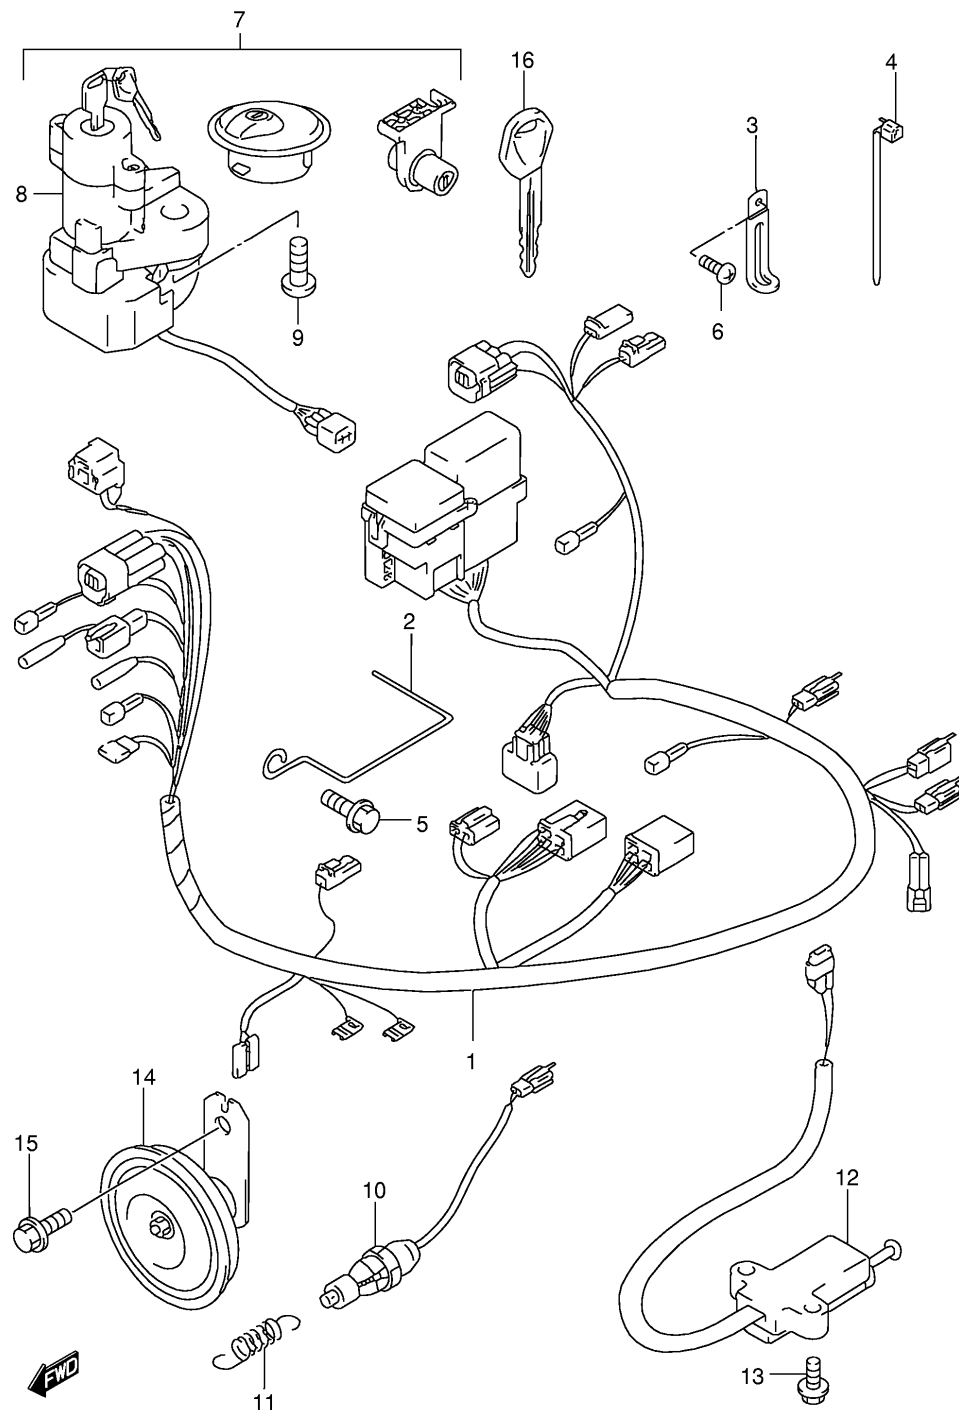 


Ref No	Part No	Description
1	36610-13F10	Harness, Wiring
2	36619-23E00	Guide, Wiring Harness
3	09404-06432	Clamp (l:65)
3	09404-06435	Clamp (l:135)
4	09407-14403	Clamp (l:125)
4	09407-18402	Clamp (l:165)
4	09407-25401	Clamp (l:235)
5	01550-06163	Bolt, Guide
6	03541-04103	Screw, Clamp
7	37102-33870	Lock Set
7	37102-33820	Lock Set
8	37100-33E20	• . Lock Assy, Steering
8	37100-33E30	• . Lock Assy, Steering
9	09139-08016	Screw
10	37740-12F00	Switch Assy, Stop Lamp
11	09443-06046	Spring, Stop Lamp
12	37840-44X50	Switch Assy, Side Stand
13	01550-06163	Bolt
14	38500-10D10	Horn Assy
15	01550-08163	Bolt
16	37146-33E00	Key, Blank

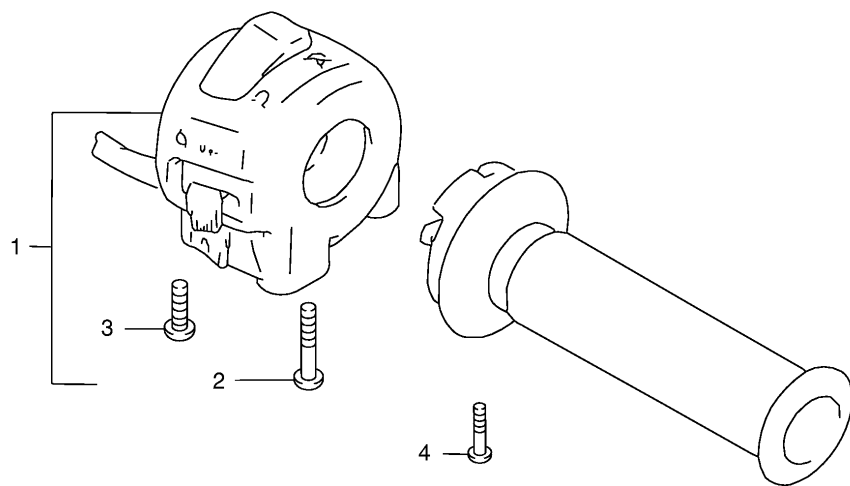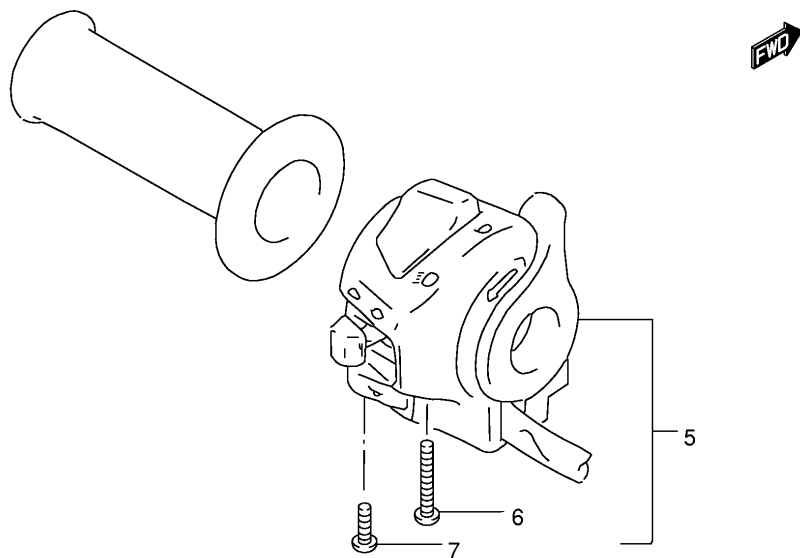  


Ref No	Part No	Description
1	37200-33E11	Switch Assy, Handle Rh
1	37200-33E31	Switch Assy, Handle Rh
2	02112-05303	• . Screw
3	02112-05503	• . Screw
4	02112-05103	Screw, Throttle Cable
5	37400-33E11	Switch Assy, Handle Lh
6	02112-05253	• . Screw
7	02112-05453	• . Screw

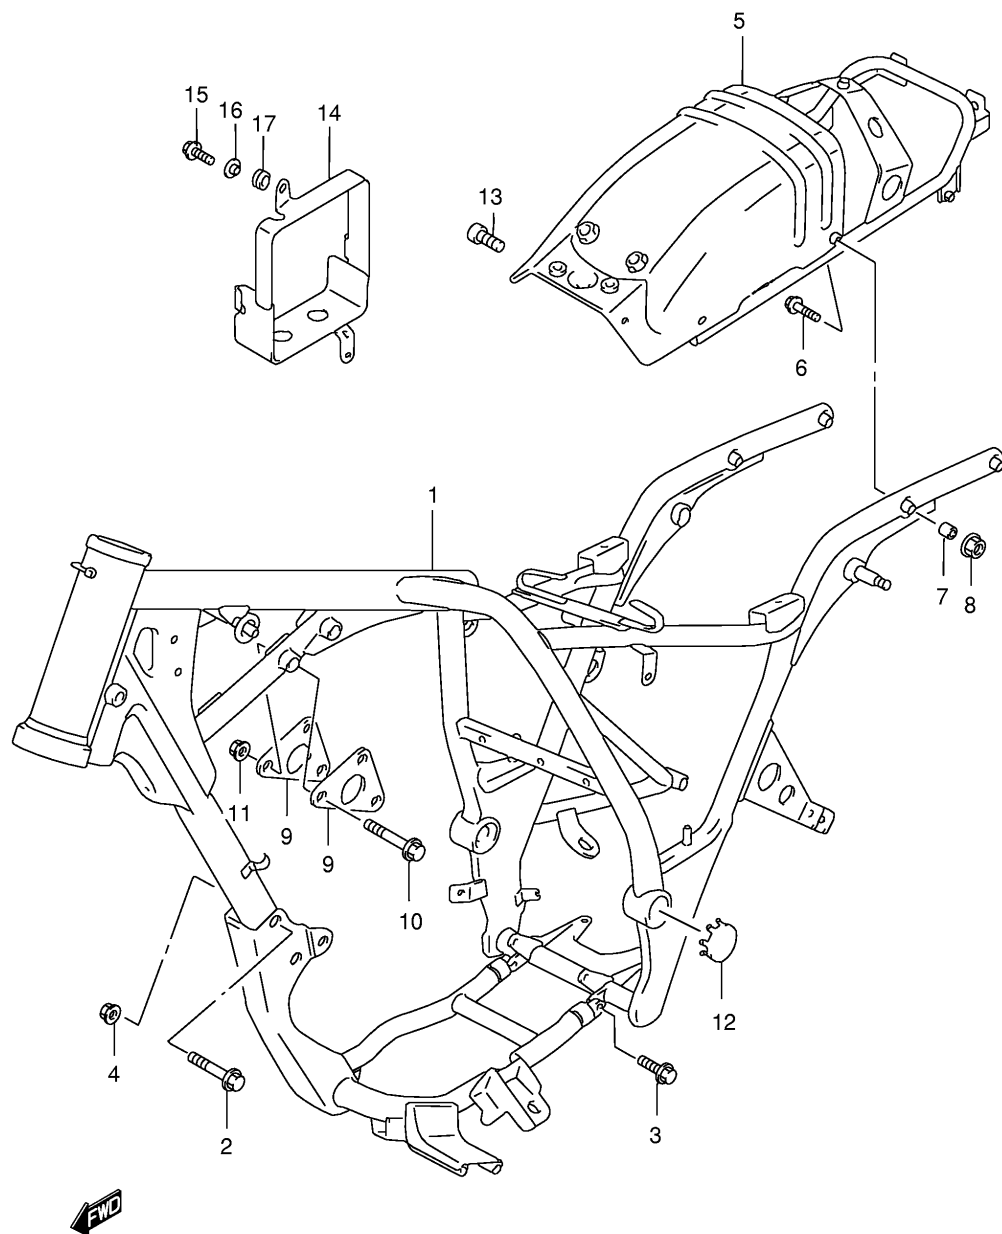 


Ref No	Part No	Description
1	41100-13F01-019	Frame (black)
2	01550-08603	Bolt
3	01550-08253	Bolt
4	08316-10083	Nut, Front
5	41580-12F00	Brace, Rear Frame
6	01550-08553	Bolt
7	09180-08208	Spacer
8	08313-20087	Nut, Brace
9	41991-13F00	Plate, Engine Mount Upper
10	09103-08289	Bolt (8x50)
11	08319-31087	Nut
12	61222-38A01	Cap, Pivot
13	09106-06061	Bolt
14	41540-12F00	Holder, Battery
15	01550-06163	Bolt
16	09169-06065	Washer
17	09320-08021	Cushion (8.5x20x8)

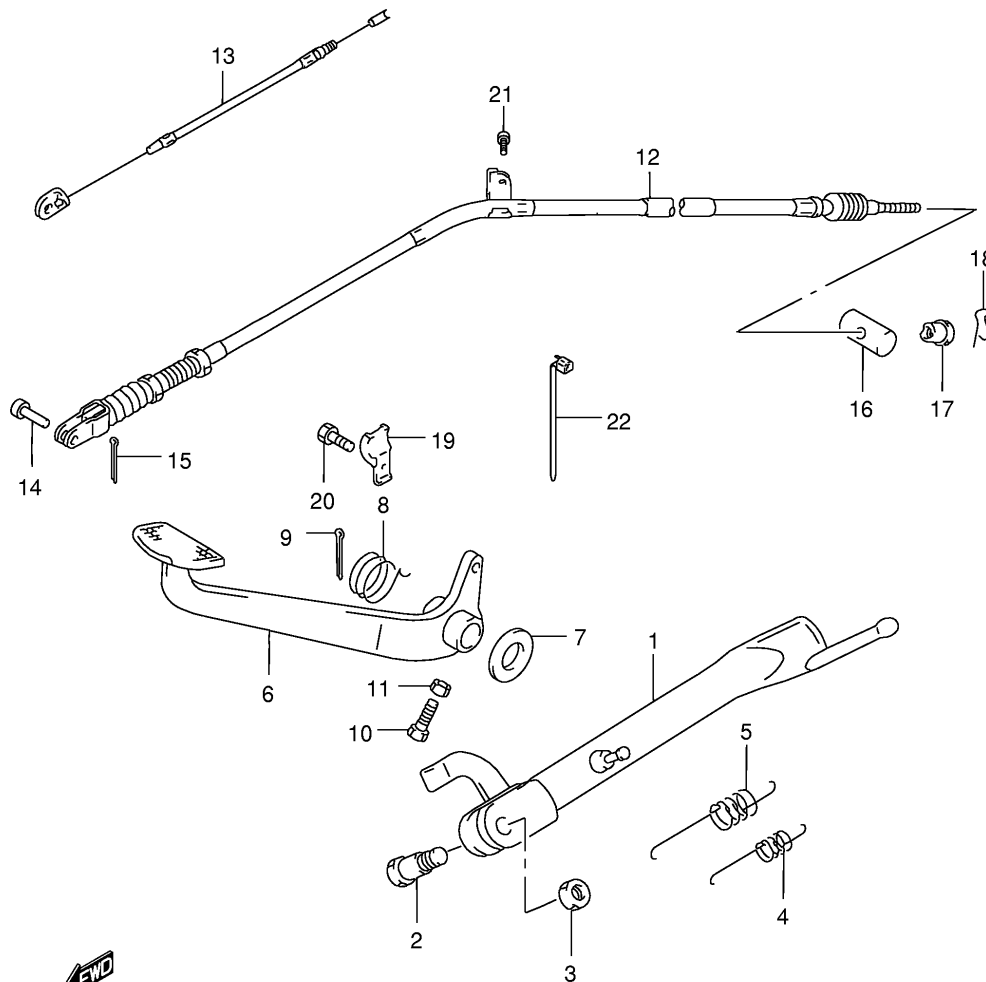 


Ref No	Part No	Description
1	42310-13F00	Stand, Prop
2	09111-10027	Bolt
3	09159-10097	Nut
4	09443-14066	Spring
5	09443-19012	Spring
6	43110-13F00	Pedal, Brake
7	09160-16043	Washer (16.5x22x1.0)
8	09448-31034	Spring
9	04111-30308	Cotter Pin
10	01500-06207	Bolt
11	08310-00067	Nut
12	58510-13F00	Cable, Rear Brake
13	58830-13F00	Cable, Stop Lamp Switch
14	09200-05001	Pin
15	04111-20158	Cotter Pin
16	09209-13018	Pin
17	09150-06014	Nut
18	09385-06012	Snap Pin
19	58621-12F00	Guide, Rear Brake Cabale
20	01550-06123	Bolt
21	07130-06163	Bolt
22	09407-14407	Clamp (l:145)

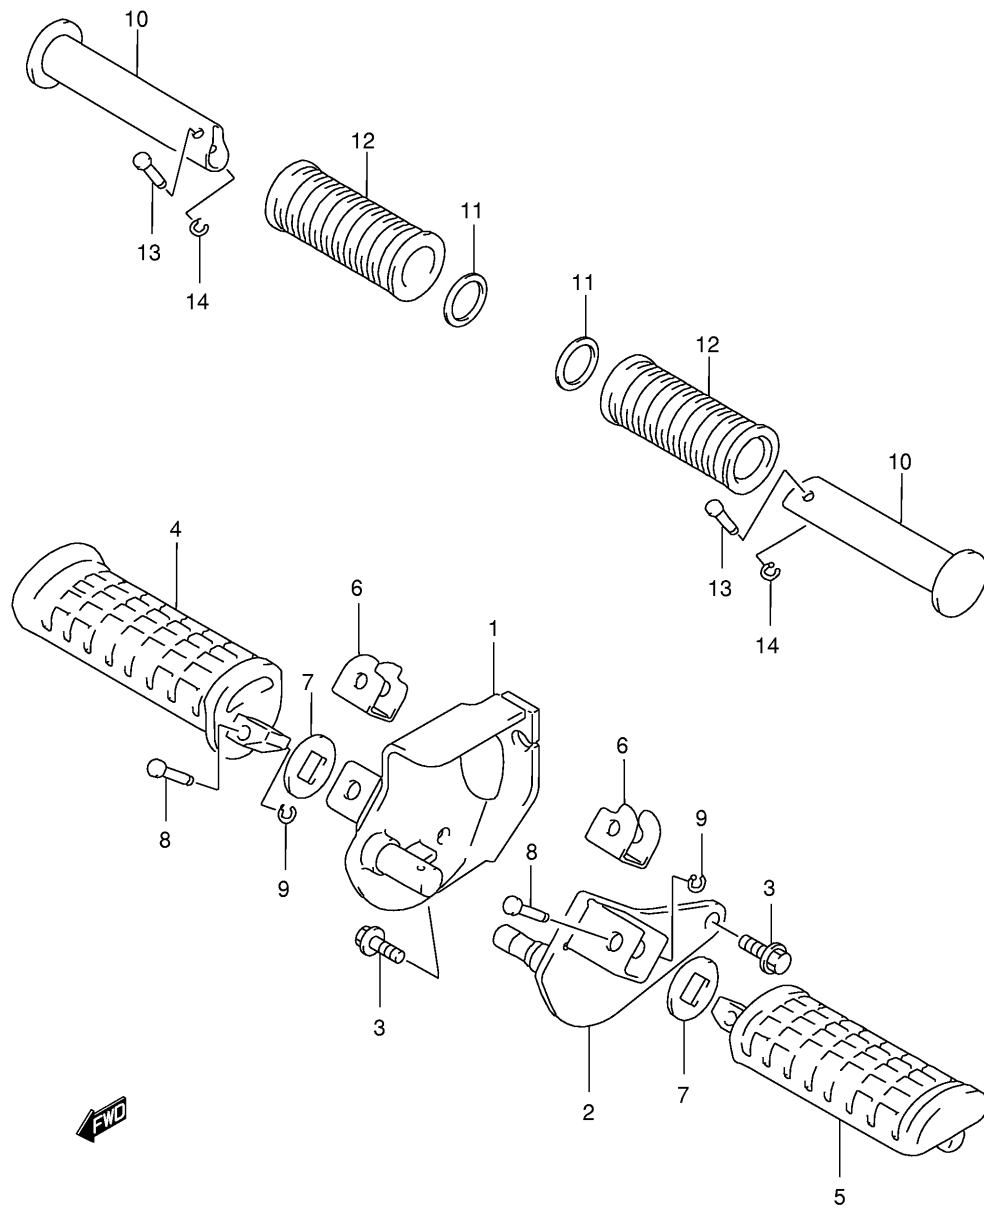 


Ref No	Part No	Description
1	43510-13F00	Bracket, Front Footrest Rh
2	43520-13F00	Bracket, Front Footrest Lh
3	01550-08207	Bolt
4	43550-04F00	Rubber, Front Footrest Rh
5	43560-04F00	Rubber, Front Footrest Lh
6	43570-04F00	Cushion, Front Footrest
7	43631-34A01	Washer, Footrest Rubber
8	09208-06005	Pin
9	08332-11043	E Ring
10	43610-38300	Bar, Pillion Footrest
11	09160-19024	Washer (19.5x32x2.0)
12	43612-33200	Rubber, Pillion Footrest
13	43636-25D00	Pin, Pillion Footrest
14	08332-11043	E Ring

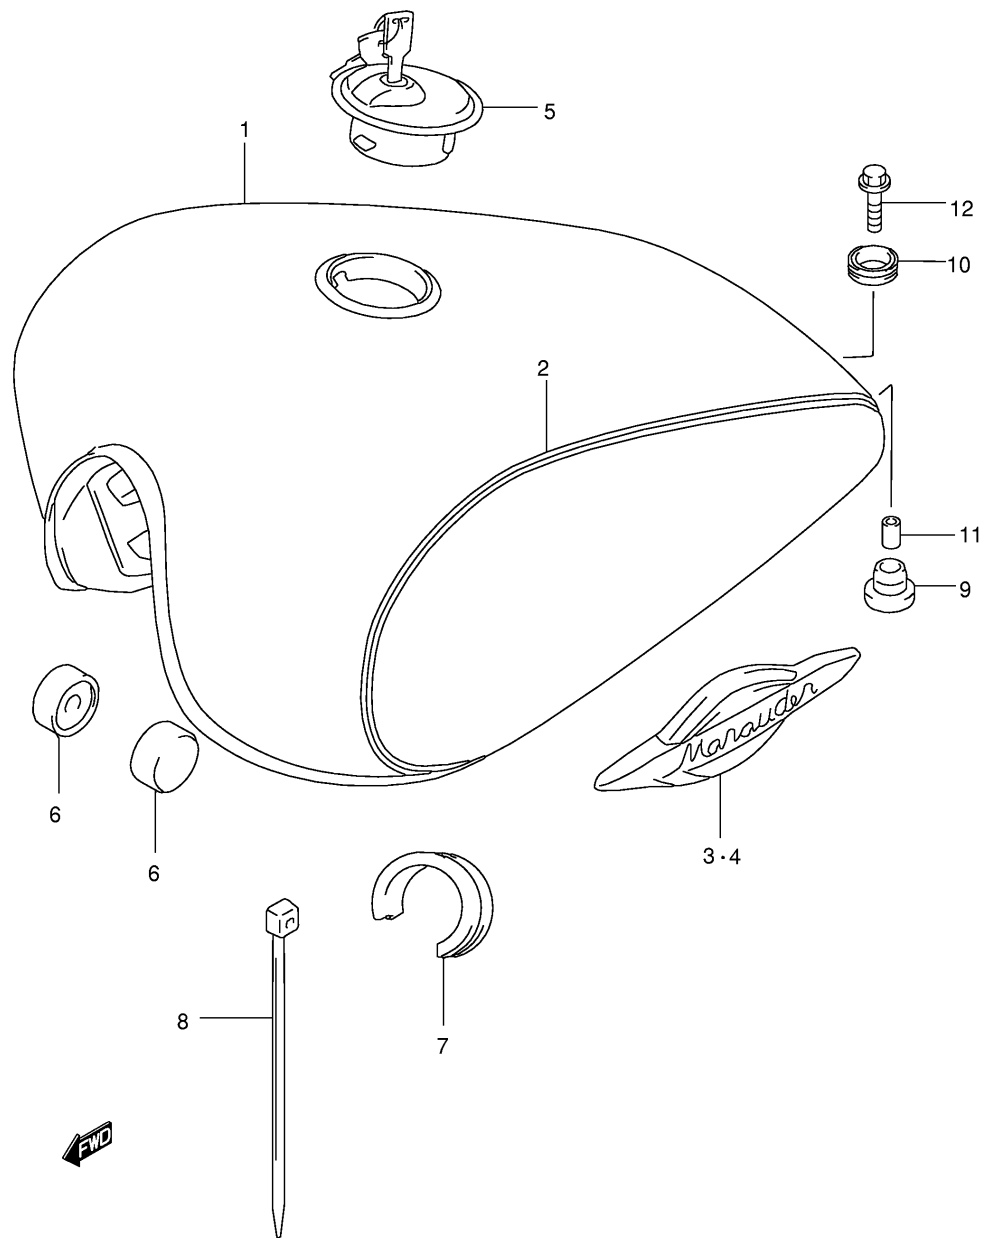 

Ref No	Part No	Description
1	44100-12F00-33J	Tank Assy, Fuel (black)
1	44100-12F00-Y98	Tank Assy, fuel (green)
1	44100-12F00-Y0W	Tank Assy, Fuel (orange)
1	44100-12F00-Y4L	Tank Assy, Fuel (yellow)
1	44100-12F00-Y4M	Tank Assy, Fuel (maroon)
2	68110-12F00-L3U	• . Tape Set, Fuel Tank
2	68110-12F00-L3V	• . Tape Set, Fuel Tank
2	68110-12F00-L3W	• . Tape Set, Fuel Tank
2	68110-12F00-L3Y	• . Tape Set, Fuel Tank
2	68110-12F00-L3Z	• . Tape Set, Fuel,tank
3	68111-12F00	Emblem, Fuel Tank Rh
4	68121-12F00	Emblem, Fuel Tank Lh
5	44200-12870	Cap Set, Fuel Tank
6	09329-10007	Cushion
7	44541-03F00	Cushion, Fuel Tank Side
8	09407-25402	Clamp (l:248)
9	09320-10020	Cushion
10	44512-42E00	Cushion, Fuel Tank Rear
11	09180-06271	Spacer (6.5x9x18)
12	01550-06303	Bolt

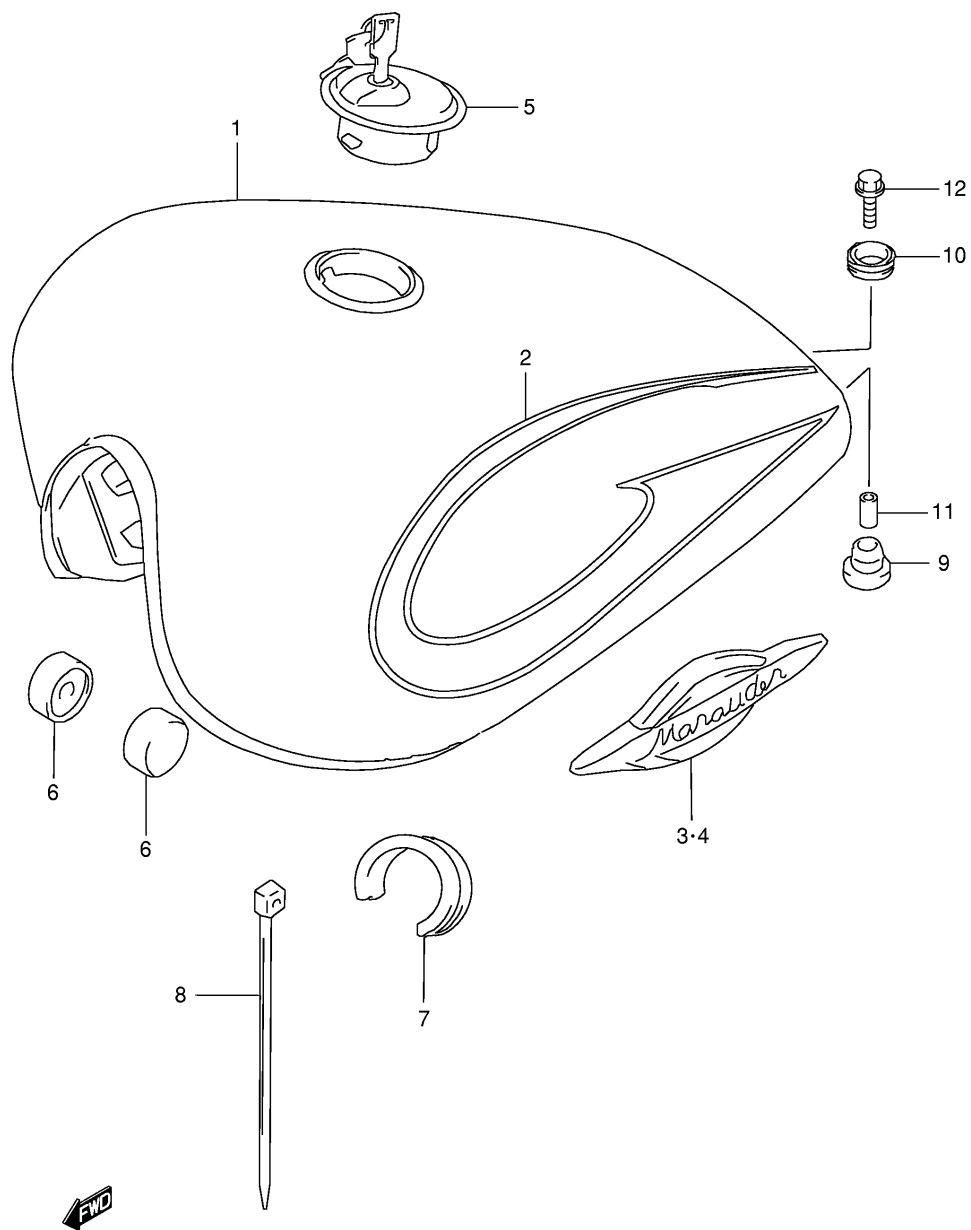 


Ref No	Part No	Description
1	44100-12F50-19A	Tank Assy, Fuel (red)
1	44100-12F50-Y98	Tank Assy,.fuel (green)
1	44100-12F50-Y7L	Tank Assy, Fuel (black)
2	68110-12F20-N5Y	• . Tape Set, Fuel Tank
2	68110-12F20-N5Z	• . Tape Set, Fuel Tank
2	68110-12F20-N6B	• . Tape Set, Fuel Tank
3	68111-12F00	Emblem, Fuel Tank Rh
4	68121-12F00	Emblem, Fuel Tank Lh
5	44200-12870	Cap Set, Fuel Tank
6	09329-10007	Cushion
7	44541-03F00	Cushion, Fuel Tank Side
8	09407-25402	Clamp (l:248)
9	09320-10020	Cushion
10	44512-42E00	Cushion, Fuel Tank Rear
11	09180-06271	Spacer (6.5x9x18)
12	01550-06303	Bolt

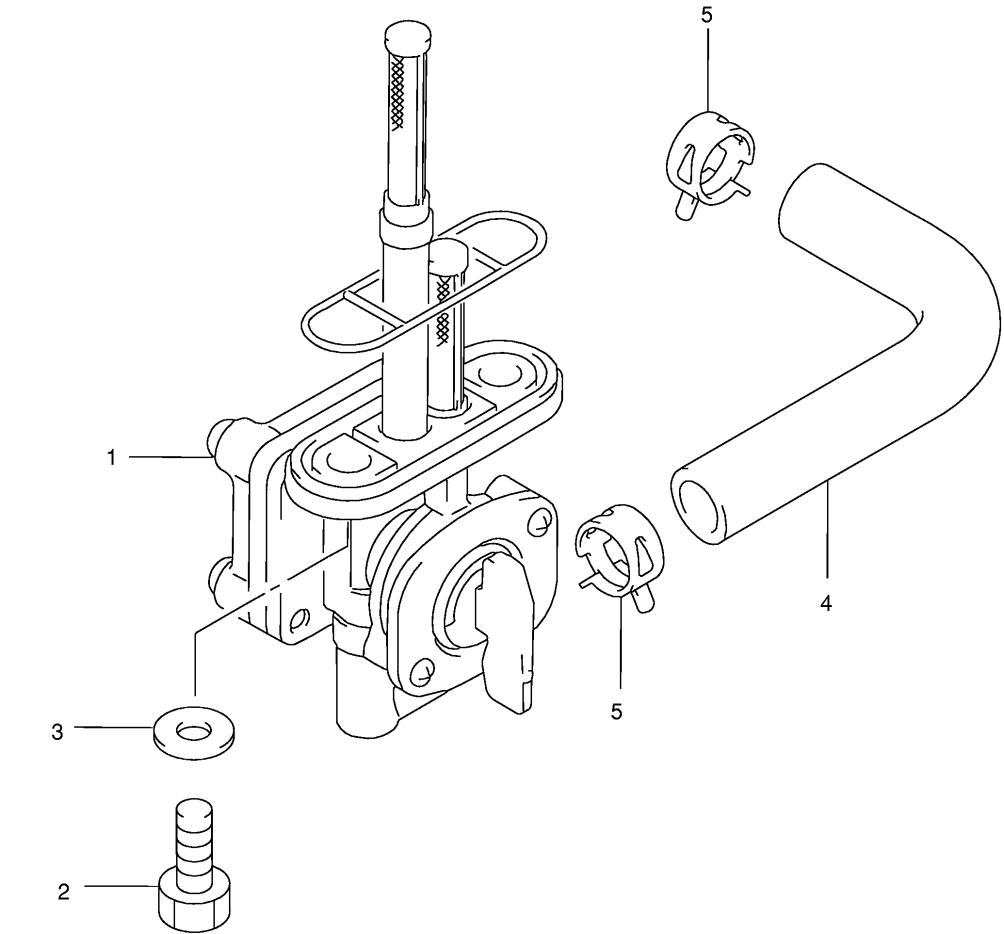 


Ref No	Part No	Description
1	44300-12F00	Cock Assy, Fuel
2	09128-06057	Bolt
3	09168-06026	Gasket (6.4x11.5x0.8)
4	09355-70125-600	Hose (l:600->20)
5	09401-11407	Clip




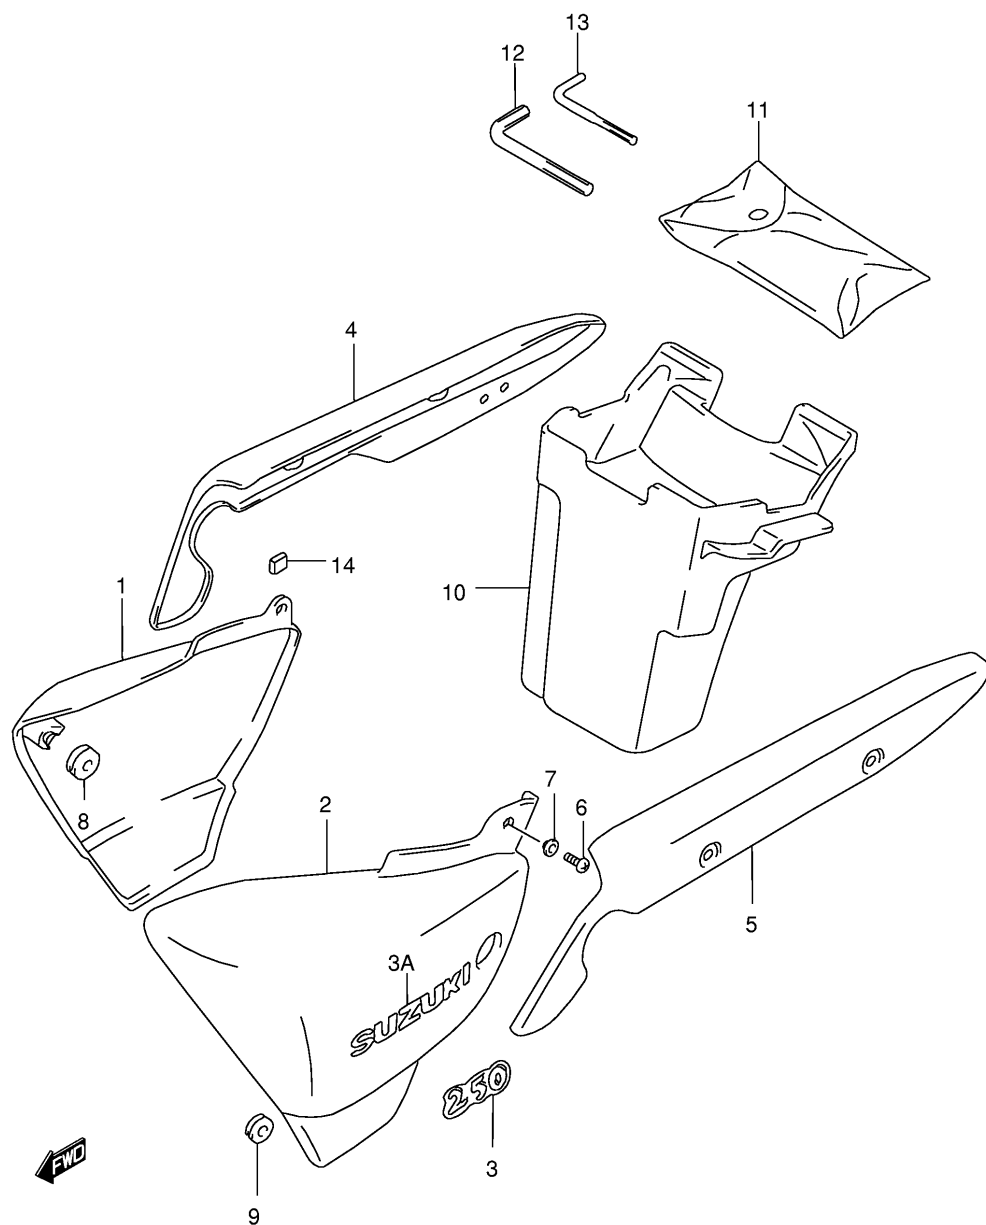 


Ref No	Part No	Description
1	47111-12F00-33J	Cover, Frame Rh (black)
1	47111-12F00-Y98	Cover, Frame Rh (green)
1	47111-12F00-Y0W	Cover, Frame Rh (orange)
1	47111-12F00-Y4L	Cover, Frame Rh (yellow)
1	47111-12F00-Y4M	Cover, Frame Rh (maroon)
2	47211-12F00-33J	Cover, Frame Lh (black)
2	47211-12F00-Y98	Cover, Frame Lh (green)
2	47211-12F00-Y0W	Cover, Frame Lh (orange)
2	47211-12F00-Y4L	Cover, Frame Lh (yellow)
2	47211-12F00-Y4M	Cover, Frame Lh (maroon)
3	68131-12F10-L3U	Emblem, Frame Cover
3	68131-12F10-M3B	Emblem, Frame Cover
3	68131-12F10-M3C	Emblem, Frame Cover
3	68131-12F10-M3D	Emblem, Frame Cover
3	68131-12F10-M3E	Emblem, Frame Cover
3a	68131-12F00	Emblem, Suzuki
4	47121-12F00	Cover, Frame Rear Rh
5	47221-12F00	Cover, Frame Rear Lh
6	02142-06123	Screw
7	09169-06071	Washer
8	09320-08018	Cushion
9	09320-08013	Cushion
10	92211-12F00	Body, Ruggage Box
11	09800-21022	Tool Assy
12	09816-00050	Spanner 6,hexagon
13	09816-00103	Spanner 4,hexagon
14	53123-33E00	Cushion

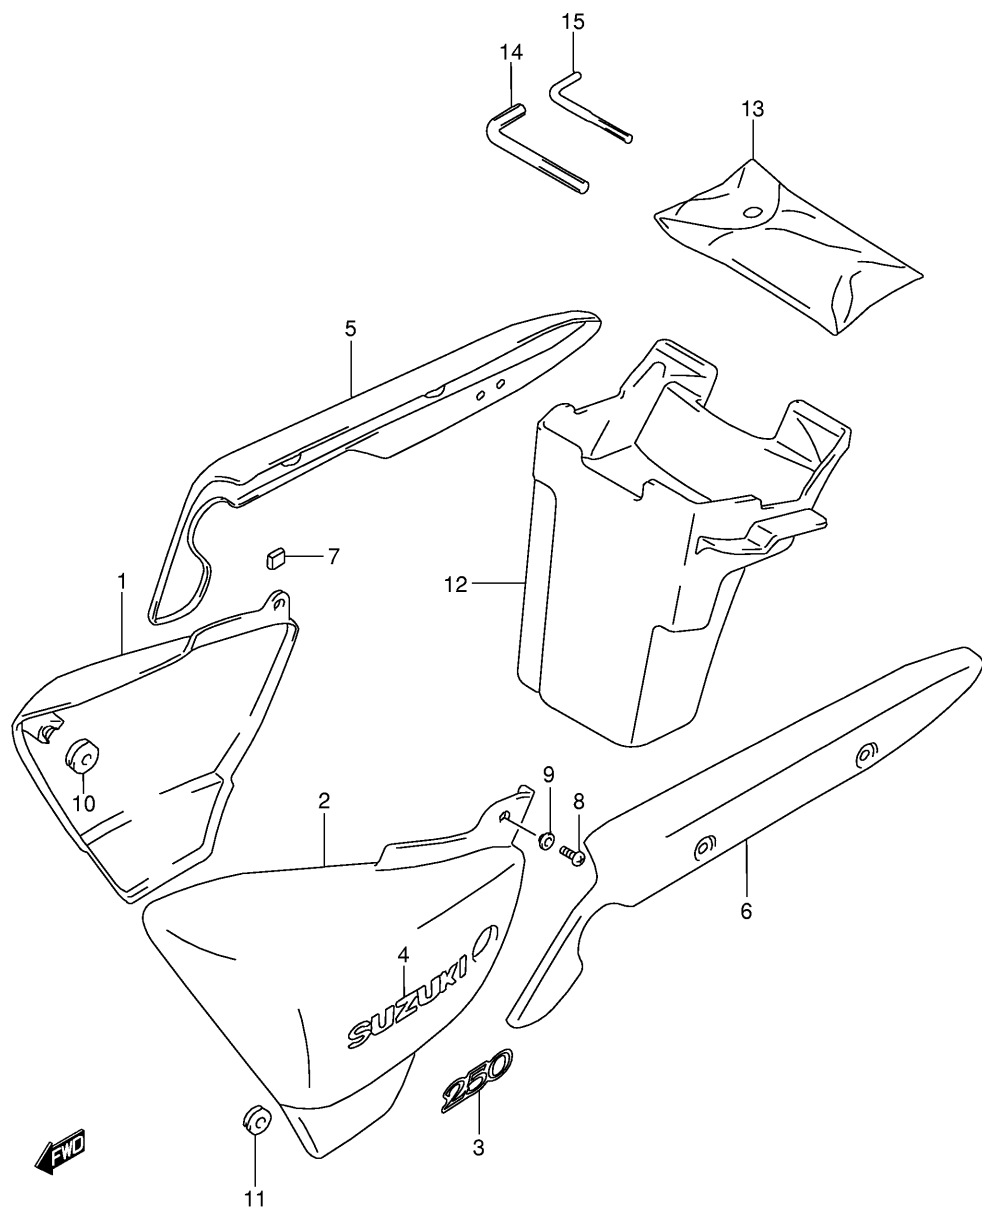 

Ref No	Part No	Description
1	47111-12F00-19A	Cover, Frame Rh (red)
1	47111-12F00-Y98	Cover, Frame Rh (green)
1	47111-12F00-Y7L	Cover, Frame Rh (black)
2	47211-12F00-19A	Cover, Frame Lh (red)
2	47211-12F00-Y98	Cover, Frame Lh (green)
2	47211-12F00-Y7L	Cover, Frame Lh (black)
3	68131-12F30-N8R	Emblem, Frame Cover
3	68131-12F30-K1B	Emblem, Frame Cover
4	68131-12F00	Emblem, Suzuki
5	47121-12F00	Cover, Frame Rear Rh
6	47221-12F00	Cover, Frame Rear Lh
7	53123-33E00	Cushion
8	02142-06123	Screw
9	09169-06071	Washer
10	09320-08018	Cushion
11	09320-08013	Cushion
12	92211-12F00	Body, Ruggage Box
13	09800-21022	Tool Assy
14	09816-00050	Spanner 6,hexagon
15	09816-00103	Spanner 4,hexagon

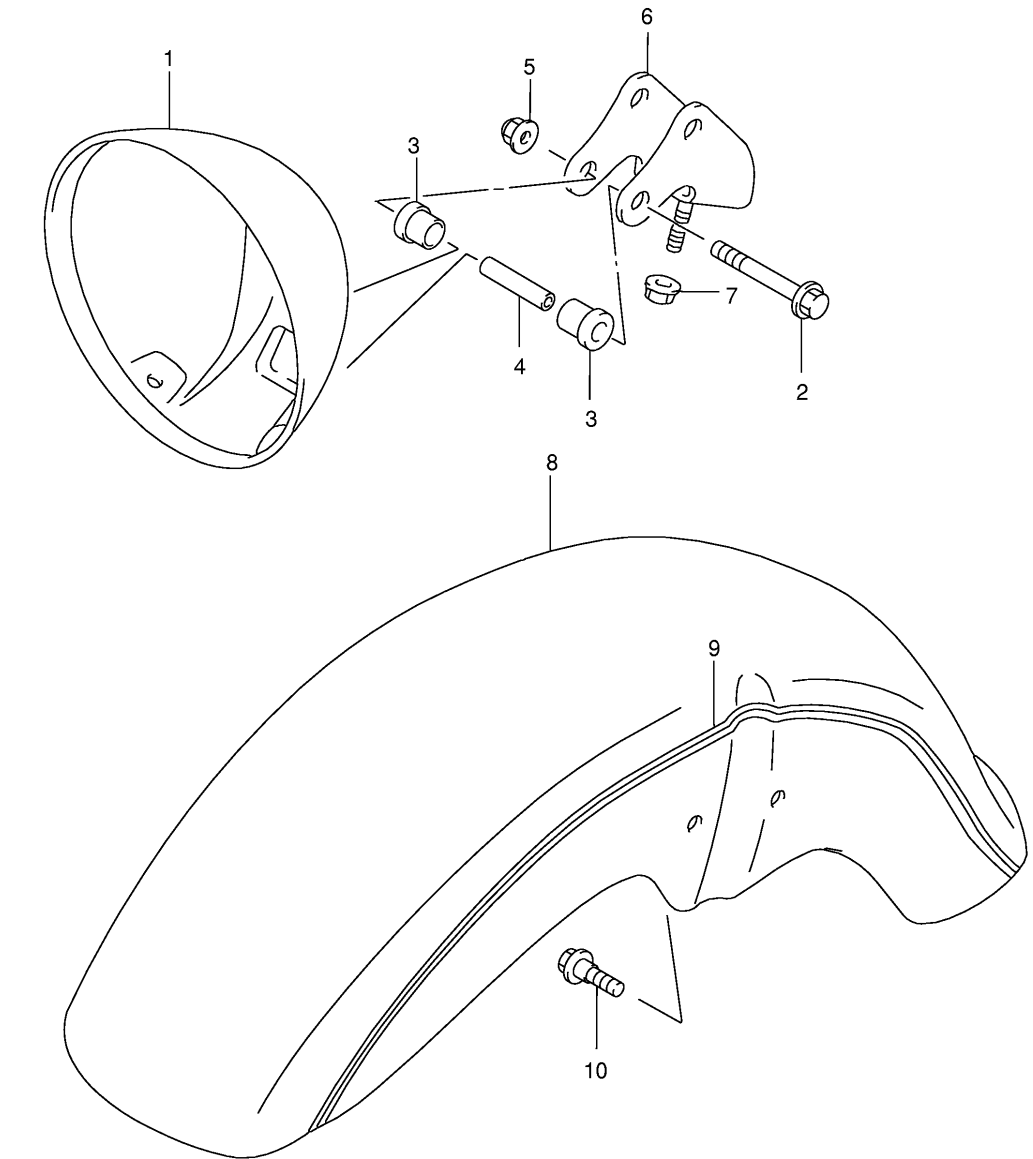 


Ref No	Part No	Description
1	51811-12F00	Housing, Headlamp
2	01547-06507	Bolt
3	51827-12F00	Cushion, Headlamp Housing
4	09180-06279	Spacer
5	08313-20067	Nut
6	51850-12F00	Bracket, Headlamp Housing
7	08319-31103	Nut
8	53100-12850-33J	Fender Set, Front (black)
8	53100-12850-Y98	Fender Set, Front (green)
8	53100-12850-Y0W	Fender Set, Front (orange)
8	53100-12850-Y4L	Fender Set, Front (yellow)
8	53100-12850-Y4M	Fender Set, Front (maroon)
9	68150-12F00-L3U	• . Tape Set, Front Fender
9	68150-12F00-L3V	• . Tape Set, Front Fender
9	68150-12F00-L3W	• . Tape Set, Front Fender
9	68150-12F00-L3Y	• . Tape Set, Front Fender
9	68150-12F00-L3Z	• . Tape Set, Front Fender
10	09111-06066	Bolt

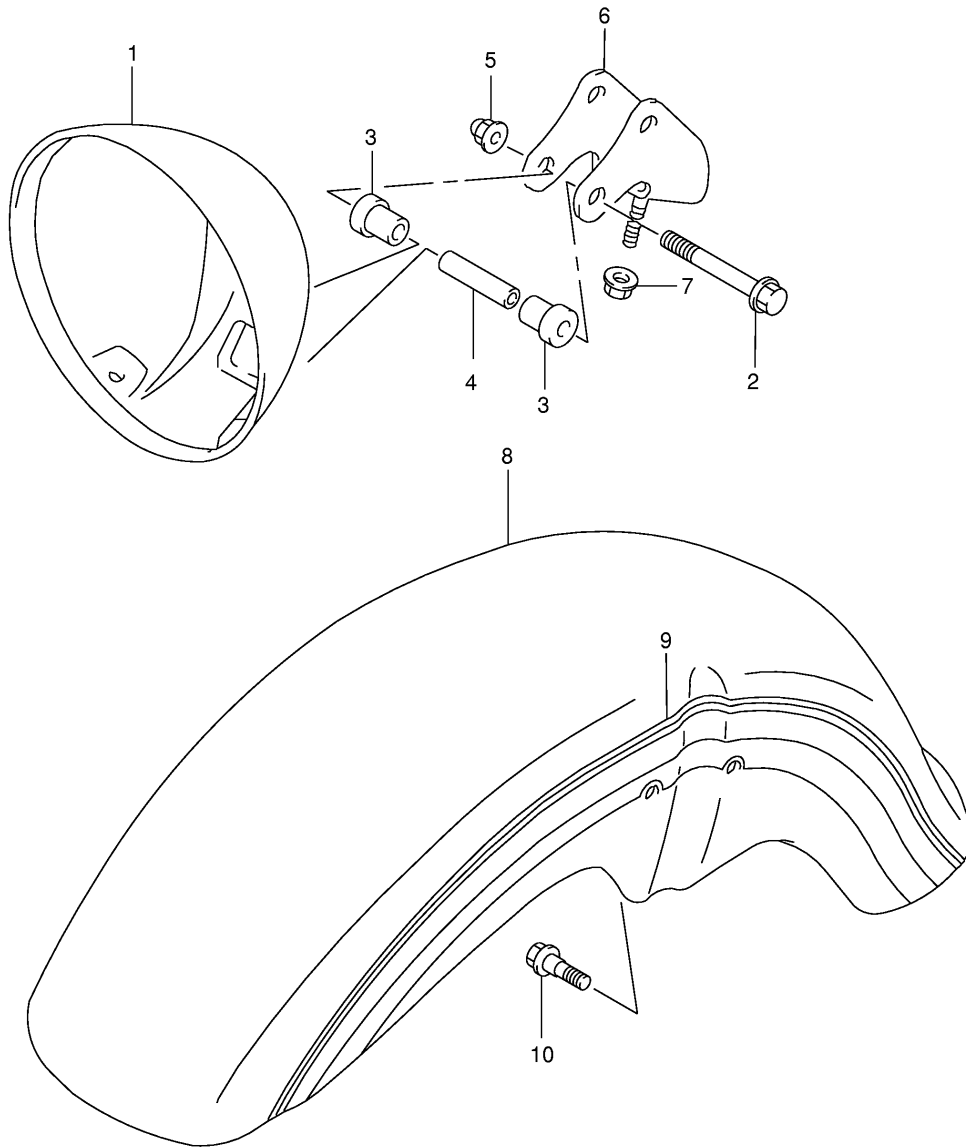 


Ref No	Part No	Description
1	51811-12F00	Housing, Headlamp
2	01547-06507	Bolt
3	51827-12F00	Cushion, Headlamp Housing
4	09180-06279	Spacer
5	08313-20067	Nut
6	51850-12F01	Bracket, Headlamp Housing
7	08319-31103	Nut
8	53110-12F30-19A	Fender, Front (red)
8	53110-12F30-Y98	Fender, Front (green)
8	53110-12F30-Y7L	Fender, Front (black)
9	68150-12F20-N6C	• . Tape Set, Front Fender
9	68150-12F20-N6D	• . Tape Set, Front Fender
9	68150-12F20-N6F	• . Tape Set, Front Fender
10	09111-06066	Bolt




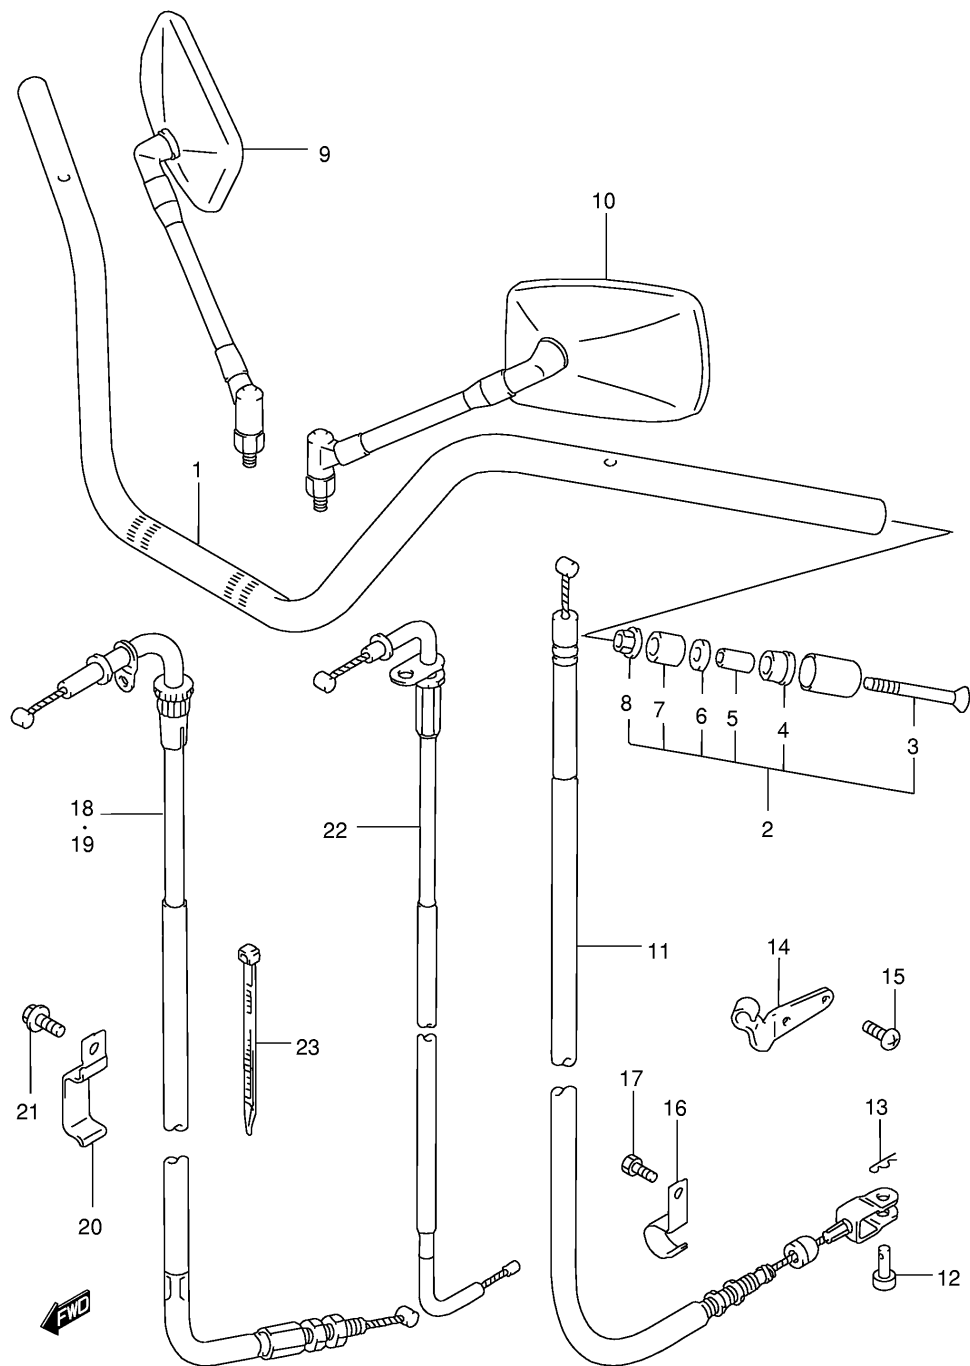 


Ref No	Part No	Description
1	56111-12F00	Handlebar
2	56200-12870	Balancer Set, Handlebar
3	09127-06021	. . Screw (6x125)
4	56272-26D10	. . Expander, Handle Balancer
5	56276-17D00	. . Spacer, Expander
6	09160-06126	. . Washer (6.5x14x2.0)
7	56272-44500	. . Expander, Handle Balancer
8	09159-06024	. . Nut
9	56500-03F20	Mirror Assy, Rear View Rh
10	56600-03F20	Mirror Assy, Rear View Lh
11	58200-13F00	Cable Assy, Clutch
12	09200-06004	Pin (l:13)
13	04111-20158	Cotter Pin
14	58634-25D00	Stopper, Clutch Cable
15	02112-06127	Screw
16	58626-37400	Clamp, Clutch Cable
17	02112-16103	Screw
18	58300-13F00	Cable Assy, Throttle No.1
19	58300-13F10	Cable Assy, Throttle No.2
20	09403-10307	Clamp
21	01550-06163	Bolt
22	58410-13F00	Cable, Starter
23	09407-14403	Clamp (l:125)
23	09407-25401	Clamp (l:235)

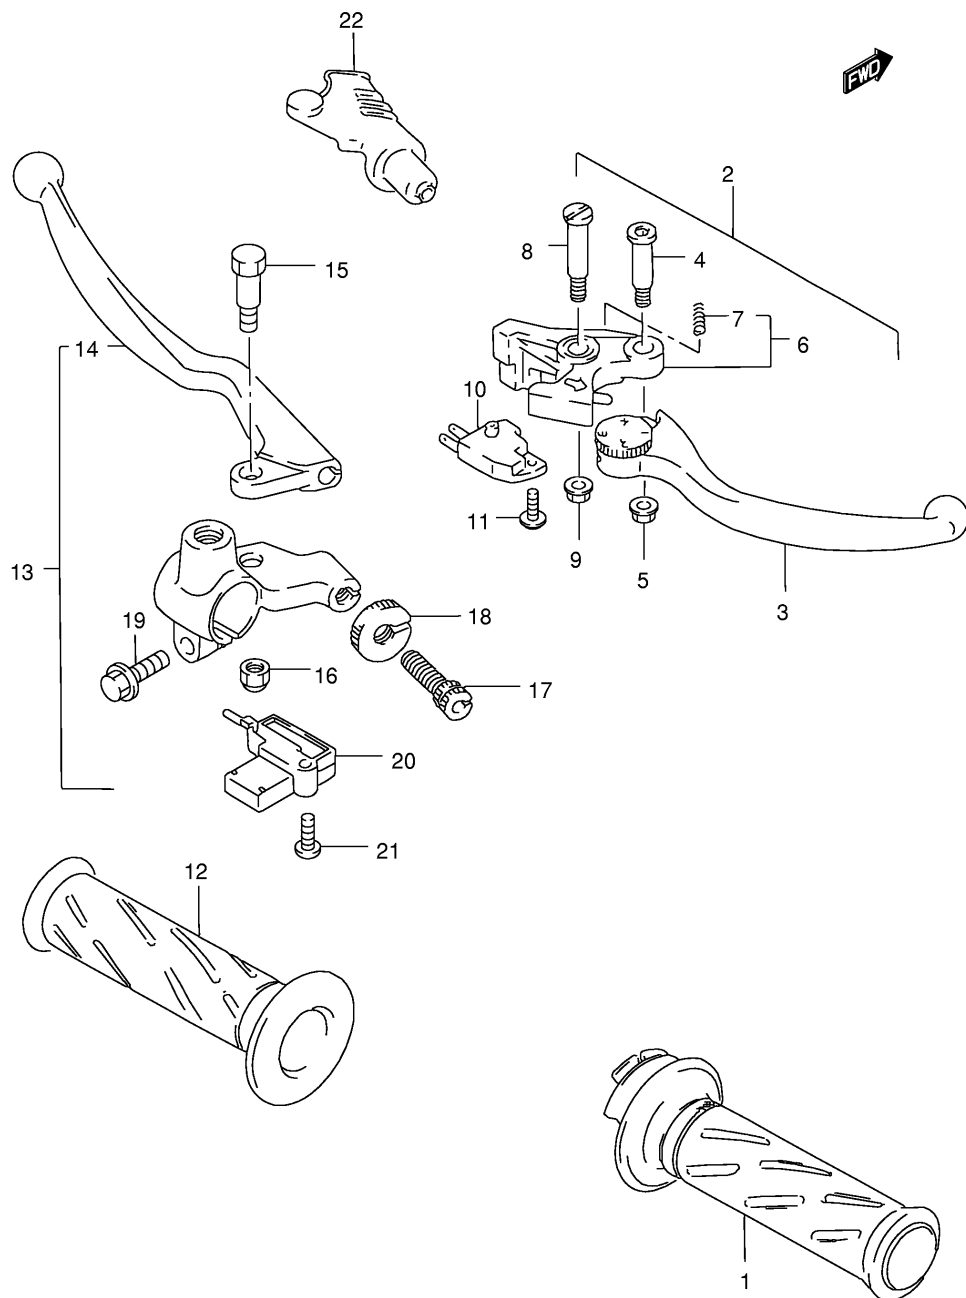 


Ref No	Part No	Description
1	57110-46E01	Grip, Throttle
2	57300-32C10	Lever Assy, Brake
3	57420-32C00	• . Lever, Adjust
4	57437-32C01	• . Bolt, Lever
5	08319-31063	• . Nut
6	57430-32C10	• . Knocker
7	57438-32C00	• • . Spring
8	57431-17C00	• . Bolt, Knocker
9	08316-10063	• . Nut
10	57460-17C00	Switch Assy, Stop
11	57465-17C00	• . Screw
12	57211-22D01	Grip, Lh
13	57500-25D00	Lever Assy, Clutch
14	57621-33E00	• . Lever, Clutch
15	57431-45C00	• . Bolt, Lever Set
16	08319-21063	• . Nut
17	57441-45C00	• . Adjuster, Wire
18	57442-45C00	• . Nut, Lock
19	01547-06203	• . Bolt
20	57560-05A00	• . Switch, Clutch
21	02122-03208	• . Screw
22	57661-33E00	Cover, Clutch Lever

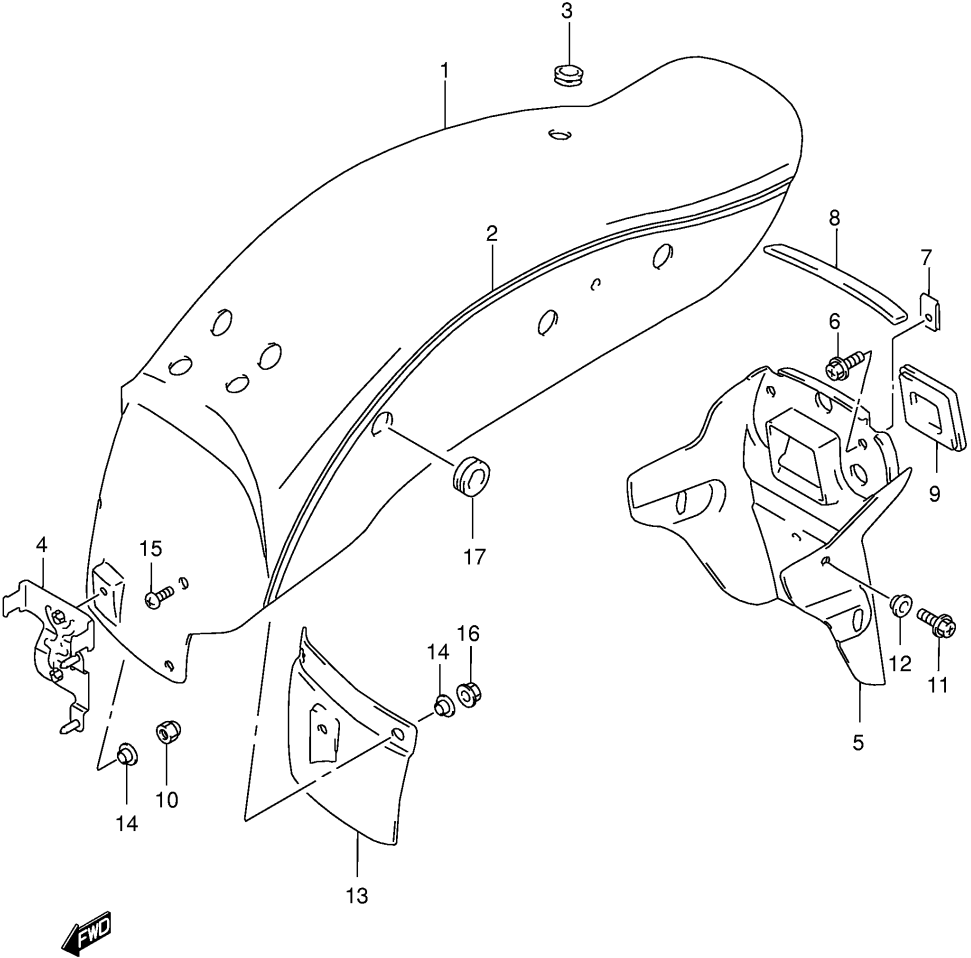 


Ref No	Part No	Description
1	63110-12F00-33J	Fender, Rear (black)
1	63110-12F00-Y98	Fender, Rear (green)
1	63110-12F00-Y0W	Fender, Rear (orange)
1	63110-12F00-Y4L	Fender, Rear (yellow)
1	63110-12F00-Y4M	Fender, Rear (maroon)
2	68170-12F00-L3U	• . Tape Set, Rear Fender
2	68170-12F00-L3V	• . Tape Set, Rear Fender
2	68170-12F00-L3W	• . Tape Set, Rear Fender
2	68170-12F00-L3Y	• . Tape Set, Rear Fender
2	68170-12F00-L3Z	• . Tape Set, Rear Fender
3	09320-13015	Cushion
4	63140-13F00	Bracket, Rear Fender
5	63311-12F00	Extension, Rear Fender
6	02162-06163	Bolt
7	47153-19C01	Plate, Frame Cover
8	63312-48E00	Cushion, Extension
9	63191-48E00	Cap, Extension
10	08313-10063	Nut
11	02162-06123	Bolt
12	09169-06071	Washer
13	63331-12F00	Mud Guard, Rear Fender
14	09169-06071	Washer
15	02142-06163	Screw
16	08316-10063	Nut
17	63118-12F00	Cushion, Rear Fender

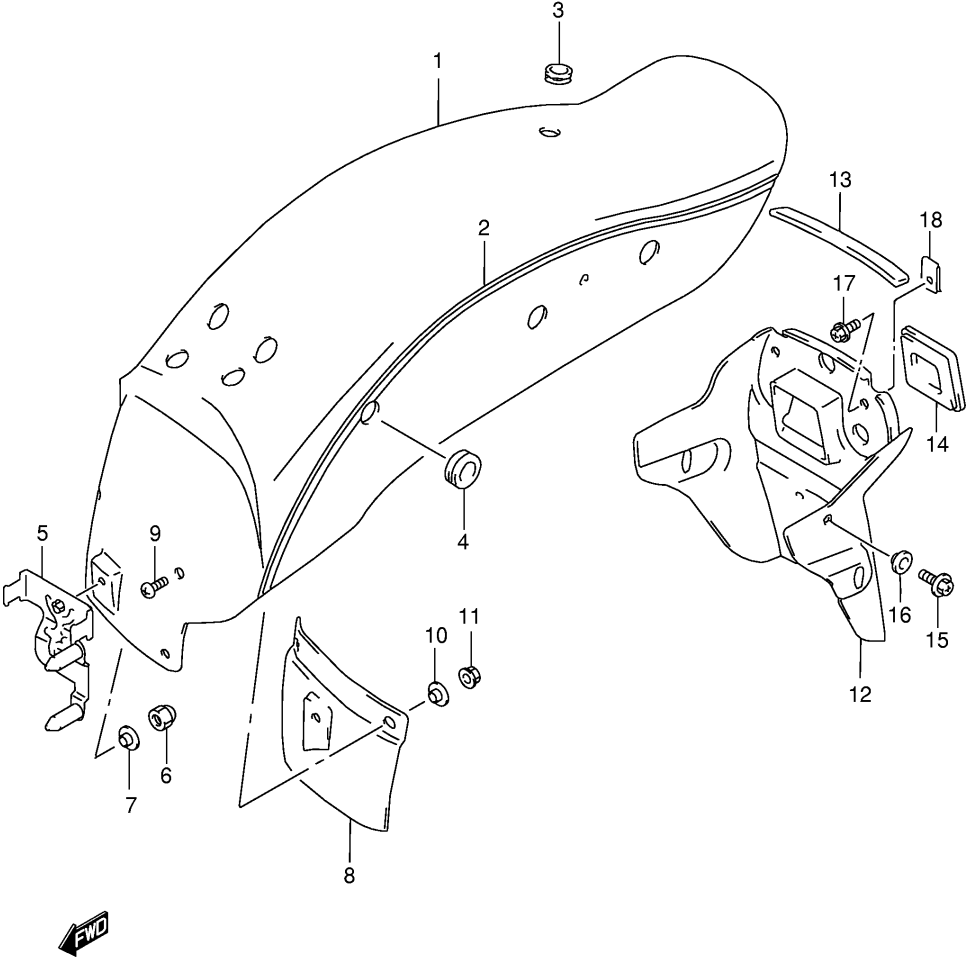 


Ref No	Part No	Description
1	63110-12F20-19A	Fender, Rear (red)
1	63110-12F20-Y98	Fender, Rear (green)
1	63110-12F20-Y7L	Fender, Rear (black)
2	68170-12F20-N6C	• . Tape Set, Rear Fender
2	68170-12F20-N6D	• . Tape Set, Rear Fender
2	68170-12F20-N6F	• . Tape Set, Rear Fender
3	09320-13015	Cushion, Upper
4	63118-12F00	Cushion, Side
5	63140-13F00	Bracket, Rear Fender
6	08313-10063	Nut
7	09169-06071	Washer
8	63331-12F00	Mud Guard, Rear Fender
9	02142-06163	Screw
10	09169-06071	Washer
11	08316-10063	Nut
12	63311-12F00	Extension, Rear Fender
13	63312-48E00	Cushion, Extension
14	63191-48E00	Cap, Extension
15	02162-06123	Bolt, Side
16	09169-06071	Washer
17	02162-06163	Bolt, Rear
18	47153-19C01	Plate

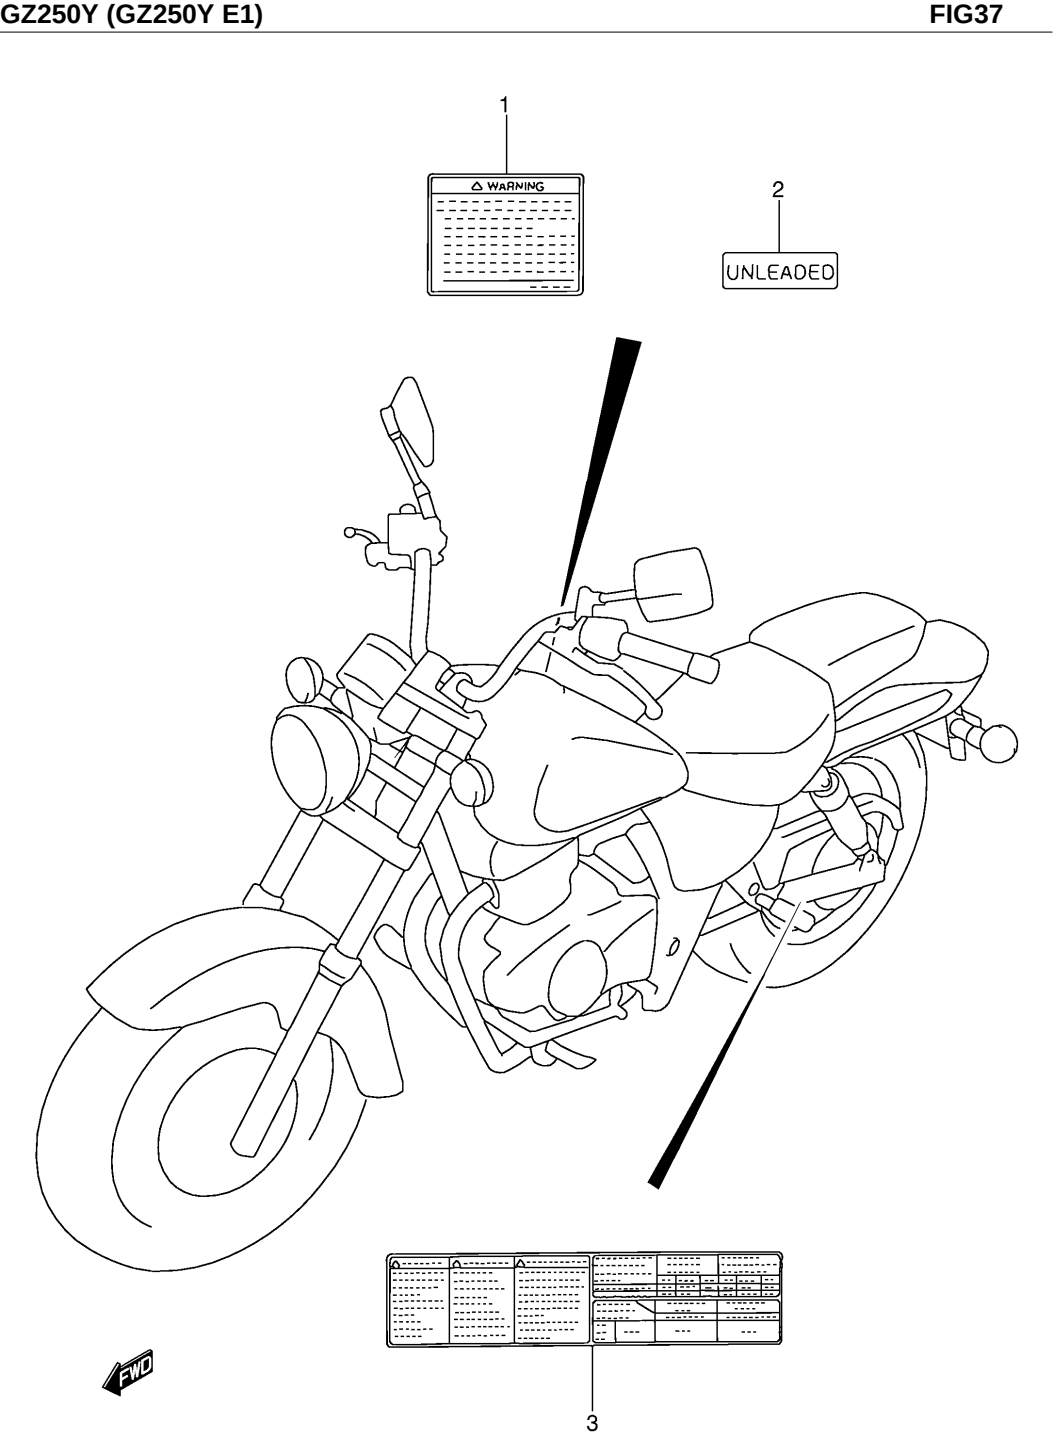 

Ref No	Part No	Description
1	68319-33E01	Label, Safety (english)
1	68319-33E31	Label, Safety (french)
1	68319-33E21	Label, Safety (german)
1	68319-33E91	Label, Safety (swedish)
1	68319-33EA1	Label, Safety (finnish)
1	68319-33EB1	Label, Safety (norwegian)
1	68319-33EC1	Label, Safety (danish)
1	68319-33E41	Label, Safety (italian)
1	68319-33E51	Label, Safety (spanish)
1	68319-33E71	Label, Safety (dutch)
2	68623-17D00	Label, Fuel
2	86932-73060	Label, Fuel
3	68332-13F00	Label, Tire Information
4	99011-13F50-042	Manual, Owner's

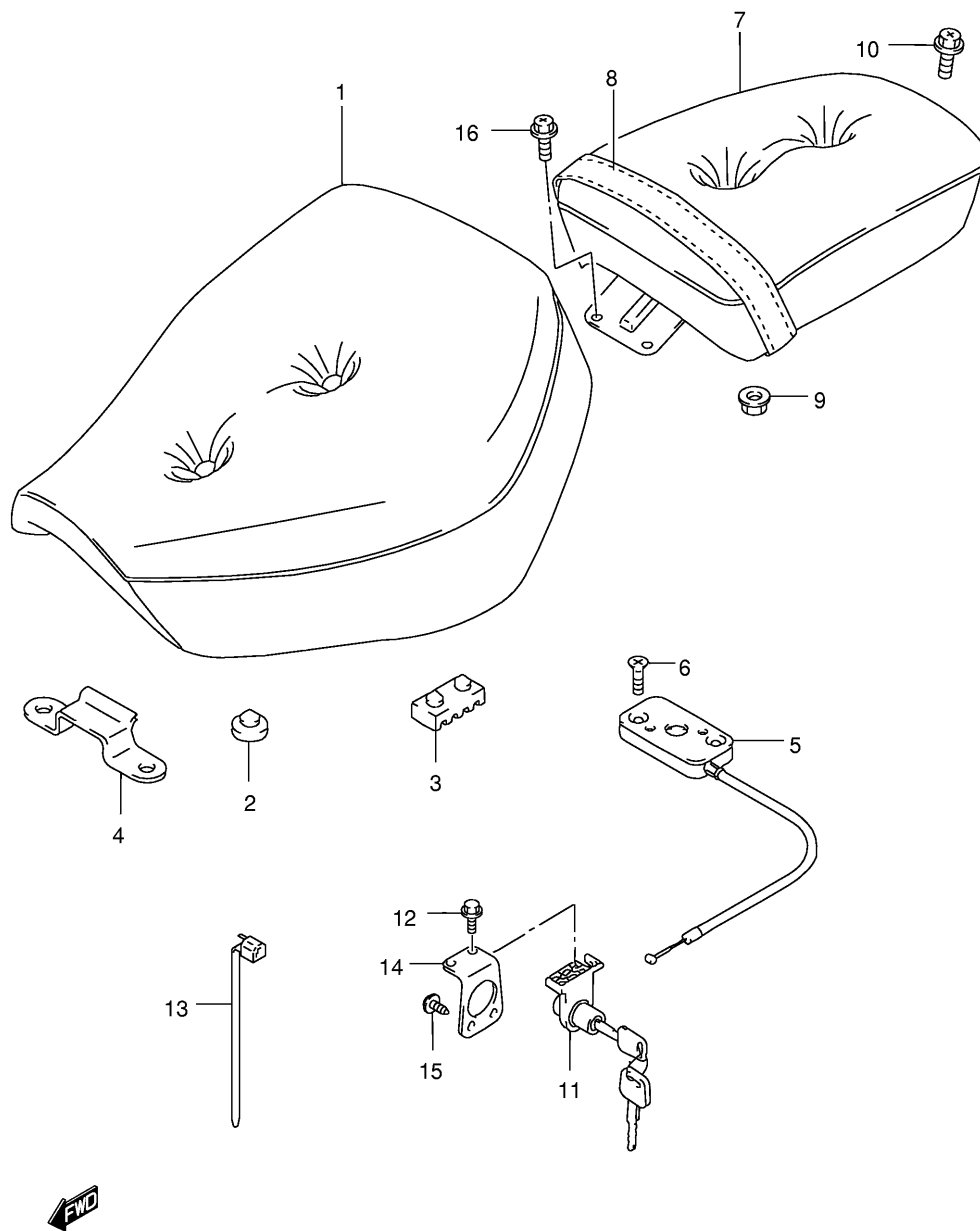 


Ref No	Part No	Description
1	45100-12F00-K9C	Seat Assy
2	45148-36C00	• . Cushion
3	45149-31300	• . Cushion
4	45119-12F00	Plate, Front Seat Hook
5	45220-12F00	Bracket, Front Seat
6	02122-06253	Screw
7	45300-12F00-K9C	Seat Assy, Pillion
8	45180-12F00-T65	• . Band, Seat
9	08316-10063	• . Nut
10	09106-08140	Bolt, Rear (8x16)
11	95700-31840	Lock Assy, Seat
12	01547-05103	Bolt
13	09407-22403	Clamp
14	45289-03F00	Bracket, Seat Lock
15	03141-14123	Screw
16	09106-06061	Bolt, Front (6x12)

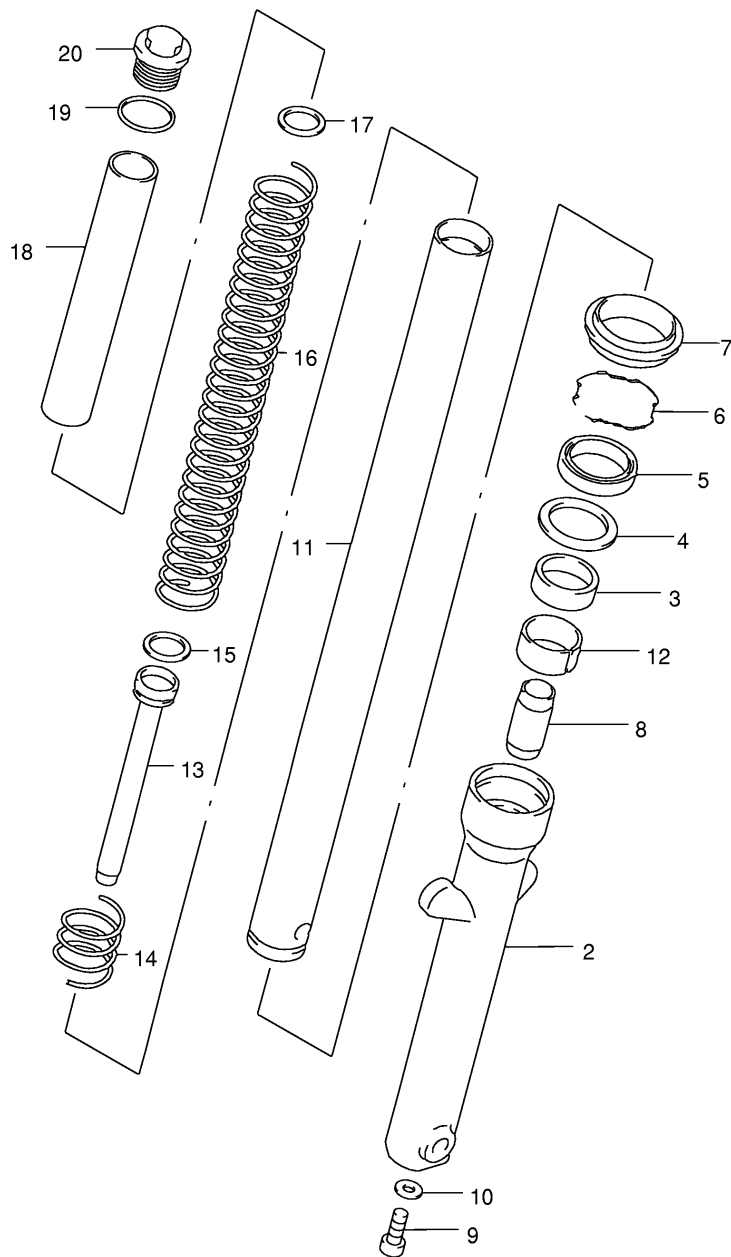 


Ref No	Part No	Description
	51103-12F00	Damper Assy, Front Fork Rh
	51104-12F00	Damper Assy, Front Fork Lh
1	51130-12F00	. Tube, Outer Rh
2	51140-12F00	. Tube, Outer Lh
3	51152-12F00	. Bush, Guide
4	51168-25D00	. Spacer, Seal
5	51153-25D00	. Seal, Oil
6	51556-25D00	. Ring, Stopper
7	51173-25D00	. Seal, Dust
8	51195-25D00	. Piece, Oil Lock
9	51147-42AA0	. Bolt
10	51148-36011	. Gasket
11	51110-12F00	. Tube, Inner
12	51121-25D00	. Bush, Slide
13	51146-12F00	. Pipe, Seat
14	51177-25D00	. Spring, Rebound
15	51196-25D00	. Ring, Piston
16	51171-12F00	. Spring, Front
17	51192-25D00	. Joint, Spring
18	51176-25D00	. Collar, Spring
19	51117-25D00	. O Ring
20	51189-12F00	. Bolt, Fork
21	07130-08357	. Bolt, Rh (8x35)




Ref No	Part No	Description
1	51410-12F00	Stem, Steering
2	51644-12C00	• . Seal, Lower
3	09267-30010	• . Bearing (30x55x17)
4	01550-10407	Bolt (10x40)
5	51311-12F00	Head, Steering Stem
6	01550-08457	Bolt (8x45)
7	51356-43530	Washer
8	51352-43530	Bolt
9	09250-06011	Cap
10	07130-08257	Bolt (8x25)
11	56211-12F00	Holder, Handle Upper
12	56221-12F00	Holder, Handle Lower
13	51451-27431	Bolt, Holder
14	08319-31107	Nut
15	51871-12F00	Cover, Front Fork Under
16	09139-06088	Screw (6x16)
17	09267-25009	Bearing (25x47x15)
18	51643-40502	Seal, Dust Upper
19	51631-28000	Nut, Stem

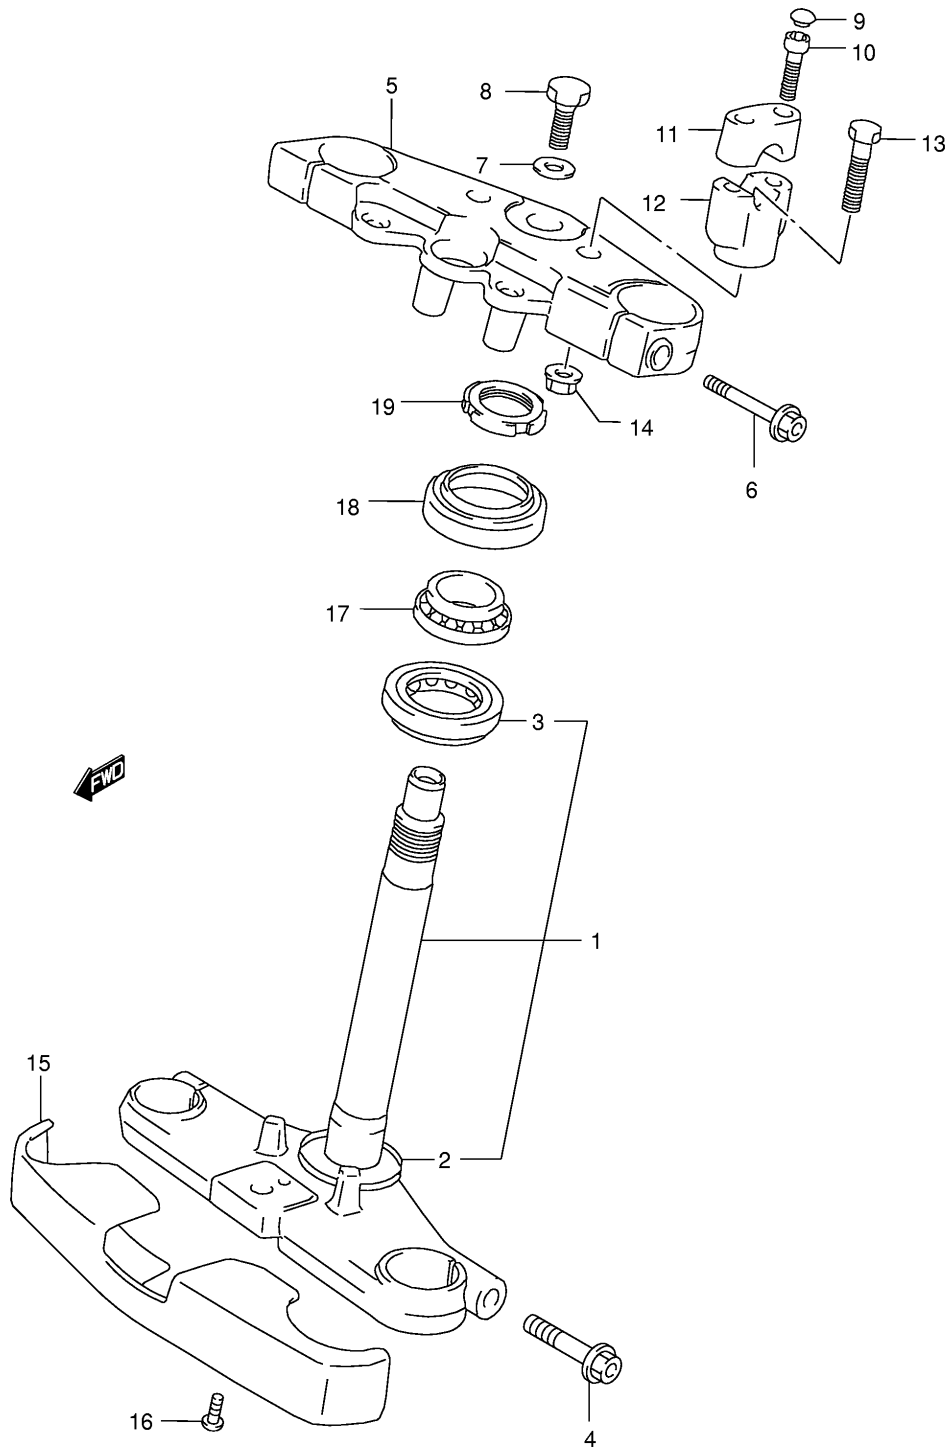 


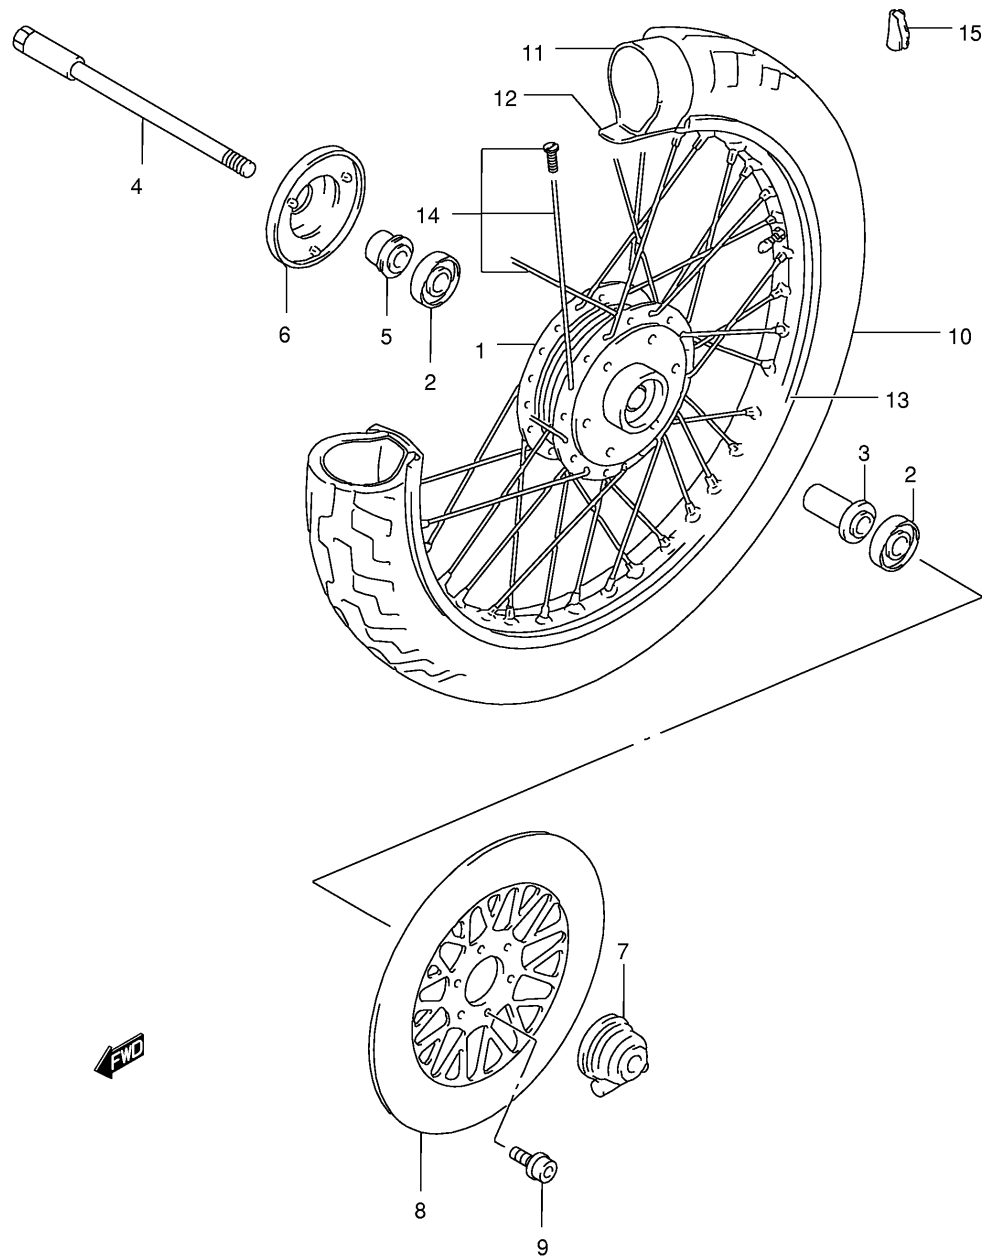 


Ref No	Part No	Description
1	54111-47021	Hub, Front Wheel
2	08123-63027	Bearing
3	54730-18400	Spacer, Bearing
4	54711-12F00	Axle, Front
5	54740-18410	Spacer, Bearing Rh
6	54871-45000	Cover, Hub Rh
7	54600-12F00	Box Assy, Speedometer Gear
8	59221-12F00	Disc, Front Brake Lh
9	09106-08131	Bolt (8x30)
10	55100-12F00	Tire, Front (110/90-16) Dunlop
11	55200-12F00	Tube Assy, Wheel Inner
12	55261-12F00	Protector, Inner Tube
13	55311-12F00	Rim, Front Wheel (16xmt2.50)
14	55320-12F00	Spoke Set, Front Wheel
15	55411-11000	Balancer (20g)
15	55412-11000	Balancer (30g)

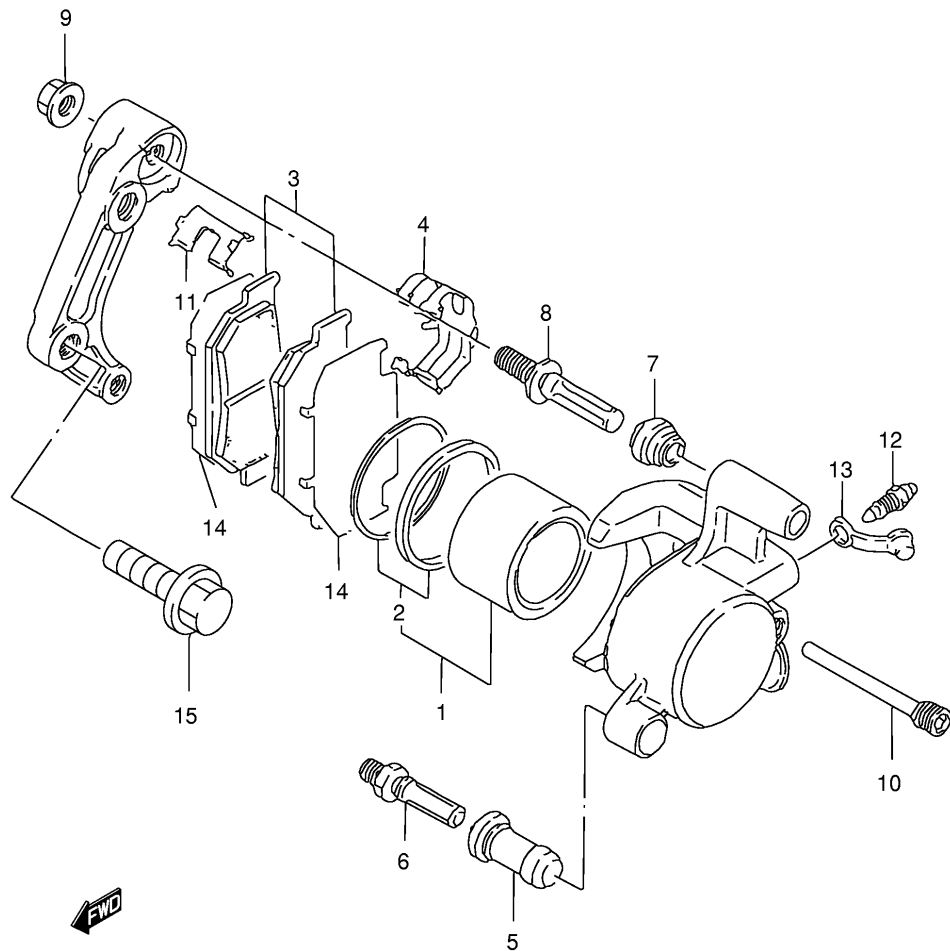 

Ref No	Part No	Description
	59300-24B20	Caliper Assy, Front Lh
1	59300-24820	• . Piston Set
2	59300-24810	• . Seal Set, Piston
3	59300-24830	• . Pad Set
4	59315-14600	• . Spring
5	59386-13A00	• . Boot
6	59382-27C30	• . Pin
7	59303-14500	• . Boot
8	59305-14500	• . Bolt
9	59306-14500	• . Nut
10	59345-14600	• . Pin
11	59316-24B10	• . Retainer
12	59121-01A00	• . Bleeder
13	59122-01A00	• . Cap
14	59371-24B00	• . Shim
15	01550-10407	Bolt

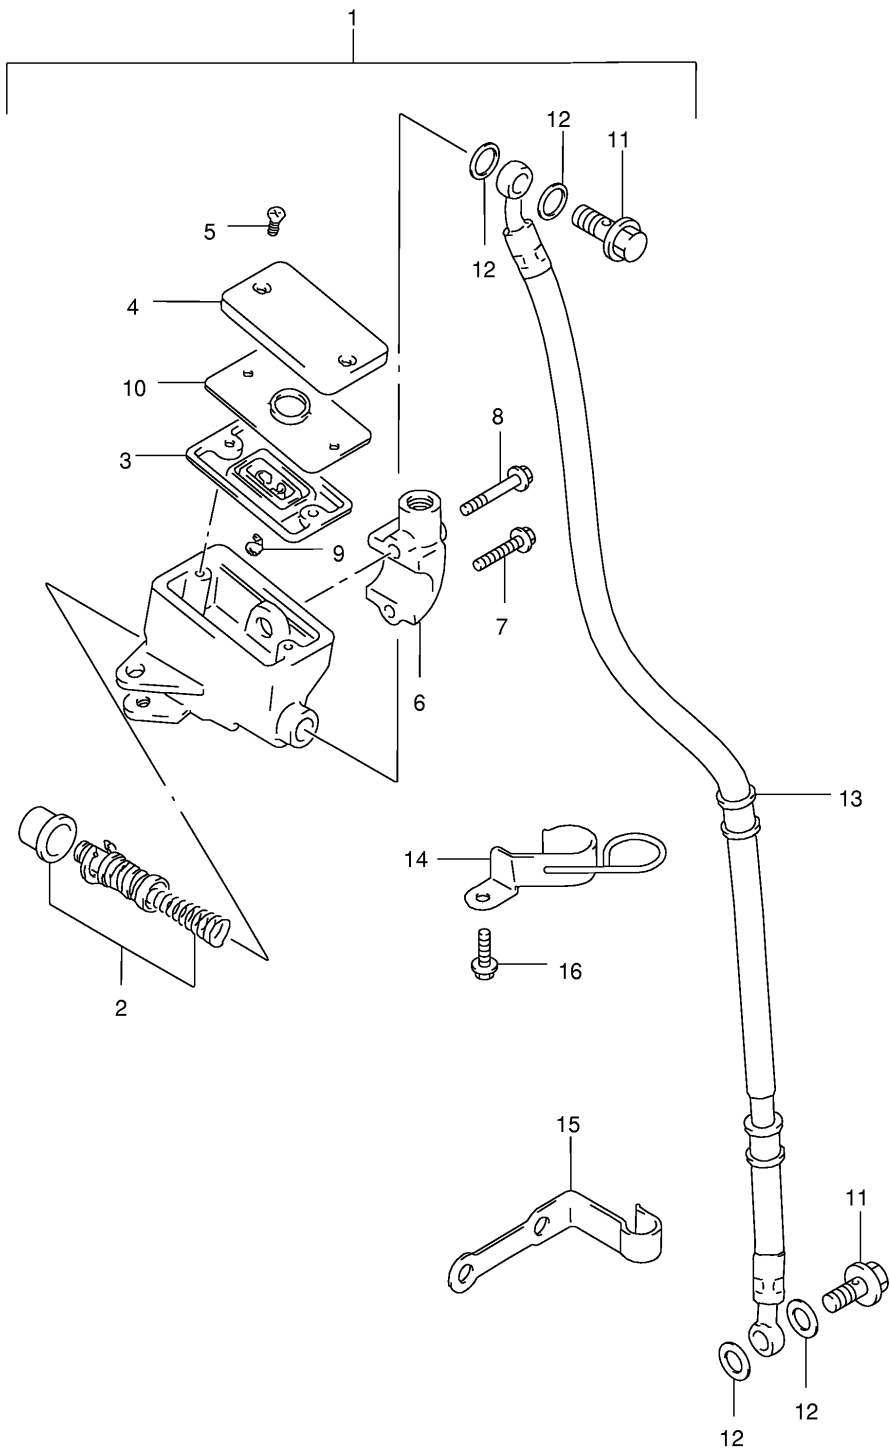 



Ref No	Part No	Description
1	59600-45C10	Cylinder Assy, Front Master
2	59600-04810	• Piston/cup Set
3	59667-49460	• Diaphragm
4	59669-41C00	• Cap
5	69689-49300	• Screw
6	59671-44300	• Holder
7	59675-19C00	• Bolt (6x25)
8	59675-19C10	• Bolt (6x38)
9	59664-48B00	• Protector
10	59668-41C00	• Plate
11	09360-10041	Bolt (10x1.00x22)
12	09161-10009	Washer (10x15x1.5)
13	59480-12F00	Hose, Front Brake
14	59260-12F00	Clamp, Brake Hose
15	59268-12F00	Clamp, Brake Hose
16	01550-06123	Bolt

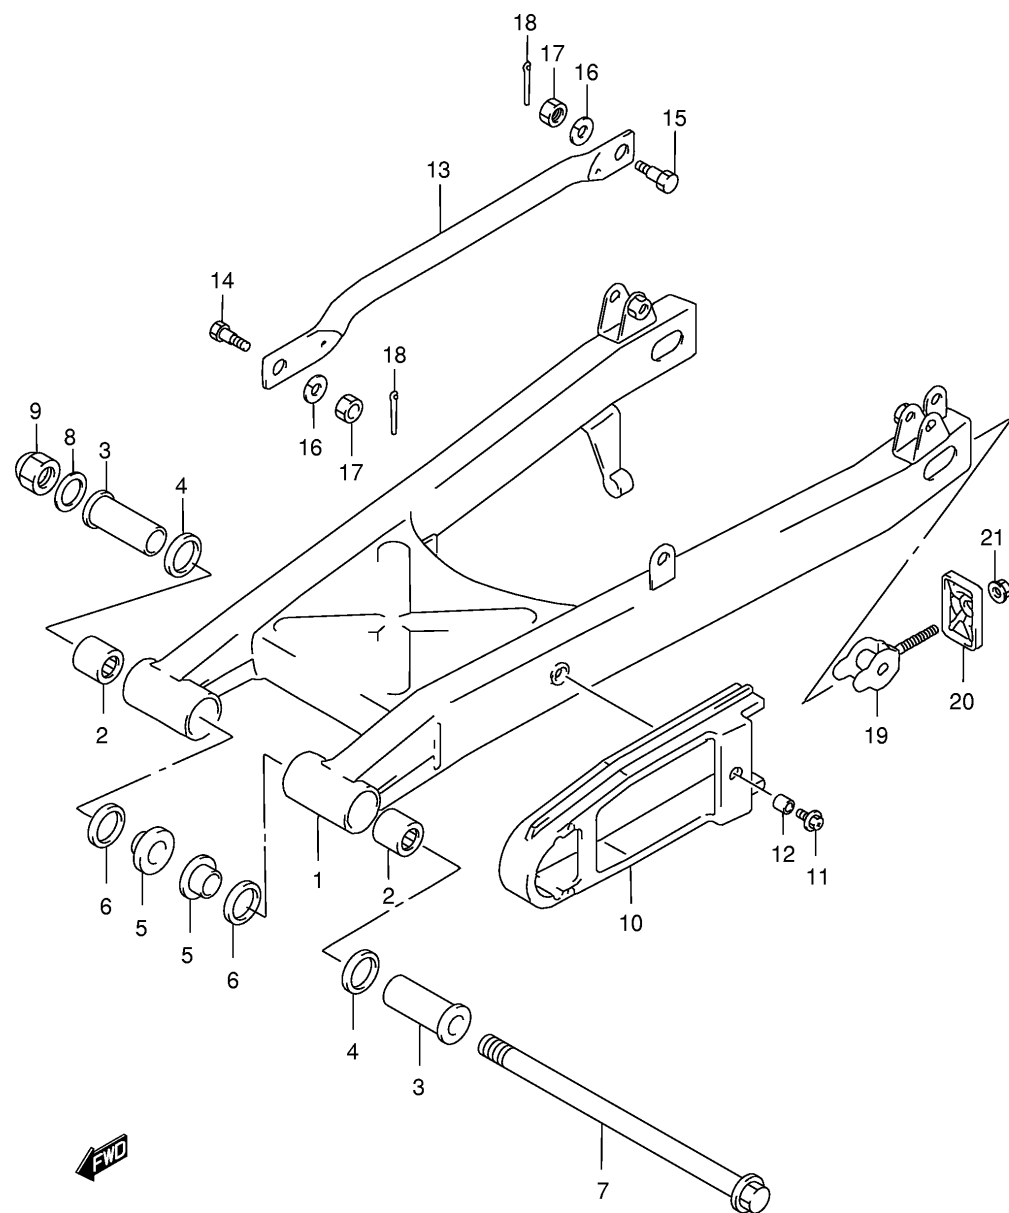 

Ref No	Part No	Description
1	61000-13F00	Swinging Arm Assy, Rear
1	61000-13F10	Swinging Arm Assy, Rear
2	09263-20041	• . Bearing (20x27x20)
3	61251-13F00	Spacer, Pivot Outer
4	09286-20001	Seal, Oil (20x27x5)
5	61252-13F01	Spacer, Pivot Inner
6	09286-20001	Seal, Oil (20x27x5)
7	61211-38301	Shaft, Pivot
8	08322-01143	Washer
9	08319-21148	Nut
10	61273-12F00	Buffer, Chain Touch Diffense
11	09116-06152	Bolt (6x20)
12	09180-06255	Spacer (6.5x9x3.8)
13	64311-12F00-019	Torque Link, Rear (black)
14	09111-08012	Bolt, Front (8x22.5)
15	09111-08013	Bolt, Rear (8x26.5)
16	09162-08008	Washer, Lock
17	09140-08008	Nut
18	04111-20208	Pin, Cotter
19	61410-12F00	Adjuster, Chain
20	61421-38200	Platew, Chain Adjuster
21	08319-31087	Nut


Ref No	Part No	Description
1	61310-12F00	Case, Chain
2	02142-06107	Screw
3	62100-13F00	Absorber Assy, Rear Shock
4	09160-10127	Washer, Outer (10.5x24x2.30)
5	08322-01127	Washer, Inner
6	08313-10107	Nut
7	09103-10019	Bolt, Lower (10x37)

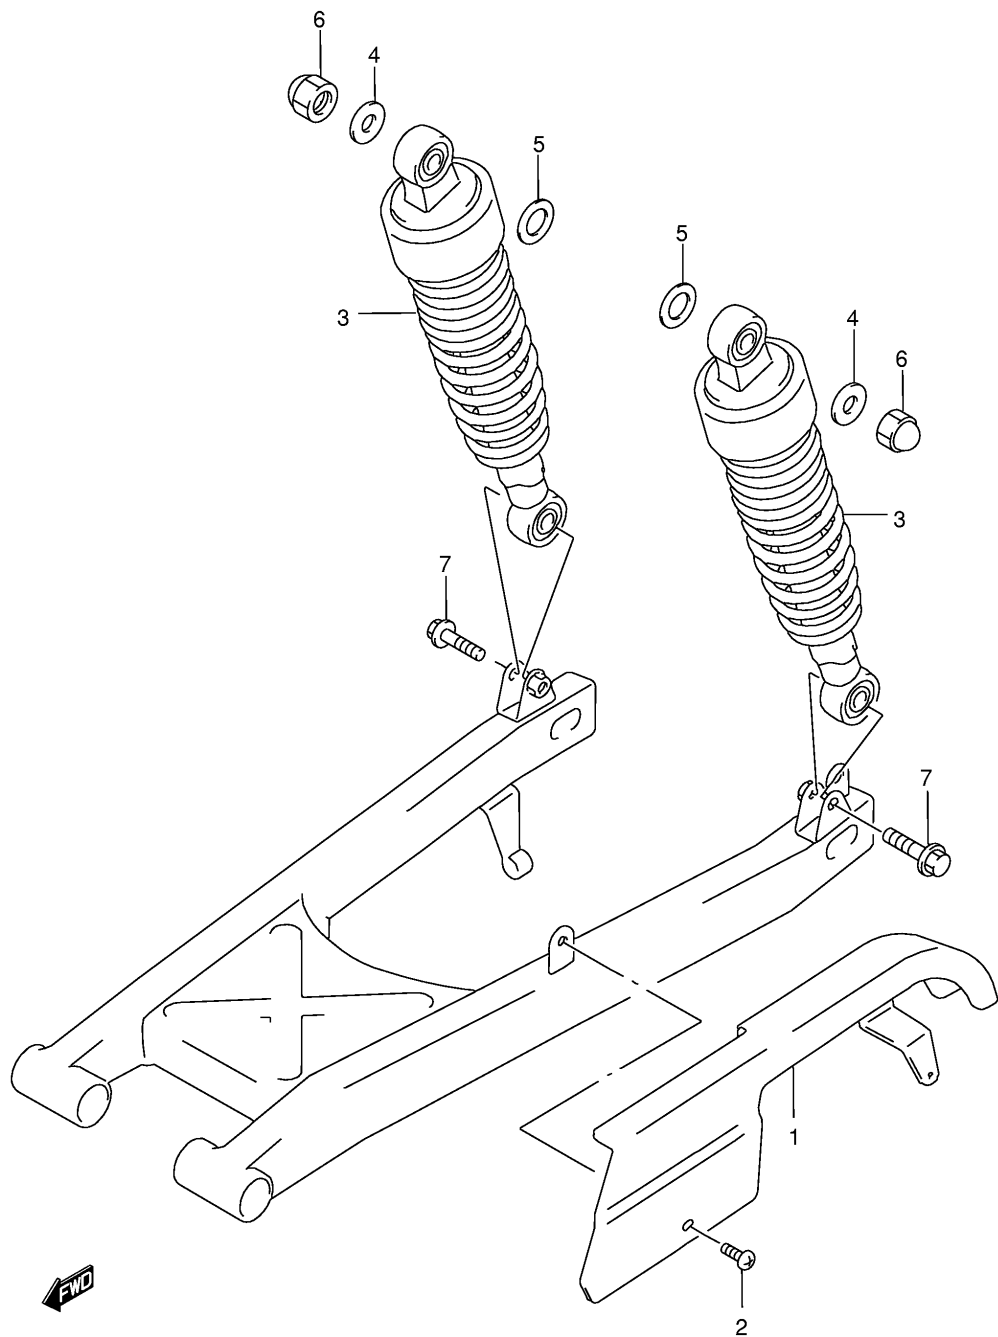 

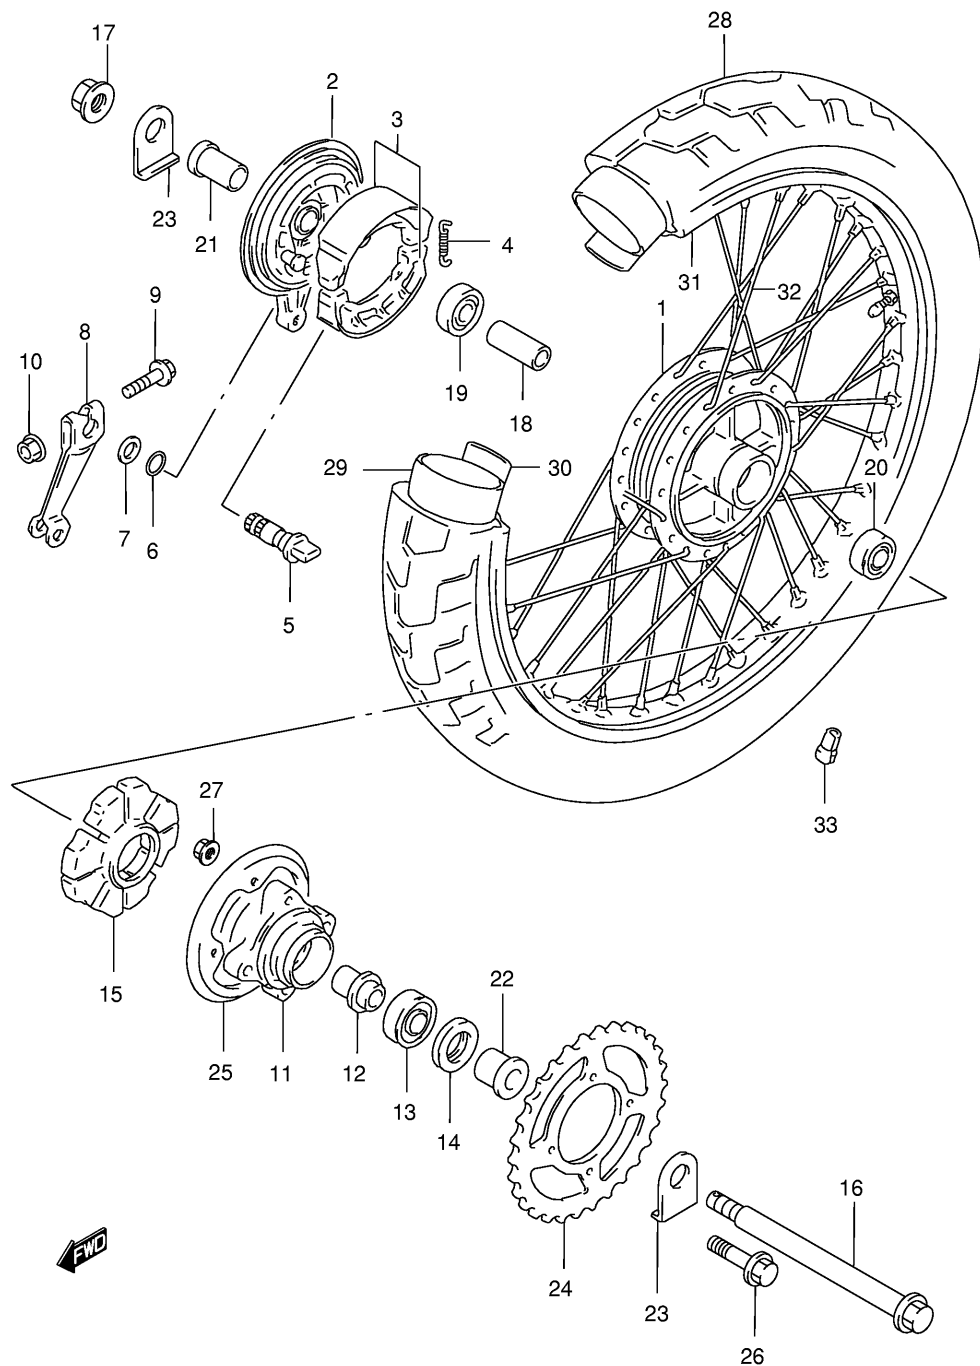 

Ref No	Part No	Description
1	64110-07005	Hub, Rear Wheel
2	64210-39115	Panel, Rear Brake Anchor
3	54401-07820	Shoe Set, Brake
4	09443-07001	Spring
5	54441-29305	Cam, Brake
6	09280-14011	O Ring
7	09160-14055	Washer
8	64451-30501	Lever, Brake Cam
9	01550-06407	Bolt
10	08316-10067	Nut
11	64610-38300	Drum, Sprocket Mounting
12	64733-38300	Retainer, Mounting Drum
13	09262-20069	Bearing, Drum (20x47x14)
14	09285-28001	Oil Seal (28x47x7)
15	64651-07001	Shock Absorber, Hub
16	64711-12F00	Axle, Rear
17	08319-31148	Nut
18	09180-15011	Spacer, Bearing (15.3x21.7x63)
19	08153-63027	Bearing, Wheel Rh
20	08143-62027	Bearigg, Wheel Lh
21	64741-12F00	Spacer, Axle Rh
22	64751-12F00	Spacer, Axle Lh
23	64712-08301	Washer, Guide
24	64511-38301	Sprocket, Rear (nt:41)
25	64618-38300	Guide, Chain
26	09103-10044	Bolt (10x40)
27	08319-31107	Nut
28	65100-12F00	Tire, Rear (130/90-15)
29	65200-12F00	Tube Assy, Wheel Inner
30	65261-12F00	Protector, Inner Tube
31	65311-12F00	Rim, Rear Wheel (15xmt3.00)
32	65320-12F00	Spoke Set, Rear Wheel
33	55411-11000	Balancer (20g)
33	55412-11000	Balancer (30g)

 Dunlop

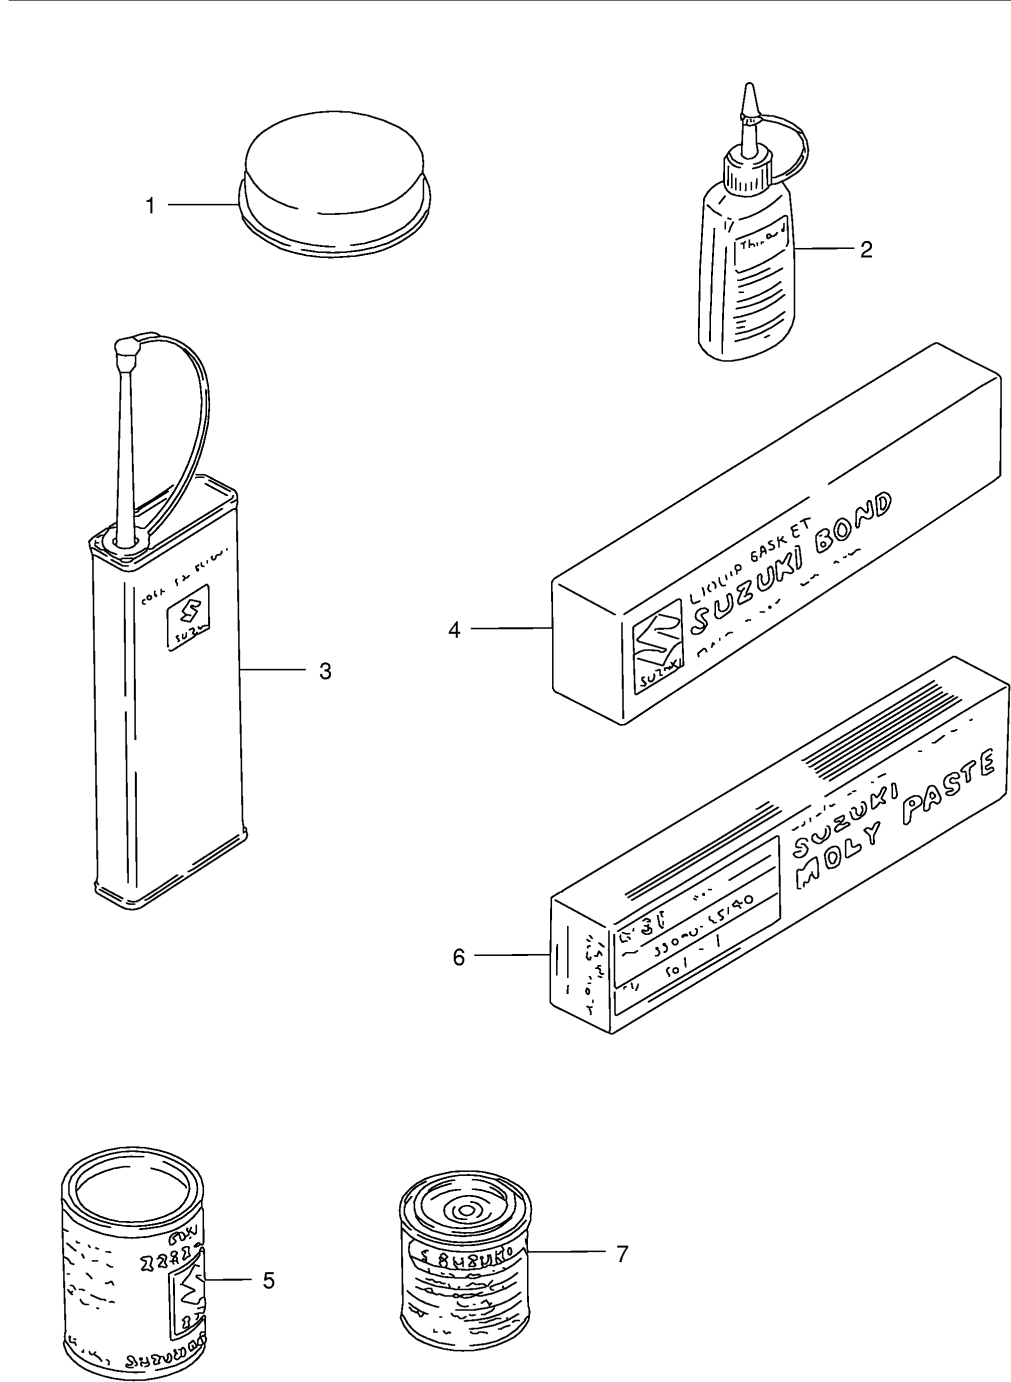

Ref No	Part No	Description
1	99000-25110	Suzuki Pbc Grease
2	99000-32020	Thread Lock Super (1333b)
2	99000-32030	Thread Lock Super (1303b)
2	99000-32050	Thread Lock Super (1342)
2	99000-32100	Thread Lock Super (1305)
2	99000-32130	Thread Lock Super (1360)
3	99000-32040	Thread Lock Cement
4	99000-31140	Suzuki Bond (1207b) Black
4	99000-31110	Suzuki Bond (1215)
5	99000-25030	Suzuki Super Grease
6	99000-25140	Suzuki Moly Paste
7	99000-10209-33J	Paint (pearl Novelty Black)
7	99000-10109-019	Paint (black)
7	99000-10209-Y0W	Paint (candy Koran Orange)
7	99000-10109-Y4L	Paint (pale Yellow)
7	99000-10209-Y4M	Paint (candy Deep
7	99000-10209-Y98	Paint (candy Forest Green)
7	99000-10209-Y7L	Paint (saturn Black Metallic)
7	99000-10209-19A	Paint (candy Antares Red)

Grape Maloon)