

GROUP 80A


CONFIGURATION DIAGRAMS

CONTENTS

OVERALL CONFIGURATION DIAGRAM <ECLIPSE>	80A-2	ENGINE AND TRANSAXLE <3.0L ENGINE (WITH VARIABLE INDUCTION CONTROL (VIC) SYSTEM) >	80A-16
OVERALL CONFIGURATION DIAGRAM <ECLIPSE SPYDER>	80A-3	DASH PANEL	80A-20
HOW TO READ CONFIGURATION DIAGRAMS	80A-4	FLOOR AND ROOF <ECLIPSE>	80A-28
ENGINE COMPARTMENT	80A-6	FLOOR AND WINDSHIELD APERTURE <ECLIPSE SPYDER>	80A-29
ENGINE AND TRANSAXLE <2.4L ENGINE>	80A-8	DOOR	80A-30
ENGINE AND TRANSAXLE <3.0L ENGINE (WITHOUT VARIABLE INDUCTION CONTROL (VIC) SYSTEM) >	80A-12	LUGGAGE COMPARTMENT <ECLIPSE>	80A-31
		LUGGAGE COMPARTMENT <ECLIPSE SPYDER>	80A-32

OVERALL CONFIGURATION DIAGRAM <ECLIPSE>

M1801000100321

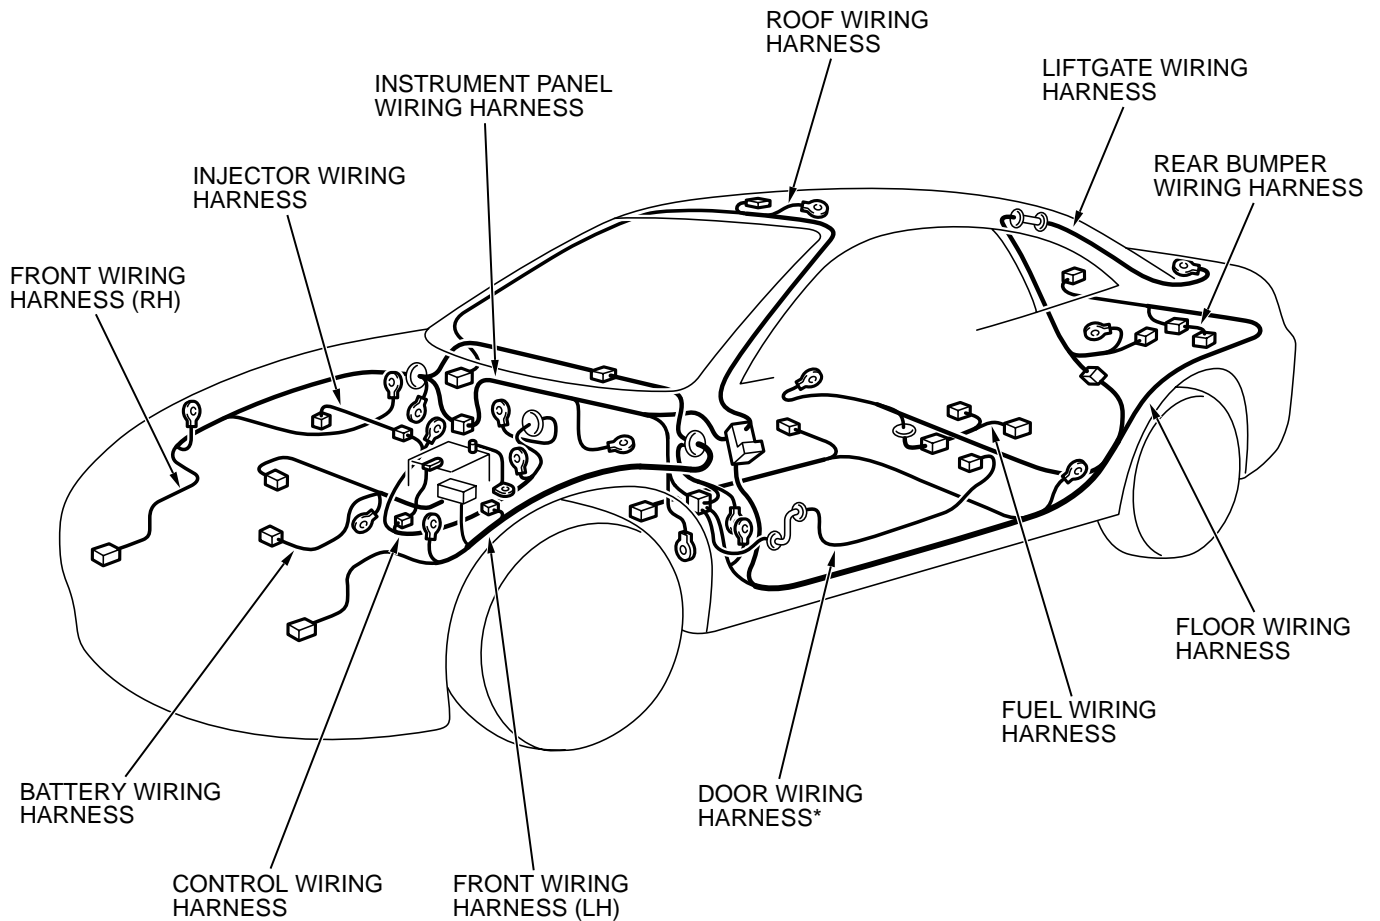


AC101825AB

NOTE:

1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

OVERALL CONFIGURATION DIAGRAM <ECLIPSE SPYDER>

M1801000100332

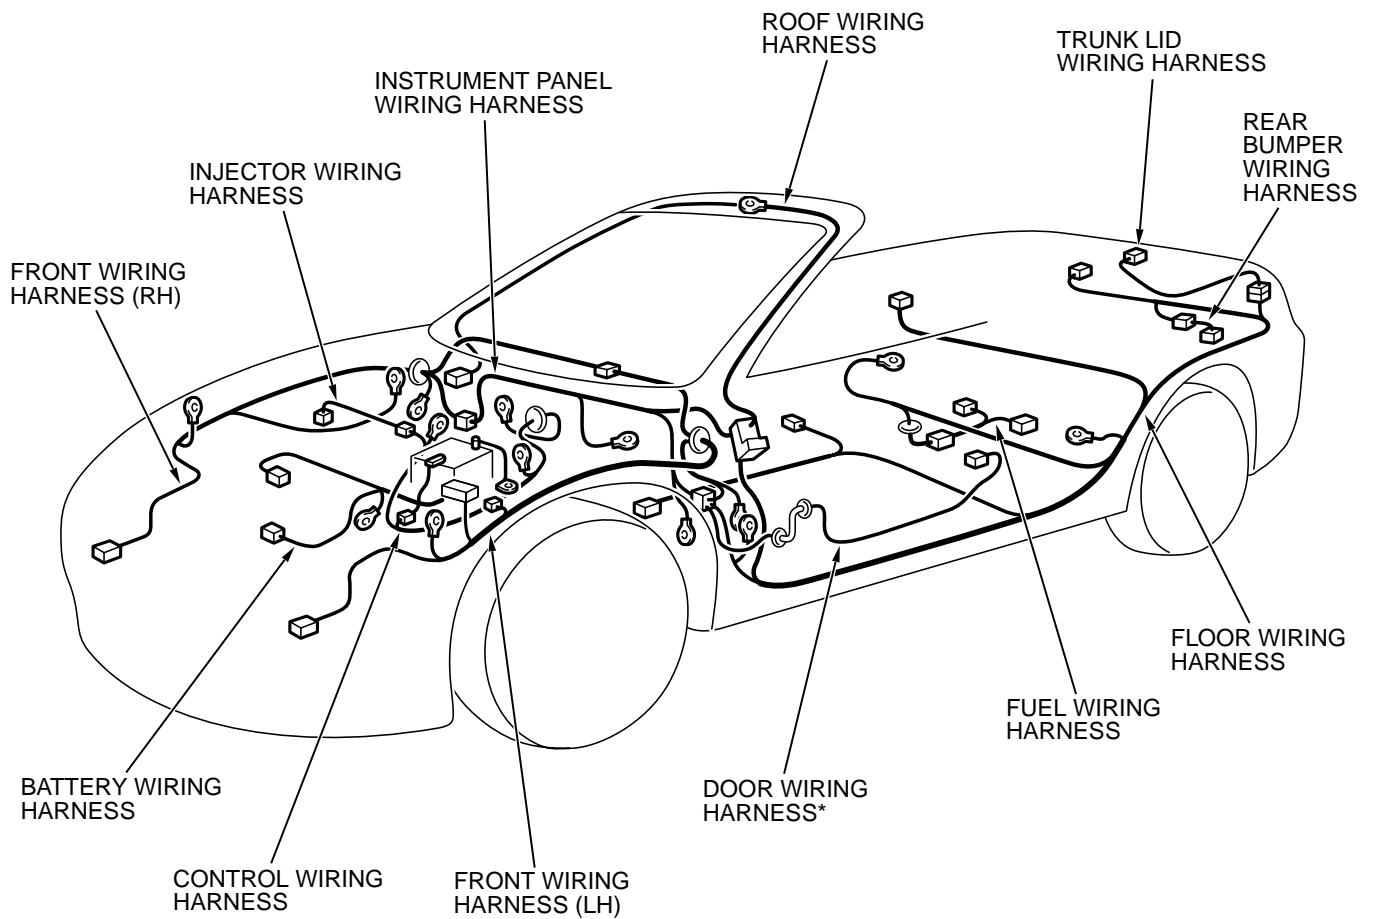

AC101824AB

NOTE:

1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

HOW TO READ CONFIGURATION DIAGRAMS

The wiring harness diagrams clearly show the connector locations and harness routings at each site on actual vehicles.

Denotes connector No.
The same connector No. is used throughout the circuit diagrams to facilitate connector location searches.
The first alphabetical symbol indicates the location site of the connector and a number that follows is the unique number.
Numbers are usually assigned to parts in clockwise order on the diagram.

Example: A-19

- Number specific to connector (serial number)
- Connector location site symbol
- A: ENGINE COMPARTMENT
- B: ENGINE AND TRANSAXLE
- C: DASH PANEL
- D: FLOOR AND ROOF <ECLIPSE>
- D: FLOOR AND WINDSHIELD APERTURE <ECLIPSE SPYDER>
- E: DOOR
- F: LUGGAGE COMPARTMENT

Denotes ground point.
Same ground number is used throughout circuit diagrams to facilitate search of ground point.
Refer to GROUP 70 SINGLE PART INSTALLATION POSITION - GROUND MOUNTING LOCATIONS for details of ground points.

Denotes harness name.

Denotes a section covered by a corrugated tube.

The mark ★ shows the standard mounting position of wiring harness.

Denotes the color of the corrugated tube (If not specified, it is black.)
R: Red
Y: Yellow


The number of connector pins and the connector color (except milk white)* are shown for ease of retrieval.

Example: (2-B)

- Connector color (milk white if no color is indicated)
- Number of connector pins

*: Typical connector colors

B: Black	BR: Brown
Y: Yellow	V: Violet
L: Blue	O: Orange
G: Green	GR: Gray
R: Red	NONE: Milk white

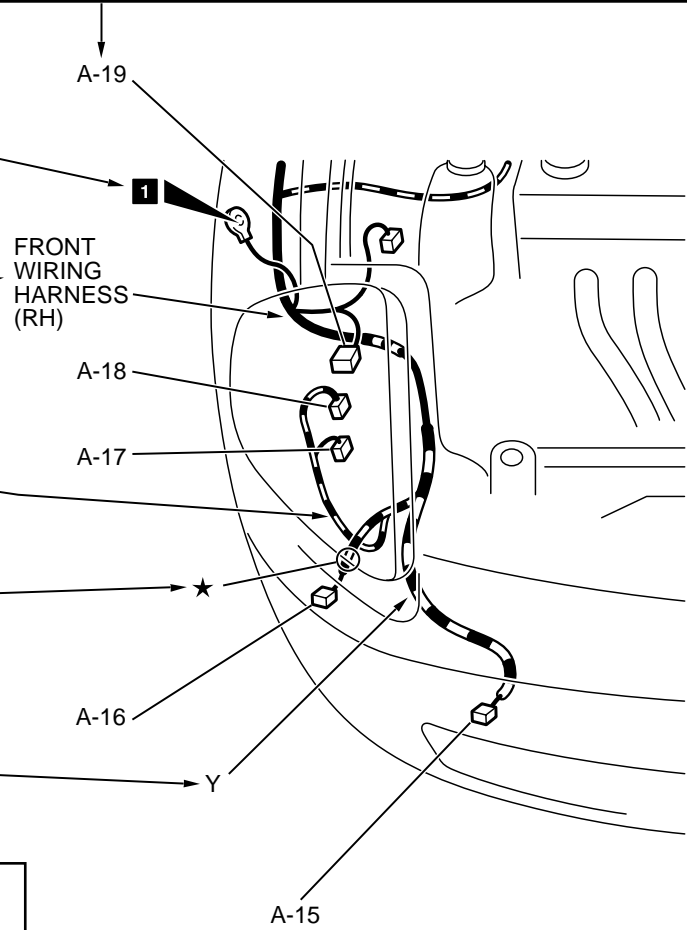



- A-15 (2) FOG LIGHT (RH)
- A-16 (2-GR) HORN (LOW)
- A-17 (2-B) HEADLIGHT (RH)
- A-18 (2-B) WINDSHIELD WASHER MOTOR
- A-19 (2-GR) DUAL PRESSURE SWITCH

Indicates the device to which the connector is connected.

NOTES


ENGINE COMPARTMENT

M1801000300381

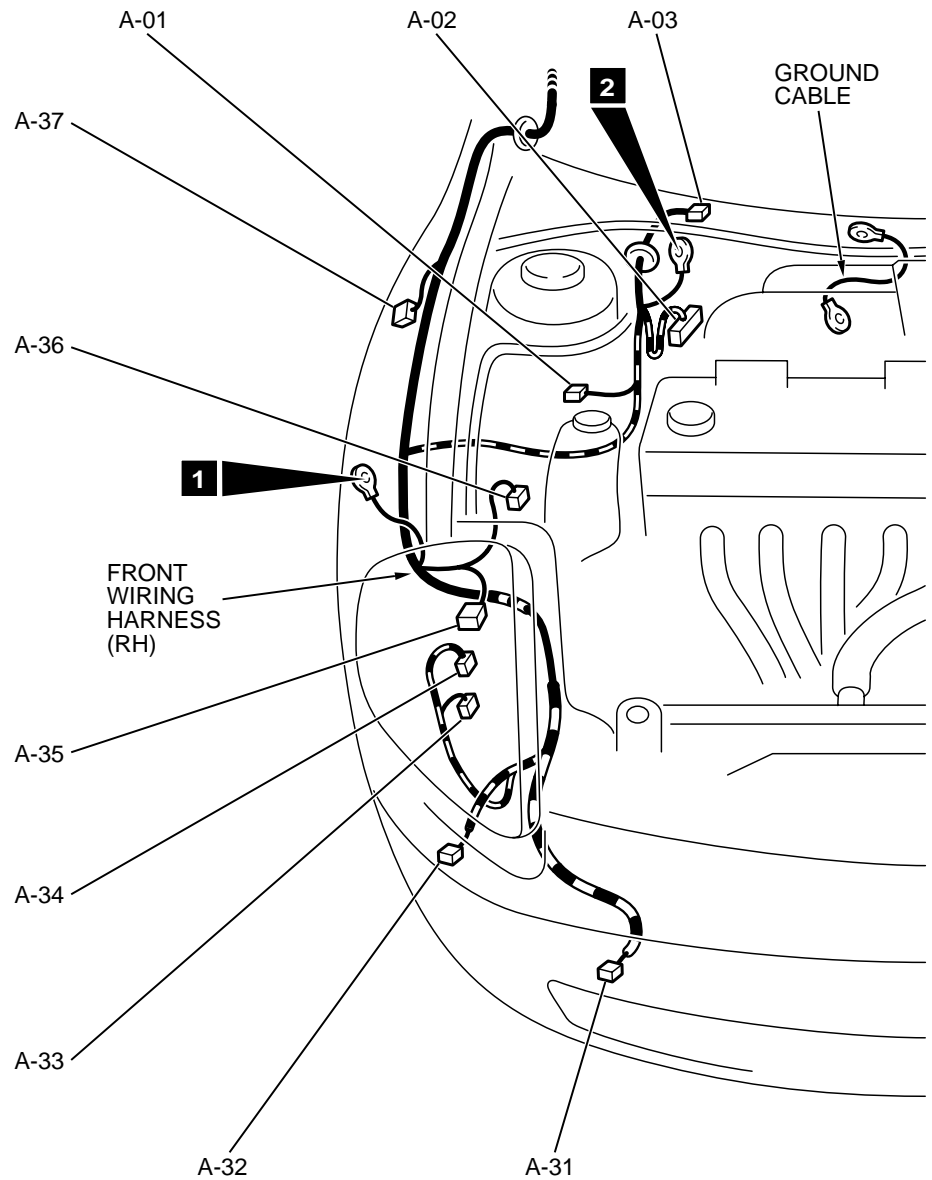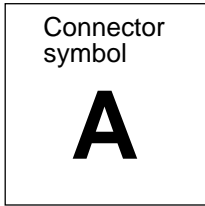

AC106113AB

A-01 (4-B)	AUTO-CRUISE CONTROL VACUUM PUMP	A-11X (11)	FRONT-ECU
A-02 (31-B)	ABS-ECU	A-12X (1)	ENGINE SPEED DETECTION CONNECTOR
A-03 (5-B)	WINDSHIELD WIPER MOTOR	A-13X (5)	STARTER RELAY <M/T>
A-04X (4)	FOG LIGHT RELAY	A-17X (4)	A/T CONTROL RELAY
A-05X (4)	HORN RELAY	A-18X (4)	MFI RELAY
A-06X (4)	THEFT-ALARM HORN RELAY <THEFT-ALARM SYSTEM>	A-19X (4)	A/C COMPRESSOR RELAY
A-09X (4)	FAN CONTROL RELAY	A-22 (2-B)	WHEEL SPEED SENSOR (FRONT: LH) <ABS>
A-10X (11)	FRONT-ECU		

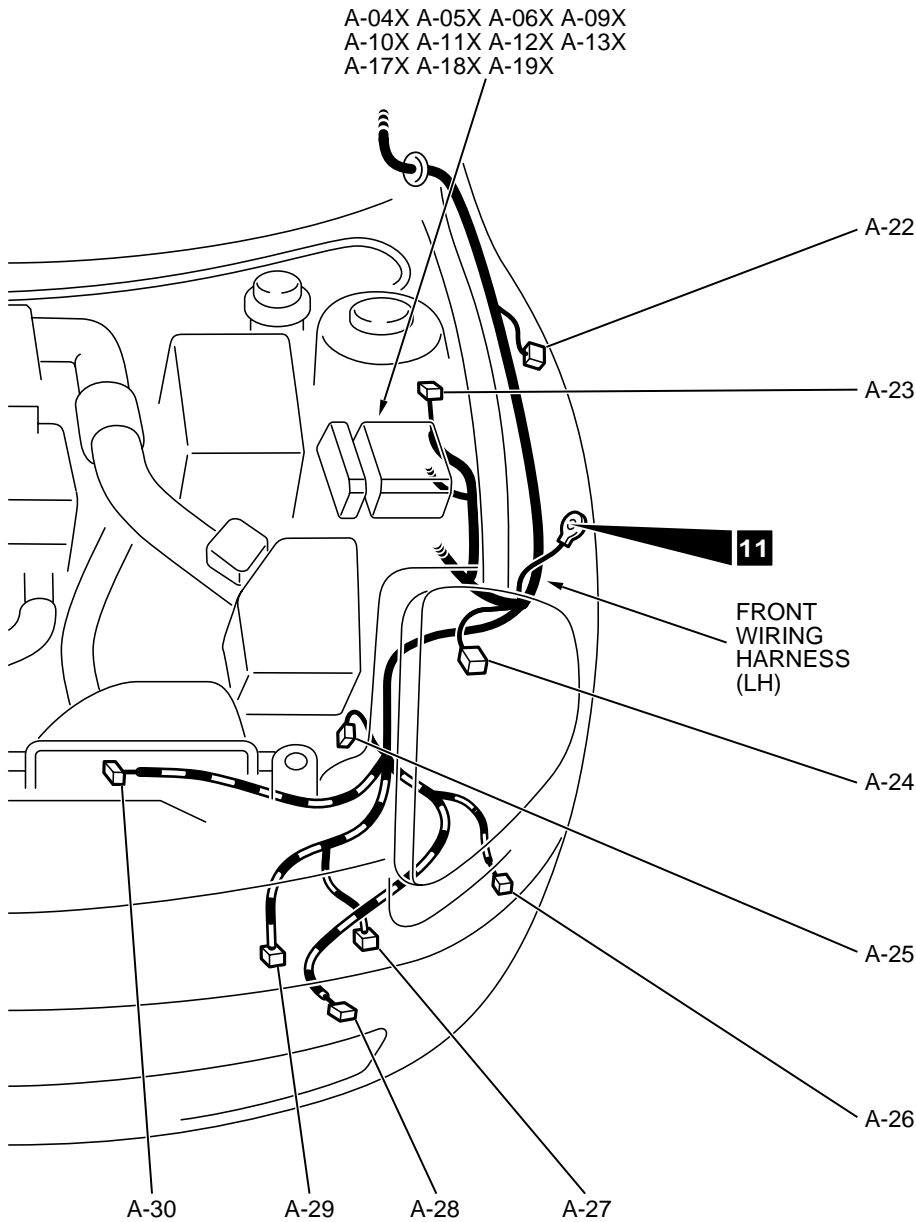



CONNECTOR COLOR CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW

AC106133AB

A-23	(2)	HOOD SWITCH <THEFT-ALARM SYSTEM>	A-30	(3-GR)	FAN CONTROLLER
A-24	(3-B)	HEADLIGHT (LH)	A-31	(2-B)	FOG LIGHT (RH)
A-25	(1-B)	THEFT-ALARM HORN <THEFT-ALARM SYSTEM>	A-32	(3-B)	FRONT COMBINATION LIGHT (RH)
A-26	(3-B)	FRONT COMBINATION LIGHT (LH)	A-33	(2-B)	WINDSHIELD WASHER MOTOR
A-27	(1-B)	HORN	A-34	(2)	REAR WASHER MOTOR <ECLIPSE>
A-28	(2-B)	FOG LIGHT (LH)	A-35	(3-B)	HEADLIGHT (RH)
A-29	(2-B)	AMBIENT TEMPERATURE SENSOR <MULTI CENTER DISPLAY>	A-36	(2-BR)	DUAL PRESSURE SWITCH <A/C>
			A-37	(2-B)	WHEEL SPEED SENSOR (FRONT: RH) <ABS>

ENGINE AND TRANSAXLE <2.4L ENGINE>

M1801000400270

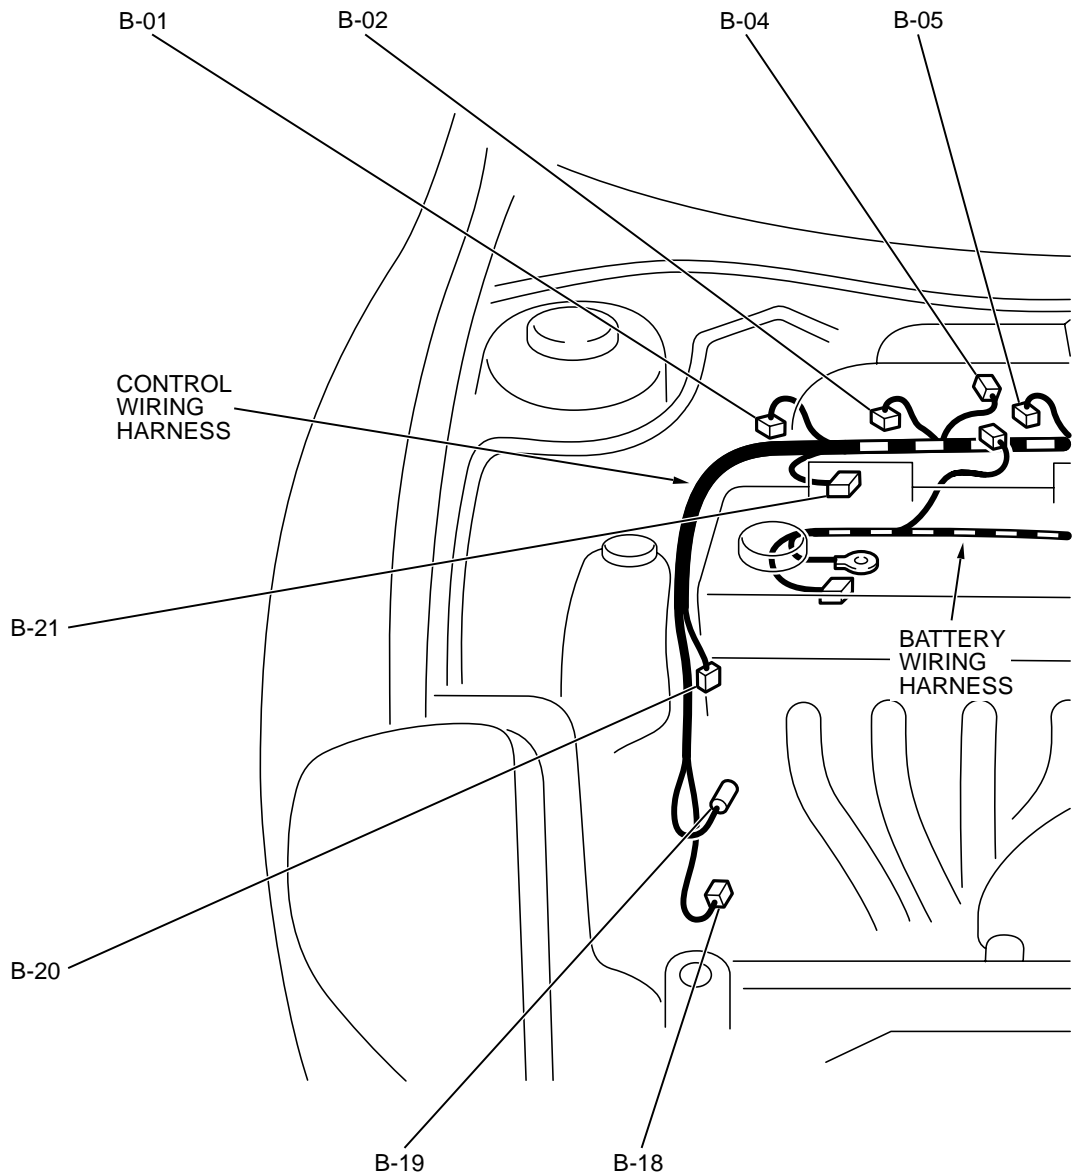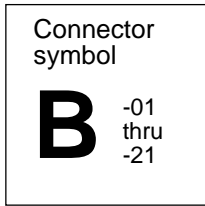


CONNECTOR COLOR CODE
 B: BLACK
 BR: BROWN
 G: GREEN
 GR: GRAY
 L: BLUE
 NONE: MILK WHITE
 O: ORANGE
 R: RED
 V: VIOLET
 Y: YELLOW

- B-01 (2-GR) INJECTOR 1
- B-02 (2-GR) INJECTOR 2
- B-04 (3-B) MANIFOLD DIFFERENTIAL PRESSURE SENSOR
- B-05 (2-GR) INJECTOR 3
- B-06 (2-GR) INJECTOR 4
- B-07 (4-B) THROTTLE POSITION SENSOR

- B-08 (1-B) ENGINE COOLANT TEMPERATURE GAUGE UNIT
- B-09 (3-B) CAMSHAFT POSITION SENSOR
- B-10 (2-B) BRAKE FLUID LEVEL SWITCH
- B-11 (2-B) ENGINE COOLANT TEMPERATURE SENSOR



AC106134AB

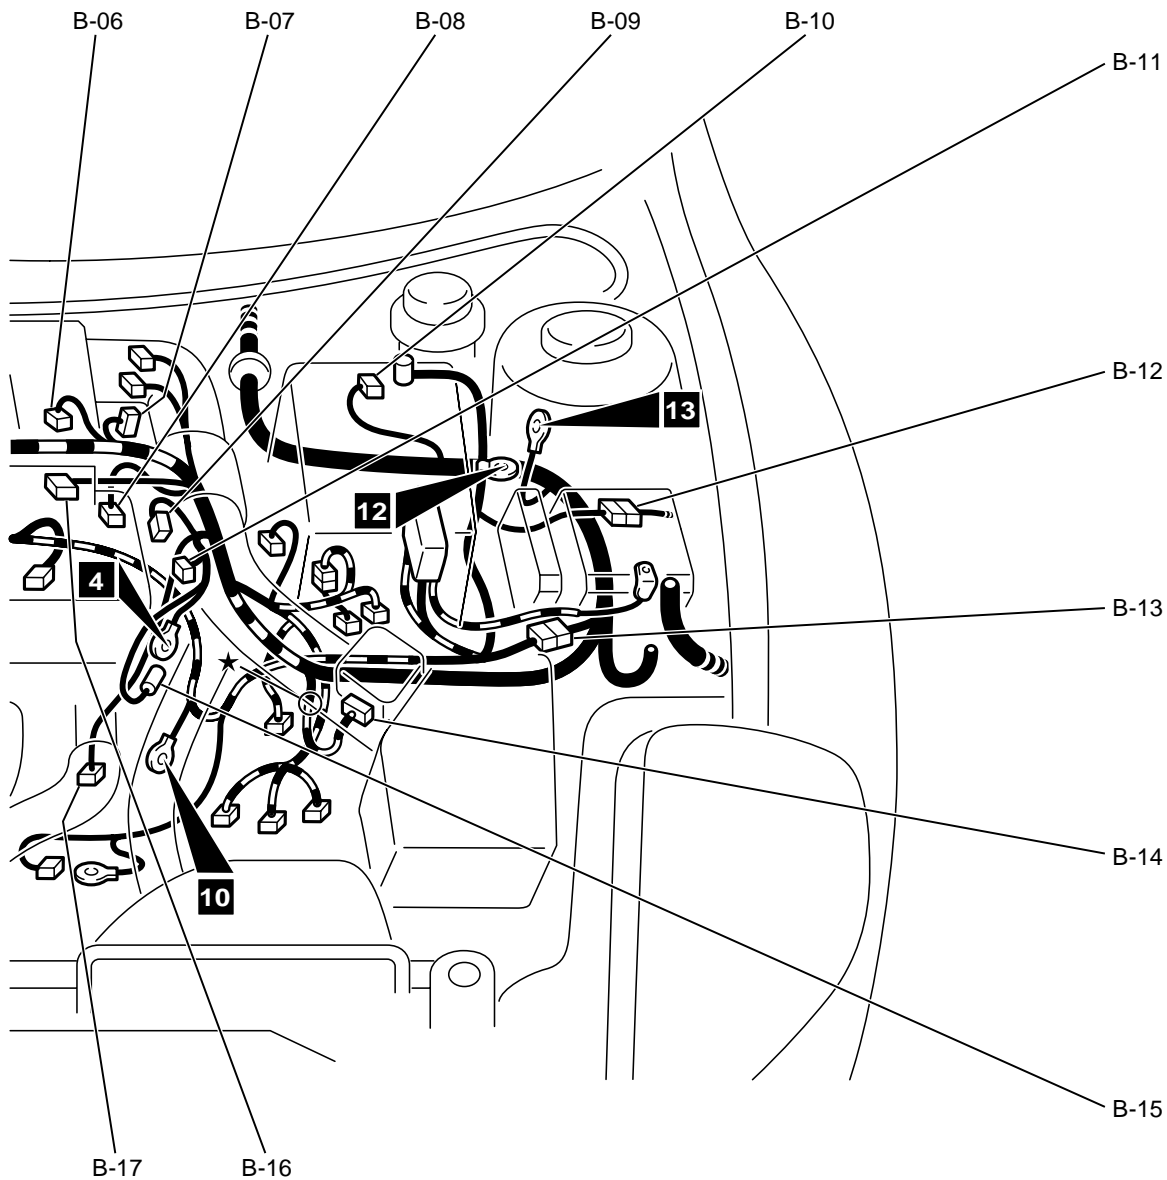

AC106114AB

B-12	(4-B)	FRONT WIRING HARNESS (LH) AND BATTERY WIRING HARNESS COMBINATION	B-16	(3-GR)	IGNITION COIL 1
B-13	(8-B)	CONTROL WIRING HARNESS AND BATTERY WIRING HARNESS COMBINATION	B-17	(4-B)	HEATED OXYGEN SENSOR (FRONT)
B-14	(7-B)	VOLUME AIR FLOW SENSOR	B-18	(1-B)	A/C COMPRESSOR ASSEMBLY
B-15	(1-B)	CAPACITOR	B-19	(1)	POWER STEERING PRESSURE SWITCH
			B-20	(3-B)	CRANKSHAFT POSITION SENSOR
			B-21	(3-GR)	IGNITION COIL 2

ENGINE AND TRANSAXLE <2.4L ENGINE> (CONTINUED)

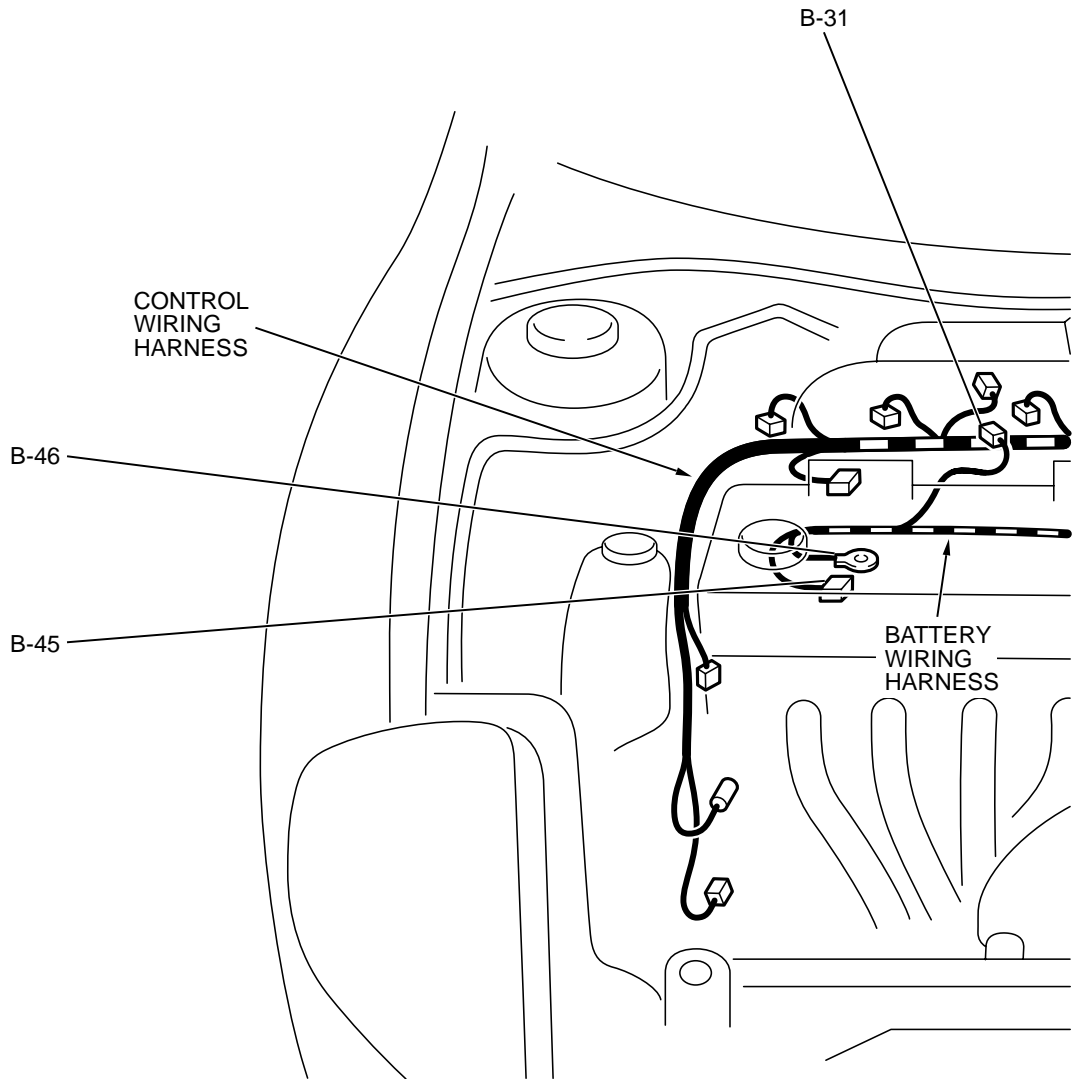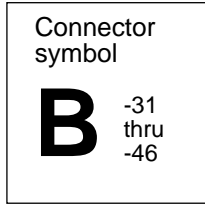


CONNECTOR COLOR CODE
 B: BLACK
 BR: BROWN
 G: GREEN
 GR: GRAY
 L: BLUE
 NONE: MILK WHITE
 O: ORANGE
 R: RED
 V: VIOLET
 Y: YELLOW

AC106134AC

- B-31 (2-BR) EGR SOLENOID VALVE
- B-32 (1-B) OIL PRESSURE SWITCH
- B-33 (2-B) EVAPORATIVE EMISSION PURGE SOLENOID VALVE
- B-34 (6-B) IDLE AIR CONTROL MOTOR
- B-35 (2-GR) KNOCK SENSOR
- B-36 (3-B) CONTROL WIRING HARNESS AND VEHICLE SPEED SENSOR WIRING HARNESS COMBINATION <M/T>

- B-37 (2-B) BACKUP LIGHT SWITCH <M/T>
- B-38 (3-GR) OUTPUT SHAFT SPEED SENSOR <AT>
- B-39 (3-B) VEHICLE SPEED SENSOR <M/T>


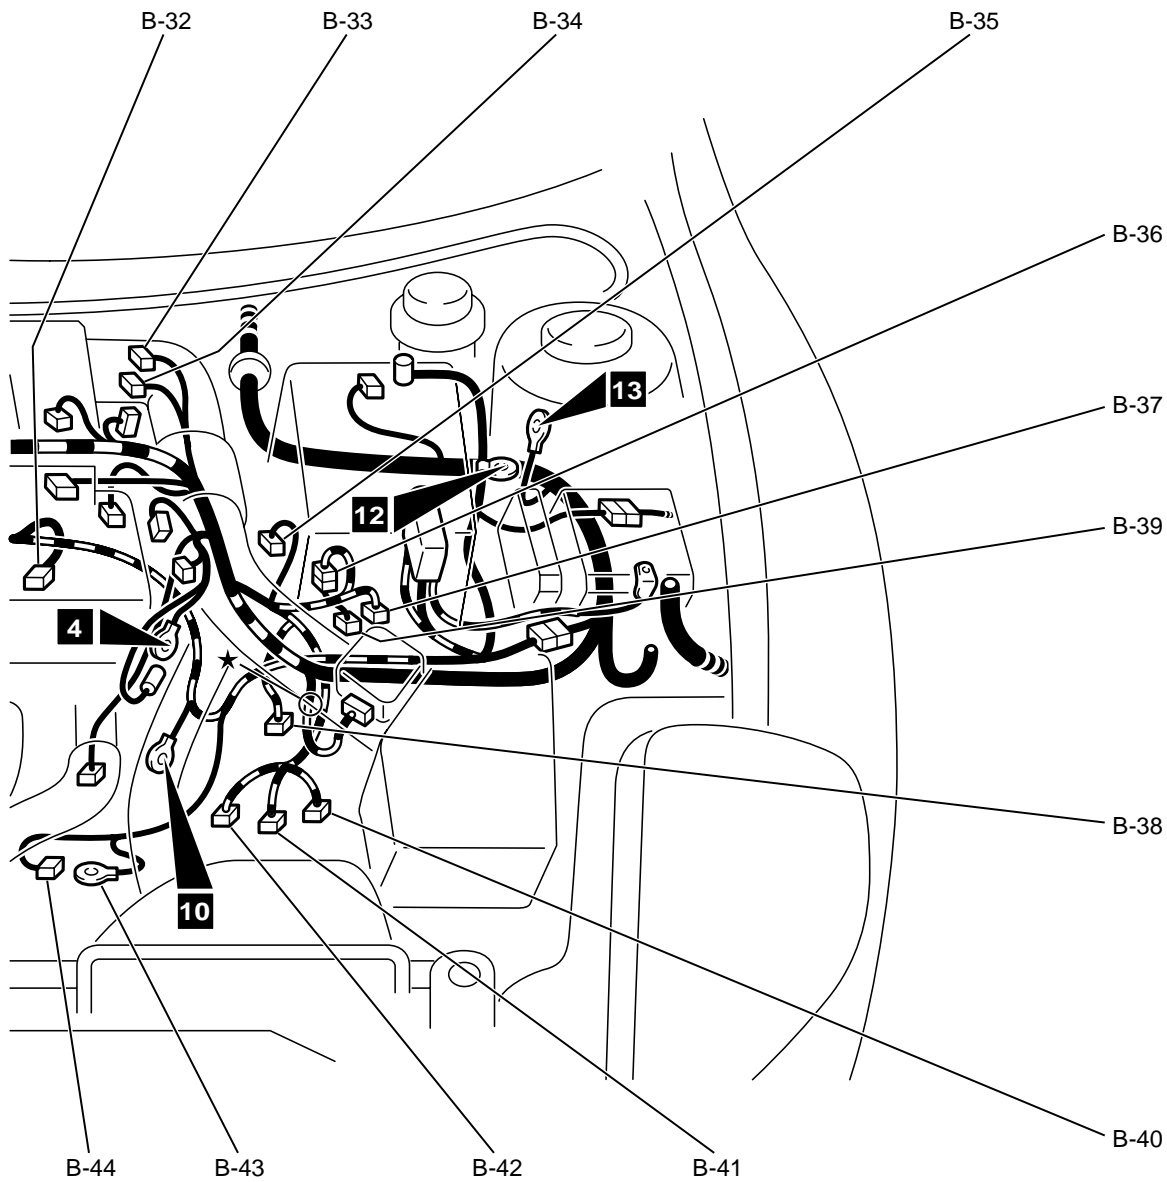


AC106114AC

- | | | | | | |
|------|---------|-------------------------------------|------|--------|-----------|
| B-40 | (10-GR) | A/T CONTROL SOLENOID VALVE ASSEMBLY | B-43 | (1) | STARTER |
| B-41 | (10-B) | PARK/NEUTRAL POSITION SWITCH <A/T> | B-44 | (1-B) | STARTER |
| B-42 | (3-B) | INPUT SHAFT SPEED SENSOR <A/T> | B-45 | (4-GR) | GENERATOR |
| | | | B-46 | (1) | GENERATOR |

ENGINE AND TRANSAXLE <3.0L ENGINE (WITHOUT VARIABLE INDUCTION CONTROL (VIC) SYSTEM) >

M1801000400281

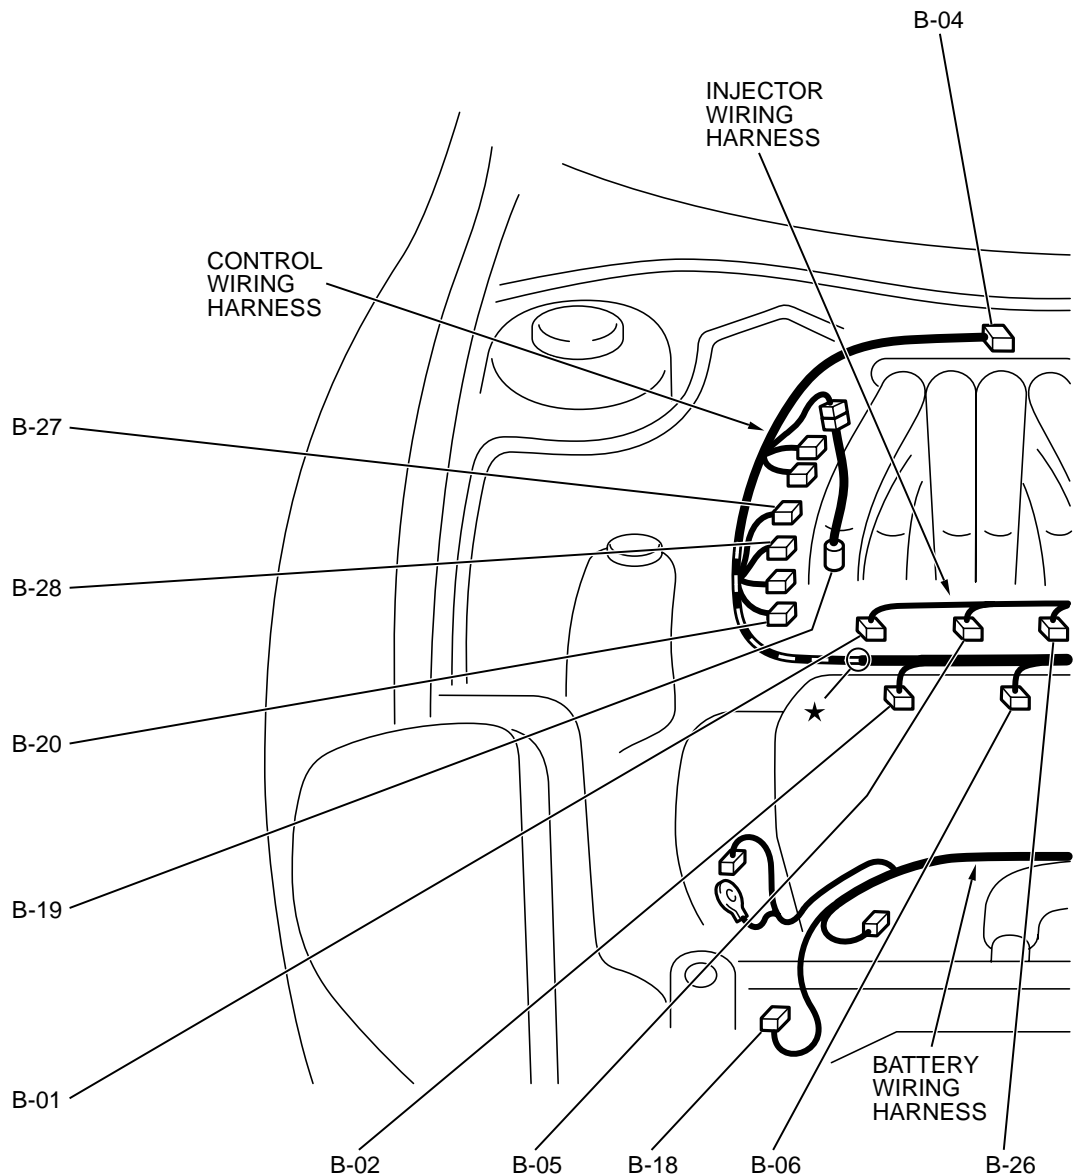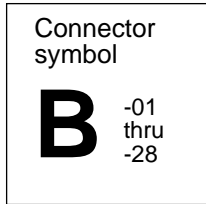


CONNECTOR COLOR CODE
 B: BLACK
 BR: BROWN
 G: GREEN
 GR: GRAY
 L: BLUE
 NONE: MILK WHITE
 O: ORANGE
 R: RED
 V: VIOLET
 Y: YELLOW

AC106136 AB

- B-01 (2-GR) INJECTOR 1
- B-02 (2-GR) INJECTOR 2
- B-04 (3-B) MANIFOLD DIFFERENTIAL PRESSURE SENSOR
- B-05 (2-GR) INJECTOR 3
- B-06 (2-GR) INJECTOR 4
- B-07 (4-B) THROTTLE POSITION SENSOR
- B-08 (1-B) ENGINE COOLANT TEMPERATURE GAUGE UNIT
- B-10 (2-B) BRAKE FLUID LEVEL SWITCH



- B-11 (2-B) ENGINE COOLANT TEMPERATURE SENSOR
- B-12 (4-B) FRONT WIRING HARNESS (LH) AND BATTERY WIRING HARNESS COMBINATION
- B-13 (8-B) CONTROL WIRING HARNESS AND BATTERY WIRING HARNESS COMBINATION

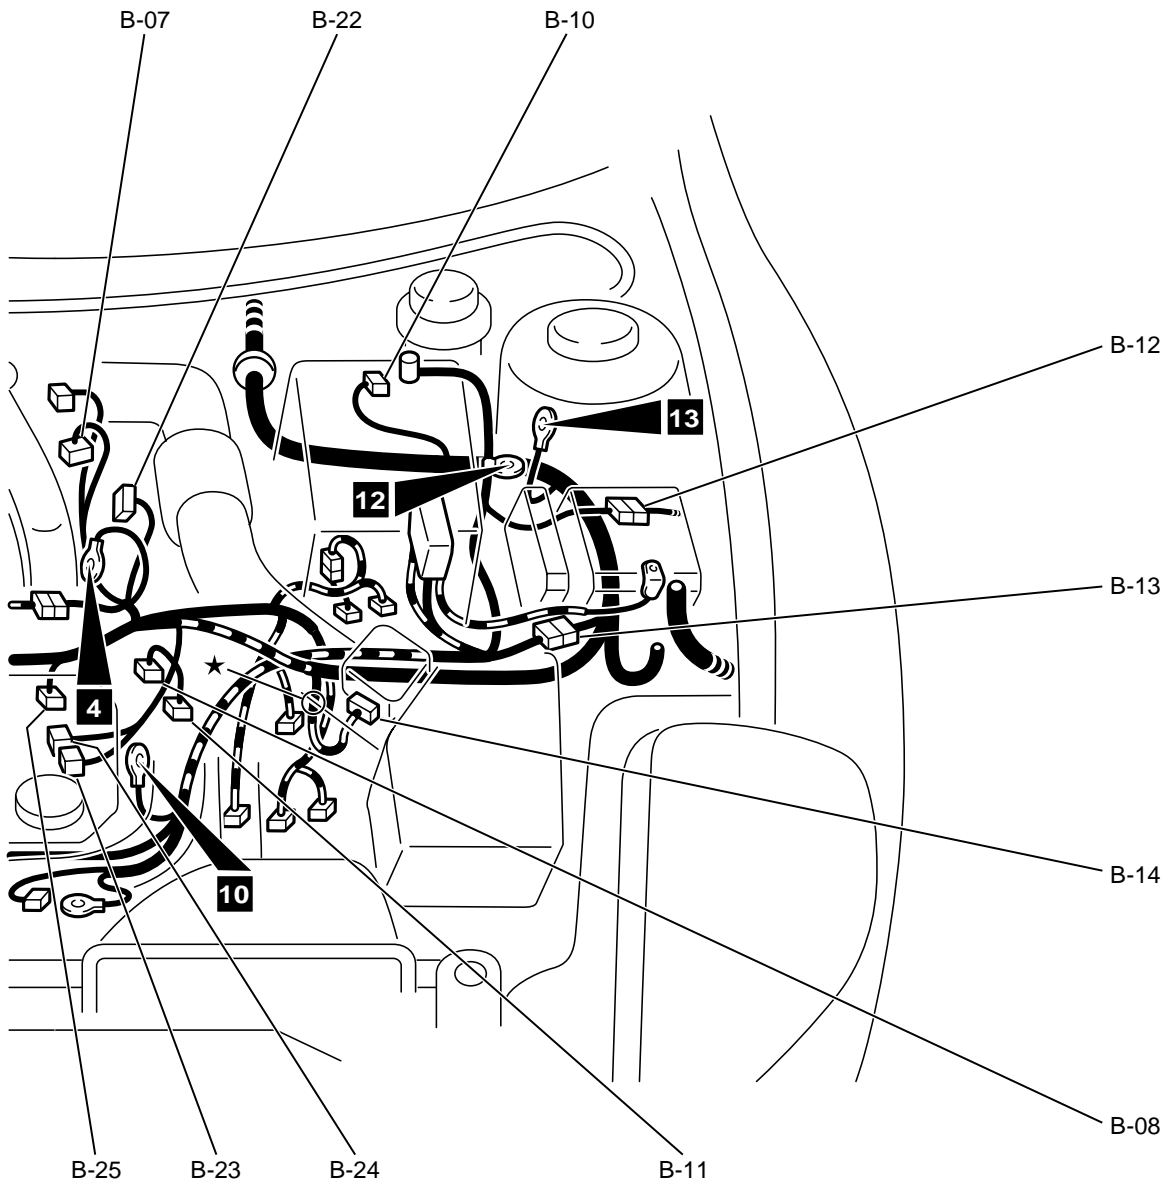

AC106137AB

- | | | | |
|-------------|---------------------------------------|-------------|---|
| B-14 (7-B) | VOLUME AIR FLOW SENSOR | B-24 (4-B) | LEFT BANK HEATED OXYGEN SENSOR (FRONT) |
| B-18 (4-B) | A/C COMPRESSOR ASSEMBLY | B-25 (2-GR) | INJECTOR 6 |
| B-19 (1) | POWER STEERING PRESSURE SWITCH | B-26 (2-GR) | INJECTOR 5 |
| B-20 (3-B) | CRANKSHAFT POSITION SENSOR | B-27 (4-B) | RIGHT BANK HEATED OXYGEN SENSOR (FRONT) |
| B-22 (7-B) | DISTRIBUTOR ASSEMBLY | B-28 (4-GR) | RIGHT BANK HEATED OXYGEN SENSOR (REAR) |
| B-23 (4-GR) | LEFT BANK HEATED OXYGEN SENSOR (REAR) | | |

ENGINE AND TRANSAXLE <3.0L ENGINE (WITHOUT VARIABLE INDUCTION CONTROL (VIC) SYSTEM) > (CONTINUED)

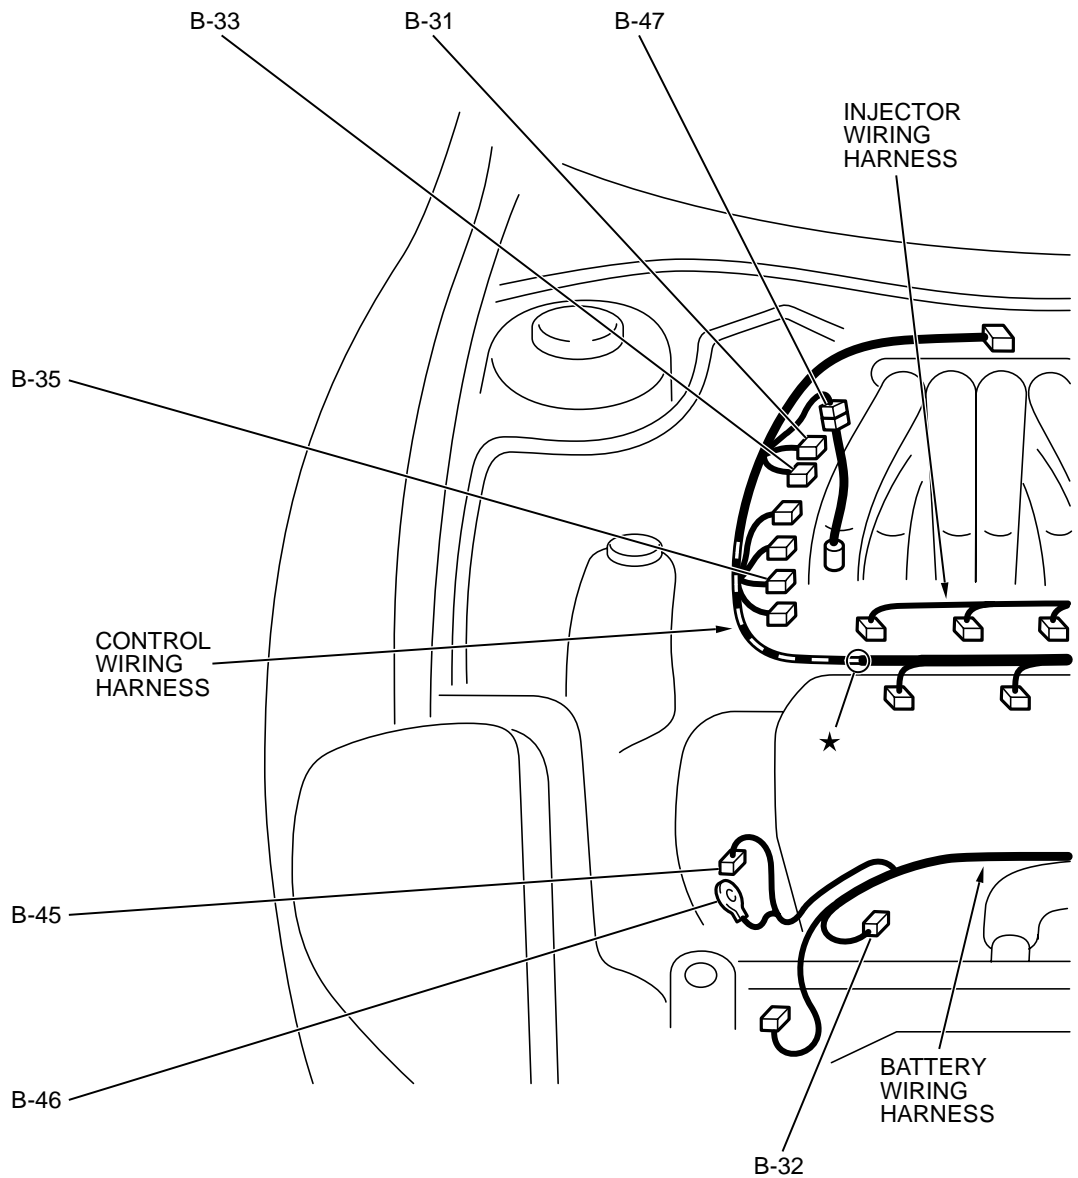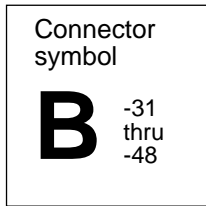


CONNECTOR COLOR CODE
 B: BLACK
 BR: BROWN
 G: GREEN
 GR: GRAY
 L: BLUE
 NONE: MILK WHITE
 O: ORANGE
 R: RED
 V: VIOLET
 Y: YELLOW

- B-31 (2-BR) EGR SOLENOID VALVE
- B-32 (1-B) OIL PRESSURE SWITCH
- B-33 (2-B) EVAPORATIVE EMISSION PURGE SOLENOID VALVE
- B-34 (6-B) IDLE AIR CONTROL MOTOR
- B-35 (2-GR) KNOCK SENSOR
- B-36 (3-B) CONTROL WIRING HARNESS AND VEHICLE SPEED SENSOR WIRING HARNESS COMBINATION <M/T>
- B-37 (2-B) BACKUP LIGHT SWITCH <M/T>

- B-38 (3-GR) OUTPUT SHAFT SPEED SENSOR <A/T>
- B-39 (3-B) VEHICLE SPEED SENSOR <M/T>
- B-40 (10-GR) A/T CONTROL SOLENOID VALVE ASSEMBLY
- B-41 (10-B) PARK/NEUTRAL POSITION SWITCH <A/T>

AC106136AC

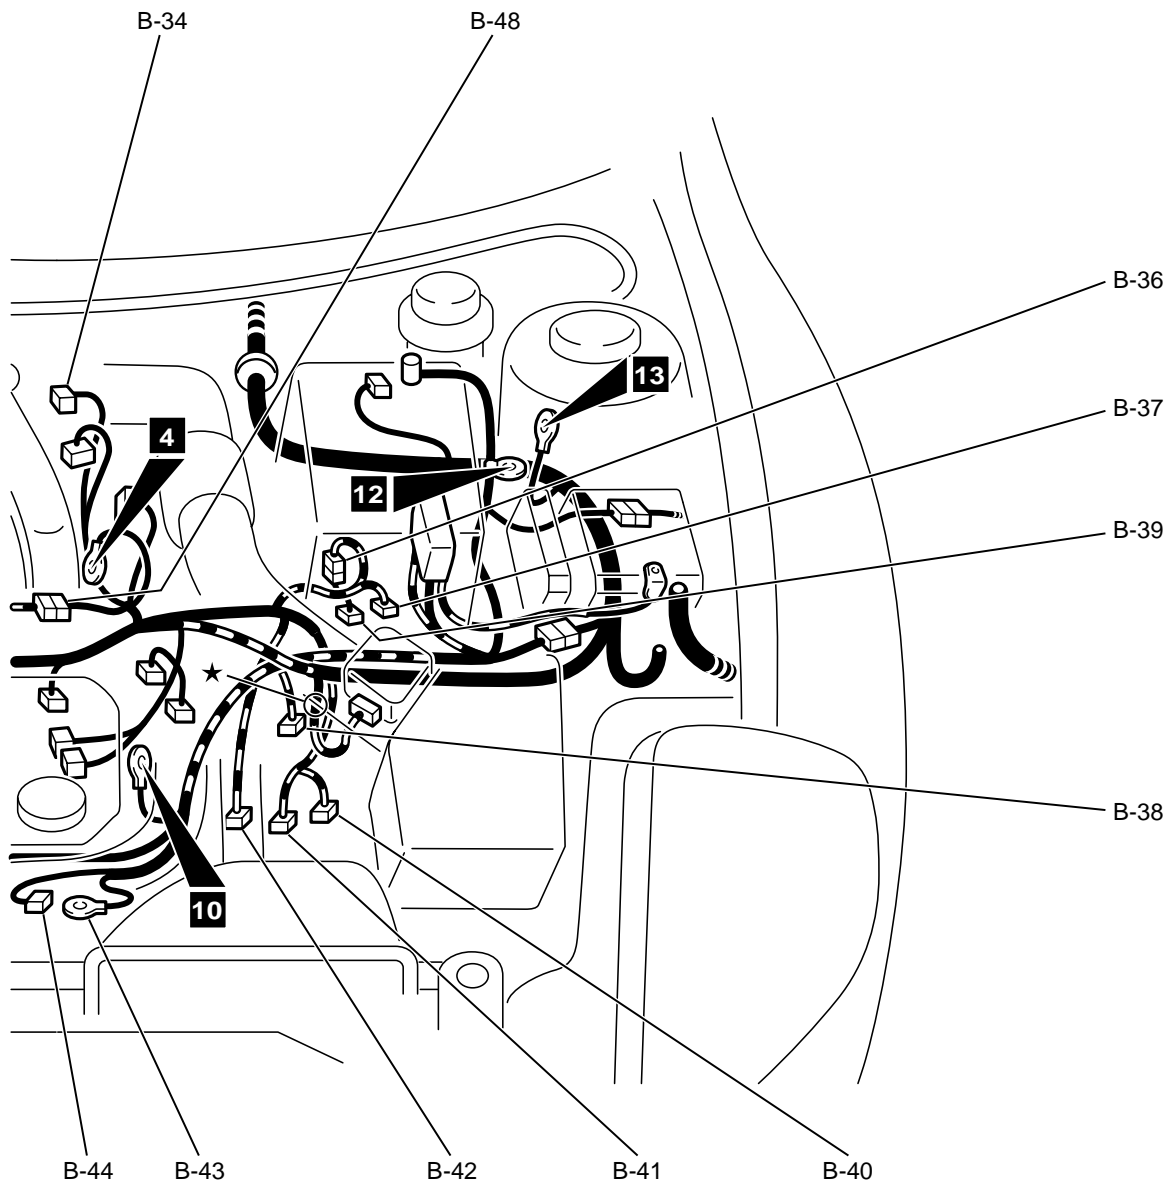



AC106137 AC

- B-42 (3-B) INPUT SHAFT SPEED SENSOR <A/
T>
- B-43 (1) STARTER
- B-44 (1-B) STARTER
- B-45 (4-GR) GENERATOR
- B-46 (1) GENERATOR

- B-47 (1-B) CONTROL WIRING HARNESS AND
POWER STEERING WIRING
HARNESS COMBINATION
- B-48 (4-B) CONTROL WIRING HARNESS AND
INJECTOR WIRING HARNESS
COMBINATION

ENGINE AND TRANSAXLE <3.0L ENGINE (WITH VARIABLE INDUCTION CONTROL (VIC) SYSTEM) >


M1801000400292

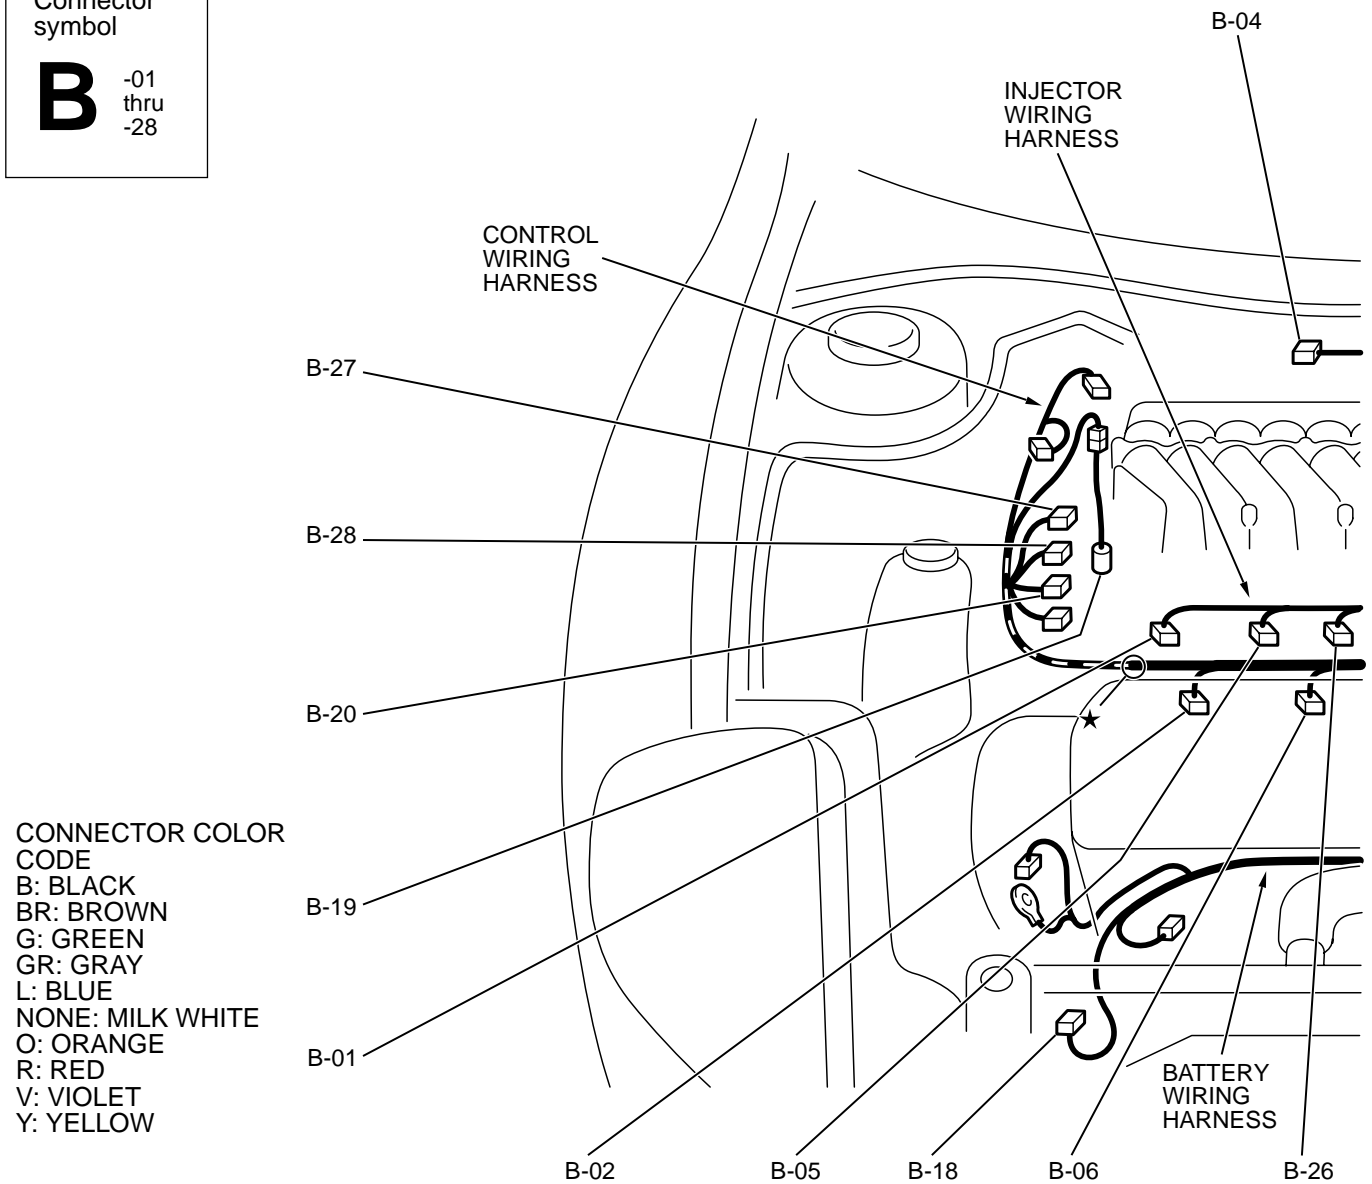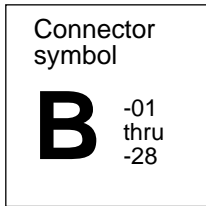

CONNECTOR COLOR CODE
 B: BLACK
 BR: BROWN
 G: GREEN
 GR: GRAY
 L: BLUE
 NONE: MILK WHITE
 O: ORANGE
 R: RED
 V: VIOLET
 Y: YELLOW

AC106115AB



B-01	(2-GR)	INJECTOR 1	B-11	(2-B)	ENGINE COOLANT TEMPERATURE SENSOR
B-02	(2-GR)	INJECTOR 2	B-12	(4-B)	FRONT WIRING HARNESS (LH) AND BATTERY WIRING HARNESS COMBINATION
B-04	(3-B)	MANIFOLD DIFFERENTIAL PRESSURE SENSOR	B-13	(8-B)	CONTROL WIRING HARNESS AND BATTERY WIRING HARNESS COMBINATION
B-05	(2-GR)	INJECTOR 3			
B-06	(2-GR)	INJECTOR 4			
B-07	(4-B)	THROTTLE POSITION SENSOR			
B-08	(1-B)	ENGINE COOLANT TEMPERATURE GAUGE UNIT			
B-10	(2-B)	BRAKE FLUID LEVEL SWITCH			

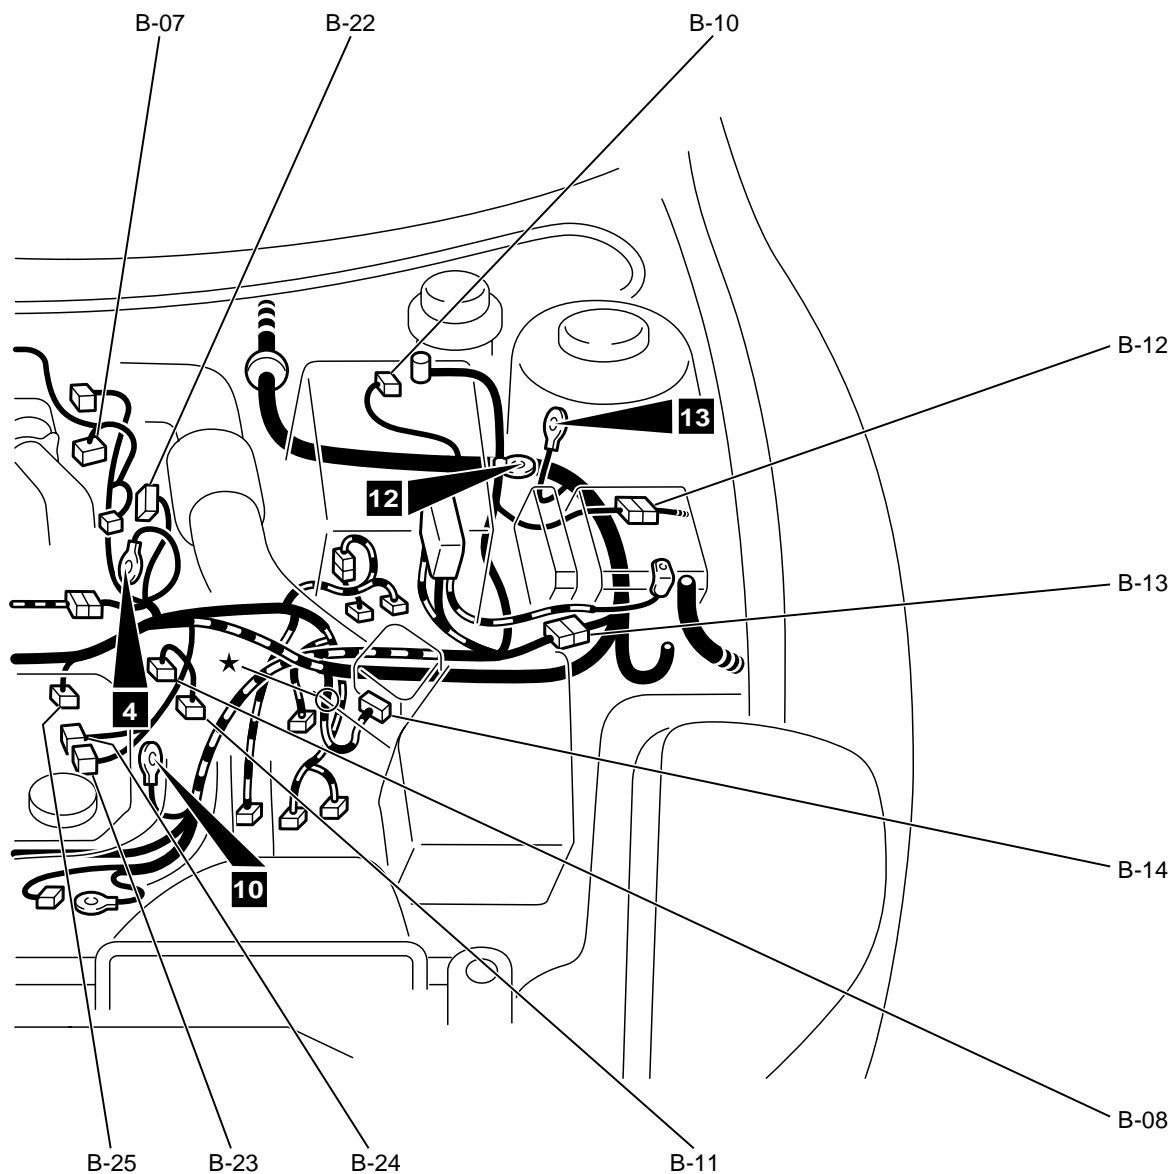

AC106116AB

B-14	(7-B)	VOLUME AIR FLOW SENSOR	B-24	(4-B)	LEFT BANK HEATED OXYGEN SENSOR (FRONT)
B-18	(4-B)	A/C COMPRESSOR ASSEMBLY	B-25	(2-GR)	INJECTOR 6
B-19	(1)	POWER STEERING PRESSURE SWITCH	B-26	(2-GR)	INJECTOR 5
B-20	(3-B)	CRANKSHAFT POSITION SENSOR	B-27	(4-B)	RIGHT BANK HEATED OXYGEN SENSOR (FRONT)
B-22	(7-B)	DISTRIBUTOR ASSEMBLY	B-28	(4-GR)	RIGHT BANK HEATED OXYGEN SENSOR (REAR)
B-23	(4-GR)	LEFT BANK HEATED OXYGEN SENSOR (REAR)			

ENGINE AND TRANSAXLE <3.0L ENGINE (WITH VARIABLE INDUCTION CONTROL (VIC) SYSTEM) >
(CONTINUED)

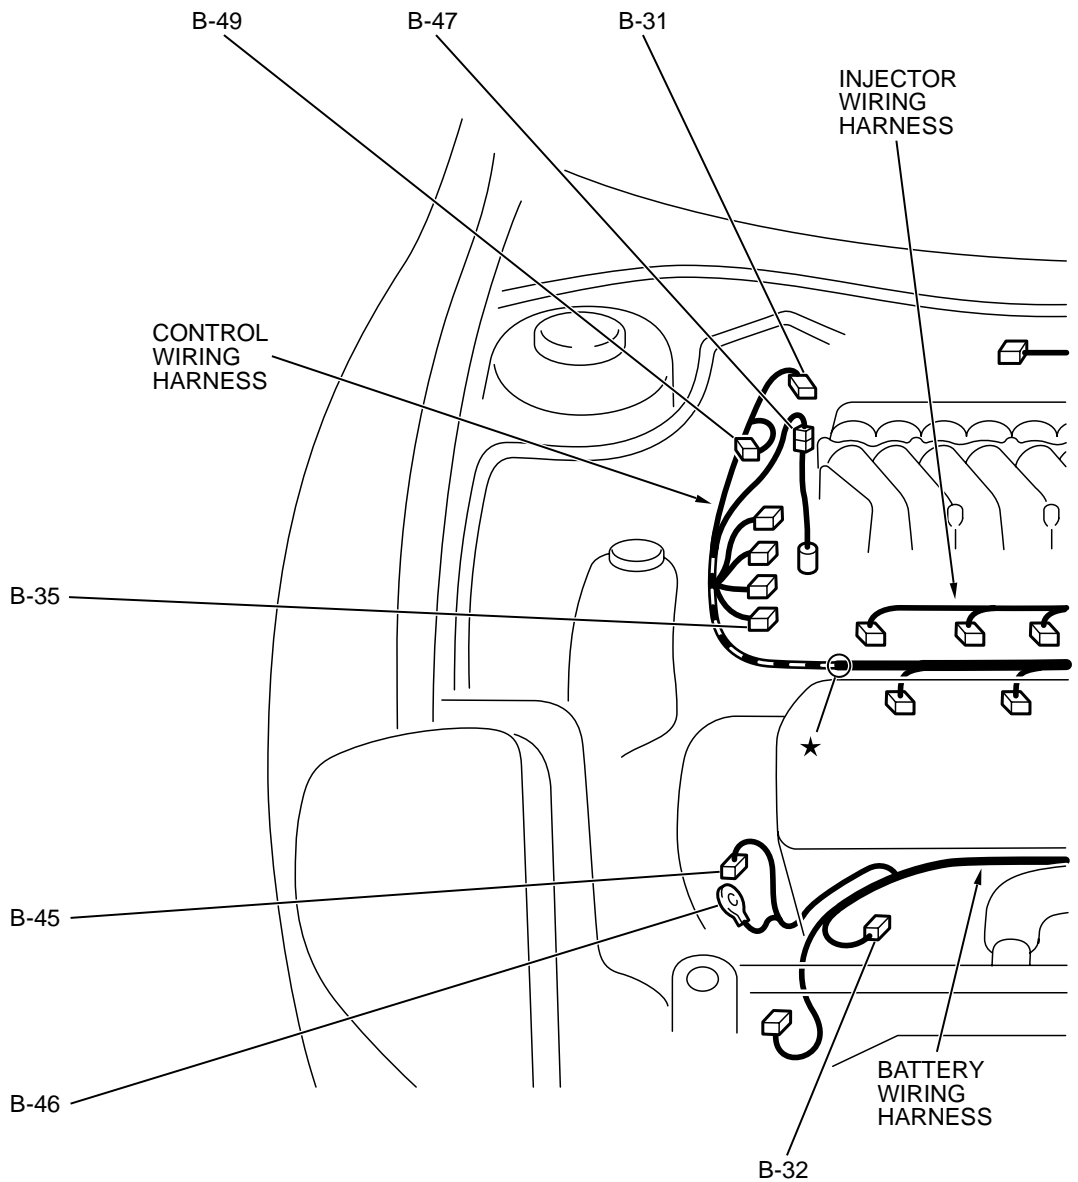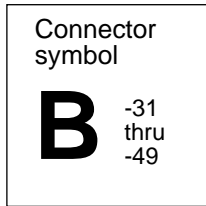


CONNECTOR COLOR CODE
 B: BLACK
 BR: BROWN
 G: GREEN
 GR: GRAY
 L: BLUE
 NONE: MILK WHITE
 O: ORANGE
 R: RED
 V: VIOLET
 Y: YELLOW

- B-31 (2-BR) EGR SOLENOID VALVE
- B-32 (1-B) OIL PRESSURE SWITCH
- B-33 (2-B) EVAPORATIVE EMISSION PURGE SOLENOID VALVE
- B-34 (6-B) IDLE AIR CONTROL MOTOR
- B-35 (2-GR) KNOCK SENSOR
- B-36 (3-B) CONTROL WIRING HARNESS AND VEHICLE SPEED SENSOR WIRING HARNESS COMBINATION <M/T>
- B-37 (2-B) BACKUP LIGHT SWITCH <M/T>

- B-38 (3-GR) OUTPUT SHAFT SPEED SENSOR <A/T>
- B-39 (3-B) VEHICLE SPEED SENSOR <M/T>
- B-40 (10-GR) A/T CONTROL SOLENOID VALVE ASSEMBLY
- B-41 (10-B) PARK/NEUTRAL POSITION SWITCH <A/T>

AC106115 AC

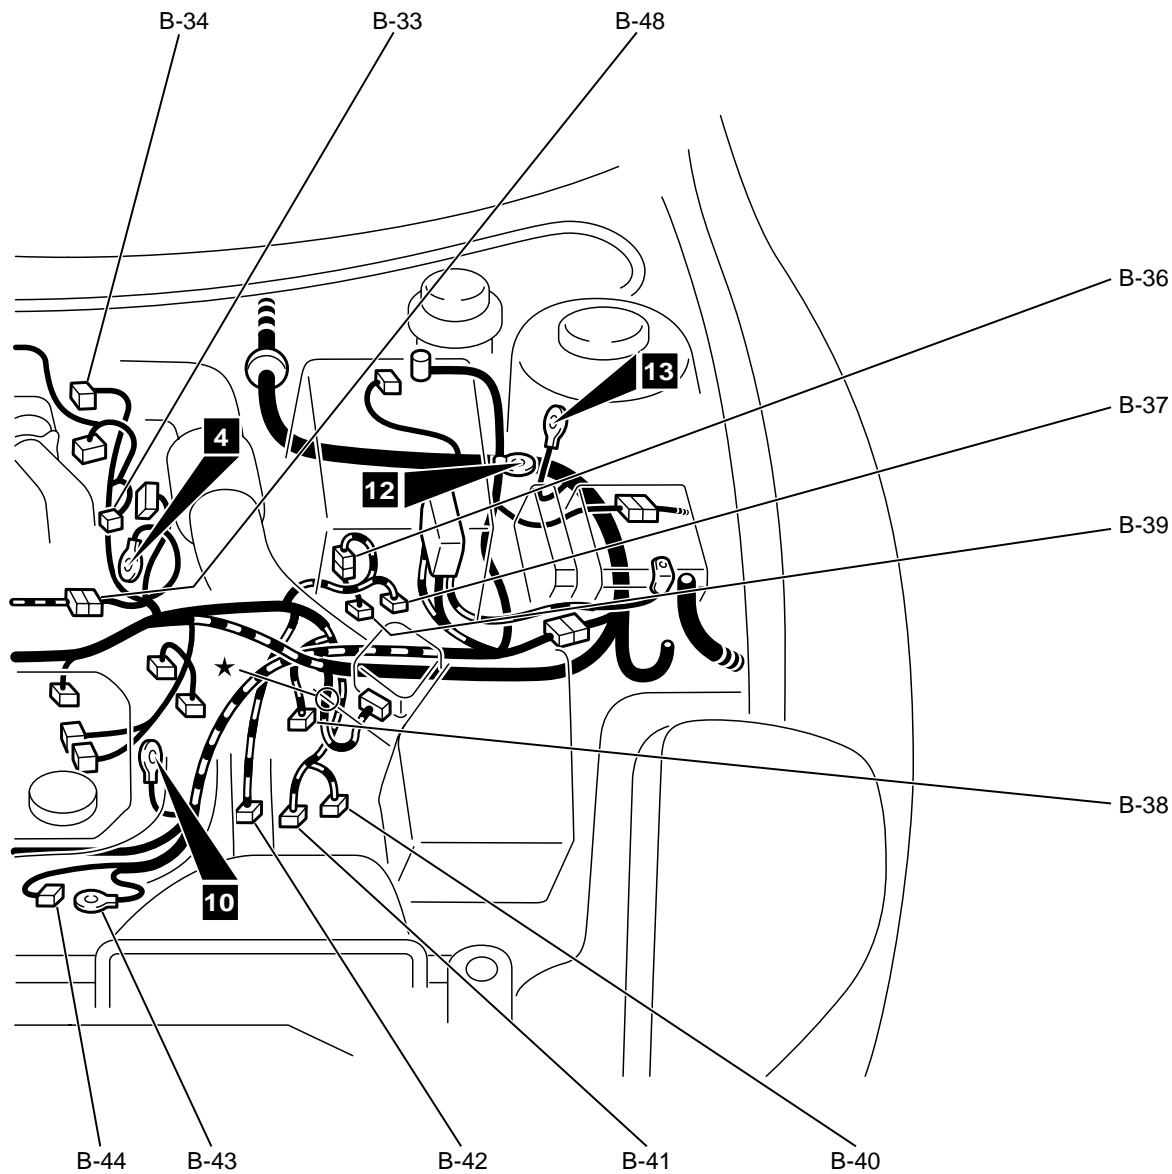



AC106116 AC

- B-42 (3-B) INPUT SHAFT SPEED SENSOR <A/T>
- B-43 (1) STARTER
- B-44 (1-B) STARTER
- B-45 (4-GR) GENERATOR
- B-46 (1) GENERATOR
- B-47 (1-B) CONTROL WIRING HARNESS AND POWER STEERING WIRING HARNESS COMBINATION

- B-48 (4-B) CONTROL WIRING HARNESS AND INJECTOR WIRING HARNESS COMBINATION
- B-49 (2-B) VARIABLE INDUCTION CONTROL SOLENOID VALVE

DASH PANEL


M1801000600348

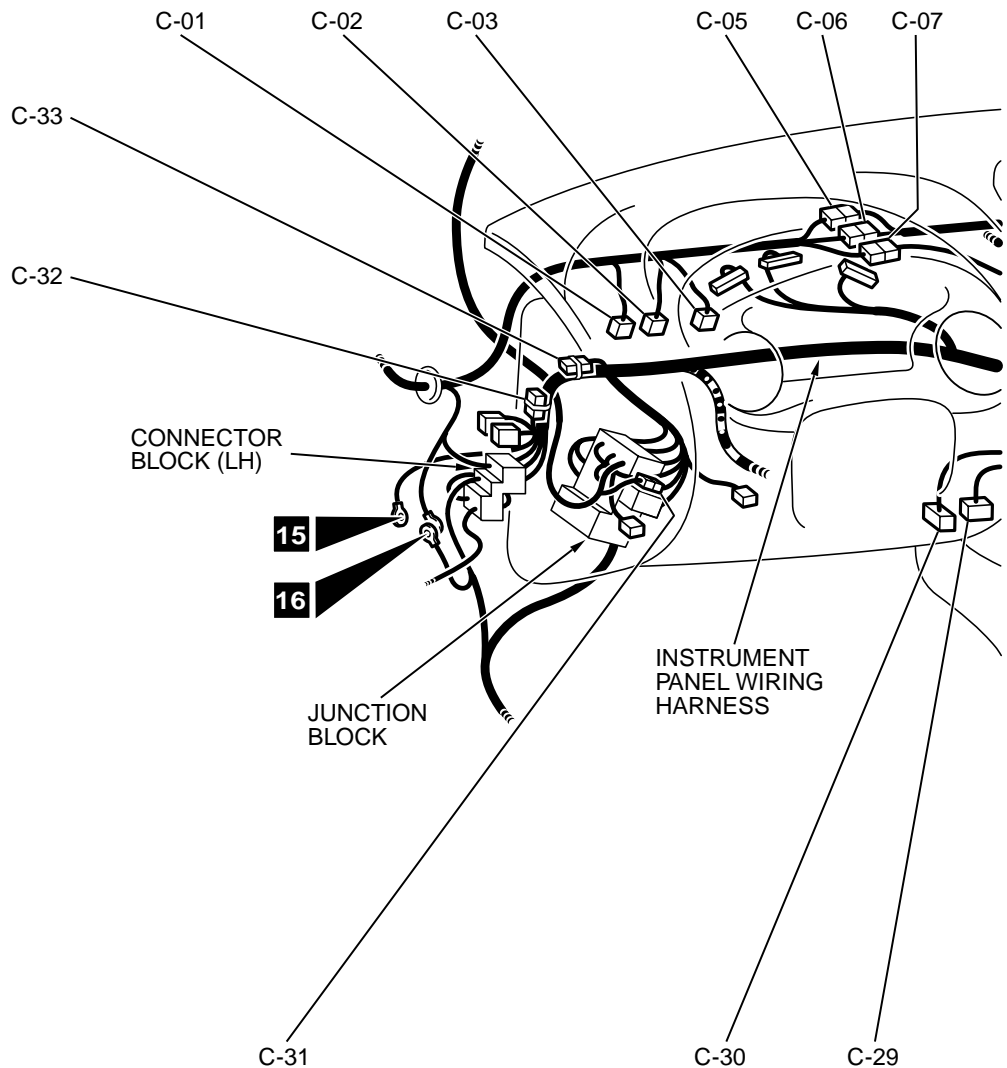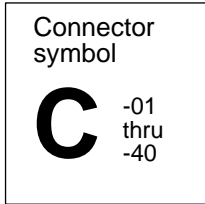

CONNECTOR COLOR CODE
 B: BLACK
 BR: BROWN
 G: GREEN
 GR: GRAY
 L: BLUE
 NONE: MILK WHITE
 O: ORANGE
 R: RED
 V: VIOLET
 Y: YELLOW

AC101831AD



C-01	(4)	CLUTCH PEDAL POSITION SWITCH <AUTO-CRUISE CONTROL SYSTEM (M/T)>	C-11	(2-R)	AIR BAG MODULE (SQUIB) (PASSENGER'S SIDE)
C-02	(2)	INTERLOCK SWITCH <M/T>	C-12	(20-B)	AUTOMATIC COMPRESSOR CONTROLLER <A/C>
C-03	(4)	STOPLIGHT SWITCH	C-13	(8-B)	AUTOMATIC COMPRESSOR CONTROLLER <A/C (3.0L ENGINE)>
C-05	(2-B)	FRONT WIRING HARNESS (LH) AND FRONT WIRING HARNESS (RH) COMBINATION <ABS>	C-14	(7)	OUTSIDE/INSIDE AIR SELECTION DAMPER CONTROL MOTOR
C-06	(18)	FRONT WIRING HARNESS (LH) AND FRONT WIRING HARNESS (RH) COMBINATION	C-16	(4)	BLOWER RESISTOR
C-07	(8)	FRONT WIRING HARNESS (LH) AND CONTROL WIRING HARNESS COMBINATION	C-17	(2)	BLOWER MOTOR
C-08	(2)	CENTER SPEAKER	C-20	(16-B)	AUTO-CRUISE CONTROL-ECU
C-09	(20)	MULTI CENTER DISPLAY UNIT	C-21	(8)	RADIO, TAPE PLAYER, CD PLAYER AND CD AUTO CHANGER
C-10	(4)	HAZARD WARNING SWITCH	C-22	(14)	RADIO, TAPE PLAYER, CD PLAYER AND CD AUTO CHANGER

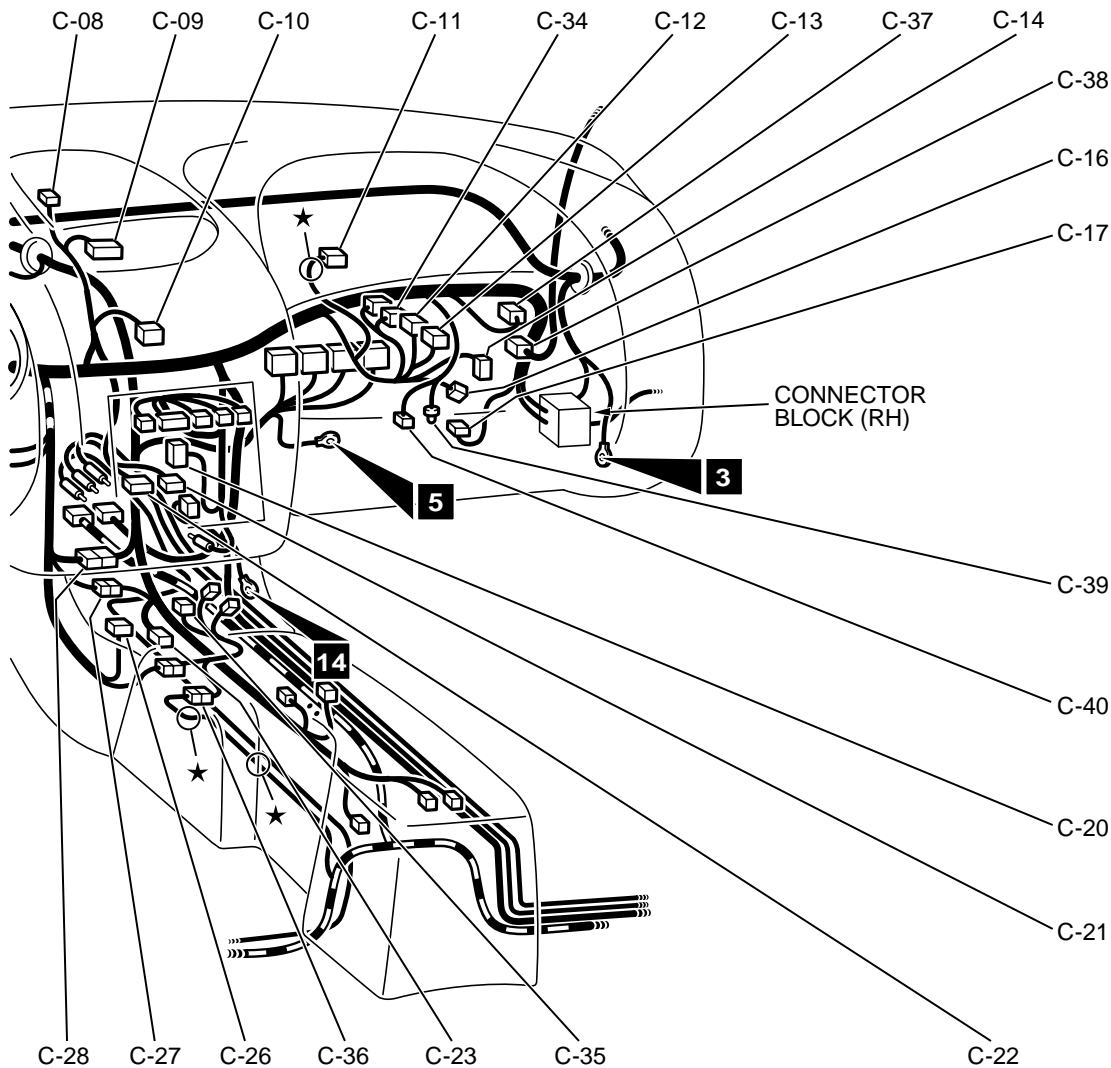

AC106117 AB

C-23	(6)	HEATED OXYGEN SENSOR (REAR) <2.4L ENGINE>	C-32	(1)	JUMPER CONNECTOR <THEFT- ALARM SYSTEM>
C-26	(9)	REMOTE CONTROLLED MIRROR SWITCH <ECLIPSE SPYDER>	C-33	(1)	JUMPER CONNECTOR <THEFT- ALARM SYSTEM>
C-27	(10)	INSTRUMENT PANEL WIRING HARNESS AND CONTROL WIRING HARNESS COMBINATION <SPORT MODE TYPE A/T>	C-34	(2)	THERMISTOR SENSOR <HEATER AND A/C>
C-28	(38)	INSTRUMENT PANEL WIRING HARNESS AND CONTROL WIRING HARNESS COMBINATION	C-35	(8-B)	CONVERTIBLE TOP SWITCH <ECLIPSE SPYDER>
C-29	(16-B)	DATA LINK CONNECTOR	C-36	(2)	FLOOR WIRING HARNESS AND CONSOLE WIRING HARNESS COMBINATION <ECLIPSE SPYDER>
C-30	(12)	DATA LINK CONNECTOR	C-37	(8-B)	COMPASS-ECU <MULTI CENTER DISPLAY>
C-31	(4)	INSTRUMENT PANEL WIRING HARNESS AND ROOF WIRING HARNESS COMBINATION <ECLIPSE (SUNROOF) >	C-38	(6)	COMPASS-ECU <MULTI CENTER DISPLAY>
			C-39	(2)	GLOVE BOX LIGHT
			C-40	(2)	GLOVE BOX LIGHT SWITCH


DASH PANEL (CONTINUED)

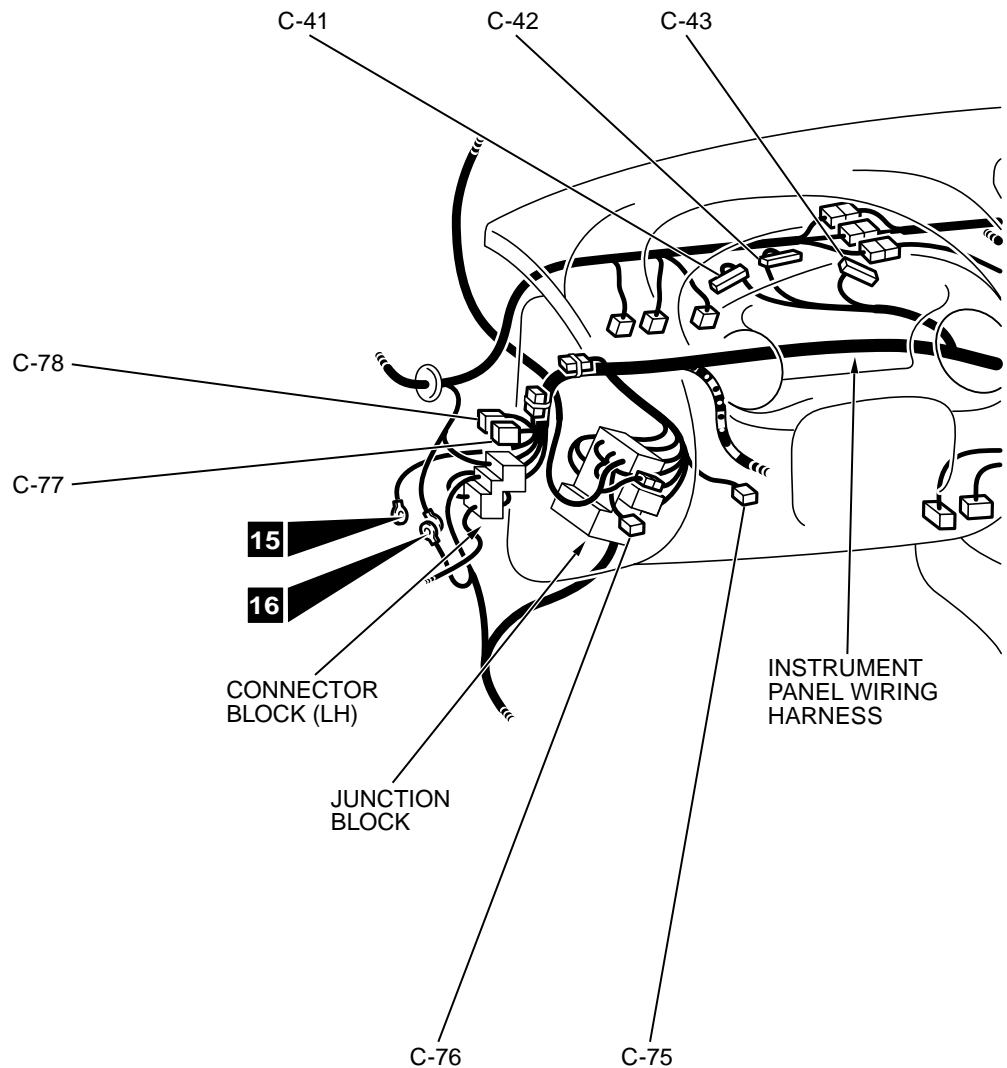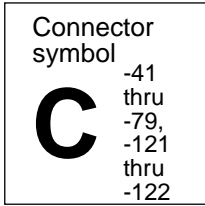

CONNECTOR COLOR CODE
 B: BLACK
 BR: BROWN
 G: GREEN
 GR: GRAY
 L: BLUE
 NONE: MILK WHITE
 O: ORANGE
 R: RED
 V: VIOLET
 Y: YELLOW

AC101831AE


C-41	(16-B)	COMBINATION METER	C-53	(16-G)	ENGINE CONTROL MODULE <2.4L ENGINE-M/T>
C-42	(14)	COMBINATION METER	C-54	(26-GR)	POWERTRAIN CONTROL MODULE <2.4L ENGINE-A/T>
C-43	(16)	COMBINATION METER	C-55	(26-GR)	POWERTRAIN CONTROL MODULE <3.0L ENGINE-A/T>
C-44	(2)	HEATER CONTROL PANEL ILLUMINATION LIGHT	C-56	(12-G)	ENGINE CONTROL MODULE <2.4L ENGINE-M/T>
C-46	(12)	A/C SWITCH	C-57	(28-GR)	POWERTRAIN CONTROL MODULE <2.4L ENGINE-A/T>
C-47	(3)	DEFROSTER SWITCH	C-58	(28-GR)	ENGINE CONTROL MODULE <3.0L ENGINE-M/T>
C-48	(6)	BLOWER SWITCH	C-59	(28-GR)	POWERTRAIN CONTROL MODULE <3.0L ENGINE-A/T>
C-49	(26-G)	ENGINE CONTROL MODULE <2.4L ENGINE-M/T>	C-60	(22-G)	ENGINE CONTROL MODULE <2.4L ENGINE-M/T>
C-50	(35-GR)	POWERTRAIN CONTROL MODULE <2.4L ENGINE-A/T>			
C-51	(35-GR)	ENGINE CONTROL MODULE <3.0L ENGINE-M/T>			
C-52	(35-GR)	POWERTRAIN CONTROL MODULE <3.0L ENGINE-A/T>			

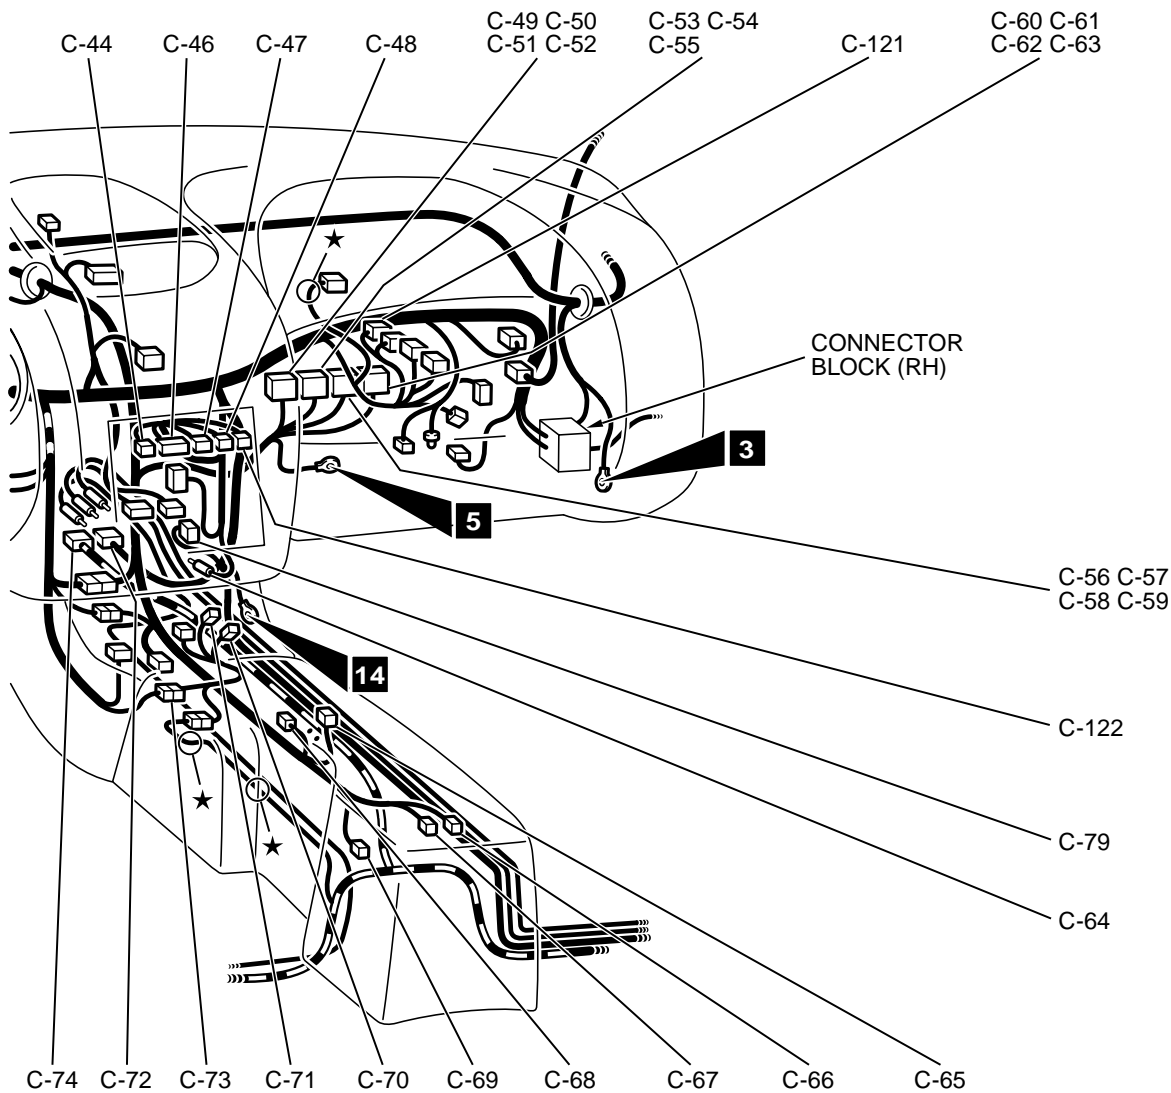


AC106117 AC

C-61	(30-GR)	POWERTRAIN CONTROL MODULE <2.4L ENGINE-A/T>	C-71	(1)	CIGARETTE LIGHTER
C-62	(30-GR)	ENGINE CONTROL MODULE <3.0L ENGINE-M/T>	C-72	(16-Y)	SRS-ECU
C-63	(30-GR)	POWERTRAIN CONTROL MODULE <3.0L ENGINE-A/T>	C-73	(3)	INSTRUMENT PANEL WIRING HARNESS AND CONSOLE WIRING HARNESS COMBINATION
C-64	(2)	ASHTRAY ILLUMINATION LIGHT	C-74	(22-Y)	SRS-ECU <WITH SIDE AIR BAG>
C-65	(6)	SHIFT SWITCH ASSEMBLY <WITH SPORT MODE TYPE A/T>	C-75	(3)	RHEOSTAT
C-66	(1)	ACCESSORY SOCKET	C-76	(7)	FOG LIGHT SWITCH
C-67	(1-B)	ACCESSORY SOCKET	C-77	(33)	JOINT CONNECTOR (1)
C-68	(2)	A/T SELECTOR LEVER POSITION ILLUMINATION LIGHT <WITHOUT SPORT MODE TYPE A/T>	C-78	(33)	JOINT CONNECTOR (2)
C-69	(1-B)	PARKING BRAKE SWITCH	C-79	(12)	IMMOBILIZER-ECU
C-70	(1-B)	CIGARETTE LIGHTER	C-121	(7)	WATER SHUT VALVE MOTOR <ECLIPSE>
			C-122	(8)	WATER SHUT VALVE CONTROLLER <ECLIPSE>

DASH PANEL (CONTINUED)

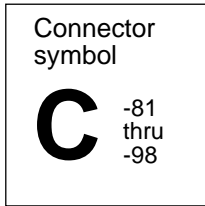



STEERING COLUMN

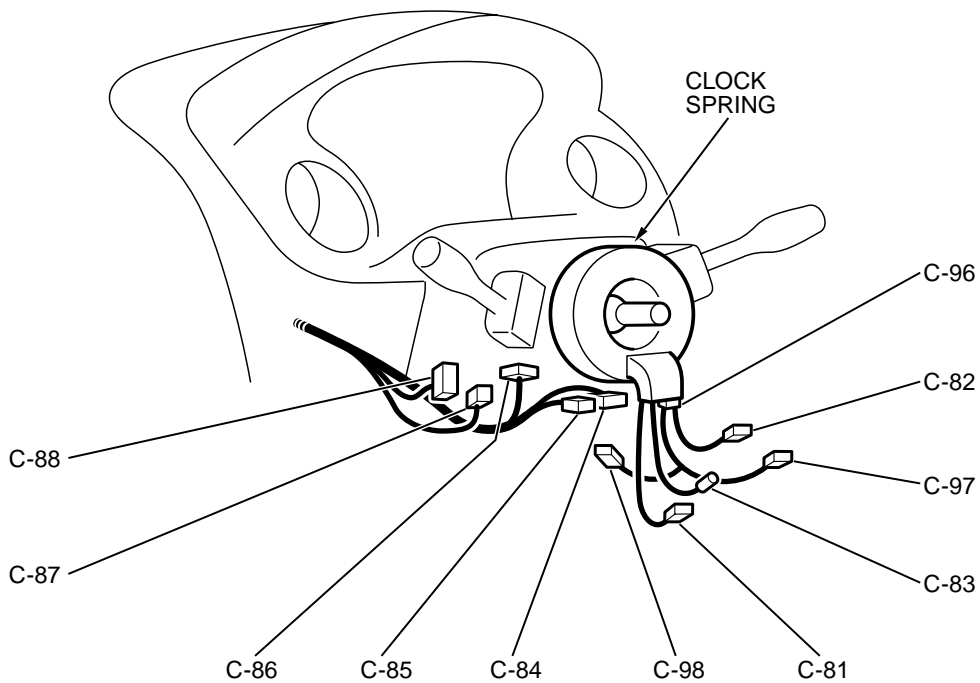

AC106118 AB


C-81	(2)	AIR BAG MODULE (SQUIB) (DRIVER'S SIDE)	C-88	(7)	KEY REMINDER SWITCH
C-82	(3)	AUTO-CRUISE CONTROL SWITCH	C-89	(38)	INSTRUMENT PANEL WIRING HARNESS AND FRONT WIRING HARNESS (LH) COMBINATION
C-83	(1)	HORN SWITCH	C-90	(43)	INSTRUMENT PANEL WIRING HARNESS AND FLOOR WIRING HARNESS COMBINATION
C-84	(6-B)	CLOCK SPRING			
C-85	(4-Y)	CLOCK SPRING			
C-86	(10)	COLUMN SWITCH			
C-87	(6)	IGNITION SWITCH			

CONNECTOR BLOCK (LH)

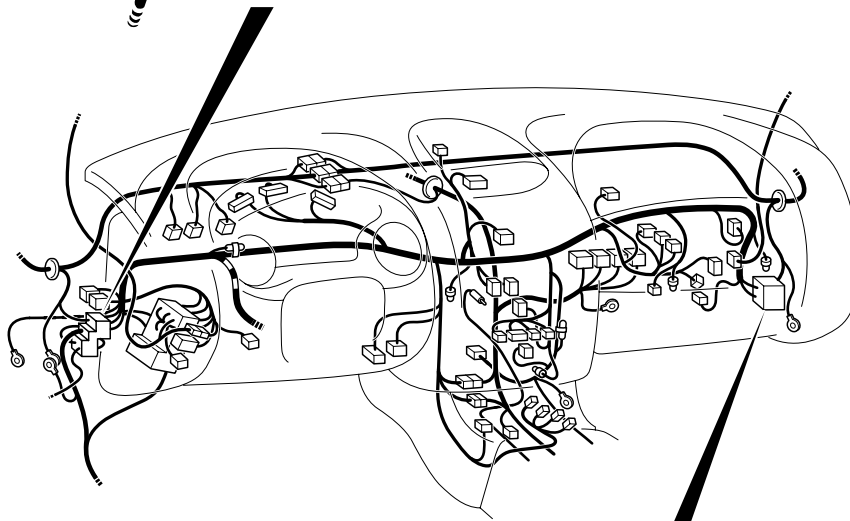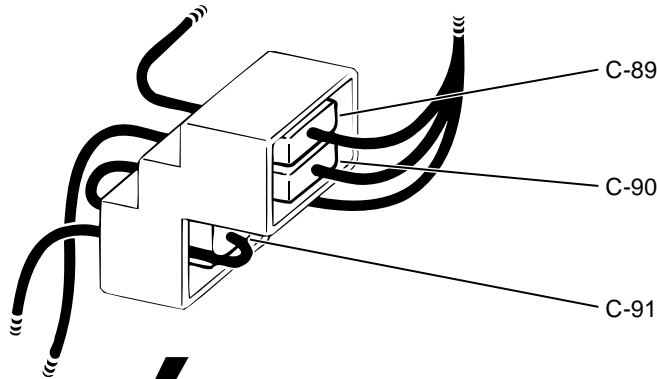

CONNECTOR COLOR
CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW

CONNECTOR BLOCK (RH)

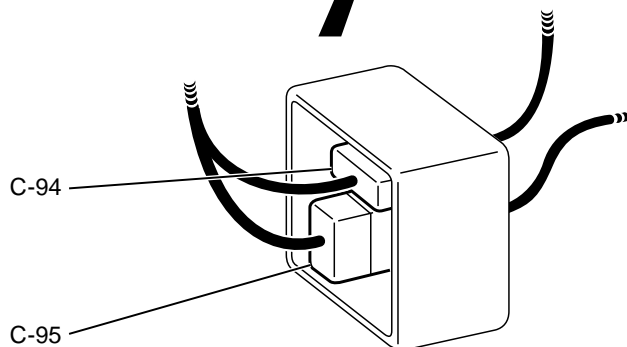


C-91	(32-B)	INSTRUMENT PANEL WIRING HARNESS AND DOOR WIRING HARNESS (LH) COMBINATION
C-94	(20)	INSTRUMENT PANEL WIRING HARNESS AND FRONT WIRING HARNESS (RH) COMBINATION
C-95	(32)	INSTRUMENT PANEL WIRING HARNESS AND DOOR WIRING HARNESS (RH) COMBINATION


C-96	(5)	CLOCK SPRING AND CLOCK SPRING WIRING HARNESS COMBINATION
C-97	(2)	REMOTE CONTROLLED RADIO SWITCH (RH)
C-98	(2)	REMOTE CONTROLLED RADIO SWITCH (LH)

ACX02057AG


DASH PANEL (CONTINUED)

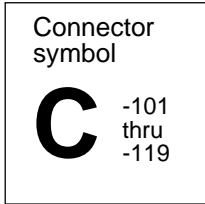

JUNCTION BLOCK
(FRONT VIEW)

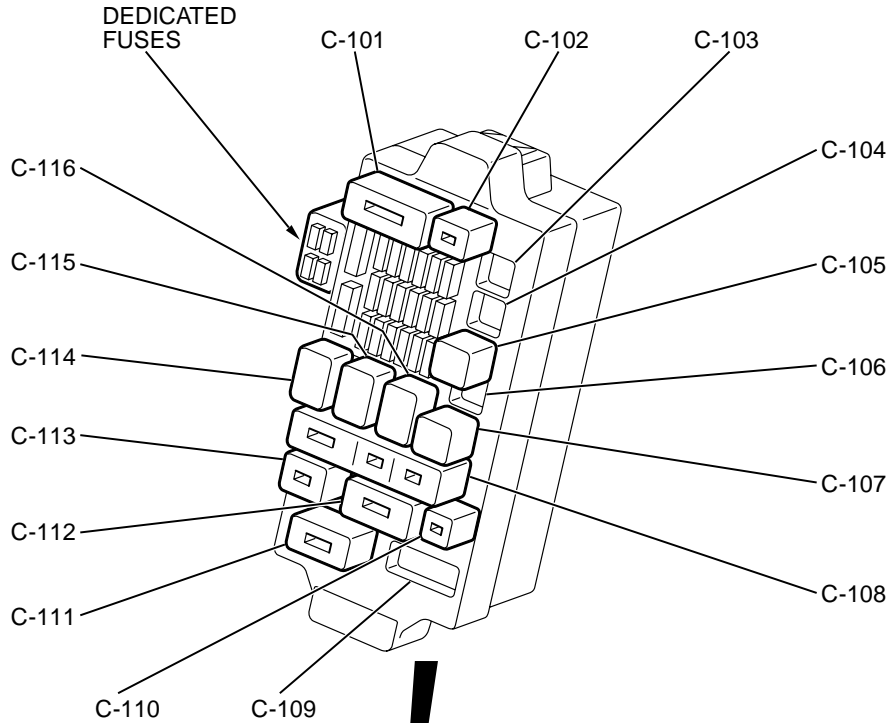


CONNECTOR COLOR CODE
 B: BLACK
 BR: BROWN
 G: GREEN
 GR: GRAY
 L: BLUE
 NONE: MILK WHITE
 O: ORANGE
 R: RED
 V: VIOLET
 Y: YELLOW

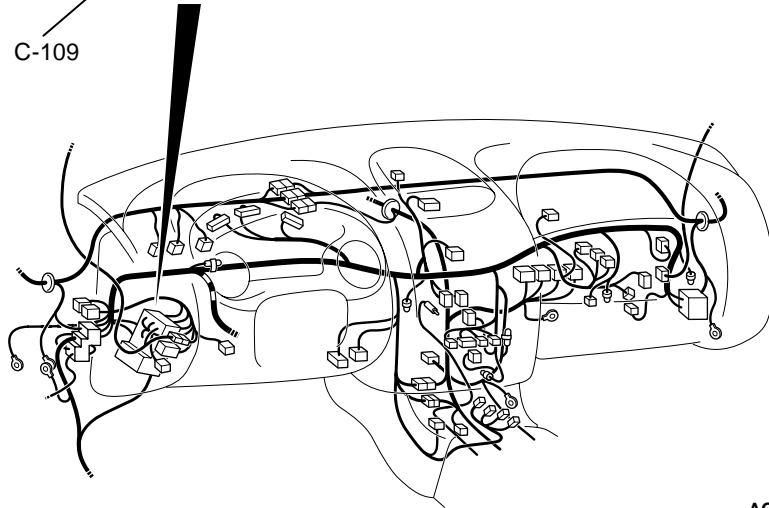

AC106139AB

C-101 (15)	FLOOR WIRING HARNESS AND JUNCTION BLOCK COMBINATION	C-107 (4)	FUEL PUMP RELAY (1)
C-102 (3)	ROOF WIRING HARNESS AND JUNCTION BLOCK COMBINATION	C-108 (28)	INSTRUMENT PANEL WIRING HARNESS AND JUNCTION BLOCK COMBINATION
C-103 (4)	NO CONNECTION	C-109 (13)	NO CONNECTION
C-104 (4)	NO CONNECTION	C-110 (2)	INSTRUMENT PANEL WIRING HARNESS AND JUNCTION BLOCK COMBINATION
C-105 (4)	FUEL PUMP RELAY (2)		
C-106 (4)	NO CONNECTION		

JUNCTION BLOCK
(REAR VIEW)


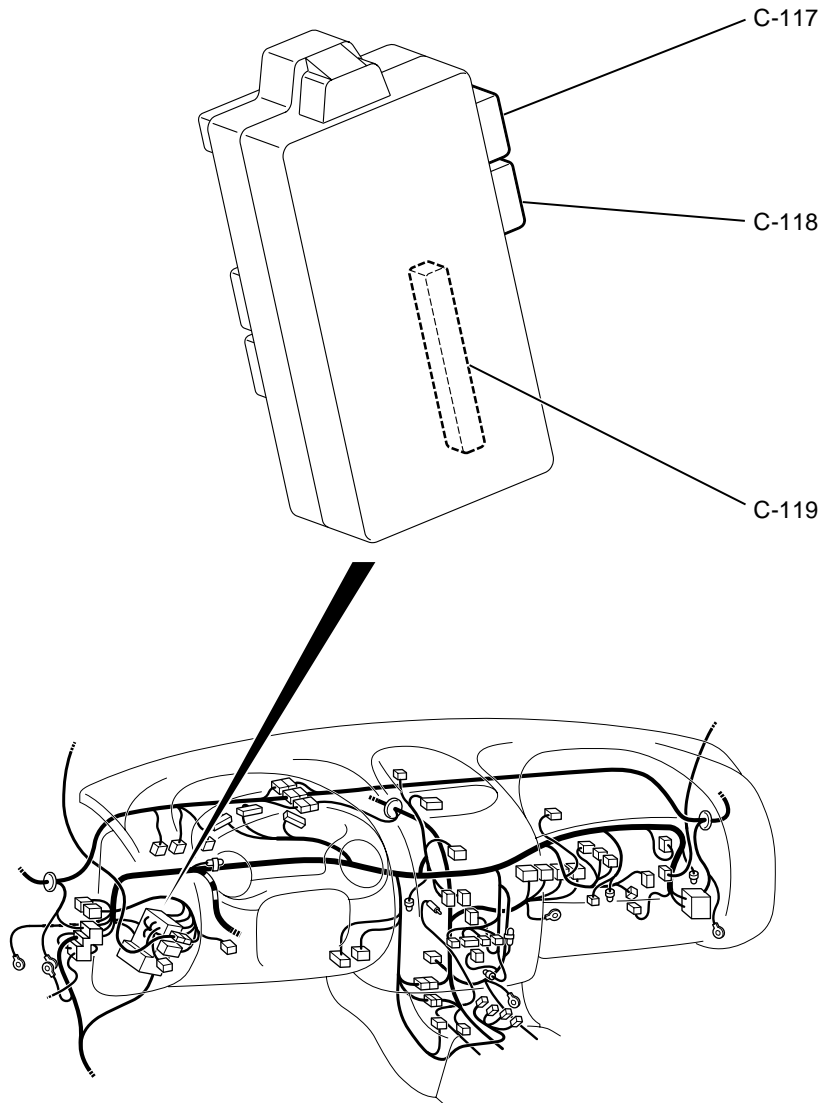


- C-111 (6) INSTRUMENT PANEL WIRING
HARNESS AND JUNCTION BLOCK
COMBINATION
- C-112 (14) INSTRUMENT PANEL WIRING
HARNESS AND JUNCTION BLOCK
COMBINATION
- C-113 (1-B) INSTRUMENT PANEL WIRING
HARNESS AND JUNCTION BLOCK
COMBINATION

- C-114 (5) DEFOGGER RELAY
- C-115 (5) BLOWER RELAY
- C-116 (5) POWER WINDOW RELAY
- C-117 (24) ETACS-ECU
- C-118 (24-GR) ETACS-ECU
- C-119 (20) ETACS-ECU

AC106140 AB


FLOOR AND ROOF <ECLIPSE>

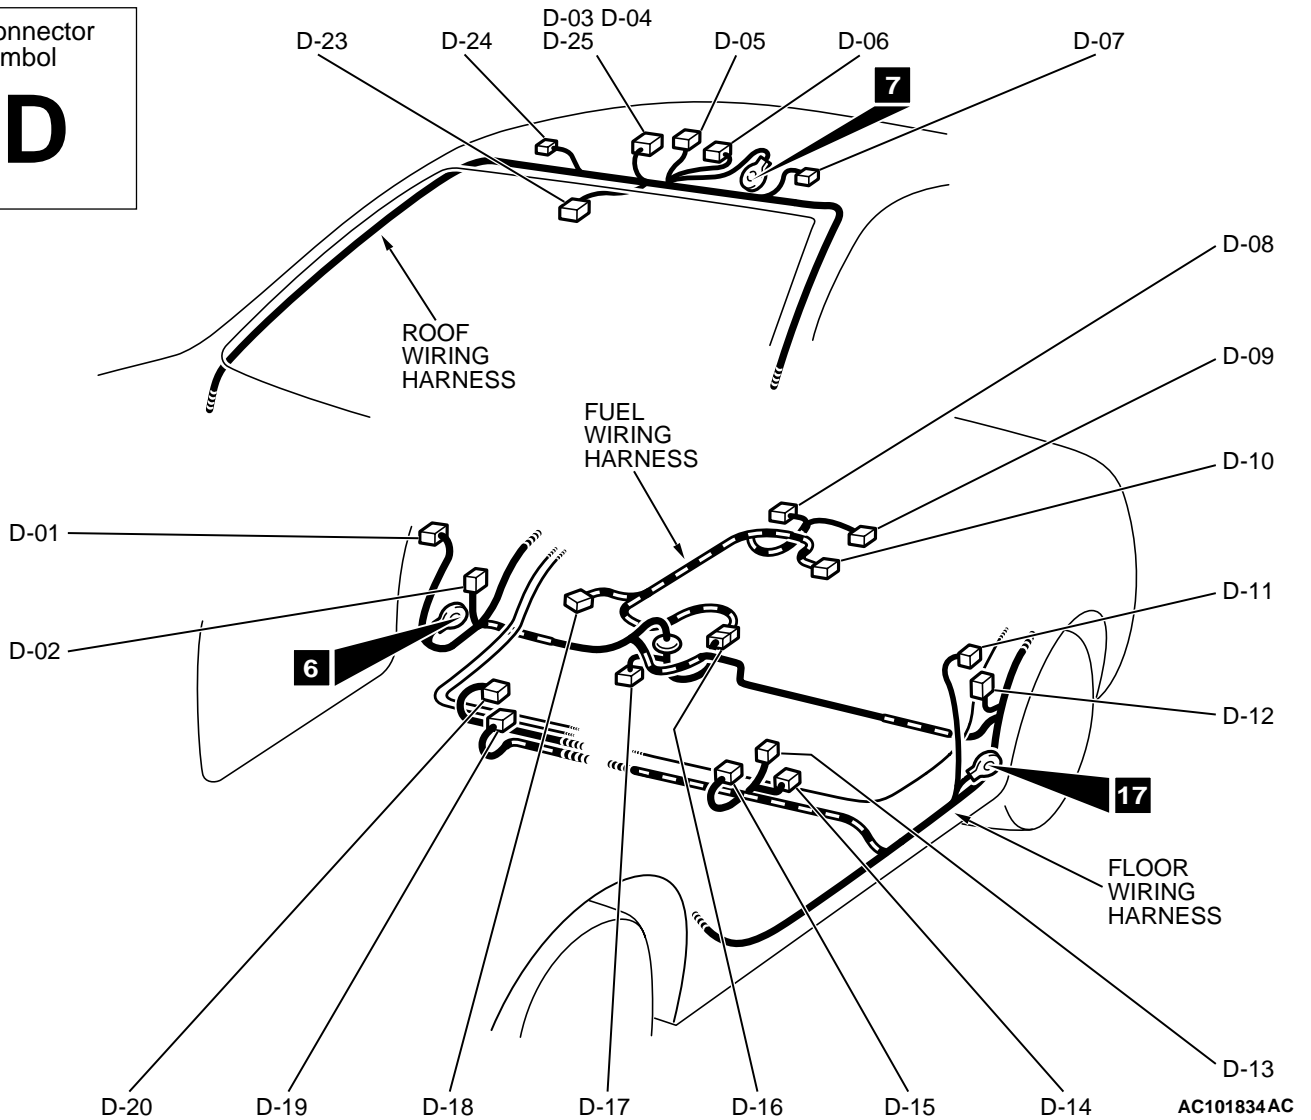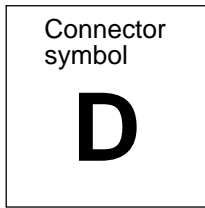

D-01	(3)	DOOR SWITCH (RH)	D-13	(2)	SEAT BELT SWITCH
D-02	(2)	SIDE IMPACT SENSOR (RH) <WITH SIDE AIR BAG>	D-14	(2)	POWER SEAT ASSEMBLY
D-03	(7-B)	DOME LIGHT ASSEMBLY <WITH SUNROOF, WITHOUT VANITY MIRROR LIGHT>	D-15	(2-R)	SIDE AIR BAG MODULE (SQUIB) (LH)
D-04	(3)	DOME LIGHT ASSEMBLY <WITHOUT SUNROOF>	D-16	(10-B)	FLOOR WIRING HARNESS AND FUEL WIRING HARNESS COMBINATION
D-05	(6-B)	SUNROOF SWITCH	D-17	(5-GR)	FUEL PUMP MODULE
D-06	(10)	SUNROOF ASSEMBLY	D-18	(3-B)	FUEL TANK DIFFERENTIAL PRESSURE SENSOR
D-07	(2)	VANITY MIRROR LIGHT (LH)	D-19	(2-R)	SIDE AIR BAG MODULE (SQUIB) (RH)
D-08	(2-GR)	WHEEL SPEED SENSOR (REAR: RH) <ABS>	D-20	(18)	AMPLIFIER <7-SPEAKER SYSTEM>
D-09	(2-B)	WHEEL SPEED SENSOR (REAR: LH) <ABS>	D-23	(5-B)	COMPASS SENSOR <MULTI CENTER DISPLAY>
D-10	(2-B)	EVAPORATIVE EMISSION VENTILATION SOLENOID	D-24	(2)	VANITY MIRROR LIGHT (RH)
D-11	(3)	DOOR SWITCH (LH)	D-25	(7-B)	DOME LIGHT ASSEMBLY <WITH SUNROOF AND VANITY MIRROR LIGHT>
D-12	(2)	SIDE IMPACT SENSOR (LH) <WITH SIDE AIR BAG>			

**FLOOR AND WINDSHIELD APERTURE
 <ECLIPSE SPYDER>**



M1801000900297

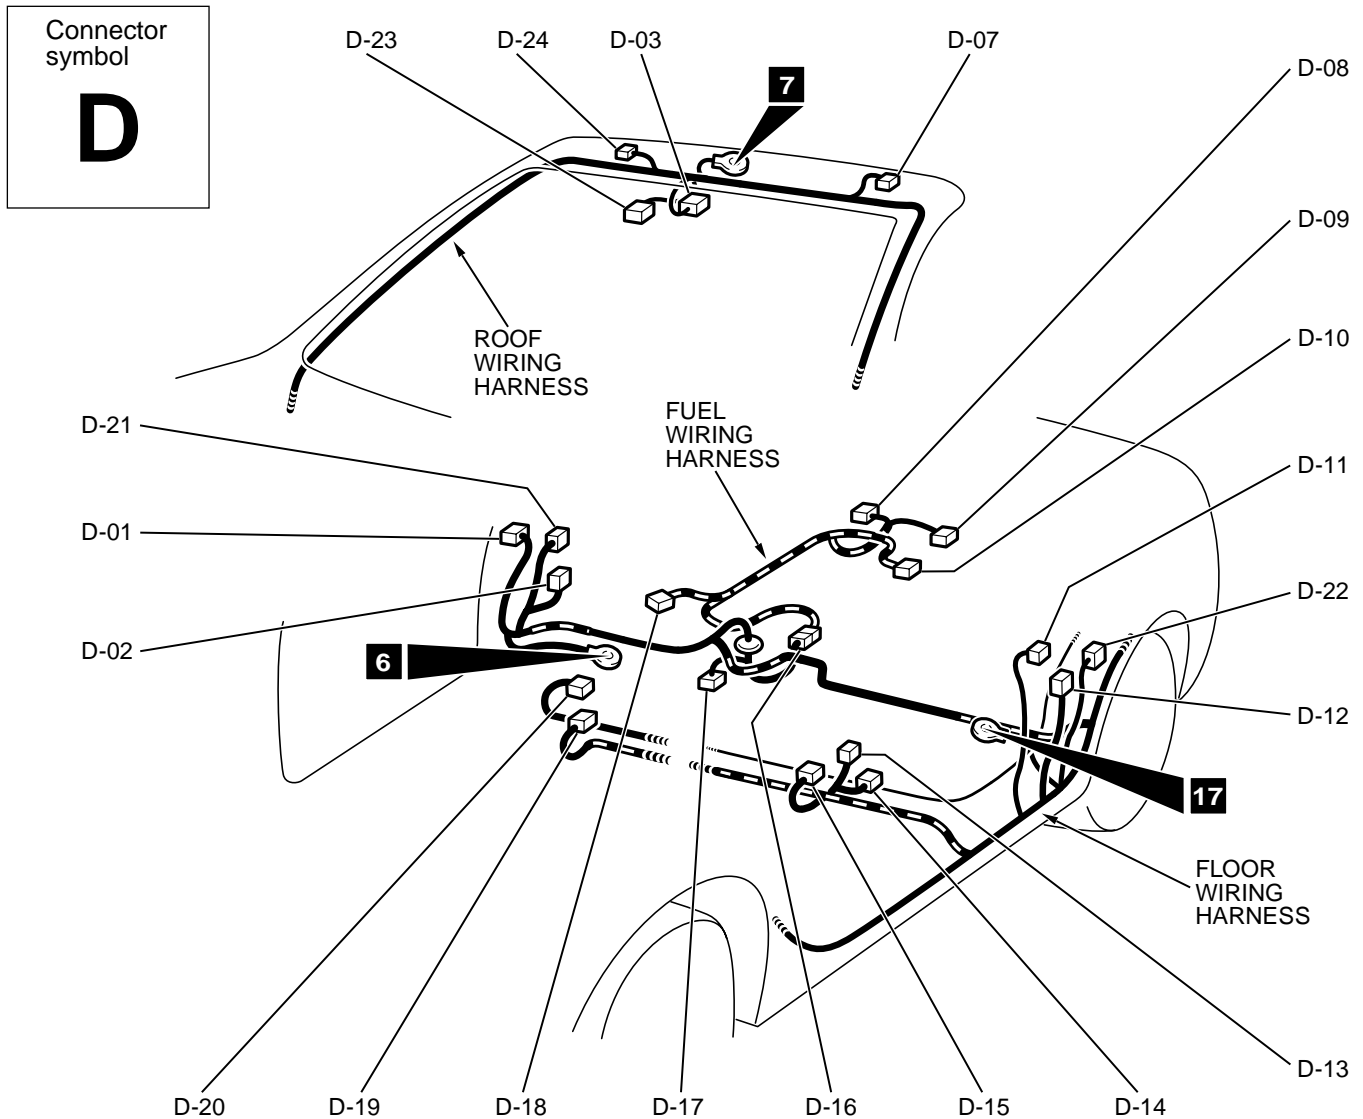

AC106119AB

D-01	(3)	DOOR SWITCH (RH)	D-15	(2-R)	SIDE AIR BAG MODULE (SQUIB) (LH)
D-02	(2)	SIDE IMPACT SENSOR (RH) <WITH SIDE AIR BAG>	D-16	(10-B)	FLOOR WIRING HARNESS AND FUEL WIRING HARNESS COMBINATION
D-03	(7-B)	DOME LIGHT ASSEMBLY	D-17	(5-GR)	FUEL PUMP MODULE
D-07	(2)	VANITY MIRROR LIGHT (LH)	D-18	(3-B)	FUEL TANK DIFFERENTIAL PRESSURE SENSOR
D-08	(2-GR)	WHEEL SPEED SENSOR (REAR: RH) <ABS>	D-19	(2-R)	SIDE AIR BAG MODULE (SQUIB) (RH)
D-09	(2-B)	WHEEL SPEED SENSOR (REAR: LH) <ABS>	D-20	(18)	AMPLIFIER <7-SPEAKER SYSTEM>
D-10	(2-B)	EVAPORATIVE EMISSION VENTILATION SOLENOID	D-21	(2-B)	REAR SPEAKER (RH)
D-11	(3)	DOOR SWITCH (LH)	D-22	(2-B)	REAR SPEAKER (LH)
D-12	(2)	SIDE IMPACT SENSOR (LH) <WITH SIDE AIR BAG>	D-23	(5-B)	COMPASS SENSOR <MULTI CENTER DISPLAY>
D-13	(2)	SEAT BELT SWITCH	D-24	(2)	VANITY MIRROR LIGHT (RH)
D-14	(2)	POWER SEAT ASSEMBLY			

DOOR

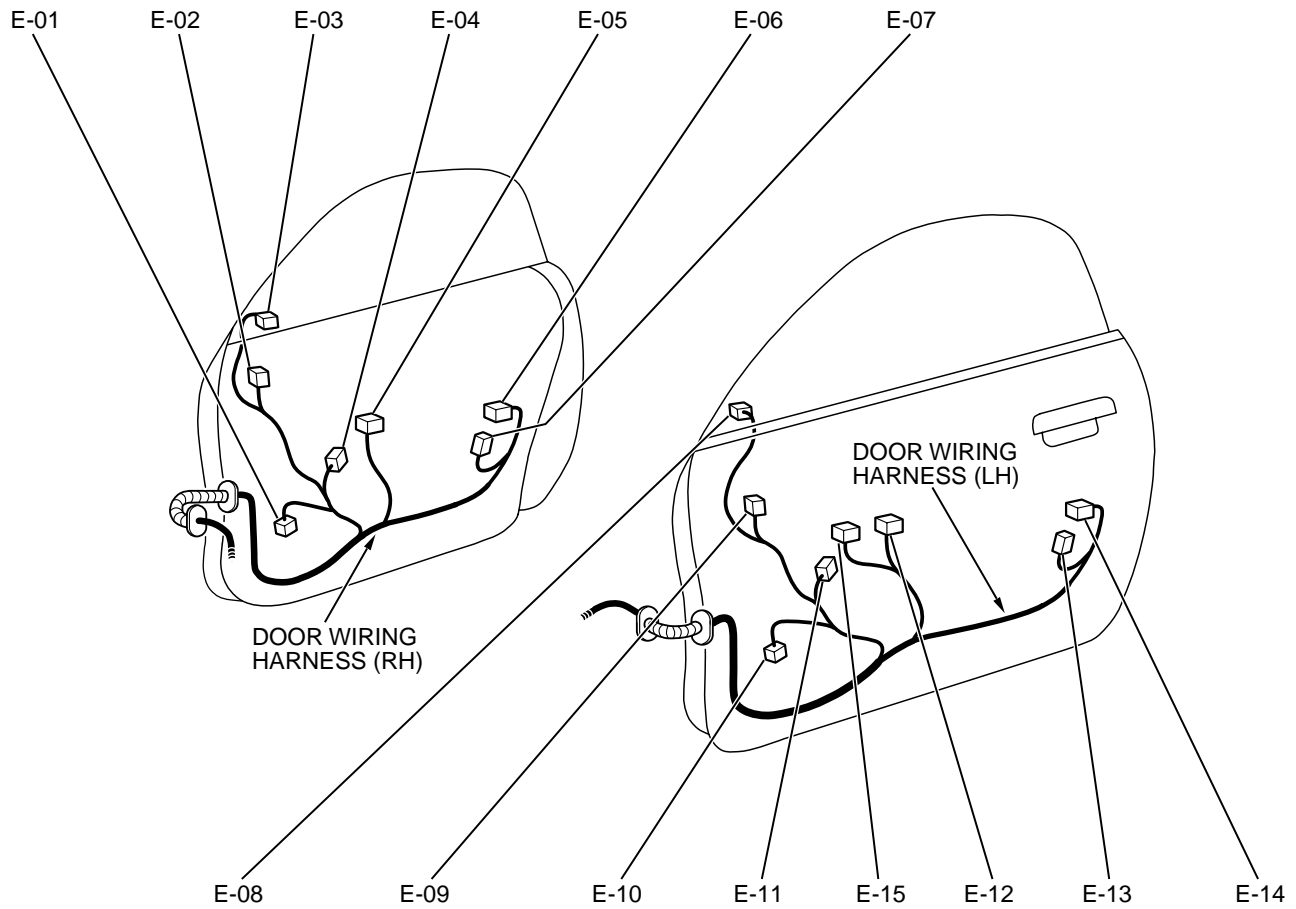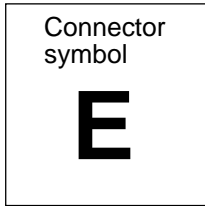


AC106120AB

- E-01 (2) DOOR SPEAKER (RH)
- E-02 (5) REMOTE CONTROLLED MIRROR (RH)
- E-03 (2) TWEETER (RH) <6, 7-SPEAKER SYSTEM>
- E-04 (2) POWER WINDOW MOTOR (RH)
- E-05 (8) POWER WINDOW SUB SWITCH
- E-06 (3-B) DOOR LOCK KEY CYLINDER SWITCH (RH)
- E-07 (6-B) DOOR LOCK ACTUATOR (RH)
- E-08 (2) TWEETER (LH) <6, 7-SPEAKER SYSTEM>

- E-09 (5) REMOTE CONTROLLED MIRROR (LH)
- E-10 (2) DOOR SPEAKER (LH)
- E-11 (2) POWER WINDOW MOTOR (LH)
- E-12 (10) POWER WINDOW MAIN SWITCH
- E-13 (6-B) DOOR LOCK ACTUATOR (LH)
- E-14 (3-B) DOOR LOCK KEY CYLINDER SWITCH (LH)
- E-15 (9) REMOTE CONTROLLED MIRROR SWITCH <ECLIPSE>

LUGGAGE COMPARTMENT <ECLIPSE>

M1801001500184


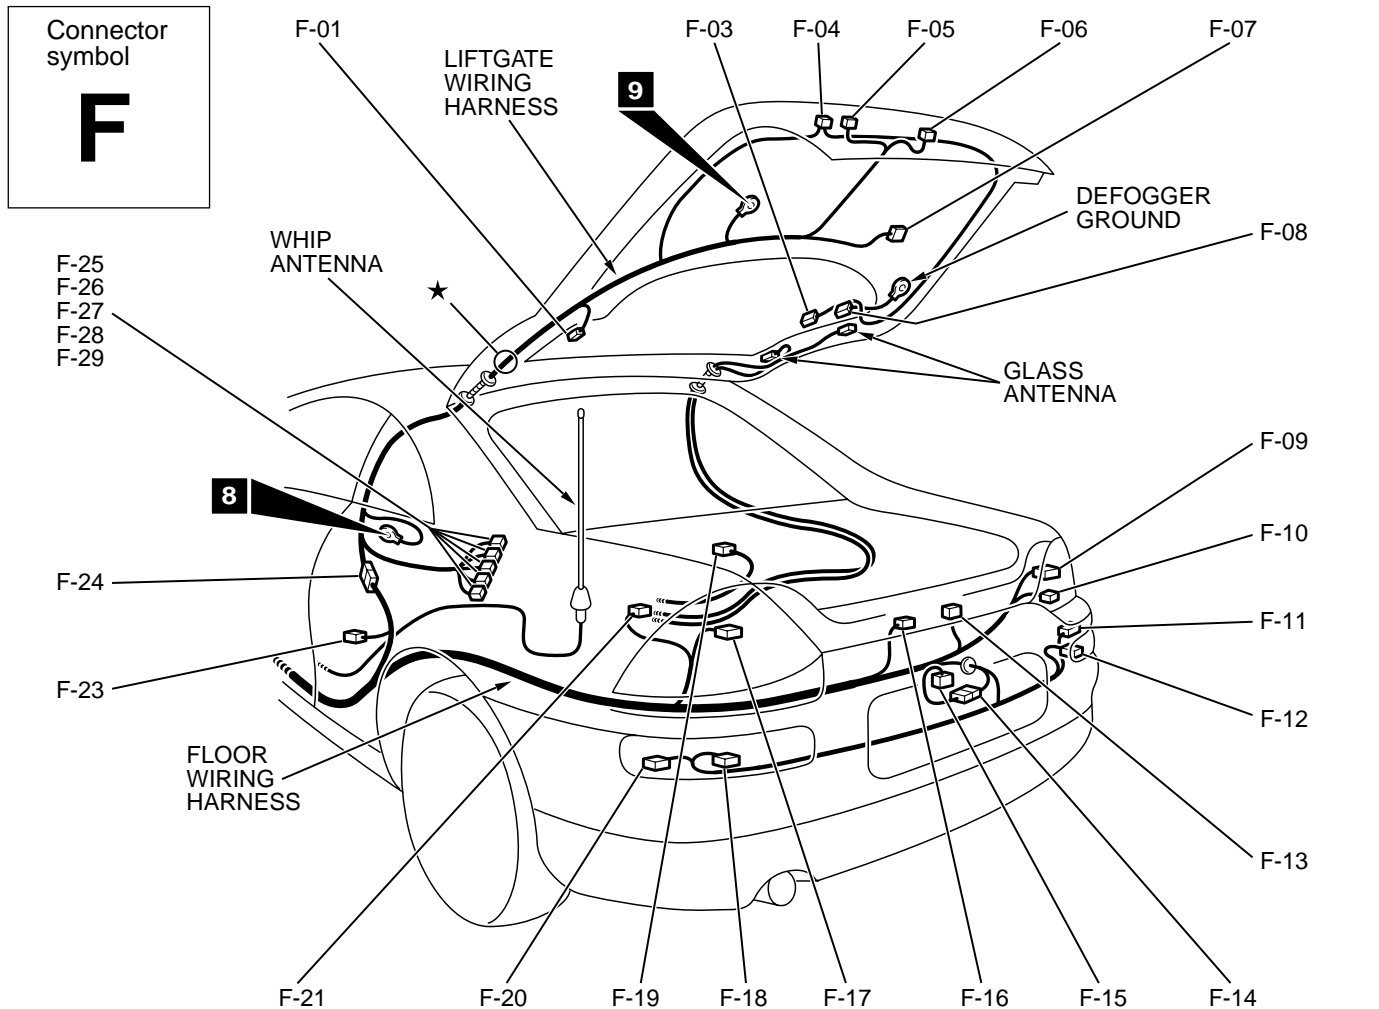


AC106121AB

F-01	(1-B)	DEFOGGER (+)	F-15	(2-GR)	LICENSE PLATE LIGHT
F-03	(1-B)	DEFOGGER (-) <GLASS ANTENNA>	F-16	(2-B)	LIFTGATE LATCH SWITCH <WITH THEFT-ALARM SYSTEM>
F-04	(2)	CHOKE COIL <GLASS ANTENNA>	F-17	(6)	REAR COMBINATION LIGHT (LH)
F-05	(1-B)	CHOKE COIL <GLASS ANTENNA>	F-18	(2-B)	BACKUP LIGHT (LH)
F-06	(2-GR)	HIGH MOUNTED STOPLIGHT	F-19	(2-B)	REAR SPEAKER (RH)
F-07	(3-B)	REAR WIPER MOTOR	F-20	(2-GR)	REAR SIDE MARKER LIGHT (LH)
F-08	(1-B)	DEFOGGER (-) <WHIP ANTENNA>	F-21	(2)	LUGGAGE COMPARTMENT LIGHT
F-09	(6)	REAR COMBINATION LIGHT (RH)	F-23	(2-B)	REAR SPEAKER (LH)
F-10	(2)	LIFTGATE LOCK KEY CYLINDER SWITCH <WITH THEFT-ALARM SYSTEM>	F-24	(6)	FLOOR WIRING HARNESS AND LIFTGATE WIRING HARNESS COMBINATION
F-11	(2-GR)	REAR SIDE MARKER LIGHT (RH)	F-25	(1-B)	CAPACITOR <GLASS ANTENNA>
F-12	(2)	BACKUP LIGHT (RH)	F-26	(1-B)	CAPACITOR <GLASS ANTENNA>
F-13	(1-B)	LIFTGATE LIGHT SWITCH <WITHOUT THEFT-ALARM SYSTEM>	F-27	(1-B)	CAPACITOR <GLASS ANTENNA>
F-14	(2-B)	FLOOR WIRING HARNESS AND REAR BUMPER WIRING HARNESS COMBINATION	F-28	(1-B)	CAPACITOR <GLASS ANTENNA>
			F-29	(1-B)	CAPACITOR <GLASS ANTENNA>

LUGGAGE COMPARTMENT <ECLIPSE SPYDER>

M1801001500195

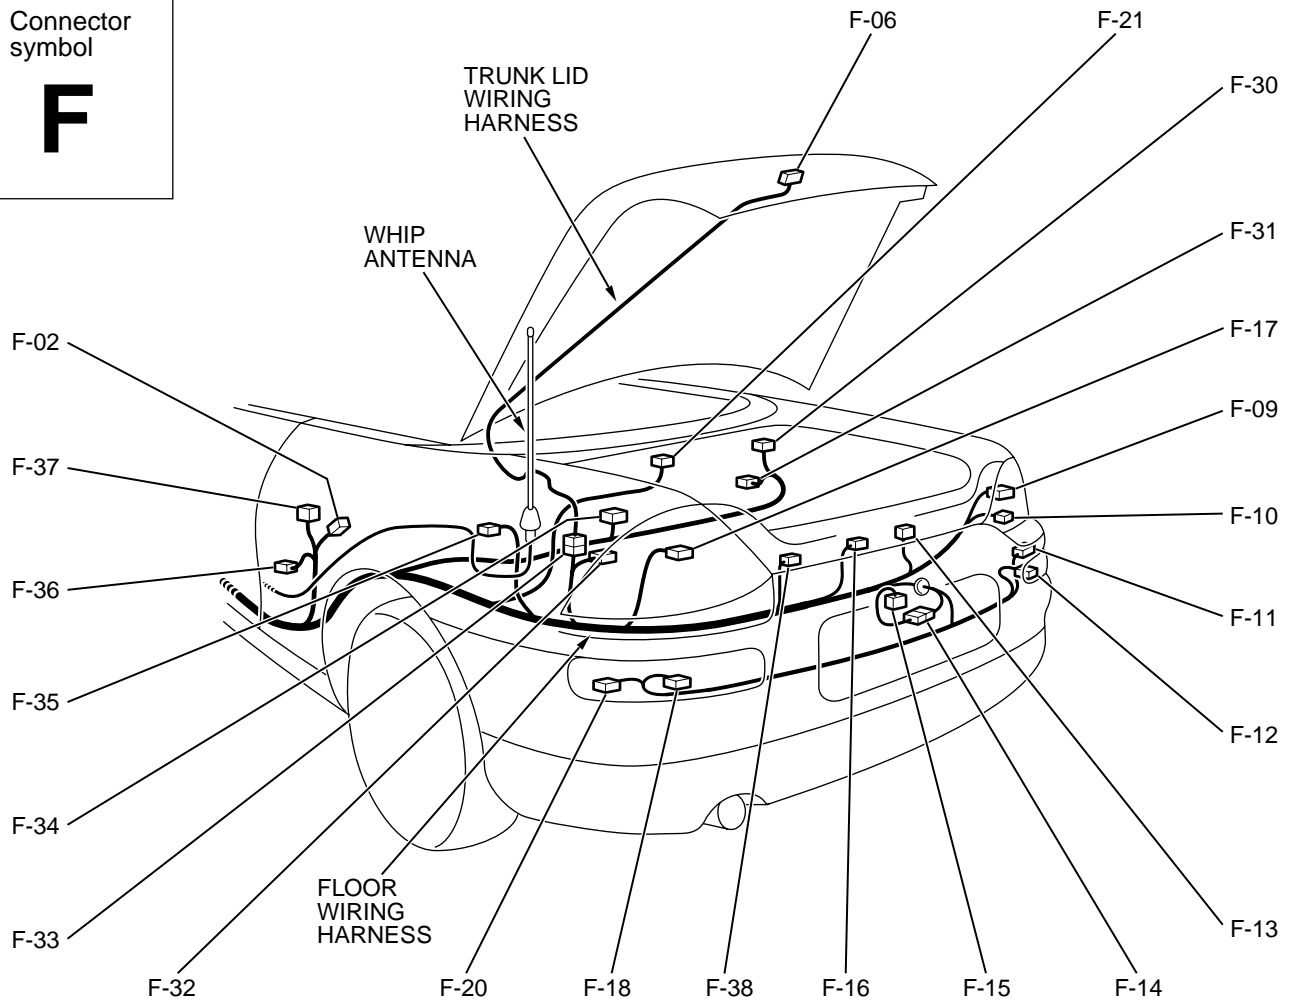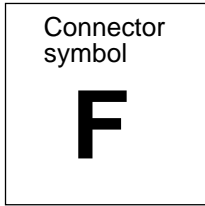

AC106122AB

F-02	(2)	DEFOGGER	F-20	(2-GR)	REAR SIDE MARKER LIGHT (LH)
F-06	(2-GR)	HIGH MOUNTED STOPLIGHT	F-21	(2)	TRUNK LIGHT
F-09	(6)	REAR COMBINATION LIGHT (RH)	F-30	(2)	TOPSTACK DRIVE MOTOR (RH)
F-10	(2)	TRUNK LID LOCK KEY CYLINDER SWITCH <WITH THEFT-ALARM SYSTEM>	F-31	(2)	POWER WINDOW MOTOR (QUARTER: RH)
F-11	(2-GR)	REAR SIDE MARKER LIGHT (RH)	F-32	(3)	CONVERTIBLE TOP BYPASS SWITCH
F-12	(2)	BACKUP LIGHT (RH)	F-33	(2)	FLOOR WIRING HARNESS AND TRUNK LID WIRING HARNESS COMBINATION
F-13	(1-B)	TRUNK LIGHT SWITCH <WITHOUT THEFT-ALARM SYSTEM>	F-34	(14)	CONVERTIBLE TOP CONTROL MODULE
F-14	(2-B)	FLOOR WIRING HARNESS AND REAR BUMPER WIRING HARNESS COMBINATION	F-35	(8)	MOTOR ANTENNA ASSEMBLY
F-15	(2-GR)	LICENSE PLATE LIGHT	F-36	(2)	POWER WINDOW MOTOR (QUARTER: LH)
F-16	(2-B)	TRUNK LID LATCH SWITCH <WITH THEFT-ALARM SYSTEM>	F-37	(2)	TOPSTACK DRIVE MOTOR (LH)
F-17	(6)	REAR COMBINATION LIGHT (LH)	F-38	(2)	TRUNK LID OPENER ACTUATOR
F-18	(2-B)	BACKUP LIGHT (LH)			