

Manual Despiece Suzuki LT 80 mod 1996 - 2001

Telefono 011 15 26408612




Email manuales_motos@outlook.com


Pagina web: <http://www.motosmanuales.com.ar>

 **+549 11 2640 8612**






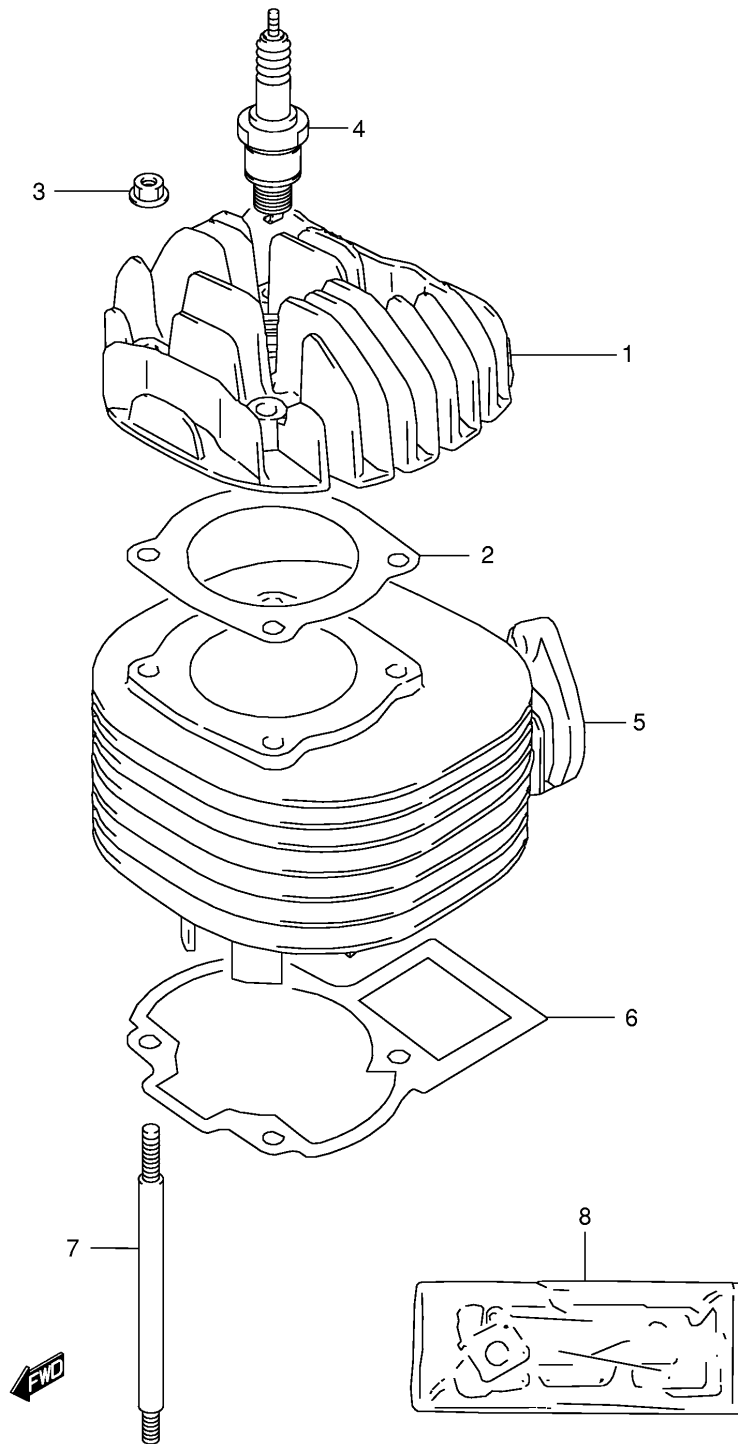

Ref No	Part No	Description
1	11111-40B00	Head, Cylinder
2	11141-07910	Gasket, Cylinder Head
3	08316-10063	Nut
4	09482-00255	Spark Plug (ngk,bpr7hs)
4	09482-00244-111	Spark Plug (nd,w22fpr)
5	11210-40B01	Cylinder
6	11241-40B10	Gasket, Cylinder
7	01421-06958	Stud Bolt
8	11401-40885	Gasket Set

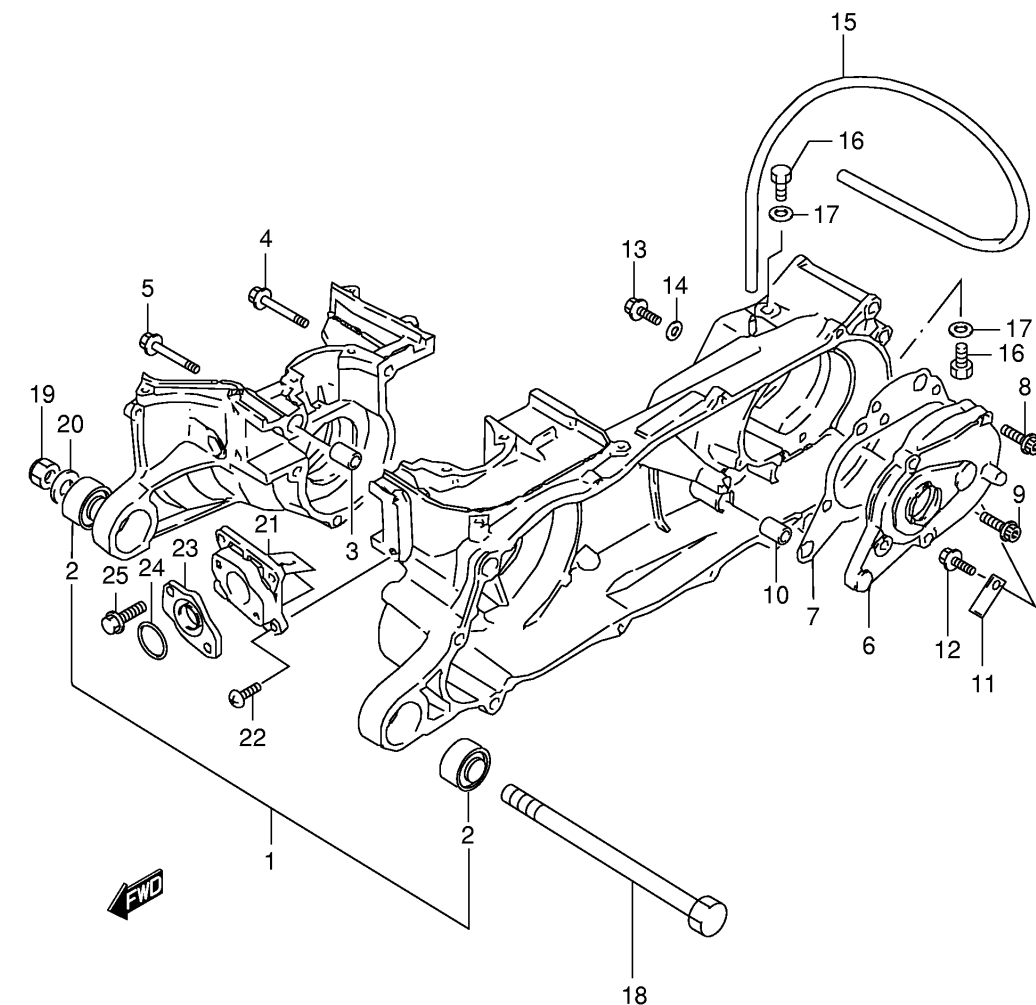


Ref No	Part No	Description
1	11301-40821	Crankcase Set
2	09319-14005	. Bush
3	04211-13189	. Pin
4	01547-06403	. Bolt
5	01547-06653	. Bolt
6	11430-29811	Cover, Gear Box
7	11484-29A20	Gasket, Gear Box Cover
8	07120-06253	Bolt
9	07120-06303	Bolt
10	04211-11189	Pin
10	04211-11169	Pin
11	11393-29A01	Magnet, Gear Box
11	11393-20E00	Magnet, Gear Box
12	01570-06123	Bolt
13	01550-06123	Plug, Oil Level
13	09128-06044	Plug, Oil Level
14	09168-06004	Gasket
15	09352-50823-600	Hose, Breather (5x8.2x600)
16	01550-08163	Plug, Oil Filler/drain
17	09168-08008	Gasket (8.2x14x1)
18	61211-40B01	Bolt, Engine Mounting (l:216)
19	08319-21148	Nut
20	09160-14027	Washer
21	13150-40B00	Valve Assy, Reed
22	02112-06163	Screw
23	13129-40B00	Insulator, Carburetor
24	09280-22002	O Ring (d:1.5,id:22.5)
25	09128-06071	Screw

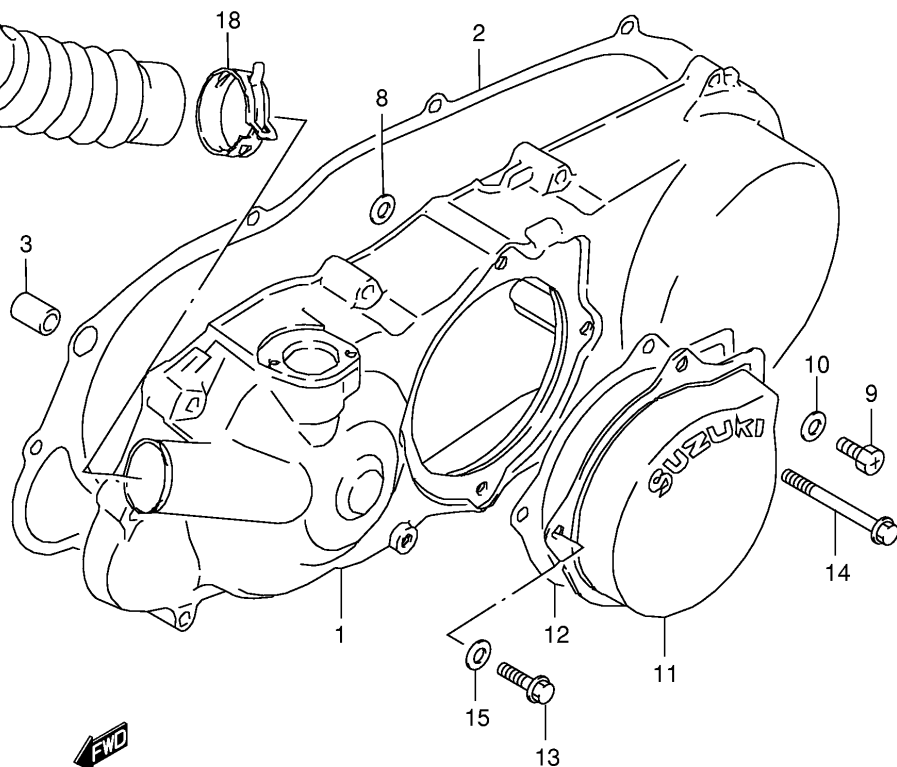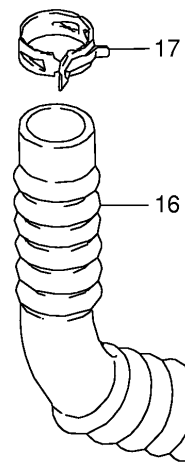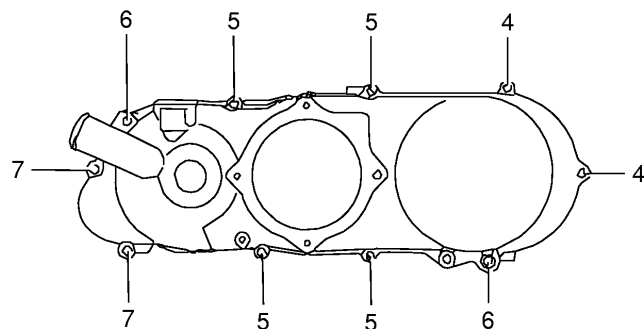


Ref No	Part No	Description
1	11341-40B01	Cover, Clutch
2	11482-40B10	Gasket, Clutch Cover
3	04211-13189	Pin
4	07120-06253	Bolt
5	07120-06353	Bolt
6	07120-06453	Bolt
7	01547-06953	Bolt
8	09168-07001	Gasket (7x15x0.6)
9	09128-08004	Screw, Water Drain (8x12)
10	09168-08008	Gasket
11	18110-40B00	Case, Recoil Starter
12	18299-40B01	Gasket, Recoil Starter
13	01547-06123	Bolt
14	01547-06553	Bolt
15	09168-06024	Gasket
16	17161-40B01	Duct, Belt Cooling, In
17	09401-30404	Clip
18	09401-33401	Clip



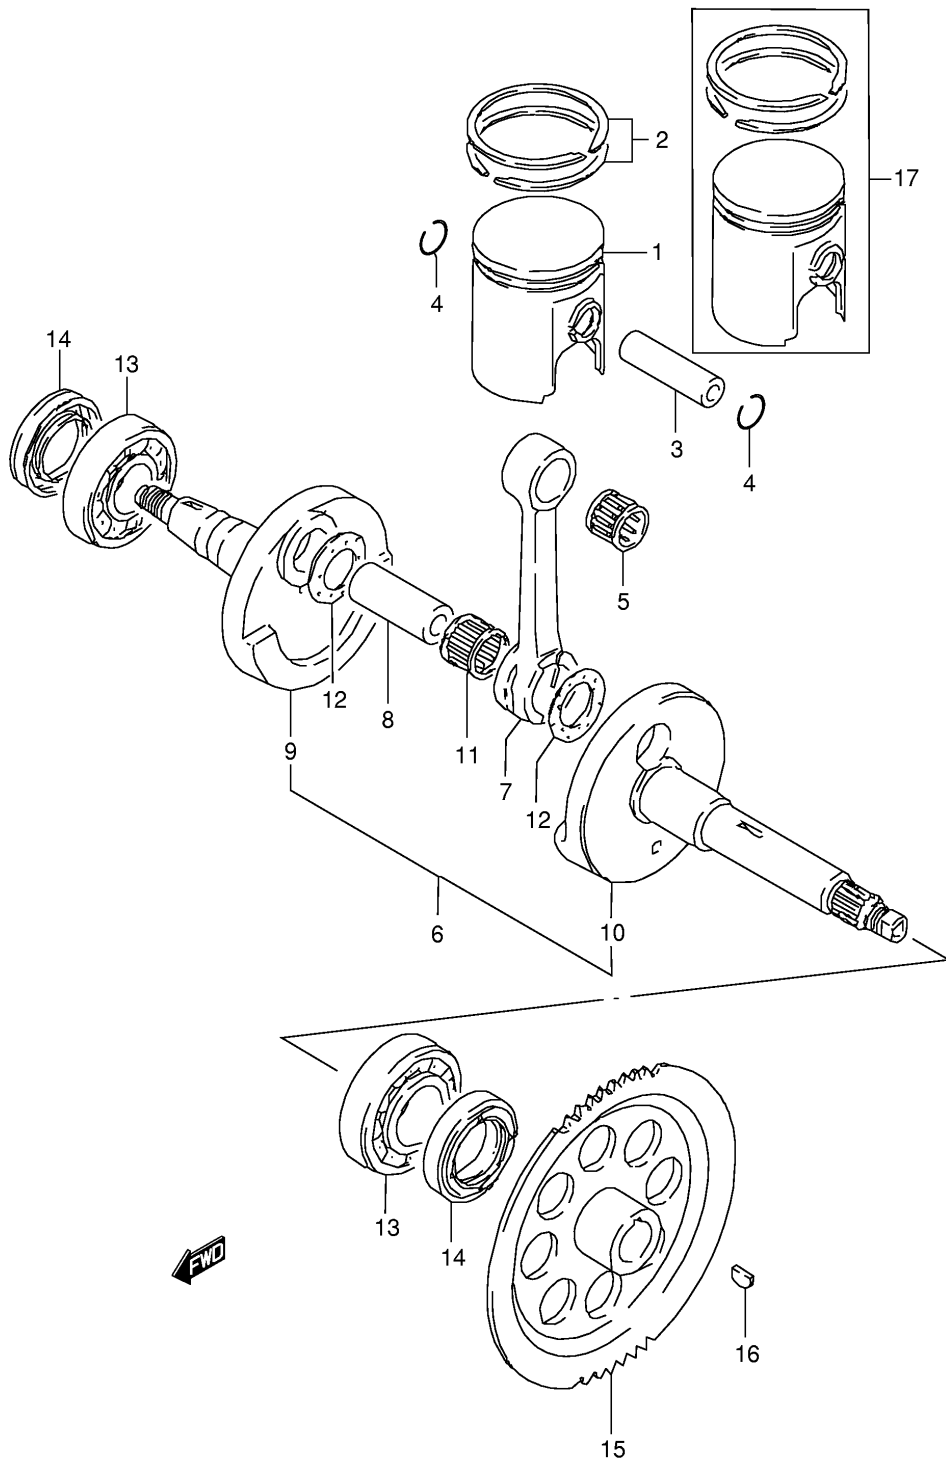


Ref No	Part No	Description
1	12110-40B01-0F0	Piston
2	12140-40B30	Ring Set, Piston (std)
2	12140-40B30-050	Ring Set, Piston (os:0.5)
2	12140-40B30-100	Ring Set, Piston (os:1.0)
3	12151-35400	Pin, Piston
4	09381-12001	Circlip
5	09263-12023	Bearing, Piston Pin
6	12200-40B02	Crankshaft Assy
7	12161-07901	• Rod, Connecting
8	12211-07902	• Pin, Crank
9	12221-29A00	• Crankshaft, Rh
10	12261-40B01-0A0	• Crankshaft, Lh
11	09263-17022	• Bearing (17x23x14)
12	09160-17022	• Washer
13	09262-20121	Bearing, Crankshaft
14	09283-20034	Oil Seal (20x37x8)
15	12620-29A11	Gear, Starter (nt:67)
16	08341-31039	Key
17	12100-40B00-050	Piston Set (os:0.5)
17	12100-40B00-100	Piston Set (os:1.0)

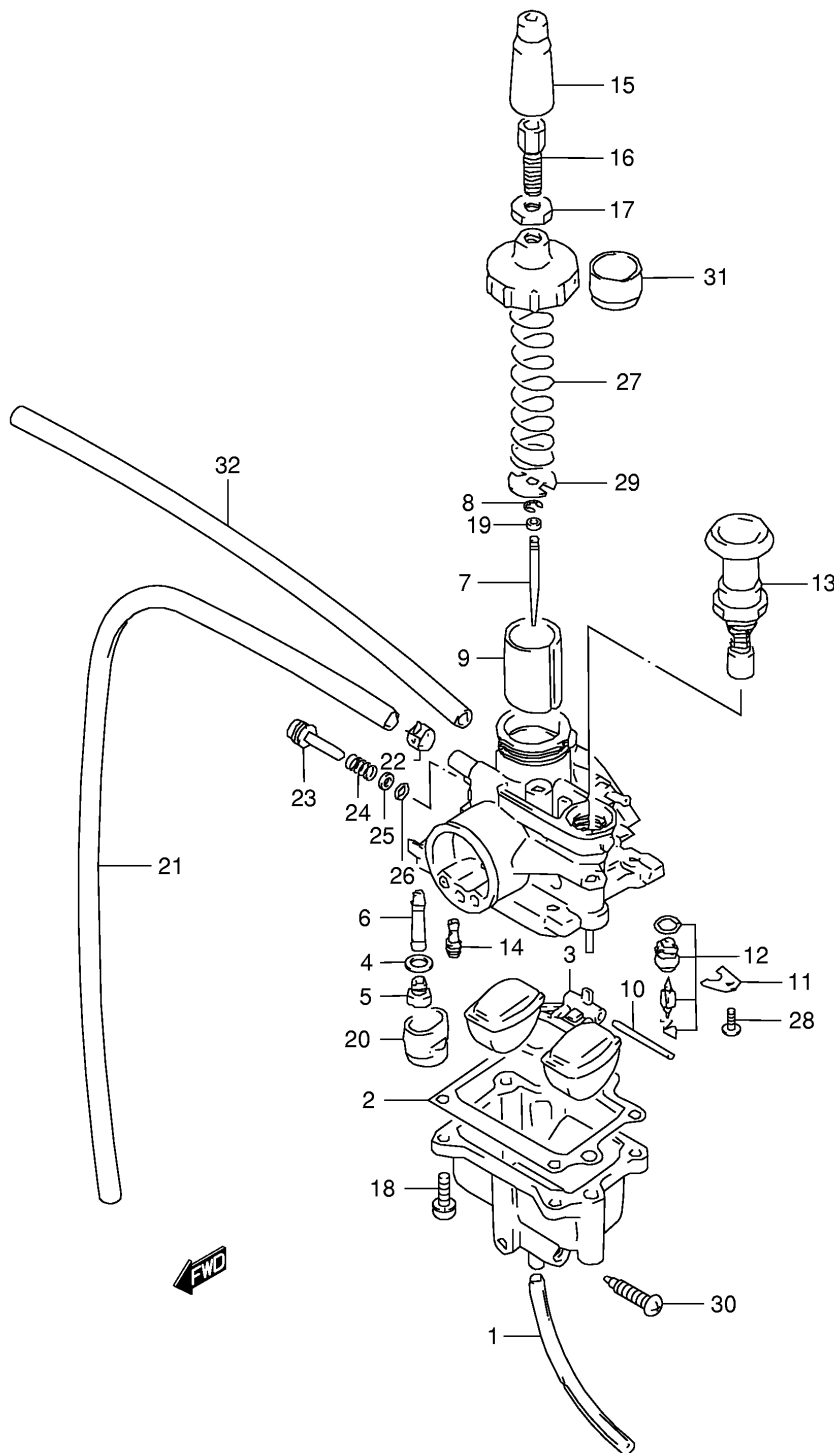


Ref No	Part No	Description
1	13200-40B10	Carburetor Assy
2	09351-30503-600	. Hose, Over Flow (3x5x600)
3	13258-02100	. Gasket
4	13250-16A00	. Float
5	13386-04700	. Gasket
6	09491-92004	. Jet, Main (92.5)
7	09494-00553	. Jet, Needle (e-0)
8	13383-46B00	. Needle, Jet (3j17-2)
9	13394-40D00	. E Ring
10	13551-40B00	. Valve, Piston (ca:2.5)
11	13254-20010	. Pin, Float
12	13373-46710	. Plate
13	13370-03A20	. Valve Assy, Needle
14	13411-40B00	. Plunger Assy
15	09492-20008	. Jet, Pilot (20)
16	13681-33010	. Cap
17	13577-22600	. Adjuster, Cable
18	13661-16600	. Nut
19	13601-04148	. Screw
20	13382-47010	. Gasket
21	13697-40B00	. Cap
22	09351-35653-600	. Hose (3.5x6.5x600)
23	13698-40B00	. Clip
24	13483-16A01	. Adjuster
25	13268-35010	. Spring
26	13291-35010	. Washer
27	13295-33010	. O Ring
28	13573-98500	. Spring
29	02112-03063	. Screw
30	13447-30A00	. Plate
31	13247-02340	. Screw, Drain
32	13331-40B00	. Ring
	09355-45855-600	Hose, Vacuum (4.5x8.5x600)


Ref No	Part No	Description
--------	---------	-------------

1	13700-40B00	Cleaner Assy, Air
2	13780-40B00	• Filter
3	13784-40B00	• Filter, Sub
4	13791-40B00	• Holder, Filter
5	02142-05123	• Screw
6	13792-13A01	• Washer
7	13881-40B00	• Tube, Outlet
8	09402-36306	• Clamp
9	09402-92207	• Clamp
10	13870-21308	• Tube, Drain
11	09401-13417	• Clip
12	09401-11410	• Clip
13	01570-06123	Bolt
14	09136-06009	Screw (6x20)

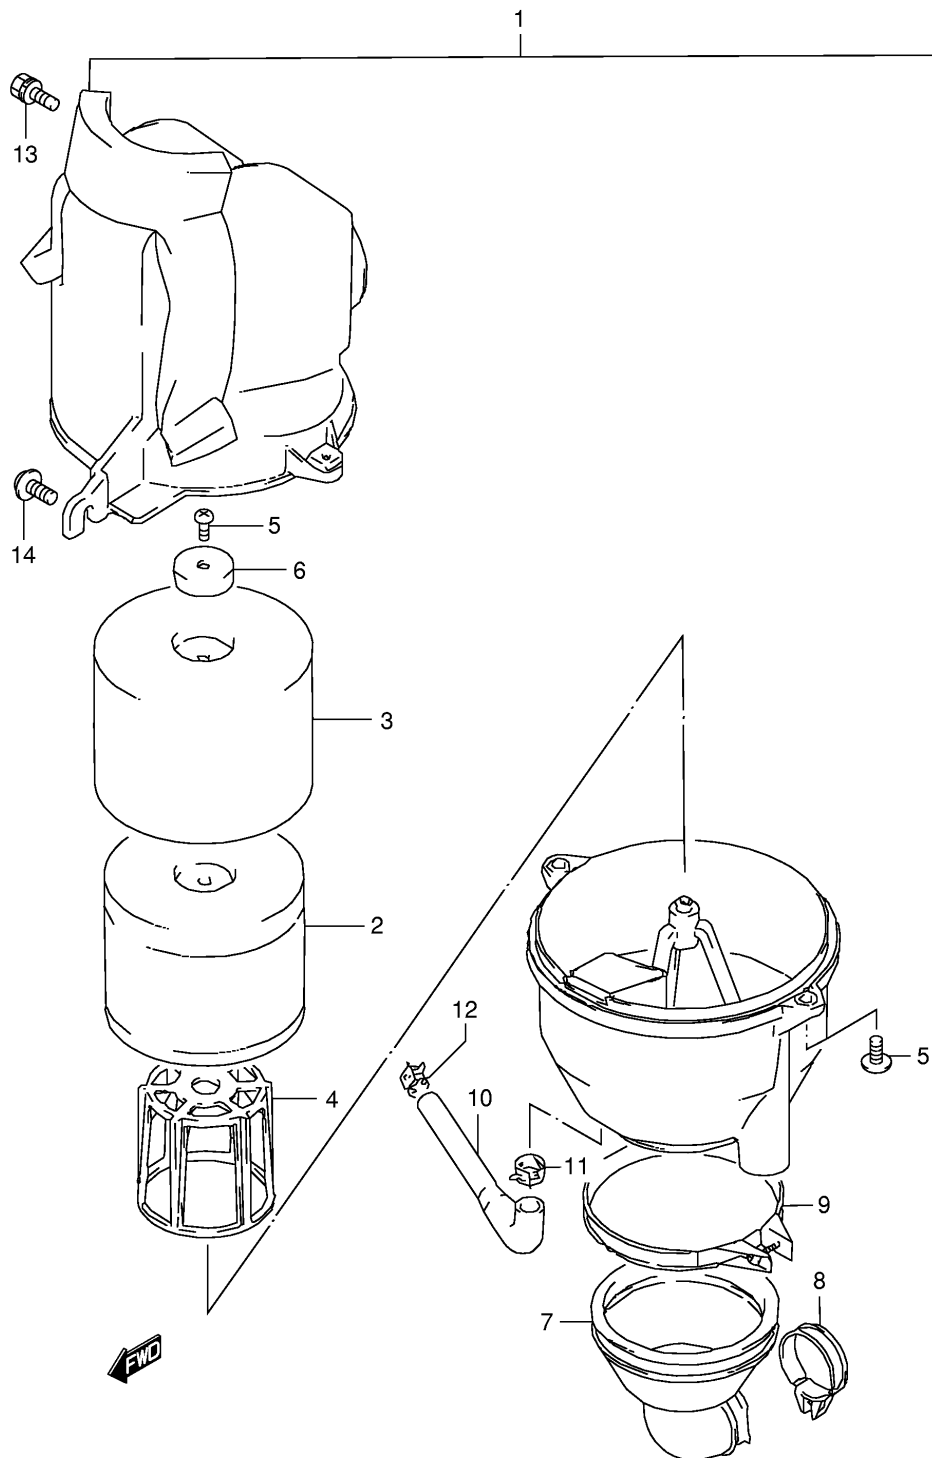


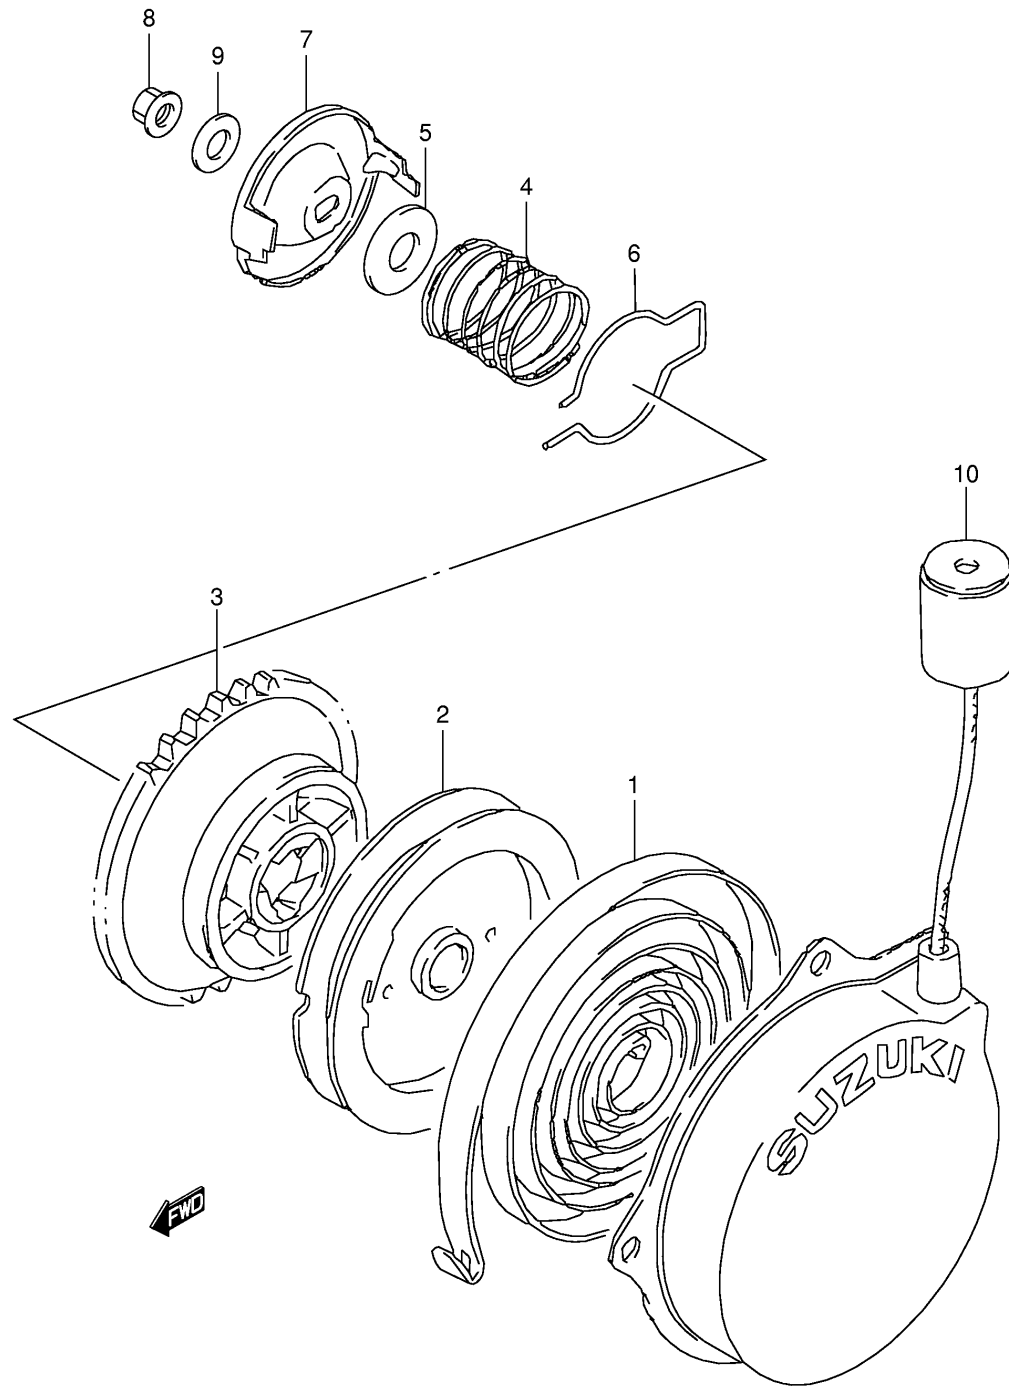


Ref No	Part No	Description
1	18100-40B02	Starter Assy, Recoil
2	18142-40B00	. Spring, Spiral
3	18121-40B01	. Reel
4	18131-40B00	. Gear
5	18161-40B00	. Spring, Return
6	09160-10129	. Washer (10.5x28x1.6)
7	18153-40B00	. Spring, Friction
8	18151-40B00	. Retainer
9	18334-40B00	. Nut
10	09160-08059	. Washer
	18200-40B00	. Rope Assy

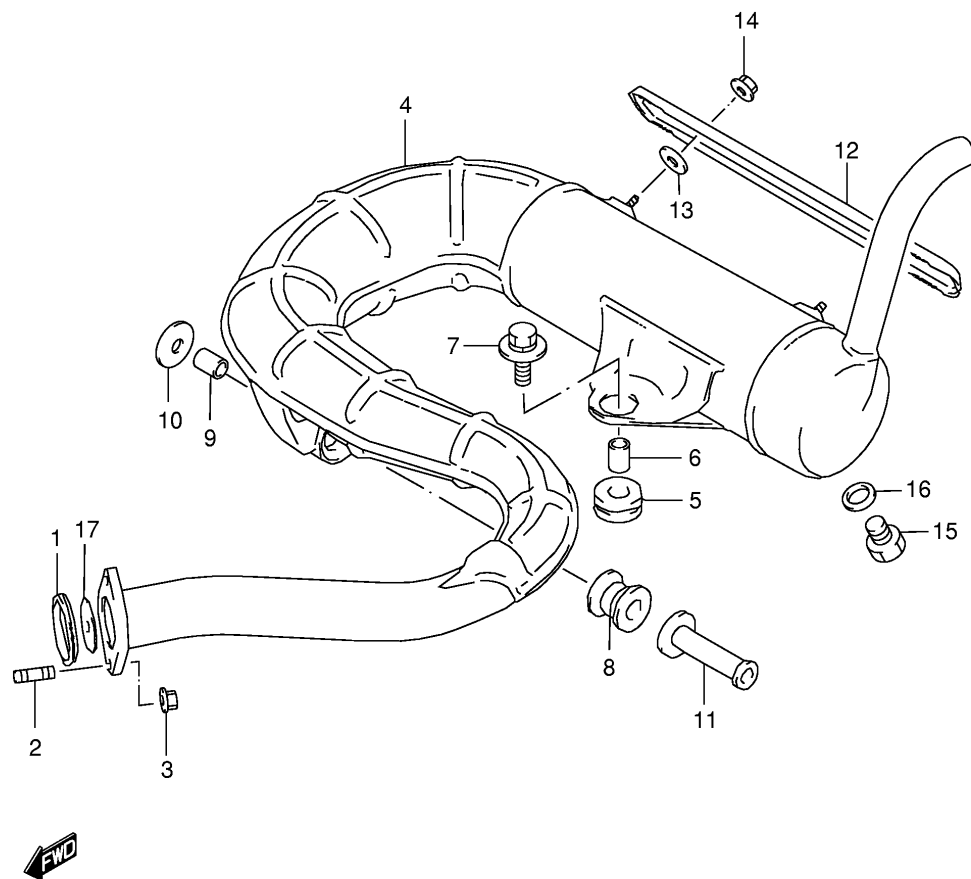


Ref No	Part No	Description
1	14181-23E00	Gasket, Exhaust Pipe
2	01421-06168	Stud Bolt (white)
3	08361-15063	Nut
4	14310-40B20	Body, Muffler
5	09320-13007	Cushion
6	09180-08202	Spacer (8.5x14x14)
7	09118-08080	Bolt (8x35)
8	09320-12033	Cushion
9	09180-08194	Spacer (8.5x12x17.5)
10	09160-08137	Washer (8.5x28x3.2)
11	14770-40B00	Spacer, Muffler Support
12	14780-40B01	Cover, Muffler
13	09168-06122	Gasket
14	08319-31063	Nut
15	09247-12104	Plug, Muffler Drain
16	09168-12002	Gasket
17	14159-40B00	Plate, Exhaust Pipe

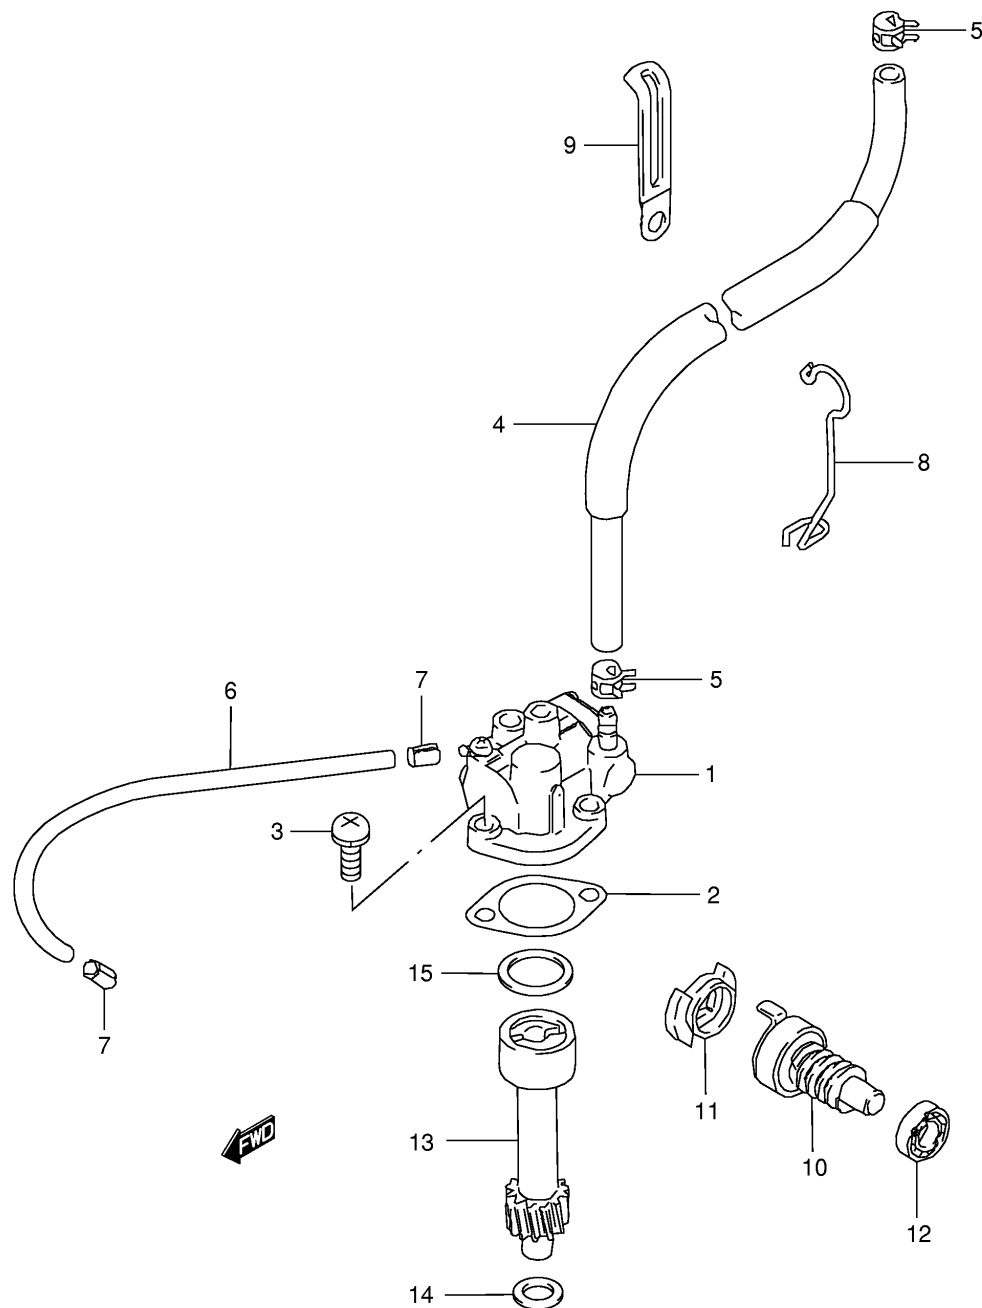


Ref No	Part No	Description
1	16100-40B02	Pump Assy, Oil
2	16731-02300	Gasket, Oil Pump
3	02112-35163	Screw
3	07130-05163	Screw
4	16810-40B00	Hose
5	09401-08411	Clip
6	09352-20503-600	Hose (2x5x600)
7	09401-04401	Clip
8	09403-13306	Clamp, Oil Hose
9	09404-06432	Clamp
10	16320-03A02	Gear, Oil Pump Drive
11	16391-03A02	Piece, Oil Pump Drive
12	09262-08008	Bearing (8x22x7)
13	16331-11B00	Gear, Oil Pump Driven (nt:13)
14	08211-08121	Washer
14	09181-08111	Washer (8x12x1)
15	08211-15201	Thrust Washer
15	09181-15111	Thrust Washer

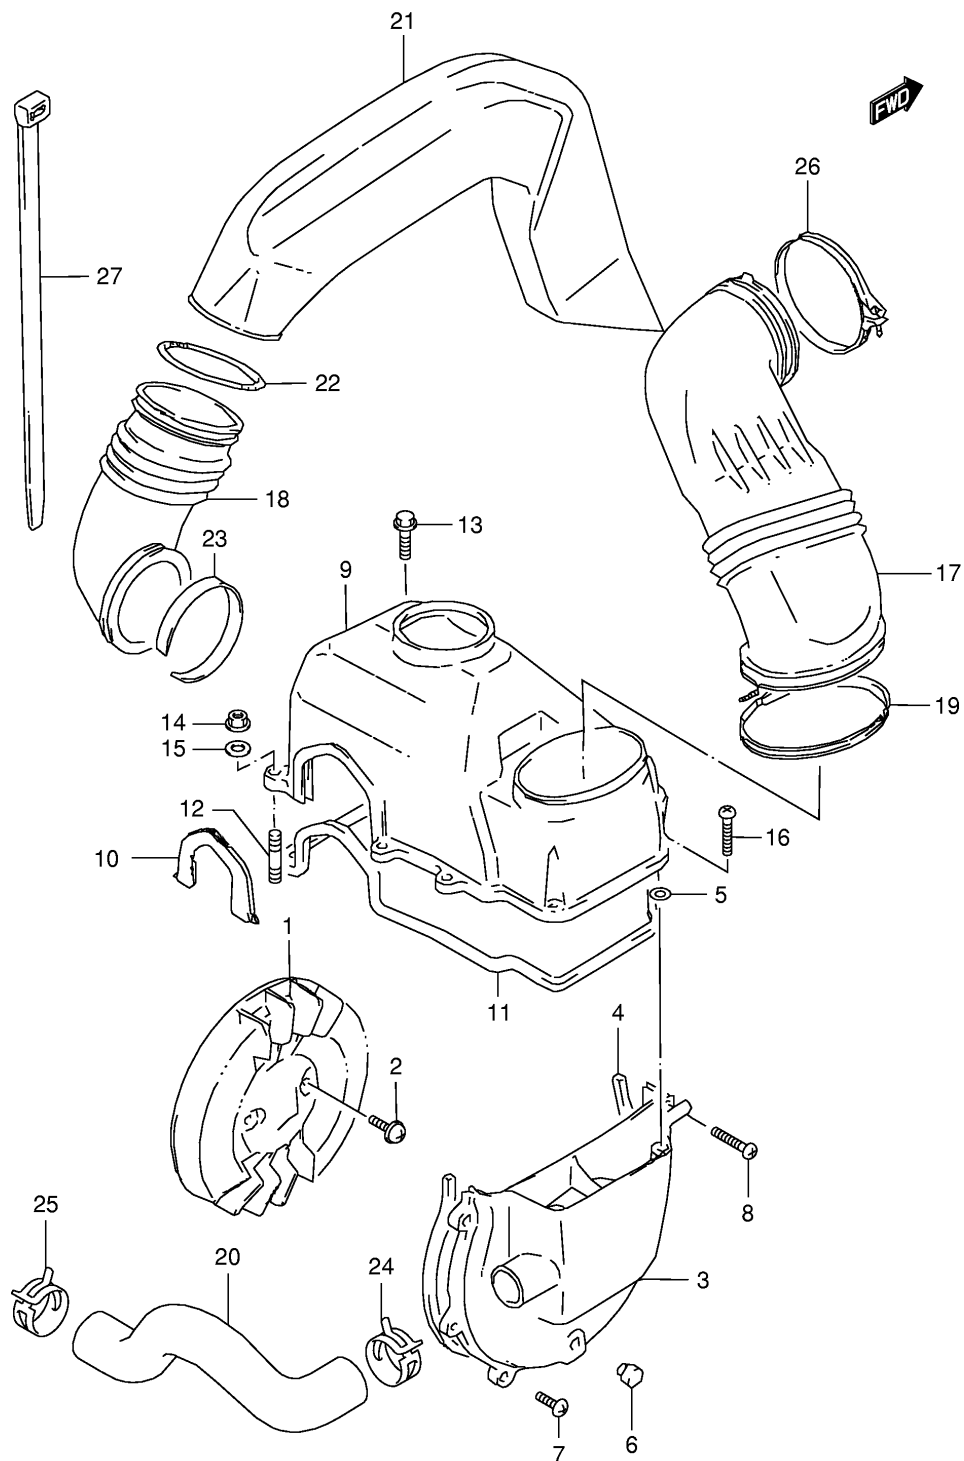


Ref No	Part No	Description
1	17110-40B00	Fan, Cooling
2	02112-16123	Screw
3	17121-40B20	Cover, Cooling Fan
4	17132-40B00	Gasket
5	17125-40B00	Gasket
6	17124-40B00	Plug, Drain
7	02142-06163	Screw
8	02142-06253	Screw (6x25)
9	17131-40B20	Cowling, Cylinder
10	17140-40B00	Seal
11	17132-40B00	Gasket
12	01421-06208	Stud Bolt
13	01550-06163	Bolt
14	08319-31067	Nut
15	08211-06121	Washer
15	08322-01063	Washer
16	03541-04353	Screw
16	03541-04253	Screw
17	17151-40B01	Duct, Cylinder Cooling In
18	17181-40B01	Duct, Cylinder Cooling Out
19	17155-40B00	Clamp
20	17171-40B01	Duct, Belt Cooling Out
21	17183-40B00	Duct, Cylinder Cooling Out
22	13826-38300	Clamp
23	17182-40B00	Ring
24	09401-30404	Clip
25	09401-33401	Clip
26	09402-82202	Clamp
27	09407-38401	Clamp (I:386)

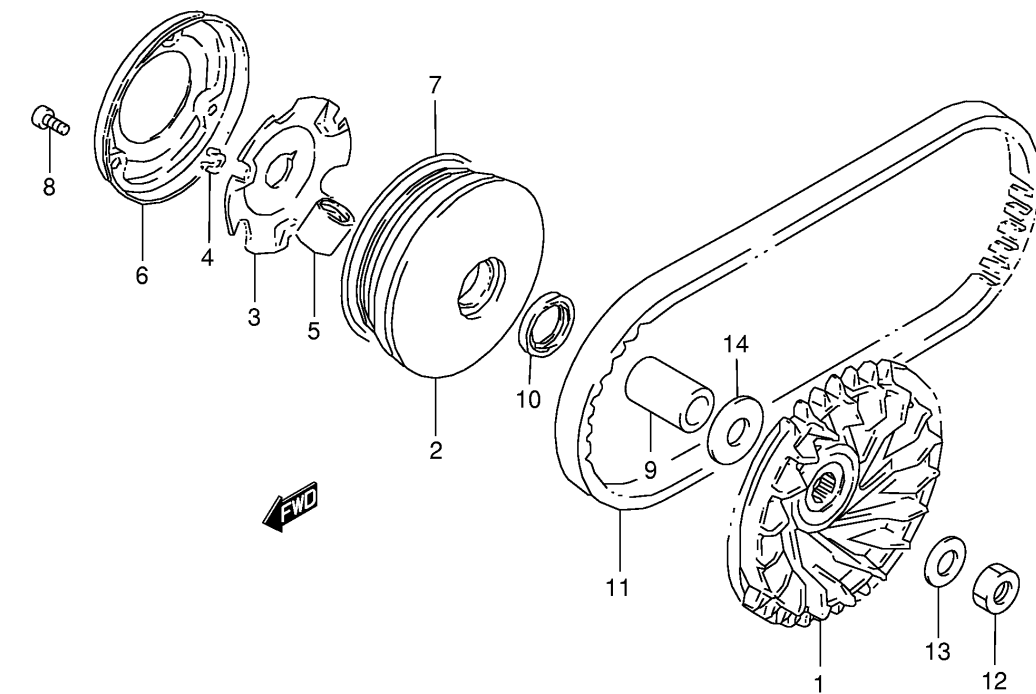


Ref No	Part No	Description
1	21110-40B02	Face, Fixed Drive
2	21120-29A01	Face, Movable Drive
3	21431-29A00	Plate, Movable Drive Face
4	21481-29A01	Damper
5	21650-29A20	Roller, Movable Drive Face
6	21122-03A01	Cover
7	09280-85003	O Ring (d:3.1,id:84.4)
8	02142-05103	Screw
9	09180-16046	Spacer (16x22x32.33)
10	09283-22018	Oil Seal (22x30x4)
11	27601-40B01	V Belt
12	09140-12037	Nut
13	09164-12020	Washer
14	09160-14063	Washer (14.5x32x3)

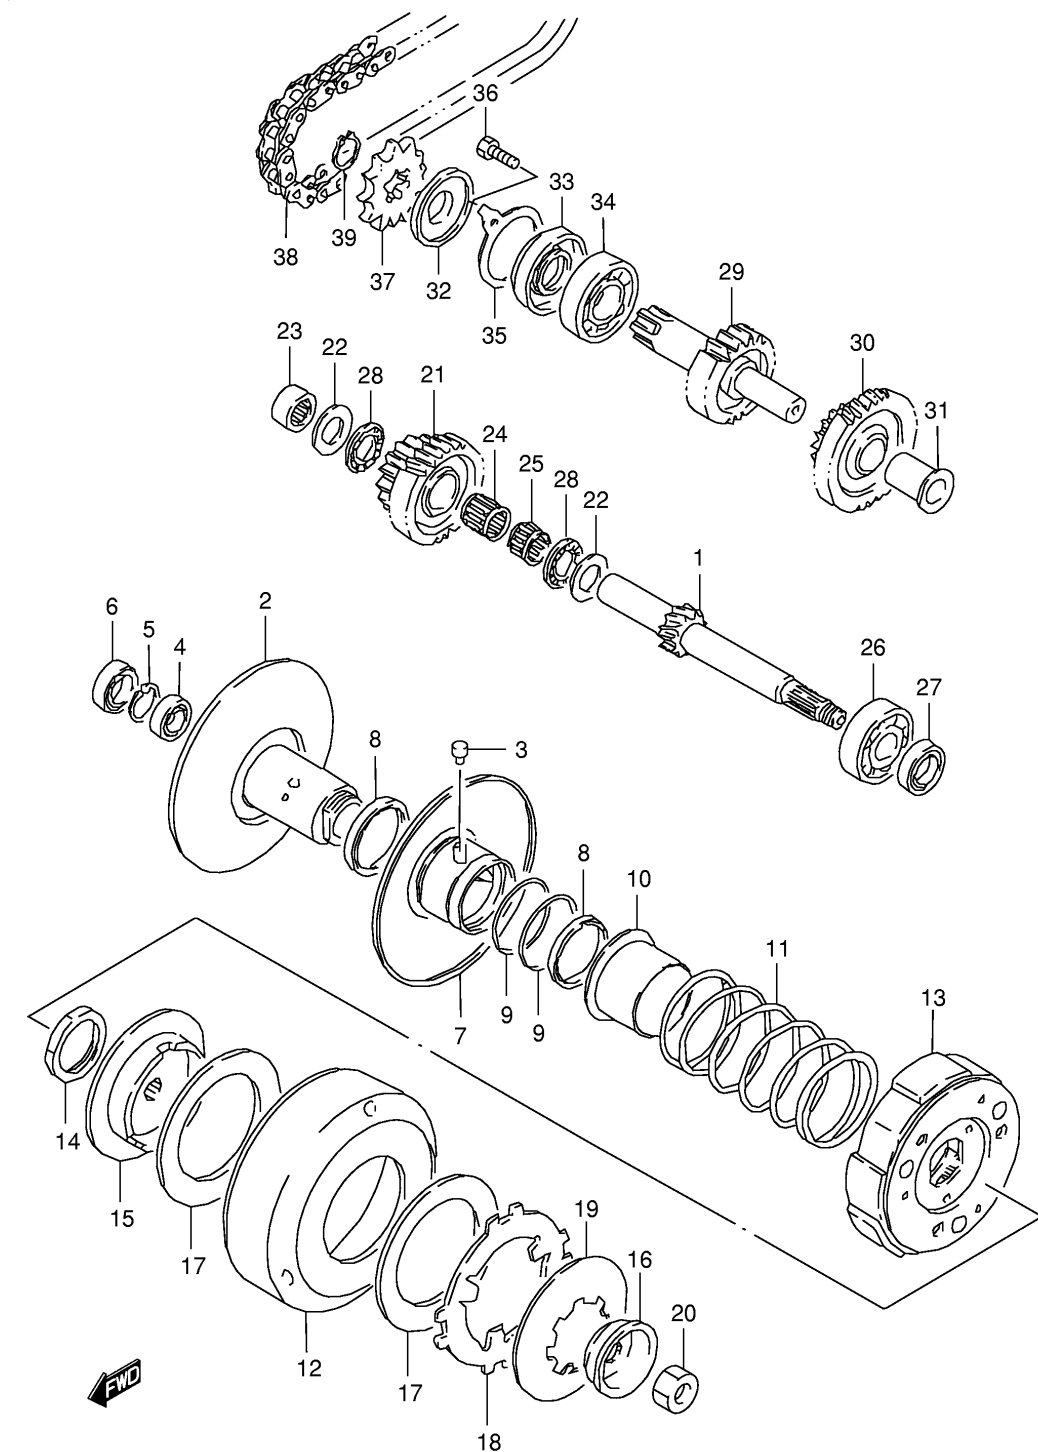

Ref No	Part No	Description
1	24131-29A03	Counter Shaft (nt:12)
2	21210-03A21	Face, Fixed Driven
3	09201-06005	Pin
4	09262-12014	Bearing (12x24x6)
5	08331-41246	Circlip
6	09262-15018	Bearing (15x28x7)
7	21240-40B00	Face, Movable Driven
8	09283-34007	Oil Seal (34x41x4)
9	09280-41005	O Ring
10	21471-03A03	Sleeve, Movable Driven Face
11	09440-46005	Spring
12	21220-29A01	Housing, Clutch
13	21501-03A21	Clutch Assy
14	09152-28001	Nut
15	21411-29A01	Hub, Limiter Clutch
16	21412-29A00	Stopper, Limiter Clutch
17	21441-29A01	Plate, Friction
18	21461-29A01	Plate, Pressure
19	09164-30003	Spring
20	09140-10035	Nut
21	24271-40B01	Gear, Final Drive (nt:27/14)
22	09181-15223	Thrust Washer (15x28x1)
23	09263-15009	Bearing, Cntr Shaft,r
24	09263-15035	Bearing, Final Drive,r
25	09263-15038	Bearing, Final Drive,l
26	09262-15027	Bearing, Cntr Shaft,l
27	09283-15003	Oil Seal, Cntr, L Oil
28	09263-15003	Bearing, Final Drive,r
29	24141-40B00	Shaft, Drive (nt:19)
30	24290-29A00	Gear, Idler Drive No.2
31	09301-15002	Bush
32	24142-40B00	Oil Seal
33	09283-20047	Oil Seal (20x47x12)
34	09262-20069	Bearing (20x47x14)
34	09262-20019	Bearing (20x47x14)
35	24751-40B00	Retainer
36	01500-06163	Screw
37	27511-40B10	Sprocket, Engine (nt:10)
38	27600-34A40-036	Chain Assy (rk 520smx36le)
39	09380-20009	Circlip

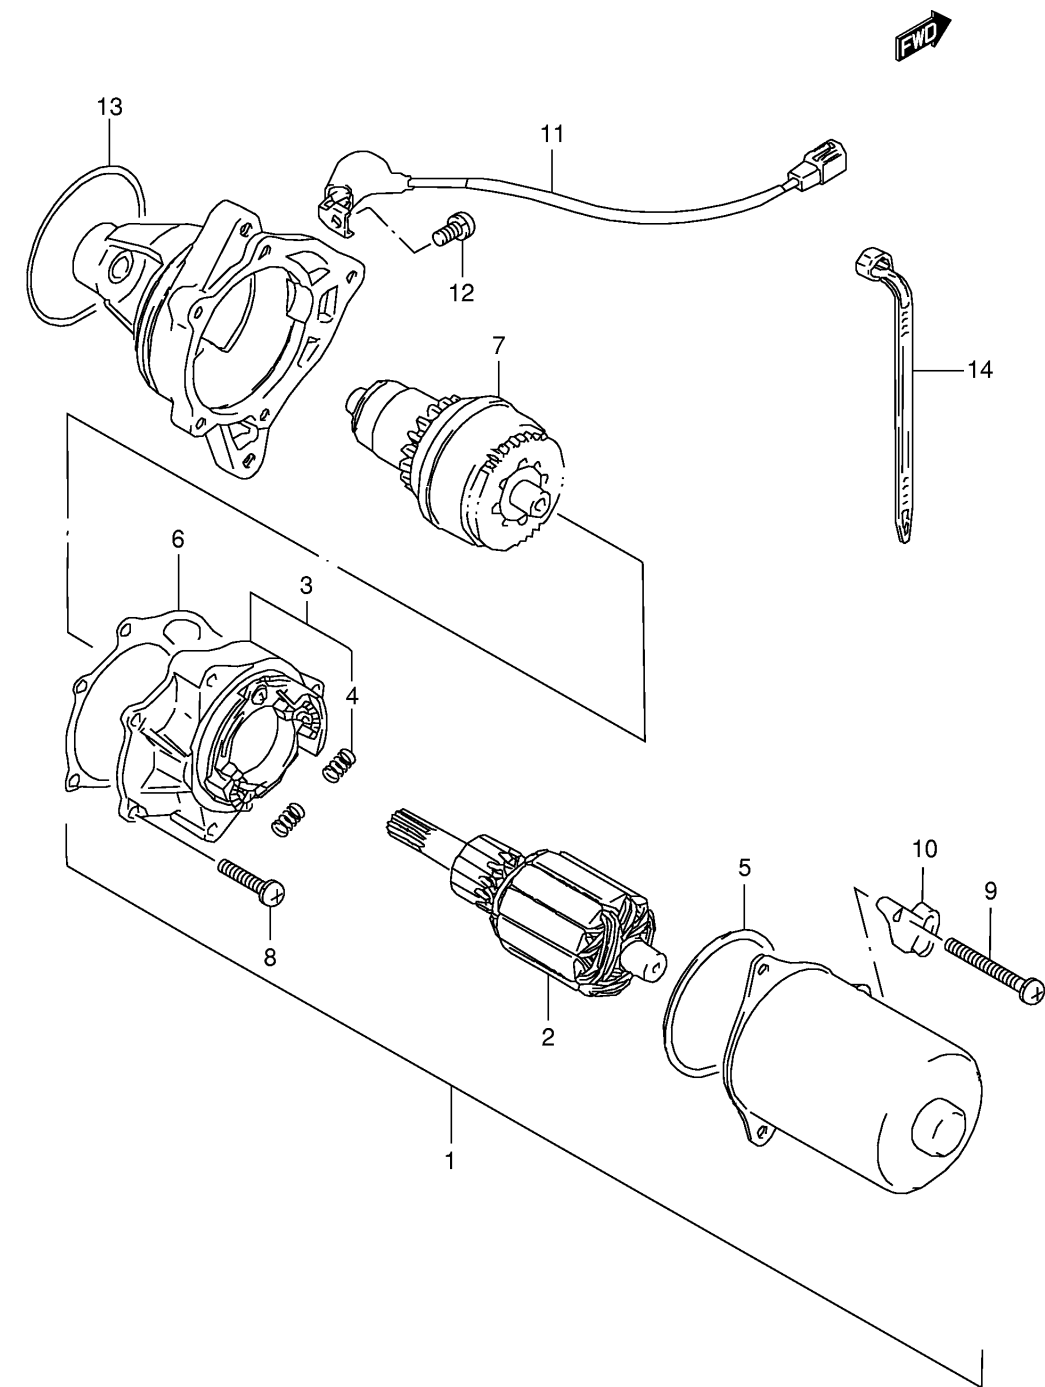


Ref No	Part No	Description
1	31100-40B01	Motor Assy, Starting
2	31311-40B01	• . Armature
3	31130-40B01	• . Holder Set, Brush
4	31135-03A00	• . Spring
5	31157-03A00	• . Gasket
6	31158-40B01	• . Gasket
7	31370-40B00	• . Gear Assy, Pinion
8	02112-04123	• . Screw
9	02112-34303	• . Screw
10	31154-11B00	• . Clamp, Lead Wire
11	31142-40B00	• . Lead Wire
12	02112-34063	• . Screw
13	31156-02100	• . O Ring
14	09407-14403	Clamp, Lead Wire (l:125)

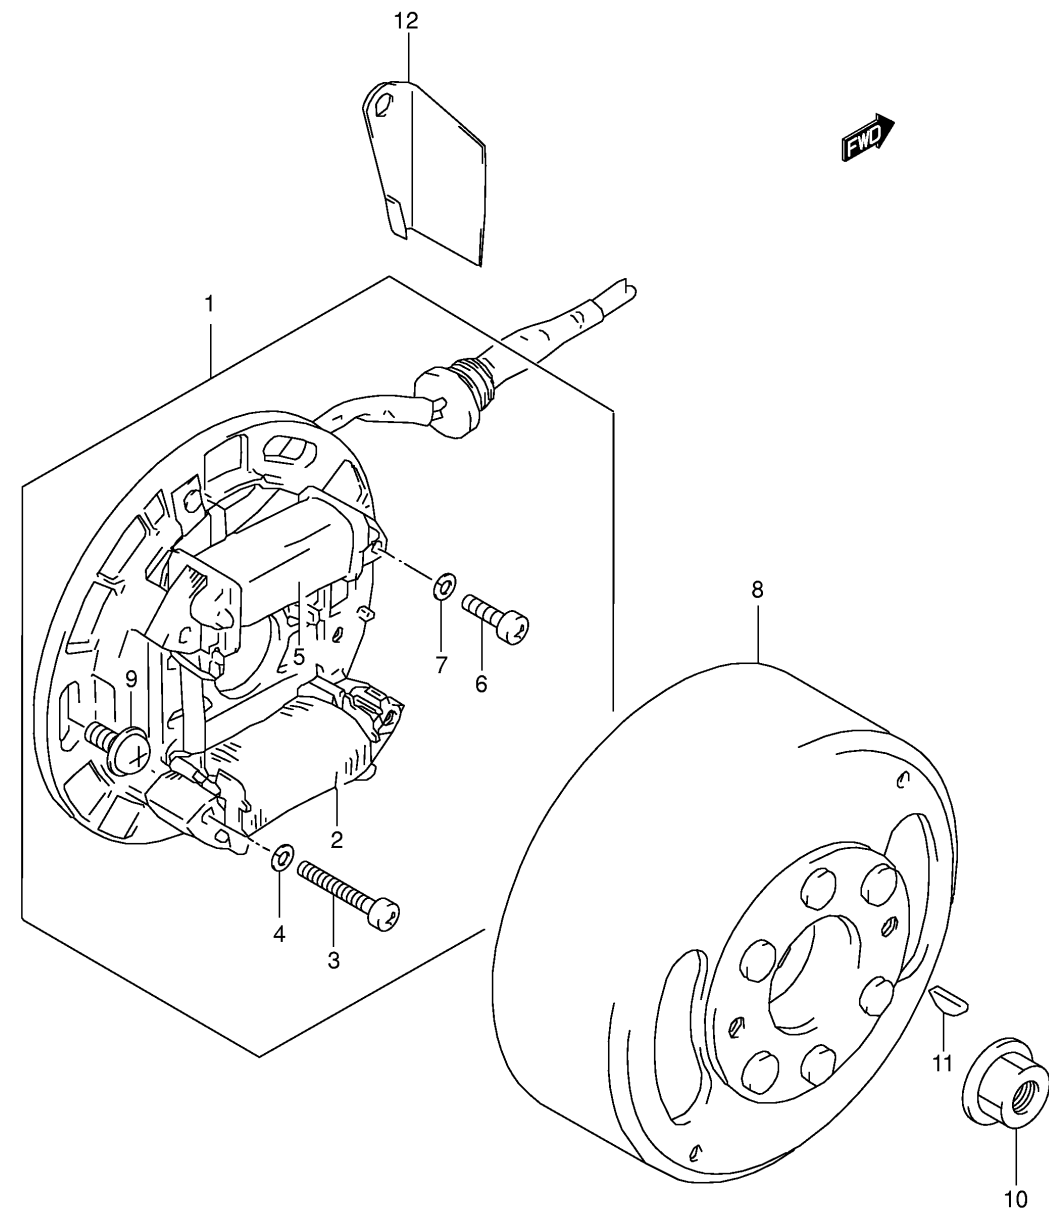


Ref No	Part No	Description
--------	---------	-------------


1	32101-40B00	Stator Assy
2	32120-40B00	• . Coil, Lighting
3	09125-04023	• . Screw (4x30)
4	08321-01043	• . Lock Washer
5	32140-40B00	• . Coil, Primary
6	02112-04163	• . Screw
7	08321-01043	• . Lock Washer
8	32102-40B00	Rotor
9	02142-05123	Screw
10	08316-10103	Nut
11	08341-31039	Key
12	32371-40B00	Clamp

Ref No	Part No	Description
1	31800-40B01	Relay, Starting Motor
2	32800-40B00	Rectifier Assy
3	09128-06044	Screw (6x10)
4	33410-40B00	Unit & Coil Assy, Ignition
5	02112-76163	Screw
10	33510-22010	Cap, Spark Plug
11	33543-40B00	Boot, Spark Plug Cap
12	33542-38B00	Seal, High Tension Cord
13	33610-40B20	Battery (ytx5l-bs,12v,4ah)
13	33610-40B20	Battery (ytx5l-bs,12v,4ah)
14	33651-37000	Cushion, Battery (170x95x3.0)


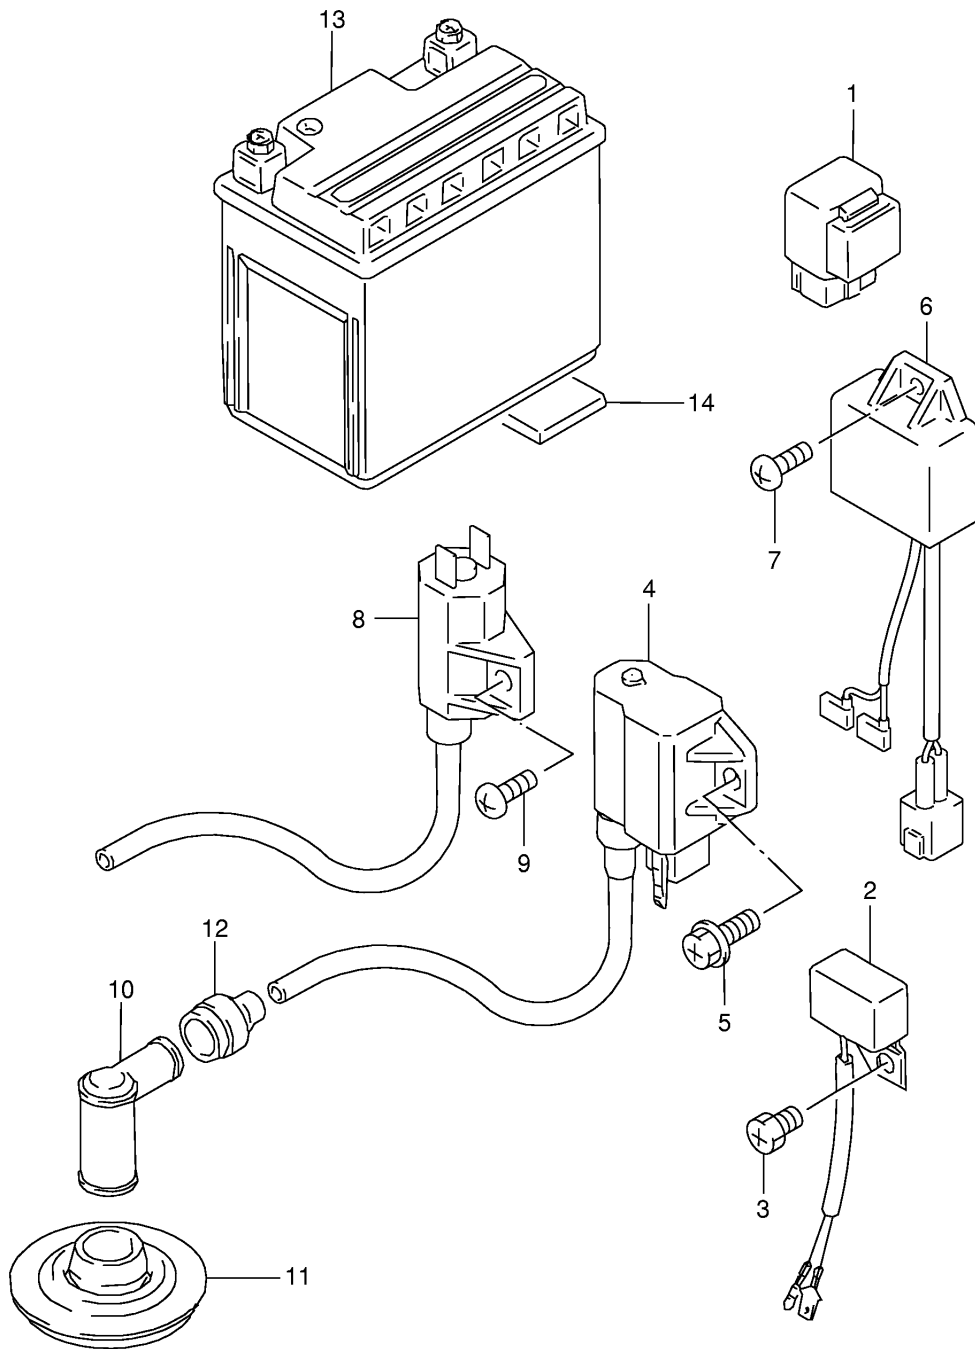


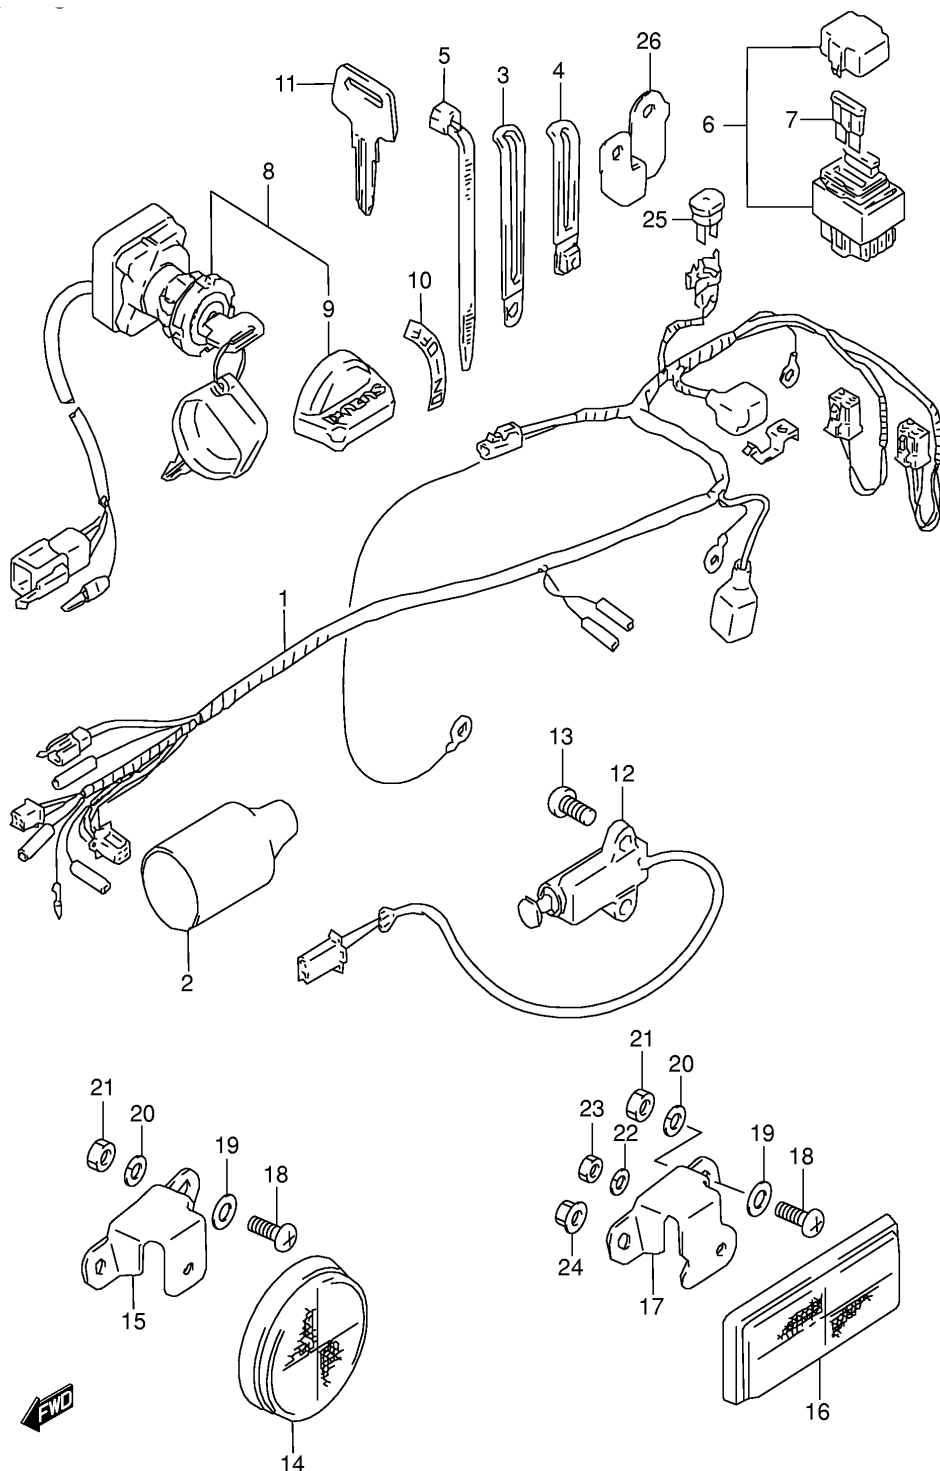


Ref No	Part No	Description
1	36610-40B10	Harness, Wiring
2	36618-30000	• . Boot, Wiring Harness
3	09404-06433	Clamp (l:95)
3	09404-08420	Clamp (l:125)
4	09404-06425	Clamp (l:80)
5	09407-14403	Clamp (l:125)
5	09407-18402	Clamp (l:165)
6	36740-40B00	Box Assy, Fuse
7	09481-05101	• . Fuse (5a)
8	37110-40B00	Switch Assy, Ignition
9	37142-19B00	• . Mascot, Key
10	37139-40B03	Plate, Control Identification
11	37146-19B00	Key, Blank Type C
11	37146-19B10	Key, Blank Type D
12	37840-40B01	Switch Assy, Parking Brake
13	02112-06203	Screw
14	35950-14A00	Reflector, Front Side
15	35956-40B00	Bracket, Front Rh
15	35957-40B00	Bracket, Front Lh
16	35970-00A10	Reflector, Rear
17	35975-40B00	Bracket, Rear Side Rh
17	35976-40B00	Bracket, Rear Side Lh
18	02142-06163	Screw
19	08322-01063	Washer
20	08321-01053	Lock Washer
21	08319-31067	Nut
22	08321-01053	Lock Washer
23	08310-00053	Nut
24	08316-10053	Nut
25	36750-05A00	Breaker Assy, Circuit
26	36751-40B00	Bracket, Circuit Breaker

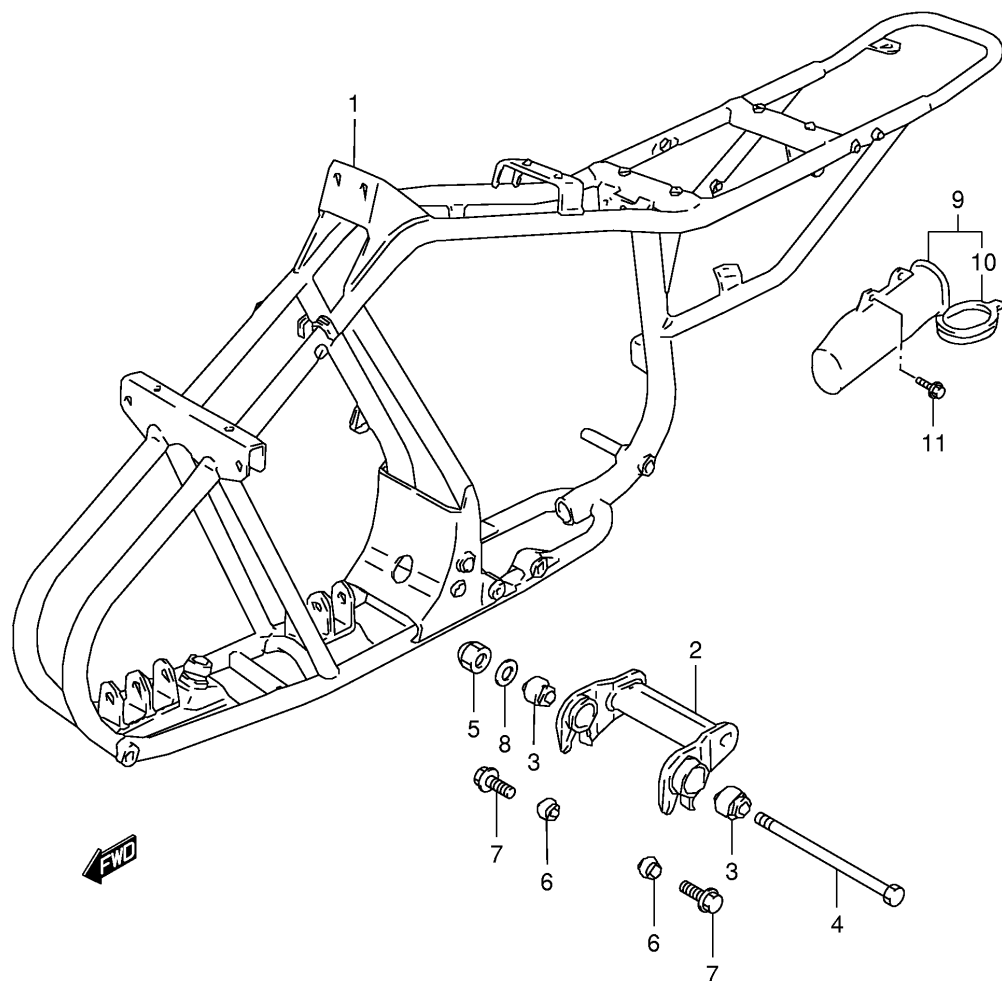


Ref No	Part No	Description
1	41100-40B10-019	Frame (black)
1	41100-40B20-019	Frame (black)
2	41180-40B10-019	Bracket, Crankcase (black)
3	09319-14006	Bush
4	61211-40B01	Bolt, Crankcase Bracket
5	08319-21148	Nut
6	09320-10023	Cushion, Swing Stop
7	01550-10303	Bolt
8	09160-14027	Washer
9	41550-32E00	Holder, Tool
10	41552-37210	• . Cap
11	09116-06006	Bolt

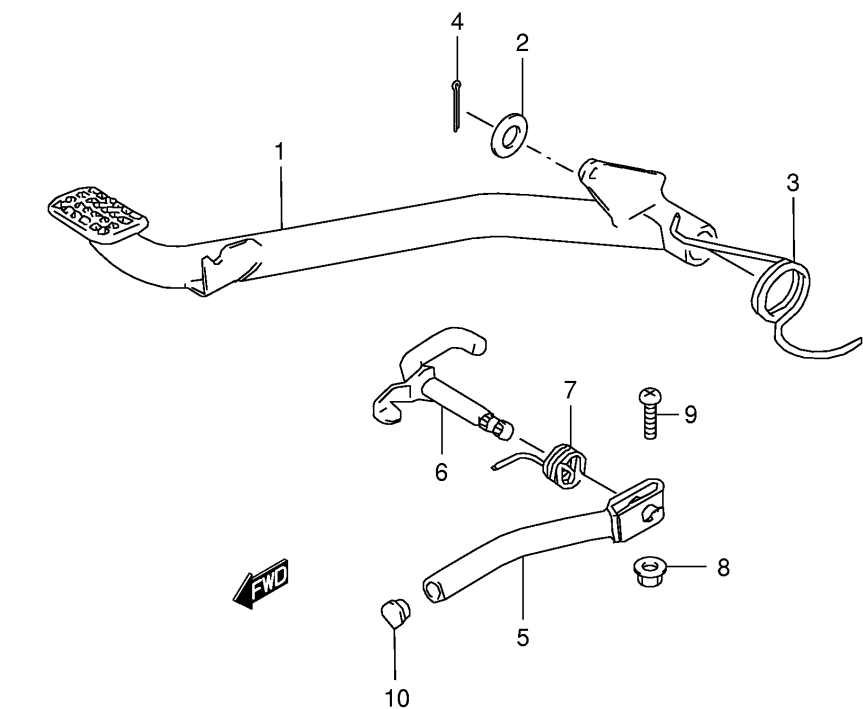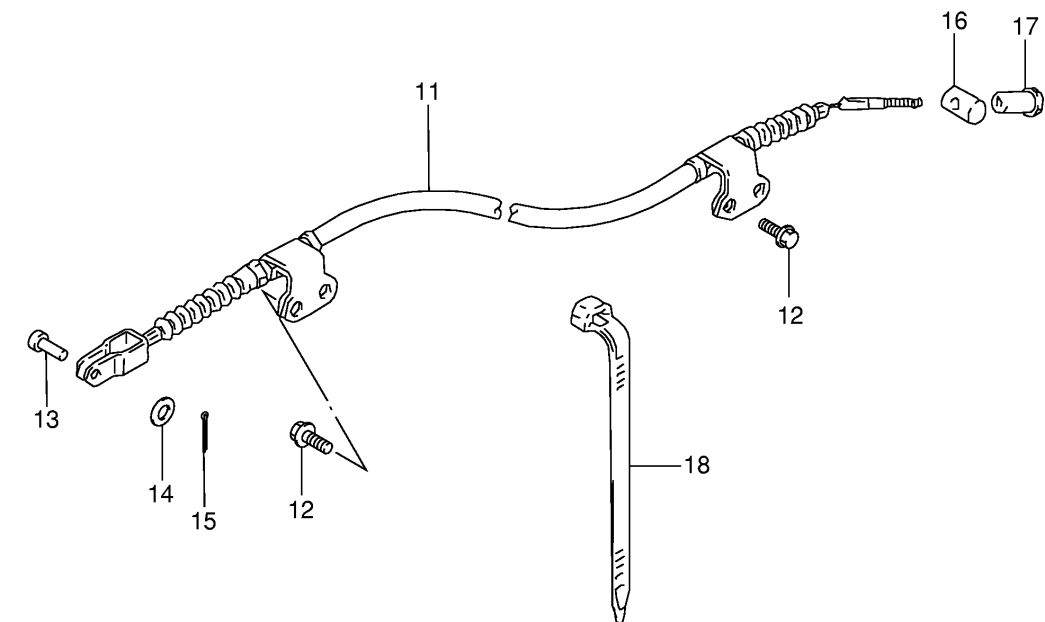


Ref No	Part No	Description
1	43110-40B00	Pedal, Brake
2	09160-15049	Washer
3	43182-40B00	Spring, Brake Pedal Return
4	04111-30308	Cotter Pin
5	43160-40B00	Handle, Brake Pedal
6	43150-40B00	Stopper, Brake Pedal
7	43192-40B00	Spring, Brake Pedal Stopper
8	08316-20063	Nut
9	02112-06303	Screw
10	09250-08013	Cap
11	58510-40B00	Cable, Rear Brake
12	01550-06163	Bolt
13	09200-06013	Pin, Front
14	08322-01063	Washer
15	04111-20208	Cotter Pin
16	09209-13006	Pin, Rear
17	09150-06012	Nut
18	09407-14403	Clamp

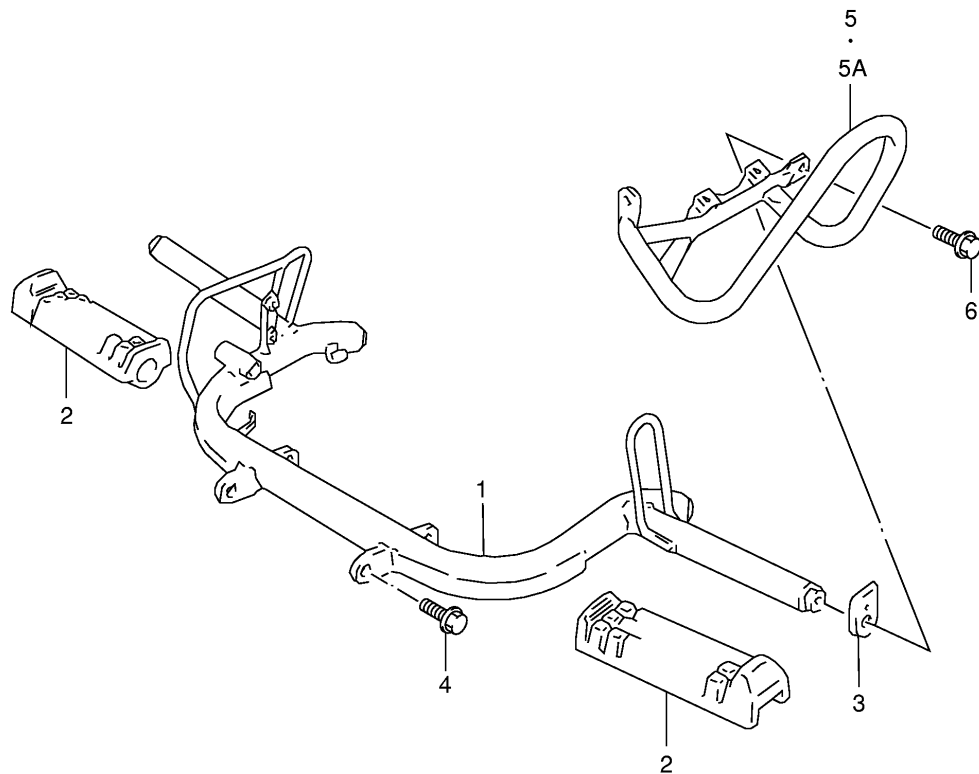


Ref No	Part No	Description
1	43510-40B01-019	Bar, Front Footrest (black)
2	43551-40B00	Rubber, Front Footrest
3	43553-24200	Stopper, Rubber
4	09103-10100	Bolt
5	43580-40B10-019	Guard, Brush Lh (black)
5a	43570-40B10-019	Guard, Brush Rh (black)
6	01550-08203	Bolt
7	43990-40B10-019	Grip, Front (black)
8	43978-24500	Cap
9	01550-08353	Bolt, Lower
10	09180-08067	Spacer
11	08316-10083	Nut
12	01550-08163	Bolt

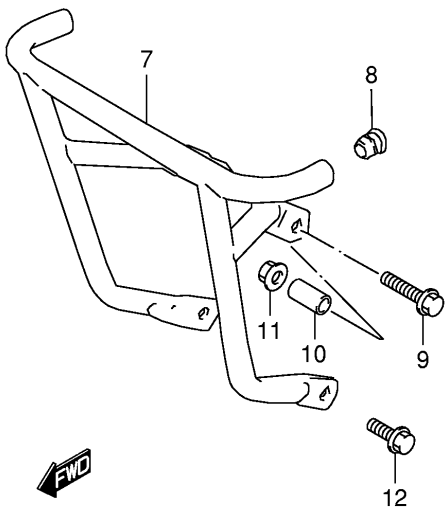


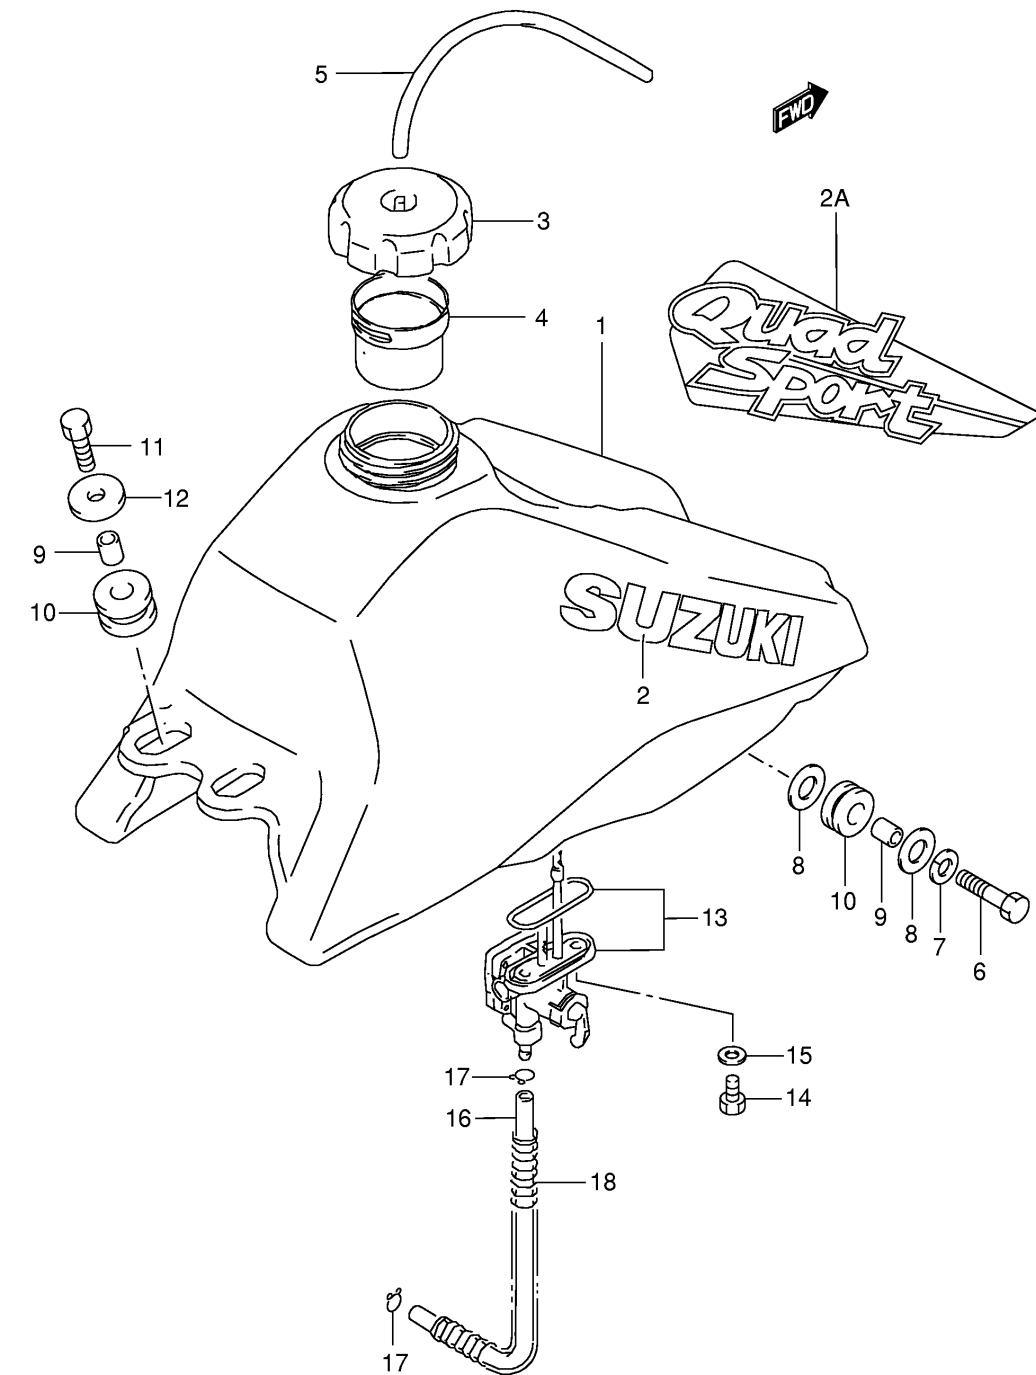

Ref No	Part No	Description
1	44110-40B00-Z16	Tank, Fuel (purple)
2	68111-40B10-13L	Emblem (silver)
3	44200-19A01	Cap Assy, Fuel Tank
4	44199-19A00	Tube, Inlet
5	09352-50823-600	Hose, Breather (l:600->60)
6	01550-08357	Bolt, Front
7	08321-01087	Lock Washer
8	09160-08136	Washer
9	09180-08191	Spacer
10	09320-12016	Cushion
11	01500-06307	Bolt, Rear
12	09160-06136	Washer
13	44300-40B00	Cock Assy, Fuel
14	09128-06065	Screw, Fuel Cock
15	09168-06026	Gasket
16	09352-50823-600	Hose (l:600->20)
17	09401-08401	Clip
18	09440-10009	Spring

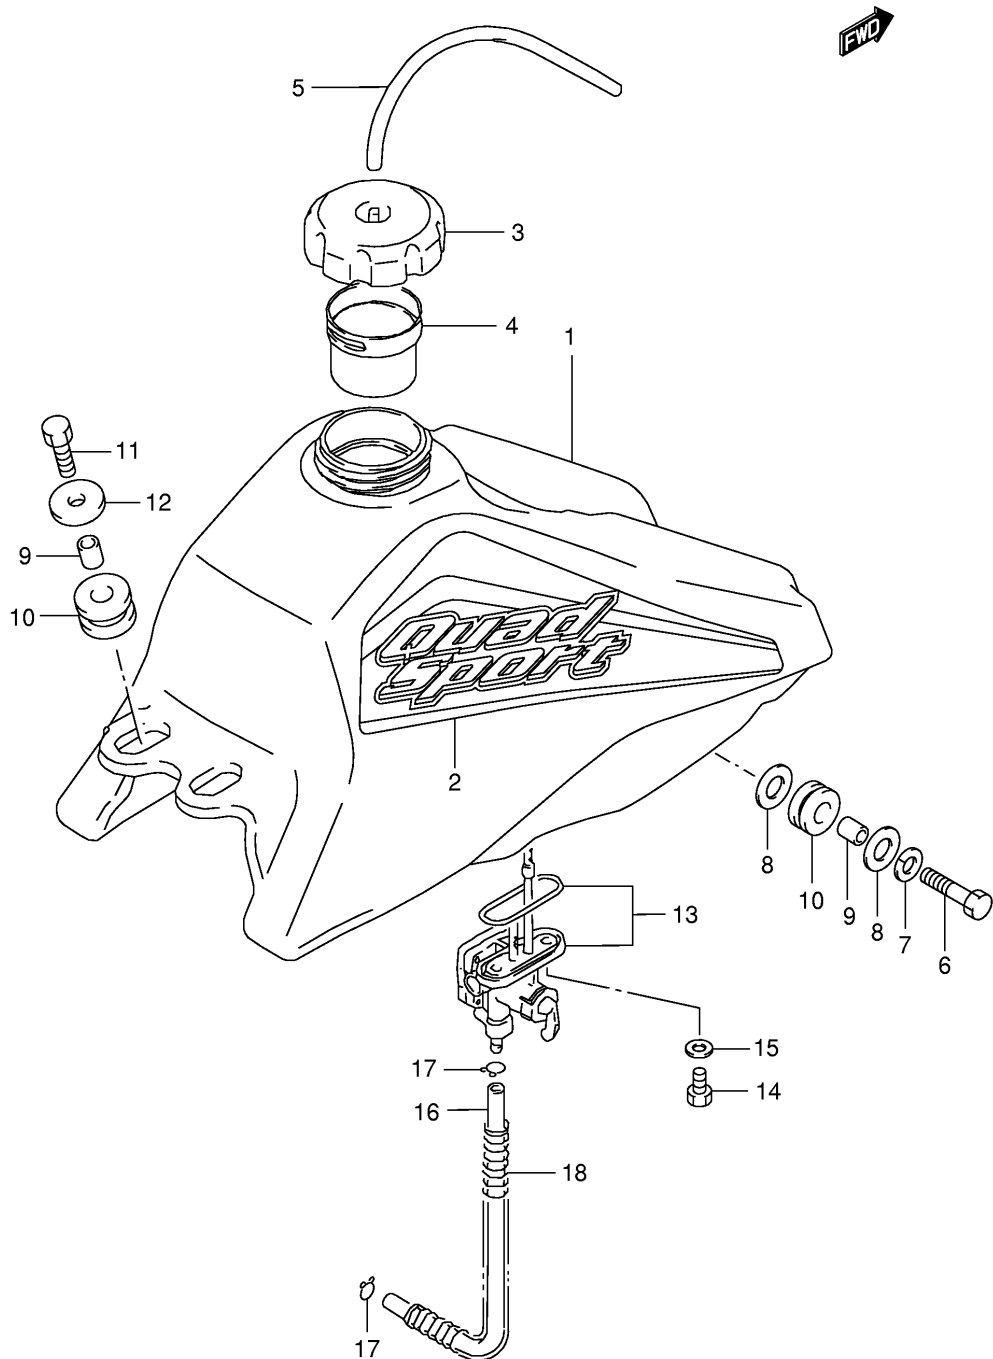


Ref No	Part No	Description
1	44110-40B00-291	Tank, Fuel (black)
2	68110-40B20-DH4	Tape Set, Fuel Tank
3	44200-19A01	Cap Assy, Fuel Tank
4	44199-19A00	Tube, Inlet
5	09352-50823-600	Hose, Breather (l:600->60)
6	01550-08357	Bolt, Front
7	08321-01087	Lock Washer
8	09160-08136	Washer
9	09180-08191	Spacer
10	09320-12016	Cushion
11	01500-06307	Bolt, Rear
12	09160-06136	Washer
13	44300-40B00	Cock Assy, Fuel
14	09128-06065	Screw, Fuel Cock
15	09168-06026	Gasket
16	09352-50823-600	Hose (l:600->20)
17	09401-08401	Clip
18	09440-10009	Spring

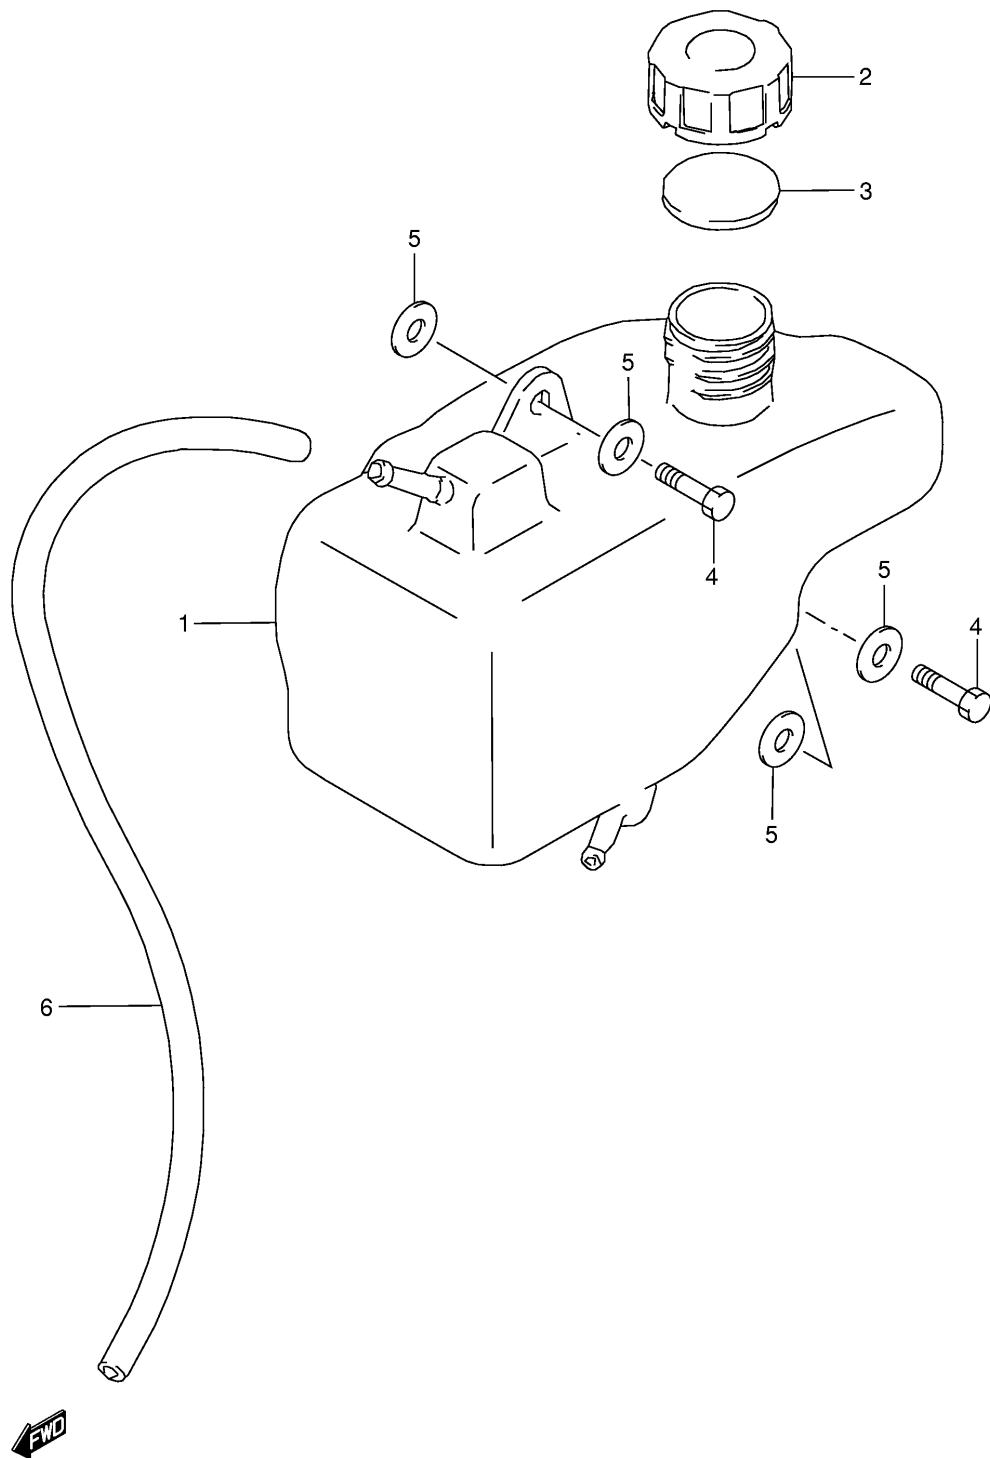


Ref No	Part No	Description
1	44611-40B00	Tank, Oil
2	44651-05003	Cap, Oil Tank
3	44661-27000	Gasket
4	01500-06207	Bolt
5	09160-06019	Washer
6	09352-50823-00B	Hose, Breather (l:2000->20)



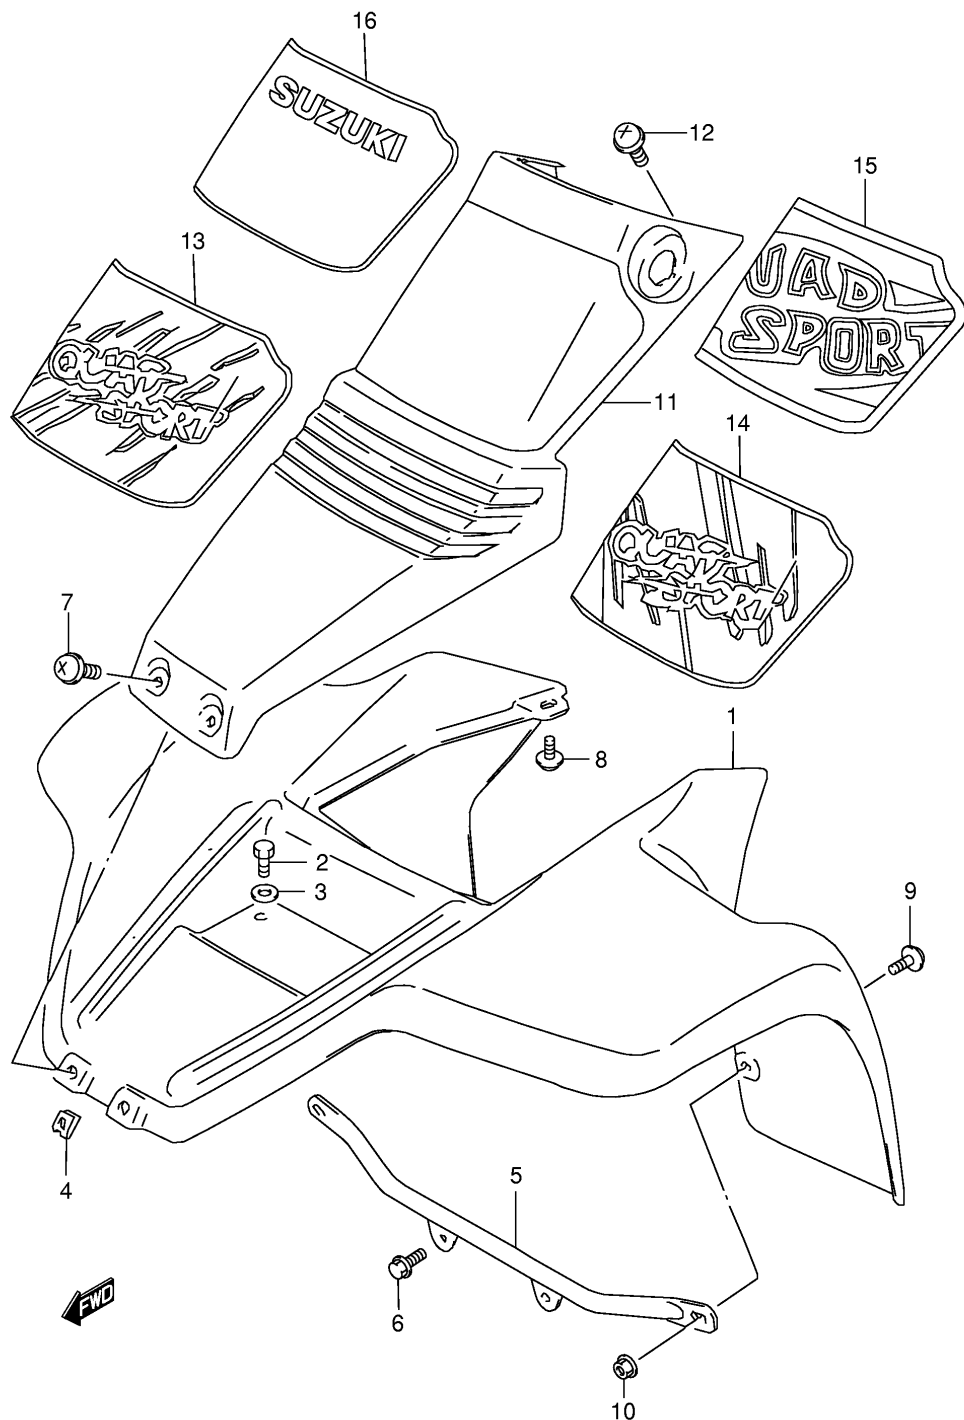



Ref No	Part No	Description
1	53111-40B01-YD5	Fender, Front (white)
1	53111-40B11-YD5	Fender, Front (white)
2	09116-08111	Bolt, Fender Front
3	09160-08127	Washer, Fender Front
4	53141-19A00	Nut, Fender Front
5	53210-40B10-019	Brace, Front Fender (black)
6	01550-06123	Bolt, Fender Brace
7	09136-06062	Screw, Center Cover & Fender
8	09136-06004	Screw, Front Fender Rear
9	09136-06022	Screw, Fender & Brace
10	08319-31067	Nut, Fender & Brace
11	53118-40B00-Z16	Cover, Fender Center (purple)
12	09136-06004	Screw, Center Cover
15	68155-40B90-Y7S	Tape, Front Fender

Ref No	Part No	Description
1	53111-40B01-25Y	Fender, Front (yellow)
1	53111-40B11-25Y	Fender, Front (yellow)
2	09116-08111	Bolt, Fender Front
3	53141-19A00	Nut, Fender Front
4	53210-40B10-019	Brace, Front Fender (black)
5	01550-06123	Bolt, Fender Brace
6	09136-06062	Screw, Center Cover & Fender
7	09136-06004	Screw, Front Fender Rear
8	09136-06022	Screw, Fender & Brace
9	08319-31067	Nut, Fender & Brace
10	53118-40B00-291	Cover, Fender Center (black)
11	09136-06004	Screw, Center Cover
12	68155-40BB0-DH5	Tape, Front Fender

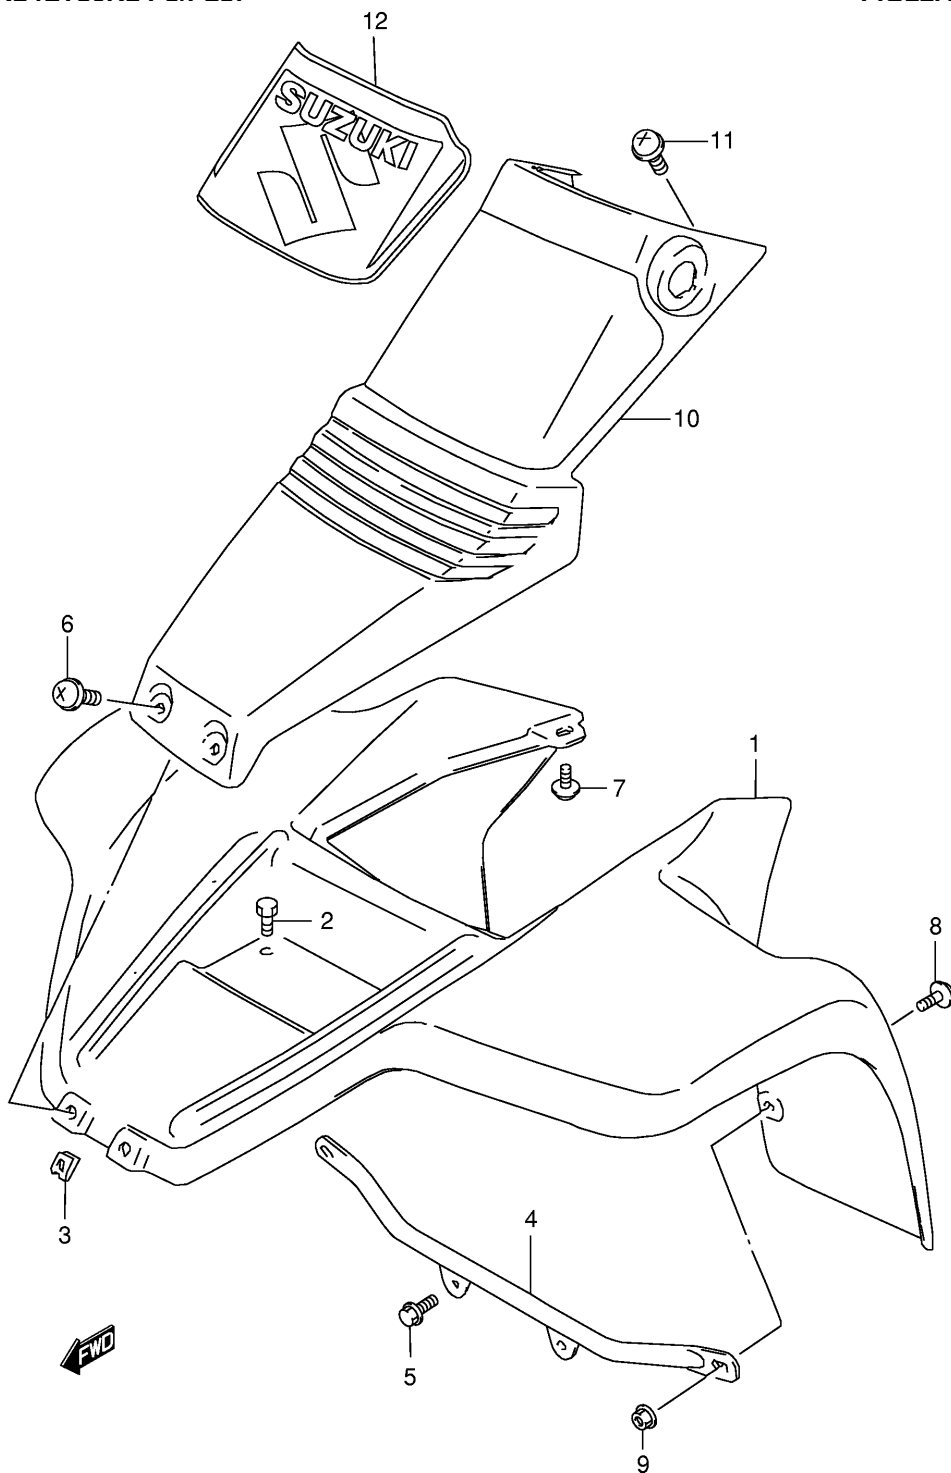


Ref No	Part No	Description
1	56110-40B00-291	Handlebar (black)
2	56172-24500	Pad, Cross
3	09407-14407	Clamp
4	58110-40B00	Cable, Front Brake
5	09150-06014	Nut
6	09209-11002	Pin
7	09407-14403	Clamp
8	58300-40B00	Cable Assy, Throttle

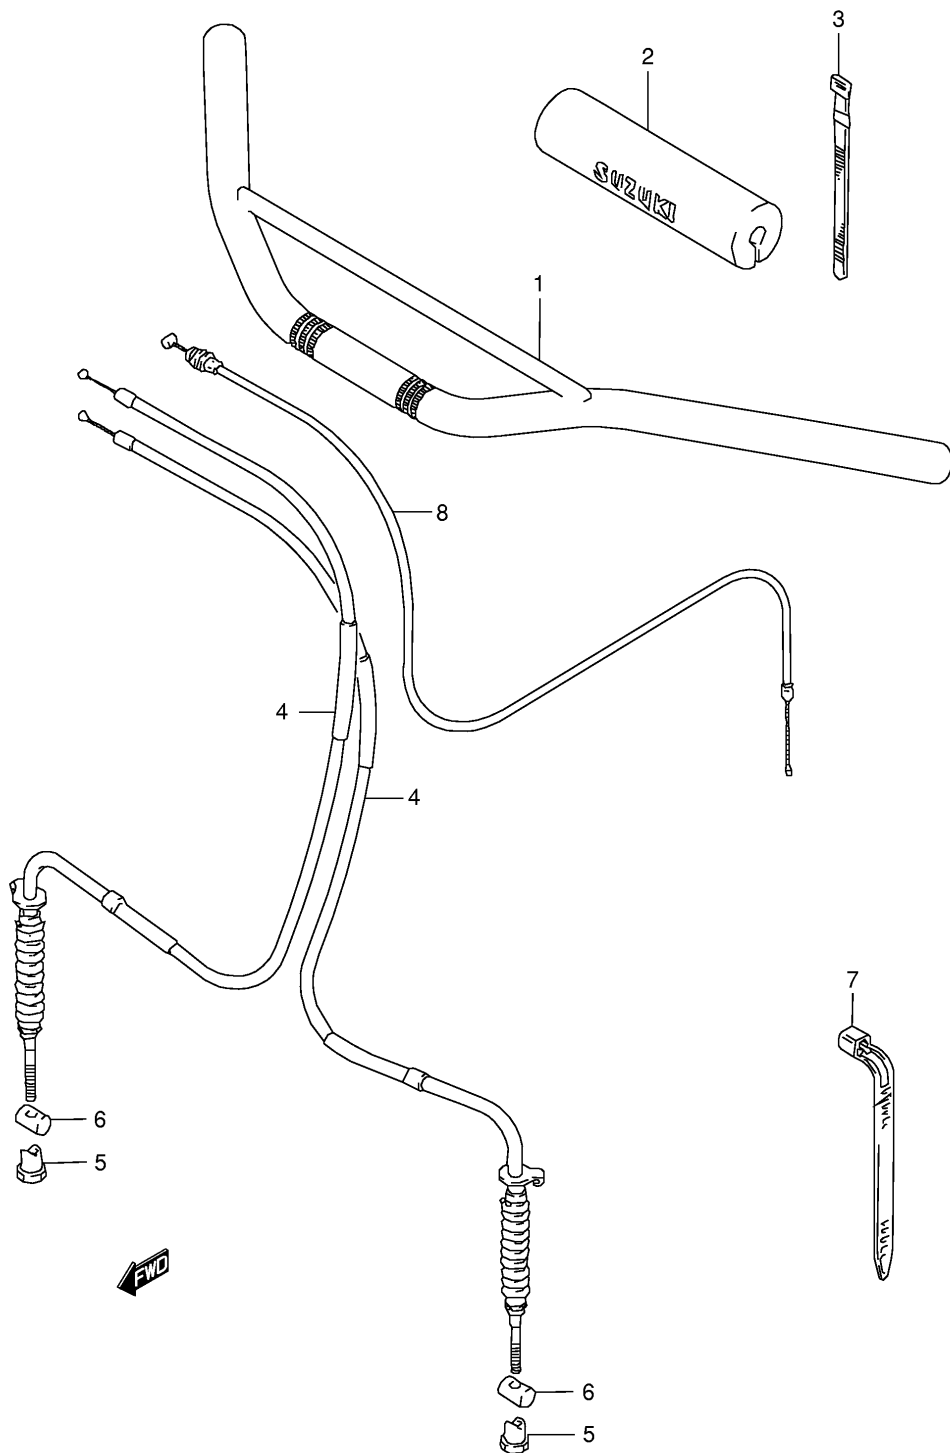


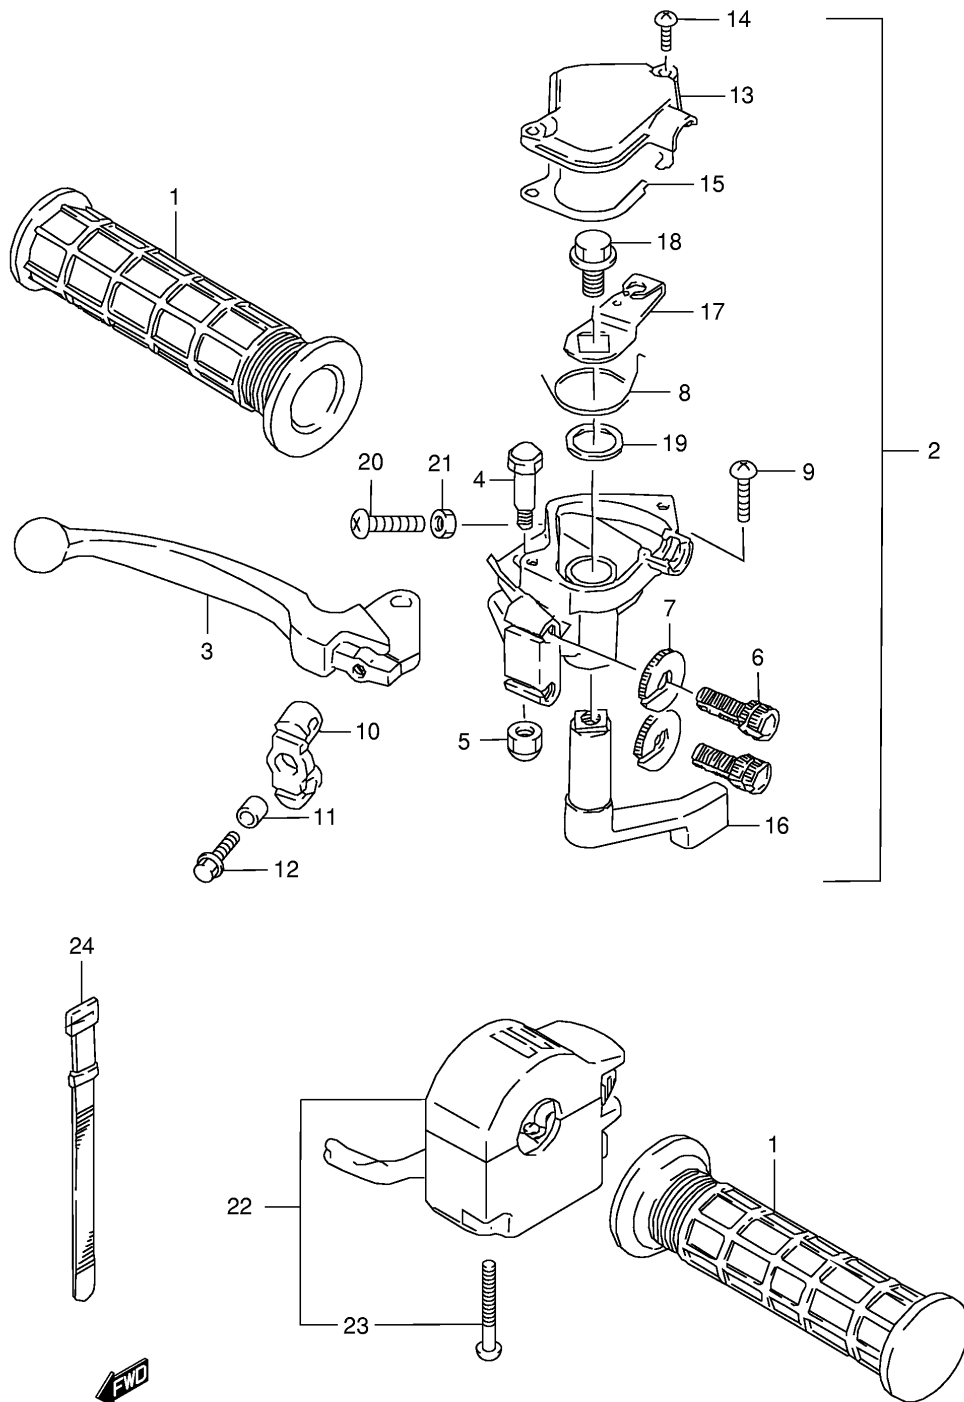


Ref No	Part No	Description
1	57211-19A03-291	Grip, Handle (black)
2	57300-40B00	Lever Assy, Front Brake
3	57421-40B00	. Lever, Front Brake
4	57431-49110	. Bolt, Brake Lever Pivot
5	08319-21063	. Nut
6	57441-26010	. Adjuster, Brake Cable
7	57442-44400	. Nut, Brake Cable Adjuster
8	57159-40B00	. Spring, Throttle Lever
9	02112-06203	. Screw
10	57396-40B00	. Equalizer, Brake Cable
11	09180-06194	. Spacer (6.2x8.3x6.9)
12	01550-06163	. Bolt
13	57121-40B00	. Cap, Throttle Case
14	02112-04103	. Screw
15	57157-40B00	. Gasket, Throttle Case
16	57151-40B00	. Lever, Throttle
17	57158-40B00	. Lever, Throttle Cable
18	01550-08123	. Bolt
19	09168-14015	. Washer
20	09125-05066	. Screw
21	09140-05006	. Nut
22	37400-40B00	Switch Assy, Handle Lh
23	02112-05357	. Screw
24	09407-12402	Band, Handle Harness

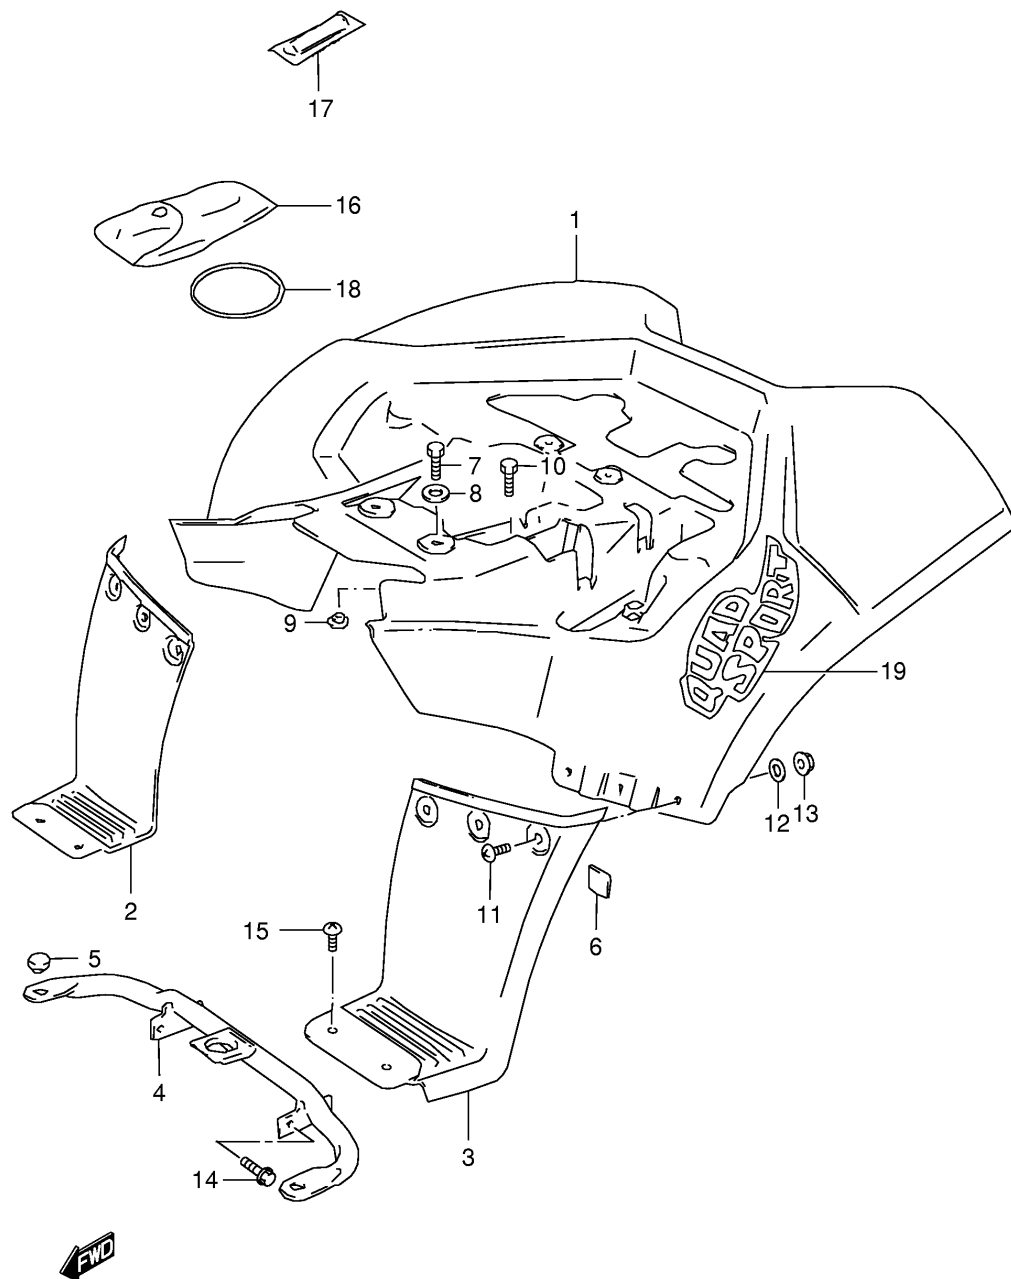


Ref No	Part No	Description
1	63111-40B01-YD5	Body, Rear Center (white)
1	63111-40B11-YD5	Body, Rear Center (white)
2	63112-40B01-291	Body, Rear Fender Rh (black)
3	63113-40B01-291	Body, Rear Fender Lh (black)
4	63130-40B00	Reinforcement, Rear Fender
5	09250-12006	Cushion
6	63191-25C00	Cushion, Guard
7	01500-06207	Bolt, Center Body
8	09160-06134	Washer
9	09169-08036	Washer
10	09116-06010	Bolt
11	09136-06081	Screw
12	09160-06132	Washer
13	08319-31067	Nut
14	01550-06163	Bolt
15	09136-06004	Screw
16	09800-21026	Tool Assy
17	96200-18A01	Gauge, Air
18	09280-70004	Band
19	68171-40B60-K9U	Emblem, Rear Fender

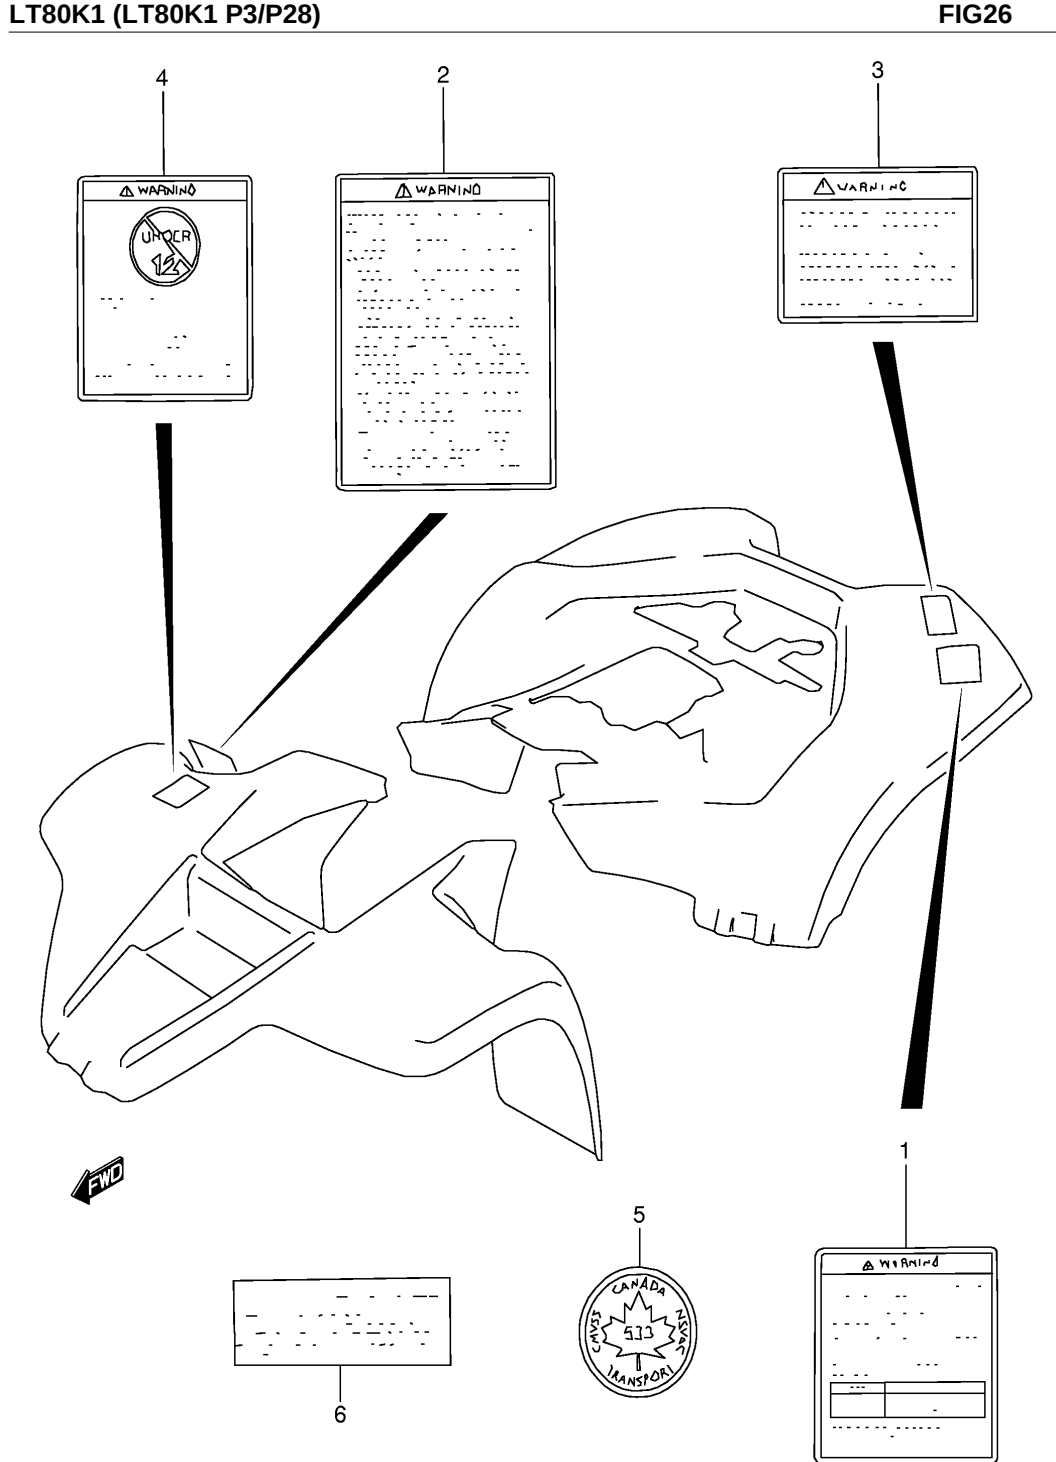

Ref No	Part No	Description
1	68332-40B20	Label, Tire Air Pressure
1	68332-40B30	Label, Tire Air Pressure
2	68366-04600	Label, Warning Main
3	68367-04630	Label, Warning No Passenger
4	68367-40B10	Label, Warning Age12
4	68367-04650	Label, Warning Age12
6	68353-26E01	Label, Manual Notice

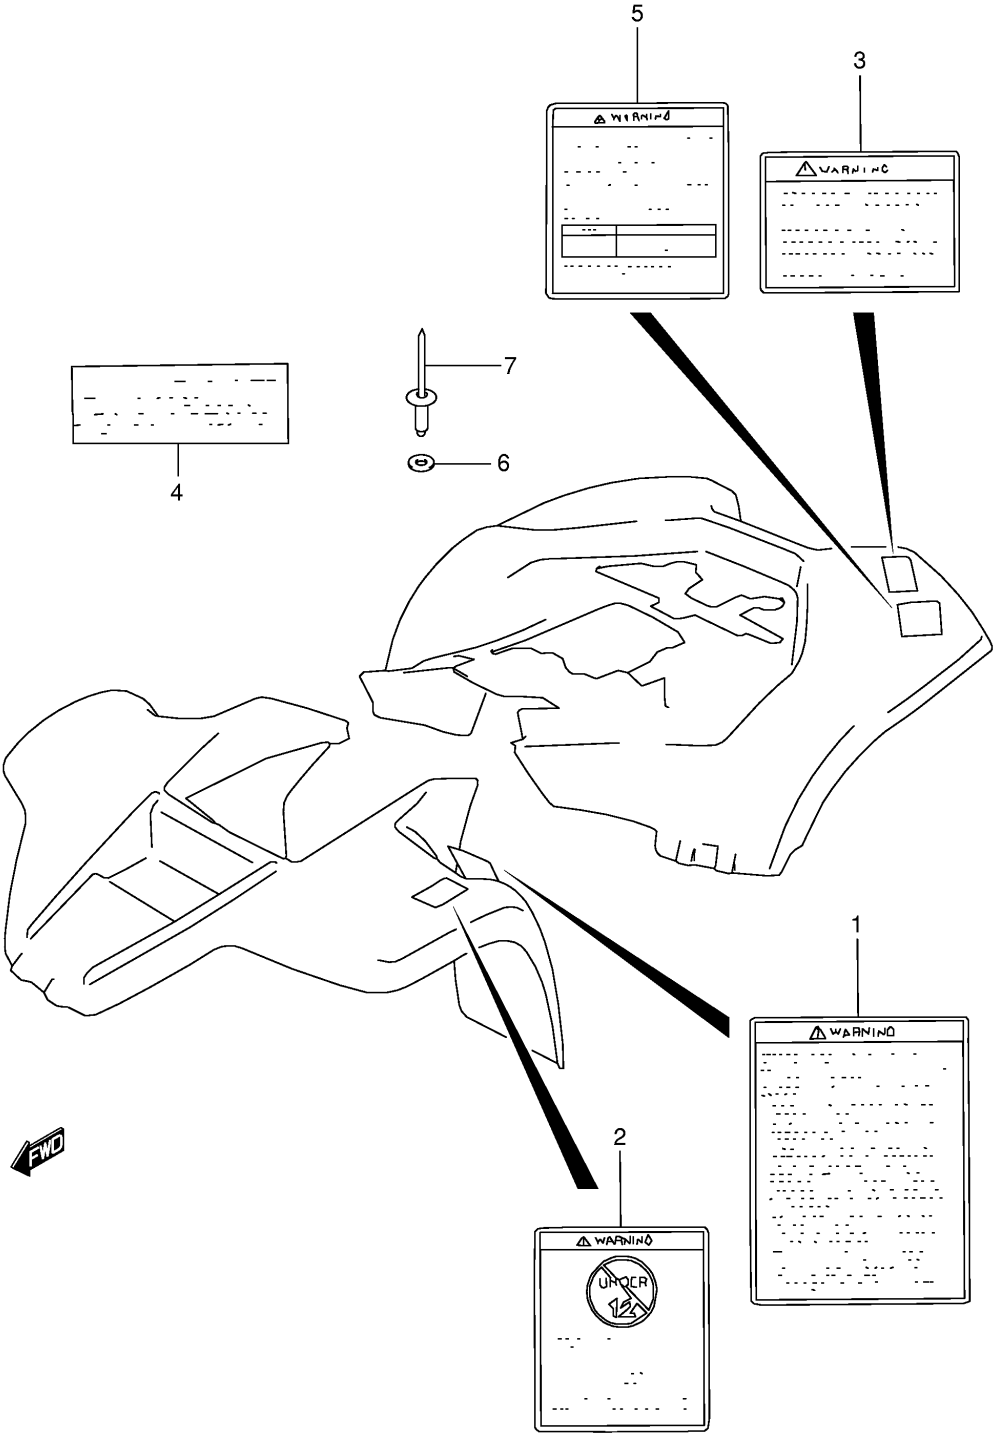


Ref No	Part No	Description
1	68921-09F00	Label, General Warning
1	68366-20B60	Label, General Warning
2	68931-40B00	Label, Age 12
2	68367-04650	Label, Age 12
3	68367-09F00	Label, No Passenger
3	68367-20B60	Label, No Passenger
4	68353-26E01	Label, Manual Notice
5	68332-40B50	Label, Tire Air
5	68332-40B30	Label, Tire Air
6	68928-09F00	Washer
7	68929-09F00	Rivet
8	99011-40B63-03A	Manual, Owner's
8	99011-40B63-28B	Manual, Owner's

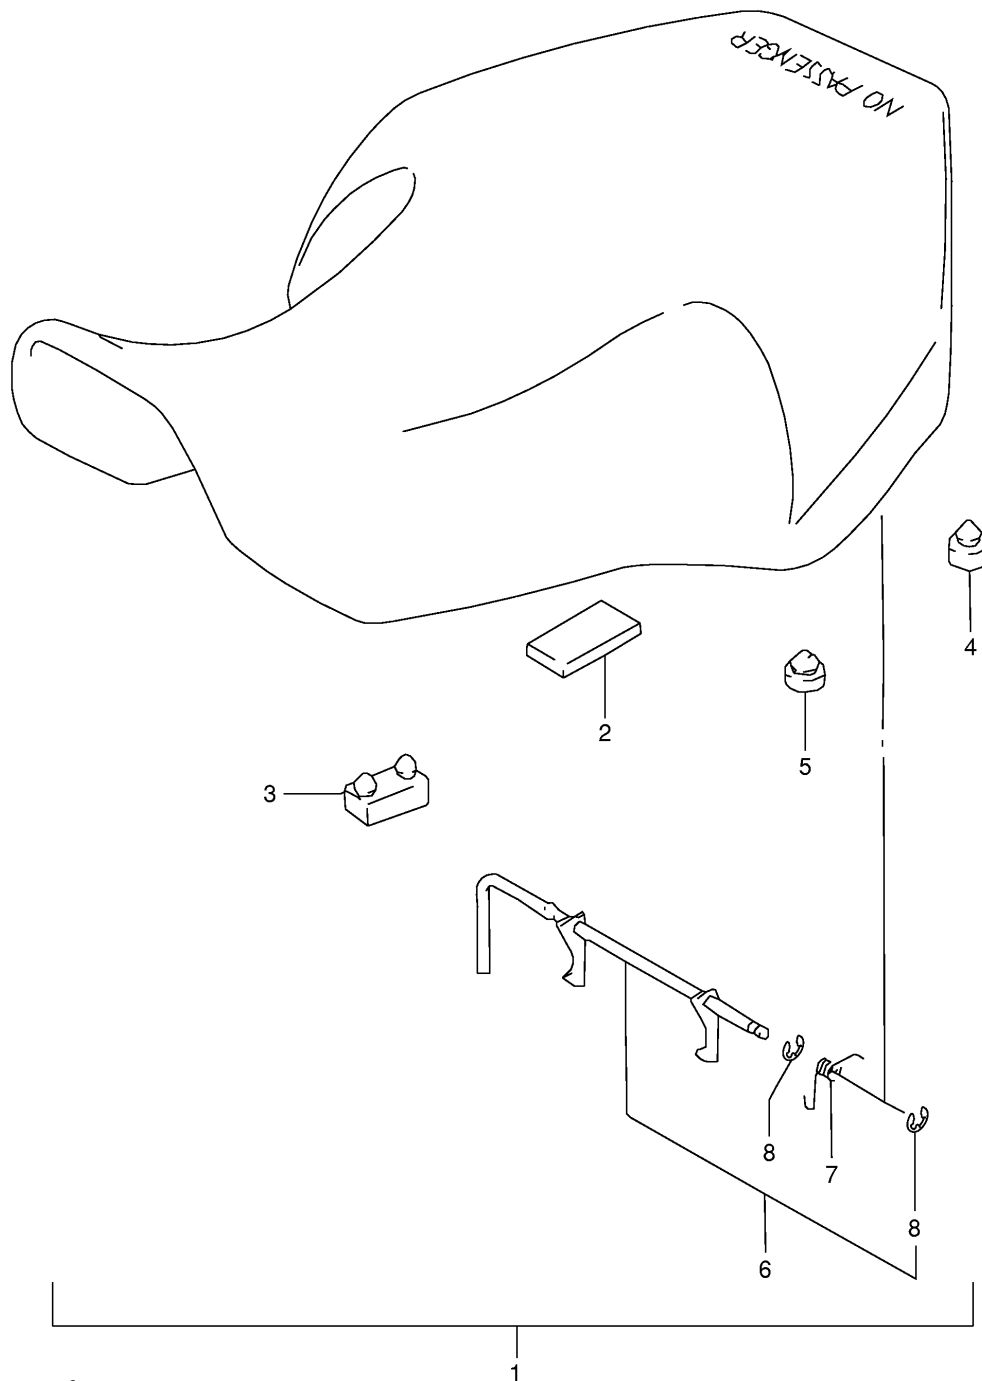


Ref No	Part No	Description
1	45100-40B10-R32	Seat Set (purple)
1	45100-40B20-R32	Seat Set (purple)
2	94982-29400	• . Cushion, Battery
3	09321-08006	• . Cushion
4	09321-10011	• . Cushion
5	09321-10012	• . Cushion
6	45210-40B00	• . Clamp, Seat
7	45135-24500	•• .. Spring
8	08332-11063	•• .. E Ring



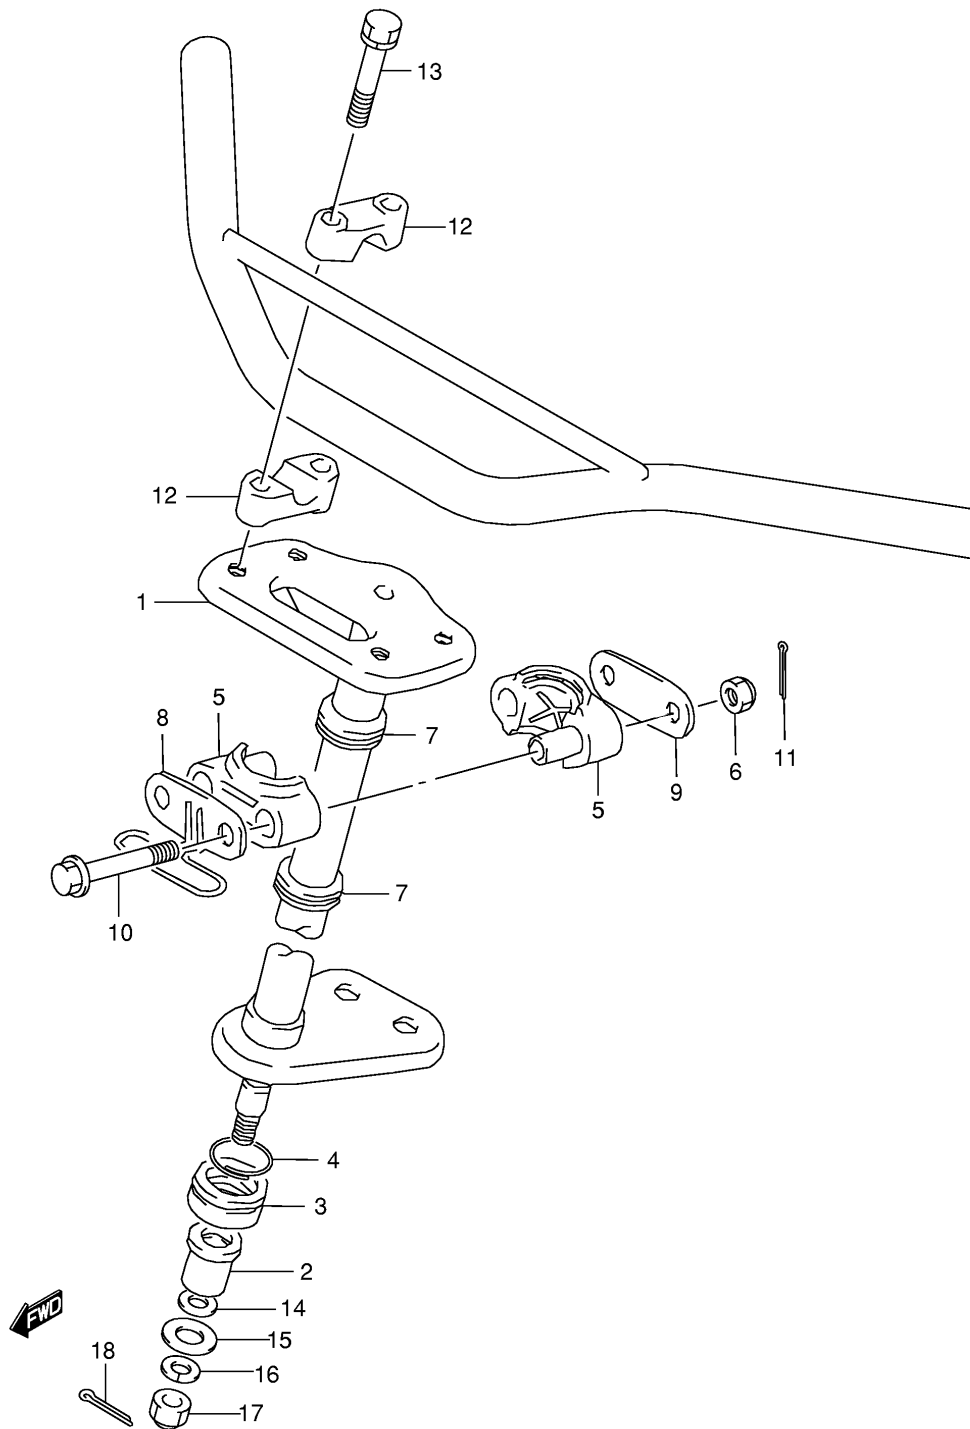



Ref No	Part No	Description
1	51650-40B00-019	Shaft, Steering (black)
2	51661-40B00	Bush, Steering Lower
3	51662-18900	Dust Seal, Steering Shaft
4	09380-31002	Clip, Dust Seal
5	51670-18902	Holder, Steering Shaft
6	08316-10083	Nut, Steering Shaft Holder
7	51678-18900	Dust Seal, Steering
8	51680-40B00	Reinf, Steering Holder
9	51681-18900	Reinf, Steering Holder
10	09103-08085	Bolt (8x60)
11	04111-20208	Cotter Pin
12	56211-27200-291	Clamp, Handlebar (black)
13	01254-08557	Bolt (8x55)
14	09280-14011	O Ring (id:13.8,d:2.50)
15	09160-10132	Washer
16	09162-10008	Lock Washer
17	08319-21103	Nut
18	04111-20208	Cotter Pin

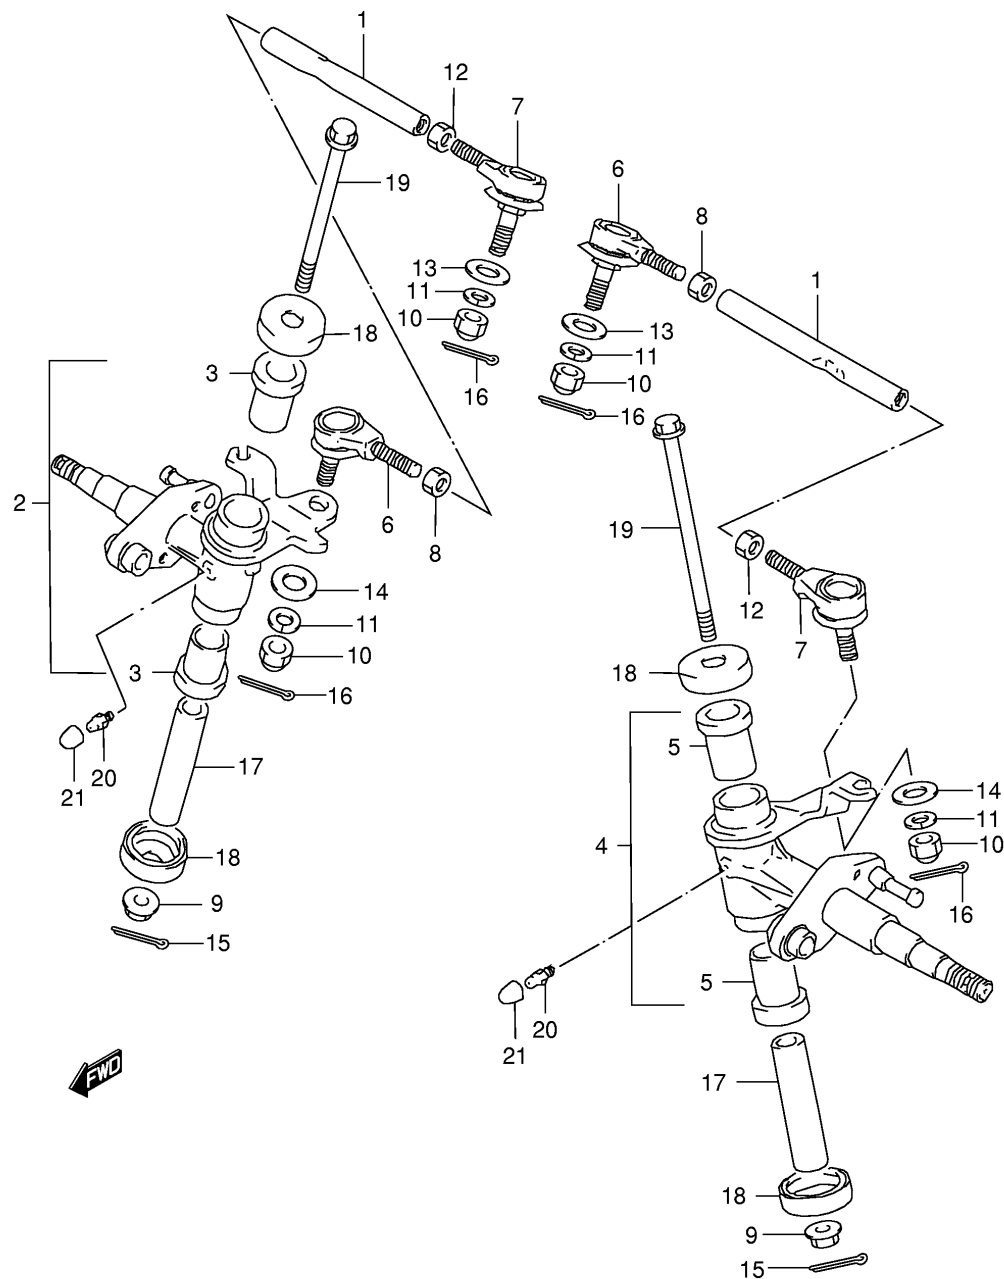


Ref No	Part No	Description
1	51281-40B00	Tie Rod, Steering
2	51230-40B00	Arm, Knuckle Rh
3	51236-40B00	• Bush
4	51240-40B00	Arm, Knuckle Lh
5	51236-40B00	• Bush
6	51260-41B01	Rod End (rh Thread)
7	51270-41B01	Rod End (lh Thread)
8	09140-10043	Nut, Tie Rod (rh Thread)
9	08319-31107	Nut
10	08319-21103	Nut
11	09162-10008	Lock Washer
12	09140-10027	Nut, Tie Rod (lh Thread)
13	09160-10132	Washer, Rod-end Inner
14	09160-10126	Washer, Rod-end Outer
15	04111-20208	Cotter Pin
16	04111-20208	Cotter Pin
17	51251-40B00	Spacer, Kingpin
18	51255-18900	Dust Seal
19	51256-40B00	Bolt, Knuckle Arm
20	08351-21008	Nipple, Grease
21	61442-33310	Cap, Grease Nipple


Ref No	Part No	Description
1	52100-40B10-163	Absorber Assy, Front (yellow)
2	09103-10019	Bolt, Absorber (10x37)
3	52410-40B00-019	Arm, Suspension Rh (black)
4	52420-40B00-019	Arm, Suspension Lh (black)
5	09319-10049	Bush, Arm (10x28.1x28)
6	09103-10173	Bolt, Suspension Arm (10x80)
7	08316-20103	Nut, Suspension Arm

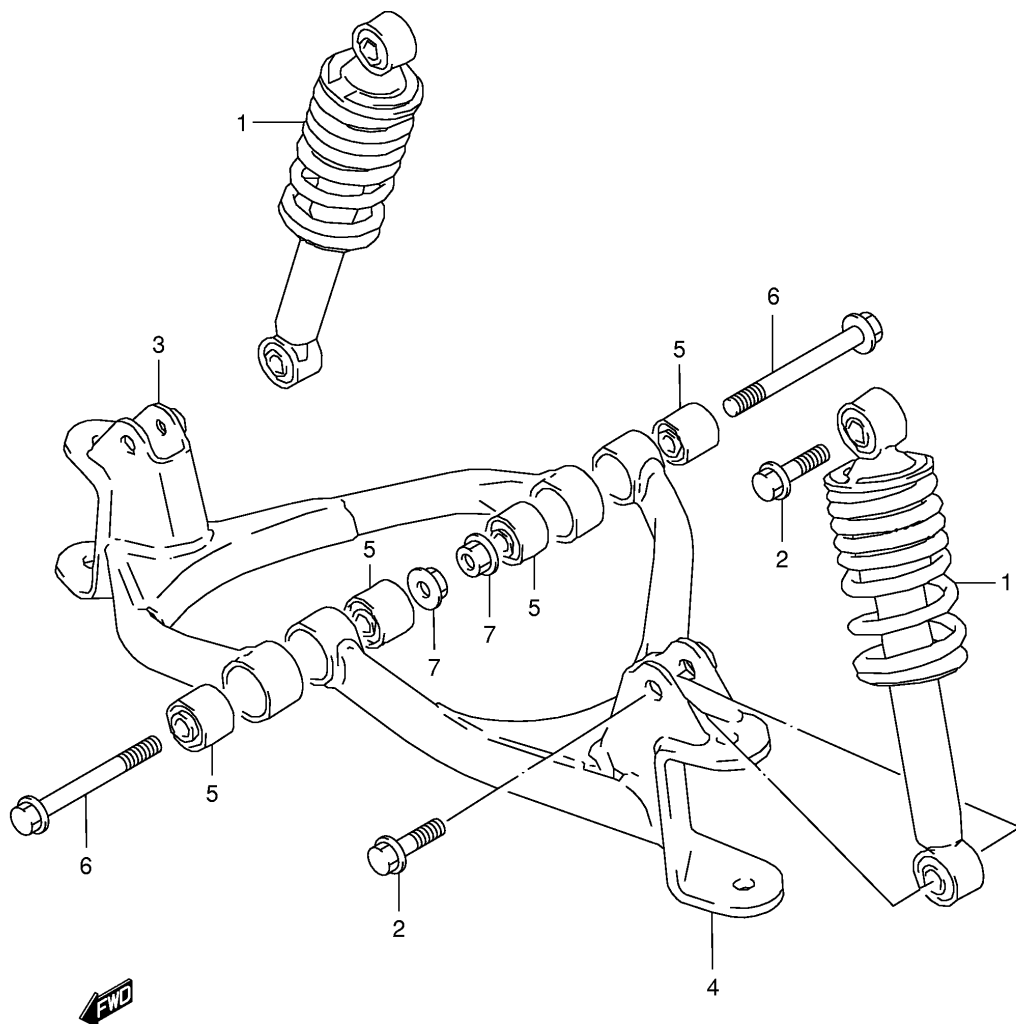

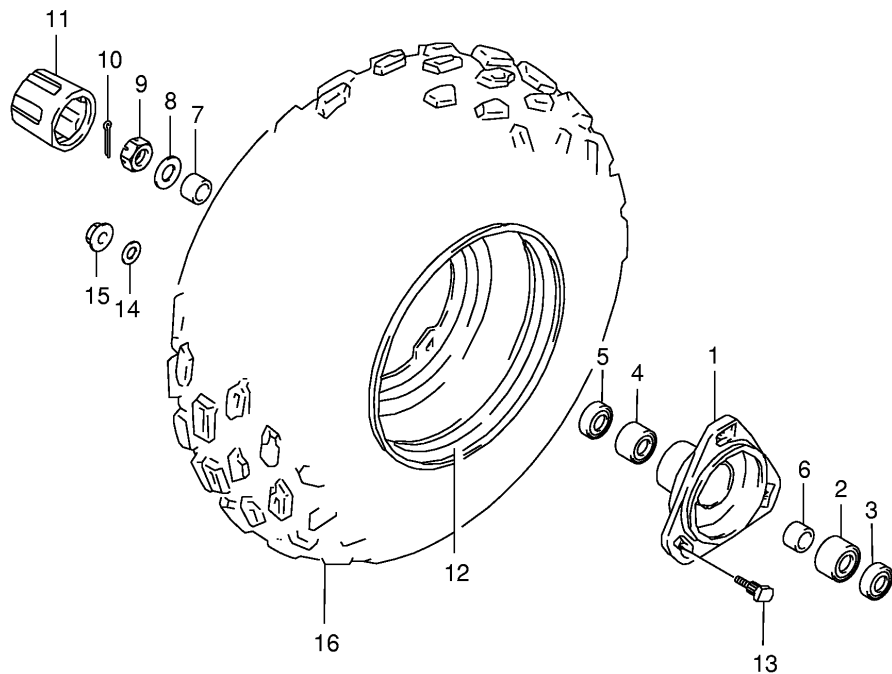


Ref No	Part No	Description
1	54110-40B00	Hub, Front
2	09262-17031	Bearing, Inner (17x40x12)
3	09283-22012	Dust Seal, Front Hub Inner (22x40x6)
4	09262-15024	Bearing, Outer (15x35x11)
5	09283-20038	Dust Seal, Front Hub Outer (20x35x5)
6	54731-40B00	Spacer, Front Hub
7	54741-40B00	Spacer, Front Axle
8	08322-01143	Washer
9	08314-40143	Nut
10	04111-30308	Cotter Pin
11	54725-18A00	Cap, Wheel, Center
12	55310-40B00-14L	Rim, Front Wheel (8x5.5at) (white)
13	09119-10051	Bolt, Front Hub (10x23)
14	08322-01103	Washer, Front Wheel
15	08316-10103	Nut, Front Wheel
16	55100-40B51	Tire (at19x7-8) Dunlop
17	43130-78030	Valve Assy, Wheel Tr413

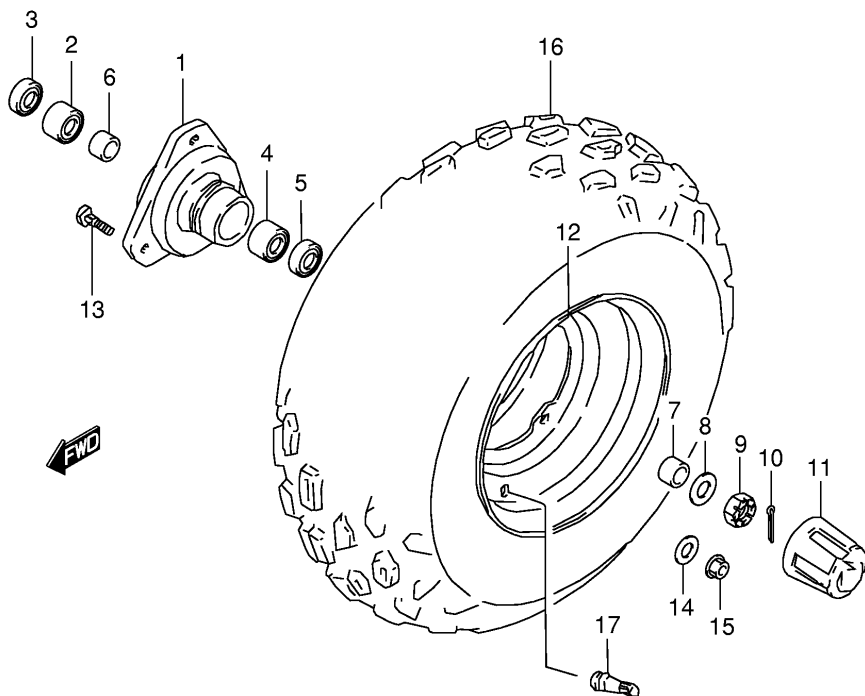

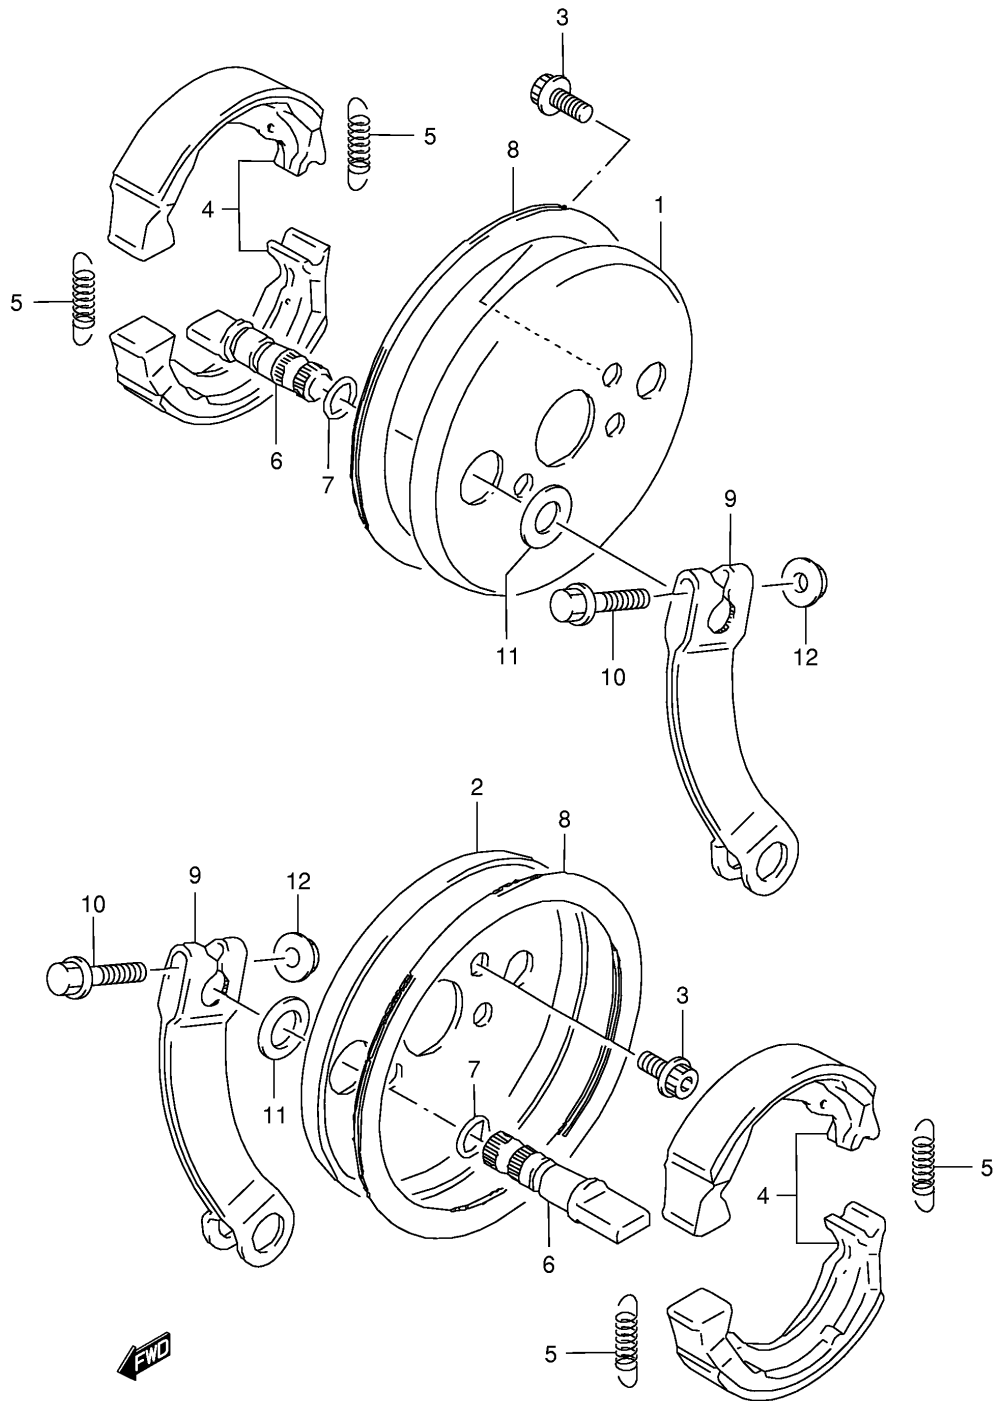


Ref No	Part No	Description
1	54511-40B00	Plate, Brake Anchor Rh
2	54521-40B00	Plate, Brake Anchor Lh
3	07120-06103	Bolt, Brake Anchor Panel
4	54400-40810	Shoe Set, Front Brake
5	09443-06029	Spring, Brake Shoe
6	54441-02301	Cam, Front Brake
7	09280-10016	O Ring, Brake Cam
8	54124-40B00	Dust Seal
9	54451-40B00	Lever, Brake Cam
10	09103-05012	Bolt, Cam Lever (5x27)
11	08322-01103	Washer, Cam Lever
12	08316-20053	Nut, Cam Lever


(id:9.8,d:1.9)

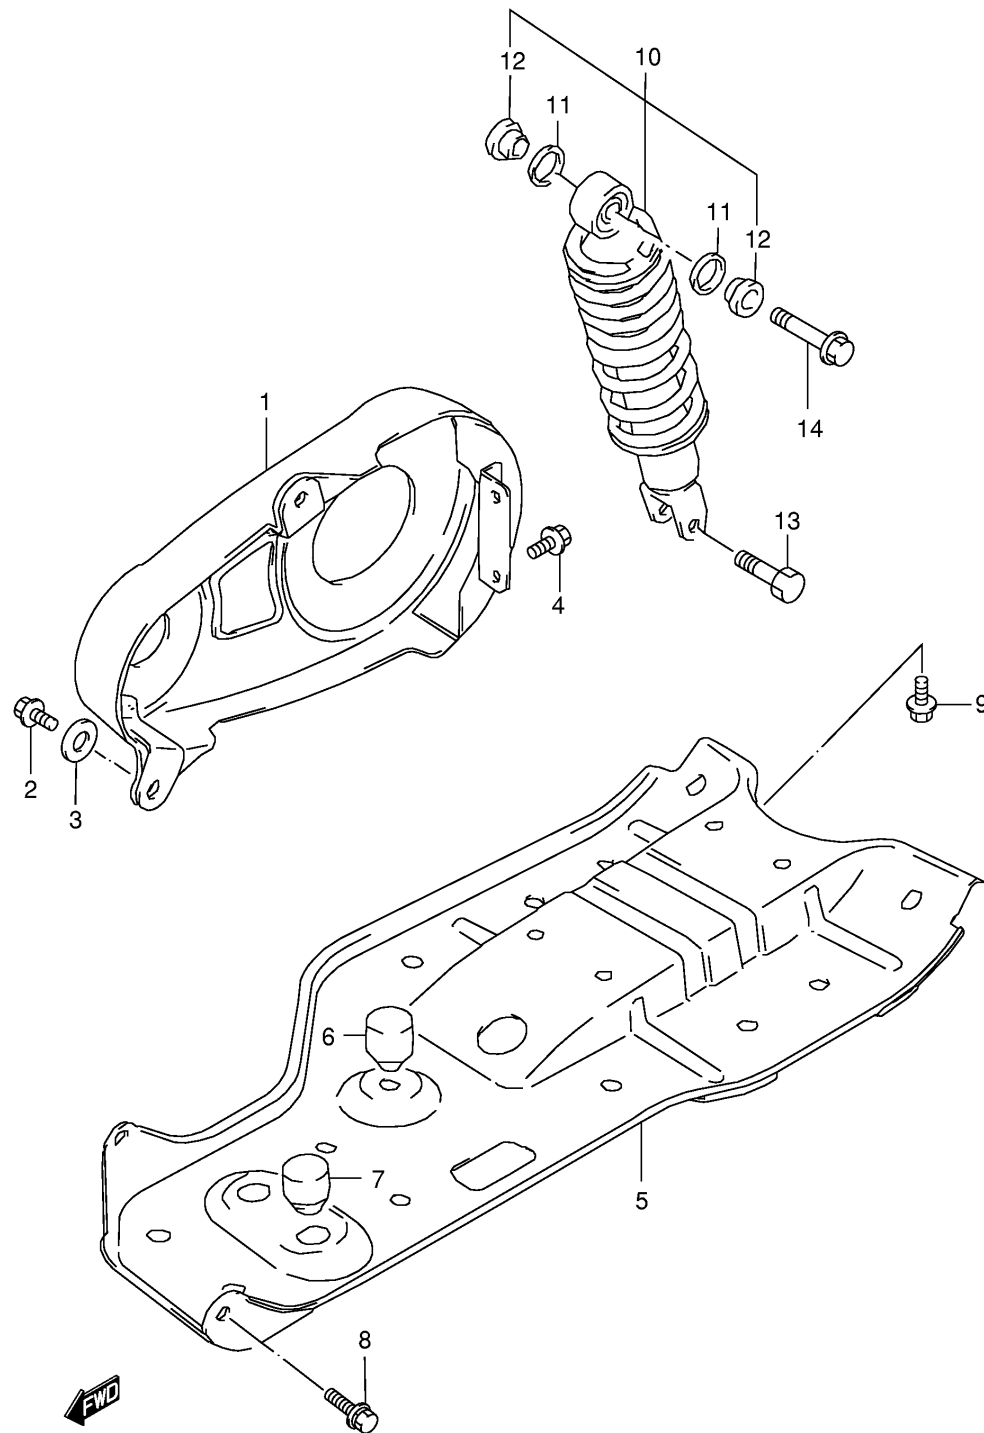


Ref No	Part No	Description
1	61310-40B01	Case, Chain
2	01550-06163	Bolt, Front (6x16)
3	09169-06026	Washer
4	01550-06103	Bolt (6x10)
5	61390-40B00-019	Guard, Under (black)
6	09321-10017	Cushion
7	09321-14001	Cushion
8	01580-06123	Bolt, Front (6x12)
9	01580-06163	Bolt (6x16)
10	62100-40B10-163	Absorber Assy, Rear Shock (yellow)
11	62226-27A20	• . Seal, Dust
12	62684-40B00	• . Collar
13	62313-40B00	Bolt, Lower (10x35)
14	09103-10049	Bolt, Upper (10x44)

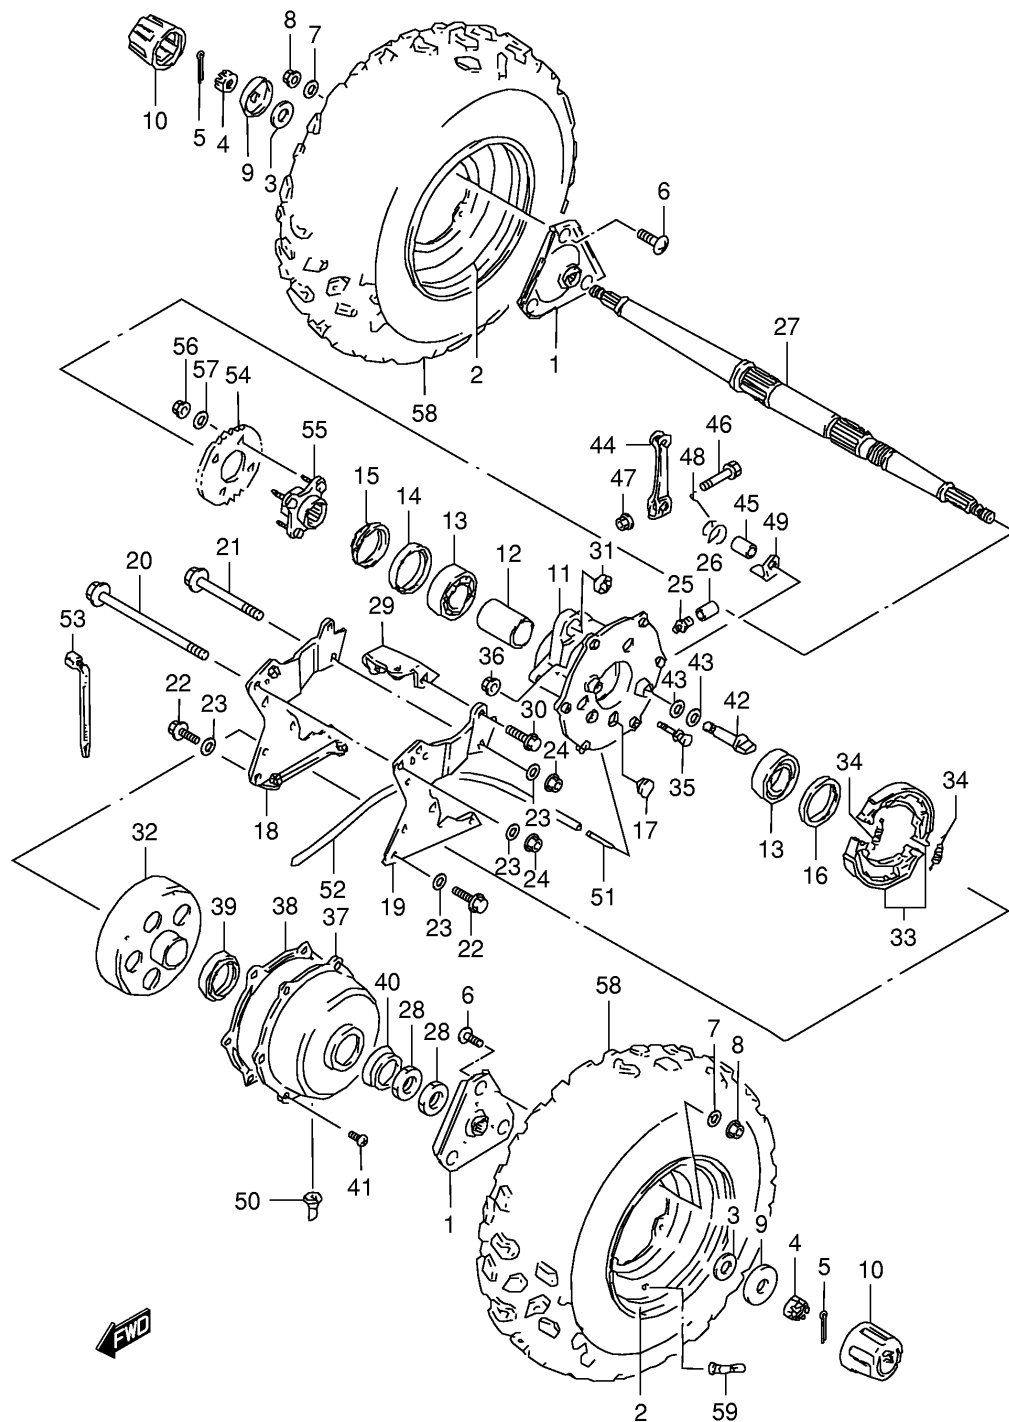

Ref No	Part No	Description
1	64110-40B50	Hub, Rear
2	55310-40B00-14L	Rim, Rear Wheel (8x5.5at) (white)
3	09164-16002	Washer
4	09141-16004	Nut
5	04111-40408	Cotter Pin
6	09119-10048	Bolt, Rear Hub
7	08322-01103	Washer
8	08316-10103	Nut
9	64726-40B00	Holder, Cap
10	54725-18A00	Cap, Wheel Center
11	64721-40B00	Housing, Axle Bearing
12	64731-40B00	Spacer, Bearing
12	09262-32007	Bearing (32x65x17)
14	09283-42016	Seal, Inner (42x65x8.5)
15	09286-42001	Seal, Outer (42x52x9.2)
16	09283-42015	Seal, Lh (42x65x7)
17	09250-20003	Cap, Housing Seal
18	64770-40B00	Plate, Housing Rh
19	64780-40B00	Plate, Housing Lh
20	09103-08504	Bolt (8x175)
21	09103-08066	Bolt (8x95)
22	01550-08203	Bolt
23	08322-01083	Washer
24	08319-31087	Nut
25	08351-21008	Nipple, Grease
26	61442-33310	Cap, Grease Nipple
27	64711-40B00	Axle, Rear
28	09140-28003	Nut
29	64790-40B00	Plate, Muffler Support
30	01550-08203	Bolt (8x20)
31	09319-10041	Bushing, Absorber (10x25x22)
32	64120-40B00	Drum, Rear Brake
33	64400-40810	Shoe Set, Brake
34	64430-14600	Spring, Brake Shoe
35	64231-40B00	Pin, Anchor
36	08316-10083	Nut
37	64130-40B00	Cover, Brake Drum
38	64125-40B00	Gasket, Drum Cover
39	09282-42001	Seal, Drum Inner (42x55x9)
40	64729-40B00	Seal, Drum Outer (33x52x9)
41	02142-06083	Screw (6x8)
42	64441-40B00	Cam, Rear Brake
43	09280-14004	O Ring (id:13.8,d:1.9)
44	64451-40B00	Lever, Brake Cam
45	64454-40B00	Spacer, Cam Lever
46	01550-06303	Bolt (6x30)
47	08316-10063	Nut
48	64444-40B00	Spring, Cam Lever Return
49	64492-40B00	Plate, Indicator
50	09250-11002	Plug
51	09364-06004	Joint
52	09352-50823-00B	Hose (5x8.2x2000)
53	09407-14403	Clamp

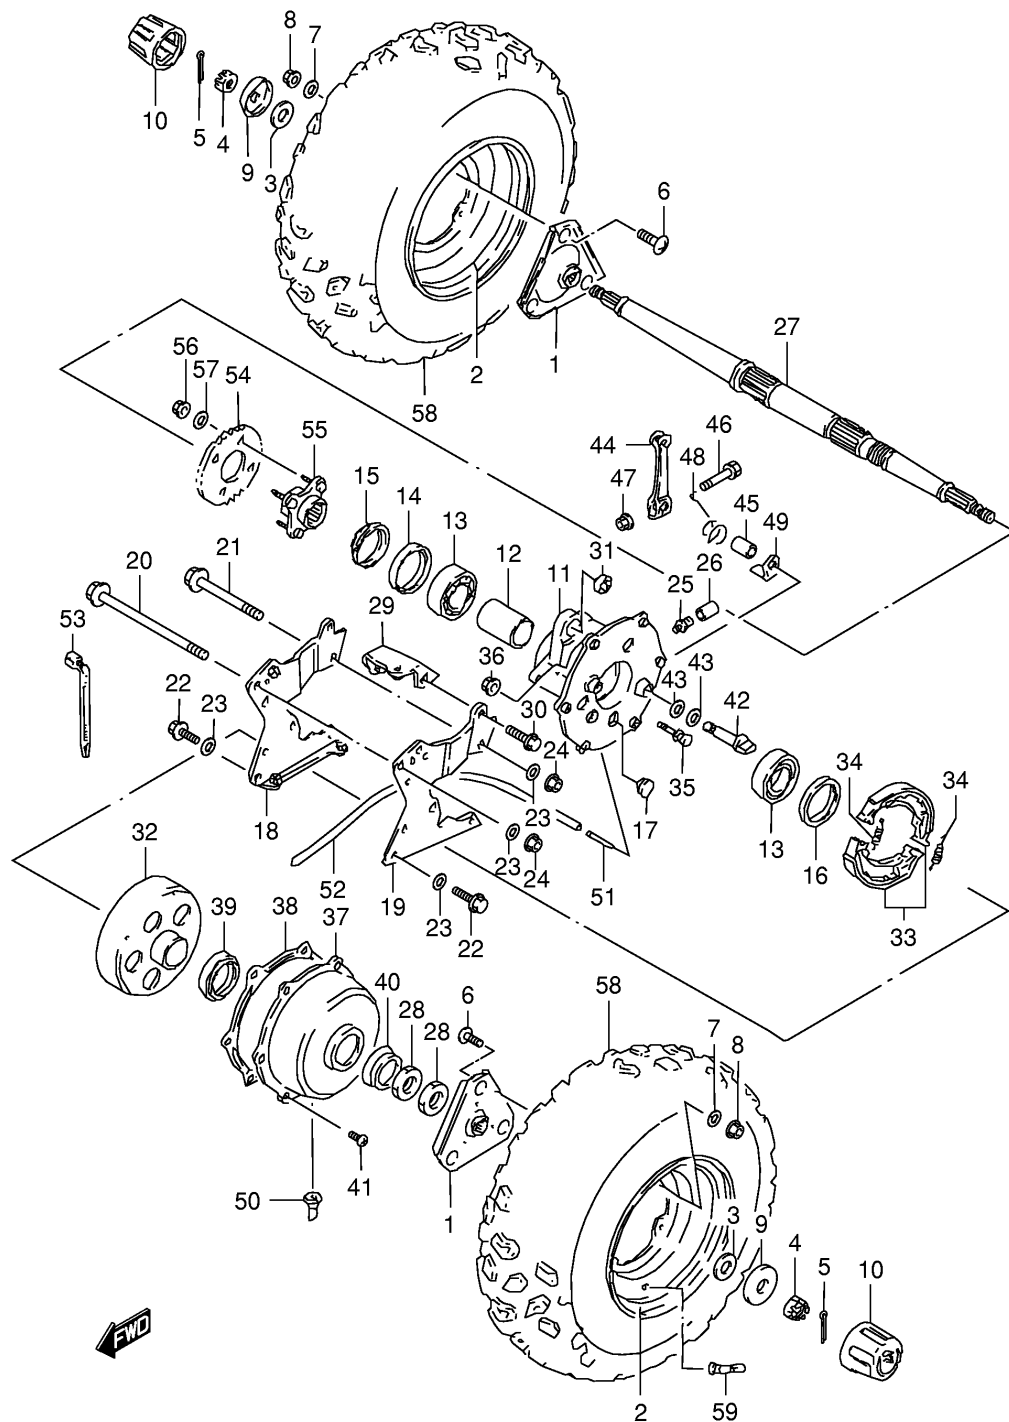

Ref No	Part No	Description
54	64511-40B10	Sprocket, Rear (nt:22)
55	64610-40B00	Flange, Mounting
56	08319-31083	Nut
56	08319-31087	Nut
57	08322-01083	Washer
58	65100-40B51	Tire (at19x7-8) Dunlop
59	43130-78030	Valve Assy, Wheel Tr413

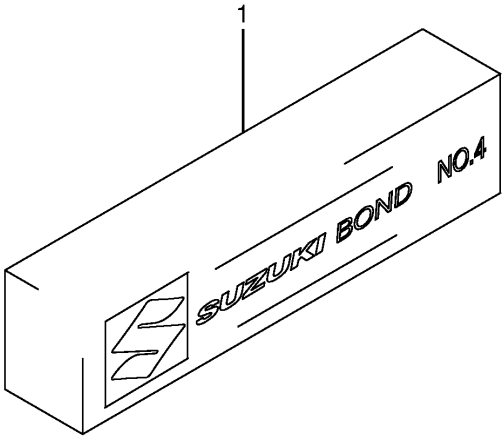

Ref No	Part No	Description
1	99000-31030	Suzuki Bond, No.4
2	99000-32040	Cement, Thread Lock
3	99000-25030	Grease, Super
4	99000-32050	Cement, Thread Lock Super (1342)
4	99104-32030	Cement, Thread Lock Super (1363a)
4	99104-32020	Cement, Thread Lock Super (1361a)
4	99000-32110	Cement, Thread Lock Super (1322)
4	99000-32120	Cement, Thread Lock Super (1324)

