 


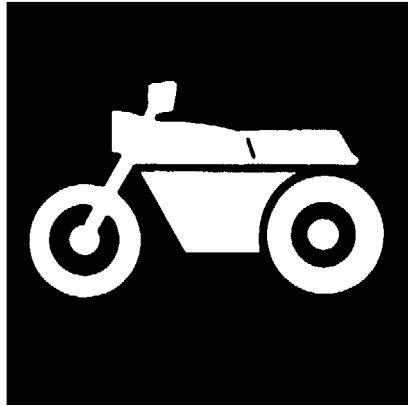

PARTS CATALOGUE

MODEL YEAR 1996

YZ250H1 (4SR2)

OWNERS/SERVICE: LIT-11626-09-99

ASSEMBLY: LIT-11666-10-03

FOREWORD

-INTRODUCTION- To The Yamaha Parts Fiche

This parts fiche lists parts and sub-assemblies for the YZ250H1. When preparing a parts order, please refer to the most recently updated microfiche for this model.

THE YAMAHA PARTS FICHE

SYMBOLS

[]	Inactive, no longer available
U.R.	Use size (thickness) and/or number as required
U.N.	Use as many as you need
T	Number of teeth in a gear
V	Voltage for light bulbs
S	"S" type oil seal or "S" type circlip
SD,SO,SW	"SD", "SO", or "SW" type oil seal
E,R	"E" or "R" type circlip
F/No.	Frame No. (Applicable Machine No.)
L.M.	Locally made
O.L.	Obtain locally
AP	Alternate Part

SUPERSEDED PART NUMBERS

If part 'A' has been superseded by part 'B', the superseding part number "B" will appear in the part number listing with the superseded part number "A" appearing in parentheses immediately following the description.

EXAMPLE:

Ref. No.	Part No.	Description	Qty.
	(Part 'B')	(Part 'A')	
8	123-45678-00-00	CYLINDER (111-12345-00-00)	1

A part that has been supersede to a kit may be identified by a 99999-00000-00 part number appearing in the part number column. The old superseded part number will appear in parentheses immediately following the description. Listed directly below the 99999 part number will be those parts making up the kit. The description of the parts making up the kit will be preceded by a small black dot (.) and the description will be indented one letter space.

EXAMPLE:

Ref. No.	Part No.	Description	Qty.
8	99999-12345-00	CYLINDER (111-12345-00-00)	1
	234-56789-00-00	• HEAD, CYLINDER	1
	345-67890-00-00	• GASKET, CYLINDER	1

SIZES

Except for steel balls (ball sizes are indicated in inches), all parts sizes are indicated in millimeters as in the following examples:

Hose (Rubber or Vinyl)	Inside Diameter - Length
O-Ring	Section Area - Inside Diameter
Washer, Shim, Collar	Inside Diameter - Outside Diameter Thickness (Length)

ASSEMBLIES AND COMPONENT PARTS

Assemblies and their component parts, are identified by an indention of one letter space, and the description is preceded by a dot (.). If two main assemblies are listed, and have the same basic description (i.e.: left and right sides of the same assembly), one will immediately follow the other. If each of these main assemblies is made up of almost the same components, these component parts will be listed immediately under the second main assembly line and will be indicated, as noted above.


If the component is the same for both main assemblies, the quantity indicated will be the total required. If the component is not the same for both main assemblies, the quantity for each separate item will be listed separately.

EXAMPLE:


Description	Qty
CARBURETOR ASSY, LEFT	1
CARBURETOR ASSY, RIGHT	1
. JET, PILOT	2
. NOZZLE, MAIN	2
. LEVER, STARTER, LEFT	1
. LEVER, STARTER, RIGHT	1

APPLICABLE SERIAL NO.

 (1) Engine Serial No.

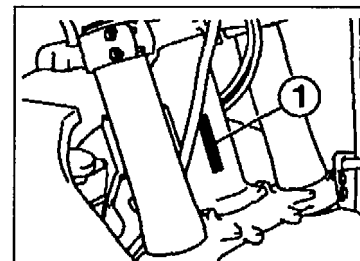

 (2) Frame Serial No.

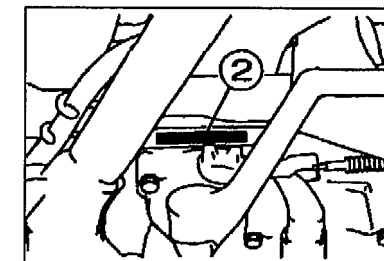


FOREWORD

THE YAMAHA PART NUMBER

The Yamaha part number consists of 12 digits. Each number represents a specific piece of information relating to a replacement part. The following is a guide for reading and interpreting the Yamaha part number.

 BASIC PART NUMBER CONFIGURATION:

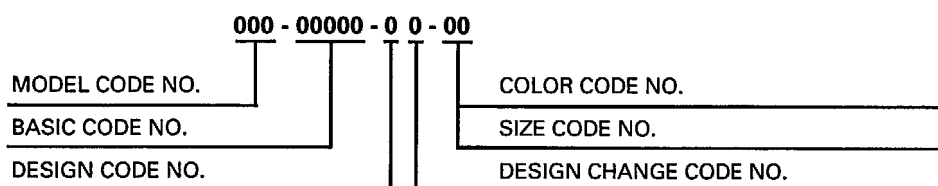

MODEL CODE NUMBER

FIRST THREE DIGITS . . . 000-00000-00-00

 
Every model in each Yamaha product line is assigned a model number to identify that particular model. All component parts are given the model code number relating to the model on which they were first used.

Example: 4DU-00000-00-00 identifies the XJ600SE.
3FA-00000-00-00 identifies the YFA1E.

BASIC CODE NUMBER


MIDDLE FIVE DIGITS . . . 000-00000-00-00

These "Middle Five Digits" indicate the type of part i.e., piston, rings, lower units, etc. The five digits are broken down as follows:

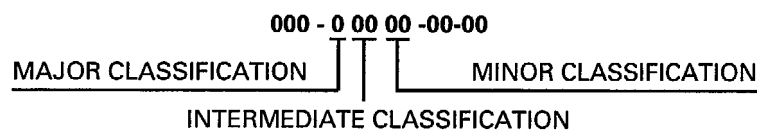

The "Major Classification" indicates the section to which the parts belong, i.e., engine, electrical etc. The "Intermediate" and "Minor Classifications" indicate more specific details.

 Example:

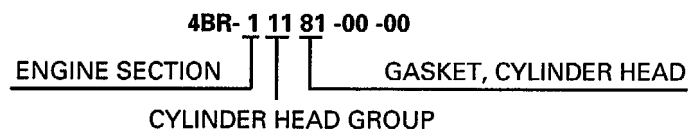

DESIGN CODE NUMBER: 000-00000-00-00

The design code distinguishes like component parts from one another when specification differences are involved. For example, distinguishing a standard size piston ring from an oversized piston ring.

Example:

4BR-11610- 0 0-00 Standard Piston Ring Set for XJ600SE
4BR-11610- 2 0-00 Oversize Piston Ring Set for XJ600SE

DESIGN CHANGE CODE NUMBER: 000-00000-00-00

This code number is used to identify a difference between a new component part and old one when a new part is created by changing the old one.

Example: YFZ350E

2GU-11610-0 0 -00 PISTON RING SET, STD. - ORIGINAL
2GU-11610-0 1 -00 PISTON RING SET, STD. - FIRST DESIGN CHANGE

 
Only major changes to performance, durability, quality, appearance, cost or interchangeability will affect a part number change.

COLOR CODE & SIZE CODE NUMBER: 000-00000-00-00

When applicable, the last two digits of the part number identify:

1. Color Code: The painted color or type of plating or surface treatment used on certain parts.
2. Size Code: The last two digits are also used to show the size of parts (mm). Such as the thickness of shims or the size of pistons.

HARDWARE (Fastener) PART NUMBER CONFIGURATION:

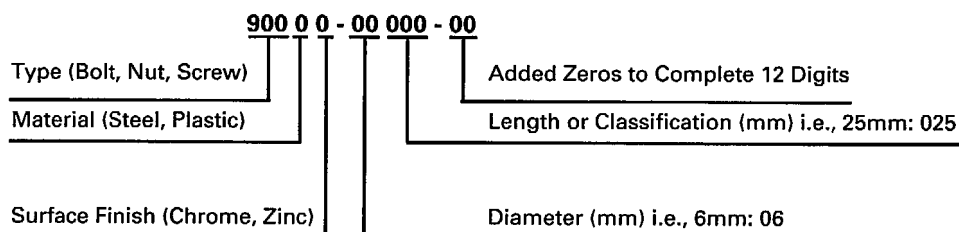

TYPE:

A fastener part number always begins with the number "9" followed by either a 0, 1, 2, 3, 4, 5, 6, 7 or 8 designating one of eight major divisions within this group.

FOREWORD

Example:

- 9 0 000-00000-00 "0" designates various types.
 9 1 000-00000-00 "1" designates bolts, cotter pins, etc.
 9 2 000-00000-00 "2" designates screw, nuts, etc.
 9 3 000-00000-00 "3" designates oil seals, o-rings, bearings, etc.
 9 4 000-00000-00 "4" designates spark plugs.
 9 5 000-00000-00 "5" designates bolts and nuts.
 9 7 000-00000-00 "7" designates ISO bolts.
 9 8 000-00000-00 "8" designates ISO screws and nuts.

The only major divisions which the mechanic should become familiar with are those related to the general hardware (nuts, bolts, and washers), since these are the most commonly used and most often replaced items. By knowing how to interpret the part number, the dimensions of a piece of hardware can be determined. This can be very helpful during major engine repair, and general parts replacement.

BOLT EXAMPLE:

91311 - 06 018 - 00
 6mm outside diameter 18mm in length

EXCEPTION:

It is NOT possible to identify the LENGTH of bolts having a 901 prefix. Only the bolt diameter can be identified with this number.

NUT AND WASHER EXAMPLE:

95301 - 08600 - 00 NUT
 8mm inside diameter

90201 - 25290 - 00 WASHER
 25mm inside diameter

-MODEL LABEL-

A label called "Model Label" is affixed in the location as indicated in (3) below. When using this parts catalogue, please be sure to cross-reference the "model code - production code No." in the catalogue to the "model code - production code No." indicated on the Model Label affixed onto the product concerned.

"MODEL LABEL" INDICATION


¹ xxxx - xxx ³ x	1 Model Type Code 2 Production Code No. 3 Coloring Type	 4TW1-010  A
--	---	---

MODEL CODE - PRODUCTION CODE NUMBER OF MODEL LISTED IN THIS PARTS CATALOG

Model Code	Production Code No.	Country (destination)
4SR2	010	USA

Color Code	Color Name	Abbreviation
206	PURPLISH WHITE SOLID 1	PWS1

 CYLINDER HEAD

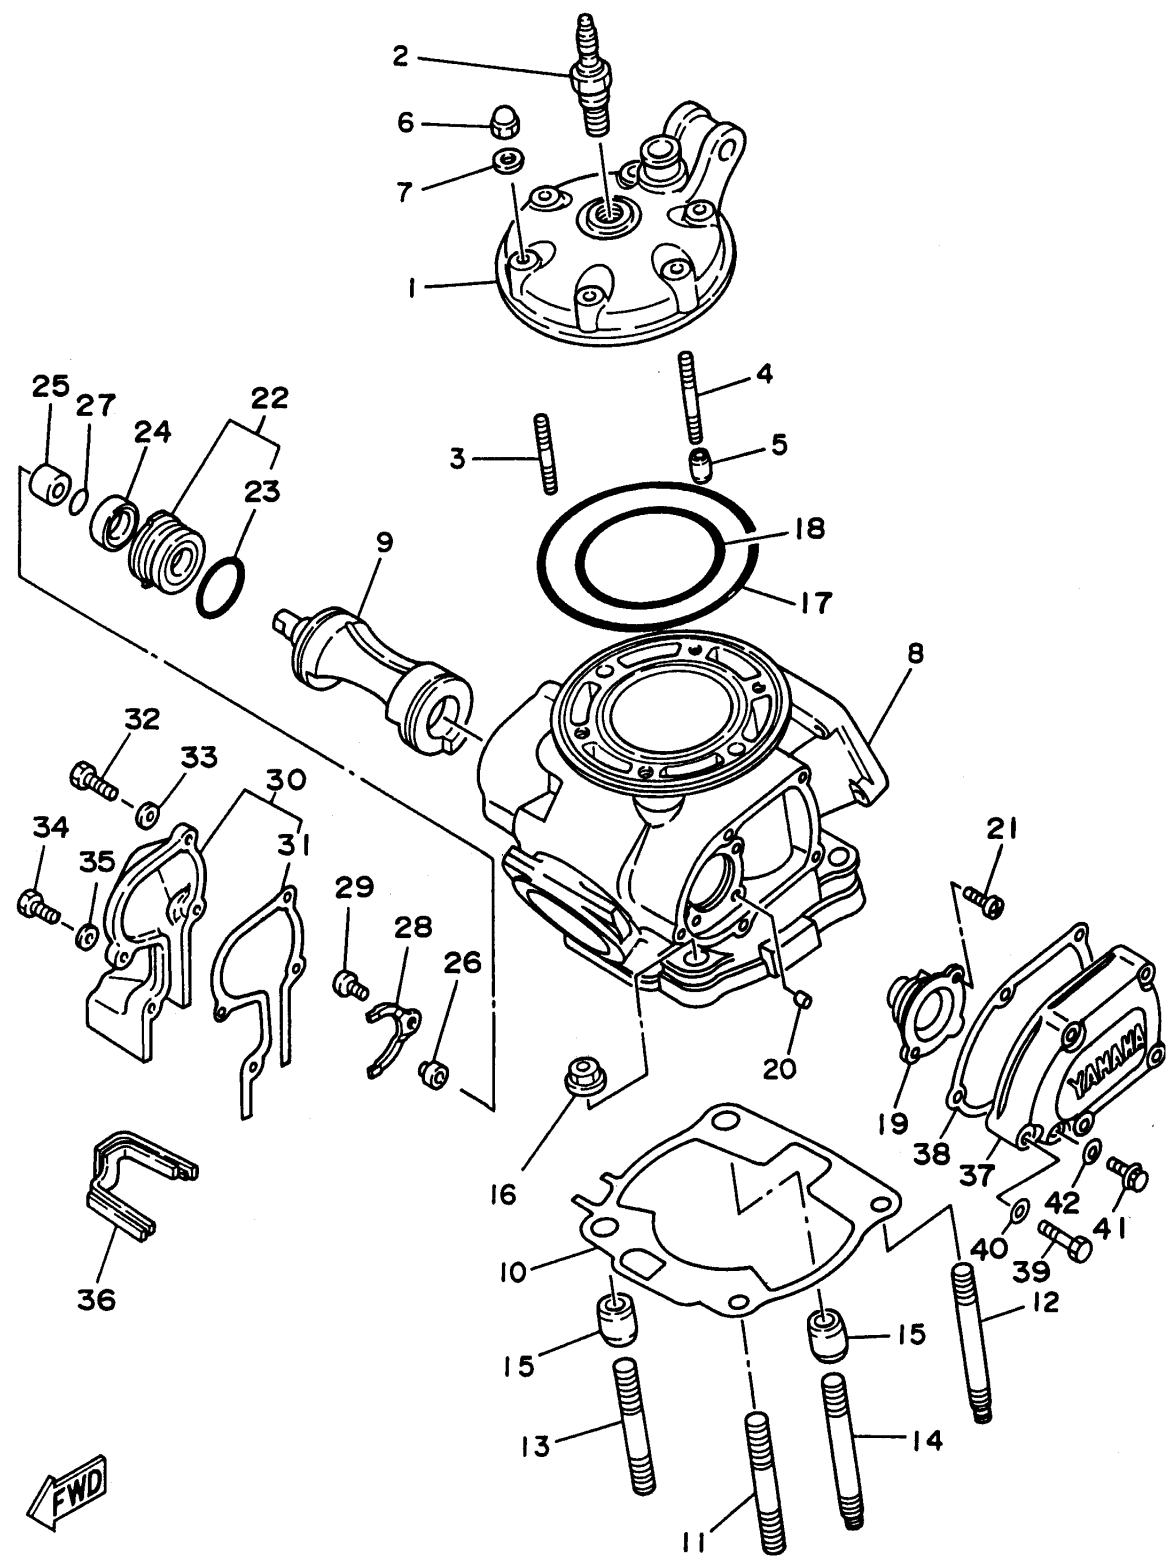


Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-11111-00-00	HEAD, CYLINDER 1	1	
2	NGK-BR8EG-00-00	PLUG, SPARK (NGK BR8EG) .	1	UR
3	90116-08394-00	BOLT, STUD	4	
4	90116-08392-00	BOLT, STUD	2	
5	99510-10114-00	PIN, DOWEL	2	
6	90176-08026-00	NUT, CROWN	6	
7	90201-08087-00	WASHER, PLATE	6	
8	4SR-11311-00-00	CYLINDER 1	1	
9	4SR-1131A-00-00	VALVE 1	1	
10	2VM-11351-10-00	GASKET, CYLINDER	1	
11	90116-10314-00	BOLT, STUD	1	
12	90116-10547-00	BOLT, STUD	1	
13	90116-10314-00	BOLT, STUD	1	
14	90116-10547-00	BOLT, STUD	1	
15	99530-14016-00	PIN, DOWEL	2	
16	95707-10500-00	NUT, FLANGE	4	
17	93211-11770-00	O-RING	1	
18	93210-77363-00	O-RING	1	
19	3JE-Y113E-00-00	HOLDER 1	1	
20	93604-08071-00	PIN, DOWEL	1	
21	98507-05012-00	SCREW, PAN HEAD	2	
22	5X4-Y113F-10-00	HOLDER 2 ASSEMBLY	1	
23	93210-270A8-00	. O-RING	1	
24	93104-16074-00	OIL SEAL	1	
25	90387-102W0-00	COLLAR	1	
26	3JE-11937-01-00	BOSS, LEVER	1	
27	93210-09192-00	O-RING	1	
28	1LX-11915-00-00	PLATE, THRUST 1	1	
29	98507-05008-00	SCREW, PAN HEAD	1	

CONTINUED ON NEXT FRAME ➤


 4SR1100-6010

 CYLINDER HEAD

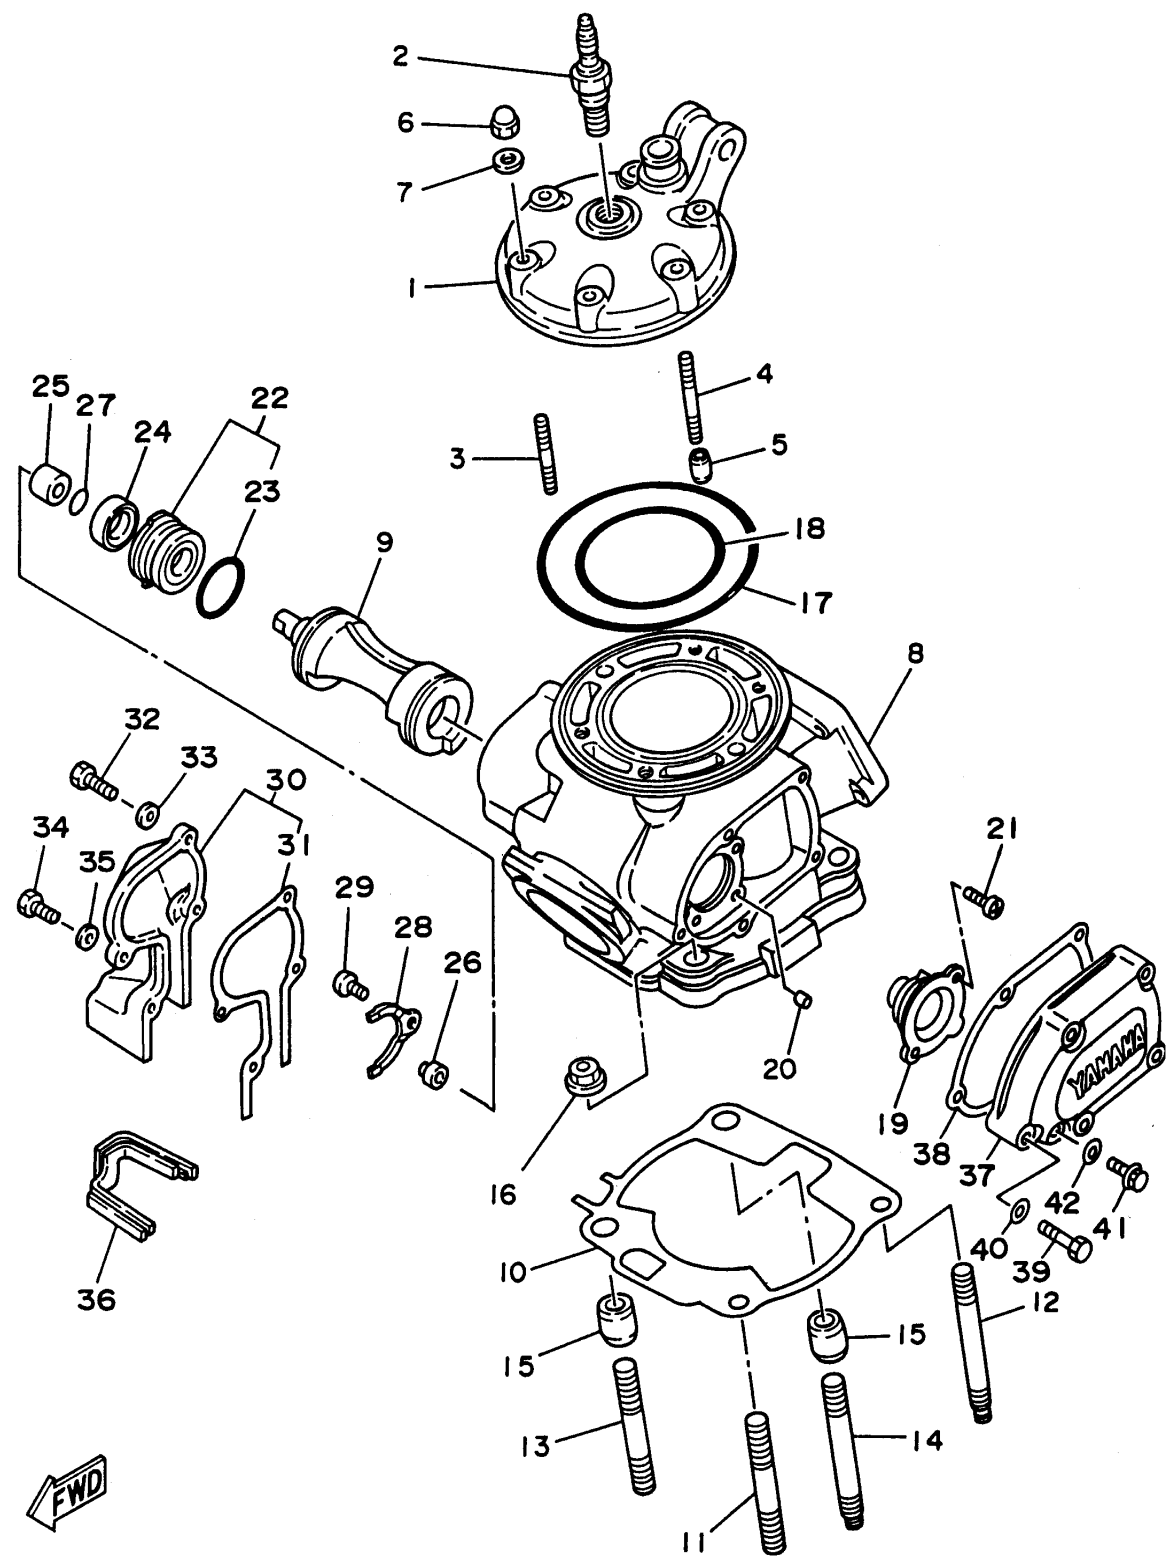

Ref. No.	Part Number	Description	Qty	Remarks
30	3SP-11992-11-00	HOUSING 2	1	
31	3SP-11993-10-00	. GASKET	1	
32	97027-05020-00	. BOLT	2	
33	92907-05600-00	WASHER, PLATE	2	
34	97007-05016-00	BOLT	2	
35	92907-05600-00	WASHER, PLATE	2	
36	2VM-11995-01-00	SEAL, HOUSING	1	
37	4MX-1131M-00-00	COVER	1	
38	4MX-11354-00-00	GASKET	1	
39	97017-05030-00	BOLT	5	
40	92907-05600-00	WASHER, PLATE	5	
41	95027-06008-00	BOLT, FLANGE	1	
42	90430-06014-00	. GASKET	1	

 4SR1100-6010

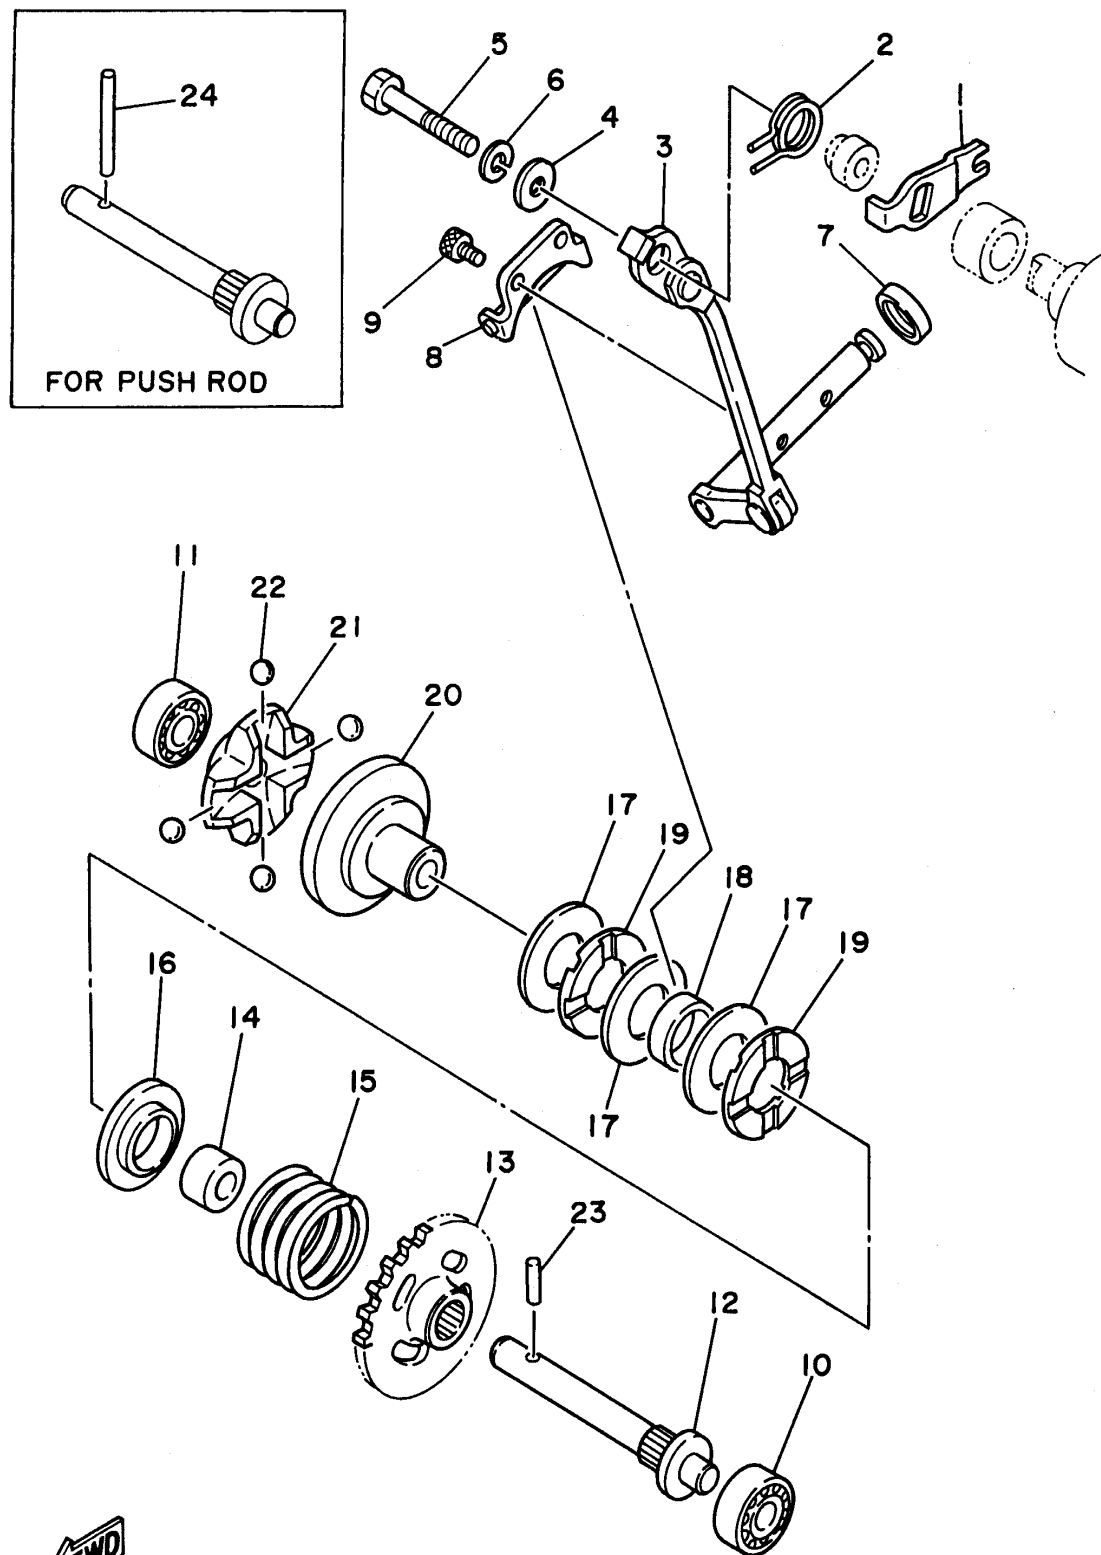


GOVERNOR

Ref. No.	Part Number	Description	Qty	Remarks
1	3JE-11931-01-00	LEVER	1	
2	90508-14783-00	SPRING, TORSION	1	
3	3SP-11990-00-00	PUSH ROD ASSEMBLY	1	
4	90201-057H5-00	WASHER, PLATE	1	
5	97017-05030-00	BOLT	1	
6	92907-05100-00	WASHER, SPRING	1	
7	93104-08040-00	OIL SEAL	1	
8	3JE-11922-01-00	FORK, GOVERNOR	1	
9	91317-04006-00	BOLT	2	
10	93300-60814-00	BEARING (608M4ML01)	1	NMB
11	93300-60814-00	BEARING (608M4ML01)	1	NMB
12	5X4-11921-02-00	SHAFT, GOVERNOR	1	
13	24X-11953-01-00	GEAR, GOVERNOR	1	
14	90560-08213-00	SPACER	1	
15	90501-244J5-00	SPRING, COMPRESSION	1	
16	5X4-11952-00-00	PLATE	1	
17	90201-154E9-00	WASHER, PLATE	3	
18	90387-152F2-00	COLLAR	1	
19	93340-21505-00	BEARING	2	
20	5X5-11912-01-00	RETAINER, WEIGHT	1	
21	5X5-11911-01-00	RETAINER	1	
22	93521-64032-00	BALL	4	
23	93603-14179-00	PIN, DOWEL	1	
24	93604-29184-00	PIN, DOWEL	1	AP FOR PUSH ROD

4EW1100-3020

CRANKSHAFT - PISTON


Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-11631-00-A0	PISTON (STD)	1	UR
	4SR-11631-00-B0	PISTON, (STD)	1	UR
	4SR-11631-00-C0	PISTON (STD)	1	UR
	4SR-11631-00-D0	PISTON (STD)	1	UR
2	4JX-11603-00-00	PISTON RING SET (STD)	1	
3	2VM-11633-01-00	PIN, PISTON	1	
4	93450-19052-00	CIRCLIP	2	
5	93310-418E9-00	BEARING, CYLINDRICAL	1	
6	4SR-11400-00-00	CRANKSHAFT ASSEMBLY	1	
7	4SR-11410-00-00	. CRANKSHAFT	1	
8	4SR-11420-00-00	. CRANKSHAFT	1	
9	4SR-11681-00-00	. PIN, CRANK 1	1	
10	5X5-11651-03-00	. ROD, CONNECTING	1	
11	93310-425P2-00	. BEARING, CYLINDRICAL	1	
12	90209-25085-00	. WASHER	2	
13	93306-37804-00	BEARING	1	
14	93102-22363-00	OIL SEAL	1	
15	90280-03017-00	KEY, WOODRUFF	1	
16	93306-37804-00	BEARING	1	
17	93103-40091-00	OIL SEAL, SW-TYPE	1	

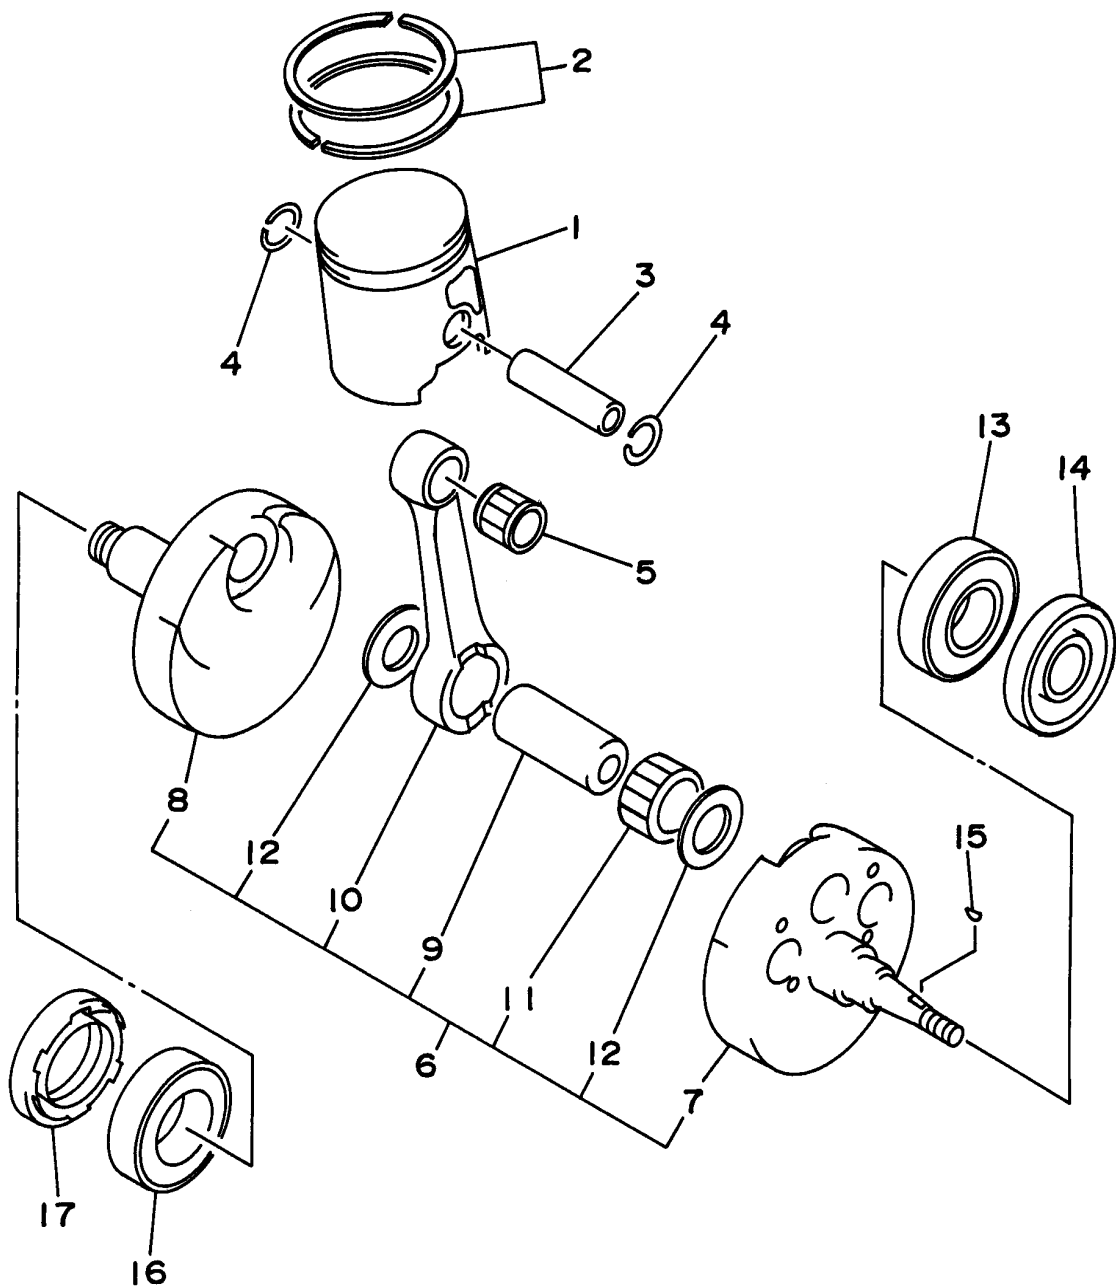 

4SR1100-6030



 
RADIATOR - HOSE

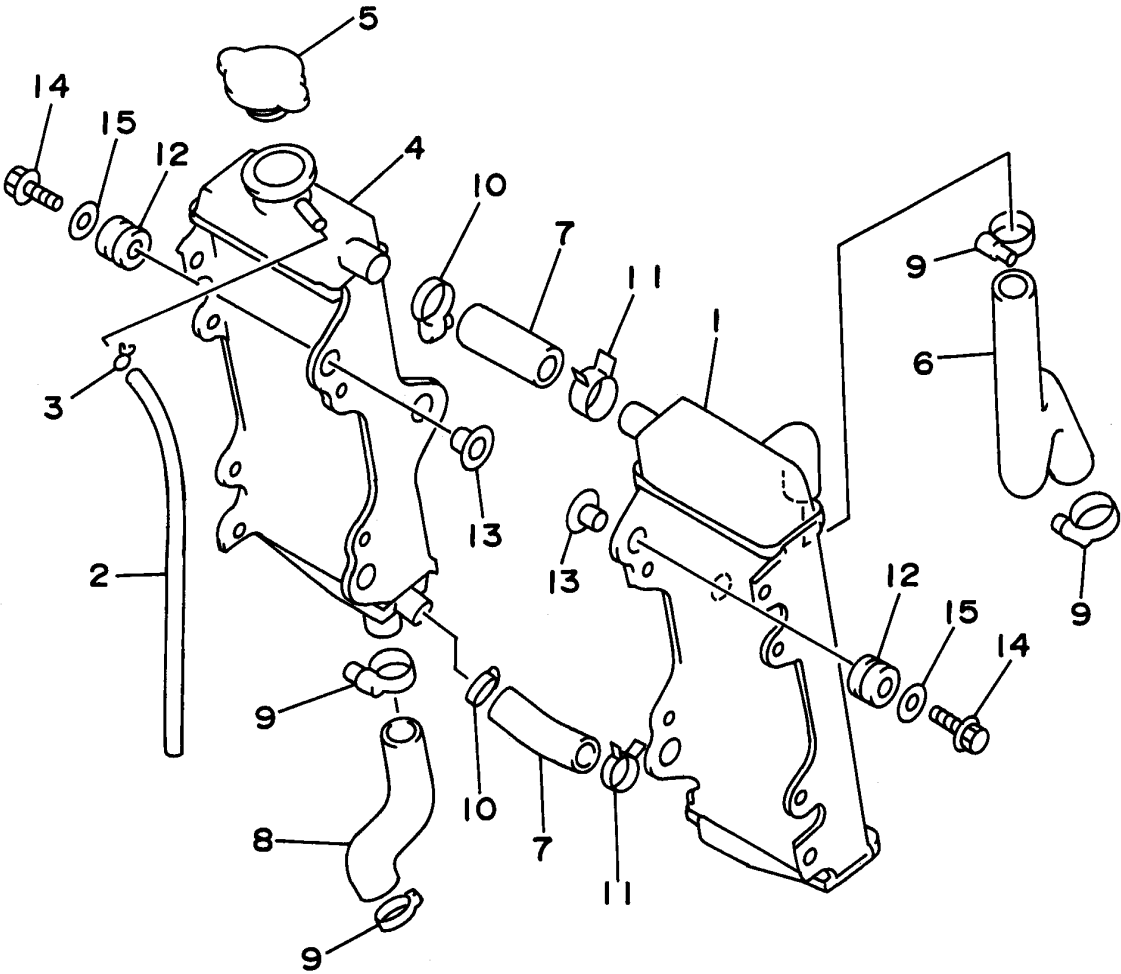

Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-1240A-00-00	RADIATOR ASSEMBLY	1	
2	91A20-05080-00	TUBE, FLEXIBLE VINYL	1	
3	90467-09006-00	CLIP	1	
4	4SR-12461-00-00	RADIATOR ASSEMBLY	1	
5	22W-12462-00-00	CAP, RADIATOR	1	
6	4SR-12481-00-00	PIPE 1	1	
7	4SS-12482-00-00	PIPE 2	2	
8	4SR-12484-00-00	PIPE 4	1	
9	90450-28014-00	HOSE CLAMP ASSEMBLY ...	4	
10	90450-25037-00	HOSE CLAMP ASSEMBLY ...	2	
11	90467-21068-00	CLIP	2	
12	90480-15528-00	GROMMET	6	
13	90387-0700G-00	COLLAR	6	
14	95027-06030-00	BOLT, FLANGE	6	
15	90201-063J2-00	WASHER, PLATE	6	



 
4SR1100-6050

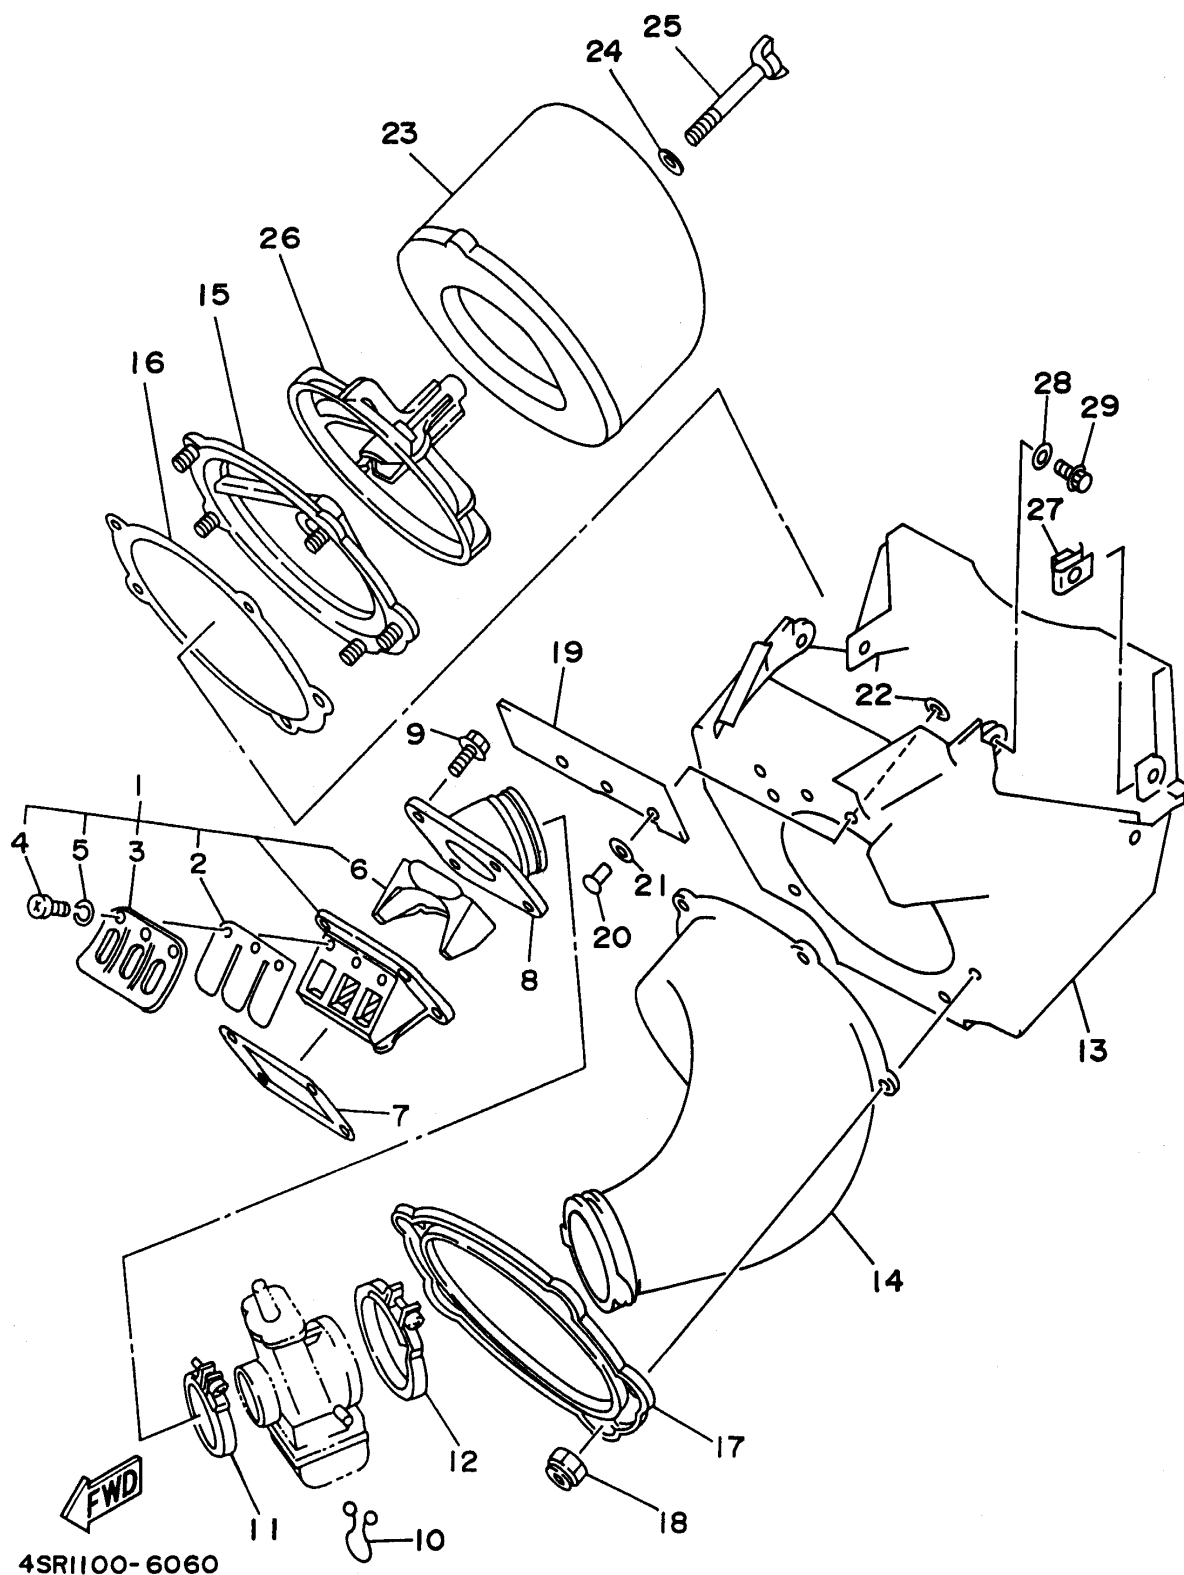

INTAKE

Ref. No.	Part Number	Description	Qty	Remarks
1	4MX-13610-00-00	REED VALVE ASSEMBLY	1	
2	3SP-13613-00-00	. REED, VALVE	2	
3	4DA-13616-00-00	. STOPPER, REED VALVE	2	
4	98507-03008-00	. SCREW, PAN HEAD	6	
5	92990-03100-00	. WASHER, SPRING	6	
6	4MX-13625-00-00	. SPACER, REED VALVE	1	
7	2K7-13621-10-00	GASKET, VALVE SEAT	1	
8	4SR-13565-00-00	JOINT, CARBURETOR	1	
9	95027-06020-00	BOLT, FLANGE	4	
10	90464-16039-00	CLAMP	1	
11	90450-51070-00	HOSE CLAMP ASSY	1	
12	90450-70072-00	HOSE CLAMP ASSY	1	
13	4SS-14401-00-00	AIR CLEANER CASE ASSEMBLY	1	
14	4SR-14453-00-00	JOINT, AIR CLEANER 1	1	
15	3JD-14459-00-00	HOLDER, GUIDE	1	
16	3JD-14462-00-00	SEAL	1	
17	3JD-14477-00-00	PLATE	1	
18	95617-05100-00	NUT, U	5	
19	4SS-14417-00-00	COVER 1	1	
20	90267-32119-00	RIVET, BLIND	3	
21	90201-03644-00	WASHER, PLATE	3	
22	92907-03200-00	WASHER	3	
23	4SS-14451-00-00	ELEMENT, AIR CLEANER	1	
24	90209-06096-00	WASHER	2	
25	90122-06035-00	BOLT, WING	2	
26	3JD-14458-00-00	GUIDE	1	
27	90183-06023-00	NUT, SPRING	4	
28	90201-061A5-00	WASHER, PLATE	2	

 
CONTINUED ON NEXT FRAME ►

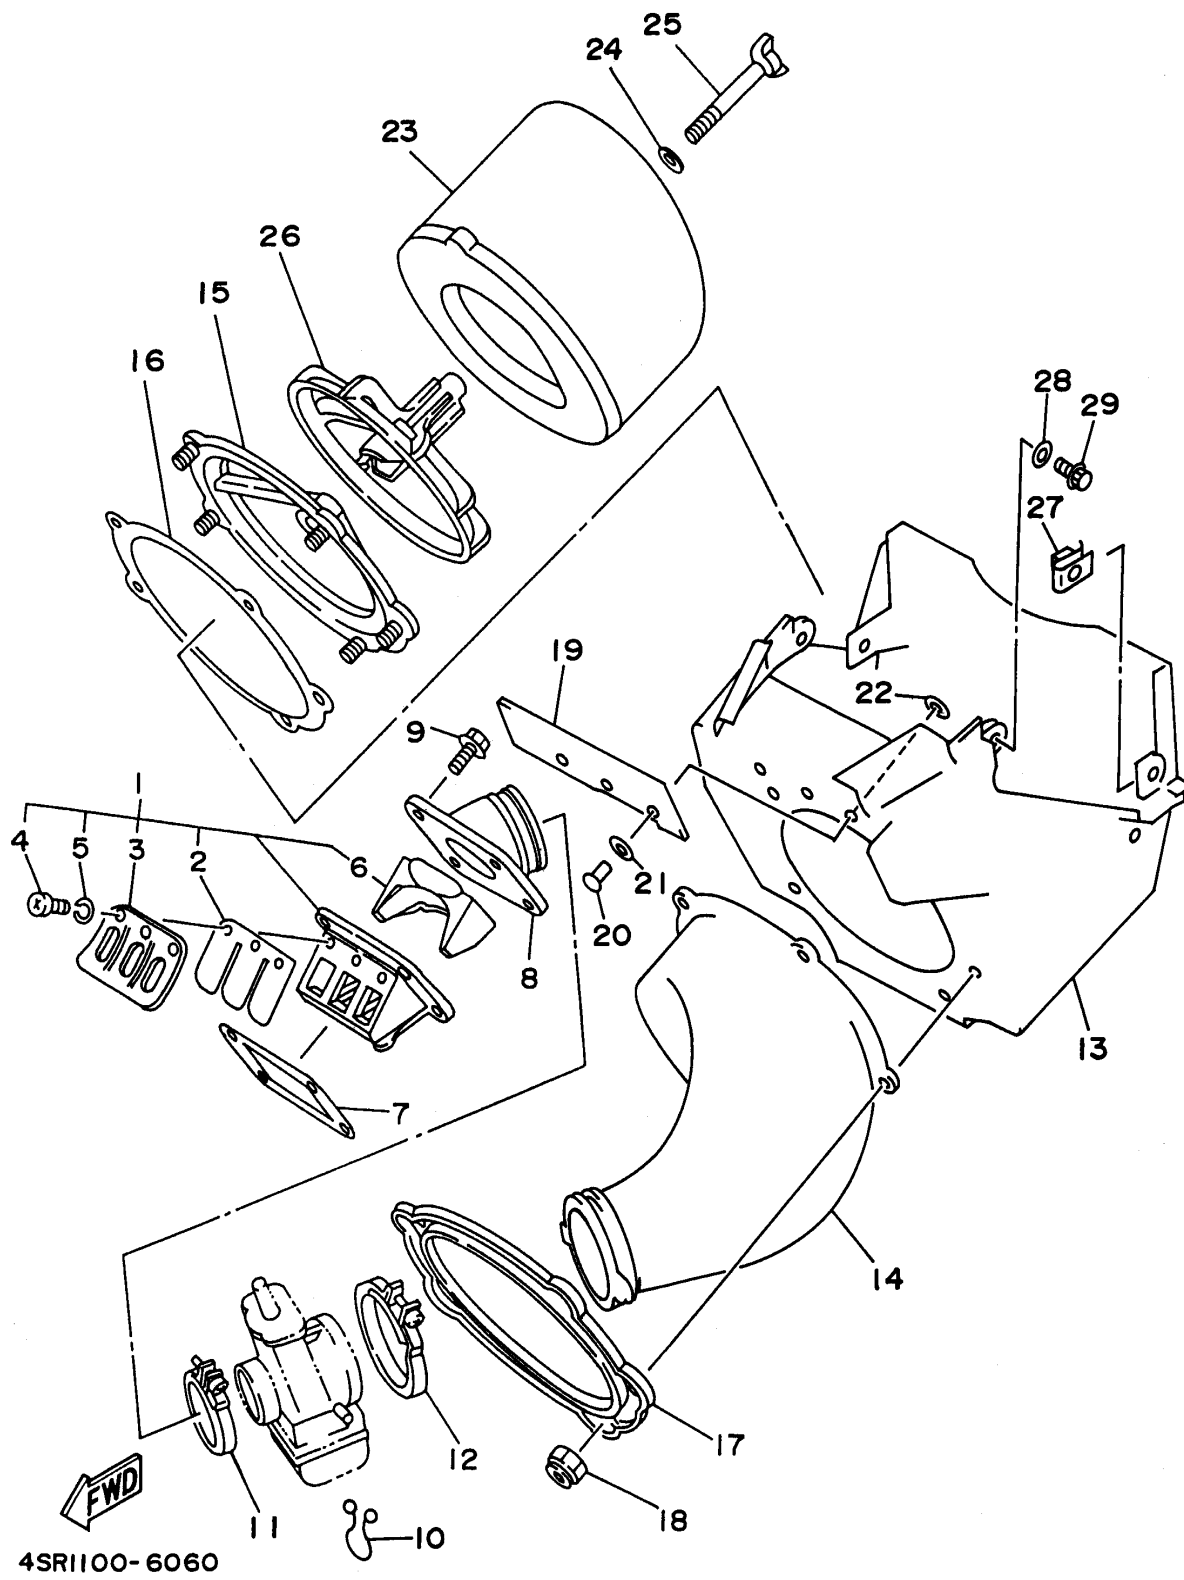

INTAKE

Ref. No.	Part Number	Description	Qty	Remarks
29	90105-06553-00	BOLT, WASHER BASED	 2	

 CARBURETOR

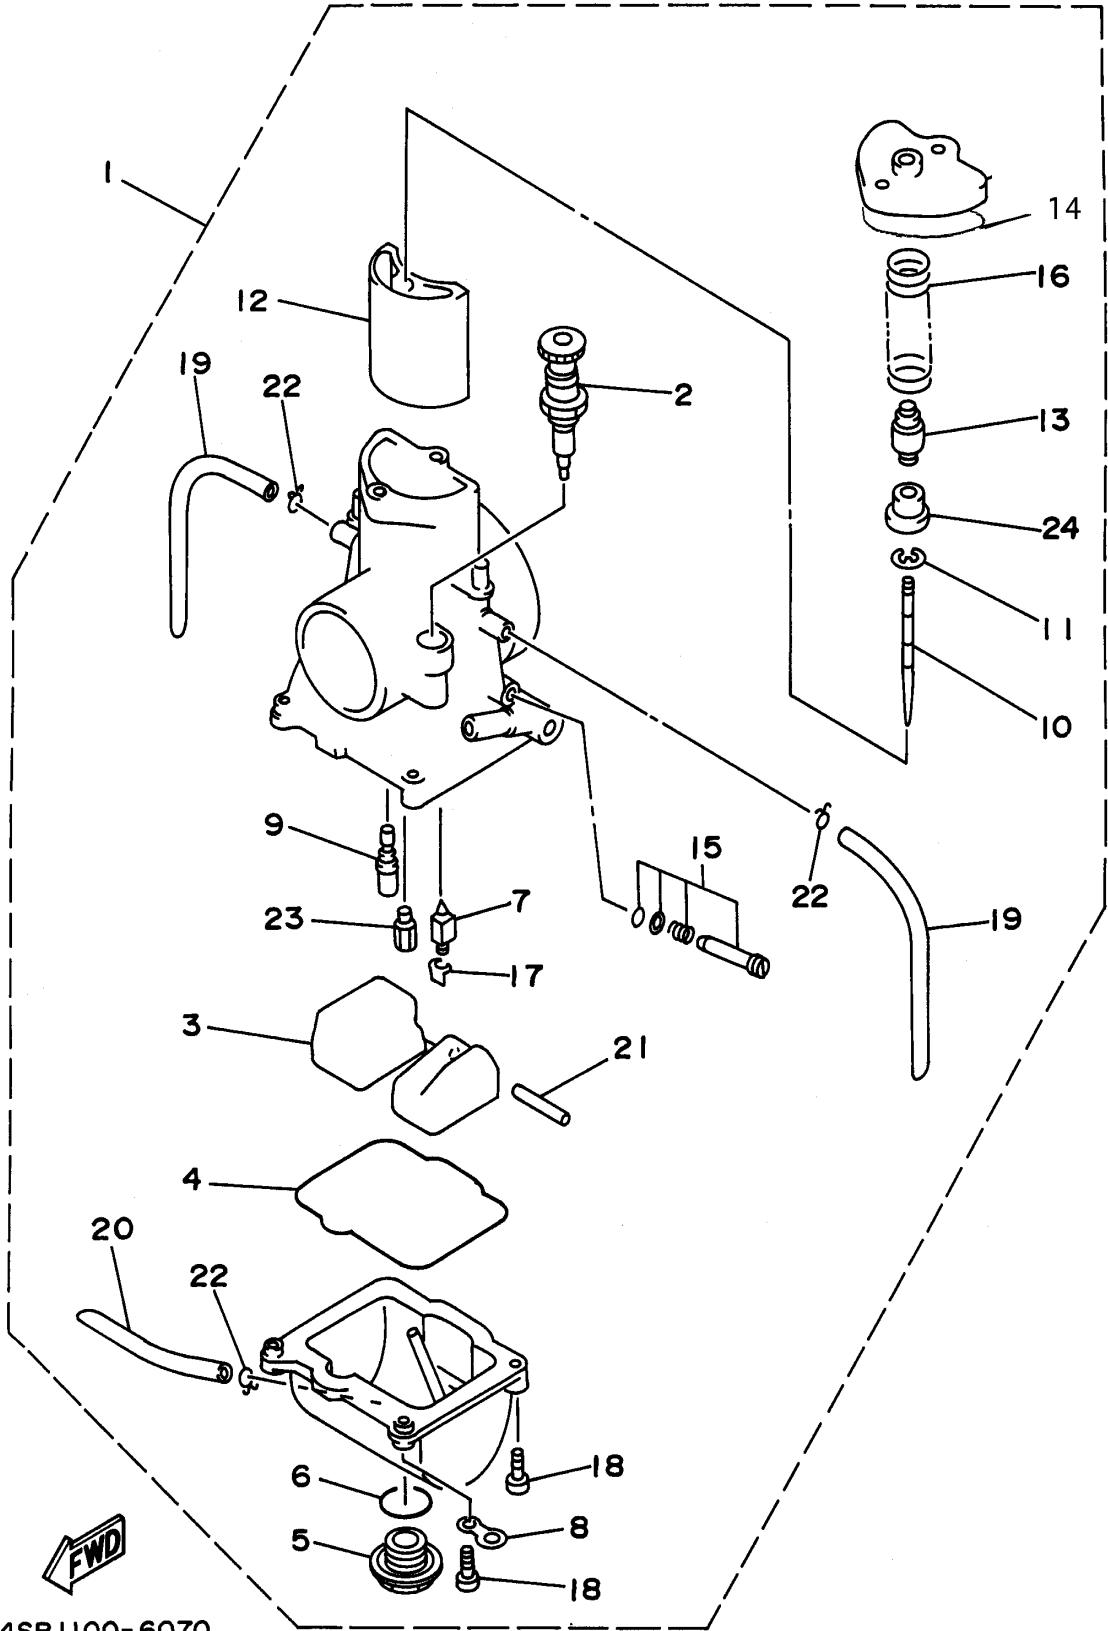


4SR1100-6070

Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-14101-00-00	CARBURETOR ASSEMBLY 1	1	
2	4SR-14171-00-00	. PLUNGER, STARTER	1	
3	4SR-14985-00-00	. FLOAT	1	
4	4MX-14984-00-00	. GASKET, FLOAT CHAMBER	1	
5	4MX-14115-00-00	. PLUG, SCREW	1	
6	4MX-14561-00-00	. O-RING	1	
7	4MX-14392-00-00	. VALVE, NEEDLE	1	
8	4MX-14146-00-00	. PLATE	2	
9	4MX-14948-04-00	. JET, SLOW (#42)	1	STD
	4MX-14948-05-00	. JET, SLOW (#45)	1	AP
	4MX-14948-06-00	. JET, SLOW (#48)	1	AP
	4MX-14948-07-00	. JET, SLOW (#50)	1	AP
	4MX-14948-08-00	. JET, SLOW (#52)	1	AP
	4MX-14948-09-00	. JET, SLOW (#55)	1	AP
	4SR-14948-02-00	. JET, SLOW (#38)	1	AP
	4SR-14948-03-00	. JET, SLOW (#40)	1	AP
10	4SR-14916-CC-00	. NEEDLE (N3CC)	1	AP
	4SR-14916-CD-00	. NEEDLE (N3CD)	1	STD
	4SR-14916-CE-00	. NEEDLE (N3CE)	1	AP
	4SR-14916-EC-00	. NEEDLE (N3EC)	1	AP
	4SR-14916-ED-00	. NEEDLE (N3ED)	1	AP
	4SR-14916-EE-00	. NEEDLE (N3EE)	1	AP
11	4MX-14919-00-00	. CLIP	1	
12	4SR-14340-A6-00	. VALVE ASSEMBLY	1	
13	4SR-14261-00-00	. HOLDER	1	
14	4SR-14126-00-00	. GASKET	1	
15	4SR-14105-00-00	. PILOT SCREW SET	1	
16	4MX-14131-00-00	. SPRING, THROTTLE VALVE	1	
17	663-14159-00-00	. CLIP	1	

CONTINUED ON NEXT FRAME ➤

 CARBURETOR

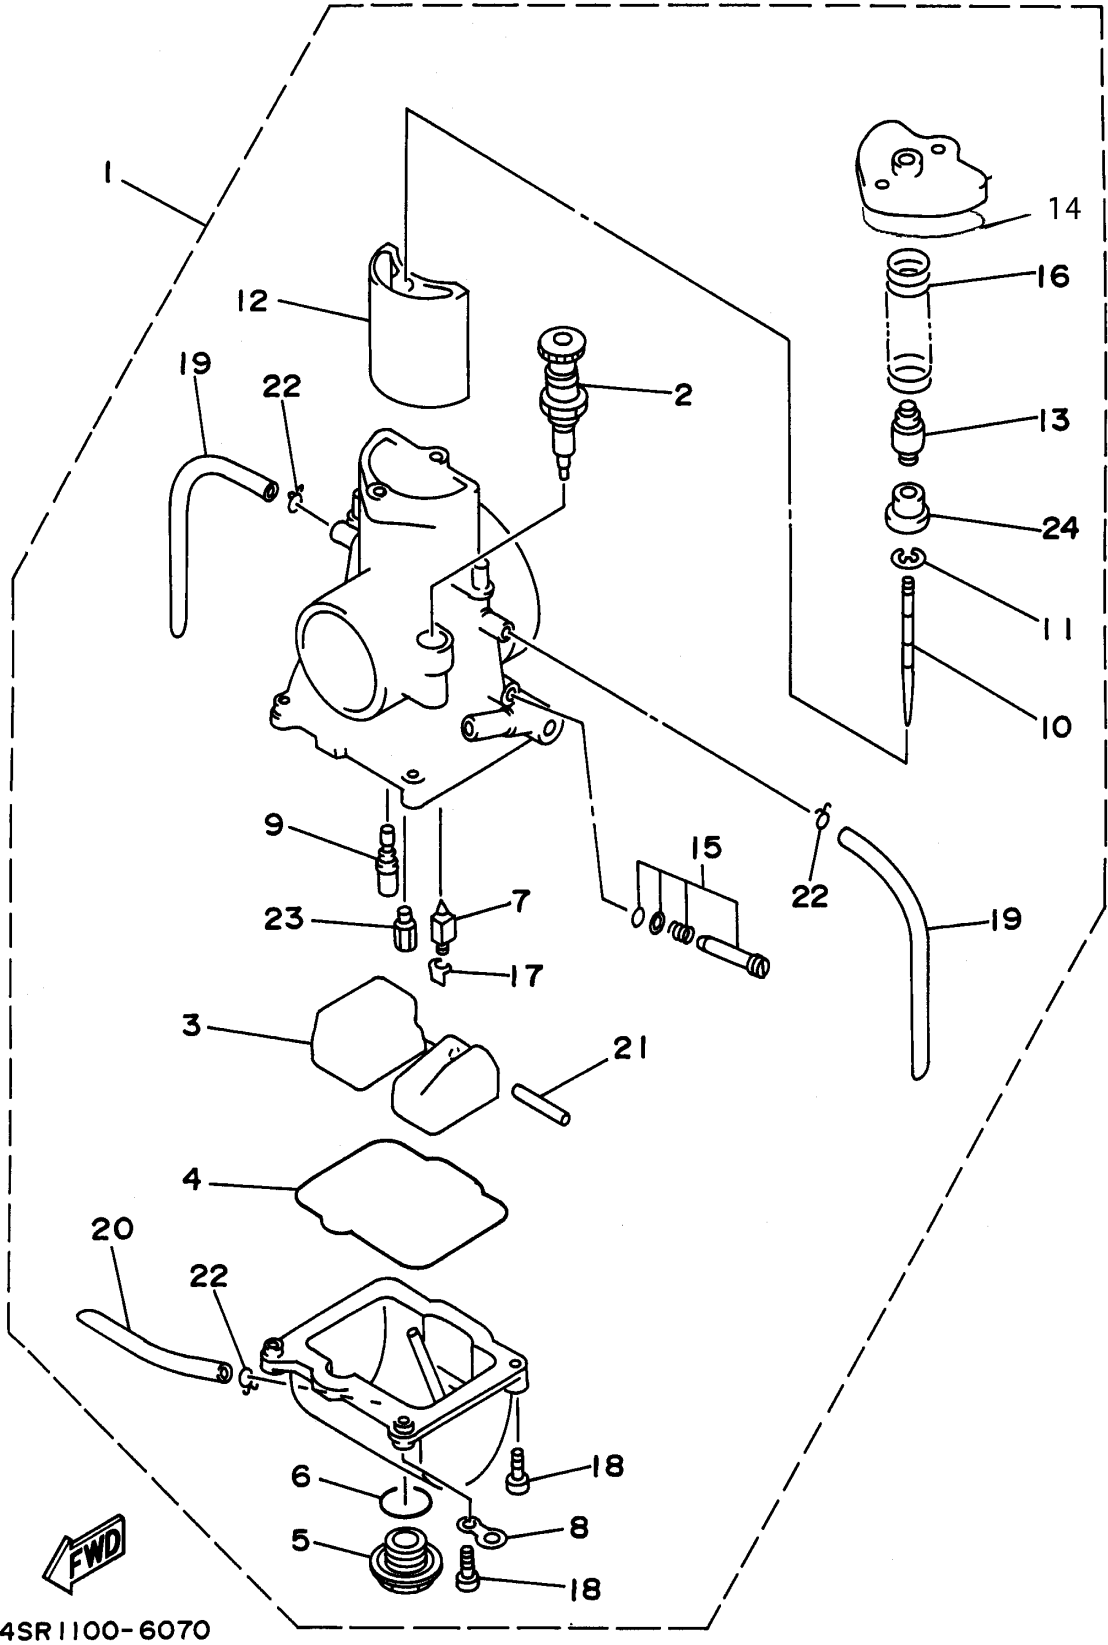


4SR1100-6070

Ref. No.	Part Number	Description	Qty	Remarks
18	98507-04014-00	. SCREW, PAN HEAD	4	
19	4MX-14197-00-00	. PIPE	2	
20	4MX-14196-00-00	. PIPE	1	
21	663-14548-00-00	. PIN, FLOAT ARM	1	
22	3TJ-14137-40-00	. CLIP	3	
23	4MX-14943-40-00	. JET, MAIN (#165)	1	AP
	4MX-14943-41-00	. JET, MAIN (#170)	1	AP
	4MX-14943-42-00	. JET, MAIN (#175)	1	STD
	4MX-14943-43-00	. JET, MAIN (#180)	1	AP
	4MX-14943-44-00	. JET, MAIN (#185)	1	AP
	4MX-14943-45-00	. JET, MAIN (#190)	1	AP
	4MX-14943-91-00	. JET, MAIN (#168)	1	AP
	4MX-14943-92-00	. JET, MAIN (#172)	1	AP
	4MX-14943-93-00	. JET, MAIN (#178)	1	AP
	4MX-14943-94-00	. JET, MAIN (#182)	1	AP
	4MX-14943-95-00	. JET, MAIN (#188)	1	AP
	4SR-14943-90-00	. JET, MAIN (#162)	1	AP
24	4MX-14194-00-00	. RING	1	


EXHAUST

Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-14610-00-00	EXHAUST PIPE ASSEMBLY 1 .	1	
2	93210-472A9-00	O-RING	1	
3	90507-20052-00	SPRING, TENSION	3	
4	565-14771-00-00	STAY, MUFFLER 1	1	
5	483-14781-02-00	STAY, MUFFLER 2	1	
6	95027-06012-00	BOLT, FLANGE	2	
7	90119-06185-00	BOLT, WITH WASHER	1	
8	95027-08012-00	BOLT, FLANGE	1	
9	3JE-14615-01-00	JOINT, EXHAUST 1	1	
10	4SR-14753-00-00	SILENCER, EXHAUST	1	
11	92017-06010-00	. BOLT, BUTTON HEAD	2	
12	4SR-1469A-00-00	. FIBER	1	
13	90480-16561-00	GROMMET	2	
14	90387-063G3-00	COLLAR	2	
15	95027-06025-00	BOLT, FLANGE	1	
16	90201-063J2-00	WASHER, PLATE	1	

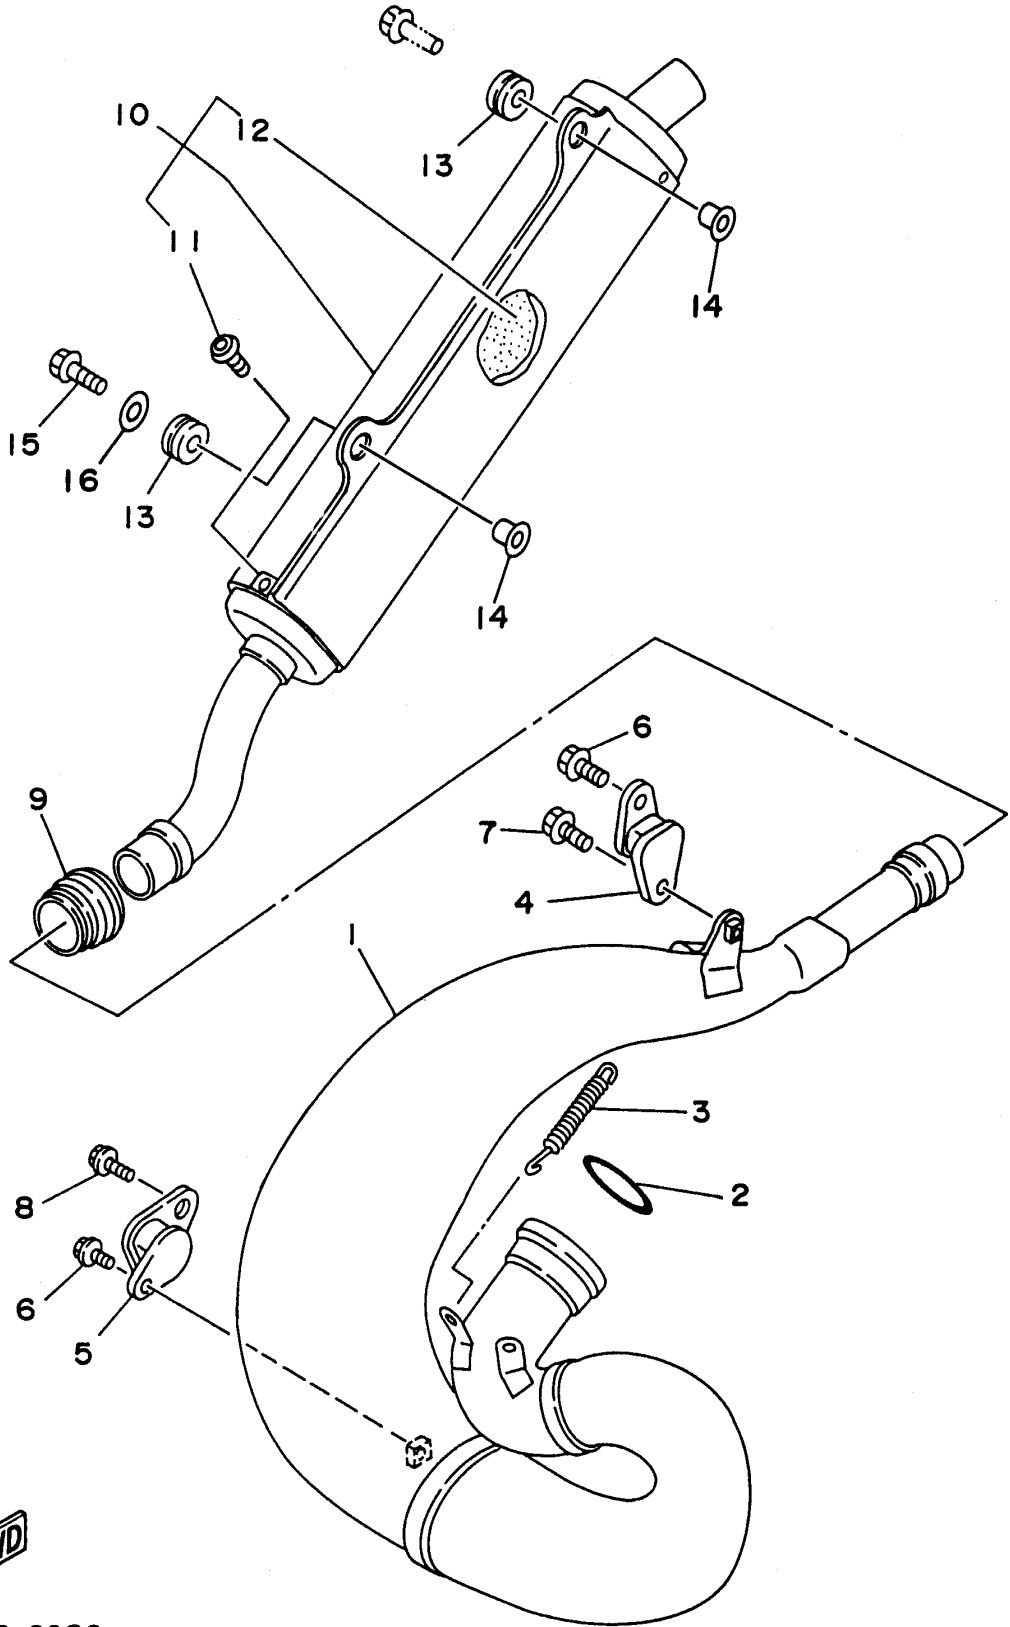 



4SR1100-6080

 CRANKCASE

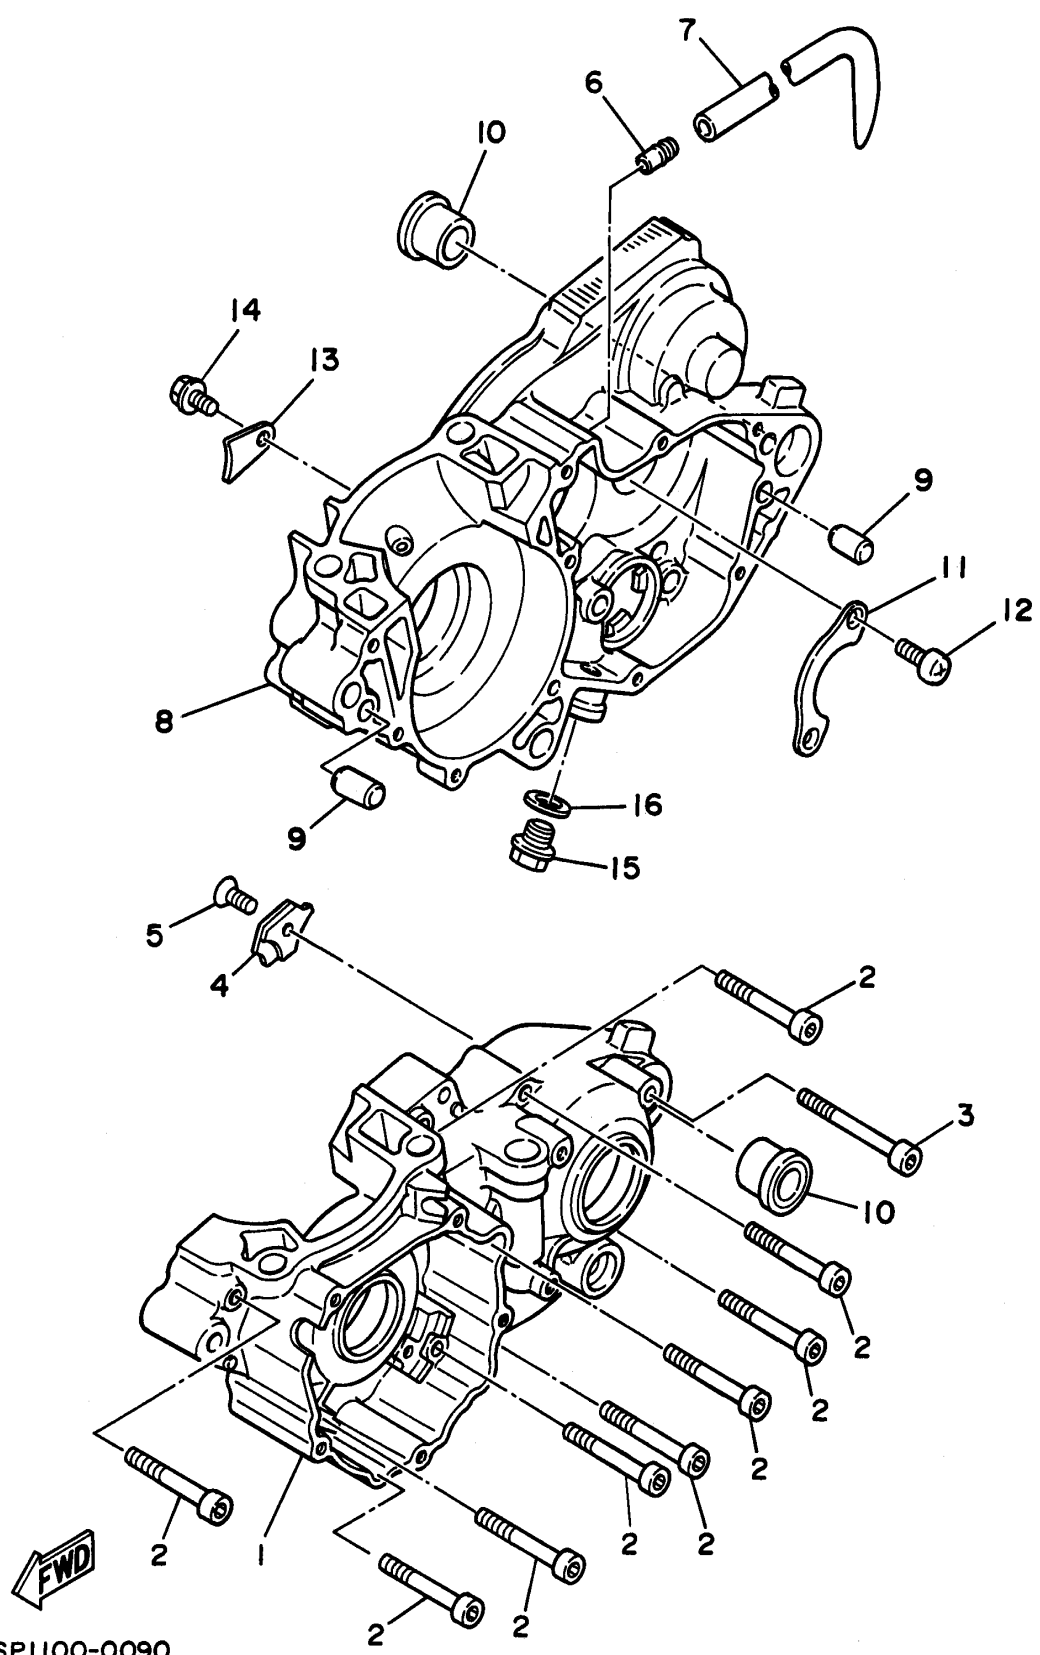

Ref. No.	Part Number	Description	Qty	Remarks
1	2VM-15111-06-00	CRANKCASE 1	1	
2	91317-06050-00	BOLT	9	
3	91317-06070-00	BOLT	1	
4	3SP-15381-00-00	PLATE, BEARING COVER	1	
5	90151-06037-00	SCREW, COUNTERSUNK	1	
6	353-13115-01-00	CONNECTOR, SUCTION PIPE .	1	
7	90445-086A8-00	HOSE	1	
8	2VM-15121-03-00	CRANKCASE 2	1	
9	99510-12016-00	PIN, DOWEL	2	
10	90387-160H4-00	COLLAR	2	
11	4L0-17471-00-00	PLATE, COVER	1	
12	90157-06077-00	SCREW, PAN HEAD	2	
13	4V4-15118-00-00	HOLDER	1	
14	90105-06556-00	BOLT, WASHER BASED	1	
15	90340-12097-00	PLUG, STRAIGHT SCREW	1	
16	90430-12227-00	GASKET	1	

  3SP1100-0090

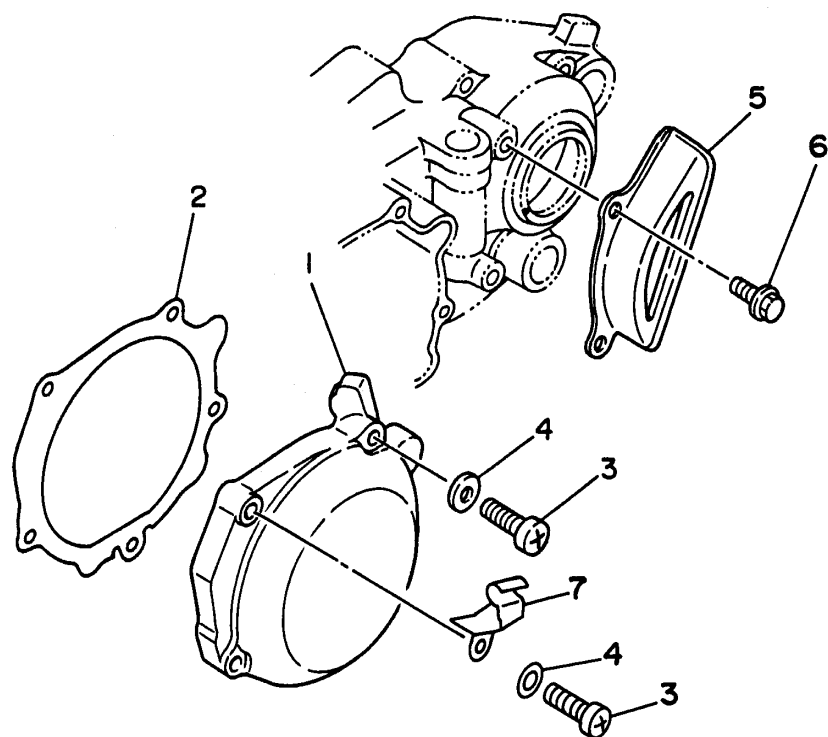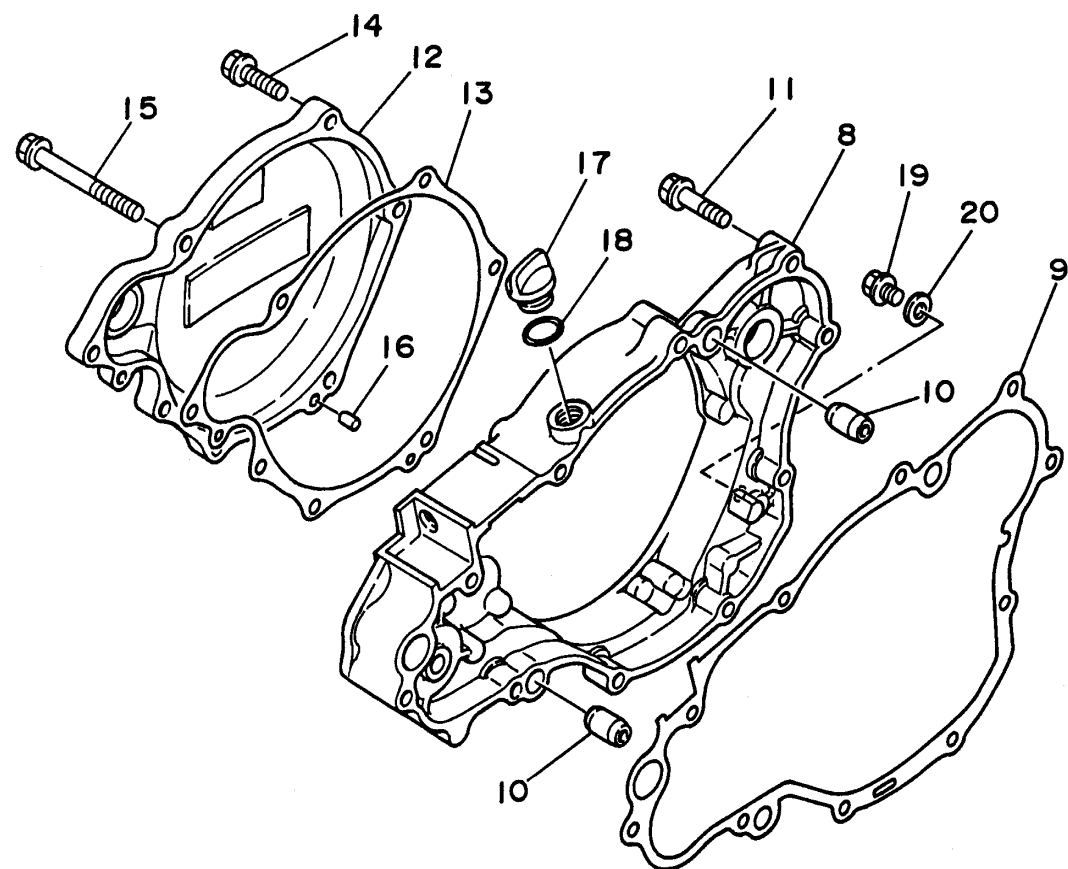

4SR1100-6100


CRANKCASE COVER 1

Ref. No.	Part Number	Description	Qty	Remarks
1	2VM-15411-00-00	COVER, CRANKCASE 1	1	
2	2VM-15451-11-00	GASKET, CRANKCASE COVER 1	1	
3	98517-06030-00	SCREW, PAN HEAD (98507-06030-00)	5	
4	92907-06600-00	WASHER, PLATE	5	
5	2VM-15421-02-00	COVER, CRANKCASE 2	1	
6	95027-06012-00	BOLT, FLANGE	2	
7	4SR-15441-00-00	HOLDER, CLUTCH CABLE	1	
8	3SP-Y1543-00-00	COVER, CRANKCASE 3	1	
9	2VM-15462-10-00	GASKET, CRANKCASE COVER 3	1	
10	99510-12016-00	PIN, DOWEL	2	
11	95027-06030-00	BOLT, FLANGE	7	
12	4EW-15415-00-00	COVER, GENERATOR	1	
13	3SP-15463-11-00	GASKET, CARBURETOR COVER 2	1	
14	95027-06025-00	BOLT, FLANGE	5	
15	95027-06070-00	BOLT, FLANGE	2	
16	93604-10011-00	PIN, DOWEL	2	
17	1G8-15362-00-00	PLUG, OIL LEVEL	1	
18	93210-14104-00	O-RING	1	
19	95027-06008-00	BOLT, FLANGE	1	
20	90430-06014-00	GASKET	1	

Ref. No.	Part Number	Description	Qty	Remarks
-------------	----------------	-------------	-----	---------

This diagram illustrates the exploded view of a mechanical assembly, likely a pump or valve mechanism. The components are numbered 1 through 18. The assembly includes a main body (1), a gear (2), a spring (3), a piston (4), a valve (5), a seal (6), a nut (7), a washer (8), a bolt (9), a pin (10), a spring (11), a nut (12), a washer (13), a bolt (14), a pin (15), a nut (16), a washer (17), and a bolt (18). The diagram shows the relative positions and assembly sequence of these parts.

 YZ250H1

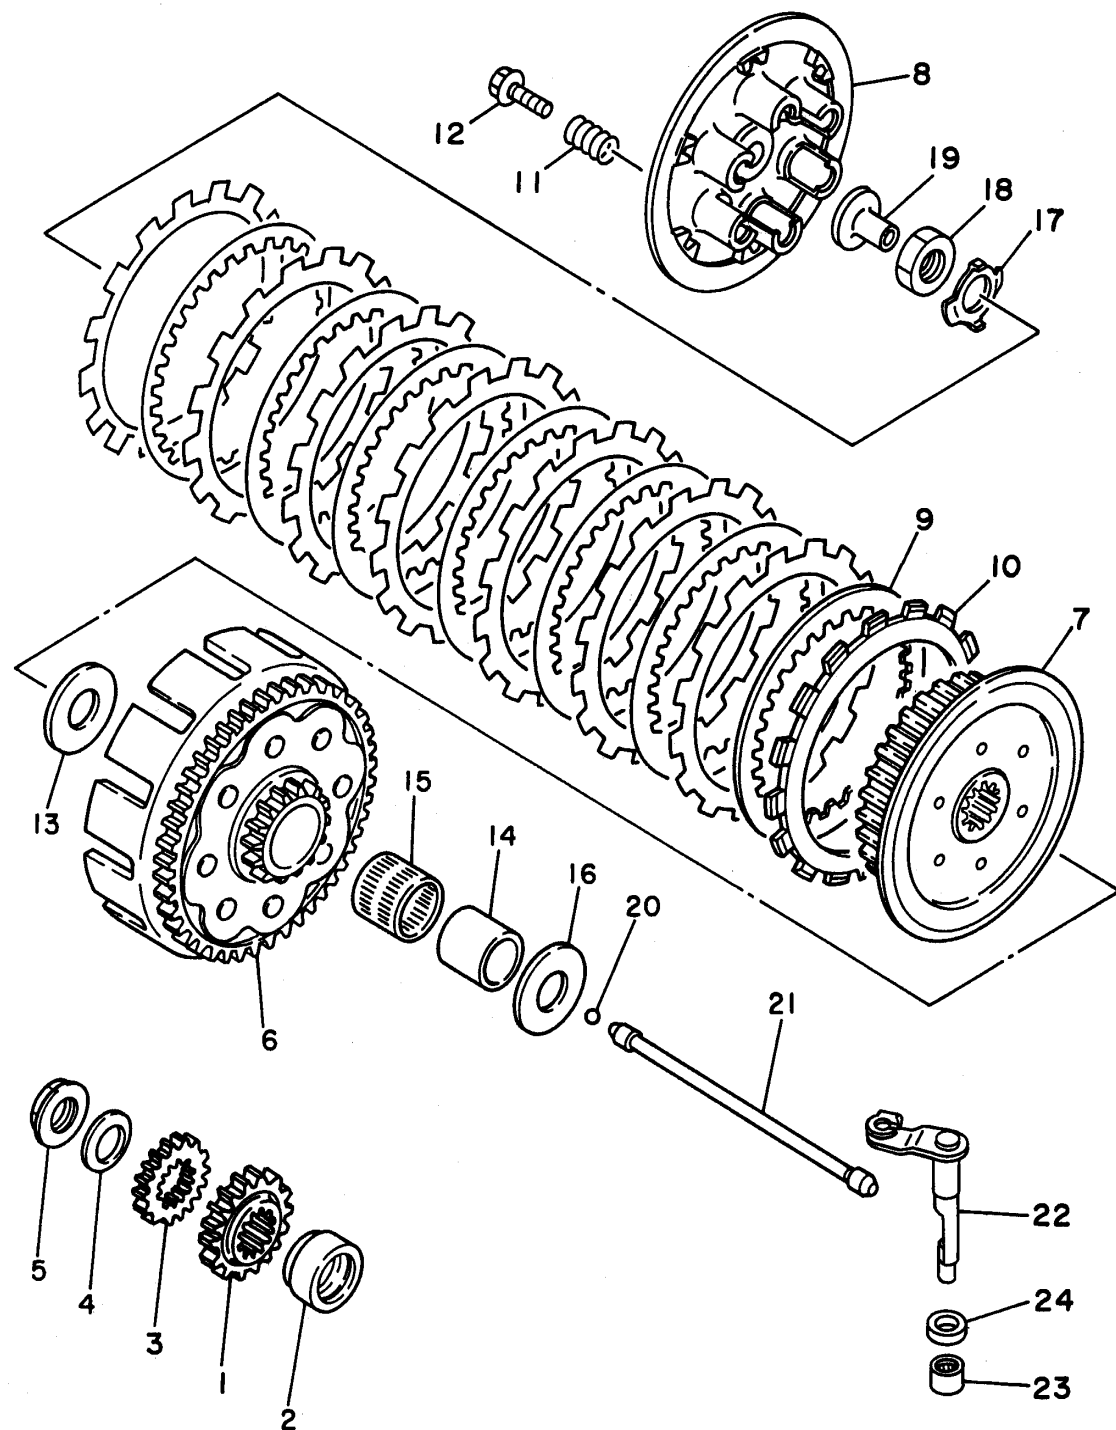


CLUTCH

Ref. No.	Part Number	Description	Qty	Remarks
1	2VM-16111-00-00	GEAR, PRIMARY DRIVE	1	
2	90387-252F6-00	COLLAR	1	
3	3XK-11956-00-00	GEAR, GOVERNOR DRIVE	1	
4	90208-18025-00	WASHER, CONICAL SPRING	1	
5	90179-18172-00	NUT	1	
6	4EW-16150-01-00	PRIMARY DRIVEN GEAR COMP.	1	
7	4EW-16371-01-00	BOSS, CLUTCH	1	
8	4EW-16351-01-00	PLATE, PRESSURE 1	1	
9	4X7-16325-00-00	PLATE, CLUTCH 2	7	
10	3XK-16321-00-00	PLATE, FRICTION	8	
11	90501-23598-00	SPRING, COMPRESSION	6	
12	90159-06016-00	SCREW, WITH WASHER	6	
13	2K7-16154-00-00	PLATE, THRUST 1	1	
14	2VM-16181-00-00	SPACER 1	1	
15	93310-230T7-00	BEARING	1	
16	3SP-16154-00-00	PLATE, THRUST 1	1	
17	90215-20231-00	WASHER, LOCK	1	
18	90170-20255-00	NUT	1	
19	4EW-16356-00-00	ROD, PUSH 1	1	
20	93511-32027-00	BALL	1	
21	4EW-16357-00-00	ROD, PUSH 2	1	
22	4EW-16381-01-00	PUSH LEVER COMP.	1	
23	93315-11206-00	BEARING	1	
24	93102-12224-00	OIL SEAL	1	



 
4JX1100-4120

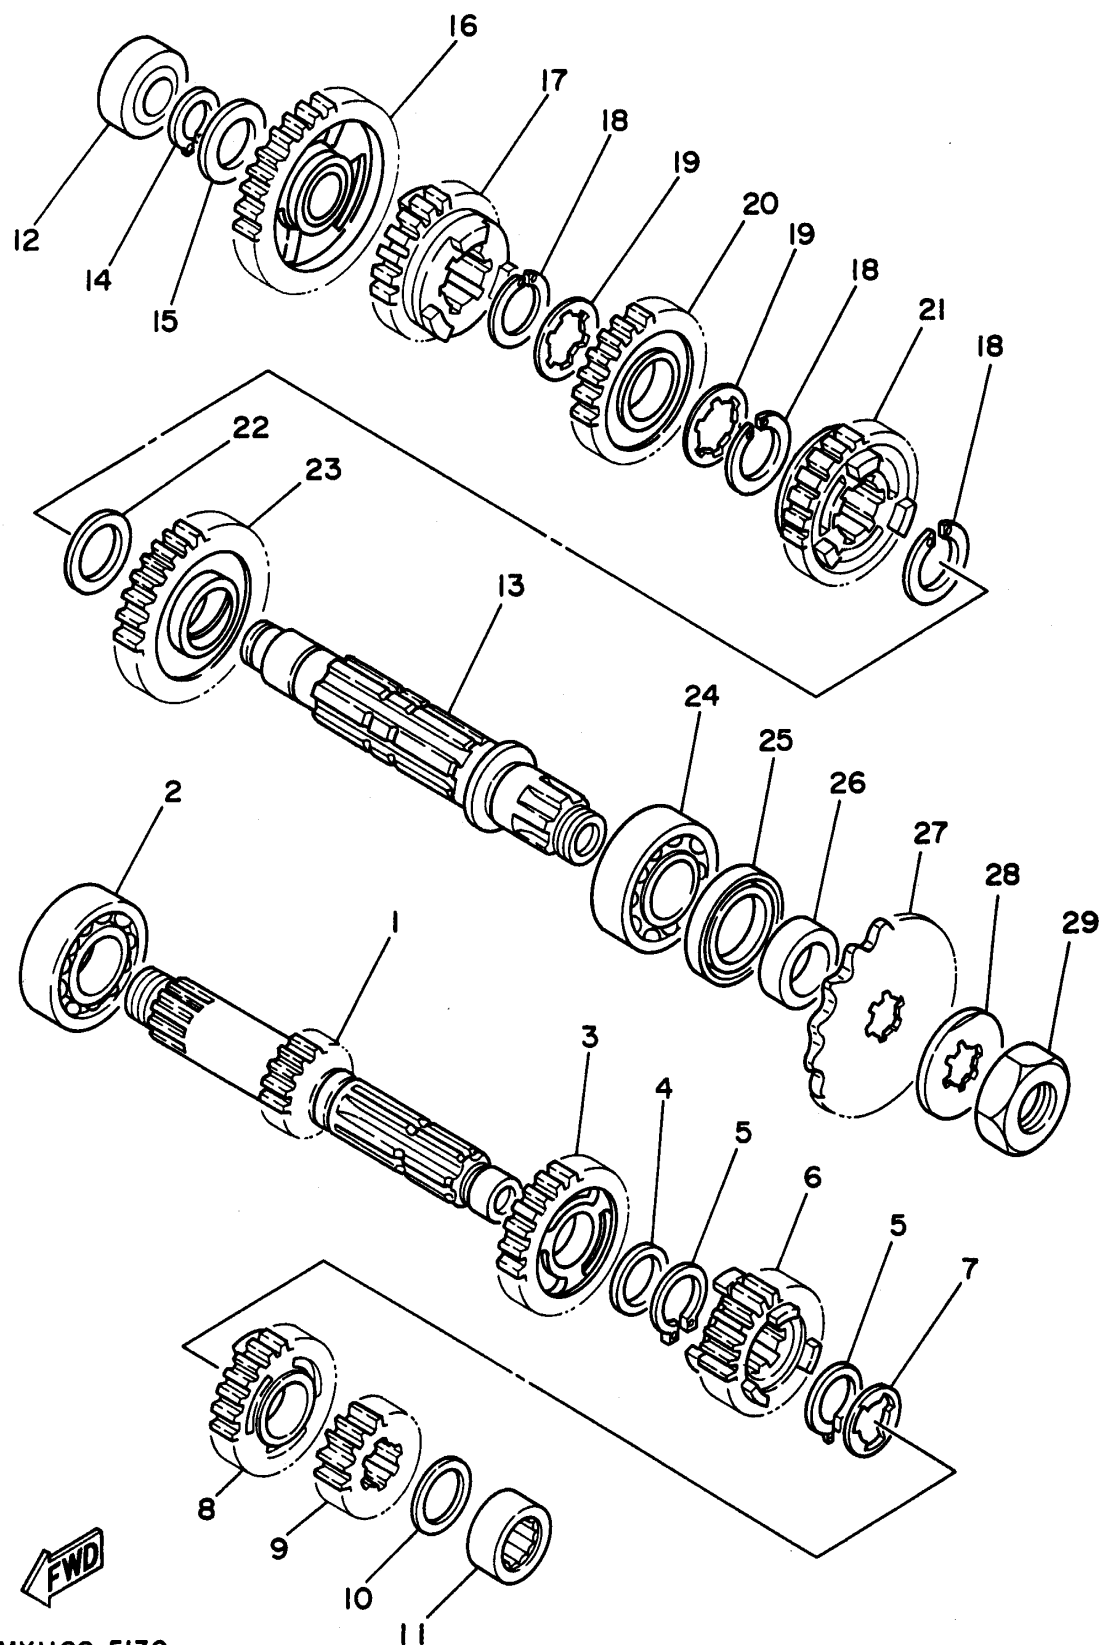

TRANSMISSION

Ref. No.	Part Number	Description	Qty	Remarks
1	4JX-17411-00-00	AXLE, MAIN	1	
2	93306-20576-00	BEARING (93306-20540-00) ...	1	
3	4MX-17151-00-00	GEAR, 5TH PINION	1	
4	90201-22555-00	WASHER, PLATE	1	
5	93410-22039-00	CIRCLIP	2	
6	4MX-17131-00-00	GEAR, 3RD PINION	1	
7	90209-18135-00	WASHER	1	
8	3RB-17141-00-00	GEAR, 4TH PINION (22T)	1	
9	4JX-17121-00-00	GEAR, 2ND PINION	1	
10	90209-17311-00	WASHER, SPEC'L SHAP	1	
11	93311-41734-00	BEARING, CYLINDER.# 1	1	
12	93311-62035-00	BEARING, CYLINDER.# 1	1	
13	2VM-17421-01-00	AXLE, DRIVE	1	
14	93410-20038-00	CIRCLIP	1	
15	90201-20278-00	WASHER, PLATE	1	
16	4MX-17211-00-00	GEAR, 1ST WHEEL	1	
17	4MX-17251-00-00	GEAR, 5TH WHEEL	1	
18	93440-25084-00	CIRCLIP	3	
19	90209-22082-00	WASHER (0.5T)	2	
20	4MX-17231-00-00	GEAR, 3RD WHEEL	1	
21	4MX-17241-00-00	GEAR, 4TH WHEEL	1	
22	90201-253K0-00	WASHER, PLATE (T=1.0)	1	
23	4MX-17221-00-00	GEAR, 2ND WHEEL	1	
24	93306-20577-00	BEARING	1	
25	93102-32M07-00	OIL SEAL	1	
26	90387-25663-00	COLLAR	1	
27	93834-13030-00	SPROCKET, DRIVE 13T (23X1746130)	1	STD
	93834-14049-00	SPROCKET, DRIVE 14T (1W4174614)	1	AP

 CONTINUED ON NEXT FRAME ➤

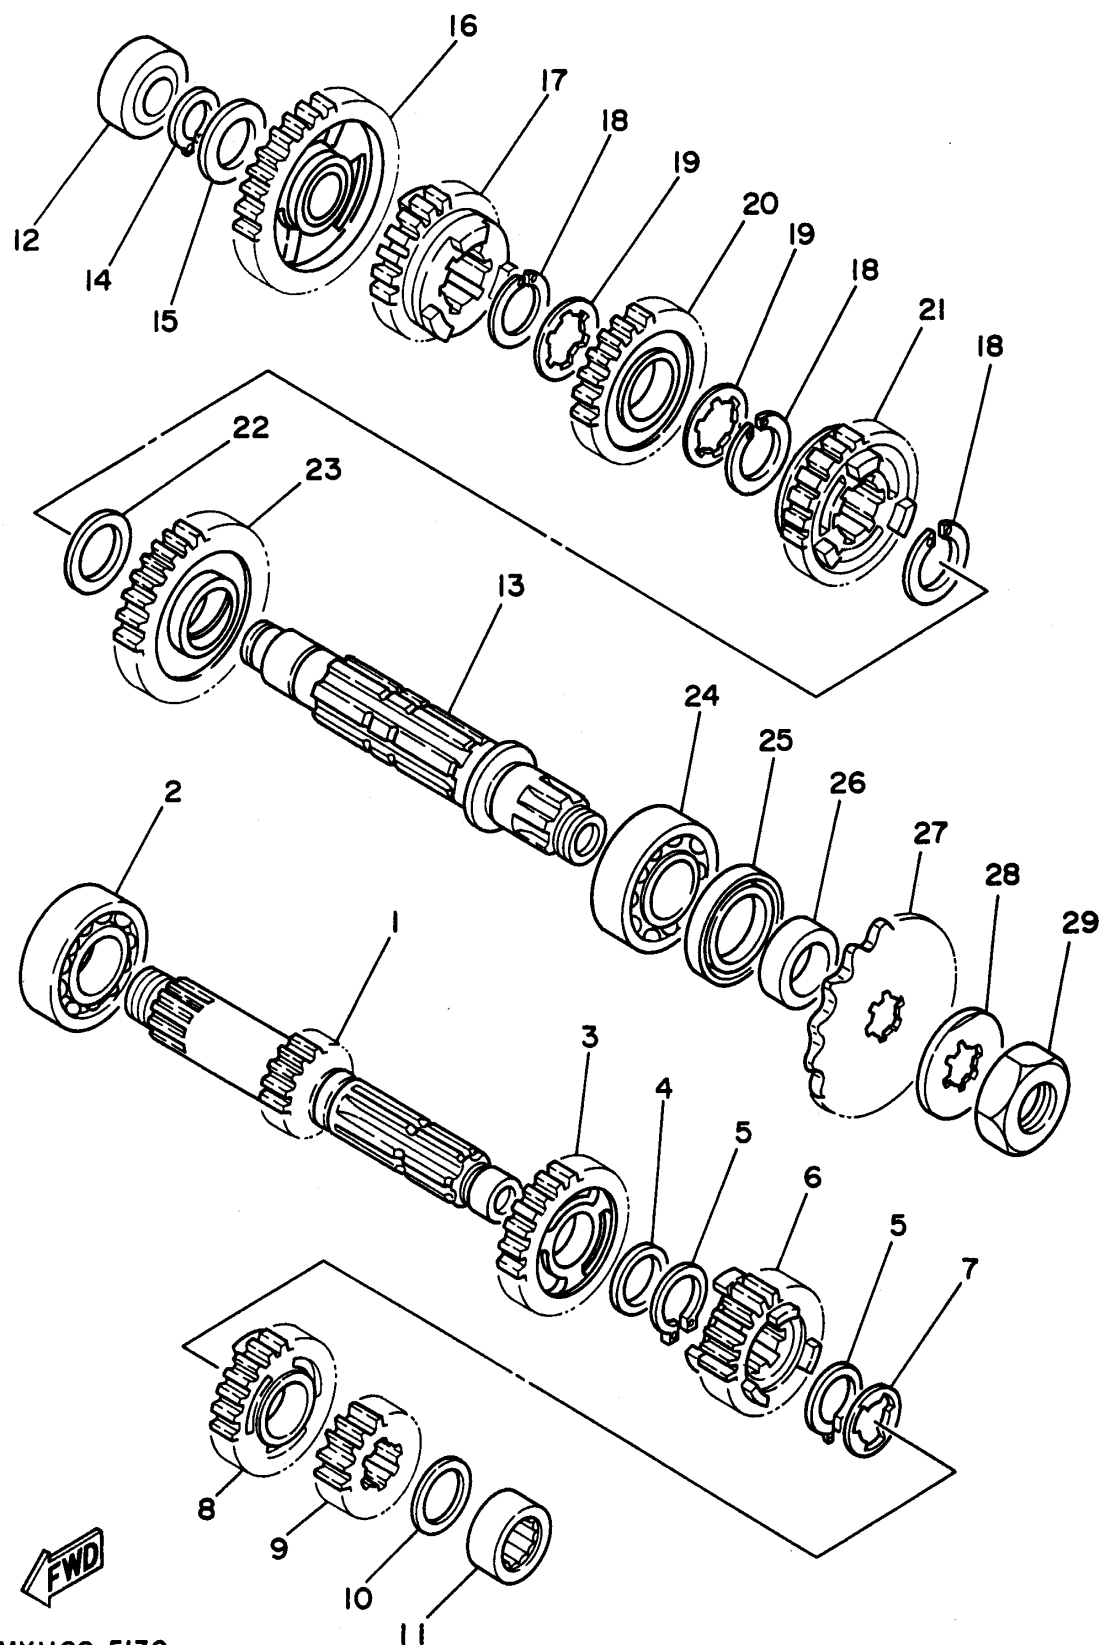


4MX1100-5130

TRANSMISSION


Ref. No.	Part Number	Description	Qty	Remarks
27	93834-15076-00	SPROCKET, DRIVE 15T (1W41746150) (93834-15075-00)	1	AP
28	90215-21239-00	WASHER, LOCK	1	
29	90179-20255-00	NUT	1	

SHIFT CAM - SHIFT FORK

Ref. No.	Part Number	Description	Qty	Remarks
1	3XK-18540-01-00	SHIFT CAM ASSEMBLY	1	
2	90201-12166-00	WASHER, PLATE	1	
3	3XK-18140-00-00	STOPPER LEVER ASSEMBLY .	1	
4	90508-26561-00	SPRING, TORSION	1	
5	3XK-18177-00-00	BOLT, STOPPER	1	
6	4SR-18511-00-00	FORK, SHIFT 1	1	
7	2VM-18512-00-00	FORK, SHIFT 2	1	
8	4SR-18513-00-00	FORK, SHIFT 3	1	
9	4EX-18531-00-00	BAR, SHIFT FORK GUIDE 1 ...	1	
10	3XV-18535-00-00	BAR, SHIFT FORK GUIDE 2 ...	1	

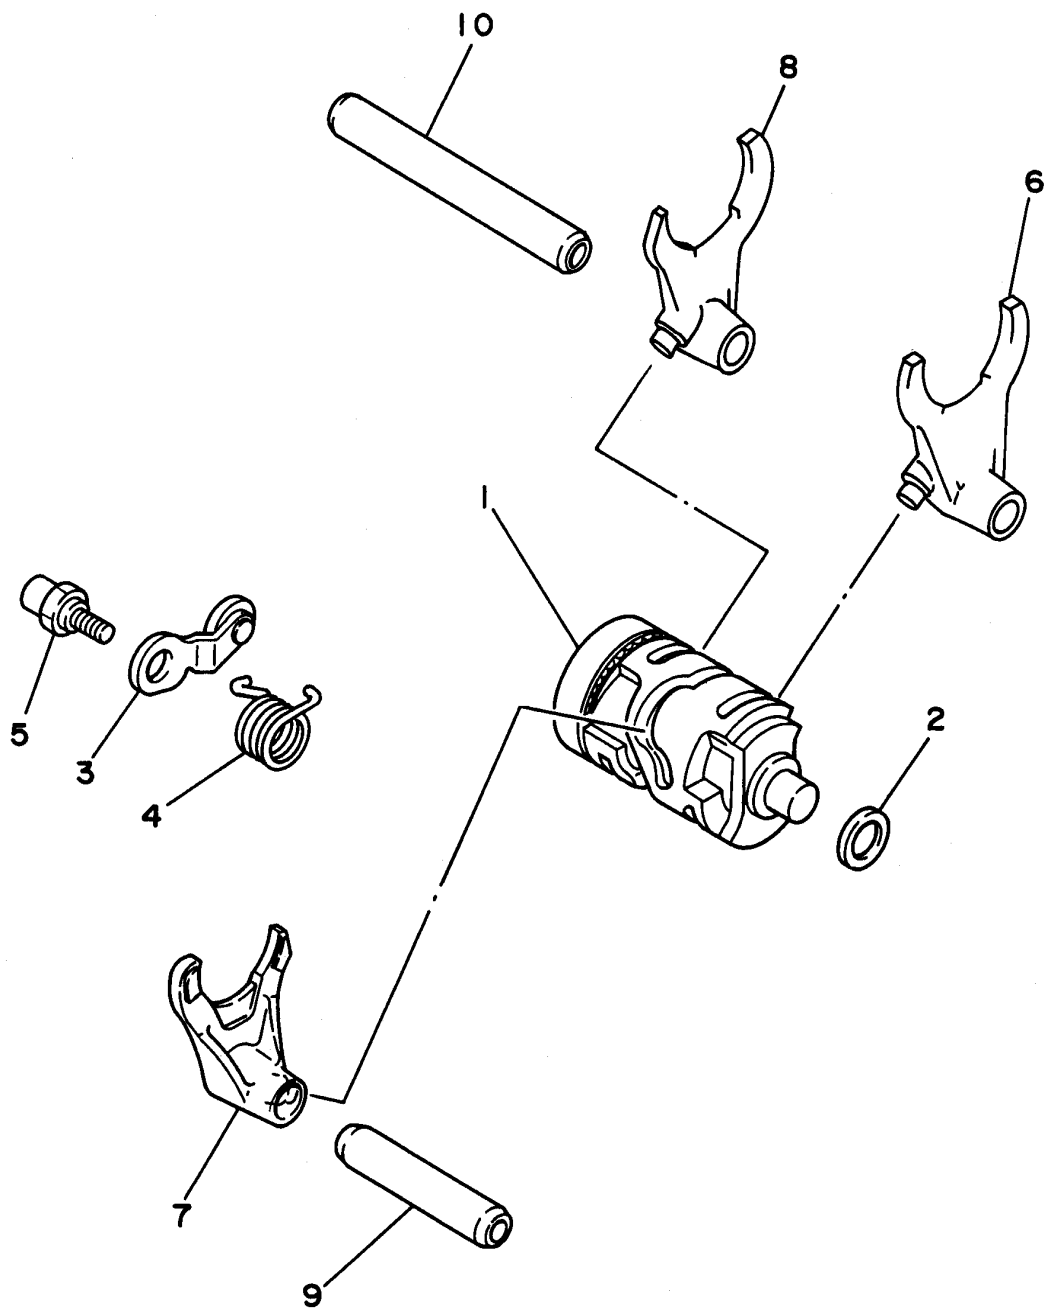 

4SR1100-6140

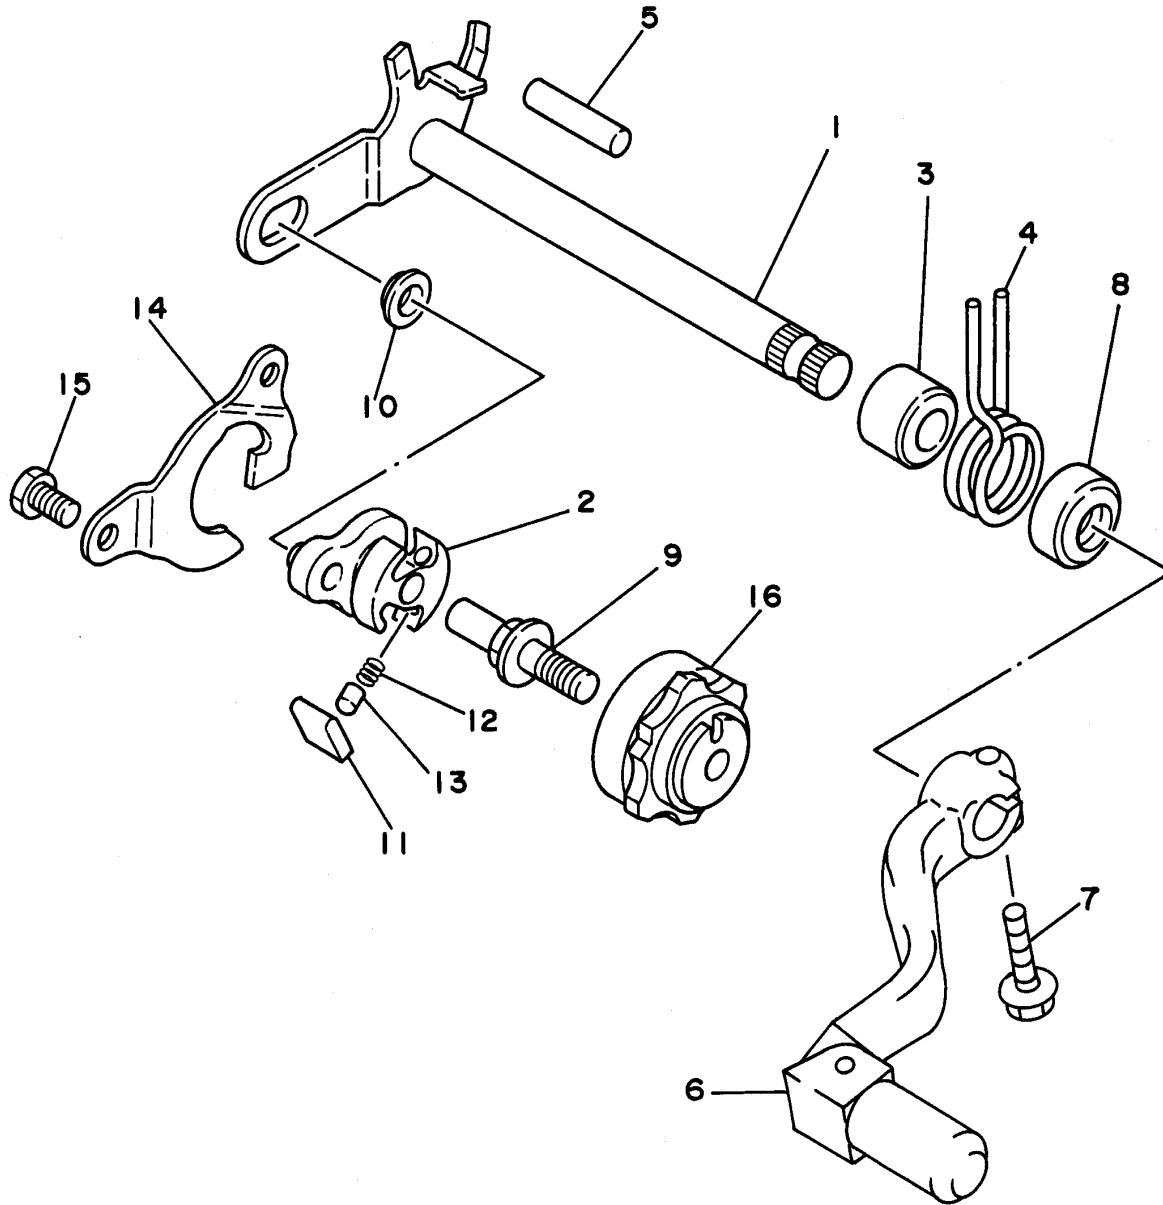 


SHIFT SHAFT

Ref. No.	Part Number	Description	Qty	Remarks
1	3XK-18101-02-00	SHIFT SHAFT ASSEMBLY	1	
2	3XK-18122-00-00	LEVER, SHIFT 2	1	
3	90560-12280-00	SPACER	1	
4	90508-291A8-00	SPRING, TORSION	1	
5	93608-33046-00	PIN, DOWEL	1	
6	4SS-18110-00-00	SHIFT PEDAL ASSEMBLY	1	
7	95027-06020-00	BOLT, FLANGE	1	
8	93102-12321-00	OIL SEAL (SD12-22-5 HS) (93102-12106-00)	1	
9	3XJ-18173-00-00	PIN, SHIFT	1	
10	3XJ-18178-00-00	ROLLER, SHIFT LEVER	1	
11	3XJ-18182-00-00	PAWL, SHIFTER	2	
12	90501-052G5-00	SPRING, COMPRESSION	2	
13	3XJ-18184-00-00	PIN, PAWL	2	
14	4DA-18172-00-00	GUIDE, SHIFT	1	
15	90101-06664-00	BOLT	2	
16	4EW-18185-00-00	SEGMENT	1	



 
4SR1100-6150

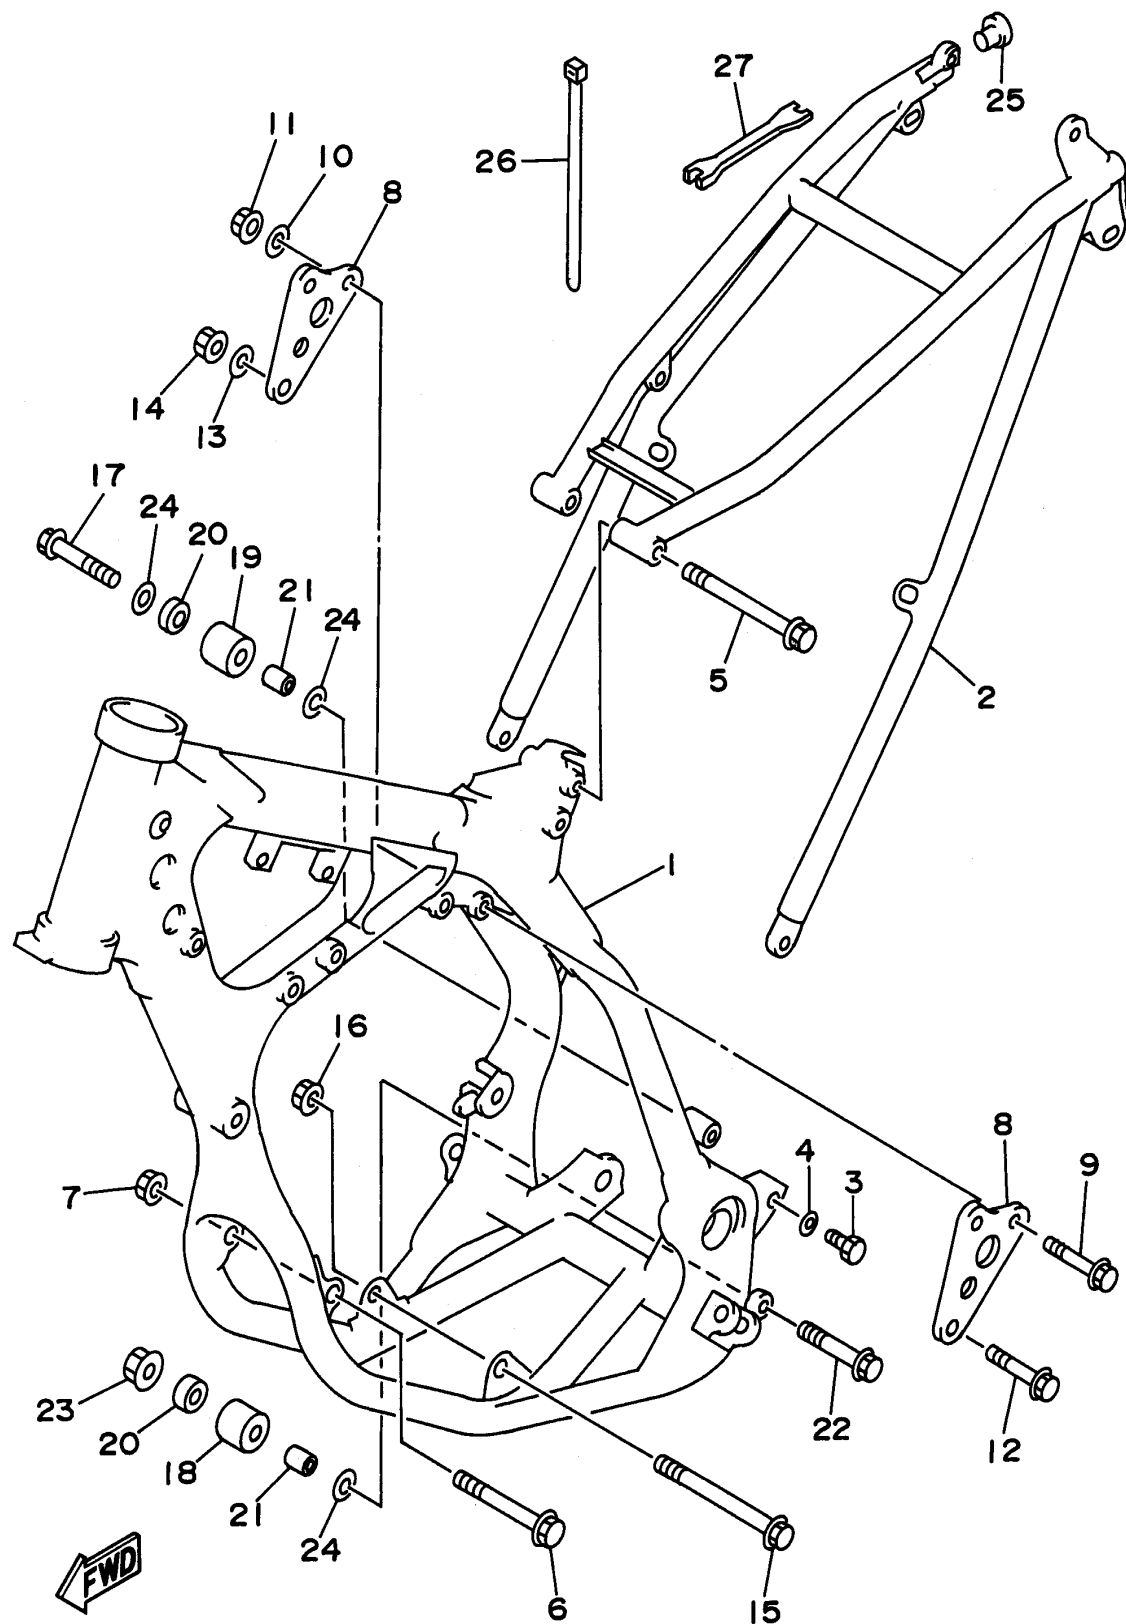

4SR1100-6160

FRAME

Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-21101-00-UJ	FRONT FRAME COMP.	1	RADICAL WHITE
2	4SR-21190-00-UJ	REAR FRAME COMP.	1	RADICAL WHITE
3	90106-08051-00	BOLT	2	
4	90201-080E2-00	WASHER, PLATE	2	
5	90105-08099-00	BOLT, WASHER BASED	1	
6	90105-08100-00	BOLT, WASHER BASED	1	
7	95617-08200-00	NUT, SELF-LOCKING	1	
8	4SR-21425-00-00	BRACKET, REAR UPPER 1 ...	2	
9	95817-08050-00	BOLT, FLANGE	2	
10	90201-08730-00	WASHER, PLATE	2	
11	95617-08200-00	NUT, SELF-LOCKING	2	
12	95817-10050-00	BOLT, FLANGE	1	
13	92907-10200-00	WASHER, PLAIN	1	
14	95617-10200-00	NUT, SELF-LOCKING	1	
15	90105-10733-00	BOLT, WASHER BASED	1	
16	95617-10200-00	NUT, SELF-LOCKING	1	
17	95027-08040-00	BOLT, FLANGE	1	
18	3JD-22178-10-00	TENSIONER	1	
19	4EW-22178-00-00	TENSIONER	1	
20	93300-60804-00	BEARING	2	
21	90387-086N4-00	COLLAR	2	
22	95027-08065-00	BOLT, FLANGE	1	
23	95707-08500-00	NUT, FLANGE	1	
24	90201-086P8-00	WASHER, PLATE	3	
25	90338-16148-00	PLUG	2	
26	90464-14117-00	BAND (6G1-2811G-00-00)	1	
27	56A-28166-00-00	WRENCH, HEXAGON	1	

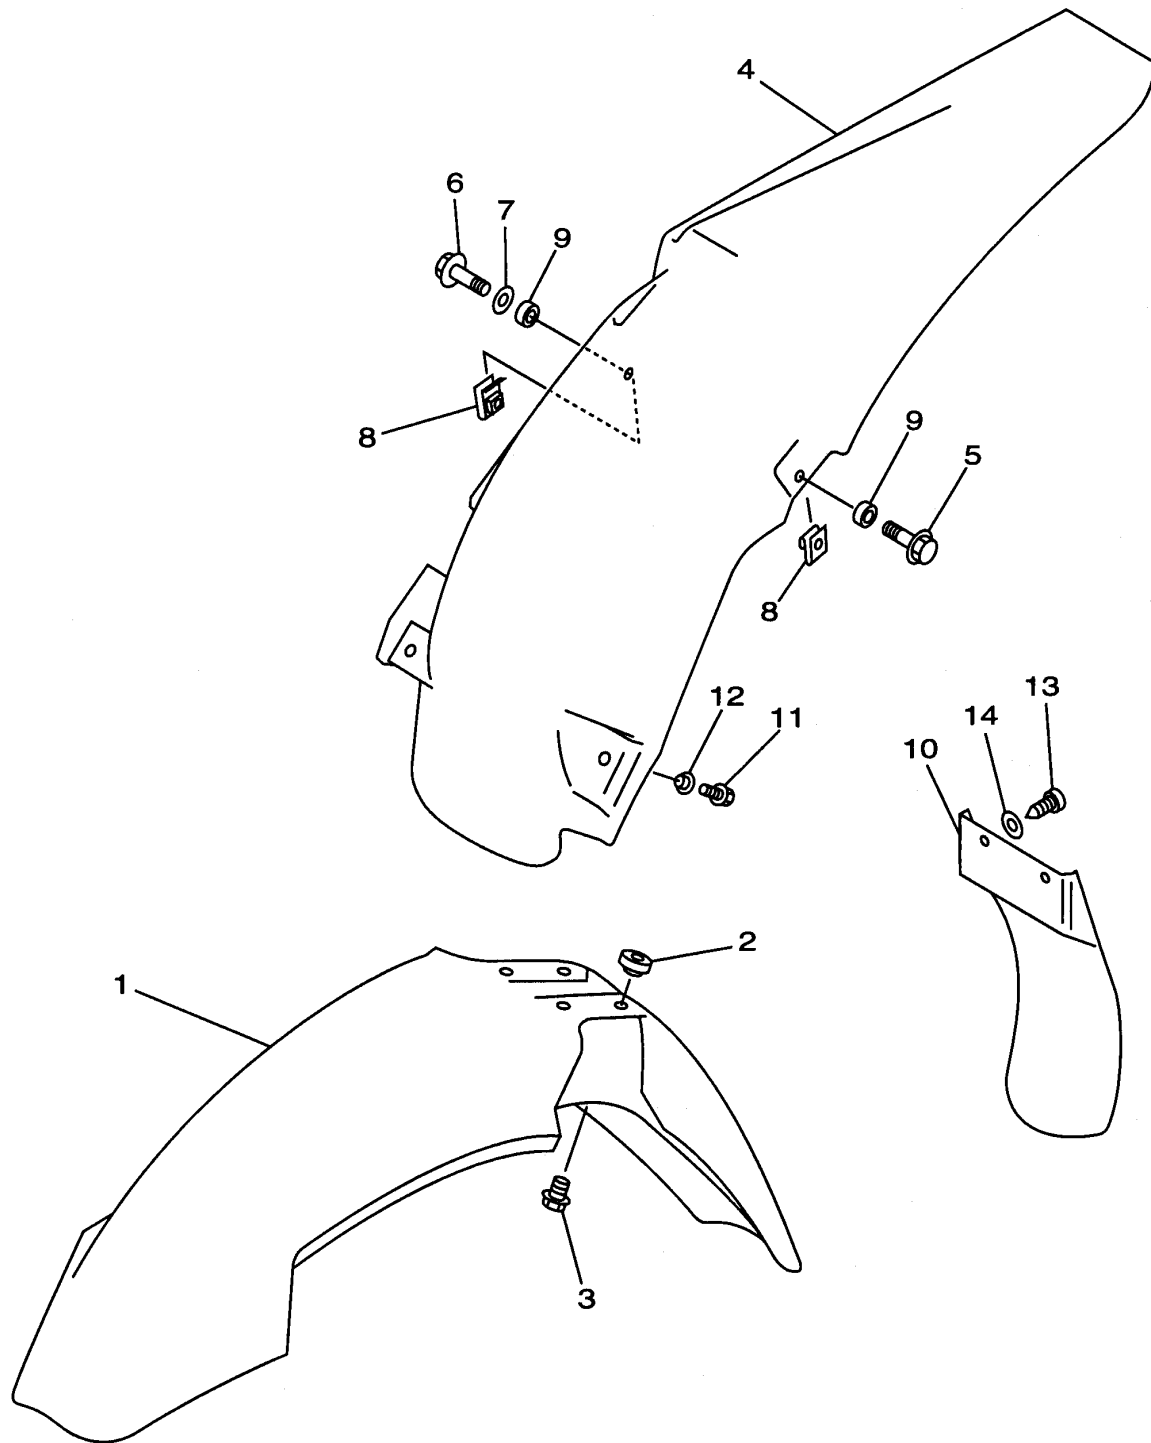 


4SR1100-6170

FENDER

Ref. No.	Part Number	Description	Qty	Remarks
1	4DA-21511-00-00	FENDER, FRONT	1	
2	3JD-21748-00-00	COLLAR	4	
3	90119-06096-00	BOLT, WITH WASHER	4	
4	4SS-21611-00-00	FENDER, REAR	1	
5	95027-06012-00	BOLT, FLANGE	1	
6	95027-06030-00	BOLT, FLANGE	1	
7	90201-063J2-00	WASHER, PLATE	1	
8	90183-06023-00	NUT, SPRING	2	
9	90387-0701A-00	COLLAR	2	
10	4ES-21642-00-00	GUARD, FLAP	1	
11	95027-06020-00	BOLT, FLANGE	2	
12	90387-0600F-00	COLLAR	2	
13	97707-60016-00	SCREW, TAPPING	2	
14	90201-065F3-00	WASHER, PLATE	2	

 REAR ARM

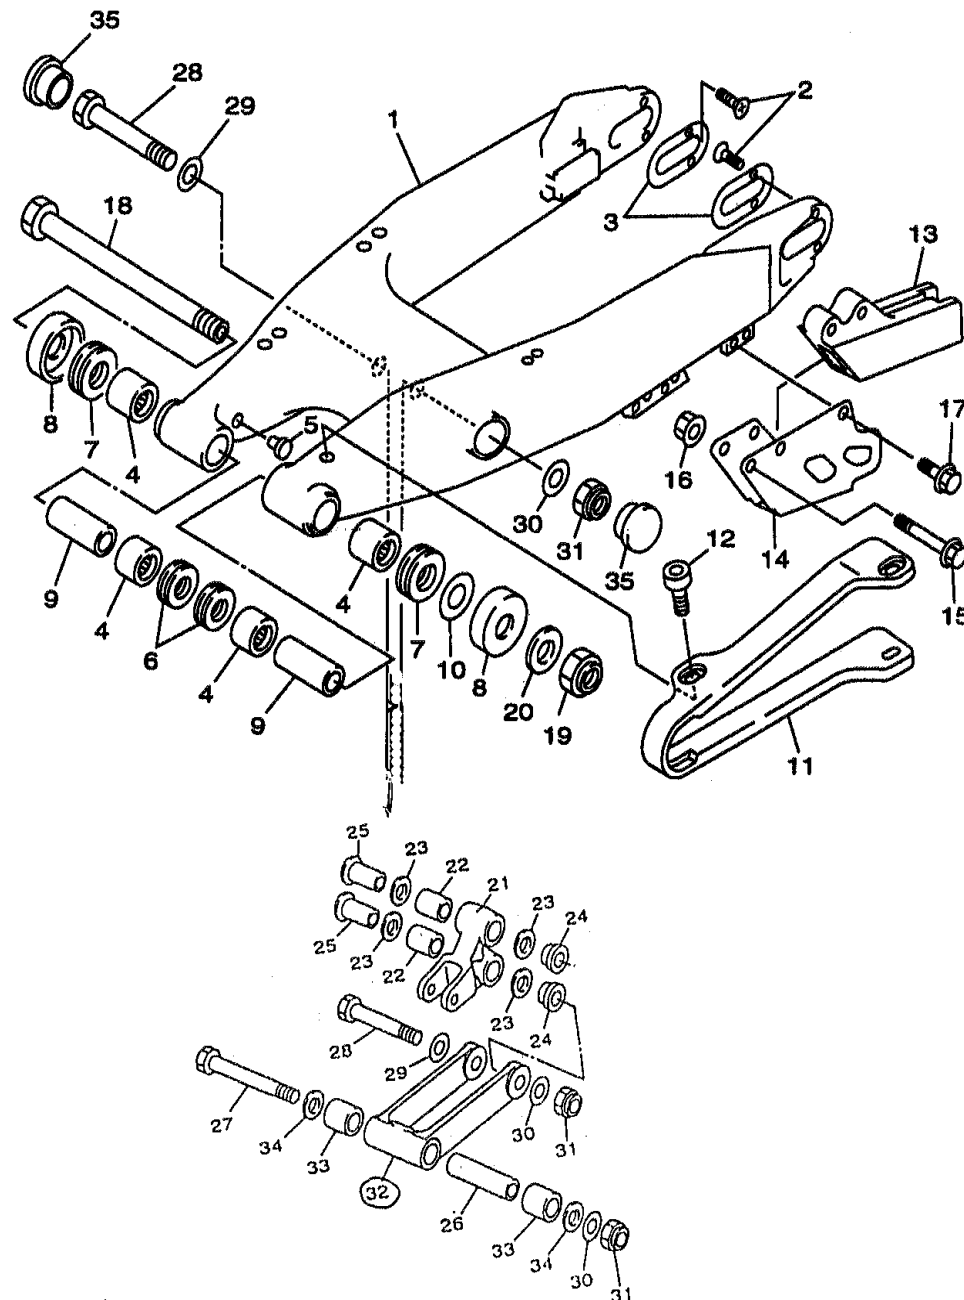


4SS1100-6190

Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-22110-00-00	REAR ARM COMP.	1	
2	90151-04048-00	SCREW, COUNTERSUNK	4	
3	4SS-22355-00-00	PATCH	2	
4	93317-22262-00	BEARING	4	
5	90338-16148-00	PLUG	2	
6	93106-22019-00	OIL SEAL (DC 22-28-8)	2	
7	93342-22215-00	BEARING	2	
8	4EW-22129-00-00	COVER, THRUST 2	2	
9	90380-16158-00	BUSH, SOLID	2	
10	240-22127-00-00	SHIM	1	
11	4EW-22151-01-00	SEAL, GUARD	1	
12	90110-05201-00	BOLT, HEXAGON SOCKET HEAD	4	
13	4EW-22199-01-00	SUPPORT, CHAIN	1	
14	4MX-22128-00-00	COVER, THRUST 1	1	
15	95027-06045-00	BOLT, FLANGE	2	
16	90179-06568-00	NUT	2	
17	95027-06010-00	BOLT, FLANGE	1	
18	1LX-22141-00-00	SHAFT, PIVOT	1	
19	90185-16127-00	NUT, SELF-LOCKING	1	
20	90201-164H4-00	WASHER, PLATE	1	
21	4SS-2217A-00-00	ARM, RELAY	1	
22	93315-22046-00	BEARING	2	
23	93109-20029-00	OIL SEAL, SDO-TYPE	4	
24	90387-164N2-00	COLLAR	2	
25	90387-164N3-00	COLLAR	2	
26	90387-167Y9-00	COLLAR	1	
27	90109-147F2-00	BOLT	1	
28	90109-142F4-00	BOLT	2	

CONTINUED ON NEXT FRAME ►


REAR ARM

Ref. No.	Part Number	Description	Qty	Remarks
29	90201-164H4-00	WASHER, PLATE	2	
30	90201-14740-00	WASHER, PLATE	3	
31	90185-14070-00	NUT, SELF-LOCKING	3	
32	4SS-2217F-00-00	ROD, CONNECTING 1	1	
33	93315-22046-00	BEARING	2	
34	93109-20029-00	OIL SEAL, SDO-TYPE	2	
35	1HX-2135F-10-00	COVER	2	

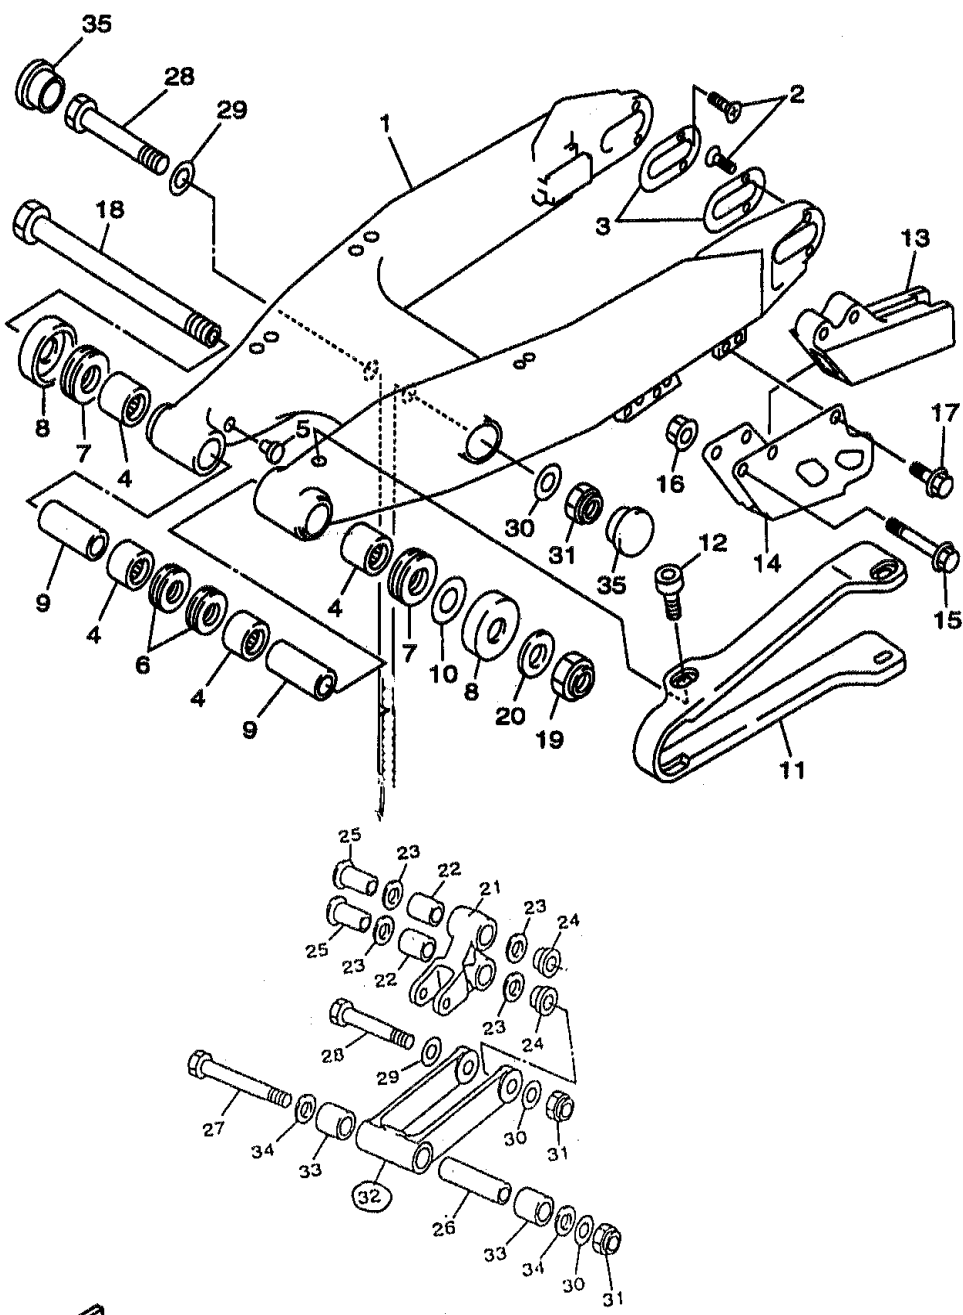 

4SS1100-6190

 REAR SUSPENSION

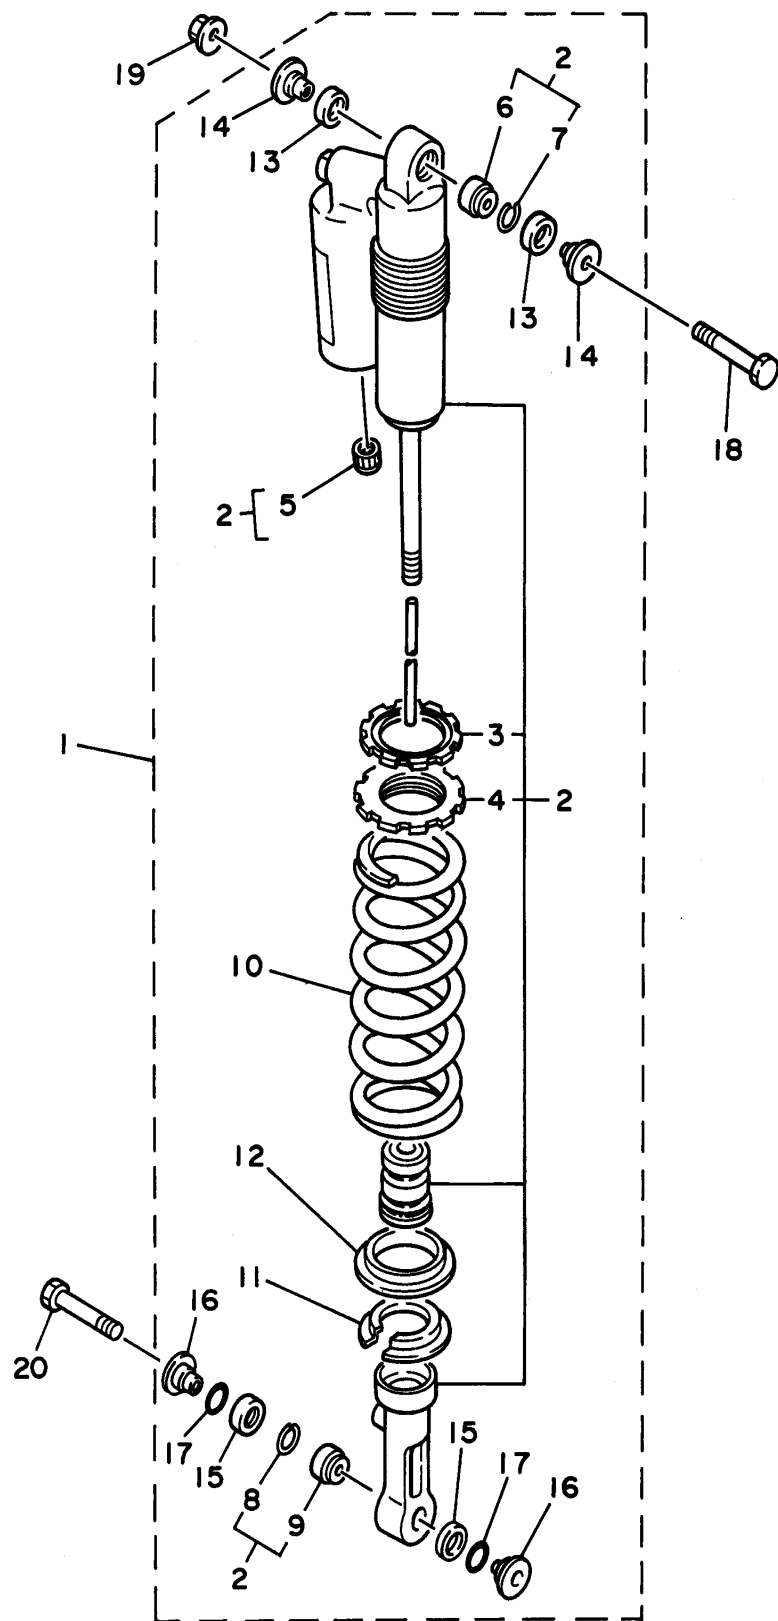

Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-22210-10-00	SHOCK ABSORBER ASSEMBLY, REAR	1	UR
2	4SR-22201-10-00	. DAMPER SUB ASSEMBLY ..	1	UR
3	3SP-22234-00-00	.. GUIDE, SPRING 3	1	
4	3SP-22213-00-00	.. SEAT, SPRING UPPER	1	
5	509-23184-L0-00	.. CAP, AIR VALVE	1	
6	4MX-22216-00-00	.. BUSH, REAR SHOCK ABSORBER	1	
7	43M-22274-00-00	.. RING, STOP	1	
8	3Y6-23183-00-00	.. CIRCLIP	1	
9	4JX-22226-00-00	.. BUSH, SHOCK ABSORBER LOWER	1	
10	4JX-22212-40-00	. SPRING (K=5.0)	1	
11	3JD-22214-00-00	. GUIDE, SPRING 1	1	
12	3JD-22224-00-00	. GUIDE, SPRING 2	1	
13	3JD-22475-00-00	. SEAL, DUST	2	
14	3XJ-22253-00-00	. COLLAR, DISTANCE	2	
15	3JE-22475-00-00	. SEAL, DUST	2	
16	4EW-22253-00-00	. COLLAR, DISTANCE	2	
17	4EW-22474-00-00	. SEAL, RING	2	
18	3SP-22241-00-00	BOLT 1	1	
19	95617-10200-00	NUT, SELF-LOCKING	1	
20	90105-10614-00	BOLT, WASHER BASED	1	


4JX1100-4200

STEERING

Ref. No.	Part Number	Description	Qty	Remarks
1	93332-00081-00	BEARING	1	
2	93332-00078-00	BEARING	1	
3	4EW-23416-00-00	COVER, BALL RACE 2	1	
4	90179-28650-00	NUT	1	
5	4SS-23435-00-00	CROWN, HANDLE	1	
6	90170-24373-00	NUT	1	
7	90201-247L2-00	WASHER, PLATE	1	
8	3SP-23441-00-00	HOLDER, HANDLE UPPER ...	2	
9	95027-08035-00	BOLT, FLANGE	4	
10	95027-08040-00	BOLT, FLANGE	4	
11	4DA-23485-01-00	PLATE, NUMBER	1	
12	90119-06185-00	BOLT, WITH WASHER	1	
13	90201-286K9-00	WASHER, PLATE	2	
14	4DA-23389-00-00	GUIDE, CABLE	1	
15	90105-05361-00	BOLT, WASHER BASED	1	

4JX1100-4210

 
FRONT FORK

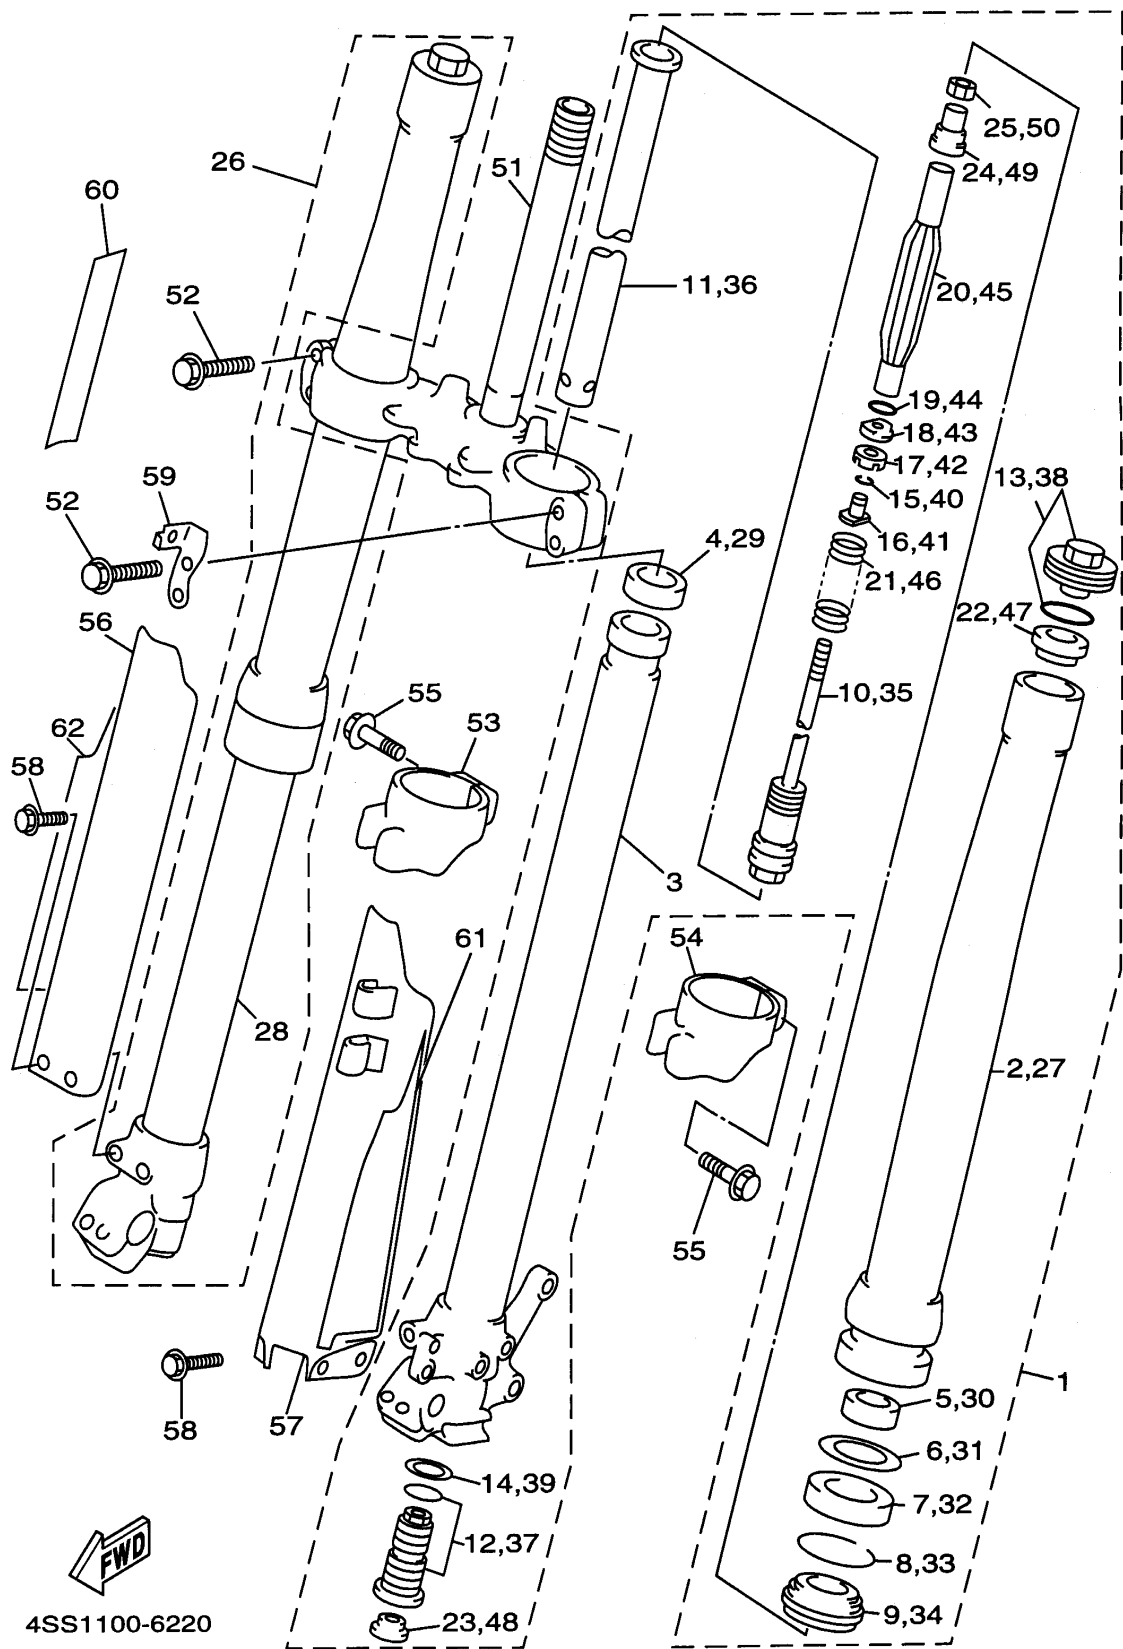

Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-23102-L0-00	FRONT FORK ASSEMBLY (L.H)	1	
2	4SS-23136-L0-00	. TUBE, OUTER (RIGHT)	1	
3	4SS-23120-L0-00	. INNER TUBE COMP. 2	1	
4	4SS-23171-L0-00	. PISTON, FRONT FORK	1	
5	4SS-23125-L0-00	. METAL, SLIDE 1	1	
6	4SS-23146-L0-00	. WASHER, OIL SEAL	1	
7	4SS-23145-L0-00	. OIL SEAL	1	
8	4SS-23153-L0-00	. RING, SNAP	1	
9	4SS-23144-L0-00	. SEAL, DUST	1	
10	4SS-2314A-L0-00	. PISTON ROD ASSEMBLY	1	
11	4SS-23170-L0-00	. CYLINDER COMP., FRONT FORK	1	
12	4SR-2316A-L0-00	. VALVE COMP	1	
13	4SS-23111-L0-00	. BOLT , CAP	1	
14	4SS-23158-L0-00	. GASKET	1	
15	3SP-23153-L0-00	. RING, SNAP	2	
16	3SP-23113-L0-00	. COLLAR	1	
17	3SP-23166-L0-00	. SPACER, OIL LOCK	1	
18	3SP-23393-L0-00	. NUT, SPECIAL	1	
19	3JD-23147-L0-00	. O-RING	1	
20	4SS-23142-L0-00	. SEAT, SPRING UPPER	1	
21	4SR-23141-L0-00	. SPRING, FRONT FORK (K=0.42)	1	
22	4SS-23143-L0-00	. SEAT, SPRING LOWER	1	
23	3JD-2312G-L0-00	. PLUG	1	
24	4SS-23363-L0-00	. COLLAR 1	1	
25	3SP-23357-L0-00	. NUT	1	
26	4SR-23103-L0-00	FRONT FORK ASSEMBLY (R.H)	1	
27	4SS-23136-L0-00	. TUBE, OUTER (RIGHT)	1	

CONTINUED ON NEXT FRAME ➤

 
FRONT FORK

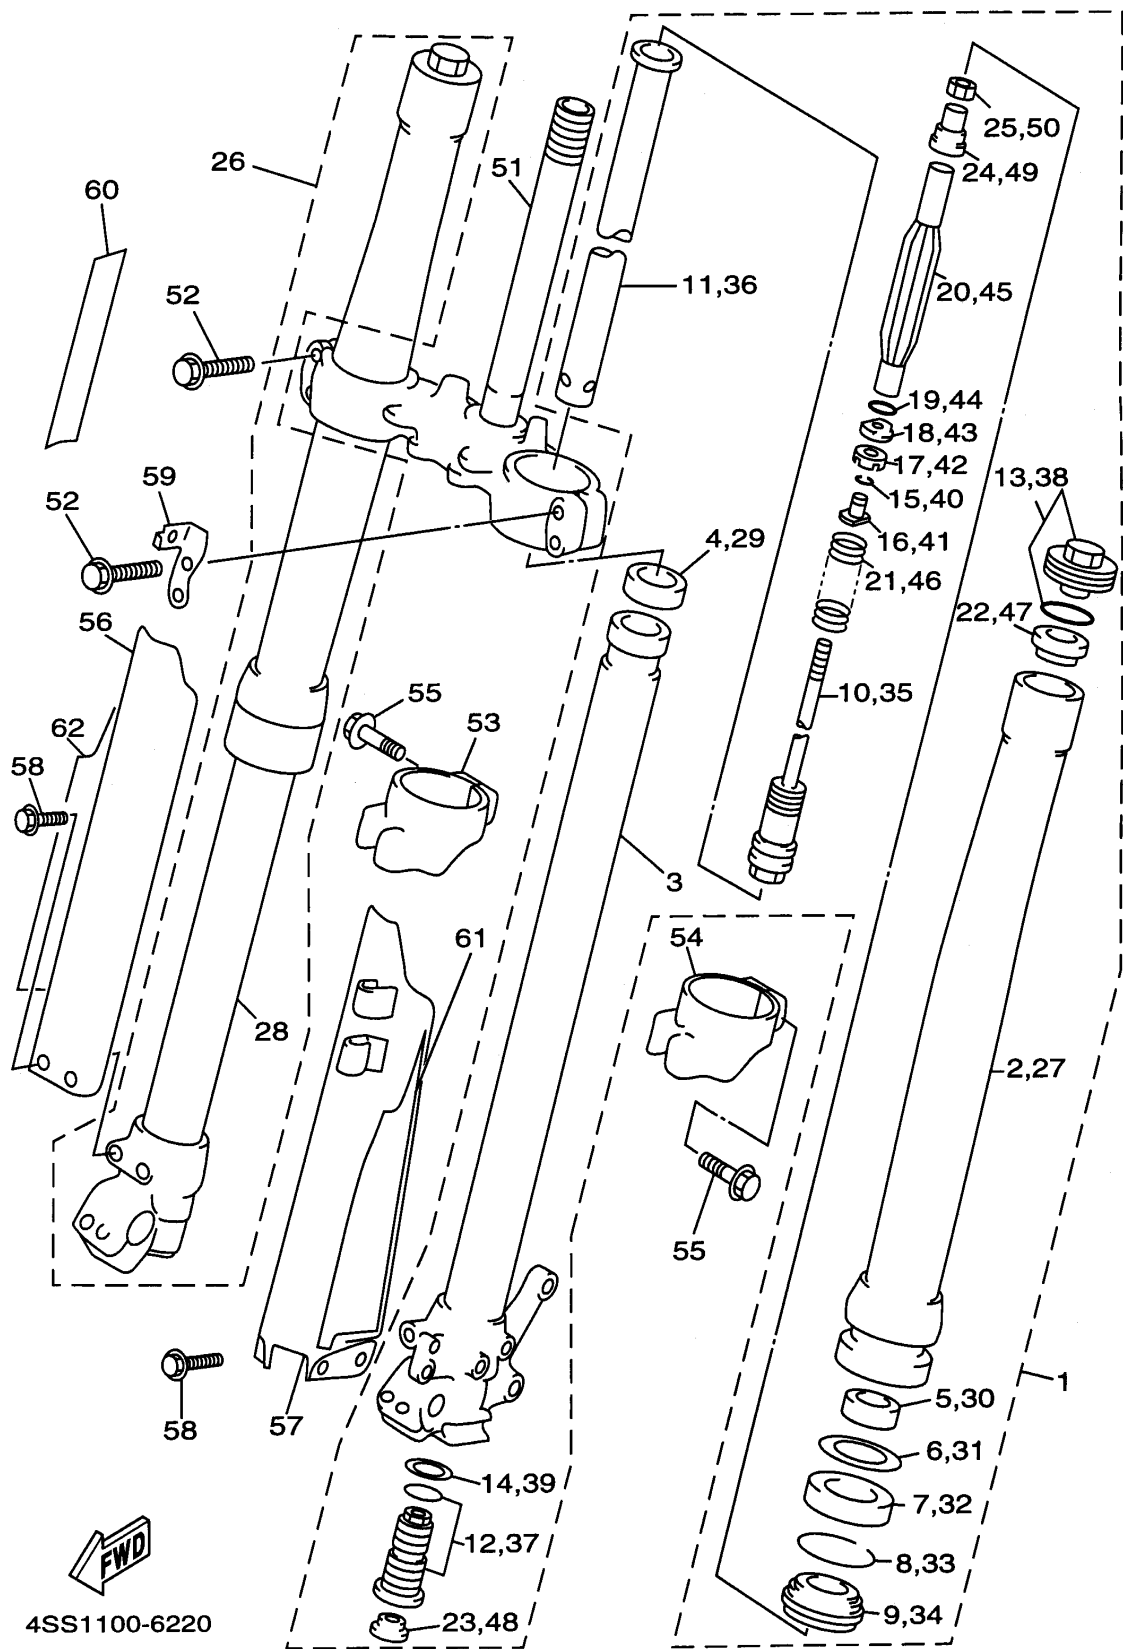

Ref. No.	Part Number	Description	Qty	Remarks
28	4SS-23110-L0-00	. INNER TUBE COMP 1	1	
29	4SS-23171-L0-00	. PISTON, FRONT FORK	1	
30	4SS-23125-L0-00	. METAL, SLIDE 1	1	
31	4SS-23146-L0-00	. WASHER, OIL SEAL	1	
32	4SS-23145-L0-00	. OIL SEAL	1	
33	4SS-23153-L0-00	. RING, SNAP	1	
34	4SS-23144-L0-00	. SEAL, DUST	1	
35	4SS-2314A-L0-00	. PISTON ROD ASSEMBLY	1	
36	4SS-23170-L0-00	. CYLINDER COMP., FRONT FORK	1	
37	4SR-2316A-L0-00	. VALVE COMP	1	
38	4SS-23111-L0-00	. BOLT , CAP	1	
39	4SS-23158-L0-00	. GASKET	1	
40	3SP-23153-L0-00	. RING, SNAP	2	
41	3SP-23113-L0-00	. COLLAR	1	
42	3SP-23166-L0-00	. SPACER, OIL LOCK	1	
43	3SP-23393-L0-00	. NUT, SPECIAL	1	
44	3JD-23147-L0-00	. O-RING	1	
45	4SS-23142-L0-00	. SEAT, SPRING UPPER	1	
46	4SR-23141-L0-00	. SPRING, FRONT FORK (K=0.42)	1	
47	4SS-23143-L0-00	. SEAT, SPRING LOWER	1	
48	3JD-2312G-L0-00	. PLUG	1	
49	4SS-23363-L0-00	. COLLAR 1	1	
50	3SP-23357-L0-00	. NUT	1	
51	4SR-23340-L0-00	UNDER BRACKET COMP.	1	
52	95024-08040-00	BOLT, FLANGE	8	
53	4SS-2314G-L0-00	PROTECTOR GUIDE COMP., 2	1	
54	4SS-2314F-L0-00	PROTECTOR GUIDE COMP., 1	1	

CONTINUED ON NEXT FRAME ➤

 
FRONT FORK

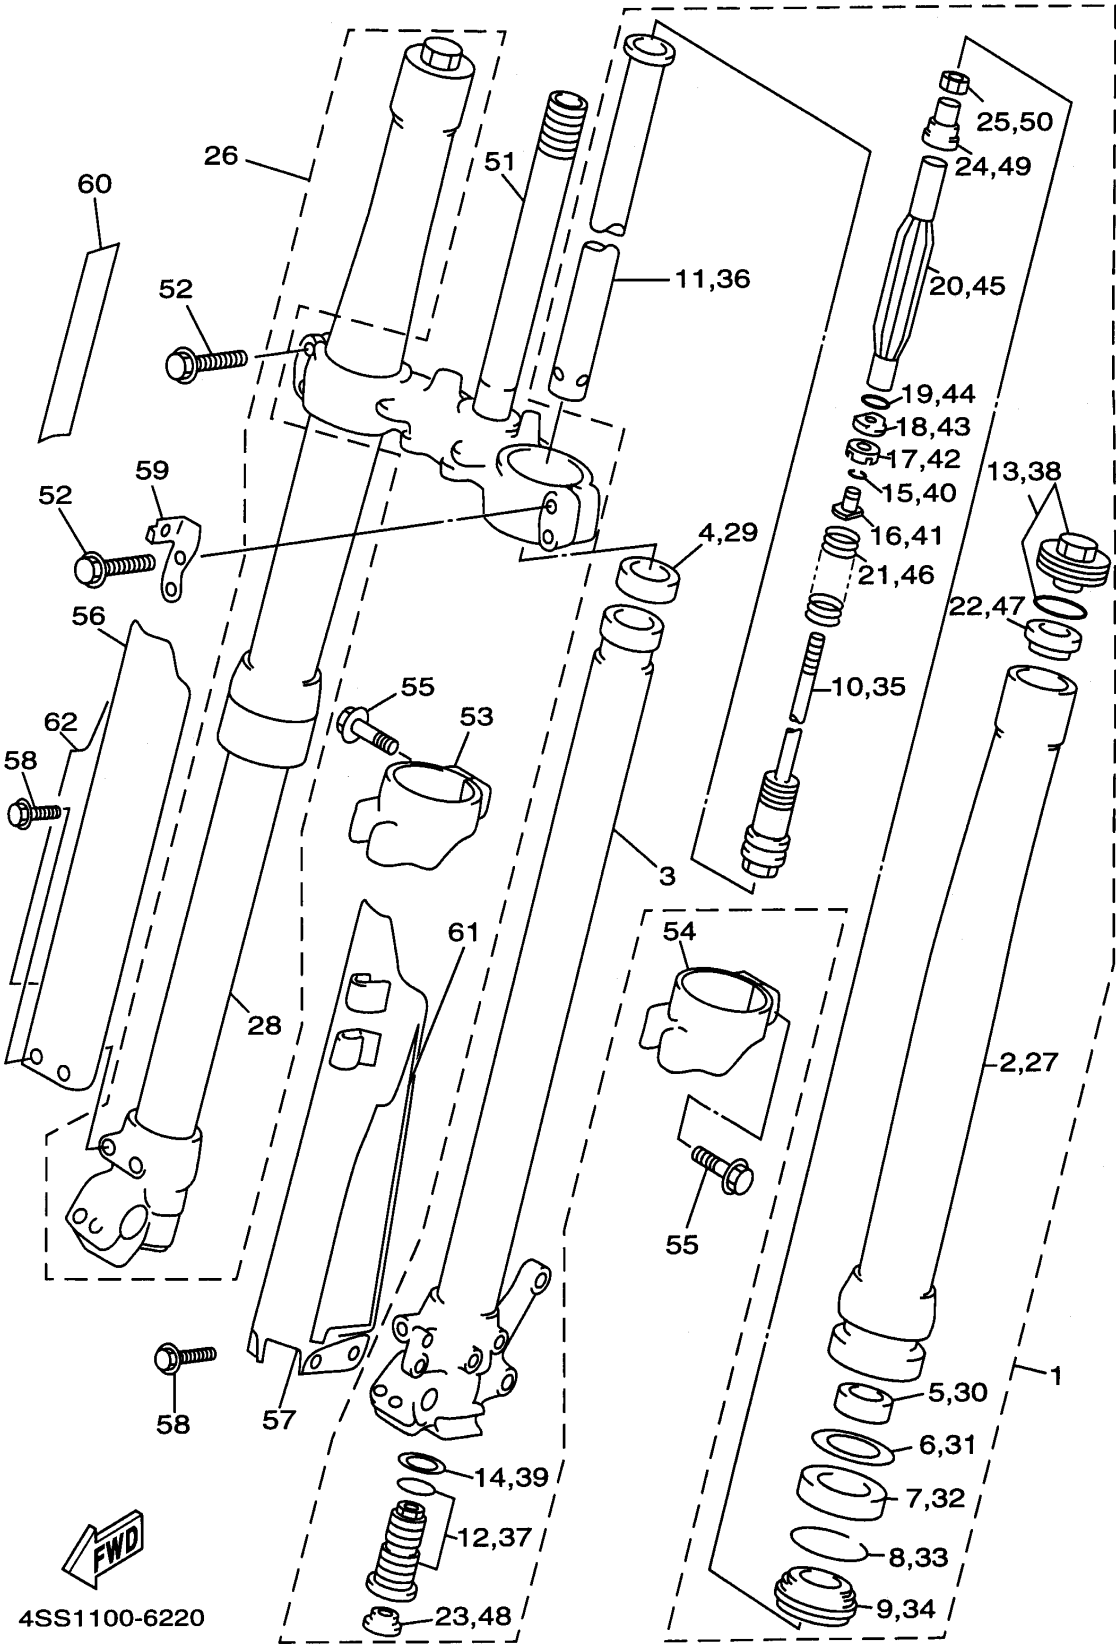


Ref. No.	Part Number	Description	Qty	Remarks
55	4SS-23346-L0-00	BOLT 1	2	
56	4SS-2314J-00-00	PROTECTOR COMP., 2	1	
57	4SS-2314H-00-00	PROTECTOR COMP., 1	1	
58	3SP-23356-L0-00	BOLT 2	6	
59	4EW-2331E-L0-00	GUIDE, CABLE	1	
60	99241-00160-00	EMBLEM, YAMAHA	2	
61	4SS-2313B-10-00	EMBLEM 1	1	
62	4SS-2313C-11-00	EMBLEM 2	1	

FUEL TANK

Ref. No.	Part Number	Description	Qty	Remarks
1	4SS-24110-00-00	FUEL TANK COMP.	1	
2	1UY-24610-00-00	CAP ASSEMBLY	1	
3	90445-09252-00	HOSE (90445-09220-00)	1	
4	24X-24144-00-00	HOLDER, DAMPER	2	
5	90480-18549-00	GROMMET	2	
6	95027-06016-00	BOLT, FLANGE	4	
7	90119-06214-00	BOLT, WITH WASHER	2	
8	3JD-24186-00-00	WASHER, SPECIAL	2	
9	98907-06020-00	SCREW, BIND	1	
10	3SP-24173-00-00	BAND, TANK FITTING 1	1	
11	4EW-2412F-00-00	BRACKET, SEAT	1	
12	98707-06025-00	SCREW, FLAT HEAD	1	
13	4SS-24181-00-00	DAMPER, LOCATING 1	1	
14	3JD-24500-01-00	FUEL COCK ASSEMBLY 1 ...	1	
15	4X8-24512-00-00	. O-RING	1	
16	3AJ-24534-00-00	. SEAL, COCK	1	
17	98580-03008-00	. SCREW, PAN HEAD	2	
18	90445-116G8-00	HOSE	1	
19	90467-10008-00	CLIP	2	
20	90202-05187-00	WASHER, PLATE	2	
21	90149-06011-00	SCREW	2	
22	4SS-24182-00-00	DAMPER, LOCATING 2	1	
23	90464-14117-00	BAND (6G1-2811G-00-00)	1	

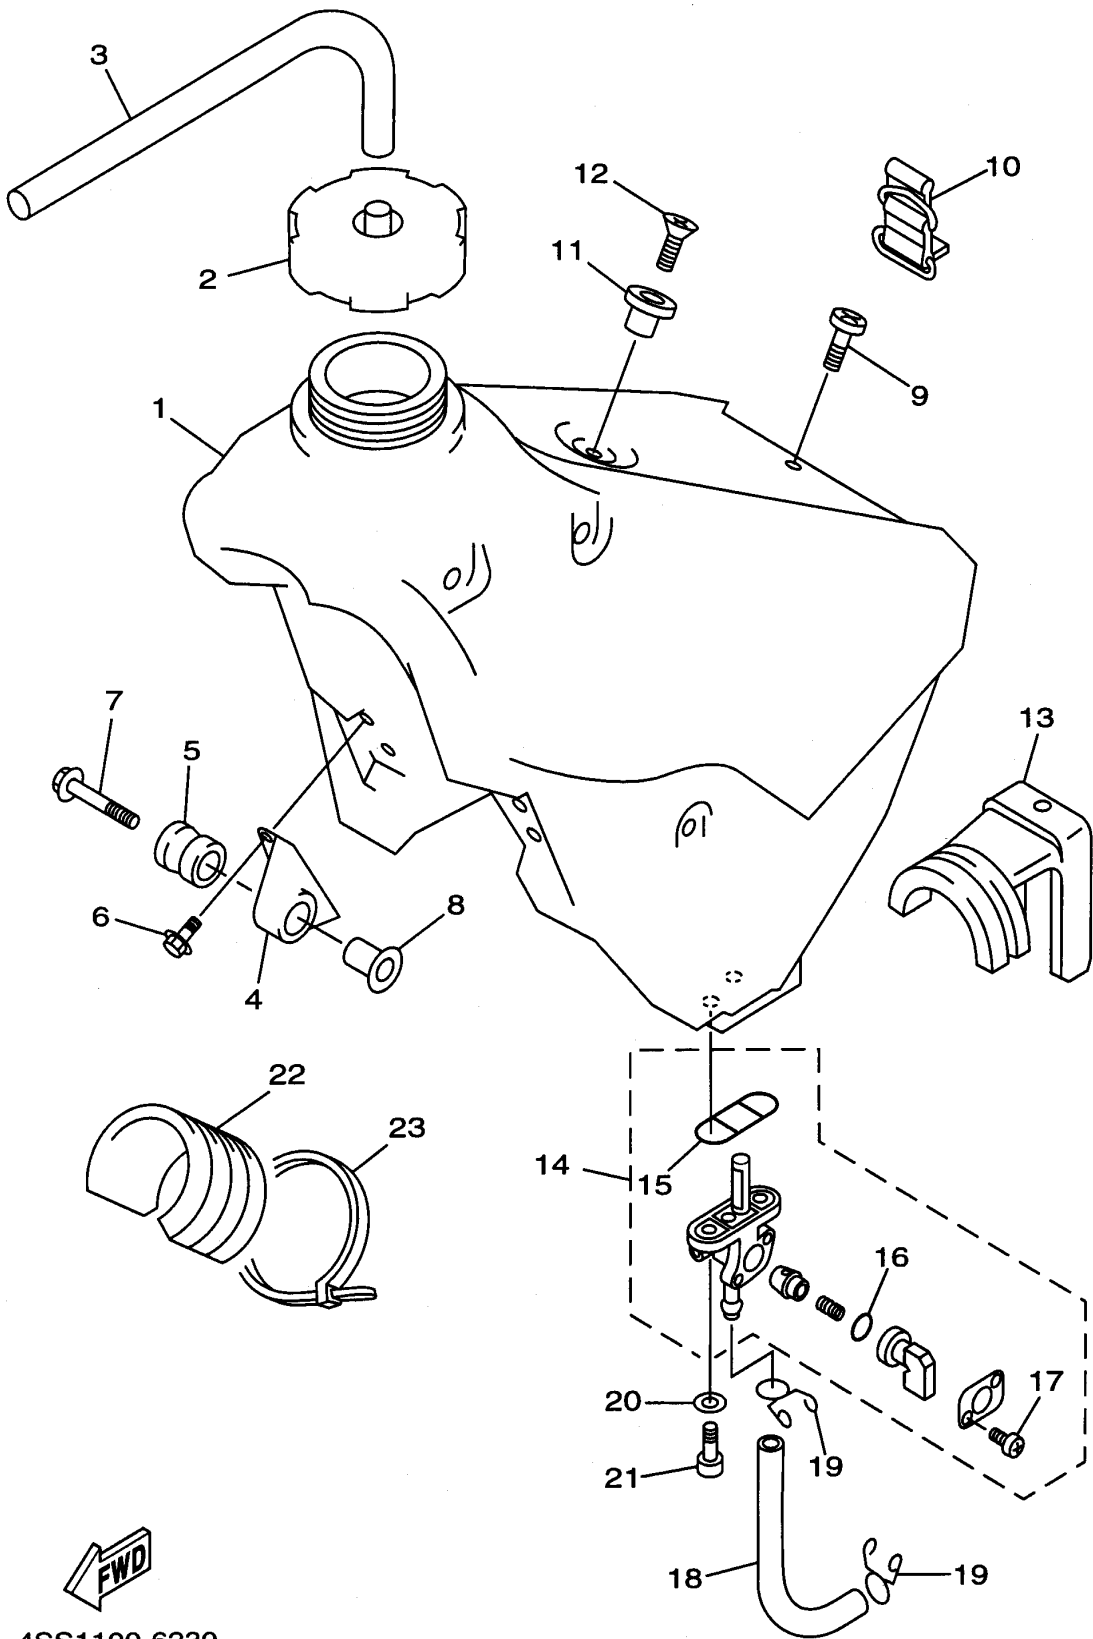 

 4SS1100-6230

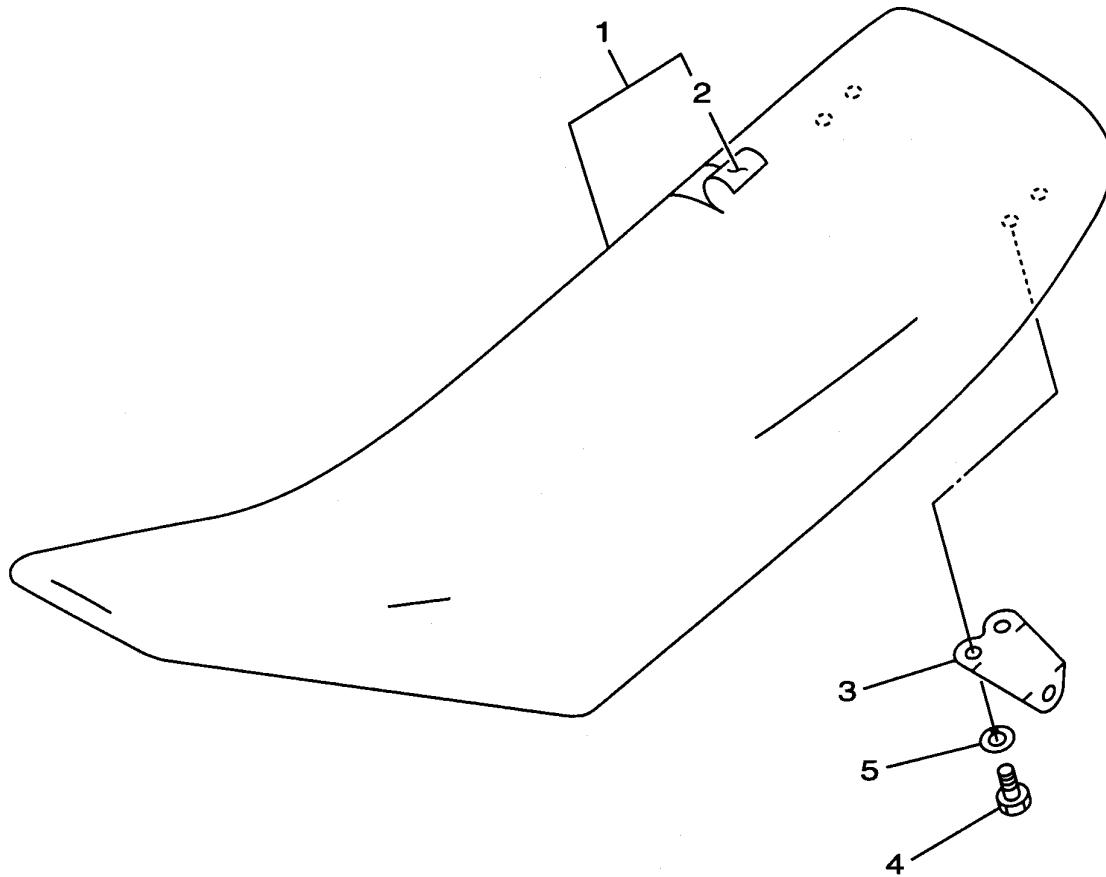 


SEAT

Ref. No.	Part Number	Description	Qty	Remarks
1	4SS-24770-00-00	SEMI-DOUBLE SEAT ASSEMBLY	1	
2	4SS-24731-00-00	. COVER, SEAT	1	
3	4SS-24728-00-00	. BRACKET, SEAT	2	
4	97027-06012-00	. BOLT	4	
5	92907-06100-00	. WASHER, SPRING	4	



 4SS1100-6240

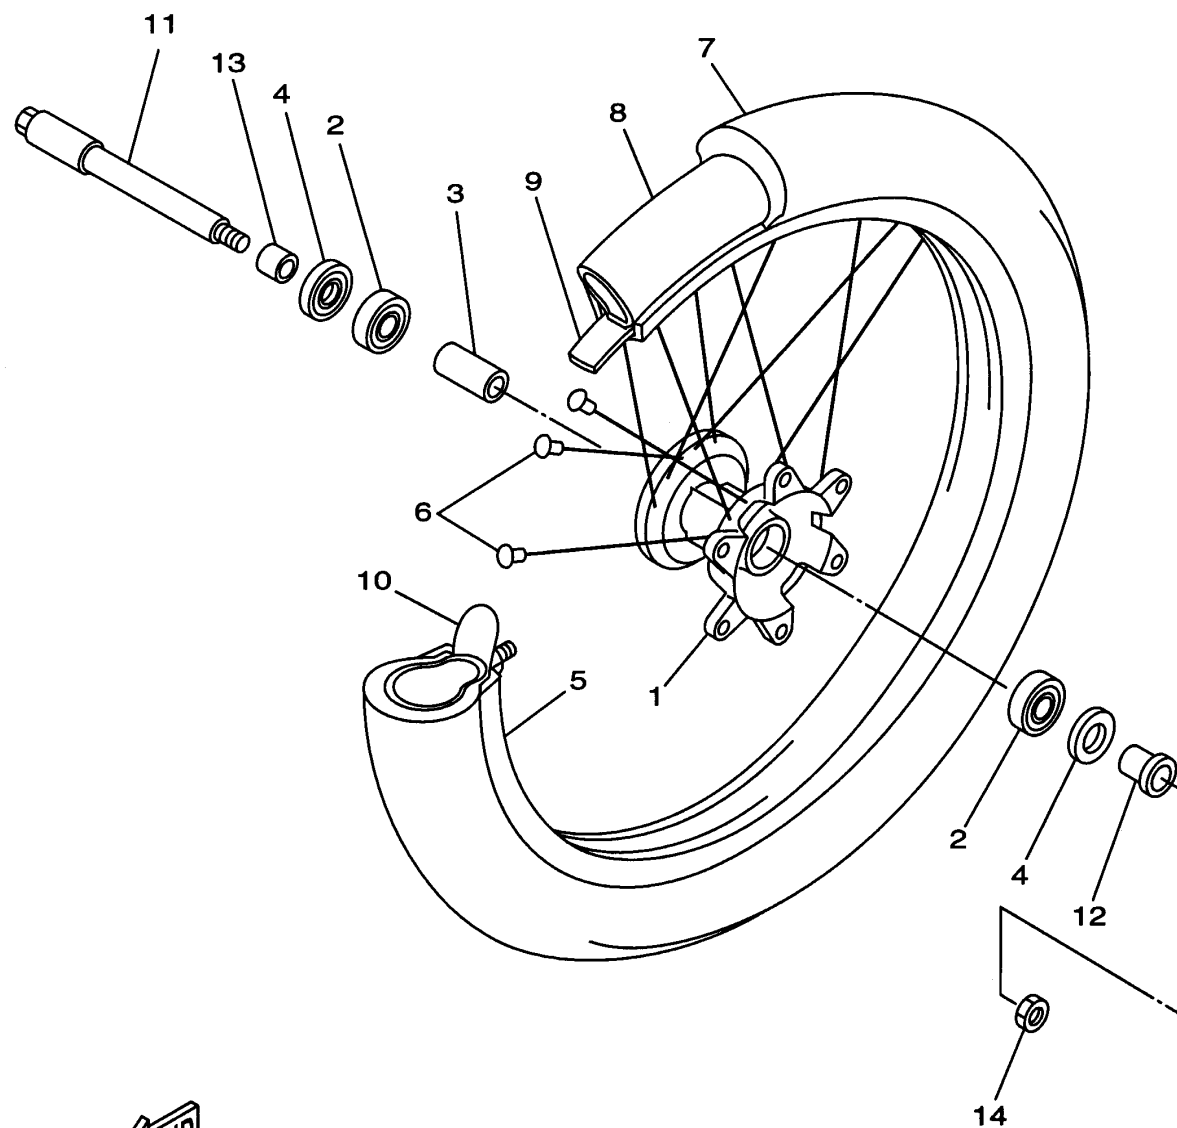


4SS1100-6250


FRONT WHEEL

Ref. No.	Part Number	Description	Qty	Remarks
1	4SS-25111-00-00	HUB, FRONT	1	
2	93306-90403-00	BEARING	2	
3	90387-2007U-00	COLLAR	1	
4	93102-25360-00	OIL SEAL	2	
5	94416-21547-00	RIM (1.60-21)	1	
6	4DA-25104-00-00	SPOKE SET, FRONT	1	
7	94108-217X6-00	TIRE (80/100-21 K490) (941-08217-X2-00)	1	UR DUNLOP
8	94227-21123-00	TUBE (2.75-21)	1	BRIDGESTONE
9	94307-21145-00	BAND, RIM (70-80/100-21)	1	DUNLOP
10	5X2-25394-00-00	SPACER, BEAD	1	
11	4SS-25181-00-00	AXLE, WHEEL	1	
12	90387-2007T-00	COLLAR	1	
13	90387-2007S-00	COLLAR	1	
14	90179-16672-00	NUT	1	

 
FRONT BRAKE CALIPER

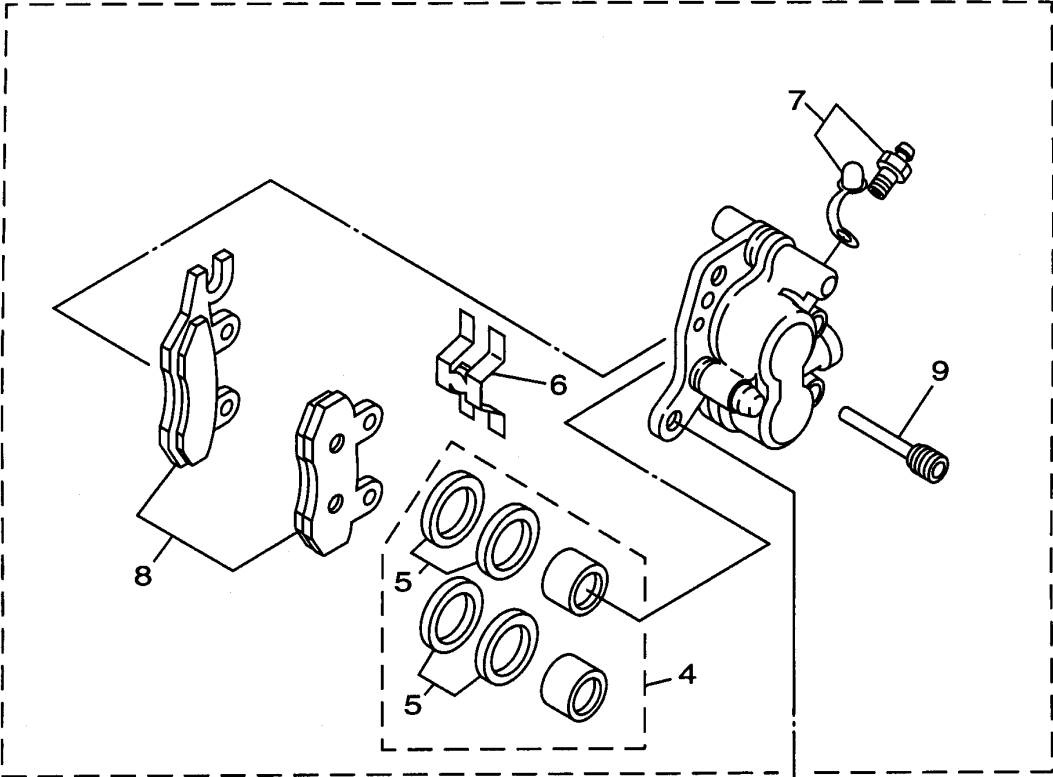

Ref. No.	Part Number	Description	Qty	Remarks
1	4JX-2582T-00-00	DISC, BRAKE	1	
2	90149-06272-00	SCREW	6	
3	4SS-2580T-00-00	CALIPER ASSEMBLY (LEFT) ..	1	
4	4EW-W0057-00-00	. PISTON ASSEMBLY, CALIPER	1	
5	3JD-W0047-00-00	.. CALIPER SEAL KIT	1	
6	3SP-25919-01-00	. SUPPORT, PAD	1	
7	36Y-W0048-00-00	. BLEED SCREW KIT	1	
8	4SS-W0045-00-00	. BRAKE PAD KIT	1	
9	3GD-25933-00-00	. PIN, PAD	2	
10	90105-08659-00	BOLT, WASHER BASED	1	
11	90109-080G6-00	BOLT	1	
12	90201-090J9-00	WASHER, PLATE	1	
13	4SS-2314E-00-00	COVER, HOSE	1	
14	95817-06012-00	BOLT, FLANGE	1	
15	95027-08020-00	BOLT, FLANGE	1	
16	92907-08200-00	WASHER	1	

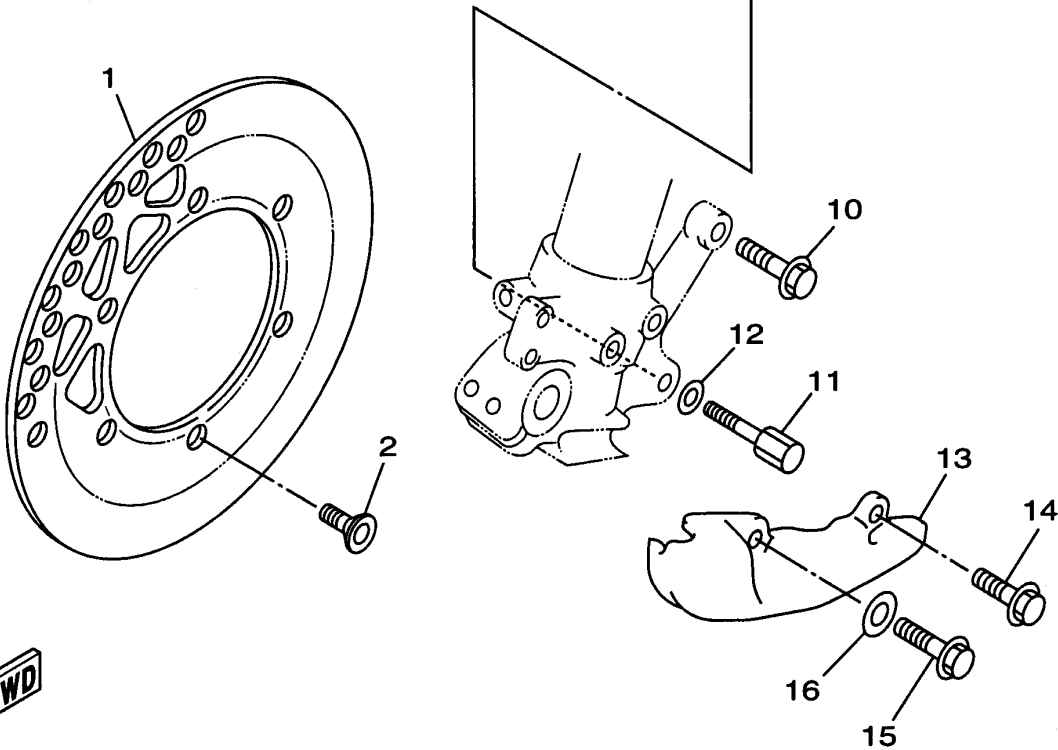 

4SS1100-6260

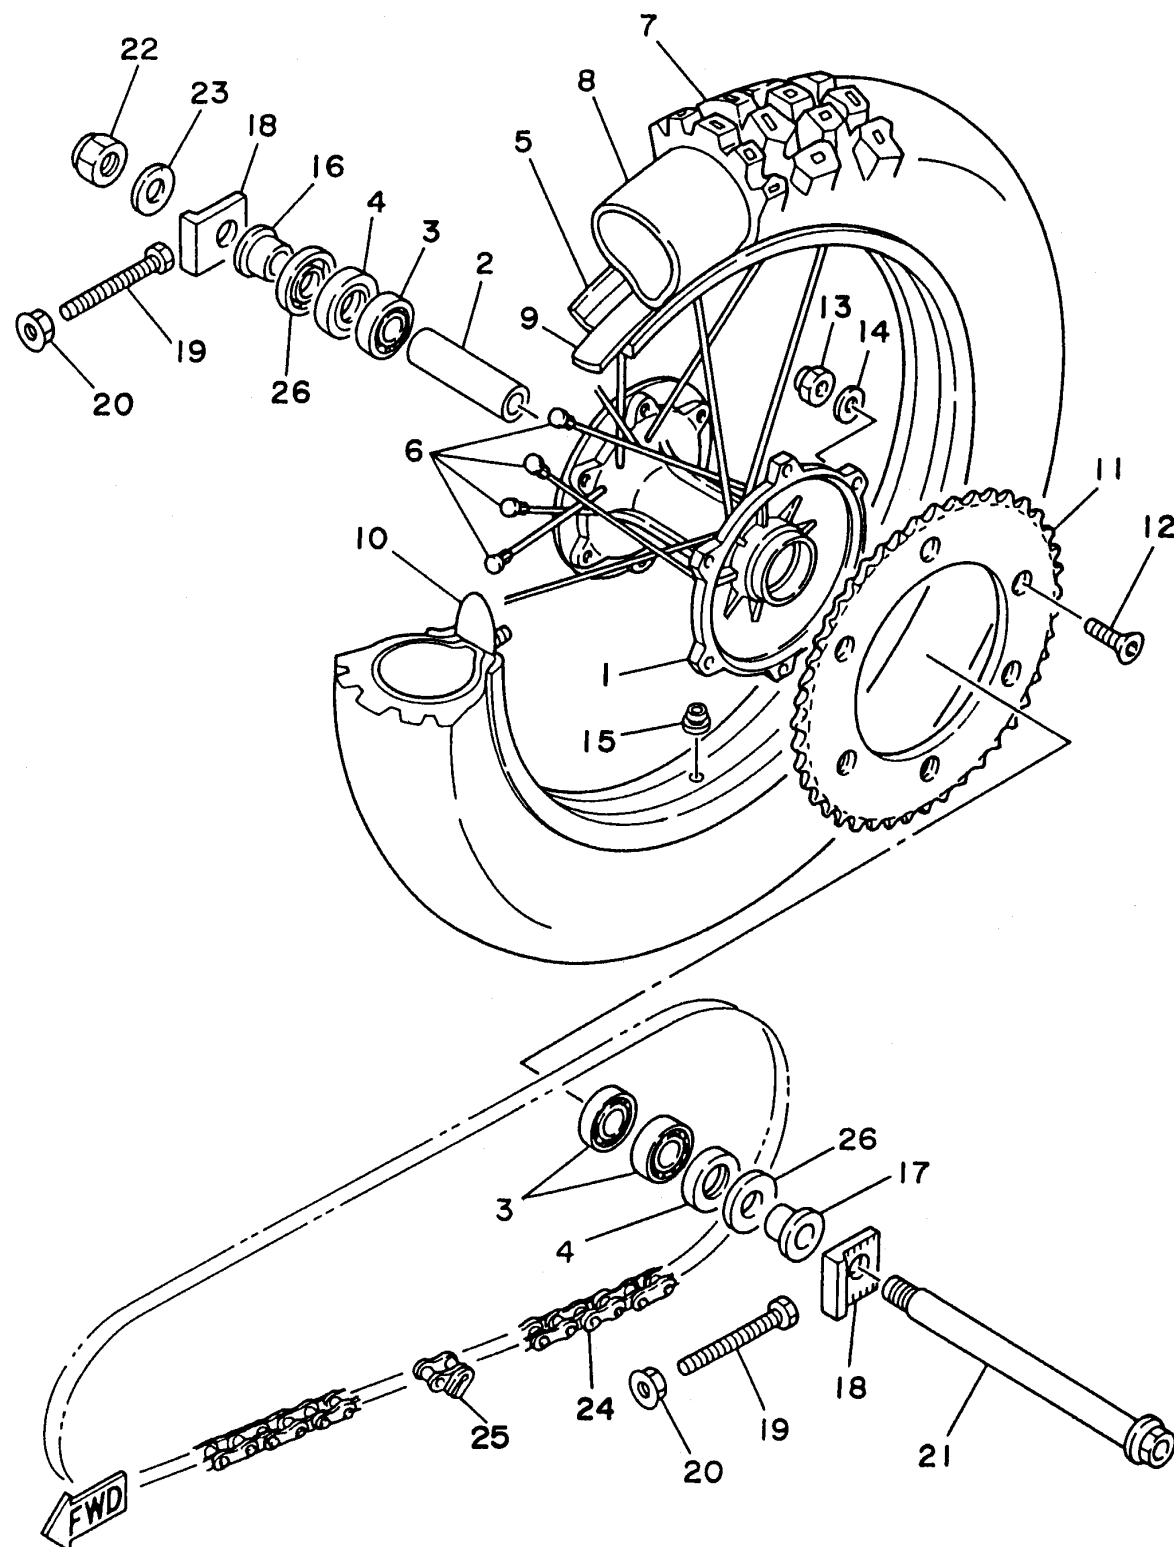 


4SR1100-6270

REAR WHEEL

Ref. No.	Part Number	Description	Qty	Remarks
1	4EW-25311-00-00	HUB, REAR	1	
2	90560-20278-00	SPACER	1	
3	93306-00418-00	BEARING	3	
4	93106-28023-00	OIL SEAL	2	
5	94421-19538-00	RIM (2.15-19)	1	
6	3JD-25304-00-00	SPOKE SET, REAR	1	
7	94111-197X4-00	TIRE (110/90-19 62M K695) (941-11190-2Y-00)	1	UR DUNLOP
8	94211-19273-00	TUBE (110/90 110/100-19TR4) .	1	DUNLOP
9	94311-19155-00	BAND, RIM (110/90 110/100-19)	1	DUNLOP
10	3JE-25394-00-00	SPACER, BEAD	1	
11	4SS-25447-00-00	SPROCKET, DRIVEN (47T) ...	1	AP
	4SS-25448-00-00	SPROCKET, DRIVEN (48T) ...	1	AP
	4SS-25449-00-00	SPROCKET, DRIVEN (49T) ...	1	STD
	4SS-25450-00-00	SPROCKET, DRIVEN (50T) ...	1	AP
	4SS-25451-00-00	SPROCKET, DRIVEN (51T) ...	1	AP
	4SS-25452-00-00	SPROCKET, DRIVEN (52T) ...	1	AP
12	90109-081G1-00	BOLT	6	
13	95617-08100-00	NUT, U	6	
14	90201-086P8-00	WASHER, PLATE	6	
15	90480-10068-00	GROMMET	1	
16	90387-2000B-00	COLLAR	1	
17	90387-2000C-00	COLLAR	1	
18	3SP-25388-00-00	PULLER, CHAIN 1	2	
19	90101-08777-00	BOLT	2	
20	95707-08500-00	NUT, FLANGE	2	
21	3JD-25381-01-00	AXLE, WHEEL	1	
22	90185-18104-00	NUT, SELF-LOCKING	1	
23	92907-18600-00	WASHER	1	

CONTINUED ON NEXT FRAME ►

 REAR WHEEL

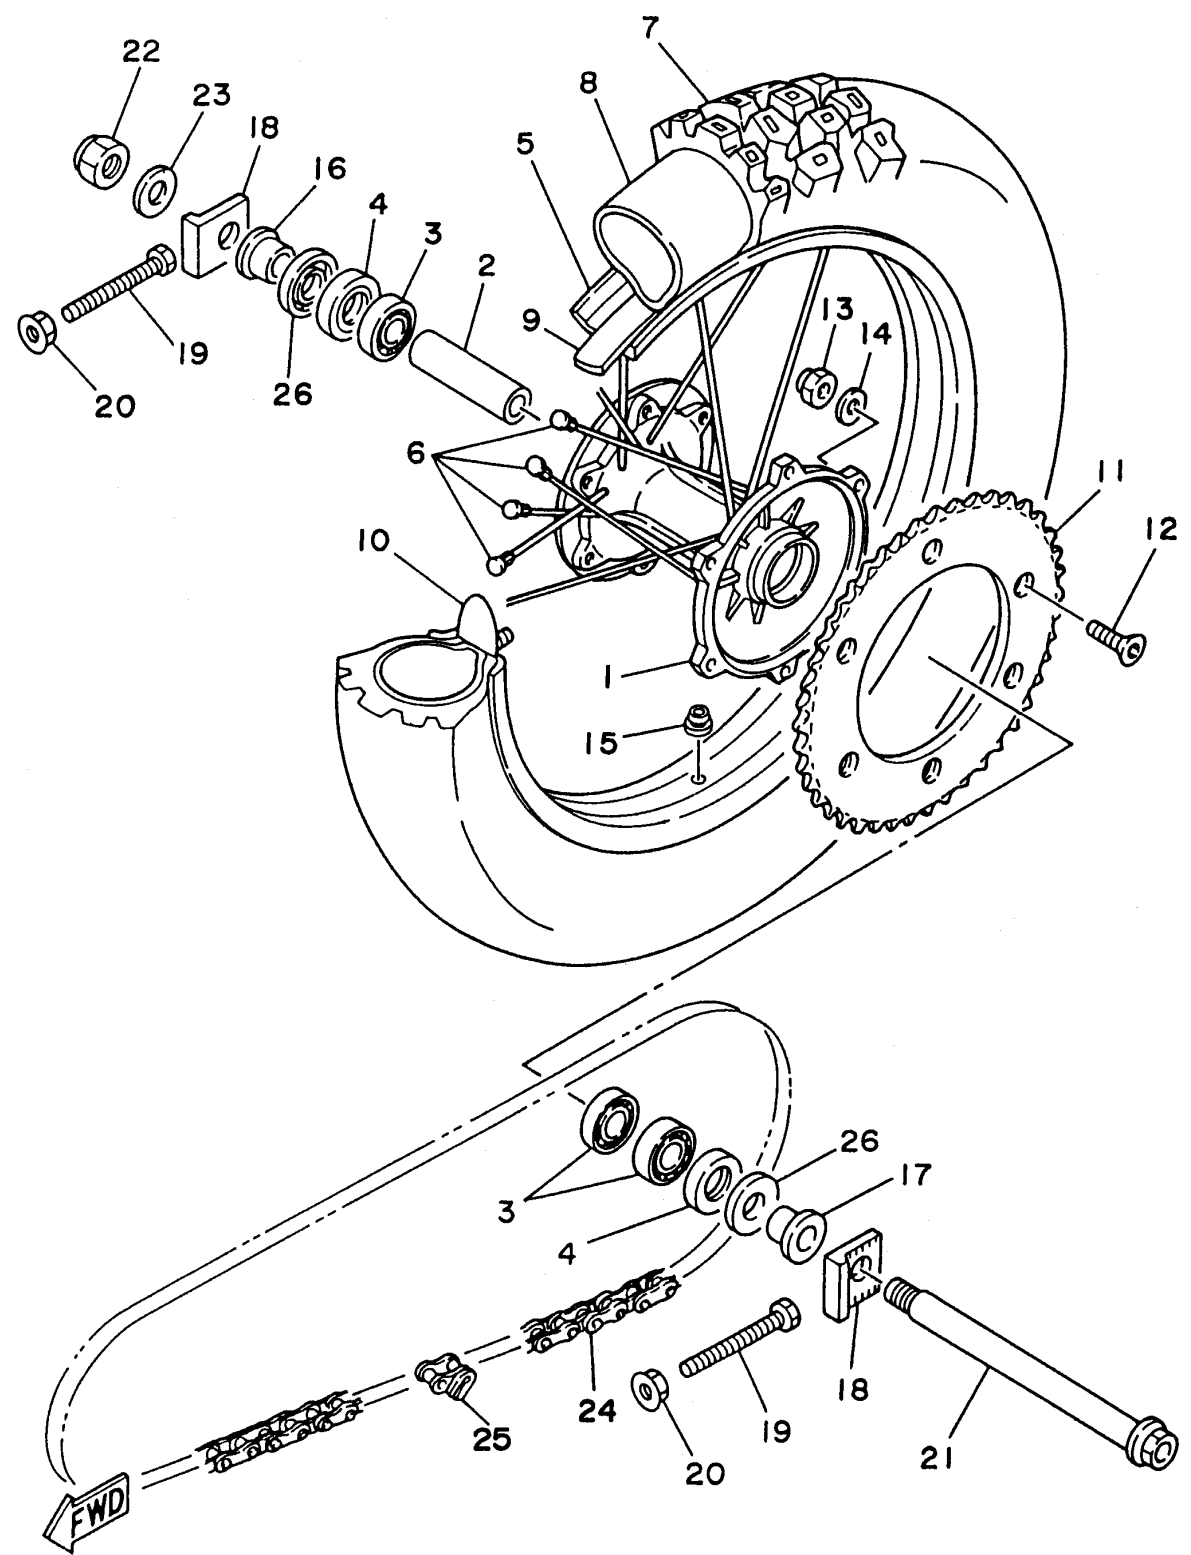


Ref. No.	Part Number	Description	Qty	Remarks
24	94561-55113-00	CHAIN (REGINA 135RX3-113L)	1	
25	94661-55001-00	JOINT, CHAIN	1	
26	4V4-25367-00-00	COVER, HUB DUST	2	

4SR1100-6270


REAR BRAKE CALIPER

Ref. No.	Part Number	Description	Qty	Remarks
1	4MX-2582W-00-00	DISC, REAR BRAKE 2	1	
2	90149-06272-00	SCREW	6	
3	4MX-2580W-00-00	CALIPER ASSEMBLY, REAR 2	1	
4	3SP-W0057-50-00	. PISTON ASSEMBLY, CALIPER	1	
5	3JD-W0047-50-00	. . CALIPER SEAL KIT	1	
6	4GY-25919-50-00	. SUPPORT, PAD	1	
7	36Y-W0048-00-00	. BLEED SCREW KIT	1	
8	4GY-W0046-00-00	. BRAKE PAD KIT 2	1	
9	3SP-25924-51-00	. PIN, PAD	2	
10	4GY-25827-50-00	. SHIM, CALIPER	1	
11	4GY-22898-50-00	. INSULATOR, HEAT	1	
12	4MX-25718-00-00	PROTECTOR, DISK BRAKE ...	1	
13	95027-06012-00	BOLT, FLANGE	2	
14	4GY-27491-00-00	PROTECTOR	1	
15	95027-06016-00	BOLT, FLANGE	2	

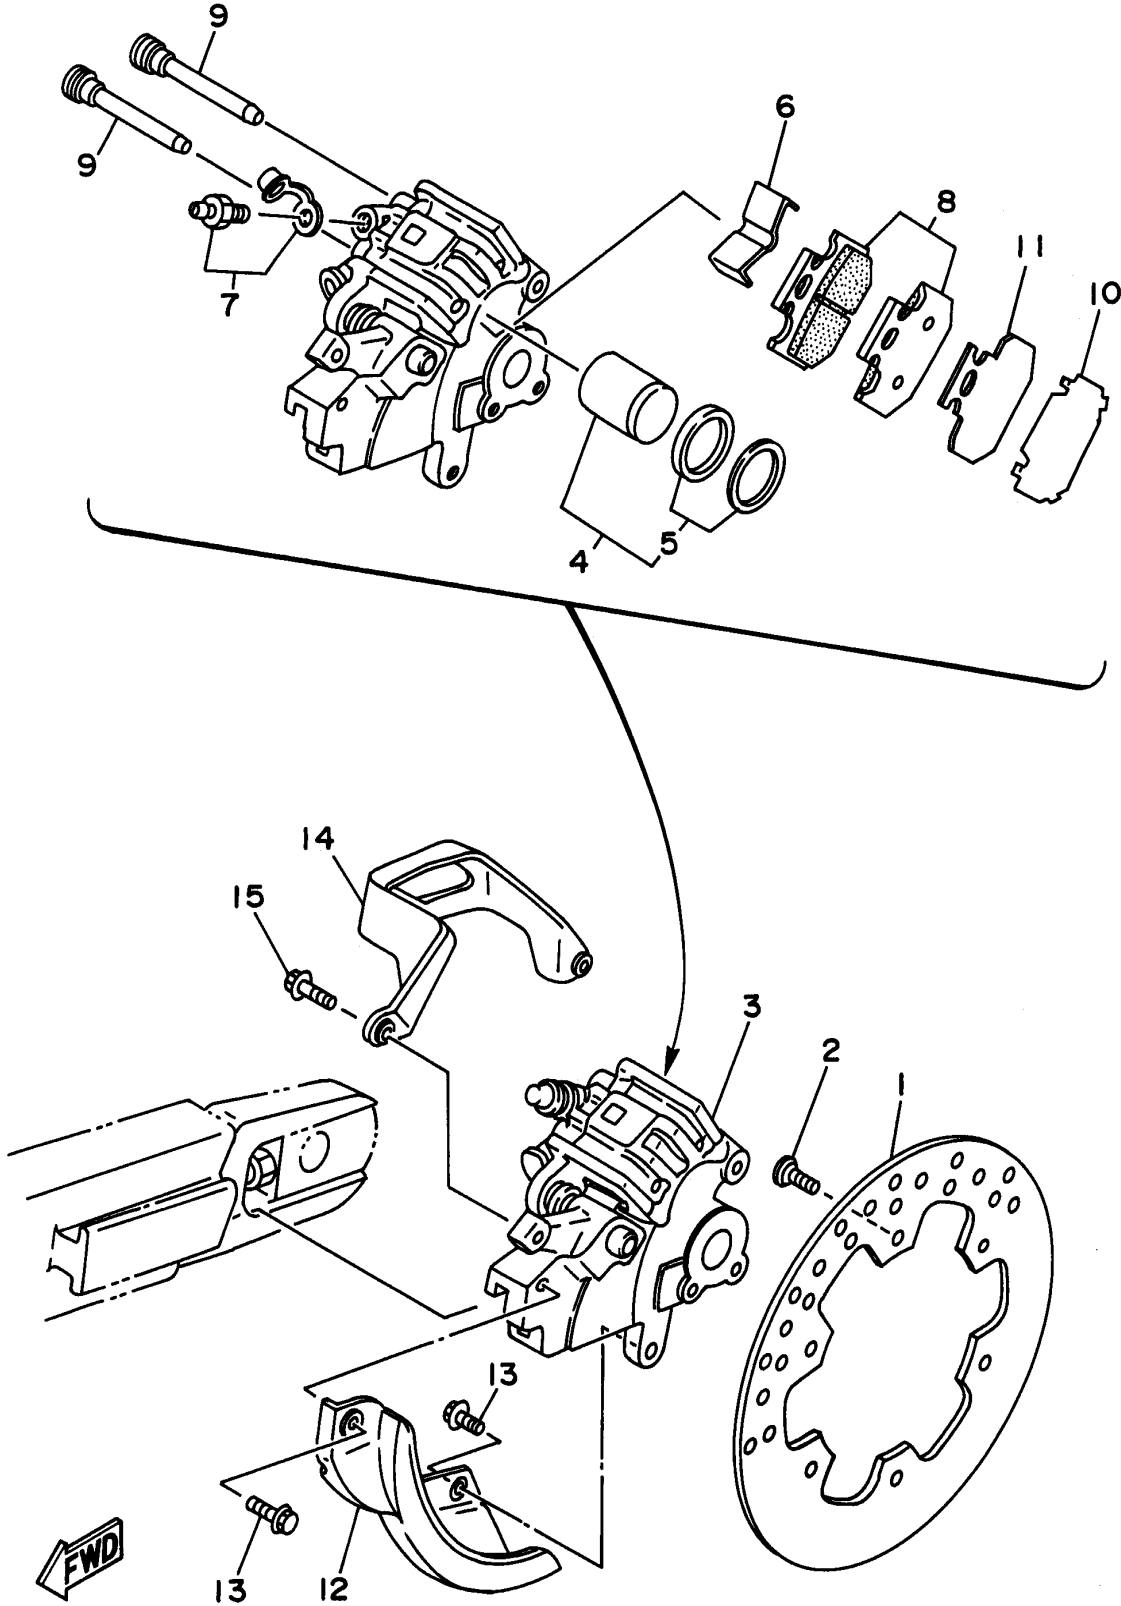 


4PEI100-5280

 STEERING HANDLE - CABLE

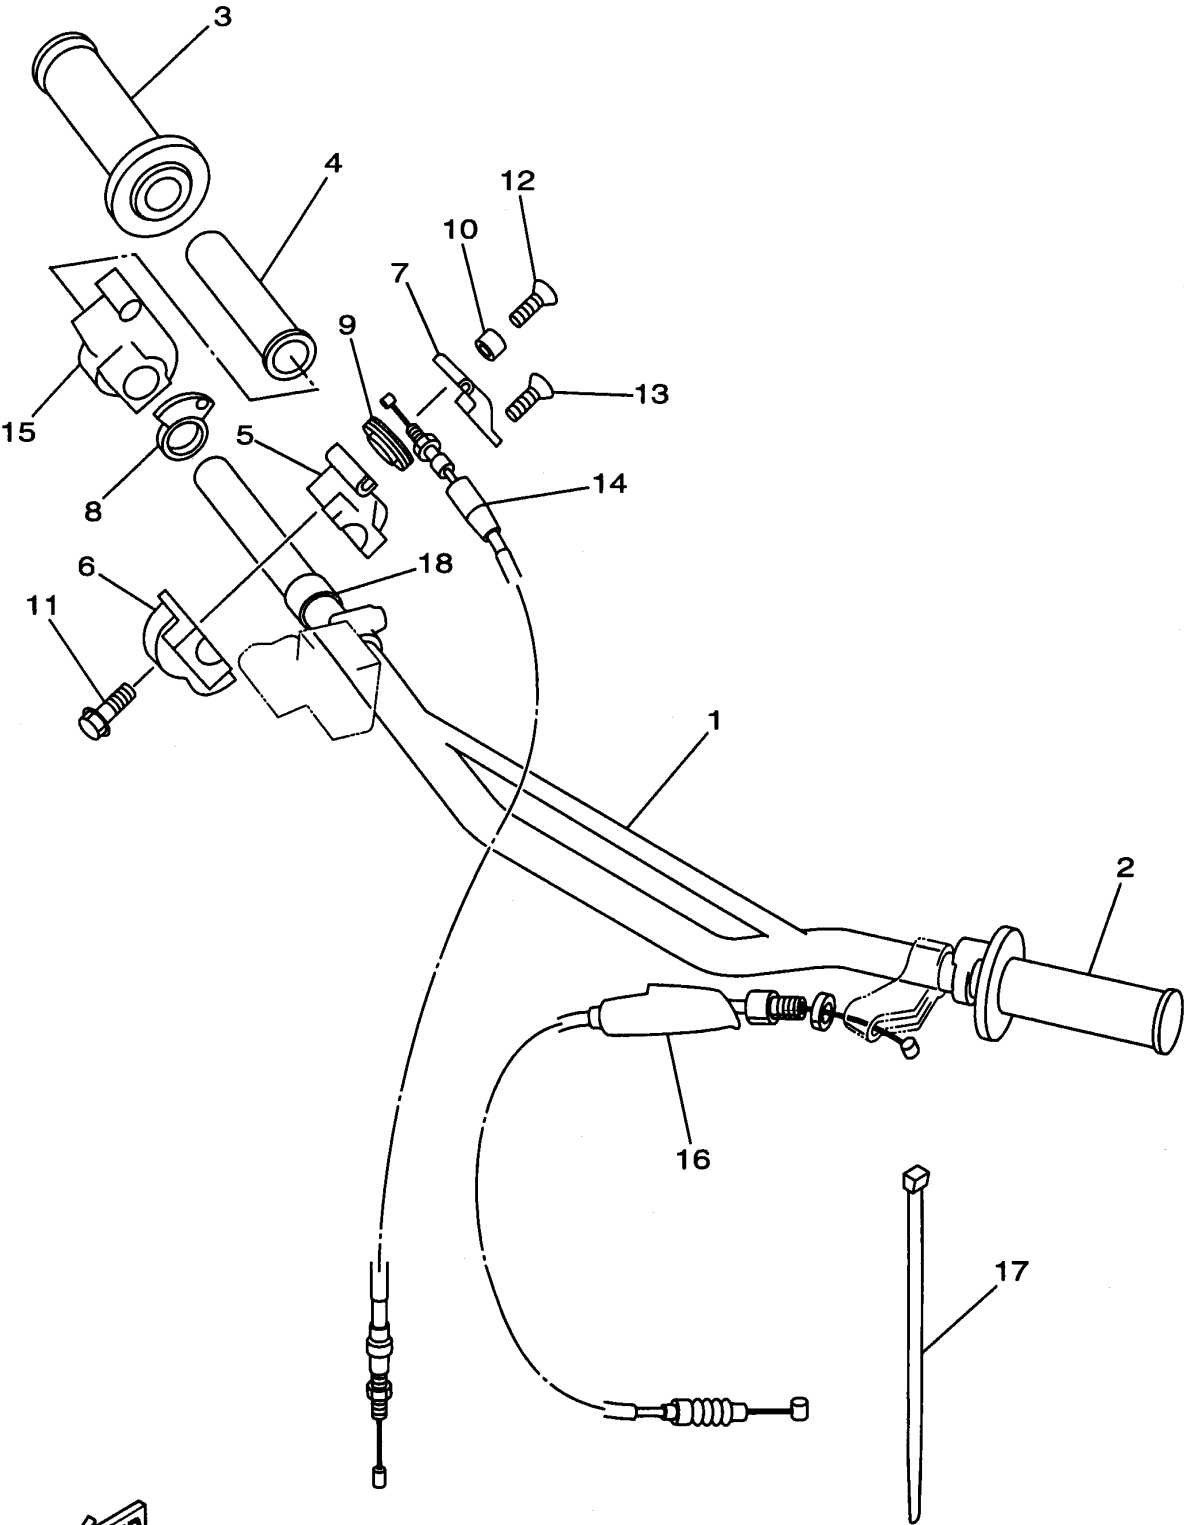

Ref. No.	Part Number	Description	Qty	Remarks
1	4JX-26111-00-00	HANDLEBAR	1	
2	4SS-26241-00-00	GRIP (LEFT)	1	
3	4SS-26242-00-00	GRIP (RIGHT)	1	
4	4SS-26243-00-00	TUBE, THROTTLE GUIDE	1	
5	4SS-26281-00-00	CAP, GRIP UPPER	1	
6	4SS-26282-01-00	CAP, GRIP LOWER	1	
7	4SS-2628H-00-00	CAP, WIRE	1	
8	4SS-2627A-00-00	ROTOR 2	1	
9	4SS-26273-00-00	ROTOR	1	
10	4SS-26259-00-00	COLLAR	1	
11	95027-06025-00	BOLT, FLANGE	2	
12	98707-04018-00	SCREW, FLAT HEAD	1	
13	98707-04010-00	SCREW, FLAT HEAD	1	
14	4SS-26311-01-00	CABLE, THROTTLE 1	1	
15	4SS-26287-01-00	COVER, CAP GRIP	1	
16	4EW-26335-00-00	CABLE, CLUTCH	1	
17	90464-14117-00	BAND (6G1-2811G-00-00)	1	
18	90387-227H7-00	COLLAR	1	

  4SR1100-6290

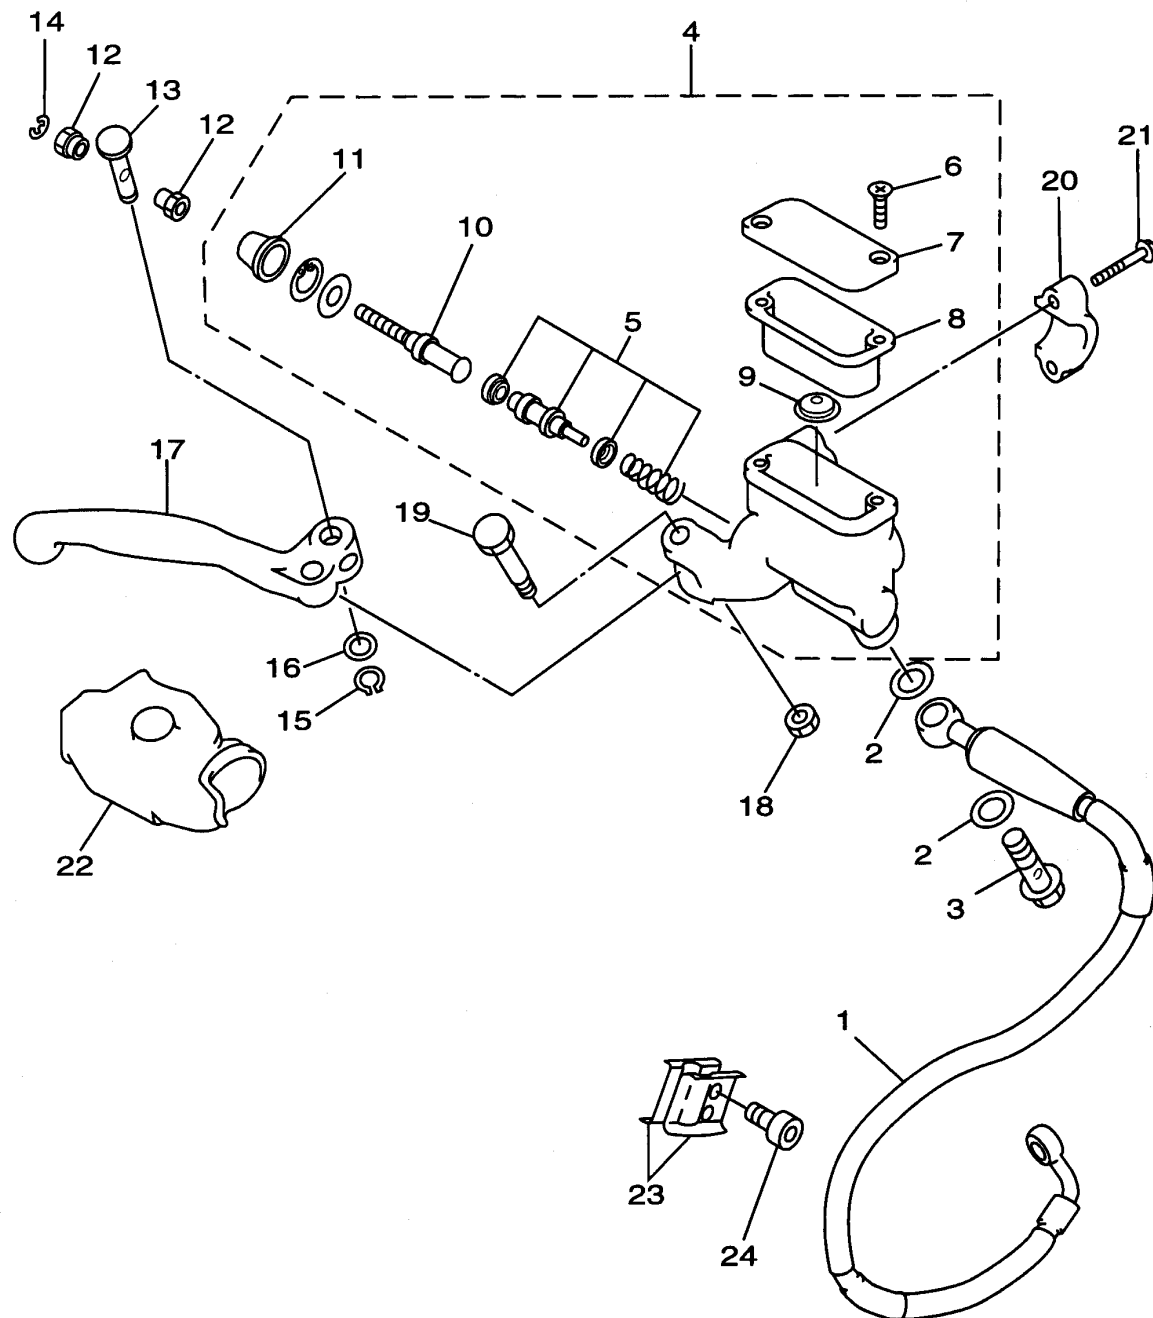


FRONT MASTER CYLINDER

Ref. No.	Part Number	Description	Qty	Remarks
1	4SS-25872-00-00	HOSE, BRAKE 1	1	
2	90201-10118-00	WASHER, PLATE	4	
3	90401-10159-00	BOLT, UNION	2	
4	4SS-W2587-00-00	MASTER CYLINDER SUB ASSEMBLY	1	
5	4SS-W0041-00-00	. CYLINDER KIT, MASTER	1	
6	98707-04012-00	. SCREW, FLAT HEAD	2	
7	4SS-25852-00-00	. CAP, RESERVOIR	1	
8	4SS-25854-00-00	. DIAPHRAGM, RESERVOIR	1	
9	4SS-25889-00-00	. SEPARATOR ASSEMBLY	1	
10	4SS-25880-00-00	. PUSH ROD COMP.	1	
11	4SS-25868-00-00	. BOOT, MASTER CYLINDER	1	
12	4SS-2538E-00-00	NUT, ADJUSTING	2	
13	4SS-83913-00-00	COLLAR, LEVER 1	1	
14	3YX-25866-10-00	CIRCLIP	1	
15	4SS-25866-00-00	CIRCLIP	1	
16	4SS-2583G-00-00	WASHER	1	
17	4SS-83922-00-00	LEVER 2	1	
18	95617-06100-00	NUT, U	1	
19	4SS-2589F-00-00	BOLT, LEVER	1	
20	3YK-25867-00-00	BRACKET, MASTER CYLINDER	1	
21	4SS-25833-00-00	BOLT, FITTING	2	
22	4SS-26372-00-00	COVER, HANDLE LEVER 1	1	
23	90465-16258-00	CLAMP	2	
24	91317-06014-00	BOLT	2	




4SS1100-6300

 STAND - FOOTREST

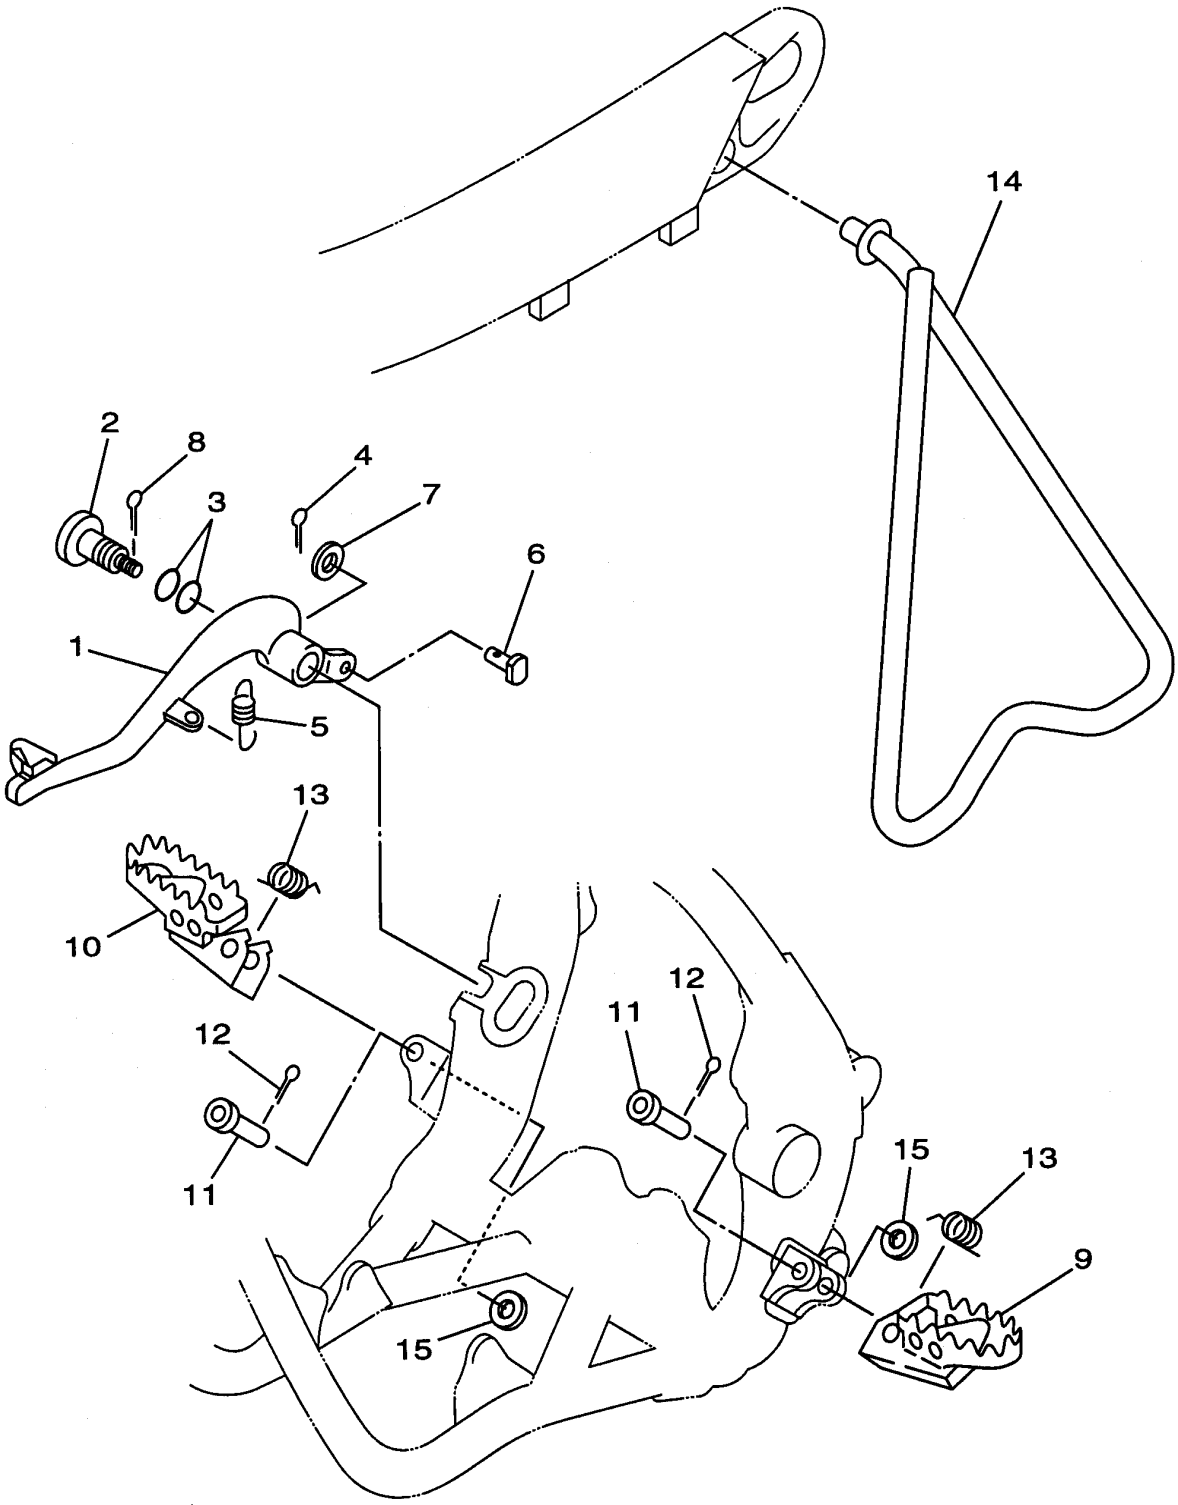

Ref. No.	Part Number	Description	Qty	Remarks
1	4SS-27200-00-00	PEDAL, BRAKE	1	
2	4SS-27217-00-00	BOLT	1	
3	93210-11073-00	O-RING	2	
4	91490-20025-00	PIN, COTTER	1	
5	90506-16500-00	SPRING, TENSION	1	
6	90240-08120-00	PIN, CLEVIS	1	
7	92990-08600-00	WASHER, PLATE	1	
8	90468-16191-00	CLIP	1	
9	4DA-27411-00-00	FOOTREST 1	1	
10	4DA-27421-00-00	FOOTREST 2	1	
11	90240-10117-00	PIN, CLEVIS	2	
12	91490-25020-00	PIN, COTTER	2	
13	90508-28777-00	SPRING, TORSION	2	
14	4ES-27311-00-00	STAND, SIDE	1	
15	90201-10119-00	WASHER, PLATE	2	

 

4SS1100-6310

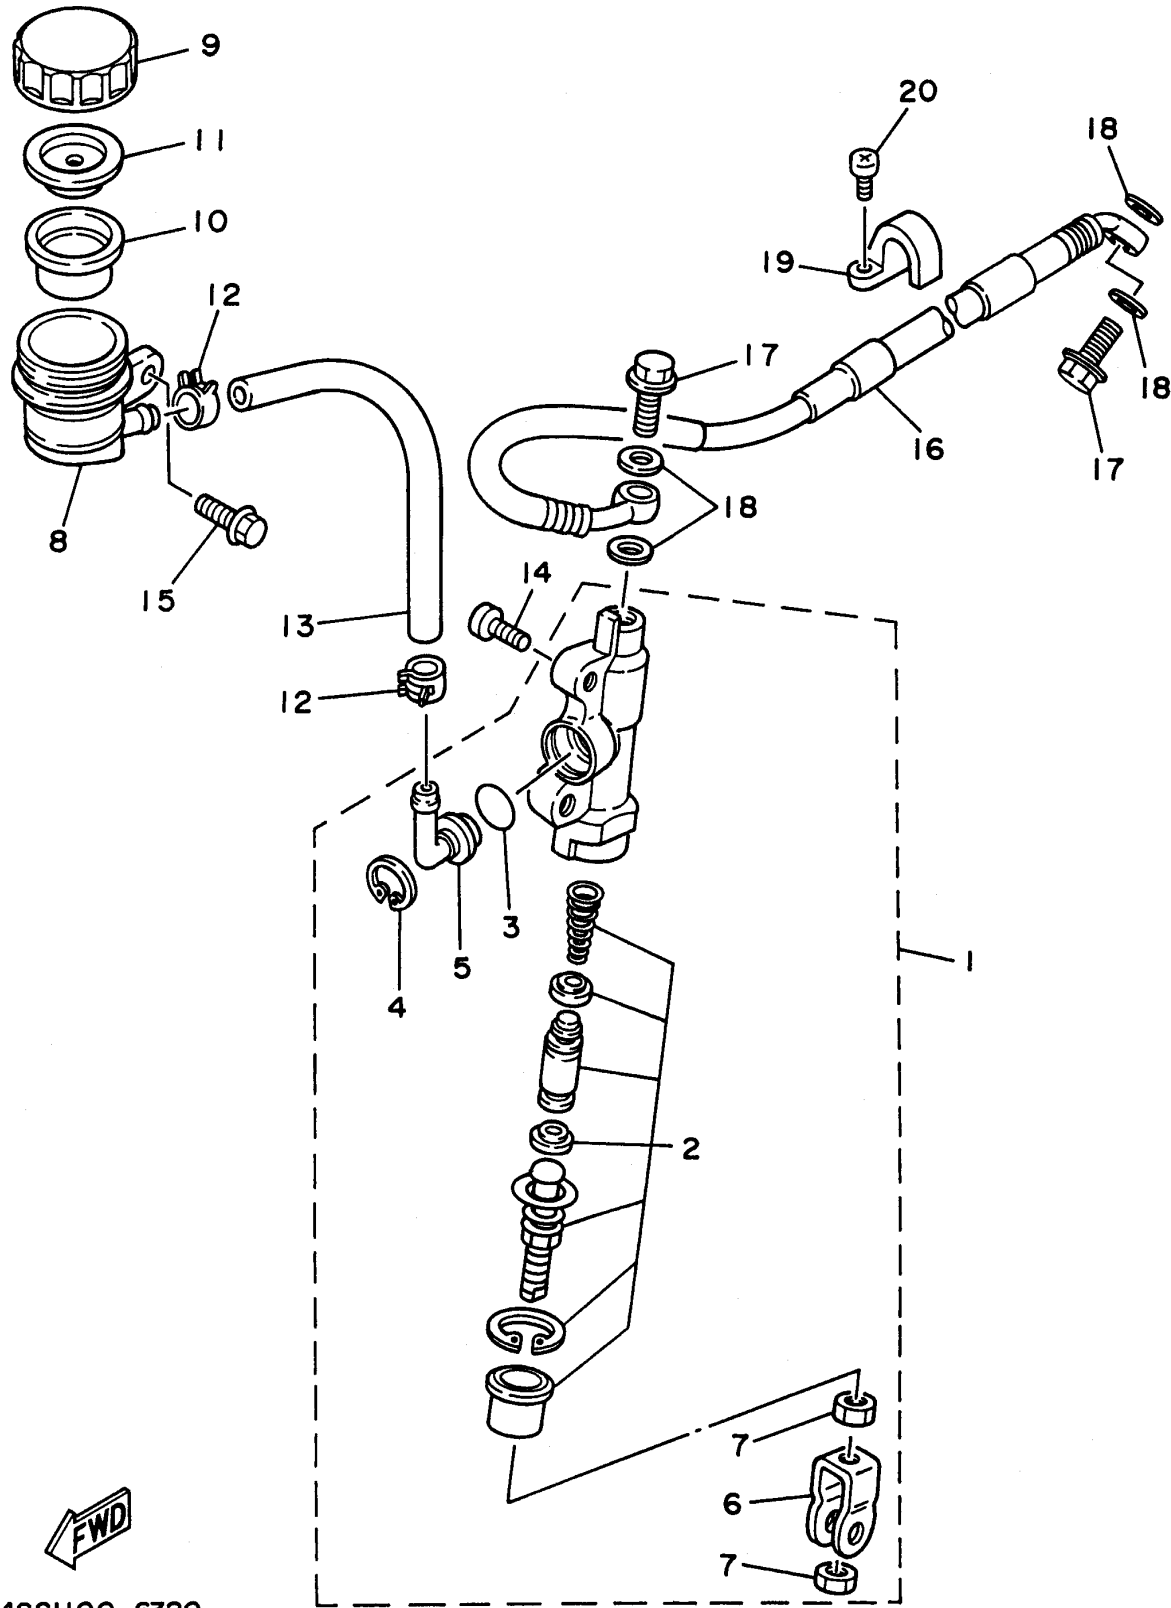

4SSI100-6320

REAR MASTER CYLINDER

Ref. No.	Part Number	Description	Qty	Remarks
1	3SP-2583V-00-00	RR. MASTER CYLINDER ASSEMBLY.	1	
2	4SS-W0042-50-00	. CYLINDER KIT, MASTER	1	
3	93210-15620-00	. O-RING	1	
4	2VN-25866-00-00	. CIRCLIP	1	
5	2VN-2582A-50-00	. JOINT	1	
6	3SP-27222-00-00	. JOINT	1	
7	95337-08600-00	. NUT	2	
8	4EW-25894-00-00	TANK, RESERVOIR	1	
9	3XP-25852-50-00	CAP, RESERVOIR	1	
10	2VN-25854-00-00	DIAPHRAGM, RESERVOIR ...	1	
11	2VN-25855-00-00	BUSH, DIAPHRAGM	1	
12	90467-11044-00	CLIP	2	
13	90445-137H9-00	HOSE	1	
14	92014-06016-00	BOLT, BUTTON HEAD	2	
15	95027-06012-00	BOLT, FLANGE	1	
16	4SS-25873-00-00	HOSE, BRAKE 2 (4SS-25873-01-00)	1	
17	90401-10159-00	BOLT, UNION	2	
18	90201-10118-00	WASHER, PLATE	4	
19	2VM-25876-00-00	HOLDER, BRAKE HOSE 2	2	
20	97780-50110-00	SCREW, TAPPING	4	

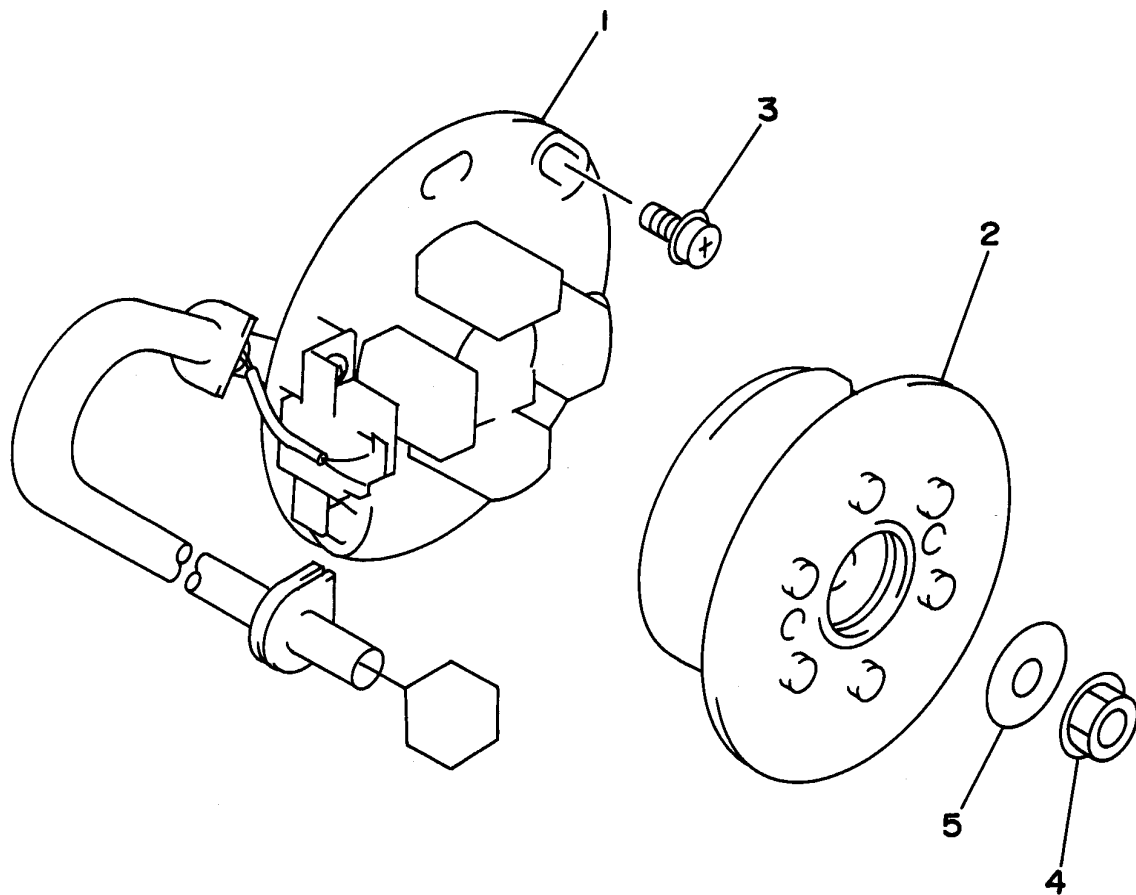 


GENERATOR

Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-85560-00-00	BASE ASSEMBLY	1	
2	4SR-85550-00-00	ROTOR ASSEMBLY	1	
3	90149-06011-00	SCREW	2	
4	90179-10394-00	NUT	1	
5	90201-10774-00	WASHER, PLATE	1	



 4SR1100-6330

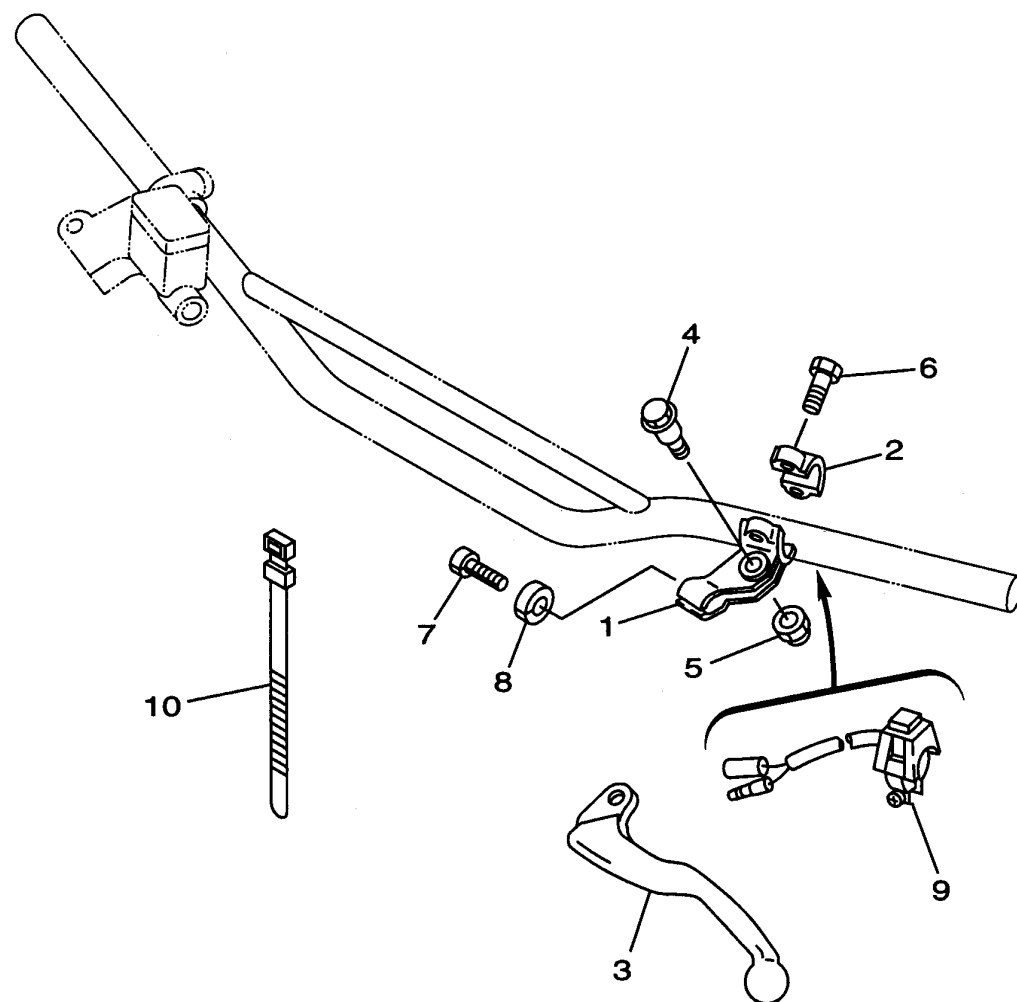

HANDLE SWITCH - LEVER


Ref. No.	Part Number	Description	Qty	Remarks
1	38V-82911-00-00	HOLDER, LEVER 1	1	
2	38V-82913-00-00	HOLDER, LEVER LOWER 1 ...	1	
3	4GY-83912-00-00	LEVER 1	1	
4	90109-06799-00	BOLT	1	
5	95617-06100-00	NUT, U	1	
6	97007-05016-00	BOLT	2	
7	90123-08090-00	BOLT	1	
8	90179-08401-00	NUT	1	
9	23X-83976-00-00	SWITCH, HANDLE 1	1	
10	437-83936-01-00	BAND, SWITCH CORD	2	



4SS1100-6340

ELECTRICAL 1


Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-85540-00-00	C.D.I. UNIT ASSEMBLY	1	
2	4SR-82310-00-00	IGNITION COIL ASSEMBLY ...	1	
3	91317-06016-00	BOLT	2	
4	4PE-82370-00-00	PLUG CAP ASSY	1	
5	4SS-85546-00-00	BAND	1	
6	25G-83936-01-00	BAND, SWITCH CORD	1	
7	90464-13080-00	CLAMP	1	
8	90464-14117-00	BAND (6G1-2811G-00-00)	1	
9	4SS-82509-00-00	WIRE, SUB LEAD	1	

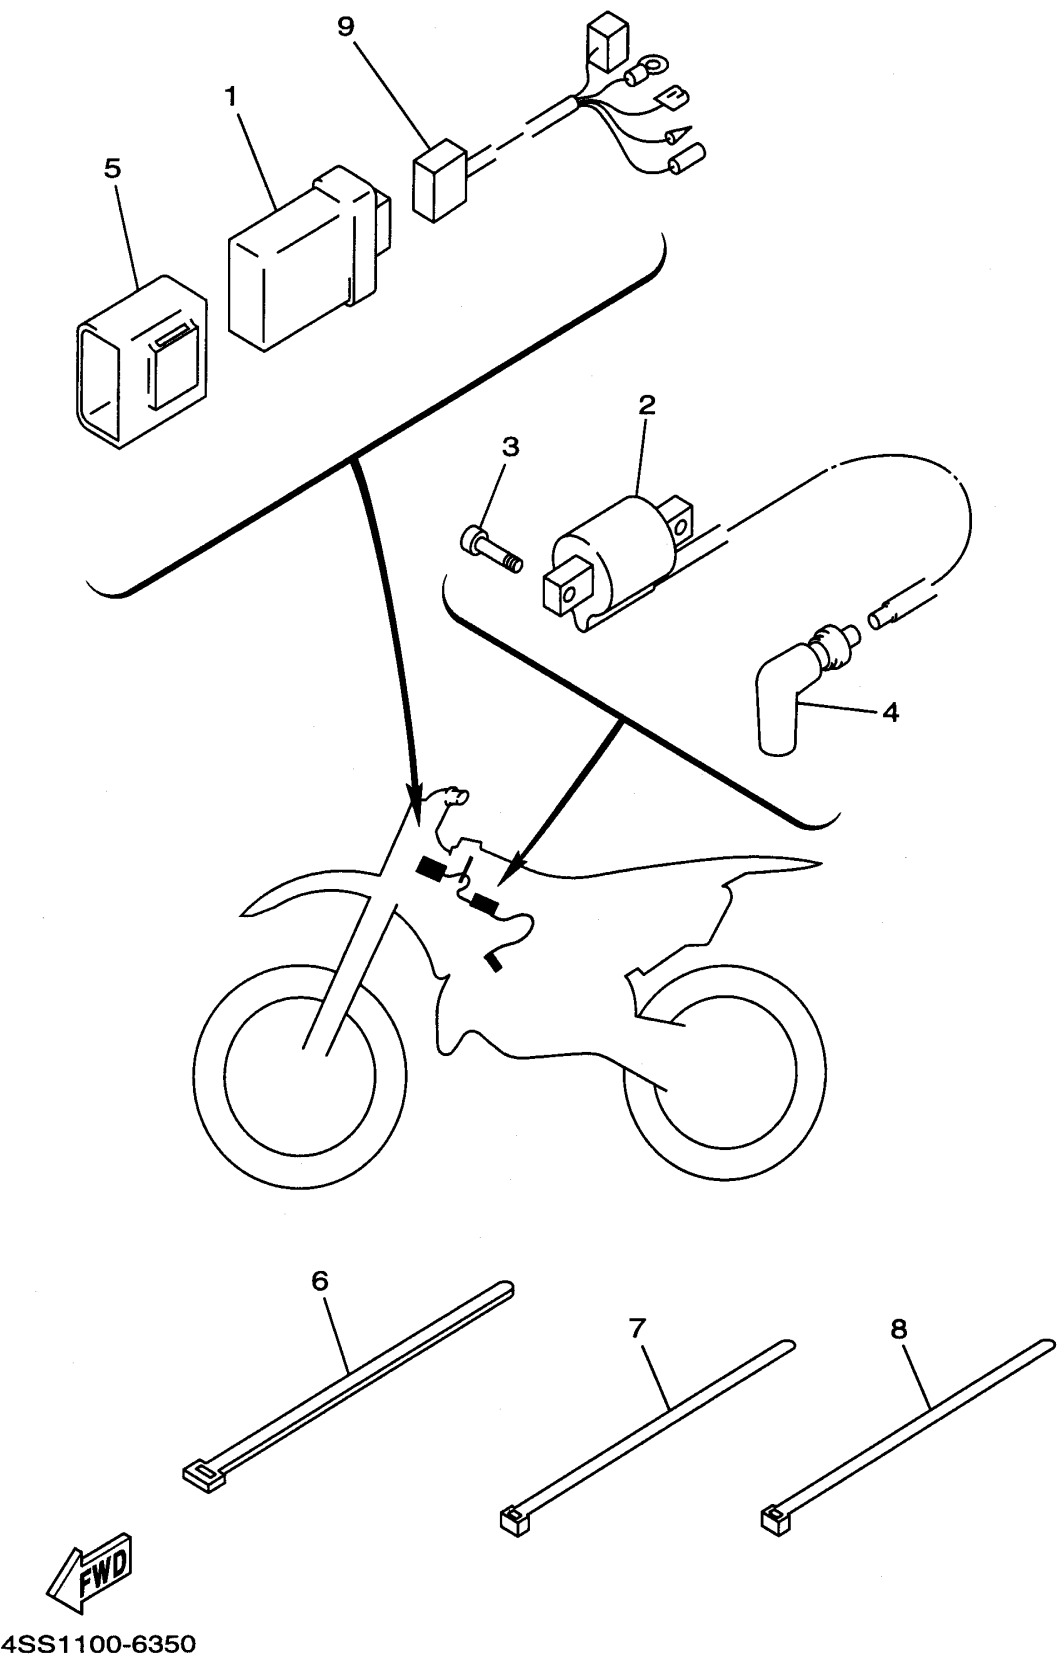 

4SS1100-6350

CHASSIS (ALTERNATE)

Ref. No.	Part Number	Description	Qty	Remarks
1	4JX-22212-10-00	SPRING (K=4.4)	1	AP
	4JX-22212-20-00	SPRING (K=4.6)	1	AP
	4JX-22212-30-00	SPRING (K=4.8)	1	AP
	4JX-22212-40-00	SPRING (K=5.0)	1	AP
	4JX-22212-50-00	SPRING (K=5.2)	1	AP
	4JX-22212-60-00	SPRING (K=5.4)	1	AP
	4JX-22212-70-00	SPRING (K=5.6)	1	AP
2	4SS-23141-10-00	SPRING, FRONT FORK (K=0.38)	2	AP
	4SS-23141-20-00	SPRING, FRONT FORK (K=0.39)	2	AP
	4SS-23141-30-00	SPRING, FRONT FORK (K=0.40)	2	AP
	4SS-23141-40-00	SPRING, FRONT FORK (K=0.41)	2	AP
	4SS-23141-50-00	SPRING, FRONT FORK (K=0.42)	2	AP
	4SS-23141-60-00	SPRING, FRONT FORK (K=0.43)	2	AP
	4SS-23141-70-00	SPRING, FRONT FORK (K=0.44)	2	AP
3	4SS-23364-L0-00	COLLAR 2	1	UN

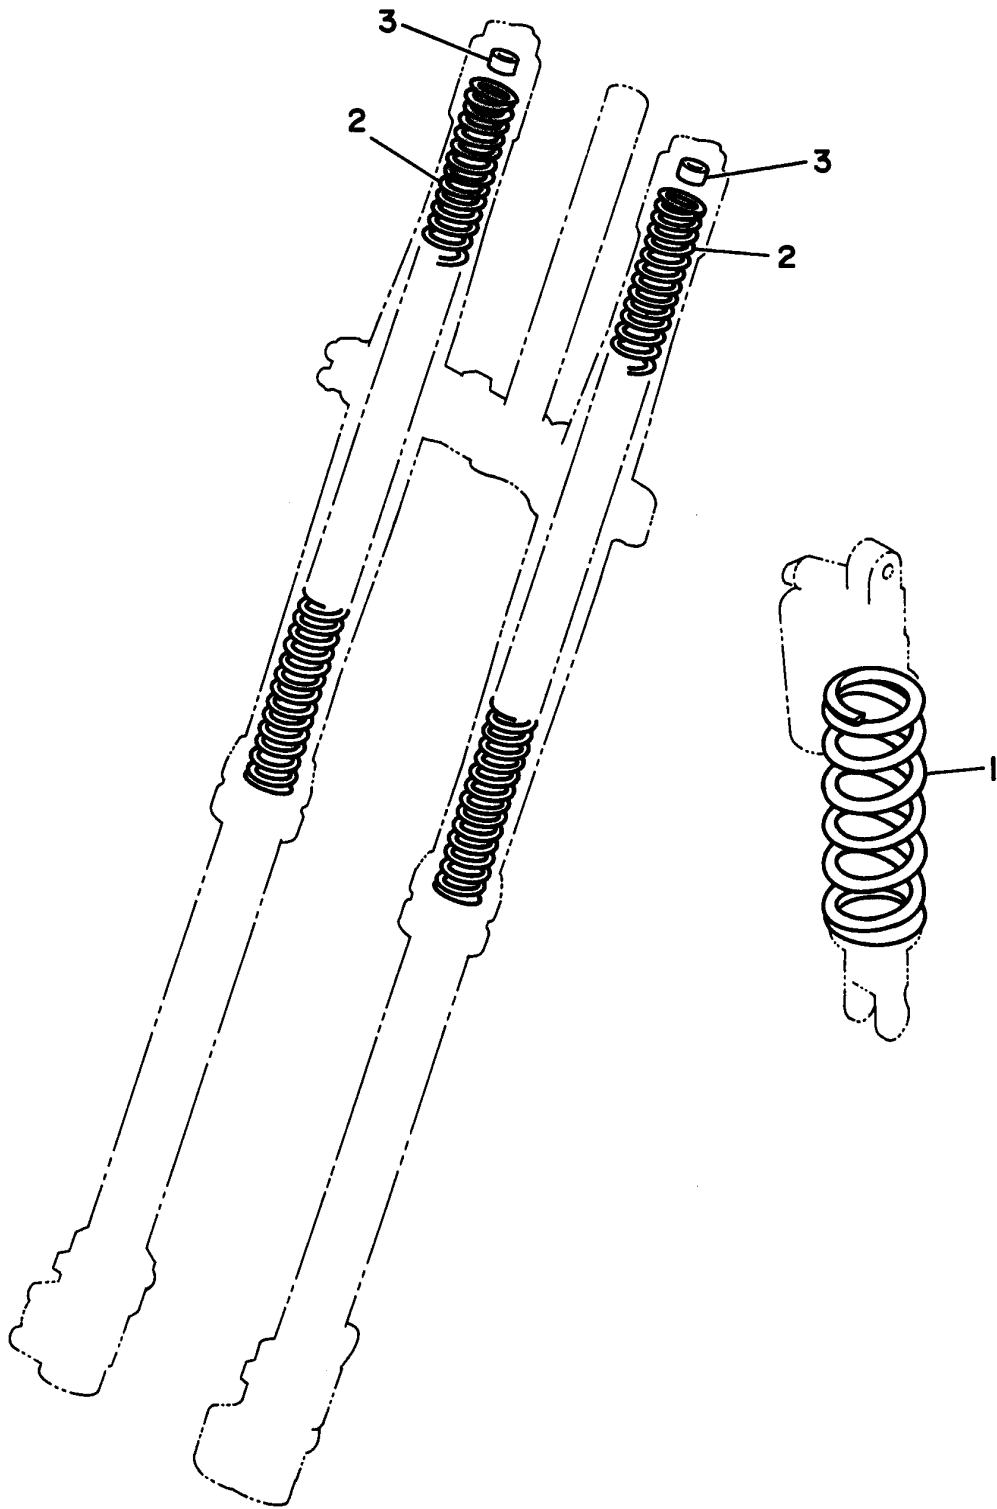 

3XJ1100-1360

OPTIONAL PARTS 1

Ref. No.	Part Number	Description	Qty	Remarks
1	4SR-11630-00-00	PISTON ASSEMBLY (STD) . . .	1	
2	4SR-11631-00-B0	. PISTON, (STD)	1	
3	4JX-11603-00-00	. PISTON RING SET (STD)	1	
4	2VM-11633-01-00	. PIN, PISTON	1	
5	93450-19052-00	. CIRCLIP	2	
6	4SR-11650-00-00	CONNECTING ROD ASSEMBLY	1	
7	5X5-11651-03-00	. ROD, CONNECTING	1	
8	4SR-11681-00-00	. PIN, CRANK 1	1	
9	90209-25085-00	. WASHER	2	
10	93310-425P2-00	. BEARING, CYLINDRICAL . . .	1	
11	93310-418E9-00	. BEARING, CYLINDRICAL . . .	1	