

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5


TABLE OF CONTENTS

INFORMATION BUS-COMPUTER DATA LINES.....	02
BODY COMPUTER (BCM)	03
POWERTRAIN CONTROL MODULE (PCM).....	04
DATA LINK CONNECTOR (DLC)	08
SUPPLEMENTAL RESTRAINTS (SRS).....	09
MASS AIR FLOW METER SENSOR (MAF).....	10
INTAKE AIR TEMPERATURE (IAT)/BOOST PRESSURE SENSOR	11
ANTI-LOCK BRAKES (ABS)	12
INSTRUMENT CLUSTER CIRCUIT	13
INSTRUMENT CLUSTER - OVERHEAD CONSOLE CIRCUIT	14
CAMSHAFT POSITION SENSOR (CMP)	15
ENGINE COOLANT TEMPERATURE SENSOR (ECT).....	16
CRANKSHAFT POSITION SENSOR (CKP)	17
TRANSMISSION CONTROL MODULE - A/T CIRCUIT (TCM).....	18
ACCELERATOR PEDAL POSITION SENSOR (APP).....	20
SOUND SYSTEMS - BASE	21
SOUND SYSTEMS - PREMIUM.....	22
EXTERIOR LIGHTS - BACK-UP LAMPS CIRCUIT	24
EXTERIOR LIGHTS - EXTERIOR LAMPS CIRCUIT	25
INTERIOR LIGHTS	27
MIRRORS - AUTOMATIC DAY/NIGHT MIRROR CIRCUIT	28
MIRRORS - POWER MIRRORS CIRCUIT	29
POWER WINDOWS	30
JUNCTION BLOCK.....	31
POWER DISTRIBUTION CENTER.....	38
PIN-OUT ENGINE CONTROL MODULE - C1	46
PIN-OUT ENGINE CONTROL MODULE - C2	49
COOLING FANS	51
CRUISE CONTROL	52
DEFOGGER.....	53
DOOR LOCKS.....	54
HORNS.....	56
POWER TOPS	57
FUEL INJECTOR	58
GLOSSARY OF TERMS	59


2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 INFORMATION BUS-COMPUTER DATA LINES



2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 BODY COMPUTER

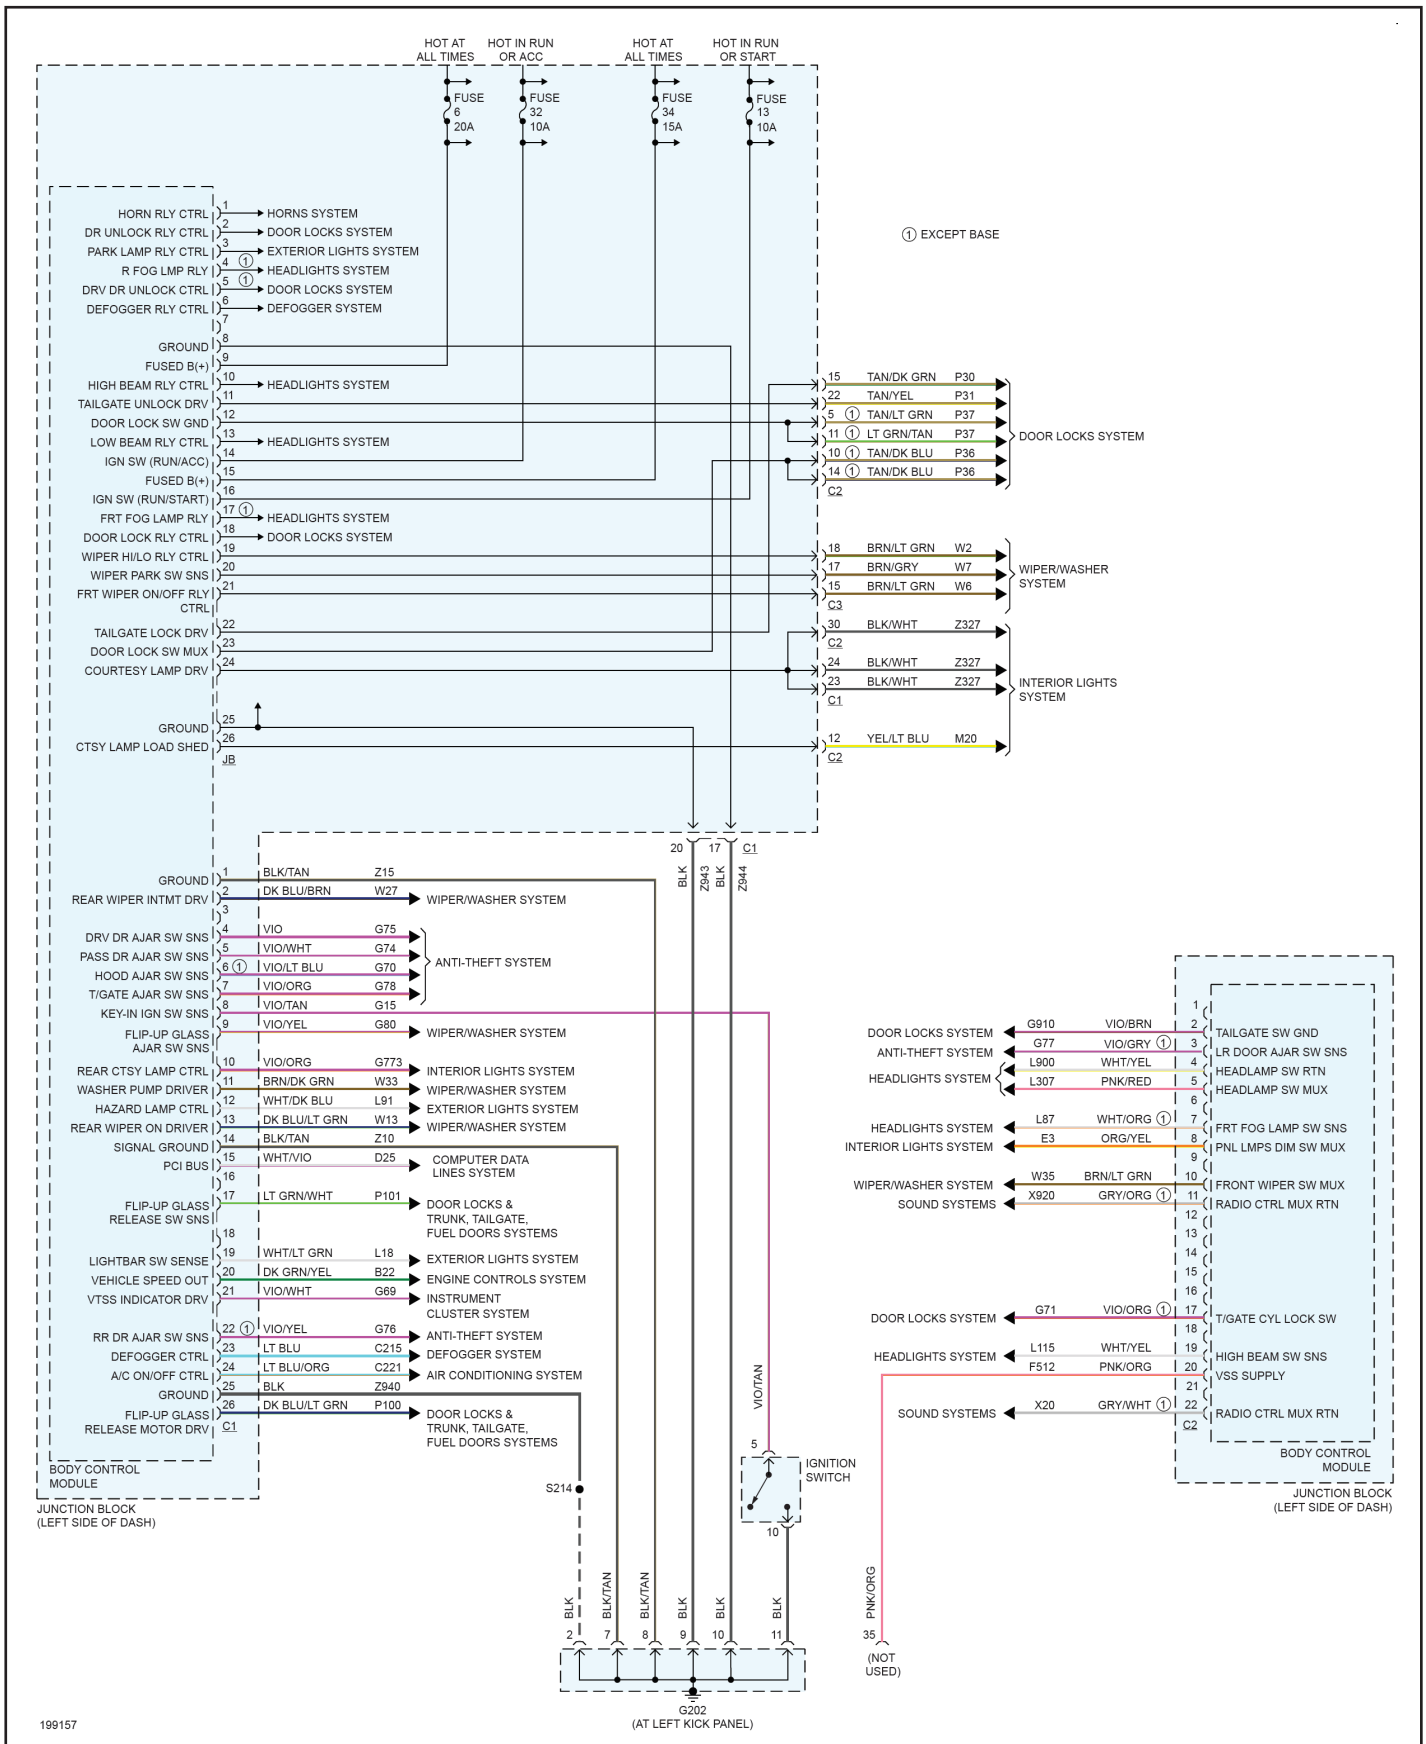

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 POWERTRAIN CONTROL MODULE

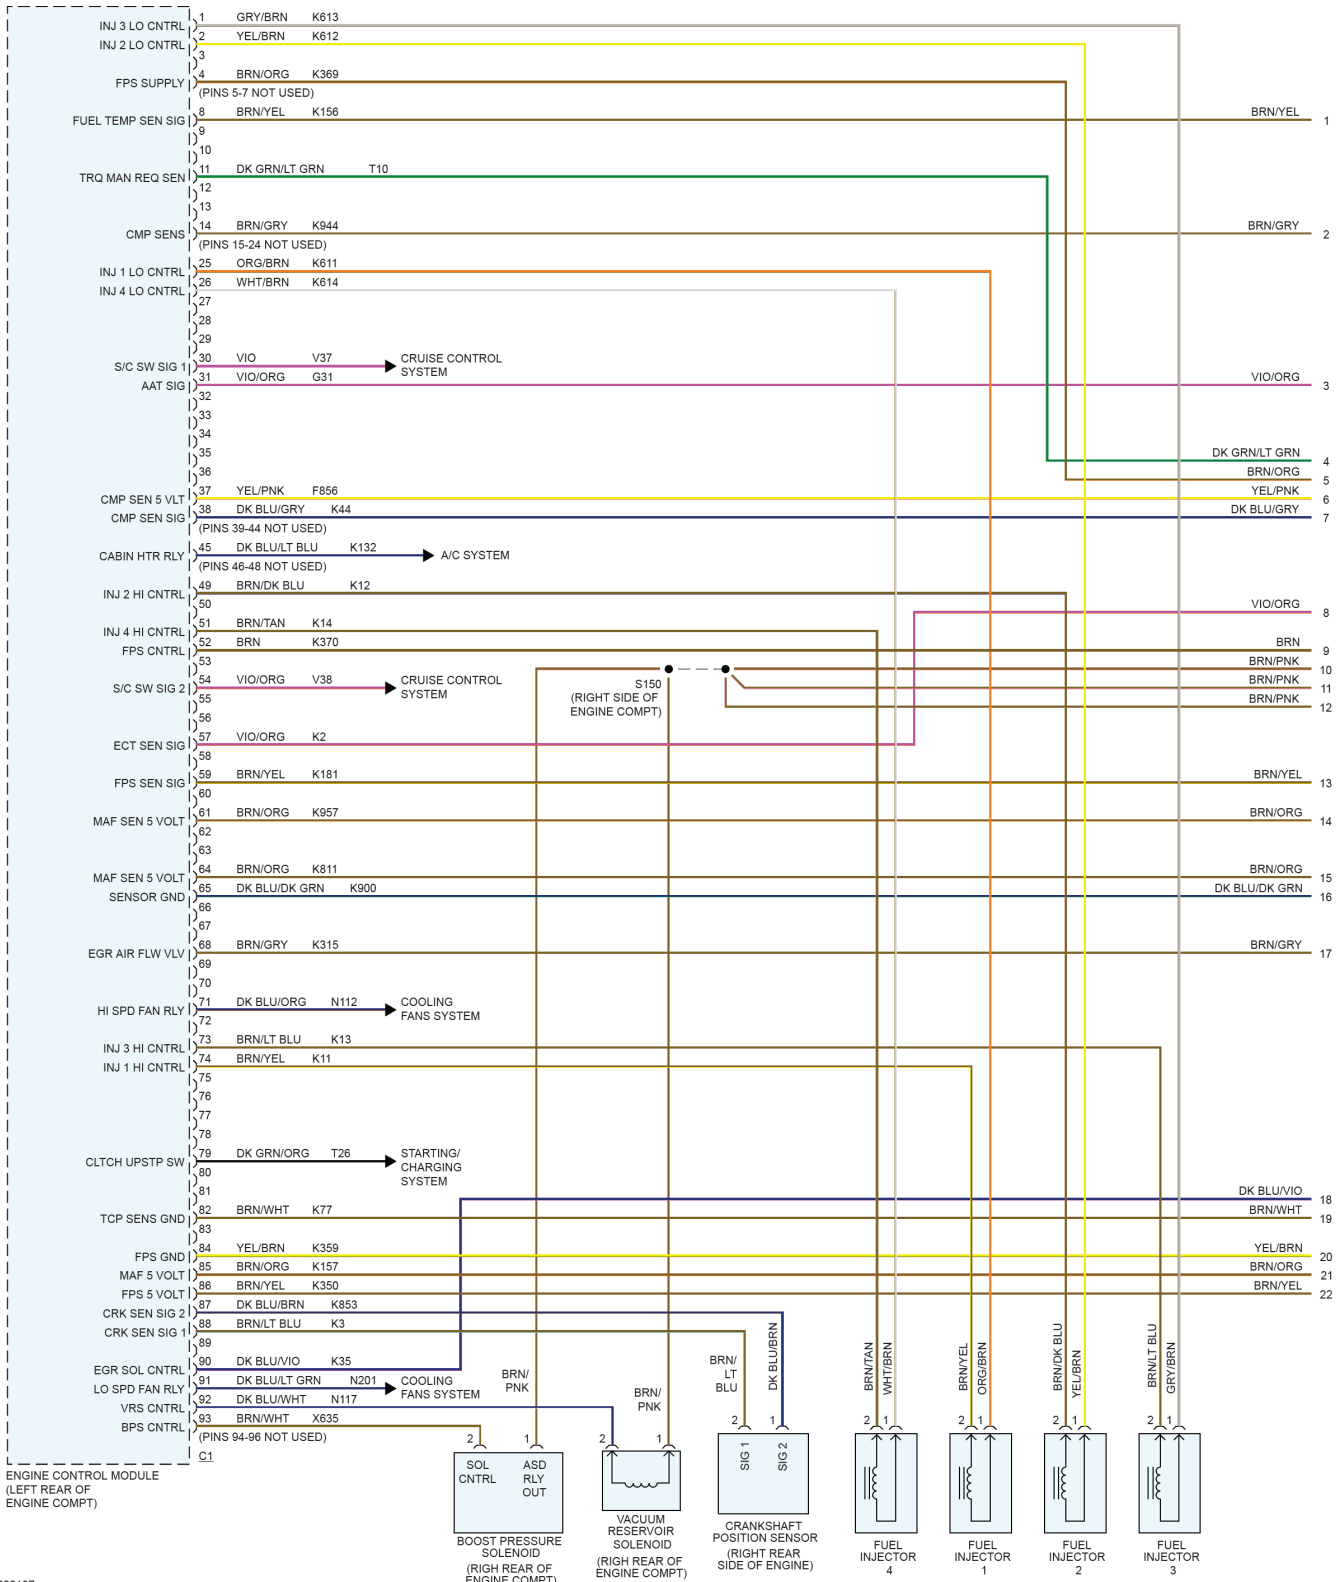


200197

POWERTRAIN CONTROL MODULE




2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 POWERTRAIN CONTROL MODULE

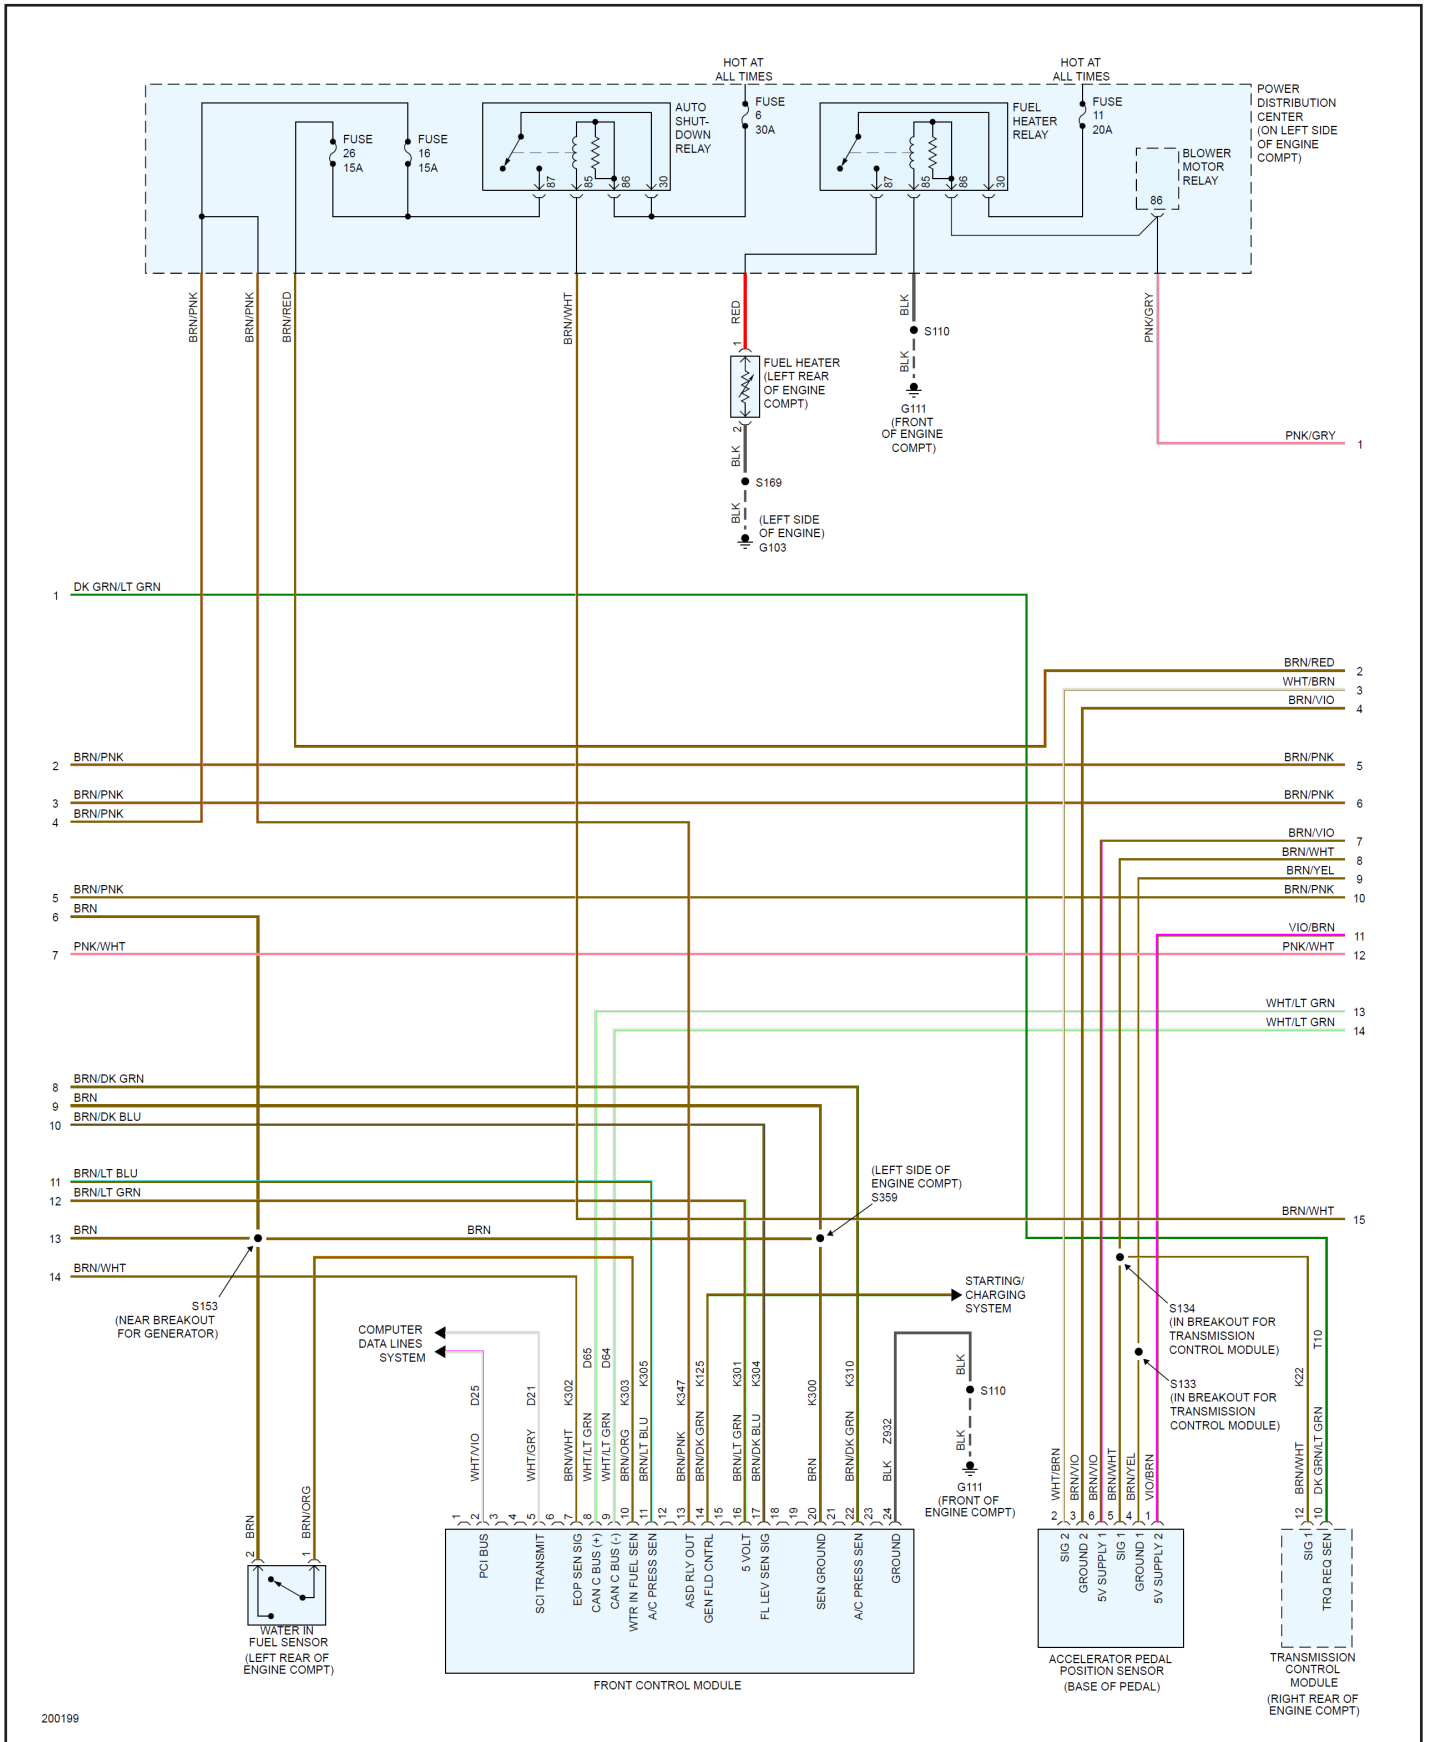

200199


2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 POWERTRAIN CONTROL MODULE

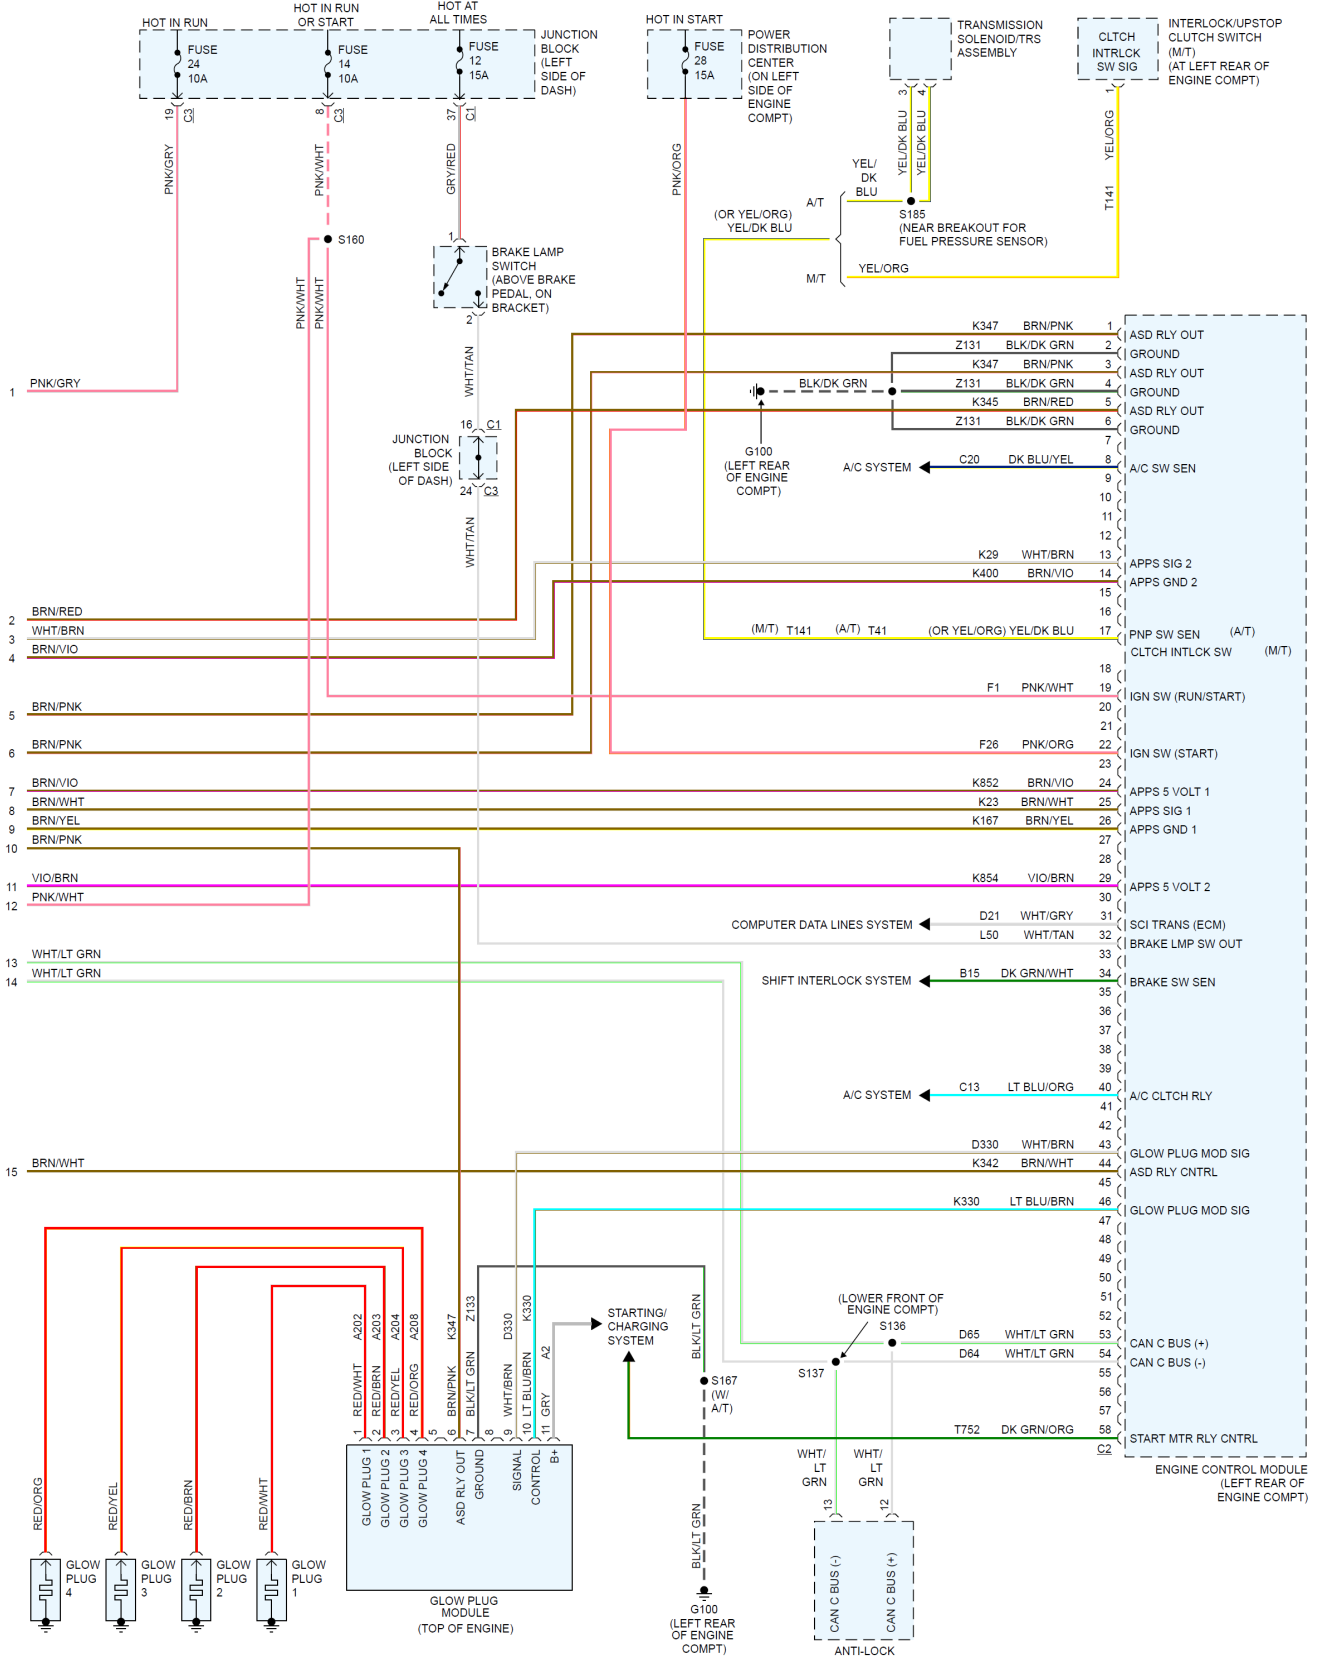

200200

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

DATA LINK CONNECTOR

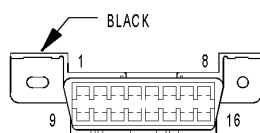


**DATA
LINK
CONNECTOR**

DATA LINK CONNECTOR - BLACK 16 WAY


CAV	CIRCUIT	FUNCTION
1	-	-
2	D25 20WT/VT	PCI BUS
3	-	-
4	Z11 20BK/LG	GROUND
5	Z11 20BK/LG	GROUND
6	-	-
7	D21 20WT/GY (DIESEL)	SCI TRANSMIT (ECM)
7	D21 20WT/GY (GAS)	SCI TRANSMIT (PCM)
8	-	-
9	D16 20WT/OR	SCI RECEIVE (TCM)
10	-	-
11	-	-
12	D20 20WT/LG (DIESEL)	SCI RECEIVE (ECM)
12	D20 20WT/LG (GAS)	SCI RECEIVE (PCM)
13	-	-
14	-	-
15	D15 20BR/WT	SCI TRANSMIT (TCM)
16	A333 20WT/RD	FUSED B(+)

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 SUPPLEMENTAL RESTRAINTS

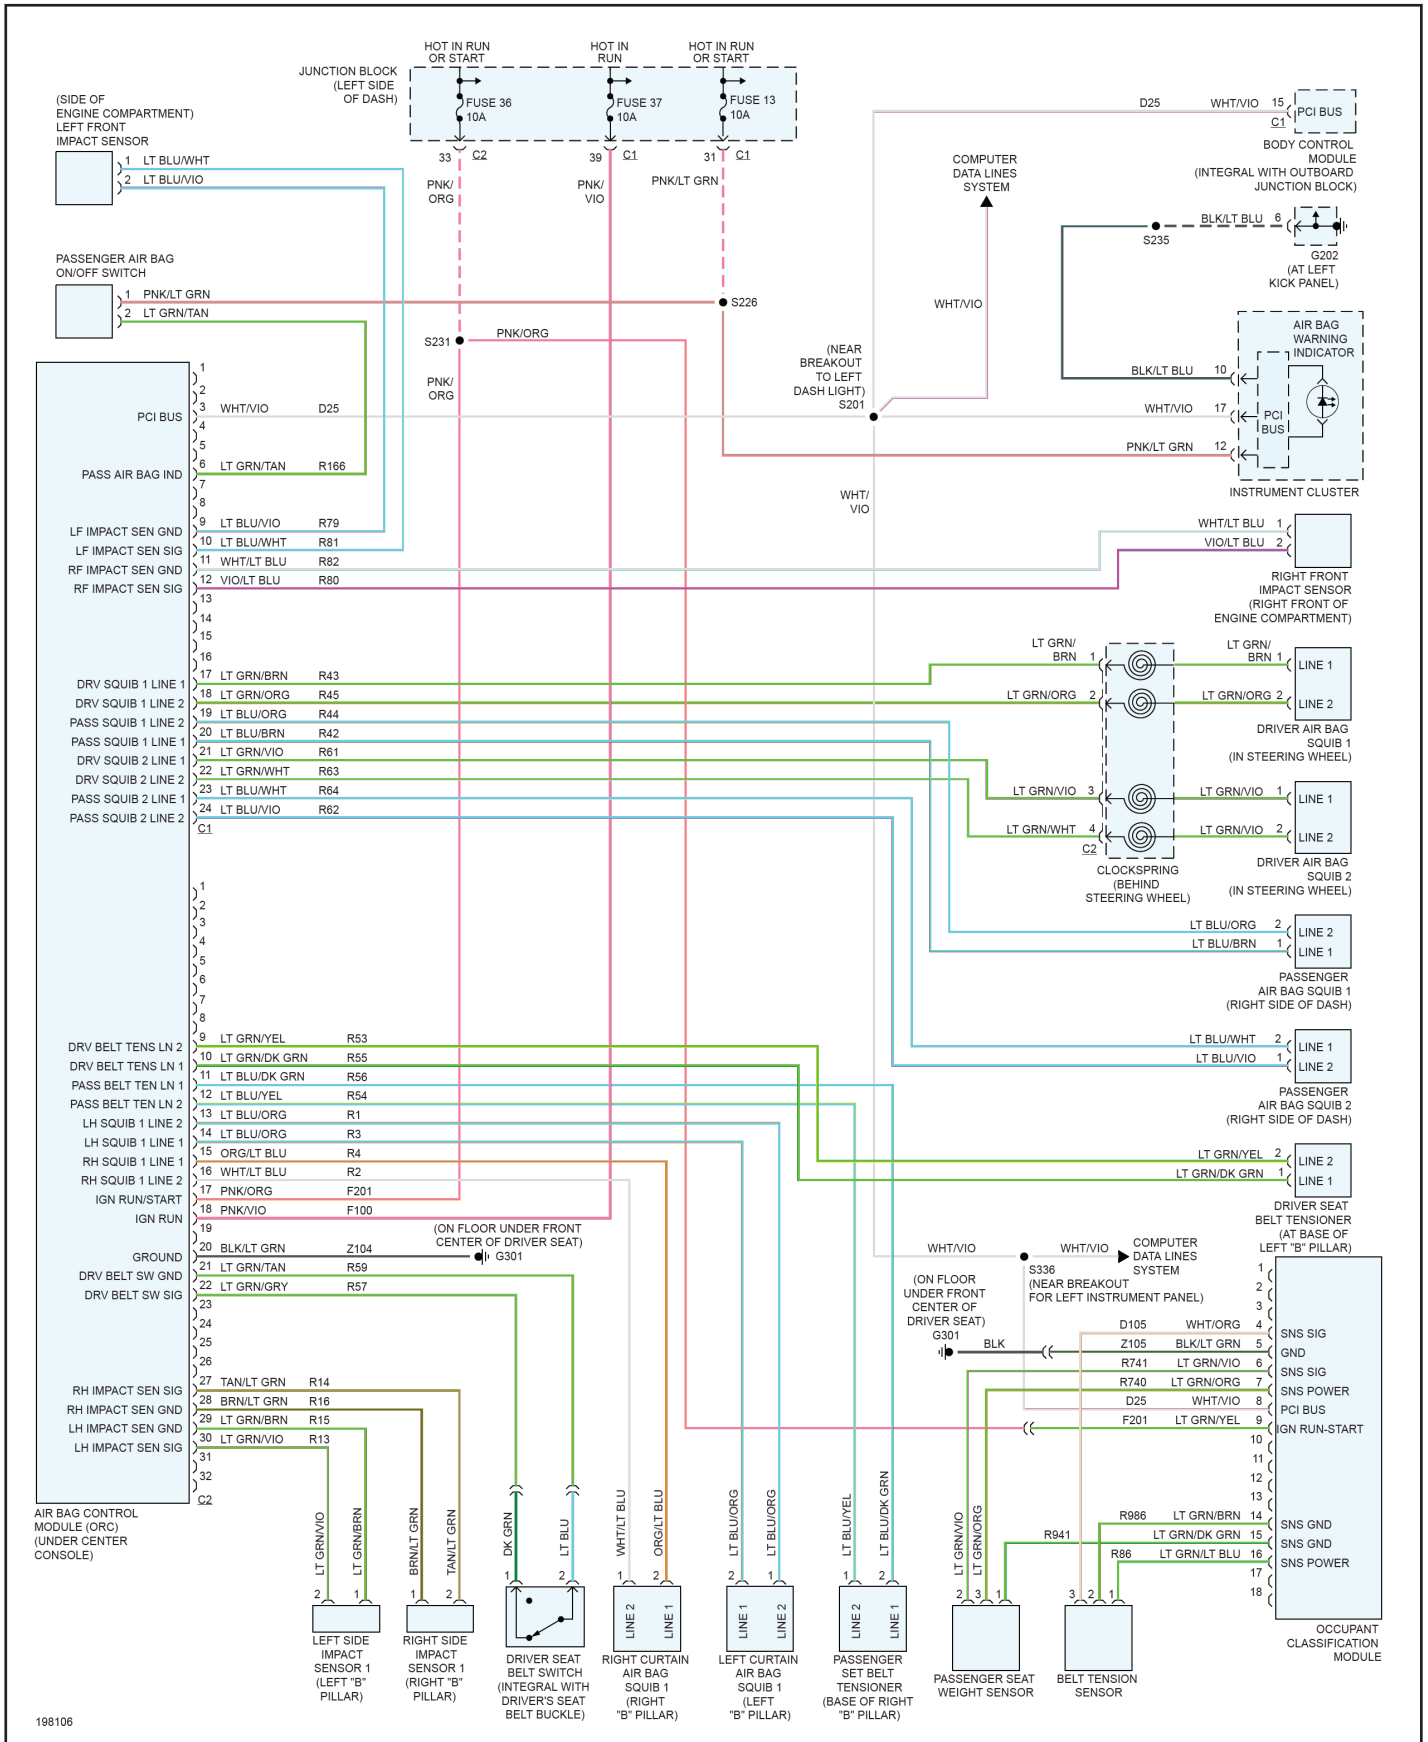

198106


2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 MASS AIR FLOW METER SENSOR

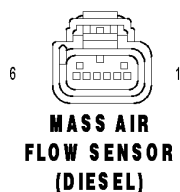

MASS AIR FLOW SENSOR (DIESEL) - 6 WAY

CAV	CIRCUIT	FUNCTION
1	-	-
2	K811 20BR/OR	MASS AIR FLOW SENSOR 5 VOLT SUPPLY
3	F1 20PK/WT	FUSED IGNITION SWITCH OUTPUT (RUN-START)
4	-	-
5	K957 20BR/OR	MASS AIR FLOW SENSOR GROUND
6	K157 20BR/OR	MASS AIR FLOW 5 VOLT SUPPLY

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 INTAKE AIR TEMPERATURE/BOOST PRESSURE SENSOR

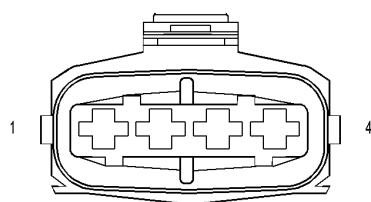


**INTAKE
AIR TEMPERATURE/
BOOST PRESSURE
SENSOR
(DIESEL)**


INTAKE AIR TEMPERATURE/BOOST PRESSURE SENSOR (DIESEL) - 4 WAY

CAV	CIRCUIT	FUNCTION
1	K656 20GY/BR	SENSOR GROUND
2	K21 20BR/WT	IAT SENSOR SIGNAL
3	K856 20BR/YL	BOOST PRESSURE SENSOR 5 VOLT SUPPLY
4	K37 20BR/OR	BOOST PRESSURE SENSOR SIGNAL

 ANTI-LOCK BRAKES




2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 INSTRUMENT CLUSTER CIRCUIT

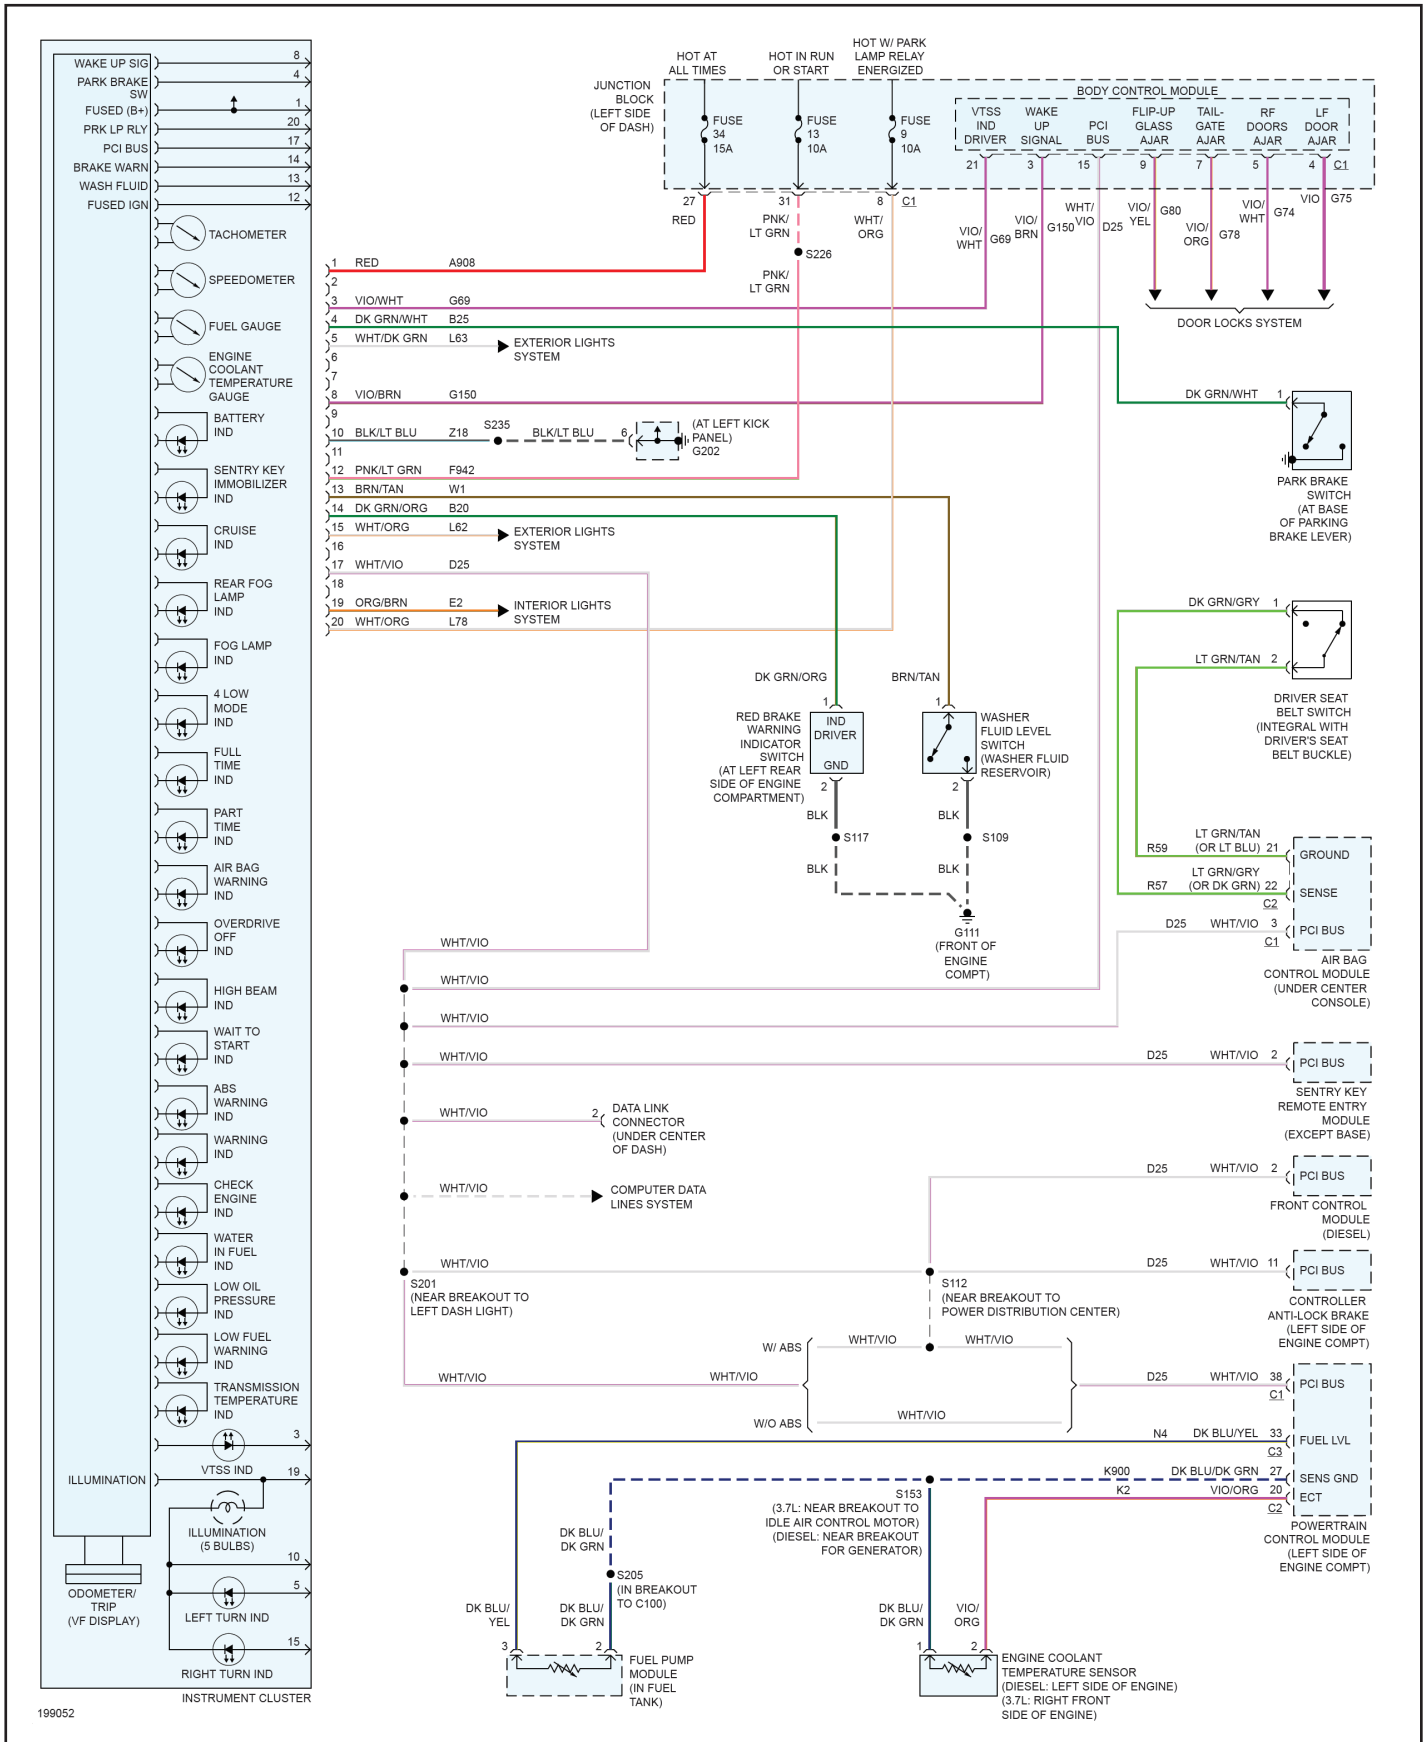

199052

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 INSTRUMENT CLUSTER - OVERHEAD CONSOLE CIRCUIT

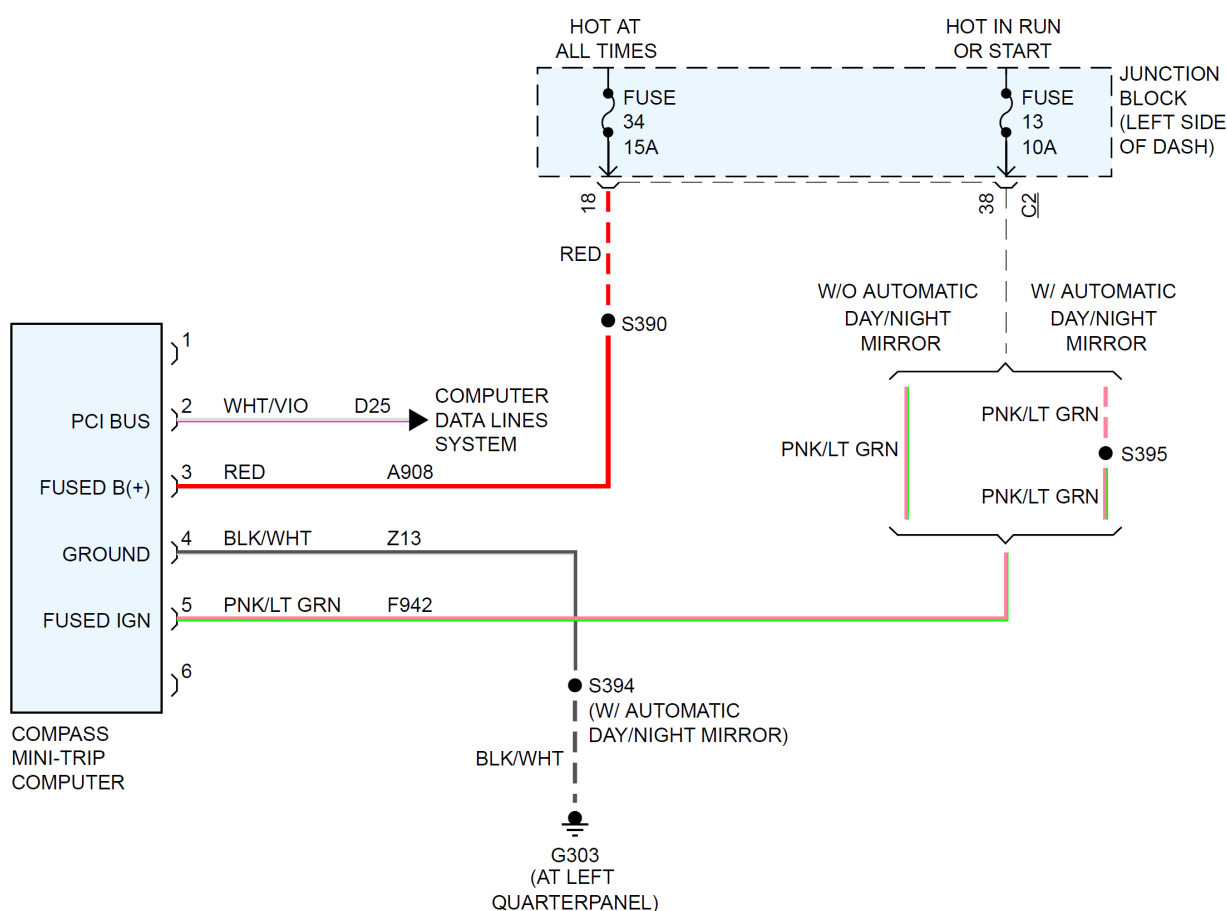

199053

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 CAMSHAFT POSITION SENSOR




**CAMSHAFT
POSITION
SENSOR
(DIESEL)**

CAMSHAFT POSITION SENSOR (DIESEL) - 3 WAY

CAV	CIRCUIT	FUNCTION
1	K944 20BR/GY	CAMSHAFT POSITION SENSOR GROUND
2	K44 20DB/GY	CAMSHAFT POSITION SENSOR SIGNAL
3	F856 20YL/PK	CAMSHAFT POSITION SENSOR 5 VOLT SUPPLY

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 ENGINE COOLANT TEMPERATURE SENSOR

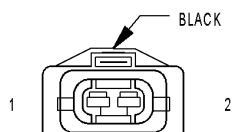


**ENGINE COOLANT
TEMPERATURE
SENSOR
(DIESEL)**

ENGINE COOLANT TEMPERATURE SENSOR (DIESEL) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	K2 20V/T/CR	ECT SENSOR SIGNAL
2	K900 20DB/DG	SENSOR GROUND

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 CRANKSHAFT POSITION SENSOR

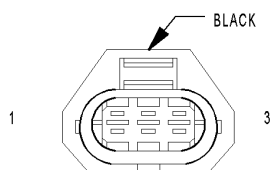


**CRANKSHAFT
POSITION
SENSOR
(DIESEL)**


CRANKSHAFT POSITION SENSOR (DIESEL) - BLACK 3 WAY

CAV	CIRCUIT	FUNCTION
1	K853 20DB/BR	CRANKSHAFT POSITION SENSOR SIGNAL NO. 2
2	K3 20BR/LB	CRANKSHAFT POSITION SENSOR SIGNAL NO. 1
3	-	-

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 TRANSMISSION CONTROL MODULE - A/T CIRCUIT

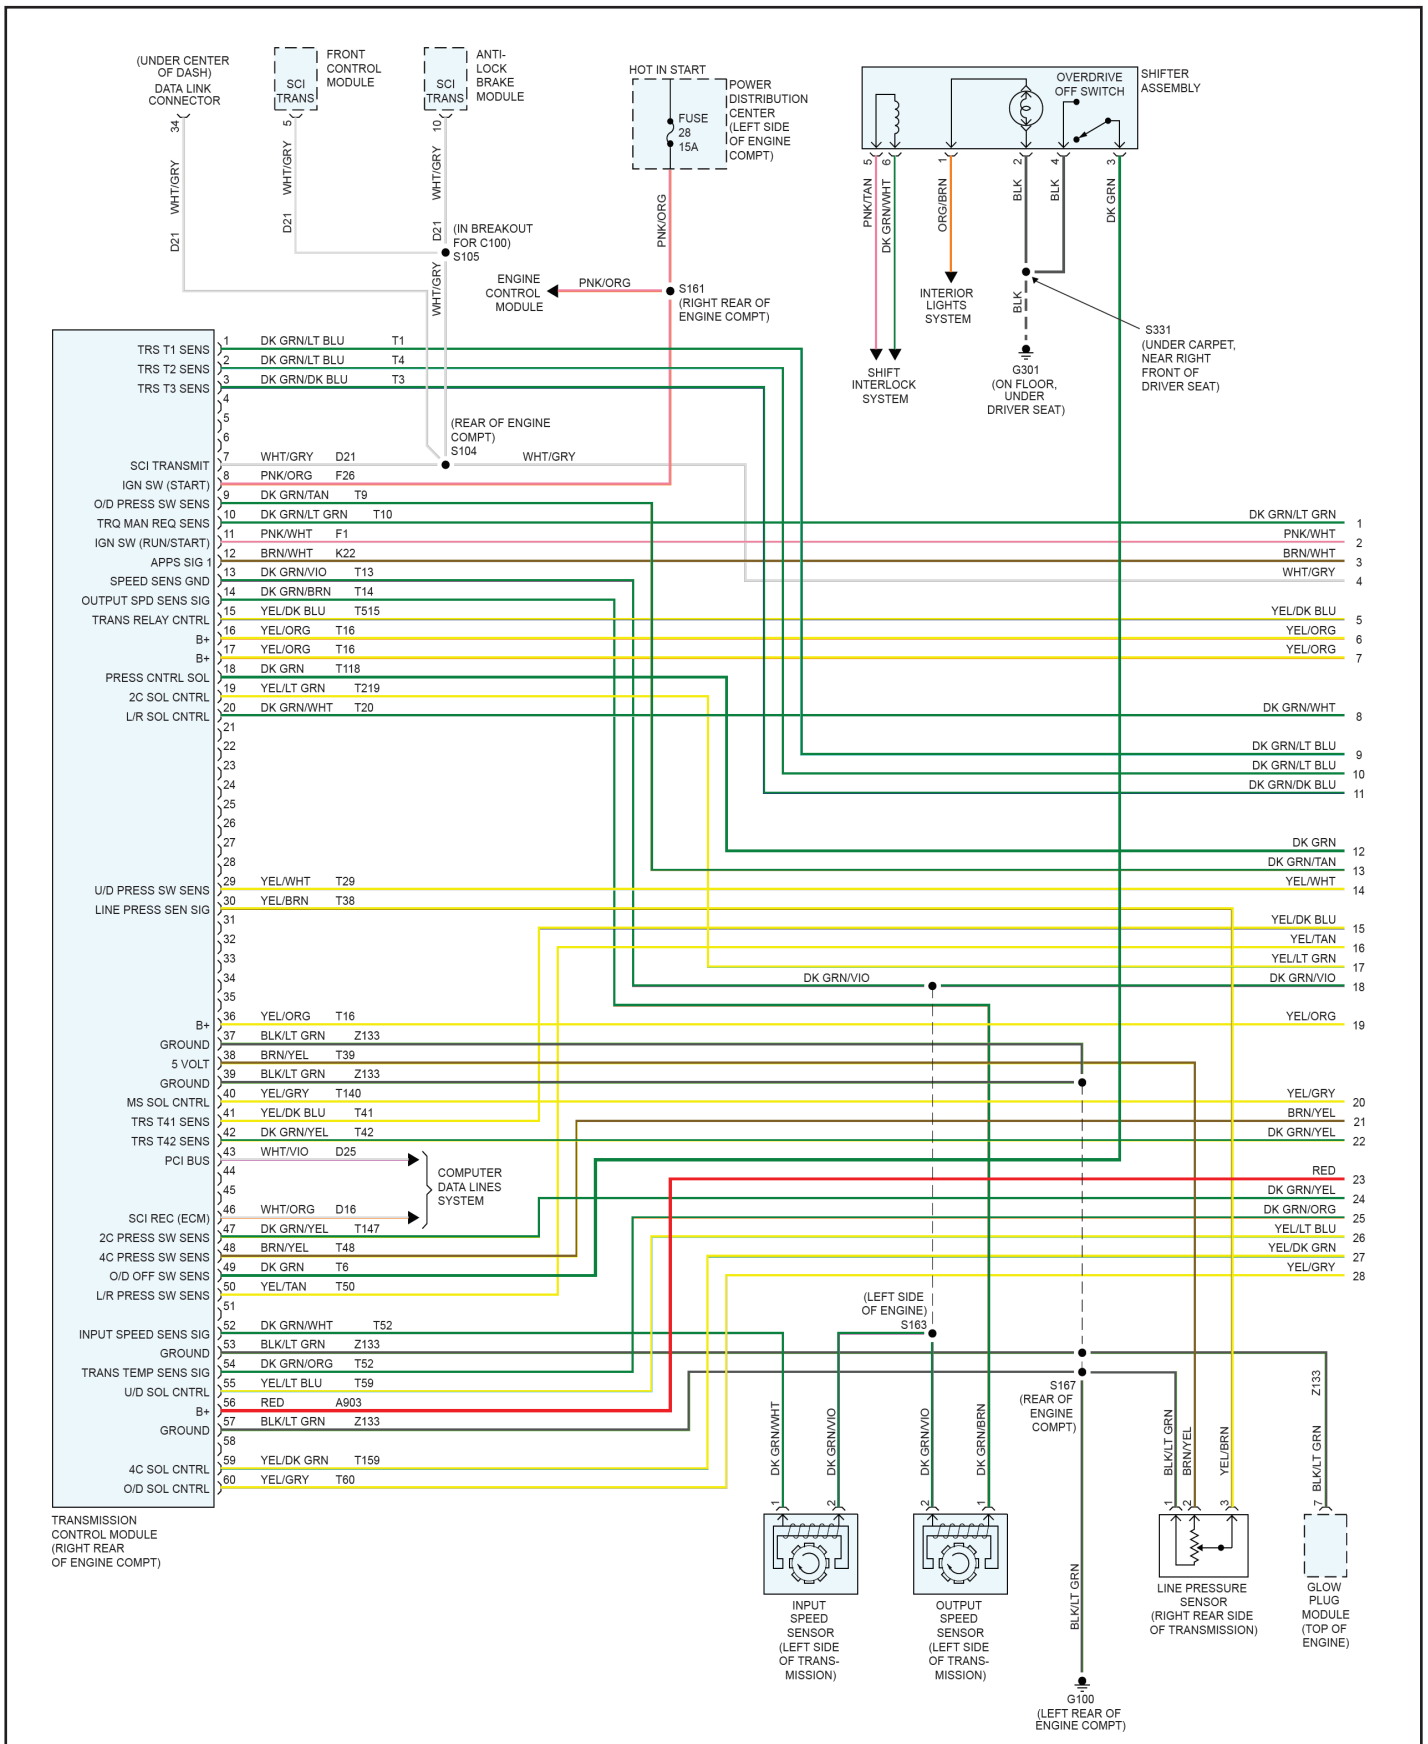


2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 TRANSMISSION CONTROL MODULE - A/T CIRCUIT

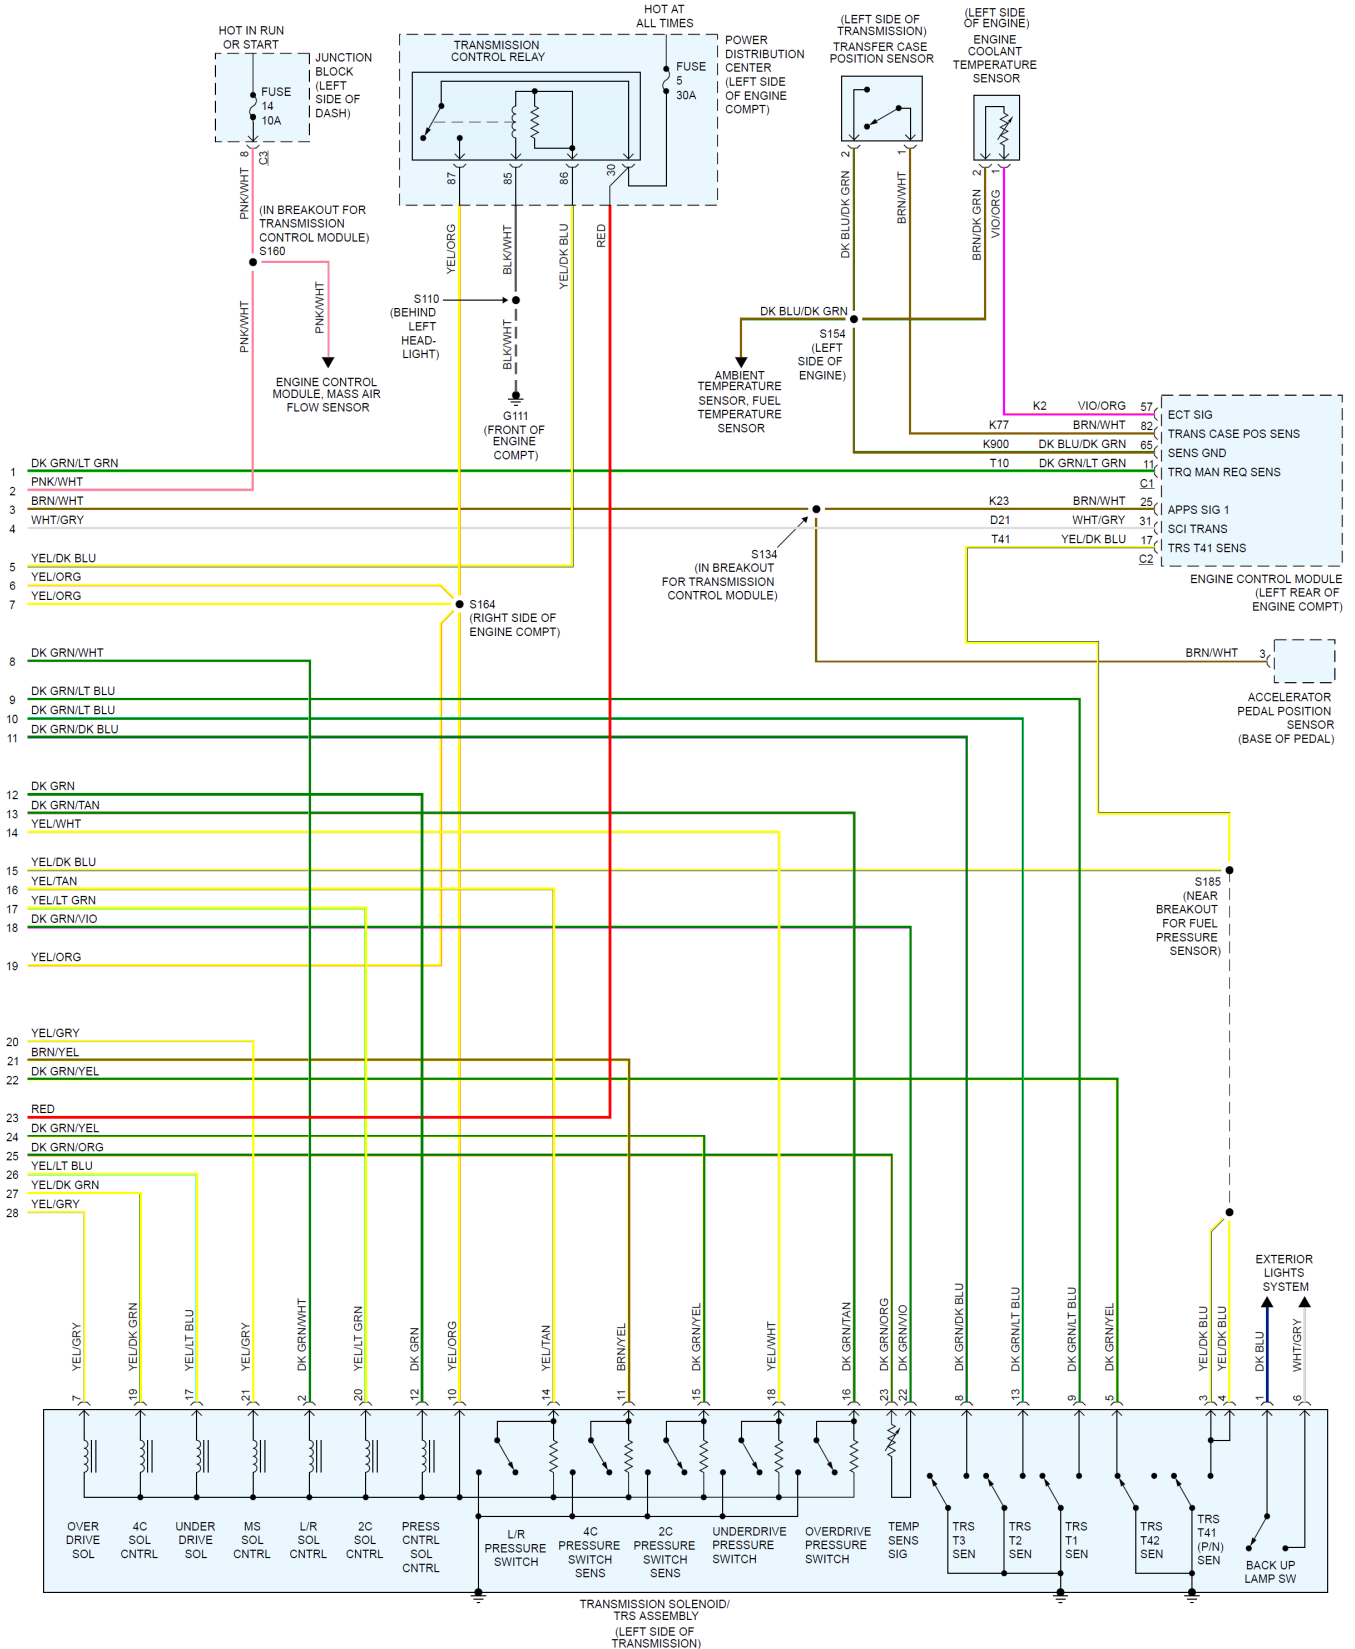

200203

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 ACCELERATOR PEDAL POSITION SENSOR

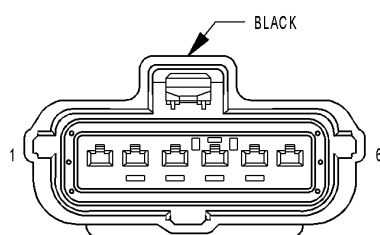


**ACCELERATOR
PEDAL
POSITION
SENSOR**


ACCELERATOR PEDAL POSITION SENSOR (DIESEL) - BLACK 6 WAY

CAV	CIRCUIT	FUNCTION
1	K854 20VT/BR	ACCELERATOR PEDAL POSITION SENSOR 5 VOLT SUPPLY 2
2	K29 20 VT/BR	ACCELERATOR PEDAL POSITION SENSOR SIGNAL 2
3	K400 20BR/VT	ACCELERATOR PEDAL POSITION SENSOR GROUND 2
4	K167 20BR/YL	ACCELERATOR PEDAL POSITION SENSOR GROUND 1
5	K23 20BR/VT	ACCELERATOR PEDAL POSITION SENSOR SIGNAL 1
6	K852 20BR/VT	ACCELERATOR PEDAL POSITION SENSOR 5 VOLT SUPPLY 1

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 SOUND SYSTEMS - BASE

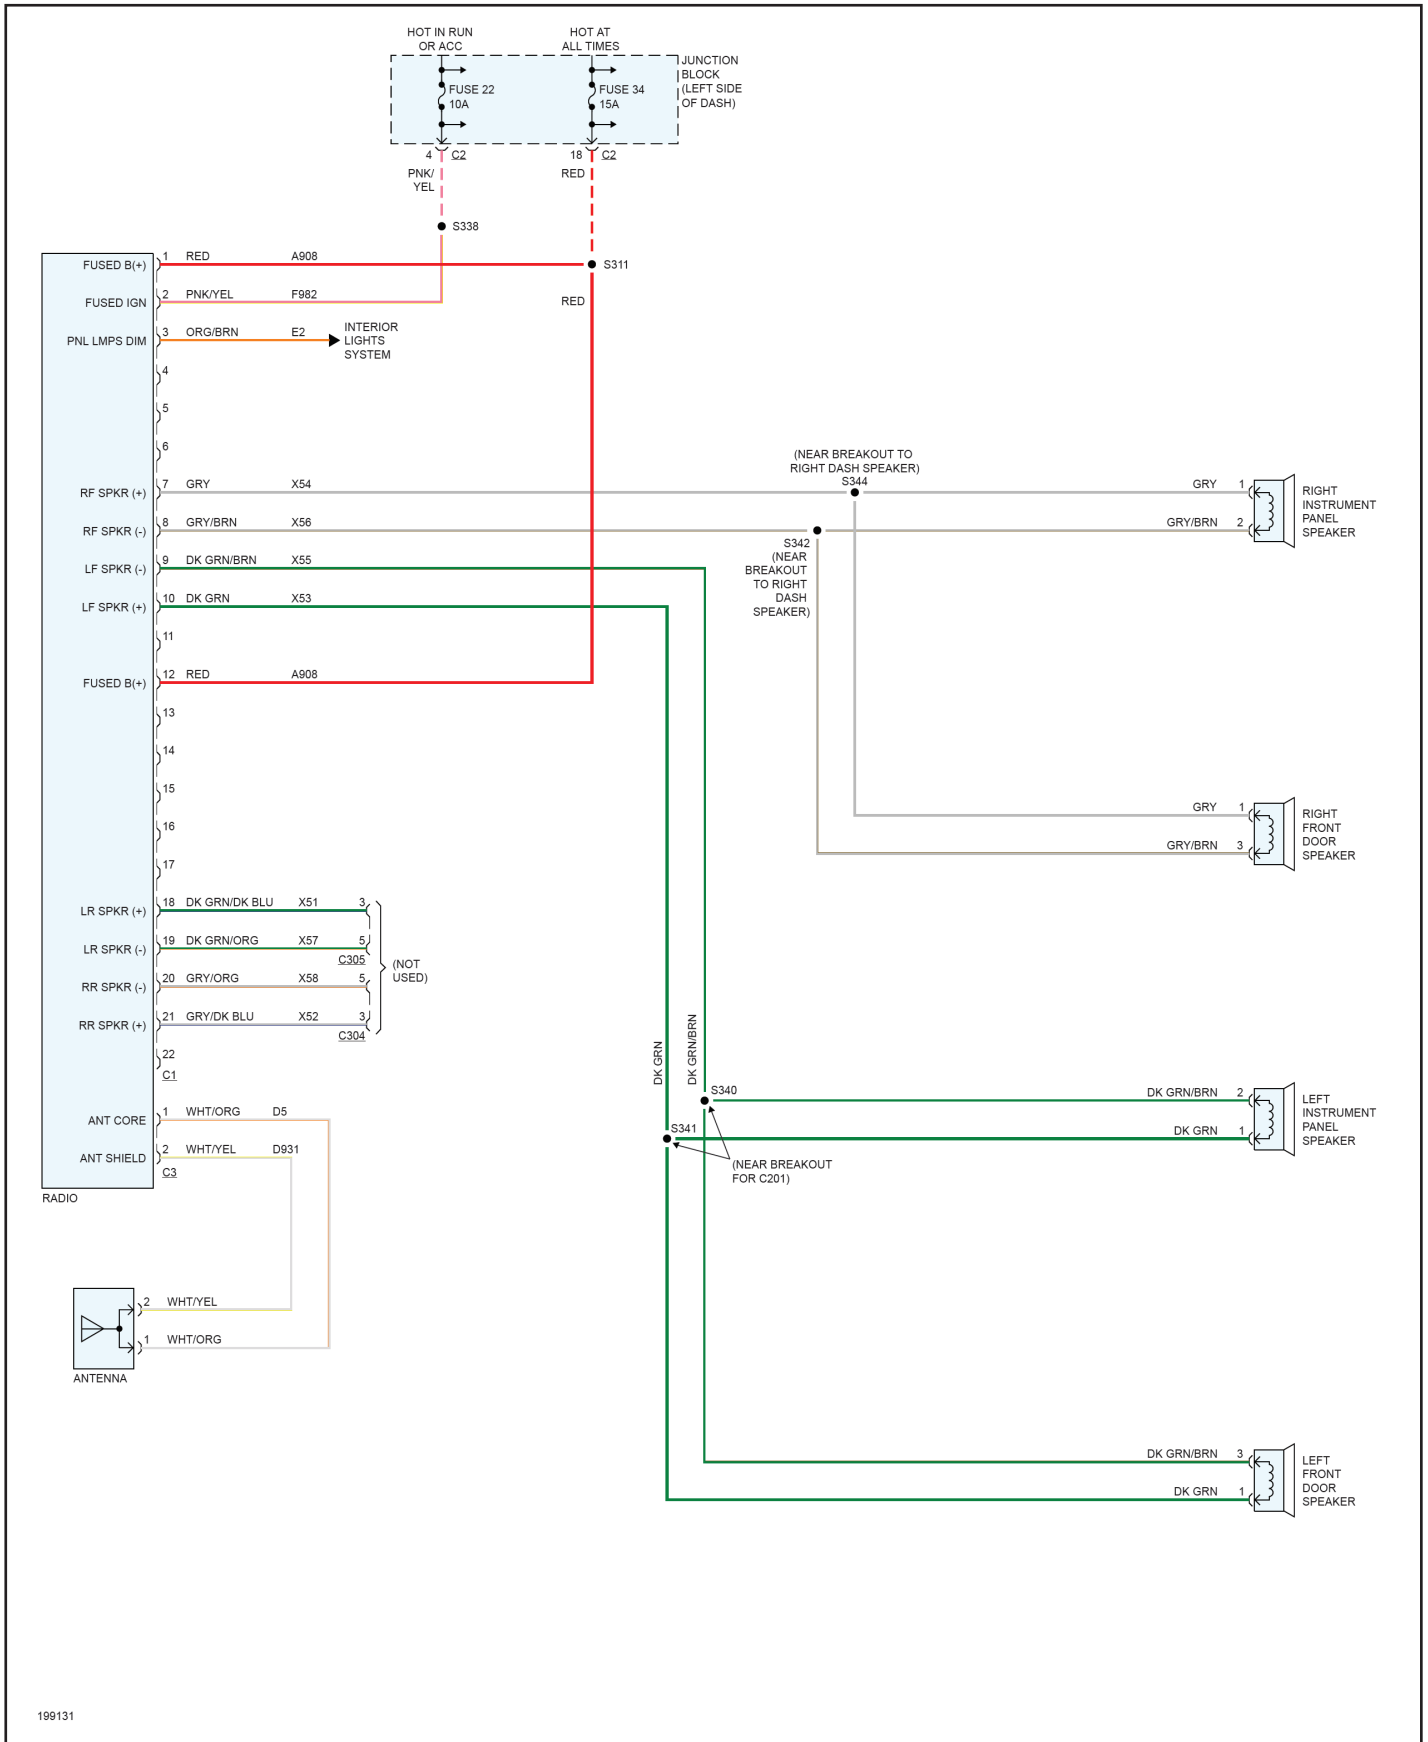


2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 SOUND SYSTEMS - PREMIUM

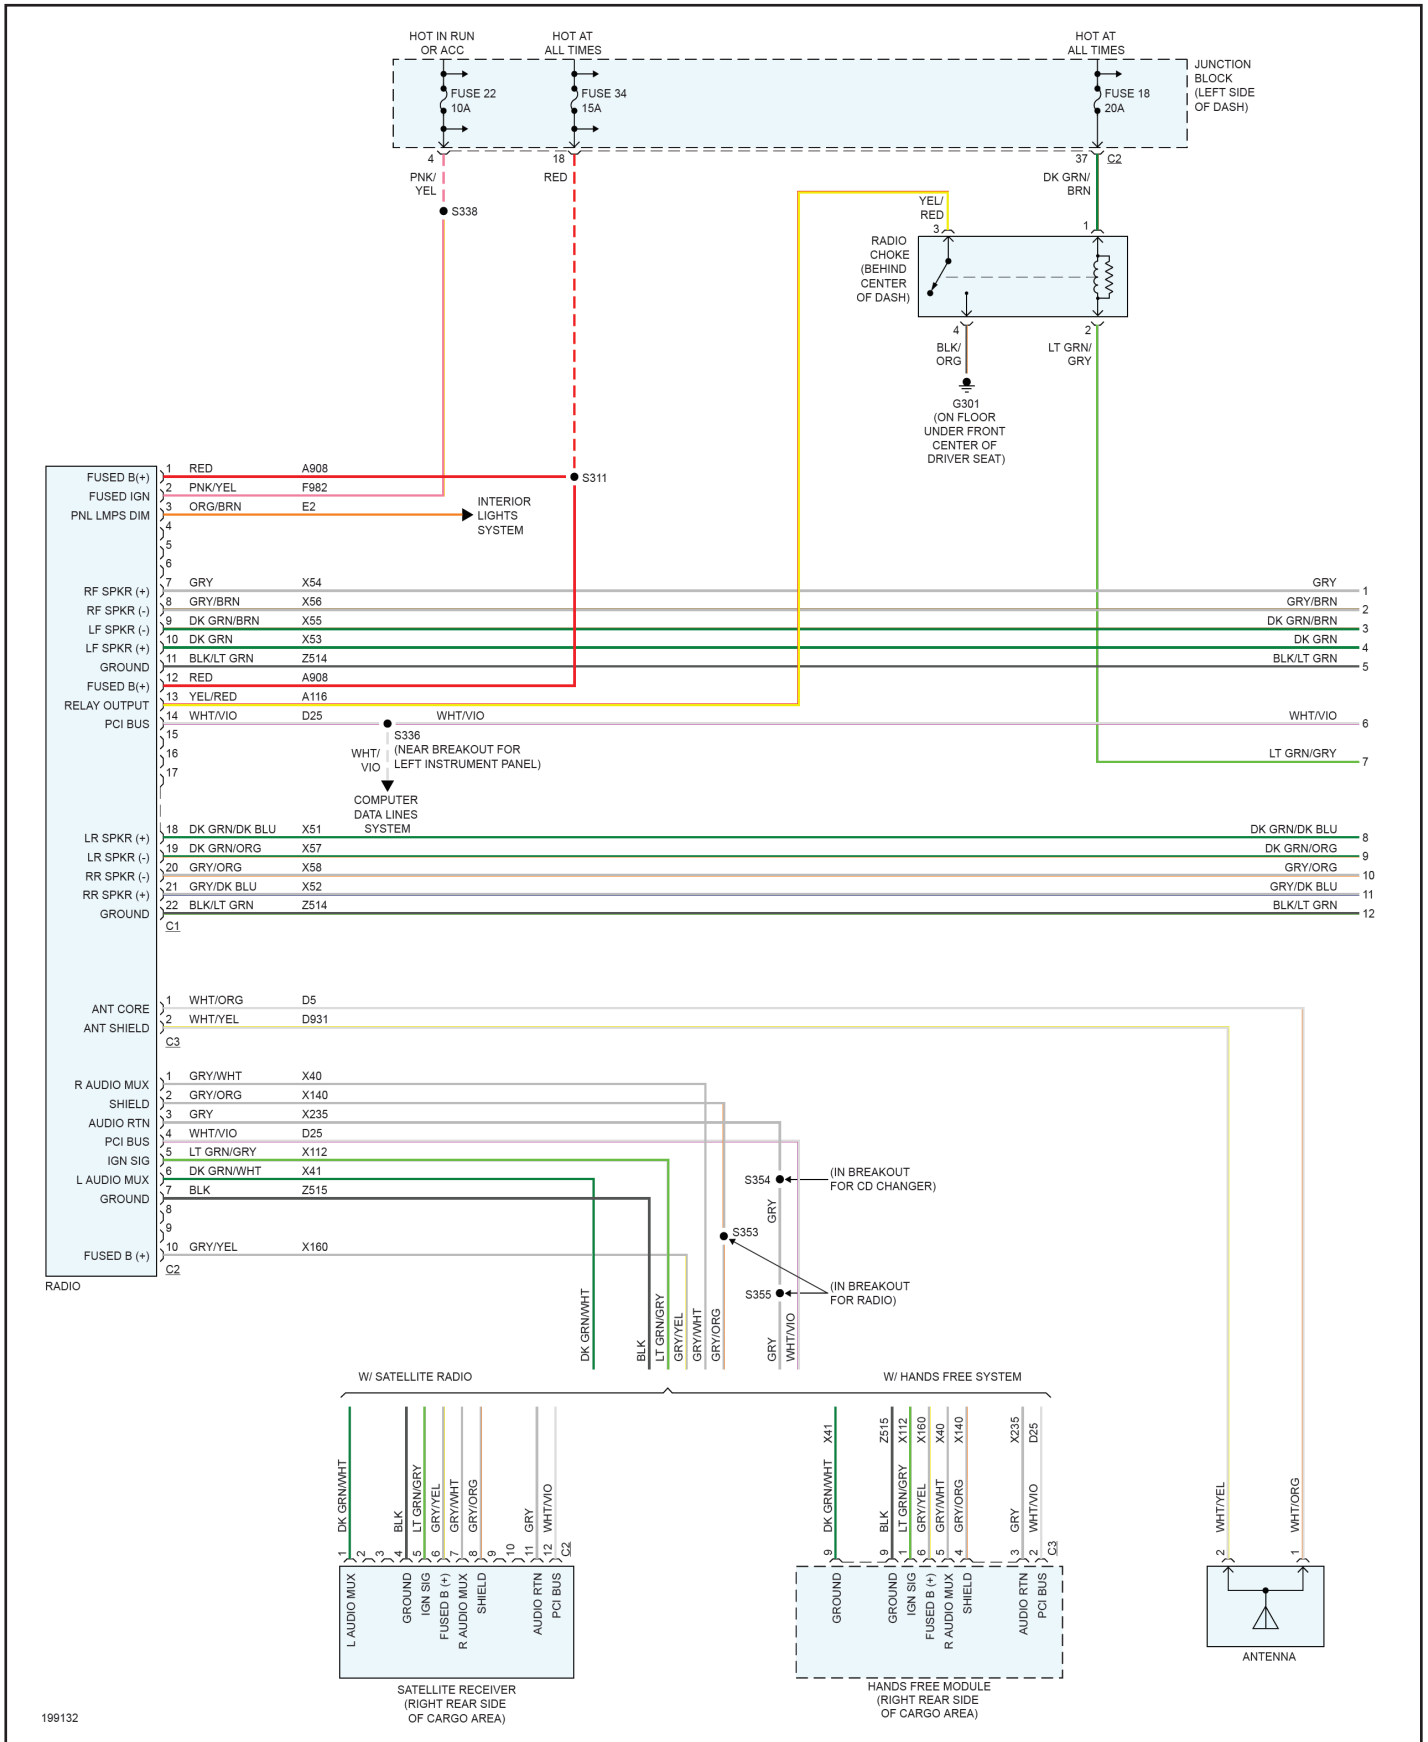


199132

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 SOUND SYSTEMS - PREMIUM

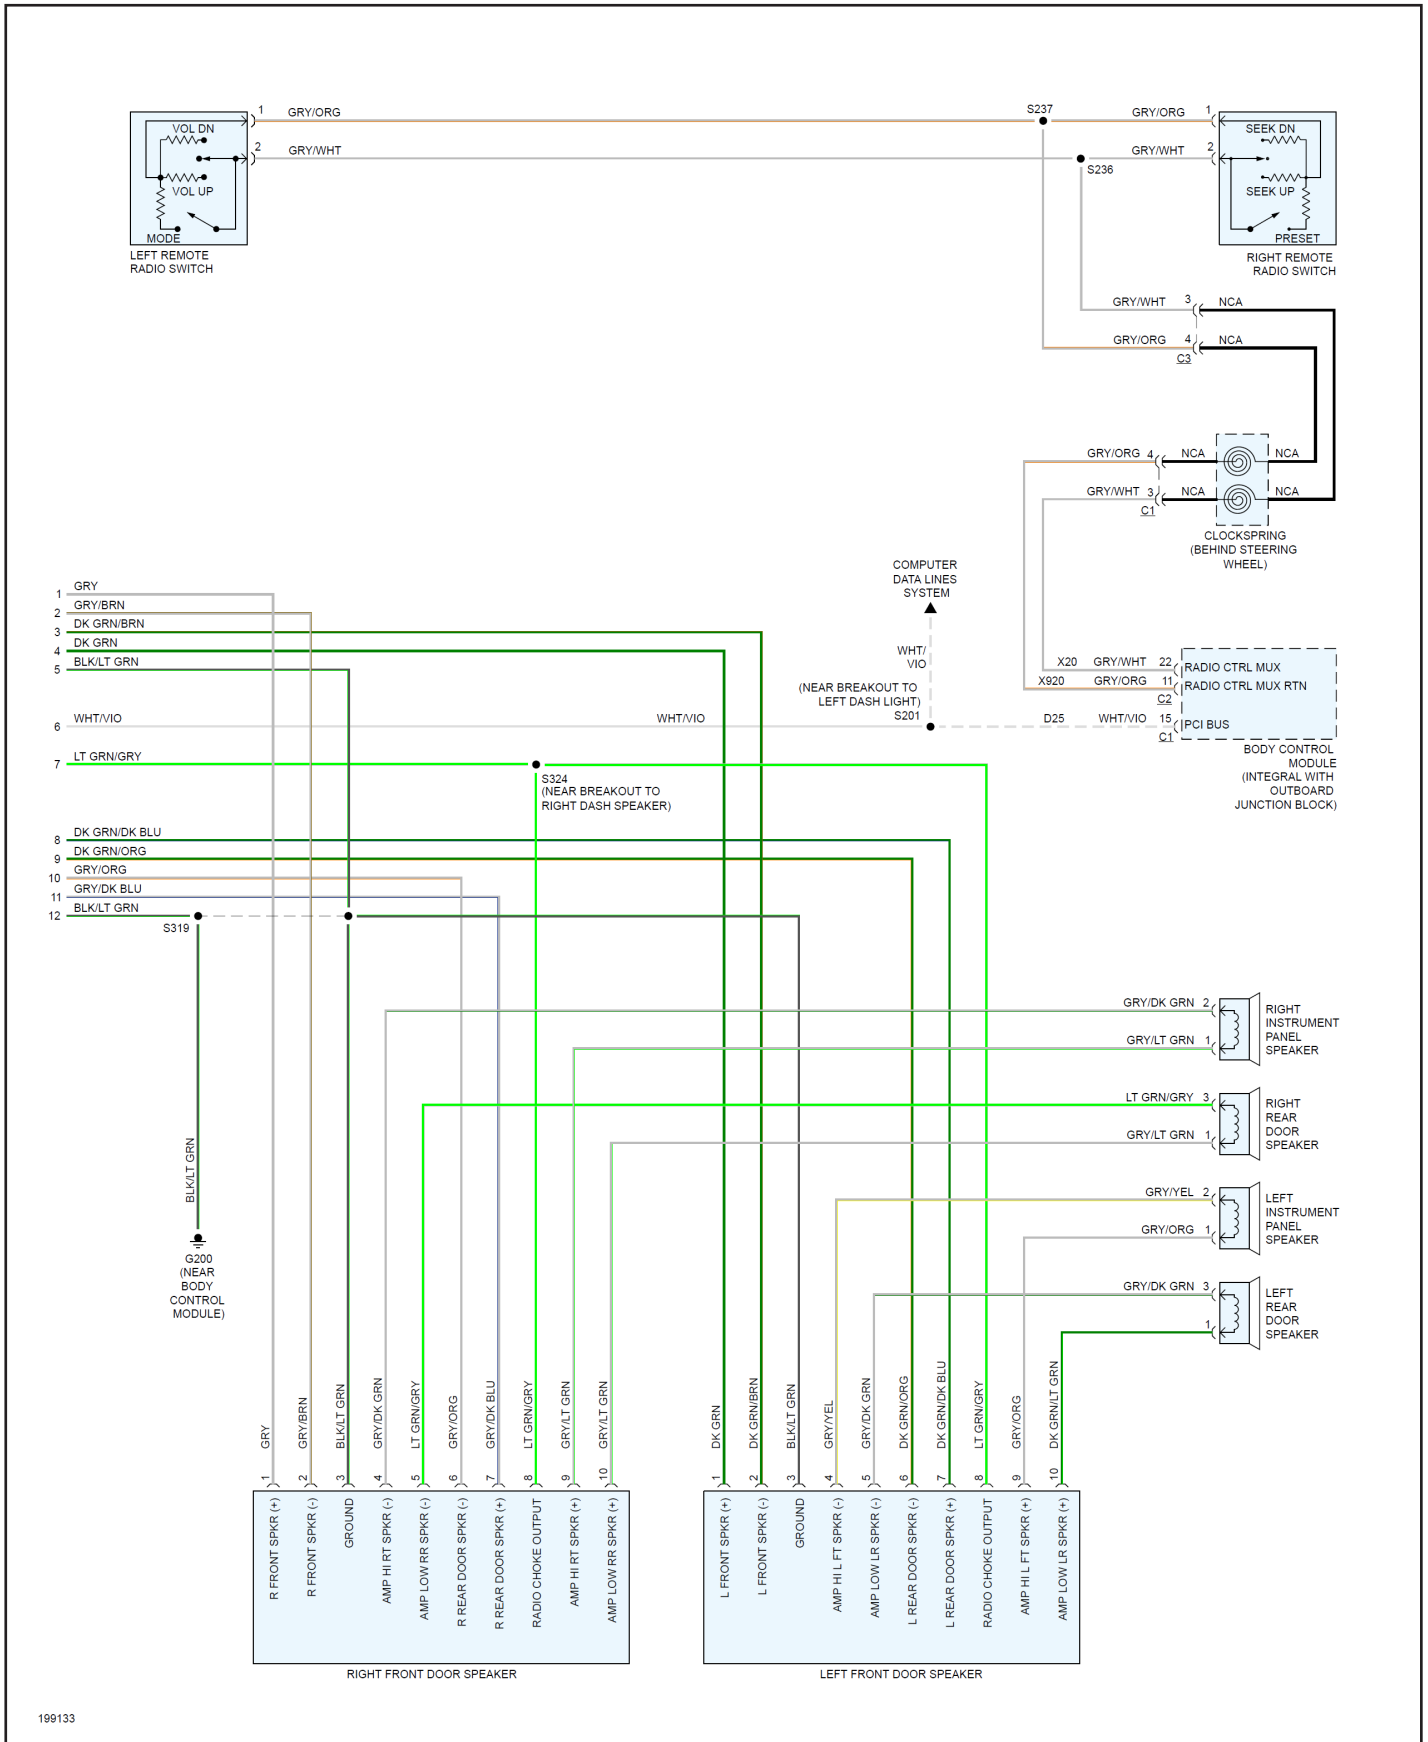


2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 EXTERIOR LIGHTS - BACK-UP LAMPS CIRCUIT

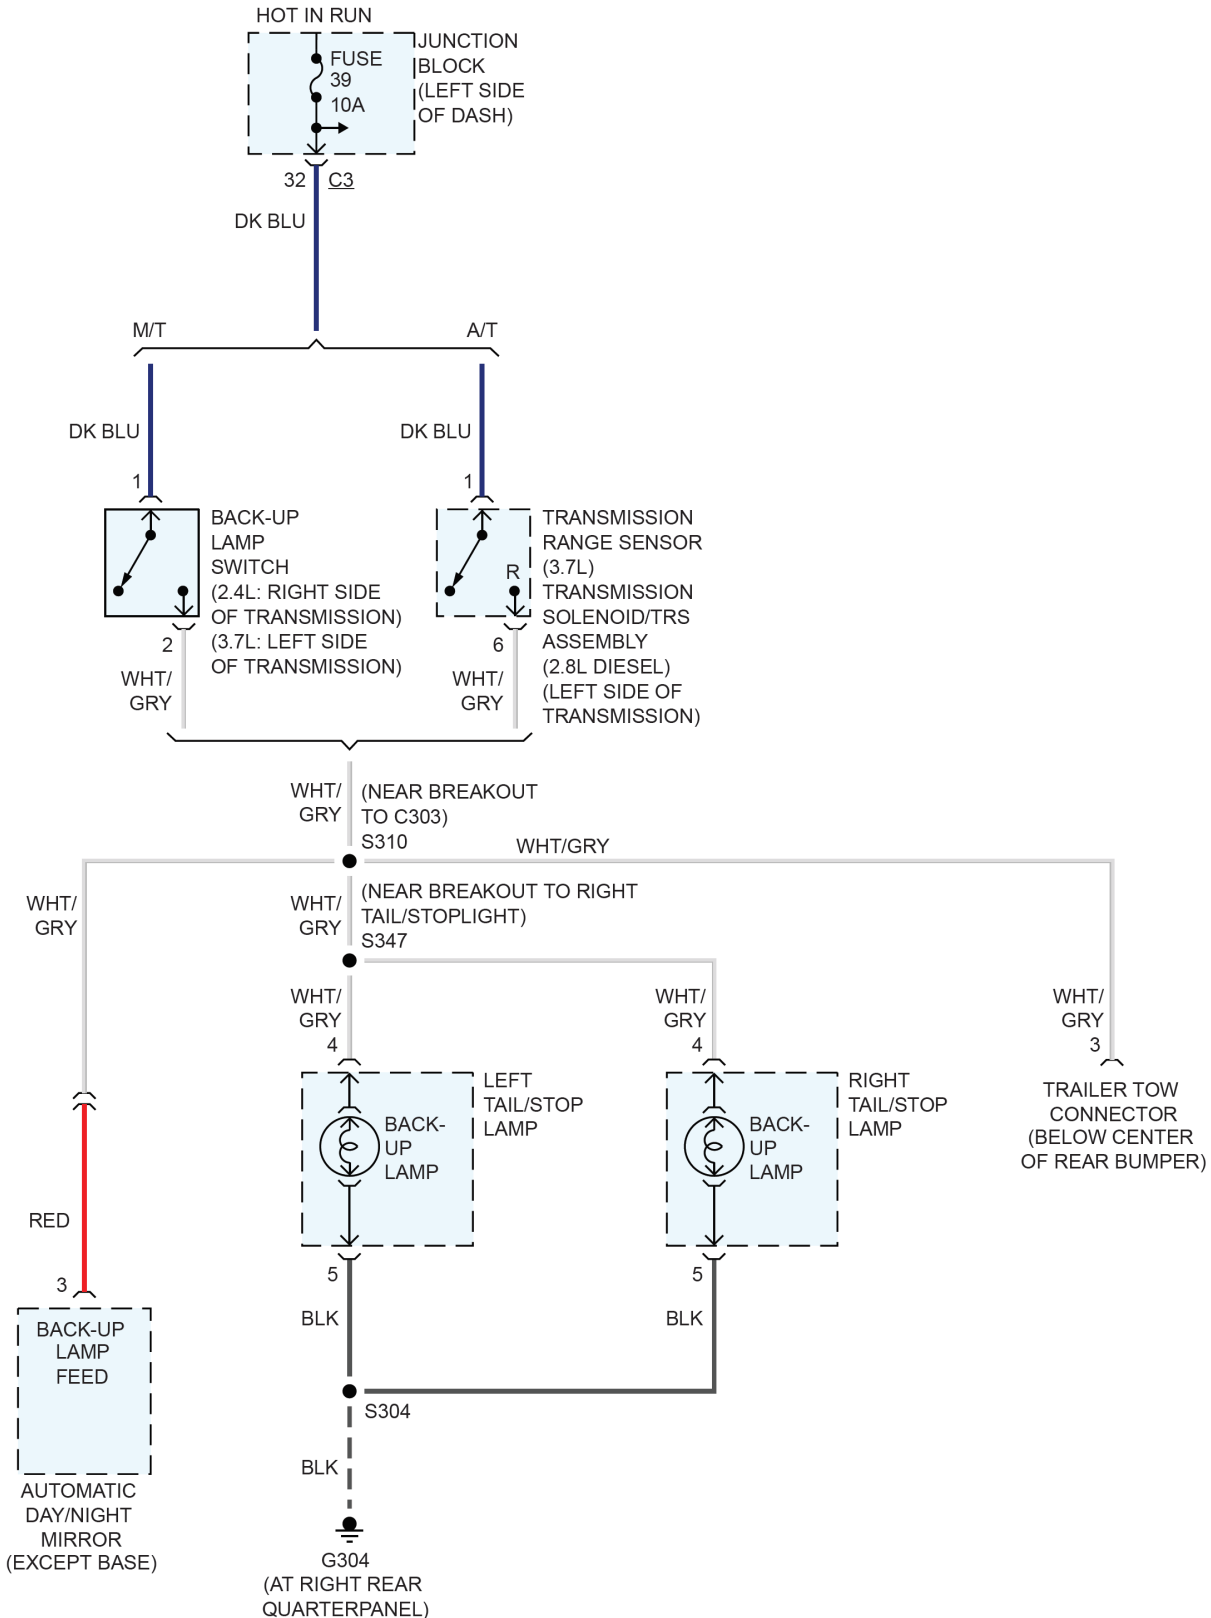


198848

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 EXTERIOR LIGHTS - EXTERIOR LAMPS CIRCUIT

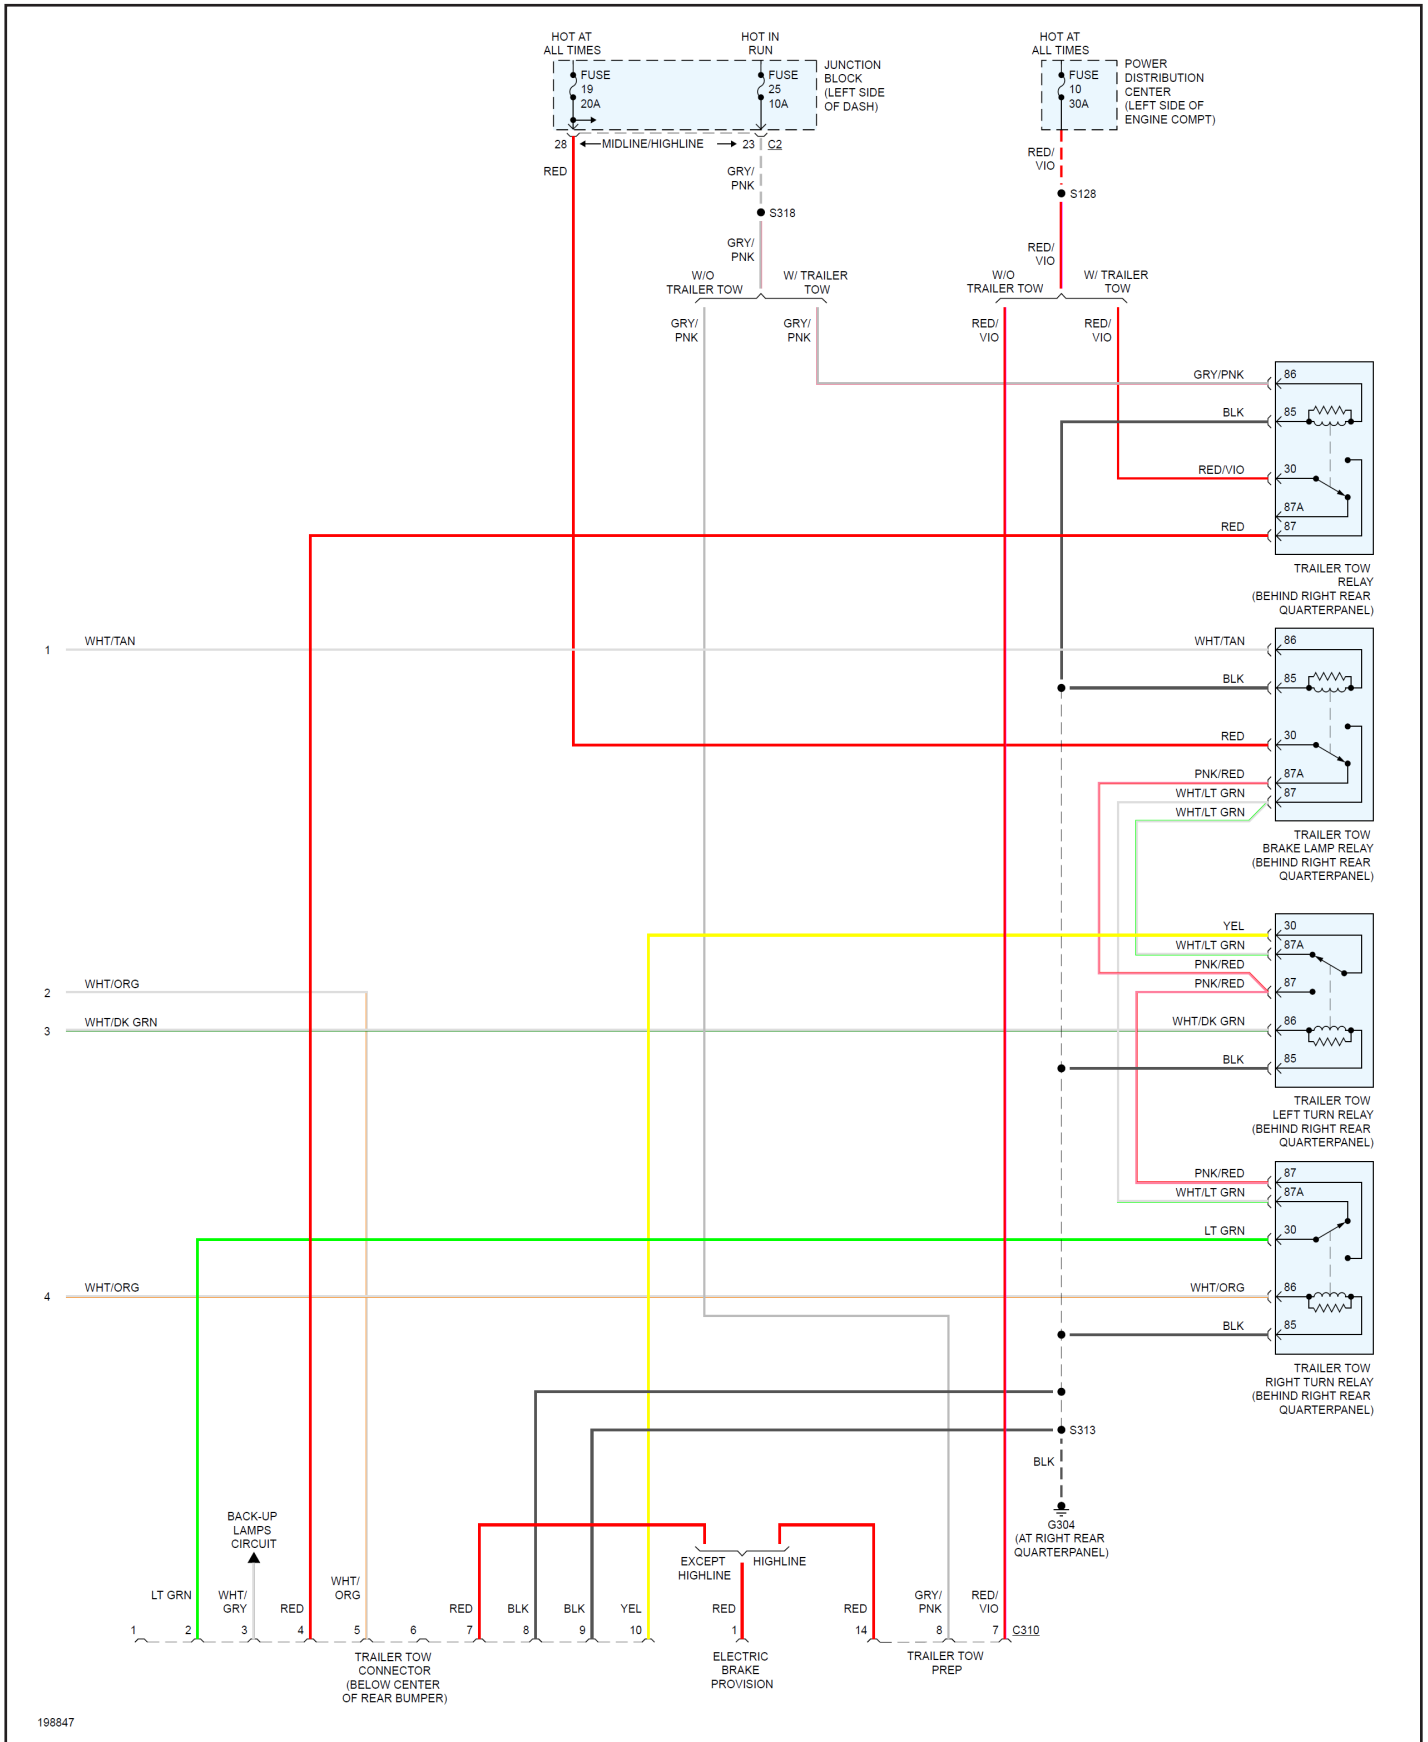


198847


2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 INTERIOR LIGHTS

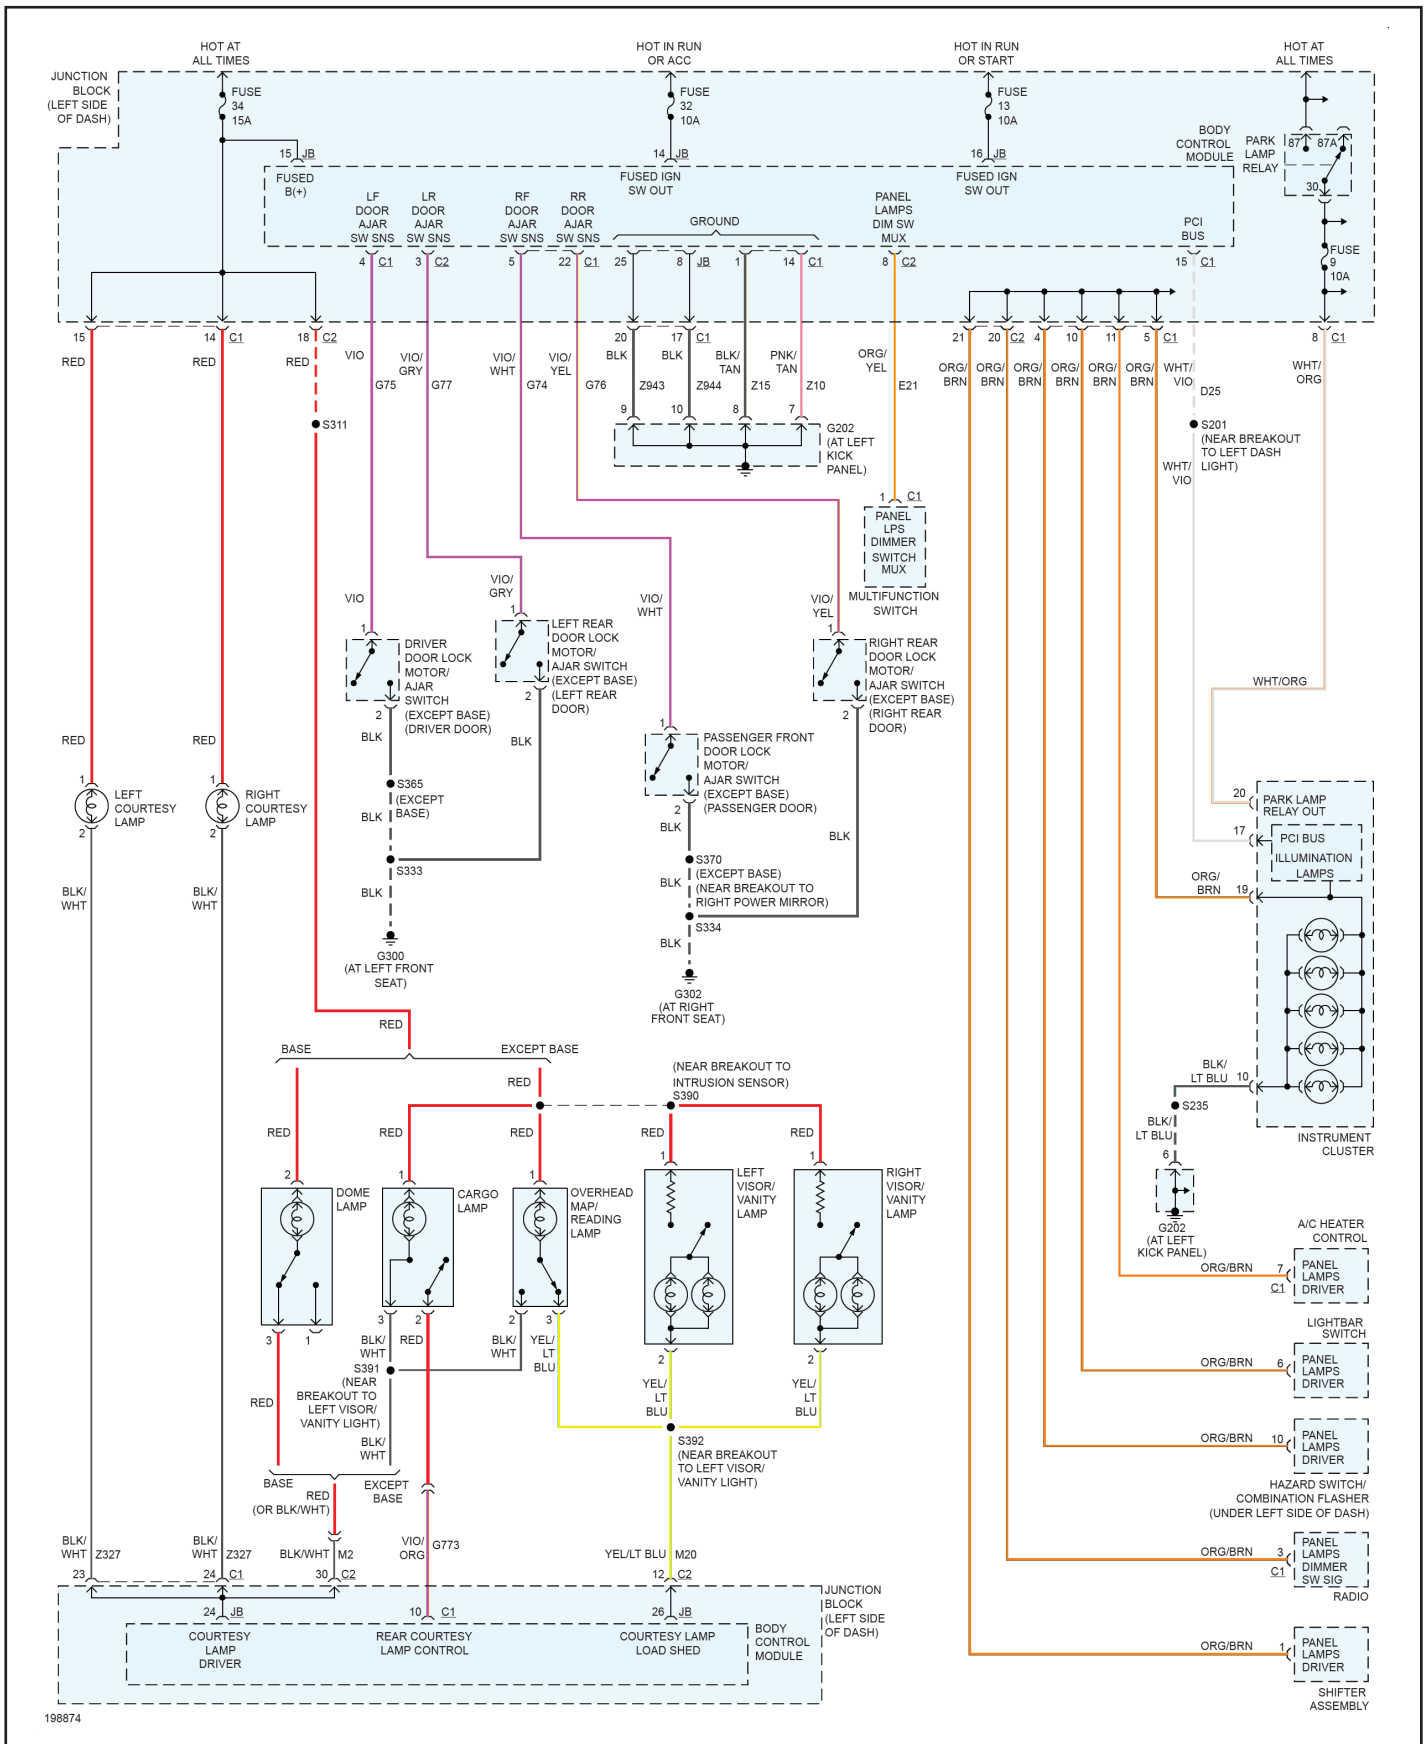

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 MIRRORS - AUTOMATIC DAY/NIGHT MIRROR CIRCUIT

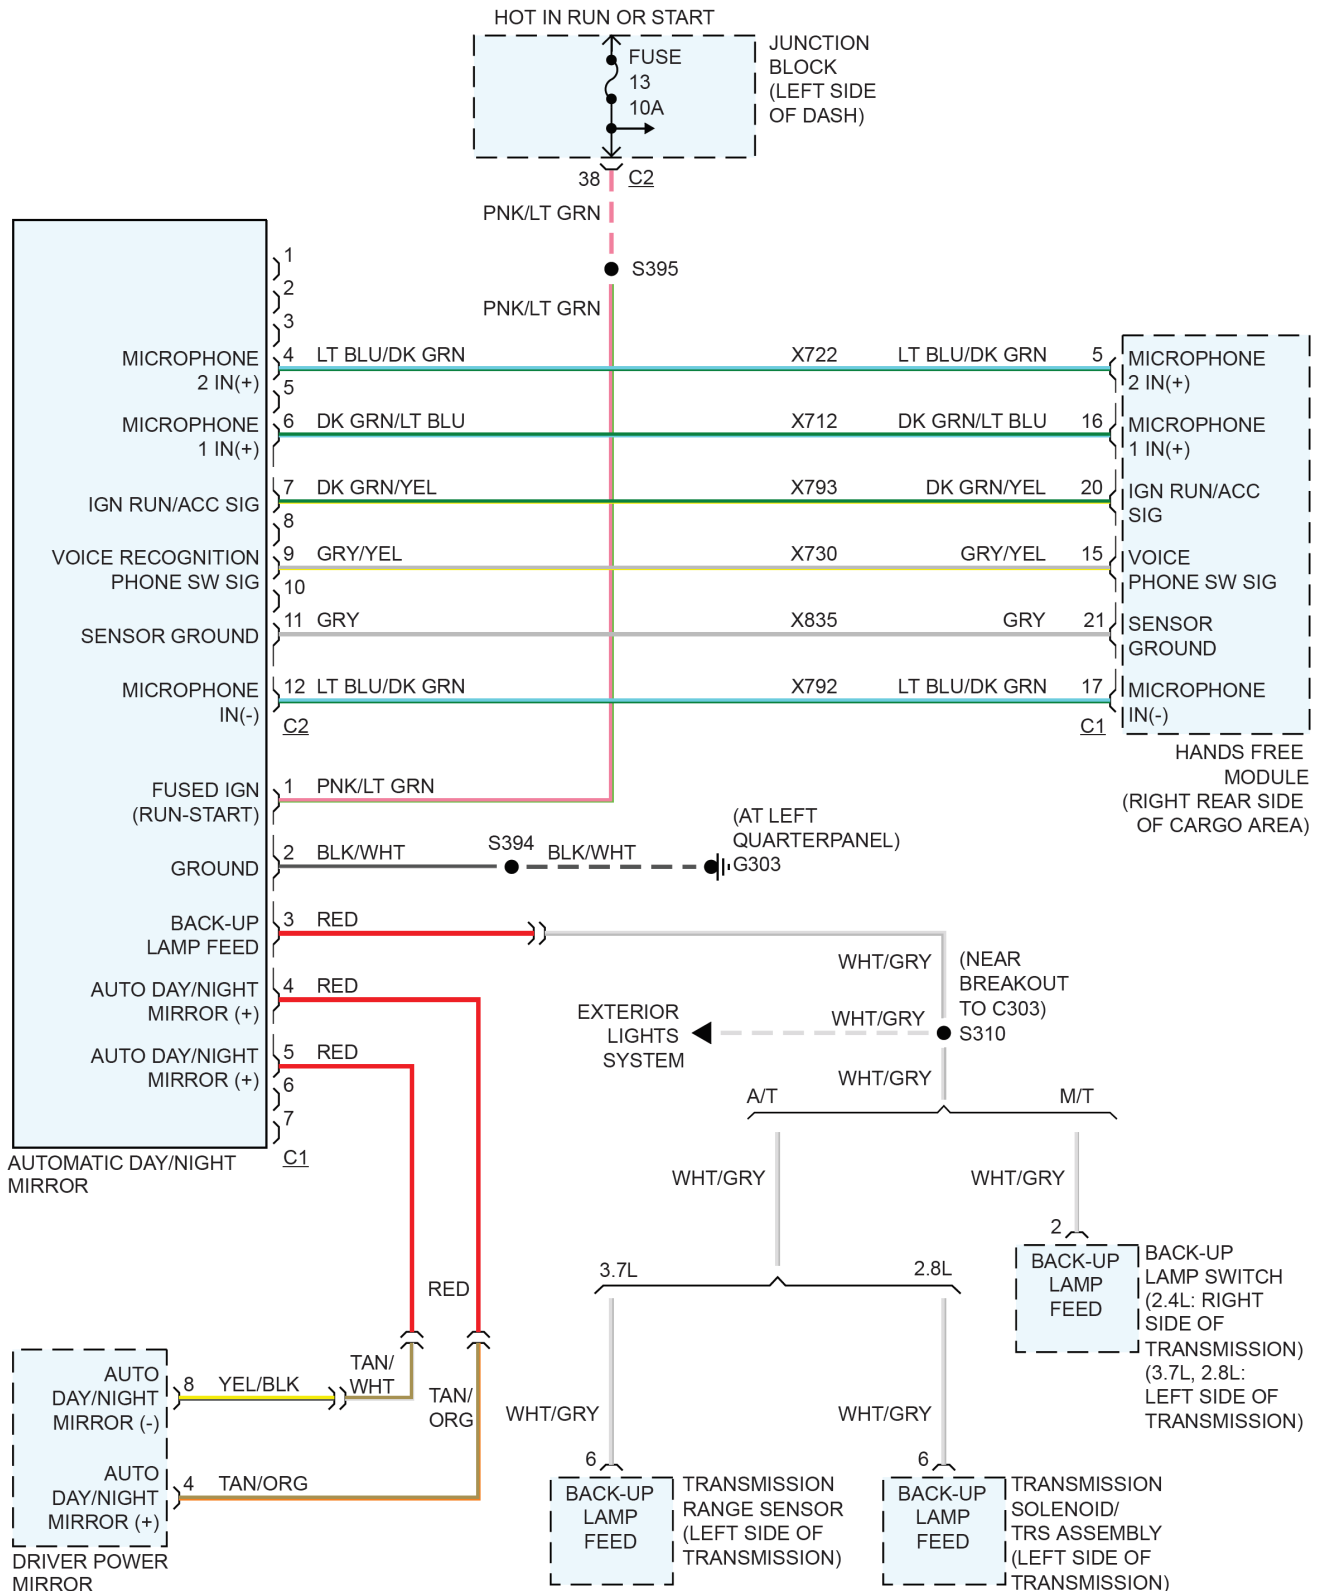


2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 MIRRORS - POWER MIRRORS CIRCUIT

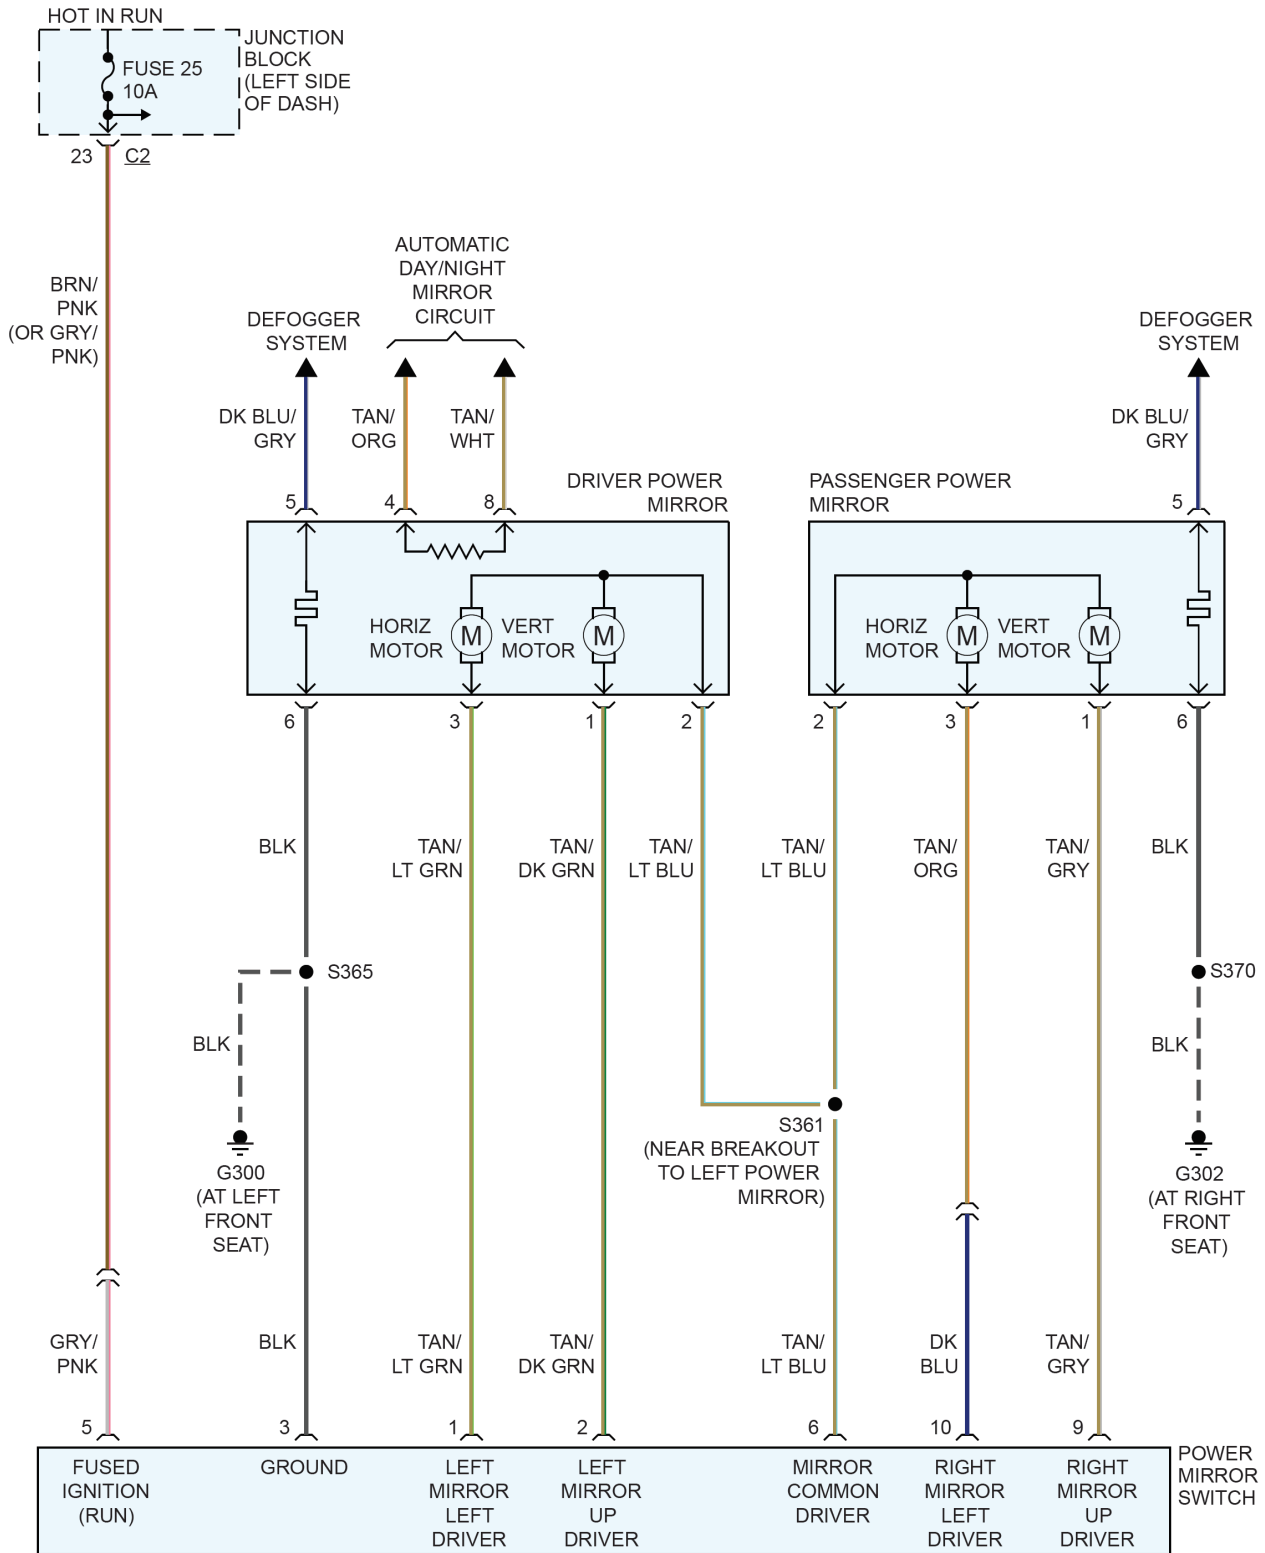


198646

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 POWER WINDOWS

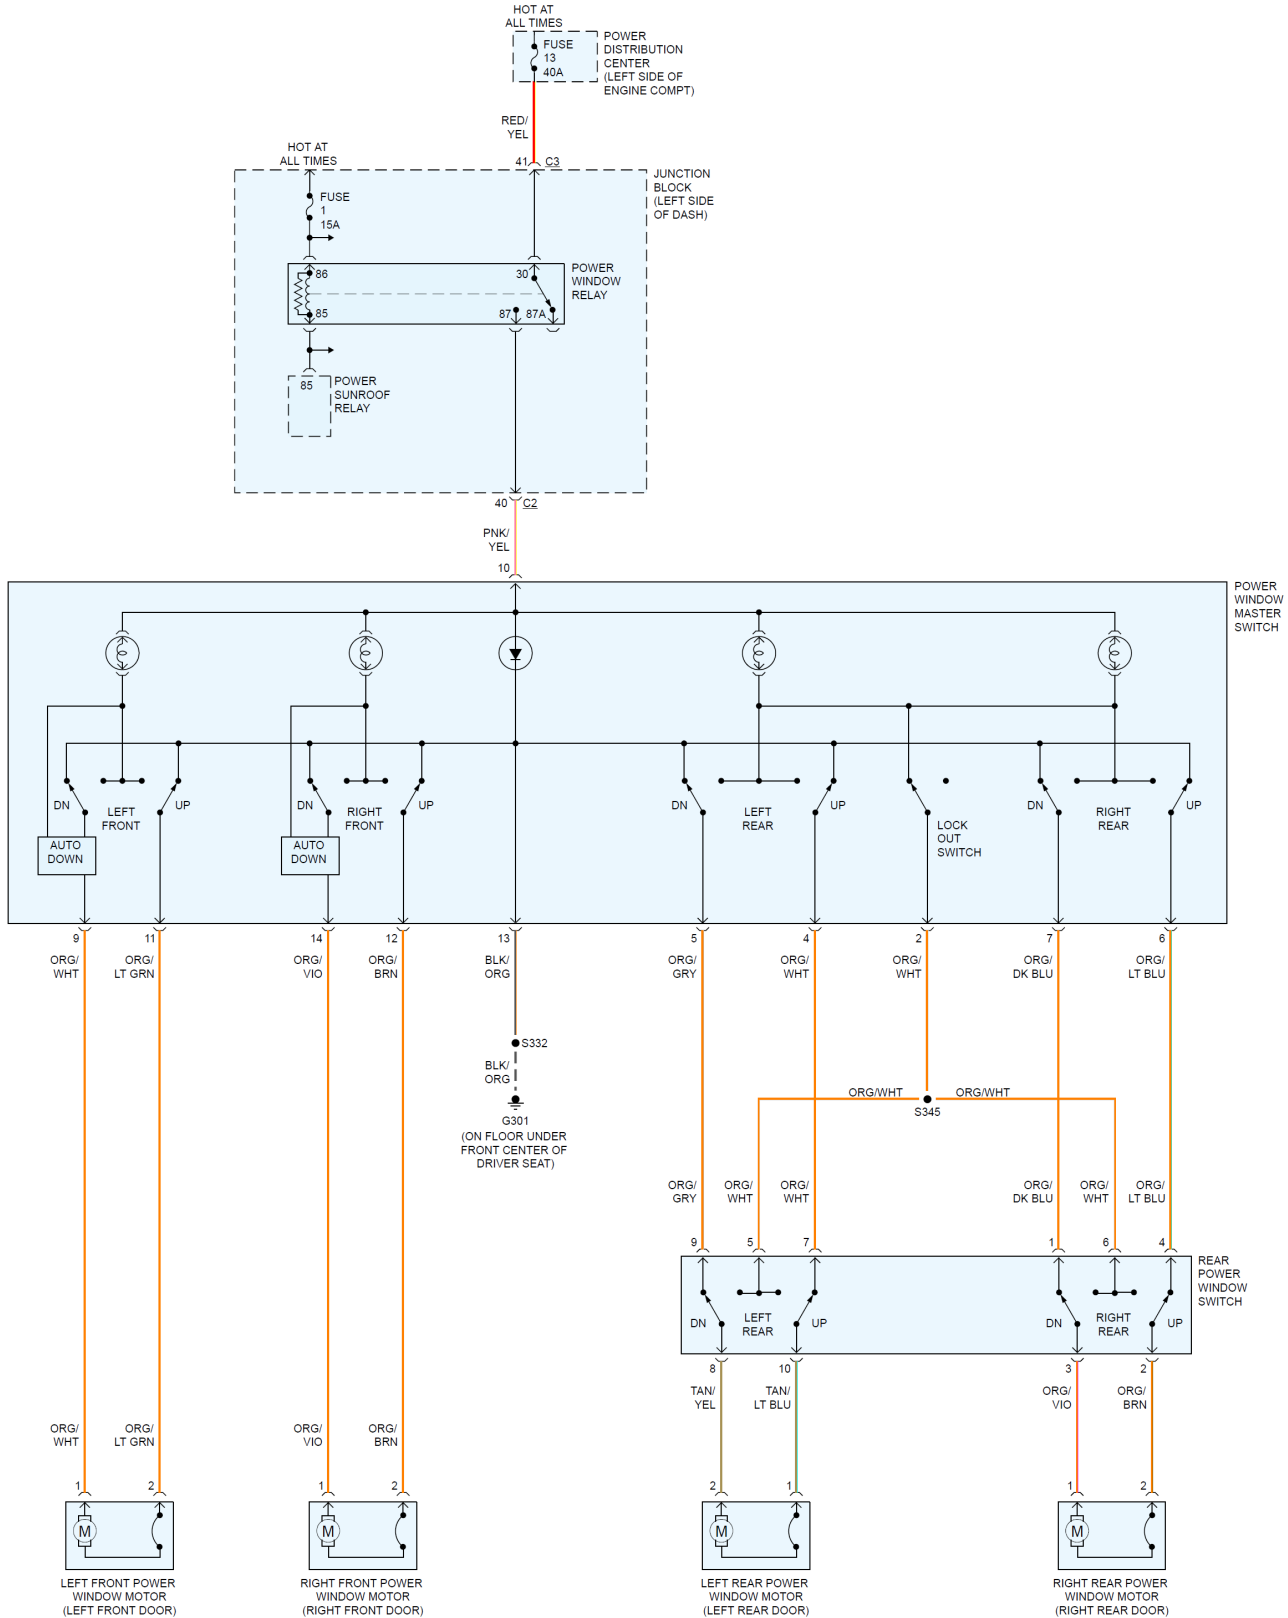


198556

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 JUNCTION BLOCK

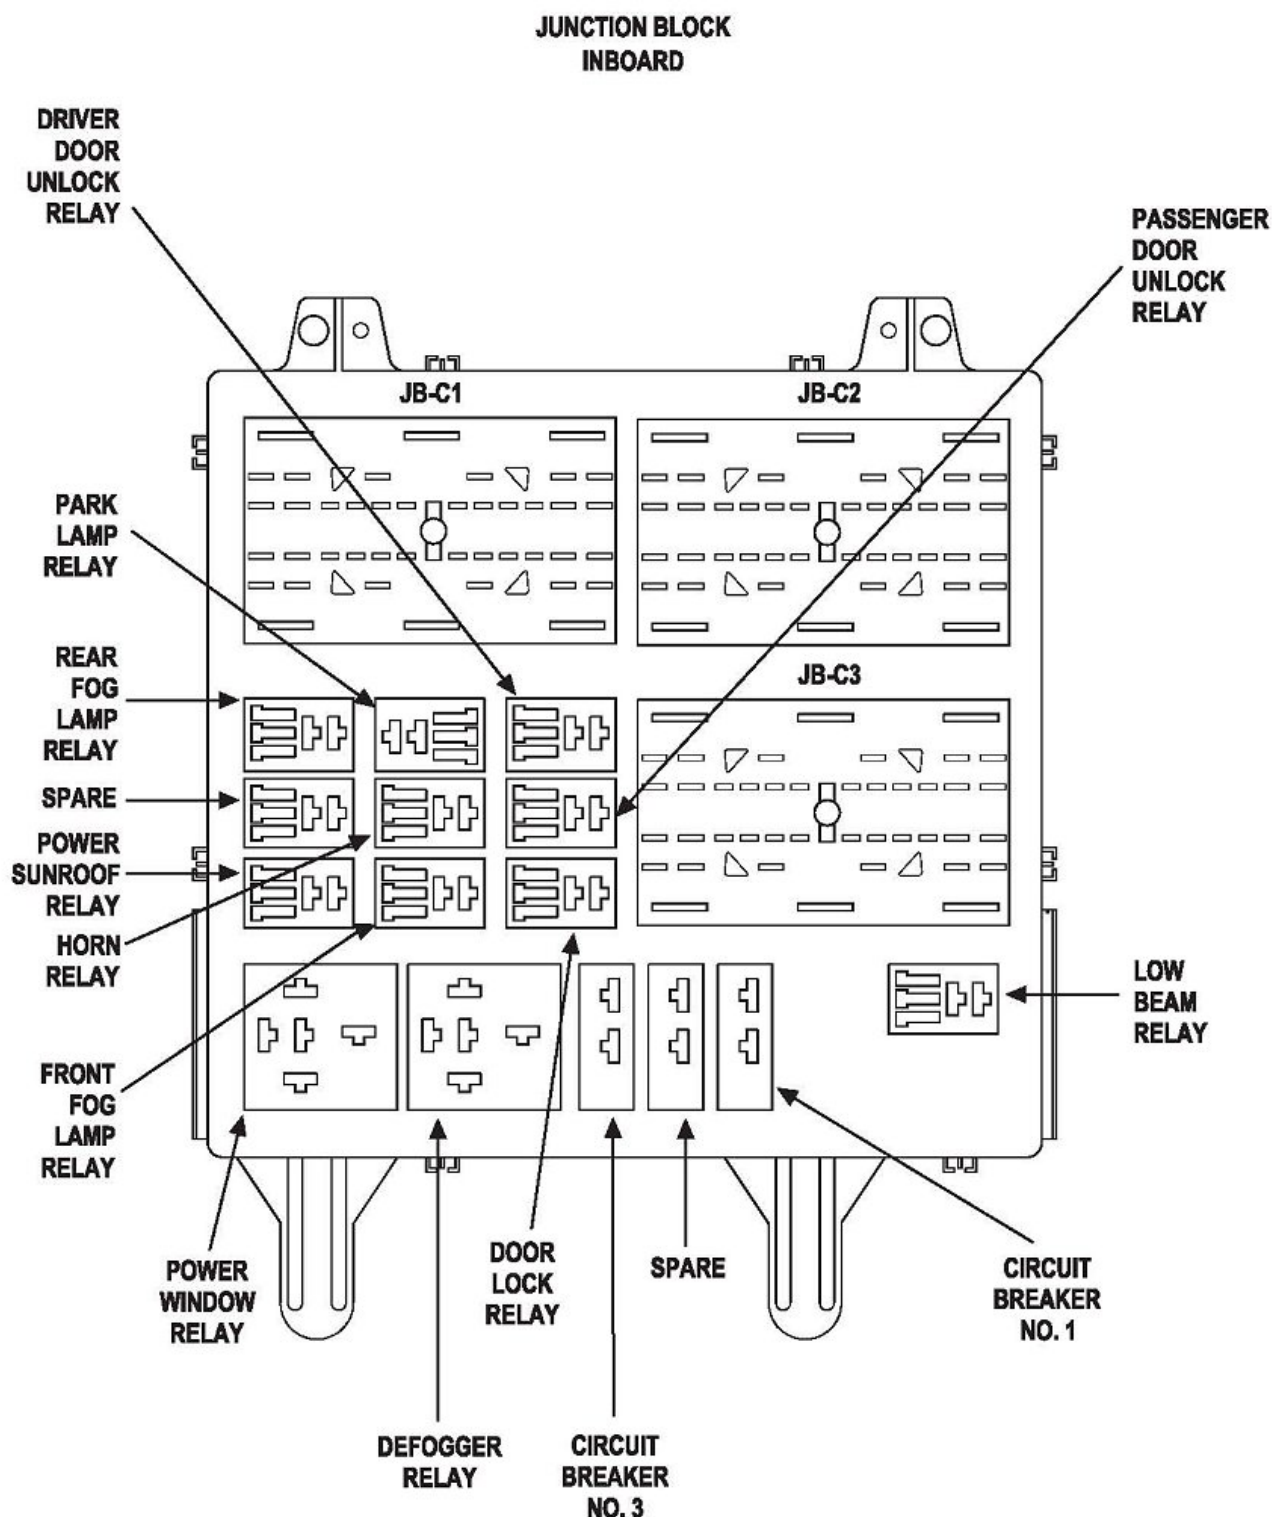

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 JUNCTION BLOCK

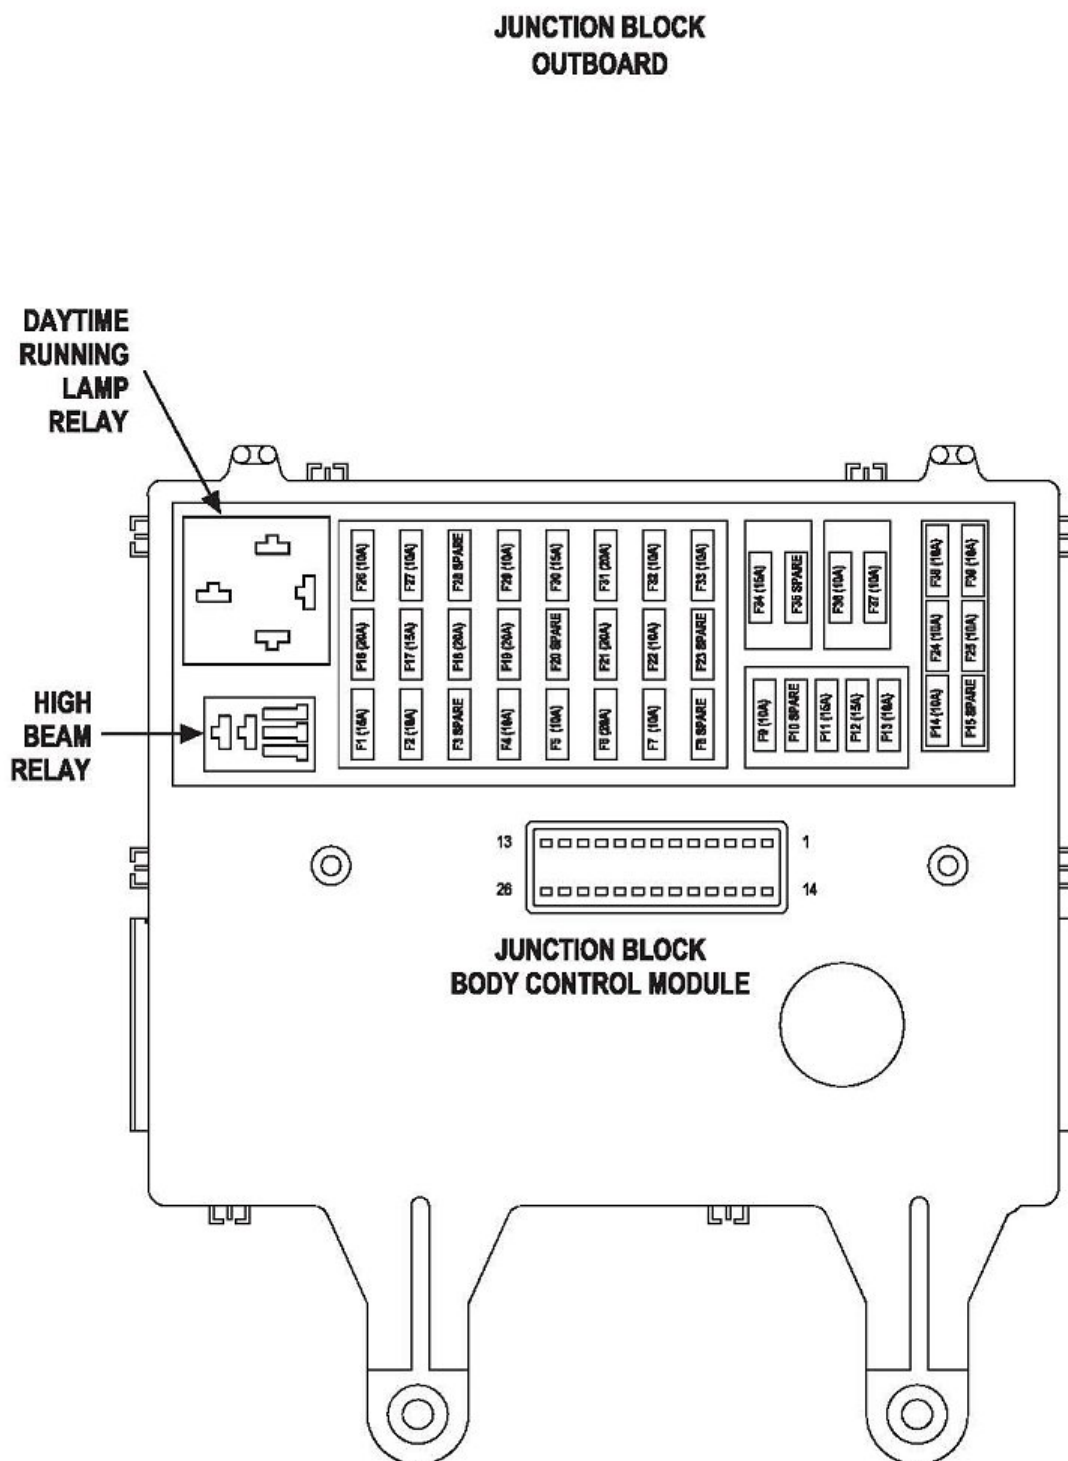

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

JUNCTION BLOCK

FUSES

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	15A	INTERNAL	FUSED B(+)
2	10A	INTERNAL	FUSED B(+)
3	-	-	-
4	10A	L44 18WT/TN	FUSED RIGHT LOW BEAM OUTPUT
5	10A	L43 18WT/DB	FUSED LEFT LOW BEAM OUTPUT
6	20A	INTERNAL	FUSED B(+)
7	10A	INTERNAL	FUSED PARK LAMP RELAY OUTPUT
8	-	-	-
9	10A	INTERNAL	FUSED PARK LAMP RELAY OUTPUT
10	-	-	-
11	15A	A107 18BR/RD	FUSED B(+)
12	15A	A103 18GY/RD	FUSED B(+)
13	10A	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
14	10A	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
15	-	-	-
16	20A	A305 16RD/LB	FUSED B(+)
17	15A	A44 18RD/OR	FUSED B(+)
18	20A	X1 16DG/BR	FUSED B(+)
19	20A	A913 16RD	FUSED B(+)
19	20A	INTERNAL	FUSED B(+)
20	-	-	-
21	20A	A130 16VT/RD	FUSED B(+)
22	10A	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
23	-	-	-
24	10A	F20 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN)
25	10A	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN)
26	10A	L34 18WT/GY	FUSED RIGHT HIGH BEAM OUTPUT
27	10A	L33 18WT/LG	FUSED LEFT HIGH BEAM OUTPUT
28	-	-	-
29	10A	INTERNAL	FUSED REAR WINDOW DEFOGGER RELAY OUTPUT
30	15A	A3 16RD/WT	FUSED B(+)

▼ BASE

▼▼ EXCEPT BASE

■ LHD HIGHLINE/RHD

J058W-2

KJ501204

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 JUNCTION BLOCK

FUSES (CONTINUED)

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
31	20A ●●	F307 16LB/PK	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
31	20A ●	A207 16RD/LG	FUSED B(+)
32	10A	F943 20PK/LG	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
33	10A	INTERNAL	FUSED B(+)
34	15A	INTERNAL	FUSED B(+)
35	-	-	-
36	10A	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
37	10A	F100 20PK/VT	FUSED IGNITION SWITCH OUTPUT (RUN)
38	10A	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN)
39	10A	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN)

CIRCUIT BREAKERS

C.B.	AMPS	FUSED CIRCUIT	FUNCTION
1	25A ◆◆◆◆	F37 14RD/LB	FUSED B(+)
2	-	SPARE	-
3	20A ●	V6 16DB/YL	WINDSHIELD WIPER SYSTEM FEED
	20A ●●	V6 14DB/YL	WINDSHIELD WIPER SYSTEM FEED

◆◆◆◆ MIDLINE/HIGHLINE
● LHD
●● RHD

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

JUNCTION BLOCK

DEFOGGER RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	REAR WINDOW DEFOGGER RELAY CONTROL
86	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN)
87	INTERNAL	REAR WINDOW DEFOGGER RELAY OUTPUT
87A	-	-

DOOR LOCK RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	LOCK RELAY OUTPUT
85	INTERNAL	FUSED B(+)
86	INTERNAL	DOOR LOCK RELAY CONTROL
87	INTERNAL	FUSED B(+)
87A	INTERNAL	GROUND

DRIVER DOOR UNLOCK RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	DRIVER DOOR UNLOCK RELAY OUTPUT
85	INTERNAL	DRIVER DOOR UNLOCK RELAY CONTROL
86	INTERNAL	FUSED B(+)
87	INTERNAL	FUSED B(+)
87A	INTERNAL	GROUND

FRONT FOG LAMP RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FRONT FOG LAMP RELAY CONTROL
86	INTERNAL	FUSED B(+)
87	INTERNAL	FRONT FOG LAMP RELAY OUTPUT
87A	-	-

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

JUNCTION BLOCK

HIGH BEAM RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FUSED B(+)
86	INTERNAL	HIGH BEAM RELAY CONTROL
87	INTERNAL	FRONT FOG LAMP RELAY OUTPUT
87A	-	-

HORN RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	HORN RELAY CONTROL
86	INTERNAL	FUSED B(+)
87	INTERNAL	HORN RELAY OUTPUT
87A	-	-

LOW BEAM RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FUSED B(+)
86	INTERNAL	LOW BEAM RELAY CONTROL
87	INTERNAL	LOW BEAM RELAY OUTPUT
87A	-	-

PARK LAMP RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	PARK LAMP RELAY OUTPUT
85	INTERNAL	PARK LAMP RELAY CONTROL
86	INTERNAL	FUSED B(+)
87	INTERNAL	FUSED B(+)
87A	INTERNAL	GROUND

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 JUNCTION BLOCK

PASSENGER DOOR UNLOCK RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	UNLOCK RELAY OUTPUT
85	INTERNAL	DOOR UNLOCK RELAY CONTROL
86	INTERNAL	FUSED B(+)
87	INTERNAL	FUSED B(+)
87A	INTERNAL	GROUND

POWER WINDOW RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	ACCESSORY DELAY RELAY CONTROL
86	INTERNAL	FUSED B(+)
87	INTERNAL	IGNITION SWITCH OUTPUT (RUN-ACC)
87A	-	-


POWER SUNROOF RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	ACCESSORY DELAY RELAY CONTROL
86	INTERNAL	FUSED B(+)
87	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
87A	-	-


REAR FOG LAMP RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	REAR FOG LAMP RELAY CONTROL
86	INTERNAL	FUSED B(+)
87	INTERNAL	REAR FOG LAMP RELAY OUTPUT
87A	-	-

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 POWER DISTRIBUTION CENTER

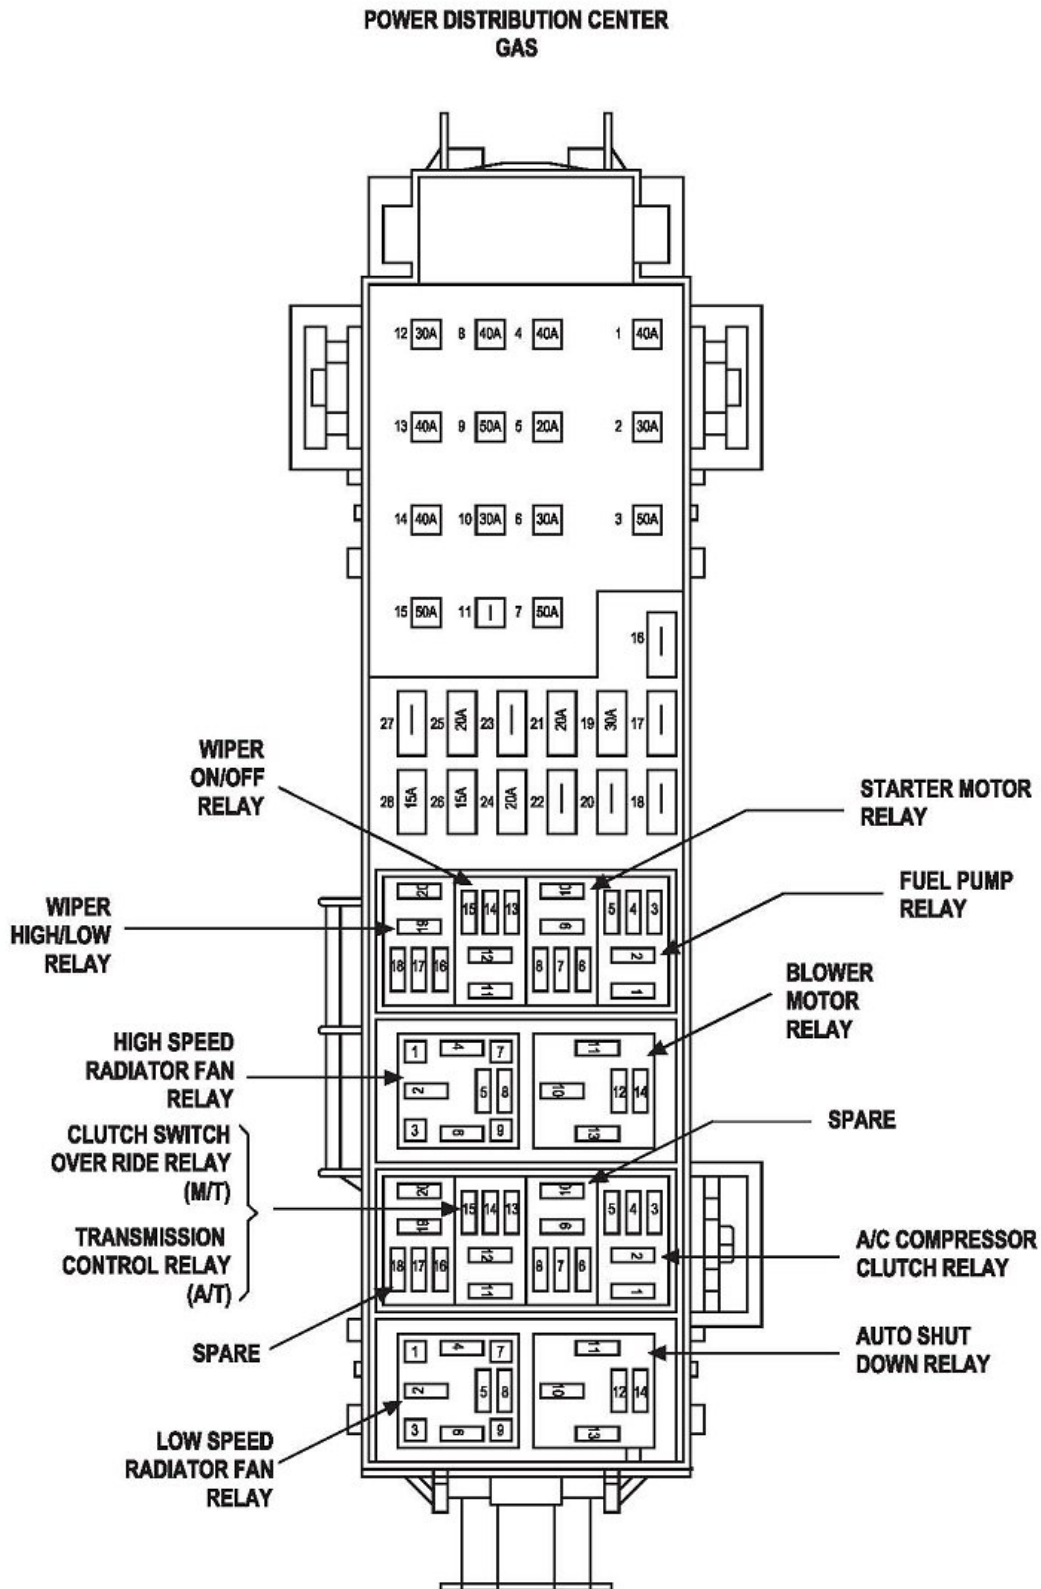

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 POWER DISTRIBUTION CENTER

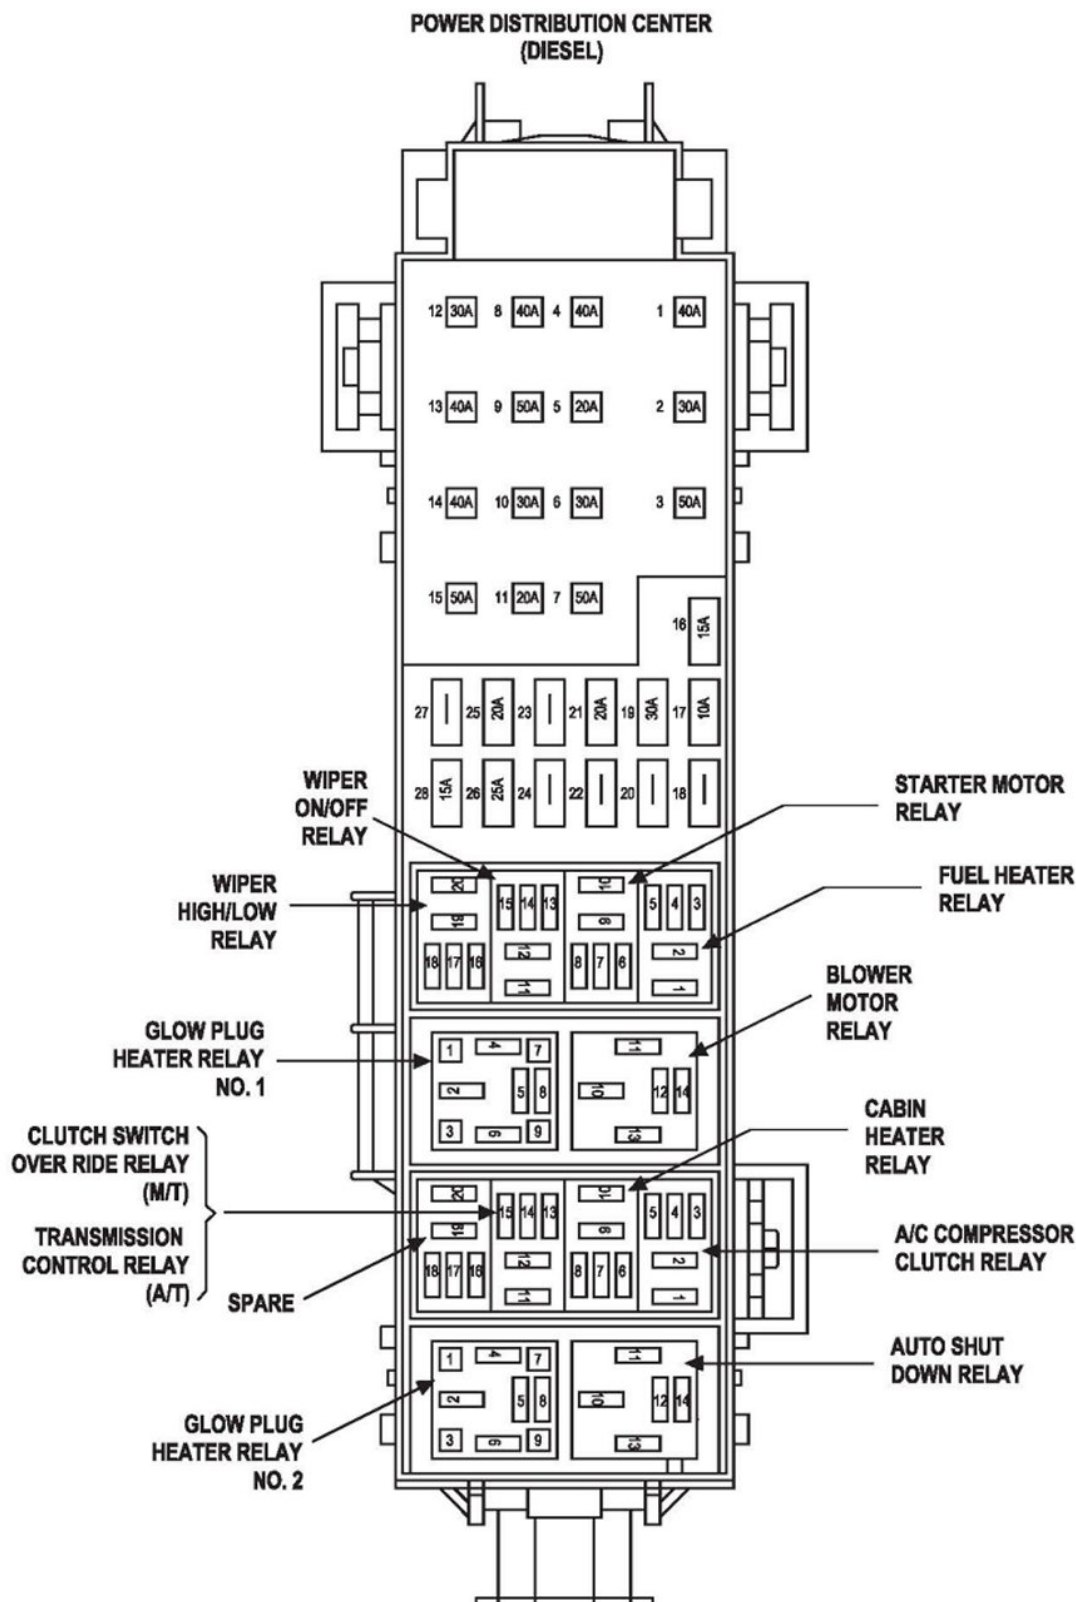

KJ501003

J058W-2

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 POWER DISTRIBUTION CENTER

FUSES (GAS)

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	40A	A122 12RD	FUSED B(+)
2	30A	A16 12RD/BR	FUSED B(+)
3	50A	A912 10RD	FUSED B(+)
4	40A	A107 12TN/RD ◇◇◇	FUSED B(+)
5	20A	A903 16RD ■■	FUSED B(+)
6	30A	A907 14RD	FUSED B(+)
7	50A	A911 10RD	FUSED B(+)
8	40A	A916 12RD	FUSED B(+)
9	50A	A901 10RD	FUSED B(+)
10	30A	A100 14RD/VT	FUSED B(+)
11	-	-	-
12	30A	A904 14RD	FUSED B(+)
13	40A	A139 12RD/YL	FUSED B(+)
14	40A	A1 12RD	FUSED B(+)
15	50A	A12 10RD/BR	FUSED B(+)
16	-	-	-
17	-	-	-
18	-	-	-
19	30A	A906 12RD	FUSED B(+)
20	-	-	-
21	20A	A112 18OR/RD	FUSED B(+)
22	-	-	-
23	-	-	-
24	20A	A209 18RD	FUSED B(+)
		A209 18RD	FUSED B(+)
25	20A	A200 12RD/DG ◇◇◇	FUSED B(+)
26	15A	F142 16PK/GY	FUSED ASD RELAY OUTPUT
27	-	-	-
28	15A	F26 20PK/OR	FUSED IGNITION SWITCH OUTPUT (START)
		F26 20PK/OR	FUSED IGNITION SWITCH OUTPUT (START)

◇◇◇ ABS
■■ A/T

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 POWER DISTRIBUTION CENTER

FUSES (DIESEL)

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	40A	A122 12RD	FUSED B(+)
2	30A	A16 12RD/BR	FUSED B(+)
3	50A	A912 10RD	FUSED B(+)
4	40A	A107 12TN/RD ◇◇◇	FUSED B(+)
5	20A	A903 18RD ■■	FUSED B(+)
6	30A	A907 14RD	FUSED B(+)
7	50A	A911 10RD	FUSED B(+)
8	40A	A916 12RD	FUSED B(+)
9	50A	A901 10RD	FUSED B(+)
10	30A	A100 14RD/VT	FUSED B(+)
11	20A	A34 16RD/WT	FUSED B(+)
12	30A	A904 14RD	FUSED B(+)
13	40A	A139 12RD/YL	FUSED B(+)
14	40A	A1 12RD	FUSED B(+)
15	50A	A12 10RD/BR	FUSED B(+)
16	15A	K347 20BR/YL	FUSED ASD RELAY OUTPUT
17	10A	A129 18RD/BR	FUSED B(+)
18	-	-	-
19	30A	A906 12RD	FUSED B(+)
20	-	-	-
21	20A	A112 18OR/RD	FUSED B(+)
22	-	-	-
23	-	-	-
24	-	-	-
25	20A	A200 12RD/DG ◇◇◇	FUSED B(+)
26	25A	K345 16BR/RD	FUSED ASD RELAY OUTPUT
27	-	-	-
28	15A	F26 20PK/OR	FUSED IGNITION SWITCH OUTPUT (START)
		F26 20PK/OR	FUSED IGNITION SWITCH OUTPUT (START)

◇◇◇ ABS
■■ AT

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 POWER DISTRIBUTION CENTER

A/C COMPRESSOR CLUTCH RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	C13 20 LB/OR	A/C CLUTCH RELAY CONTROL
86	F1 18DB ○	FUSED IGNITION SWITCH OUTPUT (RUN-START)
86	INTERNAL ○○	FUSED ASD RELAY OUTPUT
87	C3 18DB/YL ○	A/C CLUTCH RELAY OUTPUT
87A	-	-

AUTO SHUT DOWN RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	K342 20BR/WT	ASD RELAY CONTROL
86	INTERNAL	FUSED B(+)
87	INTERNAL	ASD RELAY OUTPUT
87A	A142 14DG/OR	-

BLOWER MOTOR RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	Z932 20BK	GROUND
86	F20 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN)
87	A111 12 DG/RD	BLOWER MOTOR RELAY OUTPUT
87A	-	-

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

POWER DISTRIBUTION CENTER

**CABIN
HEATER
RELAY
(DIESEL)**

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	K132 20DB/LB	CABIN HEATER RELAY CONTROL
86	INTERNAL	FUSED ASD RELAY OUTPUT
87	A119 18RD/OR	CABIN HEATER RELAY OUTPUT
87A	-	-

**FUEL
HEATER
RELAY
(DIESEL)**

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	Z932 20BK	GROUND
86	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN)
87	A993 16RD	FUEL HEATER RELAY OUTPUT
87A	-	-

**FUEL
PUMP
RELAY
(GAS)**

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	K31 20BR	FUEL PUMP RELAY CONTROL
86	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
87	N1 18DG/OR	FUEL PUMP RELAY OUTPUT
87A	-	-

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

POWER DISTRIBUTION CENTER

HIGH SPEED RADIATOR FAN RELAY (GAS)

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	N112 20DB/OR	HIGH SPEED RAD FAN RELAY CONTROL
86	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
87	N24 12 DG/DB	HIGH SPEED RAD FAN RELAY OUTPUT
87A	-	-

LOW SPEED RADIATOR FAN RELAY (GAS)

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	N201 20DB/LG	LOW SPEED RAD FAN RELAY CONTROL
86	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
87	N23 12DB/LG	LOW SPEED RAD FAN RELAY OUTPUT
87A	-	-

STARTER MOTOR RELAY

CAVITY	CIRCUIT	FUNCTION
30	A916 12RD	FUSED B(+)
85	T752 20DG/OR	ENGINE STARTER MOTOR RELAY CONTROL
86	INTERNAL	FUSED IGNITION SWITCH OUTPUT (START)
87	T750 12 YL/GY	STARTER MOTOR RELAY OUTPUT
87A	-	-

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

POWER DISTRIBUTION CENTER

TRANSMISSION CONTROL RELAY (A/T)

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	Z932 20BK	GROUND
86	T515 20YL/DB	TRANSMISSION CONTROL RELAY CONTROL
87	T16 16YL/OR	TRANSMISSION CONTROL RELAY OUTPUT
87A	-	-

WIPER HIGH/LOW RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FRONT WIPER ON/OFF RELAY OUTPUT
85	W2 20BR/LG	FRONT WIPER HIGH/LOW RELAY CONTROL
86	A5 16 RD/VT	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
87	W4 16 BR/OR	FRONT WIPER HIGH/LOW RELAY HIGH SPEED OUTPUT
87A	W3 16BR/WT	FRONT WIPER HIGH/LOW RELAY LOW SPEED OUTPUT

WIPER ON/OFF RELAY

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FRONT WIPER ON/OFF RELAY OUTPUT
85	W6 20BR/LB	FRONT WIPER ON/OFF RELAY CONTROL
86	A5 16RD/VT	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
87	A5 16RD/VT	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
87A	W7 16BR/GY	FRONT WIPER PARK SWITCH SENSE

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

PIN-OUT ENGINE CONTROL MODULE - CI

CAV	CIRCUIT	FUNCTION
1	K613 16GY/BR	FUEL INJECTOR NO. 1 LOW-SIDE CONTROL
2	K612 16YL/BR	FUEL INJECTOR NO. 2 LOW-SIDE CONTROL
3	-	-
4	K369 16BR/OR	FUEL PRESSURE SOLENOID SUPPLY
5	-	-
6	-	-
7	-	-
8	K156 20BR/YL	FUEL TEMPERATURE SENSOR SIGNAL
9	-	-
10	-	-
11	T10 20DG/LG (A/T)	TORQUE MANAGEMENT REQUEST SENSE
12	-	-
13	-	-
14	K944 20BR/GY	CAMSHAFT POSITION SENSOR GROUND
15	-	-
16	-	-
17	-	-
18	-	-
19	-	-
20	-	-
21	-	-
22	-	-
23	-	-
24	-	-
25	K611 16OR/BR	FUEL INJECTOR NO. 1 LOW-SIDE CONTROL
26	K614 16WT/BR	FUEL INJECTOR NO. 4 LOW-SIDE CONTROL
27	-	-
28	K366 16BR/LG	FUEL QUANTITY SOLENOID SUPPLY
29	-	-
30	V37 20VT	S/C SWITCH SIGNAL NO. 1
31	G31 20VT/OR	AAT SIGNAL
32	K960 20BR/LB	INLET PRESSURE SENSOR GROUND
33	-	-
34	K21 20BR/WT	IAT SENSOR SIGNAL
35	-	-

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

PIN-OUT ENGINE CONTROL MODULE - C1

36	K668 20BR	INLET PRESSURE SENSOR 5 VOLT SUPPLY
37	F856 20YL/PK	CAMSHAFT POSITION SENSOR 5 VOLT SUPPLY
38	K44 20DB/GY	CAMSHAFT POSITION SENSOR SIGNAL
39	-	-
40	-	-
41	-	-
42	-	-
43	-	-
44	-	-
45	K132 20DB/LB	CABIN HEATER RELAY CONTROL
46	-	-
47	-	-
48	-	-
49	K12 16BR/DB	FUEL INJECTOR NO. 2 HIGH-SIDE CONTROL
50	-	-
51	K14 16BR/TN	FUEL INJECTOR NO. 4 HIGH-SIDE CONTROL
52	K370 16BR	FUEL PRESSURE SOLENOID CONTROL
53	-	-
54	V38 20VT/OR	S/C SWITCH SIGNAL NO. 2
55	-	-
56	-	-
57	K2 20VT/OR	ECT SENSOR SIGNAL
58	K68 20BR/LG	INLET PRESSURE SENSOR SIGNAL
59	K181 20BR/YL	FUEL PRESSURE SENSOR SIGNAL
60	K856 20BR/YL	BOOST PRESSURE SENSOR 5 VOLT SUPPLY
61	K957 20BR/OR	MASS AIR FLOW SENSOR GROUND
62	-	-
63	K37 20BR/OR	BOOST PRESSURE SENSOR SIGNAL
64	K811 20BR/OR	MASS AIR FLOW SENSOR 5 VOLT SUPPLY
65	K900 20DB/DG	SENSOR GROUND
66	-	-
67	-	-
68	K315 20BR/GY	EGR AIR FLOW CONTROL VALVE CONTROL
69	-	-
70	-	-
71	N112 20DB/OR	HIGH SPEED RAD FAN RELAY CONTROL
72	-	-

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

PIN-OUT ENGINE CONTROL MODULE - C1

73	K13 16BR/LB	FUEL INJECTOR NO. 3 HIGH-SIDE CONTROL
74	K11 16BR/YL	FUEL INJECTOR NO. 1 HIGH-SIDE CONTROL
75	-	-
76	K646 16BR/YL	FUEL QUANTITY SOLENOID CONTROL
77	-	-
78	-	-
79	T26 20DG/OR	CLUTCH UPSTOP SWITCH SIGNAL
80	-	-
81	-	-
82	K77 20BR/WT	TRANSFER CASE POSITION SENSOR INPUT
83	K656 20GY/BR	SENSOR GROUND
84	K359 20YL/BR	FUEL PRESSURE SENSOR GROUND
85	K157 20BR/OR	MASS AIR FLOW SENSOR 5 VOLT SUPPLY
86	K350 20BR/YL	FUEL PRESSURE SENSOR 5 VOLT SUPPLY
87	K853 20DB/BR	CRANKSHAFT POSITION SENSOR SIGNAL NO. 2
88	K3 20BR/LB	CRANKSHAFT POSITION SENSOR SIGNAL NO. 1
89	-	-
90	K35 20DB/VT	EGR SOLENOID CONTROL
91	N201 20DB/LG	LOW SPEED RAD FAN RELAY CONTROL
92	N117 20DB/WT	VACUUM RESERVOIR SOLENOID CONTROL
93	X635 20BR/WT	BOOST PRESSURE SOLENOID CONTROL
94	-	-
95	-	-
96	-	-

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

PIN-OUT ENGINE CONTROL MODULE - C2


ENGINE CONTROL MODULE C2 (DIESEL) - 58 WAY	CIRCUIT	FUNCTION
CAV		
1	K347 14BR/PK	FUSED ASD RELAY OUTPUT
2	Z131 14BK/DG	GROUND
3	K347 14BR/PK	FUSED ASD RELAY OUTPUT
4	Z131 14BK/DG	GROUND
5	K345 14BR/RD	FUSED ASD RELAY OUTPUT
6	Z131 14BK/DG	GROUND
7	-	-
8	C20 20DB/YL	A/C SWITCH SENSE
9	-	-
10	-	-
11	-	-
12	-	-
13	K29 20WT/BR	ACCELERATOR PEDAL POSITION SENSOR SIGNAL 2
14	K400 20BR/VT	ACCELERATOR PEDAL POSITION SENSOR GROUND 2
15	-	-
16	-	-
17	T41 20YL/DB (A/T)	TRS T41 SENSE (P/N)
17	T141 20YL/OR (M/T)	CLUTCH INTERLOCK SWITCH SIGNAL
18	K244 20BR/WT (A/T)	ENGINE RPM SIGNAL
19	F1 20PK/WT	FUSED IGNITION SWITCH OUTPUT (RUN-START)
20	-	-
21	-	-
22	F26 20PK/OR	FUSED IGNITION SWITCH OUTPUT (START)
23	-	-
24	K852 20BR/VT	ACCELERATOR PEDAL POSITION SENSOR 5 VOLT SUPPLY 1
25	K23 20BR/WT	ACCELERATOR PEDAL POSITION SENSOR SIGNAL 1

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

PIN-OUT ENGINE CONTROL MODULE - C2


26	K167 20BR/YL	ACCELERATOR PEDAL POSITION SENSOR GROUND 1
27	-	-
28	-	-
29	K854 20VT/BR	ACCELERATOR PEDAL POSITION SENSOR 5 VOLT SUPPLY 2
30	-	-
31	D21 20WT/GY	SCI TRANSMIT (ECM)
32	L50 18WT/TN	PRIMARY BRAKE SWITCH SIGNAL
33	-	-
34	B15 20DG/WT	SECONDARY BRAKE SWITCH SIGNAL
35	-	-
36	-	-
37	-	-
38	-	-
39	-	-
40	C13 20LB/OR	A/C CLUTCH RELAY CONTROL
41	-	-
42	-	-
43	D330 20WT/BR	GLOW PLUG MODULE SIGNAL
44	K342 20BR/WT	ASD RELAY CONTROL
45	K391 20BR/YL	FUEL PUMP RELAY CONTROL
46	K330 20LB/BR	GLOW PLUG MODULE CONTROL
47	-	-
48	-	-
49	-	-
50	-	-
51	-	-
52	-	-
53	D65 20WT/LG	CAN C BUS (+)
54	D64 20WT/LB	CAN C BUS (-)
55	-	-
56	-	-
57	-	-
58	T752 20DG/OR	ENGINE STARTER MOTOR RELAY CONTROL

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 COOLING FANS

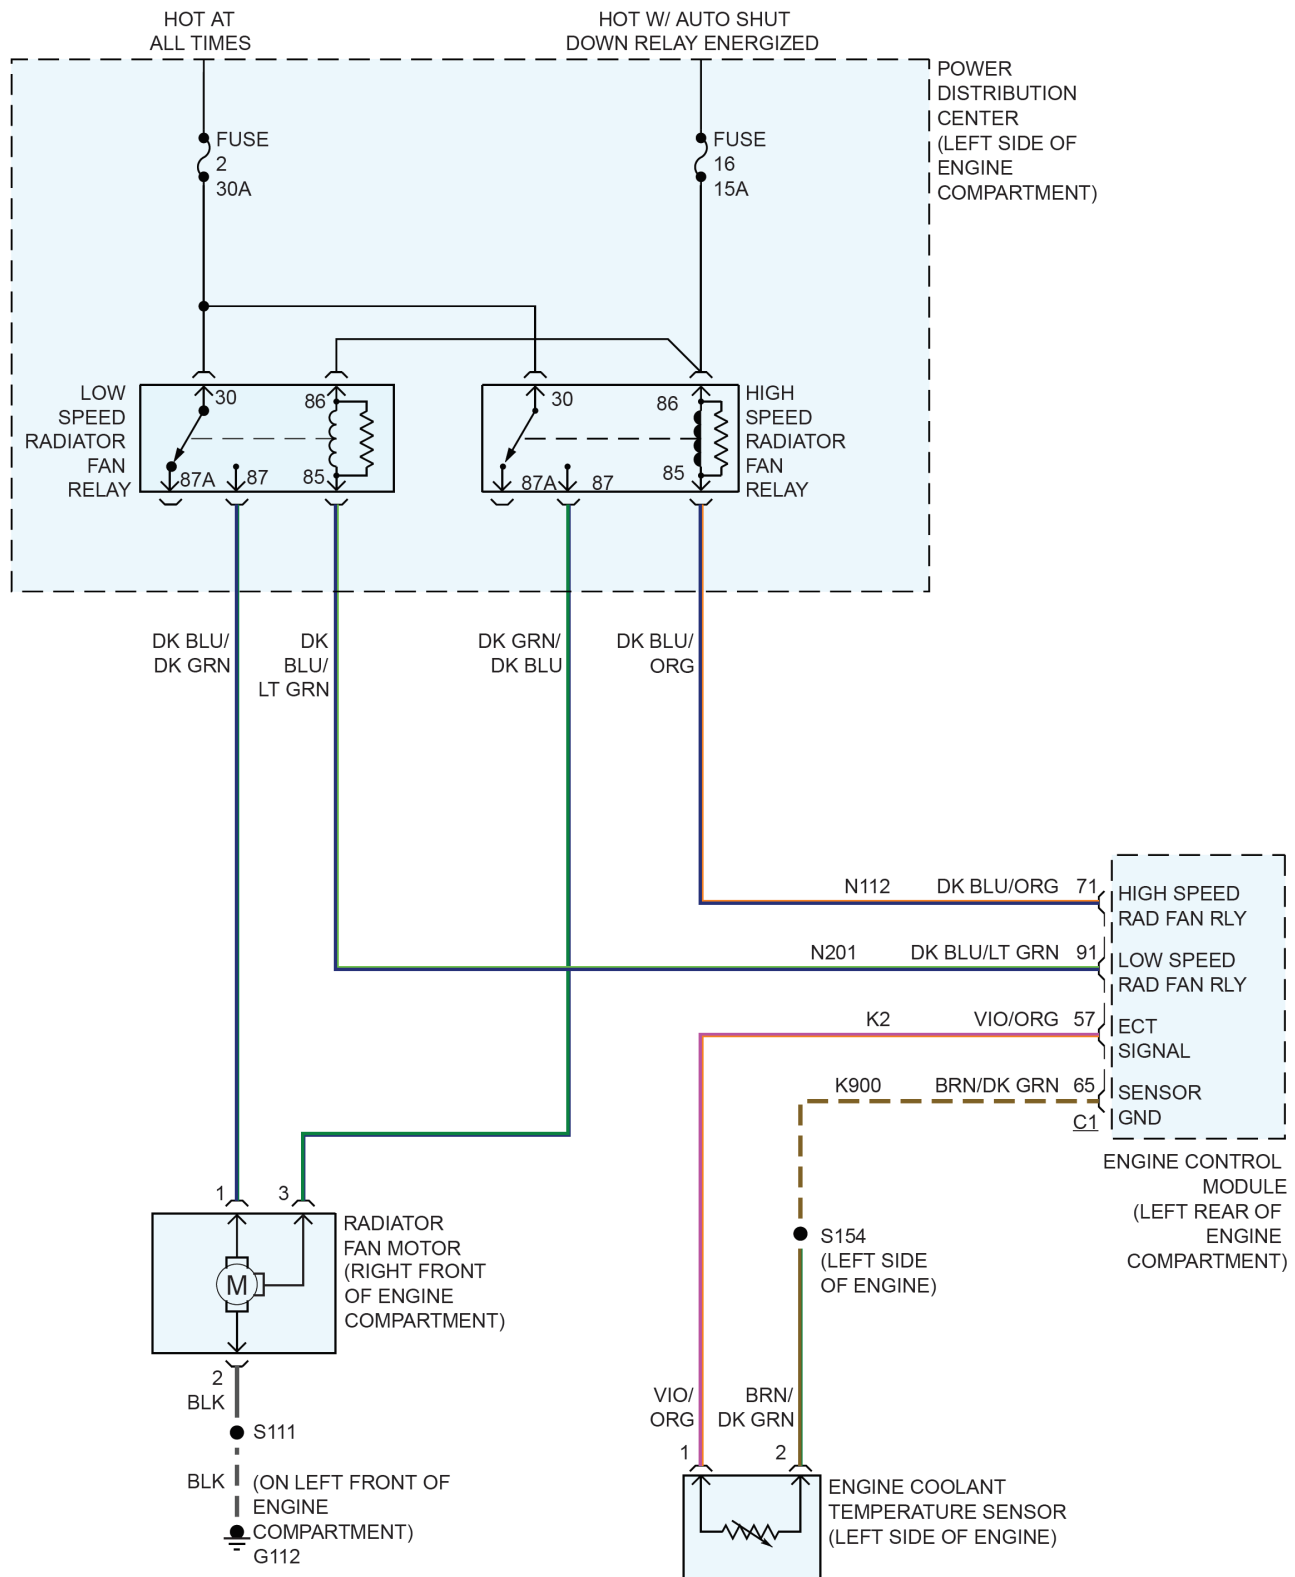


198323

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 CRUISE CONTROL

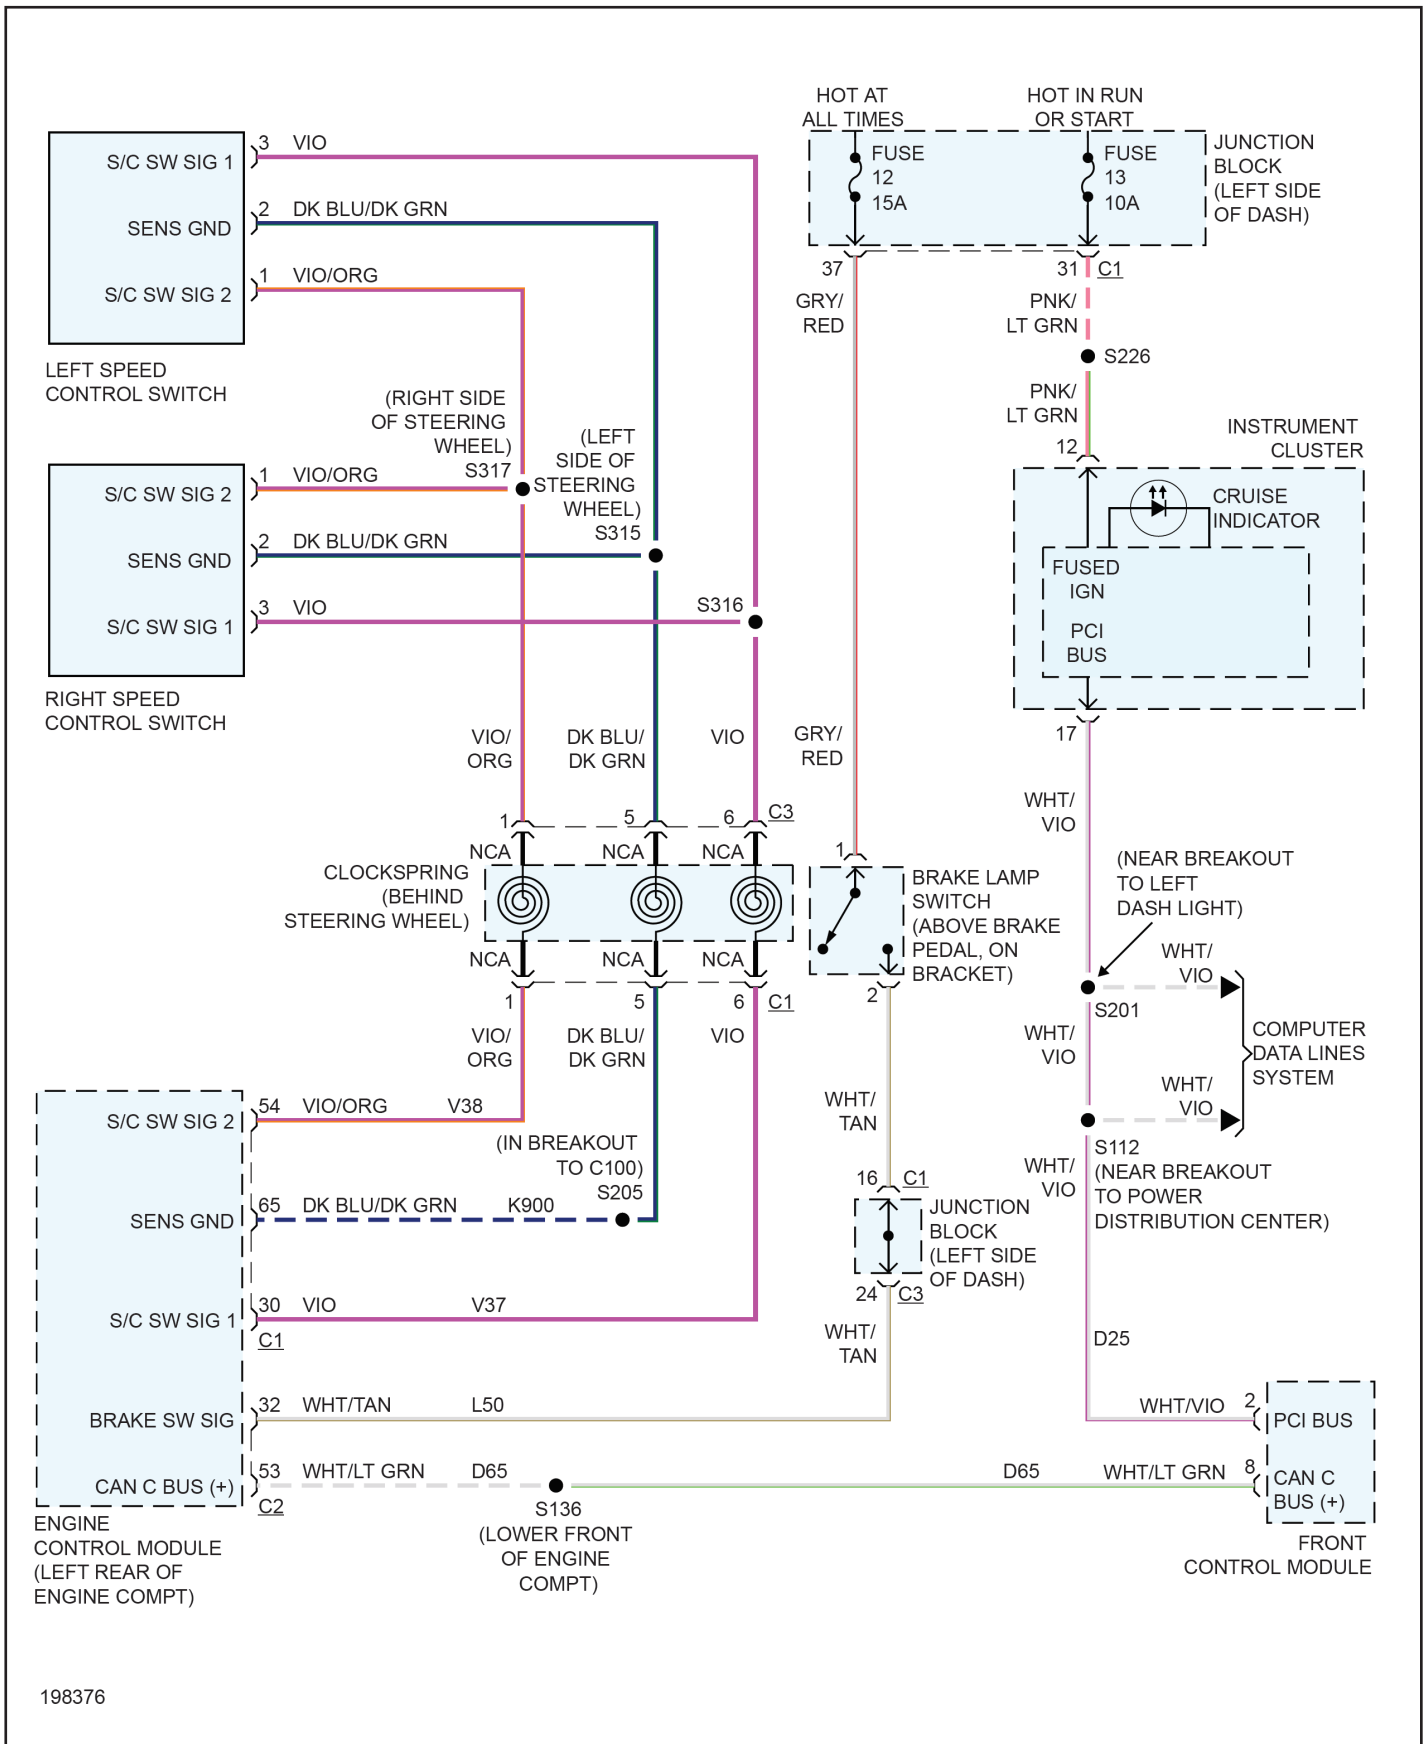


198376

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 DEFOGGER

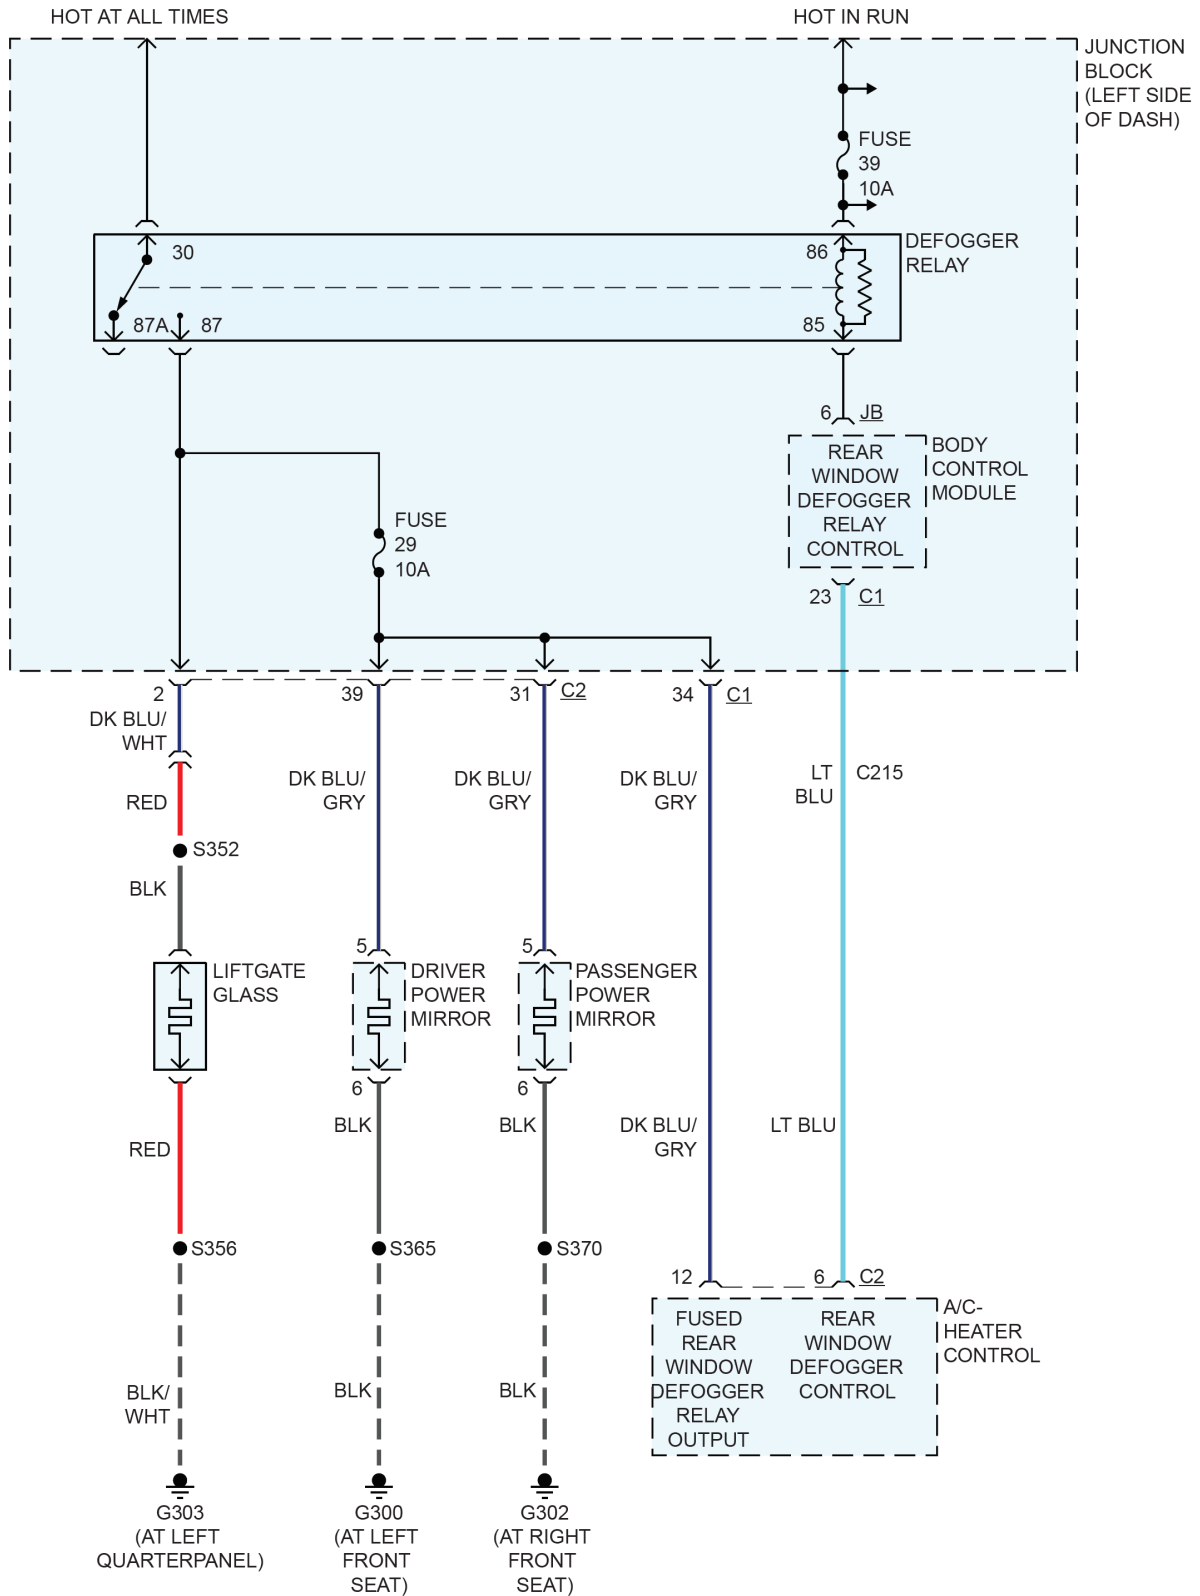


2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 DOOR LOCKS

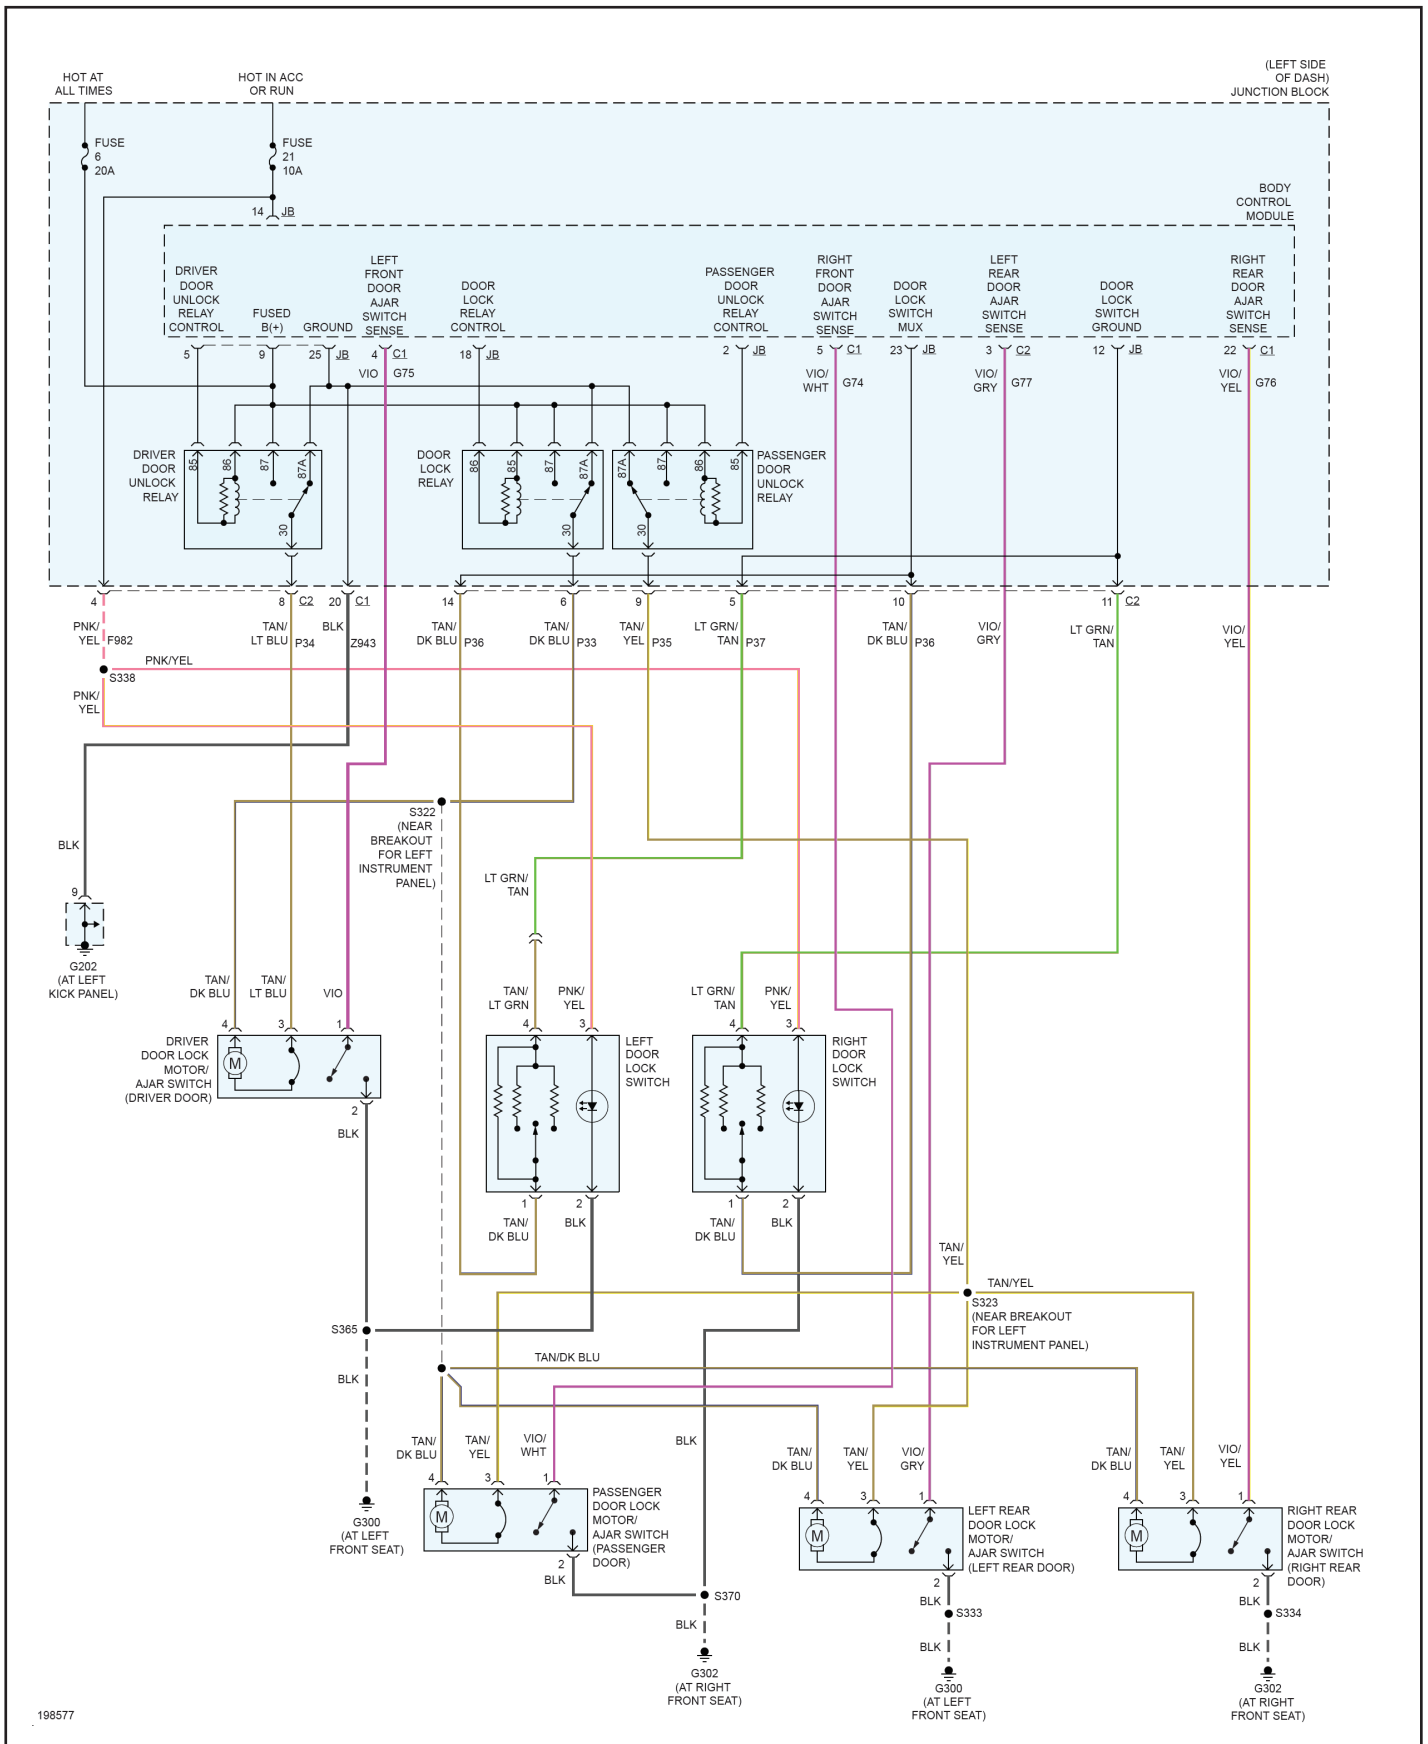


198577

PAG 55
www.diagramaselectricos.net

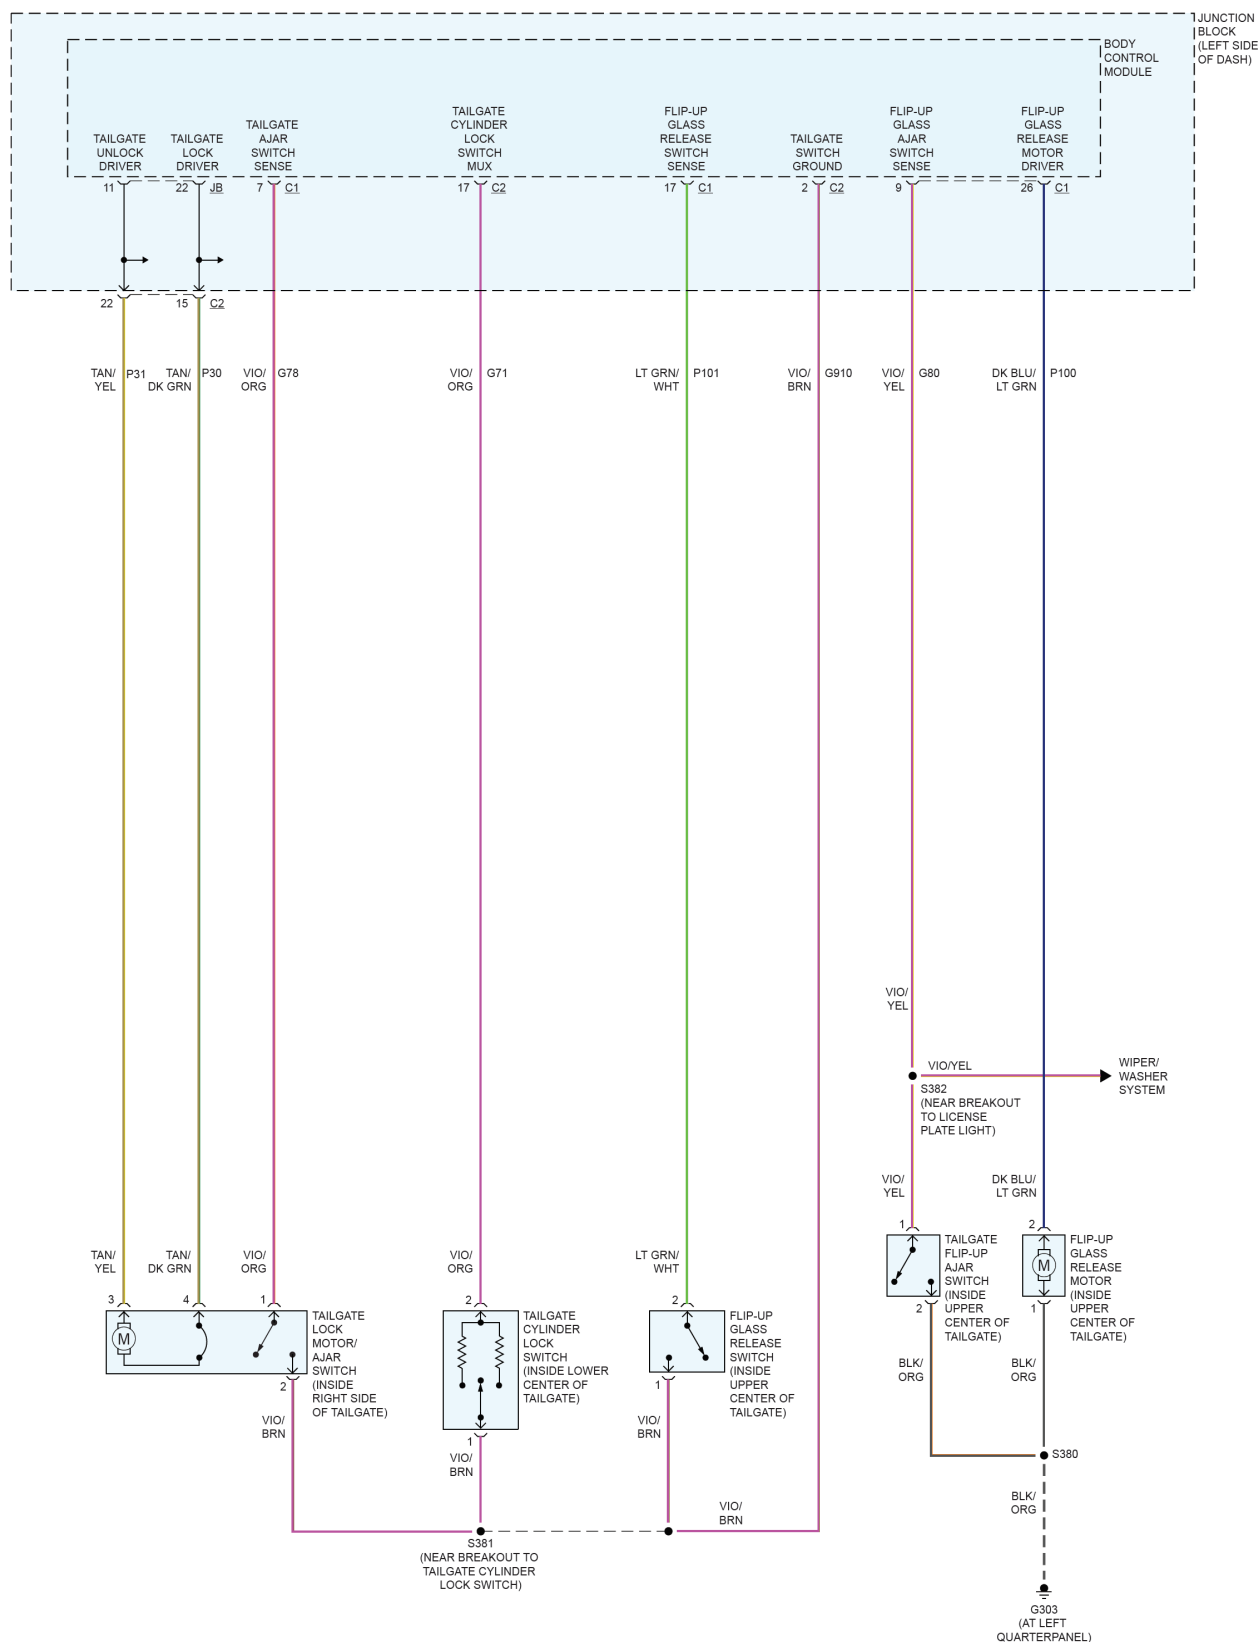


2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 HORNS

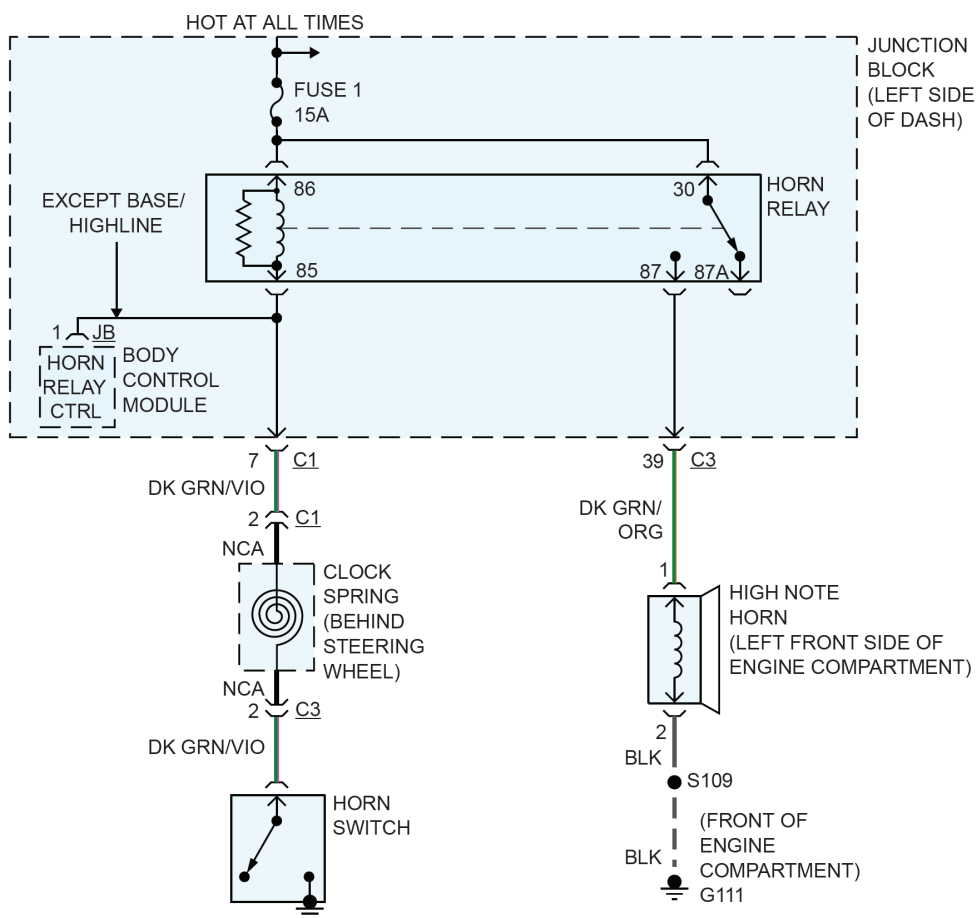

199559

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5 POWER TOPS

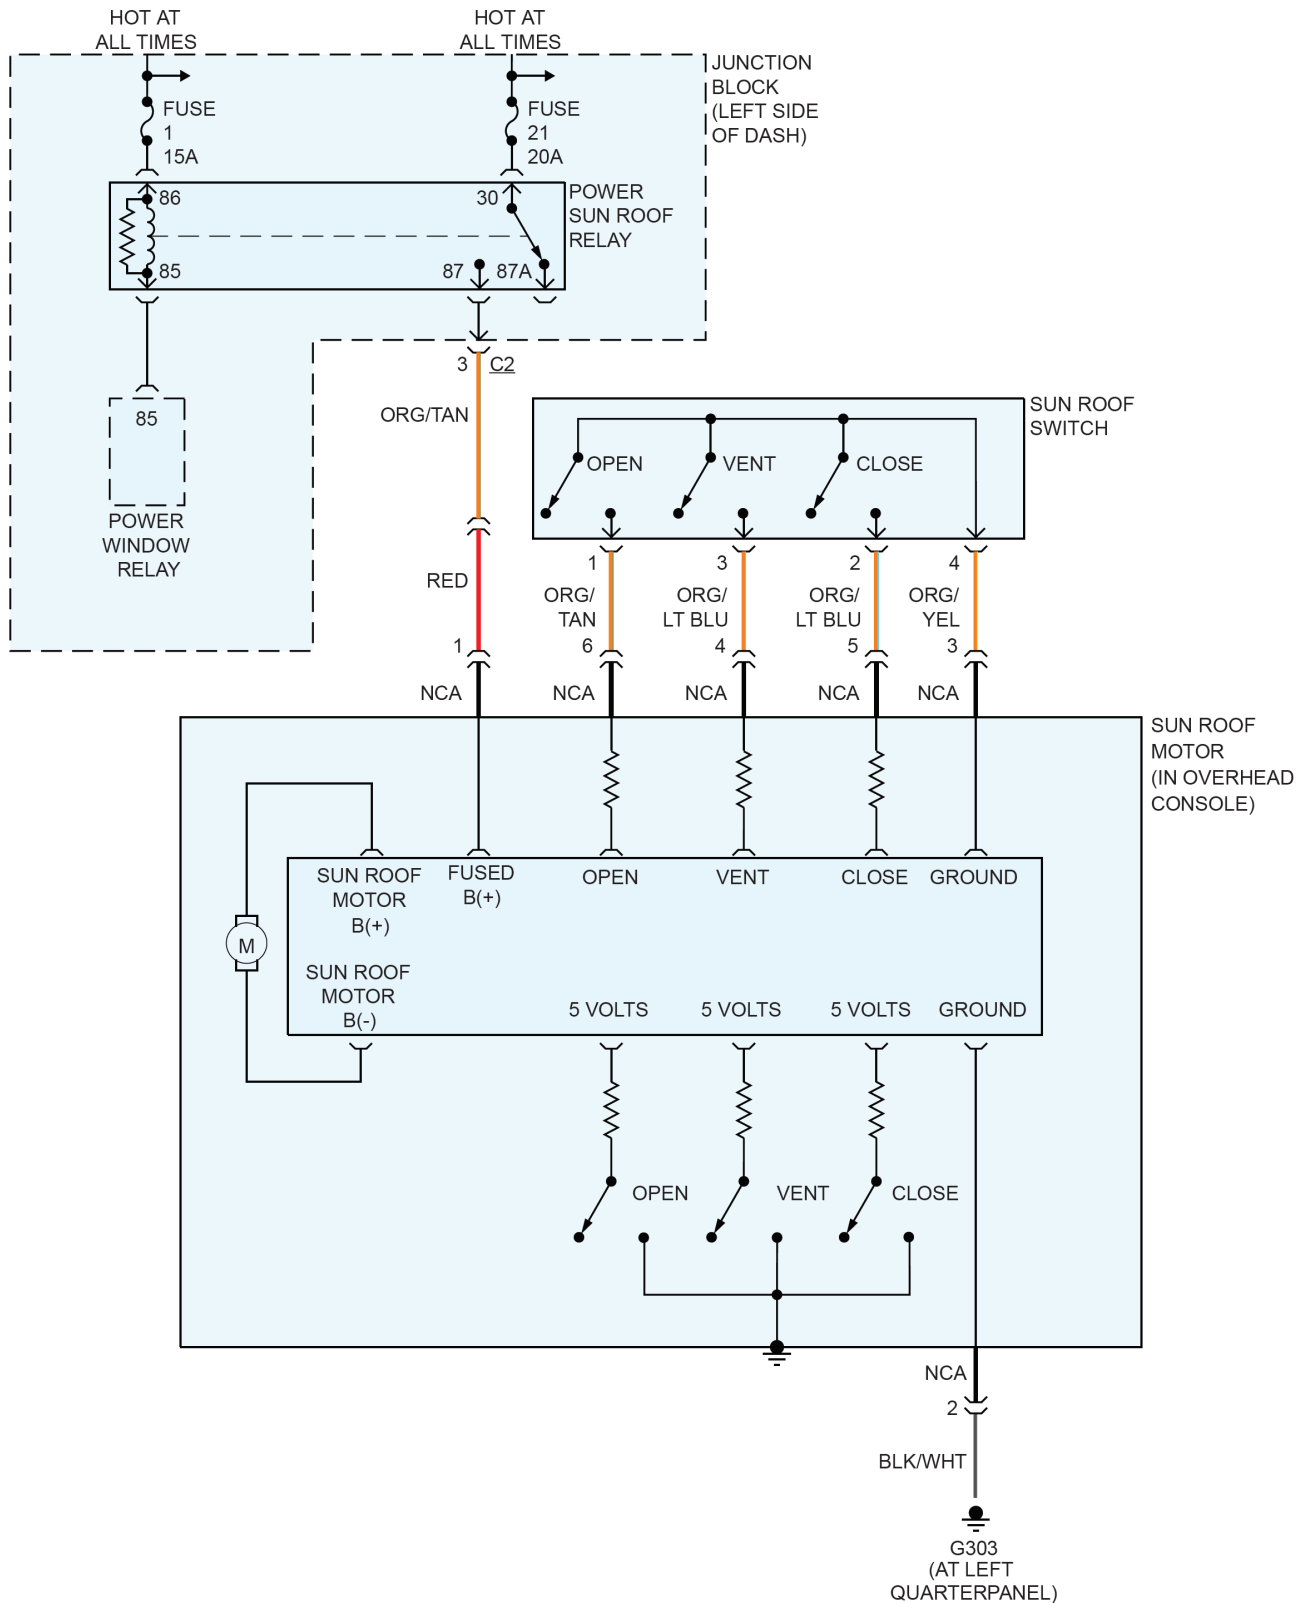

198659

FUEL INJECTOR



2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

GLOSSARY OF TERMS

MODELOS DE AUTOS

CC: DESCAPOTABLE O CONVERTIBLE COUPE

GL: GRAN LUJO

GLS: GRAN LUJO SÚPER

GLX: GRAN LUJO EXTRA

GT: GRAND TOURING O GRAN TURISMO

GTI: GRAN TURISMO DE INYECCION

GTS: GRAN TURISMO DEPORTIVO

GTX: GRAN TURISMO EXCLUSIVO

ST: TECNOLOGÍAS DEPORTIVA

SS: MODELO SÚPER DEPORTIVO

MÓDULO DE CONTROL

ABS: SISTEMA ANTIBLOQUEO DE FRENOS

BCM: MÓDULO DE CONTROL DEL CUERPO

ECM: MÓDULO DE CONTROL DEL MOTOR

ECU: UNIDAD DE CONTROL DEL MOTOR

ESP: CONTROL ELECTRÓNICO DE ESTABILIDAD

PCM: MÓDULO DE CONTROL DEL TREN DE POTENCIA

PIM: MÓDULO DE INTERFAZ DEL TREN MOTRIZ

SRS: SISTEMA DE SEGURIDAD SUPLEMENTARIO

TCM: MÓDULO DE CONTROL DE LA TRANSMISIÓN

VCM: MÓDULO DE CONTROL DEL VEHICULO

FICM: MÓDULO DE CONTROL DEL INYECTOR DE COMBUSTIBLE

MOTOR

OHC: ÁRBOL DE LEVAS EN CULATA

SOCH: UN SOLO ÁRBOL DE LEVAS

DOCH: DOBLE ÁRBOL DE LEVAS

OHV: MOTOR DE 4 TIEMPOS DE VÁLVULAS EN LA CABEZA

SV: MOTOR DE 4 TIEMPOS DE VÁLVULAS LATERALES

SENSORES

CKP: SENSOR DE POSICIÓN DEL CIGUEÑAL

CMP: SENSOR DE POSICIÓN DE ÁRBOL DE LEVAS

ECT: SENSOR DE TEMPERATURA DEL REFRIGERANTE

EGT: SENSOR DE TEMPERATURA DEL GAS DE ESCAPE

IAT: SENSOR DE TEMPERATURA DE AIRE DE ENTRADA

KS: SENSOR DE DETONACIÓN

MAF: SENSOR DE FLUJO DE MASA DE AIRE

MAP: SENSOR DE PRESIÓN ABSOLUTA DEL MULTIPLE DE ADMISIÓN

O2: SENSOR DE OXYGENO

OPS: SENSOR DE PRESIÓN DE ACEITE

TPS: SENSOR DE POSICIÓN DEL ACELERAODR

TRS: SENSOR DE RANGO DE LA TRANSMISION

TSS: SENSOR DE VELOCIDAD DE LA TRANSMISIÓN

VSS: SENSOR DE VELOCIDAD DEL VEHÍCULO

2005 JEEP LIBERTY 4WD 2.8L 4 Cil DSL TURBO VIN 5

GLOSSARY OF TERMS

SISTEMA DE TRACCIÓN

2WD: SISTEMA DE TRACCIÓN EN 2 RUEDAS

4WD: TRACCIÓN 4X4 CONECTABLE

AWD: TRACCIÓN EN LAS 4 RUEDAS PERMANENTE

FWD: TRACCIÓN DELANTERA

RWD: TRACCIÓN TRASERA

4X4: TRACCIÓN EN LAS 4 RUEDAS

ASR: SISTEMA DE CONTROL DE TRACCIÓN

QUATTRO: TRACCIÓN PERMANENTE A LAS CUATRO RUEDAS (TERMINO COMUNMENTE USADO EN AUTOS AUDI)

SISTEMAS

A/C: AIRE ACONDICIONADO

AC: CORRIENTE ALTERNA

EGR: RECIRCULACIÓN DE GASES DE ESCAPE

EVAP: SISTEMA DE CONTROL DE EMISIONES EVAPORATIVAS

VVT: SISTEMA DE DISTRIBUCIÓN VARIABLE

SISTEMA DE INYECCIÓN

COMMON-RAIL: SISTEMA ELECTRÓNICO DE INYECCIÓN DE COMBUSTIBLE PARA MOTORES DIESEL

HPI: MOTORES DE GASOLINA DE INYECCIÓN DIRECTA

JTD: MOTORES DIÉSEL DE INYECCIÓN DIRECTA CON "COMMO RAIL"

EFI: INYECCIÓN ELECTRÓNICA DE GASOLINA

TSI: INYECCIÓN ESTRATIFICADA CON TURBOCARGADOR (MOTORES A GASOLINA)

TD: MOTORES TURBO DIÉSEL

TDI: MOTOR TURBO DIÉSEL CON INYECCIÓN DIRECTA (TIPO DE INYECCIÓN COMUNMENTE USADA POR VOLKSWAGEN)

FSI: INYECCIÓN ESTRATIFICADA DE GASOLINA

TFSI: INYECCIÓN ESTRATIFICADA DE GASOLINA CON TURBO

HDI: INYECCIÓN DIÉSEL DE ALTA PRESIÓN

SISTEMA DE TRANSMISIÓN

A/T: TRANSMISIÓN AUTOMÁTICA

M/T: TRANSMISIÓN MANUAL

CVT: TRANSMISIÓN CONTINUAMENTE VARIABLE

SISTEMA DE CILINDROS Y VÁLVULAS

L4: MOTOR DE 4 CILINDROS EN LINEA

L6: MOTOR DE 6 CILINDROS EN LINEA

V2: MOTOR DE 2 CILINDROS EN POSICIÓN V

V6: MOTOR 6 CILINDROS EN POSICIÓN V

V8: MOTOR DE 8 CILINDROS EN POSICIÓN V

V10: MOTOR DE 10 CILINDROS EN POSICIÓN V

V12: MOTOR DE 12 CILINDROS EN POSICIÓN V

20VT: 20 VÁLVULAS TURBO

CVT: SINCRONIZACIÓN DE VALVULAS CONTINUAMENTE VARIABLE