

INTRODUCTION

How to Use This Manual

This manual contains information for the 1996 – 1998 CIVIC. It is divided into 24 sections. The first page of each section is marked with a black tab that lines up with its corresponding thumb index tab on this page and the back cover. You can quickly find the first page of each section without looking through a full table of contents. The symbols printed at the top corner of each page can also be used as a quick reference system.

Each section includes:

1. A table of contents, or an exploded view index showing:
 - Parts disassembly sequence.
 - Bolt torques and thread sizes.
 - Page references to descriptions in text.
2. Disassembly/assembly procedures and tools.
3. Inspection.
4. Testing/troubleshooting.
5. Repair.
6. Adjustments.

Special Information

▲ WARNING Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTICE

The purpose of these messages is to help prevent damage to the vehicle, other property, or the environment.

NOTE: Gives helpful information.

CAUTION: Detailed descriptions of *standard workshop* procedures, safety principles and service operations are not included. Please note that this manual contains warnings and cautions against some specific service methods which could cause **PERSONAL INJURY**, damage a vehicle or make it unsafe. Please understand that these warnings cannot cover all conceivable ways in which service, whether or not recommended by HONDA, might be done, or of the possible hazardous consequences of every conceivable way, nor could HONDA investigate all such ways. Anyone using service procedures or tools, whether or not recommended by HONDA, *must satisfy himself thoroughly* that neither personal safety nor vehicle safety will be jeopardized.

All information contained in this manual is based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice. No part of this publication may be reproduced, stored in retrieval system, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. This includes text, figures and tables.

First Edition 9/97 1432 pages
All Right Reserved

HONDA MOTOR CO., LTD.
Service Publication Office

As sections with * include SRS components;
special precautions are required when servicing.

General Info



Special Tools



Specifications

specs

Maintenance



Engine



Cooling



Fuel and Emissions



*Transaxle



*Steering



Suspension




*Brakes
(Including ABS)



*Body



*Heater and
Air Conditioning



*Electrical



*SRS





General Information

Chassis and Paint Codes	1-2
Identification Number Locations	1-20
Warning/Caution Label Locations	1-21
Under-hood Emissions	
Control Label	1-25
Lift and Support Points	
Lift and Safety Stands	1-27
Floor Jack	1-28
Towing	1-29

Chassis and Paint Codes

U.S. 1996 Model (2-door Hatchback)

Vehicle Identification Number

2HG EJ6 32 *TH 1 00001

Manufacturer, Make and Type of Vehicle

2HG: HONDA OF CANADA MFG., INC.
HONDA Passenger vehicle

Line, Body and Engine Type

EJ6: CIVIC 3-door/D16Y7

Body Type and Transmission Type

3: Hatchback/5-speed Manual
4: Hatchback/4-speed Automatic

Vehicle Grade

2: CX
3: CX with A/C
4: DX
5: DX with A/C
6: DX
7: DX with A/C

Check Digit

Model Year

T: 1996

Factory Code

H: Alliston Plant, Ontario, Canada

Destinations

Serial Number

Engine Number

D16Y7 - 1500001

Engine Type

D16Y7: 1600 SOHC 16-valves
Sequential Multiport
Fuel-injected Engine

Serial Number

Transmission Number

A4RA - 5000001

Transmission Type

A4RA: 4-speed Automatic Transmission
S40 : 5-speed Manual Transmission


Serial Number

A4RA: 5000001~
S40 : 1000001~

Paint Code


Paint Code	Color
GY-16P	Midori Green Pearl
NH-503P	Granada Black Pearl
NH-583M	New Vogue Silver Metallic
R-97	Roma Red

Vehicle Identification Number and Federal Motor Vehicle Safety Standard Certification

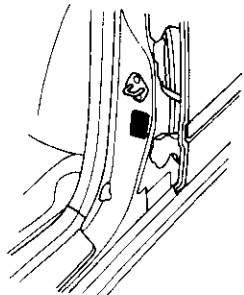

Paint Code

COLOR
GY-16P

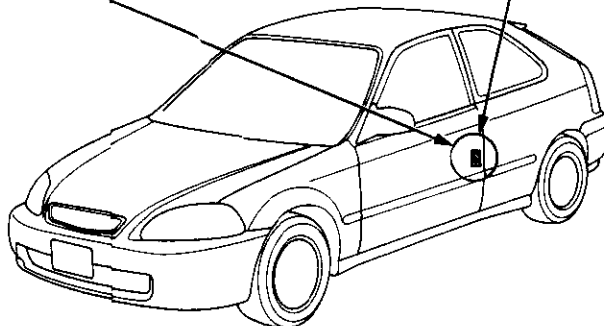



U.S. 1996 Model (4-door Sedan)

Vehicle Identification Number JHM EJ6 5 2 * T S 000001

Manufacturer, Make and Type of Vehicle
 JHM: HONDA MOTOR CO., LTD.
 HONDA Passenger vehicle
 1HG: HONDA OF AMERICA MFG., INC.
 HONDA Passenger vehicle
 2HG: HONDA OF CANADA MFG., INC.
 HONDA Passenger vehicle

Line, Body and Engine Type
 EJ6: CIVIC 4-door/D16Y7
 EJ8: CIVIC 4-door/D16Y8

Body Type and Transmission Type
 5: Sedan/5-speed Manual
 6: Sedan/4-speed Automatic

Vehicle Grade
 2: DX
 3: DX with A/C
 4: DX with ABS, EX
 5: DX with ABS and A/C
 6: LX
 7: LX with A/C
 8: LX with ABS
 9: LX with ABS and A/C

Check Digit _____

Model Year _____
 T: 1996

Factory Code _____
 L: East Liberty, Ohio Plant, U.S.A.
 S: Suzuka Plant, Mie Prefecture, Japan
 H: Alliston Plant, Ontario, Canada

Serial Number _____

Engine Number D16Y7 - 1300001

Engine Type
 D16Y7: 1600 SOHC 16-valves Sequential Multiport Fuel-injected Engine
 D16Y8: 1600 SOHC VTEC 16-valves Sequential Multiport Fuel-injected Engine

Serial Number
 JAPAN: D16Y7, D16Y8 - 1300001~
 U.S.A : D16Y7, D16Y8 - 1500001~

Transmission Number A4RA - 5000001


Transmission Type
 A4RA: 4-speed Automatic Transmission
 S40 : 5-speed Manual Transmission
 S4C : 5-speed Manual Transmission

Serial Number
 A4RA (U.S.A.) : 5000001~
 S40, S4C (JAPAN): 1000001~

Paint Code

Paint Code	Color
B-73M	Cyclone Blue Metallic
G-82P	Cypress Green Pearl
NH-538	Frost White
NH-503P	Granada Black Pearl
NH-583M	New Vogue Silver Metallic
R-95P	Island Coral Pearl

Paint Code
COLOR
B-73M

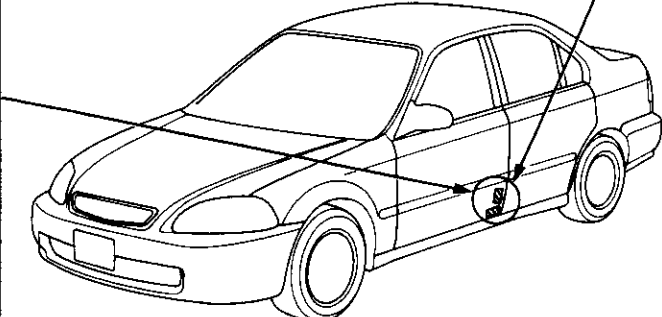

Chassis and Paint Codes

U.S. 1996 Model (2-door Coupe)

Vehicle Identification Number

1HG EJ6 12 * T L 000001

Manufacturer, Make and Type of Vehicle

1HG: HONDA OF AMERICA MFG., INC.
HONDA Passenger vehicle

Line, Body and Engine Type

EJ6: CIVIC 2-door/D16Y7
EJ7: CIVIC 2-door/D16Y5
EJ8: CIVIC 2-door/D16Y8

Body Type and Transmission Type

1: Coupe/5-speed Manual
2: Coupe/4-speed Automatic, CVT

Vehicle Grade

2: DX, HX
3: DX with ABS, HX with ABS
4: DX with A/C, HX with A/C, EX
5: DX with ABS and A/C, HX with ABS and A/C EX with ABS

Check Digit

Model Year

T: 1996

Factory Code

L: East Liberty, Ohio Plant, U.S.A.

Serial Number

Engine Number

D16Y5 - 1300001

Engine Type

D16Y5: 1600 SOHC VTEC-E 16-valves
Sequential Multiport
Fuel-injected Engine
D16Y7: 1600 SOHC 16-valves
Sequential Multiport
Fuel-injected Engine
D16Y8: 1600 SOHC VTEC 16-valves
Sequential Multiport
Fuel-injected Engine

Serial Number

JAPAN: D16Y5 - 1300001~
U.S.A. : D16Y7, D16Y8 - 1500001~

Transmission Number

A4RA - 5000001


Transmission Type

A4RA : 4-speed Automatic Transmission
S40, S4C: 5-speed Manual Transmission
M4VA : Continuously Variable
Transmission (CVT)

Serial Number

A4RA : 5000001~
S40, S4C
M4VA: 1000001~

Vehicle Identification Number and Federal Motor Vehicle Safety Standard Certification

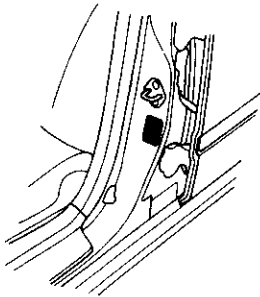


Paint Code

Paint Code	Color
G-82P	Cypress Green Pearl
NH-503P	Granada Black Pearl
NH-538	Frost White
NH-583M	New Vogue Silver Metallic
R-81	Milano Red
R-95P	Island Coral Pearl

Paint Code

**COLOR
G-82P**

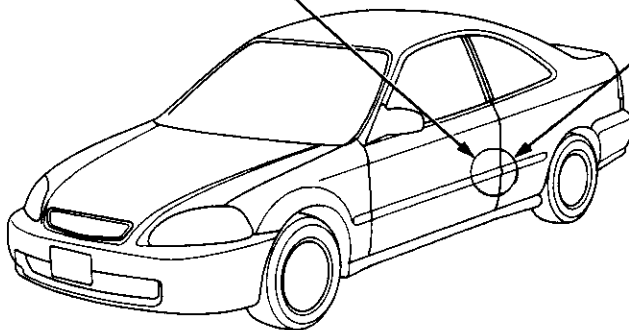



CANADA 1996 Model (2-door Hatchback)

Vehicle Identification Number
2HG EJ6 32 *TH 000001

Manufacturer, Make and Type of Vehicle
2HG: HONDA OF CANADA MFG., INC.
HONDA Passenger vehicle

Line, Body and Engine Type
EJ6: CIVIC 3-door/D16Y7

Body Type and Transmission Type
3: Hatchback/5-speed Manual
4: Hatchback/4-speed Automatic

Vehicle Grade
2: CX
3: CX-G

Check Digit

Model Year
T: 1996

Factory Code
H: Alliston Plant, Ontario, Canada

Serial Number

Engine Number
D16Y7 - 1700001

Engine Type
D16Y7: 1600 SOHC 16-valves Sequential Multiport Fuel-injected Engine

Serial Number

Transmission Number
A4RA - 5000001

Transmission Type
A4RA: 4-speed Automatic Transmission
S40 : 5-speed Manual Transmission


Serial Number
A4RA: 5000001~
S40 : 1000001~

Paint Code

Paint Code	Color
GY-16P	Midori Green Pearl
NH-503P	Granada Black Pearl
NH-583M	New Vogue Silver Metallic
R-97	Roma Red

Vehicle Identification Number and Canadian Motor Vehicle Safety Standard Certification

Paint Code
COLOR GY-16P

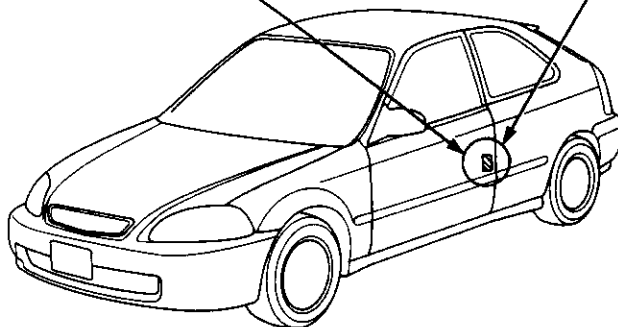

Chassis and Paint Codes

CANADA 1996 Model (4-door Sedan)

Vehicle Identification Number

1HG EJ6 53 * T L 800001

Manufacturer, Make and Type of Vehicle

1HG: HONDA OF AMERICA
MFG., INC.
HONDA Passenger
vehicle

Line, Body and Engine Type

EJ6: CIVIC 4-door/D16Y7

Body Type and Transmission Type

5: Sedan/5-speed Manual
6: Sedan/4-speed
Automatic

Vehicle Grade

3: LX
4: LX with ABS
5: LX with ABS and A/C
6: EX
7: EX with ABS

Check Digit

Model Year

T: 1996

Factory Code

L: East Liberty, Ohio Plant, U.S.A.

Serial Number

Engine Number

D16Y7 - 1700001

Engine Type

D16Y7: 1600 SOHC 16-valves
Sequential Multiport
Fuel-injected Engine

Serial Number

Transmission Number

A4RA - 5000001

Transmission Type

A4RA: 4-speed Automatic Transmission
S40 : 5-speed Manual Transmission


Serial Number

A4RA: 5000001~
S40 : 1000001~

Paint Code


Paint Code	Color
B-73M	Cyclone Blue Metallic
G-82P	Cypress Green Pearl
NH-503P	Granada Black Pearl
NH-538	Frost White
NH-583M	New Vogue Silver Metallic

Vehicle Identification Number and Canadian Motor Vehicle Safety Standard Certification

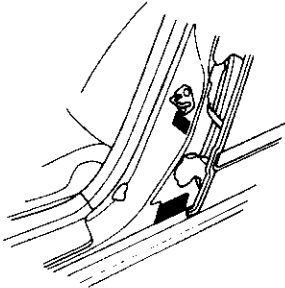

Paint Code

COLOR
B-73M

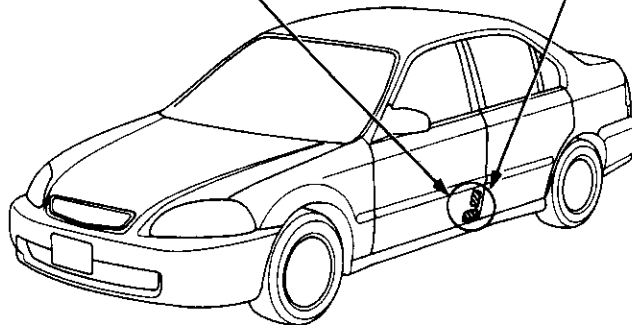



CANADA 1996 Model (2-door Coupe)

Vehicle Identification Number

1HG EJ6 12 * T L 000001

Manufacturer, Make and Type of Vehicle

1HG: HONDA OF AMERICA MFG., INC.
HONDA Passenger vehicle

Line, Body and Engine Type

EJ6: CIVIC 2-door/D16Y7
EJ8: CIVIC 2-door/D16Y8

Body Type and Transmission Type

1: Coupe/5-speed Manual
2: Coupe/4-speed Automatic

Vehicle Grade

2: DX, Si
3: Si with ABS
5: DX with ABS

Check Digit

Model Year

T: 1996

Factory Code

L: East Liberty, Ohio Plant, U.S.A.

Serial Number

Engine Number

D16Y7 - 1700001

Engine Type

D16Y7: 1600 SOHC 16-valves Sequential Multiport Fuel-injected Engine
D16Y8: 1600 SOHC VTEC 16-valves Sequential Multiport Fuel-injected Engine

Serial Number

Transmission Number

A4RA - 5000001

Transmission Type

A4RA : 4-speed Automatic Transmission
S40, S4C: 5-speed Manual Transmission


Serial Number

A4RA : 5000001~
S40, S4C: 1000001~

Paint Code


Paint Code	Color
G-82P	Cypress Green Pearl
NH-503P	Granada Black Pearl
NH-538	Frost White
NH-583M	New Vogue Silver Metallic
R-81	Milano Red
R-95P	Island Coral Pearl

Vehicle Identification Number and Canadian Motor Vehicle Safety Standard Certification

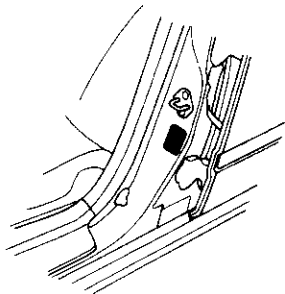

Paint Code

**COLOR
NH-538**

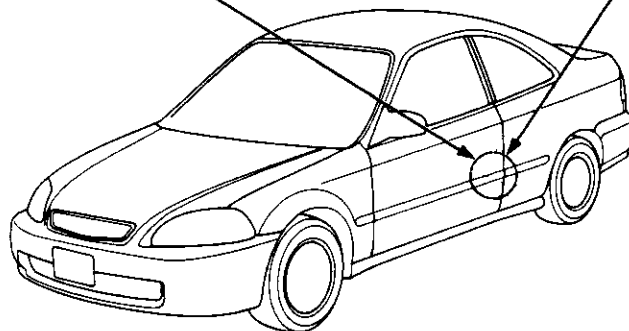

Chassis and Paint Codes

U.S. 1997 Model (2-door Hatchback)

Vehicle Identification Number

2HG EJ6 32 *VH 1 00001

Manufacturer, Make and Type of Vehicle

2HG: HONDA OF CANADA
MFG., INC.
HONDA Passenger
vehicle

Line, Body and Engine Type

EJ6: CIVIC 3-door/D16Y7

Body Type and Transmission Type

3: Hatchback/5-speed
Manual
4: Hatchback/4-speed
Automatic

Vehicle Grade

2: CX
3: CX with A/C
4: DX
5: DX with A/C
6: DX with ABS
7: DX with A/C and ABS

Check Digit

Model Year

V: 1997

Factory Code

H: Alliston Plant, Ontario, Canada

Destinations

Serial Number

Engine Number

D16Y7 - 2500001

Engine Type

D16Y7: 1600 SOHC 16-valves
Sequential Multiport
Fuel-injected Engine

Serial Number

Transmission Number

A4RA - 6000001

Transmission Type

A4RA: 4-speed Automatic Transmission
B4RA: 4-speed Automatic Transmission
S40 : 5-speed Manual Transmission


Serial Number

A4RA: 6000001~
B4RA: 6000001~
S40 : 1000001~

Paint Code


Paint Code	Color
NH-503P	Granada Black Pearl
NH-583M	New Vogue Silver Metallic
PB-74P	Dark Amethyst Pearl
R-97	Roma Red

Vehicle Identification Number and Federal Motor Vehicle Safety Standard Certification

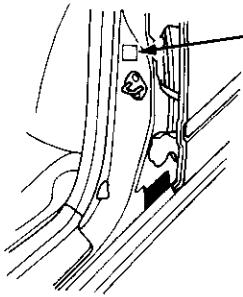

Paint Code

COLOR
NH-583M

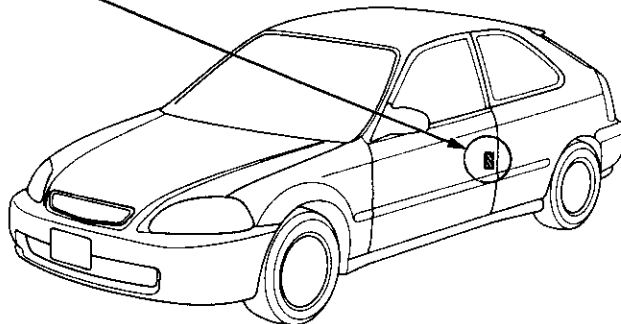



U.S. 1997 Model (4-door Sedan)

Vehicle Identification Number
 JHM EJ6 52 * V S 000001

Manufacturer, Make and Type of Vehicle
 JHM: HONDA MOTOR CO., LTD.
 HONDA Passenger vehicle
 1HG: HONDA OF AMERICA MFG., INC.
 HONDA Passenger vehicle
 2HG: HONDA OF CANADA MFG., INC.
 HONDA Passenger vehicle

Line, Body and Engine Type
 EJ6: CIVIC 4-door/D16Y7
 EJ8: CIVIC 4-door/D16Y8

Body Type and Transmission Type
 5: Sedan/5-speed Manual
 6: Sedan/4-speed Automatic

Vehicle Grade
 0: LX
 2: DX
 3: DX with A/C
 4: DX with ABS, EX
 5: DX with ABS and A/C
 7: LX with A/C
 8: LX with ABS
 9: LX with ABS and A/C

Check Digit
Model Year
 V: 1997

Factory Code
 L: East Liberty, Ohio Plant, U.S.A.
 S: Suzuka Plant, Mie Prefecture, Japan
 H: Alliston Plant, Ontario, Canada

Serial Number

Engine Number
 D16Y7 - 2300001

Engine Type
 D16Y7: 1600 SOHC 16-valves Sequential Multiport Fuel-injected Engine
 D16Y8: 1600 SOHC VTEC 16-valves Sequential Multiport Fuel-injected Engine

Serial Number
 JAPAN: D16Y7, D16Y8 - 2300001~
 U.S.A. : D16Y7, D16Y8 - 2500001~

Transmission Number
 A4RA - 6000001

Transmission Type
 A4RA : 4-speed Automatic Transmission
 B4RA : 4-speed Automatic Transmission
 M4RA : 4-speed Automatic Transmission
 S40 : 5-speed Manual Transmission


Serial Number
 A4RA (U.S.A.) : 6000001~
 B4RA (U.S.A.) : 6000001~
 M4RA (JAPAN): 2000001~
 S40 (JAPAN) : 1000001~

Paint Code

Paint Code	Color
B-73M	Cyclone Blue Metallic
G-82P	Cypress Green Pearl
NH-538	Frost White
NH-503P	Granada Black Pearl
NH-583M	New Vogue Silver Metallic
R-96P	Inza Red

Vehicle Identification Number and Federal Motor Vehicle Safety Standard Certification

Paint Code
COLOR
B-73M

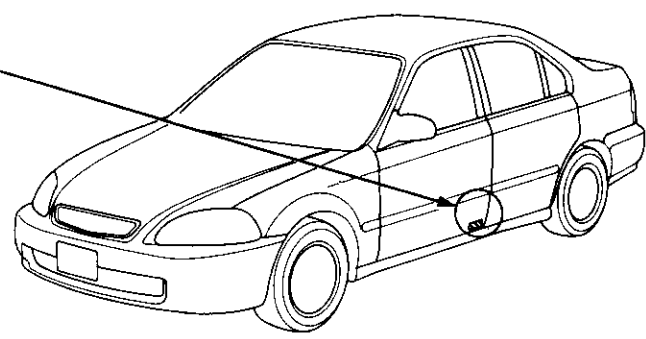

Chassis and Paint Codes

U.S. 1997 Model (2-door Coupe)

Vehicle Identification Number 1HG EJ6 14 * V L 000001

Manufacturer, Make and Type of Vehicle
 1HG: HONDA OF AMERICA MFG., INC.
 HONDA Passenger vehicle

Line, Body and Engine Type
 EJ6: CIVIC 2-door/D16Y7
 EJ7: CIVIC 2-door/D16Y5
 EJ8: CIVIC 2-door/D16Y8

Body Type and Transmission Type
 1: Coupe/5-speed Manual
 2: Coupe/4-speed Automatic, CVT

Vehicle Grade
 2: DX, HX
 3: DX with ABS, HX with ABS
 4: DX with A/C, HX with A/C, EX
 5: DX with ABS and A/C, HX with ABS and A/C, EX with ABS

Check Digit

Model Year
 V: 1997

Factory Code
 L: East Liberty, Ohio Plant, U.S.A.

Serial Number

Engine Number D16Y5 - 2300001

Engine Type
 D16Y5: 1600 SOHC VTEC-E 16-valves Sequential Multiport Fuel-injected Engine
 D16Y7: 1600 SOHC 16-valves Sequential Multiport Fuel-injected Engine
 D16Y8: 1600 SOHC VTEC 16-valves Sequential Multiport Fuel-injected Engine

Serial Number
 JAPAN: D16Y5 ~ 2300001~
 U.S.A. : D16Y7, D16Y8 ~ 2500001~

Transmission Number A4RA - 6000001

Transmission Type
 A4RA : 4-speed Automatic Transmission
 B4RA : 4-speed Automatic Transmission
 S40 : 5-speed Manual Transmission
 M4VA: Continuously Variable Transmission (CVT)


Serial Number
 A4RA : 6000001~
 B4RA : 6000001~
 S40 : 1000001~
 M4VA: 2000001~

Vehicle Identification Number and Federal Motor Vehicle Safety Standard Certification



Paint Code

Paint Code	Color
G-82P	Cypress Green Pearl
NH-503P	Granada Black Pearl
NH-538	Frost White
NH-583M	New Vogue Silver Metallic
R-81	Milano Red

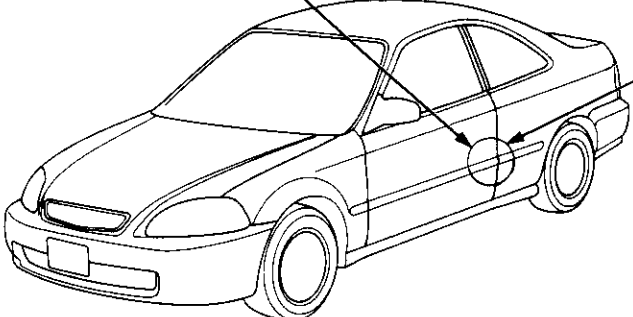

Paint Code

COLOR
G-82P



CANADA 1997 Model (2-door Hatchback)

Vehicle Identification Number 2HG EJ6 32 *VH 000001

Manufacturer, Make and Type of Vehicle
 2HG: HONDA OF CANADA MFG., INC.
 HONDA Passenger vehicle

Line, Body and Engine Type
 EJ6: CIVIC 3-door/D16Y7

Body Type and Transmission Type
 3: Hatchback/5-speed Manual
 4: Hatchback/4-speed Automatic

Vehicle Grade
 2: CX
 3: CX-G

Check Digit

Model Year
 V: 1997

Factory Code
 H: Alliston Plant, Ontario, Canada

Serial Number

Engine Number D16Y7 - 2750001

Engine Type
 D16Y7: 1600 SOHC 16-valves Sequential Multiport Fuel-injected Engine

Serial Number

Transmission Number A4RA - 6000001

Transmission Type
 A4RA: 4-speed Automatic Transmission
 B4RA: 4-speed Automatic Transmission
 S40 : 5-speed Manual Transmission

Serial Number
 A4RA: 6000001~
 B4RA: 6000001~
 S40 : 1000001~


Paint Code

Paint Code	Color
NH-503P	Granada Black Pearl
NH-583M	New Vogue Silver Metallic
PB-74P	Dark Amethyst Pearl
R-97	Roma Red

Vehicle Identification Number and Canadian Motor Vehicle Safety Standard Certification

Paint Code

COLOR NH-503P

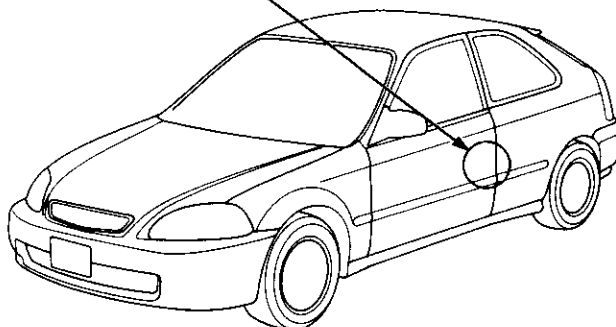

Chassis and Paint Codes

CANADA 1997 Model (4-door Sedan)

Vehicle Identification Number 1HG EJ6 53 *V L 800001

Manufacturer, Make and Type of Vehicle
 1HG: HONDA OF AMERICA MFG., INC.
 HONDA Passenger vehicle

Line, Body and Engine Type
 EJ6: CIVIC 4-door/D16Y7

Body Type and Transmission Type
 5: Sedan/5-speed Manual
 6: Sedan/4-speed Automatic

Vehicle Grade
 0: EX
 3: LX
 4: LX with ABS
 5: LX with ABS and A/C
 7: EX with ABS
 8: EX with ABS and A/C

Check Digit _____

Model Year _____
 V: 1997

Factory Code _____
 L: East Liberty, Ohio Plant, U.S.A.

Serial Number _____

Engine Number D16Y7 - 2750001

Engine Type
 D16Y7: 1600 SOHC 16-valves
 Sequential Multiport
 Fuel-injected Engine

Serial Number _____

Transmission Number A4RA - 6000001

Transmission Type
 A4RA: 4-speed Automatic Transmission
 B4RA: 4-speed Automatic Transmission
 S40 : 5-speed Manual Transmission

Serial Number _____
 A4RA: 6000001~
 B4RA: 6000001~
 S40 : 1000001~

Paint Code


Paint Code	Color
B-73M	Cyclone Blue Metallic
G-82P	Cypress Green Pearl
NH-503P	Granada Black Pearl
NH-538	Frost White
NH-583M	New Vogue Silver Metallic

Vehicle Identification Number and Canadian Motor Vehicle Safety Standard Certification



Paint Code

COLOR
B-73M

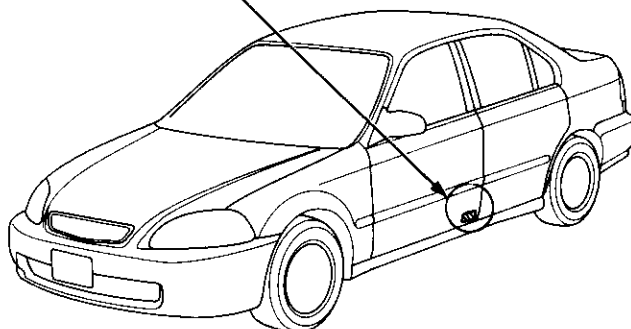



CANADA 1997 Model (2-door Coupe)

Vehicle Identification Number

1HG EJ6 12*V L 800001

Manufacturer, Make and Type of Vehicle

1HG: HONDA OF AMERICA MFG., INC.
HONDA Passenger vehicle

Line, Body and Engine Type

EJ6: CIVIC 2-door/D16Y7
EJ8: CIVIC 2-door/D16Y8

Body Type and Transmission Type

1: Coupe/5-speed Manual
2: Coupe/4-speed Automatic

Vehicle Grade

2: DX, Si
3: Si with ABS
5: DX with ABS
6: DX with ABS and A/C
7: Si with ABS and A/C

Check Digit

Model Year

V: 1997

Factory Code

L: East Liberty, Ohio Plant, U.S.A.

Serial Number

Engine Number

D16Y7 - 2750001

Engine Type

D16Y7: 1600 SOHC 16-valves Sequential Multiport Fuel-injected Engine
D16Y8: 1600 SOHC VTEC 16-valves Sequential Multiport Fuel-injected Engine

Serial Number

Transmission Number

A4RA - 6000001

Transmission Type

A4RA: 4-speed Automatic Transmission
B4RA: 4-speed Automatic Transmission
S40 : 5-speed Manual Transmission


Serial Number

A4RA: 6000001~
B4RA: 6000001~
S40 : 1000001~

Paint Code


Paint Code	Color
G-82P	Cypress Green Pearl
NH-503P	Granada Black Pearl
NH-538	Frost White
NH-583M	New Vogue Silver Metallic
R-81	Milano Red

Vehicle Identification Number and Canadian Motor Vehicle Safety Standard Certification

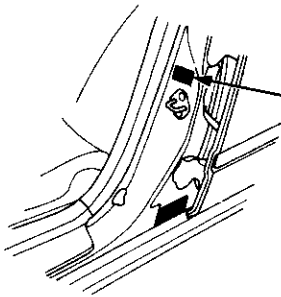

Paint Code

COLOR
NH-538

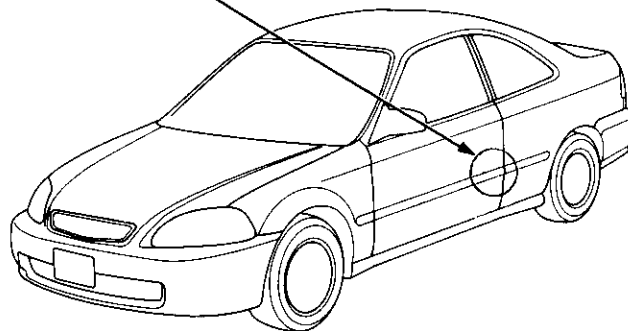

Chassis and Paint Codes

U.S. 1998 Model (2-door Hatchback)

Vehicle Identification Number

2HG EJ6 32 *WH 1 00001

Manufacturer, Make and Type of Vehicle

2HG: HONDA OF CANADA
MFG., INC.
HONDA Passenger
vehicle

Line, Body and Engine Type

EJ6: CIVIC 3-door/D16Y7

Body Type and Transmission Type

3: Hatchback/5-speed
Manual
4: Hatchback/4-speed
Automatic

Vehicle Grade

2: CX
3: CX with A/C
4: DX
5: DX with A/C
6: DX with ABS
7: DX with A/C and ABS

Check Digit

Model Year

W: 1998

Factory Code

H: Alliston Plant, Ontario, Canada

Destinations

Serial Number

Engine Number

D16Y7 - 3500001

Engine Type

D16Y7: 1600 SOHC 16-valves
Sequential Multiport
Fuel-injected Engine

Serial Number

Transmission Number

B4RA - 7000001

Transmission Type

B4RA: 4-speed Automatic Transmission
S40 : 5-speed Manual Transmission


Serial Number

B4RA: 7000001~
S40 : 1000001~

Paint Code


Paint Code	Color
NH-592P	Flamenco Black Pearl
NH-583M	New Vogue Silver Metallic
PB-74P	Dark Amethyst Pearl
R-97	Roma Red

Vehicle Identification Number and Federal Motor Vehicle Safety Standard Certification

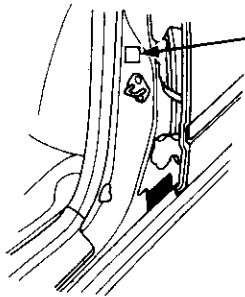

Paint Code

COLOR
NH-583M

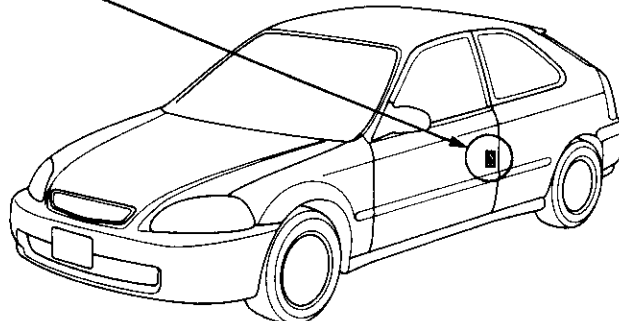



U.S. 1998 Model (4-door Sedan)

Vehicle Identification Number
 JHM EJ6 5 2 *WS 000001

Manufacturer, Make and Type of Vehicle
 JHM: HONDA MOTOR CO., LTD.
 HONDA Passenger vehicle
 1HG: HONDA OF AMERICA MFG., INC.
 HONDA Passenger vehicle
 2HG: HONDA OF CANADA MFG., INC.
 HONDA Passenger vehicle

Line, Body and Engine Type
 EJ6: CIVIC 4-door/D16Y7
 EJ8: CIVIC 4-door/D16Y8

Body Type and Transmission Type
 5: Sedan/5-speed Manual
 6: Sedan/4-speed Automatic

Vehicle Grade
 0: LX
 2: DX
 3: DX with A/C
 4: DX with ABS, EX
 5: DX with ABS and A/C
 7: LX with A/C
 8: LX with ABS
 9: LX with ABS and A/C

Check Digit
Model Year
 W: 1998

Factory Code
 L: East Liberty, Ohio Plant, U.S.A.
 S: Suzuka Plant, Mie Prefecture, Japan
 H: Alliston Plant, Ontario, Canada

Serial Number
 000001: JAPAN, U.S.A.
 500001: CANADA

Engine Number
 D16Y7 - 3300001

Engine Type
 D16Y7: 1600 SOHC 16-valves Sequential Multiport Fuel-injected Engine
 D16Y8: 1600 SOHC VTEC 16-valves Sequential Multiport Fuel-injected Engine

Serial Number
 JAPAN: D16Y7, D16Y8 - 3300001~
 U.S.A : D16Y7, D16Y8 - 3500001~

Transmission Number
 B4RA - 7000001



Transmission Type
 B4RA : 4-speed Automatic Transmission
 M4RA: 4-speed Automatic Transmission
 S40 : 5-speed Manual Transmission

Serial Number
 B4RA (U.S.A.) : 7000001~
 M4RA (JAPAN): 3000001~
 S40 (JAPAN) : 1000001~

Paint Code

Paint Code	Color
B-73M	Cyclone Blue Metallic
G-82P	Cypress Green Pearl
NH-578	Taffeta White
NH-592P	Flamenco Black Pearl
NH-583M	New Vogue Silver Metallic
R-96P	Inza Red Pearl

Paint Code
COLOR B-73M

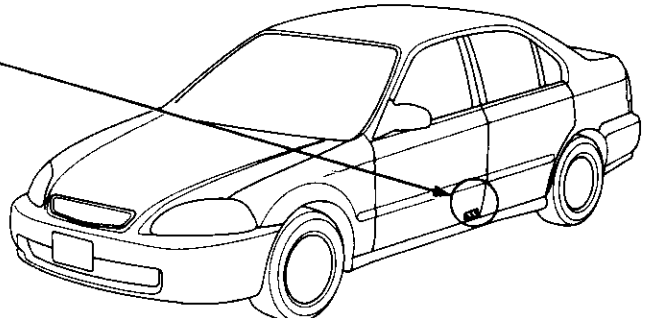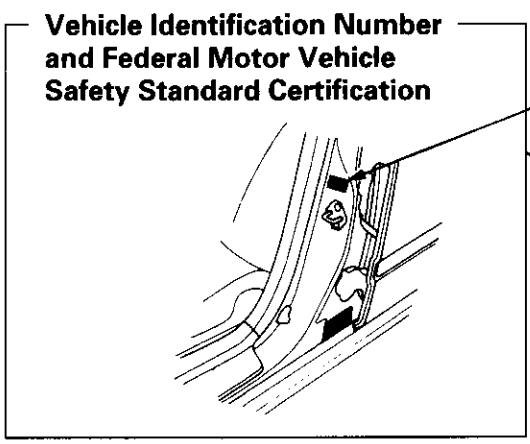

Chassis and Paint Codes

U.S. 1998 Model (2-door Coupe)

Vehicle Identification Number

1HG EJ6 12 *W L 000001

Manufacturer, Make and Type of Vehicle
 1HG: HONDA OF AMERICA MFG., INC.
 HONDA Passenger vehicle

Line, Body and Engine Type
 EJ6: CIVIC 2-door/D16Y7
 EJ7: CIVIC 2-door/D16Y5
 EJ8: CIVIC 2-door/D16Y8

Body Type and Transmission Type
 1: Coupe/5-speed Manual
 2: Coupe/4-speed Automatic, CVT

Vehicle Grade
 2: DX, HX
 3: DX with ABS, HX with ABS
 4: DX with A/C, HX with A/C, EX
 5: DX with ABS and A/C, HX with ABS and A/C, EX with ABS

Check Digit

Model Year
 W: 1998

Factory Code
 L: East Liberty, Ohio Plant, U.S.A.

Serial Number

Engine Number

D16Y5 - 3300001

Engine Type
 D16Y5: 1600 SOHC VTEC-E 16-valves Sequential Multiport Fuel-injected Engine
 D16Y7: 1600 SOHC 16-valves Sequential Multiport Fuel-injected Engine
 D16Y8: 1600 SOHC VTEC 16-valves Sequential Multiport Fuel-injected Engine

Serial Number
 JAPAN: D16Y5 - 3300001~
 U.S.A. : D16Y7, D16Y8 - 3500001~


Transmission Number

B4RA - 7000001

Transmission Type
 B4RA : 4-speed Automatic Transmission
 S40 : 5-speed Manual Transmission
 M4VA: Continuously Variable Transmission (CVT)


Serial Number
 B4RA : 7000001~
 S40 : 1000001~
 M4VA: 4000001~

Vehicle Identification Number and Federal Motor Vehicle Safety Standard Certification

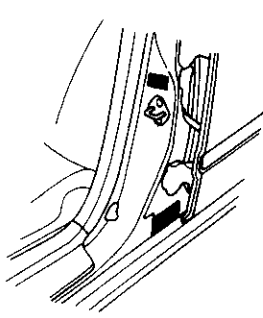

Paint Code

Paint Code	Color
G-82P	Cypress Green Pearl
NH-592P	Flamenco Black Pearl
NH-578	Taffeta White
NH-583M	New Vogue Silver Metallic
R-81	Milano Red

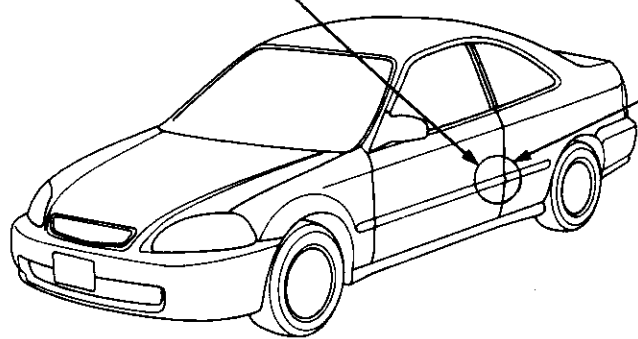

Paint Code

**COLOR
G-82P**



CANADA 1998 Model (2-door Hatchback)

Vehicle Identification Number 2HG EJ6 32 *WH 000001

Manufacturer, Make and Type of Vehicle
 2HG: HONDA OF CANADA MFG., INC.
 HONDA Passenger vehicle

Line, Body and Engine Type
 EJ6: CIVIC 3-door/D16Y7

Body Type and Transmission Type
 3: Hatchback/5-speed Manual
 4: Hatchback/4-speed Automatic

Vehicle Grade
 2: CX
 3: CX-G

Check Digit

Model Year
 W: 1998

Factory Code
 H: Alliston Plant, Ontario, Canada

Serial Number

Engine Number D16Y7 - 3750001

Engine Type
 D16Y7: 1600 SOHC 16-valves Sequential Multiport Fuel-injected Engine

Serial Number

Transmission Number B4RA - 7000001

Transmission Type
 B4RA: 4-speed Automatic Transmission
 S40 : 5-speed Manual Transmission

Serial Number
 B4RA: 7000001~
 S40 : 1000001~


Paint Code

Paint Code	Color
NH-592P	Flamenco Black Pearl
NH-583M	New Vogue Silver Metallic
PB-74P	Dark Amethyst Pearl
R-97	Roma Red

Vehicle Identification Number and Canadian Motor Vehicle Safety Standard Certification

Paint Code

COLOR NH-592P

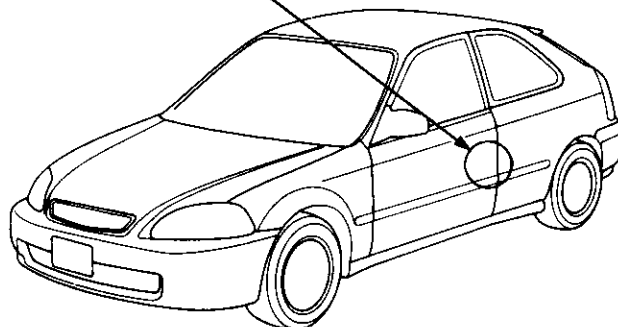

Chassis and Paint Codes

CANADA 1998 Model (4-door Sedan)

Vehicle Identification Number

2HG EJ6 53 *W H 900001

Manufacturer, Make and Type of Vehicle

2HG: HONDA OF CANADA MFG., INC.
HONDA Passenger vehicle
JHM: HONDA MOTOR CO., LTD.
HONDA Passenger vehicle

Line, Body and Engine Type

EJ6: CIVIC 4-door/D16Y7

Body Type and Transmission Type

5: Sedan/5-speed Manual
6: Sedan/4-speed Automatic

Vehicle Grade

0: EX
3: LX
4: LX with ABS
5: LX with ABS and A/C
7: EX with ABS
8: EX with ABS and A/C

Check Digit

Model Year

W: 1998

Factory Code

H: Alliston Plant, Ontario, Canada
S: Suzuka Plant, Mie Prefecture, Japan

Serial Number

800001~: JAPAN
900001~: CANADA

Engine Number

D16Y7 - 3750001

Engine Type

D16Y7: 1600 SOHC 16-valves
Sequential Multiport
Fuel-injected Engine

Serial Number

3750001~: U.S.A.
3700001~: JAPAN

Transmission Number

B4RA - 7000001

Transmission Type

B4RA : 4-speed Automatic Transmission
M4RA: 4-speed Automatic Transmission
S40 : 5-speed Manual Transmission


Serial Number

B4RA (U.S.A.) : 7000001~
M4RA (JAPAN): 3000001~
S40 (JAPAN) : 1000001~

Paint Code


Paint Code	Color
B-73M	Cyclone Blue Metallic
G-82P	Cypress Green Pearl
NH-592P	Flamenco Black Pearl
NH-578	Taffeta White
NH-583M	New Vogue Silver Metallic

Vehicle Identification Number and Canadian Motor Vehicle Safety Standard Certification

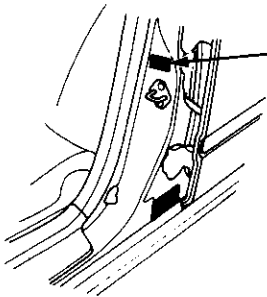

Paint Code

COLOR
B-73M

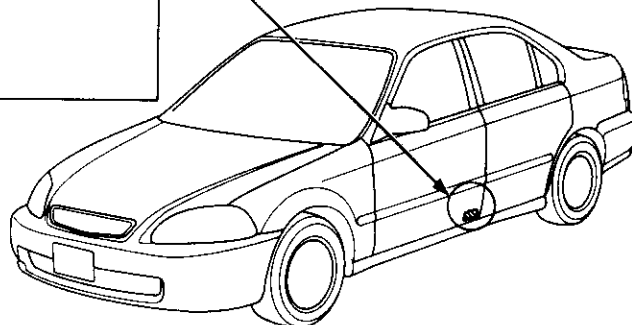



CANADA 1998 Model (2-door Coupe)

Vehicle Identification Number 1HG EJ6 12 *W L 800001

Manufacturer, Make and Type of Vehicle
 1HG: HONDA OF AMERICA MFG., INC.
 HONDA Passenger vehicle

Line, Body and Engine Type
 EJ6: CIVIC 2-door/D16Y7
 EJ8: CIVIC 2-door/D16Y8

Body Type and Transmission Type
 1: Coupe/5-speed Manual
 2: Coupe/4-speed Automatic

Vehicle Grade
 2: DX, Si
 3: Si with ABS
 5: DX with ABS
 6: DX with ABS and A/C
 7: Si with ABS and A/C

Check Digit

Model Year
 W: 1998

Factory Code
 L: East Liberty, Ohio Plant, U.S.A.

Serial Number

Engine Number D16Y7 - 3750001

Engine Type
 D16Y7: 1600 SOHC 16-valves Sequential Multiport Fuel-injected Engine
 D16Y8: 1600 SOHC VTEC 16-valves Sequential Multiport Fuel-injected Engine

Serial Number
 D16Y7: 3750001~
 D16Y8: 3780001~

Transmission Number B4RA - 7000001

Transmission Type
 B4RA: 4-speed Automatic Transmission
 S40 : 5-speed Manual Transmission

Serial Number
 B4RA: 7000001~
 S40 : 1000001~


Paint Code

Paint Code	Color
G-82P	Cypress Green Pearl
NH-592P	Flamenco Black Pearl
NH-578	Taffeta White
NH-583M	New Vogue Silver Metallic
R-81	Milano Red

Vehicle Identification Number and Canadian Motor Vehicle Safety Standard Certification



Paint Code

COLOR NH-578


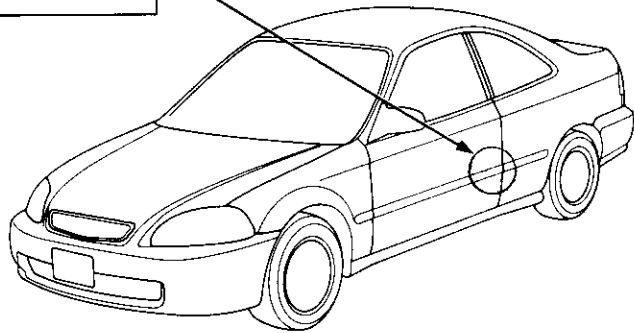


Identification Number Locations

Vehicle Identification Number (VIN)

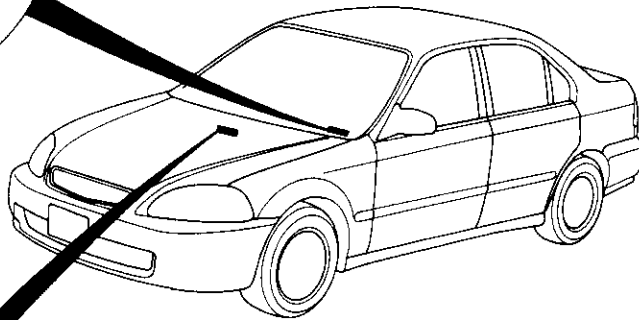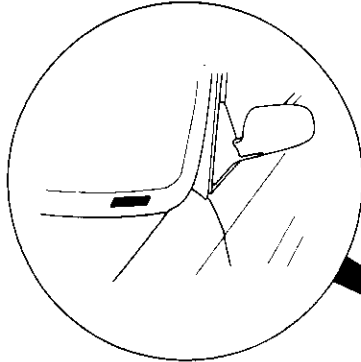


Vehicle Identification Number (VIN)

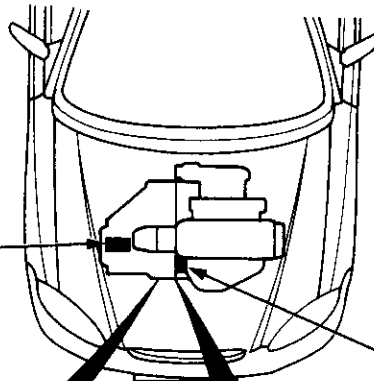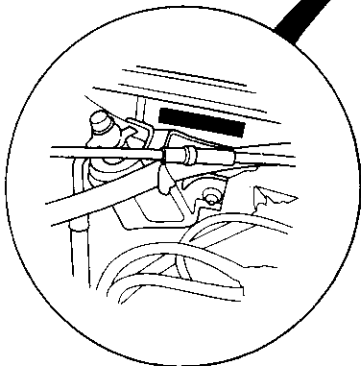


Transmission Number (S40, A4RA, B4RA, M4RA)

Engine Number

M4VA Automatic

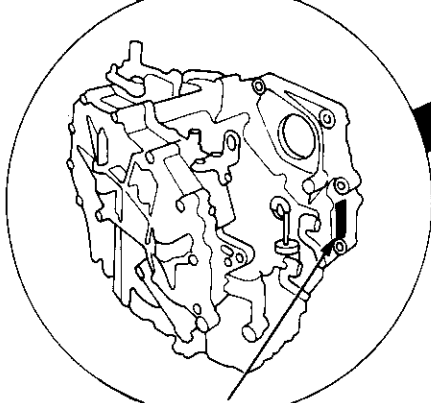


Transmission Number

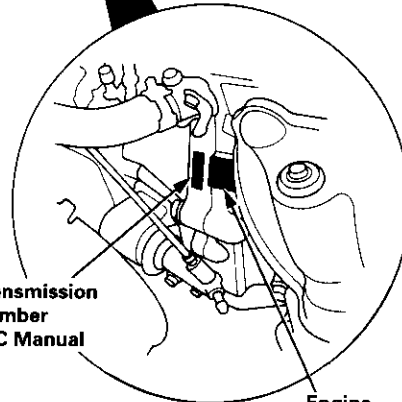

Transmission Number S4C Manual

Engine Number

Warning/Caution Label Locations

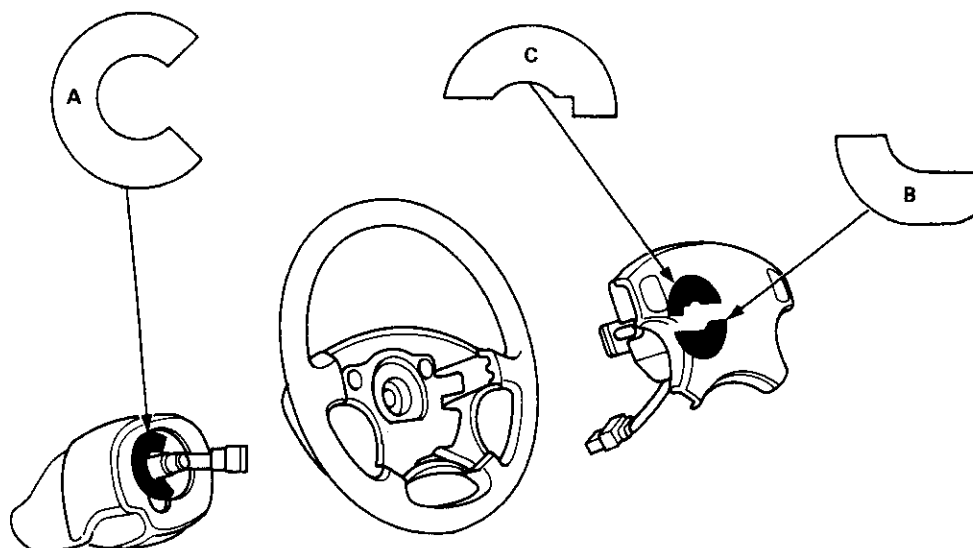

A: CABLE REEL CAUTION A

SRS
REFER TO SERVICE MANUAL FOR DETAILED INSTRUCTIONS.

B: DRIVER MODULE WARNING

WARNING
THE AIRBAG INFLATOR IS EXPLOSIVE AND, IF ACCIDENTALLY DEPLOYED, CAN SERIOUSLY HURT OR KILL YOU.

- DO NOT USE ELECTRICAL TEST EQUIPMENT OR PROBING DEVICES. THEY CAN CAUSE ACCIDENTAL DEPLOYMENT.
- NO SERVICEABLE PARTS INSIDE. DO NOT DISASSEMBLE.
- PLACE AIRBAG UPRIGHT WHEN REMOVED.
- FOLLOW SERVICE MANUAL INSTRUCTIONS CAREFULLY.

C: DRIVER MODULE DANGER

DANGER
EXPLOSIVE/FLAMMABLE
CONTACT WITH ACID, WATER OR HEAVY METALS SUCH AS COPPER, LEAD OR MERCURY MAY PRODUCE HARMFUL AND IRRITATING GASES OR EXPLOSIVE COMPOUNDS. STORAGE TEMPERATURES MUST NOT EXCEED 200°F (100°C). FOR PROPER HANDLING, STORAGE AND DISPOSAL PROCEDURES REFER TO SERVICE MANUAL, SRS SUPPLEMENT.

POISON
CONTAINS POISONOUS SODIUM AZIDE AND POTASSIUM NITRATE.


FIRST AID:
IF CONTENTS ARE SWALLOWED, INDUCE VOMITING. FOR EYE CONTACT, FLUSH EYES WITH WATER FOR 15 MINUTES. IF GASES (FROM ACID OR WATER CONTACT) ARE INHALED, SEEK FRESH AIR. IN EVERY CASE, GET PROMPT MEDICAL ATTENTION.

KEEP OUT OF REACH OF CHILDREN.

(cont'd)

Warning/Caution Label Locations

(cont'd)

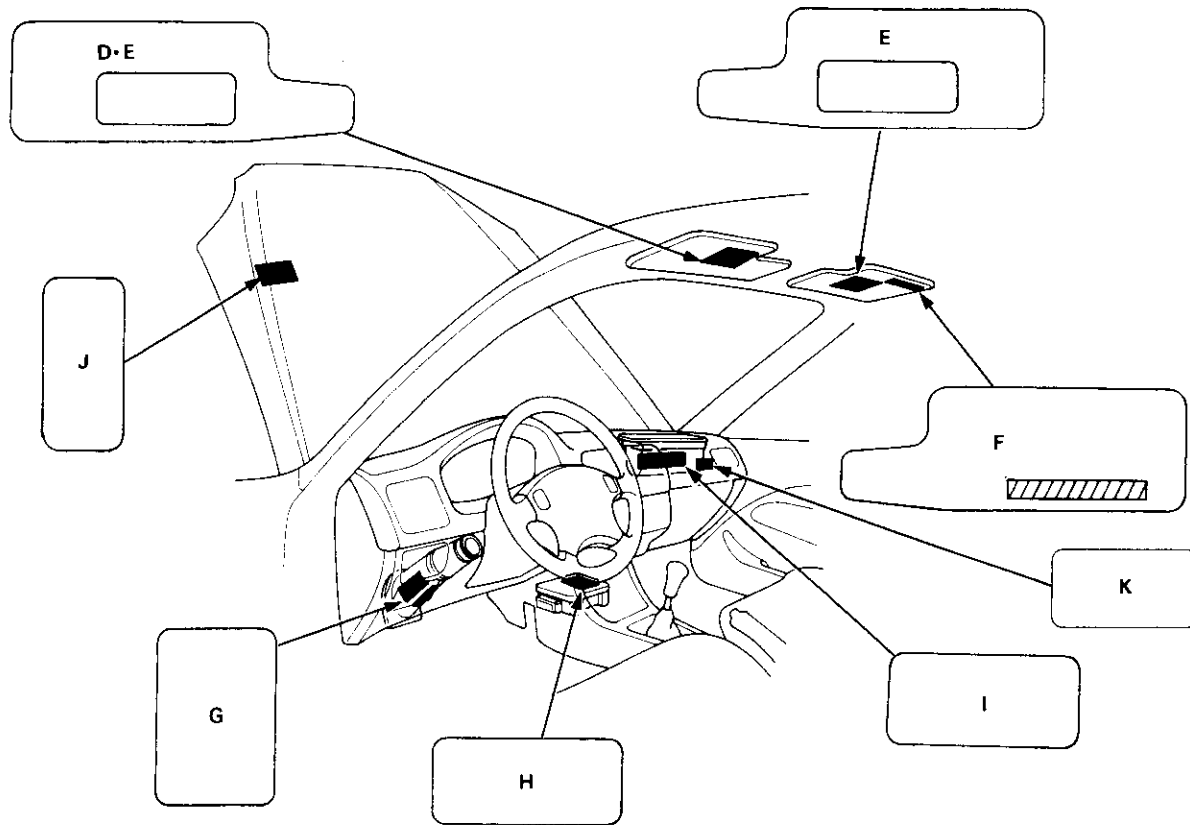

D: DRIVER INFORMATION: CANADA MODEL

SRS

AIRBAG ALWAYS WEAR YOUR SEAT BELT

- THIS CAR IS EQUIPPED WITH A DRIVER AIRBAG AND A FRONT SEAT PASSENGER AIRBAG* AS A SUPPLEMENTAL RESTRAINT SYSTEM (SRS).
- IT IS DESIGNED TO SUPPLEMENT THE SEAT BELT.

* Except CANADA CX

E: SRS INFORMATION: U.S. model (96, 97 model)

CAUTION

TO AVOID SERIOUS INJURY:

- FOR MAXIMUM SAFETY PROTECTION IN ALL TYPES OF CRASHES, YOU MUST ALWAYS WEAR YOUR SAFETY BELT.
- DO NOT INSTALL REARWARD-FACING CHILD SEATS IN ANY FRONT PASSENGER SEAT POSITION.
- DO NOT SIT OR LEAN UNNECESSARILY CLOSE TO THE AIRBAG.
- DO NOT PLACE ANY OBJECTS OVER THE AIRBAG OR BETWEEN THE AIRBAG AND YOURSELF.
- SEE THE OWNER'S MANUAL FOR FURTHER INFORMATION AND EXPLANATIONS.
- THE SRS MUST BE INSPECTED TEN YEARS AFTER IT IS INSTALLED.
- THE DATE OF INSTALLATION IS SHOWN ON THE DRIVER'S DOORJAMB.

U.S. model (98 model)

WARNING

DEATH OR SERIOUS INJURY CAN OCCUR.

- CHILDREN 12 AND UNDER CAN BE KILLED BY THE AIRBAG.
- THE BACK SEAT IS THE SAFEST PLACE FOR CHILDREN.
- NEVER PUT A REAR-FACING CHILD SEAT IN THE FRONT.
- SIT AS FAR BACK AS POSSIBLE FROM THE AIRBAG.
- ALWAYS USE SEAT BELTS AND CHILD RESTRAINTS.
- THE SRS MUST BE INSPECTED TEN YEARS AFTER IT IS INSTALLED.
- THE DATE OF INSTALLATION IS SHOWN ON THE DRIVER'S DOORJAMB.



F: ASSISTANT INFORMATION: US MODEL (96, 97 model)

AIRBAG SEE OTHER SIDE.

U.S. model (98 model)

**AIRBAG WARNING
FLIP VISER OVER**

G: STEERING COLUMN NOTICE

**NOTICE
TO PREVENT SRS DAMAGE, REMOVE STEERING WHEEL
BEFORE REMOVING STEERING SHAFT CONNECTING
BOLT.**

H: MONITOR CAUTION

NOTICE SRS
• NO SERVICEABLE PARTS INSIDE.
• REFER TO SERVICE MANUAL FOR DETAILED INSTRUCTIONS.

I: FRONT SEAT PASSENGER MODULE DANGER

DANGER
EXPLOSIVE/FLAMMABLE
CONTACT WITH ACID, WATER OR HEAVY METALS SUCH AS COPPER, LEAD OR MERCURY MAY PRODUCE HARMFUL AND IRRITATING GASES OR EXPLOSIVE COMPOUNDS. STORAGE TEMPERATURES MUST NOT EXCEED 200°F (100°C). FOR PROPER HANDLING, STORAGE AND DISPOSAL PROCEDURES REFER TO SERVICE MANUAL, SRS SUPPLEMENT.
POISON
CONTAINS POISONOUS SODIUM AZIDE AND POTASSIUM NITRATE.
FIRST AID
IF CONTENTS ARE SWALLOWED, INDUCE VOMITING. FOR EYE CONTACT, FLUSH EYES WITH WATER FOR 15 MINUTES. IF GASES (FROM ACID OR WATER CONTACT) ARE INHALED, SEEK FRESH AIR IN EVERY CASE, GET PROMPT MEDICAL ATTENTION.
KEEP OUT OF REACH OF CHILDREN.

WARNING
THE AIRBAG INFLATOR IS EXPLOSIVE AND, IF ACCIDENTALLY DEPLOYED, CAN SERIOUSLY HURT OR KILL YOU.
• DO NOT USE ELECTRICAL TEST EQUIPMENT OR PROBING DEVICES.
THEY CAN CAUSE ACCIDENTAL DEPLOYMENT.
• NO SERVICEABLE PARTS INSIDE. DO NOT DISASSEMBLE.
• PLACE AIRBAG UPRIGHT WHEN REMOVED.
• FOLLOW SERVICE MANUAL INSTRUCTIONS CAREFULLY.

J: SRS WARNING (HOOD)

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)
THIS VEHICLE IS EQUIPPED WITH DRIVER AND FRONT SEAT PASSENGER AIRBAGS*. ALL SRS ELECTRICAL WIRING AND CONNECTORS ARE COLORED YELLOW. TAMPERING WITH, DISCONNECTING OR USING ELECTRICAL TEST EQUIPMENT ON THE SRS WIRING CAN MAKE THE SYSTEM INOPERATIVE OR CAUSE ACCIDENTAL FIRING OF THE INFLATOR.

WARNING
THE AIRBAG INFLATOR IS EXPLOSIVE AND, IF ACCIDENTALLY DEPLOYED, CAN SERIOUSLY HURT YOU. FOLLOW SERVICE MANUAL INSTRUCTIONS CAREFULLY.

* Except CANADA CX


K: PASSENGER AIRBAG CAUTION
U.S. model (98 model)

WARNING
CHILDREN CAN BE KILLED OR INJURED BY PASSENGER AIRBAG.
THE BACK SEAT IS THE SAFEST PLACE FOR CHILDREN 12 AND UNDER. MAKE SURE ALL CHILDREN USE SEAT BELTS OR CHILD SEATS.

(cont'd)

Warning/Caution Label Locations

(cont'd)

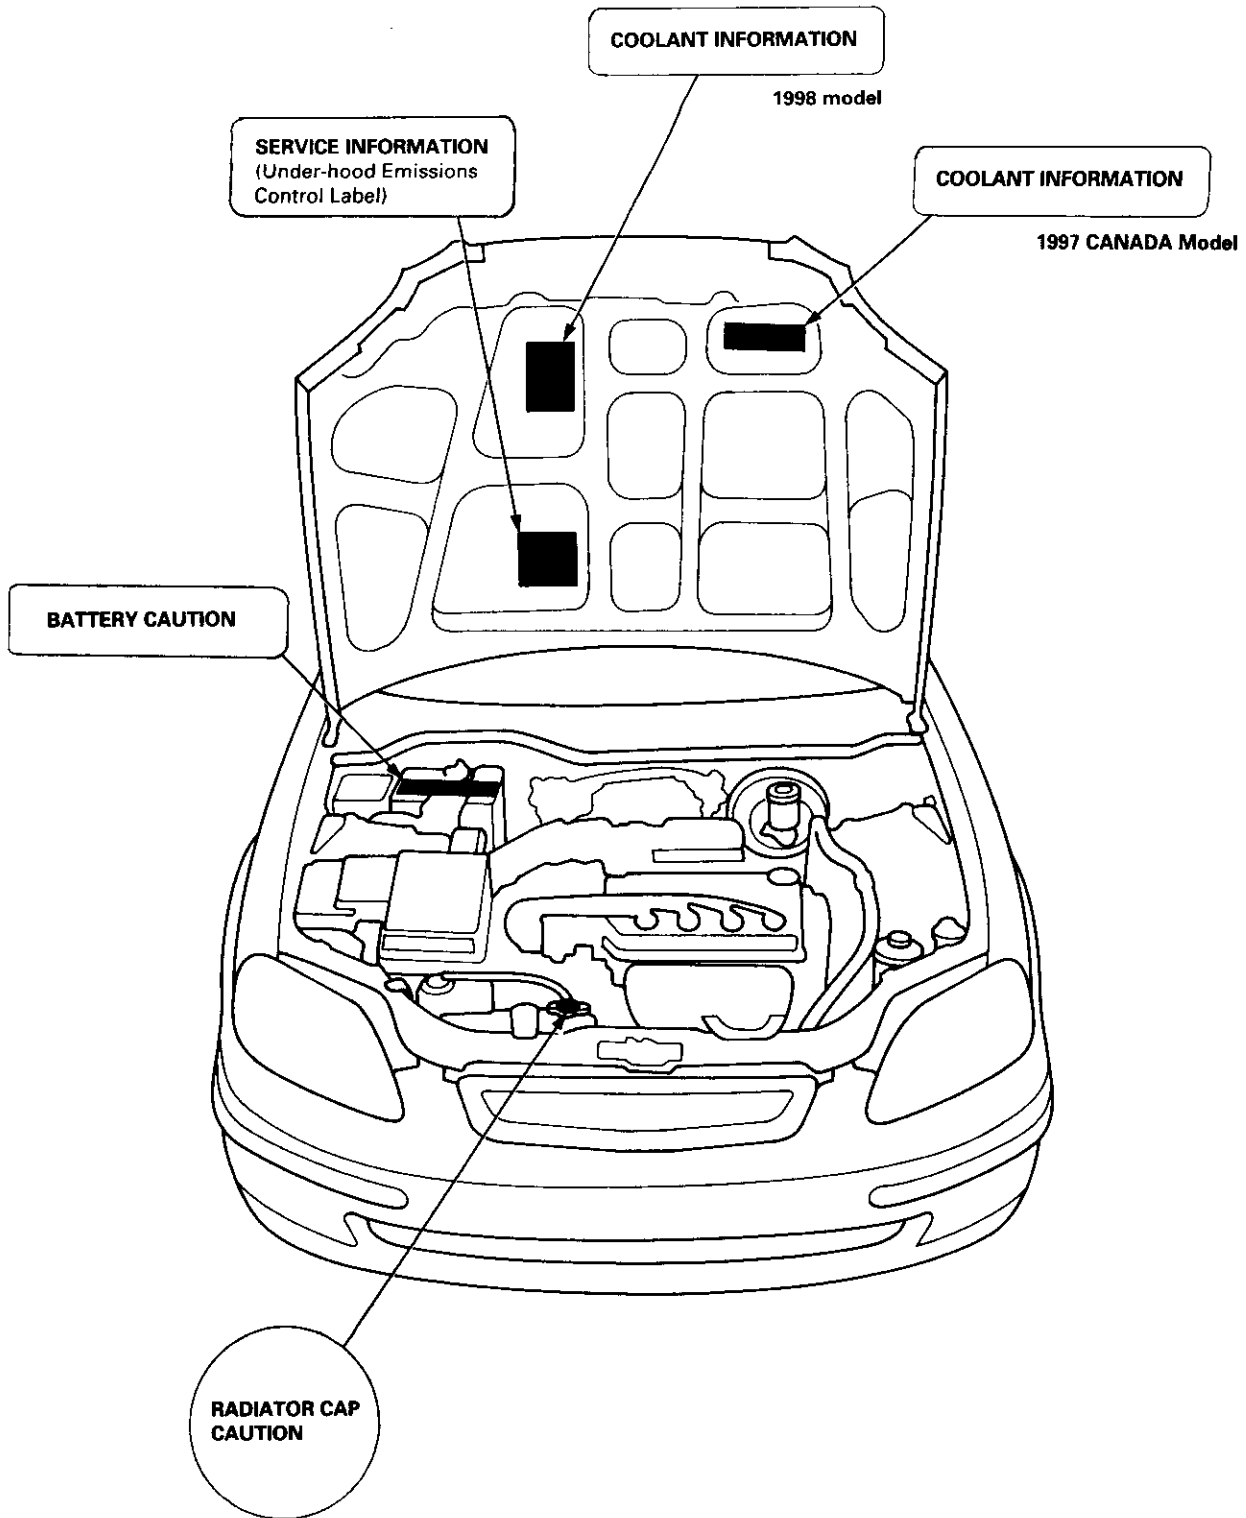


Under-hood Emissions Control Label (1996, 1997 model)



Emission Group Identification

Example:

- ▷ WHEN ADDING OR CHANGING THE COOLANT, USE 50/50 SOLUTION OF *HONDA RECOMMENDED ANTI-FREEZE/COOLANT AND WATER. NEVER DILUTE THE COOLANT, OR THE LIFE OF THE ENGINE MAY BE SERIOUSLY SHORTENED.
- ▷ REPLACE COOLANT AFTER **36 MONTHS** OR **46,000 MILES (72,000 km)**, WHICHEVER COMES FIRST. THEREAFTER, REPLACE EVERY **2 YEARS** OR **30,000 MILES (48,000 km)**, WHICHEVER COMES FIRST.
- ▷ CHECK OR ADD COOLANT AT THE RESERVE TANK, NOT THE RADIATOR.
- ▷ FOR FURTHER INFORMATION ON THE COOLING SYSTEM, READ THE OWNER'S MANUAL. *CHECK WITH YOUR HONDA DEALER.

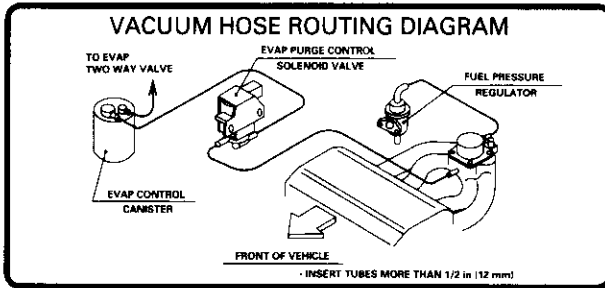

VEHICLE EMISSION CONTROL INFORMATION
 ENGINE FAMILY-VHN1.6VJGK GK DISPLACEMENT-1590 cm³-97 CID CIVIC
 EVAPORATIVE FAMILY-VHN1077BYMAC

CATALYST TWC HO2S (2) SFI

REFER TO SERVICE MANUAL FOR ADDITIONAL INFORMATION.
 TUNE UP CONDITIONS: ENGINE AT NORMAL OPERATING TEMPERATURE,
 ALL ACCESSORIES TURNED OFF, COOLING FAN OFF,
 TRANSMISSION IN NEUTRAL

NO OTHER ADJUSTMENTS NEEDED. **OBD II CERTIFIED**

IDLE SPEED	MANUAL TRANSMISSION	670 ± 50 rpm
	AUTOMATIC TRANSMISSION	700 ± 50 rpm
IGNITION TIMING AT IDLE		12° ± 2° BTDC
VALVE LASH	IN	0.20 ± 0.02 mm COLD
	EX	0.25 ± 0.02 mm COLD
SPARK PLUG	TYPE	NGK: ZFR5F-11 ND; KJ16CR-11
	GAP	1.1 ⁰ / _{-0.1} mm

THIS VEHICLE CONFORMS TO U.S. EPA AND STATE OF CALIFORNIA REGULATIONS APPLICABLE TO 1997 MODEL YEAR NEW MOTOR VEHICLES.

EXHAUST EMISSION STANDARDS STANDARD CATEGORY
 CERTIFICATION TIER 1
 IN-USE TIER 1 FULL

17277-P2E-A02 HONDA MOTOR CO., LTD.

50ST (50 States):

THIS VEHICLE CONFORMS TO U.S. EPA AND STATE OF CALIFORNIA REGULATIONS APPLICABLE TO 1997 MODEL YEAR NEW MOTOR VEHICLES.

49ST (49 States/Federal):

THIS VEHICLE CONFORMS TO U.S. EPA REGULATIONS APPLICABLE TO 1997 MODEL YEAR NEW MOTOR VEHICLES.

CAL (California):

THIS VEHICLE CONFORMS TO U.S. EPA AND STATE OF CALIFORNIA REGULATIONS APPLICABLE TO 1997 MODEL YEAR NEW PASSENGER CARS PROVIDED THAT THIS VEHICLE IS ONLY INTRODUCED INTO COMMERCE FOR SALE IN THE STATE OF CALIFORNIA.

Engine and Evaporative Families

Engine Family: V HN 1.6 V J G K G K

Model Year _____
 T: 1996
 V: 1997

Manufacturer _____
 HN: Honda

Displacement _____

Class _____
 V: Light Duty Vehicle/Passenger Car

Fuel System and Number of Valves _____
 J: Electronic Sequential Multiport Injection
 (three or more valves per cylinder)

Fuel Type _____
 G: Gasoline

Standard _____
 F: 49 or 50 States Tier 1
 K: 49 or 50 States Tier 1
 1: California Tier 1
 2: California TLEV
 3: California LEV
 4: California ULEV

Catalyst _____
 E, F, G, H: Three Way Catalyst

OBD _____
 K - T: OBD Equipped

Evaporative Family: V HN 1 077 BY MAC

Model Year _____
 T: 1996
 V: 1997

Manufacturer _____
 HN: Honda

Storage System _____
 1: Canister

Canister Working Capacity (grams) _____

Canister Configuration _____
 A: Plastic Housing (Closed Bottom)
 B: Plastic Housing (Open Bottom)

Fuel System _____
 Y: Fuel Injection

Fuel Tank _____
 M: Metal

Standard _____
 A: Current Evap
 E: Enhanced Evap

Wild Card _____

(cont'd)

Under-hood Emissions Control Label (1998 model)

(cont'd) Emission Group Identification

Example:

<p>▷ WHEN ADDING OR CHANGING THE COOLANT, USE 50/50 SOLUTION OF *HONDA RECOMMENDED ANTI-FREEZE/COOLANT AND WATER. NEVER DILUTE THE COOLANT, OR THE LIFE OF THE ENGINE MAY BE SERIOUSLY SHORTENED.</p> <p>▷ REPLACE COOLANT AFTER 36 MONTHS OR 45,000 MILES (72,000 km), WHICHEVER COMES FIRST. THEREAFTER, REPLACE EVERY 2 YEARS OR 30,000 MILES (48,000 km), WHICHEVER COMES FIRST.</p> <p>▷ CHECK OR ADD COOLANT AT THE RESERVE TANK, NOT THE RADIATOR.</p> <p>▷ FOR FURTHER INFORMATION ON THE COOLING SYSTEM, READ THE OWNER'S MANUAL.</p> <p>*CHECK WITH YOUR HONDA DEALER.</p>	
VEHICLE EMISSION CONTROL INFORMATION	
<p>THIS VEHICLE CONFORMS TO U.S. EPA AND STATE OF CALIFORNIA REGULATIONS APPLICABLE TO 1998 MODEL YEAR NEW TLEV PASSENGER CARS PROVIDED THAT THIS VEHICLE IS ONLY INTRODUCED INTO COMMERCE FOR SALE IN THE STATE OF CALIFORNIA.</p>	
<p>CATALYST TWC/HO2S(2)/EGR/SF/OBD II CERTIFIED</p>	
<p>VALVE LASH (COLD) SPARK PLUG GAP NO OTHER ADJUSTMENTS NEEDED.</p>	<p>IN: 0.20±0.02 mm EX: 0.25±0.02 mm 1.0-1.1 mm</p> <p>WHNXV01.6JL2 WHNXE0065AAD (§88,130-86 PROCEDURES) 1.6L</p>
<p>HONDA MOTOR CO., LTD</p> <p style="text-align: center;">T·M P2N-L60</p>	

50ST (50 States):

THIS VEHICLE CONFORMS TO U.S. EPA AND STATE OF CALIFORNIA REGULATIONS APPLICABLE TO 1998 MODEL YEAR NEW MOTOR VEHICLES.

49ST (49 States/Federal):

THIS VEHICLE CONFORMS TO U.S. EPA REGULATIONS APPLICABLE TO 1998 MODEL YEAR NEW MOTOR VEHICLES.

CAL (California):

THIS VEHICLE CONFORMS TO U.S. EPA AND STATE OF CALIFORNIA REGULATIONS APPLICABLE TO 1998 MODEL YEAR NEW PASSENGER CARS PROVIDED THAT THIS VEHICLE IS ONLY INTRODUCED INTO COMMERCE FOR SALE IN THE STATE OF CALIFORNIA.

Engine and Evaporative Families

Engine Family: W HNX V 01.6 JL2

Model Year _____
W: 1998

Manufacturer _____
HNX: Honda

Type _____
V: Light Duty Vehicle/Passenger Car

Displacement _____

Sequence Characters _____

Evaporative Family: W HNX E 0065 AAD

Model Year _____
W: 1998

Manufacturer _____
HNX: Honda

Type _____
E: EVAP

Canister Work Capacity (grams) _____

Sequence Characters _____




Lift and Safety Stands

▲ WARNING When heavy rear components such as suspension, fuel tank, spare tire, hatch, and trunk lid are to be removed, place additional weight in the luggage area before hoisting. When substantial weight is removed from the rear of the vehicle, the center of gravity may change and can cause the vehicle to tip forward on the hoist.

NOTE:

- Since each tire/wheel assembly weighs approximately 30 lbs (14 kg), placing the front wheels in the luggage area can assist with the weight distribution.
- Use the same support points to support the vehicle on safety stands.

1. Place the lift blocks as shown.
2. Raise the hoist a few inches (centimeters) and rock the vehicle to be sure it is firmly supported.
3. Raise the hoist to full height, and inspect lift points for solid support.

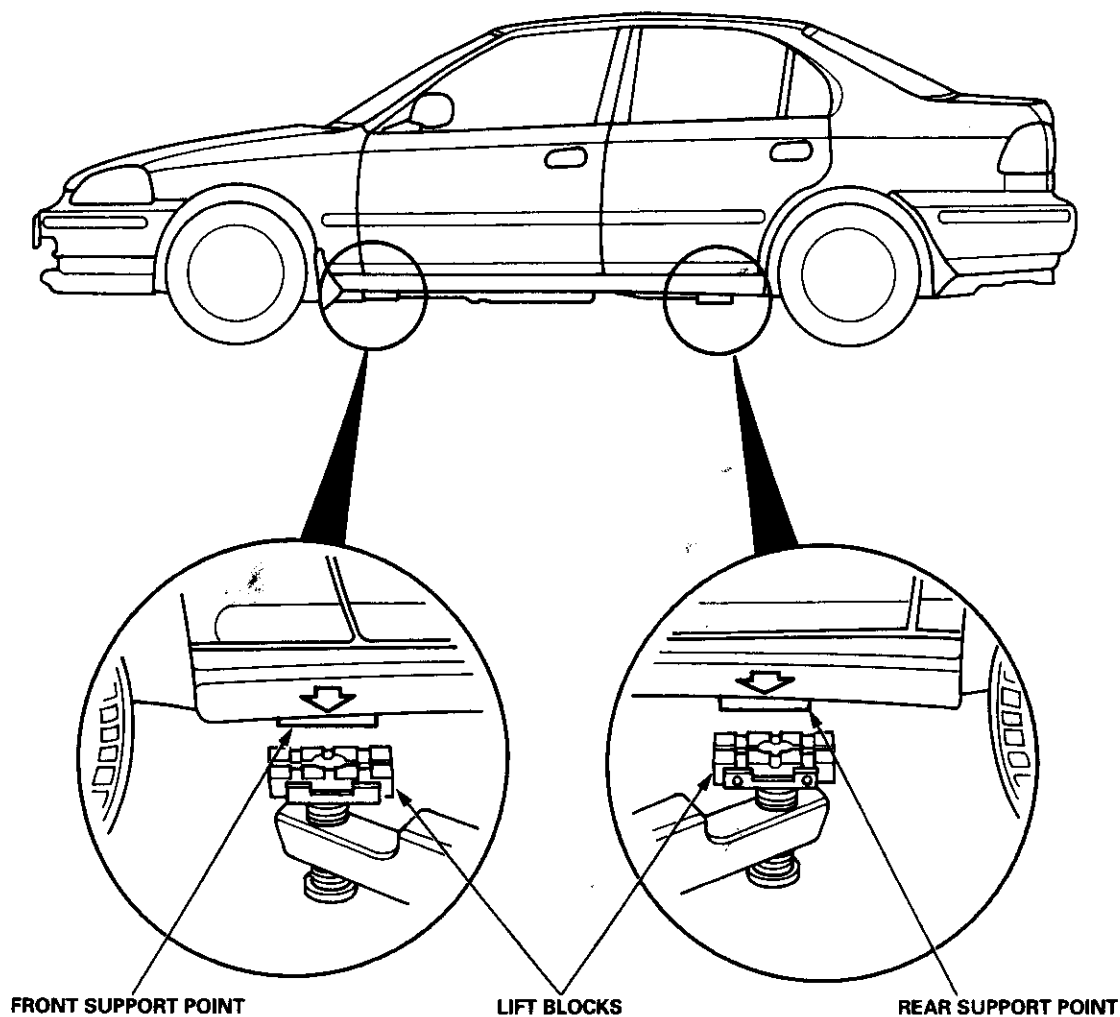

(cont'd)

Lift and Support Points


(cont'd) Floor Jack

1. Set the parking brake and block the wheels that are not being lifted.
2. When lifting the rear of the vehicle, put the gearshift lever in reverse (Automatic transmission/CVT in **P** position).
3. Raise the vehicle high enough to insert the safety stands.
4. Adjust and place the safety stands so the vehicle will be approximately level, then lower the vehicle onto them.

⚠ WARNING


- Always use safety stands when working on or under any vehicle that is supported by only a jack.
- Never attempt to use a bumper jack for lifting or supporting the vehicle.

FRONT:

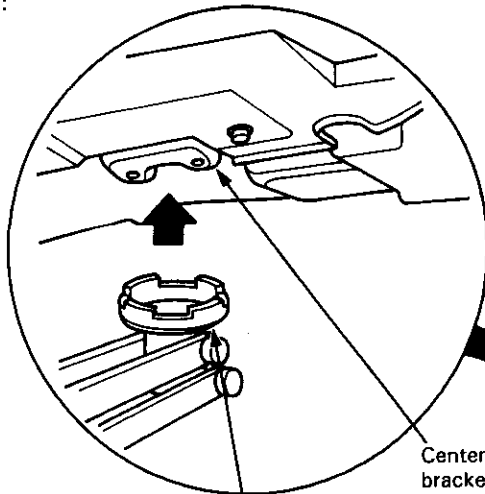


LIFT PLATFORM

Center the jacking bracket in the middle of the jack lift platform.

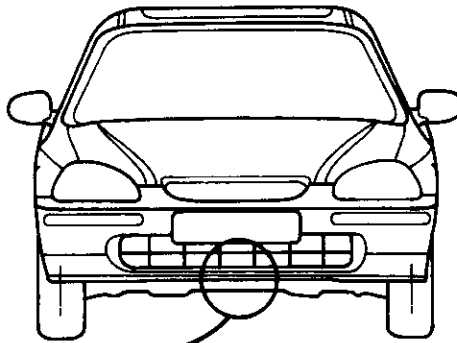


REAR:

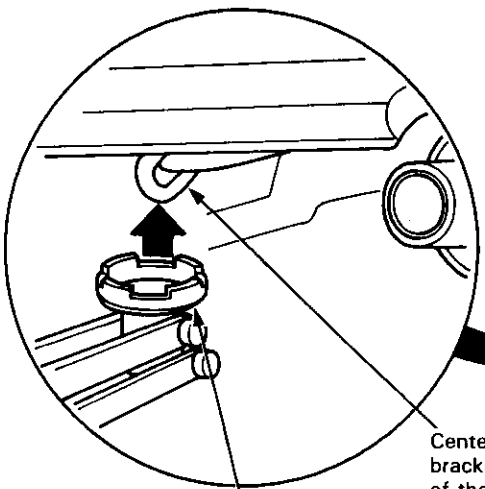

LIFT PLATFORM

Center the jack bracket in the middle of the jack lift platform.

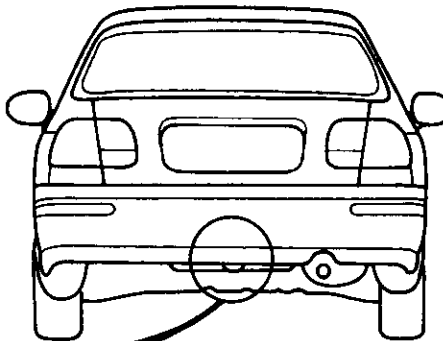



If the vehicle needs to be towed, call a professional towing service. Never tow the vehicle behind another vehicle with just a rope or chain. It is very dangerous.

Emergency Towing

There are three popular methods of towing a vehicle:

Flat-bed Equipment — The operator loads the vehicle on the back of a truck. This is the best way of transporting the vehicle.

Wheel Lift Equipment — The tow truck uses two pivoting arms that go under the tires (front or rear) and lifts them off the ground. The other two wheels remain on the ground.

Sling-type Equipment — The tow truck uses metal cables with hooks on the ends. These hooks go around parts of the frame of suspension, and the cables lift that end of the vehicle off the ground. The vehicle's suspension and body can be seriously damaged if this method of towing is attempted.

If the vehicle cannot be transported by flat-bed, it should be towed with the front wheels off the ground. If due to damage, the vehicle must be towed with the front wheels on the ground, do the following:

Manual Transmission and CVT

- Release the parking brake.
- Shift the transmission to neutral (CVT to **N** position).


Automatic Transmission

- Release the parking brake.
- Start the engine.
- Shift to **D₂** position, then **N** position.
- Turn off the engine.

CAUTION:


- Improper towing preparation will damage the transmission. Follow the above procedure exactly. If you cannot shift the transmission or start the engine (automatic transmission), your vehicle must be transported on a flat-bed.
- It is best to tow the vehicle no farther than 50 miles (80 km), and keep the speed below 35 mph (55 km/h).
- Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.

Front:

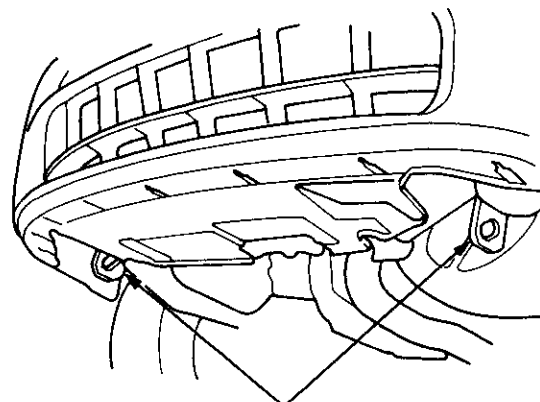

TIE DOWN HOOKS

Rear:

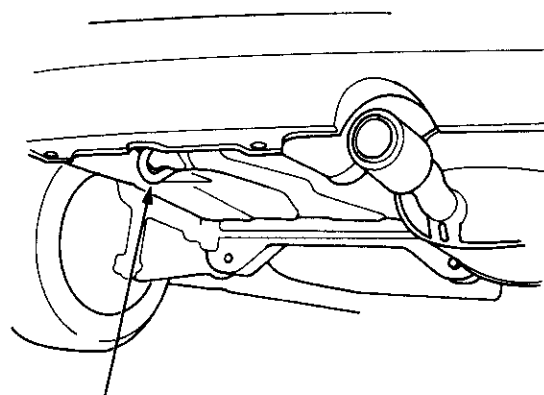

TOWING HOOK

Specifications

Standards and Service Limits	3-2
Design Specifications	3-15
Body Specifications	3-18

Standards and Service Limits

Cylinder Head/Valve Train — Section 6

		MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Compression	250 rpm and wide open throttle kPa (kgf/cm ² , psi)	Nominal		1,270 (13.0, 184)	
		Minimum		930 (9.5, 135)	
		Maximum variation		200 (2.0, 28)	
Cylinder head	Warpage			—	0.05 (0.002)
	Height			92.95 – 93.05 (3.659 – 3.663)	—
Camshaft	End play			0.05 – 0.15 (0.002 – 0.006)	0.5 (0.02)
	Camshaft-to-holder oil clearance			0.050 – 0.089 (0.002 – 0.004)	0.15 (0.006)
	Total runout			0.03 (0.001) max.	0.04 (0.002)
	Cam lobe height	D16Y7	IN	35.299 (1.3897)	—
			EX	37.281 (1.4678)	—
		D16Y5	IN	38.427 (1.5129)	—
			Primary	32.193 (1.2674)	—
			Secondary	38.784 (1.5269)	—
		D16Y8	EX	36.778 (1.4479)	—
			Primary	38.274 (1.5068)	—
			Mid	37.065 (1.4592)	—
			Secondary	38.008 (1.4964)	—
			EX		—
Valve	Valve clearance (Cold)		IN	0.18 – 0.22 (0.007 – 0.009)	—
			EX	0.23 – 0.27 (0.009 – 0.011)	—
	Valve stem O.D.		IN	5.48 – 5.49 (0.2157 – 0.2161)	5.45 (0.2146)
			EX	5.45 – 5.46 (0.2146 – 0.2150)	5.42 (0.2134)
	Stem-to-guide clearance		IN	0.02 – 0.05 (0.001 – 0.002)	0.08 (0.003)
			EX	0.05 – 0.08 (0.002 – 0.003)	0.11 (0.004)
Valve seat	Width		IN	0.85 – 1.15 (0.033 – 0.045)	1.6 (0.063)
			EX	1.25 – 1.55 (0.049 – 0.061)	2.0 (0.079)
	Stem installed height		IN	53.17 – 53.64 (2.093 – 2.112)	53.89 (2.122)
			EX	53.17 – 53.64 (2.093 – 2.112)	53.89 (2.122)
Valve spring	Free length	D16Y7		57.9 (2.28)	—
		D16Y5	IN	56.5 (2.22)	—
			EX	57.9 (2.28)	—
		D16Y8	IN	58.0 (2.28)	—
			EX	58.7 (2.31)	—
Valve guide	I.D.		IN	5.51 – 5.53 (0.217 – 0.218)	5.55 (0.219)
			EX	5.51 – 5.53 (0.217 – 0.218)	5.55 (0.219)
	Installed height		IN	17.85 – 18.35 (0.703 – 0.722)	—
			EX	18.65 – 19.15 (0.734 – 0.754)	—
Rocker arm	Arm-to-shaft clearance		IN	0.017 – 0.050 (0.0007 – 0.0020)	0.08 (0.003)
			EX	0.018 – 0.054 (0.0007 – 0.0021)	0.08 (0.003)

Engine Block — Section 7

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT	
Cylinder block	Warpage of deck surface	0.07 (0.003) max.	0.10 (0.004)	
	Bore diameter	75.00 – 75.02 (2.953 – 2.954)	75.07 (2.956)	
	Bore taper	—	0.05 (0.002)	
	Reboring limit	—	0.5 (0.02)	
Piston	Skirt O.D. at 5 mm (0.2 in) from bottom of skirt	74.980 – 74.990 (2.9520 – 2.9524)	74.970 (2.9516)	
	Clearance in cylinder	0.010 – 0.040 (0.0004 – 0.0016)	0.05 (0.002)	
	Groove width (for ring)	Top	1.020 – 1.030 (0.0402 – 0.0406)	1.05 (0.041)
		Second	1.220 – 1.230 (0.0480 – 0.0484)	1.25 (0.049)
Piston ring	Ring-to-groove clearance	Top	0.035 – 0.060 (0.0014 – 0.0024)	
		Second	0.030 – 0.055 (0.0012 – 0.0022)	
	Ring end gap	Top	0.15 – 0.30 (0.006 – 0.012)	0.60 (0.024)
		Second	0.30 – 0.45 (0.012 – 0.018)	0.70 (0.028)
	Oil	0.20 – 0.70 (0.008 – 0.028)	0.80 (0.031)	
Piston pin	O.D.	18.994 – 19.000 (0.7478 – 0.7480)	—	
	Pin-to-piston clearance	0.010 – 0.022 (0.0004 – 0.0009)	—	
Connecting rod	Pin-to-rod interference	0.014 – 0.040 (0.0006 – 0.0016)	—	
	Small end bore diameter	18.96 – 18.98 (0.746 – 0.747)	—	
	Large end bore diameter Nominal	48.0 (1.89)	—	
	End play installed on crankshaft	0.15 – 0.30 (0.006 – 0.012)	0.40 (0.016)	
Crankshaft	Main journal diameter	54.976 – 55.000 (2.1644 – 2.1654)	—	
	Rod journal diameter	44.976 – 45.000 (1.7707 – 1.7717)	—	
	Taper	0.0025 (0.0001) max.	0.005 (0.0002)	
	Out-of-round	0.0025 (0.0001) max.	0.005 (0.0002)	
	End play	0.10 – 0.35 (0.004 – 0.014)	0.45 (0.018)	
Bearings	Main bearing-to-journal oil clearance	No. 1 and 5 journals	0.018 – 0.036 (0.0007 – 0.0014)	
		No. 2, 3 and 4 journals	0.024 – 0.042 (0.0009 – 0.0017)	
	Rod bearing-to-journal oil clearance		0.020 – 0.038 (0.0008 – 0.0015)	0.05 (0.002)
				0.05 (0.002)

Engine Lubrication — Section 8

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Engine oil	Capacity ℓ (US qt, Imp qt)	D16Y7	4.3 (4.5, 3.8) for engine overhaul 3.6 (3.8, 3.2) for oil change, including filter 3.3 (3.5, 2.9) for oil change, without filter
		D16Y5, D16Y8	3.7 (3.9, 3.3) for engine overhaul 3.3 (3.5, 2.9) for oil change, including filter 3.0 (3.2, 2.6) for oil change, without filter
Oil pump	Inner-to-outer rotor radial clearance	0.02 – 0.14 (0.001 – 0.006)	0.20 (0.008)
	Pump housing-to-outer rotor radial clearance	0.10 – 0.18 (0.004 – 0.007)	0.20 (0.008)
	Pump housing-to rotor axial clearance	0.03 – 0.08 (0.001 – 0.003)	0.15 (0.006)
Relief valve	Pressure setting with oil temperature 176°F (80°C) kPa (kgf/cm ² , psi)	at idle at 3,000 rpm	70 (0.7, 10) min. 340 (3.5, 50) min.

Standards and Service Limits

Cooling — Section 10

		MEASUREMENT	STANDARD (NEW)
Radiator	Engine coolant capacity ℓ (US qt, Imp qt) including engine, heater, cooling line and reservoir. Reservoir capacity: 0.4 ℓ (0.42 US qt, 0.35 Imp qt)	M/T	4.2 (4.4, 3.7) for overhaul
		A/T	3.1 (3.3, 2.7) for coolant change D16Y7
		CVT	4.1 (4.3, 3.6) for overhaul 3.0 (3.2, 2.6) for coolant change D16Y8 4.3 (4.5, 3.8) for overhaul 3.2 (3.3, 2.8) for coolant change 4.3 (4.5, 3.8) for overhaul 3.2 (3.3, 2.8) for coolant change
Radiator cap	Opening pressure	kPa (kgf/cm ² , psi)	93 – 123 (0.95 – 1.25, 13.5 – 17.8)
Thermostat	Start to opening	°F (°C)	169 – 176 (76 – 80)
	Fully open	°F (°C)	194 (90)
	Valve lift at fully open		8.0 (0.31) min.
Cooling fan	Thermostat "ON" temperature	°F (°C)	196 – 203 (91 – 95)
	Thermostat "OFF" temperature	°F (°C)	Subtract 5 – 15 (3 – 8) from actual "ON" temperature

Fuel and Emission — Section 11

		MEASUREMENT	STANDARD (NEW)				
Fuel pressure regulator	Pressure with fuel pressure regulator vacuum hose disconnected	kPa (kgf/cm ² , psi)	260 – 310 (2.7 – 3.2, 38 – 46)				
Fuel tank	Capacity	ℓ (US gal, Imp gal)	45 (11.9, 9.9)				
Engine	Idle speed	rpm	M/T (neutral)		A/T or CVT (N or P position)		
			U.S.A.	Canada	U.S.A.	Canada	
			D16Y5	670 ± 50	—	700 ± 50	—
			D16Y7	670 ± 50	750 ± 50	700 ± 50	750 ± 50
	D16Y8	670 ± 50	750 ± 50	700 ± 50	750 ± 50		
	Idle CO	%	0.1 max.				

Clutch — Section 12



		MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Clutch pedal	Pedal height	to floor	165 (6 1/2)	—
	Stroke		130 – 140 (5 1/8 – 5 1/2)	—
	Pedal play		12 – 21 (1/2 – 13/16)	—
	Disengagement height	to floor to carpet	83 (3 1/4) 44 (1 3/4) min. Reference	— —
Flywheel	Clutch surface runout		0.05 (0.002) max.	0.15 (0.006)
Clutch disc	Rivet head depth		1.3 – 1.9 (0.05 – 0.07)	0.2 (0.01)
	Thickness		8.5 – 9.1 (0.33 – 0.36)	5.5 (0.22)
Pressure plate	Warpage		0.03 (0.001) max.	0.15 (0.006)
	Diaphragm spring fingers alignment		0.6 (0.02) max.	1.0 (0.04)

Manual Transmission — Section 13

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission oil	Capacity ℓ (US qt, Imp qt)	1.9 (2.0, 1.7) for overhaul 1.8 (1.9, 1.6) for oil change	
Mainshaft	End play	0.11 – 0.18 (0.004 – 0.007)	Adjust 21.930 (0.8634)
	Diameter of ball bearing contact area A (Transmission housing side)	21.987 – 22.000 (0.8656 – 0.8661)	
	Diameter of 4th, 5th gear contact area B	26.980 – 26.993 (1.0622 – 1.0627)	26.930 (1.0602)
	Diameter of 3rd gear contact area C	33.984 – 34.000 (1.3380 – 1.3386)	33.930 (1.3358)
	Diameter of ball bearing contact area D (Clutch housing side)	25.977 – 25.990 (1.0227 – 1.0232)	25.920 (1.0205)
	Runout	0.02 (0.001) max.	0.05 (0.002)
Mainshaft 3rd and 4th gears	I.D.	39.009 – 39.025 (1.5358 – 1.5364)	39.07 (1.538)
	End play	0.06 – 0.21 (0.002 – 0.008)	0.33 (0.013)
		3rd 0.06 – 0.19 (0.002 – 0.007)	0.31 (0.012)
	Thickness	3rd 30.22 – 30.27 (1.190 – 1.192) 4th 30.12 – 30.17 (1.186 – 1.188)	30.15 (1.187) 30.05 (1.183)
Mainshaft 5th gear	I.D.	37.009 – 37.025 (1.4570 – 1.4577)	37.07 (1.459)
	End play	0.06 – 0.19 (0.002 – 0.007)	0.31 (0.012)
	Thickness	28.42 – 28.47 (1.119 – 1.121)	28.35 (1.116)
Countershaft	Diameter of needle bearing contact area A	30.000 – 30.015 (1.1811 – 1.1817)	29.950 (1.1791)
	Diameter of 1st gear contact area B	35.984 – 36.000 (1.4167 – 1.4173)	35.930 (1.4146)
	Diameter of ball bearing contact area C	24.980 – 24.993 (0.9835 – 0.9840)	24.930 (0.9815)
	Runout	0.02 (0.001) max.	0.05 (0.002)
Countershaft 1st gear	I.D.	41.009 – 41.025 (1.6145 – 1.6152)	41.07 (1.617)
	End play (When tightened by the specified torque)	0.03 – 0.10 (0.001 – 0.004)	0.22 (0.009)
	Thickness	30.41 – 30.44 (1.197 – 1.198)	30.36 (1.195)
Countershaft 2nd gear	I.D.	44.009 – 44.025 (1.7326 – 1.7333)	44.07 (1.735)
	End play (When tightened by the specified torque)	0.04 – 0.12 (0.002 – 0.005)	0.24 (0.009)
	Thickness	31.91 – 31.96 (1.256 – 1.258)	31.85 (1.254)
Spacer collar (Countershaft 2nd gear)	I.D.	33.000 – 33.010 (1.2992 – 1.2996)	33.04 (1.301)
	O.D.	38.989 – 39.000 (1.5350 – 1.5354)	38.93 (1.533)
	Length	32.03 – 32.06 (1.261 – 1.262)	32.01 (1.260)
Spacer collar (Mainshaft 4th and 5th gear)	I.D.	27.002 – 27.012 (1.0631 – 1.0635)	27.06 (1.065)
	O.D.	33.989 – 34.000 (1.3381 – 1.3386)	33.93 (1.336)
		4th 31.989 – 32.000 (1.2594 – 1.2598)	31.93 (1.257)
	Length	4th 22.83 – 22.86 (0.899 – 0.900)	22.81 (0.898)
		5th 23.53 – 23.56 (0.926 – 0.928)	23.51 (0.926)
Reverse idler gear	I.D.	15.016 – 15.043 (0.5912 – 0.5922)	15.08 (0.594)
	Gear-to-reverse gear shaft clearance	0.032 – 0.077 (0.0013 – 0.0030)	0.14 (0.006)
Synchro ring	Ring-to-gear clearance (Ring pushed against gear)	0.73 – 1.18 (0.029 – 0.046)	0.4 (0.016)
Shift fork	Fork finger thickness	1st/2nd 6.2 – 6.4 (0.244 – 0.252) 3rd/4th 7.4 – 7.6 (0.291 – 0.299)	—
	Fork-to-synchro sleeve clearance	0.35 – 0.65 (0.014 – 0.026)	1.0 (0.04)
Reverse shift fork	Fork pawl groove width	12.7 – 13.0 (0.50 – 0.51)	—
	Fork-to-reverse idler gear clearance	0.5 – 1.1 (0.020 – 0.043)	1.8 (0.07)
	L-groove width	7.15 – 7.35 (0.281 – 0.289)	—
	Fork-to-5th/reverse shift piece pin clearance	0.05 – 0.35 (0.002 – 0.014)	0.5 (0.02)
Shift arm A	Inner diameter of shift arm C contact point	13.05 – 13.13 (0.514 – 0.517)	—
	Shift arm A-to-shift arm C clearance	0.05 – 0.23 (0.002 – 0.009)	0.35 (0.014)
Shift arm B	Inner diameter of shift arm B shaft contact point	13.973 – 14.000 (0.5501 – 0.5512)	—
	Shift arm B-to-shaft clearance	0.013 – 0.070 (0.0005 – 0.0028)	0.16 (0.006)
	Shift arm B-to-shift piece clearance	0.2 – 0.5 (0.008 – 0.020)	0.62 (0.0244)
	Diameter of shift piece contact point	12.9 – 13.0 (0.508 – 0.512)	12.78 (0.5031)
Final driven gear	Backlash	0.07 – 0.130 (0.0028 – 0.0051)	0.180 (0.0071)
Differential carrier	Pinion shaft bore diameter	18.010 – 18.028 (0.7091 – 0.7098)	—
	Carrier-to-pinion shaft clearance	0.023 – 0.057 (0.0009 – 0.0022)	0.095 (0.004)
	Driveshaft bore diameter	26.025 – 26.045 (1.0246 – 1.0254)	—
	Carrier-to-driveshaft clearance	0.045 – 0.086 (0.0018 – 0.0034)	0.14 (0.006)
Differential pinion gear	Backlash	0.05 – 0.15 (0.002 – 0.006)	—
	Pinion gear bore diameter	18.042 – 18.066 (0.71103 – 0.7113)	—
	Pinion gear-to-pinion shaft clearance	0.055 – 0.095 (0.0021 – 0.0037)	0.15 (0.006)
Set ring-to-bearing outer race		0 – 0.1 (0 – 0.004)	Adjust with shim

Standards and Service Limits

Automatic Transmission — Section 14

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Transmission fluid	Capacity ℓ (US qt, Imp qt)		5.9 (6.2, 5.2) for overhaul 2.7 (2.9, 2.4) for fluid change	
Hydraulic pressure kPa (kgf/cm ² , psi)	Line pressure at 2,000 rpm in N or P position		830 – 880 (8.5 – 9.0, 120 – 130)	780 (8.0, 110)
	1st clutch pressure at 2,000 rpm in D₄ position		800 – 850 (8.2 – 8.7, 120 – 124) with linear solenoid connector disconnected 0 – 150 (0 – 1.5, 0 – 21) with linear solenoid connected to battery voltage	760 (7.7, 110) with linear solenoid connector disconnected 150 (1.5, 21) with linear solenoid connected to battery voltage
	2nd clutch pressure at 2,000 rpm in D₄ position			
	3rd and 4th clutch pressure at 2,000 rpm in D₄ position		810 – 860 (8.3 – 8.8, 118 – 125) with linear solenoid connector disconnected 0 – 150 (0 – 1.5, 0 – 21) with linear solenoid connected to battery voltage	760 (7.8, 111) with linear solenoid connector disconnected 150 (1.5, 21) with linear solenoid connected to battery voltage
Stall speed rpm (Check with vehicle on level ground)			2,700	2,550 – 2,850
Clutch	Clutch initial clearance	1st, 2nd 3rd, 4th	0.65 – 0.85 (0.026 – 0.033) 0.40 – 0.60 (0.016 – 0.024)	—
	Clutch return spring free length (A4RA, B4RA Transmission)	1st	32.0 (1.26)	30.0 (1.18)
		2nd, 3rd, 4th	30.5 (1.20)	28.5 (1.12)
	(M4RA Transmission)	1st	31.1 (1.22)	29.1 (1.15)
		2nd, 3rd, 4th	30.5 (1.20)	28.5 (1.12)
	Clutch disc thickness		1.88 – 2.00 (0.074 – 0.079)	Until grooves worn out
	Clutch plate thickness	1st 2nd, 3rd, 4th	1.55 – 1.65 (0.061 – 0.065) 1.95 – 2.05 (0.077 – 0.081)	Discoloration
	Clutch end plate thickness (A4RA, B4RA Transmission)	Mark 1	2.05 – 2.10 (0.081 – 0.083)	 Discoloration
		Mark 2	2.15 – 2.20 (0.085 – 0.087)	
		Mark 3	2.25 – 2.30 (0.089 – 0.091)	
Mark 4		2.35 – 2.40 (0.093 – 0.094)		
Mark 5		2.45 – 2.50 (0.096 – 0.098)		
Mark 6		2.55 – 2.60 (0.100 – 0.102)		
Mark 7		2.65 – 2.70 (0.104 – 0.106)		
Mark 8		2.75 – 2.80 (0.108 – 0.110)		
Mark 9		2.85 – 2.90 (0.112 – 0.114)		
Clutch end plate thickness (M4RA Transmission)	Mark 1	2.3 – 2.4 (0.091 – 0.094)	 Discoloration	
	Mark 2	2.4 – 2.5 (0.094 – 0.098)		
	Mark 3	2.5 – 2.6 (0.098 – 0.102)		
	Mark 4	2.6 – 2.7 (0.102 – 0.106)		
	Mark 5	2.7 – 2.8 (0.106 – 0.110)		
	Mark 6	2.8 – 2.9 (0.110 – 0.114)		
	Mark 7	2.9 – 3.0 (0.114 – 0.118)		
	Mark 8	3.0 – 3.1 (0.118 – 0.122)		
	Mark 9	3.1 – 3.2 (0.122 – 0.126)		
	Mark 10	3.2 – 3.3 (0.126 – 0.130)		
	Mark 11	2.0 – 2.1 (0.079 – 0.083)		
	Mark 12	2.1 – 2.2 (0.083 – 0.087)		
	Mark 13	2.2 – 2.3 (0.087 – 0.091)		
	Mark 14	3.3 – 3.4 (0.130 – 0.134)		
	Mark 15	3.4 – 3.5 (0.134 – 0.138)		
	Mark 16	3.5 – 3.6 (0.138 – 0.142)		
	Mark 17	3.6 – 3.7 (0.142 – 0.146)		
Mark 18	3.7 – 3.8 (0.146 – 0.150)			

Automatic Transmission — Section 14

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission	Diameter of needle bearing contact area		
	On mainshaft stator shaft bearing	22.980 – 22.993 (0.9047 – 0.9052)	Wear or damage ↑ ↓
	On mainshaft 2nd gear	35.975 – 35.991 (1.4163 – 1.4169)	
	On mainshaft 4th gear collar	31.975 – 31.991 (1.2589 – 1.2595)	
	On mainshaft 1st gear collar	30.975 – 30.991 (1.2195 – 1.2201)	
	On countershaft (left side)	36.004 – 36.017 (1.4175 – 1.4180)	
	On countershaft 3rd gear collar	35.980 – 35.996 (1.4165 – 1.4172)	
	On countershaft 4th gear	27.980 – 27.993 (1.1016 – 1.1021)	
	On countershaft reverse gear collar	31.975 – 31.991 (1.2589 – 1.2595)	
	On countershaft 1st gear collar	31.975 – 31.991 (1.2589 – 1.2595)	
	On reverse idler gear shaft	13.990 – 14.000 (0.5508 – 0.5512)	
	Inside diameter of needle bearing contact area		Wear or damage ↑ ↓
	On mainshaft 1st gear	35.000 – 35.016 (1.3780 – 1.3786)	
	On mainshaft 2nd gear	41.000 – 41.016 (1.6142 – 1.6148)	
	On mainshaft 4th gear	38.000 – 38.016 (1.4961 – 1.4967)	
	On countershaft 1st gear	38.000 – 38.016 (1.4961 – 1.4967)	
	On countershaft 3rd gear	41.000 – 41.016 (1.6142 – 1.6148)	
	On countershaft 4th gear	33.000 – 33.016 (1.2992 – 1.2998)	
	On countershaft reverse gear	38.000 – 38.016 (1.4961 – 1.4967)	
	On reverse idler gear	18.007 – 18.020 (0.7089 – 0.7094)	
	On stator shaft (ATF pump side)	29.000 – 29.013 (1.1417 – 1.1422)	
	On stator shaft (stator side)	27.000 – 27.021 (1.0630 – 1.0638)	Wear or damage
	Reverse idler gear shaft holder I.D.	14.416 – 14.434 (0.5676 – 0.5683)	
	End play		
	Mainshaft 1st gear	0.08 – 0.19 (0.003 – 0.007)	—
	Mainshaft 2nd gear	0.05 – 0.13 (0.002 – 0.005)	—
	Mainshaft 4th gear	0.075 – 0.185 (0.003 – 0.007)	—
	Countershaft 1st gear	0.1 – 0.5 (0.004 – 0.020)	—
	Countershaft 3rd gear	0.05 – 0.17 (0.002 – 0.007)	—
	Countershaft 4th gear	0.10 – 0.18 (0.004 – 0.007)	—
	Reverse idler gear	0.05 – 0.18 (0.002 – 0.007)	—
	Countershaft reverse gear	0.10 – 0.25 (0.004 – 0.010)	—
	Selector hub O.D.	51.87 – 51.90 (2.042 – 2.043)	Wear or damage
Mainshaft 4th gear collar length	45.00 – 45.03 (1.771 – 1.773)	—	
Mainshaft 4th gear collar flange thickness	4.435 – 4.525 (0.1746 – 0.1781)	Wear or damage	
Mainshaft 1st gear collar length	27.00 – 27.15 (1.063 – 1.069)	—	
Countershaft distance collar length	38.87 – 38.90 (1.530 – 1.531) 38.92 – 38.95 (1.532 – 1.533) 38.97 – 39.00 (1.534 – 1.535) 39.02 – 39.05 (1.536 – 1.537) 39.07 – 39.10 (1.538 – 1.539) 39.12 – 39.15 (1.540 – 1.541) 39.17 – 39.20 (1.542 – 1.543) 39.22 – 39.25 (1.544 – 1.545) 39.27 – 39.30 (1.546 – 1.547)	— — — — — — — — —	
Countershaft 3rd gear collar length '96, '97 models	21.15 – 21.20 (0.833 – 0.835)	—	
'98 model	20.65 – 20.70 (0.813 – 0.825)	—	
Countershaft reverse gear collar length	14.5 – 14.6 (0.571 – 0.575)	—	
Countershaft reverse gear collar flange thickness	2.4 – 2.6 (0.094 – 0.102)	Wear or damage	
Countershaft 1st gear collar length	14.5 – 14.6 (0.571 – 0.575)	—	
Countershaft 1st gear collar flange thickness	2.4 – 2.6 (0.094 – 0.102)	Wear or damage	

(cont'd)

Standards and Service Limits

Automatic Transmission (cont'd) — Section 14

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission	Mainshaft 2nd gear thrust washer thickness	3.97 – 4.00 (0.156 – 0.157) 4.02 – 4.05 (0.158 – 0.159) 4.07 – 4.10 (0.160 – 0.161) 4.12 – 4.15 (0.162 – 0.163) 4.17 – 4.20 (0.164 – 0.165) 4.22 – 4.25 (0.166 – 0.167) 4.27 – 4.30 (0.168 – 0.169) 4.32 – 4.35 (0.170 – 0.171) 4.37 – 4.40 (0.172 – 0.173) 4.42 – 4.45 (0.174 – 0.175)	↑ Wear or damage ↓ Wear or damage
	Thrust washer thickness Mainshaft ball bearing left side Mainshaft 1st gear Countershaft 3rd gear splined washer '96, '97 models '98 model	2.95 – 3.05 (0.116 – 0.120) 2.43 – 2.50 (0.096 – 0.098) 4.45 – 4.50 (0.175 – 0.177) 4.95 – 5.00 (0.195 – 0.197)	↑ Wear or damage ↓ Wear or damage
	One-way clutch contact area Countershaft 1st gear I.D. Parking gear O.D. Mainshaft feed pipe A, O.D. (at 15 mm (0.59 in) from end) Mainshaft feed pipe B, O.D. (at 30 mm (1.2 in) from end) Countershaft feed pipe O.D. (at 15 mm (0.59 in) from end) Mainshaft sealing ring thickness (29 mm (1.1 in) and 35 mm (1.4 in)) Mainshaft bushing I.D. Mainshaft bushing I.D. Countershaft bushing I.D. Mainshaft sealing ring groove width	83.339 – 83.365 (3.2810 – 3.2821) 66.685 – 66.698 (2.6254 – 2.6259) 8.97 – 8.98 (0.353 – 0.354) 5.97 – 5.98 (0.2350 – 0.2354) 7.97 – 7.98 (0.3138 – 0.3142) 1.87 – 1.97 (0.074 – 0.078) 6.018 – 6.030 (0.2369 – 0.2374) 9.000 – 9.015 (0.3543 – 0.3549) 8.000 – 8.015 (0.3150 – 0.3156) 2.025 – 2.075 (0.0797 – 0.0817)	Wear or damage Wear or damage 8.95 (0.352) 5.95 (0.234) 7.95 (0.313) 1.80 (0.071) 6.045 (0.2380) 9.03 (0.356) 8.03 (0.316) 2.08 (0.082)
Regulator valve body	Sealing ring contact area I.D.	35.000 – 35.025 (1.3780 – 1.3782)	35.050 (1.3799)
Shifting device and parking brake control	Reverse shift fork finger thickness Parking brake pawl Parking gear	5.90 – 6.00 (0.232 – 0.236) — —	5.40 (0.213) Wear or other defect
Servo body	Shift fork shaft bore I.D. Shift fork shaft valve bore I.D.	14.000 – 14.010 (0.5512 – 0.5516) 37.000 – 37.039 (1.4567 – 1.4582)	— 37.045 (1.4585)
ATF pump	ATF pump gear side clearance	0.03 – 0.05 (0.001 – 0.002)	0.07 (0.003)
	ATF pump gear-to-body clearance	Drive Driven 0.1050 – 0.1325 (0.0041 – 0.0052) 0.0350 – 0.0625 (0.0014 – 0.0025)	— —
	ATF pump driven gear I.D. ATF pump driven gear shaft O.D.	14.016 – 14.034 (0.5518 – 0.5525) 13.980 – 13.990 (0.5504 – 0.5508)	Wear or damage Wear or damage
Differential carrier	Pinion shaft contact area I.D. Carrier-to-pinion clearance	18.010 – 18.028 (0.7091 – 0.7098) 0.023 – 0.057 (0.0009 – 0.0022)	— 0.1 (0.004)
	Driveshaft contact area I.D. Carrier-to-driveshaft clearance	26.025 – 26.045 (1.0246 – 1.0254) 0.045 – 0.086 (0.0018 – 0.0034)	— 0.12 (0.005)
Differential pinion gear	Backlash	0.05 – 0.15 (0.002 – 0.006)	—
	I.D. Pinion gear-to-pinion shaft clearance	18.042 – 18.066 (0.7103 – 0.7113) 0.055 – 0.095 (0.0022 – 0.0037)	— 0.15 (0.006)
	Set ring-to-bearing outer race clearance	0 – 0.15 (0 – 0.006)	Adjust

Automatic Transmission — Section 14

	MEASUREMENT	STANDARD (NEW)			
		Wire Dia.	O.D.	Free Length	No. of Coils
Springs	Regulator valve spring A	1.8 (0.071)	14.7 (0.584)	87.8 (3.457)	16.5
	Regulator valve spring B	1.8 (0.071)	9.6 (0.381)	44.0 (1.732)	11.0
	Stator reaction spring	4.5 (0.177)	35.4 (1.407)	30.3 (1.193)	1.9
	Modulator valve spring	1.4 (0.055)	9.4 (0.374)	35.0 (1.378)	10.9
	Torque converter check valve spring	1.0 (0.039)	8.4 (0.334)	33.8 (1.331)	8.2
	Cooler relief valve spring	1.0 (0.039)	8.4 (0.334)	33.8 (1.331)	8.2
	Relief valve spring	1.1 (0.043)	8.6 (0.342)	37.1 (1.461)	13.4
	2nd orifice control valve spring	0.7 (0.028)	6.6 (0.262)	34.8 (1.370)	22.0
	1-2 shift valve spring	0.9 (0.035)	7.6 (0.302)	41.3 (1.626)	16.3
	2-3 shift valve spring	0.9 (0.035)	7.6 (0.302)	57.0 (2.244)	26.8
	3-4 shift valve spring	0.9 (0.035)	7.6 (0.302)	57.0 (2.244)	26.8
	1st accumulator spring	2.1 (0.083)	16.0 (0.636)	89.1 (3.508)	16.2
	4th accumulator spring B	2.3 (0.091)	10.2 (0.402)	51.6 (2.031)	13.8
	4th accumulator spring A	2.6 (0.102)	17.0 (0.676)	87.0 (3.425)	14.2
	2nd accumulator spring A	2.4 (0.094)	29.0 (1.152)	39.0 (1.535)	2.9
	3rd accumulator spring A	2.8 (0.110)	17.5 (0.695)	89.3 (3.516)	15.6
	2nd accumulator spring B	1.6 (0.063)	9.0 (0.358)	20.7 (0.815)	6.1
	3rd accumulator spring B	2.2 (0.087)	31.0 (1.220)	35.1 (1.382)	2.4
	2nd accumulator spring C	2.2 (0.087)	14.5 (0.576)	68.0 (2.677)	13.9
	Lock-up shift valve spring	0.9 (0.035)	7.6 (0.302)	73.7 (2.902)	32.0
	Lock-up timing valve spring	0.9 (0.035)	8.1 (0.319)	80.7 (3.177)	45.8
	Lock-up control valve spring	0.7 (0.028)	6.6 (0.262)	38.0 (1.496)	14.1
	3-4 orifice control valve spring	0.7 (0.028)	6.6 (0.262)	37.5 (1.476)	24.6
	Servo control valve spring	1.0 (0.039)	8.1 (0.322)	52.1 (2.051)	20.8
	CPC valve spring	0.6 (0.024)	5.6 (0.223)	12.2 (0.480)	5.5
	CPB valve spring	0.9 (0.035)	8.1 (0.322)	47.2 (1.858)	18.3
4th exhaust valve spring	0.9 (0.035)	6.1 (0.242)	36.4 (1.433)	19.5	





CVT — Section 14

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT	
Transmission fluid	Capacity ℓ (US qt, Imp. qt)	6.4 (6.8, 5.6) for overhaul 3.9 (4.1, 3.4) for fluid change		
Hydraulic pressure MPa (kgf/cm ² , psi)	Forward clutch pressure at 1,500 rpm in D position	1.4 – 1.75 (14.3 – 17.8, 203 – 253)		
	Reverse brake pressure at 1,500 rpm in R position	1.4 – 1.75 (14.3 – 17.8, 203 – 253)		
	Drive pulley pressure at 1,500 rpm in N position	0.2 – 0.7 (2.0 – 7.1, 28 – 101)		
	Driven pulley pressure at 1,500 rpm in N position	1.5 – 2.3 (15.3 – 23.5, 218 – 334)		
	Lubrication pressure at 3,000 rpm in N position	Above 0.2 (2, 30)		
Stall speed rpm (Check with vehicle on level ground)	D position	2,500	2,350 – 2,650	
	S, L, R positions	3,000	2,800 – 3,100	
Clutch	Clutch initial clearance	Forward clutch	0.6 – 0.8 (0.024 – 0.031)	—
		Start clutch	0.5 – 0.7 (0.020 – 0.028)	—
		Reverse brake	0.45 – 0.75 (0.018 – 0.030)	—
	Clutch return spring free length	Forward clutch	30.5 (1.201)	28.5 (1.122)
		Start clutch	40.9 (1.610)	38.9 (1.531)
		Reverse brake	29.4 (1.157)	27.4 (1.079)
	Clutch disc thickness	Forward clutch	1.88 – 2.00 (0.074 – 0.079)	Until grooves worn out
		Start clutch	1.88 – 2.00 (0.074 – 0.079)	—
		Reverse brake	1.94 – 2.06 (0.076 – 0.081)	Until grooves worn out
	Clutch plate thickness	Forward clutch	1.95 – 2.05 (0.077 – 0.081)	Discoloration
		Start clutch	2.25 – 2.35 (0.089 – 0.093)	Discoloration
		Reverse brake	1.90 – 2.00 (0.075 – 0.079)	Discoloration

(cont'd)

Standards and Service Limits

CVT (cont'd) — Section 14

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Clutch	Forward clutch end plate thickness	Mark 1 or 15 3.4 – 3.5 (0.134 – 0.138) Mark 2 or 16 3.5 – 3.6 (0.138 – 0.142) Mark 3 or 17 3.6 – 3.7 (0.142 – 0.146) Mark 4 or 18 3.7 – 3.8 (0.146 – 0.150) Mark 5 or 19 3.8 – 3.9 (0.150 – 0.154) Mark 6 or 20 3.9 – 4.0 (0.154 – 0.157) Mark 7 or 21 4.0 – 4.1 (0.157 – 0.161) Mark 8 or 22 4.1 – 4.2 (0.161 – 0.165) Mark 9 or 23 4.2 – 4.3 (0.165 – 0.169) Mark 10 or 24 4.3 – 4.4 (0.169 – 0.173) Mark 11 or 25 4.4 – 4.5 (0.173 – 0.177) Mark 12 or 26 4.5 – 4.6 (0.177 – 0.181) Mark 13 or 27 4.6 – 4.7 (0.181 – 0.185)	Discoloration   Discoloration
	Reverse brake end plate thickness	Mark 1 3.55 – 3.65 (0.140 – 0.144) Mark 2 3.75 – 3.85 (0.148 – 0.152) Mark 3 3.95 – 4.05 (0.156 – 0.159) Mark 4 4.15 – 4.25 (0.163 – 0.167) Mark 5 4.35 – 4.45 (0.171 – 0.175) Mark 6 4.55 – 4.65 (0.179 – 0.183) Mark 7 4.75 – 4.85 (0.187 – 0.191) Mark 8 4.95 – 5.05 (0.195 – 0.199)	Discoloration   Discoloration
ATF pump	ATF pump drive gear shaft O.D.	9.98 – 9.99 (0.3929 – 0.3933)	Wear or damaged
	ATF pump driven gear shaft O.D.	9.98 – 9.99 (0.3929 – 0.3933)	
	ATF pump body bushing I.D.	10.000 – 10.015 (0.3937 – 0.3943)	Wear or damaged
	ATF pump gear side clearance	0.015 – 0.035 (0.0006 – 0.0014)	
	ATF pump gear-to-body clearance	0.035 – 0.0505 (0.0014 – 0.0020)	0.050 (0.002)
		0.035 – 0.0505 (0.0014 – 0.0020)	
Transmission	Diameter of needle bearing contact are		
	Input shaft – flywheel side	19.987 – 20.000 (0.7869 – 0.7874)	Wear or damaged
	Input shaft – forward clutch side	19.987 – 20.000 (0.7869 – 0.7874)	Wear or damaged
	Drive pulley shaft – start clutch side	43.981 – 43.991 (1.7315 – 1.7319)	Wear or damaged
	Drive pulley shaft – flywheel side	24.007 – 24.020 (0.945 – 0.946)	Wear or damaged
	Drive pulley shaft – forward clutch side	24.007 – 24.020 (0.945 – 0.946)	Wear or damaged
	Thrust clearance		
	Carrier and ring gear	0.050 – 0.110 (0.0020 – 0.0043)	—
	Driven pulley shaft and start clutch hub	0.000 – 0.130 (0.000 – 0.005)	—
	Input shaft and ATF pump driven sprocket	0.370 – 0.650 (0.015 – 0.026)	—
Secondary gear shaft and flywheel ball bearing	0.00 – 0.15 (0.00 – 0.006)	—	

— CVT — Section 14 —

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission cont'd)	Thrust shim, 25 x 31 mm thickness	1.02 - 1.05 (0.040 - 0.041)	Wear or damaged ↑ ↓
		1.09 - 1.12 (0.043 - 0.044)	
		1.16 - 1.19 (0.046 - 0.047)	
		1.23 - 1.26 (0.048 - 0.050)	
		1.30 - 1.33 (0.051 - 0.052)	
		1.37 - 1.40 (0.054 - 0.055)	
		1.44 - 1.47 (0.057 - 0.058)	
		1.51 - 1.54 (0.059 - 0.061)	
		1.58 - 1.61 (0.062 - 0.063)	
		1.65 - 1.68 (0.065 - 0.066)	
		1.72 - 1.75 (0.068 - 0.069)	
		1.79 - 1.82 (0.070 - 0.072)	
		1.055 - 1.085 (0.0415 - 0.0427)	
		1.125 - 1.155 (0.0443 - 0.0454)	
		1.195 - 1.225 (0.0470 - 0.0482)	
		1.265 - 1.295 (0.0498 - 0.0510)	
		1.335 - 1.365 (0.0526 - 0.0537)	
		1.405 - 1.435 (0.0553 - 0.0565)	
		1.475 - 1.505 (0.0580 - 0.0593)	
		1.545 - 1.575 (0.0608 - 0.0620)	
		1.615 - 1.645 (0.0636 - 0.0648)	
		1.685 - 1.715 (0.0663 - 0.0675)	
		1.755 - 1.785 (0.0691 - 0.0703)	Wear or damaged
	Cotters thickness	2.87 - 2.90 (0.113 - 0.114)	Wear or damaged ↑ ↓
		2.97 - 3.00 (0.117 - 0.118)	
		3.07 - 3.10 (0.121 - 0.122)	
		3.17 - 3.20 (0.125 - 0.126)	
	ATF pump drive sprocket thrust shim, 22 x 28 mm thickness	1.12 - 1.15 (0.044 - 0.045)	Wear or damaged ↑ ↓
		1.37 - 1.40 (0.054 - 0.055)	
		1.62 - 1.65 (0.064 - 0.065)	
		1.87 - 1.90 (0.074 - 0.075)	
		2.12 - 2.15 (0.083 - 0.085)	
		2.37 - 2.40 (0.093 - 0.094)	
	Secondary gear shaft thrust shim, 25 x 35 mm thickness	2.80 - 2.85 (0.110 - 0.112)	Wear or damaged ↑ ↓
		2.90 - 2.95 (0.114 - 0.116)	
		3.00 - 3.05 (0.118 - 0.120)	
		3.10 - 3.15 (0.122 - 0.124)	
		3.20 - 3.25 (0.126 - 0.128)	
		3.30 - 3.35 (0.130 - 0.132)	
		3.40 - 3.45 (0.134 - 0.136)	
		3.50 - 3.55 (0.138 - 0.140)	
		3.60 - 3.65 (0.142 - 0.144)	
		3.70 - 3.75 (0.146 - 0.148)	
		3.80 - 3.85 (0.150 - 0.152)	
		Input shaft feed pipe O.D. Drive pulley feed pipe Forward clutch feed pipe	
	11.47 - 11.48 (0.4516 - 0.4520)		11.45 (0.451)
	Input shaft bushing I.D. Drive pulley feed pipe bushing Forward clutch feed pipe bushing	7.000 - 7.015 (0.2756 - 0.2762)	7.030 (0.277)
		11.500 - 11.518 (0.4528 - 0.4535)	11.533 (0.454)
	Driven shaft feed pipe O.D. Start clutch feed pipe (right side cover side) Driven pulley feed pipe Start clutch feed pipe (flywheel housing side)	6.97 - 6.98 (0.274 - 0.275)	6.95 (0.274)
		11.47 - 11.48 (0.4516 - 0.4520)	11.45 (0.451)
		8.97 - 8.98 (0.353 - 0.354)	8.95 (0.352)
	Driven pulley shaft bushing I.D. Start clutch feed pipe (right side cover side) Drive pulley feed pipe Start clutch feed pipe (flywheel housing side)	7.000 - 7.015 (0.2756 - 0.2762)	7.030 (0.277)
		11.500 - 11.518 (0.4528 - 0.4535)	11.533 (0.454)
		9.000 - 9.015 (0.354 - 0.355)	9.03 (0.356)
	Secondary driven gear sealing ring groove width	2.50 - 2.65 (0.098 - 0.104)	2.655 (0.105)
	Start clutch end plate I.D.	88.900 - 88.935 (3.500 - 3.501)	Wear or damaged
	Input shaft sealing ring groove width	2.00 - 2.10 (0.079 - 0.083)	2.105 (0.083)
	Drive pulley shaft I.D. at sealing ring	24.007 - 24.020 (0.945 - 0.946)	Wear or damaged
Shifting device and parking brake control	Parking brake cone	—	Wear or other defect
	Parking brake pawl	—	Wear or other defect
	Parking gear	—	Wear or other defect

(cont'd)

Standards and Service Limits

CVT (cont'd) — Section 14

MEASUREMENT		STANDARD (NEW)			SERVICE LIMIT
Differential carrier	Pinion shaft contact area I.D.	18.010 – 18.028 (0.7091 – 0.7098)			—
	Carrier-to-pinion clearance	0.023 – 0.057 (0.0009 – 0.0022)			0.1 (0.004)
	Drive shaft contact area I.D.	26.025 – 26.045 (1.0246 – 1.0254)			—
	Carrier-to-driveshaft clearance	0.045 – 0.086 (0.0018 – 0.0034)			0.12 (0.005)
Differential pinion gear	Backlash I.D.	0.05 – 0.15 (0.002 – 0.006)			—
	Pinion gear-to-pinion shaft clearance	18.042 – 18.066 (0.7103 – 0.7113)			—
		0.055 – 0.095 (0.0022 – 0.0037)			0.15 (0.006)
Set ring-to-bearing outer race clearance		0 – 0.15 (0 – 0.006)			Adjust
MEASUREMENT		Wire Dia.	O.D.	Free Length	No. of Coils
Springs	PH regulator valve spring	1.2 (0.047)	9.0 (0.354)	26.7 (1.051)	10.0
	PH control valve spring	1.7 (0.067)	13.4 (0.528)	39.4 (1.551)	8.7
	PL regulator valve spring	0.9 (0.035)	7.2 (0.283)	14.6 (0.575)	7.2
	PH-PL control valve spring	1.0 (0.039)	10.0 (0.394)	31.4 (1.236)	8.6
	Clutch reducing valve spring	1.9 (0.075)	16.8 (0.661)	44.4 (1.748)	8.0
	Lubrication valve spring	1.6 (0.063)	13.4 (0.528)	51.6 (2.031)	11.6
	Shift valve spring	1.4 (0.055)	8.2 (0.323)	34.1 (1.343)	13.0
	Shift control valve spring	1.0 (0.039)	7.4 (0.291)	19.3 (0.760)	7.5
	Start clutch control valve spring	0.4 (0.016)	4.1 (0.161)	12.1 (0.476)	6.8
	Pitot regulator valve spring	0.6 (0.024)	5.7 (0.224)	9.5 (0.374)	5.0
	Start clutch valve accumulator spring	1.2 (0.047)	8.3 (0.327)	29.8 (1.173)	12.3
	Reverse control valve spring	1.2 (0.047)	9.4 (0.370)	31.4 (1.236)	11.0
	Shift inhibitor valve spring	1.3 (0.051)	13.2 (0.520)	48.3 (1.902)	10.6

Steering — Section 17

MEASUREMENT		STANDARD (NEW)	
Steering wheel	Play at steering wheel circumference	0 – 10 (0 – 0.4)	
	Starting load at steering wheel circumference N (kgf, lbf)	15 (1.5, 3.3)	
	Manual steering Power steering	Engine running	29 (3.0, 6.6)
Gearbox	Angle of rack guide screw loosened from locked position	M/S P/S	20 ± 5° 20° Max
	Preload at pinion gear shaft N·m (kgf·cm, lbf·in)	M/S	0.5 – 1.7 (5 – 17, 4.3 – 14.8)
		P/S	0.6 – 1.2 (6 – 12, 5.20 – 10.42)
Pump	Pump pressure with valve closed (oil temp./speed: 40°C (105°F) min./idle. Do not run for more than 5 seconds). kPa (kgf/cm ² , psi)	6,400 – 7,400 (65 – 75, 920 – 1,070)	
Power steering fluid	Recommended power steering fluid	HONDA Power Steering Fluid-V or S	
	Fluid capacity ℓ (US qt, Imp qt)	Reservoir	0.85 (0.90, 0.75) at disassembly 0.4 (0.42, 0.35)
Power steering belt*	Deflection with 98 N (10 kgf, 22 lbf) between pulleys	10.5 – 14.0 (0.41 – 0.55) with used belt	
		7.5 – 10.0 (0.30 – 0.39) with new belt	
	Tension measured with belt tension gauge N (kgf, lbf)	B16A2 Engine Type only Other Engine Types B16A2 Engine Type only Other Engine Types	390 – 540 (40 – 55, 88 – 120) with used belt 340 – 490 (35 – 50, 77 – 110) with used belt 740 – 880 (75 – 90, 170 – 200) with new belt 640 – 780 (65 – 80, 143 – 176) with new belt

M/S: Manual steering, P/S: Power steering

*: When using a new belt, adjust deflection or tension to new values. Run the engine for 5 minutes then turn it off. Readjust the deflection or tension to used belt values.

Suspension — Section 18

		MEASUREMENT		STANDARD (NEW)		SERVICE LIMIT
Wheel alignment	Camber	Front		$0^{\circ}00' \pm 1^{\circ}$		_____
		Rear		$-1^{\circ} \pm 1^{\circ}$		_____
	Caster	Front		$1^{\circ}40' \pm 1^{\circ}$		_____
		Total toe	Front		In 1.0 ± 2.0 (1/16 \pm 1/16)	
		Rear		In 2.0 ± 1.8 (1/16 \pm 1/16)		_____
Front wheel turning angle	Inward wheel			$39^{\circ}50'$		_____
	Outward wheel			$33^{\circ}10'$ (Reference)		_____
Wheel	Rim runout	Aluminum wheel	Axial		$0 - 0.7$ (0 - 0.03)	2.0 (0.08)
			Radial		$0 - 0.7$ (0 - 0.03)	1.5 (0.06)
	Steel wheel	Axial		$0 - 1.0$ (0 - 0.04)	2.0 (0.08)	
		Radial		$0 - 1.0$ (0 - 0.04)	1.5 (0.06)	
Wheel bearing	End play	Front		$0 - 0.05$ (0 - 0.002)		_____
		Rear		$0 - 0.05$ (0 - 0.002)		_____

Brakes — Section 19

		MEASUREMENT		STANDARD (NEW)		SERVICE LIMIT
Parking brake lever	Play in stroke at 196 N (20 kgf, 44 lbf) lever force		To be locked when pulled 6 - 9 notches			_____
Foot brake pedal	Pedal height (with floor mat removed)	M/T		156.5 (6.16)		_____
	Free play	A/T, CVT		161 (6 5/16)		_____
Master cylinder	Piston-to-pushrod clearance		$0 - 0.4$ (0 - 0.02)			_____
	Disc brake	Disc thickness	Front		$20.9 - 21.8$ (0.82 - 0.86)	
Disc runout		Front		_____		0.10 (0.004)
		Rear			_____	
Disc parallelism		Front and rear		_____		0.015 (0.0006)
Rear brake drum	I.D.	Lining thickness	Front		$9.5 - 10.5^{*1}$	1.6 (0.06)
			Front		$8.5 - 9.5^{*2}$	1.6 (0.06)
Rear brake drum	Lining thickness			200 (7.87)		201 (7.91)
				4.0 (0.16)		2.0 (0.08)

*1. 5410 Stamped on the caliper body.

*2. 2056 Stamped on the caliper body.

Air Conditioning — Section 22

		MEASUREMENT		STANDARD (NEW)	
Air Conditioning system	Lubricant type: SP-10 (P/N 38897 - P13 - A01AH or 38899 - P13 - A01) (For refrigerant: HFC-134a (R-134a))				
	Lubricant capacity mℓ (fl oz, Imp oz)	Condenser		20 (2/3 0.7)	
		Evaporator		45 (1 2/3, 1.6)	
		Line or hose		10 (1/3, 0.4)	
	Receiver		10 (1/3, 0.4)		
Compressor	Lubricant type: SP-10				
	Lubricant capacity mℓ (fl oz, Imp oz)		$130 - 150$ (4 1/3 - 4.6, 5.0 - 5.3)		
	Field coil resistance at 68°F (20°C) Ω		3.05 - 3.35		
Pulley-to-pressure plate clearance		0.5 ± 0.15 (0.020 \pm 0.006)			
Compressor belt*	Deflection with 98 N (10 kgf, 22 lbf) between pulleys		$7.5 - 9.5$ (0.30 - 0.37) with used belt		
	Belt tension N (kgf, lbf) Measured with belt tension gauge		$5.0 - 6.5$ (0.20 - 0.26) with new belt		
		$340 - 490$ (35 - 50, 77 - 110) with used belt			
		$690 - 830$ (70 - 85, 150 - 190) with new belt			

*: When using a new belt, adjust deflection or tension to new values. Run the engine for 5 minutes then turn it off.

Readjust deflection or tension to used belt values.

Standards and Service Limits

Electrical — Section 23

		MEASUREMENT	STANDARD (NEW)	
Ignition coil	Rated voltage V		12	
	Primary winding resistance at 68°F (20°C) Ω	HITACHI TEC	0.45 – 0.55 0.63 – 0.77	
Ignition wire	Secondary winding resistance at 68°F (20°C) kΩ	HITACHI TEC	22.4 – 33.6 12.8 – 19.2	
	Resistance at 68°F (20°C) kΩ		25 max.	
Spark plug	Firing order		1 – 3 – 4 – 2	
	Type		See section 23	
Ignition timing	Gap		1.0 – 1.1 (0.043 – 0.004)	
	At idle ° BTDC (Red)		12 ± 2	
Alternator belt*	Deflection with 98 N (10 kgf, 22 lbf) between pulleys		8.0 – 10.5 (0.31 – 0.41) with used belt 6.0 – 8.5 (0.26 – 0.33) with new belt	
	Belt tension N (kgf, lbf) Measured with belt tension gauge		340 – 490 (35 – 50, 77 – 110) with used belt 540 – 740 (55 – 75, 121 – 165) with new belt	
Alternator (MITSUBISHI)	Output 13.5 V at hot A Coil resistance (rotor) at 68°F (20°C) kΩ Slip ring O.D. Brush length Brush spring tension g (oz)		STANDARD (NEW)	SERVICE LIMIT
			75	
			3.4 – 3.8	22.2 (0.87)
			22.7 (0.89)	5.0 (0.20)
			19.0 (0.75)	
Starter motor (MITSUBA 1.0 kW 1.2 kW)	Type Commutator mica depth Commutator runout Commutator O.D. Brush length Brush spring tension (new) N (kgf, lbf)		300 – 450 (10.6 – 15.9)	
			Gear reduction	
			0.4 – 0.5 (0.016 – 0.020)	0.15 (0.006)
			0 – 0.02 (0 – 0.0008)	0.05 (0.002)
			28.0 – 28.1 (1.102 – 1.106)	27.5 (1.083)
	15.8 – 16.2 (0.62 – 0.64)	11.0 (0.43)		
	15.7 – 17.7			
	(1.60 – 1.80, 3.5 – 4.0)			

*: When using a new belt, adjust deflection or tension to new values. Run the engine for 5 minutes then turn it off. Readjust deflection or tension to used belt values.

Design Specifications

Unit of length: mm (in)

	ITEM	METRIC	ENGLISH	NOTES		
DIMENSIONS	Overall Length	2-door Coupe/4-door Sedan 2-door Hatchback (1996, 1997) (1998)	4,445 mm 4,170 mm 4,180 mm	175.0 in 164.2 in 164.6 in		
	Overall Width		1,705 mm	67.1 in		
	Overall Height	2-door Coupe/2-door Hatchback 4-door Sedan	1,375 mm	54.1 in		
	Wheelbase		1,390 mm	54.7 in		
	Track	Front/Rear	2,620 mm	103.1 in		
	Ground Clearance		1,475/1,475 mm	58.1/58.1 in		
	Seating Capacity		150 mm	5.9 in		
				Five		
	WEIGHT (USA)	Gross Vehicle Weight Rating (GVWR)				
		2-door Coupe	DX, HX M/T HX A/T EX HX CVT (1996) HX CVT (1997)	— — — — —	3,290 lbs 3,330 lbs 3,440 lbs 3,220 lbs 3,330 lbs	
2-door Hatchback		CX, DX (1996, 1997) DX with ABS (1998) 5MT 4AT	— — —	3,285 lbs 3,290 lbs 3,300 lbs		
4-door Sedan		DX, LX M/T, LX A/T LX A/T with ABS, EX	— —	3,330 lbs 3,460 lbs		
WEIGHT (CANADA)		Gross Vehicle Weight Rating (GVWR)				
		2-door Coupe	DX (1996) DX (1997) Si (1996) Si (1997)	1,500 kg 1,510 kg 1,560 kg 1,570 kg	— — — —	
		2-door Hatchback	CX (1996), CX-G (1996) CX (1997), CX-G (1997) CX (1998), DX (1998)	1,495 kg 1,505 kg 1,510 kg	— — —	
		4-door Sedan	LX, EX M/T EX A/T	1,510 kg 1,540 kg	— —	
		ENGINE	Type		Water-cooled, 4-stroke SOHC* ² , SOHC VTEC* ³ , SOHC VTEC-E* ⁴ gasoline engine	* ² : D16Y7 * ³ : D16Y8 * ⁴ : D16Y5
			Cylinder Arrangement		Inline 4-cylinder, transverse	
	Bore and Stroke			75.0 x 90.0 mm	2.95 x 3.54 in	
	Displacement			1,590 cm ³ (ml)	97.0 cu-in	
	Compression Ratio		D16Y7, D16Y5 D16Y8		9.4 9.6	
	Valve Train			Belt driven, SOHC 4 valve per cylinder		
Lubrication System			Forced and wet sump, trochoid pump			
Oil Pump Displacement at 6,800 engine rpm			33.4 l (35.3 US qt, 29.4 Imp qt)/minute			
Water Pump Displacement at 6,000 engine rpm			125 l (132 US qt, 110 Imp qt)/minute			
Fuel Required			UNLEADED gasoline with 86 Pump Octane Number or higher			
STARTER	Type/Make		Gear reduction/MITSUBA			
	Normal Output		1.0 kW, 1.2 kW			
	Nominal Voltage		12 V			
	Hour Rating		30 seconds			
	Direction of Rotation		Clockwise as viewed from gear end			

(cont'd)

Design Specifications

(cont'd)

	ITEM	METRIC	ENGLISH	NOTES		
STARTER (cont'd)	Weight	MITSUBA 1.0, 1.2 kW	3.4 kg	7.5 lbf		
CLUTCH	Clutch Type	M/T A/T CVT	Single plate dry, diaphragm spring Torque converter			
	Clutch Facing Area	M/T	160 cm ²	25 sq-in		
TRANSMISSION	Transmission Type	M/T A/T CVT	Synchronized 5-speed forward, 1 reverse 4-speed automatic, 1 reverse Non-stage speed forward, 1 reverse Direct 1 : 1			
	Primary Reduction		Direct 1 : 1			
TRANSMISSION	Manual transmission		Engine type			
			D16Y5	D16Y7	D16Y8	
	Gear Ratio	1st	3.250	3.250	3.250	*1: 2-door Hatch back *2: 2-door Coupe, and 4-door Sedan
		2nd	1.782	1.782	1.909	
		3rd	1.172	1.172	1.250	
		4th	0.909	0.909	0.909	
		5th	0.702	0.702	0.702	
		Reverse	3.153	3.153	3.153	
	Final Reduction	Gear ratio	3.722	3.722*/4.058*2	4.250	
		Gear type	Single helical gear			
	Automatic transmission		Engine type			
			D16Y7	D16Y8		
	Gear Ratio	1st	2.600	2.722		
		2nd	1.468	1.516		
		3rd	0.926	0.975		
		4th	0.638	0.638		
		Reverse	1.954	1.954		
Final Reduction		Gear ratio	4.357	4.357		
	Gear type	Single helical gear				
CVT						
Gear Ratio	Low - O.D.	2.466 - 0.449				
	Reverse	2.466				
Secondary Reduction Gear Ratio		1.333				
Final Reduction Gear Ratio		4.357				
AIR CONDITIONING	Cooling Capacity		3,530 Kcal/h	14,000 BTU/h		
	Compressor	Type/Make	Scroll/SANDEN		SP-10	
		No. of Cylinder	—			
		Capacity	85.7 ml/rev	5.22 cu-in/rev		
		Max. Speed	10,000 rpm			
	Lubricant Capacity	130 ml	4 1/3 fl oz, 4.6 Imp oz			
	Condenser	Type	Corrugated fin			
	Evaporator	Type	Corrugated fin			
	Blower	Type	Sirocco fan			
		Motor Input	200 W/12 V			
Speed Control		4-speed variable				
Max. Capacity	460 m ³ /h	16,200 cu-ft/h				
Temperature Control		Air-mix type				
Compressor Clutch	Type	Dry, single plate, poly-V-belt drive				
	Power Consumption	40 W max./12 V at 68°F (20°C)				
Refrigerant	Type	HFC-134a (R-134a)				
	Quantity	650 $\frac{0}{50}$ g	22.9 $\frac{0}{18}$ oz			


	ITEM		METRIC	ENGLISH	NOTES
STEERING SYSTEM	Type	P/S M/S	Power assisted, rack and pinion Rack and pinion P/S: 17.7, M/S: 20.3 P/S: 3.6, M/S: 4.1		
	Overall Ratio		380 mm	15 in	
SUSPENSION	Type	Front and Rear	Independent double wishbone, coil spring		
	Shock Absorber	Front and Rear	Telescopic, hydraulic nitrogen gas-filled		
WHEEL ALIGNMENT	Camber	Front Rear	0°00' -1°		
	Caster	Front	1°40'		
	Total Toe	Front Rear	In 1.0 mm In 2.0 mm	1/16 in In 1/16 in	
BRAKE SYSTEM	Type	Front	Power-assisted self-adjusting ventilated disc		
	Pad Surface Area	Rear Front	Power-assisted self-adjusting solid disc 37.5 cm ² x 2	5.8 sq-in x 2	Unit: mm (in) 5410 Stamped on the caliper body 2056 Stamped on the caliper body Drum I.D.: 200 (7.9) Drum I.D.: 180 (7.1)
			44.1 cm ² x 2	6.84 sq-in x 2	
		Rear	67.2 cm ² x 2	10.4 sq-in x 2	
	Parking Brake	Type	50.2 cm ² x 2	7.8 sq-in x 2	
			Mechanical actuating, rear two wheel brakes		
TIRE	Size	Front and Rear	2-door Coupe 2-door Hatchback 4-door Sedan		
	Spare Tire		P175/70R13 82S: DX P185/65R14 85S: EX, HX (USA), Si (Canada) P175/70R13 82S: CX, DX (USA), CX-G (Canada) P175/70R13 82S: DX (USA), LX (Canada) P185/65R14 85S: LX/EX (USA), EX (Canada) T105/80D13 Cars without ABS Except 2-door Coupe EX (USA), Si (Canada) T105/70D14 2-door Coupe EX (USA), Si (Canada) Cars without ABS T115/70D14 DX (USA), 4-door Sedan LX (USA), 2-door Coupe DX (Canada) Cars with ABS T125/70D14 Cars with ABS 2-door Coupe, 4-door Sedan LX, EX (USA), 4-door Sedan EX (Canada), 2-door Coupe Si (Canada) Cars with ABS		
WASHER RESERVOIR	Capacity ℓ (US qt, Imp qt)		2-door coupe 2.5 (2.6, 2.2) 4-door Sedan 4.5 (4.8, 4.0) 2-door hatchback 2.5 (2.6, 2.2) 4.5 (4.8, 4.0)		USA model Canada model DX Except DX
ELECTRICAL	Battery		12 V - 38AH/5HR		
	Starter		12 V - 1.0 kW, 1.2 kW		
	Alternator		12 V - 75 A		
	Fuses		7.5 A, 10 A, 15 A, 20 A		
	In Under-dash Fuse/Relay Box		7.5 A, 10 A, 15 A, 20 A, 30 A, 40 A, 80 A		
	In Under-hood Fuse/Relay Box		7.5 A, 20 A, 40 A		
	In Under-hood ABS Fuse/Relay Box		7.5 A, 20 A, 40 A		
	Headlights	High/Low	12 V - 60/55 W		
	Front Turn Signal/Parking Lights		12 V - 21/5 W		
	Rear Turn Signal Lights		12 V - 21 W		
	Brake/Taillights		12 V - 21/5 W		
	Inner Taillights*2		12 V - 5 W		
	High Mount Brake Light		12 V - 18 W*2, 21 W*1, *3		
	Back-up Lights		12 V - 21 W		
	License Plate Lights		12 V - 5 W		
	Ceiling Light		12 V - 8 W (With moonroof) 12 V - 5 W (Without moonroof)		
	Trunk Lights		12 V - 3.4 W*4, 5 W*5		
	Gauge Lights		12 V - 1.4 W, 3 W		
	Indicator Lights		12 V - 1.12 W, 1.4 W		
	Illumination and Pilot Lights		12 V - 0.84 W, 1.4 W		
	Heater Control Panel Lights		12 V - 1.4 W		

P/S: Power steering, M/S: Manual steering
 *1: 2-door Coupe *2: 2-door Hatchback *3: 4-door Sedan
 *4: USA (HAM), Canada (HCM) produced
 *5: JAPAN produced

Body Specifications


2-door Coupe:

Unit: mm (in)

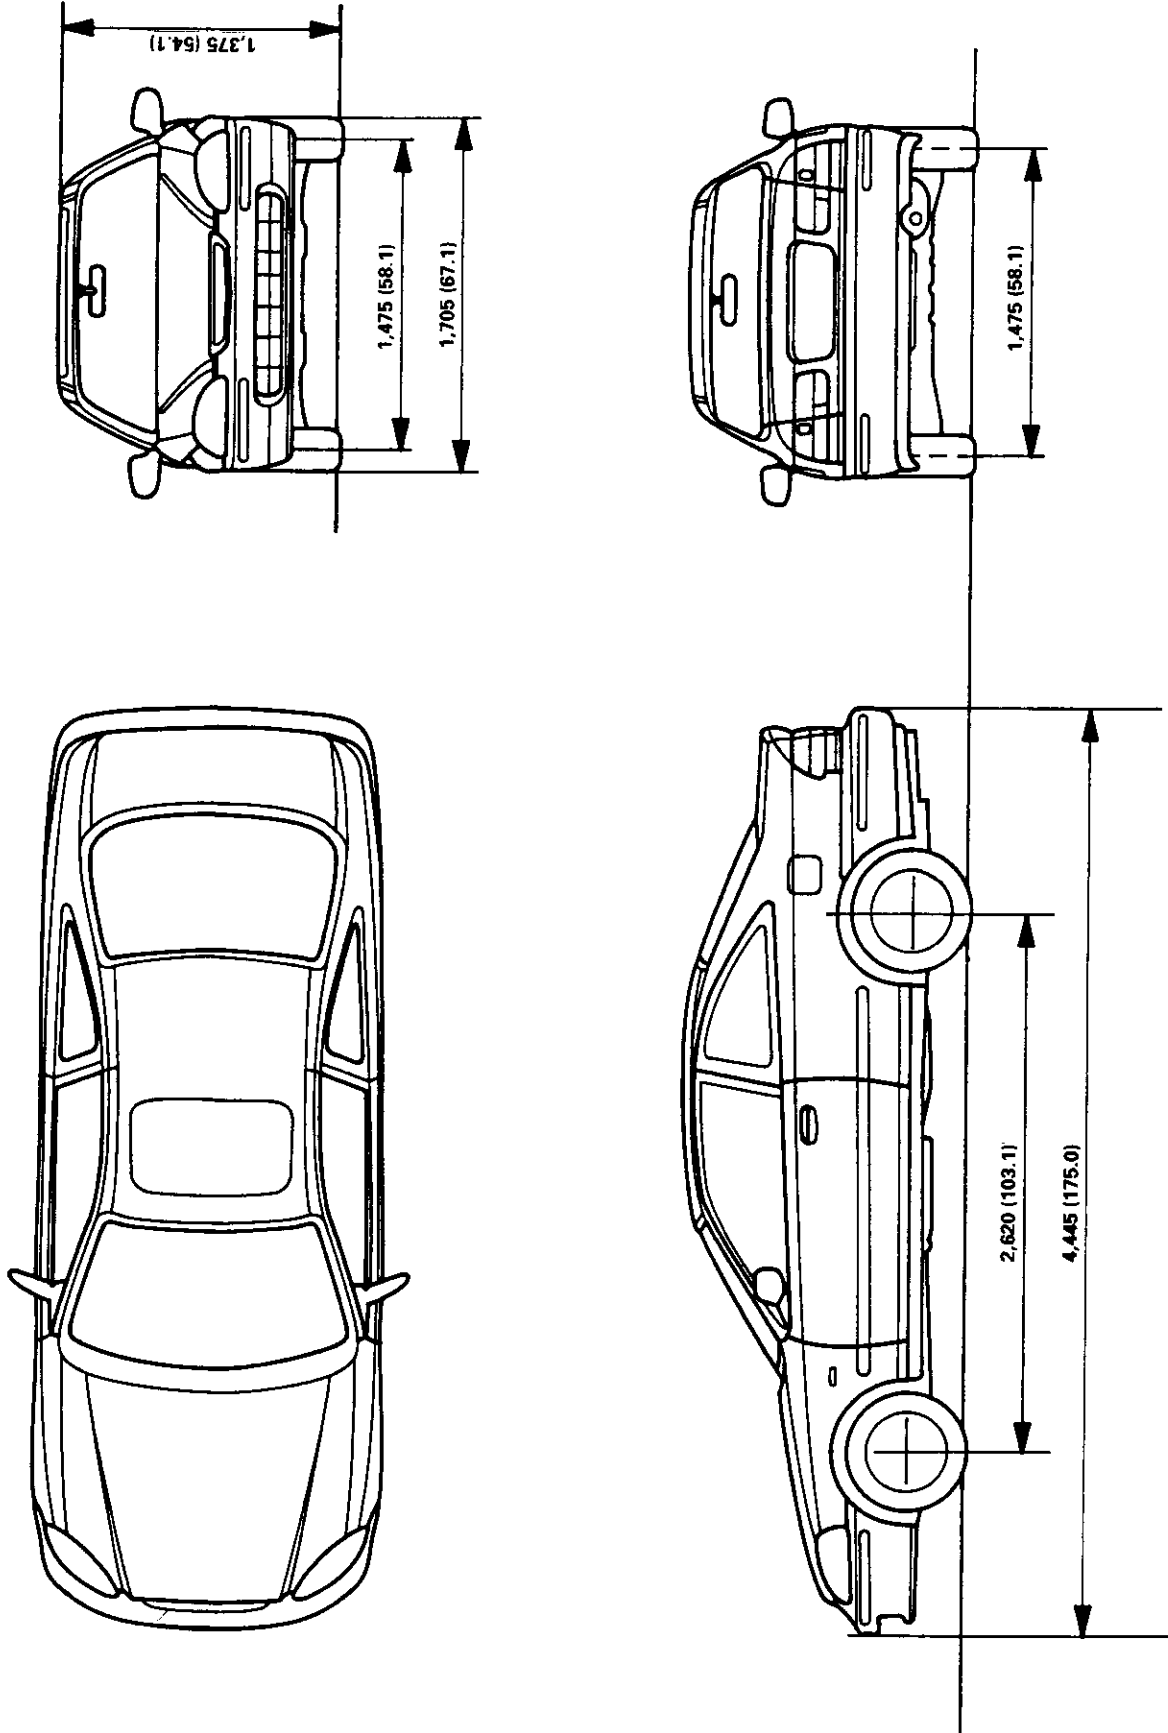

2-door Hatchback:

Unit: mm (in)

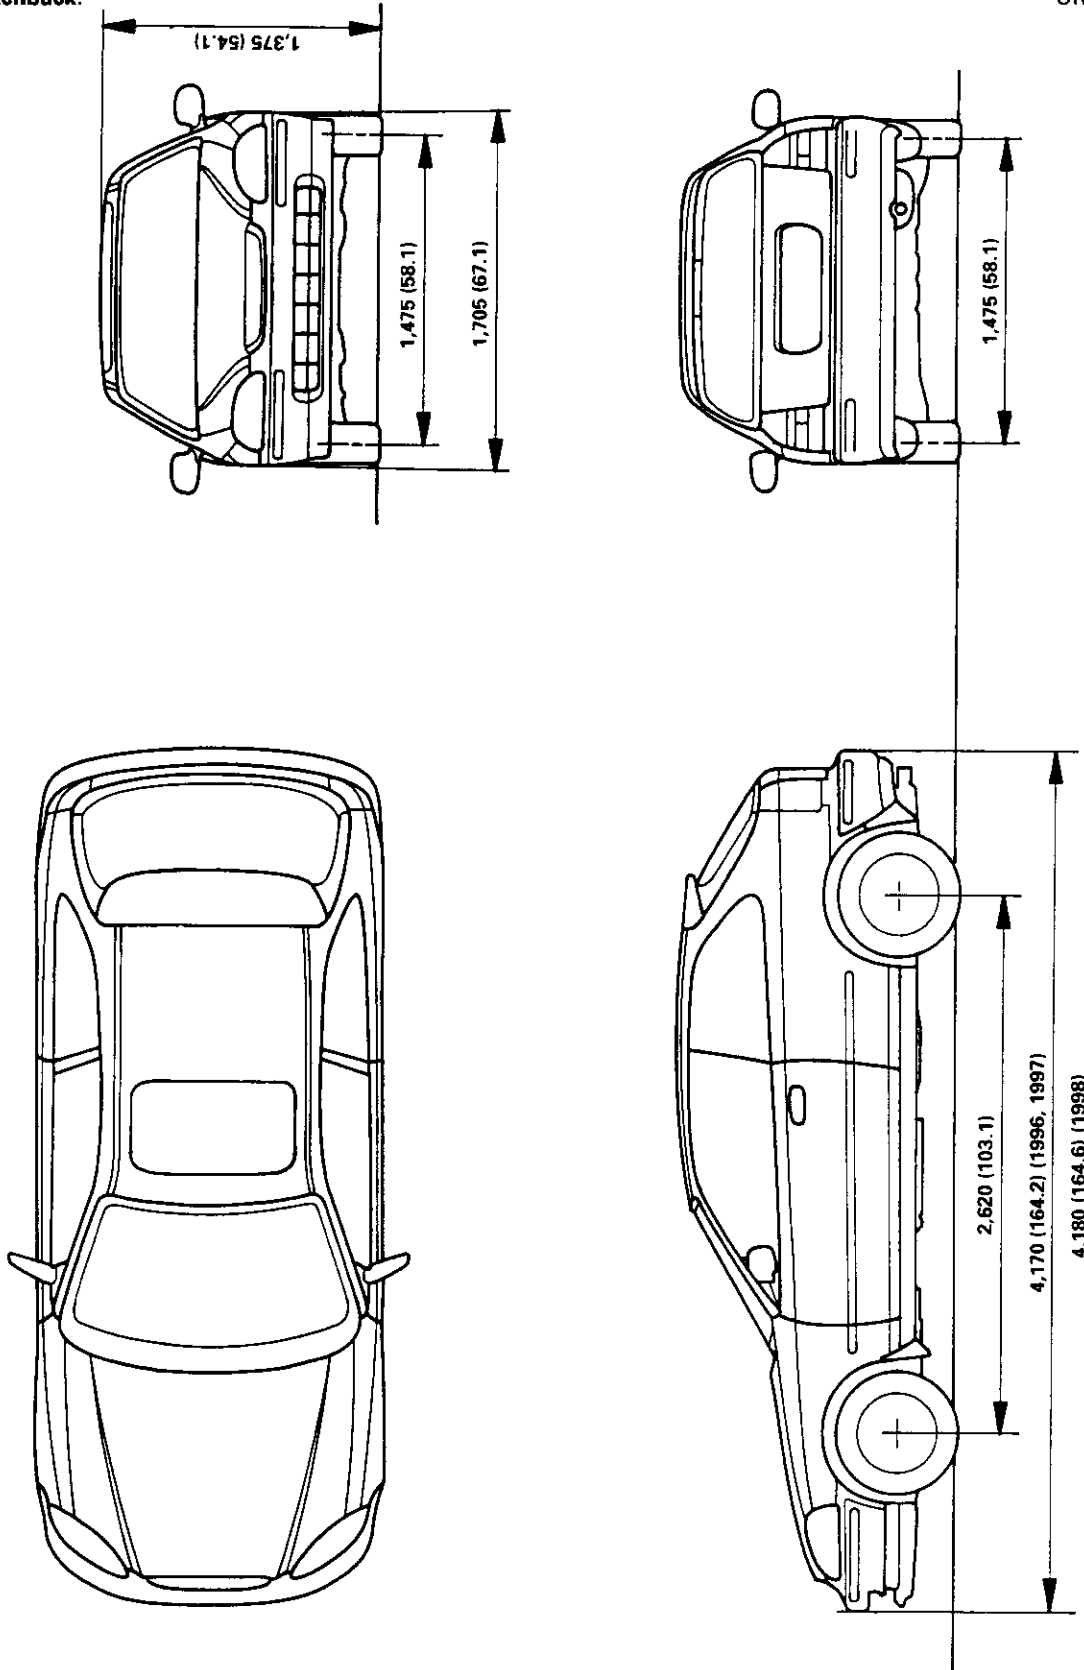


(cont'd)

Body Specifications (cont'd)

4-door Sedan:

Unit: mm (in)

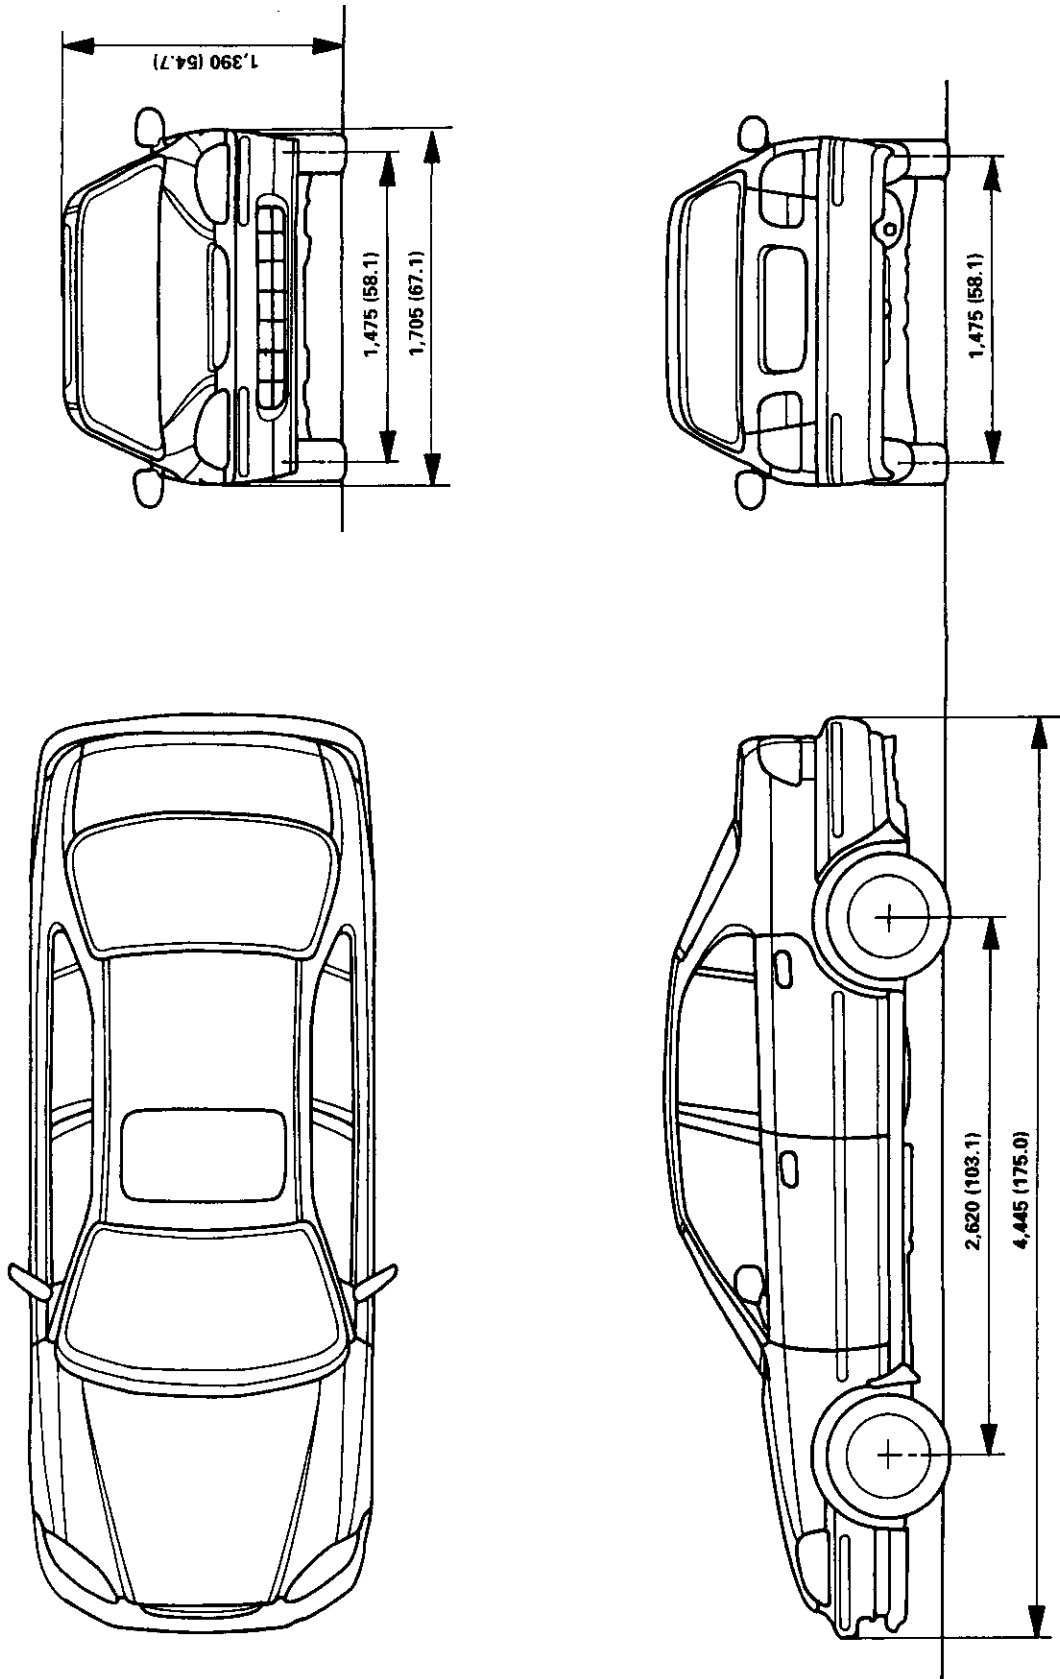



Maintenance

Lubrication Points	4-2
Maintenance Schedule for 1996 Model	
Normal Conditions	4-4
Severe Conditions	4-6
Maintenance Schedule for 1997 Model	
Normal Conditions	4-8
Severe Conditions	4-10
Maintenance Schedule for 1998 Model	
Normal Conditions	4-12
Severe Conditions	4-14

Lubrication Points




For the details of lubrication points and types of lubricants to be applied, refer to the Illustrated Index and various work procedures (such as Assembly/Reassembly, Replacement, Overhaul, Installation, etc.) contained in each section.

No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: Use SJ "Energy Conserving" grade oil. The oil container may also display the API Certification mark shown below. Make sure it says "For Gasoline Engines." SAE Viscosity: See chart below.
2	Transmission	Manual
		Automatic
		CVT
3	Brake Line	Genuine Honda DOT3 Brake Fluid**4
4	Clutch Line	Genuine Honda DOT3 Brake Fluid**4
5	Power steering gearbox	Steering grease P/N 08733 - B070E
6	Shift lever pivots (manual transmission)	Grease with molybdenum disulfide
7	Release fork (manual transmission)	Super High Temp Urea Grease (P/N 08798 - 9002)
8	Steering boots	Multi-purpose grease
9	Tailgate hinges and latches (2-door Hatchback)	
10	Steering ball joints	
11	Shift lever (automatic transmission)	
12	Pedal linkage	
13	Brake master cylinder pushrod	Honda White Lithim Grease
14	Trunk hinges and latch (4-door Sedan and 2-door Coupe)	
15	Door hinges upper and lower	
16	Door opening detents	
17	Hood hinge and hood latch	Multi-purpose grease
18	Fuel filler lid	
19	Clutch master cylinder pushrod	
20	Throttle cable end and throttle linkage	
21	Rear brake shoe linkages	
22	Steering wheel (back side)	Silicone grease
23	Caliper piston seal, dust seal, caliper pin, piston	
24	Throttle cable end (dashboard lower panel)	Genuine Honda Power Steering Fluid-V or S**5
25	Power steering system (for cars with P/S)	
26	Air conditioning compressor	Compressor oil: SANDEN: SP-10 P/N 38897 - P13 - A01AH or 38899 - P13 - A01 (For Refrigerant: HFC-134a (R-134a))

API SERVICE LABEL


API CERTIFICATION SEAL

Recommended Engine Oil

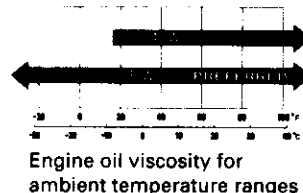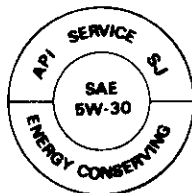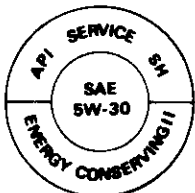

NOTE: The following information as marked *1, *2, *3, *4 and *5 on above chart details for 1997 model.

- *1: Always use Genuine Honda Manual Transmission Fluid (MTF). Using motor oil can cause stiffer shifting because it does not contain the proper additives.
- *2: Always use Genuine Honda Premium Formula Automatic Transmission Fluid (ATF). Using a non-Honda ATF can affect shift quality.
- *3: Use Genuine Honda CVT fluid only. Using other fluid can affect transmission operation and may reduce transmission life.
- *4: Always use Genuine Honda DOT3 Brake Fluid. Using a non-Honda brake fluid can cause corrosion and decrease the life of the system.
- *5: Always use Genuine Honda Power Steering Fluid-V or S. Using any other type of power steering fluid or automatic transmission fluid can cause increase wear and poor steering in cold weather.

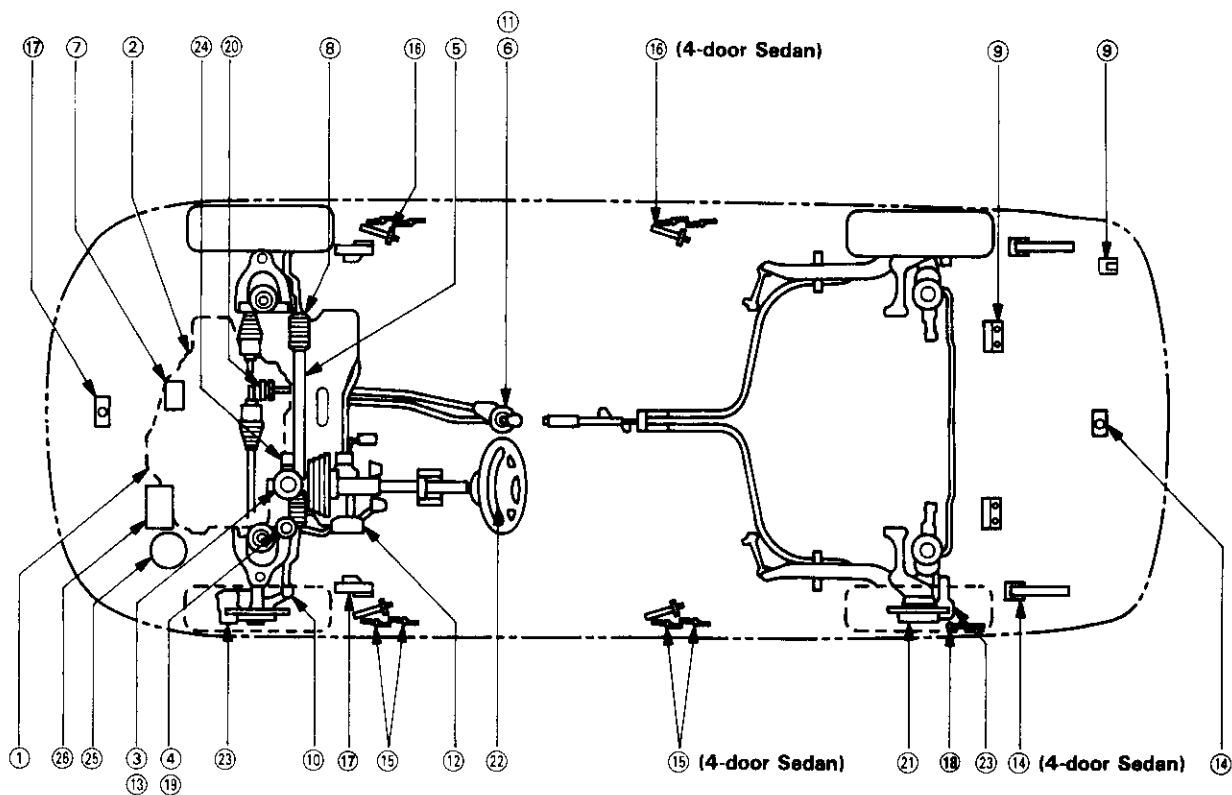

NOTE: Lubricate all hinges, latches and locks once a year.
In corrosive areas, more frequent lubrication is necessary.
We recommend Honda White Lithium Grease.

Maintenance Schedule for 1996 Model

Normal Conditions

Follow the Normal Conditions Maintenance Schedule for 1996 Model if the severe driving conditions specified in the Severe Conditions Maintenance Schedule for 1996 Model on pages 4-6 and 4-7 do not apply.

Service at the indicated distance or time whichever comes first.	Replace every 7,500 miles (12,000 km) or 12 months												SECTION and PAGE					
	km x 1,000	24	48	72	96	120	144	168	miles x 1,000	15	30	45		60	75	90	105	
Replace engine oil		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	Capacity for change with filter: D16Y7: 3.6 ℓ (3.8 US qt, 3.2 Imp qt) D16Y5, D16Y8: 3.3 ℓ (3.5 US qt, 2.9 Imp qt)	8-5
Replace engine oil filter		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	Check levels and check for leaks.	8-7
Check engine oil and coolant		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		8-4, 10-5
Replace air cleaner element		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		11-158
Inspect valve clearance		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	Intake: 0.18 - 0.22 mm (0.007 - 0.009 in) Exhaust: 0.23 - 0.27 mm (0.009 - 0.011 in) Measured when cold	6-12
Replace spark plugs		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	D16Y5: NGK ZFR4F-11 DENSO KJ14CR-L11 D16Y7, D16Y8: NGK ZFR5F-11 DENSO KJ16CR-L11 Gap: 1.0 - 1.1 mm (0.039 - 0.043 in)	23-91
Inspect distributor cap* and rotor*		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		23-87
Replace timing belt* and inspect water pump		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		6-19, 10-12
Inspect and adjust drive belts		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	Check for cracks and damage. Check deflection and tension at center of following belts pressing with 98 N (10 kgf, 22 lbf) tension: Alternator drive belt: 8.0 - 10.5 mm (0.31 - 0.41 in) P/S pump belt: 10.5 - 14.0 mm (0.41 - 0.55 in) A/C compressor belt: 7.5 - 9.5 mm (0.30 - 0.37 in)	17-32 22-34 23-104
Inspect idle speed*		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	U.S. Model: 670 ± 50 rpm (M/T: neutral) 700 ± 50 rpm (A/T: N or P position) Canada Model: 750 ± 50 rpm (M/T: neutral) 750 ± 50 rpm (A/T: N or P position)	11-139
Replace engine coolant		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	Capacity for change: M/T: 3.1 ℓ (3.3 US qt, 2.7 Imp qt) A/T: D16Y7: 3.0 ℓ (3.2 US qt, 2.6 Imp qt) D16Y8: 3.2 ℓ (3.3 US qt, 2.8 Imp qt) CVT: 3.2 ℓ (3.3 US qt, 2.8 Imp qt) Check specific gravity for freezing point.	10-6
Replace transmission fluid	MT	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	Manual transmission: Honda Genuine MTF 1.8 ℓ (1.9 US qt, 1.6 Imp qt) for change Automatic transmission: 2.7 ℓ (2.9 US qt, 2.4 Imp qt) for change	13-3 14-86 14-229
	AT	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	with Honda Genuine Premium Formula ATF CVT: 3.9 ℓ (4.1 US qt, 3.4 ℓ Imp qt) for change with Genuine Honda CVT Fluid	
	CVT	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
Inspect front and rear brakes		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	• Check the brake pad and disc thickness and free movement. • Check the wheel cylinder for leaks. • Check the brake linings for cracking, glazing, wear, or contamination. • Check the calipers for leakage.	19-4, 8, 10, 12 16, 18, 25, 28
Replace brake fluid (including ABS)		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	Use Honda Genuine DOT3 brake fluid. Check that brake fluid level is between the upper and lower marks on the reservoir.	19-7
Check parking brake adjustment		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	Fully engaged 6 to 9 clicks.	19-6
Rotate tires (Check tire inflation and condition at least once per month)		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	Rotate tires every 7,500 miles (12,000 km)	—



Service at the indicated distance or time whichever comes first.	km x 1,000		24	48	72	96	120	144	168	SECTION and PAGE	
	miles x 1,000 months		15	30	45	60	75	90	105		
Visually inspect the following items:											
Brake hoses and lines (including ABS)										• Check for correct installation and position, check for cracks, deterioration, rust, and leaks. • Check tightness of screws, nuts, and joints. If necessary, retighten.	19-30
All fluid levels and condition of fluid										Check levels and check for leaks. If necessary, add transmission fluid, engine coolant, brake fluid, clutch fluid, windshield washer fluid, power steering fluid and battery fluid.	10-5 13-3 14-86, 229 19-7
Tie-rod ends, steering gear box, and boots										• Check rack grease and steering linkage. • Check the boot for damage or leaking grease. • Check the fluid line for damage and leaks.	17-31
Suspension components			•	•	•	•	•	•	•		
Driveshaft boots										Check boots and boot band for cracks. Check rack grease.	16-3
Cooling system hoses and connections										Check all hoses for damage, leaks or deterioration. Check all hose clamps. Retighten if necessary.	10-2
Exhaust system*										Check the catalytic converter heat shield, exhaust pipe and muffler for damage, leaks and tightness.	9-5 to 9-9
Fuel lines and connections*										Check fuel lines for loose connections, cracks and deterioration. Retighten loose connections and replace any damaged parts.	11-141
Inspect supplemental restraint system											
10 years after production											

According to state and federal regulations, failure to perform maintenance on the items marked with an asterisk (*) will not void customer's emission warranties. However, Honda recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

For 1996 Canada Model:

This Maintenance Schedule outlines the minimum required maintenance that you should perform to ensure the trouble-free operation of Canadian model. Due to regional and climatic differences, some additional servicing may be required.

Maintenance Schedule for 1996 Model

Severe Conditions

Follow the Severe Conditions Maintenance Schedule for 1996 Model if the vehicle is driven MAINLY under one or more of the Severe Driving Conditions (page 4-7):

Service at the indicated distance or time whichever comes first.	km x 1,000		24	48	72	96	120	144	168	NOTE	SECTION and PAGE	
	miles x 1,000		15	30	45	60	75	90	105			
	months		12	24	36	48	60	72	84			
Replace engine oil and oil filter	Replace every 3,750 miles (6,000 km) or 6 months										Capacity for change with filter: D16Y7: 3.6 ℓ (3.8 US qt, 3.2 Imp qt) D16Y5, D16Y8: 3.3 ℓ (3.5 US qt, 2.9 Imp qt)	8-5
Check engine oil and coolant	Check oil and coolant at each fuel stop		•	•	•	•	•	•	•		Check levels and check for leaks.	8-4, 10-5
Replace air cleaner element Use normal schedule except in dusty conditions			•	•	•	•	•	•	•			11-158
Inspect valve clearance	Inspect at 30,000 miles (48,000 km) only										Intake: 0.18 - 0.22 mm (0.007 - 0.009 in) Exhaust: 0.23 - 0.27 mm (0.009 - 0.011 in)	6-12
Replace spark plugs			•	•	•	•	•	•	•		D16Y5 NGK ZFR4F-11 DENSO KJ14CR-L11 D16Y7, D16Y8: NGK ZFR5F-11 DENSO KJ16CR-L11 Gap: 1.0 - 1.1 mm (0.039 - 0.043 in)	23-91
Inspect distributor cap* and rotor*												23-83
Replace timing belt** and inspect water pump	Replace every 60,000 miles (96,000 km)											6-19, 10-12
Inspect and adjust drive belts			•	•	•	•	•	•	•		Check for cracks and damage. Check deflection and tension at center of following belts pressing with 98 N (10 kgf, 22 lbf) tension: Alternator drive belt: 8.0 - 10.5 mm (0.31 - 0.41 in) P/S pump belt: 10.5 - 14.0 mm (0.41 - 0.55 in) A/C compressor belt: 7.5 - 9.5 mm (0.30 - 0.37 in)	17-32 22-34 23-104
Inspect idle speed*											U.S. Model: 670 ± 50 rpm (M/T: neutral) 700 ± 50 rpm (A/T: N or P position) Canada model: 750 ± 50 rpm (M/T: neutral) 750 ± 50 rpm (A/T: N or P position)	11-139
Replace engine coolant									•		Capacity for change: M/T: 3.1 ℓ (3.3 US qt, 2.7 Imp qt) Except D15Z1: 3.6 ℓ (3.8 US qt, 3.2 Imp qt) A/T: D16Y7: 3.0 ℓ (3.2 US qt, 2.6 Imp qt) D16Y8: 3.2 ℓ (3.3 US qt, 2.8 Imp qt) CVT: 3.2 ℓ (3.3 US qt, 2.8 Imp qt) Check specific gravity for freezing point.	10-6
Replace transmission fluid	MT		•	•	•	•	•	•	•		Manual transmission: Honda Genuine MTF 1.8 ℓ (1.9 US qt, 1.6 Imp qt) for change Automatic transmission: 2.7 ℓ (2.9 US qt, 2.4 Imp qt) for change with Honda Genuine Premium Formula ATF	13-3 14-86 14-229
	AT		•	•	•	•	•	•	•		CVT: 3.9 ℓ (4.1 US qt, 3.4 ℓ Imp qt) for change with Genuine Honda CVT Fluid	
	CVT**		•	•	•	•	•	•	•		• Check the brake pad and disc thickness and free movement. • Check the wheel cylinder for leaks. • Check the brake linings for cracking, glazing, wear, or contamination. • Check the calipers for leakage.	19-4, 8, 10, 12 16, 18, 25, 28
Inspect front and rear brakes	Inspect every 7,500 miles (12,000 km) or 6 months											19-7
Replace brake fluid (Including ABS)			•	•	•	•	•	•	•		Use Honda Genuine DOT3 brake fluid. Check that brake fluid level is between the upper and lower marks on the reservoir.	19-6
Check parking brake adjustment			•	•	•	•	•	•	•		Fully engaged 6 to 9 clicks.	19-6
Rotate tires (Check tire inflation and condition at least once per month)	Rotate tires every 7,500 miles (12,000 km)		•	•	•	•	•	•	•		The suggested rotation method is shown in the diagram of the Owner's Manual.	—

*1: Replace the timing belt at 60,000 miles (USA) 100,000 km (Canada) if the vehicle regularly is driven in one or more of these conditions:

- In very high temperatures (over 110°F, 43°C).
- In very low temperatures (under -20°F, -29°C).

*2: If the owner drives at high speed in high temperatures [90°F (32°C) above], the transmission fluid should be changed every 12,000 miles (20,000 km).



Service at the indicated distance or time whichever comes first.	km x 1,000		24	48	72	96	120	144	168	SECTION and PAGE
	miles x 1,000		15	30	45	60	75	90	105	
	months		12	24	36	48	60	72	84	
Visually inspect the following items:										
Tie-rod ends, steering gear box, and boots	Every 7,500 miles (12,000 km) or 6 months									
Suspension components										
Driveshaft boots										
Brake hoses and lines (including ABS)										
All fluid levels and condition of fluid										
Cooling system hoses and connections										
Exhaust system*										
Fuel lines and connections*										
Inspect supplemental restraint system	10 years after production									
	<ul style="list-style-type: none"> • Check for correct installation and position, check for cracks, deterioration, rust, and leaks. • Check tightness of screws, nuts, and joints. If necessary, retighten. • Check rack grease and steering linkage. • Check the boot for damage or leaking grease. • Check the fluid line for damage and leaks. 									17-31
	<ul style="list-style-type: none"> • Check boots and boot band for cracks. Check rack grease. 									16-3 19-30
	<ul style="list-style-type: none"> • Check levels and check for leaks. If necessary, add transmission fluid, engine coolant, brake fluid, clutch fluid, windshield washer fluid, power steering fluid and battery fluid. 									10-5 13-3 14-86, 229 19-7
	<ul style="list-style-type: none"> • Check all hoses for damage, leaks or deterioration. Check all hose clamps. Retighten if necessary. 									10-2
	<ul style="list-style-type: none"> • Check the catalytic converter heat shield, exhaust pipe and muffler for damage, leaks and tightness. 									9-5 to 9-9 11-155
	<ul style="list-style-type: none"> • Check fuel lines for loose connections, cracks and deterioration. Retighten loose connections and replace any damaged parts. 									11-141

According to state and federal regulations, failure to perform maintenance on the items marked with an asterisk (*) will not void customer's emission warranties. However, Honda recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

Severe Driving Conditions:

- Driving less than 8 km (5 miles) per trip or, in freezing temperatures, driving less than 16 km (10 miles) per trip.
- Driving in extremely hot (over 90°F (32°C)) conditions.
- Extensive idling or long periods of stop-and-go driving.
- Trailer towing, driving with a car-top carrier, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

NOTE: If the car is driven OCCASIONALLY under a "severe" condition, you should follow the Normal Conditions Maintenance Schedule for 1996 Model on pages 4-4 and 4-5.

Maintenance Schedule for 1997 Model

Normal Conditions

Follow the Normal Conditions Maintenance Schedule for 1997 Model if the severe driving conditions specified in the Severe Conditions Maintenance Schedule for 1997 Model on pages 4-10 and 4-11 do not apply.

Service at the indicated distance or time whichever comes first.	miles x 1,000		30		45		60		75		90		105		120		SECTION and PAGE	
	km x 1,000	months	24	48	72	96	120	144	168	192	24	48	72	84	96	192		
Replace engine oil	Replace every 7,500 miles (12,000 km) or 12 months																8-5	
Replace engine oil filter	●																8-7	
Check engine oil and coolant	Check oil and coolant at each fuel stop																8-5, 10-6	
Replace air cleaner element	●																11-158	
Inspect valve clearance	Inspect at 30,000 miles (48,000 km) only																6-12	
Replace spark plugs	●																23-91	
Replace timing belt* and inspect water pump	●																6-19, 10-12	
Inspect and adjust drive belts	●																17-32 22-34 23-104	
Inspect idle speed*	●																11-139	
Replace engine coolant	●																10-6	
Replace transmission fluid	MT	●																13-3 14-86 14-229
	AT	●																
	CVT	●																
Inspect front and rear brakes	●																19-4, 8, 10, 12, 16, 18, 25, 28	
Replace brake fluid (Including ABS)	●																19-7	
Check parking brake adjustment	●																19-6	
Rotate tires (Check tire inflation and condition at least once per month)	Rotate tires every 7,500 miles (12,000 km)																—	



Service at the indicated distance or time whichever comes first.	miles x 1,000		15	30	45	60	75	90	105	120	SECTION and PAGE	
	km x 1,000		24	48	72	96	120	144	168	192		
	months		12	24	36	48	60	72	84	96		
Visually inspect the following items:												
Tie-rod ends, steering gear box, and boots											Check steering linkage for looseness. Check condition of boots. Check for fluid leaks.	17-31
Suspension components											Check the bolts for tightness. Check the condition of ball joint boots.	12-8, 9, 20
Driveshaft boots											Check condition of boots.	16-3
Brake hoses and lines (including ABS)											Check for damage or leakage.	19-28
All fluid levels and condition of fluid	●	●	●	●	●	●	●	●	●	●	Check levels, condition of fluids, and check for leaks. If brake fluid is low, check brake pad thickness.	10-6, 13-3, 14-86, 229 19-7
Cooling system hoses and connections											Check all hoses for damage, leaks, and deterioration. Check for proper fan operation.	10-2
Exhaust system*											Check the catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and tightness.	9-7, 8
Fuel lines and connections*											Check for leaks. Retighten loose connections and replace any damaged parts.	11-141
Inspect supplemental restraint system	10 years after production											

According to state and federal regulations, failure to perform maintenance on the items marked with an asterisk (*) will not void customer's emission warranties. However, Honda recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

For 1997 Canada model: Follow the Severe Conditions Maintenance Schedule for 1997 Model on page 4-10 and 4-11.

Maintenance Schedule for 1997 Model

Severe Conditions

Follow the Severe Conditions Maintenance Schedule for 1997 Model if the vehicle is driven MAINLY under one or more of the Severe Driving Conditions (page 4-11):

Service at the indicated dis- tance or time whichever comes first.	miles x 1,000		30		45		60		75		90		105		120		SECTION and PAGE
	15	24	24	48	48	72	96	120	144	168	192	192	188	184	180	176	
Replace engine oil and oil filter	Replace every 3,750 miles (6,000 km) or 6 months																8-5, 7
Check engine oil and coolant	Check oil and coolant at each fuel stop																8-5, 10-6
Replace air cleaner element Use normal schedule except in dusty condi- tions	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	11-158
Inspect valve clearance	Inspect at 30,000 miles (48,000 km) only																6-12
Replace spark plugs	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	23-91
Replace timing belt*1 and inspect water pump																	6-19, 10-12
Inspect and adjust drive belts	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	17-23 22-34 23-104
Inspect idle speed*																	11-139
Replace engine coolant																	10-6
Replace transmission fluid	MT	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	13-3 14-86 14-229
	AT	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
	CVT*2	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Inspect front and rear brakes	Inspect every 7,500 miles (12,000 km) or 6 months																19-4, 8, 10, 12, 16, 18, 25, 28
Replace brake fluid (Including ABS)																	19-7
Check parking brake adjustment	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	19-6

*1: Replace the timing belt at 60,000 miles (USA) 100,000 km (Canada) if the vehicle regularly is driven in one or more of these conditions:

- In very high temperatures (over 110°F, 43°C).
- In very low temperatures (under -20°F, -29°C).

*2: If the customer drives at high speed in high temperatures (90°F (32°C) above), the transmission fluid should be changed every 12,000 miles (20,000 km).



Service at the indicated distance or time whichever comes first.	miles x 1,000		15	30	45	60	75	90	105	120	NOTE	SECTION and PAGE	
	km x 1,000	months	24	48	72	96	120	144	168	196			
Lubricate locks and hinges			●	●	●	●	●	●	●	●		4-2, 3	
Clean antenna mast			●	●	●	●	●	●	●	●		23-163	
Rotate tires (check tire inflation and condition at least once per month)			Rotate tires every 7,500 miles (12,000 km)										
Visually inspect the following items:													
Tie-rod ends, steering gear box, and boots			Every 7,500 miles (12,000 km) or 6 months										17-31
Suspension components													18-8, 9, 20
Driveshaft boots													16-3
Brake hoses and lines (including ABS)													19-28
All fluid levels and condition of fluid													10-6, 13-3, 14-86, 229 19-7
Cooling system hoses and connections			●	●	●	●	●	●	●	●		10-2	
Exhaust system*			●	●	●	●	●	●	●	●		9-7, 8	
Fuel lines and connections*													11-141
Lights and controls													23-146
Vehicle underbody													
Inspect supplemental restraint system			10 years after production										

According to state and federal regulations, failure to perform maintenance on the items marked with an asterisk (*) will not void customer's emission warranties. However, Honda recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

Severe Driving Conditions:

- Driving less than 5 miles (8 km) per trip or, in freezing temperatures, driving less than 10 miles (16 km) per trip.
- Driving in extremely hot (over 90°F (32°C)) conditions.
- Extensive idling or long periods of stop-and-go driving.
- Trailer towing, driving with a car-top carrier, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

NOTE: If the car is driven OCCASIONALLY under a "severe" condition, you should follow the Normal Conditions Maintenance Schedule for 1997 Model on pages 4-8 and 4-9.

Maintenance Schedule for 1998 Model

Normal Conditions

Follow the Normal Conditions Maintenance Schedule for 1998 Model if the severe driving conditions specified in the Severe Conditions Maintenance Schedule for 1998 Model on pages 4-14 and 4-15 do not apply.

Service at the indicated distance or time whichever comes first.	miles x 1,000		km x 1,000		months												SECTION and PAGE
	15	30	45	60	75	90	105	120	120	144	168	192	192	96			
Replace engine oil	Every 7,500 miles (12,000 km) or 12 months														8-5		
Replace engine oil filter	●	●	●	●	●	●	●	●	●	●	●	●	●	●	8-7		
Check engine oil and coolant	Check oil and coolant at each fuel stop														8-4, 10-5		
Replace air cleaner element	●	●	●	●	●	●	●	●	●	●	●	●	●	●	11-162		
Inspect valve clearance	At 30,000 miles (48,000 km) only														6-12		
Replace spark plugs	●	●	●	●	●	●	●	●	●	●	●	●	●	●	23-97		
Replace timing belt and inspect water pump	●	●	●	●	●	●	●	●	●	●	●	●	●	●	6-19, 10-12		
Inspect and adjust drive belts	●	●	●	●	●	●	●	●	●	●	●	●	●	●	17-32 22-34 23-110		
Inspect idle speed	●	●	●	●	●	●	●	●	●	●	●	●	●	●	11-141		
Replace engine coolant	●	●	●	●	●	●	●	●	●	●	●	●	●	●	10-6		
Replace transmission fluid	MT	●	●	●	●	●	●	●	●	●	●	●	●	●	13-3 14-86 14-231		
	AT	●	●	●	●	●	●	●	●	●	●	●	●	●			
	CVT*	●	●	●	●	●	●	●	●	●	●	●	●	●			
Inspect front and rear brakes	●	●	●	●	●	●	●	●	●	●	●	●	●	●	19-4, 8, 10, 12, 16, 18, 25, 28		
Replace brake fluid (Including ABS)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	19-7		
Check parking brake adjustment	●	●	●	●	●	●	●	●	●	●	●	●	●	●	19-6		
Rotate tires (Check tire inflation and condition at least once per month)	Rotate tires every 7,500 miles (12,000 km)														—		

*1: 2 door



Service at the indicated distance or time whichever comes first.	miles x 1,000	15	30	45	60	75	90	105	120	SECTION and PAGE	
	km x 1,000 months	12	24	36	48	60	72	84	96		
Visually inspect the following items:											
Tie-rod ends, steering gear box, and boots										Check steering linkage for looseness. Check condition of boots. Check for fluid leaks.	17-31
Suspension components										Check the bolts for tightness. Check the condition of ball joint boots.	-----
Driveshaft boots										Check condition of boots.	16-3
Brake hoses and lines (including ABS)										Check for damage or leakage.	19-30
All fluid levels and condition of fluid		●	●	●	●	●	●	●	●	Check levels, condition of fluids, and check for leaks. If brake fluid is low, check brake pad thickness.	10-5, 13-3, 14-86, 231 19-7
Cooling system hoses and connections										Check all hoses for damage, leaks, and deterioration. Check for proper fan operation.	10-2
Exhaust system*										Check the catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and lightness.	9-5 to 9-9
Fuel lines and connections*										Check for leaks. Retighten loose connections and replace any damaged parts.	11-145

According to state and federal regulations, failure to perform maintenance on the items marked with an asterisk (*) will not void customer's emission warranties. However, Honda recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

For 1998 Canada model: Follow the Severe Conditions Maintenance Schedule for 1998 Model on page 4-14 and 4-15.

Maintenance Schedule for 1998 Model

Severe Conditions

Follow the Severe Conditions Maintenance Schedule for 1998 Model if the vehicle is driven MAINLY under one or more of the Severe Driving Conditions (page 4-15):

Service at the indicated dis- tance or time whichever comes first.	miles x 1,000		15	30	45	60	75	90	105	120	SECTION and PAGE
	km x 1,000		24	48	72	96	120	144	168	192	
	months		12	24	36	48	60	72	84	96	
Replace engine oil and oil filter	Every 3,750 miles (6,000 km) or 6 months										
Check engine oil and coolant	Check oil and coolant at each fuel stop										
Replace air cleaner element Use normal schedule except in dusty condi- tions	● ● ● ● ● ● ● ● ● ● ● ●										
Inspect valve clearance	At 30,000 miles (48,000 km) only										
Replace spark plugs	● ● ● ● ● ● ● ● ● ● ● ●										
Replace timing belt*1 and inspect water pump	● ● ● ● ● ● ● ● ● ● ● ●										
Inspect and adjust drive belts	● ● ● ● ● ● ● ● ● ● ● ●										
Inspect idle speed	● ● ● ● ● ● ● ● ● ● ● ●										
Replace engine coolant	● ● ● ● ● ● ● ● ● ● ● ●										
Replace transmission fluid	MT	● ● ● ● ● ● ● ● ● ● ● ●									
	AT	● ● ● ● ● ● ● ● ● ● ● ●									
	CVT**2	● ● ● ● ● ● ● ● ● ● ● ●									
Inspect front and rear brakes	Every 7,500 miles (12,000 km) or 6 months										
Replace brake fluid	● ● ● ● ● ● ● ● ● ● ● ●										
Check parking brake adjustment	● ● ● ● ● ● ● ● ● ● ● ●										

*1: Replace the timing belt at 60,000 miles (USA) 100,000 km (Canada) if the vehicle regularly is driven in one or more of these conditions:

- In very high temperatures (over 110°F, 43°C).
- In very low temperatures (under -20°F, -29°C).

*2: If the customer drives at high speed in high temperatures [90°F (32°C) above], the transmission fluid should be changed every 12,000 miles (20,000 km).
2 door



Service at the indicated distance or time whichever comes first.	miles x 1,000		15	30	45	60	75	90	105	120	NOTE	SECTION and PAGE	
	km x 1,000	months	24	48	72	96	120	144	168	196			
Lubricate locks and hinges			●	●	●	●	●	●	●	●	Lubricate all hinges, latches and locks.	4-2, 3	
Clean antenna mast			●	●	●	●	●	●	●	●		23-170	
Rotate tires (check tire inflation and condition at least once per month)			Rotate tires every 7,500 miles (12,000 km)									The suggested rotation method is shown in the diagram of the Owner's Manual.	
Visually inspect the following items:													
Tie-rod ends, steering gear box, and boots	Every 7,500 miles (12,000 km) or 6 months											17-31	
Suspension components													
Driveshaft boots												16-3	
Brake hoses and lines (including ABS)												19-30	
All fluid levels and condition of fluid												10-5, 13-3, 14-86, 231 19-7	
Cooling system hoses and connections												10-2	
Exhaust system*												9-5 to 9-9	
Fuel lines and connections*												11-145	
Lights and controls												23-152	
Vehicle underbody													

According to state and federal regulations, failure to perform maintenance on the items marked with an asterisk (*) will not void customer's emission warranties. However, Honda recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

Severe Driving Conditions:

- Driving less than 5 miles (8 km) per trip or, in freezing temperatures, driving less than 10 miles (16 km) per trip.
- Driving in extremely hot (over 90°F (32°C)) conditions.
- Extensive idling or long periods of stop-and-go driving.
- Trailer towing, driving with a roof top carrier, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

NOTE: If the car is driven OCCASIONALLY under a "severe" condition, you should follow the Normal Conditions Maintenance Schedule for 1997 Model on pages 4-8 and 4-9.

Engine

Engine Removal/Installation	5-1
Cylinder Head/Valve Train	6-1
Engine Block	7-1
Engine Lubrication	8-1
Intake Manifold/Exhaust System	9-1
Cooling	10-1



Engine Removal/Installation

Removal	5-2
Installation	5-12



Engine Removal/Installation

Removal


⚠ WARNING

- Make sure jacks and safety stands are placed properly and hoist brackets are attached to the correct positions on the engine.
- Make sure the vehicle will not roll off stands and fall while you are working under it.


CAUTION:

- Use fender covers to avoid damaging painted surface.
- Unplug the wiring connectors carefully while holding the connector portion to avoid damage.
- Mark all wiring and hoses to avoid misconnection. Also, be sure that they do not contact other wiring or hoses or interfere with other parts.


1. Secure the hood as open as possible.
2. Disconnect the battery negative terminal first, then the positive terminal.
3. Disconnect the battery cables from the under-hood fuse/relay box and battery positive terminal.

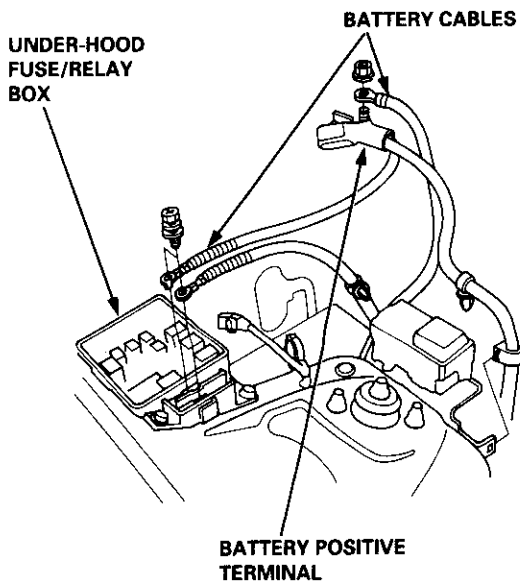

4. Remove the battery and battery base.

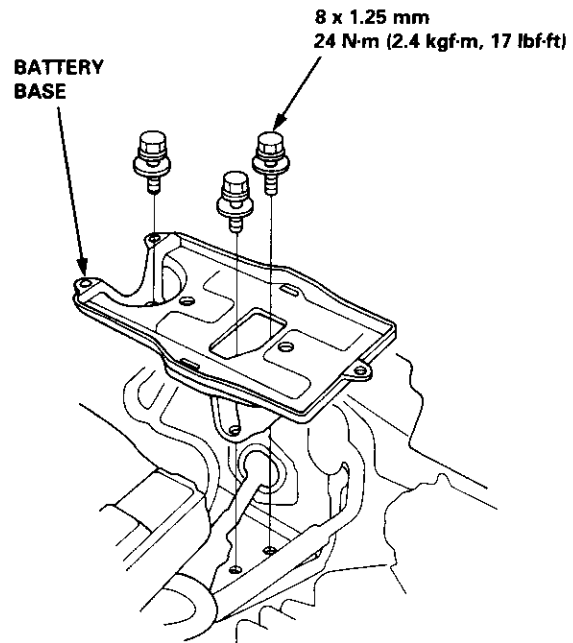

5. Disconnect the connectors from the ECM/PCM.
6. Disconnect the main wire harness connector.

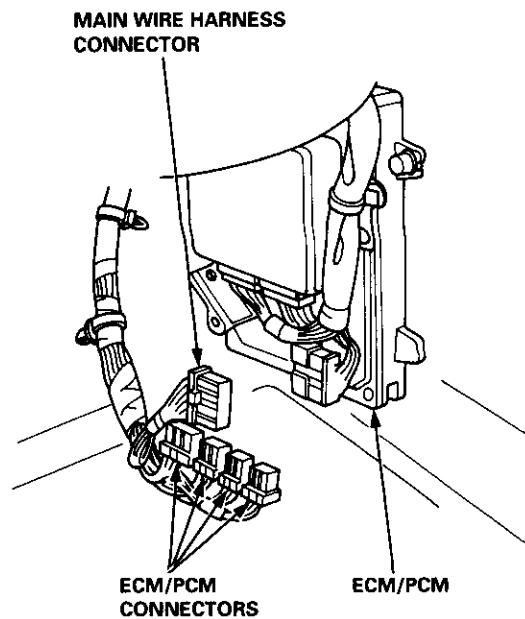





7. Remove the intake air duct and air cleaner housing.

D16Y7 engine:

- a. Remove the resonator and intake air duct.

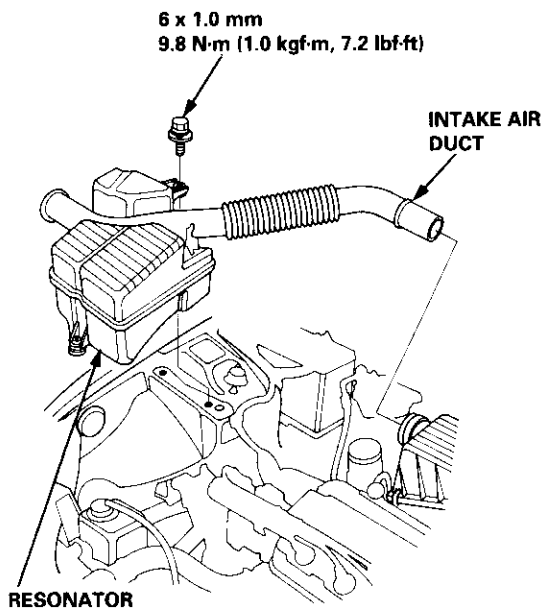


- b. Disconnect the intake air temperature (IAT) sensor connector, then remove the air cleaner housing.

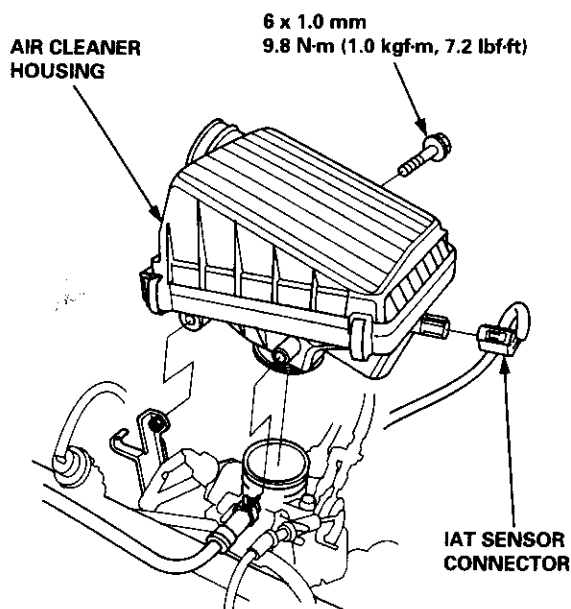


D16Y5, D16Y8 engines:

- a. Disconnect the IAT sensor connector, then remove the intake air duct and air cleaner housing.

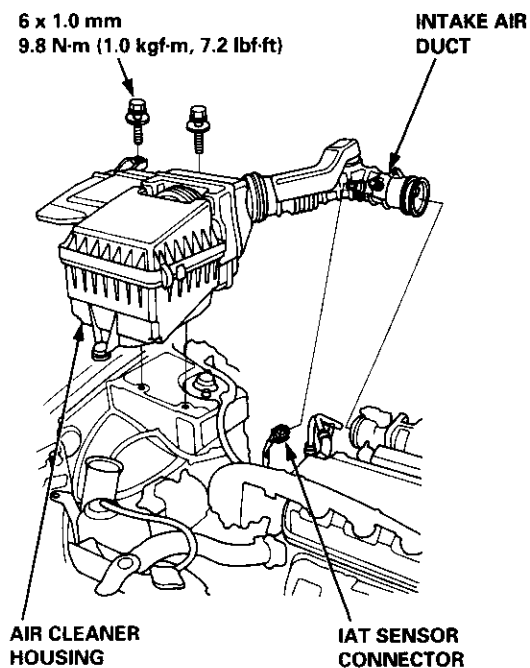

8. Disconnect the engine wire harness connector on the left side of the engine compartment.

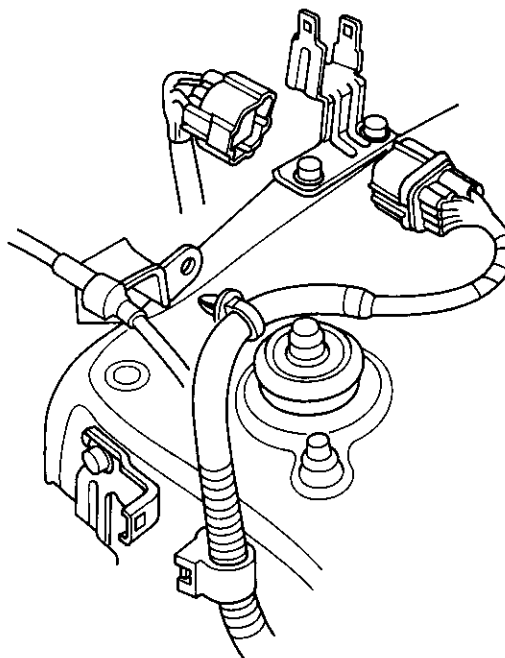

(cont'd)

Engine Removal/Installation


Removal (cont'd)

9. Relieve fuel pressure (see section 11).


WARNING Do not smoke while working on the fuel system. Keep open flame or spark away from the work area. Drain fuel only into an approved container.

10. Remove the evaporative emission (EVAP) control canister hose and fuel feed hose.

D16Y7 engine:

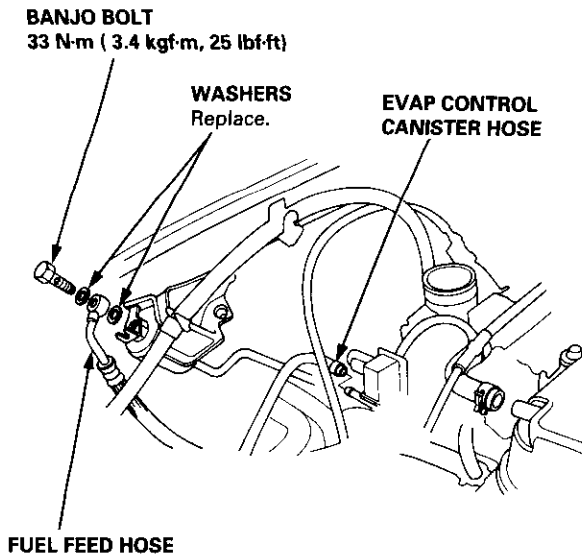


D16Y5, D16Y8 engines:

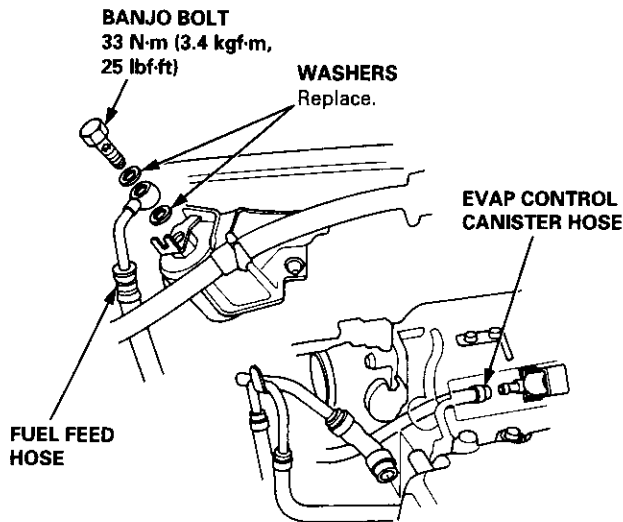


11. Remove the brake booster vacuum hose, fuel return hose and vacuum hose.

D16Y7 engine:

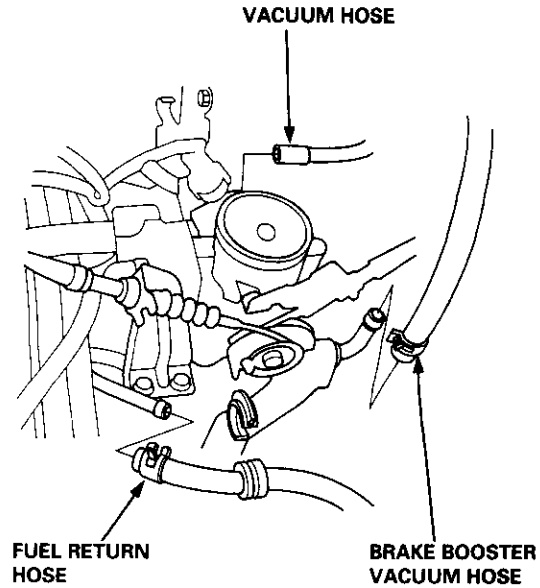

D16Y5, D16Y8 engines:

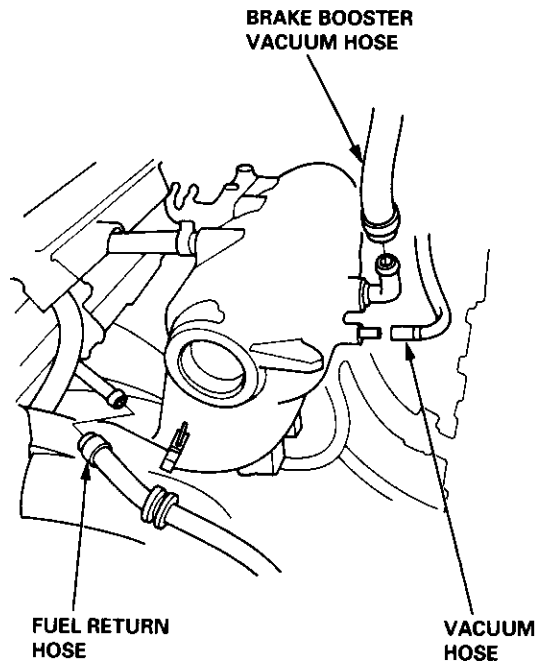




12. Remove the throttle cable by loosening the locknut, then slip the cable end out of the accelerator linkage.


NOTE:

- Take care not to bend the cable when removing it. Always replace any kinked cable with a new one.
- Adjust the throttle cable when installing (see section 11).


D16Y7 engine:

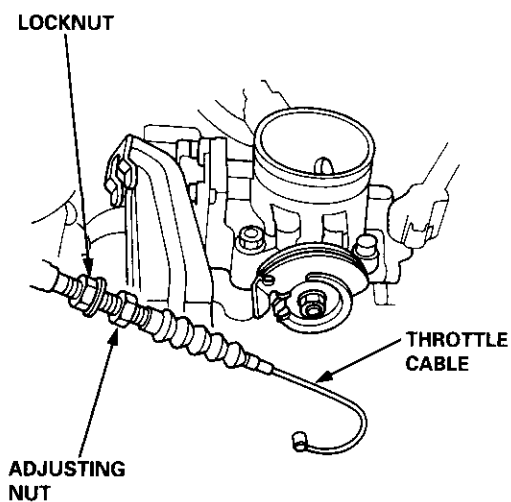

D16Y5, D16Y8 engines:

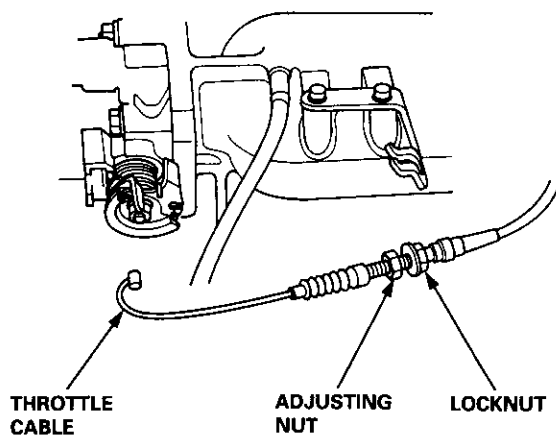


13. Remove the grommet and wire harness clamps, then pull out the ECM/PCM connectors.

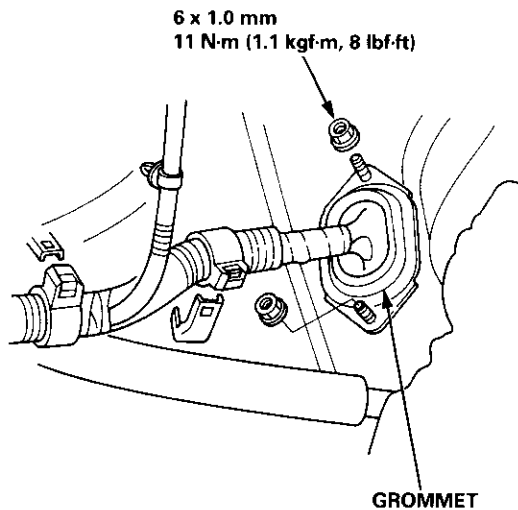

14. Remove the mounting bolt and lock bolt, then remove the power steering (P/S) pump belt and pump.

NOTE: Do not disconnect the P/S hoses.

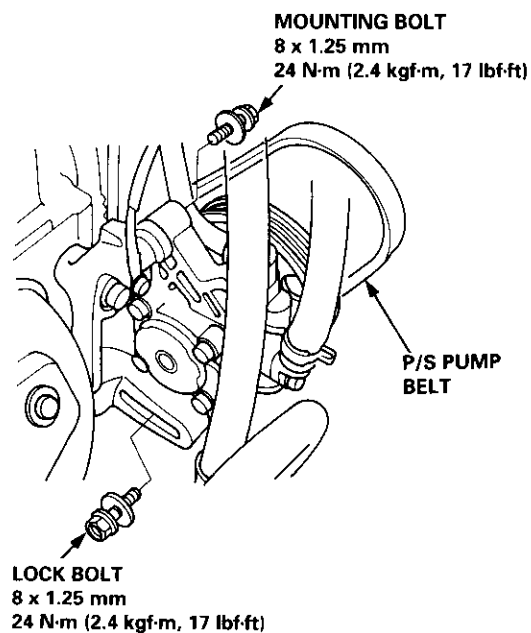


(cont'd)


Engine Removal/Installation

Removal (cont'd)

15. Loosen the idler pulley center nut and adjusting bolt, then remove the air conditioning (A/C) compressor belt.

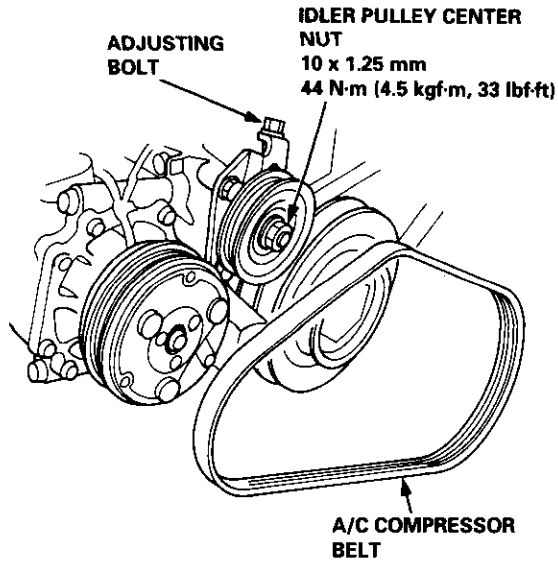


16. Remove the transmission ground cable and hose clamp.

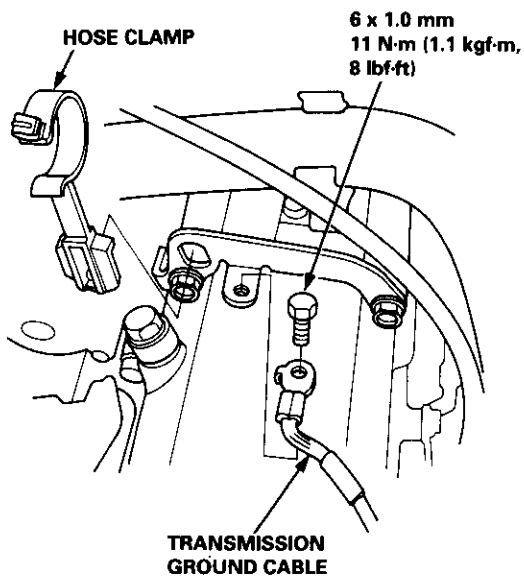


17. Remove the clutch slave cylinder and line/hose assembly (M/T).

NOTE:

- Do not disconnect the pipe/hose assembly.
- Do not operate the clutch pedal once the slave cylinder has been removed.
- Take care not to bend the line.

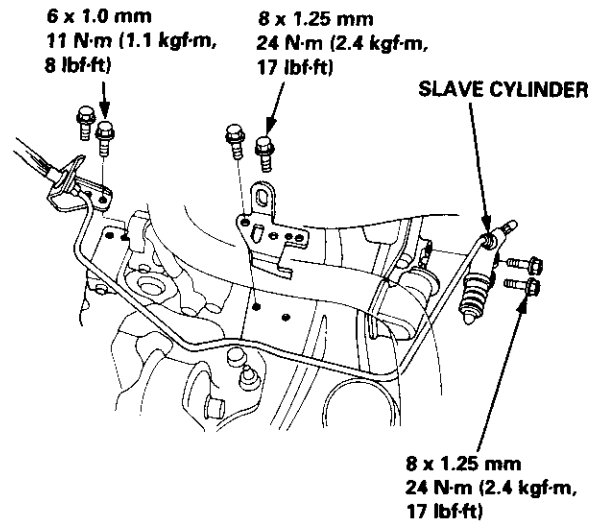


18. Remove the shift cable (CVT).

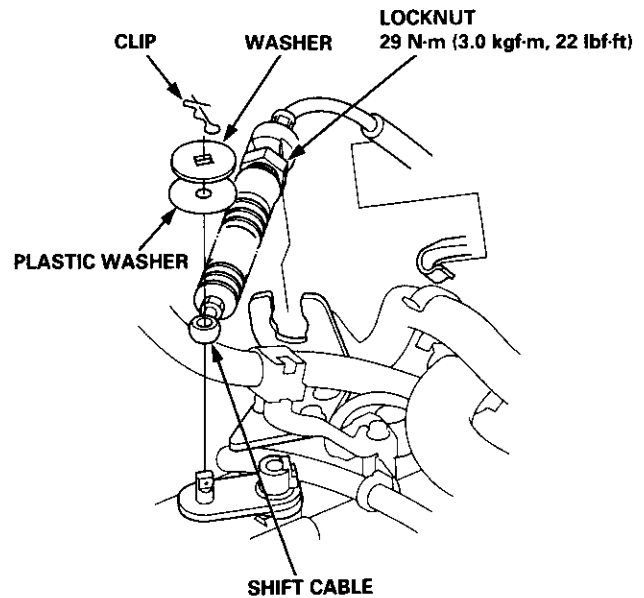




- Disconnect the power steering pressure (PSP) switch connector, and remove the wire harness clamp.

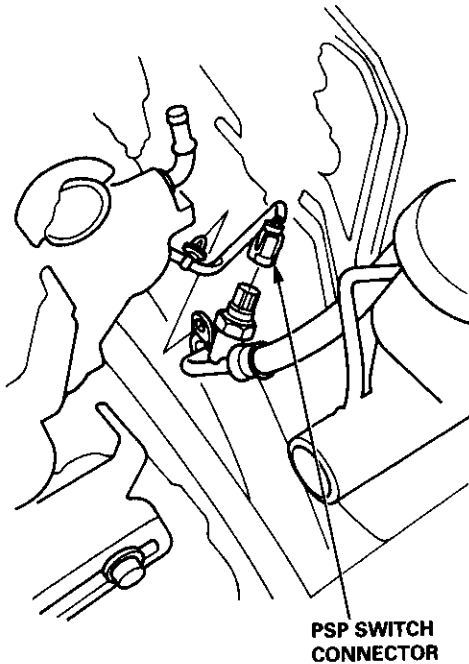


- Remove the radiator cap.

▲ WARNING Use care when removing the radiator cap to avoid scalding by hot coolant or steam.

- Raise the hoist to full height.
- Remove the front tires/wheels and splash shield.

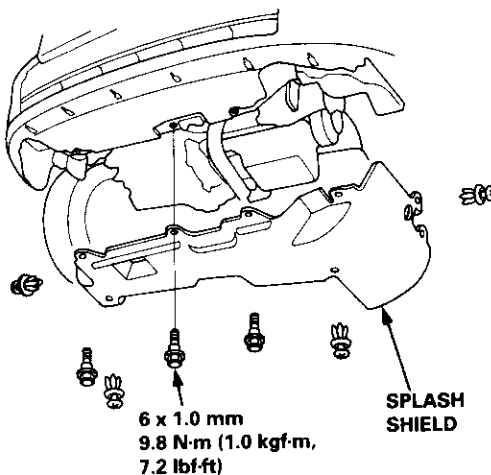


- Drain the engine coolant (see page 10-6). Loosen the drain plug in the radiator.
- Drain the transmission fluid. Reinstall the drain plug using a new washer (see section 13, 14).
- Drain the engine oil. Reinstall the drain bolt using a new washer (see page 8-5).
- Remove the shift rod and extension rod (M/T).

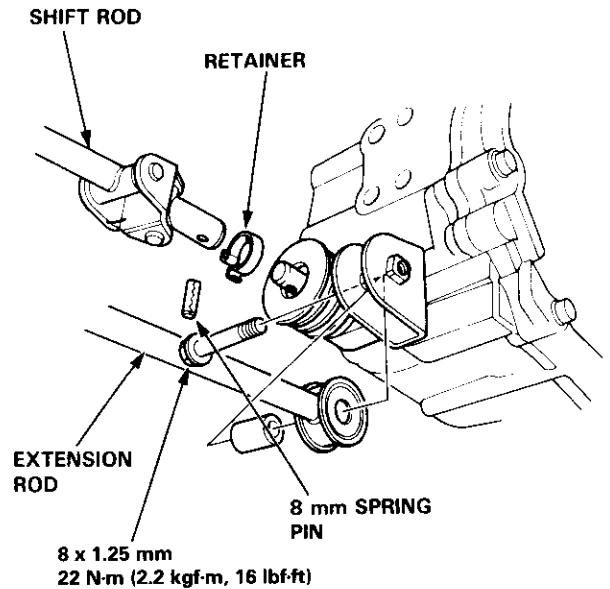

- Remove the A/C compressor.

NOTE: Do not disconnect the A/C hoses.

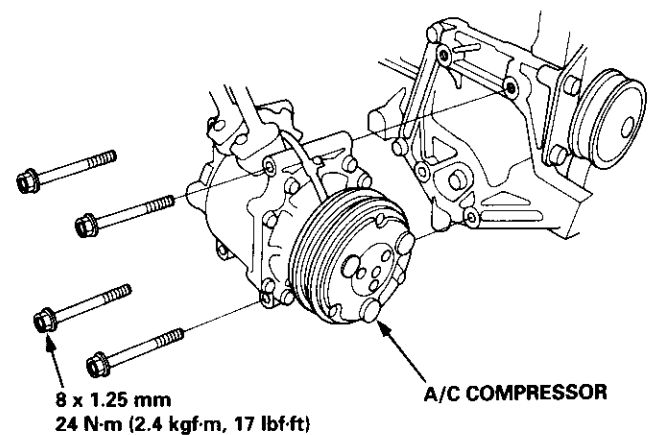

(cont'd)


Engine Removal/Installation

Removal (cont'd)

28. Remove the shift cable (A/T).

NOTE:


- Take care not to bend the cable when removing it. Always replace any kinked cable with a new one.
- Adjust the shift cable when installing (see section 14).

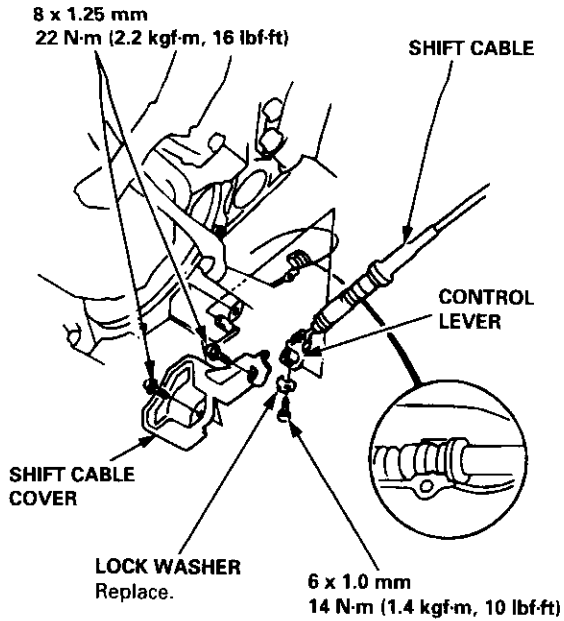

29. Remove exhaust pipe A.


D16Y5, D16Y7 engines:

8 x 1.25 mm
22 N-m (2.2 kgf-m, 16 lbf-ft)
Replace.

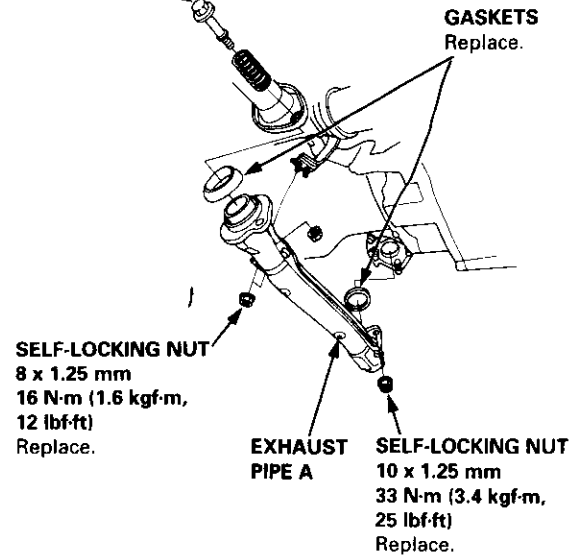

D16Y8 engine:

8 x 1.25 mm
22 N-m (2.2 kgf-m, 16 lbf-ft)
Replace.

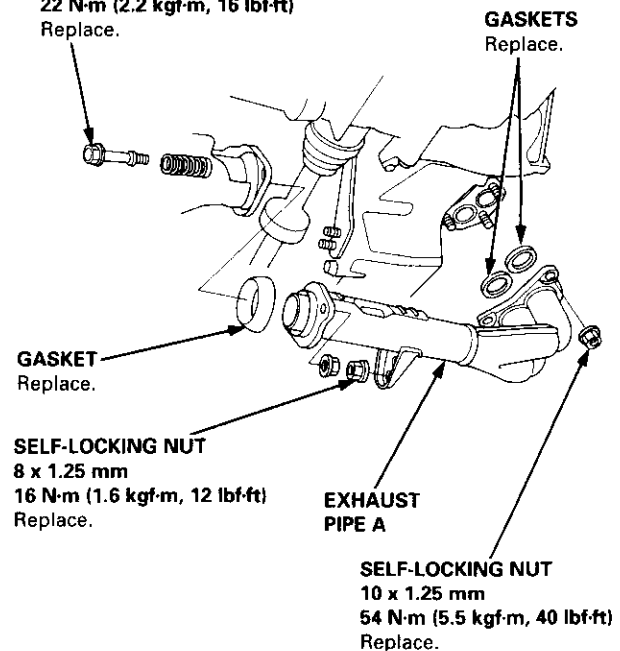




30. Remove the damper forks (see section 18).
31. Disconnect the suspension lower arm ball joints (see section 18).
32. Remove the driveshafts.

CAUTION:


- Do not pull on the driveshaft, the CV joint may come apart.
- Use care when prying out the assembly. Pull it straight to avoid damaging the differential oil seal or intermediate shaft dust seal.

NOTE: Coat all precision-finished surfaces with clean engine oil. Tie plastic bags over the driveshaft ends.


DRIVESHAFT

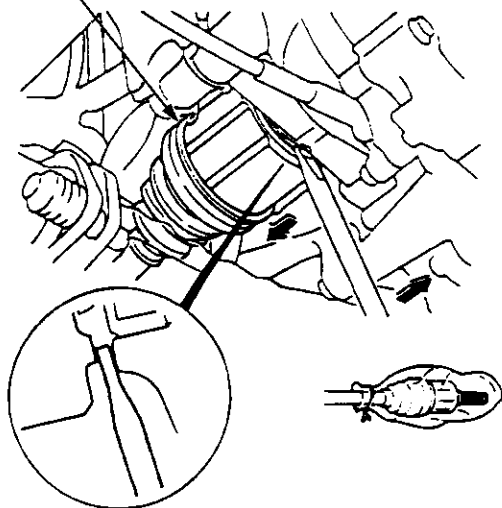

33. Lower the hoist.
34. Remove the upper and lower radiator hoses and heater hoses.

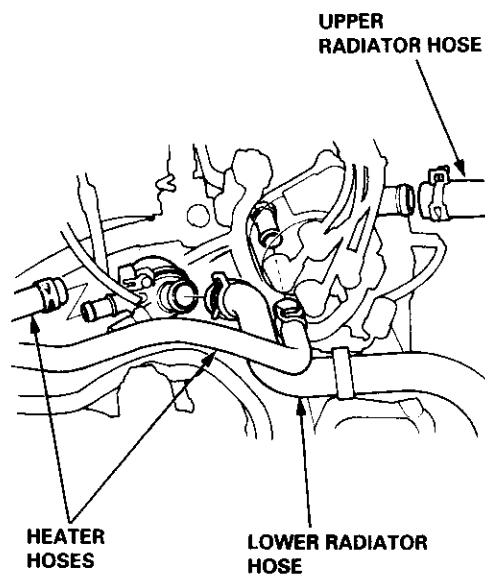

35. Remove the ATF cooler hoses, then plug the ATF cooler hoses and pipes (A/T).

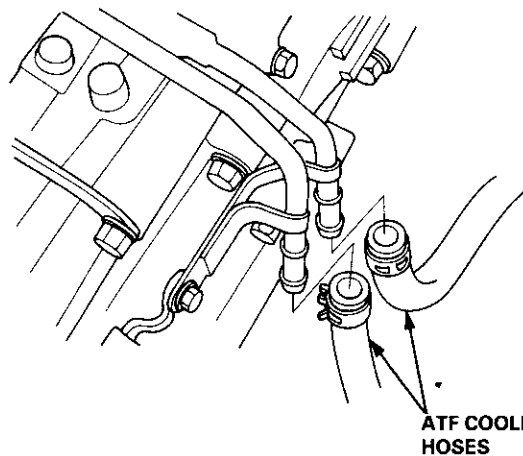


(cont'd)

Engine Removal/Installation

Removal (cont'd)


36. Attach the chain hoist to the engine.

HOISTING BRACKET
Install on the cylinder head
with a 8 x 1.25 mm bolt.

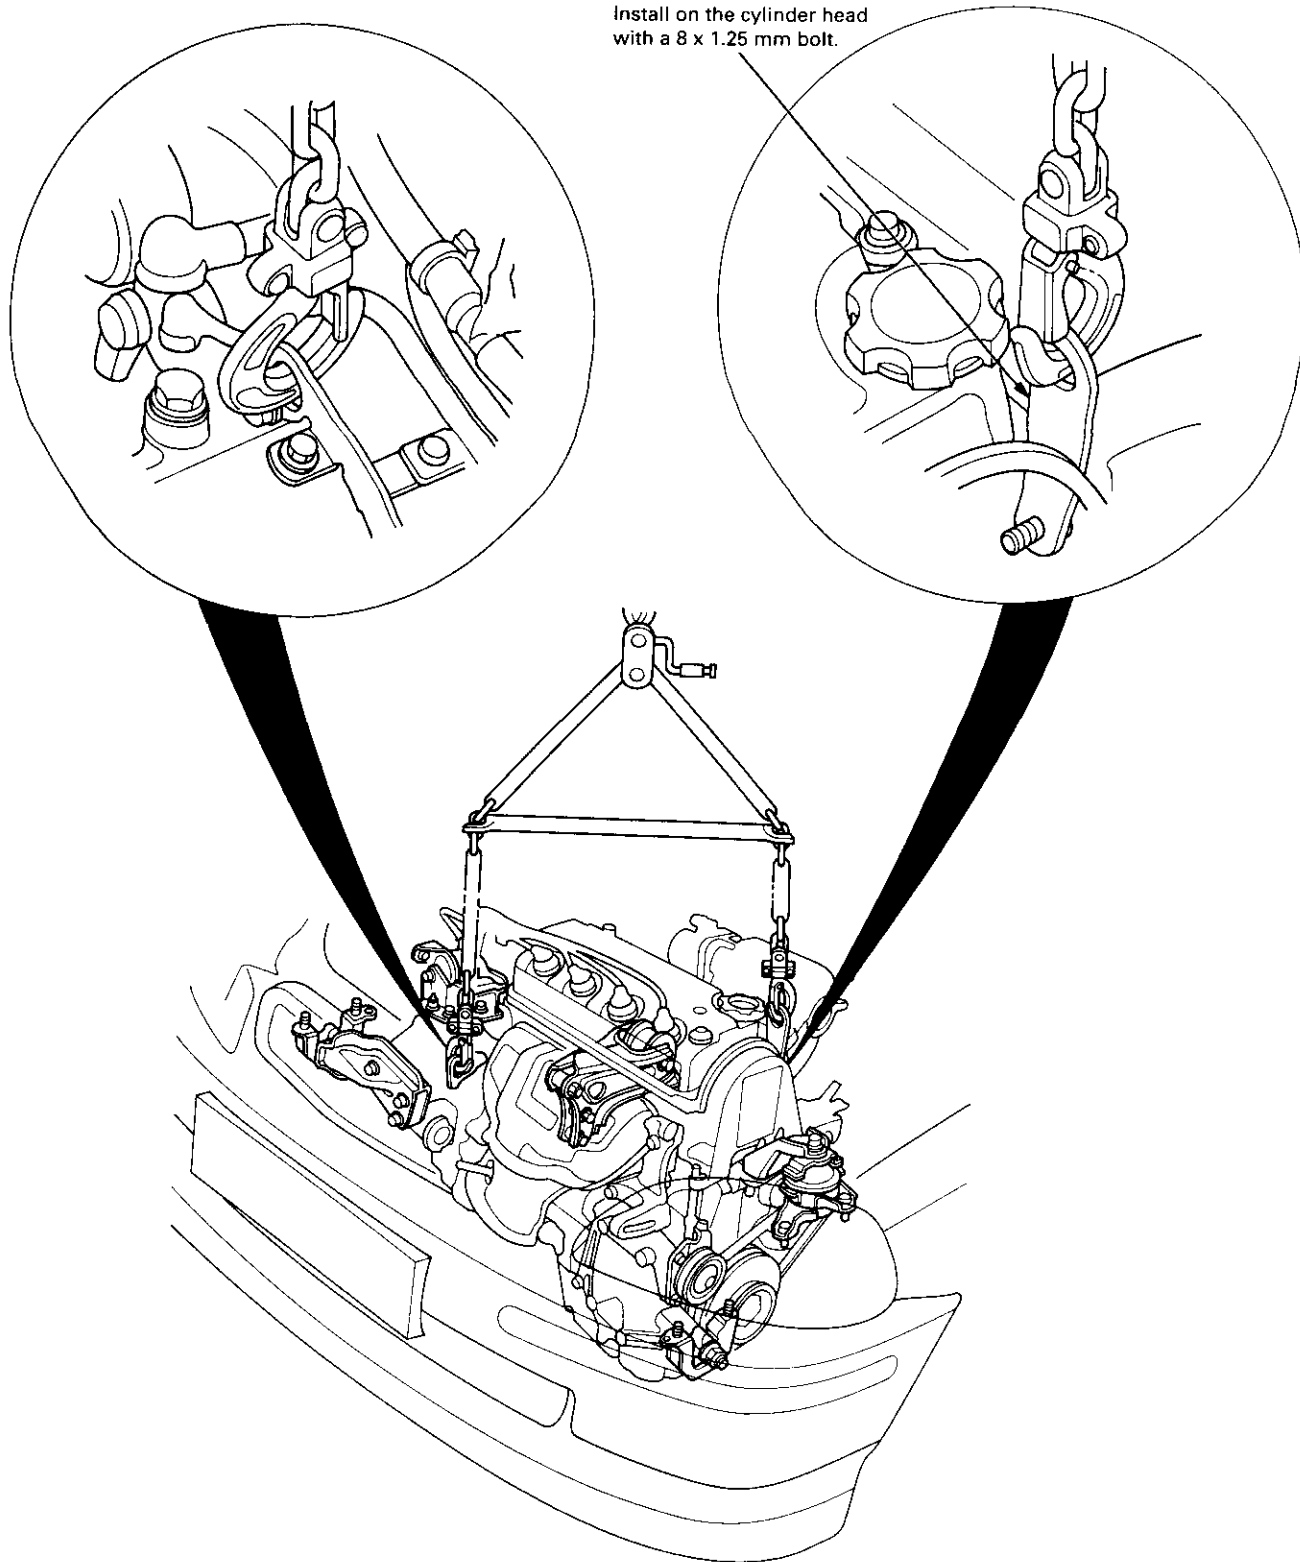





37. Remove the left and right front mount and bracket.

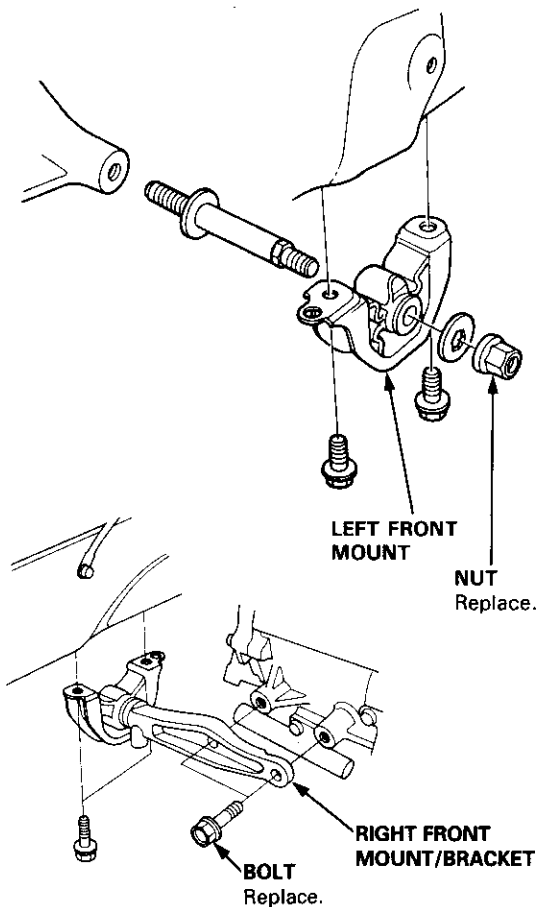


38. Remove the rear mount bracket.

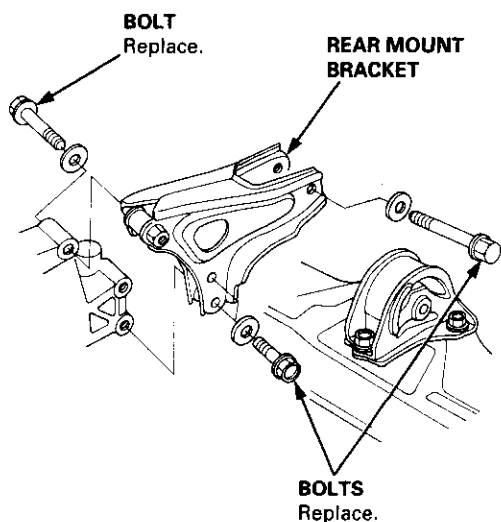

39. Remove the upper bracket.

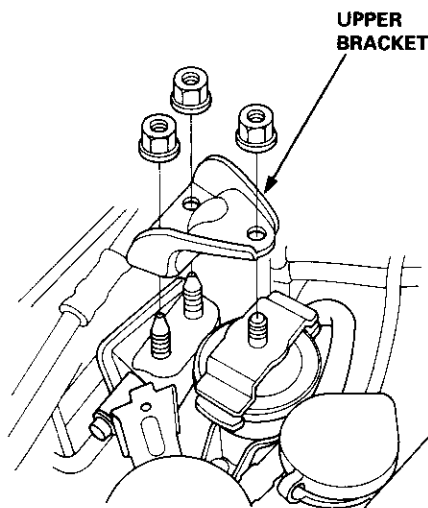

40. Remove the transmission mount bracket, then remove the transmission mount.

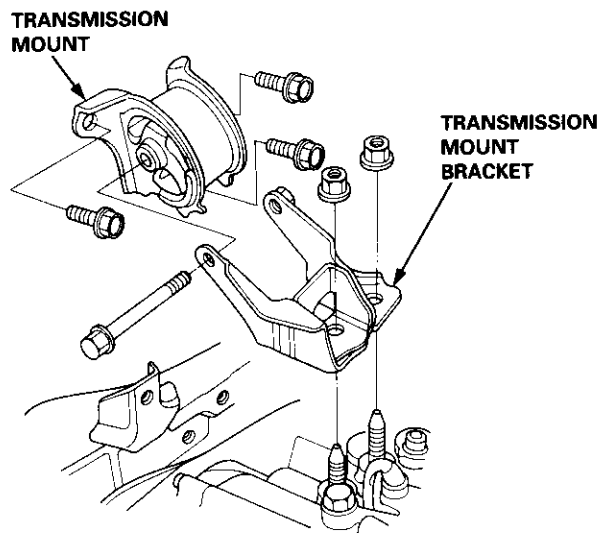

41. Check that the engine/transmission is completely free of vacuum hoses, fuel and coolant hoses and electrical wiring.


42. Slowly raise the engine approximately 150 mm (6 in). Check once again that all hoses and wires are disconnected from the engine/transmission.

43. Raise the engine all the way, and remove it from the car.

Engine Removal/Installation

Installation

Bracket Bolts Torque Specifications:

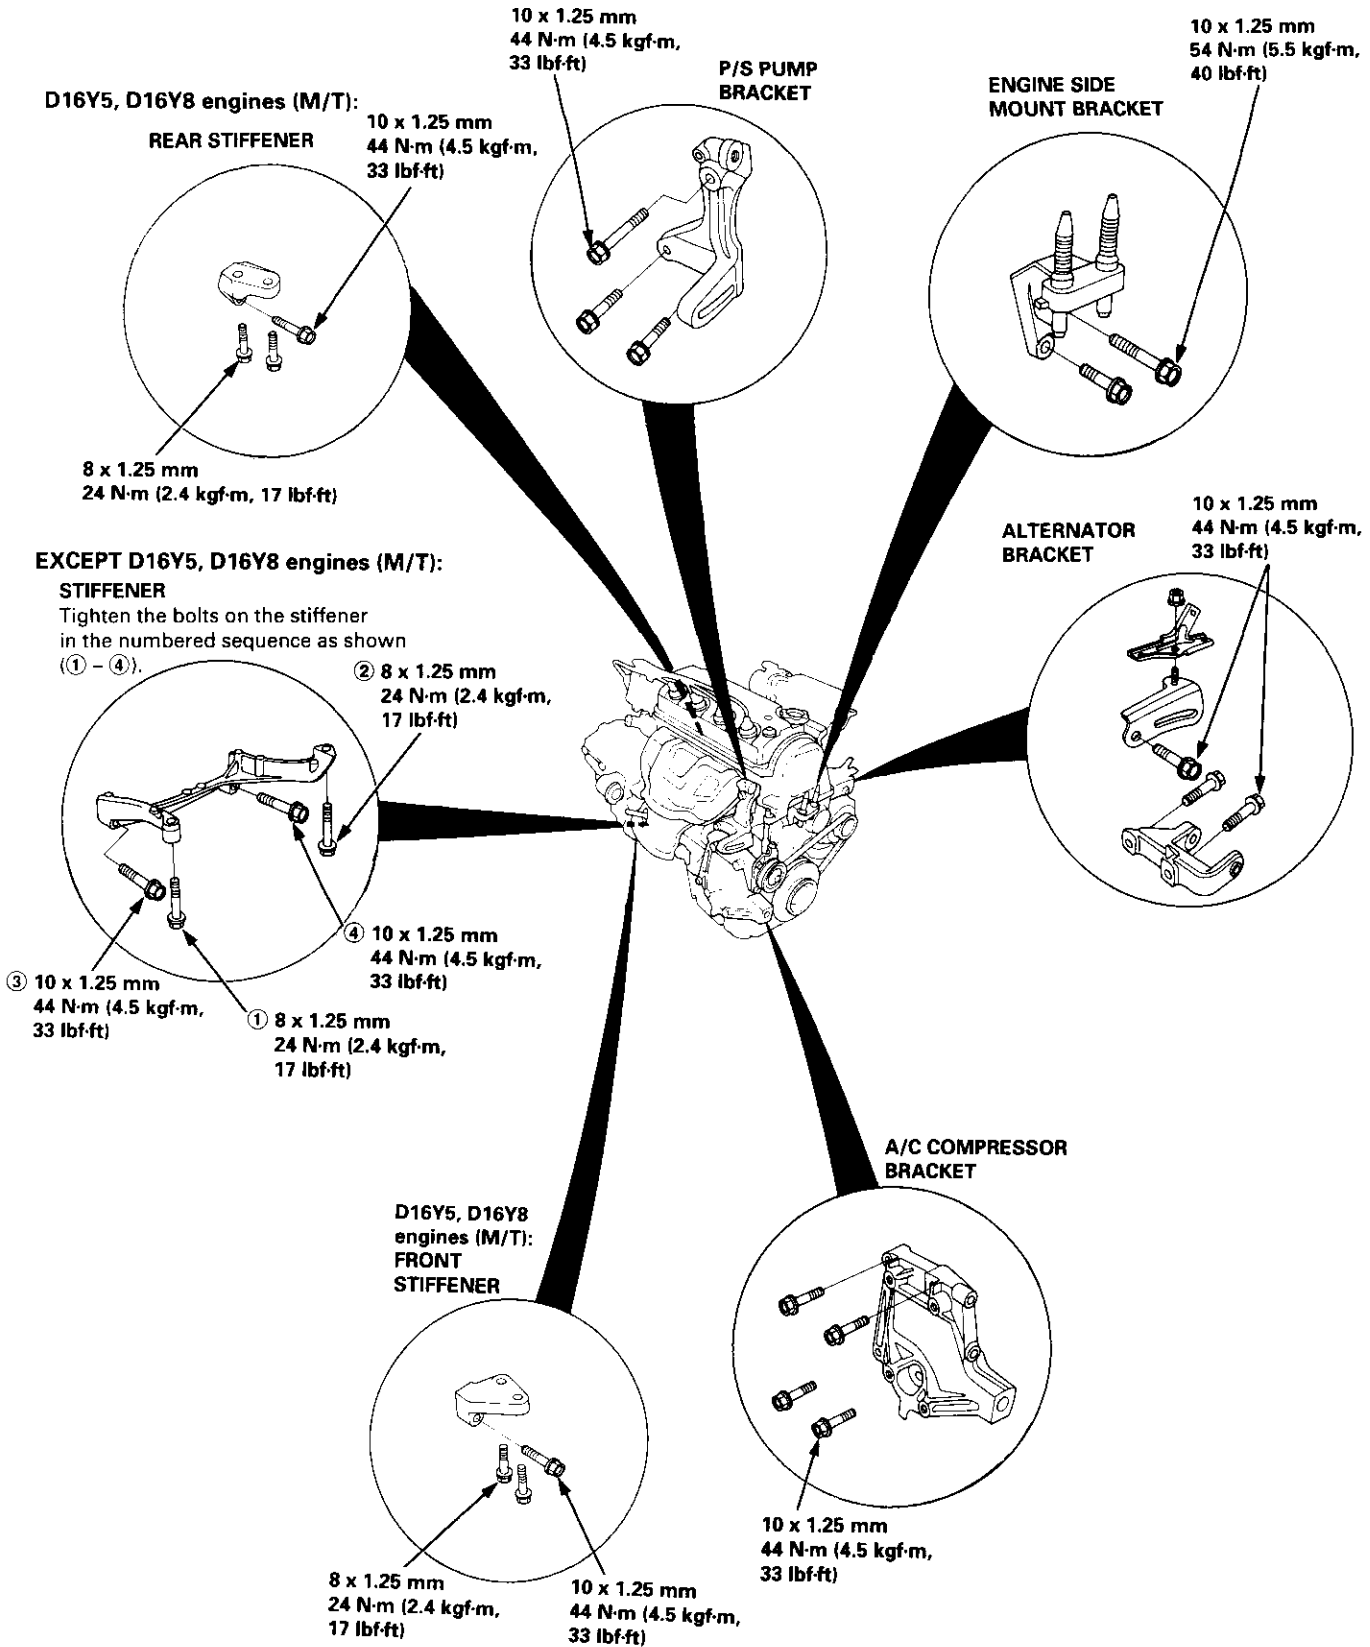




Engine Installation:

Install the engine in the reverse order of removal. Reinstall the mount bolts/nuts in the following sequence. Failure to follow these procedures may cause excessive noise and vibration, and reduce bushing life.


1. Install the transmission mount and bracket, then tighten the bolts on the frame side.

NOTE: Do not tighten the bolts/nuts on the transmission side.


CVT:

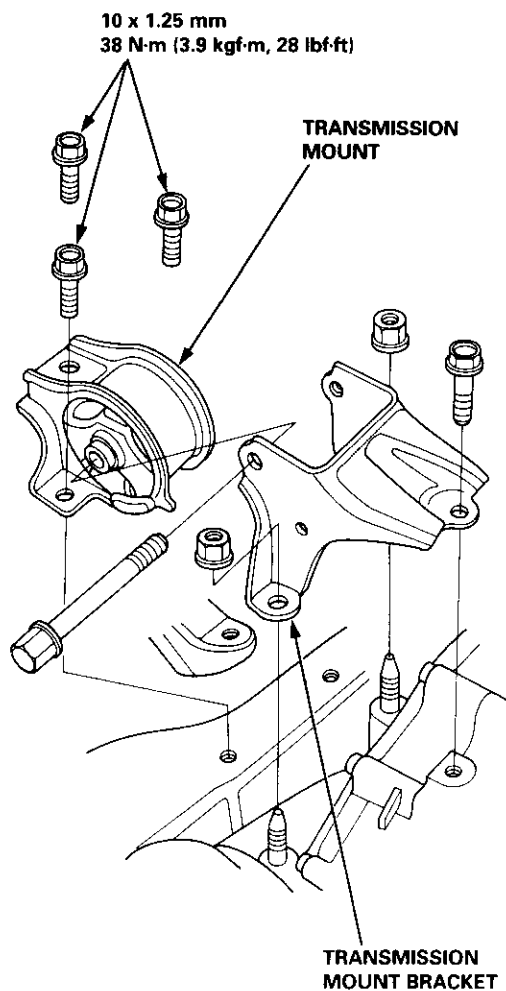

Except CVT:

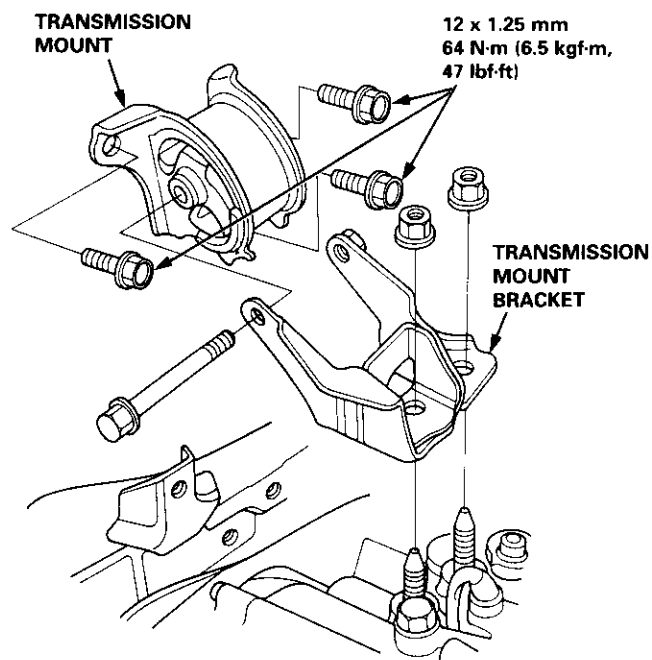

2. Install the upper bracket, then tighten the nuts in the numbered sequence shown (① - ②).

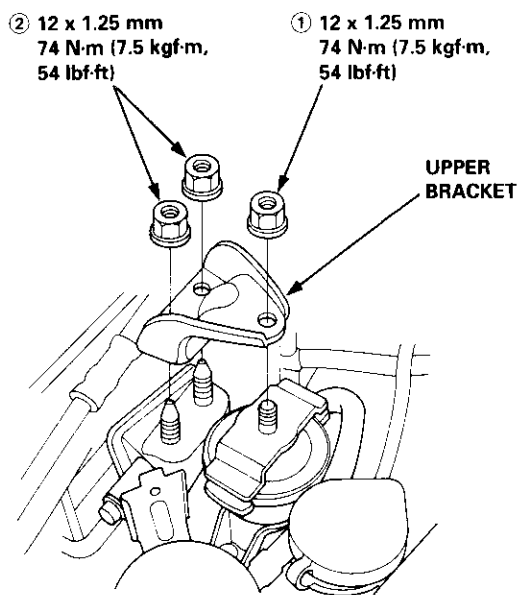


(cont'd)

Engine Removal/Installation


Installation (cont'd)

3. Install the rear mount bracket, then tighten the bolts in the numbered sequence shown (① - ③).


CVT:

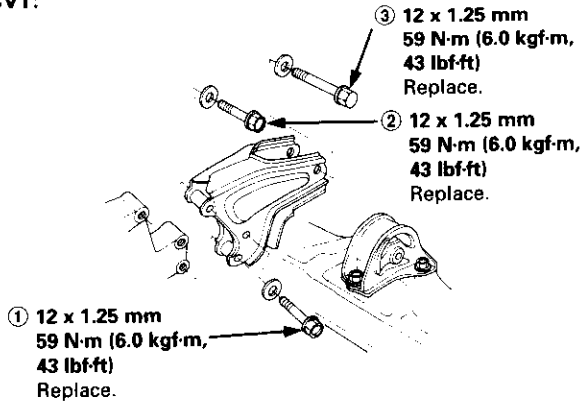

Except CVT:

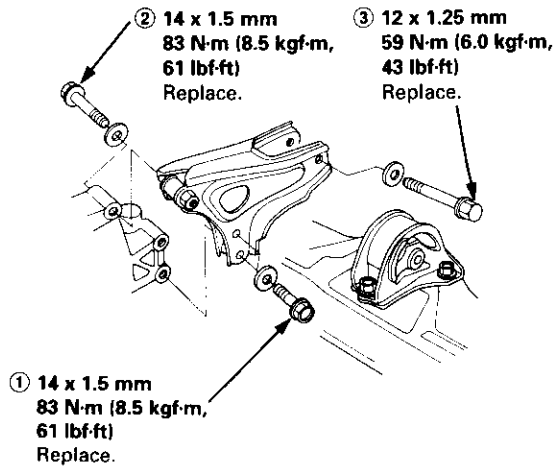


4. Tighten the bolt/nuts on the transmission mount bracket in the numbered sequence shown (① - ②).

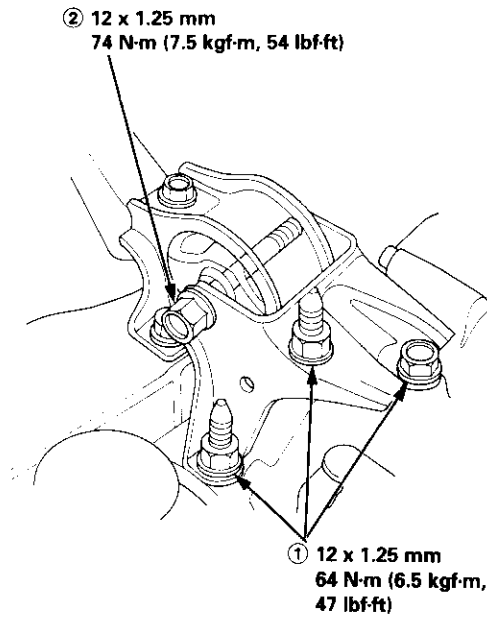


5. Tighten the bolts on the right front mount/bracket in the numbered sequence shown (① - ②).

CVT:

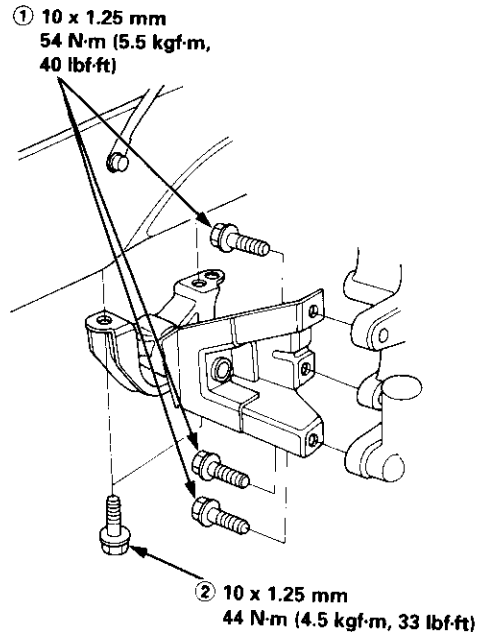



Except CVT:

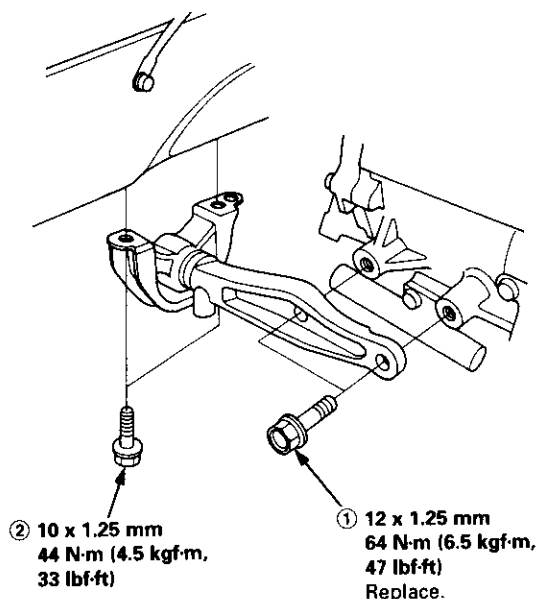


② 10 x 1.25 mm
44 N·m (4.5 kgf·m,
33 lbf·ft)

① 12 x 1.25 mm
64 N·m (6.5 kgf·m,
47 lbf·ft)
Replace.

6. Tighten the bolts/nut on the left front mount in the numbered sequence shown (① - ③).

① 12 x 1.25 mm
83 N·m (8.5 kgf·m, 61 lbf·ft)

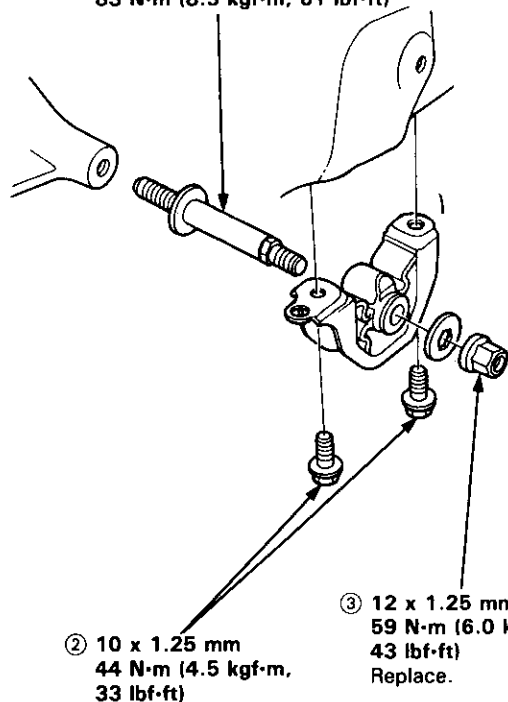

② 10 x 1.25 mm
44 N·m (4.5 kgf·m,
33 lbf·ft)

③ 12 x 1.25 mm
59 N·m (6.0 kgf·m,
43 lbf·ft)
Replace.

7. Perform the following:

- Clean the areas where the driveshaft(s) and the intermediate shaft contact the transmission (differential) thoroughly with solvent or carburetor cleaner, and dry with compressed air.
- Check that the set rings on the ends of the driveshaft and intermediate shaft click into place.
CAUTION: Use new set rings.
- Adjust the shift cable (see section 14).
- Adjust the throttle cable (see section 11).
- Adjust the cruise control cable (see section 23).
- Refill the engine with engine oil (see page 8-5).
- Refill the transmission with fluid (see section 13, 14).
- Refill the radiator with engine coolant (see page 10-6).
- Bleed air from the cooling system with the heater valve open (see page 10-6).
- Clean the battery posts and cable terminals with sandpaper, assemble them, then apply grease to prevent corrosion.
- Inspect for fuel leakage (see section 11).

After assembling the fuel line, turn on (II) the ignition switch (do not operate the starter) so that the fuel pump runs for approximately two seconds and the fuel line pressurizes. Repeat this operation two or three times, then check for fuel leakage at any point in the fuel line.


(cont'd)

Engine Removal/Installation

Installation (cont'd)

Mount and Bracket Bolts/Nuts Torque Value Specifications:

- A: 10 x 1.25 mm
64 N·m (6.5 kgf·m, 47 lbf·ft)
- B: 10 x 1.25 mm
44 N·m (4.5 kgf·m, 33 lbf·ft)
- C: 12 x 1.25 mm
83 N·m (8.5 kgf·m, 61 lbf·ft)
- D: 12 x 1.25 mm
59 N·m (6.0 kgf·m, 43 lbf·ft)
Replace.

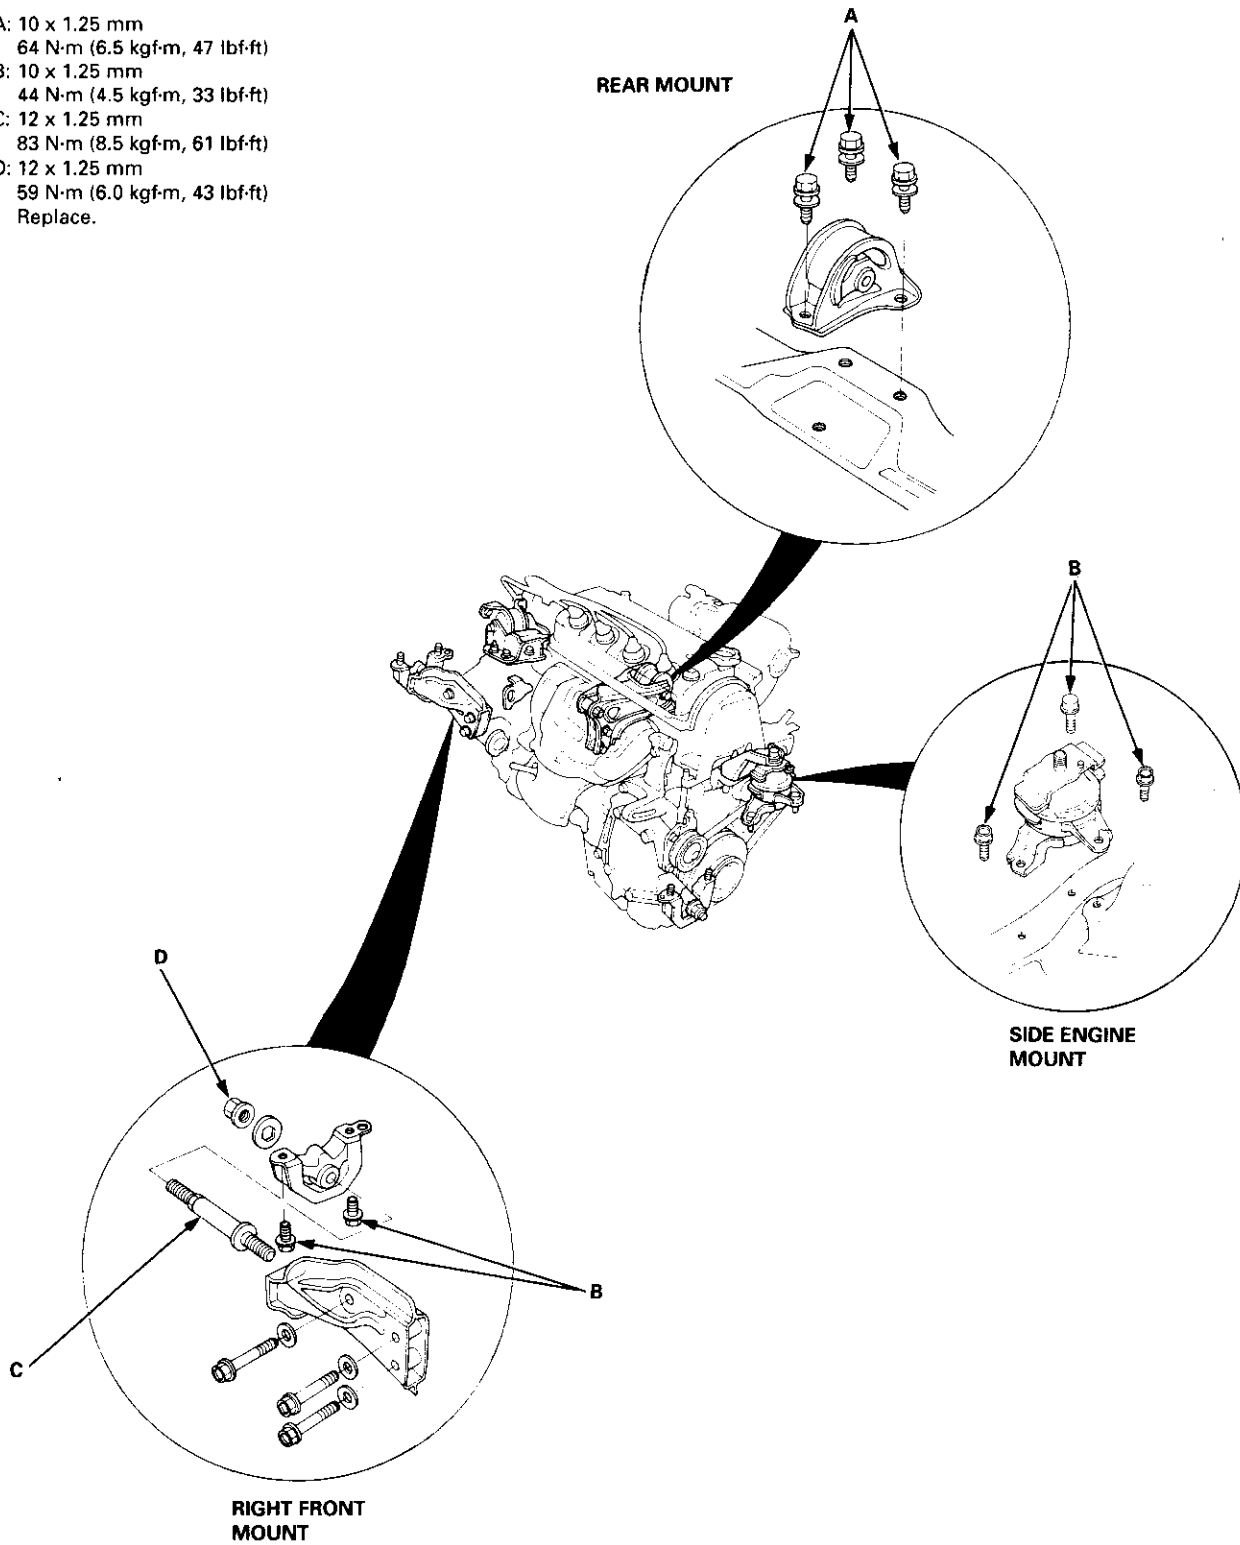

Cylinder Head/Valve Train

Special Tools	6-2	Cylinder Head	
VTEC Control System		Illustrated Index	6-23
Troubleshooting Flowchart	6-3	Removal	6-27
VTEC Solenoid Valve		Warpage	6-40
Inspection	6-6	Installation	6-45
VTEC Rocker Arms		Rocker Arms	
Manual Inspection		Removal	6-30
(D16Y5 engine)	6-7	Disassembly/Reassembly	6-31
Manual Inspection		Rocker Arms and Lost Motion Assemblies	
(D16Y8 engine)	6-7	Inspection (D16Y5, D16Y8	
Inspection Using Special Tools		engines)	6-34
(D16Y5 engine)	6-8	Rocker Arms and Shafts	
Inspection Using Special Tools		Clearance Inspection	6-35
(D16Y8 engine)	6-10	Camshaft	
Valve Clearance		Inspection	6-36
Adjustment	6-12	Valves, Valve Springs and Valve Seals	
Valve Seals		Removal	6-38
Replacement (Cylinder head removal		Valve Guides	
not required)	6-14	Valve Movement	6-39
Crankshaft Pulley and Pulley Bolt		Replacement	6-41
Replacement	6-16	Reaming	6-43
Timing Belt		Valve Seats	
Illustrated Index	6-17	Reconditioning	6-40
Inspection	6-18	Valves	
Tension Adjustment	6-18	Installation	6-43
Removal	6-19	Camshaft/Rocker Arms and	
Installation	6-20	Camshaft Seal/Pulley	
Crankshaft Speed Fluctuation (CKF) Sensor		Installation	6-44
Replacement	6-22		




Special Tools


Ref. No.	Tool Number	Description	Qty	Page Reference
①	07HAH - PJ7010B	Valve Guide Reamer, 5.5 mm	1	6-43
②	07JAA - 001010A	Socket, 17 mm	1	6-16
③	07JAB - 001020A	Holder Handle	1	6-16
④	07LAJ - PR3020B	Air Stopper	1	6-8, 10
⑤	07NAB - 001040A	Holder Attachment, 50 mm	1	6-16
⑥	07NAJ - P07010A	Pressure Gauge Adapter	1	6-4
⑦	07406 - 0020201	A/T Pressure Hose	1	6-4
or ⑦ - 1	07MAJ - PY4011A	A/T Pressure Hose, 2,210 mm	1	6-4
and ⑦ - 2	07MAJ - PY40120	A/T Pressure Adapter	1	6-4
⑧	07406 - 0070300	A/T Low Pressure Gauge W/Panel	1	6-4
⑨	07742 - 0010100	Valve Guide Driver, 5.5 mm	1	6-41, 42



①




②




③




④

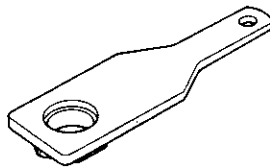


⑤

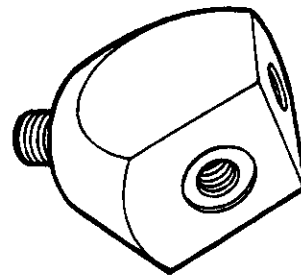

⑥

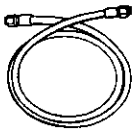

⑦
⑦ - 1



⑦ - 2



⑧



⑨

VTEC Control System



Troubleshooting Flowchart

P1259

The scan tool indicates Diagnostic Trouble Code (DTC) P1259: A problem in the VTEC Pressure Switch circuit or VTEC Solenoid Valve circuit.

Refer to page 11-38 through 11-55 before troubleshooting.

- The MIL has been reported on.
- DTC P1259 is stored.

Check the VTEC Control System:

1. Do the engine control module (ECM)/powertrain control module (PCM) Reset Procedure (see section 11).
2. Start the engine.
3. Warm up the engine to normal operating temperature (cooling fan comes on).
4. Do the Road Test.*

*** Road Test:**

Accelerate in 1st gear to an engine speed over 3,000 rpm (D16Y5 engine) or 6,000 rpm (D16Y8 engine). Hold that engine speed for at least two seconds. If the DTC P1259 is not repeated during the first road test, repeat this test two more times.

Is DTC P1259 indicated?

NO

Intermittent failure, system is OK at this time.
Check for poor connections or loose wires at VTEC pressure switch, VTEC solenoid valve and ECM/PCM.

YES

Test the VTEC Pressure Switch:

1. Turn the ignition switch OFF.
2. Disconnect the VTEC Pressure switch connector.
3. Check for continuity between VTEC pressure switch connector terminal No. 1 and No. 2.

Is there continuity?

NO

Replace the VTEC pressure switch.

YES

Test the VTEC Pressure Switch Wire:

1. Turn the ignition switch ON (II).
2. Measure the voltage between VTEC pressure switch connector No. 1 and body ground.

Is there approx. 12 V?


NO

Inspect for an open or short to ground in the wire between the VTEC pressure switch and ECM/PCM (C15).
If the wire is OK, substitute a known-good ECM/PCM and recheck.


YES

(To page 6-4)

VTEC PRESSURE SWITCH CONNECTOR

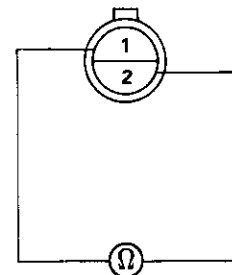

TERMINAL SIDE OF MALE TERMINALS

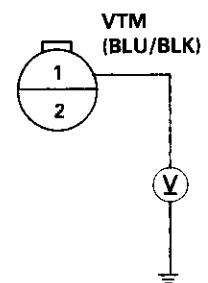

WIRE SIDE OF FEMALE TERMINALS

(cont'd)

VTEC Control System

Troubleshooting Flowchart (cont'd)

(From page 6-3)

Test the VTEC Pressure Switch Wire:
Measure voltage across the VTEC pressure switch connector.


Is there approx. 12 V?

YES

NO

Repair open in the wire between VTEC pressure switch and A10 or A23 of the ECM/PCM.
If the wire is OK, substitute a known-good ECM/PCM and recheck.

VTEC PRESSURE SWITCH CONNECTOR

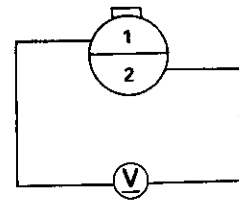


WIRE SIDE OF FEMALE TERMINAL

Test the VTEC Solenoid Valve:

1. Turn the ignition switch OFF.
2. Remove the VTEC pressure switch and install the special tool as shown, then reinstall the VTEC pressure switch.
3. Connect a tachometer (see section 11).
4. Start the engine.
5. Warm up engine to normal operating temperature (cooling fan comes on).
6. Check oil pressure at the following engine speeds: D16Y5 engine: 1000 and 3000 rpm, D16Y8 engine: 1000, 3000 and 5000 rpm.

A/T LOW PRESSURE GAUGE W/PANEL
07406-0070300

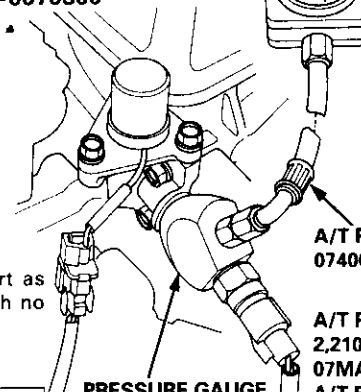

A/T PRESSURE HOSE
07406-0020201

or

A/T PRESSURE HOSE,
2,210 mm

07MAJ-PY4011A and
A/T PRESSURE ADAPTER
07MAJ-PY40120

NOTE: Keep measuring time as short as possible because engine is running with no load (less than one minute).

Is pressure below 49 kPa (0.5 kgf/cm², 7 psi)?

YES


NO

Inspect the VTEC solenoid valve.

Test the VTEC Solenoid Valve:

1. Turn the ignition switch OFF.
2. Disconnect the VTEC solenoid valve connector.
3. Attach the battery positive terminal to the GRN/YEL terminal.
4. Start the engine and check the oil pressure at the following engine speed: D16Y5 engine 3000 rpm, D16Y8 engine 5000 rpm.

A/T LOW PRESSURE GAUGE W/PANEL
07406-0070300

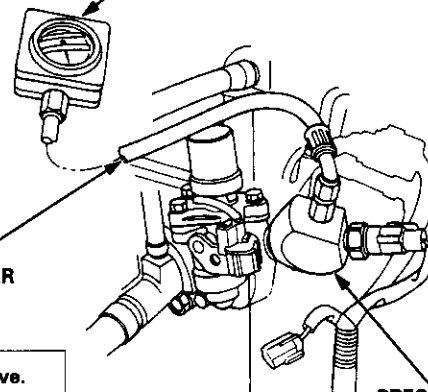

A/T PRESSURE HOSE
07406-0020201

or

A/T PRESSURE HOSE,
2,210 mm
07MAJ-PY4011A and
A/T PRESSURE ADAPTER
07MAJ-PY40120


PRESSURE GAUGE ADAPTER
07NAJ-P07010A

Is the pressure above: D16Y5 engine: 250 kPa (2.5 kgf/cm², 36 psi), D16Y8 engine: 390 kPa (4.0 kgf/cm², 57 psi)?

YES

NO

Inspect the VTEC solenoid valve.

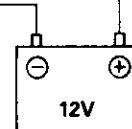

(To page 6-5)



(From page 6-4)

Test the VTEC Pressure Switch:

1. Turn the ignition switch OFF.
2. Reconnect the VTEC pressure switch connector.
3. Start the engine.
4. With the battery positive terminal connected to the VTEC solenoid valve, measure voltage between C15 and A10 or A23

Is there approx. 12 V above 5,000 rpm?

NO

Replace the VTEC pressure switch.

YES

Test the VTEC Solenoid Valve:

1. Turn the ignition switch OFF.
2. Disconnect the battery positive terminal from the VTEC solenoid valve.
3. Check for continuity between the VTEC solenoid valve connector terminal No. 1 and body ground.

Is there 14 – 30 Ω?

NO

Replace the VTEC solenoid valve.

YES

Test the VTEC Solenoid Valve Wire:

Check for continuity between the VTEC solenoid valve connector terminal No. 1 and A8.

Is there continuity?

NO

Repair open in the wire between the ECM/PCM (A8) and VTEC solenoid valve connector.

YES

Test the VTEC Solenoid Valve Wire:

Check for continuity between the VTEC solenoid valve connector terminal No. 1 and body ground.

Is there continuity?


YES

Repair short in the wire between the ECM/PCM (A8) and VTEC solenoid valve connector.

NO


Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

ECM CONNECTORS

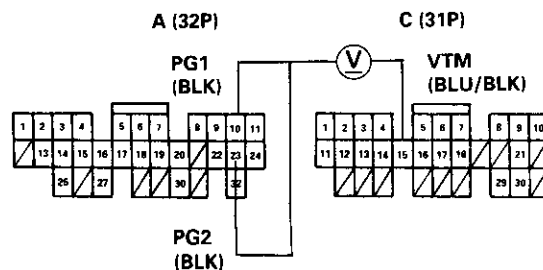


WIRE SIDE OF FEMALE TERMINALS

VTEC SOLENOID VALVE CONNECTOR

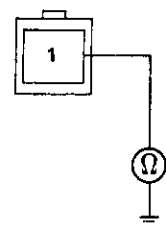


TERMINAL SIDE OF MALE TERMINAL

VTEC SOLENOID VALVE CONNECTOR ECM CONNECTOR A (32P)

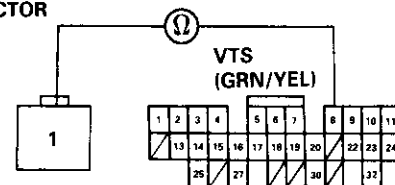

WIRE SIDE OF FEMALE TERMINALS

VTEC SOLENOID VALVE CONNECTOR

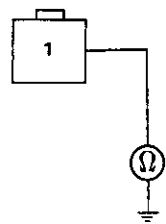


WIRE SIDE OF FEMALE TERMINAL

VTEC Solenoid Valve

Inspection


1. Disconnect the 1P connector from the VTEC solenoid valve.
2. Measure resistance between the terminal and body ground.

Resistance: 14 – 30 Ω

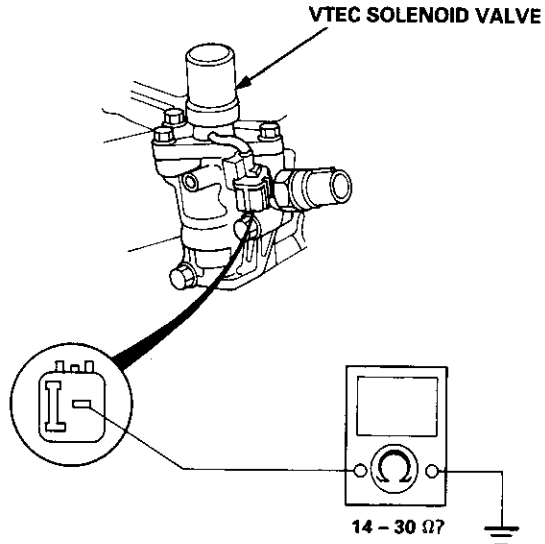


3. If the resistance is within specifications, remove the VTEC solenoid valve assembly from the cylinder head, and check the VTEC solenoid valve filter for clogging.

- If there is clogging, replace the engine oil filter and the engine oil.

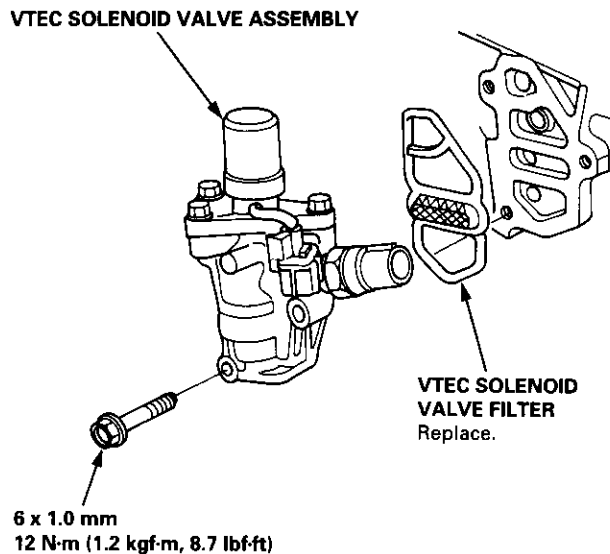

4. If the filter is not clogged, push the VTEC solenoid valve with your finger and check its movement.

- If the VTEC solenoid valve is normal, check the engine oil pressure.

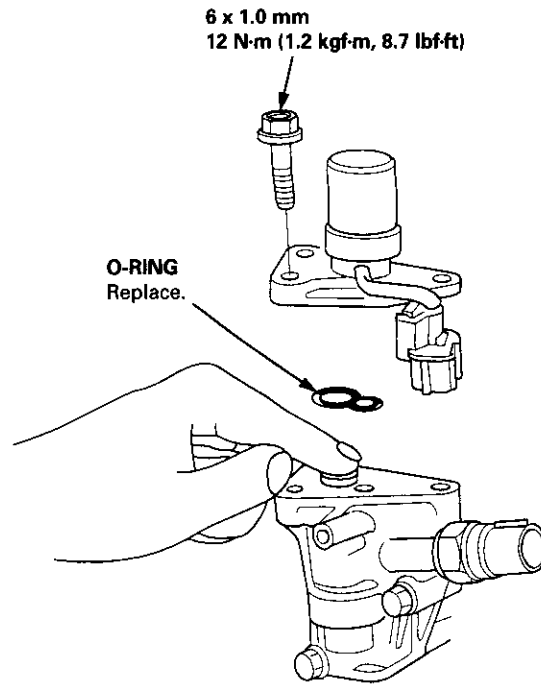




Manual Inspection (D16Y5 engine)

1. Set the No. 1 piston at TDC.
2. Remove the cylinder head cover.

NOTE: Refer to page 6-46 when installing the cylinder head cover.
3. Move the intake secondary rocker arm on the No. 1 cylinder manually.
4. Check that the intake secondary rocker arm moves independently of the primary intake rocker arm.

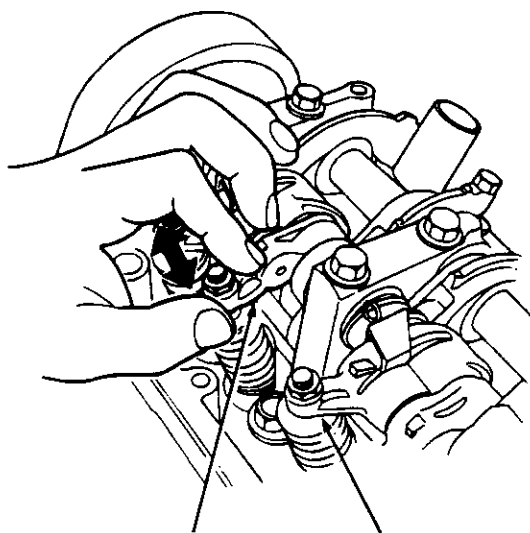


SECONDARY ROCKER ARM
• Push and pull.
PRIMARY ROCKER ARM

5. Check the intake secondary rocker arm of each cylinder at TDC.
 - If the intake secondary rocker arm does not move, remove the primary and secondary intake rocker arms as an assembly and check that the pistons in the secondary and primary rocker arms move smoothly.
 - If any rocker arm needs replacing, replace the primary and secondary rocker arms as an assembly.

Manual Inspection (D16Y8 engine)

1. Set the No. 1 piston at TDC.
2. Remove the cylinder head cover.

NOTE: Refer to page 6-46 when installing the cylinder head cover.
3. Push the intake mid rocker arm on the No. 1 cylinder manually.
4. Check that the intake mid rocker arm moves independently of the primary and secondary intake rocker arms.

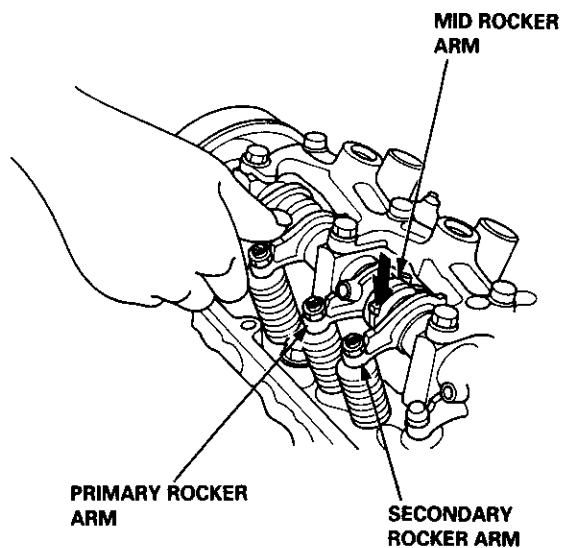

5. Check the intake mid rocker arm of each cylinder at TDC.
 - If the intake mid rocker arm does not move, remove the mid, primary and secondary intake rocker arms as an assembly and check that the pistons in the mid and primary rocker arms move smoothly.
 - If any rocker arm needs replacing, replace the primary, mid, and secondary rocker arms as an assembly.

VTEC Rocker Arms

Inspection Using Special Tools (D16Y5 engine)


CAUTION:

- Before using the Valve Inspection Tool, make sure that the air pressure gauge on the air compressor indicates over 400 kPa (4 kgf/cm², 57 psi).
- Inspect the valve clearance before rocker arm inspection.
- Cover the timing belt with a shop towel to protect the belt.
- Check the intake primary rocker arm of each cylinder at TDC.

1. Remove the cylinder head cover.


NOTE: Refer to page 6-46 when installing the cylinder head cover.

2. Plug the relief hole with the special tool.

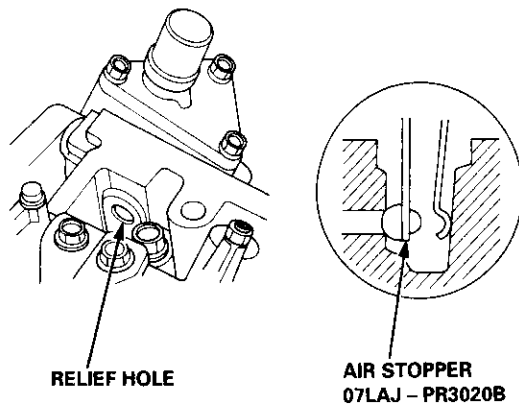

3. Remove the sealing bolt from the inspection hole and connect the Valve Inspection Tool.

10 x 1.0 mm
SEALING BOLT
20 N·m (2.0 kgf·m, 14 lbf·ft)

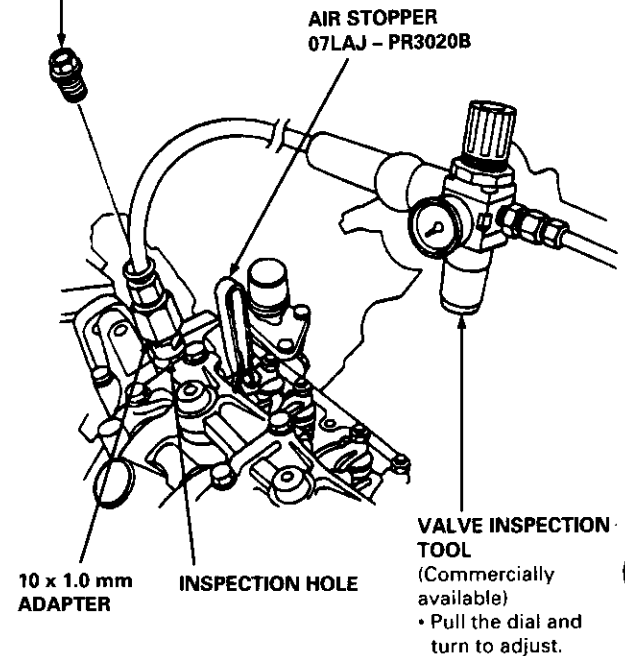

4. Loosen the regulator valve on the valve inspection tool and apply specified air pressure to the intake rocker arm timing piston.



Specified Air Pressure:
250 kPa (2.5 kgf/cm², 36 psi)



5. With the specified air pressure applied, push up the timing plate; the synchronizing piston will pop out and engage the intake secondary rocker arm. Visually check the engagement of the synchronizing piston.

NOTE:


- The synchronizing piston can be seen in the gap between the secondary and primary rocker arms.
- With the timing plate engaged in the groove on the timing piston, the piston is locked in the pushed out position.

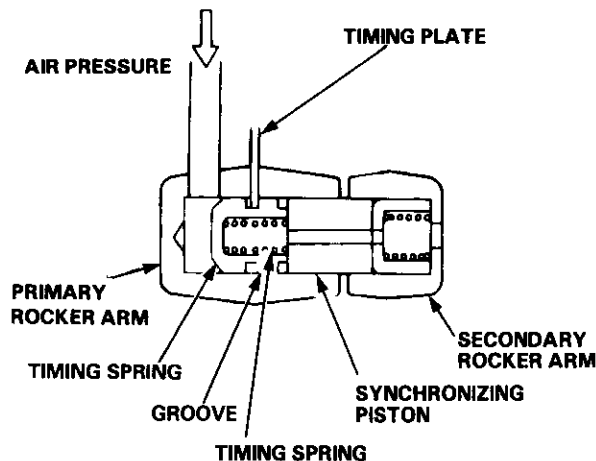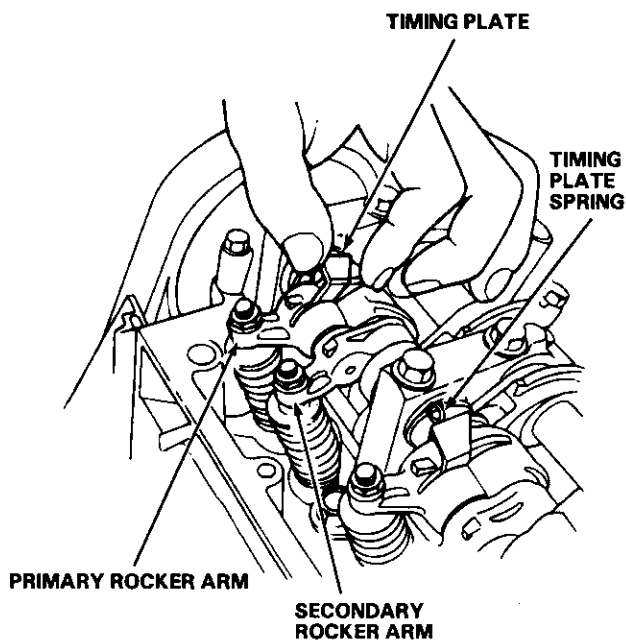

6. Stop applying air pressure and push up the timing plate; the synchronizing piston will snap back to its original position. Visually check the disengagement of the synchronizing pistons.

NOTE:

- When the timing plate is pushed up, it releases the timing piston, letting the return spring move the synchronizing piston to its original position.
- Replace the intake rocker arms as an assembly if either does not work correctly.

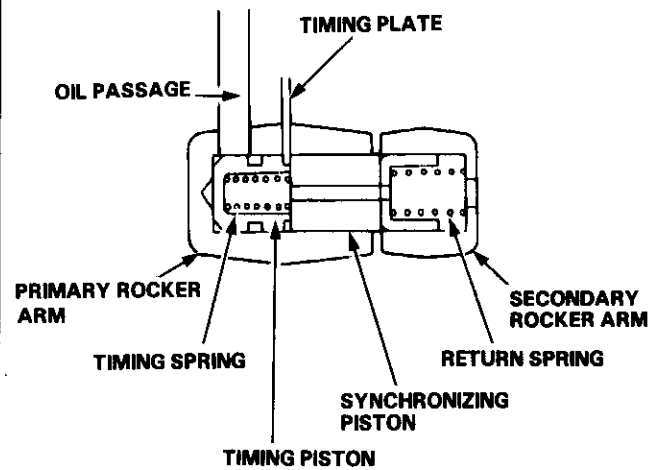

7. Remove the special tools.
8. After inspection, check that the malfunction indicator lamp (MIL) does not come on.

VTEC Rocker Arms

Inspection Using Special Tools (D16Y8 engine)


CAUTION:

- Before using the Valve Inspection Tool, make sure that the air pressure gauge on the air compressor indicates over 400 kPa (4 kgf/cm², 57 psi).
- Inspect the valve clearance before rocker arm inspection.
- Cover the timing belt with a shop towel to protect the belt.
- Check the intake primary rocker arm of each cylinder at TDC.


1. Remove the cylinder head cover.

NOTE: Refer to page 6-46 when installing the cylinder head cover.

2. Plug the relief hole with the special tool.

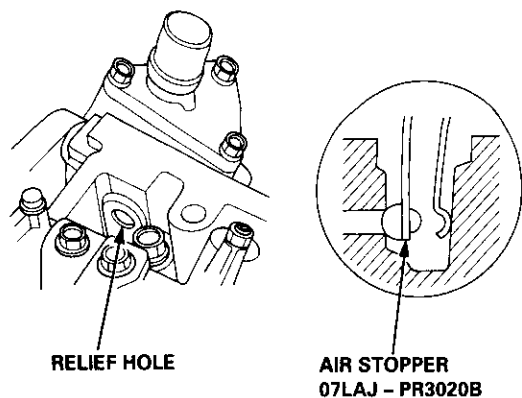


3. Remove the sealing bolt from the inspection hole and connect the Valve Inspection Tool.

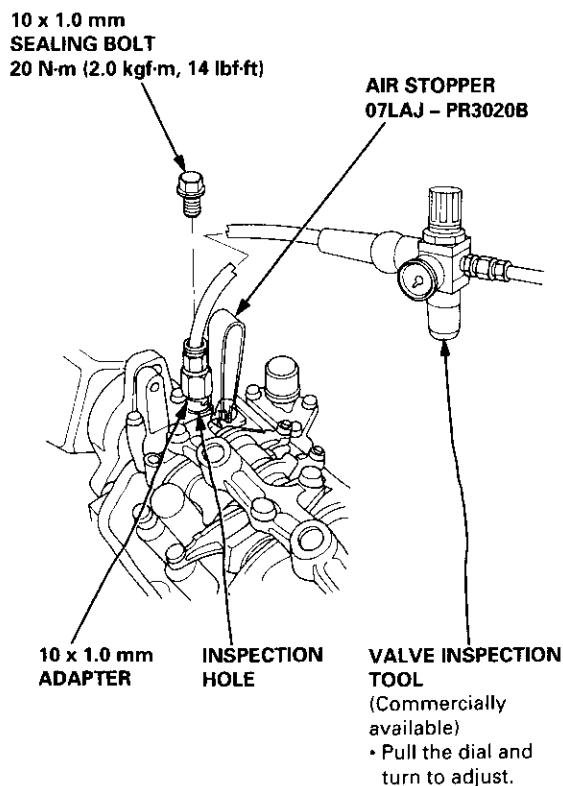




4. Loosen the regulator valve on the valve inspection tool and apply the specified air pressure to the rocker arm synchronizing piston A/B.

Specified Air Pressure:
250 kPa (2.5 kgf/cm², 36 psi)

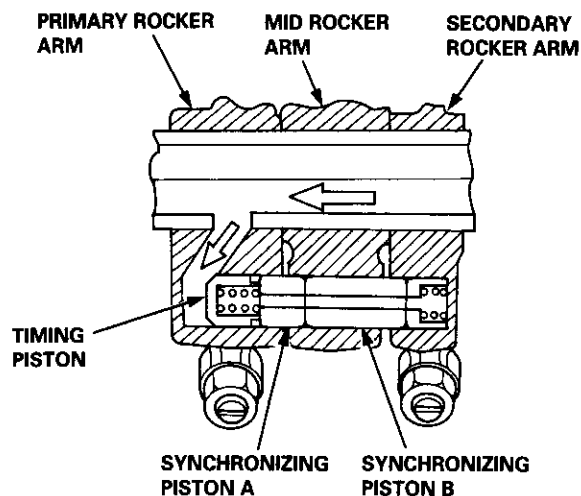


5. Make sure that the intake primary and secondary rocker arms are mechanically connected by the piston and that the mid rocker arm does not move when pushed manually.

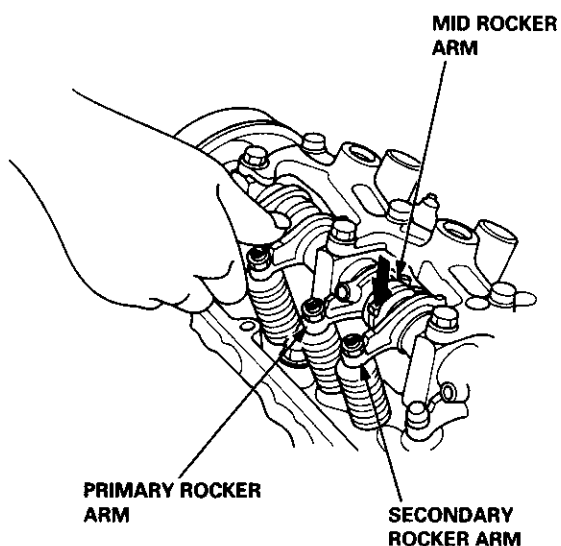

If any intake mid rocker arm moves independently of the primary and secondary rocker arms, replace the rocker arms as a set.

6. Remove the special tools.
7. Use a 10 mm diameter rod to depress each lost motion assembly through its full movement. Replace any lost motion assembly that does not move smoothly.

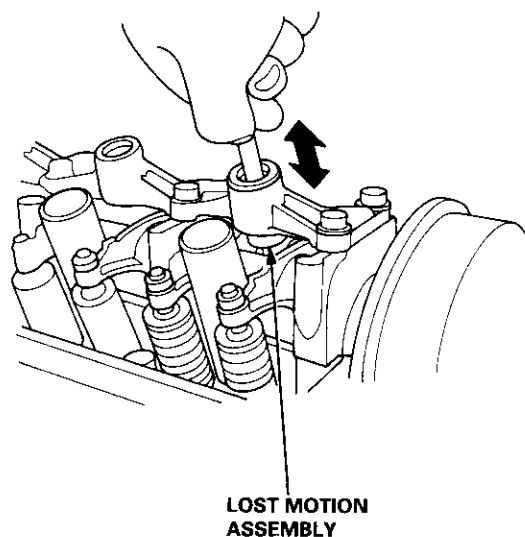

8. After inspection, check that the MIL does not come on.

Valve Clearance

Adjustment


NOTE:

- Valves should be adjusted only when the cylinder head temperature is less than 100°F (38°C).
- After adjusting, retorque the crankshaft pulley bolt (see page 6-16).

1. Remove the cylinder head cover.

NOTE: Refer to page 6-46 when installing the cylinder head cover.

2. Remove the upper cover (see page 6-19).
3. Set the No. 1 piston at TDC. "UP" mark on the camshaft pulley should be at top, and TDC marks should align with the cylinder head surface.

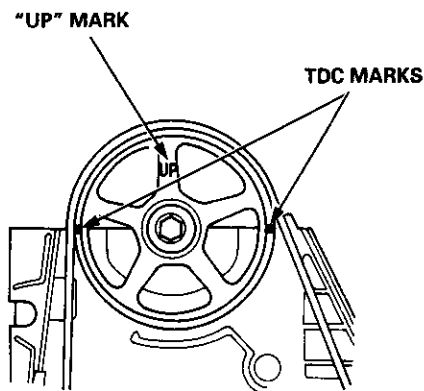

4. Adjust valves on No. 1 cylinder.


Intake: 0.18 – 0.22 mm (0.007 – 0.009 in)
Exhaust: 0.23 – 0.27 mm (0.009 – 0.011 in)

5. Loosen the locknut, and turn the adjustment screw until the feeler gauge slides back and forth with a slight amount of drag.

D16Y7 engine:


CAUTION: Do not overtighten the locknuts; the rocker arms are made of aluminum.

INTAKE and EXHAUST VALVE
LOCKNUTS
18 N·m (1.8 kgf·m, 13 lbf·ft)

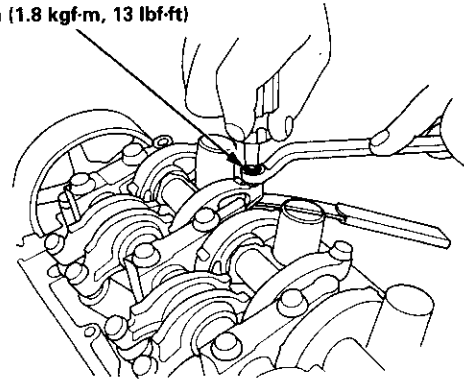


D16Y5, D16Y8 engines:

INTAKE and EXHAUST VALVE
LOCKNUTS
20 N·m (2.0 kgf·m, 14 lbf·ft)

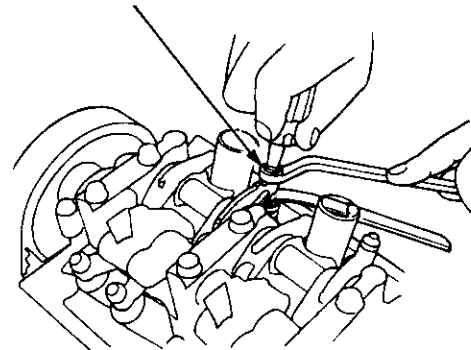


Adjusting screw locations:

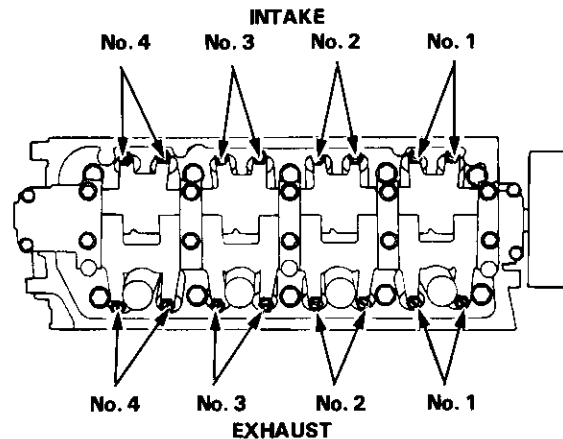





6. Tighten the locknut, and check the clearance again. Repeat the adjustment if necessary.

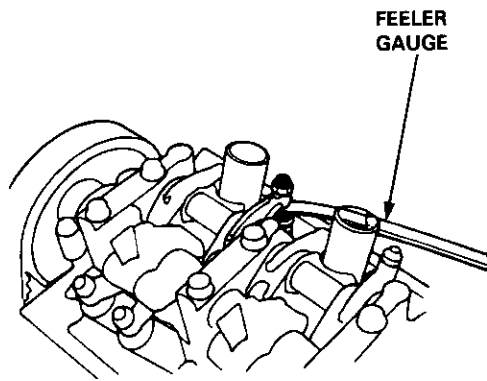


7. Rotate the crankshaft 180° counterclockwise (camshaft pulley turns 90°). The "UP" mark should be on the exhaust side. Adjust valves on No. 3 cylinder.

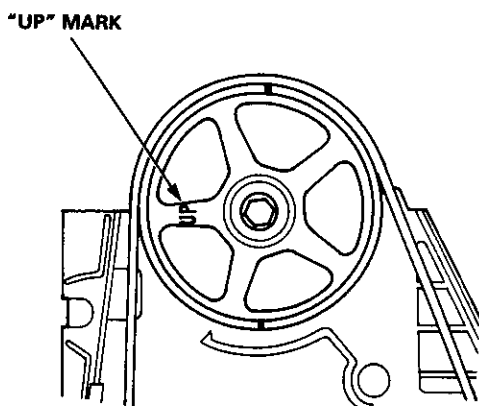

8. Rotate the crankshaft 180° counterclockwise to bring No. 4 piston to TDC. Both TDC grooves are once again visible. Adjust valves on No. 4 cylinder.

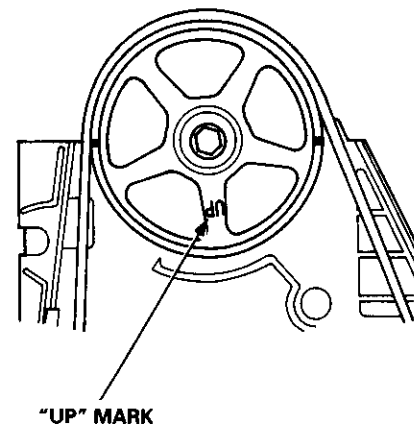

9. Rotate the crankshaft 180° counterclockwise to bring No. 2 piston to TDC. The "UP" mark should be on the intake side. Adjust valves on No. 2 cylinder.

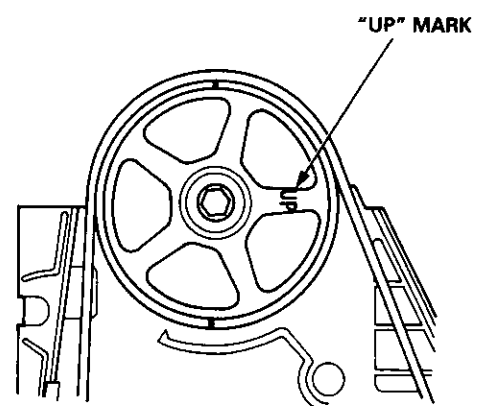

Valve Seals

Replacement (Cylinder head removal not required)

NOTE: Cylinder head removal is not required in this procedure.

The procedure shown below applies when using the in-car valve spring compressor (Snap-on YA8845 with YA8845 - 2 A 7/8" attachment).


⚠ WARNING Always wear approved eye protection when using the in-car valve spring compressor.

1. Turn the crankshaft so that the No. 1 and the No. 4 pistons are at top dead center (TDC).
2. Remove the cylinder head cover and the rocker arm assembly.

NOTE:

- Refer to page 6-30 for rocker arm assembly removal.
- When removing or installing the rocker arm assembly, do not remove the camshaft holder bolts. The bolts will keep the holders, springs and rocker arms on the shaft.
- Refer to page 6-46 when installing the cylinder head cover.


3. Remove the fuel injectors and the wire harness.
4. Using the 8 mm bolts supplied with the tool, mount the two uprights to the cylinder head at the end camshaft holders. The uprights fit over the camshaft as shown.

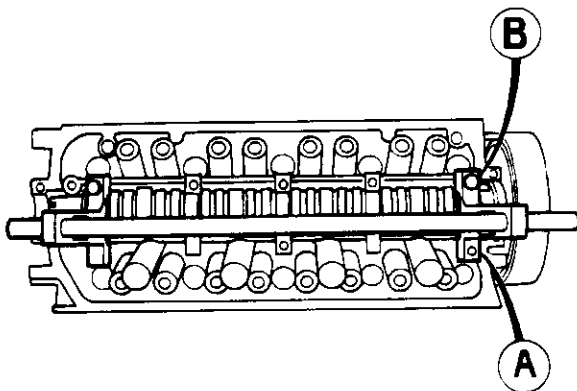


5. Insert the cross shaft through the top hole of the two uprights.

Intake Valve Seals:

6. Select the 7/8 in diameter short compressor attachment, and fasten the attachment to the No. 4 hole of the lever arm with the speed pin supplied.
7. Insert an air adaptor into the spark plug hole. Pump air into the cylinder to keep the valve closed while compressing springs and removing the valve keepers.
8. Position the lever arm under the cross shaft so the lever is perpendicular to the shaft and the compressor attachment rests on top of the retainer for the spring being compressed. Use the front position slot on the lever as shown.

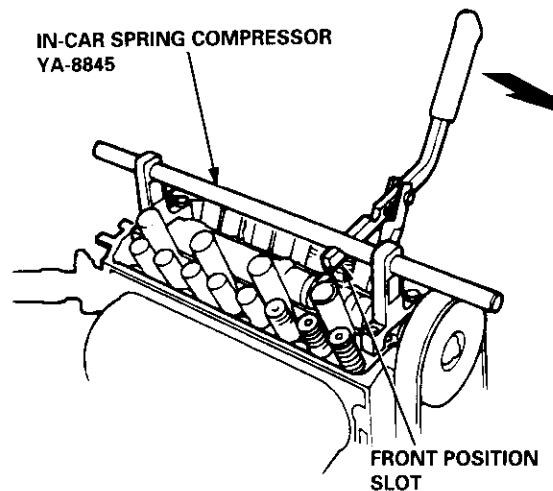

NOTE: Put shop towels over the oil passages to prevent the valve keepers from falling into the cylinder head.

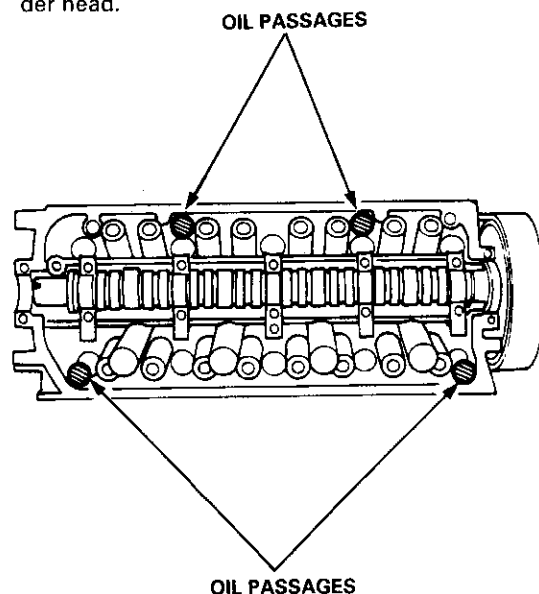




9. Using a downward motion on the lever arm, compress the valve spring and remove the keepers from the valve stem. Slowly release pressure on the spring.
10. Remove the valve seals (see page 6-38).
11. Install the valve seals (see page 6-43).
12. Install the springs, the retainers and the keepers in reverse order of removal.

Exhaust Valve Seals:

13. Select the 7/8 in. diameter short compressor attachment, and fasten the attachment to the No. 2 hole of the lever arm with the speed pin supplied.
14. Position the lever arm under the cross shaft so the lever is perpendicular to the shaft and the compressor attachment rests on top of the retainer for the spring being compressed. Use the front position slot on the lever as shown.

NOTE: Put shop towels over the oil passages to prevent the valve keepers from falling into the cylinder head.

15. Using a downward motion on the lever arm, compress the valve spring and remove the keepers from the valve stem. Slowly release pressure on the spring.
16. Remove the valve seals (see page 6-38).
17. Install the valve seals (see page 6-43).
18. Install the springs, the retainers and the keepers in reverse order of removal.
19. Repeat steps 6 to 18 on the other cylinders.

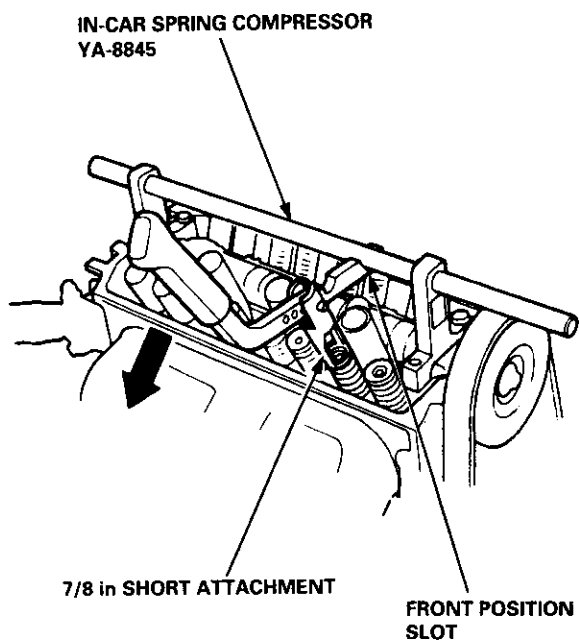


Crankshaft Pulley and Pulley Bolt

Replacement

When installing and tightening the pulley, follow the procedure below.

Clean, remove any oil, and lubricate points shown below.

- : Clean
- ×: Remove any oil
- : Lubricate

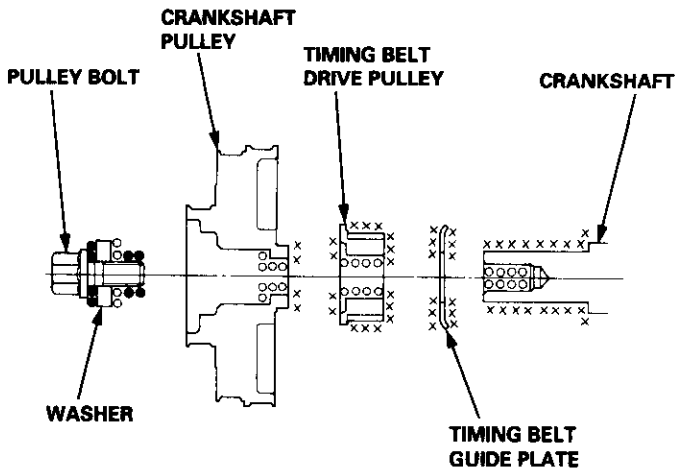


Crankshaft pulley bolt size and torque value:

14 x 1.25 mm

20 N·m (2.0 kgf·m, 14 lbf·ft) + 90°


NOTE: Do not use an impact wrench when installing.

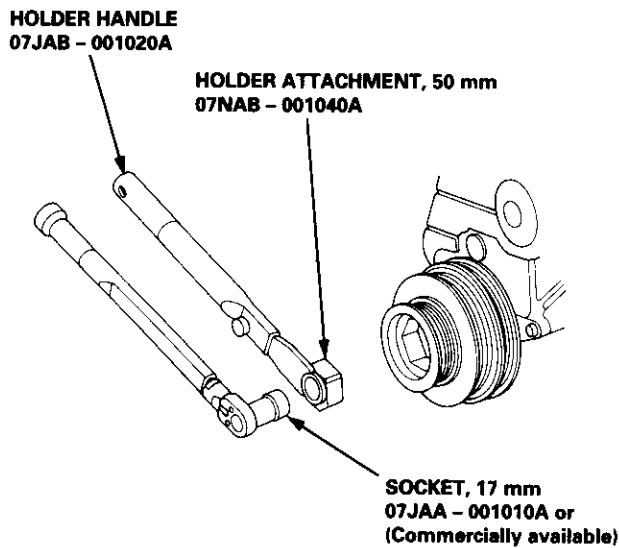


1. Tighten the pulley bolt to the specified torque.

Torque: 20 N·m (2.0 kgf·m, 14 lbf·ft)

2. Use a felt tip pen to mark the pulley bolt head and washer.

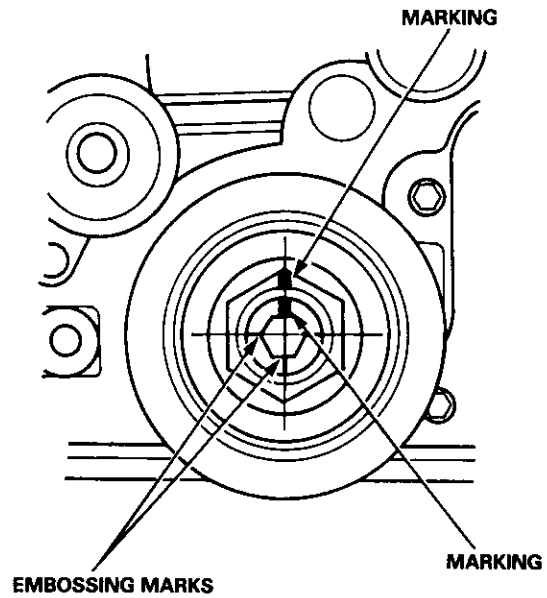

3. Tighten the pulley bolt an additional 90°.

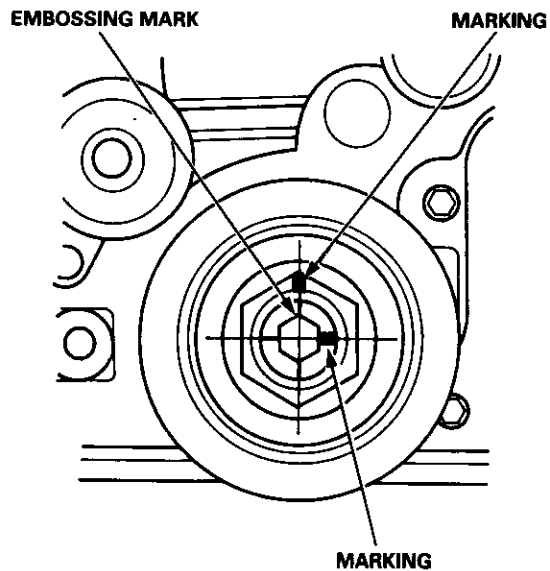


Timing Belt



Illustrated Index

NOTE:

- Refer to page 6-20 for how to position the crankshaft and pulley before installing the belt.
- Mark the direction of rotation on the belt before removing.
- Do not use the upper cover and lower cover for storing removed items.
- Clean the upper cover and lower cover before installing.
- Replace the camshaft seals and crankshaft seals if there is oil leakage.
- Refer to page 6-16 before installing the timing belt.

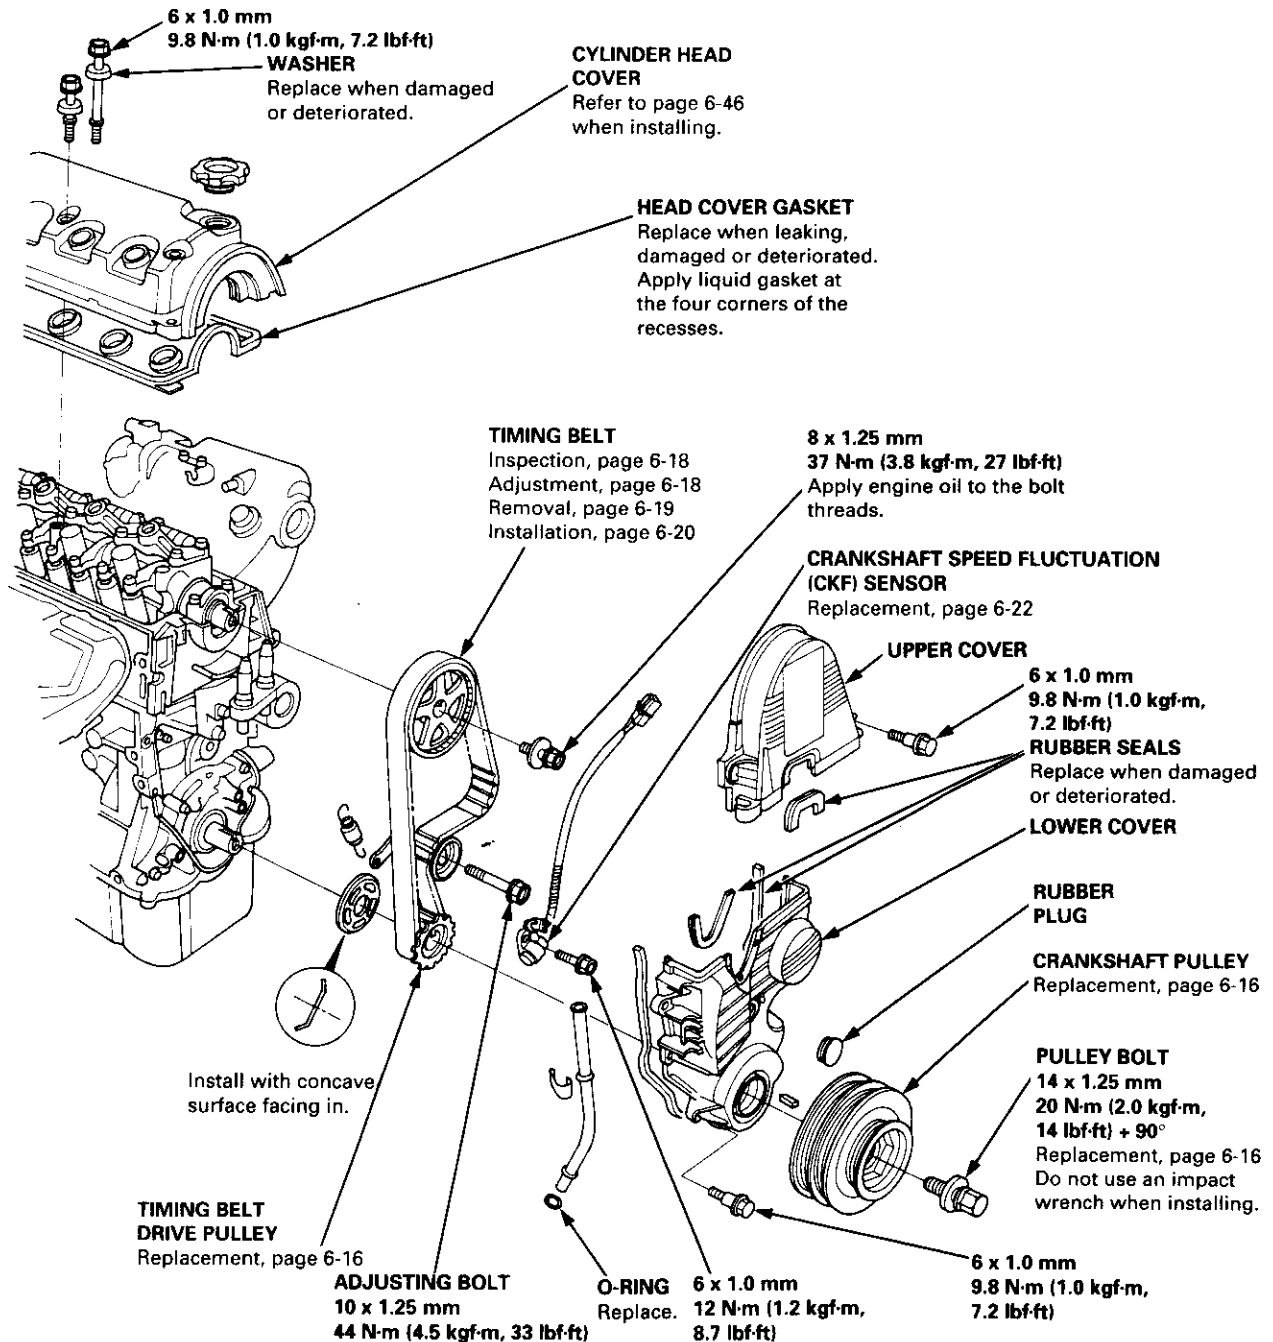

Timing Belt


Inspection

1. Remove the cylinder head cover.
 - Refer to page 6-46 when installing.
2. Remove the upper cover (see page 6-19).
3. Inspect the timing belt for cracks and oil or coolant soaking.

NOTE:

- Replace the belt if oil or coolant soaked.
- Remove any oil or solvent that gets on the belt.

Inspect this area for wear.

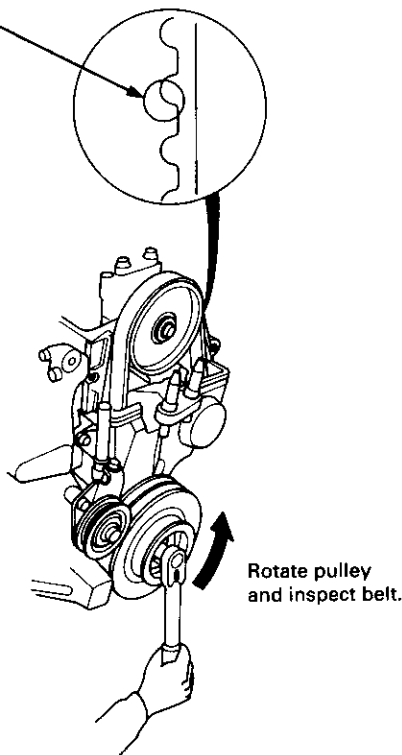

4. After inspecting, retorque the crankshaft pulley bolt (see page 6-16).


Tension Adjustment

CAUTION: Always adjust the timing belt tension with the engine cold.

NOTE:

- The tensioner is spring-loaded to apply tension to the belt automatically after making the following adjustment.
- Always rotate the crankshaft counterclockwise when viewed from the pulley side. Rotating it clockwise may result in improper adjustment of the belt tension.
- Inspect the timing belt before adjusting the belt tension.

1. Remove the cylinder head cover.
 - Refer to page 6-46 when installing.
2. Remove the upper cover (see page 6-19).
3. Rotate the crankshaft five or six revolutions to set the belt.
4. Set the No. 1 piston at TDC (see page 6-21).
5. Loosen the adjusting bolt 180°.

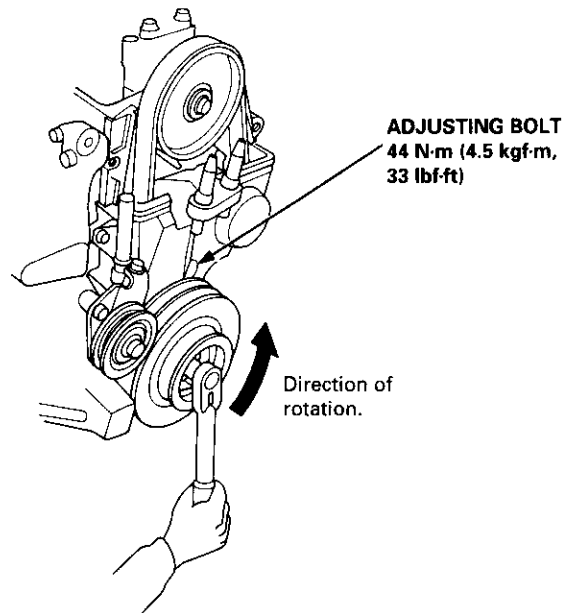

6. Rotate the crankshaft counterclockwise three teeth on the camshaft pulley.
7. Tighten the adjusting bolt.
8. After inspecting, retorque the crankshaft pulley bolt (see page 6-16).



Removal


NOTE:

- Replace the timing belt at 105,000 miles (168,000 km) according to the maintenance schedule (normal conditions/severe condition).


If the vehicle regularly is driven in one or more of the following conditions, replace the timing belt at 60,000 miles (U.S.A.) 100,000 km (Canada).

- In very high temperatures (over 110°F, 43°C).
- In very low temperatures (under -20°F, -29°C).
- Turn the crankshaft pulley so the No. 1 piston is at top dead center (TDC) before removing the belt (see page 6-21).
- Inspect the water pump before installing the timing belt (see page 10-12).

1. Remove the splash shield (see page 5-7).
2. Loosen the mounting bolt and lock bolt, then remove the power steering (P/S) pump belt and pump.

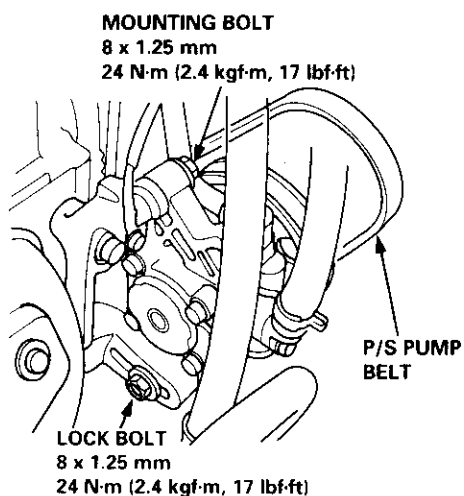


3. Loosen the idler pulley center nut and adjusting bolt, then remove the air conditioning (A/C) compressor belt (see page 5-6).
4. Loosen the mounting nut and lock bolt, then remove the alternator belt.

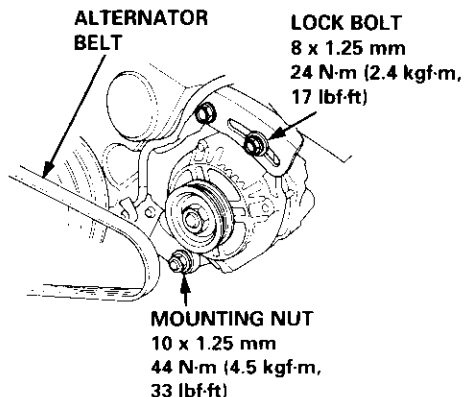

5. Remove the dipstick, then remove the upper cover and idler pulley bracket.

NOTE: Do not use the upper cover to store removed items.

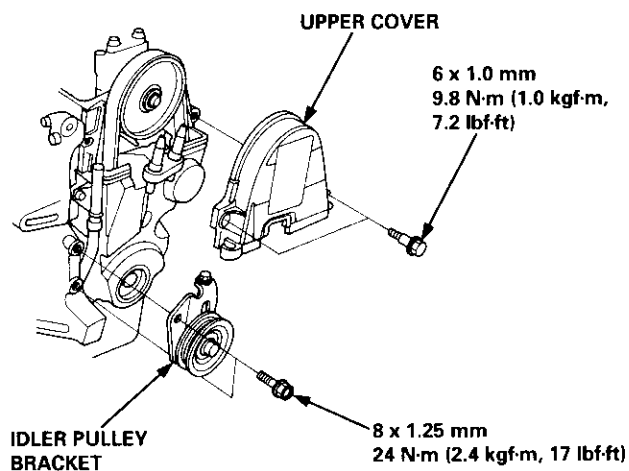


6. Remove the upper bracket (see page 6-29).

NOTE:

- Use a jack to support the engine before the upper bracket is removed.
- Make sure to place a cushion between the oil pan and the jack.

7. Remove the crankshaft pulley (see page 6-16).
8. Remove the lower cover and dipstick pipe.

NOTE: Do not use the lower cover to store removed items.

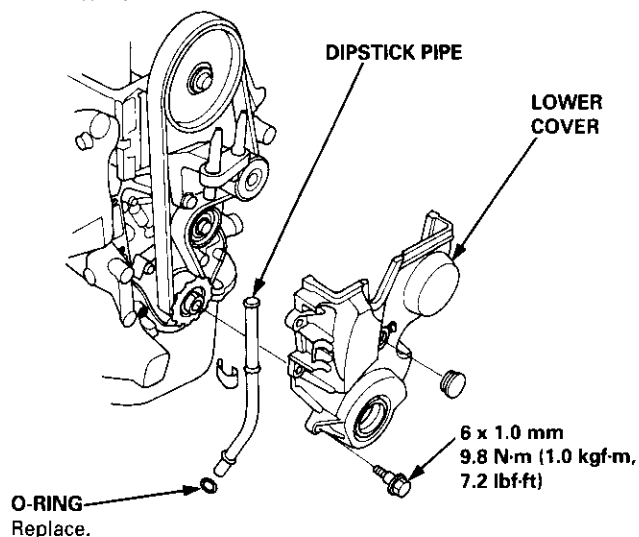


(cont'd)


Timing Belt

Removal (cont'd)

9. Remove the CKF sensor from the oil pump.

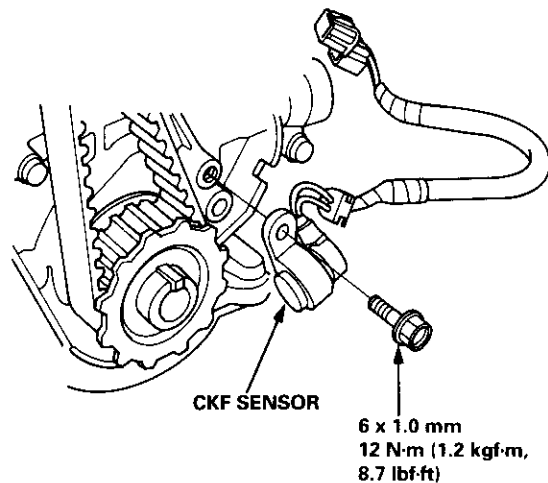

10. Loosen the adjusting bolt 180°. Push the tensioner to remove tension from the timing belt, then retighten the adjusting bolt.

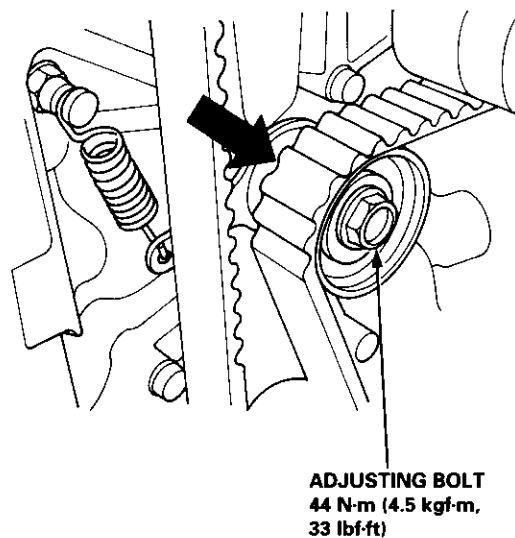


11. Remove the timing belt.


Installation

Install the timing belt in the reverse order of removal; Only key points are described here.

1. Set the timing belt drive pulley so that the No. 1 piston is at top dead center (TDC). Align the groove on the timing belt drive pulley to the pointer on the oil pump.

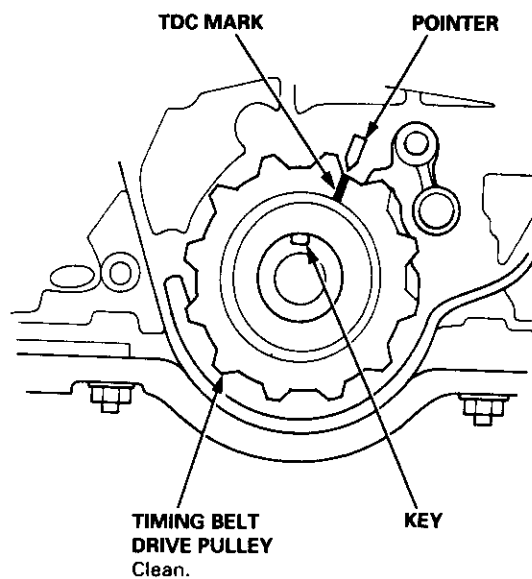


2. Set the camshaft pulley to TDC. Align the TDC marks on the camshaft pulley to the cylinder head surface.

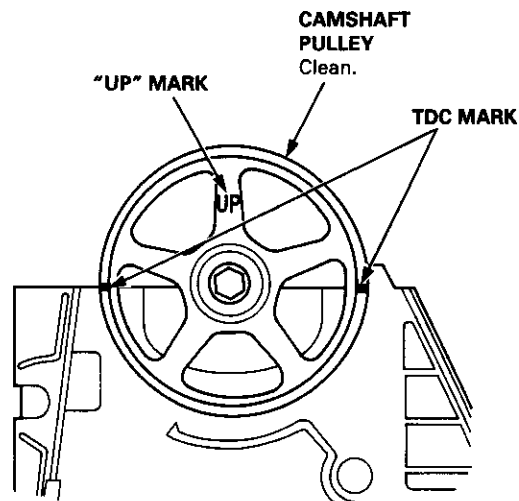



3. Install the timing belt tightly in the sequence shown.
 ①Timing belt drive pulley (crankshaft) →②Adjusting pulley →③Water pump pulley →④Camshaft pulley.

NOTE: Make sure the timing belt drive pulley and camshaft pulley are at TDC.

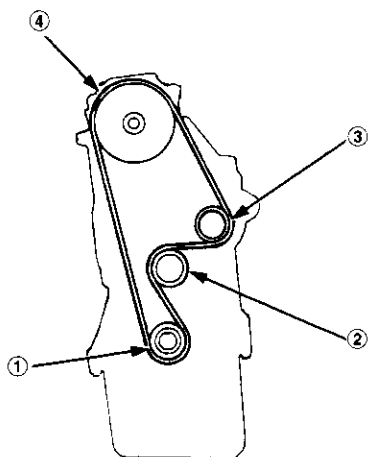


4. Loosen and retighten the adjusting bolt to tension the timing belt.
 5. Install the lower cover and upper cover.

NOTE: Clean the upper and lower covers before installation.


6. Install the crankshaft pulley, then tighten the pulley bolt (see page 6-16).
 7. Rotate the crankshaft pulley about five or six turns counterclockwise so that the timing belt positions on the pulleys.
 8. Adjust the timing belt tension (see page 6-18).

9. Check that the crankshaft pulley and camshaft pulley are both at TDC.

CRANKSHAFT PULLEY:

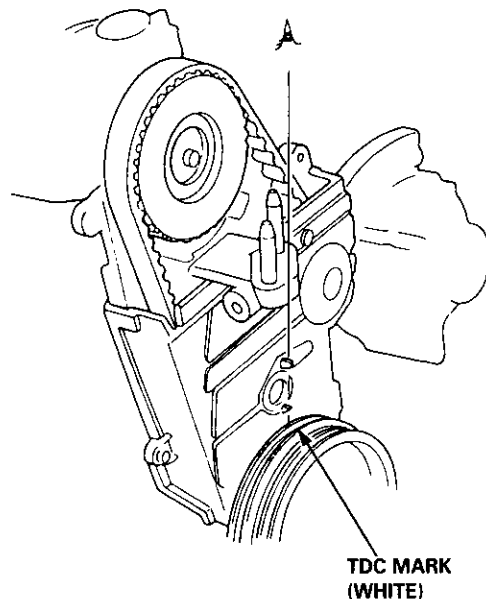

CAMSHAFT PULLEY:

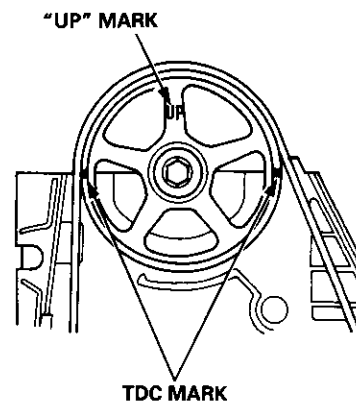


10. If the camshaft or crankshaft pulley is not positioned at TDC, remove the timing belt and adjust the position following the procedure on page 6-20. Then reinstall the timing belt.
11. After installation, adjust the tension of each belt.
- See section 23 for alternator belt tension adjustment.
 - See section 22 for A/C compressor belt tension adjustment.
 - See section 17 for P/S pump belt tension adjustment.

Crankshaft Speed Fluctuation (CKF) Sensor

Replacement

1. Remove the cylinder head cover.
- NOTE: Refer to page 6-46 when installing.
2. Remove the crankshaft pulley (see page 6-16).
 3. Remove the upper cover and dipstick/pipe (see page 6-19).
 4. Remove the lower cover and idler pulley bracket (see page 6-19).
 5. Disconnect the CKF sensor connector, then remove the CKF sensor.

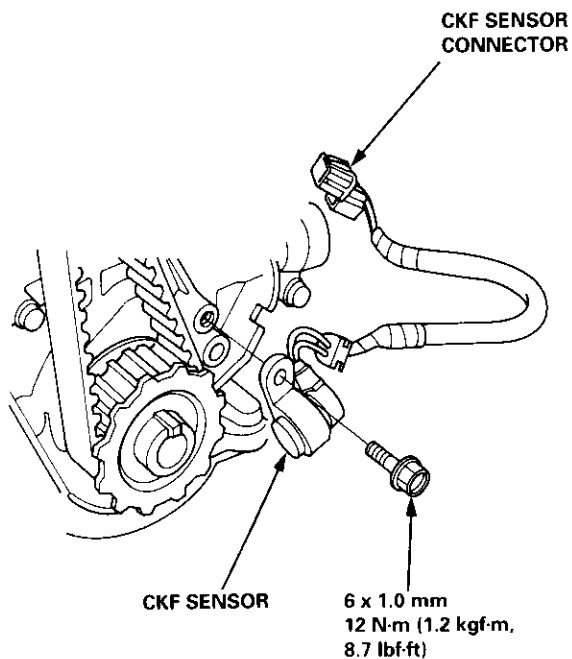

6. Install the CKF sensor in reverse order of removal.

Cylinder Head




Illustrated Index

CAUTION:

- To avoid damage, wait until the engine coolant temperature drops below 100°F (38°C) before removing the cylinder head.
- When handling a metal gasket, take care not to fold it or damage the contact surface.

NOTE: Use new O-rings and gaskets when reassembling.

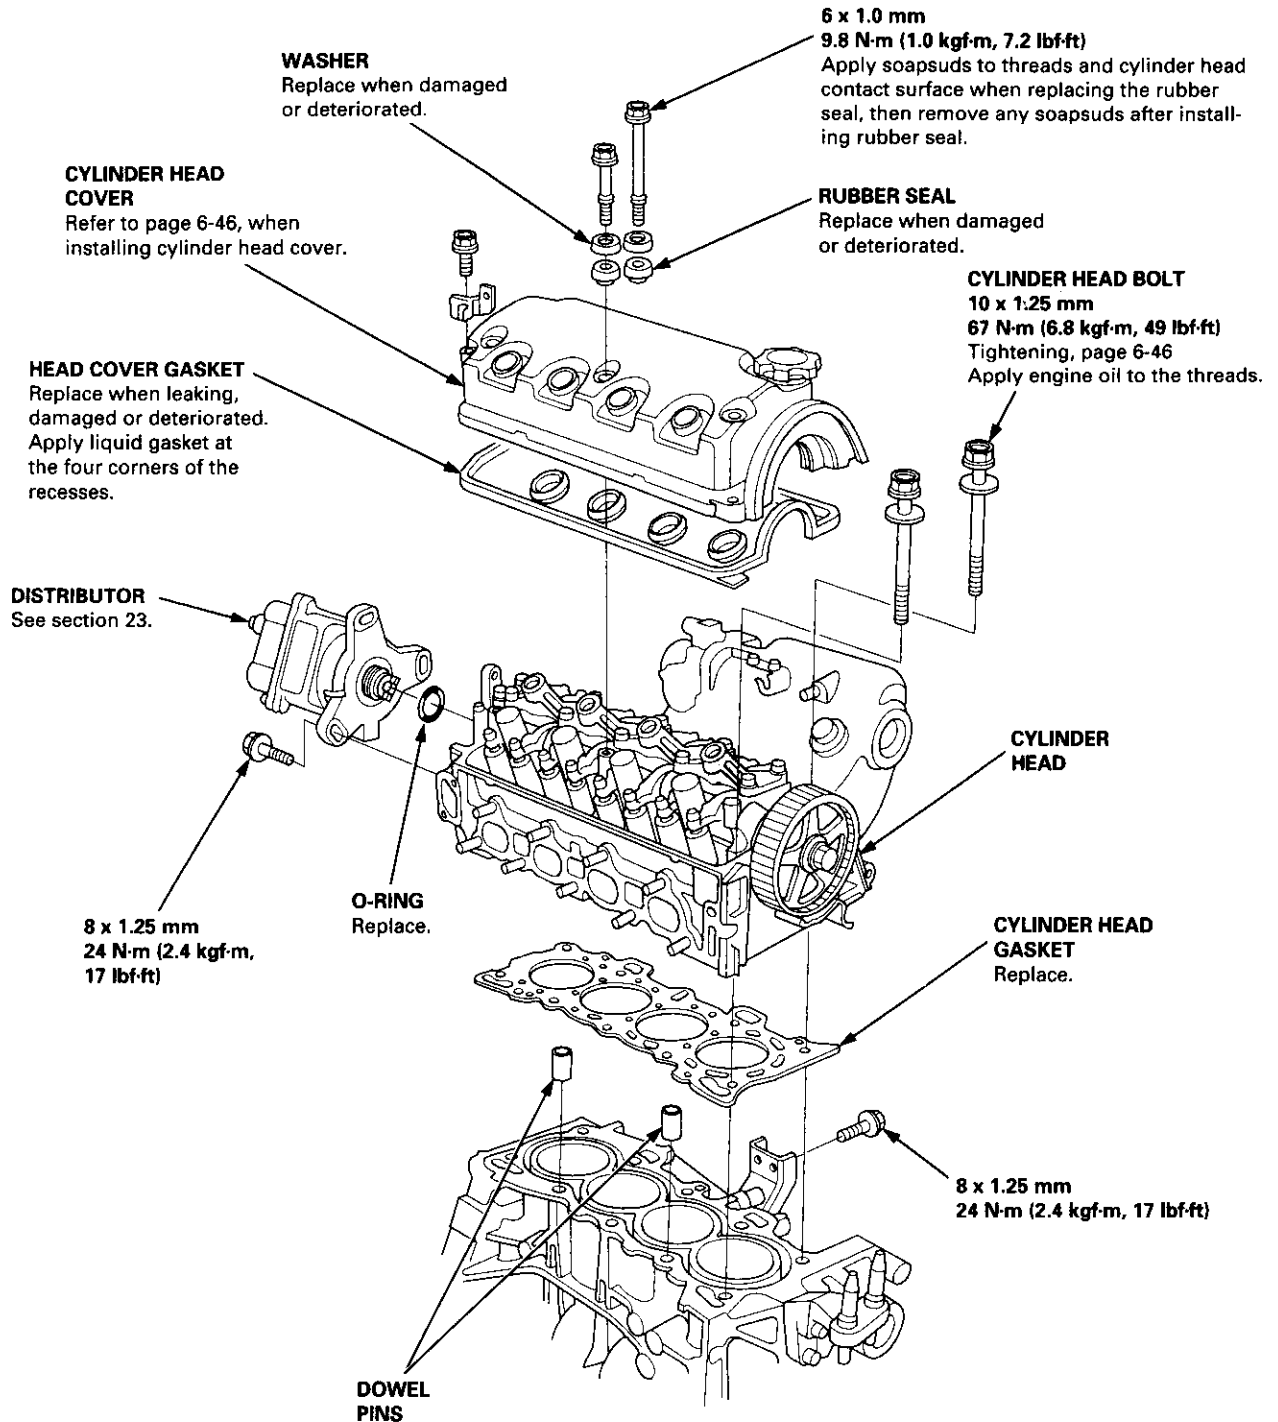

(cont'd)


Cylinder Head

Illustrated Index (cont'd)




Prior to reassembling, clean all the parts in solvent, dry them and apply lubricant to any contact parts.

D16Y7 engine:

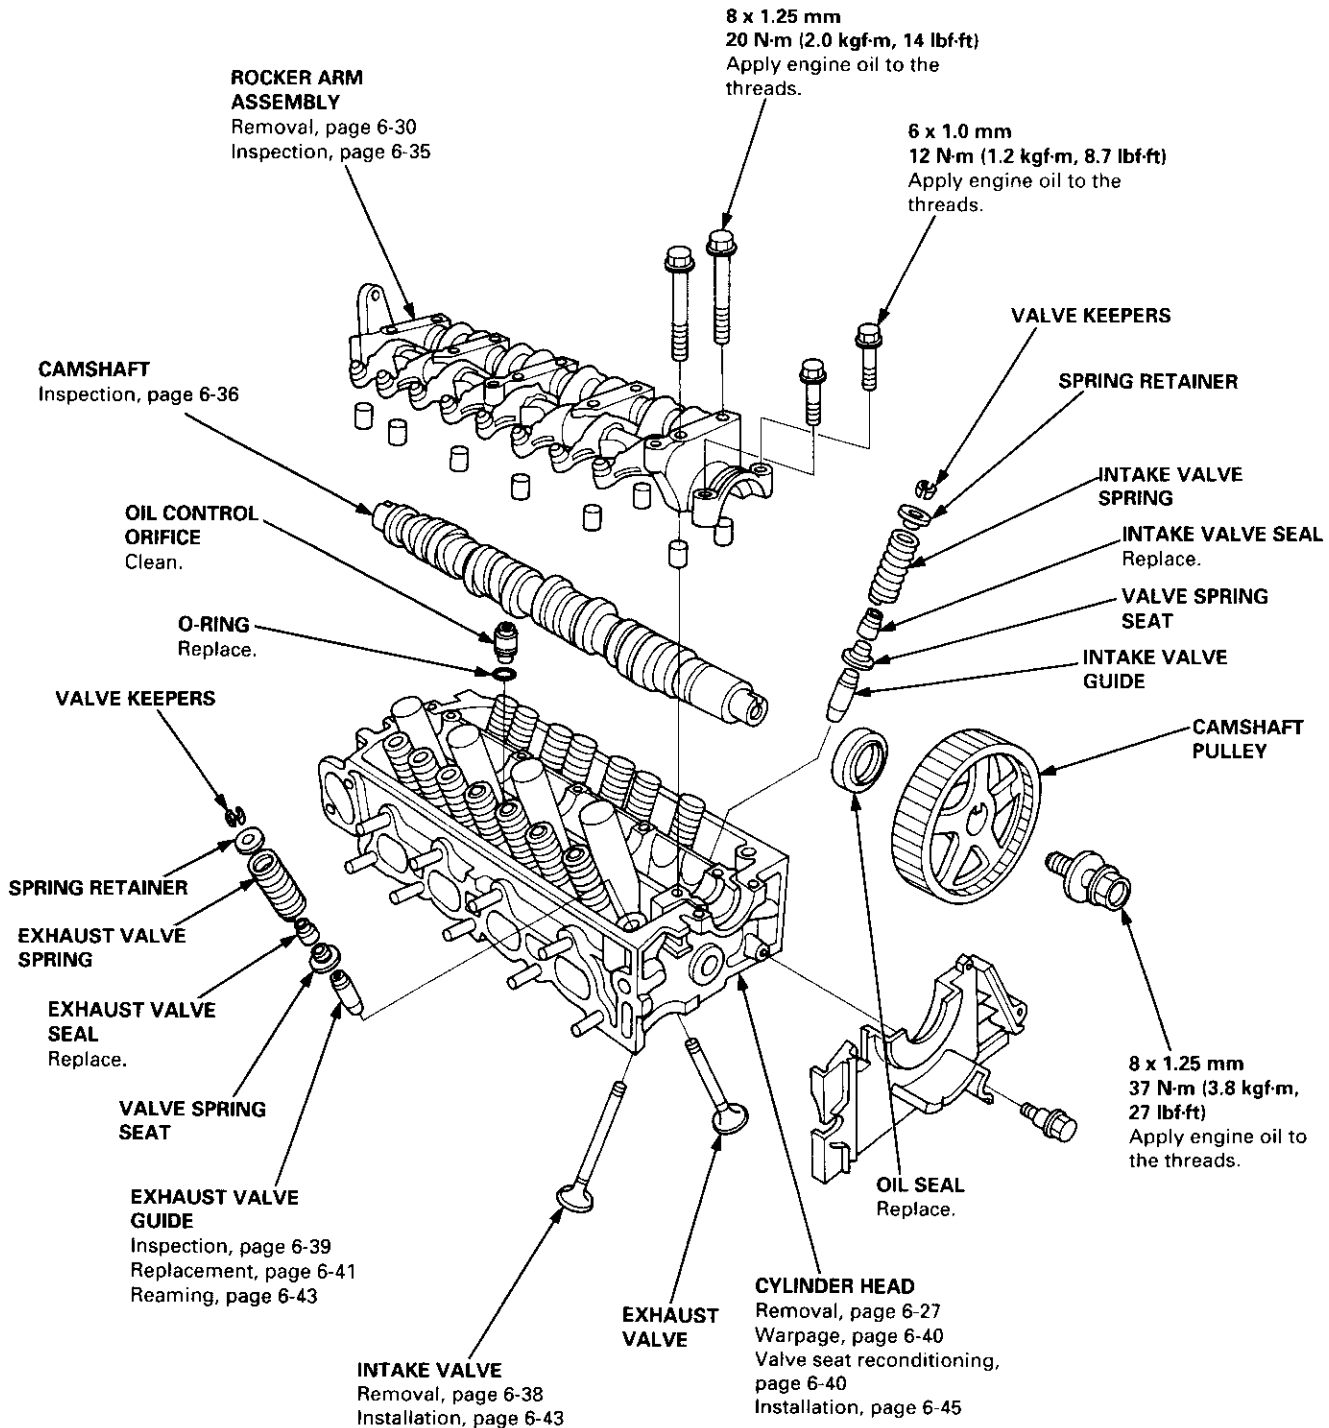



D16Y5 engine:

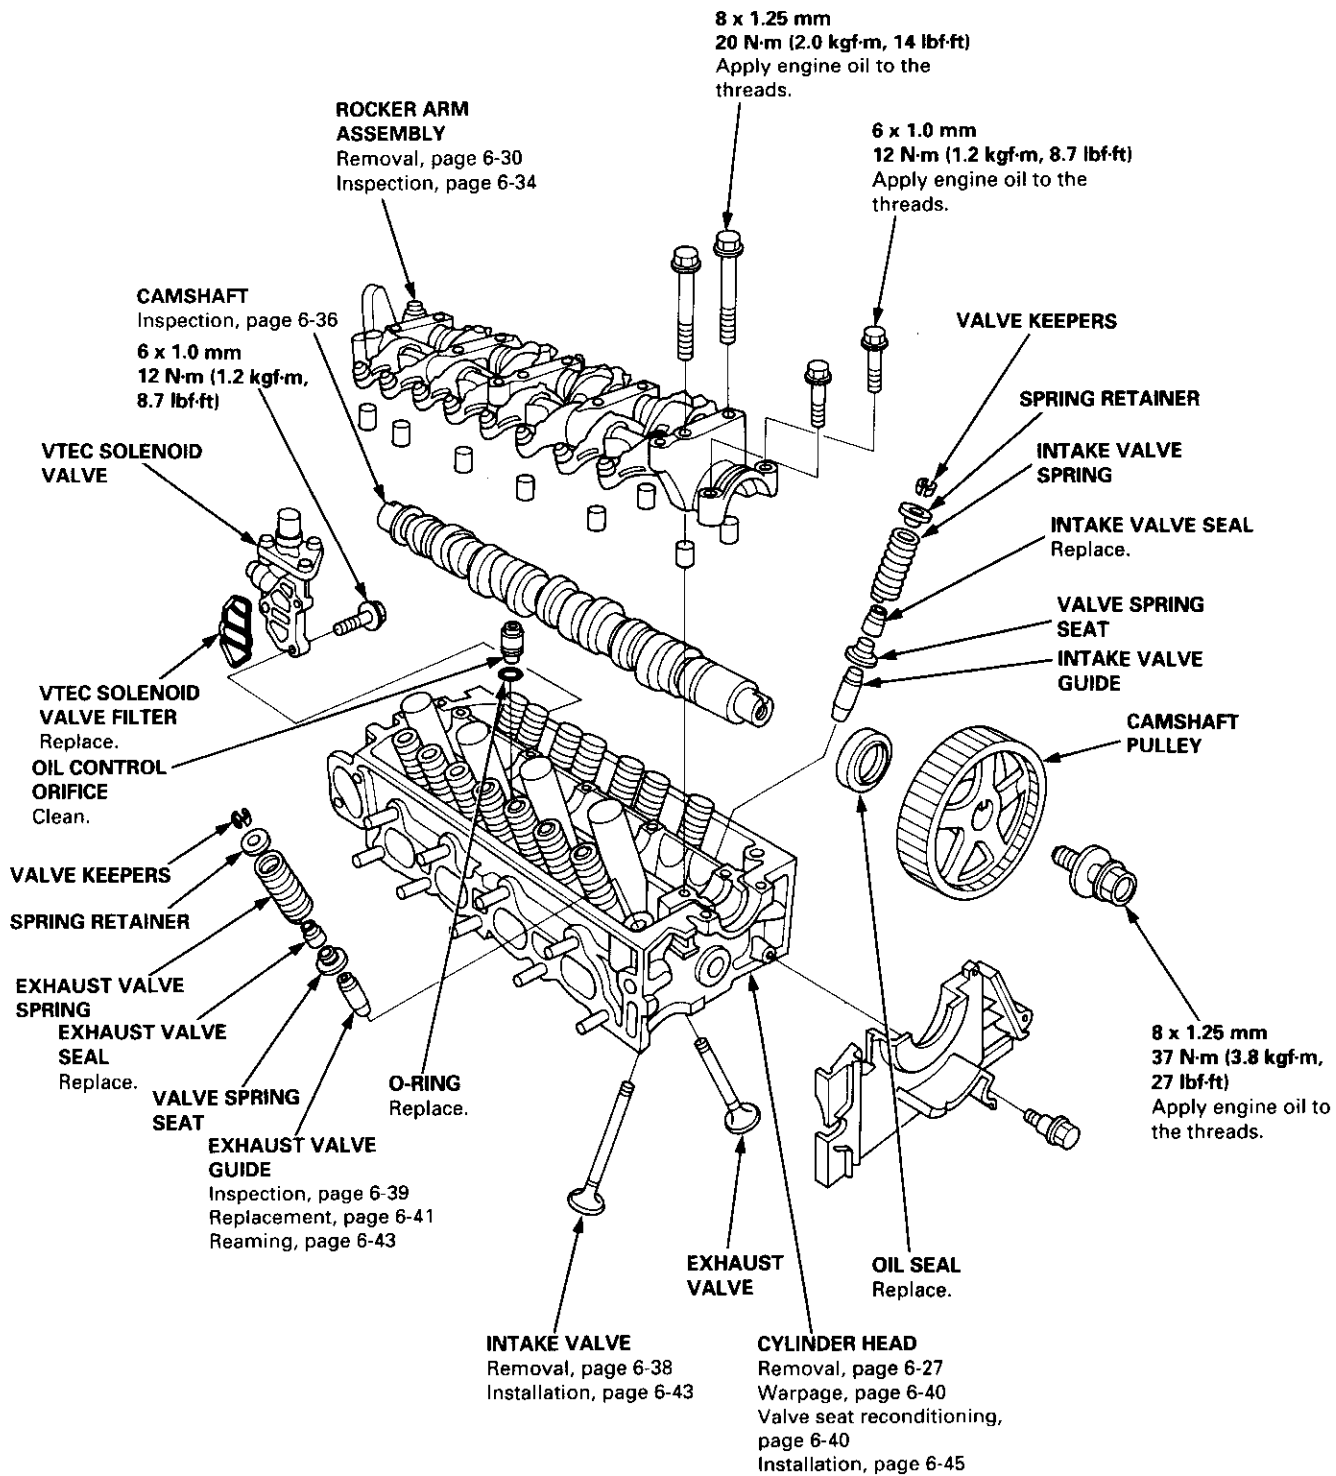

(cont'd)


Cylinder Head

Illustrated Index (cont'd)



Prior to reassembling, clean all the parts in solvent, dry them and apply lubricant to any contact parts.

D16Y8 engine:

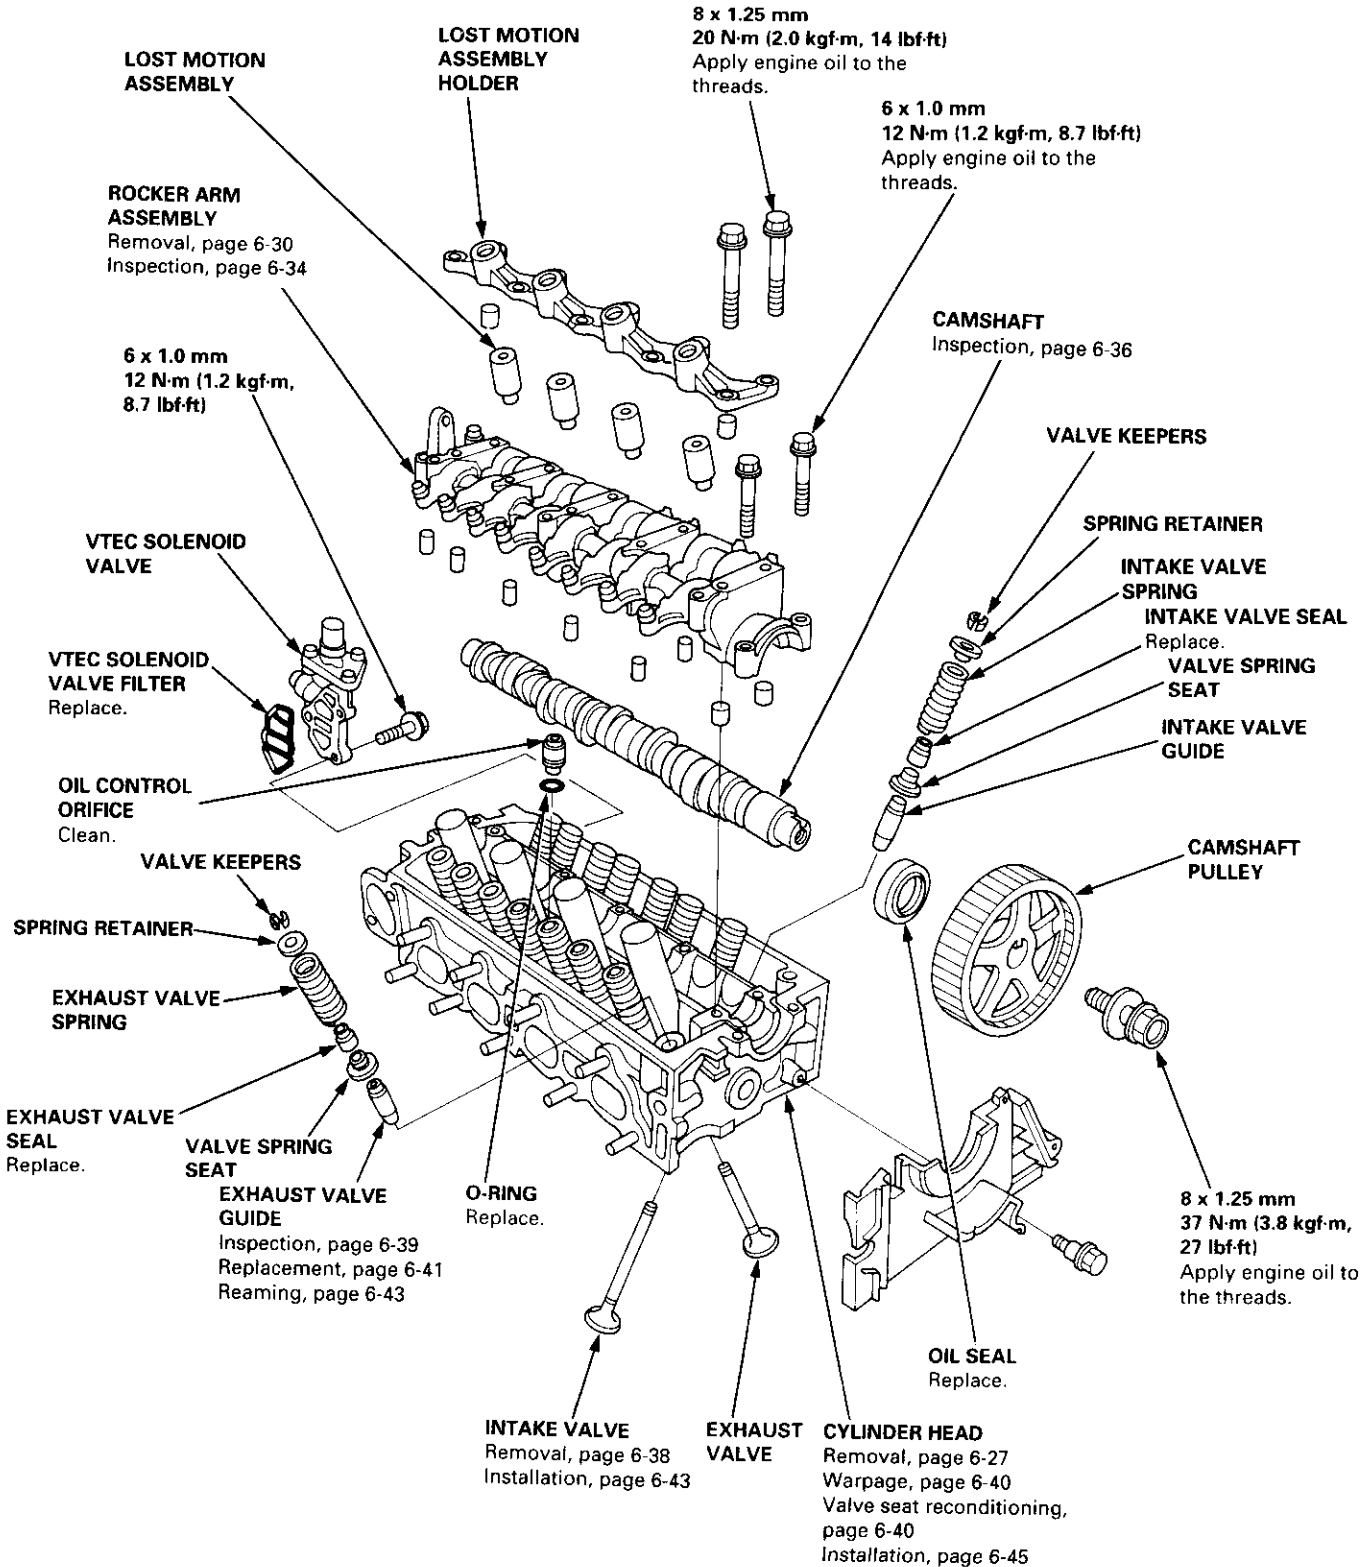



Removal

Engine removal is not required for this procedure.

▲ WARNING Make sure jacks and safety stands are placed properly and hoist brackets are attached to the correct positions on the engine.

CAUTION:

- Use fender covers to avoid damaging painted surfaces.
- Unplug the wiring connectors carefully while holding the connector portion to avoid damage.
- To avoid damaging the cylinder head, wait until the engine coolant temperature drops below 100°F (38°C) before loosening the retaining bolts.

NOTE:

- Mark all wiring and hoses to avoid misconnection. Also, be sure that they do not contact other wiring or hoses, or interfere with other parts.
- Inspect the timing belt before removing the cylinder head.
- Turn the crankshaft pulley so that the No. 1 piston is at top dead center (see page 6-21).


1. Disconnect the negative terminal from the battery.
2. Drain the engine coolant (see page 10-6).
 - Remove the radiator cap to speed draining.
3. Remove the intake air duct and air cleaner housing (see page 5-3).
4. Remove the mounting bolt and lock bolt, then remove the power steering (P/S) pump belt and pump (see page 5-5).
5. Loosen the idler pulley center nut and adjusting bolt, then remove the air conditioning (A/C) compressor belt (see page 5-6).
6. Loosen the mounting nut and lock bolt, then remove the alternator belt (see page 6-19).
7. Remove the P/S pump bracket (see page 5-12).

8. Remove the throttle cable by loosening the locknut, then slip the cable end out of the throttle linkage.


NOTE:

- Take care not to bend the cable when removing it. Always replace any kinked cable with a new one.
- Adjust the throttle cable when installing (see section 11).

D16Y7 engine:

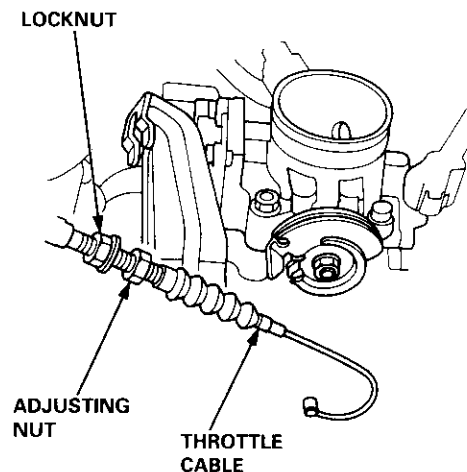

D16Y5, D16Y8 engines:

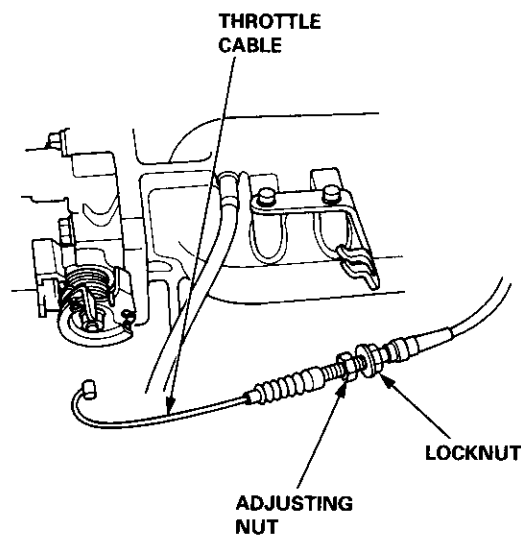

(cont'd)

Cylinder Head


Removal (cont'd)

9. Relieve fuel pressure (see section 11).


WARNING Do not smoke while working on the fuel system. Keep open flame or spark away from the work area. Drain fuel only into an approved container.

10. Remove the evaporative emission (EVAP) control canister hose, fuel feed hose and breather hose.

D16Y7 engine:

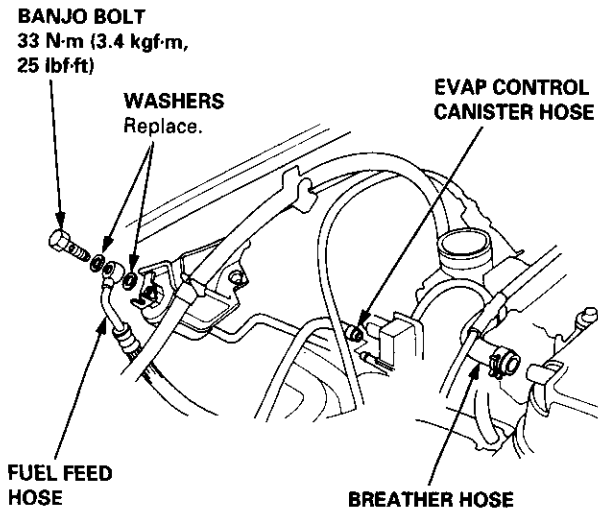


D16Y5, D16Y8 engines:

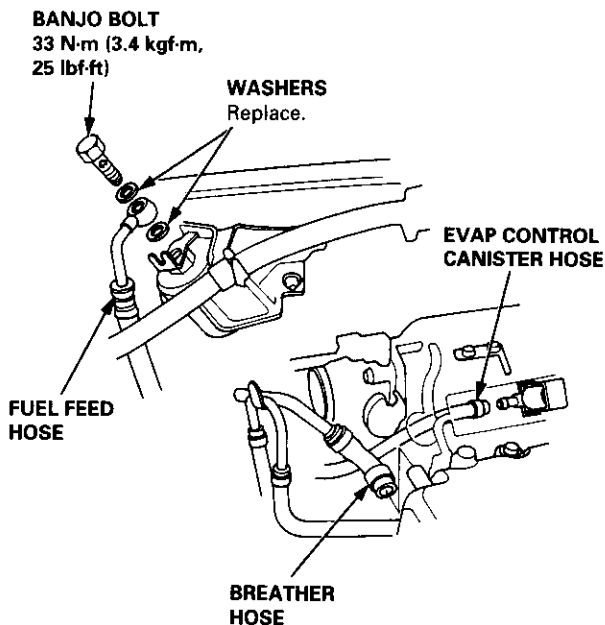


11. Remove the brake booster vacuum hose, fuel return hose and vacuum hose (see page 5-4).

12. Remove the water bypass hose and positive crankcase ventilation (PCV) hose.

D16Y7 engine:

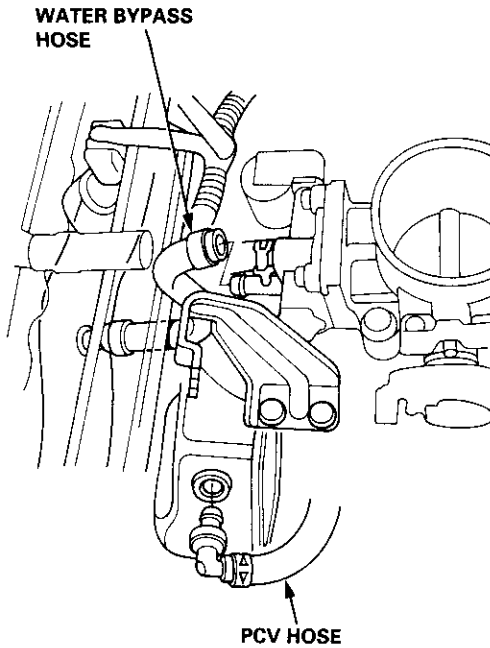


D16Y5, D16Y8 engines:

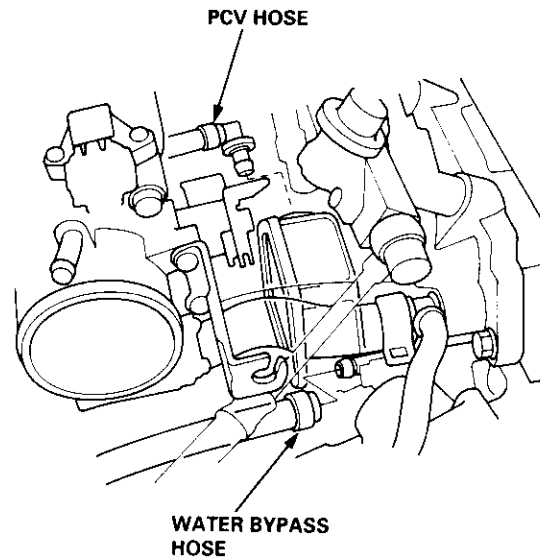



13. Remove the upper radiator hose, heater hose and water bypass hose.

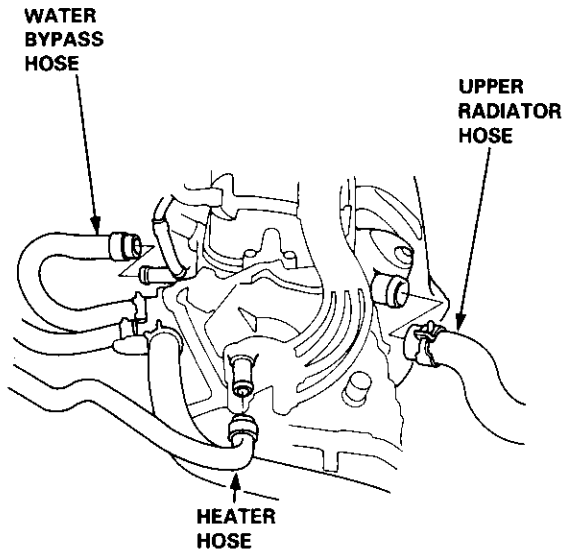

14. Remove the engine wire harness connectors and wire harness clamps from the cylinder head and the intake manifold.


- Four fuel injector connectors
- Engine coolant temperature (ECT) sensor connector
- ECT switch connector
- ECT gauge sending unit connector
- Throttle position sensor connector
- Manifold absolute pressure (MAP) sensor connector
- Primary heated oxygen sensor (primary HO2S) connector
- Secondary heated oxygen sensor (secondary HO2S) connector (D16Y7 engine)
- Exhaust gas recirculation (EGR) valve lift sensor connector (D16Y5 engine)
- VTEC solenoid valve connector (D16Y5, D16Y8 engines)
- VTEC pressure switch connector (D16Y5, D16Y8 engines)
- Idle air control (IAC) valve connector

15. Remove the spark plug caps and distributor from the cylinder head.


16. Remove the upper bracket.

NOTE:

- Use a jack to support the engine before the upper bracket is removed.
- Make sure to place a cushion between the oil pan and the jack.

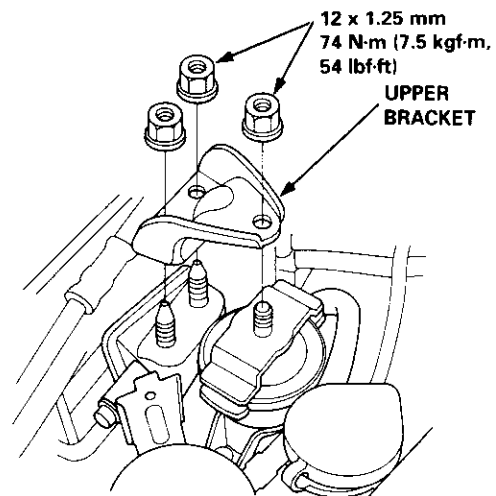

17. Remove the cylinder head cover.

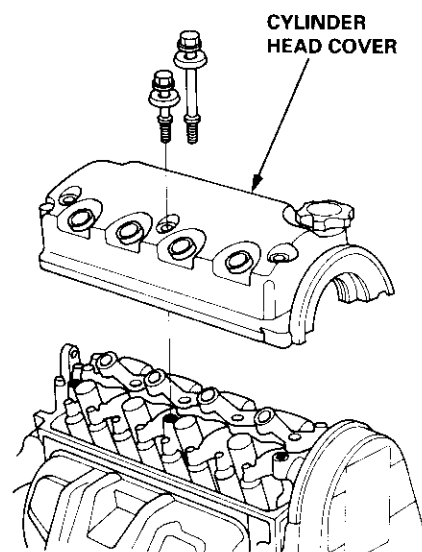


(cont'd)

Cylinder Head

Rocker Arms

Removal (cont'd)


18. Remove the timing belt (see page 6-19).
19. Remove the camshaft pulley and back cover.

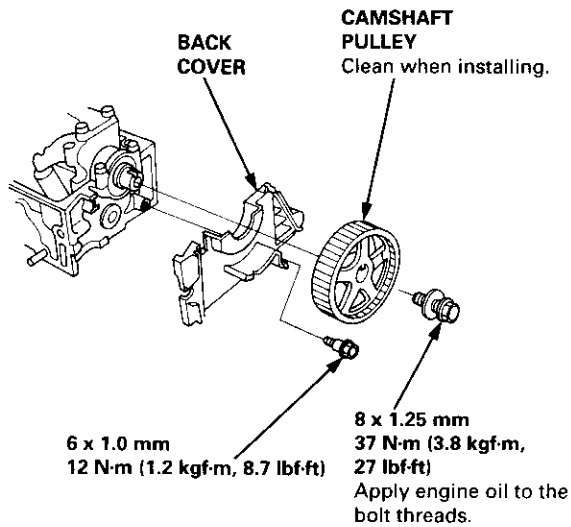

20. Remove the exhaust manifold (see pages 9-5 and 9-6).
21. Remove the intake manifold (see pages 9-2 thru 4).
22. Remove the cylinder head bolts, then remove the cylinder head.


CAUTION: To prevent warpage, unscrew the bolts in sequence 1/3 turn at a time; repeat the sequence until all bolts are loosened.

CYLINDER HEAD BOLTS LOOSENING SEQUENCE:

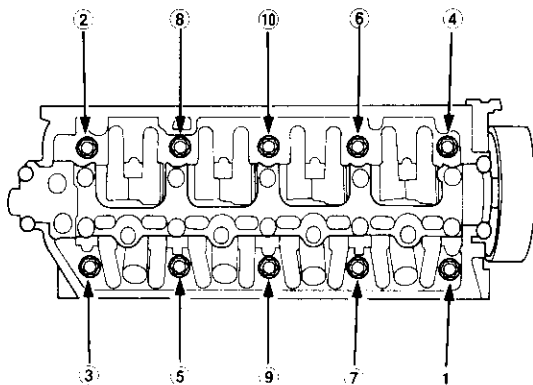

Removal

1. Loosen the adjusting screws.

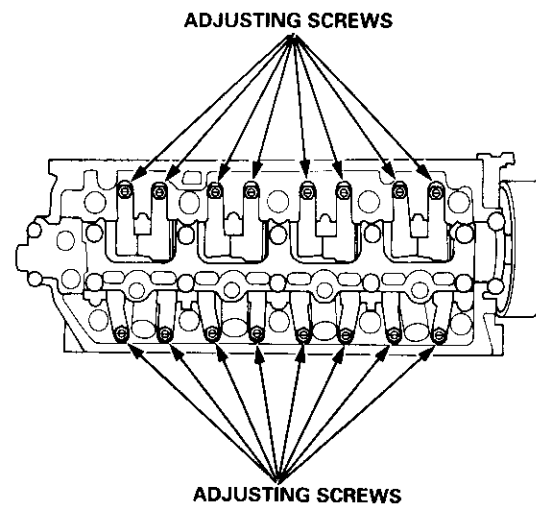


2. Unscrew the camshaft holder bolts, then remove the rocker arm assembly.

NOTE:

- Unscrew the camshaft holder bolts two turns at a time, in a crisscross pattern, to prevent damaging the valves or rocker arm assembly.
- When removing the rocker arm assembly, do not remove the camshaft holder bolts. The bolts will keep the camshaft holders, the springs and the rocker arms on the shaft.

CAMSHAFT HOLDER BOLTS LOOSENING SEQUENCE:

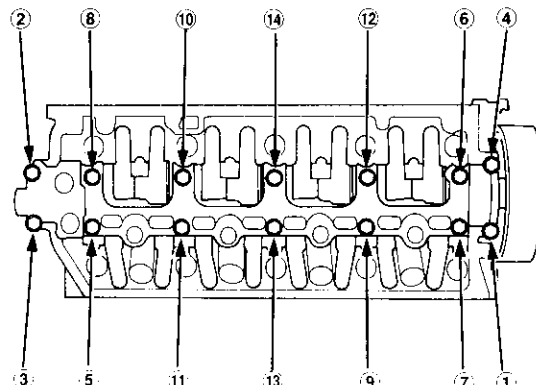



Disassembly/Reassembly


NOTE:

- Identify parts as they are removed to ensure reinstallation in original locations.
- Inspect rocker shafts and rocker arms (see page 6-35).
- Rocker arms must be installed in the same position if reused.
- When removing or installing the rocker arm assembly, do not remove the camshaft holder bolts. The bolts will keep the holders, springs and rocker arms on the shaft.



Prior to reassembling, clean all the parts in solvent, dry them and apply lubricant to any contact points.

D16Y7 engine:

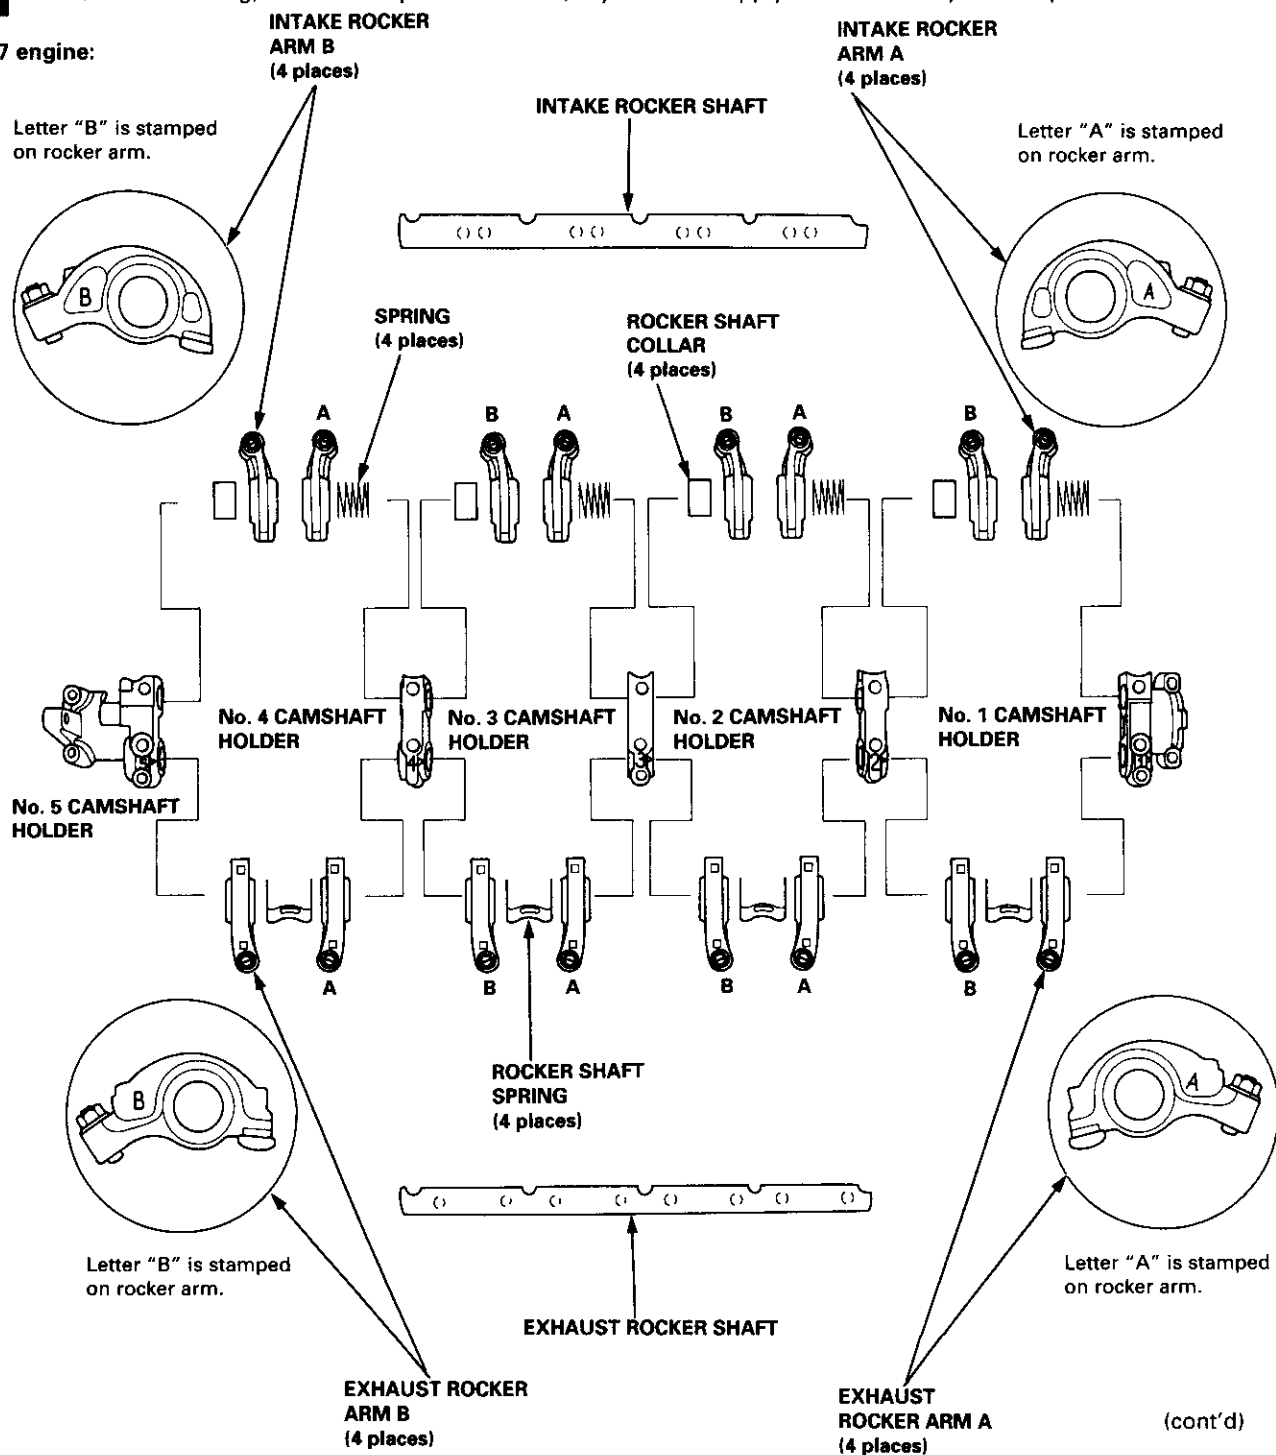


(cont'd)

Rocker Arms


Disassembly/Reassembly (cont'd)

NOTE:

- Identify parts as they are removed to ensure reinstallation in original locations.
- Inspect rocker shafts and rocker arms (see page 6-34).
- Rocker arms must be installed in the same position if reused.
- When removing or installing the rocker arm assembly, do not remove the camshaft holder bolts. The bolts will keep the holders, springs and rocker arms on the shaft.


 Prior to reassembling, clean all the parts in solvent, dry them and apply lubricant to any contact points.

D16Y5 engine:

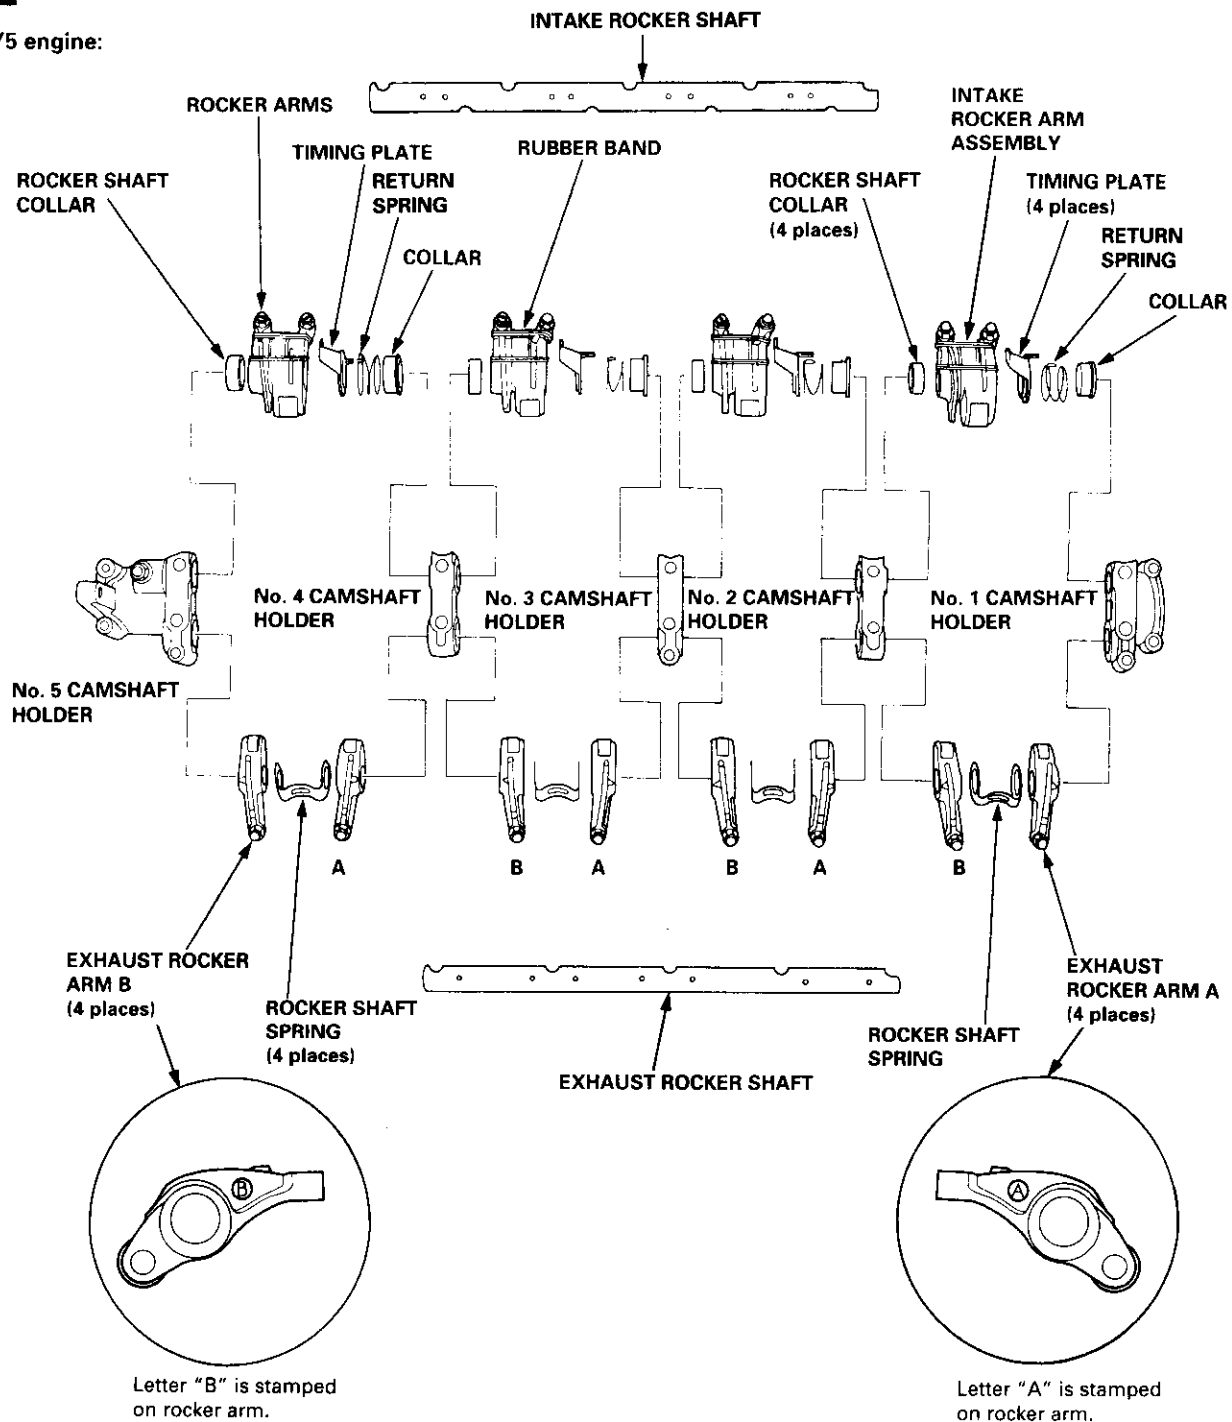



D16Y8 engine:

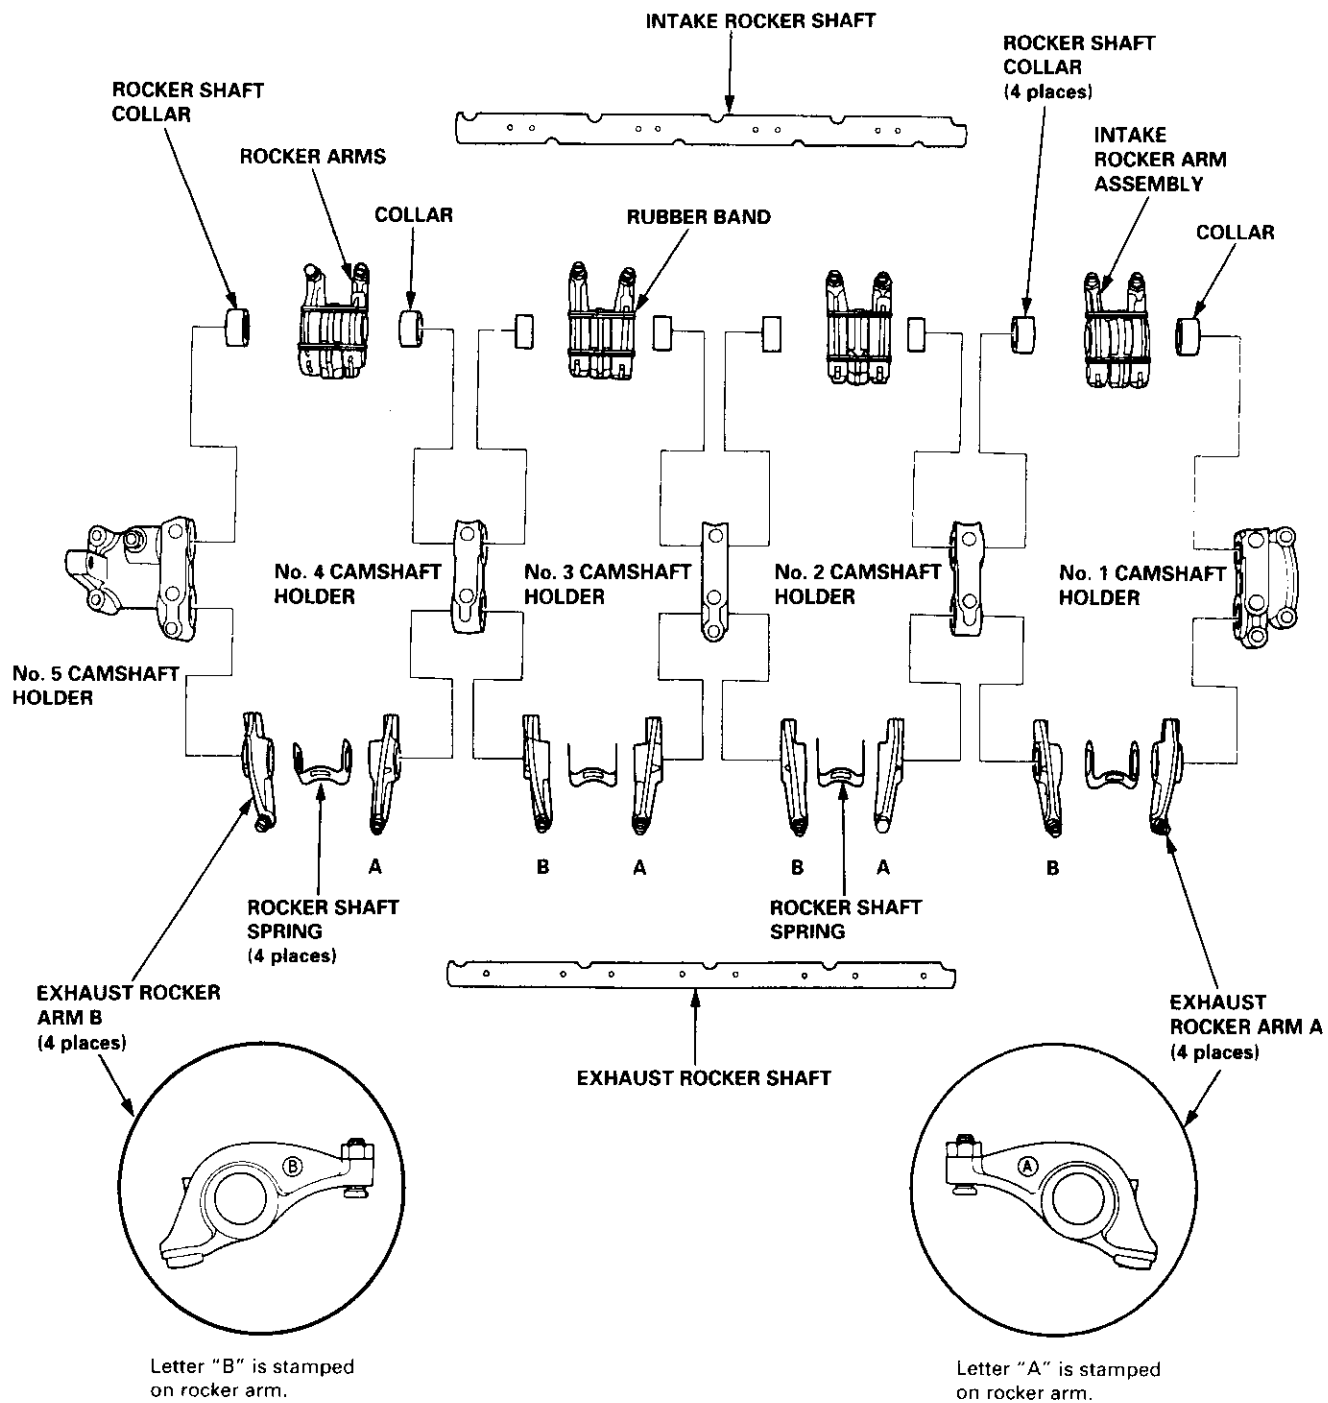


Rocker Arms and Lost Motion Assemblies

Inspection (D16Y5, D16Y8 engines)


NOTE: When reassembling the primary rocker arm, carefully apply air pressure to the oil passage of the rocker arm.

1. Inspect the rocker arm piston. Push it manually.
— If it does not move smoothly, replace the rocker arm assembly.

D16Y5 engine:

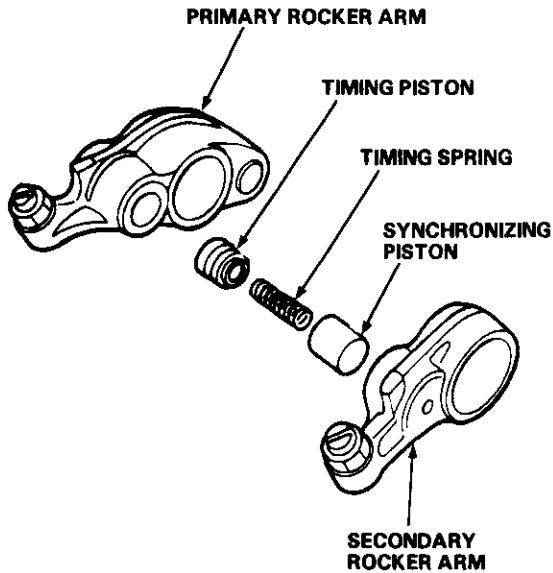

D16Y8 engine:

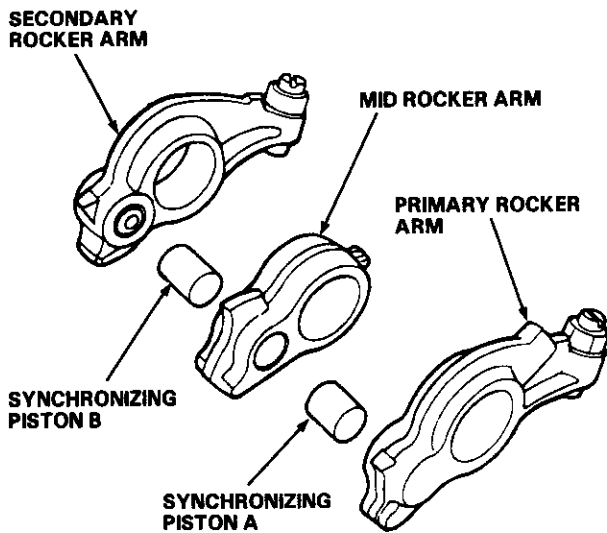


NOTE:

- Apply oil to the pistons when reassembling.
- Bundle the rocker arms with a band to prevent them from separating.


D16Y5 engine:

NOTE: Set the timing plate and return spring as shown below.

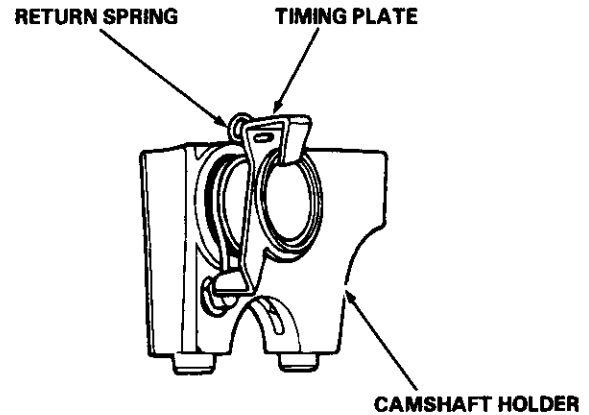

D16Y8 engine:

2. Remove the lost motion assembly from the holder and inspect it. Test it by pushing the plunger with your finger.
— If the lost motion assembly plunger does not move smoothly, replace it.

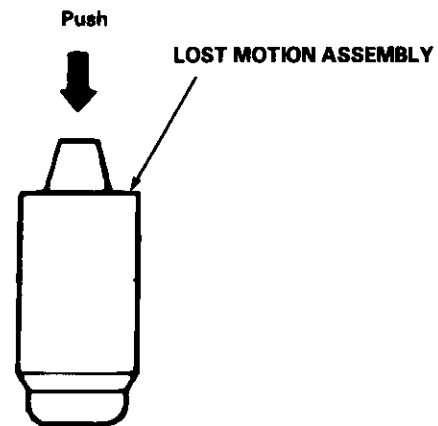


Rocker Arms and Shafts




Clearance Inspection

Measure both the intake rocker shaft and exhaust rocker shaft.

1. Measure the diameter of the shaft at the first rocker location.

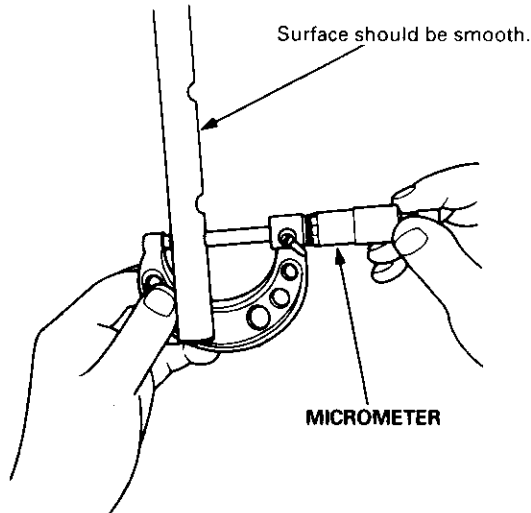

2. Zero the gauge to the shaft diameter.

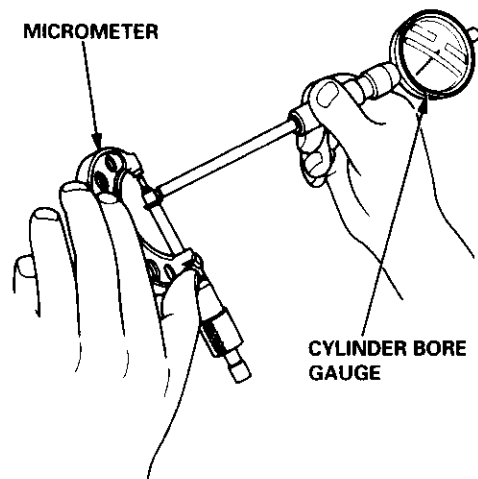

3. Measure the inside diameter of the rocker arm and check for an out-of-round condition.


Rocker Arm-to-Shaft Clearance:

Standard (New):

Intake: 0.017 – 0.050 mm
(0.0007 – 0.0020 in)

Exhaust: 0.018 – 0.054 mm
(0.0007 – 0.0021 in)

Service Limit: 0.08 mm (0.003 in)

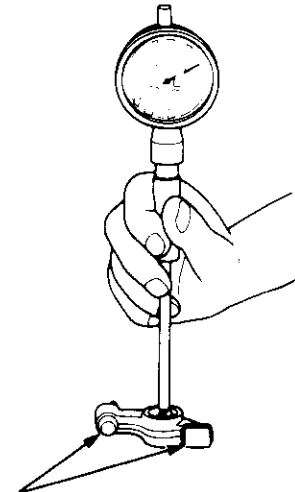

4. Repeat these measurements on all the rockers.
— If the clearance is over the service limit, replace the rocker shaft and all over-tolerance rocker arms.

Camshaft

Inspection

NOTE:

- Do not rotate the camshaft during inspection.
 - Remove the rocker arms and rocker shafts.
1. Put the camshaft and the camshaft holders on the cylinder head, then tighten the bolts to the specified torque.

Specified torque:


8 mm bolts: 20 N·m (2.0 kgf·m 14 lbf·ft)

Apply engine oil to the threads.

6 mm bolts: 12 N·m (1.2 kgf·m 8.7 lbf·ft)

Apply engine oil to the threads.

6 mm bolts: ⑪, ⑫, ⑬, ⑭

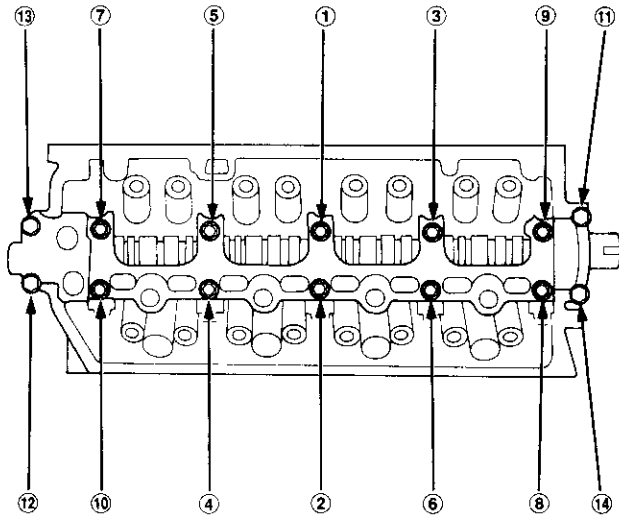


2. Seat the camshaft by pushing it toward the rear of the cylinder head.
3. Zero the dial indicator against the end of the camshaft. Push the camshaft back and forth, and read the end play.

Camshaft End Play:

Standard (New): 0.05 – 0.15 mm

(0.002 – 0.006 in)

Service Limit: 0.5 mm (0.02 in)

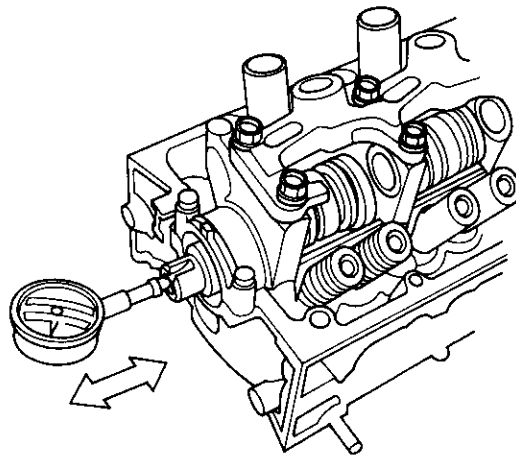


4. Remove the bolts, then remove the camshaft holders from the cylinder head.
 - Lift the camshaft out of the cylinder head, wipe it clean, then inspect the lift ramps. Replace the camshaft if any lobes are pitted, scored, or excessively worn.
 - Clean the camshaft bearing surfaces in the cylinder head, then set the camshaft back in place.
 - Place a plastigage strip across each journal.
5. Install the camshaft holders, and tighten the bolts to the specified torque.




- Remove the camshaft holders, then measure the widest portion of the plastigage on each journal.

Camshaft-to-Holder Oil Clearance:
Standard (New): 0.050 – 0.089 mm
 (0.002 – 0.004 in)
Service Limit : 0.15 mm (0.006 in)

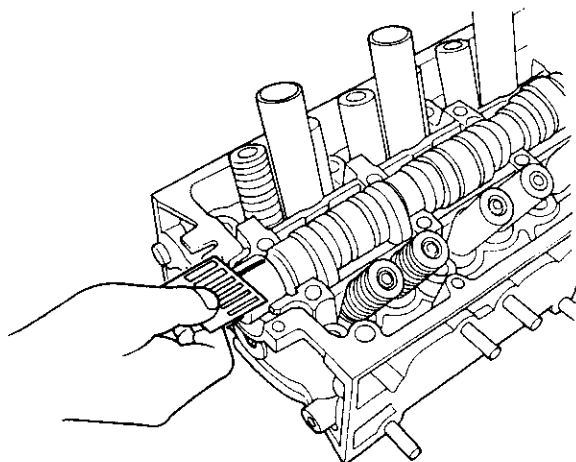

- If the camshaft-to-holder oil clearance is out of tolerance:
 - And the camshaft has already been replaced, you must replace the cylinder head.
 - If the camshaft has not been replaced, first check the total runout with the camshaft supported on V-blocks.

Camshaft Total Runout:
Standard (New): 0.03 mm (0.001 in) max.
Service Limit: 0.04 mm (0.002 in)

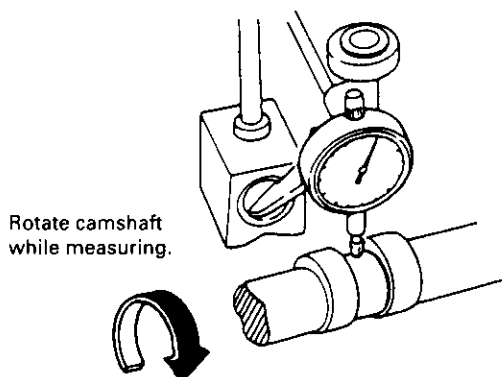

- If the total runout of the camshaft is within tolerance, replace the cylinder head.
- If the total runout is out of tolerance, replace the camshaft and recheck. If the bearing clearance is still out of tolerance, replace the cylinder head.



- Check the cam lobe height wear.

Cam lobe height standard (New)

Unit mm (in)

		INTAKE	EXHAUST
D16Y7 engine		35.299 (1.3897)	37.281 (1.4678)
D16Y5 engine	PRI	38.427 (1.5129)	38.784 (1.5269)
	SEC	32.193 (1.2674)	
D16Y8 engine	PRI	36.778 (1.4479)	38.008 (1.4964)
	MID	38.274 (1.5068)	
	SEC	37.065 (1.4592)	

PRI: Primary cam lobe, SEC: Secondary cam lobe.
 MID: Mid cam lobe, T/B: Timing belt.
 IN: Intake, EX: Exhaust

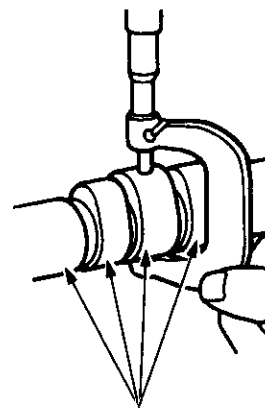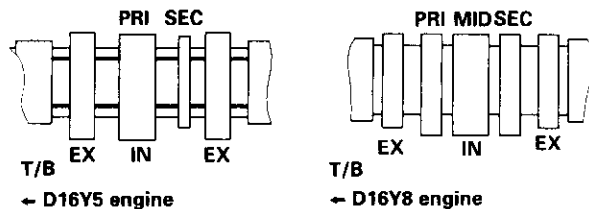


Check this area for wear.

Valves, Valve Springs and Valve Seals


Removal

NOTE: Identify valves and valve springs as they are removed so that each item can be reinstalled in its original position.


1. Using an appropriate-sized socket and plastic mallet, lightly tap the valve retainer to loosen the valve keepers before installing the valve spring compressor.

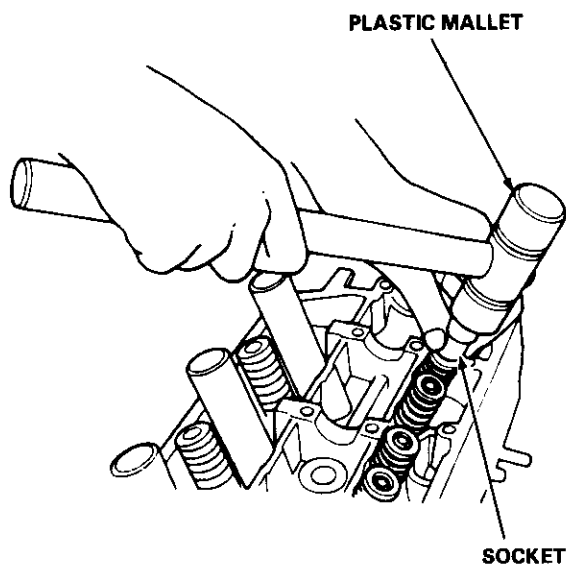


2. Install the spring compressor. Compress the spring and remove the valve keeper.

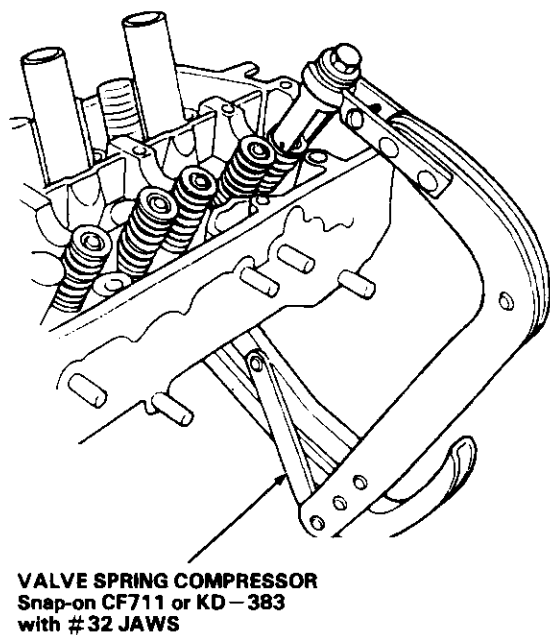

3. Install the valve guide seal remover.

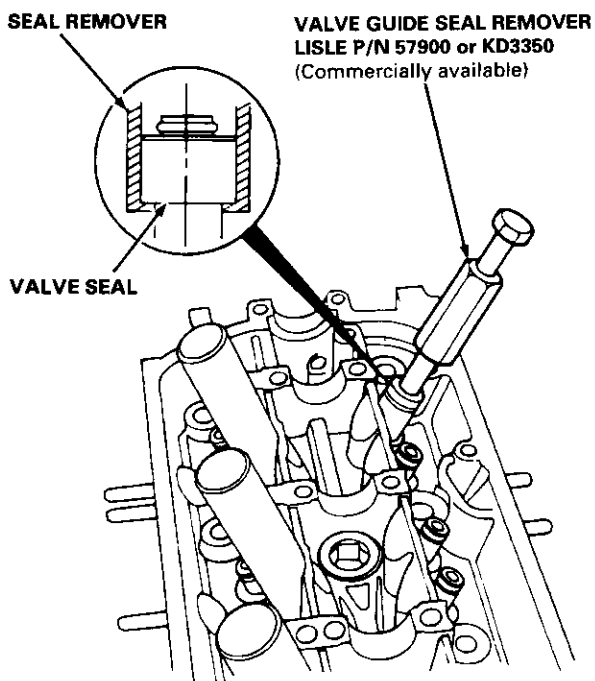


4. Remove the valve seal.

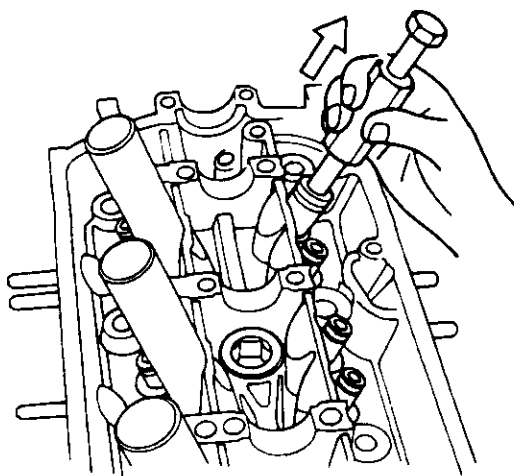



Valve Movement

Measure the guide-to-stem clearance with a dial indicator while rocking the stem in the direction of normal thrust (wobble method).

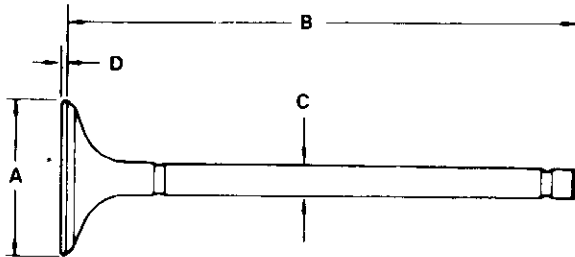

Intake Valve Dimensions

- A Standard (New): 29.9 – 30.1 mm
(1.18 – 1.19 in)
- B Standard (New): 117.42 – 117.72 mm
(4.623 – 4.635 in)
- C Standard (New): 5.48 – 5.49 mm
(0.2157 – 0.2161 in)
- C Service Limit: 5.45 mm (0.2146 in)
- D Standard (New): 0.85 – 1.15 mm
(0.033 – 0.045 in)
- D Service Limit: 0.65 mm (0.026 in)

Exhaust Valve Dimensions

- A Standard (New): 25.9 – 26.1 mm
(1.02 – 1.03 in)
- B Standard (New): 114.60 – 114.90 mm
(4.512 – 4.524 in)
- C Standard (New): 5.45 – 5.46 mm
(0.2146 – 0.2150 in)
- C Service Limit: 5.42 mm (0.2134 in)
- D Standard (New): 1.05 – 1.35 mm
(0.041 – 0.053 in)
- D Service Limit: 0.95 mm (0.037 in)

Intake Valve Stem-to-Guide Clearance:

Standard (New): 0.04 – 0.10 mm
(0.002 – 0.004 in)


Service Limit: 0.16 mm (0.006 in)

Exhaust Valve Stem-to-Guide Clearance:

Standard (New): 0.10 – 0.16 mm
(0.004 – 0.006 in)

Service Limit: 0.22 mm (0.009 in)

Valve extended 10 mm out from seat.

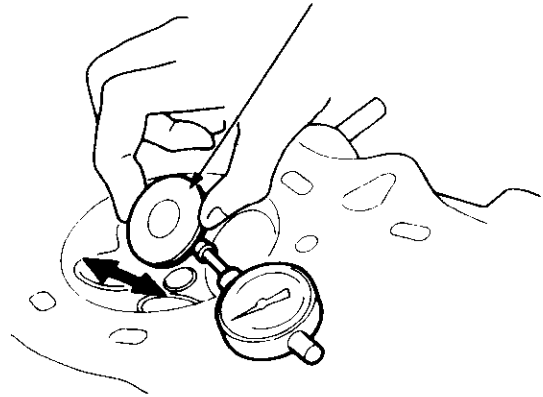

- If the measurement exceeds the service limit, recheck using a new valve.
- If the measurement is now within the service limit, reassemble using a new valve.
- If the measurement still exceeds the limit, recheck using the alternate method below, then replace the valve and guide, if necessary.

NOTE: An alternate method of checking guide to stem clearance is to subtract the O.D. of the valve stem, measured with a micrometer, from the I.D. of the valve guide, measured with an inside micrometer or ball gauge. Take the measurements in three places along the valve stem and three places inside the valve guide. The difference between the largest guide measurement and the smallest stem measurement should not exceed the service limit.

Intake Valve Stem-to-Guide Clearance:

Standard (New): 0.02 – 0.05 mm
(0.001 – 0.002 in)

Service Limit: 0.08 mm (0.003 in)

Exhaust Valve Stem-to-Guide Clearance:

Standard (New): 0.05 – 0.08 mm
(0.002 – 0.003 in)

Service Limit: 0.11 mm (0.004 in)


Warpage

NOTE: If the camshaft-to-holder oil clearances (see page 6-36) are not within specification, the cylinder head cannot be resurfaced.


If the camshaft-to-holder oil clearances are within specifications, check the cylinder head for warpage.

- If warpage is less than 0.05 mm (0.002 in), cylinder head resurfacing is not required.
- If warpage is between 0.05 mm (0.002 in) and 0.2 mm (0.008 in), resurface the cylinder head.
- Maximum resurface limit is 0.2 mm (0.008 in) based on a height of 93 mm (3.66 in).

PRECISION STRAIGHT EDGE

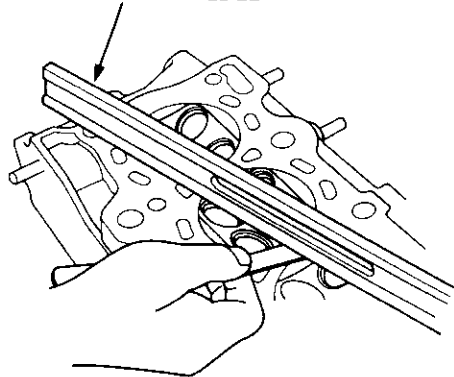

Measure along edges, and three ways across center.

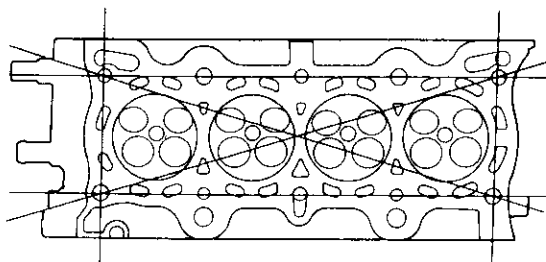

Cylinder Head Height:


Standard (New): 92.95 - 93.05 mm
(3.659 - 3.663 in)

Reconditioning

1. Renew the valve seats in the cylinder head using a valve seat cutter.

NOTE: If the guides are worn (see page 6-39), replace them (see page 6-41) before cutting the valve seats.

VALVE SEAT CUTTER
(Commercially available)

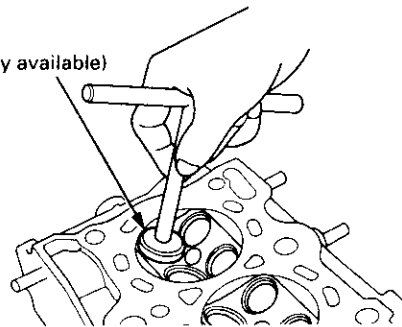

2. Carefully cut a 45° seat, removing only enough material to ensure a smooth and concentric seat.
3. Bevel the upper edge of the seat with the 30° cutter and the lower edge of the seat with the 60° cutter. Check the width of the seat and adjust accordingly.
4. Make one more very light pass with the 45° cutter to remove any possible burrs caused by the other cutters.

Valve Seat Width:

Standard (New):


Intake: 0.85 - 1.15 mm (0.033 - 0.045 in)

Exhaust: 1.25 - 1.55 mm (0.049 - 0.061 in)


Service Limit:

Intake: 1.6 mm (0.063 in)

Exhaust: 2.0 mm (0.079 in)

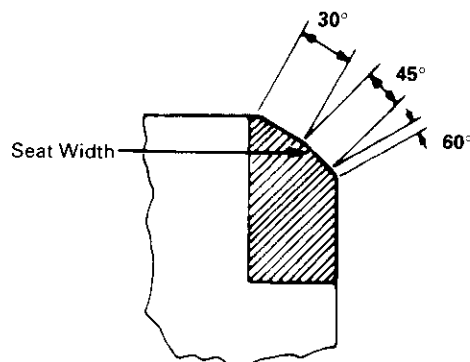

5. After resurfacing the seat, inspect for even valve seating: Apply Prussian Blue compound to the valve face, and insert the valve in its original location in the head, then lift and snap it closed against the seat several times.

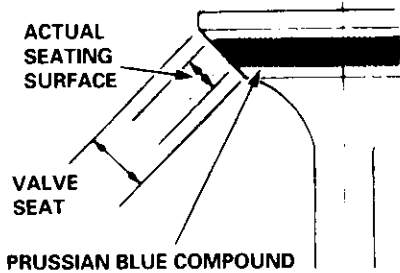

6. The actual valve seating surface, as shown by the blue compound, should be centered on the seat.
 - If it is too high (closer to the valve stem), you must make a second cut with the 60° cutter to move it down, then one more cut with the 45° cutter to restore seat width.
 - If it is too low (closer to the valve edge), you must make a second cut with the 30° cutter to move it up, then one more cut with the 45° cutter to restore seat width.

NOTE: The final cut should always be made with the 45° cutter.


7. Insert the intake and exhaust valves in the head and measure the valve stem installed height.

Intake, Exhaust Stem Installed Height:

Standard (New): 53.17 – 53.64 mm
(2.093 – 2.112 in)


Service Limit: 53.89 mm (2.122 in)

8. If the valve stem installed height is over the service limit, replace the valve and recheck. If its still over the service limit, replace the cylinder head; the valve seat in the head is too deep.

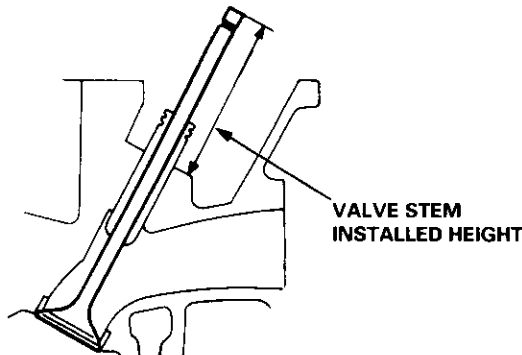


Replacement

1. As illustrated below, use a commercially-available air-impact valve guide driver attachment modified to fit the diameter of the valve guides. In most cases, the same procedure can be done using the special tool and a conventional hammer.

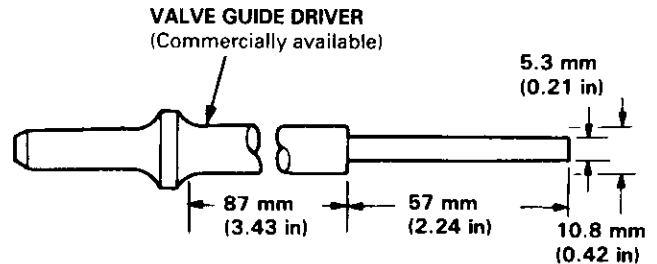

or
VALVE GUIDE DRIVER, 5.5 mm
07742 – 0010100

2. Select the proper replacement guides, and chill them in the freezer section of a refrigerator for about an hour.
3. Use a hot plate or oven to evenly heat the cylinder head to 300°F (150°C). Monitor the temperature with a cooking thermometer.

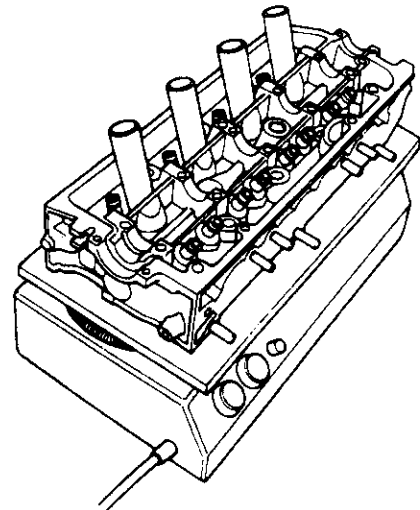

CAUTION:

- Do not use a torch; it may warp the head.
- Do not get the head hotter than 300°F (150°C); excessive heat may loosen the valve seats.
- To avoid burns, use heavy gloves when handling the heated cylinder head.

(cont'd)

Valve Guides



Replacement (cont'd)

- Working from the camshaft side, use the driver and an air hammer to drive the guide about 2 mm (0.1 in) towards the combustion chamber. This will knock off some of the carbon and make removal easier.

CAUTION:

- Always wear safety goggles or a face shield when driving valve guides.
- Hold the air hammer directly in line with the valve guide to prevent damaging the driver.

- Turn the head over, and drive the guide out toward the camshaft side of the head.

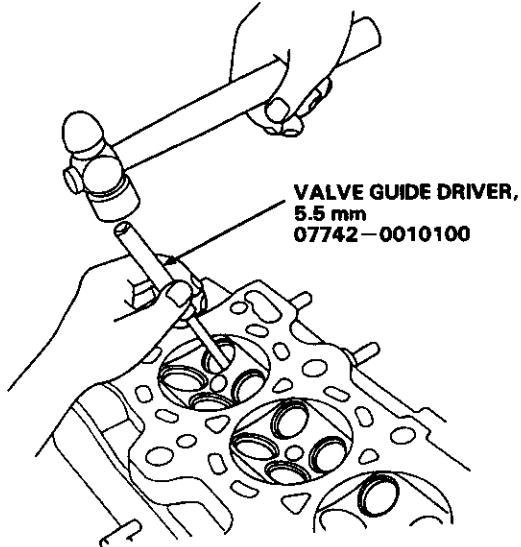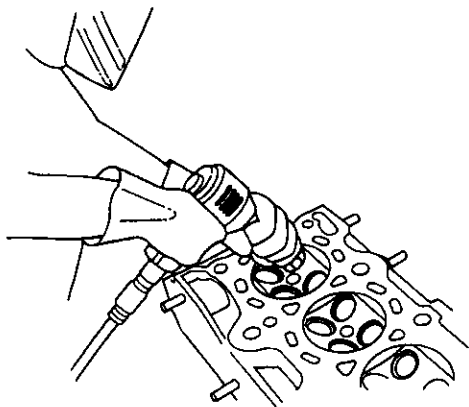


If a valve guide still won't move, drill it out with a 8 mm (5/16 in) bit, then try again.

CAUTION: Drill guides only in extreme cases; you could damage the cylinder head if the guide breaks.

- Remove the new guides from the freezer, one at a time, as you need them.


- Apply a thin coat of clean engine oil to the outside of the new valve guide. Install the guide from the camshaft side of the head; use the special tool to drive the guide in to the specified installed height. If you have all 16 guides to do, you may have to reheat the head.

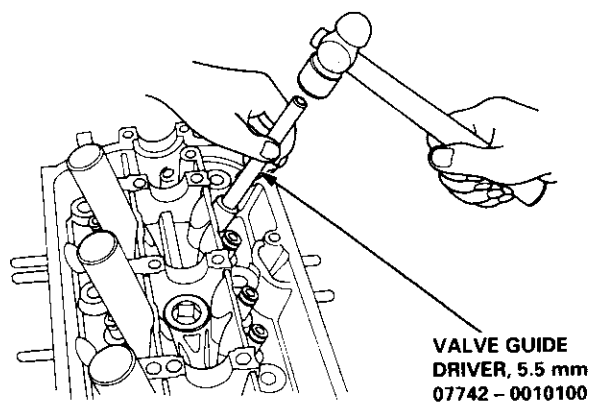

Valve Guide Installed Height:

Intake: 17.85 – 18.35 mm (0.703 – 0.722 in)

Exhaust: 18.65 – 19.15 mm (0.734 – 0.754 in)

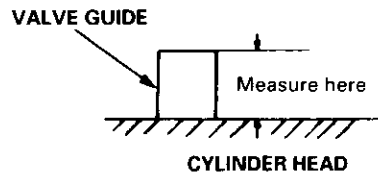




Reaming

NOTE: For new valve guides only.

1. Coat both the reamer and valve guide with cutting oil.
2. Rotate the reamer clockwise the full length of the valve guide bore.
3. Continue to rotate the reamer clockwise while removing it from the bore.
4. Thoroughly wash the guide in detergent and water to remove any cutting residue.
5. Check the clearance with a valve (see page 6-39). Verify that the valve slides in the valve guide without exerting pressure.

Turn reamer in clockwise direction only.

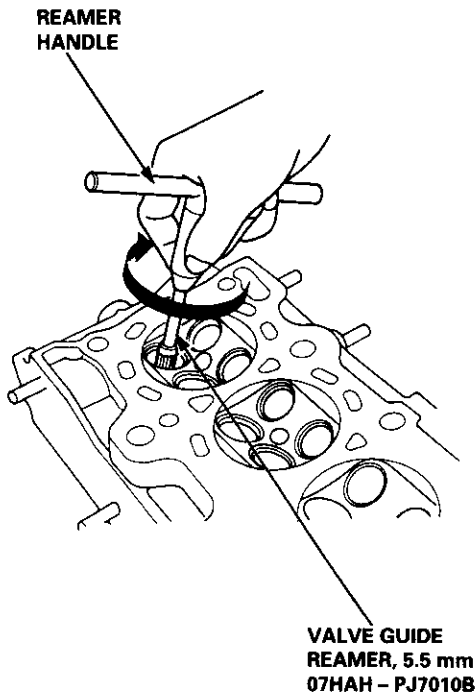

Installation


1. Coat valve stems with engine oil. Insert the valves in the valve guides.

NOTE: Make sure the valves move up and down smoothly.

2. Install the spring seats on the cylinder head.
3. Install the valve seals using the valve guide seal installer.

NOTE: Exhaust and intake valve seals are not interchangeable.

WHITE SPRING

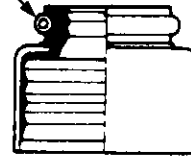

INTAKE VALVE SEAL


BLACK SPRING



EXHAUST VALVE SEAL

VALVE GUIDE SEAL INSTALLER

KD2899 (Commercially available)
NOTE: Use small ID end of tool.

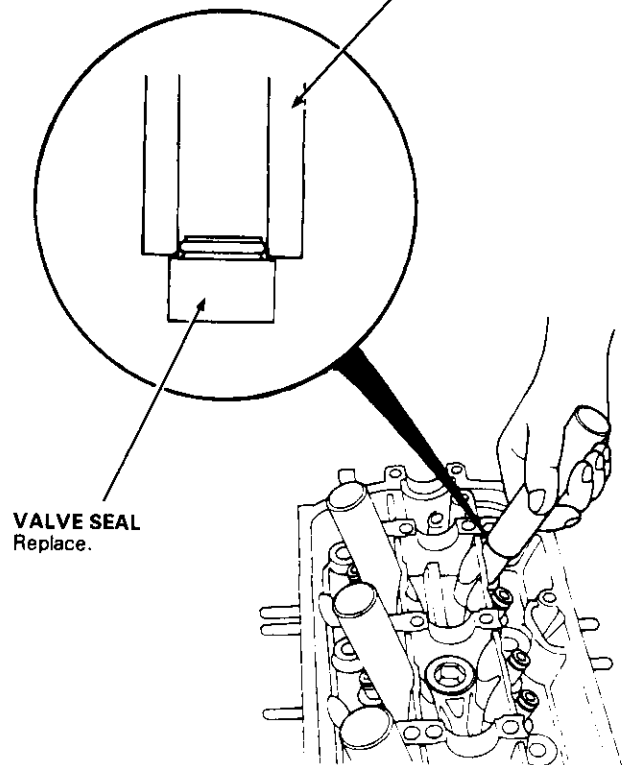


(cont'd)

Installation (cont'd)

4. Install the valve spring and valve retainer, then install the valve spring compressor. Compress the spring and install the valve keepers.


NOTE: Place the end of the valve spring with closely wound coils toward the cylinder head.

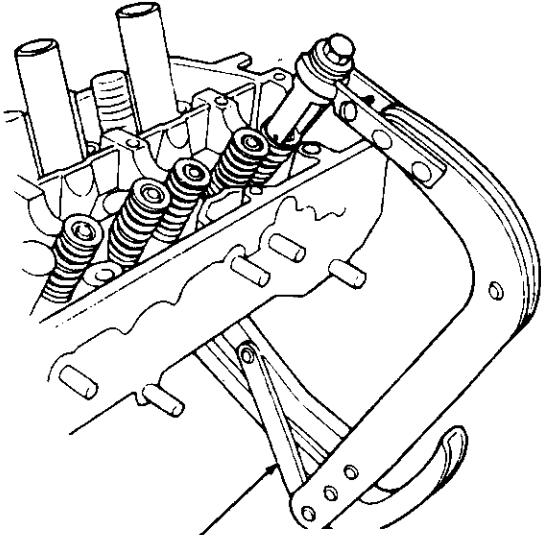

VALVE SPRING COMPRESSOR
(Commercially available)
Snap-on CF711 or KD - 383
with #32 JAWS

5. Lightly tap the end of each valve stem two or three times with a plastic mallet to ensure proper seating of the valve and valve keepers.

NOTE: Tap the valve stem only along its axis so you do not bend the stem.

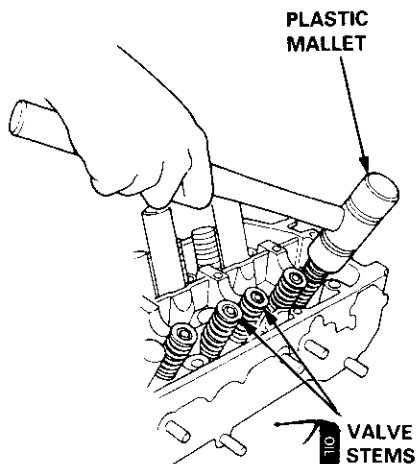


Installation

CAUTION:

- Make sure that all rockers are in alignment with their valves when torquing the rocker assembly bolts.
- Valve locknuts should be loosened and adjusting screws backed off before installation.
- To prevent the rocker arm assembly from coming apart, leave the camshaft holder bolts in the holders.

1. After wiping down the camshaft, camshaft seal and journals in the cylinder head, lubricate both surfaces and install the camshaft.
2. Clean and install the oil control orifice with a new O-ring.

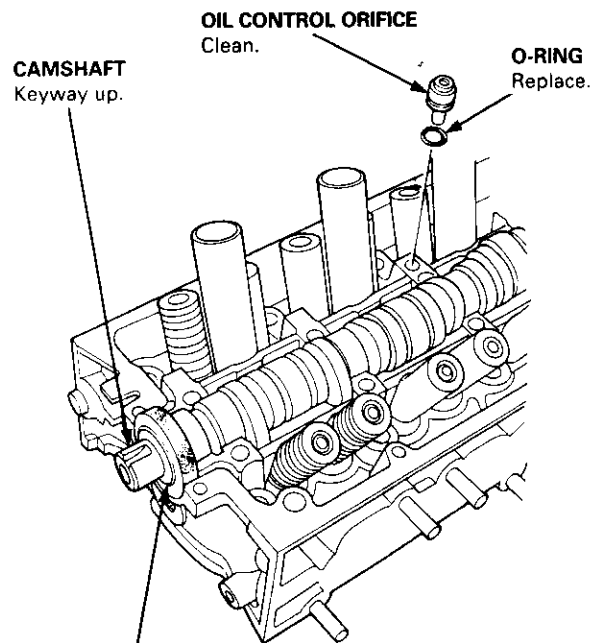

CAMSHAFT
Keyway up.

OIL CONTROL ORIFICE
Clean.

O-RING
Replace.


CAMSHAFT SEAL

Seal housing surface should be dry.
Apply a light coat of oil to camshaft
and inner lip of seal.


3. Turn the camshaft until its keyway is facing up (No. 1 piston TDC).



- Apply liquid gasket (Part No. 08718 - 0001 or 08718 - 0003) to the head mating surfaces of the No. 1 and No. 5 camshaft holders.
— Apply liquid gasket to the shaded areas.

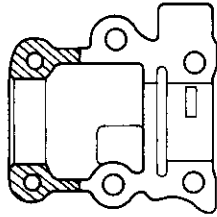

No. 5

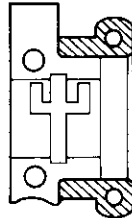

No. 1

- Set the rocker arm assembly in place and loosely install the bolts.
— Make sure that the rocker arms are properly positioned on the valve stems.
- Tighten each bolt two turns at a time in the sequence shown below to ensure that the rockers do not bind on the valves.

Specified torque:


8 mm bolts: 20 N·m (2.0 kgf·m, 14 lbf·ft)

Apply engine oil to the threads.

6 mm bolts: 12 N·m (1.2 kgf·m, 8.7 lbf·ft)

Apply engine oil to the threads.

6 mm bolts: ⑪, ⑫, ⑬, ⑭

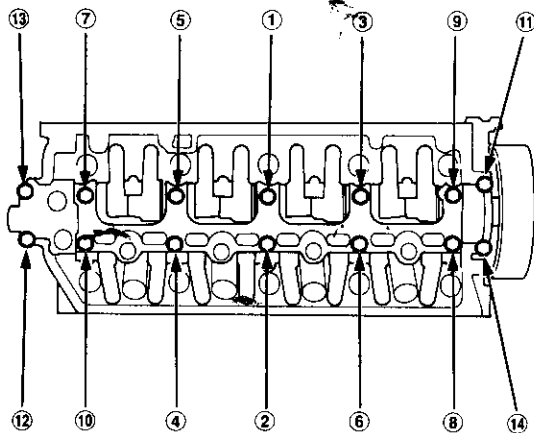

- Install the back cover, then install the camshaft pulley.


Installation

Install the cylinder head in the reverse order of removal:

NOTE:

- Always use a new head gasket.
- Cylinder head and cylinder block surface must be clean.
- "UP" mark on the camshaft pulley should be at the top.
- Turn the crankshaft so the No. 1 piston is at TDC (see page 6-20).
- Clean the oil control orifice before installing.
- Do not use the upper cover and lower cover to store removed items.
- Clean the upper cover and lower cover before installation.

- Cylinder head dowel pins must be aligned.

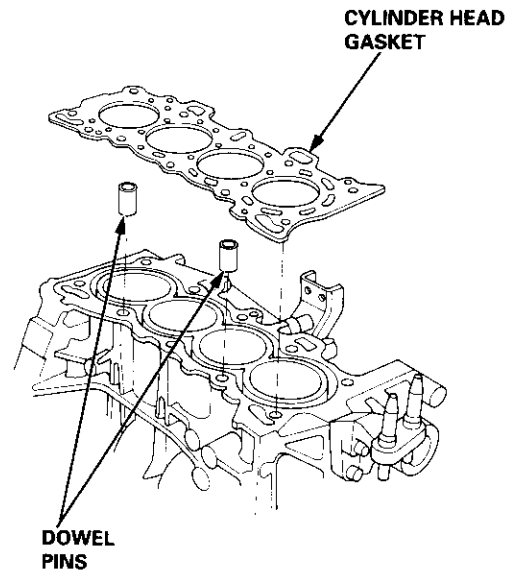

(cont'd)

Cylinder Head

Installation (cont'd)

2. Position the camshaft correctly (see page 6-20).
3. Tighten the cylinder head bolts sequentially in four steps.

1st step: ① - ⑩ 20 N·m (2.0 kgf·m, 14 lbf·ft)

2nd step: ① - ⑩ 49 N·m (5.0 kgf·m, 36 lbf·ft)


3rd step: ① - ⑩ 67 N·m (6.8 kgf·m, 49 lbf·ft)

4th step: ①, ② 67 N·m (6.8 kgf·m, 49 lbf·ft)

NOTE:

- We recommend using a beam-type torque wrench. When using a preset-type torque wrench, be sure to tighten slowly and not to overtighten.
- If a bolt makes any noise while you are torquing it, loosen the bolt, and retighten it from the 1st step.

CYLINDER HEAD BOLTS TORQUE SEQUENCE:

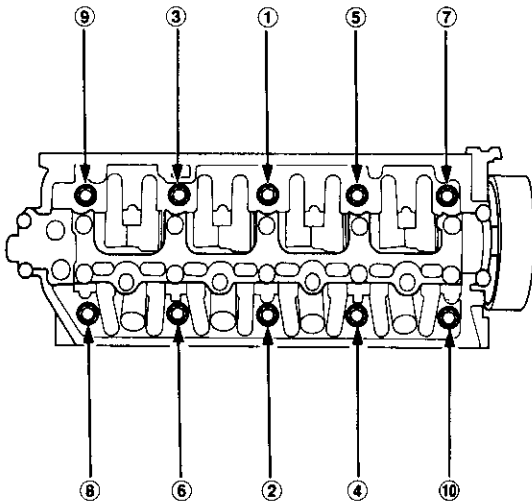


4. Install the intake manifold and tighten the nuts in a crisscross pattern in two or three steps, beginning with the inner nuts (see pages 9-2 thru 9-4).
 - Always use a new intake manifold gasket.
5. Install the exhaust manifold and tighten the nuts in a crisscross pattern in two or three steps, beginning with the inner nut (see pages 9-5 and 9-6).
 - Always use a new exhaust manifold gasket.
6. Install the exhaust manifold bracket. Install the exhaust pipe A and the bracket, then install the cover.

7. Install the timing belt (see page 6-20).
8. Adjust the valve clearance (see page 6-12).
9. Install the head cover gasket in the groove of the cylinder head cover. Seat the recesses for the camshaft first, then work it into the groove around the outside edges.

NOTE:


- Before installing the head cover gasket, thoroughly clean the seal and the groove.
- When installing, make sure the head cover gasket is seated securely in the corners of the recesses with no gap.

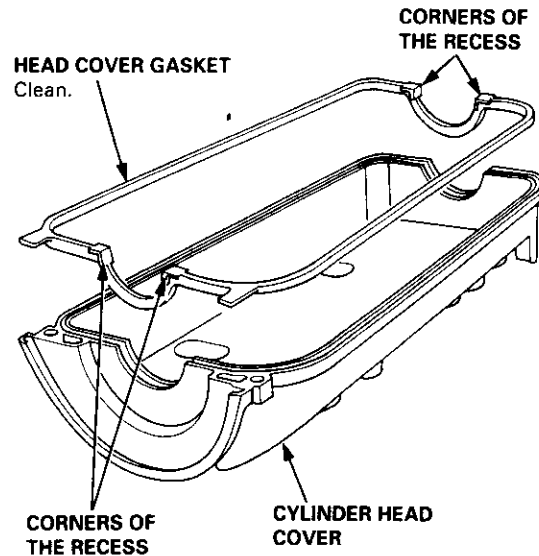

10. Apply liquid gasket to the head cover gasket at the four corners of the recesses.

NOTE:

- Use liquid gasket, Part No. 08718 - 0001 or 08718 - 0003.
- Check that the mating surfaces are clean and dry before applying liquid gasket.
- Do not install the parts if five minutes or more have elapsed since applying liquid gasket. Instead, reapply liquid gasket after removing old residue.
- After assembly, wait at least 30 minutes before filling the engine with oil.

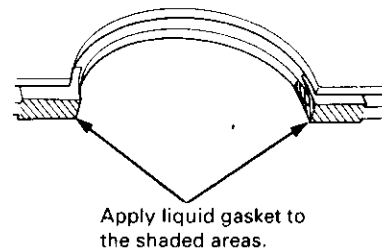




11. When installing the cylinder head cover, hold the head cover gasket in the groove by placing your fingers on the camshaft holder contacting surfaces (top of the semicircles).

Set the spark plug seal on the spark plug pipe.

Once the cylinder head cover is on the cylinder head, slide the cover slightly back and forth to seat the head cover gasket.


NOTE:

- Before installing the cylinder head cover, clean the cylinder head contacting surfaces with a shop towel.
- Do not touch the parts where liquid gasket was applied.
- Take care not to damage the spark plug seals when installing the cylinder head cover.
- Visually check the spark plug seals for damage.
- Replace the washer when damaged or deteriorated.

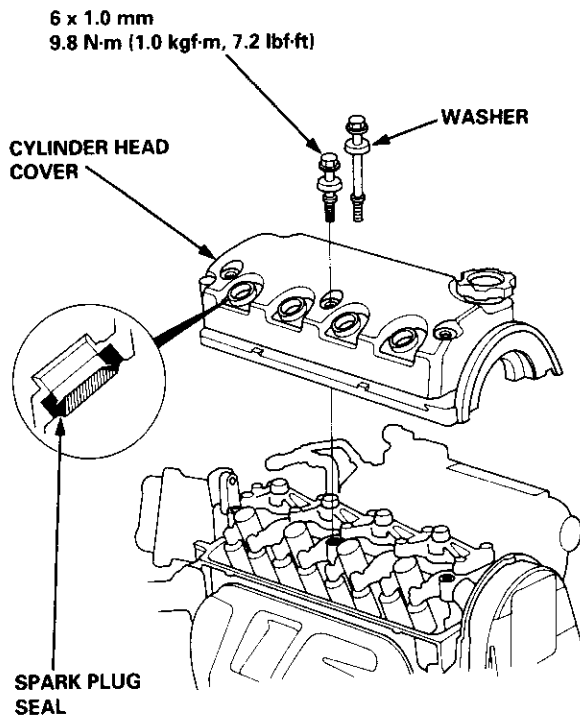

12. Tighten the nuts in two or three steps. In the final step, tighten all bolts, in sequence, to 9.8 N-m (1.0 kgf-m, 7.2 lbf-ft).

NOTE: After assembly, wait at least 30 minutes before filling the engine with oil.

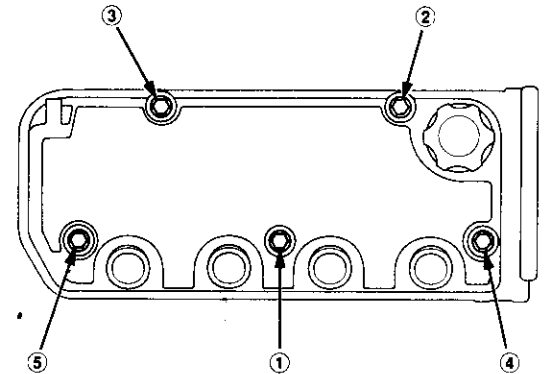

13. After installation, check that all tubes, hoses and connectors are installed correctly.

Engine Block


Special Tools	7-2
Illustrated Index	7-3
Flywheel and Drive Plate	
Replacement	7-6
Connecting Rod and Crankshaft	
End Play	7-6
Main Bearings	
Clearance	7-7
Selection	7-8
Connecting Rod Bearings	
Clearance	7-8
Selection	7-9
Pistons and Crankshaft	
Removal	7-9
Crankshaft	
Inspection	7-11
Pistons	
Inspection	7-12
Installation	7-20

Cylinder Block	
Inspection	7-13
Bore Honing	7-14
Piston Pins	
Removal	7-14
Installation	7-15
Inspection	7-16
Connecting Rods	
Selection	7-15
Piston Rings	
End Gap	7-17
Replacement	7-17
Ring-to-Groove Clearance	7-18
Alignment	7-18
Crankshaft Oil Seal	
Installation	7-19
Crankshaft	
Installation	7-20
Oil Pan	
Installation	7-22
Oil Seals	
Installation	7-24



Special Tools

Ref. No.	Tool Number	Description	Qty	Page Reference
①	07LAB - PV00100	Ring Gear Holder	1	7-6
②	07749 - 0010000	Driver	1	7-19, 25
③	07947 - SB00200	Seal Driver	1	7-24
④	07948 - SB00101	Driver Attachment	1	7-19, 25
⑤	07973 - PE00200	Pilot Collar	1	7-14, 15
⑥	07973 - PE00310	Piston Pin Driver Shaft	1	7-14, 15
⑦	07973 - PE00320	Piston Pin Driver Head	1	7-14, 15
⑧	07973 - PE00400	Piston Pin Base Insert	1	7-14, 15
⑨	07973 - SB00100	Piston Base Head	1	7-14, 15
⑩	07973 - 6570500	Piston Base	1	7-14, 15
⑪	07973 - 6570600	Piston Base Spring	1	7-14, 15

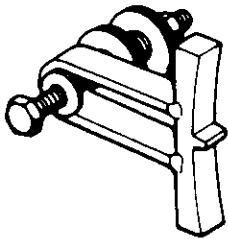


①



②



③

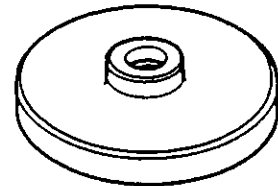

④



⑤




⑥




⑦



⑧

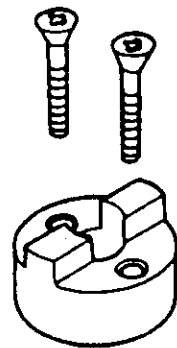

⑨

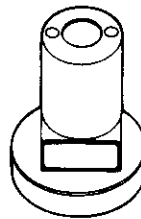

⑩



⑪

Illustrated Index




D16V7 engine:



Lubricate all internal parts with engine oil during reassembly.

NOTE:


- Apply liquid gasket to the mating surfaces of the right side cover and oil pump case before installing them.
- Use liquid gasket, part No. 08718 - 0001 or 08718 - 0003.
- Clean the oil pan gasket mating surfaces before installing it.

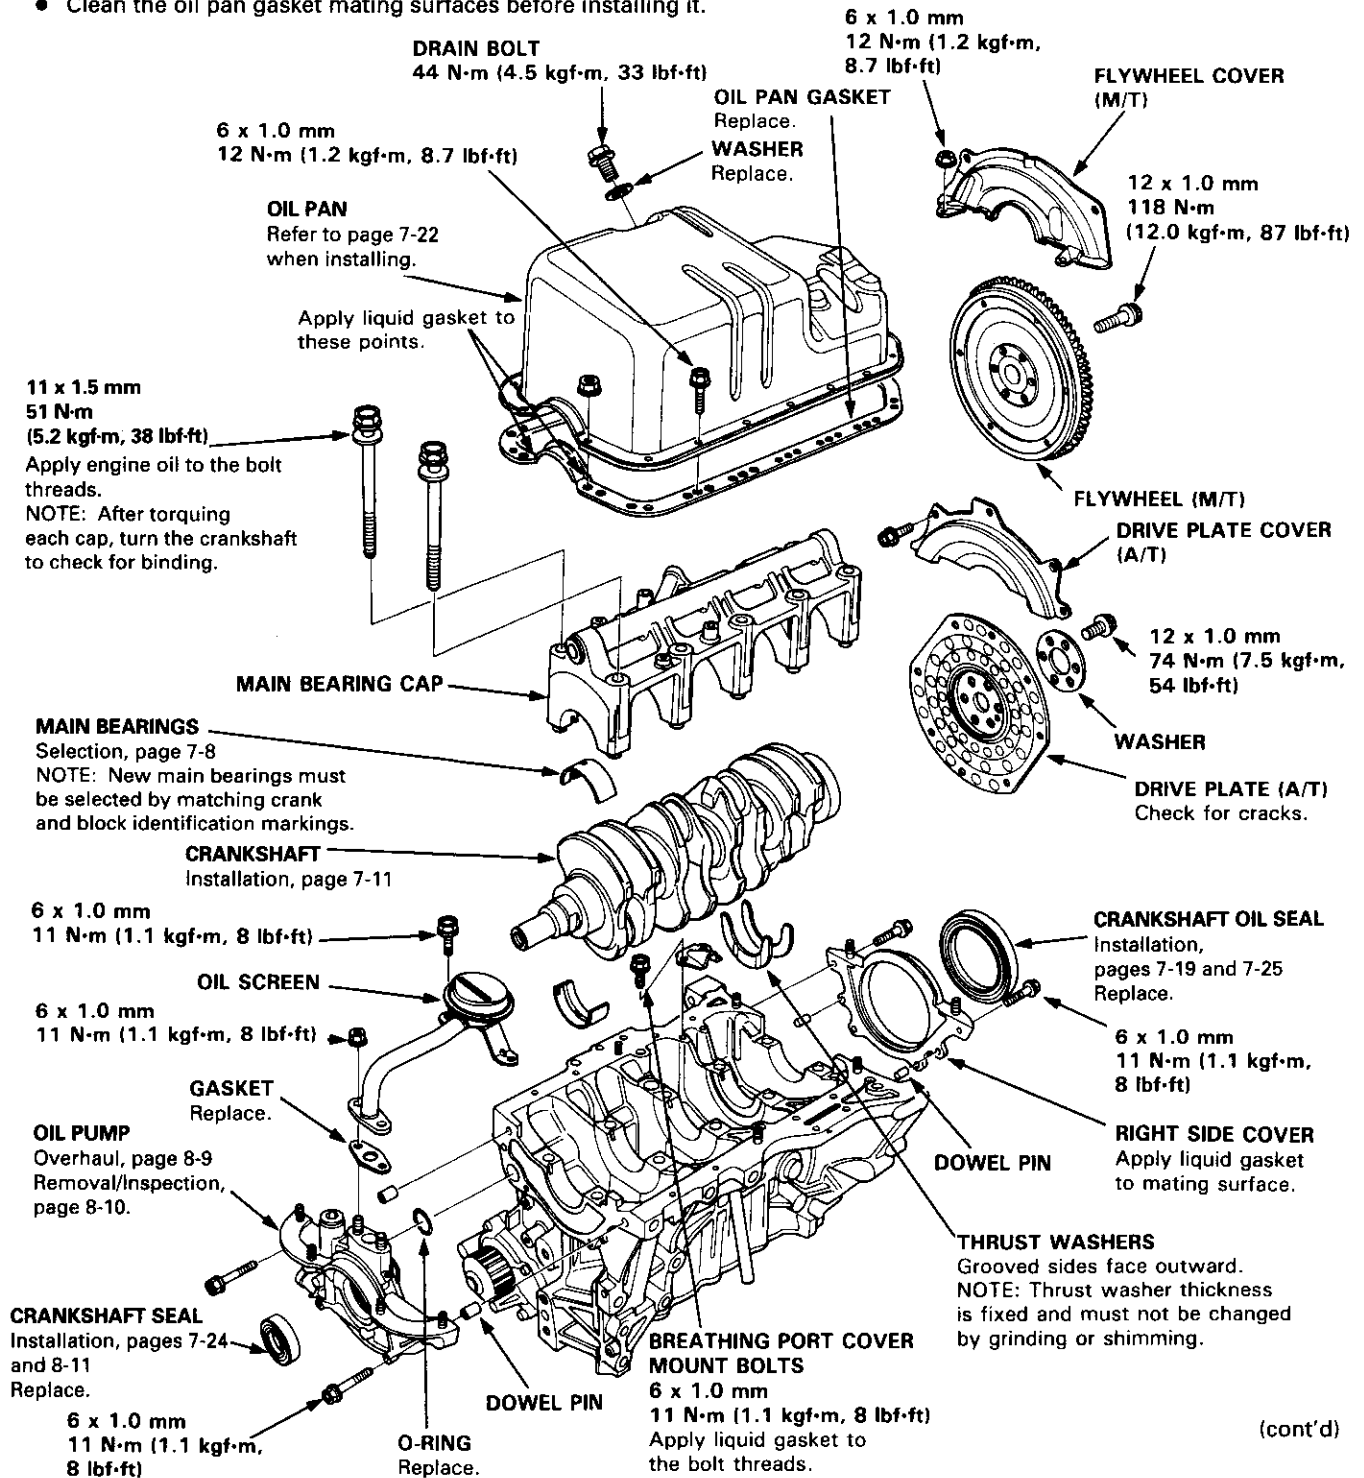

(cont'd)

Illustrated Index


(cont'd)

 Lubricate all internal parts with engine oil during reassembly.

NOTE:


- Apply liquid gasket to the mating surfaces of the right side cover and oil pump case before installing them.
- Use liquid gasket, part No. 08718 - 0001 or 08718 - 0003.
- Clean the oil pan gasket mating surfaces before installing it.

D16Y5, D16Y8 engines:

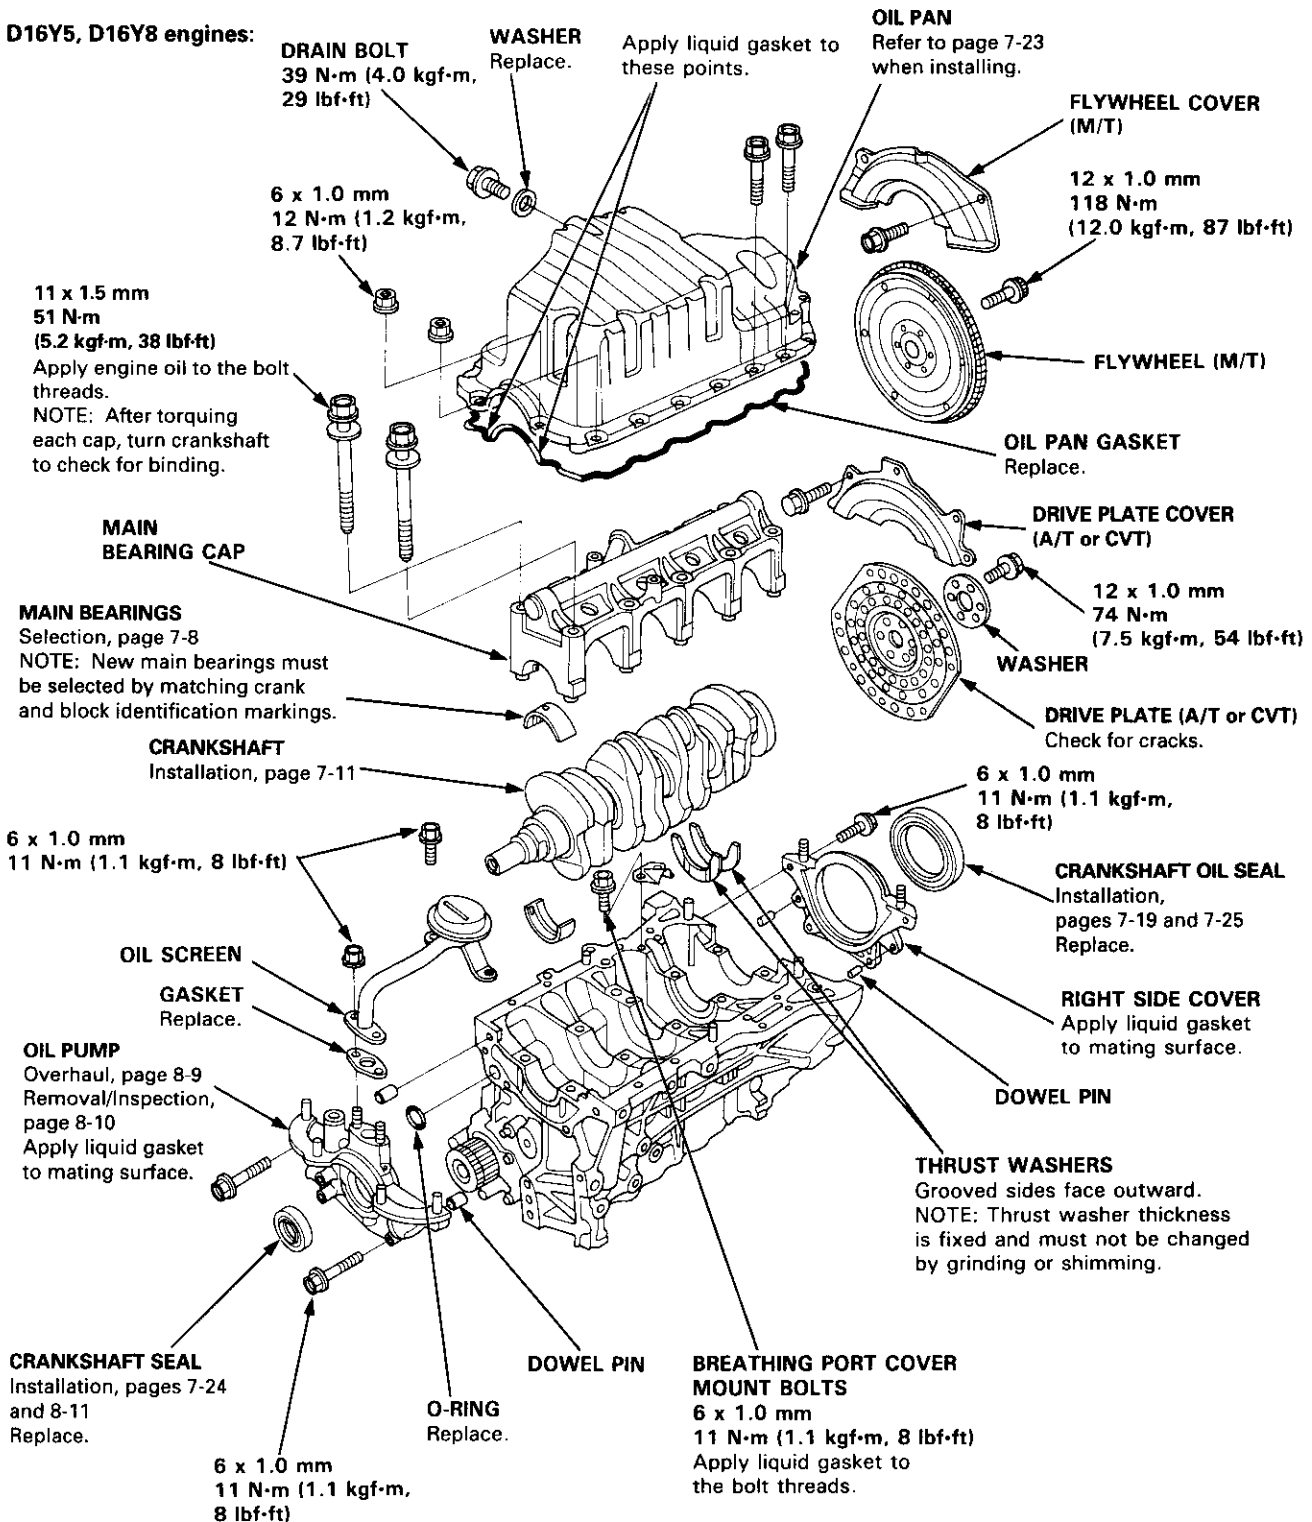




NOTE: New rod bearings must be selected by matching connecting rod assembly and crankshaft identification markings (see page 7-9).


 Lubricate all internal parts with engine oil during reassembly.

PISTON INSTALLATION DIRECTION:

EXHAUST

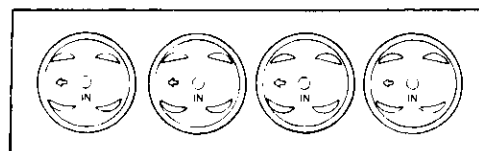

INTAKE

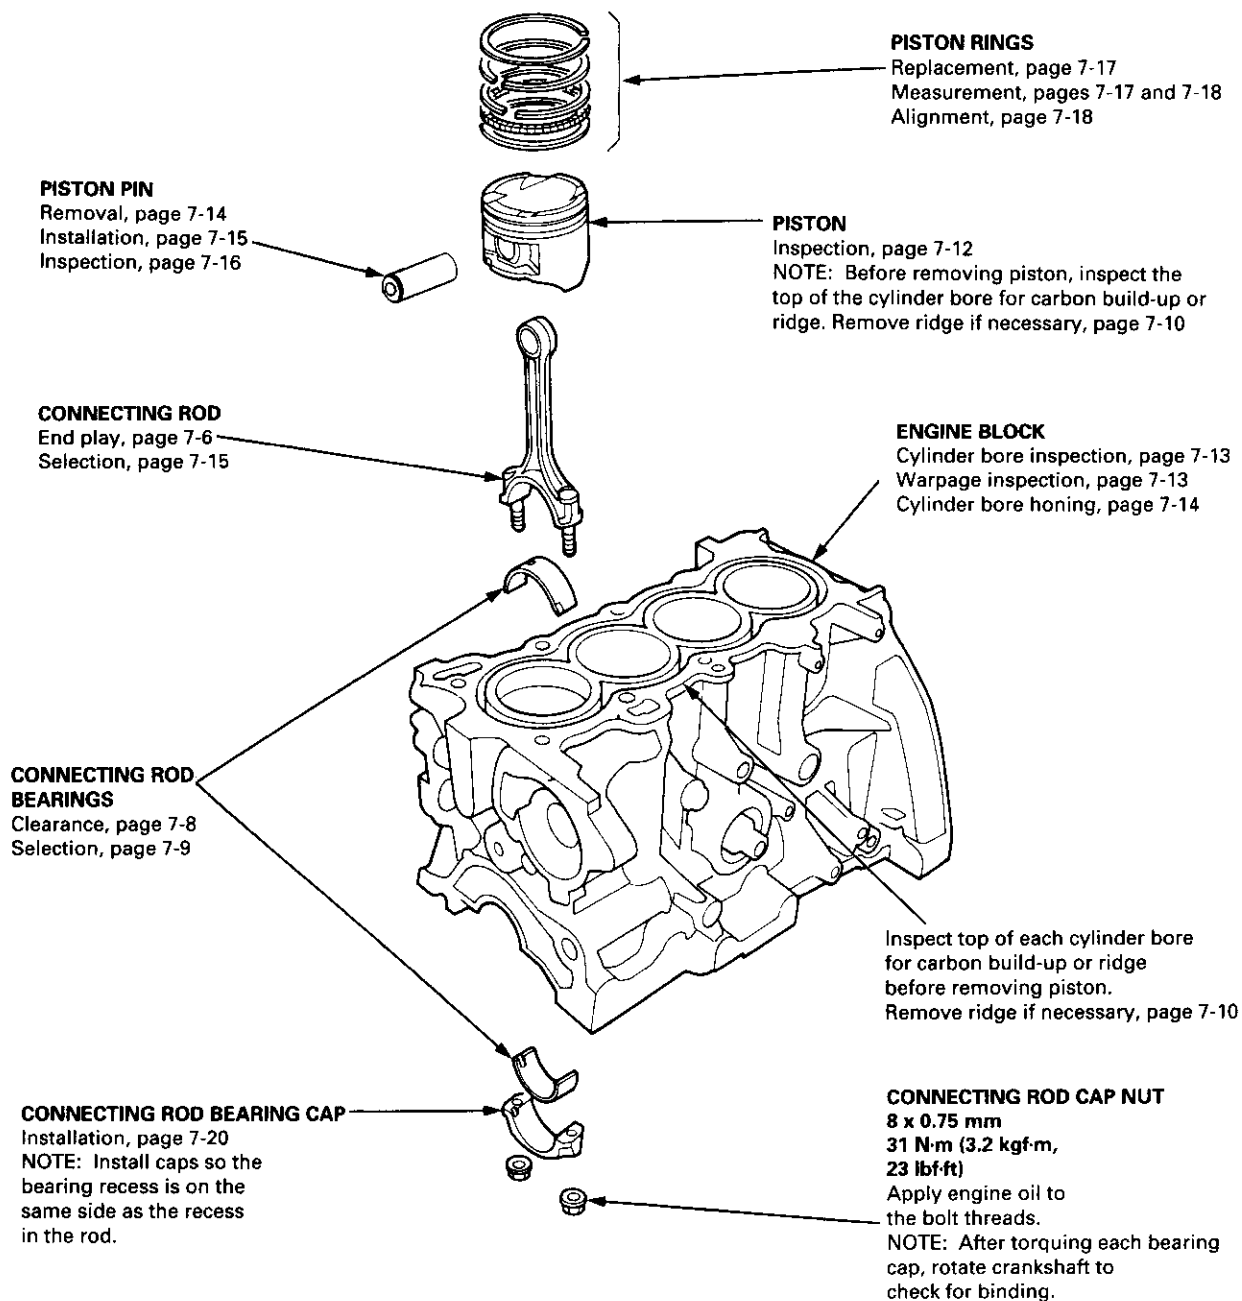

Flywheel and Drive Plate


Connecting Rod and Crankshaft

Replacement

Manual Transmission:

Remove the six flywheel bolts, then separate the flywheel from the crankshaft flange. After installation, tighten the bolts in a crisscross pattern.

RING GEAR HOLDER
07LAB - PV00100

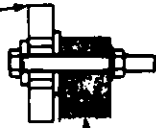


ENGINE BLOCK

RING GEAR

Inspect ring gear teeth for wear or damage.


12 x 1.0 mm
118 N·m (12.0 kgf·m, 87 lbf·ft)

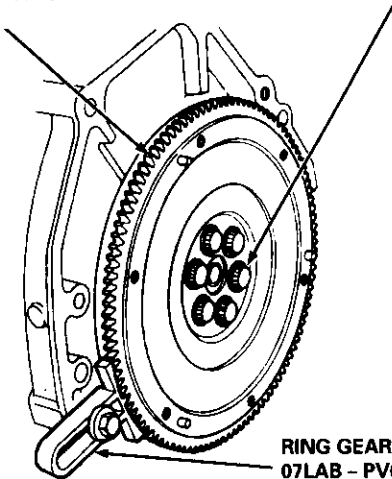

RING GEAR HOLDER
07LAB - PV00100

Automatic Transmission:

Remove the six drive plate bolts, then separate the drive plate from the crankshaft flange. After installation, tighten the bolts in a crisscross pattern.

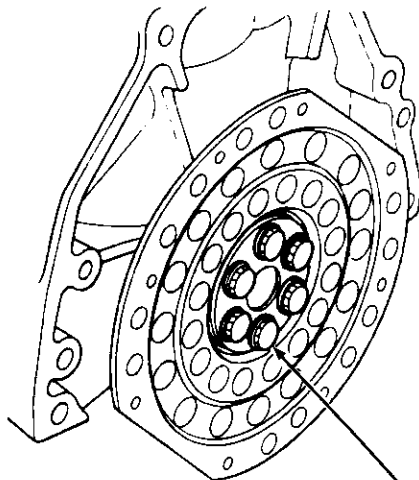


12 x 1.0 mm
74 N·m (7.5 kgf·m, 54 lbf·ft)

End Play

Connecting Rod End Play:


Standard (New): 0.15 - 0.30 mm (0.006 - 0.012 in)

Service Limit: 0.40 mm (0.016 in)

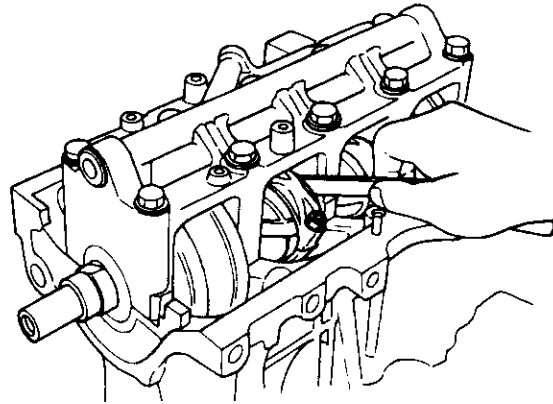

- If out-of-tolerance, install a new connecting rod.
- If still out-of-tolerance, replace the crankshaft (see pages 7-9 and 7-20).

Push the crankshaft firmly away from the dial indicator, and zero the dial against the end of the crankshaft. Then pull the crankshaft firmly back toward the indicator; dial reading should not exceed service limit.

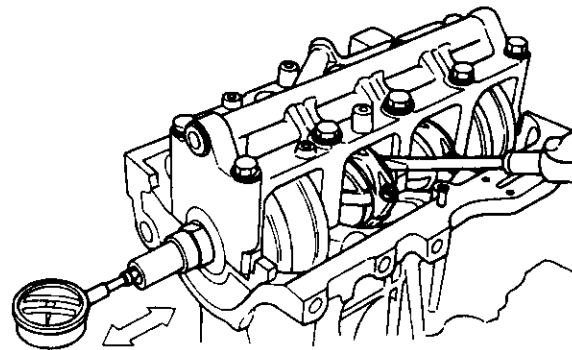

Crankshaft End Play:

Standard (New): 0.10 - 0.35 mm (0.004 - 0.014 in)

Service Limit: 0.45 mm (0.018 in)

- If end play is excessive, inspect the thrust washers and thrust surface on the crankshaft. Replace parts as necessary.

NOTE: Thrust washer thickness is fixed and must not be changed either by grinding or shimming. Thrust washers are installed with grooved sides facing outward.

Main Bearings



Clearance

1. To check main bearing-to-journal oil clearance, remove the main caps and bearing halves.
2. Clean each main journal and bearing half with a clean shop towel.
3. Place one strip of plastigage across each main journal.

NOTE: If the engine is still in the car when you bolt the main cap down to check clearance, the weight of the crankshaft and flywheel will flatten the plastigage further than just the torque on the cap bolt, and give you an incorrect reading. For an accurate reading, support the crank with a jack under the counterweights and check only one bearing at a time.

4. Reinstall the bearings and caps, then torque the bolts.

1st step: 25 N·m (2.5 kgf·m, 18 lbf·ft)

Final step: 51 N·m (5.2 kgf·m, 38 lbf·ft)

NOTE: Do not rotate the crankshaft during inspection.

5. Remove the cap and bearing again, and measure the widest part of the plastigage.

Main Bearing-to-Journal Oil Clearance:

Standard (New):


No. 1, 5 Journals:

0.018 – 0.036 mm (0.0007 – 0.0014 in)

No. 2, 3, 4 Journals:

0.024 – 0.042 mm (0.0009 – 0.0017 in)

Service Limit: 0.05 mm (0.002 in)

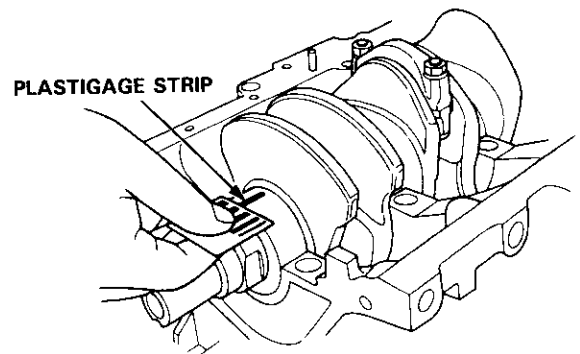

6. If the plastigage measures too wide or too narrow, (remove the engine if it's still in the car), remove the crankshaft, and remove the upper half of the bearing. Install a new, complete bearing with the same color code (select the color as shown on the next page), and recheck the clearance.

CAUTION: Do not file, shim, or scrape the bearings or the caps to adjust clearance.

7. If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check again.

NOTE: If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crankshaft and start over.

Main Bearings


Connecting Rod Bearings

Selection


CAUTION: If the codes are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

Crankshaft Bore Code Location

Letters have been stamped on the end of the block as a code for the size of each of the 5 main journal bores. Use them, and the numbers stamped on the crankshaft (codes for main journal size), to choose the correct bearings.

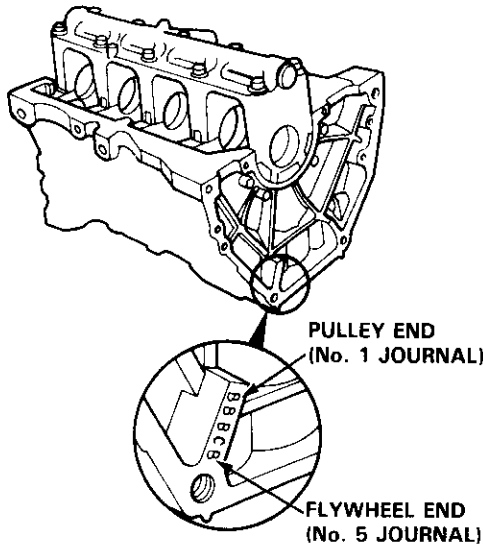

Main Journal Code Location (Numbers)

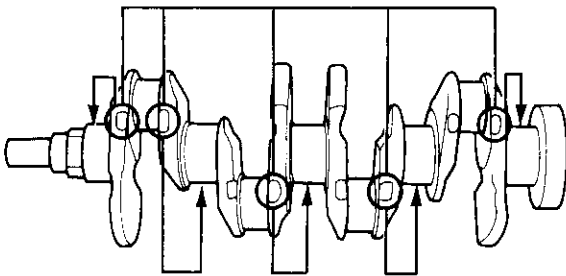

Bearing Identification

Color code is on the edge of the bearing. → Larger crank bore

A	B	C	D
---	---	---	---

→ Smaller bearing (thicker)

1
2
3
4

Red	Pink	Yellow	Green
Pink	Yellow	Green	Brown
Yellow	Green	Brown	Black
Green	Brown	Black	Blue

↓ Smaller main journal

↓ Smaller bearing (thicker)

Clearance

1. Remove the connecting rod cap and bearing half.
2. Clean the crankshaft rod journal and bearing half with a clean shop towel.
3. Place a strip of plastigage across the rod journal.
4. Reinstall the bearing half and cap, and torque the nuts.

Torque

31 N·m (3.2 kgf·m, 23 lbf·ft)


NOTE: Do not rotate the crankshaft during inspection.

5. Remove the rod cap and bearing half, and measure the widest part of the plastigage.

Connecting Rod Bearing-to-Journal Oil Clearance:

Standard (New): 0.020 – 0.038 mm
(0.0008 – 0.0015 in)

Service Limit: 0.05 mm (0.002 in)

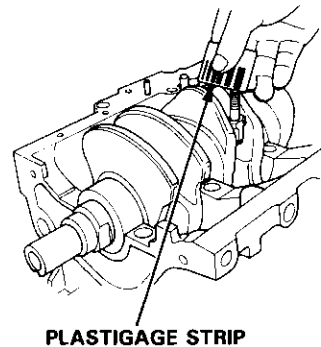

6. If the plastigage measures too wide or too narrow, remove the upper half of the bearing, install a new, complete bearing with the same color code (select the color as shown on the next page), and recheck the clearance.

CAUTION: Do not file, shim, or scrape the bearings or the caps to adjust clearance.

7. If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check clearance again.

NOTE: If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crankshaft and start over.




Selection


CAUTION: If the codes are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

Connecting Rod Code Location

Numbers have been stamped on the side of each connecting rod as a code for the size of the big end. Use them, and the letters stamped on the crankshaft (codes for rod journal size), to choose the correct bearings.

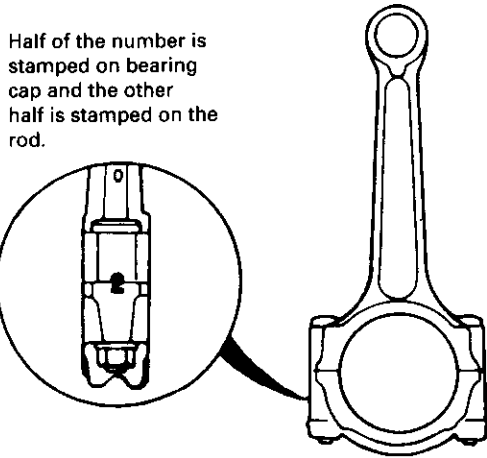

Connecting Rod Journal Code Locations (Letters)

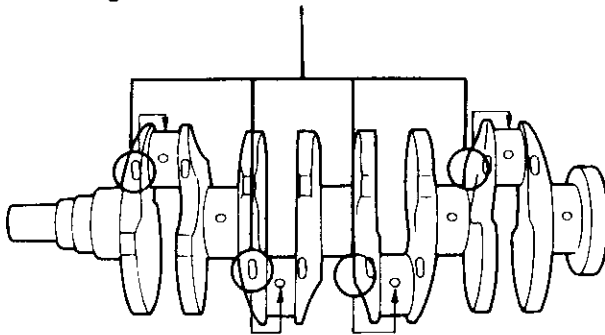

Bearing Identification

Color code is on the Larger big end bore edge of the bearing.

1	2	3	4
---	---	---	---

Smaller bearing (thicker)

A or I
B or II
C or III
D or IIII


Smaller rod journal

Smaller bearing (thicker)


Red	Pink	Yellow	Green
Pink	Yellow	Green	Brown
Yellow	Green	Brown	Black
Green	Brown	Black	Blue

Removal

1. Remove the oil pan assembly.
2. Remove the right side cover.

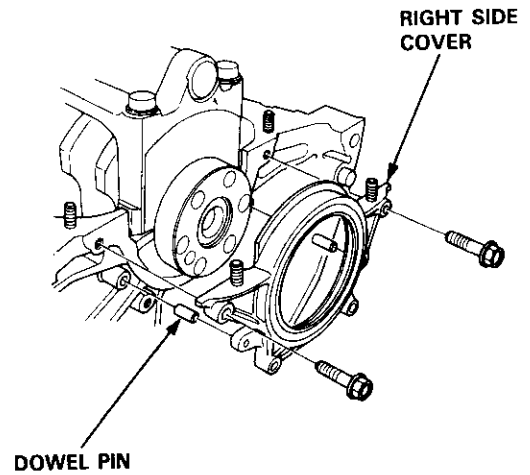

3. Remove the oil screen.

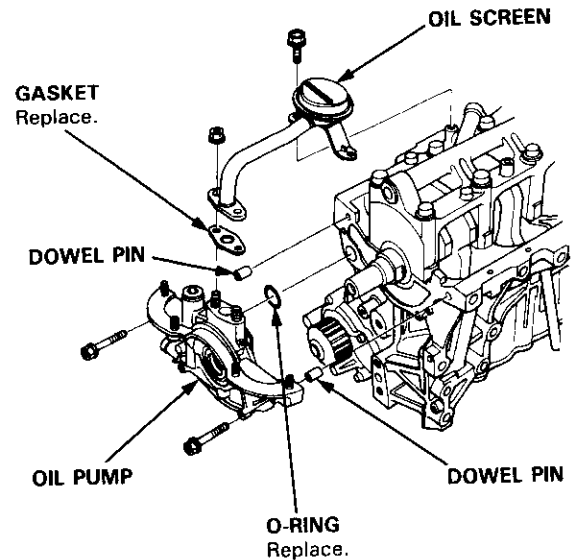

4. Remove the oil pump.


Pistons and Crankshaft

Removal (cont'd)


5. Remove the bolts and the bearing cap.

CAUTION: To prevent warpage, unscrew the bolts in sequence 1/3 turn at a time; repeat the sequence until all bolts are loosened.

MAIN BEARING CAP BOLTS LOOSENING SEQUENCE

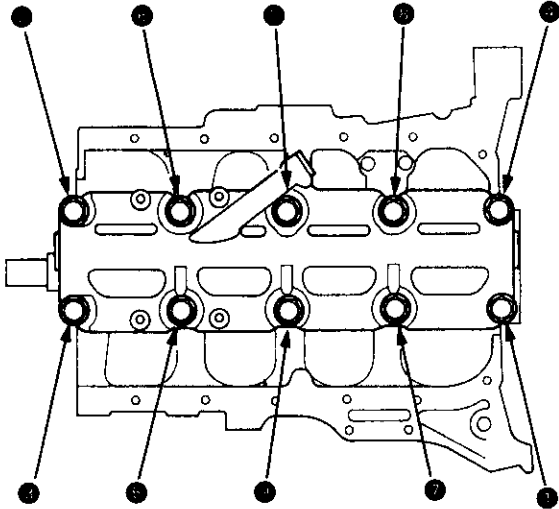


6. Remove the rod caps/bearings and main caps/bearings. Keep all caps/bearings in order.
7. Lift the crankshaft out of the engine, being careful not to damage journals.

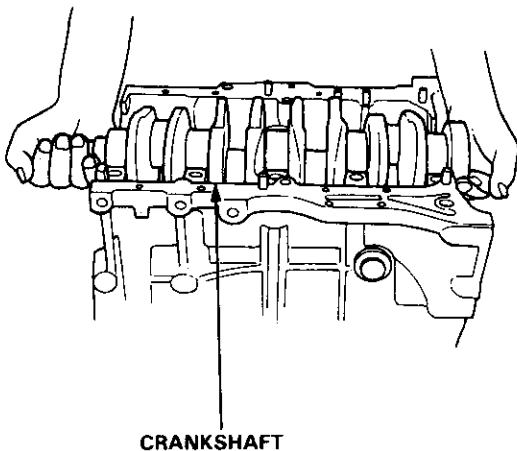


8. Remove the upper bearing halves from the connecting rods and set them aside with their respective caps.
9. Reinstall the main caps and bearings on the engine in proper order.
10. If you can feel a ridge of metal or hard carbon around the top of each cylinder, remove it with a ridge reamer. Follow the reamer manufacturer's instructions.

CAUTION: If the ridge is not removed, it may damage the pistons as they are pushed out.

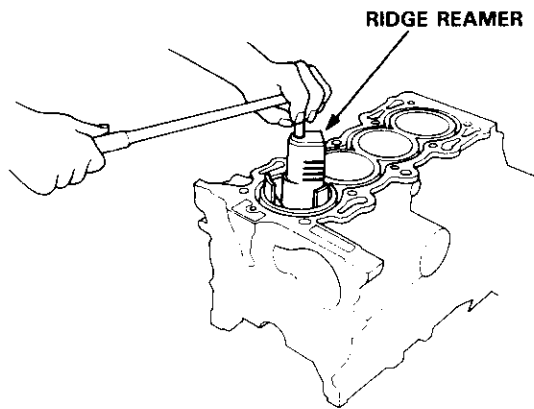

11. Use the wooden handle of a hammer to drive the pistons out.

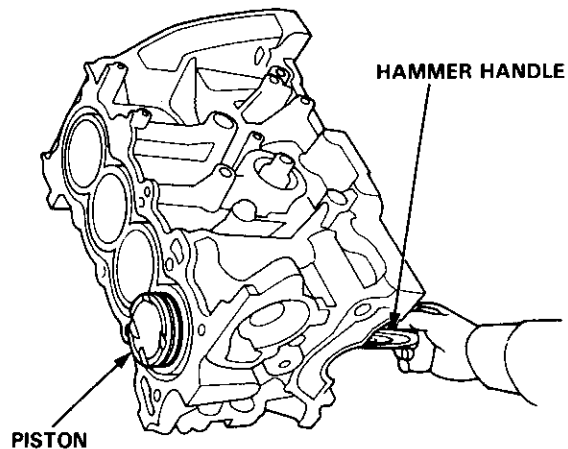

12. Reinstall the connecting rod bearings and caps after removing each piston/connecting rod assembly.
13. Mark each piston/connecting rod assembly with its cylinder number to avoid mixup on reassembly.

NOTE: The existing number on the connecting rod does not indicate its position in the engine, it indicates the rod bore size.

Crankshaft




Inspection

- Clean the crankshaft oil passages with pipe cleaners or a suitable brush.
- Check the keyway and threads.

Alignment

- Measure runout on all main journals to make sure the crank is not bent.
- The difference between measurements on each journal must not be more than the service limit.




Crankshaft Total Indicated Runout:
Standard (New): 0.03 mm (0.001 in) max.
Service Limit: 0.04 mm (0.002 in)

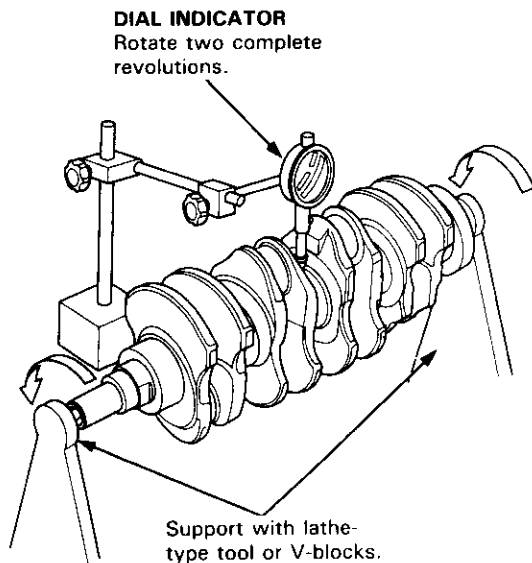

Out-of-Round and Taper

- Measure out-of-round at the middle of each rod and main journal in two places.
- The difference between measurements on each journal must not be more than the service limit.

Journal Out-of-Round:
Standard (New): 0.0025 mm (0.0001 in) max.
Service Limit: 0.005 mm (0.0002 in)

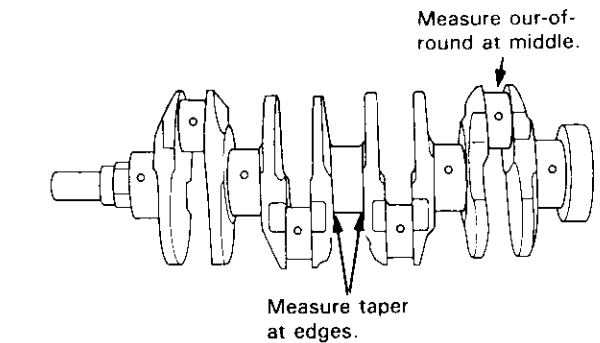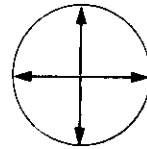

- Measure taper at edges of each rod and main journal.
- The difference between measurements on each journal must not be more than the service limit.

Journal Taper:
Standard (New): 0.0025 mm (0.0001 in) max.
Service Limit: 0.005 mm (0.0002 in)

Pistons

Inspection

1. Check the piston for distortion or cracks.

NOTE: If cylinder is bored, an oversized piston must be used.



2. Measure piston diameter at distance A from the bottom of the skirt.

A: 5 mm (0.2 in)

Piston Diameter:

Standard (New): 74.980 – 74.990 mm
(2.9520 – 2.9524 in)

Service Limit: 74.970 mm (2.9516 in)

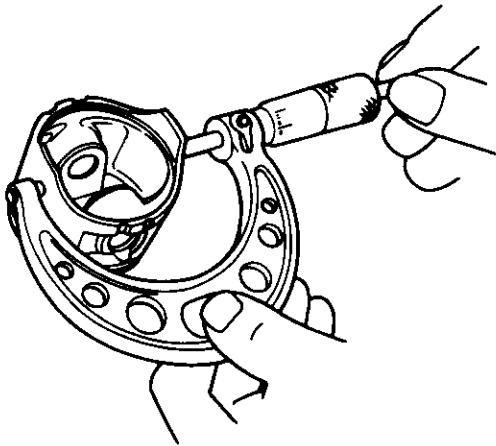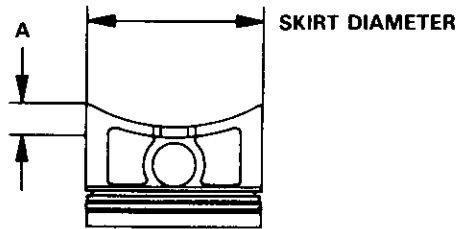


3. Calculate the difference between the cylinder bore diameter (see page 7-13) and piston diameter.

Piston-to-Cylinder Clearance

Standard (New): 0.010 – 0.040 mm
(0.0004 – 0.0016 in)

Service Limit: 0.05 mm (0.002 in)

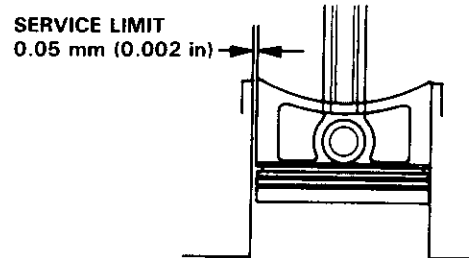

If the clearance is near or exceeds the service limit, inspect the piston and cylinder block for excessive wear.

Oversize Piston Diameter

0.25: 75.23 – 75.24 mm (2.9618 – 2.9622 in)




0.50: 75.48 – 75.49 mm (2.9716 – 2.9720 in)

Cylinder Block



Inspection

1. Measure wear and taper in directions X and Y at three levels in each cylinder as shown.

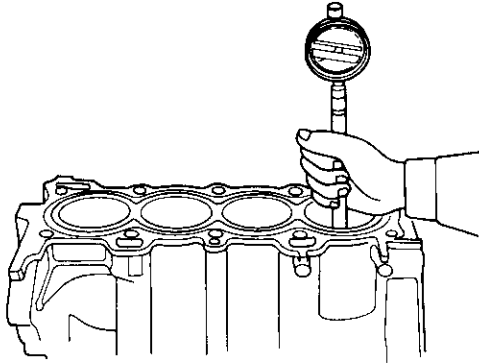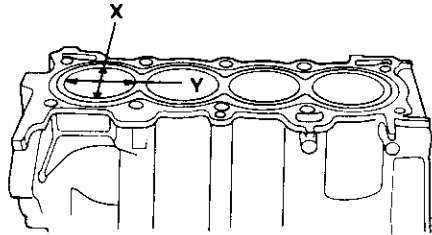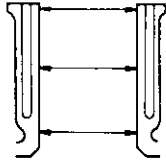

Cylinder Bore Size

Standard (New): 75.00 – 75.02 mm
(2.953 – 2.954 in)

Service Limit: 75.07 mm (2.956 in)

Oversize

0.25: 75.25 – 75.27 mm (2.9626 – 2.9634 in)

0.50: 75.50 – 75.52 mm (2.9724 – 2.9732 in)

Bore Taper

Limit: (Difference between first and third measurement) 0.05 mm (0.002 in)


- If measurements in any cylinder are beyond the Oversize Bore Service Limit, replace the block.
- If the block is to be rebored, refer to Piston Clearance Inspection (see page 7-12) after reboring.

NOTE: Scored or scratched cylinder bores must be honed.

Reboring Limit: 0.50 mm (0.020 in)

2. Check the top of the block for warpage. Measure along the edges and across the center as shown.

SURFACES TO BE MEASURED

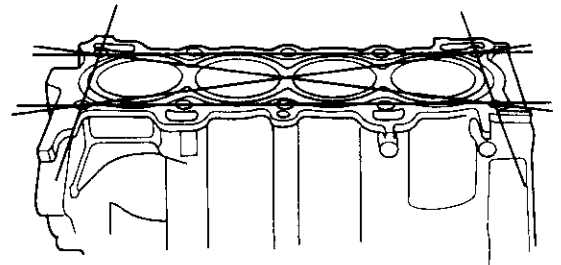


Engine Block Warpage:

Standard (New): 0.07 mm (0.003 in) max.

Service Limit: 0.10 mm (0.004 in)

PRECISION STRAIGHT EDGE

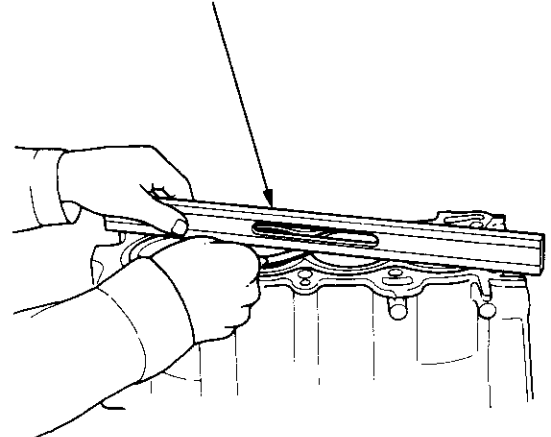


Bore Honing

1. Measure cylinder bores as shown on page 7-13. If the block is to be reused, hone the cylinders and remeasure the bores.
2. Hone cylinder bores with honing oil and a fine (400 grit) stone in a 60 degree cross-hatch pattern.

NOTE:

- Use only a rigid hone with 400 grit or finer stone such as Sunnen, Ammco, or equivalent.
- Do not use stones that are worn or broken.

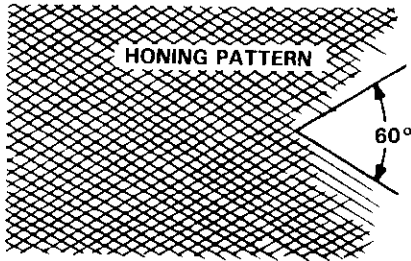


3. When honing is complete, thoroughly clean the engine block of all metal particles. Wash the cylinder bores with hot soapy water, then dry and oil immediately to prevent rusting.

NOTE: Never use solvent, it will only redistribute the grit on the cylinder walls.

4. If scoring or scratches are still present in cylinder bores after honing to the service limit, rebore the cylinder block.

NOTE: Some light vertical scoring and scratching is acceptable if it is not deep enough to catch your fingernail and does not run the full length of the bore.

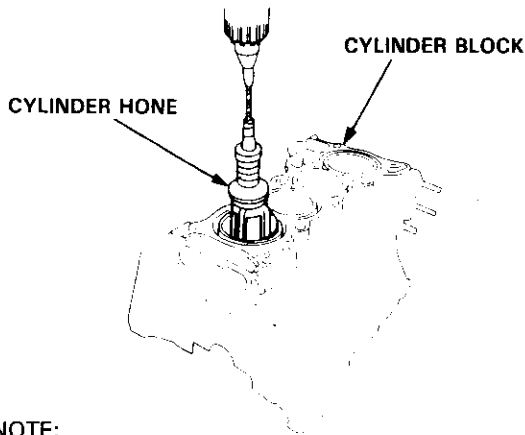


NOTE:


- After honing, clean the cylinder thoroughly with soapy water.
- Only a scored or scratched cylinder bore must be honed.

Removal

1. Assemble the special tool as shown.

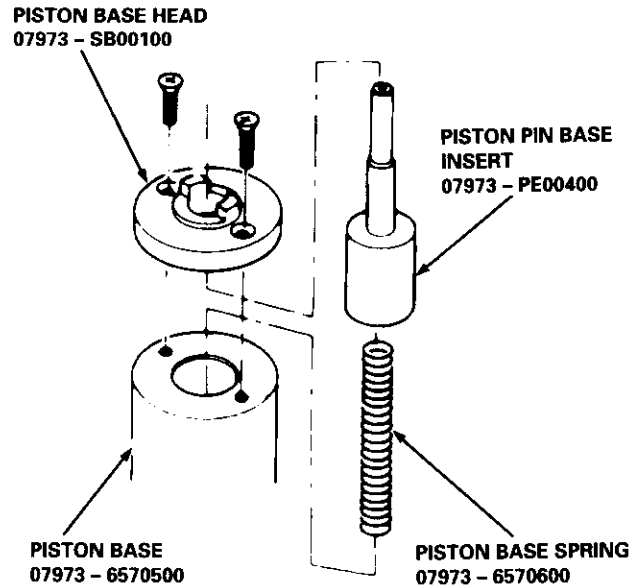

2. Assemble and adjust the length of the piston pin driver and shaft to 53 mm (2.1 in) as shown.

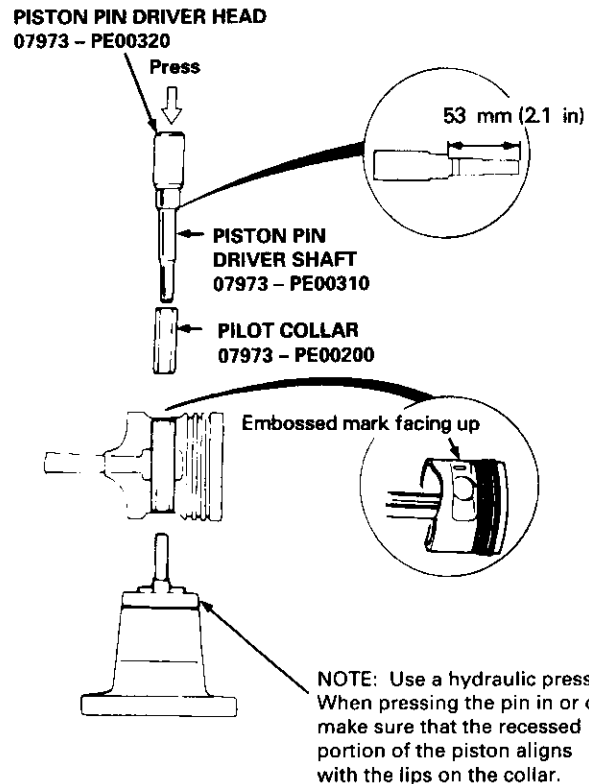

3. Place the piston on the special tool and press the pin out with the special tools and a hydraulic press.



Selection

Each rod falls into one of four tolerance ranges (from 0 to + 0.024 mm (0 to + 0.0009 in), in 0.006 mm (0.0002 in) increments) depending on the size of its big end bore. It's then stamped with a number (1, 2, 3, or 4) indicating the range.

You may find any combination of 1, 2, 3, or 4 in any engine.


Normal Bore Size: 48.0 mm (1.89 in)

NOTE:

- Reference numbers are for big end bore size and do NOT indicate the position of the rod in the engine.
- Inspect connecting rod for cracks and heat damage.

CONNECTING ROD BORE REFERENCE NUMBER

Half of the number is stamped on bearing cap, the other half on the connecting rod.

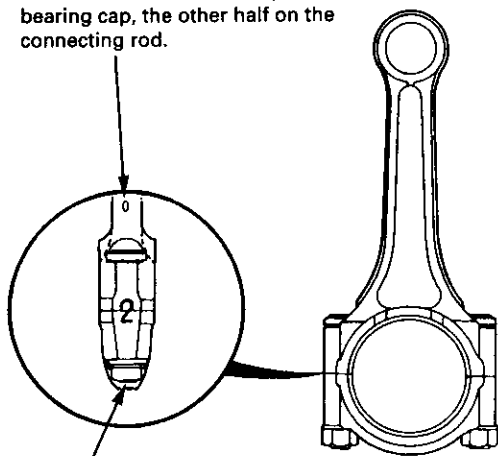


Inspect bolts and nuts for stress cracks.

Installation


1. Use a hydraulic press for installation.

- When pressing the pin in or out, be sure you position the recessed flat on the piston against the lugs on the base attachment.

The arrow must face the timing belt side of the engine and the connecting rod oil hole must face the rear of the engine.

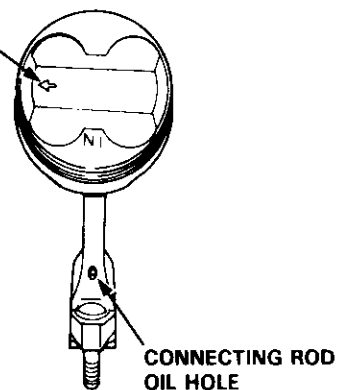

PISTON PIN DRIVER HEAD 07973-PE00320

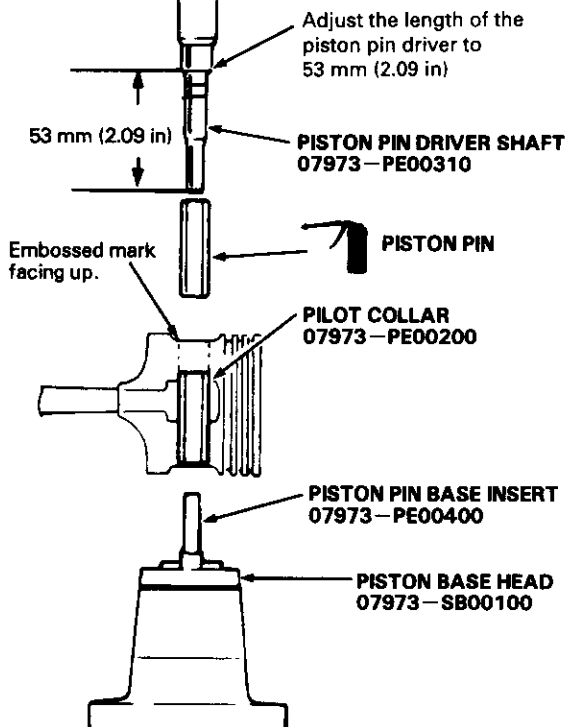

Piston Pins

Inspection


1. Measure the diameter of the piston pin.

Piston Pin Diameter:


Standard (New): 18.994 – 19.000 mm
(0.7478 – 0.7480 in)

Oversize: 18.997 – 19.003
(0.7479 – 0.7481 in)

NOTE: All replacement piston pins are oversize.

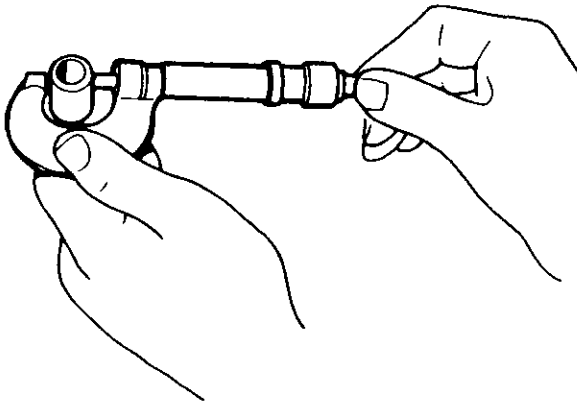

2. Zero the dial indicator to the piston pin diameter.

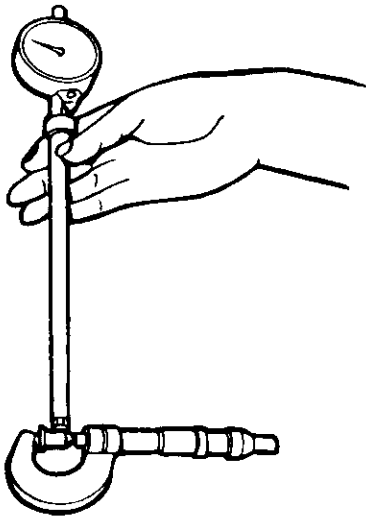


3. Measure the piston pin-to-piston clearance.

NOTE: Check the piston for distortion or cracks.

If the piston pin clearance is greater than 0.024 mm (0.0009 in), remeasure using an oversized piston pin.

Piston Pin-to-Piston Clearance:


Standard (New): 0.010 – 0.022 mm
(0.0004 – 0.0009 in)

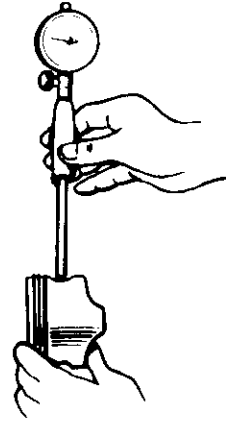

4. Check the difference between the piston pin diameter and the connecting rod small end diameter.

Piston Pin-to-Connecting Rod Interference:

Standard (New): 0.014 – 0.040 mm
(0.0006 – 0.0016 in)

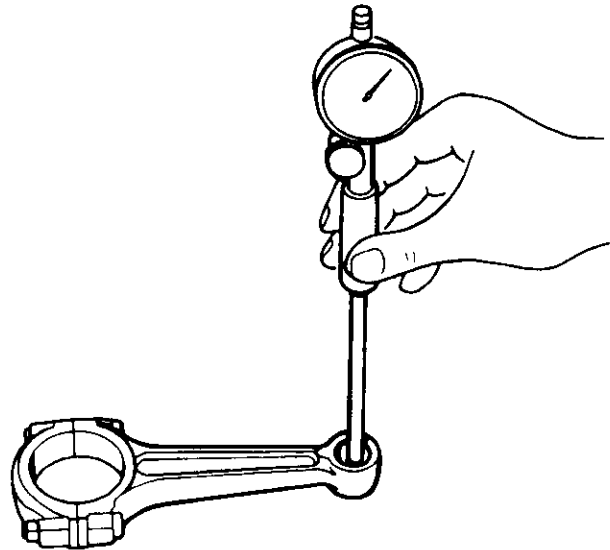

Piston Rings



End Gap

1. Using a piston, push a new ring into the cylinder bore 15 – 20 mm (0.6 – 0.8 in) from the bottom.
2. Measure the piston ring end-gap with a feeler gauge:
 - If the gap is too small, check to see if you have the proper rings for your engine.
 - If the gap is too large, recheck the cylinder bore diameter against the wear limits on page 7-13. If the bore is over the service limit, the cylinder block must be rebored.

Piston Ring End-Gap:

Top Ring

Standard (New): 0.15 – 0.30 mm
(0.006 – 0.012 in)

Service Limit: 0.60 mm (0.024 in)

Second Ring


Standard (New): 0.30 – 0.45 mm
(0.012 – 0.018 in)

Service Limit: 0.70 mm (0.028 in)

Oil Ring

Standard (New): 0.20 – 0.70 mm
(0.008 – 0.028 in)

Service Limit: 0.80 mm (0.031 in)

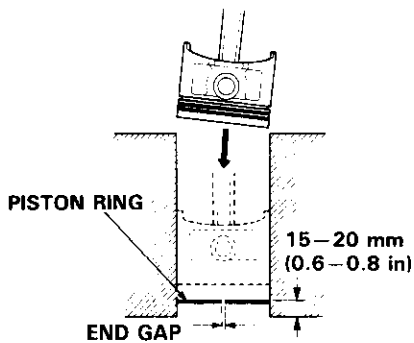

Replacement

1. Using a ring expander, remove the old piston rings.
2. Clean all ring grooves thoroughly.

NOTE:

- Use a squared-off broken ring or ring groove cleaner with blade to fit piston grooves.
- Top ring groove is 1.0 mm (0.039 in) wide.
- Second ring groove is 1.2 mm (0.047 in) wide.
- Oil ring groove is 2.8 mm (0.11 in) wide.
- File down the blade if necessary.

CAUTION: Do not use a wire brush to clean ring lands, or cut ring lands deeper with cleaning tool.

NOTE: If the piston is to be separated from the connecting rod, do not install new rings yet.

3. Install new rings in the proper sequence and position (see page 7-18).

NOTE: Do not reuse old piston rings.



Piston Rings

Ring-to-Groove Clearance

After installing a new set of rings, measure the ring-to-groove clearances:

Top Ring Clearance


Standard (New): 0.035 – 0.060 mm
(0.0014 – 0.0024 in)

Service Limit: 0.13 mm (0.005 in)

Second Ring Clearance


Standard (New): 0.030 – 0.055 mm
(0.0012 – 0.0022 in)

Service Limit: 0.13 mm (0.005 in)

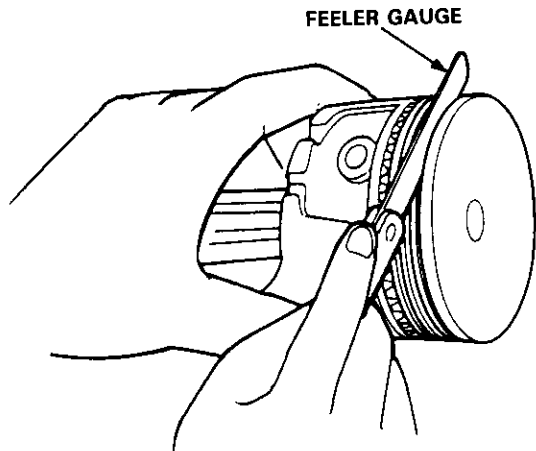


Alignment

1. Install the rings as shown.

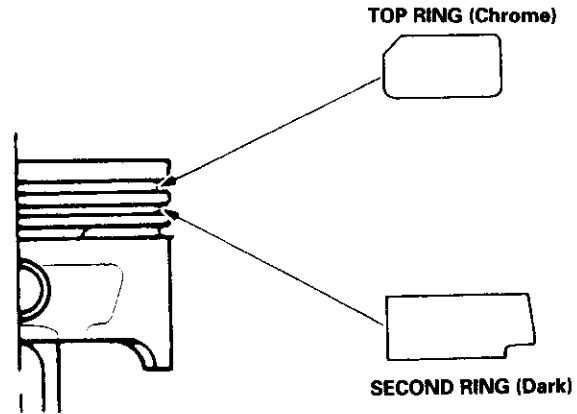

Piston Ring Dimensions:

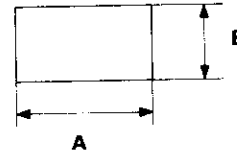

Top Ring (Standard):

A: 2.6 mm (0.10 in)


B: 1.0 mm (0.04 in)

Second Ring (Standard):

A: 3.0 mm (0.12 in)


B: 1.2 mm (0.05 in)

NOTE: The manufacturing marks must be facing upward.

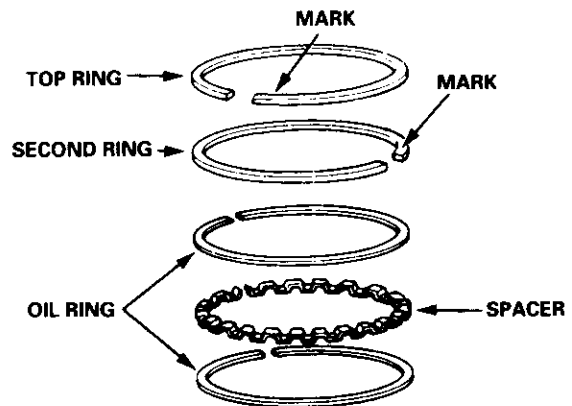



2. Rotate the rings in their grooves to make sure they do not bind.
3. Position the ring end gaps as shown:

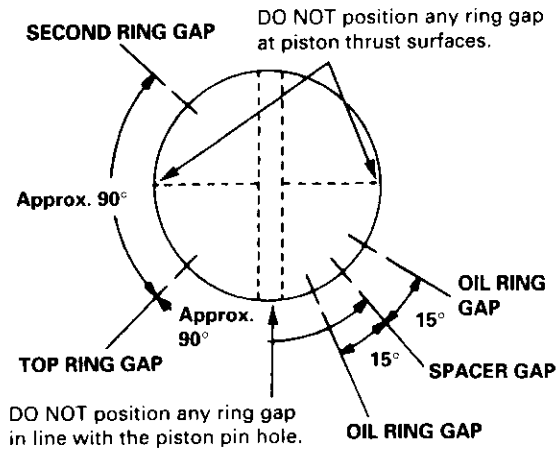


Installation

- The seal surface on the block should be dry. Apply a light coat of oil to the crankshaft and to the lip of the seal.


1. Drive the crankshaft oil seal into the right side cover using the special tools.

NOTE: Drive the crankshaft oil seal in squarely.

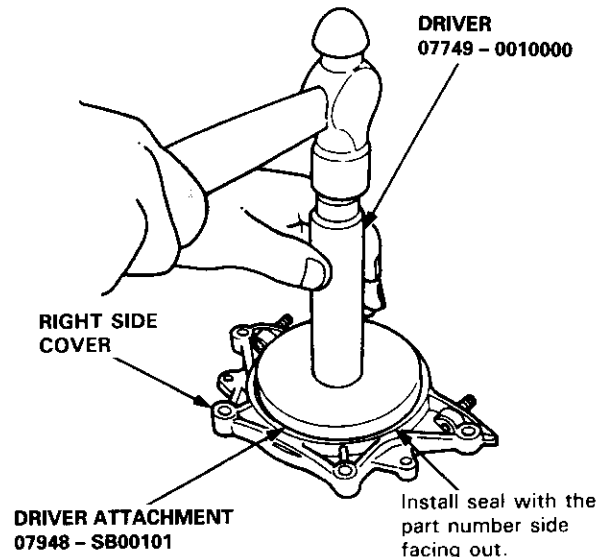


2. Confirm equal clearance all the way around with a feeler gauge.

Clearance: 0.5 - 0.8 mm (0.02 - 0.03 in)

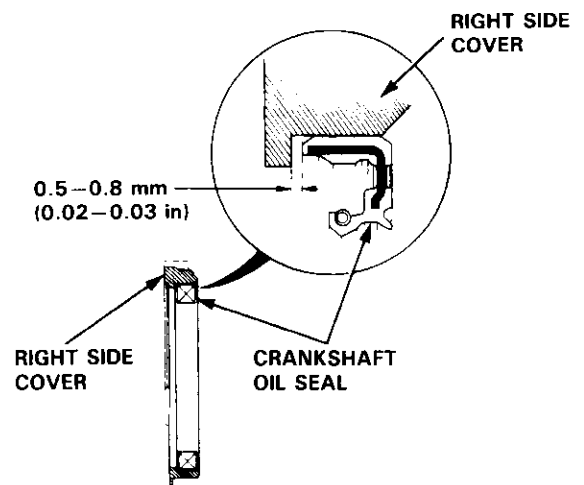

NOTE: Refer to pages 7-24 and 8-11 for installation of the oil pump side crankshaft oil seal.


Installation

 Before installing the pistons, apply a coat of engine oil to the ring grooves and cylinder bores.


- If the crankshaft is already installed:
 - Set the crankshaft to BDC for each cylinder.
 - Remove the connecting rod caps, and slip short sections of rubber hose over the threaded ends of the connecting rod bolts.
 - Install the ring compressor, check that the bearing is securely in place, then position the piston in the cylinder, and tap it in using the wooden handle of a hammer.
 - Stop after the ring compressor pops free, and check the connecting rod-to-crank journal alignment before pushing the piston into place.
 - Install the rod caps with bearings, and torque the nuts to:
31 N·m (3.2 kgf·m, 23 lbf·ft)
Apply engine oil to the bolt threads.

- If the crankshaft is not installed:
 - Remove the rod caps and bearings, install the ring compressor, then position the piston in the cylinder and tap it in using the wooden handle of a hammer.
 - Position all pistons at top dead center.


The arrow must face the timing belt side of the engine.

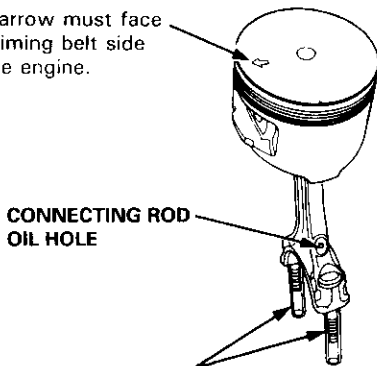


NOTE: Maintain downward force on the ring compressor to prevent rings from expanding before entering the cylinder bore.

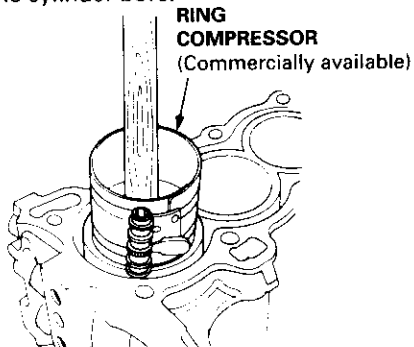

Installation

 Before installing the crankshaft, apply a coat of engine oil to the main bearings and rod bearings.

- Install the thrust washers in the No. 4 journal of the cylinder block.
- Insert bearing halves in the cylinder block and connecting rods.
- Hold the crankshaft so the rod journals for cylinders No. 2 and No. 3 are straight down.
- Lower the crankshaft into the block, seating the rod journals into connecting rods No. 2, No. 3. Install the rod caps and nuts finger-tight.

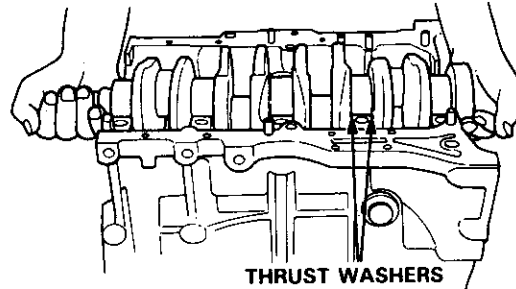

THRUST WASHERS
Grooved sides face outward.

- Rotate the crankshaft clockwise, seat journals into connecting rods No. 1 and No. 4. Install the rod caps and nuts finger-tight.


NOTE: Install the caps so the bearing recess is on the same side as the recess in the rod.

- Check rod bearing clearance with plastigage (see page 7-8), then torque the capnuts.

Torque:
31 N·m (3.2 kgf·m, 23 lbf·ft)
Apply engine oil to the bolt threads.

NOTE: Reference numbers on the connecting rod are for big-end bore tolerance and do not indicate the position of the piston in the engine.

Line up the marks when installing the connecting rod cap.

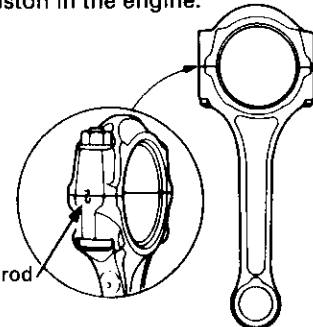




7. Install the main bearing caps.
Check clearances with plastigage (see page 7-7), then tighten the bearing cap bolts in 2 steps.

First step: 25 N·m (2.5 kgf·m, 18 lbf·ft)

Second step: 51 N·m (5.2 kgf·m, 38 lbf·ft)

NOTE: Coat the thrust washer surfaces and bolt threads with oil.

MAIN BEARING CAP BOLTS TIGHTENING SEQUENCE


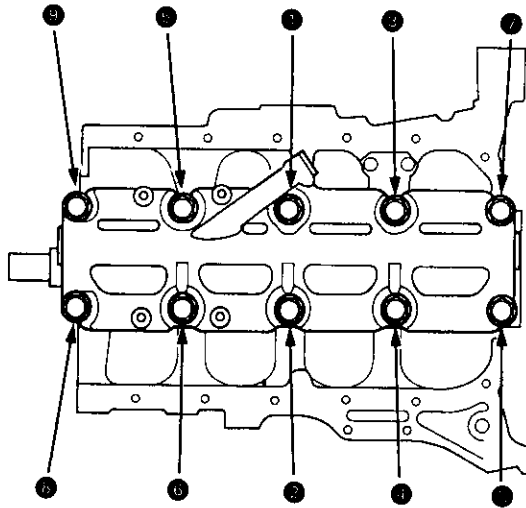


CAUTION: Whenever any crankshaft bearing or connecting rod bearing is replaced, it is necessary after reassembly to run the engine at idling speed until it reaches normal operating temperature, then continue to run it for approximately 15 minutes.

8. Apply liquid gasket to the block mating surface of the right side cover, then install it on the cylinder block.

NOTE:

- Use liquid gasket, part No. 08718 - 0001 or 08718 - 0003.
- Check that the mating surfaces are clean and dry before applying liquid gasket.
- Apply liquid gasket evenly, being careful to cover all the mating surface.
- To prevent oil leakage, apply liquid gasket to the inner threads of the bolt holes.
- Do not install the parts if five minutes or more have elapsed since applying the liquid gasket. Instead reapply liquid gasket after removing the old residue.
- After assembly, wait at least 30 minutes before filling the engine with oil.

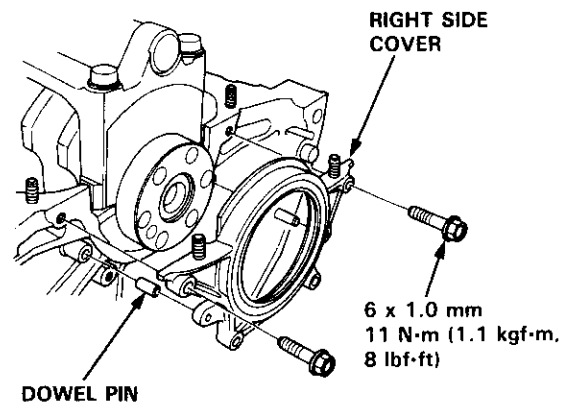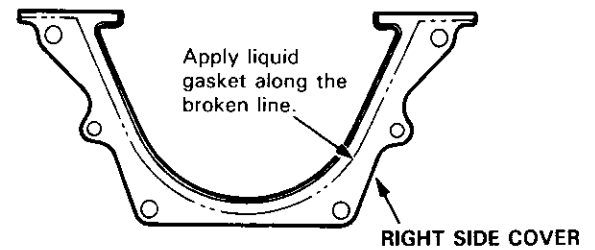


(cont'd)

Installation (cont'd)

9. Apply liquid gasket to the oil pump mating surface of the block, then install the oil pump on the cylinder block.

Apply grease to the lips of the oil seals.

Then, install the oil pump while aligning the inner rotor with the crankshaft. When the pump is in place, clean any excess grease off the crankshaft, then check that the oil seal lips are not distorted.

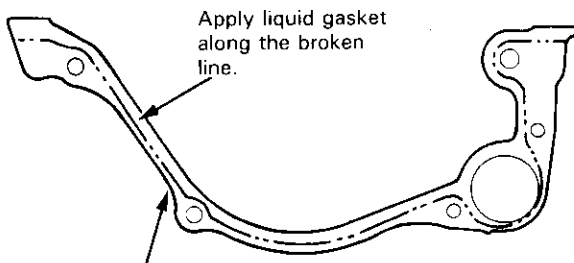


OIL PUMP HOUSING

NOTE:

- Apply a light coat of oil to the crankshaft and to the lip of the seal.
- Use new O-rings and apply oil when installing them.

10. Install the oil pump and oil screen.

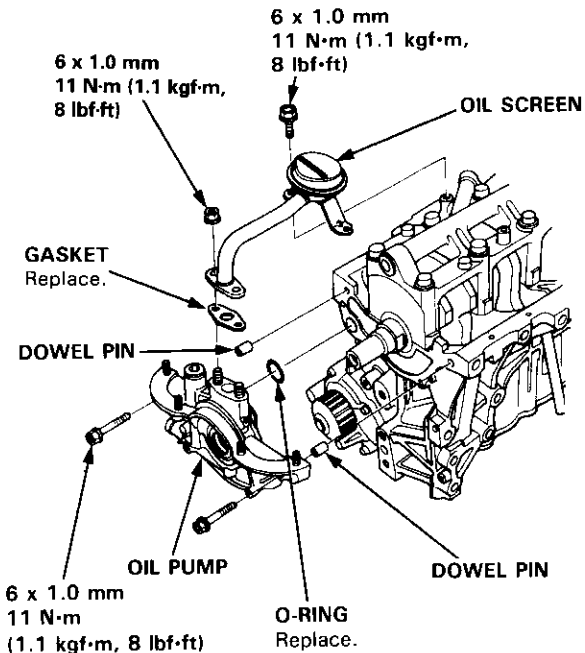


Installation

D16Y7 engine:

1. Apply liquid gasket on the oil pump and right side cover mating areas as shown below.

NOTE:

- Use liquid gasket, part No. 08718 - 0001 or 08718 - 0003.
- Check that the mating surfaces are clean and dry before applying liquid gasket.
- Apply liquid gasket as an even bead, centered between the edges of the mating surface.
- To prevent oil leakage, apply liquid gasket to the inner threads of the bolt holes.
- Do not install the parts if five minutes or more have elapsed since applying the liquid gasket. Instead reapply liquid gasket after removing the old residue.
- After assembly, wait at least 30 minutes before filling the engine with oil.

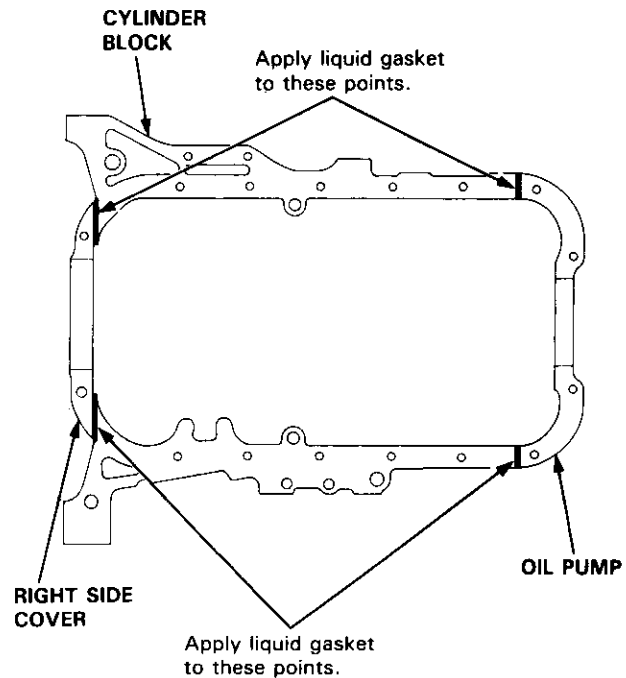





2. Install the oil pan gasket and oil pan.

NOTE:

- Use a new oil pan gasket.
- Install the oil pan no more than five minutes after applying liquid gasket.

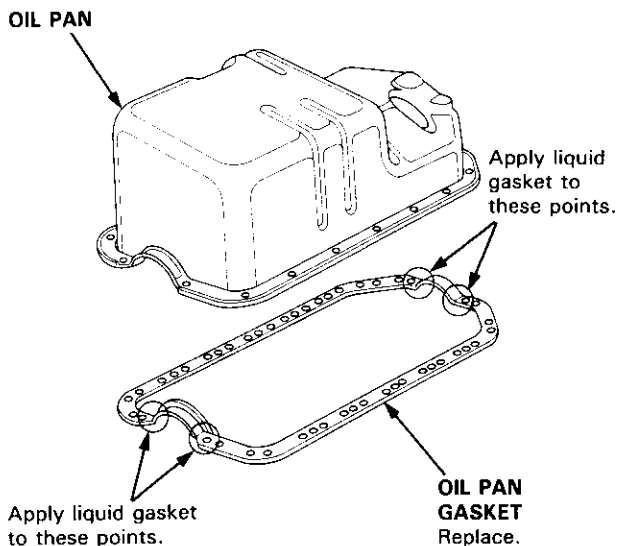

3. Tighten the bolts and nuts finger tight at six points as shown below.

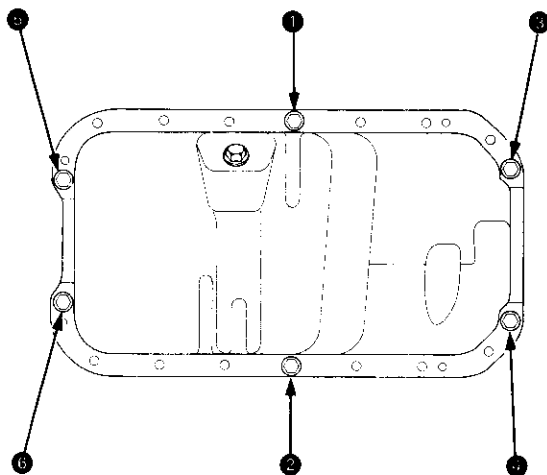

4. Tighten all bolts and nuts, starting from bolt ①, clockwise in three steps.

NOTE: Excessive tightening can cause distortion of oil pan gasket and oil leakage.


Torque: 12 N·m (1.2 kgf·m, 8.7 lbf·ft)

D16Y5, D16Y8 engines:

1. Install the oil pan gasket on the oil pan.

NOTE:


- Use liquid gasket, part No. 08718 - 0001 or 08718 - 0003.
- Check that the mating surfaces are clean and dry before applying liquid gasket.
- Apply liquid gasket as an even bead, centered between the edges of the mating surface.
- To prevent oil leakage apply liquid gasket to the inner threads of the bolt holes.
- Do not install the parts if five minutes or more have elapsed since applying the liquid gasket. Instead, reapply liquid gasket after removing the old residue.
- After assembly, wait at least 30 minutes before filling the engine with oil.

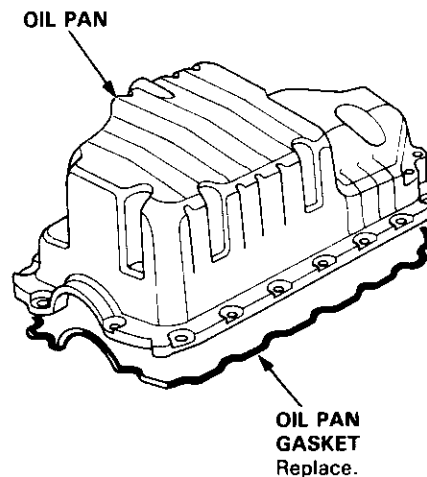


(cont'd)

Installation (cont'd)

2. Apply liquid gasket to the block mating surfaces, then install the oil pan. Apply liquid gasket to the shaded areas.

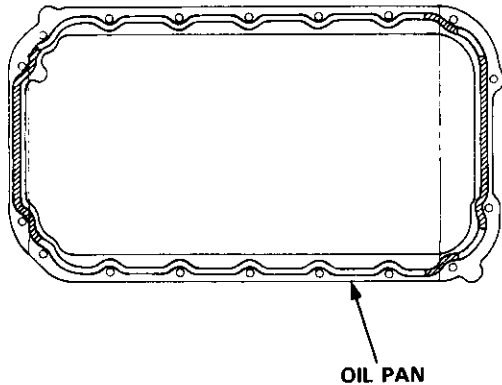

3. Tighten the nuts finger-tight at six points as shown below.

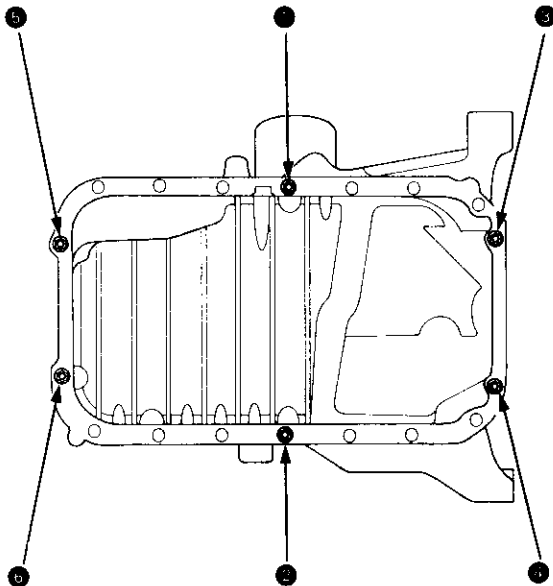

4. Tighten all bolts and nuts, starting from nut ①, clockwise in three steps.


NOTE: Excessive tightening can cause distortion of oil pan gasket and oil leakage.

Torque: 12 N·m (1.2 kgf·m, 8.7 lbf·ft)

Installation

NOTE:

- Engine removal is not required.
 - The crankshaft oil seal housing should be dry. Apply a light coat of grease to the crankshaft and to the lips of the seals.
1. Using the special tool, drive in the timing pulley-end seal until the driver bottoms against the oil pump. When the seal is in place, clean any excess grease off the crankshaft and check that the oil seal lip is not distorted.

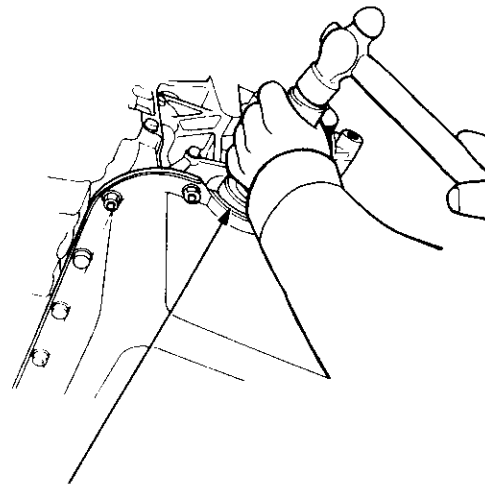


SEAL DRIVER
07947-SB00200
Install seal with the part number side facing out.



2. Measure the flywheel-end seal thickness and the oil seal housing depth. Using the special tool, drive the flywheel-end seal into the rear cover to the point where the clearance between the bottom of the oil seal and the right side cover is 0.5 – 0.8 mm (0.02 – 0.03 in) (see page 7-19).

NOTE: Align the hole in the driver attachment with the pin on the crankshaft.

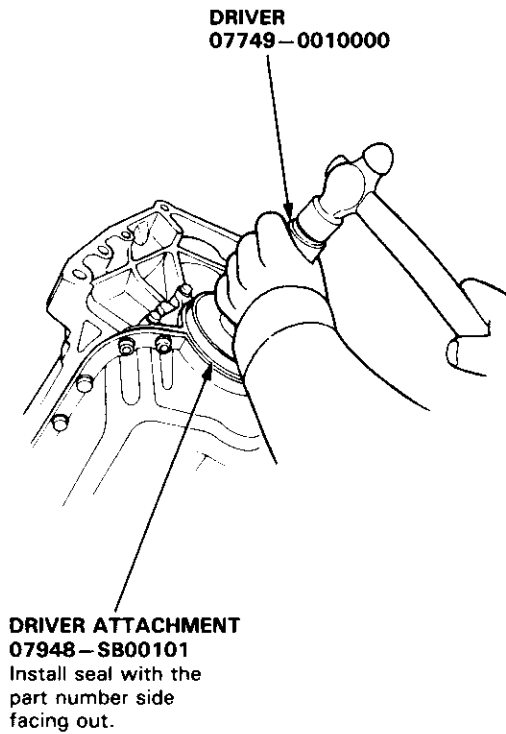

Engine Lubrication

Special Tools	8-2
Illustrated Index	8-3
Engine Oil	
Inspection	8-5
Replacement	8-5
Oil Filter	
Replacement	8-7
Oil Pressure	
Testing	8-8
Oil Pump	
Overhaul	8-9
Removal/Inspection/Installation	8-10



Special Tools


Ref. No.	Tool Number	Description	Qty	Page Reference
①	07746 - 0010400	Attachment, 52 x 55 mm	1	8-12
②	07749 - 0010000	Driver	1	8-12
③	07912 - 6110001	Oil Filter Wrench	1	8-7



①



②

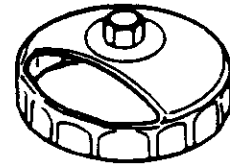

③

Illustrated Index



NOTE:

- Use new O-rings when reassembling.
- Apply oil to O-rings before installation.
- Use liquid gasket, Part No. 08718 - 0001 or 08718 - 0003.
- Clean the oil pan gasket mating surfaces before installing.
- Apply liquid gasket to the recesses of the oil pan gasket (see page 7-22).

CAUTION: Do not overtighten the drain bolt.


ENGINE OIL PRESSURE SWITCH

18 N-m (1.8 kgf-m, 13 lbf-ft)
 1/8 in. BSPT (British Standard Pipe Taper)
 28 threads/inch. Use proper liquid sealant.

D16Y7 engine:

OIL PUMP

Overhaul, page 8-9
 Inspection, page 8-10
 Apply liquid gasket to the mating surface of the block.

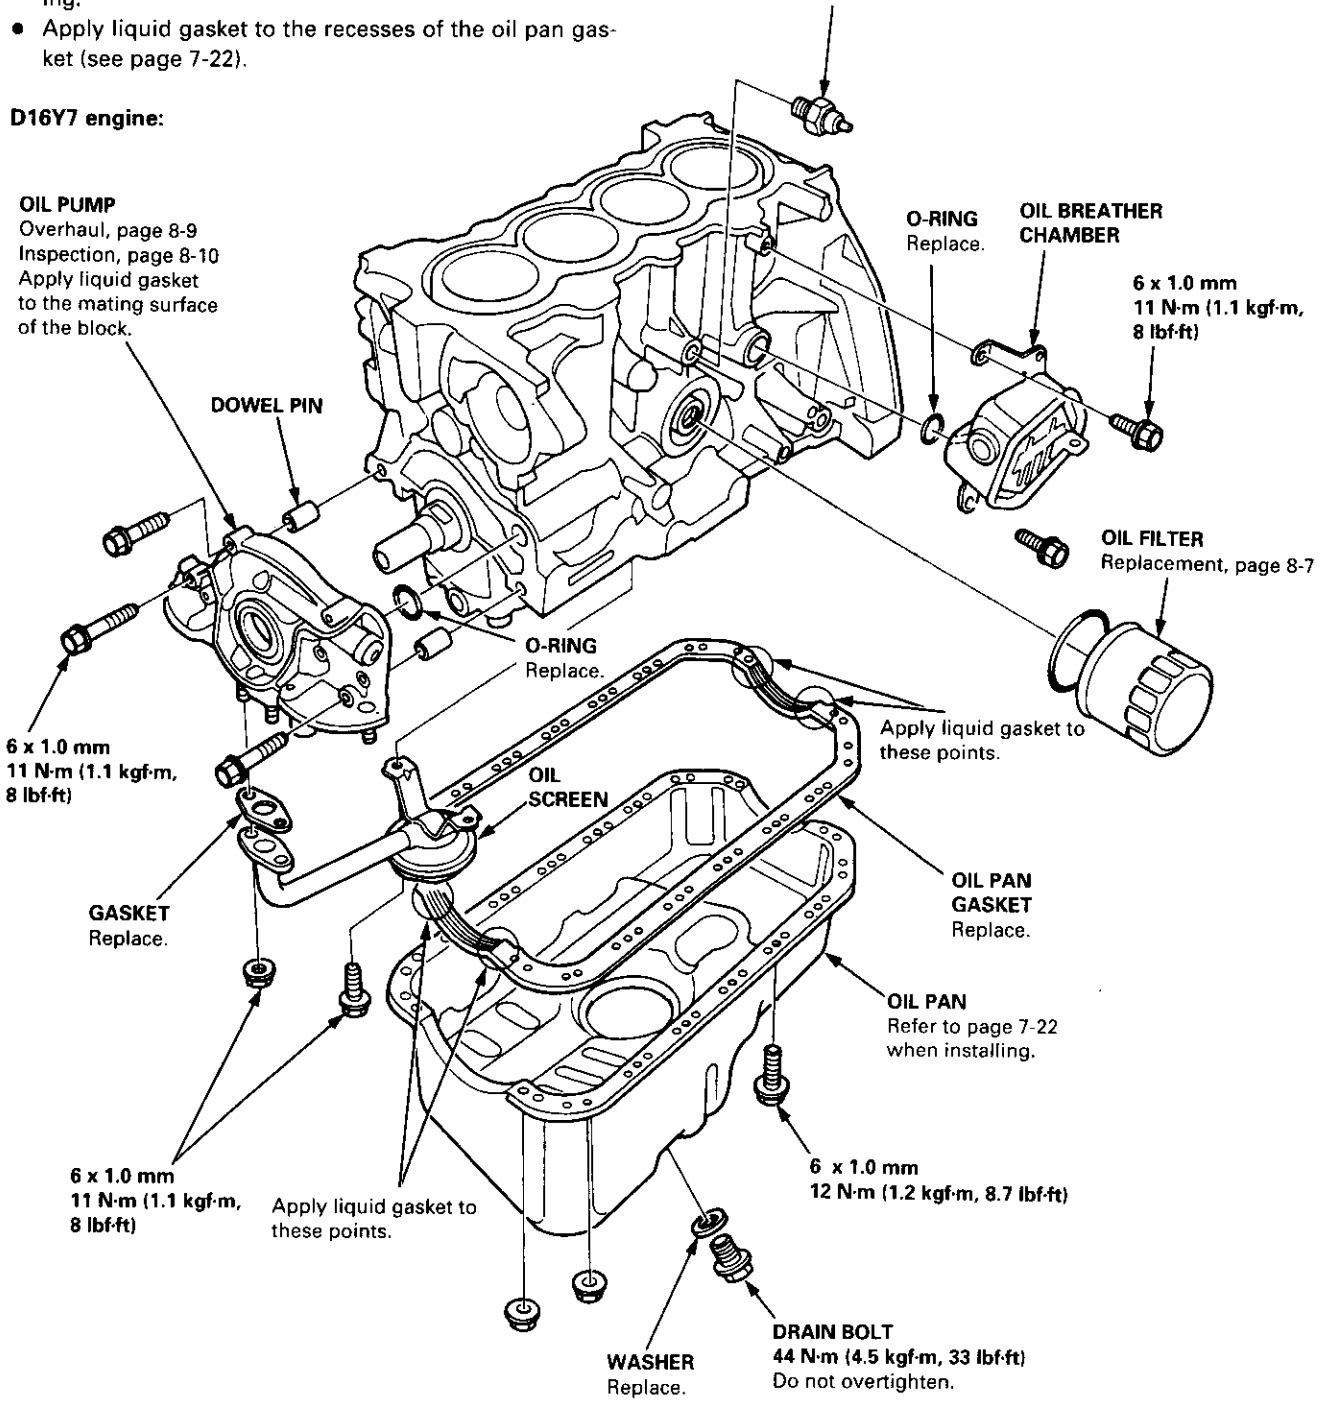

6 x 1.0 mm
 11 N-m (1.1 kgf-m, 8 lbf-ft)

GASKET
 Replace.

6 x 1.0 mm
 11 N-m (1.1 kgf-m, 8 lbf-ft)

Apply liquid gasket to these points.

O-RING
 Replace.

OIL SCREEN

OIL PAN GASKET
 Replace.

OIL PAN
 Refer to page 7-22 when installing.

6 x 1.0 mm
 12 N-m (1.2 kgf-m, 8.7 lbf-ft)

WASHER
 Replace.

DRAIN BOLT
 44 N-m (4.5 kgf-m, 33 lbf-ft)
 Do not overtighten.

O-RING
 Replace.

OIL BREATHER CHAMBER

6 x 1.0 mm
 11 N-m (1.1 kgf-m, 8 lbf-ft)

OIL FILTER
 Replacement, page 8-7

Apply liquid gasket to these points.

(cont'd)

Illustrated Index


(cont'd)

NOTE:

- Use new O-rings when reassembling.
- Apply oil to O-rings before installation.
- Use liquid gasket, Part No. 08718 - 0001 or 08718 - 0003.
- Clean the oil pan gasket mating surfaces before installing.

CAUTION: Do not overtighten the drain bolt.

D16Y5, D16Y8 engines:

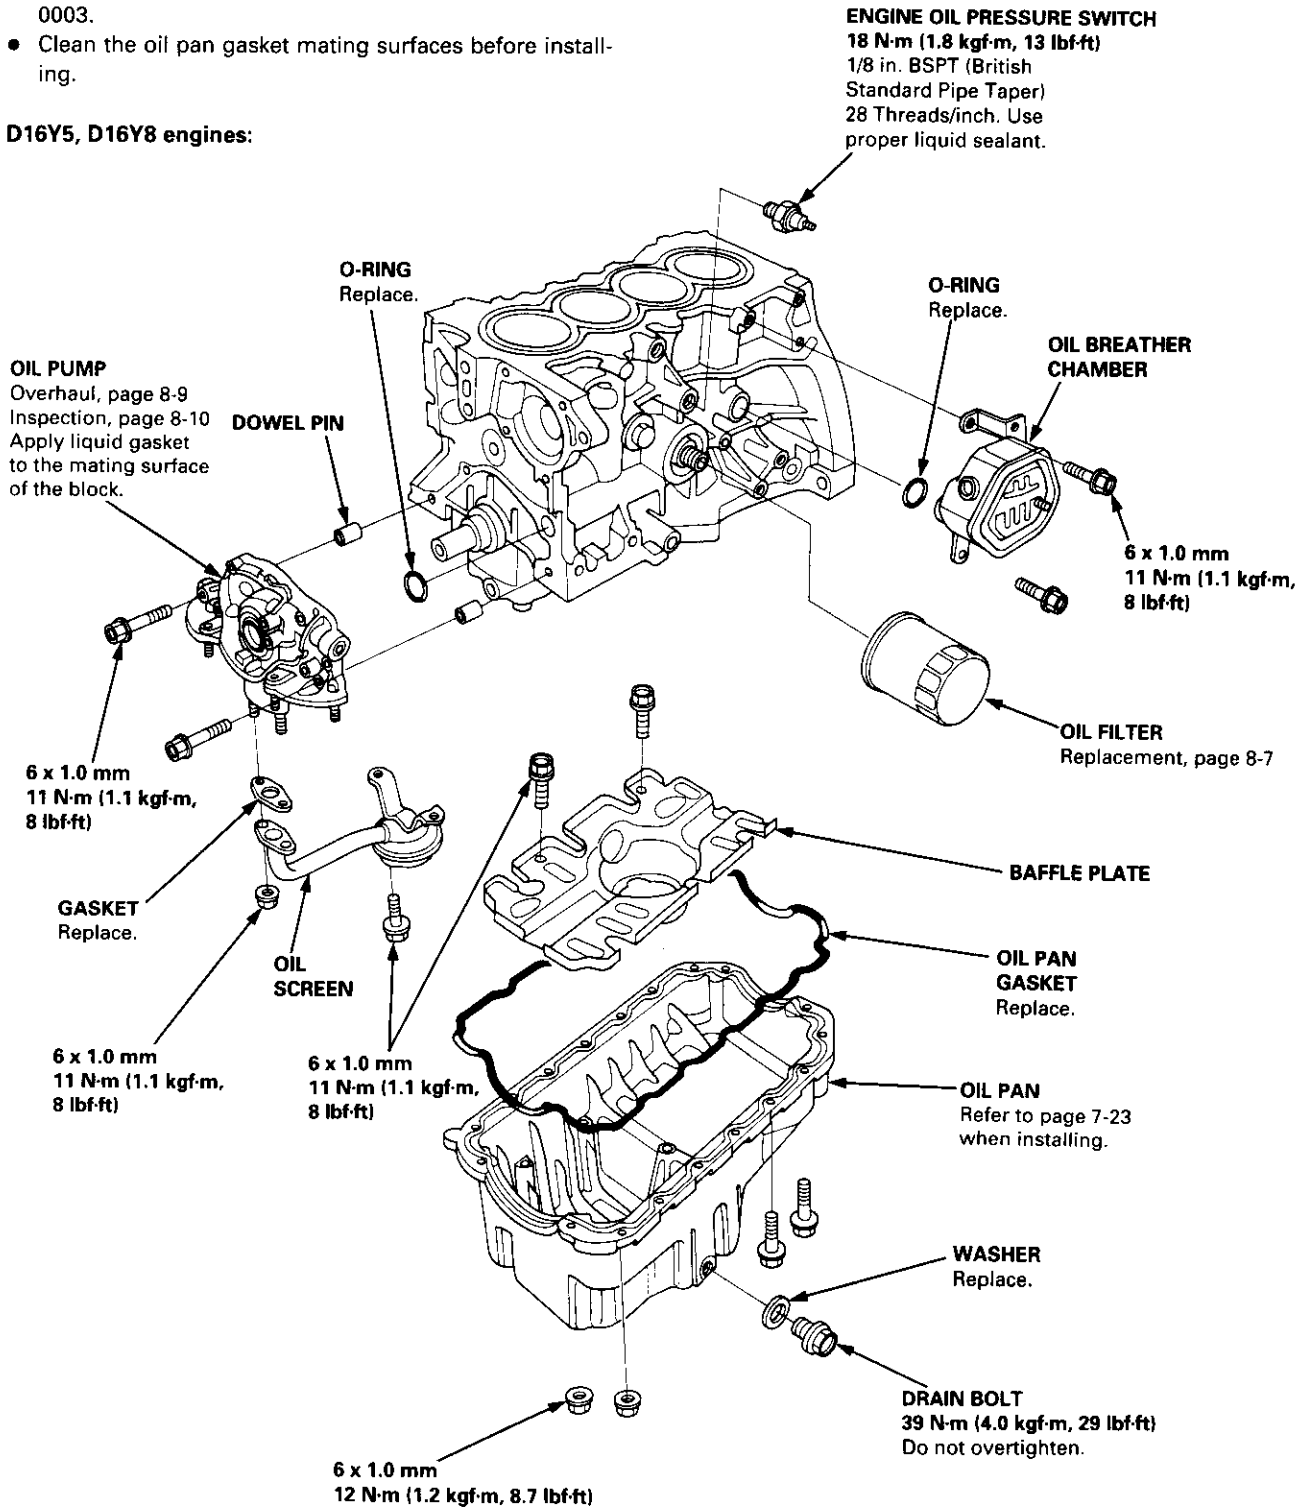


Engine Oil



Inspection

1. Park the vehicle on level ground, and turn off the engine. Allow the oil a few minutes to drain back into the oil pan so the dipstick will show the actual level.
2. Make certain that the oil level indicated on the dipstick is between the upper and lower marks.

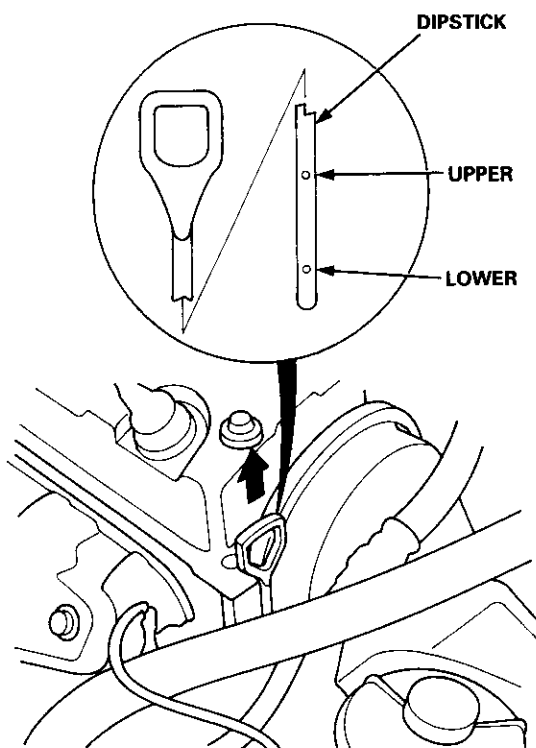

3. If the level has dropped close to the lower mark, add oil until it reaches the upper mark.


CAUTION: Insert the dipstick carefully to avoid bending it.

Replacement


CAUTION: Remove the drain bolt carefully while the engine is hot; the hot oil may cause scalding.

1. Warm up the engine.
2. Drain the engine oil.

D16Y7 engine:

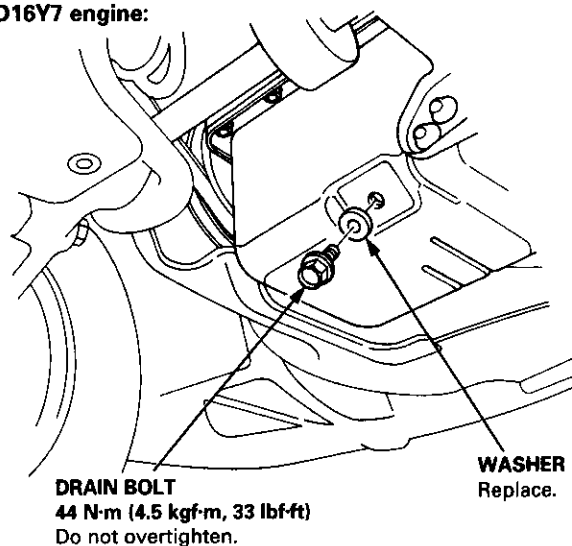

D16Y5, D16Y8 engines:

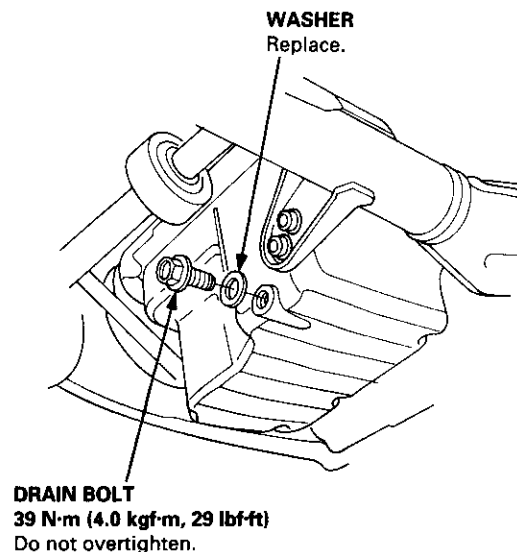

(cont'd)

Engine Oil

Replacement (cont'd)


- Reinstall the drain bolt with a new washer, and refill the engine with the recommended oil.

Requirement	API Service Grade: Use an "Energy Conserving" SJ grade oil or an "Energy Conserving II" SH grade oil, SAE 5W - 30 preferred. You can also use an oil that bears the API CERTIFICATION mark.
Capacity	D16Y7 engine: 3.6 l (3.8 US qt, 3.2 Imp qt) at change, including filter. 3.3 l (3.5 US qt, 2.9 Imp qt) at change, without filter. 4.3 l (4.5 US qt, 3.8 Imp qt) after engine overhaul. D16Y5, D16Y8 engines: 3.3 l (3.5 US qt, 2.9 Imp qt) at change, including filter. 3.0 l (3.2 US qt, 2.6 Imp qt) at change, without filter. 3.7 l (3.9 US qt, 3.3 Imp qt) after engine overhaul.
Change	Every 7,500 miles (12,000 km) or 12 months (Normal Conditions). Every 3,750 miles (6,000 km) or 6 months (Severe Conditions).

NOTE: Under normal conditions, the oil filter should be replaced at every other oil change.

Under severe conditions, the oil filter should be replaced at each oil change.


The numbers in the middle of the API Service label tell you the oil's SAE viscosity or weight. Select the oil for your car according to this chart:

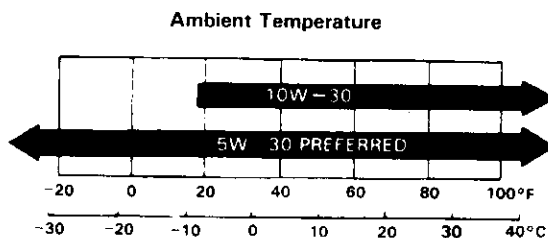

An oil with a viscosity of 5W - 30 is preferred for improved fuel economy and year-round protection in the car. You may use a 10W - 30 oil if the climate in your area is limited to the temperature range shown on the chart.



API CERTIFICATION MARK

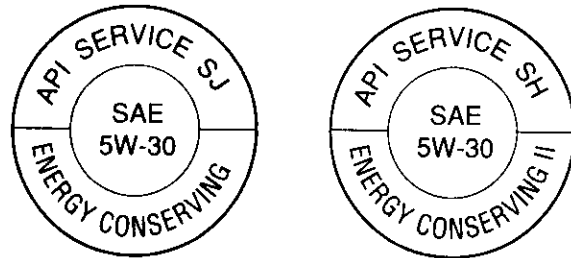

API SERVICE LABEL

- Fill the engine with oil up to the specified level, run the engine for more than three minutes, then check for oil leakage.




Replacement

⚠ WARNING

- After the engine has been run, the exhaust pipe will be hot; be careful when working around the exhaust pipe.
- Be careful when loosening the drain bolt while the engine is hot. Burns can result because the oil temperature is very high.

1. Remove the oil filter with the oil filter wrench.
2. Inspect the threads and rubber seal on the new filter. Wipe off the seat on the engine block, then apply a light coat of oil to the new filter's rubber seal.


NOTE: Use only filters with a built-in bypass system.

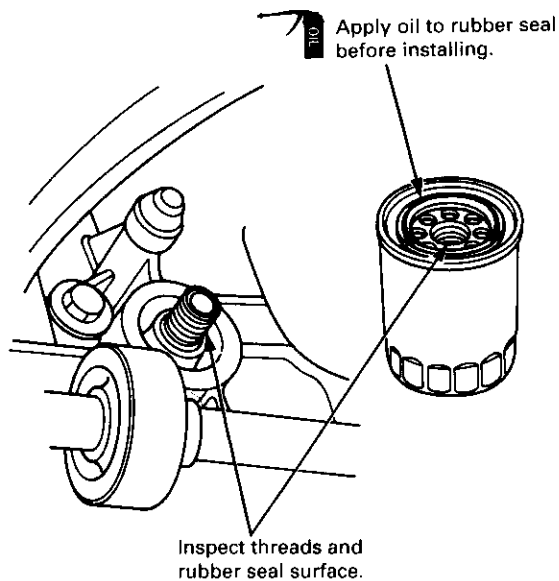

3. Install the oil filter by hand.
4. After the rubber seal seats, tighten the oil filter clockwise with the oil filter wrench.

Tighten: 7/8 turn clockwise.

Tightening torque: 22 N-m (2.2 kgf-m, 16 lbf-ft)

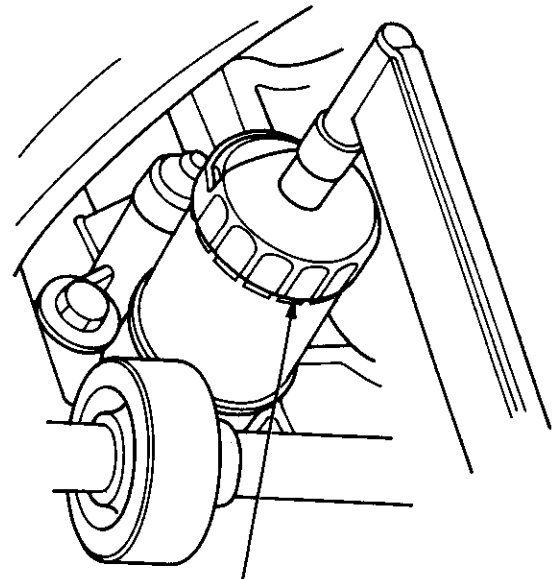


OIL FILTER WRENCH
07912 - 6110001

(cont'd)

Replacement (cont'd)

Use this procedure to tighten the filter if eight numbers (1 to 8) are printed on the surface of the filter.

- 1) Make a mark on the oil filter base under the number that shows at the bottom of the filter when the rubber seal is seated.
- 2) Tighten the filter by turning it clockwise seven numbers from the marked point. For example, if a mark is made under the number 2 when the rubber seal is seated, the filter should be tightened until the number 1 comes up to the marked point.

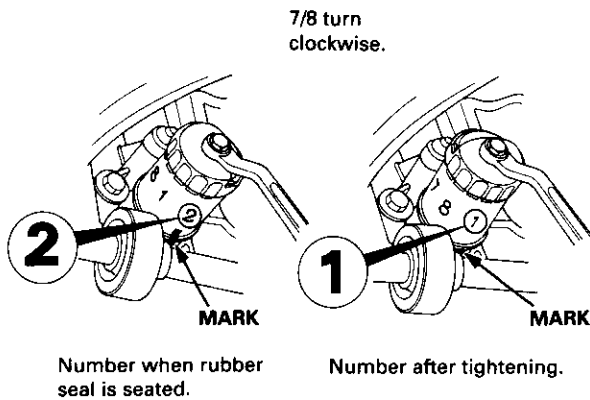

Number when rubber seal is seated	1	2	3	4	5	6	7	8
Number after tightening	8	1	2	3	4	5	6	7

CAUTION: Using any procedure other than those shown could result in serious engine damage due to oil leakage.


5. After installation, fill the engine with oil up to the specified level, run the engine for more than three minutes, then check for oil leakage.

Testing

If the oil pressure warning light stays on with the engine running, check the engine oil level. If the oil level is correct:

1. Connect a tachometer.
2. Remove the engine oil pressure switch, and install an oil pressure gauge.

ENGINE OIL PRESSURE SWITCH MOUNTING HOLE

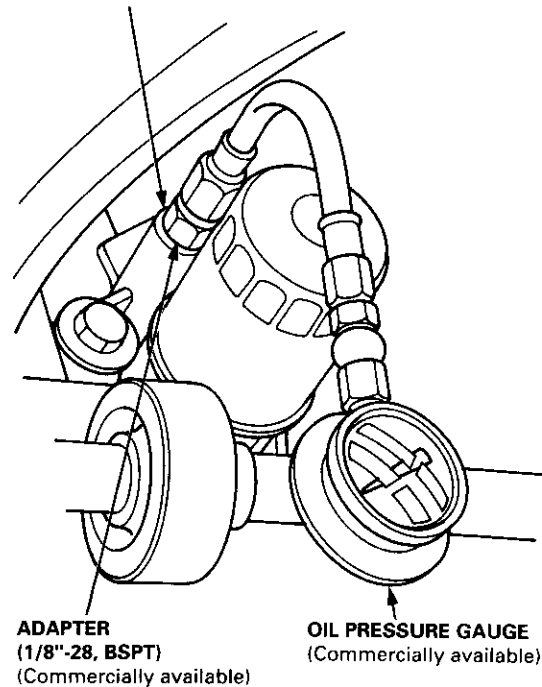

3. Start the engine. Shut it off immediately if the gauge registers no oil pressure. Repair the problem before continuing.
4. Allow the engine to reach operating temperature (fan comes on at least twice). The pressure should be:

Engine Oil Temperature: 176°F (80°C)

Engine Oil Pressure:

At Idle: 69 kPa (0.7 kgf/cm², 10 psi) minimum

At 3,000 rpm: 340 kPa (3.5 kgf/cm², 50 psi) minimum

- If oil pressure is within specifications, replace the oil pressure switch and recheck.
- If oil pressure is NOT within specifications, inspect the oil pump (see page 8-10).


Oil Pump



Overhaul

NOTE:


- Use new O-rings when reassembling.
- Apply oil to O-rings before installation.
- Use liquid gasket, Part No. 08718 - 0001 or 08718 - 0003.
- The rotors must be installed to the same direction.
- After reassembly, check that the rotors move without binding.

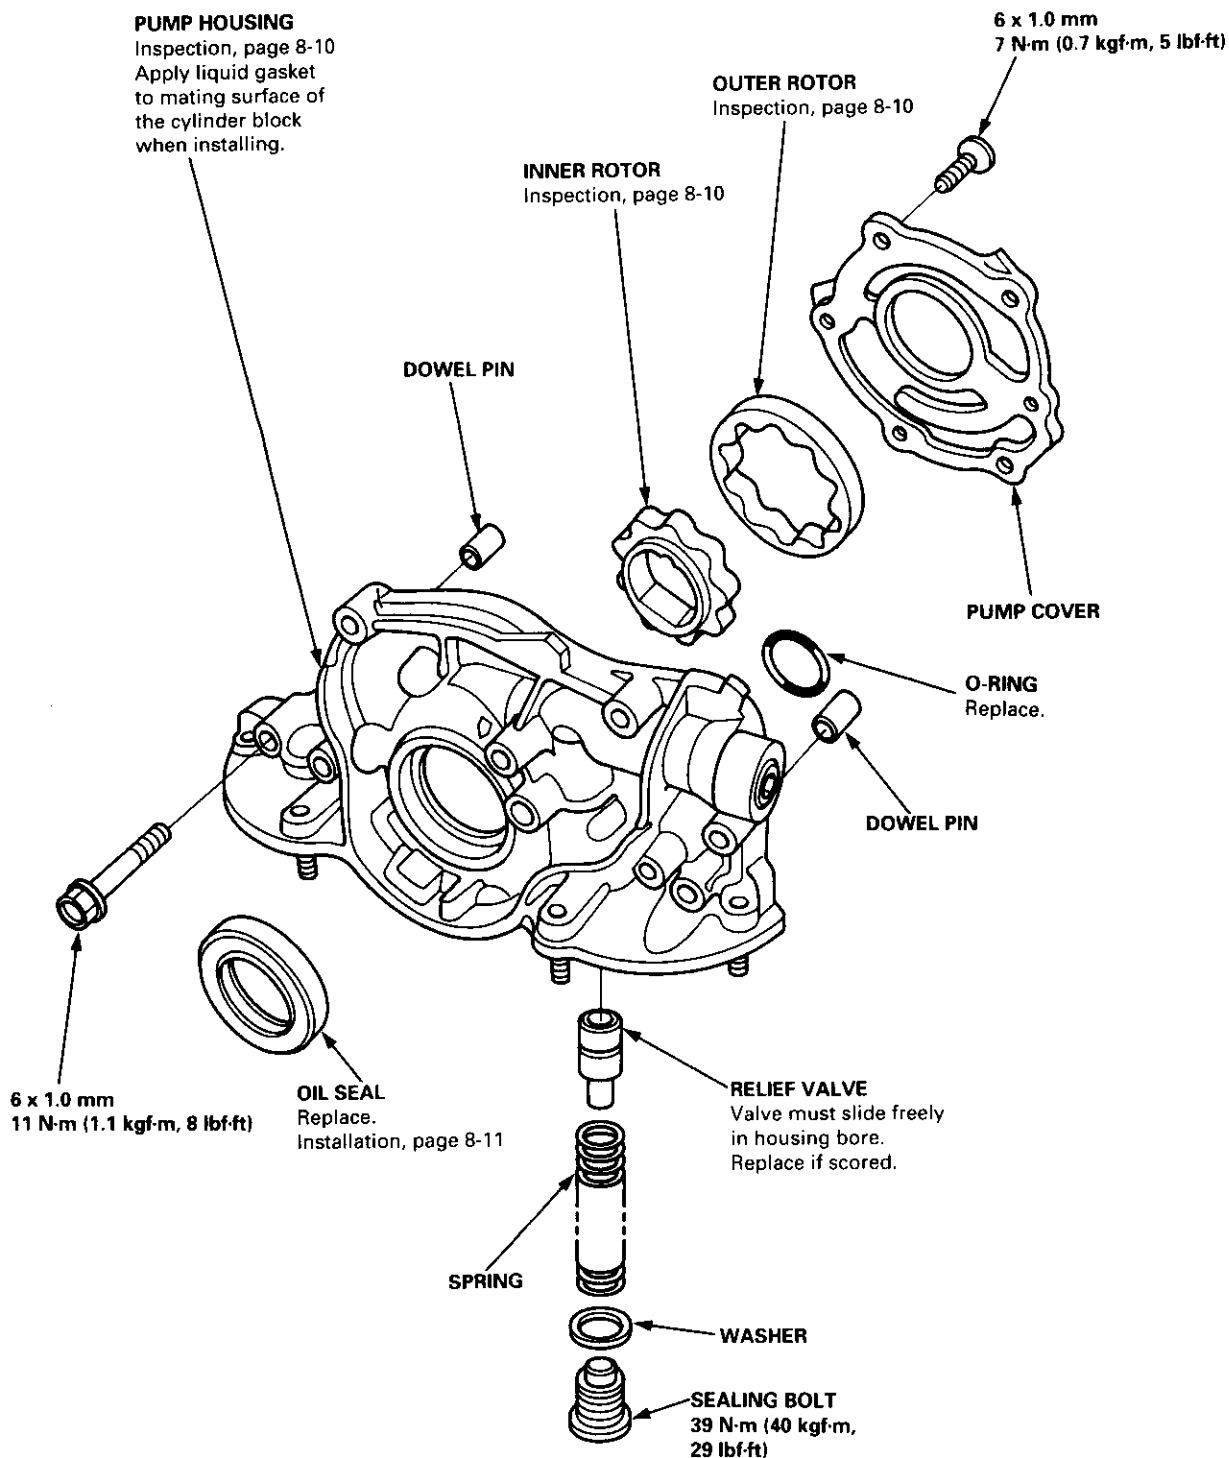

Oil Pump

Removal/Inspection/Installation

1. Drain the engine oil.
2. Turn the crankshaft and align the white groove on the crankshaft pulley with the pointer on the lower cover.
3. Remove the cylinder head cover and upper cover.
4. Remove the power steering pump belt, air conditioner belt and the alternator belt.
5. Remove the crankshaft pulley and remove the lower cover.
6. Remove the timing belt.
7. Remove the drive pulley.
8. Remove the oil pan and oil screen.

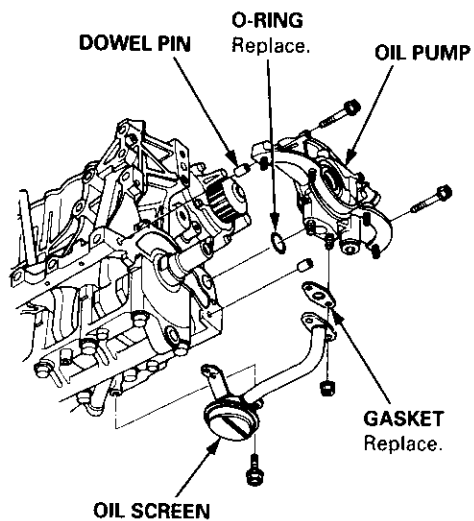

9. Remove the oil pump.

10. Remove the screws from the pump housing, then separate the housing and cover.
11. Check the inner-to-outer rotor radial clearance on the pump rotor. If the inner-to-outer rotor clearance exceeds the service limit, replace the inner and outer rotors.


Inner Rotor-to-Outer Rotor Radial Clearance

Standard (New): 0.02 – 0.14 mm

(0.001 – 0.006 in)

Service Limit: 0.20 mm (0.008 in)

OUTER ROTOR

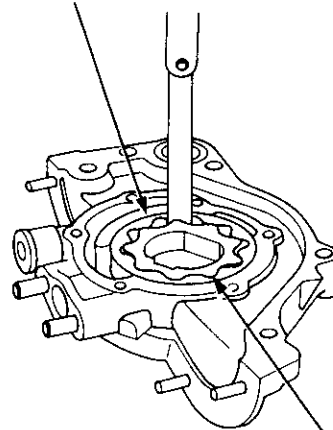

INNER ROTOR


12. Check the housing-to-rotor axial clearance on the pump rotor. If the housing-to-rotor axial clearance exceeds the service limit, replace the set of inner and outer rotors and/or the pump housing.

Housing-to-Rotor Axial Clearance

Standard (New): 0.03 – 0.08 mm

(0.001 – 0.003 in)

Service Limit: 0.15 mm (0.006 in)

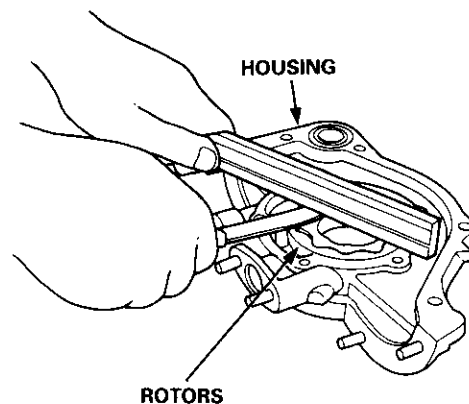




13. Check the housing-to-outer rotor radial clearance. If the housing-to-outer rotor radial clearance exceeds the service limit, replace the set of inner and outer rotors and/or the pump housing.

Housing-to-Outer Rotor Radial Clearance:


Standard (New): 0.10 – 0.18 mm
(0.004 – 0.007 in)

Service Limit: 0.20 mm (0.008 in)

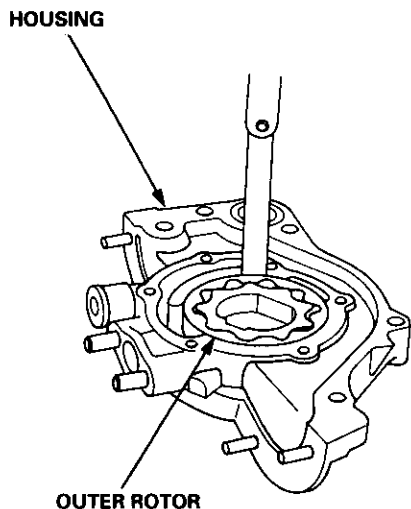

14. Inspect both rotors and the pump housing for scoring or other damage. Replace parts if necessary.
15. Remove the old oil seal from the oil pump.
16. Using the special tool, gently tap in the new oil seal until the driver bottoms against the pump.


NOTE: The oil seal alone can be replaced without removing the oil pump.

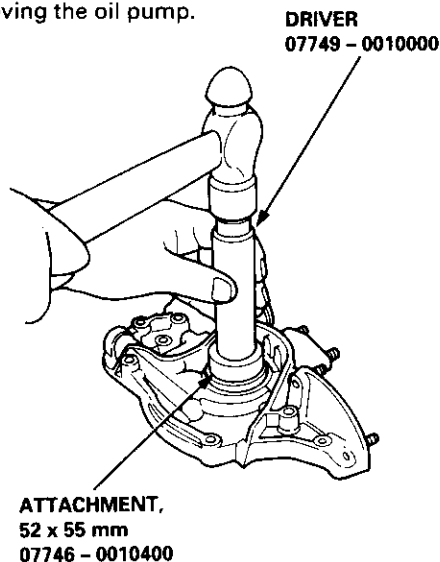

17. Reassemble the oil pump, applying thread lock to the pump housing screws.
18. Check that the oil pump turns freely.
19. Apply a light coat of oil to the seal lip.
20. Install the two dowel pins and new O-ring on the oil pump.
21. Apply liquid gasket to the cylinder block mating surface of the oil pump.

NOTE:

- Use liquid gasket, Part No. 08718 – 0001 or 08718 – 0003
- Check that the mating surfaces are clean and dry before applying liquid gasket.
- Apply liquid gasket evenly, in a narrow bead centered on the mating surface.
- To prevent oil leakage, apply liquid gasket to the inner threads of the bolt holes.
- Do not install the parts if five minutes or more have elapsed since applying liquid gasket. Instead reapply liquid gasket after removing the old residue.
- After assembly, wait at least 30 minutes before filling the engine with oil.

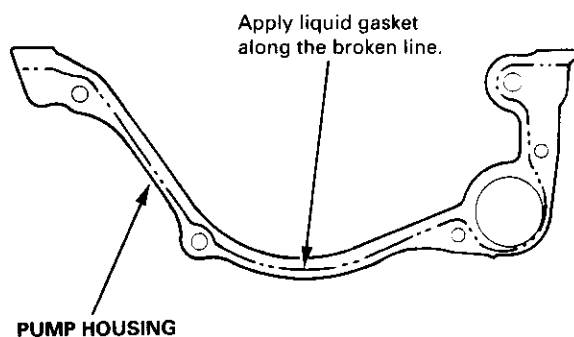


(cont'd)

Oil Pump

Removal/Inspection/Installation (cont'd)

22. Install the oil pump on the cylinder block.
Apply grease to the lip of the oil pump seal.
Then, install the oil pump onto the crankshaft.
When the pump is in place, clean any excess grease
off the crankshaft and check that the oil seal lip is
not distorted.

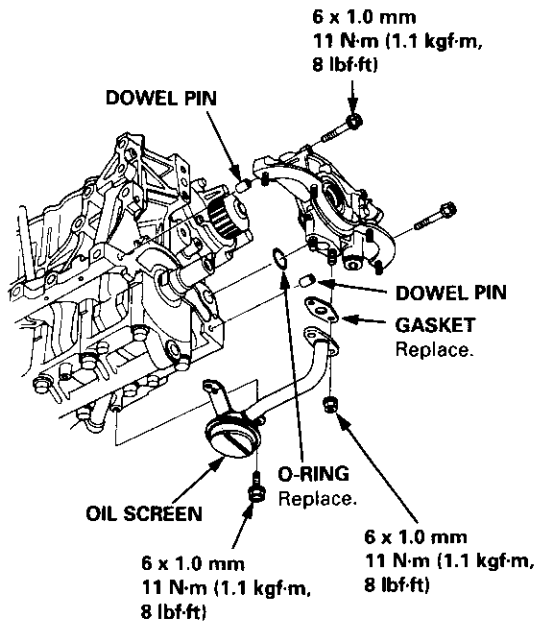

23. Install the oil screen.
24. Install the oil pan (see page 7-22).

NOTE: Clean the oil pan gasket mating surfaces.

Intake Manifold/Exhaust System

Intake Manifold

Replacement 9-2

Exhaust Manifold

Replacement 9-5

Exhaust Pipe and Muffler

Replacement 9-7

Three Way Catalytic Converter (TWC)

Inspection 9-9

Heated Oxygen Sensor (HO2S)

Replacement 9-9



Intake Manifold


Replacement

NOTE: Use new O-rings and gaskets when reassembling.

CAUTION:


- Check for folds or scratches on the surface of the gasket.
- Replace with a new gasket if damaged.

D16Y7 engine:

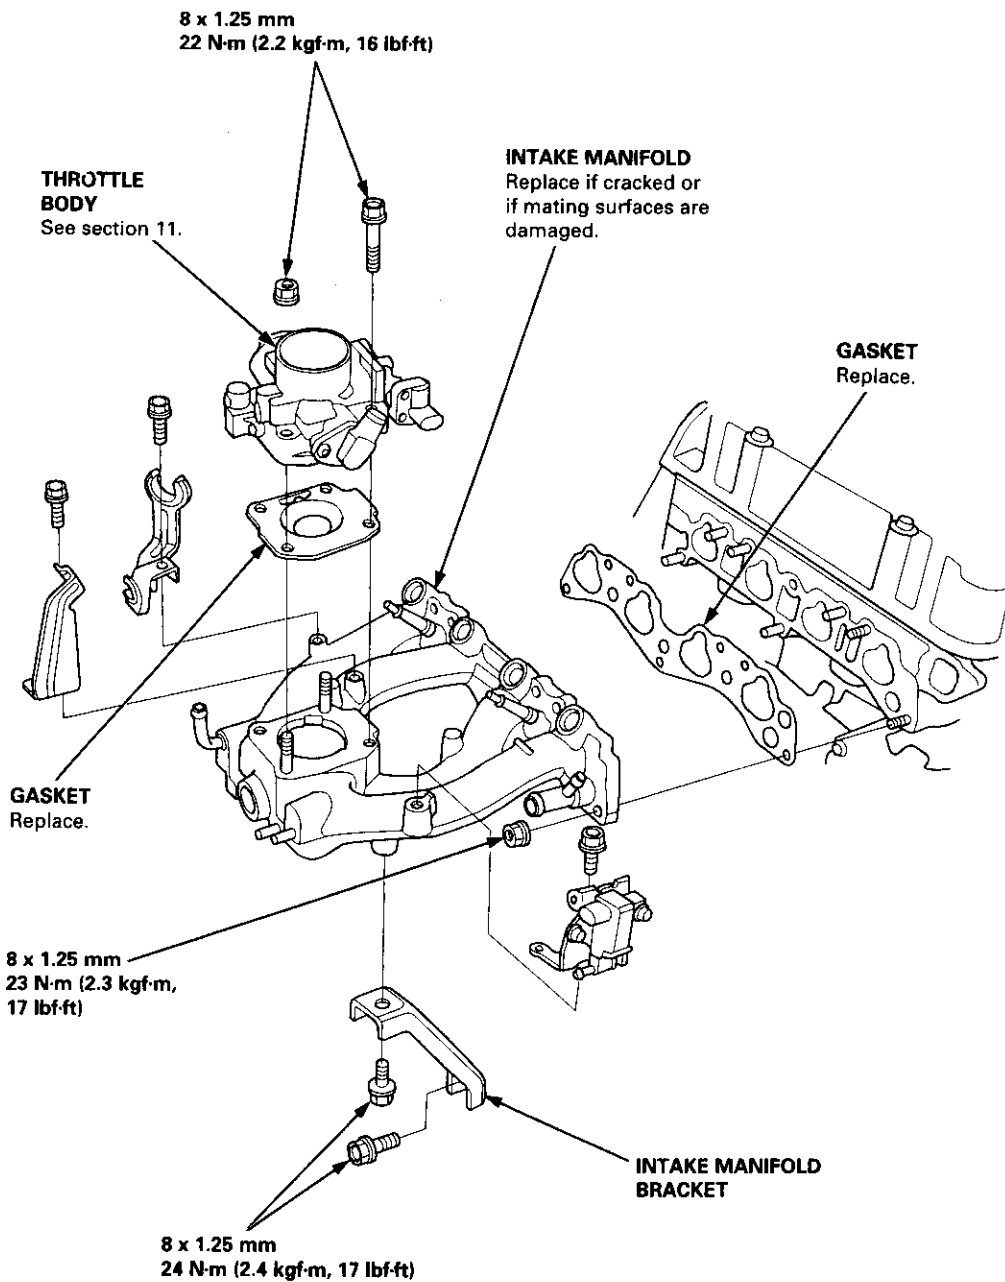



D16Y5 engine:

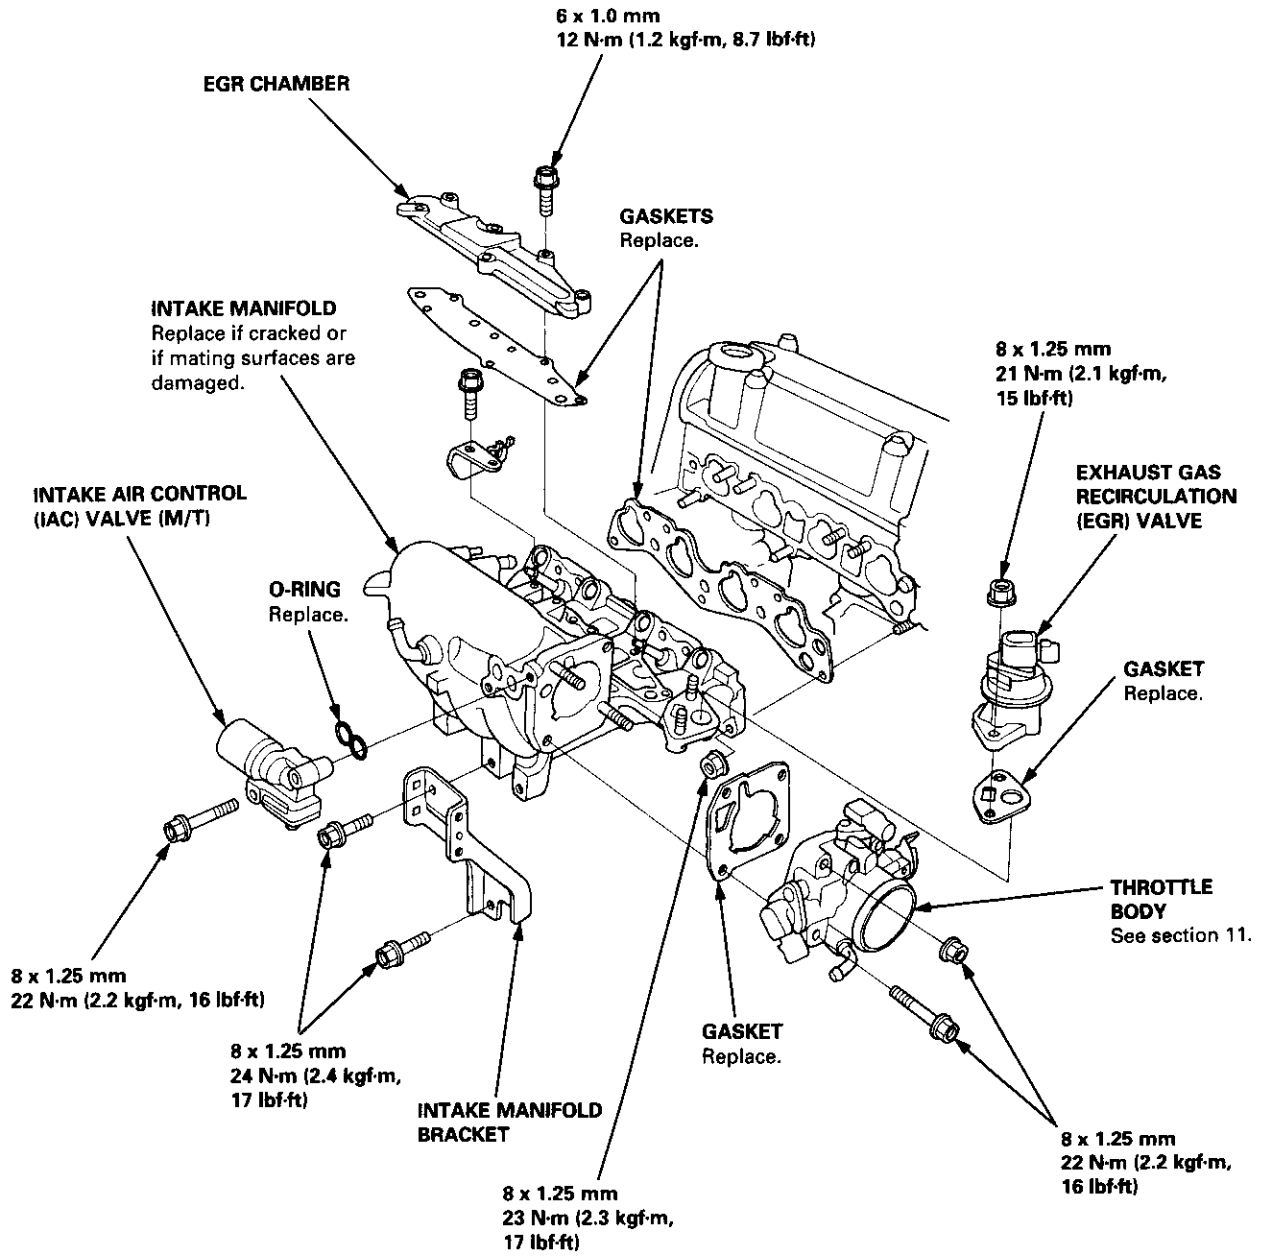

(cont'd)

Intake Manifold


Replacement (cont'd)

NOTE: Use new O-rings and gaskets when reassembling.

CAUTION:

- Check for folds or scratches on the surface of the gasket.
- Replace with a new gasket if damaged.

D16Y8 engine:

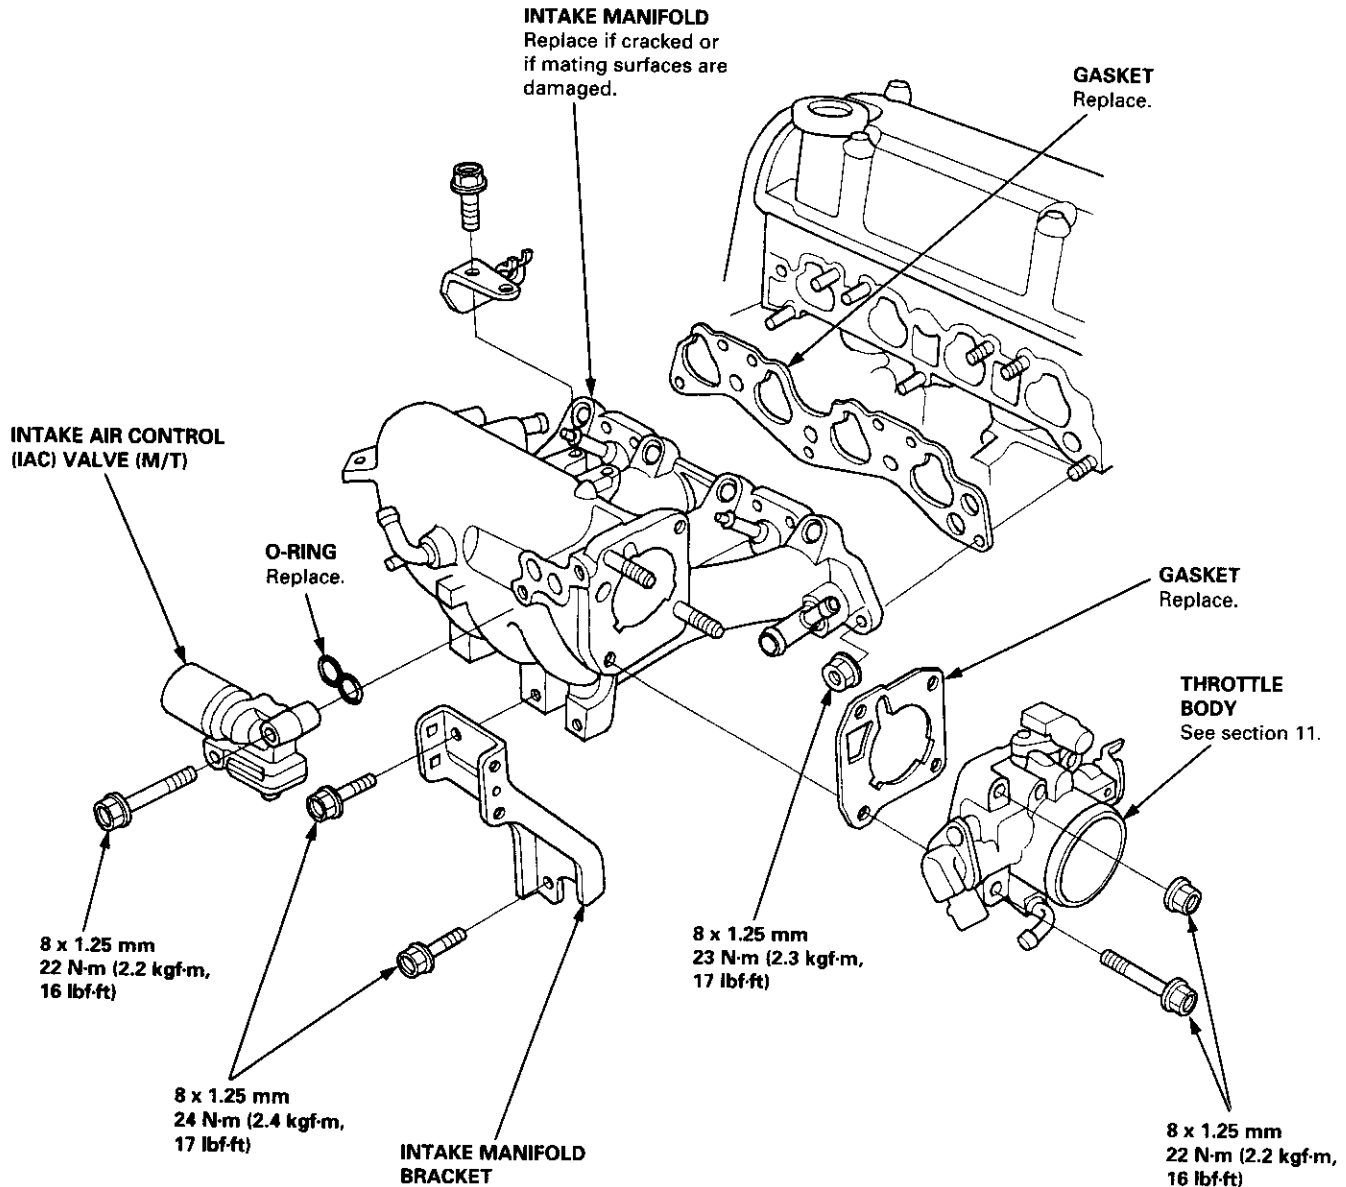

Exhaust Manifold




Replacement

NOTE: Use new gaskets and self-locking nuts when reassembling.

CAUTION:

- Check for folds or scratches on the surface of the gasket.
- Replace with a new gasket if damaged.

D16Y5, D16Y7 engines:

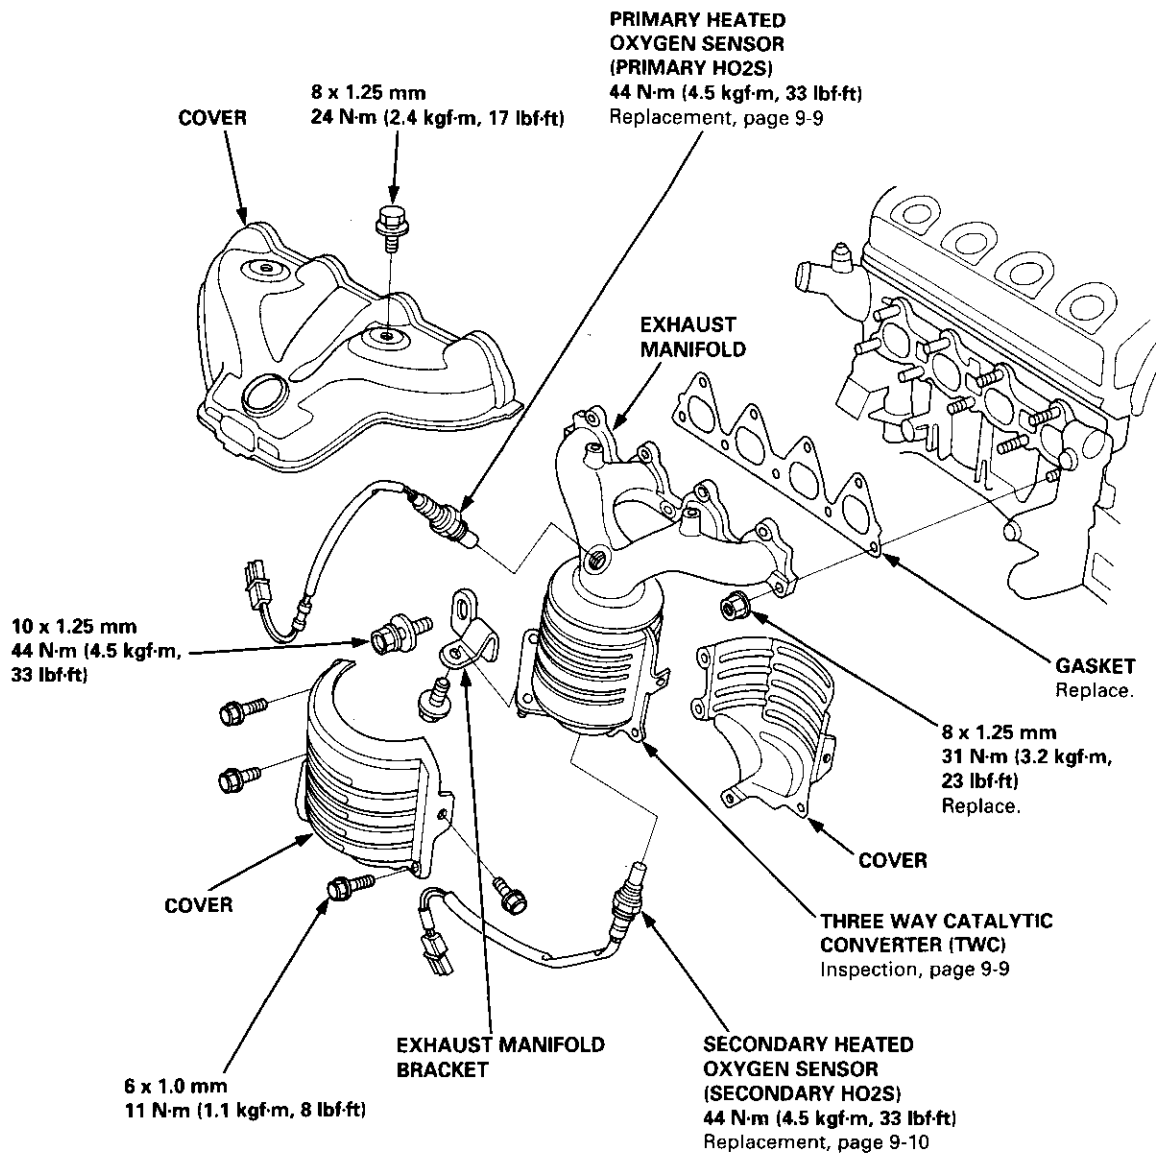

(cont'd)

Exhaust Manifold


Replacement (cont'd)

NOTE: Use new gaskets and self-locking nuts when reassembling.

CAUTION:

- Check for folds or scratches on the surface of the gasket.
- Replace with a new gasket if damaged.

D16Y8 engine:

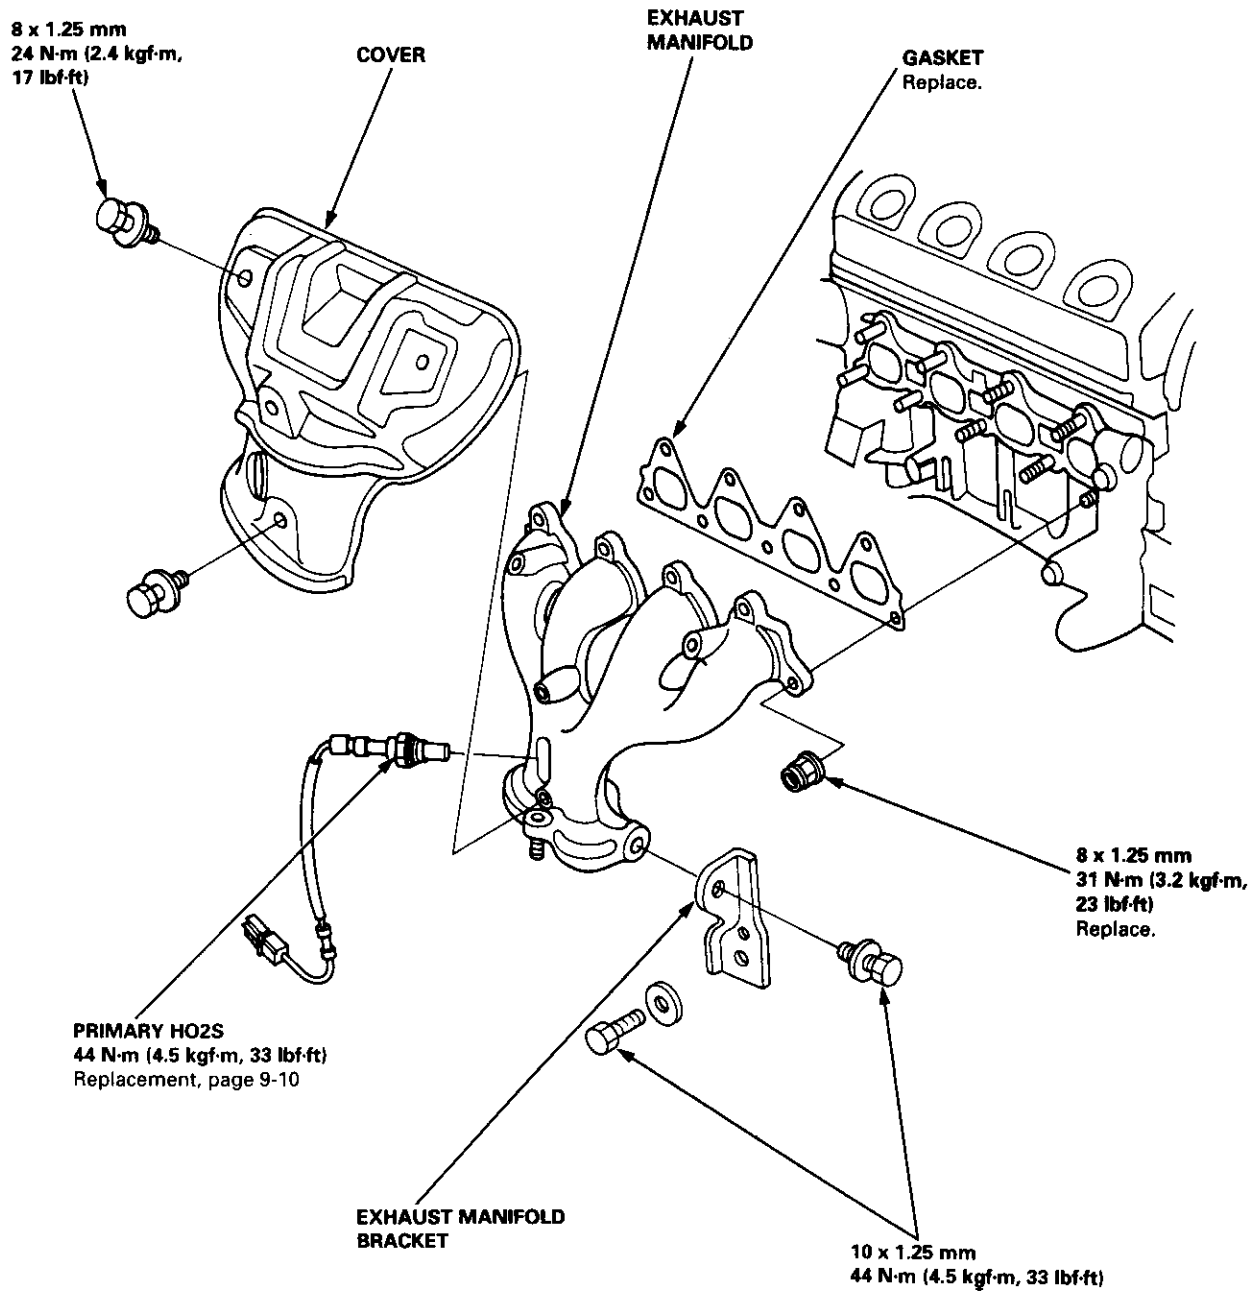


Exhaust Pipe and Muffler



Replacement

NOTE: Use new gaskets and self-locking nuts when reassembling.

D16Y5, D16Y7 engines:

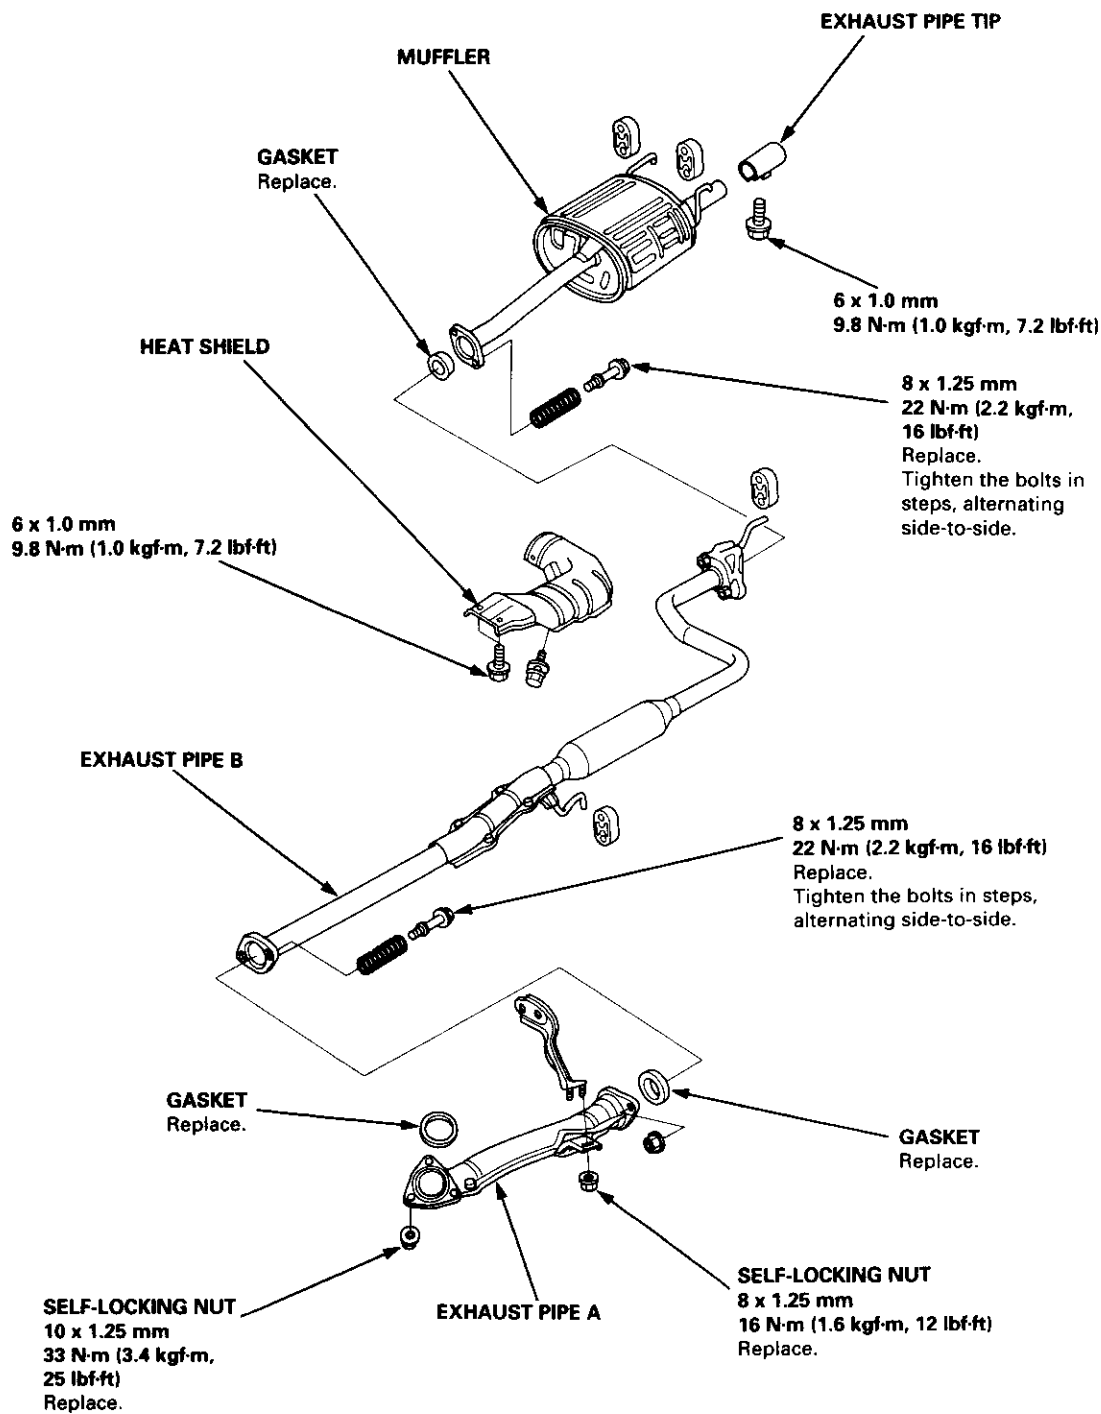


(cont'd)

Exhaust Pipe and Muffler

Replacement (cont'd)

NOTE: Use new gaskets and self-locking nuts when reassembling.

D16Y8 engine:

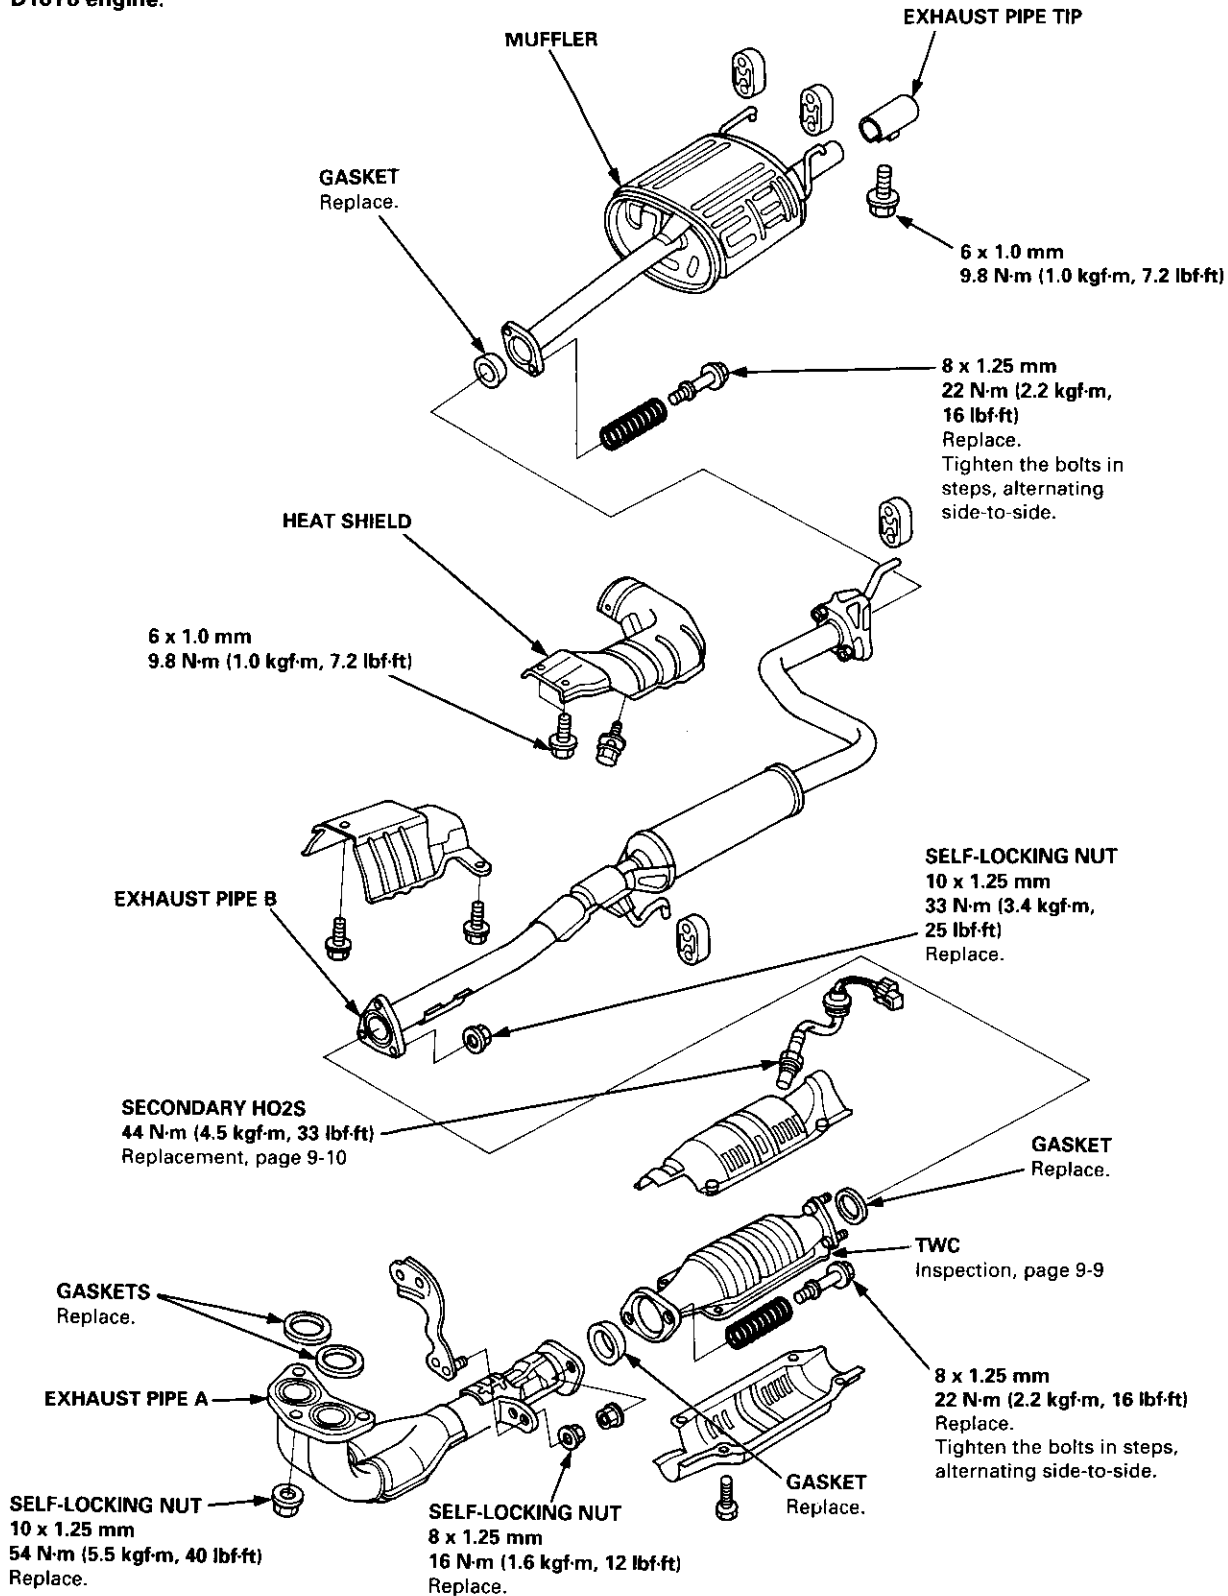





Inspection

1. Using a flashlight, make a visual check for plugging, melting and cracking of the catalyst.

D16Y5, D16Y7 engines:

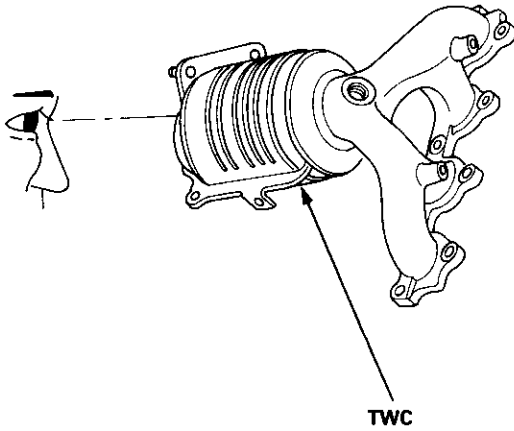

D16Y8 engine:

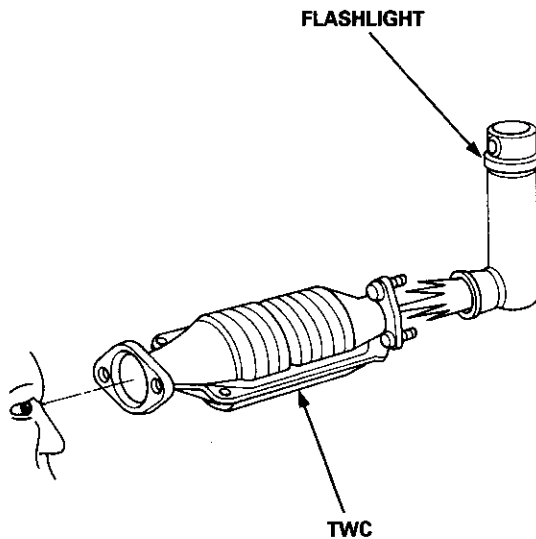


Replacement

Primary HO2S:


1. Remove the primary HO2S.

D16Y5, D16Y7 engines:

- a. Disconnect the primary HO2S connector, then remove the cover.
8 x 1.25 mm
24 N-m (2.4 kgf-m,
17 lbf-ft)

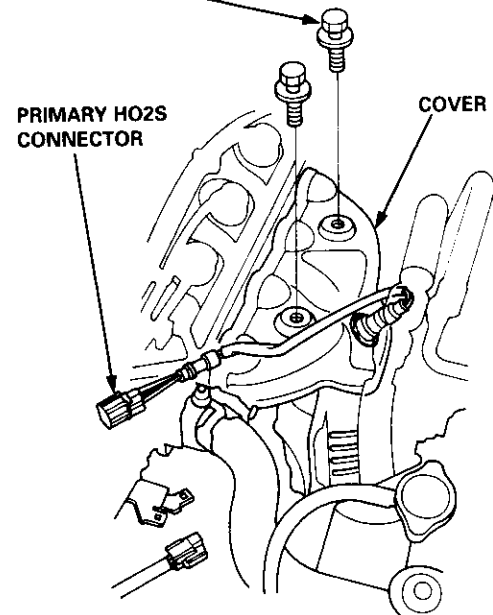

- b. Remove the primary HO2S.

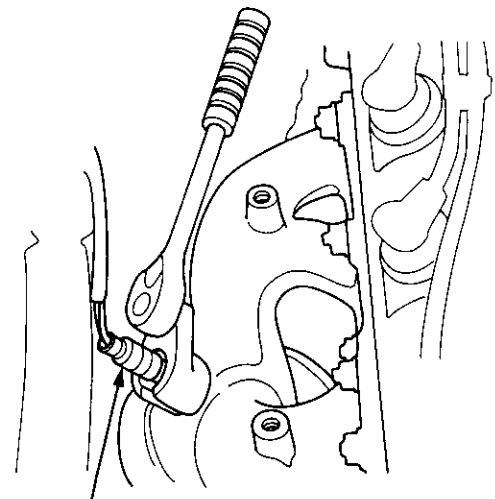

PRIMARY HO2S
44 N-m (4.5 kgf-m, 33 lbf-ft)


(cont'd)

HO2S

Replacement (cont'd)

D16Y8 engine:

- a. Disconnect the primary HO2S connector then remove the primary HO2S.

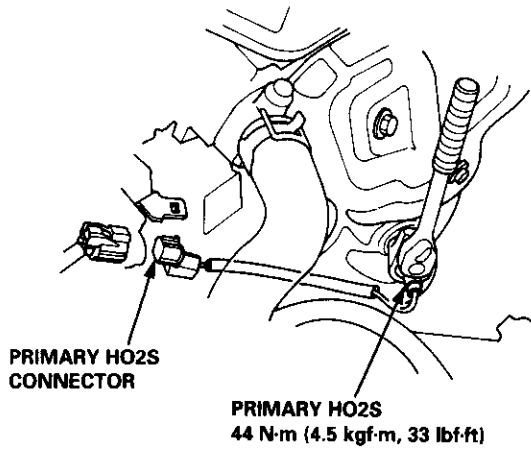

2. Install the primary HO2S in reverse order of removal.


Secondary HO2S:

1. Remove the secondary HO2S.

D16Y5, D16Y7 engines:

- a. Disconnect the secondary HO2S connector, then remove the secondary HO2S.


**O2 SENSOR
WRENCH**
(Commercially available)

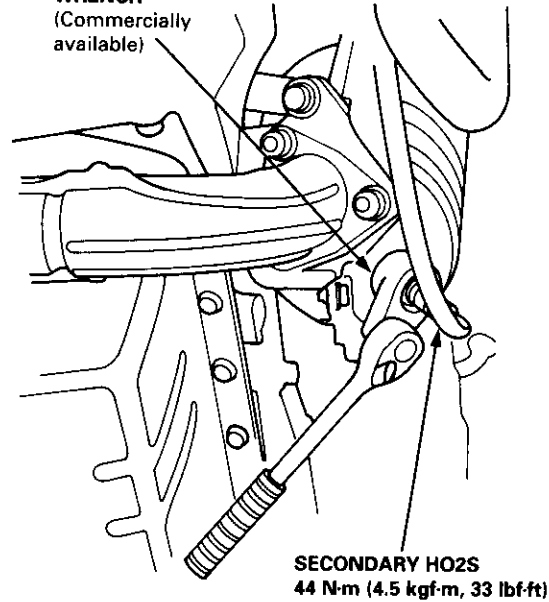

D16Y8 engine:


- a. Remove the grommet, and pull out the secondary HO2S connector, then disconnect the secondary HO2S connector.

**SECONDARY HO2S
CONNECTOR**

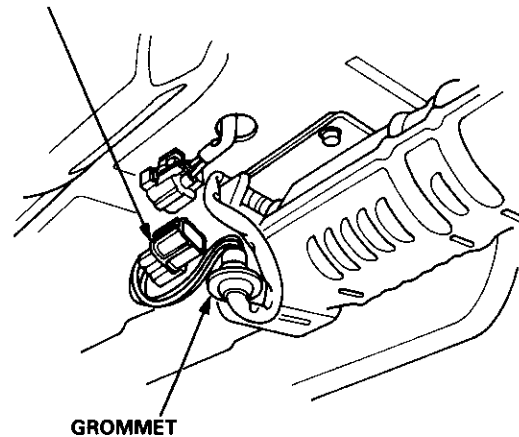



- b. Remove the secondary HO2S.

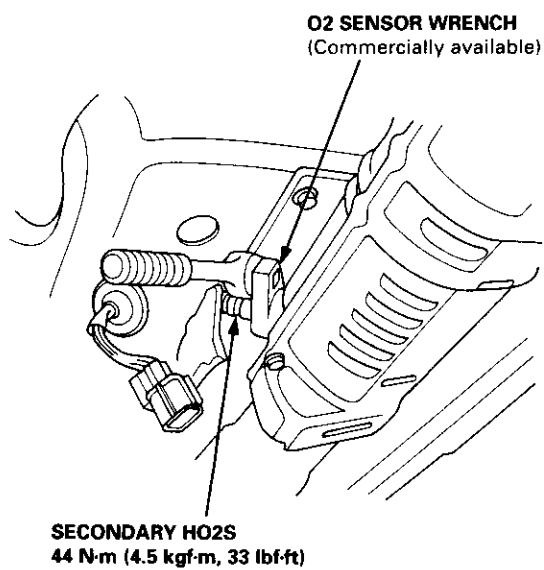

2. Install the secondary HO2S in reverse order of removal.

Cooling

Illustrated Index	10-2
Radiator	
Replacement	10-5
Engine Coolant Refilling and Bleeding	10-6
Cap Testing	10-8
Testing	10-8
Thermostat	
Replacement	10-9
Testing	10-10
Engine Coolant Temperature (ECT) Switch	
Testing	10-10
Water Pump	
Illustrated Index	10-11
Inspection	10-12
Replacement	10-12



Illustrated Index

WARNING System is under high pressure when the engine is hot. To avoid danger of releasing scalding engine coolant, remove the cap only when the engine is cool.

Total Cooling System Capacity [Including heater and reservoir (0.4 l (0.42 US qt, 0.35 Imp qt))]:


M/T	4.2 l (4.4 US qt, 3.7 Imp qt)
A/T	4.1 l (4.3 US qt, 3.6 Imp qt)* ¹ 4.3 l (4.5 US qt, 3.8 Imp qt)* ²
CVT	4.3 l (4.5 US qt, 3.8 Imp qt)

*1: D16Y7 engine
*2: D16Y8 engine

CAUTION: If any engine coolant spills on painted portions of the body, rinse it off immediately.

NOTE:


- Check all cooling system hoses for damage, leaks or deterioration and replace if necessary.
- Check all hose clamps and retighten if necessary.
- Use new O-rings when reassembling.

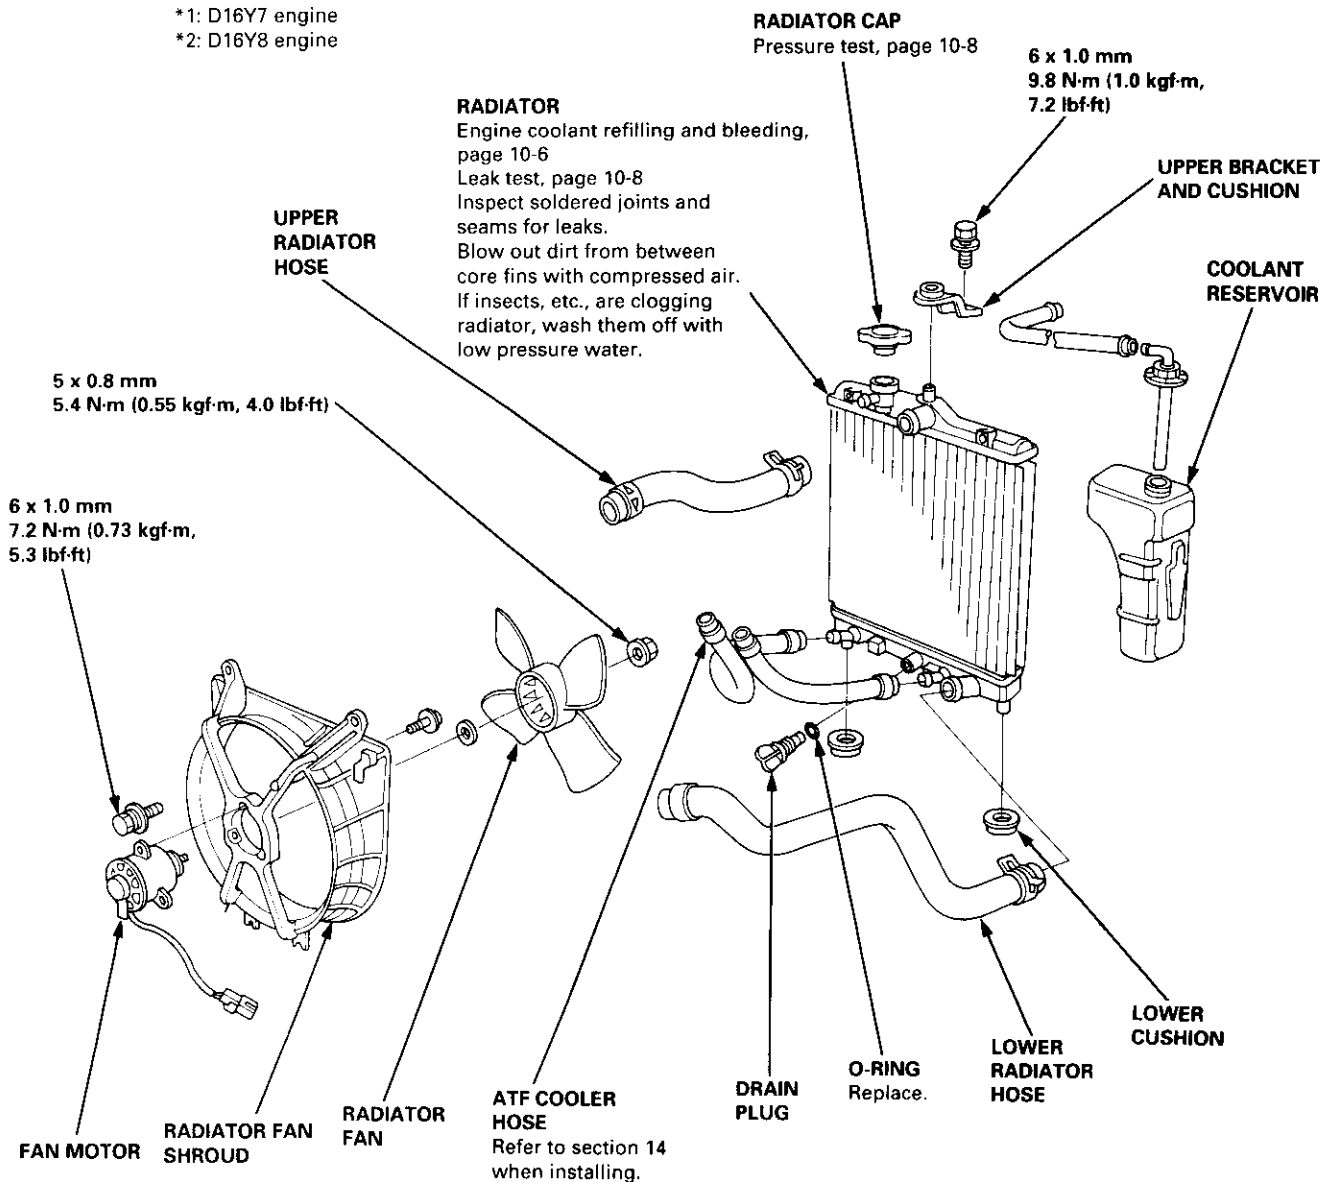



Engine Hose Connections:

D16Y7 engine:

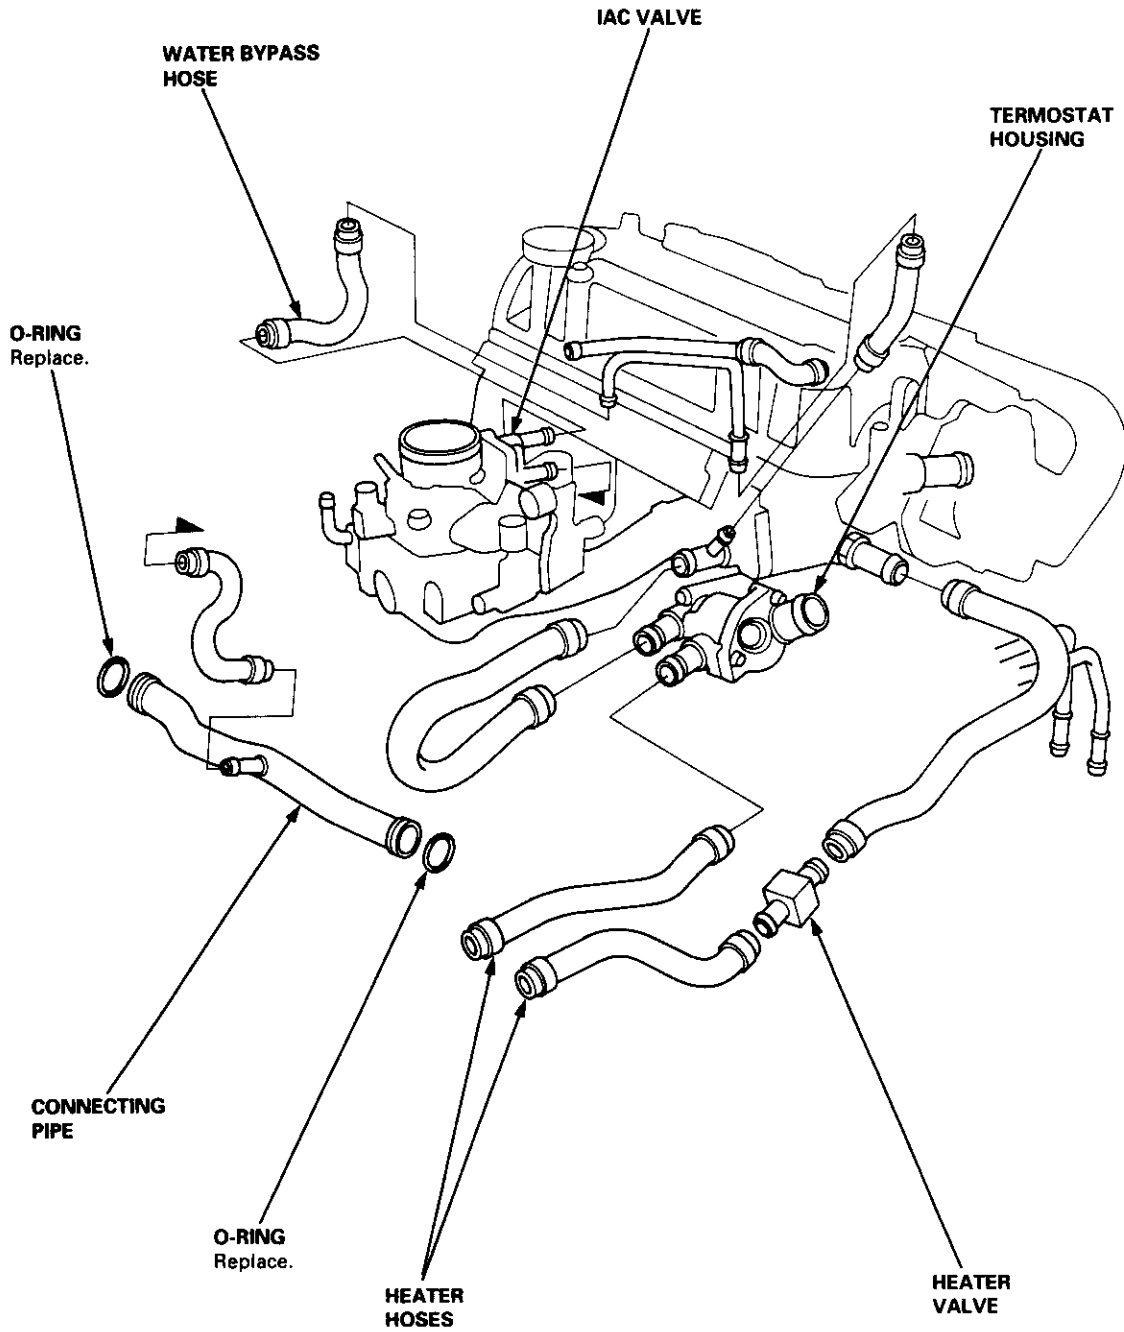


(cont'd)

Illustrated Index

(cont'd)

Engine Hose Connections:

D16Y5, D16Y8 engines:

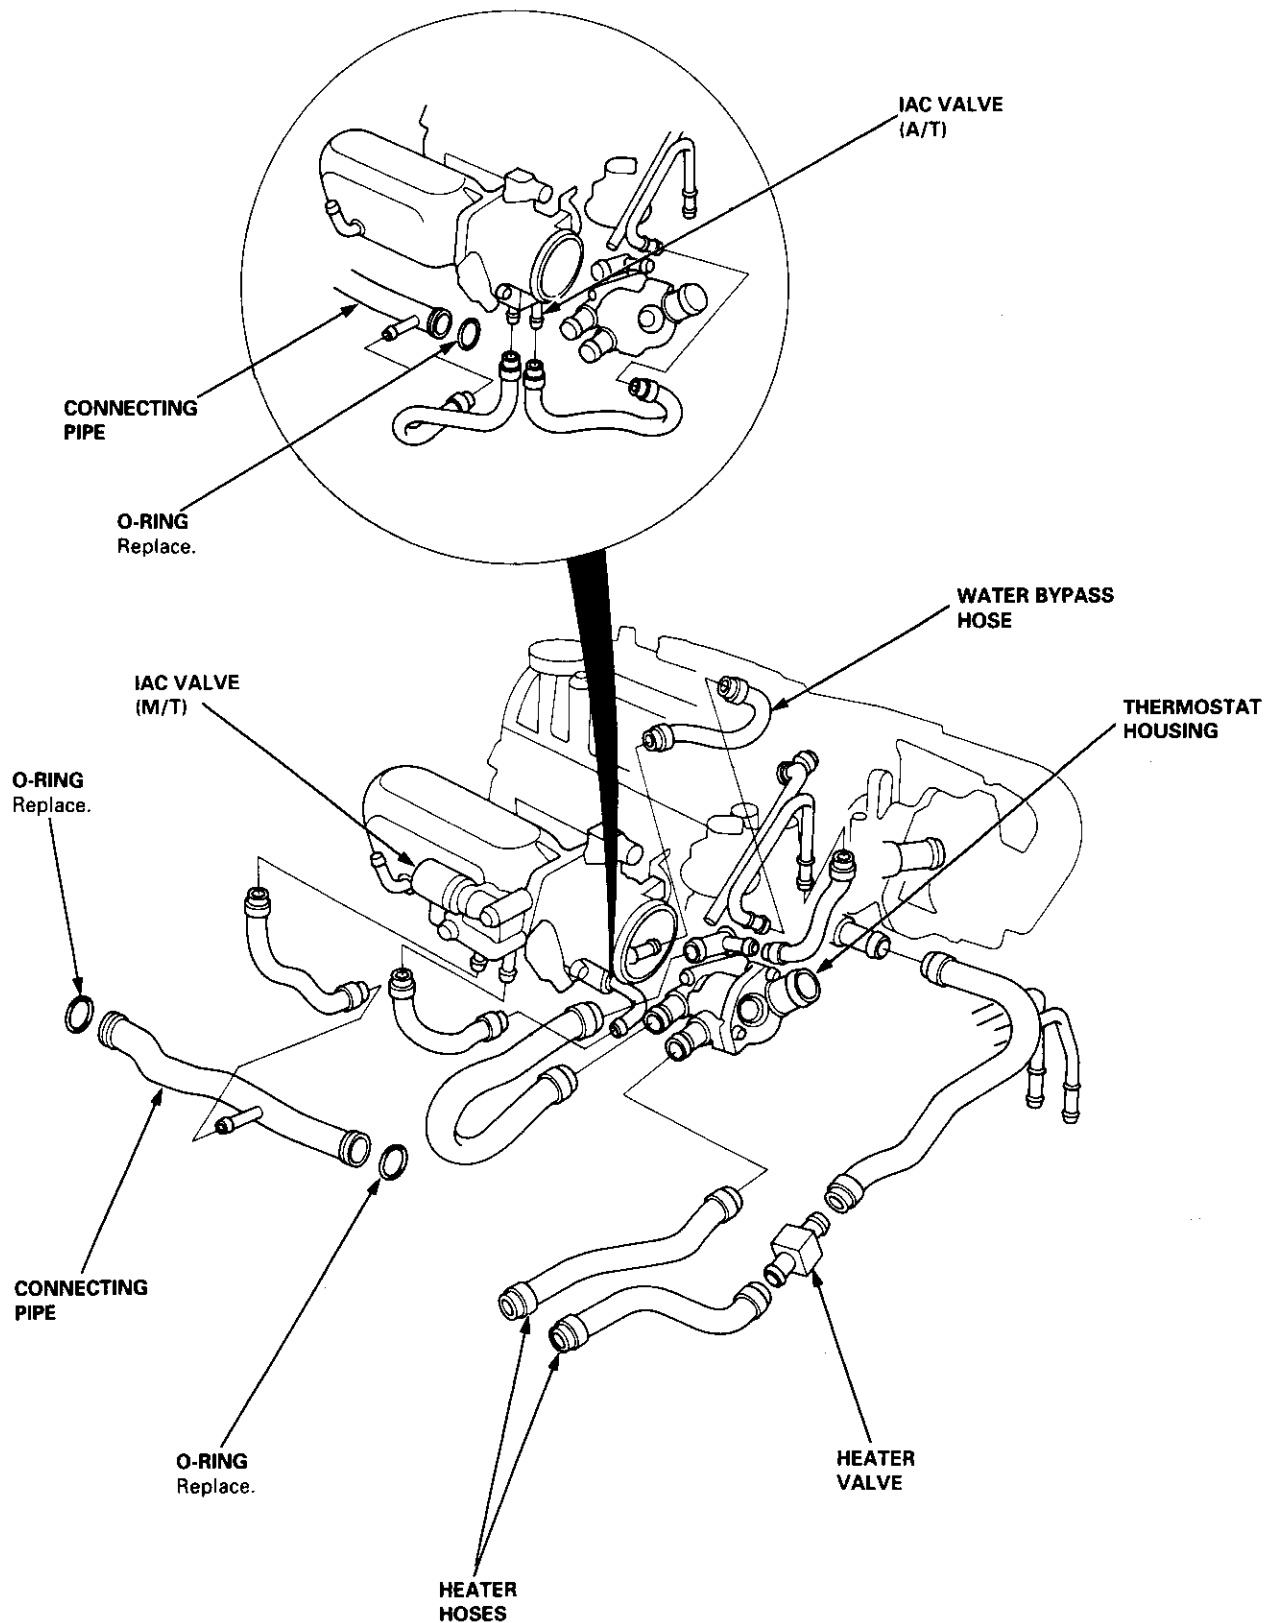

Radiator



Replacement


1. Drain the engine coolant.
2. Remove the upper and lower radiator hoses, and ATF cooler hoses.
3. Disconnect the fan motor connector.
4. Remove the radiator upper bracket, then pull up the radiator.

5. Remove the fan shroud assemblies and other parts from the radiator.

Install the radiator in the reverse order of removal:

NOTE:

- Set the upper and lower cushions securely.
- Fill the radiator with engine coolant and bleed the air.

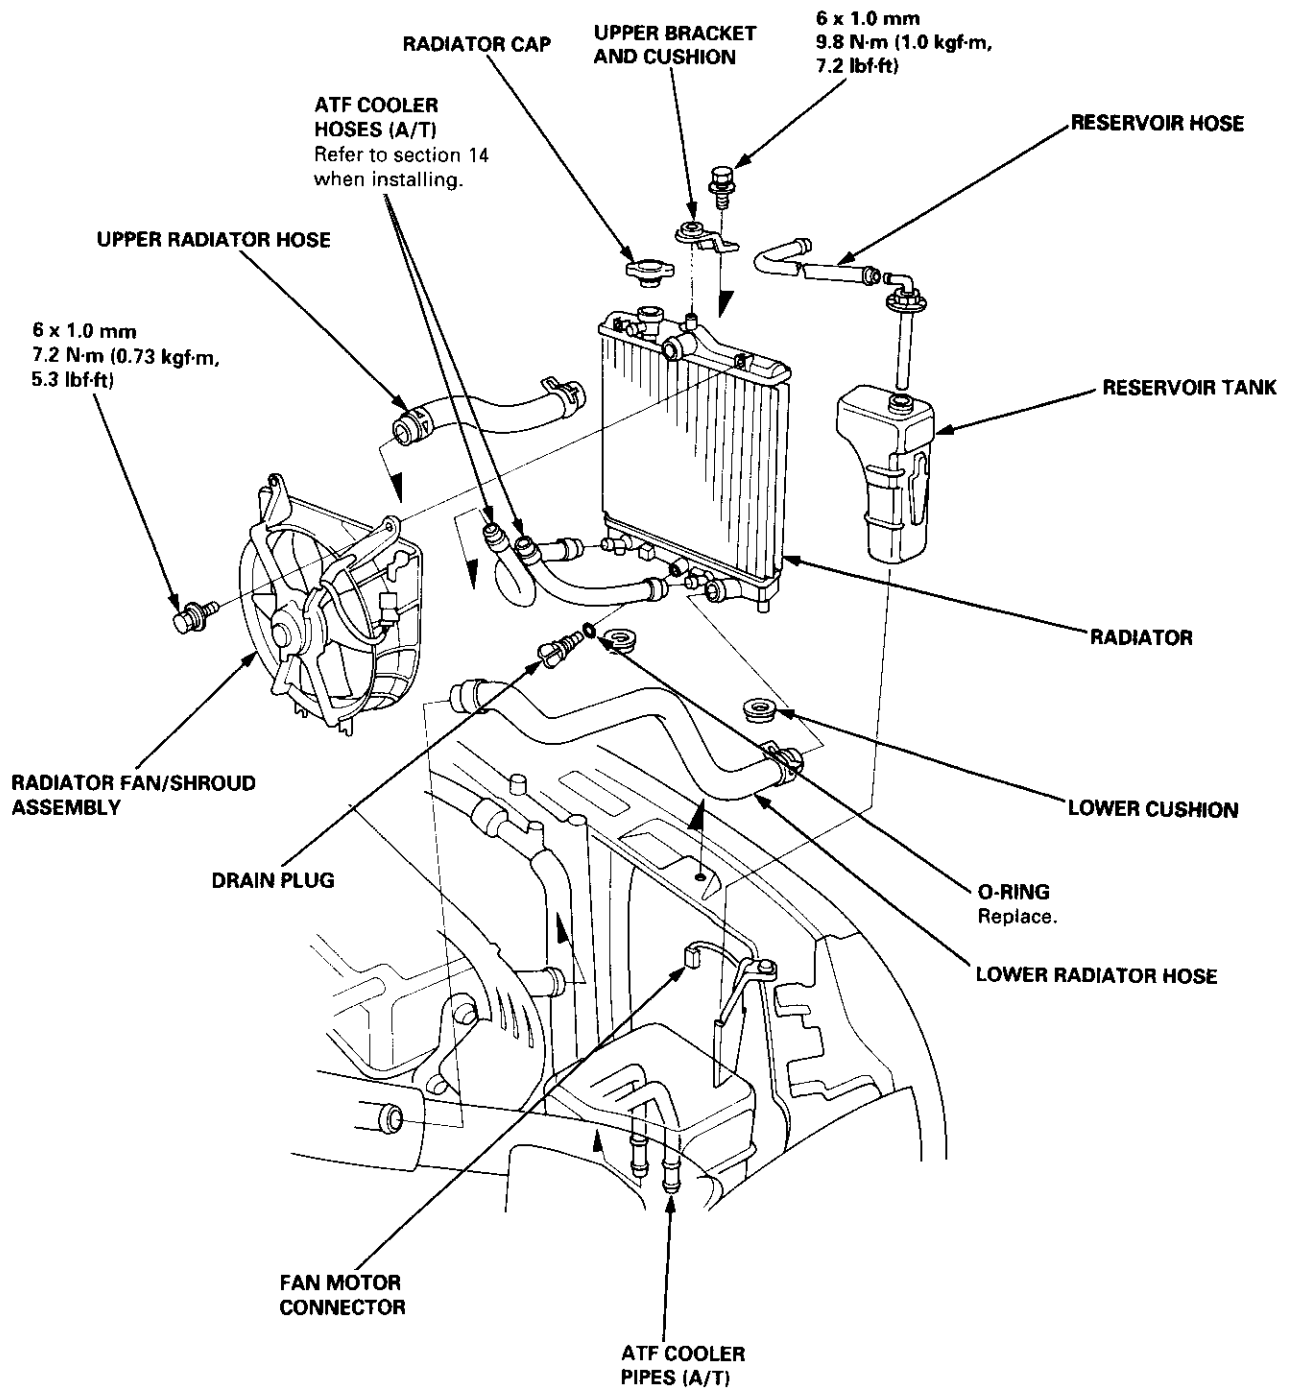


Radiator


Engine Coolant Refilling and Bleeding

CAUTION: When pouring engine coolant, be sure to shut the relay box lid and not to let coolant spill on the electrical parts or the paint. If any coolant spills, rinse it off immediately.


1. Slide the heater temperature control lever to maximum heat. Make sure the engine and radiator are cool to the touch.
2. Remove the radiator cap.
3. Loosen the drain plug, and drain the coolant.

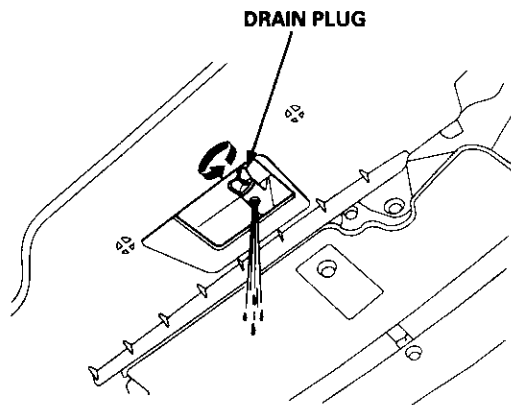

4. Remove the drain bolt from the cylinder block.

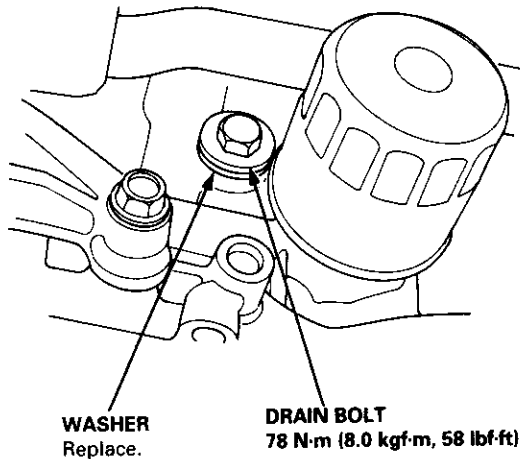

5. Apply liquid gasket to the drain bolt threads, then reinstall the bolt with a new washer and tighten it securely.
6. Tighten the radiator drain plug securely.
7. Remove, drain and reinstall the reservoir. Fill the tank halfway to the MAX mark with water, then up to MAX the mark with antifreeze.

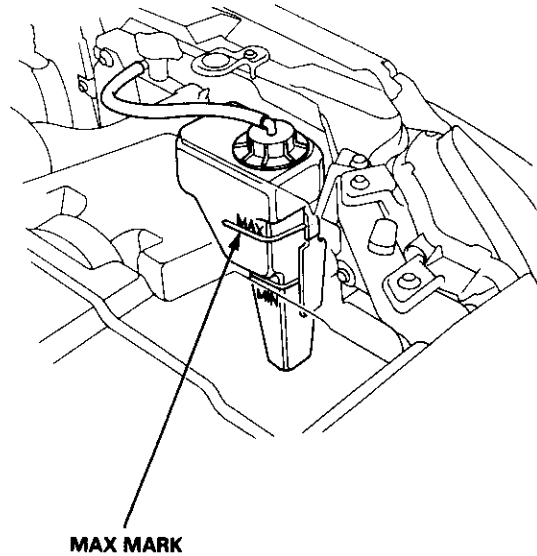



- Mix the recommended antifreeze with an equal amount of water in a clean container.

NOTE:

- Use only genuine Honda antifreeze/coolant.
- For best corrosion protection, the coolant concentration must be maintained year-round at 50% minimum. Coolant concentrations less than 50% may not provide sufficient protection against corrosion or freezing.
- Coolant concentrations greater than 60% will impair cooling efficiency and are not recommended.

CAUTION:

- Do not mix different brands of antifreeze/coolants.
- Do not use additional rust inhibitors or anti-rust products; they may not be compatible with the coolant.


Engine Coolant Refill Capacity [including reservoir (0.4 ℓ (0.42 US qt, 0.35 Imp qt))]:

M/T	3.8 ℓ (4.0 US qt, 3.3 Imp qt)
A/T	3.7 ℓ (3.9 US qt, 3.3 Imp qt)* ¹ 3.9 ℓ (4.1 US qt, 3.4 Imp qt)* ²
CVT	3.9 ℓ (4.1 US qt, 3.4 Imp qt)

*1: D16Y7 engine

*2: D16Y8 engine

- Pour coolant into the radiator up to the base of the filler neck, and install the radiator cap loosely.

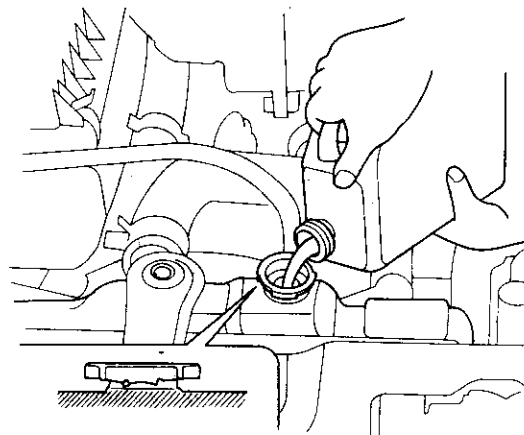


- Start the engine and let it run until it warms up (the radiator fan comes on at least twice).
- Turn off the engine. Check the level in the radiator, add coolant if needed.
- Put the radiator cap on tightly, then run the engine again and check for leaks.

Radiator

Cap Testing


1. Remove the radiator cap, wet its seal with engine coolant, then install it on the pressure tester.

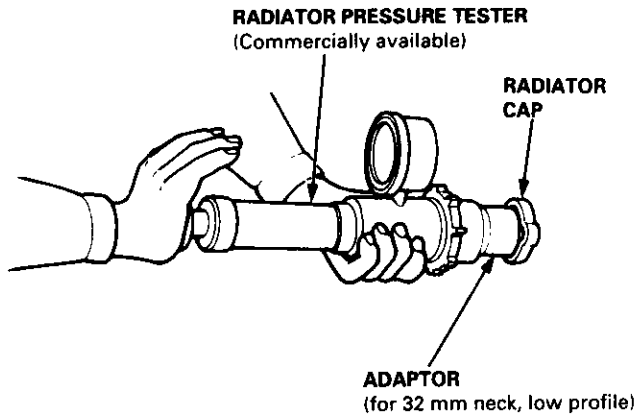

2. Apply a pressure of 93 – 123 kPa (0.95 – 1.25 kgf/cm², 14 – 18 psi).
3. Check for a drop in pressure.
4. If the pressure drops, replace the cap.

Testing

1. Wait until the engine is cool, then carefully remove the radiator cap and fill the radiator with engine coolant to the top of the filler neck.
2. Attach the pressure tester to the radiator and apply a pressure of 93 – 123 kPa (0.95 – 1.25 kgf/cm², 14 – 18 psi).

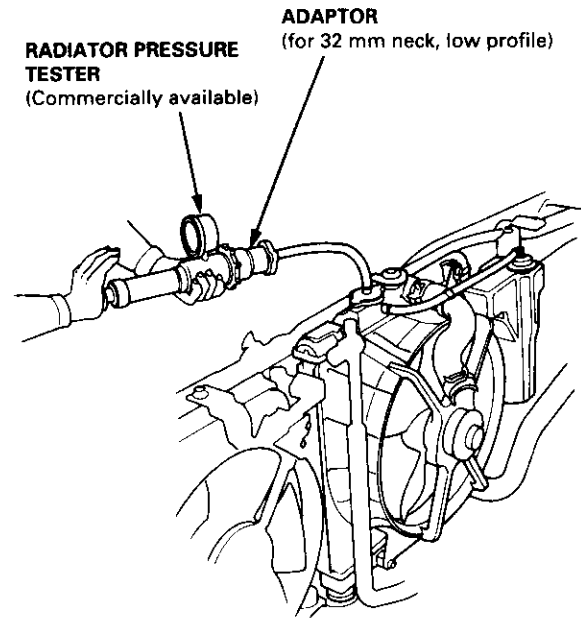

3. Inspect for engine coolant leaks and a drop in pressure.
4. Remove the tester and reinstall the radiator cap.


NOTE: Check for engine oil in the coolant and/or coolant in the engine oil.

Thermostat



Replacement

NOTE: Use a new O-ring when reassembling.

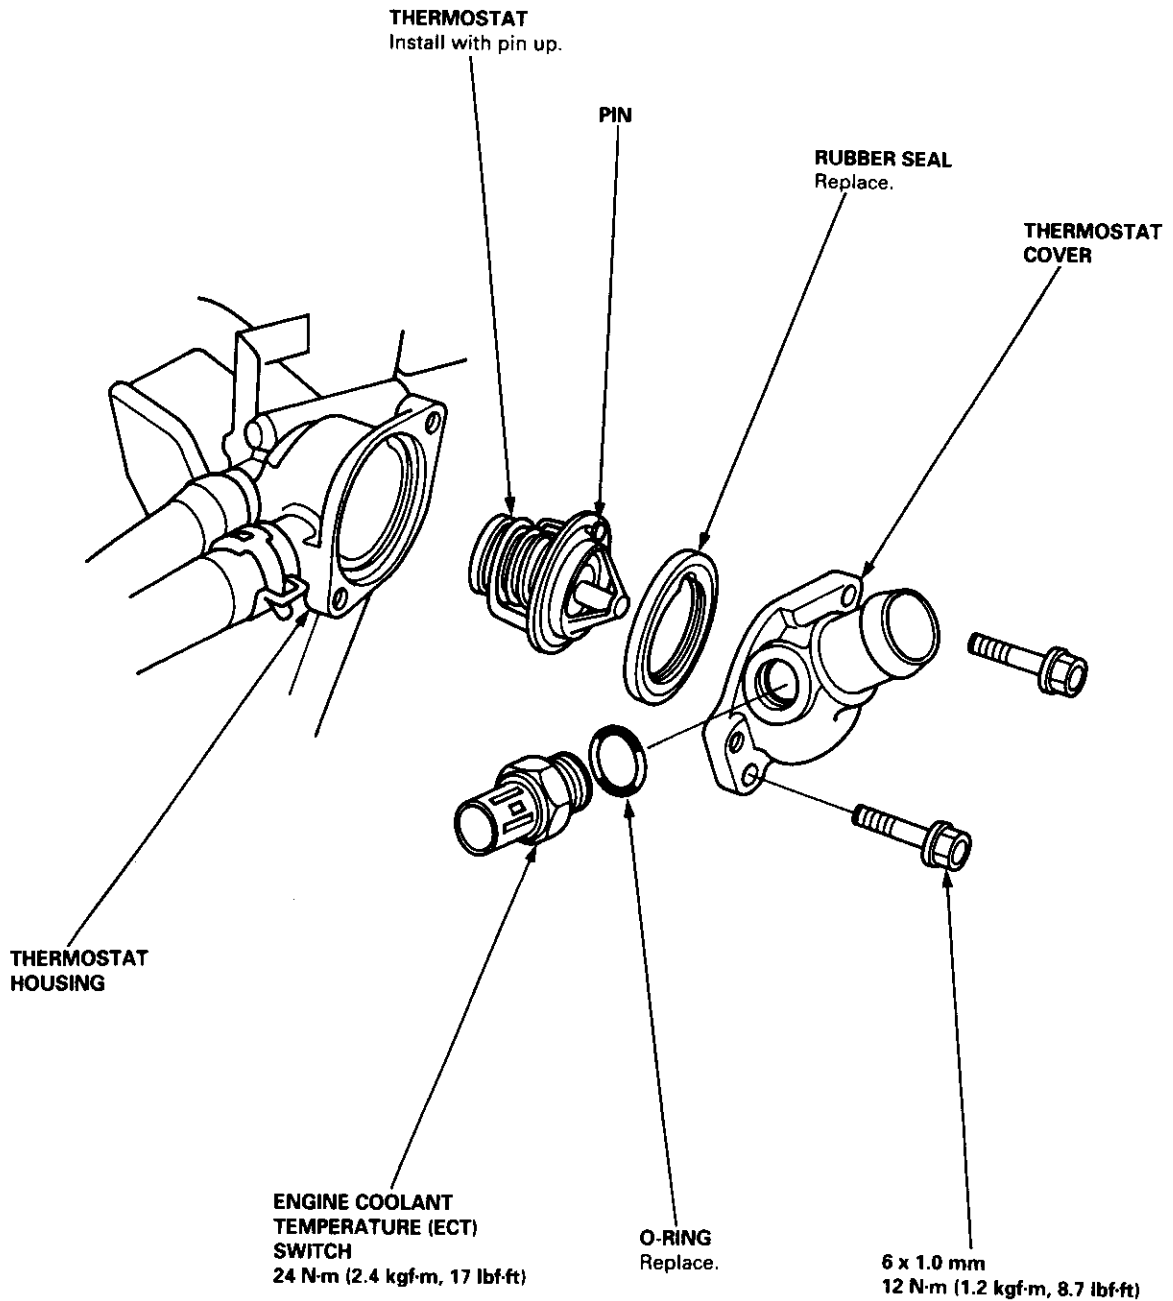


Thermostat

Testing

Replace the thermostat if it is open at room temperature.

To test a closed thermostat:

1. Suspend the thermostat in a container of water as shown.

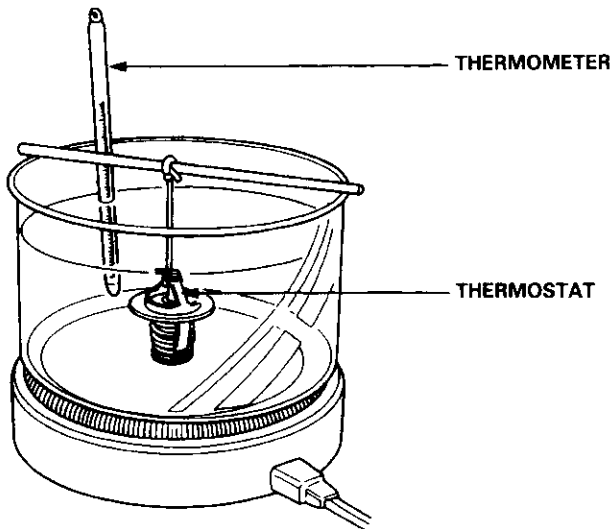

2. Heat the water, and check the temperature with a thermometer. Check the temperature at which the thermostat first opens, and at which it is fully open.

CAUTION: Do not let the thermometer touch the bottom of the hot container.

3. Measure lift height of the thermostat when fully open.

STANDARD THERMOSTAT

Lift height: above 8.0 mm (0.31 in)
 Starts opening: 169° - 176°F (76° - 80°C)
 Fully open: 194°F (90°C)


ECT Switch

Testing

⚠ WARNING Removing the ECT switch while the engine is hot can cause the coolant to spray out, seriously scalding you. Always let the engine and radiator cool down before removing the ECT switch.

NOTE: Bleed air from the cooling system after installing the ECT switch (see page 10-6).

1. Remove the ECT switch from the thermostat housing (see page 10-9).
2. Suspend the ECT switch in a container of water as shown.

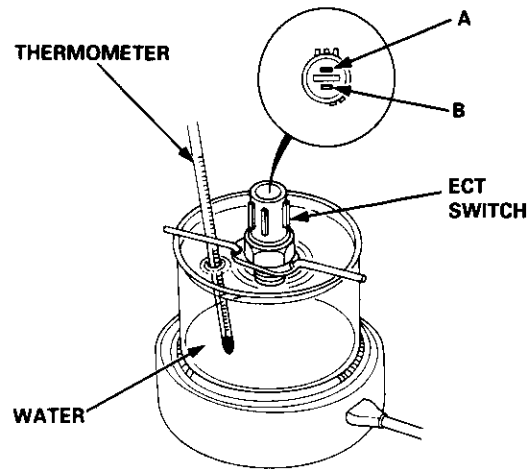

3. Heat the water, and check the temperature with a thermometer.

CAUTION: Do not let the thermometer touch the bottom of the hot container.

4. Measure the resistance between the A and B terminals according to the table.

Operation		Temperature	Terminal	
			A	B
SWITCH	ON	196° - 203°F (91° - 95°C)	○	○
	OFF	5° - 15°F (3° - 8°C) lower than the temperature when it goes on		

Fuel and Emissions

Special Tools	11-2
Component Locations	
Index	11-3
System Description	
Vacuum Connections	11-8
Electrical Connections	11-19
System Connectors	11-29
Troubleshooting	
Troubleshooting Procedures	11-42
Engine Control Module/Powertrain Control Module Terminal Arrangement	11-49
Diagnostic Trouble Code Chart	11-53
How to Read Flowcharts	11-59

PGM-FI System

System Description	11-60
Troubleshooting Flowcharts	
Engine Control Module/Powertrain Control Module	11-63
Manifold Absolute Pressure Sensor	11-67
Intake Air Temperature Sensor	11-73
Engine Coolant Temperature Sensor	11-76
Throttle Position Sensor	11-79
Primary Heated Oxygen Sensor (Sensor 1) ...	11-84
Secondary Heated Oxygen Sensor (Sensor 2).....	11-95
Heated Oxygen Sensor Heater	11-98
Fuel Supply System	11-103
Misfire Detected in One Cylinder	11-105
Random Misfire	11-108
Knock Sensor	11-109
CKP/TDC/CYP Sensor	11-110
Vehicle Speed Sensor	11-112
Barometric Pressure Sensor	11-113
Electrical Load Detector	11-115
CKF Sensor	11-117
ECM/PCM Internal Circuit	11-120
A/T Signal (TMA/TMB)	11-121

Idle Control System

System Description	11-122
Troubleshooting Flowcharts	
Idle Control System	11-124
Idle Air Control Valve	11-126
Starter Switch Signal	11-130
Air Conditioning Signal	11-131
Alternator FR Signal	11-133
Brake Switch Signal	11-134
Power Steering Pressure Switch Signal	11-135
A/T Gear Position Signal	11-137
Clutch Switch Signal	11-139
Idle Speed Setting	11-141

Fuel Supply System

Fuel Lines	11-145
Fuel Tube/Quick-Connect Fittings	11-147
System Description	11-150
Fuel Pressure	11-150
Fuel Injectors	11-152
Fuel Pressure Regulator	11-154
Fuel Filter	11-155
Fuel Pump	11-156
PGM-FI Main Relay	11-157
Fuel Tank	11-160

Intake Air System

System Description	11-161
Air Cleaner	11-162
Throttle Cable	11-162
Throttle Body	11-164

Emission Control System


System Description	11-167
Tailpipe Emission	11-167
Three Way Catalytic Converter	11-167
Exhaust Gas Recirculation System	11-169
Positive Crankcase Ventilation System	11-177
Evaporative Emission Controls	11-178




Special Tools

Special Tools


Ref. No.	Tool Number	Description	Qty	Page Reference
①	A973X - 041 - XXXXX	Vacuum Pump/Gauge, 0 - 30 in.Hg	1	11-171, 172, 185, 186, 188, 192, 193
②	07JAZ - 001000B	Vacuum/Pressure Gauge, 0 - 4 in.Hg	1	11-192, 193
③	07PAZ - 0010100	SCS Service Connector	1	11-42
④	07SAZ - 001000A	Backprobe Set	2	11-44
⑤	07406 - 0040001	Fuel Pressure Gauge	1	11-150, 151, 154
⑥	07406 - 004030A	Fuel Pressure Adapter, 6 x 15 mm	1	11-150

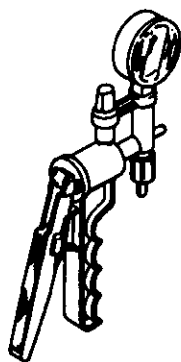


①

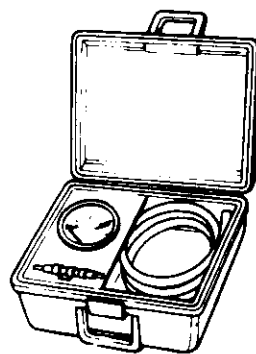

②

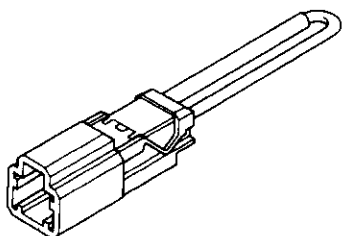

③

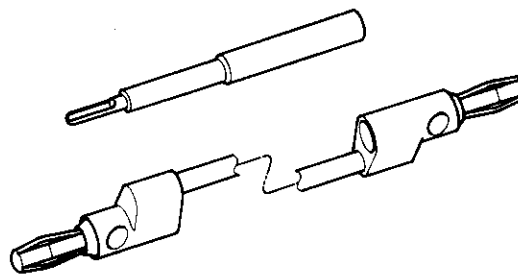

④



⑤




⑥

Component Locations



Index

D16Y5 engine:

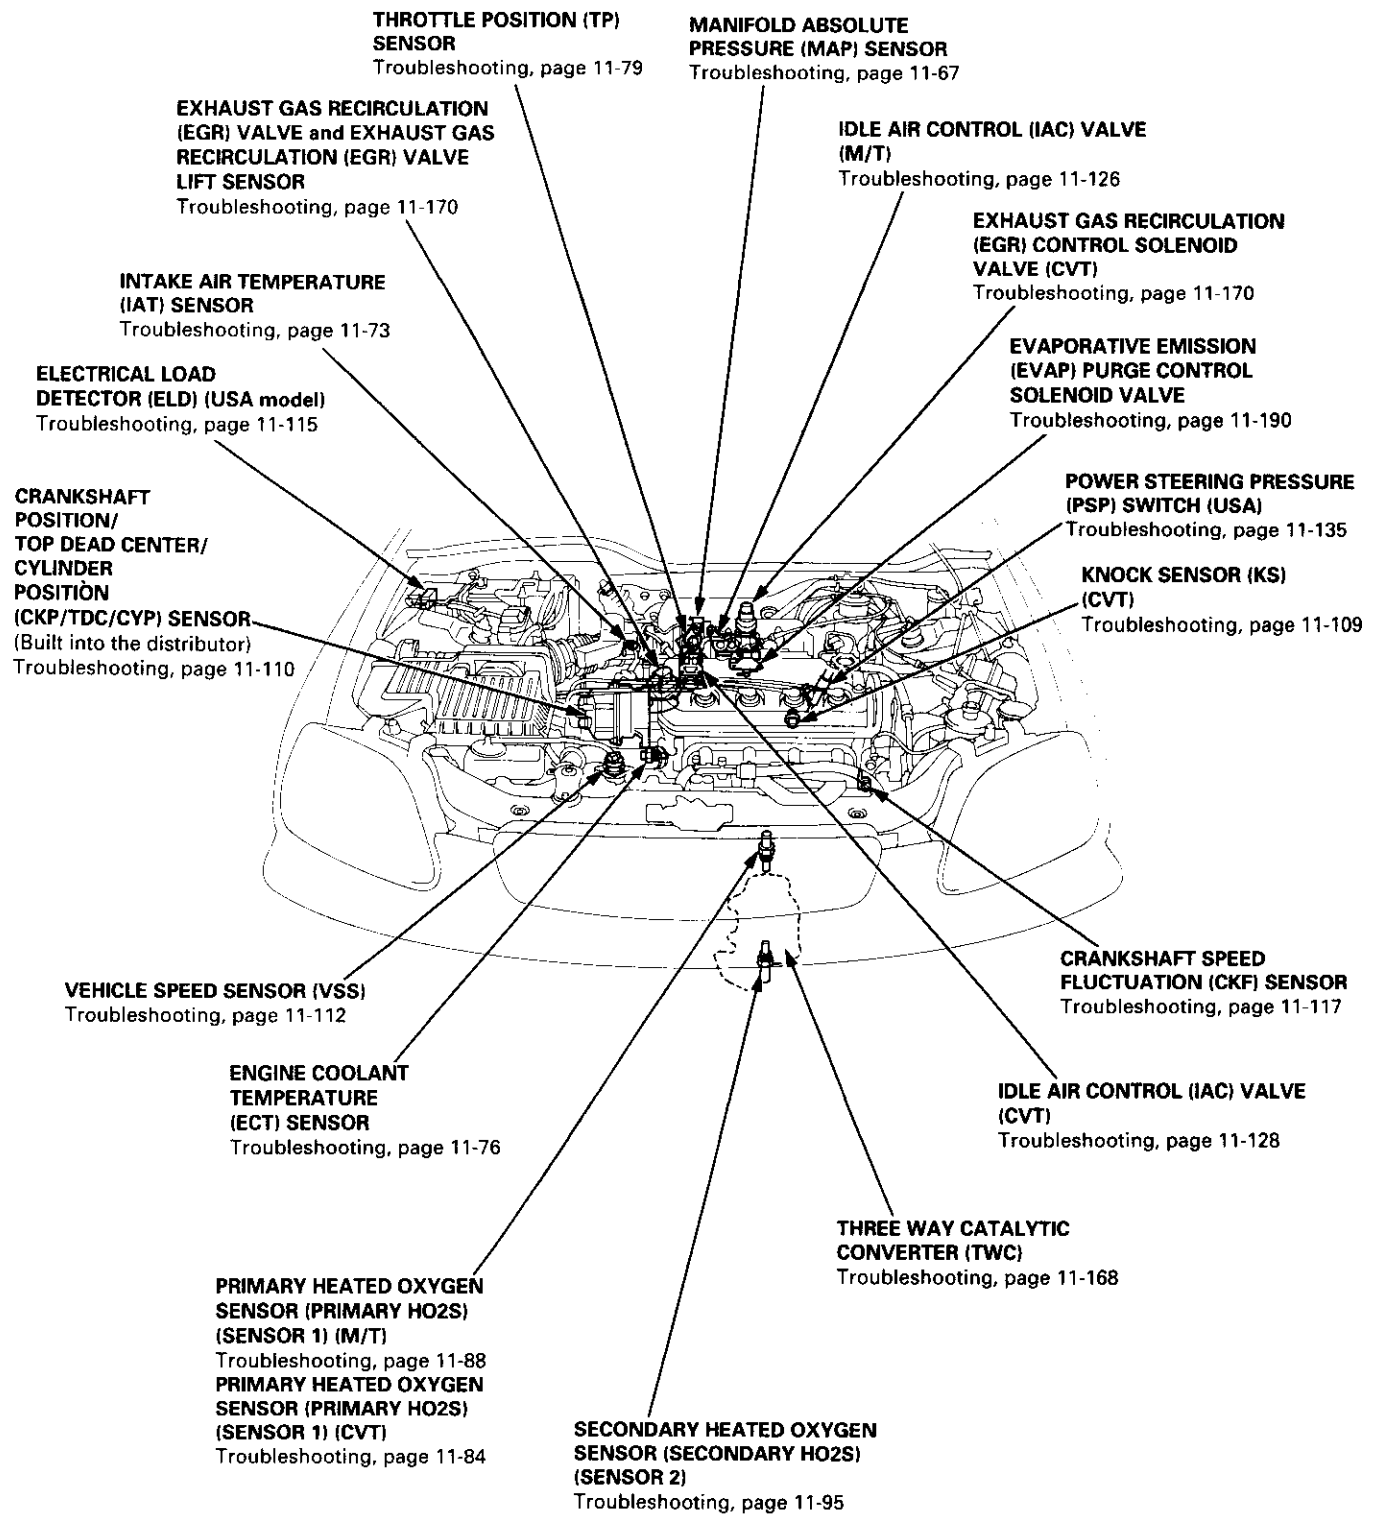


(cont'd)

Component Locations


Index (cont'd)

D16Y8 engine:

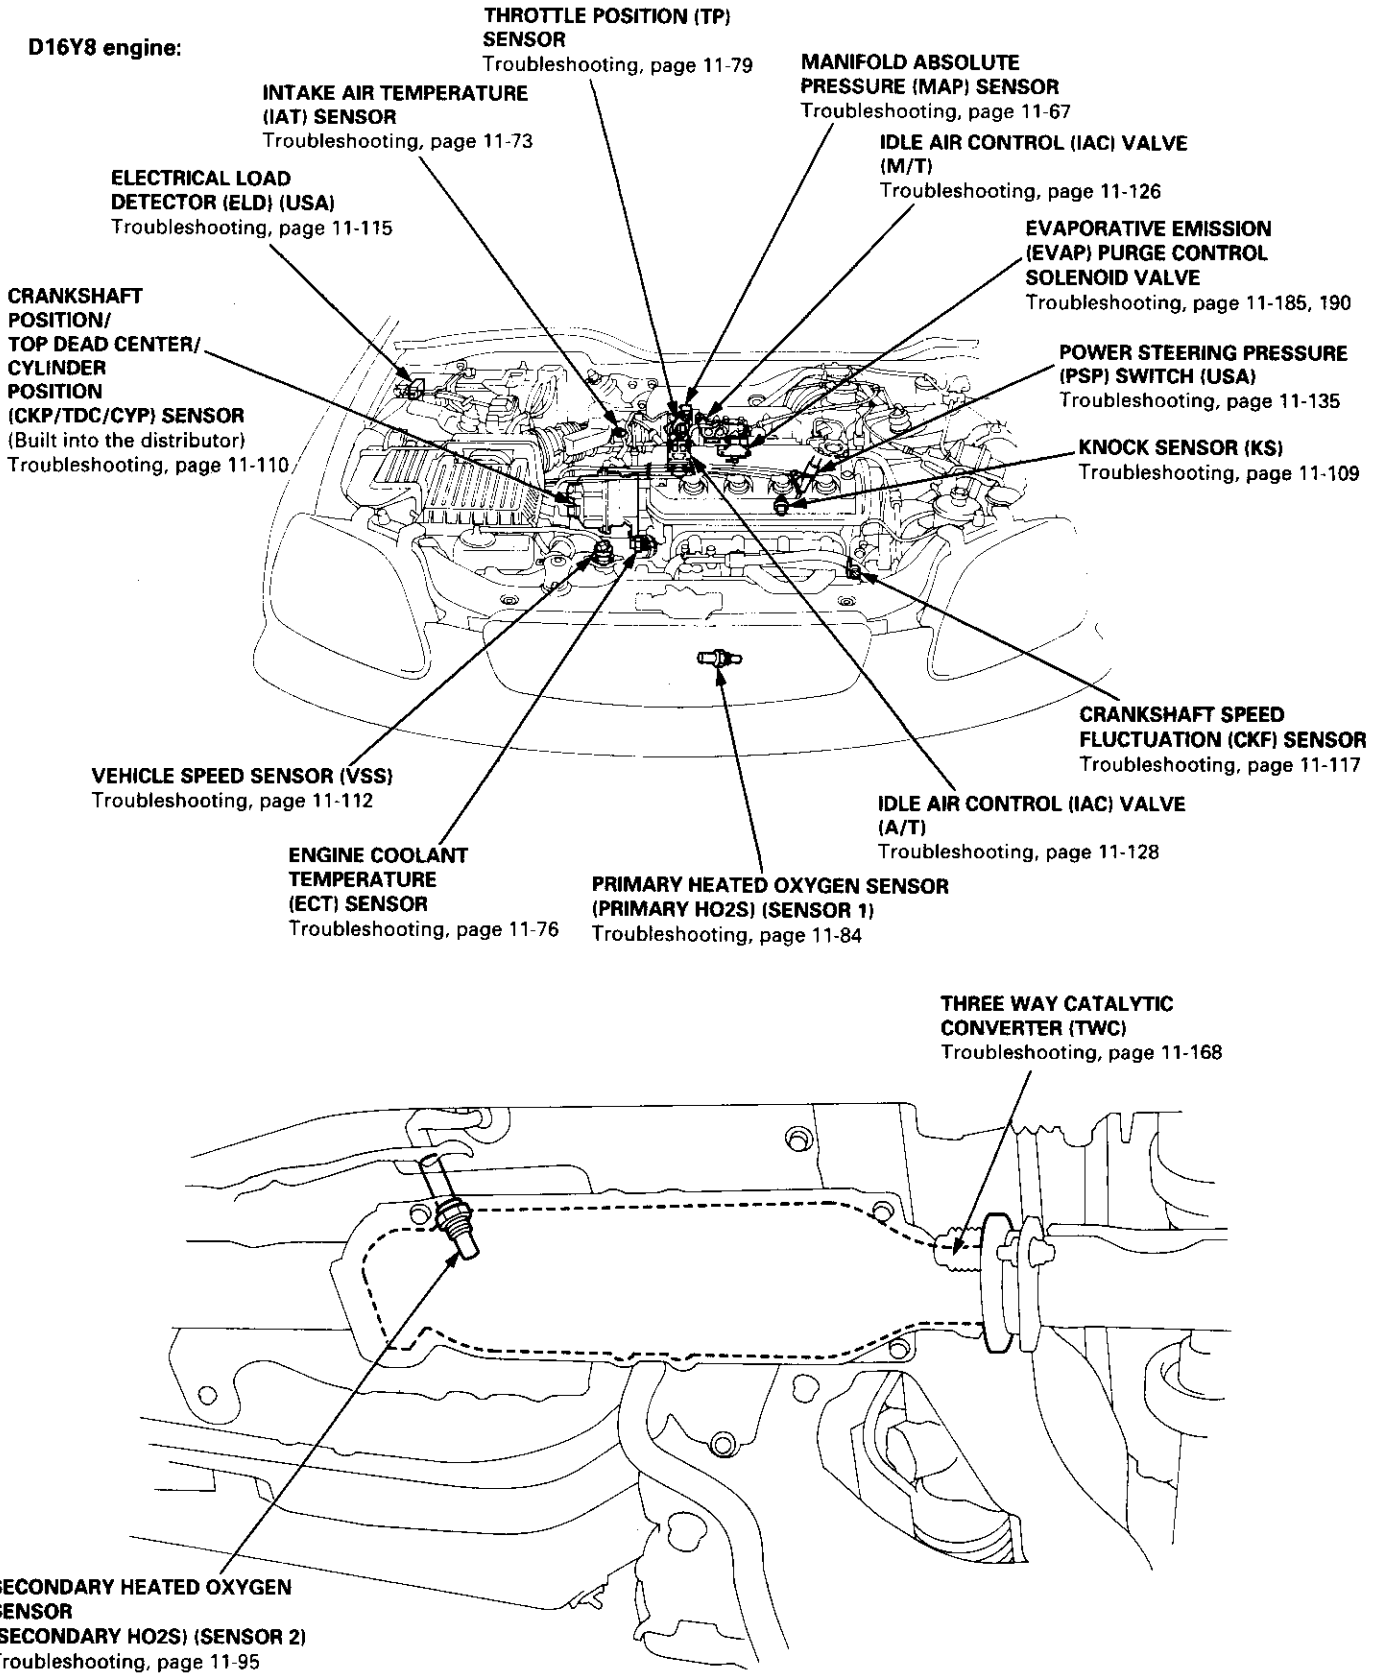




D16Y7 engine:

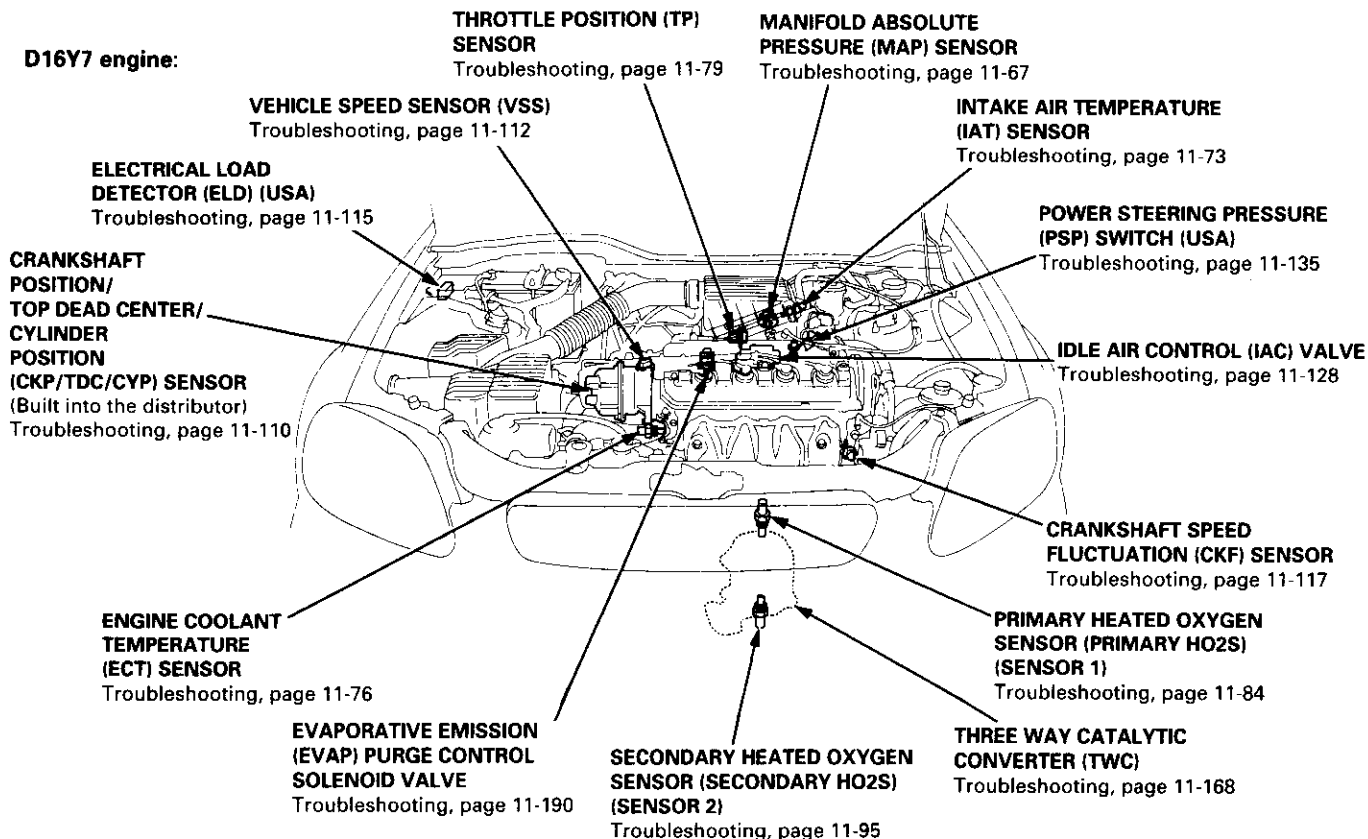


CLUTCH SWITCH (D16Y5 engine M/T)
Troubleshooting, page 11-139

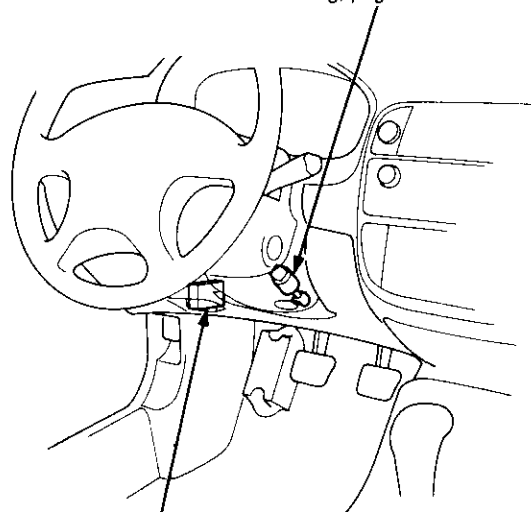

DATA LINK CONNECTOR (DLC) (16P)
Self-diagnostic Procedures, page 11-42

PGM-FI MAIN RELAY
Relay Testing, page 11-157
Troubleshooting, page 11-158

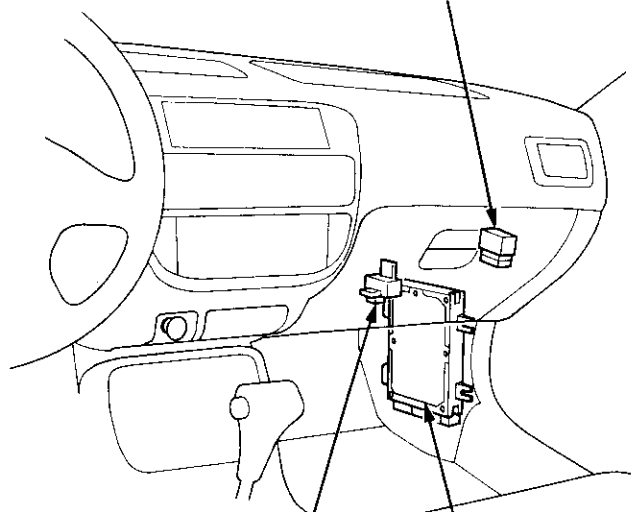

SERVICE CHECK CONNECTOR (2P)
Self-diagnostic Procedures, page 11-42


ENGINE CONTROL MODULE (ECM)/POWERTRAIN CONTROL MODULE (PCM)
Troubleshooting, page 11-63

(cont'd)


Component Locations

Index (cont'd)

'96 D16Y8 engine (coupe),
 '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model),
 '97 D16Y8 engine (coupe: all models, sedan: KL model), '98-all models:

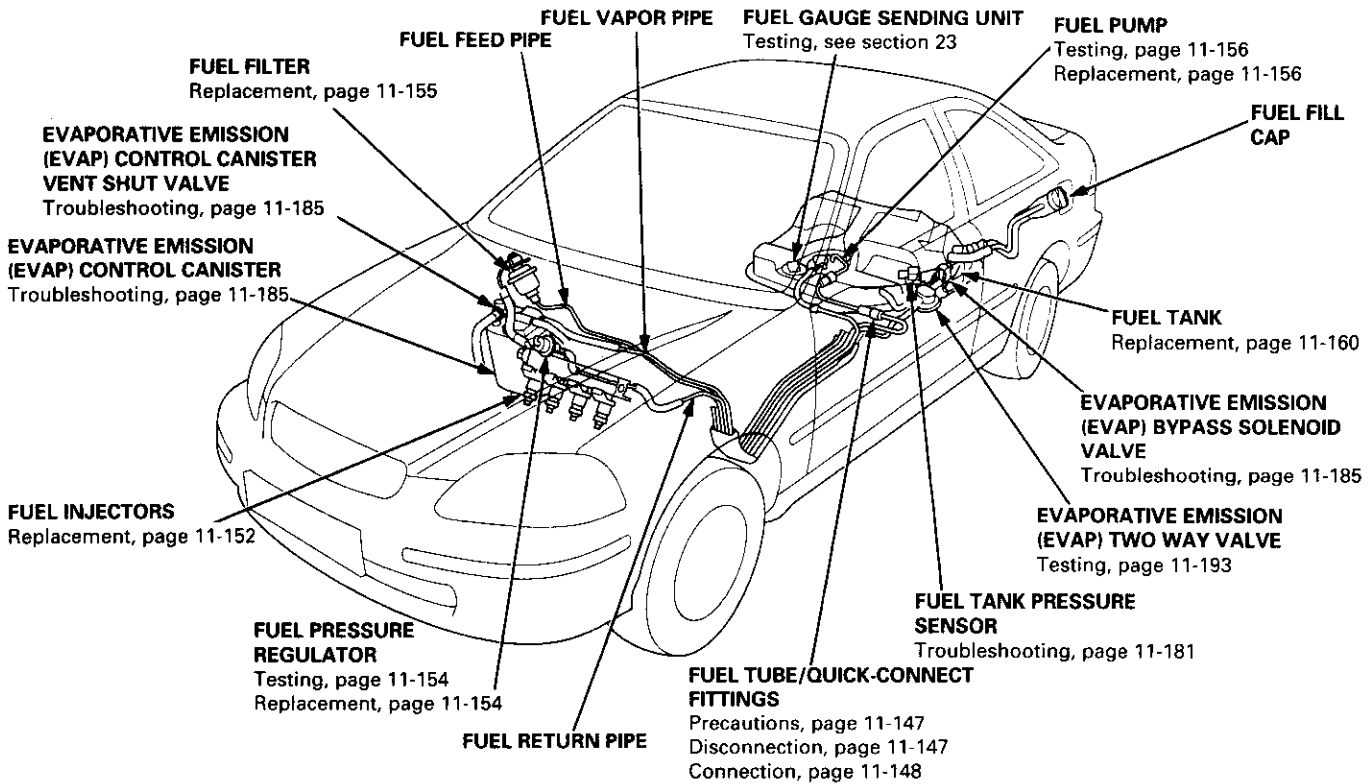


'96 D16Y5 engine, '96 D16Y7 engine, '96 D16Y8 engine (sedan),
 '97 D16Y5 engine, '97 D16Y7 engine (coupe: KA, KC models, sedan: KA, KC, KL (DX) models, hatchback: all models),
 '97 D16Y8 engine (sedan: KA, KC models):

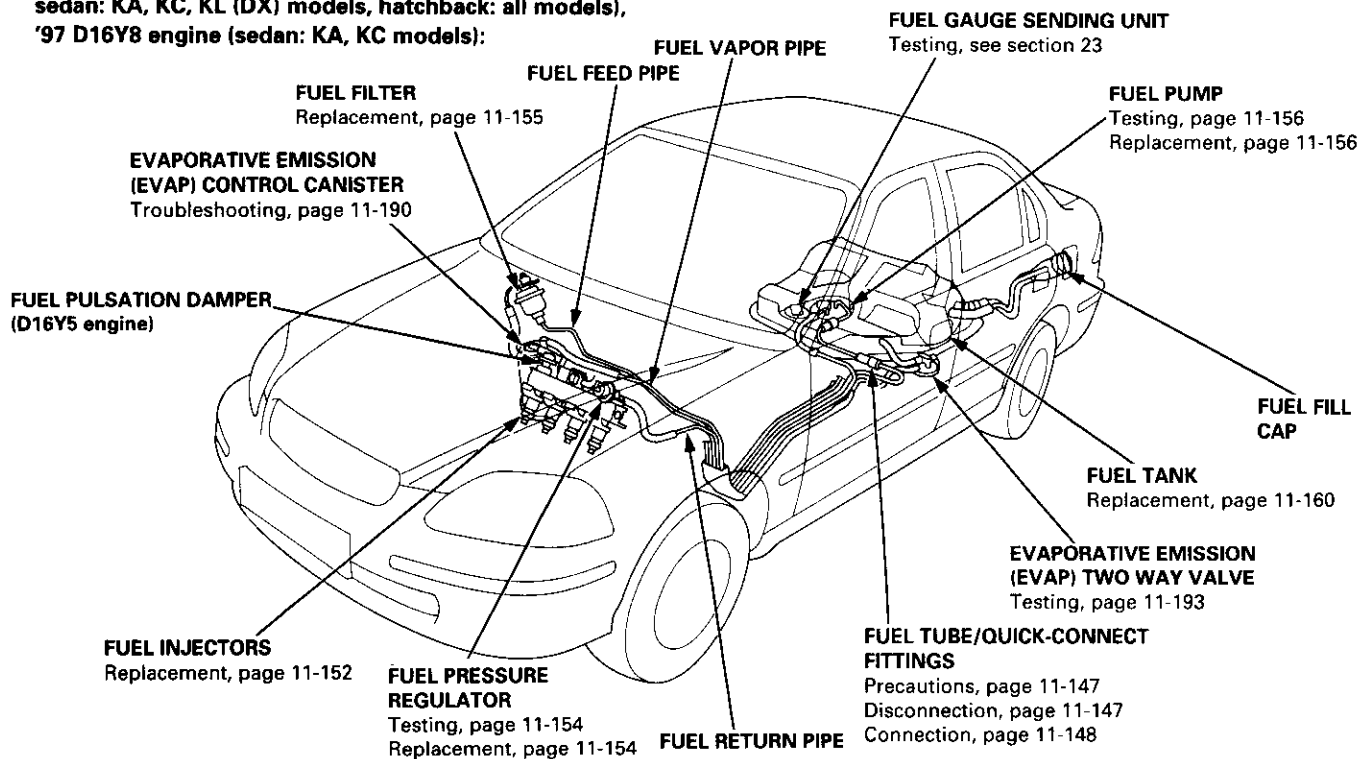




D16Y5, D16Y8 engine:

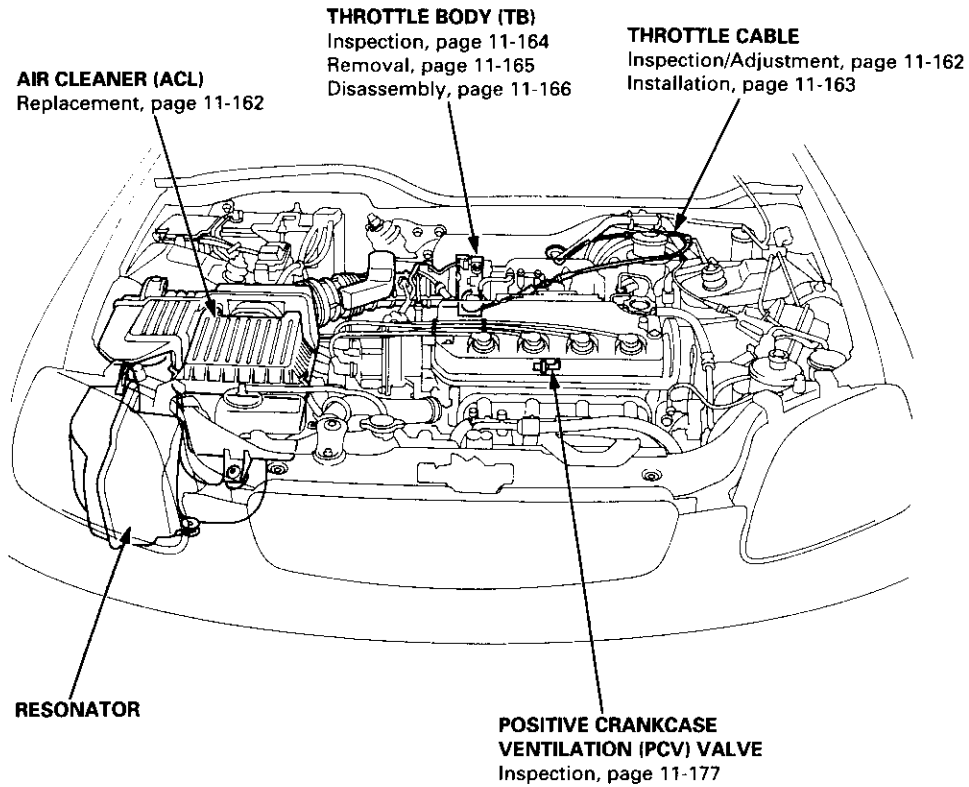


D16Y7 engine:

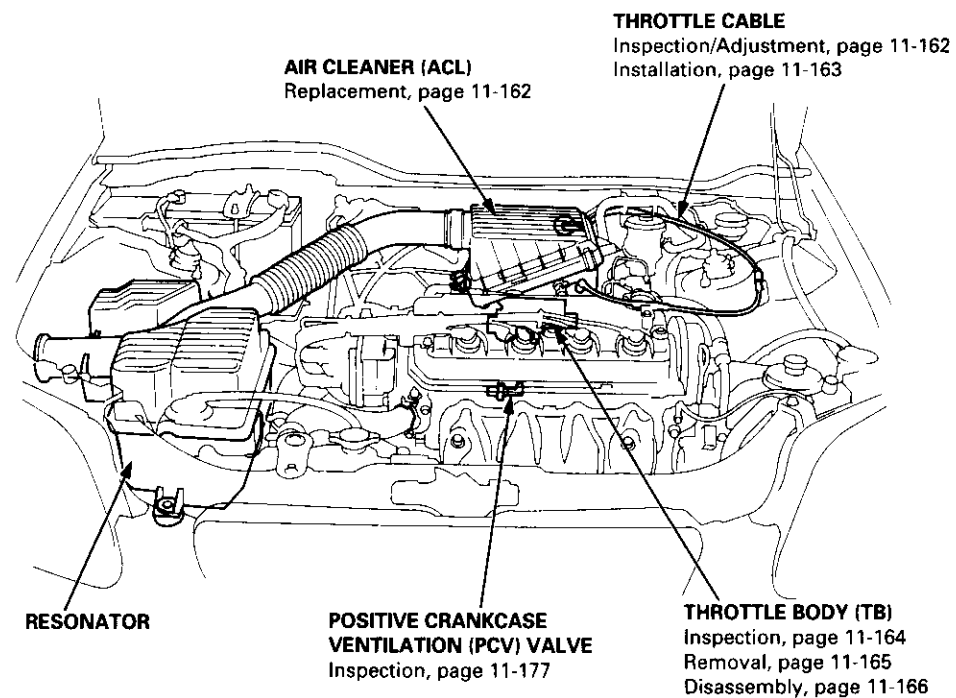

System Description


Vacuum Connections

D16Y5 engine ('96, '97 models):

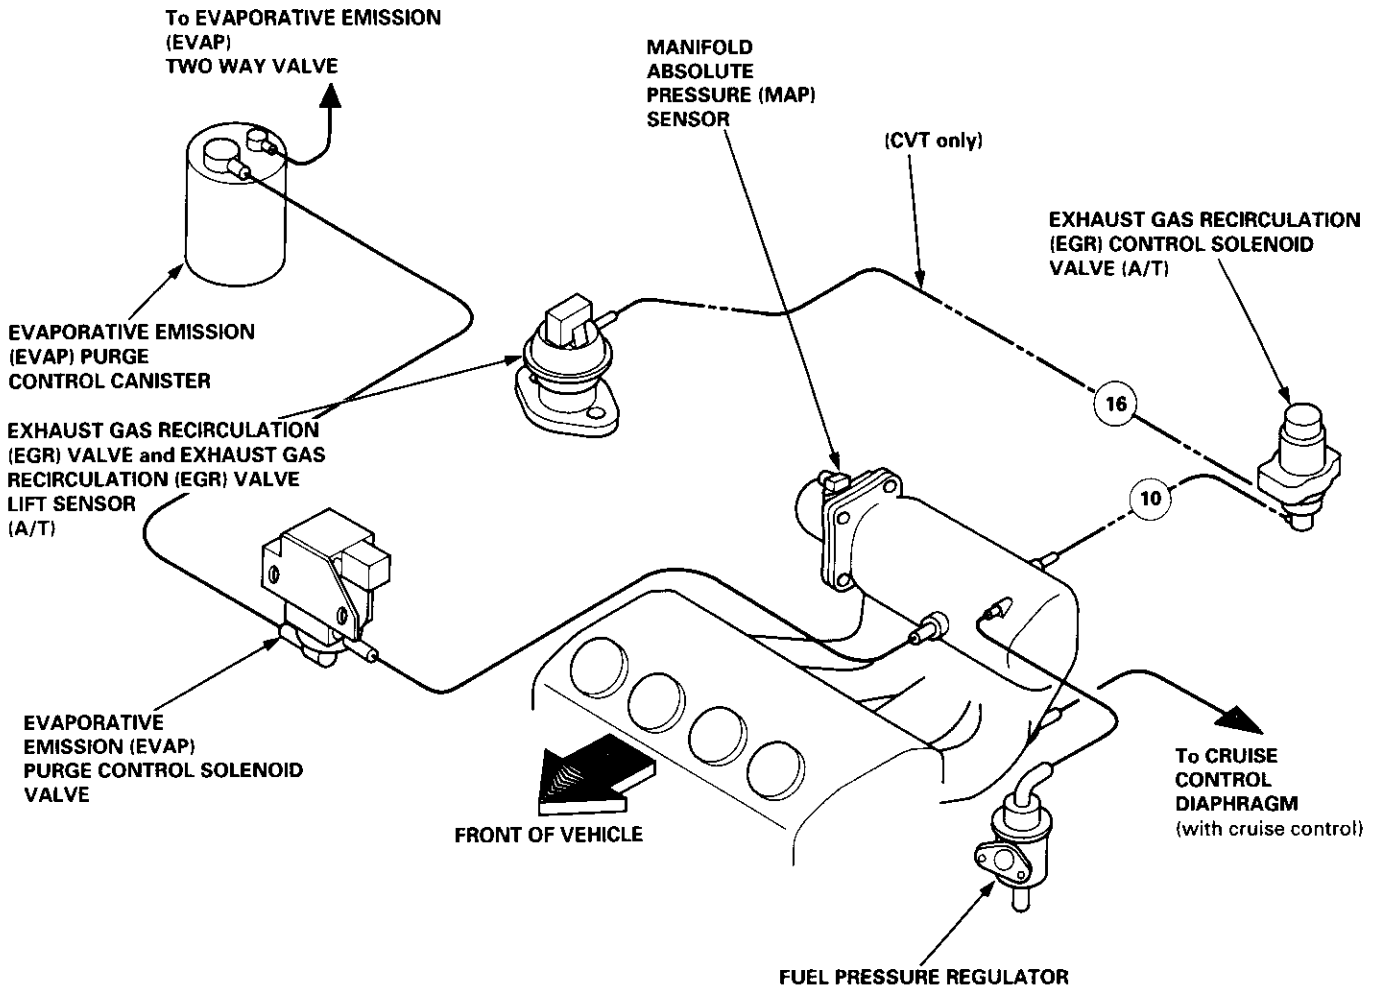



D16Y5 engine ('98 model):

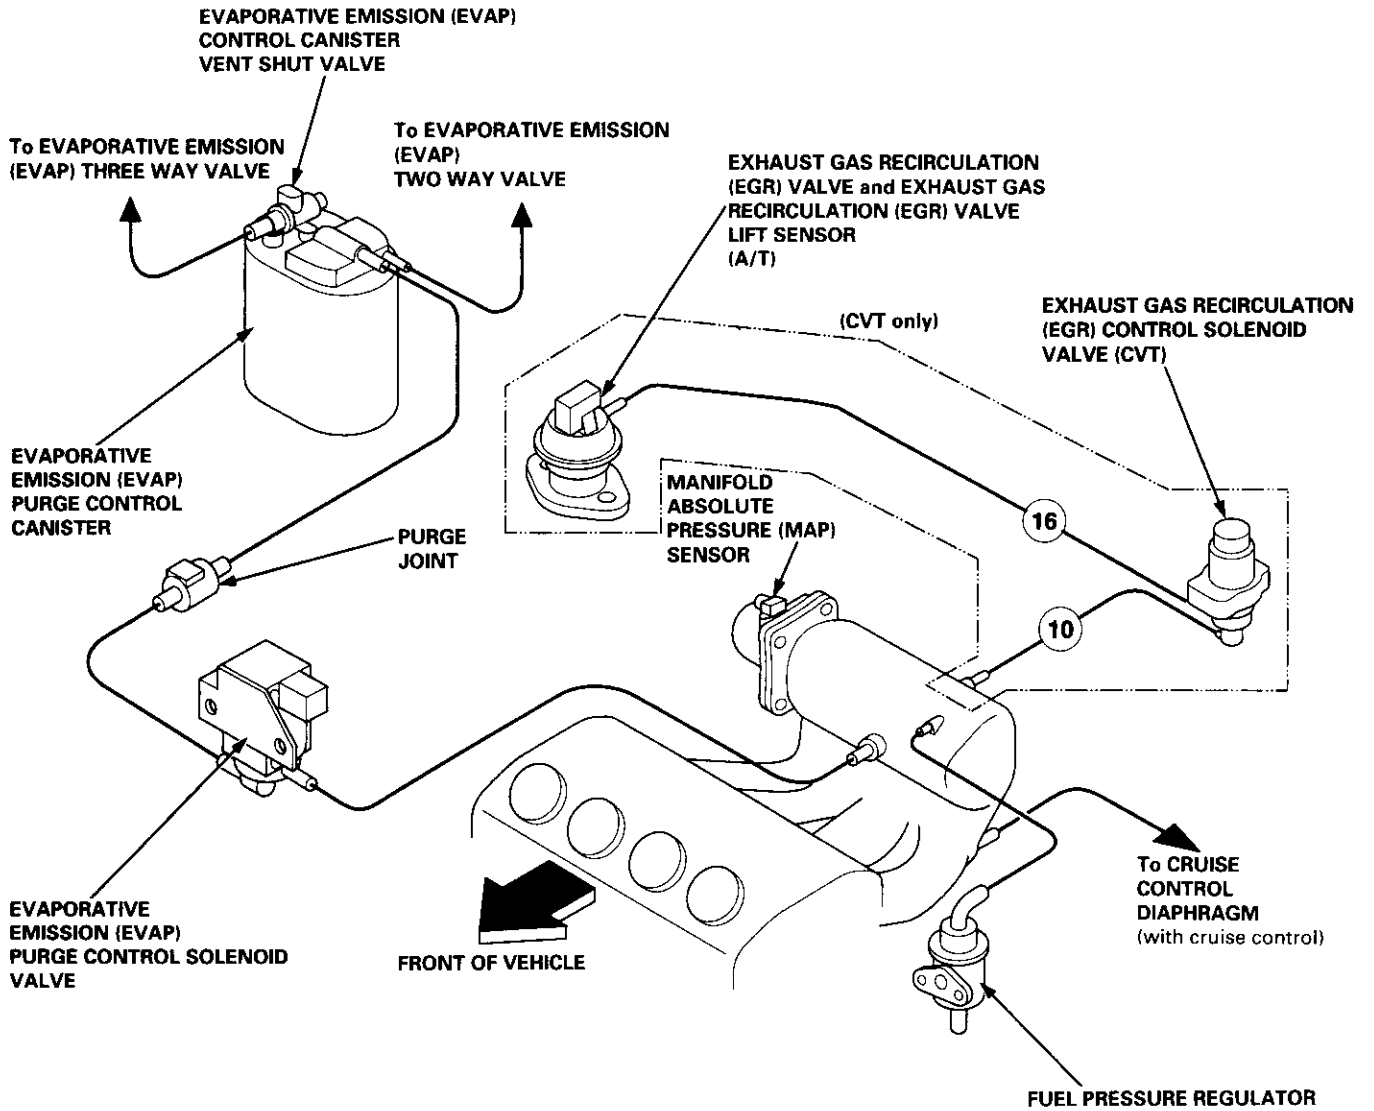


O: Vacuum hose No.

(cont'd)

System Description


Vacuum Connections (cont'd)

D16Y8 engine:

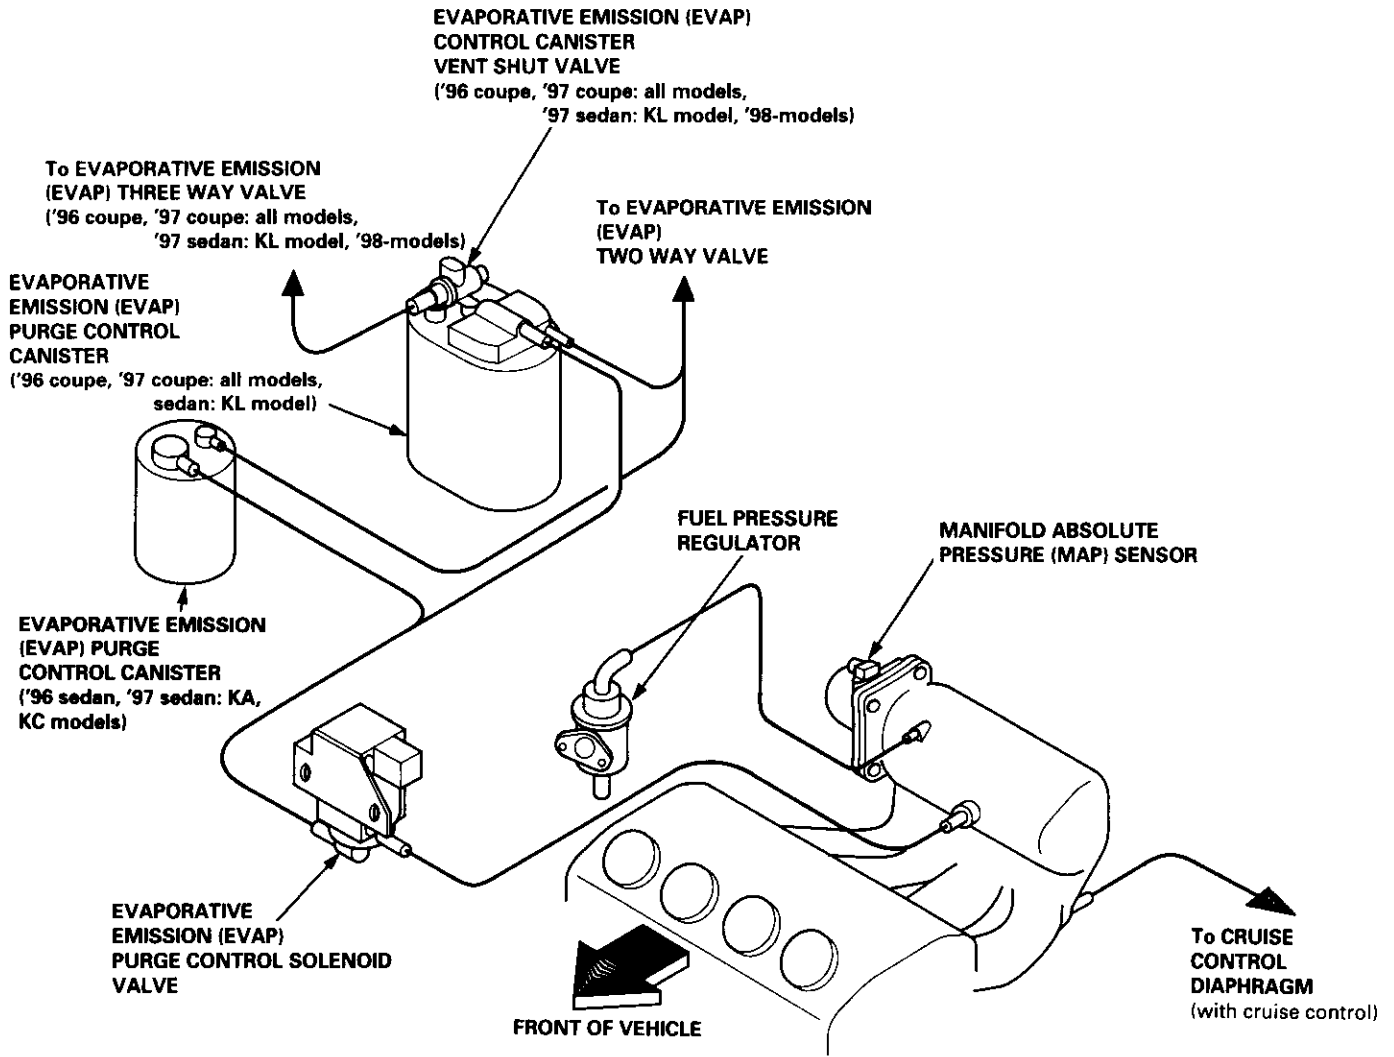



D16Y7 engine ('96 models, '97 coupe: KA, KC models, '97 sedan: KA, KC, KL (DX) models, '97 hatchback: all models):

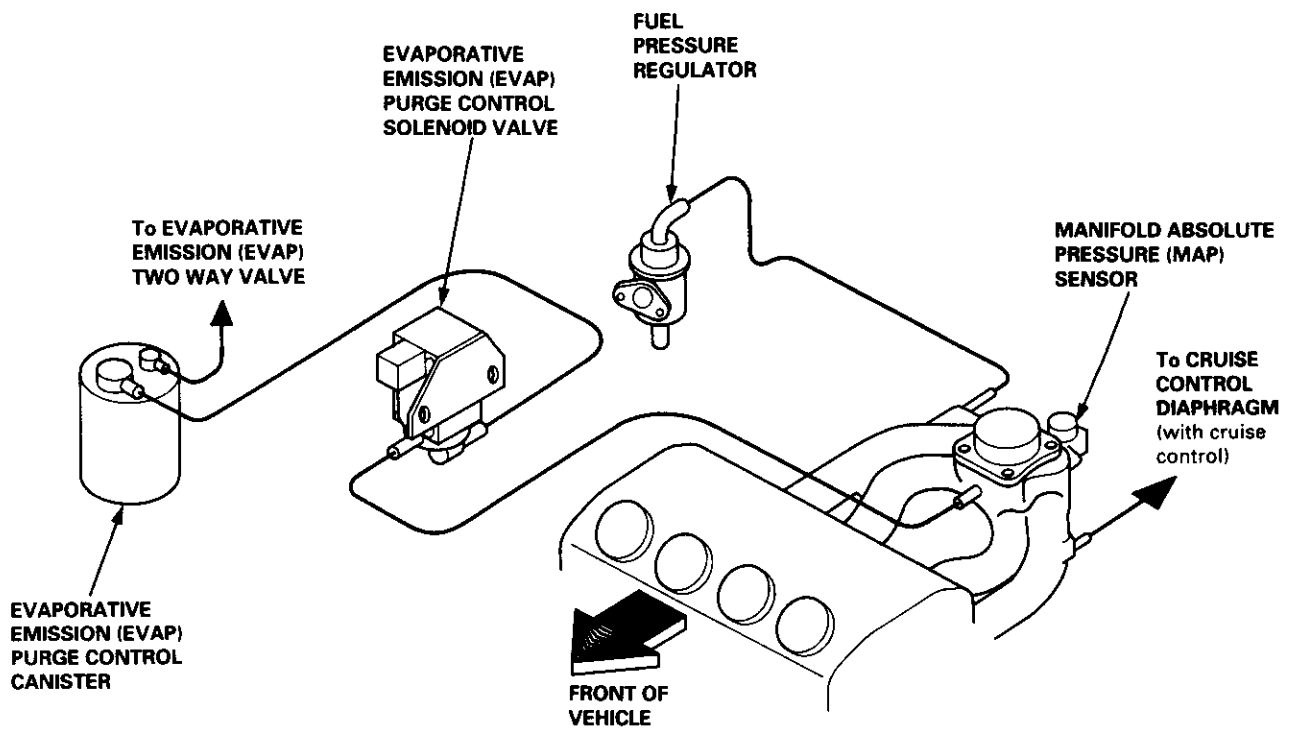


(cont'd)

System Description


Vacuum Connections (cont'd)

D16Y7 engine ('97 coupe: KL model, '97 sedan: KL (LX) model, '98 models):

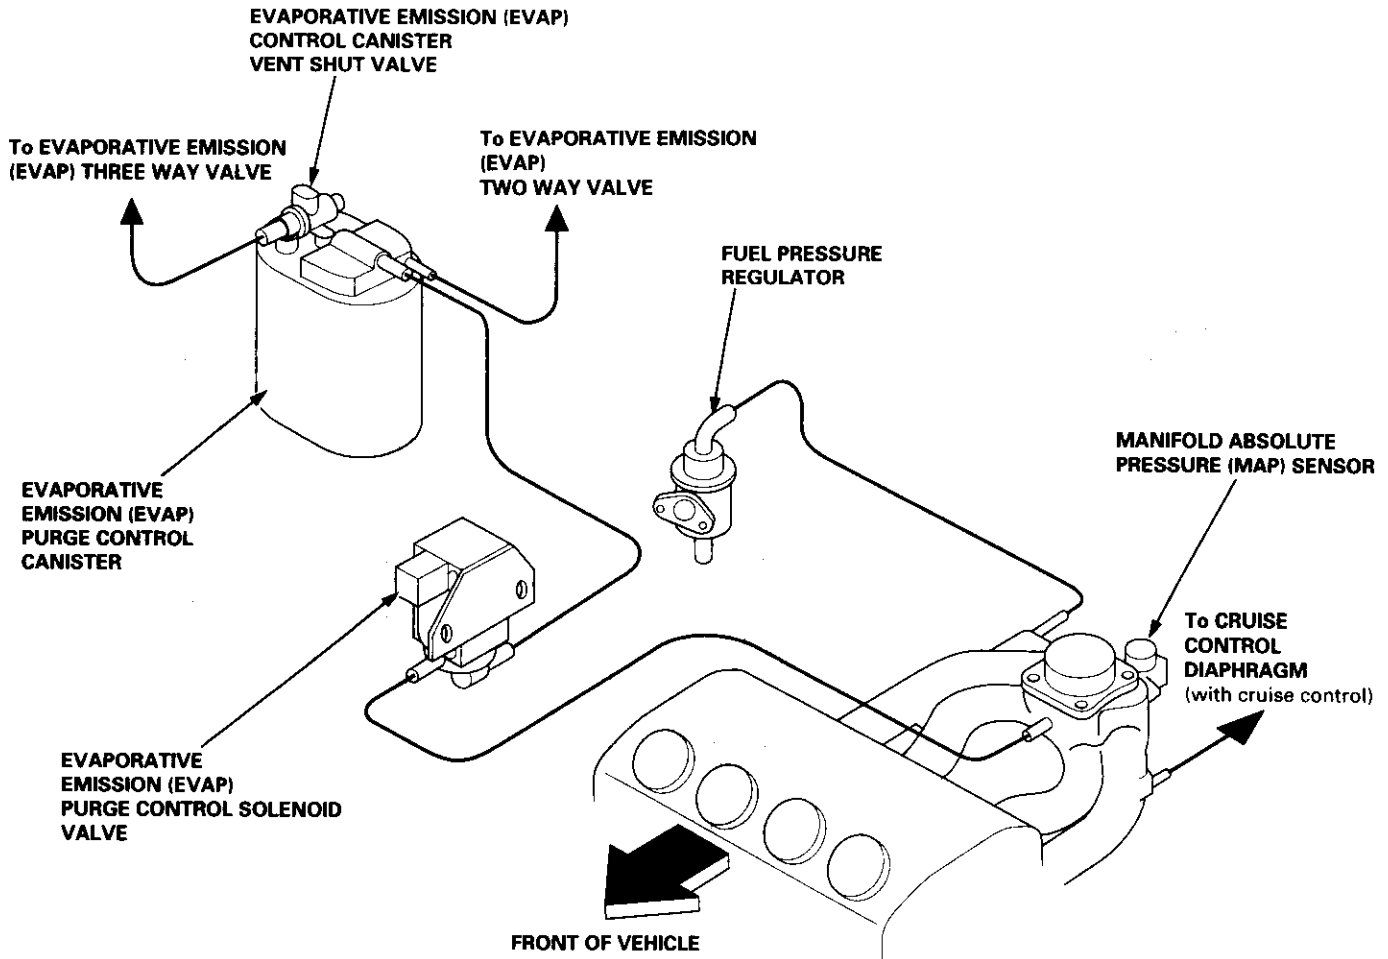



D16Y5 engine ('96, '97 models):

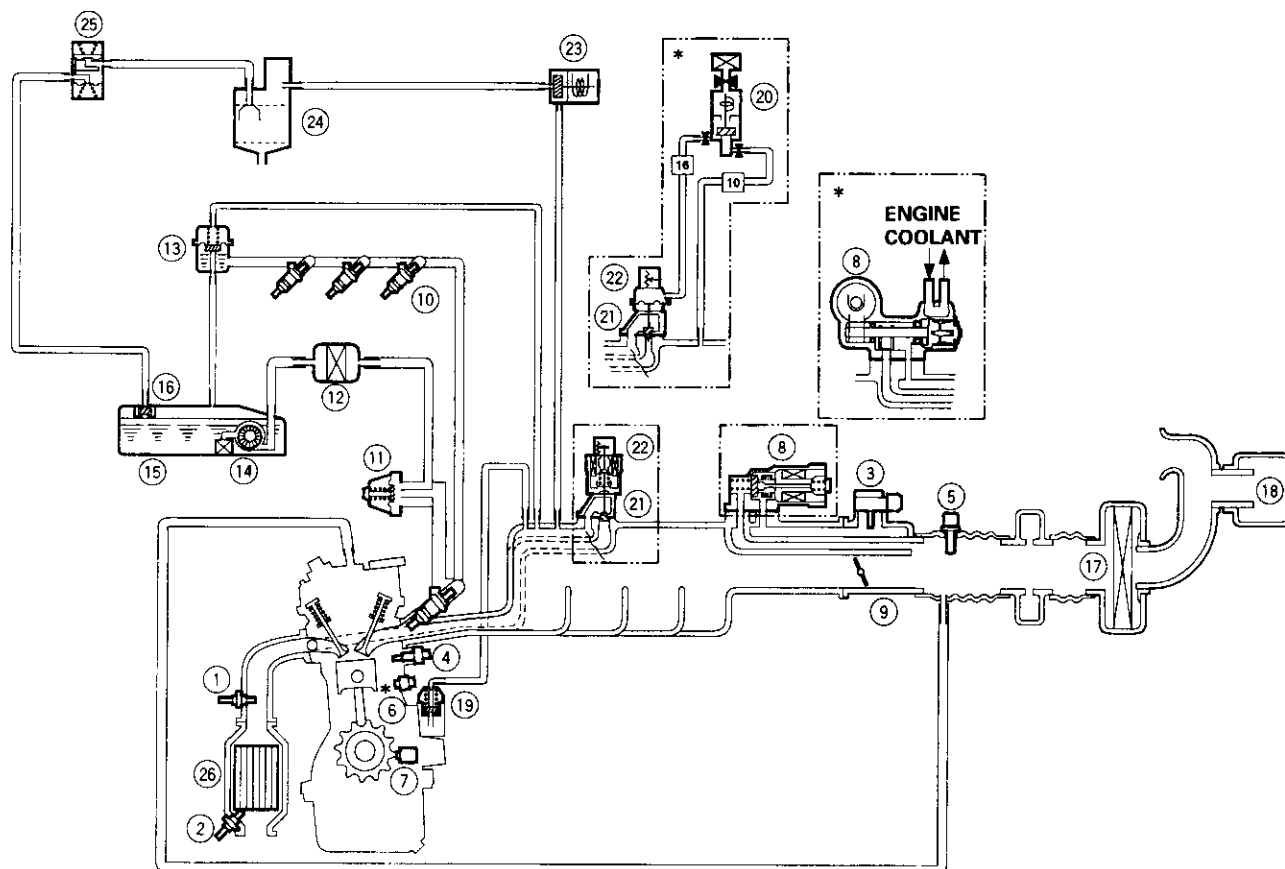

□: Vacuum hose No.
*: CVT only


- | | |
|--|--|
| ① PRIMARY HEATED OXYGEN SENSOR (PRIMARY HO ₂ S, SENSOR 1) | ⑩ FUEL INJECTOR |
| ② SECONDARY HEATED OXYGEN SENSOR (SECONDARY HO ₂ S, SENSOR 2) | ⑪ FUEL PULSATION DAMPER |
| ③ MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR | ⑫ FUEL FILTER |
| ④ ENGINE COOLANT TEMPERATURE (ECT) SENSOR | ⑬ FUEL PRESSURE REGULATOR |
| ⑤ INTAKE AIR TEMPERATURE (IAT) SENSOR | ⑭ FUEL PUMP (FP) |
| ⑥ KNOCK SENSOR (KS) | ⑮ FUEL TANK |
| ⑦ CRANKSHAFT SPEED FLUCTUATION (CKF) SENSOR | ⑯ POSITIVE CRANKCASE VENTILATION (PCV) VALVE |
| ⑧ IDLE AIR CONTROL (IAC) VALVE | ⑰ EXHAUST GAS RECIRCULATION (EGR) CONTROL SOLENOID VALVE |
| ⑨ THROTTLE BODY (TB) | ⑱ EXHAUST GAS RECIRCULATION (EGR) VALVE |
| | ⑲ EXHAUST GAS RECIRCULATION (EGR) VALVE LIFT SENSOR |
| | ⑳ EVAPORATIVE EMISSION (EVAP) PURGE CONTROL SOLENOID VALVE |
| | ㉑ EVAPORATIVE EMISSION (EVAP) CONTROL CANISTER |
| | ㉒ EVAPORATIVE EMISSION (EVAP) TWO WAY VALVE |
| | ㉓ THREE WAY CATALYTIC CONVERTER (TWC) |

(cont'd)

System Description

Vacuum Connections (cont'd)

D16Y5 engine ('98 model):

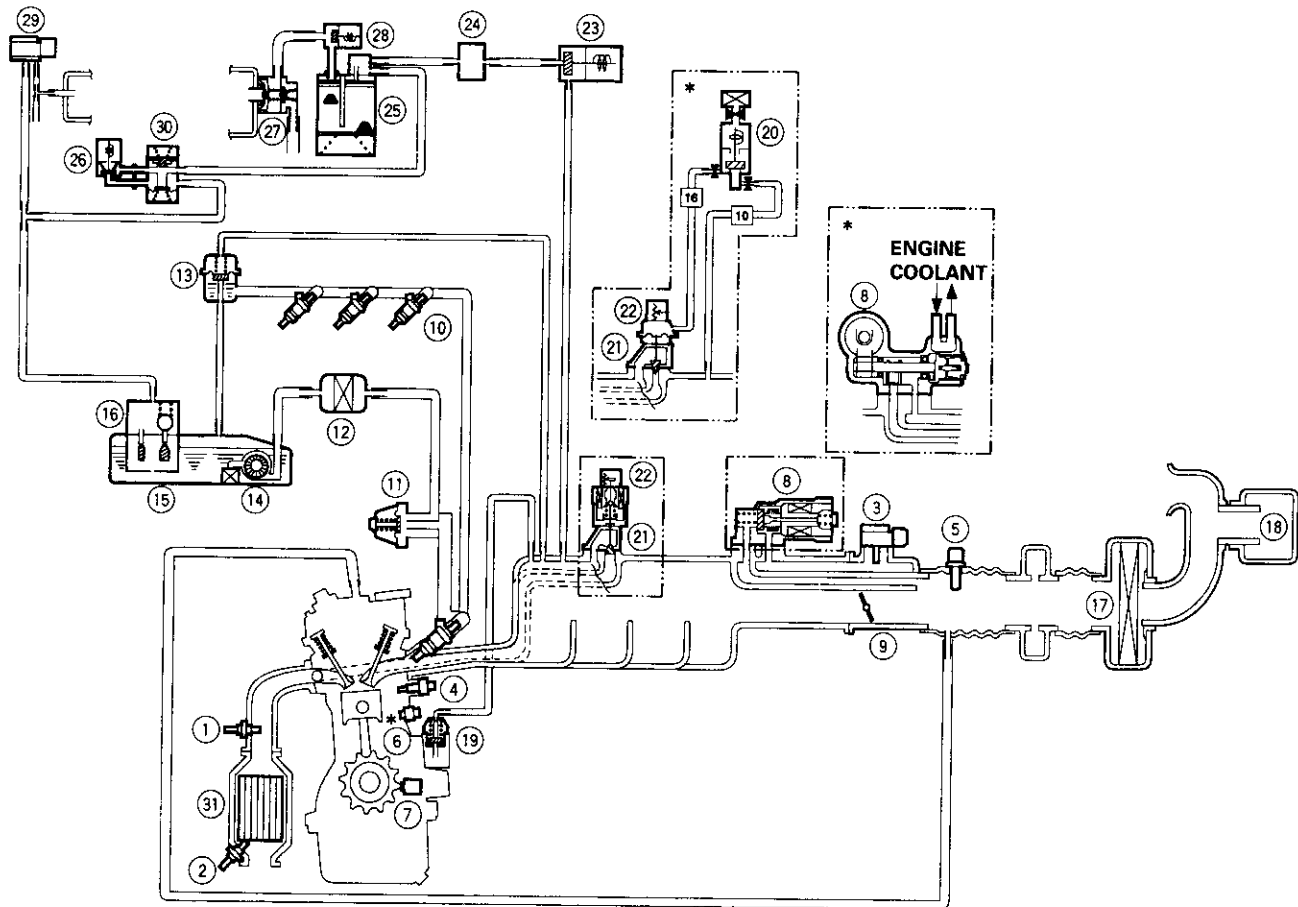


—: Vacuum hose No.
*: CVT only

- | | |
|---|--|
| ① PRIMARY HEATED OXYGEN SENSOR (PRIMARY HO2S, SENSOR 1) | ⑲ POSITIVE CRANKCASE VENTILATION (PCV) VALVE |
| ② SECONDARY HEATED OXYGEN SENSOR (SECONDARY HO2S, SENSOR 2) | ⑳ EXHAUST GAS RECIRCULATION (EGR) CONTROL SOLENOID VALVE |
| ③ MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR | ㉑ EXHAUST GAS RECIRCULATION (EGR) VALVE |
| ④ ENGINE COOLANT TEMPERATURE (ECT) SENSOR | ㉒ EXHAUST GAS RECIRCULATION (EGR) VALVE LIFT SENSOR |
| ⑤ INTAKE AIR TEMPERATURE (IAT) SENSOR | ㉓ EVAPORATIVE EMISSION (EVAP) PURGE CONTROL SOLENOID VALVE |
| ⑥ KNOCK SENSOR (KS) | ㉔ PURGE JOINT |
| ⑦ CRANKSHAFT SPEED FLUCTUATION (CKF) SENSOR | ㉕ EVAPORATIVE EMISSION (EVAP) CONTROL CANISTER |
| ⑧ IDLE AIR CONTROL (IAC) VALVE | ㉖ EVAPORATIVE EMISSION (EVAP) BYPASS SOLENOID VALVE |
| ⑨ THROTTLE BODY (TB) | ㉗ EVAPORATIVE EMISSION (EVAP) THREE WAY VALVE |
| ⑩ FUEL INJECTOR | ㉘ EVAPORATIVE EMISSION (EVAP) CONTROL CANISTER VENT SHUT VALVE |
| ⑪ FUEL PULSATION DAMPER | ㉙ FUEL TANK PRESSURE SENSOR |
| ⑫ FUEL FILTER | ㉚ EVAPORATIVE EMISSION (EVAP) TWO WAY VALVE |
| ⑬ FUEL PRESSURE REGULATOR | ㉛ THREE WAY CATALYTIC CONVERTER (TWC) |
| ⑭ FUEL PUMP (FP) | |
| ⑮ FUEL TANK | |
| ⑯ FUEL TANK EVAPORATIVE EMISSION (EVAP) VALVE | |
| ⑰ AIR CLEANER | |
| ⑱ RESONATOR | |



D16V8 engine ('96 coupe, '97 coupe: all models, '97 sedan: KL model, '98 models):

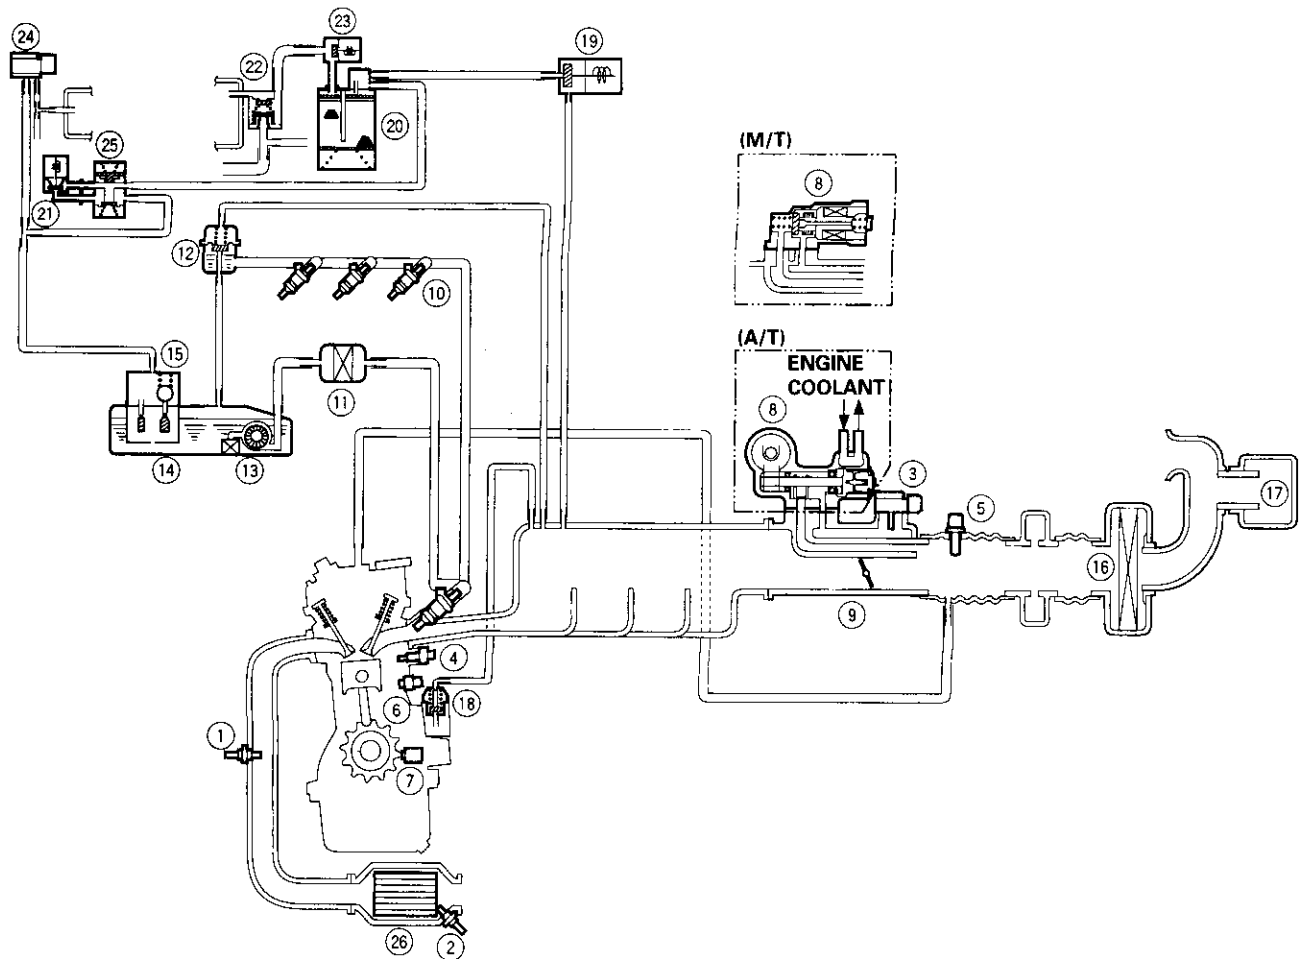


- | | |
|--|--|
| ① PRIMARY HEATED OXYGEN SENSOR (PRIMARY HO ₂ S, SENSOR 1) | ⑩ FUEL INJECTOR |
| ② SECONDARY HEATED OXYGEN SENSOR (SECONDARY HO ₂ S, SENSOR 2) | ⑪ FUEL FILTER |
| ③ MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR | ⑫ FUEL PRESSURE REGULATOR |
| ④ ENGINE COOLANT TEMPERATURE (ECT) SENSOR | ⑬ FUEL PUMP (FP) |
| ⑤ INTAKE AIR TEMPERATURE (IAT) SENSOR | ⑭ FUEL TANK |
| ⑥ KNOCK SENSOR (KS) | ⑮ FUEL TANK EVAPORATIVE EMISSION (EVAP) VALVE |
| ⑦ CRANKSHAFT SPEED FLUCTUATION (CKF) SENSOR | ⑯ AIR CLEANER |
| ⑧ IDLE AIR CONTROL (IAC) VALVE | ⑰ RESONATOR |
| ⑨ THROTTLE BODY (TB) | ⑱ POSITIVE CRANKCASE VENTILATION (PCV) VALVE |
| | ⑲ EVAPORATIVE EMISSION (EVAP) PURGE CONTROL SOLENOID VALVE |
| | ⑳ EVAPORATIVE EMISSION (EVAP) CONTROL CANISTER |
| | ㉑ EVAPORATIVE EMISSION (EVAP) BYPASS SOLENOID VALVE |
| | ㉒ EVAPORATIVE EMISSION (EVAP) THREE WAY VALVE |
| | ㉓ EVAPORATIVE EMISSION (EVAP) CONTROL CANISTER VENT SHUT VALVE |
| | ㉔ FUEL TANK PRESSURE SENSOR |
| | ㉕ EVAPORATIVE EMISSION (EVAP) TWO WAY VALVE |
| | ㉖ THREE WAY CATALYTIC CONVERTER (TWC) |

(cont'd)

System Description

Vacuum Connections (cont'd)

D16Y8 engine ('96 sedan, '97 sedan: KA, KC models):

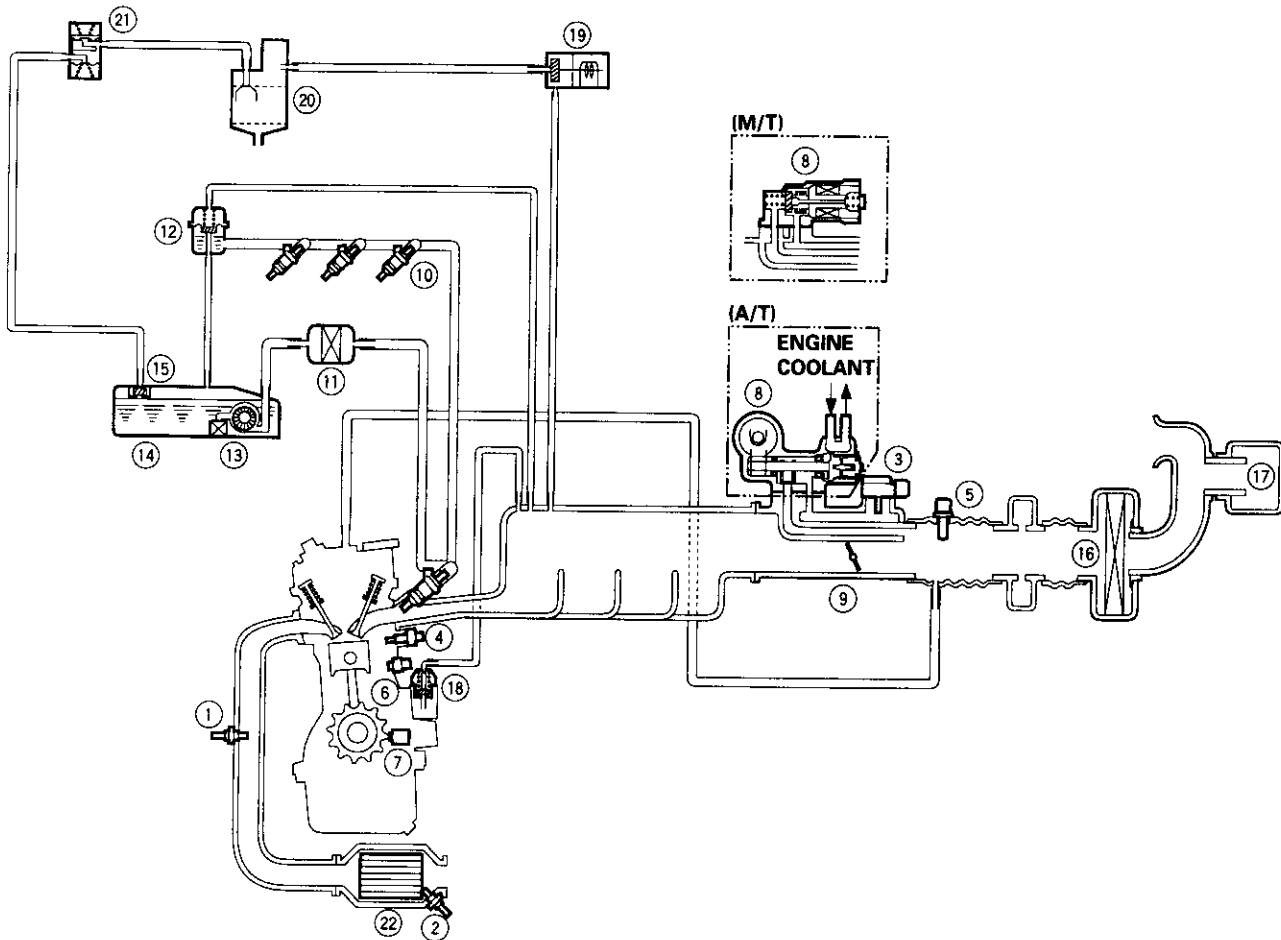


- ① PRIMARY HEATED OXYGEN SENSOR (PRIMARY HO2S, SENSOR 1)
- ② SECONDARY HEATED OXYGEN SENSOR (SECONDARY HO2S, SENSOR 2)
- ③ MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ④ ENGINE COOLANT TEMPERATURE (ECT) SENSOR
- ⑤ INTAKE AIR TEMPERATURE (IAT) SENSOR
- ⑥ KNOCK SENSOR (KS)
- ⑦ CRANKSHAFT SPEED FLUCTUATION (CKF) SENSOR
- ⑧ IDLE AIR CONTROL (IAC) VALVE
- ⑨ THROTTLE BODY (TB)
- ⑩ FUEL INJECTOR
- ⑪ FUEL FILTER

- ⑫ FUEL PRESSURE REGULATOR
- ⑬ FUEL PUMP (FP)
- ⑭ FUEL TANK
- ⑮ FUEL TANK EVAPORATIVE EMISSION (EVAP) VALVE
- ⑯ AIR CLEANER
- ⑰ RESONATOR
- ⑱ POSITIVE CRANKCASE VENTILATION (PCV) VALVE
- ⑲ EVAPORATIVE EMISSION (EVAP) PURGE CONTROL SOLENOID VALVE
- ⑳ EVAPORATIVE EMISSION (EVAP) CONTROL CANISTER
- ㉑ EVAPORATIVE EMISSION (EVAP) TWO WAY VALVE
- ㉒ THREE WAY CATALYTIC CONVERTER (TWC)



D16Y7 engine ('96 models, '97 coupe: KA, KC models, '97 sedan: KA, KC, KL (DX) models, '97 hatchback: all models):

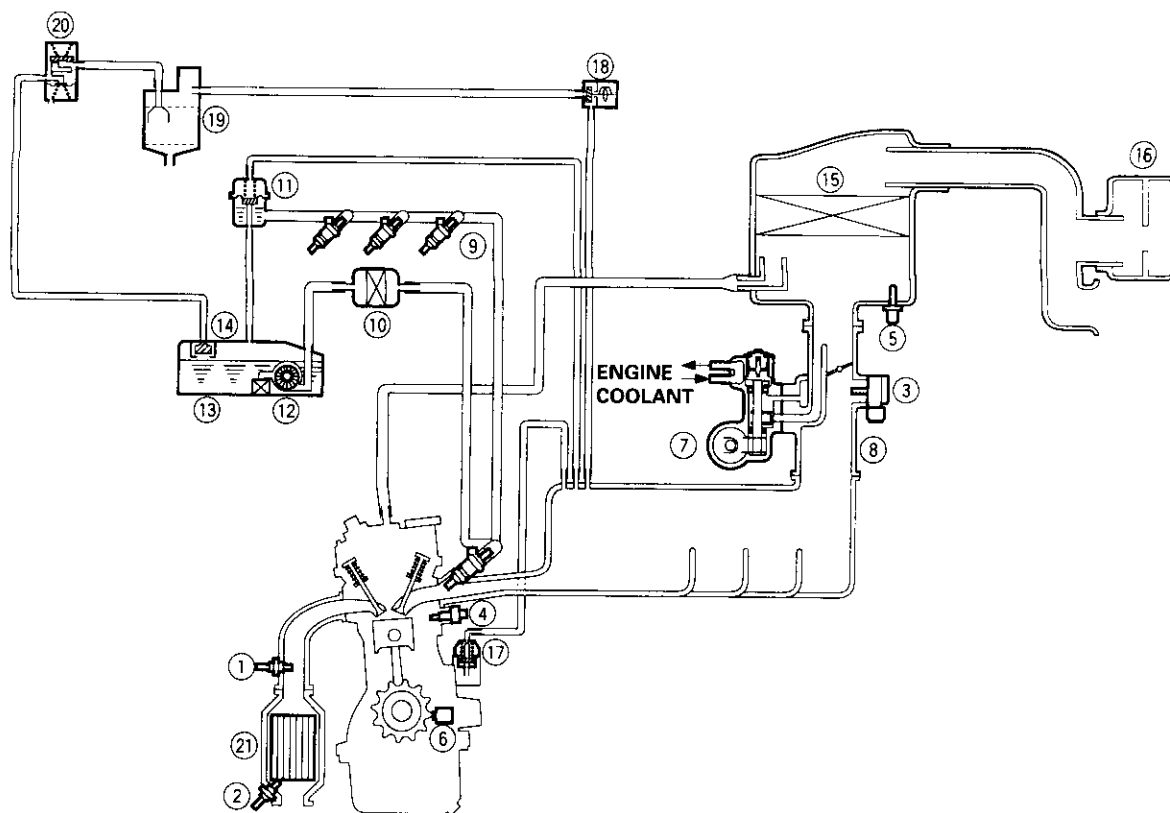

- ① PRIMARY HEATED OXYGEN SENSOR (PRIMARY HO₂S, SENSOR 1)
- ② SECONDARY HEATED OXYGEN SENSOR (SECONDARY HO₂S, SENSOR 2)
- ③ MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ④ ENGINE COOLANT TEMPERATURE (ECT) SENSOR
- ⑤ INTAKE AIR TEMPERATURE (IAT) SENSOR
- ⑥ CRANKSHAFT SPEED FLUCTUATION (CKF) SENSOR
- ⑦ IDLE AIR CONTROL (IAC) VALVE
- ⑧ THROTTLE BODY (TB)
- ⑨ FUEL INJECTOR
- ⑩ FUEL FILTER
- ⑪ FUEL PRESSURE REGULATOR


- ⑫ FUEL PUMP (FP)
- ⑬ FUEL TANK
- ⑭ FUEL TANK EVAPORATIVE EMISSION (EVAP) VALVE
- ⑮ AIR CLEANER
- ⑯ RESONATOR
- ⑰ POSITIVE CRANKCASE VENTILATION (PCV) VALVE
- ⑱ EVAPORATIVE EMISSION (EVAP) PURGE CONTROL SOLENOID VALVE
- ⑲ EVAPORATIVE EMISSION (EVAP) CONTROL CANISTER
- ⑳ EVAPORATIVE EMISSION (EVAP) TWO WAY VALVE
- ㉑ THREE WAY CATALYTIC CONVERTER (TWC)

(cont'd)

System Description

Vacuum Connections (cont'd)


D16Y7 engine ('97 coupe: KL model, sedan: KL (LX) model, '98-models):

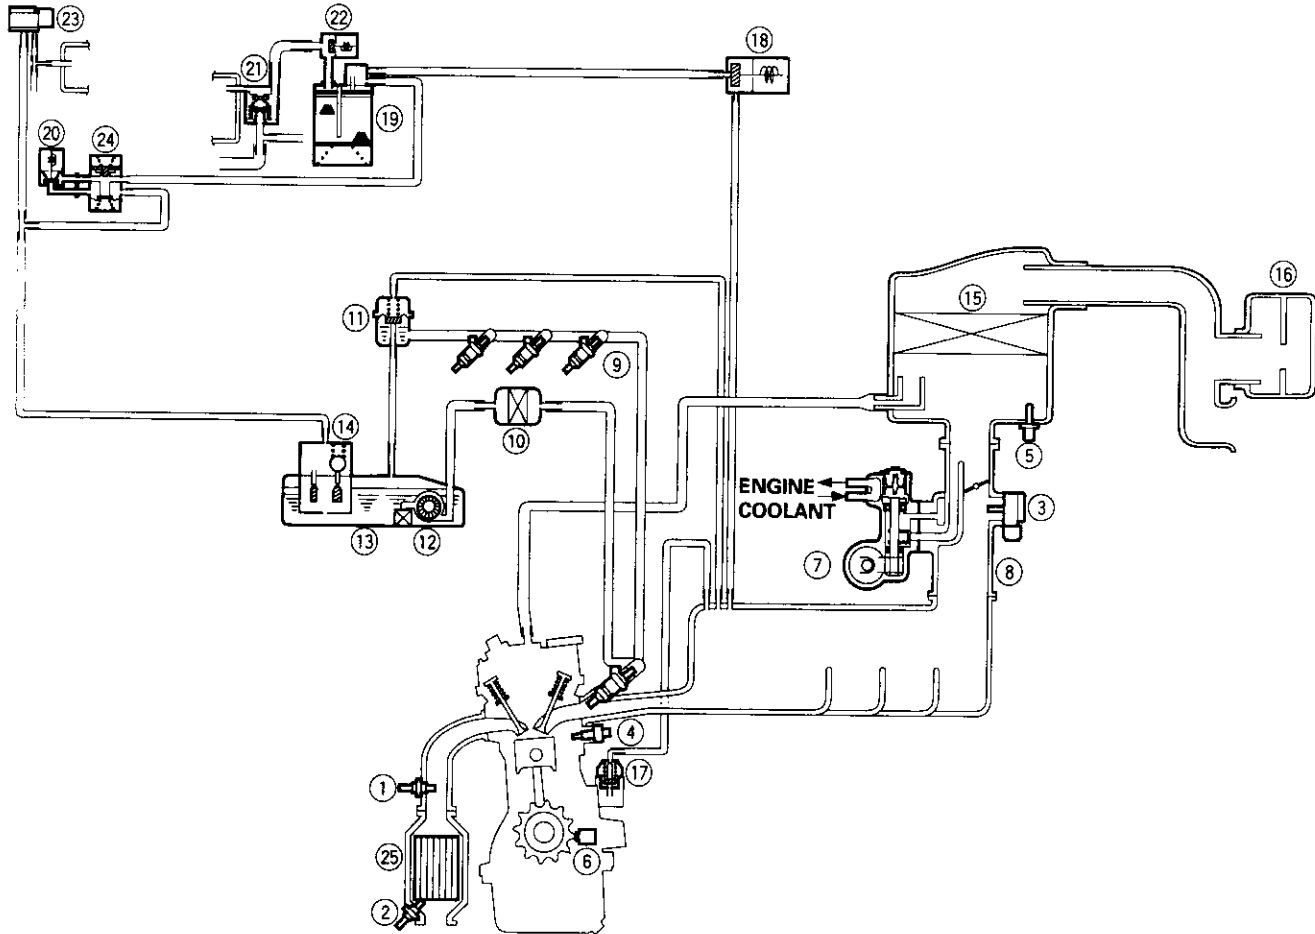

- | | | |
|--|---|--|
| ① PRIMARY HEATED OXYGEN SENSOR (PRIMARY HO ₂ S, SENSOR 1) | ⑬ FUEL TANK | ⑮ RESONATOR |
| ② SECONDARY HEATED OXYGEN SENSOR (SECONDARY HO ₂ S, SENSOR 2) | ⑭ FUEL TANK EVAPORATIVE EMISSION (EVAP) VALVE | ⑯ POSITIVE CRANKCASE VENTILATION (PCV) VALVE |
| ③ MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR | ⑮ AIR CLEANER | ⑰ EVAPORATIVE EMISSION (EVAP) PURGE CONTROL SOLENOID VALVE |
| ④ ENGINE COOLANT TEMPERATURE (ECT) SENSOR | | ⑱ EVAPORATIVE EMISSION (EVAP) CONTROL CANISTER |
| ⑤ INTAKE AIR TEMPERATURE (IAT) SENSOR | | ⑳ EVAPORATIVE EMISSION (EVAP) BYPASS SOLENOID VALVE |
| ⑥ CRANKSHAFT SPEED FLUCTUATION (CKF) SENSOR | | ㉑ EVAPORATIVE EMISSION (EVAP) THREE WAY VALVE |
| ⑦ IDLE AIR CONTROL (IAC) VALVE | | ㉒ EVAPORATIVE EMISSION (EVAP) CONTROL CANISTER VENT SHUT VALVE |
| ⑧ THROTTLE BODY (TB) | | ㉓ FUEL TANK PRESSURE SENSOR |
| ⑨ FUEL INJECTOR | | ㉔ EVAPORATIVE EMISSION (EVAP) TWO WAY VALVE |
| ⑩ FUEL FILTER | | ㉕ THREE WAY CATALYTIC CONVERTER (TWC) |
| ⑪ FUEL PRESSURE REGULATOR | | |
| ⑫ FUEL PUMP (FP) | | |
| ⑬ FUEL TANK | | |
| ⑭ FUEL TANK EVAPORATIVE EMISSION (EVAP) VALVE | | |
| ⑮ AIR CLEANER | | |



Electrical Connections

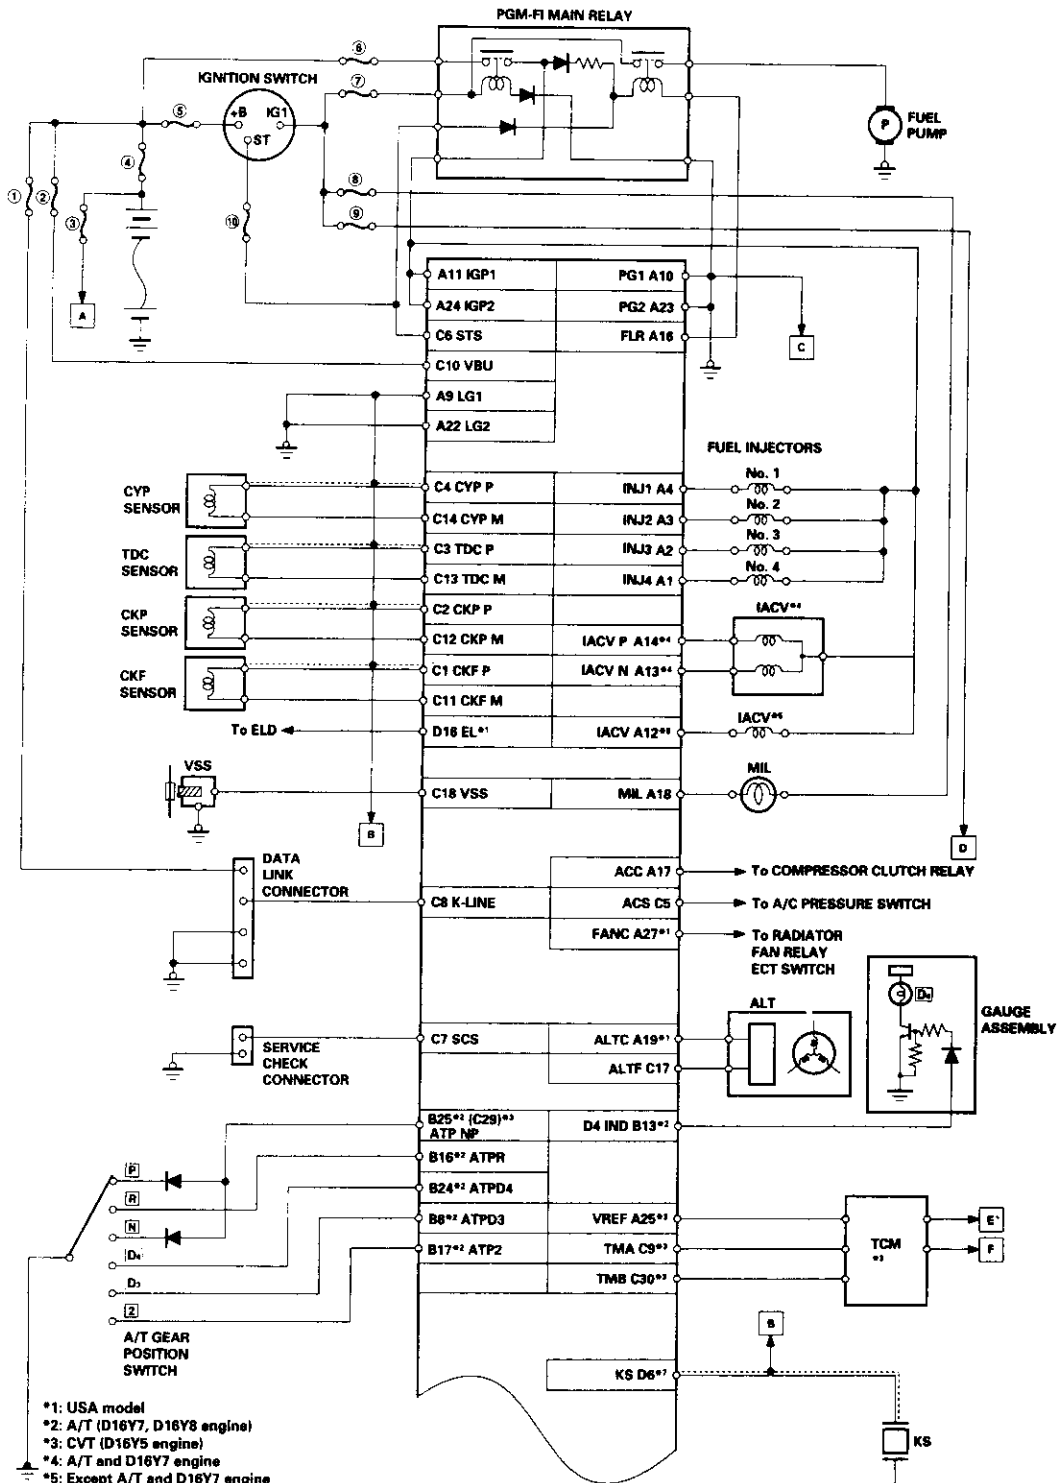

- *1: USA model
- *2: A/T (D16Y7, D16Y8 engine)
- *3: CVT (D16Y5 engine)
- *4: A/T and D16Y7 engine
- *5: Except A/T and D16Y7 engine
- *6: A/T (D16Y8 engine)
- *7: CVT (D16Y5 engine) and D16Y8 engine
- *8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine
- *9: D16Y5 engine
- *10: M/T (D16Y5 engine)
- *11: Except M/T (D16Y5 engine)
- *12: D16Y5, D16Y8 engine
- *13: D16Y8 engine
- *14: D16Y7 engine
- *15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98 D16Y7 engine

- FUSES:
- ① INTERIOR LIGHT (7.5 A)*
 - ② BACK UP (7.5 A)*
 - ③ HORN (15 A)*
 - ④ BATTERY (80 A)*
 - ⑤ IG1 (40 A)*


- ⑥ F/E/M (15 A)*
- ⑦ No. 13 FUEL PUMP (15 A)
- ⑧ No. 25 METER (7.5 A)
- ⑨ No. 15 ALTERNATOR SP SENSOR (7.5 A)
- ⑩ No. 31 STARTER SIGNAL (7.5 A)

*: In the under-hood fuse/relay box


(cont'd)

System Description


Electrical Connections (cont'd)

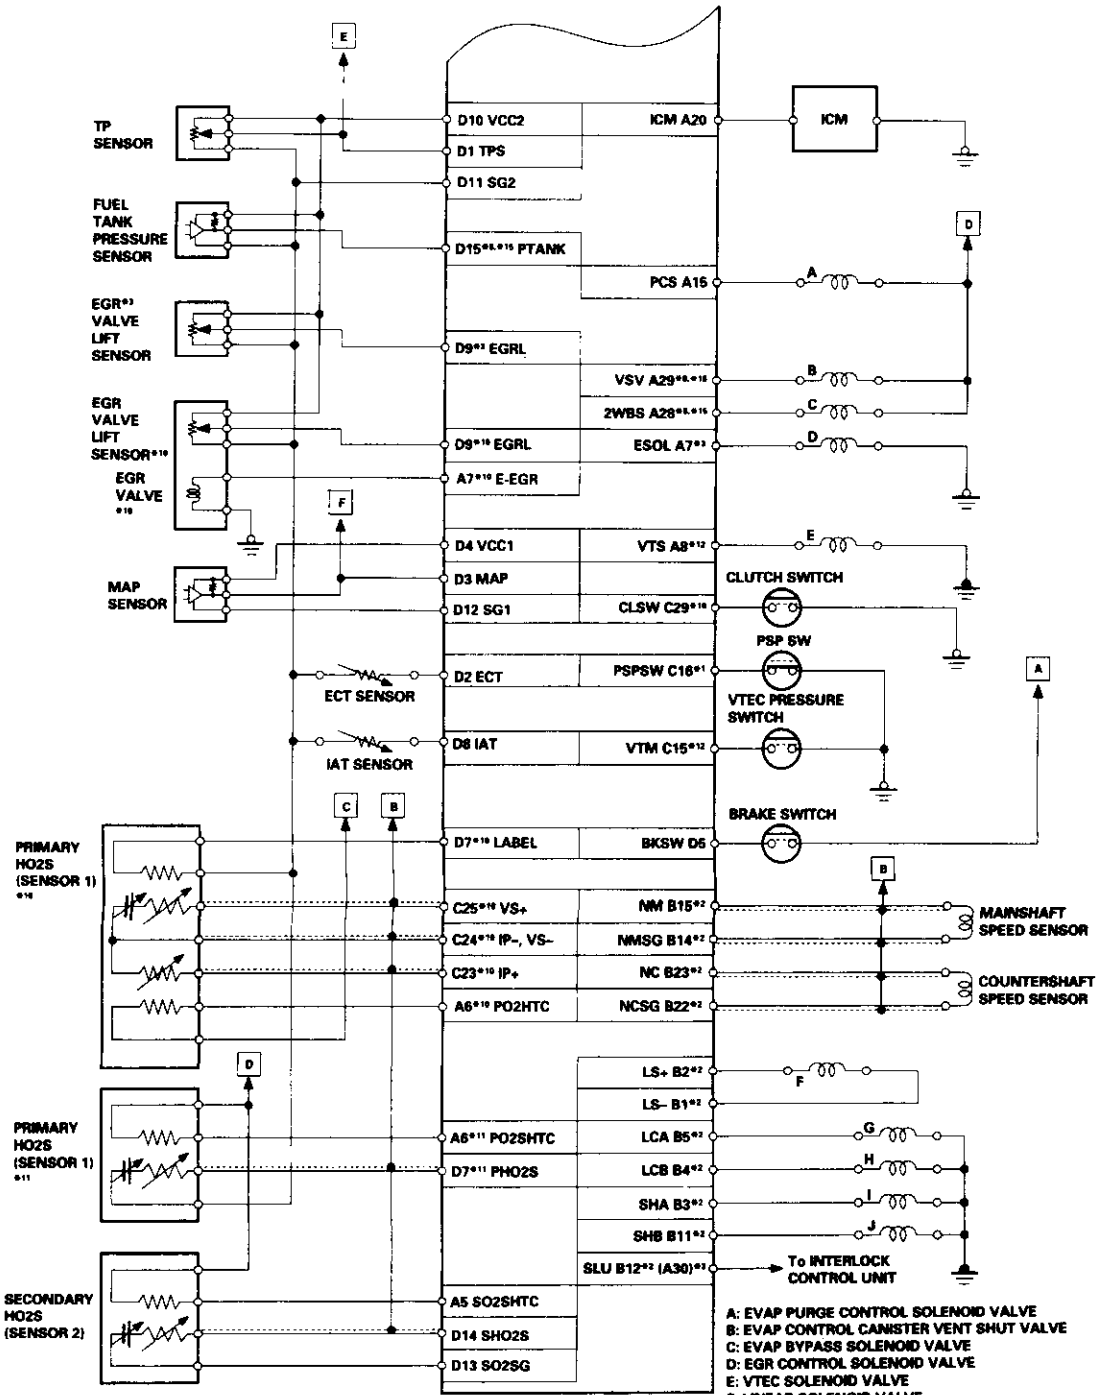

- A: EVAP PURGE CONTROL SOLENOID VALVE
- B: EVAP CONTROL CANISTER VENT SHUT VALVE
- C: EVAP BYPASS SOLENOID VALVE
- D: EGR CONTROL SOLENOID VALVE
- E: VTEC SOLENOID VALVE
- F: LINEAR SOLENOID VALVE
- G: LOCK-UP CONTROL SOLENOID VALVE A
- H: LOCK-UP CONTROL SOLENOID VALVE B
- I: SHIFT CONTROL SOLENOID VALVE A
- J: SHIFT CONTROL SOLENOID VALVE B

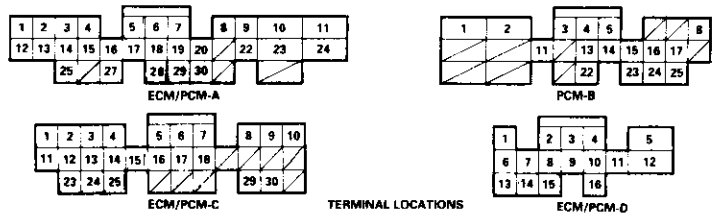


- *1: USA model
- *2: A/T (D16Y7, D16Y8 engine)
- *3: CVT (D16Y5 engine)
- *4: A/T and D16Y7 engine
- *5: Except A/T and D16Y7 engine
- *6: A/T (D16Y8 engine)
- *7: CVT (D16Y5 engine) and D16Y8 engine
- *8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine
- *9: D16Y5 engine
- *10: M/T (D16Y5 engine)
- *11: Except M/T (D16Y5 engine)
- *12: D16Y5, D16Y8 engine
- *13: D16Y8 engine
- *14: D16Y7 engine
- *15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98 D16Y7 engine

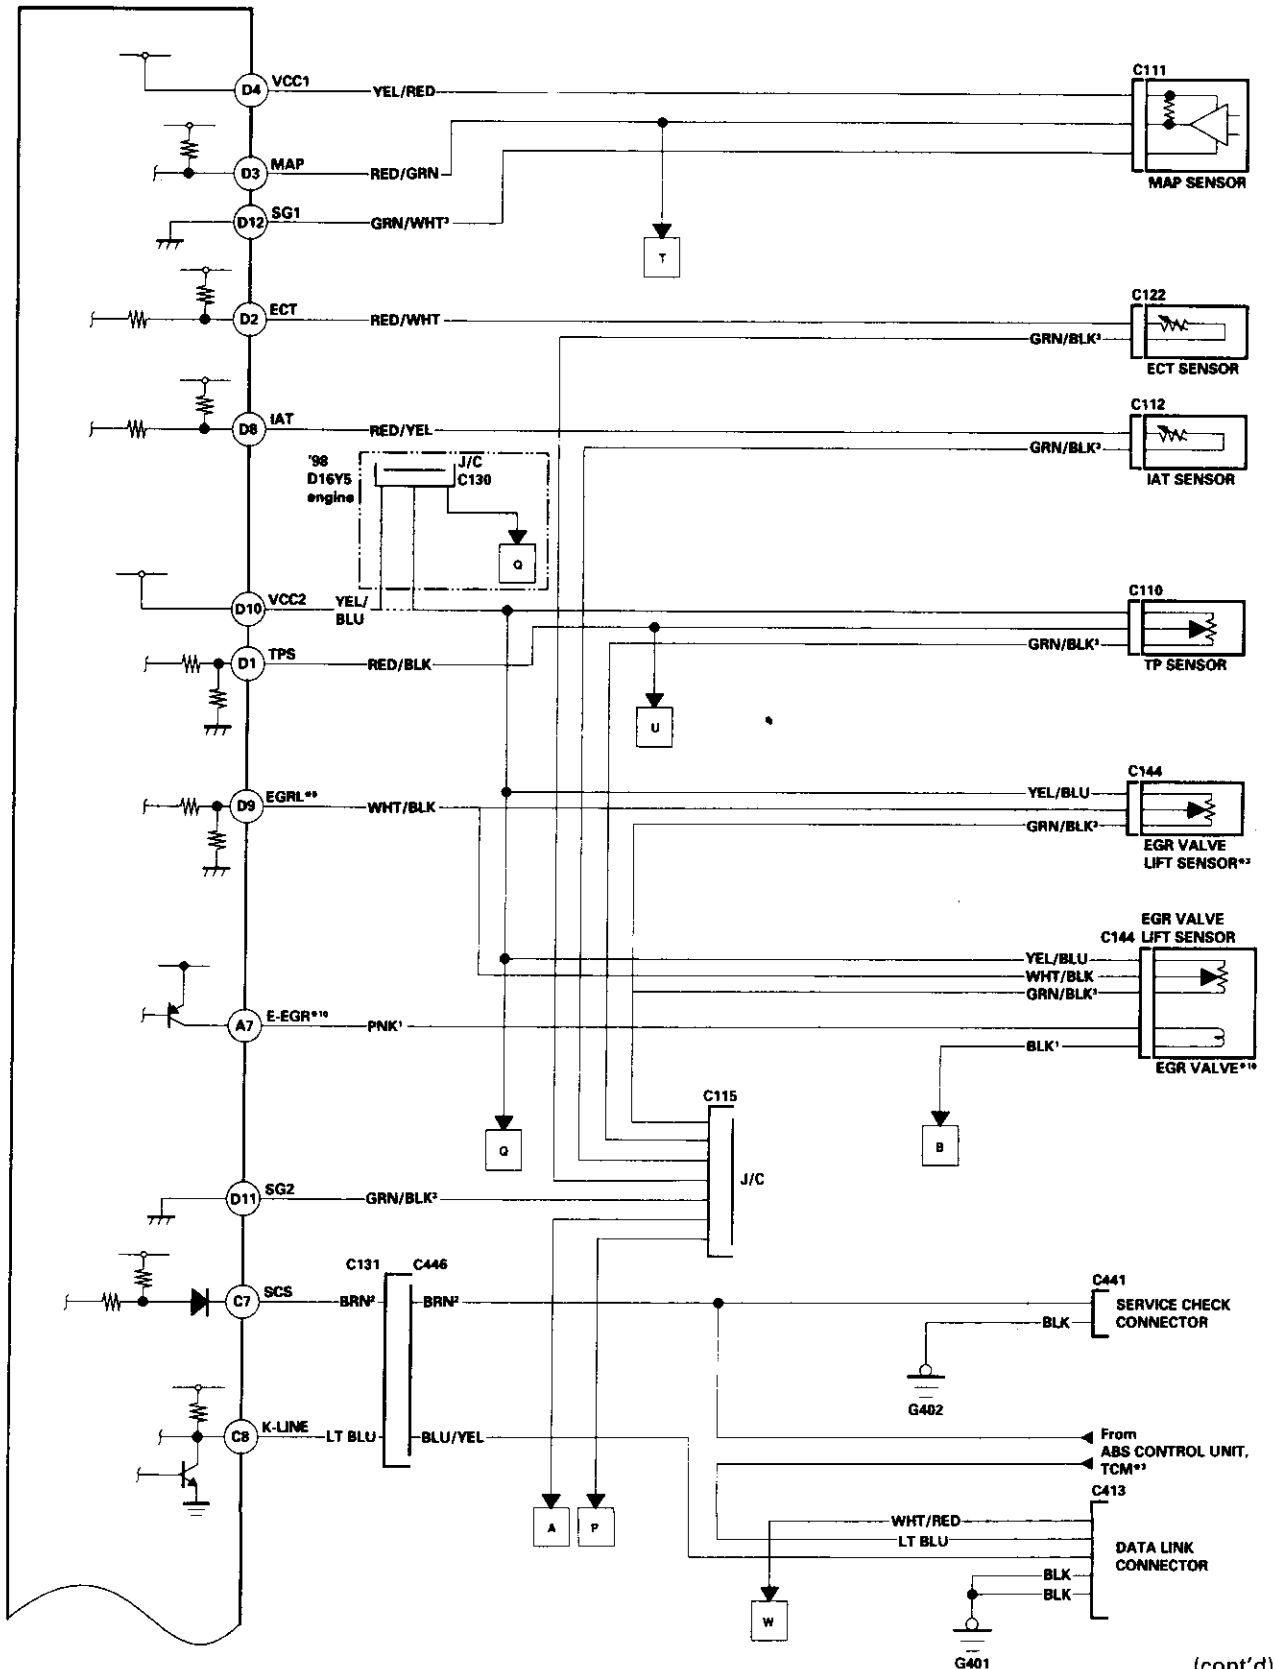


(cont'd)

System Description

Electrical Connections (cont'd)

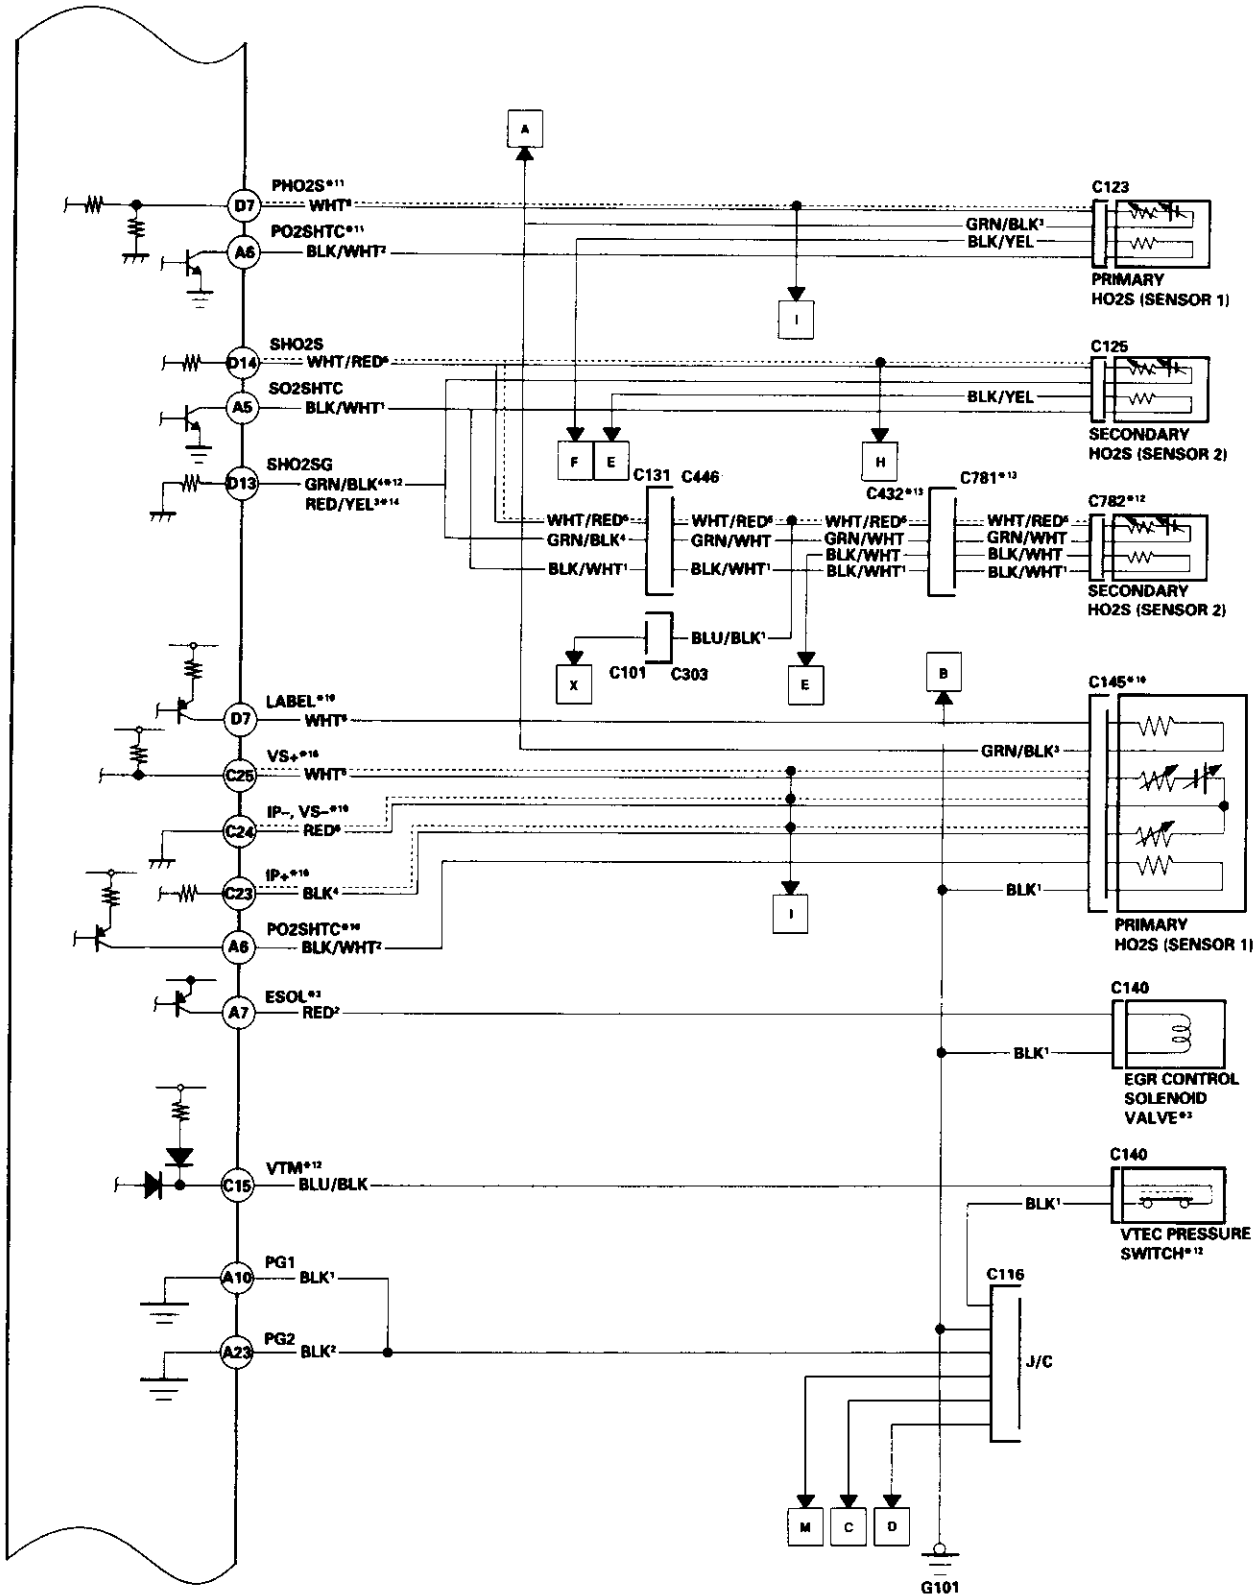


- *1: USA model
- *2: A/T (D16Y7, D16Y8 engine)
- *3: CVT (D16Y5 engine)
- *4: A/T and D16Y7 engine
- *5: Except A/T and D16Y7 engine
- *6: A/T (D16Y8 engine)
- *7: CVT (D16Y5 engine) and D16Y8 engine
- *8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine
- *9: D16Y5 engine
- *10: M/T (D16Y5 engine)
- *11: Except M/T (D16Y5 engine)
- *12: D16Y5, D16Y8 engine
- *13: D16Y8 engine
- *14: D16Y7 engine
- *15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98 D16Y7 engine

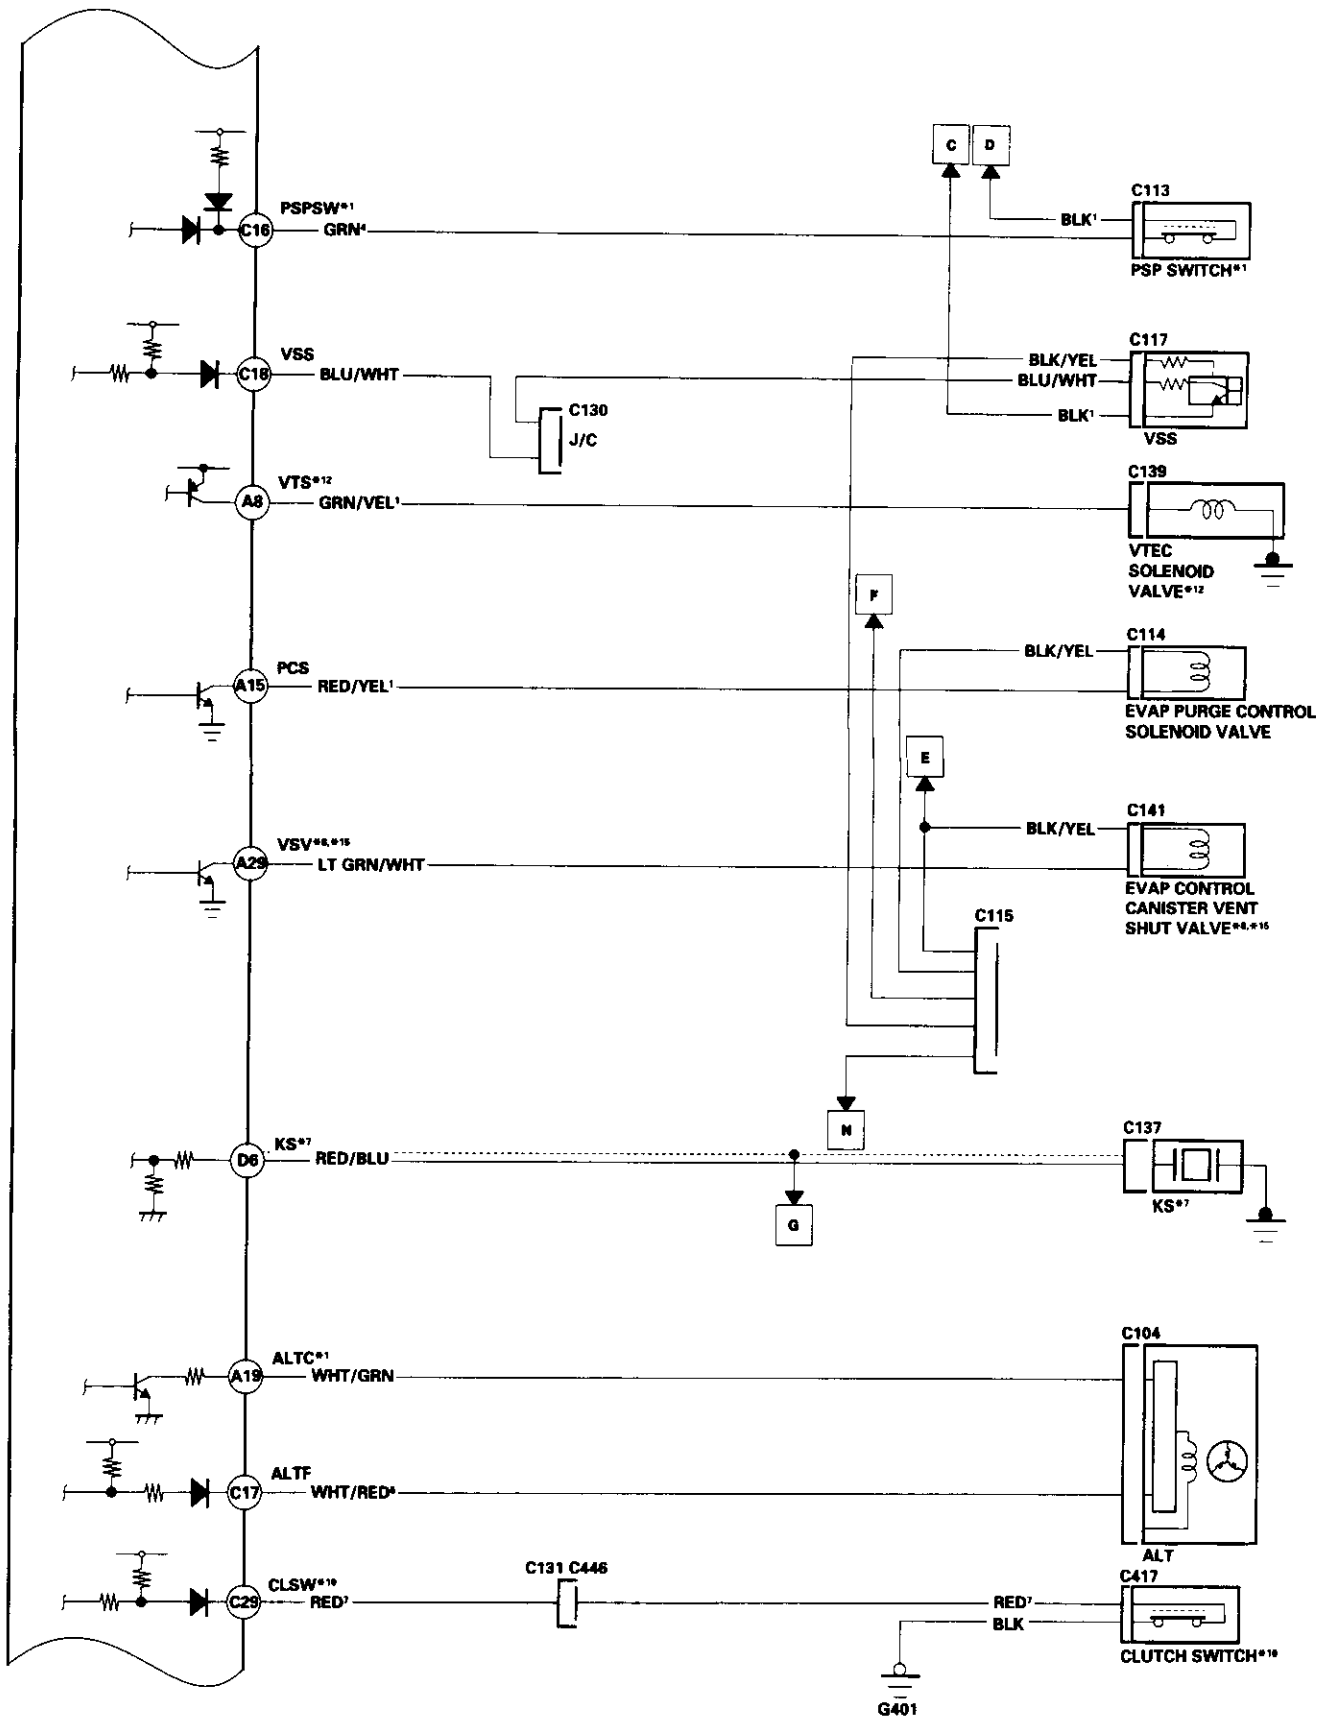

(cont'd)


System Description

Electrical Connectors (cont'd)

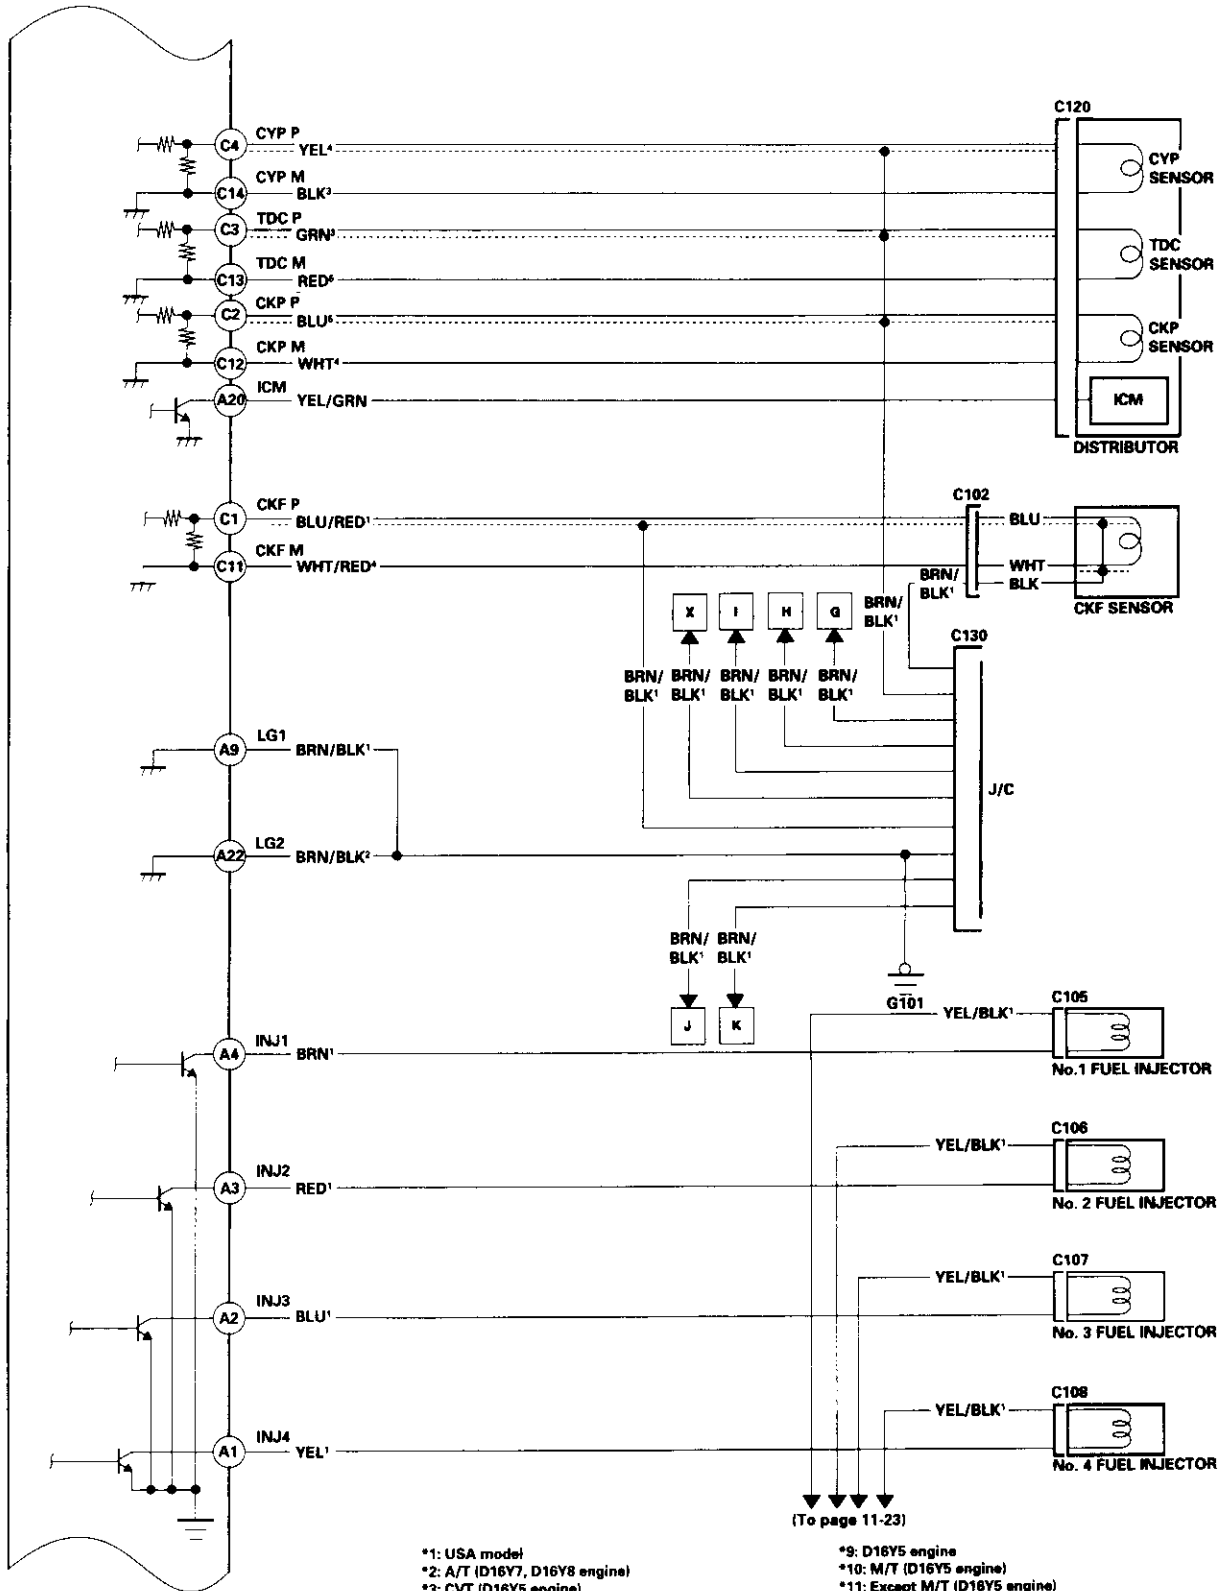

(To page 11-23)


- *1: USA model
- *2: A/T (D16V7, D16Y8 engine)
- *3: CVT (D16Y5 engine)
- *4: A/T and D16Y7 engine
- *5: Except A/T and D16Y7 engine
- *6: A/T (D16Y8 engine)
- *7: CVT (D16Y5 engine) and D16Y8 engine
- *8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine
- *9: D16Y5 engine
- *10: M/T (D16Y5 engine)
- *11: Except M/T (D16Y5 engine)
- *12: D16Y5, D16Y8 engine
- *13: D16Y8 engine
- *14: D16Y7 engine
- *15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98 D16Y7 engine

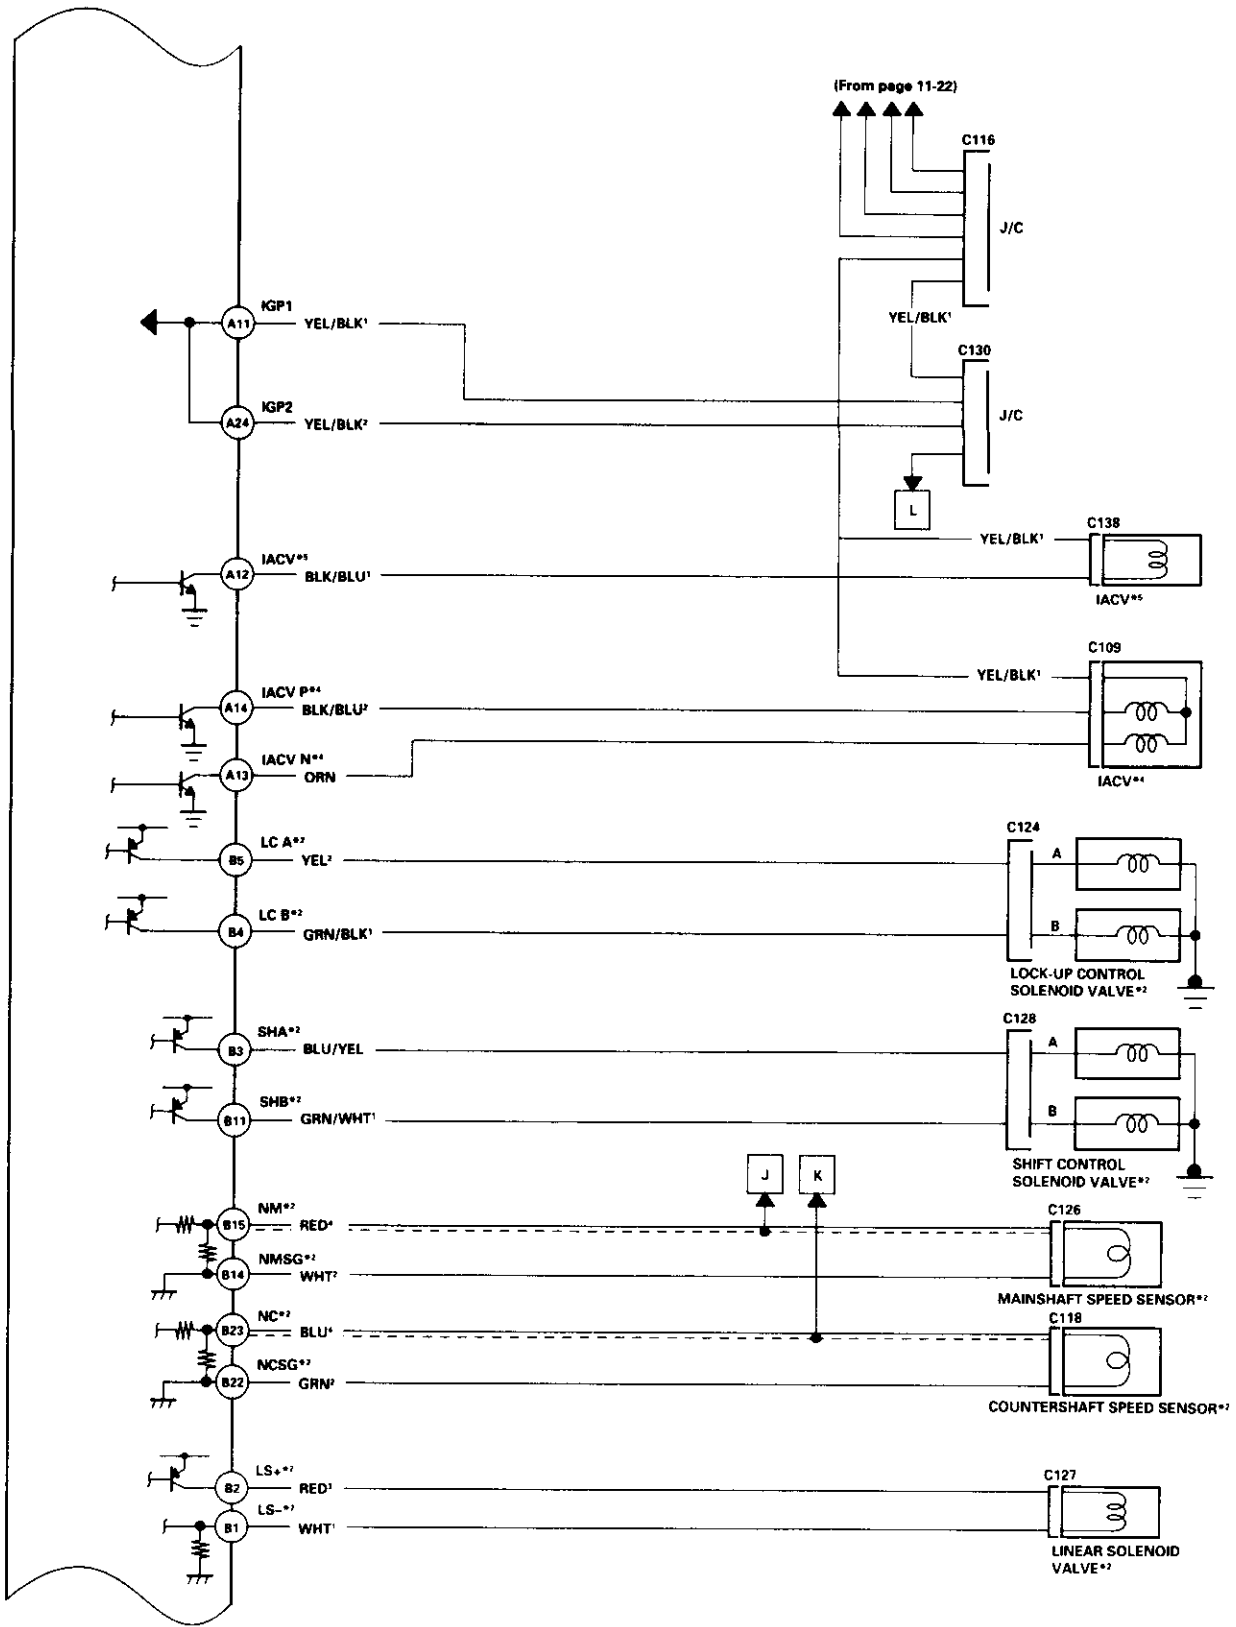


(cont'd)

System Description


Electrical Connectors (cont'd)

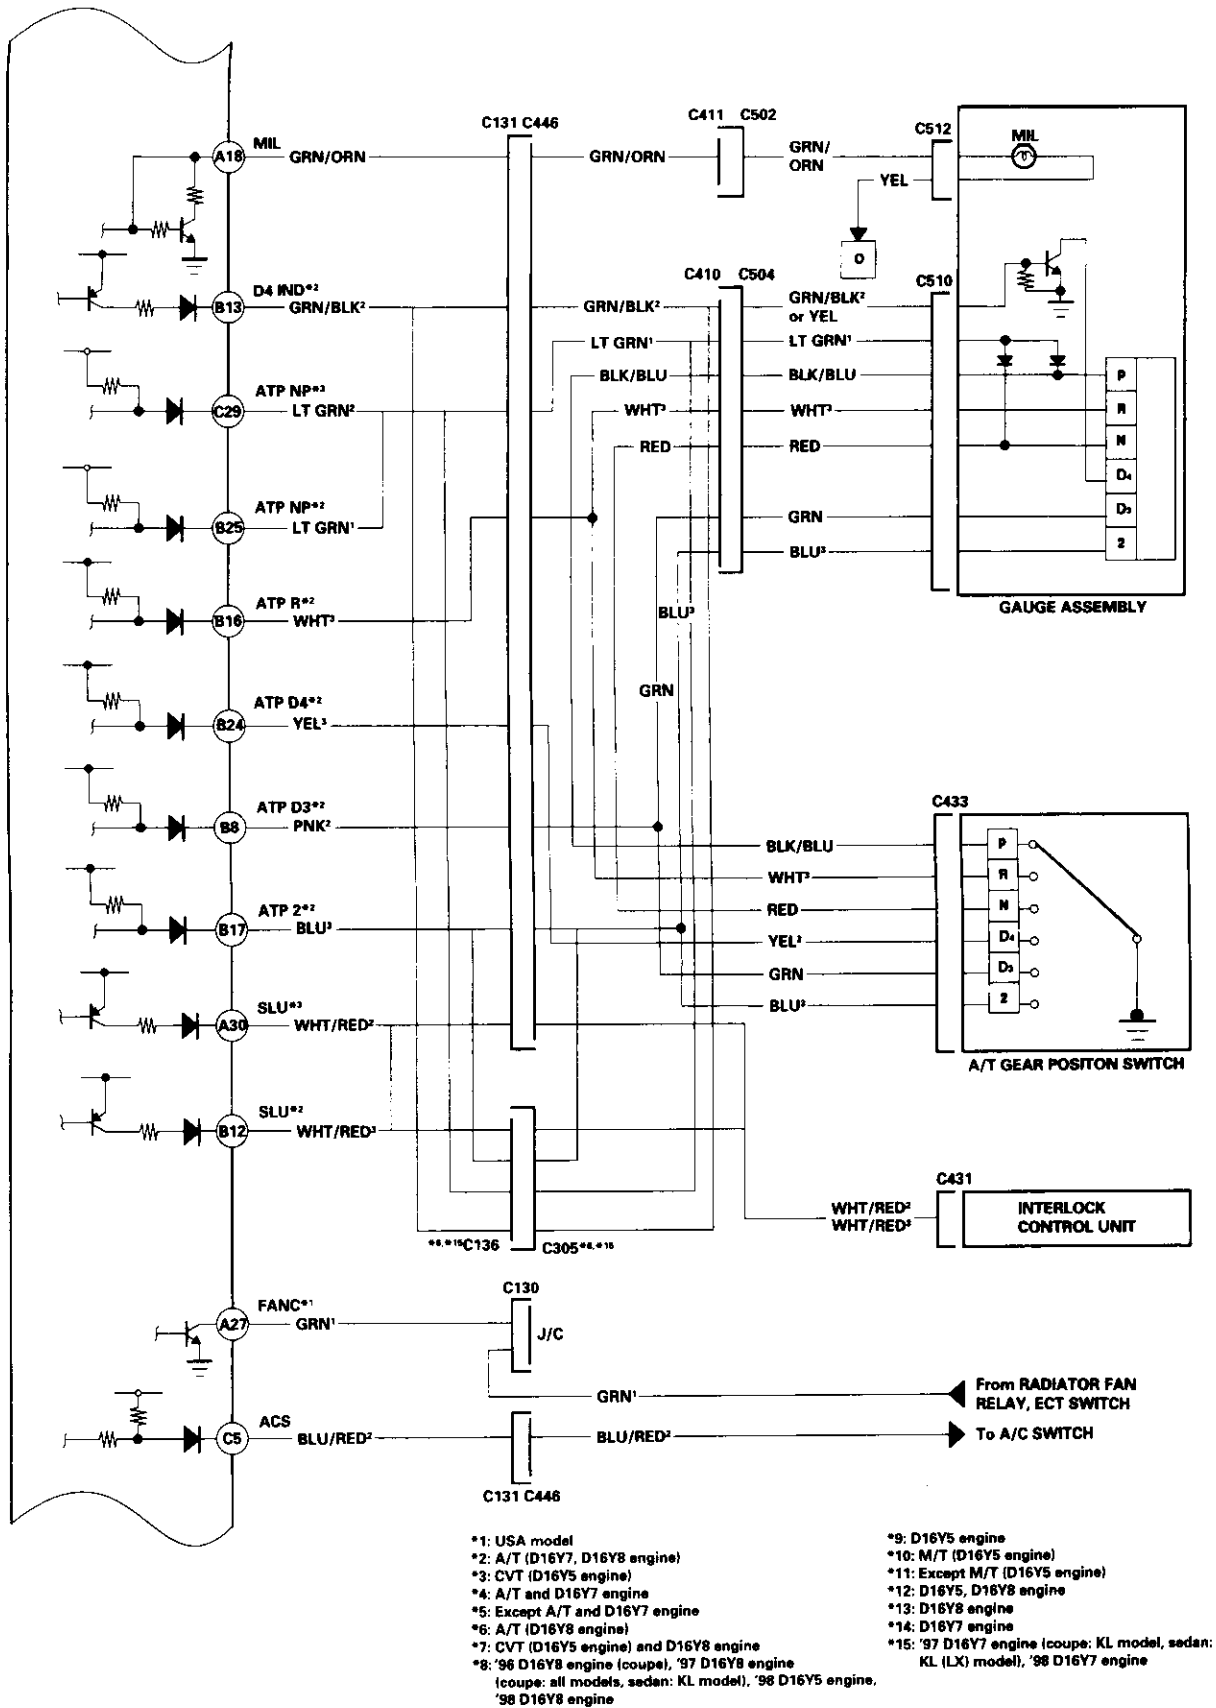

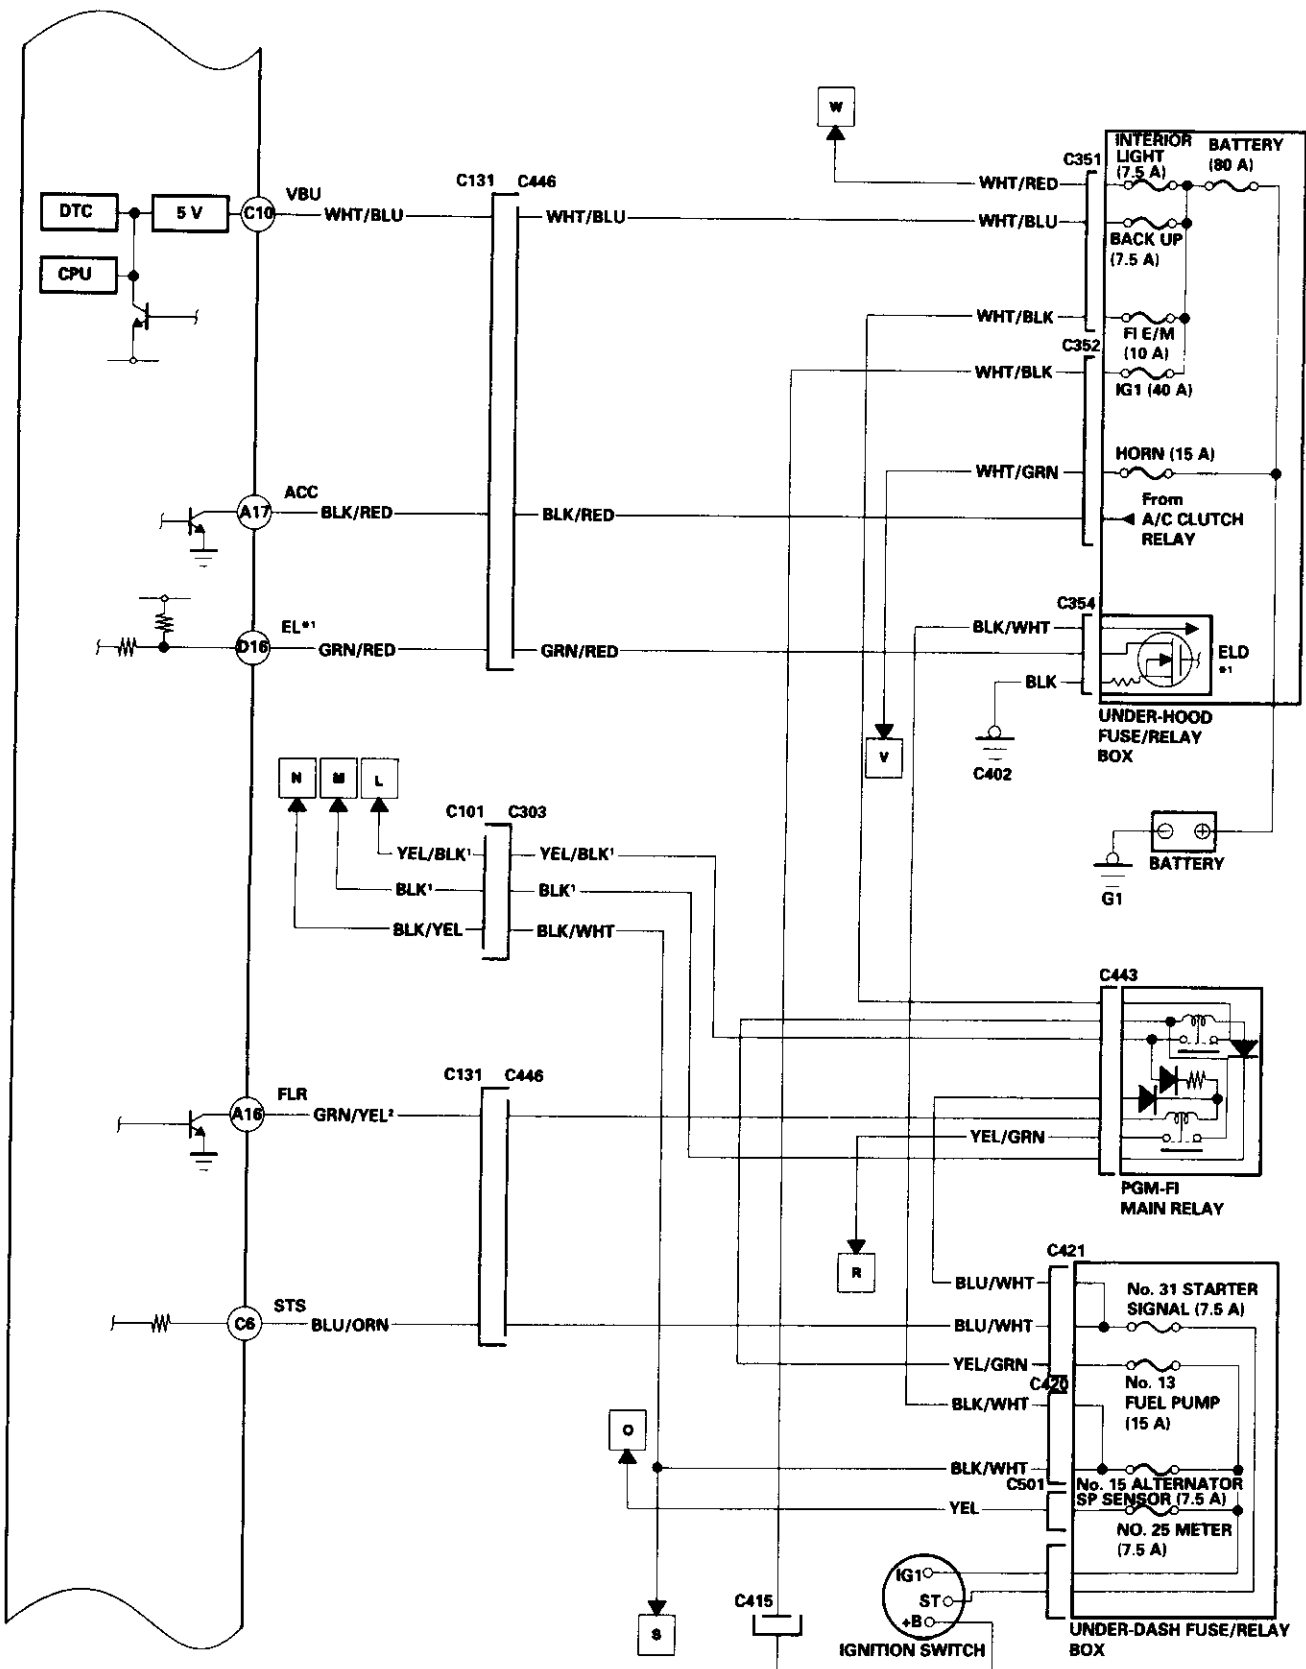

System Description


Electrical Connectors (cont'd)

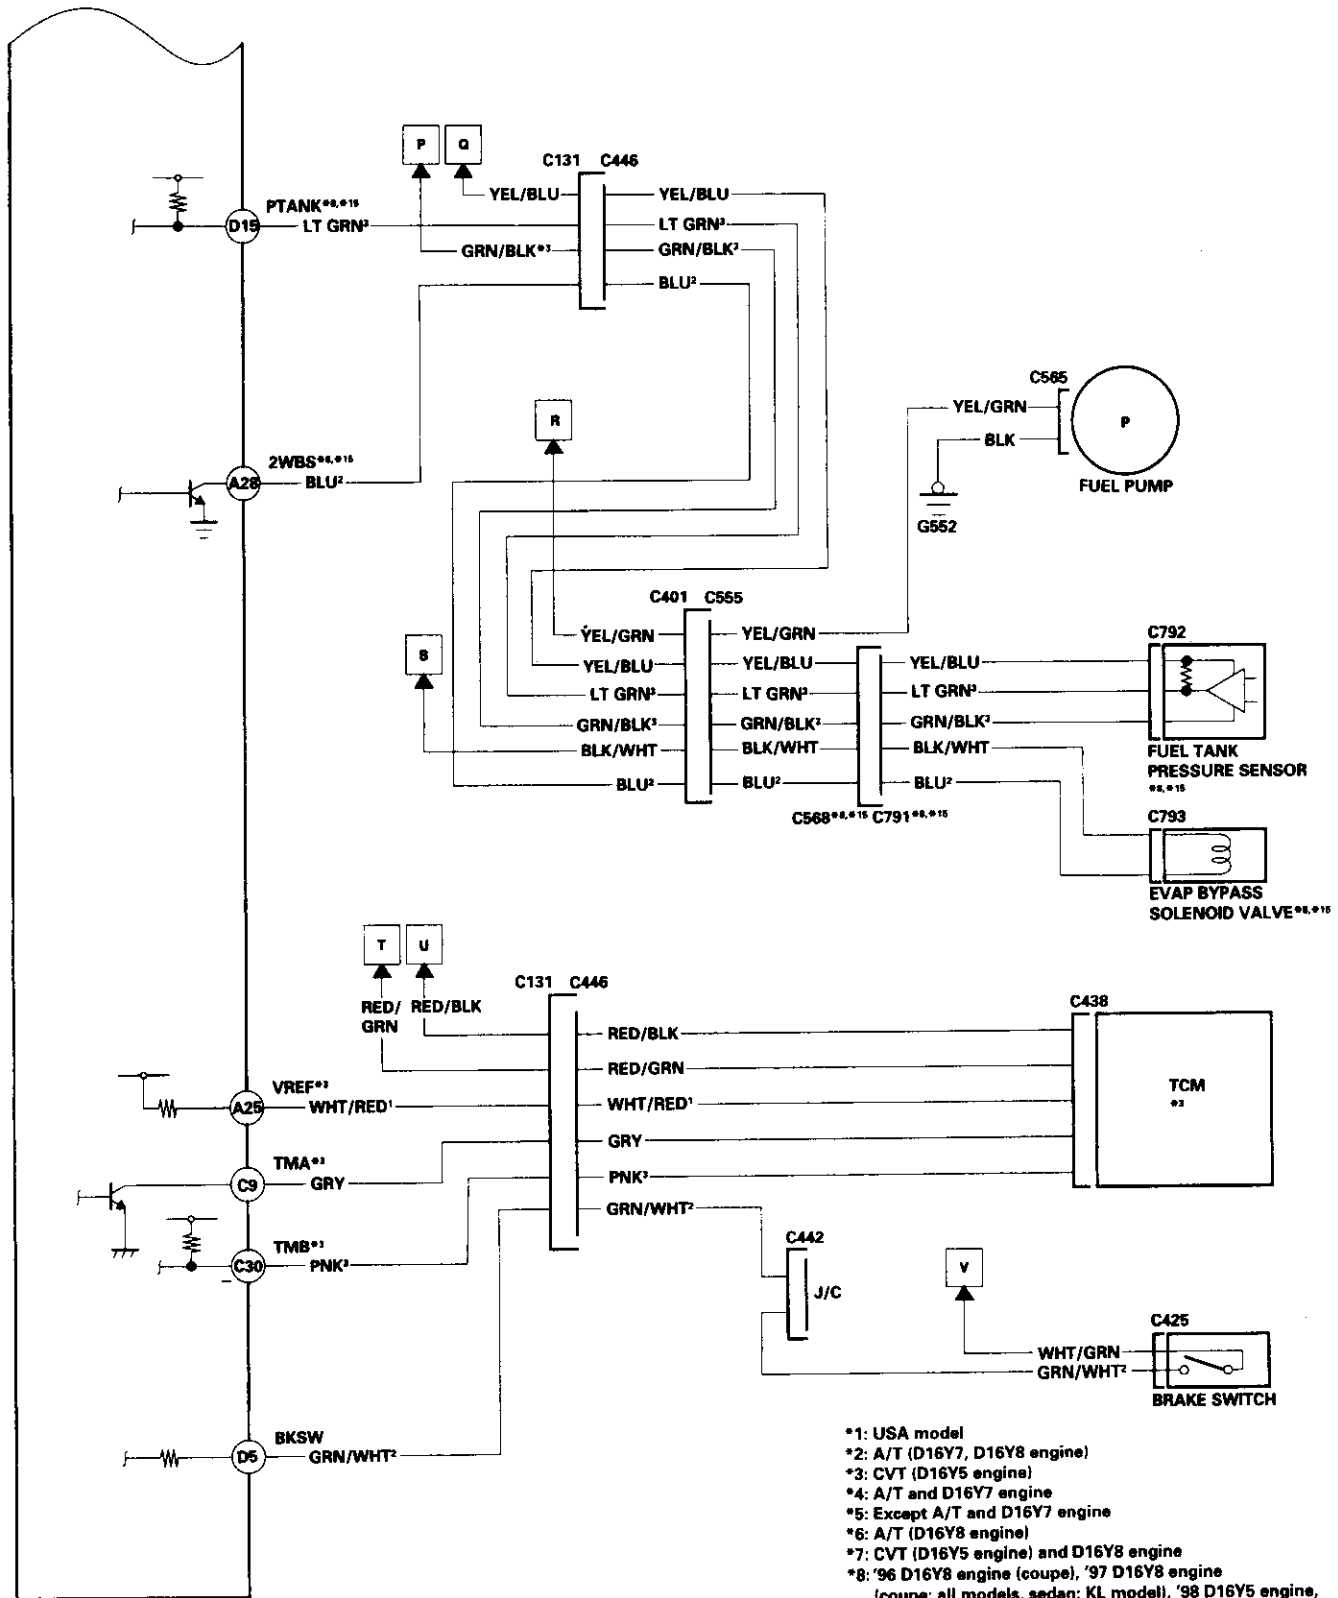

- *1: USA model
- *2: A/T (D16Y7, D16Y8 engine)
- *3: CVT (D16Y5 engine)
- *4: A/T and D16Y7 engine
- *5: Except A/T and D16Y7 engine
- *6: A/T (D16Y8 engine)
- *7: CVT (D16Y5 engine) and D16Y8 engine
- *8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine
- *9: D16Y5 engine
- *10: M/T (D16Y5 engine)
- *11: Except M/T (D16Y5 engine)
- *12: D16Y5, D16Y8 engine
- *13: D16Y8 engine
- *14: D16Y7 engine
- *15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98 D16Y7 engine



System Connectors [Fuel Pump]

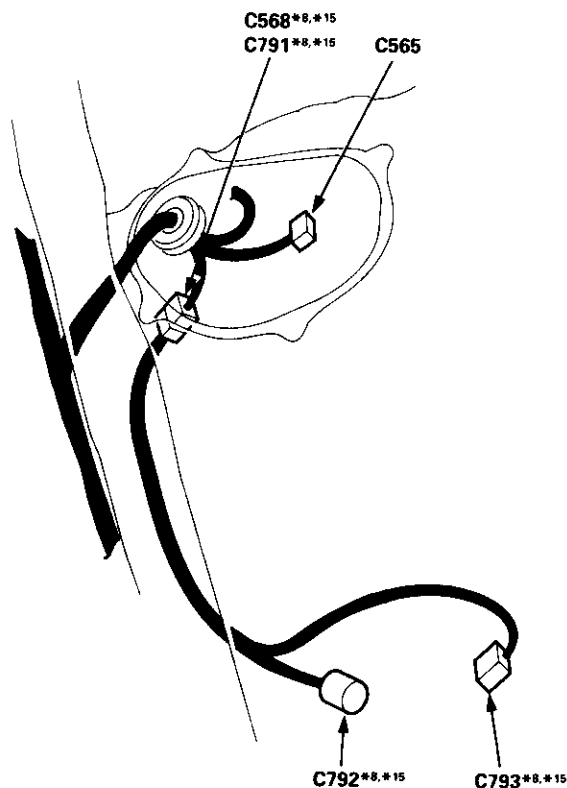


C565




①	BLK
②	YEL/GRN

C568*8,*15



①	BLU ¹
②	LT GRN ³
③	BLK/WHT
④	—
⑤	YEL/BLU
⑥	GRN/BLK ³

C792*8,*15

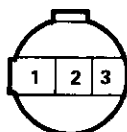

①	YEL/BLU
②	GRN/BLK ³
③	LT GRN ³

C793*8,*15



①	BLK/WHT
②	BLU ²

- *1: USA model
- *2: A/T (D16Y7, D16Y8 engine)
- *3: CVT (D16Y5 engine)
- *4: A/T and D16Y7 engine
- *5: Except A/T and D16Y7 engine
- *6: A/T (D16Y8 engine)
- *7: CVT (D16Y5 engine) and D16Y8 engine
- *8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y7 engine
- *9: D16Y5 engine
- *10: M/T (D16Y5 engine)
- *11: Except M/T (D16Y5 engine)
- *12: D16Y5, D16Y8 engine
- *13: D16Y8 engine
- *14: D16Y7 engine
- *15: '97 D16Y7 engine (coupe :KL model, sedan: KL (LX) model), '98 D16Y7 engine

NOTE: • Different wires with the same color have been given a number suffix to distinguish them (for example, YEL/BLK¹ and YEL/BLK² are not the same).

○: Related to Fuel and Emissions System.


- Connector with male terminals (double outline): View from terminal side
- Connector with female terminals (single outline): View from wire side

(cont'd)


System Description

System Connectors [Engine Compartment] (cont'd)

D16Y5, D16Y8 engine:

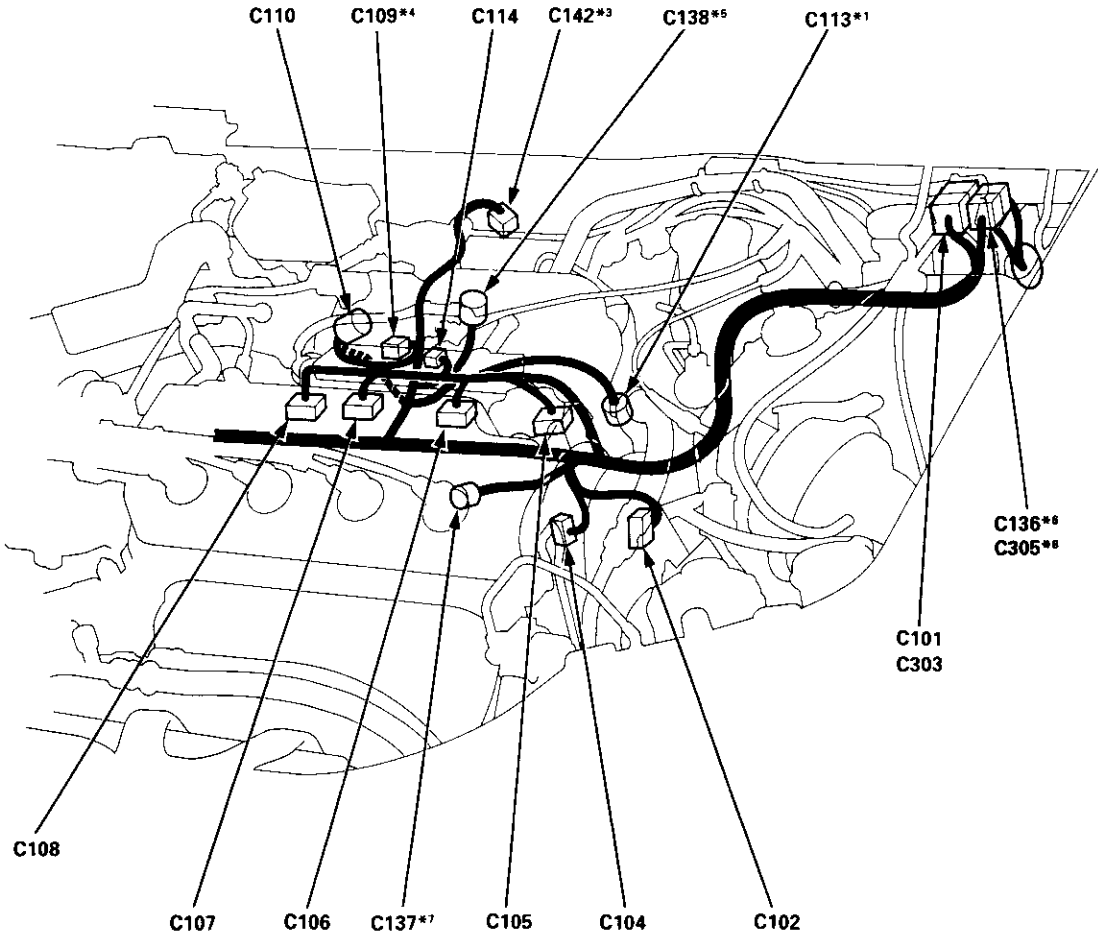

-----: M/T (D16Y5 engine)

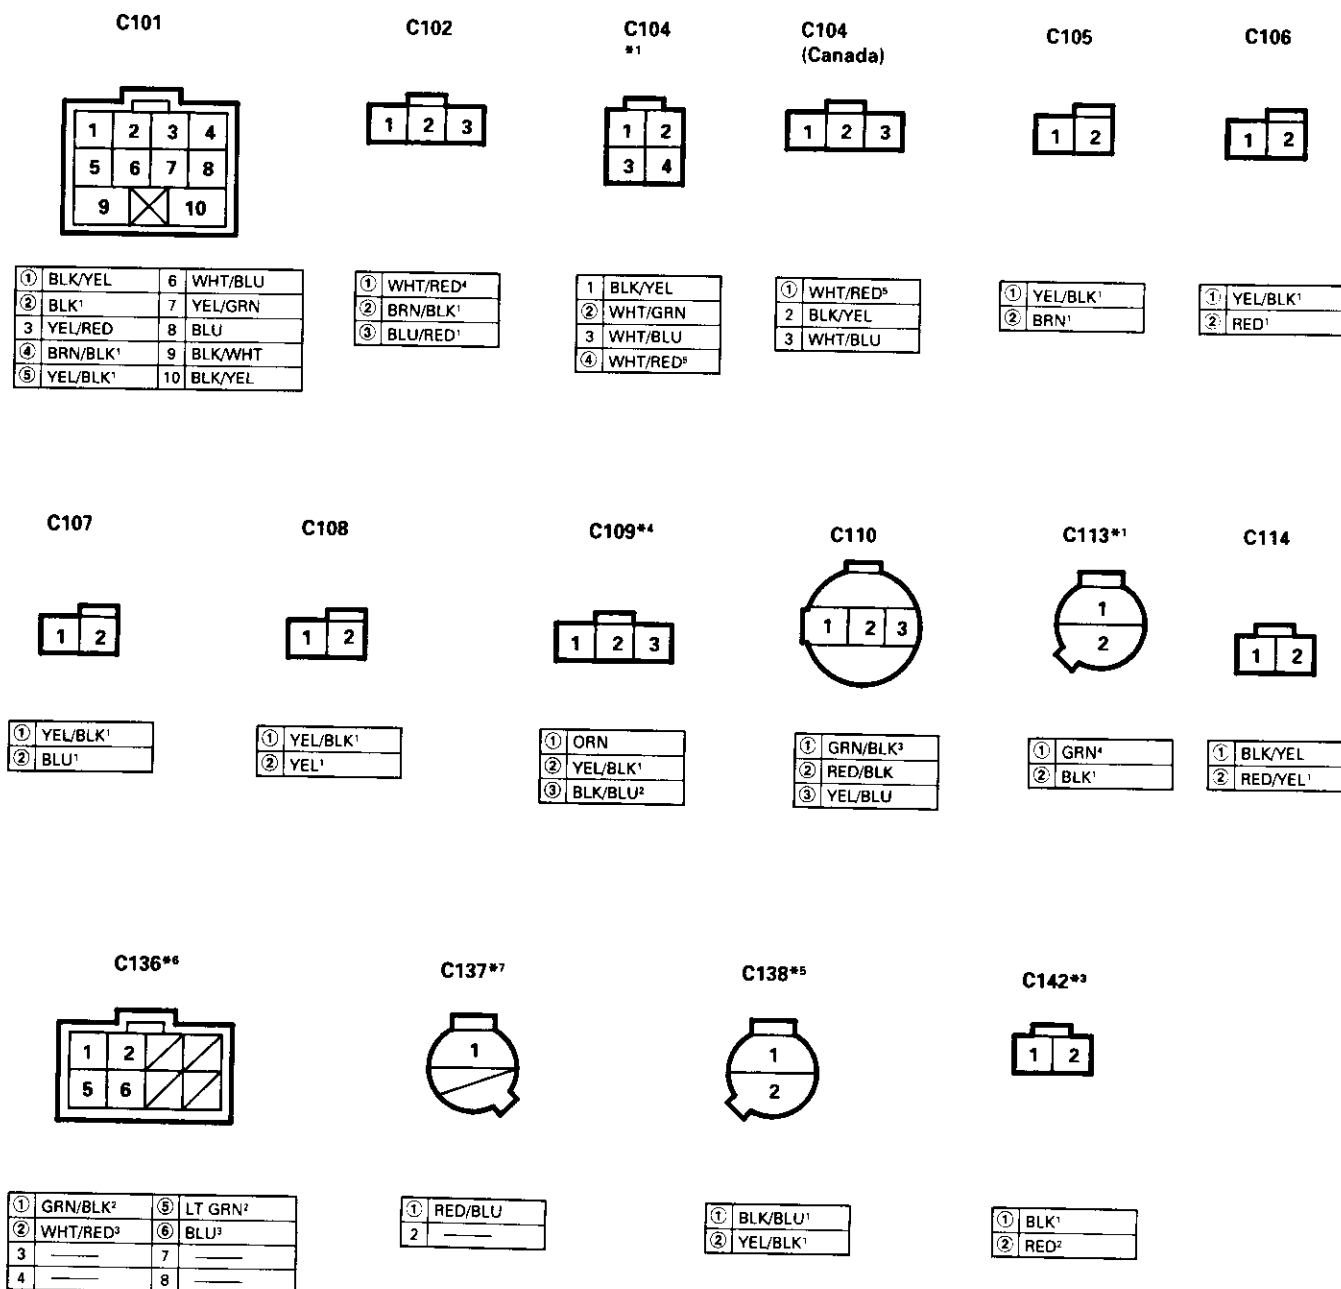


NOTE: • Different wires with the same color have been given a number suffix to distinguish them (for example, YEL/BLK¹ and YEL/BLK² are not the same).
 ○: Related to Fuel and Emissions System.
 — Connector with male terminals (double outline): View from terminal side
 — Connector with female terminals (single outline): View from wire side


(cont'd)

System Description

System Connectors [Engine Compartment] (cont'd)

D16Y5, D16Y8 engine:

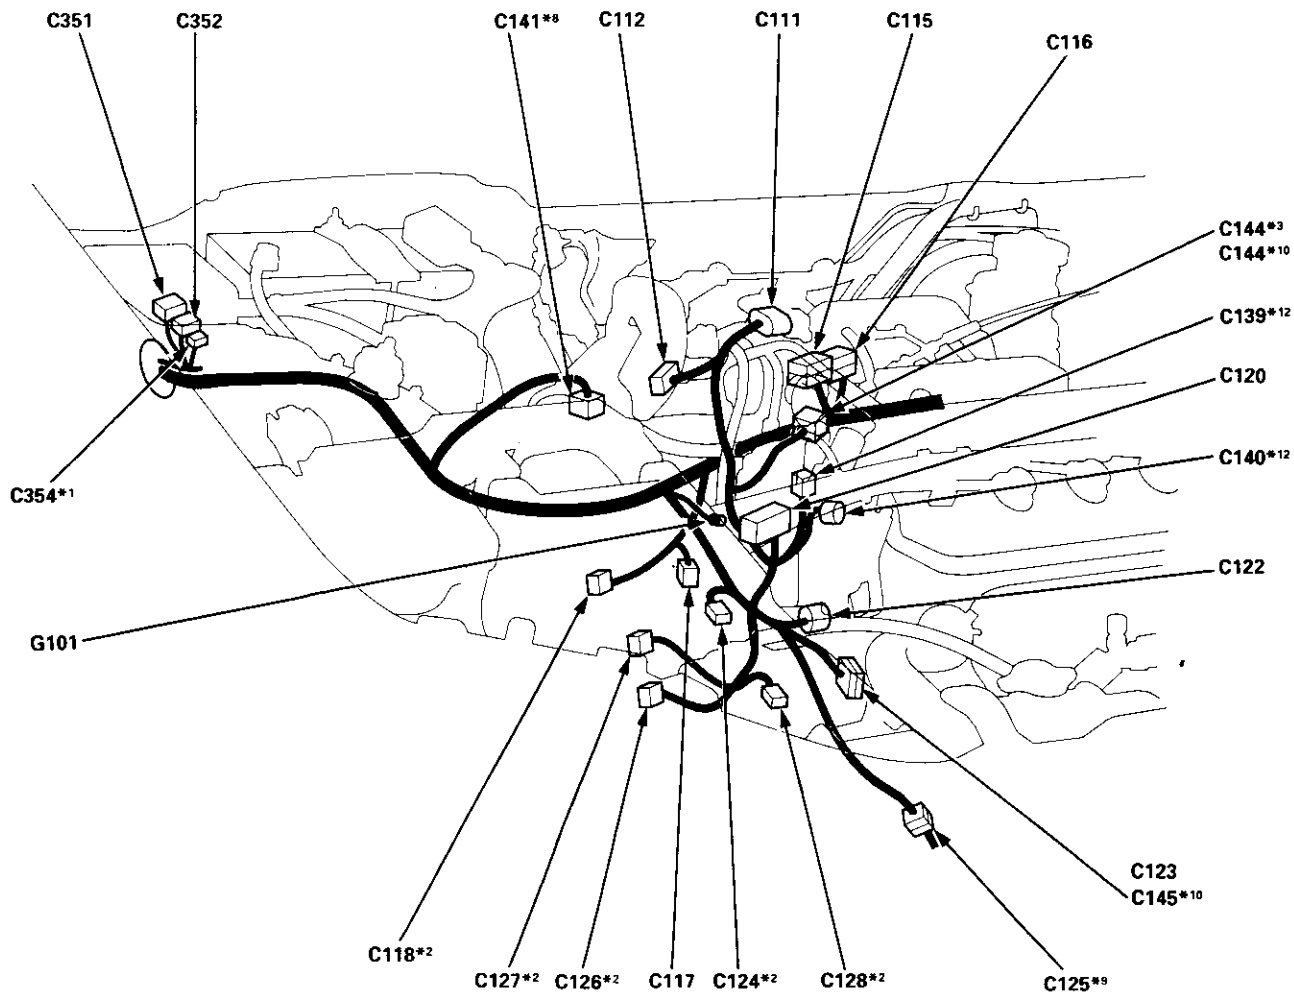

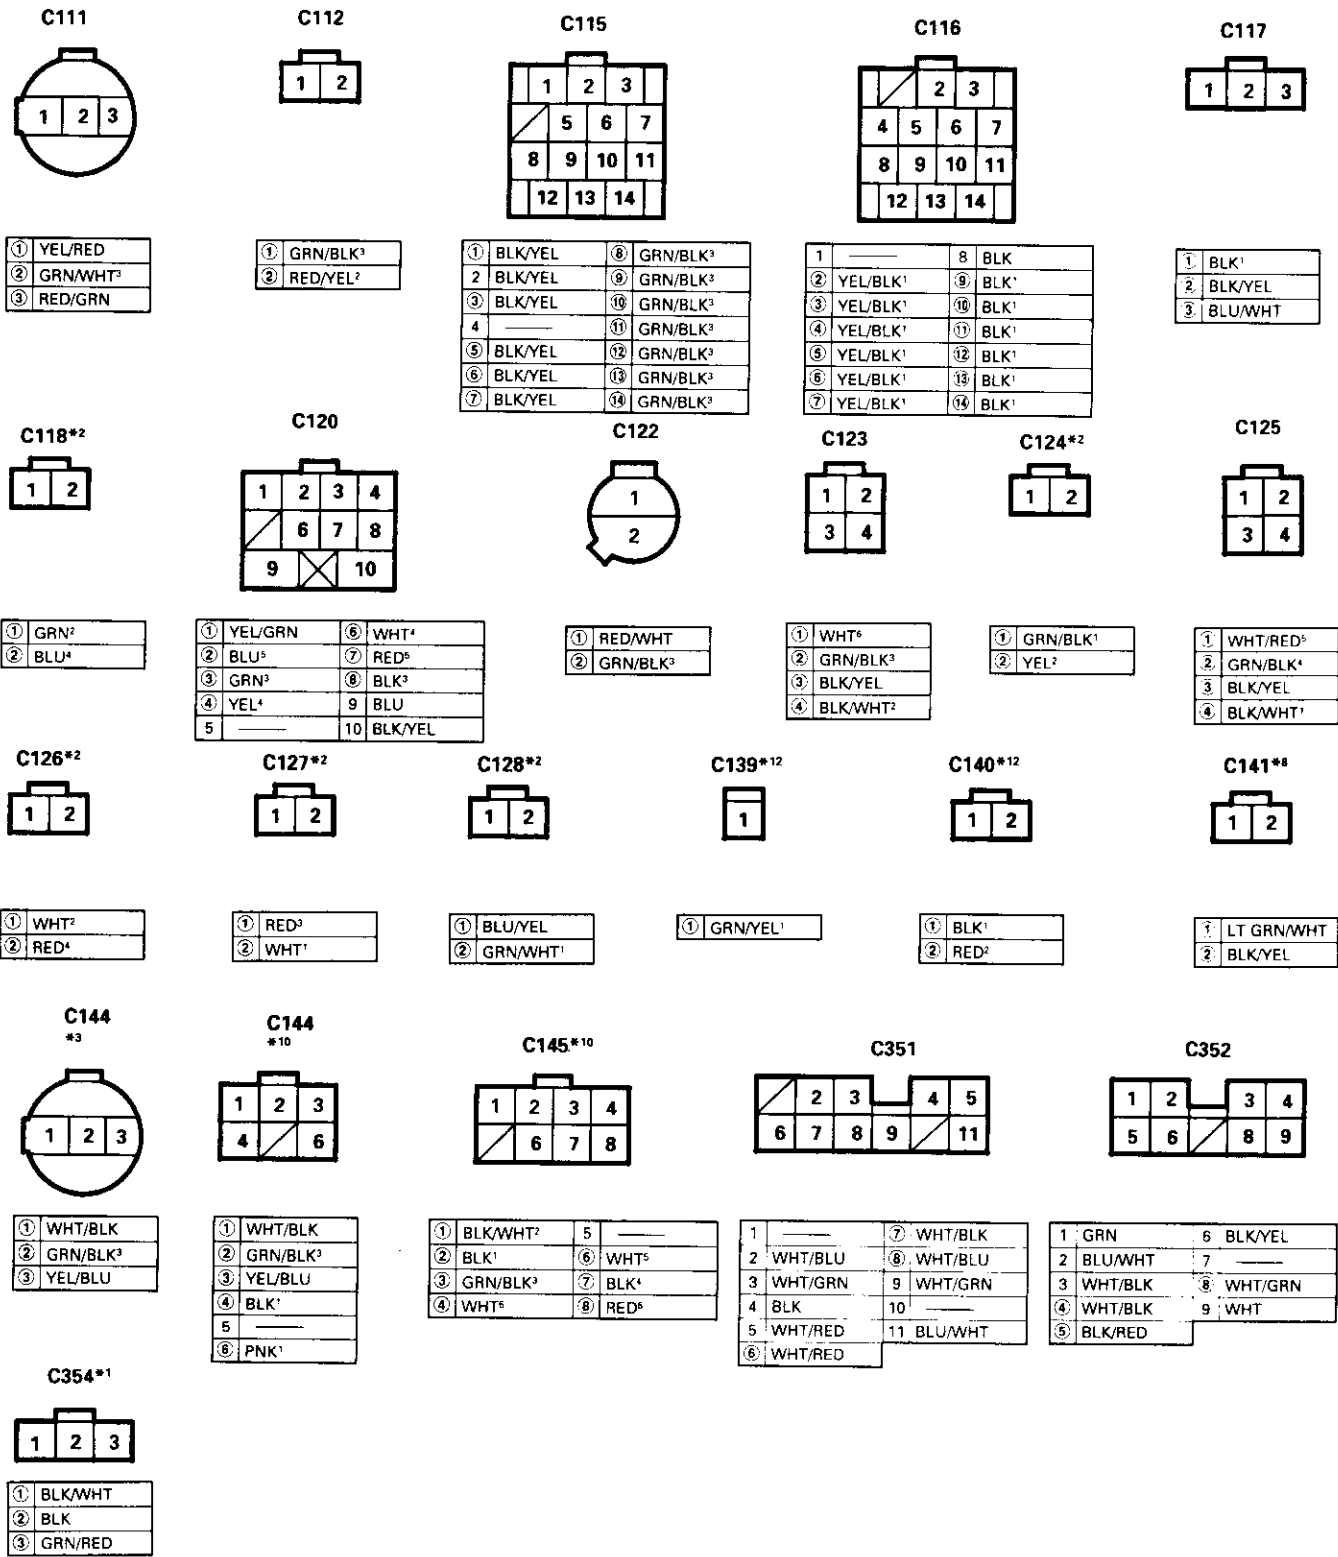


NOTE: • Different wires with the same color have been given a number suffix to distinguish them (for example, YEL/BLK¹ and YEL/BLK² are not the same).
 ○: Related to Fuel and Emissions System.
 — Connector with male terminals (double outline): View from terminal side
 — Connector with female terminals (single outline): View from wire side

(cont'd)

System Description


System Connectors [Engine Compartment] (cont'd)

D16Y7 engine:

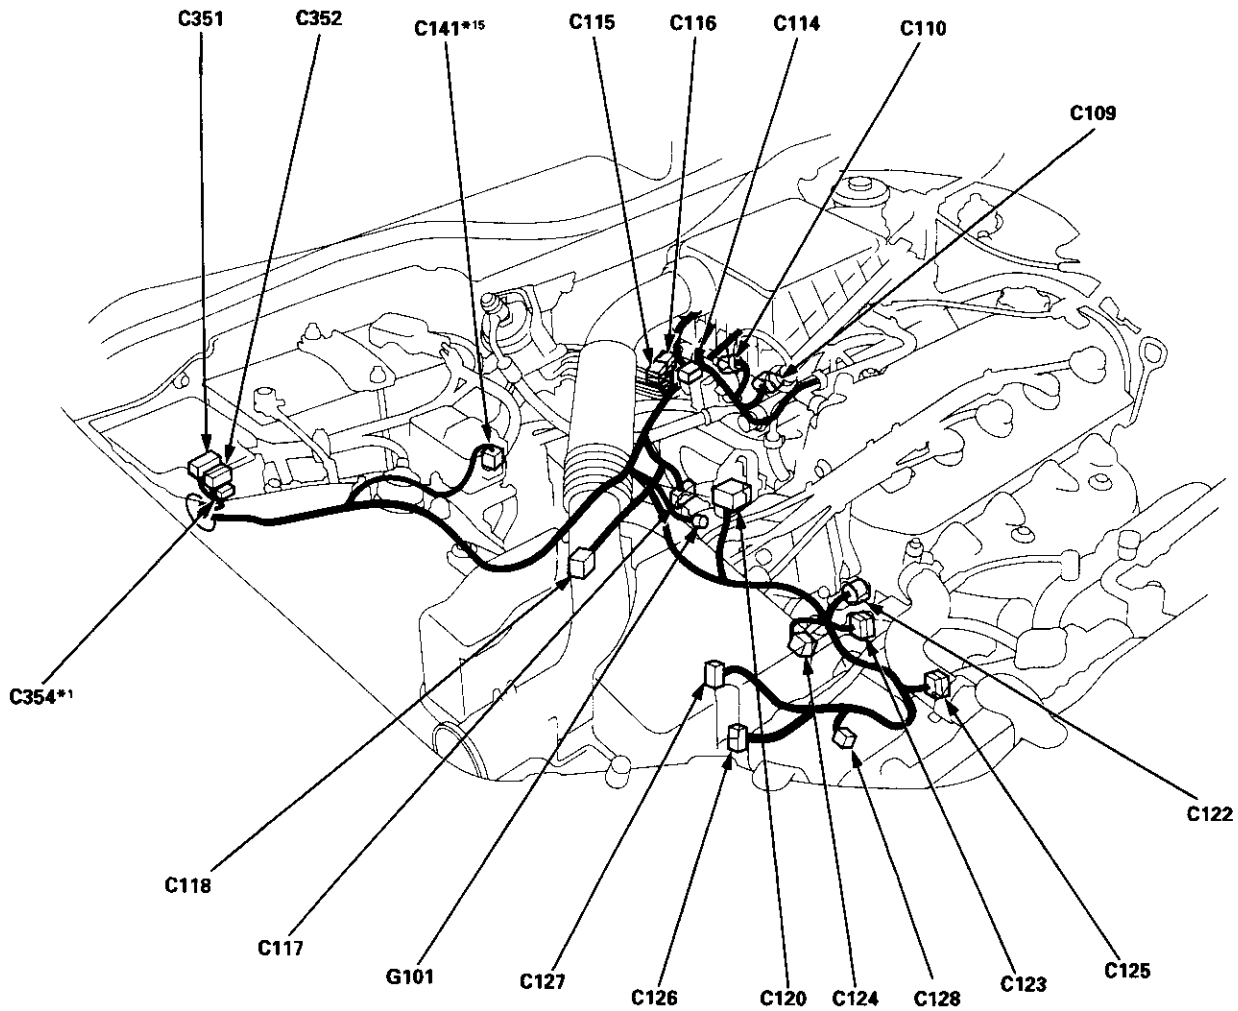



C101

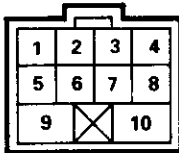

① BLK/YEL	6 WHT/BLU
② BLK ¹	7 YEL/GRN
3 YEL/RED	8 BLU
④ BRN/BLK ¹	9 BLK/WHT
⑤ YEL/BLK ¹	10 BLK/YEL

C102




① WHT/RED ⁴
② BRN/BLK ¹
③ BLU/RED ¹

C104
*1



1 BLK/YEL
② WHT/GRN
3 WHT/BLU
④ WHT/RED ⁵

C104
(Canada)



① WHT/RED ⁵
2 BLK/YEL
3 WHT/BLU

C105



① YEL/BLK ¹
② BRN ¹

C106



① YEL/BLK ¹
② RED ¹

C107




① YEL/BLK ¹
② BLU ¹

C108



① YEL/BLK ¹
② YEL ¹

C111

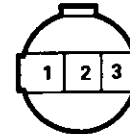

① YEL/RED
② GRN/WHT ³
③ RED/GRN

C112




① GRN/BLK ³
② RED/YEL ²

C113**



① GRN ⁴
② BLK ¹

C136*15



① GRN/BLK ²	⑤ WHT ²
② WHT/RED ²	⑥ BLU ³
3 _____	7 _____
4 _____	8 _____

NOTE: • Different wires with the same color have been given a number suffix to distinguish them (for example, YEL/BLK¹ and YEL/BLK² are not the same).

○: Related to Fuel and Emissions System.


- — Connector with male terminals (double outline): View from terminal side
- — Connector with female terminals (single outline): View from wire side


(cont'd)

System Description

System Connectors [Engine Compartment] (cont'd)

D16Y7 engine:

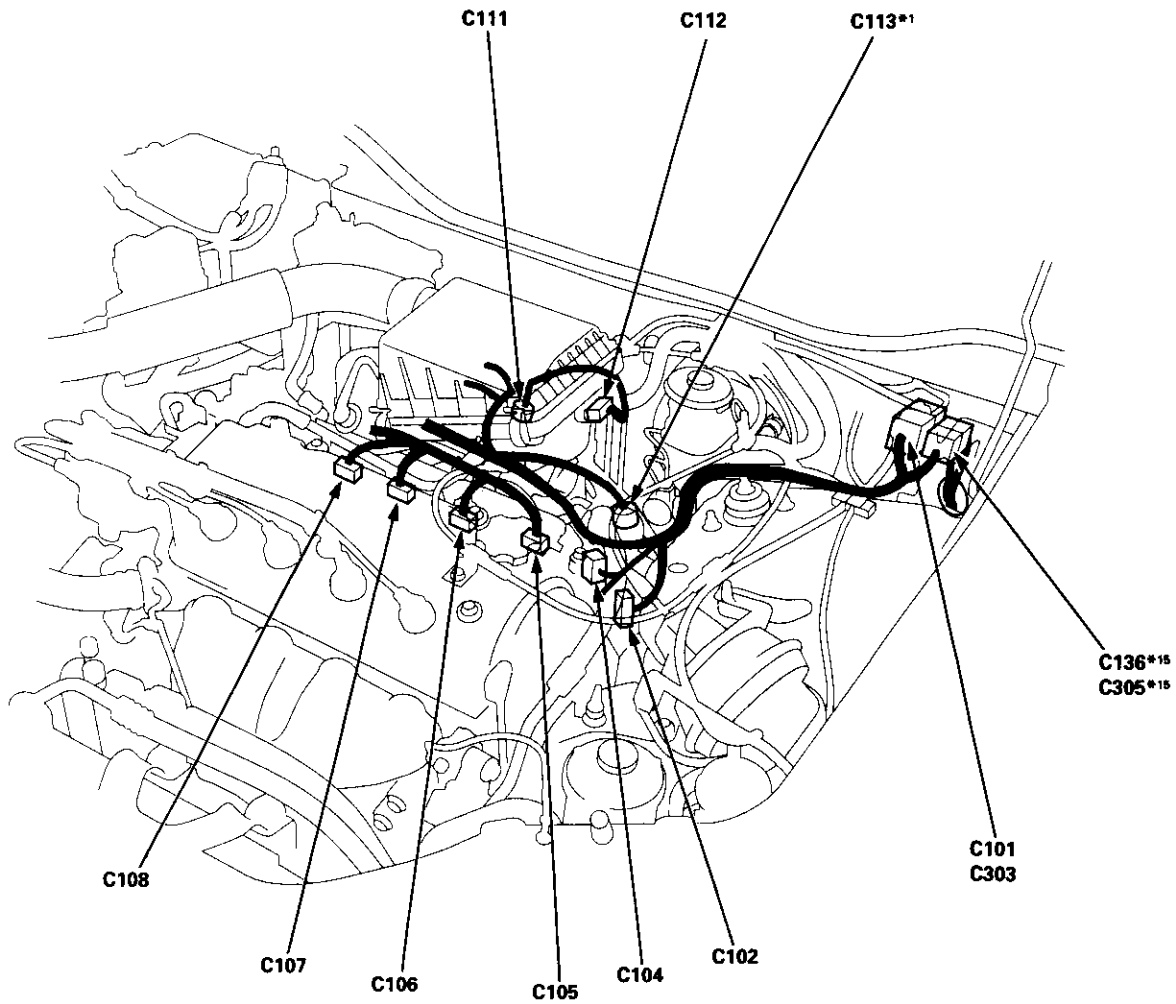



① ORN
② YEL/BLK ¹
③ BLK/BLU ²




① GRN/BLK ³
② RED/BLK
③ YEL/BLU




① BLK/YEL
② RED/YEL ¹



① BLK/YEL	⑧ GRN/BLK ²
② BLK/YEL	⑨ GRN/BLK ³
③ BLK/YEL	⑩ GRN/BLK ³
④ BLK/YEL	⑪ GRN/BLK ³
⑤ BLK/YEL	12 —
⑥ BLK/YEL	⑬ GRN/BLK ³
⑦ BLK/YEL	⑭ GRN/BLK ³

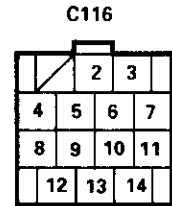


1 —	8 BLK
② YEL/BLK ¹	⑨ BLK ¹
③ YEL/BLK ¹	⑩ BLK ¹
④ YEL/BLK ¹	⑪ BLK ¹
⑤ YEL/BLK ¹	⑫ BLK ¹
⑥ YEL/BLK ¹	⑬ BLK ¹
⑦ YEL/BLK ¹	⑭ BLK ¹




① BLK ³
② BLK/YEL
③ BLU/WHT




① GRN ²
② BLU ⁴

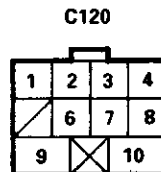


① YEL/GRN	⑥ WHT ⁴
② BLU ⁵	⑦ RED ⁵
③ GRN ³	⑧ BLK ³
④ YEL ⁴	⑨ BLU
5 —	⑩ BLK/YEL




① RED/WHT
② GRN/BLK ³




① WHT ⁵
② GRN/BLK ³
③ BLK/YEL
④ BLK/WHT ²




① GRN/BLK ¹
② YEL ²



① WHT/RED ³
② RED/YEL ³
③ BLK/YEL
④ BLK/WHT ¹



① WHT ²
② RED ⁴




① WHT ¹
② RED ³




① BLU/YEL
② GRN/WHT ¹




① LT GRN/WHT
② BLK/YEL



1 —	⑦ WHT/BLK
2 WHT/BLU	⑧ WHT/BLU
3 WHT/GRN	9 WHT/GRN
4 BLK	10 —
5 WHT/RED	11 BLU/WHT
⑥ WHT/RED	



1 GRN	6 BLK/YEL
2 BLU/WHT	7 —
3 WHT/BLK	⑧ WHT/GRN
④ WHT/BLK	9 WHT
⑤ BLK/RED	




① BLK/WHT
② BLK
③ GRN/RED

NOTE: ● Different wires with the same color have been given a number suffix to distinguish them (for example, YEL/BLK¹ and YEL/BLK² are not the same).
 ○: Related to Fuel and Emissions System.
 ● — Connector with male terminals (double outline): View from terminal side
 — Connector with female terminals (single outline): View from wire side


System Description

System Connectors [Dash and Floor]

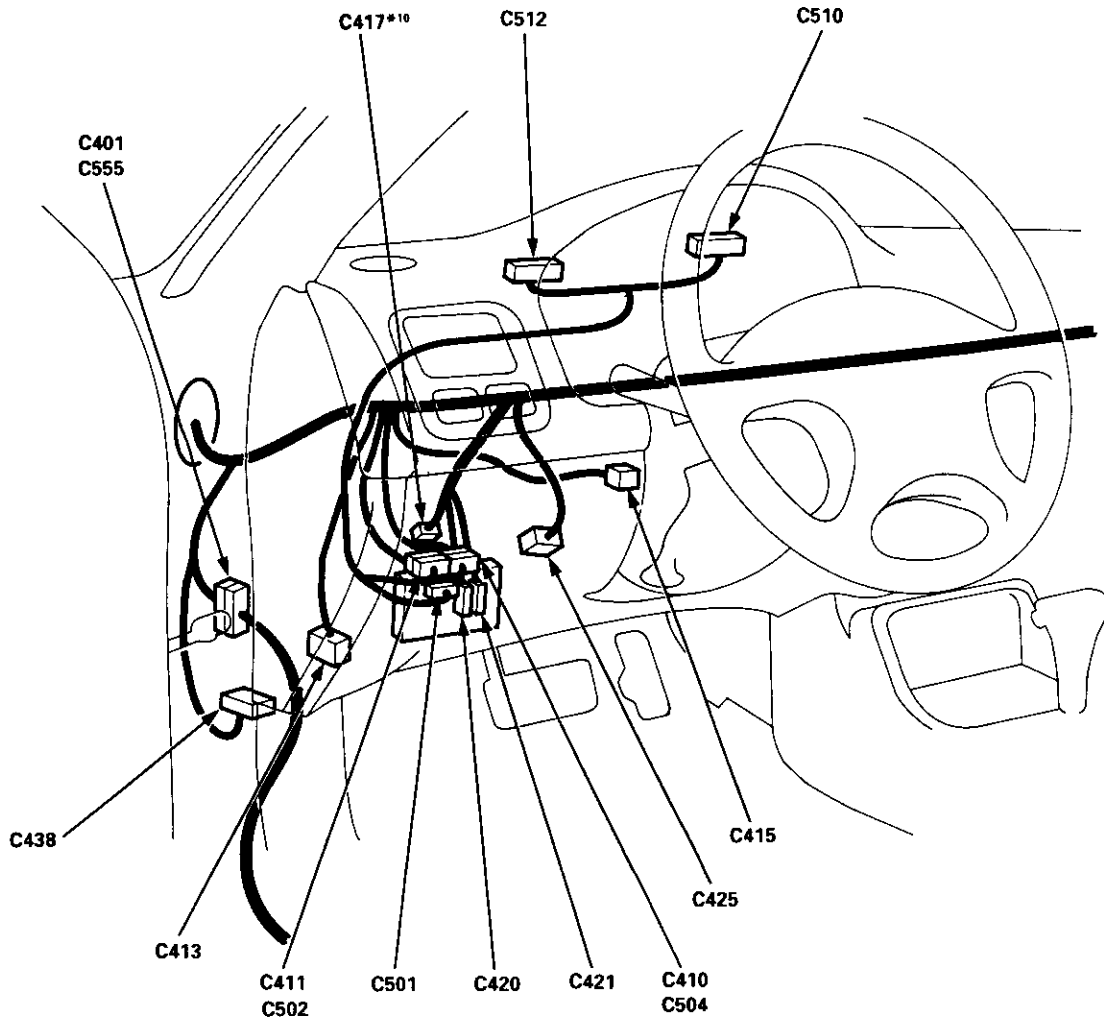




C410 (A/T)



1	---	⑦	BLK/BLU
2	---	⑧	BRN
3	---	⑨	BLU ^{2*}
4	---	⑩	GRN ^{2*}
④	WHT ^{2*}	⑪	GRN/BLK ^{2*}
⑤	RED	⑫	LT GRN ^{1/2}

C411



1	RED/GRN ^{1/10}	13	LT GRN/RED
2	WHT*	14	LT GRN/BLK
3	YEL*	15	WHT/BLK
4	---	16	RED/YEL*
5	BLU (SRS)	17	RED/WHT*
6	GRY*	18	WHT/BLU
7	BLU/RED*	19	BLU
8	RED/BLU**	20	RED/BLU
9	LT GRN**	⑫	GRN/ORN
10	BLU/YEL (ABS)	22	BLU/WHT
11	YEL/GRN	23	YEL/RED
12	RED	24	BLU/RED (ABS)


*: Security Alarm System
**: Cruise Control

C413



1	---	9	---
2	---	10	---
3	---	11	---
4	---	⑫	BLK
5	---	⑬	BLK
⑥	LT BLU	14	---
7	---	⑭	BLU/YEL
⑧	WHT/RED	16	---

C415



1	BLK/YEL*
1	BLK/WHT
2	BLU/RED
③	WHT/BLK
4	BLK
5	WHT
6	WHT/BLU
7	WHT/GRN


*: Security Alarm System

C417^{1/10}




①	RED ¹
②	BLK

C420



1	RED/BLU (Canada)	⑩	BLK/WHT
2	---	12	---
3	BLK	13	---
4	---	14	---
5	WHT/GRN	15	---
6	WHT/BLU	16	BLK/WHT (Canada)
7	---	17	---
⑧	YEL/GRN	18	WHT/GRN
9	BLK/YEL	19	---
⑪	BLK/WHT	20	WHT/RED


C421



1	RED/YEL	10	GRN/YEL
2	BLK/BLU (ABS)	11	---
3	RED/GRN	⑫	BLK/WHT
4	GRN/BLK	⑬	BLK/WHT
5	RED/BLU	14	GRN/RED
6	WHT/BLU	15	---
7	---	16	GRN/RED
8	---	17	RED/BLK
9	RED/WHT	18	RED/BLK

C425


(without cruise control)



①	GRN/WHT ¹
②	WHT/GRN
3	---
4	---


C425

(with cruise control)



1	LT GRN
2	GRY
③	GRN/WHT ¹
④	WHT/GRN

C438**




1	GRN/BLK	12	GRN/WHT
②	RED/GRN	13	LT BLU
3	---	14	BRN
④	RED/BLK	15	WHT/RED
5	BLU/WHT	16	ORN/BLU
⑥	PNK ²	17	GRN
⑦	GRY	18	GRN/RED
8	RED/BLU	19	---
9	WHT	⑫	WHT/RED ¹
10	RED/BLU	21	---
11	---	22	---

C501




1	RED/GRN	11	YEL/BLK
2	BLK/BLU	12	BLK/YEL
3	WHT/BLU	13	YEL/GRN
4	BLK	14	---
5	GRN/WHT	15	RED/BLK
6	GRN/RED	16	---
7	GRN/ORN	17	---
8	BLU/YEL	18	BLK/WHT
9	GRN/YEL	19	YEL/RED
⑩	YEL	20	---

C510 (A/T)




1	YEL	8	BLK	1	YEL	8	BLK	1	WHT/BLK	8	BLU
2	RED/BLK	⑨	GRN/BLK ²	2	RED/BLK	9	YEL	2	GRN/BLK	9	---
3	RED	⑩	GRN	3	RED	10	GRN	3	YEL/RED	10	---
④	BLU ²	⑪	RED	4	BLU ¹	⑫	RED	④	YEL	11	---
5	---	⑬	WHT ²	5	---	12	WHT ¹	⑤	GRN/ORN	12	---
6	---	⑭	BLK/BLU	6	BRN	⑮	BLK/BLU	6	RED/GRN	13	---
7	---	⑯	LT GRN ¹ (2)	7	---	⑰	LT GRN	7	GRN/RED	---	---

C512



C555



①	BLK/WHT ^{2*} ⑮	⑧	LT GRN ^{2*} ⑮
2	LT GRN/BLK*	⑨	BLU ^{2*} ⑮
3	LT GRN*	⑩	GRN
④	YEL/BLU ^{2*} ⑮	11	LT GRN/RED
⑤	GRN/BLK ^{2*} ⑮	12	GRN/BLK
6	RED/BLU	13	GRN/WHT
7	WHT/GRN	⑯	YEL/GRN

*: coupe

NOTE: ● Different wires with the same color have been given a number suffix to distinguish them (for example, YEL/BLK¹ and YEL/BLK² are not the same).

○: Related to Fuel and Emissions System.


● — Connector with male terminals (double outline): View from terminal side

● — Connector with female terminals (single outline): View from wire side

(cont'd)


System Description

System Connectors [Dash and Floor] (cont'd)

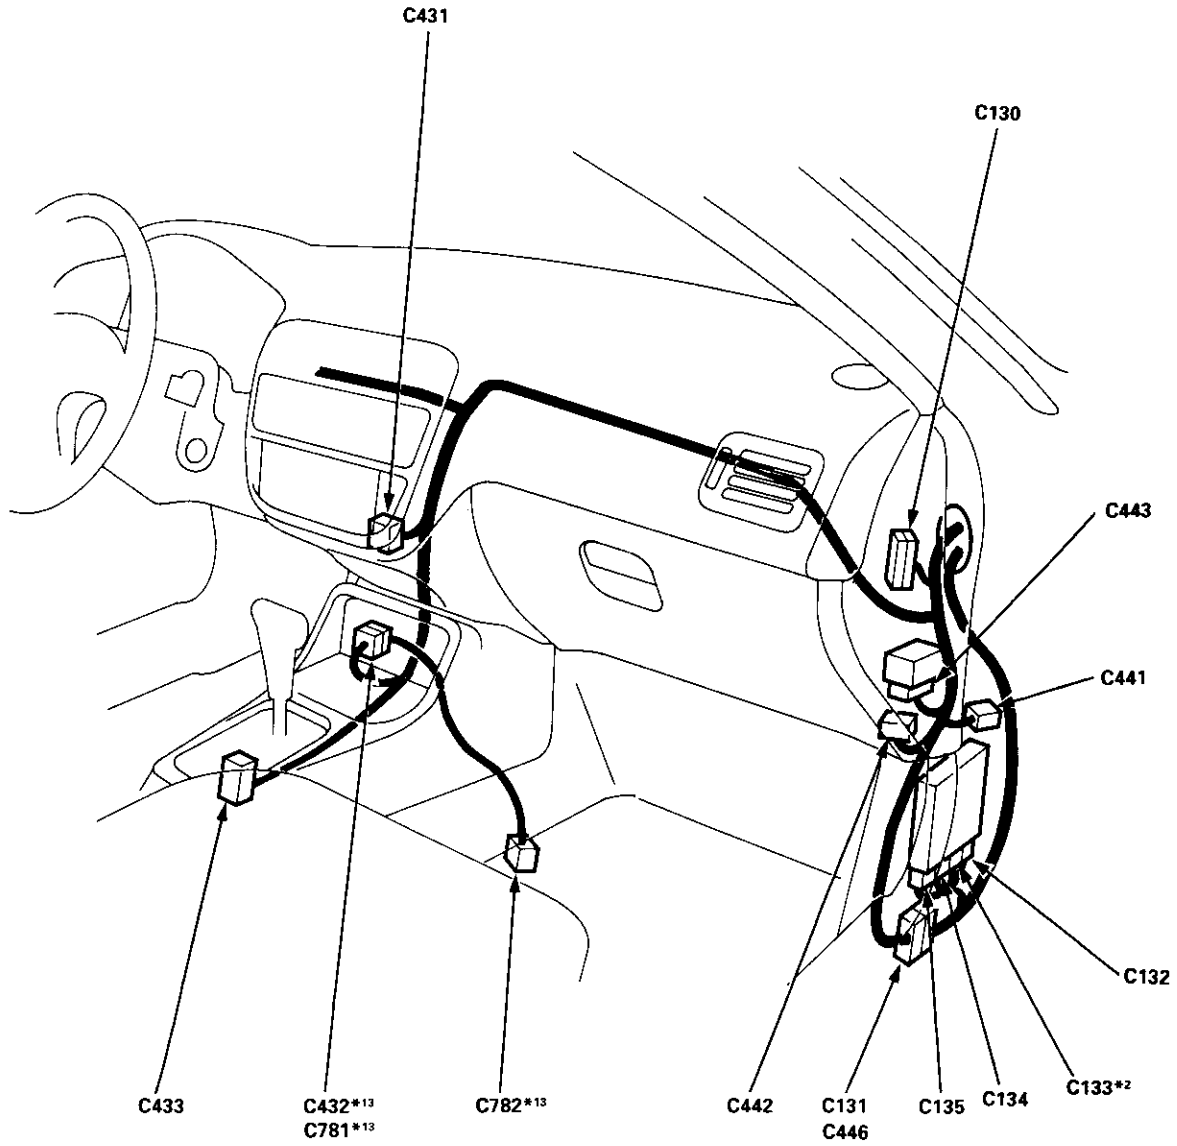



C130



① GRN ¹	10 BLU/WHT
② YEL/BLU*	⑪ BRN/BLK ¹
③ GRN ¹	⑫ BRN/BLK ¹
④ YEL/BLU*	⑬ BRN/BLK ¹
⑤ GRN	⑭ BRN/BLK ¹
⑥ YEL/BLU*	⑮ BRN/BLK ¹
⑦ YEL/BLK ¹	⑯ BRN/BLK ¹
⑧ YEL/BLK ¹	⑰ BRN/BLK ¹
⑨ YEL/BLK ²	⑱ BRN/BLK ¹
⑩ BLU/WHT	⑲ BRN/BLK ¹
⑪ BLU/WHT	** '98 D16Y5 engine

C131



(D16Y5, D16Y8 engines)

① LT GRN ² **	⑩ WHT/BLU	18 BLU/WHT
② GRN/BLK ^{**13}	⑪ BLU ^{**14}	⑱ BLK/RED
③ RED/BLK ^{**}	⑫ BLK/WHT ^{**13}	⑳ GRN/YEL ¹
④ WHT/RED ^{**13}	⑬ WHT/RED ^{**16}	㉑ LT BLU
⑤ LT GRN ^{**12**}	⑭ RED/GRN ^{**}	㉒ BLU/ORN
⑥ RED ² **16	⑮ GRN/BLK ^{**18}	** AT
⑦ WHT/RED ²	⑯ YEL ^{**14}	
⑧ YEL/BLU*	⑰ PNK ^{**18}	
⑨ GRN	⑱ PNK ^{**14}	
⑩ BLU/RED ²	⑲ GRN ^{**}	
⑪ GRN/ORN	⑳ GRN/RED ^{**1}	
⑫ BRN ²	㉑ GRN/WHT ²	

(D16Y7 engine)

1 LT GRN ^{**13}	⑩ BLU ^{**}
② GRN/BLK ^{**}	⑪ GRN/BLK ^{**15}
③ WHT ^{**}	⑫ YEL ^{**}
④ LT GRN ^{**}	⑬ GRN/BLK ^{**}
⑤ WHT/RED ²	⑭ PNK ^{**}
⑥ YEL/BLU ^{**15}	⑮ YEL
⑦ GRN	⑯ GRN/RED ^{**1}
⑧ BLU/RED ²	⑰ GRN/WHT ²
⑨ GRN/ORN	⑱ BLU/WHT
⑩ BRN ²	⑲ BLK/RED
⑪ WHT/BLU	⑳ GRN/YEL ¹
⑫ BLU ^{**15}	㉑ LT BLU
	㉒ BLU/ORN


*: AT ** M/T

C132 (ECM/PCM-A)




① YEL ¹	⑩ ORN ^{**}	⑳ WHT/RED ^{**}
② BLU ¹	⑪ BLK/BLU ^{**26}	26
③ RED ¹	⑫ RED/YEL ¹	⑳ GRN ¹
④ BRN ¹	⑬ GRN/YEL ²	㉑ BLU ^{**15}
⑤ BLK/WHT ¹	⑭ BLK/RED ²	㉒ LT GRN/WHT ^{**14,15}
⑥ BLK/WHT ^{**10}	⑮ GRN/ORN	⑳ WHT/RED ^{**2}
⑦ RED ^{**}	⑯ WHT/GRN ^{**1}	31
⑧ PNK ^{**16}	⑰ YEL/GRN	32
⑨ GRN/YEL ^{**12}	⑱	
⑩ BRN/BLK ¹	⑳ BRN/BLK ²	
⑪ BLK ¹	㉑ BLK ²	
⑫ YEL/BLK ¹	㉒ YEL/BLK ²	
⑬ BLK/BLU ^{**1}		

C133^{**2} (PCM-B)



① WHT ¹	⑩ GRN/WHT ¹	21
② RED ²	⑪ WHT/RED ²	㉑ GRN ²
③ BLU/YEL	⑫ GRN/BLK ²	㉒ BLU ¹
④ GRN/BLK ¹	⑬ WHT ¹	㉓ YEL ¹
⑤ YEL ²	⑭ RED ¹	㉔ LT GRN ¹
⑥	⑮ WHT ²	
⑦	⑯ BLU ²	
⑧ PNK ²	⑰	
⑨	⑱	
⑩	⑲	

C134 (ECM/PCM-C)




① BLU/RED ¹	⑩ RED ²	⑳ WHT ^{**10}
② BLU ²	⑪ BLK ²	26
③ GRN ²	⑫ BLU/BLK ^{**17}	27
④ YEL ¹	⑬ GRN ^{**1}	28
⑤ BLU/RED ²	⑭ WHT/RED ¹	㉑ LT GRN ^{**2}
⑥ BLU/ORN	⑮ BLU/WHT	㉒ RED ^{**10}
⑦ BRN ¹	⑯	㉓ PNK ^{**}
⑧ LT BLU	⑰	31
⑨ GRN ^{**}	⑱	
⑩ WHT/BLU	㉑	
⑪ WHT/RED ¹	㉒ BLK ^{**10}	
⑫ WHT ¹	㉓ RED ^{**10}	

C135 (ECM/PCM-D)




① RED/BLK	⑩ WHT/BLK ^{**}
② RED/WHT	⑪ YEL/BLU
③ RED/GRN	⑫ GRN/BLK ¹
④ YEL/RED	⑬ GRN/WHT ¹
⑤ GRN/WHT ²	⑭ GRN/BLK ^{**17}
⑥ RED/BLU ^{**}	⑮ RED/YEL ^{**14}
⑦ WHT ^{**10}	⑯ WHT/RED ²
⑧ RED/YEL ²	⑰ LT GRN ^{**15,16}
	⑱ GRN/RED ^{**1}

C431




1 WHT/BLU
2 YEL
3 YEL/BLK
4 BLK
5 WHT
6 BLK/BLU
7 WHT/RED ^{**1}
8 WHT/BLK

C432^{**13}



① BLK/WHT
② GRN/WHT
③ WHT/RED ²
④ BLK/WHT ¹

C433



1 BLK	8
2	9 PNK [*]
3 YEL/RED	10 BLK/WHT
4 GRN/BLK	11 BLK/RED
5 BLU ^{**2}	12 BLK/BLU
6 GRN ^{**}	13 WHT ^{**2}
7 YEL ^{**2}	14 RED

*: Cruise control

C441



① BRN ²
② BLK

C442



1 BRN/BLK	11 GRN/RED
2 BRN/BLK	12 GRN/RED
3 BRN/BLK	13 GRN/RED
4 BLU/WHT	14
5 BLU/WHT	15
6 BLU/WHT	16
7 GRN/WHT	17 BLU
⑧ GRN/WHT ²	18 BLU
9 GRN/WHT	19 BLU
⑩ GRN/WHT ²	20 BLU

C443



1 GRN/YEL ²	5 YEL/GRN
2 BLU/WHT	6 YEL/BLK ¹
3 BLK ¹	7 WHT/BLK
4 YEL/GRN	

C782^{**13}



① WHT/RED ²
② GRN/WHT
③ BLK/WHT ¹
④ BLK/WHT

NOTE: ● Different wires with the same color have been given a number suffix to distinguish them (for example, YEL/BLK¹ and YEL/BLK² are not the same).

○: Related to Fuel and Emissions System.

● — Connector with male terminals (double outline): View from terminal side

— Connector with female terminals (single outline): View from wire side

Troubleshooting


Troubleshooting Procedures

I. How To Begin Troubleshooting

When the Malfunction Indicator Lamp (MIL) has been reported on, or there is a driveability problem, use the appropriate procedure below to diagnose and repair the problem.

A. When the MIL has come on:

1. Connect the Honda PGM Tester or an OBD II scan tool to the 16P Data Link Connector (DLC) located near the left kick panel.
2. Turn the ignition switch ON (II).
3. Check the DTC and note it. Also check and note the freeze frame data. Refer to the Diagnostic Trouble Code Chart and begin troubleshooting.

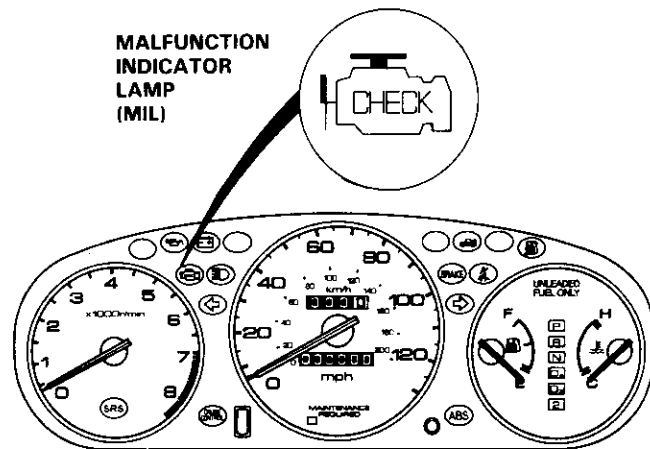



NOTE:

- See the OBD II scan tool or Honda PGM Tester user's manuals for specific operating instructions.
- The scan tool or tester can read the Diagnostic Trouble Codes (DTC), freeze frame data, current data, and other Engine Control Module (ECM)/Powertrain Control Module (PCM) data.
- Freeze frame data indicates the engine conditions when the first malfunction, misfire or fuel trim malfunction was detected. It can be useful information when troubleshooting.

B. When the MIL has not come on, but there is a driveability problem, refer to the Symptom Chart on page 11-46.

C. DTCs will be indicated by the blinking of the Malfunction Indicator Lamp (MIL) with the SCS service connector connected.

Connect the SCS service connector to Service Check Connector as shown. (The 2P Service Check Connector is located under the dash on the passenger's side of the vehicle.) Turn the ignition switch ON (II).

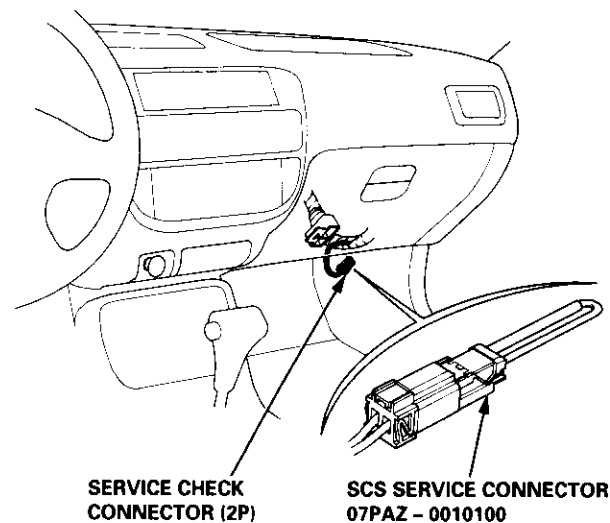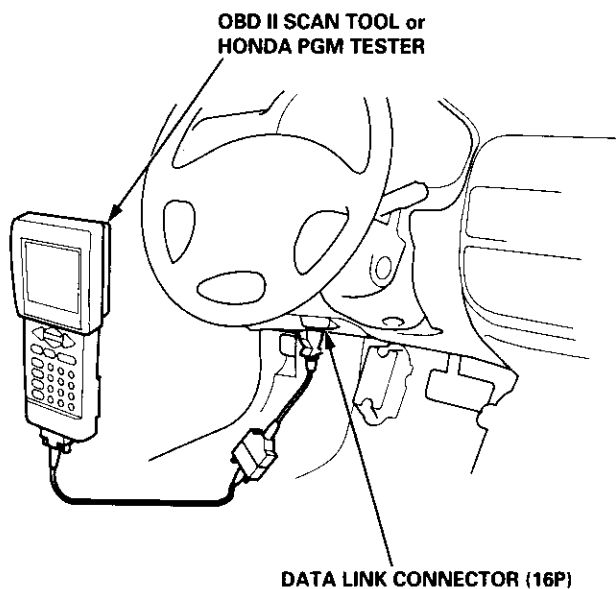



II. Engine Control Module (ECM)/Powertrain Control Module (PCM) Reset Procedure


Either of the following actions will reset the ECM/PCM.

- Use the OBD II scan tool or Honda PGM Tester to clear the ECM's/PCM's memory.

NOTE: See the OBD II scan tool or Honda PGM Tester user's manuals for specific operating instructions.

- Turn the ignition switch OFF. Remove the BACK UP (7.5 A) fuse from the under-hood fuse/relay box for 10 seconds.

NOTE: Removing the BACK UP (7.5 A) fuse cancels the clock and the radio presets. Make note of the customer's presets so you can reset them.

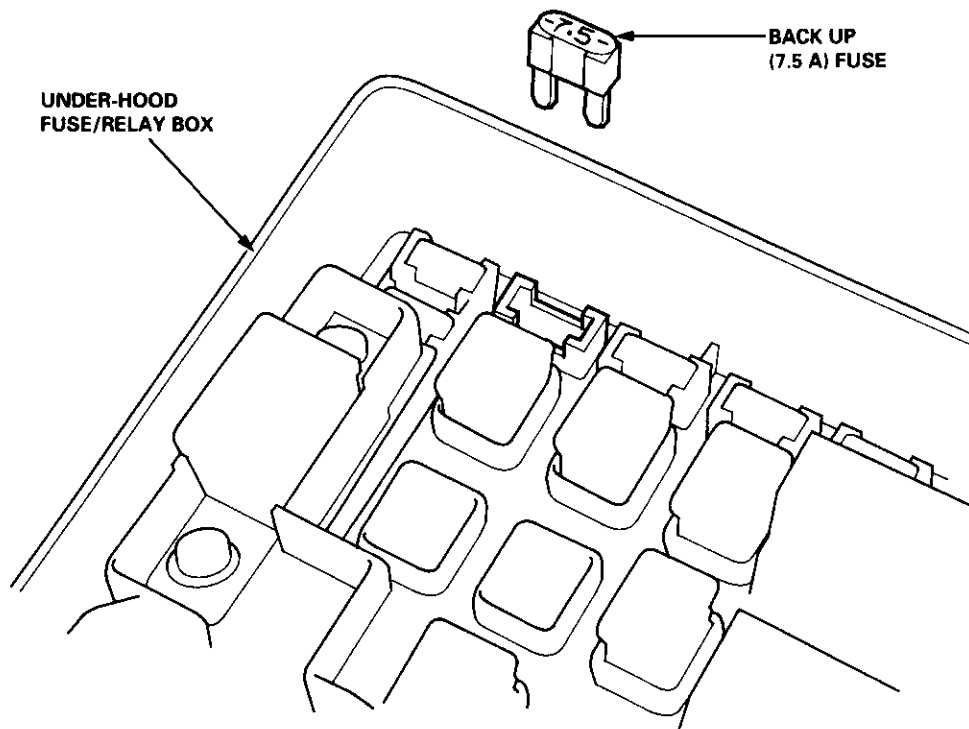

III. Final Procedure (this procedure must be done after any troubleshooting)

1. Remove the SCS Service Connector if it is connected.

NOTE: If the SCS service connector is connected and there are no DTCs stored in the ECM/PCM, the MIL will stay on when the ignition switch is turned ON (II).


2. Do the ECM/PCM Reset Procedure.
3. Turn the ignition switch OFF.

(cont'd)

Troubleshooting


Troubleshooting Procedures (cont'd)

If the inspection for a particular code requires voltage or resistance checks at the ECM/PCM connectors, remove the right kick panel. Pull the carpet back to expose the ECM/PCM. Remove the ABS control unit if so equipped. Unbolt the ECM/PCM bolt. Turn the ignition switch OFF, and connect the backprobe sets and a digital multimeter as described below. Check the system according to the procedure described for the appropriate code(s) listed on the following pages.

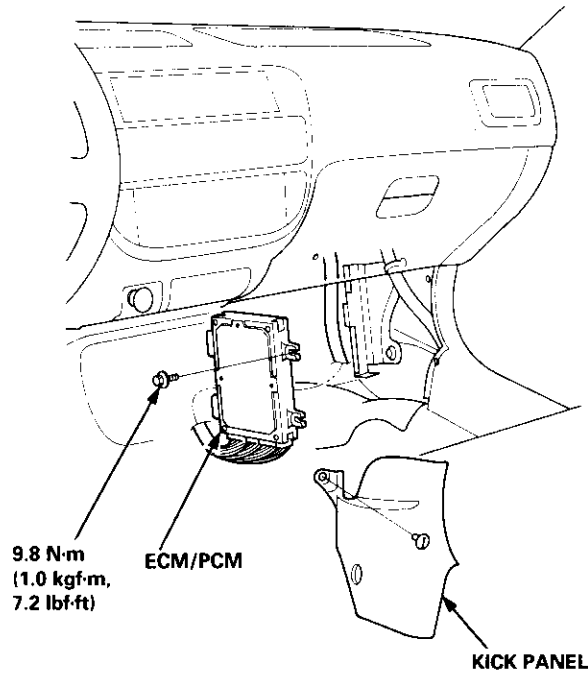

How to Use the Backprobe Sets


Connect the backprobe adapters to the stacking patch cords, and connect the cords to a multimeter. Using the wire insulation as a guide for the contoured tip of the backprobe adapter, gently slide the tip into the connector from the wire side until it comes in contact with terminal end of the wire.

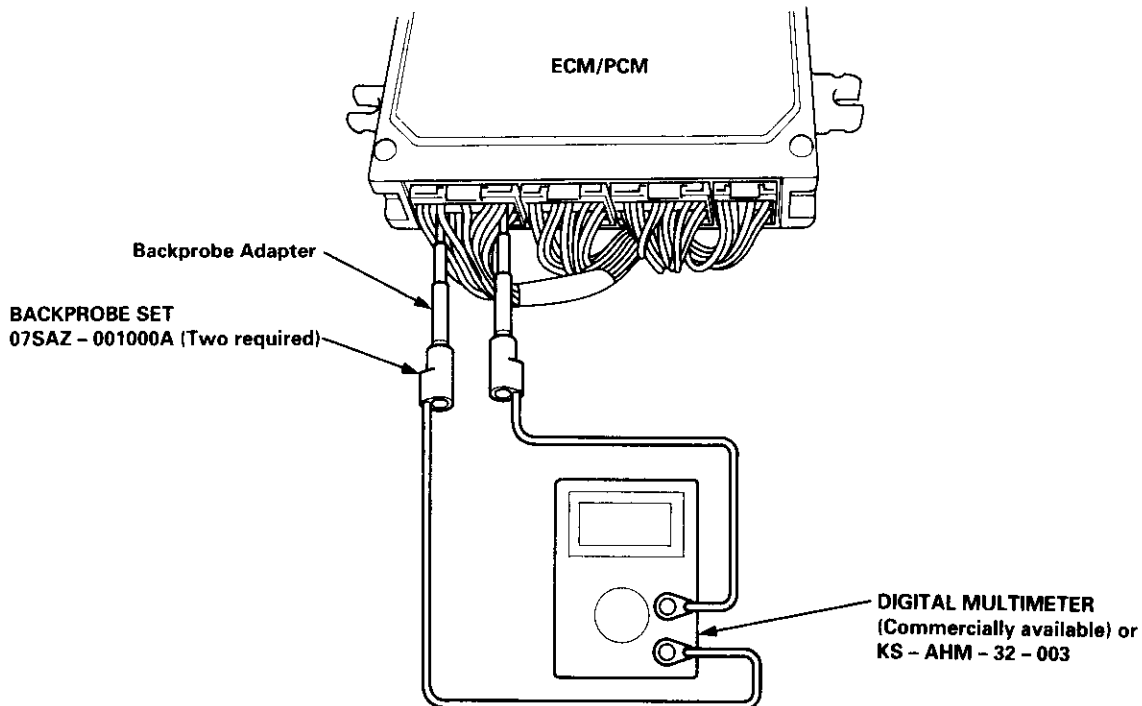



CAUTION:

- Puncturing the insulation on a wire can cause poor or intermittent electrical connections.
- Bring the tester probe into contact with the terminal from the terminal side of wire harness connectors in the engine compartment. For female connectors, just touch lightly with the tester probe and do not insert the probe.

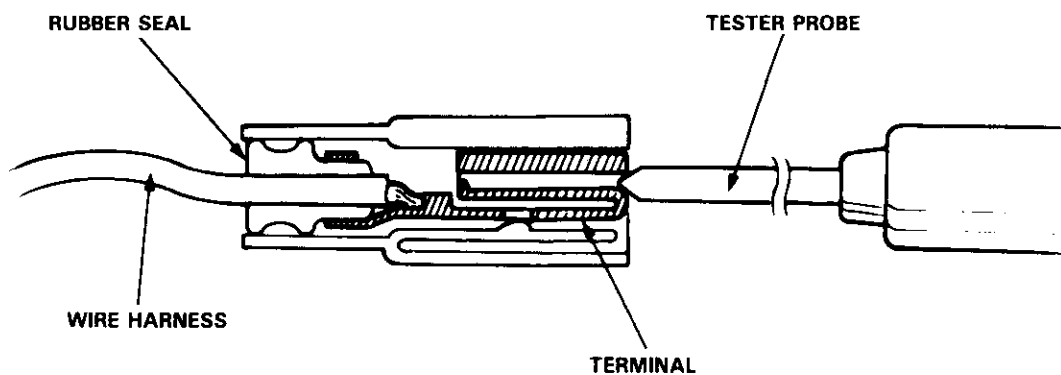

(cont'd)

Troubleshooting

Troubleshooting Procedures (cont'd)

Symptom Chart

Listed below are symptoms and probable causes for problems that DO NOT cause the Malfunction indicator Lamp (MIL) to come on. If the MIL was reported on, go to page 11-42.

Troubleshoot each probable cause in the order listed (from left to right) until the symptom is eliminated.

The probable cause and troubleshooting page reference can be found below.

SYMPTOM	PROBABLE CAUSE
Engine will not start	4, 2, 3, 5, 20, 14, 1
Hard starting	2, 4, 11, 16, 13, 19
Cold fast idle too low	7, 8, 6, 16
Cold fast idle too high	7, 8, 10, 9
Idle speed fluctuates	7, 8, 10, 9
Misfire or rough running	Troubleshoot for misfire on pages 11-105, 108
Low power	2, 9, 10, 12, 17, 16, 18, 20
Engine stalls	2, 4, 11, 7, 20, 8, 5, 15

Other Probable Causes for an engine that will not start:

- Compression
- Starting system
- Intake air leakage
- Overheating
- Engine locked up
- Battery
- Timing belt

Probable Cause List (For the DTC Chart, see page 11-53)

Probable Cause	Page	System
1	11-63	Engine Control Module (ECM)/Powertrain Control Module (PCM)
2	11-150, 151	Fuel pressure
3	11-157	PGM-FI main relay
4	Section 23	Ignition system
5	11-110, 117	Crankshaft Position/Top Dead Center/Cylinder Position sensor circuit, CKF sensor circuit
6	11-73	Intake Air Temperature (IAT) sensor circuit
7	11-126, 128	Idle Air Control Valve (IACV)
8	11-141, 142, 143, 144	Idle speed adjustment
9	11-164	Throttle body
10	11-162	Throttle cable
11	11-67	Manifold Absolute Pressure (MAP) sensor
12	11-79	Throttle Position (TP) sensor
13	11-113	Barometric pressure (BARO) sensor
14	Section 14, 11-139	A/T gear position signal (see page 11-137) or clutch switch signal
15	11-134	Brake switch signal
16	11-162	Air Cleaner
17	—	Intake air pipe
18	11-168	Three Way Catalytic Converter (TWC)
19	11-181	Evaporative emission (EVAP) control
20	—	Contaminated fuel



ECM/PCM Data

By connecting the OBD II scan tool or the Honda PGM Tester to the 16P data link connector (DLC), various data can be retrieved from the ECM/PCM. The items listed in the table below conform to the SAE recommended practice.

The Honda PGM Tester also reads data beyond that recommended by SAE.

Understanding this data will help to find the causes of intermittent failures or engine problems.

NOTE:

- The "operating values" given below are approximate values and may be different depending on the environment and the individual vehicle.
- Unless noted otherwise, "at idle speed" means idling with the engine completely warmed up, A/T in position **P** or **N**, M/T in neutral, and the A/C and all accessories turned off.

Data	Description	Operating Value	Freeze Data
Diagnostic Trouble Code (DTC)	If the ECM /PCM detects a problem, it will store it as a code consisting of one letter and four numbers. Depending on the problem, an SAE-defined code (P0xxx) or a Honda-defined code (P1xxx) will be output to the tester.	If no problem is detected, there is no output.	YES
Engine Speed	The ECM/PCM computes engine speed from the signals sent from the Crankshaft Position sensor. This data is used for determining the time and amount of fuel injection.	Nearly the same as tachometer indication.	YES
Vehicle Speed	The ECM/PCM converts pulse signals from the Vehicle Speed Sensor (VSS) into speed data.	Nearly the same as speedometer indication	YES
Manifold Absolute Pressure (MAP)	The absolute pressure caused in the intake manifold by engine load and speed.	With engine stopped: Nearly the same as atmospheric pressure At idle speed: 24 – 37 kPa (180 – 280 mmHg, 7.1 – 11.0 inHg)	YES
Engine Coolant Temperature (ECT)	The ECT sensor converts coolant temperature into voltage and signals the ECM/PCM. The sensor is a thermistor whose internal resistance changes with coolant temperature. The ECM/PCM uses the voltage signals from the ECT sensor to determine the amount of injected fuel.	With cold engine: Same as ambient temperature and IAT With engine warmed up: 176 – 194°F (80 – 90°C)	YES
Heated Oxygen Sensor (HO2S) (Primary, Sensor 1) (Secondary Sensor 2)	The Heated Oxygen Sensor detects the oxygen content in the exhaust gas and sends voltage signals to the ECM/PCM. Based on these signals, the ECM/PCM controls the air/fuel ratio. When the oxygen content is high (that is, when the ratio is leaner than the stoichiometric ratio), the voltage signal is lower. When the oxygen content is low (that is, when the ratio is richer than the stoichiometric ratio), the voltage signal is higher.	0.0 – 1.25 V At idle speed: about 0.1 – 0.9 V	NO (Sensor 1)

(cont'd)

Troubleshooting


Troubleshooting Procedures (cont'd)

Data	Description	Operating Value	Freeze Data
HO2S Feedback Loop Status	Loop status is indicated as "open" or "closed". Closed: Based on the HO2S output, the ECM/PCM determines the air/fuel ratio and controls the amount of injected fuel. Open: Ignoring HO2S output, the ECM/PCM refers to signals from the TP, MAP, and ECT sensors to control the amount of injected fuel.	At idle speed: closed	YES
Short Term Fuel Trim	The air/fuel ratio correction coefficient for correcting the amount of injected fuel when HO2S feedback is in the closed loop status. When the signal from the HO2S is weak, short term fuel trim gets higher, and the ECM/PCM increases the amount of injected fuel. The air/fuel ratio gradually gets richer, causing a higher HO2S output. Consequently, the short term fuel trim is lowered, and the ECM/PCM reduces the amount of injected fuel. This cycle keeps the air/fuel ratio close to the stoichiometric ratio when in closed loop status.	± 20%	YES
Long Term Fuel Trim	Long term fuel trim is computed from short term fuel trim and indicates changes occurring in the fuel supply system over a long period. If long term fuel trim is higher than 1.00, the amount of injected fuel must be increased. If it is lower than 1.00, the amount of injected fuel must be reduced.	± 20%	YES
Intake Air Temperature (IAT)	The IAT sensor converts intake air temperature into voltage and signals the ECM/PCM. When intake air temperature is low, the internal resistance of the sensor increases, and the voltage signal is higher.	With cold engine: Same as ambient temperature and ECT	YES
Throttle Position	Based on the accelerator pedal position, the opening angle of the throttle valve is indicated.	At idle speed: approx. 10 %	YES
Ignition Timing	Ignition timing is the ignition advance angle set by the ECM/PCM. The ECM/PCM matches ignition timing to the driving conditions.	At idle speed: 12° ± 2° BTDC with the SCS service connector connected.	NO
Calculated Load Value (CLV)	CLV is the engine load calculated from the MAP data.	At idle speed: 15 - 35 % At 2,500 rpm with no load: 12 - 30%	YES



Engine/Powertrain Control Module Terminal Arrangement

ECM/PCM CONNECTOR A (32P)

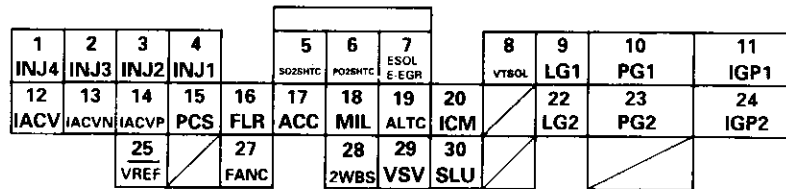

Wire side of female terminals

ECM/PCM CONNECTOR A (32P)

NOTE: Standard battery voltage is 12 V.

Terminal number	Wire color	Terminal name	Description	Signal
1	YEL	INJ4 (No. 4 FUEL INJECTOR)	Drives No. 4 fuel injector.	With engine running: pulses
2	BLU	INJ3 (No. 3 FUEL INJECTOR)	Drives No. 3 fuel injector.	
3	RED	INJ2 (No. 2 FUEL INJECTOR)	Drives No. 2 fuel injector.	
4	BRN	INJ1 (No. 1 FUEL INJECTOR)	Drives No. 1 fuel injector.	
5	BLK/WHT	SO2SHTC (SECONDARY HEATED OXYGEN SENSOR HEATER CONTROL)	Drives secondary heated oxygen sensor heater.	With ignition switch ON (III): battery voltage With fully warmed up engine running: duty controlled
6	BLK/WHT	PO2SHTC (PRIMARY HEATED OXYGEN SENSOR HEATER CONTROL)	Drives primary heated oxygen sensor heater.	With ignition switch ON (II): battery voltage With fully warmed up engine running: duty controlled
7	RED*3	ESOL (EGR CONTROL SOLENOID VALVE)	Drives EGR control solenoid valve.	With EGR operating during driving with fully warmed up engine: duty controlled With EGR not operating: 0 V
	PNK*10	E-EGR	Drives EGR valve.	With EGR operating during driving with fully warmed up engine: duty controlled. With EGR not operating: 0 V
8*12	GRN/YEL	VTS (VTEC SOLENOID VALVE)	Drives VTEC solenoid valve.	With engine at low engine speed: 0 V With engine at high engine speed: battery voltage
9	BRN/BLK	LG1 (LOGIC GROUND)	Ground for the ECM/PCM control circuit.	Less than 1.0 V at all times
10	BLK	PG1 (POWER GROUND)	Ground for the ECM/PCM power circuit.	
11	YEL/BLK	IGP1 (POWER SOURCE)	Power source for the ECM/PCM control circuit.	With ignition switch ON (III): battery voltage With ignition switch OFF: 0 V
12*5	BLK/BLU	IACV (IDLE AIR CONTROL VALVE)	Drives IACV.	With engine running: pulses
13*4	ORN	IACV N (IDLE AIR CONTROL VALVE NEGATIVE SIDE)	Drives the IAC valve (negative side).	
14*4	BLK/BLU	IACV P (IDLE AIR CONTROL VALVE POSITIVE SIDE)	Drives IAC valve (positive side).	
15	RED/YEL	PCS (EVAP PURGE CONTROL SOLENOID VALVE)	Drives EVAP purge control solenoid valve.	With engine running, engine coolant below 154°F (68°C): battery voltage With engine running, engine coolant above 154°F (68°C): 0 V
16	GRN/YEL	FLR (FUEL PUMP RELAY)	Drives fuel pump relay.	0 V for two seconds after turning ignition switch ON (III), then battery voltage
17	BLK/RED	ACC (A/C CLUTCH RELAY)	Drives A/C clutch relay.	With compressor ON: 0 V With compressor OFF: battery voltage
18	GRN/ORN	MIL (MALFUNCTION INDICATOR LAMP)	Drives MIL.	With MIL turned ON: 0 V With MIL turned OFF: battery voltage
19*1	WHT/GRN	ALTC (ALTERNATOR CONTROL)	Sends alternator control signal.	With fully warmed-up engine running: battery voltage During driving with small electrical load: 0 V
20	YEL/GRN	ICM (IGNITION CONTROL MODULE)	Sends ignition pulse.	With ignition switch ON (III): battery voltage With engine running: about 10 V (depending on engine speed)
22	BRN/BLK	LG2 (LOGIC GROUND)	Ground for the ECM/PCM control circuit.	Less than 1.0 V at all times
23	BLK	PG2 (POWER GROUND)	Ground for the ECM/PCM power circuit.	
24	YEL/BLK	IGP2 (POWER SOURCE)	Power source for the ECM/PCM control circuit.	With ignition switch ON (III): battery voltage With ignition switch OFF: 0 V
25*6	WHT/RED	VREF (REFERENCE VOLTAGE)	Provides reference voltage to TCM.	With ignition switch ON (III): about 5 V With ignition switch OFF: 0 V
27*1	GRN	FANC (RADIATOR FAN CONTROL)	Drives radiator fan relay.	With radiator fan running: 0 V With radiator fan stopped: battery voltage
28*8, *15	BLU	2WBS (EVAP BYPASS SOLENOID VALVE)	Drives EVAP bypass solenoid valve.	With ignition switch ON (III): battery voltage
29*8, *15	LT GRN/WHT	VSV (EVAP CONTROL CANISTER VENT SHUT VALVE)	Drives EVAP control canister vent shut valve.	With ignition switch ON (III): battery voltage
30*3	WHT/RED	SLU (INTERLOCK CONTROL UNIT)	Detects interlock control unit signal.	With ignition switch ON (II) and brake pedal depressed: battery voltage

*1: USA model

*2: A/T (D16Y7, D16Y8 engine)

*3: CVT (D16Y5 engine)

*4: A/T and D16Y7 engine

*5: Except A/T and D16Y7 engine

*6: A/T (D16Y8 engine)

*7: CVT (D16Y5 engine) and D16Y8 engine

*8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model),

'98 D16Y5 engine, '98 D16Y8 engine

*9: D16Y5 engine

*10: M/T (D16Y5 engine)

*11: Except M/T (D16Y5 engine)

*12: D16Y5, D16Y8 engine

*13: D16Y8 engine

*14: D16Y7 engine

*15: '97 D16Y7 engine (coupe: KL model), sedan: KL (LX) model),


'98 D16Y7 engine

(cont'd)

Troubleshooting

Engine/Powertrain Control Module Terminal Arrangement (cont'd)

PCM CONNECTOR B (25P)

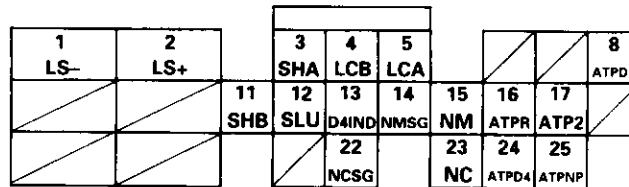

Wire side of female terminals

PCM CONNECTOR B (25P)*2

NOTE: Standard battery voltage is 12 V.

Terminal number	Wire color	Terminal name	Description	Signal
1	WHT	LS- (LINEAR SOLENOID VALVE - SIDE)	Ground for linear solenoid valve.	With ignition switch ON (II): pulses
2	RED	LS+ (LINEAR SOLENOID VALVE + SIDE)	Drives linear solenoid valve.	With ignition switch ON (II): pulses
3	BLU/YEL	SHA (SHIFT CONTROL SOLENOID VALVE A)	Drives shift control solenoid valve A.	With engine running in 2nd, 3rd gears: battery voltage With engine running in 1st, 4th gears: about 0 V
4	GRN/BLK	LC B (LOCK-UP CONTROL SOLENOID VALVE B)	Drives lock-up control solenoid valve B.	With lock-up ON: battery voltage With lock-up OFF: 0 V
5	YEL	LC A (LOCK-UP CONTROL SOLENOID VALVE A)	Drives lock-up control solenoid valve A.	With lock-up ON: battery voltage With lock-up OFF: 0 V
8	PNK	ATPD3 (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In $\overline{D_3}$ position: 0 V In any other position: battery voltage
11	GRN/WHT	SHB (SHIFT CONTROL SOLENOID VALVE B)	Drives shift control solenoid valve B.	With engine running in 1st, 2nd: battery voltage With engine running in 3rd, 4th: about 0 V
12	WHT/RED	SLU (INTERLOCK CONTROL UNIT)	Drives interlock control unit.	With ignition switch ON (II) and brake pedal depressed: 0 V
13	GRN/BLK	D4 IND (D4 INDICATOR LIGHT)	Drives D4 indicator light.	With $\overline{D_4}$ indicator light turned ON: battery voltage With $\overline{D_4}$ indicator light turned OFF: 0 V
14	WHT	NMSG (MAINSHAFT SPEED SENSOR GROUND)	Ground for mainshaft speed sensor.	
15	RED	NM (MAINSHAFT SPEED SENSOR)	Detects mainshaft speed sensor signal.	With engine running: pulses
16	WHT	ATPR (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In \overline{R} position: 0 V In any other position: battery voltage
17	BLU	ATP2 (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In $\overline{2}$ position: 0 V In any other position: battery voltage
22	GRN	NCSG (COUNTERSHAFT SPEED SENSOR GROUND)	Ground for countershaft speed sensor.	
23	BLU	NC (COUNTERSHAFT SPEED SENSOR)	Detects countershaft speed sensor signal.	With ignition switch ON (II), and front wheels rotating: pulses
24	YEL	ATPD4 (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In $\overline{D_4}$ position: 0 V In any other position: 5 V
25	LT GRN	ATPNP (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In \overline{N} or \overline{P} position: 0 V In any other position: battery voltage

*1: USA model

*2: A/T (D16Y7, D16Y8 engine)

*3: CVT (D16Y5 engine)

*4: A/T and D16Y7 engine

*5: Except A/T and D16Y7 engine

*6: A/T (D16Y8 engine)

*7: CVT (D16Y5 engine) and D16Y8 engine

*8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine

*9: D16Y5 engine

*10: M/T (D16Y5 engine)

*11: Except M/T (D16Y5 engine)

*12: D16Y5, D16Y8 engine


*13: D16Y8 engine

*14: D16Y7 engine

*15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98D16Y7 engine



ECM/PCM CONNECTOR C (31P)

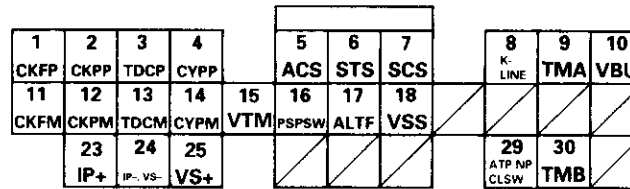

Wire side of female terminals

ECM/PCM CONNECTOR C (31P)

NOTE: Standard battery voltage is 12 V.

Terminal number	Wire color	Terminal name	Description	Signal
1	BLU/RED	CKFP (CKF SENSOR P SIDE)	Detects CKF sensor.	With engine running: pulses
2	BLU	CKPP (CKP SENSOR P SIDE)	Detects CKP sensor.	With engine running: pulses
3	GRN	TDCP (TDC SENSOR P SIDE)	Detects TDC sensor.	With engine running: pulses
4	YEL	CYPP (CYP SENSOR P SIDE)	Detects CYP sensor.	With engine running: pulses
5	BLU/RED	ACS (A/C SWITCH SIGNAL)	Detects A/C switch signal.	With A/C switch ON: 0 V With A/C switch OFF: battery voltage
6	BLU/ORN	STS (STARTER SWITCH SIGNAL)	Detects starter switch signal.	With starter switch ON (III): battery voltage With starter switch OFF: 0 V
7	BRN	SCS (SERVICE CHECK SIGNAL)	Detects service check connector signal (the signal causing a DTC indication)	With the connector connected: 0 V With the connector disconnected: 5 V
8	LT BLU	K-LINE (DLC)	Sends and receives scan tool signal.	With ignition switch ON (II): about 5 V
9*3	GRY	TMA	Data communication with TCM: ECM control data output	With ignition switch ON (II): pulses
10	WHT/BLU	VBU (VOLTAGE BACK UP)	Power source for the ECM/PCM control circuit. Power source for the DTC memory	Battery voltage at all times
11	WHT/RED	CKFM (CKF SENSOR M SIDE)	Ground for CKF sensor signal.	
12	WHT	CKPM (CKP SENSOR M SIDE)	Ground for CKP sensor signal.	
13	RED	TDCM (TDC SENSOR M SIDE)	Ground for TDC sensor signal.	
14	BLK	CYPM (CYP SENSOR M SIDE)	Ground for CYP sensor signal.	
15*12	BLU/BLK	VTM (VTEC PRESSURE SWITCH)	Detects VTEC pressure switch signal.	With engine at low engine speed: 0 V With engine at high engine speed: battery voltage
16	GRN	PSPSW (P/S OIL PRESSURE SWITCH)	Detects PSP switch signal.	At idle with steering wheel in straight ahead position: 0 V At idle with steering wheel at full lock: battery voltage
17	WHT/RED	ALTF (ALTERNATOR FR SIGNAL)	Detects alternator FR signal.	With fully warmed up engine running: 0 V – battery voltage (depending on electrical load)
18	BLU/WHT	VSS (VEHICLE SPEED SENSOR)	Detects VSS signal.	With ignition switch ON (II) and front wheels rotating: cycles 0 V – 5 V
23*10	BLK	IP+ (HO2S PUMP CELL +)	Controls HO2S pump cell.	With ignition switch ON (II): about 0.5 – 5.3 V
24*10	RED	IP-, VS- (HO2S COMMON)	Reference voltage supply.	With fully warmed up engine at idle: about 2.6 – 2.8 V
25*10	WHT	VS+ (VS CELL VOLTAGE)	Detects VS cell voltage.	With ignition switch ON (III): about 7 V
29	LT GRN*3	ATPNP (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In (N) or (P) position: 0 V In any other position: battery voltage
	RED*10	CLSW (CLUTCH SWITCH)	Detects clutch switch signal.	With clutch pedal released: about 5 V With clutch pedal depressed: 0 V
30	PNK	TMB	Data communication with TCM: ECM control data input	With ignition switch ON (II): pulses

*1: USA model

*2: A/T (D16Y7, D16Y8 engine)

*3: CVT (D16Y5 engine)

*4: A/T and D16Y7 engine

*5: Except A/T and D16Y7 engine

*6: A/T (D16Y8 engine)

*7: CVT (D16Y5 engine) and D16Y8 engine

*8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine

*9: D16Y5 engine

*10: M/T (D16Y5 engine)

*11: Except M/T (16Y5 engine)

*12: D16Y5, D16Y8 engine

*13: D16Y8 engine

*14: D16Y7 engine

*15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98D16Y7 engine

(cont'd)

Troubleshooting

Engine/Powertrain Control Module Terminal Arrangement (cont'd)

ECM/PCM CONNECTOR D (16P)

1	2	3	4	5
TPS	ECT	MAP	VCC1	BKSW
6	7	8	9	10
KS	PHO2S: LABEL	IAT	EGRV	VCC2
11	12	13	14	15
SG2	SG1	SHO2SG	SO2S	PTANK
16				
EL				

Wire side of female terminals

ECM/PCM CONNECTOR D (16P)

NOTE: Standard battery voltage is 12 V.

Terminal number	Wire color	Terminal name	Description	Signal
1	RED/BLK	TPS (THROTTLE POSITION SENSOR)	Detects TP sensor signal.	With throttle fully open: about 4.8 V With throttle fully closed: about 0.5 V
2	RED/WHT	ECT (ENGINE COOLANT TEMPERATURE SENSOR)	Detects ECT sensor signal.	With ignition switch ON(II): about 0.1 – 4.8 V (depending on engine coolant temperature)
3	RED/GRN	MAP (MANIFOLD ABSOLUTE PRESSURE SENSOR)	Detects MAP sensor signal.	With ignition switch ON(II): about 3 V At idle: about 1.0 V (depending on engine speed)
4	YEL/RED	VCC1 (SENSOR VOLTAGE)	Power source for MAP sensor.	With ignition switch ON (II): about 5 V With ignition switch OFF: 0 V
5	GRN/WHT	BKSW (BRAKE SWITCH)	Detects brake switch signal.	With brake pedal released: 0 V With brake pedal depressed: battery voltage
6*7	RED/BLU	KS (KNOCK SENSOR)	Detects KS signal.	With engine knocking: pulses
7	WHT*11	PHO2S (PRIMARY HEATED OXYGEN SENSOR, SENSOR 1)	Detects primary heated oxygen sensor (sensor 1) signal.	With throttle fully opened from idle with fully warmed up engine: above 0.6 V With throttle quickly closed: below 0.4 V
	WHT*10	LABEL	Detects LABEL resistance.	With engine running: about 0.3 – 4.9 V
8	RED/YEL	IAT (INTAKE AIR TEMPERATURE SENSOR)	Detects IAT sensor signal.	With ignition switch ON (II): about 0.1 – 4.8 V (depending on intake air temperature)
9*3	WHT/BLK	EGRV (EGR VALVE LIFT SENSOR)	Detects EGR valve lift sensor signal.	At idle without vacuum: about 1.2 V With 27 kPa (200 mmHg, 8 in. Hg): about 4.3 V
10	YEL/BLU	VCC2 (SENSOR VOLTAGE)	Provides sensor voltage.	With ignition switch ON(II): about 5 V With ignition switch OFF: 0 V
11	GRN/BLK	SG2 (SENSOR GROUND)	Sensor ground.	Less than 1.0 V at all times
12	GRN/WHT	SG1 (SENSOR GROUND)	Ground for MAP sensor.	Less than 1.0 V at all times
13	GRN/BLK*12 RED/YEL*14	SHO2SG (SECONDARY HEATED OXYGEN SENSOR, SENSOR 2 GROUND)	Ground for secondary heated oxygen sensor (sensor 2).	
14	WHT/RED	SHO2S (SECONDARY HEATED OXYGEN SENSOR, SENSOR 2)	Detects secondary heated oxygen sensor (sensor 2) signal.	With throttle fully opened from idle with fully warmed up engine: above 0.6 V With throttle quickly closed: below 0.4 V
15*8, *15	LT GRN	PTANK (FUEL TANK PRESSURE SENSOR)	Detects fuel tank pressure sensor.	With fuel fill cap opened: about 2.5 V
16*1	GRN/RED	EL (ELD)	Detects ELD signal.	With parking lights turned on at idle: about 2.5 – 3.5 V With low beam headlights turned on at idle: about 1.5 – 2.5 V

*1: USA model

*2: A/T (D16Y7, D16Y8 engine)

*3: CVT (D16Y5 engine)

*4: A/T and D16Y7 engine

*5: Except A/T and D16Y7 engine

*6: A/T (D16Y8 engine)

*7: CVT (D16Y5 engine) and D16Y8 engine

*8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine

*9: D16Y5 engine

*10: M/T (D16Y5 engine)

*11: Except M/T (D16Y5 engine)

*12: D16Y5, D16Y8 engine

*13: D16Y8 engine

*14: D16Y7 engine

*15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98D16Y7 engine:



Diagnostic Trouble Code (DTC) Chart

DTC (MIL indication*)	Detection Item	Probable Cause	Page
P0106*15 (5)	Manifold Absolute Pressure Circuit Range/Performance Problem	<ul style="list-style-type: none"> • Vacuum connection • MAP sensor 	11-67
P0107 (3)	Manifold Absolute Pressure Circuit Low Input	<ul style="list-style-type: none"> • Open or short in MAP sensor circuit • MAP sensor • ECM/PCM • TCM*1 	11-69
P0108 (3)	Manifold Absolute Pressure Circuit High Input	<ul style="list-style-type: none"> • Open in MAP sensor circuit • MAP sensor • ECM/PCM 	11-71
P0111*14, *15 (10)	Intake Air Temperature Circuit Range/Performance Problem	<ul style="list-style-type: none"> • IAT sensor 	11-73
P0112 (10)	Intake Air Temperature Circuit Low Input	<ul style="list-style-type: none"> • Short in IAT sensor circuit • IAT sensor • ECM/PCM 	11-74
P0113 (10)	Intake Air Temperature Circuit High Input	<ul style="list-style-type: none"> • Open in IAT sensor circuit • IAT sensor • ECM/PCM 	11-75
P0116 (86)	Engine Coolant Temperature Circuit Range/Performance Problem	<ul style="list-style-type: none"> • ECT sensor • Cooling system 	11-76
P0117 (6)	Engine Coolant Temperature Circuit Low Input	<ul style="list-style-type: none"> • Short in ECT sensor circuit • ECT sensor • ECM/PCM 	11-77
P0118 (6)	Engine Coolant Temperature Circuit High Input	<ul style="list-style-type: none"> • Open in ECT sensor circuit • ECT sensor • ECM/PCM 	11-78
P0122 (7)	Throttle Position Circuit Low Input	<ul style="list-style-type: none"> • Open or short in TP sensor circuit • TP sensor • ECM/PCM • TCM*1 	11-79
P0123 (7)	Throttle Position Circuit High Input	<ul style="list-style-type: none"> • Open in TP sensor circuit • TP sensor • ECM/PCM 	11-81
P0131*2 (1)	Primary Heated Oxygen Sensor Circuit Low Voltage (Sensor 1)	<ul style="list-style-type: none"> • Short in Primary HO2S (Sensor1) circuit • Primary HO2S (Sensor 1) • Fuel supply system • ECM/PCM 	11-84
P0132*2 (1)	Primary Heated Oxygen Sensor Circuit High Voltage (Sensor 1)	<ul style="list-style-type: none"> • Open in Primary HO2S (Sensor 1) circuit • Primary HO2S (Sensor 1) • ECM/PCM 	11-86
P0133*2 (61)	Primary Heated Oxygen Sensor Slow Response (Sensor 1)	<ul style="list-style-type: none"> • Primary HO2S (Sensor1) • Exhaust system 	11-87
P0135*2 (41)	Primary Heated Oxygen Sensor Heater Circuit Malfunction (Sensor 1)	<ul style="list-style-type: none"> • Open or short in Primary HO2S (Sensor 1) heater circuit • ECM 	11-98

*: These DTCs will be indicated by the blinking of the Malfunction Indicator Lamp (MIL) with the SCS service connector connected

*1: D16Y5 engine (CVT)

*2: Except D16Y5 engine (M/T)

*14: '97 model

*15: '96 model

*16: '98 model

(cont'd)

Troubleshooting

Diagnostic Trouble Code (DTC) Chart (cont'd)

DTC (MIL indication)	Detection Item	Probable Cause	Page
P0137 (63)	Secondary Heated Oxygen Sensor Circuit Low Voltage (Sensor 2)	<ul style="list-style-type: none"> • Short in Secondary HO2S (Sensor 2) circuit • Secondary HO2S (Sensor 2) • ECM/PCM 	11-95
P0138 (63)	Secondary Heated Oxygen Sensor Circuit High Voltage (Sensor 2)	<ul style="list-style-type: none"> • Open in Secondary HO2S (Sensor 2) circuit • Secondary HO2S (Sensor 2) • ECM/PCM 	11-96
P0139 (63)	Secondary Heated Oxygen Sensor Slow Response (Sensor 2)	<ul style="list-style-type: none"> • Secondary HO2S (Sensor 2) 	11-97
P0141 (65)	Secondary Heated Oxygen Sensor Heater Circuit Malfunction (Sensor 2)	<ul style="list-style-type: none"> • Open or short in Secondary HO2S (Sensor 2) heater circuit • ECM/PCM 	11-98
P0171 (45)	System Too Lean	<ul style="list-style-type: none"> • Fuel supply system • Primary HO2S (Sensor 1) • MAP sensor • Contaminated fuel • Valve clearance • Exhaust leakage 	11-103
P0172 (45)	System Too Rich	<ul style="list-style-type: none"> • Fuel supply system • Primary HO2S (sensor 1) • MAP sensor • Contaminated fuel • Valve clearance 	11-103
P0300*16 and some of P0301 (71) P0302 (72) P0303 (73) P0304 (74)	Random Misfire	<ul style="list-style-type: none"> • Ignition system • Fuel supply system • MAP sensor • EGR system • IAC valve • Contaminated fuel • Lack of fuel 	11-108
P0301 (71) P0302 (72) P0303 (73) P0304 (74)	<ul style="list-style-type: none"> — Cylinder 1 — Cylinder 2 — Cylinder 3 — Cylinder 4 Misfire Detected	<ul style="list-style-type: none"> • Fuel Injector • Fuel Injector circuit • Ignition system • Low compression • Valve clearance 	11-105
P0325*3 (23)	Knock Sensor (KS) Circuit Malfunction	<ul style="list-style-type: none"> • Open or short in Knock Sensor (KS) circuit • Knock Sensor (KS) • ECM/PCM 	11-109
P0335 (4)	Crankshaft Position Sensor Circuit Malfunction	<ul style="list-style-type: none"> • Crankshaft Position Sensor • Crankshaft Position Sensor circuit • ECM/PCM 	11-110
P0336 (4)	Crankshaft Position Sensor Range/Performance	<ul style="list-style-type: none"> • Crankshaft Position Sensor • Timing belt skipped teeth 	11-110
P0401*4 (80)	Exhaust Gas Recirculation Insufficient Flow Detected	<ul style="list-style-type: none"> • EGR valve • EGR line 	11-170
P0420 (67)	Catalyst System Efficiency Below Threshold	<ul style="list-style-type: none"> • Three Way Catalytic converter • Secondary HO2S 	11-168

*3: D16Y5 engine (CVT) and D16Y8 engine

*4: D16Y5 engine

*16: '98 model



DTC (MIL indication)	Detection Item	Probable Cause	Page
P0441*5 (92)	Evaporative Emission Control System Insufficient Purge Flow	<ul style="list-style-type: none"> • EVAP Purge Control Solenoid Valve • Open or short in EVAP Purge Control Solenoid Valve circuit • EVAP Control Canister • Vacuum lines • ECM/PCM 	11-190
P0452*6 (91)	Fuel Tank Pressure Sensor Circuit Low Input	<ul style="list-style-type: none"> • Short in Fuel Tank Pressure Sensor circuit • Fuel Tank Pressure Sensor • ECM/PCM 	11-181
P0453*6 (91)	Fuel Tank Pressure Sensor Circuit High Input	<ul style="list-style-type: none"> • Open in Fuel Tank Pressure Sensor circuit • Fuel Tank Pressure Sensor • ECM/PCM 	11-183
P0500*12 (17)	Vehicle Speed Sensor Circuit Malfunction	<ul style="list-style-type: none"> • Vehicle Speed Sensor • Vehicle Speed Sensor circuit • ECM 	11-112
P0501*13 (17)	Vehicle Speed Sensor Circuit Range/Performance	<ul style="list-style-type: none"> • Vehicle Speed Sensor • Vehicle Speed Sensor circuit • PCM 	11-112
P0505 (14)	Idle Control System Malfunction	<ul style="list-style-type: none"> • IAC valve • Throttle Body 	11-124
P0700*13 and some of P0715 P0720 P0730 P0740 P0753 P0758 (70)*	Automatic Transaxle	—	Section 14
P0700*1 and P0725 (70)*	Automatic Transaxle	—	Section 14
P1106*14, *16 (13)	Barometric Pressure Circuit Range/Performance Problem	• ECM/PCM (Baro sensor)	11-113
P1107 (13)	Barometric Pressure Circuit Low Input	• ECM/PCM (Baro sensor)	11-114
P1108 (13)	Barometric Pressure Circuit High Input	• ECM/PCM (Baro sensor)	11-114
P1121*14, *16 (7)	Throttle Position Lower Than Expected	• TP sensor	11-82
P1122*14, *16 (7)	Throttle Position Higher Than Expected	• TP sensor	11-83
P1128*14, *16 (5)	Manifold Absolute Pressure Lower Than Expected	• MAP sensor	11-72
P1129*14, *16 (5)	Manifold Absolute Pressure Higher Than Expected	• MAP sensor	11-72

*: The **D₁** indicator light and the Malfunction Indicator Lamp (MIL) may come on simultaneously.

*1: D16Y5 engine (CVT)

*5: '96 D16Y5 engine, D16Y7 engine, D16Y8 engine (sedan), '97 D16Y5 engine, D16Y7 engine (coupe: KA, KC models, sedan: KA, KC, KL (DX) models, hatchback: all models), D16Y8 engine (sedan: KA, KC models)

*6: '96 D16Y8 engine (coupe), '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98-all models

*12: Except A/T (D16Y7, D16Y8 engine)

*13: A/T (D16Y7, D16Y8 engine)

*14: '97 model

*16: '98 model

(cont'd)

Troubleshooting

Diagnostic Trouble Code (DTC) Chart (cont'd)

DTC (MIL indication)	Detection Item	Probable Cause	Page
P1162*7 (48)	Primary Heated Oxygen Sensor (Sensor 1) Circuit Malfunction	<ul style="list-style-type: none"> • Open or short in Primary HO2S (Sensor 1) • Primary HO2S (Sensor 1) 	11-88
P1163*7 (61)	Primary Heated Oxygen Sensor (Sensor 1) Circuit Slow Response	<ul style="list-style-type: none"> • Primary HO2S (Sensor 1) 	11-87
P1164*7 (61)	Primary Heated Oxygen Sensor (Sensor 1) Circuit Range/ Performance Problem	<ul style="list-style-type: none"> • Primary HO2S (Sensor 1) 	11-92
P1165*7 (61)	Primary Heated Oxygen Sensor (Sensor 1) Circuit Range/ Performance Problem	<ul style="list-style-type: none"> • Primary HO2S (Sensor 1) 	11-92
P1166*7 (41)	Primary Heated Oxygen Sensor (Sensor 1) Heater System Electrical Problem	<ul style="list-style-type: none"> • Open or short in Primary HO2S (Sensor 1) heater circuit • Primary HO2S (Sensor 1) • ECM/PCM 	11-100
P1167*7 (41)	Primary Heated Oxygen Sensor (Sensor 1) Heater System Malfunction	<ul style="list-style-type: none"> • Open in Primary HO2S (Sensor 1) VS+ circuit • Primary HO2S (Sensor 1) Heater • Primary HO2S (Sensor 1) 	11-102
P1168*7 (48)	Primary Heated Oxygen Sensor (Sensor 1) LABEL Low Input	<ul style="list-style-type: none"> • Short in Primary HO2S (Sensor 1) LABEL circuit 	11-93
P1169*7 (48)	Primary Heated Oxygen Sensor (Sensor 1) LABEL High Input	<ul style="list-style-type: none"> • Open in Primary HO2S (Sensor 1) LABEL circuit • Short in ground circuit 	11-94
P1259*8 (22)	VTEC System Malfunction	<ul style="list-style-type: none"> • VTEC Solenoid Valve • Open or short in VTEC Solenoid Valve circuit • VTEC Pressure Switch • Open or short in VTEC Pressure Switch circuit • ECM/PCM 	Section 6
P1297*9 (20)	Electrical Load Detector Circuit Low Input	<ul style="list-style-type: none"> • Electrical Load Detector • Electrical Load Detector circuit • ECM/PCM 	11-115
P1298*9 (20)	Electrical Load Detector Circuit High Input	<ul style="list-style-type: none"> • Electrical Load Detector • Electrical Load Detector circuit • ECM/PCM 	11-116
P1300 *14, *15 and some of P0301 (71) P0302 (72) P0303 (73) P0304 (74)	Random Misfire	<ul style="list-style-type: none"> • Ignition system • Fuel supply system • MAP sensor • EGR system • IAC valve • Contaminated fuel • Lack of fuel 	11-108

*7: D16Y5 engine (M/T)

*8: D16Y5, D16Y8 engine

*9: USA model

*14: '97 model

*15: '96 model



DTC (MIL indication)	Detection Item	Probable Cause	Page
P1336 (54)	Crankshaft Speed Fluctuation Sensor Intermittent Interruption	• CKF sensor	11-117
P1337 (54)	Crankshaft Speed Fluctuation Sensor No Signal	• CKF sensor • CKF sensor circuit • ECM/PCM	11-117
P1359 (8)	Crankshaft Position/Top Dead Center Sensor Disconnected	• CKP/TDC sensor circuit	11-119
P1361 (8)	Top Dead Center Sensor Intermittent Interruption	• TDC sensor	11-110
P1362 (8)	Top Dead Center Sensor No Signal	• TDC sensor • TDC sensor circuit • ECM/PCM	11-110
P1381 (9)	Cylinder Position Sensor Intermittent Interruption	• CYP sensor	11-110
P1382 (9)	Cylinder Position Sensor No Signal	• CYP sensor • CYP sensor circuit • ECM/PCM	11-110
P1456*6 (90)	Evaporative Emission Control System Leak Detected (Fuel Tank Area)	• Fuel fill cap • Vacuum connection • Fuel tank • Fuel tank pressure sensor • EVAP bypass solenoid valve • EVAP two way valve • EVAP control canister vent shut valve • EVAP control canister • EVAP purge control solenoid valve	11-185
P1457*6 (90)	Evaporative Emission Control System Leak Detected (EVAP Control Canister Area)	• Vacuum connection • EVAP control canister • Fuel tank pressure sensor • EVAP bypass solenoid valve • EVAP two way valve • EVAP control canister vent shut valve • Fuel Tank • EVAP purge control solenoid valve	11-185


*6: '96 D16Y8 engine (coupe), '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98-all models

(cont'd)

Troubleshooting

Diagnostic Trouble Code (DTC) Chart (cont'd)

DTC (MIL indication)	Detection Item	Probable Cause	Page
P1491*4 (12)	EGR Valve Lift Insufficient Detected	<ul style="list-style-type: none"> • EGR valve (with lift sensor) • EGR valve lift sensor circuit • EGR control solenoid valve (A/T) • EGR control solenoid valve circuit • EGR line • EGR valve circuit (M/T) • ECM 	11-171
P1498*4 (12)	EGR Valve Lift Sensor High Voltage	<ul style="list-style-type: none"> • EGR valve (with lift sensor) • EGR valve lift sensor circuit • ECM 	11-176
P1508*10 (14)	Idle Air Control Valve Circuit Failure	<ul style="list-style-type: none"> • IAC valve • IAC valve circuit • ECM 	11-126
P1509*11 (14)	Idle Air Control Valve Circuit Failure	<ul style="list-style-type: none"> • Open or short in IAC valve circuit • IAC valve • ECM/PCM 	11-128
P1607 (-)	Engine Control Module/Powertrain Control Module Internal Circuit Failure A	<ul style="list-style-type: none"> • ECM/PCM 	11-120
P1655*1 (30)	TMA/TMB Signal Line Failure	<ul style="list-style-type: none"> • Open or short in TMA/TMB circuit 	11-121
P1705 P1706 P1753 P1758 P1768 P1785 P1790 P1791 P1793 P1870 P1873 P1879 P1885 P1886 P1888 P1890 P1891	Automatic Transaxle	—	Section 14

*: The  indicator light and the Malfunction Indicator Lamp (MIL) may come on simultaneously.

*1: D16Y5 engine (CVT)

*4: D16Y5 engine (M/T)

*10: Except A/T and D16Y7 engine

*11: A/T and D16Y7 engine



How to Read Flowcharts

A flowchart is designed to be used from start to final repair. It's like a map showing you the shortest distance. But beware: If you go off the "map" anywhere but a "stop" symbol, you can easily get lost.

START

(bold type)

Describes the conditions or situation to start a troubleshooting flowchart.

ACTION

Asks you to do something; perform a test, set up a condition etc.

DECISION

Asks you about the result of an action, then sends you in the appropriate troubleshooting direction.


STOP

(bold type)

The end of a series of actions and decisions, describes a final repair action and sometimes directs you to an earlier part of the flowchart to confirm your repair.


NOTE:

- The term "Intermittent Failure" is used in these charts. It simply means a system may have had a failure, but it checks out OK at this time. If the Malfunction Indicator Lamp (MIL) on the dash does not come on, check for poor connections or loose wires at all connectors related to the circuit that you are troubleshooting (see illustration below).
- Most of the troubleshooting flowcharts have you reset the Engine Control Module (ECM)/Powertrain Control Module (PCM) and try to duplicate the Diagnostic Trouble Code (DTC). If the problem is intermittent and you can't duplicate the code, do not continue through the flowchart. To do so will only result in confusion and, possibly, a needlessly replaced ECM/PCM.
- "Open" and "Short" are common electrical terms. An open is a break in a wire or at a connection. A short is an accidental connection of a wire to ground or to another wire. In simple electronics, this usually means something won't work at all. In complex electronics (like ECM's/PCM's), this can sometimes mean something works, but not the way it's supposed to.

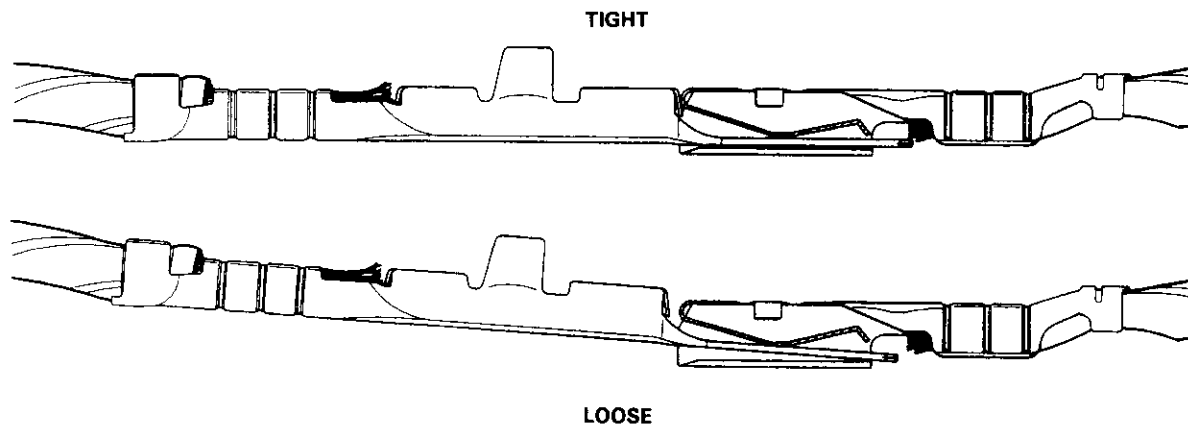

PGM-FI System

System Description

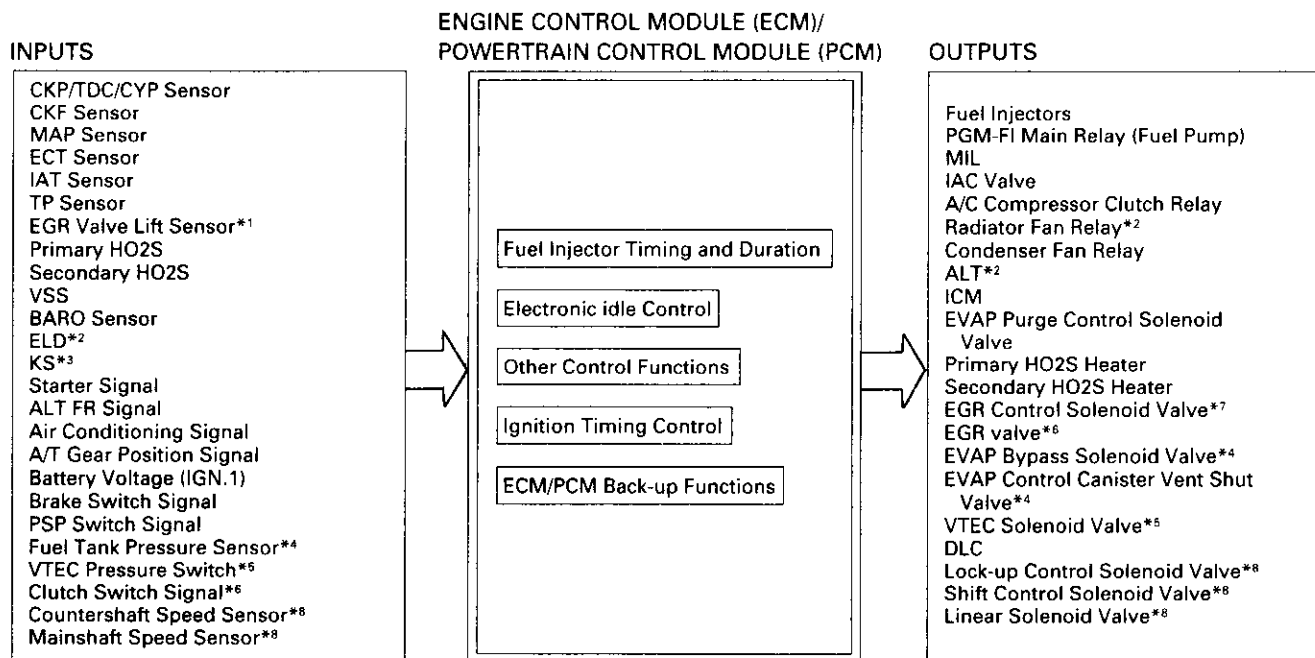

*1: D16Y5 engine

*2: USA model

*3: CVT (D16Y5 engine) and D16Y8 engine

*4: '96 D16Y8 engine (coupe), '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98-all models

*5: D16Y5, D16Y8 engine

*6: M/T (D16Y5 engine)

*7: CVT (D16Y5 engine)

*8: A/T (D16Y7, D16Y8 engine)

*9: '96 D16Y5 engine, '96 D16Y7 engine, '96 D16Y8 engine (sedan), '97 D16Y5 engine, '97 D16Y7 engine (coupe: KA, KC models, sedan: KA, KC, KL (LX) models, hatchback: all models), '97 D16Y8 engine (sedan: KA, KC models)

PGM-FI System

The PGM-FI system on this model is a sequential multiport fuel injection system.

Fuel injector Timing and Duration

The ECM/PCM contains memories for the basic discharge durations at various engine speeds and manifold air flow rates. The basic discharge duration, after being read out from the memory, is further modified by signals sent from various sensors to obtain the final discharge duration.

Idle Air Control

Idle Air Control Valve (IAC Valve)

When the engine is cold, the A/C compressor is on, the transmission is in gear, the brake pedal is depressed, the P/S load is high, or the alternator is charging, the ECM/PCM controls current to the IAC Valve to maintain the correct idle speed.

Ignition Timing Control

- The ECM/PCM contains memories for basic ignition timing at various engine speeds and manifold air flow rates. Ignition timing is also adjusted for engine coolant temperature.
- A knock control system was adopted which sets the ideal ignition timing for the octane rating of the gasoline used.*3

Other Control Functions

1. Starting Control

When the engine is started, the ECM/PCM provides a rich mixture by increasing fuel injector duration.

2. Fuel Pump Control

- When the ignition switch is initially turned on, the ECM/PCM supplies ground to the PGM-FI main relay that supplies current to the fuel pump for two seconds to pressurize the fuel system.
- When the engine is running, the ECM/PCM supplies ground to the PGM-FI main relay that supplies current to the fuel pump.
- When the engine is not running and the ignition is on, the ECM/PCM cuts ground to the PGM-FI main relay which cuts current to the fuel pump.



3. Fuel Cut-off Control
 - During deceleration with the throttle valve closed, current to the fuel injectors is cut off to improve fuel economy at speeds over the following rpm:
 - D16Y5 engine (M/T): 850 rpm
 - D16Y5 engine (CVT), D16Y8 engine (USA M/T): 920 rpm
 - D16Y8 engine (USA A/T), D16Y7 engine (USA A/T): 910 rpm
 - D16Y8 engine (Canada M/T), D16Y7 engine (Canada): 990 rpm
 - D16Y8 engine (Canada M/T): 1,000 rpm
 - Fuel cut-off action also takes place when engine speed exceeds 6,900 rpm (D16Y5, D16Y7 engine; D16Y8 engine: 7,000 rpm), regardless of the position of the throttle valve, to protect the engine from over-revving.
4. A/C Compressor Clutch Relay

When the ECM/PCM receives a demand for cooling from the air conditioning system, it delays the compressor from being energized, and enriches the mixture to assure smooth transition to the A/C mode.
5. Evaporative Emission (EVAP) Purge Control Solenoid Valve*⁹

When the engine coolant temperature is above 154°F (68°C), the ECM/PCM controls the EVAP purge control solenoid valve which controls vacuum to the EVAP purge control canister.

Evaporative Emission (EVAP) Purge Control Solenoid Valve*⁴
When the engine coolant temperature above 154°F (68°C), intake air temperature above 32°F (0°C) and vehicle speed above 0 mile (0 km/h) or [A/C compressor clutch on and intake air temperature above 160°F (41°C)], the ECM/PCM controls the EVAP purge control solenoid valve which controls vacuum to the EVAP purge control canister.
6. Exhaust Gas Recirculation (EGR) Control Solenoid Valve*⁷

When EGR is required for control of oxides of nitrogen (NO_x) emissions, the ECM controls the EGR control solenoid valve which supplies regulated vacuum to the EGR valve.
7. Alternator Control

The system controls the voltage generated at the alternator in accordance with the electrical load and driving mode, which reduces the engine load to improve the fuel economy.

ECM/PCM Fail-safe/Back-up Functions

1. Fail-safe Function

When an abnormality occurs in a signal from a sensor, the ECM/PCM ignores that signal and assumes a pre-programmed value for that sensor that allows the engine to continue to run.
2. Back-up Function

When an abnormality occurs in the ECM/PCM itself, the fuel injectors are controlled by a back-up circuit independent of the system in order to permit minimal driving.
3. Self-diagnosis Function [Malfunction Indicator Lamp (MIL)]

When an abnormality occurs in a signal from a sensor, the ECM/PCM supplies ground for the MIL and stores the DTC in erasable memory. When the ignition is initially turned on, the ECM/PCM supplies ground for the MIL for two seconds to check the MIL bulb condition.
4. Two Trip Detection Method

To prevent false indications, the Two Trip Detection Method is used for the HO₂S, fuel metering-related, idle control system, ECT sensor, EGR system and EVAP control system self-diagnostic functions. When an abnormality occurs, the ECM/PCM stores it in its memory. When the same abnormality recurs after the ignition switch is turned OFF and ON (II) again, the ECM/PCM informs the driver by lighting the MIL. However, to ease troubleshooting, this function is cancelled when you jump the service check connector. The MIL will then blink immediately when an abnormality occurs.
5. Two (or Three) Driving Cycle Detection Method


A "Driving Cycle" consists of starting the engine, beginning closed loop operation, and stopping the engine. If misfiring that increases emissions is detected during two consecutive driving cycles, or TWC deterioration is detected during three consecutive driving cycles, the ECM/PCM turns the MIL on. However, to ease troubleshooting, this function is cancelled when you jump the service check connector. The MIL will then blink immediately when an abnormality occurs.

(cont'd)

PGM-FI System

System Description (cont'd)

Lean Burn Control (D16Y5 engine: CVT)

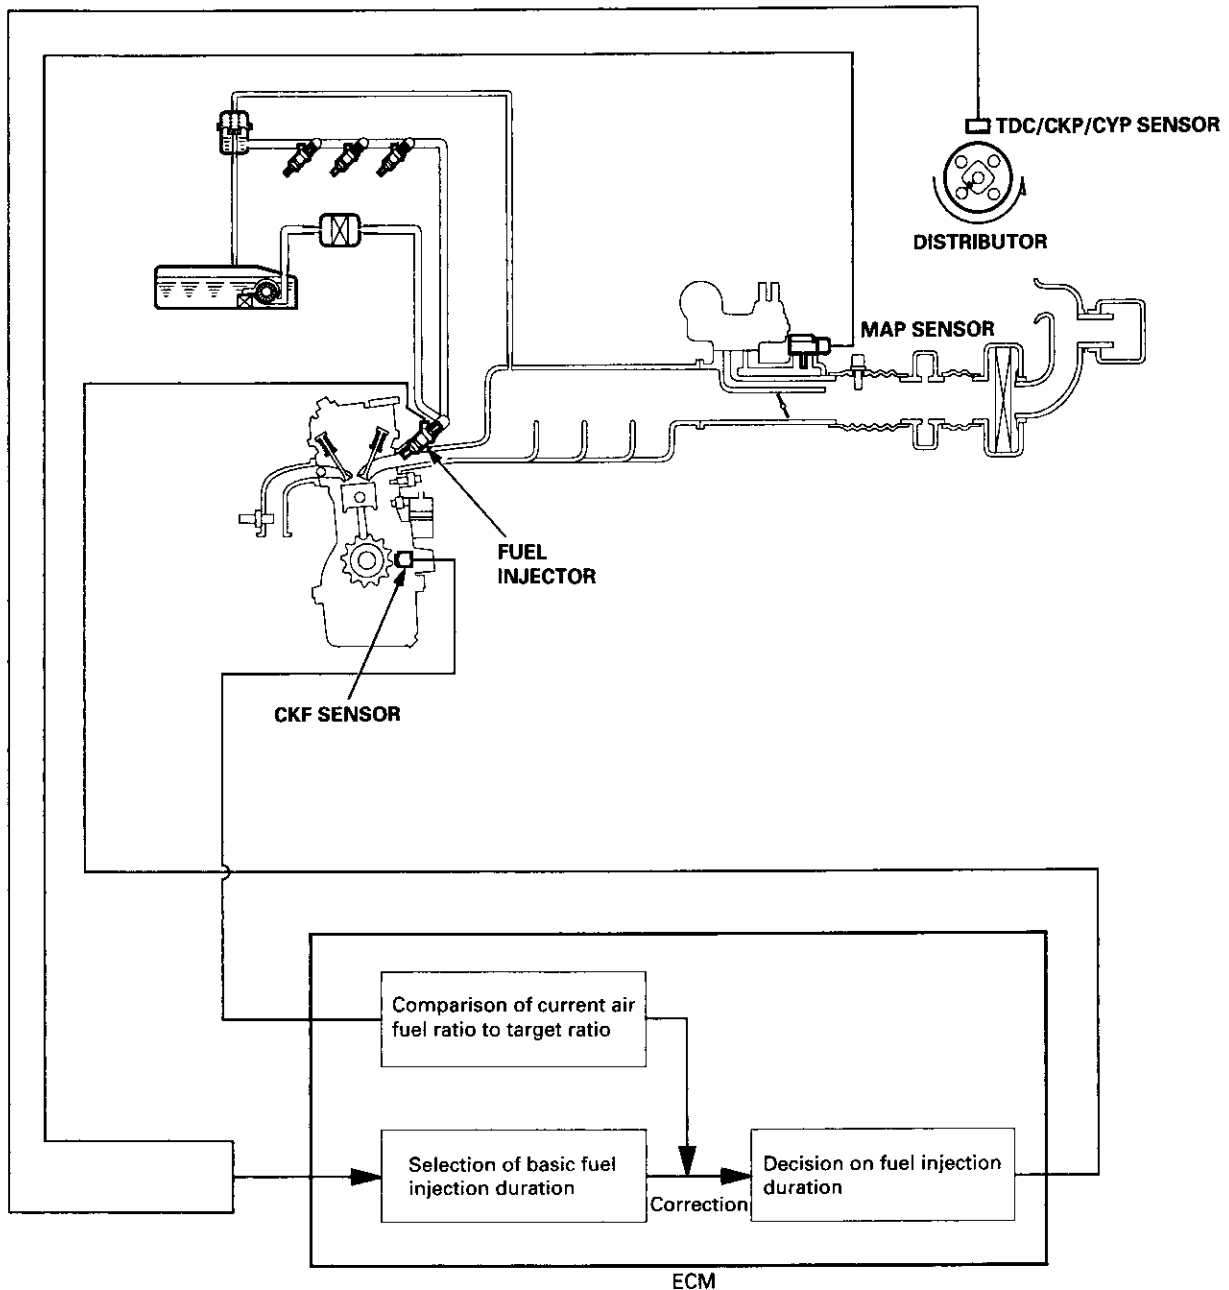

The lean burn control system is based on the characteristic increase in crankshaft angular acceleration which occurs in when the air-fuel ratio gets leaner.

The CKF sensor, which is mounted on the crankshaft, monitors engine speed. If crankshaft angular acceleration falls below a certain level (target air-fuel ratio level), the amount of injected fuel is reduced.

If crankshaft angular acceleration exceeds this level, the amount of fuel is increased.

This system improves fuel economy and driveability by controlling the amount of injected fuel in the lean burn range immediately before combustion starts to deteriorate.



Engine Control Module/Powertrain Control Module (ECM/PCM)

The Malfunction Indicator Lamp (MIL) never comes on (even for two seconds) after ignition is turned on.

NOTE: If this symptom is intermittent, check for a loose fuse No. 25 (METER 7.5 A) in the under-dash fuse/relay box, a poor connection at ECM/PCM terminal A18, or an intermittent open in the GRN/ORN wire between the ECM/PCM (A18) and the gauge assembly.

Turn the ignition switch ON (II).

Is the low oil pressure light on?

NO

— Repair short or open in the wire between No. 25 (METER) (7.5 A) fuse and gauge assembly.
— Replace No. 25 (METER) (7.5 A) fuse.

YES

Try to start the engine.


Does the engine start?

NO

YES

Check for an open in the wires (PG lines):
1. Turn the ignition switch ON (II).
2. Measure voltage between body ground and ECM/PCM connector terminals A10 and A23 individually.

ECM/PCM CONNECTOR A (32P) PG1 (BLK)

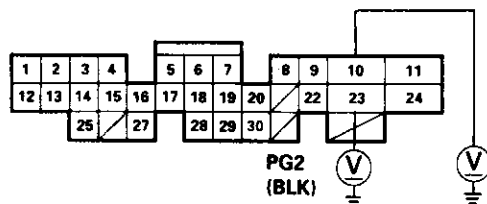

Wire side of female terminals

Is there less than 1.0 V?

NO


Repair open in the wire(s) between ECM/PCM and G101 (located at the thermostat housing) that had more than 1.0 V.

YES

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

Check for an open in the wire or bulb (MIL line):
1. Turn the ignition switch OFF.
2. Connect the ECM/PCM connector terminal A18 to body ground with a jumper wire.
3. Turn the ignition switch ON (II).

ECM/PCM CONNECTOR A (32P)

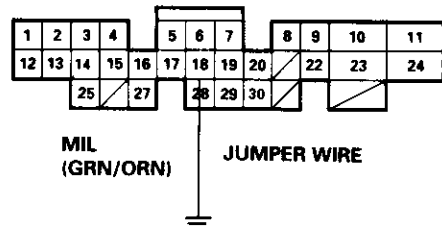

Wire side of female terminals

Is the MIL on?

NO

— Repair open in the wires between ECM/PCM (A18) and gauge assembly.
— Replace the MIL bulb.

YES

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

(cont'd)

PGM-FI System

Engine Control Module/Powertrain Control Module (ECM/PCM) (cont'd)

The Malfunction Indicator Lamp (MIL) stays on or comes on after two seconds.

Check the Diagnostic Trouble Code (DTC):

1. Connect a scan tool or Honda PGM Tester.
2. Turn the ignition switch ON (II).
3. Read the DTC with the scan tool or Honda PGM Tester.

Are any DTC(s) indicated?

YES

Go to troubleshooting procedures. (see page 11-53)

NO

Check the DTC by MIL indication:

1. Turn the ignition switch OFF.
2. Connect the SCS service connector to the service check connector.
3. Turn the ignition switch ON (III).

Does the MIL indicate any DTC?

YES

— Repair open or short in wire between the ECM/PCM (C8) and Data Link Connector.
— Go to troubleshooting procedure. (see page 11-53).

NO

Try to start the engine.

Does the engine start?

NO

(To page 11-65)

YES

Check for a short in the wire (SCS line):

1. Disconnect the SCS service connector.
2. Stop the engine and turn the ignition switch ON (II).
3. Measure voltage between the ECM/PCM connector terminal C7 and body ground.

Is there approx. 5 V?

NO

Repair short to body ground in the wire between ECM/PCM (C7) and service check connector.


YES

(To page 11-65)



NOTE:

- When there is no Diagnostic Trouble Code (DTC) stored, the MIL will stay on if the SCS service connector is connected and the ignition switch is on.
- If this symptom is intermittent, check for:
 - A loose FI E/M (15 A) fuse in the under-hood fuse/relay box
 - A loose No. 13 FUEL PUMP fuse (15 A) in the under-dash fuse/relay box
 - An intermittent short in the wire between the ECM/PCM (C7) and the service check connector
 - An intermittent short in the wire between the ECM/PCM (A18) and the gauge assembly
 - An intermittent short in the wire between the ECM/PCM (D4) and the MAP sensor
 - An intermittent short in the wire between the ECM/PCM (D10), the TP sensor, the EGR valve lift sensor (D16Y5 engine) and/or the Fuel tank pressure sensor ('96 D16Y8 engine (coupe), '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98-all models)
 - PGM-FI main relay
- See the OBD II scan tool or Honda PGM Tester user's manuals for specific operating instructions.

ECM/PCM CONNECTOR C (31P)

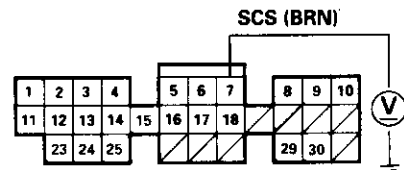

Wire side of female terminals

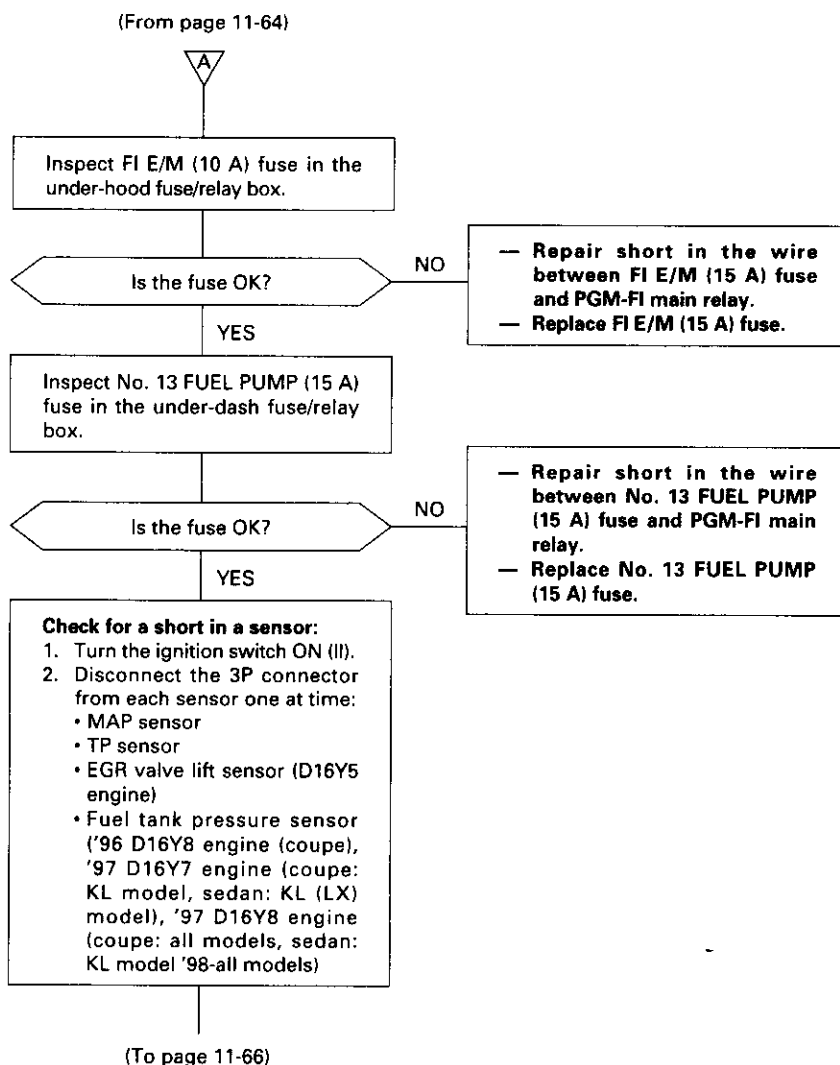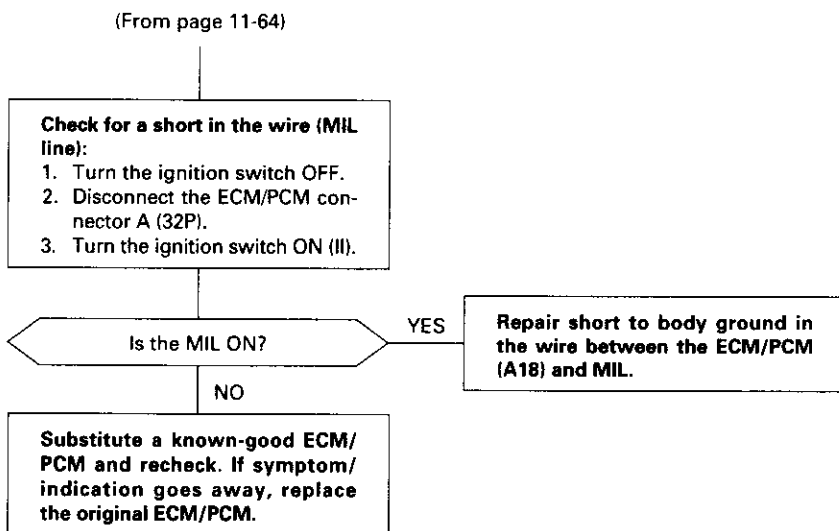


(cont'd)


PGM-FI System

Engine Control Module/Powertrain Control Module (ECM/PCM) (cont'd)

(From page 11-65)

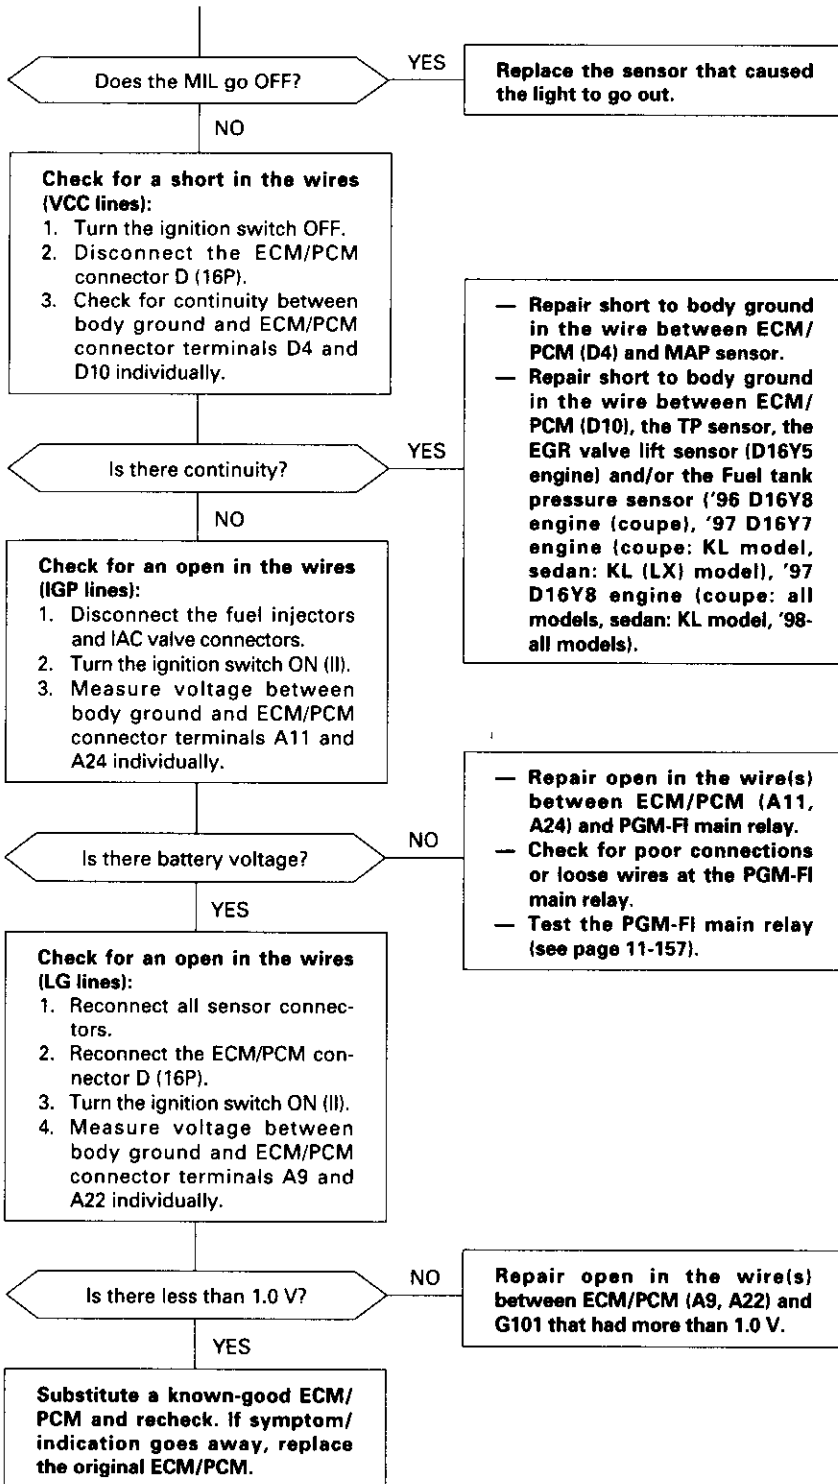


ECM/PCM CONNECTOR D (16P)

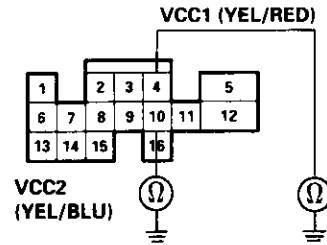


Wire side of female terminals

ECM/PCM CONNECTOR A (32P)

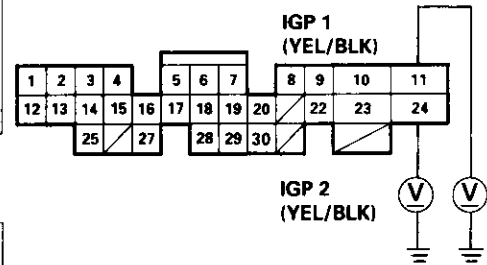

Wire side of female terminals


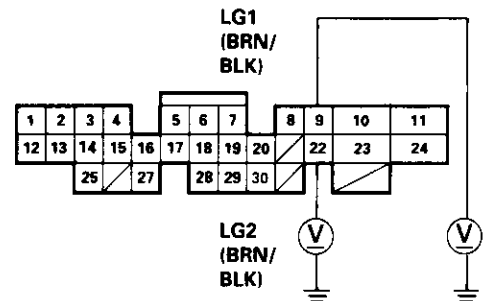




Manifold Absolute Pressure (MAP) Sensor

P0106 The scan tool indicates Diagnostic Trouble Code (DTC) P0106: A mechanical problem (vacuum leak) in the Manifold Absolute Pressure (MAP) Sensor system.


The MAP sensor converts manifold absolute pressure into electrical signals and inputs the ECM/PCM.

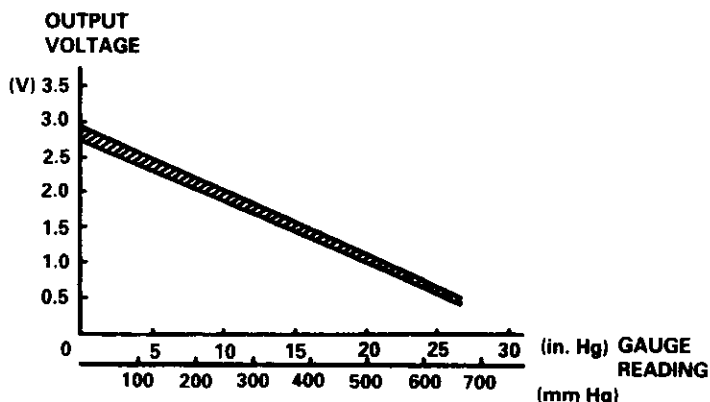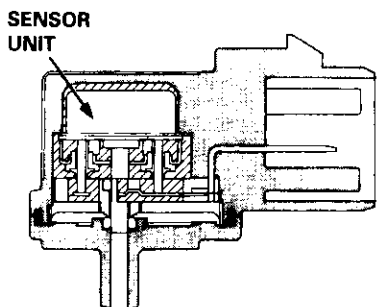

- The MIL has been reported on.
- DTC P0106 is stored.
- Or from Probable Cause List.

Problem verification:

1. Do the ECM/PCM Reset Procedure.
2. Start the engine and keep engine speed at 1,000 rpm for one minute with the transmission in **P** or **N** position (M/T in neutral).

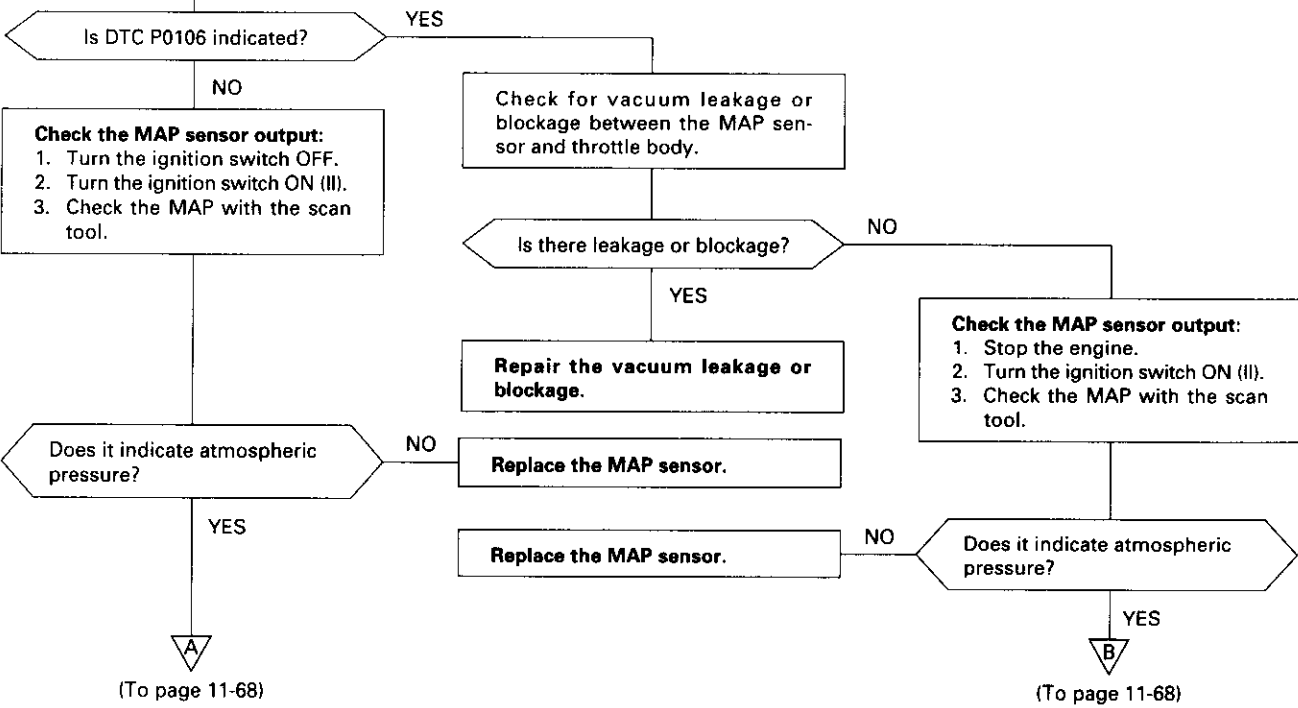

PGM-FI System

Manifold Absolute Pressure (MAP) Sensor (cont'd)

(From page 11-67)



Check for poor response:
1. Start the engine. Hold the engine at 3,000 rpm with A/T in **N** or **P** position, M/T in neutral until the radiator fan comes on, then turn the ignition switch OFF.
2. Start the engine.
3. Check the MAP with the scan tool.

Is a MAP of 40.0 kPa (300 mmHg, 12.0 in.Hg) or less indicated within one second after starting the engine?

NO

Replace the MAP sensor.

YES

The MAP sensor is OK at this time.

(From page 11-67)



Check for poor response:
1. Start the engine. Hold the engine at 3,000 rpm with A/T in **N** or **P** position, M/T in neutral until the radiator fan comes on, then turn the ignition switch OFF.
2. Start the engine.
3. Check the MAP with the scan tool.

Is a MAP of 40.0 kPa (300 mmHg, 12.0 in.Hg) or less indicated within one second after starting the engine?

NO

Replace the MAP sensor.

YES

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.



P0107 The scan tool indicates Diagnostic Trouble Code (DTC) P0107: A low voltage (high vacuum) problem in the Manifold Absolute Pressure (MAP) sensor.

- The MIL has been reported on.
- DTC P0107 is stored.

Problem verification:

1. Turn the ignition switch ON (II).
2. Check the MAP with the scan tool.

Is approx. 0 kPa (0 mmHg, 0 in.Hg) indicated?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C111 (MAP sensor) and ECM/PCM.

YES

Check for an open or short in the MAP sensor:

1. Turn the ignition switch OFF.
2. Disconnect the MAP sensor 3P connector.
3. Turn the ignition switch ON (II).
4. Check the MAP with the scan tool.

Is approx. 0 kPa (0 mmHg, 0 in.Hg) indicated?

NO

Replace the MAP sensor.

YES

Check for an open in wire (VCC1 line):

Measure voltage between the MAP sensor connector No. 1 terminal and No. 2 terminal.

Is there approx. 5 V?

NO

Repair open in the wire between ECM/PCM (D4) and MAP sensor.

YES


(D16Y5 engine (CVT))

Check for a short in the TCM:

1. Turn the ignition switch OFF.
2. Disconnect the 22P connector from the TCM.
3. Turn the ignition switch ON (II).
4. Check the MAP with the scan tool.

(To page 11-70)

MAP SENSOR 3P CONNECTOR (C111)

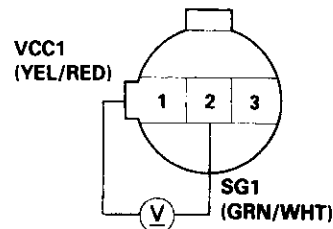


Wire side of female terminals


(cont'd)

PGM-FI System

Manifold Absolute Pressure (MAP) Sensor (cont'd)

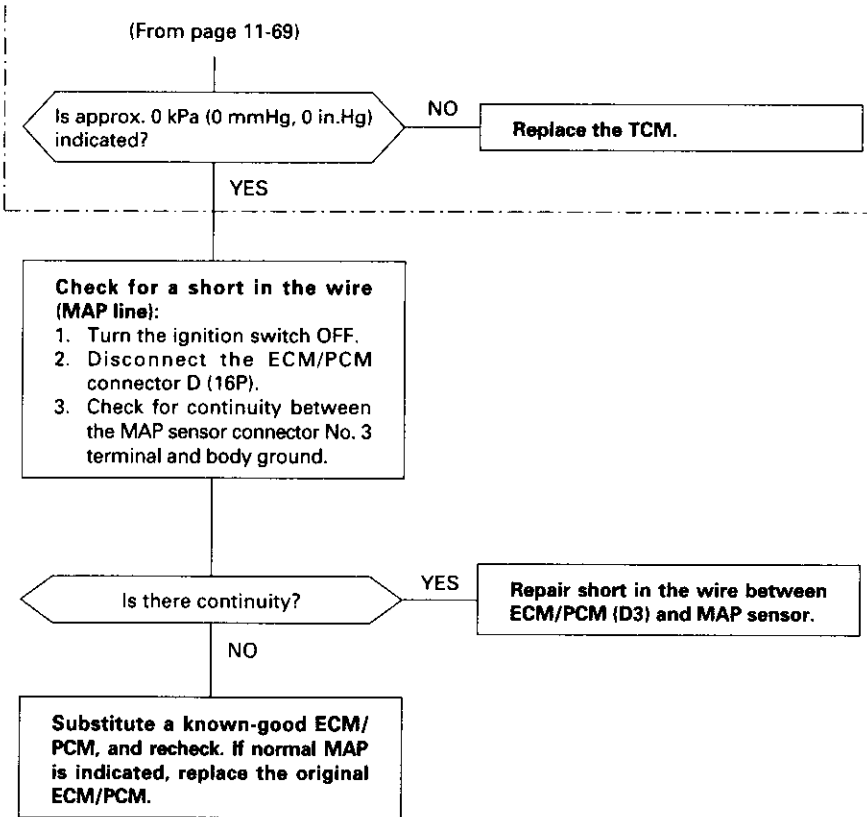

MAP SENSOR 3P CONNECTOR (C111)

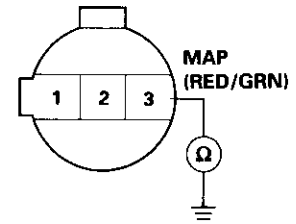



P0108 The scan tool indicates Diagnostic Trouble Code (DTC) P0108: A high voltage (low vacuum) problem in the Manifold Absolute Pressure (MAP) sensor.

- The MIL has been reported on.
- DTC P0108 is stored.

Problem verification:

1. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P** position, M/T in neutral) until the radiator fan comes on, then let it idle.
2. Check the MAP with the scan tool.

Is 101 kPa (760 mmHg, 30.0 in.Hg) or higher indicated?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C111 (MAP sensor) and ECM/PCM.

YES

Check for an open in the MAP sensor:

1. Turn the ignition switch OFF.
2. Disconnect the MAP sensor 3P connector.
3. Install a jumper wire between the MAP sensor 3P connector terminals No. 3 and No. 2.
4. Turn the ignition switch ON (II).
5. Check the MAP with the scan tool.

Is 101 kPa (760 mmHg, 30.0 in.Hg) or higher indicated?

NO

Replace the MAP sensor.

YES

Check for an open in wire (SG1 line):

1. Remove the jumper wire.
2. Measure voltage between the MAP sensor 3P connector terminals No. 1 and No. 2.

Is there approx. 5 V?

NO

Repair open in the wire between ECM/PCM (D12) and MAP sensor.

YES

Check for an open in the wire (MAP line):

1. Turn the ignition switch OFF.
2. Connect the ECM/PCM connector terminals D3 and D12 with a jumper wire.
3. Turn the ignition switch ON (II).
4. Check the MAP with the scan tool.

Is 101 kPa (760 mmHg, 30.0 in.Hg) or higher indicated?


NO

Repair open in the wires between ECM/PCM (D3) and MAP sensor.


YES

Substitute a known-good ECM/PCM and recheck. If normal MAP is indicated, replace the original ECM/PCM.


MAP SENSOR 3P CONNECTOR (C111)

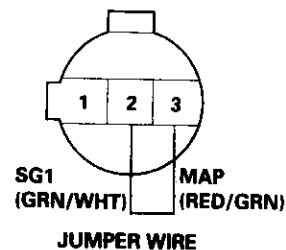

Wire side of female terminals

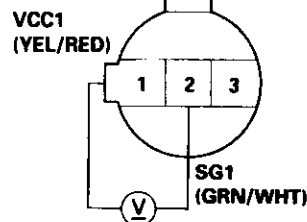

ECM/PCM CONNECTOR D (16P)

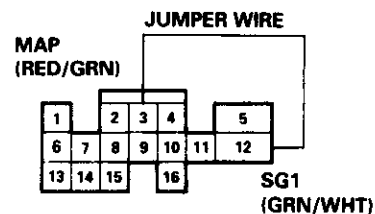


Wire side of female terminals

(cont'd)


PGM-FI System

Manifold Absolute Pressure (MAP) Sensor (cont'd)

P1128 The scan tool indicates Diagnostic Trouble Code (DTC) P1128: Manifold Absolute Pressure (MAP) lower than expected.

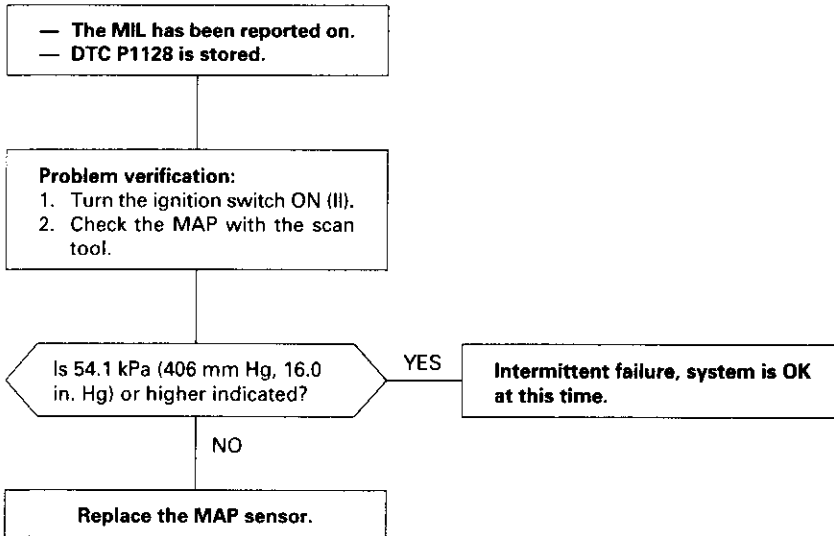

P1129 The scan tool indicates Diagnostic Trouble Code (DTC) P1129: Manifold Absolute Pressure (MAP) higher than expected.

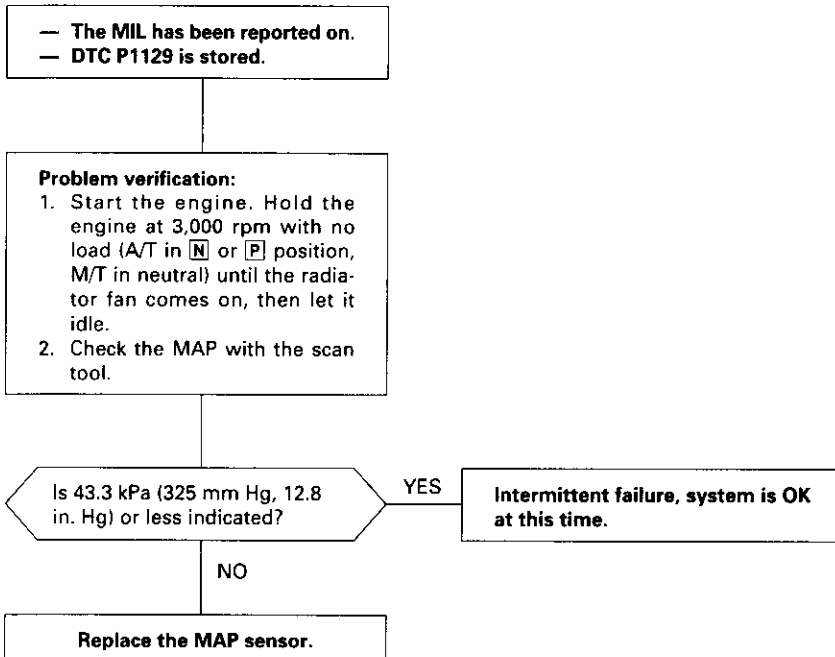



Intake Air Temperature (IAT) Sensor



P0111 The scan tool indicates Diagnostic Trouble Code (DTC) P0111: A range/performance problem in the Intake Air Temperature (IAT) Sensor circuit.

The IAT Sensor is a temperature dependant resistor (thermistor). The resistance of the thermistor decreases as the intake air temperature increases as shown below.

- The MIL has been reported on.
- DTC P0111 is stored.
- Or from Probable Cause List.

Problem verification:

1. Turn the ignition switch OFF.
2. Disconnect the IAT sensor 2P connector.
3. Remove the IAT sensor.
4. Reconnect the IAT sensor 2P connector.
5. Leave the IAT sensor exposed to ambient temperature.
6. Turn the ignition switch ON (II).
7. Check the IAT with the scan tool.

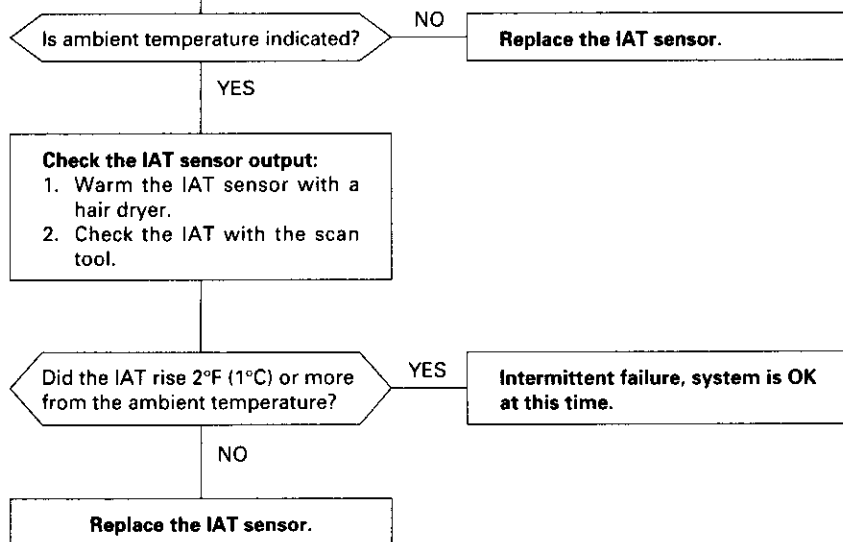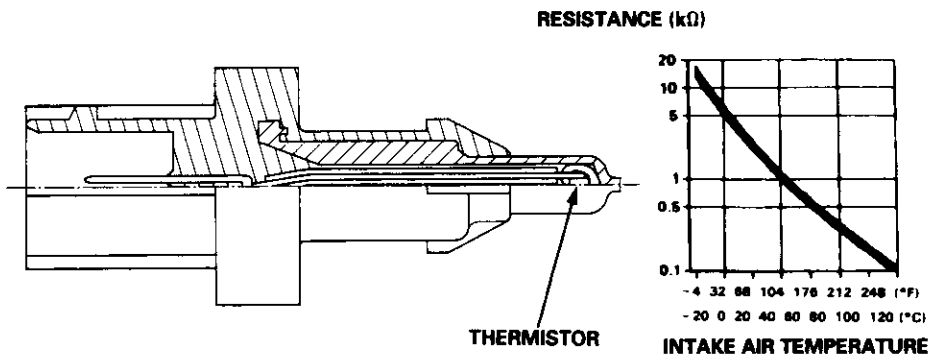

(cont'd)



PGM-FI System

Intake Air Temperature (IAT) Sensor (cont'd)


P0112 The scan tool indicates Diagnostic Trouble Code (DTC) P0112: A low voltage (high temperature) problem in the Intake Air Temperature (IAT) sensor circuit.

— The MIL has been reported on.
— DTC P0112 is stored.


Problem verification:
1. Turn the ignition switch ON (II).
2. Check the IAT with the scan tool.

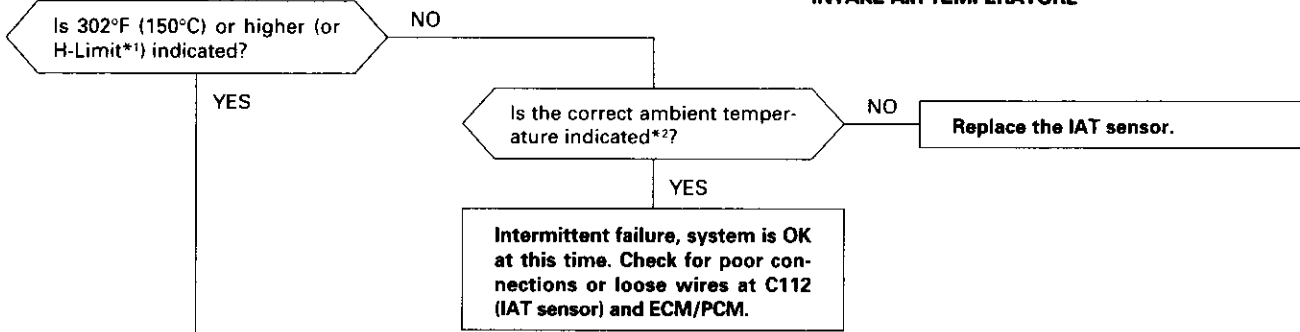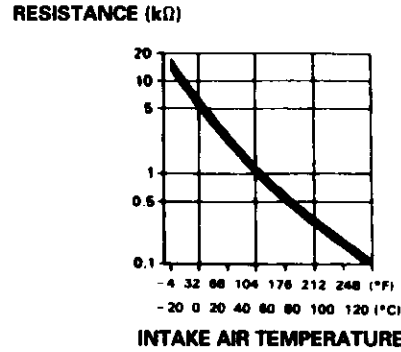


Check for a short in the IAT sensor:
1. Disconnect the IAT sensor connector.
2. Check the IAT with the scan tool.



Check for a short in the wire (IAT line):
1. Turn the ignition switch OFF.
2. Disconnect the ECM/PCM connector D (16P).
3. Check for continuity between the IAT sensor 2P connector terminal No. 2 and body ground.



IAT SENSOR 2P CONNECTOR (C112)

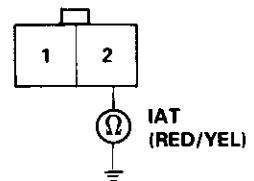


Wire side of female terminals


*1: With Honda PGM Tester in Honda mode.
*2: If the engine is warm, it will be higher than ambient temperature.



P0113 The scan tool indicates Diagnostic Trouble Code (DTC) P0113: A high voltage (low temperature) problem in the Intake Air Temperature (IAT) sensor circuit.

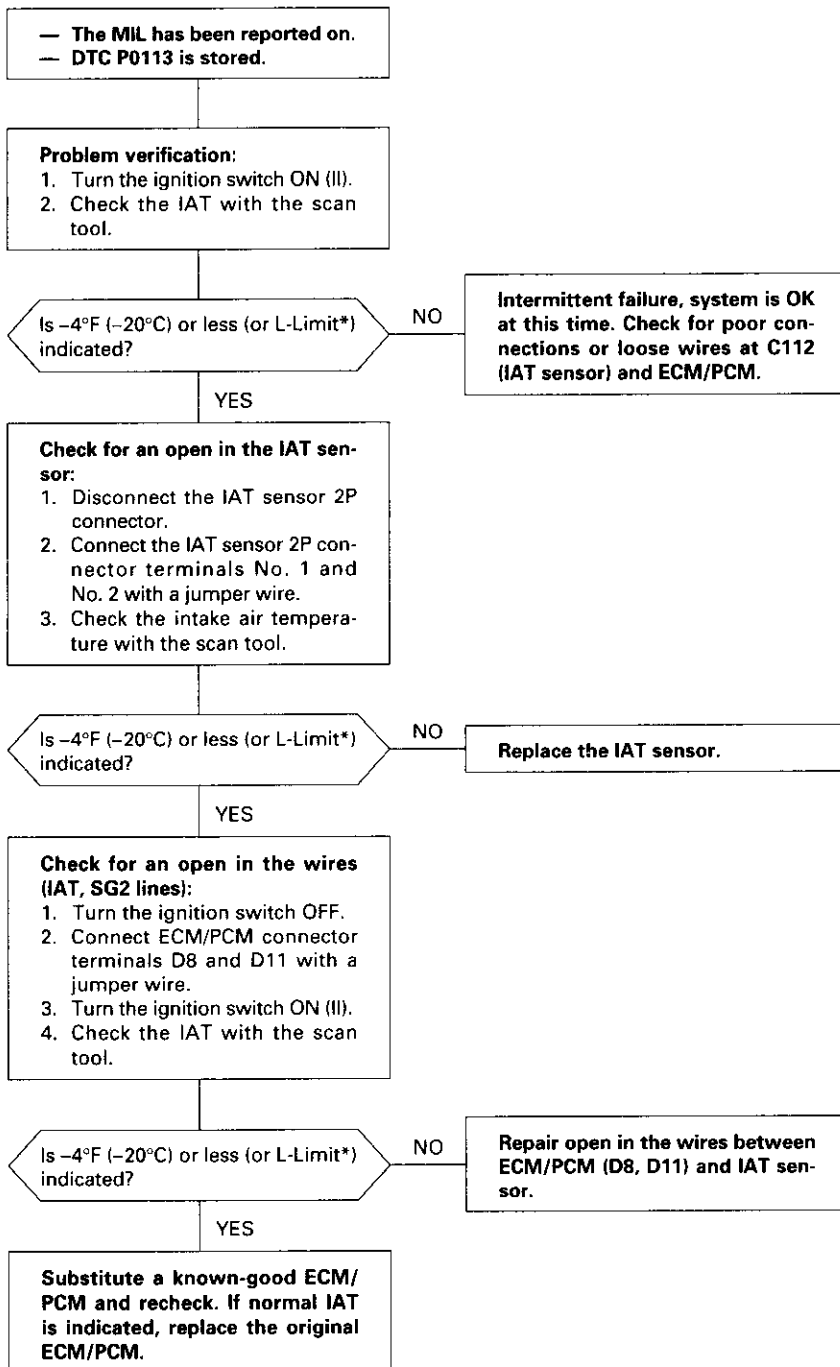


IAT SENSOR 2P CONNECTOR (C112)

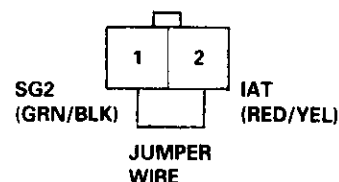

Wire side of female terminals

ECM/PCM CONNECTOR D (16P)

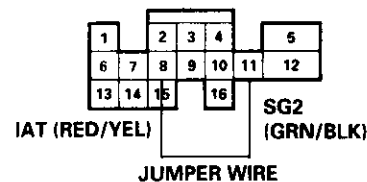

Wire side of female terminals


*: With Honda PGM Tester in Honda mode.

PGM-FI System

Engine Coolant Temperature (ECT) Sensor

P0116 The scan tool indicates Diagnostic Trouble Code (DTC) P0116: A range/performance problem in the Engine Coolant Temperature (ECT) Sensor circuit.

The ECT Sensor is a temperature dependant resistor (thermistor). The resistance of the thermistor decreases as the engine coolant temperature increases as shown below.

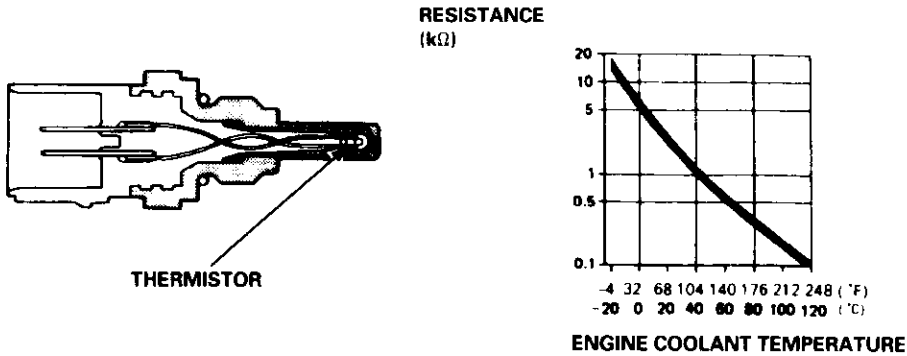


NOTE: If DTC P0117 and/or P0118 are stored at the same time as DTC P0116, troubleshoot those DTCs first, then troubleshoot DTC P0116.

Possible Cause

- ECT sensor deterioration
- Malfunction in the cooling system

Troubleshooting Flowchart

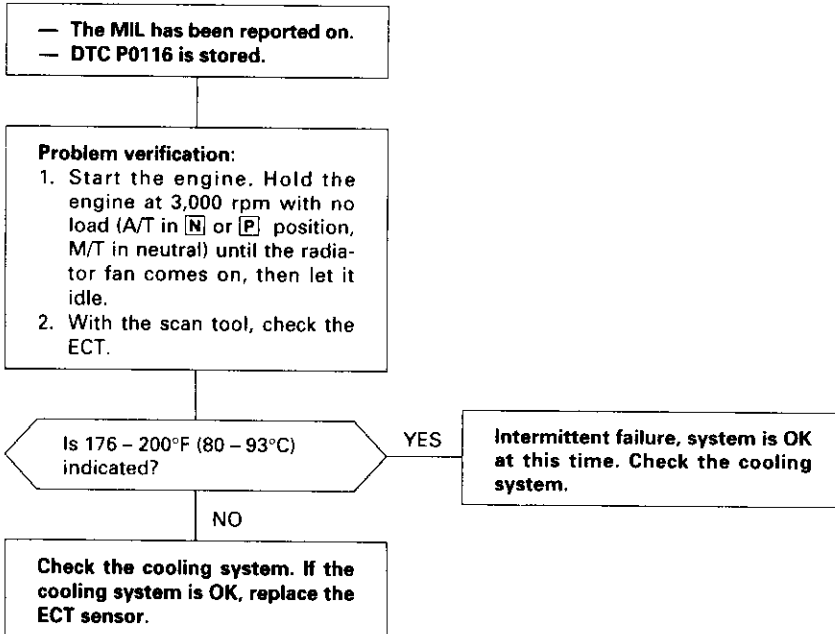



P0117 The scan tool indicates Diagnostic Trouble Code (DTC) P0117: A low voltage (high temperature) problem in the Engine Coolant Temperature (ECT) sensor circuit.

- The MIL has been reported on.
- DTC P0117 is stored.

Problem verification:

1. Turn the ignition switch ON (II).
2. Check the ECT with the scan tool.

Is 302°F (150°C) or higher (or H-Limit*) indicated?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C122 (ECT sensor) and ECM/PCM.

YES

Check for a short in the ECT sensor:

1. Disconnect the ECT sensor 2P connector.
2. Check the ECT with the scan tool.

Is 302°F (150°C) or higher (or H-Limit*) indicated?

NO

Replace the ECT sensor.

YES

Check for a short in the wire (ECT line):

1. Turn the ignition switch OFF.
2. Disconnect the ECM/PCM connector D (16P).
3. Check for continuity between the ECT sensor 2P connector terminal No. 1 and body ground.

Is there continuity?


YES

Repair short in the wire between ECM/PCM (D2) and ECT sensor.

NO

Substitute a known-good ECM/PCM and recheck. If normal ECT is indicated, replace the original ECM/PCM.

ECT SENSOR 2P CONNECTOR (C122)

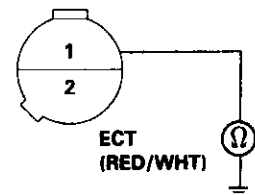

Wire side of female terminals

*: With Honda PGM Tester in Honda mode.

(cont'd)

PGM-FI System

Engine Coolant Temperature (ECT) Sensor (cont'd)

P0118 The scan tool indicates Diagnostic Trouble Code (DTC) P0118: A high voltage (low temperature) problem in the Engine Coolant Temperature (ECT) sensor circuit.

— The MIL has been reported on.
— DTC P0118 is stored.

Problem verification:
1. Turn the ignition switch ON (II).
2. Check the ECT with the scan tool.

Is -4°F (-20°C) or less (or L-Limit*) indicated?

NO: Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C122 (ECT sensor) and ECM/PCM.

YES

Check for an open in the ECT sensor:
1. Disconnect the ECT sensor 2P connector.
2. Connect the ECT sensor 2P connector terminals No. 1 and No. 2 with a jumper wire.
3. Check the ECT with the scan tool.

Is -4°F (-20°C) or less (or L-Limit*) indicated?

NO: Replace the ECT sensor.

YES

Check for an open in the wires (ECT, SG2 lines):
1. Turn the ignition switch OFF.
2. Connect ECM/PCM connector terminals D2 and D11 with a jumper wire.
3. Turn the ignition switch ON (II).
4. Check the ECT with the scan tool.


Is -4°F (-20°C) or less (or L-Limit*) indicated?

NO: Repair open in the wires between ECM/PCM (D2, D11) and ECT sensor.

YES


Substitute a known-good ECM/PCM and recheck. If normal ECT is indicated, replace the original ECM/PCM.

ECT SENSOR 2P CONNECTOR (C122)

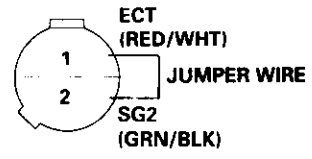

Wire side of female terminals

ECM/PCM CONNECTOR D (16P)

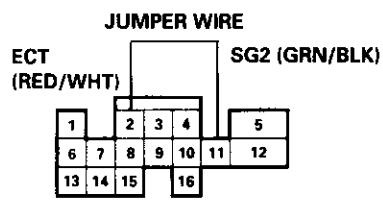

Wire side of female terminals


*: With Honda PGM Tester in Honda mode.



Throttle Position (TP) Sensor

P0122 The scan tool indicates Diagnostic Trouble Code (DTC) P0122: A low voltage problem in the Throttle Position (TP) sensor circuit.

The TP Sensor is a potentiometer. It is connected to the throttle valve shaft. As the throttle position changes, the throttle position sensor varies the voltage signal to the ECM/PCM.

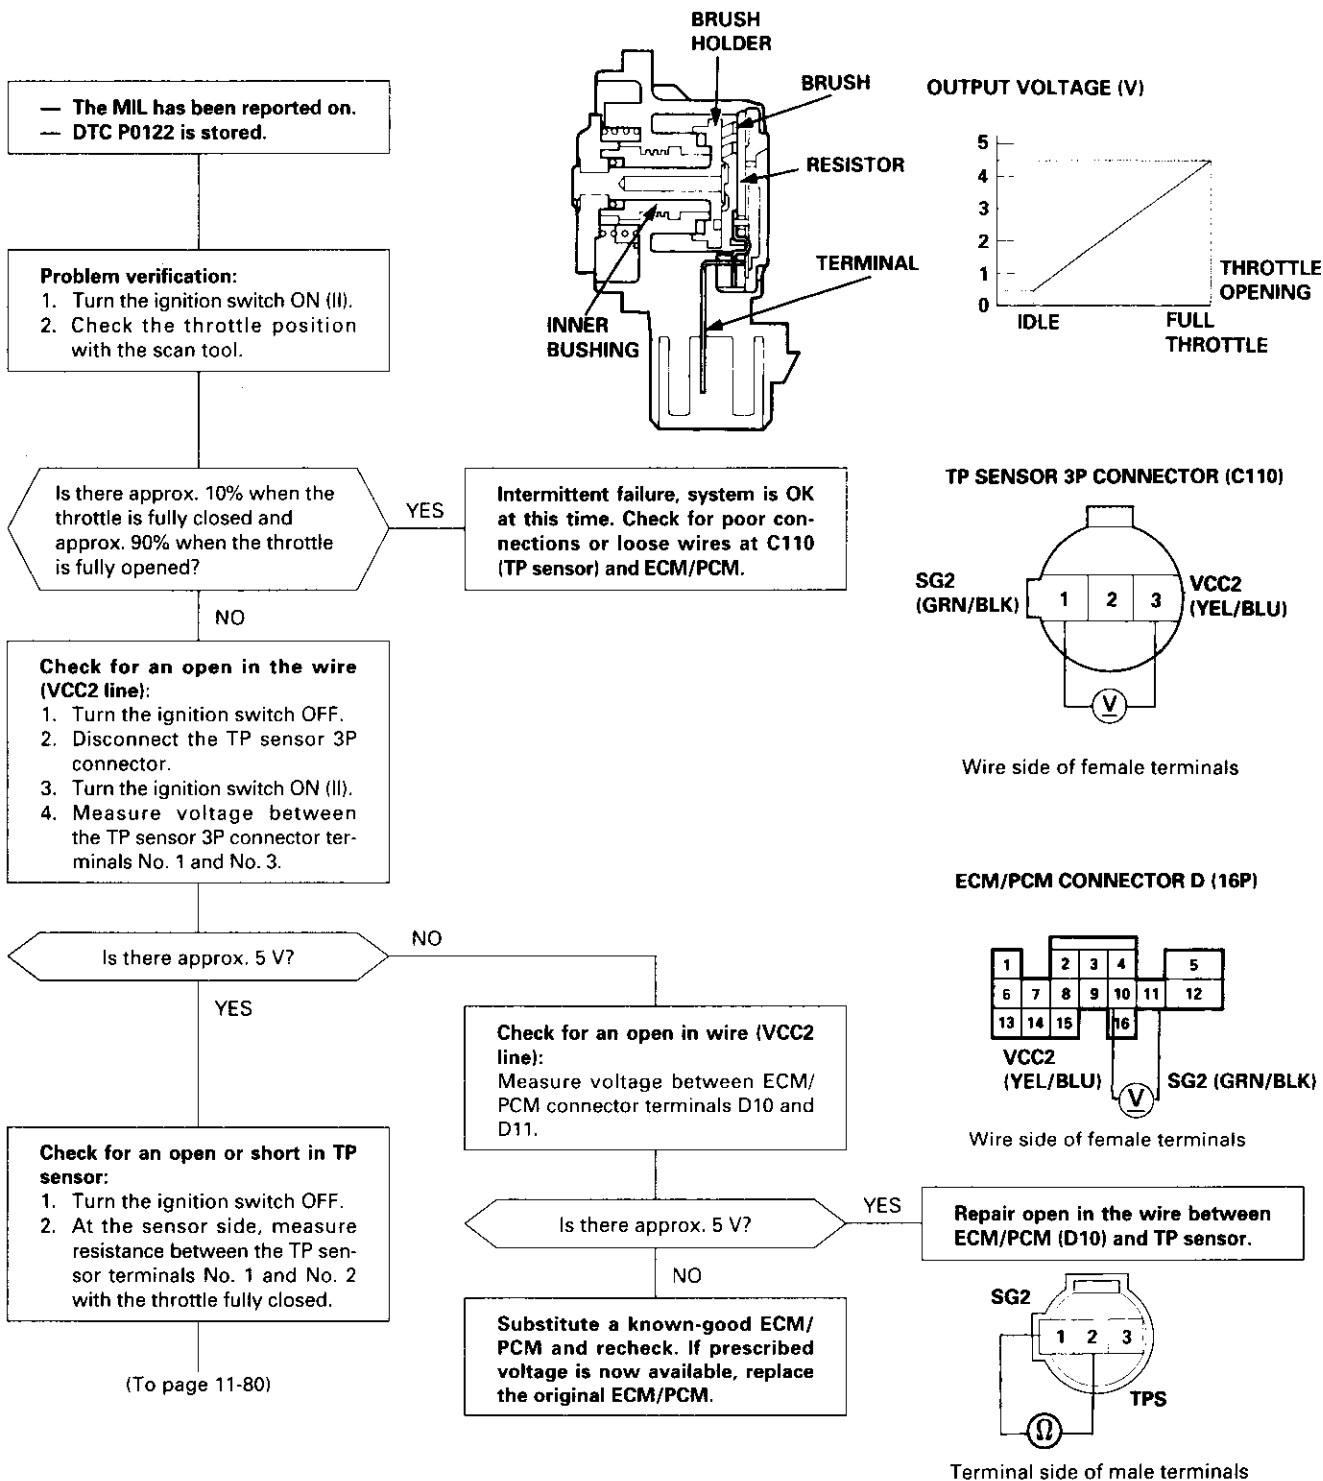


(cont'd)


PGM-FI System

Throttle Position (TP) Sensor (cont'd)

(From page 11-79)

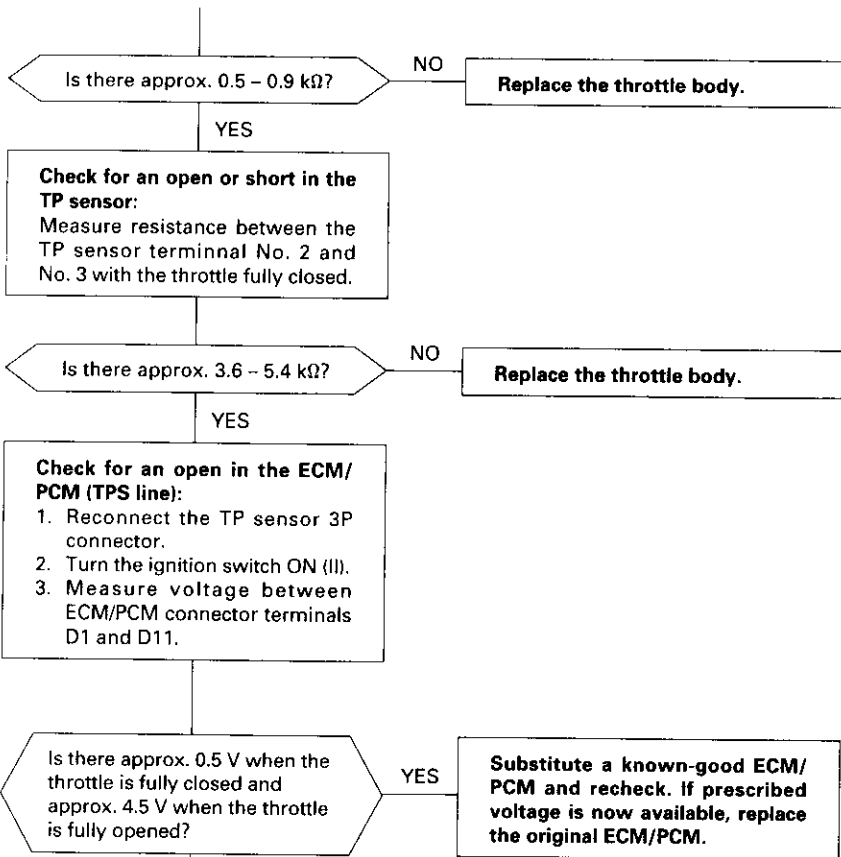


TP SENSOR 3P CONNECTOR

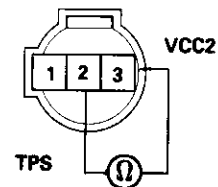



Terminal side of male terminals

ECM/PCM CONNECTOR D (16P)

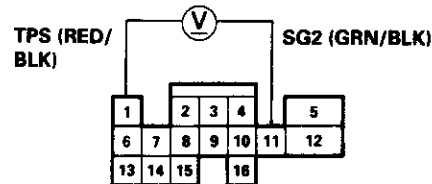

Wire side of female terminals

(D16Y5 engine (CVT))

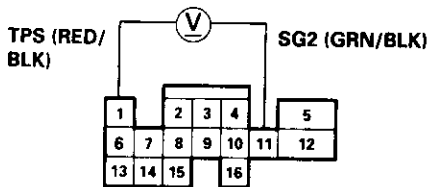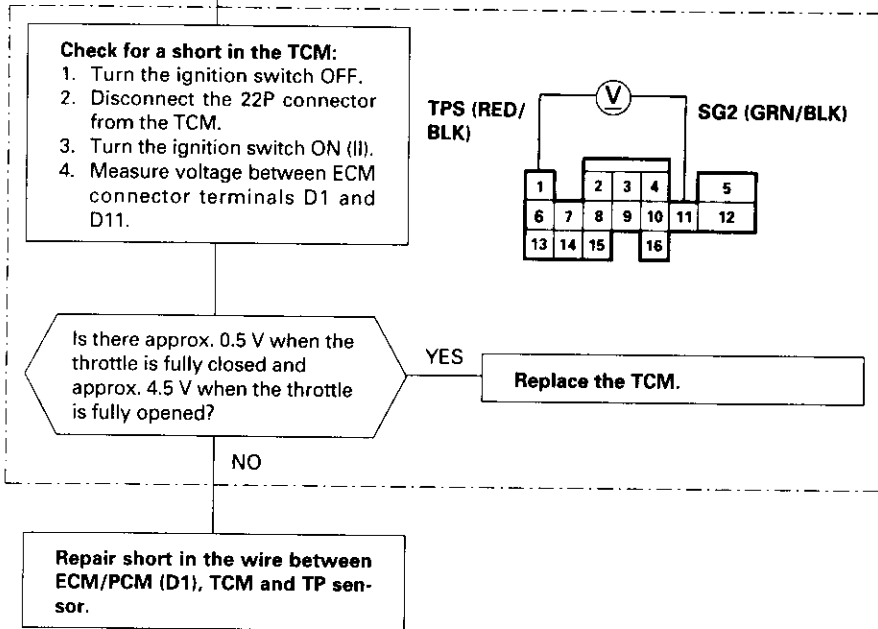



P0123 The scan tool indicates Diagnostic Trouble Code (DTC) P0123: A high voltage problem in the Throttle Position (TP) sensor circuit.

- The MIL has been reported on.
- DTC P0123 is stored.

Problem verification:

1. Turn the ignition switch ON (II).
2. Check the throttle position with the scan tool.

Is there approx. 10% when the throttle is fully closed and approx. 90% when the throttle is fully opened?

YES

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C110 (TP sensor) and ECM/PCM.

NO

Check for an open in the TP sensor:

1. Turn the ignition switch OFF.
2. Disconnect the TP sensor 3P connector.
3. Turn the ignition switch ON (II).
4. At the harness side, measure voltage between the TP sensor 3P connector terminals No. 1 and No. 3.

Is there approx. 5 V?

YES

Replace the throttle body.

NO

Check for an open in the wire (SG2 line):

Measure voltage between ECM/PCM connector terminals D10 and D11.

Is there approx. 5 V?


YES

Repair open in the wire between ECM/PCM (D11) and TP sensor.

NO


Substitute a known-good ECM/PCM and recheck. If prescribed voltage is now available, replace the original ECM/PCM.

TP SENSOR 3P CONNECTOR (C110)

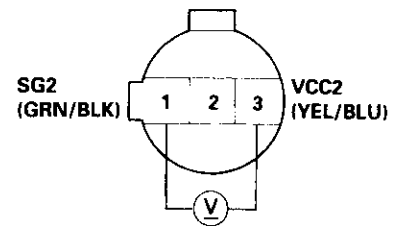

Wire side of female terminals

ECM/PCM CONNECTOR D (16P)

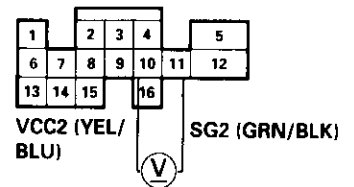

Wire side of female terminals

PGM-FI System

Throttle Position (TP) Sensor

P1121 The scan tool indicates Diagnostic Trouble Code (DTC) P1121: Throttle Position (TP) lower than expected.

- The MIL has been reported on.
- DTC P1121 is stored.

Problem verification:

1. Turn the ignition switch ON (II).
2. Check the throttle position with the scan tool.

Is TP* % or higher indicated when the throttle is fully opened?

YES

Intermittent failure, system is OK at this time.

NO

Replace the TP sensor.

*: 11.8 (D16Y5 engine)
12.9 (D16Y7 engine)
12.2 (D16Y8 engine)



P1122 The scan tool indicates Diagnostic Trouble Code (DTC) P1122: Throttle Position (TP) higher than expected.

- The MIL has been reported on.
- DTC P1122 is stored.

Problem verification:

1. Turn the ignition switch ON (II).
2. Check the throttle position with the scan tool.

Is TP* % or less indicated when the throttle is fully closed?

YES

Intermittent failure, system is OK at this time.

NO

Replace the TP sensor.


*: 16.5 (D16Y5, D16Y8 engine)
16.9 (D16Y7 engine)

PGM-FI System


Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) (Except D16Y5 engine (M/T))

The Heated Oxygen Sensor (HO2S) detects the oxygen content in the exhaust gas and signals the ECM/PCM. In operation, the ECM/PCM receives the signals from the sensor and varies the duration during which fuel is injected. To stabilize the sensor's output, the sensor has an internal heater. The Primary HO2S (Sensor 1) is installed in the exhaust manifold.

HO2S:

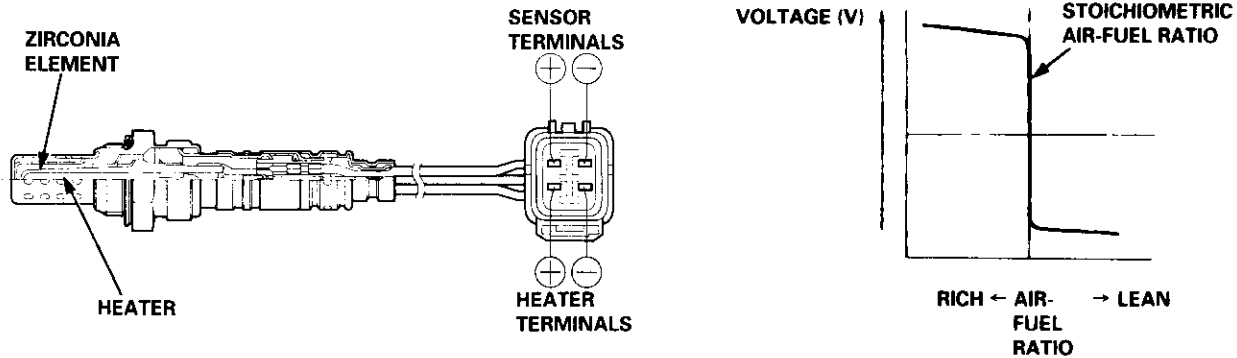

P0131 The scan tool indicates Diagnostic Trouble Code (DTC) P0131: A low voltage problem in the Primary Heated Oxygen Sensor (HO2S) (Sensor 1) circuit.

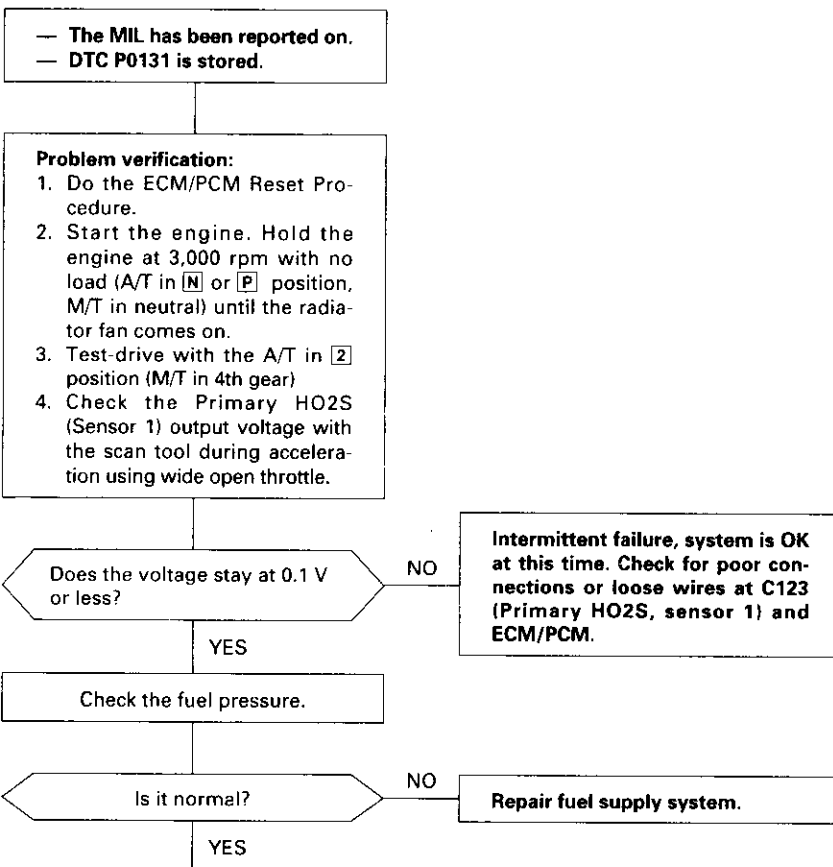



(From page 11-84)

Check for a short in the HO2S:
1. Turn the ignition switch OFF.
2. Disconnect the Primary HO2S (Sensor 1) 4P connector.
3. Start the engine and let it idle.
4. Check the Primary HO2S (Sensor 1) output voltage with the scan tool.

Does it stay at 0.1 V or less?

NO

Replace the HO2S.

PRIMARY HO2S (Sensor 1) 4P CONNECTOR (C123)

YES

Check for a short in the wire (PHO2S line):
1. Turn the ignition switch OFF.
2. Disconnect the ECM/PCM connector D (16P).
3. Check for continuity between the Primary HO2S (Sensor 1) 4P connector terminal No. 1 and body ground.


Is there continuity?

YES

Repair short in the wire between ECM/PCM (D7) and Primary HO2S (Sensor 1).

NO

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

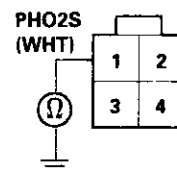

Wire side of female terminals

(cont'd)

PGM-FI System

Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) (Except D16Y5 engine (M/T)) (cont'd)

P0132 The scan tool indicates Diagnostic Trouble Code (DTC) P0132: A high voltage problem in the Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) circuit.

- The MIL has been reported on.
- DTC P0132 is stored.

Problem verification:

1. Do the ECM/PCM Reset Procedure.
2. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P** position, M/T in neutral) until the radiator fan comes on.
3. Test-drive with the A/T in **2** position (M/T in 4th gear).
4. Check the Primary HO2S (Sensor 1) output voltage with the scan tool during deceleration using completely closed throttle.

Does the voltage stay at 1.0 V or more?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C123 (Primary HO2S, Sensor 1) and ECM/PCM.

YES

Check for an open in the Primary HO2S:

1. Turn the ignition switch OFF.
2. Disconnect the Primary HO2S (Sensor 1) 4P connector.
3. Connect the Primary HO2S (Sensor 1) 4P connector terminals No. 1 and No. 2 with a jumper wire.
4. Turn the ignition switch ON (III).
5. Check the Primary HO2S (Sensor 1) output voltage with the scan tool.

Is there 1.0 V or more?

NO

Replace the Primary HO2S.

YES

Check for an open in the wire (PHO2S line):

1. Turn the ignition switch OFF.
2. Connect ECM/PCM connector terminals D7 and D11 with a jumper wire.
3. Turn the ignition switch ON (III).
4. Check the Primary HO2S (Sensor 1) output voltage with the scan tool.

Is there 1.0 V or more?


NO

Repair open in the wire between ECM/PCM (D7) and Primary HO2S (Sensor 1).

YES


Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

PRIMARY HO2S (Sensor 1) 4P CONNECTOR

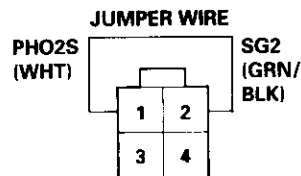

Wire side of female terminals

ECM/PCM CONNECTOR D (16P)

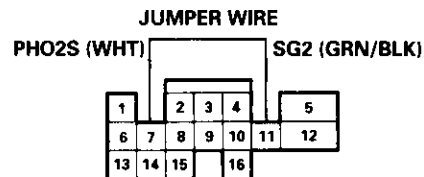

Wire side of female terminals



Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1)

P0133 The scan tool indicates Diagnostic Trouble Code (DTC) P0133: A slow response problem in the Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) circuit.

*
P1163 The scan tool indicates Diagnostic Trouble Code (DTC) P1163: A slow response problem in the Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) circuit.

Description

By controlling the air/fuel ratio with a Primary HO2S (Sensor 1) and a Secondary HO2S (Sensor 2), the deterioration of the Primary HO2S (Sensor 1) can be evaluated by its feedback period. When the feedback period of the HO2S exceeds a certain value during stable driving conditions, the sensor will be judged as deteriorated.


When deterioration has been detected during two consecutive trips, the MIL comes on and DTC P0133 or P1163* will be stored.

NOTE: If DTC P0131, P0132 and/or P0135 are stored at the same time as DTC P0133, troubleshoot those DTCs first, then troubleshoot DTC P0133. If DTC P1162, P1168 and/or P1169 are stored at the same time as DTC P1163, troubleshoot those DTCs first, then troubleshoot DTC P1163.

Possible Cause

- Primary HO2S (Sensor 1) Deterioration
- Primary HO2S Heater (Sensor 1) Deterioration
- Exhaust system leakage

Troubleshooting Flowchart

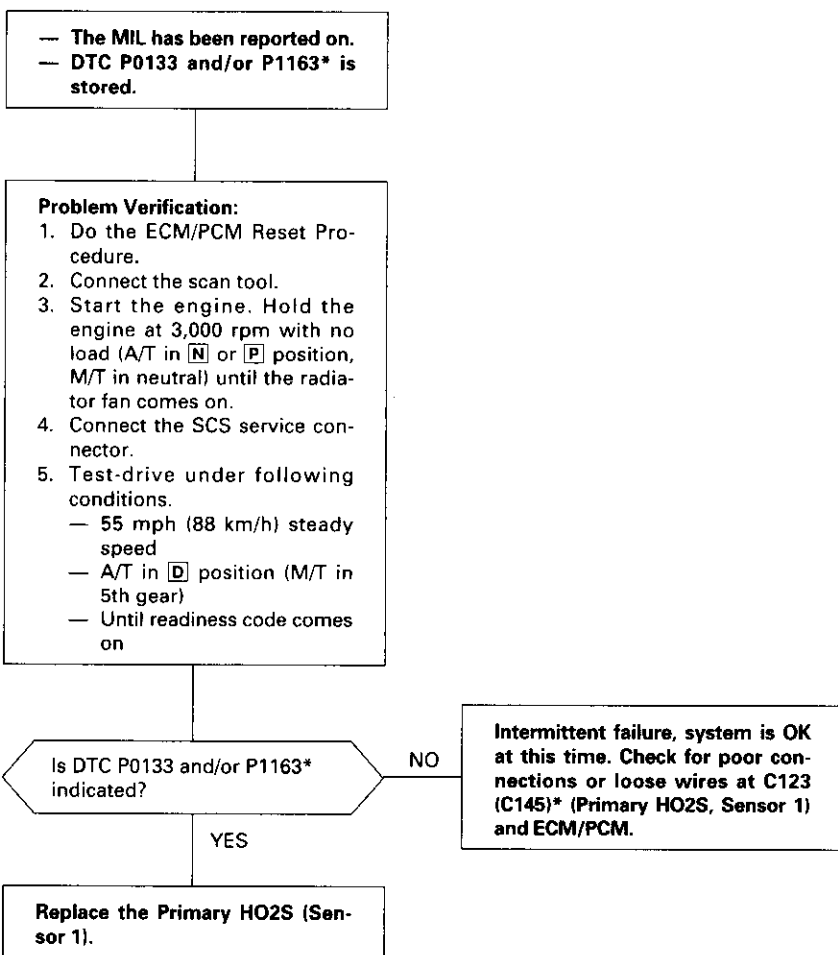

*: P1163 (D16Y5 engine (M/T))


PGM-FI System

Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) (D16Y5 engine (M/T))

P1162 The scan tool indicates Diagnostic Trouble Code (DTC) P1162: A malfunction in the Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) circuit.

Description



The Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) operates over a wide air/fuel range. The Primary HO2S (Sensor 1) is installed in the exhaust manifold.

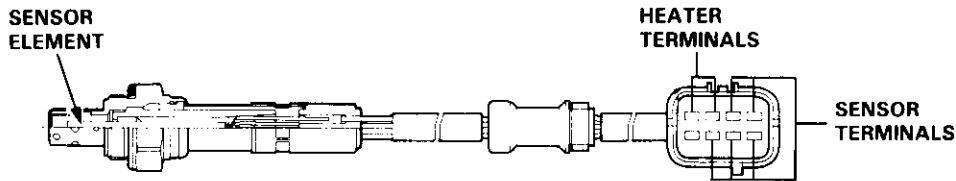

NOTE: If DTC P1162 is stored at the same time as DTC P1167, troubleshoot DTC P1162 first, then troubleshoot DTC P1167.

— The MIL has been reported on.
— DTC P1162 is stored.

Problem verification:
1. Do the ECM Reset Procedure.
2. Start the engine.
3. Wait at least two minutes.

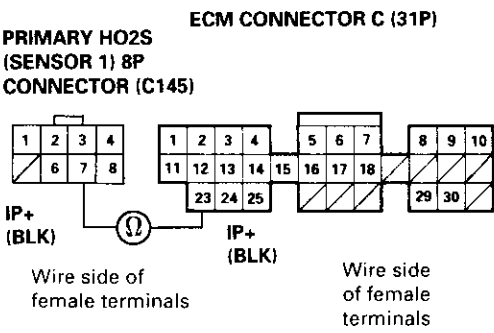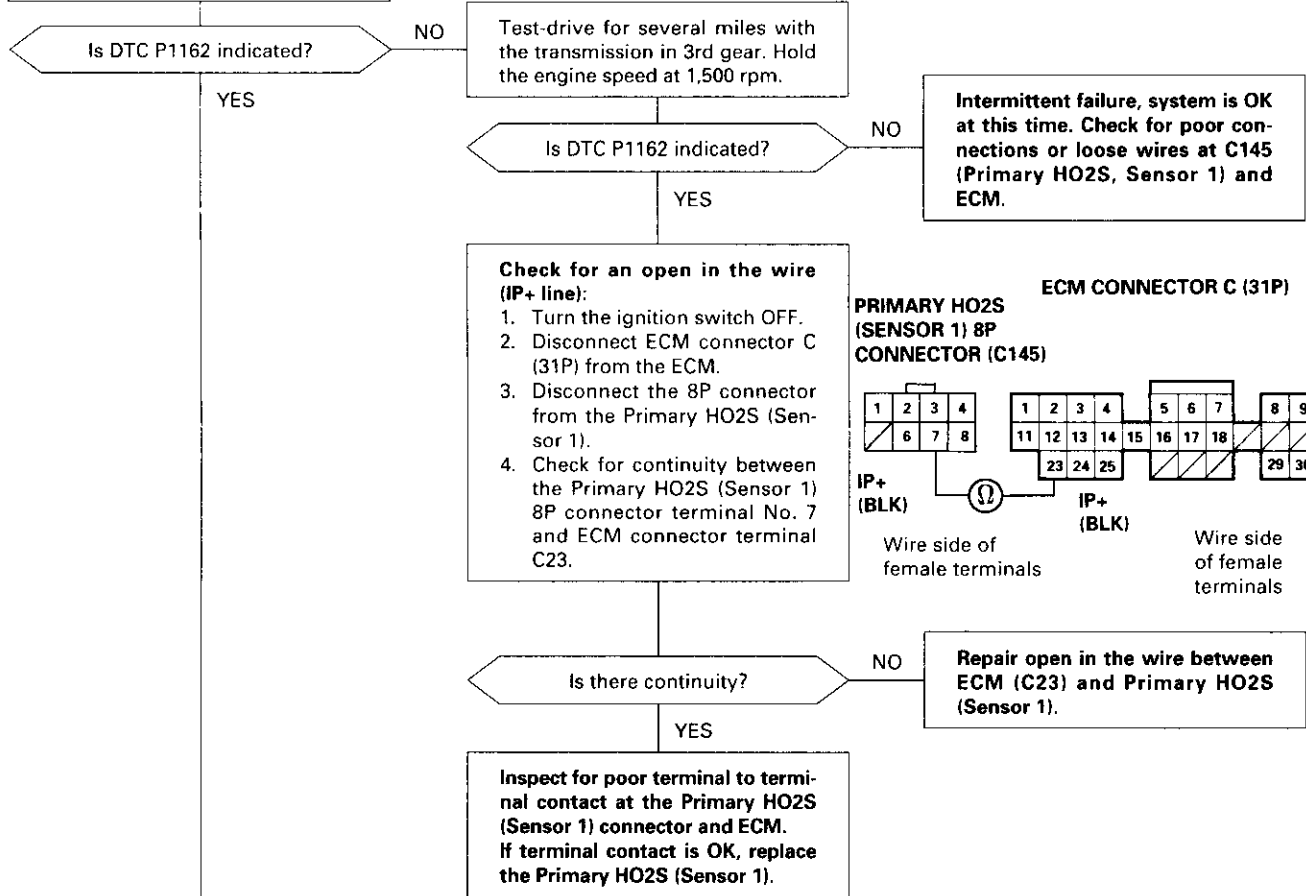


(To page 11-89)



(From page 11-88)

ECM CONNECTORS

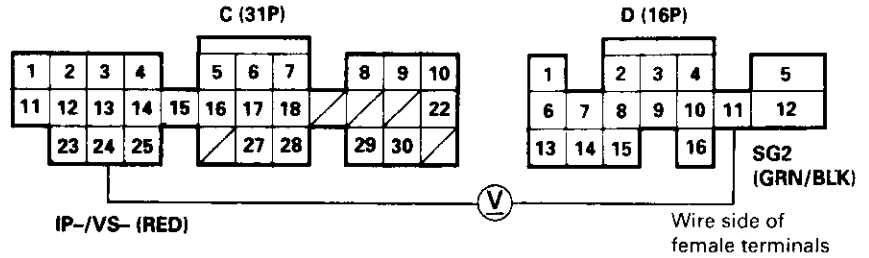

Check the ECM input voltage (IP-/VS- line):

1. Turn the ignition switch OFF.
2. Turn the ignition switch ON (II).
3. Measure voltage between ECM connector terminals C24 and D11.

Is there more than 0.5 V?

YES

NO

Check the ECM:

1. Turn the ignition switch OFF.
2. Disconnect ECM connector C (31P) from the ECM.
3. Check for continuity between body ground and ECM connector terminal C24.

Is there continuity?

YES

NO

- Repair open in the wire between ECM (C24) and Primary HO2S (Sensor 1).
- Substitute a known-good ECM and recheck. If symptom/indication goes away, replace the original ECM.

Check for a short in the wire (IP-/VS- line):

1. Disconnect the 8P connector from the Primary HO2S (Sensor 1).
2. Check for continuity between body ground and ECM connector terminal C24.

Is there continuity?

NO

YES

Repair short in the wire between the Primary HO2S (Sensor 1) and ECM (C24).

Replace the Primary HO2S (Sensor 1).

Check the ECM output voltage (VS+ line):
Measure voltage between ECM connector terminals C25 and D11.



Is there more than 0.5 V?

YES

NO

Check for a short in the wire (VS+ line):

1. Turn the ignition switch OFF.
2. Disconnect ECM connector C (31P) from the ECM.
3. Check for continuity between body ground and ECM connector terminal C25.

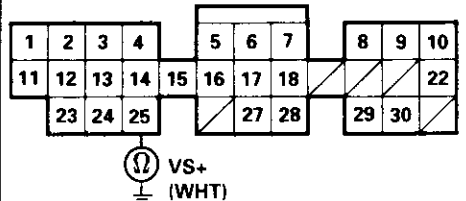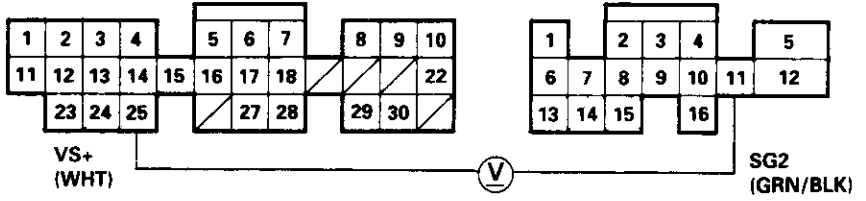

(To page 11-90)





(To page 11-90)

(cont'd)

PGM-FI System

Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) (D16Y5 engine (M/T)) (cont'd)

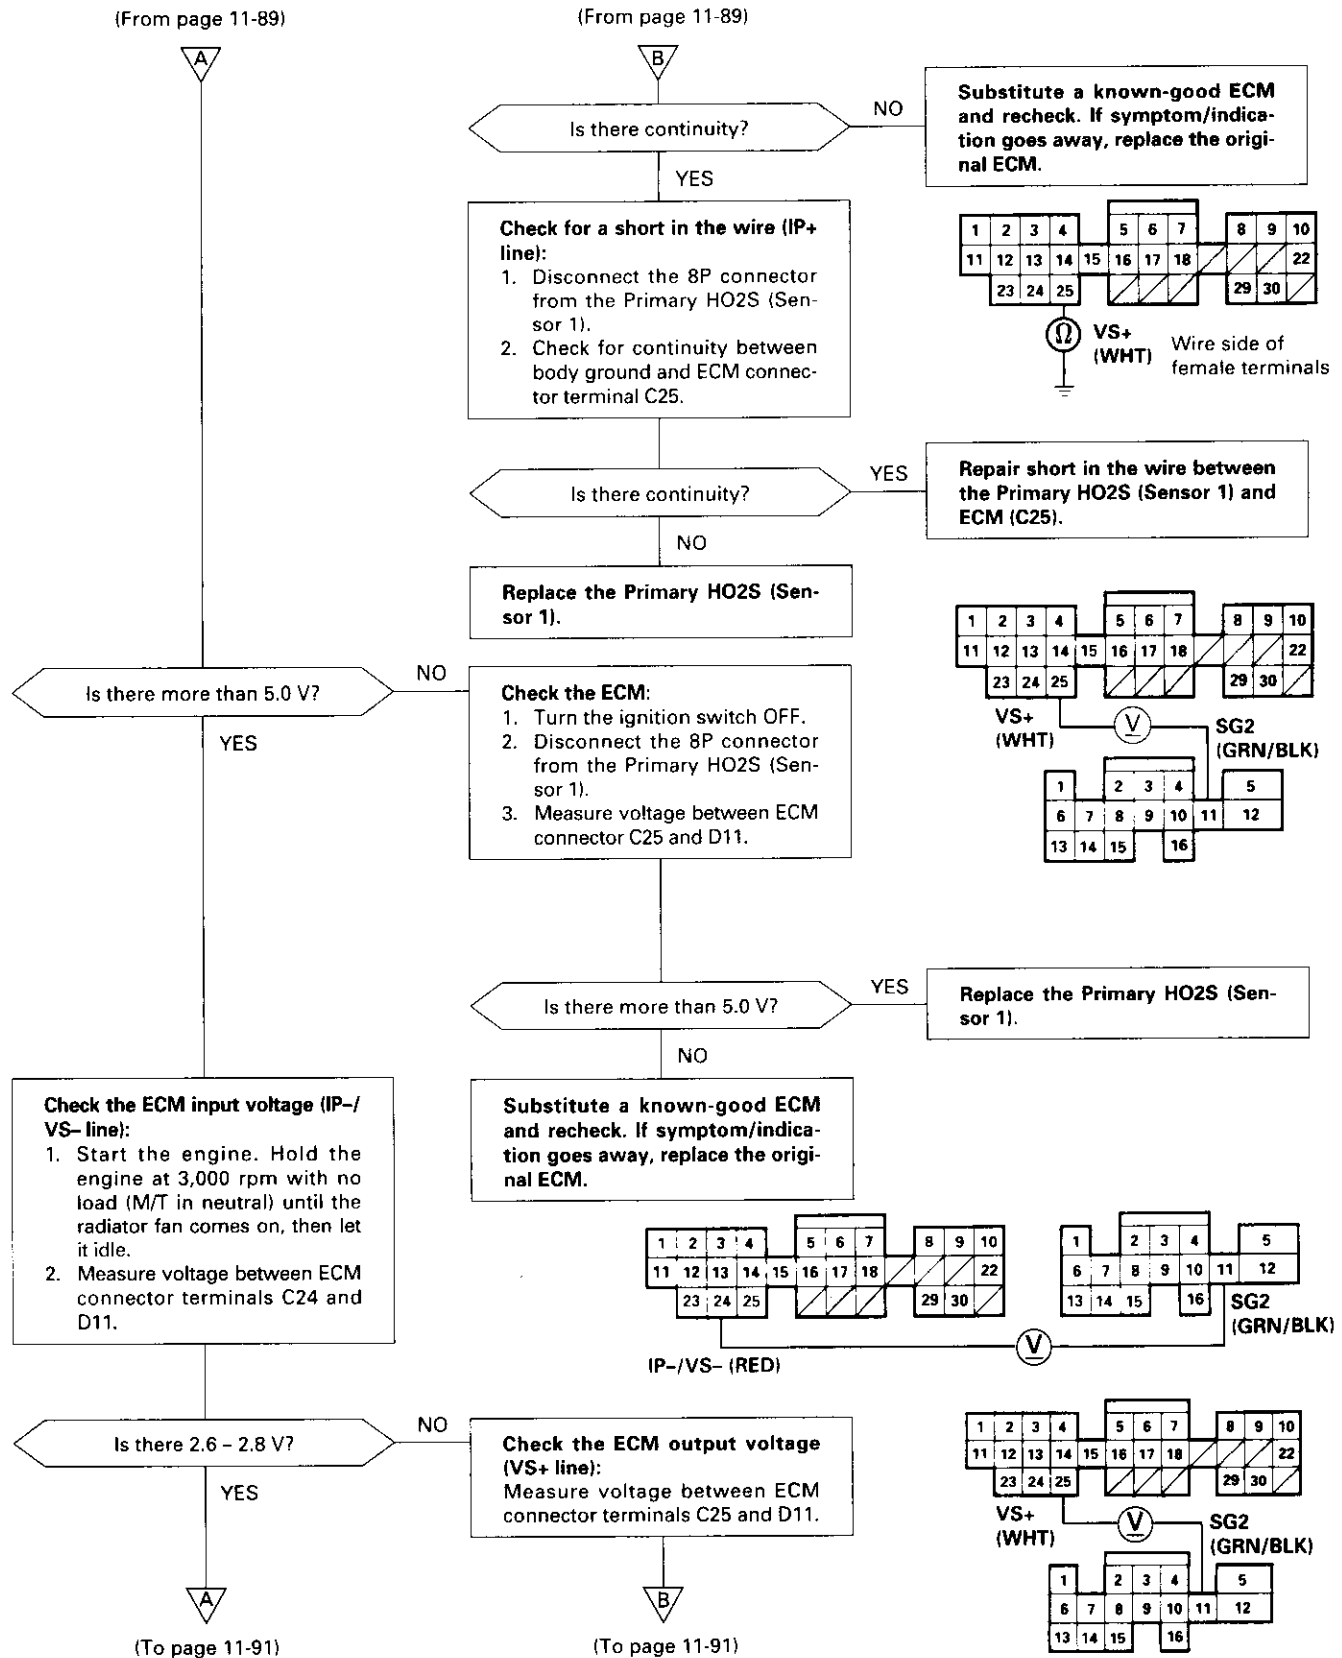

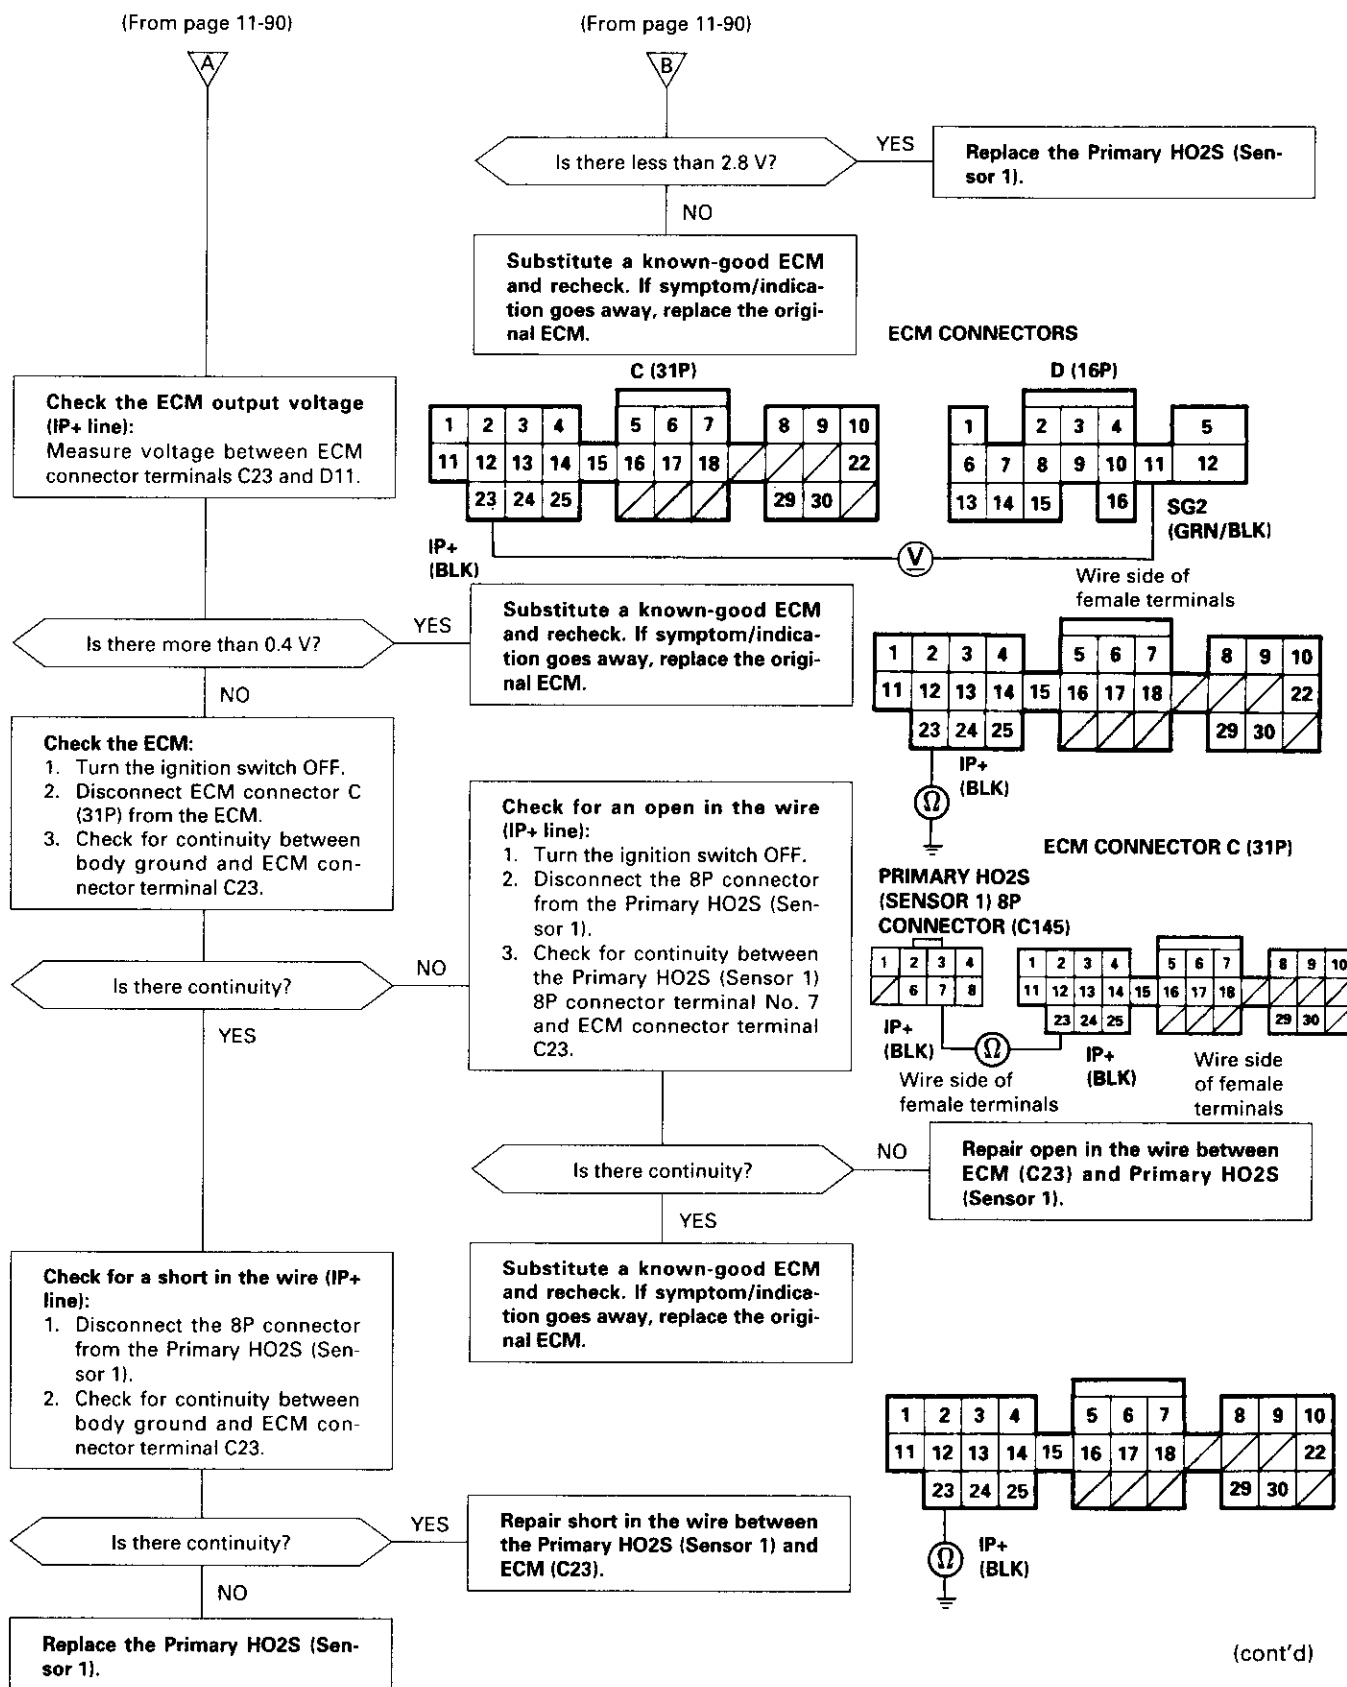

(cont'd)

PGM-FI System

Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) (D16Y5 engine (M/T)) (cont'd)

P1164

The scan tool indicates Diagnostic Trouble Code (DTC) P1164: A range/performance problem in the Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) circuit.

- The MIL has been reported on.
- DTC P1164 is stored.

Problem Verification:

1. Do the ECM Reset Procedure.
2. Start the engine. Hold the engine at 3,000 rpm with no load until the radiator fan comes on.
3. Connect the SCS service connector.
4. Test-drive in 4th gear. Starting at 1,600 rpm, accelerate using wide open throttle for at least 5 seconds. Then decelerate for at least 5 seconds with the throttle completely closed.

Is DTC P1164 indicated?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C145 (Primary HO2S, Sensor 1) and ECM.

YES

Replace the Primary HO2S (Sensor 1).

P1165

The scan tool indicates Diagnostic Trouble Code (DTC) P1165: A range/performance problem the Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) circuit.

- The MIL has been reported on.
- DTC P1165 is stored.

Problem Verification:

1. Do the ECM Reset Procedure.
2. Start the engine. Hold the engine at 3,000 rpm with no load until the radiator fan comes on.
3. Connect the SCS service connector.
4. Test-drive under following conditions.
 - 55 mph steady speed
 - Transmission in 5th gear
 - Until readiness code comes on

Is DTC P1165 indicated?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C145 (Primary HO2S, Sensor 1) and ECM.

YES

Replace the Primary HO2S (Sensor 1).




P1168 The scan tool indicates Diagnostic Trouble Code (DTC) P1168: A low voltage problem in the Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) LABEL circuit.

- The MIL has been reported on.
- DTC P1168 is stored.


Problem verification:

1. Do the ECM Reset Procedure.
2. Start the engine.
3. Wait at least two minutes.

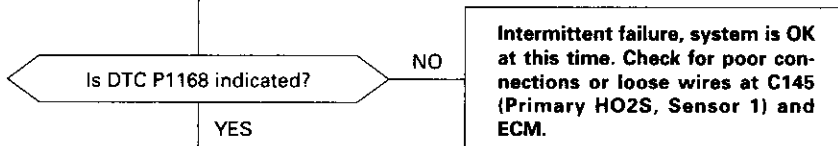


Check the ECM:

1. Turn the ignition switch OFF.
2. Disconnect the ECM connector D (16P).
3. Check for continuity between ECM connector terminal D7 and body ground.

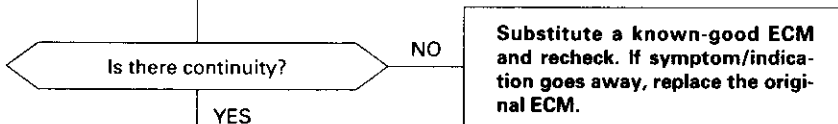

Check for a short in the wires (LABEL line):


1. Disconnect the Primary HO2S (Sensor 1) 8P connector.
2. Check for continuity between ECM connector terminal D7 and body ground.




Repair short in the wires between the Primary HO2S (Sensor 1) and ECM (D7).

ECM CONNECTOR D (16P)

LABEL (WHT)

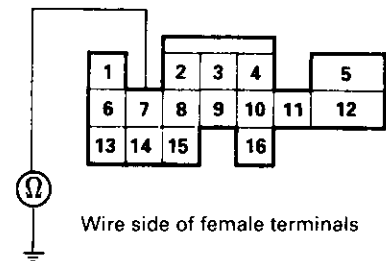

LABEL (WHT)

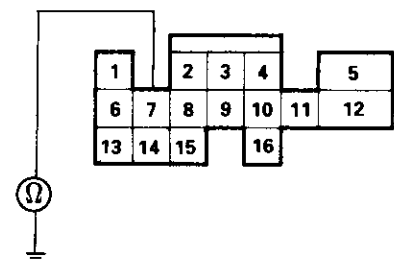

(cont'd)

PGM-FI System

Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) (D16Y5 engine (M/T)) (cont'd)

P1169 The scan tool indicates Diagnostic Trouble Code (DTC) P1169: A high voltage problem in the Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) LABEL circuit.

— The MIL has been reported on.
— DTC P1169 is stored.

Problem verification:
1. Do the ECM Reset Procedure.
2. Start the engine.
3. Wait at least two minutes.

Is DTC P1169 indicated?

NO: Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C145 (Primary HO2S, Sensor 1) and ECM.

YES

Check for an open in the wire (LABEL line):
1. Turn the ignition switch OFF.
2. Disconnect the Primary HO2S (Sensor 1) 8P connector.
3. Turn the ignition switch ON (II).
4. Measure voltage between Primary HO2S (Sensor 1) 8P connector No. 4 terminal and body ground.

Is there approx. 5 V?

NO: Repair open in the wires between the Primary HO2S (Sensor 1) and ECM (D7).

YES

Check for an open in the wire (SG2 line):
1. Turn the ignition switch OFF.
2. Disconnect ECM connector D (16P) from the ECM.
3. Check for continuity between ECM connector terminal D11 and Primary HO2S (Sensor 1) 8P connector terminal No. 3.


Is there continuity?

NO: Repair open in the wire between the Primary HO2S (Sensor 1) and ECM (D11).


YES

Replace the Primary HO2S (Sensor 1).

PRIMARY HO2S (SENSOR 1) 8P CONNECTOR (145)

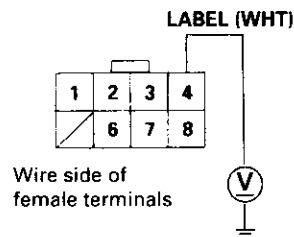

ECM CONNECTOR D (16P)

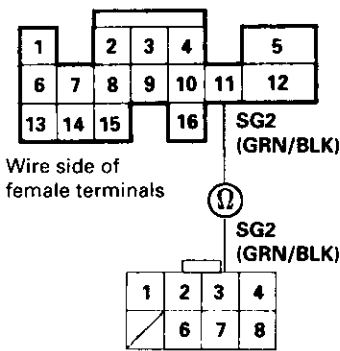



Secondary Heated Oxygen Sensor (Secondary HO2S) (Sensor 2)

P0137 The scan tool indicates Diagnostic Trouble Code (DTC) P0137: A low voltage problem in the Secondary Heated Oxygen Sensor (Secondary HO2S) (Sensor 2) circuit.

- The MIL has been reported on.
- DTC P0137 is stored.

Problem verification:

1. Do the ECM/PCM Reset Procedure.
2. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P** position, M/T in neutral) until the radiator fan comes on.
3. With the scan tool, check the Secondary HO2S (Sensor 2) output voltage at 3,000 rpm.

Does the voltage stay at 0.3 V or less?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C131* (located under right side of dash), C432* (located under middle of dash), C125 (C782)* (Secondary HO2S) (Sensor 2) and ECM/PCM.

YES

Check for a short in the Secondary HO2S:

1. Turn the ignition switch OFF.
2. Disconnect the Secondary HO2S (Sensor 2) 4P connector.
3. Start the engine.
4. Check the Secondary HO2S (Sensor 2) output with the scan tool.

Does the voltage stay at 0.3 V or less?

NO

Replace the Secondary HO2S.

YES

Check for a short in the wire (SHO2S line):

1. Turn the ignition switch OFF.
2. Disconnect the ECM/PCM connector D (16P).
3. Check for continuity between the Secondary HO2S (Sensor 2) 4P connector terminal No. 1 and body ground.

Is there continuity?


YES

Repair short in the wire between ECM/PCM (D14) and Secondary HO2S (Sensor 2).

NO

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

SECONDARY HO2S (Sensor 2)
4P CONNECTOR (C125, C782*)

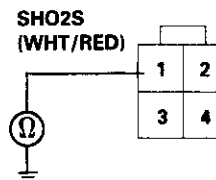

Wire side of female terminals

*: D16Y8 engine

(cont'd)

Secondary Heated Oxygen Sensor (Secondary HO2S) (Sensor 2) (cont'd)

P0138

The scan tool indicates Diagnostic Trouble Code (DTC) P0138: A high voltage problem in the Secondary Heated Oxygen Sensor (Secondary HO2S) (Sensor 2) circuit.

- The MIL has been reported on.
- DTC P0138 is stored.

Problem verification:

1. Do the ECM/PCM Reset Procedure.
2. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P** position, M/T in neutral) until the radiator fan comes on.
3. With the scan tool, check the Secondary HO2S (Sensor 2) output voltage at 3,000 rpm.

Does the voltage stay at 0.6 V or more?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C131* (located under right side of dash), C432* (located under middle of dash), C125 (C782)* (Secondary HO2S Sensor 2) and ECM/PCM.

YES

Check for an open in the Secondary HO2S:

1. Turn the ignition switch OFF.
2. Disconnect the Secondary HO2S (Sensor 2) 4P connector.
3. Connect the Secondary HO2S (Sensor 2) 4P connector terminals No. 1 and No. 2 with a jumper wire.
4. Turn the ignition switch ON (III).
5. Check the Secondary HO2S (Sensor 2) output voltage with the scan tool.

Is there 0.6 V or more?

NO

Replace the Secondary HO2S (Sensor 2).

YES

Check for an open in the wire (SHO2S line):

1. Turn the ignition switch OFF.
2. Connect ECM/PCM connector terminals D14 and D13 with a jumper wire.
3. Turn the ignition switch ON (II).
4. Check the Secondary HO2S (Sensor 2) output voltage with the scan tool.

Is there 0.6 V or more?


NO

Repair open in the wire between ECM/PCM (D13 and/or D14) and Secondary HO2S (Sensor 2).

YES


Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

SECONDARY HO2S (Sensor 2) 4P CONNECTOR C125 (C782)*

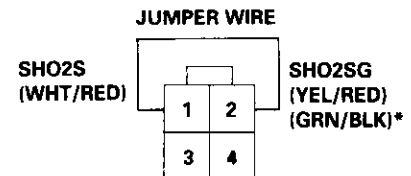

Wire side of female terminals

ECM/PCM CONNECTOR D (16P)

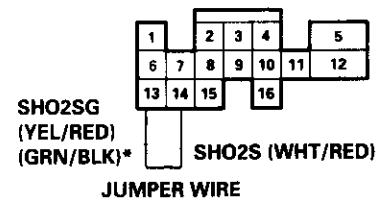

Wire side of female terminals

*: D16Y8 engine



P0139 The scan tool indicates Diagnostic Trouble Code (DTC) P0139: A slow response problem in the Secondary Heated Oxygen Sensor (HO2S) (Sensor 2) circuit.

- The MIL has been reported on.
- DTC P0139 is stored.

Problem verification:

1. Do the ECM/PCM Reset Procedure.
2. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P** position, M/T in neutral) until the radiator fan comes on.
3. With the scan tool, check the Secondary HO2S (Sensor 2) output at 3,000 rpm.

Does the voltage stay within 0.3 – 0.6 V for two minutes?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C131* (located under right side of dash), C432* (located under middle of dash) C125 (C782)* (Secondary HO2S) (Sensor 2) and ECM/PCM.

YES

Replace the Secondary HO2S (Sensor 2).

*: D16Y8 engine

PGM-FI System

Heated Oxygen Sensor (HO2S) Heater

P0135

The scan tool indicates Diagnostic Trouble Code (DTC) P0135: An electrical problem in the Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) Heater system (Except D16Y5 engine (M/T)).

P0141

The scan tool indicates Diagnostic Trouble Code (DTC) P0141: A problem in the Secondary Heated Oxygen Sensor (Secondary HO2S) (Sensor 2) Heater circuit.

— The MIL has been reported on.
— DTC P0135, and/or P0141 are stored.


Problem verification:
1. Do the ECM/PCM Reset Procedure.
2. Start the engine.

Is DTC P0135 or P0141 indicated?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C131** (located under right side of dash), C432** (located under middle of dash), C123 (Primary HO2S, Sensor 1) C125 (C782)** (Secondary HO2S, Sensor 2)* and ECM/PCM.

PRIMARY HO2S (Sensor 1) 4P CONNECTOR
SECONDARY HO2S (Sensor 2) 4P CONNECTOR*

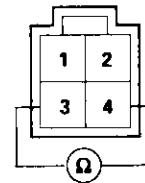

Terminal side of male terminals


YES

Check for an open or short in the HO2S:
1. Turn the ignition switch OFF.
2. Disconnect the HO2S (Primary or Secondary*) (Sensor 1 or Sensor 2) 4P connector.
3. At the HO2S side, measure resistance between the HO2S 4P connector terminals No. 3 and No. 4.

Is there 10 – 40 Ω?

NO

Replace the HO2S (Primary or Secondary*).

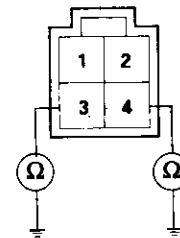

YES


Check for continuity between body ground and the HO2S 4P connector terminals No. 3 and No. 4 individually.

Is there continuity?

YES

Replace the HO2S (Primary or Secondary*).

PRIMARY HO2S (SENSOR 1) 4P CONNECTOR (C123)
SECONDARY HO2S (SENSOR 2) 4P CONNECTOR (C125)*

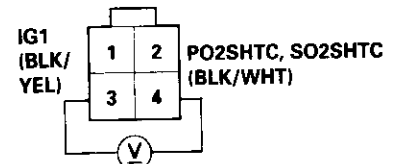

Wire side of female terminals

NO

Check for an open or short in the wire (PO2SHTC, SO2SHTC* line):
1. Turn the ignition switch ON (II).
2. Measure voltage between the HO2S 4P connector terminals No. 3 and No. 4.

Is there battery voltage?

YES


(To page 11-99)

NO


(To page 11-99)

*: P0141
**: D16Y8 engine


SECONDARY HO2S (SENSOR 2)
4P CONNECTOR (C782)**

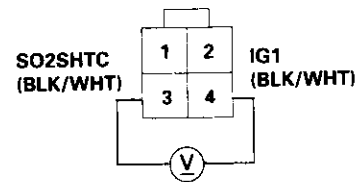

Wire side of female terminals

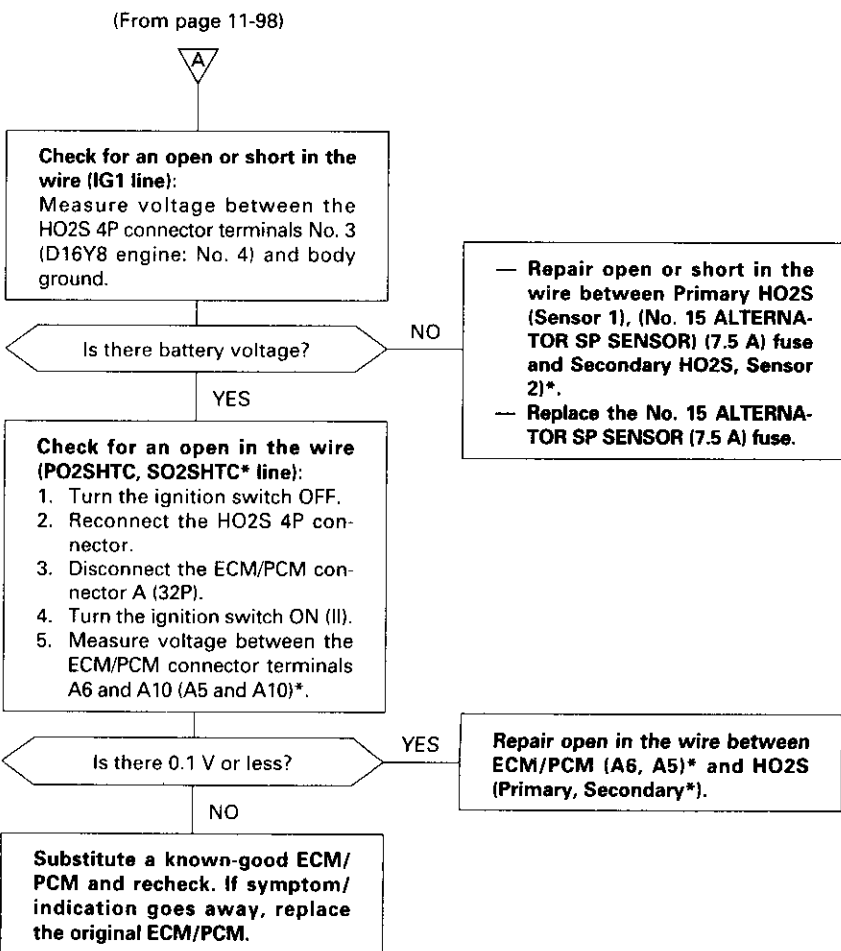


PRIMARY HO2S (SENSOR 1) 4P CONNECTOR (C123)
SECONDARY HO2S (SENSOR 2) 4P CONNECTOR (C125)*

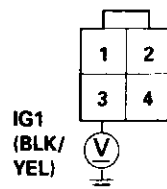


Wire side of female terminals

SECONDARY HO2S (SENSOR 2) 4P CONNECTOR (C782)**


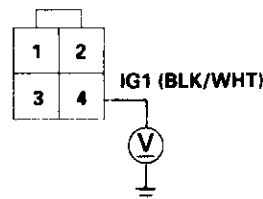


Wire side of female terminals

ECM/PCM CONNECTOR A (32P)

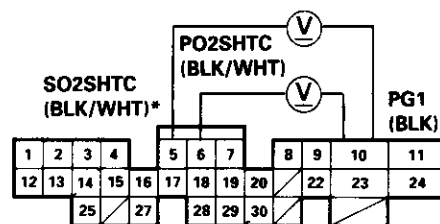

Wire side of female terminals

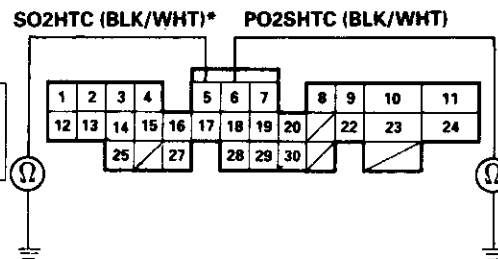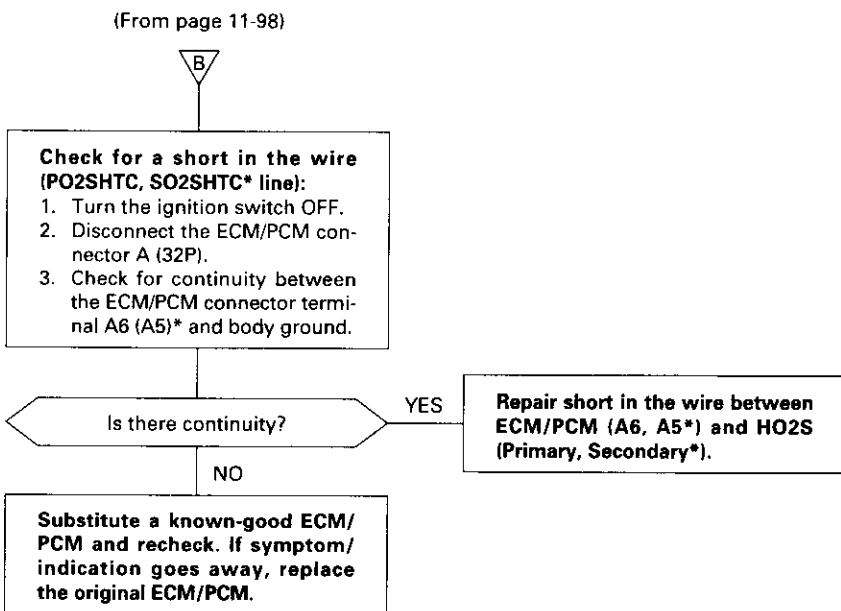

*: P0141

** : D16Y8 engine

PGM-FI System

Heated Oxygen Sensor (HO2S) Heater (D16Y5 engine (M/T))

P1166

The scan tool indicates Diagnostic Trouble Code (DTC) P1166: An electrical problem in the Primary Heated Oxygen Sensor (Primary HO2S) Heater system.

— The MIL has been reported on.
— DTC P1166 is stored.

Problem verification:
1. Do the ECM Reset Procedure.
2. Start the engine.

Is DTC P1166 indicated?
NO
YES

Intermittent failure, system is OK at this time (test drive may be necessary). Check for poor connections or loose wires between C145 (Primary HO2S, Sensor 1) and ECM.

Check the Primary HO2S (Sensor 1) resistance:
1. Turn the ignition switch OFF.
2. Disconnect the Primary HO2S (Sensor 1) 8P connector.
3. At the Primary HO2S (Sensor 1), measure resistance between No. 1 and No. 2 terminal.

Is there 2 - 13 Ω?
NO
YES

Replace the Primary HO2S (Sensor 1).

Check for a shorted Primary HO2S (Sensor 1):
Check for continuity between body ground and each terminal.

Is there continuity?
YES
NO

Replace the Primary HO2S (Sensor 1).


Check for a shorted Primary HO2S (Sensor 1):
Check for continuity between terminal No. 1 and terminals No. 3, 4, 6, 7 and 8 individually.

Is there continuity?
YES
NO



Replace the Primary HO2S (Sensor 1).

(To page 11-101)

PRIMARY HO2S (SENSOR 1) 8P CONNECTOR

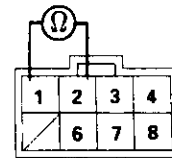

Terminal side of male terminals

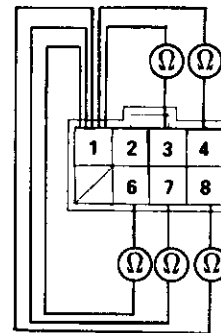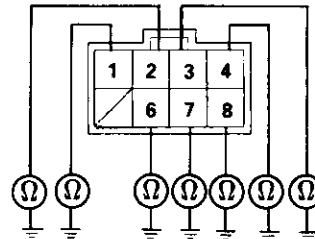



(From page 11-100)

Check the PO2SHTC circuit:

1. Start engine and keep engine rpm at idle.
2. At the engine wire harness, measure voltage between Primary HO2S (Sensor 1) 8P connector terminal No. 1 terminal and body ground.

Is there more than 5 V?

YES

Check for an open in the wire (PG line):
Measure voltage between Primary HO2S (Sensor 1) 8P connector terminals No. 1 and No. 2.

Is there more than 5 V?

NO

Repair open in the wire between the HO2S and G101 (located at thermostat housing).

YES

Substitute a known-good ECM and recheck. If symptom/indication goes away, replace the original ECM.

Check for a short in the wire (PO2SHTC line):

1. Turn the ignition switch OFF.
2. Disconnect ECM connector A (32P) from the ECM.
3. Check for continuity between ECM connector terminal A6 and body ground.

Is there continuity?

YES

Repair short in the wire between the ECM (A6) and the Primary HO2S (Sensor 1).

NO

Check for an open in the wire (PO2SHTC line):

Check for continuity between ECM connector terminal A6 and the Primary HO2S (Sensor 1) 8P connector terminal No. 1.

Is there continuity?

NO


Repair open in the wire between ECM (A6) and the Primary HO2S (Sensor 1).

YES

Substitute a known-good ECM and recheck. If symptom/indication goes away, replace the original ECM.


PRIMARY HO2S (SENSOR 1) 8P CONNECTOR (C145)

PO2SHTC (BLK/WHT)



Wire side of female terminals


PO2SHTC (BLK/WHT)

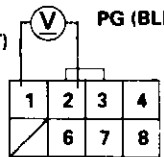

PG (BLK)


PO2SHTC (BLK/WHT)

ECM CONNECTOR A (32P)




Wire side of female terminals

PO2SHTC (BLK/WHT)



PO2SHTC (BLK/WHT)



(cont'd)

PGM-FI System

Heated Oxygen Sensor (HO2S) Heater (D16Y5 engine (M/T)) (cont'd)

P1167 The scan tool indicates Diagnostic Trouble Code (DTC) P1167: A system malfunction in the Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) Heater circuit.


— The MIL has been reported on.
— DTC P1167 is stored.

Problem Verification:
1. Do the ECM Reset Procedure.
2. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N**) or **P** position, M/T in neutral) until the radiator fan comes on.

Is DTC1167 indicated?

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C145 (Primary HO2S, Sensor 1) and ECM.

PRIMARY HO2S (SENSOR 1) 8P CONNECTOR (C145)

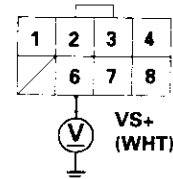


Check for an open in the wire (VS+ line):
1. Turn the ignition switch OFF.
2. Disconnect the Primary HO2S (Sensor 1) 8P connector.
3. Turn the ignition switch ON (II).
4. Measure voltage between the Primary HO2S (Sensor 1) 8P connector terminal No. 6 and body ground.

Is there more than 5 V?

Check the ECM:
Measure voltage between the ECM connector terminal C25 and body ground.

ECM CONNECTOR C (31P)

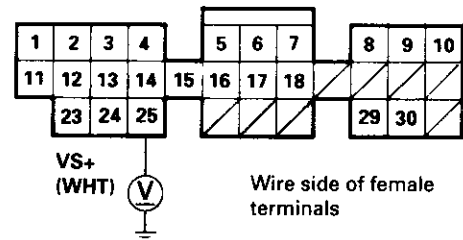

Is there more than 5 V?

Repair open in the wire ECM (C25) and Primary HO2S (Sensor 1).

Replace the Primary HO2S (Sensor 1).

Substitute a known-good ECM and recheck. If symptom/indication goes away, replace the original ECM.

PGM-FI System

Heated Oxygen Sensor (HO2S) Heater (D16Y5 engine (M/T)) (cont'd)

P1167 The scan tool indicates Diagnostic Trouble Code (DTC) P1167: A system malfunction in the Primary Heated Oxygen Sensor (Primary HO2S) (Sensor 1) Heater circuit.


— The MIL has been reported on.
— DTC P1167 is stored.

Problem Verification:
1. Do the ECM Reset Procedure.
2. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N**) or **P** position, M/T in neutral) until the radiator fan comes on.

Is DTC1167 indicated?

NO
Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C145 (Primary HO2S, Sensor 1) and ECM.

PRIMARY HO2S (SENSOR 1) 8P CONNECTOR (C145)

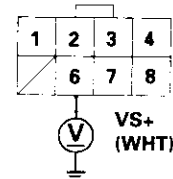


YES
Check for an open in the wire (VS+ line):
1. Turn the ignition switch OFF.
2. Disconnect the Primary HO2S (Sensor 1) 8P connector.
3. Turn the ignition switch ON (II).
4. Measure voltage between the Primary HO2S (Sensor 1) 8P connector terminal No. 6 and body ground.

Is there more than 5 V?

NO
Check the ECM:
Measure voltage between the ECM connector terminal C25 and body ground.

ECM CONNECTOR C (31P)

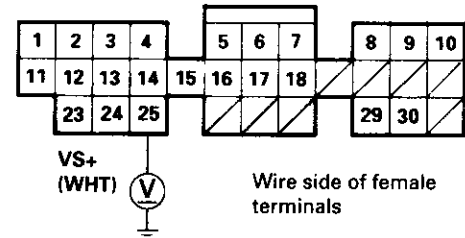

YES
Replace the Primary HO2S (Sensor 1).

YES
Repair open in the wire ECM (C25) and Primary HO2S (Sensor 1).

NO
Substitute a known-good ECM and recheck. If symptom/indication goes away, replace the original ECM.



Fuel Supply System

P0171 The scan tool indicates Diagnostic Trouble Code (DTC) P0171: The fuel system is too lean.

P0172 The scan tool indicates Diagnostic Trouble Code (DTC) P0172: The fuel system is too rich.

Description

By monitoring the Long Term Fuel Trim, long term malfunctions in the fuel system will be detected.

If a malfunction has been detected during two consecutive trips, the MIL will come on and DTC P0171 and/or P0172 will be stored.

NOTE: If some of the DTCs listed below are stored at the same time as DTC P0171 and/or P0172, troubleshoot those DTCs first, then troubleshoot DTC P0171 and/or P0172.

P0106-8, P1128-9*3, *5: MAP Sensor

P0135: Primary HO2S Heater

P0137-8: Secondary HO2S

P0141: Secondary HO2S Heater

P0401: EGR Flow Insufficient*1

P0441: EVAP System Insufficient Purge Flow*6

P1259: VTEC System*2

P1491: EGR Valve Lift Insufficient*1

P1498: EGR Valve Lift Sensor High Voltage*1

*1: D16Y5 engine

*2: D16Y5, D16Y8 engine

*3: '97 model

*4: '96 model

*5: '98 model

*6: '96 D16Y5 engine, '96 D16Y7 engine, '96 D16Y8 engine (sedan), '97 D16Y5 engine, '97 D16Y7 engine (coupe: KA, KC models, sedan KA, KC, KL (DX) models, hatchback: all models), '97 D16Y8 engine (sedan: KA, KC models)

Possible Cause

DTC P0171
System too lean

- Fuel Pump insufficient flow/pressure
- Fuel Feed Line clogged, leaking
- Fuel Pressure Regulator stuck open
- Fuel Filter clogged
- Fuel Injector clogged, air inclusion
- Gasoline doesn't meet Owner's Manual spec.
- Primary HO2S (Sensor 1) deteriorated
- MAP Sensor range/performance*4
- EGR System malfunction (too much flow)*1
- Valve Clearance
- Exhaust leak

DTC P0172
System too rich


- Fuel Pressure Regulator clogged, stuck closed
- Fuel Return Pipe clogged
- Fuel Injector leaking
- Gasoline doesn't meet Owner's Manual spec.
- Primary HO2S (Sensor 1) deteriorated
- MAP Sensor range/performance*4
- EGR System insufficient flow*1
- EVAP Purge Control Solenoid Valve leaking, stuck opened
- Valve Clearance

(cont'd)

PGM-FI System

Fuel Supply System (cont'd)

Troubleshooting Flowchart

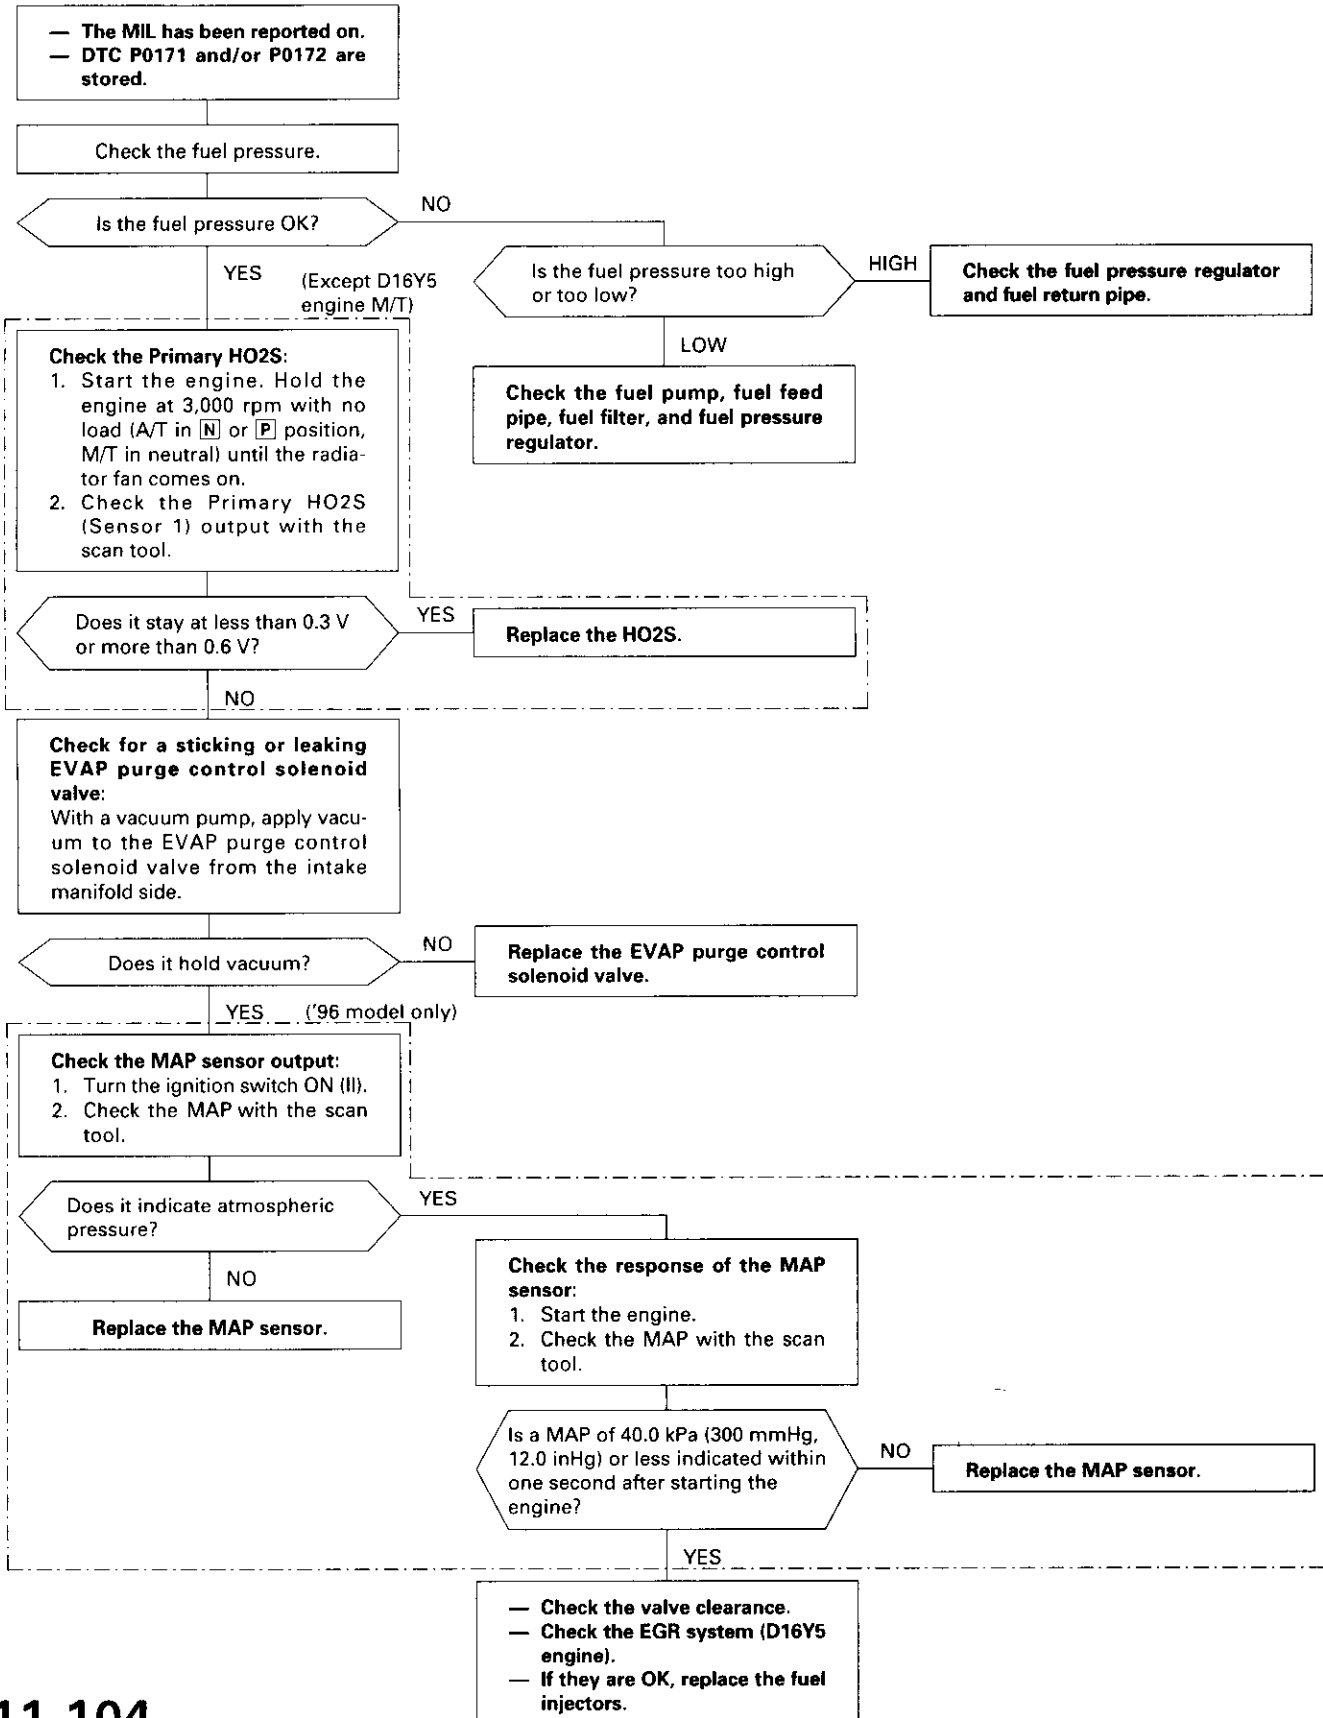



Misfire Detected in One Cylinder

P0301 The scan tool indicates Diagnostic Trouble Code (DTC) P0301: Cylinder 1 misfire detected.

P0302 The scan tool indicates Diagnostic Trouble Code (DTC) P0302: Cylinder 2 misfire detected.

P0303 The scan tool indicates Diagnostic Trouble Code (DTC) P0303: Cylinder 3 misfire detected.

P0304 The scan tool indicates Diagnostic Trouble Code (DTC) P0304: Cylinder 4 misfire detected.

Description

Misfire detection is accomplished by monitoring the crankshaft speed with the crankshaft speed fluctuation (CKF) sensor which is attached to the crankshaft.

If misfiring strong enough to damage the catalyst is detected, the MIL will blink during the time of its occurrence, and DTC P0301, P0302, P0303 or P0304 will be stored. Then, after the misfire has ceased, the MIL will come on.

If misfiring that increases emissions is detected during two consecutive driving cycles, the MIL will come on, and DTC P0301, P0302, P0303 or P0304 will be stored.

NOTE: If some of the DTCs listed below are stored at the same time as a misfire DTC, troubleshoot those DTCs first, then troubleshoot the misfire DTC.

P0106: MAP sensor

P0131, P0132: HO2S

P0171, P0172: Fuel supply system

P0335, P0336: CKF sensor

P0401, P1491, P1498: EGR system

P0441: EVAP system Insufficient purge flow**

P1359, P1361, P1362: TDC sensor

P1381, P1382: CYP sensor

** : '96 D16Y5 engine, '96 D16Y7 engine, '96 D16Y8 engine (sedan), '97 D16Y5 engine, '97 D16Y7 engine (coupe: KA, KC models, sedan KA, KC, KL (DX) models, hatchback: all models), '97 D16Y8 engine (sedan: KA, KC models)

Possible Cause

- Fuel injector clogging, fuel leakage, air leakage
- Fuel injector circuit open or shorted
- Spark plug carbon deposits, fouling, malfunction
- Ignition wires open, leaking
- Distributor malfunction
- Compression low
- Valve clearance out of spec
- VTEC system malfunction (D16Y5, D16Y8 engine)
- HO2S
- HO2S circuit

(cont'd)



PGM-FI System

Misfire in Detected One Cylinder (cont'd)

Troubleshooting Flowchart

- The MIL has been reported on.
- DTC P0301, P0302, P0303, or P0304 is indicated.

Check the fuel injector function:
Start the engine, and listen for a clicking sound at the fuel injector in the problem cylinder.

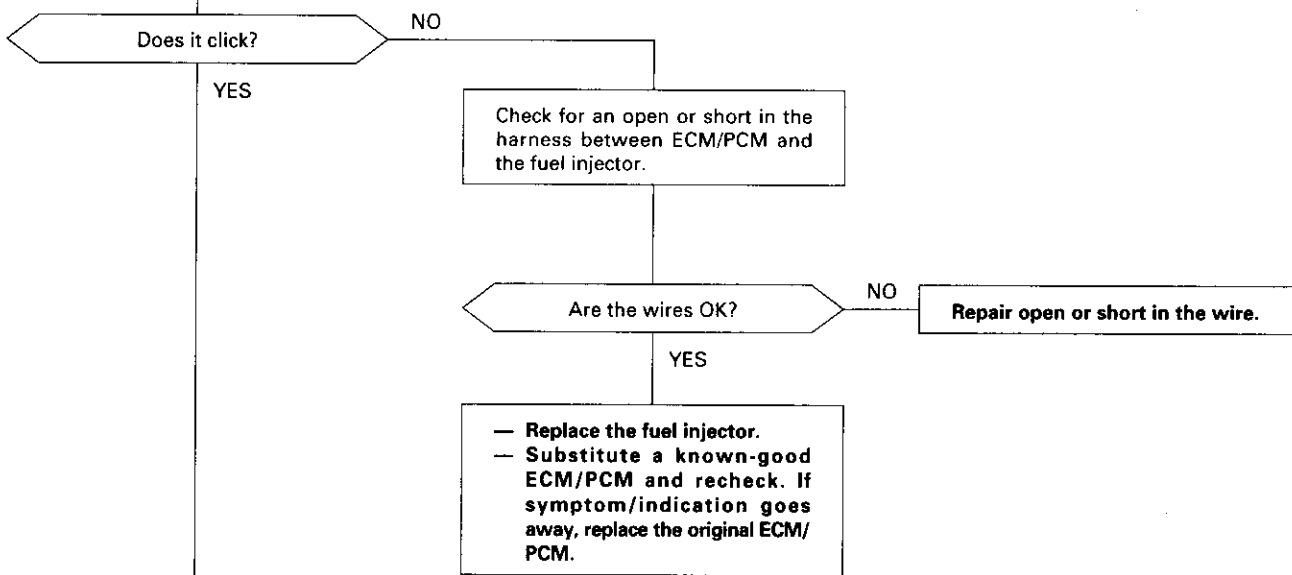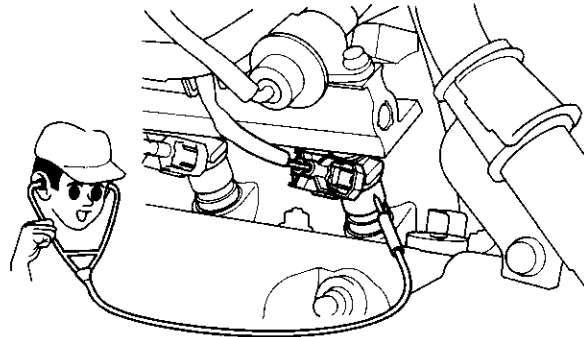

Problem verification:

1. After checking the freeze data, do the ECM/PCM Reset Procedure.
2. Exchange the spark plug from the problem cylinder with one of another cylinder.
3. Connect the SCS service connector.
4. Test-drive the vehicle several times in the range of the freeze data.


NOTE:

- If there is no freeze data of misfiring, just clear the DTC.
- If there is no freeze data of misfiring, test drives under various conditions are necessary.

(To page 11-107)



(From page 11-106)

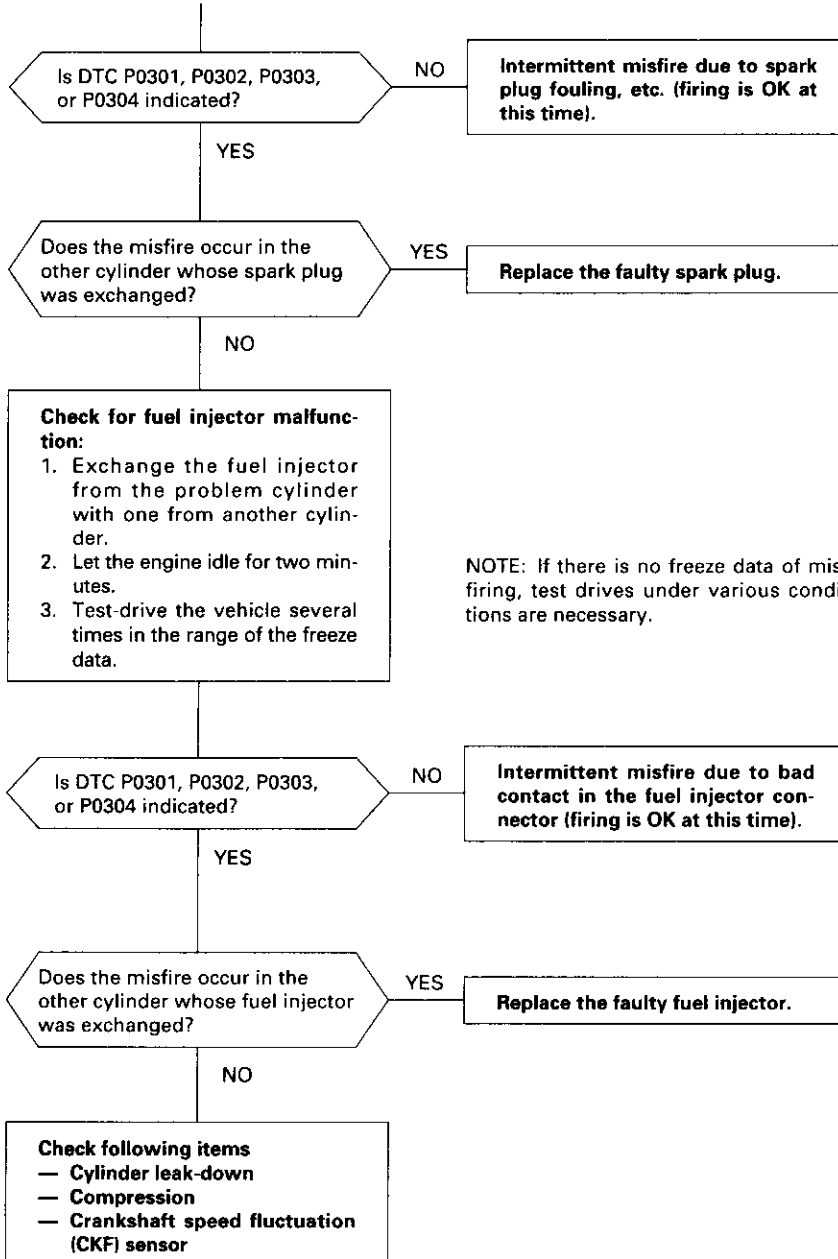

PGM-FI System

Random Misfire

P0300*5 or **P1300***3,*4 and **P0301 through P0304**

The scan tool indicates Diagnostic Trouble Code (DTC) P0300*5 or P1300*3,*4 and some of P0301 – P0304: Random misfire.

Description

Misfire detection is accomplished by monitoring the crankshaft speed with the crankshaft speed fluctuation (CKF) sensor which is attached to the crankshaft.

If misfiring strong enough to damage the catalyst is detected, the MIL will blink during the time of its occurrence, and DTC P0300*5 or P1300*3,*4 and some of DTCs P0301 through P0304 will be stored. Then, after misfire has ceased, the MIL will come on.

If misfiring that increases emissions is detected during two consecutive driving cycles, the MIL will come on, and DTC P0300*5 or P1300*3,*4 and some of DTCs P0301 through P0304 will be stored.

NOTE: If some of the DTCs listed below are stored at the same time as a misfire DTC, troubleshoot those DTCs first, then troubleshoot the misfire DTC.

- P0106, P1128-9*3,*5 MAP sensor
- P0131, P0132: HO2S
- P0171, P0172: Fuel metering
- P0401, P1491, P1498: EGR system*1
- P0505: Idle Control System
- P1253: VTEC System*2
- P1361, P1362: TDC sensor
- P1381, P1382: CYP sensor
- P1508: IAC valve

Possible Cause

- Fuel pump insufficient fuel pressure, amount of flow
- Fuel line clogging, blockage, leakage
- Fuel filter clogging
- Fuel pressure regulator stuck open
- EGR system malfunction*1
- Distributor malfunction
- Ignition coil wire open, leakage
- Ignition control module malfunction
- MAP sensor range/performance, poor response*4
- Valves carbon deposit
- Compression low
- IAC valve malfunction*4
- VTEC system malfunction*2
- Fuel does not meet Owner's Manual spec., lack of fuel
- HO2S
- HO2S circuit

- *1: D16Y5 engine
- *2: D16Y5, D16Y8 engine
- *3: '97 model
- *4: '96 model
- *5: '98 model

Troubleshooting

By test-driving, determine the conditions during which misfire occurs. Depending on these conditions, test in the order described in the table below.

Possible cause	EGR*1 system	Crankshaft position (CKP) sensor	Fuel pressure	Distributor and Ignition wires	ICM	Valve Clearance	IAC Valve	MAP sensor
Page								
Condition	11-170	section 6	11-150, 151	section 23	section 23	section 6	11-126	11-67
Only low rpm and load	③	⑤	④			⑤	①	②
Only accelerating			②	①	③			④
Only high rpm and load		⑤	①	②	③	⑤		④
Not specific		⑤	①	②	④	⑤		③

NOTE: If misfire doesn't recur, some possible causes are fuel that doesn't meet owner's manual spec, lack of fuel, carbon deposits on spark plug, etc.



Knock Sensor (KS) (D16Y5 engine (CVT) and D16Y8 engine)

P0325 The scan tool indicates Diagnostic Trouble Code (DTC) P0325: A malfunction in the circuit of the Knock Sensor (KS).

- The MIL has been reported on.
- DTC P0325 is stored.

Problem verification:

1. Do the ECM/PCM Reset Procedure.
2. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P** position, M/T in neutral) until the radiator fan comes on, then let it idle.
3. Hold the engine at 3,000 – 4,000 rpm for at least 60 seconds.

Is DTC P0325 indicated?

NO

Intermittent failure, system is OK at this time (test drive may be necessary).
Check for poor connections or loose wires between C137 (knock sensor (KS)) and ECM/PCM.

YES

Check for a short in the wire (KS line):

1. Turn the ignition switch OFF.
2. Disconnect the knock sensor 2P connector.
3. Disconnect the ECM/PCM connector D (16P).
4. Check for continuity between ECM/PCM connector terminals D6 and body ground.

Is there continuity?

YES

Repair short in the wire between ECM/PCM (D6) and knock sensor.

NO

Check for an open in the wire (KS line):

Check for continuity between ECM/PCM connector terminal D6 and knock sensor 2P connector terminal No. 1.

Is there continuity?

NO

Repair open in the wire between ECM/PCM (D6) and knock sensor.

YES

Substitute a known-good knock sensor and recheck.


Is DTC P0325 indicated?

NO


Replace the original knock sensor.

YES


Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

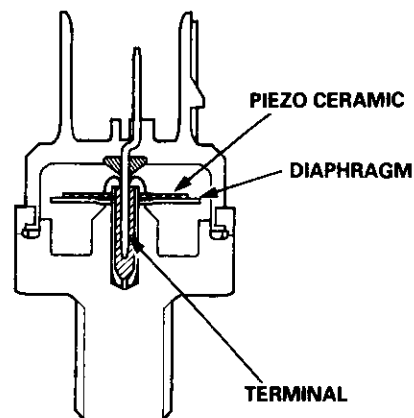

ECM/PCM CONNECTOR D (16P)

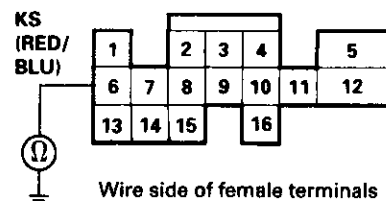

KS 2P CONNECTOR (C137)

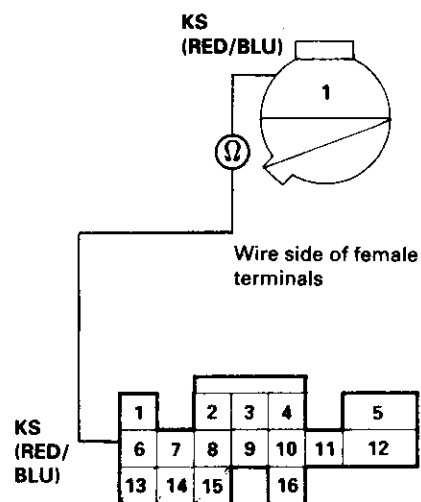

PGM-FI System

Crankshaft Position/Top Dead Center/Cylinder Position (CKP/TDC/CYP) Sensor


- P0335** The scan tool indicates Diagnostic Trouble Code (DTC) P0335: A malfunction in the Crankshaft Position (CKP) sensor circuit.
- P0336** The scan tool indicates Diagnostic Trouble Code (DTC) P0336: A range/performance problem in the Crankshaft Position (CKP) sensor circuit.
- P1361** The scan tool indicates Diagnostic Trouble Code (DTC) P1361: Intermittent interruption in the Top Dead Center (TDC) sensor circuit.
- P1362** The scan tool indicates Diagnostic Trouble Code (DTC) P1362: No signal in the Top Dead Center (TDC) sensor circuit.
- P1381** The scan tool indicates Diagnostic Trouble Code (DTC) P1381: Intermittent interruption in the Cylinder Position (CYP) sensor circuit.
- P1382** The scan tool indicates Diagnostic Trouble Code (DTC) P1382: No signal in the Cylinder Position (CYP) sensor circuit.

Description


The CKP Sensor determines timing for fuel injection and ignition of each cylinder and also detects engine speed. The TDC Sensor determines ignition timing at start-up (cranking) and when crank angle is abnormal. The CYP Sensor detects the position of No. 1 cylinder for sequential fuel injection to each cylinder. The CKP/TDC/CYP Sensor is built into the distributor.

NOTE: If DTC P1359 is stored at the same time as DTC P0335, P0336, P1361, P1362, P1381 and/or P1382, troubleshoot DTC P1359 first, then troubleshoot those DTCs.

D16Y5 engine:

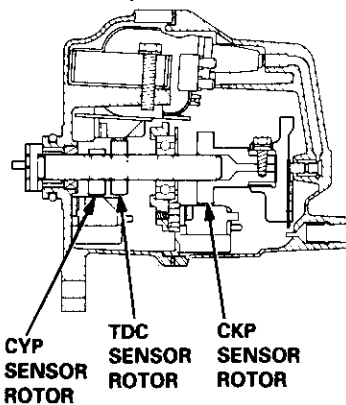

D16Y7, D16Y8 engines:

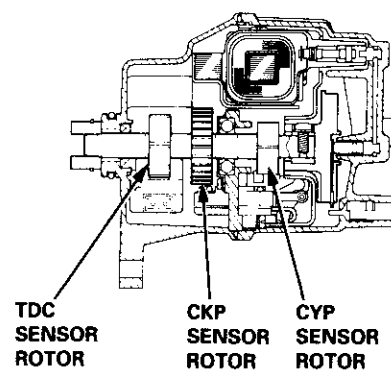

— The MIL has been reported on.
— DTC P0335, P0336, P1361, P1362, P1381 and/or P1382 are stored.

Problem verification:
1. Do the ECM/PCM Reset Procedure.
2. Start the engine.

Is DTC P0335, P0336, P1361, P1362, P1381 and/or P1382 indicated?


NO
Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C120 (distributor) and ECM/PCM.

YES
Check for an open in the CKP/TDC/CYP sensor:
1. Turn the ignition switch OFF.
2. Disconnect the distributor 10P connector.
3. Measure resistance between the terminals of the indicated sensor (*see table).

Is there 350 – 700 Ω?

NO
Replace the distributor ignition housing (see section 23).

YES
(To page 11-111)

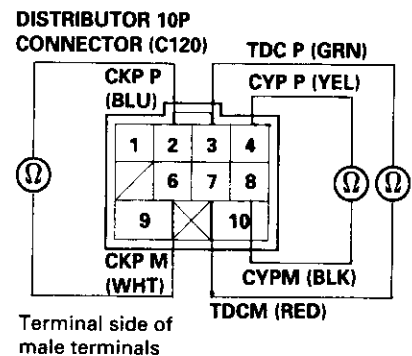

SENSOR	DTC	SENSOR TERMINAL	ECM/PCM TERMINAL	WIRE COLOR
CKP	P0335	2	C2	BLU
	P0336	6	C12	WHT
TDC	P1361	3	C3	GRN
	P1362	7	C13	RED
CYP	P1381	4	C4	YEL
	P1382	8	C14	BLK



(From page 11-110)

Check for a short in the CKP/TDC/CYP sensor:
Check for continuity to body ground on both terminals of the indicated sensor individually (*see table).

Is there continuity?

YES

Replace the distributor ignition housing (see section 23).

NO

Check for an open in the wires (CKP/TDC/CYP lines):
1. Reconnect the distributor 10P connector.
2. Disconnect the ECM/PCM connector C (31P).
3. Measure resistance between the terminals of the indicated sensor on the ECM/PCM connector (*see table).

Is there 350 - 700 Ω?

NO

Repair open in the indicated sensor wires (*see table).

YES

Check for a short in the wires (CKP/TDC/CYP lines):
Check for continuity between body ground and ECM/PCM connector terminals C2, C3 and/or C4 individually.

Is there continuity?


YES

Repair short in the indicated sensor wires (*see table).

NO


Substitute a known-good ECM/PCM, and recheck. If symptom/indication goes away, replace the original ECM/PCM.

DISTRIBUTOR 10P CONNECTOR (C120)

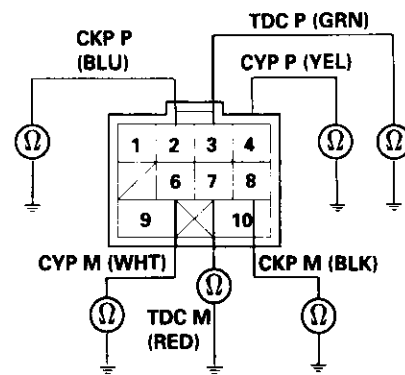


Terminal side of male terminals

ECM/PCM CONNECTORS C (31P)

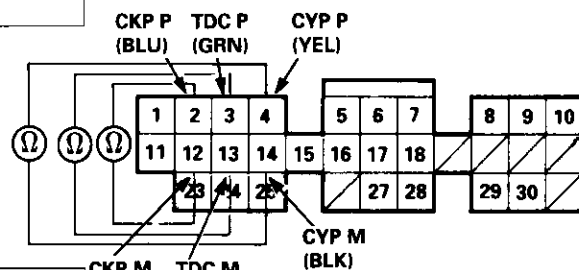

Wire side of female terminals

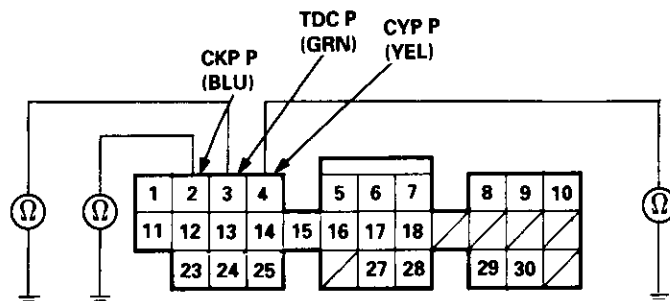

PGM-FI System

Vehicle Speed Sensor (VSS)

P0500 The scan tool indicates Diagnostic Trouble Code (DTC) P0500: A malfunction problem in the Vehicle Speed Sensor (VSS) circuit [except A/T (D16Y7, D16Y8 engine)].

P0501 The scan tool indicates Diagnostic Trouble Code (DTC) P0501: A range/performance problem in the Vehicle Speed Sensor (VSS) circuit [A/T (D16Y7, D16Y8 engine)].

— The MIL has been reported on.
— DTC P0500 or P0501 is stored.

Problem verification:
1. Test-drive the vehicle.
2. Check the vehicle speed with the scan tool.

Is the correct speed indicated?
YES
NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C117 (VSS) and ECM/PCM.

Check for an open in the ECM/PCM:
1. Turn the ignition switch OFF.
2. Block the rear wheels and set the parking brake.
3. Jack up the front of the vehicle and support it with safety stands.
4. Turn the ignition switch ON (II).
5. Block the right front wheel and slowly rotate the left front wheel.
6. Measure voltage between the ECM/PCM connector terminals C18 and A9.

Does the voltage pulse 0 V and 5 V?
YES
NO

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.


Check for a short in the ECM/PCM:
1. Turn the ignition switch OFF.
2. Disconnect the ECM/PCM connector C (31P).
3. Turn the ignition switch ON (II).
4. Block the right front wheel and slowly rotate the left front wheel.
5. Measure voltage between the ECM/PCM connector terminals C18 and A9.

Does the voltage pulse 0 V and 5 V?
YES
NO


Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

— Repair short in the wire between ECM/PCM (C18) and VSS, TCM.
— Repair open in the wire between ECM/PCM (C18) and VSS.
— If wire is OK, test the VSS (see page 23-120).

ECM/PCM CONNECTORS

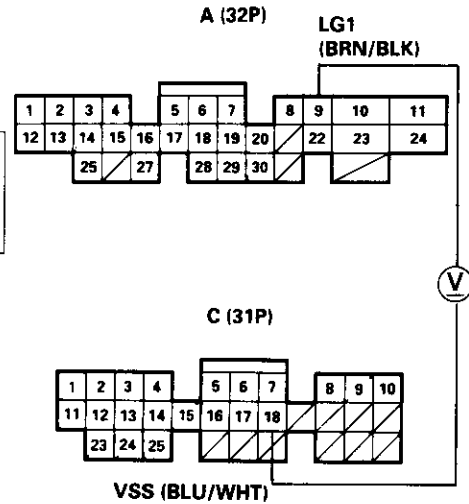

Wire side of female terminals

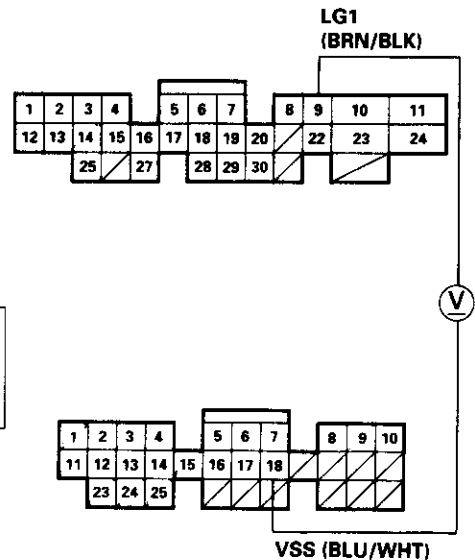



Barometric Pressure (Baro) Sensor

P1106 The scan tool indicates Diagnostic Trouble Code (DTC) P1106: A range/performance problem in the Barometric Pressure (Baro) Sensor circuit.

- The MIL has been reported on.
- DTC P1106 is stored.

Problem verification:

1. Do the ECM/PCM reset procedure.
2. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P** position, M/T in neutral) until the radiator fan comes on, then let it idle.
3. Connect the SCS Service connector.
4. Test-drive with the A/T in **2** position (M/T in 4th gear).
5. Accelerate for five seconds using wide open throttle.

Is DTC P1106 indicated?

NO

Intermittent failure, system is OK at this time.

YES

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.


(cont'd)

PGM-FI System

Barometric Pressure (Baro) Sensor (cont'd)

P1107 The scan tool indicates Diagnostic Trouble Code (DTC) P1107: A low voltage problem in the Baro sensor circuit.


P1108 The scan tool indicates Diagnostic Trouble Code (DTC) P1108: A high voltage problem in the Baro sensor circuit.

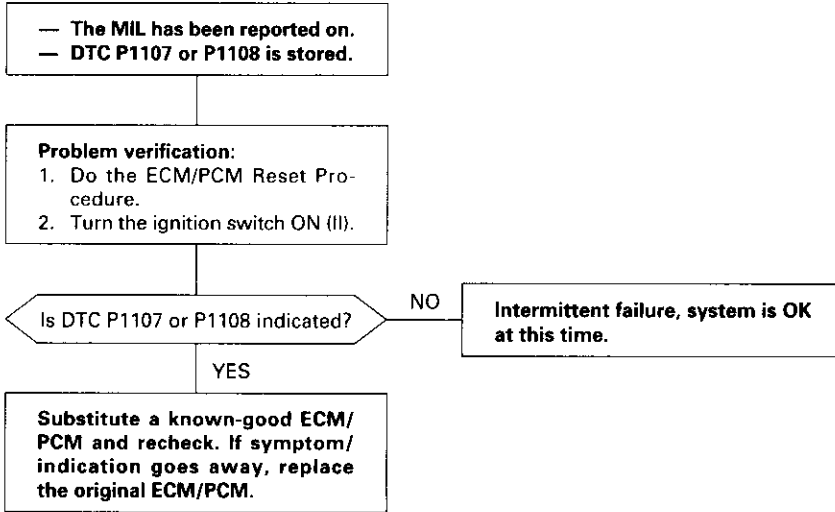




Electrical Load Detector (ELD)


P1297 The scan tool indicates Diagnostic Trouble Code (DTC) P1297: A low voltage problem in the Electrical Load Detector (ELD) circuit.

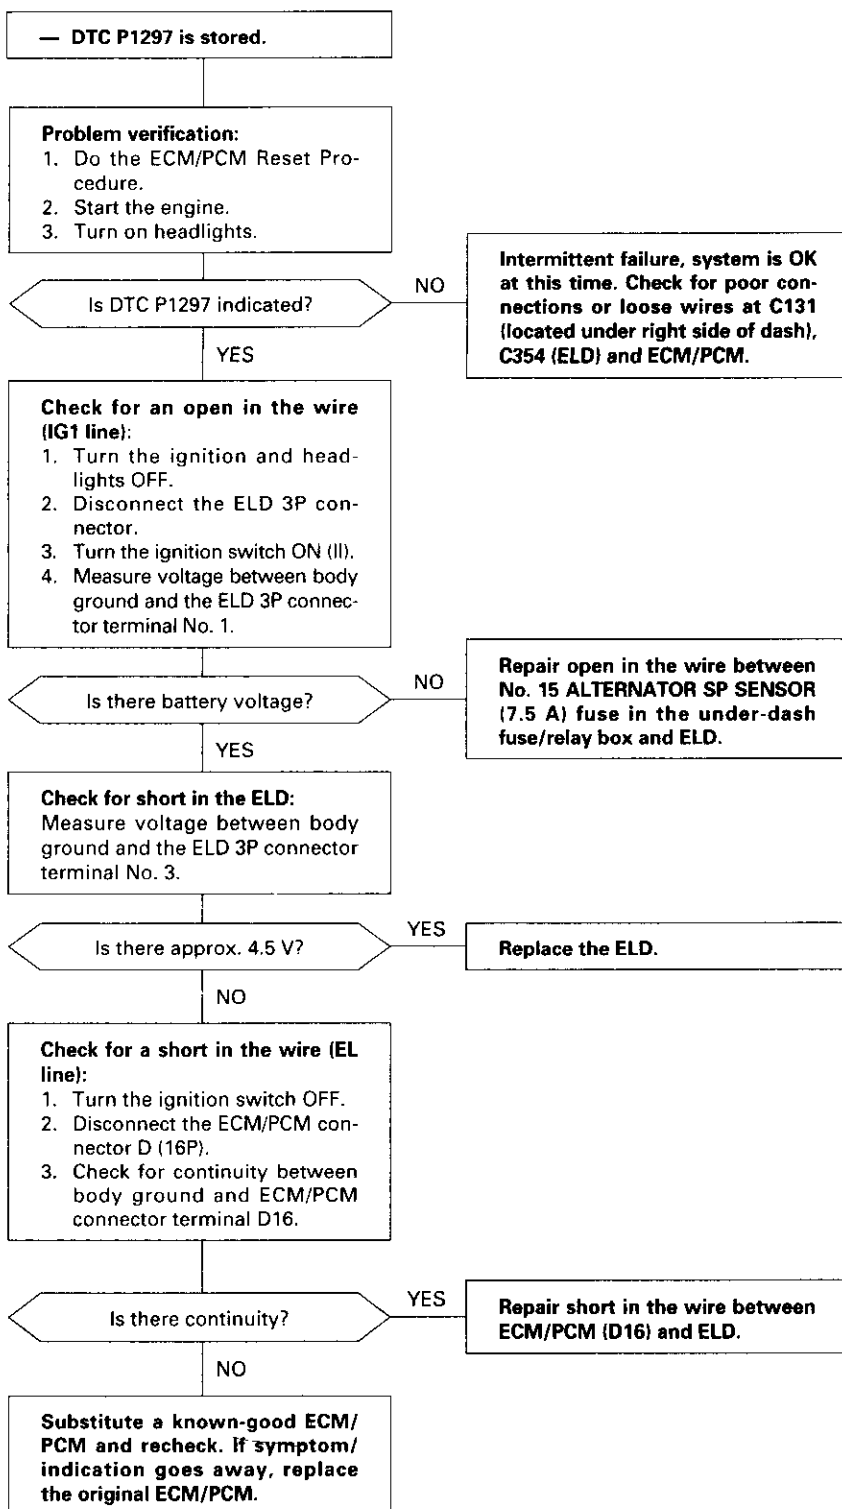


ELD 3P CONNECTOR (C354)

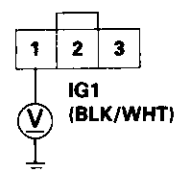

Wire side of female terminals

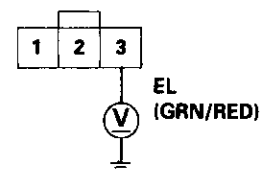

ECM/PCM CONNECTOR D (16P)

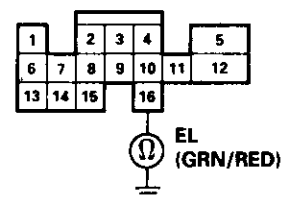

Wire side of female terminals

(cont'd)

PGM-FI System

Electrical Load Detector (ELD) (cont'd)

P1298 The scan tool indicates Diagnostic Trouble Code (DTC) P1298: A high voltage problem in the Electrical Load Detector (ELD) circuit.


— DTC P1298 is stored.

Problem verification:
 1. Do the ECM/PCM Reset Procedure.
 2. Start the engine.
 3. Turn on headlights.

Is DTC P1298 indicated?
 YES
 NO: Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C131 (located under right side of dash), C354 (ELD) and ECM/PCM.

Check for an open in the wire (GND line):
 1. Turn the ignition switch and headlights OFF.
 2. Disconnect the ELD 3P connector.
 3. Check for continuity between body ground and the ELD 3P connector terminal No. 2.


ELD 3P CONNECTOR (C354)

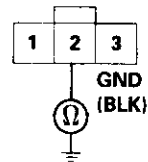


Wire side of female terminals

Is there continuity?
 YES
 NO: Repair open in the wire between ELD connector and G402.

Check for an open in the wire (EL line):
 Check for continuity between the ELD 3P connector terminal No. 3 and ECM/PCM connector terminal D16.

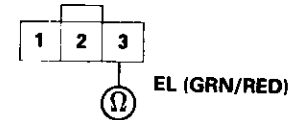


ECM/PCM CONNECTOR D (16P)

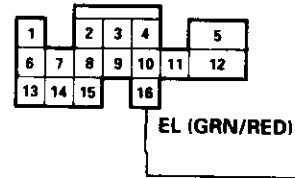

Wire side of female terminals

Is there continuity?
 YES
 NO: Repair open in the wire between ECM/PCM (D16) and the ELD.

Check for a malfunction in the ELD:
 1. Reconnect the ELD 3P connector.
 2. Start the engine and allow it to idle.
 3. While measuring voltage between ECM/PCM connector terminals D16 and A9, turn the headlights on (low).

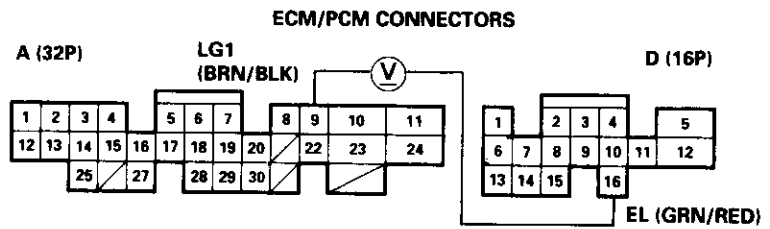

Wire side of female terminals

Does the voltage drop?
 YES
 NO: Replace the ELD.

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.



Crankshaft Speed Fluctuation (CKF) Sensor

P1336 The scan tool indicates Diagnostic Trouble Code (DTC) P1336: Intermittent interruption in the Crankshaft Speed Fluctuation (CKF) sensor circuit.


P1337 The scan tool indicates Diagnostic Trouble Code (DTC) P1337: No signal in the Crankshaft Speed Fluctuation (CKF) sensor circuit.

Description


The diagnostic system has a pulser rotor on the crankshaft and a pulse pick-up sensor on the engine block. The ECM/PCM monitors the crankshaft speed fluctuation based on the CKF sensor signal, and judges that an engine misfire occurred if the fluctuation goes beyond a predetermined limit.




CKF SENSOR

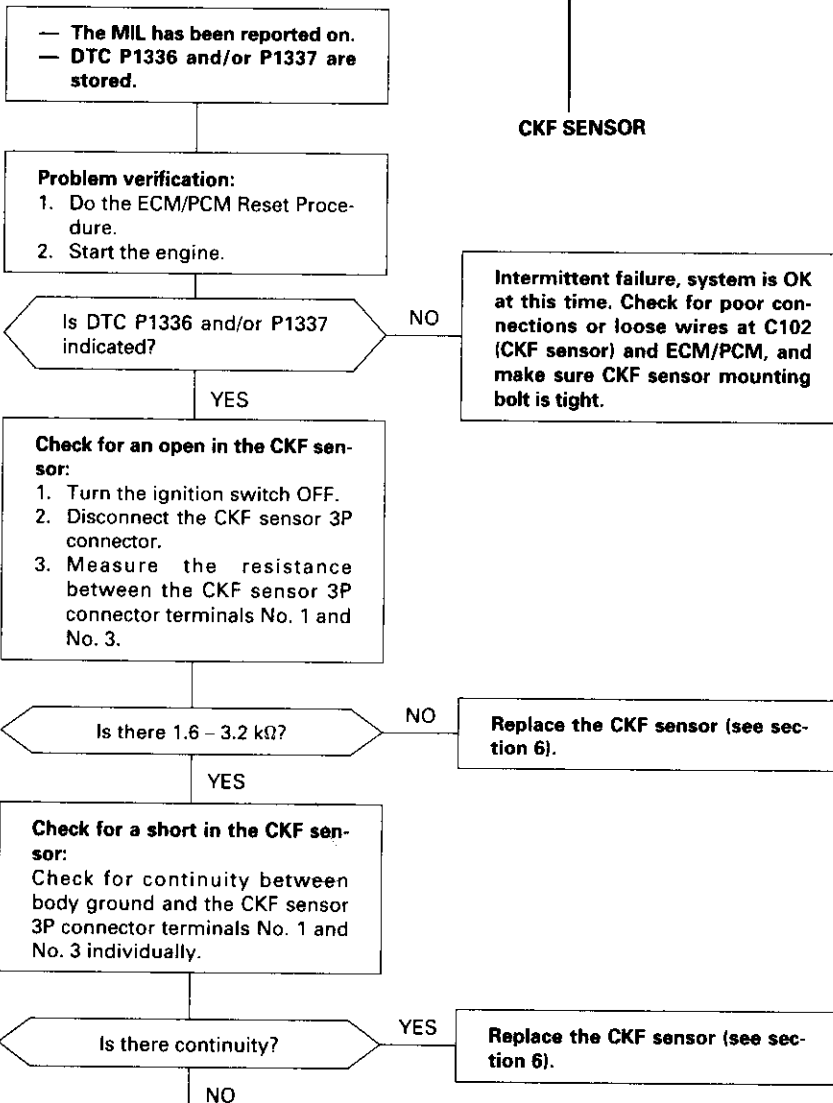

CKF SENSOR 3P CONNECTOR

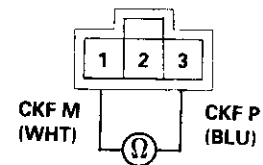

Terminal side of male terminals

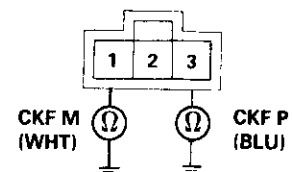

(To page 11-118)

(cont'd)

PGM-FI System

Crankshaft Speed Fluctuation (CKF) Sensor (cont'd)

(From page 11-117)

Check for an open in the wires (CKF lines):

1. Reconnect the CKF sensor 3P connector.
2. Disconnect the ECM/PCM connector C (31P).
3. Measure resistance between ECM/PCM connector terminals C1 and C11.

Is there 1.6 – 3.2 k Ω ?

NO

Repair open in the wire between ECM/PCM (C1, C11) and the CKF sensor.

YES

Check for a short in the wire (CKF line):
Check for continuity between body ground and ECM/PCM connector terminal C1.

Is there continuity?



YES

Repair short in the wire between ECM/PCM (C1) and the CKF sensor.

NO

Substitute a known-good ECM/PCM, and recheck. If symptom/indication goes away, replace the original ECM/PCM.


ECM/PCM CONNECTOR C (31P)

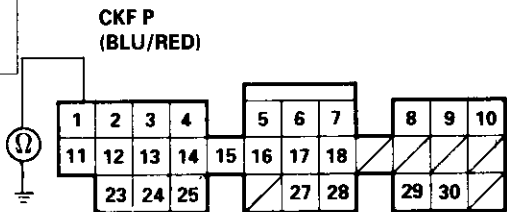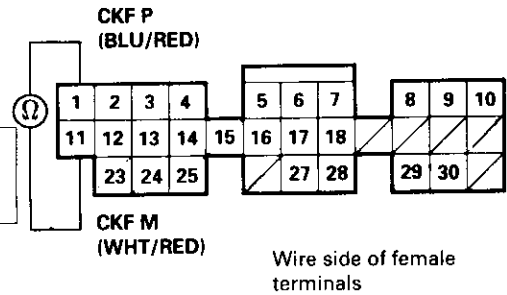



Crankshaft Position/Top Dead Center/Cylinder Position (CKP/TDC/CYP) Sensor

P1359 The scan tool indicates Diagnostic Trouble Code (DTC) P1359: A problem in the Crankshaft Position/Top Dead Center/Cylinder Position (CKP/TDC/CYP) sensor circuit.

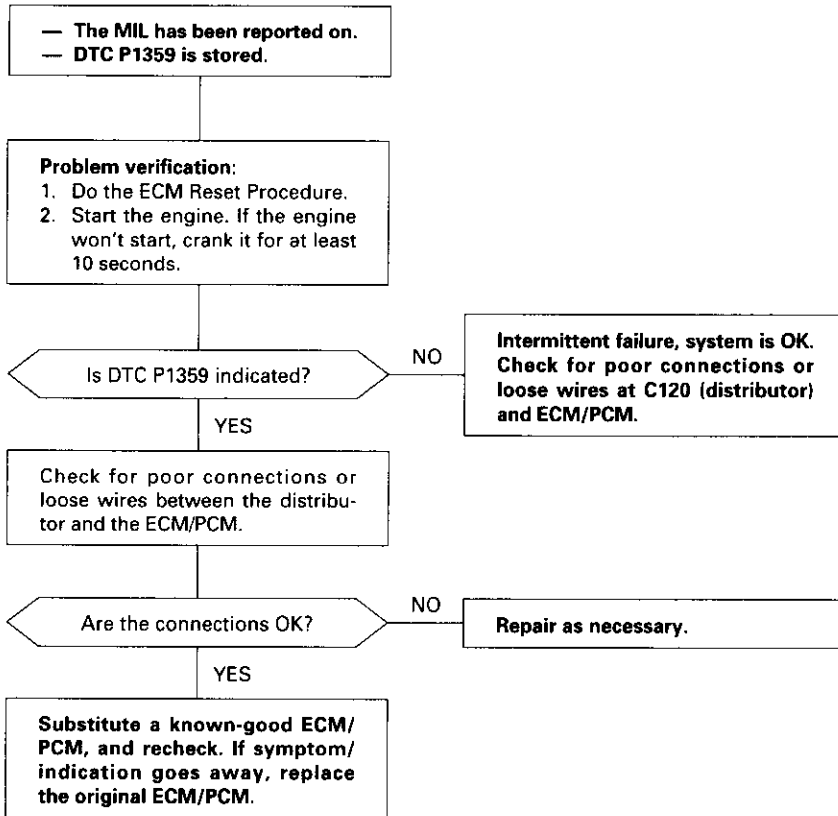

PGM-FI System

ECM/PCM Internal Circuit

P1607 The scan tool indicates Diagnostic Trouble Code (DTC) P1607: An ECM/PCM Internal Circuit Problem.

- The MIL has been reported on.
- DTC P1607 is stored.

Problem verification:

1. Do the ECM/PCM Reset Procedure.
2. Turn the ignition switch ON (II).
3. Wait 10 seconds.

Is DTC P1607 indicated?

NO

Intermittent failure, system is OK this time.

YES

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.



A/T Signal (TMA/TMB) (D16Y5 engine (CVT))

P1655 The scan tool indicates Diagnostic Trouble Code (DTC) P1681: TMA/TMB signal line failure.

— DTC P1655 is stored.

Problem verification:
1. Do the ECM Reset Procedure.
2. Drive the vehicle for several miles at varying speeds.

Is DTC P1655 indicated?

NO
Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C131 (located under right side of dash), C438 (TCM) and ECM.

Check for an open in the wire (TMA line):
1. Turn the ignition switch OFF.
2. Disconnect ECM connector C (31P) from the ECM.
3. Turn the ignition switch ON (II).
4. Measure voltage between ECM connector terminal C9 and body ground.

Is there battery voltage?

NO
Check for a short in the wire (TMA line): Measure voltage between TCM 22P connector terminal No. 7 and body ground.

Check for an open in the wire (TMB line):
1. Turn the ignition switch OFF.
2. Reconnect ECM connector C (31P).
3. Disconnect the 22P connector from TCM.
4. Turn the ignition switch ON (II).
5. Measure voltage between TCM 22P connector terminal No. 6 and body ground.

Is there battery voltage?

NO
Check for a short in the wire (TMB line): Measure voltage between ECM connector terminal C30 and body ground.

Substitute a known-good ECM and recheck. If symptom/indication goes away, replace the original ECM.

YES





YES
Repair open in the wire between the ECM (C9) and the TCM.

Is there battery voltage?

NO
Repair short in the wire between the ECM (C30) and the TCM.

YES

YES
Repair open in the wire between the ECM (C30) and the TCM.

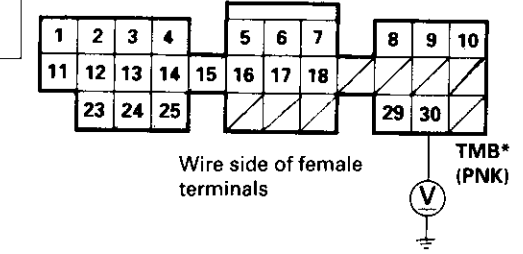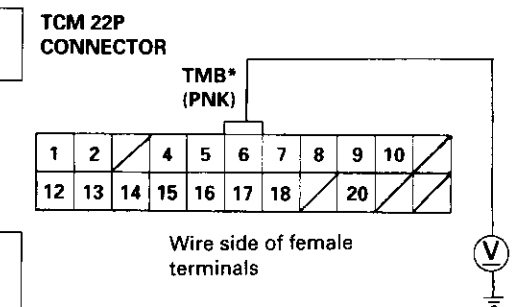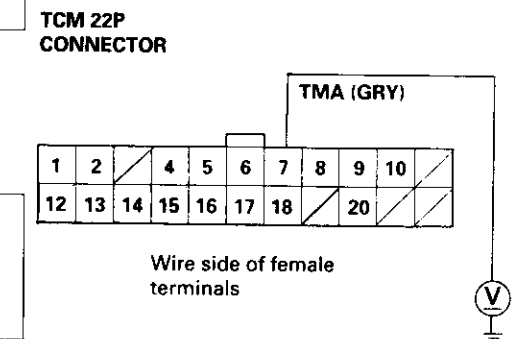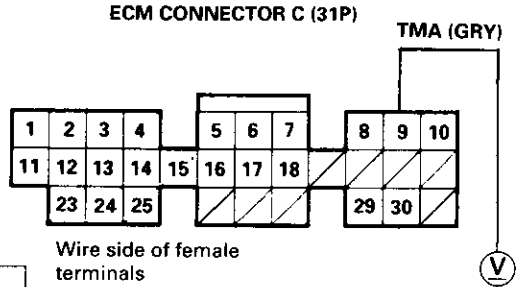


Idle Control System


System Description

The idle speed of the engine is controlled by the Idle Air Control (IAC) Valve. The valve changes the amount of air bypassing into the intake manifold in response to electric current controlled by the ECM/PCM. When the IAC Valve is activated, the valve opens to maintain the proper idle speed.


D16Y5, D16Y8 engine (M/T):

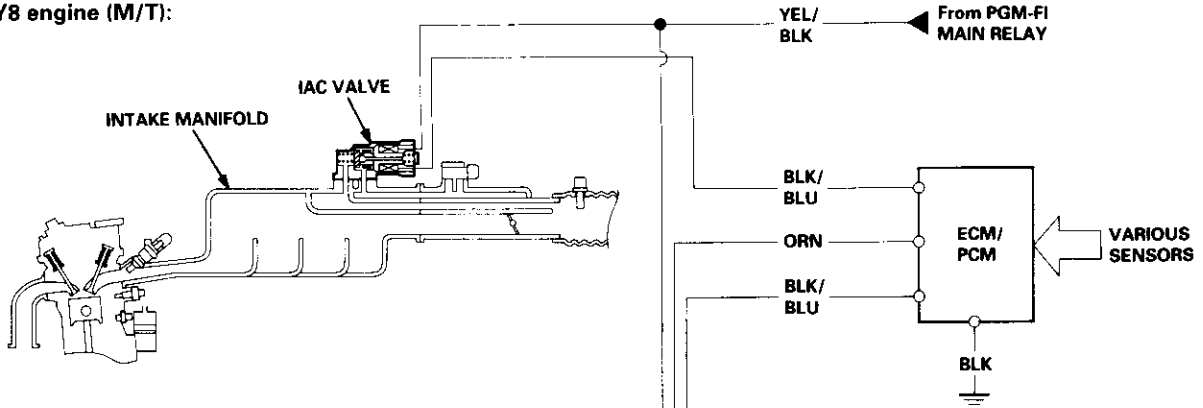

D16Y5 (CVT), D16Y8 engine (A/T):

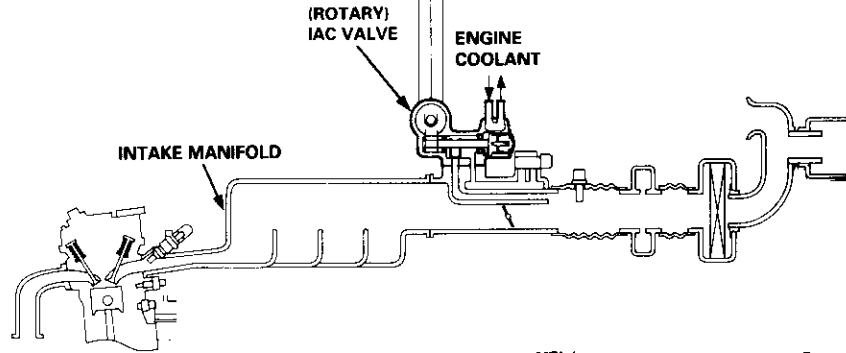


D16Y7 engine:

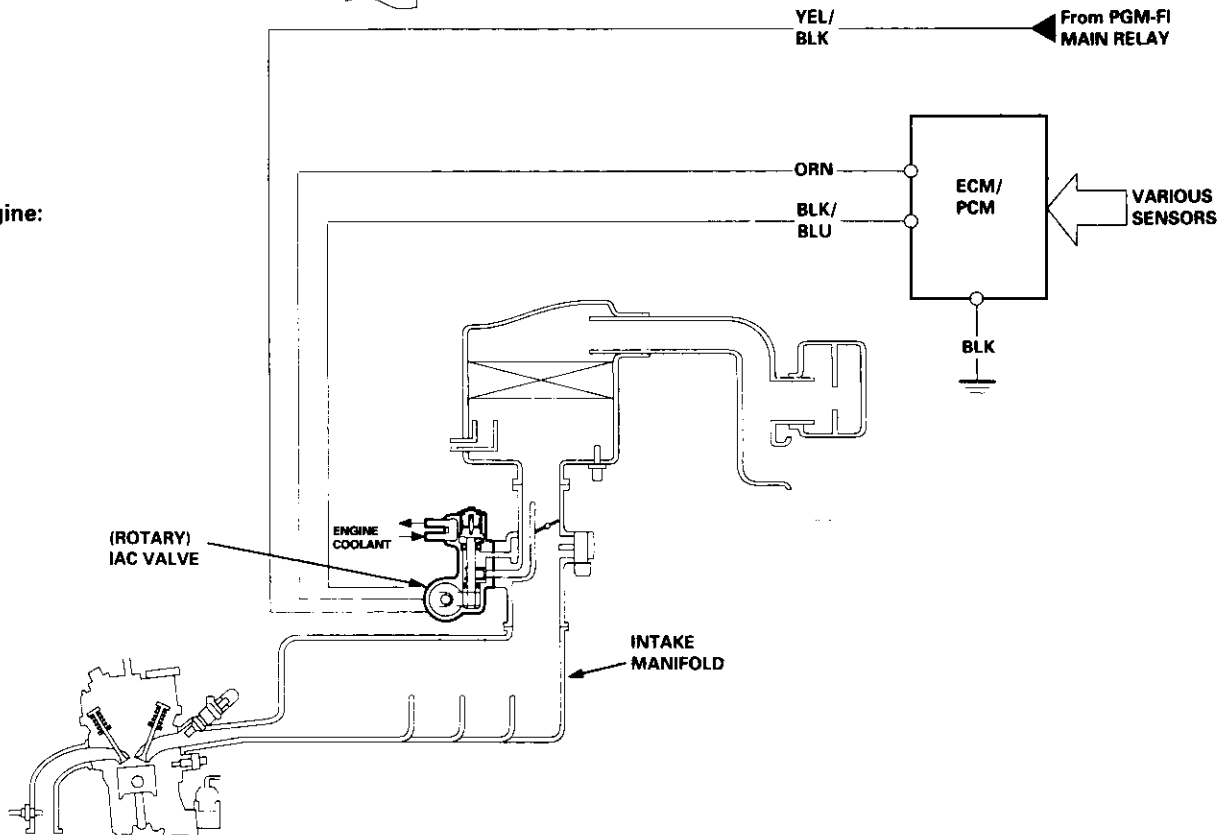



1. After the engine starts, the IAC valve opens for a certain time. The amount of air is increased to raise the idle speed about 150 – 300 rpm.
2. When the coolant temperature is low, the IAC valve is opened to obtain the proper fast idle speed. The amount of bypassed air is thus controlled in relation to the engine coolant temperature.

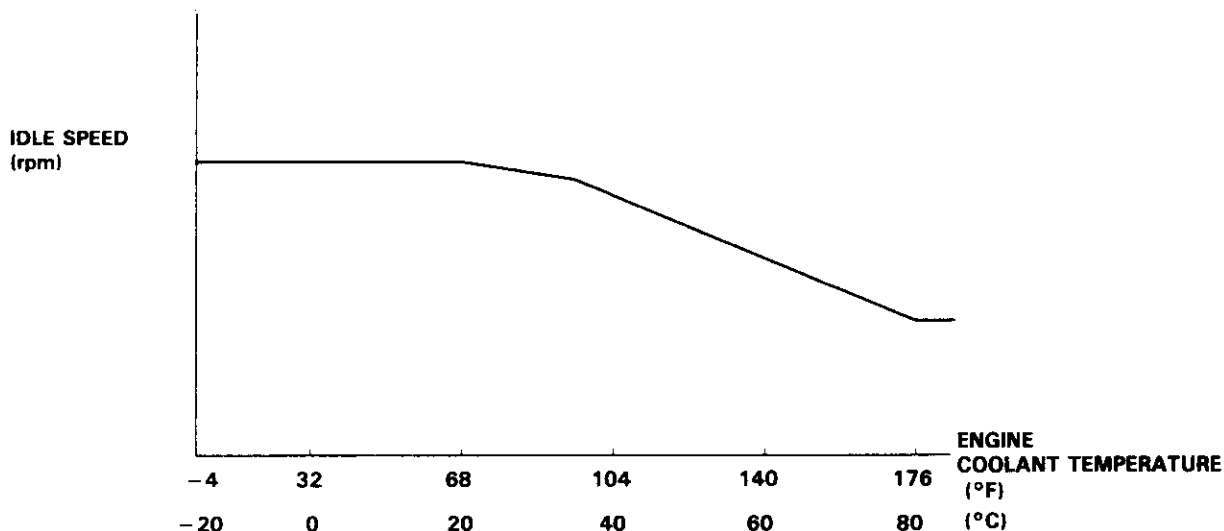

1. When the idle speed is out of specification and the scan tool does not indicate Diagnostic Trouble Code (DTC) P0505 or P1508, check the following items:
 - Adjust the idle speed (see page 11-141)
 - Starter switch signal (see page 11-130)
 - Air conditioning signal (see page 11-131)
 - ALT FR signal (see page 11-133)
 - Brake switch signal (see page 11-134)
 - PSP switch signal (except Canada model) (see page 11-135)
 - A/T gear position signal (see section 14, D16Y5 engine (CVT): page 11-137)
 - Clutch switch signal (D16Y5 engine (M/T)) (see page 11-139)
 - Hoses and connections
 - IAC valve and its mounting O-rings
2. If the above items are normal, substitute a known-good IAC valve and readjust the idle speed (see page 11-141).

If the idle speed still cannot be adjusted to specification (and the scan tool does not indicate DTC P0505 or P1508) after IAC valve replacement, substitute a known-good ECM/PCM and recheck. If symptom goes away, replace the original ECM/PCM.

Idle Control System

Idle Control System


P0505 The scan tool indicates Diagnostic Trouble Code (DTC) P0505: Idle control system malfunction.

NOTE: If DTC P1508 or P1509 is stored at the same time as DTC P0505, troubleshoot DTC P1508 or P1509 first, then troubleshoot DTC P0505.

Possible Cause

- IAC valve mechanical malfunction
- Throttle body clogged port, improper adjustment
- Intake manifold gasket leakage
- Intake air hose loose leakage
- Vacuum leak
- ECT sensor incorrect output
- Throttle Position sensor incorrect output*1

Troubleshooting Flowchart

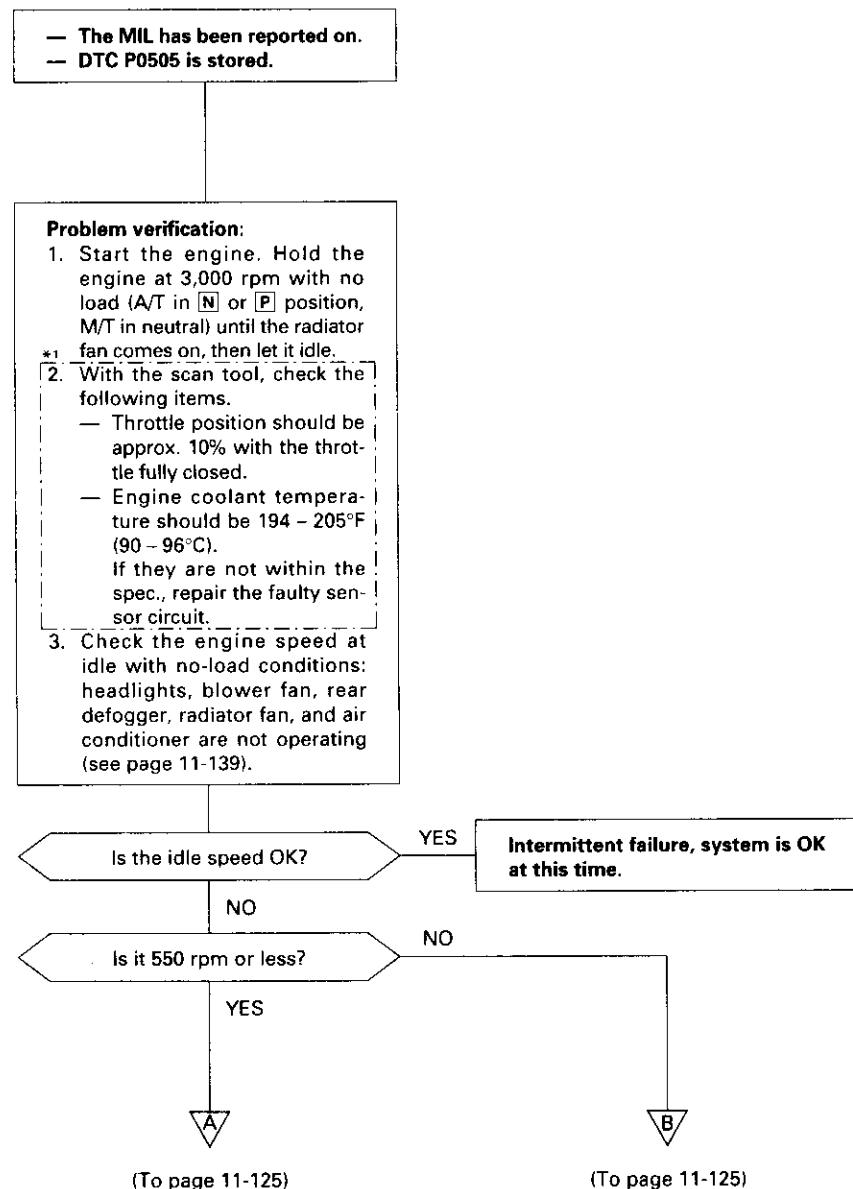


*1: '96 model only




(From page 11-124)



(A/T and D16Y7 engine)

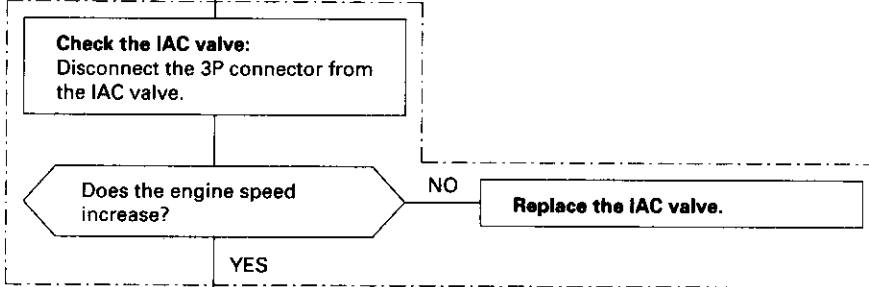


(D16Y5, D16Y8 engine with M/T)

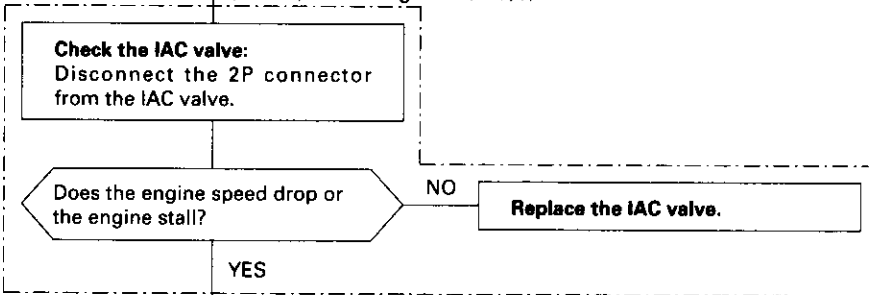


Adjust the (base) idle speed (see page 11-139). If it's impossible, clean the ports in the throttle body.


D16Y5, D16Y8 engine:

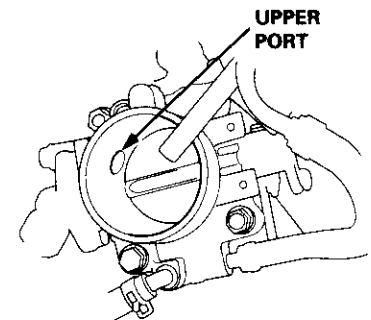

(From page 11-124)

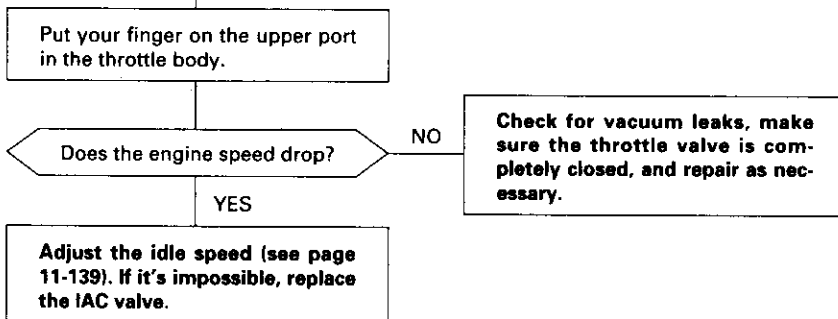

D16Y7 engine:

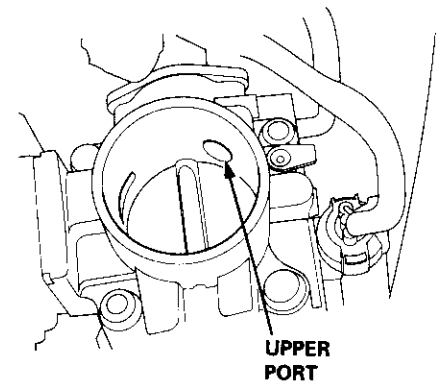


Idle Control System

Idle Air Control (IAC) Valve (D16Y5, D16Y8 engine with M/T)

P1508 The scan tool indicates Diagnostic Trouble Code (DTC) P1508: A problem in the Idle Air Control (IAC) valve circuit.

The IAC Valve changes the amount of air bypassing the throttle body in response to a current signal from the ECM in order to maintain the proper idle speed.

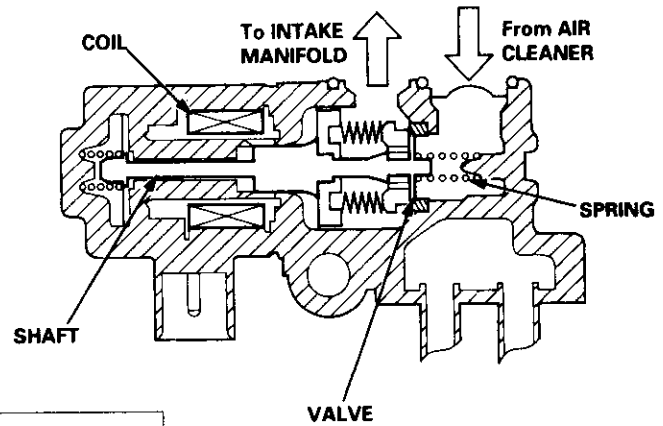

— The MIL has been reported on.
— DTC P1508 is stored.

Problem verification:
1. Do the ECM/PCM Reset Procedure.
2. Start the engine, and warm it up to normal operating temperature.

Is DTC P1508 indicated?
NO: Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C138 (IAC valve) and ECM.
YES: Proceed to the next step.


Check for an open in the wire (IGP1 line):
1. Turn the ignition switch OFF.
2. Disconnect the IAC valve 2P connector.
3. Turn the ignition switch ON (II).
4. Measure voltage between body ground and the IAC valve 2P connector terminal No. 2.

Is there battery voltage?
NO: Repair open in the wire between IAC valve and PGM-FI main relay.
YES: Proceed to the next step.

Check for an open or short in the wire (IACV line):
1. Turn the ignition switch OFF and reconnect the IAC valve connector.
2. Disconnect the ECM connector A (32P).
3. Turn the ignition switch ON (II).
4. Measure voltage between body ground and ECM connector terminal A12.


(To page 11-127)

IAC VALVE 2P CONNECTOR (C138)

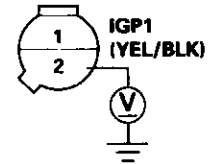

Wire side of female terminals


ECM CONNECTOR A (32P)

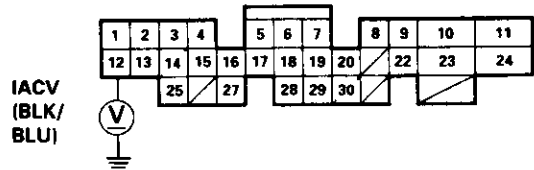


Wire side of female terminals



(From page 11-126)

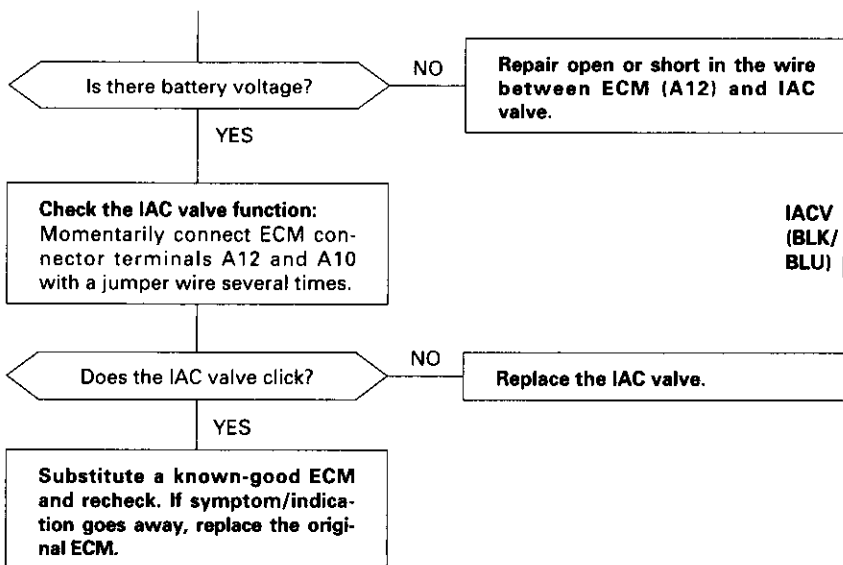

ECM CONNECTOR A (32P)

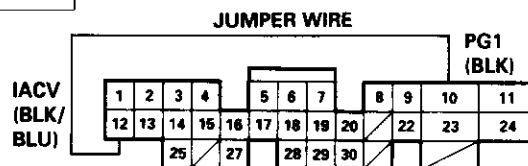


Wire side of female terminals

Idle Control System

Idle Air Control (IAC) Valve (A/T and D16Y7 engine)

P1509 The scan tool indicates Diagnostic Trouble Code (DTC) P1509: A problem in the idle Air Control (IAC) valve circuit.

The (Rotary) IAC Valve changes the amount of air bypassing the throttle body in response to a current signal from the ECM/PCM in order to maintain the proper idle speed.

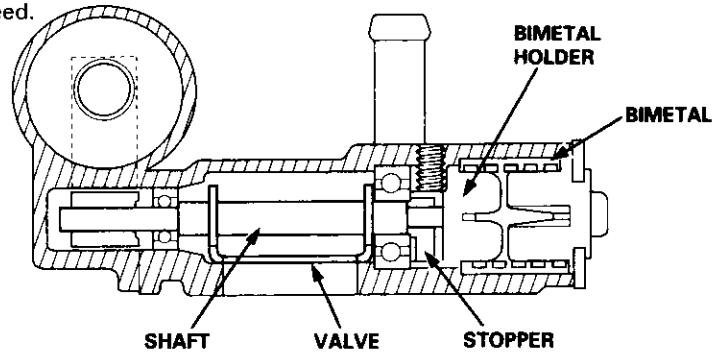

— The MIL has been reported on.
— DTC P1509 is stored.

Problem verification:
1. Do the ECM/PCM Reset Procedure.
2. Turn the ignition switch ON (II).

Is DTC P1509 indicated?
YES

NO
Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C109 (IAC valve) and ECM/PCM.

Check for an open in the wires (PG lines):
Measure voltage between body ground and ECM/PCM connector terminals A10 and A23 individually.

Is there more than 1.0 V?
YES

NO
Repair open in the wires between ECM/PCM and G101 (located at the thermostat housing.)

Check the ECM/PCM input voltage:
1. Turn the ignition switch OFF.
2. Disconnect ECM/PCM connector A (32P) from the ECM/PCM.
3. Turn the ignition switch ON (II).
4. Measure voltage between body ground and ECM/PCM connector terminals A14 and A13* individually.

Is there battery voltage?
NO

YES
A (To page 11-129)


Check the IAC valve:
1. Turn the ignition switch OFF.
2. Disconnect the IAC valve 3P connector.
3. Measure resistance between IAC valve 3P connector terminal No. 2 and terminals No. 1 and 3 individually.

Is there 16 - 28 Ω?
NO


YES
Replace the IAC valve.

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.


ECM/PCM CONNECTOR A (32P)

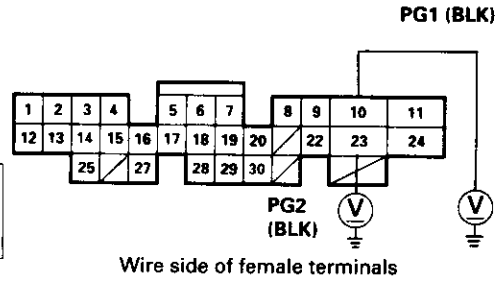

Wire side of female terminals

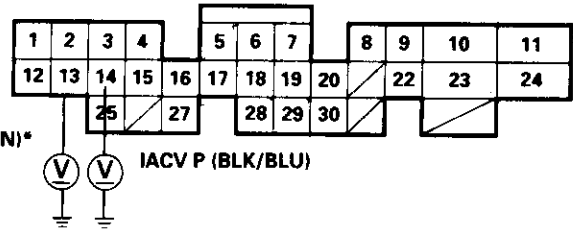

IAC VALVE 3P CONNECTOR

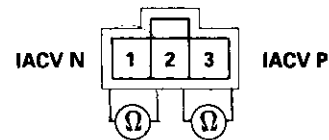

IGP
Terminal side of male terminals

*: IACV N line




(From page 11-128)



Check for an open in the wire (IGP line):

1. Turn the ignition switch OFF.
2. Disconnect the IAC valve 3P connector.
3. Turn the ignition switch ON (II).
4. At the wire harness, measure voltage between IAC valve 3P connector terminal No. 2 and body ground.

IAC VALVE 3P CONNECTOR (C109)

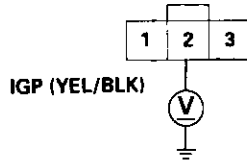

Wire side of female terminals

Is there battery voltage?

NO → **Repair open in the wire between the IAC valve and PGM-FI main relay.**


YES

Check for an open in the wires (IACV P, IACV N* lines):

1. Turn the ignition switch OFF.
2. Disconnect the ECM/PCM connector A (32P).
3. Check for continuity between IAC valve 3P connector terminal No. 3 and ECM/PCM connector terminal A14 (and between IAC valve 3P connector terminal No. 1 and ECM/PCM connector terminal A13)*.

Is there continuity?

NO → **Repair open in the wire between the IAC valve and ECM or PCM (A14, A13*).**

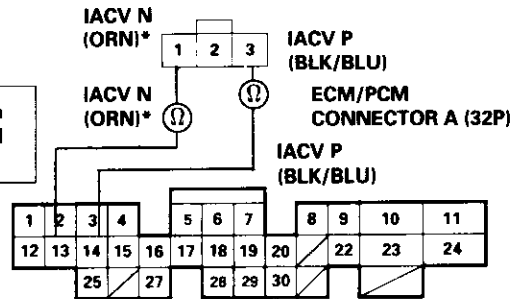

Wire side of female terminals

YES

Check for a short in the wires (IACV P, IACV N* lines):


Check for continuity between body ground and ECM/PCM connector terminals A14 and A13* individually.

Is there continuity?

YES → **Repair short in the wire between the IAC valve and ECM/PCM (A14, A13*).**

NO

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

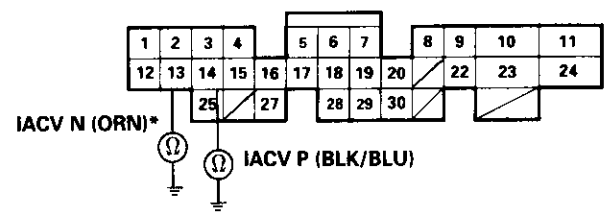

*: IACV N line

Idle Control System

Starter Switch Signal



This signals the ECM/PCM when the engine is cranking.

Inspection of Starter Switch Signal.

NOTE:

- A/T: Transmission in **N** or **P** position.
- M/T: in neutral

Check for an open or short in the wire (STS line):
Measure voltage between ECM/PCM connector terminals A9 and C6 with the ignition switch in the start (III) position.

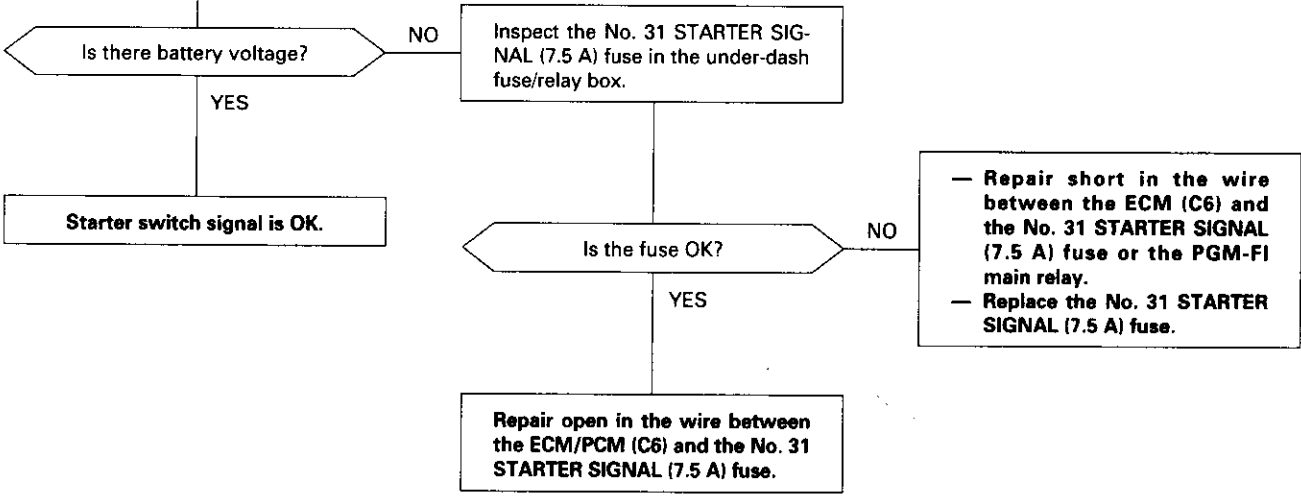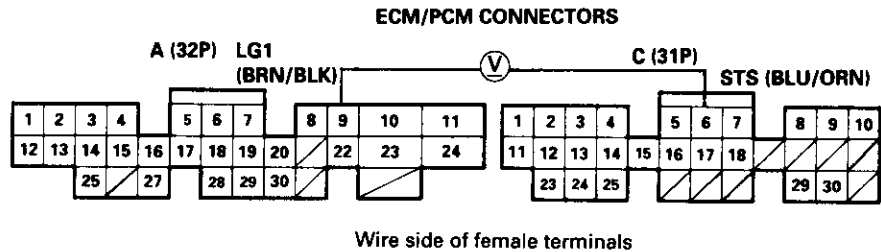




Air Conditioning Signal

This signals the ECM/PCM when there is a demand for cooling from the air conditioning system.

Inspection of Air Conditioning Signal.

Check for a short in the wire (ACS line):

1. Turn the ignition switch OFF.
2. Disconnect the A/C pressure switch 2P connector (see section 22).
3. Turn the ignition switch ON (II).
4. Measure voltage between ECM/PCM connector terminals C5 and A9.

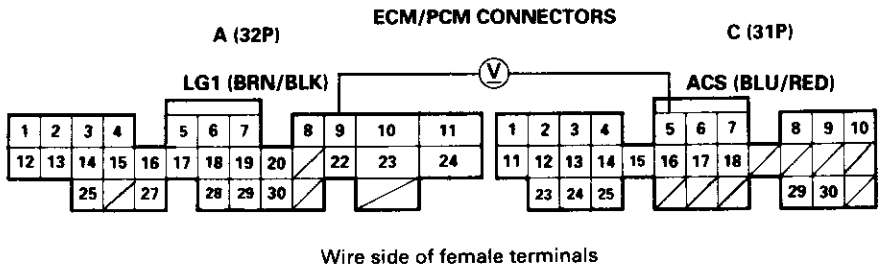


Is there approx. 5 V?

YES

NO

Check for a short in the wire (ACS line):

1. Turn the ignition switch OFF.
2. Disconnect the ECM/PCM connector C (31P).
3. Check for continuity between body ground and ECM/PCM connector terminal C5.

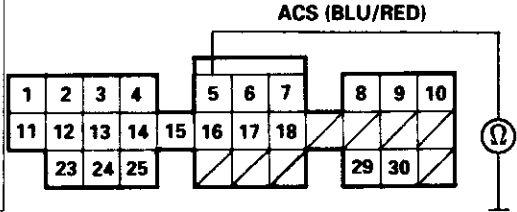

Is there continuity?

YES


Repair short in the wire between the ECM/PCM (C5) and the A/C pressure switch.

NO

Check for an open in the wire (ACC line):

1. Turn the ignition switch OFF.
2. Reconnect the A/C pressure switch 2P connector.
3. Turn the ignition switch ON (II).
4. Momentarily connect ECM/PCM connector terminals A9 and A17 with a jumper wire several times.

- Substitute a known-good ECM/PCM and recheck. If prescribed voltage is now available, replace the original ECM/PCM.
- See the air conditioner inspection (see section 22).

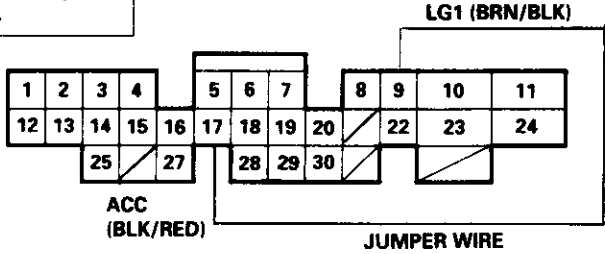


(To page 11-132)

(cont'd)

Idle Control System

Air Conditioning Signal (cont'd)


(From page 11-131)

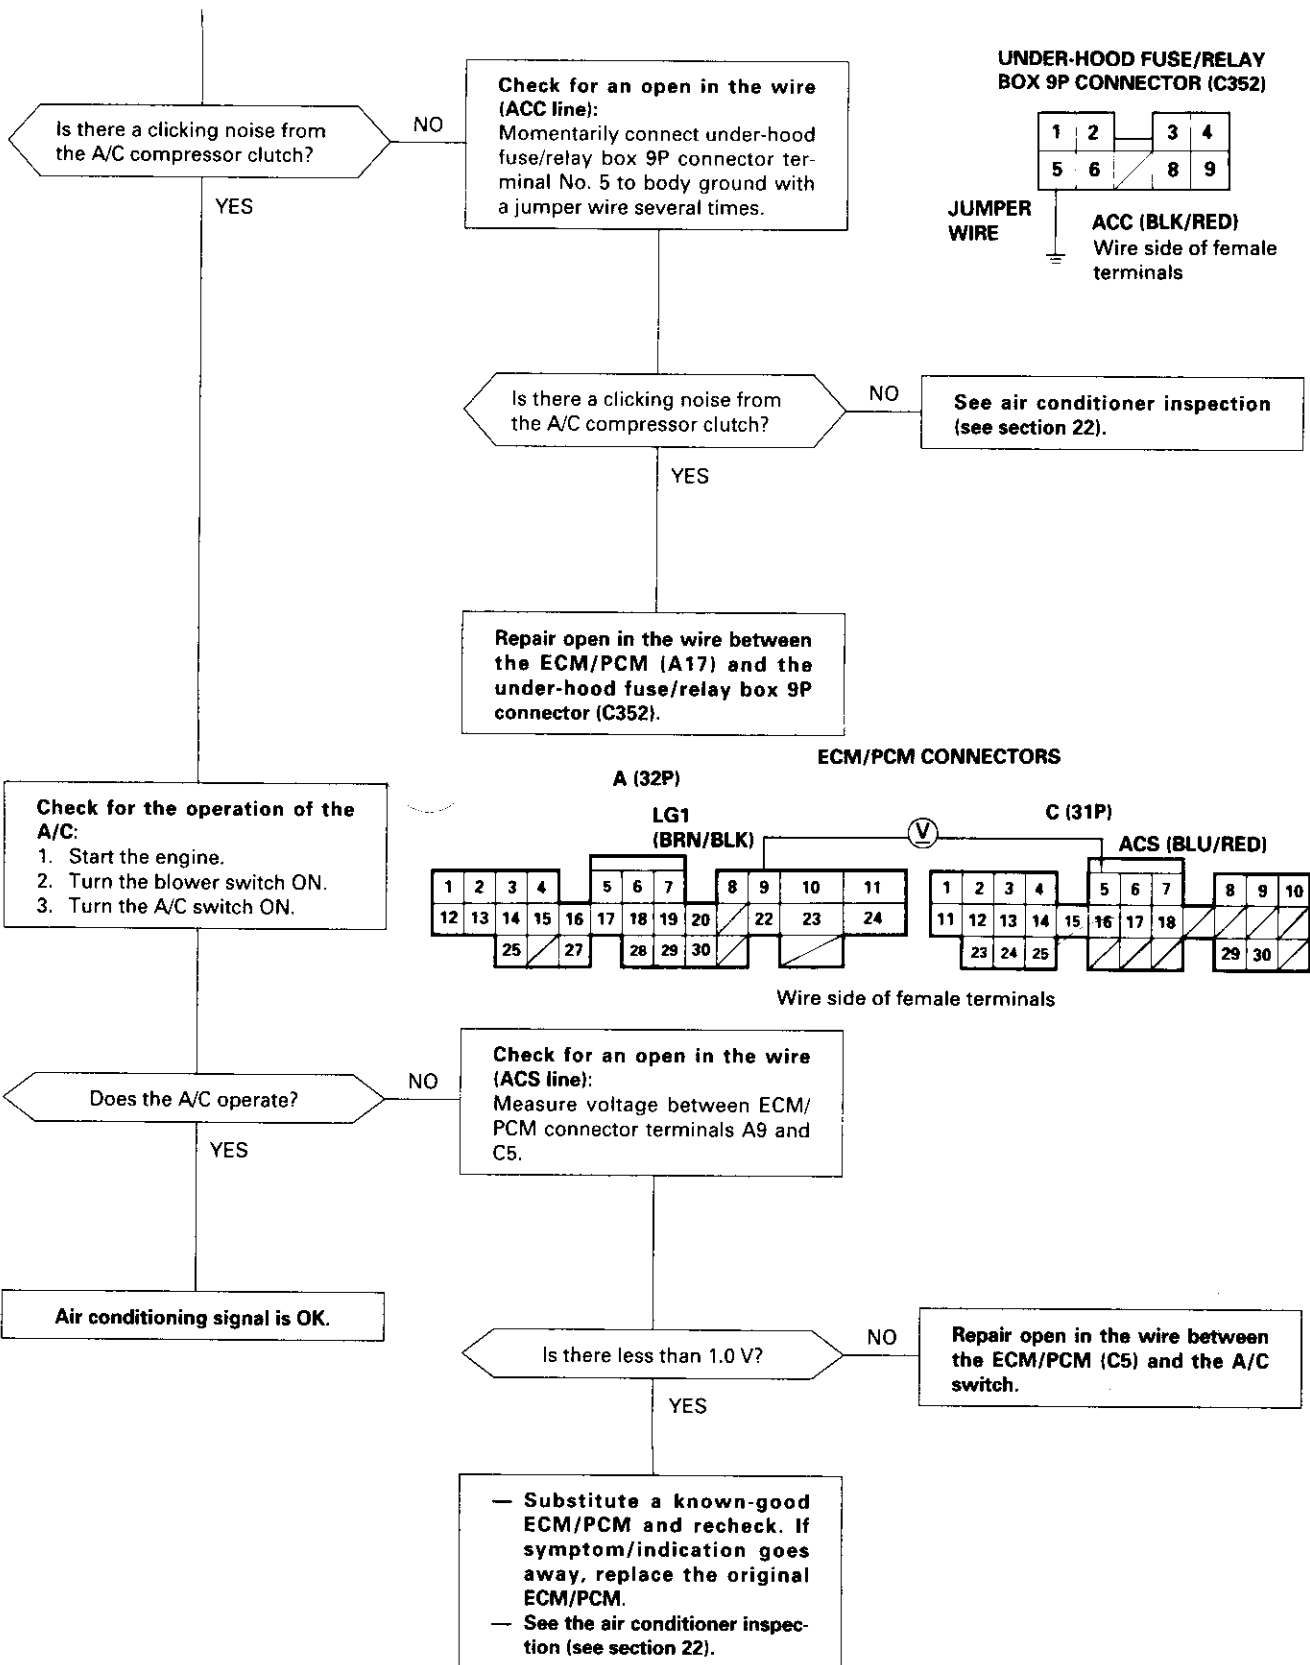



Alternator (ALT) FR Signal

This signals the ECM/PCM when the Alternator (ALT) is charging.

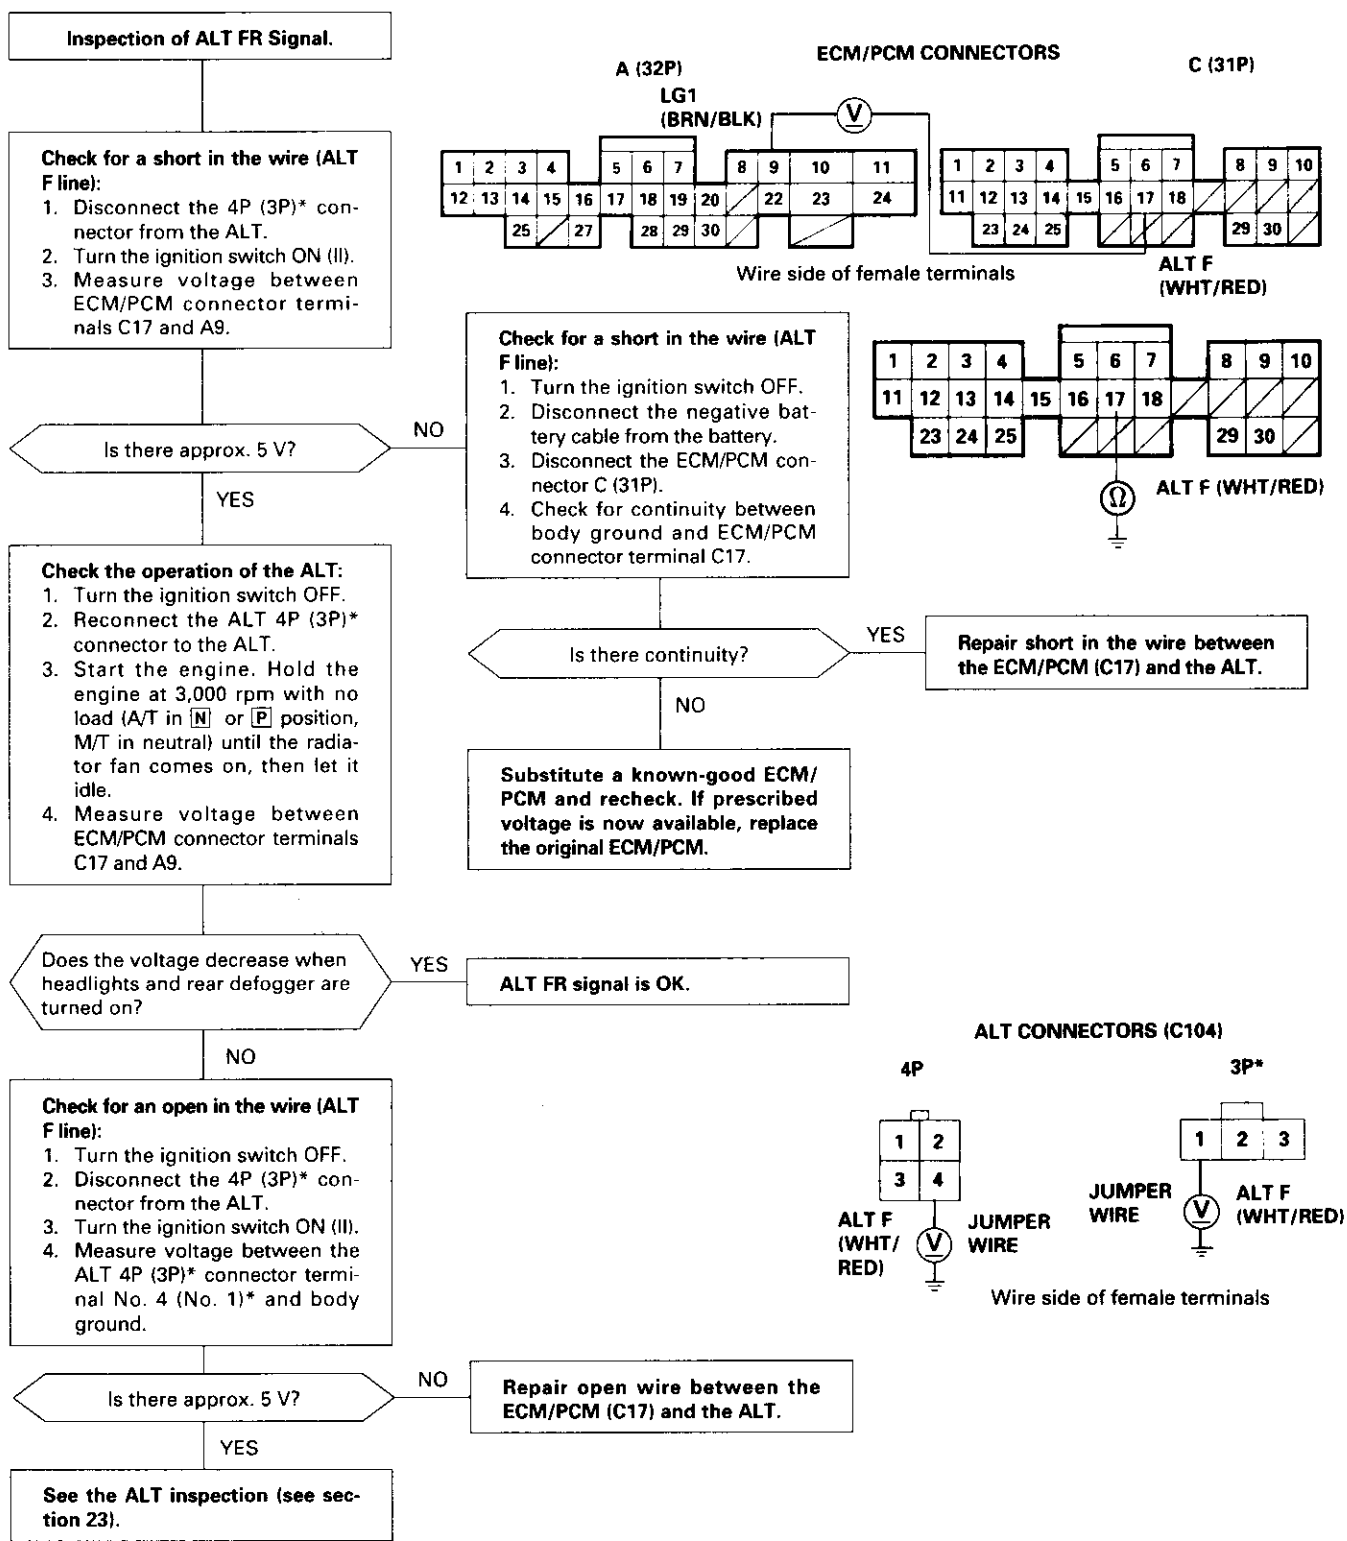


*: Canada model

Idle Control System

Brake Switch Signal


This signals the ECM/PCM when the brake pedal is depressed.

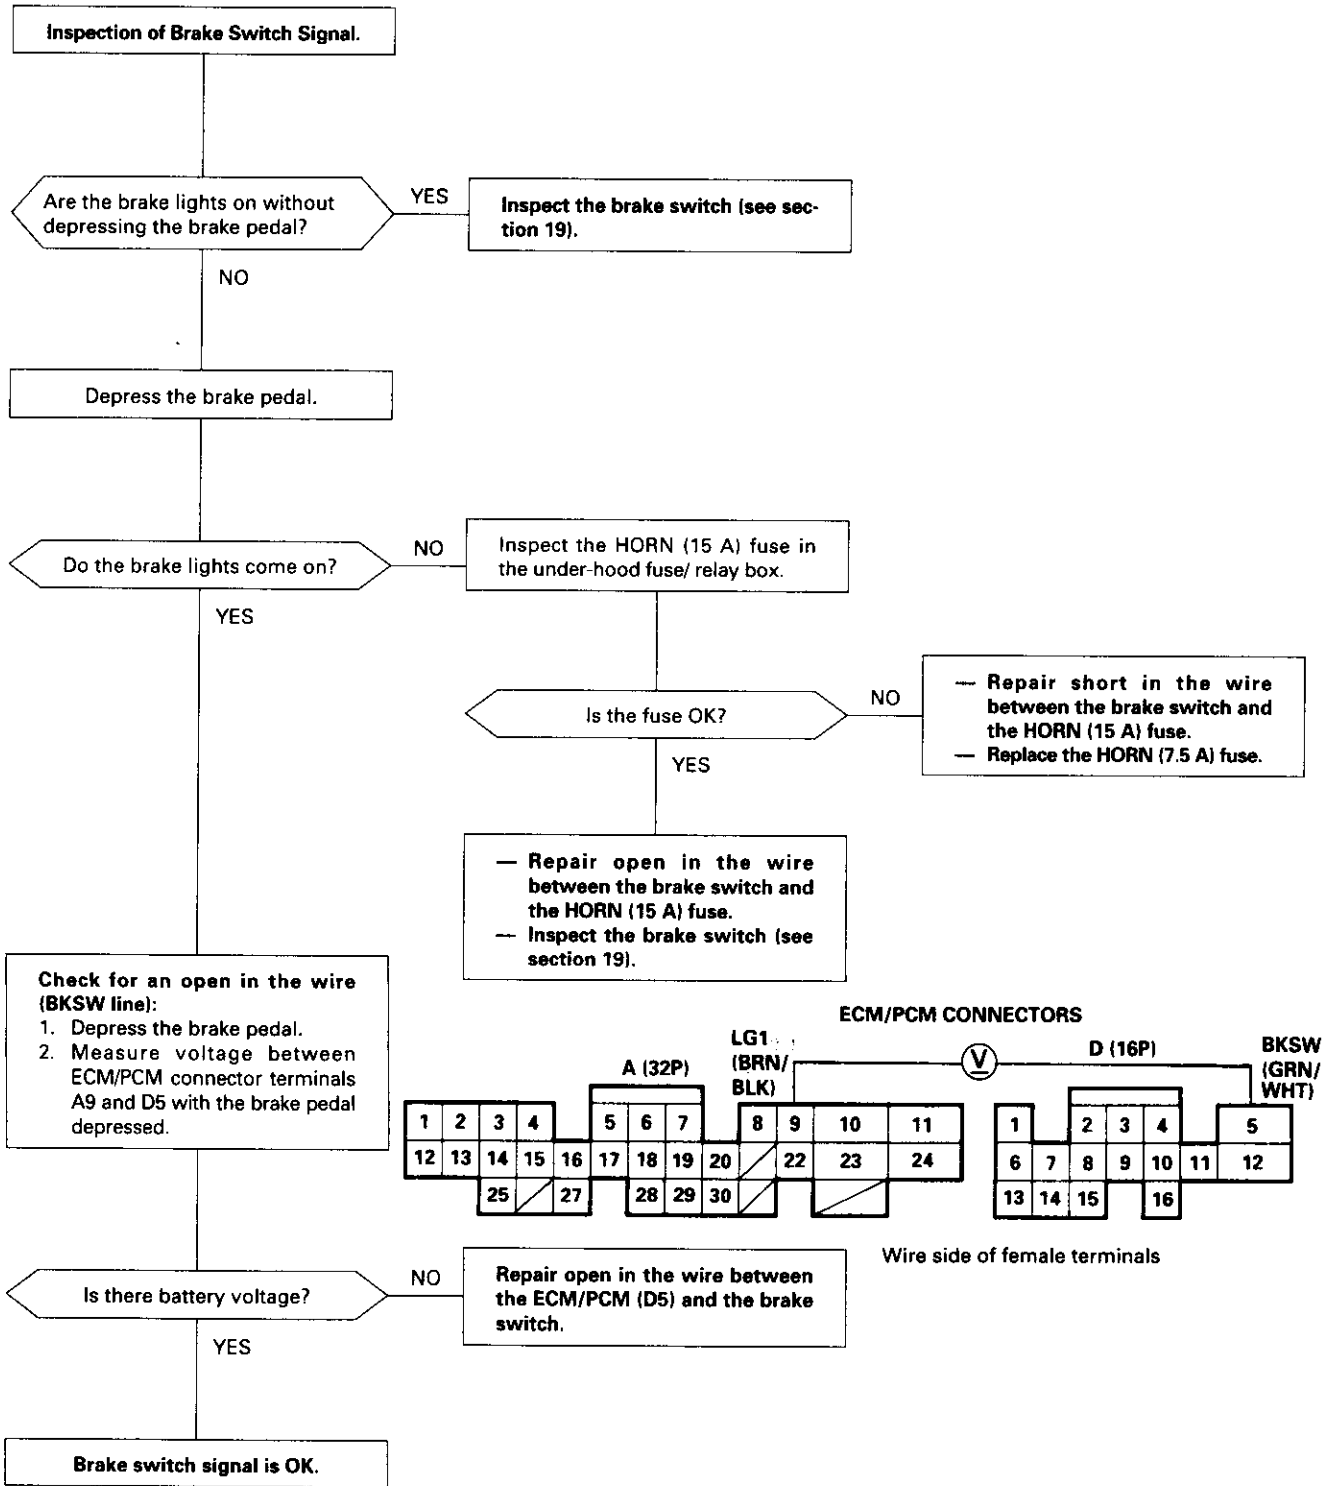



Power Steering Pressure (PSP) Switch Signal (USA)

This signals the ECM/ PCM when the power steering load is high.

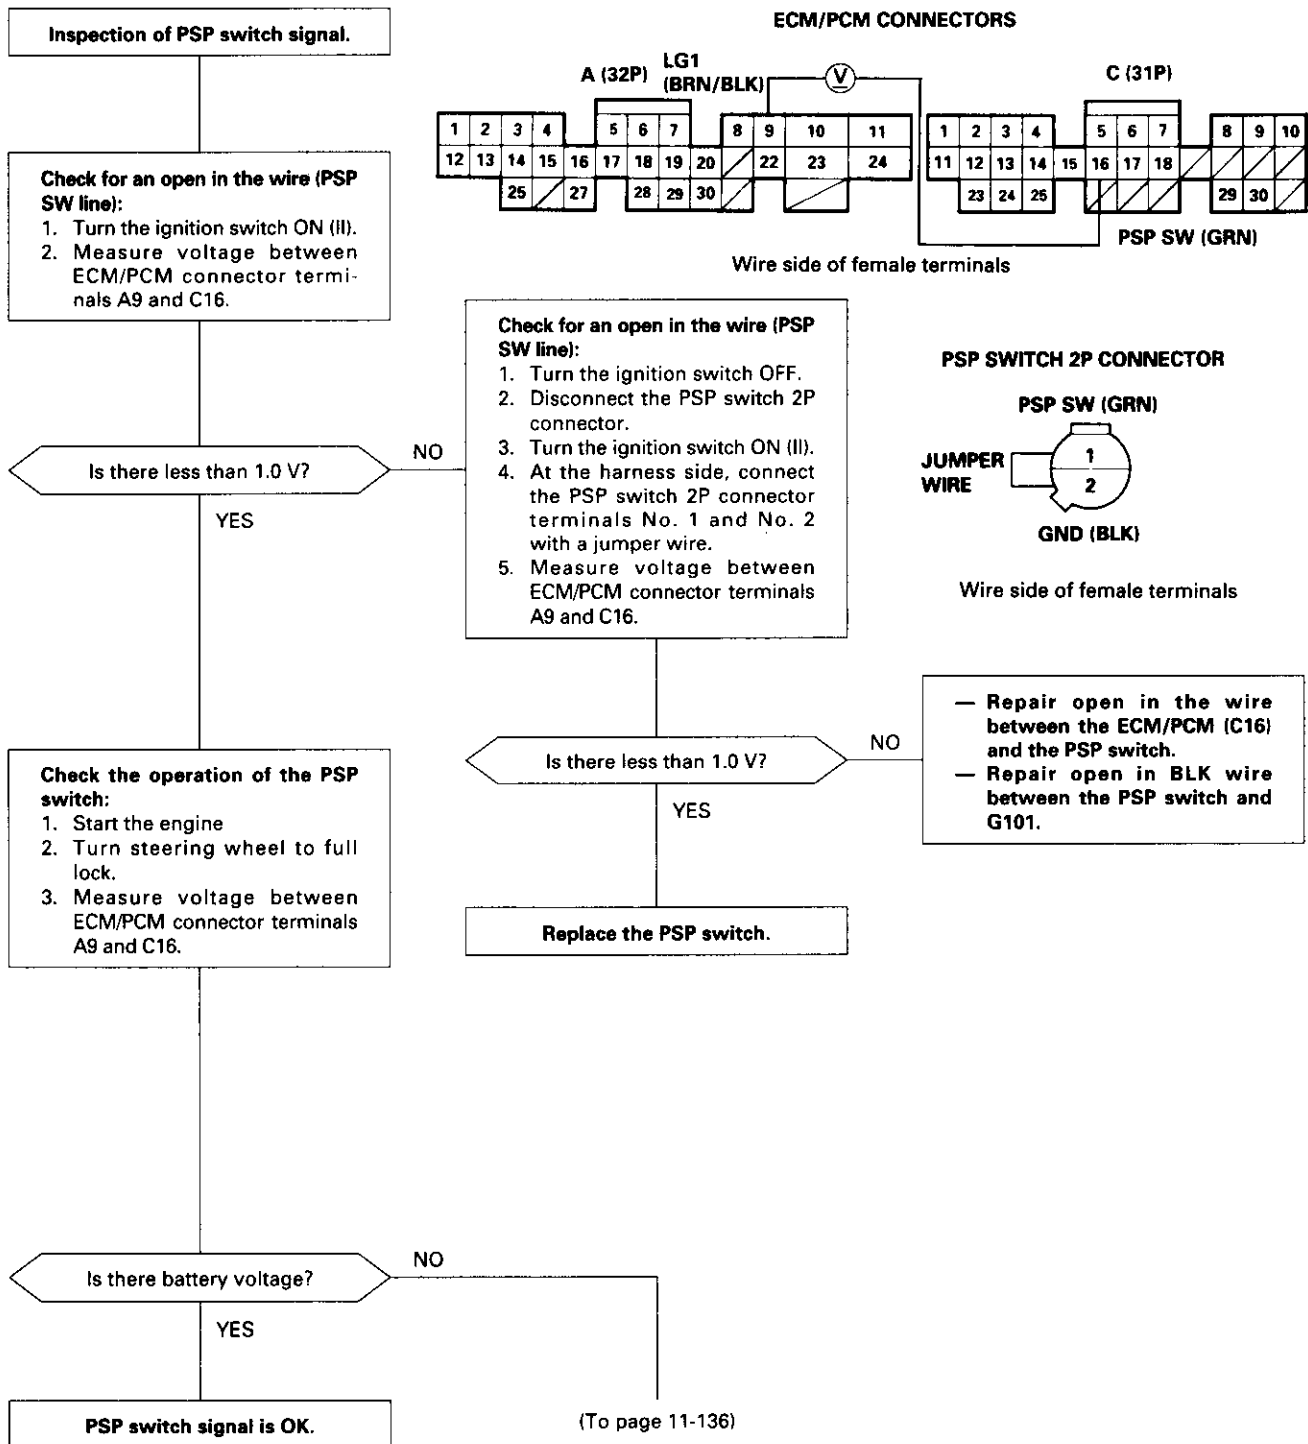

(cont'd)


Idle Control System

Power Steering Pressure (PSP) Switch Signal (USA) (cont'd)

(From page 11-135)

Check for a short in the PSP switch:

1. Turn the ignition switch OFF.
2. Disconnect the 2P connector from the PSP switch.
3. Turn the ignition switch ON (II).
4. Measure voltage between ECM/PCM connector terminals A9 and C16.

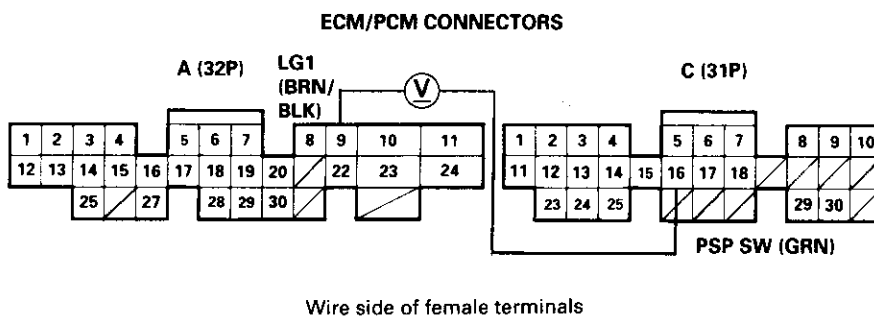

Is there battery voltage?


NO

YES

Replace the PSP switch.

Check for a short in the wire (PSP SW line):

1. Turn the ignition switch OFF.
2. Disconnect the ECM/PCM connector C (31P).
3. Check for continuity between body ground and ECM/PCM connector terminal C16.

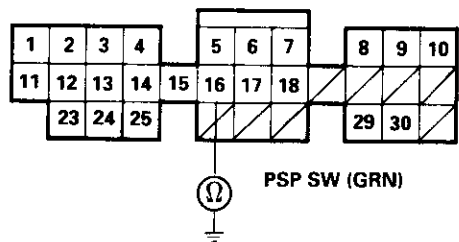

Is there continuity?

YES

Repair short in the wire between the ECM/PCM (C16) and the PSP switch.

NO

Substitute a known-good ECM/PCM and recheck. If prescribed voltage is now available, replace the original ECM/PCM.



Automatic Transaxle (CVT) Gear Position Signal (D16Y5 engine)

This signals the ECM when the transmission is in **N** or **P** position.

Inspection of A/T Gear Position Signal.

Check the operation of the A/T gear position switch:
1. Turn the ignition switch ON (II).
2. Observe the A/T shift position indicator and select each position separately.

Does the indicator light properly?

NO

See the A/T gear position indicator inspection (see section 14).


YES

Check for a short in the wire (ATP NP line):
1. Turn the ignition switch OFF.
2. Disconnect the 14P connector from the gauge assembly.
3. Disconnect the 26P connector from the TCM.
4. Turn the ignition switch ON (III).
5. Measure voltage between ECM connector terminals A9 and C29.

Is there approx. 5 V?

NO

Check for a short in the wire (ATP NP line):
1. Turn the ignition switch OFF.
2. Disconnect the ECM connector C (31P).
3. Check for continuity between body ground and ECM connector terminal C29.

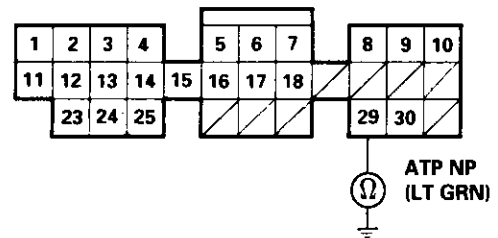

Check for an open in the wire (ATP NP line):
1. Turn the ignition switch OFF.
2. Reconnect the 14P connector to the gauge assembly.
3. Reconnect the 26P connector to the TCM.
4. Start the engine.
5. Measure voltage between ECM connector terminals A9 and C29 with the transmission in **N** and **P** position.

Is there continuity?


YES

Repair short in the wire between the ECM (C29) and the gauge assembly.

NO

Substitute a known-good ECM and recheck. If prescribed voltage is now available, replace the original ECM.

ECM CONNECTORS

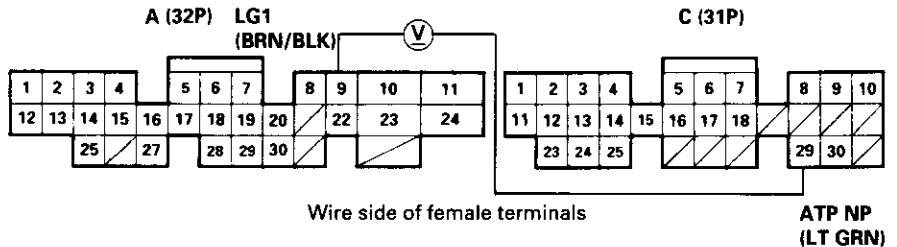


(To page 11-138)

(cont'd)

Idle Control System


Automatic Transaxle (CVT) Gear Position Signal (D16Y5 engine) (cont'd)

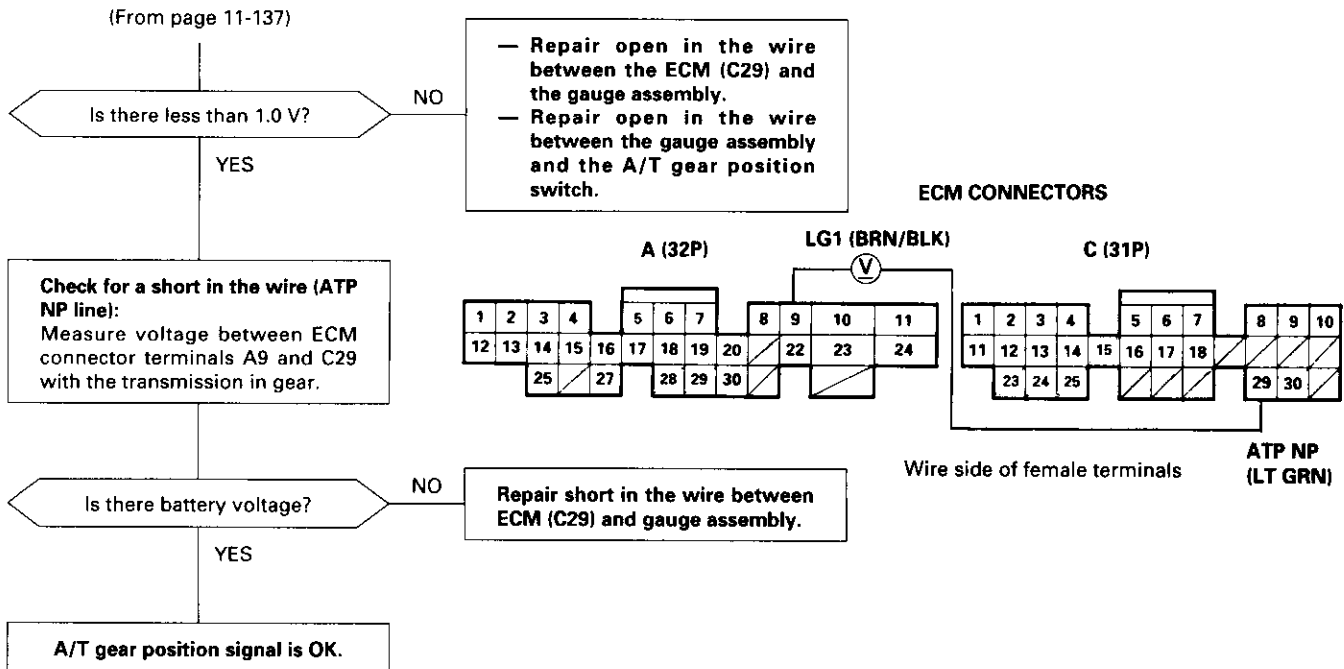



Clutch Switch Signal (D16Y5 engine (M/T))

This signals the ECM when the clutch is engaged.

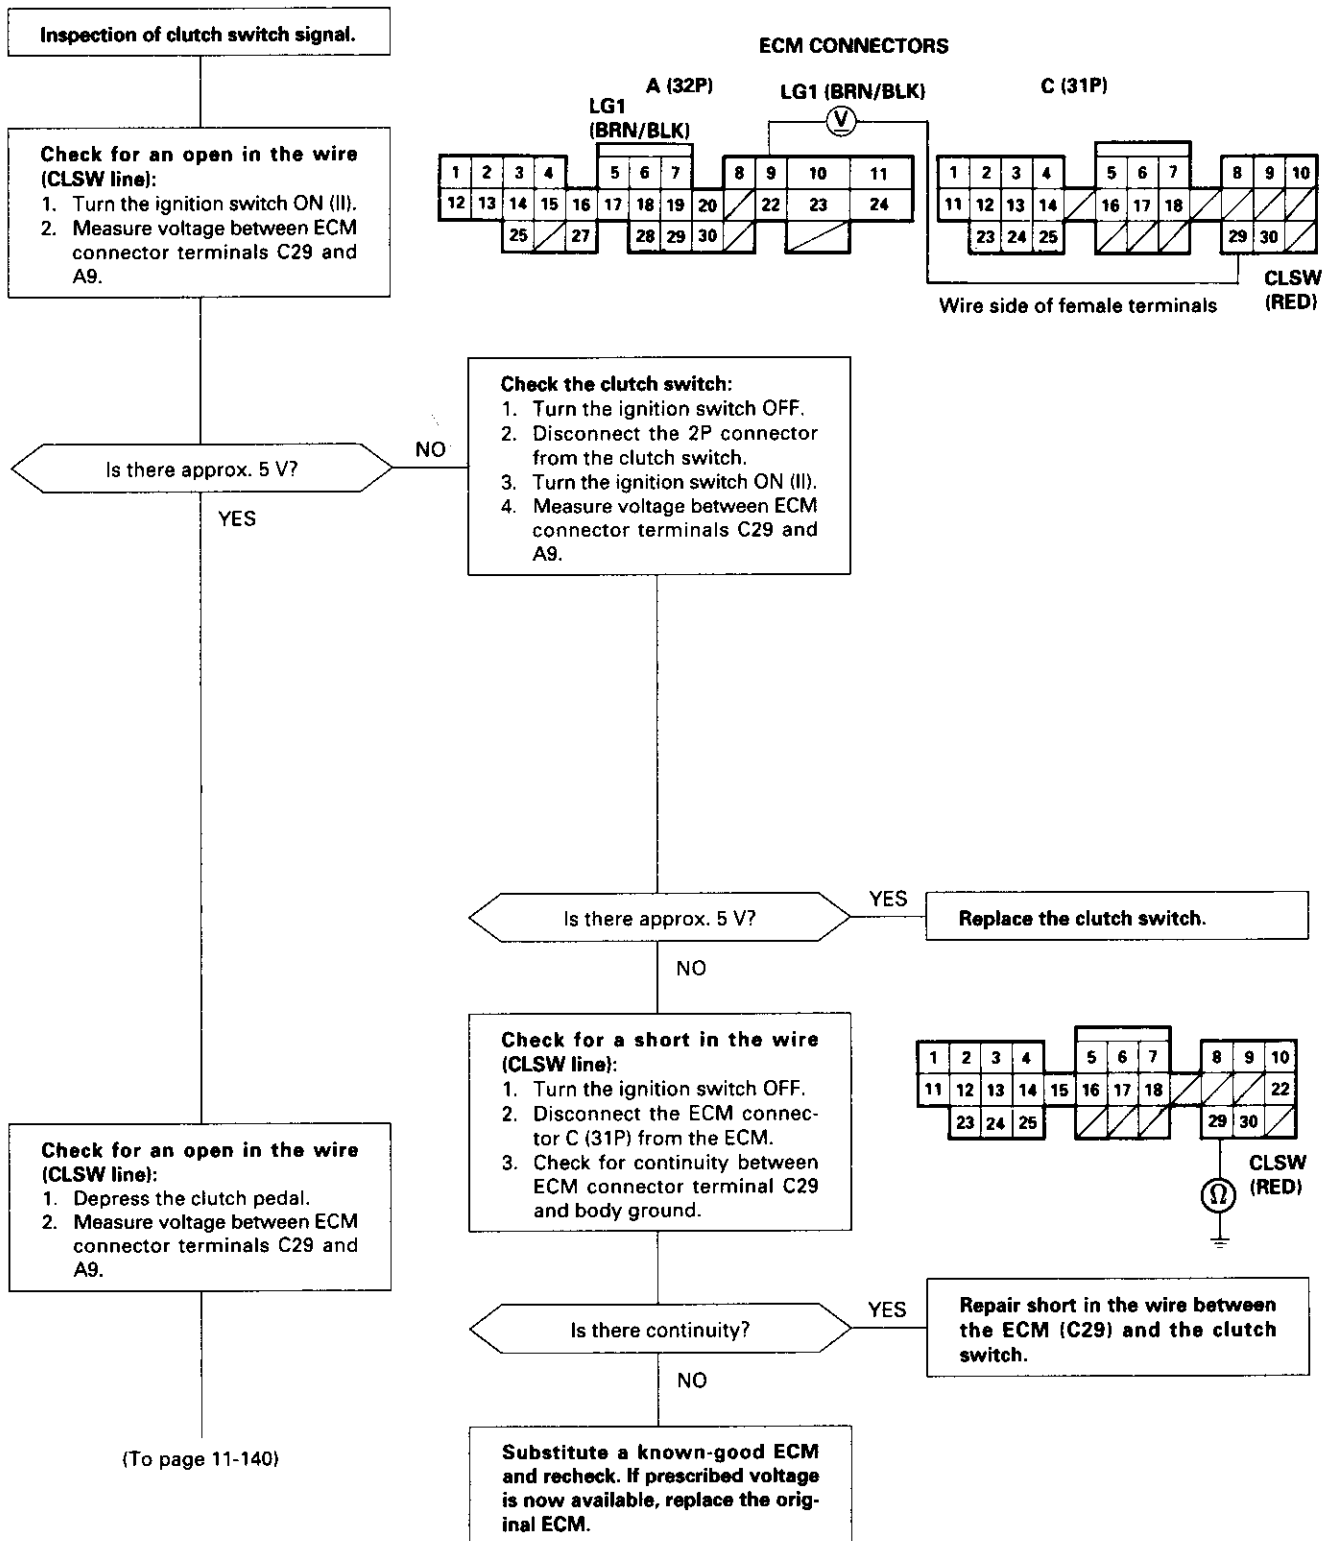


(cont'd)

Idle Control System

Clutch Switch Signal (D16Y5 engine (M/T)) (cont'd)

(From page 11-139)

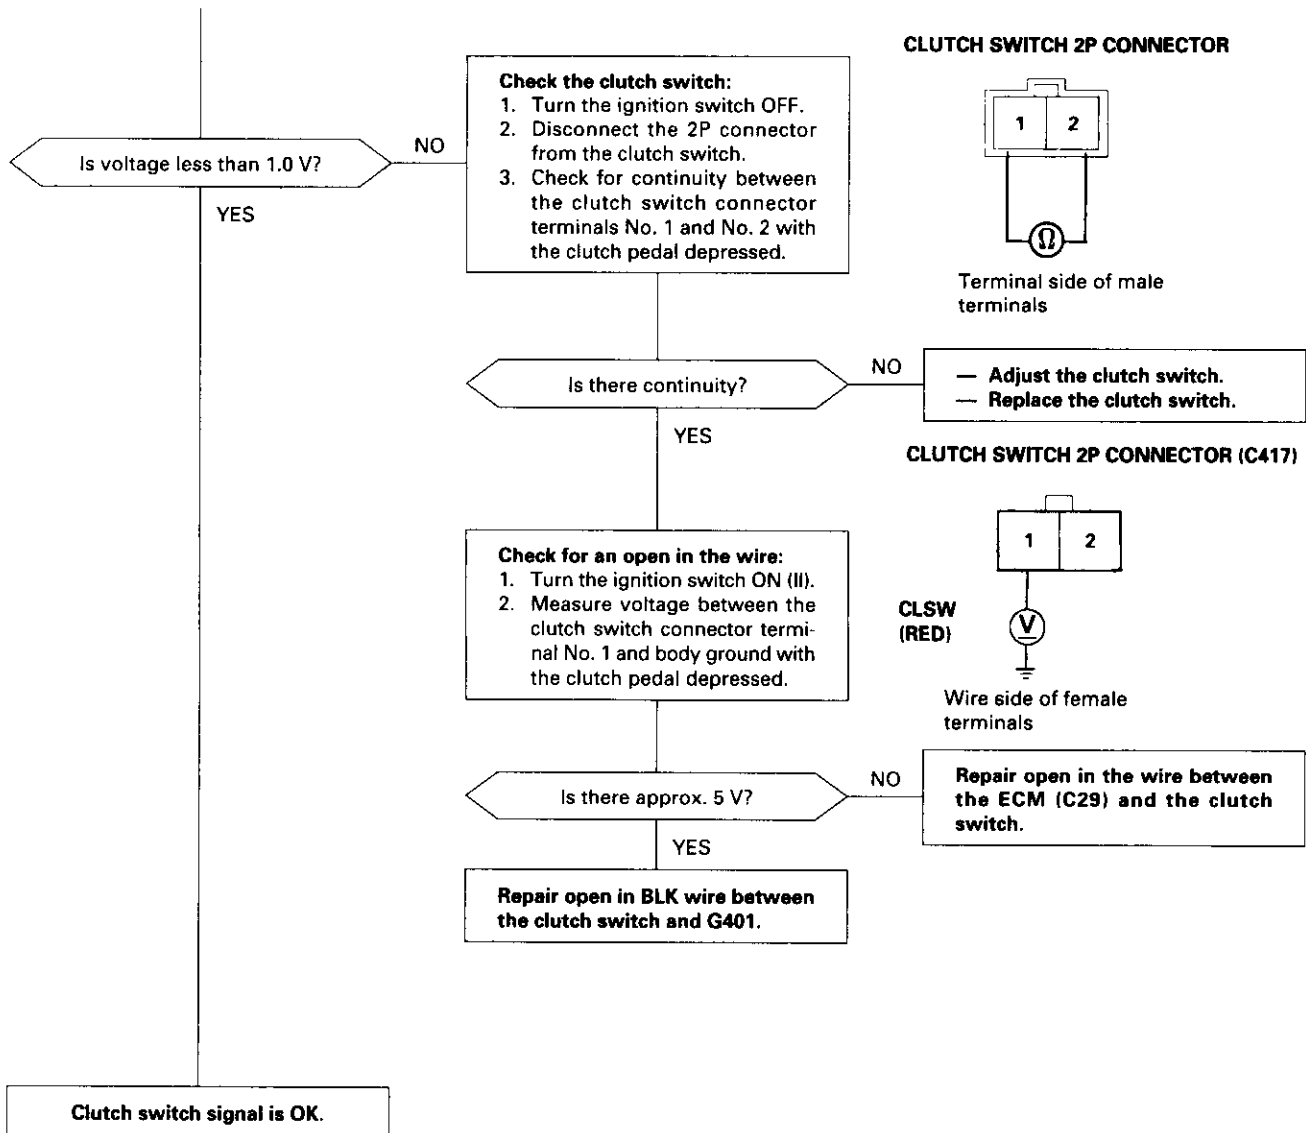



Idle Speed Setting


Inspection/Adjustment

'96, '97 D16Y5, '96-'98 D16Y8 engine (M/T)

NOTE:

- Before setting the idle speed, check the following items:
 - The MIL has not been reported on.
 - Ignition timing
 - Spark plugs
 - Air cleaner
 - PCV system
- (Canada) Pull the parking brake lever up. Start the engine, then check that the headlights are off.

1. Start the engine. Hold the engine at 3,000 rpm with no load (transmission in neutral) until the radiator fan comes on, then let it idle.
2. Connect a tachometer.
3. Disconnect the IAC valve connector.

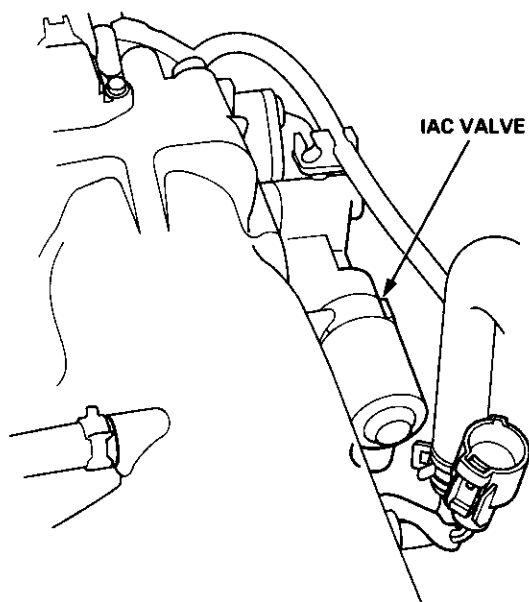


4. If the engine stalls, restart the engine with the accelerator pedal slightly depressed. Stabilize the rpm at 1,000, then slowly release the pedal until the engine idles.
5. Check idling in no-load conditions: headlights, blower fan, rear defogger, radiator fan, and air conditioner are not operating.

Idle speed should be:
 450 ± 50 rpm

Adjust the idle speed, if necessary, by removing the cap and turning the idle adjusting screw.

NOTE: After adjusting the idle speed in this step, recheck the ignition timing (see section 23). If it is out of spec, go back to step 4.

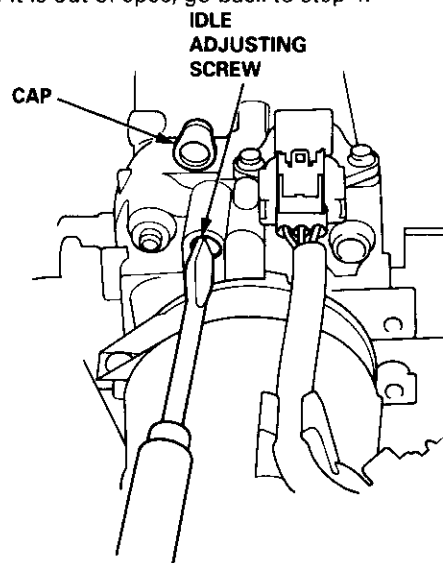

6. Turn the ignition switch OFF.
7. Reconnect the 2P connector on the IAC valve, then do the ECM reset procedure.
8. Restart and idle the engine with no-load conditions for one minute, then check the idle speed.

NOTE: (Canada) Pull the parking brake lever up. Start the engine, then check that the headlights are off.

Idle speed should be:
 670 ± 50 rpm (USA)
 750 ± 50 rpm (Canada)

9. Idle the engine for one minute with headlights (Low) ON, and check the idle speed.

Idle speed should be:
 750 ± 50 rpm

10. Turn the headlights off. Idle the engine for one minute with heater fan switch at HI and air conditioner on, then check the idle speed.

Idle speed should be:
 810 ± 50 rpm

NOTE: If the idle speed is not within specification, see Symptom Chart on page 11-46. (cont'd)

Idle Control System

Idle Speed Setting (cont'd)

'96, '97 D16Y5 engine (CVT), '96~'98 D16Y8 engine (A/T) and '96~'98 D16Y7 engine

Adjust the idle speed using a Honda PGM Tester if possible. If not, use the following procedure:

NOTE:

- Leave the IAC valve connected.
- Before setting the idle speed, check the following items:
 - The MIL has not been reported on.
 - Ignition timing
 - Spark plugs
 - Air cleaner
 - PCV system

1. Connect a tachometer.
2. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P** position, M/T in neutral) until the radiator fan comes on, then let it idle.
3. Check the idle speed with no-load conditions: head-lights, blower fan, rear defogger, radiator fan, and air conditioner are not operating.

Idle speed should be:

USA:

D16Y5 engine (CVT), D16Y7 engine (A/T), D16Y8 engine (A/T):

700 ± 50 rpm (in **N or **P** position)**

D16Y7 engine (M/T):

670 ± 50 rpm


Canada:

D16Y8 engine, D16Y7 engine:

M/T	750 ± 50 rpm
A/T	750 ± 50 rpm (in N or P position)


4. Adjust the idle speed, if necessary, by removing the cap and turning the idle adjusting screw 1/2-turn clockwise or counterclockwise.

D16Y5, D16Y8 engine:

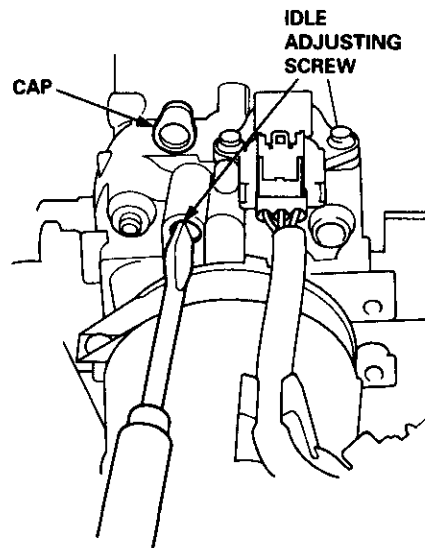

D16Y7 engine:

NOTE: When you remove the ACL housing, do not disconnect the IAT sensor connector.

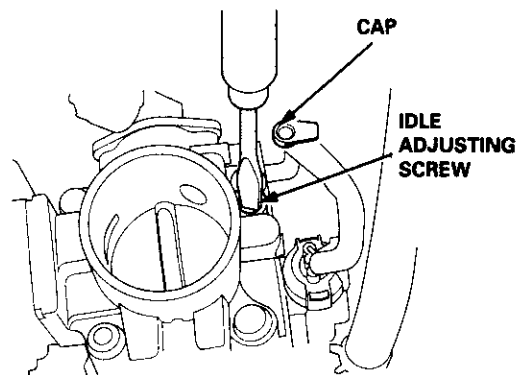

5. After turning the idle adjusting screw 1/2-turn, check the idle speed again. If it is out of spec, turn the idle adjusting screw 1/2-turn again.
NOTE: Do not turn the idle adjusting screw more than 1/2-turn without checking the idle speed.
6. Idle the engine for one minute with heater fan switch at HI and air conditioner on, then check the idle speed.

Idle speed should be:

M/T	810 ± 50 rpm
A/T, CVT	810 ± 50 rpm (in N or P position)

NOTE:

- Do not turn the idle adjusting screw when the air conditioner is on.
- If the idle speed is not within specification, see Symptom Chart on page 11-46.





Inspection/Adjustment

'98 D16Y5 engine (M/T)

NOTE: Before setting the idle speed, check the following items:

- The MIL has not been reported on.
- Ignition timing
- Spark plugs
- Air cleaner
- PCV system

1. Start the engine. Hold the engine at 3,000 rpm with no load (transmission in neutral) until the radiator fan comes on, then let it idle.
2. Connect a tachometer.
3. Disconnect the IAC valve 2P connector and the EVAP purge control solenoid valve 2P connector.

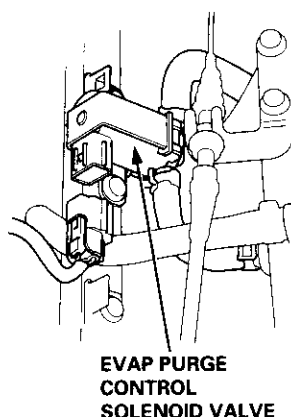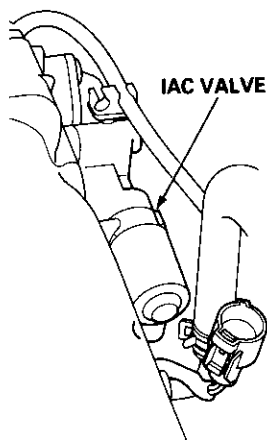


4. If the engine stalls, restart the engine with the accelerator pedal slightly depressed. Stabilize the rpm at 1,000, then slowly release the pedal until the engine idles.
5. Check idling in no-load conditions: headlights, blower fan, rear defogger, radiator fan, and air conditioner are not operating.

Idle speed should be:
450 ± 50 rpm

If necessary, adjust the idle speed, by removing the cap and turning the idle adjusting screw.

After adjusting the idle speed recheck the ignition timing (see section 23). If it is out of spec, go back to step 4.

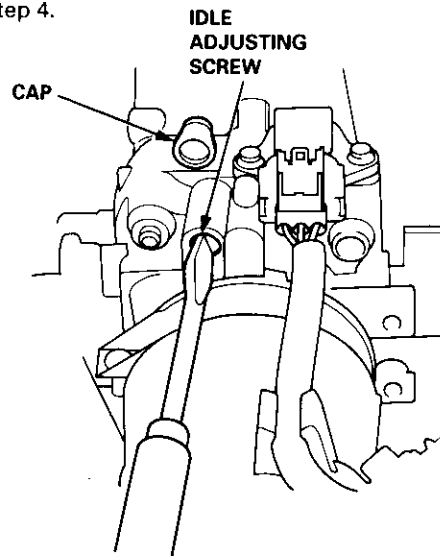

6. Turn the ignition switch OFF.
7. Reconnect the 2P connectors to the IAC valve and the EVAP purge control solenoid valve, then do the ECM reset procedure.
8. Restart and idle the engine with no-load conditions for one minute, then check the idle speed.

Idle speed should be: 670 ± 50 rpm

NOTE: If the idle speed increases to 810 ± 50 rpm, this means the EVAP system is purging the canister. To stop the purging temporarily, raise the engine speed above 1,000 rpm with the accelerator pedal, then slowly release the pedal.

9. Idle the engine for one minute with headlights (Low) ON, and check the idle speed.

Idle speed should be:
750 ± 50 rpm

10. Turn the headlights off. Idle the engine for one minute with heater fan switch at HI and air conditioner on, then check the idle speed.

Idle speed should be:
810 ± 50 rpm

If the idle speed is not within specification, see Symptom Chart on page 11-46. (cont'd)

Idle Control System

Idle Speed Setting (cont'd)

'98 D16Y5 engine (CVT)

Adjust the idle speed using a Honda PGM Tester if possible. If not, use the following procedure:


NOTE:

- Leave the IAC valve connected.
- Before setting the idle speed, check the following items:
 - The MIL has not been reported on.
 - Ignition timing
 - Spark plugs
 - Air cleaner
 - PCV system


1. Connect a tachometer.
2. Start the engine. Hold the engine at 3,000 rpm with no load (transmission in **N** or **P** position) until the radiator fan comes on, then let it idle.
3. Check the idle speed under no-load conditions: head lights, blower fan, rear defogger, radiator fan, and air conditioner are not operating.

Idle speed should be: 700 ± 50 rpm

- If the idle speed is within the specification, the procedure is complete.
 - If the idle speed is out of specification, go to step 4.
4. If the idle speed is 810 ± 50 rpm, this means the EVAP system is purging the canister. To stop the purging temporarily, raise the engine speed above 1,000 rpm with the accelerator pedal. Slowly release the pedal, and recheck the idle speed.
 - If the idle speed is within the specification, the procedure is complete.
 - If the idle speed is out of specification, go to step 5.
 5. Disconnect the EVAP purge control solenoid valve 2P connector.

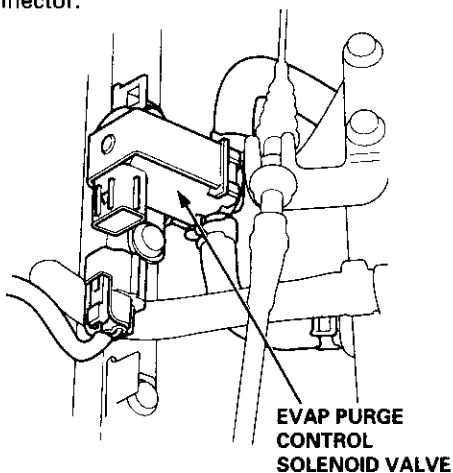

6. Remove the cap and turn the idle adjusting screw 1/2-turn clockwise or counterclockwise.

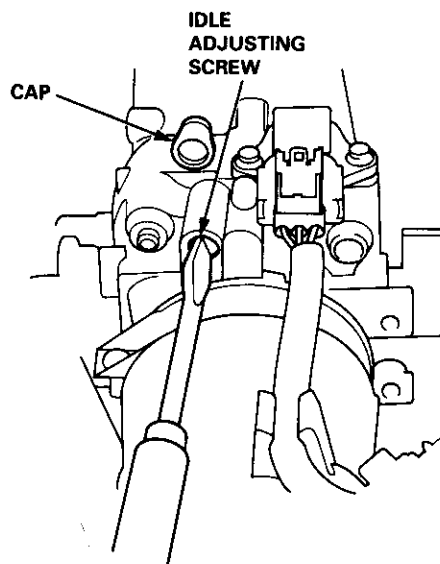

7. After turning the idle adjusting screw 1/2-turn, check the idle speed again. If it is out of spec, turn the idle adjusting screw 1/2-turn again.

NOTE: Do not turn the idle adjusting screw more than 1/2-turn without checking the idle speed.

8. Turn the ignition switch OFF. Reconnect the EVAP purge control solenoid valve 2P connector, then do the ECM reset procedure.
9. Start the engine. Idle the engine for one minute with heater fan switch at HI and air conditioner on, then check the idle speed.

Idle speed should be:

810 ± 50 rpm (in **N or **P** position)**


If the idle speed is not within specification, see Symptom Chart on page 11-46.

Fuel Supply System



Fuel Lines

NOTE: Check fuel system lines, hoses, fuel filter, and other components for damage, leaks and deterioration, and replace if necessary.


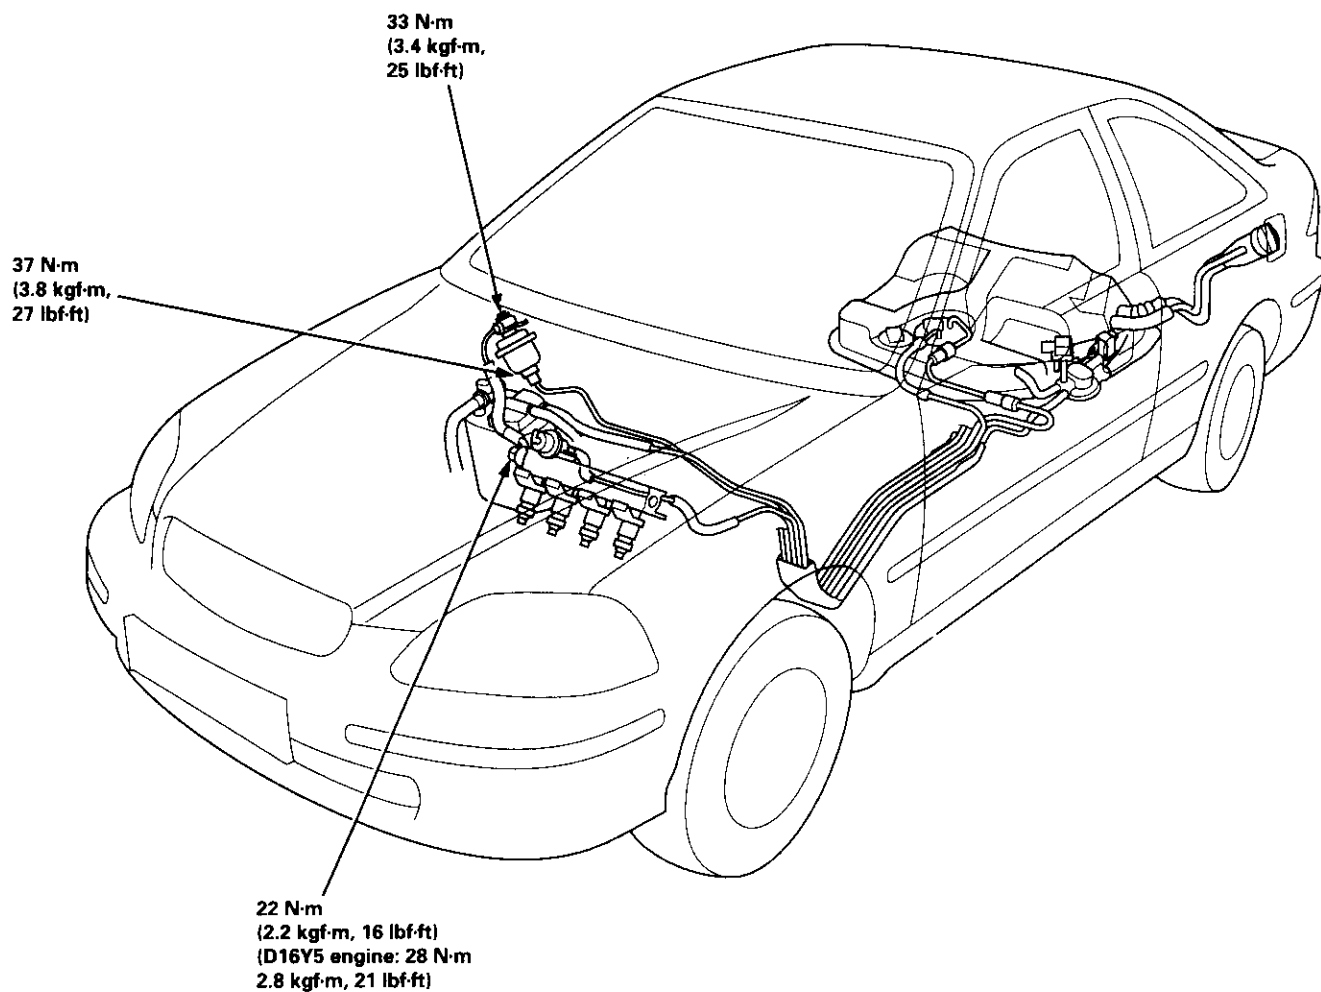


(cont'd)

Fuel Supply System

Fuel Lines (cont'd)

NOTE: Check all hose clamps and retighten if necessary.

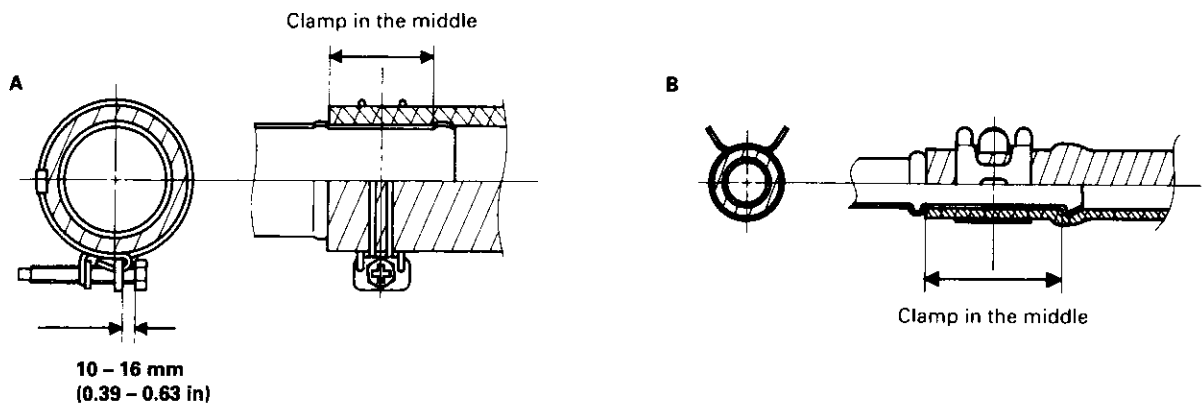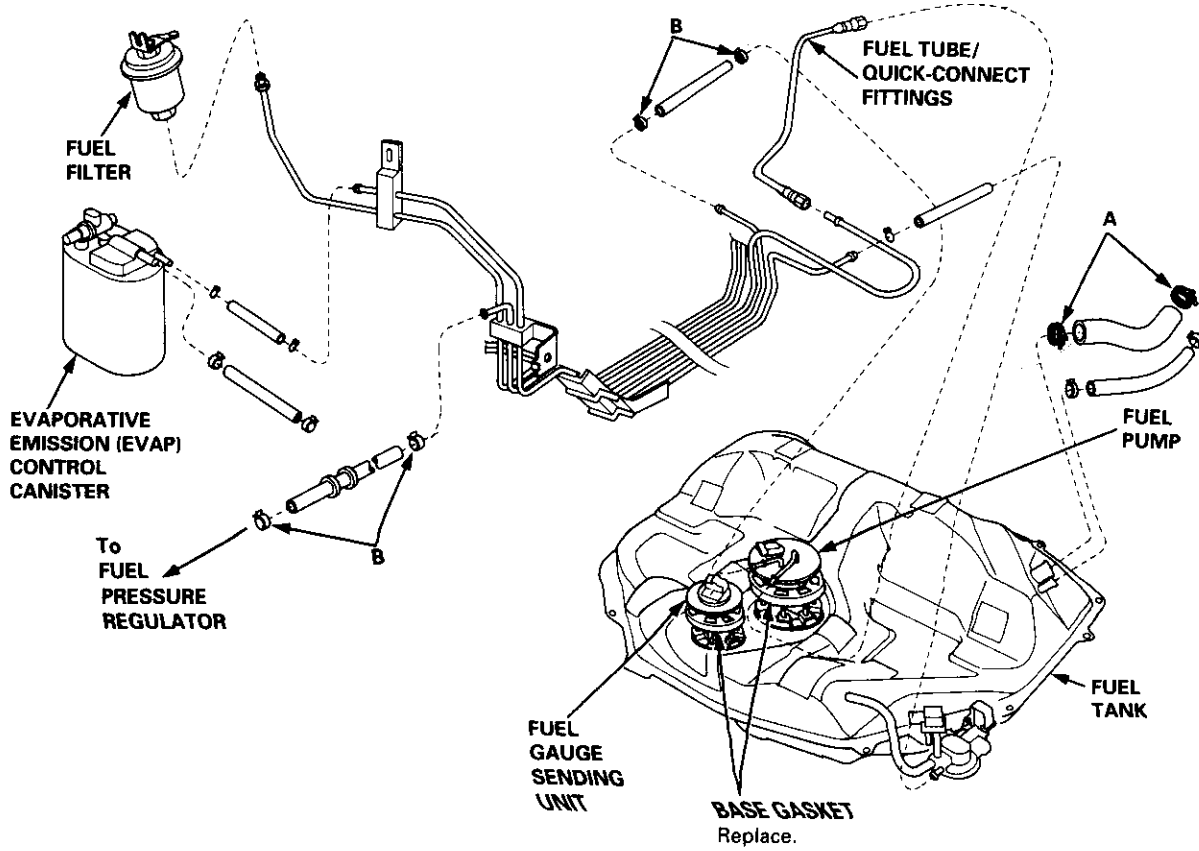



Fuel Tube/Quick-Connect Fittings

Precautions


⚠ WARNING Do not smoke while working on the fuel system. Keep open flames away from your work area.

The fuel tube/quick-connect fittings assembly connects the in-tank fuel pump with the fuel feed pipe. For removing or installing the fuel pump and fuel tank, it is necessary to disconnect or connect the quick-connect fittings. Pay attention to following:

- The fuel tube/quick-connect fittings assembly is not heat-resistant; be careful not to damage it during welding or other heat-generating procedures.
- The fuel tube/quick-connect fittings assembly is not acid-proof; do not touch it with a shop towel which was used for wiping battery electrolyte. Replace the fuel tube/quick-connect fittings assembly if it came into contact with electrolyte or something similar.
- When connecting or disconnecting the fuel tube/quick-connect fittings assembly, be careful not to bend or twist it excessively. Replace it if damaged.

A disconnected quick-connect fitting can be reconnected, but the retainer on the mating pipe cannot be reused once it has been removed from the pipe. Replace the retainer when

- Replacing the fuel pump.
- Replacing the fuel feed pipe.
- It has been removed from the pipe.
- It is damaged.

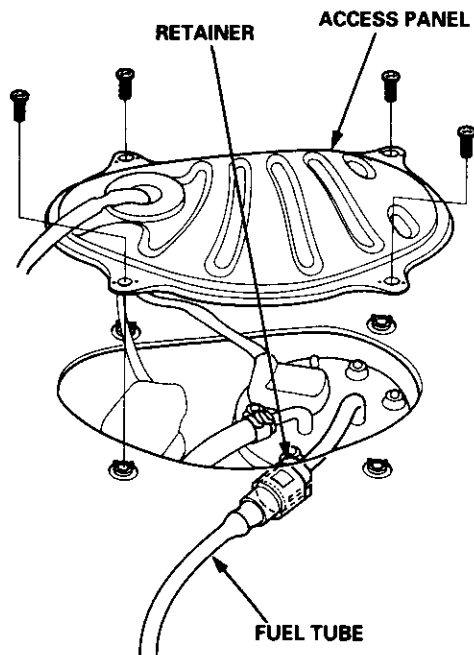


Disconnection

⚠ WARNING Do not smoke while working on the fuel system. Keep open flames away from your work area.


1. Relieve fuel pressure (see pages 11-150, 151).
2. Check the fuel quick-connect fittings for dirt, and clean if necessary.
3. Hold the connector with one hand and press down the retainer tabs with the other hand, then pull the connector off.

NOTE:

- Be careful not to damage the pipe or other parts. Do not use tools.
- If the connector does not move, keep the retainer tabs pressed down, and alternately pull and push the connector until it comes off easily.
- Do not remove the retainer from the pipe; once removed, the retainer must be replaced with a new one.

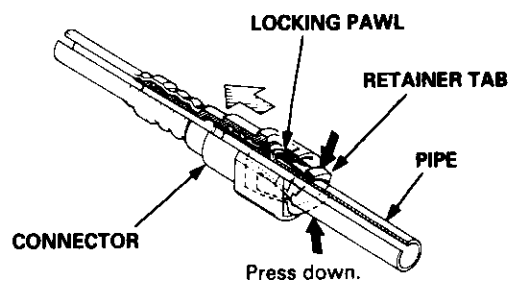

4. Check the contact area of the pipe for dirt and damage.
 - If the surface is dirty, clean it.
 - If the surface is rusty or damaged, replace the fuel pump or fuel feed pipe.

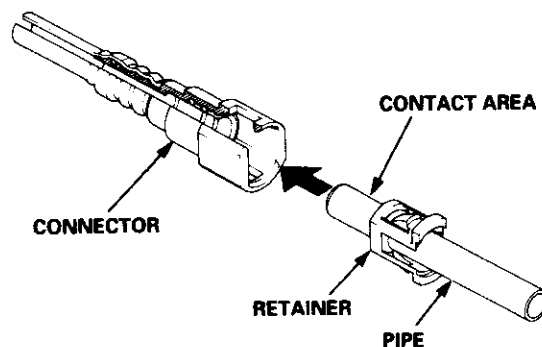


(cont'd)

Fuel Supply System

Fuel Tube/Quick-Connect Fittings (cont'd)


5. To prevent damage and keep out foreign matter, cover the disconnected connector and pipe end with plastic bags.

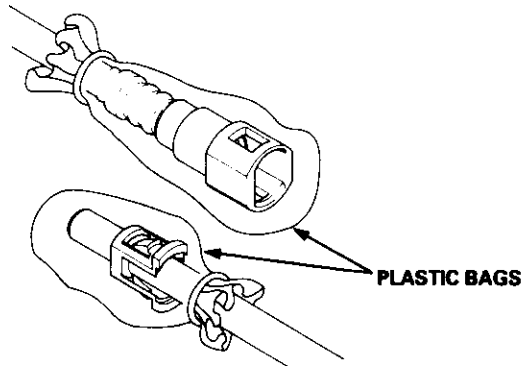

Connection


⚠ WARNING Do not smoke while working on the fuel system. Keep open flames away from your work area.

1. Check the pipe contact area for dirt and damage, and clean if necessary.

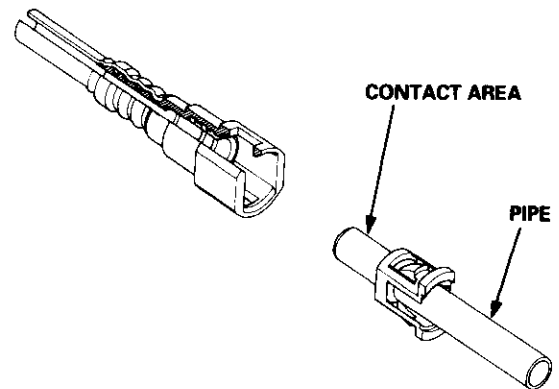


2. Insert a new retainer into the connector if the retainer is damaged, or after
 - replacing the fuel pump.
 - replacing the fuel feed pipe.
 - removing the retainer from the pipe.

New RETAINER
(Insert into the connector.)

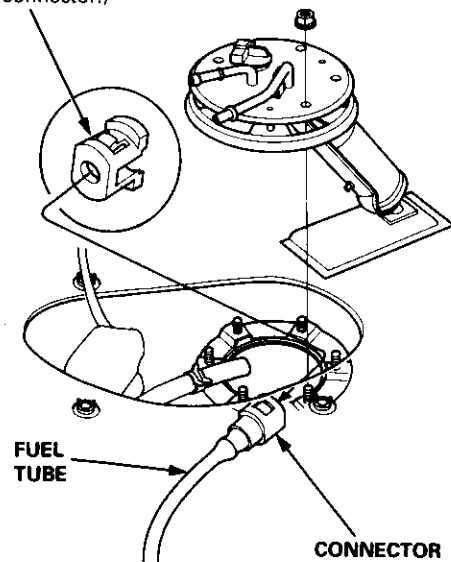




Before connecting a new fuel tube/quick-connect fitting assembly, remove the old retainer from the mating pipe.

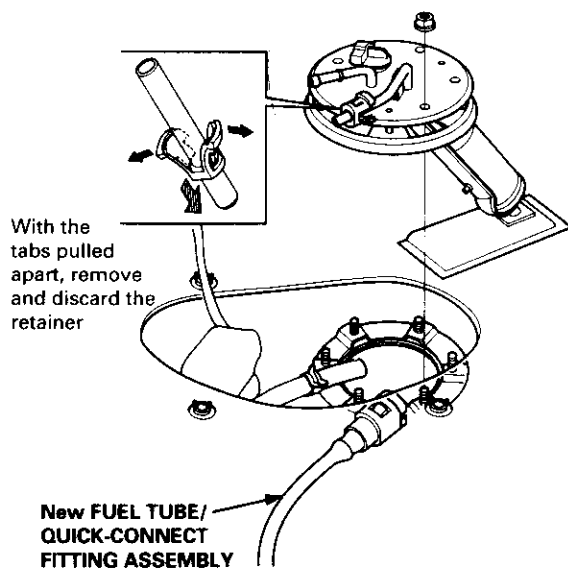


3. Align the quick-connect fittings with the pipe, and align the retainer locking pawls with the connector grooves. Then press the quick-connect fittings onto the pipe until both retainer pawls lock with a clicking sound.

NOTE: If it is hard to connect, put a small amount of new engine oil on the pipe end.


Connection with new retainer:

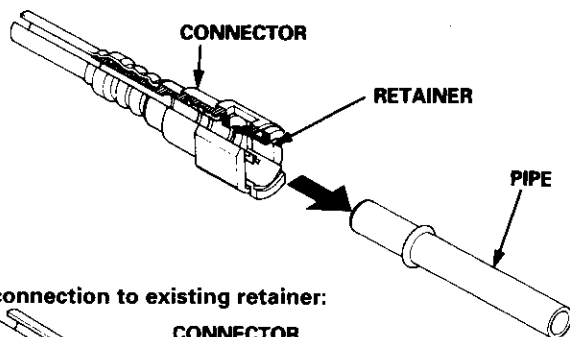

Reconnection to existing retainer:

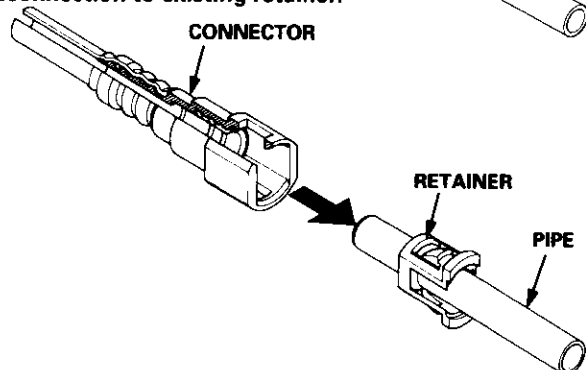

4. Make sure the connection is secure and the pawls are firmly locked into place; check visually and by pulling the connector.

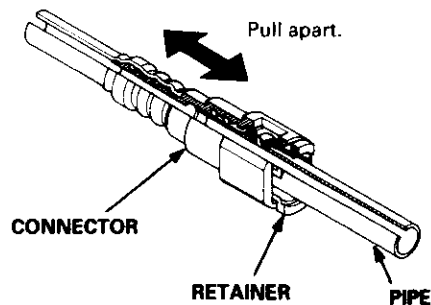

5. Reconnect the battery negative cable, and turn the ignition switch ON (II). The fuel pump will run for about two seconds, and fuel pressure will rise. Repeat two or three times, and check that there is no leakage in the fuel supply system.

Fuel Supply System

System Description

The fuel supply system consists of a fuel tank, in-tank high pressure fuel pump, PGM-FI main relay, fuel filter, fuel pressure regulator, fuel injectors, and fuel delivery and return lines. This system delivers pressure-regulated fuel to the fuel injectors and cuts the fuel delivery when the engine is not running.


Fuel Pressure ('96 model)

Relieving

Before disconnecting fuel pipes or hoses, release pressure from the system by loosening the 6 mm service bolt on top of the fuel filter.

⚠ WARNING

- Do not smoke while working on the fuel system. Keep open flames or sparks away from your work area.
 - Be sure to relieve fuel pressure while the ignition switch is off.
1. Write down the frequencies for the radio's preset buttons.
 2. Disconnect the battery negative cable from the battery negative terminal.
 3. Remove the fuel fill cap.
 4. Use a box end wrench on the 6 mm service bolt at the fuel filter while holding the special banjo bolt with another wrench.
 5. Place a rag or shop towel over the 6 mm service bolt.
 6. Slowly loosen the 6 mm service bolt one complete turn.


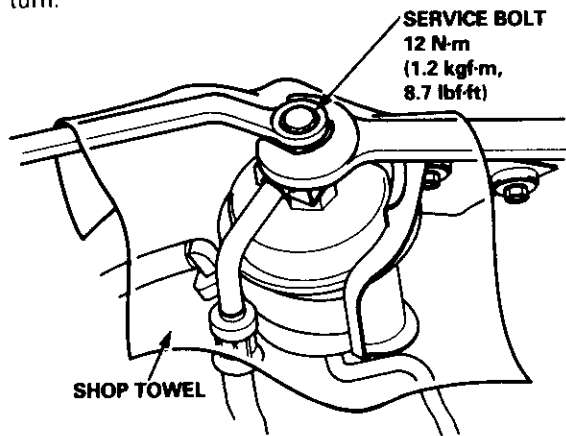


NOTE:

- A fuel pressure gauge can be attached at the 6 mm service bolt hole.
- Always replace the washer between the service bolt and the special banjo bolt whenever the service bolt is loosened.
- Replace all washers whenever the bolts are removed.

Inspection

1. Relieve fuel pressure.
2. Remove the service bolt on the fuel filter while holding the banjo bolt with another wrench. Attach the special tool.

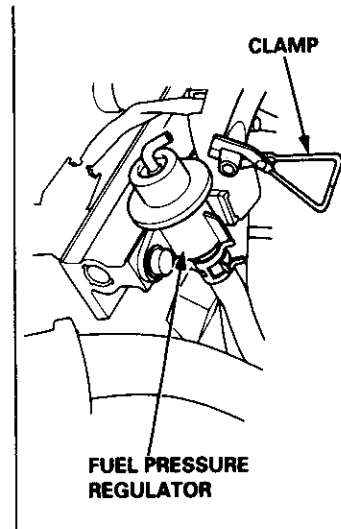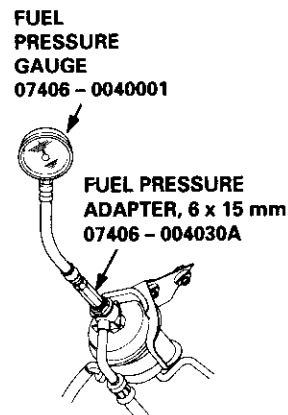

3. Start the engine. Measure the fuel pressure with the engine idling and the vacuum hose of the fuel pressure regulator disconnected from the fuel pressure regulator and pinched. If the engine will not start, turn the ignition switch ON (II), wait for two seconds, turn it off, then back on again and read the fuel pressure.

Pressure should be:

260 - 310 kPa (2.7 - 3.2 kgf/cm², 38 - 46 psi)

4. Reconnect vacuum hose to the fuel pressure regulator.

Pressure should be:

200 - 250 kPa (2.0 - 2.5 kgf/cm², 28 - 36 psi)

If the fuel pressure is not as specified, first check the fuel pump (see page 11-156). If the fuel pump is OK, check the following:

- If the fuel pressure is higher than specified, inspect for:
 - Pinched or clogged fuel return hose or line.
 - Faulty fuel pressure regulator (see page 11-154).
- If the fuel pressure is lower than specified, inspect for:
 - Clogged fuel filter.
 - Faulty fuel pressure regulator (see page 11-154).
 - Fuel line leakage.




Fuel Pressure ('97 and later models)

Relieving

Before disconnecting fuel pipes or hoses, release pressure from the system by loosening the 12 mm banjo bolt on top of the fuel filter.

▲ WARNING


- Do not smoke while working on the fuel system. Keep open flames or sparks away from your work area.
 - Be sure to relieve fuel pressure while the ignition switch is off.
1. Write down the frequencies for the radio's preset buttons.
 2. Disconnect the battery negative cable from the battery negative terminal.
 3. Remove the fuel fill cap.
 4. Use a box end wrench on the 12 mm banjo bolt at the fuel filter while holding the fuel filter with another wrench.
 5. Place a rag or shop towel over the 12 mm banjo bolt.
 6. Slowly loosen the 12 mm banjo bolt one complete turn.

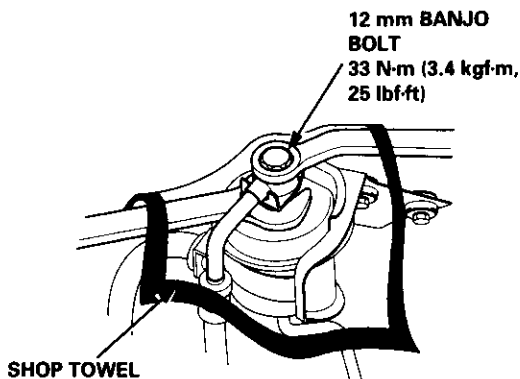

NOTE: Replace all the washers whenever the 12 mm banjo bolt is loosened or removed.

Inspection

1. Relieve fuel pressure.
2. Remove the 12 mm banjo bolt from the fuel filter while holding the fuel filter with another wrench. Attach the special tools.

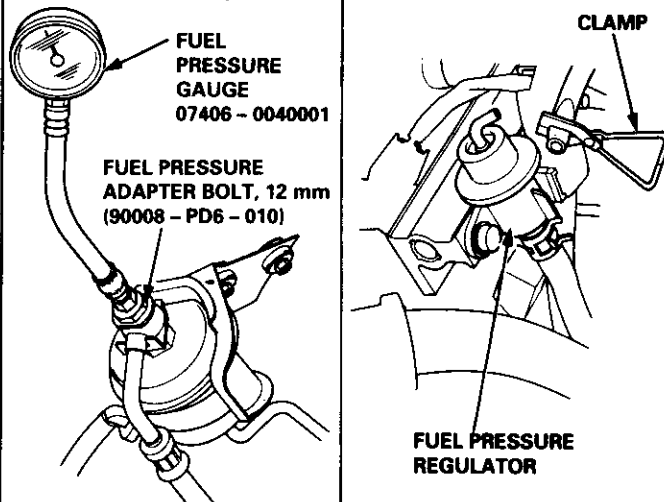

3. Start the engine. Measure the fuel pressure with the engine idling and the vacuum hose of the fuel pressure regulator disconnected from the fuel pressure regulator and pinched. If the engine will not start, turn the ignition switch ON (II), wait for two seconds, turn it off, then back on again and read the fuel pressure.

Pressure should be:

260 - 310 kPa (2.7 - 3.2 kgf/cm², 38 - 46 psi)

4. Reconnect vacuum hose to the fuel pressure regulator.

Pressure should be:

200 - 250 kPa (2.0 - 2.5 kgf/cm², 28 - 36 psi)

If the fuel pressure is not as specified, first check the fuel pump (see page 11-156). If the fuel pump is OK, check the following:

- If the fuel pressure is higher than specified, inspect for:
 - Pinched or clogged fuel return hose or line.
 - Faulty fuel pressure regulator (see page 11-154).
- If the fuel pressure is lower than specified, inspect for:
 - Clogged fuel filter.
 - Faulty fuel pressure regulator (see page 11-154).
 - Fuel line leakage.

Fuel Supply System

Fuel Injectors

Replacement


⚠ WARNING Do not smoke when working on the fuel system. Keep open flames away from your work area.

1. Relieve the fuel pressure (see pages 11-150, 151).
2. Disconnect the connectors from the fuel injectors (D16Y7 engine: Remove the air cleaner).
3. Disconnect the vacuum hoses from the fuel pressure regulator. Place a shop towel over the fuel return hose, then disconnect it from the fuel pressure regulator. Disconnect the vacuum hoses and 2P connector from the EVAP purge control solenoid valve (D16Y5, D16Y8 engine).
4. Remove the retainer nuts on the fuel rail.
5. Disconnect the fuel rail.
6. Remove the fuel injectors from the intake manifold.

D16Y5, D16Y8 engine:

D16Y7 engine:


NOTE: Illustration shows D16Y8 engine.
D16Y5 engine is similar.

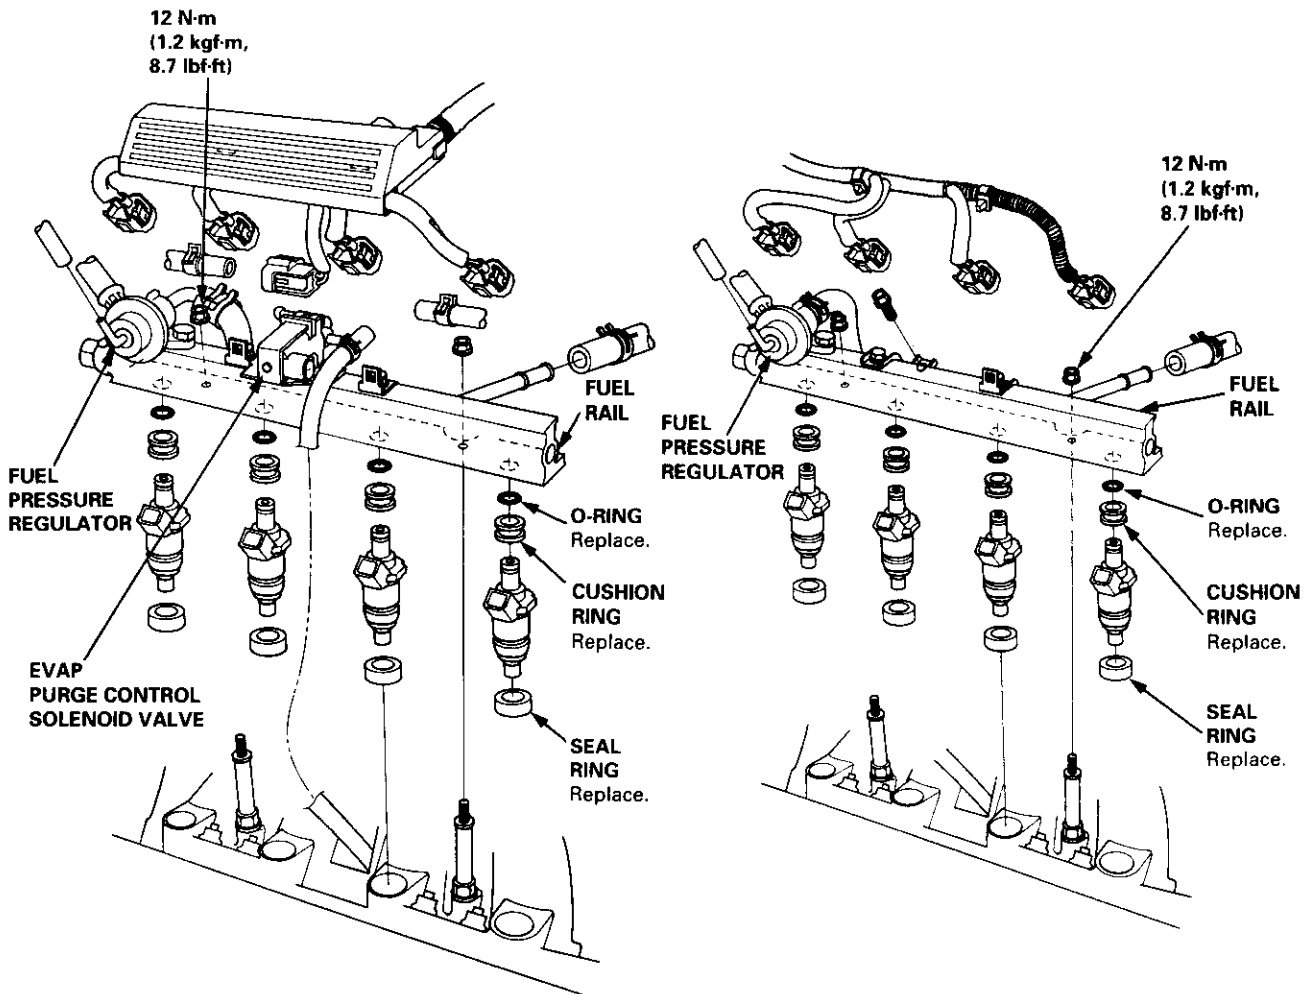

7. Slide new cushion rings onto the fuel injectors.
8. Coat new O-rings with clean engine oil, and put them on the fuel injectors.
9. Insert the fuel injectors into the fuel rail first.
10. Coat new seal rings with clean engine oil, and press them into the intake manifold.



11. To prevent damage to the O-rings, install the fuel injectors in the fuel rail first, then install them in the intake manifold.

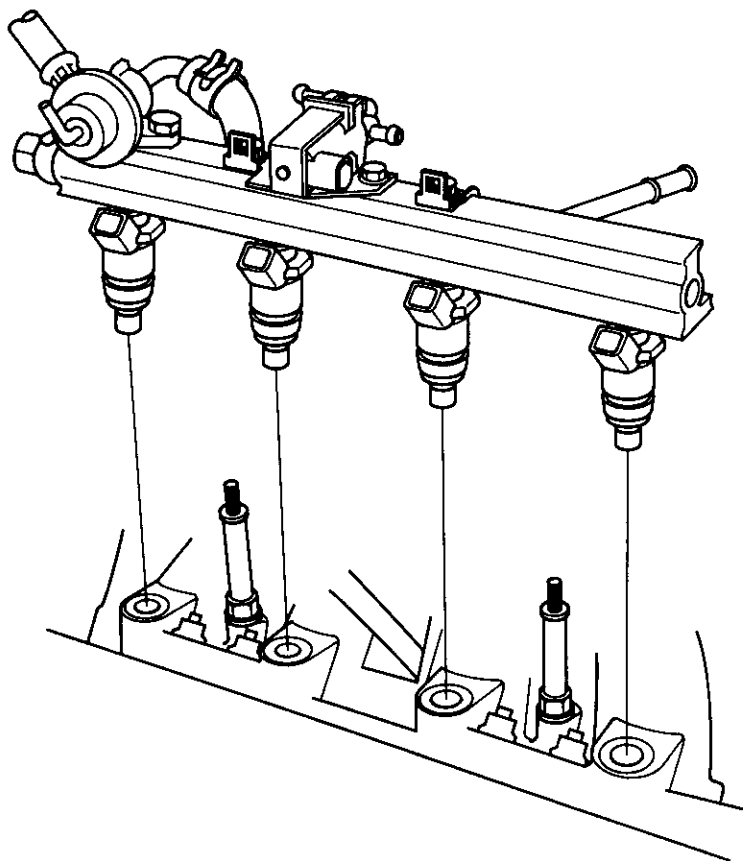

12. Install and tighten the retainer nuts.
13. Connect the vacuum hoses and fuel return hose to the fuel pressure regulator. Connect the vacuum hoses and 2P connector to the EVAP purge control solenoid valve (D16Y5, D16Y8 engine).
14. Install the connectors on the fuel injectors (D16Y7 engine: Install the air cleaner).
15. Turn the ignition switch ON (II), but do not operate the starter. After the fuel pump runs for approximately two seconds, the fuel pressure in the fuel line rises. Repeat this two or three times, then check whether there is any fuel leakage.

Fuel Supply System

Fuel Pressure Regulator


Testing

▲ WARNING Do not smoke during the test. Keep open flames away from your work area.

1. Attach the special tool(s) to the service port on the fuel filter (see pages 11-150, 151).

Pressure should be:

260 – 310 kPa (2.7 – 3.2 kgf/cm², 38 – 46 psi)
(with the fuel pressure regulator vacuum hose disconnected and pinched)

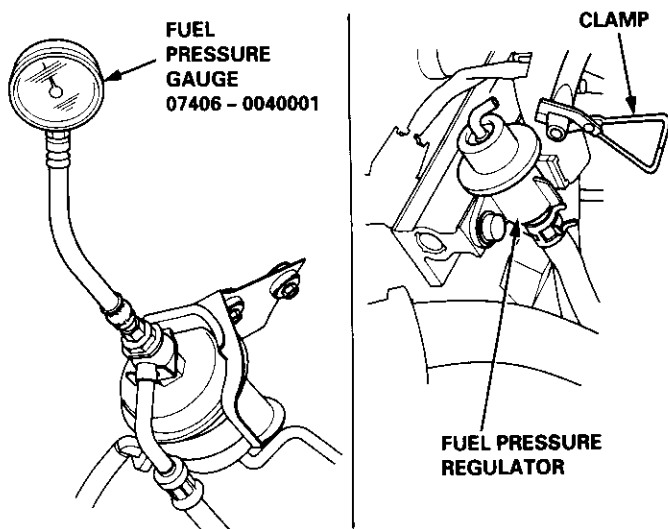


2. Reconnect the vacuum hose to the fuel pressure regulator.
3. Check that the fuel pressure rises when the vacuum hose from the fuel pressure regulator is disconnected again.

If the fuel pressure did not rise, replace the fuel pressure regulator.

Replacement

▲ WARNING Do not smoke while working on fuel system. Keep open flame away from your work area.

1. Place a shop towel under the fuel pressure regulator, then relieve fuel pressure (see pages 11-150, 151).
2. Disconnect the vacuum hose and fuel return hose.
3. Remove the two 6 mm retainer bolts and the fuel pressure regulator.

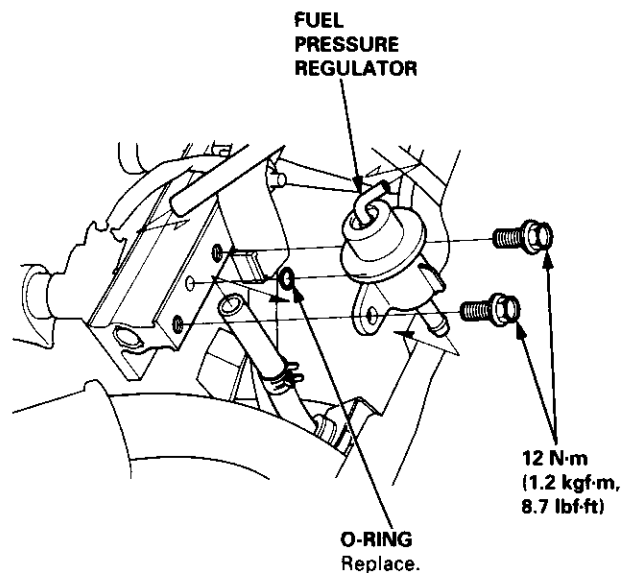

4. Apply clean engine oil to a new O-ring, and carefully install it into its proper position.
5. Install the fuel pressure regulator in the reverse order of removal.



Fuel Filter

Replacement


⚠ WARNING

- Do not smoke while working on fuel system. Keep open flame away from your work area.
- While replacing the fuel filter, be careful to keep a safe distance between battery terminals and any tools.


The fuel filter should be replaced whenever the fuel pressure drops below the specified value [260 – 310 kPa (2.7 – 3.2 kgf/cm², 38 – 46 psi) with the fuel pressure regulator vacuum hose disconnected and pinched] after making sure that the fuel pump and the fuel pressure regulator are OK.

1. Place a shop towel under and around the fuel filter.
2. Relieve fuel pressure (see pages 11-150, 151).
3. Remove the 12 mm banjo bolt and the fuel feed pipe from the fuel filter, while supporting it with the another wrench, as shown.
4. Remove the fuel filter clamp and fuel filter.
5. Install the new fuel filter in the reverse order removal, and note these items:
 - When assembling, use new washers as shown.
 - Clean the flared joint of high pressure hoses thoroughly before reconnecting them.

'96 MODEL:

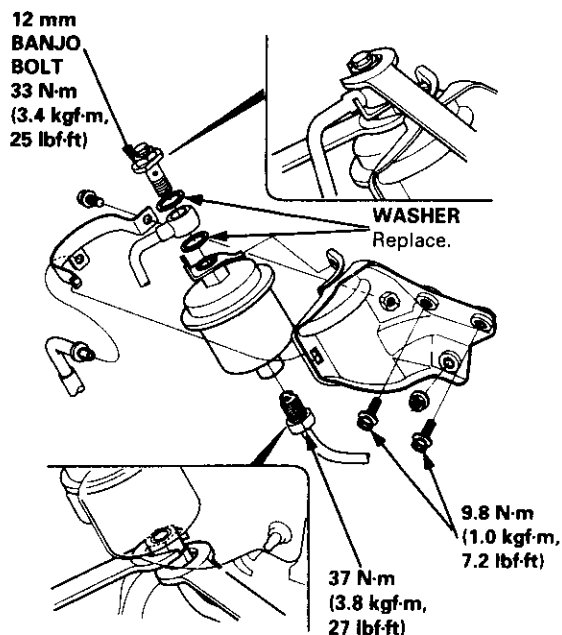

'97 AND LATER MODELS:

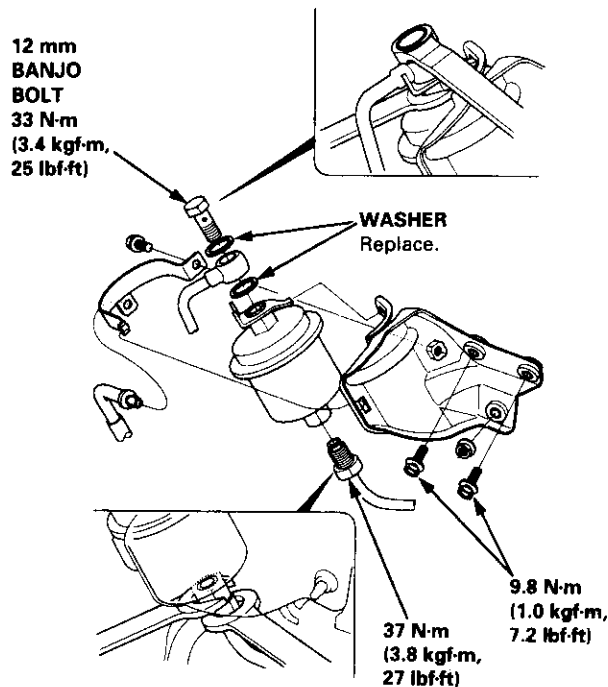

Fuel Supply System

Fuel Pump


Testing

WARNING Do not smoke during the test. Keep open flame away from your work area.

If you suspect a problem with the fuel pump, check that the fuel pump actually runs; when it is ON (II), you will hear some noise if you hold your ear to the fuel fill port with the fuel fill cap removed. The fuel pump should run for two seconds when ignition switch is first turned ON (II). If the fuel pump does not make noise, check it as follows:

1. Remove the seat cushion (see section 20).
2. Remove the access panel from the floor.
3. Make sure the ignition switch is OFF, then disconnect the fuel tank 2P connector.
4. Connect the PGM-FI main relay 7P connector terminal No. 4 and No. 5 with a jumper wire.


PGM-FI MAIN RELAY 7P CONNECTOR (C443)

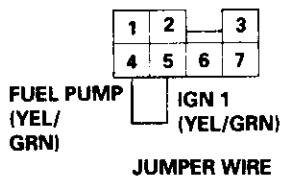

Wire side of female terminals

5. Check that battery voltage is available between the fuel pump connector terminal No. 1 and body ground when the ignition switch is turned ON (II).

2P CONNECTOR (C565)

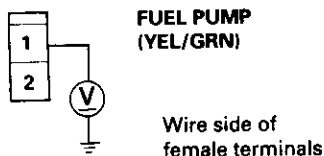


- If battery voltage is available, check the fuel pump ground. If the ground is OK, replace the fuel pump.
- If there is no voltage, check the wire harness (see page 11-158).

Replacement

WARNING Do not smoke while working on fuel system. Keep open flames away from your work area.

1. Remove the seat cushion (see section 20).
2. Remove the access panel from the floor.

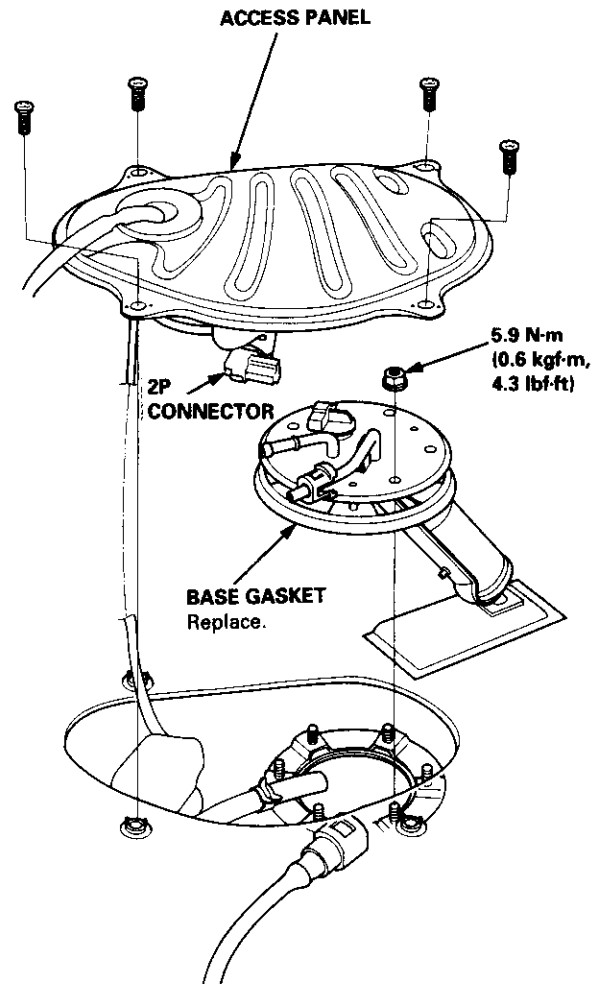


3. Disconnect the 2P connector from the fuel pump.
4. Remove the fuel pump mounting nuts.
5. Remove the fuel pump from the fuel tank.
6. Install parts in the reverse order of removal.



PGM-FI Main Relay

Description

The PGM-FI main relay actually contains two individual relays. This relay is located at the right side of the cowl. One relay is energized whenever the ignition is on which supplies the battery voltage to the ECM/PCM, power to the fuel injectors, and power for the second relay. The second relay is energized for two seconds when the ignition is switched ON (II), and when the engine is running, to supply power to the fuel pump.

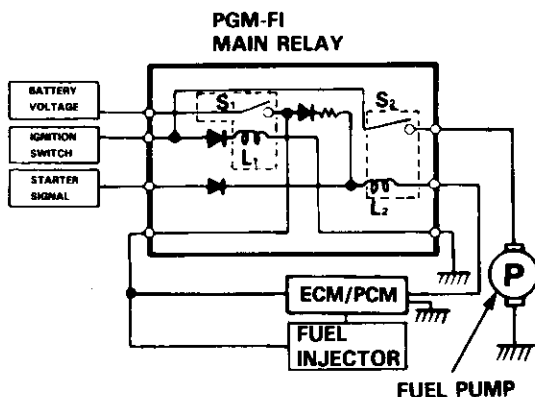



Relay Testing

NOTE:

- If the engine starts and continues to run, the PGM-FI main relay is OK.
- Use the terminal numbers below; ignore the terminal numbers molded into the relay.

1. Remove the PGM-FI main relay.
2. Attach the battery positive terminal to the No. 2 terminal and the battery negative terminal to the No. 1 terminal of the PGM-FI main relay. Then check for continuity between the No. 5 terminal and No. 4 terminal of the PGM-FI main relay.

- If there is continuity, go on to step 3.
- If there is no continuity, replace the PGM-FI main relay and retest.

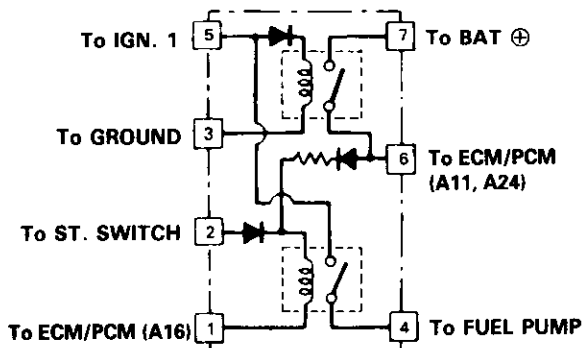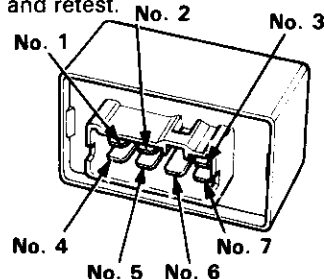

3. Attach the battery positive terminal to the No. 5 terminal and the battery negative terminal to the No. 3 terminal of the PGM-FI main relay. Then check that there is continuity between the No. 7 terminal and No. 6 terminal of the PGM-FI main relay.

- If there is continuity, go on to step 4.
- If there is no continuity, replace the PGM-FI main relay and retest.

4. Attach the battery positive terminal to the No. 6 terminal and the battery negative terminal to the No. 1 terminal of the PGM-FI main relay. Then check that there is continuity between the No. 5 terminal and No. 4 terminal of the PGM-FI main relay.

- If there is continuity, the PGM-FI main relay is OK. If the fuel pump still does not work, go to Harness Testing on the next page.
- If there is no continuity, replace the PGM-FI main relay and retest.

(cont'd)

Fuel Supply System

PGM-FI Main Relay (cont'd)

Circuit Troubleshooting

— Engine will not start.
— Inspection of PGM-FI main relay and relay harness.

Check for an open in the wire (GND line):
1. Turn the ignition switch OFF.
2. Disconnect the PGM-FI main relay 7P connector.
3. Check for continuity between the PGM-FI main relay 7P connector terminal No. 3 and body ground.

Is there continuity?

NO

Repair open in the wire between the PGM-FI main relay and G101.

YES

Check for an open or short in the wire (BAT line):
Measure voltage between the PGM-FI main relay 7P connector terminal No. 7 and body ground.

Is there battery voltage?

NO

— Repair open or short in the wire between the PGM-FI main relay and the FI E/M (15 A) fuse.
— Replace the FI E/M (15 A) fuse in the under-hood fuse/relay box.

YES

Check for an open or short in the wire (IG1 line):
1. Turn the ignition switch ON (II).
2. Measure the voltage between the PGM-FI main relay 7P connector terminal No. 5 and body ground.

Is there battery voltage?

NO


— Repair open or short in the wire between the PGM-FI main relay and the No. 13 FUEL PUMP (15 A) fuse.
— Replace the No. 13 FUEL PUMP (15 A) fuse in the under-dash fuse/relay box.

YES




Check for an open or short in the wire (STS line):
1. Turn the ignition switch to the START (III) position.
NOTE:
• M/T: Clutch pedal must be depressed.
• A/T: Transmission in **N** or **P** position.
2. Measure the voltage between the PGM-FI main relay 7P connector terminal No. 2 and body ground.

(To page 11-159)

PGM-FI MAIN RELAY 7P CONNECTOR (C443)

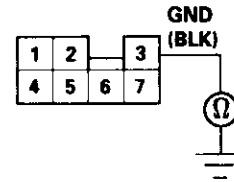


Wire side of female terminals

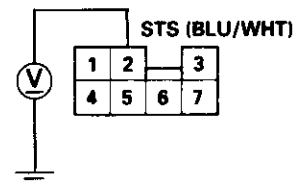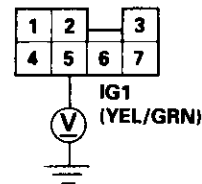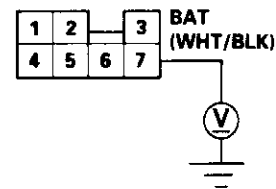



(From page 11-158)

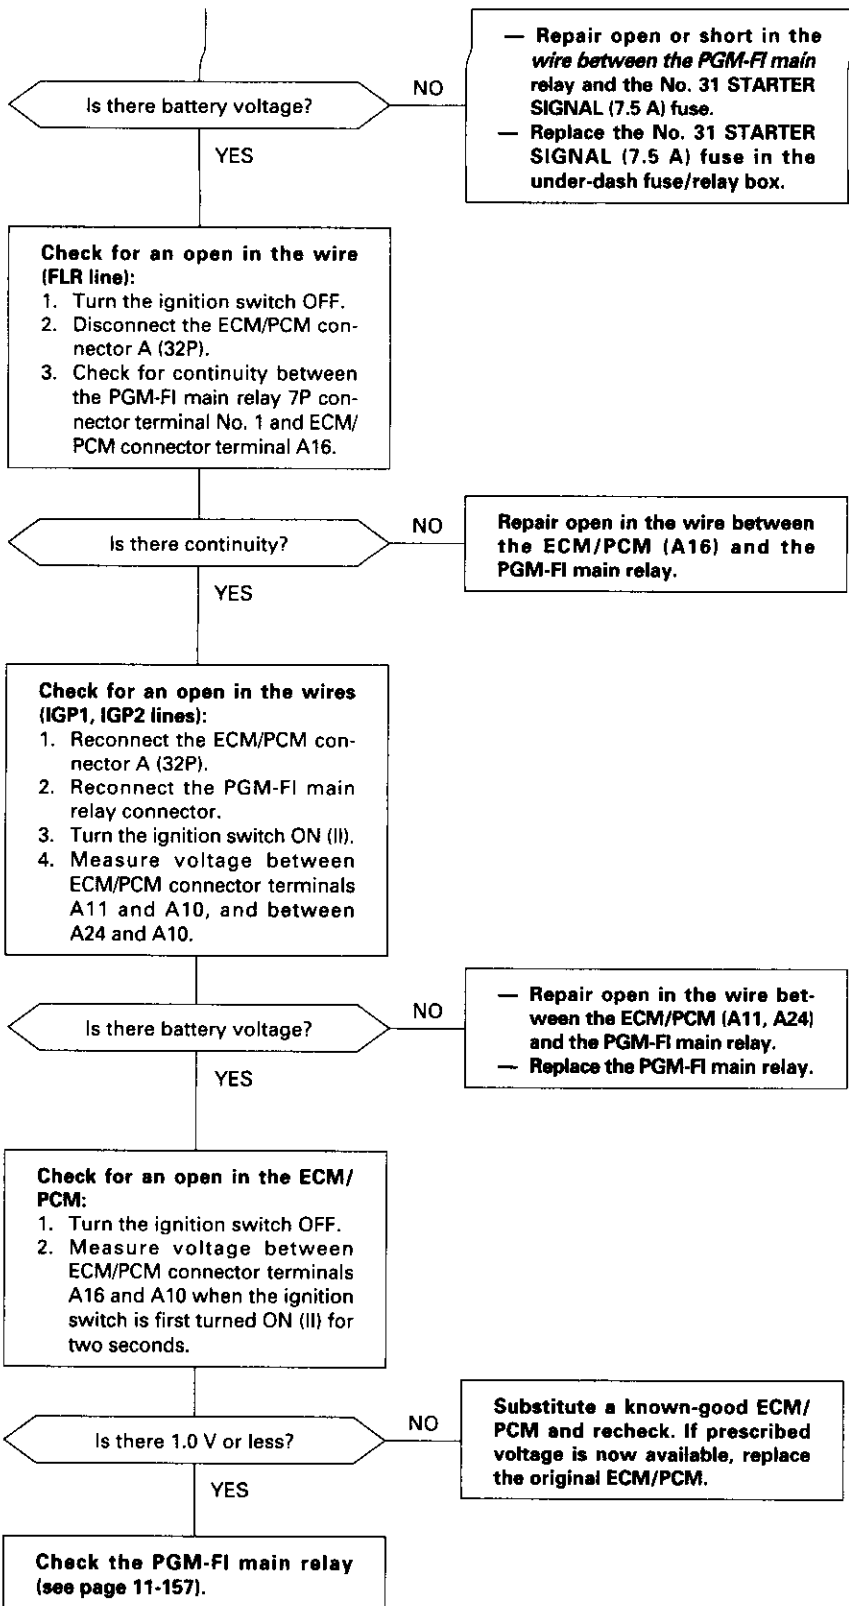


Fuel Supply System

Fuel Tank

Replacement

⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from your work area.

1. Relieve the fuel pressure (see pages 11-150, 151).
2. Remove the seat cushion (see section 20).
3. Remove the access panel from the floor.
4. Disconnect the 2P (C565) and 3P (C564) connectors ('96 D16Y8 engine (coupe) '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '97 D16Y8 engine (coupe: all models, sedan: KL model '98-all models): and 6P (C568) connector).
5. Disconnect the hose and quick-connect fittings (see pages 11-146, 147).
6. Jack up the vehicle, and support it with jackstands.
7. Remove the fuel tank cover ('96, '97 model) or the fuel hose joint protector.
8. Remove the drain bolt, and drain the fuel into an approved container.
9. Disconnect the hoses (see page 11-146). Slide back the clamps, then twist hoses as you pull, to avoid damaging them.
10. Place a jack, or other support, under the tank.
11. Remove the strap nuts, and let the straps fall free.
12. Remove the fuel tank. If it sticks on the undercoat applied to its mount, carefully pry it off the mount.
13. Install the drain bolt with a new washer, then coat the drain bolt with Noxrust 124B, Allow the Noxrust dry for 20 minutes.
14. Install the remaining parts in the reverse order of removal.

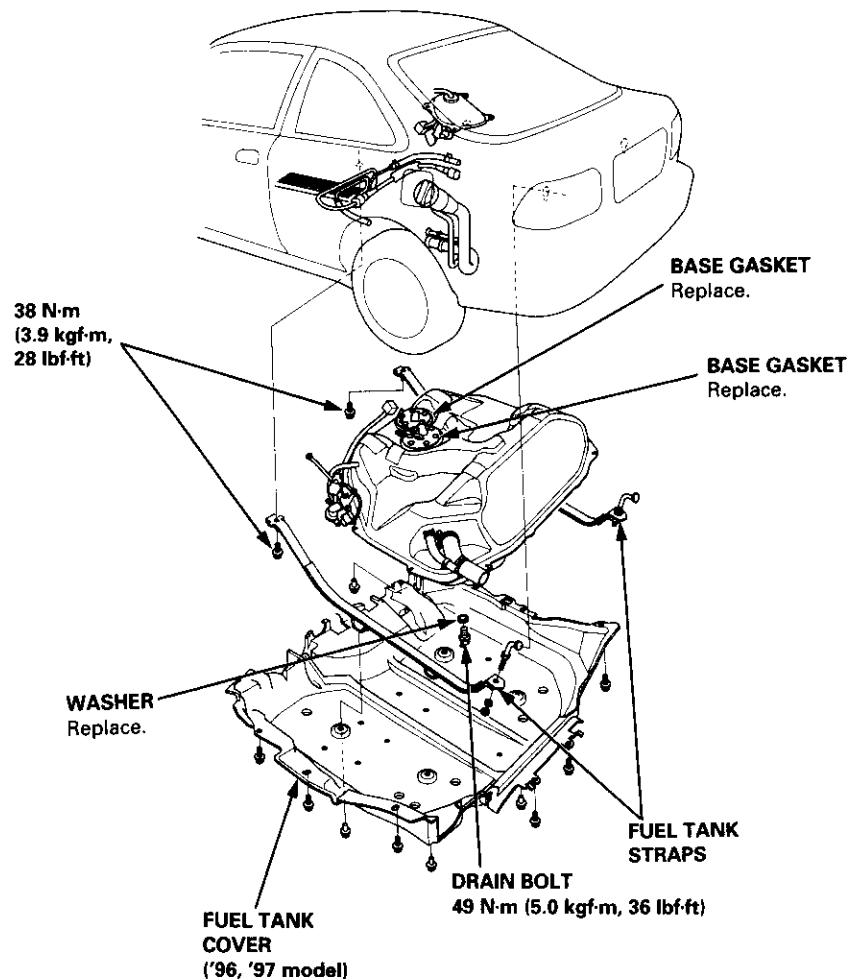




Intake Air System


System Description

The system supplies air for all engine needs. It consists of the intake air pipe, Air Cleaner (ACL), intake air duct, Throttle Body (TB), Idle Air Control (IAC) Valve and intake manifold. A resonator in the intake air pipe provides additional silencing as air is drawn into the system.


D16Y5, D16Y8 engine (M/T)

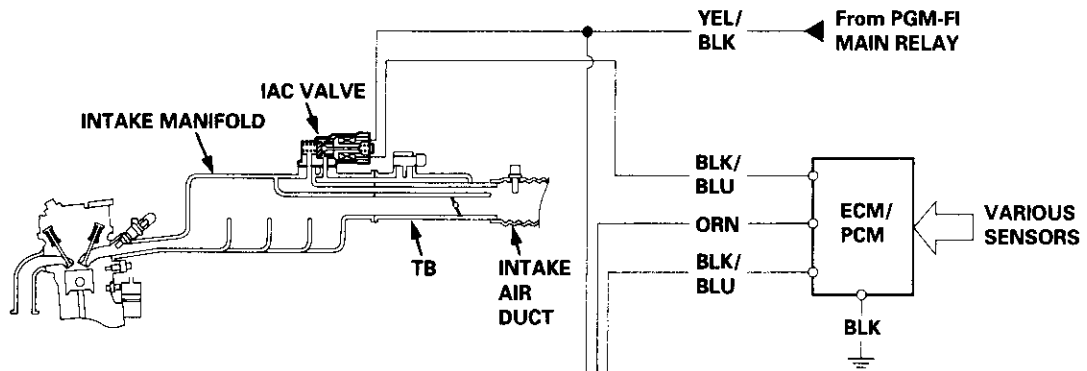

D16Y5 engine (CVT), D16Y8 engine (A/T):

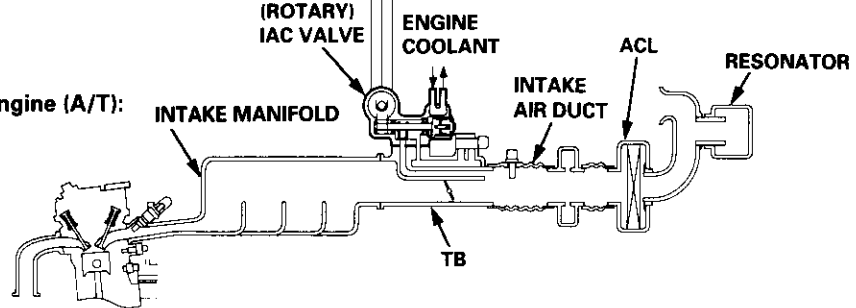

D16Y7 engine:

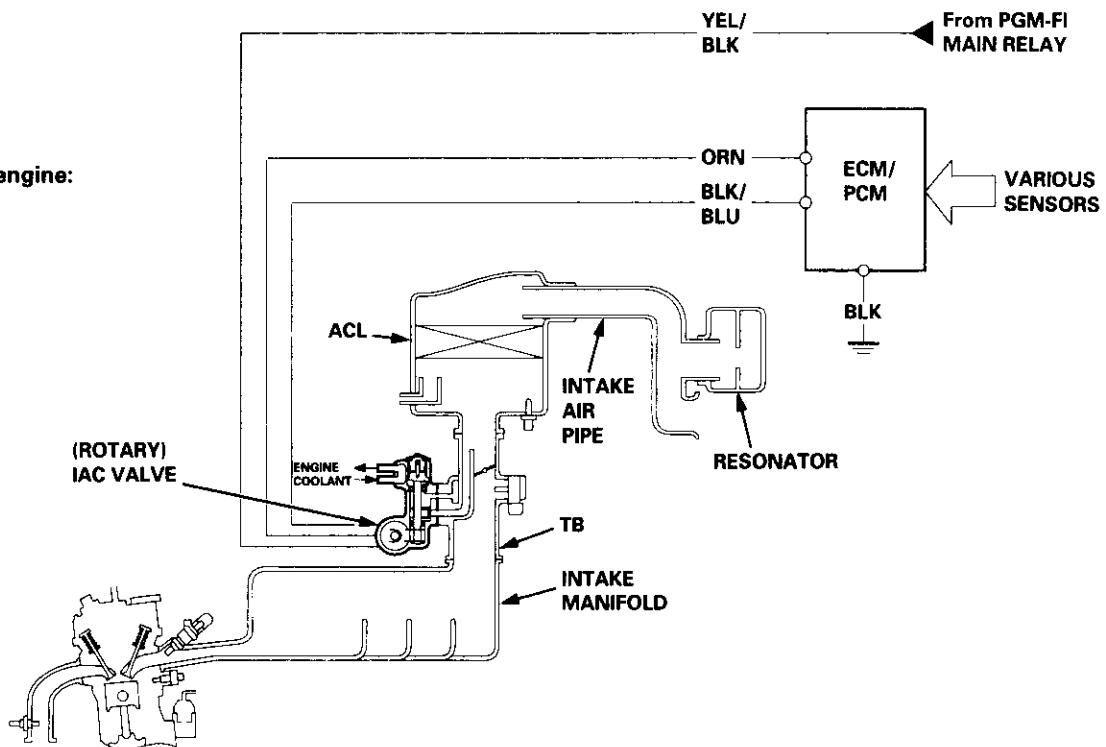


Intake Air System


Air Cleaner (ACL)

NOTE: Do not clean the ACL element with compressed air (except dry type).

D16Y5, D16Y8 engine:

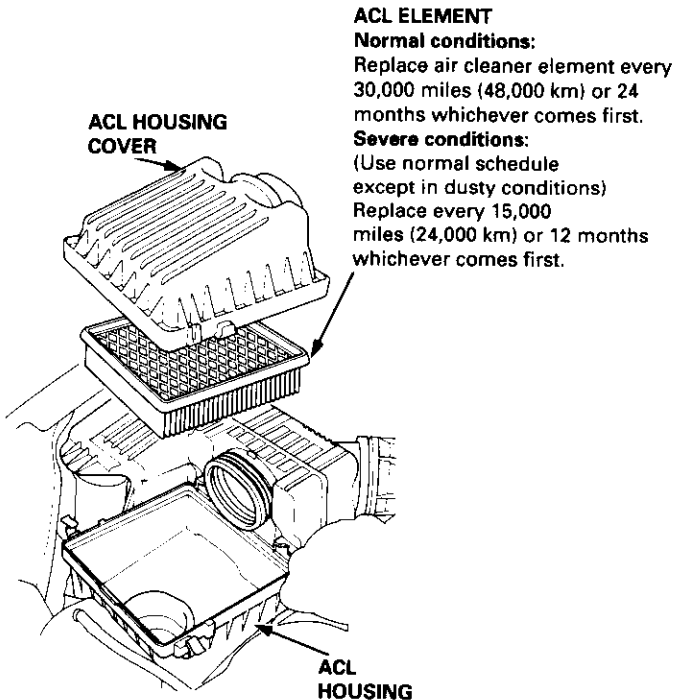

D16Y7 engine:

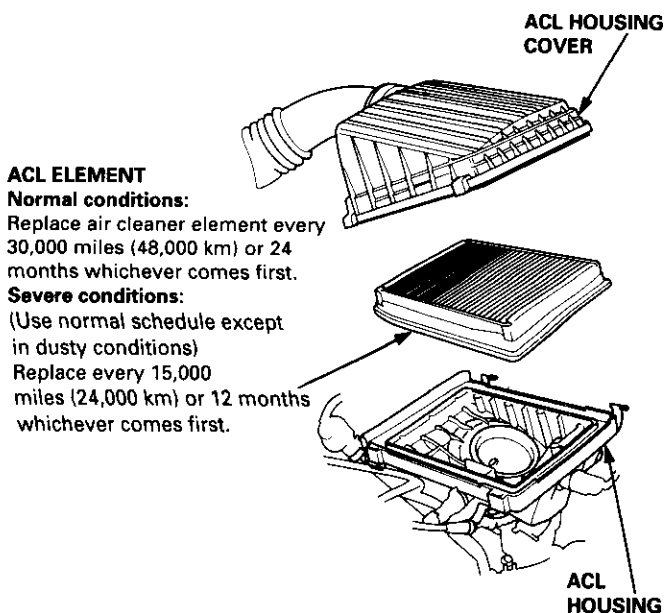


Throttle Cable


Inspection/Adjustment

1. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P** position, M/T in neutral) until the radiator fan comes on, then let it idle.
2. Check that the throttle cable operates smoothly with no binding or sticking. Repair as necessary.
3. Check cable free play at the throttle linkage. Cable deflection should be 10 - 12 mm (3/8 - 1/2 in.).

D16Y5, D16Y8 engine:

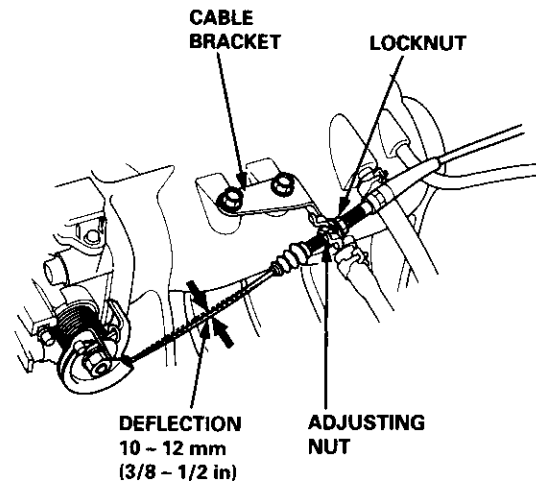

D16Y7 engine:

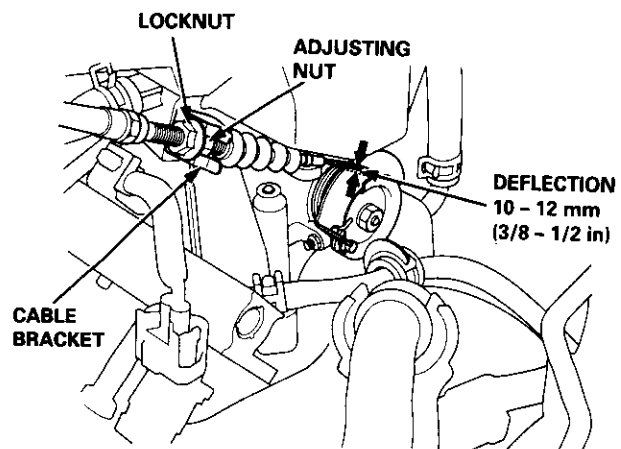


4. If deflection is not within specs, loosen the locknut, turn the adjusting nut until the deflection is as specified, then retighten the locknut.
5. With the cable properly adjusted, check the throttle valve to be sure it opens fully when you push the accelerator pedal to the floor. Also check the throttle valve to be sure it returns to the idle position whenever you release the accelerator pedal.




Installation

1. Open the throttle valve fully, then install the throttle cable in the throttle linkage, and install the cable housing in the cable bracket.

D16Y5, D16Y8 engine:

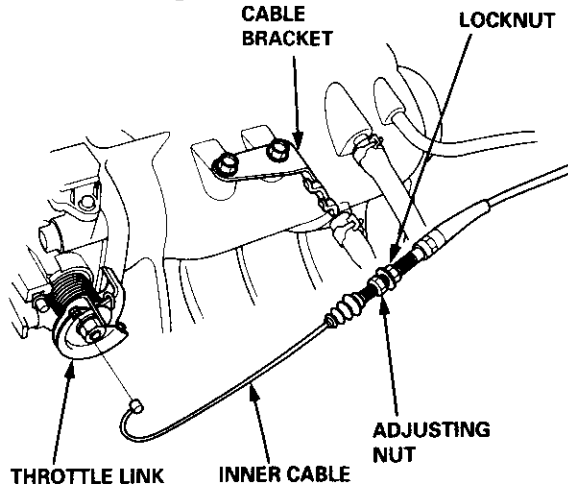


D16Y7 engine:

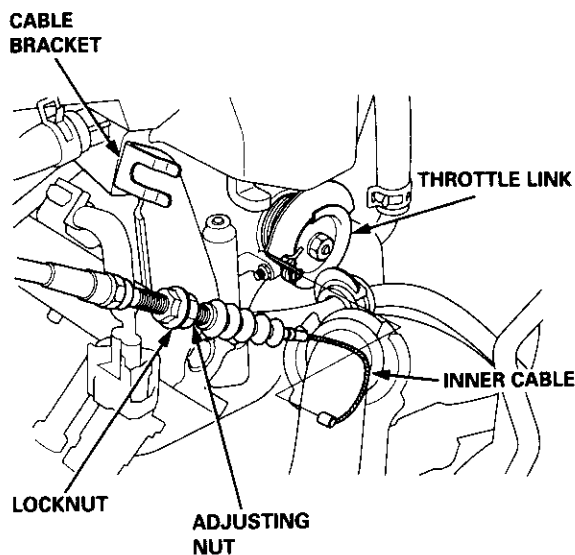


2. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P** position, M/T in neutral) until the radiator fan comes on, then let it idle.
3. Hold the cable sheath, removing all slack from the cable.

4. Set the locknut on the cable bracket. Adjust the adjusting nut so that its free play is 0 mm.
5. Remove the cable sheath from the throttle bracket, reset the adjusting nut and tighten the locknut.

D16Y5, D16Y8 engine:

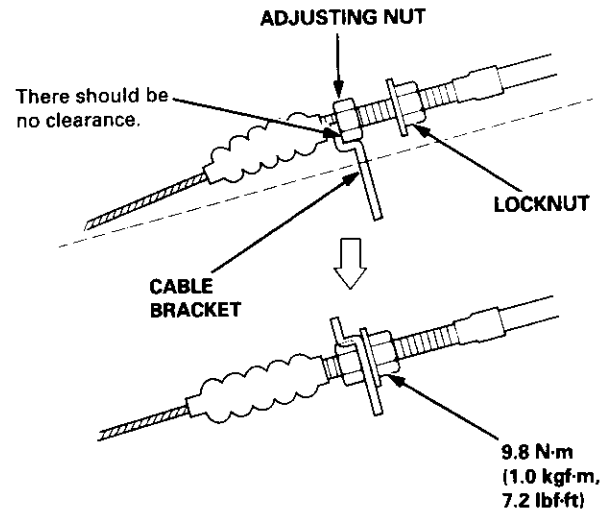

D16Y7 engine:

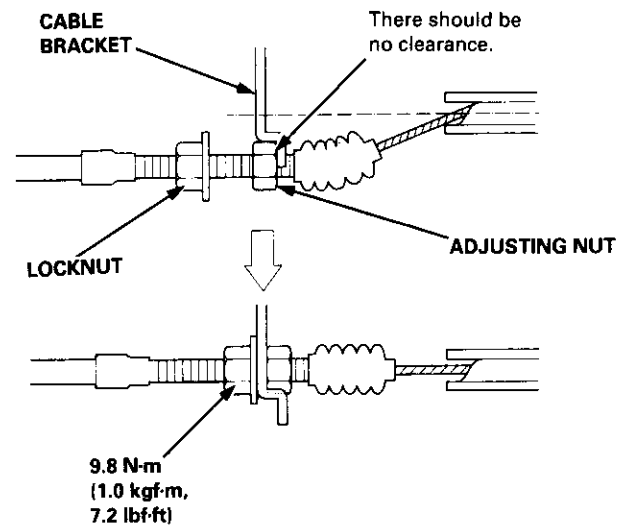


Intake Air System

Throttle Body

Description

The throttle body is either a single-barrel side-draft type (D16Y5, D16Y8 engine) or a down-draft type (D16Y7 engine). The lower portion of the throttle valve is heated by engine coolant from the cylinder head. The idle adjusting screw which regulates the bypass air is located on the top of the throttle body.

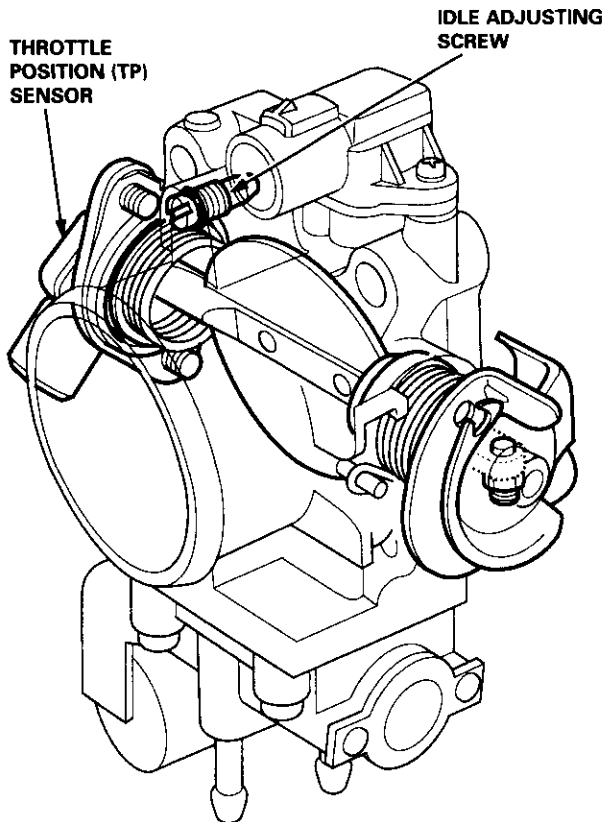


Inspection

1. Check that the throttle cable operates smoothly without binding or sticking.


If there are any abnormalities, check for:

- Excessive wear or play in the throttle valve shaft.
- Sticky or binding throttle lever at the fully closed position.
- Clearance between throttle stop screw and throttle lever at the fully closed position.

D16Y5, D16Y8 engine:

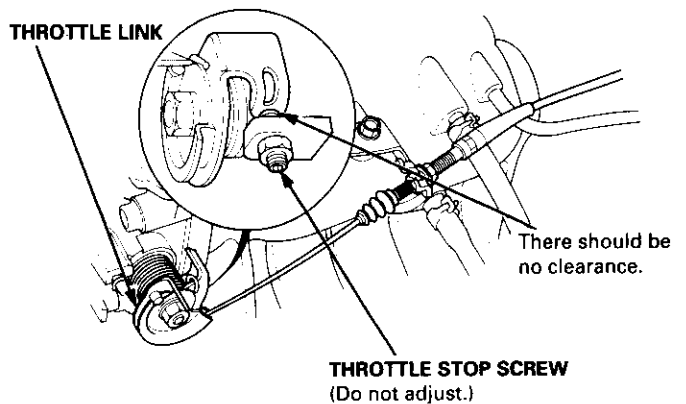

D16Y7 engine:

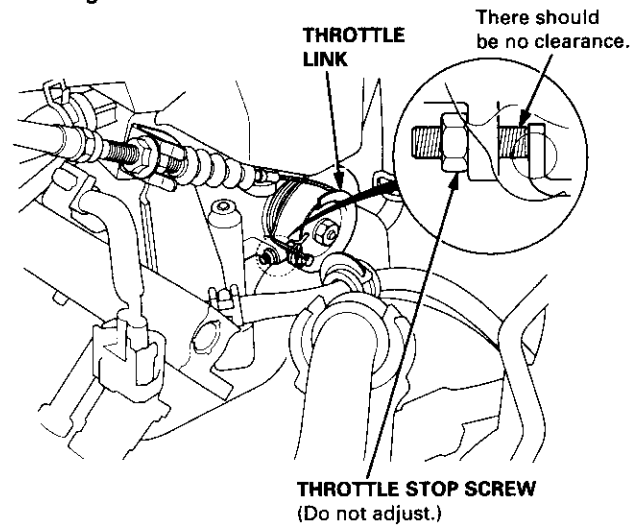


Replace the throttle body if there is excessive play in the throttle valve shaft or if the shaft is binding or sticking.




Removal

D16Y5, D16Y8 engine:

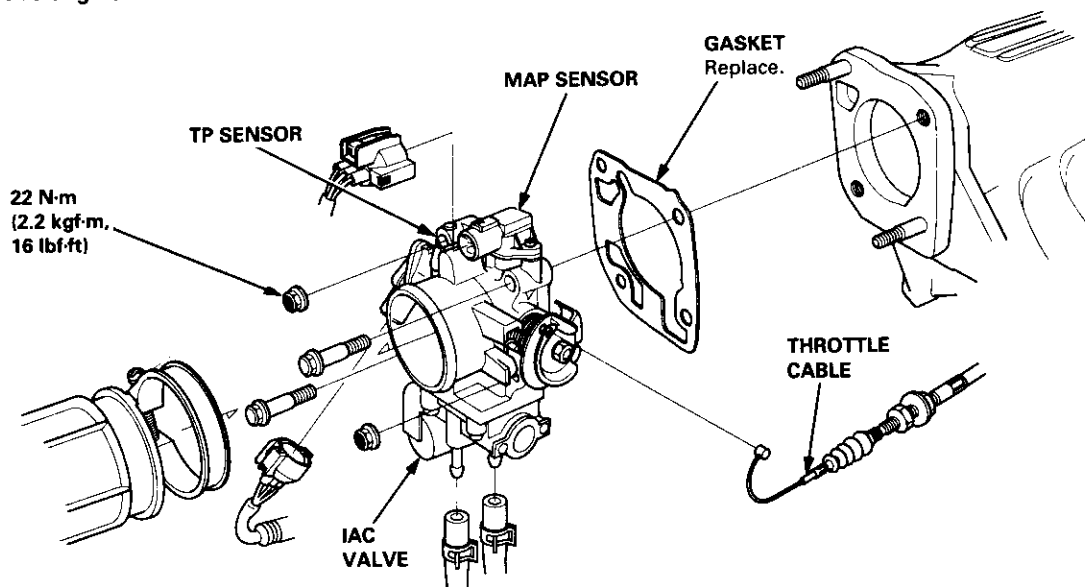

D16Y7 engine:

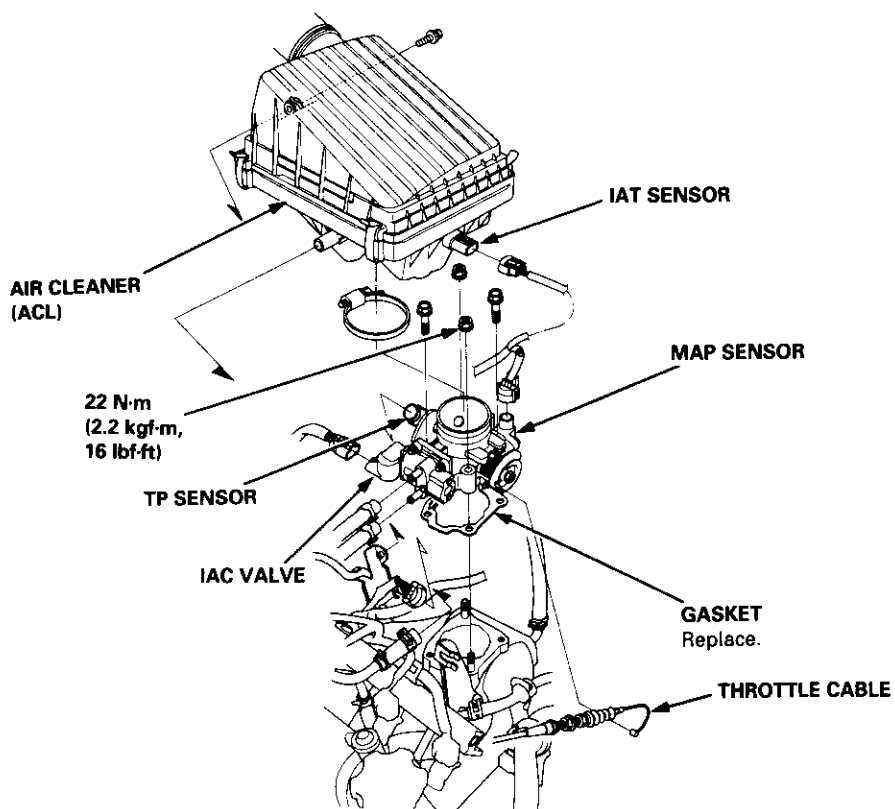

NOTE:

- Do not adjust the throttle stop screw.
- After reassembly, adjust the throttle cable (see page 11-162).
- The TP sensor is not removable.


(cont'd)

Intake Air System


Throttle Body (cont'd)

Disassembly

D16Y5, D16Y8 engine:

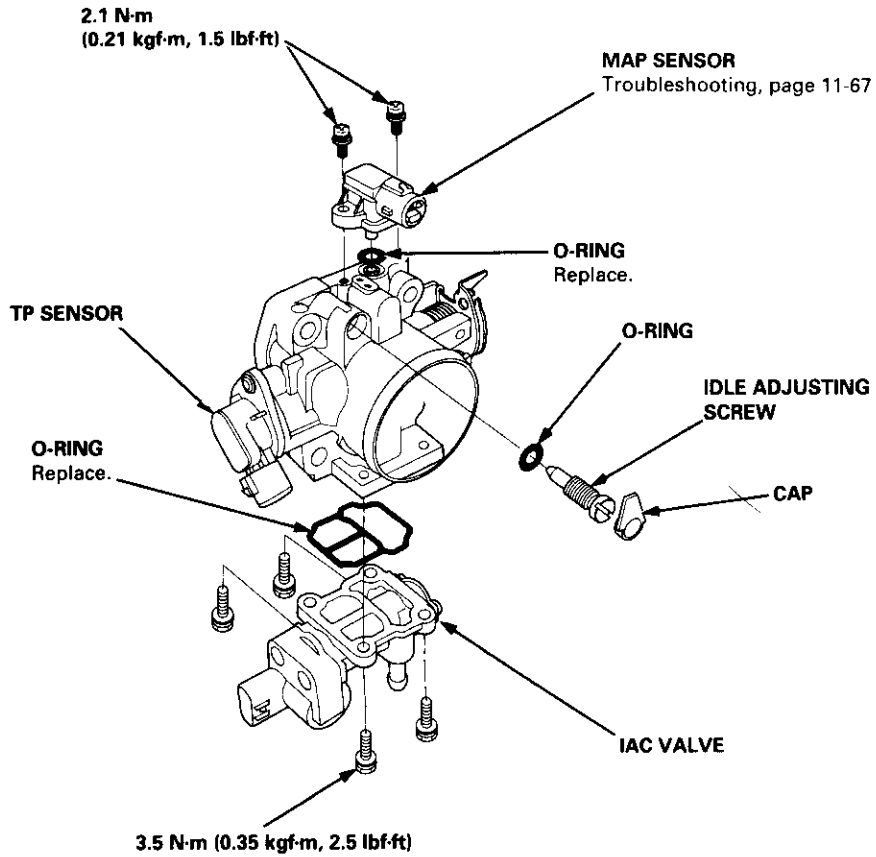

D16Y7 engine:

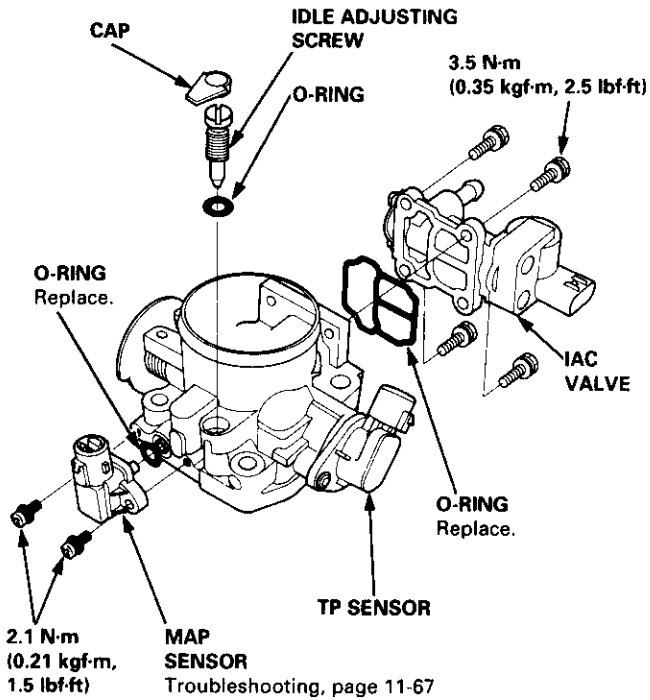



System Description

The emission control system includes a Three Way Catalytic Converter (TWC), Exhaust Gas Recirculation (EGR) system*, Positive Crankcase Ventilation (PCV) system and Evaporative Emission (EVAP) Control system. The emission control system is designed to meet federal and state emission standards.

*: D16Y5 engine

Tailpipe Emission

Inspection

⚠ WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

1. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P** position, M/T in neutral) until the radiator fan comes on, then let it idle.
2. Connect a tachometer.
3. Check and, if necessary, adjust the idle speed (see page 11-141).
4. Warm up and calibrate the CO meter according to the meter manufacturer's instructions.
5. Check idle CO with the headlights, heater blower, rear window defogger, cooling fan, and air conditioner off.

NOTE: (Canada) Pull the parking brake lever up. Start the engine, then check that the headlights are off.

CO meter should indicate 0.1% maximum.


NOTE: '98 D16Y5 engine – If the idle speed increases to 810 ± 50 rpm, this means the EVAP system is purging the canister. To stop the purging temporarily, raise the engine speed above 1,000 rpm with the accelerator pedal, then slowly release the pedal.

Three Way Catalytic Converter (TWC)


Description

The Three Way Catalytic Converter (TWC) is used to convert hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) in the exhaust gas to carbon dioxide (CO₂), dinitrogen (N₂) and water vapor.

D16Y5, D16Y7 engine:

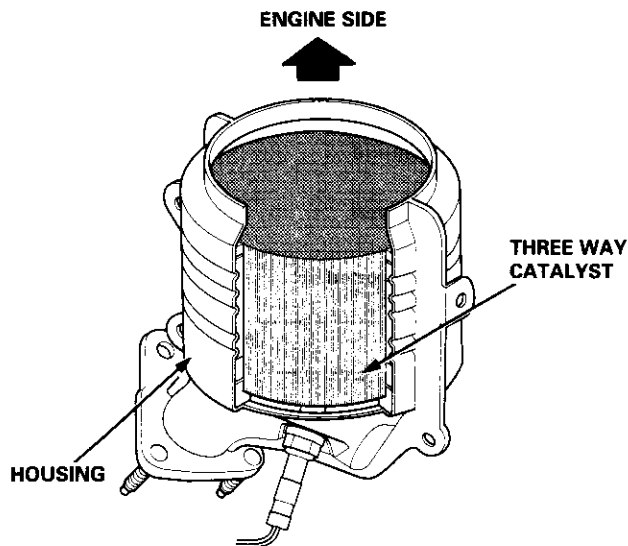

D16Y8 engine:

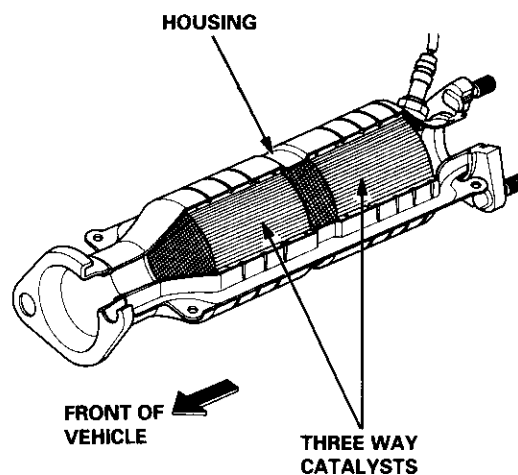

(cont'd)

Emission Control System

Three Way Catalytic Converter (TWC) (cont'd)

P0420 The scan tool indicates Diagnostic Trouble Code (DTC) P0420: Catalyst system efficiency below threshold.

Description

This system evaluates the catalyst's capacity by means of the HO2S (Primary and Secondary) output during stable driving conditions. If deterioration has been detected during two consecutive driving cycles, the MIL comes on and DTC P0420 will be stored.

NOTE: If some of the DTCs listed below are stored at the same time as DTC P0420, troubleshoot those DTCs first, then troubleshoot DTC P0420.


P0137, P0138: Secondary HO2S (Sensor 2)

P0141: Secondary HO2S (Sensor 2) Heater

Possible Cause

- TWC Deterioration
- Exhaust system leakage

Troubleshooting Flowchart

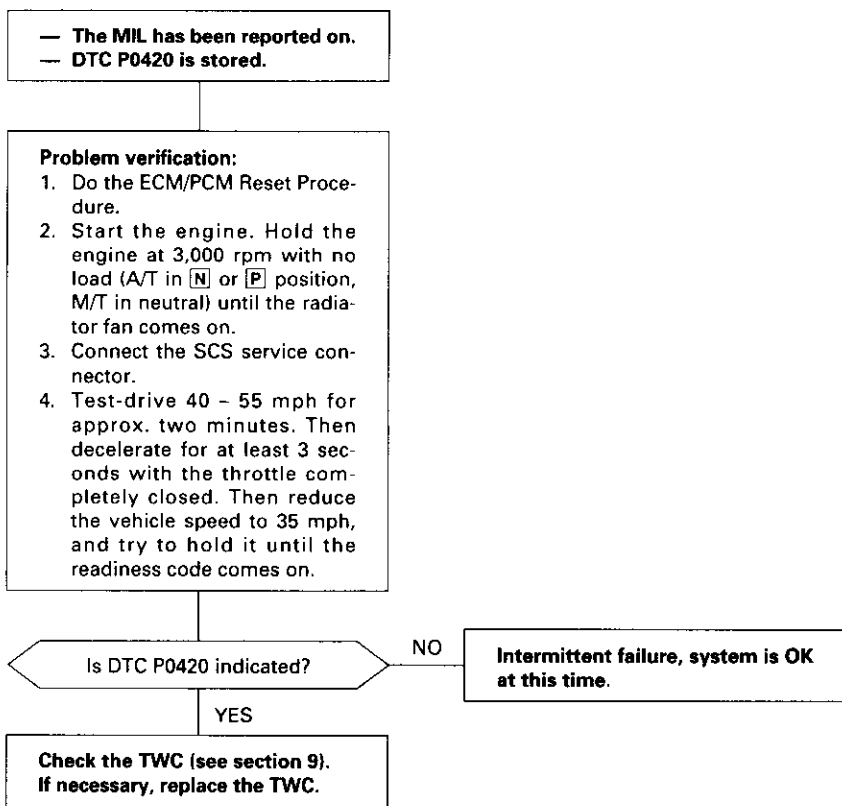





Exhaust Gas Recirculation (EGR) System (D16Y5 engine)

Description

The EGR system is designed to reduce oxides of nitrogen emissions (NO_x) by recirculating exhaust gas through the EGR valve and the intake manifold into the combustion chambers. It is composed of the EGR valve, EGR vacuum control valve, EGR control solenoid valve, ECM and various sensors.

The ECM contains memories for ideal EGR valve lifts for varying operating conditions. The EGR valve lift sensor detects the amount of EGR valve lift and sends the information to the ECM. The ECM then compares it with the ideal EGR valve lift which is determined by signals sent from the other sensors. If there is any difference between the two, the ECM cuts current to the EGR control solenoid valve to reduce vacuum applied to the EGR valve.

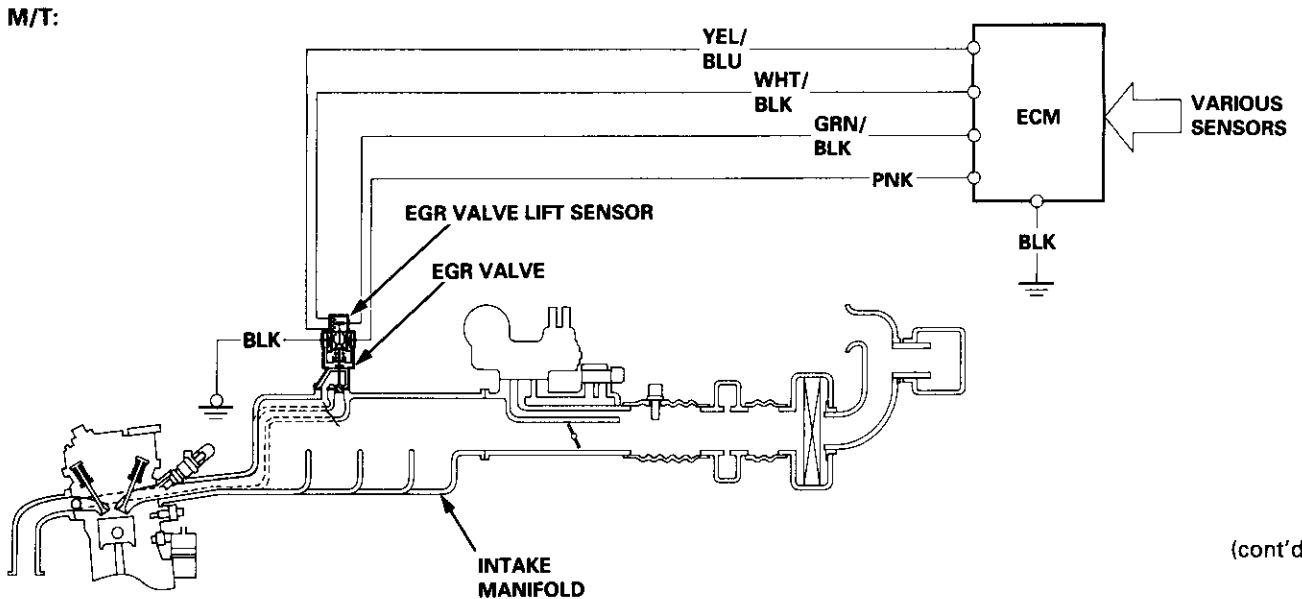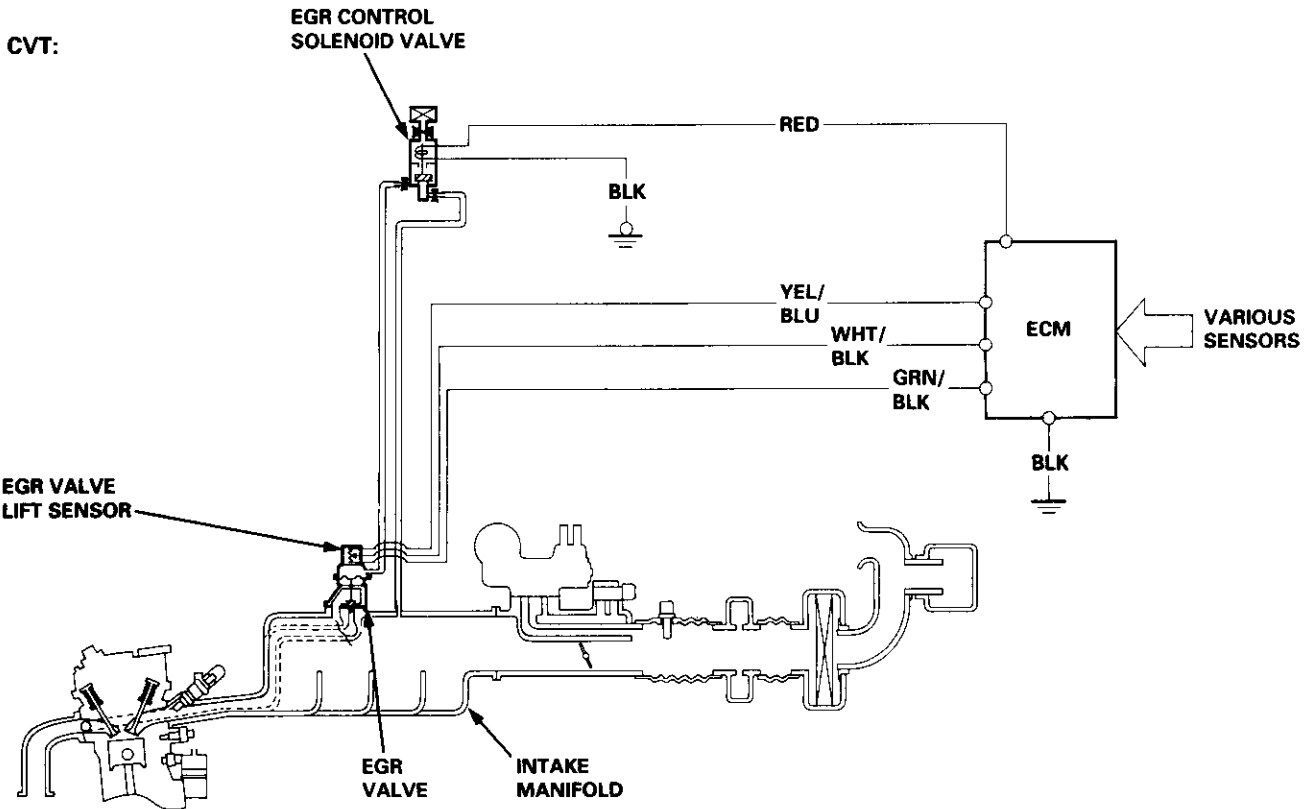

(cont'd)

Emission Control System

Exhaust Gas Recirculation (EGR) System (D16Y5 engine) (cont'd)

P0401 The scan tool indicates Diagnostic Trouble Code (DTC) P0401: Insufficient flow in the Exhaust Gas Recirculation (EGR) system.

Description


Deterioration (clogging, leakage, etc.) in the EGR line or EGR valve is detected by means of the changes in MAP before and after the operation of the EGR valve.

If deterioration has been detected during two consecutive driving cycles, the MIL will come on and DTC P0401 will be stored.

Possible Causes

- Clogging, leakage in the EGR line
- Faulty EGR valve

Troubleshooting Flowchart

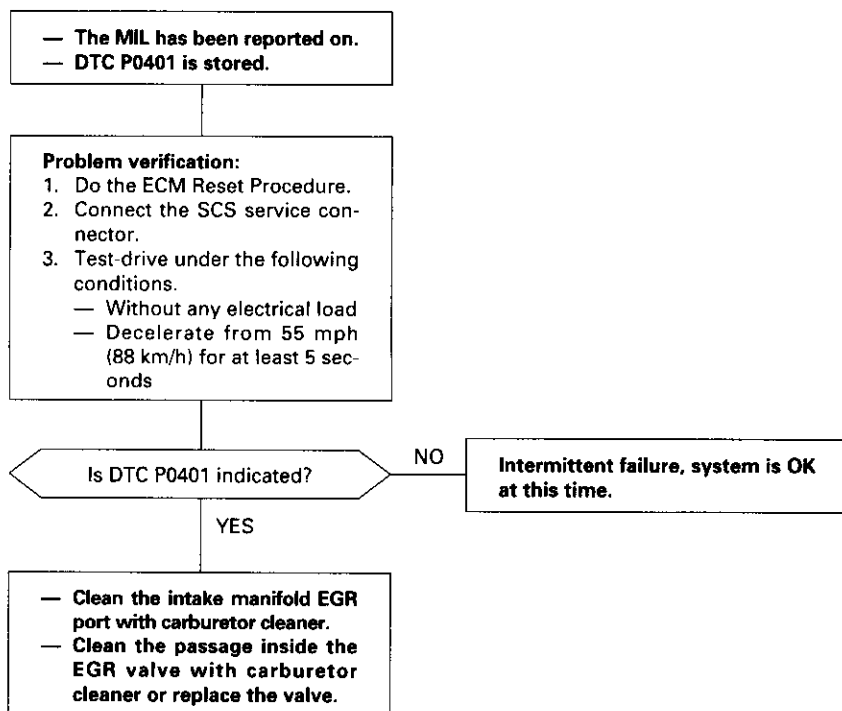




P1491 The scan tool indicates Diagnostic Trouble Code (DTC) P1491: A malfunction in the Exhaust Gas Recirculation (EGR) system.

CVT (M/T see page 11-174):

- The MIL has been reported on.
- DTC P1491 is stored.


Problem verification:

1. Do the ECM Reset Procedure.
2. Connect the SCS service connector.
3. Start the engine. Hold the engine at 3,000 rpm with no load (transmission in **N** or **P** position) until the radiator fan comes on.
4. Drive the vehicle on the road for approx. 10 minutes. Try to keep the engine speed in the 1,700 – 2,500 rpm range.

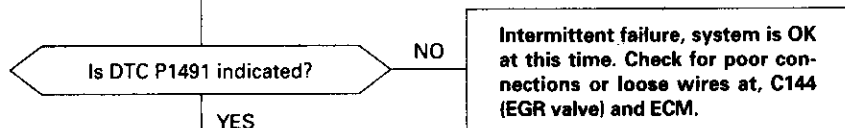


Check for vacuum to the EGR valve:

1. Disconnect the No. 16 hose from the EGR valve.
2. Connect a vacuum pump/gauge to the hose.
3. Start the engine and let it idle.

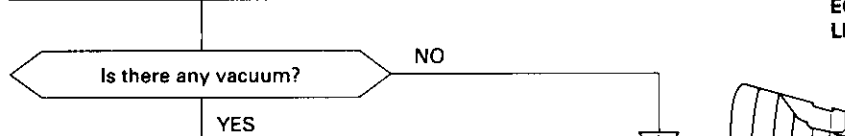


Check for a malfunction in the EGR control solenoid valve:

1. Disconnect the EGR control solenoid valve 2P connector.
2. Recheck the No. 16 hose for vacuum.

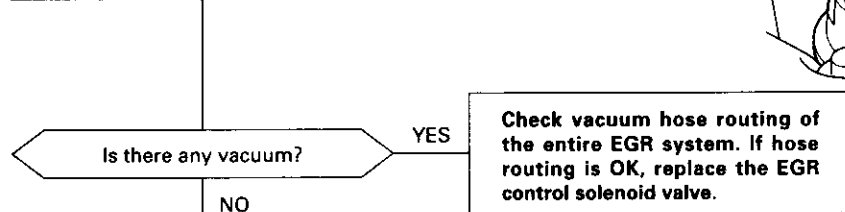

Substitute a known-good ECM and recheck. If symptom/indication goes away, replace the original ECM.

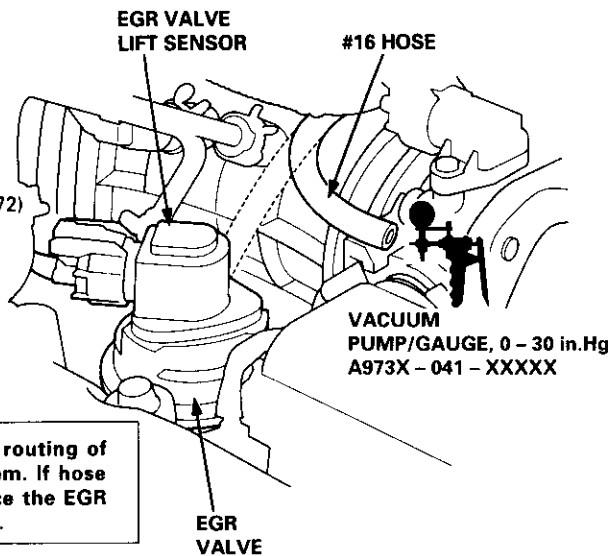


(cont'd)

Emission Control System

Exhaust Gas Recirculation (EGR) System (D16Y5 engine CVT) (cont'd)

(From page 11-171)

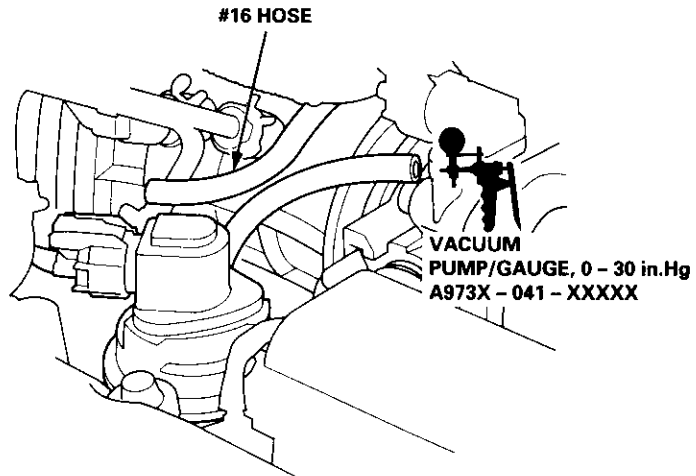

Check for a malfunction in the EGR valve:

1. Move the vacuum pump/gauge to the EGR valve.
2. With the engine at idle, apply 26.7 kPa (200 mmHg, 8.0 in.Hg) of vacuum to the EGR valve.

Does the engine stall or run rough and does the EGR valve hold vacuum?

NO


Replace the EGR valve.

YES

Check the vacuum routing:

1. Reconnect the vacuum pump/gauge to the No. 16 hose.
2. Start the engine and let it idle.
3. At the EGR control solenoid valve side, connect the battery positive terminal to the EGR control solenoid valve connector terminal No. 1.
4. While watching the vacuum gauge, connect the battery negative terminal to the EGR control solenoid valve 2P connector terminal No. 2.

EGR CONTROL SOLENOID VALVE 2P CONNECTOR

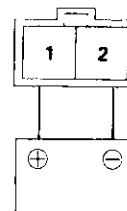

Terminal side of male terminals

Is there approx. 26.7 kPa (200 mmHg, 8.0 in.Hg) of vacuum within 1 second?

NO

Check the vacuum hoses:

1. Turn the ignition switch OFF.
2. Inspect the No. 16 and No. 10 hoses for leaks, restrictions or misrouting.

Are the hoses OK?

NO

Correct as necessary.

YES

Replace the EGR control solenoid valve.

(To page 11-173)



(From page 11-172)

Check for an open in the wire (E SOL line):

1. Turn the ignition switch OFF.
2. Disconnect the 2P connector from the EGR control solenoid valve.
3. Disconnect the ECM connector A (32P) from the ECM.
4. Check for continuity between ECM connector terminal A7 and the EGR control solenoid valve 2P connector terminal No. 2.

Is there continuity? NO

Repair open in the wire between the EGR control solenoid valve and the ECM (A7).

YES

Check for a short in the wire (ESOL line):
Check for continuity between the EGR control solenoid valve 2P connector terminal No. 2 and body ground.

Is there continuity? YES

Repair short in the wire between the EGR control solenoid valve and the ECM (A7).

NO

Check for an open in the wire (GND line):
Check for continuity between the EGR control solenoid valve 2P connector terminal No. 1 and body ground.


Is there continuity? NO

Repair open in the wire between the EGR control solenoid valve and G101.



YES

Substitute a known-good ECM and recheck. If symptom/indication goes away, replace the original ECM.

EGR CONTROL SOLENOID VALVE 2P CONNECTOR (C142)

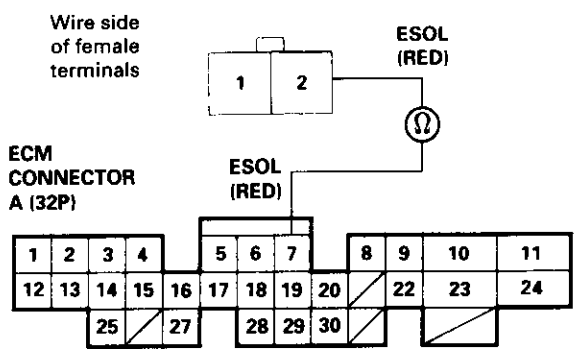

Wire side of female terminals

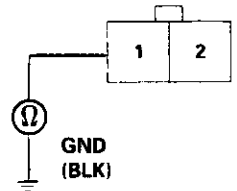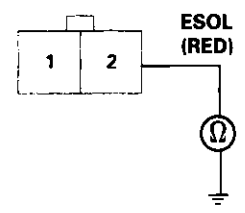

(cont'd)

Emission Control System

Exhaust Gas Recirculation System (D16Y5 engine) (cont'd)

M/T:

— The MIL has been reported on.
— DTC P1491 is stored.

Problem verification:

1. Do the ECM Reset Procedure.
2. Connect the SCS service connector.
3. Start the engine. Hold the engine at 3,000 rpm with no load (transmission in neutral) until the radiator fan comes on.
4. Drive the vehicle on the road for approx. 10 minutes. Try to keep the engine speed in the 1,700 - 2,500 rpm range.

Is DTC P1491 indicated?

NO: Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C144 (EGR valve) and ECM.

YES

Check for a malfunction in the EGR valve:

1. Start the engine and let it idle.
2. Measure voltage between the EGR valve 6P connector terminal No. 4 and No. 6.

Is there battery voltage?

NO: **Check the EGR valve:**

1. Turn the ignition switch OFF.
2. Disconnect the EGR valve 6P connector.
3. Connect the battery positive terminal to EGR valve 6P connector terminal No. 6.
4. Start the engine and let it idle, then connect the battery negative terminal to EGR valve 6P connector terminal No. 4.

YES: Substitute a known-good ECM and recheck. If symptom/indication goes away, replace the original ECM.


Does the engine stall or run rough?

NO: Replace the EGR valve.

YES


(To page 11-175)

EGR VALVE 6P CONNECTOR (C144)

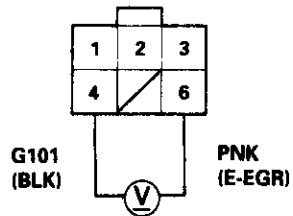

Wire side of male terminals


EGR VALVE 6P CONNECTOR

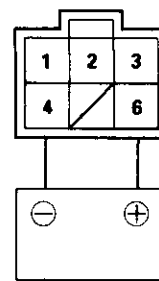

Wire side of female terminals



(From page 11-174)

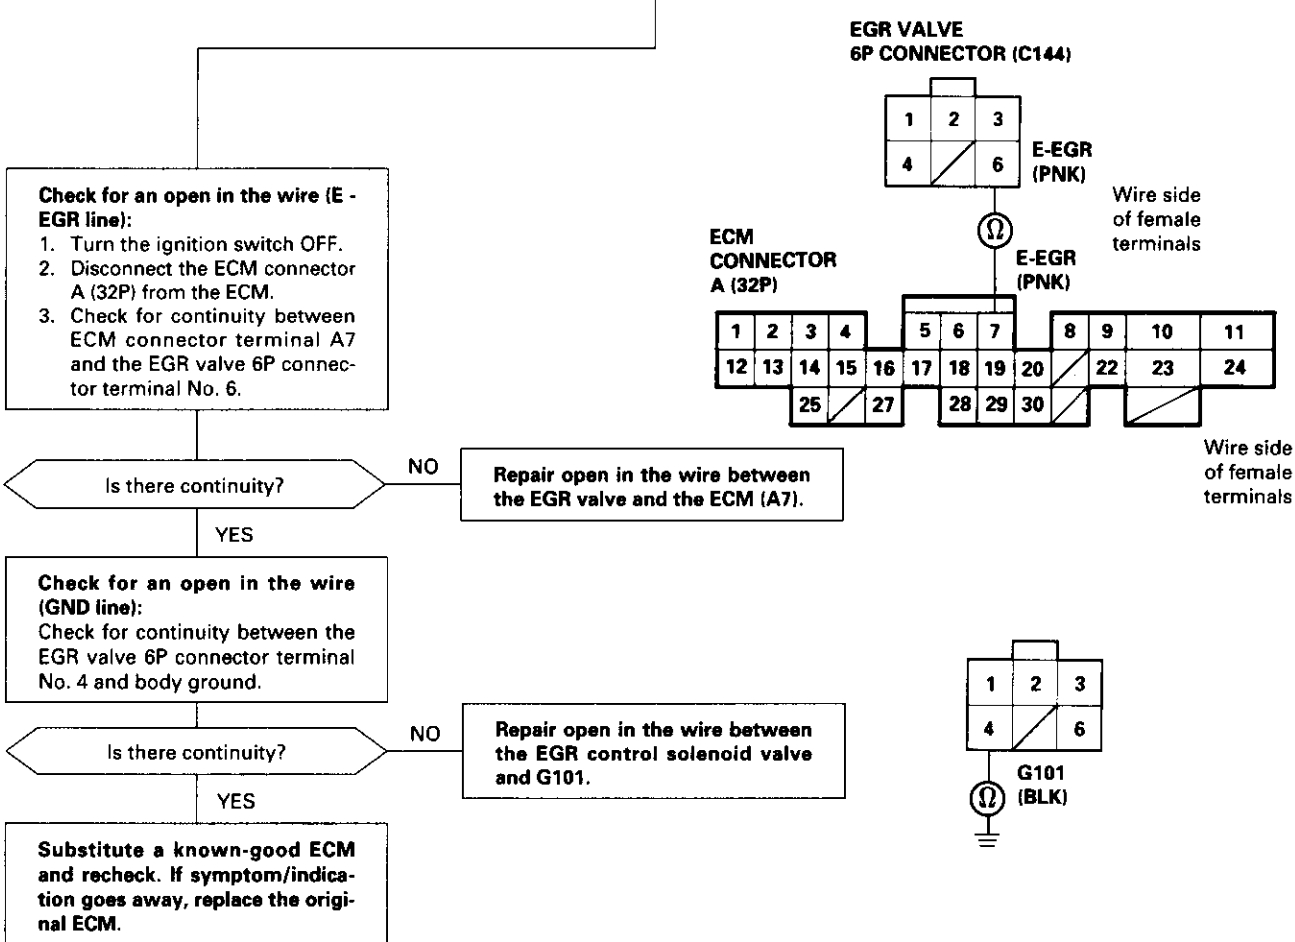


(cont'd)


Emission Control System

Exhaust Gas Recirculation System (D16Y5 engine) (cont'd)


P1498 The scan tool indicates Diagnostic Trouble Code (DTC) P1498: A high voltage problem in the Exhaust Gas Recirculation (EGR) valve lift sensor circuit.

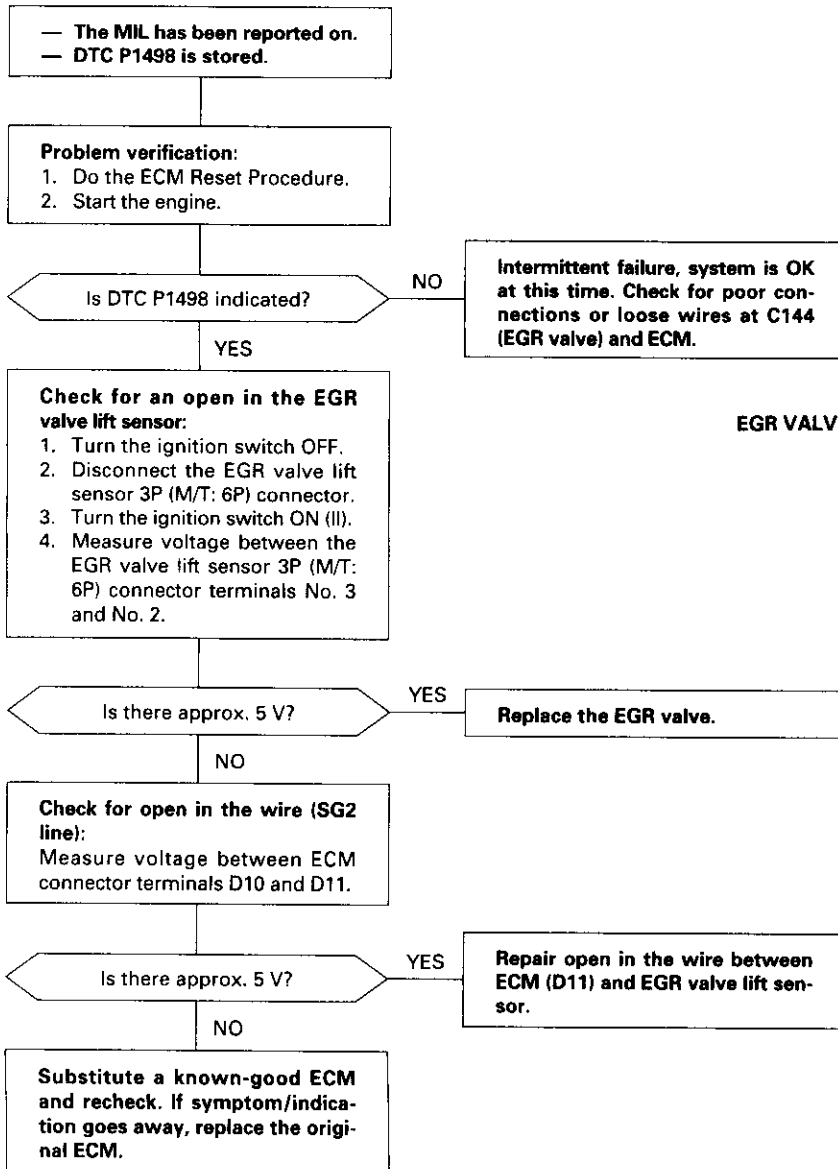

EGR VALVE LIFT SENSOR 3P (M/T: 6P) CONNECTOR (C144)
CVT:

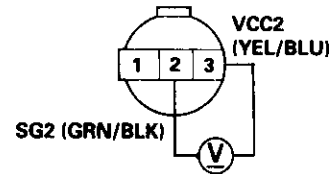


M/T:

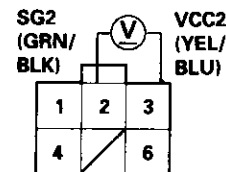

Wire side of female terminals

ECM CONNECTOR D (16P)

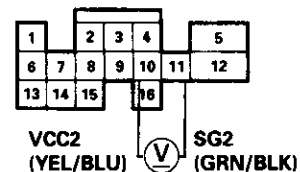

Wire side of female terminals




Positive Crankcase Ventilation (PCV) System


Description

The Positive Crankcase Ventilation (PCV) system is designed to prevent blow-by gas from escaping to the atmosphere. The PCV valve contains a spring-loaded plunger. When the engine starts, the plunger in the PCV valve is lifted in proportion to intake manifold vacuum and the blow-by gas is drawn directly into the intake manifold.

D16Y5, D16Y8 engine:

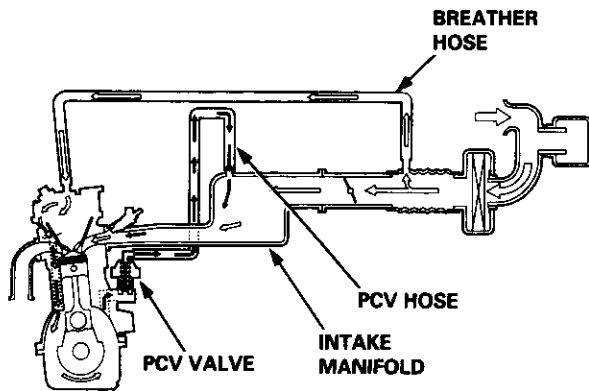


D16Y7 engine:

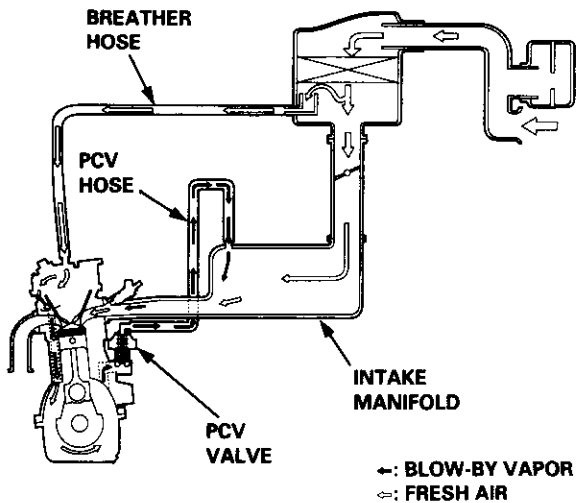


Inspection

1. Check the PCV hoses and connections for leaks and clogging.
2. At idle, make sure there is a clicking sound from the PCV valve when the hose between PCV valve and intake manifold is lightly pinched with your fingers or pliers.

D16Y5, D16Y8 engine:

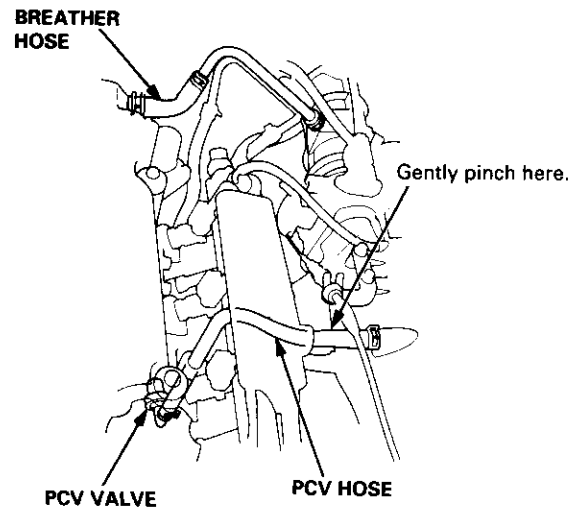

D16Y7 engine:

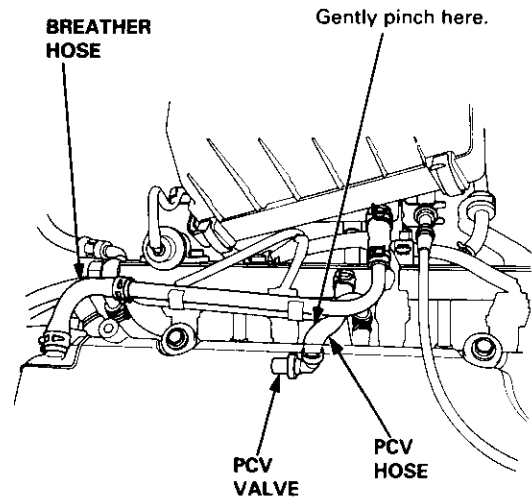

If there is no clicking sound, check the PCV valve grommet for cracks and damage. If the grommet is OK, replace the PCV valve and recheck.

Emission Control System

Evaporative Emission (EVAP) Controls

Description


The evaporative emission controls are designed to minimize the amount of fuel vapor escaping to the atmosphere. The system consists of the following components:

A. Evaporative Emission (EVAP) Control Canister

An EVAP control canister is used for the temporary storage of fuel vapor until the fuel vapor can be purged from the EVAP control canister into the engine and burned.

B. Vapor Purge Control System

EVAP control canister purging is accomplished by drawing fresh air through the EVAP control canister and into a port on the intake manifold. The purging vacuum is controlled by the EVAP purge control solenoid valve.

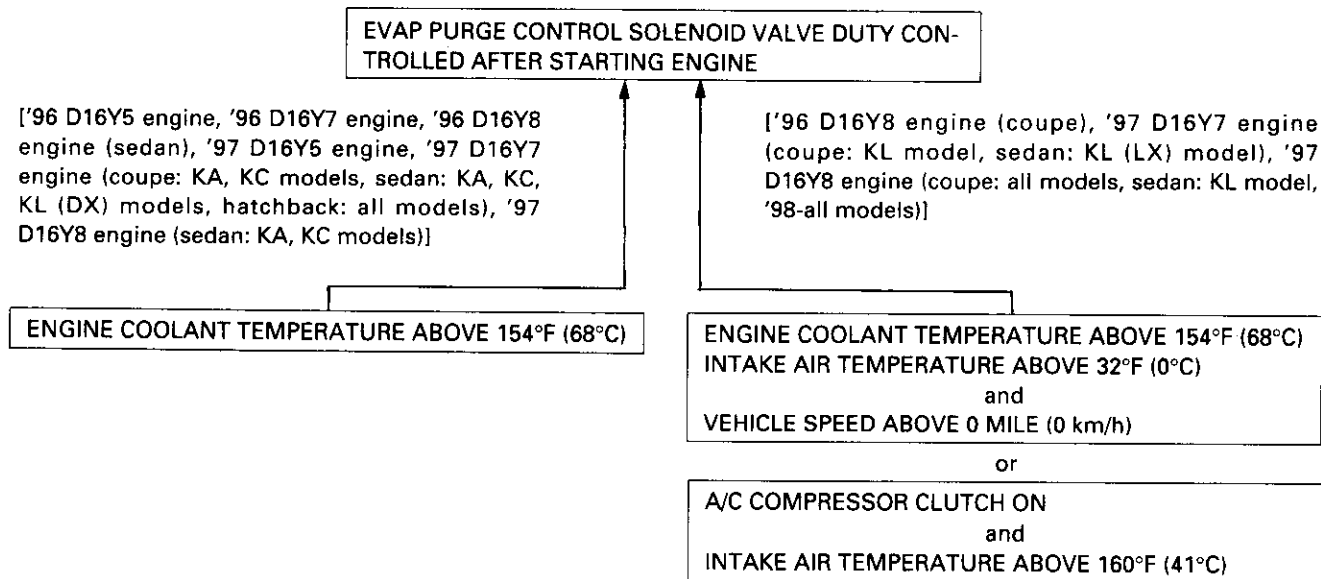


C. Fuel Tank Vapor Control System


When fuel vapor pressure in the fuel tank is higher than the set value of the EVAP two way valve, the valve opens and regulates the flow of fuel vapor to the EVAP control canister.



'96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine (all models), '98 D16Y8 engine (all models):

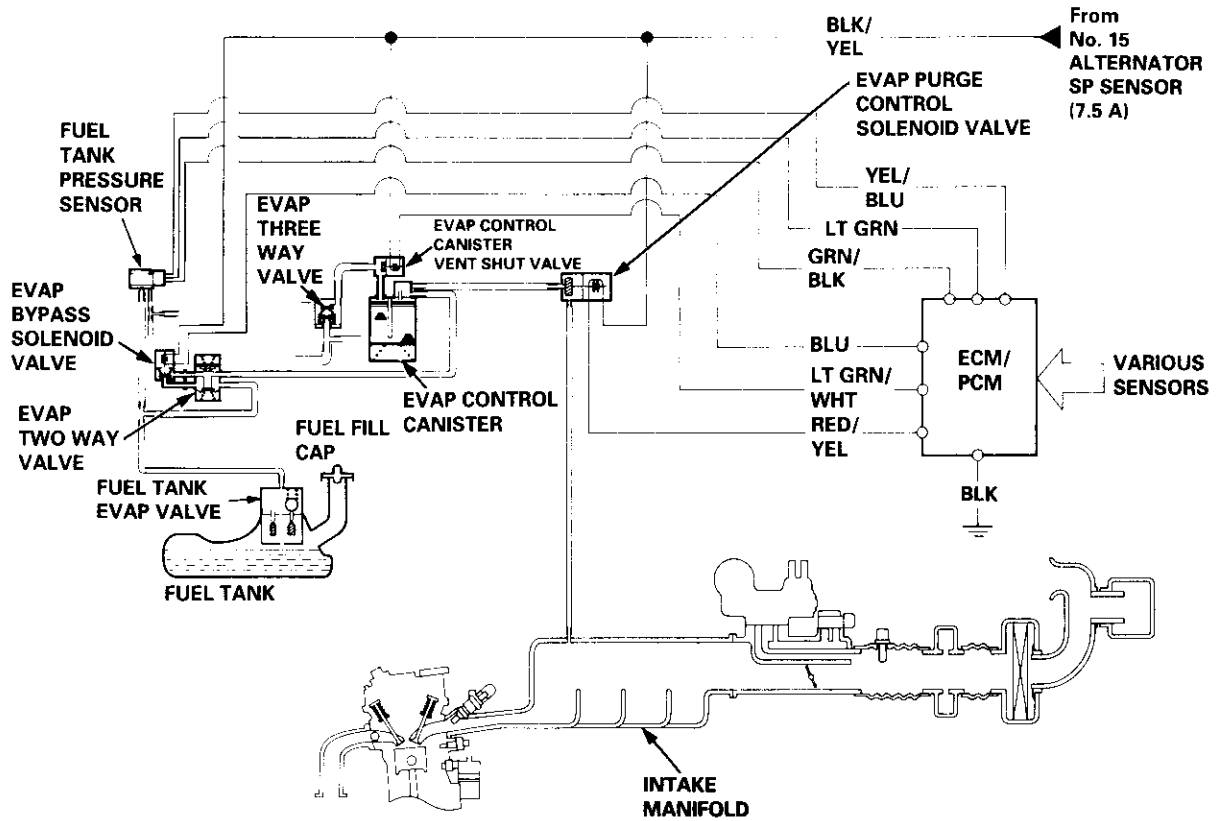

'97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98 D16Y7 engine:

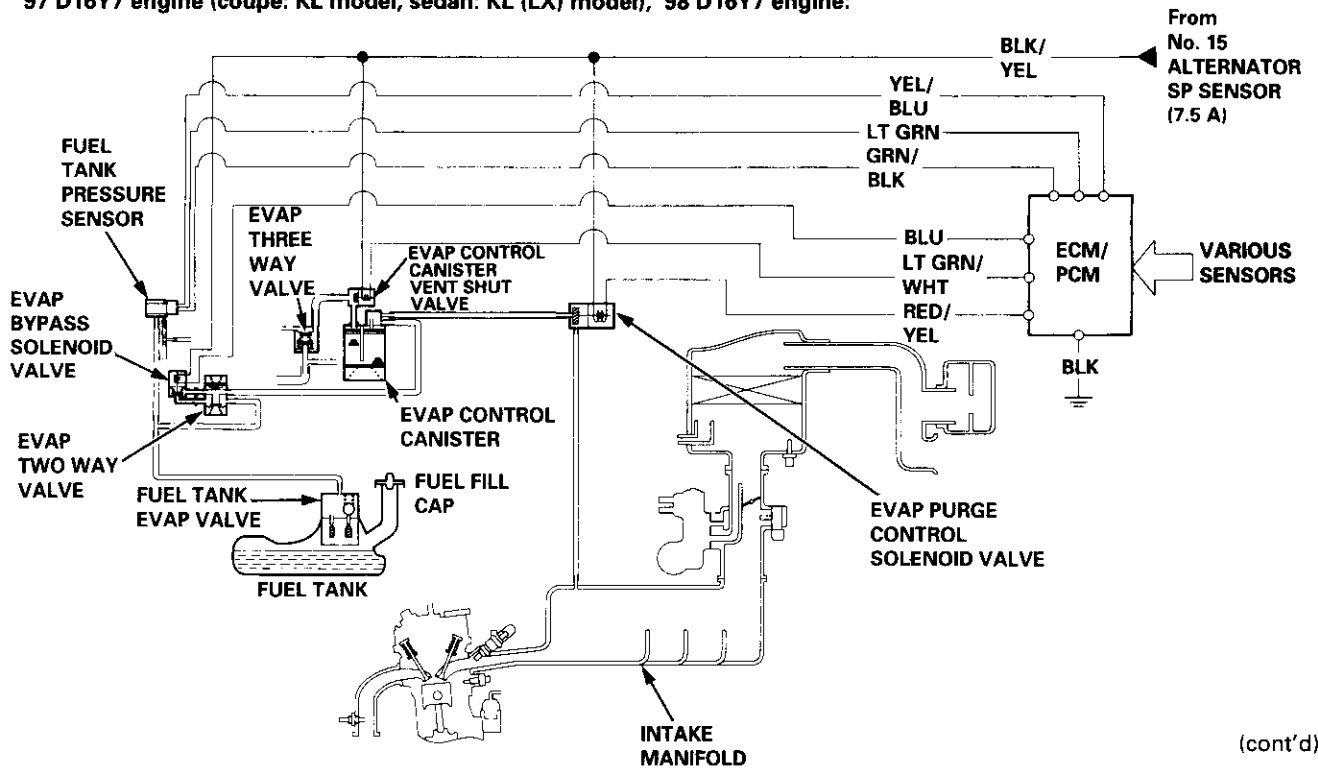


(cont'd)


Emission Control System

Evaporative Emission Controls (cont'd)

'96 D16Y5 engine, '96 D16Y8 engine (sedan), '97 D16Y5 engine, '97 D16Y8 engine (sedan: KA, KC models):

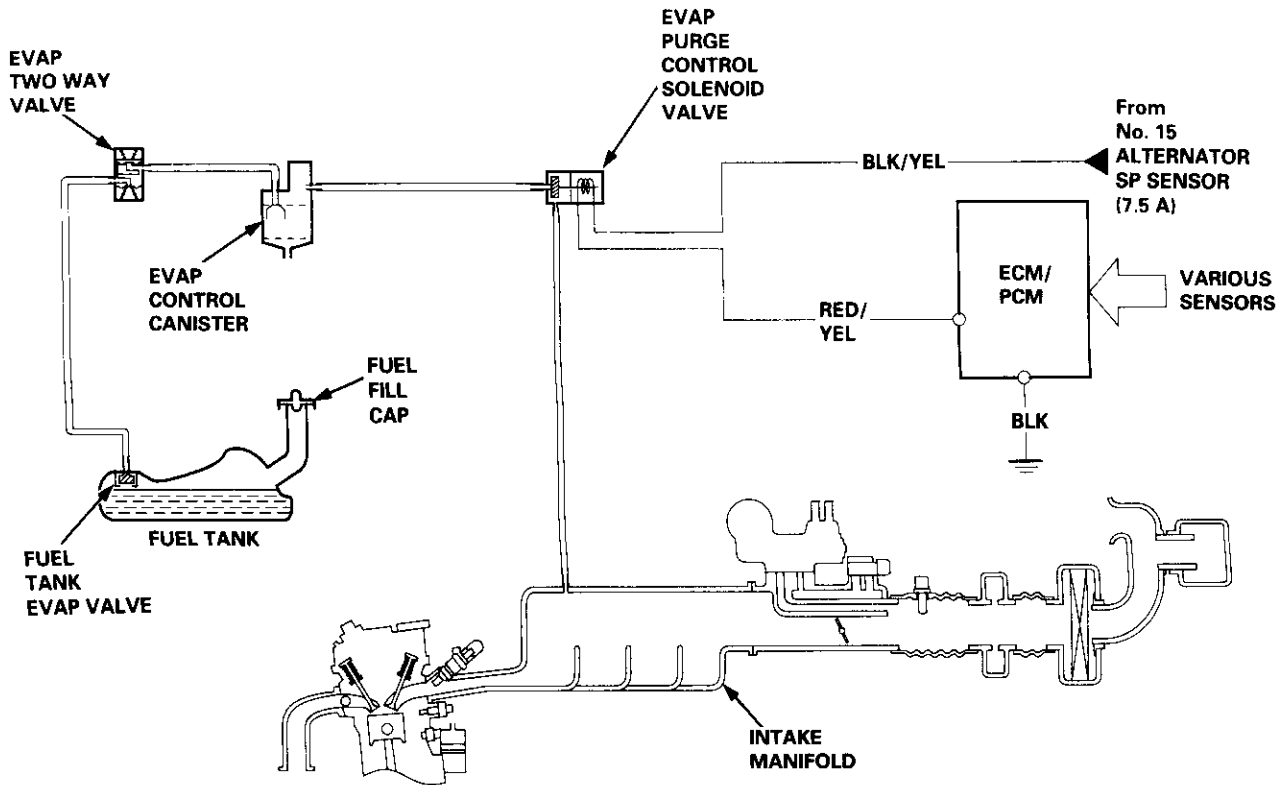

'96 D16Y7 engine, '97 D16Y7 engine (coupe: KA, KC models, sedan: KA, KC, KL (DX) models, hatchback: all models):


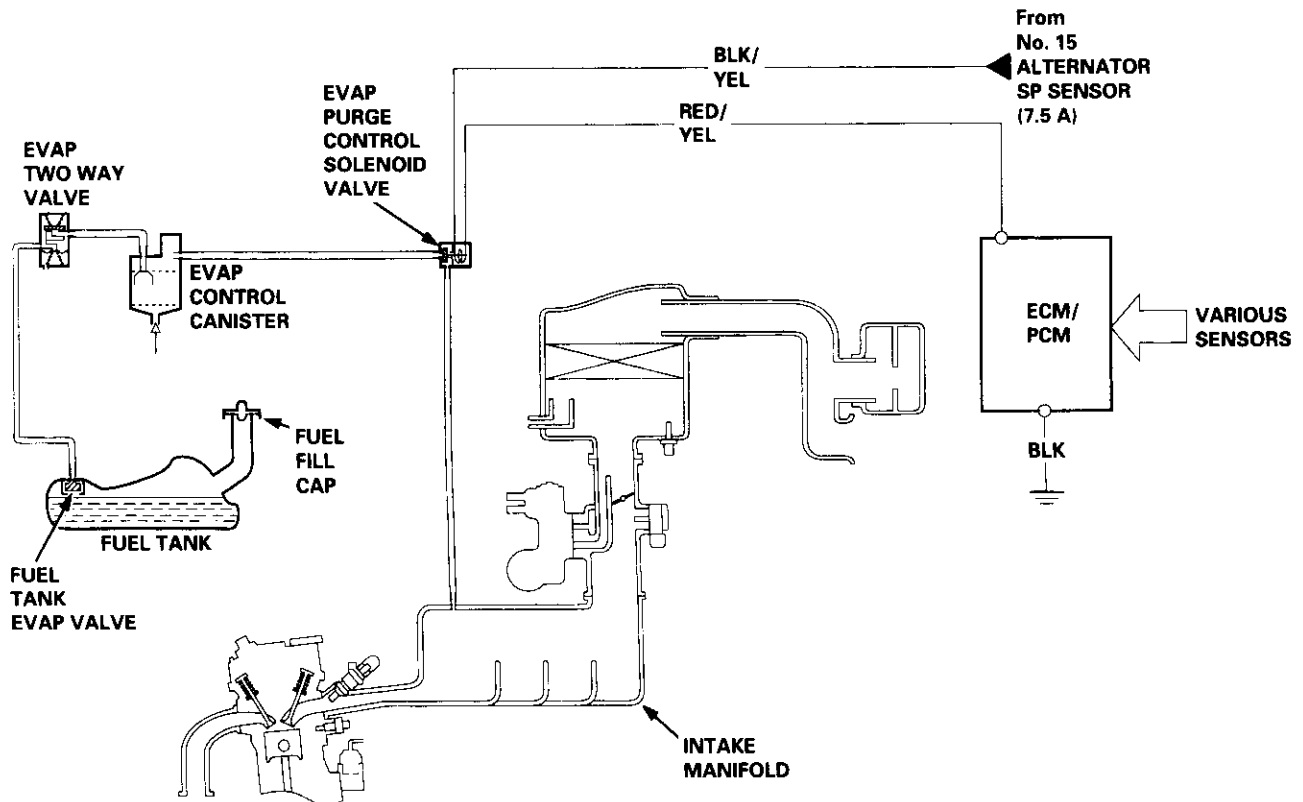




Fuel Tank Pressure Sensor ['96 D16Y8 engine (coupe), '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '97 D16Y8 engine (coupe: all models, sedan: KL model, '98-all models)]:

P0452 The scan tool indicates Diagnostic Trouble Code (DTC) P0452: A low voltage problem in the Fuel Tank Pressure sensor.

The fuel tank pressure sensor converts fuel tank absolute pressure into electrical signals and inputs the ECM/PCM.

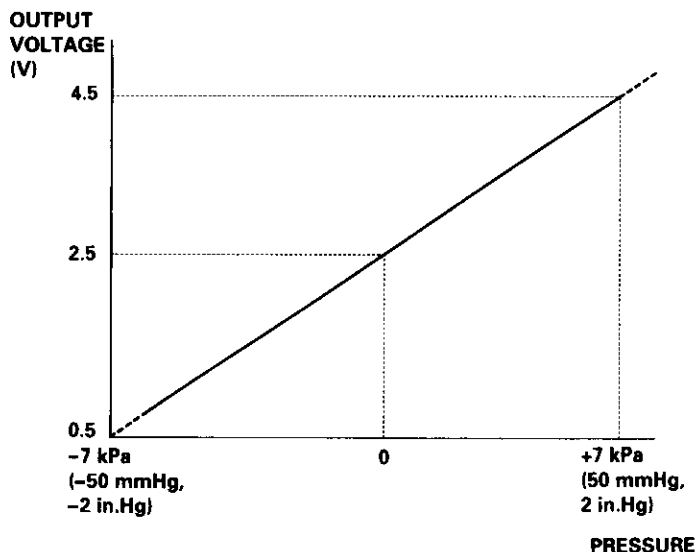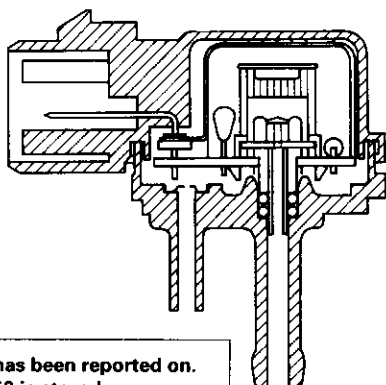

— The MIL has been reported on.
— DTC P0452 is stored.

Check the vacuum lines:
Check the vacuum lines of the fuel tank pressure sensor for misrouting, leakage, breakage and clogging.

Are the vacuum lines OK? **NO** → Repair or replace vacuum lines as necessary.

Problem verification:

1. Do the ECM/PCM Reset Procedure.
2. Remove the fuel fill cap.
3. Turn the ignition switch ON (II).
4. Monitor the FTP Sensor voltage with the Honda PGM Tester, or measure voltage between body ground and ECM/PCM terminal D15.



Is there approx. 2.5 V? **YES** → Intermittent failure, system is OK at this time. Check for poor connections or loose wires at C131 (located under right side of dash), C401 (located above under-dash fuse/relay box), C568 (located under access panel), C792 (fuel tank pressure sensor) and ECM/PCM.

Check for an open in wire (VCC2 line):


1. Turn the ignition switch OFF.
2. Reinstall the fuel fill cap.
3. Disconnect the fuel tank pressure sensor 3P connector.
4. Turn the ignition switch ON (II).
5. Measure voltage between the fuel tank pressure sensor 3P connector No. 1 terminal and No. 2 terminal.

Is there approx. 5 V? **NO** → Repair open in the wire between the fuel tank pressure sensor and the ECM/PCM (D10). **YES** → (Proceed to next step)

ECM/PCM CONNECTOR D (16P)



FUEL TANK PRESSURE SENSOR 3P CONNECTOR (C792)

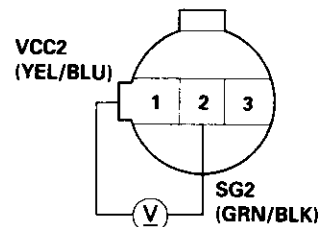

Wire side of female terminals


(cont'd)

(To page 11-182)



Emission Control System

Evaporative Emission Controls (cont'd)

(From page 11-181)

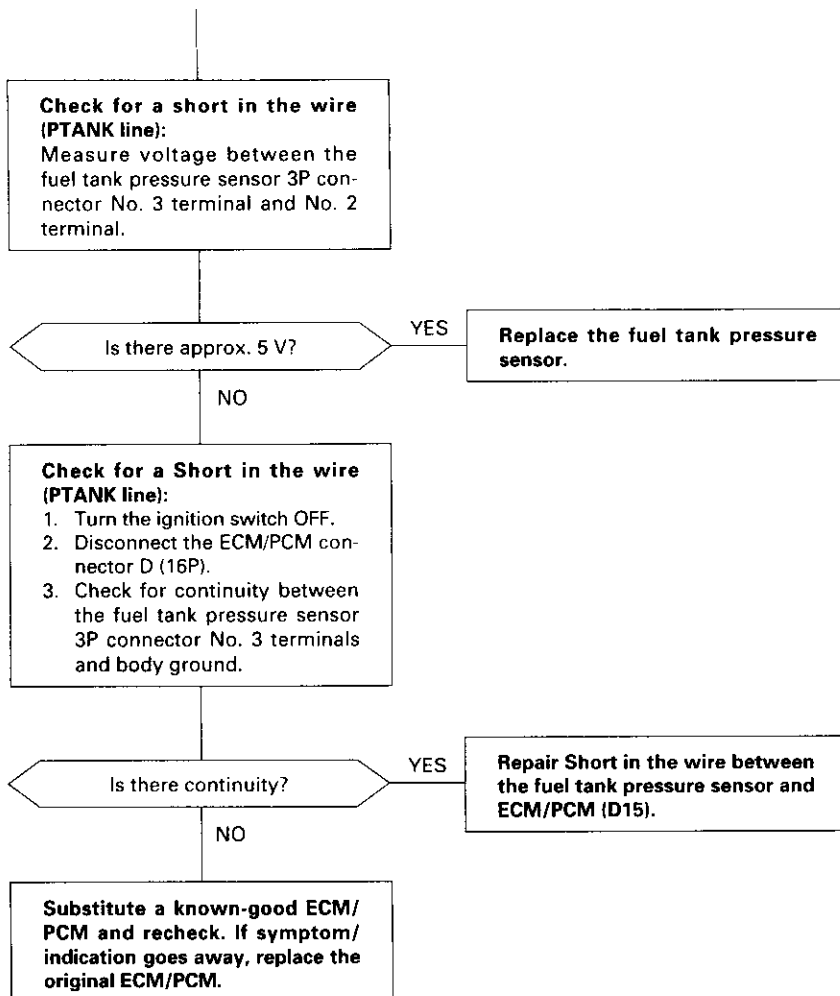


FUEL TANK PRESSURE SENSOR 3P CONNECTOR (C792)

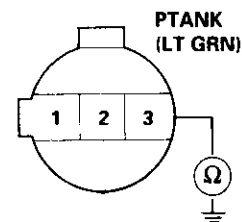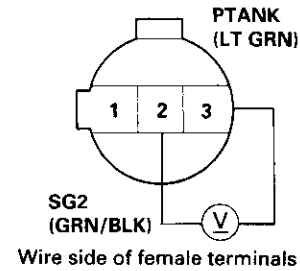




Fuel Tank Pressure Sensor ['96 D16Y8 engine (coupe), '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '97 D16Y8 engine (coupe: all models, sedan: KL model, '98-all models)]:

P0453 The scan tool indicates Diagnostic Trouble Code (DTC) P0453: A high voltage problem in the Fuel Tank Pressure sensor.

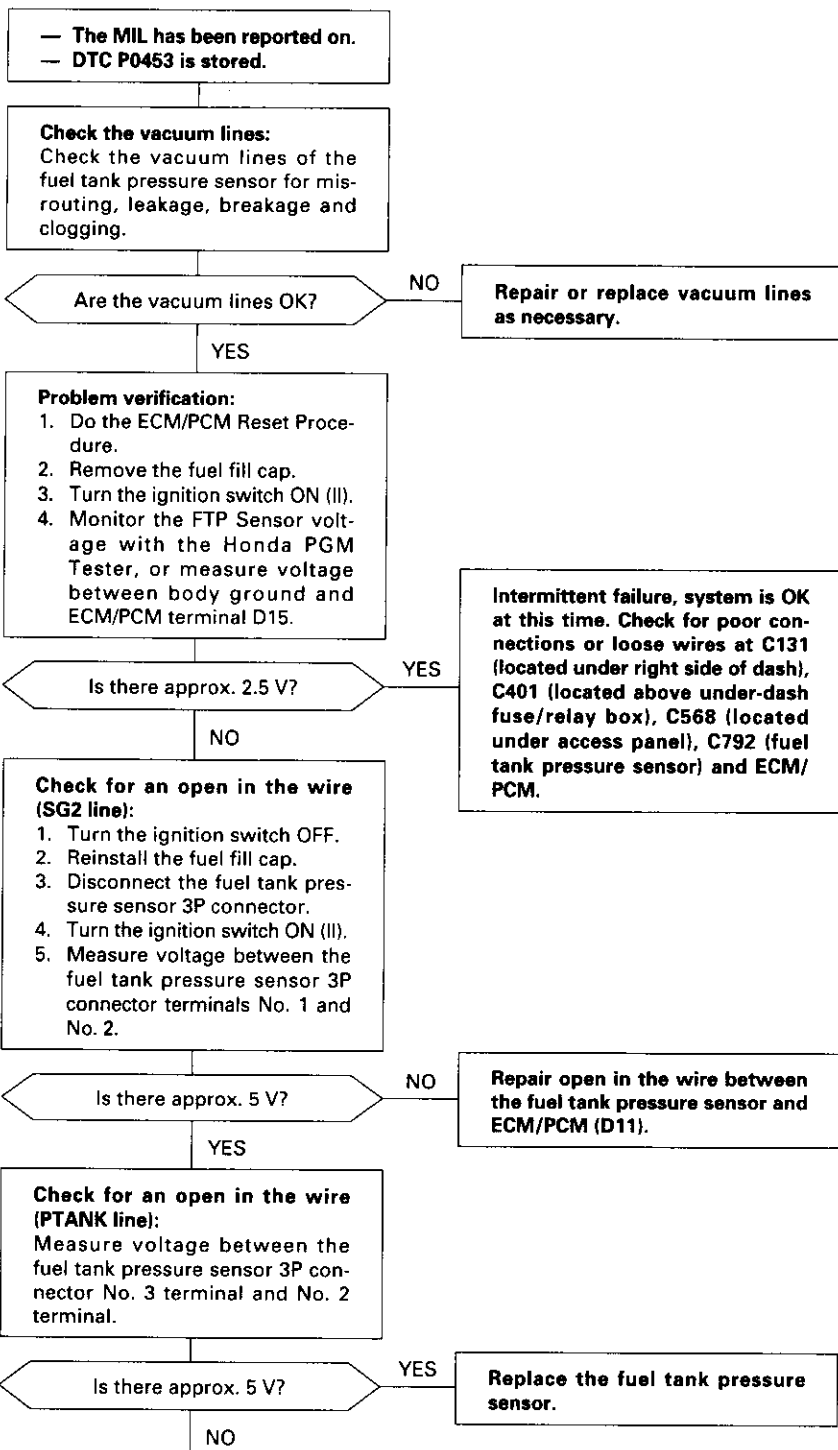

(To page 11-184)

ECM/PCM CONNECTOR D (16P)




PTANK (LT GRN)




Wire side of female terminals

FUEL TANK PRESSURE SENSOR 3P CONNECTOR (C792)

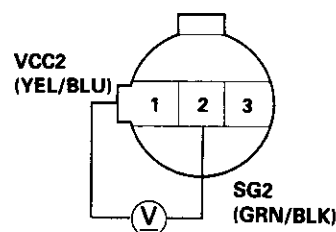

Wire side of female terminals

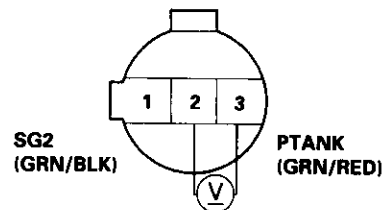

(cont'd)

Emission Control System

Evaporative Emission Controls (cont'd)

(From page 11-183)

Check for an open in the wire (PTANK line):
Measure voltage between ECM/PCM connector terminals D15 and D11.

Is there approx. 5 V?


YES

Repair open in the wire between ECM/PCM (D15) and fuel tank pressure sensor.

NO

Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

ECM/PCM CONNECTOR D (16P)

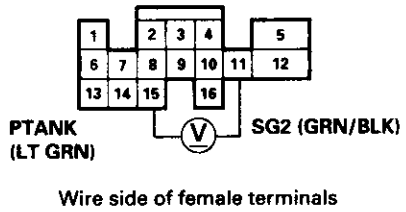



['96 D16Y8 engine (coupe), '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '97 D16Y8 engine (coupe: all models, sedan: KL model, '98-all models)]:

P1456 The scan tool indicates Diagnostic Trouble Code (DTC) P1456: Evaporative Emission (EVAP) control system leak detected (fuel tank system).

P1457 The scan tool indicates Diagnostic Trouble Code (DTC) P1457: Evaporative Emission (EVAP) control system leak detected (EVAP control canister system).

Possible Cause

- Fuel fill cap
- Vacuum Connections
- Fuel Tank
- EVAP Control Canister Vent Shut Valve
- EVAP Control Canister Vent Shut Valve Circuit
- EVAP Purge Control Solenoid Valve
- EVAP Purge Control Solenoid Valve Circuit
- EVAP Bypass Solenoid Valve
- EVAP Bypass Solenoid Valve Circuit
- Fuel Tank Pressure Sensor
- Fuel Tank Pressure Sensor Circuit
- EVAP Control Canister
- Throttle Body

Troubleshooting Flowchart

— The MIL has been reported on.
— DTC P1456 or P1457 is stored.

Check the EVAP control canister vent shut valve:

1. Disconnect the vacuum hose from the EVAP three way valve and connect a vacuum pump to the hose.
2. Remove the EVAP control canister vent shut valve from the canister.
3. Turn the ignition switch ON (II).
4. Apply vacuum to the hose.

Does the valve hold vacuum? YES

Check for a short in the wire (VSV line):
Disconnect the 2P connector from the EVAP control canister vent shut valve.

Does the valve hold vacuum? NO

Repair short in the wire between the EVAP control canister vent shut valve and the ECM/PCM (A29).

Replace the EVAP control canister vent shut valve.

Check the EVAP control canister vent shut valve:

1. Turn the ignition switch OFF.
2. Connect ECM/PCM connector terminal A29 to body ground with a jumper wire.
3. Turn the ignition switch ON (II).
4. Apply vacuum to the hose.



Does the valve hold vacuum? NO

YES
A

YES
B

(To page 11-186)

(To page 11-186)

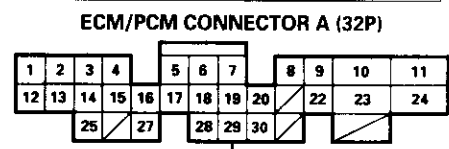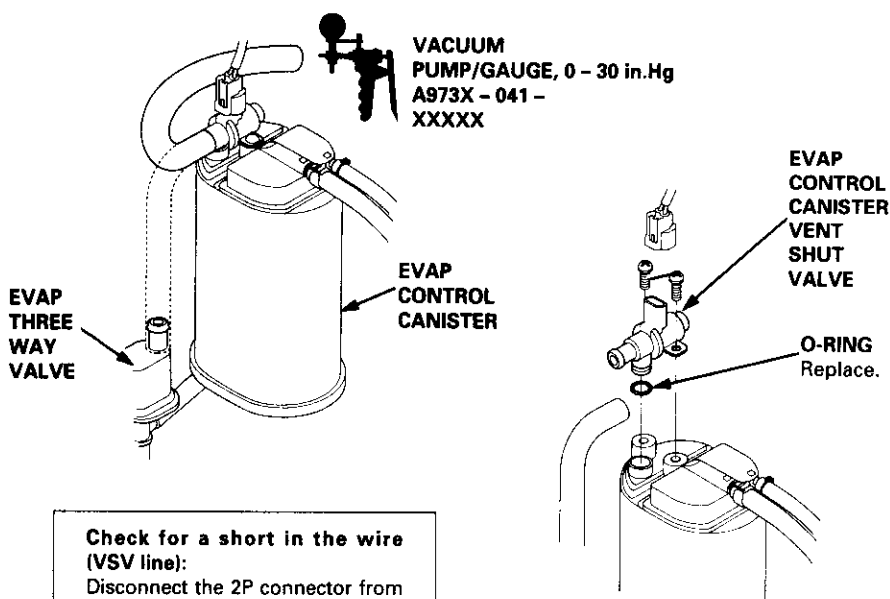

VSV (LT GRN/WHT) JUMPER WIRE
Wire side of female terminals

(cont'd)

Emission Control System

Evaporative Emission Controls (cont'd)

(From page 11-185)

A


(From page 11-185)

B

Check for an open in the wire (IG1 line):

1. Turn the ignition switch OFF.
2. Disconnect the 2P connector from the EVAP control canister vent shut valve.
3. Turn the ignition switch ON (II).
4. Measure voltage between the EVAP control canister vent shut valve 2P connector terminal No. 2 and body ground.

EVAP CONTROL CANISTER VENT SHUT VALVE 2P CONNECTOR (C141)

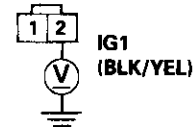

Wire side of female terminals

Is there battery voltage?

NO

Repair open in the wire between the EVAP control canister vent shut valve and the No. 15 ALTERNATOR SP SENSOR (7.5 A) fuse.


YES

Check for an open in the wire (VSV line):

1. Turn the ignition switch OFF.
2. Reconnect the 2P connector to the EVAP control canister vent shut valve.
3. Turn the ignition switch ON (II).
4. Measure voltage between ECM/PCM connector terminals A29 and A10.

ECM/PCM CONNECTOR A (32P)

PG1 (BLK)

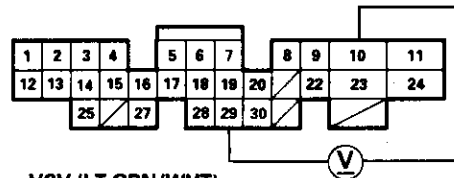

VSV (LT GRN/WHT)

Wire side of female terminals

Is there battery voltage?

NO


Repair open in the wire between the EVAP control canister vent shut valve and the ECM/PCM (A29).

YES


Replace the EVAP control canister vent shut valve.

Check the vacuum when cold:

1. Disconnect the vacuum hose shown from the EVAP control canister and connect a vacuum gauge to the hose.
2. Start the engine and allow it to idle.
NOTE: Engine coolant temperature must be below 154°F (68°C) or A/C switch OFF.
3. Quickly raise the engine speed to 3,000 rpm.

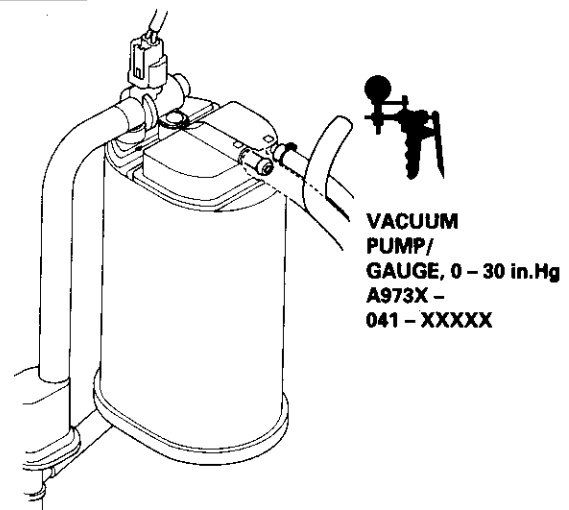

(To page 11-187)

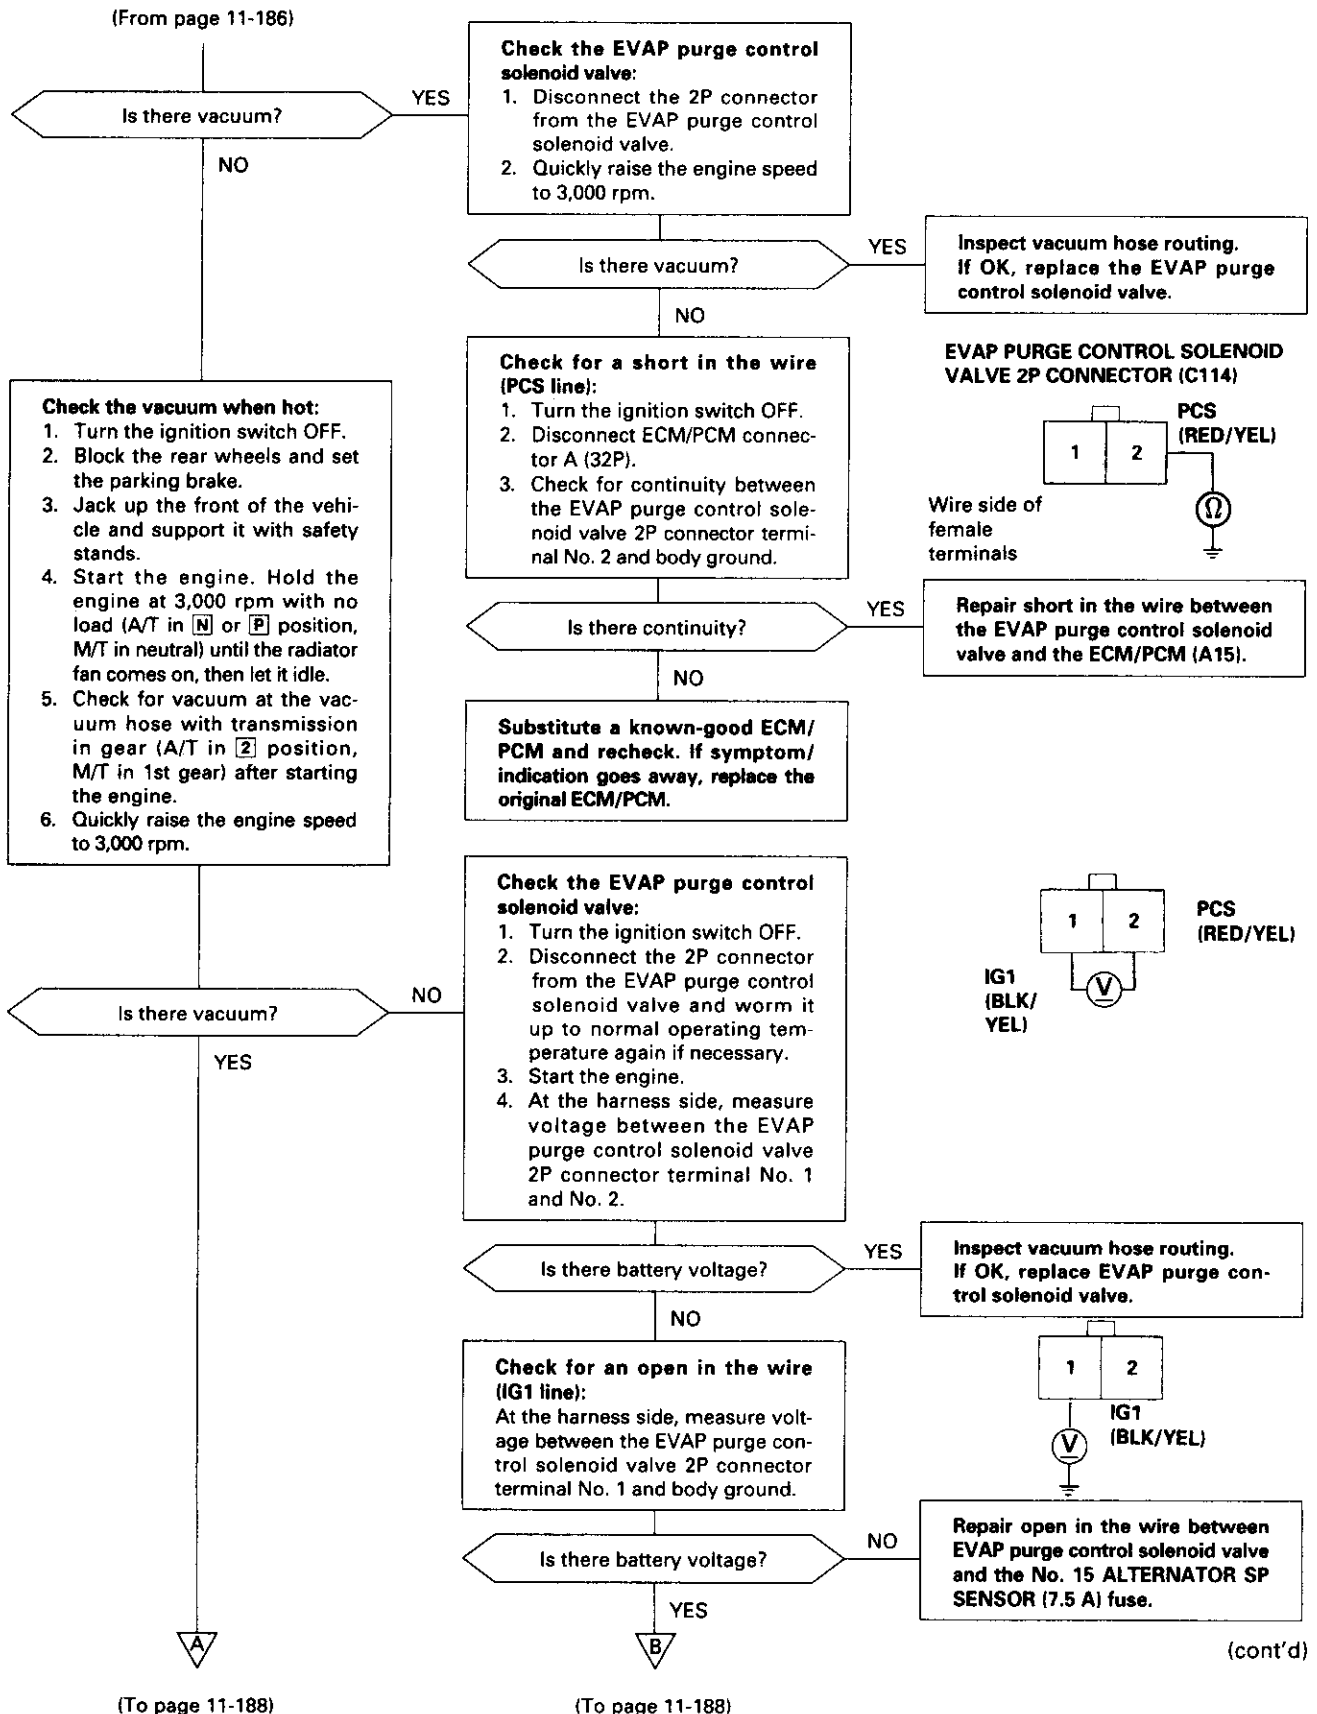

Emission Control System

Evaporative Emission Controls (cont'd)

(From page 11-187)


(From page 11-187)

A

B

Check for an open in the wire (PCS line):

1. Turn the ignition switch OFF.
2. Reconnect the 2P connector to the EVAP purge control solenoid valve.
3. Turn the ignition switch ON (II).
4. Measure voltage between ECM/PCM connector terminals A15 and A10.

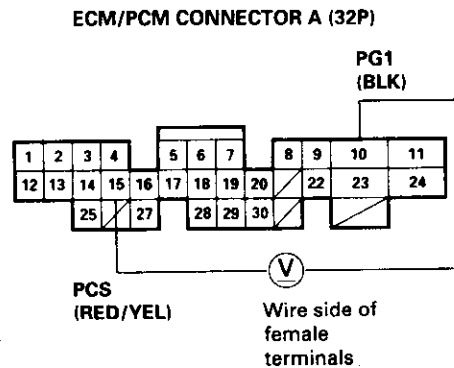

Is there battery voltage?


NO

Repair open in the wire between the EVAP purge control solenoid valve and the ECM/PCM (A15).

YES

Substitute a known-good ECM/PCM and retest. If symptom/indication goes away, replace the original ECM/PCM.

EVAP TWO WAY VALVE

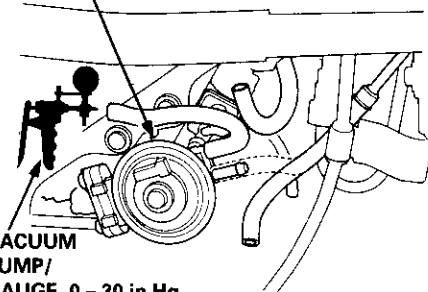

Check the EVAP two way valve:
See EVAP two way valve test (see page 11-193).

Is it OK?

NO

Replace the EVAP two way valve.

YES


Check the EVAP bypass solenoid valve:

1. Disconnect the vacuum hose from the EVAP two way valve and connect a vacuum pump to the hose.
2. Turn the ignition switch ON (II).
3. Apply vacuum to the hose.

Does the valve hold vacuum?

NO

Check for a short in the wire (2WBS line):
Disconnect the 2P connector from the EVAP bypass solenoid valve.

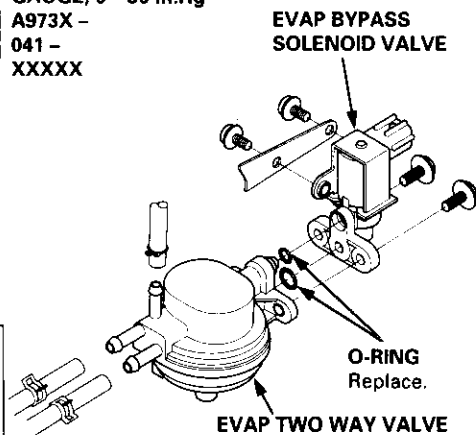

Does the valve hold vacuum?

YES

Repair short in the wire between EVAP bypass solenoid valve and the ECM/PCM (A28).

NO

Replace the EVAP bypass solenoid valve.

(To page 11-189)



(From page 11-188)

Check the EVAP bypass solenoid valve:

1. Turn the ignition switch OFF.
2. Connect ECM/PCM connector terminal A28 and body ground with a jumper wire.
3. Turn the ignition switch ON (II).

Does valve hold vacuum?

YES

NO

Check for an open in the wire (IG1 line):

1. Turn the ignition switch OFF.
2. Disconnect the 2P connector from the EVAP bypass solenoid valve.
3. Turn the ignition switch ON (II).
4. Measure voltage between the EVAP bypass solenoid valve 2P connector terminal No. 1 and body ground.

Is there battery voltage?

NO

YES

Check for an open in the wire (2WBS line):

1. Turn the ignition switch OFF.
2. Reconnect the 2P connector to the EVAP bypass solenoid valve.
3. Turn the ignition switch ON (II).
4. Measure voltage between ECM/PCM connector terminals A28 and A10.

Is there battery voltage?

NO


YES

Check the following parts for leakage to atmosphere, and repair or replace if necessary:

- fuel fill cap
- fuel tank
- fuel vapor pipe
- EVAP two way valve
- EVAP bypass solenoid valve
- fuel tank pressure sensor
- EVAP control canister
- EVAP control canister vent shut valve
- EVAP purge control solenoid valve
- vacuum hoses and connections

Replace the EVAP bypass solenoid valve.


ECM/PCM CONNECTOR A (32P)



2WBS (BLU)
JUMPER WIRE

Wire side of female terminals

EVAP BYPASS SOLENOID VALVE 2P CONNECTOR (C793)

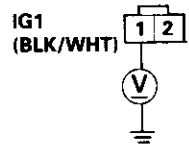


Wire side of female terminals

Repair open in the wire between EVAP purge control solenoid valve and the No. 15 ALTERNATOR SP SENSOR (7.5 A) fuse.

ECM/PCM CONNECTOR A (32P)

PG1 (BLK)



2WBS (BLU)



Wire side of female terminals

Repair open in the wire between the EVAP bypass solenoid valve and the ECM/PCM (A28).

(cont'd)

Emission Control System

Evaporative Emission Controls (cont'd)

'96 D16Y5 engine, '96 D16Y7 engine, '96 D16Y8 engine (sedan), '97 D16Y5 engine, '97 D16Y7 engine (coupe: KA, KC models, sedan: KA, KC, KL (DX) models, hatchback: all models), '97 D16Y8 engine (sedan: KA, KC models):

P0441

The scan tool indicates Diagnostic Trouble Code (DTC) P0441: Evaporative Emission (EVAP) control system insufficient purge flow.


Description

By monitoring the purge line vacuum with the MAP sensor, the ECM/PCM can detect insufficient EVAP control system purge flow.


Possible Cause

- EVAP Purge Control Solenoid Valve
- EVAP Purge Control Solenoid Valve Circuit
- EVAP Control Canister
- Vacuum Lines
- ECM/PCM

Troubleshooting Flowchart

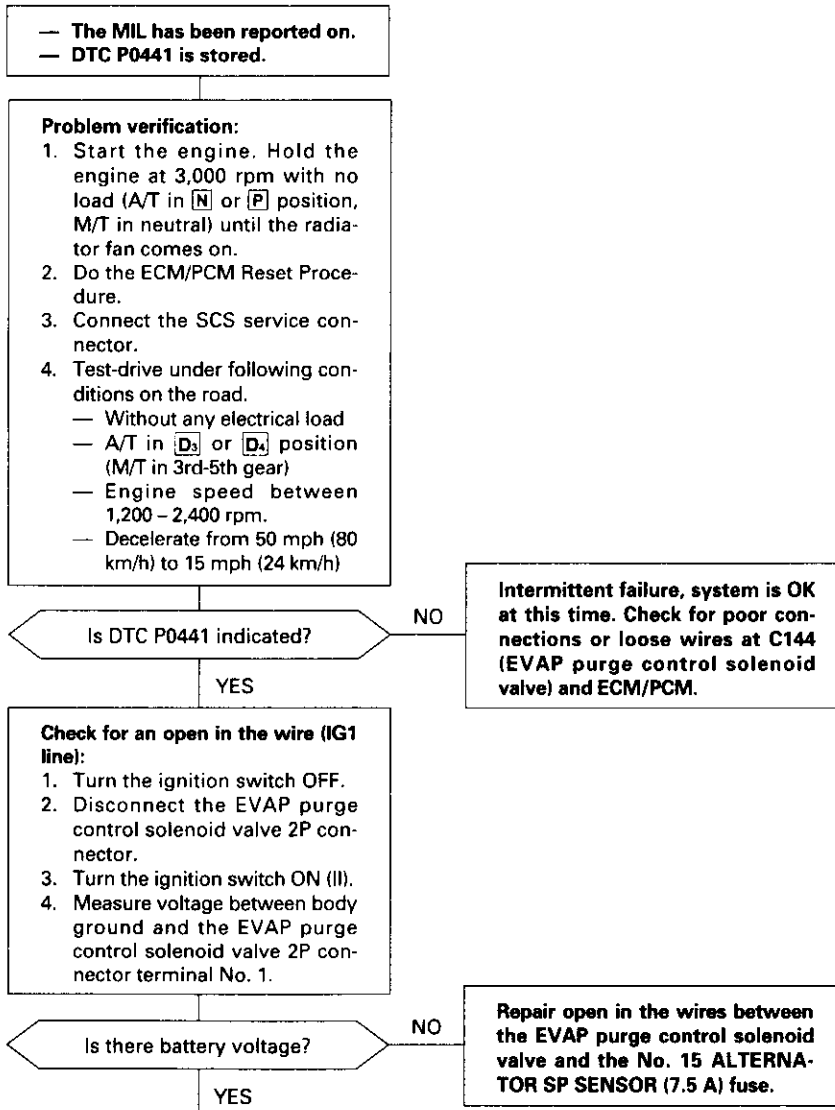

EVAP PURGE CONTROL SOLENOID VALVE 2P CONNECTOR (C114)

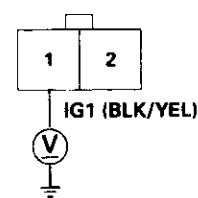

Wire side of female terminals




(From page 11-190)

Check the EVAP purge control solenoid valve:

1. Reconnect the EVAP purge control solenoid valve 2P connector.
2. Connect ECM/PCM connector terminals A15 and A10 with a jumper wire.

ECM/PCM CONNECTOR D (32P)

PG1 (BLK)

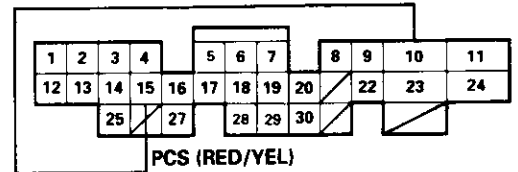

PCS (RED/YEL)


JUMPER WIRE

Wire side of female terminals

Does the solenoid valve click when the jumper is connected?

NO

Check for an open or short in the wire (PCS line):
Measure voltage between ECM/PCM connector terminal A15 and body ground.



PCS (RED/YEL)

YES

Is there battery voltage?

YES

Replace the EVAP purge control solenoid valve.

NO

Check for a short in the wire (PCS line):

1. Turn the ignition switch OFF.
2. Disconnect the ECM/PCM connector A (32P).
3. Disconnect the EVAP purge control solenoid valve 2P connector.
4. Check for continuity between body ground and ECM/PCM connector terminal A15.

Repair short in the wires between the EVAP purge control solenoid valve and ECM/PCM (A15).

YES

Is there continuity?

NO

Repair open in the wires between the EVAP purge control solenoid valve and ECM/PCM (A15).


Check the vacuum lines:
Check the vacuum lines of EVAP system for misrouting, leakage, breakage and clogging.

Are the vacuum lines OK?

NO

Repair or replace vacuum lines as necessary.

YES

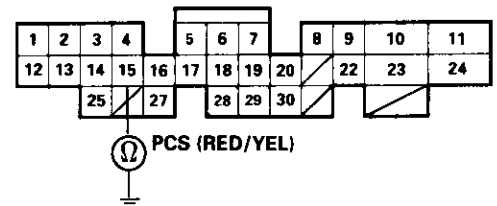

PCS (RED/YEL)

(To page 11-192)

(cont'd)

Emission Control System

Evaporative Emission Controls (cont'd)

(From page 11-191)

Check the EVAP purge control solenoid valve:

1. Disconnect the vacuum hose from the EVAP control canister.
2. Connect the vacuum pump to the hose and apply vacuum.

Does it hold vacuum?

NO
Replace the EVAP purge control solenoid valve.

YES

Check the EVAP control canister:

1. Reconnect the vacuum hose to the EVAP control canister.
2. Connect the vacuum/pressure gauge to the purge air hose.
3. Connect ECM/PCM connector terminals A15 and A10 with a jumper wire.
4. Start the engine.
5. Check the vacuum.

Does vacuum appear on the gauge?

NO
Replace the EVAP control canister.

YES

Check the EVAP two way valve (see page 11-193).

Does the EVAP two way valve work properly?


NO
Replace the EVAP two way valve.

YES


Substitute a known-good ECM/PCM and recheck. If symptom/indication goes away, replace the original ECM/PCM.

D16Y5 engine:

D16Y7, D16Y8 engine

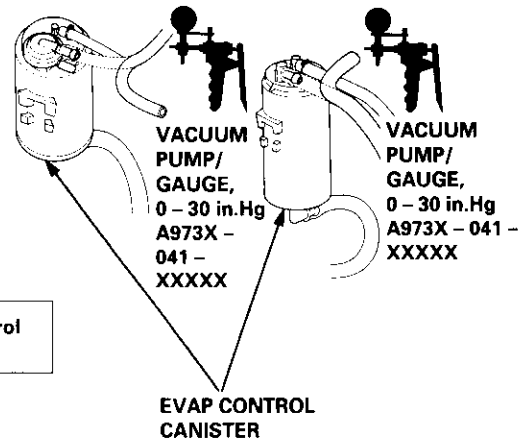


ECM/PCM CONNECTOR D (32P)

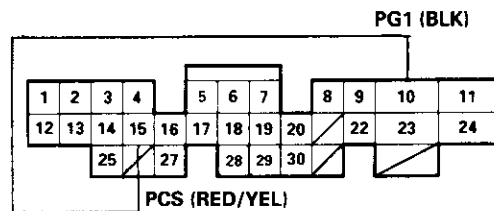


JUMPER WIRE

Wire side of female terminals

D16Y7, D16Y8 engine:

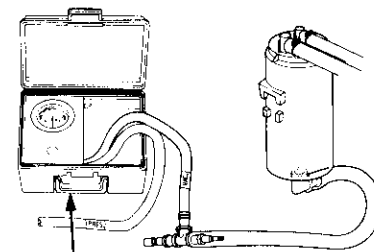

D16Y5 engine:

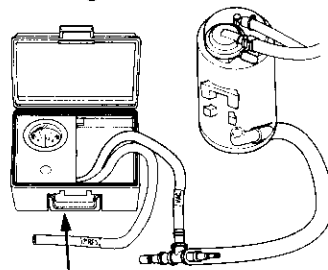


VACUUM/PRESSURE GAUGE 0 - 4 in.Hg 07JAZ - 001000B




Evaporative Emission (EVAP) Two Way Valve Testing
 ['96 D16Y8 engine (coupe), '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '97 D16Y8 engine (coupe: all models, sedan: KL model, '98-all models)]:

1. Remove the fuel fill cap.
2. Remove the vapor line from the EVAP two way valve, and connect it to a T-fitting from a vacuum gauge and a vacuum pump as shown.

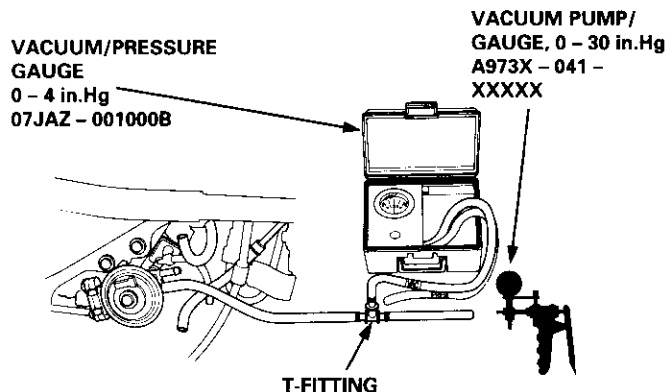


3. Apply vacuum slowly and continuously while watching the gauge. The vacuum should stabilize momentarily at 0.8 – 2.1 kPa (6 – 16 mmHg, 0.2 – 0.6 in.Hg). If the vacuum stabilizes (valve opens) below 0.8 kPa (6 mmHg, 0.2 in.Hg) or above 2.1 kPa (16 mmHg, 0.6 in.Hg), install a new valve and retest.
4. Move the vacuum pump hose from the vacuum fitting to the pressure fitting, and move the vacuum gauge hose from the vacuum side to the pressure side as shown.

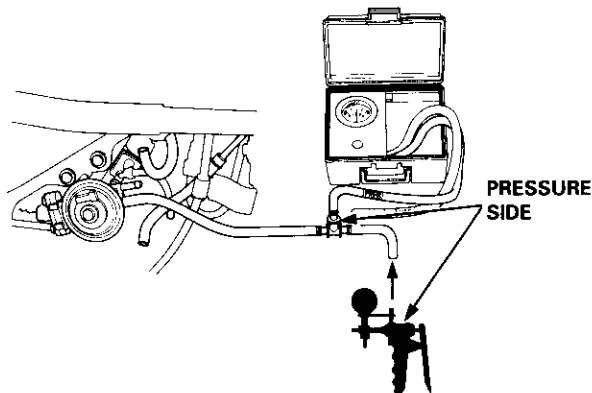


5. Slowly pressurize the vapor line while watching the gauge. The pressure should be stabilize momentarily above 1.0 kPa (8 mmHg, 0.3 in.Hg).
 - If the pressure momentarily stabilizes (valve opens) above 1.0 kPa (8 mmHg, 0.3 in.Hg), the valve is OK.
 - If the pressure stabilizes below 1.0 kPa (8 mmHg, 0.3 in.Hg), install a new valve and retest.

Evaporative Emission (EVAP) Two Way Valve Testing
 ['96 D16Y5 engine, '96 D16Y7 engine, '96 D16Y8 engine (sedan), '97 D16Y5 engine, '97 D16Y7 engine (coupe: KA, KC models, sedan: KA, KC, KL (DX) models, hatchback: all models), '97 D16Y8 engine (sedan: KA, KC models)]:

1. Remove the fuel fill cap.
2. Remove the vapor line from the EVAP two way valve on the fuel tank, and connect it to a T-fitting from a vacuum gauge and a vacuum pump as shown.

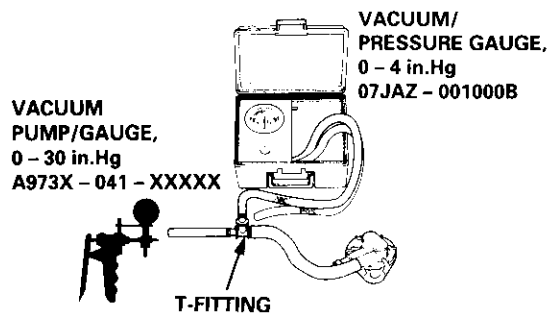

3. Apply vacuum slowly and continuously while watching the gauge. The vacuum should stabilize momentarily at 0.7 – 2.0 kPa (5 – 15 mmHg, 0.2 – 0.6 in.Hg). If the vacuum stabilizes (valve opens) below 0.7 kPa (5 mmHg, 0.2 in.Hg) or above 2.0 kPa (15 mmHg, 0.6 in.Hg), install a new valve and retest.
4. Move the vacuum pump hose from the vacuum fitting to the pressure fitting, and move the vacuum gauge hose from the vacuum side to the pressure side as shown.

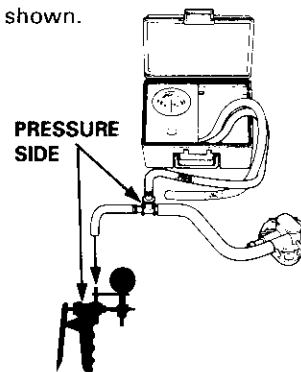

5. Slowly pressurize the vapor line while watching the gauge. The pressure should stabilize at 1.3 – 4.7 kPa (10 – 35 mmHg, 0.4 – 1.4 in.Hg).
 - If the pressure momentarily stabilizes (valve opens) at 1.3 – 4.7 kPa (10 – 35 mmHg, 0.4 – 1.4 in. Hg), the valve is OK.
 - If the pressure stabilizes below 1.3 kPa (10 mmHg, 0.4 in.Hg) or above 4.7 kPa (35 mmHg, 1.4 in.Hg), install a new valve and retest.

Transaxle

Clutch	12-1
Manual Transmission	13-1
Automatic Transmission	14-1
Differential	15-1
Driveshafts	16-1




Clutch

Special Tools	12-2
Illustrated Index	12-3
Clutch Pedal	
Adjustment	12-4
Clutch Master Cylinder	
Removal/Installation	12-5
Slave Cylinder	
Removal/Installation	12-6
Pressure Plate	
Removal/Inspection	12-7
Clutch Disc	
Removal/Inspection	12-8
Flywheel	
Inspection	12-9
Replacement	12-9
Clutch Disc, Pressure Plate	
Installation	12-10
Release Bearing	
Removal/Inspection	12-11
Installation	12-12



Special Tools


Ref. No.	Tool Number	Description	Qty	Page Reference
①	07JAF-PM7011A	Clutch Alignment Disc	1	12-7
②	07JAF-PM7012A	Clutch Alignment Shaft	1	12-7, 8, 10, 11
③	07LAB-PV00100 or 07924-PD20003	Ring Gear Holder	1	12-7, 9, 10, 11
④	07746-0010100	Attachment, 32 x 35 mm	1	12-10
⑤	07749-0010000	Driver	1	12-10
⑥	07936-3710100	Handle	1	12-7, 8, 10, 11

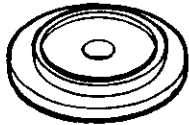


①




②

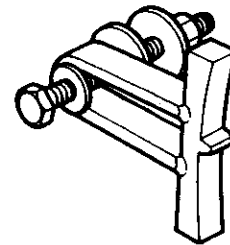


③

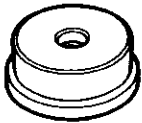

④

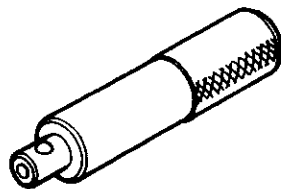

⑤

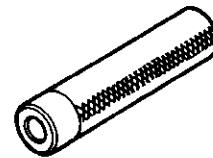


⑥

Illustrated Index



NOTE:

- Whenever the transmission is removed, clean and grease the release bearing sliding surface.
- If the parts marked with an asterisk (*) are removed, the clutch hydraulic system must be bled (see page 12-6).
- Inspect the hoses for damage, leaks, interference, and twisting.

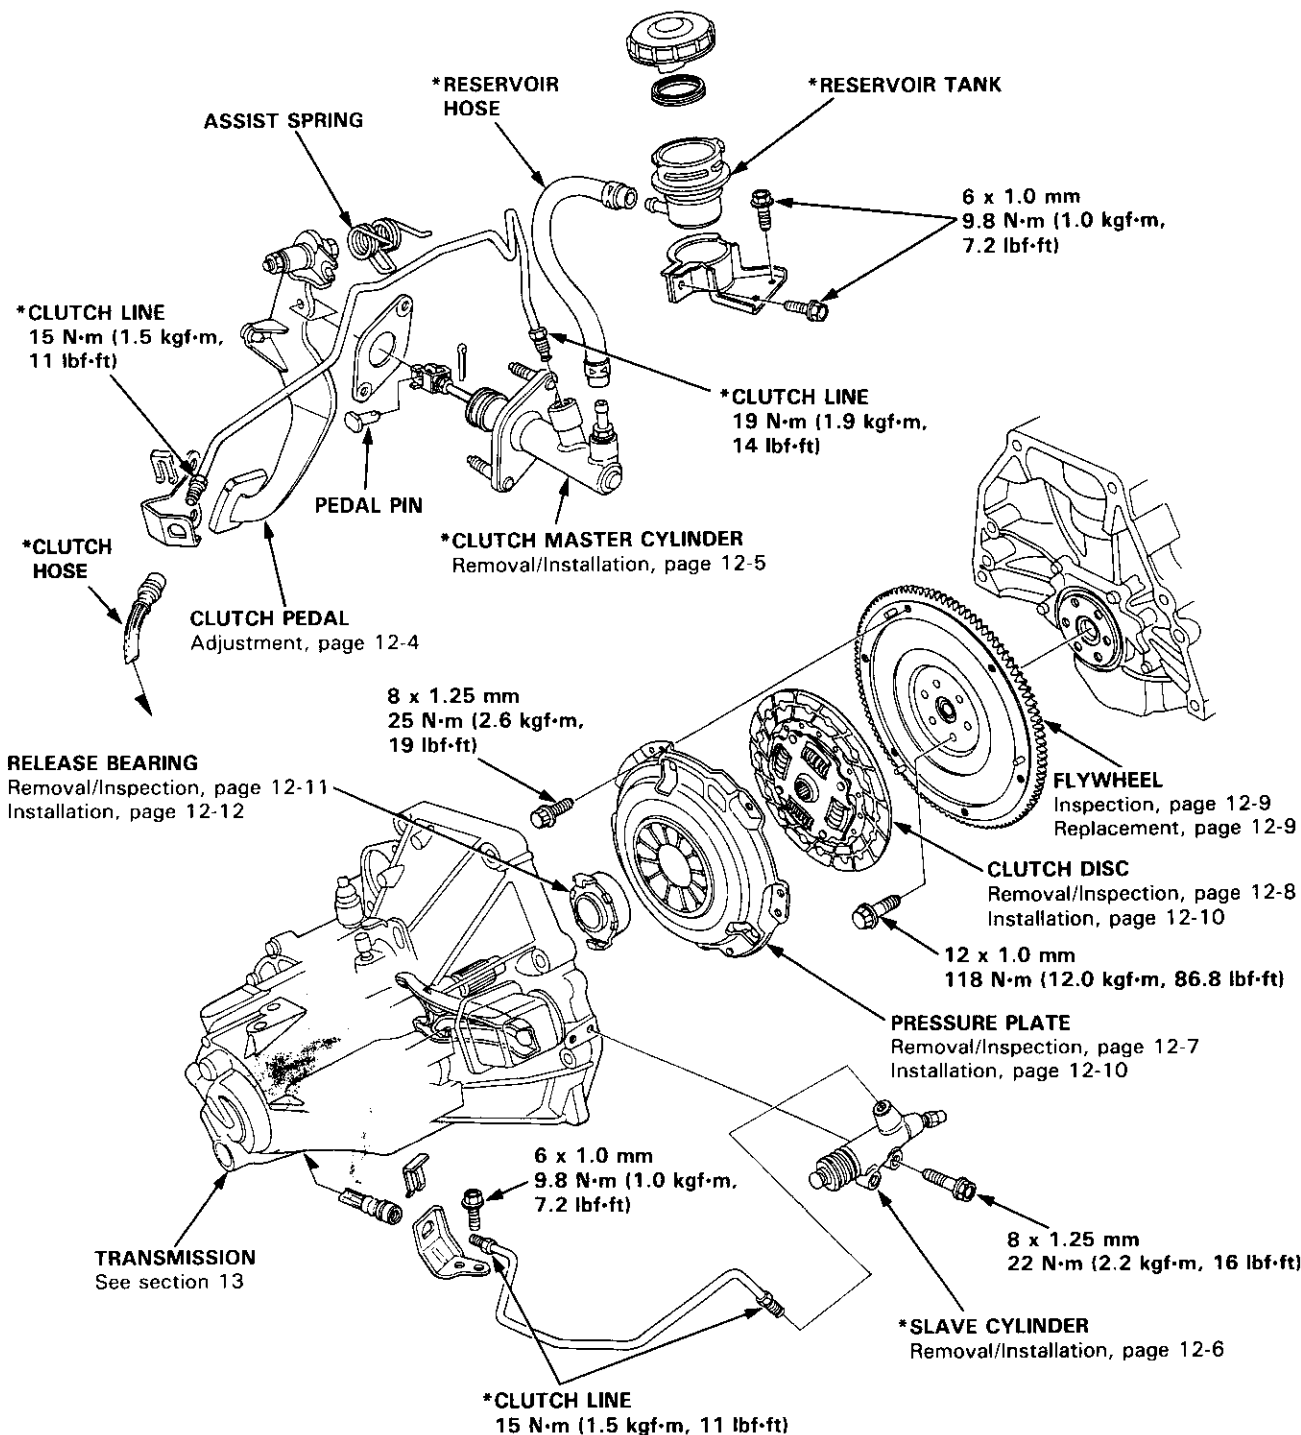

Clutch Pedal


Adjustment

NOTE:

- To check the clutch interlock switch and clutch switch, see section 23.
- The clutch is self-adjusting to compensate for wear.

CAUTION: If there is no clearance between the master cylinder piston and push rod, the release bearing is held against the diaphragm spring, which can result in clutch slippage or other clutch problems.

1. Loosen locknut A, and back off the clutch switch (or adjusting bolt) until it no longer touches the clutch pedal.
2. Loosen locknut C, and turn the push rod in or out to get the specified stroke (A) and height (C) at the clutch pedal.
3. Tighten locknut C.
4. Thread in the clutch switch (or adjusting bolt) until it contacts the clutch pedal.
5. Turn the clutch switch (or adjusting bolt) in an additional 3/4 to 1 full turn.
6. Tighten locknut A.
7. Loosen locknut B on the clutch interlock switch.
8. Measure the clearance between the floor board and clutch pedal with the clutch pedal fully depressed.
9. Release the clutch pedal 15–20 mm (0.59–0.79 in) from the fully depressed position and hold it there. Adjust the position of the clutch interlock switch so that the engine will start with the clutch pedal in this position.
10. Thread the clutch interlock switch an additional 3/4 to 1 full turn.
11. Tighten locknut B.

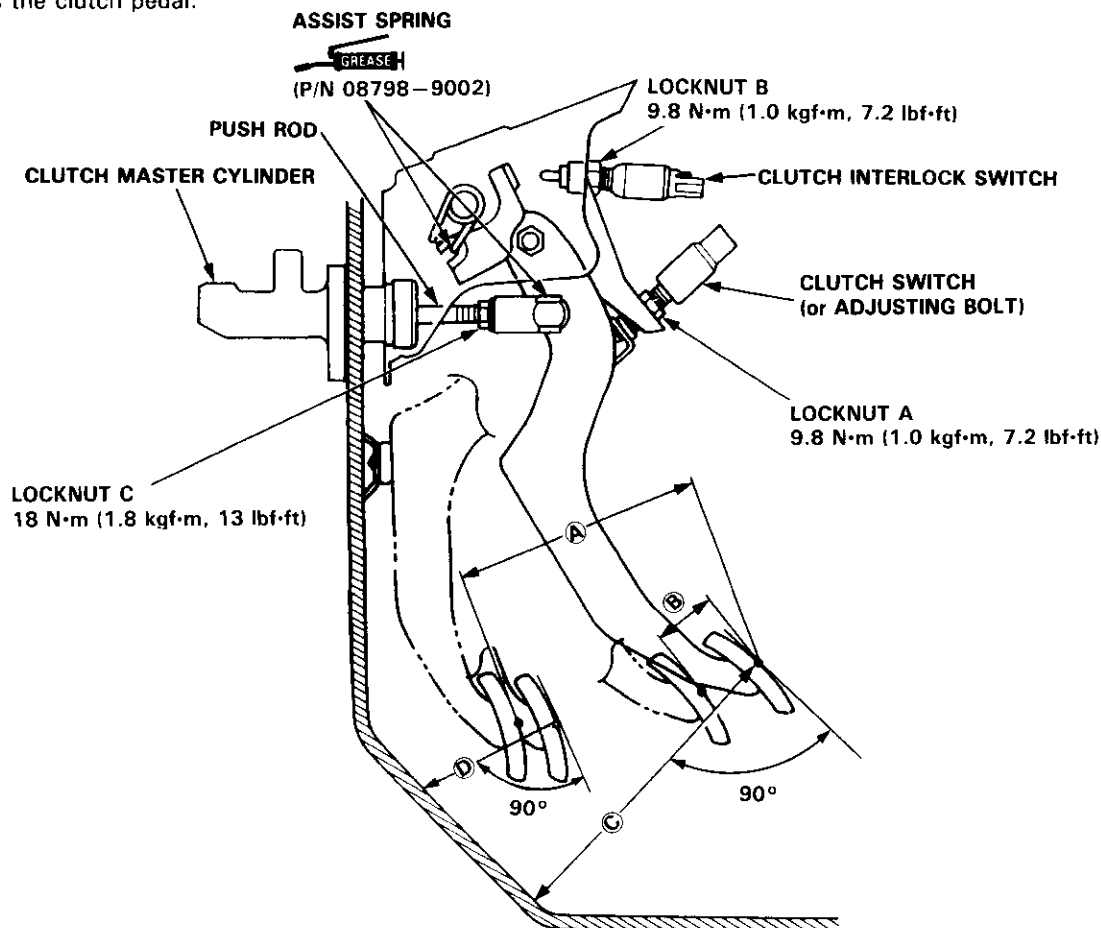

- (A) (STROKE at PEDAL): 130–140 mm (5.12–5.51 in)
- (B) (TOTAL CLUTCH PEDAL FREE PLAY): 12–21 mm (0.47–0.83 in) include the pedal play 1–10 mm (0.04–0.39 in)
- (C) (CLUTCH PEDAL HEIGHT): 165 mm (6.50 in) to the floor
- (D) (CLUTCH PEDAL DISENGAGEMENT HEIGHT): 83 mm (3.27 in) minimum to the floor




Clutch Master Cylinder

Removal/Installation


CAUTION:

- Do not spill brake fluid on the vehicle; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- Plug the end of the clutch line and reservoir hose with a shop towel to prevent brake fluid from coming out.


1. The brake fluid can be removed from the clutch master cylinder reservoir with a syringe.
2. Disconnect the clutch line and reservoir hose from the clutch master cylinder.

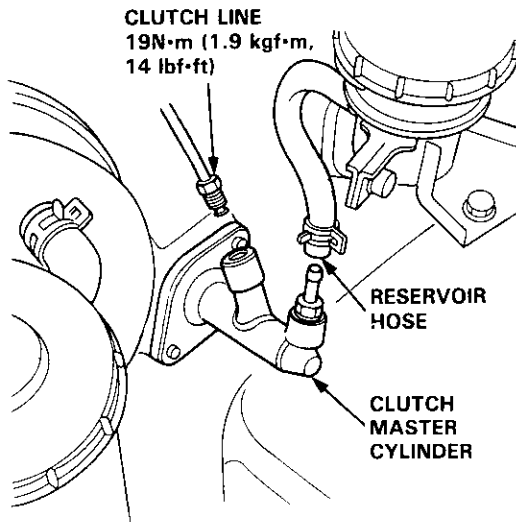

3. Pry out the cotter pin, and pull the pedal pin out of the yoke. Remove the nuts.

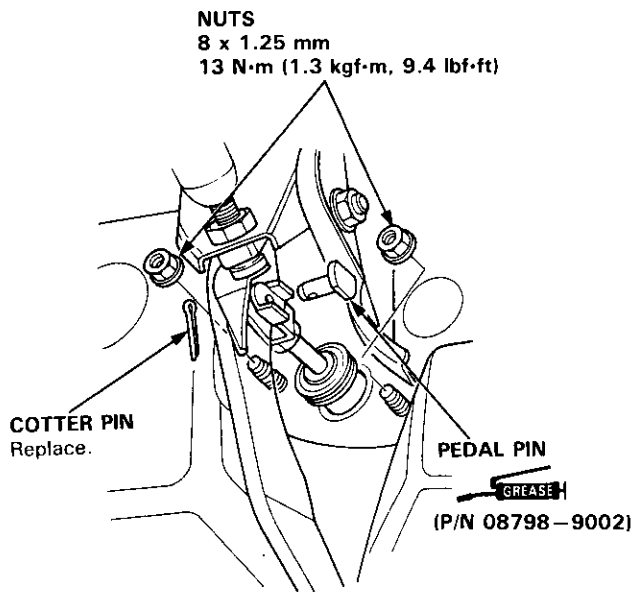

4. Remove the clutch master cylinder.

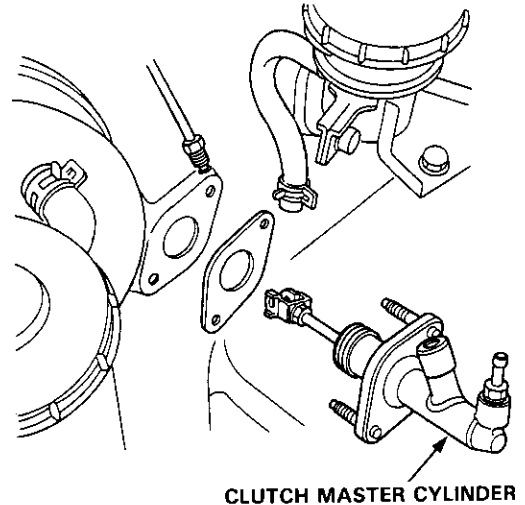

5. Install the clutch master cylinder in the reverse order of removal.


NOTE: Bleed the clutch hydraulic system (see page 12-6).


Slave Cylinder

Removal/Installation


CAUTION:

- Do not spill brake fluid on the vehicle; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- Plug the end of the clutch line with a shop towel to prevent brake fluid from coming out.

 : Super High Temp Urea Grease (P/N 08798-9002).

 : Brake Assembly Lube or equivalent rubber grease.


1. Disconnect the clutch line from the slave cylinder.

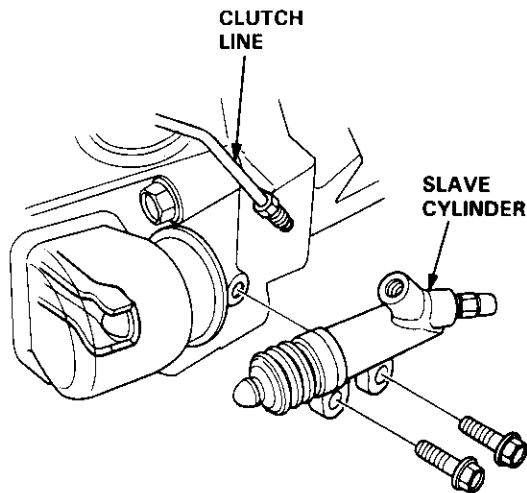

2. Remove the slave cylinder from the clutch housing.


3. Install the slave cylinder in the reverse order of removal.

NOTE: Make sure the boot is installed on the slave cylinder.

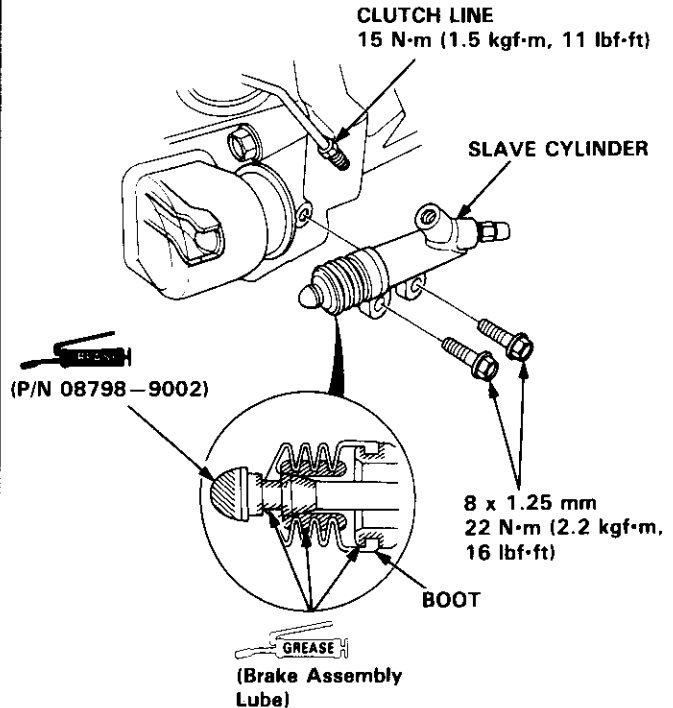

4. Bleed the clutch hydraulic system.

- Attach a hose to the bleeder screw, and suspend the hose in a container of brake fluid.
- Make sure there is an adequate supply of fluid at the clutch master cylinder, then slowly pump the clutch pedal until no more bubbles appear at the bleeder hose.
- Refill the clutch master cylinder with fluid when done.
- Always use Genuine Honda DOT 3 Brake Fluid. Using a non-Honda brake fluid can cause corrosion and decrease the life of the system.
- Confirm clutch operation, and check for leaking fluid.

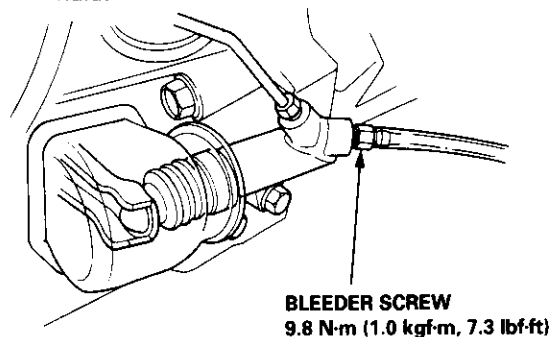




Pressure Plate

Removal/Inspection


1. Inspect the fingers of the diaphragm spring for wear at the release bearing contact area.
2. Check the diaphragm spring fingers for height using the special tools and a feeler gauge.

Standard (New): 0.6 mm (0.02 in) max.
Service Limit: 1.0 mm (0.04 in)

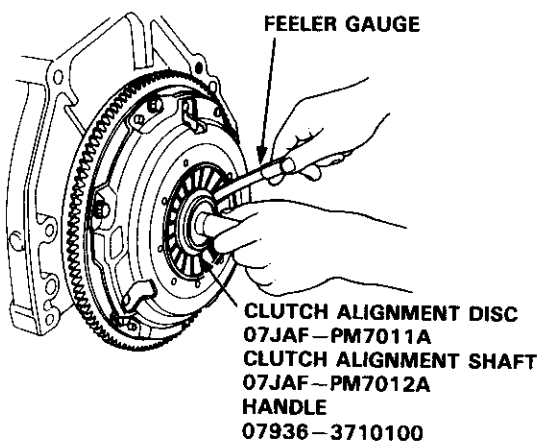

If the height exceeds the service limit, replace the pressure plate.

3. Install the special tools.

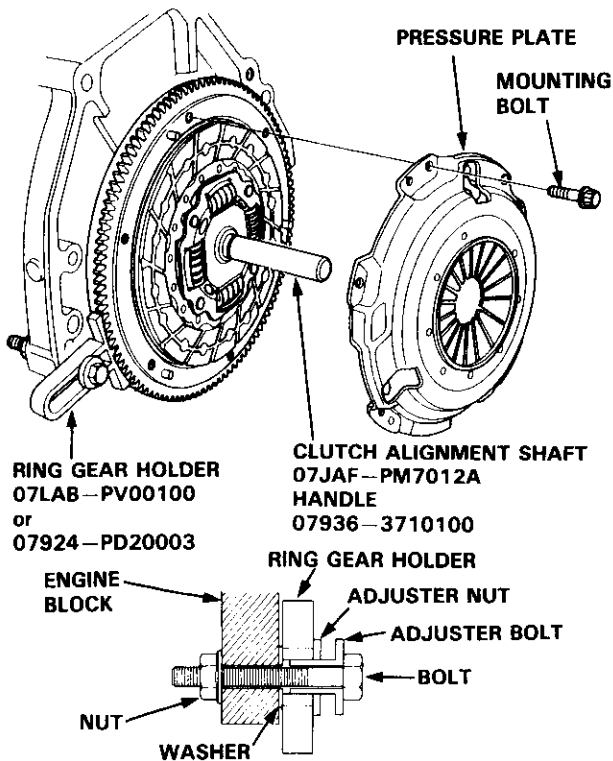


4. To prevent warping, unscrew the pressure plate mounting bolts in a crisscross pattern in several steps, then remove the pressure plate.

5. Inspect the pressure plate surface for wear, cracks, and burning.
6. Inspect for warpage using a straight edge and feeler gauge.

NOTE: Measure across the pressure plate at three points.

Standard (New): 0.03 mm (0.001 in) max.
Service Limit: 0.15 mm (0.006 in)

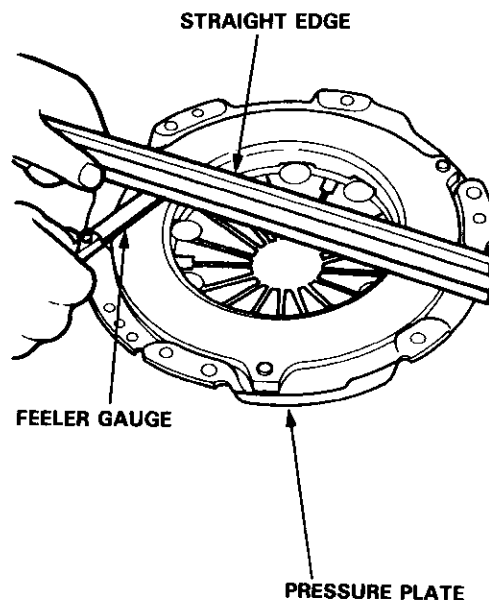


If the warpage exceeds the service limit, replace the pressure plate.

Clutch Disc


Removal/Inspection

1. Remove the clutch disc and special tools.

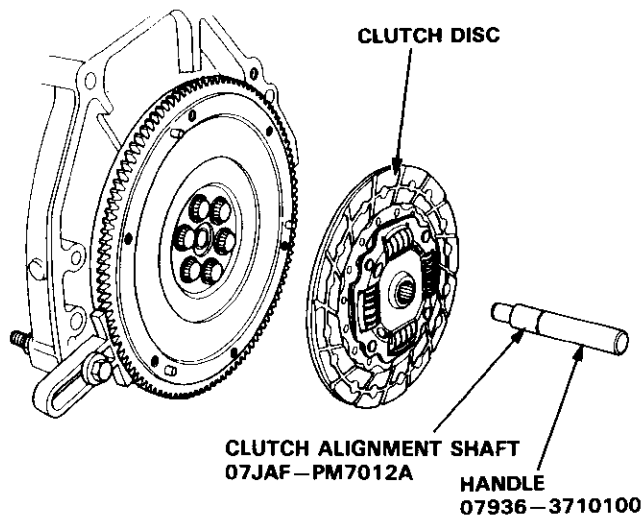

2. Inspect lining of the clutch disc for signs of slipping or oil. If it is burned black or oil soaked, replace it.
3. Measure the clutch disc thickness.


Clutch Disc Thickness:
Standard (New): 8.5–9.1 mm (0.33–0.36 in)
Service Limit: 5.5 mm (0.22 in)

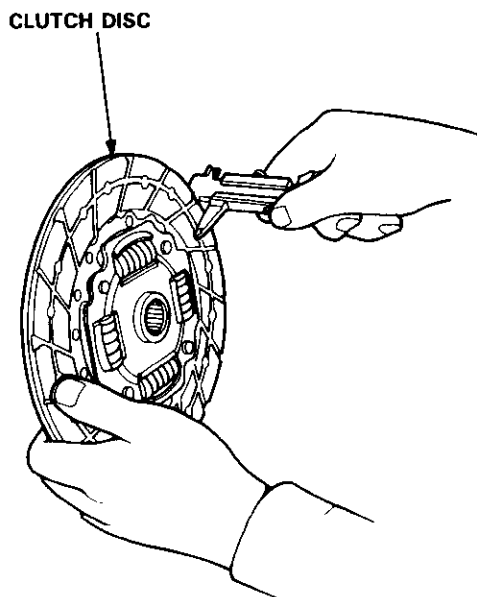

If the thickness is less than the service limit, replace the clutch disc.

4. Measure the depth from the lining surface to the rivets, on both sides.

Rivet Depth:
Standard (New): 1.3–1.9 mm (0.05–0.07 in) min.
Service Limit: 0.2 mm (0.01 in)

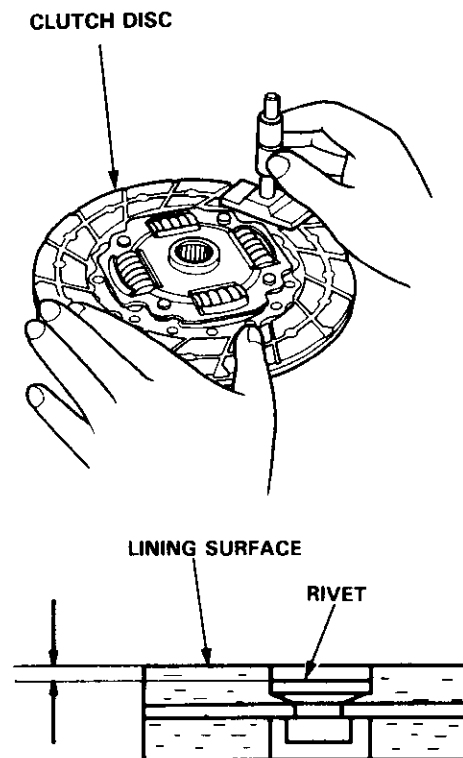

If the depth is less than the service limit, replace the clutch disc.




Flywheel

Inspection

1. Inspect the ring gear teeth for wear and damage.
2. Inspect the clutch disc mating surface on the flywheel for wear, cracks, and burning.
3. Measure the flywheel runout using a dial indicator through at least two full turns. Push against the flywheel each time you turn it to take up the crankshaft thrust washer clearance.


NOTE: The runout can be measured with engine installed.

Standard (New): 0.05 mm (0.002 in) max.
Service Limit: 0.15 mm (0.006 in)

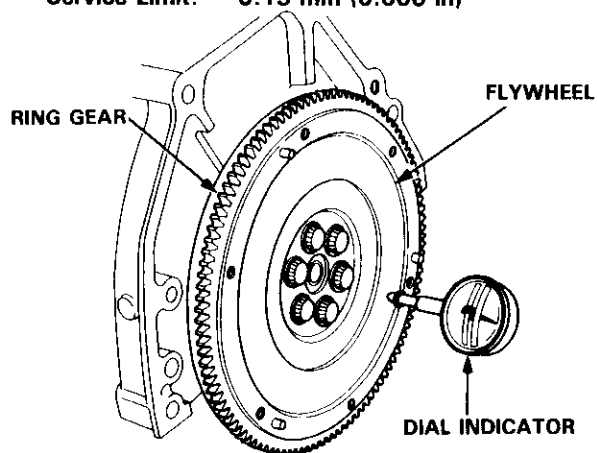


If the runout exceeds the service limit, replace the flywheel.

4. Turn the inner race of the ball bearing with your finger. The ball bearing should turn smoothly and quietly. If the inner race does not turn smoothly and quietly, replace the bearing. Check that the ball bearing outer race fits tightly in the flywheel. If it is loose, replace the ball bearing.

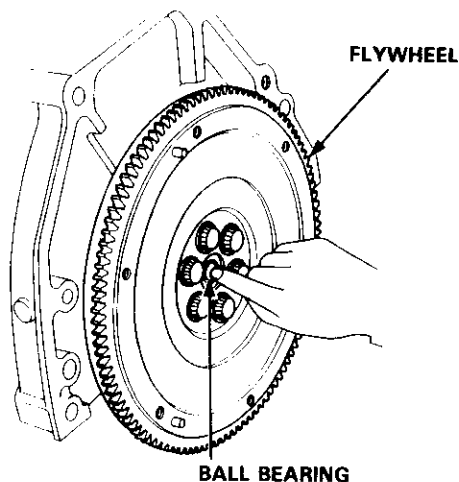


Replacement

1. Install the special tool.

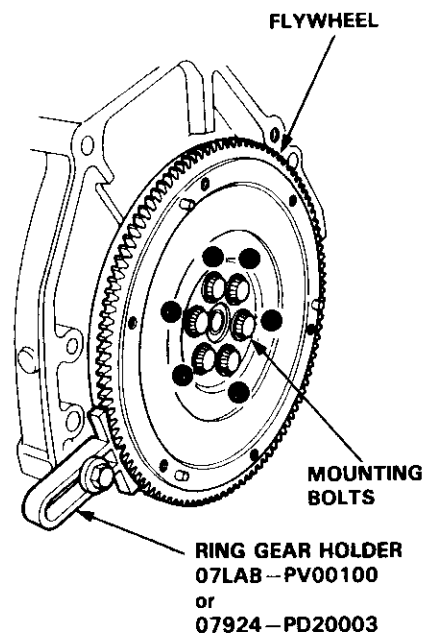


2. Remove the flywheel mounting bolts in a crisscross pattern in several steps as shown, and remove the flywheel.
3. Remove the ball bearing from the flywheel.

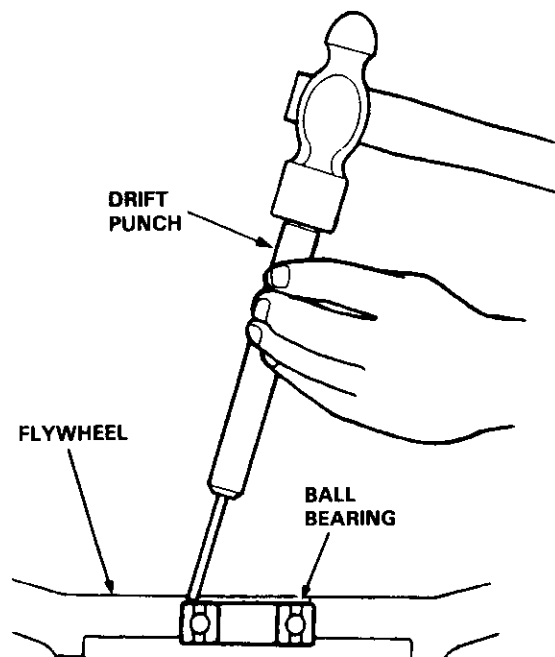


(cont'd)

Replacement (cont'd)

4. Drive the new ball bearing into the flywheel using the special tools as shown.

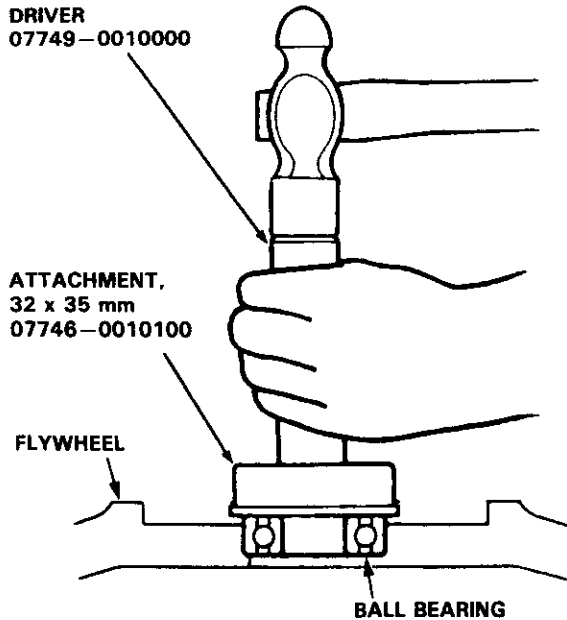


5. Align the hole in the flywheel with the crankshaft dowel pin and install the flywheel. Install the mounting bolts finger-tight.
6. Install the special tool, then torque the flywheel mounting bolts in a crisscross pattern in several steps as shown.

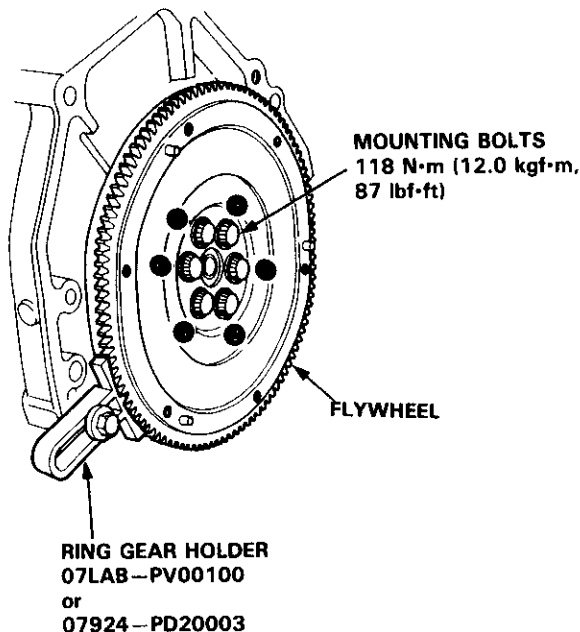


Installation

1. Install the special tool.

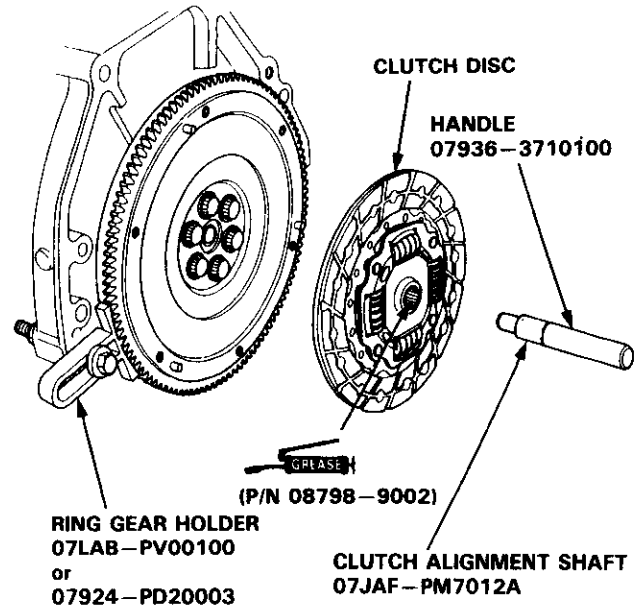


2. Install the clutch disc using the special tools.
3. Install the pressure plate.

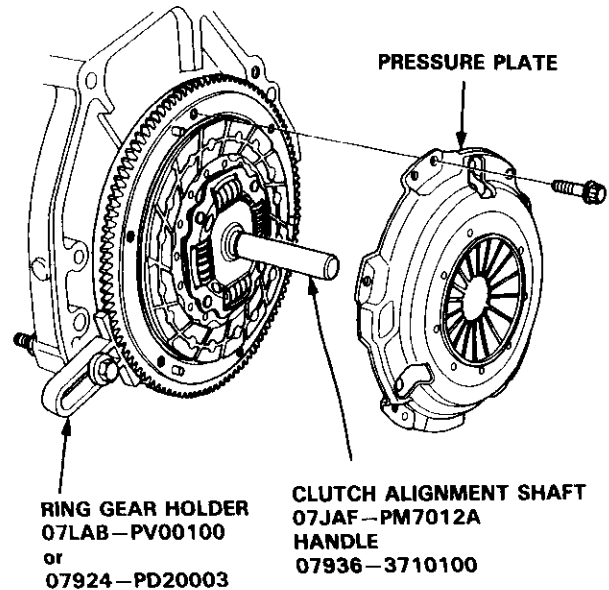



Release Bearing

4. Torque the mounting bolts in a crisscross pattern as shown. Tighten them in several steps to prevent warping the diaphragm spring.

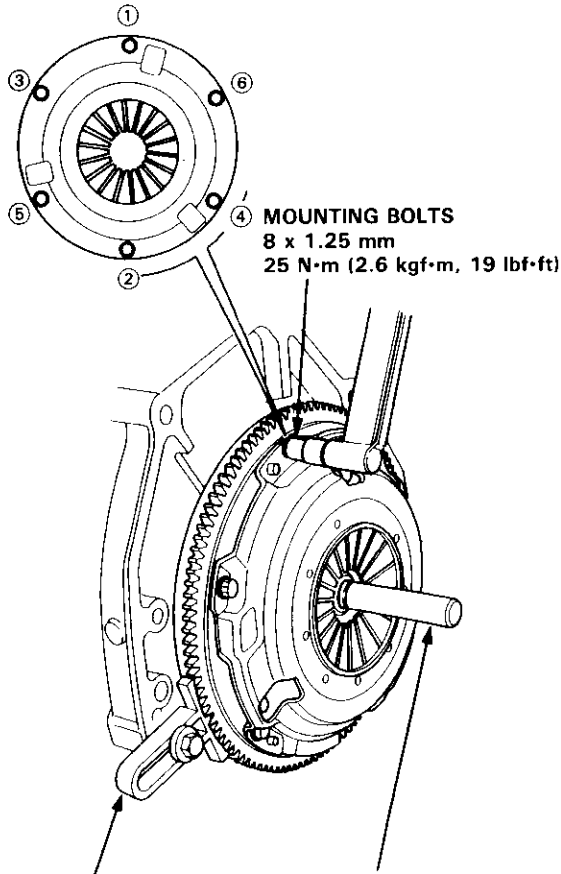


MOUNTING BOLTS
8 x 1.25 mm
25 N·m (2.6 kgf·m, 19 lbf·ft)

RING GEAR HOLDER
07LAB-PV00100
or
07924-PD20003

**CLUTCH ALIGNMENT SHAFT
HANDLE**
07JAF-PM7012A
07936-3710100


Removal/Inspection

1. Remove the release fork boot from the clutch housing.
2. Remove the release fork from the clutch housing by squeezing the release fork set spring with pliers. Remove the release bearing.

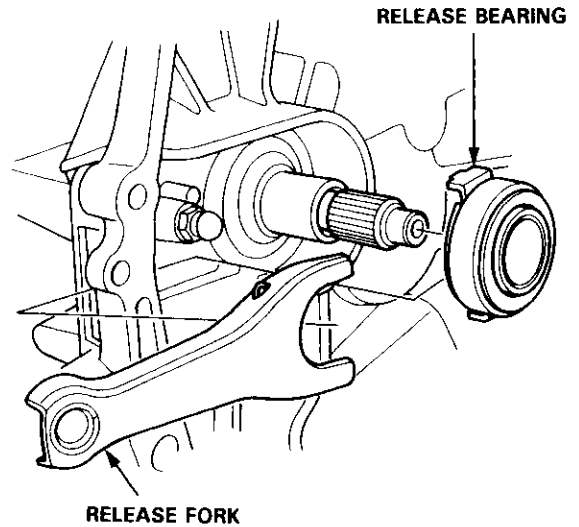

3. Check the release bearing for play by spinning it by hand.

CAUTION: The release bearing is packed with grease. Do not wash it in solvent

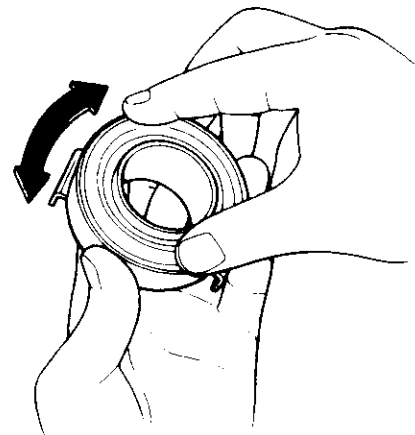

If there is excessive play, replace the release bearing with a new one.


Release Bearing

Installation

NOTE: Use only Super High Temp Urea Grease (P/N 08798-9002).


1. With the release fork slid between the release bearing pawls, install the release bearing on the main shaft while inserting the release fork through the hole in the clutch housing.

RELEASE FORK BOLT
12 x 1.25 mm
29 N·m (3.0 kgf·m, 22 lbf·ft)

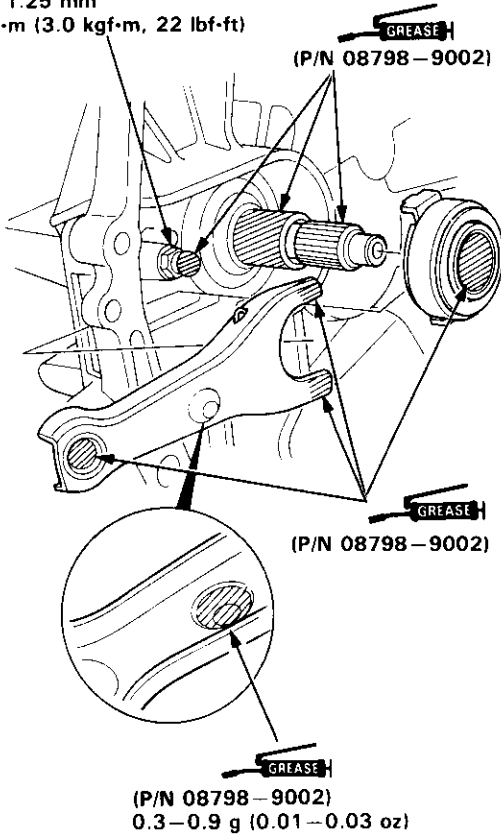

2. Align the detent of the release fork with the release fork bolt, then press the release fork over the release fork bolt squarely.

3. Move the release fork right and left to make sure that it fits properly against the release bearing, and that the release bearing slides smoothly.

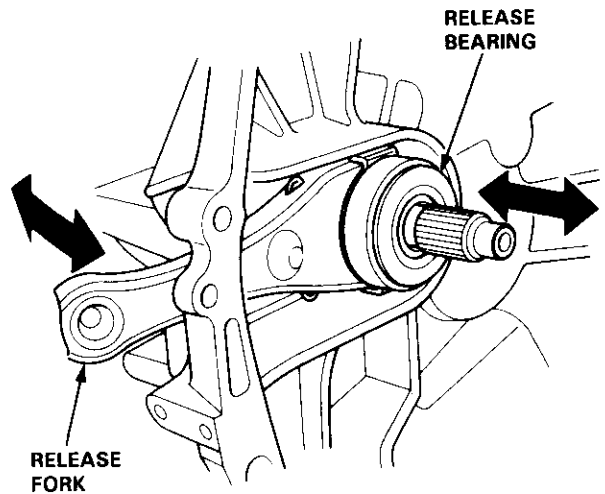

4. Install the release fork boot; make sure the boot seals around the release fork and clutch housing.

Manual Transmission


Special Tools	13-2	Shift Fork Assembly	
Maintenance		Index	13-25
Transmission Oil	13-3	Clearance Inspection	13-26
Back-up Light Switch		MBS Shift Piece Inspection	13-27
Replacement	13-3	Synchro Sleeve, Synchro Hub	
Troubleshooting	13-4	Inspection/Installation	13-27
Transmission Assembly		Synchro Ring, Gear	
Removal	13-5	Inspection	13-28
Installation	13-8	Shift Rod	
Illustrated Index	13-10	Removal	13-29
Transmission Housing		Differential	
Removal	13-12	Index	13-30
Reverse Shift Holder		Backlash Inspection	13-30
Clearance Inspection	13-13	Bearing Replacement	13-31
Reverse Idler Gear		Final Driven Gear Replacement	13-31
Removal	13-14	Thrust Shim Adjustment	13-32
Mainshaft, Countershaft, Shift Fork		Clutch Housing Bearing	
Disassembly	13-14	Replacement	13-34
Mainshaft Assembly		Mainshaft Thrust Shim	
Index	13-15	Adjustment	13-36
Clearance Inspection	13-16	Transmission	
Disassembly	13-17	Reassembly	13-39
Inspection	13-18	Oil Seals	
Reassembly	13-19	Replacement	13-43
Countershaft Assembly		Gearshift Mechanism	
Index	13-20	Overhaul	13-44
Clearance Inspection	13-21		
Disassembly	13-22		
Inspection	13-23		
Reassembly	13-23		



Special Tools

Ref. No.	Tool Number	Description	Qty	Page Reference
①	07GAJ-PG20110	Mainshaft Holder	1	13-38
②	07GAJ-PG20120	Collar	1	13-37
③	07GAJ-PG20130	Mainshaft Base	1	13-37
*④	07736-A01000A	Adjustable Bearing Puller, 25-40 mm	1	13-34, 35
⑤	07746-0010300	Attachment, 42 x 47 mm	1	13-34, 35
⑥	07746-0010400	Attachment, 52 x 55 mm	1	13-34, 35
⑦	07746-0030100	Driver, 40 mm I.D.	1	13-19, 24, 31, 32
⑧	07746-0030300	Attachment, 30 mm I.D.	1	13-19, 24
⑨	07746-0030400	Attachment, 35 mm I.D.	1	13-19, 24
⑩	07749-0010000	Driver	1	13-34, 35, 43
⑪	07JAD-PH80101	Driver Attachment	1	13-43
⑫	07JAD-PH80200	Pilot, 26 x 30 mm	1	13-43
⑬	07947-6110501 or 07947-6110500	Seal Driver Attachment	1	13-43


* Must be used with commercially-available 3/8" -16 Slide Hammer.

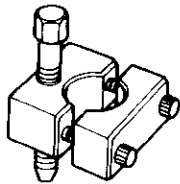


①




②

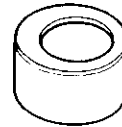


③

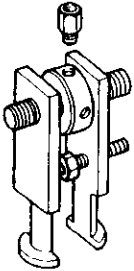


④

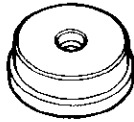

⑤

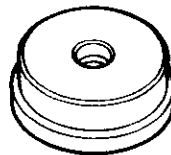


⑥

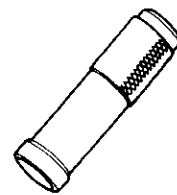


⑦




⑧




⑨

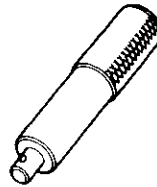


⑩

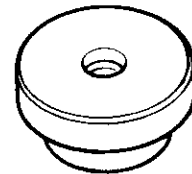

⑪



⑫

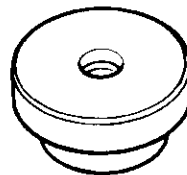


⑬



Transmission Oil

NOTE: Check the transmission oil with the engine OFF and the vehicle on level ground.

1. Remove the oil filler plug, then check the level and condition of the oil.

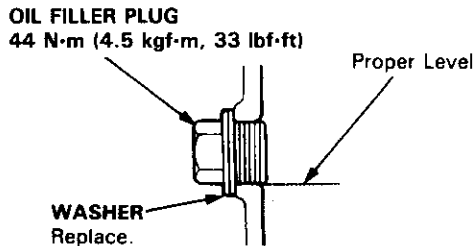

2. The oil level must be up to the filler hole. If it is below the hole, add oil until it runs out, then reinstall the oil filler plug with a new washer.
3. If the transmission oil is dirty, remove the drain plug and drain the oil.
4. Reinstall the drain plug with a new washer, and refill the transmission with the recommended oil to the proper level.


NOTE: The drain plug washer should be replaced at every oil change.

5. Reinstall the oil filler plug with a new washer.

Oil Capacity

1.8 l (1.9 US qt, 1.6 Imp qt) at oil change
1.9 l (2.0 US qt, 1.7 Imp qt) at overhaul


Always use Genuine Honda Manual Transmission Fluid (MTF). Using motor oil can cause stiffer shifting because it does not contain the proper additives.

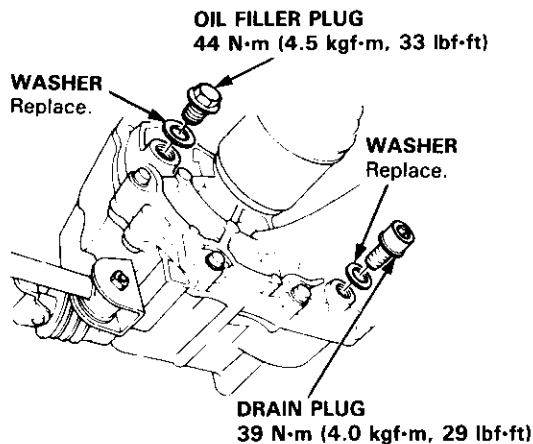

Replacement

NOTE: To test the back-up light switch, see section 23.

1. Disconnect the connector, then remove the back-up light switch connector from the connector clamp.
2. Remove the back-up light switch.

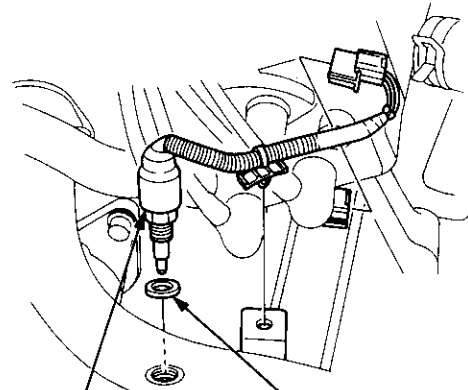

BACK-UP LIGHT SWITCH
25 N·m (2.5 kgf·m, 18 lbf·ft)

WASHER
Replace.

3. Install the new washer and back-up light switch.
4. Connect the back-up light switch connector.

Troubleshooting

Reverse Gear Noise Reduction System


Whenever the clutch pedal is depressed to shift into reverse, the mainshaft continues to rotate because of its inertia. The resulting speed difference between mainshaft and reverse idler gear produces gear noise.

The reverse gear noise reduction system employs a cam plate which was added to the reverse shift holder. When shifting into reverse, the 5th/reverse shift piece, connected to the shift lever, rotates the cam plate. This causes the 5th synchro set to stop the rotating mainshaft. As there is no speed difference between mainshaft and reverse idler gear, there will be less gear noise.

NOTE: This system is not a fully-synchronized gear noise reduction system.

Therefore, you may hear gear noise when

- ① you shift into reverse with the vehicle not yet completely stopped.
- ② you shift quickly into reverse during fast idling.

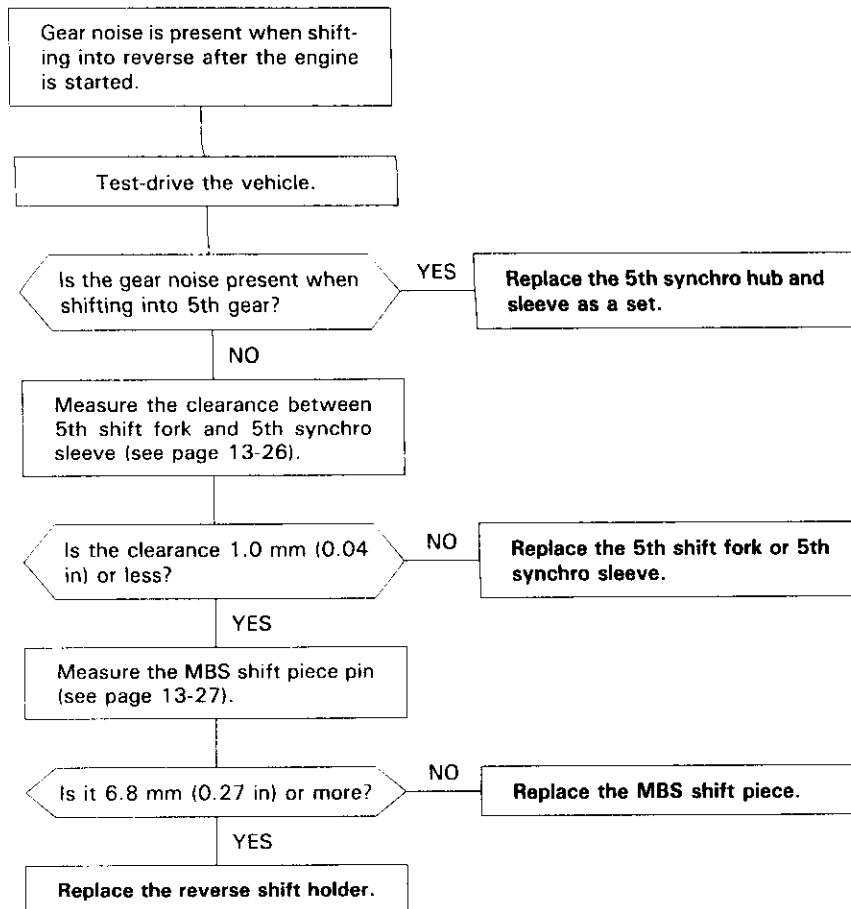

Transmission Assembly




Removal

⚠ WARNING

- Make sure jacks and safety stands are placed properly, and hoist brackets are attached to correct position on the engine.
- Apply parking brake and block rear wheels so car will not roll off stands and fall on you while working under it.


CAUTION: Use fender covers to avoid damaging painted surfaces.

1. Disconnect the negative (-) cable first, then the positive (+) cable from the battery.
2. Drain transmission oil (see page 13-3).
3. Remove the intake air tube, intake air duct and air cleaner housing assembly (see section 5).
4. Disconnect the starter motor cables, transmission ground wire and back-up light switch connector.

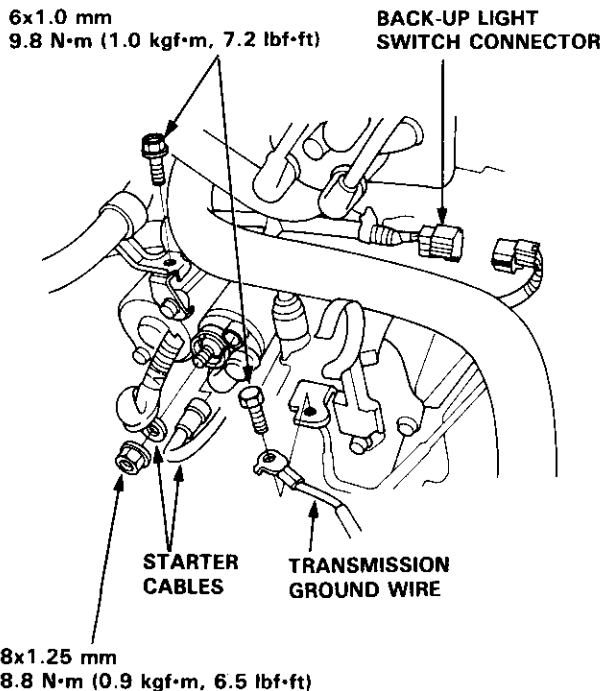

5. Remove the wire harness clamps.


6. Disconnect the vehicle speed sensor (VSS) connector.

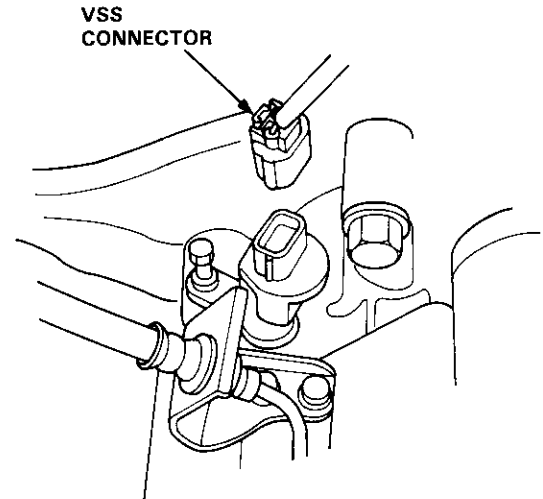

7. Remove the clutch line bracket, clutch line clamp, and slave cylinder.

CAUTION:

- Do not operate the clutch pedal once the slave cylinder has been removed.
- Take care not to bend the clutch line.

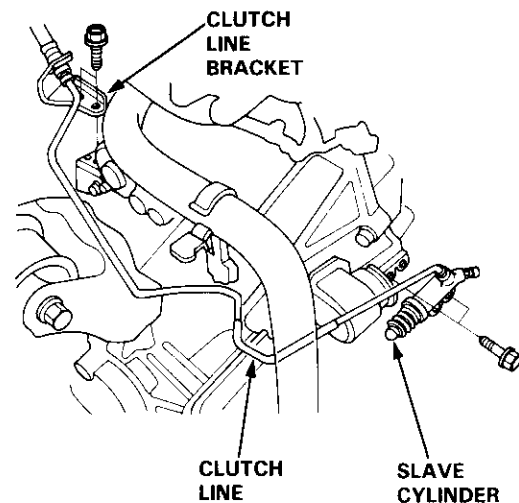


(cont'd)

Transmission Assembly


Removal (cont'd)

8. Remove the driveshafts (see section 16).


NOTE: Coat all the precision finished surfaces with clean engine oil or grease. Tie plastic bags over the driveshaft ends.

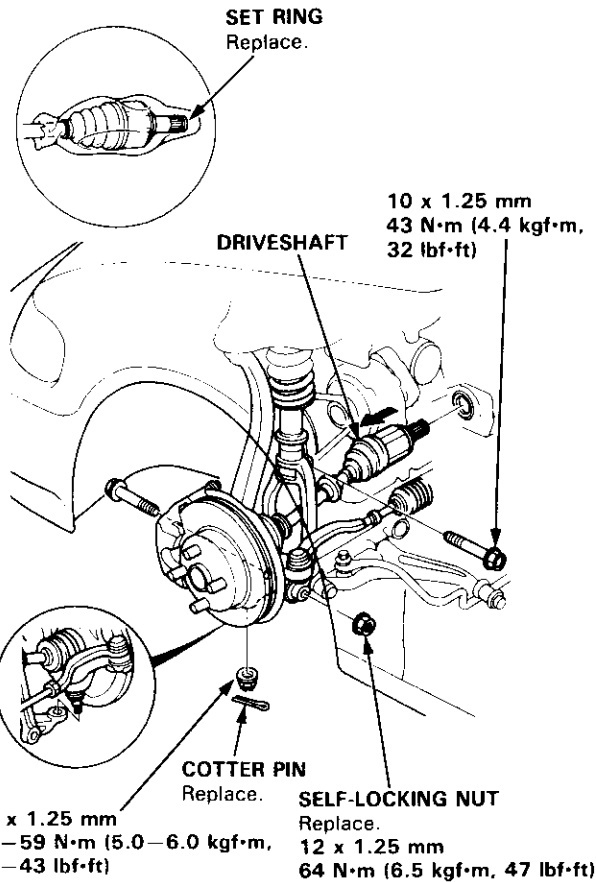

9. Remove exhaust pipe A.

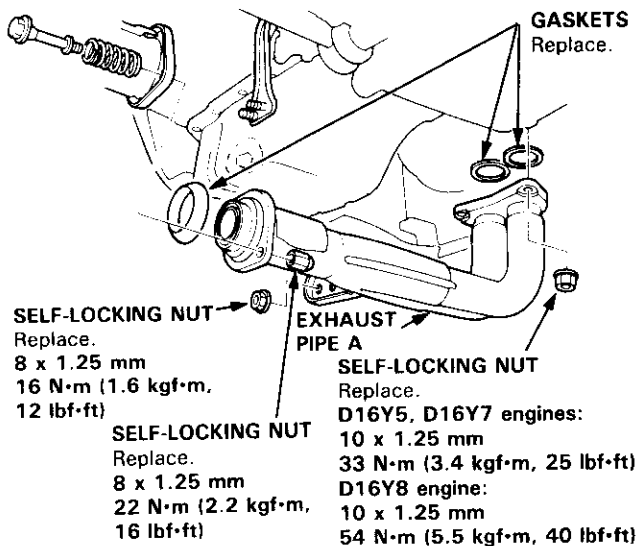


10. Remove the shift rod and extension rod.

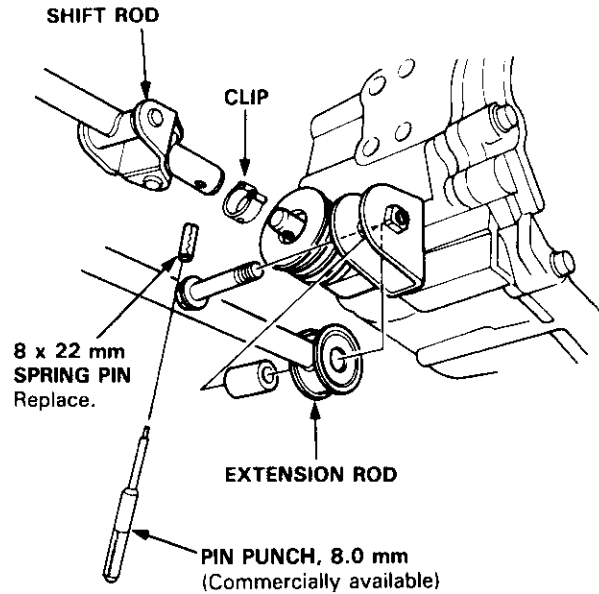


11. Remove the engine stiffeners and clutch cover.

D16Y5, D16Y8 engines:

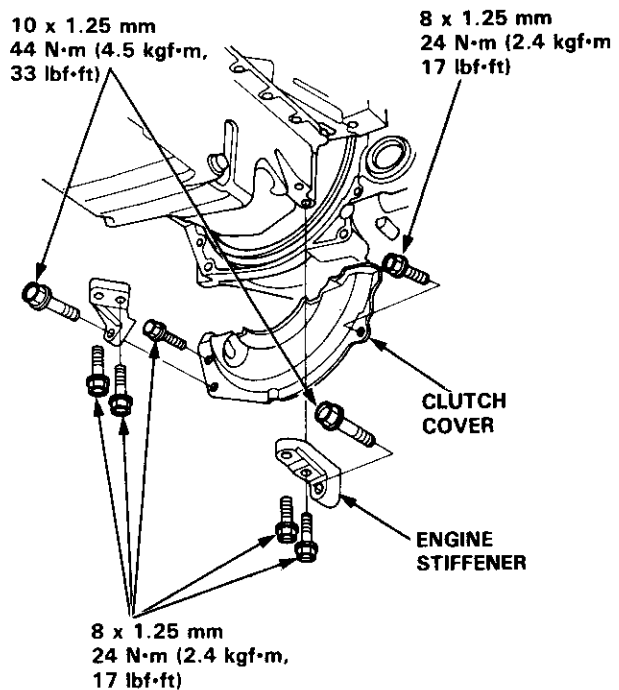




D16Y7 engine:

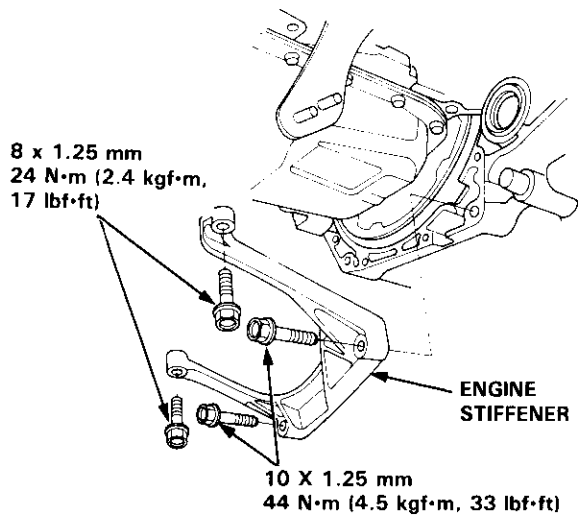


12. Install the bolts in the cylinder head and attach a chain hoist to the bolts, then lift the engine slightly to unload the engine and transmission mounts.


CHAIN HOIST

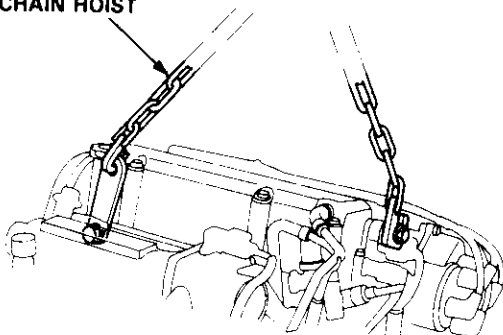

13. Remove the splash shield.

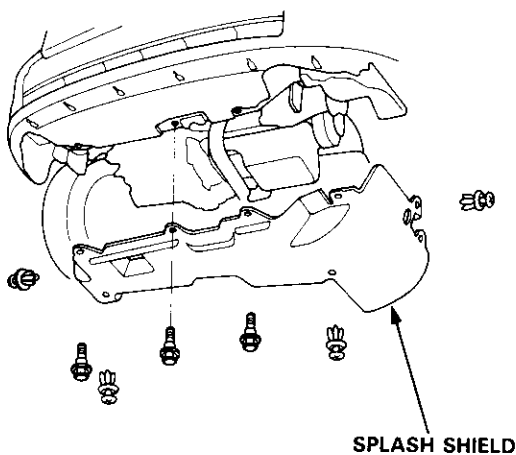


14. Remove the right front mount/bracket.

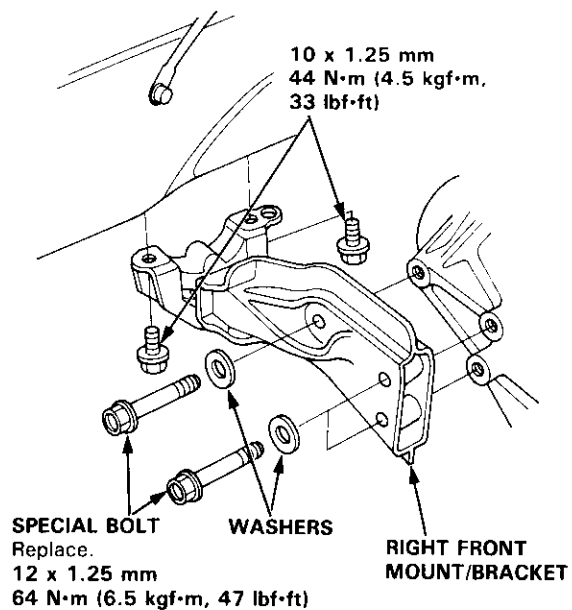

15. Place a jack under the transmission.

16. Remove the transmission mount bracket and mount.

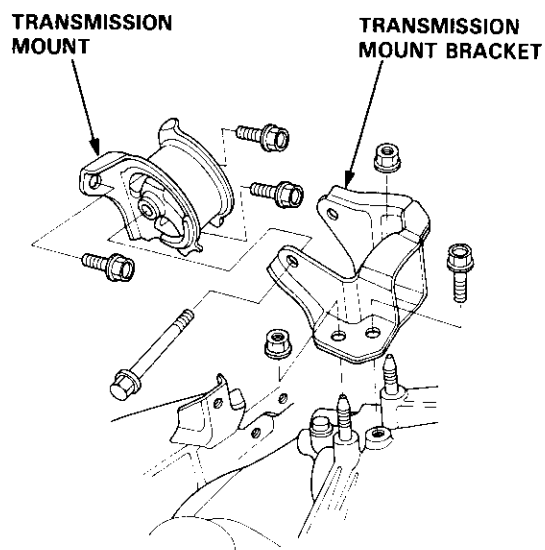


(cont'd)


Transmission Assembly

Removal (cont'd)

17. Remove the three upper transmission mounting bolts and the lower starter mounting bolt.

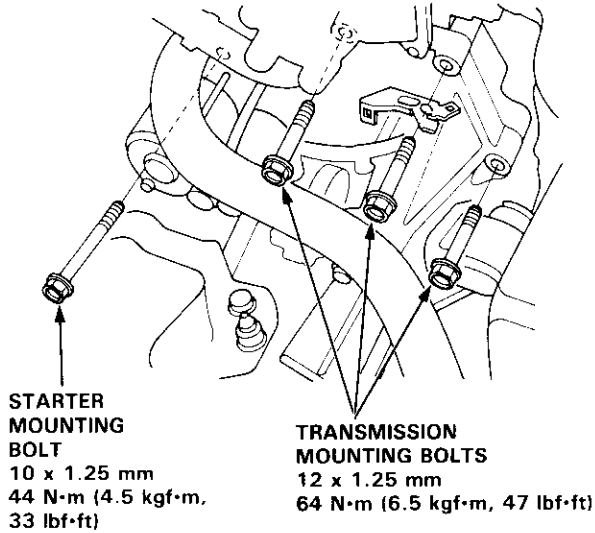

18. Remove the rear mount bracket bolts and transmission mounting bolts.

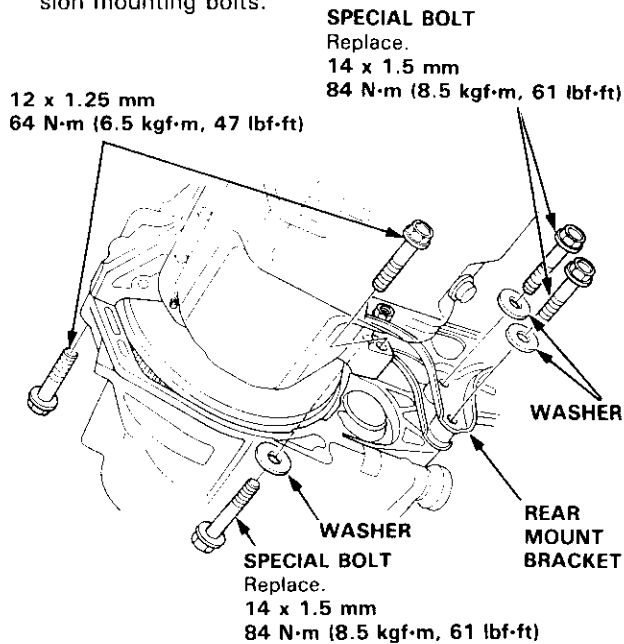

19. Pull the transmission away from the engine until it clears the mainshaft, then lower it on the transmission jack.


CAUTION: Take care not to bend the clutch line.

Installation

Install the transmission assembly in the reverse order of removal.


- Before installing, check that the two dowel pins are installed in the clutch housing.
- When installing the starter cable, make sure that the crimped side of the ring terminal is facing out (see section 23).
- Apply grease to the parts as shown, then install the release fork and release bearing.

NOTE: Use only Super High Temp Urea Grease (P/N 08798-9002).

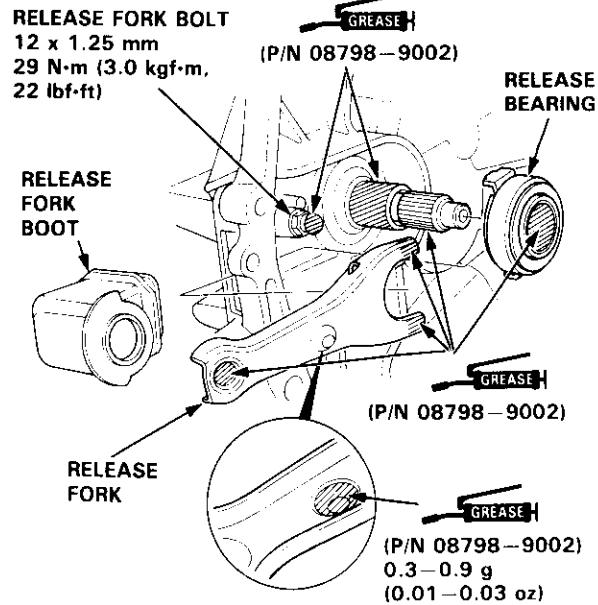




- Torque the mounting bolt and nuts in the sequence shown.

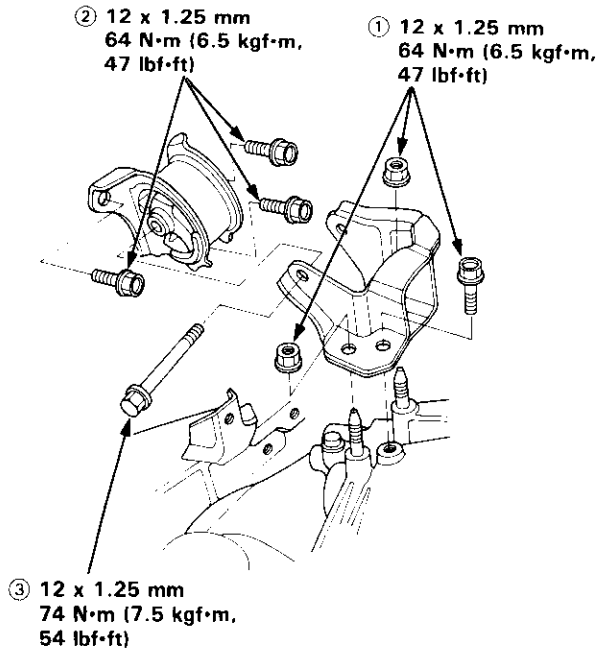


- Check that the bushings are not twisted or offset.
- Install the clip as shown.

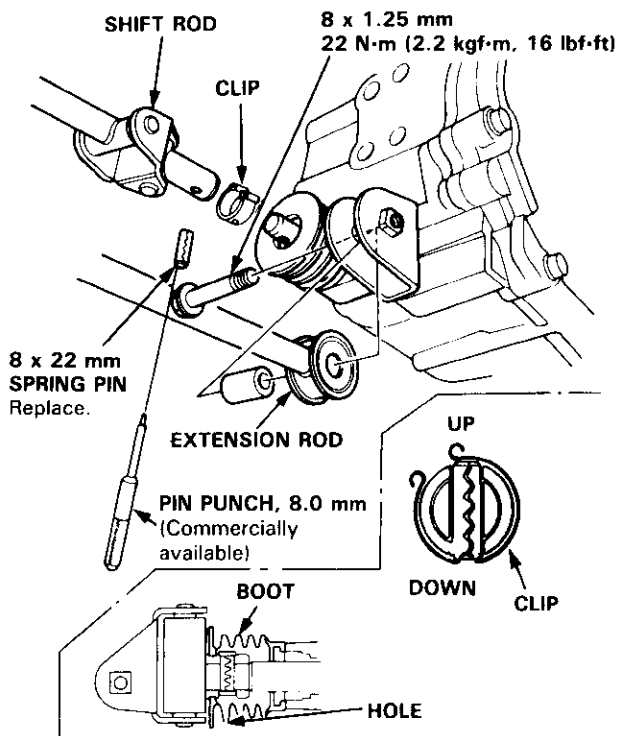


- Turn the boot so the hole is facing down.
- Make sure the boot is installed on the shift rod.

- Apply grease to the slave cylinder push rod.

NOTE: Use only Super High Temp Urea Grease (P/N 08798-9002).

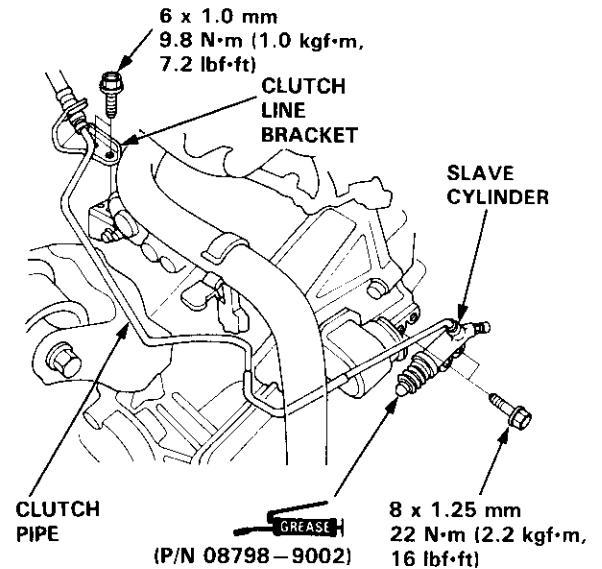


- Turn the breather cap so that the "F" mark points at the front of the car as shown.

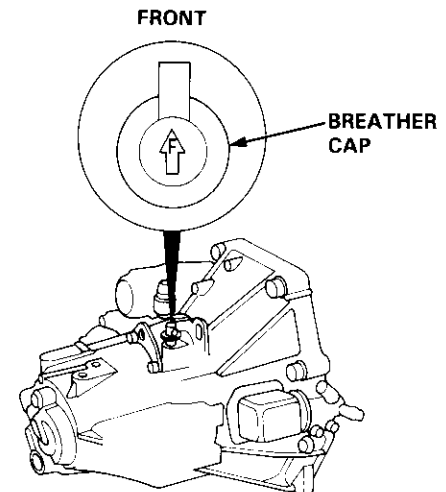

- Refill the transmission with the recommended oil (see page 13-3).
- Connect the positive (+) cable first, then the negative (-) cable to the battery.
- Check the clutch operation.
- Shift the transmission and check for smooth operation.
- Check the front wheel alignment (see section 18).


Illustrated Index

Refer to the drawing below for transmission disassembly/reassembly.
Clean all the parts thoroughly in solvent and dry with compressed air.

 Lubricate all the parts with oil before reassembly.

NOTE:

- This transmission uses no gaskets between the major housings; use liquid gasket (P/N 08718-0001 or 08718-0003) (see page 13-41).
- Always clean the magnet (66) whenever the transmission housing is disassembled.
- Inspect all the bearings for wear and operation.

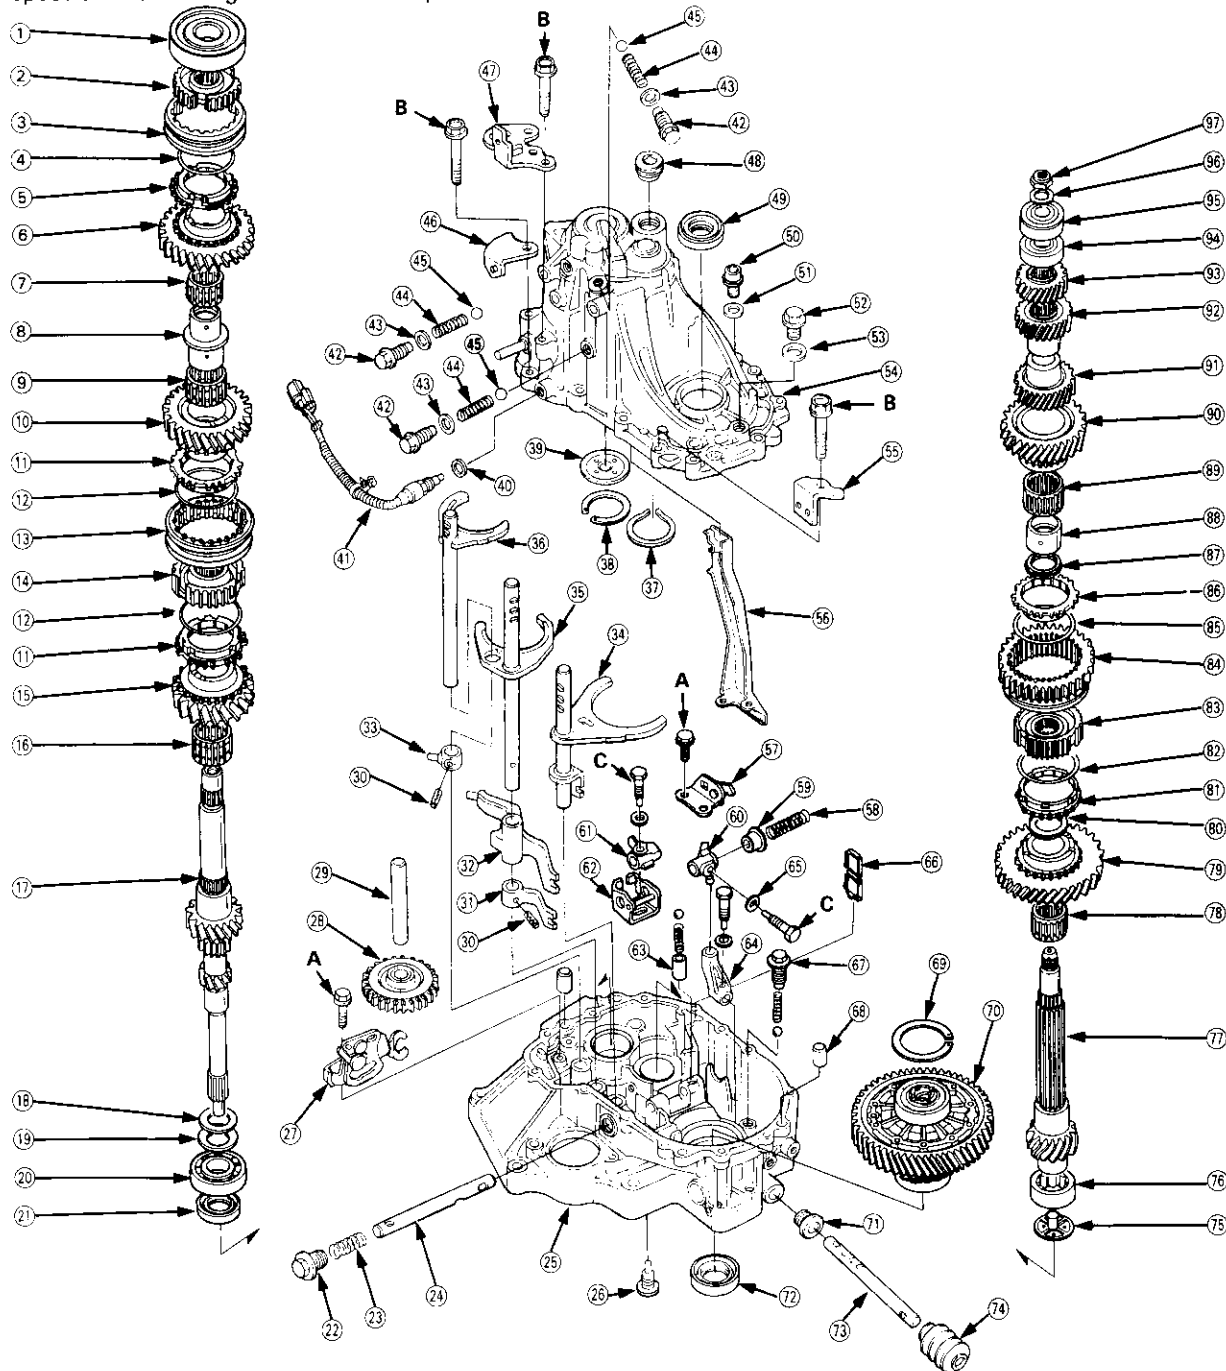



Torque Value
A - 15 N·m (1.5 kgf·m, 11 lbf·ft)
B - 27 N·m (2.8 kgf·m, 20 lbf·ft)
C - 31 N·m (3.2 kgf·m, 23 lbf·ft)

- | | | |
|---|--|--|
| ① BALL BEARING (*1)
ANGULAR
BALL BEARING (*2) | ③⑤ 3RD/4TH SHIFT FORK | ⑥⑨ 72 mm THRUST SHIM (*1)
80 mm THRUST SHIM (*2)
Selection, page 13-33 |
| ② 5TH SYNCHRO HUB | ③⑥ 5TH/REVERSE SHIFT FORK | ⑦⑩ DIFFERENTIAL ASSEMBLY
See page 13-30 |
| ③ 5TH SYNCHRO SLEEVE | ③⑦ 52 mm SNAP RING | ⑦⑪ 14 x 25 x 17.5 mm OIL SEAL
Replace. |
| ④ SYNCHRO RING | ③⑧ 65 mm THRUST SHIM (*1)
70 mm THRUST SHIM (*2)
Selection, page 13-36 | ⑦⑫ 35 x 56 x 8 mm OIL SEAL
Replace. |
| ⑤ SYNCHRO RING | ③⑨ OIL GUIDE PLATE | ⑦⑬ SHIFT ROD |
| ⑥ 5TH GEAR | ④⑩ WASHER Replace. | ⑦⑭ BOOT |
| ⑦ 32 x 37 x 23.5 mm
NEEDLE BEARING | ④⑪ BACK-UP LIGHT SWITCH
25 N·m (2.5 kgf·m, 18 lbf·ft) | ⑦⑮ OIL GUIDE PLATE |
| ⑧ SPACER COLLAR | ④⑫ SET SCREW
22 N·m (2.2 kgf·m, 16 lbf·ft) | ⑦⑯ 30 x 47 x 21 mm
NEEDLE BEARING (*1) |
| ⑨ 34 x 39 x 23 mm
NEEDLE BEARING | ④⑬ WASHER Replace. | ⑦⑰ 30 x 55 x 21 mm
NEEDLE BEARING (*2) |
| ⑩ 4TH GEAR | ④⑭ SPRING L. 31.6 mm (1.24 in) | ⑦⑱ COUNTERSHAFT |
| ⑪ SYNCHRO RING | ④⑮ STEEL BALL (5/16 in) | ⑦⑲ 36 x 41 x 25.5 mm
NEEDLE BEARING
Check for wear and
operation. |
| ⑫ SYNCHRO SPRING | ④⑯ BACK-UP LIGHT
SWITCH HARNESS STAY | ⑦⑳ 1ST GEAR |
| ⑬ 3RD/4TH SYNCHRO SLEEVE | ④⑰ TRANSMISSION HANGER | ⑧① FRICTION DAMPER |
| ⑭ 3RD/4TH SYNCHRO HUB | ④⑱ 32 mm SEALING BOLT
25 N·m (2.5 kgf·m, 18 lbf·ft) | ⑧② SYNCHRO RING |
| ⑮ 3RD GEAR | ④⑲ OIL SEAL
Replace. | ⑧③ SYNCHRO SPRING |
| ⑯ 34 x 39 x 27.5 mm
NEEDLE BEARING | ⑤① OIL DRAIN PLUG
39 N·m (4.0 kgf·m, 29 lbf·ft) | ⑧④ 1ST/2ND SYNCHRO HUB |
| ⑰ MAINSHAFT | ⑤② WASHER Replace. | ⑧⑤ REVERSE GEAR |
| ⑱ WASHER | ⑤③ OIL FILLER PLUG
44 N·m (4.5 kgf·m, 33 lbf·ft) | ⑧⑥ SYNCHRO SPRING |
| ⑲ SPRING WASHER | ⑤④ WASHER Replace. | ⑧⑦ SYNCHRO RING |
| ⑳ BALL BEARING
Check for wear and
operation. | ⑤⑤ TRANSMISSION HOUSING | ⑧⑧ FRICTION DAMPER |
| ㉑ 26 x 42 x 7 mm OIL SEAL
Replace. | ⑤⑥ RELEASE PIPE STAY | ⑧⑨ SPACER |
| ㉒ 28 mm PLUG BOLT
54 N·m (5.5 kgf·m, 40 lbf·ft) | ⑤⑦ OIL GUTTER PLATE | ⑧⑩ 39 x 44 x 27 mm
NEEDLE BEARING |
| ㉓ 1ST/2ND SELECT SPRING
L. 36.26 mm (1.428 in) | ⑤⑧ REVERSE LOCK CAM | ⑨① 2ND GEAR |
| ㉔ SHIFT ARM SHAFT | ⑤⑨ REVERSE SELECT SPRING
L. 63.4 mm (2.496 in) | ⑨② 3RD GEAR |
| ㉕ CLUTCH HOUSING | ⑤⑩ REVERSE SELECT RETAINER | ⑨③ 4TH GEAR |
| ㉖ INTERLOCK GUIDE BOLT
39 N·m (4.0 kgf·m, 29 lbf·ft) | ⑥① SHIFT ARM C | ⑨④ 5TH GEAR |
| ㉗ REVERSE SHIFT HOLDER | ⑥② SHIFT ARM B | ⑨⑤ BALL BEARING (*1)
NEEDLE BEARING (*2) |
| ㉘ REVERSE IDLER GEAR | ⑥③ INTERLOCK | ⑨⑥ BALL BEARING |
| ㉙ REVERSE IDLER GEAR SHAFT | ⑥④ COLLAR | ⑨⑦ SPRING WASHER |
| ⑳ 5 x 22 mm SPRING PIN
Replace. | ⑥⑤ SHIFT ARM A | ⑨⑧ LOCKNUT Replace.
108 → 0 → 108 N·m
(11.0 → 0 → 11.0 kgf·m,
79.6 → 0 → 79.6 lbf·ft) |
| ㉑ 3RD/4TH SHIFT PIECE | ⑥⑥ SPRING WASHER | |
| ㉒ 5TH/REVERSE SHIFT PIECE | ⑥⑦ MAGNET | |
| ㉓ MBS SHIFT PIECE | ⑥⑧ SET BALL SPRING BOLT
22 N·m (2.2 kgf·m, 16 lbf·ft) | |
| ㉔ 1ST/2ND SHIFT FORK | ⑥⑨ 14 x 20 mm DOWEL PIN | |

*1: D16Y7 engine


*2: D16Y5, D16Y8 engines

Transmission Housing


Removal

NOTE: Place the clutch housing on two pieces of wood thick enough to keep the mainshaft from hitting the workbench.


1. Remove the back-up light switch.
2. Remove transmission hanger.

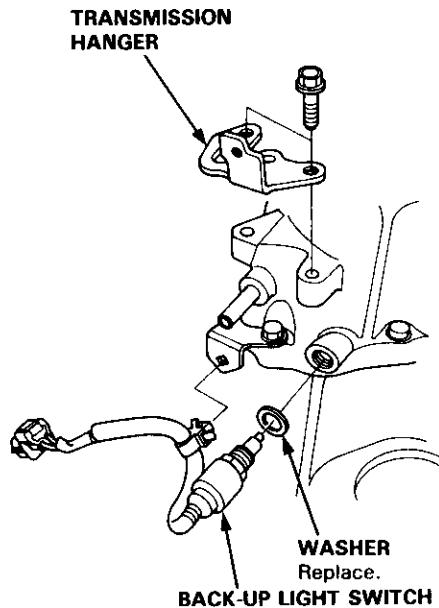


3. Remove the setting screws, washers, springs, and steel balls.

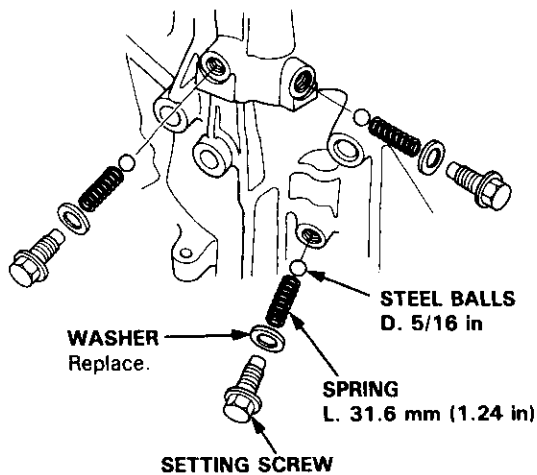

4. Loosen the transmission housing attaching bolts in a crisscross pattern in several steps, then remove them.
5. Remove the 32 mm sealing bolt.
6. Expand the snap ring on the countershaft ball bearing, and remove it from the groove using a pair of snap ring pliers.

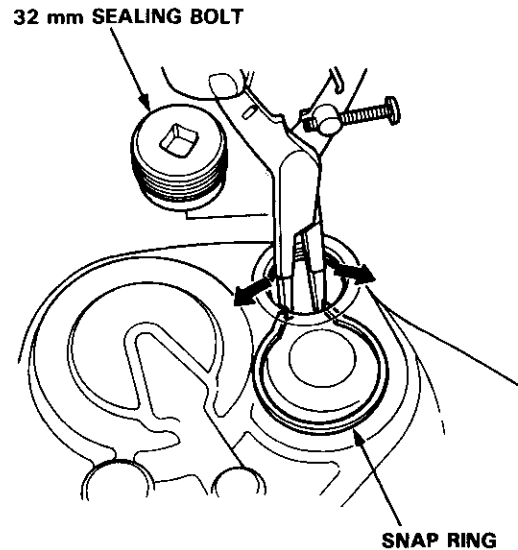

7. Separate the transmission housing from the clutch housing, and wipe it clean of the sealant.
8. Remove the thrust shim, oil guide plate, and oil gutter plate from the transmission housing.

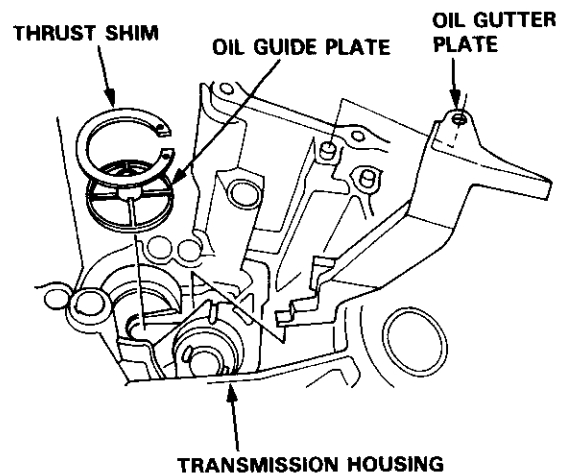


Reverse Shift Holder



Clearance Inspection


1. Measure the clearance between the reverse shift fork and 5th/reverse shift piece pin.

Standard: 0.05–0.35 mm (0.002–0.014 in)
Service Limit: 0.5 mm (0.02 in)

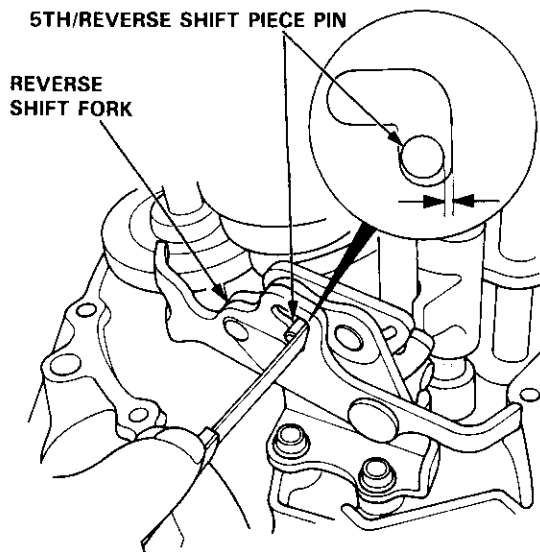

2. If the clearances are more than the service limit, measure the widths of the groove in the reverse shift fork.


Standard: 7.15 – 7.35 mm (0.281 – 0.289 in)

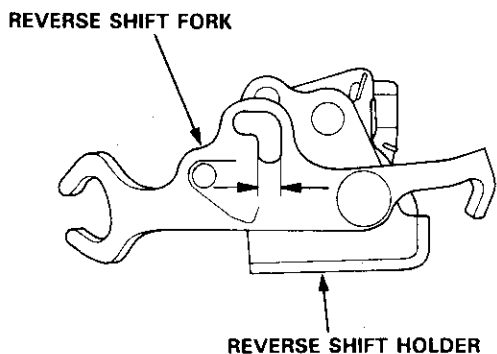

- If the widths of the grooves are not within the standard, replace the reverse shift holder with a new one.
- If the width of the grooves are within the standard, replace the 5th/reverse shift piece with a new one.


3. Measure the clearance between the reverse idler gear and the reverse shift fork.

Standard: 0.5–1.1 mm (0.02–0.04 in)
Service Limit: 1.8 mm (0.07 in)

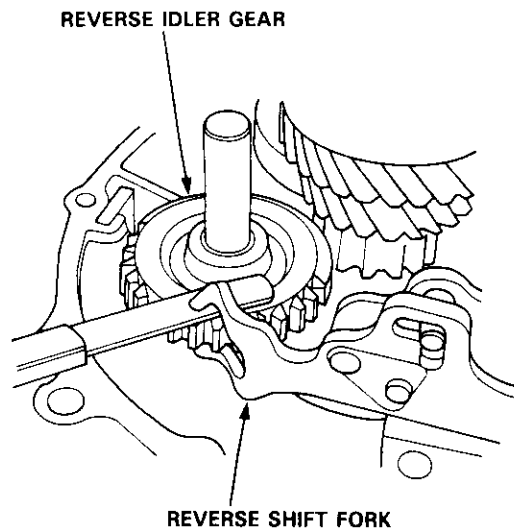

4. If the clearance is more than the service limit, measure the width of the reverse shift fork.

Standard: 12.7 – 13.0 mm (0.500–0.512 in)

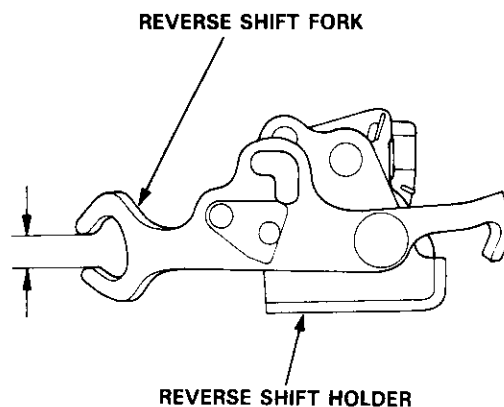


- If the width is not within the standard, replace the reverse shift holder with a new one.
- If the width is within the standard, replace the reverse idler gear with a new one.

Mainshaft, Countershaft, Shift Fork


Reverse Idler Gear

Removal

1. Remove the reverse shift holder.

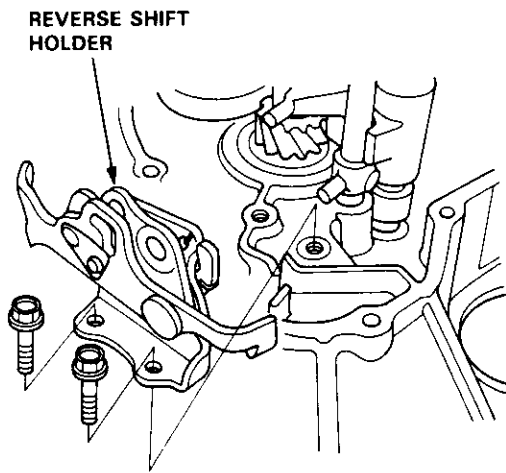


2. Remove the reverse idler gear shaft and reverse idler gear.

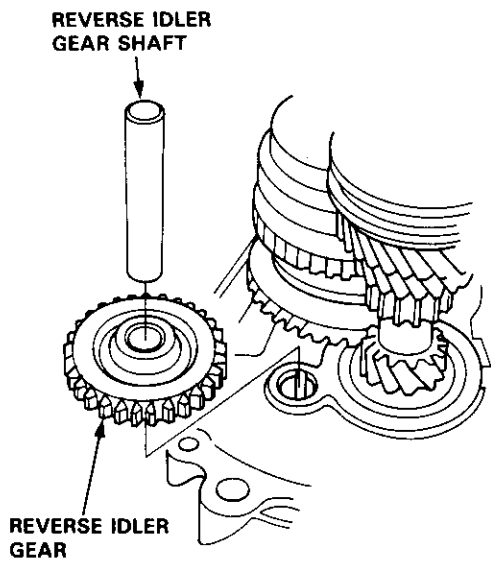


Disassembly

1. Remove the interlock guide bolt from under the clutch housing.

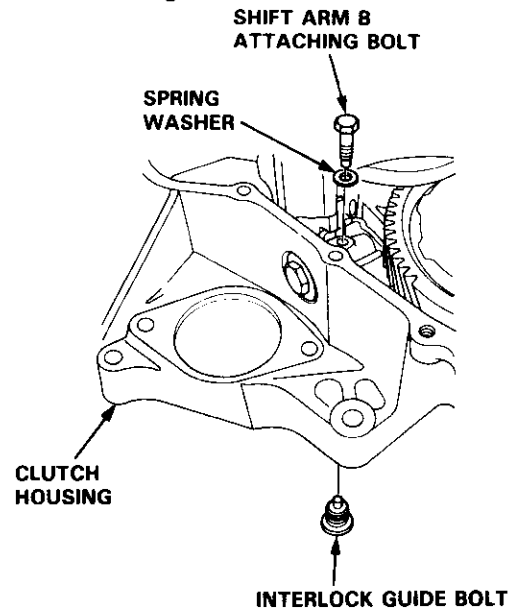

2. Remove the shift arm B attaching bolt.
3. Remove the mainshaft and countershaft assemblies with the shift fork from the clutch housing.

NOTE: Before removing the mainshaft and countershaft assemblies, tape the mainshaft splines to protect the seal.

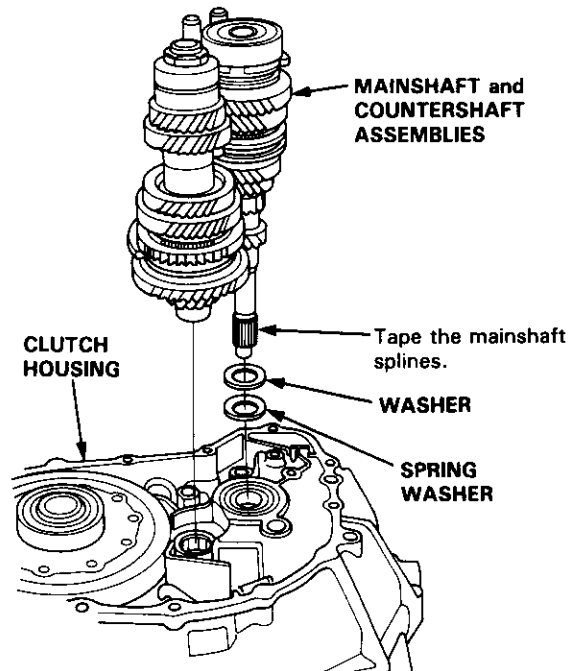


Mainshaft Assembly




Index

Note the following during reassembly:

- The 3rd/4th and 5th synchro hubs are installed with a press.
- Install the angular ball bearing with the thin-edge outer race facing the 5th synchro hub.
- Install the ball bearing with the ball cage facing up.

 Prior to reassembling, clean all the parts in solvent, dry them and apply lubricant to all contact surfaces the 3rd/4th and 5th synchro hubs.

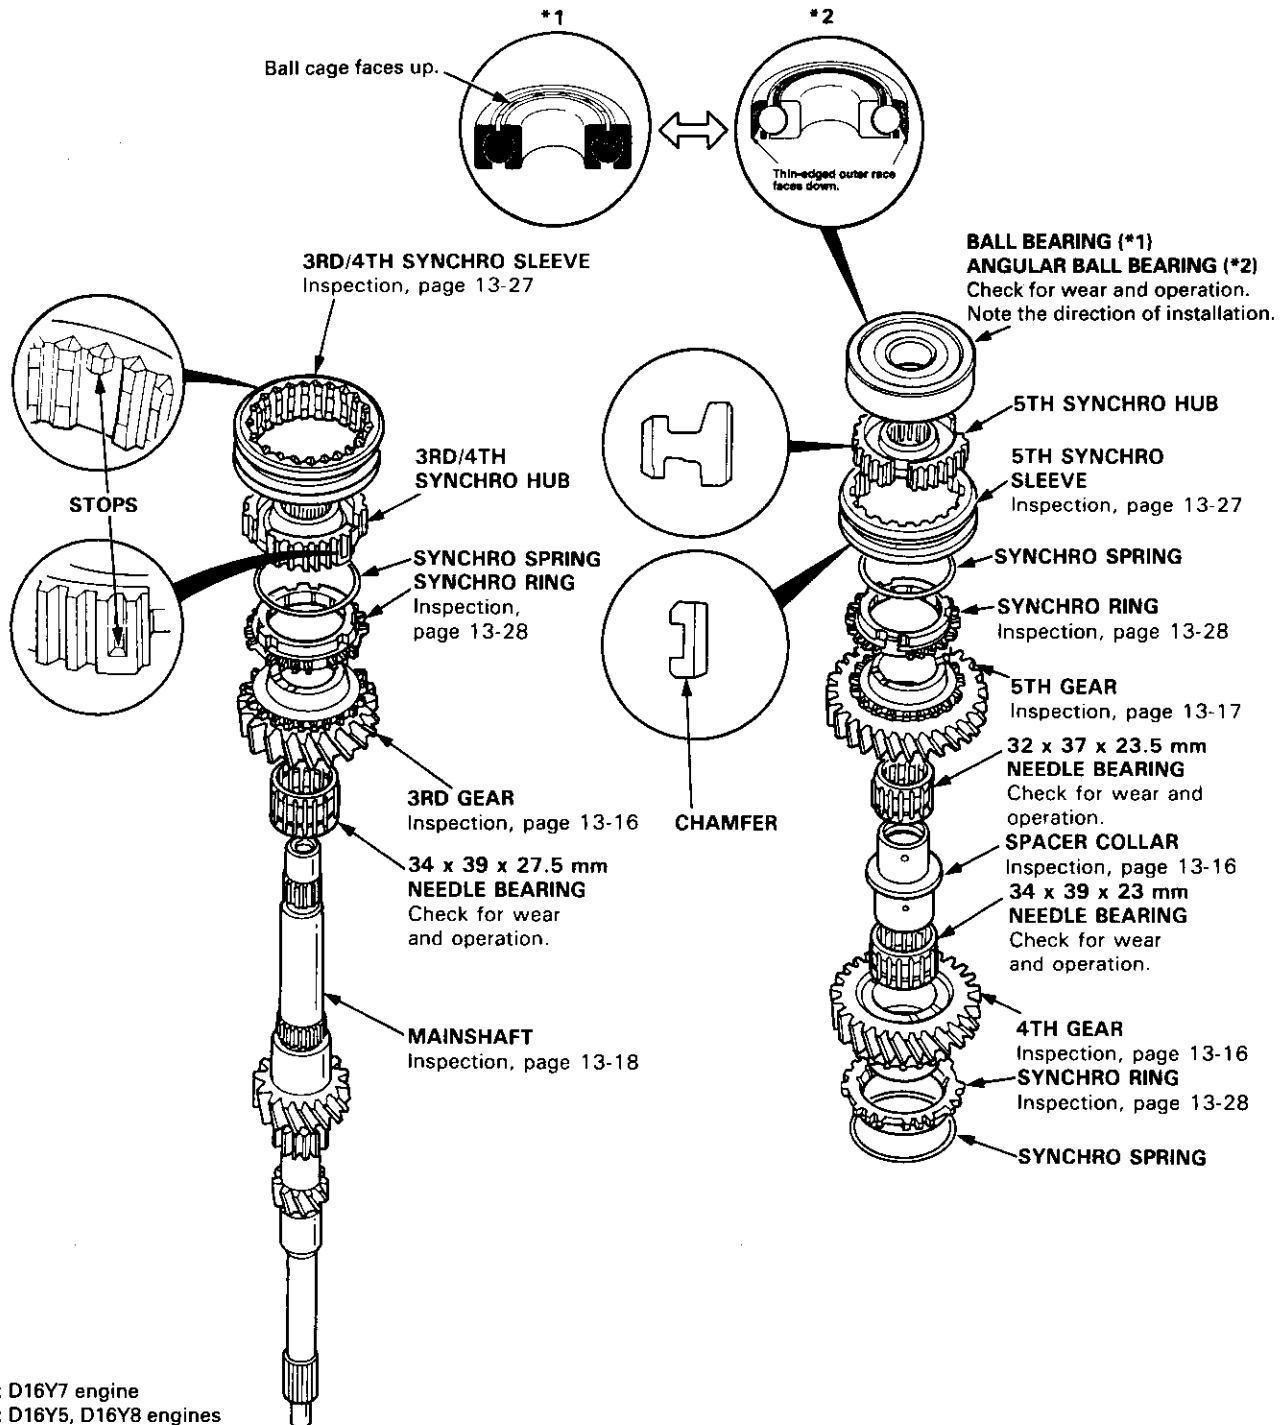


Mainshaft Assembly

Clearance Inspection

NOTE: If replacement is required, always replace the synchro sleeve and hub as a set.


1. Measure the clearance between 2nd and 3rd gears.

Standard: 0.06–0.21 mm (0.002–0.008 in)
Service Limit: 0.33 mm (0.013 in)

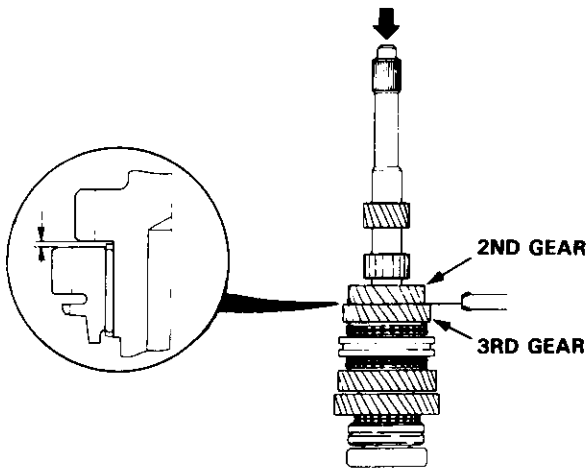

2. If the clearance is more than the service limit, measure the thickness of 3rd gear.


Standard: 30.22–30.27 mm
(1.190–1.192 in)
Service Limit: 30.15 mm (1.187 in)

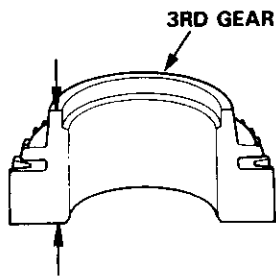

- If the thickness of 3rd gear is less than the service limit, replace 3rd gear with a new one.
- If the thickness of 3rd gear is within the service limit, replace the 3rd/4th synchro hub with a new one.


3. Measure the clearance between 4th gear and the spacer collar.

Standard: 0.06–0.19 mm (0.002–0.007 in)
Service Limit: 0.31 mm (0.012 in)

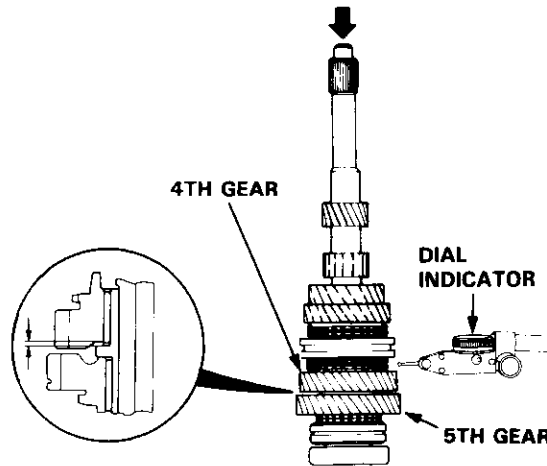


4. If the clearance is more than the service limit, measure distance A on the spacer collar.

Standard: 22.82–22.86 mm
(0.898–0.900 in)
Service Limit: 22.81 mm (0.898 in)

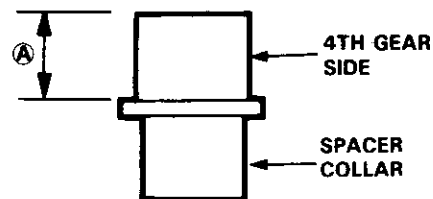

5. If distance A is less than the service limit, replace the spacer collar with a new one. If distance A is within the service limit, measure the thickness of 4th gear.

Standard: 30.12–30.17 mm
(1.186–1.188 in)
Service limit: 30.05 mm (1.183 in)

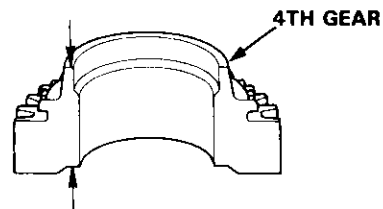


- If the thickness of 4th gear is less than the service limit, replace 4th gear with a new one.
- If the thickness of 4th gear is within the service limit, replace the 3rd/4th synchro hub with a new one.



Disassembly


6. Measure the clearance between the spacer collar and 5th gear.

Standard: 0.06–0.19 mm (0.002–0.007 in)
Service limit: 0.31 mm (0.012 in)

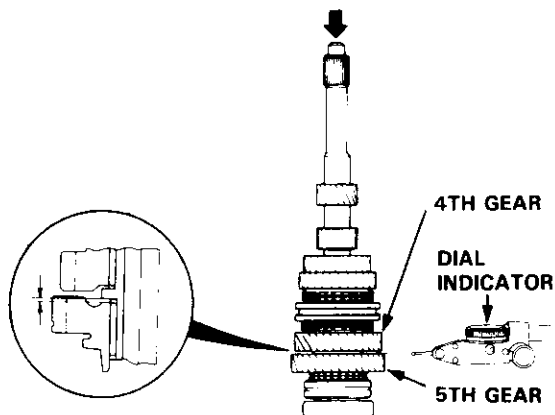


7. If the clearance is more than the service limit, measure distance **B** on the spacer collar.

Standard: 23.53–23.56 mm
 (0.926–0.928 in)
Service Limit: 23.51 mm (0.926 in)

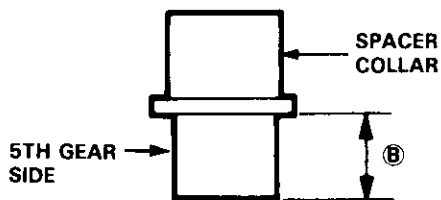


8. If distance **B** is less than the service limit, replace the spacer collar with a new one. If distance **B** is within the service limit, measure thickness of 5th gear.

Standard: 28.42–28.47 mm
 (1.119–1.121 in)
Service Limit: 28.35 mm (1.116 in)

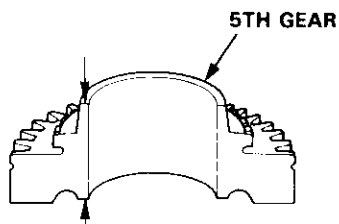


- If the thickness of 5th gear is less than the service limit, replace 5th gear with a new one.
- If the thickness of 5th gear is within the service limit, replace the 5th synchro hub with a new one.

1. Remove the ball bearing using a bearing puller as shown.

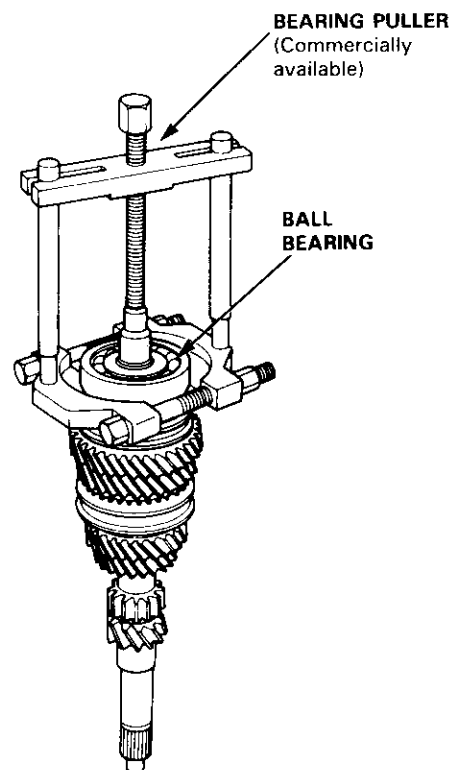

CAUTION: Remove the synchro hubs using a press and steel blocks as shown. Use of a jaw-type puller can cause damage to the gear teeth.

2. Support 4th gear on steel blocks, and press the mainshaft out of the 5th synchro hub as shown.

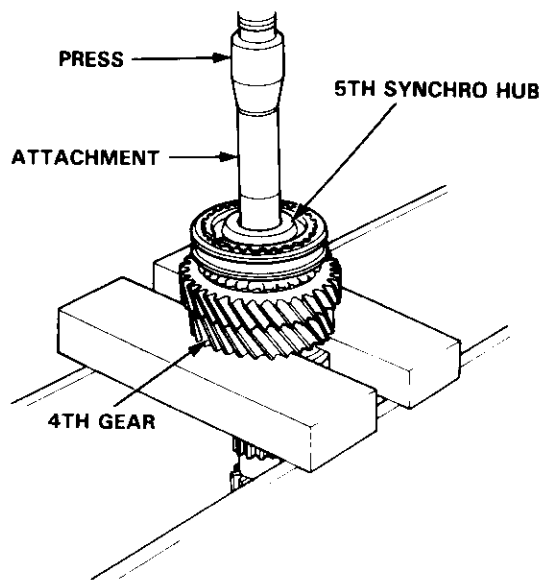


(cont'd)

Mainshaft Assembly

Disassembly (cont'd)


3. Support the 3rd gear on steel blocks, and press the mainshaft out of the 3rd/4th synchro hub as shown.

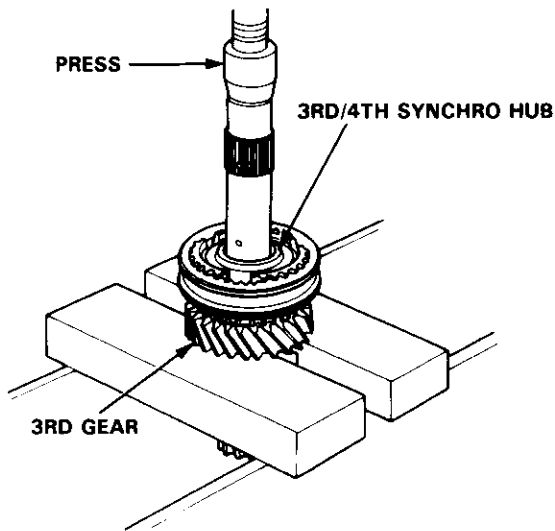

Inspection

1. Inspect the gear surface and bearing surface for wear and damage, then measure the mainshaft at points A, B, C, and D.

Standard:	A: 21.987–22.000 mm (0.8656–0.8661 in)
	B: 26.980–26.993 mm (1.0622–1.0627 in)
	C: 33.984–34.000 mm (1.3380–1.3386 in)
	D: 25.977–25.990 mm (1.0227–1.0232 in)
Service Limit:	A: 21.930 mm (0.8634 in)
	B: 26.930 mm (1.0602 in)
	C: 33.930 mm (1.3358 in)
	D: 25.920 mm (1.0205 in)

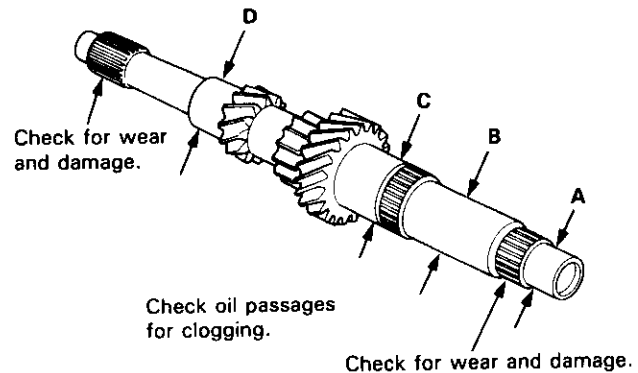


If any part of the mainshaft is less than the service limit, replace it with a new one.

2. Inspect for runout.

Standard: 0.02 mm (0.001 in) max.
Service Limit: 0.05 mm (0.002 in)

NOTE: Support the mainshaft at both ends as shown.

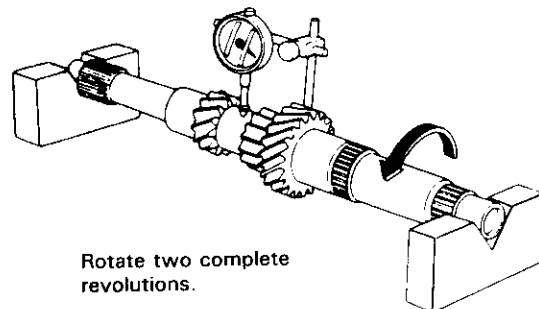

If the runout is more than the service limit, replace the mainshaft with a new one.




Reassembly

CAUTION: When installing the 3rd/4th and 5th synchro hubs, support the shaft on steel blocks, and install the synchro hubs using a press.


NOTE: Refer to page 13-15 for reassembly sequence.

1. Support 2nd gear on steel blocks, then install the 3rd/4th synchro hub using the special tools and a press.

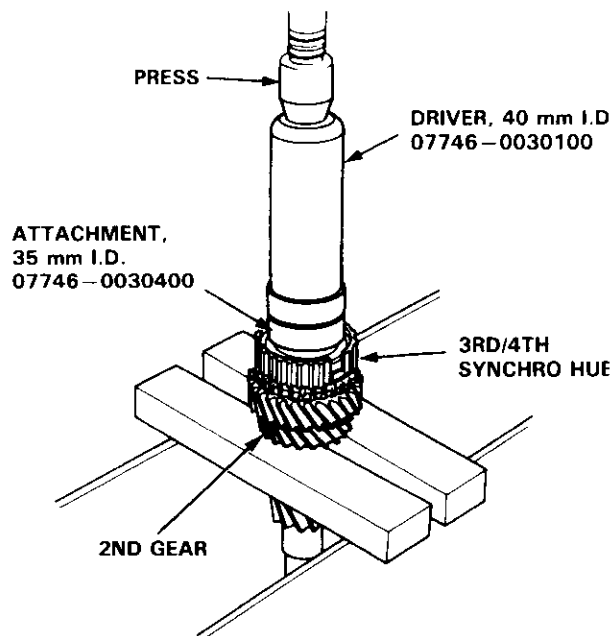


2. Install the 3rd/4th synchro sleeve by aligning the stops of the 3rd/4th synchro sleeve and hub.


NOTE: After installing, check the operation of the 3rd/4th synchro hub set.

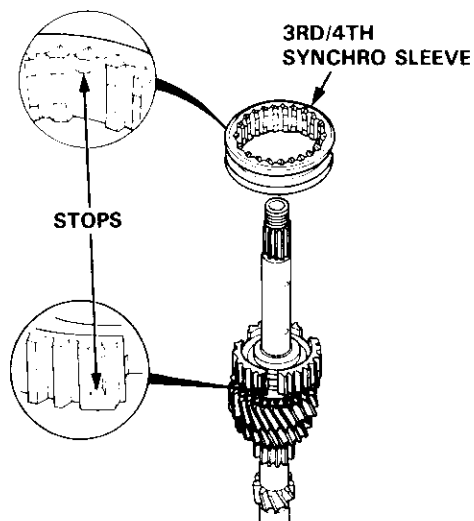

3. Install the 5th synchro hub using the special tools and a press.

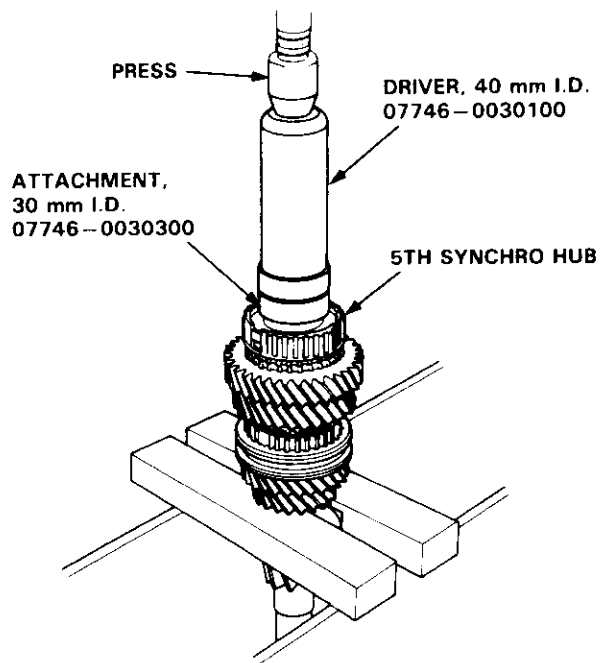

4. Install the ball bearing using the special tools and a press.

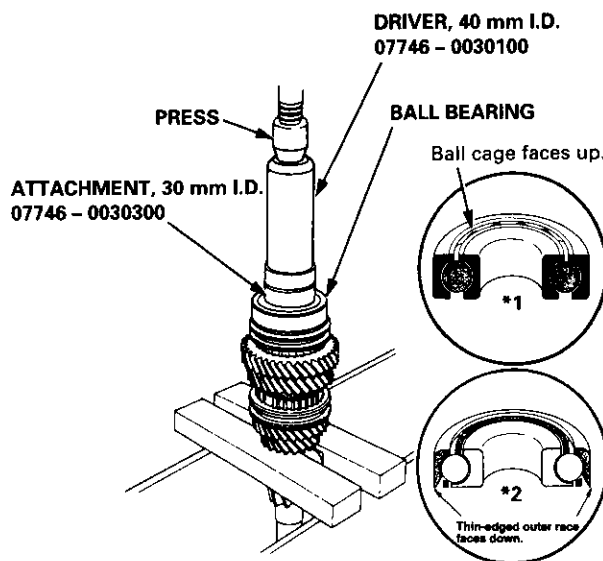


*1: D16Y7 engine


*2: D16Y5, D16Y8 engines

Countershaft Assembly

Index

NOTE: The 3rd, 4th, and 5th gears are installed with a press.

 Prior to reassembling, clean all the parts in solvent, dry them and apply lubricant to all contact surfaces except the 3rd, 4th, and 5th gears.

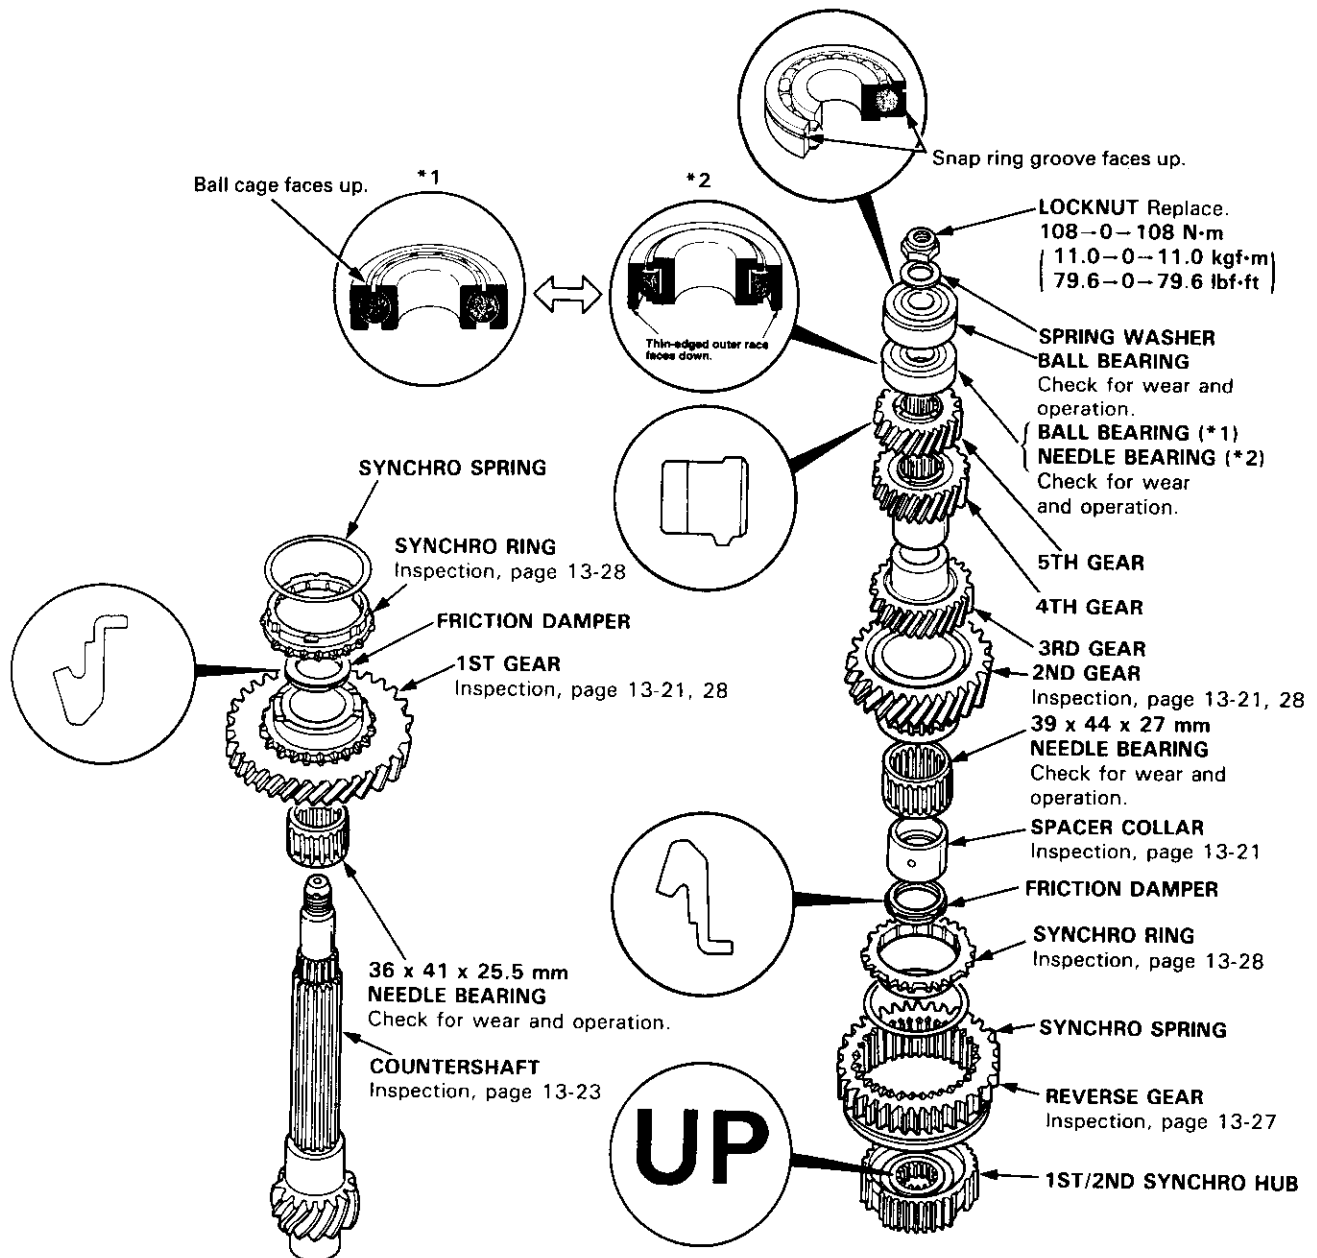

*1: D16Y7 engine

*2: D16Y5, D16Y8 engines




Clearance Inspection

NOTE: If replacement is required, always replace the synchro sleeve and hub as a set.


1. Measure the clearance between the countershaft and 1st gear.

Standard: 0.03–0.10 mm (0.001–0.004 in)
Service Limit: 0.22 mm (0.009 in)

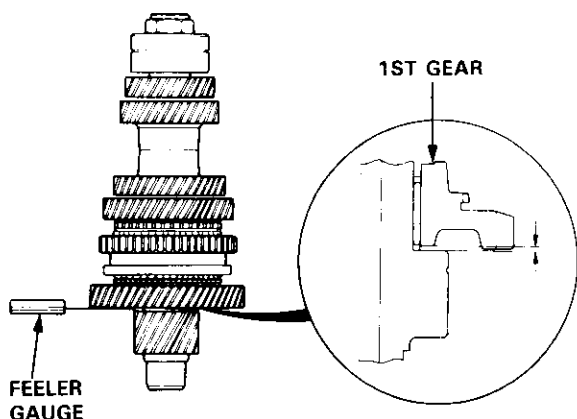

2. If the clearance is more than the service limit, measure the thickness of 1st gear.


Standard: 30.41–30.44 mm
(1.197–1.198 in)
Service Limit: 30.36 mm (1.195 in)

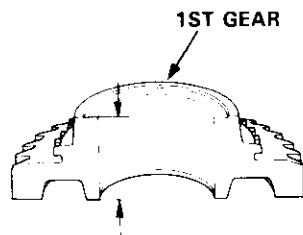

- If the thickness of 1st gear is less than the service limit, replace 1st gear with a new one.
- If the thickness of 1st gear is within the service limit, replace the 1st/2nd synchro hub with a new one.


3. Measure the clearance between 2nd and 3rd gears.

Standard: 0.04–0.12 mm (0.002–0.005 in)
Service Limit: 0.24 mm (0.009 in)

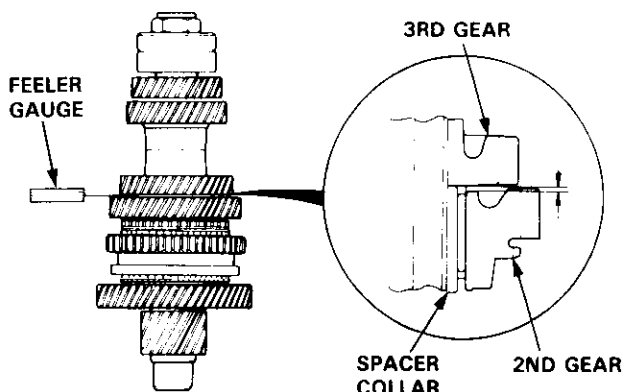


4. If the clearance is more than the service limit, measure the thickness of the spacer collar.

Standard: 32.03–32.06 mm
(1.261–1.262 in)
Service Limit: 32.01 mm (1.260 in)

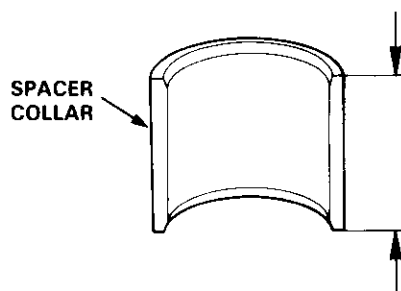

5. If the thickness is less than the service limit, replace the spacer collar with a new one. If the thickness is within the service limit, measure the thickness of 2nd gear.

Standard: 31.91–31.96 mm
(1.256–1.258 in)
Service Limit: 31.85 mm (1.254 in)

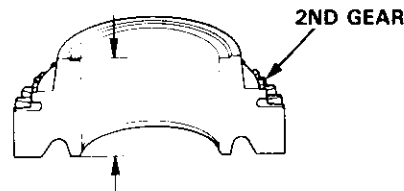


- If the thickness of 2nd gear is less than the service limit, replace 2nd gear with a new one.
- If the thickness of 2nd gear is within the service limit, replace the 1st/2nd synchro hub with a new one.

Countershaft Assembly


Disassembly

CAUTION: Remove the gears using a press and steel blocks as shown. Use of a jaw-type puller can damage the gear teeth.


1. Securely clamp the countershaft assembly in a bench vise with wood blocks.
2. Raise the locknut tab from the groove of the countershaft, then remove the locknut and the spring washer.

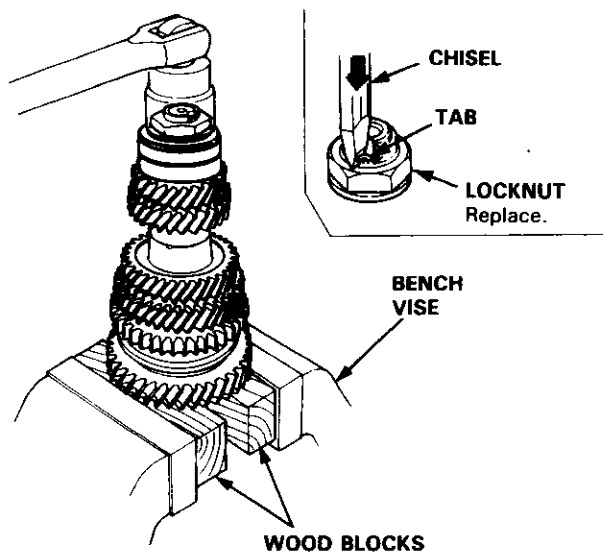


3. Remove the bearings using a bearing puller as shown.

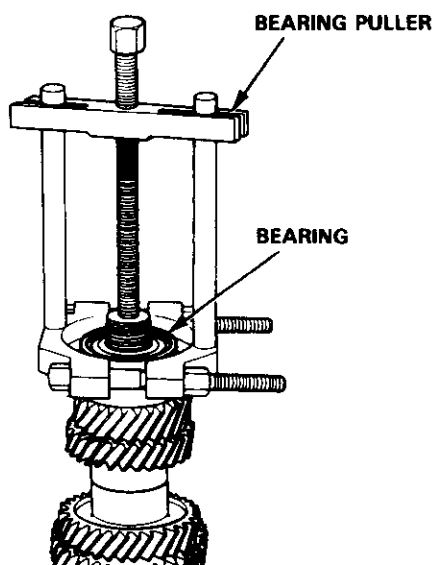

4. Support 4th gear on steel blocks, and press the countershaft out of 5th and 4th gears as shown.

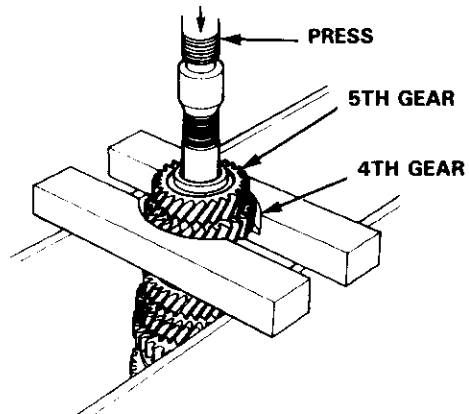

5. Support 1st gear on steel blocks, and press the countershaft out of 3rd gear as shown.

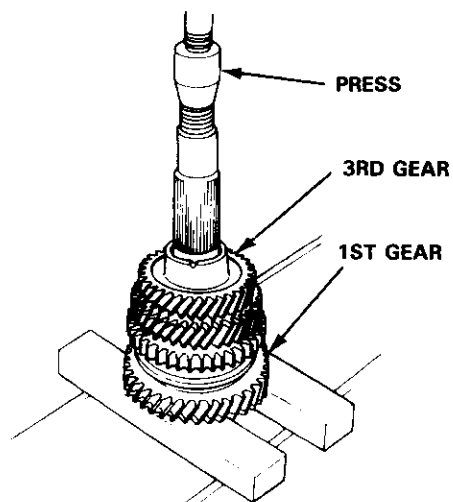



Inspection

1. Inspect the gear surfaces and bearing surfaces for wear and damage, then measure the countershaft at points A, B, and C.

Standard: A: 30.000 – 30.015 mm
(1.1811 – 1.1817 in)


B: 35.984 – 36.000 mm
(1.4167 – 1.4173 in)

C: 24.980 – 24.993 mm
(0.9835 – 0.9840 in)

Service Limit: A: 29.950 mm (1.1791 in)

B: 35.930 mm (1.4146 in)

C: 24.930 mm (0.9815 in)

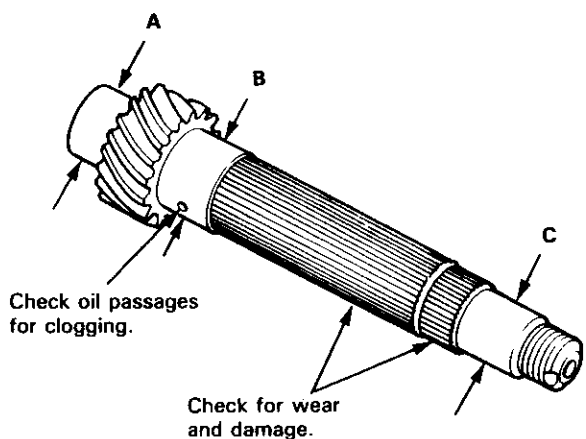


- If any part of the countershaft is less than the service limit, replace it with a new one.

2. Inspect for runout.

Standard: 0.02 mm (0.001 in) max.

Service Limit: 0.05 mm (0.002 in)

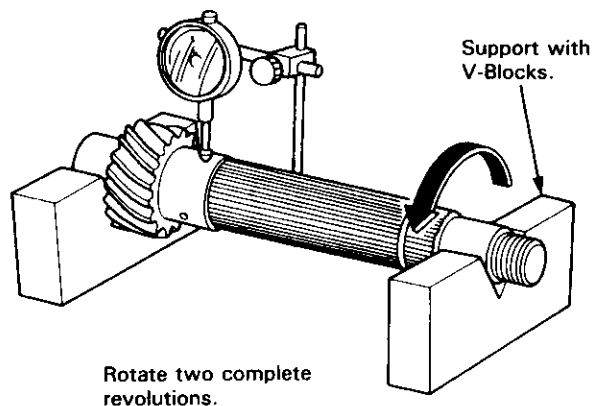

- If the runout is more than the service limit, replace the countershaft with a new one.


Reassembly

CAUTION:

- Press the 3rd, 4th, and 5th gears on the countershaft without lubrication.
- When installing the 3rd, 4th, and 5th gears, support the shaft on steel blocks and install the gears using a press.


NOTE: Refer to page 13-20 for reassembly sequence.

1. Install the needle bearing on the countershaft.

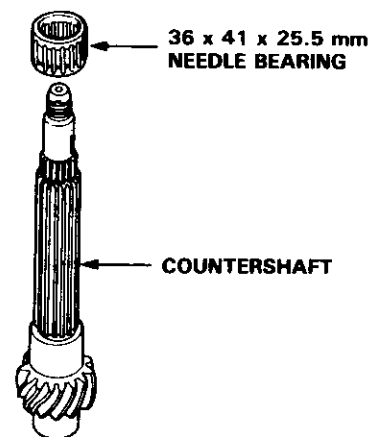

2. Assemble the parts below as shown.

NOTE: Check that the fingers of the friction damper are securely set in the grooves of the 1st/2nd synchro hub.

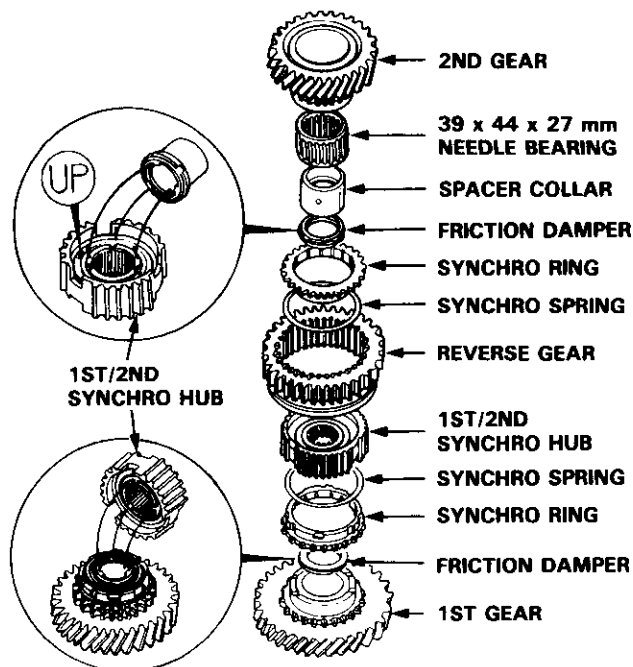


3. Install the parts on the countershaft.

(cont'd)


Countershaft Assembly

Reassembly (cont'd)


4. Support the countershaft on a steel block as shown and install 3rd gear using the special tools and a press.

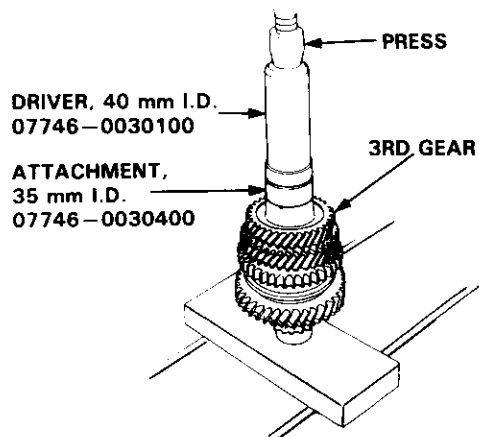

5. Install 4th gear using the special tools and a press.

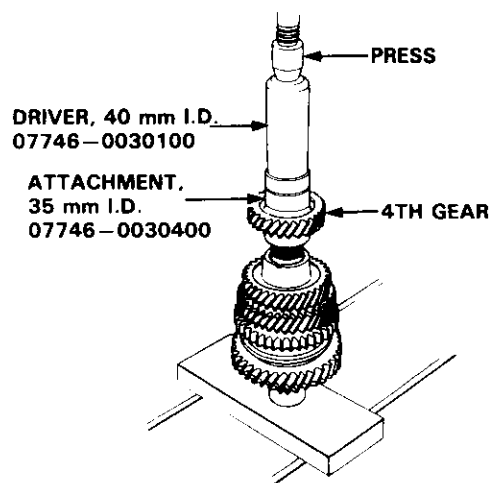


6. Install 5th gear using the special tools and a press.

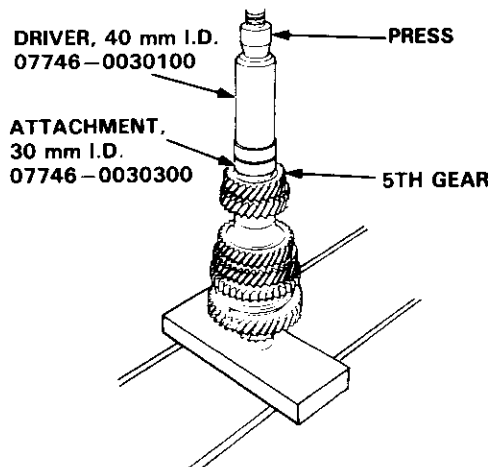

7. Install the bearings in the direction shown using the special tools and a press.

CAUTION: Install the bearings with a maximum pressure of 7.8 kN (800 kgf, 5,786 lbf).

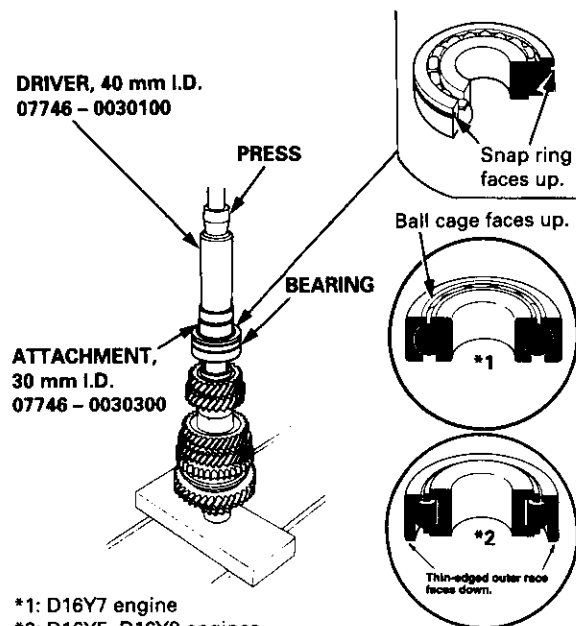


*1: D16Y7 engine
*2: D16Y5, D16Y8 engines

8. Securely clamp the countershaft assembly in a bench vise with wood blocks.

LOCKNUT

108 → 0 → 108 N·m
(11.0 → 0 → 11.0 kgf·m, 79.6 → 0 → 79.6 lbf·ft)

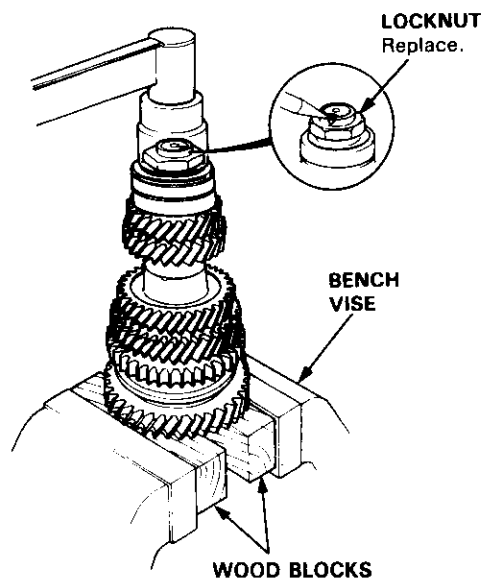

9. Install the spring washer, tighten the locknut, then stake the locknut tab into groove.




Shift Fork Assembly

Index



Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact parts.

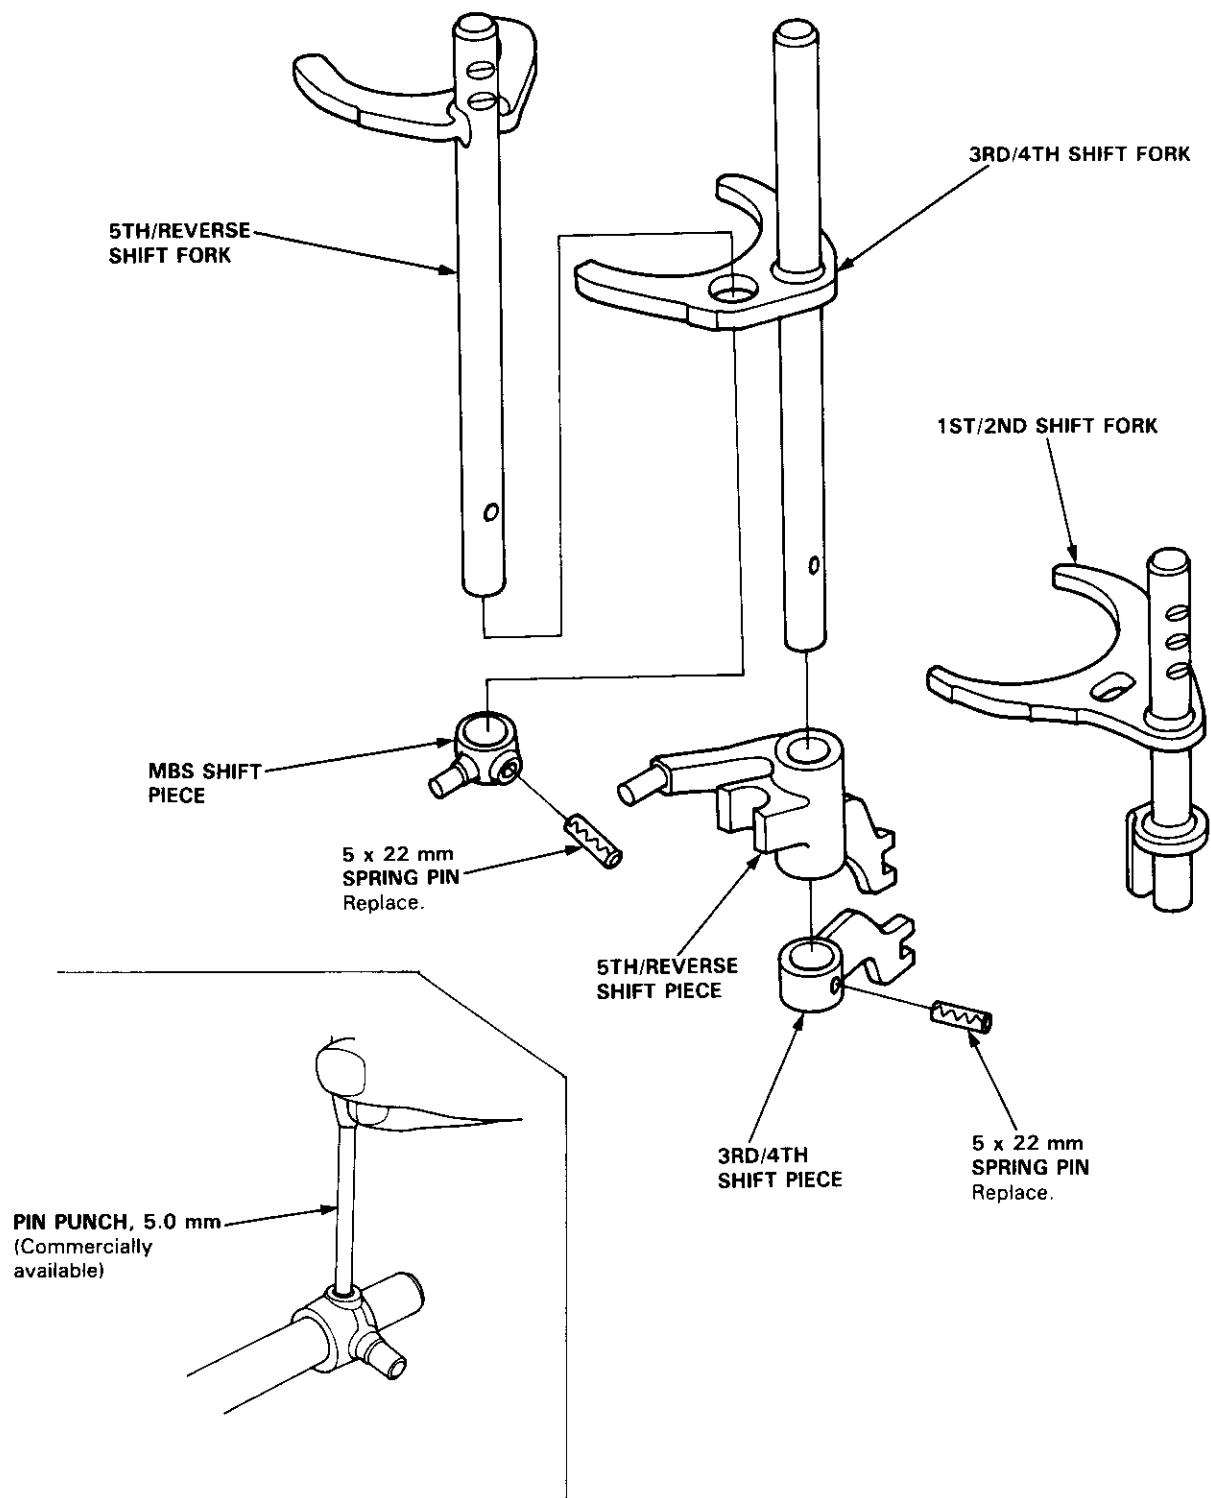


Shift Fork Assembly

Clearance Inspection

NOTE: The synchro sleeve and the synchro hub should be replaced as a set.

1. Measure the clearance between each shift fork and its matching synchro sleeve.

Standard: 0.35 – 0.65 mm (0.014 – 0.026 in)
Service Limit: 1.0 mm (0.04 in)

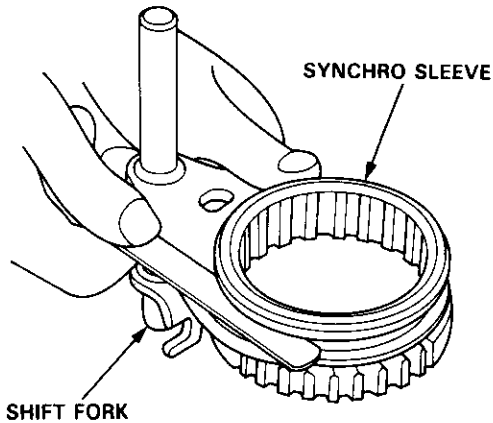


2. If the clearance is more than the service limit, measure the thickness of the shift fork fingers.

Standard:

3rd/4th: 7.4 – 7.6 mm (0.291 – 0.299 in)


1st/2nd, 5th: 6.2 – 6.4 mm (0.244 – 0.252 in)

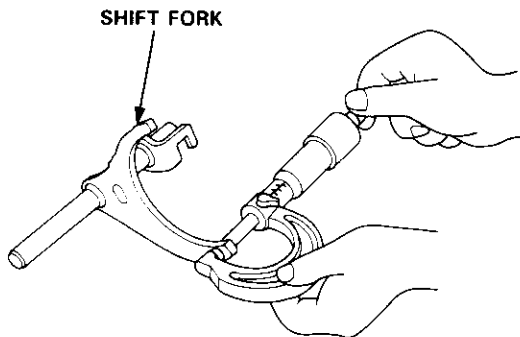

- If the thickness of the shift fork fingers is not within the standard, replace the shift fork with a new one.
- If the thickness of the shift fork fingers is within the standard, replace the synchro sleeve with a new one.


3. Measure the clearance between the shift piece or shift fork and the shift arm B.

Standard: 0.2 – 0.5 mm (0.008 – 0.02 in)
Service Limit: 0.62 mm (0.0244 in)

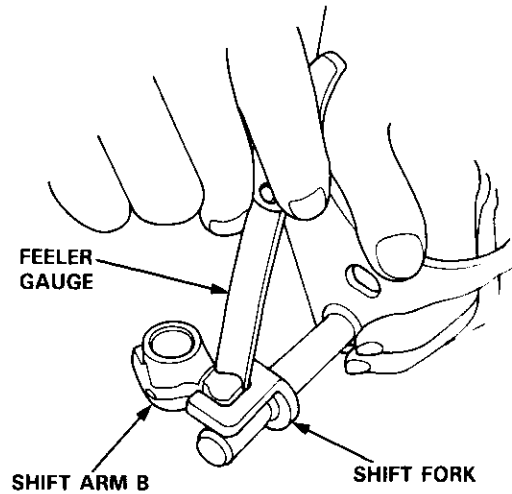

4. If the clearance is more than the service limit, measure the groove of the shift piece or shift fork.

Standard: 13.2 – 13.4 mm (0.520 – 0.528 in)

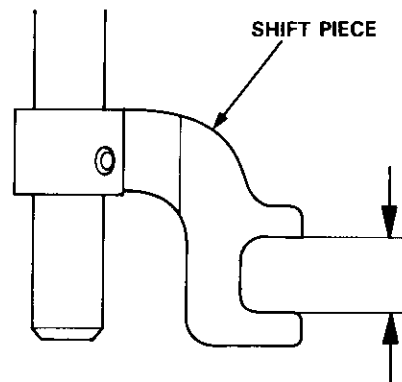

- If the groove of the shift piece or shift fork is not within the standard, replace the shift piece or shift fork with a new one.
- If the groove of the shift piece or shift fork is within the standard, replace the shift arm B with a new one.




MBS Shift Piece Inspection

1. Measure the width of the MBS shift piece.

Standard: 6.9–7.1 mm (0.272–0.280 in)
Service Limit: 6.8 mm (0.268 in)

MBS SHIFT PIECE

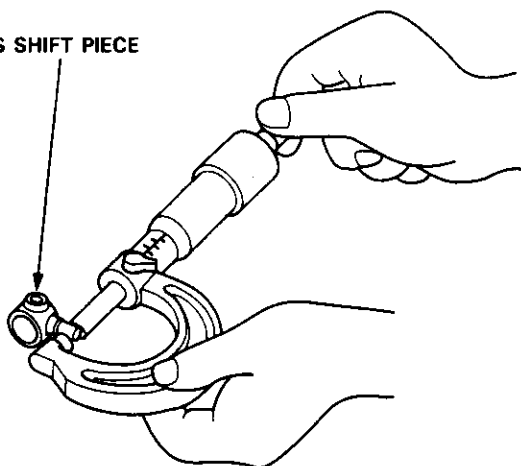


If the width of the MBS shift piece is less than the service limit, replace the MBS shift piece.

Inspection/Installation

1. Inspect gear teeth on all synchro hubs and synchro sleeves for rounded off corners, which indicate wear.
2. Install each synchro hub in its mating synchro sleeve, and check for freedom of movement.

NOTE: If replacement is required, always replace the synchro sleeve and synchro hub as a set.


SYNCHRO
SLEEVE

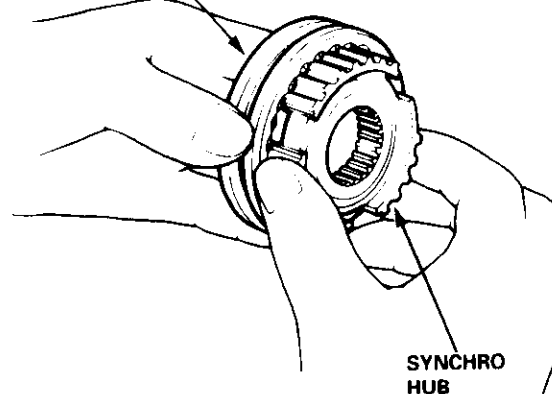

SYNCHRO
HUB

3. When assembling the synchro sleeve and synchro hub, be sure to match the three sets of longer teeth (120 degrees apart) on the synchro sleeve with the three sets of deeper grooves in the synchro hub.

CAUTION: Do not install the synchro sleeve with its longer teeth in the synchro hub slots because it will damage the spring ring.

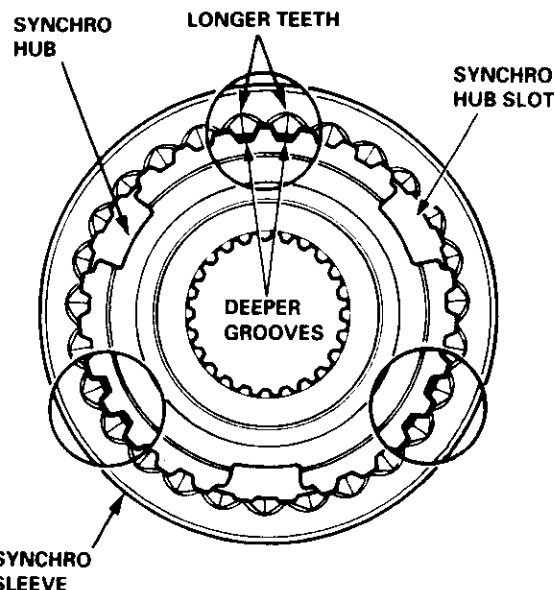

Synchro Ring, Gear

Inspection

1. Inspect the synchro ring and gear.

A: Inspect the inside of the synchro ring for wear.

B: Inspect the synchro sleeve teeth and matching teeth on the synchro ring for wear (rounded off).



C: Inspect the synchro sleeve teeth and matching teeth on the gear for wear (rounded off).



D: Inspect the gear hub thrust surface for wear.

E: Inspect the cone surface for wear and roughness.

F: Inspect the teeth on all gears for uneven wear, scoring, galling, and cracks.

2. Coat the cone surface of the gear with oil, and place the synchro ring on the matching gear. Rotate the synchro ring, making sure that it does not slip.

Measure the clearance between the synchro ring and gear all the way around.




NOTE: Hold the synchro ring against the gear evenly while measuring the clearance.

Synchro Ring-to-Gear Clearance

Standard: 0.73–1.18 mm (0.029–0.046 in)

Service Limit: 0.4 mm (0.02 in)

If the clearance is less than the service limit, replace the synchro ring and synchro cone.

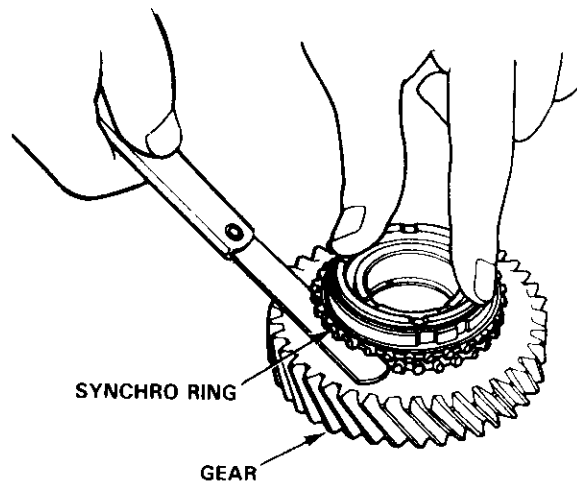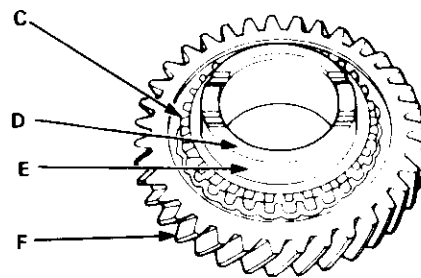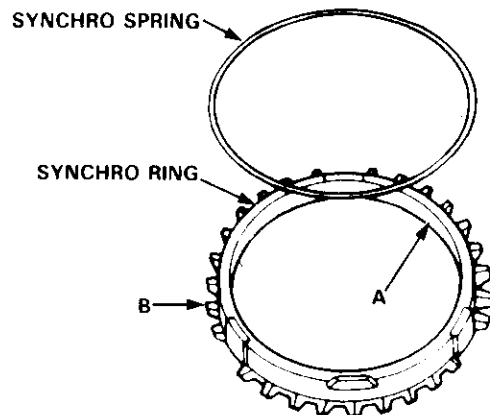



Shift Rod

Removal


NOTE: The steel balls are all of the same size (5/16 in).

1. Remove the differential assembly.
2. Remove the 28 mm plug bolt and 1st/2nd select spring.
3. Remove the shift arm C attaching bolt.
4. Remove the shift arm shaft.

NOTE: Be careful not to lose the steel ball.


5. Remove the steel ball, spring, and collar.

6. Remove shift arms C and B, and the interlock, then remove the reverse select spring and retainer.
7. Remove the shift arm A attaching bolt, the set ball spring bolt, set spring, and steel ball.
8. Remove the shift rod, then remove the shift arm A.
9. Remove the reverse lock cam.
10. Remove the magnet.

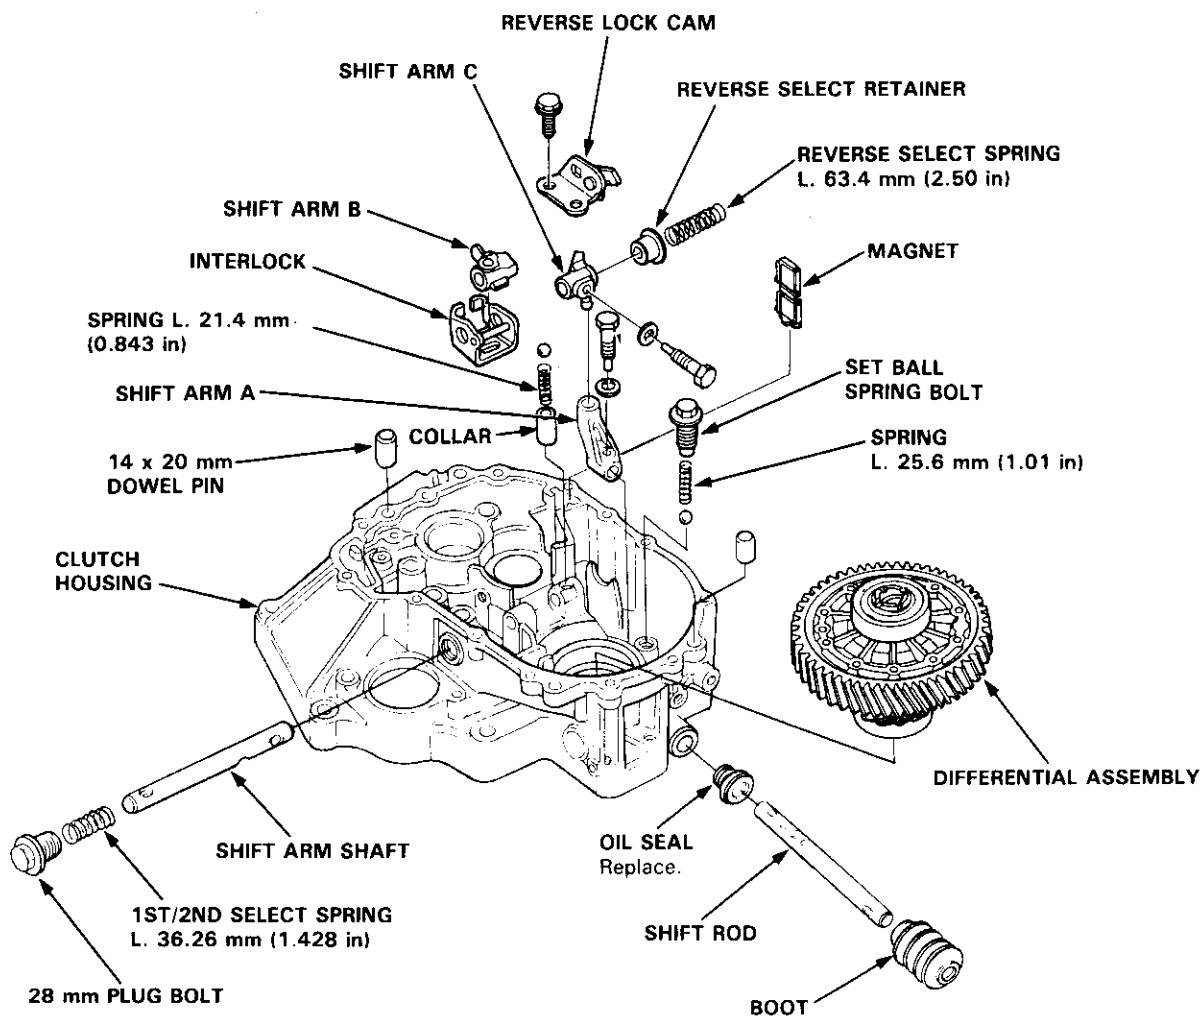


Differential

Index

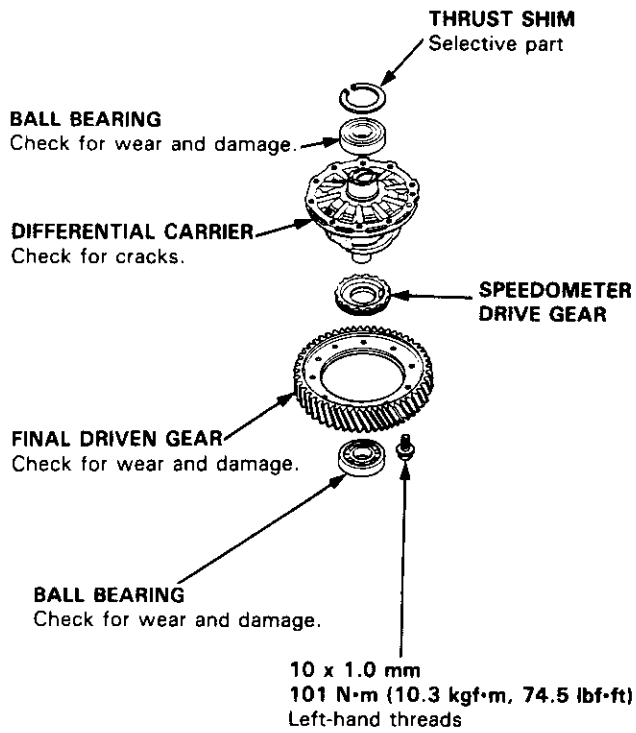

Backlash Inspection

1. Place differential assembly on V-blocks, and install both driveshafts.

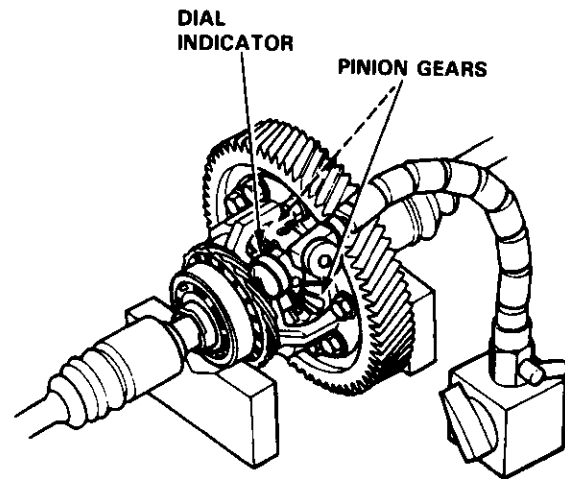

2. Measure backlash of both pinion gears.

Standard (New): 0.05—0.15 mm (0.002—0.006 in)


3. If the backlash is not within the standard, replace the differential carrier.



Bearing Replacement


NOTE: Check bearings for wear and rough rotation. If the bearings are OK, removal is not necessary.

1. Remove the ball bearings using a bearing puller as shown.

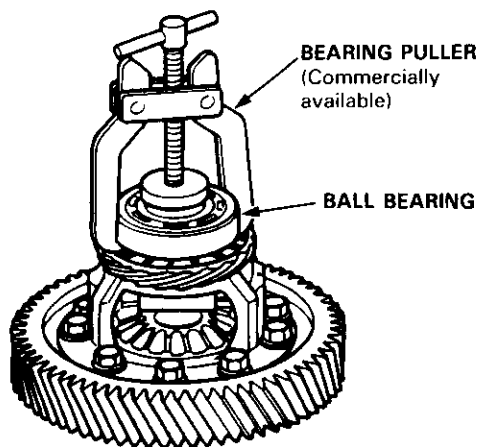

2. Install new ball bearings using the special tool as shown.


NOTE: Drive the bearings squarely until they bottom against the carrier.

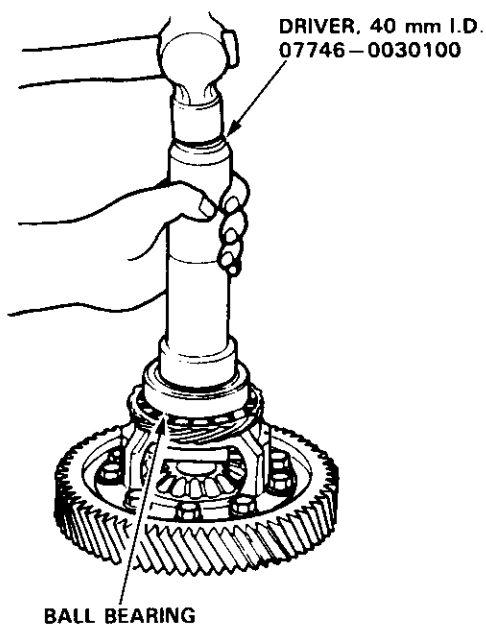

Final Driven Gear Replacement

1. Remove the bolts in a crisscross pattern in several steps, then remove the final driven gear from the differential carrier.

NOTE: The final driven gear bolts have left-hand threads.

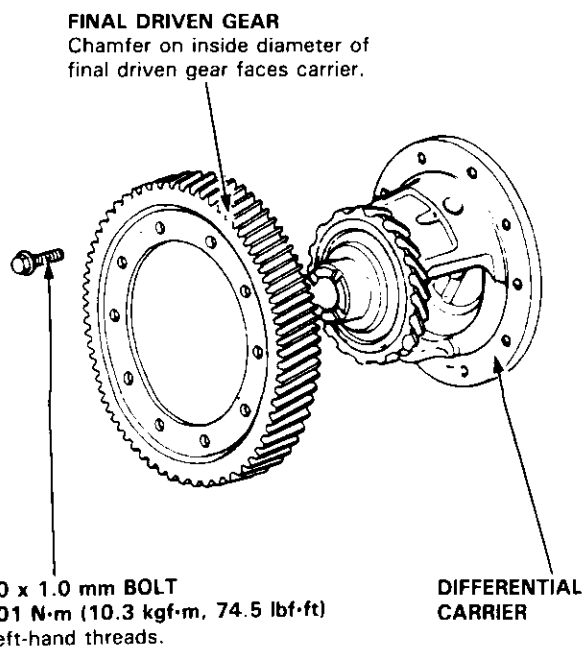


2. Install the final driven gear by tightening the bolts in a crisscross pattern in several steps.

Differential


Thrust Shim Adjustment

1. Install the differential assembly, making sure it bottoms in the clutch housing, using the special tool as shown.

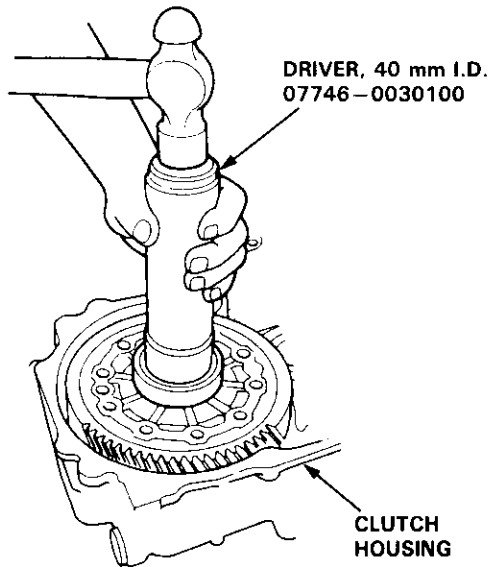

2. Install the thrust shim.

NOTE: Install the same size thrust shim that was removed.

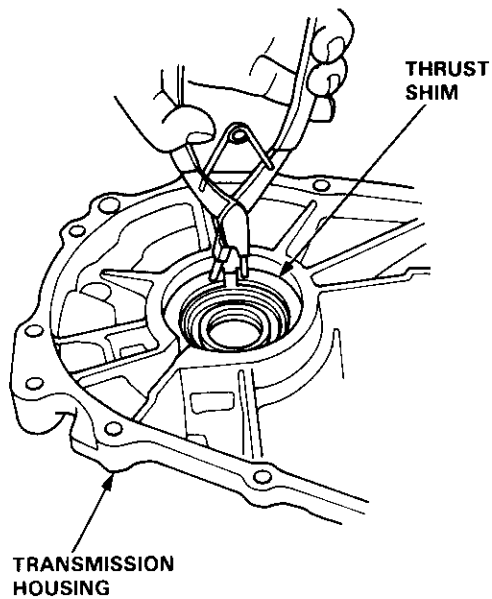


3. Install the transmission housing (see page 13-41).

NOTE: Do not apply liquid gasket to the mating surface of the clutch housing.


4. Tighten the transmission housing attaching bolts (see page 13-42).

8 x 1.25 mm
27 N·m (2.8 kgf·m, 20 lbf·ft)

5. Use the special tool to bottom the differential assembly in the clutch housing.

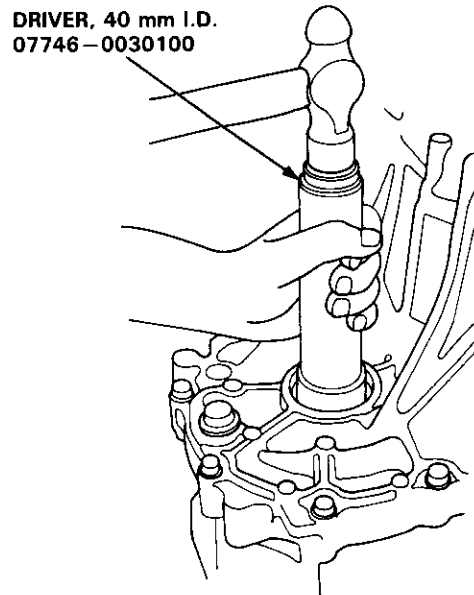

6. Measure clearance between thrust shim and bearing outer race in transmission housing.

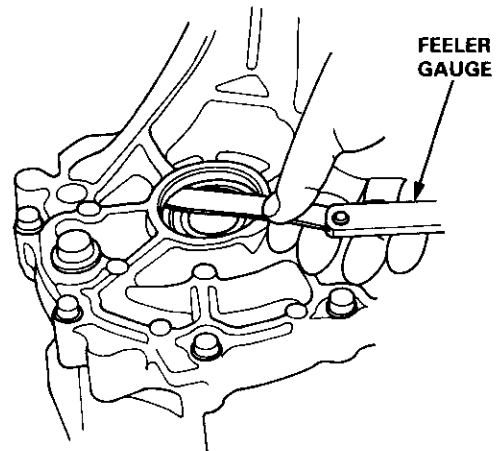



7. If the clearance is more than the standard, select a new thrust shim from the following table.

NOTE: If the clearance measured in step 6 is within the standard, go to step 10.

Standard: 0–0.10 mm (0–0.004 in)

72 mm THRUST SHIM: D16Y7 engine

Part Number	Thickness
41441–PL3–A00	1.0 mm (0.0394 in)
41442–PL3–A00	1.1 mm (0.0433 in)
41443–PL3–A00	1.2 mm (0.0472 in)
41444–PL3–A00	1.3 mm (0.0512 in)
41445–PL3–A00	1.4 mm (0.0551 in)
41446–PL3–A00	1.5 mm (0.0591 in)
41447–PL3–A00	1.6 mm (0.0630 in)
41448–PL3–A00	1.7 mm (0.0669 in)
41449–PL3–A00	1.8 mm (0.0709 in)
41450–PL3–A00	1.05 mm (0.0413 in)
41451–PL3–A00	1.15 mm (0.0453 in)
41452–PL3–A00	1.25 mm (0.0492 in)
41453–PL3–A00	1.35 mm (0.0532 in)
41454–PL3–A00	1.45 mm (0.0571 in)
41455–PL3–A00	1.55 mm (0.0610 in)
41456–PL3–A00	1.65 mm (0.0650 in)
41457–PL3–A00	1.75 mm (0.0689 in)

80 mm THRUST SHIM: D16Y5, D16Y8 engines

Part Number	Thickness
41441–PL3–B00	1.0 mm (0.0394 in)
41442–PL3–B00	1.1 mm (0.0433 in)
41443–PL3–B00	1.2 mm (0.0472 in)
41444–PL3–B00	1.3 mm (0.0512 in)
41445–PL3–B00	1.4 mm (0.0551 in)
41446–PL3–B00	1.5 mm (0.0591 in)
41447–PL3–B00	1.6 mm (0.0630 in)
41448–PL3–B00	1.7 mm (0.0669 in)
41449–PL3–B00	1.8 mm (0.0709 in)
41450–PL3–B00	1.05 mm (0.0413 in)
41451–PL3–B00	1.15 mm (0.0453 in)
41452–PL3–B00	1.25 mm (0.0492 in)
41453–PL3–B00	1.35 mm (0.0532 in)
41454–PL3–B00	1.45 mm (0.0571 in)
41455–PL3–B00	1.55 mm (0.0610 in)
41456–PL3–B00	1.65 mm (0.0650 in)
41457–PL3–B00	1.75 mm (0.0689 in)


8. Remove the bolts and transmission housing.
9. Replace the thrust shim selected in step 7, then recheck the clearance.
10. Remove the bolts and transmission housing. Apply liquid gasket to the surface of the transmission housing and reassemble.

Clutch Housing Bearing


Replacement

Mainshaft


1. Remove the ball bearing using the special tool as shown.

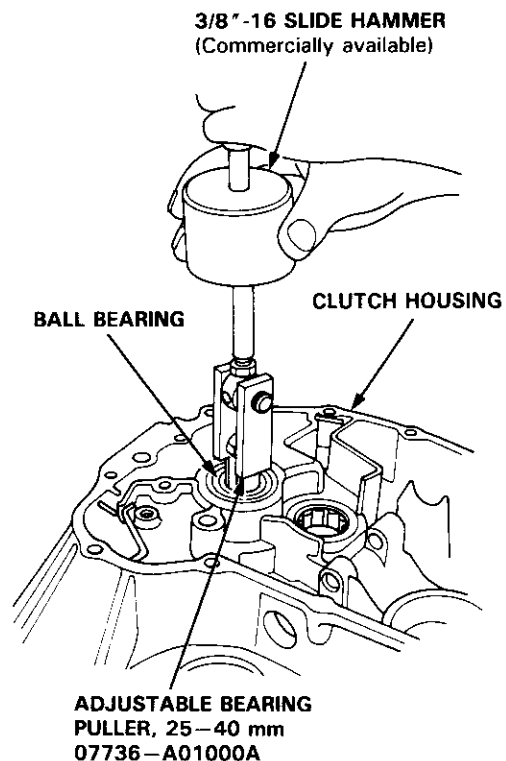


2. Remove the oil seal from the clutch housing.

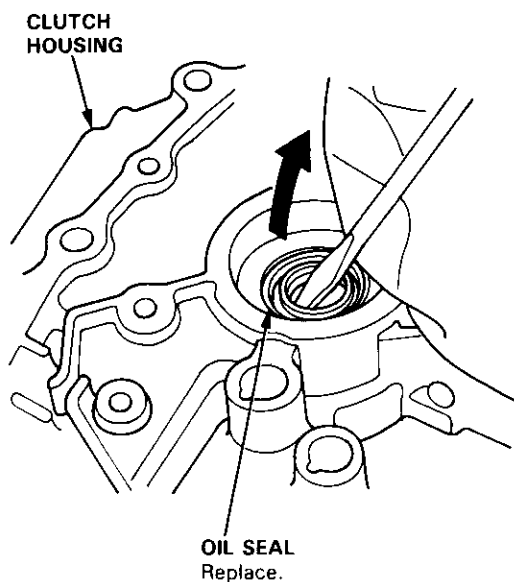

3. Drive the new oil seal into the clutch housing using the special tools as shown.

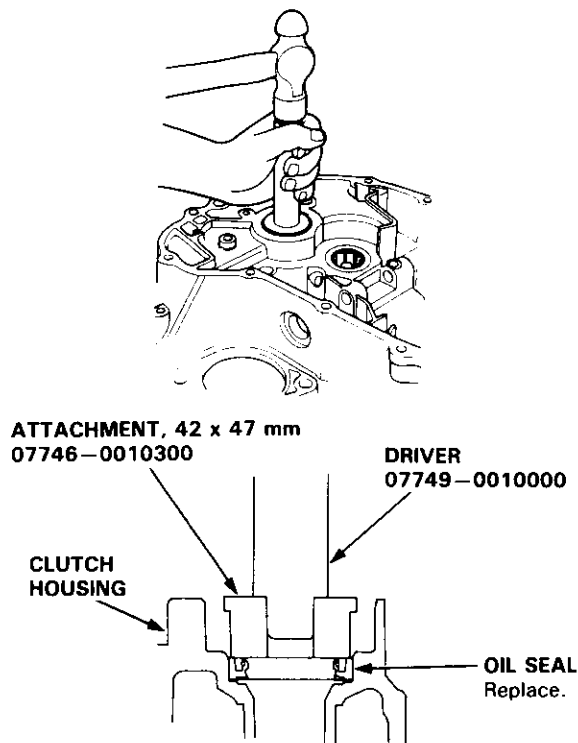


4. Drive the ball bearing into the clutch housing using the special tools as shown.

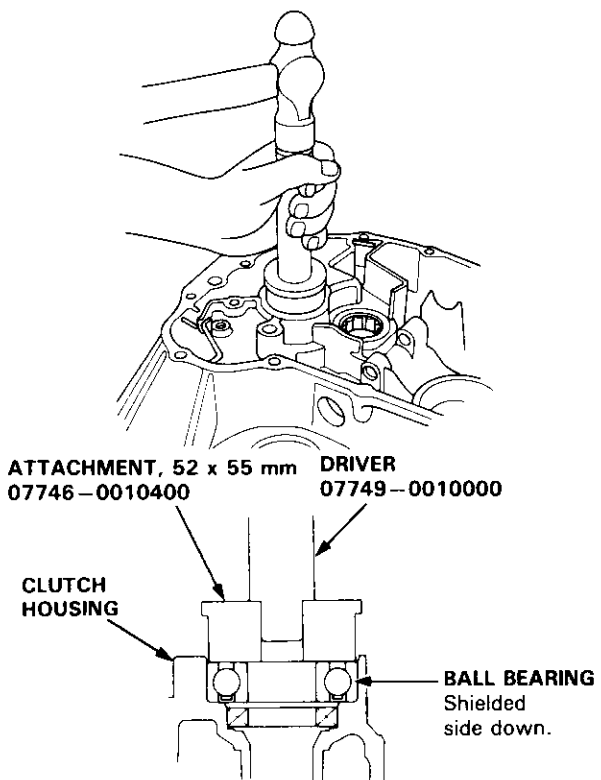




Countershaft

1. Remove the needle bearing using the special tool as shown, then remove the oil guide plate.

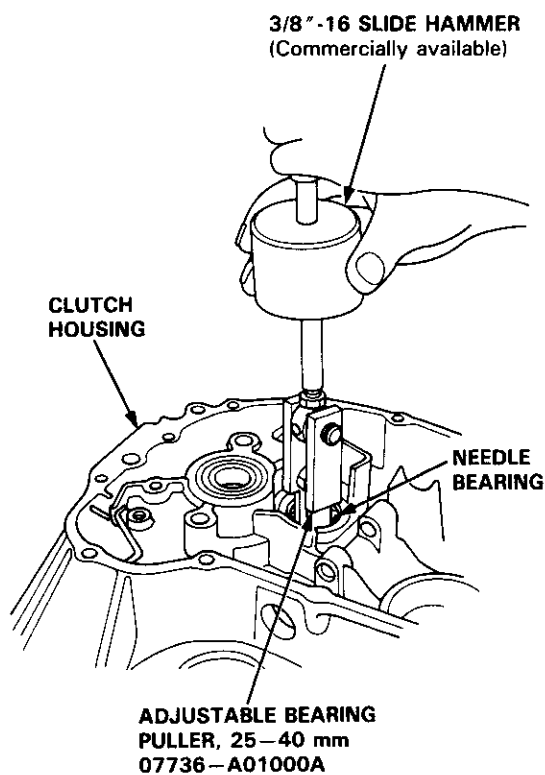


2. Install the oil guide plate, then drive the needle bearing into the clutch housing using the special tools as shown.

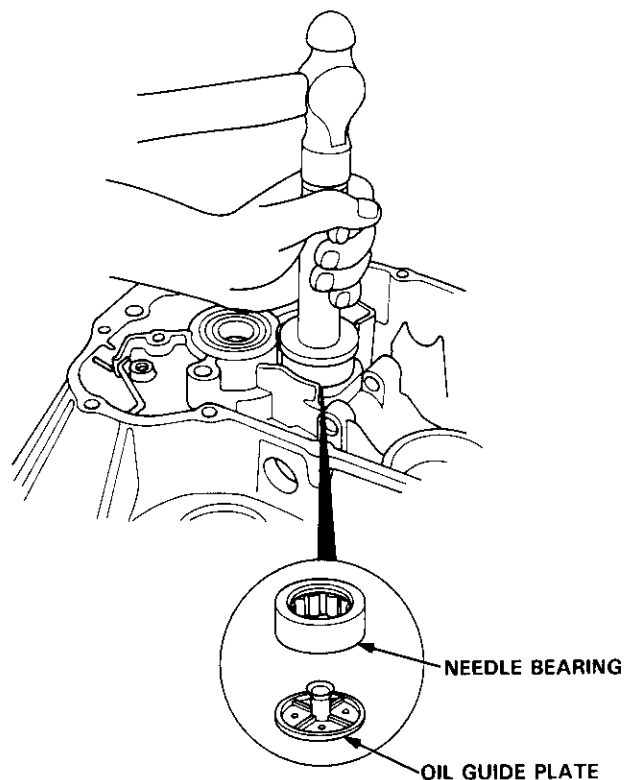

*1: ATTACHMENT, 42 x 47 mm
07746-0010300

*2: ATTACHMENT, 52 x 55 mm
07746-0010400

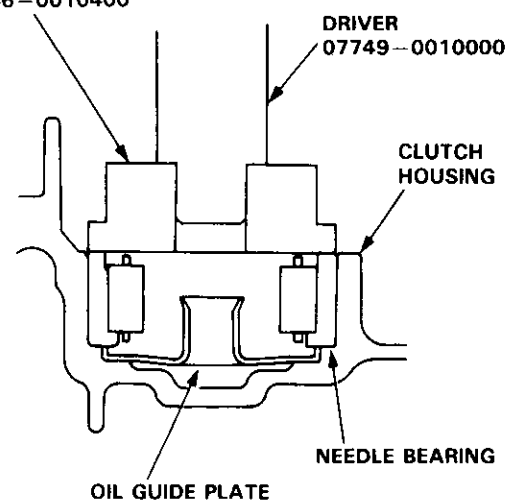


*1: D16Y7 engine

*2: D16Y5, D16Y8 engines


Mainshaft Thrust Shim

Adjustment

1. Remove the thrust shim and oil guide plate from the transmission housing.

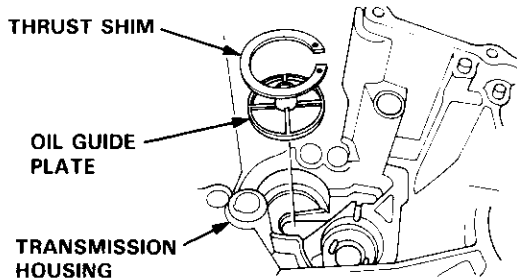

2. Install the 3rd/4th synchro hub, spacer collar, 5th synchro hub, ball bearing, and thrust washer on the mainshaft. Install the assembly in the transmission housing.

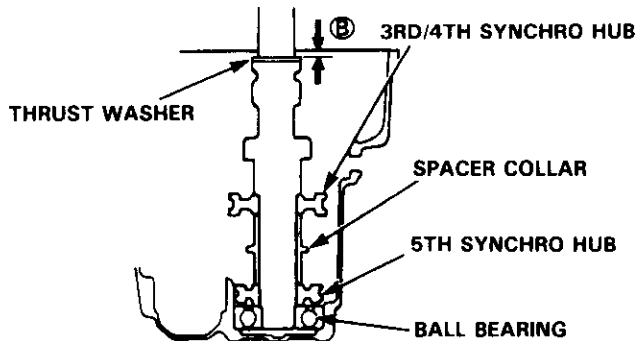

3. Measure the distance **B** between the end of the transmission housing and thrust washer.


NOTE:

- Use a straight edge and vernier caliper.
- Measure at three locations and average the readings.

4. Measure the distance **C** between the surfaces of the clutch housing and bearing inner race.

NOTE:

- Use a straight edge and depth gauge.
- Measure at three locations and average the readings.

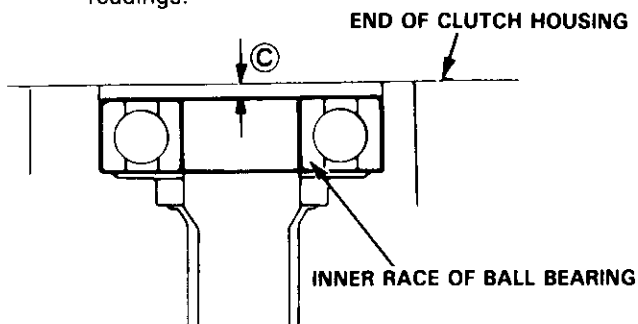

5. Select the proper shim on the basis of the following calculations:

NOTE: Use only one thrust shim.

(Basic Formula)

$$(B) + (C) - 0.95 = \text{shim thickness}$$

Example of calculation:

$$\text{Distance } \textcircled{B} (2.00 \text{ mm}) + \text{Distance } \textcircled{C} (0.09 \text{ mm}) = 2.09 \text{ mm}$$

subtract the spring washer height (0.95 mm) = the required thrust shim (1.14 mm)

65 mm THRUST SHIM: D16Y7 engine

	Part Number	Thickness
A	23931-PL3-A10	0.60 mm (0.0236 in)
B	23932-PL3-A10	0.63 mm (0.0284 in)
C	23933-PL3-A10	0.66 mm (0.0260 in)
D	23934-PL3-A10	0.69 mm (0.0272 in)
E	23935-PL3-A10	0.72 mm (0.0283 in)
F	23936-PL3-A10	0.75 mm (0.0295 in)
G	23937-PL3-A10	0.78 mm (0.0307 in)
H	23938-PL3-A10	0.81 mm (0.0319 in)
I	23939-PL3-A10	0.84 mm (0.0331 in)
J	23940-PL3-A10	0.87 mm (0.0343 in)
K	23941-PL3-A10	0.90 mm (0.0354 in)
L	23942-PL3-A10	0.93 mm (0.0366 in)
M	23943-PL3-A10	0.96 mm (0.0378 in)
N	23944-PL3-A10	0.99 mm (0.0390 in)
O	23945-PL3-A10	1.02 mm (0.0402 in)
P	23946-PL3-A10	1.05 mm (0.0413 in)
Q	23947-PL3-A10	1.08 mm (0.0425 in)
R	23948-PL3-A10	1.11 mm (0.0437 in)
S	23949-PL3-A10	1.14 mm (0.0449 in)
T	23950-PL3-A10	1.17 mm (0.0461 in)
U	23951-PL3-A10	1.20 mm (0.0472 in)
V	23952-PL3-A10	1.23 mm (0.0484 in)
W	23953-PL3-A10	1.26 mm (0.0496 in)
X	23954-PL3-A10	1.29 mm (0.0508 in)
Y	23955-PL3-A10	1.32 mm (0.0520 in)
Z	23956-PL3-A10	1.35 mm (0.0531 in)
AA	23957-PL3-A10	1.38 mm (0.0543 in)
AB	23958-PL3-A10	1.41 mm (0.0555 in)
AC	23959-PL3-A10	1.44 mm (0.0567 in)
AD	23960-PL3-A10	1.47 mm (0.0579 in)
AE	23961-PL3-A10	1.50 mm (0.0591 in)
AF	23962-PL3-A10	1.53 mm (0.0602 in)
AG	23963-PL3-A10	1.56 mm (0.0614 in)
AH	23964-PL3-A10	1.59 mm (0.0626 in)
AI	23965-PL3-A10	1.62 mm (0.0638 in)
AJ	23966-PL3-A10	1.65 mm (0.0650 in)
AK	23967-PL3-A10	1.68 mm (0.0661 in)
AL	23968-PL3-A10	1.71 mm (0.0673 in)
AM	23969-PL3-A10	1.74 mm (0.0685 in)
AN	23970-PL3-A10	1.77 mm (0.0697 in)
AO	23971-PL3-A10	1.80 mm (0.0709 in)




70 mm THRUST SHIM: D16Y5, D16Y8 engines

	Part Number	Thickness
A	23931-PL3-B00	0.60 mm (0.0236 in)
B	23932-PL3-B00	0.63 mm (0.0284 in)
C	23933-PL3-B00	0.66 mm (0.0260 in)
D	23934-PL3-B00	0.69 mm (0.0272 in)
E	23935-PL3-B00	0.72 mm (0.0283 in)
F	23936-PL3-B00	0.75 mm (0.0295 in)
G	23937-PL3-B00	0.78 mm (0.0307 in)
H	23938-PL3-B00	0.81 mm (0.0319 in)
I	23939-PL3-B00	0.84 mm (0.0331 in)
J	23940-PL3-B00	0.87 mm (0.0343 in)
K	23941-PL3-B00	0.90 mm (0.0354 in)
L	23942-PL3-B00	0.93 mm (0.0366 in)
M	23943-PL3-B00	0.96 mm (0.0378 in)
N	23944-PL3-B00	0.99 mm (0.0390 in)
O	23945-PL3-B00	1.02 mm (0.0402 in)
P	23946-PL3-B00	1.05 mm (0.0413 in)
Q	23947-PL3-B00	1.08 mm (0.0425 in)
R	23948-PL3-B00	1.11 mm (0.0437 in)
S	23949-PL3-B00	1.14 mm (0.0449 in)
T	23950-PL3-B00	1.17 mm (0.0461 in)
U	23951-PL3-B00	1.20 mm (0.0472 in)
V	23952-PL3-B00	1.23 mm (0.0484 in)
W	23953-PL3-B00	1.26 mm (0.0496 in)
X	23954-PL3-B00	1.29 mm (0.0508 in)
Y	23955-PL3-B00	1.32 mm (0.0520 in)
Z	23956-PL3-B00	1.35 mm (0.0531 in)
AA	23957-PL3-B00	1.38 mm (0.0543 in)
AB	23958-PL3-B00	1.41 mm (0.0555 in)
AC	23959-PL3-B00	1.44 mm (0.0567 in)
AD	23960-PL3-B00	1.47 mm (0.0579 in)
AE	23961-PL3-B00	1.50 mm (0.0591 in)
AF	23962-PL3-B00	1.53 mm (0.0602 in)
AG	23963-PL3-B00	1.56 mm (0.0614 in)
AH	23964-PL3-B00	1.59 mm (0.0626 in)
AI	23965-PL3-B00	1.62 mm (0.0638 in)
AJ	23966-PL3-B00	1.65 mm (0.0650 in)
AK	23967-PL3-B00	1.68 mm (0.0661 in)
AL	23968-PL3-B00	1.71 mm (0.0673 in)
AM	23969-PL3-B00	1.74 mm (0.0685 in)
AN	23970-PL3-B00	1.77 mm (0.0697 in)
AO	23971-PL3-B00	1.80 mm (0.0709 in)


6. Install the oil guide plate and selected thrust shim in the transmission housing.

NOTE:

- Clean the thrust washer, spring washer and thrust shim thoroughly before installation.
- Install the thrust washer, spring washer and thrust shim properly.

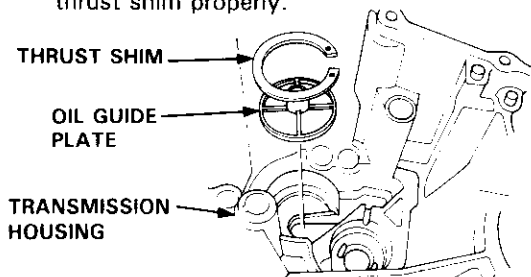

7. Install the thrust washer and spring washer in the mainshaft.

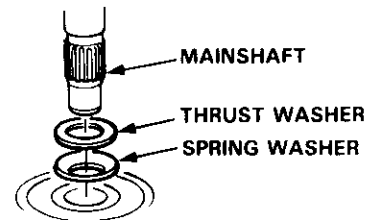

8. Install the mainshaft in the clutch housing.

9. Place the transmission housing over the mainshaft and onto the clutch housing.

10. Tighten the clutch and transmission housings with several 8 mm bolts.

NOTE: It is not necessary to use sealing agent between the housings.


**8 x 1.25 mm
27 N·m (2.8 kgf·m, 20 lbf·ft)**

11. Tap the mainshaft with a plastic hammer.

12. Check the thrust clearance in the manner described below.

CAUTION: Measurement should be made at room temperature.

a. Slide the mainshaft base and the collar over the mainshaft.

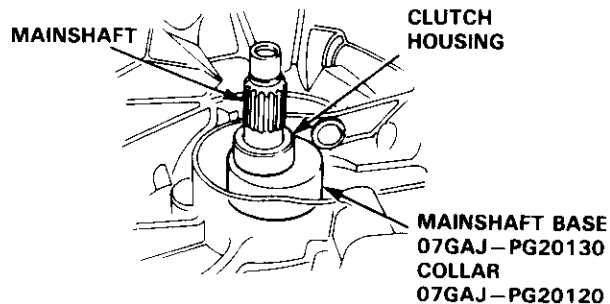

(cont'd)


Mainshaft Thrust Shim

Adjustment (cont'd)

b. Attach the mainshaft holder to the mainshaft as follows:


NOTE:

- Back-out the mainshaft holder bolt and loosen the two hex bolts.
- Fit the holder over the mainshaft so its lip is toward the transmission.
- Align the mainshaft holder's lip around the groove at the inside of the mainshaft splines, then tighten the hex bolts.

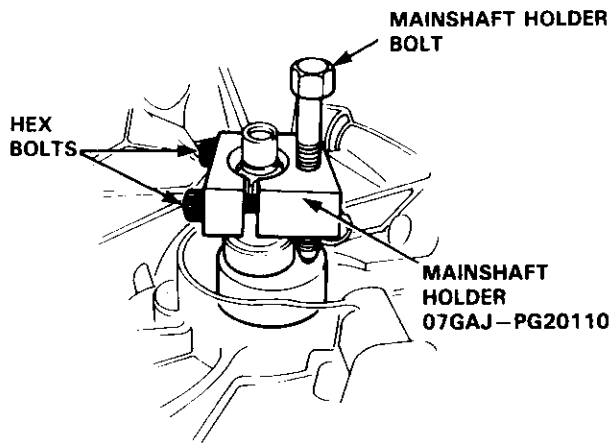

- c. Seat the mainshaft fully by tapping on the end with a plastic hammer.
- d. Thread the mainshaft holder bolt in until it just contacts the wide surface of the mainshaft base.

e. Zero a dial gauge on the end of the mainshaft.

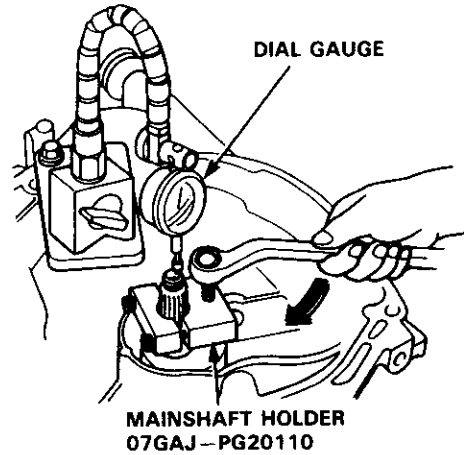

- f. Turn the mainshaft holder bolt clockwise; stop turning when the dial gauge has reached its maximum movement. The reading on the dial gauge is the amount of mainshaft end play.

CAUTION: Turning the mainshaft holder bolt more than 60 degrees after the needle of the dial gauge stops moving may damage the transmission.

- g. If the reading is within the standard, the clearance is correct. If the reading is not within the standard, recheck the shim thickness.


Standard: 0.11–0.18 mm (0.004–0.007 in)



Reassembly

NOTE: The steel balls are all of the same size (5/16 in).

1. Install the magnet and reverse lock cam.
2. Set shift arm A on the clutch housing, then install the shift rod.
3. Install the spring washer and shift arm A attaching bolt.
4. Install the steel ball, spring, and set ball spring bolt.
5. Install shift arm B in the interlock, then set it on the clutch housing.
6. Insert shift arm shaft in the clutch housing
7. Install the collar, spring, and steel ball into the case. Compress the ball and insert the shift arm shaft.
8. Install shift arm C in shift arm A, then insert the shift arm shaft.
9. Install the reverse select retainer and reverse select spring onto shift arm shaft.
10. Install the differential assembly.

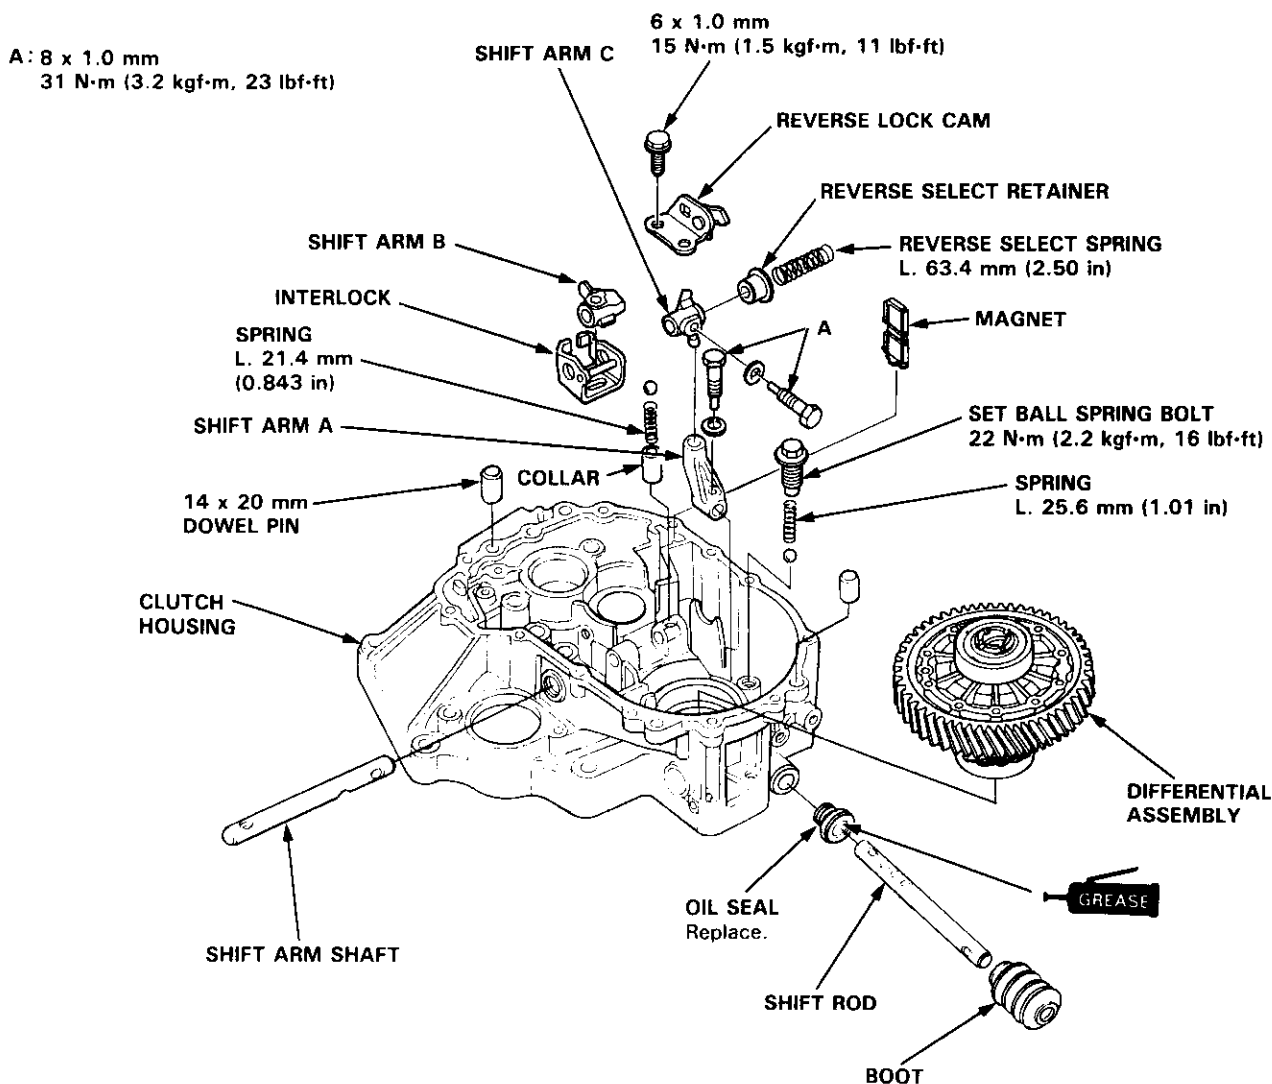


(cont'd)

Transmission

Reassembly (cont'd)


11. Position the 36 mm spring washer and washer onto the mainshaft bearing.

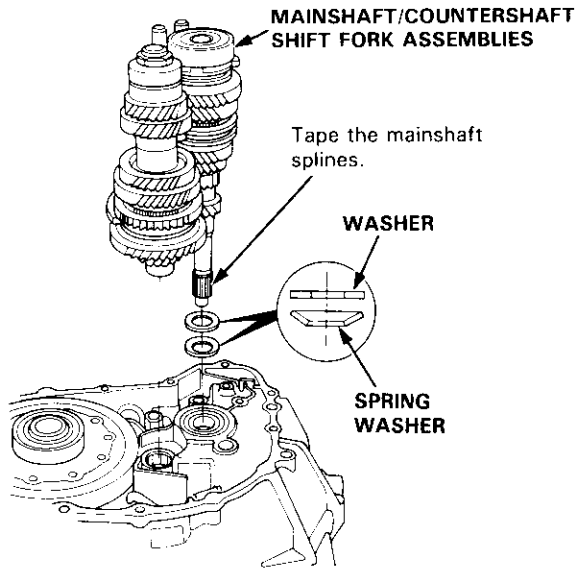

12. Install the mainshaft, countershaft, and shift fork assemblies.

NOTE: Align the finger of the interlock with the groove in the shift fork shaft.


13. Install the spring washer and shift arm B attaching bolt.

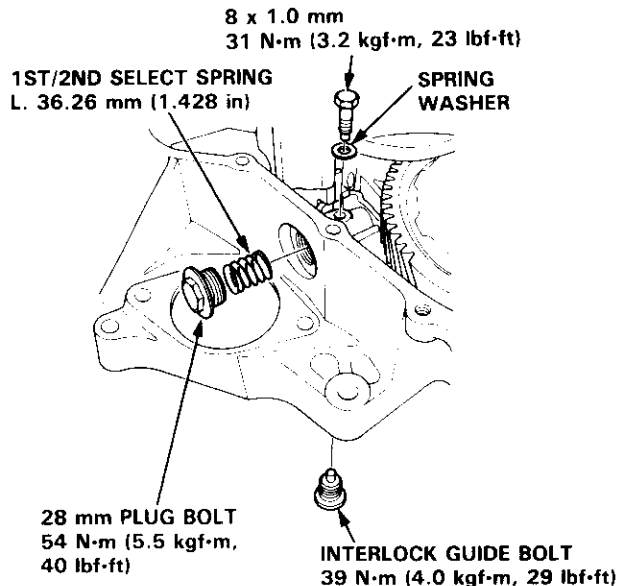


14. Install the 1st/2nd select spring, 28 mm plug bolt, and interlock guide bolt.

NOTE: Apply liquid gasket (P/N 08718-0001 or 08718-0003) to the threads of the 28 mm plug bolt and interlock guide bolt.

15. Install the reverse idler gear and reverse idler gear shaft.

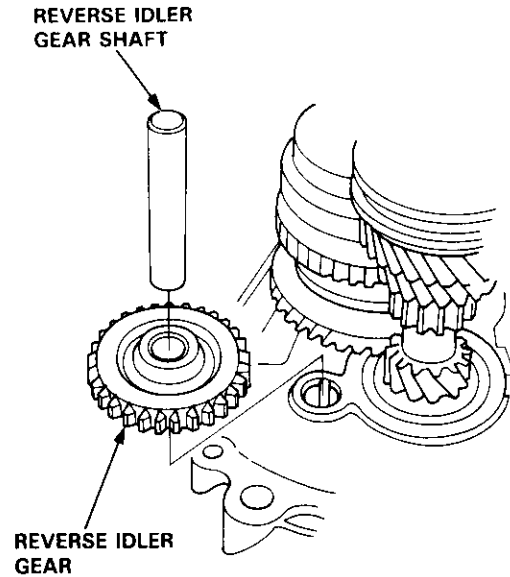


16. Install the reverse shift holder.

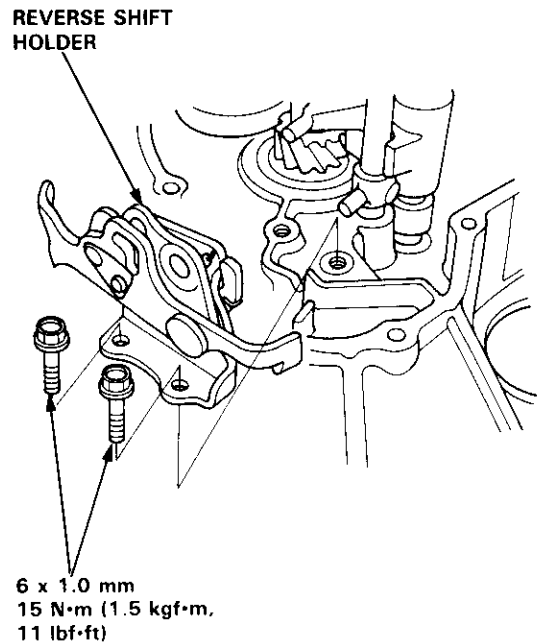



17. Install the oil gutter plate

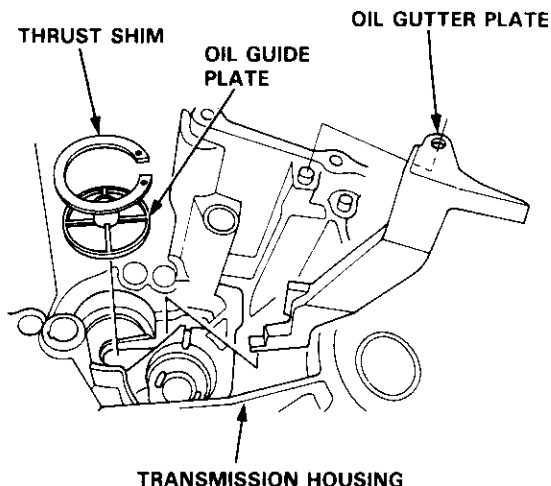


18. Install the oil guide plate and thrust shim on the transmission housing.

19. Apply liquid gasket to the surface of the transmission housing mating with the clutch housing as shown.

NOTE:

- Use liquid gasket (P/N 08718-0001 or 08718-0003).
- Remove the dirty oil from the sealing surface.
- If 5 minutes have passed after applying liquid gasket, reapply it and assemble the housings.
- Allow it to cure at least 20 minutes after assembly before filling the transmission with oil.


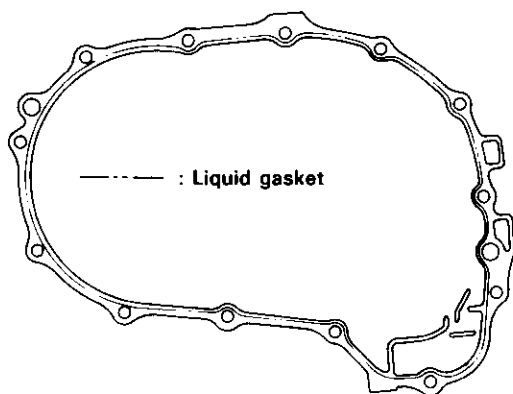


20. Install the dowel pins and the transmission housing.

21. Lower the transmission housing with the snap ring pliers, and set the snap ring into the groove of the countershaft bearing.

NOTE: Check that the snap ring is securely seated in the groove of the countershaft bearing.

32 mm SEALING BOLT
25 N·m (2.5 kgf·m, 18 lbf·ft)

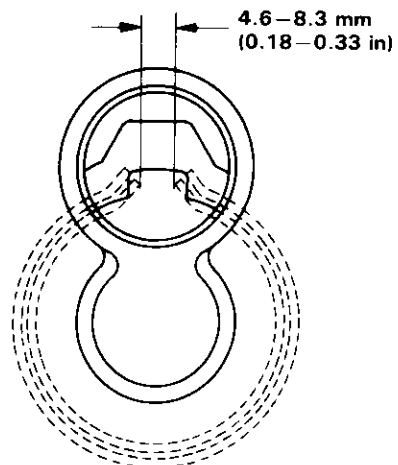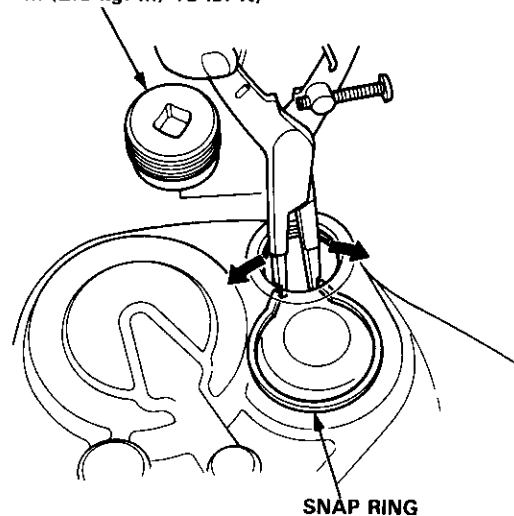

22. Install the 32 mm sealing bolt.

NOTE: Apply liquid gasket (P/N 08718-0001 or 08718-0003) to the threads.

(cont'd)


Transmission

Reassembly (cont'd)


23. Tighten the transmission housing attaching bolts in the numbered sequence in several steps shown below.

8 x 1.25 mm


Torque: 27 N·m (2.8 kgf·m, 20 lbf·ft)

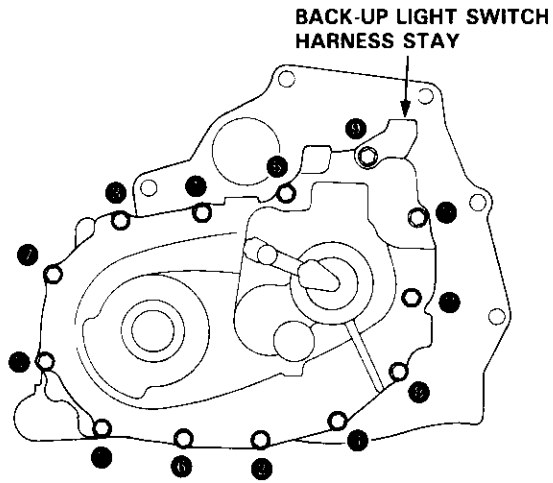

24. Install the steel balls, springs, and set screws.

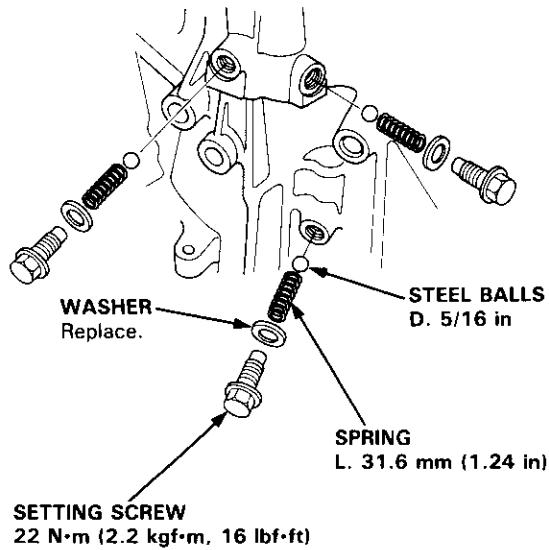

25. Install the back-up light switch and transmission hanger.

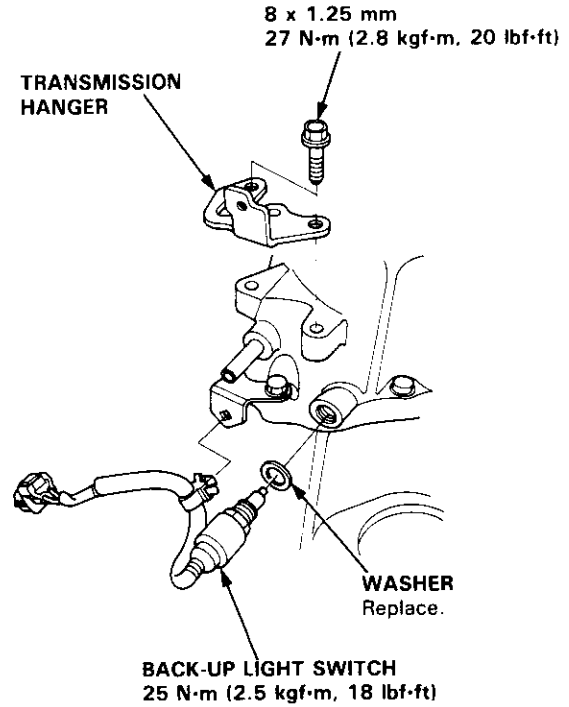




Oil Seals


Replacement

Transmission Housing:

1. Remove the oil seal from the transmission housing.

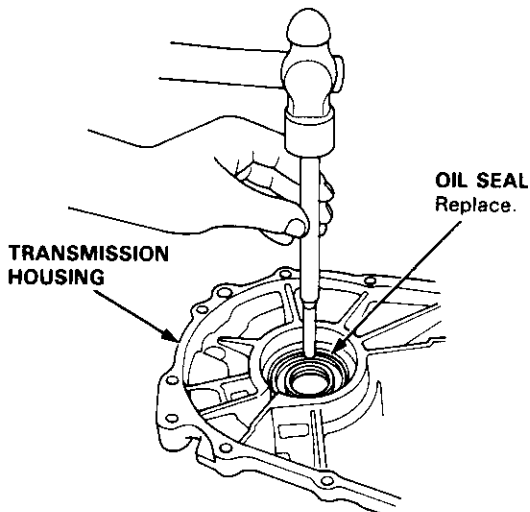


2. Install the oil seal into the transmission housing using the special tools as shown.

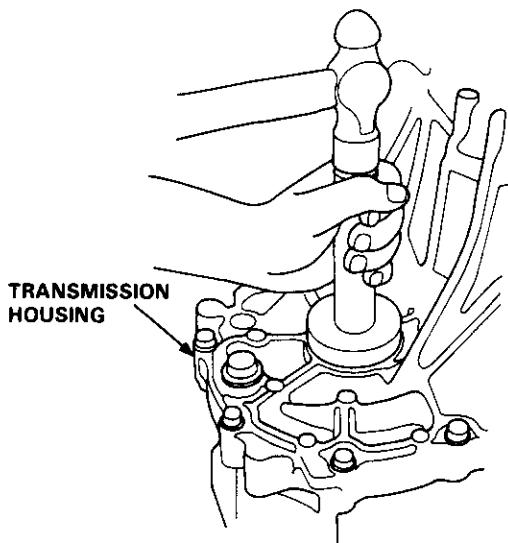


DRIVER
07749-0010000

SEAL DRIVER
ATTACHMENT
07947-6110501 or
07947-6110500

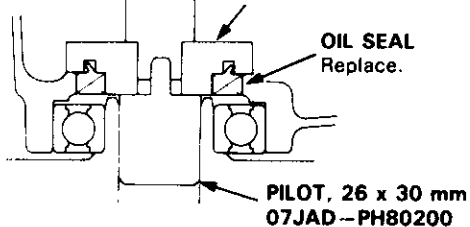


Clutch Housing:

1. Remove the oil seal from the clutch housing.

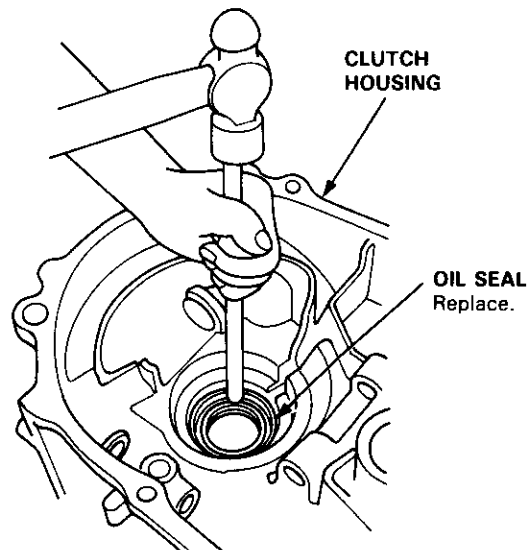


2. Install the oil seal into the clutch housing using the special tools as shown.

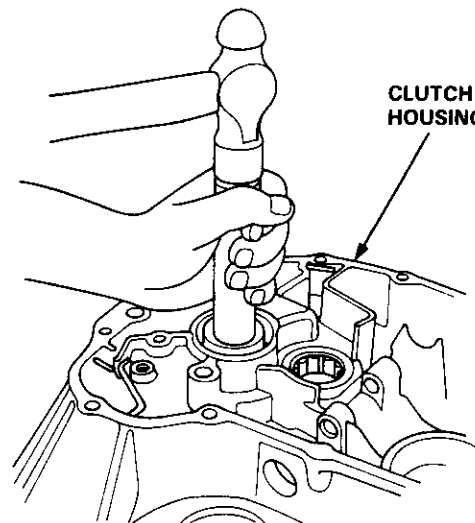

DRIVER
07749-0010000

DRIVER ATTACHMENT
07JAD-PH80101

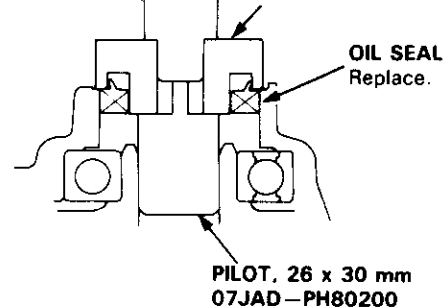


Gearshift Mechanism

Overhaul

NOTE:

- Inspect rubber parts for wear and damage when disassembling; replace any worn or damaged parts.
- Install the clip as shown.
- Turn the boot so the hole is facing down as shown.
- Make sure the boot is installed on the shift rod.

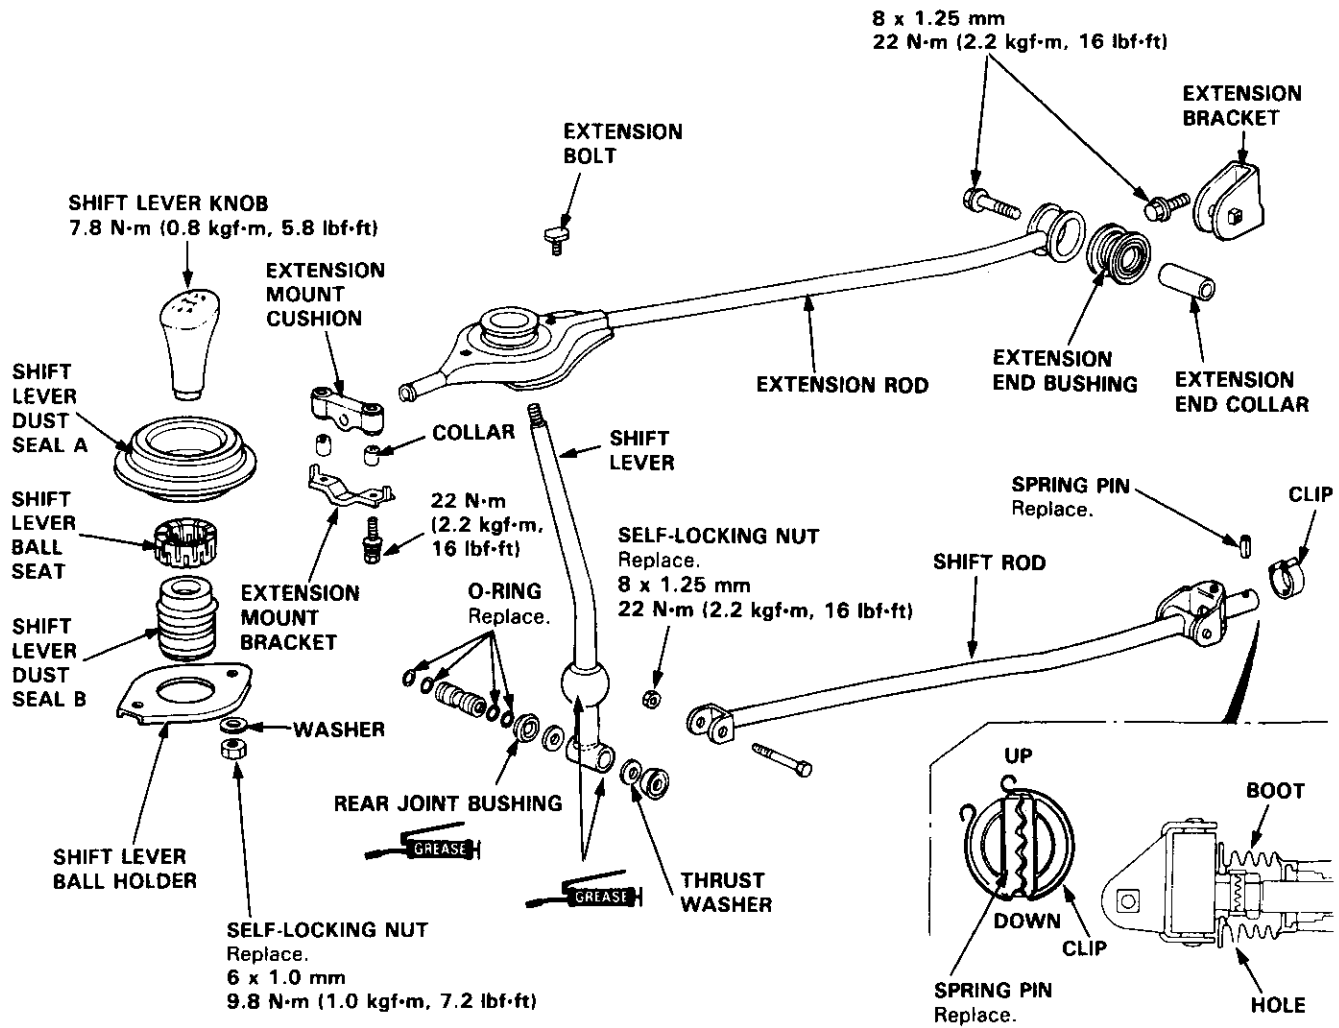

Automatic Transmission

Automatic Transmission	14-1
Continuously Variable Transmission (CVT)	14-161



Automatic Transmission

Special Tools	14-2
Description	14-3
Power Flow	14-6
Electronic Control System	14-13
Hydraulic Control	14-18
Hydraulic Flow	14-23
Lock-up System	14-32
Electrical System	
Component Locations	14-39
PCM Circuit Diagram (A/T Control System)	14-40
PCM Terminal Voltage/Measuring Conditions A/T Control System	14-42
Troubleshooting Procedures	14-44
Symptom-to-Component Chart	
Electrical System	14-48
Electrical Troubleshooting	
Troubleshooting Flowcharts	14-50
Lock-up Control Solenoid Valve A/B Assembly	
Test	14-74
Replacement	14-74
Shift Control Solenoid Valve A/B Assembly	
Test	14-75
Replacement	14-75
Linear Solenoid Assembly	
Test	14-76
Replacement	14-77
Mainshaft/Countershaft Speed Sensors	
Replacement	14-77
Hydraulic System	
Symptom-to-Component Chart	
Hydraulic System	14-78
Road Test	14-82
Stall Speed	
Test	14-85
Fluid Level	
Checking/Changing	14-86
Pressure Testing	14-87
Transmission	
Removal	14-90
Illustrated Index	
Transmission/Right Side Cover	14-94
Transmission Housing	14-96
Torque Converter Housing/Valve Body	14-98
Right Side Cover	
Removal	14-100
Transmission Housing	
Removal	14-102
Torque Converter Housing/Valve Body	
Removal	14-104
Valve Caps	
Description	14-106
Valve Body	
Repair	14-107
Valve	
Assembly	14-108


ATF Pump	
Inspection	14-109
Main Valve Body	
Disassembly/Inspection/Reassembly	14-110
Secondary Valve Body	
Disassembly/Inspection/Reassembly	14-112
Regulator Valve Body	
Disassembly/Inspection/Reassembly	14-113
Servo Body	
Disassembly/Inspection/Reassembly	14-114
Lock-up Valve Body	
Disassembly/Inspection/Reassembly	14-115
Mainshaft	
Disassembly/Inspection Reassembly	14-116
Inspection	14-117
Countershaft	
Disassembly/Inspection/Reassembly	14-119
Disassembly/Reassembly	14-120
Inspection	14-121
One-way Clutch	
Disassembly/Inspection/Reassembly	14-123
Clutch	
Illustrated Index (A4RA, B4RA Transmission) ...	14-124
Illustrated Index (M4RA Transmission)	14-126
Disassembly	14-128
Reassembly	14-130
Differential	
Illustrated Index	14-134
Backlash Inspection	14-135
Bearing Replacement	14-135
Differential Carrier Replacement	14-136
Oil Seal Removal	14-137
Oil Seal Installation/Side Clearance	14-137
Torque Converter Housing Bearings	
Mainshaft Bearing/Oil Seal Replacement	14-140
Countershaft Bearing Replacement	14-141
Transmission Housing Bearings	
Mainshaft/Countershaft Bearings Replacement	14-142
Reverse Idler Gear	
Installation	14-143
Parking Brake Stop	
Inspection/Adjustment	14-143
Transmission	
Reassembly	14-144
Torque Converter/Drive Plate	
Installation	14-151
Cooler Flushing	14-155
Shift Cable	
Removal/Installation	14-157
Adjustment	14-158
Shift Lever	14-159
Shift Indicator Panel	
Adjustment	14-160
ATF Cooler Hoses	
Connection	14-160




Special Tools

Ref. No.	Tool Number	Description	Qty	Page Reference
①	07GAB - PF50101	Mainshaft Holder	1	14-101, 148
②	07GAE - PG40200	Clutch Spring Compressor Bolt Assembly	1	14-128, 131
③	07HAC - PK4010A	Housing Puller	1	14-103
④	07JAD - PH80101	Driver Attachment	1	14-139
⑤	07JAD - PH80200	Pilot, 26 x 30 mm	1	14-139
⑥	07LAE - PX40100	Clutch Spring Compressor Attachment	1	14-128, 131
⑦	07PAZ - 0010100	SCS Service Connector	1	14-45
⑧	07SAZ - 001000A	Backprobe Set	2	14-46
⑨	07MAJ - PY4011A	A/T Oil Pressure Hose, 2210 mm	4	14-87
⑩	07MAJ - PY40120	A/T Oil Pressure Hose, Adapter	4	14-87
⑪	07406 - 0020400	A/T Oil Pressure Gauge Set w/panel	1	14-87
⑫	07406 - 0070300	A/T Low Pressure Gauge w/panel	1	14-87
⑬*	07736 - A01000A	Adjustable Bearing Puller, 25 - 40 mm	1	14-140, 141
⑭	07746 - 0010500	Attachment, 62 x 68 mm	1	14-140, 141, 142
⑮	07746 - 0010600	Attachment, 72 x 75 mm	1	14-140, 142
⑯	07746 - 0030100	Driver 40 mm I.D.	1	14-121, 135, 137, 138
⑰	07749 - 0010000	Driver	1	14-139, 140, 141, 142
⑱	07947 - 611501	Driver Attachment, 68 mm	1	14-139


*Must be used with commercially-available 3/8" - 16 slide hammer.



①



②

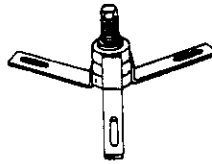


③




④




⑤

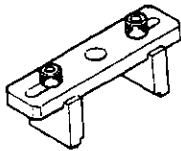


⑥

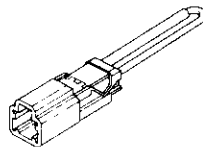


⑦




⑧

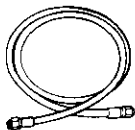


⑨




⑩

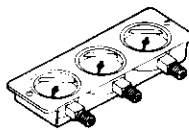

⑪



⑫



⑬




⑭

⑮



⑮



⑯



⑰

Description



The automatic transmission is a combination of a 3-element torque converter and a dual-shaft electronically controlled automatic transmission which provides 4 speeds forward and 1 reverse.

Torque Converter, Gears and Clutches

The torque converter consists of a pump, turbine and stator, assembled in a single unit. They are connected to the engine crankshaft so they turn together as a unit as the engine turns. Around the outside of the torque converter is a ring gear which meshes with the starter pinion when the engine is being started. The entire torque converter assembly serves as a flywheel while transmitting power to the transmission mainshaft.

The transmission has two parallel shafts: the mainshaft and the countershaft. The mainshaft is in line with the engine crankshaft. The mainshaft includes the 1st, 2nd and 4th clutches, gears for 2nd, 4th, reverse and 1st (3rd gear is integral with the mainshaft, while the reverse gear is integral with the 4th gear). The countershaft includes the 3rd clutch, and gears for 3rd, 2nd, 4th, reverse, 1st and parking. The gears on the mainshaft are in constant mesh with those on the countershaft. When certain combinations of gears in transmission are engaged by clutches, power is transmitted from the mainshaft to the countershaft to provide **2**, **D₁**, **D₂**, and **R** positions.

Electronic Control

The electronic control system consists of the Powertrain Control Module (PCM), sensors, a linear solenoid and four solenoid valves. Shifting and lock-up are electronically controlled for comfortable driving under all conditions. The PCM is located below the dashboard, under the front lower panel on the passenger's side.

Hydraulic Control

The valve bodies include the main valve body, the secondary valve body, the regulator valve body, the servo body and the lock-up valve body through the respective separator plates. They are bolted on the torque converter housing.

The main valve body contains the manual valve, the 1-2 shift valve, the 2nd orifice control valve, the CPB (Clutch Pressure Back-up) valve, the modulator valve, the servo control valve, the relief valve, and ATF pump gears. The secondary valve body contains the 2-3 shift valve, the 3-4 shift valve, the 3-4 orifice control valve, the 4th exhaust valve and the CPC (Clutch Pressure Control) valve. The regulator valve body contains the pressure regulator valve, the torque converter check valve, the cooler relief valve, and the lock-up control valve. The servo body contains the servo valve which is integrated with the reverse shift fork, and the accumulators. The lock-up valve body contains the lock-up shift valve and the lock-up timing valve. The linear solenoid and the shift control solenoid valve A/B are bolted on the outside of the transmission housing, and the lock-up control solenoid valve A/B is bolted on the outside of the torque converter housing. Fluid from regulator passes through the manual valve to the various control valves. The clutches receive fluid from their respective feed pipes or internal hydraulic circuit.

Shift Control Mechanism

Input from various sensors located throughout the car determines which shift control solenoid valve the PCM will activate. Activating a shift control solenoid valve changes modulator pressure, causing a shift valve to move. This pressurizes a line to one of the clutches, engaging that clutch and its corresponding gear. The shift control solenoid valves A and B are controlled by the PCM.

Lock-up Mechanism

In **D₁** position, in 3rd and 4th, and in **D₂** position in 3rd, pressurized fluid is drained from the back of the torque converter through a fluid passage, causing the lock-up piston to be held against the torque converter cover. As this takes place, the mainshaft rotates at the same as the engine crankshaft. Together with hydraulic control, the PCM optimizes the timing of the lock-up mechanism. The lock-up valves control the range of lock-up according to lock-up control solenoid valves A and B, and linear solenoid. When lock-up control solenoid valves A and B activate, the modulator pressure changes. The lock-up control solenoid valves A and B and the linear solenoid are controlled by the PCM.

(cont'd)

Description

(cont'd)

Gear Selection

The shift lever has six positions: **P** PARK, **R** REVERSE, **N** NEUTRAL, **D₄** 1st through 4th gear ranges, **D₃** 1st through 3rd gear ranges, **2** 2nd gear.

Position	Description
P PARK	Front wheels locked; parking brake pawl engaged with parking gear on countershaft. All clutches released.
R REVERSE	Reverse; reverse selector engaged with countershaft reverse gear and 4th clutch locked.
N NEUTRAL	All clutches released.
D₄ DRIVE (1st through 4th)	General driving; starts off in 1st, shifts automatically to 2nd, 3rd, then 4th, depending on vehicle speed and throttle position. Downshift through 3rd, 2nd and 1st on deceleration to stop. The lock-up mechanism comes into operation in D₄ position in 3rd and 4th gear.
D₃ DRIVE (1st through 3rd)	Use for rapid acceleration at highway speeds and general driving; up-hill and down-hill driving; starts off in 1st, shifts automatically to 2nd, then 3rd, depending on vehicle speed and throttle position. Downshifts through 2nd to 1st on deceleration to stop. The lock-up mechanism comes into operation in 3rd gear.
2 SECOND	Use for engine braking or better traction starting off on loose or slippery surfaces; stays in 2nd gear, does not shift up and down.

Starting is possible only in **P** and **N** positions through the use of a slide-type, neutral-safety switch.

Automatic Transaxle (A/T) Gear Position Indicator

The A/T gear position indicator in the instrument panel shows which gear has been selected without having to look down at the console.

Clutches

The four-speed automatic transmission uses hydraulically-actuated clutches to engage or disengage the transmission gears. When hydraulic pressure is introduced into the clutch drum, the clutch piston moves. This presses the friction discs and steel plates together, locking them so they don't slip. Power is then transmitted through the engaged clutch pack to its hub-mounted gear. Likewise, when the hydraulic pressure is bled from the clutch pack, the piston releases the friction discs and the steel plates, and they are free to slide past each other. This allows the gear to spin independently on its shaft, transmitting no power.

● 1st Clutch

The 1st clutch engages/disengages 1st gear, and is located at the end of the mainshaft, just behind the right side cover. The 1st clutch is supplied hydraulic pressure by its ATF feed pipe within the mainshaft.

● 2nd Clutch

The 2nd clutch engages/disengages 2nd gear, and is located at the middle of the mainshaft. The 2nd clutch is joined back-to-back to the 4th clutch. The 2nd clutch is supplied hydraulic pressure through the mainshaft by a circuit connected to the internal hydraulic circuit.

● 3rd Clutch

The 3rd clutch engages/disengages 3rd gear, and is located at the end of the countershaft. The 3rd clutch is supplied hydraulic pressure by its ATF feed pipe within the countershaft.

● 4th Clutch


The 4th clutch engages/disengages 4th gear, as well as reverse gear, and is located at the middle of the mainshaft. The 4th clutch is joined back-to-back to the 2nd clutch. The 4th clutch is supplied hydraulic pressure by its ATF feed pipe within the mainshaft.



One-way Clutch

The one-way clutch is positioned between the countershaft 1st gear and the parking gear, with the parking gear splined to the countershaft. The 1st gear provides the outer race surface, and the parking gear provides the inner race surface. The one-way clutch locks up when power is transmitted from the mainshaft 1st gear to the countershaft 1st gear. The 1st clutch and gears remain engaged in the 1st, 2nd, 3rd, and 4th gear ranges in the **D₄**, **D₃** or **2** position.

However, the one-way clutch disengages when the 2nd, 3rd, or 4th clutches/gears are applied in the **D₄**, **D₃** or **2** position. This is because the increased rotational speed of the gears on the countershaft overrides the locking "speed range" of the one-way clutch. Thereafter, the one-way clutch free-wheels with the 1st clutch still engaged.

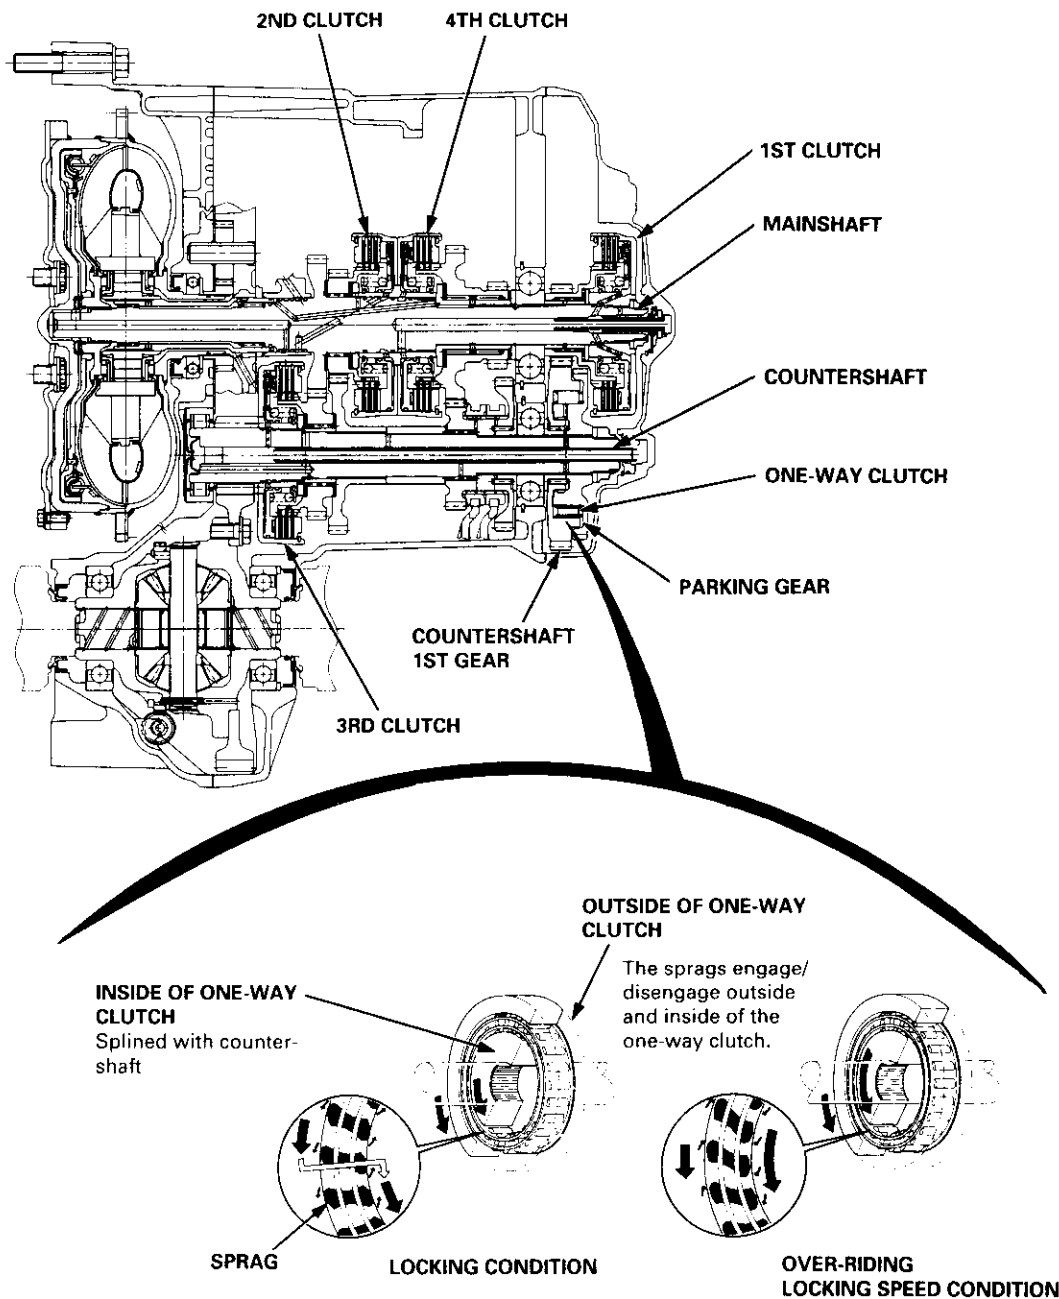

Description

Power Flow

PART POSITION	TORQUE CONVERTER	1ST GEAR 1ST CLUTCH	2ND GEAR 2ND CLUTCH	3RD GEAR 3RD CLUTCH	4TH		REVERSE GEAR	PARKING GEAR
					GEAR	CLUTCH		
P	○	×	×	×	×	×	×	○
R	○	×	×	×	×	○	○	×
N	○	×	×	×	×	×	×	×
D₄	1ST	○*2	×	×	×	×	×	×
	2ND	○*1	○	×	×	×	×	×
	3RD	○*1	×	○	×	×	×	×
	4TH	○*1	×	×	○	○	×	×
D₃	1ST	○*2	×	×	×	×	×	×
	2ND	○*1	○	×	×	×	×	×
	3RD	○*1	×	○	×	×	×	×
2	○	○*1	○	×	×	×	×	×

○: Operates, x: Doesn't operate.

*1: Although the 1st clutch engages, driving power is not transmitted as the one-way clutch slips.

*2: The one-way clutch engages when accelerating, and slips when decelerating.




N Position

Hydraulic pressure is not applied to the clutches. Power is not transmitted to the countershaft.

P Position

Hydraulic pressure is not applied to the clutches. Power is not transmitted to the countershaft.
The countershaft is locked by the parking pawl interlocking the parking gear.

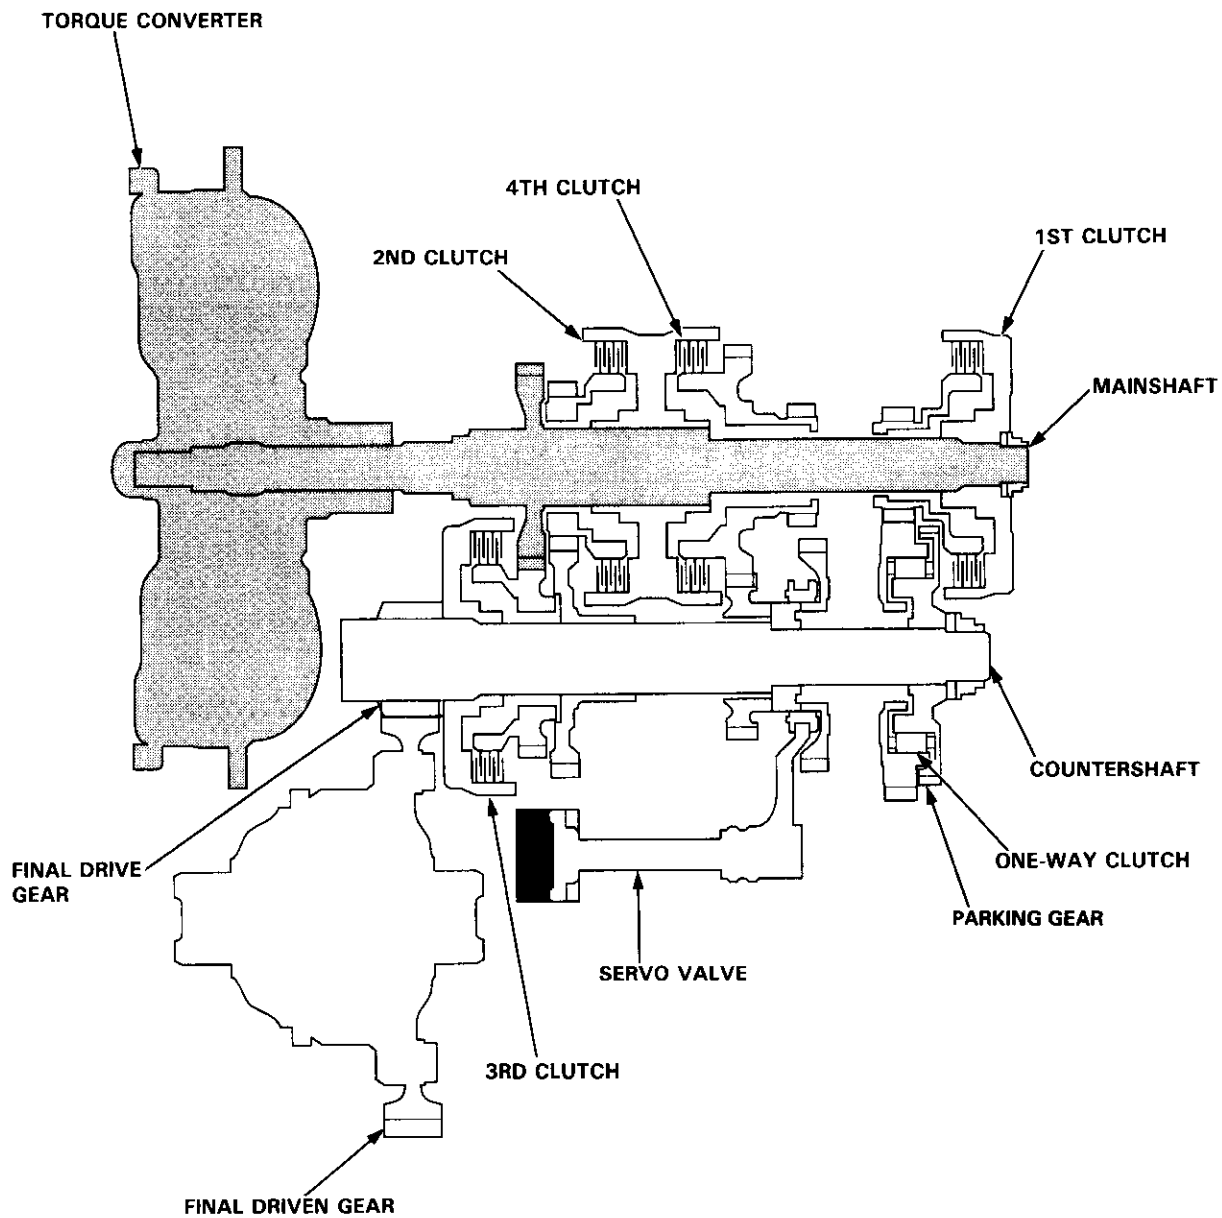

(cont'd)


Description

Power Flow (cont'd)

1st Gear (D_4 or D_3 position)

In D_4 or D_3 position, the optimum gear is automatically selected from 1st, 2nd, 3rd and 4th gears, according to conditions such as the balance between throttle opening (engine load) and vehicle speed.

1. Hydraulic pressure is applied to the 1st clutch, which rotates together with the mainshaft, causing the mainshaft 1st gear to rotate.
2. Power is transmitted to the countershaft 1st gear, which drives the countershaft via the one-way clutch.
3. Power is transmitted to the final drive gear, which drives the final driven gear.

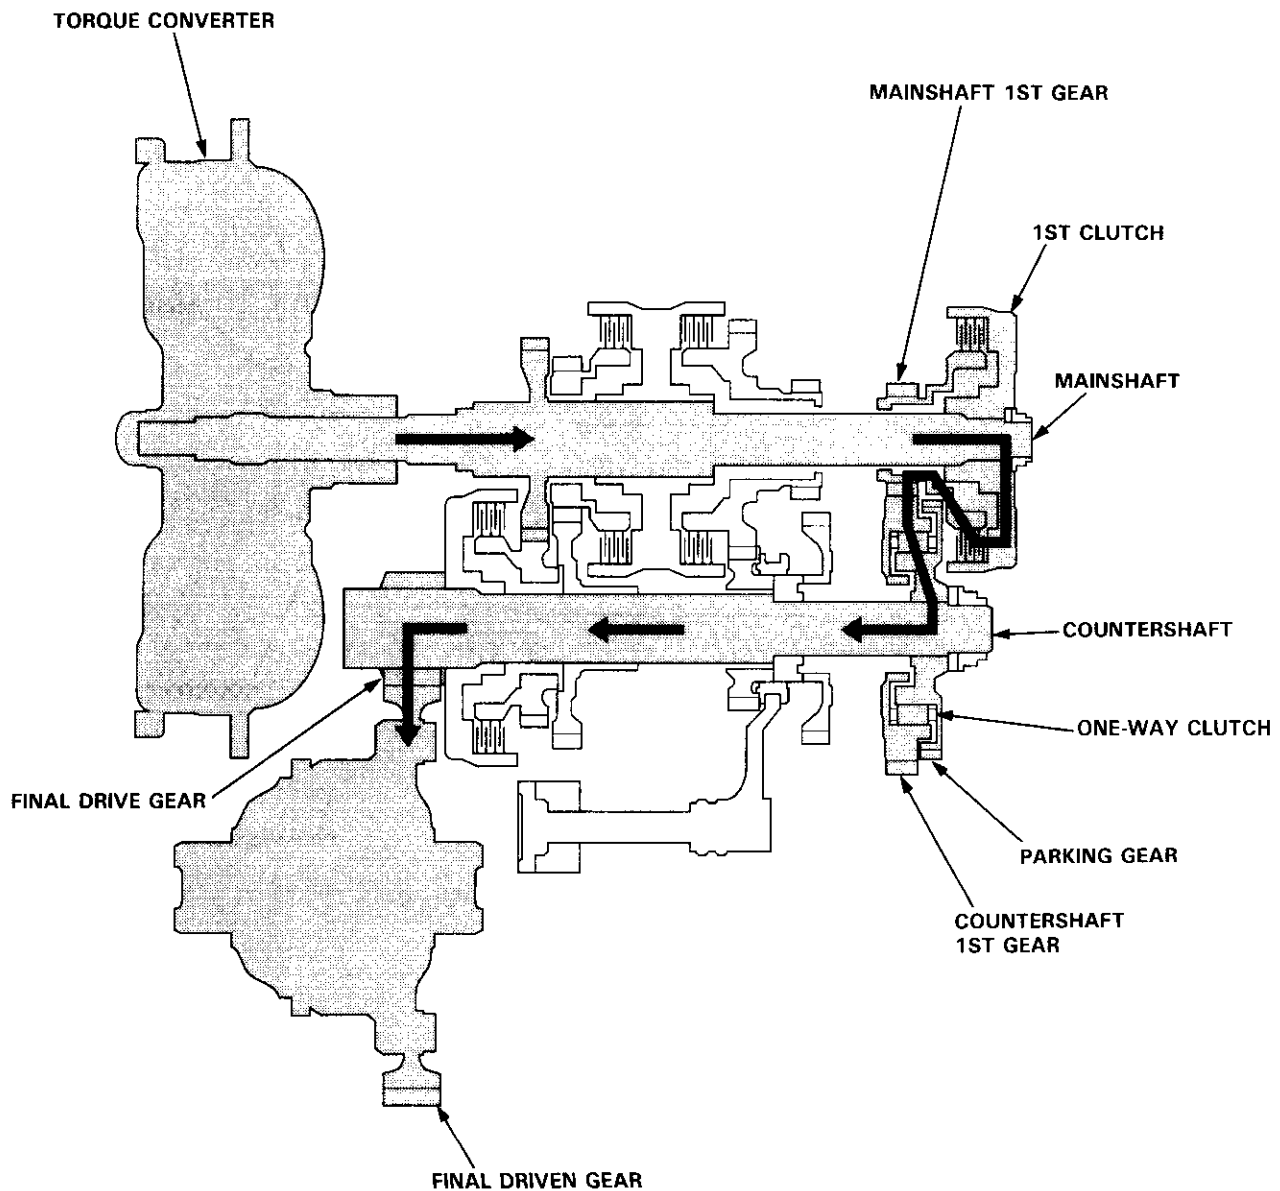




2nd Gear (D_1 , D_2 or 2 position)

2 Position is provided to drive only 2nd gear.

1. Hydraulic pressure is applied to the 2nd clutch on the mainshaft, and power is transmitted via the 2nd clutch to the mainshaft 2nd gear.
2. Power transmitted to the mainshaft 2nd gear is conveyed via the countershaft 2nd gear, which drives the countershaft.
3. Power is transmitted to the final drive gear, which drives the final driven gear.

NOTE: Hydraulic pressure is also applied to the 1st clutch, but since the rotation speed of the 2nd gear exceeds that of 1st gear, power from 1st gear is cut off at the one-way clutch.

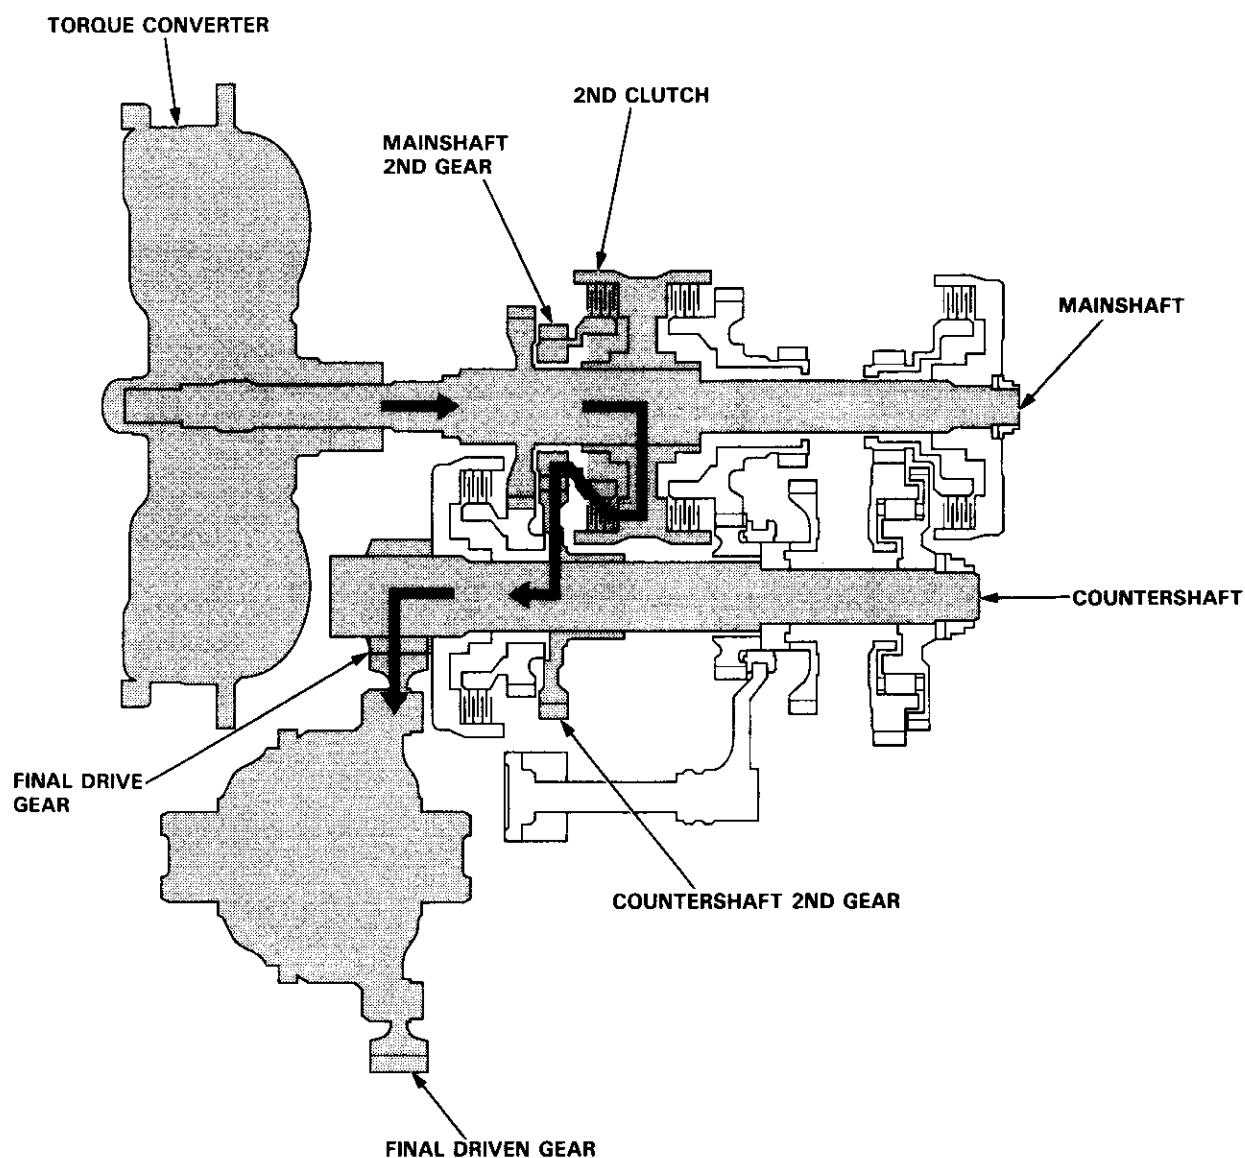

(cont'd)


Description

Power Flow (cont'd)

3rd Gear (D₄ or D₃ position)

1. Hydraulic pressure is applied to the 3rd clutch. Power from the mainshaft 3rd gear is transmitted to the countershaft 3rd gear.
2. Power is transmitted to the final drive gear, which drives the final driven gear.

NOTE: Hydraulic pressure is also applied to the 1st clutch, but since the rotation speed of 3rd gear exceeds that of 1st gear, power from 1st gear is cut off at the one-way clutch.

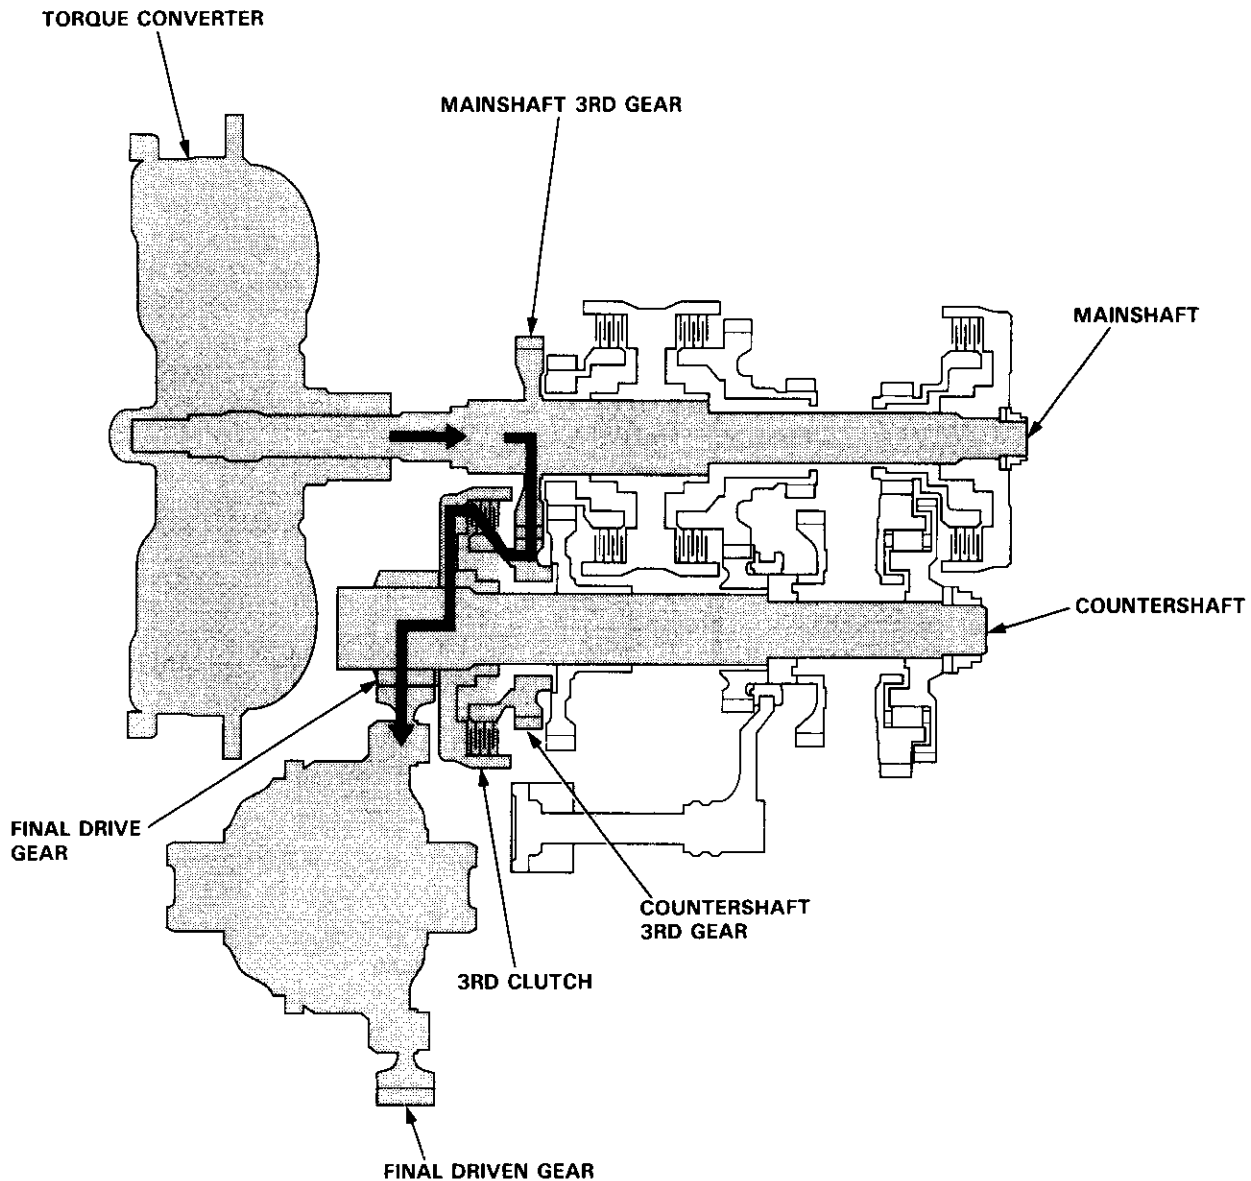




4th Gear (D₄ position)

1. Hydraulic pressure is applied to the 4th clutch, which rotates together with the mainshaft, causing the mainshaft 4th gear to rotate.
2. Power is transmitted to the countershaft 4th gear, which drives the countershaft.
3. Power is transmitted to the final drive gear, which drives the final driven gear.

NOTE: Hydraulic pressure is also applied to the 1st clutch, but since the rotation speed of 4th gear exceeds that of 1st gear, power from 1st gear is cut off at the one-way clutch.

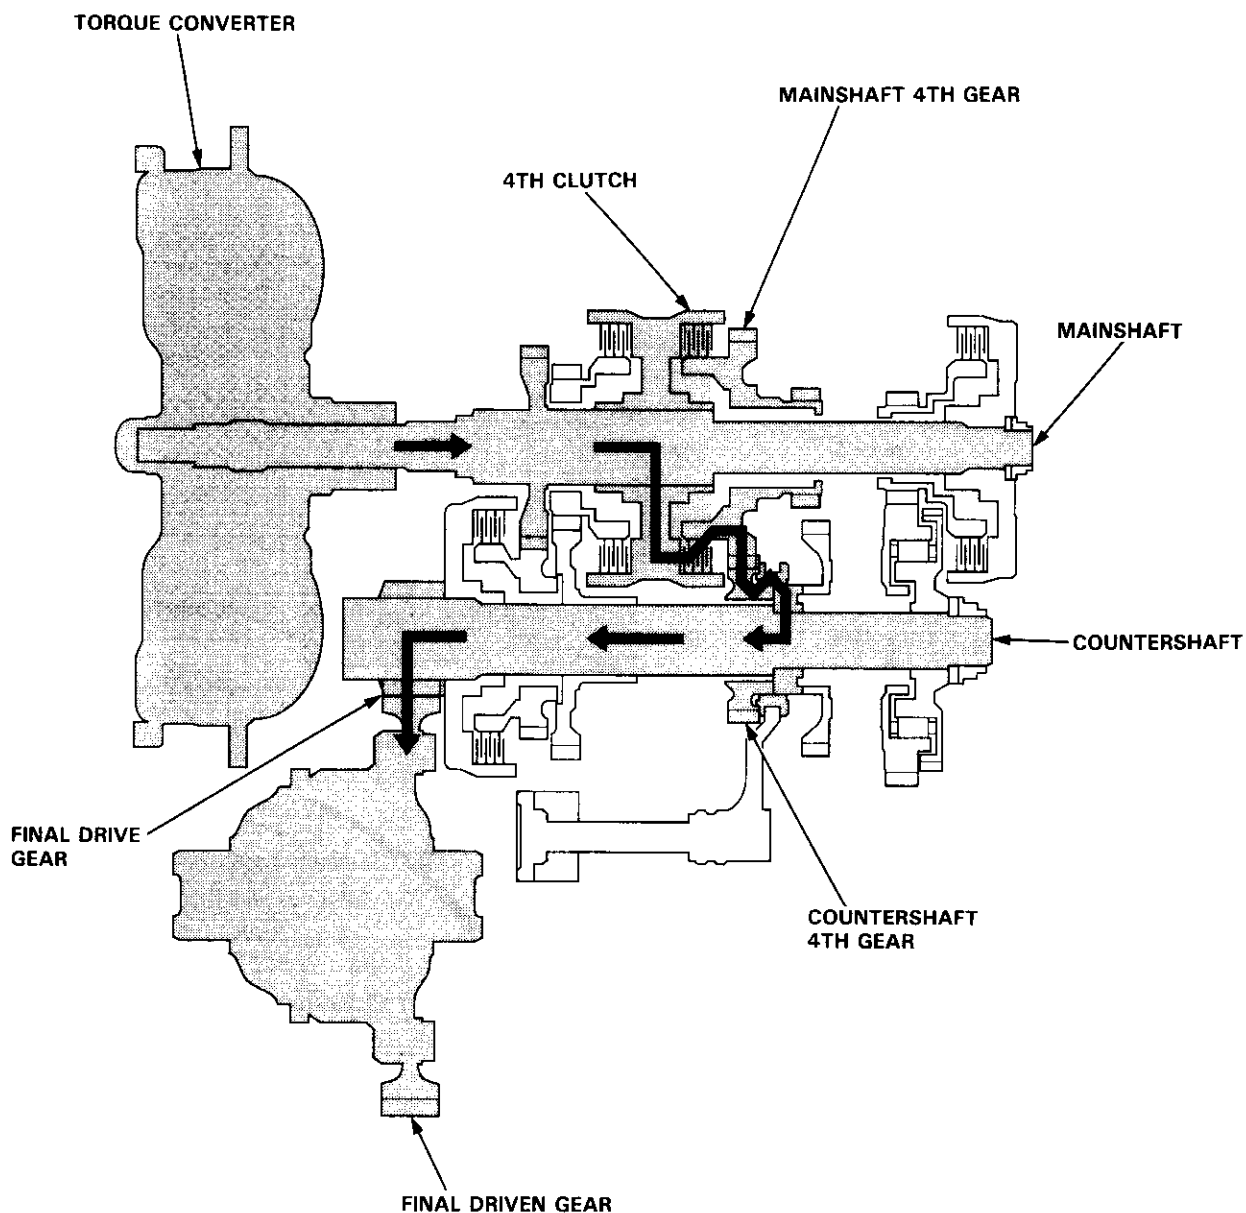


(cont'd)

Description

Power Flow (cont'd)

R Position


1. Hydraulic pressure is switched by the manual valve to the servo valve, which moves the reverse shift fork to the reverse position. The reverse shift fork engages with the reverse selector, reverse selector hub, and the countershaft reverse gear.
2. Hydraulic pressure is also applied to the 4th clutch. Power is transmitted from the mainshaft reverse gear via the reverse idler gear to the countershaft reverse gear.
3. The rotation direction of the countershaft reverse gear is changed via the reverse idler gear.
4. Power is transmitted to the final drive gear, which drives the final driven gear.

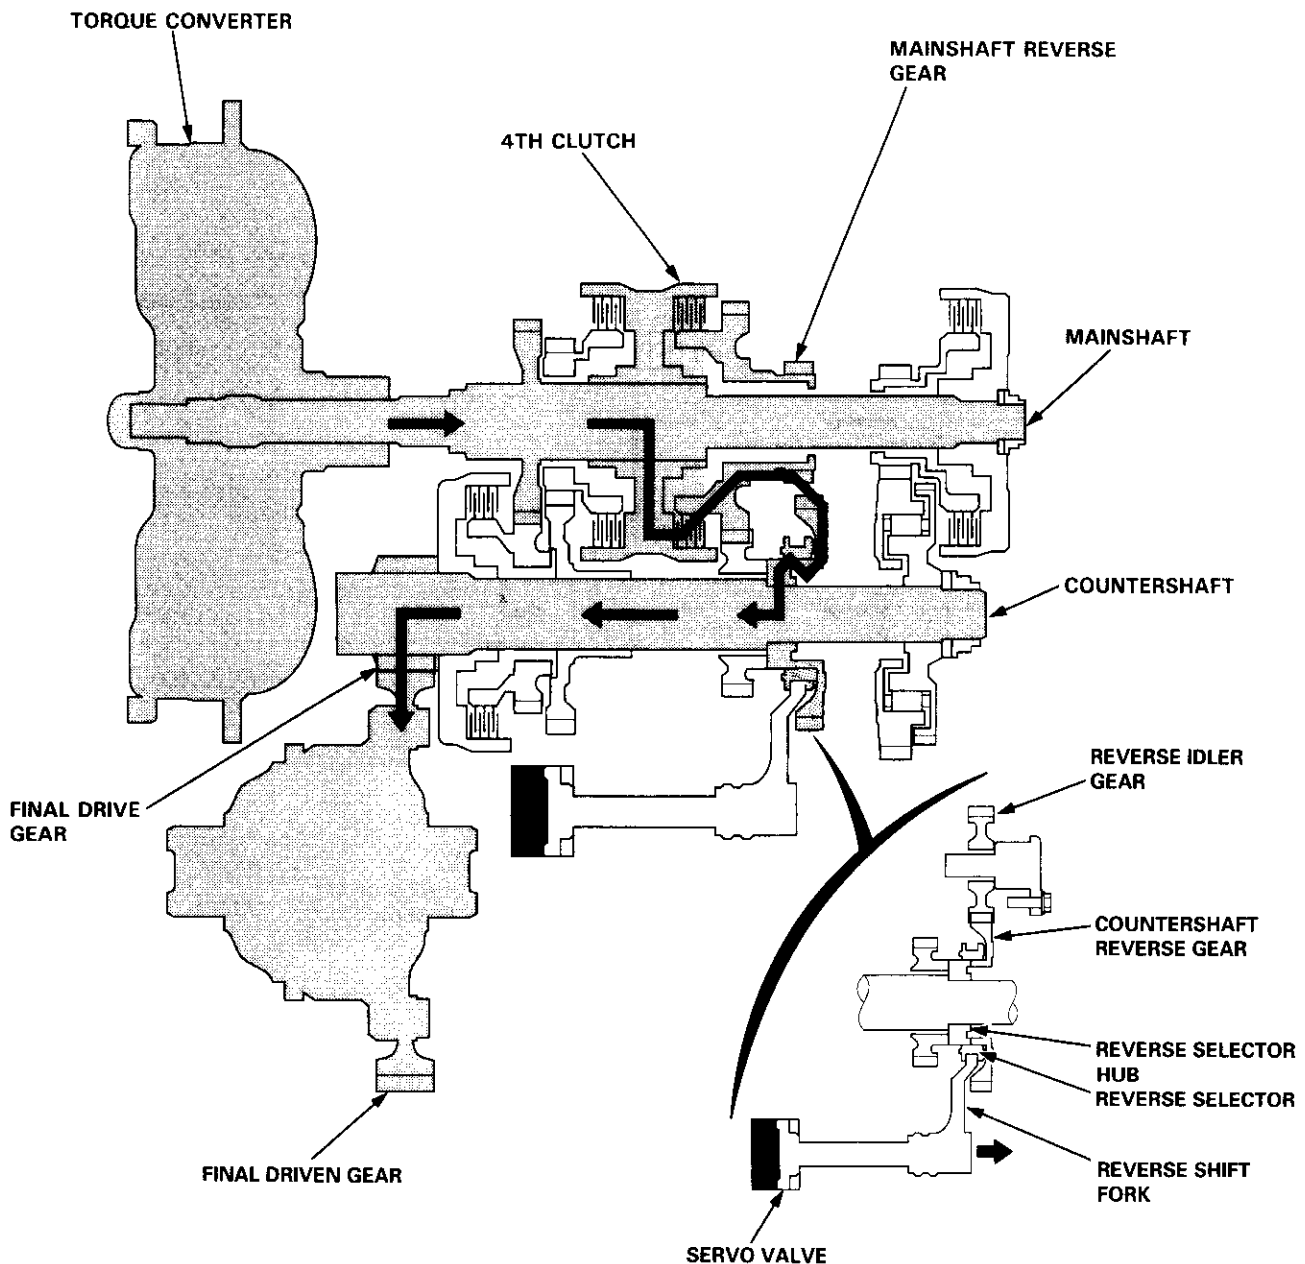



Electronic Control System

The electronic control system consists of a Powertrain Control Module (PCM), sensors, a linear solenoid and four solenoid valves. Shifting and lock-up are electronically controlled for comfortable driving under all conditions. The PCM is located below the dashboard, under the front lower panel on the passenger's side.

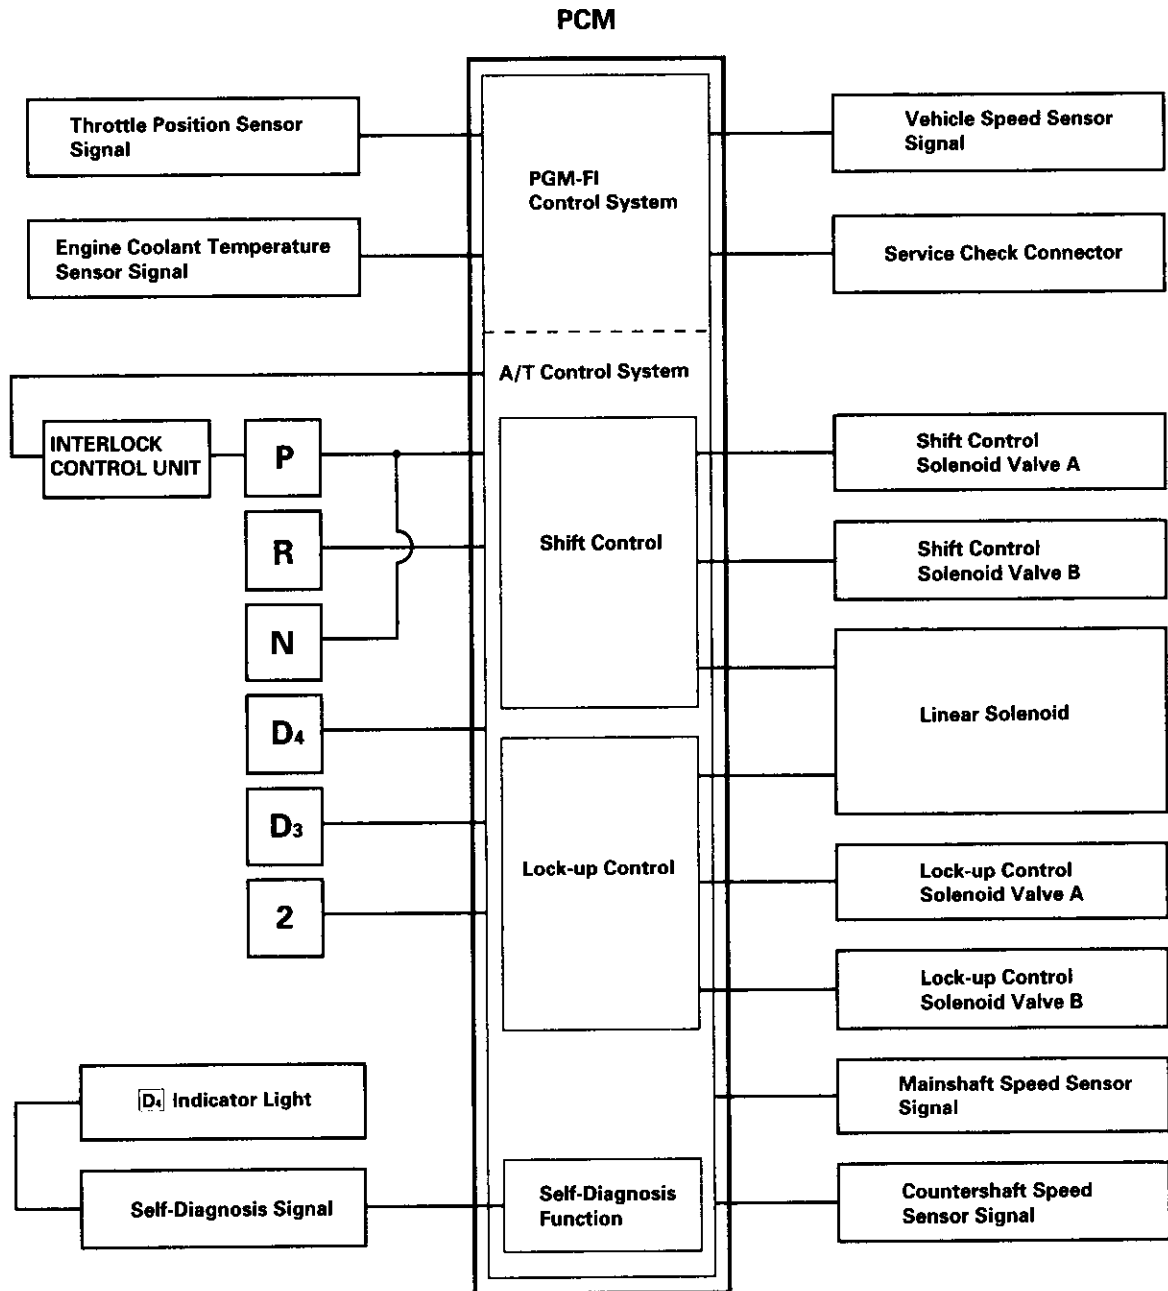

(cont'd)

Description

Electronic Control System (cont'd)

Shift Control

The PCM instantaneously determines which gear should be selected by various signals sent from sensors, and actuates the shift control solenoid valves A and B to control shifting. Also, a Grade Logic Control System has been adopted to control shifting in D_4 position while the vehicle is ascending or descending a slope, or reducing speed.

Position	Gear	Shift Control Solenoid Valve A	Shift Control Solenoid Valve B
D_4 , D_3	1st	OFF	ON
	2nd	ON	ON
	3rd	ON	OFF
D_4	4th	OFF	OFF
2	2nd	ON	ON
R *	Reverse	ON	OFF

*See page 14-30 for reverse inhibitor control description.

Lock-up Control

From sensor input signals, the PCM determines whether to turn the lock-up ON or OFF, and activates lock-up control solenoid valve A and/or B accordingly. The combination of driving signals to lock-up control solenoid valves A and B and the linear solenoid pressure is shown in the table below.


Lock-up Conditions	Lock-up Control Solenoid Valve A	Lock-up Control Solenoid Valve B	Linear Solenoid Pressure
Lock-up OFF	OFF	OFF	High
Lock-up, Half	ON	Duty operation OFF ↔ ON	Low
Lock-up, Full	ON	ON	High
Lock-up during deceleration	ON	Duty operation OFF ↔ ON	Low



• GRADE LOGIC CONTROL SYSTEM

How it works:

The PCM compares actual driving conditions with driving conditions memorized in the PCM, based on the input from the vehicle speed sensor, the throttle position sensor, the barometric pressure sensor, the engine coolant temperature sensor, the brake switch signal and the shift lever position signal, to control shifting while a vehicle is ascending or descending a slope, or reducing speed.

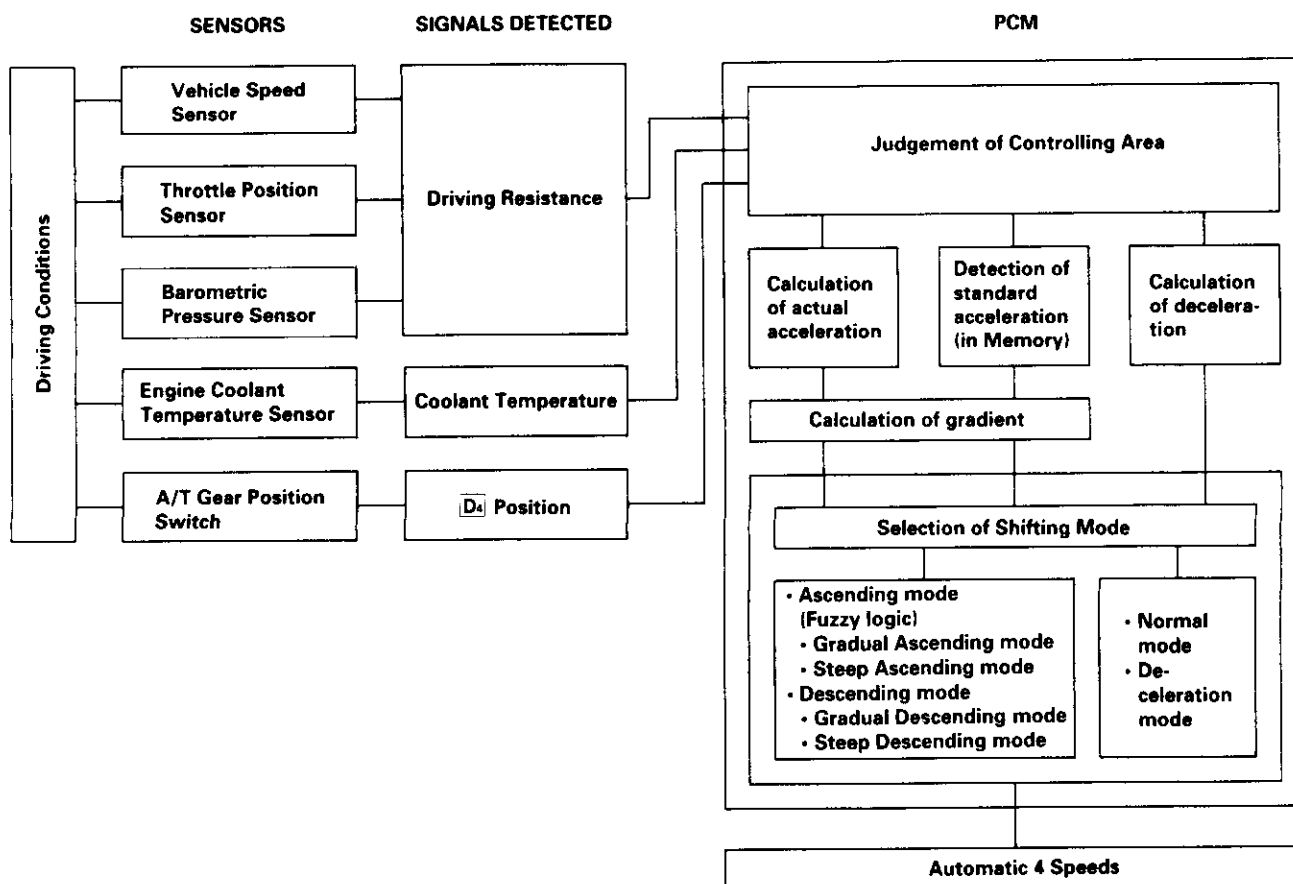

(cont'd)

Description

Electronic Control System (cont'd)

• Ascending Control


When the PCM determines that the vehicle is climbing a hill in D_4 position, the system extends the engagement area of 2nd gear and 3rd gear to prevent the transmission from frequently shifting between 2nd and 3rd gears, and between 3rd and 4th gears, so the vehicle can run smooth and have more power when needed. There are two ascending modes with different 3rd gear driving areas according to the magnitude of a gradient stored in the PCM.

NOTE:

- The PCM memory contains shift schedules between 2nd and 3rd gears, and between 3rd and 4th gears that enable the PCM's fuzzy logic to automatically select the most suitable gear according to the magnitude of a gradient.
- Fuzzy logic is a form of artificial intelligence that lets computers respond to changing conditions much like a human mind would.

• Descending Control

When the PCM determines that the vehicle is going down a hill in D_4 position, the shift-up speed from 3rd to 4th gear when the throttle is closed becomes faster than the set speed for flat road driving to widen the 3rd gear driving area. This, in combination with engine braking from the deceleration lock-up, achieves smooth driving when the vehicle is descending. There are two descending modes with different downshift (4 - 3) schedules according to the magnitude of a gradient stored in the PCM. When the vehicle is in 4th gear, and you are decelerating on a gradual hill, or when you are applying the brakes on a steep hill, the transmission will downshift to 3rd gear. When you accelerate, the transmission will then return to 4th gear.

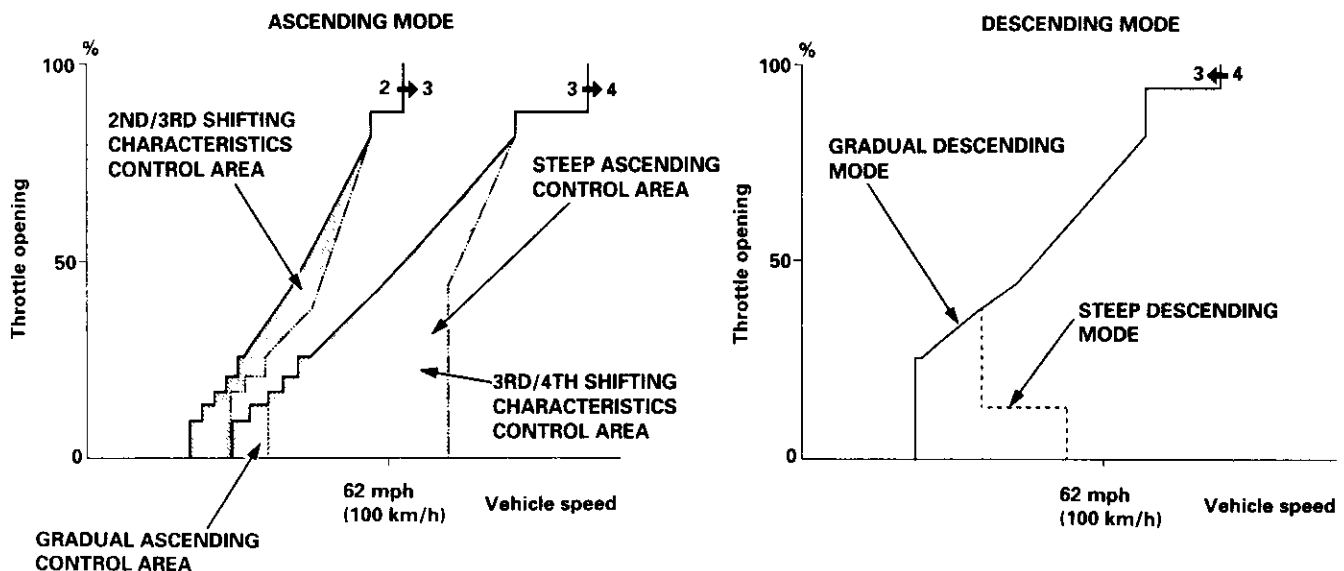


• Deceleration Control


When the vehicle goes around a corner, and needs to first decelerate and then accelerate, the PCM sets the data for deceleration control to reduce the number of times the transmission shifts. When the vehicle is decelerating from speeds above 26 mph (41 km/h), the PCM shifts the transmission from 4th to 2nd earlier than normal to cope with upcoming acceleration.



Circuit Diagram and Terminal Locations

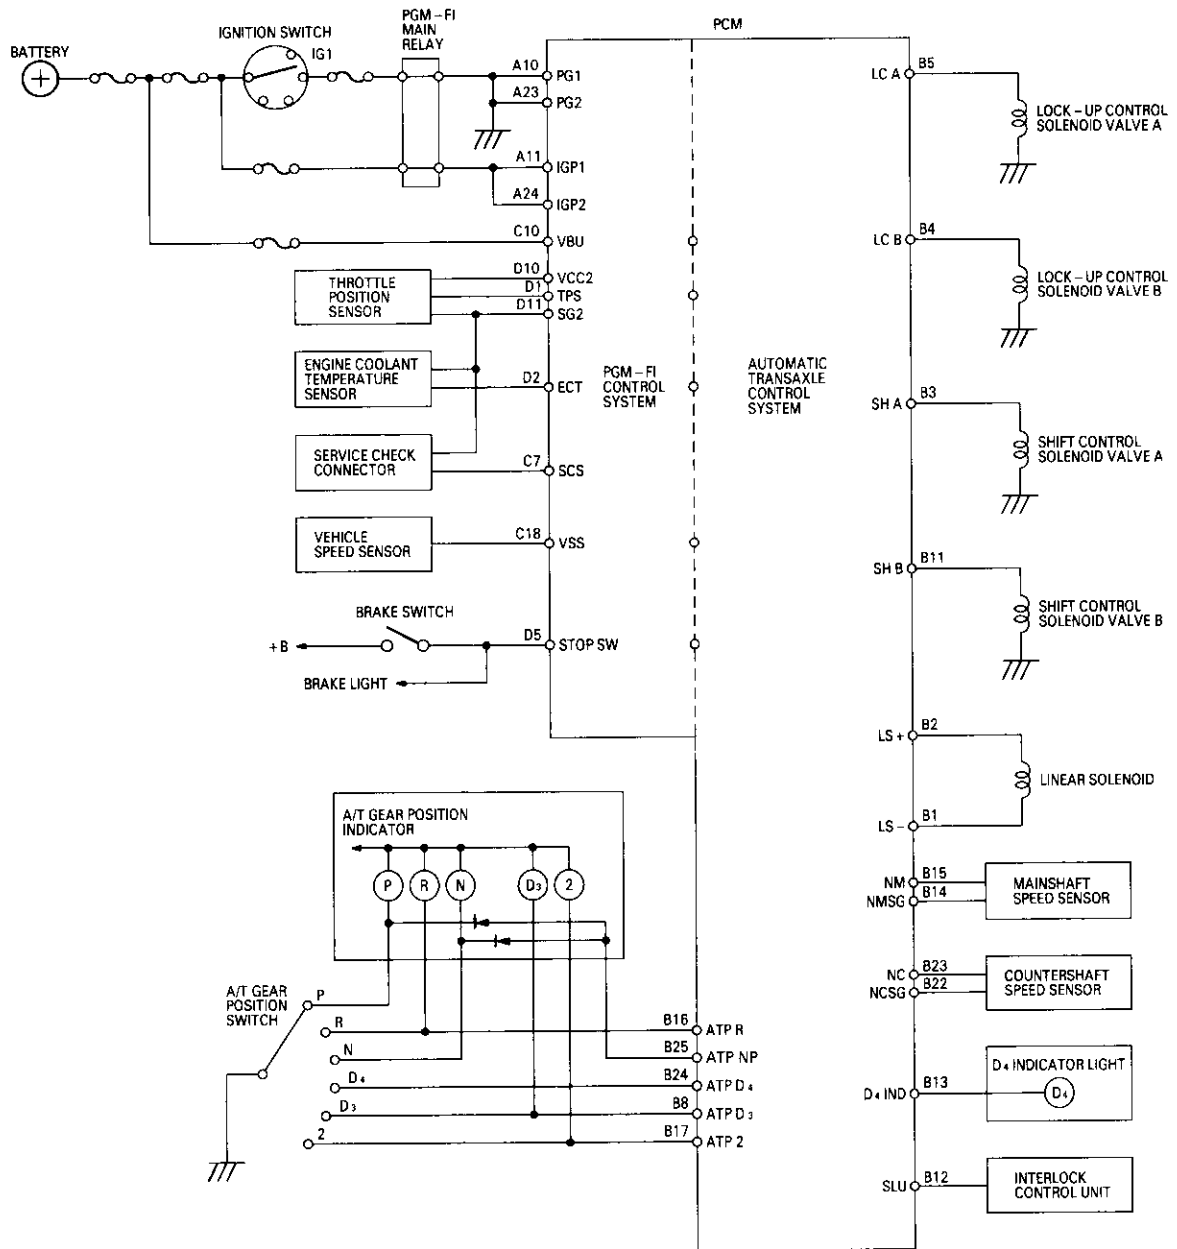

PCM Terminal Locations



A (32P) Connector

B (25P) Connector


C (31P) Connector

D (16P) Connector

Description

Hydraulic Control


The hydraulic control system is controlled by the ATF pump, valves, accumulators, and electronically controlled solenoids. The ATF pump is driven by splines on the end of the torque converter which is attached to the engine. Fluid from the ATF pump flows through the regulator valve to maintain specified pressure through the main valve body to the manual valve, directing pressure to each of the clutches. The valve body includes the main valve body, the regulator valve body, the lock-up valve body, the secondary valve body, the servo body, the linear solenoid, the shift control solenoid valve A/B assembly, and the lock-up control solenoid valve A/B assembly. The shift control solenoid valve A/B assembly and the linear solenoid are bolted on the outside of the torque converter housing. The lock-up control solenoid valve A/B assembly is bolted on the outside of the torque converter housing.

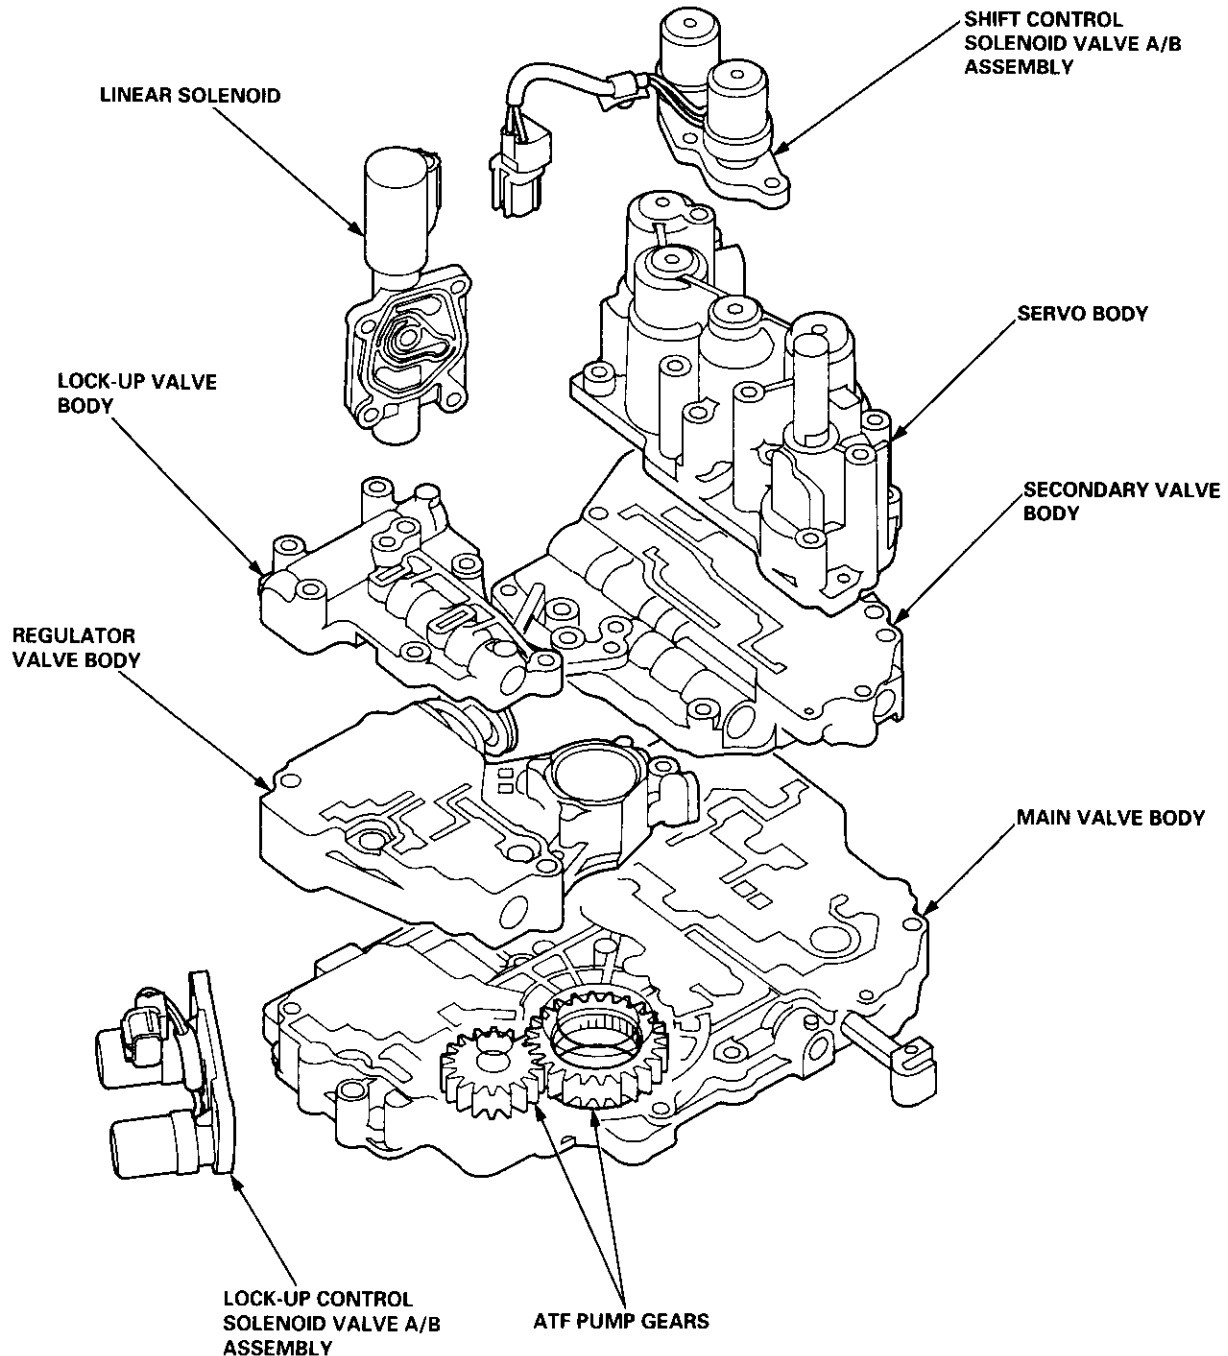




Main Valve Body

The main valve body houses the manual valve, the 1-2 shift valve, the 2nd orifice control valve, the CPB valve, the modulator valve, the servo control valve, and the relief valve. The primary functions of the main valve body are to switch fluid pressure on and off and to control the hydraulic pressure going to the hydraulic control system.

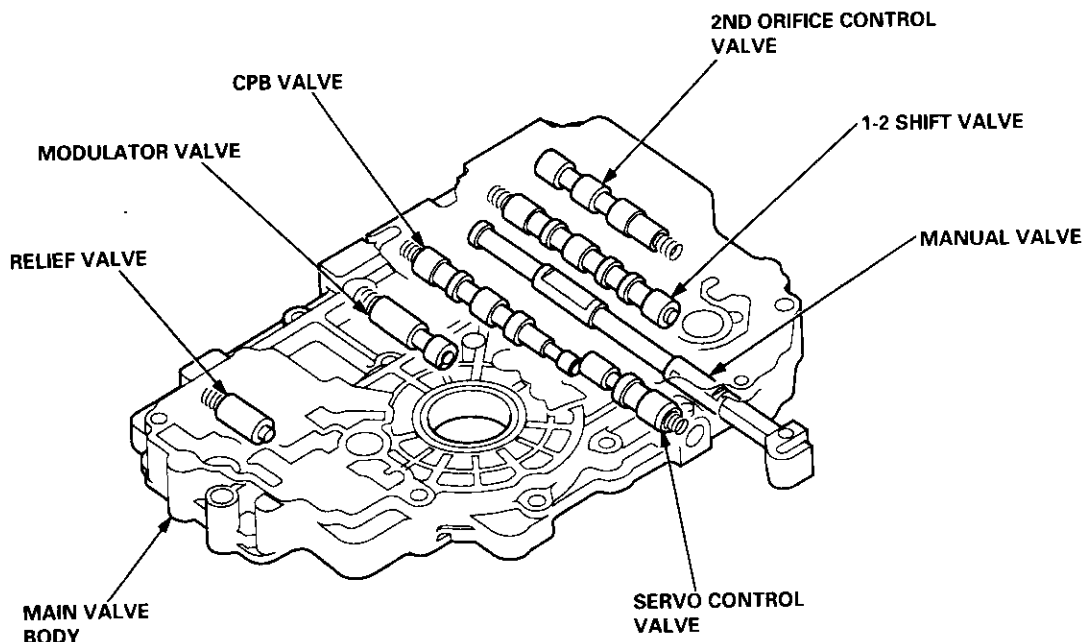

Secondary Valve Body

The secondary valve body is located on the main valve body. The secondary valve body houses the 2-3 shift valve, the 3-4 shift valve, the 3-4 orifice control valve, the 4th exhaust valve and CPC valve.

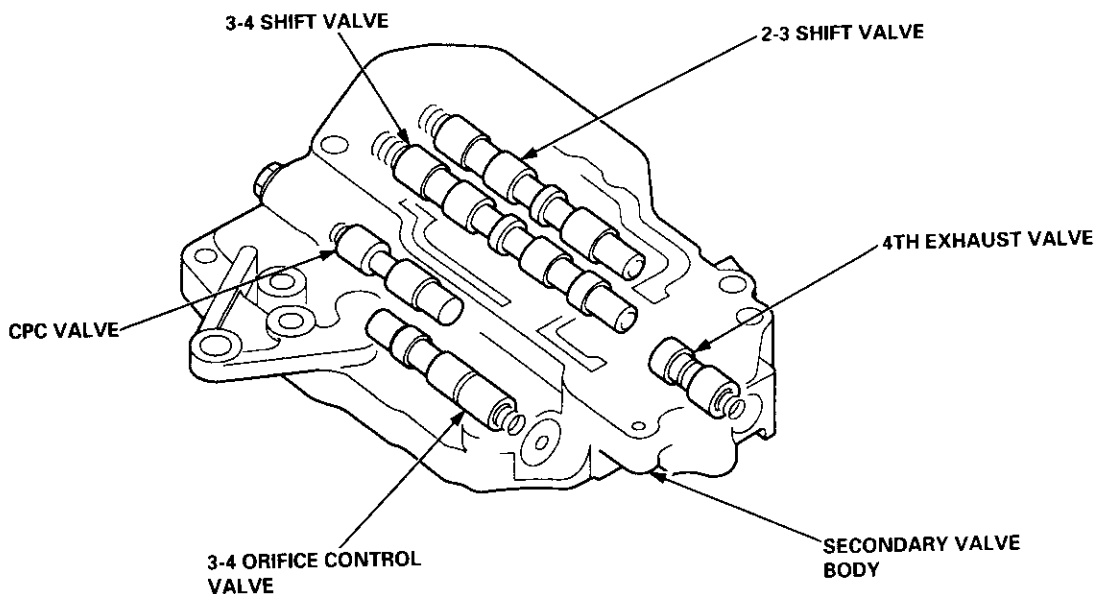


(cont'd)

Description

Hydraulic Control (cont'd)


Regulator Valve Body

The regulator valve body is located on the main valve body. The regulator valve body consists of the regulator valve, the torque converter check valve, the cooler relief valve, and the lock-up control valve.

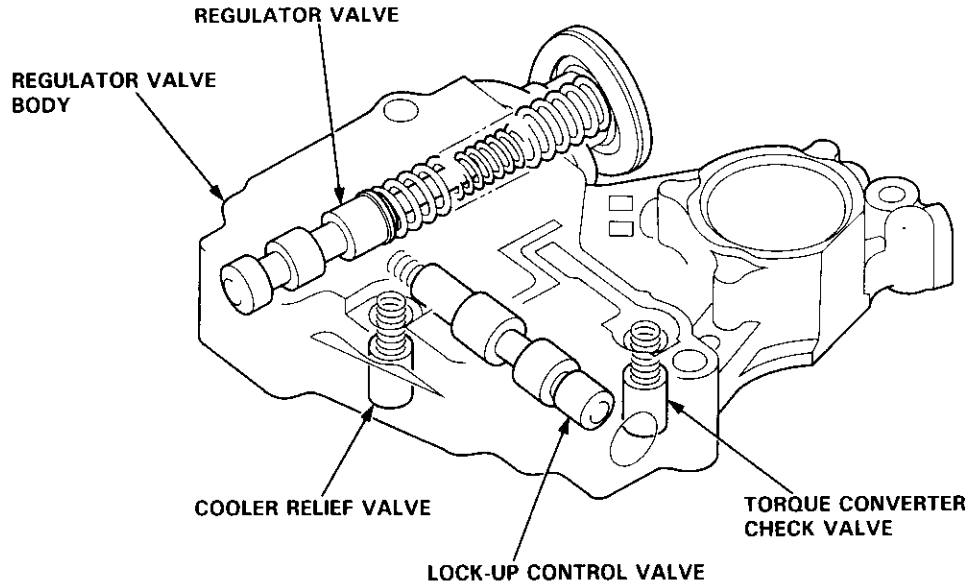

Lock-up Valve Body

The lock-up valve body with the lock-up shift valve and the lock-up timing valve is located on the regulator valve body.

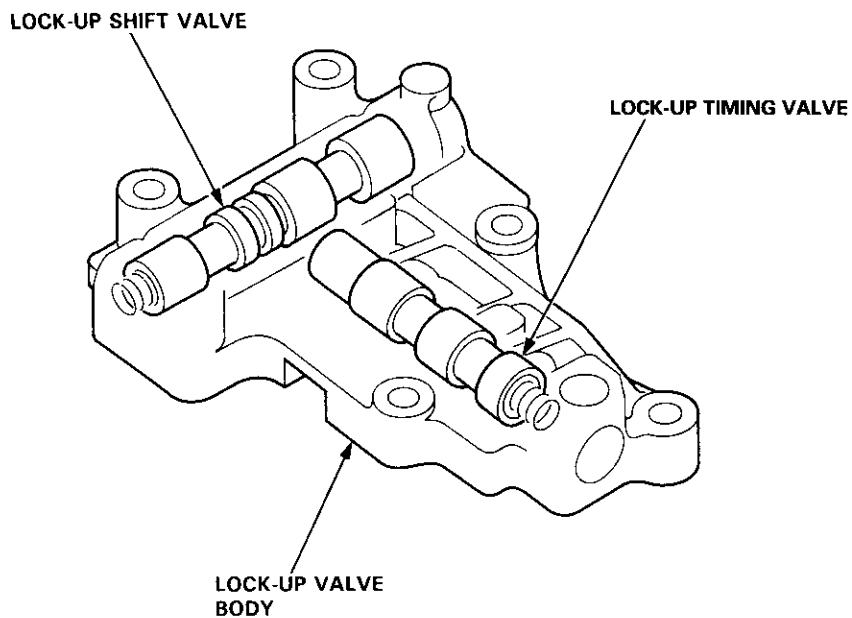




Regulator Valve


The regulator valve maintains a constant hydraulic pressure from the ATF pump to the hydraulic control system, while also furnishing fluid to the lubricating system and torque converter. The fluid from the ATF pump flows through B and B'. The regulator valve has a valve orifice. The fluid entering from B flows through the orifice to the A cavity. This pressure of the A cavity pushes the regulator valve to the right side, and this movement of the regulator valve uncovers the fluid port to the torque converter and the relief valve. The fluid flows out to the torque converter, and the relief valve and regulator valve moves to the left side. According to the level of the hydraulic pressure through B, the position of the regulator valve changes and the amount of the fluid from B' through D and C also changes. This operation is continued, maintaining the line pressure.

NOTE: When used, "left" or "right" indicates direction on the illustration below.

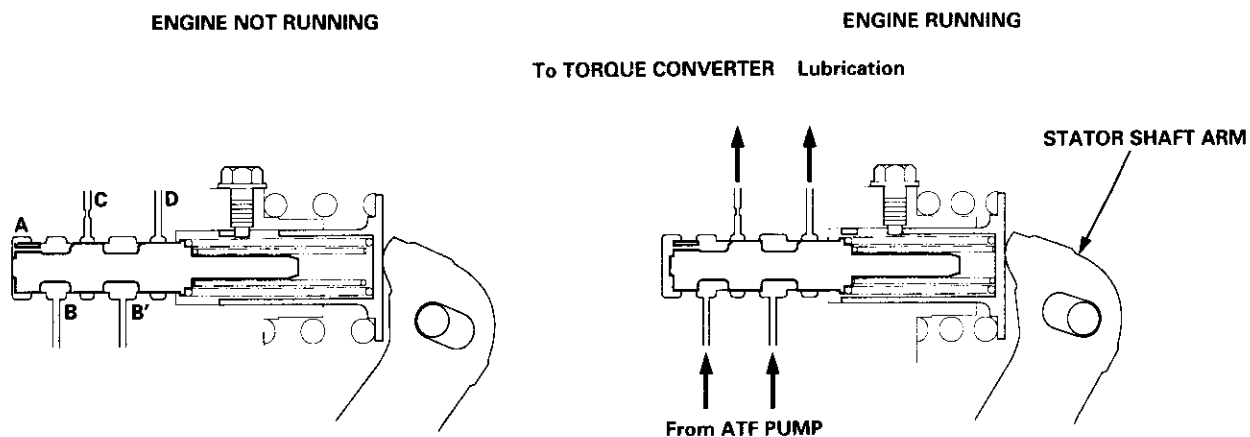

Stator Reaction Hydraulic Pressure Control

Hydraulic pressure increases according to torque, are performed by the regulator valve using the stator torque reaction. The stator shaft is splined with the stator in the torque converter, and its arm end contacts the regulator spring cap. When the vehicle is accelerating or climbing (Torque Converter Range), the stator torque reaction acts on the stator shaft, and the stator arm pushes the regulator spring cap in the direction of the arrow in proportion to the reaction. The stator reaction spring compresses, and the regulator valve moves to increase the line pressure which is regulated by the regulator valve. The line pressure reaches its maximum when the stator torque reaction reaches its maximum.

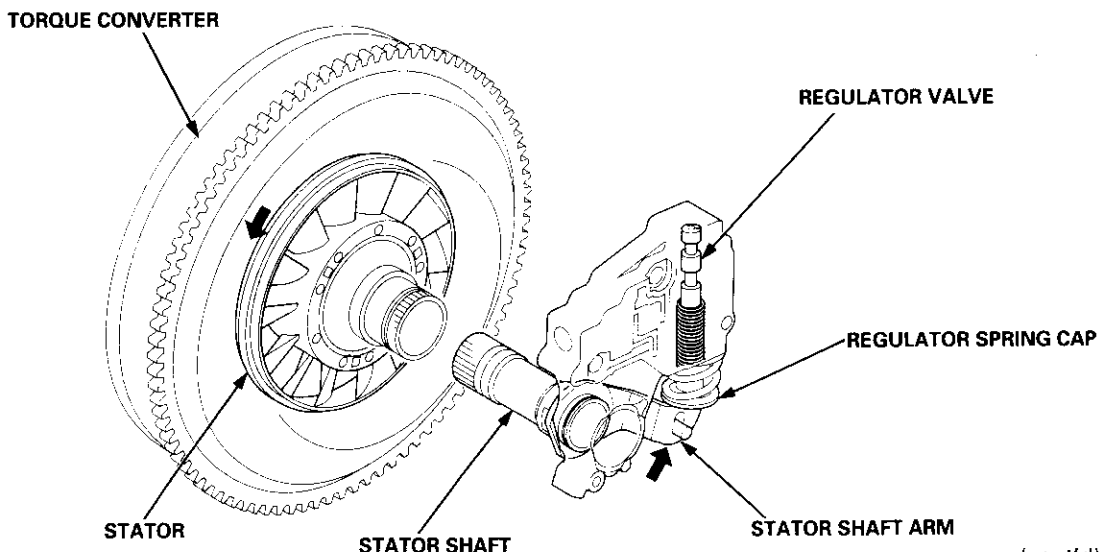


(cont'd)

Description

Hydraulic Control (cont'd)

Servo Body


The servo body is located on the secondary valve body. The servo body contains the servo valve which is integrated with the reverse shift fork, and the accumulators.

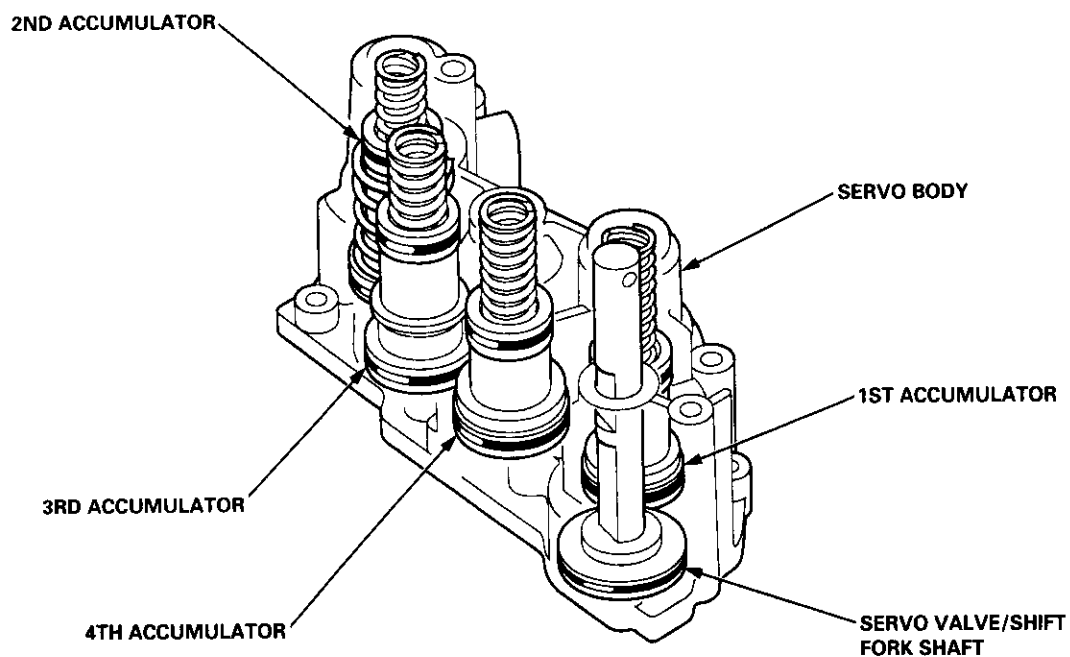



Hydraulic Flow

General Chart of Hydraulic Pressure

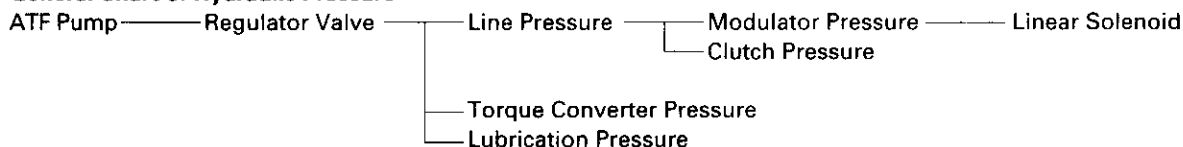

Distribution of Hydraulic Pressure

- Regulator Valve — Torque Converter Pressure
 — Lubrication Pressure
 — To regulate Line Pressure
- Manual Valve — To select Line Pressure — Clutch Pressure
- Modulator Valve — Modulator Pressure — Shift Control Solenoid Valves
 — Lock-up Control Solenoid Valves
 — Linear Solenoid
- 1-2 Shift Valve — Clutch Pressure
- 2-3 Shift Valve — Clutch Pressure
- 3-4 Shift Valve — Clutch Pressure

NO.	DESCRIPTION OF PRESSURE	NO.	DESCRIPTION OF PRESSURE	NO.	DESCRIPTION OF PRESSURE
1	LINE	6B	MODULATE (SHIFT CONTROL SOLENOID VALVE B)	41	4TH CLUTCH
1'	LINE	6C	MODULATE (LOCK-UP CONTROL SOLENOID VALVE A)	56	LINEAR SOLENOID
1''	LINE	6D	MODULATE (LOCK-UP CONTROL SOLENOID VALVE B)	90	TORQUE CONVERTER
2	LINE	6D'	MODULATE (LOCK-UP CONTROL SOLENOID VALVE B)	91	TORQUE CONVERTER
3	LINE	7	LINE	92	TORQUE CONVERTER
3'	LINE	8	LINE/CPC	93	ATF COOLER
3''	LINE	9	LINE	94	TORQUE CONVERTER
4	LINE	10	1ST CLUTCH	95	LUBRICATION
4'	LINE	20	2ND CLUTCH	96	TORQUE CONVERTER
4''	LINE	20A	2ND ACCUMULATOR	97	TORQUE CONVERTER
5	CPC	25	LINE	99	SUCTION
6	MODULATE	30	3RD CLUTCH	X	DRAIN
6A	MODULATE (SHIFT CONTROL SOLENOID VALVE A)	40	4TH CLUTCH		

(cont'd)


Description

Hydraulic Flow (cont'd)

N Position

As the engine turns, the ATF pump also starts to operate. Automatic transmission fluid (ATF) is drawn from (99) and discharged into (1). Then, ATF flowing from the ATF pump becomes the line pressure (1). The line pressure (1) is regulated by the regulator valve. The torque converter inlet pressure (92) enters (94) of the torque converter through the lock-up shift valve and discharges into (90). The torque converter check valve prevents the torque converter pressure from rising. Under this condition, the hydraulic pressure is not applied to the clutches.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

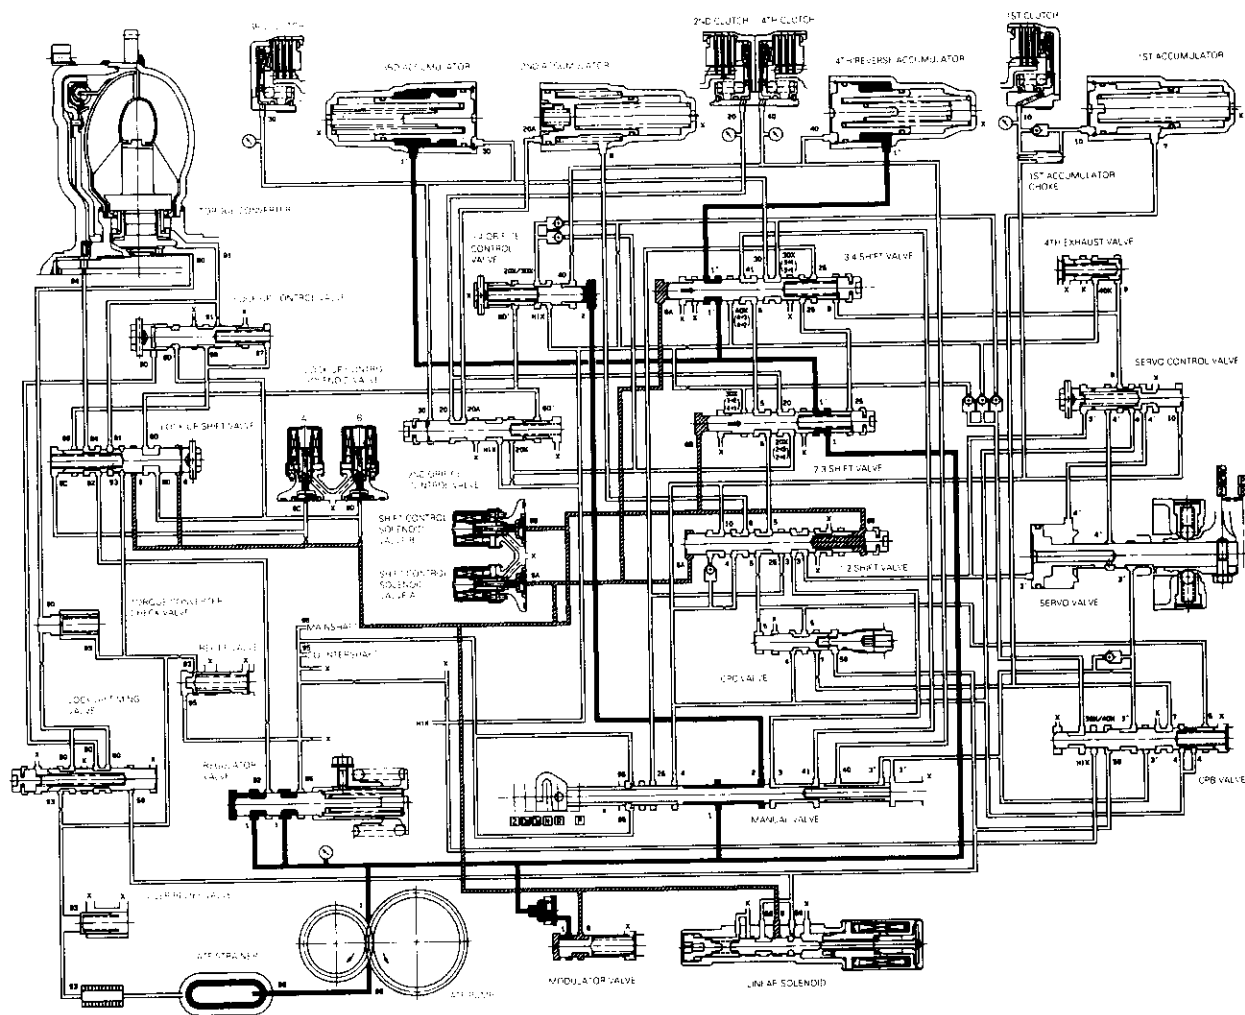




2 Position

The line pressure (1) flows to the manual valve and the modulator valve. The line pressure (1) changes the line pressure (4) and (25) at the manual valve, and changes to the modulator pressure at the modulator valve. But the modulator pressure (6) does not flow to each shift valve because shift control solenoid valves A and B are turned ON by the PCM. The line pressure (4) passes through the CPB valve and the CPC valve, and changes to the line pressure (5), then flows to the 1-2 shift valve. The line pressure (5) from the 1-2 shift valve changes to the 2nd clutch pressure (20) at the 2-3 shift valve. The 2nd clutch pressure (20) is applied to the 2nd clutch, and the 2nd clutch is engaged. The line pressure (4) passes through the 1-2 shift valve and the orifice, and changes the 1st clutch pressure. The 1st clutch pressure (10) also flows to the 1st clutch. However, no power is transmitted because of the one-way clutch.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

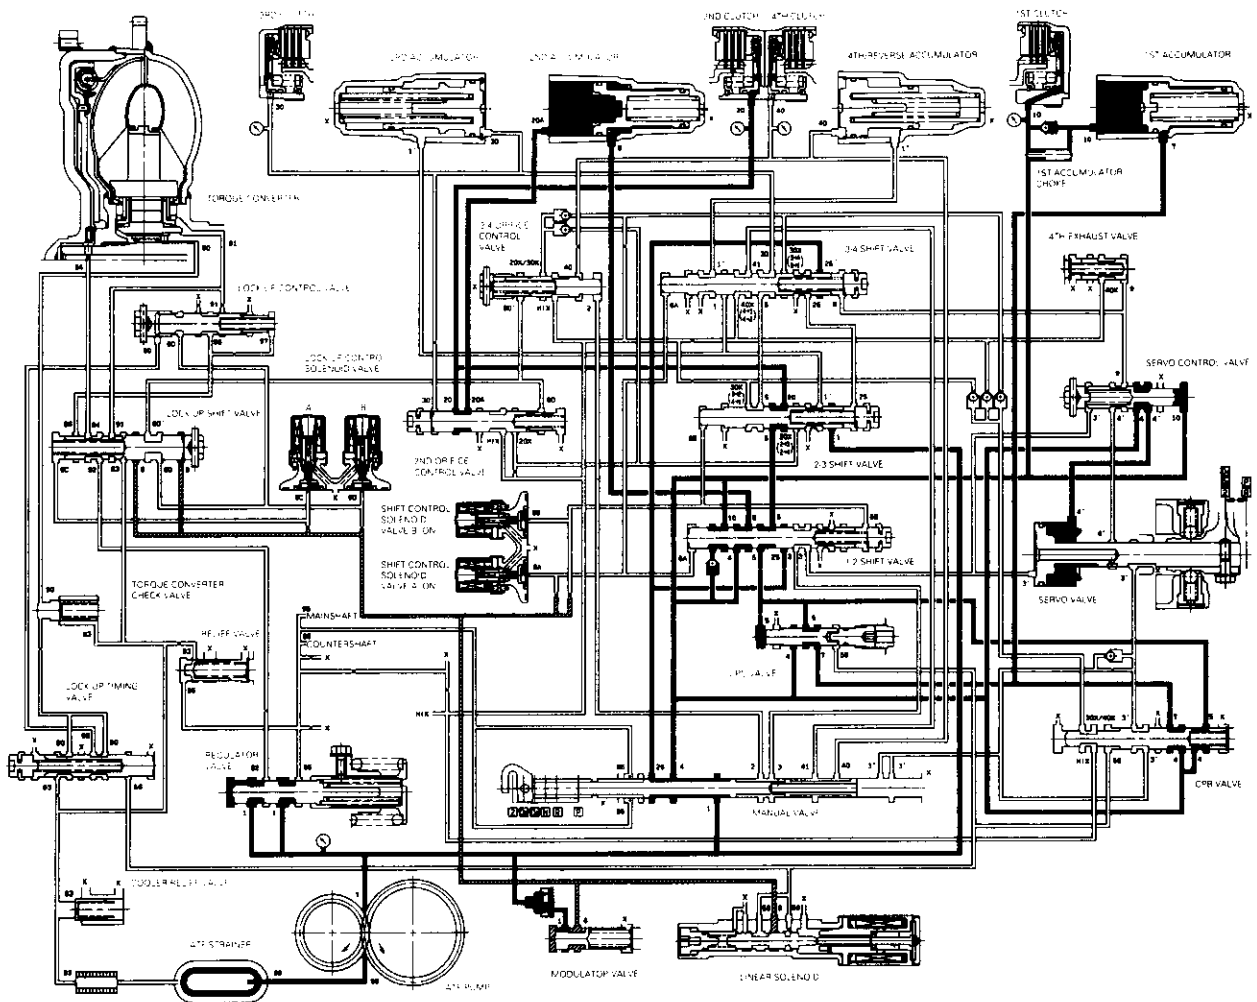

(cont'd)



2. 2nd Gear


As the speed of the vehicle reaches the prescribed value, shift control solenoid valve A is turned ON by means of the PCM. The modulator pressure (6A) in the left end of the 1-2 shift valve is released by turning shift control solenoid valve A ON. The 1-2 shift valve is moved to the left side and uncovers the port to allow line pressure (5) to the 2-3 shift valve. The line pressure (5) changes to the 2nd clutch pressure (20) at the 2-3 shift valve. The 2nd clutch pressure (20) is applied to the 2nd clutch, and the 2nd clutch is engaged.

Fluid flows by way of:

- Line Pressure (4) → CPB Valve - Line Pressure (5) → 1-2 Shift Valve - Line Pressure (5) → 2-3 Shift Valve
- 2nd Clutch Pressure (20) → 2nd Clutch

The hydraulic pressure also flows to the 1st clutch. However, no power is transmitted because of the one-way clutch.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

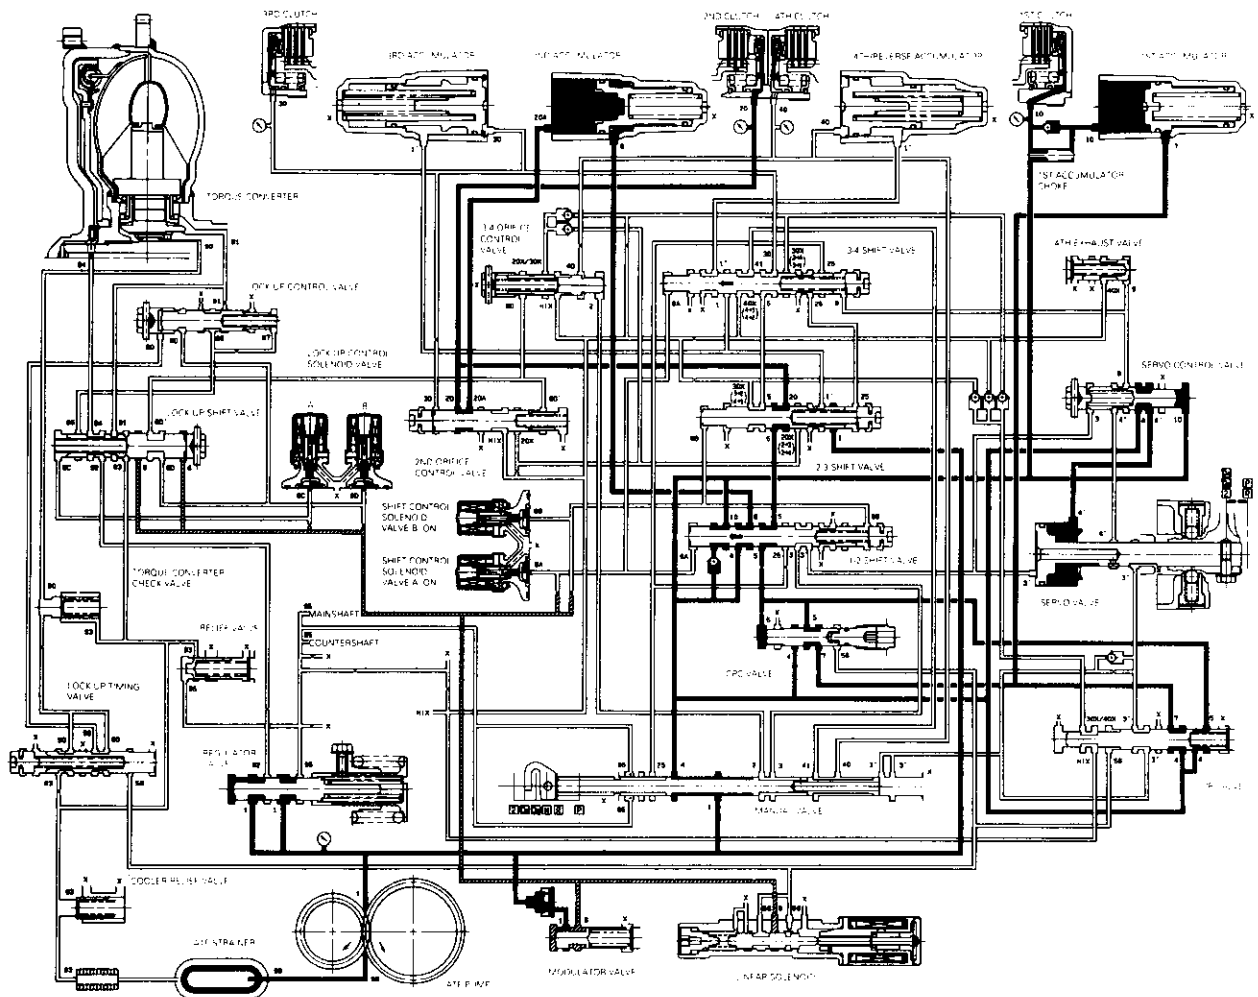

(cont'd)

Description

Hydraulic Flow (cont'd)

3. 3rd Gear


As the speed of the vehicle reaches the prescribed value, shift control solenoid valve B is turned OFF by means of the PCM. Shift control solenoid valve A remains ON. The modulator pressure (6) flows to the right end of the 1-2 shift valve and the left end of the 2-3 shift valve. The 2-3 shift valve is moved to the right side by the modulator pressure (6B). The 2-3 shift valve covers the port to stop line pressure (5) to the 2nd clutch and uncovers the 3-4 shift valve as the 2-3 shift valve is moved to the right side. The line pressure (5) becomes the 3rd clutch pressure (30) at the 3-4 shift valve. The 3rd clutch pressure (30) is applied to the 3rd clutch, and the 3rd clutch is engaged.

Fluid flows by way of:

- Line pressure (4) → CPB Valve – Line Pressure (5) → 1-2 Shift Valve – Line Pressure (5) → 2-3 Shift Valve
- Line Pressure (5) → 3-4 Shift Valve – 3rd Clutch Pressure (30) → 3rd Clutch

The hydraulic pressure also flows to the 1st clutch. However, no power is transmitted because of the one-way clutch as in 2nd gear.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

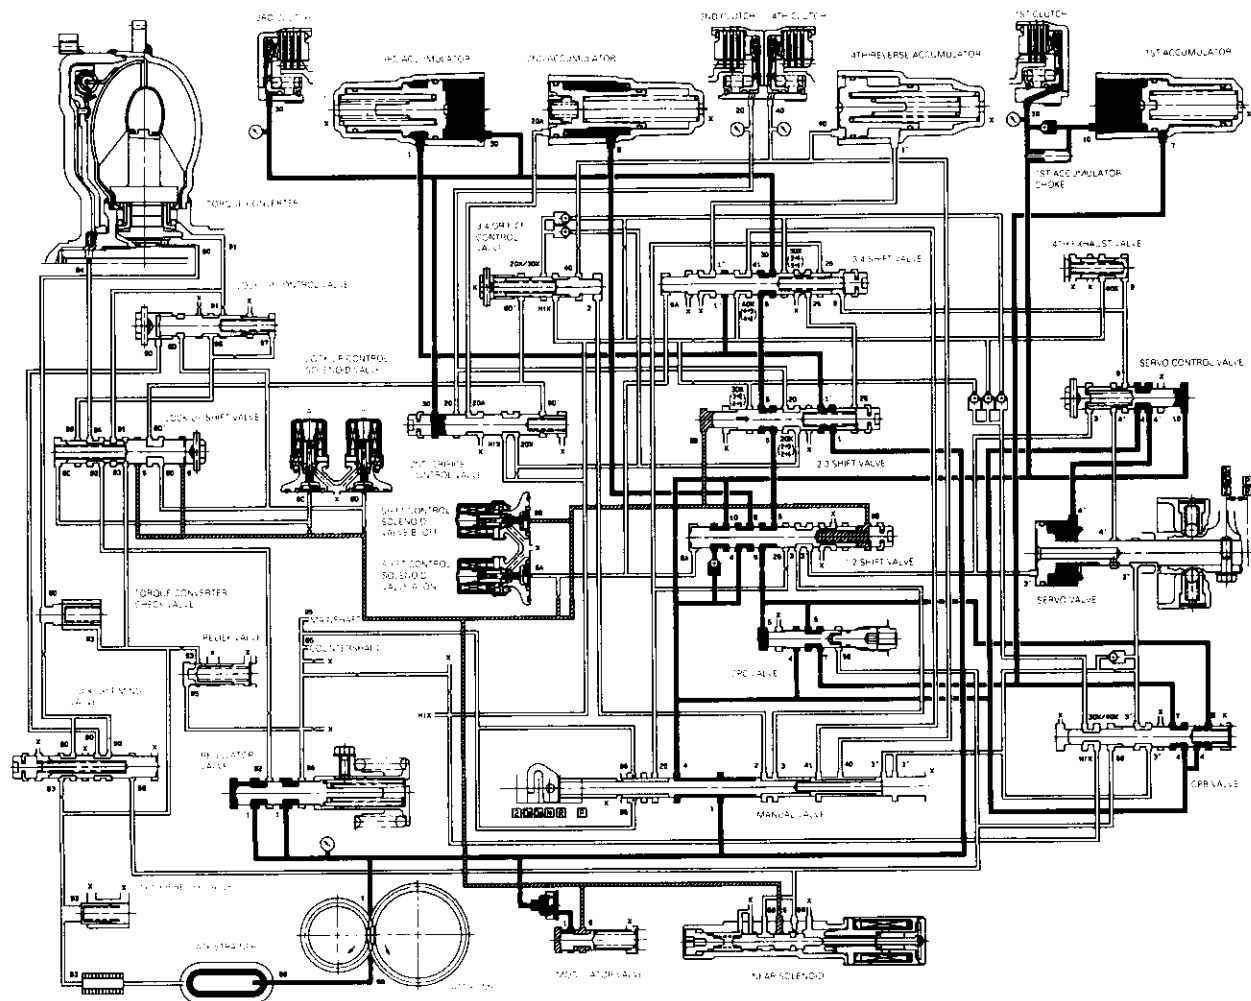



4. 4th Gear (D₄ Position)

As the speed of the vehicle reaches the prescribed value, shift control solenoid valve A is turned OFF by means of the PCM. Shift control solenoid valve B remains OFF. The modulator pressure (6) flows to the left end of the 1-2 shift valve and the left end of the 3-4 shift valve. The modulator pressure (6A) in the left end of the 1-2 shift valve equals the modulator pressure (6B) in the right end of the 1-2 shift valve, the 1-2 shift valve remains at left side by the tension of the valve spring.


The 3-4 shift valve is moved to the right side by the modulator pressure (6A). The 3-4 shift valve covers the port to the 3rd clutch and uncovers the port to the 4th clutch as this valve is moved to the right side. The 4th clutch pressure (41) from the 3-4 shift valve becomes the 4th clutch pressure (40) at the manual valve. The 4th clutch pressure (40) is applied to the 4th clutch, and the 4th clutch is engaged.

Fluid flows by way of:

- Line pressure (4) → CPB Valve - Line Pressure (5) → 1-2 Shift Valve - Line Pressure (5) → 2-3 Shift Valve
- Line Pressure (5) → 3-4 Shift Valve - 4th Clutch Pressure (41) → Manual Valve - 4th Clutch Pressure (40) → 4th Clutch

The hydraulic pressure also flows to the 1st clutch. However, no power is transmitted because of the one-way clutch as in 2nd and 3rd gear.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

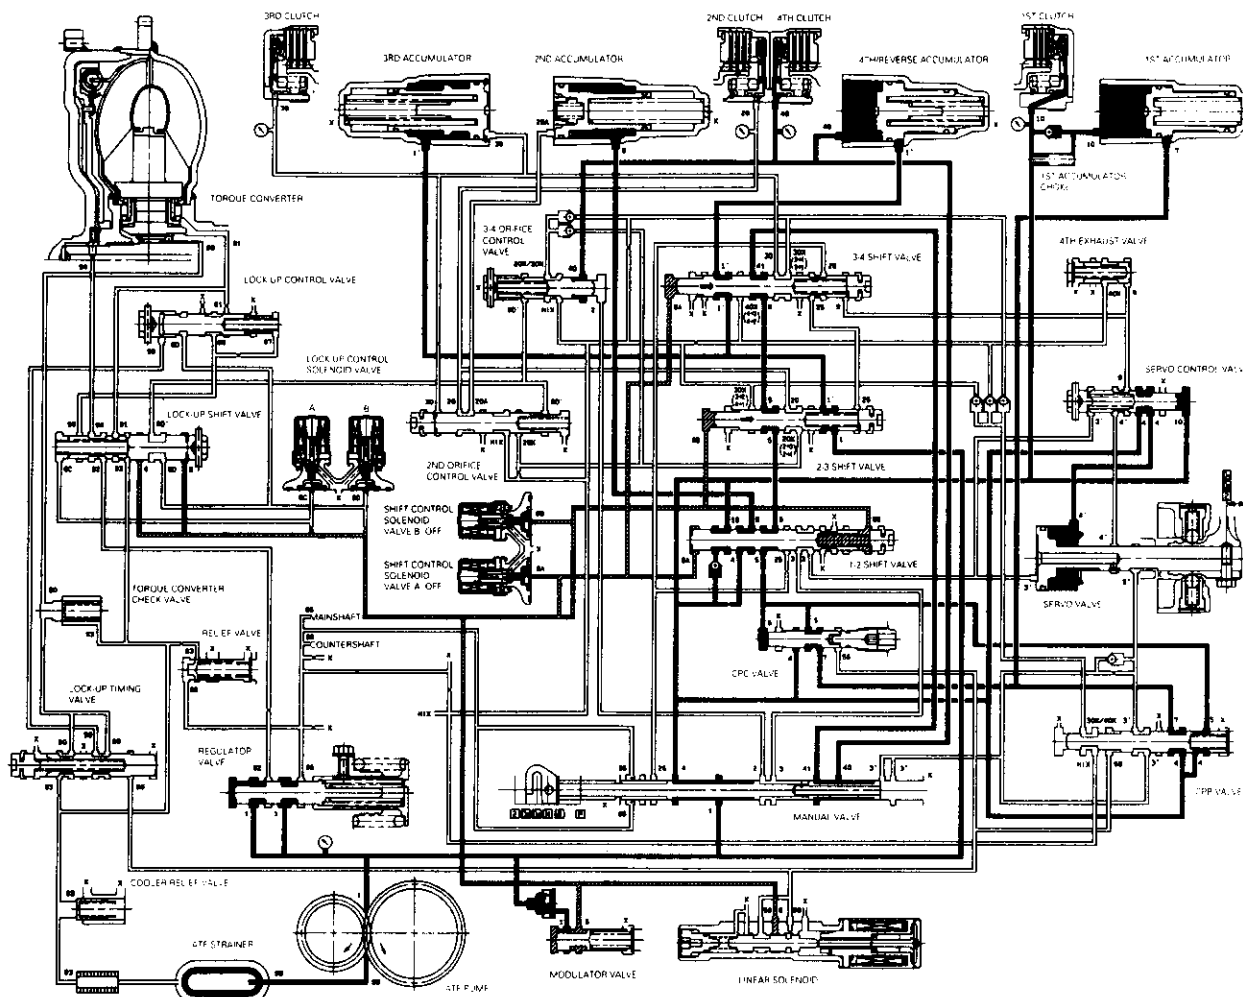

(cont'd)

Description

Hydraulic Flow (cont'd)


R Position

The flow of fluid through the torque converter circuit is the same as in **N** position. The line pressure (1) changes to the line pressure (3) and flows to the 1-2 shift valve. The line pressure (3) changes to the line pressure (3') at the 1-2 shift valve and flows to the servo valve. The servo valve is moved to the right side (Reverse range position) and uncovers the port to allow line pressure (3') to the manual valve. The line pressure (3') from the 1-2 shift valve flows through the servo valve to the manual valve and changes the 4th clutch pressure (40). The 4th clutch pressure (40) is applied to the 4th clutch, and the 4th clutch is engaged.

Reverse Inhibitor Control

When the **R** position is selected while the vehicle is moving forward at speeds over 6 mph (10 km/h), the PCM outputs the 1st speed signal to shift control solenoid valves A and B; shift control solenoid valve A is turned OFF, shift control solenoid valve B is turned ON. The 1-2 shift valve is moved to the right side and covers the port to stop line pressure (3') to the servo valve. The line pressure (3') is not applied to the servo valve, and the 4th clutch pressure (40) is not applied to the 4th clutch, as a result, power is not transmitted to the reverse direction.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

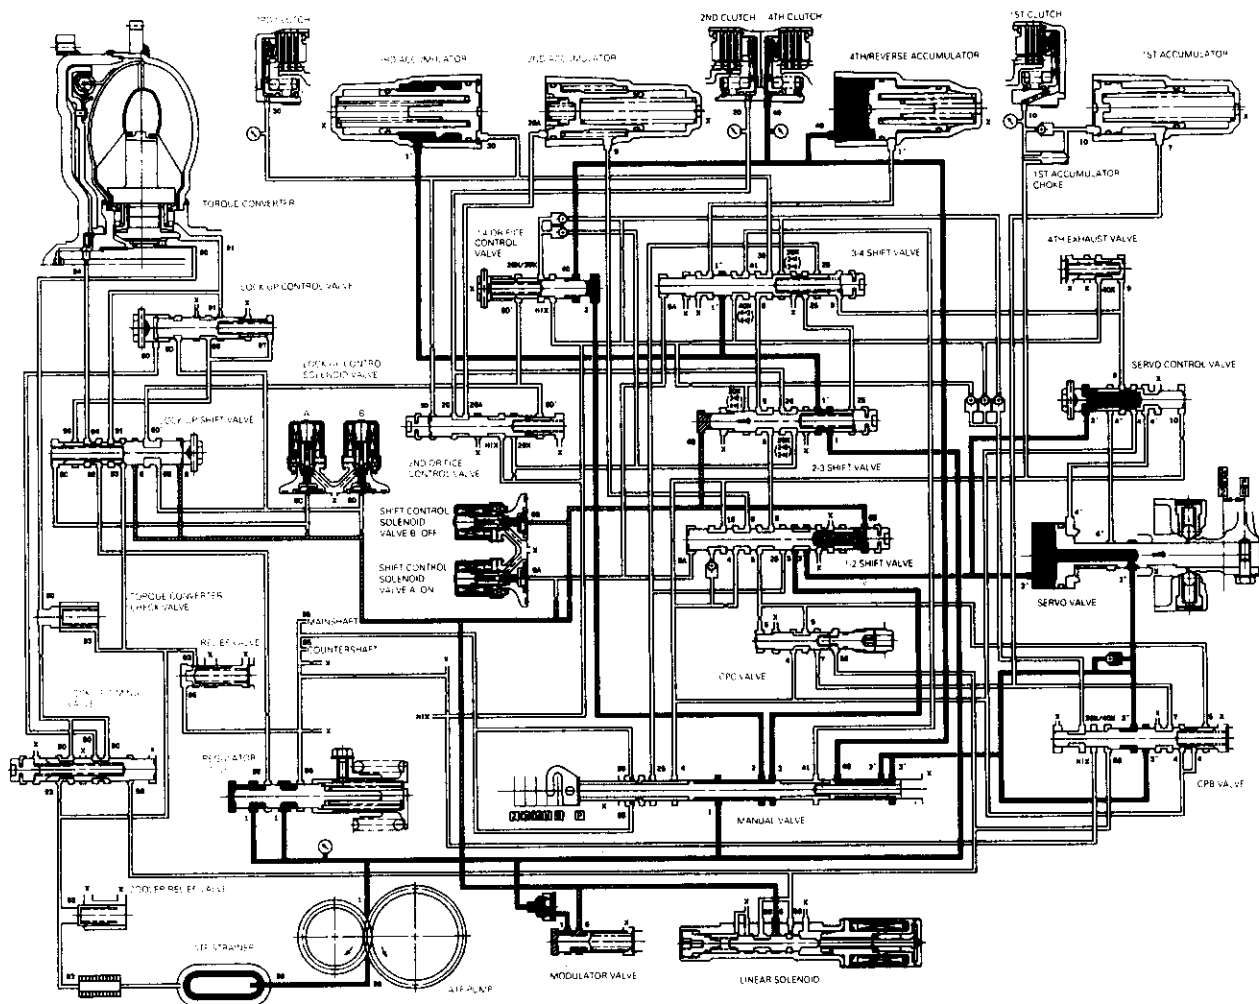




P Position

The flow of fluid through the torque converter circuit is the same as in **N** position. The line pressure (1) changes to the line pressure (3) and flows to the 1-2 shift valve. The line pressure (3) changes to the line pressure (3') at the 1-2 shift valve and flows to the servo valve. The servo valve is moved to the right side (Reverse range position) and uncovers the port to allow line pressure (3') to the manual valve as in **R** position. The line pressure (3') from the servo valve is intercepted by the manual valve. However, hydraulic pressure is not supplied to the clutches, and the power is not transmitted.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

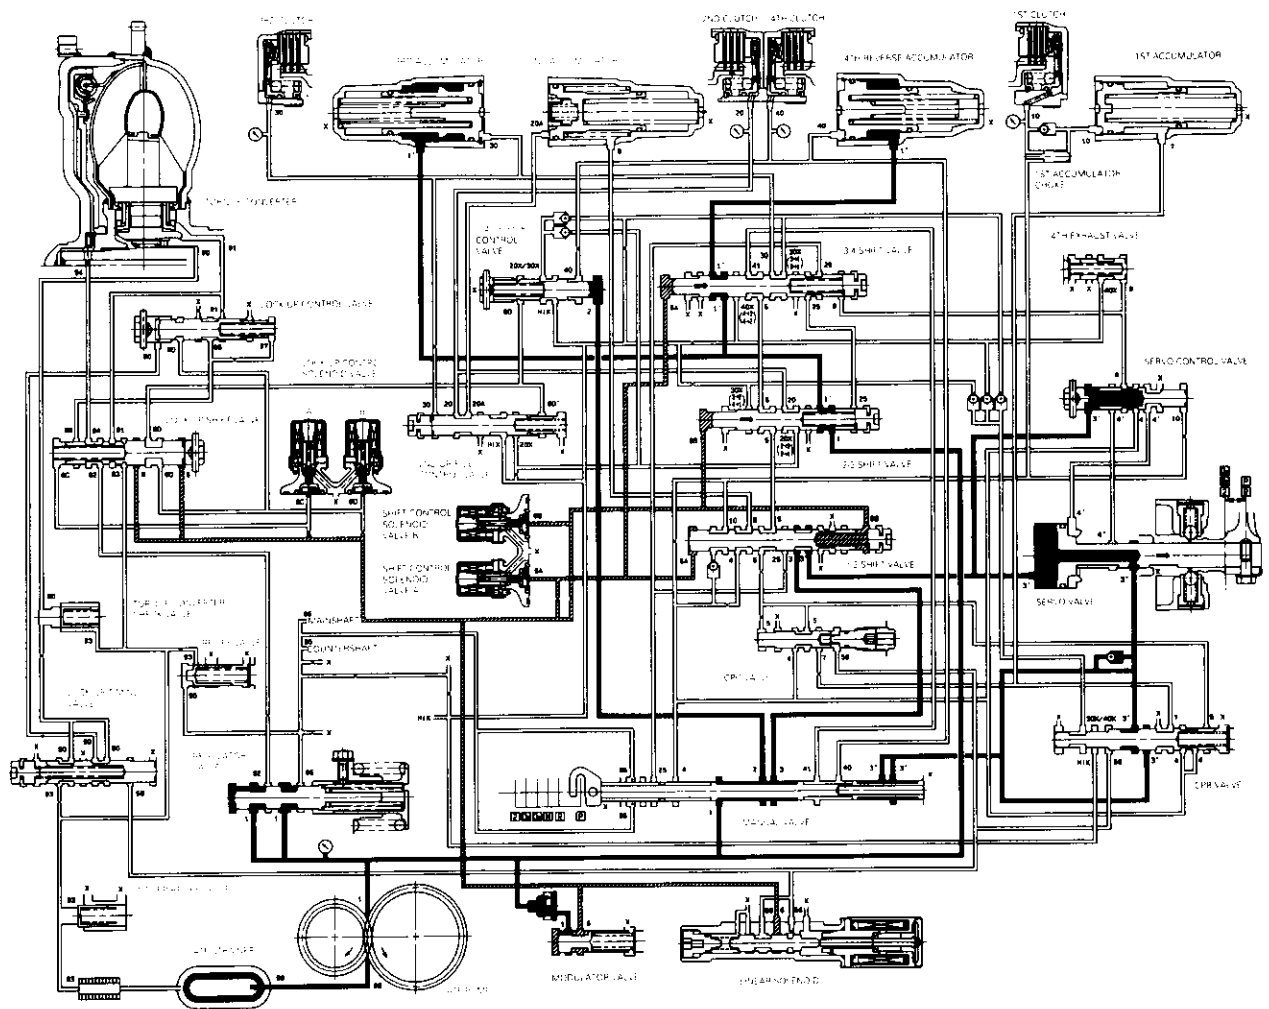

Description

Lock-up System

Lock-up Clutch


1. Operation (clutch on)

With the lock-up clutch on, the fluid in the chamber between the torque converter cover and the lock-up piston is drained off, and the converter fluid exerts pressure through the piston against the torque converter cover. As a result, the converter turbine is locked to the converter cover. The effect is to bypass the converter, thereby placing the vehicle in direct drive.

Power flow

The power flows by way of:

Engine
↓
Drive plate
↓
Torque converter cover
↓
Lock-up piston
↓
Damper spring
↓
Turbine
↓
Mainshaft

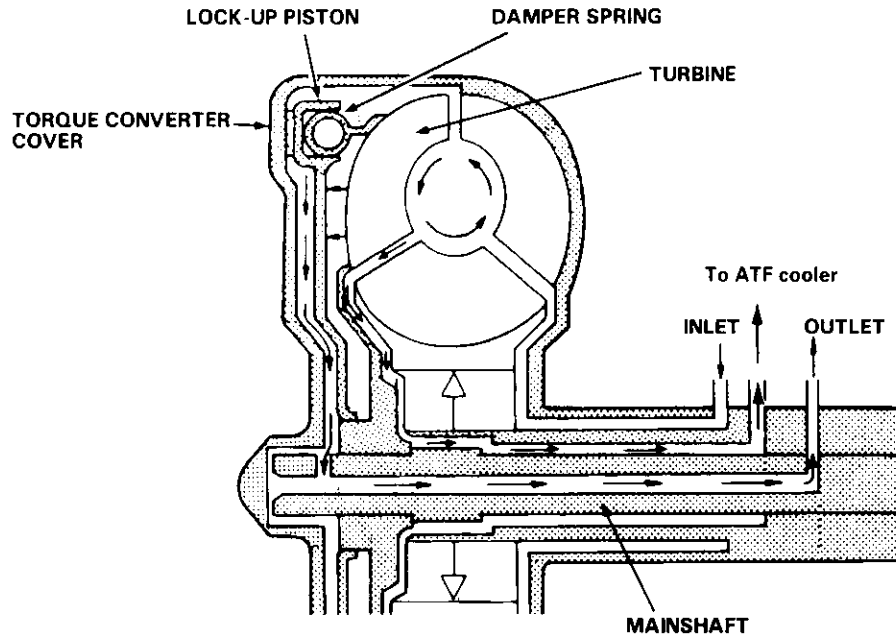


2. Operation (clutch off)

With the lock-up clutch off, the fluid flows in the reverse of "clutch on." As a result, the lock-up piston moves away from the converter cover, and the torque converter lock-up is released.

Power flow

Engine
↓
Drive plate
↓
Torque converter cover
↓
Pump
↓
Turbine
↓
Mainshaft

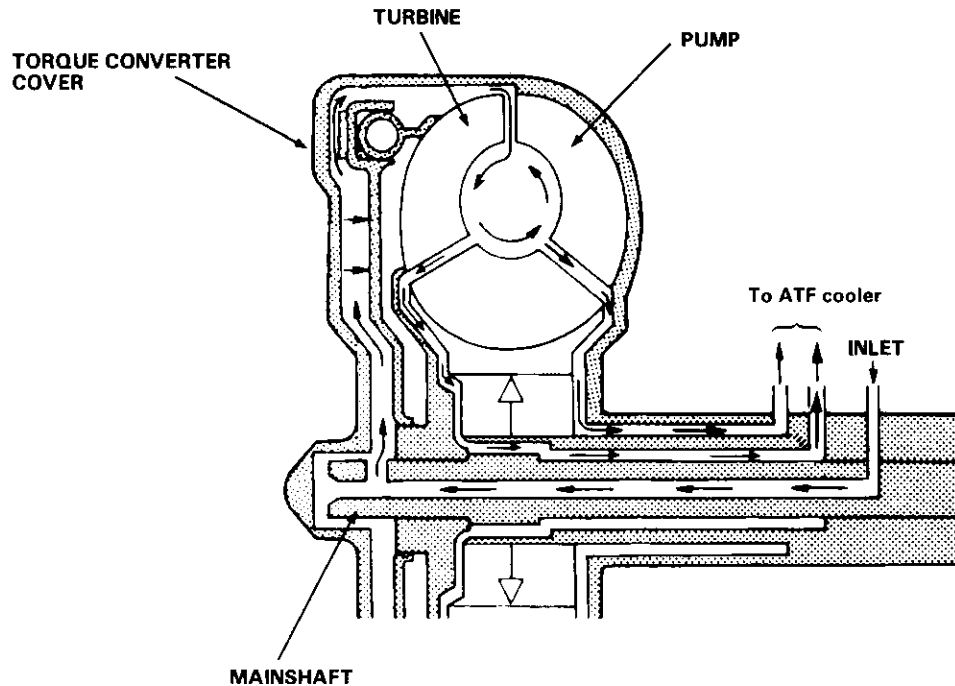




In $\overline{D_4}$ position, in 3rd and 4th, and $\overline{D_3}$ position in 3rd, pressurized fluid is drained from the back of the torque converter through a fluid passage, causing the lock-up piston to be held against the torque converter cover. As this takes place, the mainshaft rotates at the same speed as the engine crankshaft. Together with the hydraulic control, the PCM optimized the timing of the lock-up system. Under certain conditions, the lock-up clutch is applied during deceleration, in 3rd and 4th gear.

The lock-up system controls the range of lock-up according to lock-up control solenoid valves A and B, and the linear solenoid. When lock-up control solenoid valves A and B activate, modulator pressure changes. Lock-up control solenoid valves A and B and the linear solenoid are mounted on the outside of the torque converter housing, and are controlled by the PCM.

Lock-up Conditions/Lock-up Control Solenoid Valves/ Linear Solenoid Pressure

Lock-up Conditions	Lock-up Control Solenoid Valve		Linear Solenoid Pressure
	A	B	
Lock-up OFF	OFF	OFF	High
Lock-up, Half	ON	Duty operation OFF ↔ ON	Low
Lock-up, Full	ON	ON	High
Lock-up during deceleration	ON	Duty operation OFF ↔ ON	Low

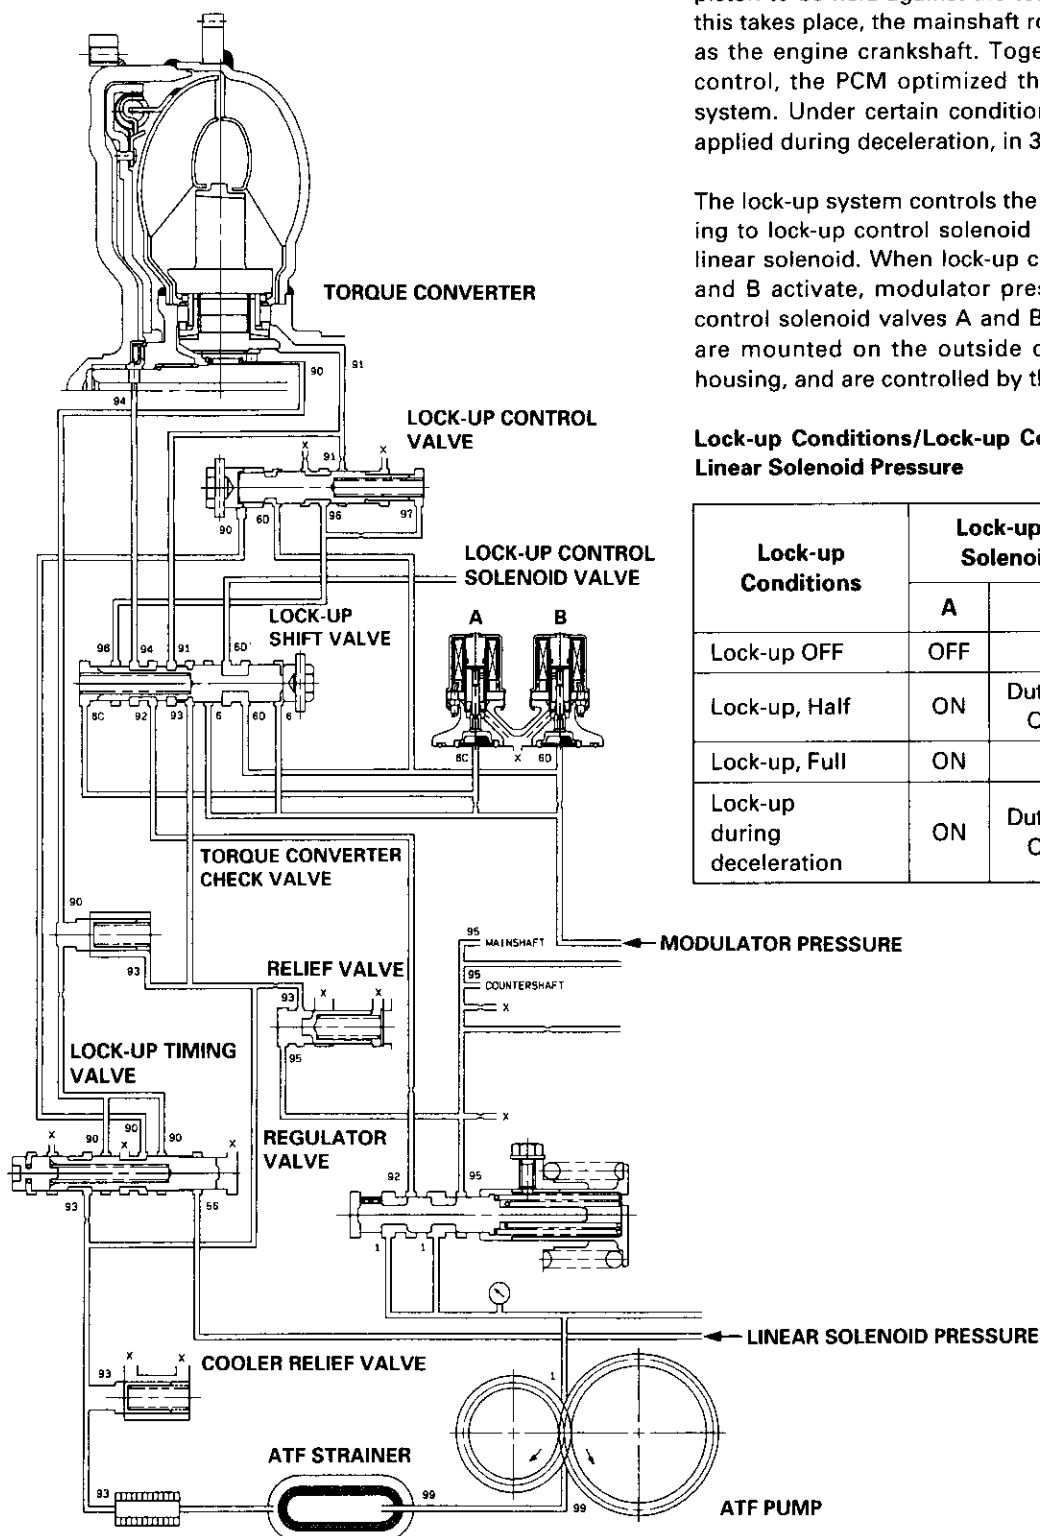

(cont'd)

Description


Lock-up System (cont'd)

No Lock-up

- Lock-up Control Solenoid Valve A: OFF
- Lock-up Control Solenoid Valve B: OFF
- Linear Solenoid Pressure: High

The pressurized fluid regulated by the modulator works on both ends of the lock-up shift valve. Under this condition, the pressures working on both ends of the lock-up shift valve are equal, the lock-up shift valve is moved to the right side by the tension of the valve spring alone. The fluid from the ATF pump will flow through the left side of the lock-up clutch to the torque converter; that is, the lock-up clutch is in OFF condition.

NOTE: When used, "left" and "right" indicates direction on the hydraulic circuit.

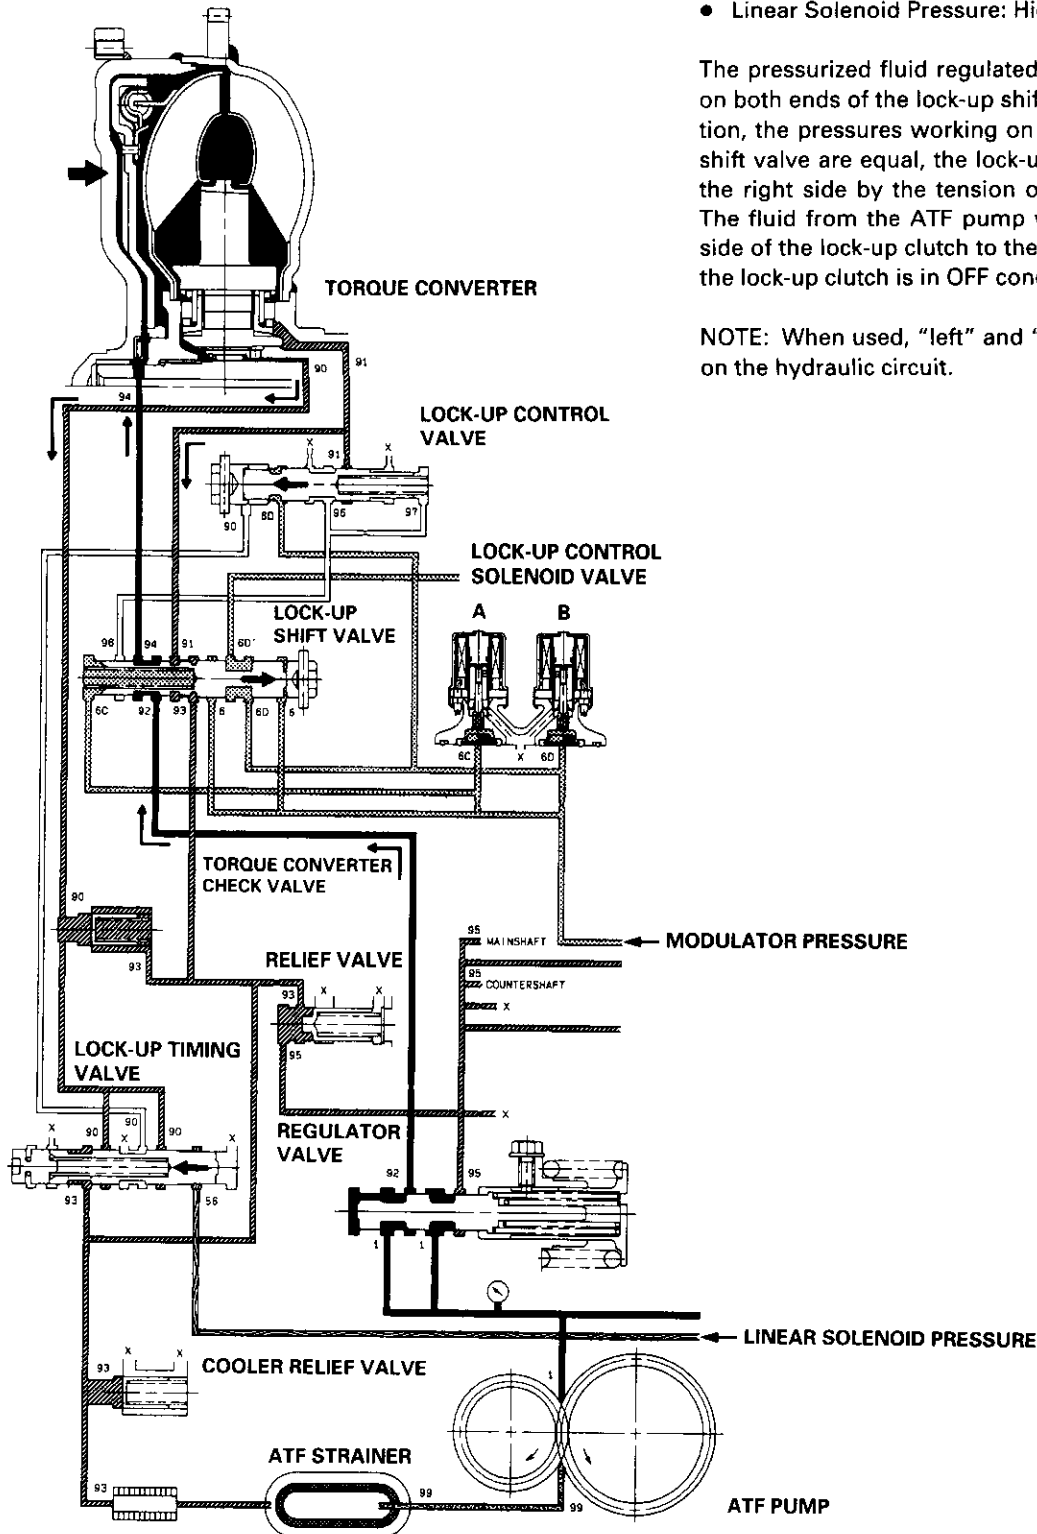



Half Lock-up

- Lock-up Control Solenoid Valve A: ON
- Lock-up Control Solenoid Valve B: Duty Operation
OFF ↔ ON
- Linear Solenoid Pressure: Low


The PCM switches the solenoid valve A on to release the modulator pressure in the left cavity of the lock-up shift valve. The modulator pressure in the right cavity of the lock-up shift valve overcomes the spring force; thus the lock-up shift valve is moved to the left side. The line pressure is then separated into the two passages to the torque converter:

Torque Converter Inner Pressure: enters into right side to engage lock-up clutch

Torque Converter Back Pressure: enters into left side to disengage lock-up clutch

The back pressure (F2) is regulated by the lock-up control valve, whereas the position of the lock-up timing valve is determined by the linear solenoid pressure and tension of the valve spring. Also the position of the lock-up control valve is determined by the back pressure of the lock-up control valve, torque converter pressure regulated by the torque converter check valve, and modulator pressure determined by the lock-up control solenoid valve B. The PCM switches the lock-up control solenoid valve B on and off rapidly (duty operation) under certain conditions to regulate the back pressure (F2) to lock the torque converter properly.

NOTE: When used, "left" and "right" indicates direction on the hydraulic circuit.

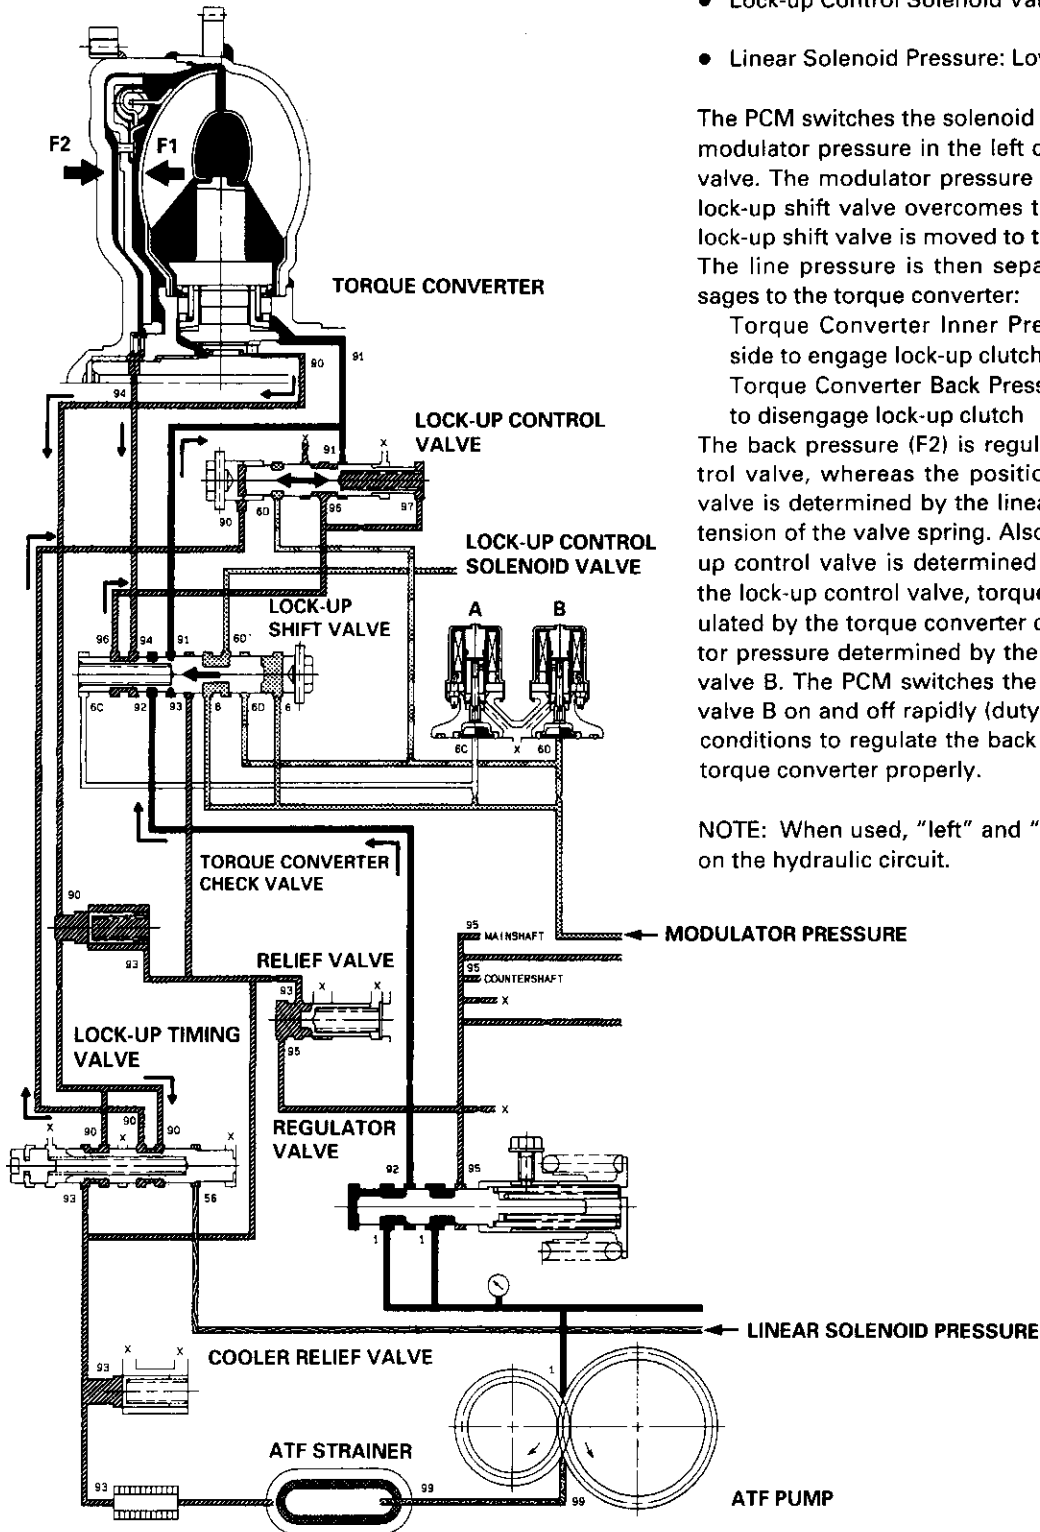

(cont'd)

Description

Lock-up System (cont'd)

Full Lock-up


- Lock-up Control Solenoid Valve A: ON
- Lock-up Control Solenoid Valve B: ON
- Linear Solenoid Pressure: High

When the vehicle speed further increases, the linear solenoid pressure is increased to high in accordance with the linear solenoid controlled by the PCM.

The lock-up timing valve overcomes the spring force and moves to the left side. Also, this valve closes the fluid port leading to the left side of the lock-up control valve.

Under this condition, the modulator pressure in the left side of the lock-up control valve had already been released by the lock-up control solenoid valve B; the lock-up control valve is moved to the left side. As this takes place, the torque converter back pressure is released fully, causing the lock-up clutch to be engaged fully.

NOTE: When used, "left" and "right" indicates direction on the hydraulic circuit.

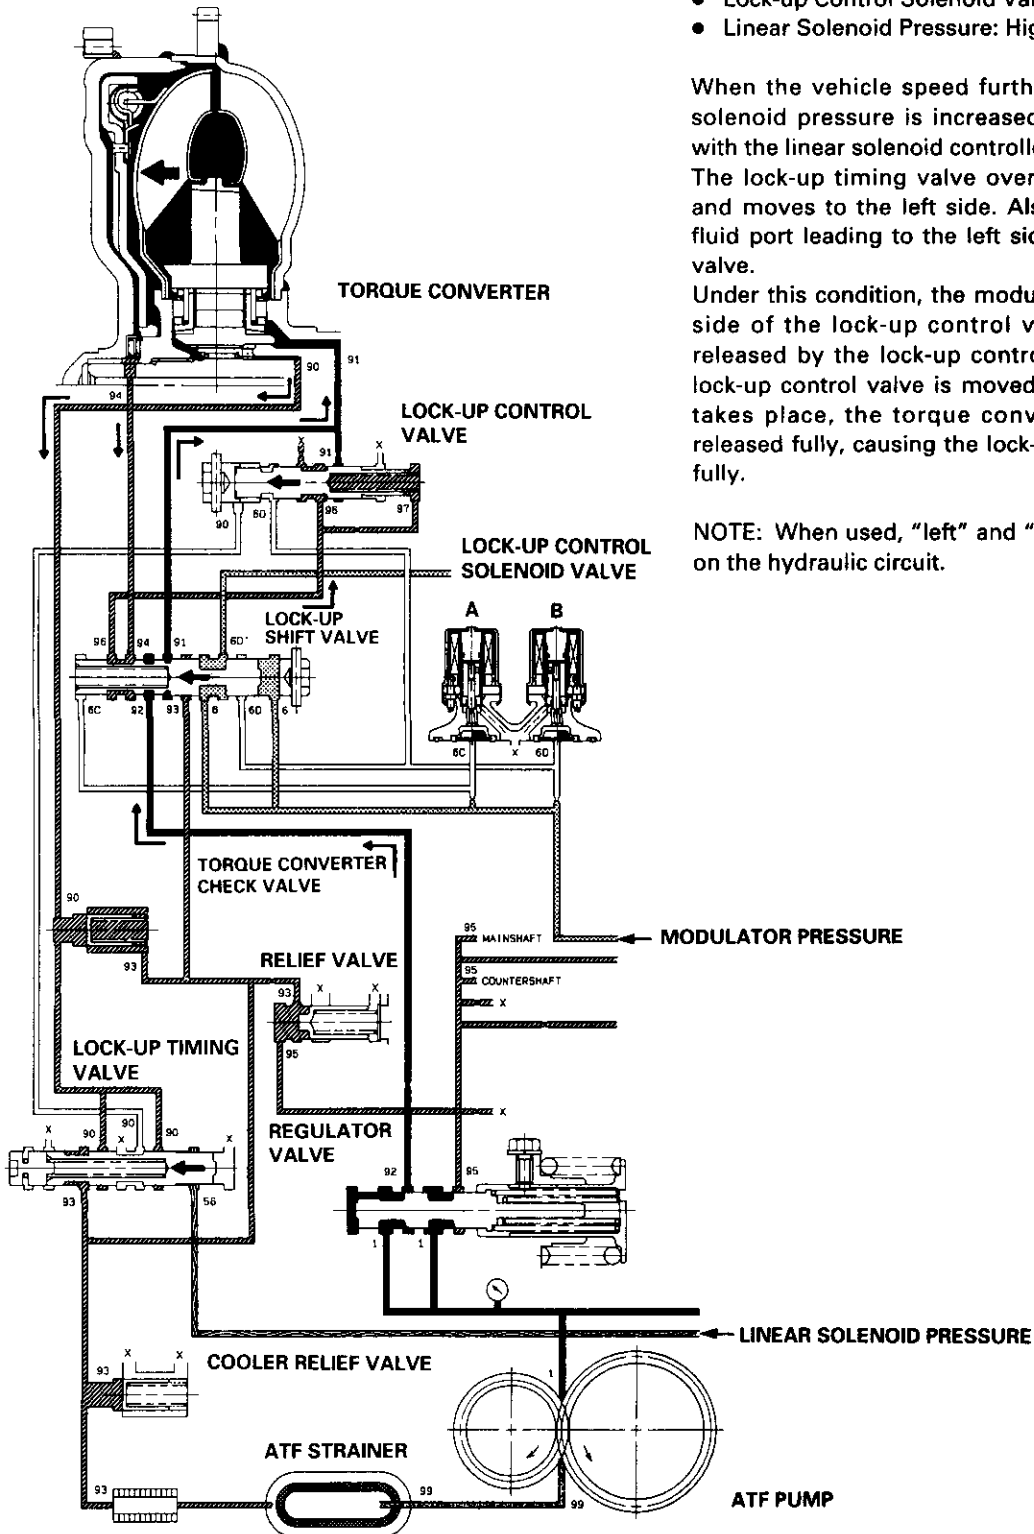




Deceleration Lock-up



- Lock-up Control Solenoid Valve A: ON
- Lock-up Control Solenoid Valve B: Duty Operation
OFF ↔ ON
- Linear Solenoid Pressure: Low

The PCM switches solenoid valve B on and off rapidly under certain conditions. The slight lock-up and half lock-up regions are maintained so as to lock the torque converter properly.


NOTE: When used, "left" and "right" indicates direction on the hydraulic circuit.

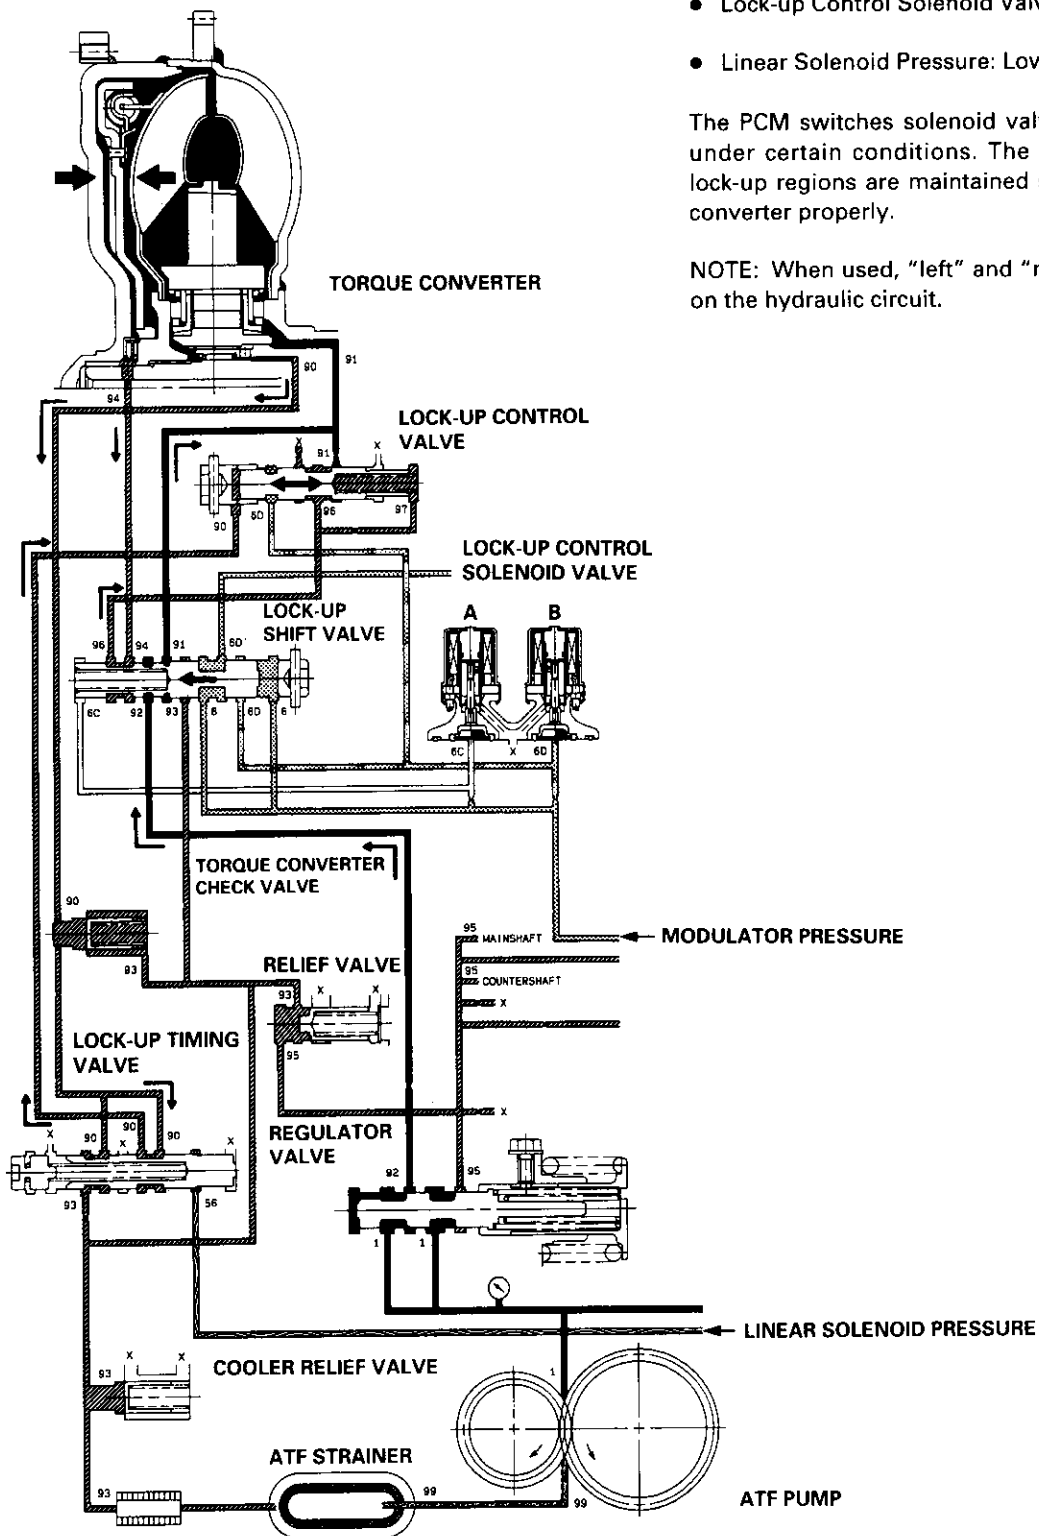


Component Locations

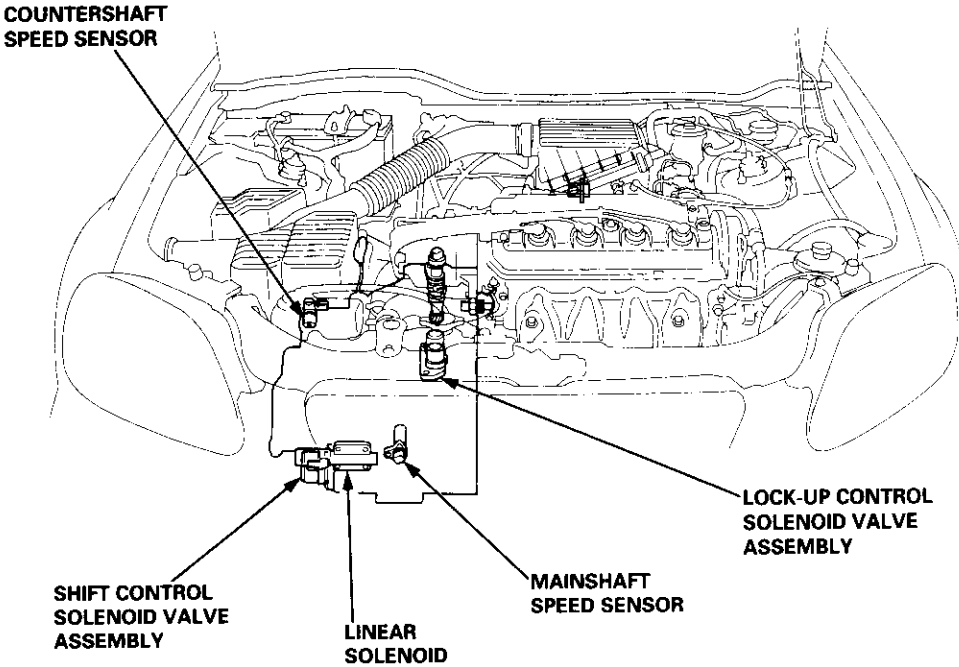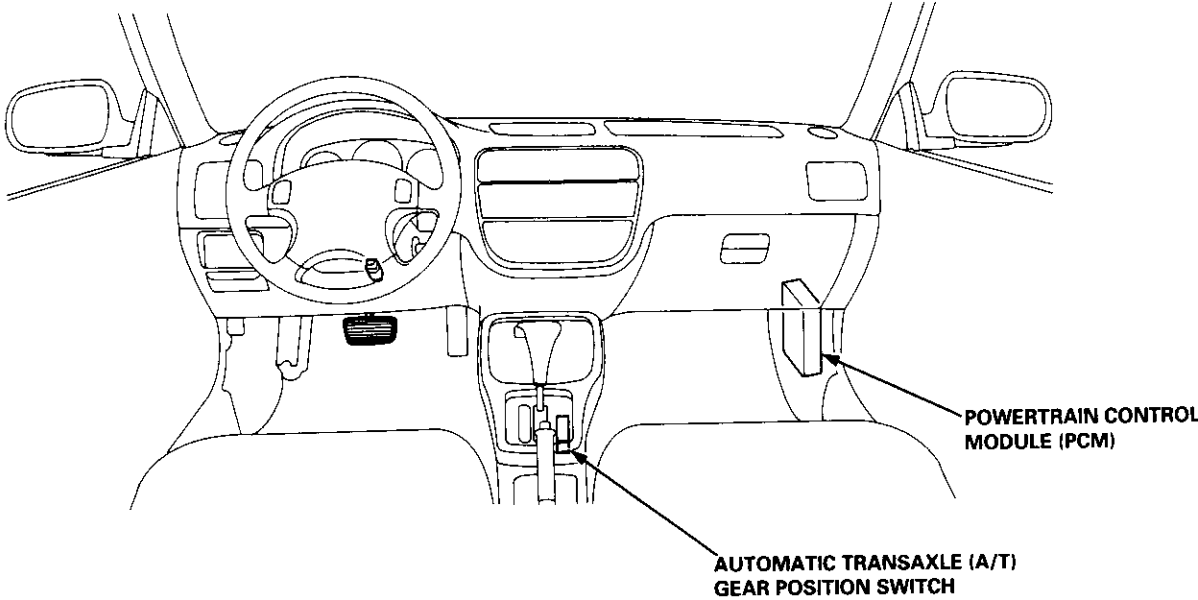


PCM Circuit Diagram (A/T Control System)

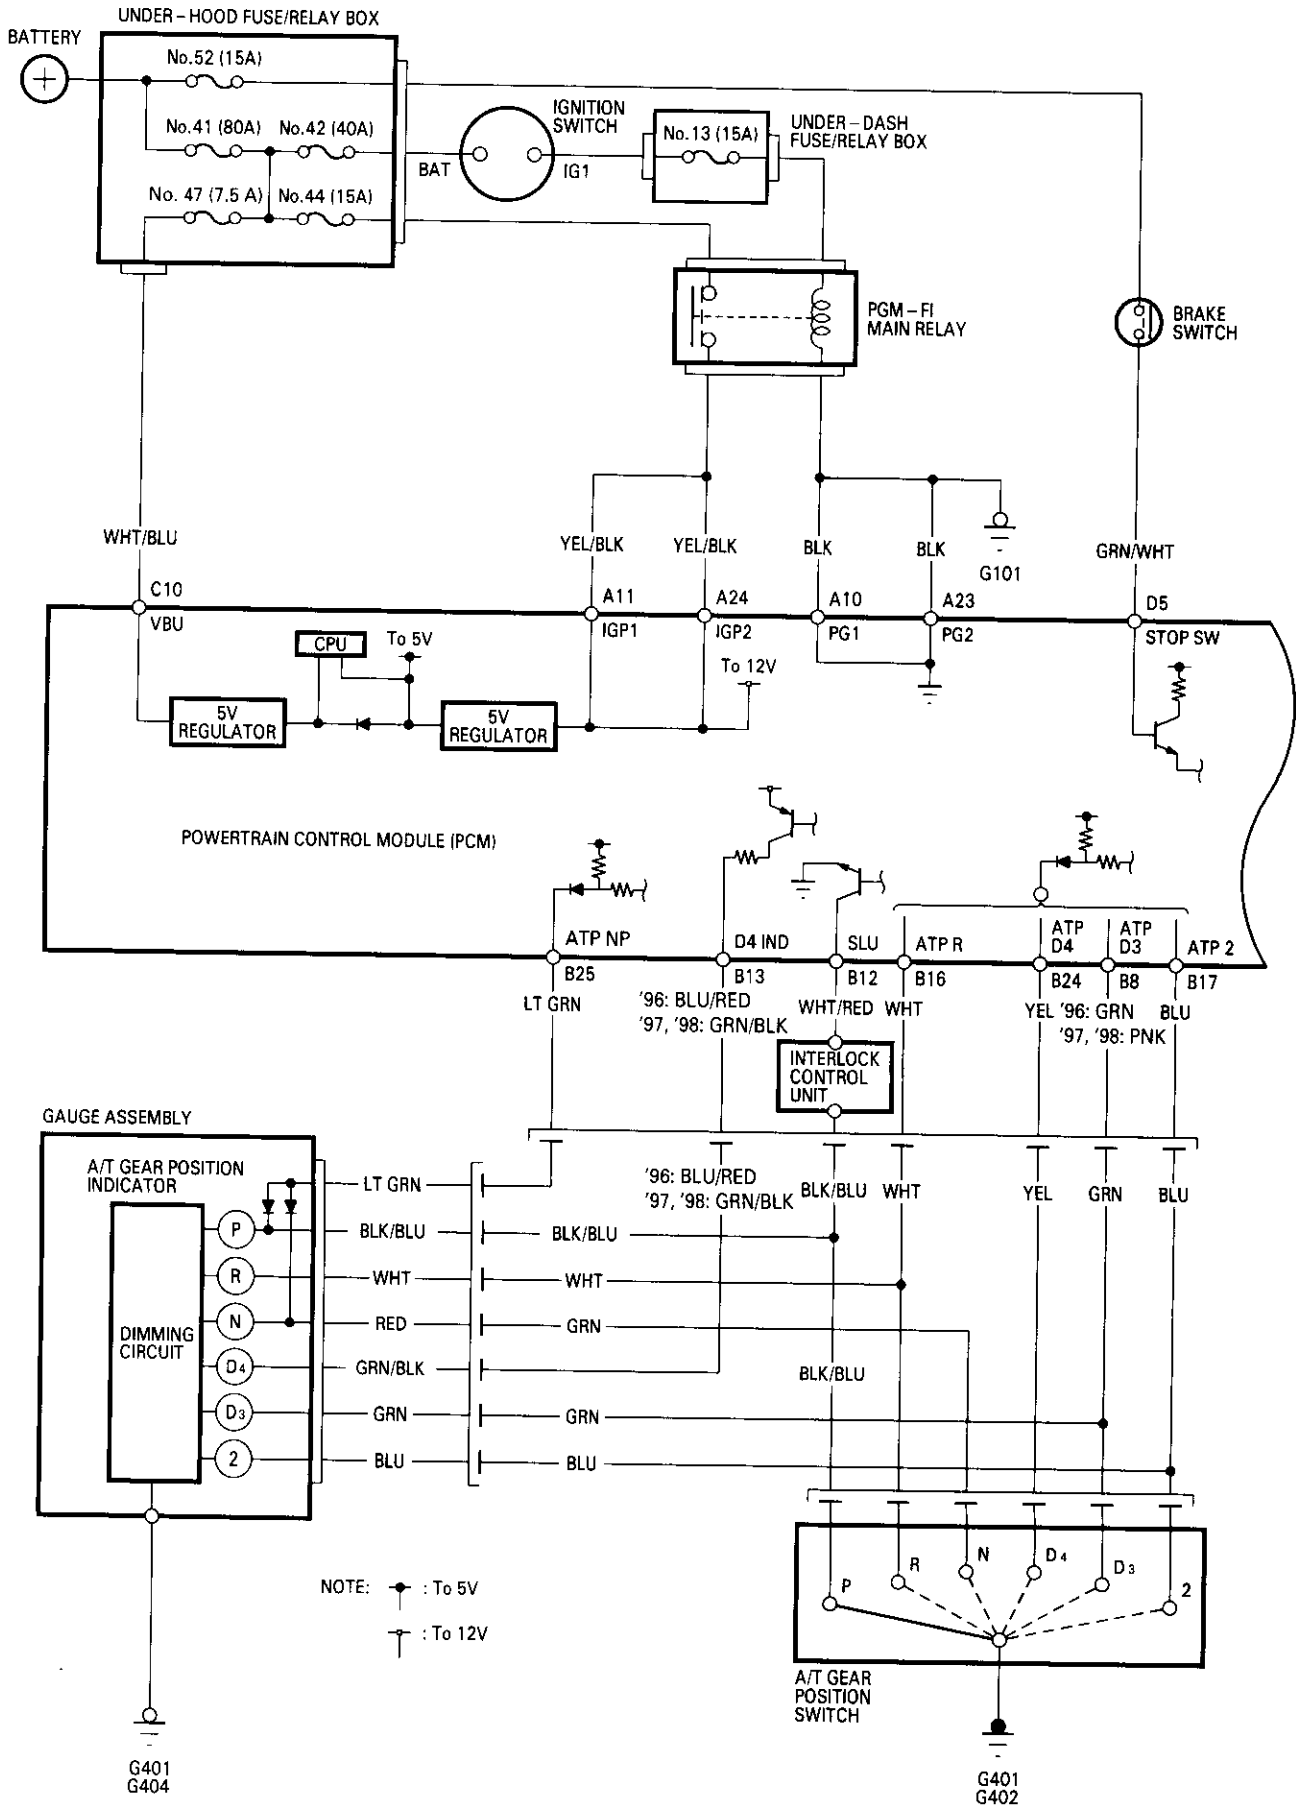

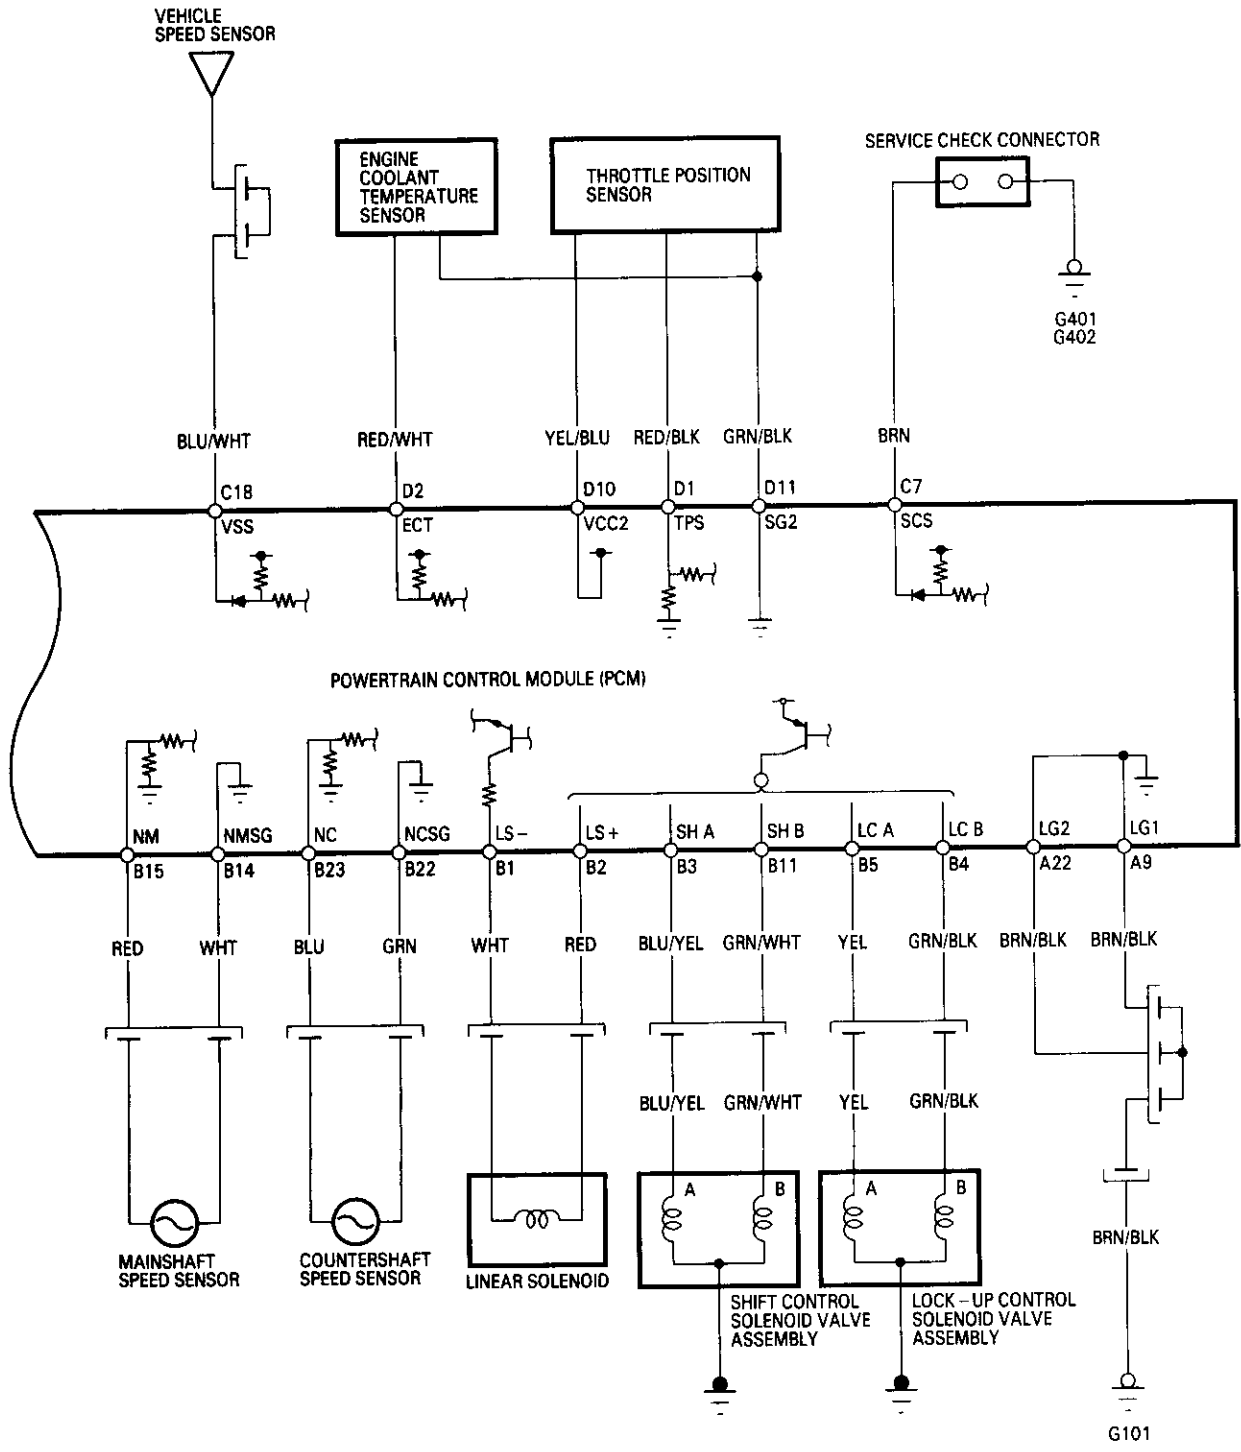

PCM Terminal Locations

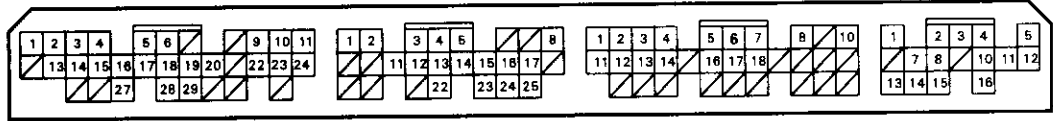


A (32P) Connector B (25P) Connector C (31P) Connector D (16P) Connector

PCM Terminal Voltage/Measuring Conditions

A/T Control System

The PCM terminal voltage and measuring conditions are shown for the connector terminals that relate to the A/T control system. The other PCM terminal voltage and measuring conditions are described in section 11.

PCM Terminal Locations

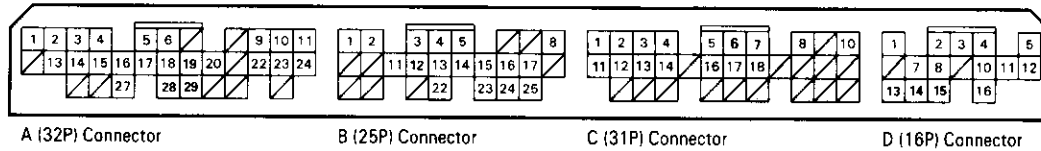

PCM CONNECTOR A (32P)

Terminal Number	Signal	Description	Measuring Conditions/Terminal Voltage
A1 to A8			– see section 11 –
A9	LG1	Ground	
A10	PG1	Ground	
A11	IGP1	Power supply system	With ignition switch ON (II): Battery voltage With ignition switch OFF: 0 V
A12 to A21			– see section 11 –
A22	LG2	Ground	
A23	PG2	Ground	
A24	IGP2	Power supply system	With ignition switch ON (II): Battery voltage With ignition switch OFF: 0 V
A25 to A32			– see section 11 –

PCM CONNECTOR B (25P)

Terminal Number	Signal	Description	Measuring Conditions/Terminal Voltage
B1	LS-	Linear solenoid power supply negative electrode	Ignition switch ON (II): Pulsing signal
B2	LS+	Linear solenoid power supply positive electrode	Ignition switch ON (II): Pulsing signal
B3	SHA	Shift control solenoid valve A control	In 2nd gear and 3rd gear in D_2 , D_4 position, and in 2 , R position: Battery voltage In 1st gear and 4th gear in D_3 , D_5 position: 0 V
B4	LCB	Lock-up control solenoid valve B control	When full lock-up: Battery voltage When half lock-up: Pulsing signal
B5	LCA	Lock-up control solenoid valve A control	When lock-up is ON: Battery voltage With no lock-up: 0 V
B6 to B7	—	Not used	
B8	ATP D3	A/T gear position switch D_3 position signal input	In D_3 position: 0 V In other than D_3 position: Battery voltage
B9 to B10	—	Not used	



PCM CONNECTOR B (25P) (cont'd)

Terminal Number	Signal	Description	Measuring Conditions/Terminal Voltage
B11	SHB	Shift control solenoid valve B control	In 1st gear and 2nd gear in D3 , D4 position, and in 2 position: Battery voltage In 3rd gear and 4th gear in D3 , D4 position: 0 V
B12	SLU	Interlock control	When ignition switch is ON (II), brake pedal depressed and accelerator pedal released: 0 V
B13	D4 IND	D4 Indicator light control	When ignition switch is first turned ON (II): Battery voltage for two seconds In D4 position: Battery voltage
B14	NMSG	Mainshaft speed sensor ground	Always: 0 V
B15	NM	Mainshaft speed sensor signal input	Depending on engine speed: Pulsing signal When engine is stopped: 0 V
B16	ATP R	A/T gear position switch R position signal input	In R position: 0 V In other than R position: Battery voltage
B17	ATP 2	A/T gear position switch 2 position signal input	In 2 position: 0 V In other than 2 position: Battery voltage
B18 to B21	—	Not used	
B22	NCSG	Countershaft speed sensor ground	Always: 0 V
B23	NC	Countershaft speed sensor signal input	Depending on vehicle speed: Pulsing signal When vehicle is stopped: 0 V
B24	ATP D4	A/T gear position switch D4 position signal input	In D4 position: 0 V In other than D4 position: 5 V
B25	ATP NP	A/T gear position switch P and N position signals input	In P and N positions: 0 V In other than P and N positions: Battery voltage

PCM CONNECTOR C (31P)

Terminal Number	Signal	Description	Measuring Conditions/Terminal Voltage
C1 to C6			– see section 11 –
C7	SCS	Service check signal	With ignition switch ON (II) and service check connector open: 5 V With ignition switch ON (II) and service check connector connected with special tool: 0 V
C8 to C9			– see section 11 –
C10	VBU	Back-up power system	Always battery voltage
C11 to C31			– see section 11 –

PCM CONNECTOR D (16P)

Terminal Number	Signal	Description	Measuring Conditions/Terminal Voltage
D1 to D4			– see section 11 –
D5	STOP SW	Brake switch signal input	Brake pedal depressed: Battery voltage Brake pedal released: 0 V
D6 to D16			– see section 11 –


Troubleshooting Procedures

Checking the Diagnostic Trouble Code (DTC) with an OBD II Scan tool or Honda PGM Tester

When the PCM senses an abnormality in the input or output systems, the **D4** indicator light in the gauge assembly will blink. When the 16P Data Link Connector (DLC) (located under the dash on the driver's side) is connected to the OBD II Scan Tool or Honda PGM Tester as shown, the scan tool or tester will indicate the Diagnostic Trouble Code (DTC) when the ignition switch is turned ON(II).

When the **D4** indicator light has been reported on, connect the OBD II Scan Tool conforming to SAE J1978 or Honda PGM Tester to the DLC (16P). Turn the ignition switch ON (II), and observe the DTC on the screen of the OBD II Scan Tool or Honda PGM Tester. After determining the DTC, refer to the electrical system Symptom-to-Component Chart on pages 14-48 and 14-49.

NOTE: See the OBD II Scan Tool or Honda PGM Tester user's manual for specific instruction.

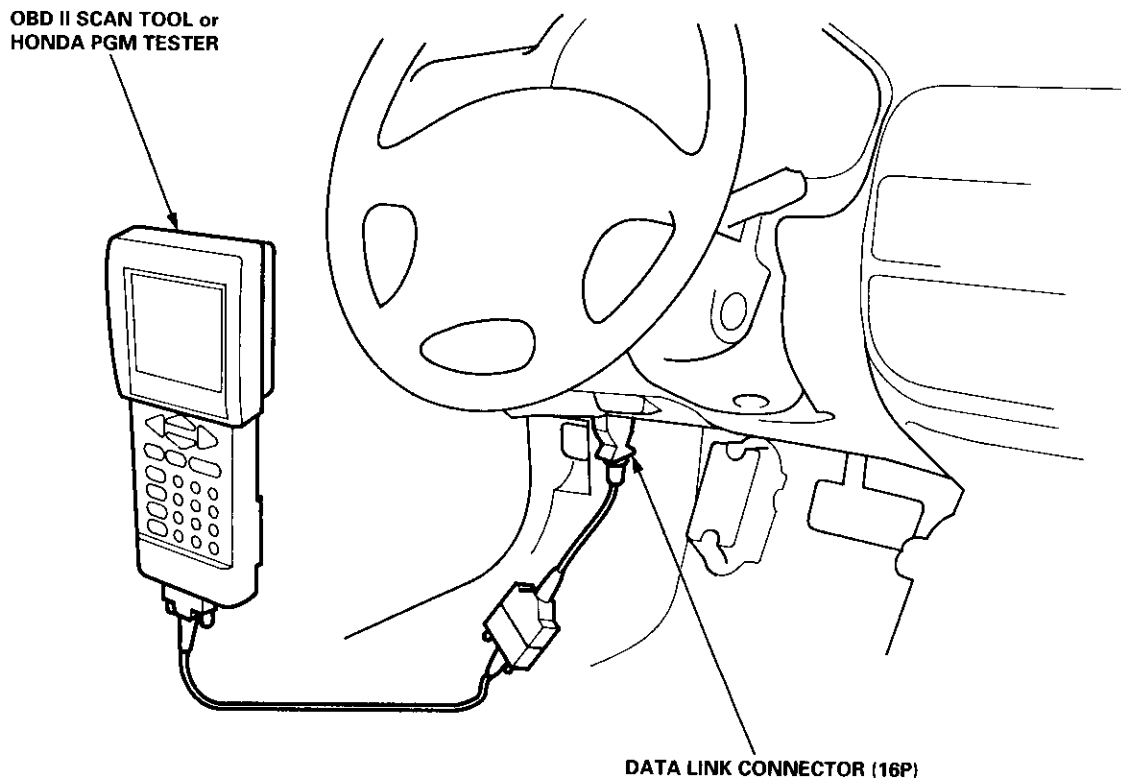





**Checking the Diagnostic Trouble Code (DTC)
with the Service Check Connector and Special Tool**


When the PCM senses an abnormality in the input or output systems, the **D₄** indicator light in the gauge assembly will blink. When the Service Check Connector (located under the dash on the passenger side) is connected with the special tool as shown, the **D₄** indicator light will blink the Diagnostic Trouble Code (DTC) when the ignition switch is turned ON (II).

When the **D₄** indicator light has been reported on, connect the Service Check Connector with the special tool. Then turn ON (II) the ignition switch and observe the **D₄** indicator light.

GAUGE ASSEMBLY

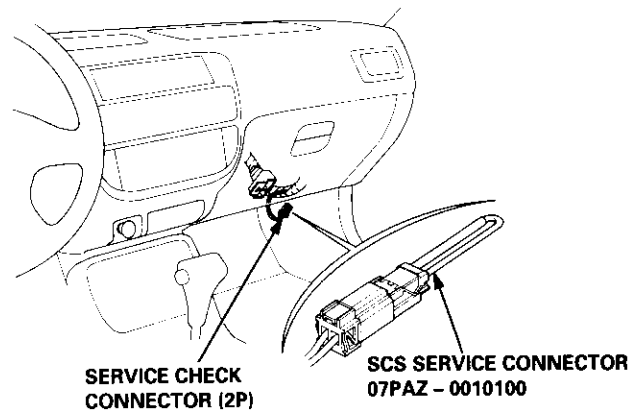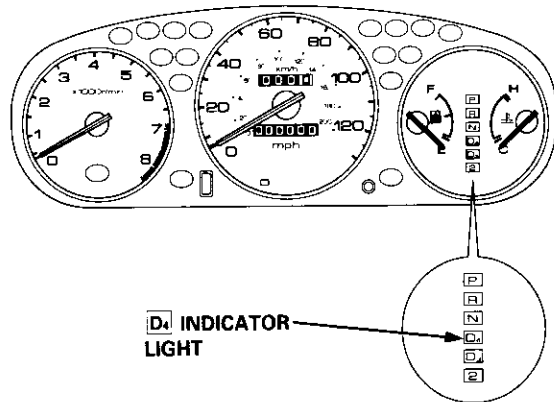

Codes 1 through 9 are indicated by individual short blinks. Codes 10 and above are indicated by a series of long and short blinks. One long blink equals 10 short blinks. Add the long and short blinks together to determine the code. After determining the code, refer to the electrical system Symptom-to Component Chart on pages 14-48 and 14-49.

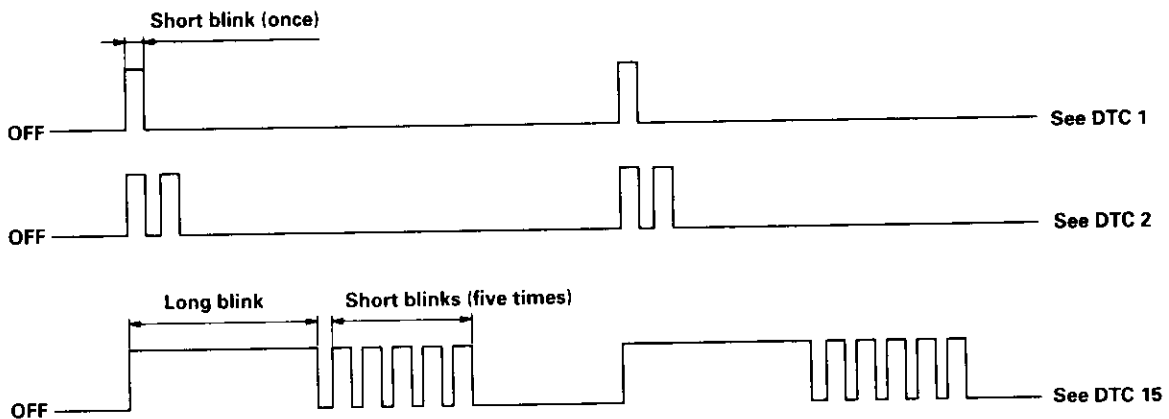


(cont'd)

Troubleshooting Procedures

(cont'd)


1. Remove the kick panel on the passenger's side (see section 20).
2. Remove the PCM, and turn the PCM over.

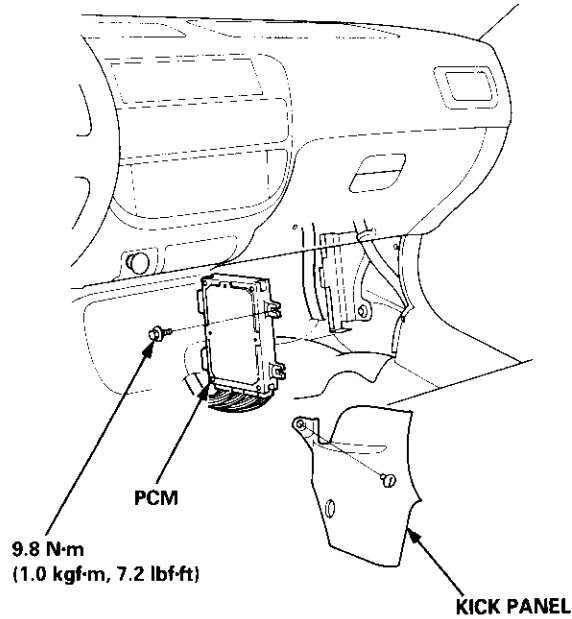

3. Inspect the circuit on the PCM according to the troubleshooting flowchart with the special tools and a digital multimeter as shown.

How to Use the Backprobe Set

Connect the backprobe adapters to the stacking patch cords, and connect the cords to a multimeter. Using the wire insulation as a guide for the contoured tip of the backprobe adapter, gently slide the tip into the connector from the wire side until it comes in contact with the terminal end of the wire.

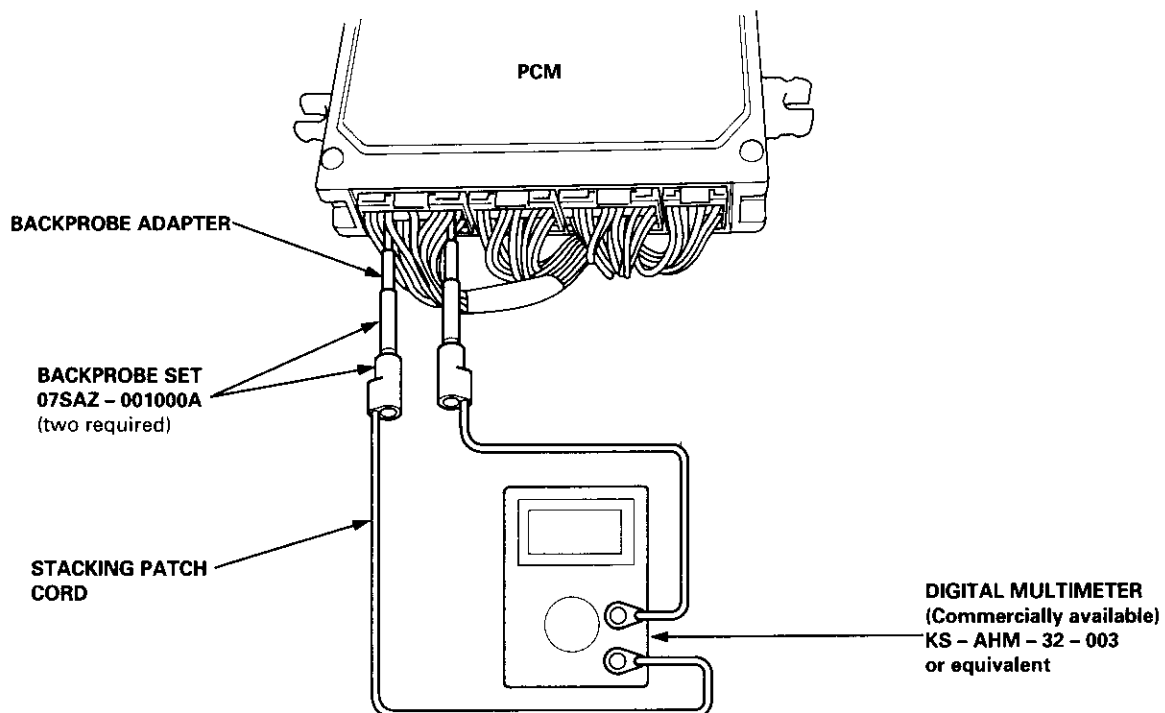




- **PCM Reset Procedure**

1. Turn the ignition switch off.
2. Remove the BACK UP fuse (7.5 A) from the under-hood fuse/relay box for 10 seconds to reset the PCM.

NOTE:

- Disconnecting the BACK UP fuse also cancels the radio preset stations and clock setting. Make note of the radio presets before removing the fuse so you can reset them.
- The PCM memory can also be cleared by using the OBD II Scan Tool or Honda PGM Tester.

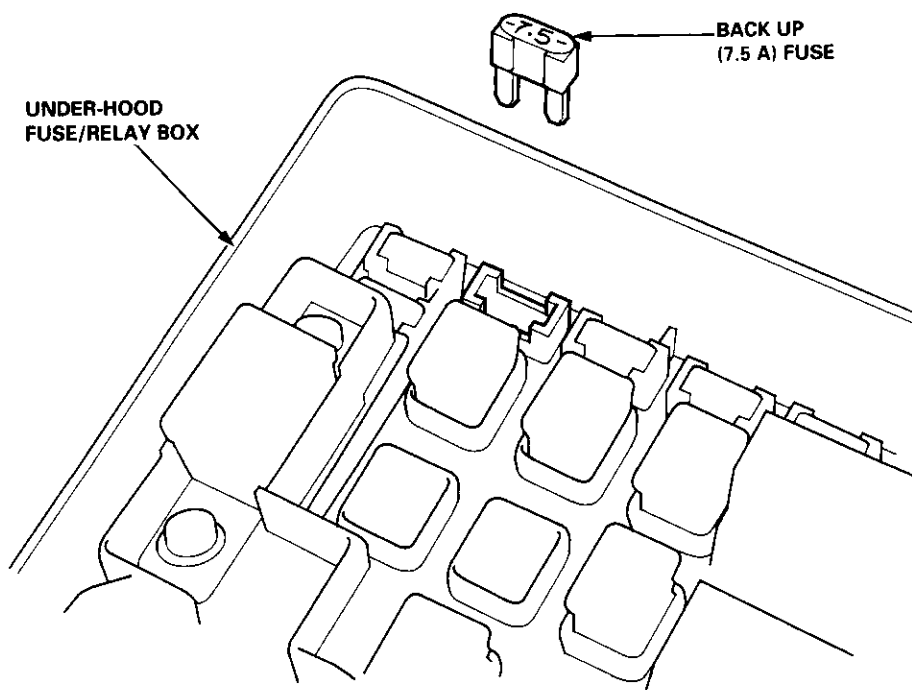

- **Final Procedure**


NOTE: This procedure must be done after any troubleshooting.

1. Turn the ignition switch OFF.
2. Reset the PCM.
3. Disconnect the OBD II Scan Tool or Honda PGM Tester from the Data Link Connector, or remove the special tool from the Service Check Connector.
4. Turn the ignition switch ON (II), and set the radio presets and clock setting.

Symptom-to-Component Chart

Electrical System

Diagnostic Trouble Code (DTC)*	Indicator Light	Symptom	Possible Cause	Refer to Page
P1753 (1)	Blinks	<ul style="list-style-type: none"> Lock-up clutch does not engage. Lock-up clutch does not disengage. 	<ul style="list-style-type: none"> Disconnected lock-up control solenoid valve A connector Short or open in lock-up control solenoid valve A wire Faulty lock-up control solenoid valve A 	14-50
P1758 (2)	Blinks	<ul style="list-style-type: none"> Lock-up clutch does not engage. 	<ul style="list-style-type: none"> Disconnected lock-up control solenoid valve B connector Short or open in lock-up control solenoid valve B wire Faulty lock-up control solenoid valve B 	14-52
P1705 (5)	Blinks	<ul style="list-style-type: none"> Fails to shift other than 2nd – 4th gears. Lock-up clutch does not engage. 	<ul style="list-style-type: none"> Short in A/T gear position switch wire Faulty A/T gear position switch 	14-54
P1706 (6)	OFF	<ul style="list-style-type: none"> Fails to shift other than 2nd – 3rd – 4th gears. Lock-up clutch does not engage. 	<ul style="list-style-type: none"> Disconnected A/T gear position switch connector Open in A/T gear position switch wire Faulty A/T gear position switch 	14-56
P0753 (7)	Blinks	<ul style="list-style-type: none"> Fails to shift (between 1st – 4th, or 2nd – 3rd gear only). Fails to shift (stuck in 4th gear). 	<ul style="list-style-type: none"> Disconnected shift control solenoid valve A connector Short or open in shift control solenoid valve A wire Faulty shift control solenoid valve A 	14-58
P0758 (8)	Blinks	<ul style="list-style-type: none"> Fails to shift (stuck in 1st or 4th gears). 	<ul style="list-style-type: none"> Disconnected shift control solenoid valve B connector Short or open in shift control solenoid valve B wire Faulty shift control solenoid valve B 	14-60
P0720 (9)	Blinks	<ul style="list-style-type: none"> Lock-up clutch does not engage. 	<ul style="list-style-type: none"> Disconnected countershaft speed sensor connector Short or open in countershaft speed sensor wire Faulty countershaft speed sensor 	14-62

(DTC)*: The DTCs in parentheses are the number of the  indicator light blinks when the service check connector is connected with the special tool (SCS service connector).



Diagnostic Trouble Code (DTC)*	Indicator Light	Symptom	Possible Cause	Refer to Page
P0715 (15)	'96, '97 models OFF '98 model Blinks	<ul style="list-style-type: none"> Lock-up clutch does not engage. 	<ul style="list-style-type: none"> Disconnected mainshaft speed sensor connector Short or open in mainshaft speed sensor wire Faulty mainshaft speed sensor 	14-64
P1768 (16)	Blinks	<ul style="list-style-type: none"> Transmission jerks hard when shifting, stuck in 4th gear. Lock-up clutch does not engage. 	<ul style="list-style-type: none"> Disconnected linear solenoid connector Short or open in linear solenoid wire Faulty linear solenoid Disconnected or loosed PG terminal 	14-66
P0740 (40)	OFF	<ul style="list-style-type: none"> Lock-up clutch does not engage. 	<ul style="list-style-type: none"> Faulty lock-up control system 	14-68
P0730 (41)	OFF	<ul style="list-style-type: none"> Fails to shift (between 1st – 2nd, 1st – 4th, 2nd – 4th, 2nd – 3rd, 3rd – 4th, 1st – 2nd – 3rd, 1st – 3rd – 4th or 2nd – 3rd – 4th gears only). Fails to shift (stuck in 1st or 2nd gears). 	<ul style="list-style-type: none"> Faulty shift control system 	14-69
P0700 (none)	————	<ul style="list-style-type: none"> Any automatic transmission problem. To eliminate DTC P0700, troubleshoot the other automatic transmission problem(s) according to the DTC(s) indicated.		————

(DTC)*: The DTCs in parentheses are the number of the indicator light blinks when the service check connector is connected with the special tool (SCS service connector).

NOTE: When the OBD II Scan Tool or Honda PGM Tester indicate the DTC(s) for the automatic transmission control system, the scan tool or tester also indicates code P0700 simultaneously. Code P0700 means detection of some automatic transmission problem on the PGM FI control system.

If the self-diagnostic indicator light does not blink, perform an inspection according to the table below.

Symptom	Inspection	Ref. page
indicator light does not come on for two seconds after ignition switch is first turned ON (II).	————	14-70
indicator light is on constantly (not blinking) whenever the ignition switch is ON (II).	————	14-72
Shift lever cannot be moved from position with the brake pedal depressed.	Inspection	14-73

NOTE: If a customer describes the symptom for code P1706 (6), it will be necessary to recreate the symptom by test-driving, then recheck the DTC.

Electrical Troubleshooting


Troubleshooting Flowchart — Lock-up Control Solenoid Valve A

- OBD II Scan Tool indicates Code P1753.
- Self-diagnosis D_4 indicator light blinks once.

Possible Cause

- Disconnected lock-up control solenoid valve A connector
- Short or open in lock-up control solenoid valve A wire
- Faulty lock-up control solenoid valve A

PCM CONNECTORS

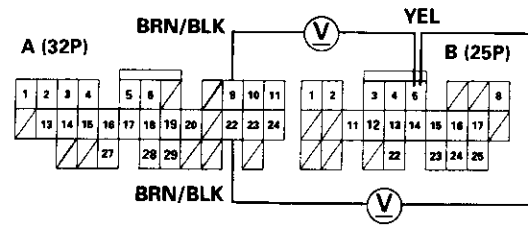

WIRE SIDE OF FEMALE TERMINALS

Check for a Short to Power:

1. Turn the ignition switch OFF.
2. Disconnect the A (32P) and B (25P) connectors from the PCM.
3. Turn the ignition switch ON (II).
4. Measure the voltage between the B5 and A9 or A22 terminals.

Is there voltage?

YES

Repair short to power in the wire between the B5 terminal and the lock-up control solenoid valve A.

NO

Measure Lock-up Control Solenoid Valve A Resistance:


1. Turn the ignition switch OFF.
2. Measure the resistance between the B5 and A9 or A22 terminals.

Is the resistance 12 – 25 Ω ?


YES

Check for loose PCM connectors. If necessary, substitute a known-good solenoid valve assembly or PCM and recheck.

NO

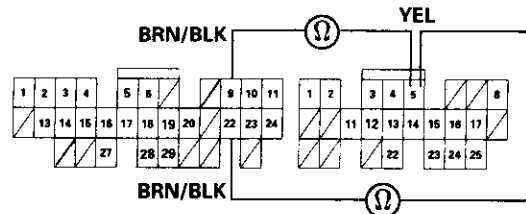


To page 14-51



From page 14-50

Check Lock-up Control Solenoid Valve A for a Short Circuit:


1. Disconnect the 2P connector from the lock-up control solenoid valve assembly.
2. Check for continuity between the B5 and A9 or A22 terminals.



NO

Measure Lock-up Control Solenoid Valve A Resistance at the Solenoid Connector:


Measure the resistance between the No. 2 terminal of the lock-up control solenoid connector and body ground.



NO


Replace the lock-up control solenoid valve assembly.

PCM CONNECTORS

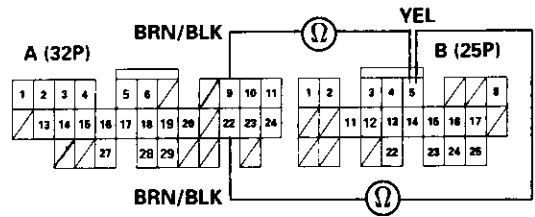

WIRE SIDE OF FEMALE TERMINALS

LOCK-UP CONTROL SOLENOID CONNECTOR

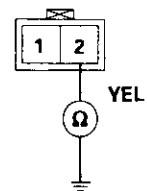

TERMINAL SIDE OF MALE TERMINALS

Electrical Troubleshooting

Troubleshooting Flowchart — Lock-up Control Solenoid Valve B

- OBD II Scan Tool indicates Code P1758.
- Self-diagnosis **D4** indicator light blinks twice.


Possible Cause

- Disconnected lock-up control solenoid valve B connector
- Short or open in lock-up control solenoid valve B wire
- Faulty lock-up control solenoid valve B

Check for a Short to Power:

1. Turn the ignition switch OFF.
2. Disconnect the A (32P) and B (25P) connectors from the PCM.
3. Turn the ignition switch ON (II).
4. Measure the voltage between the B4 and A9 or A22 terminals.

PCM CONNECTORS

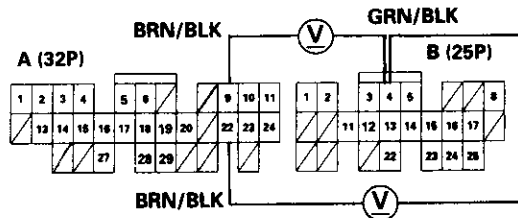

WIRE SIDE OF FEMALE TERMINALS

Is there voltage?


YES

Repair short to power in the wire between the B4 terminal and the lock-up control solenoid valve B.

NO

Measure Lock-up Control Solenoid Valve B Resistance:

1. Turn the ignition switch OFF.
2. Measure the resistance between the B4 and A9 or A22 terminals.

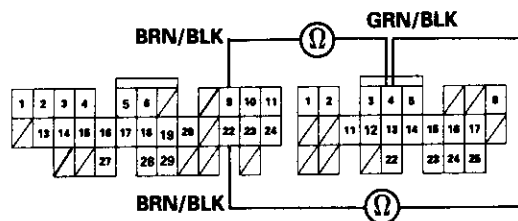

Is the resistance 12 – 25 Ω?

YES

Check for loose PCM connectors. If necessary, substitute a known-good solenoid valve assembly or PCM and recheck.

NO

To page 14-53



From page 14-52

Check Lock-up Control Solenoid Valve B for a Short Circuit:

1. Disconnect the 2P connector from the lock-up control solenoid valve assembly.
2. Check for continuity between the B4 and A9 or A22 terminals.

Is there continuity?

YES

Repair short to ground in the wire between the B4 terminal and the lock-up control solenoid valve B.

NO

Measure Lock-up Control Solenoid Valve B Resistance at the Solenoid Connector:

Measure the resistance between the No. 1 terminal of the lock-up control solenoid connector and body ground.

Is the resistance 12 – 25 Ω ?


YES

Check for open in the wire between the B4 terminal and the lock-up control solenoid valve B.

NO


Replace the lock-up control solenoid valve assembly.

PCM CONNECTORS

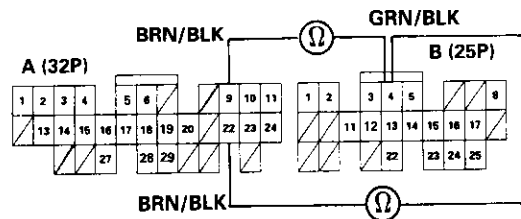

WIRE SIDE OF FEMALE TERMINALS

LOCK-UP CONTROL SOLENOID CONNECTOR

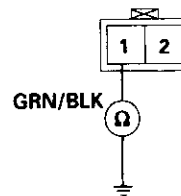

TERMINAL SIDE OF MALE TERMINALS

Electrical Troubleshooting

Troubleshooting Flowchart — A/T Gear Position Switch (Short)

- OBD II Scan Tool indicates Code P1705.
- Self-diagnosis **D4** indicator light blinks five times.

Possible Cause

- Short in A/T gear position switch wire
- Faulty A/T gear position switch

NOTE: Code P1705 (5) is caused when the PCM receives two gear position inputs at the same time.

Observe the A/T Gear Position Indicator:

1. Turn the ignition switch ON (II).
2. Observe the A/T gear position indicator, and shift to each position.

Do any indicators stay on when the shift lever is not in those positions?

NO

The system is OK at this time. Check the wire harness for damage.

YES

Measure ATP R Voltage:

1. Shift to all positions other than **R**.
2. Measure the voltage between the B16 and A9 or A22 terminals.

Is there battery voltage?

NO

Check for short in the wire between the B16 terminal and the A/T gear position switch or A/T gear position indicator. If wire is OK, check for loose PCM connectors. If necessary, substitute a known-good PCM and recheck.

YES

Measure ATP NP Voltage:

1. Shift to all positions other than **N** or **P**.
2. Measure the voltage between the B25 and A9 or A22 terminals.

Is there battery voltage?

NO

Check for short in the wire between the B25 terminal and the A/T gear position indicator, or a short in the wires between the A/T gear position indicator and the A/T gear position switch. If wires are OK, check for loose PCM connectors. If necessary, substitute a known-good PCM and recheck.

YES

Measure ATP D4 Voltage:

1. Shift to all positions other than **D4**.
2. Measure the voltage between the B24 and A9 or A22 terminals.

Is there approx. 5 V?


NO

Check for short in the wire between the B24 terminal and the A/T gear position switch. If wire is OK, check for loose PCM connectors. If necessary, substitute a known-good PCM and recheck.



YES

To page 14-55

PCM CONNECTORS

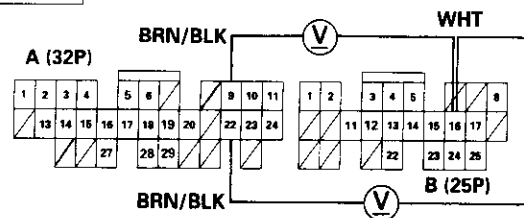

WIRE SIDE OF FEMALE TERMINALS

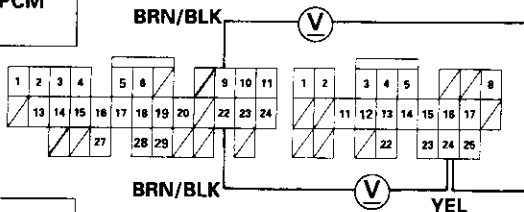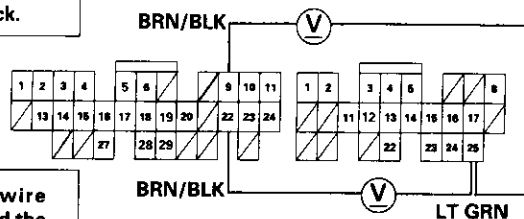



From page 14-54

Measure ATP D3 Voltage:

1. Shift to all positions other than **D3**.
2. Measure the voltage between the B8 and A9 or A22 terminals.

Is there battery voltage?

NO

YES

Check for short in the wire between the B8 terminal and the A/T gear position switch or A/T gear position indicator. If wire is OK, check for loose PCM connectors. If necessary, substitute a known-good PCM and recheck.

Measure ATP2 Voltage:

1. Shift to all positions other than **2**.
2. Measure the voltage between the B17 and A9 or A22 terminals.

Is there battery voltage?


NO

YES


Check for short in the wire between the B17 terminal and the A/T gear position switch or A/T gear position indicator. If wire is OK, check for loose PCM connectors. If necessary, substitute a known-good PCM and recheck.

Check for loose PCM connectors. If necessary, substitute a known-good PCM and recheck.

PCM CONNECTORS

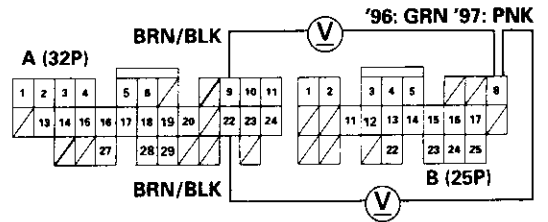

WIRE SIDE OF FEMALE TERMINALS

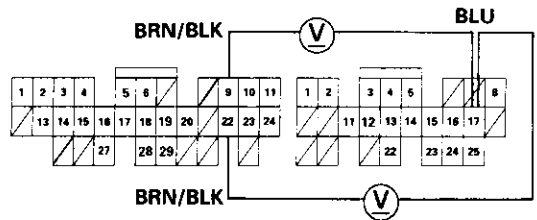

Electrical Troubleshooting

Troubleshooting Flowchart — A/T Gear Position Switch (Open)

- OBD II Scan Tool indicates Code P1706.
- Self-diagnosis **D4** indicator light blinks six times.

Possible Cause

- Disconnected A/T gear position switch connector
- Open in A/T gear position switch wire
- Faulty A/T gear position switch

Measure ATP R Voltage:

1. Turn the ignition switch ON (II).
2. Shift to **R** position.
3. Measure the voltage between the B16 and A9 or A22 terminals.

Is there voltage?

YES

Repair open in the wire between the B16 terminal and the A/T gear position switch.

NO

Measure ATP NP Voltage:

1. Shift to **N** or **P** position.
2. Measure the voltage between the B25 and A9 or A22 terminals.

Is there voltage?

YES

Repair open in the wire between the B25 terminal and the A/T gear position indicator or the A/T gear position switch.

NO

Measure ATP D4 Voltage:

1. Shift to **D4** position.
2. Measure the voltage between the B24 and A9 or A22 terminals.

Is there voltage?


YES

Repair open in the wire between the B24 terminal and the A/T gear position switch.



NO

To page 14-57

PCM CONNECTORS

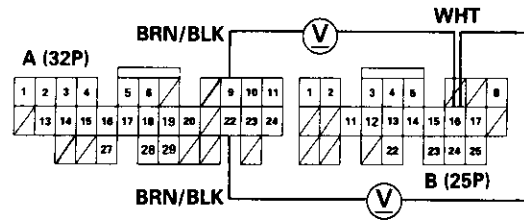

WIRE SIDE OF FEMALE TERMINALS

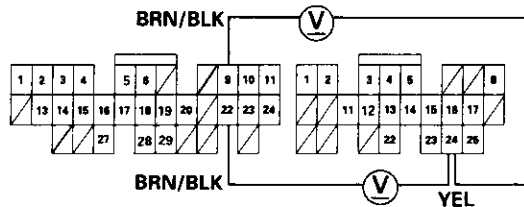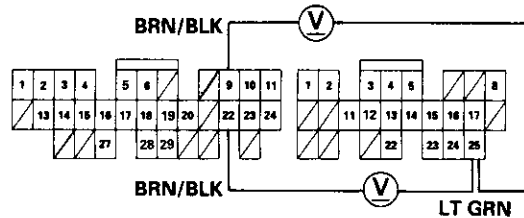



From page 14-56

Measure ATP D3 Voltage:

1. Shift to **D₃** position.
2. Measure the voltage between the B8 and A9 or A22 terminals.

Is there voltage?

YES

Repair open in the wire between the B8 terminal and the A/T gear position switch.

NO

Measure ATP2 Voltage:

1. Shift to **2** position.
2. Measure the voltage between the B17 and A9 or A22 terminals.

Is there voltage?


YES

Repair open in the wire between the B17 terminal and the A/T gear position switch.


NO

Check for loose PCM connectors. If necessary, substitute a known-good PCM and recheck.

PCM CONNECTORS

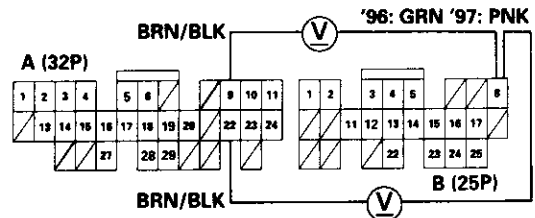

WIRE SIDE OF FEMALE TERMINALS

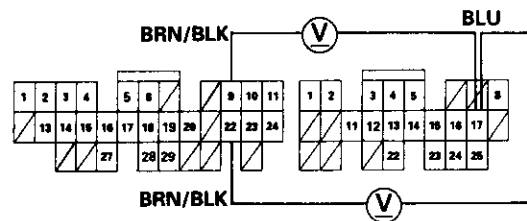

Electrical Troubleshooting

Troubleshooting Flowchart — Shift Control Solenoid Valve A

• OBD II Scan Tool indicates Code P0753.
 • Self-diagnosis **D** indicator light blinks seven times.


Possible Cause

- Disconnected shift control solenoid valve A connector
- Short or open in shift control solenoid valve A wire
- Faulty shift control solenoid valve A

Check for a Short to Power:

1. Turn the ignition switch OFF.
2. Disconnect the A (32P) and B (25P) connectors from the PCM.
3. Turn the ignition switch ON (II).
4. Measure the voltage between the B3 and A9 or A22 terminals.

PCM CONNECTORS

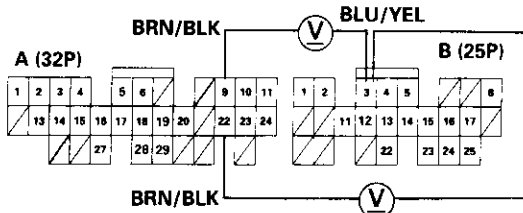


WIRE SIDE OF FEMALE TERMINALS

Is there voltage?

YES Repair short to power in the wire between the B3 terminal and the shift control solenoid valve A.

Measure Shift Control Solenoid Valve A Resistance:

1. Turn the ignition switch OFF.
2. Measure the resistance between the B3 and A9 or A22 terminals.

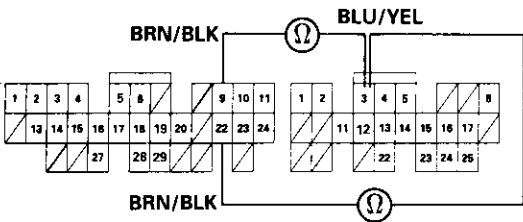

Is the resistance 12 – 25 Ω?

YES Check for loose PCM connectors. If necessary, substitute a known-good solenoid valve assembly or PCM and recheck.


To page 14-59



From page 14-58

Check Shift Control Solenoid Valve A for a Short Circuit:

1. Disconnect the 2P connector from the shift control solenoid valve assembly.
2. Check for continuity between the B3 and A9 or A22 terminals.

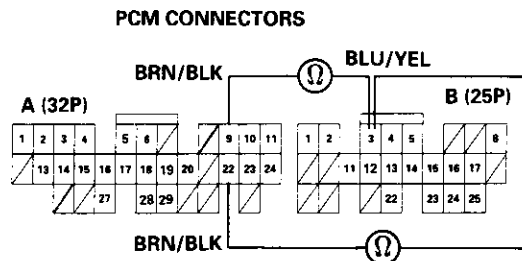


WIRE SIDE OF FEMALE TERMINALS

Is there continuity? **YES** **Repair short to ground in the wire between the B3 terminal and the shift control solenoid valve A.**

NO

Measure Shift Control Solenoid Valve A Resistance at the Solenoid Connector:
Measure the resistance between the No. 1 terminal of the shift control solenoid connector and body ground.

SHIFT CONTROL SOLENOID CONNECTOR

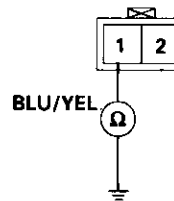

TERMINAL SIDE OF MALE TERMINALS

Is the resistance 12 - 25 Ω? **YES** **Check for open in the wire between the B3 terminal and the shift control solenoid valve A.**

NO

Replace the shift control solenoid valve assembly.


Electrical Troubleshooting

Troubleshooting Flowchart — Shift Control Solenoid Valve B

- OBD II Scan Tool indicates Code P0758.
- Self-diagnosis **D₄** indicator light blinks eight times.

- Possible Cause**
- Disconnected shift control solenoid valve B connector
 - Short or open in shift control solenoid valve B wire
 - Faulty shift control solenoid valve B

- Check for a Short to Power:**
1. Turn the ignition switch OFF.
 2. Disconnect the A (32P) and B (25P) connectors from the PCM.
 3. Turn the ignition switch ON (II).
 4. Measure the voltage between the B11 and A9 or A22 terminals.

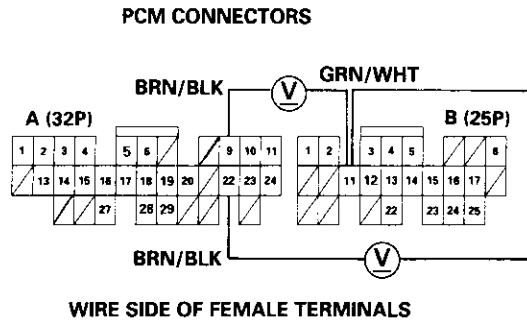


Is there voltage? YES

Repair short to power in the wire between the B11 terminal and the shift control solenoid valve B.

NO

- Measure Shift Control Solenoid Valve B Resistance:**
1. Turn the ignition switch OFF.
 2. Measure the resistance between the B11 and A9 or A22 terminals.

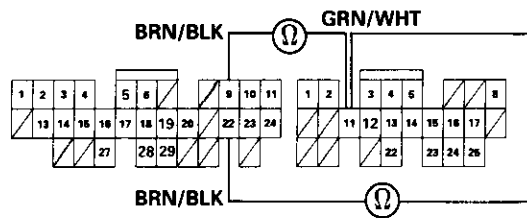

Is the resistance 12 – 25 Ω? YES

Check for loose PCM connectors. If necessary, substitute a known-good solenoid valve assembly or PCM and recheck.

NO

To page 14-61



From page 14-60

Check Shift Control Solenoid Valve B for a Short Circuit:

1. Disconnect the 2P connector from the shift control solenoid valve assembly.
2. Check for continuity between the B11 and A9 or A22 terminals.

Is there continuity?

YES

Repair short to ground in the wire between the B11 terminal and the shift control solenoid valve B.

NO

Measure Shift Control Solenoid Valve B Resistance at the Solenoid Connector:

Measure the resistance between the No. 2 terminal of the shift control solenoid connector and body ground.

Is the resistance 12 - 25 Ω ?


YES

Check for open in the wire between the B11 terminal and the shift control solenoid valve B.

NO


Replace the shift control solenoid valve assembly.

PCM CONNECTORS

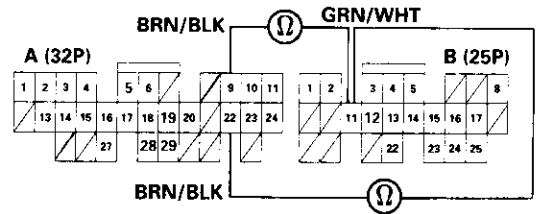

WIRE SIDE OF FEMALE TERMINALS


SHIFT CONTROL SOLENOID CONNECTOR

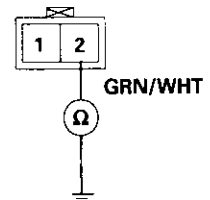


TERMINAL SIDE OF MALE TERMINALS

Electrical Troubleshooting

Troubleshooting Flowchart — Countershaft Speed Sensor

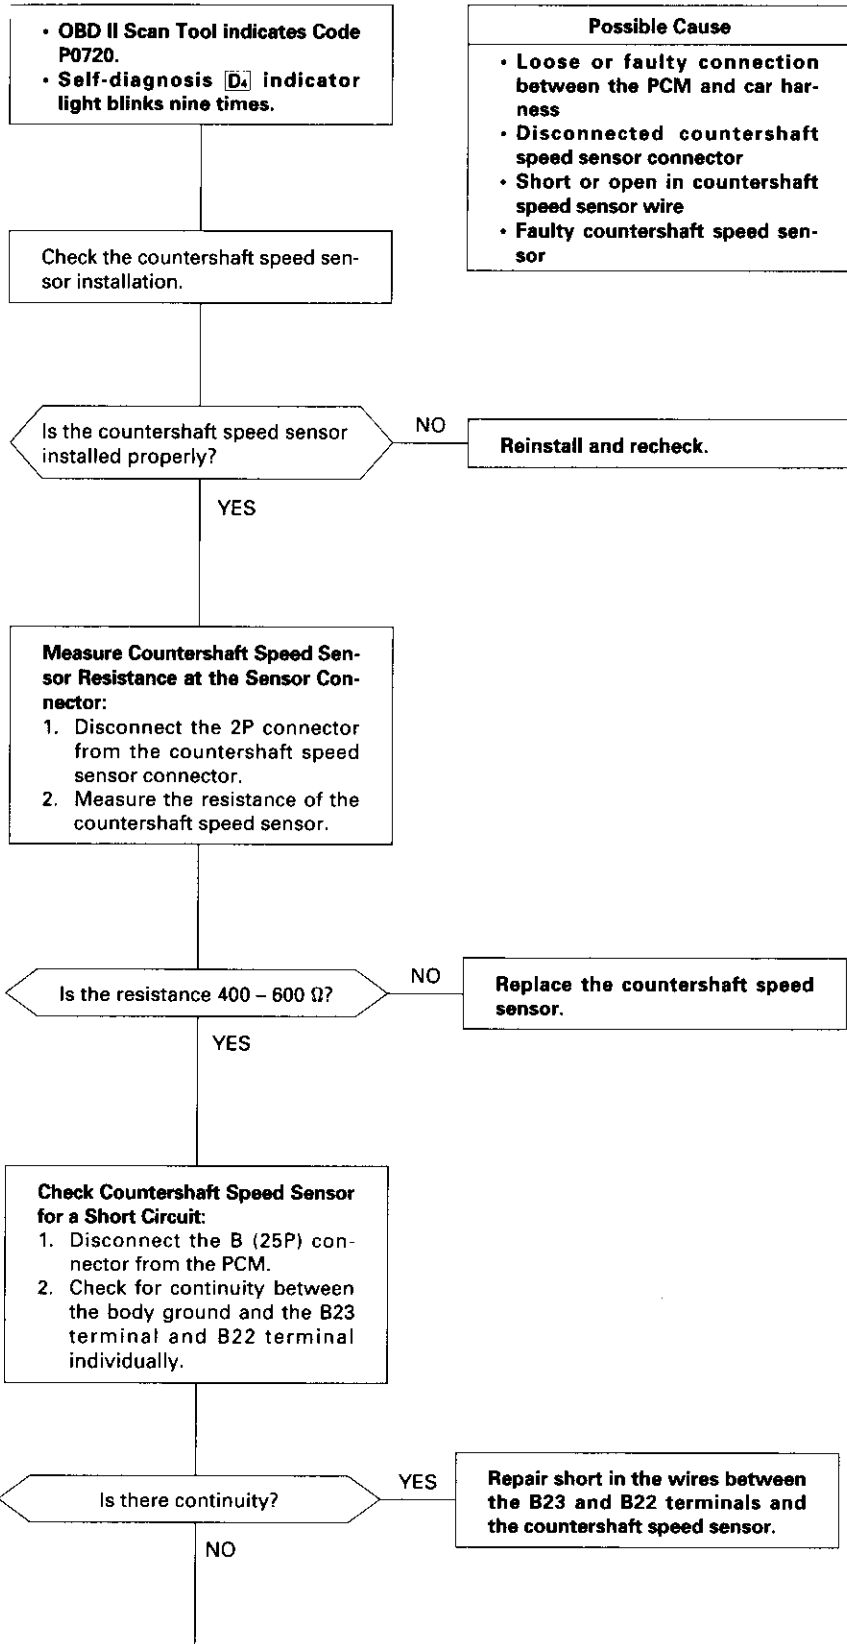


COUNTERSHAFT SPEED SENSOR CONNECTOR



TERMINAL SIDE OF MALE TERMINALS

PCM CONNECTOR B (25P)

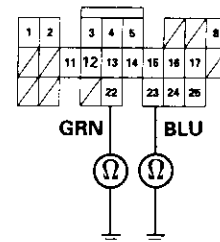

WIRE SIDE OF FEMALE TERMINALS

To page 14-63



From page 14-62

Measure Countershaft Speed Sensor Resistance:

1. Connect the countershaft speed sensor 2P connector.
2. Measure the resistance between the B23 and B22 terminals.

Is the resistance 400 – 600 Ω ?


NO

Repair loose terminal or open in the wires between the B23 and B22 terminals and the countershaft speed sensor.

YES

Check for loose PCM connectors. If necessary, substitute a known-good PCM and recheck.


PCM CONNECTOR B (25P)

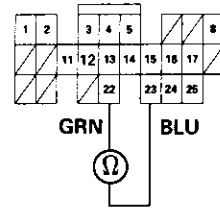

WIRE SIDE OF FEMALE TERMINALS


Electrical Troubleshooting

Troubleshooting Flowchart — Mainshaft Speed Sensor

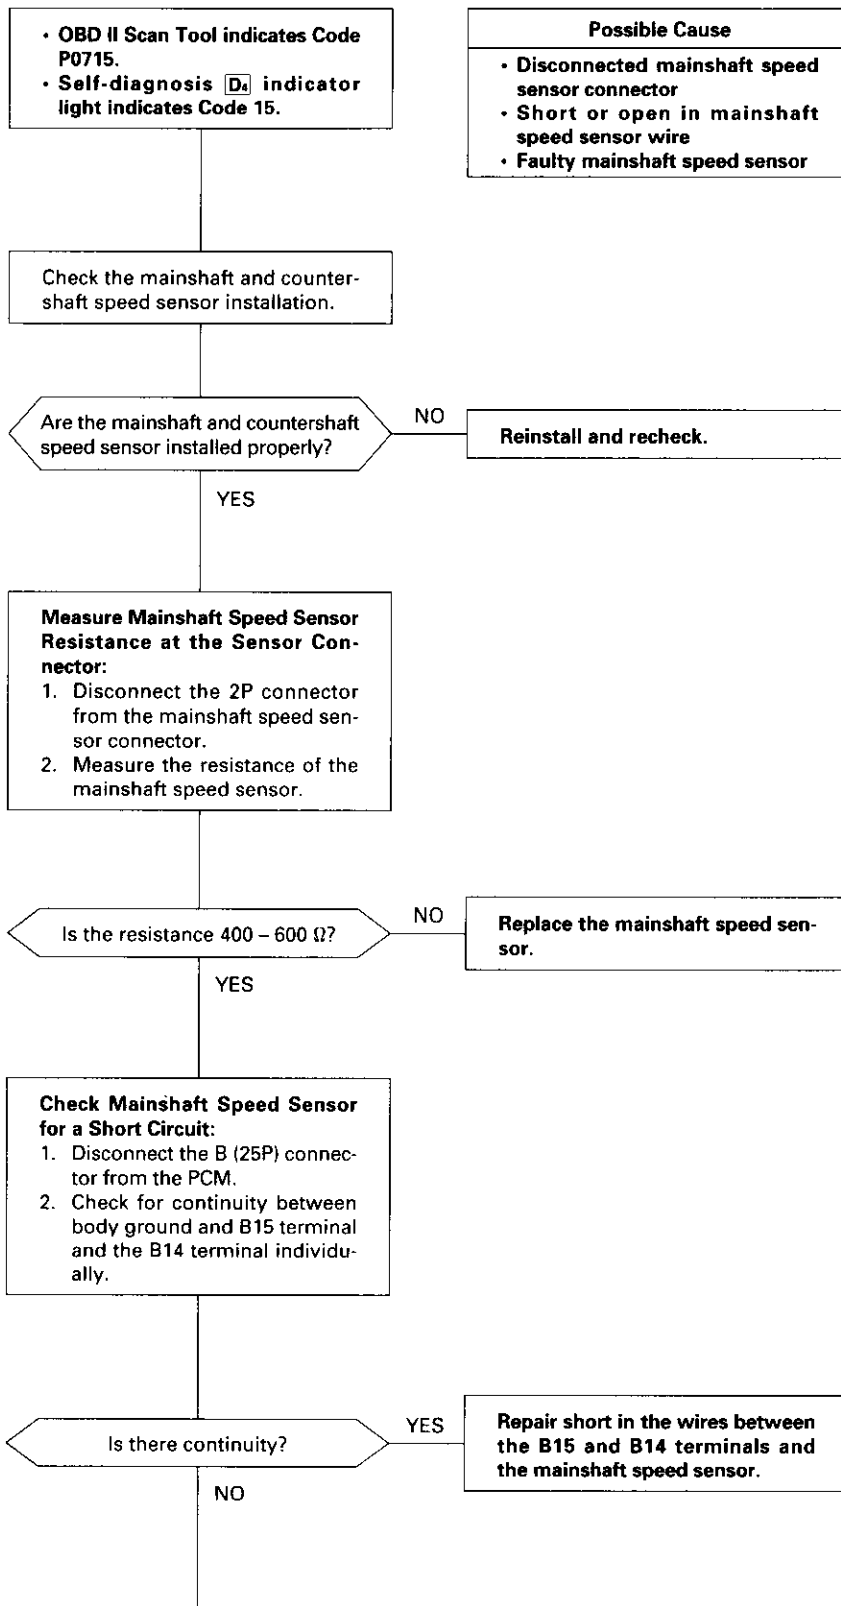


NOTE: Code P0715(15) on the PCM doesn't always mean there's an electrical problem in the mainshaft or countershaft speed sensor circuit; code P0715(15) may also indicate a mechanical problem in the transmission.

MAINSHAFT SPEED SENSOR CONNECTOR



TERMINAL SIDE OF MALE TERMINALS

PCM CONNECTOR B (25P)

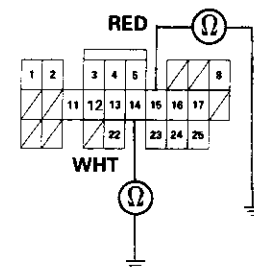

WIRE SIDE OF FEMALE TERMINALS



From page 14-64

Measure Mainshaft Speed Sensor Resistance:

1. Connect the mainshaft speed sensor 2P connector.
2. Measure the resistance between the B15 and B14 terminals.

Is the resistance 400 – 600 Ω ?

YES

Run the Electrical Troubleshooting Flowchart for code P0720 (9). Check for loose PCM connectors. If necessary, substitute a known-good PCM and recheck.

NO

Check NM Wire Continuity:

1. Disconnect the 2P connector from the mainshaft speed sensor connector.
2. Check for continuity between the B15 terminal and the No. 1 terminal of the mainshaft speed sensor connector.

Is there continuity?

NO

Repair open in the wire between the B15 terminal and the mainshaft speed sensor.

YES

Check NMSG Wire Continuity:
Check for continuity between the B14 terminal and the No. 2 terminal of the mainshaft speed sensor connector.

Is there continuity?


NO

Repair open in the wire between the B14 terminal and the mainshaft speed sensor.

YES



Check for loose PCM connectors. If necessary, substitute a known-good PCM and recheck.

PCM CONNECTOR B (25P)

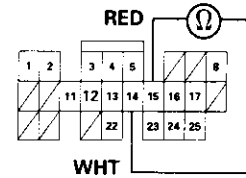

WIRE SIDE OF FEMALE TERMINALS

MAINSHAFT SPEED SENSOR CONNECTOR

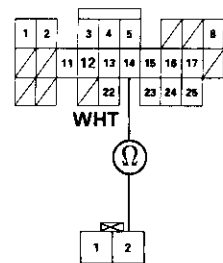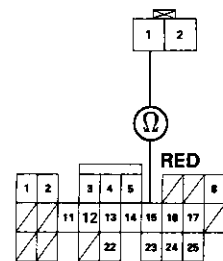

Electrical Troubleshooting

Troubleshooting Flowchart — Linear Solenoid

- OBD II Scan Tool indicates Code P1768.
- Self-diagnosis \square indicator light indicates Code 16.

- | Possible Cause |
|--|
| • Disconnected linear solenoid connector |
| • Short or open in linear solenoid wire |
| • Faulty linear solenoid |

- Measure Linear Solenoid Resistance at the Solenoid Connector:**
1. Turn the ignition switch OFF.
 2. Disconnect the 2P connector from the linear solenoid connector.
 3. Measure the resistance of the linear solenoid.

Is the resistance approx. 5.0 Ω ?

NO
Replace the linear solenoid assembly.

YES

- Check Linear Solenoid for a Short Circuit:**
1. Disconnect the B (25P) connector from the PCM.
 2. Check for continuity between the body ground and the B1 terminal and B2 terminal individually.

Is there continuity?

YES
Repair short in the wires between the B1 and B2 terminals and the linear solenoid.

NO

- Measure Linear Solenoid Resistance:**
1. Connect the linear solenoid connector.
 2. Measure the resistance between the B1 and B2 terminals.


Is the resistance approx. 5.0 Ω ?

NO
Repair loose terminal or open in the wires between the B1 and B2 terminals and the linear solenoid.

YES


To page 14-67

LINEAR SOLENOID CONNECTOR




TERMINAL SIDE OF MALE TERMINALS

PCM CONNECTOR B (25P)

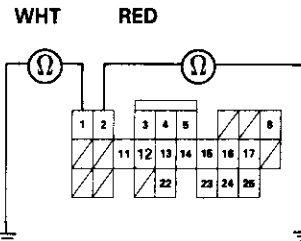

WIRE SIDE OF FEMALE TERMINALS

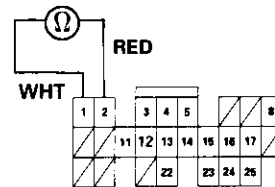



From page 14-66

Check the Ground Circuit:
Check for continuity between the A9 and A10 terminals.


Is there continuity? NO

- Repair open in the wire between the terminals A9 and A10 and G101.
- Repair loose junction connector.
- Repair poor ground (G101).

YES

Check for loose PCM connectors.
If necessary, substitute a known-good PCM and recheck.


PCM CONNECTOR A (32P)

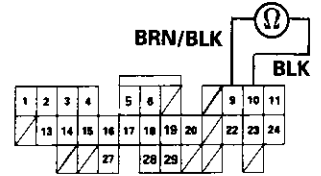

WIRE SIDE OF FEMALE TERMINALS


Electrical Troubleshooting

Troubleshooting Flowchart — Lock-up Control System

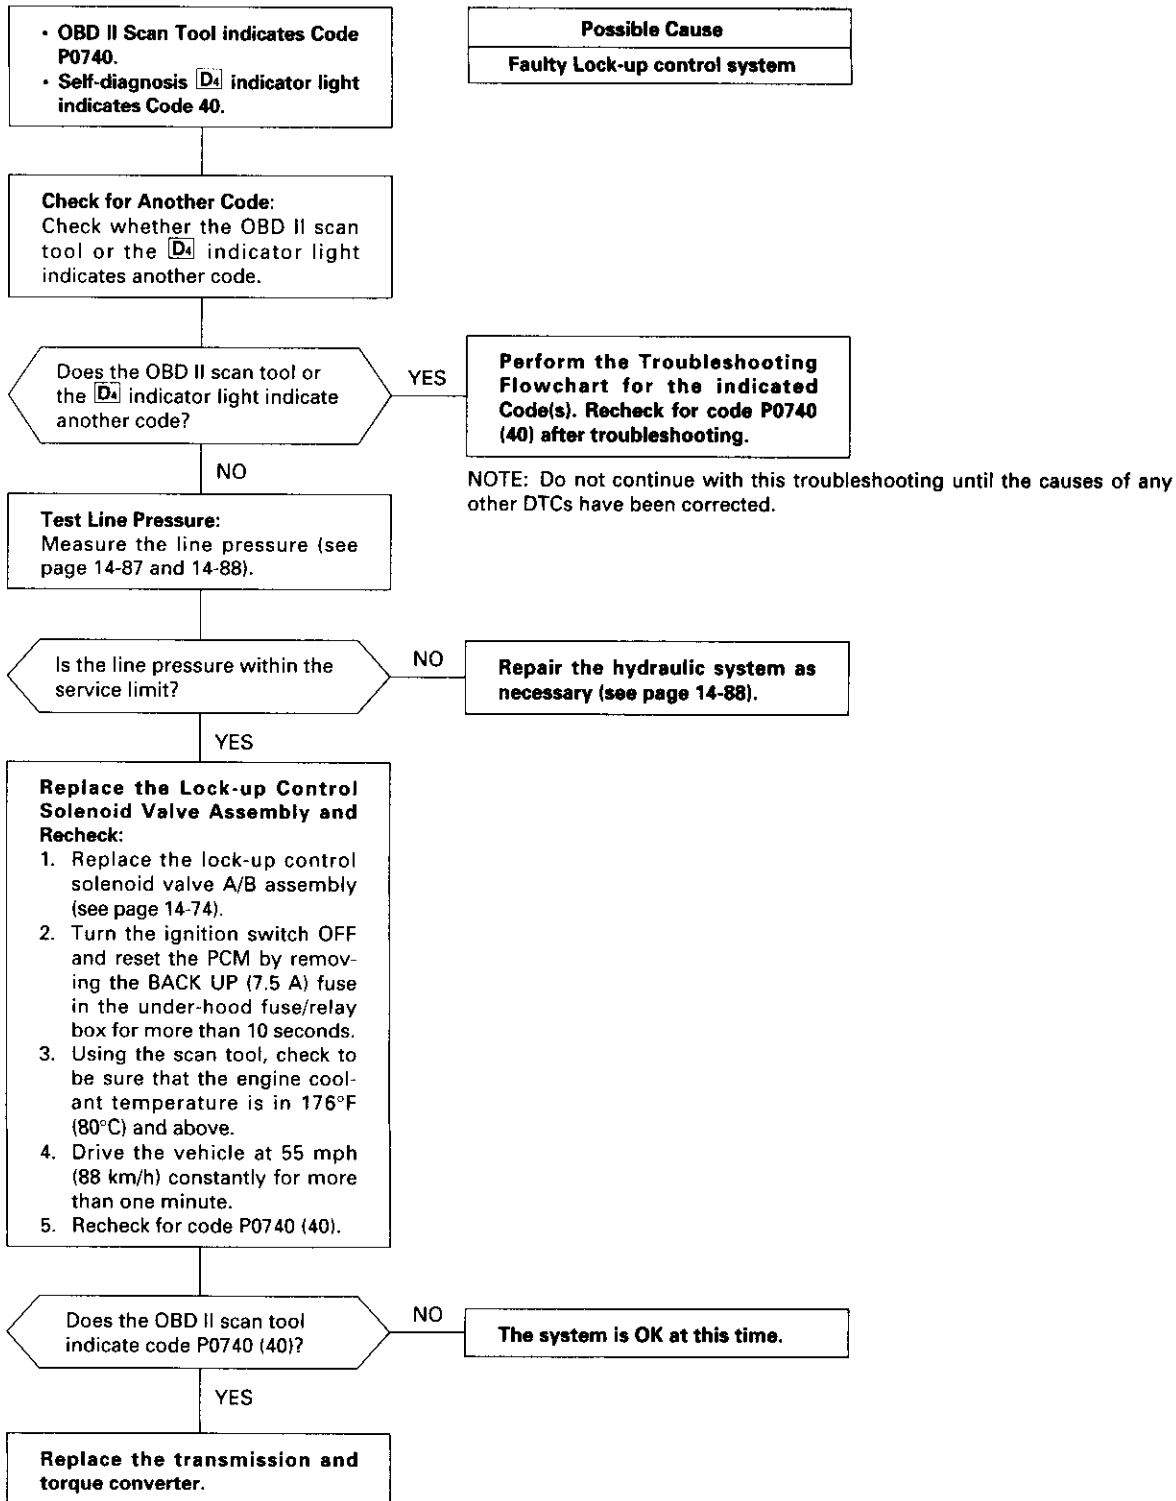




Troubleshooting Flowchart — Shift Control System

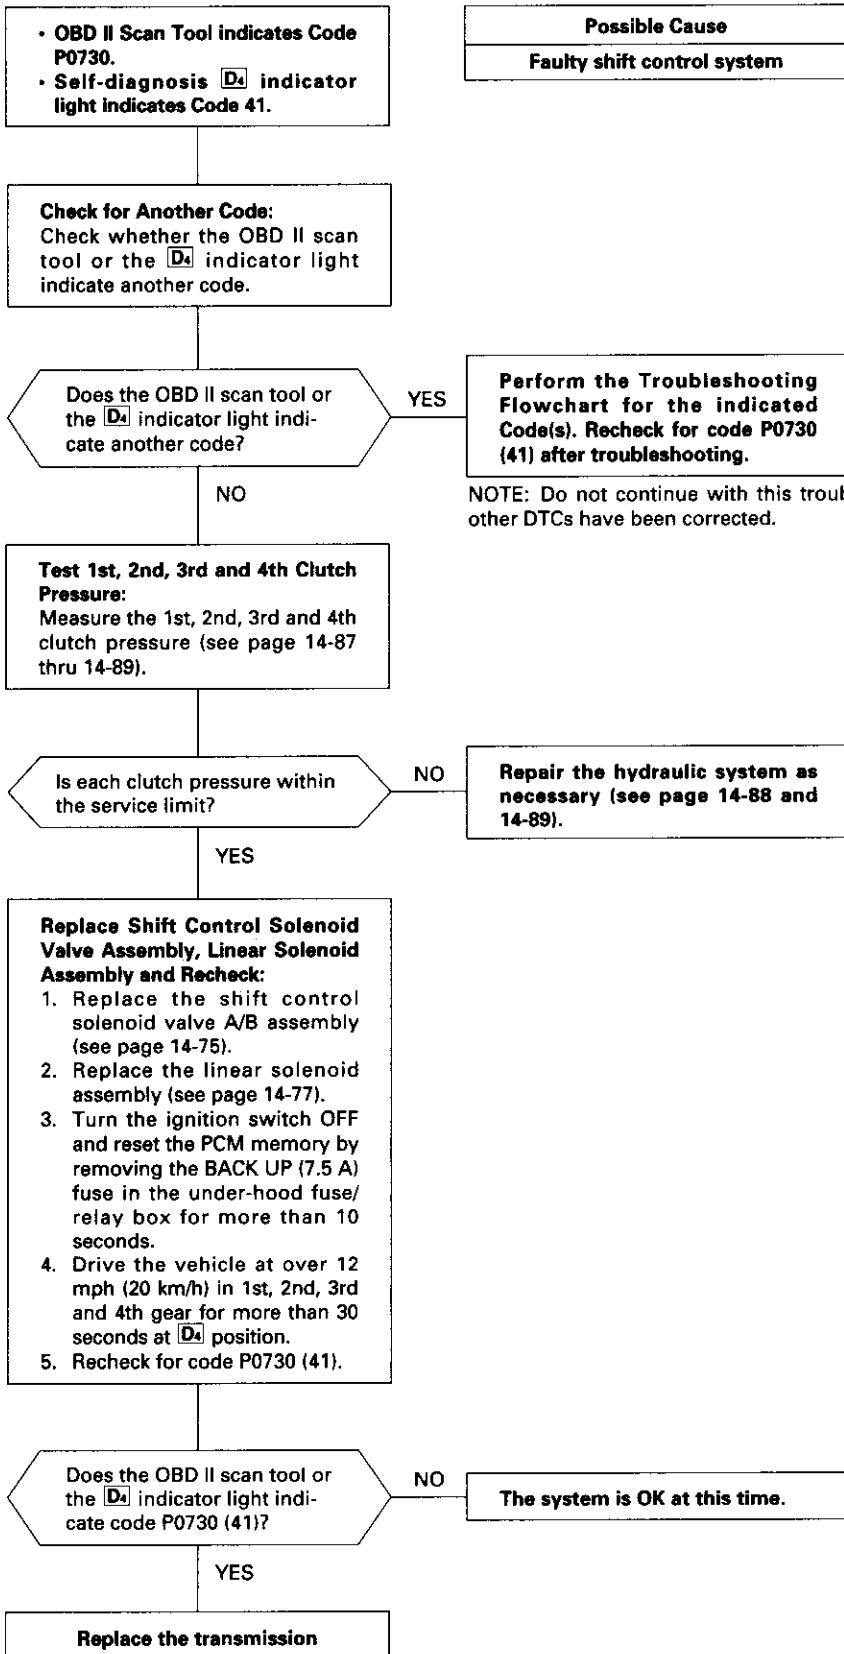


Electrical Troubleshooting

Troubleshooting Flowchart — **D₄** Indicator Light Does Not Come On

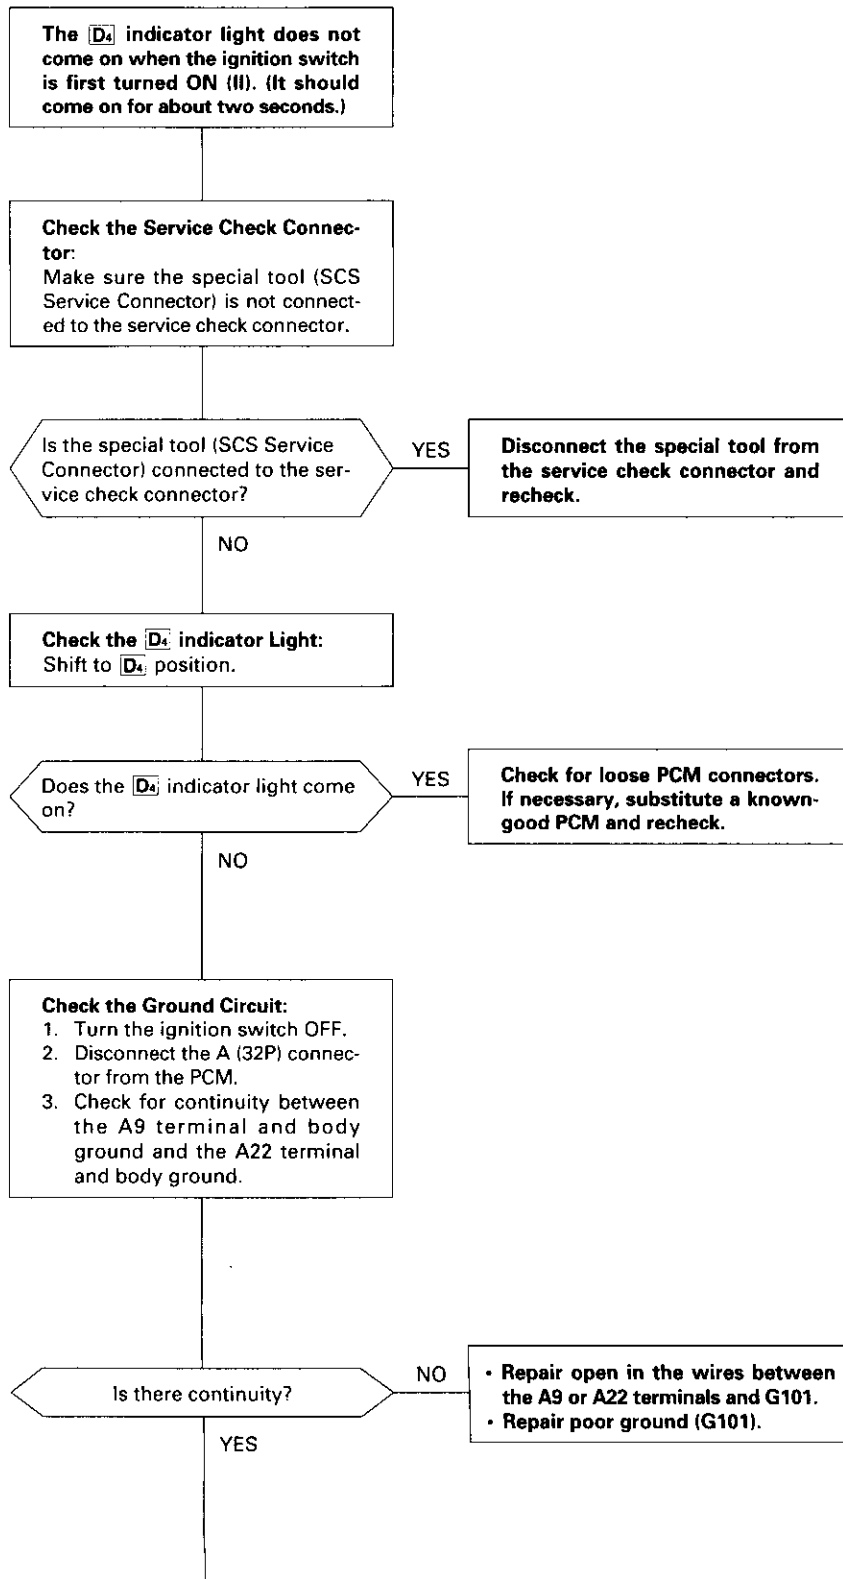

To page 14-71

PCM CONNECTOR A (32P)

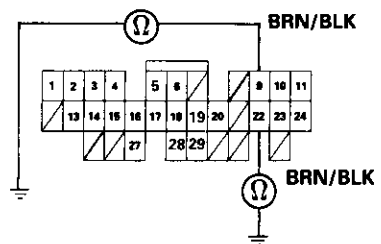

WIRE SIDE OF FEMALE TERMINALS



From page 14-70

Measure Power Supply Circuit Voltage:

1. Turn the ignition switch ON (II).
2. Measure the voltage between terminals A9 and A11 and between terminals A22 and A24.

Is there battery voltage?

NO

Repair open or short in the wire between the A11 and/or A24 terminals, the PGM-FI main relay, and the fuse box.

YES

Measure D4 IND Voltage:

1. Turn the ignition switch OFF.
2. Connect the A (32P) connector to the PCM.
3. Connect a digital multimeter to the B13 and A9 or A22 terminals.
4. Turn the ignition switch ON (II) and make sure that the voltage is available for two seconds.

Is there voltage?


YES

Check for open in the wire between the B13 terminal and the gauge assembly. If wire is OK, check for a faulty **D₄** indicator light bulb or a faulty gauge assembly printed circuit board.


NO

Check for loose PCM connectors. Check the A/T gear position switch. If necessary, substitute a known-good PCM and recheck.

PCM CONNECTOR A (32P)

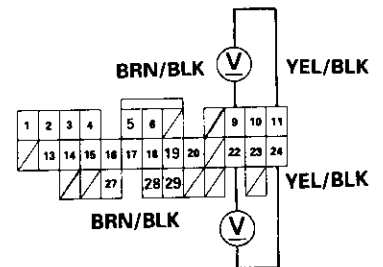

WIRE SIDE OF FEMALE TERMINALS

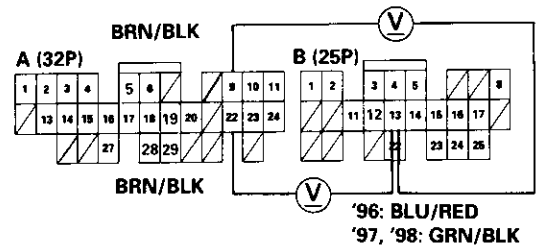

Electrical Troubleshooting

Troubleshooting Flowchart — **D₄** Indicator Light On Constantly

The **D₄** indicator light is on constantly (not blinking) whenever the ignition switch is ON (II).

Measure D4 IND Voltage:

1. Turn the ignition switch OFF.
2. Disconnect the B (25P) connector from the PCM.
3. Turn the ignition switch ON (II).
4. Measure the voltage between the B13 terminal and body ground.

Is there voltage?

YES Repair short to power in the wire between the B13 terminal and the gauge assembly.

NO

Measure ATP D4 Voltage:

1. Turn the ignition switch OFF.
2. Connect the B (25P) connector to the PCM.
3. Turn the ignition switch ON (II).
4. Shift to any position other than **D₄**.
5. Measure the voltage between the B24 terminal and body ground.


Is there voltage?

NO Check for a short to ground on the wire. If wire is OK, replace the A/T gear position indicator.


YES

Replace the PCM.

PCM CONNECTOR B (25P)


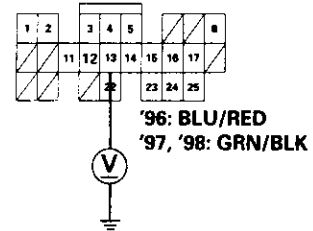


WIRE SIDE OF FEMALE TERMINALS

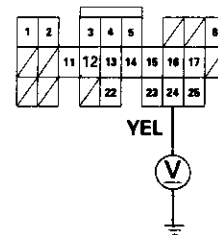



Troubleshooting Flowchart — Brake Switch Signal

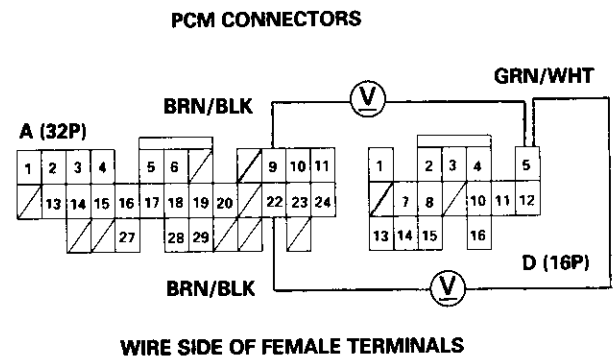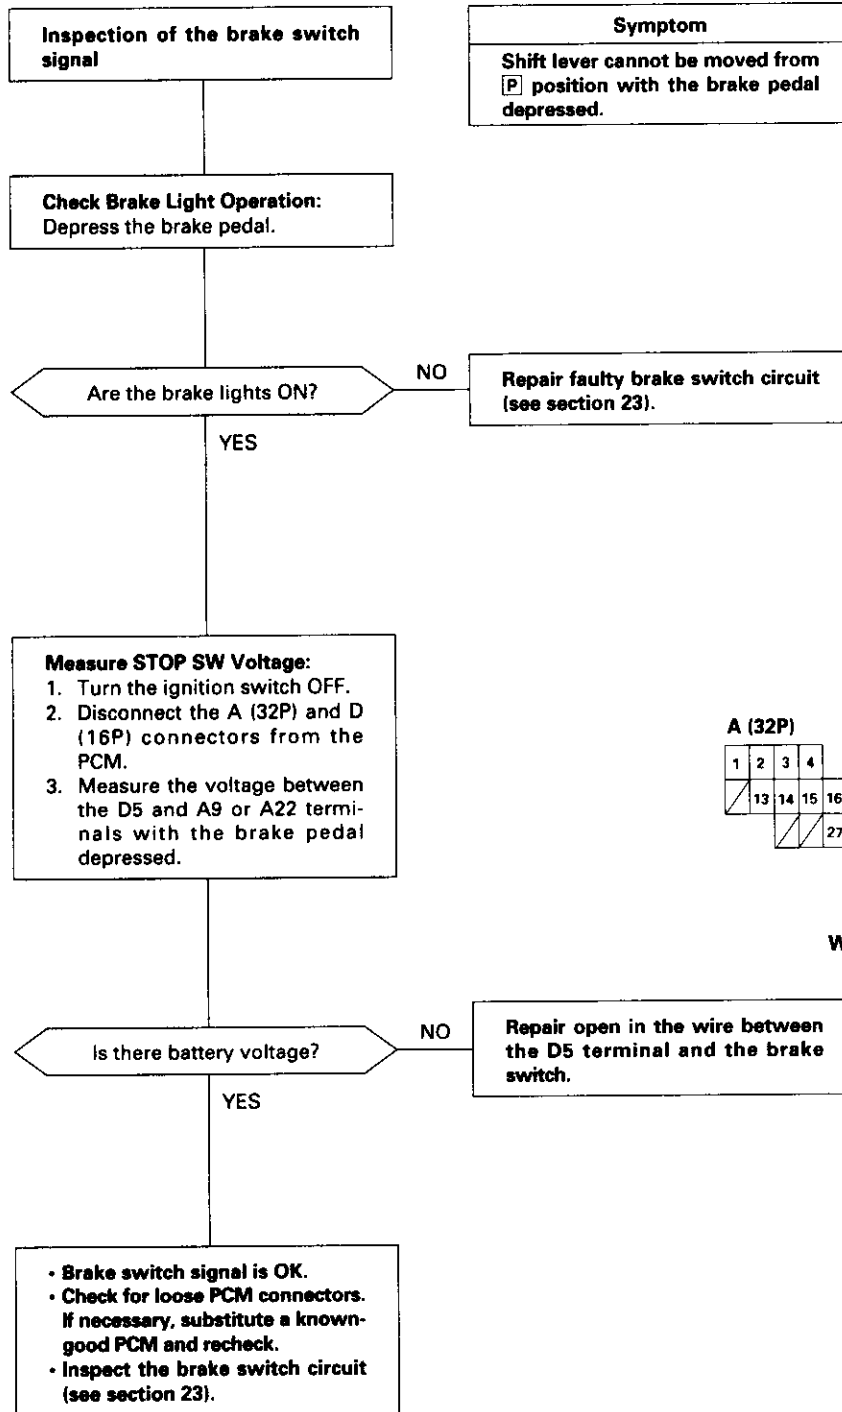


Lock-up Control Solenoid Valve A/B Assembly

Test

1. Disconnect the 2P connector from the lock-up control solenoid valve A/B assembly.

TERMINAL SIDE OF
MALE TERMINALS

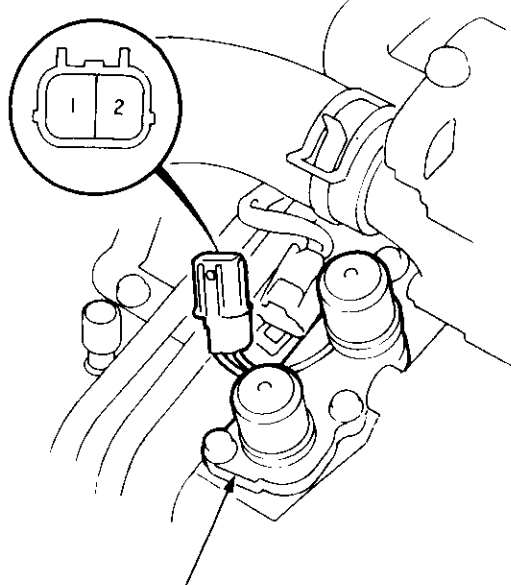

LOCK-UP CONTROL
SOLENOID VALVE A/B
ASSEMBLY

2. Measure the resistance between the No. 2 terminal (solenoid valve A) of the lock-up control solenoid valve connector and body ground, and between the No. 1 terminal (solenoid valve B) and body ground.

STANDARD: 12 - 25 Ω

3. Replace the lock-up control solenoid valve assembly if the resistance is out of specification.
4. If the resistance is within the standard, connect the No. 1 terminal of the lock-up control solenoid valve connector to the battery positive terminal. A clicking sound should be heard. Connect the No. 2 terminal to the battery positive terminal. A clicking sound should be heard. Replace the lock-up control solenoid valve assembly if no clicking sound is heard.


Replacement

NOTE: Lock-up control solenoid valves A and B must be removed/replaced as an assembly.

1. Remove the mounting bolts and lock-up control solenoid valve A/B assembly.

LOCK-UP CONTROL
SOLENOID VALVE
ASSEMBLY

6 x 1.0 mm
12 N·m (1.2 kgf·m, 8.7 lbf·ft)

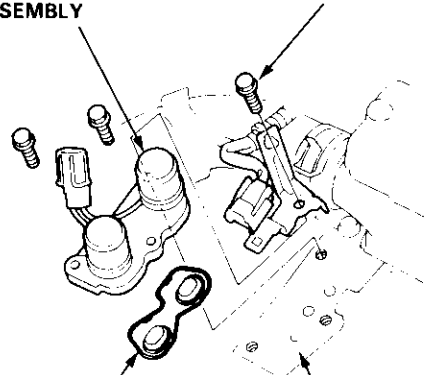

FILTER/GASKET
Replace.

Clean the mounting surface
and fluid passages.


2. Clean the mounting surface and fluid passages of the lock-up control solenoid valve assembly, and install a new lock-up control solenoid valve A/B with a new filter/gasket.
3. Check the connector for rust, dirt or oil, and reconnect it securely.

Shift Control Solenoid Valve A/B Assembly



Test

1. Disconnect the 2P connector from the shift control solenoid valve A/B assembly.

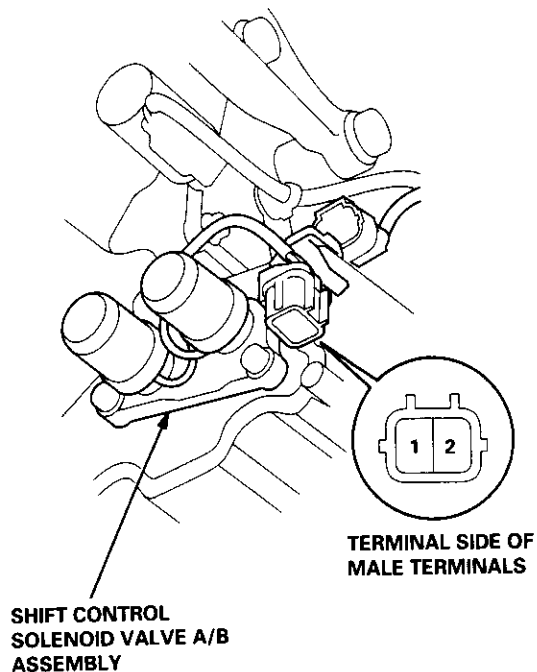

2. Measure the resistance between the No. 1 terminal (solenoid valve A) of the shift control solenoid valve connector and body ground, and between the No. 2 terminal (solenoid valve B) and body ground.


STANDARD: 12 – 25 Ω

3. Replace the shift control solenoid valve assembly if the resistance is out of specification.
4. If the resistance is within the standard, connect the No. 1 terminal of the shift control solenoid valve connector to the battery positive terminal. A clicking sound should be heard. Connect the No. 2 terminal to the battery positive terminal. A clicking sound should be heard. Replace the shift control solenoid valve assembly if no clicking sound is heard.

Replacement

NOTE: Shift control solenoid valves A and B must be removed/replaced as an assembly.

1. Remove the mounting bolts and shift control solenoid valve A/B assembly.

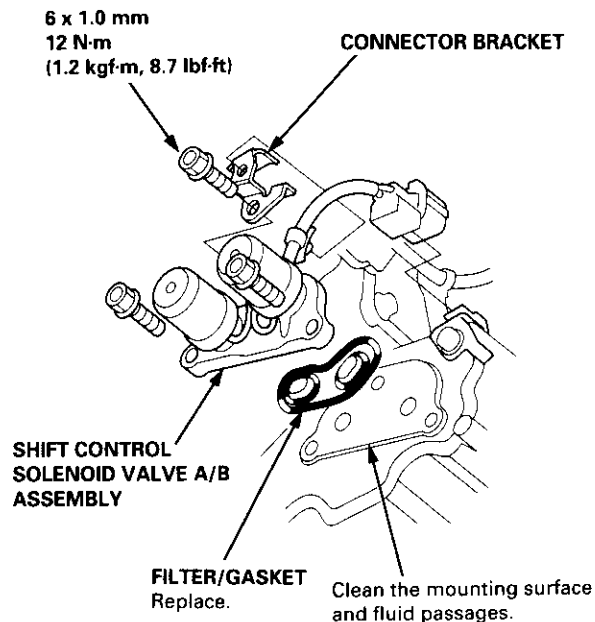


2. Clean the mounting surface and fluid passages of the shift control solenoid valve assembly, and install a new shift control solenoid valve A/B with a new filter/gasket and the clamp bracket.
3. Check the connector for rust, dirt or oil, and reconnect it securely.

Linear Solenoid Assembly

Test

1. Disconnect the linear solenoid connector.

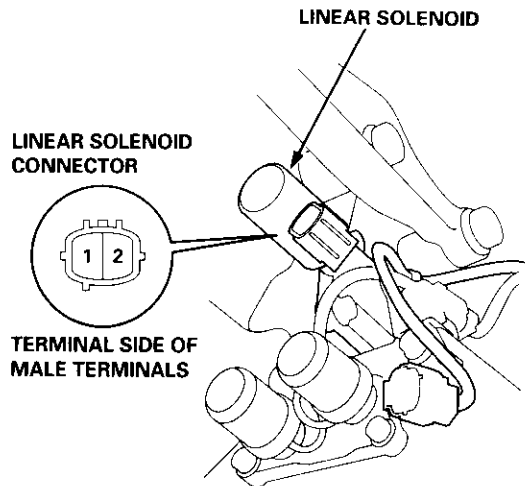


2. Measure the resistance between the No. 1 and the No. 2 terminals of the linear solenoid connector.

STANDARD: approx. 5 Ω

3. If the resistance is out of specification, replace the linear solenoid assembly.
4. Connect the No. 2 terminal of the linear solenoid connector to the battery positive terminal and connect the No. 1 terminal to the battery negative terminal. A clicking sound should be heard.

5. If not, remove the linear solenoid assembly.
6. Check that the linear solenoid fluid passage for dust or dirt.
7. Connect the No. 2 terminal of the linear solenoid connector to the battery positive terminal and connect the No. 1 terminal to the battery negative terminal. Check that the valve moves.
8. Disconnect one of the battery terminals and check that the valve releases.

NOTE: You can see the valve movement through the fluid passage in the mounting surface of the linear solenoid assembly.

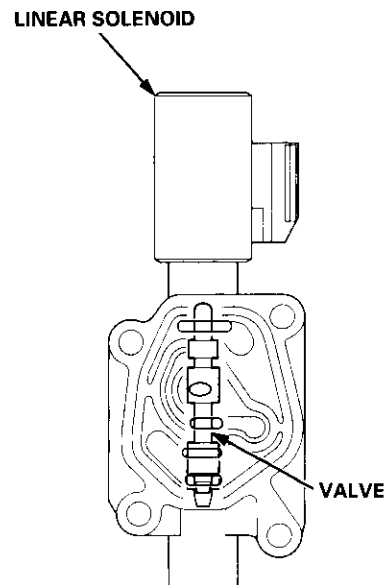


9. If the valve binds, or moves sluggishly, or the linear solenoid does not operate, replace the linear solenoid assembly.



Replacement

1. Remove the mounting bolts and the linear solenoid assembly.

Clean the mounting surface and fluid passages.

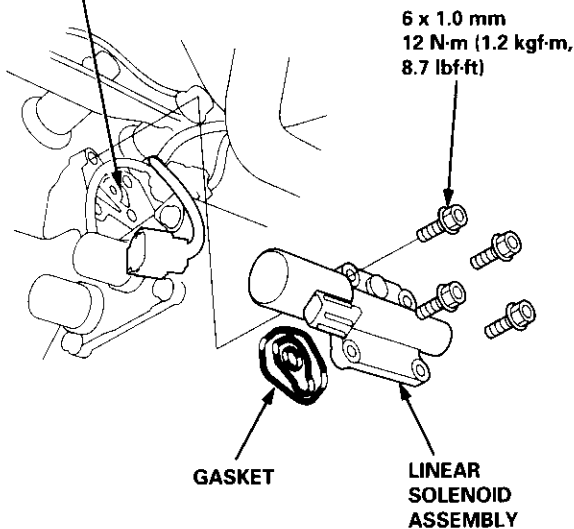


2. Clean the mounting surface and fluid passage of the linear solenoid assembly and transmission housing.
3. Install a new linear solenoid assembly with a new gasket.

NOTE: Do not pinch the gasket when installing the linear solenoid; make sure that the gasket is installed properly in the mounting groove of the linear solenoid.

4. Check the linear solenoid connector for rust, dirt or oil, and connect it securely.

Replacement

1. Remove the 6 mm bolt and the countershaft speed sensor from the right side cover.

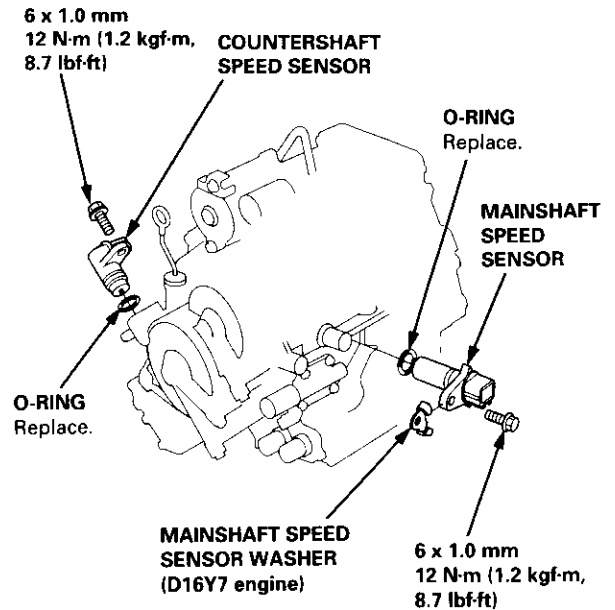

2. Remove the 6 mm bolt and the mainshaft speed sensor from the transmission housing.
3. Replace the O-ring with a new one before installing the countershaft speed sensor or the mainshaft speed sensor.

NOTE: Install the mainshaft speed sensor washer on the mainshaft speed sensor. The mainshaft speed sensor washer is used on models with the D16Y7 engine.

Symptom-to-Component Chart

Hydraulic System

SYMPTOM	Check these items on the PROBABLE CAUSE List	Check these items on the NOTES List
Engine runs, but vehicle does not move in any gear.	1, 2, 3, 5, 6, 7, 36, 38	K, L, R, S
Vehicle moves in [2] , [R] , but not in [D₃] , [D₄] position.	6, 8, 9, 10, 30, 54	C, M, O
Vehicle moves in [D₃] , [D₄] , [R] , but not in [2] position.	6, 11, 12, 24	C, L
Vehicle moves in [D₃] , [D₄] , [2] , but not in [R] position.	4, 6, 14, 15	C, L, Q
Vehicle moves in [N] position.	10, 12, 13, 14, 16, 29, 33, 34, 35	C, D
Excessive idle vibration.	1, 2, 19, 32, 36, 45, 47, 48	B, K, L
Poor acceleration; flares on starting off in [D₄] , [D₃] position		
Stall rpm high in [D₄] , [D₃] , [2] position.	1, 2, 3, 6, 38, 41	K, L, R
Stall rpm high in [D₄] , [D₃] position.	6, 8, 10	C, D
Stall rpm high in [2] position.	6, 12	C, D
Stall rpm is in specification.	14	N
Stall rpm low.	17, 32, 45, 47, 48	R
No shift	19, 20, 40, 48, 49	G, L
Fails to shift in [D₃] , [D₄] position; from 1st to 3rd gear	22, 49	
Fails to shift in [D₃] , [D₄] position; from 1st to 4th gear	22, 23, 48	
Erratic upshifting.		
1-2 upshift, 2-3 upshift, 3-4 upshift	58	
1-2 upshift	21, 48	
2-3 upshift	22, 49	
3-4 upshift	23, 48	
Harsh upshift (1-2).	12, 19, 20, 29, 50, 51, 57, 58	C, D, E
Harsh upshift (2-3).	13, 19, 20, 24, 27, 29, 50, 51, 57, 58	C, D, E, H, L
Harsh upshift (3-4).	14, 19, 20, 25, 28, 29, 50, 51, 57, 58	C, D, E, I, L
Harsh downshift (2-1).	19, 20, 24, 43, 54, 57, 58	O
Harsh downshift (3-2).	12, 19, 20, 25, 43, 55, 57, 58	C, D, E, H
Harsh downshift (4-3).	13, 19, 20, 26, 43, 56, 57, 58	C, D, E, I
Flares on 2-3 upshift.	13, 19, 20, 24, 27, 51	E, L
Flares on 3-4 upshift.	14, 19, 20, 25, 28, 51	E, L, N
Excessive shock on 2-3 upshift.	13, 19, 20, 24, 27, 43, 50, 51, 58	E, L, N
Excessive shock on 3-4 upshift.	14, 19, 20, 25, 28, 43, 50, 51, 58	E, L, N
Late shift from [N] position to [D₄] or [D₃] position.	10, 30	M
Late shift from [N] position to [R] position.	4, 14, 21, 53	Q
Noise from transmission in all shift lever positions.	2, 37	K, L, Q
Vehicle does not accelerate more than 31 mph (50 km/h).	17	
Shift lever does not operate smoothly.	6, 39	P
Fails to shift; stuck in 4th gear.	19, 48, 49	
Transmission will not shift into parking gear in [P] position.	6, 18, 39	P
Stall rpm high; all clutch pressures are in specification.	41	D, K, O
Lock-up clutch does not disengage.	19, 44, 45, 46, 47, 50, 51, 58	E, L
Lock-up clutch does not operate smoothly.	19, 41, 44, 45, 46, 47, 50, 51, 58	L
Lock-up clutch does not engage.	19, 41, 44, 45, 46, 47, 50, 51, 57, 58	E, L
Vibration in all positions	36	



PROBABLE CAUSE			
1	Low ATF.	41	Torque converter check valve stuck.
2	ATF pump worn or binding.	42	Foreign material in separator plate.
3	Regulator valve stuck.	43	CPB valve stuck.
4	Servo valve stuck.	44	Lock-up timing valve stuck.
5	Mainshaft worn/damaged.	45	Lock-up shift valve stuck.
6	Shift cable broken/out of adjustment.	46	Lock-up control valve stuck.
7	Final gears worn/damaged.	47	Lock-up piston defective.
8	One-way (sprag) clutch worn/damaged.	48	Shift control solenoid valve A defective.
9	1st gears worn/damaged (2 gears).	49	Shift control solenoid valve B defective.
10	1st clutch defective.	50	Lock-up control solenoid valve A defective.
11	2nd gears worn/damaged (2 gears).	51	Lock-up control solenoid valve B defective.
12	2nd clutch defective.	52	Servo control valve stuck.
13	3rd clutch defective.	53	1st accumulator defective.
14	4th clutch defective.	54	Foreign material in 2nd exhaust orifice.
15	Reverse gears worn/damaged (3 gears).	55	Foreign material in 3rd exhaust orifice.
16	Excessive ATF.	56	Foreign material in 4th exhaust orifice.
17	Torque converter one-way clutch defective.	57	Mainshaft speed sensor defective.
18	Paking mechanism defective.	58	Countershaft speed sensor defective.
19	Linear solenoid assembly defective.		
20	CPC valve stuck.		
21	1-2 shift valve stuck.		
22	2-3 shift valve stuck.		
23	3-4 shift valve stuck.		
24	2nd accumulator defective.		
25	3rd accumulator defective.		
26	4th accumulator defective.		
27	2nd orifice control valve stuck.		
28	3-4 orifice control valve stuck.		
29	Foreign material in main orifice.		
30	Foreign material in 1st orifice.		
31	Foreign material in reverse orifice.		
32	Engine output low.		
33	Needle bearing worn/damaged.		
34	Thrust washer worn/damaged.		
35	Clutch clearance incorrect.		
36	Drive plate defective or transmission misassembly.		
37	Torque converter housing or transmission housing bearing worn/damaged.		
38	ATF strainer clogged.		
39	Joint in shift cable and transmission or body worn.		
40	Modulator valve stuck.		

(cont'd)

Symptom-to-Component Chart

Hydraulic System (cont'd)

The following symptoms can be caused by improper repair or assembly	Check these items on the PROBABLE CAUSE DUE TO IMPROPER REPAIR List	Items on the NOTES List
Vehicle creeps in N position.	R1, R2	
Vehicle does not move in D₃ or D₄ position.	R4	
Transmission locks up in R position.	R3, R11	
Excessive drag in transmission.	R6	K, R
Excessive vibration, rpm related.	R7	
Noise with wheels moving only.	R5	
Main seal pops out.	R8	S
Various shifting problems.	R9, R10	

PROBABLE CAUSE DUE TO IMPROPER REPAIR	
R1.	Improper clutch clearance.
R2.	Improper gear clearance.
R3.	Parking brake lever installed upside down.
R4.	One-way (sprag) clutch installed upside down.
R5.	Reverse selector hub installed upside down.
R6.	ATF pump binding.
R7.	Torque converter not fully seated in ATF pump.
R8.	Main seal improperly installed.
R9.	Springs improperly installed.
R10.	Valves improperly installed.
R11.	Shift fork bolt not installed.



NOTES	
A.	See flushing procedure, page 14-155 and 156.
B.	Set idle rpm in gear to specified idle speed. If still no good, adjust motor mounts as outlined in engine section of this manual.
C.	If the large clutch piston O-ring is broken, inspect the piston groove for rough machining.
D.	If the clutch pack is seized or is excessively worn, inspect the other clutches for wear, and check the orifice control valves, CPC valve and linear solenoid for free movement.
E.	If the linear solenoid is stuck, inspect the clutches for wear.
G.	If the 1-2 shift valve is stuck closed, the transmission will not upshift. If stuck open, the transmission has no 1st gear.
H.	If the 2nd orifice control valve is stuck, inspect the 2nd and 3rd clutch packs for wear.
I.	If the 3-4 orifice control valve is stuck, inspect the 3rd and 4th clutch packs for wear.
J.	If the clutch pressure control valve is stuck closed, the transmission will not shift out of 1st gear.
K.	Improper alignment or main valve body and torque converter housing may cause ATF pump seizure. The symptoms are mostly an rpm-related ticking noise or a high-pitched squeak.
L.	If the ATF strainer is clogged with particles of steel or aluminum, inspect the ATF pump and differential pinion shaft. If both are OK and no cause for the contamination is found, replace the torque converter.
M.	If the 1st clutch feed pipe guide in the right side cover is scored by the mainshaft, inspect the ball bearing for excessive movement in the transmission housing. If OK, replace the right side cover as it is dented. The O-ring under the guide is probably worn.
N.	<ul style="list-style-type: none">• Replace the mainshaft if the bushing for the 4th feed pipe is loose or damaged. If the 4th feed pipe is damaged or out of round, replace the right side cover.• Replace the mainshaft if the bushing for the 1st feed pipe is loose or damaged. If the 1st feed pipe is damaged or out of round, replace it.
O.	A worn or damaged sprag clutch is mostly a result of shifting the transmission in D_3 or D_4 position while the wheels rotate in reverse, such as rocking the vehicle in snow.
P.	Inspect the frame for collision damage.
Q.	Inspect for damage and wear: <ol style="list-style-type: none">1. Reverse selector gear teeth chamfers.2. Engagement teeth chamfers of countershaft 4th and reverse gear.3. Shift fork for scuff marks in center.4. Differential pinion shaft for wear under pinion gears.5. Bottom of 3rd clutch for swirl marks. Replace items 1, 2, 3 and 4 if worn or damaged. If transmission makes a clicking, grinding or whirring noise, also replace mainshaft 4th gear, reverse idler gear, and countershaft 4th gear in addition to 1, 2, 3 or 4. If differential pinion shaft is worn, overhaul differential assembly, and replace ATF strainer, and thoroughly clean transmission, flush torque converter, cooler and lines. If bottom of 3rd clutch is swirled and transmission makes gear noise, replace the countershaft and final driven gear.
R.	Be very careful not to damage the torque converter housing when replacing the main ball bearing. You may also damage the ATF pump when you torque down the main valve body. This will result in ATF pump seizure if not detected. Use the proper tools.
S.	Install the main seal flush with the torque converter housing. If you push it into the torque converter housing until it bottoms out, it will block the fluid return passage and result in damage.


Road Test

NOTE: Warm up the engine to normal operating temperature (the radiator fan comes on).


1. Apply parking brake and block the wheels. Start the engine, then shift to **D₄** position while depressing the brake pedal. Depress the accelerator pedal and release it suddenly. The engine should not stall.
2. Repeat same test in **D₃** position.
3. Test-drive the vehicle on a flat road in the **D₄** position. Check that the shift points occur at approximate speeds shown on a flat road. Also check for abnormal noise and clutch slippage.

NOTE: Throttle position sensor voltage represents the throttle opening.

- a. Unbolt the PCM for road testing; refer to page 14-46.
- b. Set the digital multimeter to check voltage between D1 (+) terminal and A9 (-) or A22 (-) terminal of the PCM for the throttle position sensor.

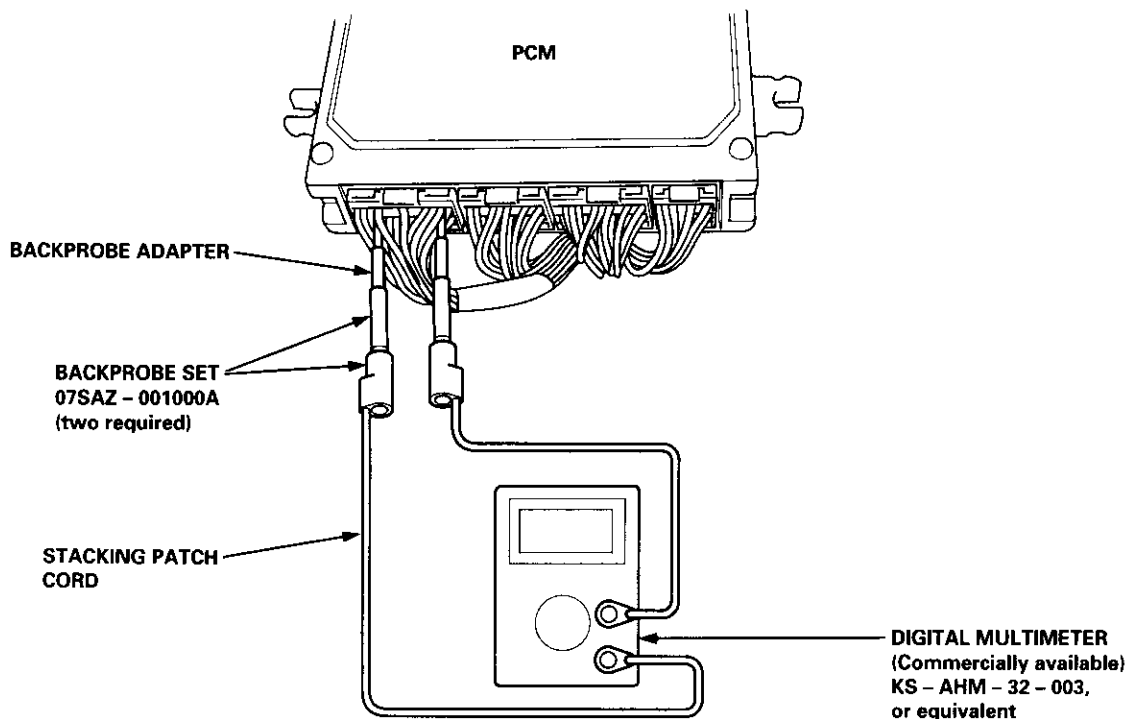

PCM CONNECTORS

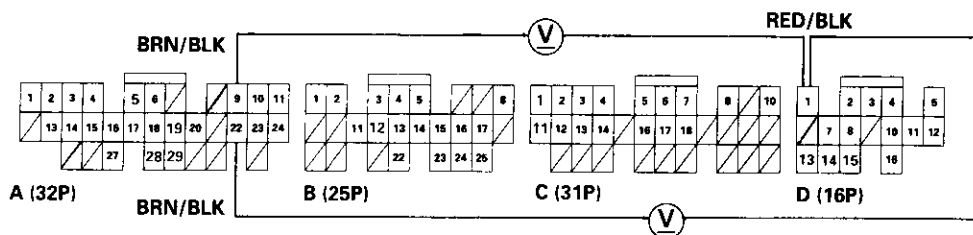

WIRE SIDE OF FEMALE TERMINALS



D₄ Position: D16Y7 engine

● **Upshift**

Throttle Opening	Unit of speed	1st → 2nd	2nd → 3rd	3rd → 4th	Lock-up ON
Throttle position sensor voltage: 0.75 V	mph	9 – 12	20 – 23	28 – 32	21 – 24
	km/h	15 – 19	32 – 37	45 – 52	34 – 39
Throttle position sensor voltage: 2.25 V	mph	21 – 25	40 – 45	59 – 65	62 – 67
	km/h	34 – 40	65 – 73	95 – 104	99 – 108
Fully-opened throttle Throttle position sensor voltage: 4.5 V	mph	33 – 38	63 – 71	101 – 112	99 – 109
	km/h	53 – 61	102 – 115	163 – 180	159 – 176

● **Downshift**

Throttle Opening	Unit of speed	Lock-up OFF	4th → 3rd	3rd → 2nd	2nd → 1st
Fully-closed throttle Throttle position sensor voltage: 0.5 V	mph	19 – 22	17 – 20	6 – 9 (3rd → 1st)	
	km/h	30 – 35	27 – 32	10 – 15 (3rd → 1st)	
Fully-opened throttle Throttle position sensor voltage: 4.5 V	mph	95 – 105	85 – 95	54 – 61	25 – 30
	km/h	153 – 169	137 – 153	87 – 98	40 – 48

D₄ Position: D16Y8 engine

● **Upshift**

Throttle Opening	Unit of speed	1st → 2nd	2nd → 3rd	3rd → 4th	Lock-up ON
Throttle position sensor voltage: 0.75 V	mph	9 – 12	20 – 23	28 – 32	21 – 24
	km/h	15 – 19	32 – 37	45 – 52	34 – 39
Throttle position sensor voltage: 2.25 V	mph	21 – 25	40 – 45	59 – 65	62 – 67
	km/h	34 – 40	65 – 73	95 – 104	99 – 108
Fully-opened throttle Throttle position sensor voltage: 4.5 V	mph	32 – 37	62 – 70	96 – 107	95 – 106
	km/h	52 – 60	100 – 113	155 – 172	153 – 170

● **Downshift**

Throttle Opening	Unit of speed	Lock-up OFF	4th → 3rd	3rd → 2nd	2nd → 1st
Fully-closed throttle Throttle position sensor voltage: 0.5 V	mph	19 – 22	17 – 20	6 – 9 (3rd → 1st)	
	km/h	30 – 35	27 – 32	10 – 15 (3rd → 1st)	
Fully-opened throttle Throttle position sensor voltage: 4.5 V	mph	91 – 101	85 – 95	54 – 61	25 – 30
	km/h	147 – 163	137 – 153	87 – 98	40 – 48

NOTE:

- Lock-up ON: The lock-up control solenoid valve A turns ON.
- Lock-up OFF: The lock-up control solenoid valve A turns OFF.

(cont'd)

Road Test

(cont'd)

4. Accelerate to about 35 mph (57 km/h) so the transmission is in 4th, then shift from **D₄** position to **2** position. The vehicle should immediately begin slowing down from engine braking.

CAUTION: Do not shift from **D₄ or **D₃** position to **2** position at speeds over 63 mph (100 km/h); you may damage the transmission.**

5. Check for abnormal noise and clutch slippage in the following positions.

2 (2nd Gear) Position

- a. Accelerate from a stop at full throttle. Check that there is no abnormal noise or clutch slippage.
- b. Upshifts and downshifts should not occur with the selector in this position.

R (Reverse) Position

Accelerate from a stop at full throttle, and check for abnormal noise and clutch slippage.

6. Test in **P** (Parking) Position

Park the vehicle on slope (approx. 16°), apply the parking brake, and shift into **P** position. Release the brake; the vehicle should not move.



Stall Speed

Test

CAUTION:

- To prevent transmission damage, do not test stall speed for more than 10 seconds at a time.
- Do not shift the lever while raising the engine speed.
- Be sure to remove the pressure gauge before testing stall speed.

1. Engage the parking brake, and block the front wheels.
2. Connect a tachometer to the engine, and start the engine.
3. Make sure the A/C switch is OFF.
4. After the engine has warmed up to normal operating temperature (the radiator fan comes on), shift into **[2]** position.
5. Fully depress the brake pedal and accelerator for 6 to 8 seconds, and note engine speed.
6. Allow two minutes for cooling, then repeat the test in **[D₄]** and **[R]** positions.

NOTE:

- Stall speed tests should be used for diagnostic purposes only.
- Stall speed should be the same in **[D₄]**, **[2]** and **[R]** positions.

Stall Speed RPM:

Specification: 2,700 rpm

Service Limit: 2,550 – 2,850 rpm

TROUBLE	PROBABLE CAUSE
Stall rpm high in [D₄] , [2] and [R] positions	<ul style="list-style-type: none"> • Low fluid level or ATF pump output • Clogged ATF strainer • Pressure regulator valve stuck closed • Slipping clutch
Stall rpm high in [R] position	<ul style="list-style-type: none"> • Slippage of 4th clutch
Stall rpm high in [2] position	<ul style="list-style-type: none"> • Slippage of 2nd clutch
Stall rpm high in [D₄] position	<ul style="list-style-type: none"> • Slippage of 1st clutch or 1st gear one-way clutch
Stall rpm low in [D₄] , [2] and [R] positions	<ul style="list-style-type: none"> • Engine output low • Torque converter one-way clutch slipping

Fluid Level

Checking/Changing


CAUTION: While checking and changing, be sure not to allow dust and other foreign particles to enter into the transmission.

Checking


CAUTION: Keep all of the foreign particles out of the transmission.

NOTE: Check the fluid level with the engine at normal operating temperature (the radiator fan comes on).

1. Park the vehicle on level ground. Turn off the engine.
2. Remove the dipstick (yellow loop) from the transmission, and wipe it with a clean cloth.

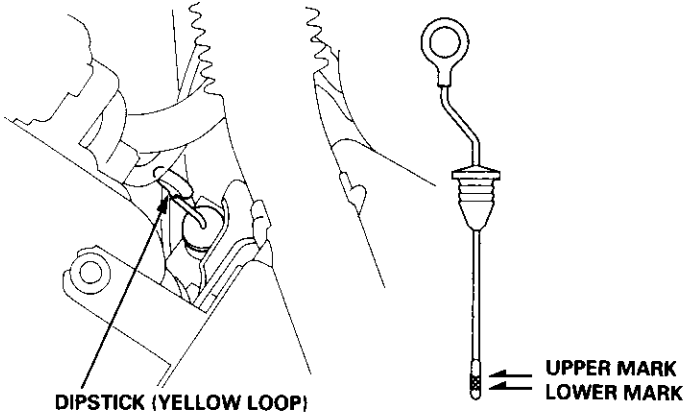

3. Insert the dipstick into the transmission.
4. Remove the dipstick and check the fluid level. It should be between the upper and lower marks.
5. If the level is below the lower mark, pour the recommended fluid* into the filler hole to bring it to the upper mark.
6. Insert the dipstick back into the transmission in the direction shown.

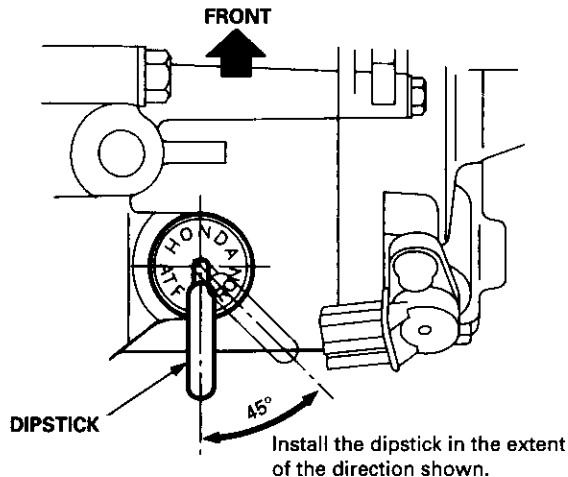

Changing

CAUTION: Keep all of the foreign particles out of the transmission.

1. Bring the transmission up to operating temperature by driving the vehicle. Park the vehicle on level ground, turn the engine off, then remove drain plug.


NOTE: If a cooler flusher is to be used, see page 14-155 and 156.

2. Reinstall the drain plug with a new sealing washer, then refill the transmission with the recommended fluid* to the upper mark on the dipstick.

Automatic Transmission Fluid Capacity:
2.7 l (2.9 US qt, 2.4 Imp qt) at change
5.9 l (6.2 US qt, 5.2 Imp qt) at overhaul

Recommended Automatic Transmission Fluid:
Genuine Honda Premium Formula Automatic Transmission Fluid (ATF)*.

TRANSMISSION RIGHT SIDE COVER

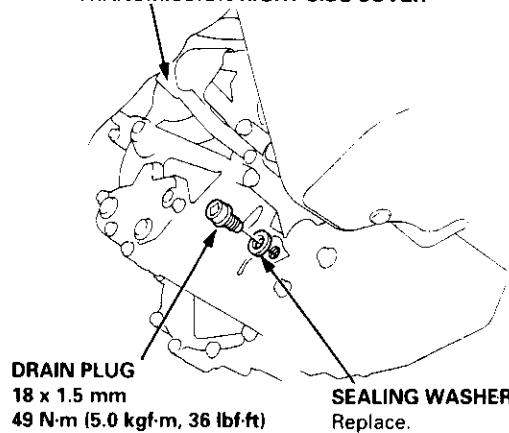

* Always use Genuine Honda Premium Formula Automatic Transmission Fluid (ATF). Using a non-Honda ATF can affect shift quality.

Pressure Testing



⚠ WARNING

- While testing, be careful of the rotating front wheels.
- Make sure lifts, jacks, and safety stands are placed properly (see section 1).


CAUTION:

- Before testing, be sure the transmission fluid is filled to the proper level.
- Warm up the engine before testing.


1. Raise the vehicle (see section 1).
2. Warm up the engine, then stop the engine and connect a tachometer.
3. Connect the oil pressure gauges to each inspection hole.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)


CAUTION: Connect the oil pressure gauges securely; be sure not to allow dust and other foreign particles to enter the inspection holes.

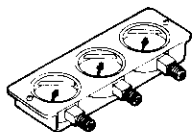


**A/T OIL PRESSURE GAUGE
SET W/PANEL
07406 - 0020400**



**A/T OIL PRESSURE HOSE
ADAPTER
07MAJ - PY40120
(4 required)**



**A/T LOW PRESSURE GAUGE
SET W/PANEL
07406 - 0070300**

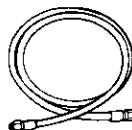

**A/T OIL PRESSURE HOSE
2210 mm
07MAJ - PY4011A
(4 required)**

4. Start the engine, and measure the respective pressure as follows.
 - Line Pressure
 - 1st Clutch Pressure
 - 2nd, 3rd and 4th Clutch Pressure
5. Install a new washer and the sealing bolt in the inspection hole, and tighten to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

NOTE: Do not reuse old sealing washers; always replace washers.

(cont'd)

Pressure Testing


(cont'd)

● **Line Pressure/1st Clutch Pressure Measurement**

1. Set the parking brake, and block both rear wheels securely.
2. Run the engine at 2,000 rpm.
3. Shift to **N** or **P** position, then measure line pressure.

NOTE: Higher pressure may be indicated if measurements are made in shift lever positions other than **N** or **P** position.

4. Shift to **D₁** position, then measure 1st clutch pressure.

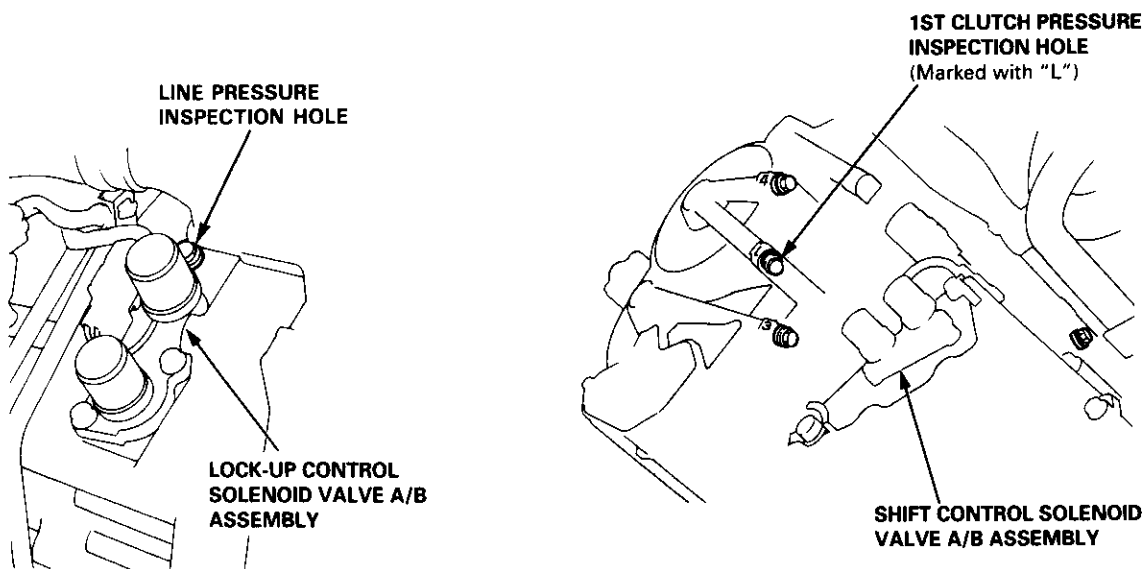


PRESSURE	SHIFT LEVER POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
Line	N or P	No (or low) line pressure	Torque converter, ATF pump, pressure regulator, torque converter check valve	830 – 880 kPa (8.5 – 9.0 kgf/cm ² , 120 – 130 psi)	780 kPa (8.0 kgf/cm ² , 110 psi)
1st Clutch	D₁	No or low 1st pressure	1st Clutch		




● **2nd, 3rd and 4th Clutch Pressure Measurement**

1. Set the parking brake, and block both rear wheels securely.
2. Disconnect the linear solenoid connector.
3. Start the engine, and run the engine at 2,000 rpm.
4. Shift to **D₄** position, and measure each clutch pressure.
5. Connect battery voltage and ground to the linear solenoid connector terminals, then measure each clutch pressure.

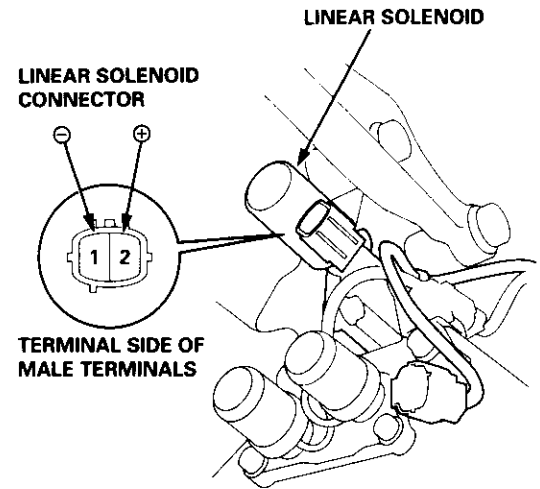

4TH CLUTCH PRESSURE INSPECTION HOLE
(Marked with "4")

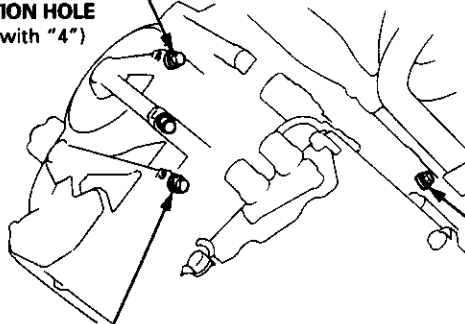

2ND CLUTCH PRESSURE INSPECTION HOLE

3RD CLUTCH PRESSURE INSPECTION HOLE
(Marked with "3")

PRESSURE	SHIFT LEVER POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
2nd Clutch	D₄	No or low 2nd pressure	2nd Clutch	800 – 850 kPa (8.2 – 8.7 kgf/cm ² , 120 – 124 psi) with the linear solenoid disconnected	760 kPa (7.7 kgf/cm ² , 110 psi) with the linear solenoid disconnected
				0 – 150 kPa (0 – 1.5 kgf/cm ² , 0 – 21 psi) with the linear solenoid connected to battery voltage and ground	Above 150 kPa (1.5 kgf/cm ² , 21 psi) with the linear solenoid connected to battery voltage and ground
3rd Clutch	D₄	No or low 3rd pressure	3rd Clutch	810 – 860 kPa (8.3 – 8.8 kgf/cm ² , 118 – 125 psi) with the linear solenoid disconnected	765 kPa (7.8 kgf/cm ² , 111 psi) with the linear solenoid disconnected
4th Clutch		No or low 4th pressure	4th Clutch	0 – 150 kPa (0 – 1.5 kgf/cm ² , 0 – 21 psi) with the linear solenoid connected to battery voltage and ground	Above 150 kPa (1.5 kgf/cm ² , 21 psi) with the linear solenoid connected to battery voltage and ground
	R		Servo Valve or 4th Clutch		

Transmission

Removal

▲ WARNING

- Make sure lifts, jacks and safety stands are placed properly, and hoist bracket are attached to the correct position on the engine (see section 1).
- Apply parking brake and block rear wheels so vehicle will not roll off stands and fall on you while working under it.

CAUTION: Use fender covers to avoid damaging painted surfaces.

1. Disconnect the battery negative (-) terminal from the battery, then remove the positive (+) terminal.
2. Remove the intake air duct.


D16Y7 engine:

Remove the intake air duct and resonator.


D16Y8 engine:

Remove the intake air duct and the air cleaner housing assembly.


3. Remove the starter cables and cable holder from the starter motor.

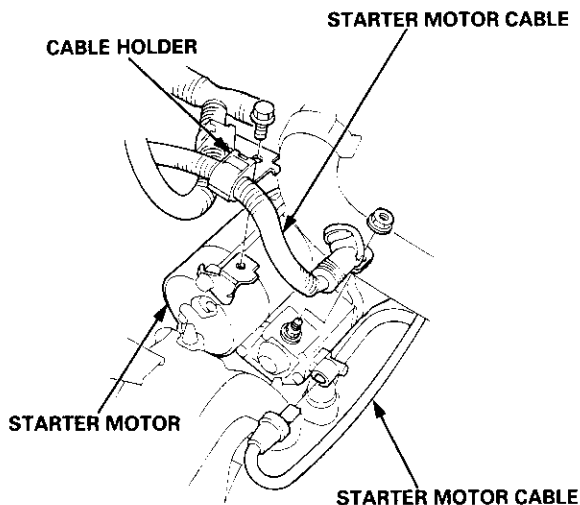

4. Remove the transmission ground cable, and disconnect the lock-up control solenoid connector.

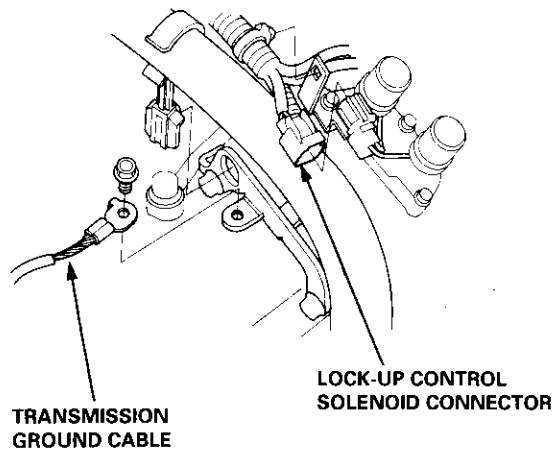


5. Disconnect the vehicle speed sensor (VSS) connector and the countershaft speed sensor connector.

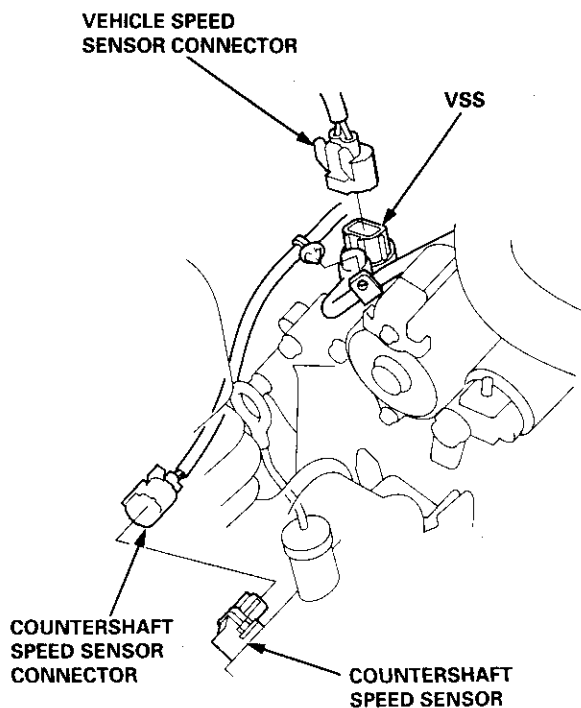



6. Remove the transmission housing mounting bolts and the rear engine mounting bolt.

REAR ENGINE MOUNTING BOLT
Replace.

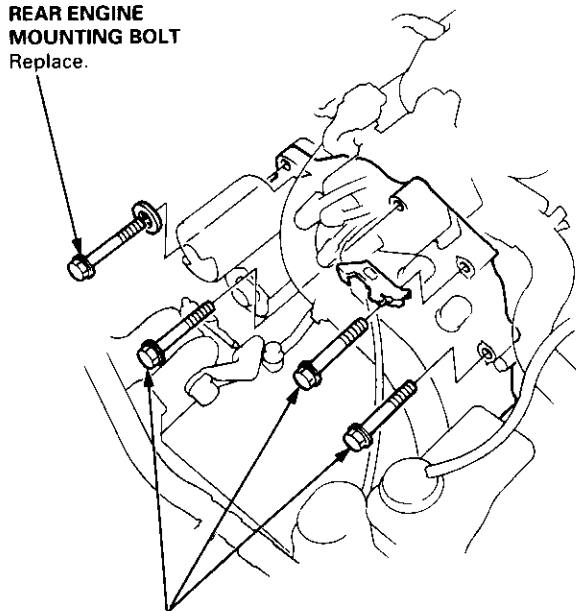


TRANSMISSION HOUSING MOUNTING BOLTS

7. Disconnect the shift control solenoid, the linear solenoid, and the mainshaft speed sensor connectors.

SHIFT CONTROL SOLENOID CONNECTOR


LINEAR SOLENOID CONNECTOR

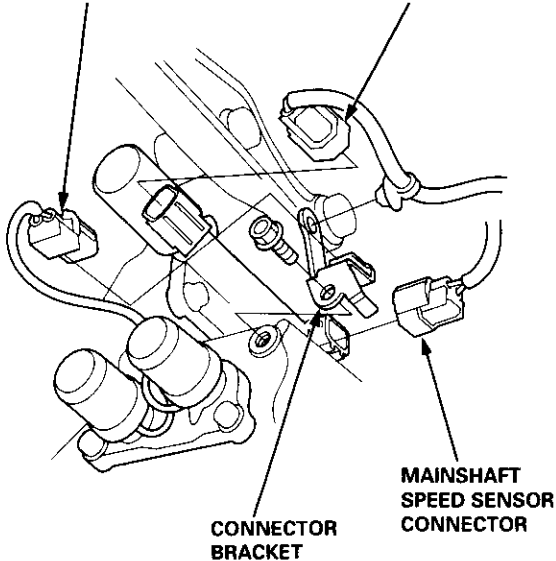

MAINSHAFT SPEED SENSOR CONNECTOR

CONNECTOR BRACKET


8. Remove the drain plug, and drain the automatic transmission fluid (ATF). Reinstall the drain plug with a new sealing washer.

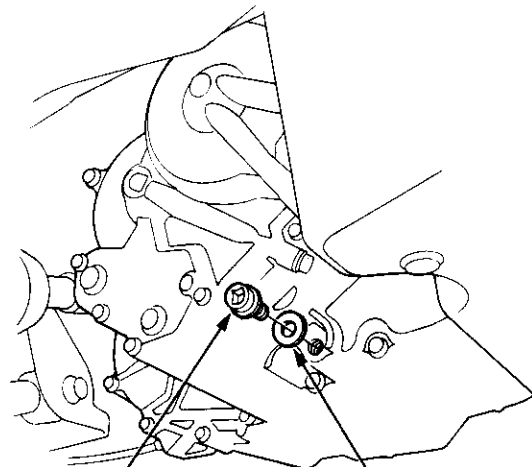

DRAIN PLUG
18 x 1.5 mm
49 N·m (5.0 kgf·m, 36 lbf·ft)

SEALING WASHER
Replace.

9. Remove the splash shield.

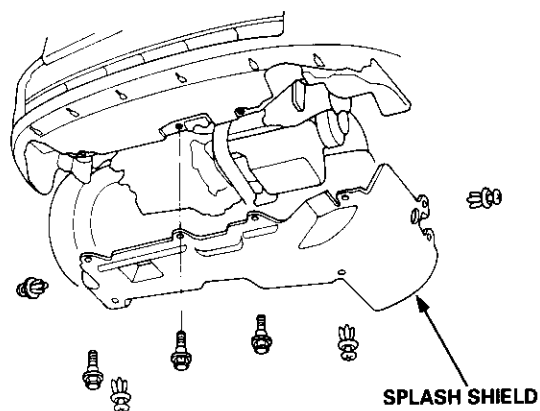


SPLASH SHIELD

(cont'd)

Transmission

Removal (cont'd)

10. Remove the cotter pins and castle nuts, then separate the ball joints from the lower arms (see section 18).

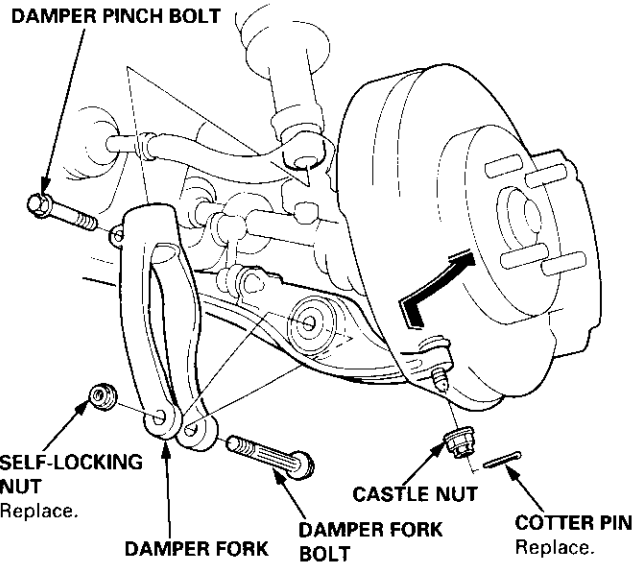


11. Remove the right damper fork bolt, then separate right damper fork and damper.
12. Pry the right and left driveshafts out of the differential.
13. Pull on the inboard joint and the right and left driveshafts (see section 16).
14. Tie plastic bags over the driveshaft ends.

NOTE: Coat all precision finished surfaces with clean engine oil.


15. Remove the exhaust pipe A.

NOTE: D16Y8 engine is shown; D16Y7 engine is similar.

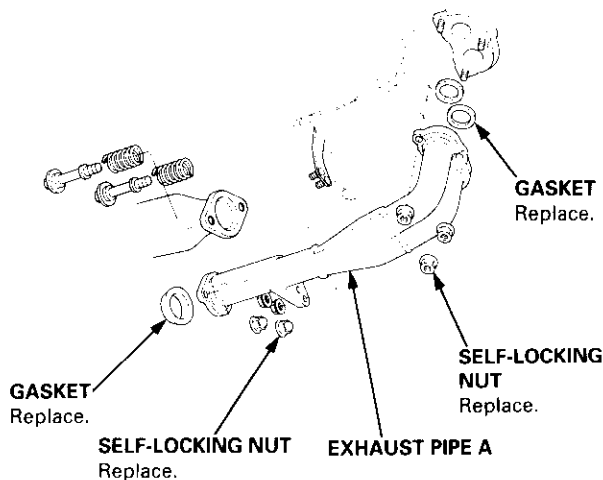


16. Remove the shift cable cover, then remove the shift cable by removing the control lever.

CAUTION: Take care not to bend the shift cable.

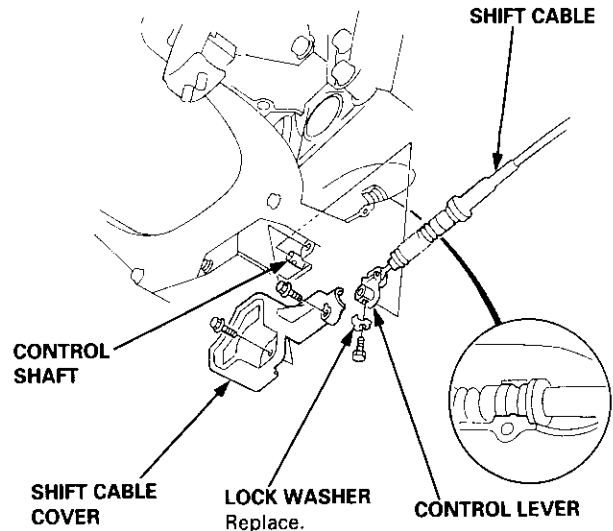


17. Remove the right front mount/bracket.
18. Remove the ATF cooler hoses at the ATF cooler lines. Turn the ends of the ATF cooler hoses up to prevent ATF from flowing out, then plug the ATF cooler hoses and lines.

NOTE: Check for any sign of leakage at the hose joints.

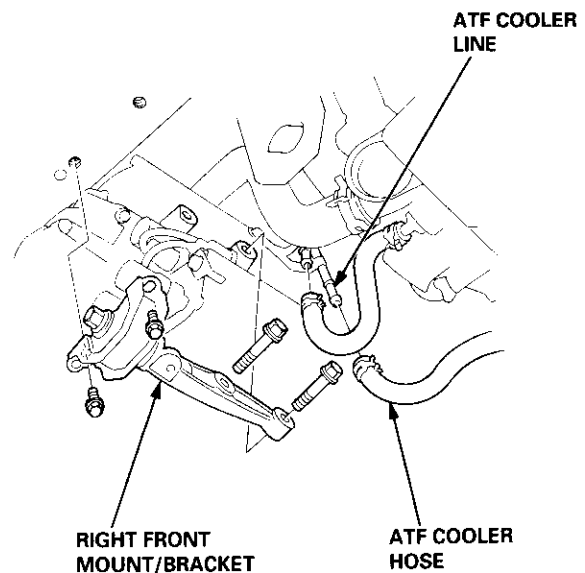





19. Remove the engine stiffener and the torque converter cover.

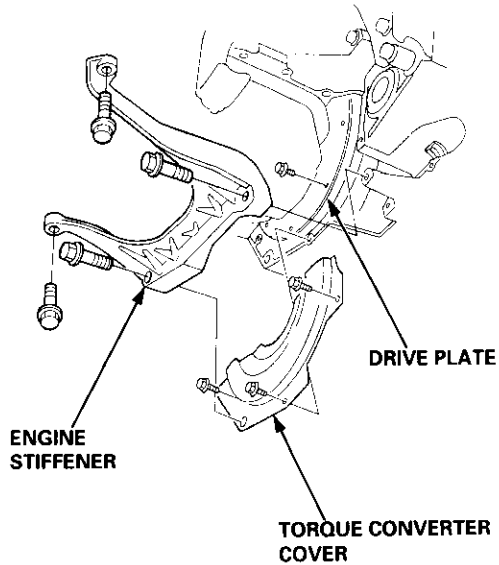


20. Remove the eight drive plate bolts one at a time while rotating the crankshaft pulley.
21. Remove the distributor.
22. Attach a hoisting bracket to the engine, then lift the engine slightly.

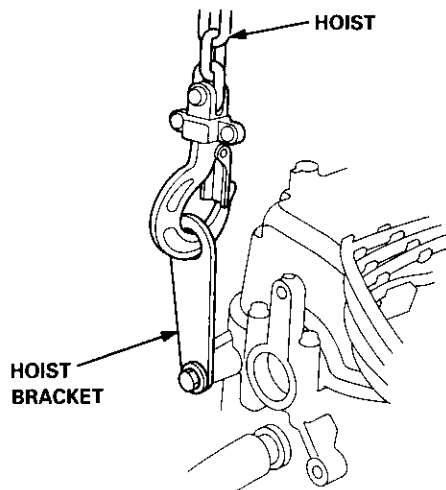

23. Place a jack under the transmission, and raise the transmission just enough to take weight off of the mounts, then remove the transmission mount.

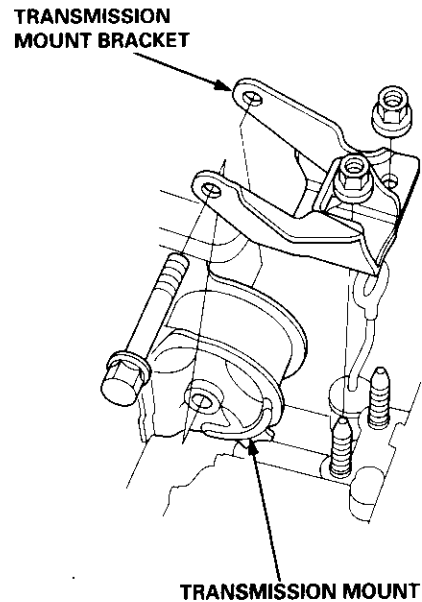


24. Remove the transmission housing mounting bolts and the rear engine mounting bolts.
25. Pull the transmission away from the engine until it clears the 14 mm dowel pins, then lower it on the transmission jack.

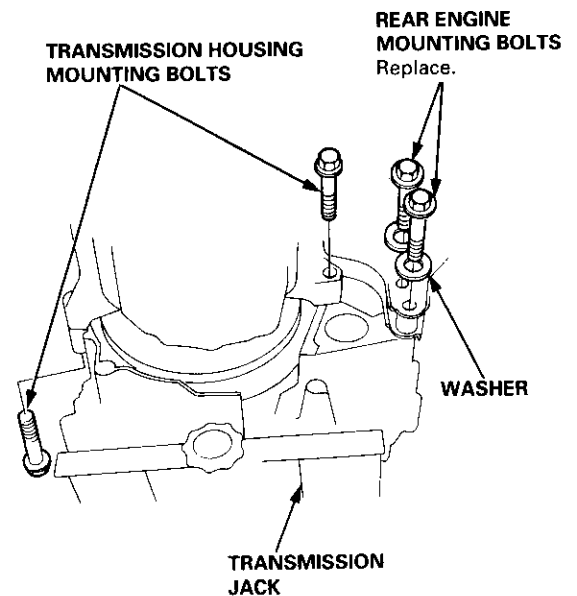

26. If necessary, remove the torque converter and the starter motor.

Illustrated Index

Transmission/Right Side Cover

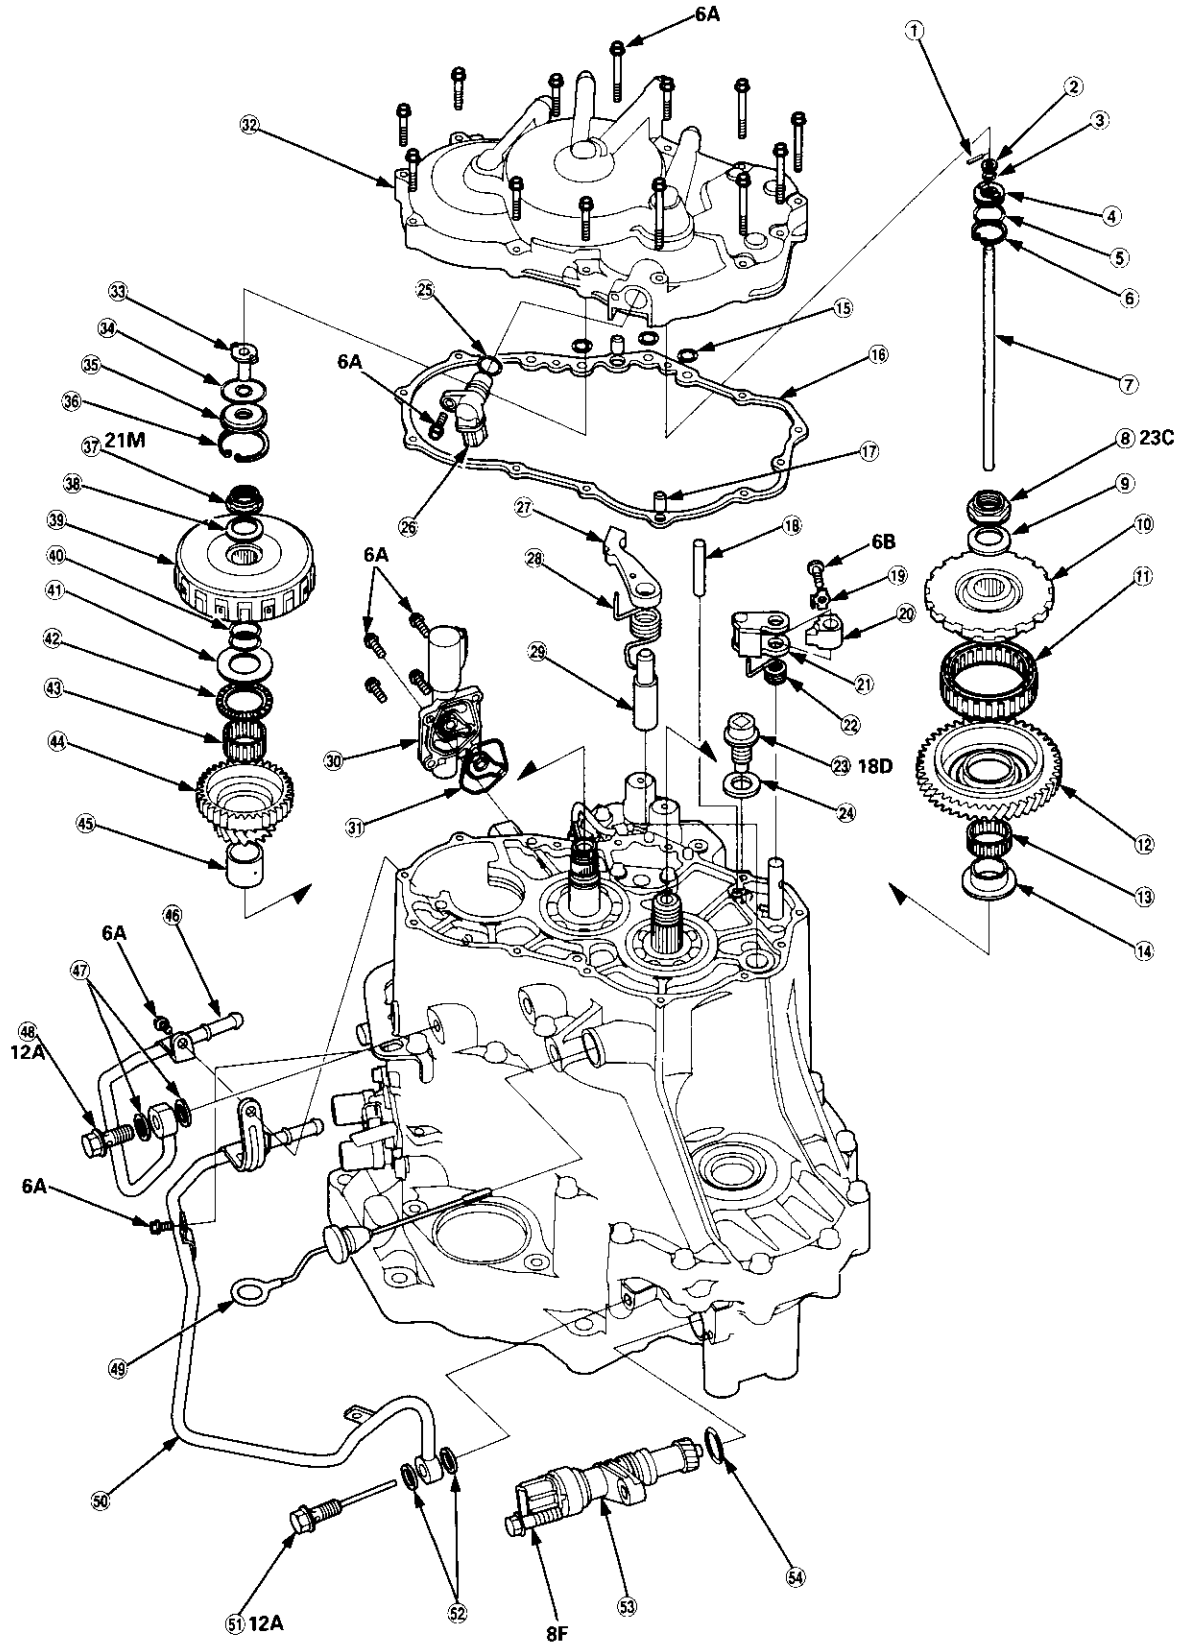




- ① ROLLER
- ② COLLAR
- ③ O-RING Replace.
- ④ FEED PIPE FLANGE
- ⑤ O-RING Replace.
- ⑥ SNAP RING
- ⑦ 3RD CLUTCH FEED PIPE
- ⑧ COUNTERSHAFT LOCKNUT (FLANGE NUT)
23 x 1.25 mm Replace.
- ⑨ CONICAL SPRING WASHER Replace.
- ⑩ PARKING GEAR
- ⑪ ONE-WAY CLUTCH
- ⑫ COUNTERSHAFT 1ST GEAR
- ⑬ NEEDLE BEARING
- ⑭ COUNTERSHAFT 1ST GEAR COLLAR
- ⑮ O-RINGS Replace.
- ⑯ RIGHT SIDE COVER GASKET Replace.
- ⑰ DOWEL PINS
- ⑱ PARKING BRAKE PAWL STOP
- ⑲ LOCK WASHER Replace.
- ⑳ PARKING BRAKE STOP Selective part
- ㉑ PARKING BRAKE LEVER
- ㉒ PARKING BRAKE LEVER SPRING
- ㉓ DRAIN PLUG
- ㉔ SEALING WASHER Replace.
- ㉕ O-RING Replace.
- ㉖ COUNTERSHAFT SPEED SENSOR
- ㉗ PARKING BRAKE PAWL
- ㉘ PARKING BRAKE PAWL SPRING
- ㉙ PARKING BRAKE PAWL SHAFT
- ㉚ LINEAR SOLENOID ASSEMBLY
- ㉛ LINEAR SOLENOID GASKET Replace.
- ㉜ RIGHT SIDE COVER
- ㉝ 1ST CLUTCH FEED PIPE
- ㉞ O-RINGS Replace.
- ㉟ FEED PIPE FLANGE
- ㊱ SNAP RING
- ㊲ MAINSHAFT LOCKNUT (FLANGE NUT) 21 x 1.25 mm
Replace.
- ㊳ CONICAL SPRING WASHER Replace.
- ㊴ 1ST CLUTCH ASSEMBLY
- ㊵ O-RINGS Replace.
- ㊶ THRUST WASHER
- ㊷ THRUST NEEDLE BEARING
- ㊸ NEEDLE BEARING
- ㊹ MAINSHAFT 1ST GEAR
- ㊺ MAINSHAFT 1ST GEAR COLLAR
- ㊻ ATF COOLER LINE
- ㊼ SEALING WASHERS Replace.
- ㊽ JOINT BOLT
- ㊾ ATF DIPSTICK
- ㊿ ATF COOLER LINE
- ① JOINT BOLT
- ② SEALING WASHERS Replace.
- ③ VEHICLE SPEED SENSOR
- ④ O-RING Replace.

TORQUE SPECIFICATIONS

Bolt/Nut No.	Torque Value	Size	Remarks
6A	12 N·m (1.2 kgf·m, 8.7 lbf·ft)	6 x 1.0 mm	
6B	14 N·m (1.4 kgf·m, 10 lbf·ft)	6 x 1.0 mm	
8F	22 N·m (2.2 kgf·m, 16 lbf·ft)	8 x 1.25 mm	
12A	28 N·m (2.9 kgf·m, 21 lbf·ft)	12 x 1.25 mm	Joint bolt
18D	49 N·m (5.0 kgf·m, 36 lbf·ft)	18 x 1.5 mm	Drain plug
21M	78 N·m (8.0 kgf·m, 58 lbf·ft)	21 x 1.25 mm	Mainshaft locknut: Left-hand threads
23C	103 N·m (10.5 kgf·m, 75.9 lbf·ft)	23 x 1.25 mm	Countershaft locknut: Left-hand threads

Illustrated Index

Transmission Housing

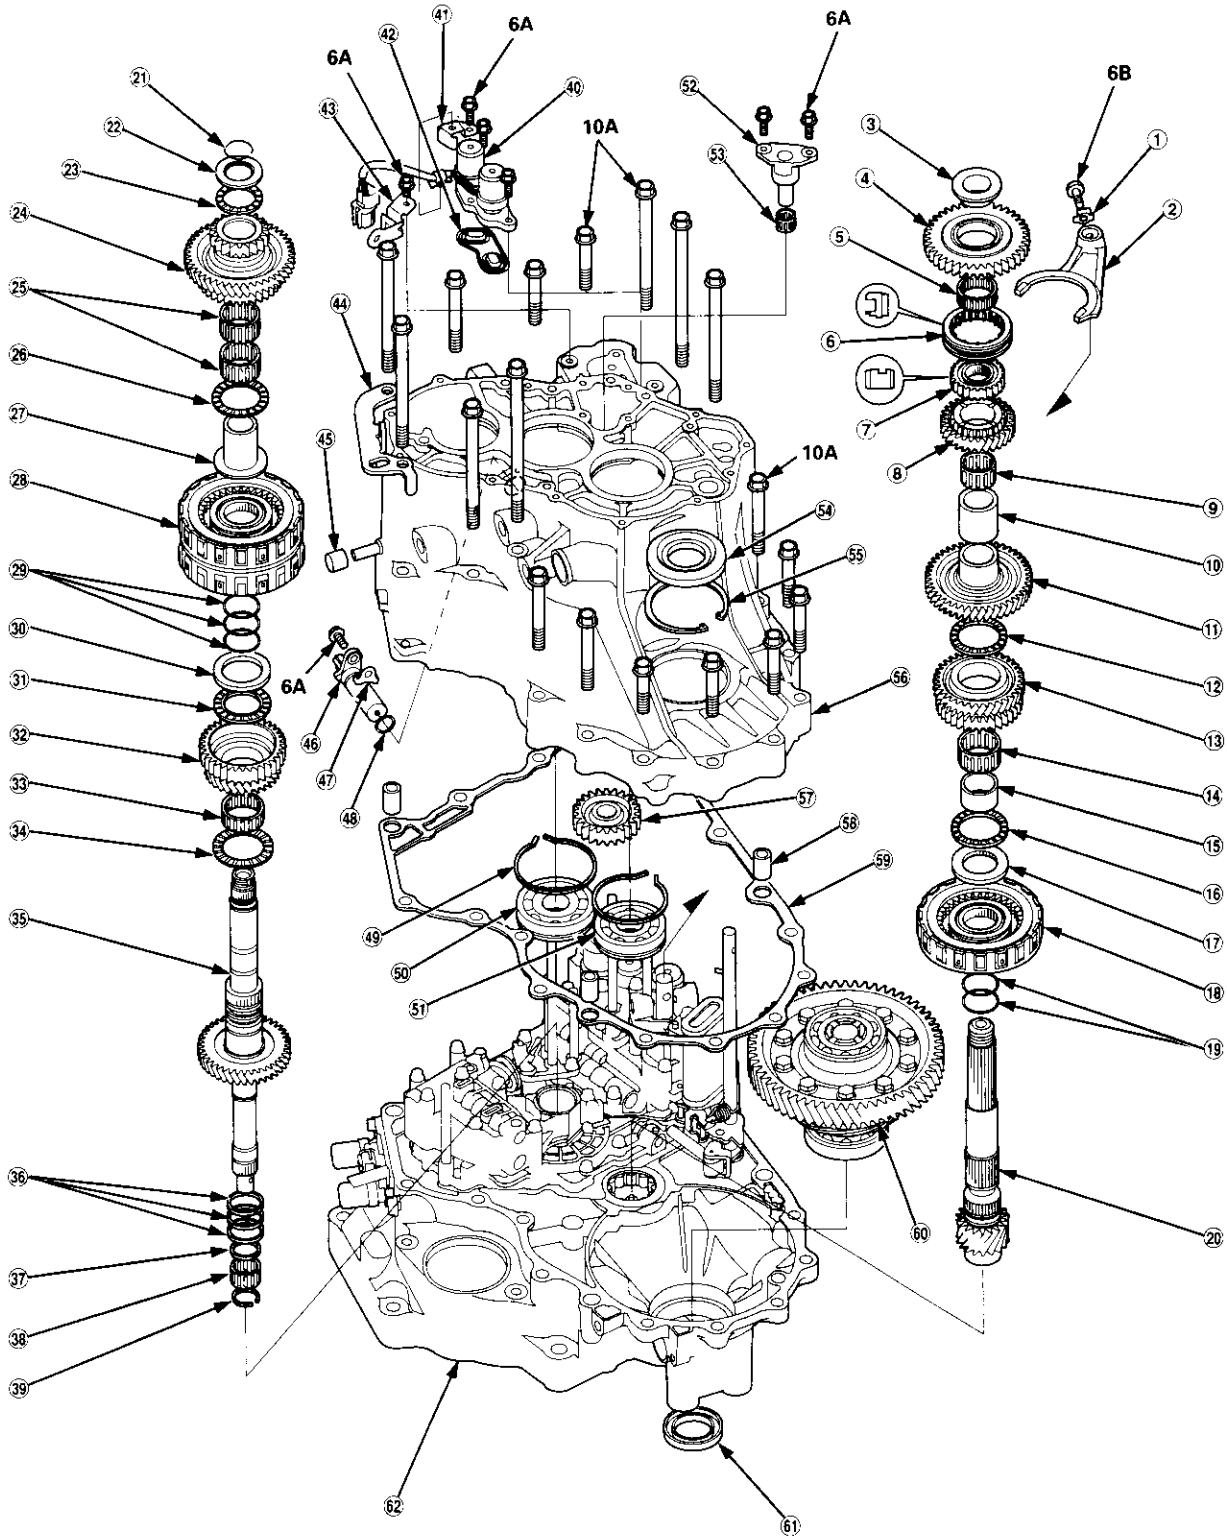




- ① LOCK WASHER Replace.
- ② REVERSE SHIFT FORK
- ③ COUNTERSHAFT REVERSE GEAR COLLAR
- ④ COUNTERSHAFT REVERSE GEAR
- ⑤ NEEDLE BEARING
- ⑥ REVERSE SELECTOR
- ⑦ REVERSE SELECTOR HUB
- ⑧ COUNTERSHAFT 4TH GEAR
- ⑨ NEEDLE BEARING
- ⑩ DISTANCE COLLAR, 28 mm Selective part
- ⑪ COUNTERSHAFT 2ND GEAR
- ⑫ THRUST NEEDLE BEARING
- ⑬ COUNTERSHAFT 3RD GEAR
- ⑭ NEEDLE BEARING
- ⑮ COUNTERSHAFT 3RD GEAR COLLAR
- ⑯ THRUST NEEDLE BEARING
- ⑰ SPLINED WASHER
- ⑱ 3RD CLUTCH ASSEMBLY
- ⑲ O-RINGS Replace.
- ⑳ COUNTERSHAFT
- ㉑ SNAP RING
- ㉒ THRUST WASHER
- ㉓ THRUST NEEDLE BEARING
- ㉔ MAINSHAFT 4TH GEAR/REVERSE GEAR
- ㉕ NEEDLE BEARINGS
- ㉖ THRUST NEEDLE BEARING
- ㉗ MAINSHAFT 4TH GEAR COLLAR
- ㉘ 2ND/4TH CLUTCH ASSEMBLY
- ㉙ O-RINGS Replace.
- ㉚ THRUST WASHER, 36.5 x 55 mm Selective part
- ㉛ THRUST NEEDLE BEARING
- ㉜ MAINSHAFT 2ND GEAR
- ㉝ NEEDLE BEARING
- ㉞ THRUST NEEDLE BEARING
- ㉟ MAINSHAFT
- ㊱ SEALING RINGS, 35 mm
- ㊲ SEALING RING, 29 mm
- ㊳ NEEDLE BEARING
- ㊴ SET RING
- ㊵ SHIFT CONTROL SOLENOID VALVE A/B ASSEMBLY
- ㊶ HARNESS CLAMP BRACKET
- ㊷ SHIFT CONTROL SOLENOID FILTER/GASKET Replace.
- ㊸ CONNECTOR BRACKET
- ㊹ TRANSMISSION HANGER
- ㊺ BREATHER CAP
- ㊻ MAINSHAFT SPEED SENSOR
- ㊼ MAINSHAFT SPEED SENSOR WASHER (D16V7 engine)
- ㊽ O-RING Replace.
- ㊾ SNAP RING
- ㊿ MAINSHAFT TRANSMISSION HOUSING BEARING
- ① COUNTERSHAFT TRANSMISSION HOUSING BEARING
- ② REVERSE IDLER GEAR SHAFT HOLDER ASSEMBLY
- ③ NEEDLE BEARING
- ④ OIL SEAL Replace.
- ⑤ SET RING, 80 mm Selective part
- ⑥ TRANSMISSION HOUSING
- ⑦ REVERSE IDLER GEAR
- ⑧ DOWEL PINS
- ⑨ TRANSMISSION HOUSING GASKET Replace.
- ⑩ DIFFERENTIAL ASSEMBLY
- ⑪ OIL SEAL Replace.
- ⑫ TORQUE CONVERTER HOUSING

TORQUE SPECIFICATIONS

Bolt/Nut No.	Torque Value	Size	Remarks
6A	12 N·m (1.2 kgf·m, 8.7 lbf·ft)	6 x 1.0 mm	
6B	14 N·m (1.4 kgf·m, 10 lbf·ft)	6 x 1.0 mm	
10A	44 N·m (4.5 kgf·m, 33 lbf·ft)	10 x 1.25 mm	

Illustrated Index

Torque Converter Housing/Valve Body

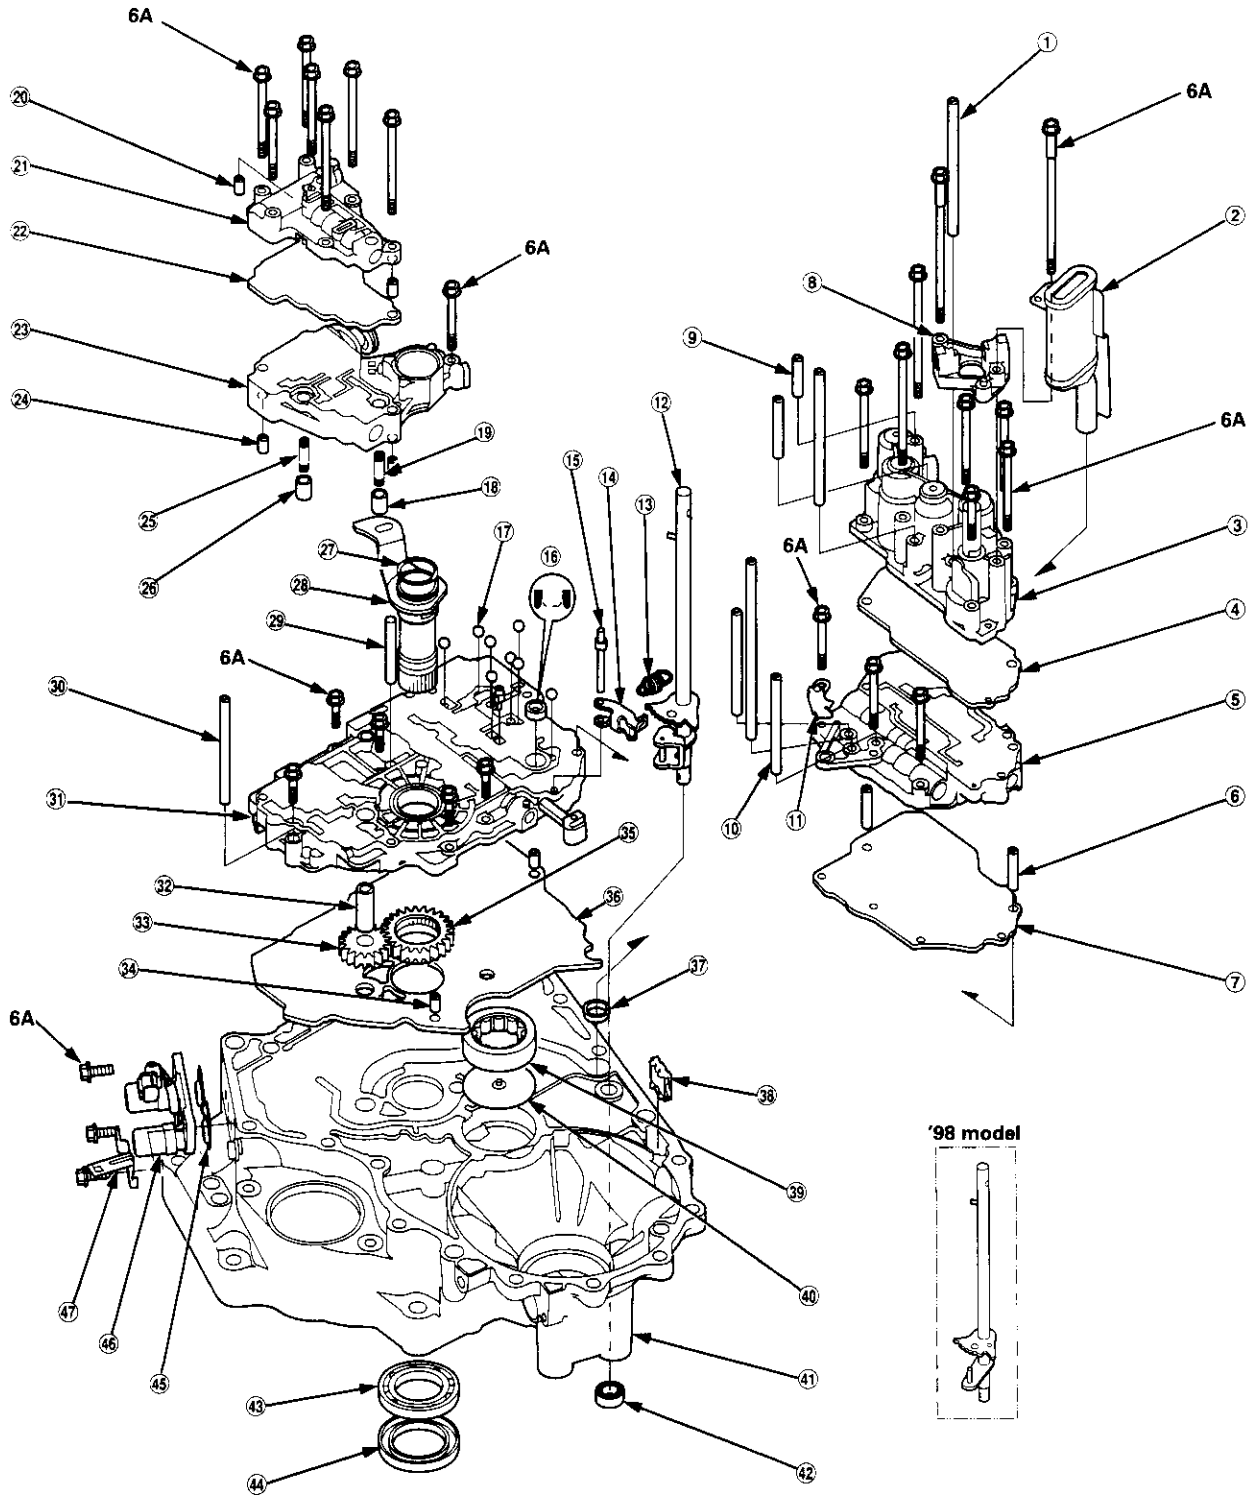



- ① ATF FEED PIPE
- ② ATF STRAINER
- ③ SERVO BODY
- ④ SERVO SEPARATOR PLATE
- ⑤ SECONDARY VALVE BODY
- ⑥ DOWEL PINS
- ⑦ SECONDARY SEPARATOR PLATE
- ⑧ SERVO DETENT BASE
- ⑨ ATF FEED PIPES
- ⑩ ATF FEED PIPES
- ⑪ SHAFT STOP
- ⑫ CONTROL SHAFT
- ⑬ DETENT ARM SPRING
- ⑭ DETENT ARM
- ⑮ DETENT ARM SHAFT
- ⑯ FILTER Replace.
- ⑰ CHECK BALLS
- ⑱ TORQUE CONVERTER CHECK VALVE SPRING
- ⑲ TORQUE CONVERTER CHECK VALVE
- ⑳ DOWEL PINS
- ㉑ LOCK-UP VALVE BODY
- ㉒ LOCK-UP SEPARATOR PLATE
- ㉓ REGULATOR VALVE BODY
- ㉔ DOWEL PINS
- ㉕ COOLER RELIEF VALVE SPRING
- ㉖ COOLER RELIEF VALVE
- ㉗ O-RING Replace.
- ㉘ STATOR SHAFT
- ㉙ STOP SHAFT
- ㉚ ATF FEED PIPE
- ㉛ MAIN VALVE BODY
- ㉜ ATF PUMP DRIVEN GEAR SHAFT
- ㉝ ATF DRIVEN GEAR
- ㉞ DOWEL PINS
- ㉟ ATF PUMP DRIVE GEAR
- ㊱ MAIN SEPARATOR PLATE
- ㊲ SUCTION PIPE COLLAR
- ㊳ ATF MAGNET
- ㊴ COUNTERSHAFT TORQUE CONVERTER HOUSING BEARING
- ㊵ ATF GUIDE PLATE
- ㊶ TORQUE CONVERTER HOUSING
- ㊷ OIL SEAL Replace.
- ㊸ MAINSHAFT TORQUE CONVERTER HOUSING BEARING
- ㊹ OIL SEAL Replace.
- ㊺ LOCK-UP CONTROL SOLENOID FILTER/GASKET Replace.
- ㊻ LOCK-UP CONTROL SOLENOID VALVE A/B ASSEMBLY
- ㊼ CONNECTOR BRACKET

TORQUE SPECIFICATIONS


Bolt/Nut No.	Torque Value	Size	Remarks
6A	12 N·m (1.2 kgf·m, 8.7 lbf·ft)	6 x 1.0 mm	

Right Side Cover

Removal

NOTE:


- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air.
- Blow out all passages.
- When removing the right side cover, replace the following:
 - O-rings
 - Mainshaft and countershaft locknuts
 - Conical spring washers
 - Right side cover gasket
 - Lock washer
 - Sealing washers

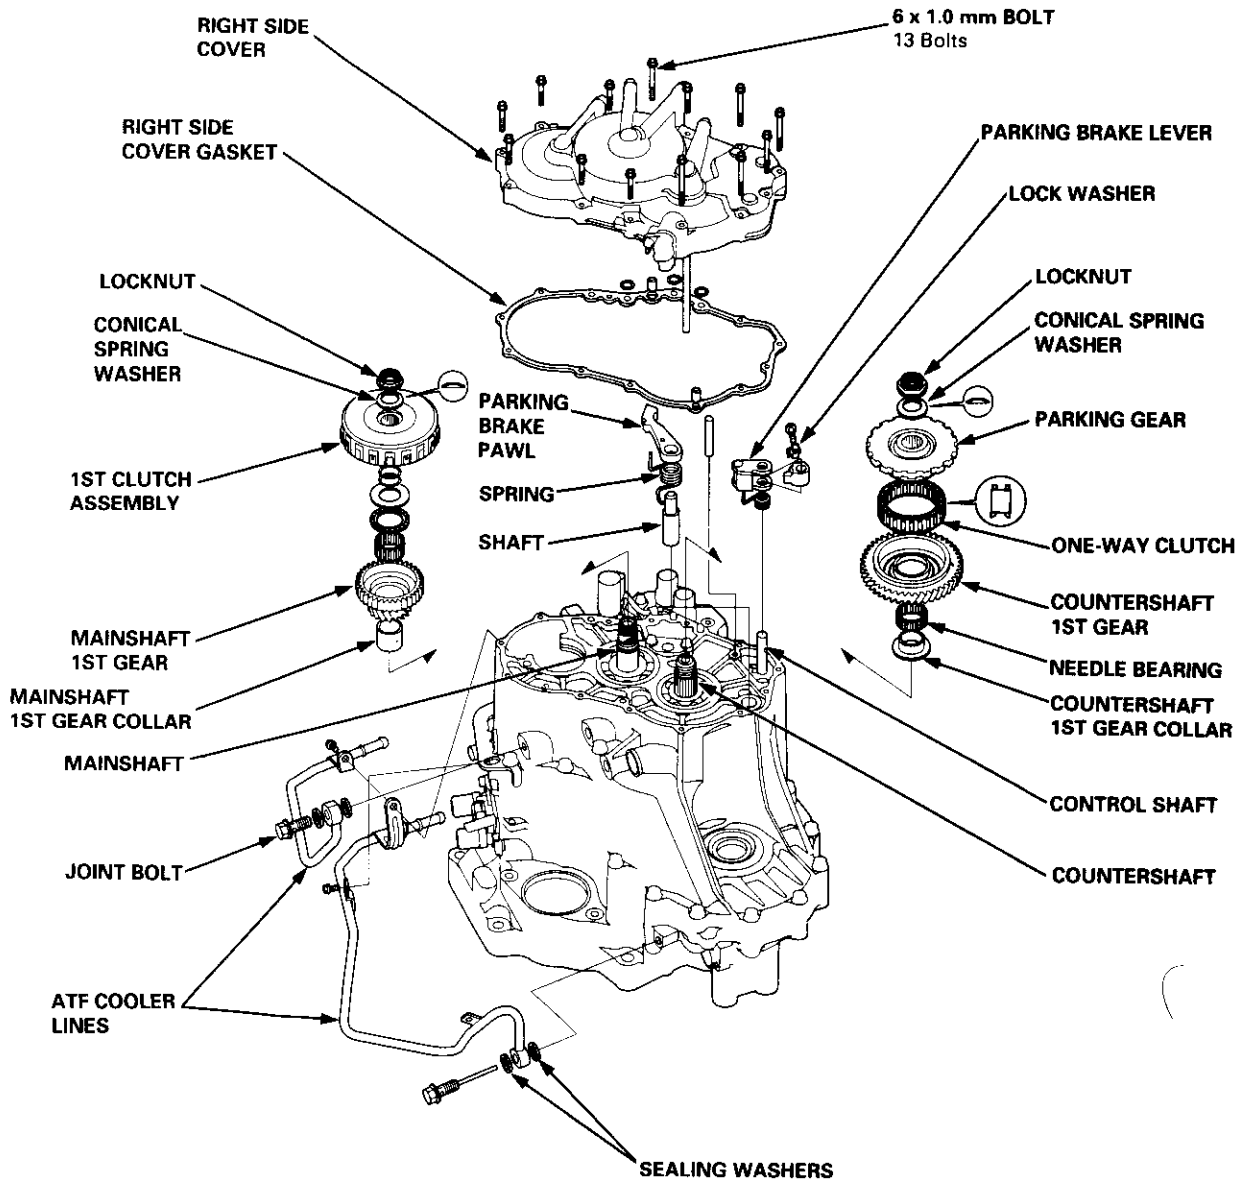



1. Remove the 13 bolts securing the right side cover, then remove the right side cover.
2. Slip the special tool onto the mainshaft as shown.

MAINSHAFT HOLDER
07GAB - PF50101

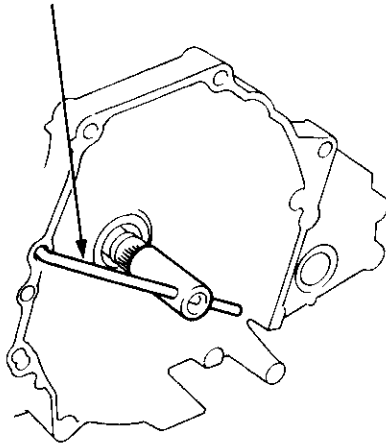


3. Engage the parking brake pawl with the parking gear.
4. Cut the lock tabs of the mainshaft and countershaft locknuts using a chisel as shown, then remove the locknuts and conical spring washers.


CAUTION: Keep all of the chiseled particles out of the transmission.

NOTE:

- Mainshaft and countershaft locknuts have left-hand threads.
- Always wear safety glasses.

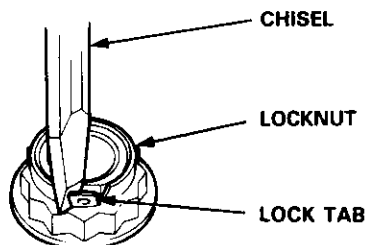


5. Remove the special tool from the mainshaft after removing the locknuts.
6. Remove the 1st clutch and mainshaft 1st gear assembly and mainshaft 1st gear collar from the mainshaft.
7. Remove the parking brake pawl, spring and shaft.
8. Remove the parking brake lever from the control shaft.
9. Using a universal two-jaw puller, remove the parking gear, one-way clutch and countershaft 1st gear assembly.

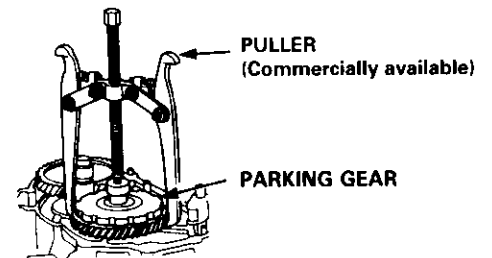

10. Remove the needle bearing and the countershaft 1st gear collar from the countershaft.
11. Remove the ATF cooler lines and ATF dipstick.

Transmission Housing

Removal

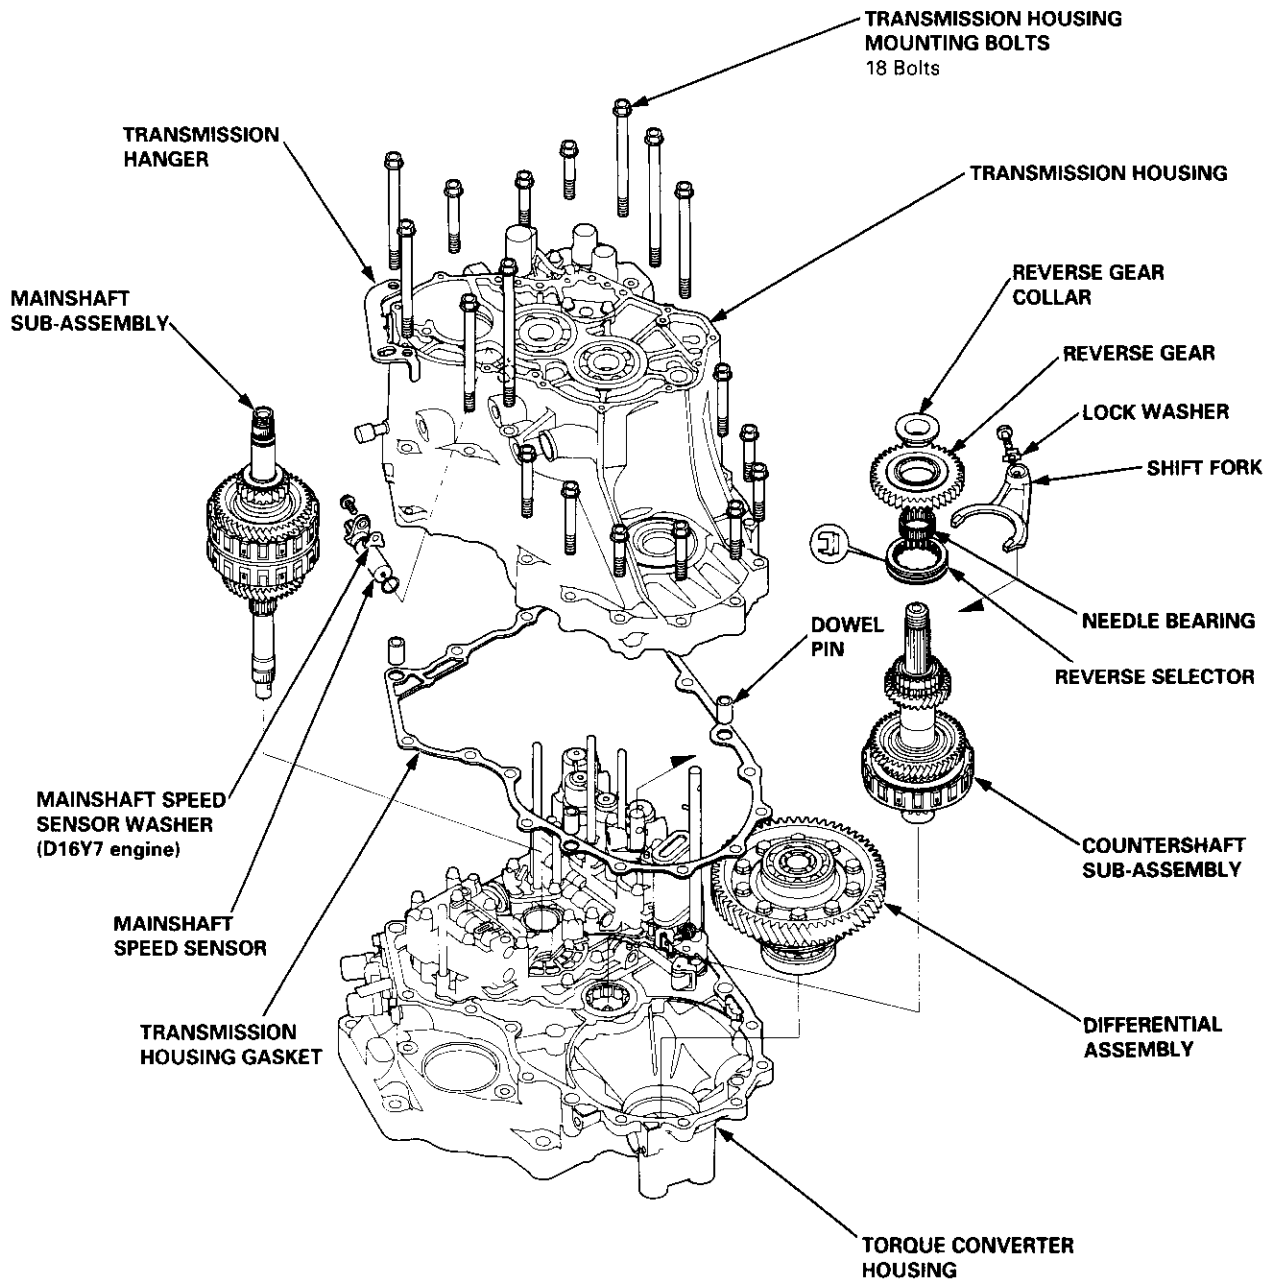




NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air.
- Blow out all passages.
- When removing the transmission housing, replace the following:
 - O-ring
 - Transmission housing gasket
 - Lock washer


1. Remove the mainshaft speed sensor from the transmission housing.
2. Remove the transmission housing mounting bolts and hanger.
3. Align the spring pin on the control shaft with the transmission housing groove by turning the control shaft.

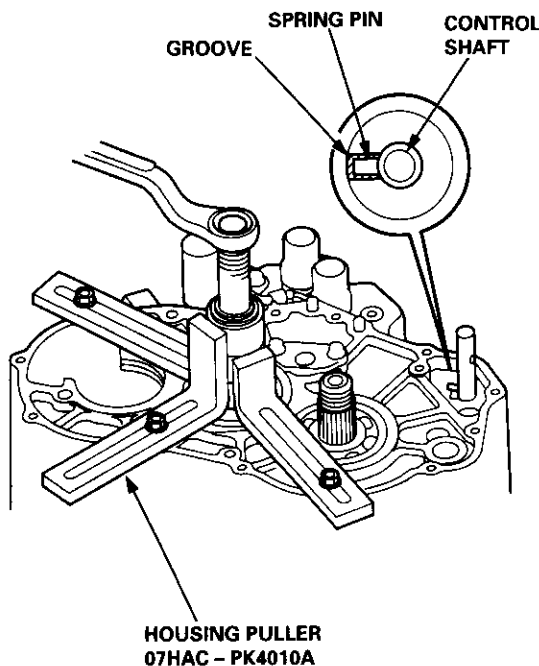

4. Install the special tool on the transmission housing, then remove the housing as shown.

CAUTION: Make sure the mainshaft speed sensor has been removed from the transmission housing before removing the transmission housing from the torque converter housing.


5. Remove the countershaft reverse gear with the collar and needle bearing.
6. Remove the lock bolt securing the shift fork, then remove the fork with the reverse selector from the countershaft.
7. Remove the countershaft sub-assembly and the mainshaft sub-assembly together.

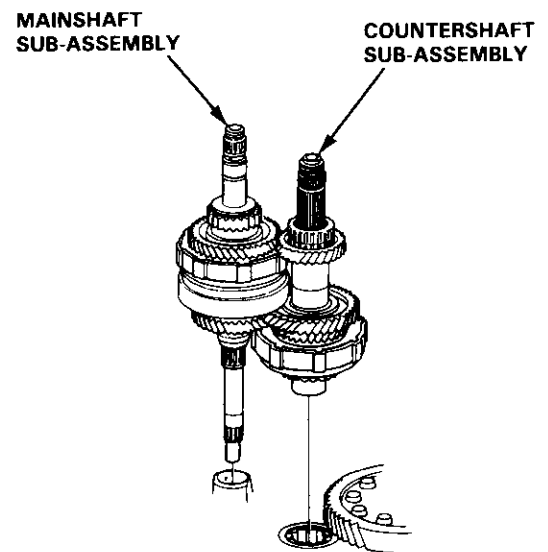

8. Remove the differential assembly from the torque converter housing.

Torque Converter Housing/Valve Body

Removal

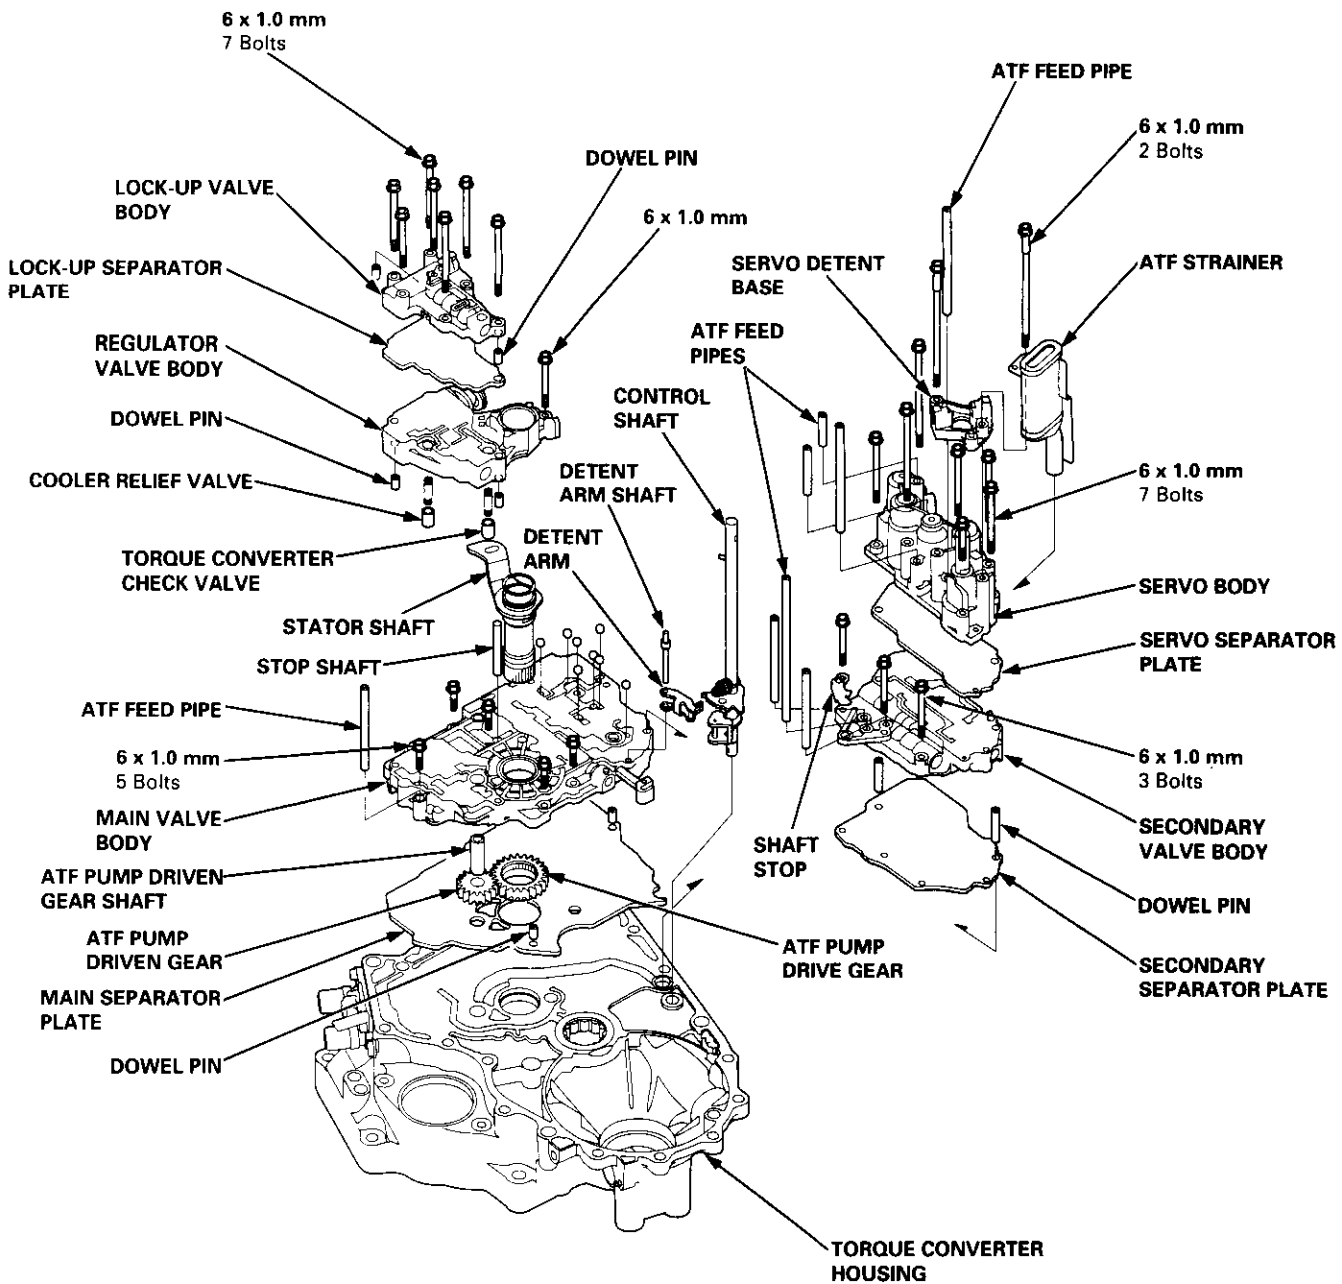



NOTE:


- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air.
- Blow out all passages.
- When removing the valve body, replace the O-ring.

1. Remove the ATF feed pipes from the servo body, secondary valve body and main valve body.
2. Remove the ATF strainer and servo detent base (two bolts).
3. Remove the servo body and servo separator plate (seven bolts).
4. Remove the secondary valve body, shaft stop and secondary separator plate (three bolts).
5. Remove the lock-up valve body and separator plate (seven bolts).
6. Remove the regulator valve body (one bolt).
7. Remove the stator shaft and stop shaft.
8. Remove the detent spring from the detent arm, then remove the control shaft from the torque converter housing.
9. Remove the detent arm and detent arm shaft from the main valve body.
10. Remove the main valve body (five bolts).

NOTE: Do not let the eight check balls fall out of the main valve body when removing the main valve body.

11. Remove the ATF pump driven gear shaft, then remove the ATF pump gears.
12. Remove the main separator plate and two dowel pins.

13. Clean the inlet opening of the ATF strainer thoroughly with compressed air, then check that it is in good condition, and the inlet opening is not clogged.

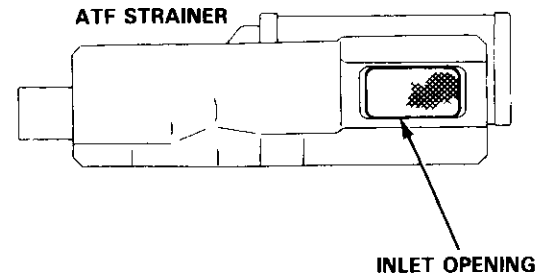

14. Test the filter by pouring clean ATF fluid through the inlet opening. Replace the ATF strainer if it is clogged or damaged.

NOTE: The ATF strainer can be reused if it is not clogged.

Valve Caps

Description

- Caps with one projected tip and one flat end are installed with the flat end toward the inside of the valve body.
- Caps with a projected tip on each end are installed with the smaller tip toward the inside of the valve body. The small tip is a spring guide.


Toward outside of valve body.



Toward inside of valve body.

- Caps with one projected tip and hollow end are installed with the tip toward the inside of the valve body. The tip is a spring guide.

Toward outside of valve body.

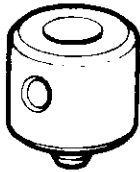

Toward inside of valve body.

- Caps with hollow ends are installed with the hollow end away from the inside of the valve body.
- Caps with notched ends are installed with the notch toward the inside of the valve body.
- Caps with flat ends and a hole through the center are installed with the smaller hole toward the inside of the valve body.


Toward outside of valve body.



Toward inside of valve body.

- Caps with flat ends and a groove around the cap are installed with the grooved side toward the outside of the valve body.

Toward outside of valve body.

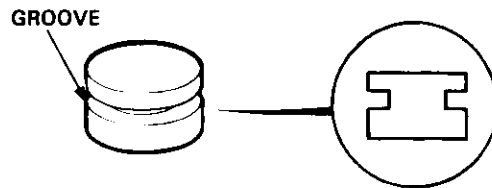

Sectional view.

Toward inside of valve body.

Valve Body



Repair


NOTE: This repair is only necessary if one or more of the valves in a valve body do not slide smoothly in their bores. You may use this procedure to free the valves in the valve bodies.

1. Soak a sheet of #600 abrasive paper in ATF for about 30 minutes.
2. Carefully tap the valve body so the sticking valve drops out of its bore.


CAUTION: It may be necessary to use a small screwdriver to pry the valve free. Be careful not to scratch the bore with the screwdriver.

3. Inspect the valve for any scuff marks. Use the ATF-soaked #600 paper to polish off any burrs that are on the valve, then wash the valve in solvent and dry it with compressed air.
4. Roll up half a sheet of ATF-soaked paper, and insert it in the valve bore of the sticking valve. Twist the paper slightly, so that it unrolls and fits the bore tightly, then polish the bore by twisting the paper as you push it in and out.

CAUTION: The valve body is aluminum and doesn't require much polishing to remove any burrs.

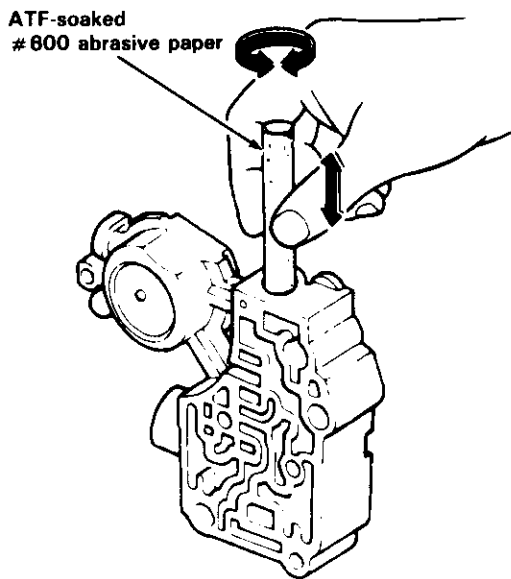

5. Remove the #600 paper and thoroughly wash the entire valve body in solvent, then dry it with compressed air.
6. Coat the valve with ATF, then drop it into its bore. It should drop to the bottom of the bore under its own weight. If not, repeat step 4, then retest.

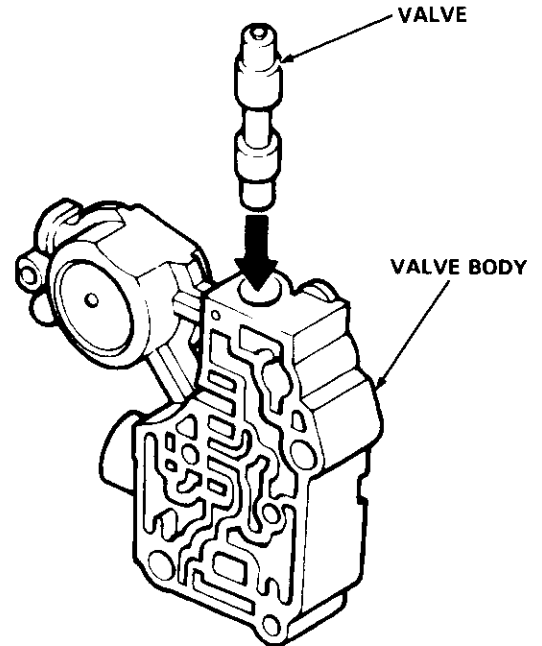

7. Remove the valve, then thoroughly clean it and the valve body with solvent. Dry all parts with compressed air, then reassemble using ATF as a lubricant.



Valve

Assembly


NOTE:

Coat all parts with ATF before assembly.


- Install the valve, valve spring and cap in the valve body and secure with the roller.

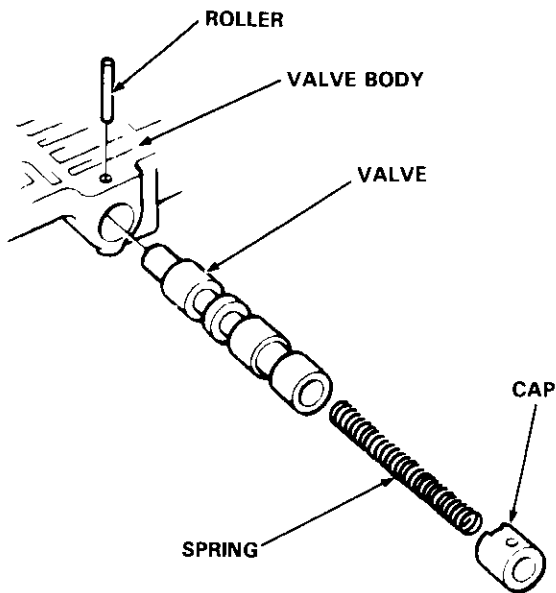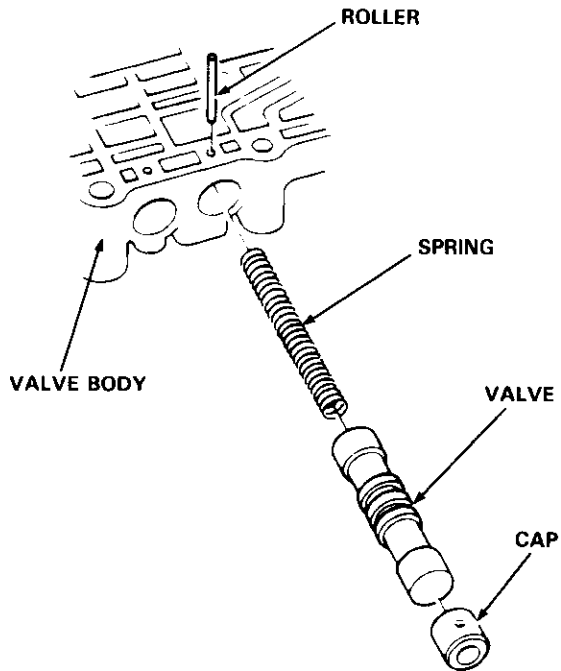

- Set the spring in the valve and install it in the valve body. Push the spring in with a screwdriver, then install the spring seat.

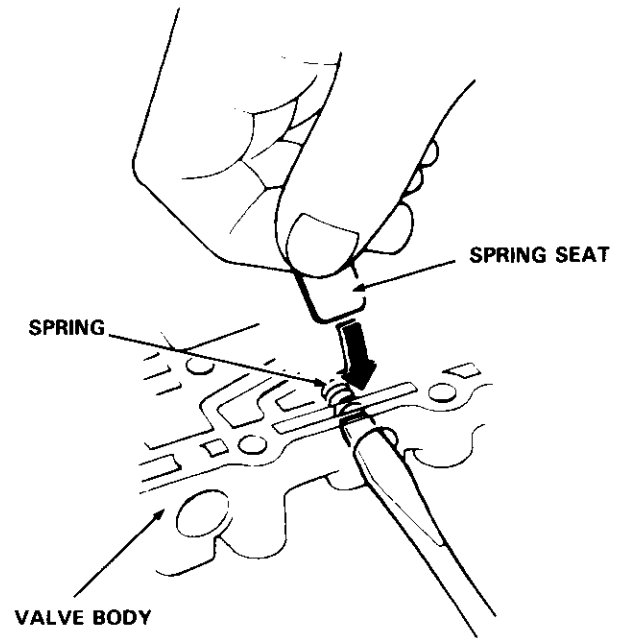

- Install the valve, spring and cap in the valve body. Push the cap, then install the clip.

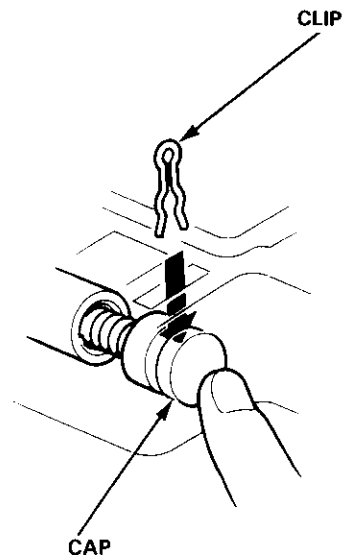




Inspection

1. Install the ATF pump gears and ATF pump driven gear shaft in the main valve body.

NOTE:

- Lubricate all parts with ATF during inspection.
- Install the ATF pump driven gear with its grooved and chamfered side facing up.

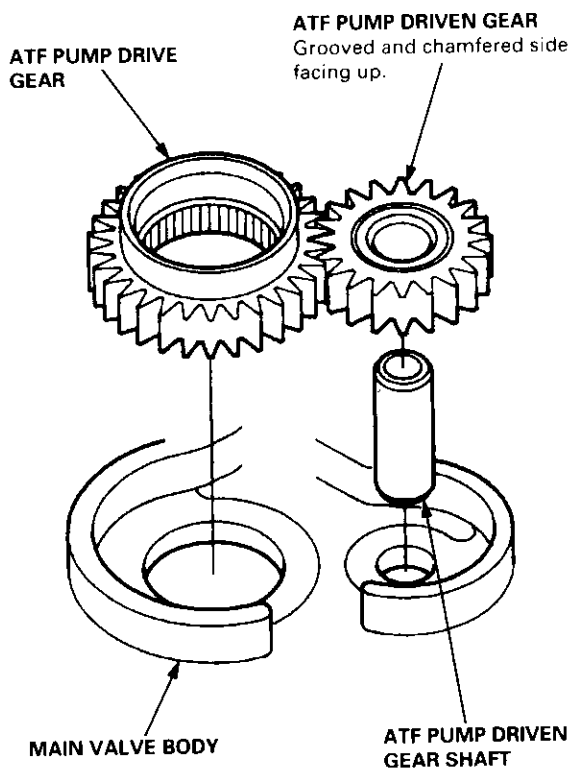

2. Measure the side clearance of the ATF pump drive and driven gears.

ATF Pump Gears Side (Radial) Clearance:

Standard (New):


ATF Pump Drive Gear

0.105 – 0.1325 mm (0.004 – 0.005 in)

ATF Pump Driven Gear

0.035 – 0.0625 mm (0.0014 – 0.0025 in)

MAIN VALVE BODY

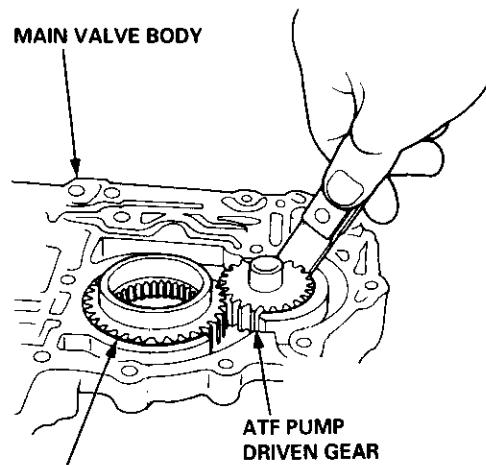

ATF PUMP DRIVEN GEAR

Inspect teeth for wear and damage.

ATF PUMP DRIVEN GEAR

Inspect teeth for wear and damage.


3. Remove the ATF pump driven gear shaft. Measure the thrust clearance of the ATF pump driven gear-to-valve body.

ATF Pump Drive/Driven Gear Thrust (Axial) Clearance:

Standard (New): 0.03 – 0.05 mm (0.001 – 0.002 in)

Service Limit: 0.07 mm (0.003 in)

STRAIGHT EDGE

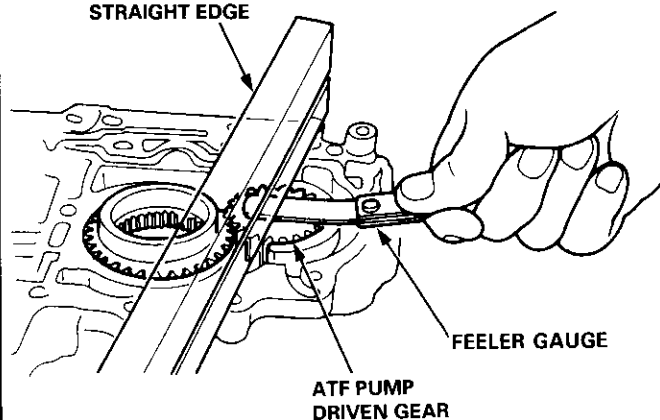

FEELER GAUGE

ATF PUMP DRIVEN GEAR


Main Valve Body


Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Replace the valve body as an assembly if any parts are worn or damaged.
- Check all valves for free movement. If any fail to slide freely, see Valve Body Repair on page 14-107.
- Coat all parts with ATF during assembly.

CAUTION: Do not use a magnet to remove the check balls; it may magnetize the balls.

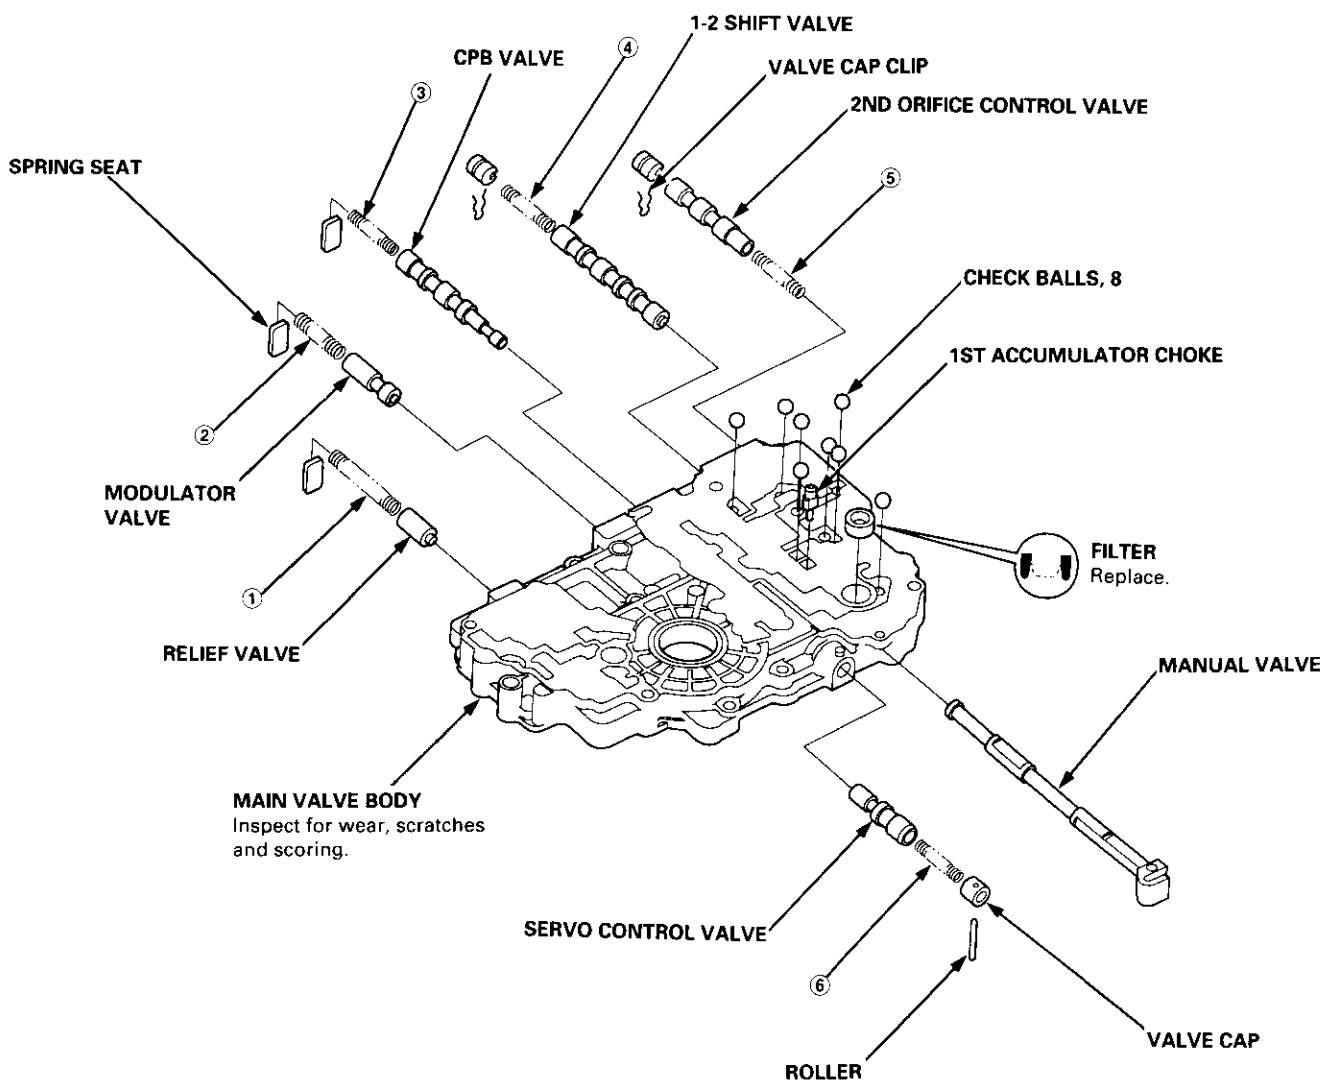

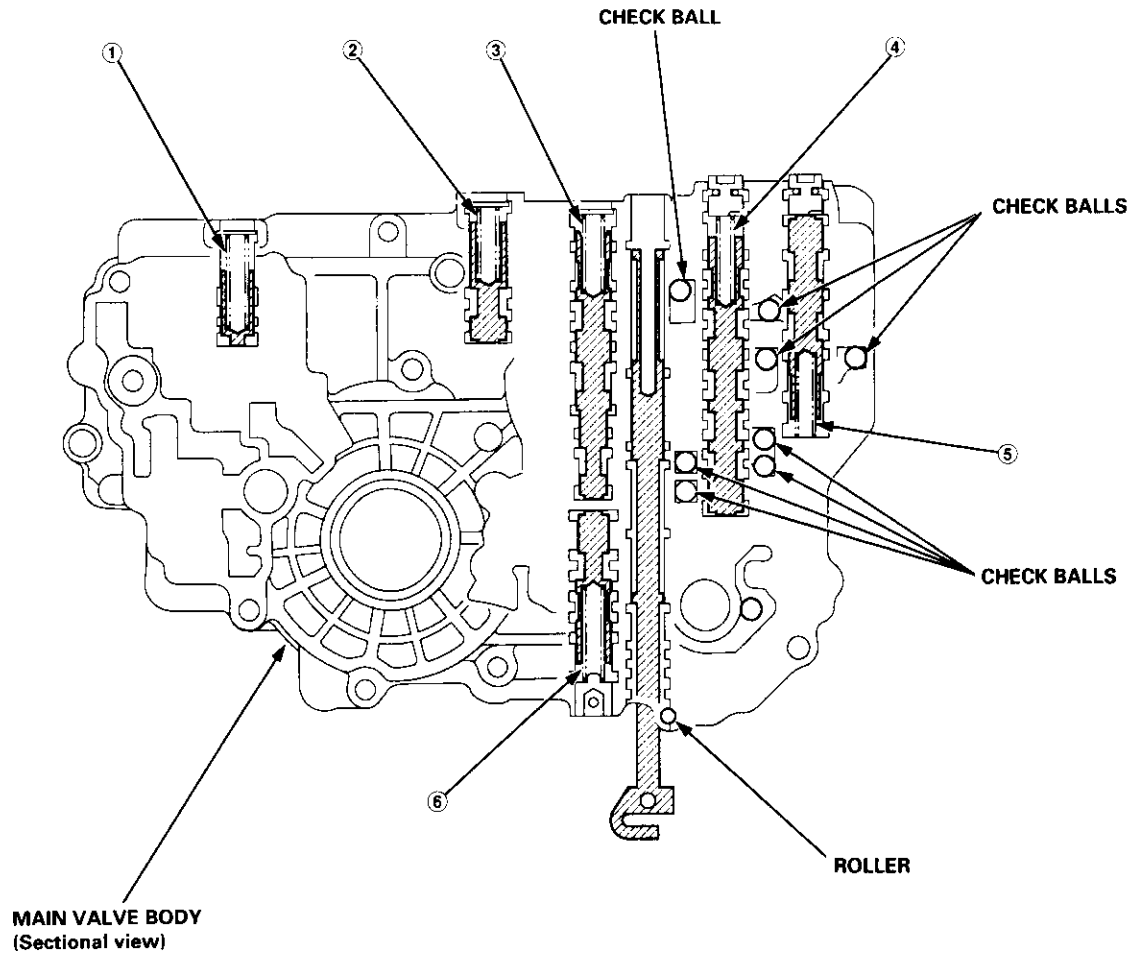

SPRING SPECIFICATIONS

Unit: mm (in)


No.	Springs	Standard (New)			
		Wire Dia.	O.D.	Free Length	No. of Coils
①	Relief valve spring	1.1 (0.043)	8.6 (0.342)	37.1 (1.461)	13.4
②	Modulator valve spring	1.4 (0.055)	9.4 (0.374)	35.0 (1.378)	10.9
③	CPB valve spring	0.9 (0.035)	8.1 (0.322)	47.2 (1.858)	18.3
④	1-2 shift valve spring	0.9 (0.035)	7.6 (0.302)	41.3 (1.626)	16.3
⑤	2nd orifice control valve spring	0.7 (0.028)	6.6 (0.262)	34.8 (1.370)	22.0
⑥	Servo control valve spring	1.0 (0.039)	8.1 (0.322)	52.1 (2.051)	20.8

Secondary Valve Body

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Replace the secondary valve body kit, P/N 27700 – P4R – 305 (The secondary valve body kit includes the linear solenoid assembly) if any parts are worn or damaged.
- Check all valves for free movement. If any fail to slide freely, see Valve Body Repair on page 14-107.
- Coat all parts with ATF during assembly.
- The CPC valve is installed in the secondary valve body, held in place by the lock bolt.

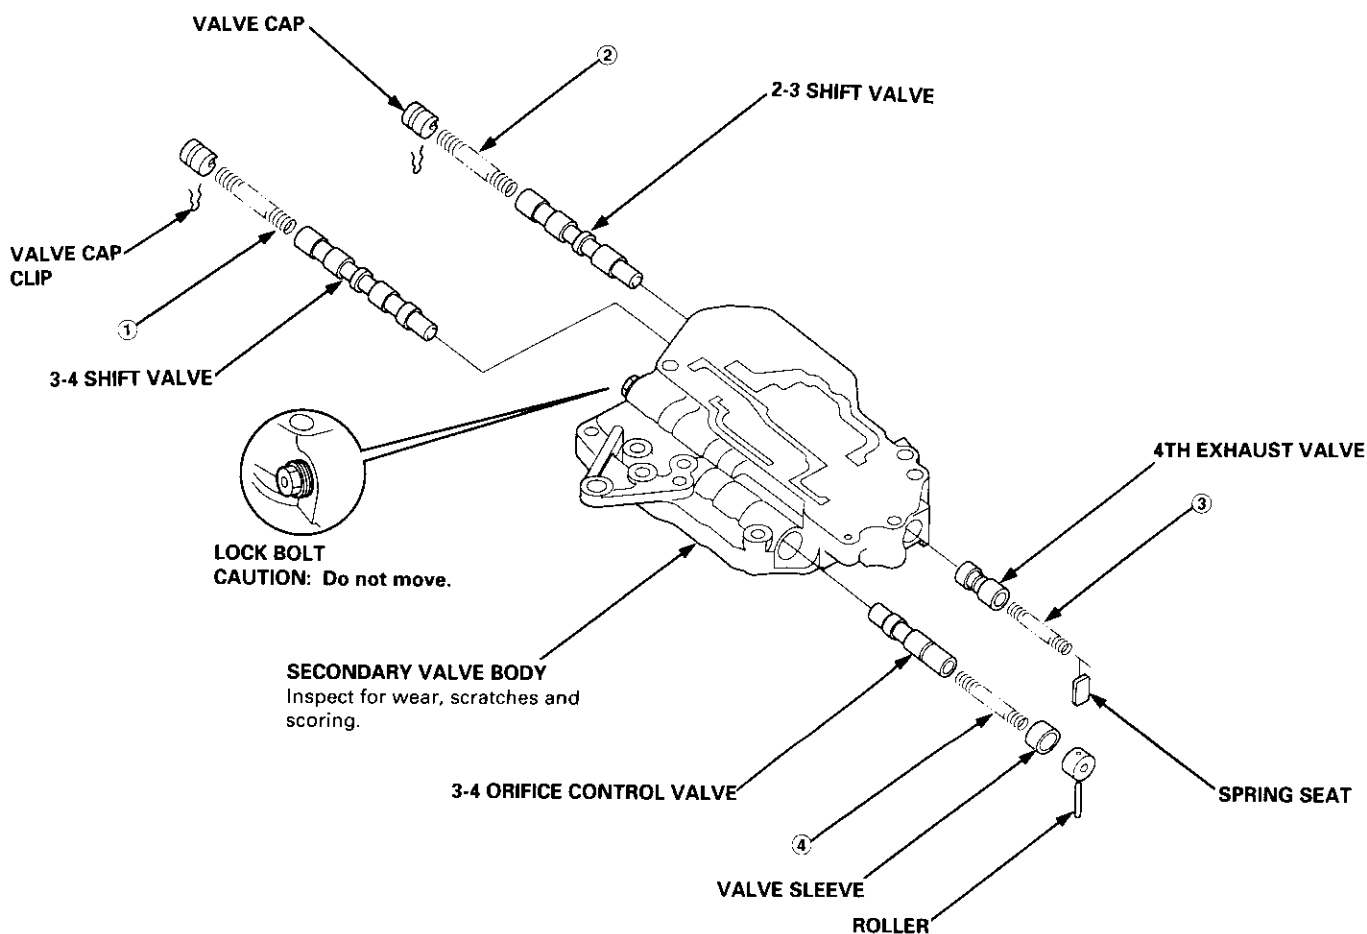

SPRING SPECIFICATIONS

Unit: mm (in)

No.	Springs	Standard (New)			
		Wire Dia.	O.D.	Free Length	No. of Coils
①	3-4 shift valve spring	0.9 (0.035)	7.6 (0.302)	57.0 (2.244)	26.8
②	2-3 shift valve spring	0.9 (0.035)	7.6 (0.302)	57.0 (2.244)	26.8
③	4th exhaust valve spring	0.9 (0.035)	6.1 (0.242)	36.4 (1.433)	19.5
④	3-4 orifice control valve spring	0.7 (0.028)	6.6 (0.262)	37.5 (1.476)	24.6



Regulator Valve Body

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Replace the valve body as an assembly if any parts are worn or damaged.
- Check all valves for free movement. If any fail to slide freely, see Valve Body Repair on page 14-107.


1. Hold the regulator spring cap in place while removing the stop bolt. Once the stop bolt is removed, release the spring cap slowly.

CAUTION: The regulator spring cap can pop out when the stop bolt is removed.

2. Reassembly is the reverse order of the disassembly procedure.

NOTE:

- Coat all parts with ATF during assembly.
- Align the hole in the regulator spring cap with the hole in the valve body, then press the spring cap into the valve body, and tighten the stop bolt.

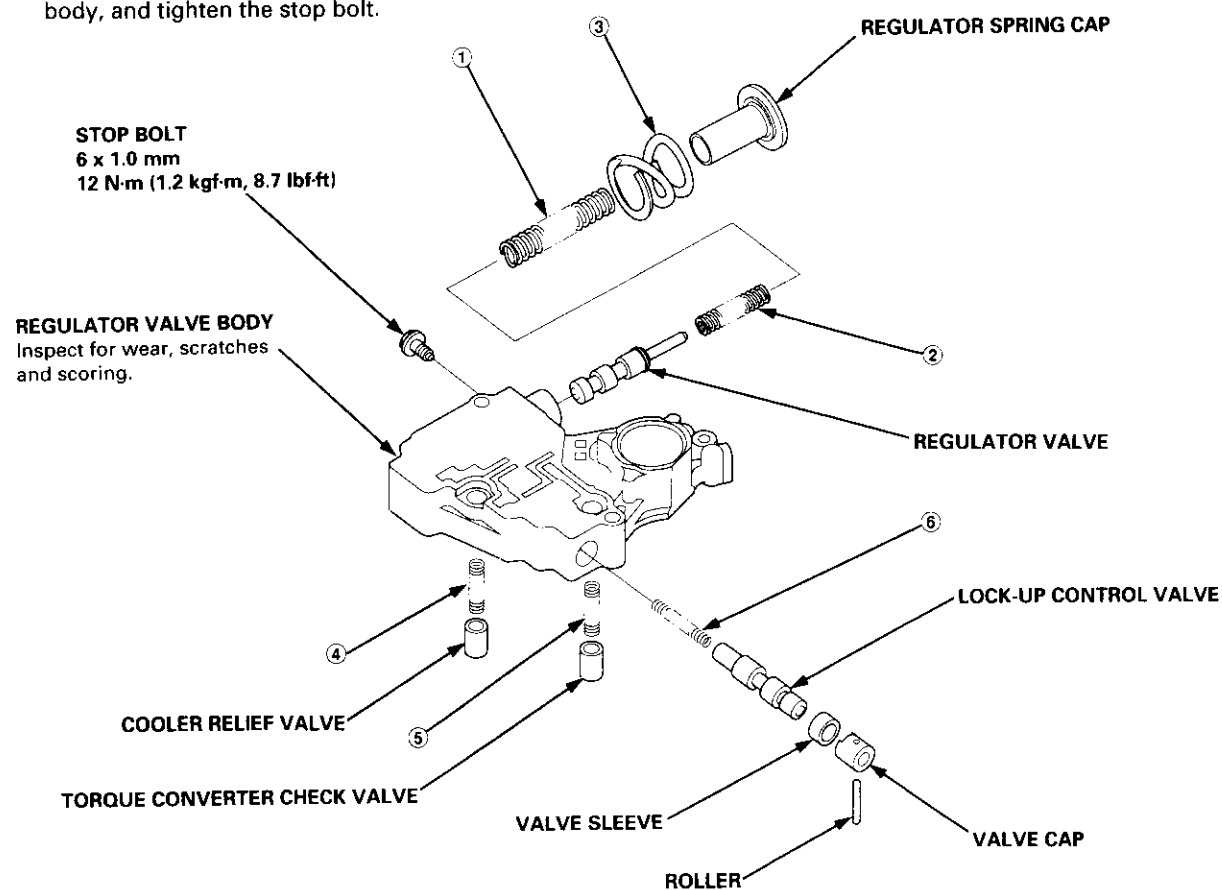

SPRING SPECIFICATIONS

Unit: mm (in)


No.	Springs	Standard (New)			
		Wire Dia.	O.D.	Free Length	No. of Coils
①	Regulator valve spring A	1.8 (0.071)	14.7 (0.584)	87.8 (3.457)	16.5
②	Regulator valve spring B	1.8 (0.071)	9.6 (0.381)	44.0 (1.732)	11.0
③	Stator reaction spring	4.5 (0.177)	35.4 (1.407)	30.3 (1.193)	1.9
④	Cooler relief valve spring	1.0 (0.039)	8.4 (0.334)	33.8 (1.331)	8.2
⑤	Torque converter check valve spring	1.0 (0.039)	8.4 (0.334)	33.8 (1.331)	8.2
⑥	Lock-up control valve spring	0.7 (0.028)	6.6 (0.262)	38.0 (1.496)	14.1

Servo Body

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Replace the valve body as an assembly if any parts are worn or damaged.
- Coat all parts with ATF during assembly.
- Replace the O-rings.

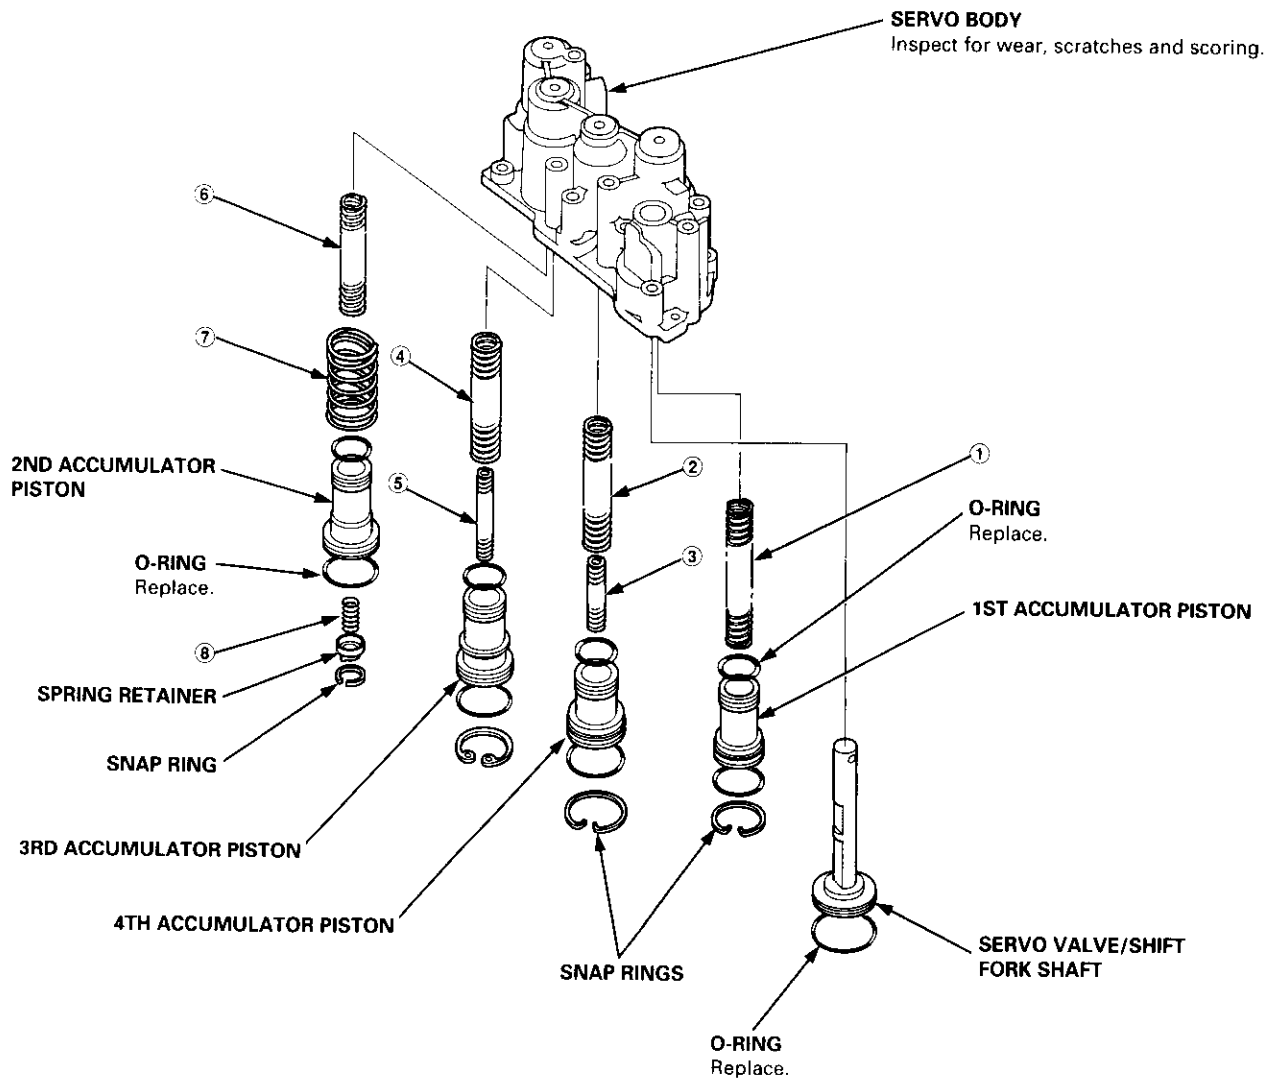

SPRING SPECIFICATIONS

Unit: mm (in)

No.	Springs	Standard (New)			
		Wire Dia.	O.D.	Free Length	No. of Coils
①	1st accumulator spring	2.1 (0.083)	16.0 (0.636)	89.1 (3.508)	16.2
②	4th accumulator spring A	2.6 (0.102)	17.0 (0.676)	87.0 (3.425)	14.2
③	4th accumulator spring B	2.3 (0.091)	10.2 (0.402)	51.6 (2.031)	13.8
④	3rd accumulator spring A	2.8 (0.110)	17.5 (0.695)	89.3 (3.516)	15.6
⑤	3rd accumulator spring B	2.2 (0.087)	31.0 (1.220)	35.1 (1.382)	2.4
⑥	2nd accumulator spring C	2.2 (0.087)	14.5 (0.576)	68.0 (2.677)	13.9
⑦	2nd accumulator spring A	2.4 (0.094)	29.0 (1.152)	39.0 (1.535)	2.9
⑧	2nd accumulator spring B	1.6 (0.063)	9.0 (0.358)	20.7 (0.815)	6.1




Lock-up Valve Body

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Replace the valve body as an assembly if any parts are worn or damaged.
- Check all valves for free movement. If any fail to slide freely, see Valve Body Repair on page 14-107.
- Coat all parts with ATF during assembly.

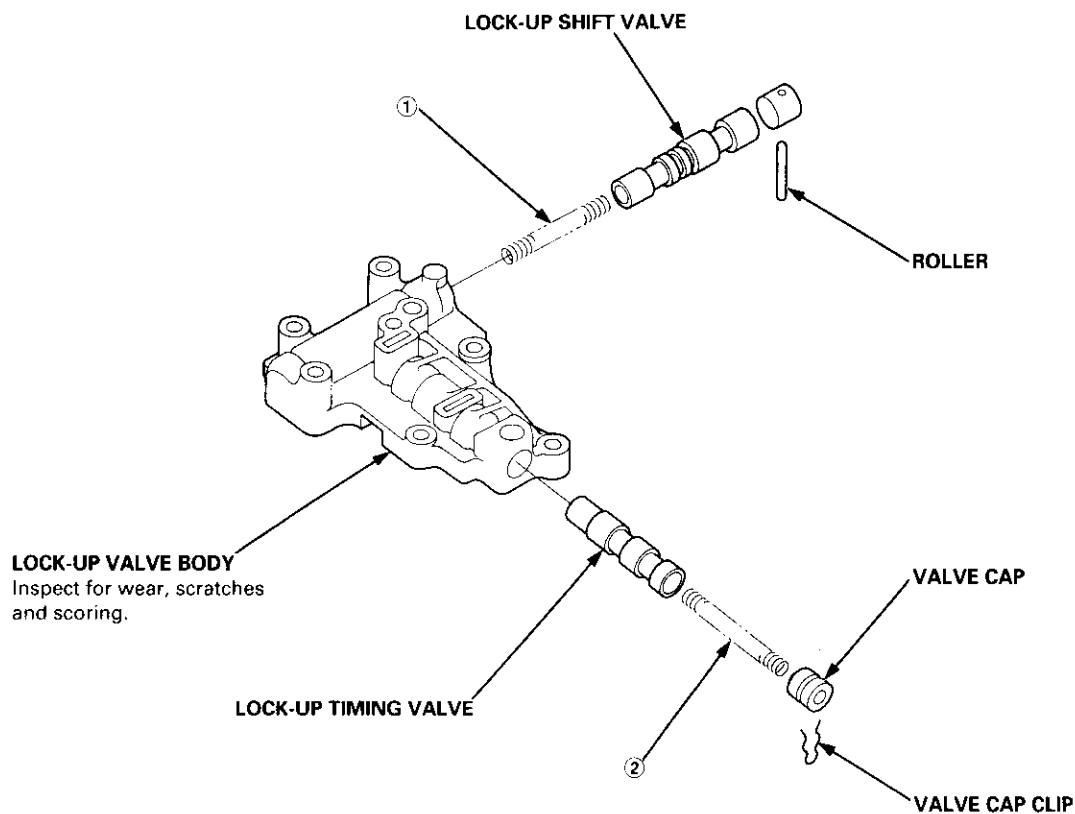

SPRING SPECIFICATIONS

Unit: mm (in)

No.	Springs	Standard (New)			
		Wire Dia.	O.D.	Free Length	No. of Coils
①	Lock-up shift valve spring	0.9 (0.035)	7.6 (0.302)	73.7 (2.902)	32.0
②	Lock-up timing valve spring	0.9 (0.035)	8.1 (0.319)	80.7 (3.177)	45.8

Mainshaft


Disassembly/Inspection/Reassembly

NOTE:

- Lubricate all parts with ATF during reassembly.
- Inspect the thrust needle bearings and the needle bearings for galling and rough movement.
- Before installing the O-rings, wrap the shaft splines with tape to prevent damaging the O-rings.
- Locknut has left-hand threads.

MAINSHAFT

Check splines for excessive wear and damage.
Check bearing surface for scoring, scratches and excessive wear.

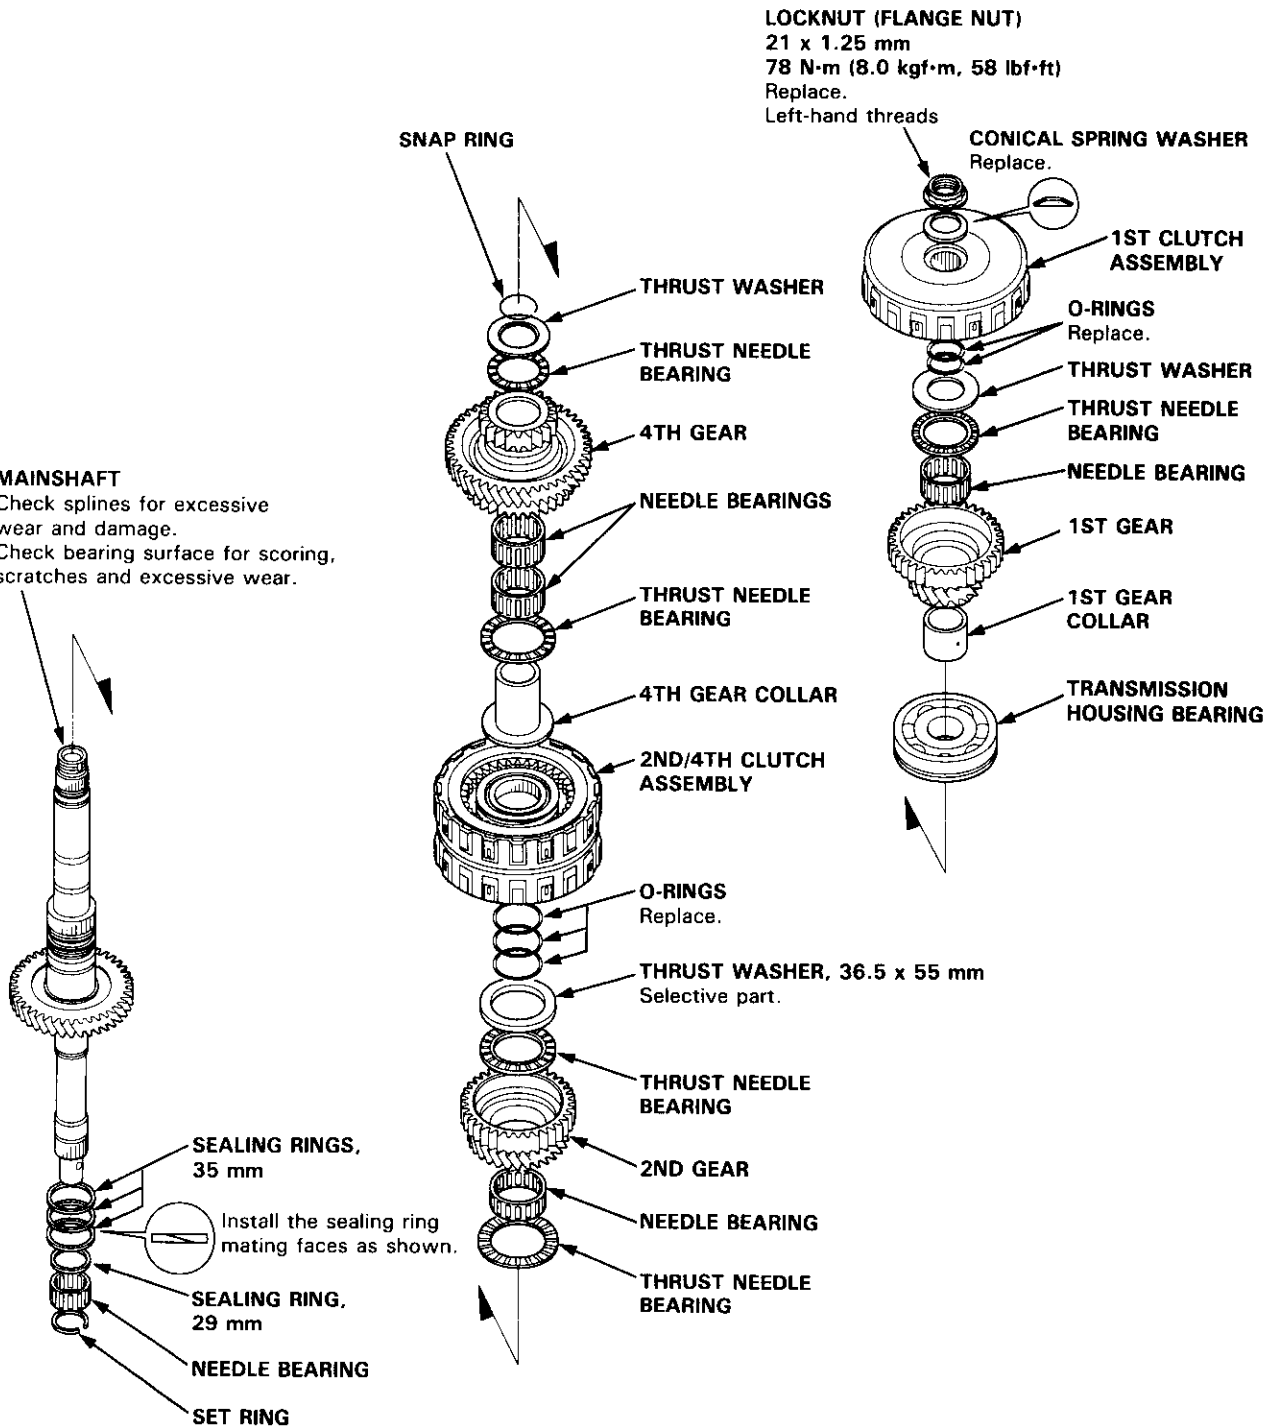




Inspection

● Clearance Measurement

NOTE: Lubricate all parts with ATF during assembly.


1. Remove the mainshaft bearing from the transmission housing (see page 14-142).
2. Assemble the parts below on the mainshaft.

NOTE: Do not assemble the O-rings during inspection.

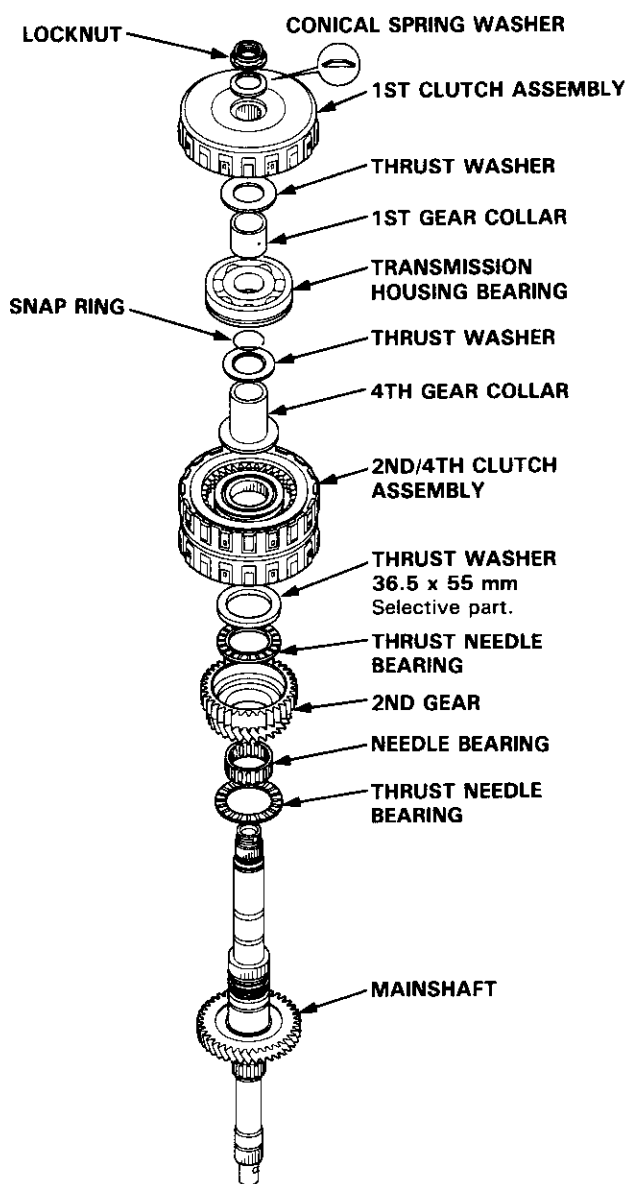

3. Torque the mainshaft locknut to 29 N·m (3.0 kgf·m, 22 lbf·ft).


NOTE: Mainshaft locknut has left-hand threads.

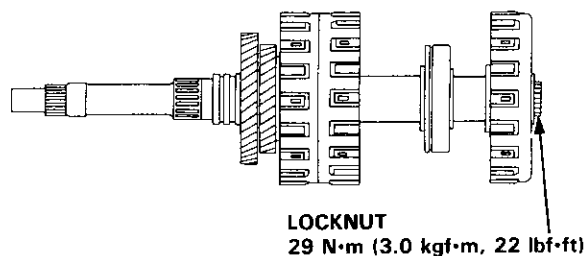

4. Hold 2nd gear against the 2nd clutch, then measure the clearance between 2nd gear and 3rd gear with a feeler gauge.

NOTE: Take measurements in at least three places, and use the average as the actual clearance.

STANDARD: 0.05 – 0.13 mm (0.002 – 0.005 in)

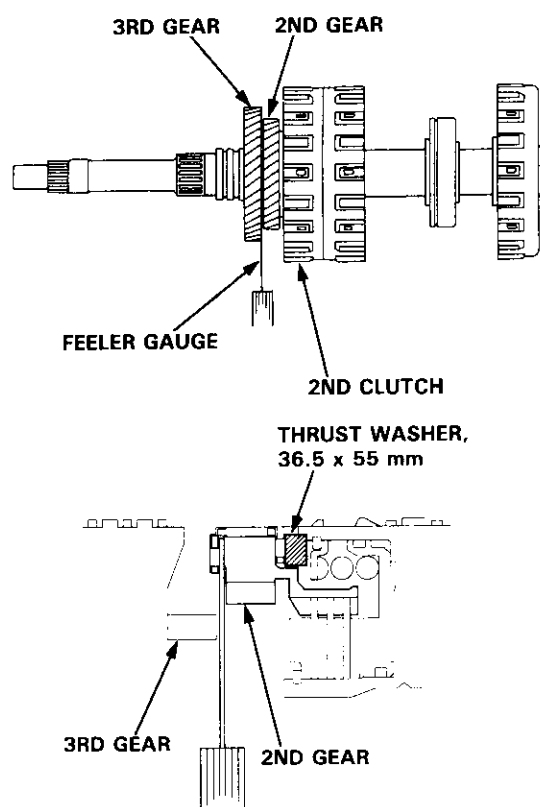


(cont'd)

Mainshaft

Inspection (cont'd)

5. If the clearance is out of tolerance, remove the thrust washer and measure the thickness.

THRUST WASHER

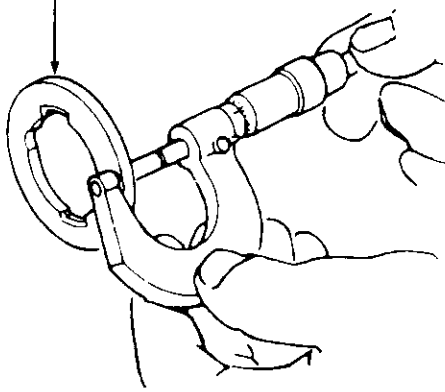

6. Select and install a new washer, then recheck.

THRUST WASHER 36.5 x 55 mm

No.	Part Number	Thickness
1	90441 - P4P - 010	4.00 mm (0.157 in)
2	90442 - P4P - 010	4.05 mm (0.159 in)
3	90443 - P4P - 010	4.10 mm (0.161 in)
4	90444 - P4P - 010	4.15 mm (0.163 in)
5	90445 - P4P - 010	4.20 mm (0.165 in)
6	90446 - P4P - 010	4.25 mm (0.167 in)
7	90447 - P4P - 010	4.30 mm (0.169 in)
8	90448 - P4P - 010	4.35 mm (0.171 in)
9	90449 - P4P - 010	4.40 mm (0.173 in)
10	90450 - P4P - 000	4.45 mm (0.175 in)

7. After replacing the thrust washer, make sure the clearance is within tolerance.


Countershaft



Disassembly/Inspection/Reassembly

NOTE:

- Lubricate all parts with ATF before reassembly.
- Inspect the thrust needle bearings and the needle bearings for galling and rough movement.
- Before installing the O-rings, wrap the shaft splines with tape to prevent damaging the O-rings.
- Locknut has left-hand threads.

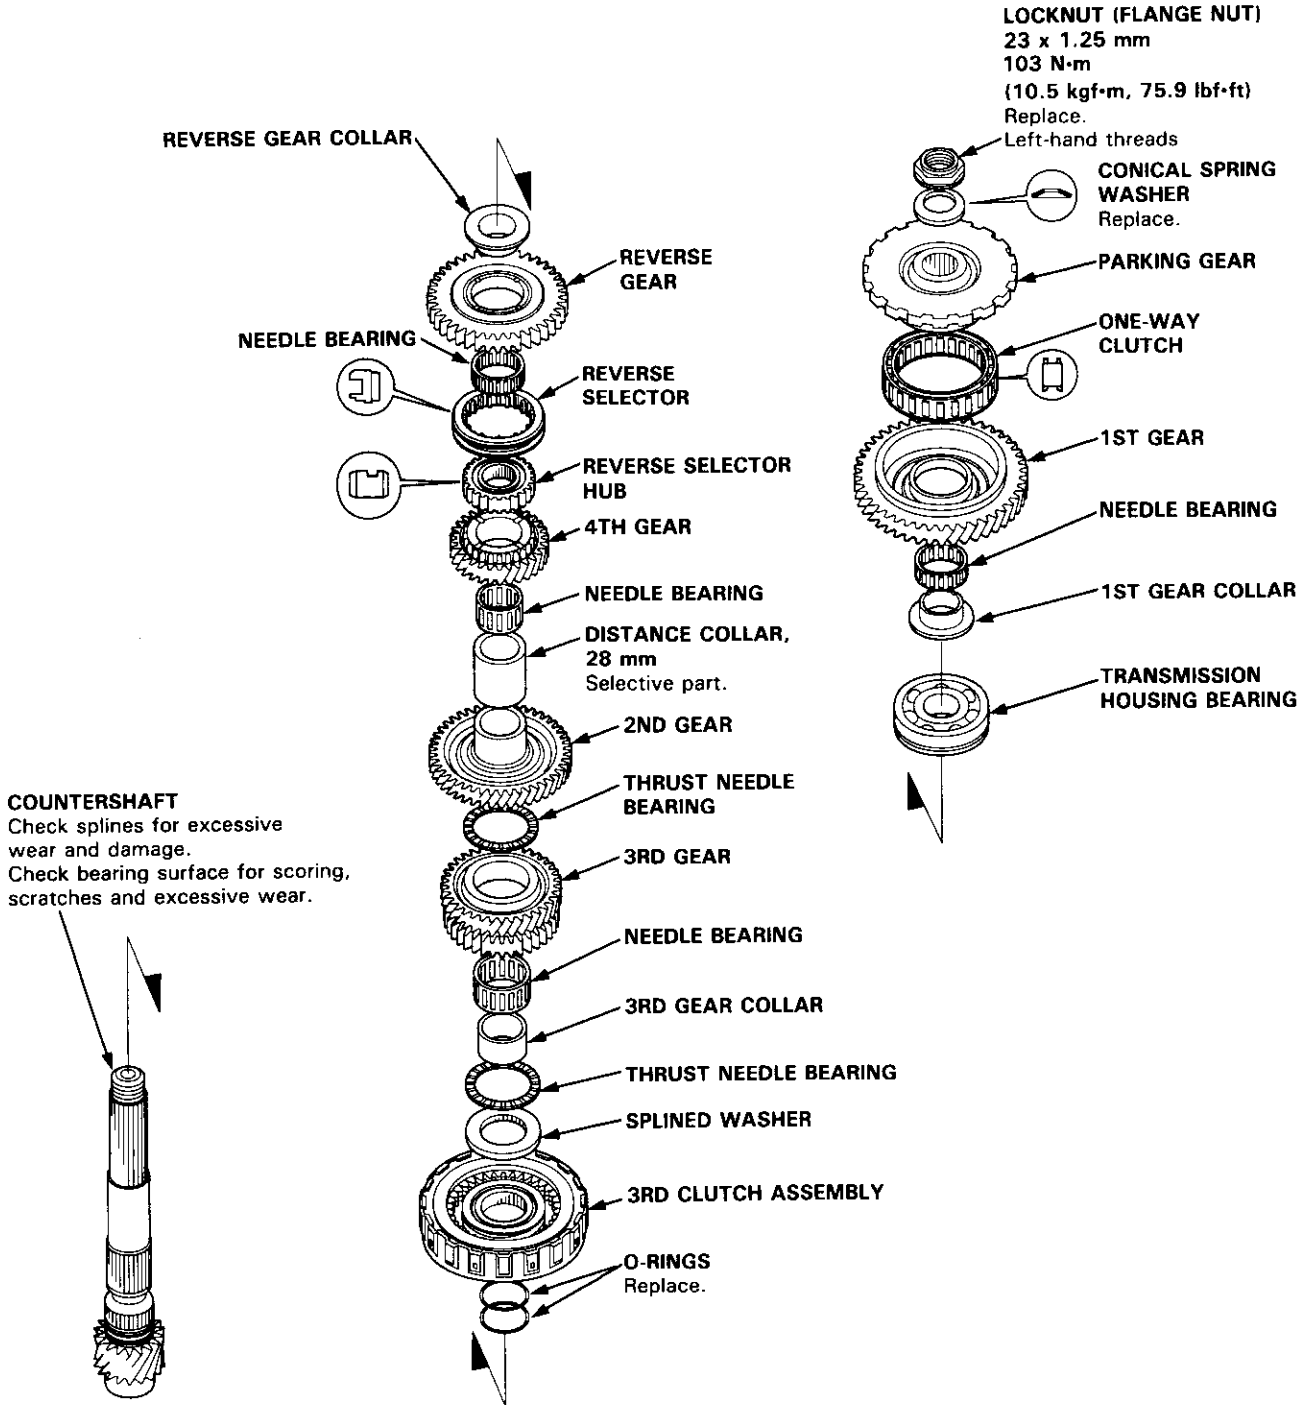


Countershaft

Disassembly/Reassembly

1. Using a hydraulic press, press out the countershaft while supporting 4th gear.

NOTE: Place an attachment between the press and the countershaft to prevent damage to the shaft.


CAUTION: Do not allow the countershaft to fall and hit the ground when pressed clear.

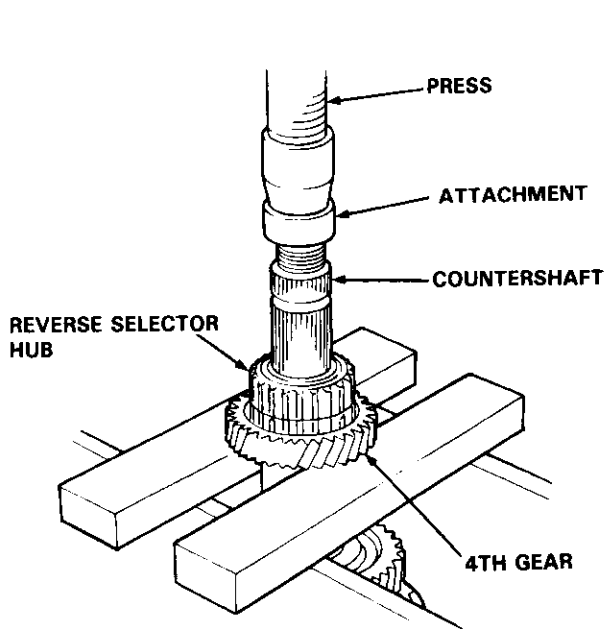

2. Assemble the parts on the countershaft as shown below.


NOTE:

- Lubricate all parts with ATF during assembly.
- Before installing the O-rings, wrap the shaft splines with tape to prevent damaging the O-rings.

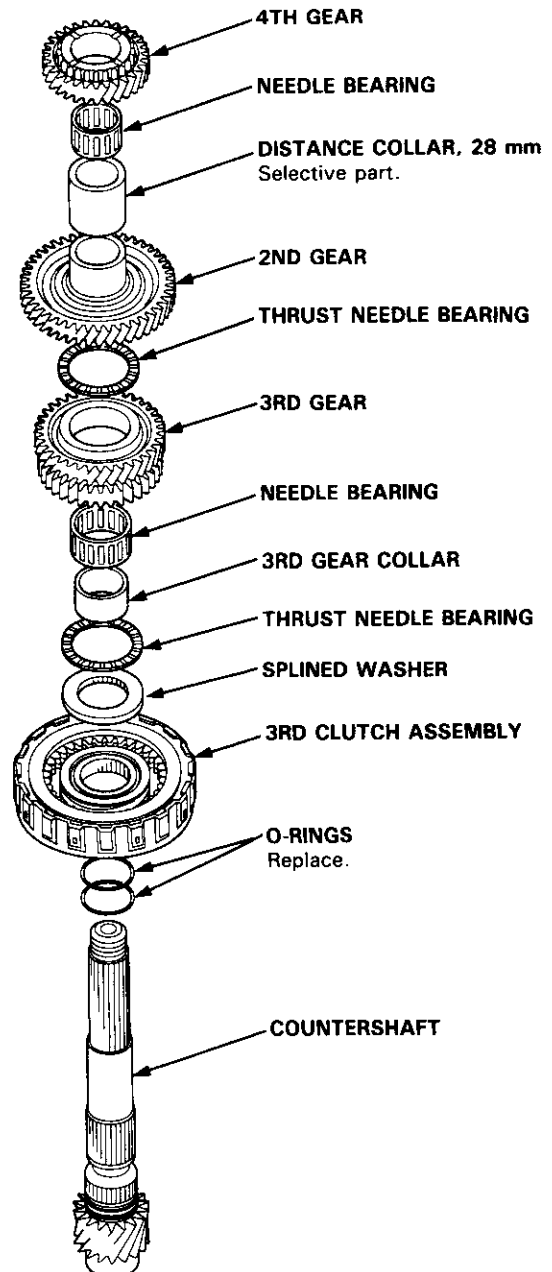



3. Install the reverse selector hub on the countershaft sub-assembly, and then press the reverse selector hub using the special tool and a press as shown.

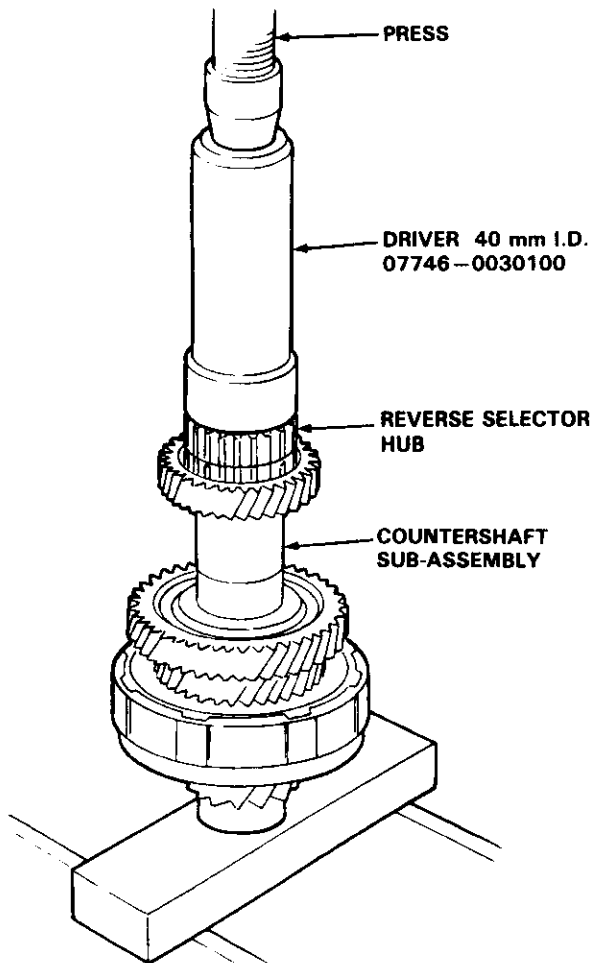


Inspection

- Clearance Measurement

NOTE: Lubricate all parts with ATF during assembly.

1. Remove the countershaft bearing from the transmission housing (see page 14-142).
2. Install the parts below on the countershaft using the special tool and a press as described on this page.

NOTE: Do not assemble the O-rings during inspection.

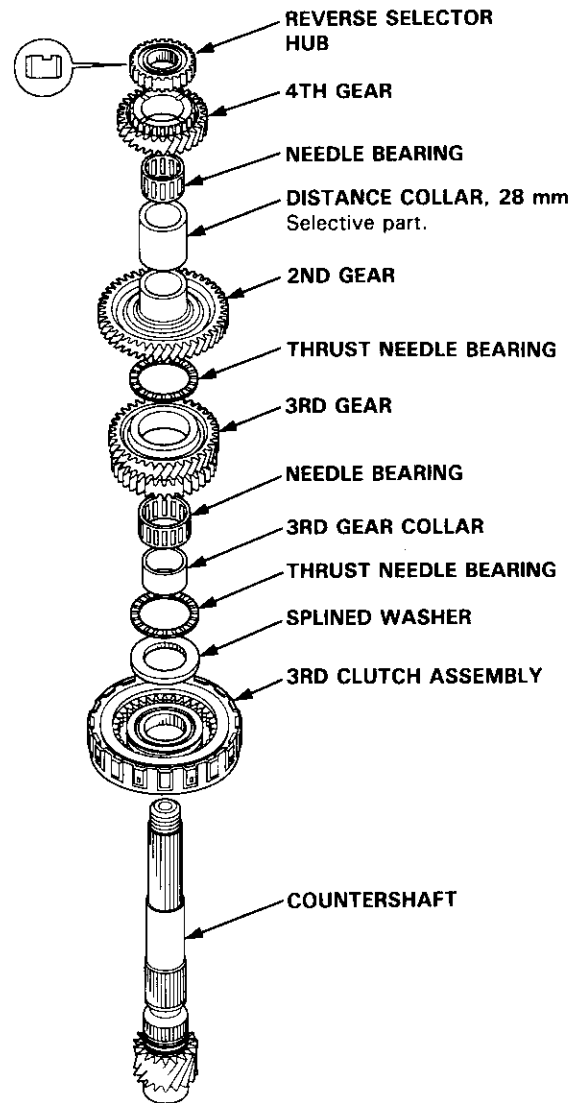


(cont'd)

Countershaft

Inspection (cont'd)

3. Install the parts below on the countershaft sub-assembly, then torque the locknut to 29 N·m (3.0 kgf·m, 22 blf·ft).


NOTE: Countershaft locknut has left-hand threads.

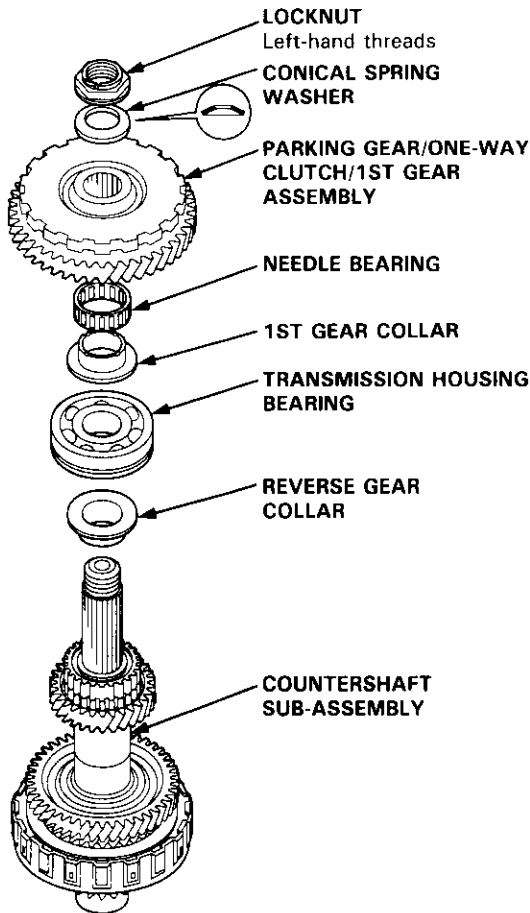

4. Measure the clearance between the 2nd gear and the 28 mm distance collar with a feeler gauge.

NOTE: Take measurements in at least three places, and use the average as the actual clearance.

STANDARD: 0.10 – 0.18 mm (0.004 – 0.007 in)

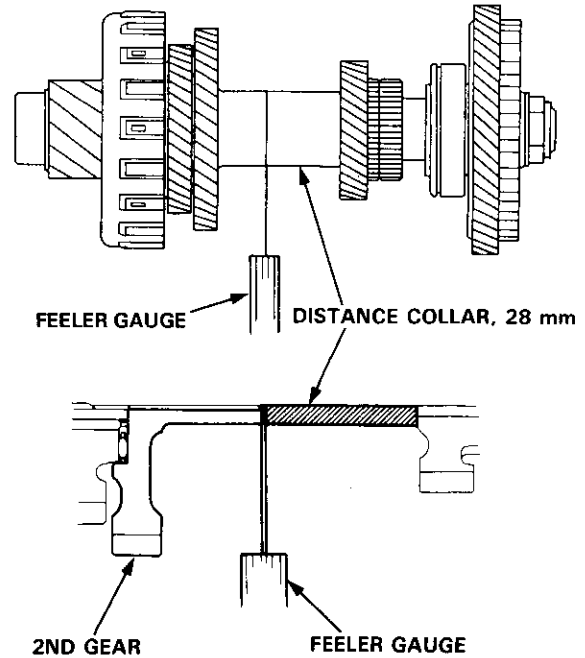

5. If the clearance is out of tolerance, remove the 28 mm distance collar and measure the width.
6. Select and install a new distance collar, then recheck.

DISTANCE COLLAR, 28 mm

No.	Part Number	Width
1	90503 – PC9 – 000	39.00 mm (1.535 in)
2	90504 – PC9 – 000	39.10 mm (1.539 in)
3	90505 – PC9 – 000	39.20 mm (1.543 in)
4	90507 – PC9 – 000	39.30 mm (1.547 in)
5	90508 – PC9 – 000	39.05 mm (1.537 in)
6	90509 – PC9 – 000	39.15 mm (1.541 in)
7	90510 – PC9 – 000	39.25 mm (1.545 in)
8	90511 – PC9 – 000	38.90 mm (1.531 in)
9	90512 – PC9 – 000	38.95 mm (1.533 in)


7. After selecting a new distance collar, recheck the clearance and make sure it is within tolerance.




One-way Clutch

Disassembly/Inspection/Reassembly

1. Separate countershaft 1st gear from the parking gear by turning the parking gear in the direction shown.


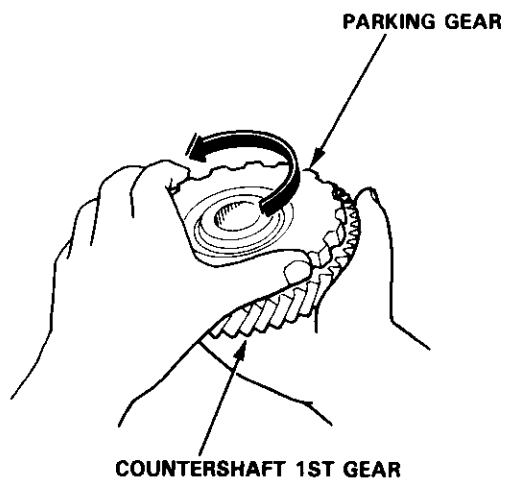


2. Remove the one-way clutch by prying it up with the end of a screwdriver.

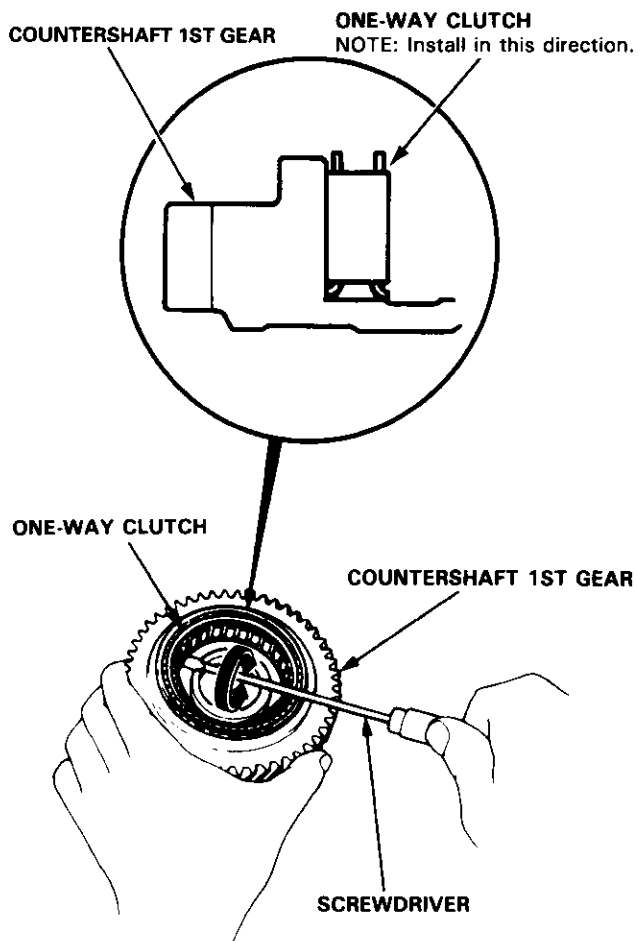


3. Inspect the parts as follows:

PARKING GEAR
Inspect the parking gear for wear and scoring.

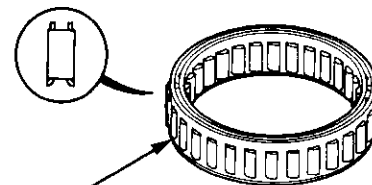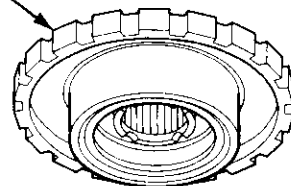


ONE-WAY CLUTCH
Inspect the one-way clutch for damage and faulty movement.

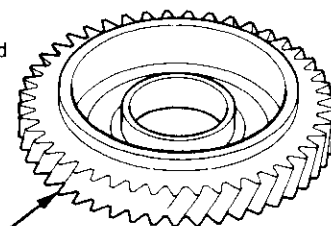

1ST GEAR
Inspect countershaft 1st gear for wear and scoring.


4. After the parts are assembled, hold countershaft 1st gear and turn the parking gear in the direction shown to be sure it turns freely. Also make sure the parking gear does not turn in the opposite direction.

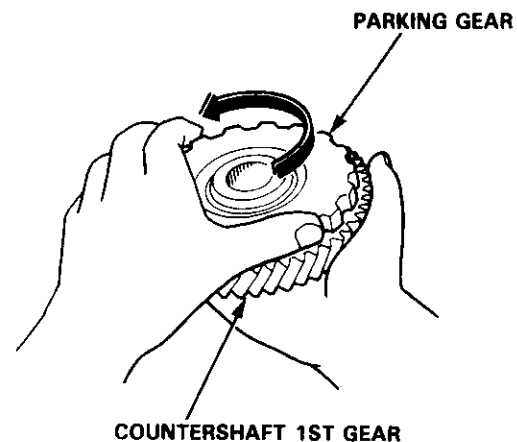


Clutch

Illustrated Index (A4RA, B4RA Transmission)

3RD CLUTCH

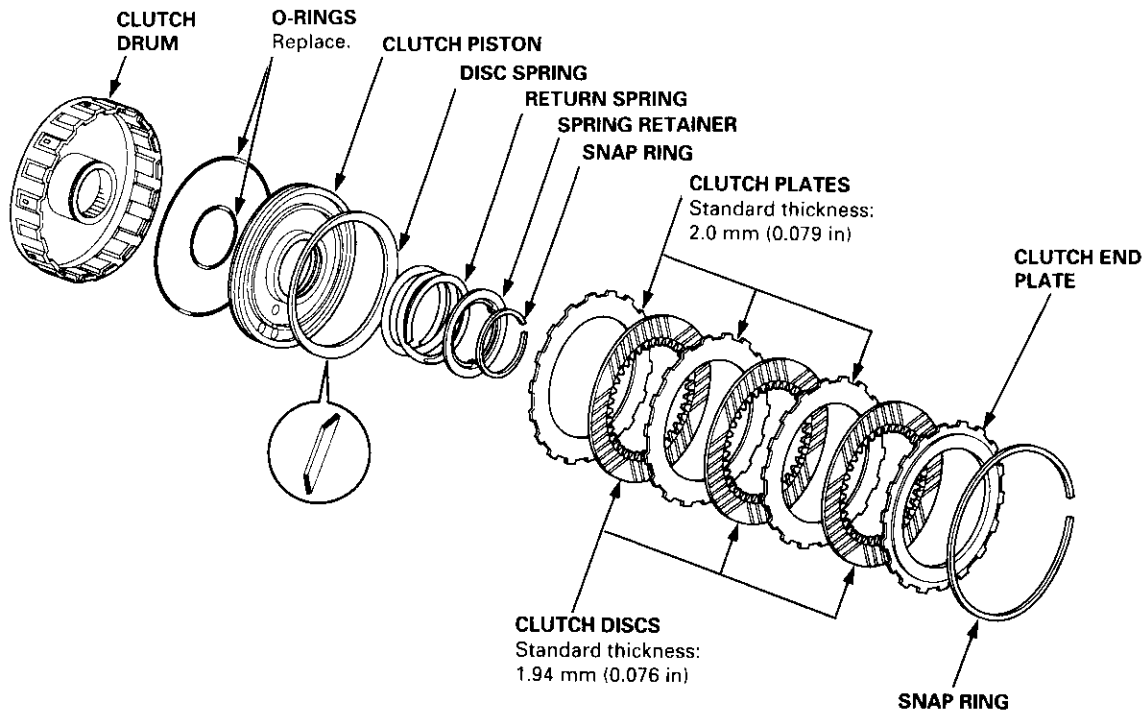


1ST CLUTCH

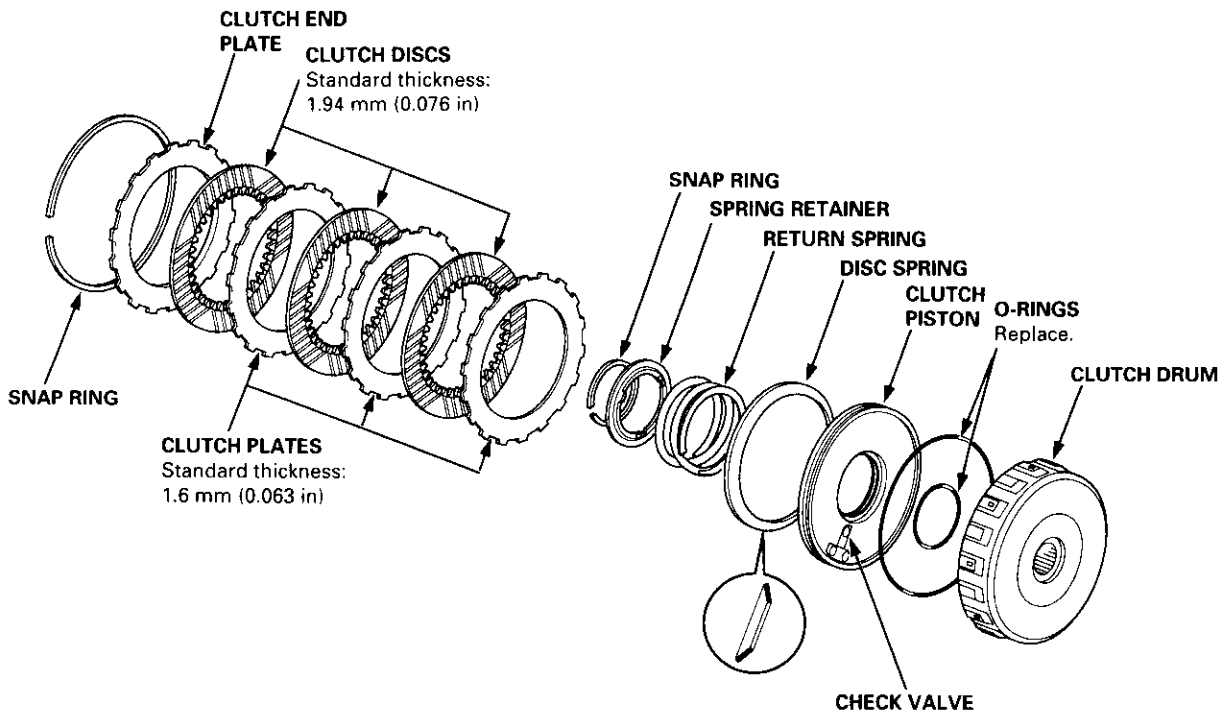




2ND/4TH CLUTCH

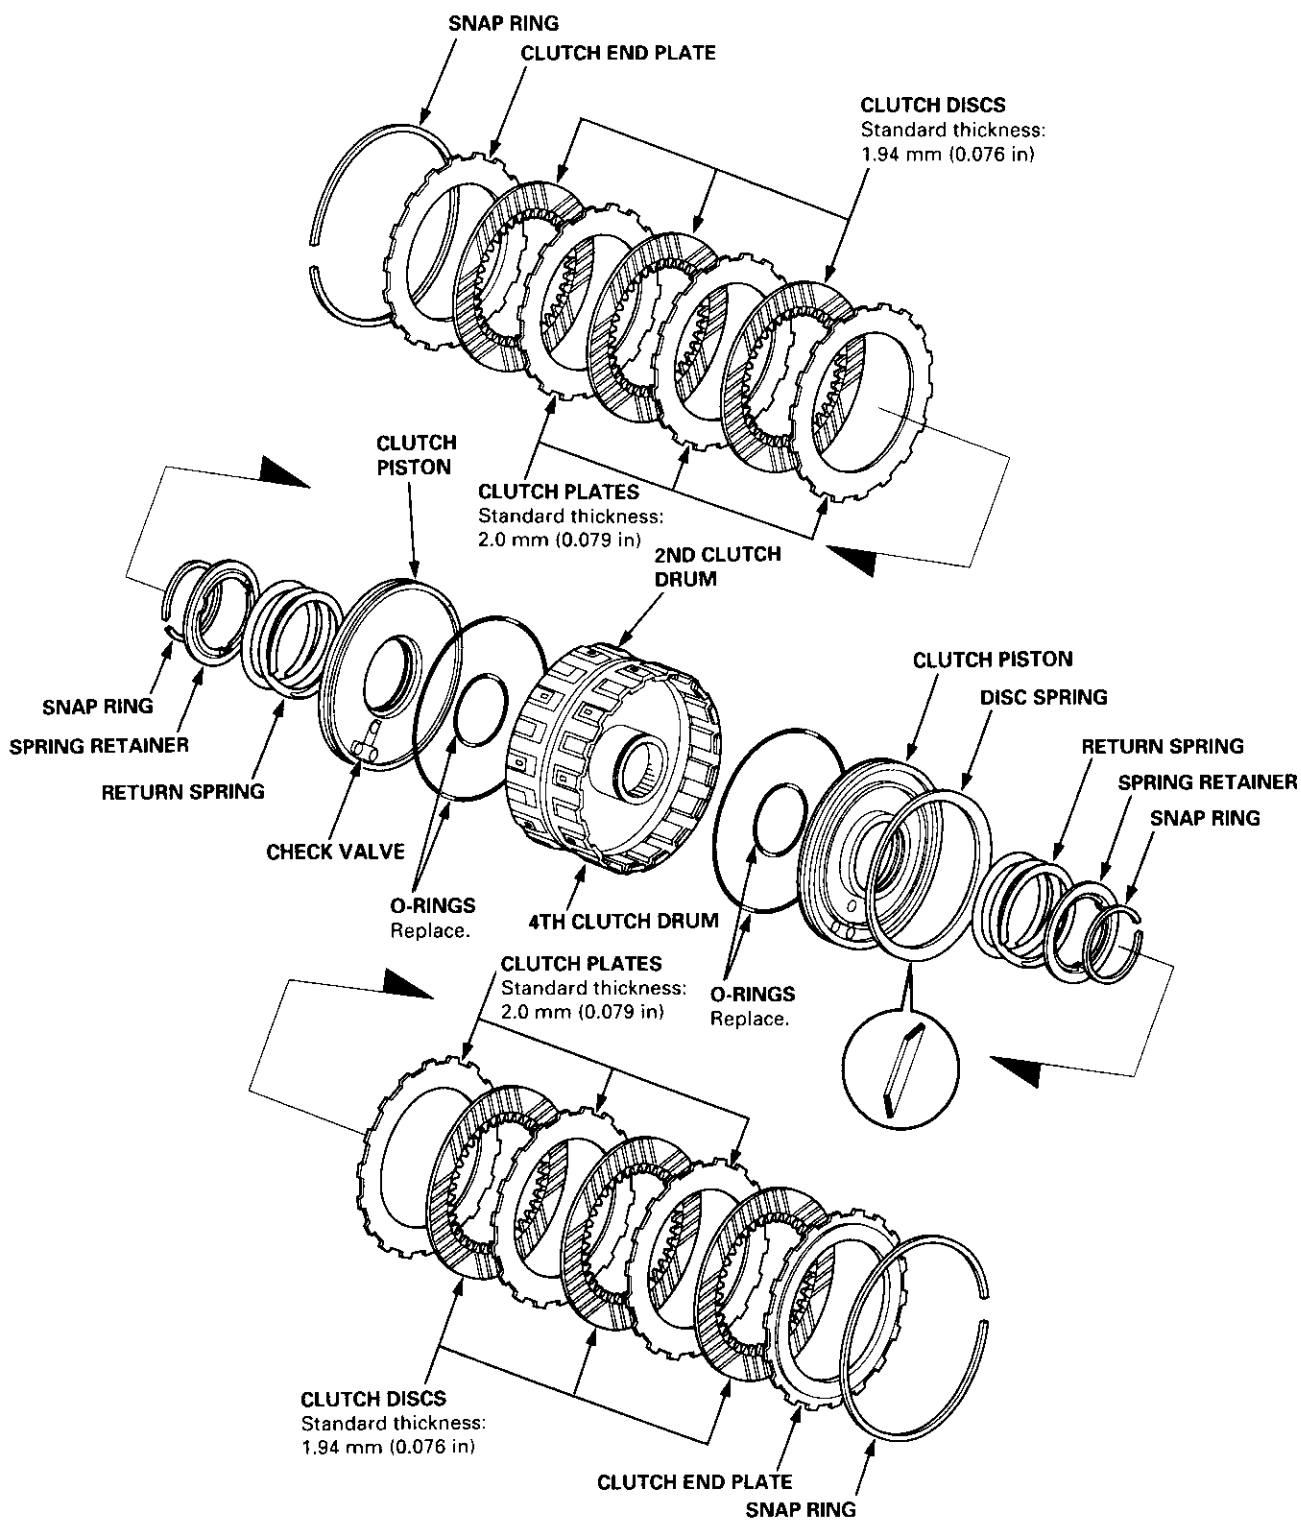


Clutch

Illustrated Index (M4RA Transmission)

3RD CLUTCH

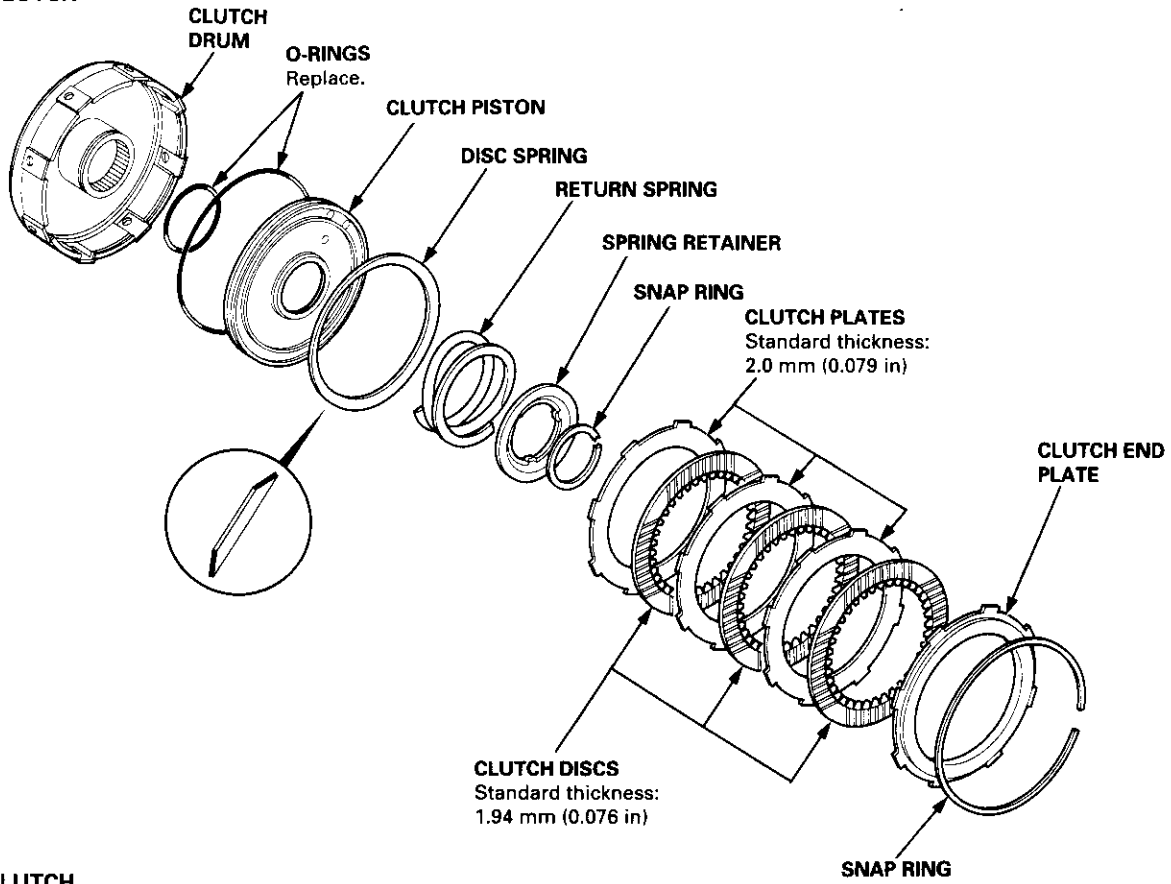


1ST CLUTCH

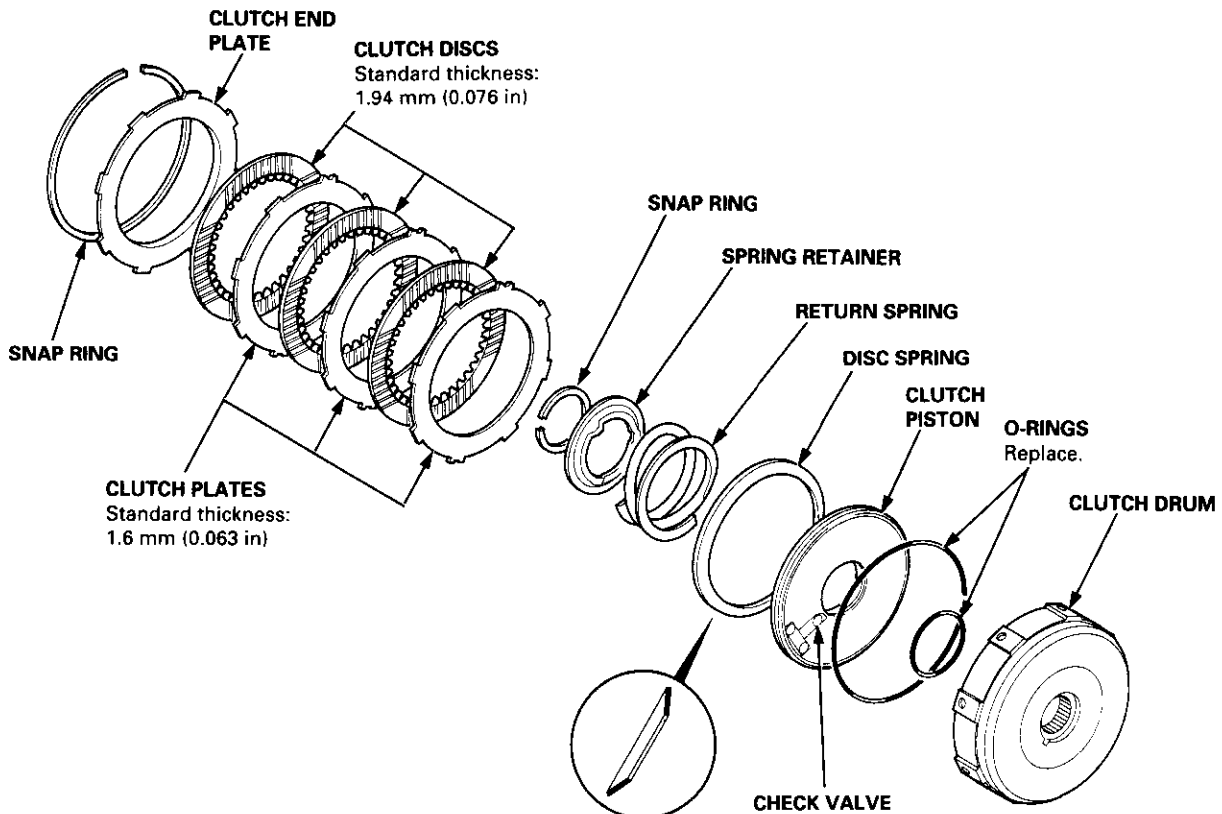




2ND/4TH- CLUTCH

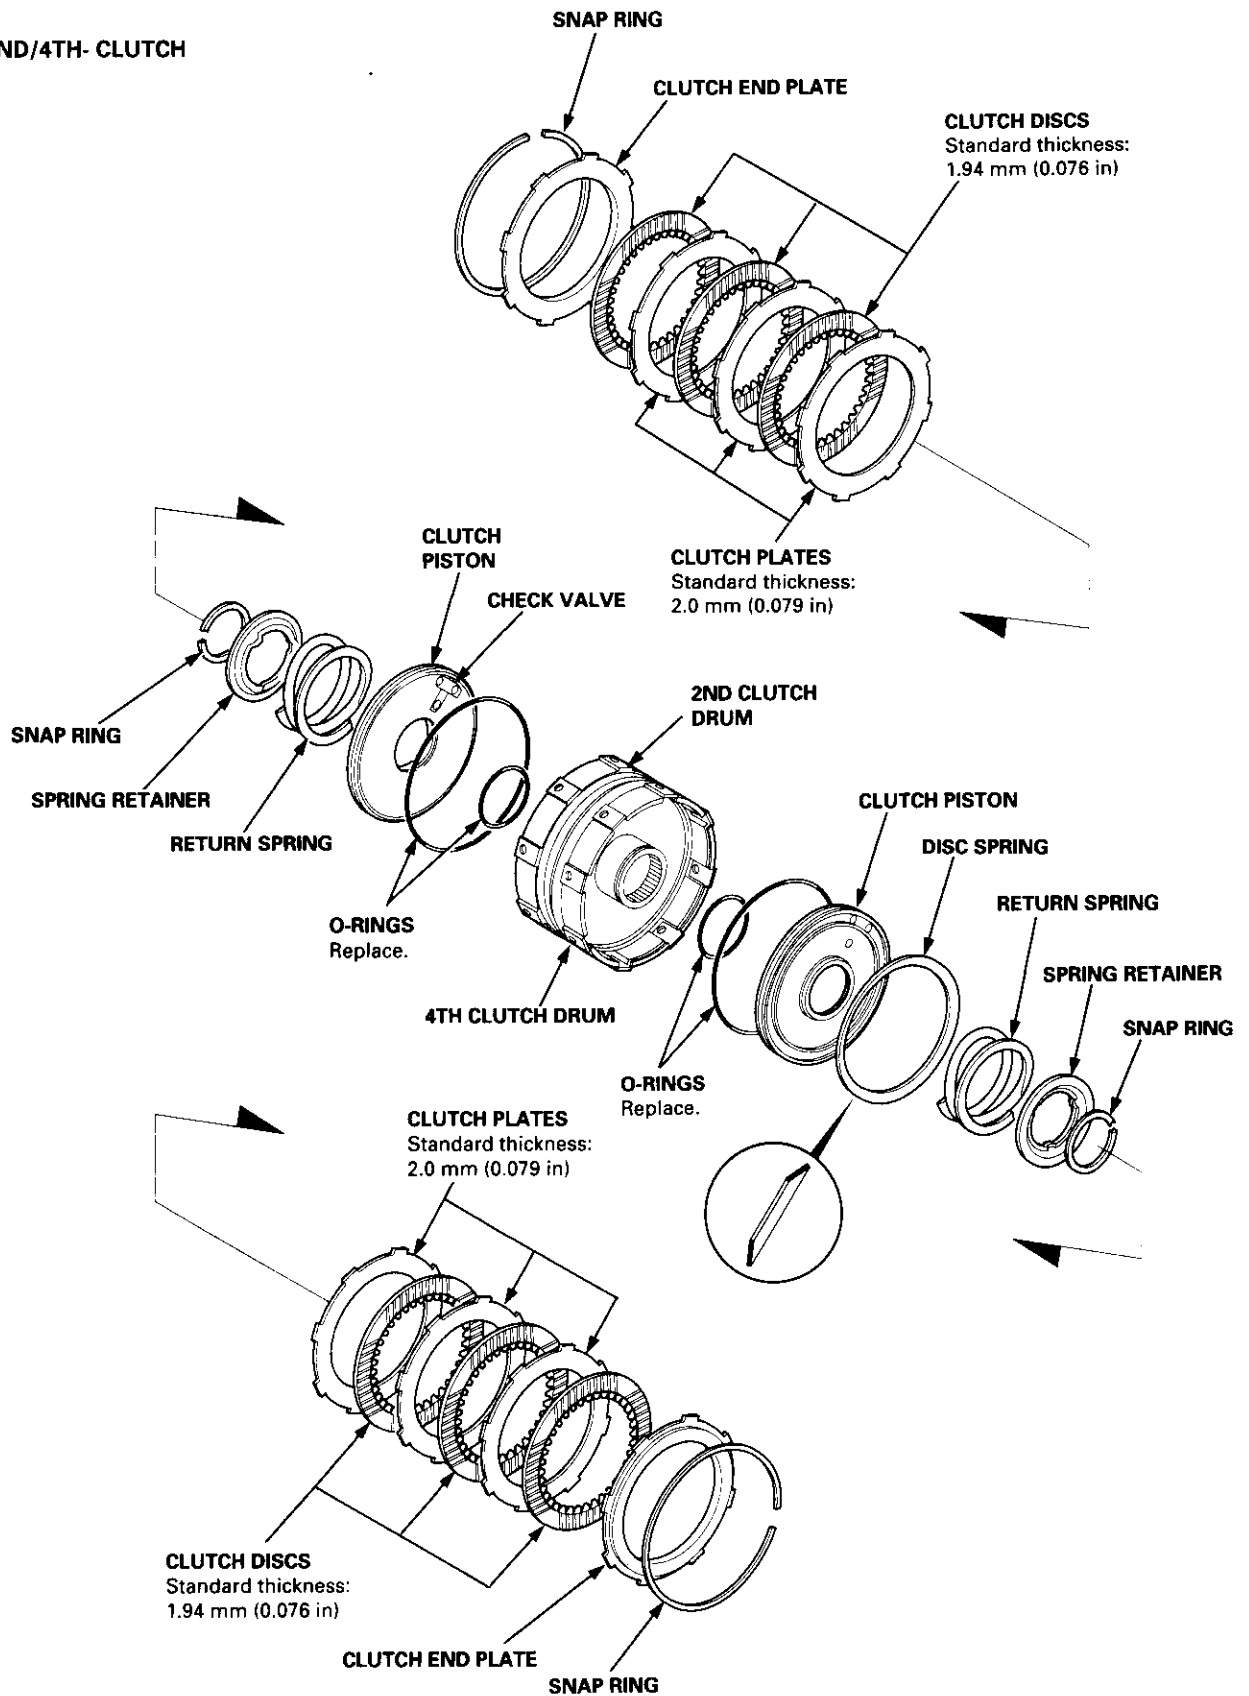

Clutch


Disassembly

1. Remove the snap ring, then remove the clutch end plate, clutch discs and plates.


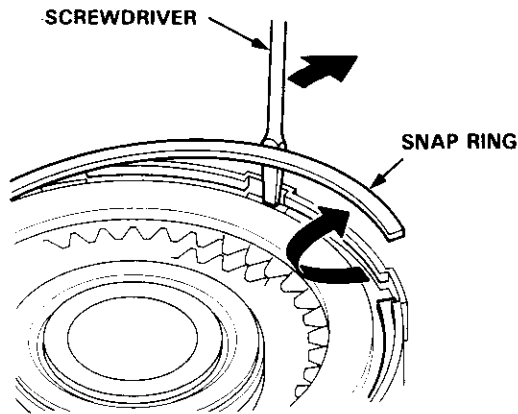


2. Remove the disc spring.

NOTE: Except 2nd clutch.


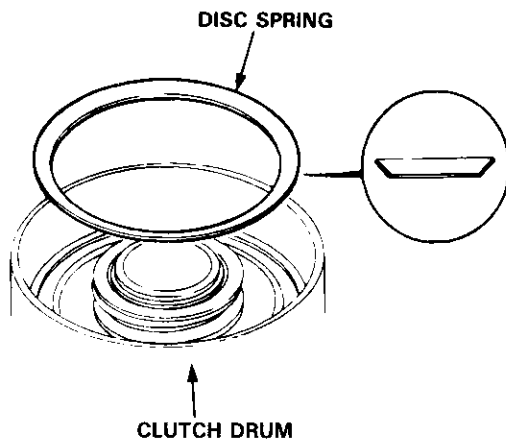


3. Install the special tools as shown.

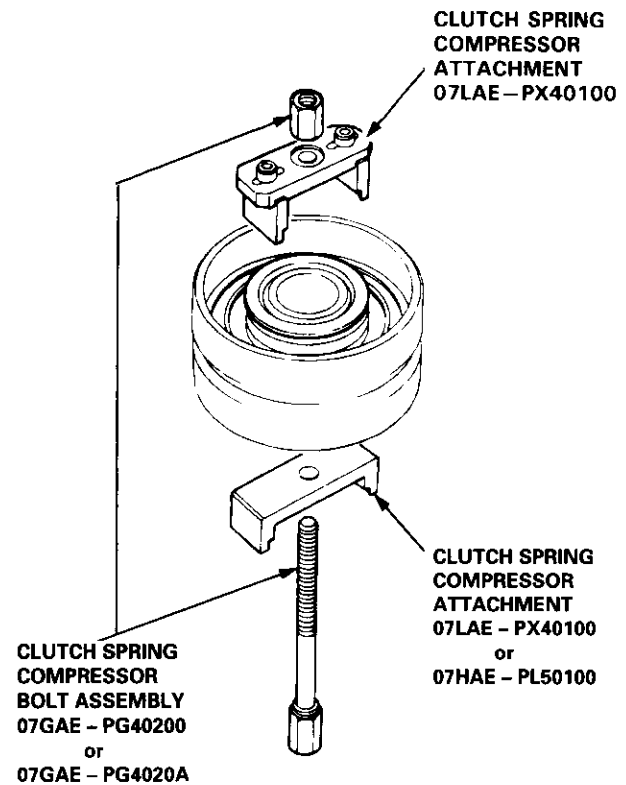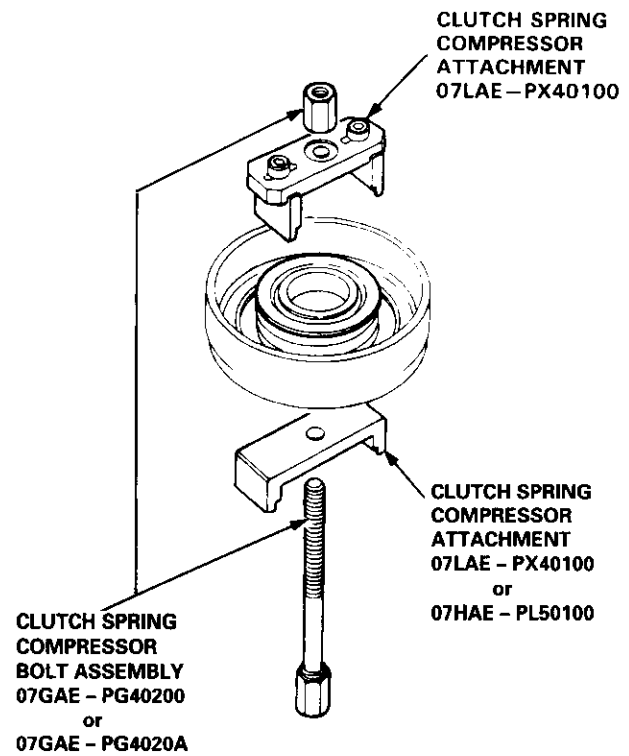





CAUTION: If either end of the special tool is set over an area of the spring retainer which is unsupported by the return spring, the retainer may be damaged. Be sure the special tool is adjusted to have full contact with the spring retainer.

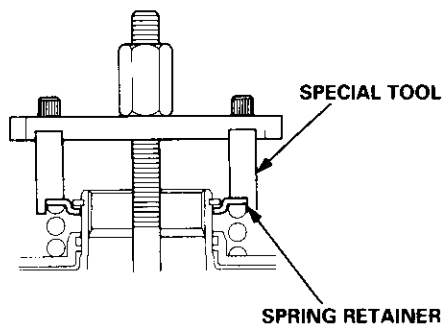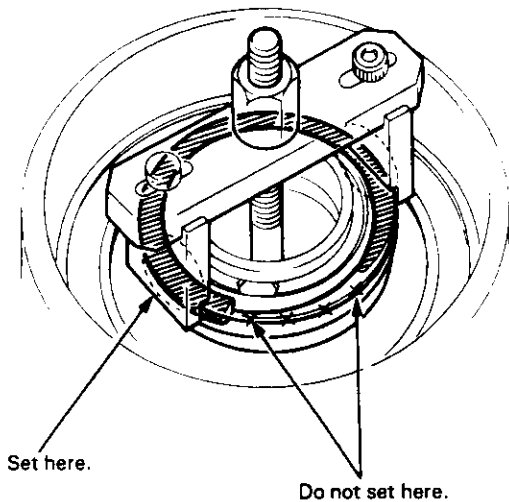


4. Compress the return spring.

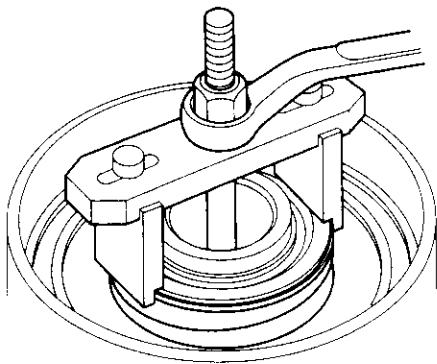

5. Remove the snap ring. Then remove the special tools, spring retainer and return spring.

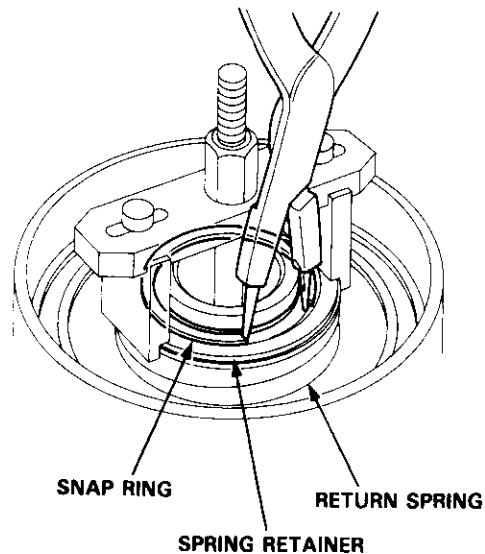

6. Wrap a shop rag around the clutch drum, and apply air pressure to the ATF passage to remove the piston. Place a finger tip on the other end while applying air pressure.

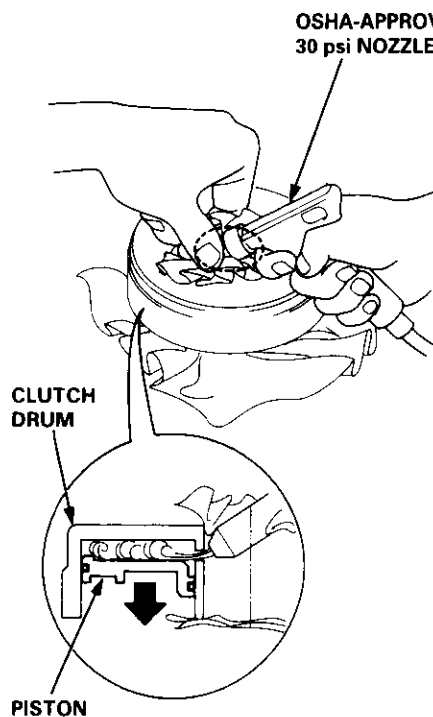


Clutch

Reassembly


NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry them with compressed air.
- Blow out all passages.
- Lubricate all parts with ATF before reassembly.

1. Inspect the check valve; if it's loose, replace the piston.

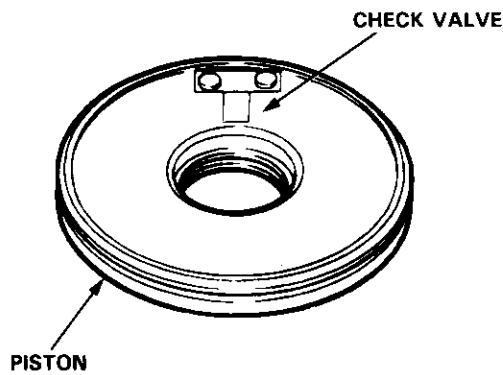


2. Install new O-rings on the clutch piston.

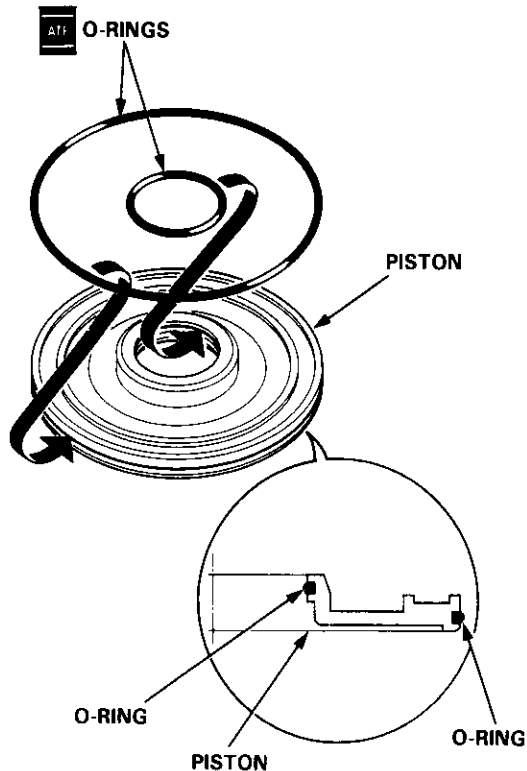


3. Install the piston in the clutch drum. Apply pressure and rotate to ensure proper seating.

NOTE: Lubricate the piston O-ring with ATF before installing.

CAUTION: Do not pinch the O-ring by installing the piston with too much force.


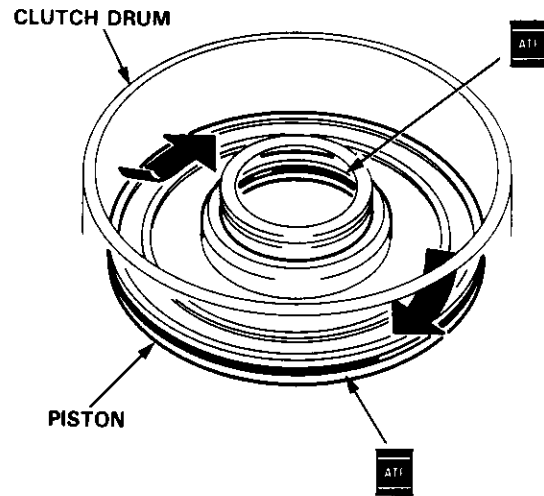


4. Install the return spring and spring retainer, and position the snap ring on the retainer.


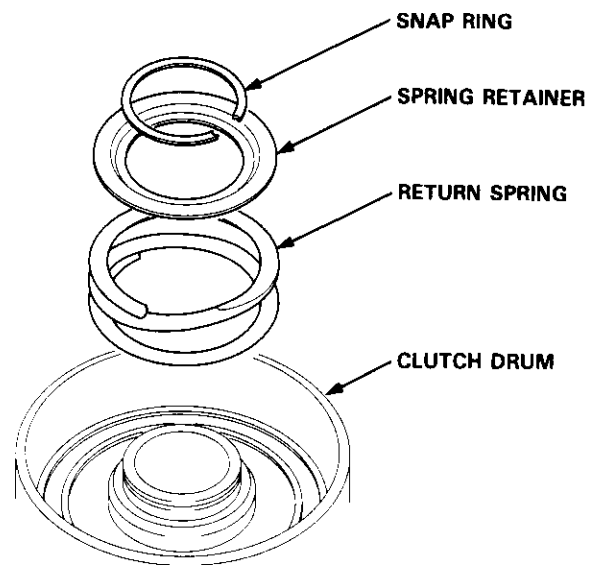





5. Install the special tools as shown.

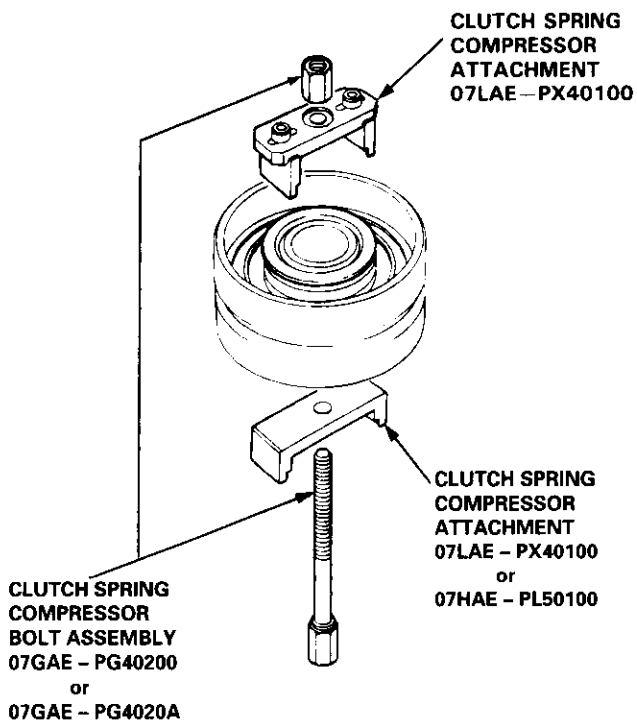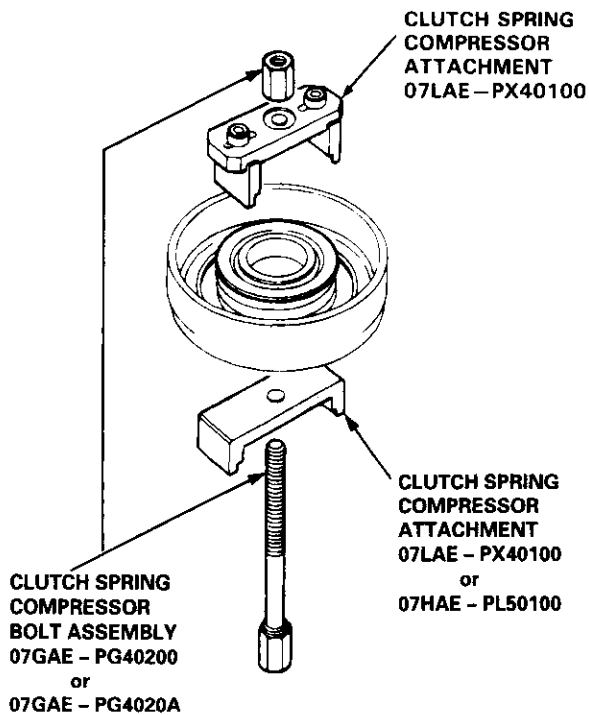

CAUTION: If either end of the special tool is set over an area of the spring retainer which is unsupported by the return spring, the retainer may be damaged. Be sure the special tool is adjusted to have full contact with the spring retainer.

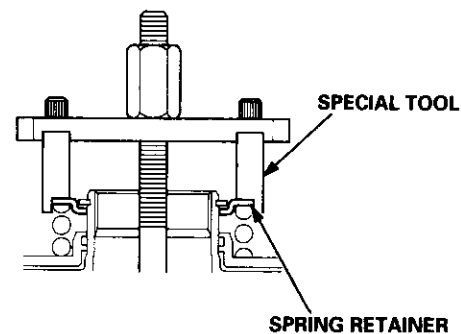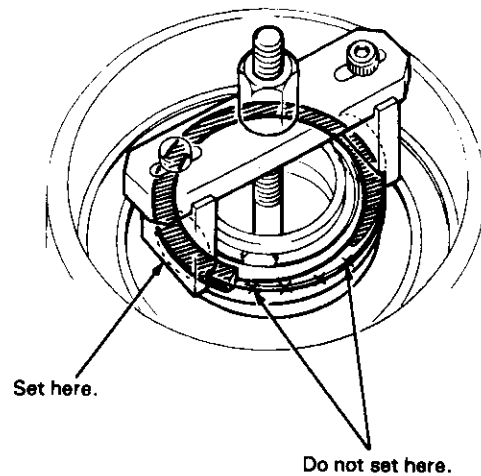

6. Compress the return spring.

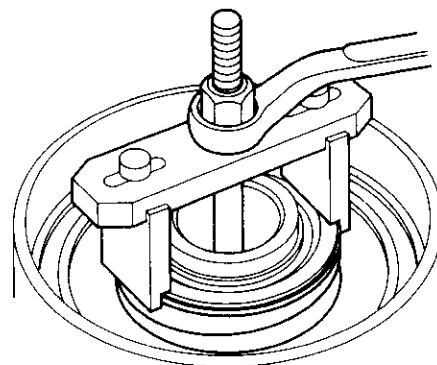


(cont'd)

Clutch


Reassembly (cont'd)

7. Install the snap ring.

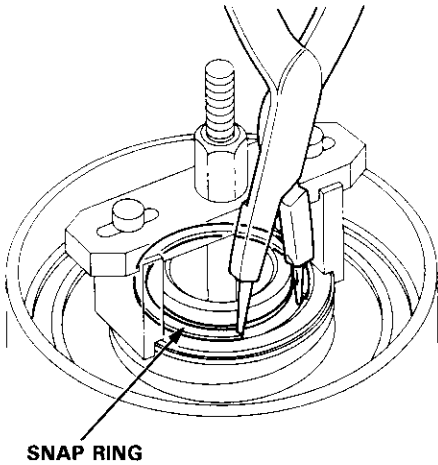


8. Remove the special tools.
9. Install the disc spring.

NOTE: Install the disc spring in the direction shown, except 2nd clutch.

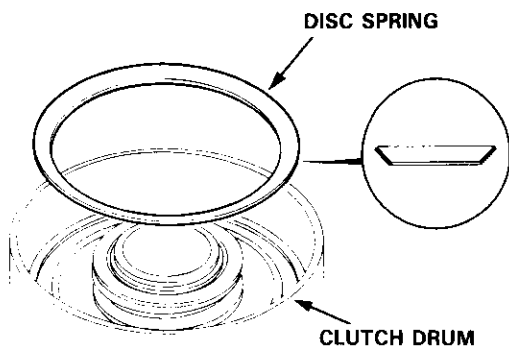


10. Soak the clutch discs thoroughly in ATF for a minimum of 30 minutes.
11. Starting with a clutch plate, alternately install the clutch plates and discs. Install the clutch end plate with flat side toward the disc.

NOTE: Before installing the plates and discs, make sure the inside of the clutch drum is free of dirt or other foreign matter.

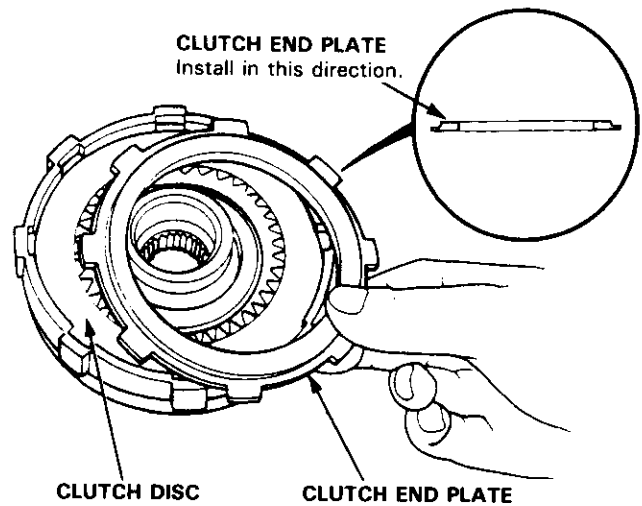

12. Install the snap ring.

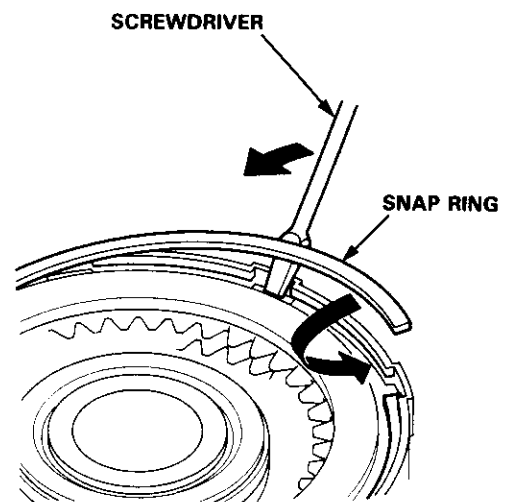




- Measure the clearance between the clutch end plate and top disc with a dial indicator. Zero the dial indicator with the clutch end plate lowered and lift it up to the snap ring. The distance that the clutch end plate moves is the clearance between the clutch end plate and top disc.

NOTE: Take measurements in at least three places, and use the average as the actual clearance.


Clutch End Plate-to-Top Disc Clearance:

Clutch	Service Limit
1st	0.65 – 0.85 mm (0.026 – 0.033 in)
2nd	0.65 – 0.85 mm (0.026 – 0.033 in)
3rd	0.40 – 0.60 mm (0.016 – 0.024 in)
4th	0.40 – 0.60 mm (0.016 – 0.024 in)

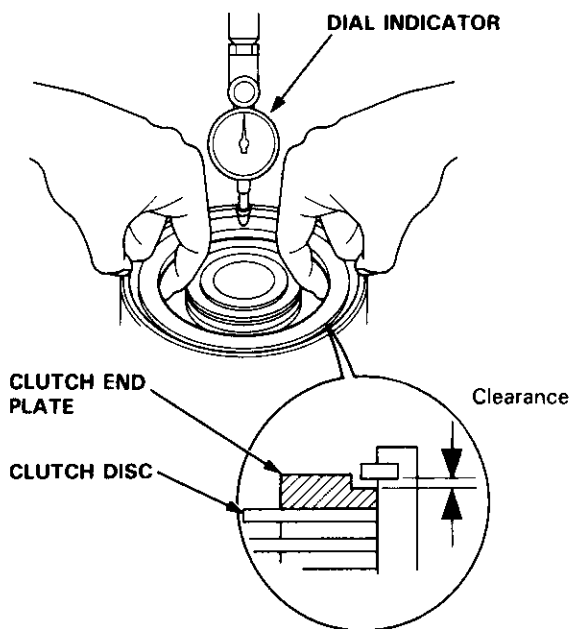

- If the clearance is not within the service limits, select a new clutch end plate from the following table.

NOTE: If the thickest clutch end plate is installed, but the clearance is still over the standard, replace the clutch discs and clutch plates.

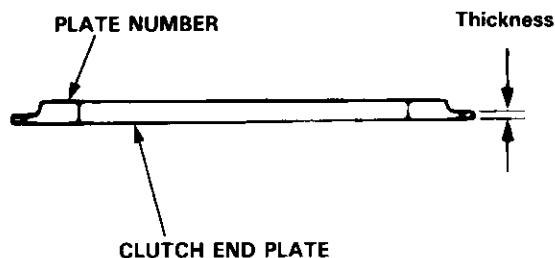

CLUTCH END PLATE

A4RA, B4RA Transmission:

Plate No.	Part Number	Thickness
1	22551 – P4R – 003	2.1 mm (0.083 in)
2	22552 – P4R – 003	2.2 mm (0.087 in)
3	22553 – P4R – 003	2.3 mm (0.091 in)
4	22554 – P4R – 003	2.4 mm (0.094 in)
5	22555 – P4R – 003	2.5 mm (0.098 in)
6	22556 – P4R – 003	2.6 mm (0.102 in)
7	22557 – P4R – 003	2.7 mm (0.106 in)
8	22558 – P4R – 003	2.8 mm (0.110 in)
9	22559 – P4R – 003	2.9 mm (0.114 in)


M4RA Transmission:

Plate No.	Part Number	Thickness
1	22551 – PC9 – 000	2.4 mm (0.094 in)
2	22552 – PC9 – 000	2.5 mm (0.098 in)
3	22553 – PC9 – 000	2.6 mm (0.102 in)
4	22554 – PC9 – 000	2.7 mm (0.106 in)
5	22555 – PC9 – 000	2.8 mm (0.110 in)
6	22556 – PC9 – 000	2.9 mm (0.114 in)
7	22557 – PC9 – 000	3.0 mm (0.118 in)
8	22558 – PC9 – 000	3.1 mm (0.122 in)
9	22559 – PC9 – 000	3.2 mm (0.126 in)
10	22560 – PC9 – 000	3.3 mm (0.130 in)
11	22561 – PC9 – 000	2.1 mm (0.082 in)
12	22562 – PC9 – 000	2.2 mm (0.086 in)
13	22563 – PC9 – 000	2.3 mm (0.090 in)
14	22574 – P4V – 003	3.4 mm (0.134 in)
15	22561 – P4V – 003	3.5 mm (0.138 in)
16	22562 – P4V – 003	3.6 mm (0.142 in)
17	22563 – P4V – 003	3.7 mm (0.146 in)
18	22564 – P4V – 003	3.8 mm (0.150 in)

- After replacing the clutch end plate, make sure that the clearance is within tolerance.

Differential


Illustrated Index

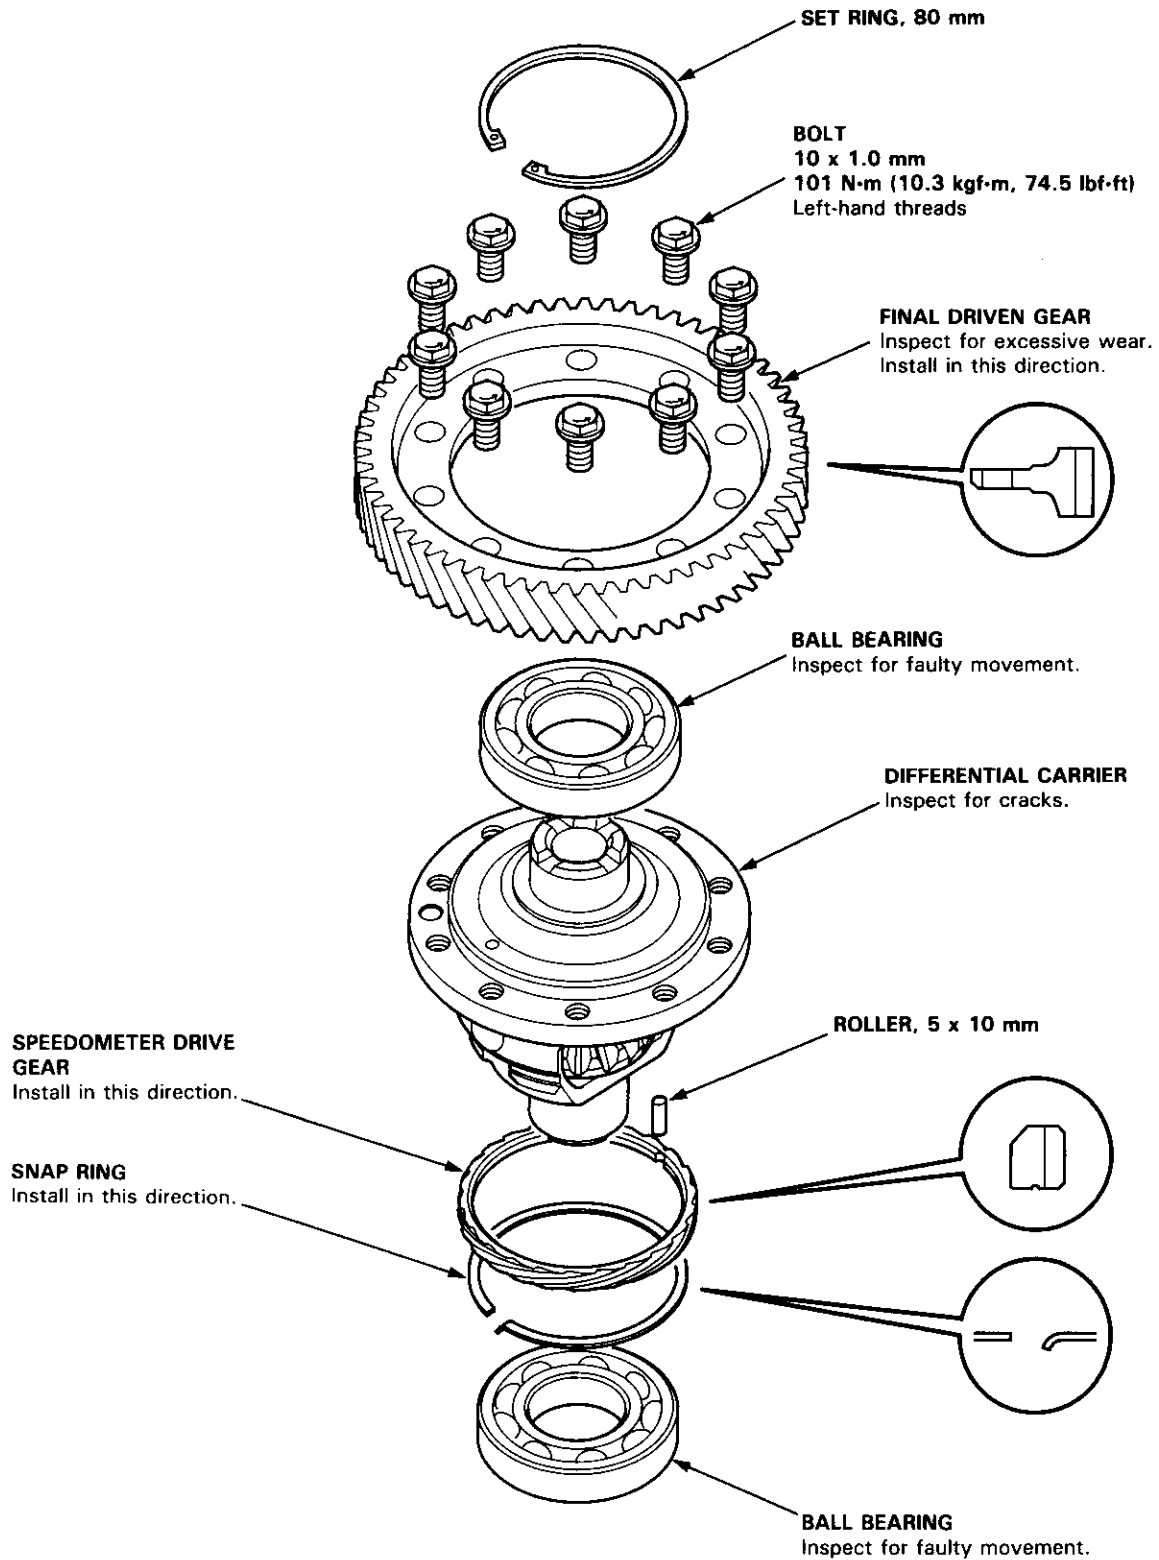



Backlash Inspection

1. Place differential assembly on V-blocks and install both axles.

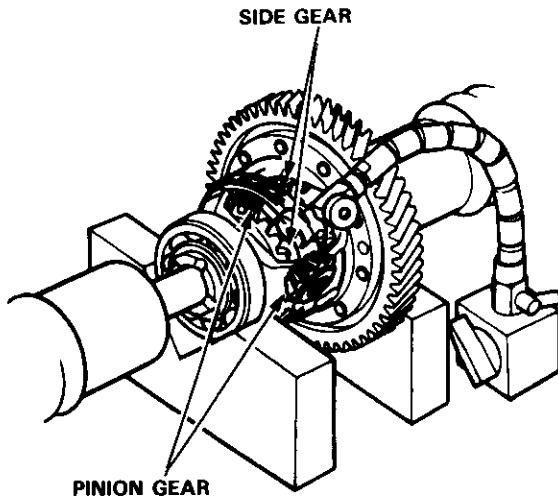

2. Check backlash of both pinion gears.


Standard (New): 0.05 – 0.15 mm (0.002 – 0.006 in)

3. If backlash is out of tolerance, replace the differential carrier.


Bearing Replacement

NOTE: Check bearings for wear and rough rotation. If bearings are OK, removal is not necessary.

1. Remove bearings using a bearing puller.

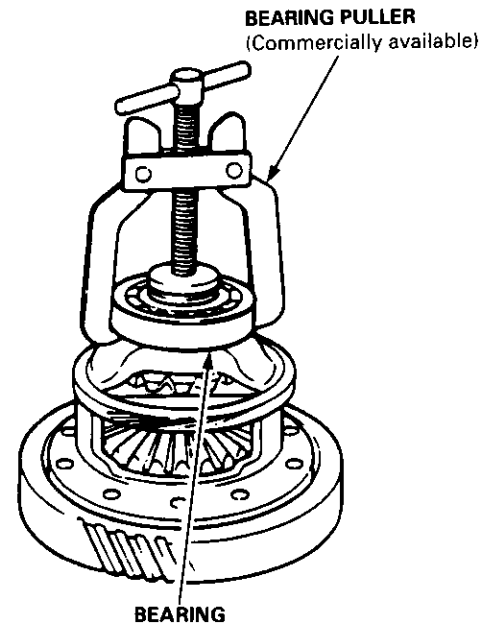

2. Install new bearings using the special tool as shown.

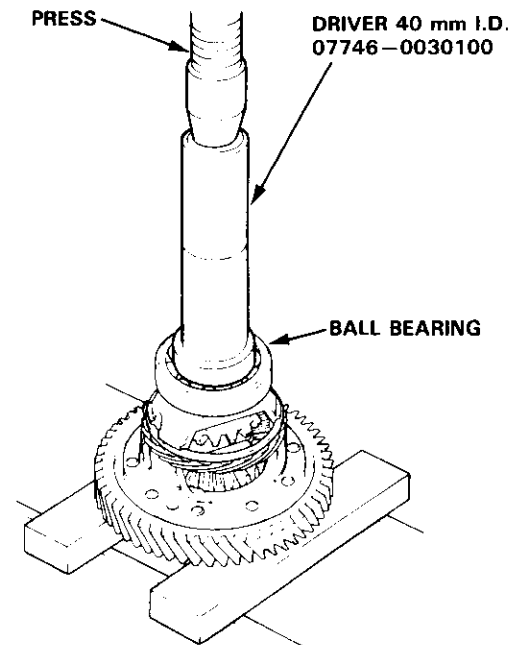


Differential

Differential Carrier Replacement


1. Remove the final driven gear from the differential carrier.

NOTE: The final driven gear bolts have left-hand threads.

2. Pry the snap ring off differential carrier, then remove the speedometer drive gear and 5 x 10 mm roller.

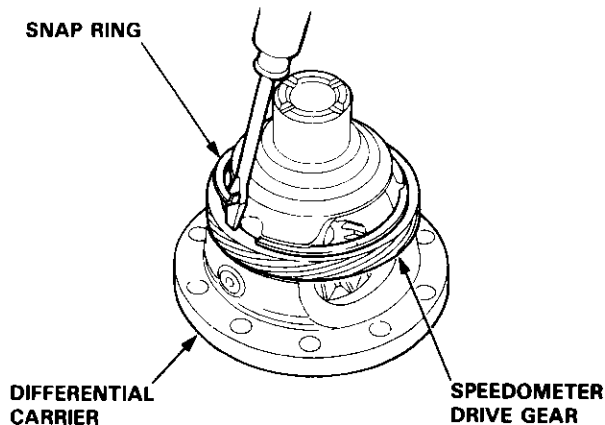


3. Install the 5 x 10 mm roller in the differential carrier.

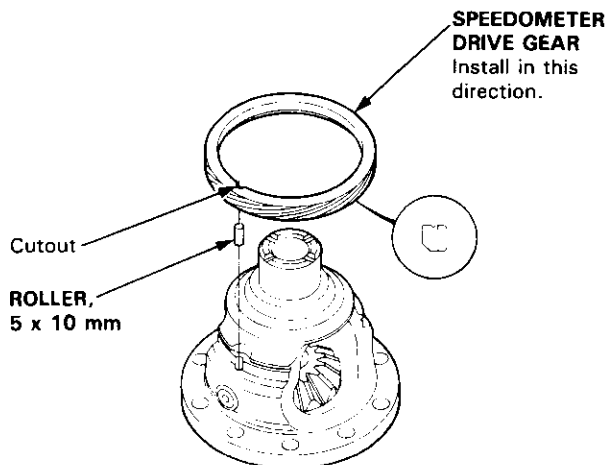

4. Install the speedometer drive gear with its chamfered side facing the carrier. Align the cutout on the bore of the speedometer drive gear with the 5 x 10 mm roller.


5. Align the hooked end of the snap ring with the pinion shaft as shown, then install the snap ring in the differential carrier groove.

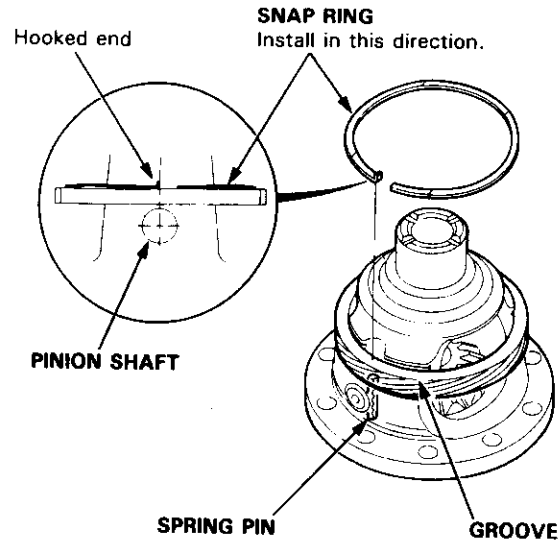

6. Install the final driven gear, then tighten the bolts to the specified torque.

TORQUE: 101 N·m (10.3 kgf·m, 74.5 lbf·ft)

NOTE: The final driven gear bolts have left-hand threads.

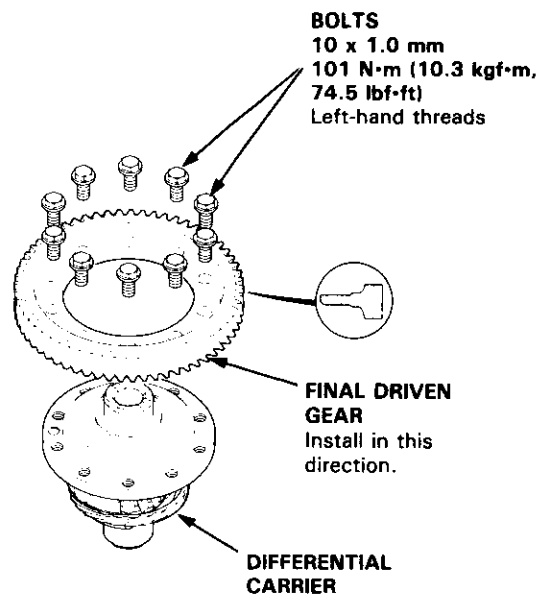


7. Install a new ball bearing (see page 14-135).




Oil Seal Removal

1. Remove the differential assembly.
2. Remove the oil seal from the transmission housing.

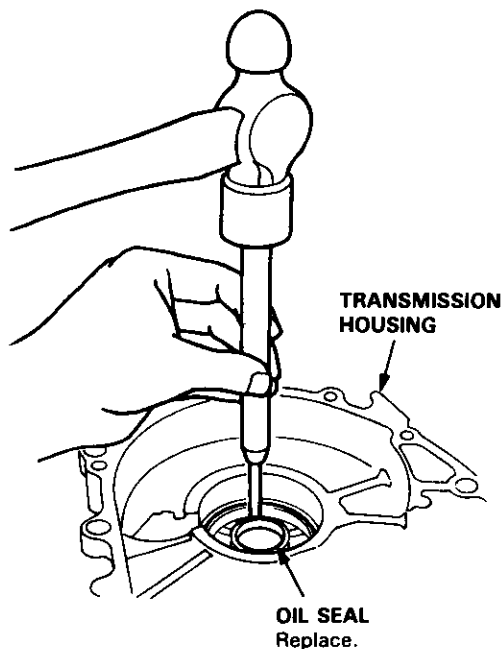


3. Remove the oil seal from the torque converter housing.

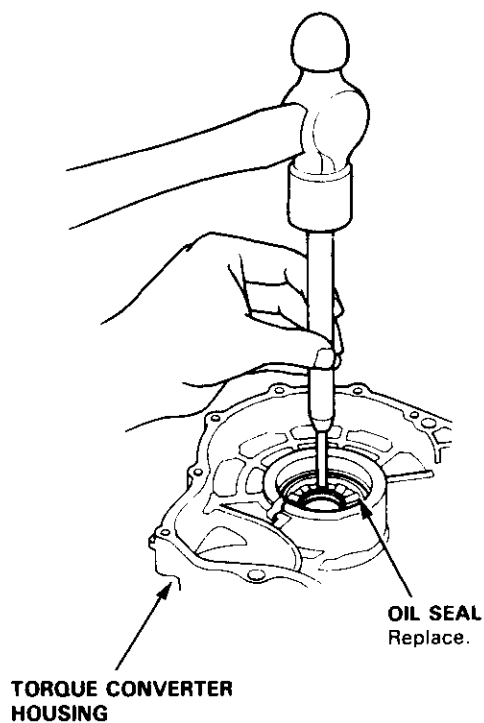


Oil Seal Installation/Side Clearance

1. Install a 2.50 mm (0.098 in) set ring, 80 mm in transmission housing.

NOTE: Do not install the oil seal yet.

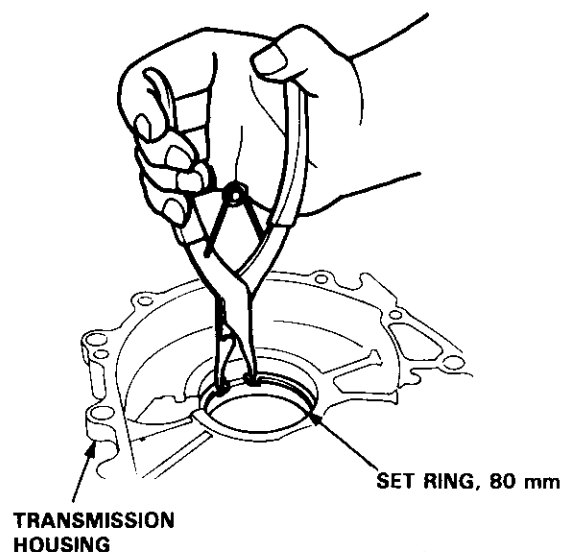

2. Install the differential assembly into the torque converter housing using the special tool as shown.

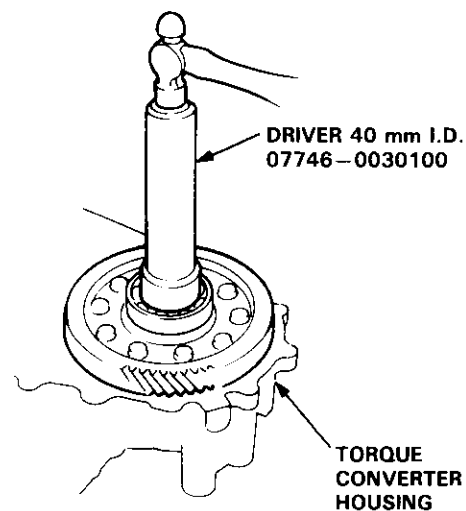


3. Install the transmission housing and tighten the bolts (see page 14-146 and 14-147).

(cont'd)

Differential


Oil Seal Installation/Side Clearance (cont'd)

4. Tap on the transmission housing side of the differential assembly with the special tool to seat the differential assembly in the torque converter housing.

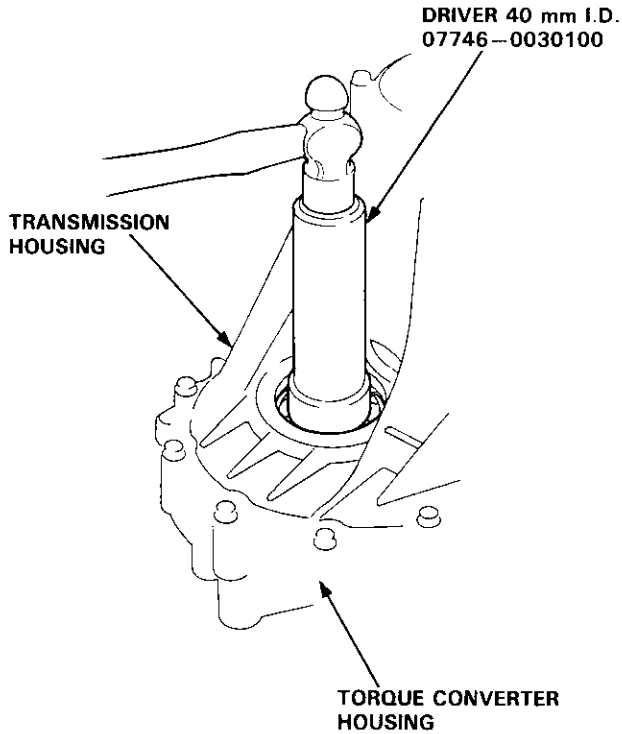

5. Measure the clearance between the 80 mm set ring and outer race of the ball bearing in the transmission housing.

STANDARD: 0 - 0.15 mm (0 - 0.006 in)

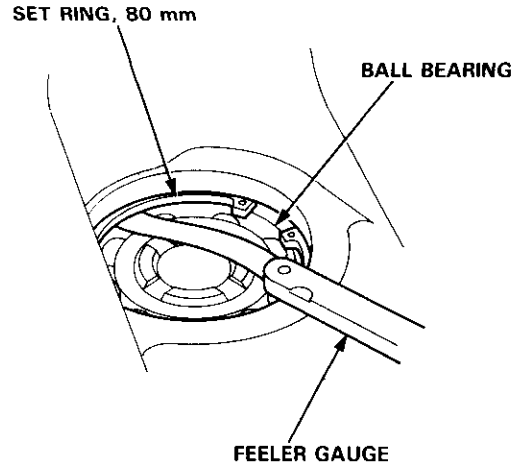

6. If the clearance is more than the standard, select a new set ring from the table, and install:

SET RING, 80 mm


Part Number	Thickness
90414 - 689 - 000	2.50 mm (0.098 in)
90415 - 689 - 000	2.60 mm (0.102 in)
90416 - 689 - 000	2.70 mm (0.106 in)
90417 - 689 - 000	2.80 mm (0.110 in)
90418 - 689 - 000	2.90 mm (0.114 in)
90419 - PH8 - 000	3.00 mm (0.118 in)

NOTE: If the clearance measured in step 5 is standard, it is not necessary to perform steps 7 and 8.


7. Remove the transmission housing.
8. Replace the 2.50 mm (0.098 in) 80 mm set ring with the one of the correct thickness selected in step 6.



9. Install the new oil seal flush with the transmission housing using the special tools as shown.

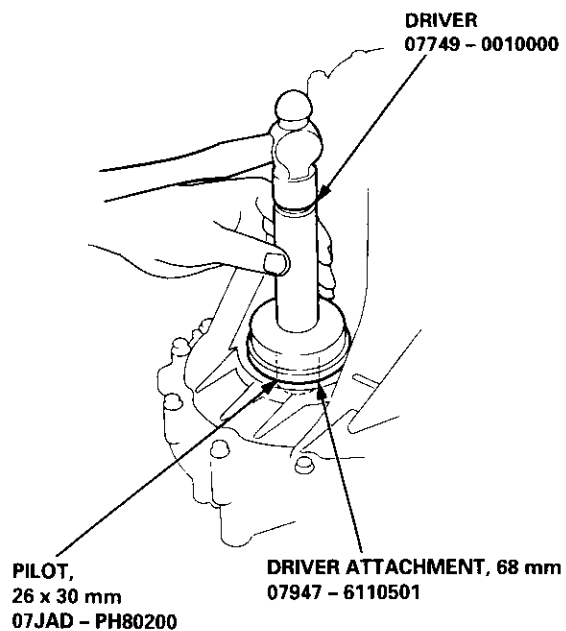

10. Install the new oil seal flush with the torque converter housing using the special tools as shown.

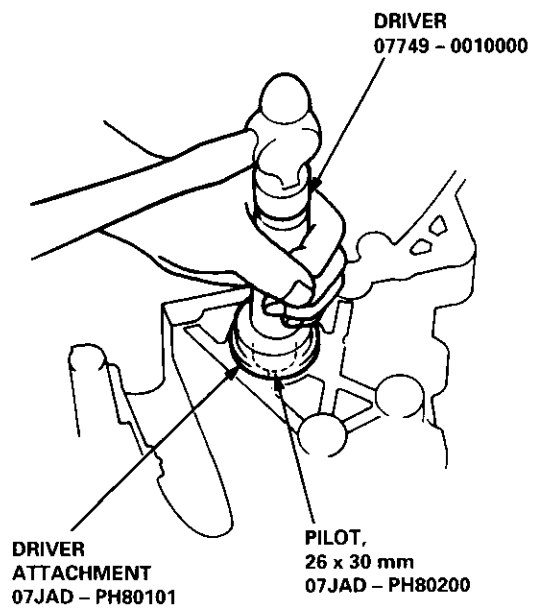


Torque Converter Housing Bearings

Mainshaft Bearing/Oil Seal Replacement

1. Remove the mainshaft bearing and oil seal using the special tools as shown.


3/8"-16 SLIDE HAMMER
(Commercially available)

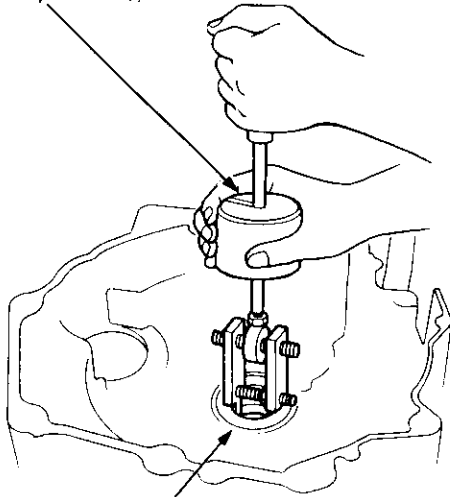

**ADJUSTABLE BEARING
PULLER, 25 - 40 mm**
07736 - A01000A

2. Drive in the new mainshaft bearing until it bottoms in the housing using the special tools as shown.


DRIVER
07749 - 0010000

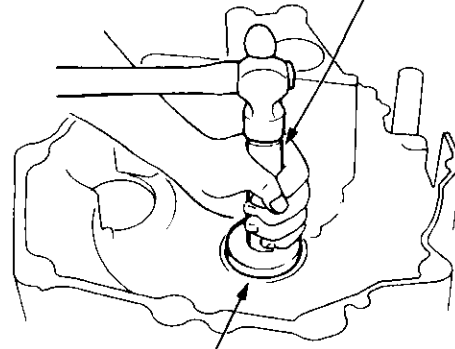

ATTACHMENT,
62 x 68 mm
07746 - 0010500

3. Install the new oil seal flush with the housing using the special tools as shown.

DRIVER
07749 - 0010000

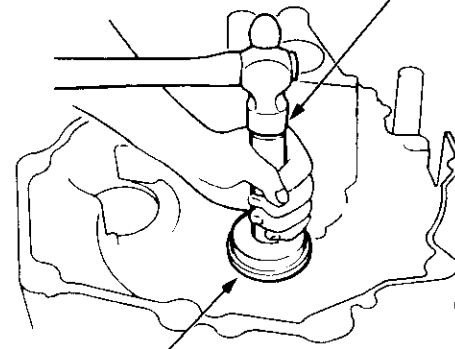


ATTACHMENT,
72 x 75 mm
07746 - 0010600




Countershaft Bearing Replacement

1. Remove the countershaft bearing using the special tools as shown.

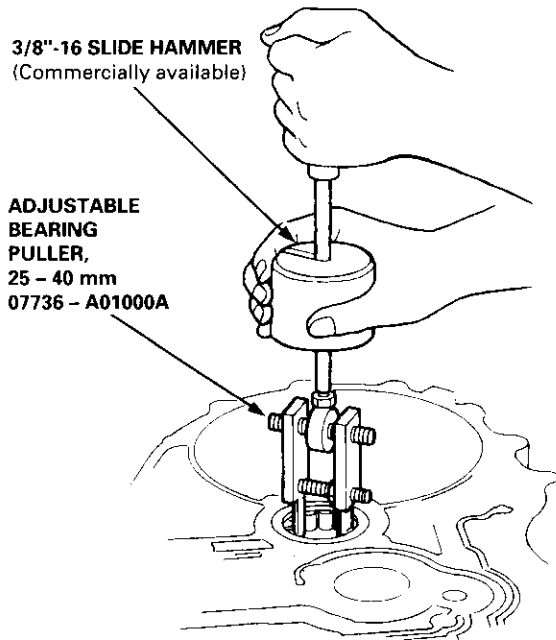

2. Install the ATF guide plate.
3. Drive the new bearing into the housing using the special tools as shown.


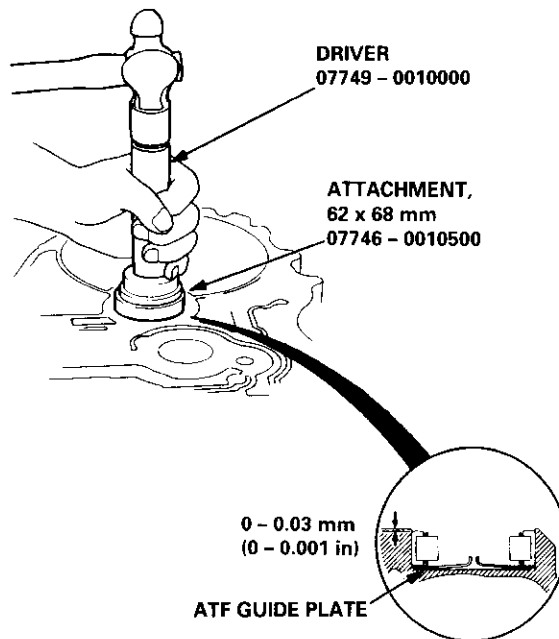


Transmission Housing Bearings

Mainshaft/Countershaft Bearings Replacement

1. To remove the mainshaft and countershaft bearings from the transmission housing, expand each snap ring with snap ring pliers, then push the bearing out using the special tools and a press as shown.

NOTE: Do not remove the snap rings unless it's necessary to clean the grooves in the housing.

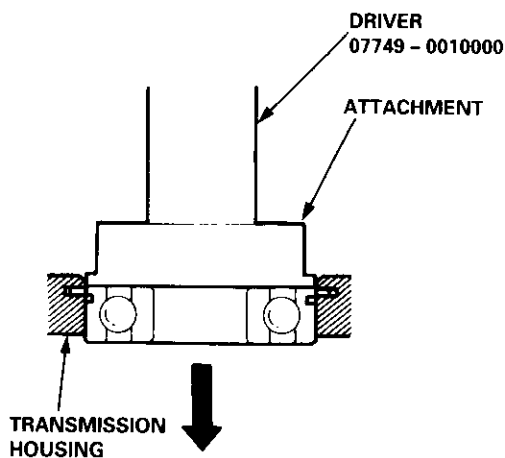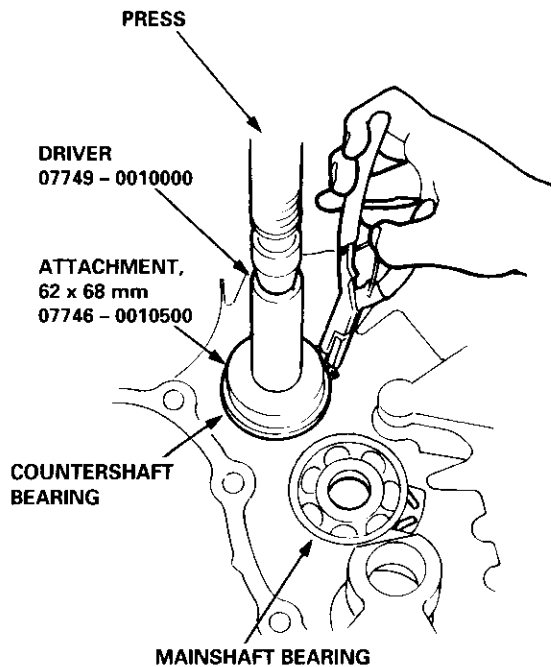


ATTACHMENT

- Mainshaft Bearing Installation use:
ATTACHMENT, 72 x 75 mm
07746 - 0010600
- Countershaft Bearing Installation use:
ATTACHMENT, 62 x 68 mm
07746 - 0010500

2. Expand each snap ring with snap ring pliers, insert the new bearing part-way into the housing using the special tools and a press as shown. Install the bearing with the groove facing outside the housing.

NOTE: Coat all parts with ATF.

3. Release the pliers, then push the bearing down into the housing until the ring snaps in place around it.

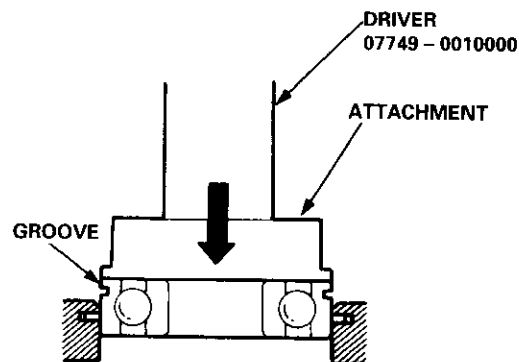


ATTACHMENT

- Mainshaft Bearing Removal use:
ATTACHMENT, 72 x 75 mm
07746 - 0010600
- Countershaft Bearing Removal use:
ATTACHMENT, 62 x 68 mm
07746 - 0010500

4. After installing the bearing verify the following:


- The snap ring is seated in the bearing and housing grooves.
- The ring end gap is correct.

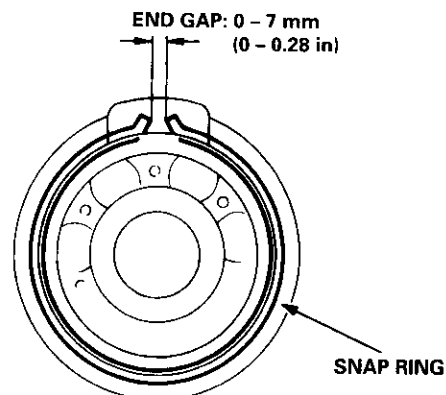




Installation

1. Install the reverse idler gear.

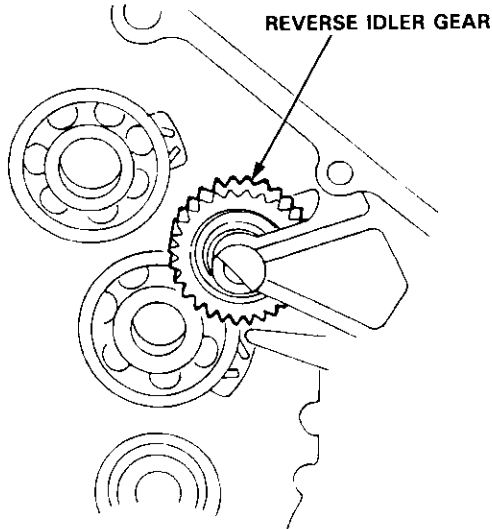


2. Install the reverse idler gear shaft holder and needle bearing into the transmission housing, then tighten the bolts.

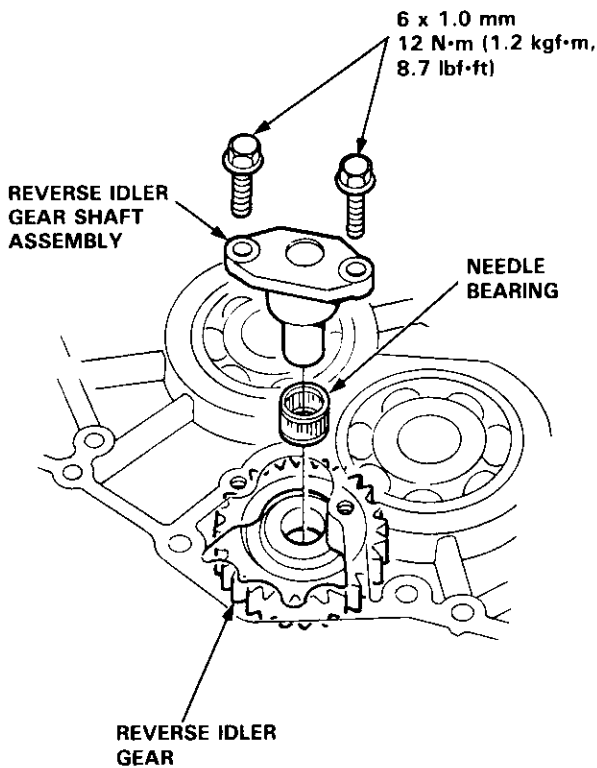


Inspection/Adjustment

1. Set the parking brake lever in the **P** position.
2. Measure the distance between the parking brake pawl shaft and the parking brake lever roller pin as shown.

STANDARD: 72.9 – 73.9 mm (2.87 – 2.91 in)

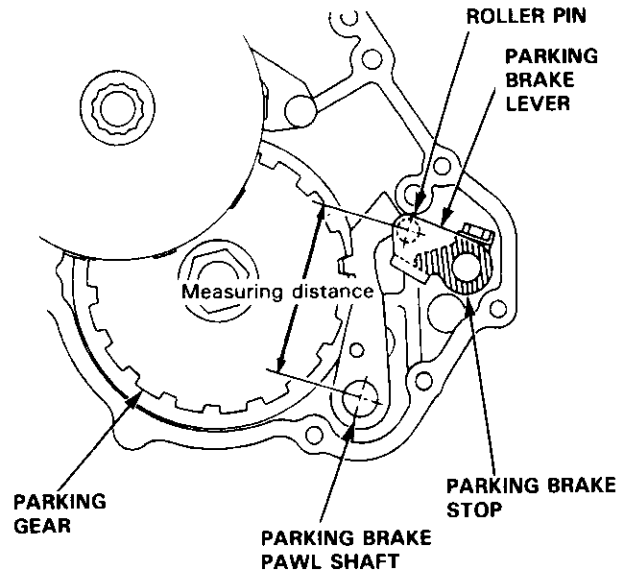

3. If the measurement is out of tolerance, select and install the appropriate parking brake stop from the table below.

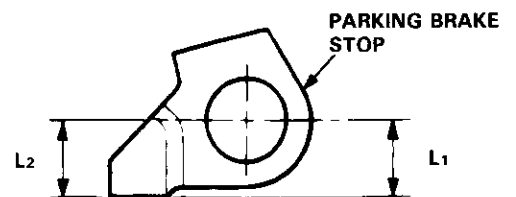

PARKING BRAKE STOP

Mark	Part Number	L ₁	L ₂
1	24537 - PA9 - 003	11.00 mm (0.433 in)	11.00 mm (0.433 in)
2	24538 - PA9 - 003	10.80 mm (0.425 in)	10.65 mm (0.419 in)
3	24539 - PA9 - 003	10.60 mm (0.417 in)	10.30 mm (0.406 in)

4. After replacing the parking brake stop, make sure the distance is within tolerance.


Transmission

Reassembly

NOTE:

- Coat all parts with ATF.
- Replace the following parts:
 - O-rings
 - Lock washers
 - Gaskets
 - Mainshaft and countershaft locknuts and conical spring washers
 - Sealing washers


TORQUE: 12 N·m (1.2 kgf·m, 8.7 lbf·ft)

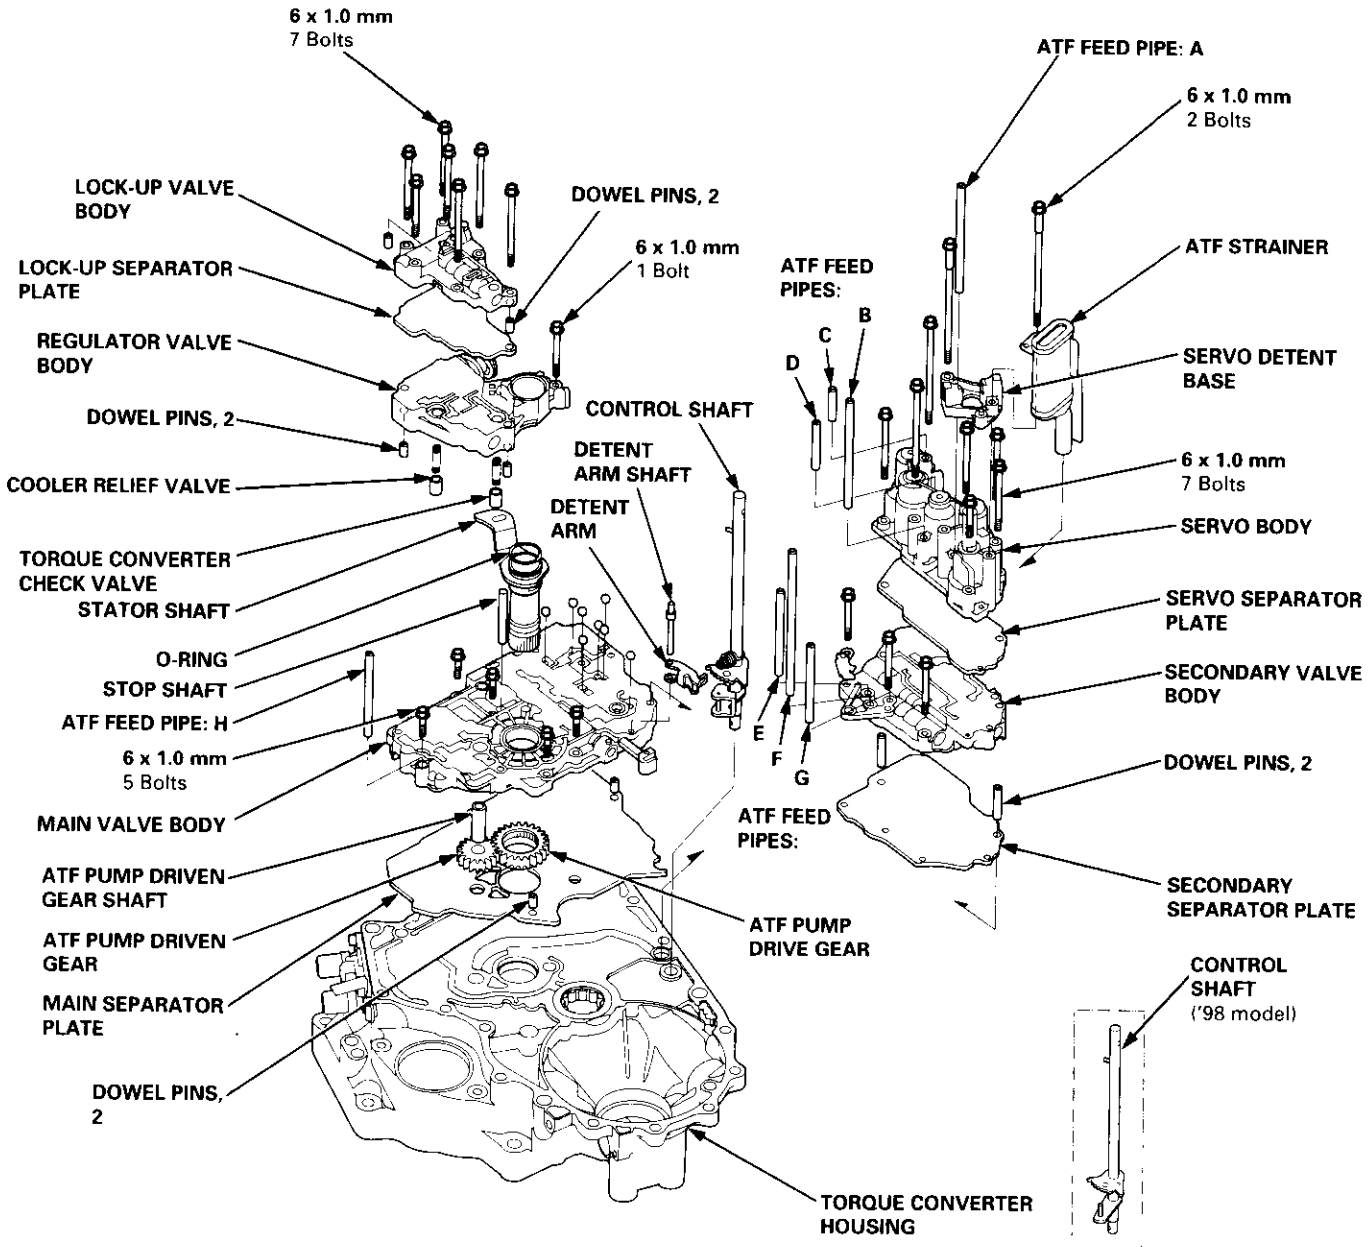



1. Install the ATF magnet and suction pipe collar in the torque converter housing, if necessary.
2. Install the main separator plate and the two dowel pins on the torque converter housing.
3. Install the ATF pump drive gear, ATF pump driven gear and ATF pump driven gear shaft on the torque converter housing.


NOTE: Install the ATF pump driven gear with its grooved and chamfered side facing down.

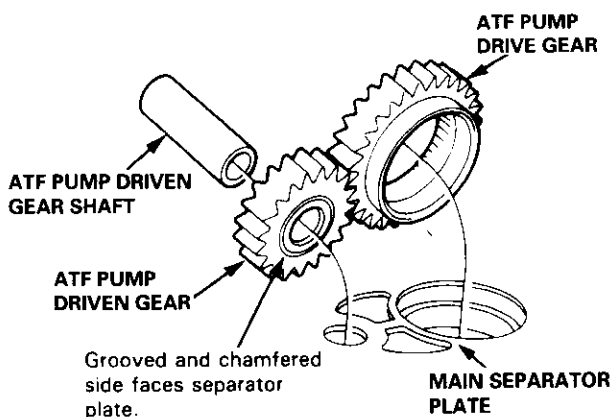

4. Loosely install the main valve body with five bolts. Make sure the ATF pump drive gear rotates smoothly in the normal operating direction and the ATF pump driven gear shaft moves smoothly in the axial and normal operating directions.
5. Install the secondary valve body, separator plate and two dowel pins on the main valve body.


NOTE: Do not install the bolts.

6. Install the control shaft in the housing with the control shaft and manual valve together.
7. Install the detent arm and arm shaft in the main valve body, then hook the detent arm spring to the detent arm.

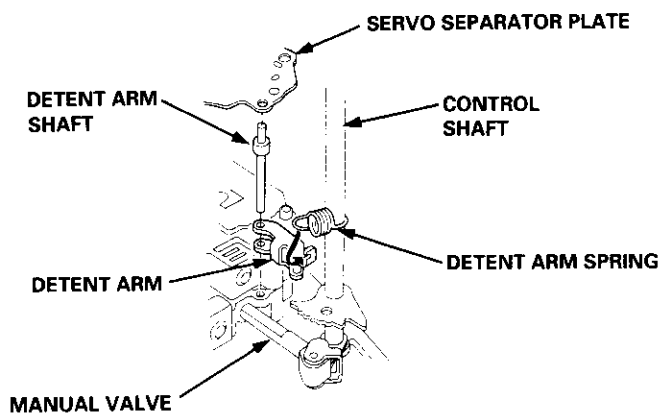

8. Install the servo body and separator plate on the secondary valve body (seven bolts).
9. Install the servo detent base and the ATF strainer (two bolts).
10. Tighten the five bolts on the main valve body to 12 N·m (1.2 kgf-m, 8.7 lbf-ft). Make sure the ATF pump drive gear and ATF pump driven gear shaft move smoothly.
11. If the ATF pump drive gear and ATF pump driven gear shaft do not move freely, loosen the five bolts on the main valve body, and disassemble the valve bodies. Realign the ATF pump driven gear shaft and reassemble the valve bodies, then retighten the bolts to the specified torque.

CAUTION: Failure to align the ATF pump driven gear shaft correctly will result in a seized ATF pump drive gear or ATF pump driven gear shaft.

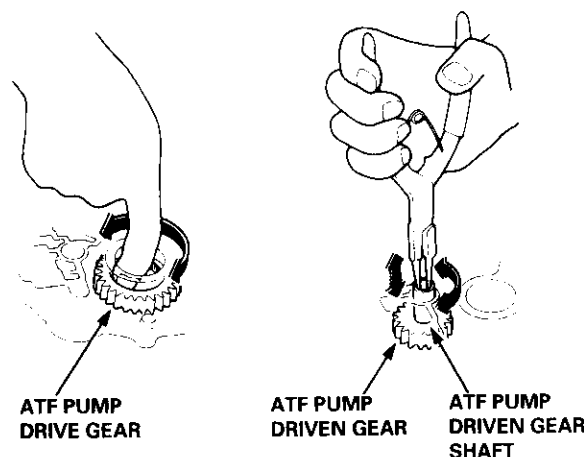


12. Install the stator shaft and stop shaft.
13. Install the bolts and the shaft stop on the secondary valve body, then tighten the bolts (three bolts).
14. Install the torque converter check valve, cooler relief valve and valve springs in the regulator valve body, then install the regulator valve body on the main valve body (one bolt).
15. Install the lock-up valve body on the regulator valve body (seven bolts).
16. Install the ATF feed pipes in the main valve body, the three ATF feed pipes in the secondary valve and the four ATF feed pipes in the servo body.

(cont'd)


Transmission

Reassembly (cont'd)

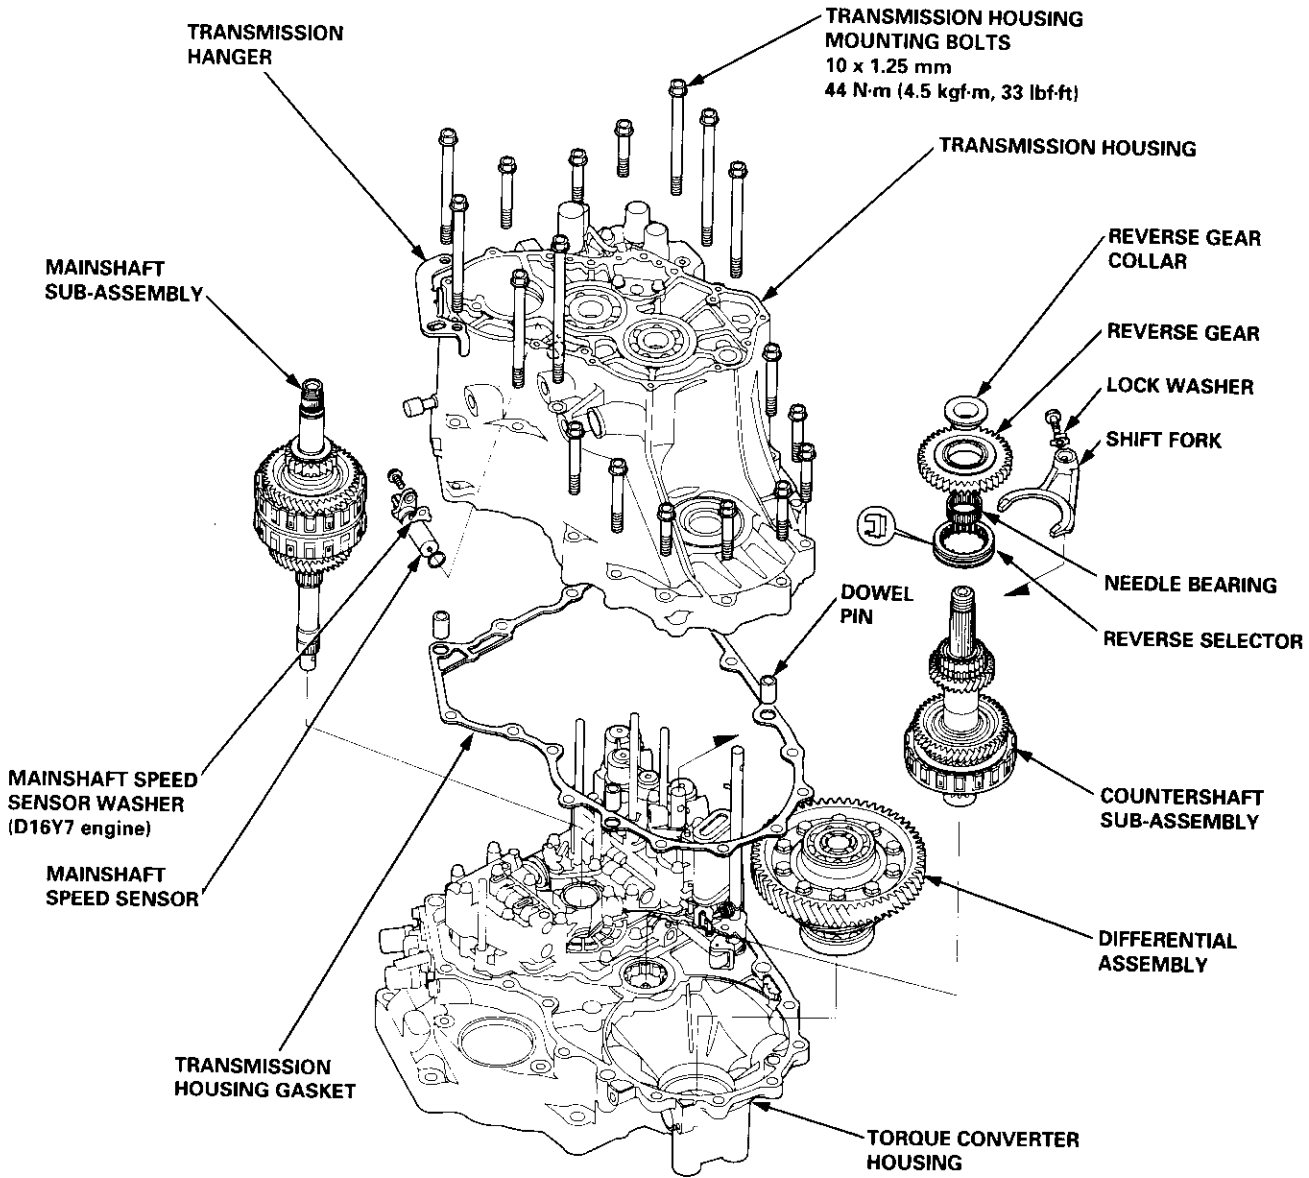





17. Install the reverse idler gear and the gear shaft holder (see page 14-143).
18. Install the differential assembly in the torque converter housing.
19. Assemble the mainshaft sub-assembly and the countershaft sub-assembly, then install them together in the torque converter housing.

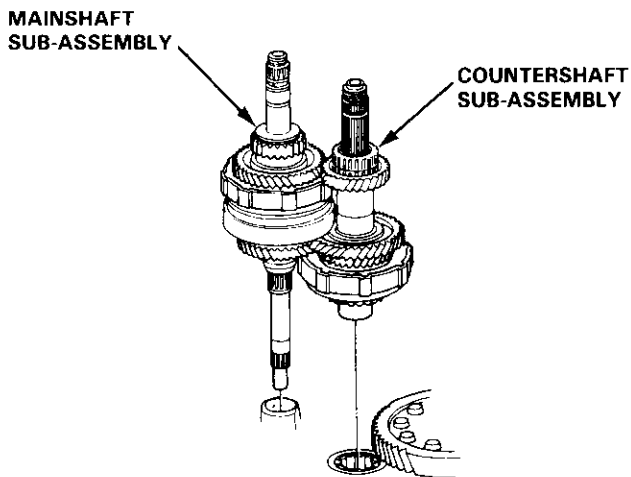

20. Turn the shift fork so the large chamfered hole is facing the fork bolt hole, then install the shift fork with the reverse selector, and torque the lock bolt. Bend the lock tab against the bolt head.

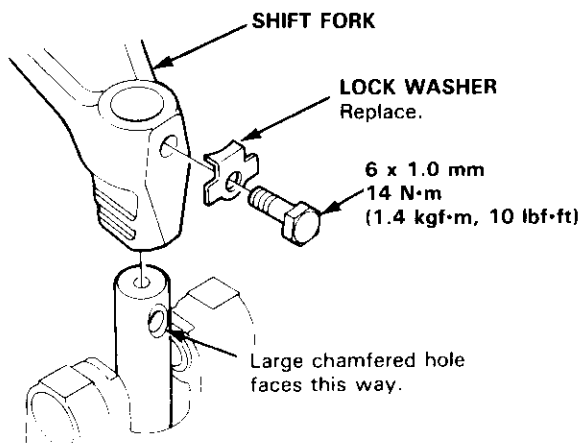

21. Install the needle bearing, countershaft reverse gear and reverse gear collar on the countershaft.
22. Align the spring pin on the control shaft with the transmission housing groove by turning the control shaft.

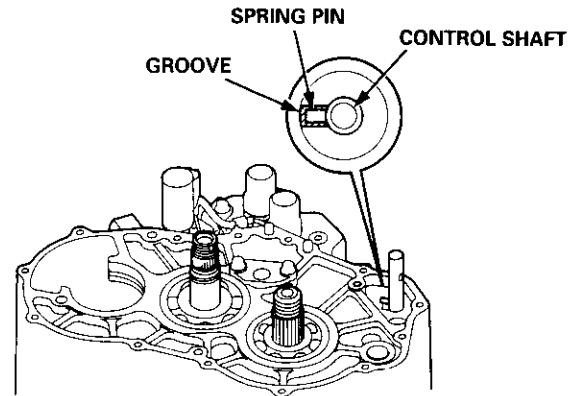


23. Install the two dowel pins and a new gasket on the torque converter housing.
24. Place the transmission housing on the torque converter housing.

CAUTION: Make sure that the mainshaft speed sensor is not installed on the transmission housing before installing the transmission housing on the torque converter housing.

25. Install the transmission housing mounting bolts along with the transmission hanger, then tighten the bolts in two or more steps in the sequence as shown.

TORQUE: 44 N·m (4.5 kgf·m, 33 lbf·ft)

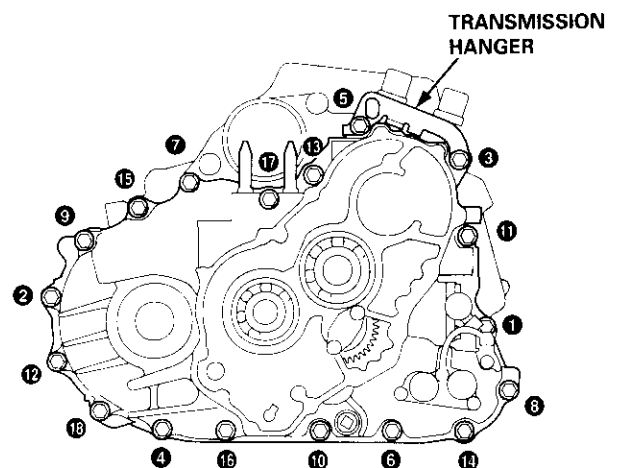


(cont. =


Transmission

Reassembly (cont'd)

26. Slip the special tool onto the mainshaft as shown.

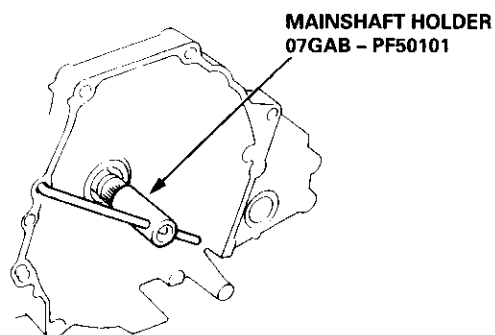


27. Install the parking brake lever on the control shaft.
28. Assemble the one-way clutch and the parking gear with the countershaft 1st gear (see page 14-123).
29. Install the countershaft 1st gear collar, needle bearing, and the countershaft 1st gear/parking gear assembly on the countershaft.

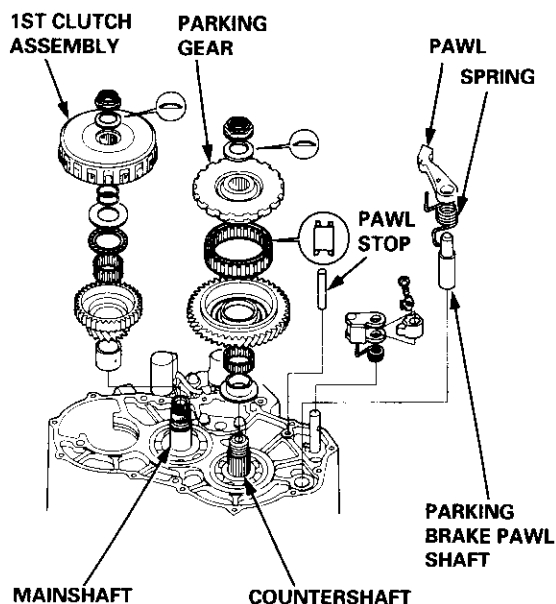

30. Install the parking brake pawl shaft, spring, pawl, and pawl stop on the transmission housing, then engage the parking brake pawl with the parking gear.

31. Install the mainshaft 1st gear collar on the mainshaft.
32. Wrap the shaft splines with tape to prevent the O-rings, then install new O-rings on the mainshaft.
33. Assemble the thrust washer, thrust needle bearing, needle bearing, and mainshaft 1st gear in the 1st clutch assembly, then install them on the mainshaft.
34. Install new conical spring washers and locknuts on each shaft.

CAUTION: Install the conical spring washers in the direction shown.

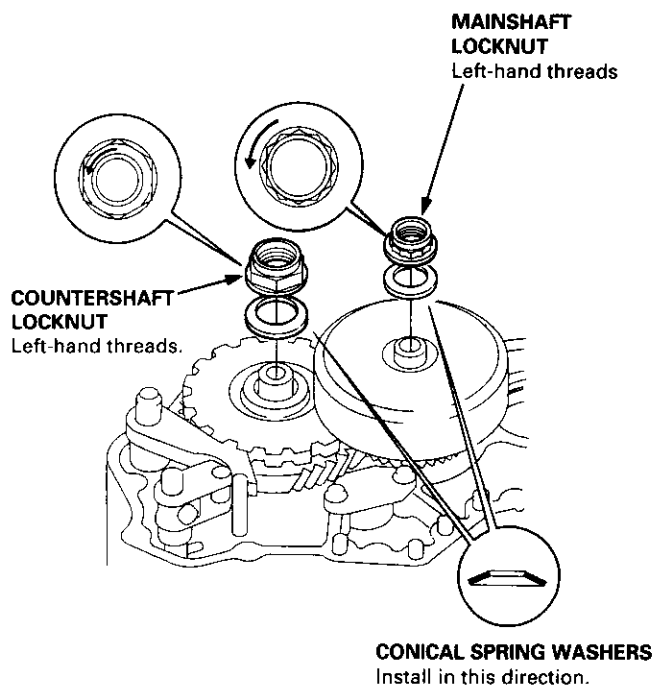

35. Tighten the locknuts to the specified torque.

NOTE:


- Do not use an impact wrench. Always use a torque wrench to tighten the locknut.
- Mainshaft and countershaft locknuts have left-hand threads.

TORQUE:


MAINSHAFT 78 N·m (8.0 kgf·m, 58 lbf·ft)
COUNTERSHAFT 103 N·m (10.5 kgf·m, 75.9 lbf·ft)



36. Remove the special tool from mainshaft, then stake each locknut using a 3.5 mm punch as shown.

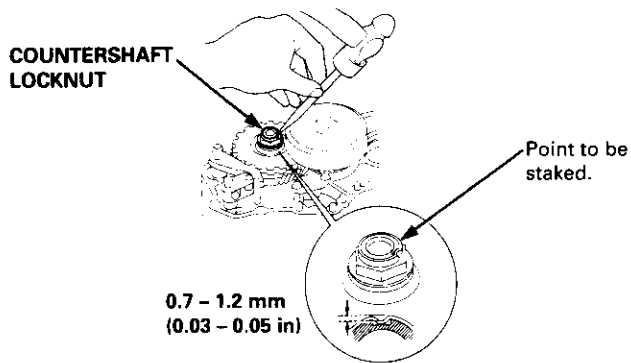


37. Set the parking brake lever in the **P** position, then verify that the parking brake pawl engages the parking gear.
38. If the pawl does not engage fully, check the parking brake pawl stop clearance (see page 14-143).
39. Tighten the lock bolt and bend the lock tab.

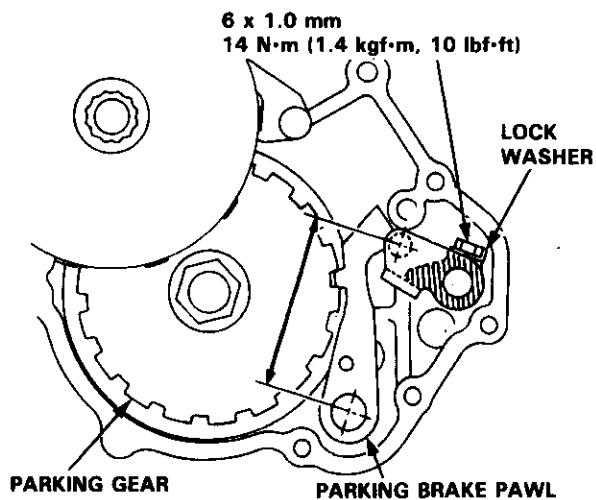

40. Install the right side cover with two dowel pins and a new gasket (thirteen bolts).

TORQUE: 12 N·m (1.2 kgf·m, 8.7 lbf·ft)

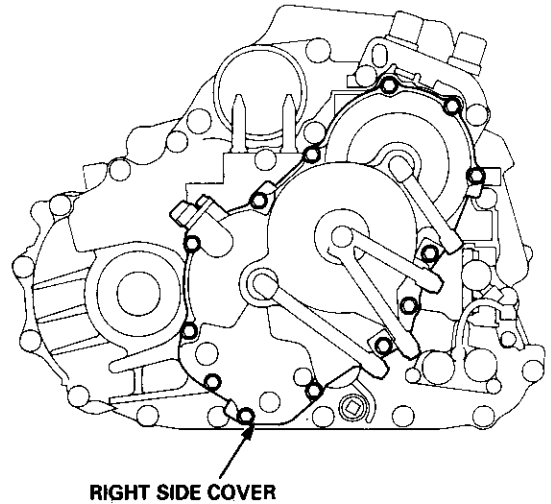


41. Install the ATF cooler lines with new sealing washers.

TORQUE: 28 N·m (2.9 kgf·m, 21 lbf·ft)

42. Install the ATF dipstick.


Torque Converter/Drive Plate

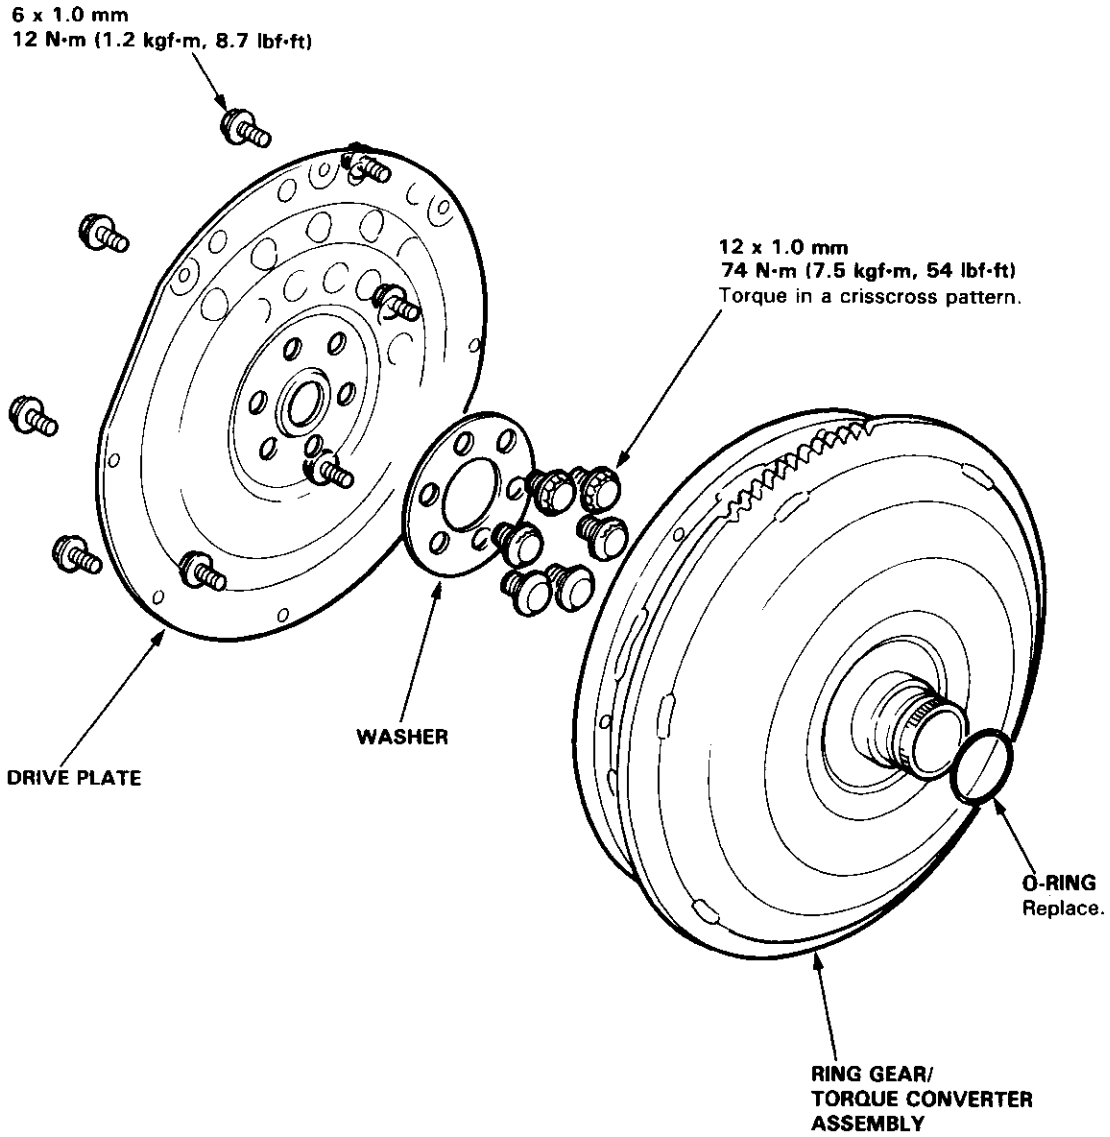




Installation


1. Flush the ATF cooler as described on page 14-155 and 14-156.
2. Install the torque converter assembly securely with a new O-ring on the mainshaft.

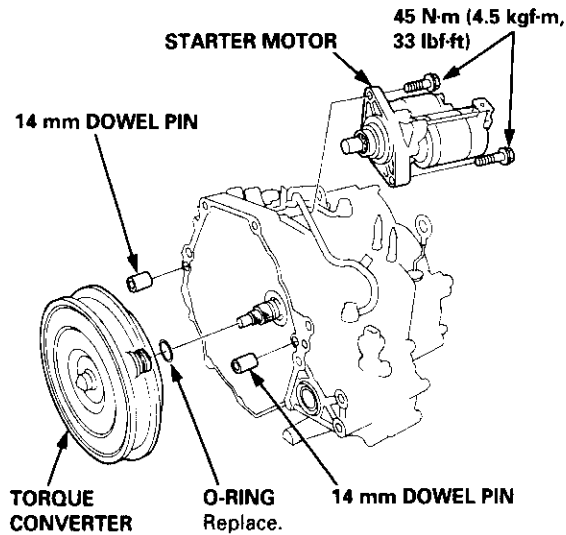


3. Install the starter motor on the torque converter housing, then install the two 14 mm dowel pins in the torque converter housing.
4. Place the transmission on a jack, and raise it to the engine assembly level.
5. Attach the transmission to the engine, then install two transmission housing mounting bolts and two rear engine mounting bolts.

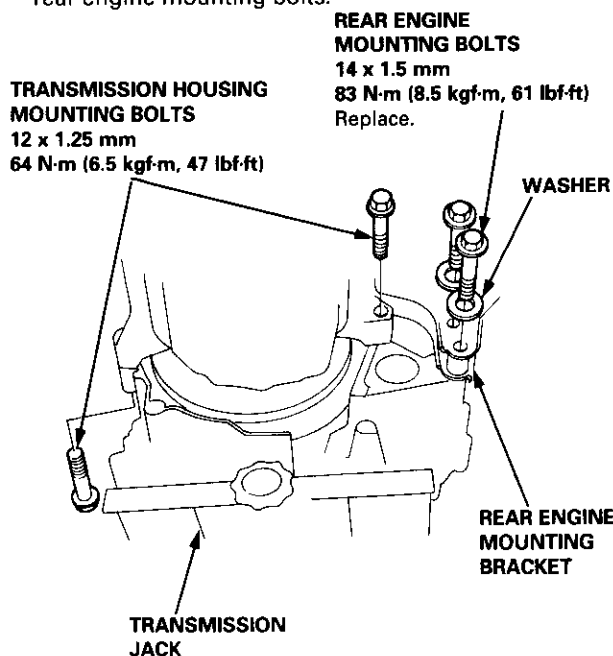

6. Install the transmission mount bracket.

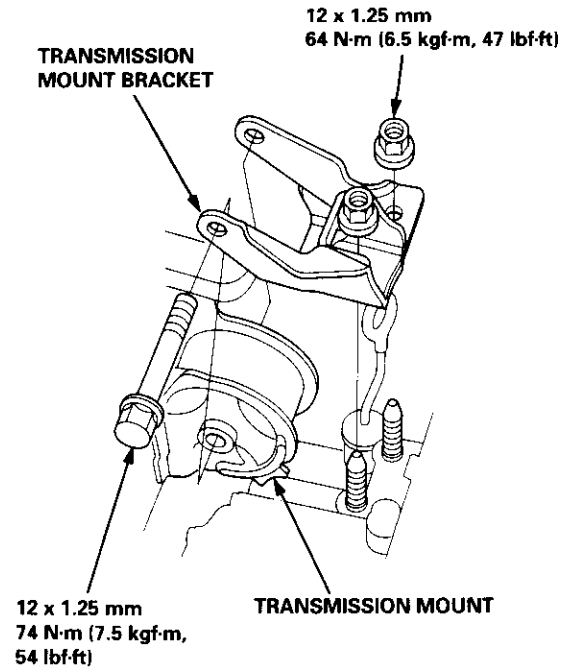

7. Install the remaining transmission housing mounting bolts and remaining rear engine mounting bolt.

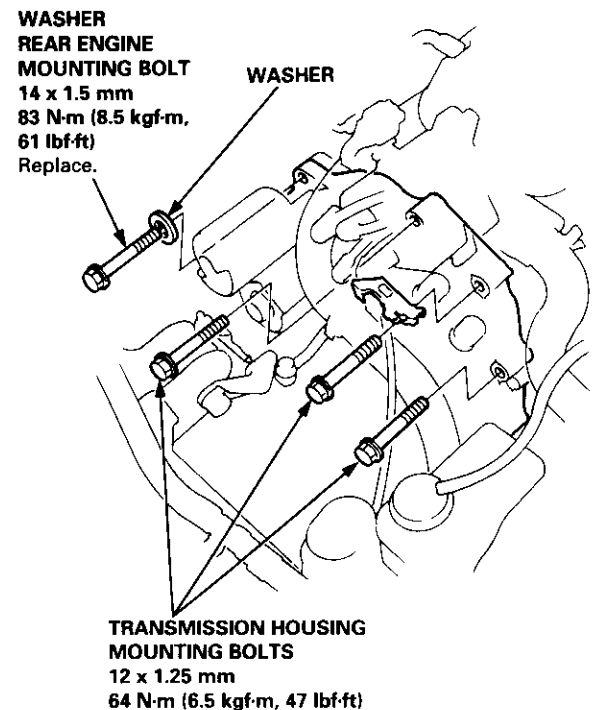

8. Remove the transmission jack.


(cont'd)

Transmission


Installation (cont'd)

9. Attach the torque converter to the drive plate with eight drive plate bolts and torque as follows: Rotate the crankshaft pulley as necessary to tighten the bolts to 1/2 of the specified torque, then to the final torque, in a crisscross pattern. After tightening the last bolt, check that the crankshaft rotates freely.

TORQUE: 12 N·m (1.2 kgf·m, 8.7 lbf·ft)

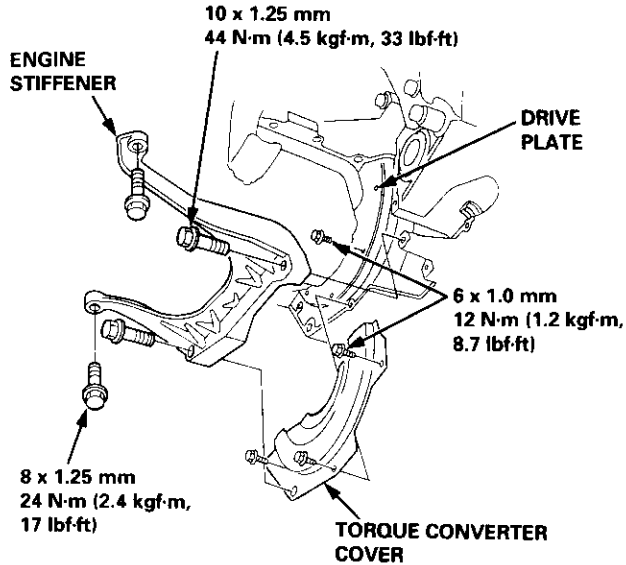


10. Install the torque converter cover and the engine stiffener.
11. Tighten the crankshaft pulley bolt, if necessary (see section 6).
12. Connect the ATF cooler hoses to the ATF cooler lines (see page 14-160).

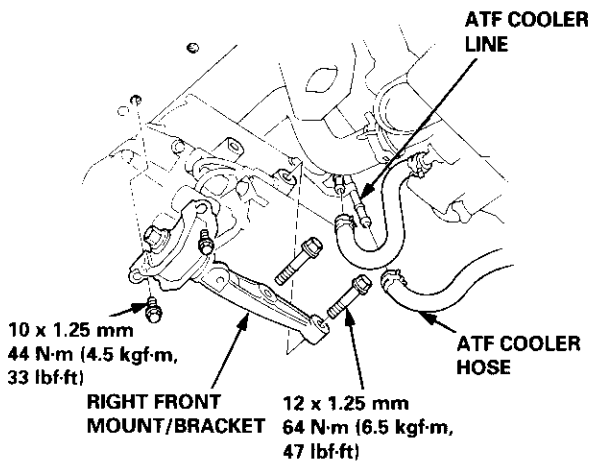

13. Install the right front mount/bracket.


14. Install the control lever with a new lock washer to the control shaft, then install the shift cable cover.

CAUTION: Take care not to bend the shift cable.

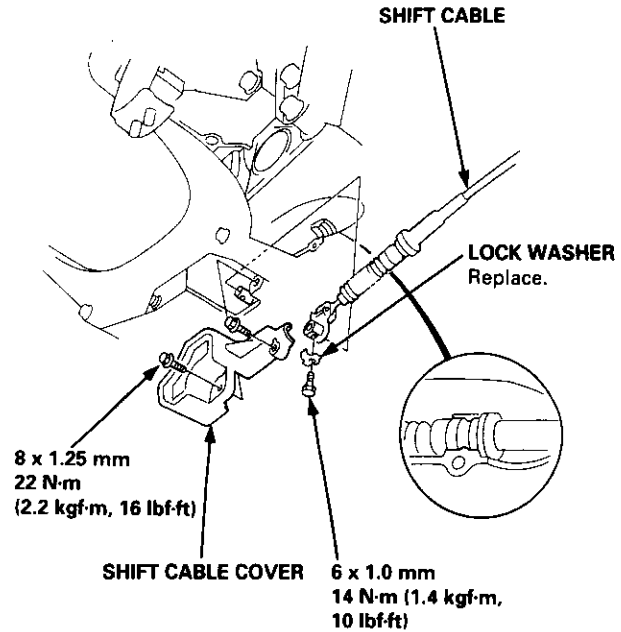

15. Install the exhaust pipe A.

NOTE: D16Y8 engine is shown; D16Y7 engine is similar.

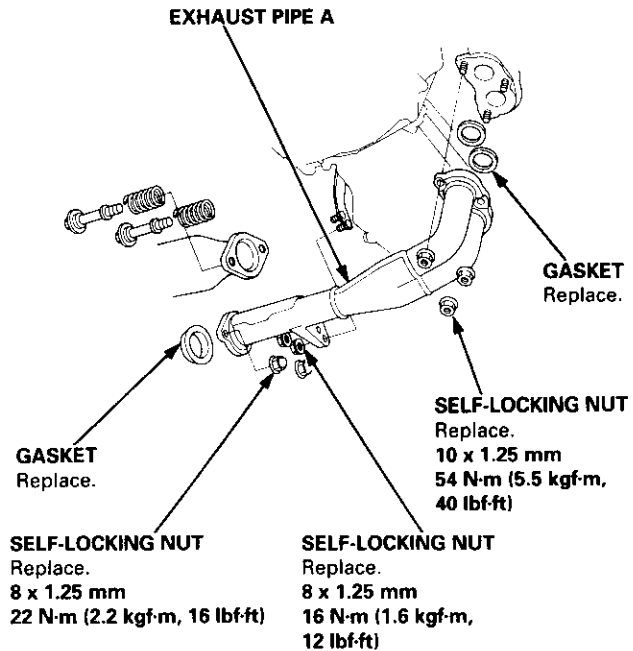




16. Install a new set ring on the end of each driveshaft.
17. Install the right and left driveshafts (see section 16).
CAUTION: While installing the driveshafts in the differential, be sure not to allow dust and other foreign particles to enter into the transmission.

NOTE:


- Clean the areas where the driveshafts contact the transmission (differential) thoroughly with solvent or carburetor cleaner, and dry with compressed air.
 - Turn the right and left steering knuckle fully outward, and slide each driveshaft into the differential until you feel its set ring clip engage the side gear.
18. Install the damper fork, then install the right and left ball joints to the each lower arm with the castle nuts and new cotter pins.

DAMPER PINCH BOLT


10 x 1.25 mm
43 N-m (4.4 kgf-m,
32 lbf-ft)

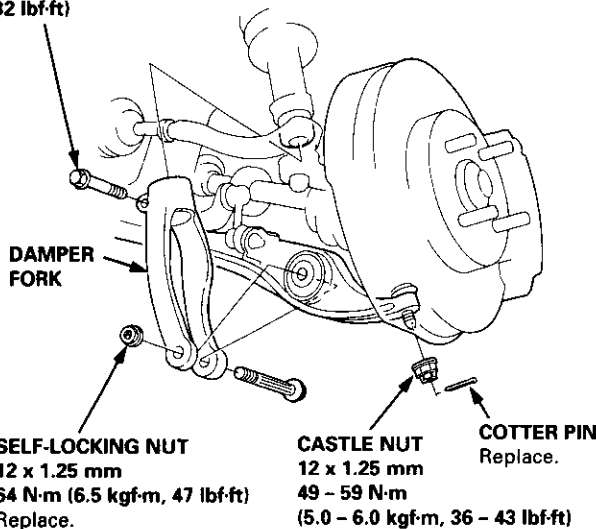


19. Install the splash shield.

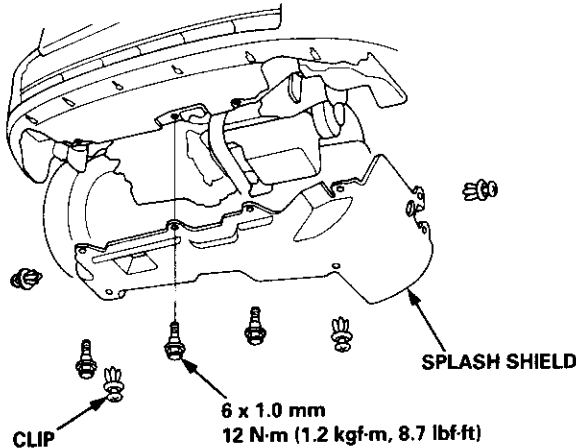

20. Connect the mainshaft speed sensor, the linear solenoid and the shift control solenoid connectors.

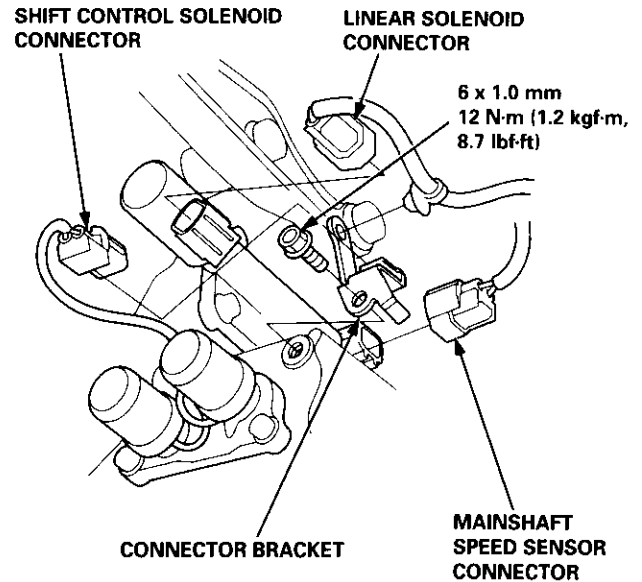

21. Connect the countershaft speed sensor and the vehicle speed sensor (VSS) connectors.

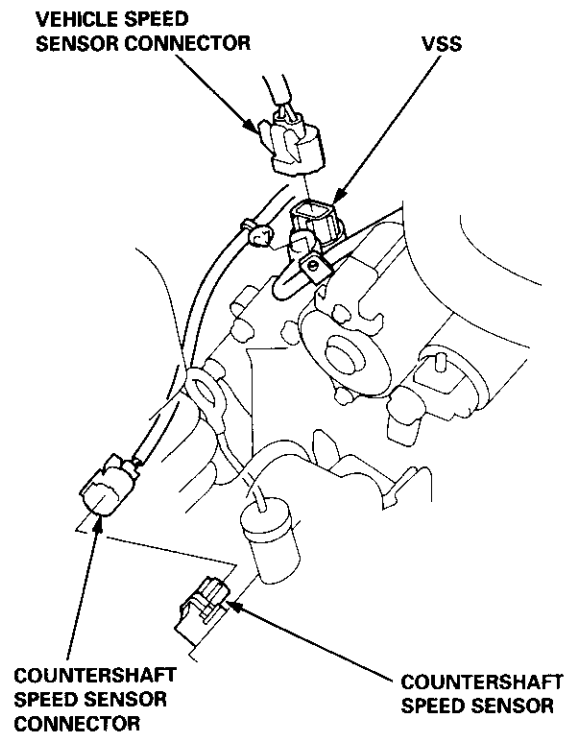


(cont'd)

Transmission


Installation (cont'd)

22. Connect the lock-up control solenoid connector, and install the transmission ground cable.

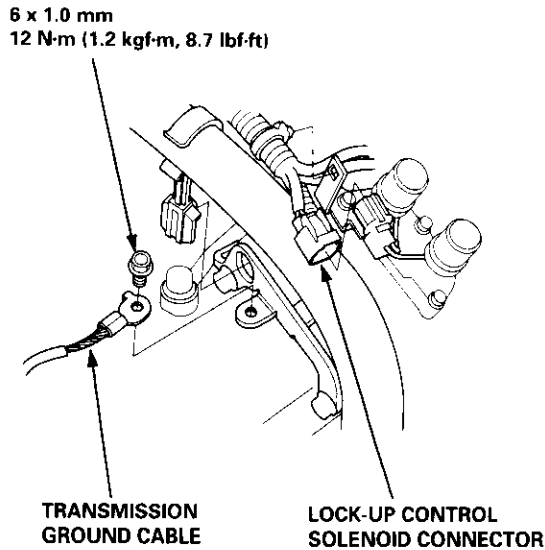

23. Connect the starter cables on the starter motor, and install the cable holder.

NOTE: When installing the starter cable terminal, make sure that the crimped side of the ring terminal is facing out (see section 23).

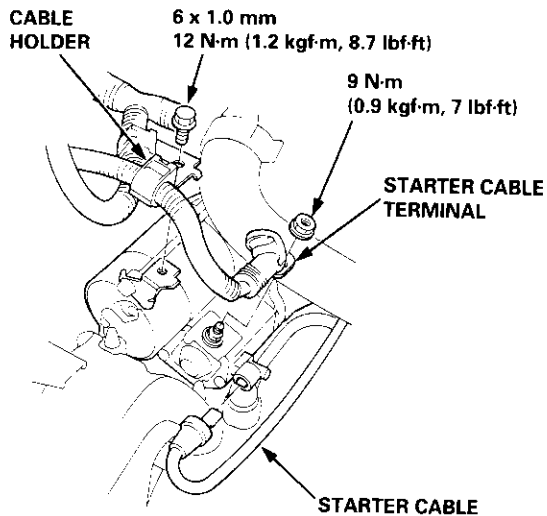

24. Install the intake air duct.

D16Y7 engine:

Install the intake air duct and the resonator.

D16Y8 engine:

Install the intake air duct and the air cleaner housing assembly.

25. Refill the transmission with ATF (see page 14-86).
26. Connect the positive (+) cable first, then the negative (-) cable to the battery.
27. Check the ignition timing (see section 23).
28. Start the engine. Set the parking brake, and shift the transmission through all gears, three times. Check the shift cable adjustment (see page 14-158).
29. Check the front wheel alignment (see section 18).
30. Let the engine reach operating temperature (the cooling fan comes on) with the transmission in **N** or **P** position, then turn it off and check the fluid level.
31. Road test as described on pages 14-82 thru 14-84.



Cooler Flushing

▲ WARNING To prevent injury to face and eyes, always wear safety glasses or a face shield when using the transmission flusher.

NOTE: This procedure should be performed before re-installing the transmission.


1. Check tool and hoses for wear and cracks before using. If wear or cracks are found, replace the hoses before using.
2. Using the measuring cup, fill the tank with 21 ounces (approximately 2/3 full) of biodegradable flushing fluid (J35944 – 20). Do not substitute with any other fluid. Follow the handling procedure on the fluid container.
3. Secure the flusher filler cap, and pressurize the tank with compressed air to between 550 – 829 kpa (5.6 – 8.45 kgf/cm², 80 – 120psi).

NOTE: The air line should be equipped with a water trap to ensure a dry air system.


4. Hang the tool under the vehicle.
5. Attach the tank's discharge hose to the return line of the transmission cooler using a clamp.
6. Connect the drain hose to the inlet line on the transmission cooler using a clamp.

IMPORTANT:

Securely clamp the opposite end of the drain hose to a bucket or floor drain.

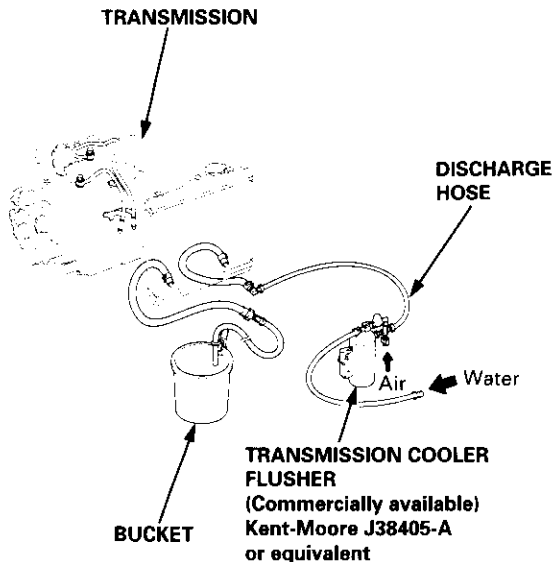

7. With the water and air valves off, attach the water and air supplies to the flusher. (Hot water if available.)

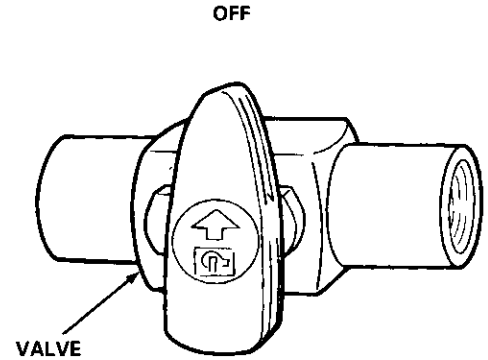

8. Turn on the flusher water valve so water will flow through the cooler for 10 seconds.

NOTE: If water does not flow through the cooler, it is completely plugged, cannot be flushed, and must be replaced.

9. Depress the trigger to mix the flushing fluid into the water flow. Use the wire clip to hold the trigger down.
10. While flushing with the water and flushing fluid for two minutes, turn the air valve on for five seconds every 15 – 20 seconds to create a surging action. AIR PRESSURE: MAX 845 kpa (8.45 kgf/cm², 120 psi)

11. Turn the water valve off. Release the trigger, then reverse the hoses to the cooler so you can flush in the opposite direction. Repeat steps 8 through 10.

12. Release the trigger, and rinse the cooler with water only for one minute.

13. Turn the water valve off, and turn off the water supply.

14. Turn the air valve on to dry the system out with air for two full minutes or until no moisture is visible leaving the drain hose.

CAUTION: Residual moisture in the cooler or pipes can damage the transmission.

15. Remove the flusher from the cooler line. Attach the drain hose to a container.

16. Install the transmission, and leave the drain hose attached to the cooler line.

(cont'd)


Transmission

Cooler Flushing (cont'd)

17. Make sure the transmission is in the **P** position. Fill the transmission with ATF, and run the engine for 30 seconds or until approximately 0.95 ℓ (1.0 US qt., 0.8 Imp qt.) is discharged.
18. Remove the drain hose, and reconnect the cooler return hose to the transmission (see page 14-160).
19. Refill the transmission with ATF to the proper level (see page 14-86).

TOOL MAINTENANCE

1. Empty and rinse after each use. Fill the can with water and pressurize the can. Flush the discharge line to ensure that the unit is clean.
2. If discharge liquid does not foam, the orifice may be blocked.
3. To clean, disconnect the plumbing from the tank at the large coupling nut.

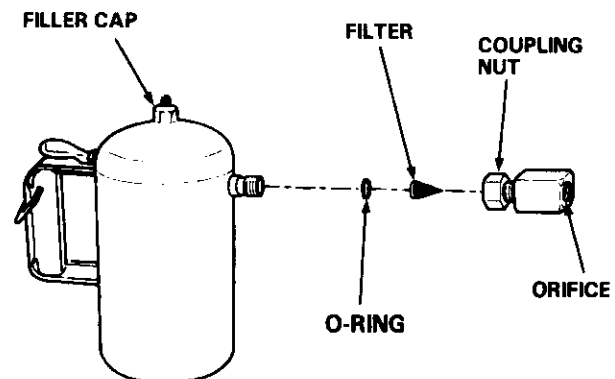

4. Remove the in-line filter from the discharge side and clean if necessary.
5. The fluid orifice is located behind the filter. Clean it with the pick stored in the bottom of the tank handle, or blow it clean with air. Securely reassemble all parts.


Shift Cable




Removal/Installation

▲ WARNING Make sure lifts are placed properly (see section 1).


1. Remove the front console (see section 20).
2. Shift to **N** position, then remove the lock pin from the adjuster.

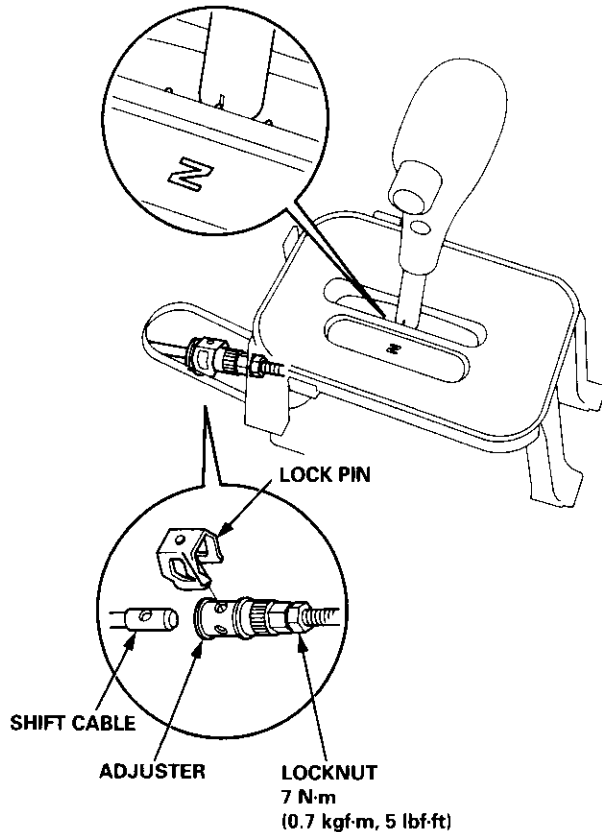

3. Remove the shift cable bracket.

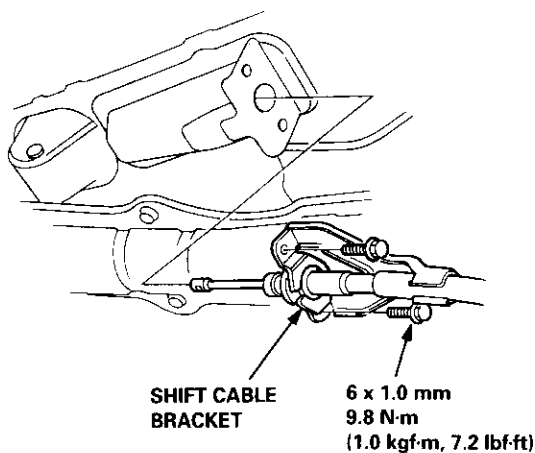

4. Remove the shift cable holder.
5. Remove the shift cable cover.
6. Remove the control lever from the control shaft, then remove the shift cable. Take care not to bend the cable when removing/installing it.

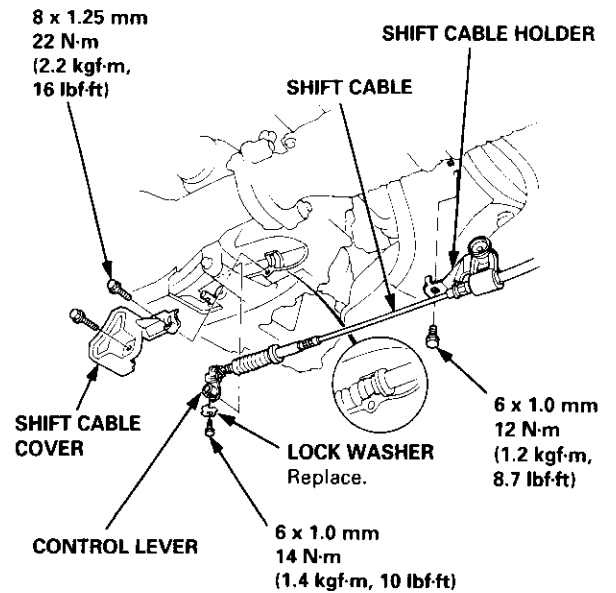


7. Install the shift cable in the reverse order of removal.
8. Check the cable adjustment on reassembly (see page 14-158).

Shift Cable


Adjustment

▲ WARNING Make sure lifts are placed properly (see section 1).

1. Remove the front console (see section 20).
2. Shift to **N** position, then remove the lock pin from the adjuster.

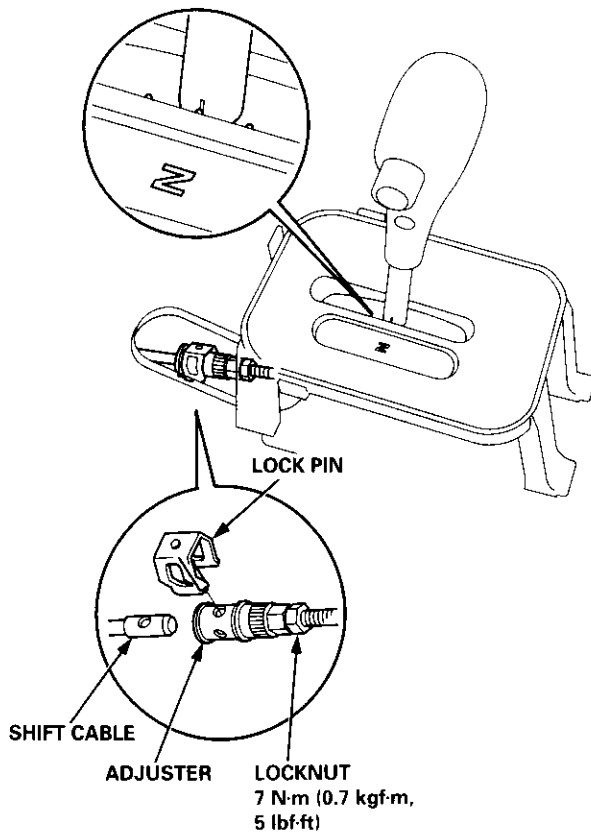


3. Check that the hole in the adjuster is perfectly aligned with the hole in the shift cable. There are two holes in the adjuster. They are positioned 90° apart to allow cable adjustment in 1/4 turn increments.

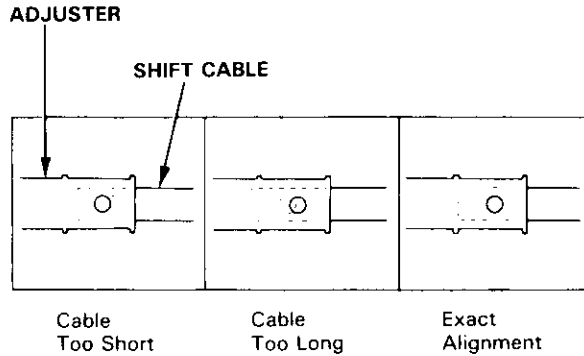

4. If the hole is not perfectly aligned, loosen the locknut on the adjuster and adjust as required.
5. Tighten the locknut to 7 N·m (0.7 kgf·m, 5 lbf·ft).
6. Install the lock pin on the adjuster. If you feel the lock pin binding as you reinstall it, the cable is still out of adjustment and must be readjusted.
7. Make sure the lock pin is seated in the adjuster securely.
8. Move the shift lever to each gear, and verify that the shift position indicator follows the automatic trans-axle gear position switch.
9. Start the engine, and check the shift lever in all gears. If any gear does not work properly, refer to troubleshooting (see page 14-78 thru 14-81).
10. Insert the ignition key into the key cylinder on the A/T gear position indicator panel, and verify that the shift lock lever is released.

Shift Lever

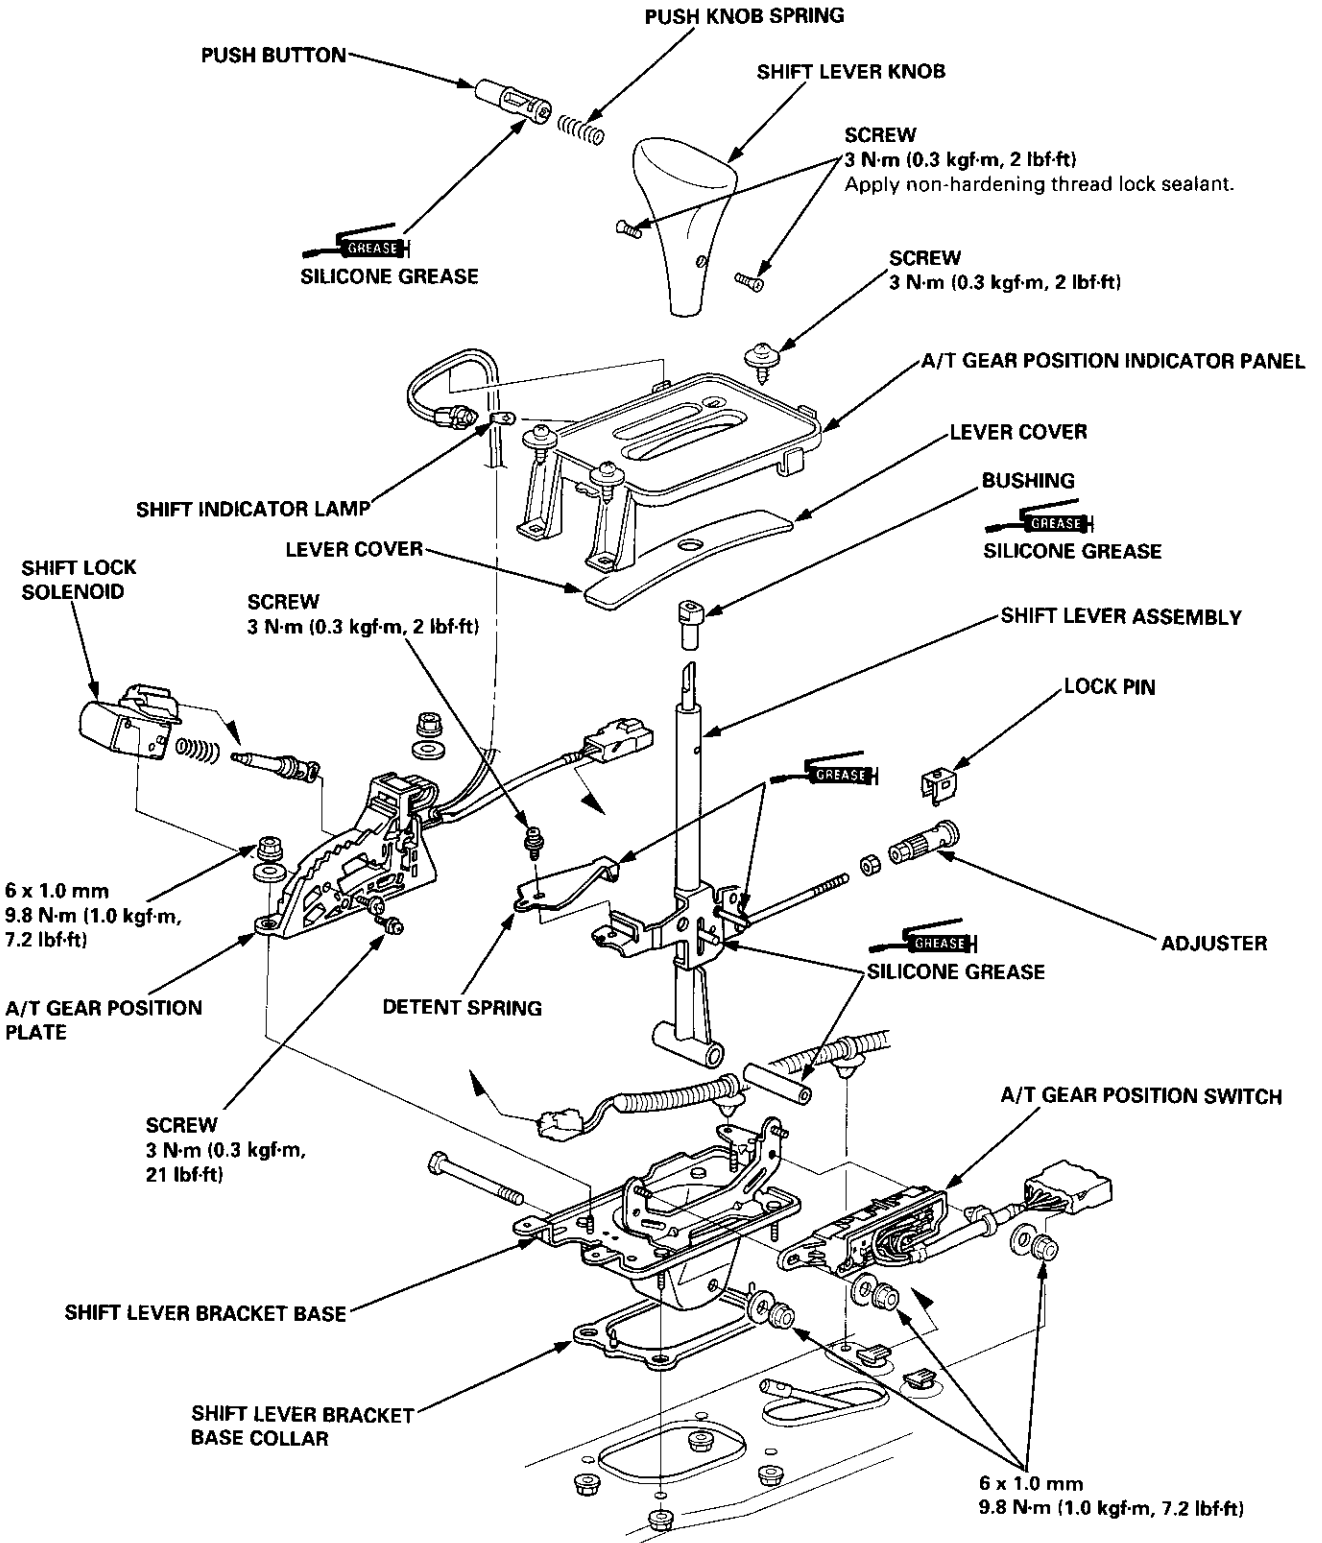


Shift Indicator Panel

ATF Cooler Hoses

Adjustment

1. Check that the index mark on the indicator aligns with the **N** mark on the shift indicator panel when the transmission is in NEUTRAL.

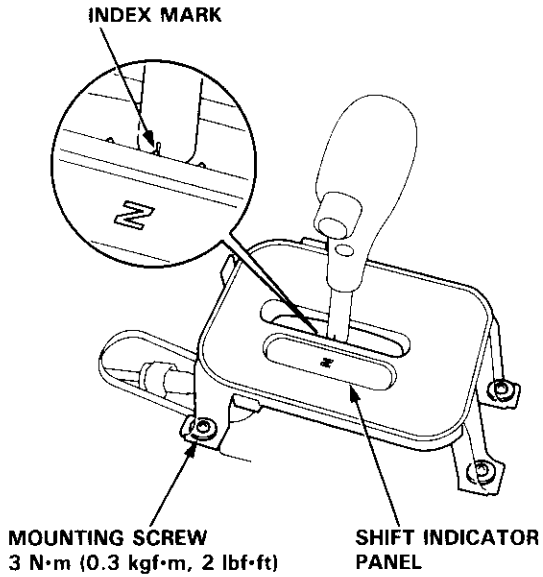


2. If not aligned, remove the front console (see section 20).
3. Remove the shift indicator panel mounting screws and adjust by moving the panel.

NOTE: Whenever the shift indicator panel is removed, reinstall the panel as described above.

Connection

1. Connect the ATF cooler hoses to the ATF cooler lines and ATF cooler, and secure them with the clips as shown.

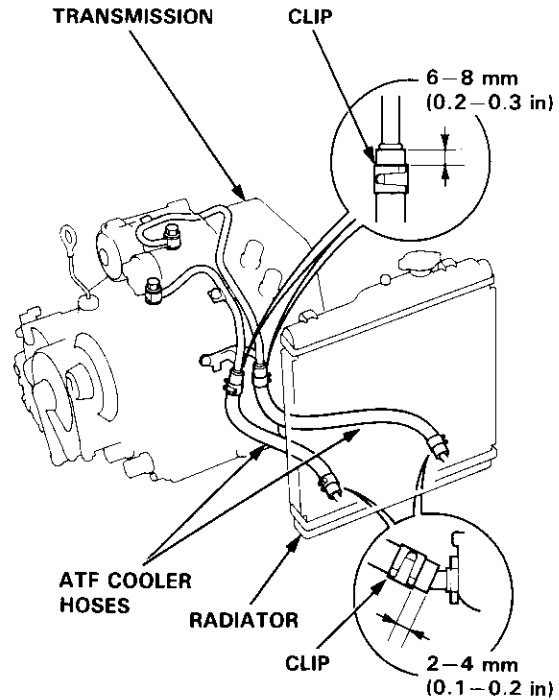

Continuously Variable Transmission (CVT)


Special Tools	14-162	Transmission Housing/ Lower Valve Body Assembly Removal	14-246
Description	14-163	Transmission Housing/Flywheel Housing Removal	14-248
Clutches/Reverse Brake/Planetary Gear/Pulleys	14-166	Right Side Cover/Intermediate Housing Removal	14-250
Power Flow	14-168	Manual Valve Body Disassembly/Inspection/Reassembly	14-252
Electronic Control System	14-171	Forward Clutch Illustrated Index	14-253
Hydraulic Control	14-173	Disassembly	14-254
Hydraulic Flow	14-177	Reassembly	14-256
Parking Brake Mechanism	14-187	Secondary Gear Shaft 25 x 35 mm Thrust Shim Selection	14-260
Electrical System		Differential Illustrated Index	14-261
Component Locations	14-189	Backlash Inspection	14-261
TCM Circuit Diagram	14-190	Bearing Replacement	14-262
TCM Terminal Voltage/ Measuring Conditions	14-192	Differential Carrier Replacement	14-262
Troubleshooting Procedures	14-194	Oil Seal Removal	14-263
Symptom-to-Component Chart Electrical System	14-198	Oil Seal Installation/Side Clearance	14-263
Electrical Troubleshooting Troubleshooting Flowcharts	14-200	Flywheel Housing Input Shaft Oil Seal Replacement	14-265
Linear Solenoids/Inhibitor Solenoid Test	14-223	Transmission Housing Bearings Driven Pulley Shaft Bearing Replacement	14-266
Drive Pulley/Driven Pulley/Secondary Gear Shaft Speed Sensors Replacement	14-224	Secondary Gear Shaft Bearing Replacement	14-267
Start Clutch Control Start Clutch Calibration Procedure	14-225	Flywheel Housing Bearing Secondary Gear Shaft Bearing Replacement	14-267
Hydraulic System		Ring Gear Bearing Replacement	14-268
Symptom-to-Component Chart Hydraulic System	14-226	Control Shaft Assembly Removal/Installation	14-268
Road Test	14-228	Transmission Reassembly	14-270
Stall Speed Test	14-230	Flywheel/Drive Plate	14-279
Fluid Level Checking/Changing	14-231	Transmission Installation	14-280
Pressure Testing	14-232	Cooler Flushing	14-284
Lower Valve Body Assembly Replacement	14-234	Shift Cable Removal/Installation	14-286
ATF Filter Removal/Installation	14-235	Adjustment	14-287
Transmission		Shift Lever	14-288
Transmission Removal	14-236	Shift Indicator Panel Adjustment	14-289
Illustrated Index		ATF Cooler/Hoses Installation	14-289
Transmission/Lower Valve Body Assembly	14-240		
Transmission Housing/ Flywheel Housing	14-242		
Right Side Cover/ Intermediate Housing	14-244		



Special Tools

Ref. No.	Tool Number	Description	Qty	Page Reference
①	07GAE - PG40200	Clutch Spring Compressor Bolt Assembly	1	14-254, 257
②	07JAD - PH80200	Pilot, 26 x 30 mm	1	14-265
③	07LAE - PX40100	Clutch Spring Compressor Attachment	1	14-254, 257
④	07PAZ - 0010100	SCS Service Connector	1	14-195, 225
⑤	07SAZ - 001000A	Backprobe Set	2	14-196, 228
⑥	07TAE - P4V0110	Reverse Brake Spring Compressor	1	14-251, 271
⑦	07TAE - P4V0120	Start Clutch Remover	1	14-249
⑧	07TAE - P4V0130	Start Clutch Installer	1	14-274, 275
⑨	07MAJ - PY4011A	A/T Oil Pressure Hose, 2210 mm	4	14-232
⑩	07MAJ - PY40120	A/T Oil Pressure Hose, Adapter	4	14-232
⑪	07406 - 0020400	A/T Oil Pressure Gauge Set w/panel	1	14-232
⑫	07406 - 0070300	A/T Low Pressure Gauge w/panel	1	14-232
⑬*	07736 - A01000A	Adjustable Bearing Puller, 25 - 40 mm	1	14-267
⑭	07746 - 0010100	Attachment, 32 x 35 mm	1	14-265, 268
⑮	07746 - 0010500	Attachment, 62 x 68 mm	1	14-267
⑯	07746 - 0010600	Attachment, 72 x 75 mm	1	14-266, 267
⑰	07746 - 0030100	Driver 40 mm I.D.	1	14-262, 263
⑱	07749 - 0010000	Driver	1	14-265, 266, 267, 268
⑲	07947 - 6110501	Driver Attachment, 68 mm	1	14-265
⑳	07947 - 6340201	Driver Attachment, 58 x 72 mm	1	14-265

*Must be used with commercially-available 3/8" - 16 slide hammer.

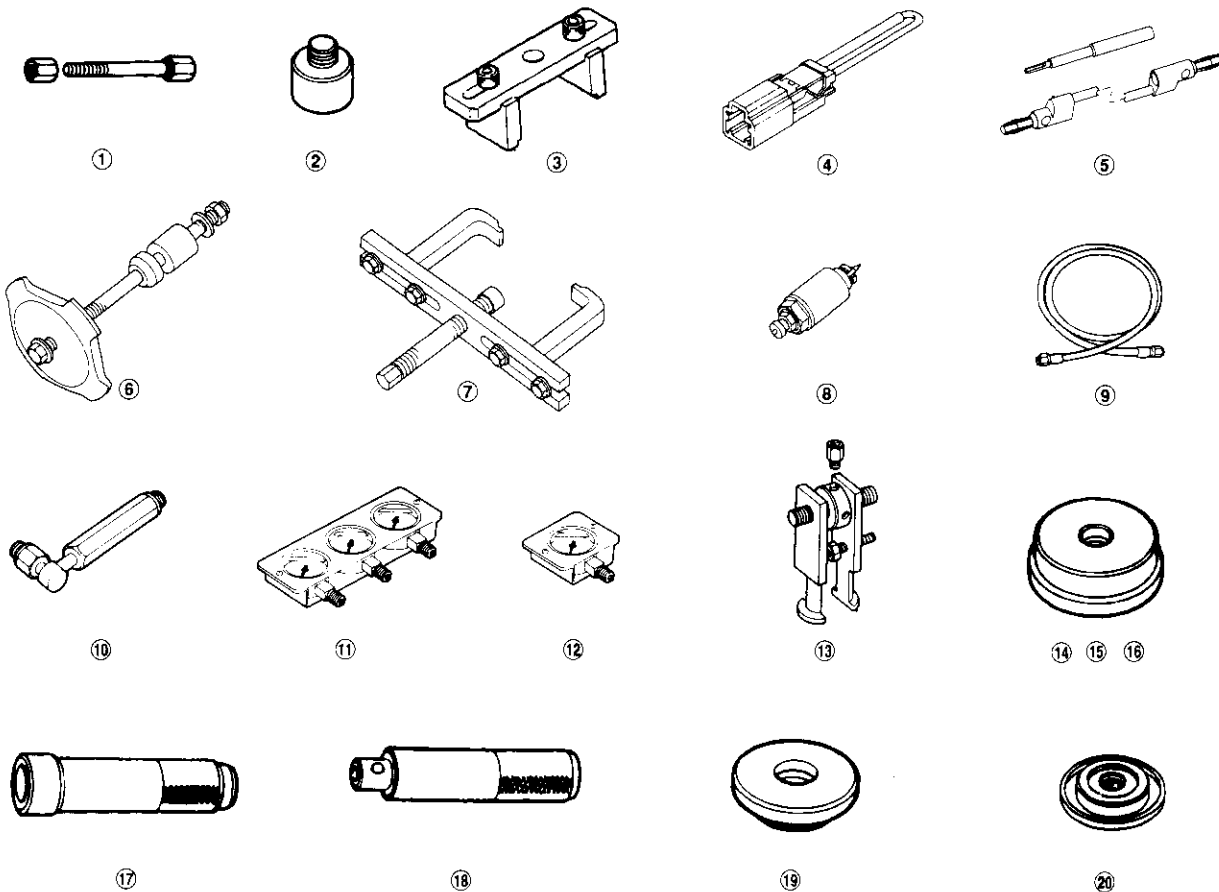

Description



The Continuously Variable Transmission (CVT) is a electronically controlled automatic transmission with drive and driven pulleys, and a steel belt. The CVT provides non-stage speeds forward and one reverse. The entire unit is positioned in line with the engine.

Transmission

Around the outside of the flywheel is a ring gear which meshes with the starter pinion when the engine is being started. The transmission has four parallel shafts: the input shaft, the drive pulley shaft, the driven pulley shaft and the secondary gear shaft. The input shaft is in line with the engine crankshaft. The drive pulley shaft and the driven pulley shaft consist of movable and fixed face pulleys. Both pulleys are linked by the steel belt.

The input shaft includes the sun gear. The drive pulley shaft includes the forward clutch which mounts the carrier assembly on the forward clutch drum. The carrier assembly includes the pinion gears which mesh with the sun gear and the ring gear. The ring gear has a hub-mounted reverse brake disc.

The driven pulley shaft includes the start clutch and the secondary drive gear which is integral with the parking gear. The secondary gear shaft is positioned between the secondary drive gear and the final driven gear. The secondary gear shaft includes the secondary driven gear which serves to change the rotation direction, because the drive pulley shaft and the driven pulley shaft rotate the same direction. When certain combinations of planetary gears in the transmission are engaged by the clutches and the reverse brake, power is transmitted from the drive pulley shaft to the driven pulley shaft to provide **L**, **S**, **D**, and **R**.

Electronic Control

The electronic control system consists of the Transmission Control Module (TCM), sensors, three linear solenoids, and a inhibitor solenoid. Shifting is electronically controlled under all conditions.

The TCM is located below the dashboard, behind the kick panel on the driver's side.

Hydraulic Control

The lower valve body assembly includes the main valve body, the Pressure Low (PL) regulator valve body, the shift valve body, the start clutch control valve body, and the secondary valve body. They are positioned on the lower part of the transmission housing.

The main valve body contains the Pressure High (PH) control valve, the lubrication valve and the pitot regulator valve. The secondary valve body contains the PH regulator valve, the clutch reducing valve, the start clutch valve accumulator and the shift inhibitor valve. The PL regulator valve body contains the PL regulator valve and the PH-PL control valve which is joined with the PH-PL control linear solenoid. The inhibitor solenoid valve is bolted on the PL regulator valve body.

The shift valve body contains the shift valve and the shift control valve, which is joined with the shift control linear solenoid. The start clutch control valve body contains the start clutch control valve, which is joined with the start clutch control linear solenoid. The linear solenoids and the inhibitor solenoid are controlled by the TCM. The manual valve body which contains the manual valve and the reverse inhibitor valve, is bolted on the intermediate housing.

The ATF pump assembly is located on the transmission housing, and it is linked with the input shaft by the sprockets and the sprocket chain. The pulleys and the clutch receive fluid from their respective feed pipes, and the reverse brake receives fluid from internal hydraulic circuit.

Shift Control Mechanism

Input from various sensors located throughout the vehicle determines which linear solenoid the TCM will activate. Activating the shift control linear solenoid changes the shift control valve pressure, causing the shift valve to move. This pressurizes the drive pulley pressure to the drive pulley and the driven pulley pressure to the driven pulley and changes their effective pulley ratio. Activating the start clutch control linear solenoid moves the start clutch control valve. The start clutch control valve uncovers the port, providing pressure to the start clutch to engage it.

(cont'd)

Description

(cont'd)

Gear Selection


The shift lever has six positions: **P** PARK, **R** REVERSE, **N** NEUTRAL, **D** DRIVE, **S** SECOND, and **L** LOW.

Position	Description
P PARK	Front wheels locked; parking brake pawl engaged with the parking gear on the driven pulley shaft. The start clutch and the forward clutch released.
R REVERSE	Reverse; reverse brake engaged.
N NEUTRAL	Neutral; the start clutch and the forward clutch released.
D DRIVE	General driving; the transmission automatically adjusts to keep the engine at the best speed for driving conditions.
S SECOND	For rapid acceleration at highway speeds; the transmission shifts into a lower range of ratios for better acceleration and increased engine braking.
L LOW	For engine braking and power for climbing; the transmission shifts into the lowest range of the ratios.

Starting is possible only in **P** and **N** positions through the use of a slide-type, neutral-safety switch.

Automatic Transaxle (A/T) Gear Position Indicator

The A/T gear position indicator in the instrument panel shows which gear has been selected without having to look down at the console.

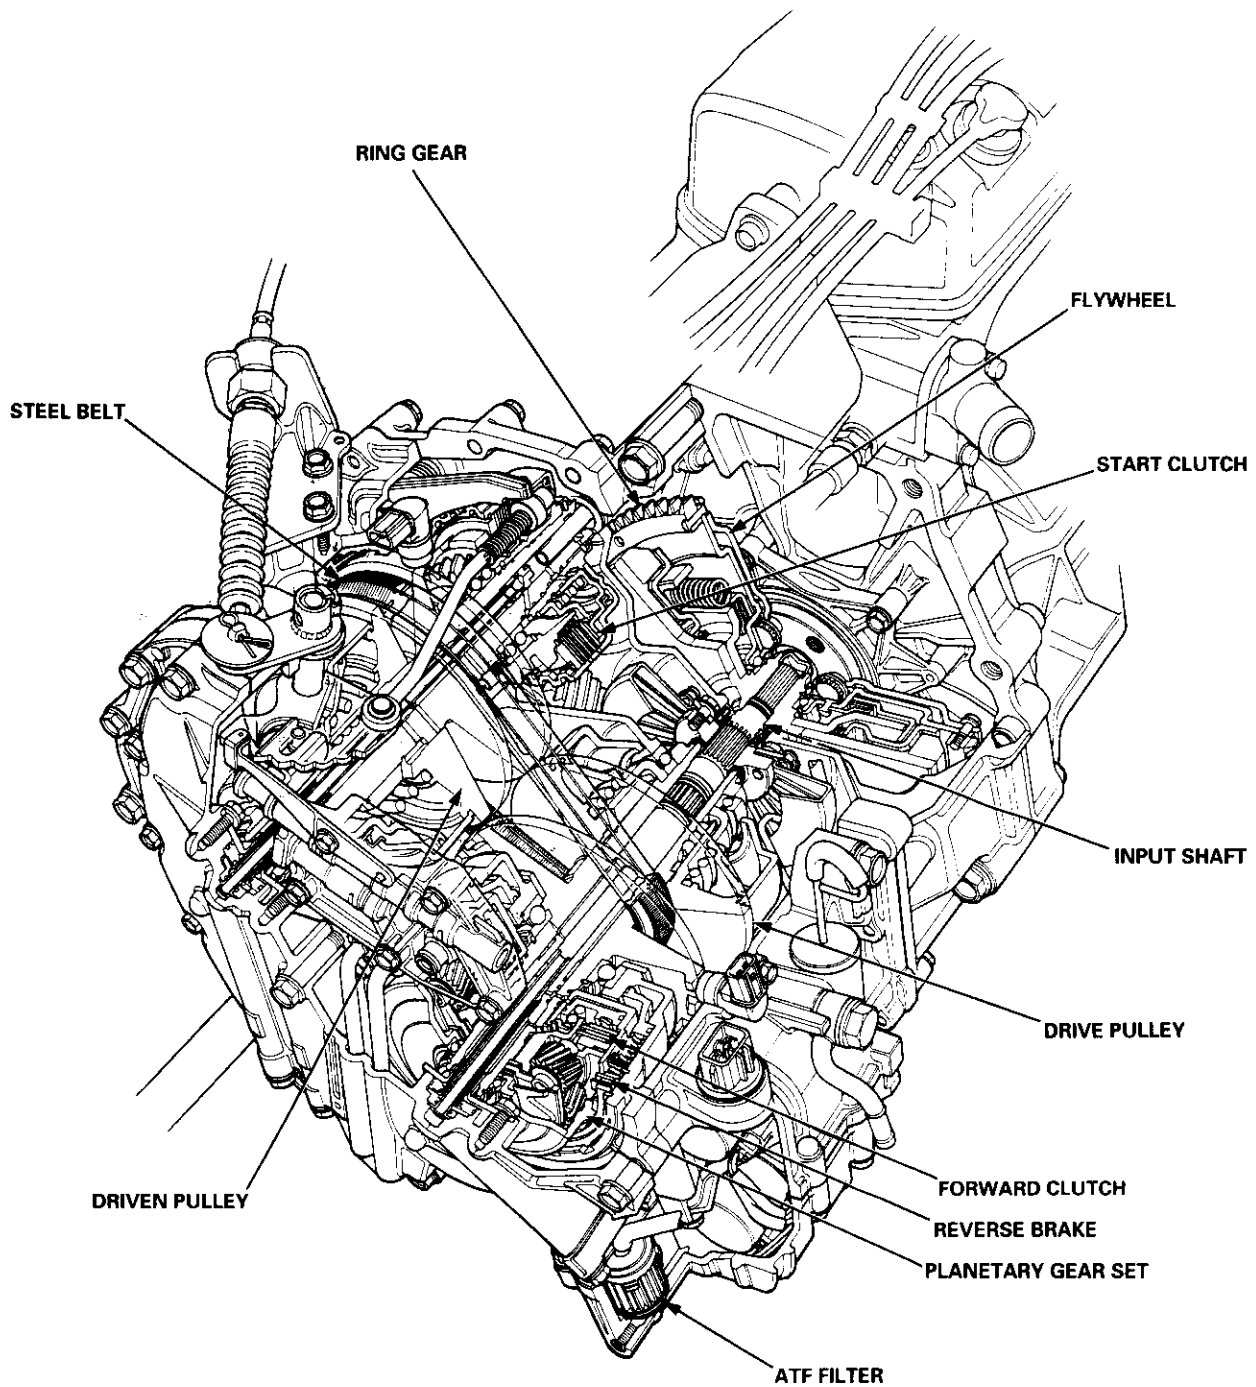

Description

Clutches/Reverse Brake/Planetary Gear/Pulleys

Clutches/Reverse Brake

The CVT uses the hydraulically-actuated clutches and brake to engage or disengage the transmission gears. When hydraulic pressure is introduced into the clutch drum and the reverse brake piston cavity, the clutch piston and the reverse brake piston move. This presses the friction discs and the steel plates together, locking them so they don't slip. Power is then transmitted through the engaged clutch pack to its hub-mounted gear, and through engaged ring gear to pinion gears.

Likewise, when the hydraulic pressure is bled from the clutch pack and the reverse brake piston cavity, the piston releases the friction discs and the steel plates, and they are free to slide past each. This allows the gear to spin independently on its shaft, transmitting no power.

Start Clutch

The start clutch, which is located at the end of the driven pulley shaft, engages/disengages the secondary drive gear. The start clutch is supplied hydraulic pressure by its ATF feed pipes within the driven pulley shaft.

Forward Clutch

The forward clutch, which is located at the end of the drive pulley shaft, engages/disengages the sun gear. The forward clutch is supplied hydraulic pressure by its ATF feed pipe within the drive pulley shaft.

Reverse Brake

The reverse brake, which is located inside the intermediate housing around the ring gear, locks the ring gear in **R** position. The reverse brake discs are mounted to the ring gear and the reverse brake plates are mounted to the intermediate housing. The reverse brake is supplied hydraulic pressure by a circuit connected to the internal hydraulic circuit.

Planetary Gear


The planetary gear consists of a sun gear, a carrier assembly, and a ring gear. The sun gear is connected to the input shaft with splines. The pinion gears are mounted to the carrier which is mounted to the forward clutch drum. The sun gear inputs the engine power via the input shaft to the planetary gear, and the carrier outputs the engine power. The ring gear is only used for switching the rotation direction of the pulley shafts.

In **D**, **S**, and **L** positions (forward range), the pinion gears don't rotate and revolve with the sun gear, so the carrier rotates. In **R** position (reverse range), the reverse brake locks the ring gear and the sun gear drives the pinion gears to rotate. The pinion gears rotate and revolve in the opposite direction from the rotation direction of the sun gear, and the carrier rotates with pinion gear revolution.

Pulleys

Each pulley consists of a movable face and a fixed face, and the effective pulley ratio changes with engine speed. The drive pulley and the driven pulley are linked by the steel belt.

To achieve a low pulley ratio, high hydraulic pressure works on the movable face of the driven pulley and reduces the effective diameter of the drive pulley, and a lower hydraulic pressure works on the movable face of the drive pulley to eliminate the steel belt slippage. To achieve a high pulley ratio, high hydraulic pressure works on the movable face of the drive pulley and reduces the effective diameter of the driven pulley, and a lower hydraulic pressure works on the movable face of the driven pulley to eliminate the steel belt slippage.

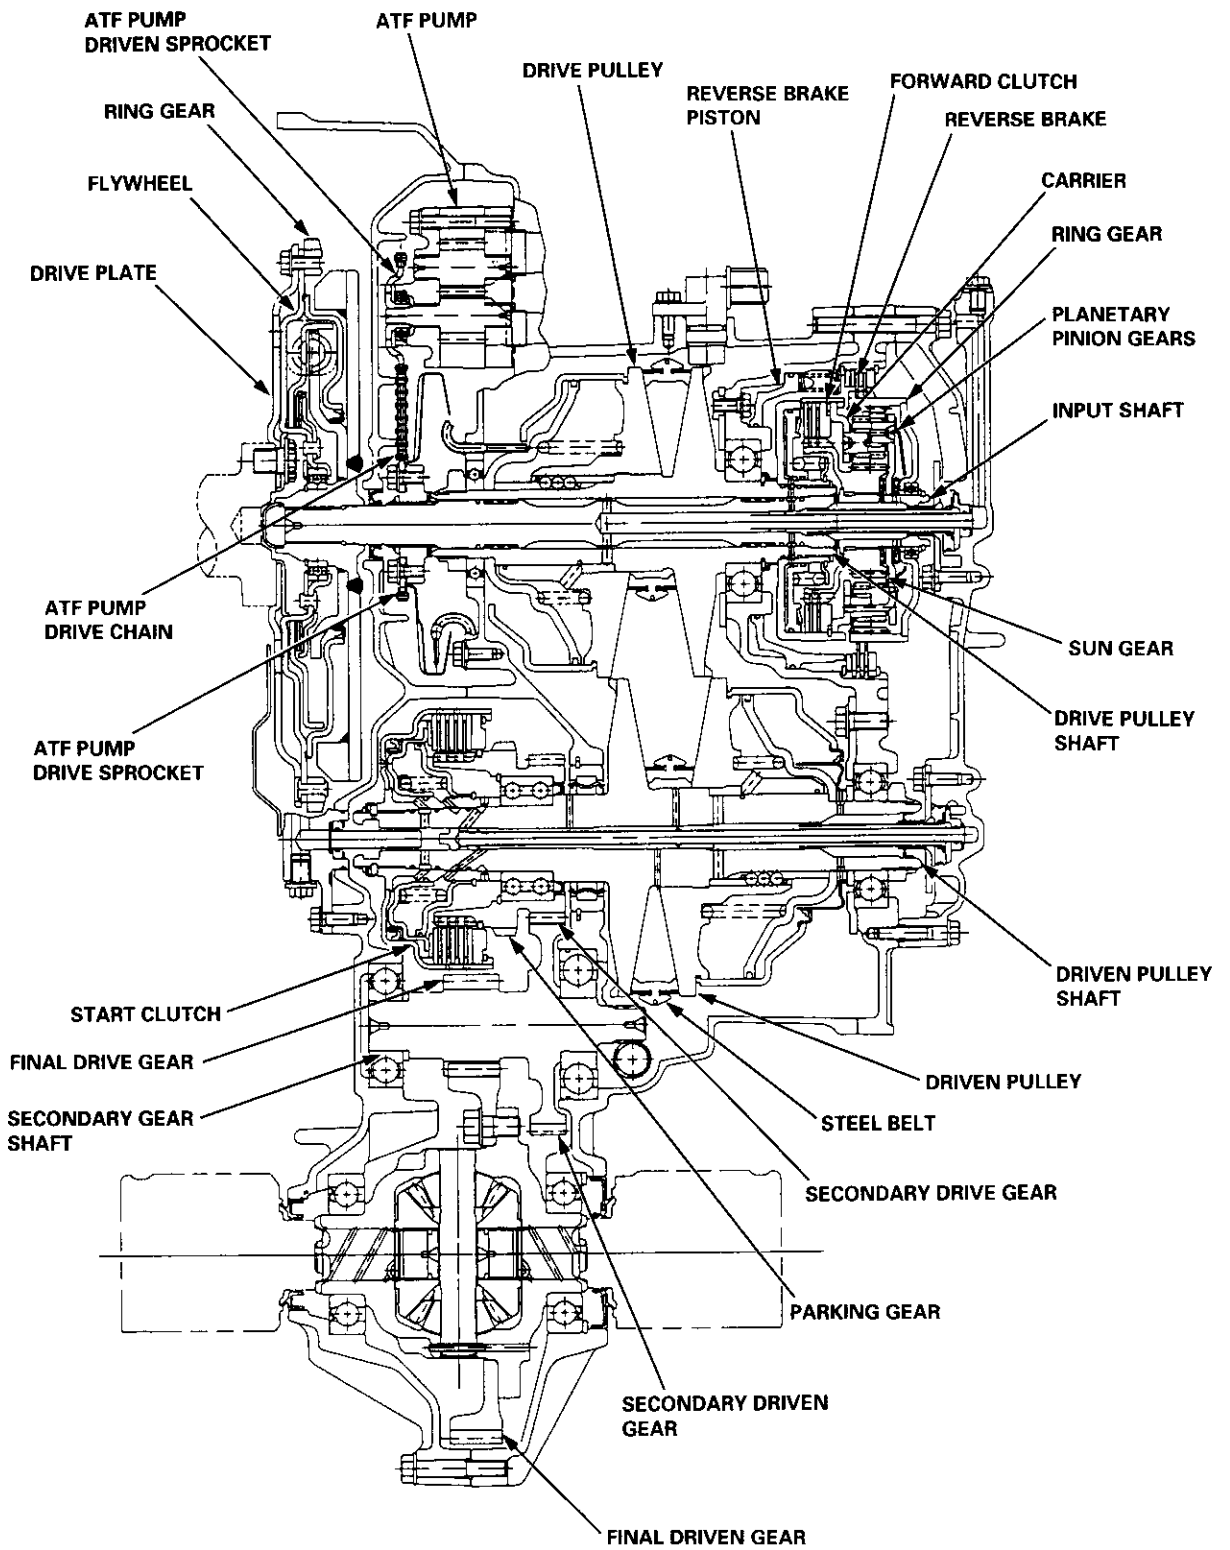

Description

Power Flow

N Position


- Start Clutch: released
- Forward Clutch: released
- Reverse Brake: released

Hydraulic pressure is not applied to the start clutch, forward clutch, and the reverse brake. Power is not transmitted to the secondary drive gear.

P Position

- Start Clutch: released
- Forward Clutch: released
- Reverse Brake: released

Hydraulic pressure is not applied to the start clutch, forward clutch, and the reverse brake. Power is not transmitted to the secondary drive gear. The secondary drive gear is locked by the parking brake pawl interlocking the parking gear.

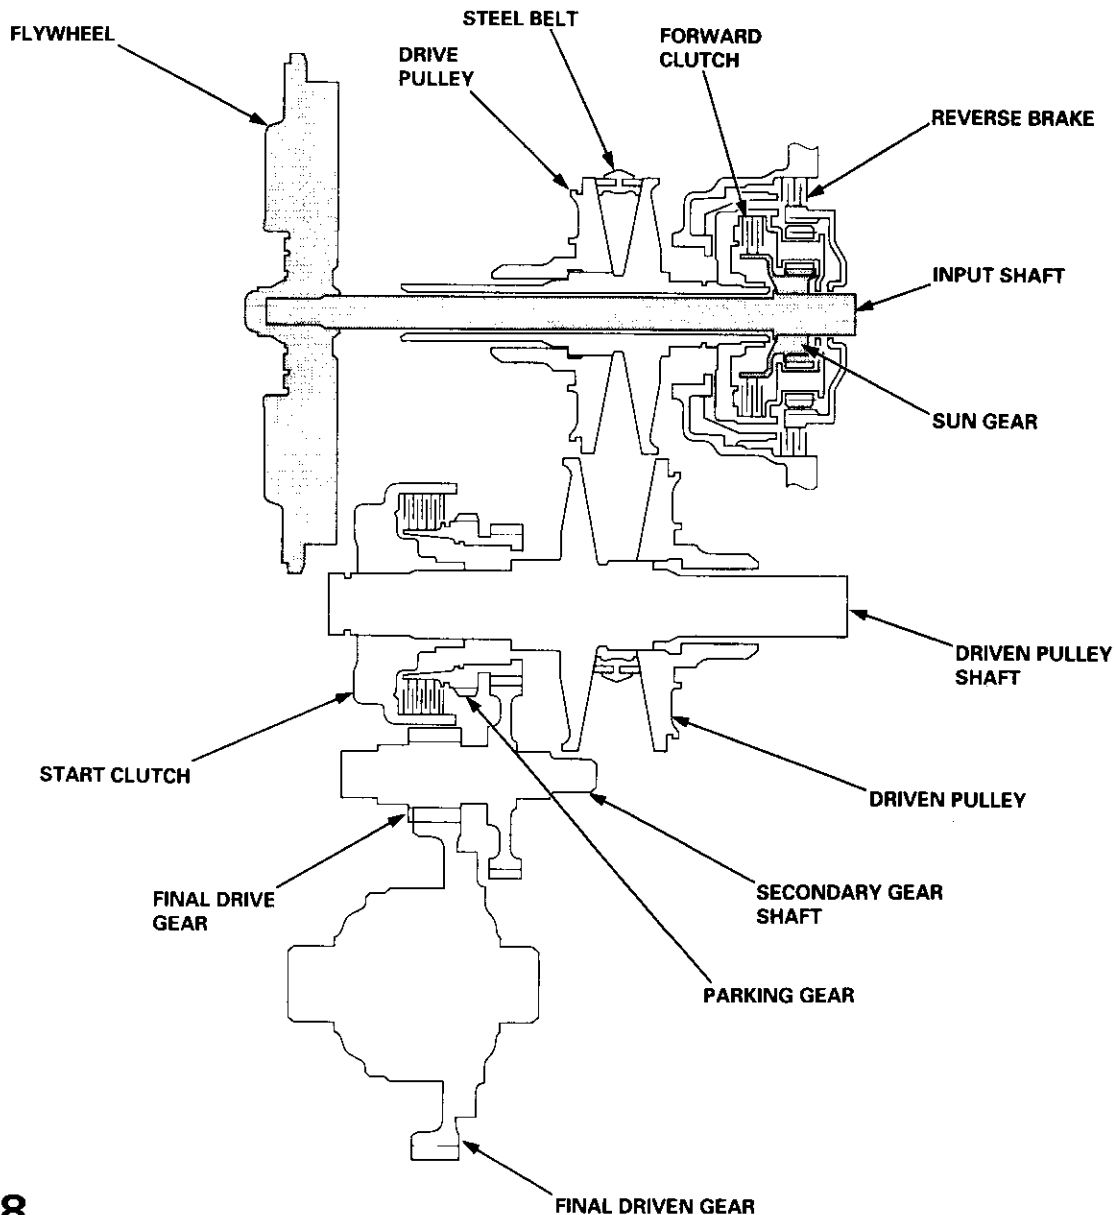




D, S, and L Positions (Forward Range)

- Start Clutch: engaged
- Forward Clutch: engaged
- Reverse Brake: released

1. The hydraulic pressure is applied to the forward clutch and the start clutch, and the sun gear drives the forward clutch.
2. The forward clutch drives the drive pulley shaft, which drives the driven pulley shaft linked by the steel belt.
3. The driven pulley shaft drives the secondary drive gear, via the start clutch.
4. Power is transmitted to the secondary driven gear, which drives the final driven gear.

NOTE: The working hydraulic pressure on the movable face of each shaft depends on the throttle opening position.

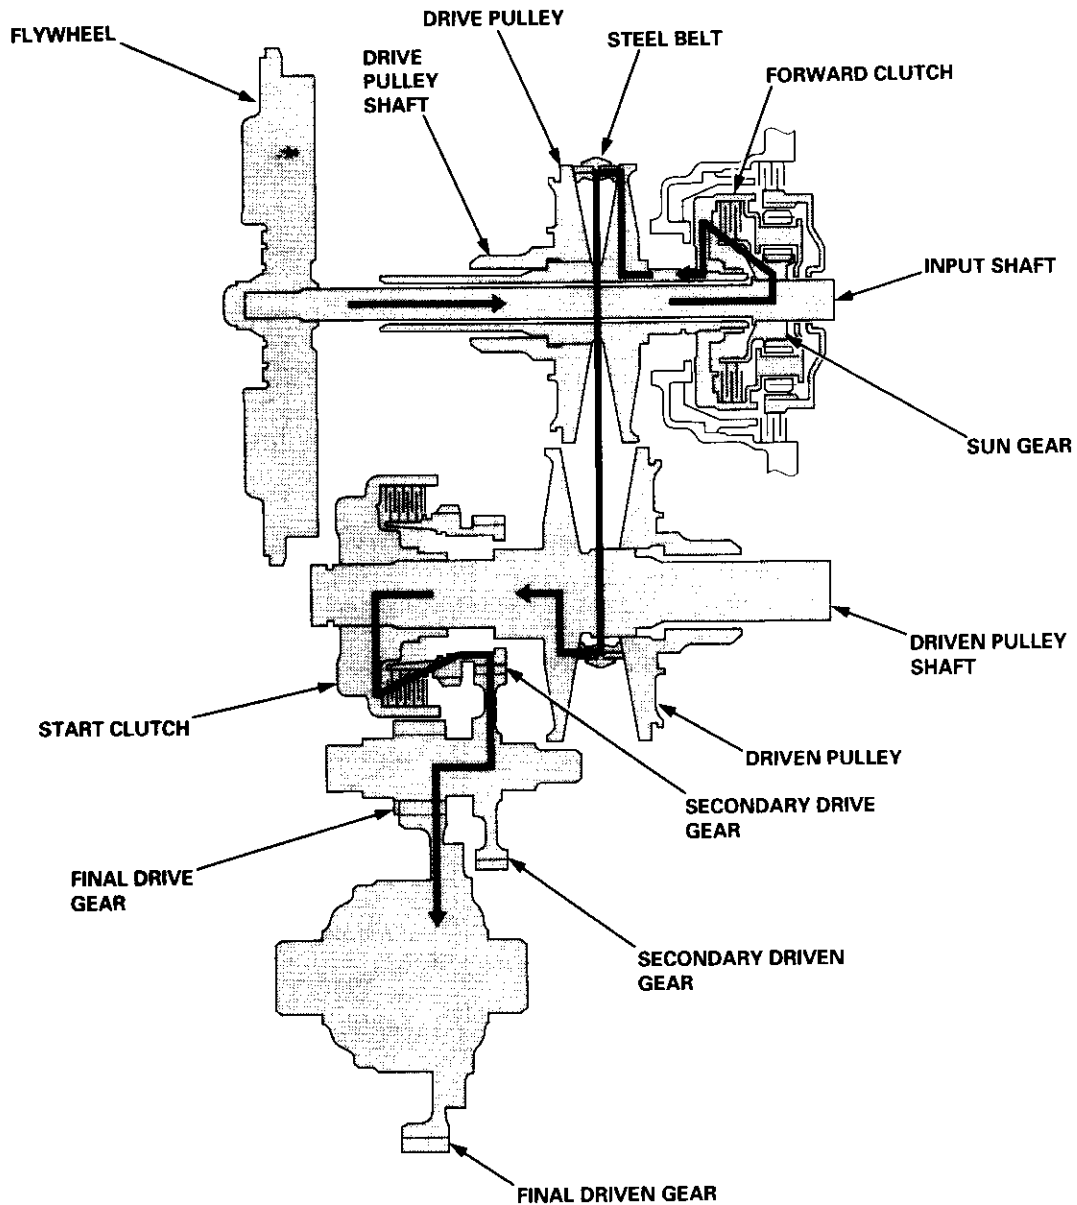

(cont'd)


Description

Power Flow (cont'd)

R Position

- Start Clutch: engaged
- Forward Clutch: released
- Reverse Brake: engaged

1. The hydraulic pressure is applied to the reverse brake and the start clutch. The sun gear drives the pinion gears, and the pinion gears revolve around the sun gear. The carrier assembly rotates in the opposite direction from the rotation direction of the sun gear.
2. The carrier assembly drives the drive pulley shaft via the forward clutch drum, and the drive pulley shaft drives the driven pulley shaft linked by the steel belt.
3. The driven pulley shaft drives the secondary drive gear via the start clutch.
4. Power is transmitted to the secondary driven gear, which drives the final driven gear.

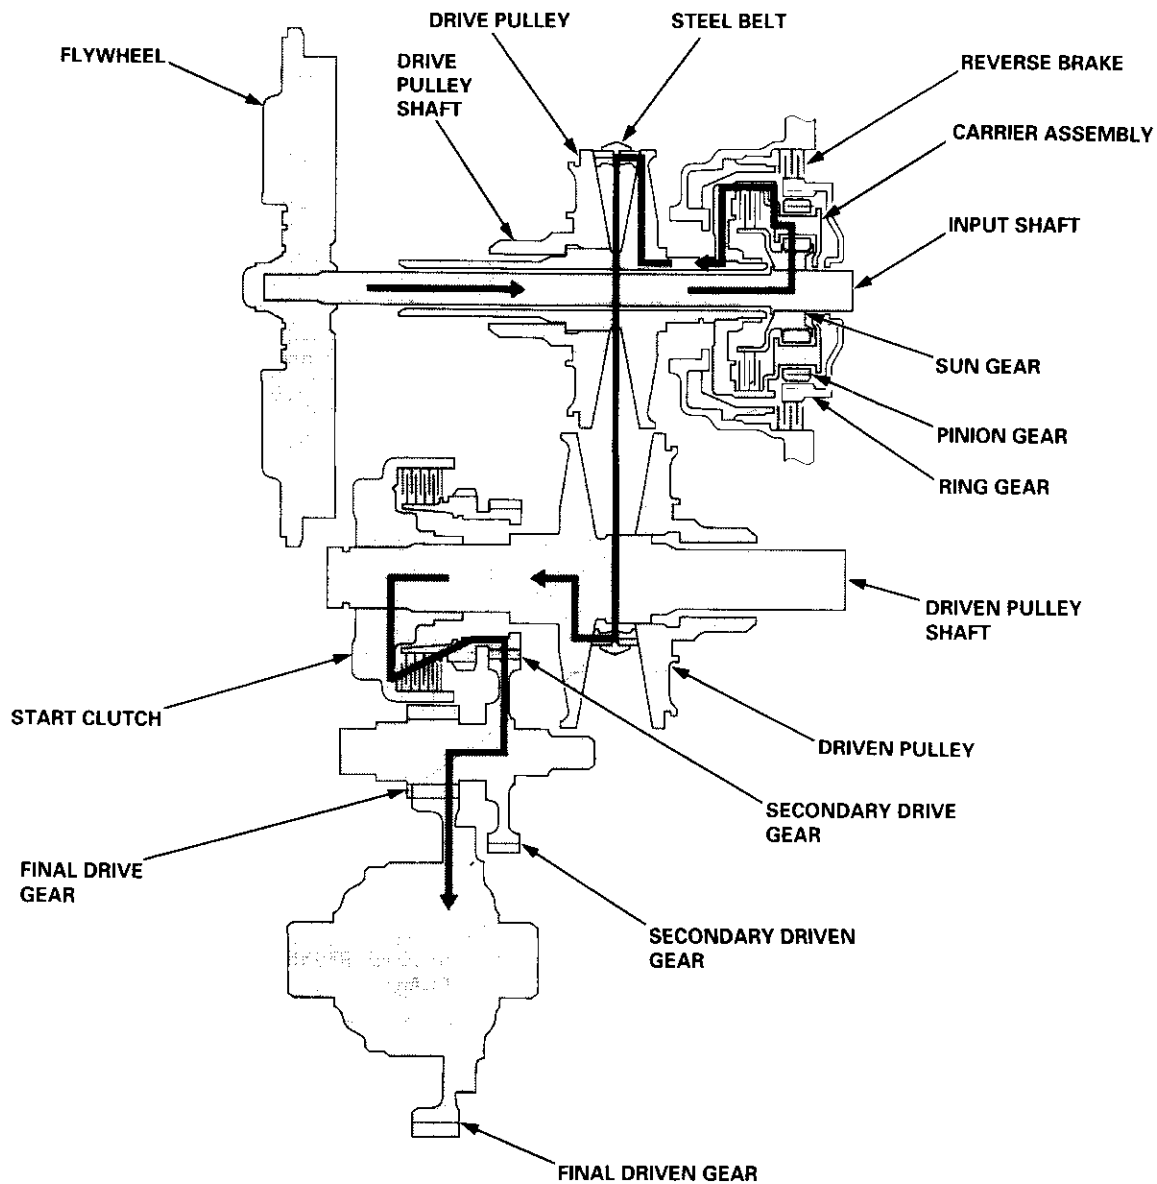



Electronic Control System


The electronic control system consists of the Transmission Control Module (TCM), sensors, three linear solenoids, and an inhibitor solenoid. Shifting is electronically controlled under all conditions. The TCM is located below the dashboard, behind the kick panel on the driver's side.

The TCM controls the transmission to reduce engine speed and retain the engine's cooling efficiency when the vehicle is driven with full throttle acceleration.

If the vehicle is continuously driven at full throttle acceleration, the TCM regulates the pulley hydraulic pressure to increase the pulley ratio, which, as the result, reduces the engine speed and retains the designed cooling efficiency. After the vehicle has been driven at a lower engine speed for a while, the TCM increases the pulley ratio to the original ratio.

For smooth starting in the **R** position, the TCM sends a signal to the ECM to cut off the A/C clutch (if the A/C is on) and increases the engine speed to 900 rpm when the transmission is shifted to the **R** position.

The start clutch functions to make smooth starting possible. To let the start clutch function properly, the TCM regulates the start clutch hydraulic pressure based on the engine's negative pressure memorized in the **N** position.

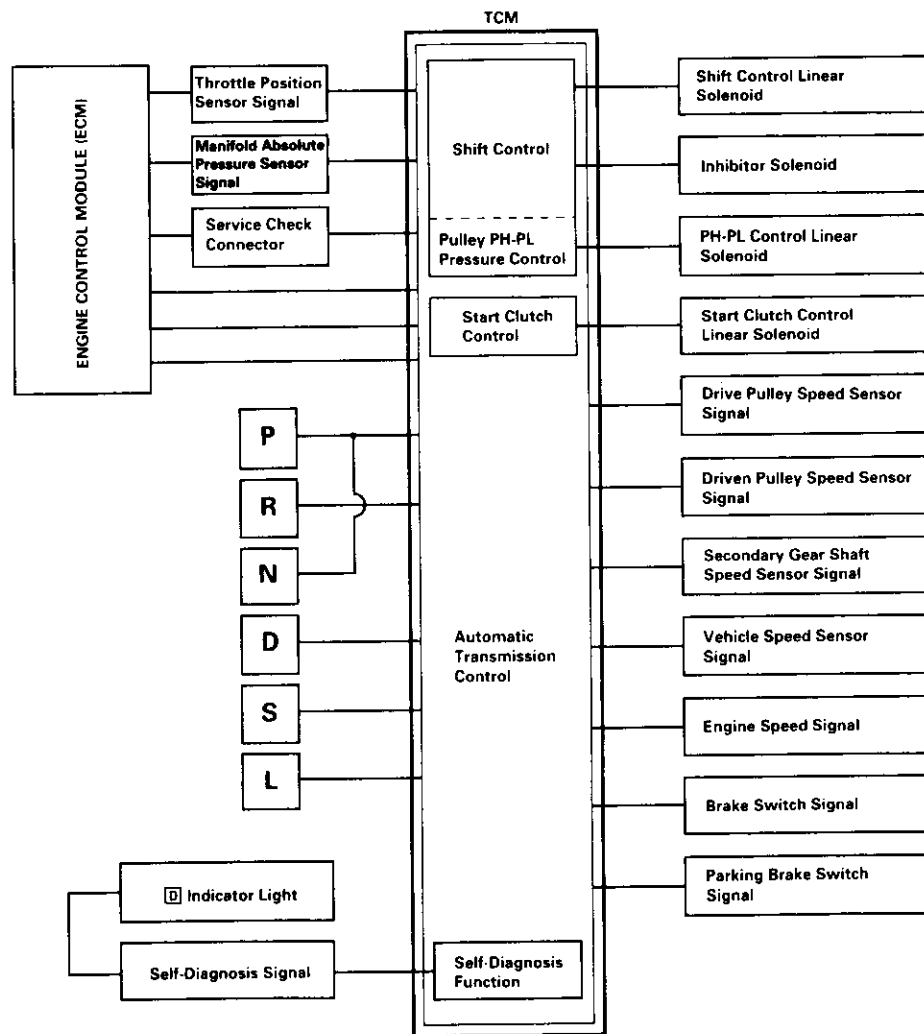


(cont'd)

Description

Electronic Control System (cont'd)

Circuit Diagram and Terminal Locations

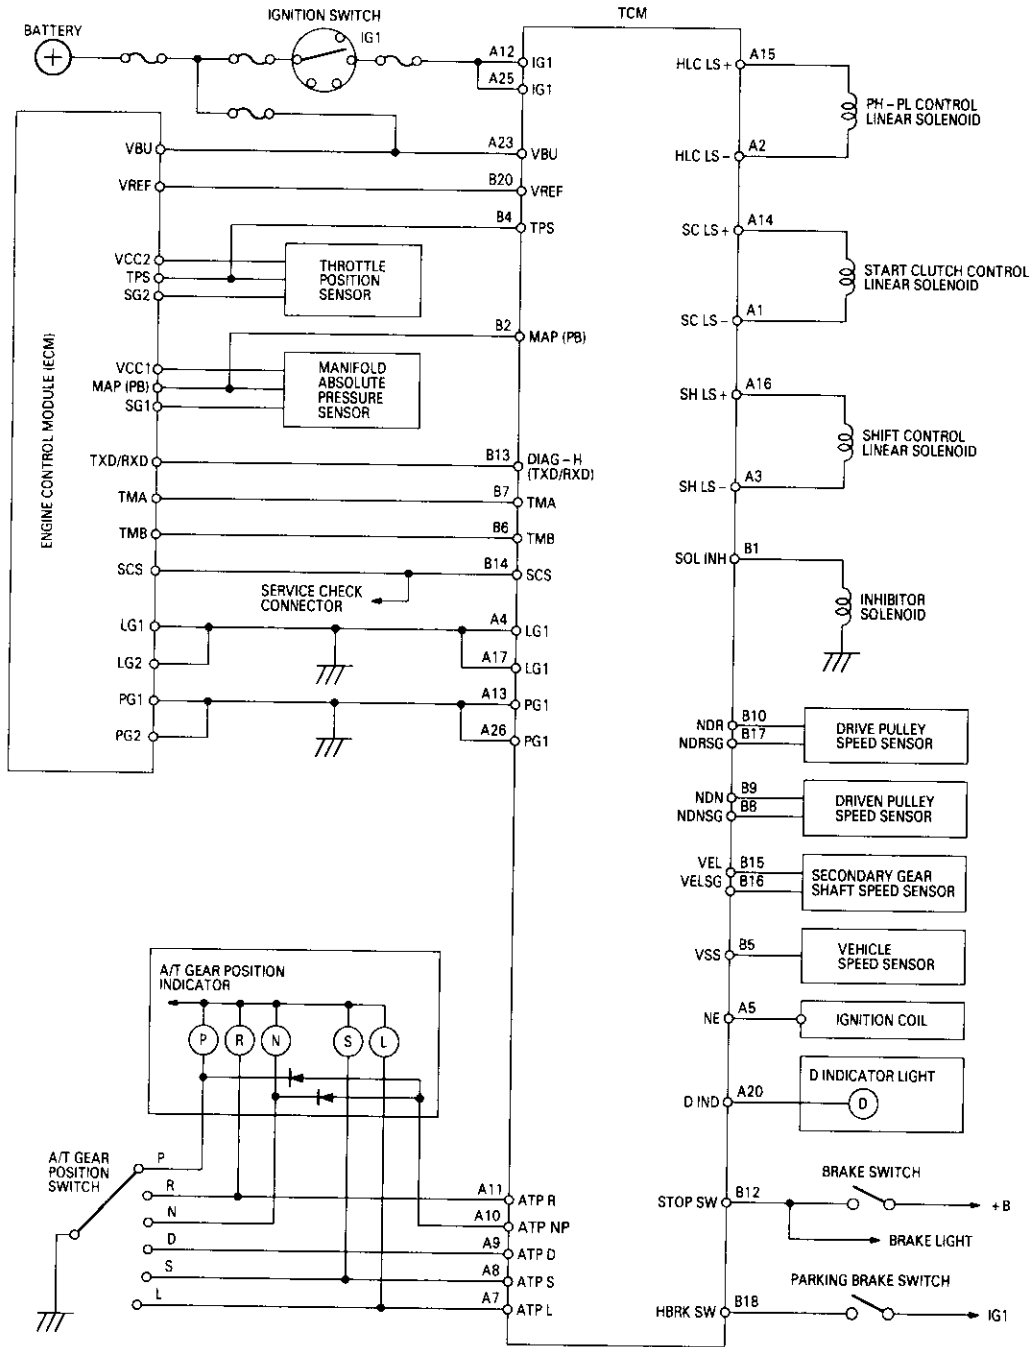

TCM Terminal Locations

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33

TCM - A (26P) Connector

TCM - B (22P) Connector



Hydraulic Control

The hydraulic control system is controlled by the ATF pump, the valves, and the solenoids. The ATF pump is driven by the input shaft. The ATF pump and the input shaft are linked by the ATF pump drive chain and the sprockets. The inhibitor solenoid valve and the linear solenoids, which are located on their valve body, are controlled by the TCM. Fluid from the ATF pump flows through the PH regulator valve to maintain specified pressure to the drive pulley, the driven pulley, and the manual valve.

The lower valve body assembly includes the main valve body, the PL regulator valve body, the shift valve body, the start clutch control valve body, and the secondary valve body.

Main Valve Body

The main valve body contains the PH control valve, the lubrication valve, and the pitot regulator valve.

- **PH Control Valve**


The PH control valve supplies PH control pressure (PHC) in accordance with the PH-PL control pressure (HLC), and supplies PH control pressure to the PH regulator valve, which also regulates PH pressure. At kick-down, it increases PH control pressure which increases the high (PH) pressure. This shortens the shift speed by releasing the reverse inhibitor pressure (RI) from the inhibitor solenoid valve.

- **Lubrication Valve**

The lubrication valve controls the lubrication pressure to each shaft and maintains lubrication pressure. When the pressure is too high, the spring is compressed. This moves the lubrication valve and opens the fluid leak passage.

- **Pitot Regulator Valve**

The pitot regulator valve controls the start clutch pressure (SC) in accordance with the engine speed, when the electronic control system is faulty.

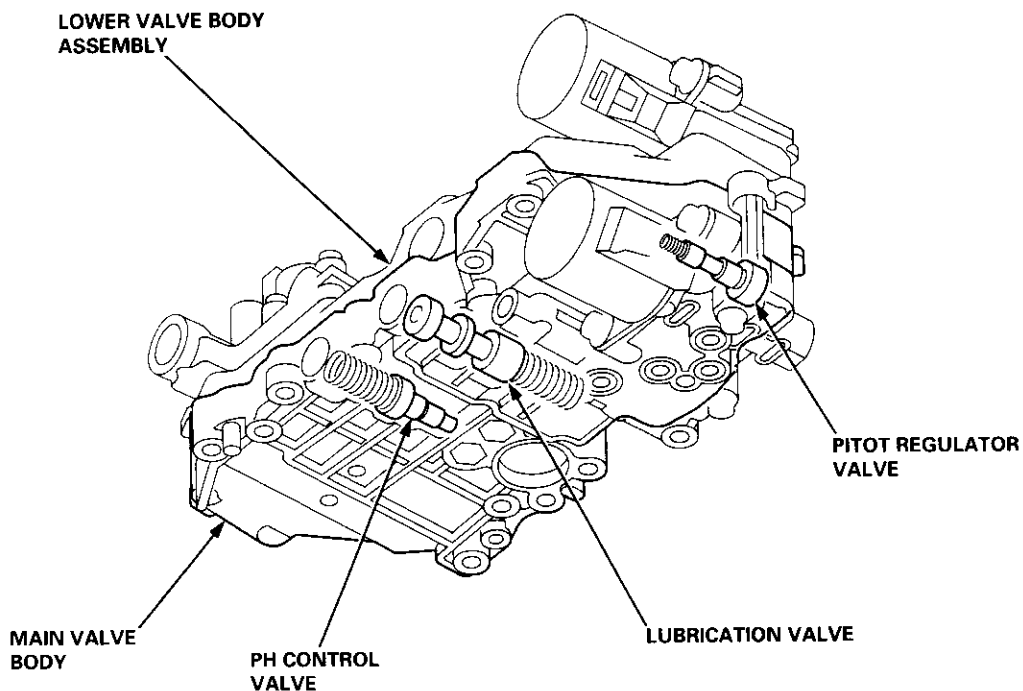

(cont.)

Description

Hydraulic Control (cont'd)

Secondary Valve Body

The secondary valve body contains the PH regulator valve, the clutch reducing valve, the start clutch valve accumulator, and the shift inhibitor valve.

- **PH Regulator Valve**

The PH regulator valve maintains hydraulic pressure supplied from the ATF pump, and supplies PH pressure to the hydraulic control circuit and the lubrication circuit. PH pressure is regulated at the PH regulator valve by the PH control pressure (PHC) from the PH control valve.

- **Clutch Reducing Valve**


The clutch reducing valve receives PH pressure from the PH regulator valve and regulates the clutch reducing pressure (CR). The clutch reducing valve supplies clutch pressure (CR) to the manual valve and the start clutch control valve, and supplies signal pressure to the PH-PL pressure control valve, the shift control valve, and the inhibitor solenoid valve.

- **Start Clutch Valve Accumulator**

The start clutch valve accumulator stabilizes the hydraulic pressure that is supplied to the start clutch.

- **Shift Inhibitor Valve**

The shift inhibitor valve switches the fluid passage to switch the start clutch control from electronic control to hydraulic control when the electronic control system is faulty. It also supplies clutch reducing pressure (CR) to the pitot regulator valve and the pitot lubrication pipe.

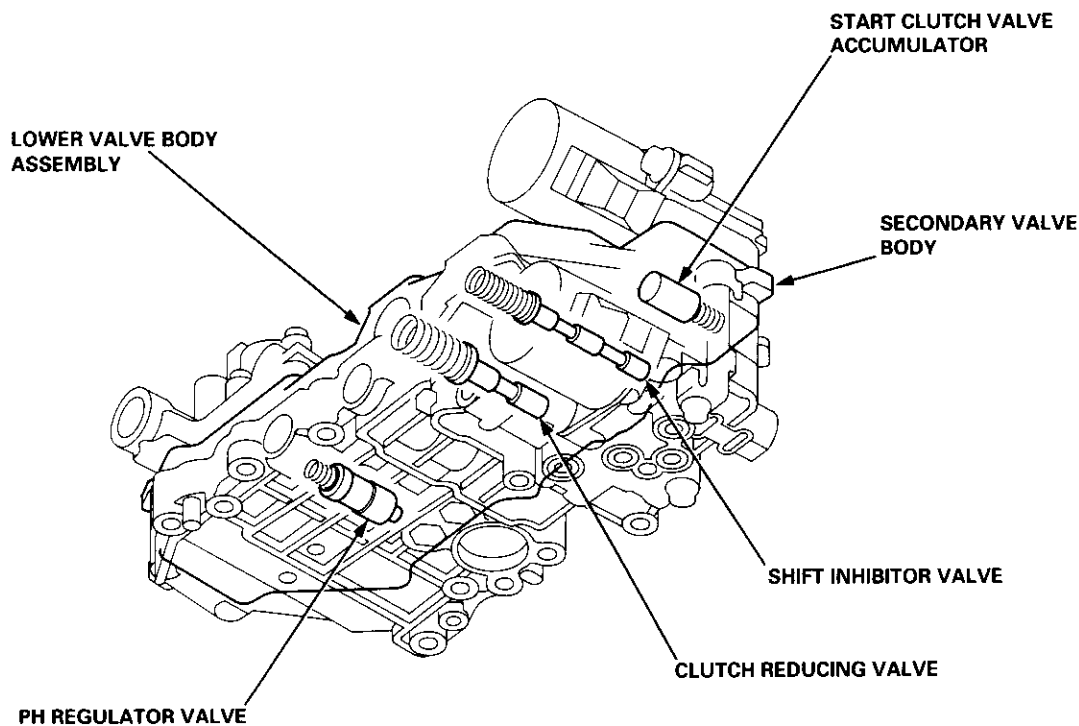



PL Regulator Valve Body

The PL regulator valve body contains the PL regulator valve and the PH-PL control valve, which is joined with the PH-PL control linear solenoid. The inhibitor solenoid is bolted on the PL regulator valve body.

- **PL Regulator Valve**

The PL regulator valve supplies low pressure (PL) to the pulley to eliminate steel belt slippage. The PL pressure is controlled by the PH-PL control pressure (HLC).

- **PH-PL Control Valve**

The PH-PL control valve controls the PL regulator valve according to engine torque. The PH-PL control valve supplies PH-PL control pressure (HLC) to the PH control valve to regulate PH pressure higher than PL pressure. The PH-PL control valve is controlled by the PH-PL control linear solenoid, which is controlled by the TCM.

- **Inhibitor Solenoid**


The inhibitor solenoid controls the reverse inhibitor valve by turning on and off. Also, the inhibitor solenoid controls PH control pressure (PHC) by applying reverse inhibitor pressure (RI) to the PH control valve. The inhibitor solenoid is controlled by the TCM.

Start Clutch Control Valve Body

The start clutch control valve body contains the start clutch control valve. Both are joined to the start clutch control linear solenoid.

- **Start Clutch Control Valve**

The start clutch control valve controls start clutch engagement according to the throttle opening. The start clutch control valve is controlled by the start clutch control linear solenoid, which is controlled by the TCM.

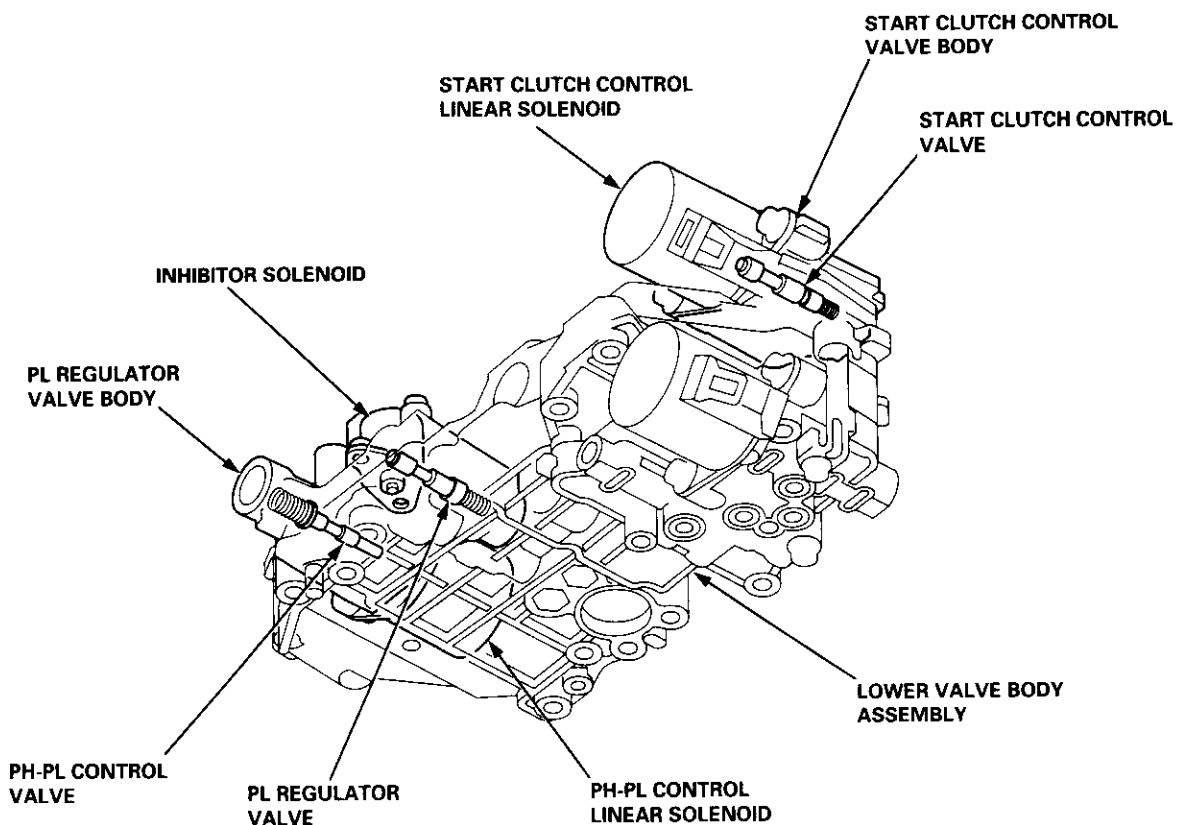

(cont'd)

Description

Hydraulic Control (cont'd)

Shift Valve Body


The shift valve body contains the shift valve and the shift control valve. Both are joined to the shift control linear solenoid.

- **Shift Valve**

The shift valve is controlled by shift valve pressure (SV) from the shift control valve. The shift valve distributes PH pressure and PL pressure to drive pulley and the driven pulley, to shift the transmission.

- **Shift Control Valve**

The shift control valve controls the shift valve in accordance with the throttle opening and vehicle speed. The shift control valve is controlled by the shift control linear solenoid, which is controlled by the TCM. When the electronic control system is faulty, the shift control valve switches the shift inhibitor valve to uncover the port leading the pitot regulator pressure to the start clutch.

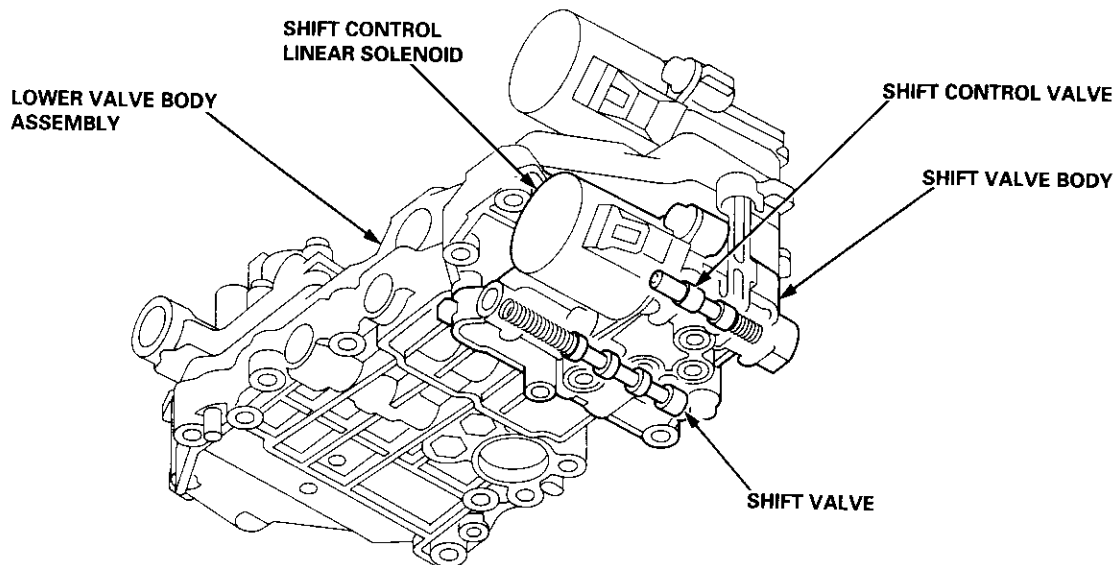

Manual Valve Body


The manual valve body contains the manual valve and the reverse inhibitor valve. The manual valve body is bolted to the intermediate housing.

- **Manual Valve**

The manual valve mechanically uncovers/covers the fluid passage according to the shift lever position.

- **Reverse Inhibitor Valve**


The reverse inhibitor valve is controlled by the reverse inhibitor pressure (RI). It intercepts the hydraulic circuit to the reverse brake while the vehicle is moving forward at speeds over approximately 6 mph (10 km/h).

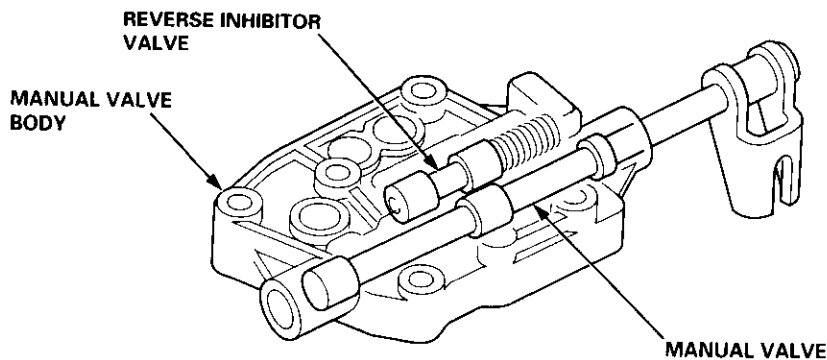



Hydraulic Flow

General Chart of Hydraulic Pressure

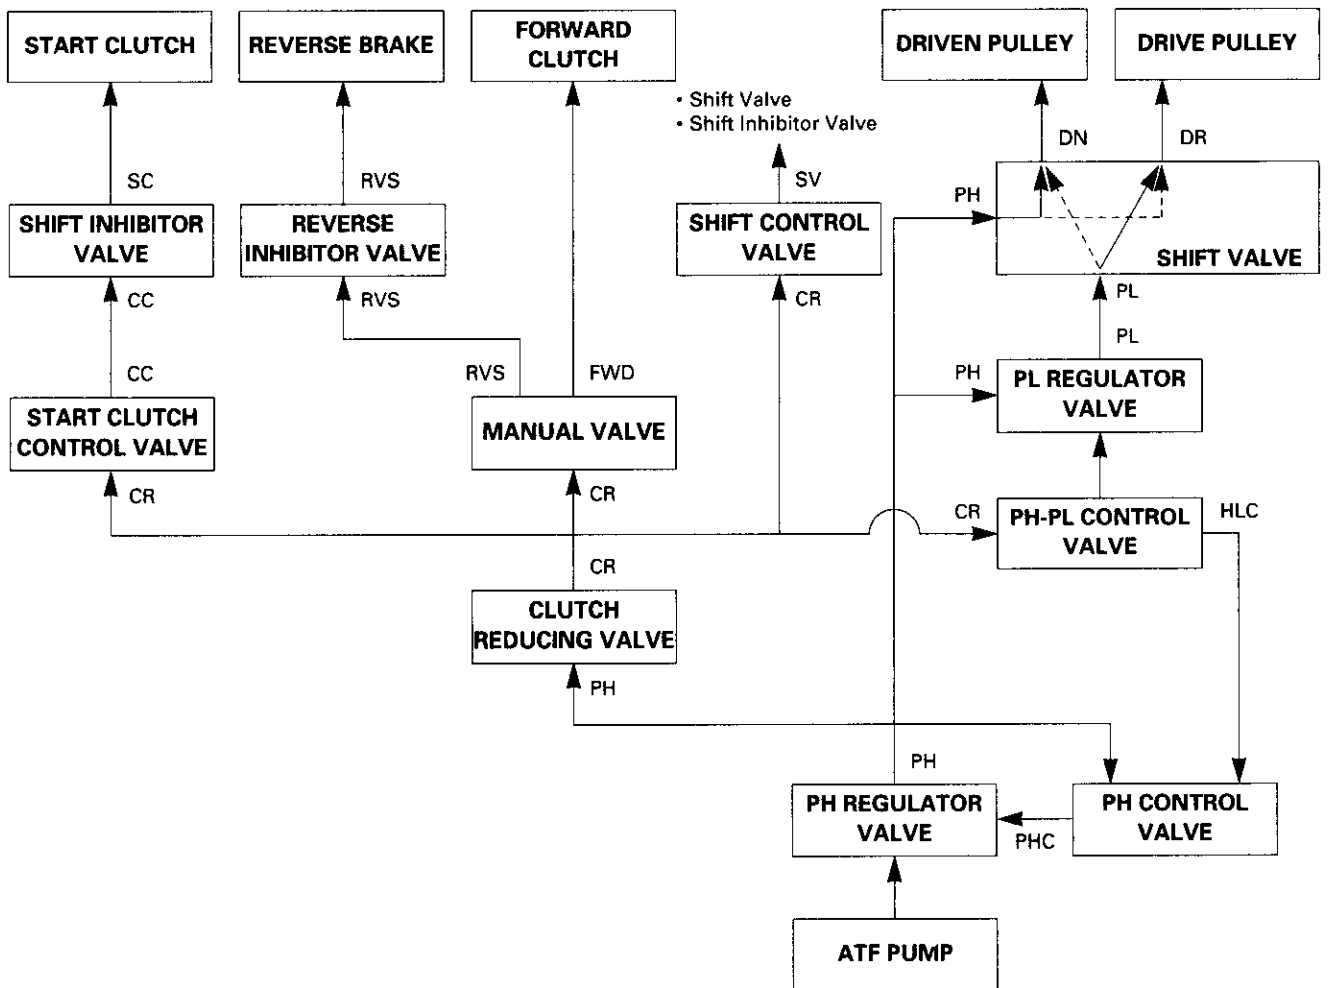

NO.	DESCRIPTION OF PRESSURE	NO.	DESCRIPTION OF PRESSURE
CC	CLUTCH CONTROL	PP	PITOT PIPE
COL	ATF COOLER	PR	PITOT REGULATOR
CR	CLUTCH REDUCING	RCC	RECIRCULATION
DN	DRIVEN PULLEY	RI	REVERSE INHIBITOR
DR	DRIVE PULLEY	RVS	REVERSE BRAKE
FWD	FORWARD CLUTCH	SC	START CLUTCH
HLC	PH-PL CONTROL	SI	SHIFT INHIBITOR
LUB	LUBRICATION	SUC	SUCTION
PH	PRESSURE HIGH	SV	SHIFT VALVE
PHC	PH CONTROL	X	LEAK
PL	PRESSURE LOW		

(cont'd)

Description


Hydraulic Flow (cont'd)

N Position

As the engine turns, the ATF pump also starts to operate. Fluid from the ATF pump flows to the PH regulator valve and the clutch reducing valve. The PH regulator valve regulates high pressure (PH), and send, it to the shift valve and the PL regulator valve. The high pressure (PH) flows to the movable face of the driven pulley via the shift valve, and turns into low pressure (PL) at the PL regulator valve. The low pressure (PL) flows to the movable face of the drive pulley via the shift valve. At this time, the pulley ratio remains low.

The high pressure (PH) becomes the clutch reducing pressure (CR) at the clutch reducing valve. The clutch reducing pressure (CR) flows to the start clutch control valve, the manual valve, the PH-PL control valve, and the shift control valve, and is intercepted by those valves.


Under this condition, hydraulic pressure is not applied to the clutches and reverse brake.

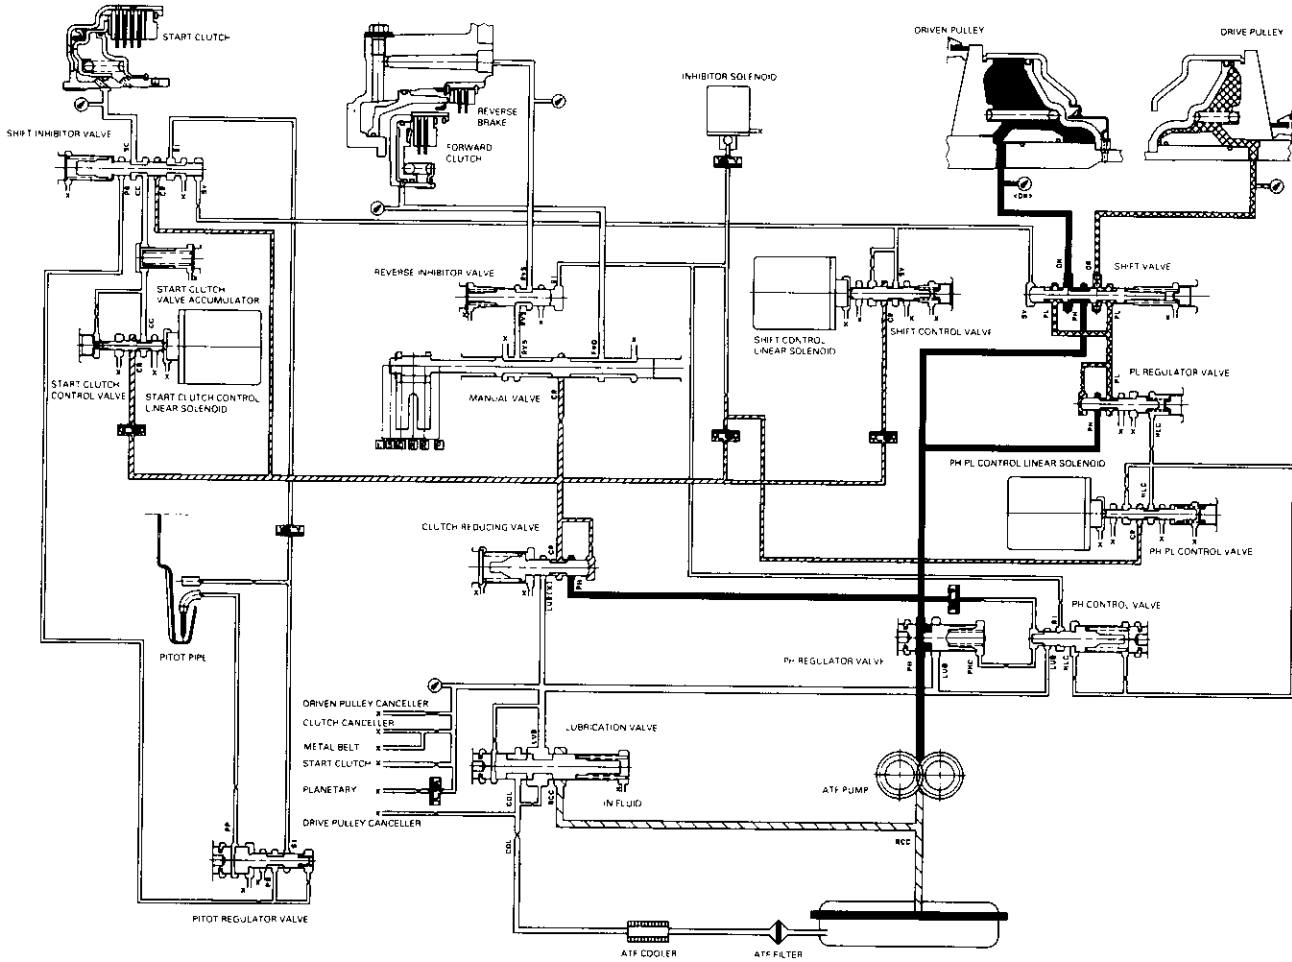



D position, at low speed range

The flow of fluid up to the drive pulley, the driven pulley, and the clutch reducing valve is the same as in **N** position. The pulley ratio is low because the driven pulley receives high pressure (PH), and the drive pulley receives low pressure (PL). The clutch reducing pressure (CR) flows through the manual valve to the forward clutch, then forward clutch is engaged. The forward clutch then drives the drive pulley shaft, which drives the driven pulley shaft. Also, clutch reducing pressure (CR) flows to the start clutch control valve, and becomes clutch control pressure (CC). Clutch control pressure (CC) becomes start clutch pressure (SC) at the shift inhibitor valve. Start clutch pressure (SC) is applied to the start clutch to engage the start clutch.

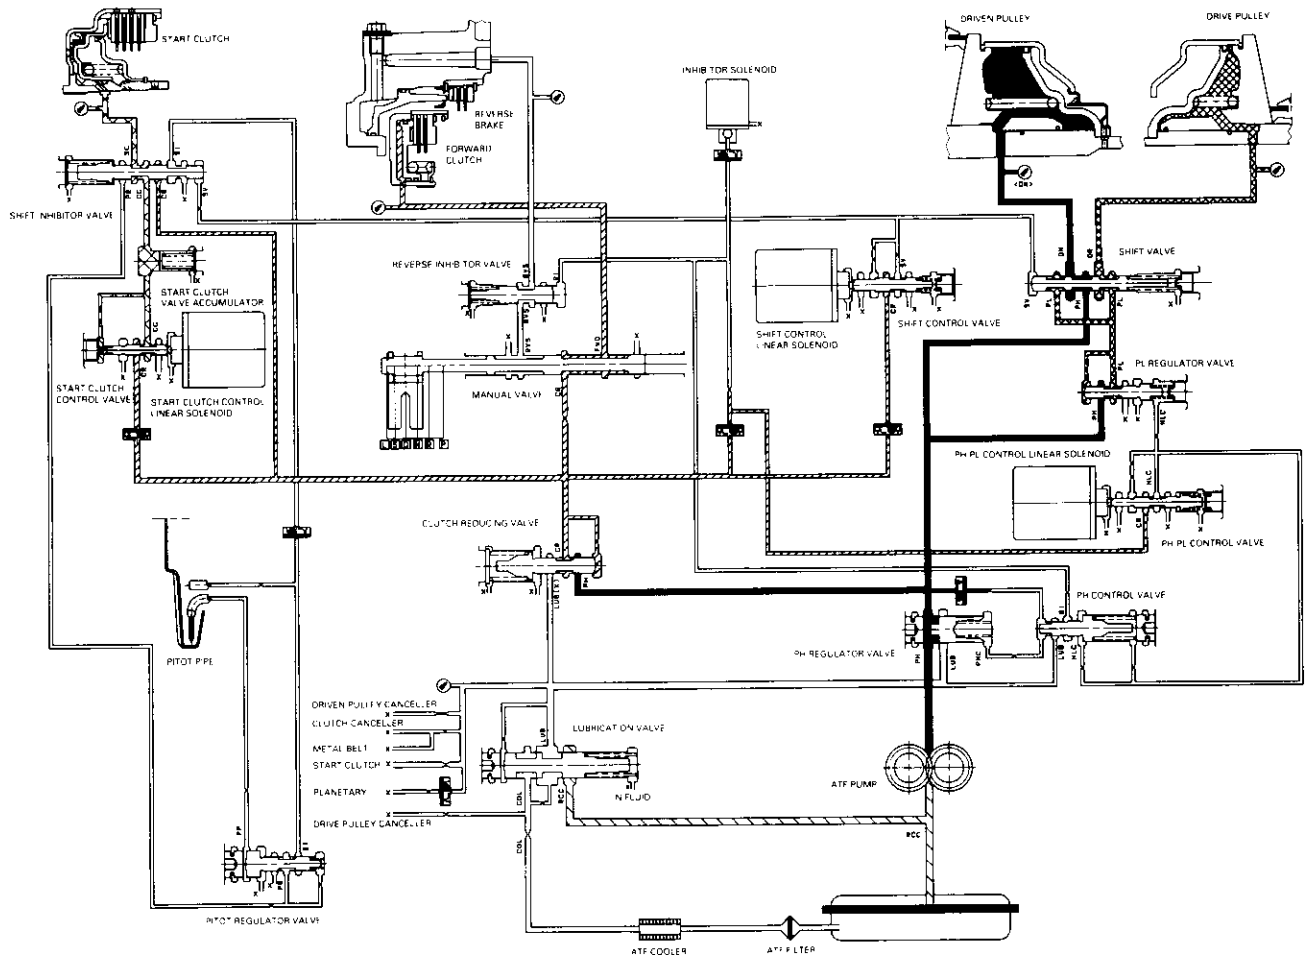

(cont'd)


Description

Hydraulic Flow (cont'd)

D position, at middle speed range

As the speed of the vehicle reaches the prescribed value, the shift control linear solenoid is activated by the TCM. The shift control linear solenoid controls the shift control valve to activate shift valve pressure (SV). Clutch reducing pressure (CR) from the clutch reducing valve becomes shift valve pressure (SV) at the shift control valve. Shift valve pressure (SV) flows to the left end of the shift valve, the shift valve to the right side and positioning it in the middle of its travel. The shift valve covers the port to stop high pressure (PH) to the pulleys, and uncovers the port leading low pressure (PL) to the pulleys. The drive pulley and the driven pulley receive low pressure (PL). At this time, the pulley ratio is in the middle. Pressure remains to apply the forward clutch and the start clutch.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

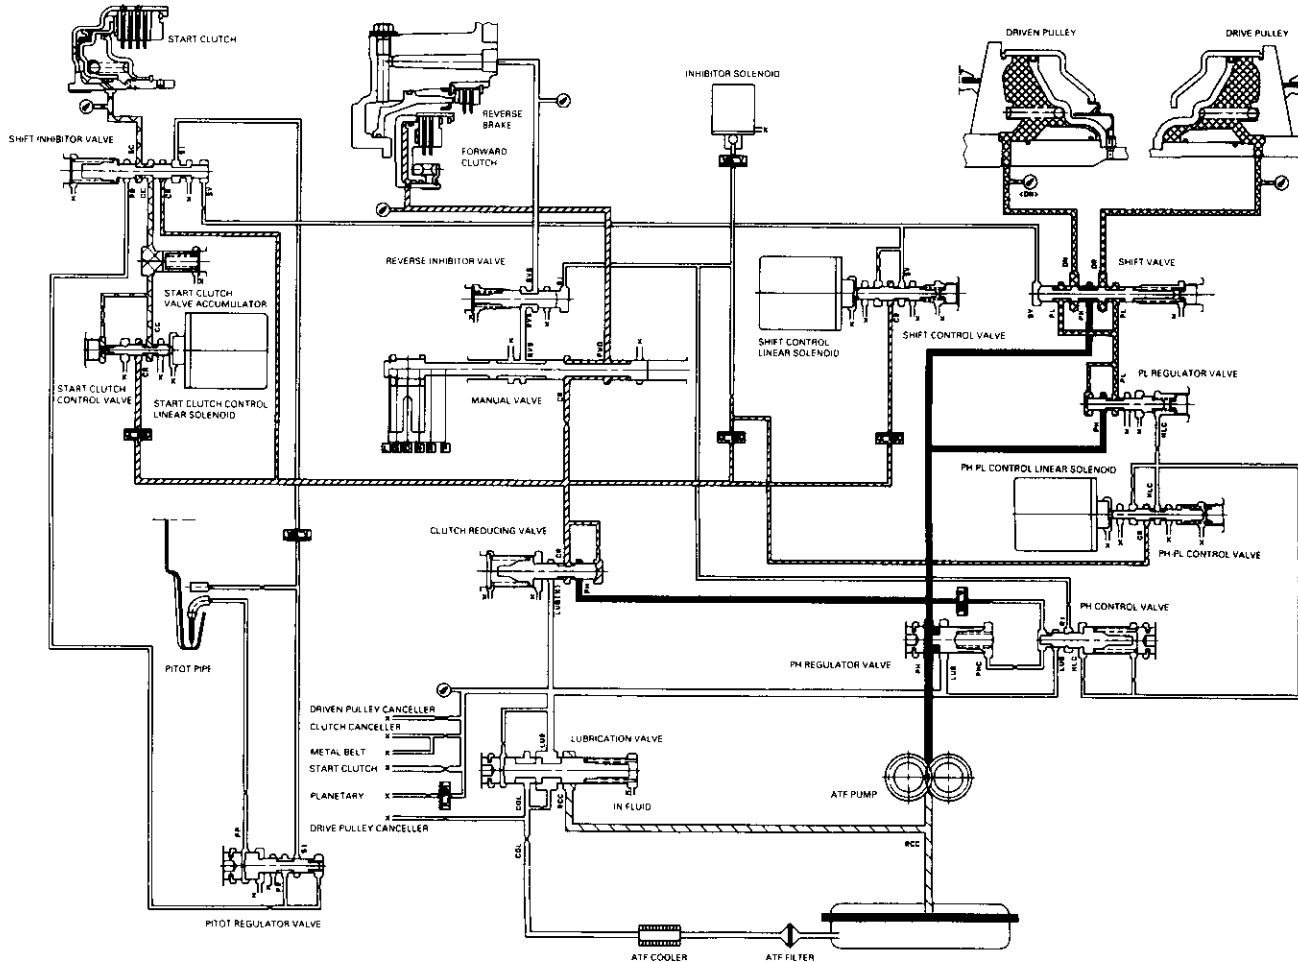




D position, at high speed range

As the speed of the vehicle reaches the prescribed value, the shift control linear solenoid moves the shift control valve to increase shift valve pressure (SV) at the left end of the shift valve. The shift valve moves to the right side compared to its position at the middle pulley ratio. The shift valve uncovers the port leading high pressure (PH) to the drive pulley and uncovers the port leading low pressure (PL) to the driven pulley. The drive pulley receives high pressure (PH) and the driven pulley receives low pressure (PL). The pulley ratio is high. Pressure remains to apply the forward clutch and the start clutch.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

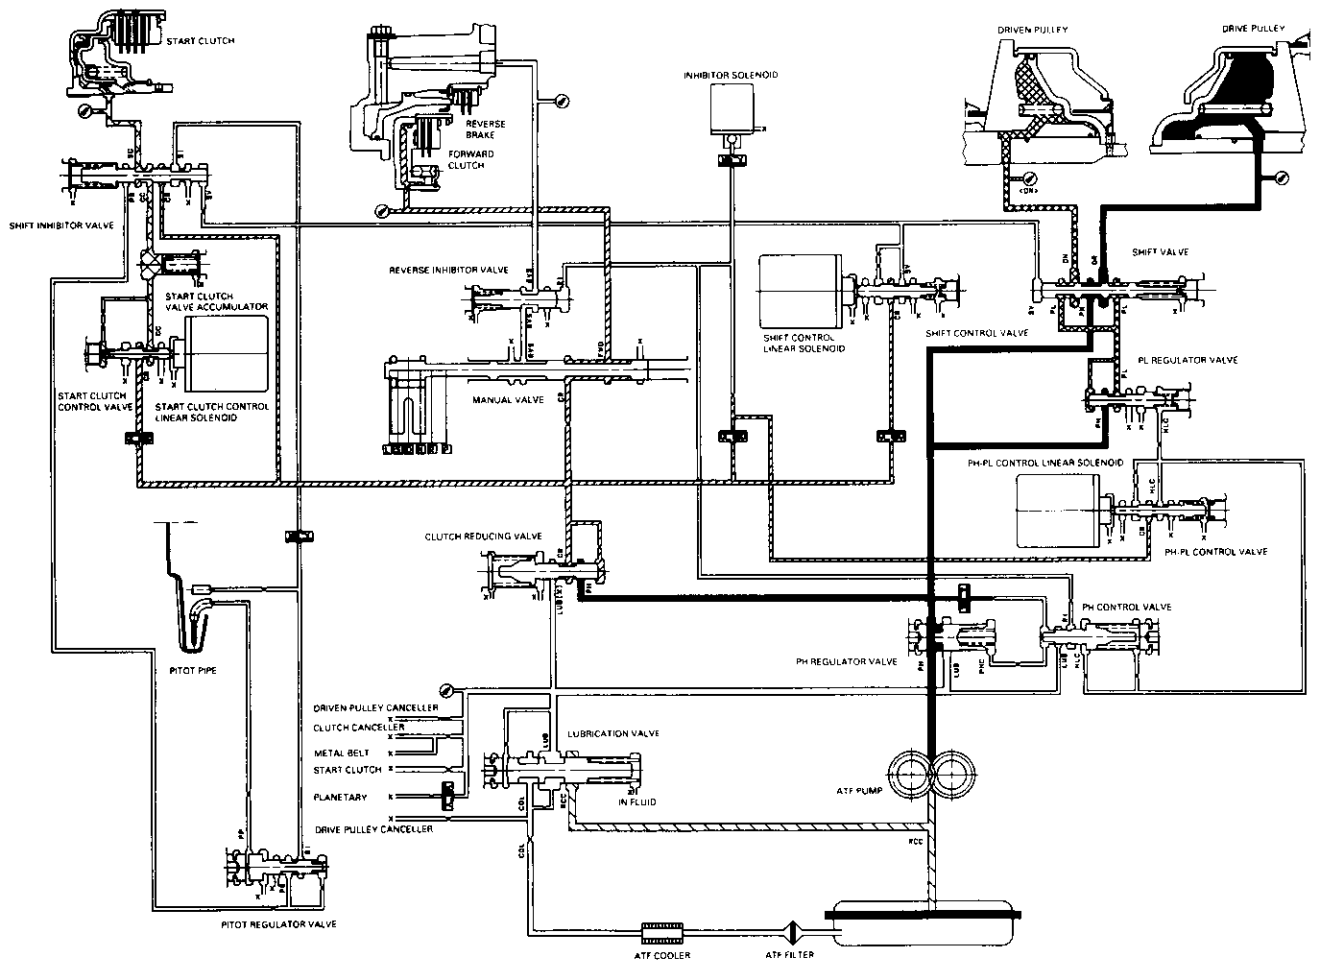

(cont'd)


Description

Hydraulic Flow (cont'd)

R position

The flow of fluid up to the drive pulley, the driven pulley, and the clutch reducing valve is the same as in **N** position. The pulley ratio is low because the driven pulley receives high pressure (PH) and the drive pulley receives low pressure (PL). The manual valve is shifted into the **R** position, and it uncovers the port that leads reverse brake pressure (RVS) to the reverse inhibitor valve. The inhibitor solenoid turns off by means of the TCM, and reverse inhibitor pressure (RI) is applied to the right end of the reverse inhibitor valve. The reverse inhibitor valve moves to the left side, and uncovers the port that leads reverse brake pressure (RVS) to the reverse brake. Clutch reducing pressure (CR) becomes reverse brake pressure (RVS) at the manual valve, and flows to the reverse brake. The reverse brake is engaged, and it locks the ring gear.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

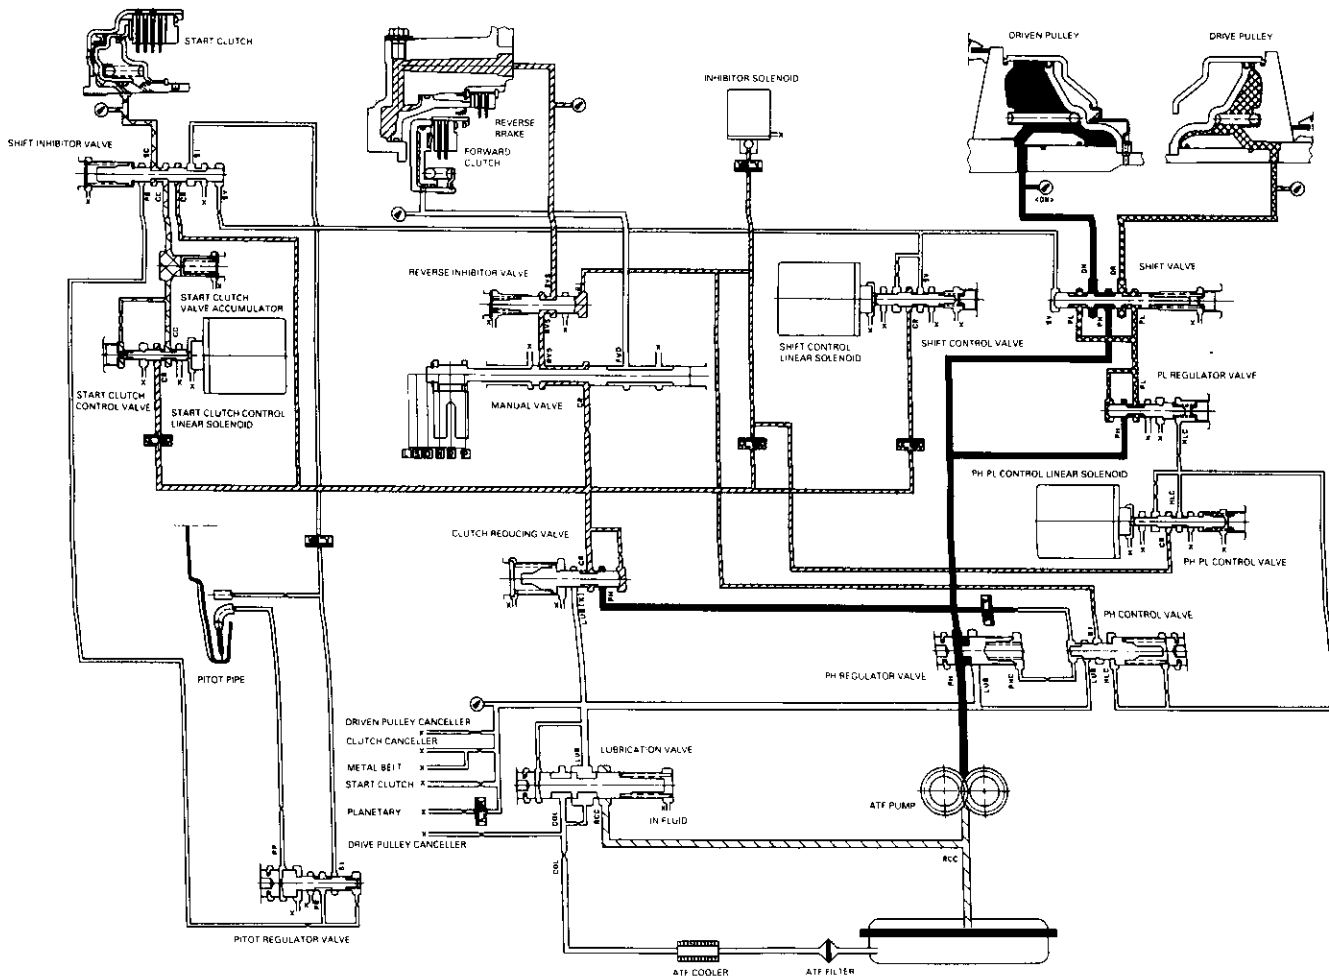




R position

Reverse Inhibitor Control

If the **R** position is selected while the vehicle is moving forward at speeds over 6 mph (10 km/h), the inhibitor solenoid doesn't turn off by means of the TCM. Reverse inhibitor pressure (RI) is not applied to the reverse inhibitor valve as the reverse inhibitor solenoid turns on. The reverse inhibitor valve is kept on the right side, and covers the port to stop reverse brake pressure (RVS) to the reverse brake from the manual valve. Reverse brake pressure (RVS) is not applied to the reverse brake, and power is not transmitted to the reverse direction.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

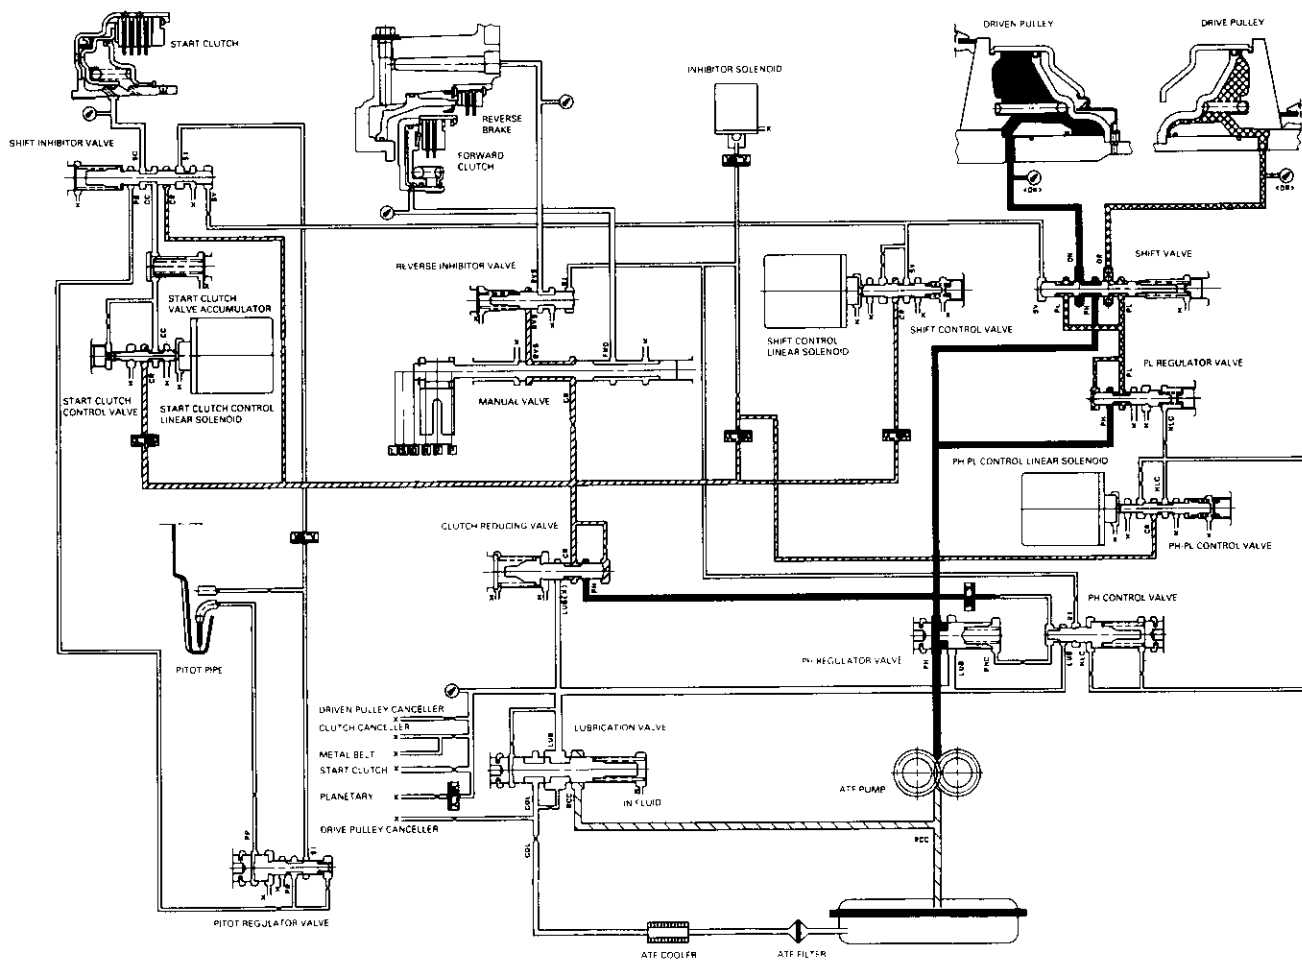

(cont'd)


Description

Hydraulic Flow (cont'd)

P position

The flow of fluid up to the drive pulley, the driven pulley, and the clutch reducing valve is the same as in **N** position. Clutch reducing pressure (CR) flows to the start clutch control valve, the manual valve, and the shift control valve, and is intercepted by those valves.

Under this condition, hydraulic pressure is not applied to the clutches and reverse brake.

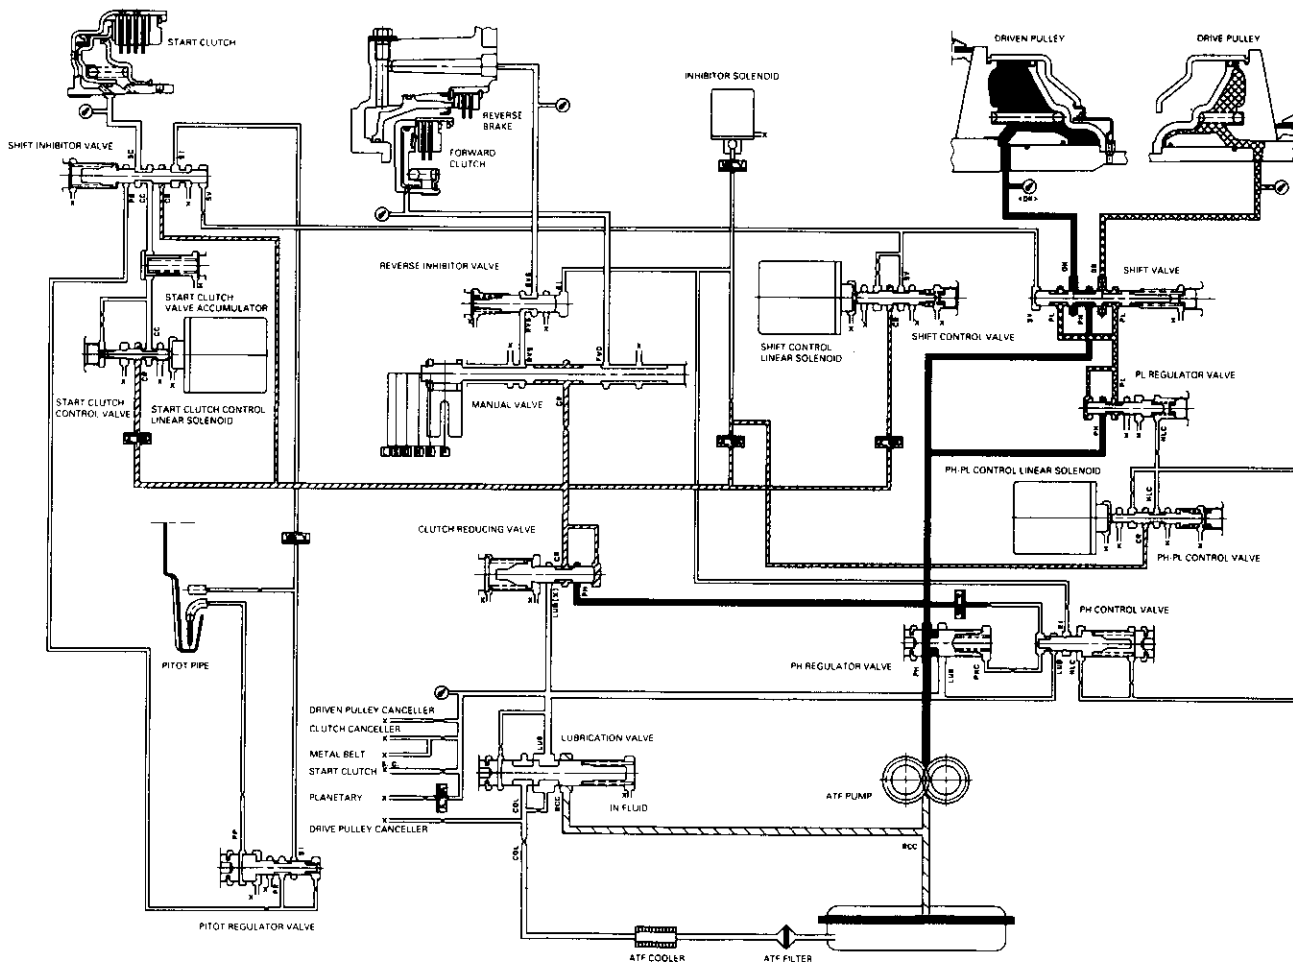




D position, when the electronic control system is faulty.

When the electronic control system (linear solenoids and sensors) is faulty, the transmission uses the pitot pipe pressure (PP) to allow the vehicle to drive.

When all linear solenoids and sensors are off because of a faulty electronic control system, clutch reducing pressure (CR) flows to the start clutch control valve, the manual valve, the PH-PL control valve, and the shift control valve. Clutch reducing pressure (CR) becomes shift valve pressure (SV) at the shift control valve, and shift valve pressure (SV) is applied to the left end of the shift valve and the right end of the shift inhibitor valve. The shift valve moves to the right side, and uncovers the port that leads high pressure (PH) to the drive pulley and uncovers the port that leads low pressure (PL) to the driven pulley. At this time, the pulley ratio is high. The shift inhibitor valve moves to the left side, and uncovers the port that leads shift inhibitor pressure (SI) to the pitot lubrication pipe and the pitot regulator valve. The pitot lubrication pipe discharges fluid inside of the pitot flange, and discharged fluid enters into the pitot pipe and it is applied to the left end of the pitot regulator valve. The pitot regulator valve moves to the right side, and uncovers the port that leads pitot regulator pressure (PR) to the shift inhibitor valve. Pitot regulator pressure (PR) becomes start clutch pressure (SC) at the shift inhibitor valve, and is applied to the start clutch. The start clutch is engaged. The forward clutch pressure (FWD) is applied to the forward clutch, and the forward clutch is engaged. This allows the vehicle to drive.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

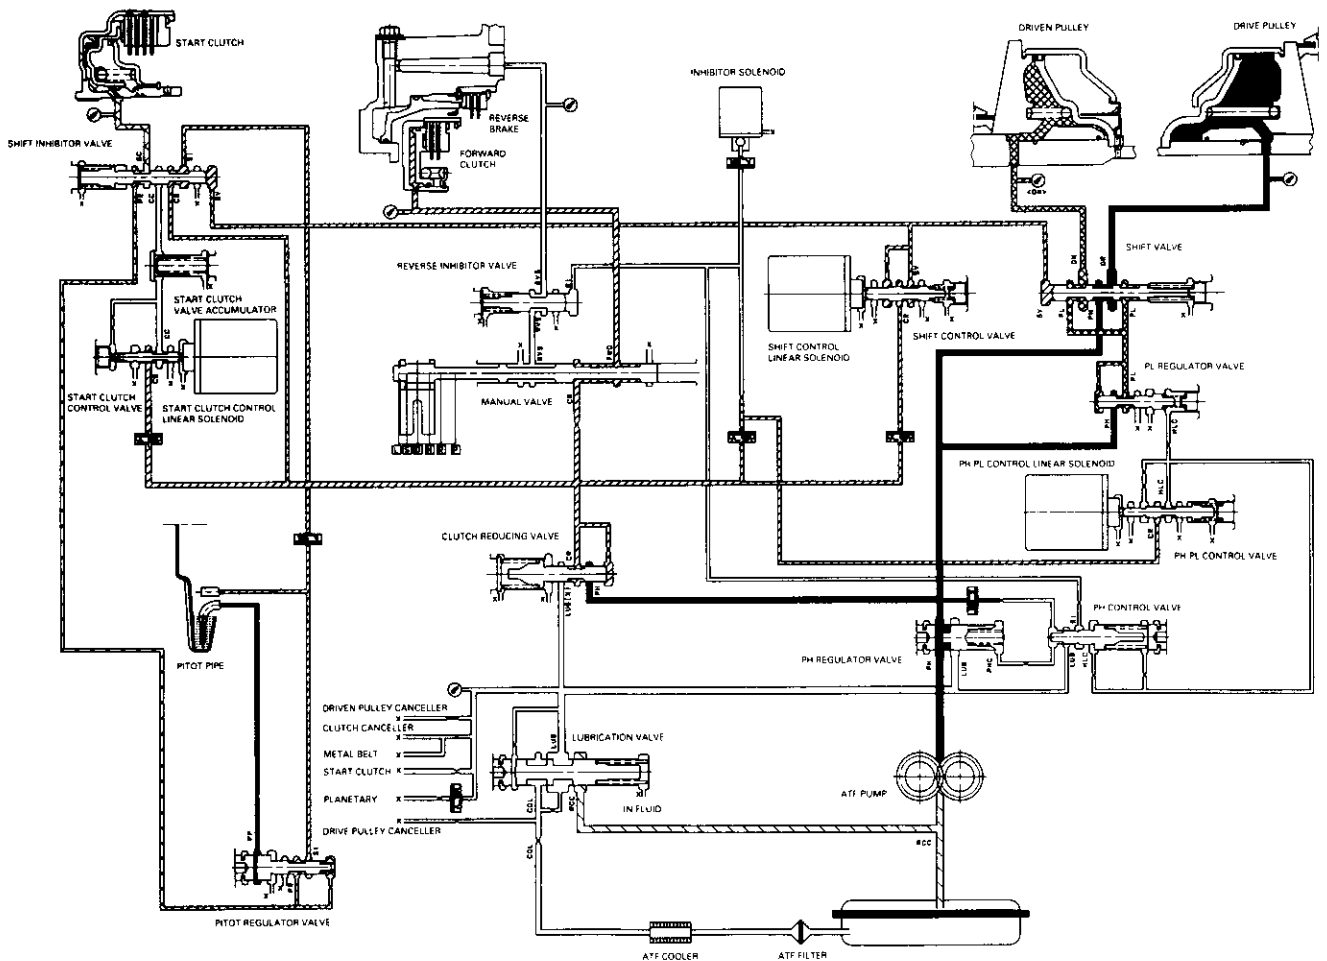

(cont'd)


Description

Hydraulic Flow (cont'd)

R position, when the electronic control system is faulty.

The flow of fluid up to the drive pulley, the driven pulley, and the start clutch is the same as in **D** position. The manual valve is shifted into the **R** position, and it uncovers the port that leads reverse brake pressure (RVS) to the reverse inhibitor valve. Reverse inhibitor pressure (RI) is applied to the right end of the reverse inhibitor valve because of a faulty inhibitor solenoid. The reverse inhibitor valve moves to the left side, and uncovers the port that leads reverse brake pressure (RVS) to the reverse brake. Clutch reducing pressure (CR) becomes reverse brake pressure (RVS) at the manual valve, and flows to the reverse brake. The reverse brake is engaged and locks the ring gear. This allows the vehicle to drive in reverse.

NOTE: When used, "left" or "right" indicates direction on the hydraulic circuit.

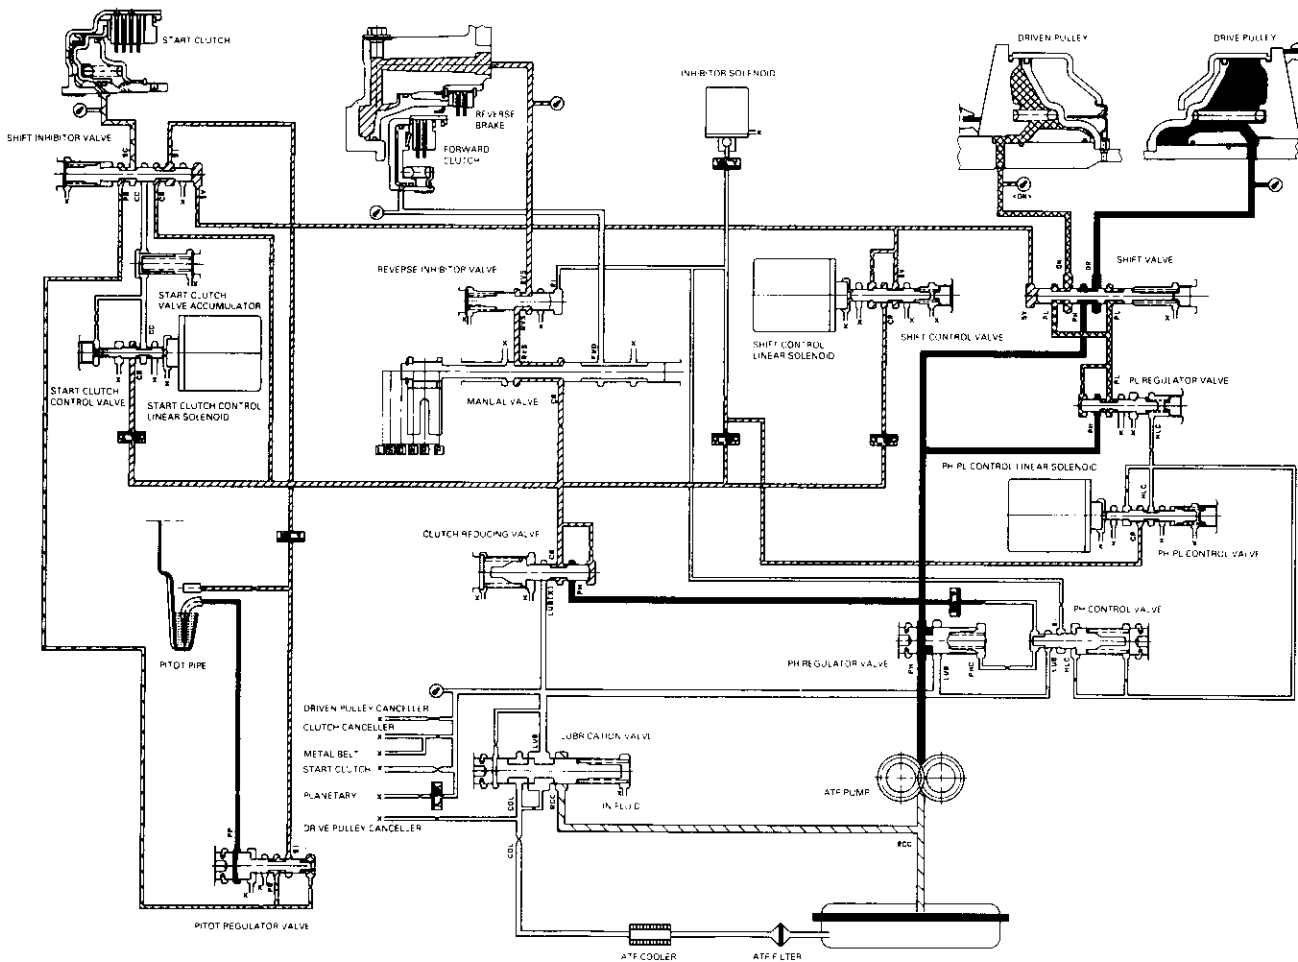






Parking Brake Mechanism

The parking brake mechanism locks the transmission by engaging the parking brake pawl with the parking gear which is integral with the secondary drive gear. The secondary drive gear engages with the secondary driven gear which engages with the final driven gear.


Shifting to **P** position causes the parking cone (installed at the end of the parking brake rod) to press the parking brake pawl onto the parking gear. Even if the end of the parking brake pawl rides on the top of the parking gear teeth, slight movement of the vehicle will cause the parking brake pawl and the parking gear to mesh with each other completely because the parking brake cone receives the tension from the parking brake rod spring. The parking brake pawl receives the tension (which acts to separate the parking brake pawl from the parking gear) from the parking pawl spring.

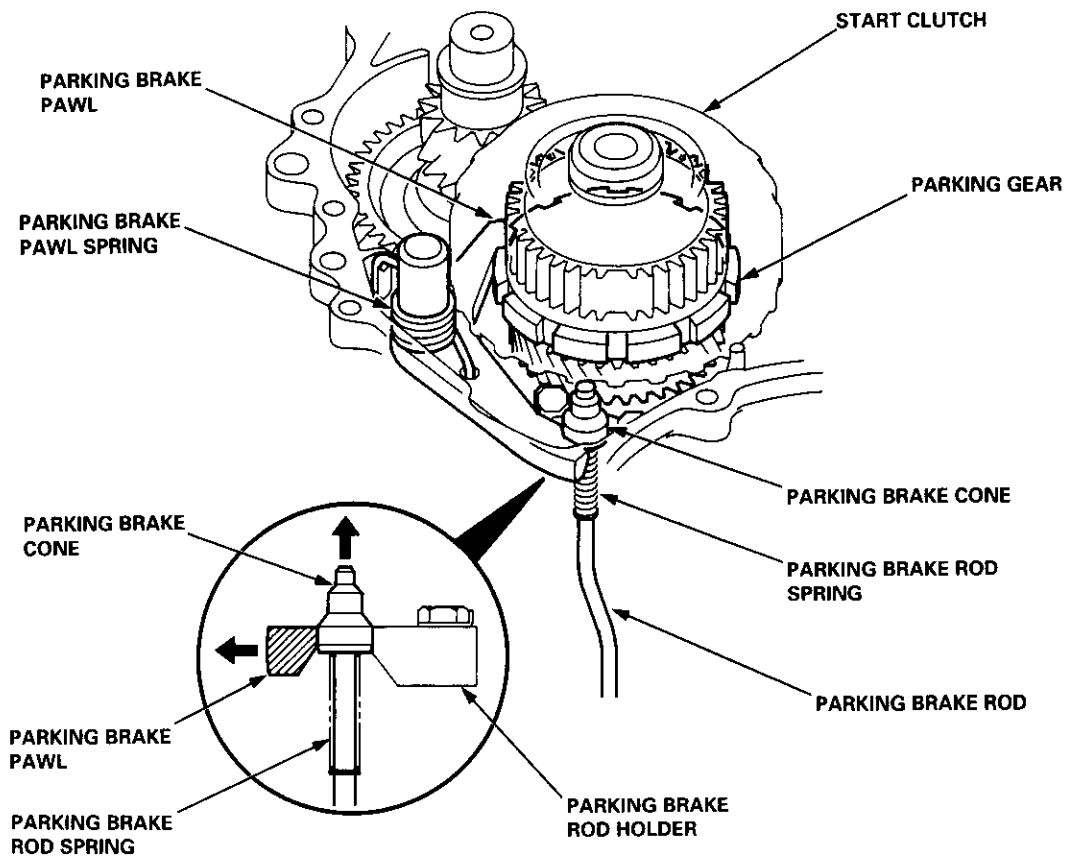


Component Locations

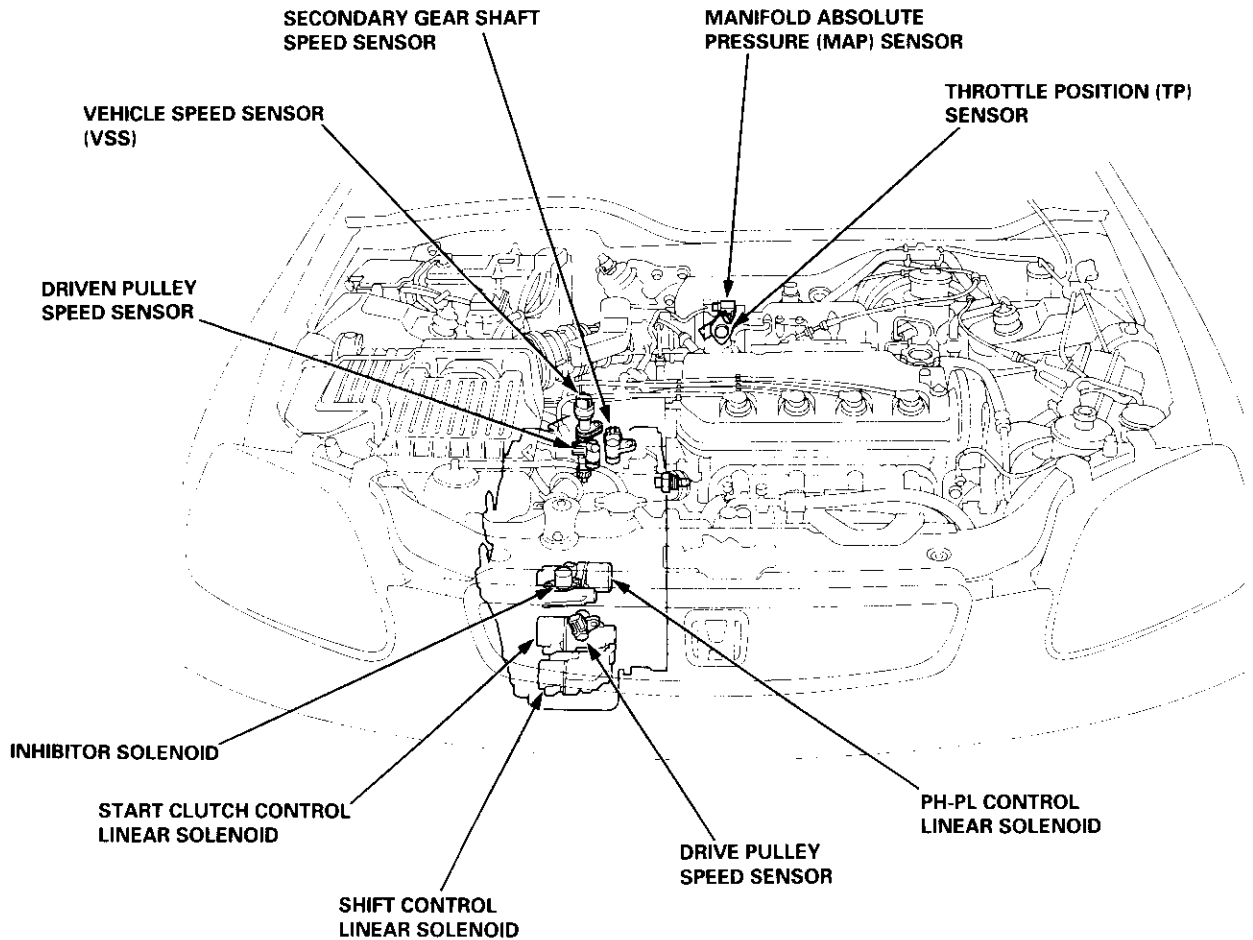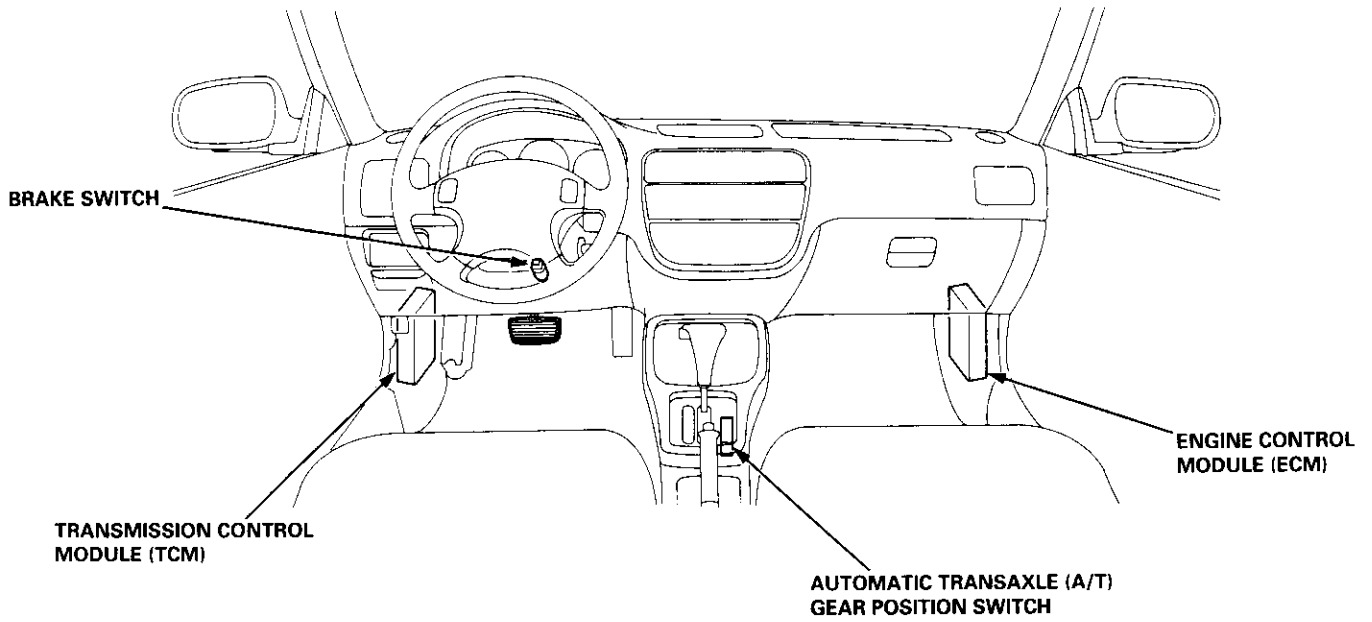

TCM Circuit Diagram

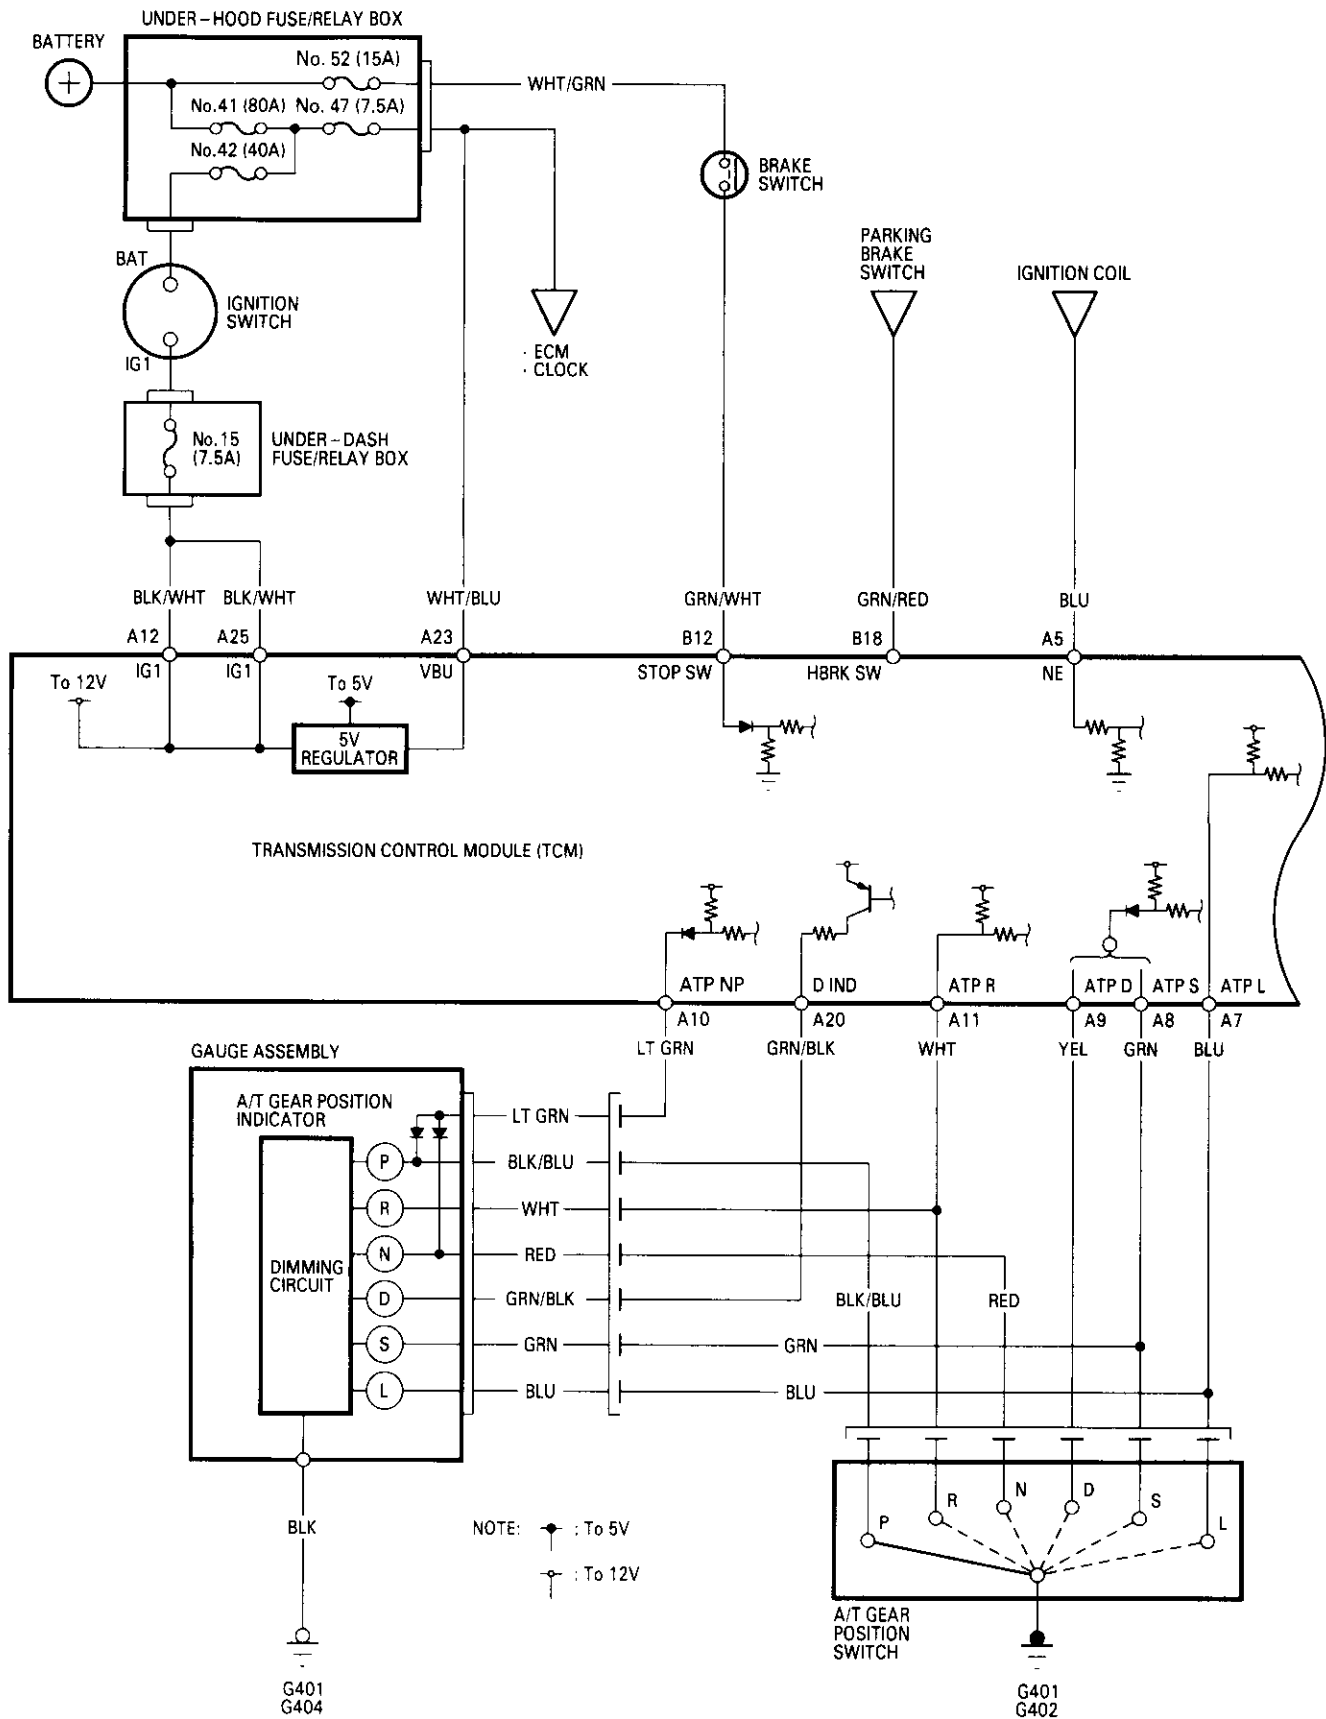

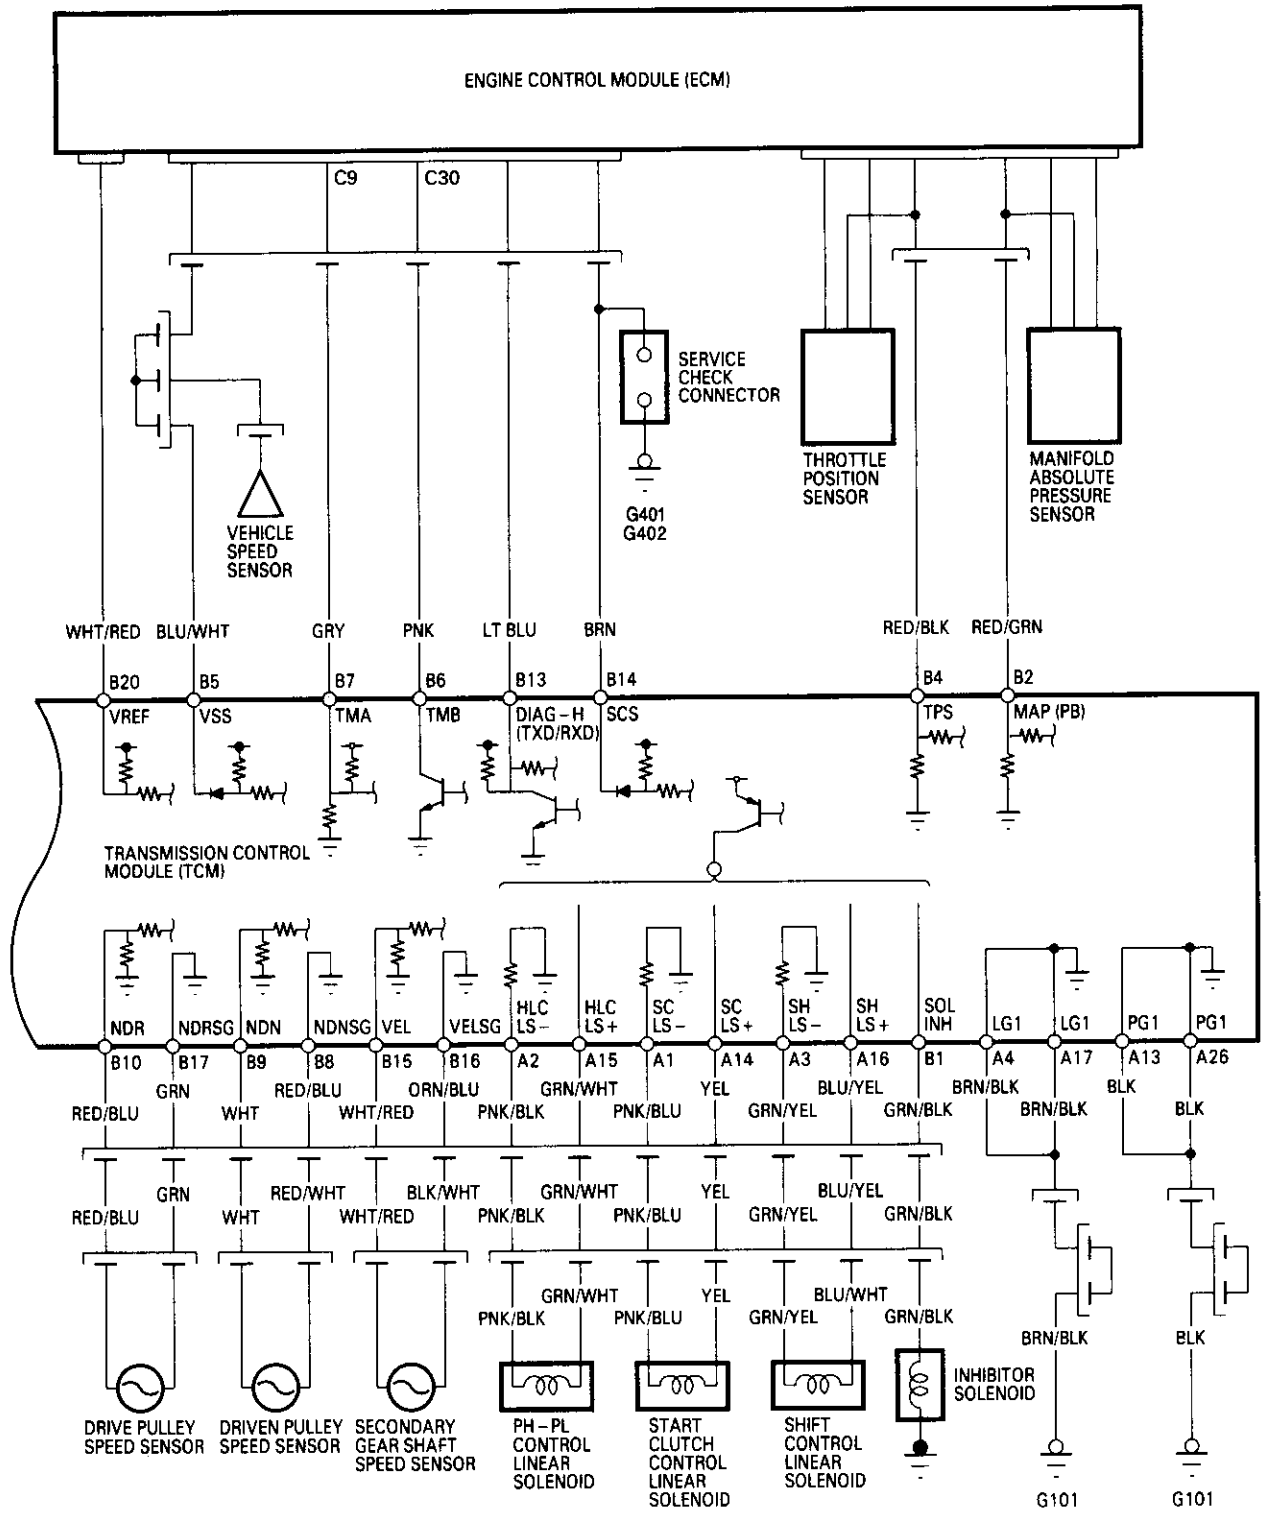


TCM Terminal Locations

1	2	3	4	5	/	7	8	9	10	11	12	13	1	2	/	4	5	6	7	8	9	10
14	15	16	17	/	20	/	/	23	/	25	26	12	13	14	15	16	17	18	/	20	/	/

TCM - A (26P) Connector

TCM - B (22P) Connector

TCM Terminal Voltage/Measuring Conditions

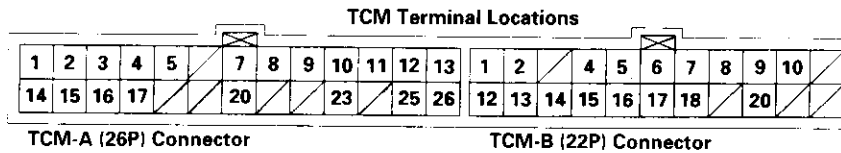

TCM CONNECTOR A (26P)

Terminal Number	Signal	Description	Measuring Conditions/Terminal Voltage
A1	SC LS-	Start clutch control linear solenoid power supply negative electrode	Engine idling, P position: Approx. 0.4 V
A2	HLC LS-	PH-PL control linear solenoid power supply negative electrode	Engine idling, P position: Approx. 0.7 V
A3	SH LS-	Shift control linear solenoid power supply negative electrode	Engine idling, P position: Approx. 0.8 V
A4	LG1	Ground	
A5	NE	Engine speed signal input	With engine running: Pulsing signal
A6	—	Not used	
A7	ATP L	A/T gear position switch L position signal input	In L position: 0 V In other than L position: Approx. 10 V
A8	ATP S	A/T gear position switch S position signal input	In S position: 0 V In other than S position: Approx. 10 V
A9	ATP D	A/T gear position switch D position signal input	In D position: 0 V In other than D position: Approx. 10 V
A10	ATP NP	A/T gear position switch N or P position signals input	In N or P position: 0 V In other than N or P position: Approx. 10 V
A11	ATP R	A/T gear position switch R position signal input	In R position: 0 V In other than R position: Approx. 10 V
A12	IG1	Power supply system	With ignition switch ON (II): Battery voltage With ignition switch OFF: 0 V
A13	PG1	Ground	
A14	SC LS+	Start clutch control linear solenoid power supply positive electrode	Engine idling, P position: Approx. 2.5 V
A15	HLC LS+	PH-PL control linear solenoid power supply positive electrode	Engine idling, P position: Approx. 5.0 V
A16	SH LS+	Shift control linear solenoid power supply positive electrode	Engine idling, P position: Approx. 6.0 V
A17	LG1	Ground	
A18	—	Not used	
A19	—	Not used	
A20	D IND	D indicator light control	When D indicator light comes on: Approx. 10 V When D indicator light OFF: 0 V
A21	—	Not used	
A22	—	Not used	
A23	VBU	Back-up power system	Always battery voltage
A24	—	Not used	
A25	IG1	Power supply system	With ignition switch ON (II): Battery voltage With ignition switch OFF: 0 V
A26	PG1	Ground	




TCM CONNECTOR B (22P)

Terminal Number	Signal	Description	Measuring Conditions/Terminal Voltage
B1	SOL INH	Inhibitor solenoid control	With inhibitor solenoid ON: Battery voltage With inhibitor solenoid OFF: 0 V
B2	MAP (PB)	Manifold Absolute Pressure (MAP) sensor signal input	With ignition switch ON (II): Approx. 2.5 V With engine idling: Approx. 1.0 V (depending on engine speed)
B3	—	Not used	
B4	TPS	Throttle Position (TP) sensor signal input	With ignition switch ON (II) and throttle fully open: 4.14 – 4.82 V With ignition switch ON (II) and throttle fully closed: 0.44 – 0.56 V
B5	VSS	Vehicle Speed Sensor (VSS) signal input	With ignition switch ON (II) and rotating front wheels: 0 – 5 V cycle
B6	TMB	Data communication with ECM: Transmission control data output	With ignition switch ON (II): Pulsing signal
B7	TMA	Data communication with ECM: PGM-FI control data input	With ignition switch ON (II): Pulsing signal
B8	NDN SG	Driven pulley speed sensor ground	
B9	NDN	Driven pulley speed sensor signal input	In other than N and P position: Pulsing signal
B10	NDR	Drive pulley speed sensor signal input	In other than N and P position: Pulsing signal
B11	—	Not used	
B12	STOP SW	Brake switch signal input	With brake pedal depressed: Battery voltage With brake pedal released: 0 V
B13	DIAG-H (TXD/RXD)	Data communication: Diagnostic trouble code output	With ignition switch ON (II): Approx. 5.0 V
B14	SCS	Service check signal	With ignition switch ON (II) and service check connector open: Approx. 5 V With ignition switch ON (II) and service check connector connected with special tool: 0 V
B15	VEL	Secondary gear shaft speed sensor signal input	Depending on vehicle speed: Pulsing signal When vehicle is stopped: 0 V
B16	VEL SG	Secondary gear shaft speed sensor ground	
B17	NDR SG	Drive pulley speed sensor ground	
B18	HBRK SW	Parking brake switch signal input	With parking brake lever pulled: 0 V With parking brake lever released: Battery voltage
B19	—	Not used	
B20	VREF	+5 V reference	With ignition switch ON (II): Approx. 5 V
B21	—	Not used	
B22	—	Not used	


Troubleshooting Procedures

I. How To Begin Troubleshooting


When the  indicator light has been reported on, use the appropriate procedure below to diagnose and repair the problem.

A. When the  indicator light has come on:


1. Connect the Honda PGM Tester or an OBD II Scan Tool to the 16P Data Link Connector (DLC) located near the left kick panel.
2. Turn the ignition switch ON (II).
3. Check the DTC and note it. Also check and note the freeze frame data. Refer to the Diagnostic Trouble Code Chart and begin troubleshooting.

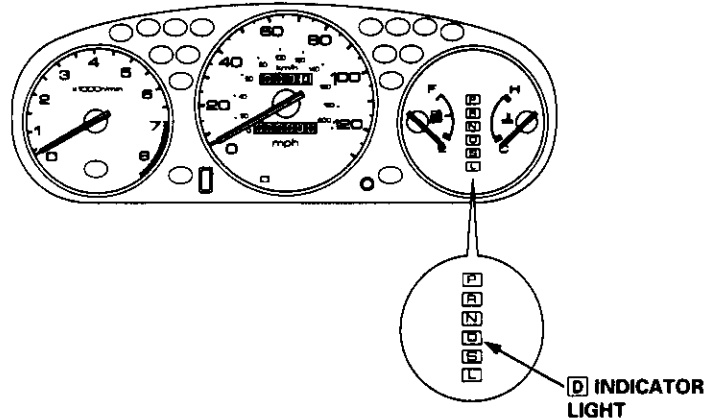

NOTE: See the OBD II Scan Tool or Honda PGM Tester user's manuals for specific operating instructions.


Some PGM-FI problems will also make the  indicator light come on. After repairing the PGM-FI system, disconnect the BACK UP fuse (7.5 A) in the under-hood fuse/relay box for more than 10 seconds to reset the TCM memory, then recheck.

NOTE: Disconnecting the BACK UP fuse also cancels the radio preset stations and the clock setting. Make note of the radio presets before removing the fuse so you can reset them.

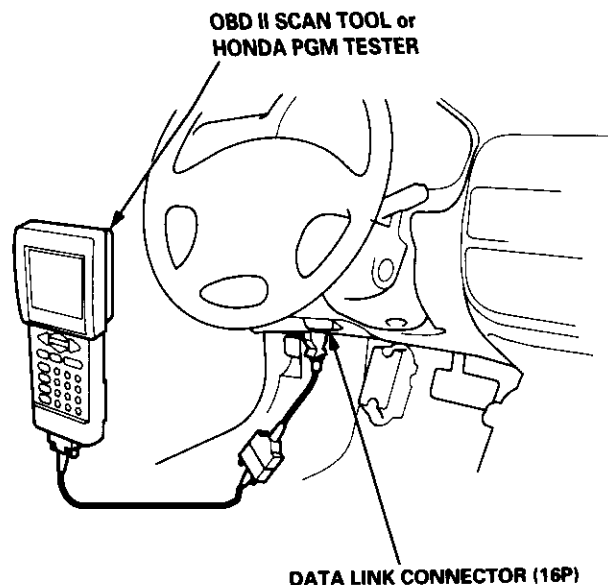




B. DTCs will be indicated by the blinking of the **D** indicator light with the SCS service connect or connected. Connect the SCS service connector to Service Check Connector as shown. (The Service Check Connector (2P) is located under the dash on the passenger's side of the vehicle.) Turn the ignition switch ON (II).

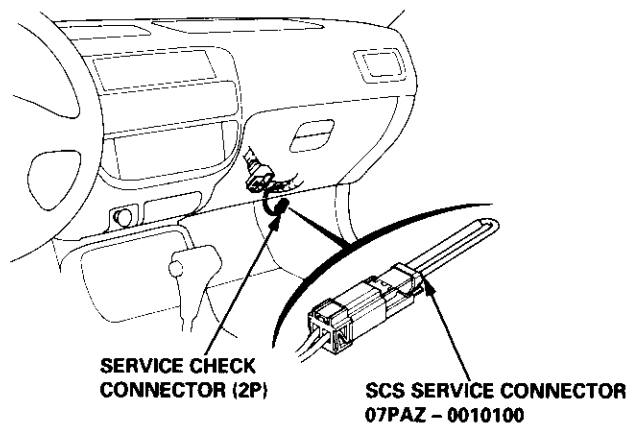

Codes 1 through 9 are indicated by individual short blinks. Codes 10 and above are indicated by a series of long and short blinks. One long blink equals 10 short blinks. Add the long and short blinks together to determine the code. After determining the code, refer to the electrical system Symptom-to-Component Chart on pages 14-198 and 14-199.

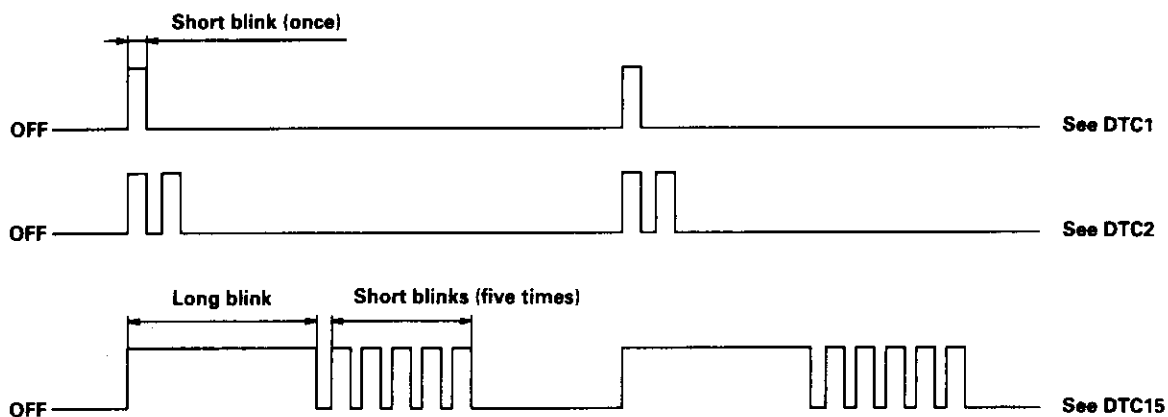


Some PGM-FI problems will also make the **D** indicator light come on. After repairing the PGM-FI system, disconnect the BACK UP fuse (7.5 A) in the under-hood fuse/relay box for more than 10 seconds to reset the TCM memory, then recheck.

(cont'd)

Troubleshooting Procedures


(cont'd)

- C. If the inspection for a particular code requires voltage or resistance checks at the TCM connectors, remove the driver's side kick panel. Unbolt the TCM. Turn the ignition switch OFF, and connect the backprobe sets and a digital multimeter as described below. Check the system according to the procedure described for the appropriate code(s) listed on the following pages.

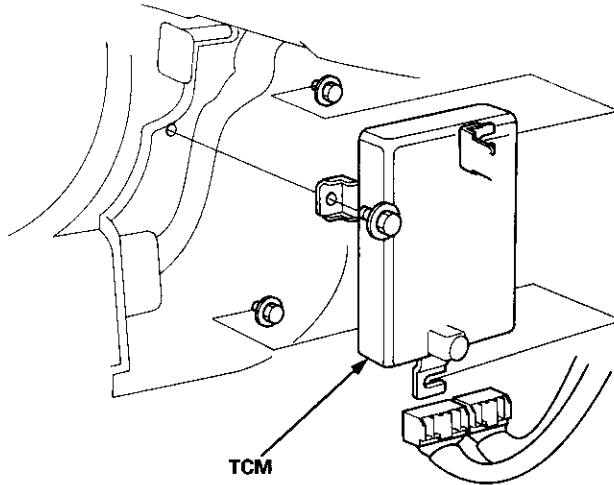

How to use the Backprobe Set

Connect the backprobe adapters to the stacking patch cords, and connect the cords to a multimeter. Using the wire insulation as a guide for the contoured tip of the backprobe adapter, gently slide the tip into the connector from the wire side until comes in contact with the terminal end of the wire.

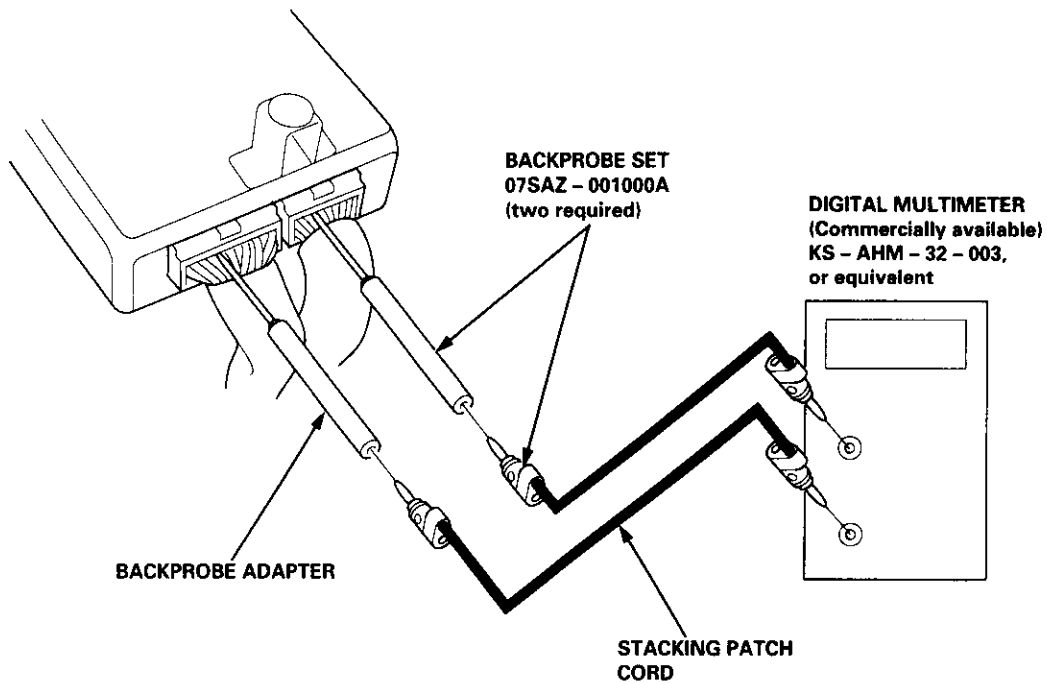




II. TCM Reset Procedure


1. Turn the ignition switch off.
2. Remove the BACK UP fuse (7.5 A) from the under-hood fuse/relay box for 10 seconds to reset the TCM.

NOTE:

- Disconnecting the BACK UP fuse also cancels the radio preset stations and the clock setting. Make note of the radio presets before removing the fuse so you can reset them.

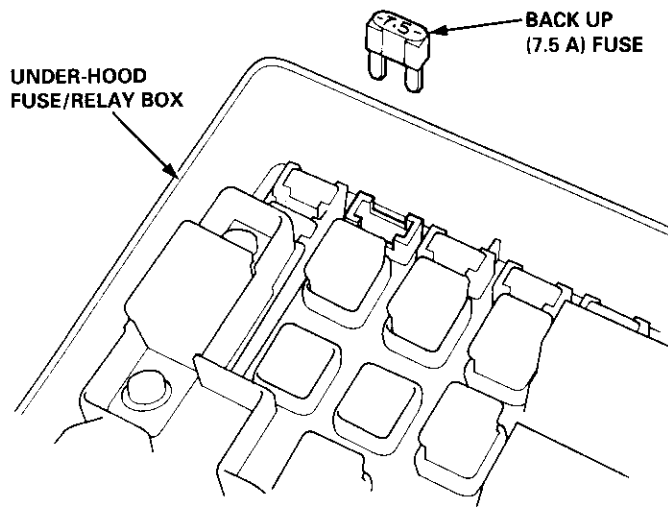

- The TCM can also be cleared by using the OBD II Scan Tool or Honda PGM Tester.

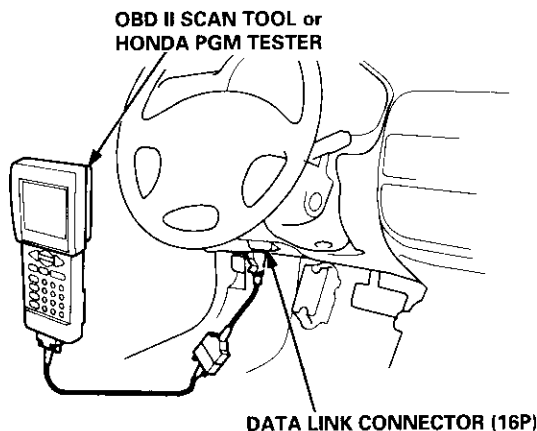




III. Final Procedure


NOTE: This procedure must be done after any troubleshooting.

1. Turn the ignition switch off.
2. Reset the TCM.
3. Disconnect the OBD II Scan Tool or Honda PGM Tester from the Data Link Connector (16P), or remove the special tool from the Service Check Connector.
4. Turn the ignition switch ON (II), and set the radio presets and clock setting.


Symptom-to-Component Chart


Electrical System


Diagnostic Trouble Code (DTC)*	 Indicator Light	Symptom	Possible Cause	Refer to Page
P1790 (3)	Blinks	<ul style="list-style-type: none"> • Engine rpm does not increase. • Transmission does not kick-down. • Transmission does not change to higher ratio. 	<ul style="list-style-type: none"> • Disconnected throttle position (TP) sensor connector • Short or open in TP sensor wire • Faulty TP sensor 	14-200
P1791 (4)	Blinks	<ul style="list-style-type: none"> • No specific symptom appears. 	<ul style="list-style-type: none"> • Disconnected vehicle speed sensor (VSS) connector • Short or open in VSS wire • Faulty VSS 	14-201
P1705 (5)	Blinks	<ul style="list-style-type: none"> • Transmission shifts same as  position in any positions. 	<ul style="list-style-type: none"> • Short in A/T gear position switch wire • Faulty A/T gear position switch 	14-202
P1706 (6)	OFF	<ul style="list-style-type: none"> • Transmission shifts same as  position in any positions. 	<ul style="list-style-type: none"> • Disconnected A/T gear position switch connector • Open in A/T gear position switch wire • Faulty A/T gear position switch 	14-204
P0725 (11)	Blinks	<ul style="list-style-type: none"> • Poor acceleration, flares on starting off. 	<ul style="list-style-type: none"> • Disconnected ignition coil connector • Short or open in ignition coil wire • Faulty ignition coil 	14-206
P1793 (12)	Blinks	<ul style="list-style-type: none"> • No specific symptom appears. 	<ul style="list-style-type: none"> • Disconnected manifold absolute pressure (MAP) sensor connector • Short or open in MAP sensor wire • Faulty MAP sensor 	14-207
P1870 (30)	Blinks	<ul style="list-style-type: none"> • Poor acceleration, flares on starting off. 	<ul style="list-style-type: none"> • Disconnected solenoid harness connector • Short or open in shift control linear solenoid wire • Faulty shift control linear solenoid 	14-208
P1873 (31)	Blinks	<ul style="list-style-type: none"> • Poor acceleration, flares on starting off. 	<ul style="list-style-type: none"> • Disconnected solenoid harness connector • Short or open in PH-PL control linear solenoid wire • Faulty PH-PL control linear solenoid 	14-209
P1879 (32)	Blinks	<ul style="list-style-type: none"> • Poor acceleration, flares on starting off. 	<ul style="list-style-type: none"> • Disconnected solenoid harness connector • Short or open in start clutch control linear solenoid wire • Faulty start clutch control linear solenoid 	14-210
P1882 (33)	Blinks	<ul style="list-style-type: none"> • No specific symptom appears. 	<ul style="list-style-type: none"> • Disconnected solenoid harness connector • Short or open in inhibitor solenoid wire • Faulty inhibitor solenoid 	14-211



(DTC)*: The DTCs in parentheses are the number of the  indicator light blinks when the service check connector is connected with the special tool (SCS Service Connector).




Diagnostic Trouble Code (DTC)*	 Indicator Light	Symptom	Possible Cause	Refer to Page
P1885 (34)	Blinks	• Poor acceleration, flares on starting off.	• Disconnected drive pulley speed sensor connector • Short or open in drive pulley speed sensor wire • Faulty drive pulley speed sensor	14-212
P1886 (35)	Blinks	• Poor acceleration, flares on starting off.	• Disconnected driven pulley speed sensor connector • Short or open in driven pulley speed sensor wire • Faulty driven pulley speed sensor	14-213
P1888 (36)	Blinks	• Poor acceleration, flares on starting off.	• Disconnected secondary gear shaft speed sensor connector • Short or open in secondary gear shaft speed sensor wire • Faulty secondary gear shaft speed sensor	14-214
P1655 (37)	Blinks	• Poor creeping power with brake pedal released.	• Short or open in TMA wire between B7 terminal and ECM • Short or open in TMB wire between B6 terminal and ECM • Faulty ECM • Faulty TCM	14-215
P1890 (42)	Blinks	• Poor acceleration, flares on starting off.	• Faulty shift control system	14-217
P1891 (43)	Blinks	• Poor acceleration, flares on starting off.	• Faulty start clutch control system	14-218

(DTC)*: The DTCs in parentheses are the number of the  indicator light blinks when the service check connector is connected with the special tool (SCS Service Connector).

If the self-diagnostic  indicator light does not blink, perform an inspection according to the table below.




Symptom	Inspection	Ref. page
 indicator light does not come on for two seconds after ignition switch is first turn on (II).	—	14-220
 indicator light is on constantly (not blinking) whenever the ignition switch is on (II).	—	14-222

NOTE:

- If a customer described the symptom for code P1706 (6), it will be necessary to recreate the symptom by test driving, then recheck the DTC.
- Sometime the  indicator light and the Malfunction Indicator lamp (MIL) may come on simultaneously. If so, repair the PGM-FI system according to the DTC, then reset the memory by removing the BACK UP fuse in the under-hood fuse/relay box for more than 10 seconds. Drive the vehicle for several minutes at a speed over 30 mph (50 km/h), then recheck the DTC.

Electrical Troubleshooting

Troubleshooting Flowchart — Throttle Position (TP) Sensor

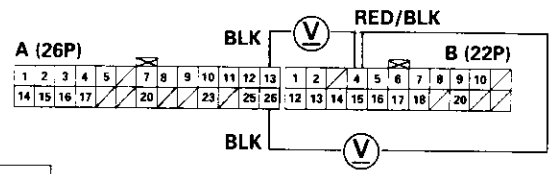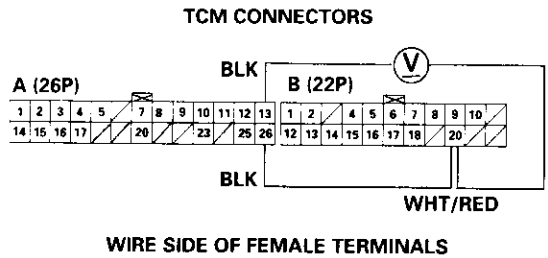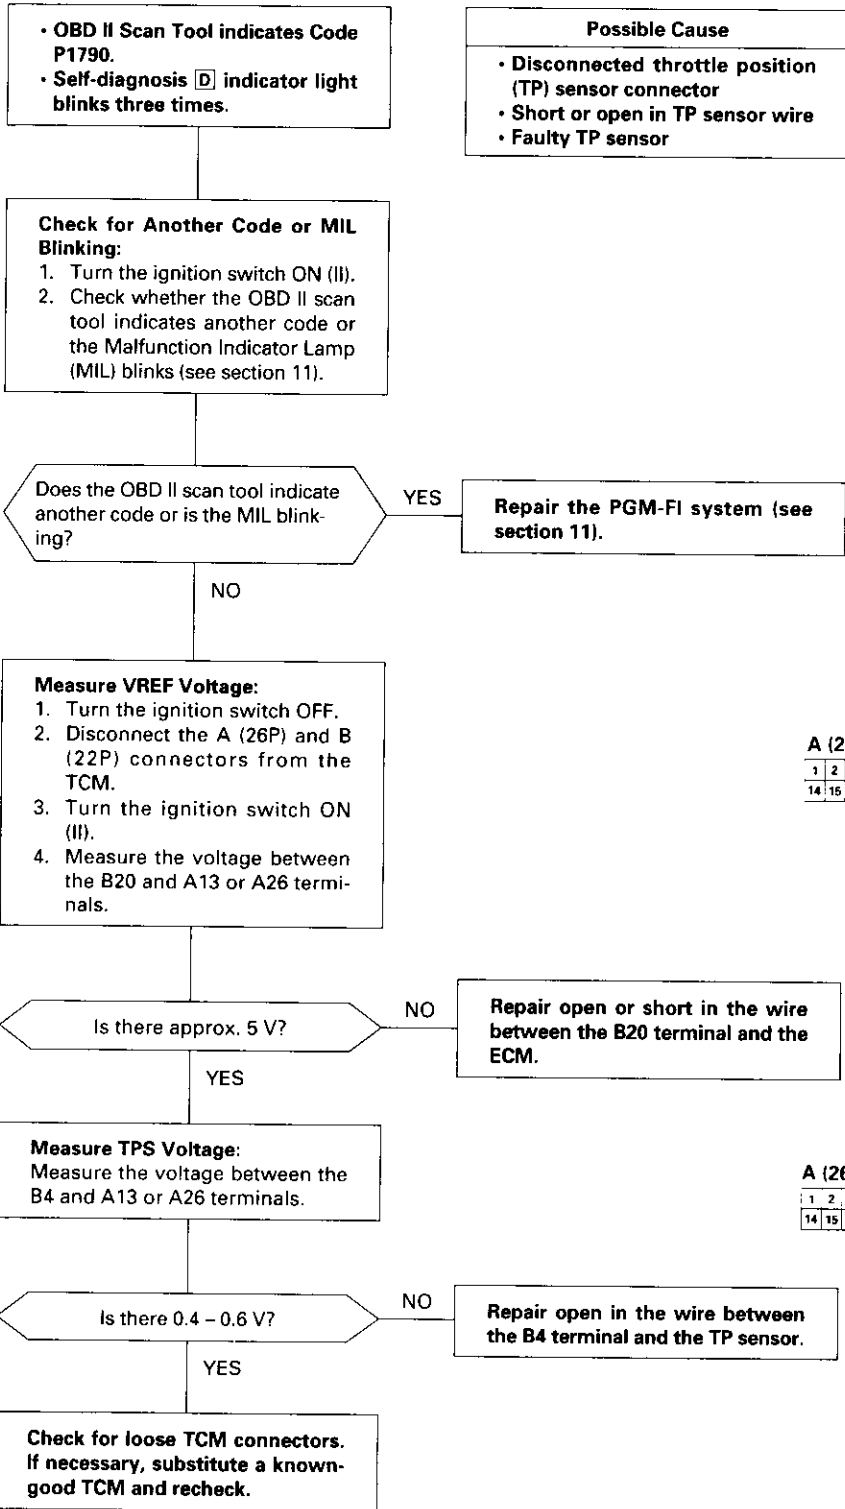



Troubleshooting Flowchart — Vehicle Speed Sensor (VSS)

• OBD II Scan Tool indicates Code P1791.
 • Self-diagnosis **D** indicator light blinks four times.

Possible Cause

- Disconnected vehicle speed sensor (VSS) connector
- Short or open in VSS wire
- Faulty VSS

Check that the speedometer operates correctly.

Does the speedometer operate?

NO

Refer to section 23 for vehicle speed sensor (VSS) test.

YES


Check the VSS Voltage:

1. Raise the vehicle.
2. Shift the transmission to **N** position.
3. Disconnect the A (26P) and B (22P) connectors from the TCM.
4. Turn the ignition switch ON (II).
5. Rotate the front wheel and check for the voltage between the B5 and A13 or A26 terminals. Block the other wheel so it does not turn.

WARNING

- Make sure lifts, jacks, and safety stands are placed properly (see section 1).
- Set the parking brake securely, and block the rear wheels.
- Jack up the front of the vehicle, and support it with safety stands.

TCM CONNECTORS

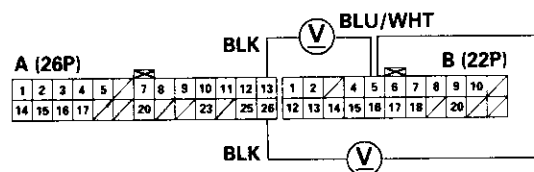

WIRE SIDE OF FEMALE TERMINALS

Does 0 V and approx. 5 V or more appear alternately?

NO

Check for open in the wire between the B5 terminal and the vehicle speed sensor (VSS). If wire is OK, check the VSS (see section 23).

YES

Check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.

Electrical Troubleshooting

Troubleshooting Flowchart — A/T Gear Position Switch (Short)

- OBD II Scan Tool indicates Code P1705.
- Self-diagnosis **D** indicator light blinks five times.

Possible Cause

- Short in A/T gear position switch wire
- Faulty A/T gear position switch

NOTE: Code 5 is caused when the TCM receives two gear position inputs at the same time.

Observe the A/T gear position indicator:

1. Turn the ignition switch ON (II).
2. Observe the A/T gear position indicator, and shift to each position separately.

Do any indicators stay on when the shift lever is not in that position?

NO

The system is OK at this time. Check the wire harness for damage.

YES

Measure ATP R Voltage:

1. Shift to all positions other than **R**.
2. Measure the voltage between the A11 and A13 or A26 terminals.

Is there approx. 10 V?

NO

Check for short in the wire between the A11 terminal and the A/T gear position switch or A/T gear position indicator. If wire is OK, check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.

YES

Measure ATP NP Voltage:

1. Shift to all positions other than **N** or **P**.
2. Measure the voltage between the A10 and A13 or A26 terminals.

Is there approx. 10 V?

NO

Check for short in the wire between the A10 terminal and the A/T gear position indicator, or a short in the wires between the A/T gear position indicator and the A/T gear position switch. If wires are OK, check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.

YES

Measure ATP D Voltage:

1. Shift to all positions other than **D**.
2. Measure the voltage between the A9 and A13 or A26 terminals.


Is there approx. 10 V?

NO



Check for short in the wire between the A9 terminal and the A/T gear position switch. If wire is OK, check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.

YES

TCM CONNECTOR A (26P)

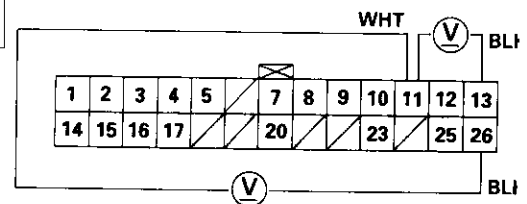

WIRE SIDE OF FEMALE TERMINALS

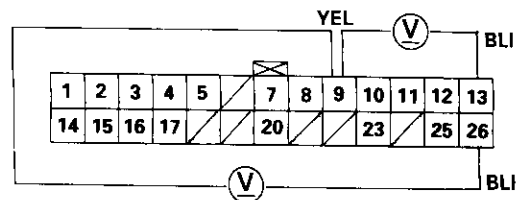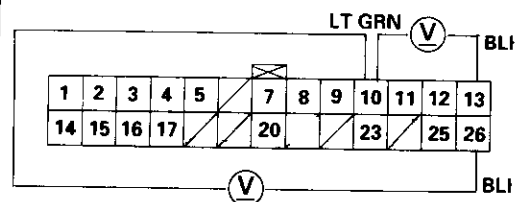

To page 14-203



From page 14-202

Measure ATP S Voltage:

- Shift to all positions other than **S**.
- Measure the voltage between the A8 and A13 or A26 terminals.

Is there approx. 10 V?

YES

Measure ATP L Voltage:

- Shift to all positions other than **L**.
- Measure the voltage between the A7 and A13 or A26 terminals.

Is there approx. 10 V?

YES

Check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.


NO

Check for short in the wire between the A8 terminal and the A/T gear position switch or the A/T gear position indicator. If wire is OK, check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.


NO

Check for short in the wire between the A7 terminal and the A/T gear position switch or the A/T gear position indicator. If wire is OK, check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.

TCM CONNECTOR A (26P)

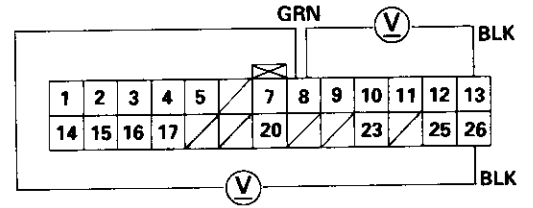

WIRE SIDE OF FEMALE TERMINALS

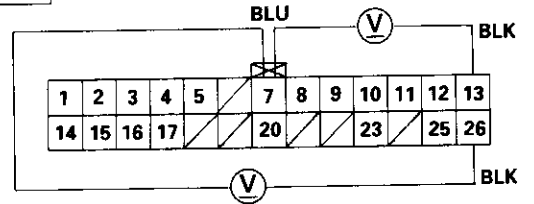

Electrical Troubleshooting

Troubleshooting Flowchart — A/T Gear Position Switch (Open)


• OBD II Scan Tool indicates Code P1706.
 • Self-diagnosis **D** indicator light blinks six times.

Possible Cause

- Disconnected A/T gear position switch connector
- Open in A/T gear position switch wire
- Faulty A/T gear position switch

Measure ATP R Voltage:

1. Turn the ignition switch ON (II).
2. Shift to **R** position.
3. Measure the voltage between the A11 and A13 or A26 terminals.

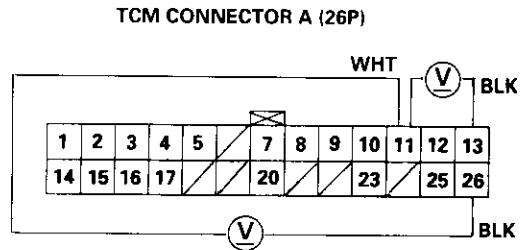


Is there voltage? YES → Repair open in the wire between the A11 terminal and the A/T gear position switch.

WIRE SIDE OF FEMALE TERMINALS

Measure ATP NP Voltage:


1. Shift to **N** or **P** position.
2. Measure the voltage between the A10 and A13 or A26 terminals.

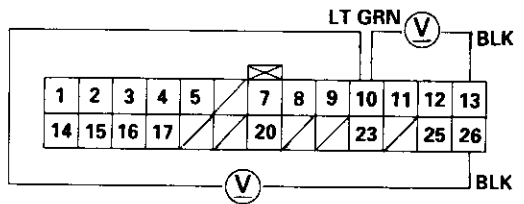

Is there voltage? YES → Repair open in the wire between the A10 terminal and the A/T gear position switch.

Measure ATP D Voltage:

1. Shift to **D** position.
2. Measure the voltage between the A9 and A13 or A26 terminals.

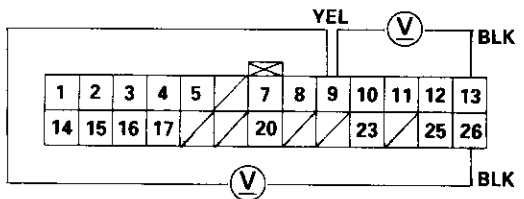

Is there voltage? YES → Repair open in the wire between the A9 terminal and the A/T gear position switch.

To page 14-205



From page 14-204

Measure ATP S Voltage:

1. Shift to **S** position.
2. Measure the voltage between the A8 and A13 or A26 terminals.

Is there voltage?

YES

Repair open in the wire between the A8 terminal and the A/T gear position switch.

NO

Measure ATP L Voltage:

1. Shift to **L** position.
2. Measure the voltage between the A7 and A13 or A26 terminals.

Is there voltage?


YES

Repair open in the wire between the A7 terminal and the A/T gear position switch.


NO

Check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.

TCM CONNECTOR A (26P)

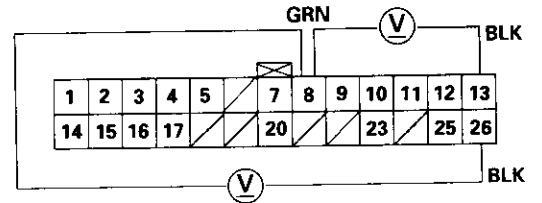

WIRE SIDE OF FEMALE TERMINALS

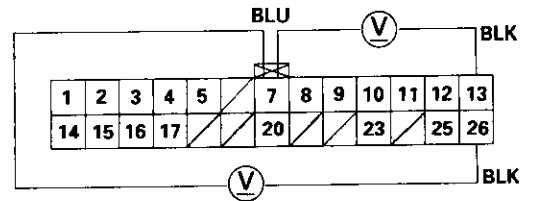

Electrical Troubleshooting

Troubleshooting Flowchart — Ignition Coil


• OBD II Scan Tool indicates Code P0725.
 • Self-diagnosis **D** indicator light indicates Code 11.

Possible Cause

- Disconnected ignition coil connector
- Short or open ignition coil wire
- Faulty ignition coil

Measure NE Voltage:

1. Disconnect the A (26P) connector from the TCM.
2. Start the engine.
3. Measure the voltage between the A5 and A13 or A26 terminals.

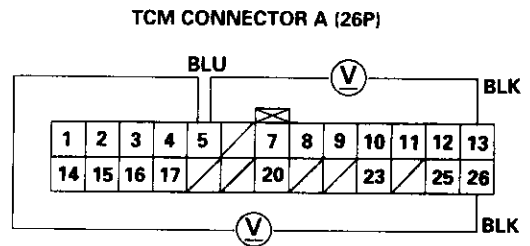

WIRE SIDE OF FEMALE TERMINALS

Is there battery voltage?

NO

Repair open or short in the wire between the A5 terminal and the ignition coil. If wire is OK, check the ignition coil test (see section 23).

YES

Check for loose TCM connector. If necessary, substitute a known-good TCM and recheck.



Troubleshooting Flowchart — Manifold Absolute Pressure (MAP) Sensor

• OBD II Scan Tool indicates Code P1793.
 • Self-diagnosis indicator light indicates Code 12.

Possible Cause

- Disconnected manifold absolute pressure (MAP) sensor connector
- Short or open in MAP sensor wire
- Faulty MAP sensor

Check for Another Code or MIL Blinking:

1. Turn the ignition switch ON (II).
2. Check whether the OBD II scan tool indicates another code or the Malfunction Indicator Lamp (MIL) blinks (see section 11).


Does the OBD II scan tool indicate another code or is the MIL blinking?

YES
 Repair PGM-FI system (see section 11).

NO

Measure VREF Voltage:

1. Turn the ignition switch OFF.
2. Disconnect the A (26P) and B (22P) connectors from the TCM.
3. Turn the ignition switch ON (II).
4. Measure the voltage between the B20 and A13 or A26 terminals.

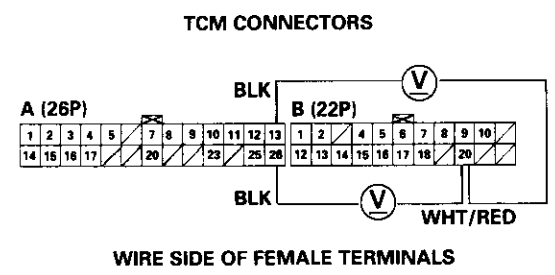


Is there approx. 5 V?

NO
 Repair open or short in the wire between the B20 terminal and the ECM.

YES

Measure MAP (PB) Voltage:
 Measure the voltage between the B2 and A13 or A26 terminals.

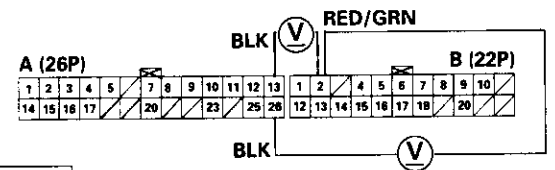

Is there approx. 3 V?

NO
 Repair open or short in the wire between the B2 terminal and the MAP sensor.

YES

Check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.

Electrical Troubleshooting


Troubleshooting Flowchart — Shift Control Linear Solenoid

• OBD II Scan Tool indicates Code P1870.
 • Self-diagnosis \square indicator light indicates Code 30.

Possible Cause

- Disconnected solenoid harness connector
- Short or open in shift control linear solenoid wire
- Faulty shift control linear solenoid

SOLENOID HARNESS
8P CONNECTOR

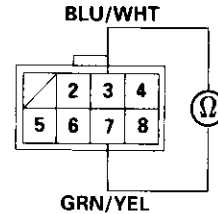

TERMINAL SIDE OF MALE TERMINALS

Measure Shift Control Linear Solenoid Resistance at the Solenoid Harness Connector:

1. Disconnect the 8P connector from the solenoid harness connector.
2. Measure the resistance between the No. 3 and the No. 7 terminals of the solenoid harness connector.

Is the resistance 3.8 – 6.8 Ω ? NO


Replace the lower valve body assembly.

YES

Check Shift Control Linear Solenoid for a Short Circuit:

1. Disconnect the A (26P) connector from the TCM.
2. Check for continuity between body ground and the A3 terminal and the A16 terminal individually.

TCM CONNECTOR A (26P)

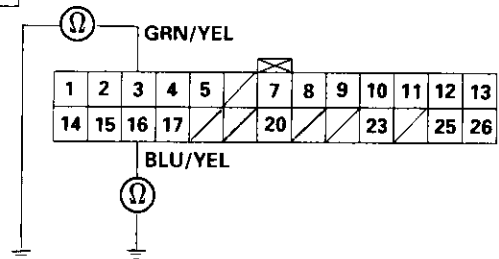

WIRE SIDE OF FEMALE TERMINALS

Is there continuity? YES

Repair short in the wires between the A3 and A16 terminals and the body ground.

NO

Measure Shift Control Linear Solenoid Resistance:


1. Connect the 8P connector to the solenoid harness connector.
2. Measure the resistance between the A3 and A16 terminals.

Is the resistance 3.8 – 6.8 Ω ? NO

Repair loose terminal or open in the wires between the A3 and A16 terminals and the solenoid harness connector.

YES

Check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.

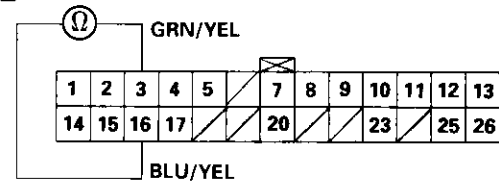



Troubleshooting Flowchart — PH-PL Control Linear Solenoid

• OBD II Scan Tool indicates Code P1873.
 • Self-diagnosis \square indicator light indicates Code 31.


Possible Cause

- Disconnected solenoid harness connector
- Short or open in PH-PL control linear solenoid wire
- Faulty PH-PL control linear solenoid

Measure PH-PL Control Linear Solenoid Resistance at the Solenoid Harness Connector:

1. Disconnect the 8P connector from the solenoid harness connector.
2. Measure the resistance between the No. 2 and the No. 6 terminals of the solenoid harness connector.

SOLENOID HARNESS 8P CONNECTOR

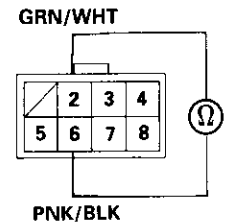

TERMINAL SIDE OF MALE TERMINALS


Is the resistance 3.8 – 6.8 Ω ? NO **Replace the lower valve body assembly.**

YES

Check PH-PL Control Linear Solenoid for a Short Circuit:

1. Disconnect the A (26P) connector from the TCM.
2. Check for continuity between body ground and the A2 terminal and the A15 terminal individually.

TCM CONNECTOR A (26P)

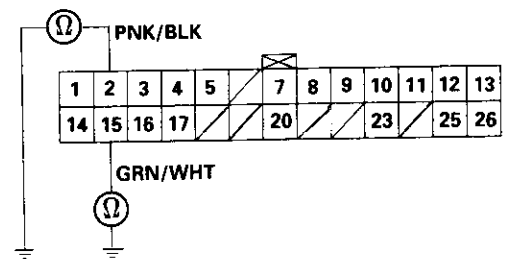


WIRE SIDE OF FEMALE TERMINALS

Is there continuity? YES **Repair short in the wires between the A2 and A15 terminals and the body ground.**

NO

Measure PH-PL Control Linear Solenoid Resistance:

1. Connect the 8P connector to the solenoid harness connector.
2. Measure the resistance between the A2 and A15 terminals.

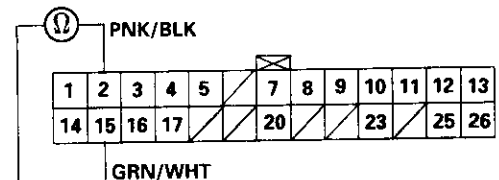

Is the resistance 3.8 – 6.8 Ω ? NO **Repair loose terminal or open in the wires between the A2 and A15 terminals and the solenoid harness connector.**

YES

Check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.

Electrical Troubleshooting

Troubleshooting Flowchart — Start Clutch Control Linear Solenoid

• OBD II Scan Tool indicates Code P1879.
• Self-diagnosis **D** indicator light indicates Code 32.


Possible Cause

- Disconnected solenoid harness connector
- Short or open in start clutch control linear solenoid wire
- Faulty start clutch control linear solenoid

Measure Start Clutch Control Linear Solenoid Resistance at the Solenoid Harness Connector:

1. Disconnect the 8P connector from the solenoid harness connector.
2. Measure the resistance between the No. 4 and the No. 8 terminals of the solenoid harness connector.

SOLENOID HARNESS
8P CONNECTOR

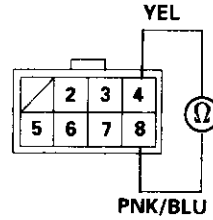

TERMINAL SIDE OF MALE TERMINALS

Is the resistance 3.8 – 6.8 Ω?


NO
Replace the lower valve body assembly.

YES

Check Start Clutch Control Linear Solenoid for a Short Circuit:

1. Disconnect the A (26P) connector from the TCM.
2. Check for continuity between body ground and the A1 terminal and the A14 terminal individually.

TCM CONNECTOR A (26P)

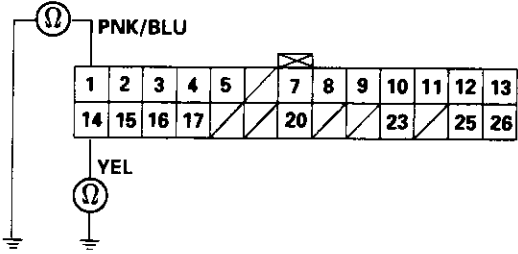

WIRE SIDE OF FEMALE TERMINALS


Is there continuity?

YES
Repair short in the wires between the A1 and A14 terminals and the body ground.

NO

Measure Start Clutch Control Linear Solenoid Resistance:

1. Connect the 8P connector to the solenoid harness connector.
2. Measure the resistance between the A1 and A14 terminals.

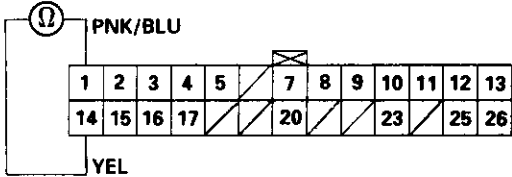

Is the resistance 3.8 – 6.8 Ω?

NO
Repair loose terminal or open in the wires between the A1 and A14 terminals and the solenoid harness connector.

YES

Check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.



Troubleshooting Flowchart — Inhibitor Solenoid

• OBD II Scan Tool indicates Code P1882.
 • Self-diagnosis \square indicator light indicates Code 33.

Possible Cause

- Disconnected solenoid harness connector
- Short or open in inhibitor solenoid wire
- Faulty inhibitor solenoid

Measure Inhibitor Solenoid Resistance at the Solenoid Harness Connector:

1. Disconnect the 8P connector from the solenoid harness connector.
2. Measure the resistance between the No. 5 terminal of the solenoid harness connector and body ground.

Is the resistance 11.7 – 21.0 Ω ? NO

Replace the lower valve body assembly.

YES

Check Inhibitor Solenoid for a Short Circuit:

1. Disconnect the B (22P) connector from the TCM.
2. Check for continuity between the B1 terminal and body ground.

Is there continuity? YES

Repair short in the wire between the B1 and the body ground.

NO

Measure Inhibitor Solenoid Resistance:

1. Connect the 8P connector to the solenoid harness connector.
2. Measure the resistance between the B1 and body ground.


Is the resistance 11.7 – 21.0 Ω ? NO

Repair loose terminal or open in the wire between the B1 and the solenoid harness connector.

YES


Check for loose TCM connectors. If necessary, substitute a known-good TCM and recheck.

SOLENOID HARNESS 8P CONNECTOR

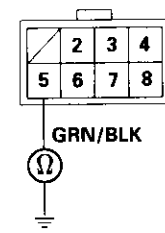


TERMINAL SIDE OF MALE TERMINALS

TCM CONNECTOR B (22P)

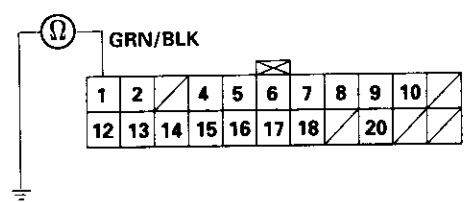


WIRE SIDE OF FEMALE TERMINALS

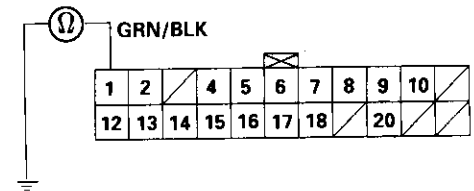


Electrical Troubleshooting

Troubleshooting Flowchart — Drive Pulley Speed Sensor

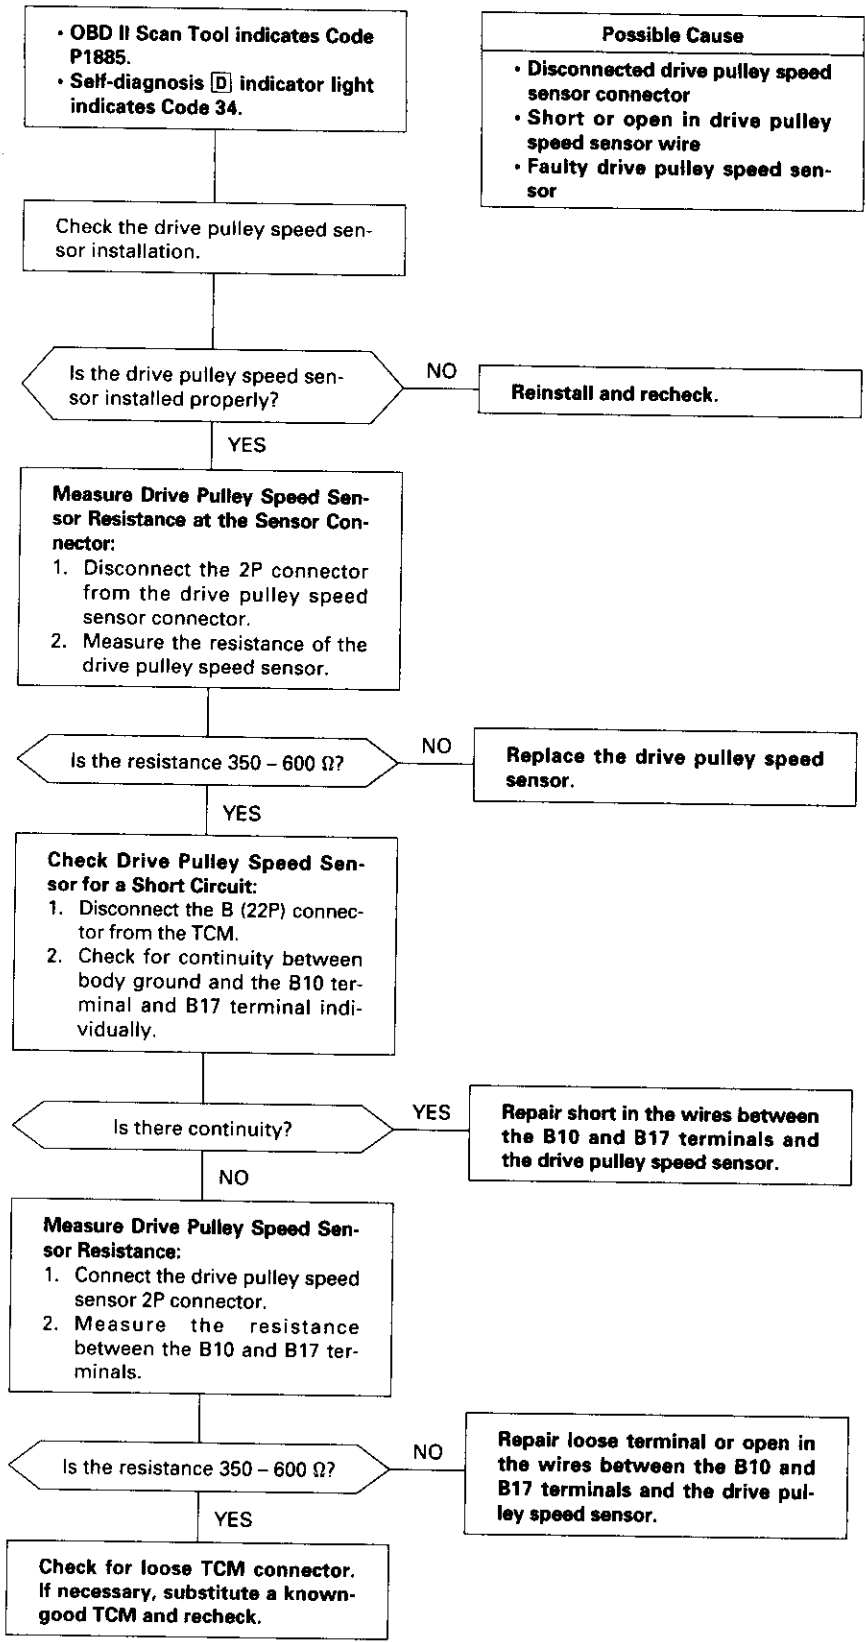


DRIVE PULLEY SPEED SENSOR 2P CONNECTOR




TERMINAL SIDE OF MALE TERMINALS

TCM CONNECTOR B (22P)

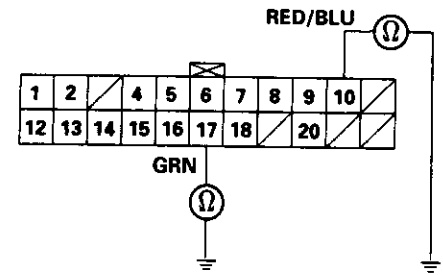


WIRE SIDE OF FEMALE TERMINALS

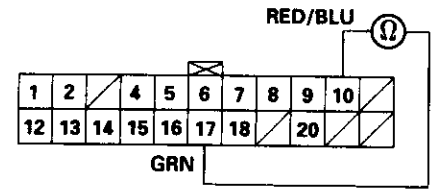




Troubleshooting Flowchart — Driven Pulley Speed Sensor

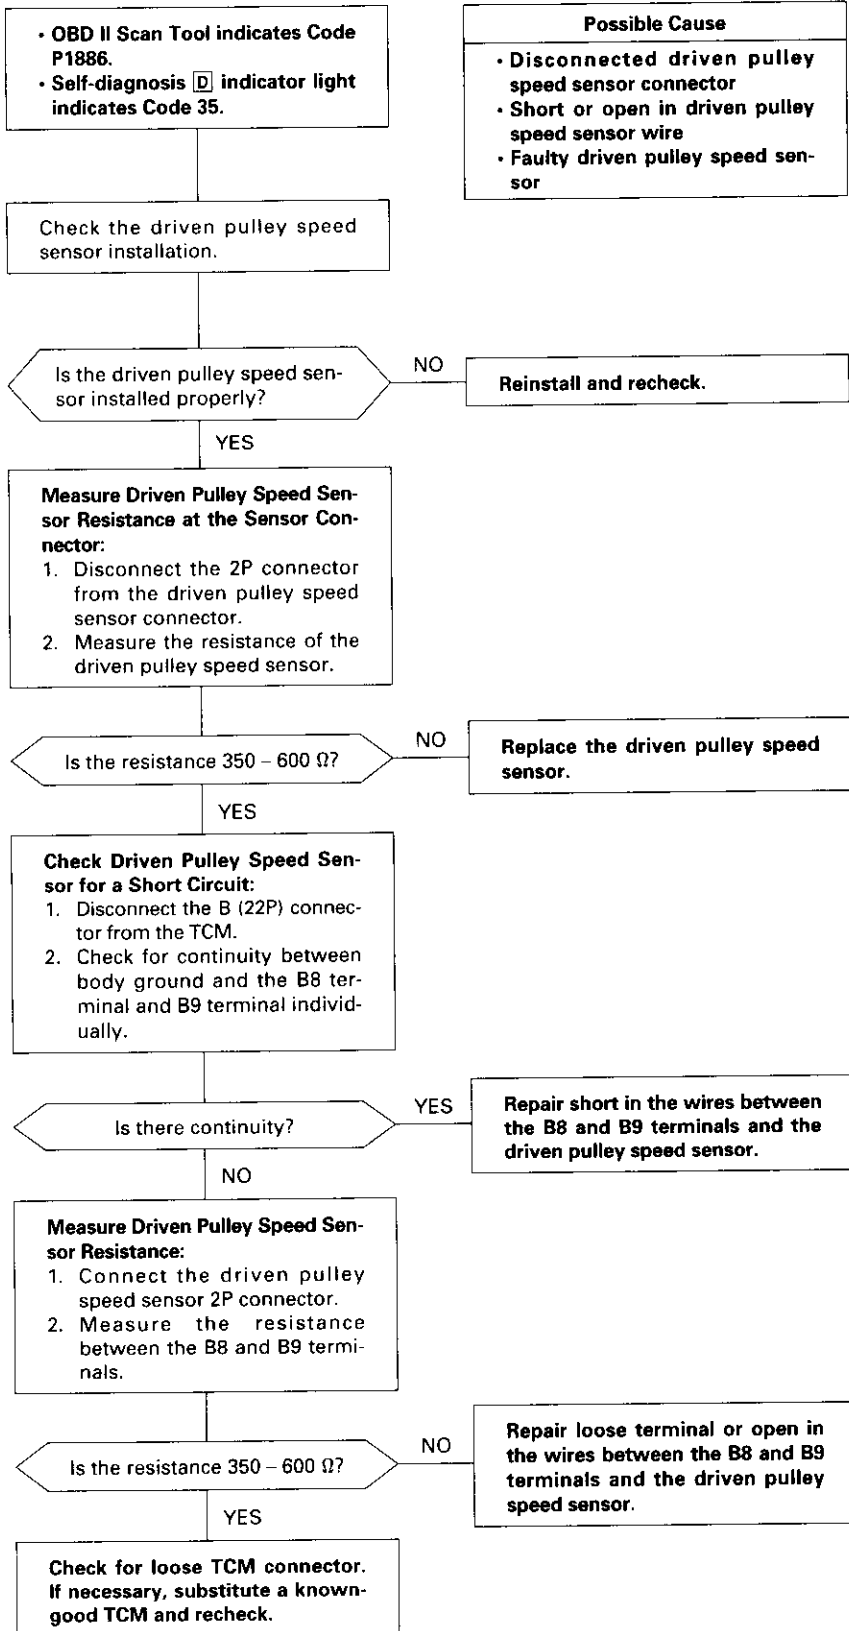


DRIVEN PULLEY SPEED SENSOR 2P CONNECTOR




TERMINAL SIDE OF MALE TERMINALS

TCM CONNECTOR B (22P)

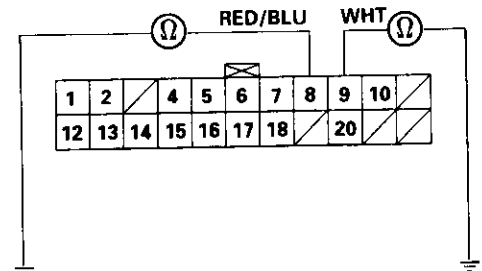


WIRE SIDE OF FEMALE TERMINALS

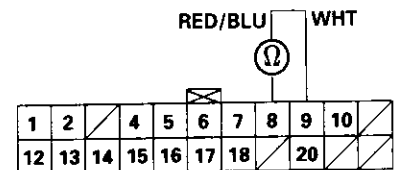


Electrical Troubleshooting

Troubleshooting Flowchart — Secondary Gear Shaft Speed Sensor

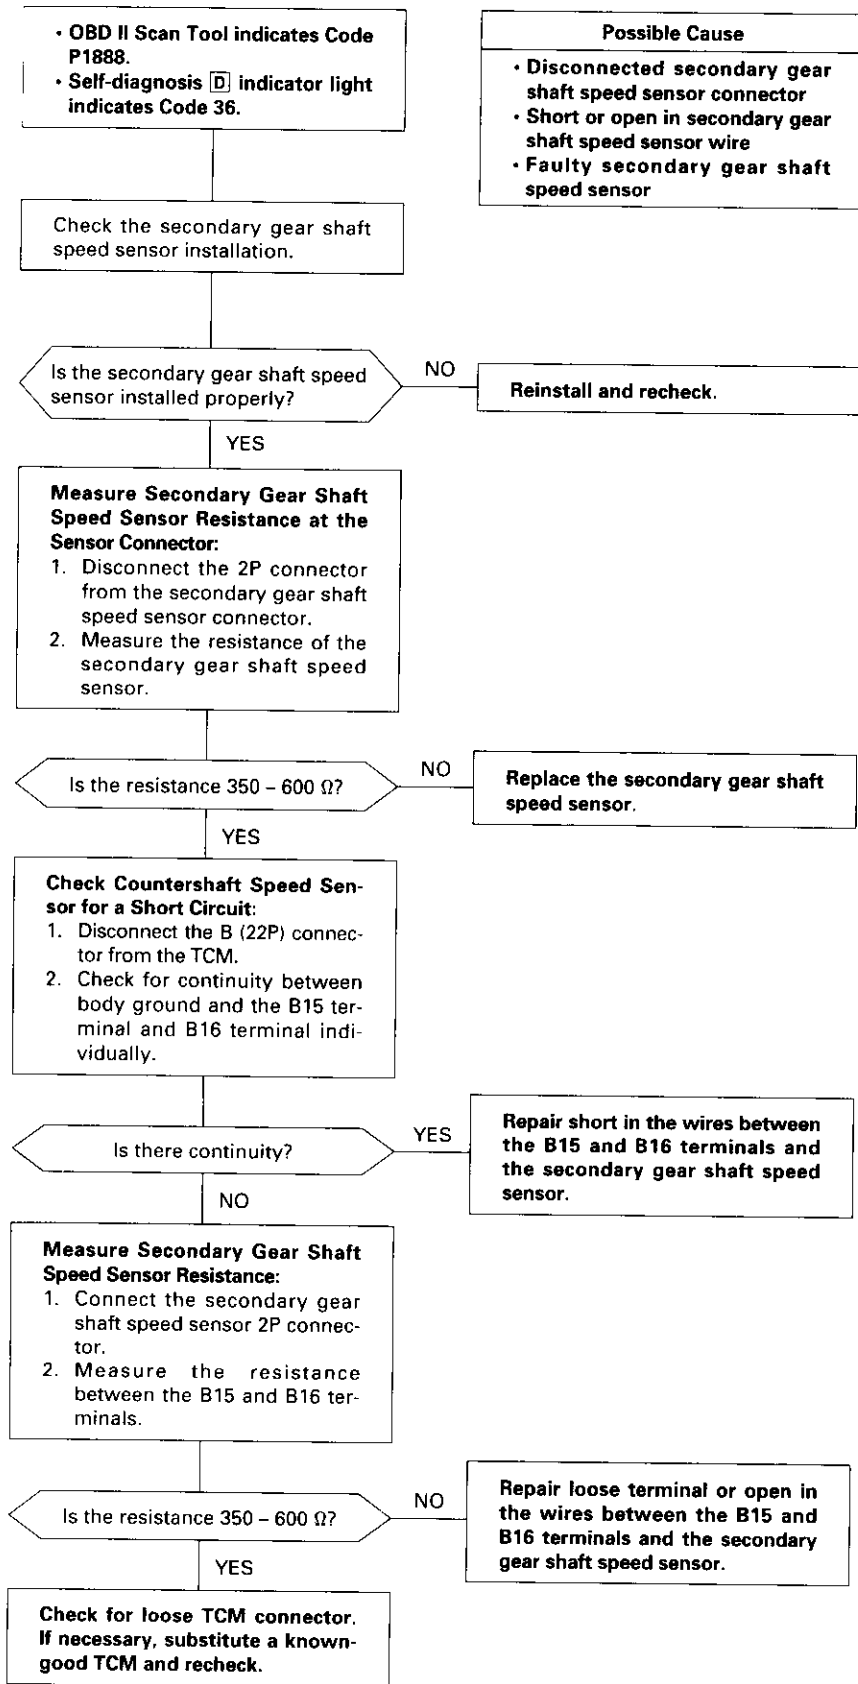


SECONDARY GEAR SHAFT SPEED SENSOR 2P CONNECTOR




TERMINAL SIDE OF MALE TERMINALS

TCM CONNECTOR B (22P)

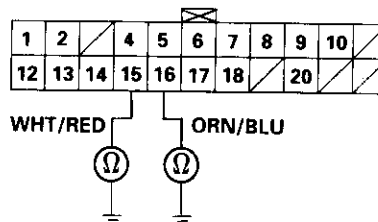

WIRE SIDE OF FEMALE TERMINALS

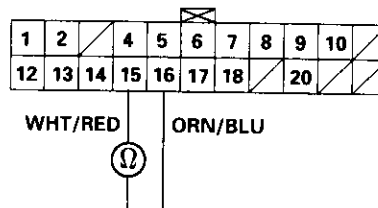



Troubleshooting Flowchart — TMA and TMB Signals


• OBD II Scan Tool indicates Code P1655.
 • Self-diagnosis **D** indicator light indicates Code 37.

Possible Cause

- Short or open in TMA wire between B7 terminal and ECM
- Short or open in TMB wire between B6 terminal and ECM
- Faulty ECM
- Faulty TCM

Check TMA Wire Continuity:


1. Turn the ignition switch OFF.
2. Disconnect the B (22P) connector from the TCM.
3. Disconnect the C (31P) connector from the ECM.
4. Check for continuity between the B7 terminal of the TCM and the C9 terminal of the ECM.

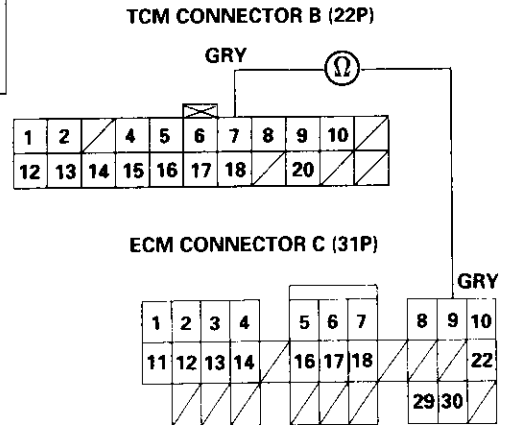


Is there continuity? **NO** → Repair open in the wire between the TCM and the ECM.

YES

Check TMA Wire for a Short Circuit:
 Check for continuity between the B7 terminal of the TCM or the C9 terminal of the ECM and body ground.

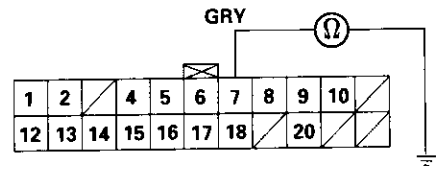


Is there continuity? **YES** → Repair short to body ground in the wire.

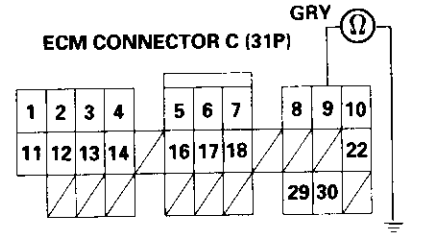

NO

Check the ECM:

1. Reconnect the C (31P) connector to the ECM, and the B (22P) connector to the TCM.
2. Turn the ignition switch ON (II).
3. Measure the voltage between the C9 terminal of the ECM and body ground.

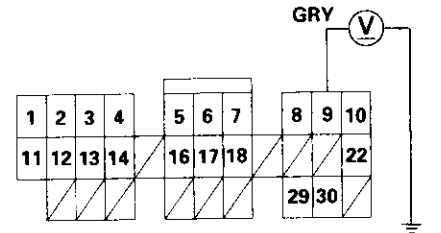

Is there approx. 10 V? **YES** → Check for loose ECM connectors. If necessary, substitute a known-good ECM and recheck.

Electrical Troubleshooting

Troubleshooting Flowchart — TMA and TMB Signals (cont'd)

from page 14-215

Check TMB Wire Continuity:
 1. Turn the ignition switch OFF.
 2. Disconnect the C (31P) connector from the ECM, and the B (22P) connector from the TCM.
 3. Check for continuity between the B6 terminal of the TCM and the C30 terminal of the ECM.

Is there continuity?

NO
 Repair open in the wire between the TCM and the ECM.

YES

Check TMB Wire for a Short Circuit:
 Check for continuity between the B6 terminal of the TCM or the C30 terminal of the ECM and body ground.

Is there continuity?

YES
 Repair short to body ground in the wire.

NO

Check the TCM:
 1. Reconnect the B (22P) connector to the TCM, and the C (31P) connector to the ECM.
 2. Turn the ignition switch ON (II).
 3. Measure the voltage between the B6 terminal of the TCM and body ground.


Is there approx. 5 V?

NO
 Replace the TCM.


YES

Check for loose TCM connectors.
 If necessary, substitute a known-good TCM and recheck.




TCM CONNECTOR B (22P)

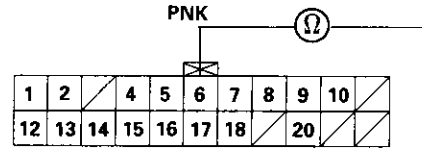

ECM CONNECTOR C (31P)

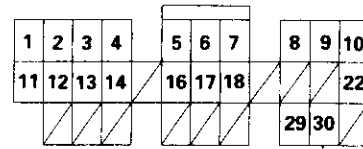


WIRE SIDE OF FEMALE TERMINALS

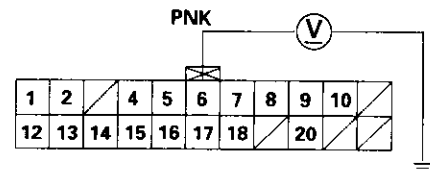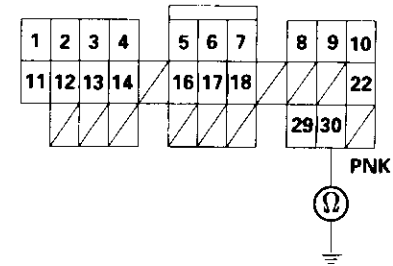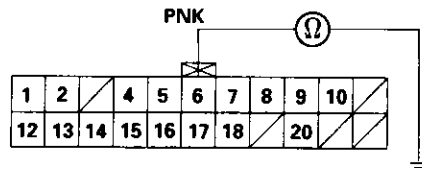




Troubleshooting Flowchart — Shift Control System

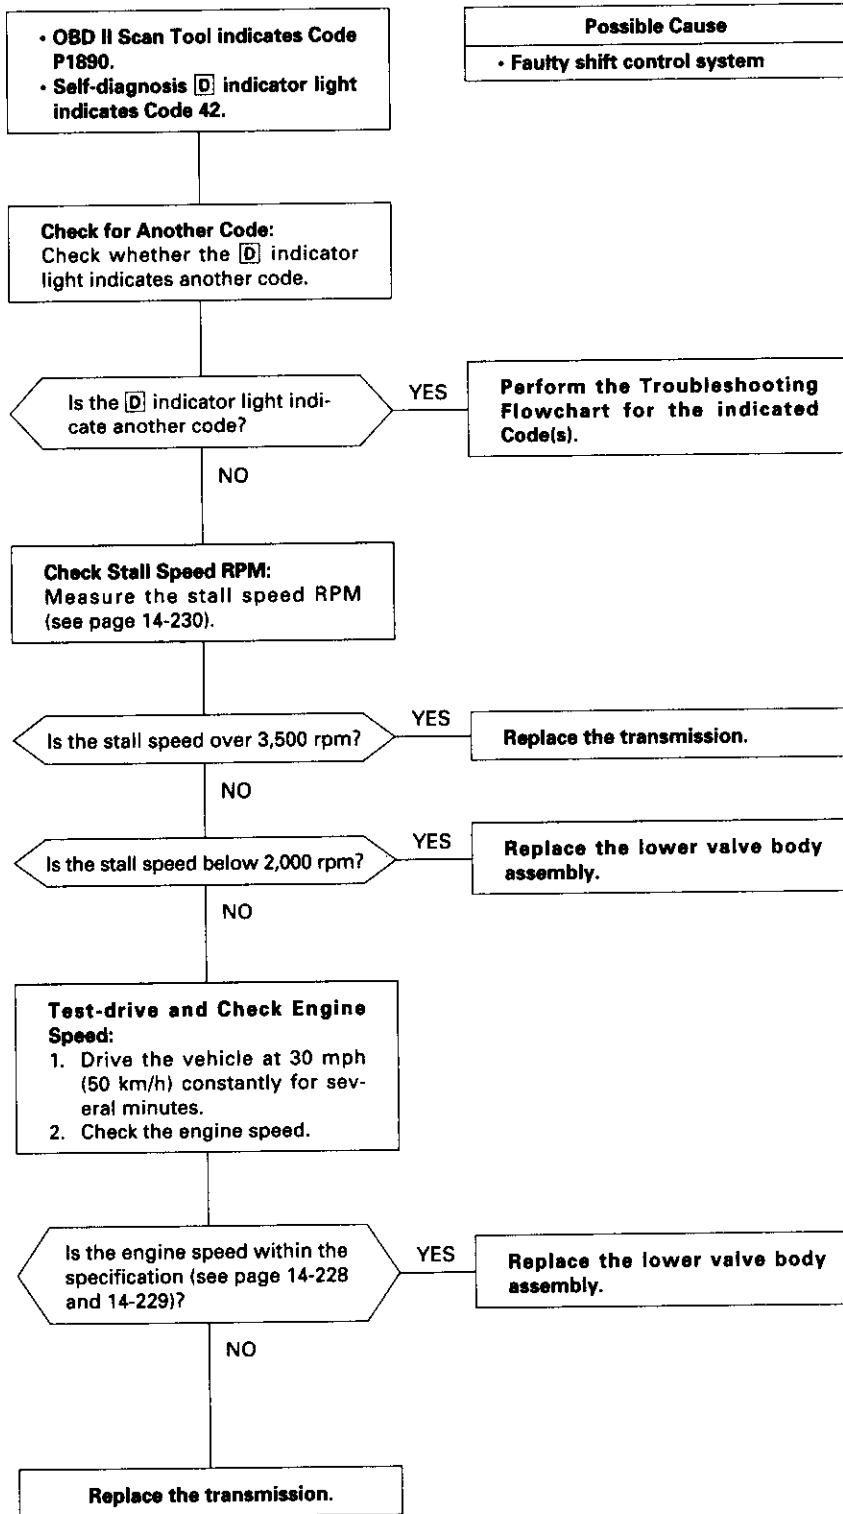


Electrical Troubleshooting

Troubleshooting Flowchart — Start Clutch Control System

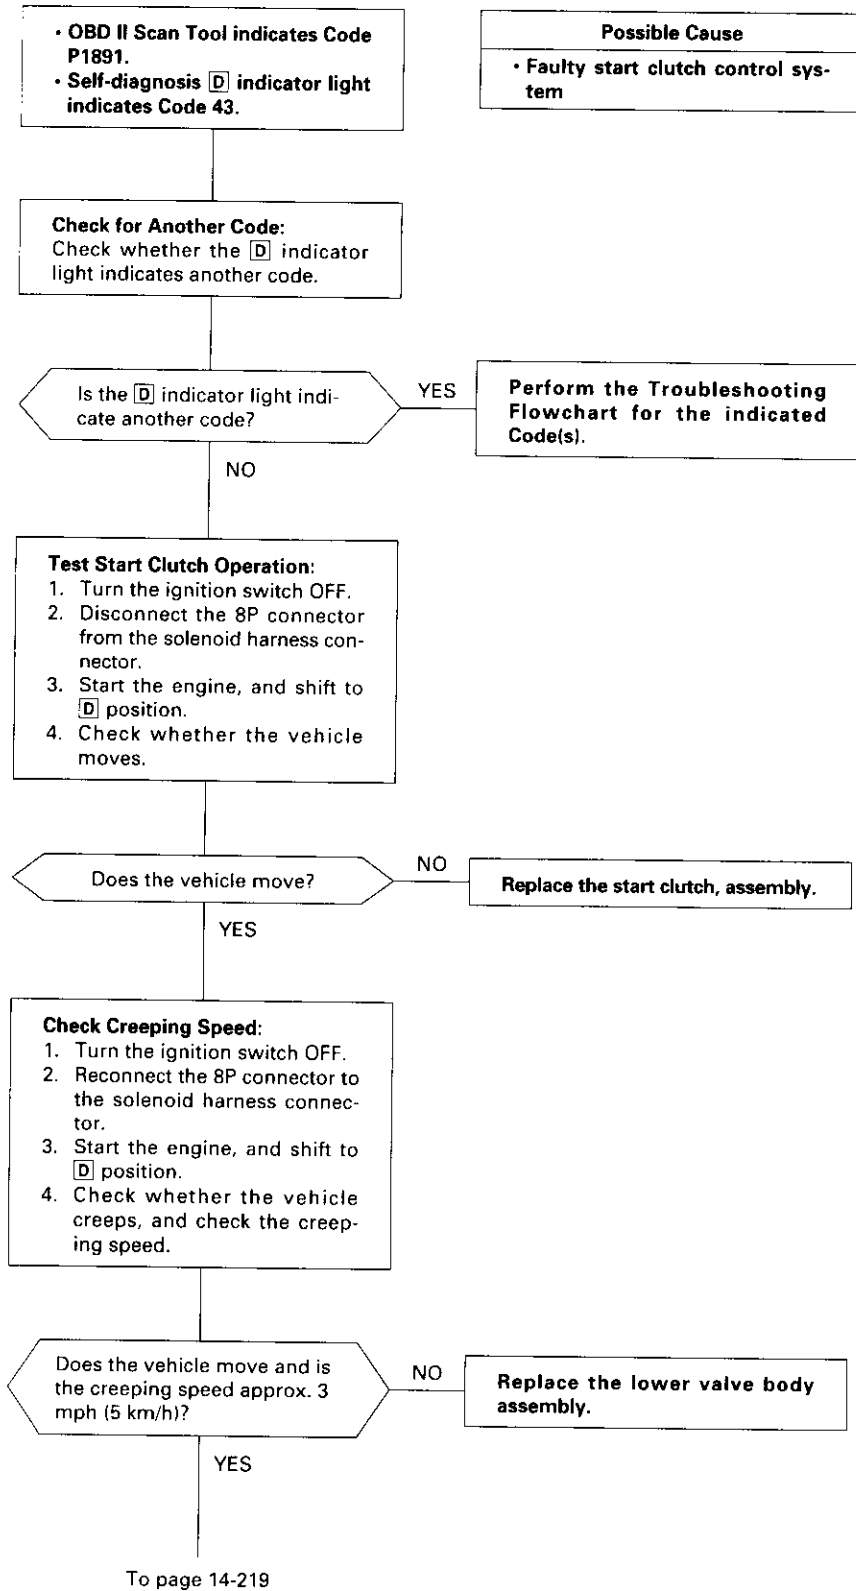




From page 14-218

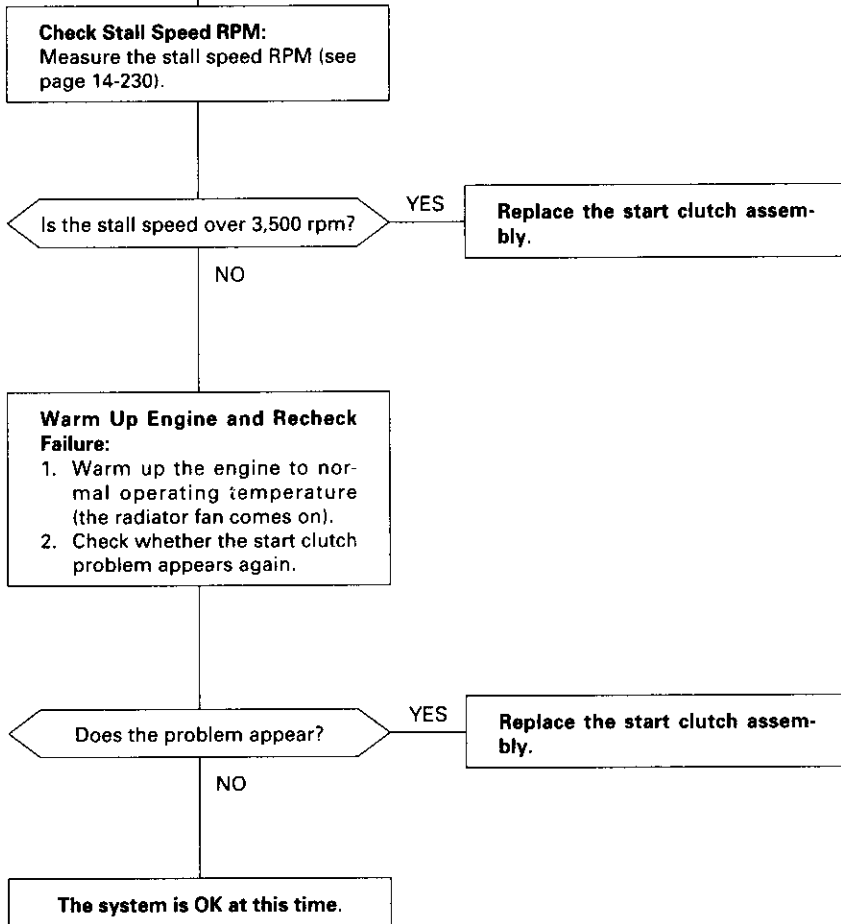


Electrical Troubleshooting

Troubleshooting Flowchart — **D** Indicator Light Does Not Come On

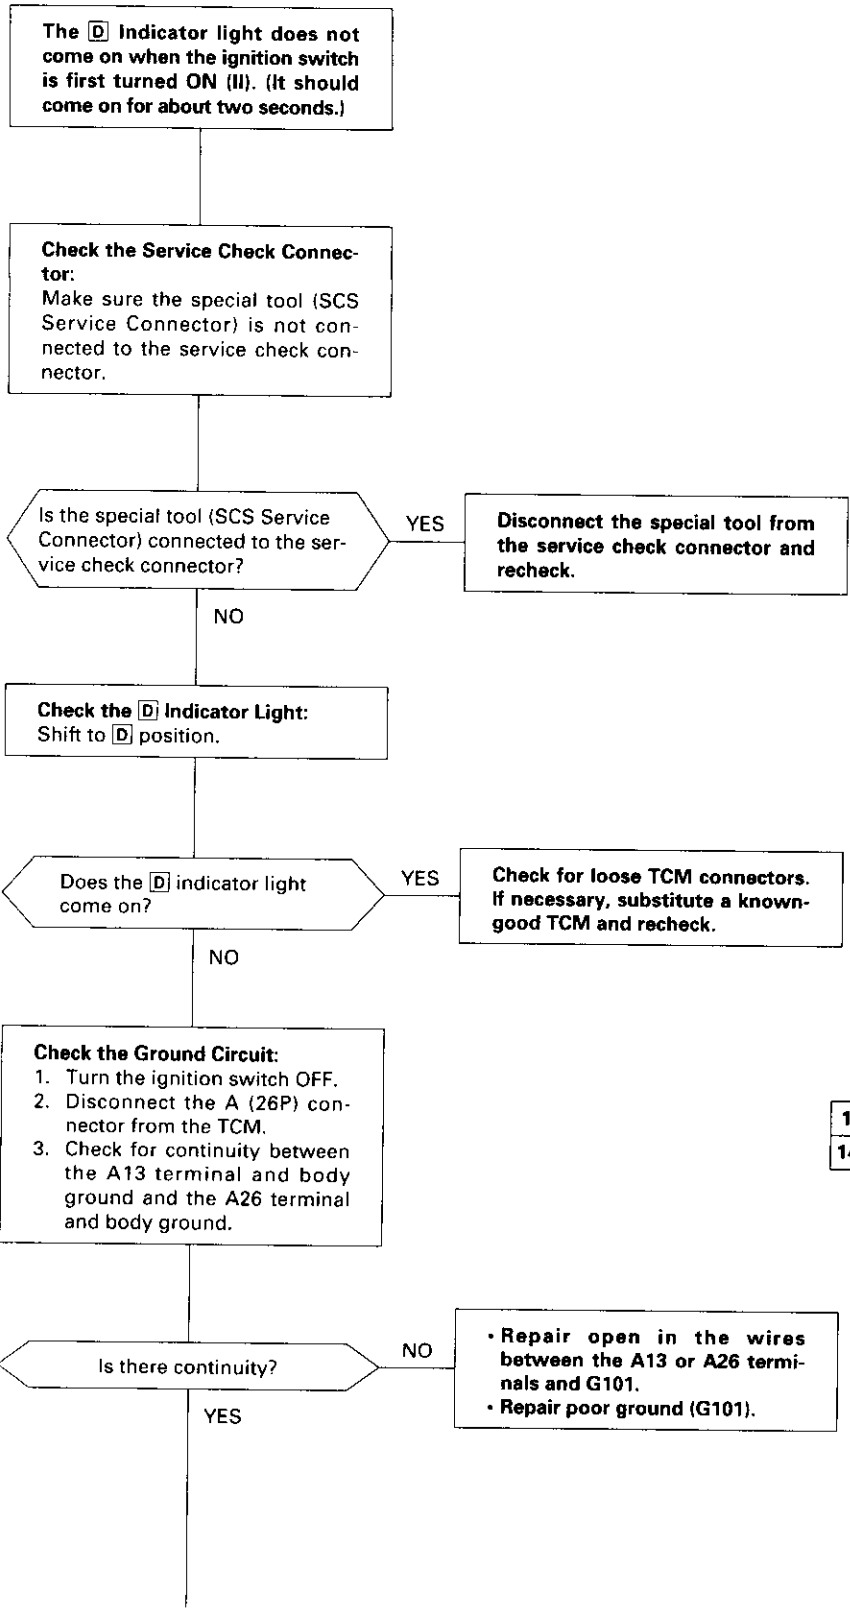

TCM CONNECTOR A (26P)

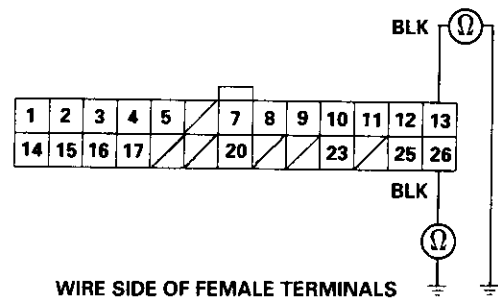

To page 14-221



From page 14-220

Measure Power Supply Circuit Voltage:
 1. Turn the ignition switch ON (II).
 2. Measure the voltage between terminals A12 and A13 and between terminals A25 and A26.

Is there battery voltage?

NO

Repair open or short in the wire between the A12 and/or A25 terminals and the under-dash fuse box.

YES

Measure D IND Voltage:
 1. Turn the ignition switch OFF.
 2. Connect the A (26P) connector to the TCM.
 3. Connect a digital multimeter to the A20 and A13 or A26 terminals.
 4. Turn the ignition switch ON (II), and make sure that the voltage is available for two seconds.

Is there voltage?

YES

Check for open in the wire between the A20 terminal and the gauge assembly. If the wire is OK, check for a faulty \square indicator light bulb or a faulty gauge assembly printed circuit board.

NO

Check D IND for an Short Circuit:
 1. Turn the ignition switch OFF.
 2. Disconnect the A (26P) connector from the TCM.
 3. Check for continuity between the A20 terminal and the No. 9 terminal of the gauge assembly connector (see section 23).

Is there continuity?


NO

Repair open in the wire between the A20 terminal and the gauge assembly.


YES

Check for loose TCM connectors. Check the A/T gear position switch. If necessary, substitute a known-good TCM and recheck.


TCM CONNECTOR A (26P)

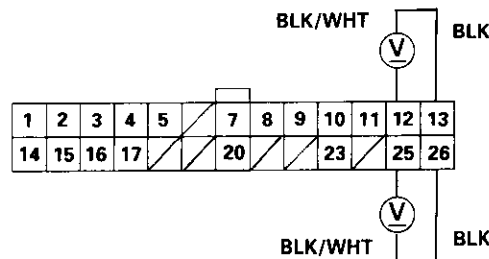

WIRE SIDE OF FEMALE TERMINALS

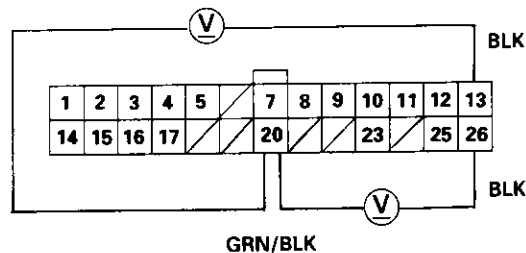

TCM CONNECTOR A (26P)

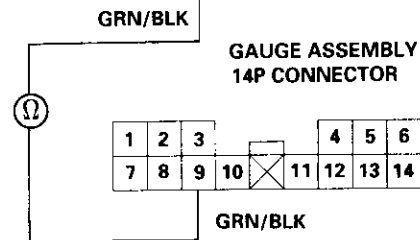

WIRE SIDE OF FEMALE TERMINALS

Electrical Troubleshooting

Troubleshooting Flowchart — **D** Indicator Light On Constantly

The **D** indicator light is on constantly (not blinking) whenever the ignition switch is ON (II).

Measure D IND Voltage:

1. Turn the ignition switch OFF.
2. Disconnect the A (26P) connector from the TCM.
3. Turn the ignition switch ON (II).
4. Measure the voltage between the A20 terminal and body ground.

Is there voltage?

YES

Repair short to power in the wire between the A20 terminal and the gauge assembly.

NO

Measure ATP D Voltage:

1. Turn the ignition switch OFF.
2. Connect the A (26P) connector to the TCM.
3. Turn the ignition switch ON (II).
4. Shift to any position other than **D**.
5. Measure the voltage between the A9 terminal and body ground.

Is there voltage?


NO

Check for a short to ground on the wire. If wire is OK, replace the A/T gear position indicator.


YES

Replace the TCM.

TCM CONNECTOR A (26P)

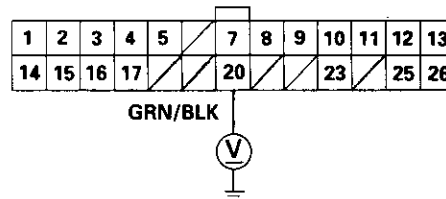

WIRE SIDE OF FEMALE TERMINALS

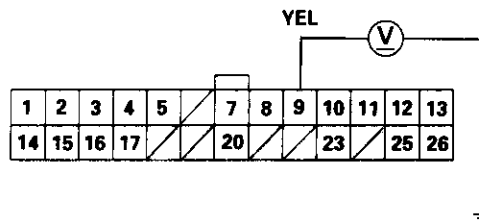



Test


1. Disconnect the 8P connector from the solenoid harness connector.
2. Measure the resistance of the shift control linear solenoid between the No. 3 and No. 7 terminals of the solenoid harness connector.
3. Measure the resistance of the PH-PL control linear solenoid between the No. 2 and No. 6 terminals.
4. Measure the resistance of the start clutch control linear solenoid between the No. 4 and No. 8 terminals.

STANDARD: 3.8 – 6.8 Ω

5. Measure the resistance of the inhibitor solenoid between the No. 5 terminal and body ground.

STANDARD: 11.7 – 21.0 Ω

SOLENOID HARNESS CONNECTOR

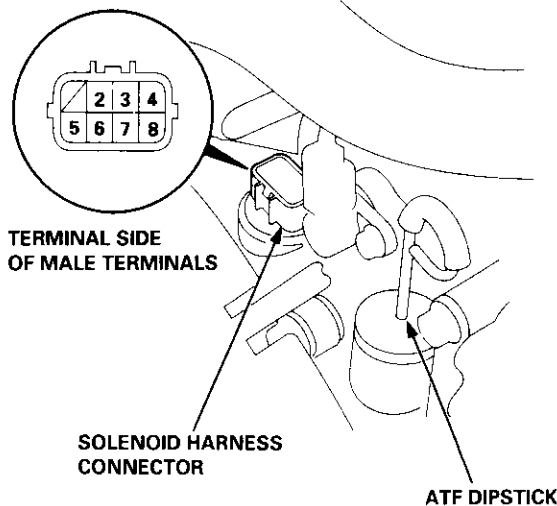


6. Replace the lower valve body assembly if any of the solenoids resistance is beyond the standard.

7. If all of the resistances are within the standard, a clicking sound should be heard when connecting the battery terminals to the solenoid harness connector terminals below:

- **Shift control linear solenoid**
No. 3: Battery positive terminal
No. 7: Battery negative terminal
- **PH-PL control linear solenoid**
No. 2: Battery positive terminal
No. 6: Battery negative terminal
- **Start clutch control linear solenoid**
No. 4: Battery positive terminal
No. 8: Battery negative terminal
- **Inhibitor solenoid**
No. 5: Battery positive terminal
Body ground: Battery negative terminal

SOLENOID HARNESS CONNECTOR

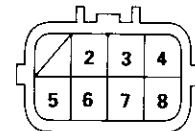

TERMINAL SIDE OF MALE TERMINALS

8. If no clicking sound is heard, replace the lower valve body assembly.


NOTE: If the lower valve body assembly replacement is required, see Lower Valve Body Assembly Replacement (page 14-234).

Drive Pulley/Driven Pulley/Secondary Gear Shaft Speed Sensors

Replacement

CAUTION: While replacing the speed sensor, be sure not to allow dust and other foreign particles to enter into the transmission.

1. Disconnect the drive pulley, the driven pulley, or the secondary gear shaft speed sensor connector.
2. Remove the 6 mm bolt from the transmission housing, and remove the drive pulley, the driven pulley, or the secondary gear shaft speed sensor.
3. Replace the O-ring with a new one before reinstalling the drive pulley, the driven pulley, or the secondary gear shaft speed sensor.

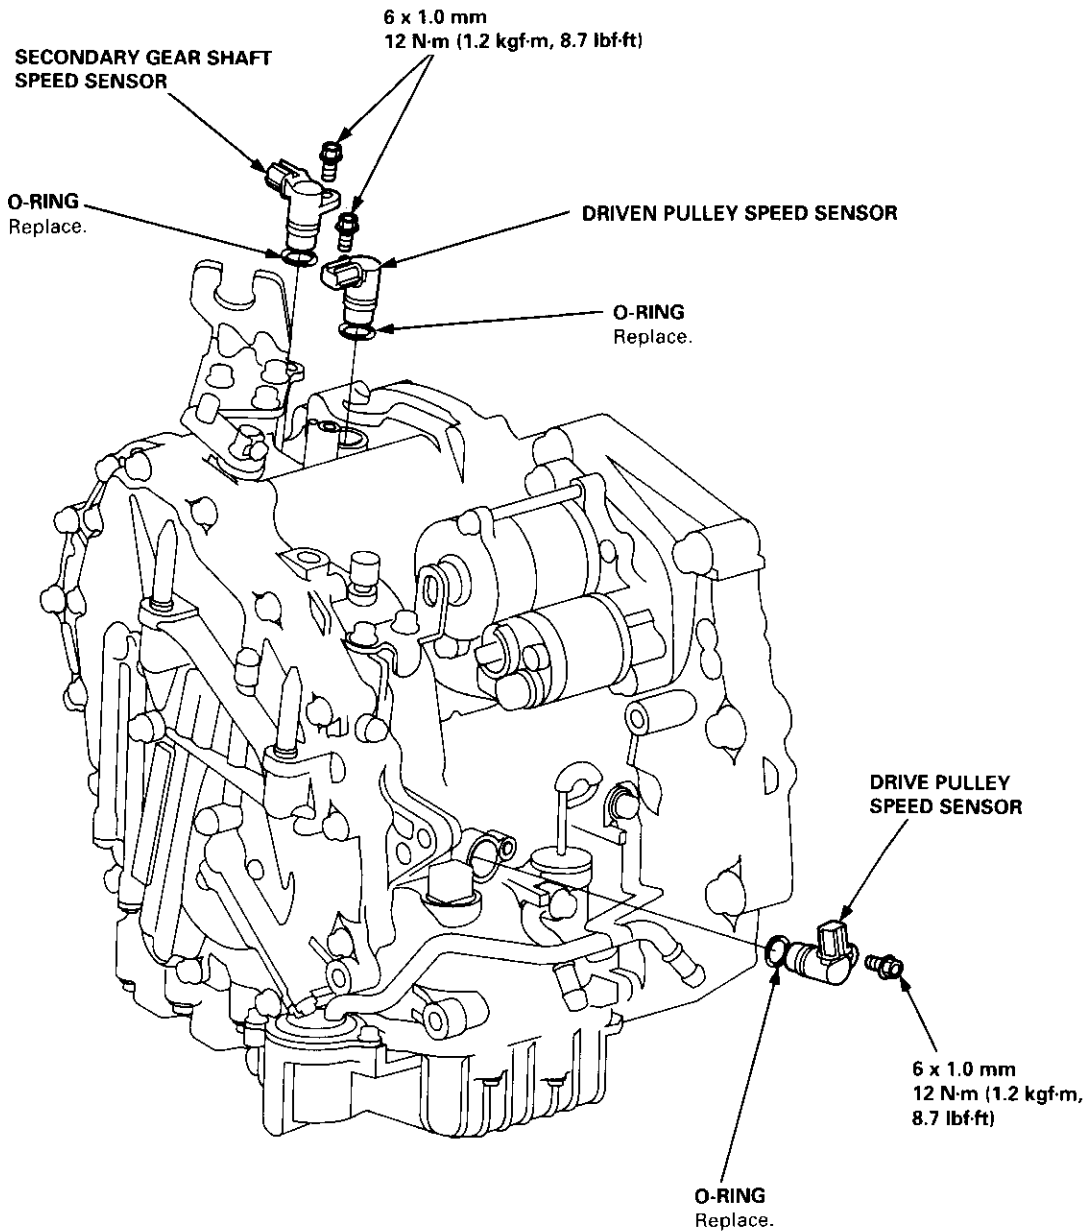

Start Clutch Control



Start Clutch Calibration Procedure


NOTE: When the following parts are replaced, the TCM must memorize the feedback signal for the start clutch control.

- TCM
- Transmission assembly
- Start clutch assembly
- Lower valve body assembly
- Engine assembly or overhaul

'96 Model Only

CAUTION: Do not use this procedure on '97 - '98 models or you will damage the transmission. On '97 - '98 models, the TCM memorizes the feedback signals when you drive the vehicle.

1. Engage the parking brake, and block the front wheels securely.
2. Connect the SCS service connector to the Service Check Connector as shown. (The Service Check Connector (2P) is located under the dash on the passenger's side of the vehicle.)

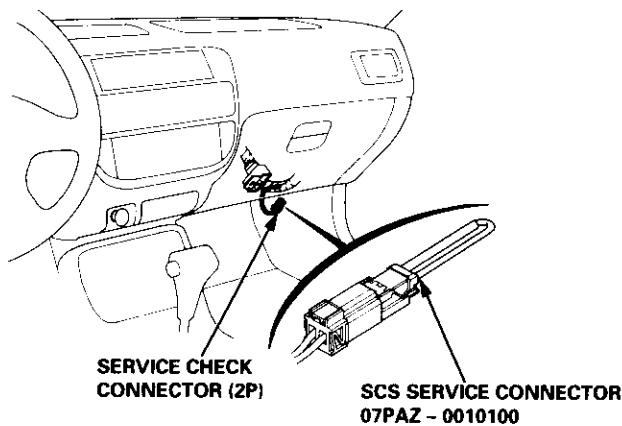

3. Start the engine, and warm it up to normal operating temperature (the radiator fan comes on twice).
4. Fully depress the brake pedal and accelerator for 20 seconds in the **D** position.

5. Shift into **N** or **P** position. To store the engine negative pressure in memory, let the engine idle in **N** or **P** position for one minute under the following conditions:

- With the brake pedal depressed.
- With the A/C switch OFF.
- With the combination light switch OFF.
- With the heater fan switch OFF.
- Turn OFF all other electrical systems.

NOTE: Start step 5 within 60 seconds after the radiator fan goes off.

6. Shift into **D** position, and let the engine idle for two minutes to store the feedback signal in memory under the same conditions as in step 5.
7. Connect the Honda PGM Tester. Check that the TCM has completed the start clutch calibration.

NOTE:

- The TCM will not store the feedback signal when the CVT fluid temperature is below 40°C (104°F) even if the engine coolant temperature reaches the normal operating temperature.
- Repeat these procedures until the start clutch calibration is completed.

8. Disconnect the SCS service connector from the Service Check Connector.

'97 - '98 Models

The TCM memorizes the feedback signal when you drive the vehicle as follows:

- After warming up the engine (the radiator fan comes on).
- Shift into **D** position.
- Turn OFF all electrical systems.
- Drive the vehicle up to the speed 37 mph (60 km/h).
- After the speed reaches 37 mph (60 km/h), release the accelerator for 5 seconds.

Symptom-to-Component Chart

Hydraulic System

SYMPTOM	Check these items on the PROBABLE CAUSE List
Engine runs, but vehicle does not move in any position.	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 20, 34, 35, 36, 38, 41
Vehicle does not move in D , L , S positions.	10, 11, 12, 20, 41
Vehicle does not move in R position.	5, 10, 11, 12, 17, 18, 19, 20, 39, 41
No shift to higher ratio.	9, 13, 14, 15, 16, 35, 37, 40
Poor acceleration.	9, 13, 14, 15, 16, 20, 35, 37, 38, 40
Flares on moving.	9, 10, 20, 21, 35, 36, 38, 40, 42
Excessive shock when depressing and releasing accelerator pedal.	9, 10, 20, 21, 35, 36, 38, 42
No engine braking.	9, 20, 21, 35, 36, 38
Vehicle does not accelerate in R position.	9, 17, 18, 19, 20, 35, 36, 38
Vehicle moves in N position. (Shift cable adjustment is proper).	10, 22, 23
Late shift from N position to D position, and from D position to N position.	10, 11, 12, 22, 41
Late shift from N position to R position, and from R position to N position.	11, 12, 17, 18, 22, 41
Engine stops when shifted to D position from N position.	9, 10, 20, 35, 37, 38, 42
Engine stops when shifted to R position from N position.	9, 18, 19, 20, 25, 26, 35, 37, 38, 42
Noise from transmission in R position.*1	5, 17, 18, 19, 25, 26
Excessive idle vibration.	2, 3, 8, 27, 28
Noise from transmission in N and P positions.	2, 3, 19, 24, 25, 28
Hunting engine speed.	16, 35, 37, 38
Vibration in all position.	8, 28
Shift lever does not operate smoothly.	11, 29, 41
Transmission will not shift into P position or transmission cannot be removed from P position.	11, 29, 30, 31, 32, 33
Vehicle does not accelerate to more than a certain speed.	9, 10, 14, 15, 16, 20, 35, 37
Excessive shock on starting off.	38, 42
Flares on accelerating at low speed.	20, 21, 38, 42
Excessive vibration in D , L , S , R positions.	20, 21, 38, 42
Low engine speed in D , L , S , R positions.	20, 21, 38, 42
Stall speed high.	10, 20, 38
Stall speed low.	9, 20, 27, 37, 38
Judder on starting off.	20, 43

*1: Some gear noise is normal in the **R** position due to planetary gear action.



PROBABLE CAUSE LIST

1	Low CVT fluid level
2	ATF pump worn. AT gears worn or damaged. Foreign material in ATF pump.
3	ATF pump chain/ATF pump sprocket worn or damaged.
4	Input shaft worn or damaged.
5	Sun gear worn or damaged.
6	Final driven gear worn or damaged.
7	Secondary drive gear/secondary driven gear worn or damaged.
8	Flywheel/drive plate worn or damaged.
9	Intermediate housing assembly worn or damaged.
10	Forward clutch defective.
11	Shift cable broken/out of adjustment.
12	Manual lever pin worn.
13	ATF feed pipe (pulley pressure) worn or damaged.
14	Drive pulley speed sensor/driven pulley speed sensor defective.
15	Vehicle speed sensor defective.
16	TCM defective.
17	Reverse brake defective.
18	Reverse brake piston and related parts worn or damaged.
19	Planetary gear worn or damaged.
20	Start clutch defective.
21	ATF feed pipe (start clutch pressure) worn or damaged.
22	Clutch clearance/reverse brake clearance incorrect.
23	Reverse brake return spring/retainer worn or damaged.
24	Needle bearing on input shaft worn or damaged.
25	Thrust needle bearing on carrier worn or damaged.
26	Thrust washer on carrier worn or damaged.
27	Engine output low.
28	Flywheel assembly defective.
29	Control lever worn or damaged.
30	Parking brake pawl/parking brake pawl shaft worn or damaged.
31	Detent lever/parking brake rod assembly worn or damaged.
32	Parking gear worn or damaged.
33	Parking brake pawl spring worn or damaged.
34	ATF strainer/ATF filter clogged.
35	Lower valve body assembly defective.
36	Lower valve body assembly defective (PL regulator valve body assembly defective).
37	Lower valve body assembly defective (shift valve body assembly defective).
38	Lower valve body assembly defective (start clutch control valve body assembly defective).
39	Lower valve body assembly defective (inhibitor solenoid defective).
40	Solenoid harness worn or damaged.
41	Manual valve body worn or damaged.
42	PB feedback system defective.
43	CVT fluid deteriorated.

Road Test

NOTE: Warm up the engine to normal operating temperature (the radiator fan comes on).

1. Apply the parking brake and block the wheels. Start the engine, then shift to the **D** position while depressing the brake pedal. Depress the accelerator pedal and release it suddenly. The engine should not stall.
2. Test in **P** position
Park the vehicle in a slope (approx. 16°), apply the parking brake, and shift into **P** position. Release the brake; the vehicle should not move.
3. Test-drive the vehicle on a flat road in the position shown in the table. Check that the engine speeds meet the approximate vehicle speeds shown in the table.

NOTE: Throttle position sensor voltage represents the throttle opening. To monitor the throttle position sensor voltage, use one of the following methods:

- A. Connect the Honda PGM Tester, and go to the PGM-FI Data List.



OBID II SCAN TOOL or
HONDA PGM TESTER



DATA LINK CONNECTOR (16P)

- B. 1. Remove the kick panel to expose the TCM for road testing; refer to page 14-194.

2. Set the digital multimeter to check voltage between the B4 (+) terminal and A4 (-) or A17 (-) terminal of the TCM for throttle position sensor.

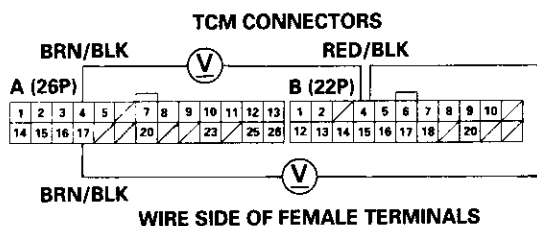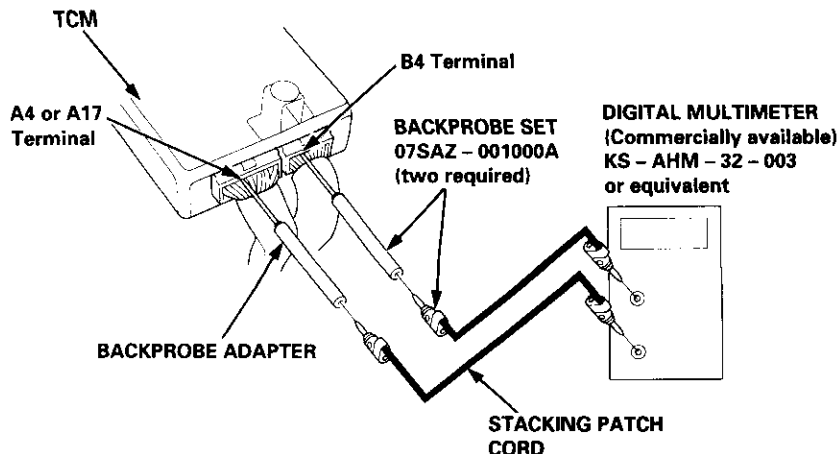



• **D** position: Engine Speed rpm

Throttle Opening	Vehicle Speed		
	25 mph (40 km/h)	37 mph (60 km/h)	62 mph (100 km/h)
Throttle position sensor voltage: 0.75 V	1,250 – 1,650	—	—
Throttle position sensor voltage: 2.25 V	2,500 – 3,100	2,650 – 3,250	2,700 – 3,300
Throttle position sensor voltage: 4.5 V Full throttle position	3,950 – 4,550	4,650 – 5,250	5,200 – 5,800

• **S** position: Engine Speed rpm

Throttle Opening	Vehicle Speed		
	25 mph (40 km/h)	37 mph (60 km/h)	62 mph (100 km/h)
Throttle position sensor voltage: 0.75 V	1,800 – 2,200	2,200 – 2,800	3,550 – 4,150
Throttle position sensor voltage: 2.25 V	2,950 – 3,550	3,250 – 3,850	4,050 – 4,650
Throttle position sensor voltage: 4.5 V Full throttle position	4,100 – 4,700	5,100 – 5,700	5,900 – 6,500

• **L** position: Engine Speed rpm

Throttle Opening	Vehicle Speed		
	25 mph (40 km/h)	37 mph (60 km/h)	62 mph (100 km/h)
Throttle position sensor voltage: 0.75 V	3,100 – 3,700	3,650 – 4,250	4,450 – 5,050
Throttle position sensor voltage: 2.25 V	3,500 – 4,100	4,050 – 4,650	4,800 – 5,400
Throttle position sensor voltage: 4.5 V Full throttle position	4,100 – 4,700	5,100 – 5,700	5,900 – 6,500

Stall Speed

Test

CAUTION:

- To prevent transmission damage, do not test stall speed for more than 10 seconds at a time.
- Do not shift the lever while raising the engine speed.
- Be sure to remove the pressure gauge before testing stall speed.
- Stall speed tests should be used for diagnostic purposes only.

1. Engage the parking brake, and block the front wheels.
2. Connect a tachometer to the engine, and start the engine.
3. Make sure the A/C switch is OFF.
4. After the engine has warmed up to normal operating temperature (the radiator fan comes on), shift into **D** position.
5. Fully depress the brake pedal and accelerator for 6 to 8 seconds, and note engine speed.
6. Allow two minutes for cooling, then repeat the test in **S**, **L**, and **R** positions.

Stall Speed RPM in **D** position:

Specification: 2,500 rpm

Service Limit: 2,350 – 2,650 rpm

Stall Speed RPM in **S**, **L** and **R** positions:

Specification: 3,000 rpm

Service Limit: 2,800 – 3,100 rpm

TROUBLE	PROBABLE CAUSE
Stall rpm high in D , S , L , and R positions	<ul style="list-style-type: none">• Low fluid level or ATF pump output• Clogged ATF strainer• PH regulator valve stuck closed• Slippage of forward clutch• Faulty start clutch
Stall rpm high in R position	<ul style="list-style-type: none">• Slippage of reverse brake• Faulty start clutch
Stall rpm low in D , S , L , and R positions	<ul style="list-style-type: none">• Engine output low• Faulty start clutch• Stuck shift valve



Checking/Changing

CAUTION: While checking and changing, be sure not to allow dust and other foreign particles to enter into the transmission.

Checking


NOTE: Check the fluid level with the engine at normal operating temperature (the radiator fan comes on just twice).

1. Park the vehicle on the level ground. Turn off the engine.


2. Remove the dipstick (yellow loop) from the transmission, and wipe it with a clean cloth.

NOTE: Check the transmission fluid 60 to 90 seconds after shutting off the engine.

3. Insert the dipstick into the transmission.

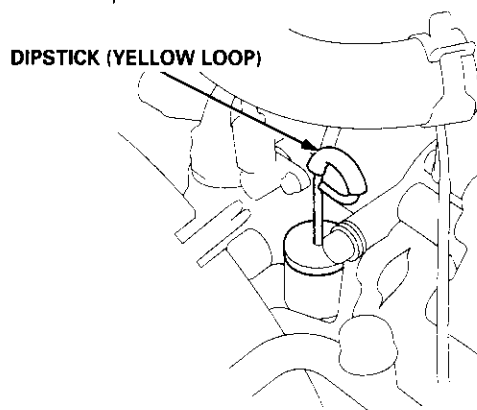

4. Remove the dipstick and check the fluid level. It should be between the upper and lower mark.

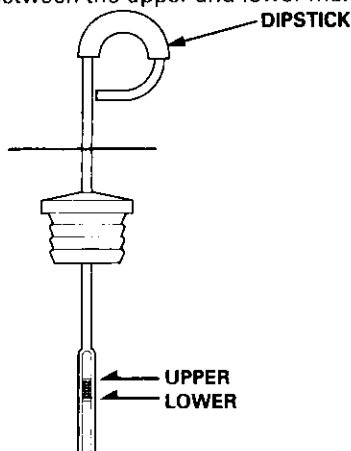

5. If the level is below the lower mark, add fluid into the filler hole to bring it to the upper mark. Use Genuine Honda CVT Fluid only.

6. Insert the dipstick into the transmission.

Changing

1. Bring the transmission up to normal operating temperature (the radiator fan comes on) by driving the vehicle. Park the vehicle on the level ground, and turn off the engine.

2. Remove the drain plug, and drain the CVT fluid.

NOTE: If a cooler flusher is to be used, see page 14-284 and 14-285.

3. Reinstall the drain plug with a new sealing washer, then refill the transmission with Genuine Honda CVT Fluid to the upper mark on the dipstick.

Automatic Transmission Fluid Capacity:
3.9 l (4.1 US qt, 3.4 Imp qt) at changing
6.4 l (6.8 US qt, 5.6 Imp qt) at overhaul


Recommended Automatic Transmission Fluid:
Genuine Honda CVT Fluid.

Use Genuine Honda CVT fluid only. Using other fluids can affect transmission operation and may reduce transmission life.

Change Interval:

Normal Condition: 30,000 miles (48,000 km)

Severe Condition: 30,000 miles (48,000 km), but if you drive at high speeds in high [90°F (32°C) and above] temperatures, the transmission fluid should be changed every 15,000 miles (24,000 km).

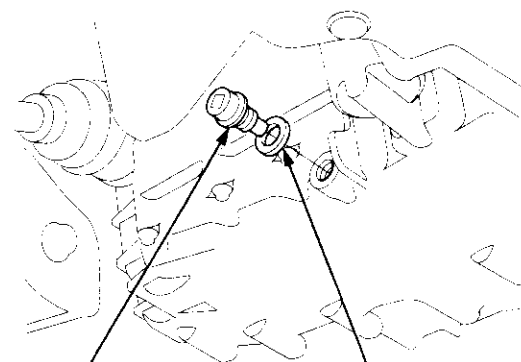

DRAIN PLUG
18 x 1.5 mm
49 N·m (5.0 kgf·m, 36 lbf·ft)

SEALING WASHER
Replace.

Pressure Testing

⚠ WARNING

- While testing, be careful of the rotating front wheels.
- Make sure lifts, jacks, and safety stands are placed properly (see section 1).

CAUTION:

- Before testing, be sure the transmission fluid is filled to the proper level.
- Warm up the engine to normal operating temperature before testing.
- While testing, be sure not to allow dust and other foreign particles to enter into the transmission.

1. Raise the front of the vehicle, and support it with safety stands (see section 1).
2. Set the parking brake, and block both rear wheels securely.
3. Allow the front wheels to rotate freely.
4. Warm up the engine (the radiator fan comes on), then stop and connect a tachometer.
5. Connect the special tool to each inspection hole.


TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

CAUTION:

- Connect the oil pressure gauge securely, be sure not to allow dust and other foreign particles to enter the inspection hole.
- When troubleshooting by the **D** indicator light indicates a problem, you must use an oil pressure gauge that measures 4,900 kPa (4.90 MPa, 50.0 kgf/cm², 711 psi) or more when measuring drive pulley pressure and driven pulley pressure.

NOTE:

- Drive pulley pressure may be above 3,430 kPa (3.43 MPa, 35.0 kgf/cm², 498 psi) when there is a transmission problem that causes the TCM to go into the fail-safe mode.
- Use a commercially available oil pressure gauge that measures 4,900 kPa (4.90 MPa, 50.0 kgf/cm², 711 psi) or more, and the A/T Oil Pressure Hose, 2210 mm (07MAJ - PY4011A).




A/T OIL PRESSURE GAUGE SET W/PANEL
07406 - 0020400



A/T LOW PRESSURE GAUGE W/PANEL
07406 - 0070300



A/T PRESSURE HOSE ADAPTER
07MAJ - PY40120
(4 Required)



A/T PRESSURE HOSE
2210 mm
07MAJ - PY4011A
(4 Required)

FORWARD CLUTCH PRESSURE INSPECTION HOLE
(Marked with "F")

DRIVE PULLEY PRESSURE INSPECTION HOLE
(Marked with "DR")

REVERSE BRAKE PRESSURE INSPECTION HOLE

LUBRICATION PRESSURE INSPECTION HOLE
(Marked with "LUB")

DRIVEN PULLEY PRESSURE INSPECTION HOLE
(Marked with "DN")

ATF DIPSTICK

START CLUTCH PRESSURE INSPECTION HOLE
(Marked with "SC")



6. Start the engine.

7. Shift to the respective shift lever position as in the table, and measure the following pressures at 1,500 rpm.

- Forward Clutch Pressure
- Reverse Brake Pressure
- Drive Pulley Pressure
- Driven Pulley Pressure

8. Shift to **N** position, and measure the lubrication pressure, at 3,000 rpm.

PRESSURE	SHIFT LEVER POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE
				Standard/Service Limit
Forward Clutch	D	No or low forward clutch pressure	Forward Clutch	1.4 – 1.75 MPa (14.3 – 17.8 kgf/cm ² , 203 – 253 psi)
Reverse Brake	R	No or low reverse brake pressure	Reverse Brake	1.4 – 1.75 MPa (14.3 – 17.8 kgf/cm ² , 203 – 253 psi)
Drive Pulley	N	No or low drive pulley pressure	ATF pump, PH regulator valve, PL regulator valve, Shift valve	0.2 – 0.7 MPa (2 – 7.1 kgf/cm ² , 28 – 101 psi)
		Drive pulley pressure too high	PH regulator valve, PL regulator valve, Shift valve, Shift control linear solenoid	
Driven Pulley		No or low driven pulley pressure	ATF pump, PH regulator valve, Shift valve, Shift control linear solenoid	1.5 – 2.3 MPa (15.3 – 23.5 kgf/cm ² , 218 – 334 psi)
		Driven pulley pressure too high	PH regulator valve	
Lubrication		No or low lubrication pressure	ATF pump, Lubrication valve	Above 0.2 MPa (Above 2 kgf/cm ² , 30 psi)

9. Disconnect the special tool after pressure testing.

10. Install the sealing bolt with a new sealing washer in the inspection hole, and tighten to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

CAUTION: Keep all of the foreign particles out of the transmission.

Lower Valve Body Assembly

Replacement

▲ WARNING Make sure lifts, jacks, and safety stands are placed properly (see section 1).

CAUTION: While removing and installing the lower valve body assembly, be sure not to allow dust and other foreign particles to enter into the transmission.


1. Raise the front of the vehicle, and support it with safety stands (see section 1).
2. Set the parking brake, and block both rear wheels securely.
3. Remove the drain plug, and drain the CVT fluid. Reinstall the drain plug with a new sealing washer (see page 14-231).

CAUTION: Keep all of other foreign particles out of the transmission.


4. Disconnect the 8P connector from the solenoid harness connector.
5. Remove the ATF cooler hoses at the ATF cooler pipes. Turn the ends of the ATF cooler hoses up to prevent ATF from flowing out, then plug the ATF cooler hoses.

CAUTION: Keep all of other foreign particles out of the transmission.

6. Remove the right front mount/bracket.

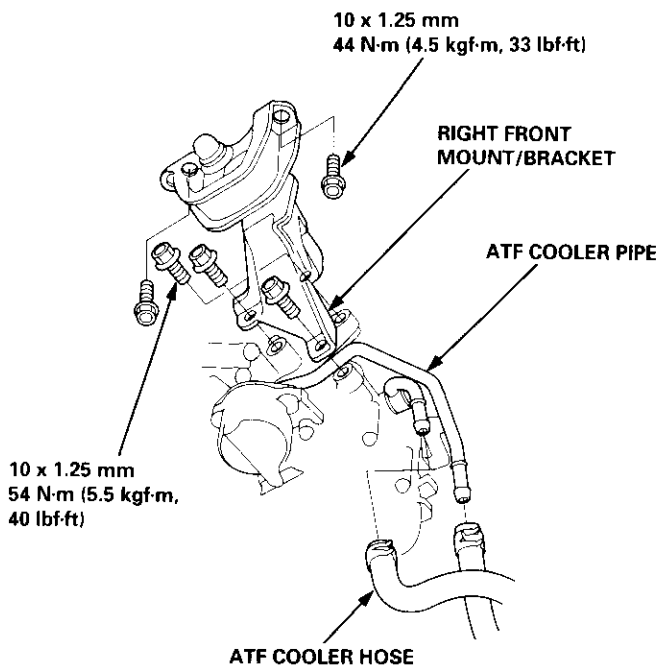

7. Remove the ATF cooler outlet pipe.
8. Remove the ATF cooler pipe bracket bolt.
9. Remove the ATF pan (fourteen bolts).
10. Remove the ATF strainer (two bolts).
11. Remove the one bolt securing the solenoid harness connector.
12. Remove the lower valve body assembly (eight bolts).

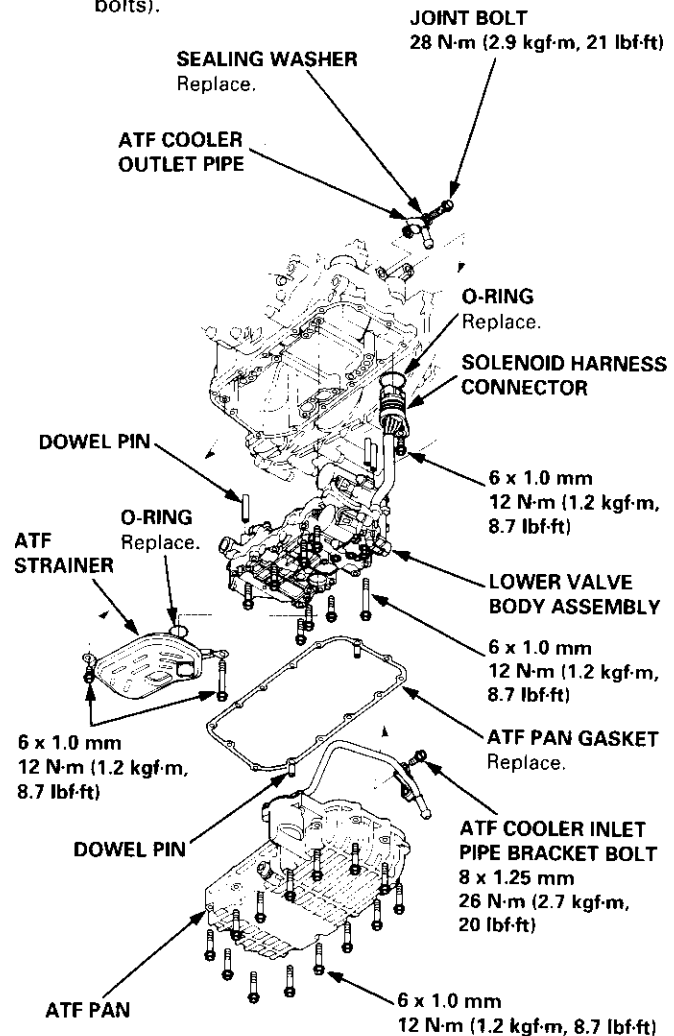

13. Install the new lower valve body in the reverse order of the removal procedure.

CAUTION: Keep all of other foreign particles out of the transmission.

NOTE:

- Replace the following parts:
 - O-rings on the solenoid harness connector and the ATF strainer
 - ATF pan gasket
 - Sealing washers
- If the ATF cooler inlet pipe bracket is bent or warped, put it back to the original position.

14. Perform the start clutch calibration procedure on page 14-225.



Removal/Installation

⚠ WARNING Make sure lifts, jacks, and safety stands are placed properly (see section 1).

CAUTION: While removing and installing the ATF filter, be sure not to allow dust and other foreign particles to enter into the transmission.


1. Raise the front of the vehicle, and support it with safety stands (see section 1).
2. Set the parking brake, and block both rear wheels securely.
3. Remove the drain plug, and drain the CVT fluid. Reinstall the drain plug with a new sealing washer (see page 14-231).

CAUTION: Keep all of other foreign particles out of the transmission.


4. Remove the ATF cooler hoses at the ATF cooler pipes. Turn the ends of the ATF cooler hoses up to prevent ATF from flowing out, then plug the ATF cooler hoses.

CAUTION: Keep all of other foreign particles out of the transmission.

5. Remove the right front mount/bracket.

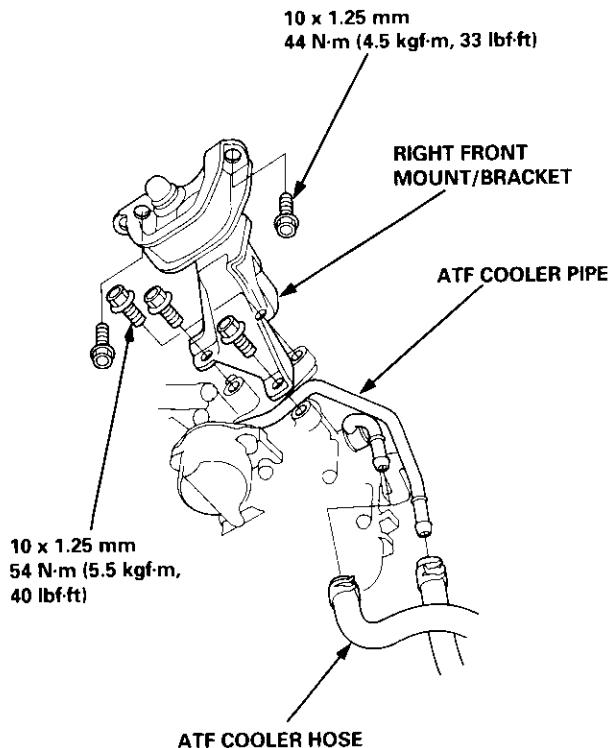

6. Remove the ATF cooler outlet pipe.
7. Remove the ATF cooler pipe bracket bolt.
8. Remove the ATF pan (fourteen bolts).
9. Remove the ATF cooler inlet pipe from the ATF pan (three bolts).
10. Remove the ATF filter, and clean it.
11. Check that the ATF filter is in good condition.
12. Replace the ATF filter if it is clogged.

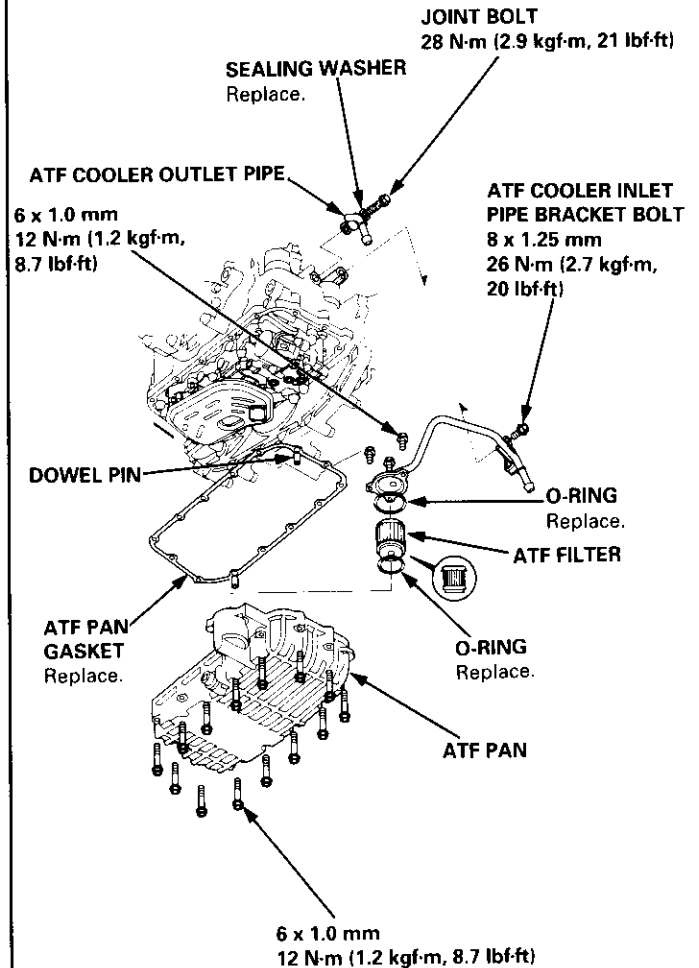

13. Install the ATF filter in the reverse order of the removal procedure.

CAUTION: Keep all foreign particles out of the transmission.

NOTE:

- Replace the O-rings, the ATF pan gasket and sealing washers.
- If the ATF cooler inlet pipe bracket is bent or warped, put it back to the original position.

Transmission


Removal

⚠ WARNING


- Make sure lifts, jacks, and safety stands are placed properly, and hoist bracket are attached to the correct position on the engine (see section 1).
- Apply parking brake and block rear wheels, so the vehicle will not roll off stands and fall on you while working under it.

CAUTION: Use fender covers to avoid damaging painted surfaces.

1. Disconnect the battery negative (-) terminal from the battery, then remove the positive (+) terminal.
2. Remove the intake air duct and air cleaner housing assembly.
3. Remove the starter cables and cable holder from the starter motor.

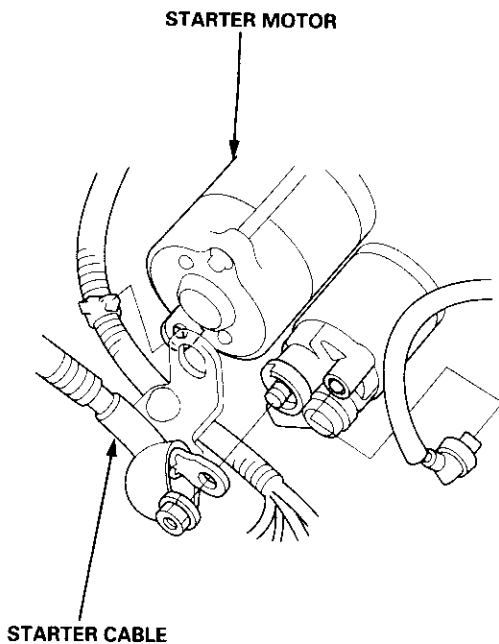


4. Disconnect the solenoid harness connector, the drive pulley speed sensor connector, and the ground cable terminals.

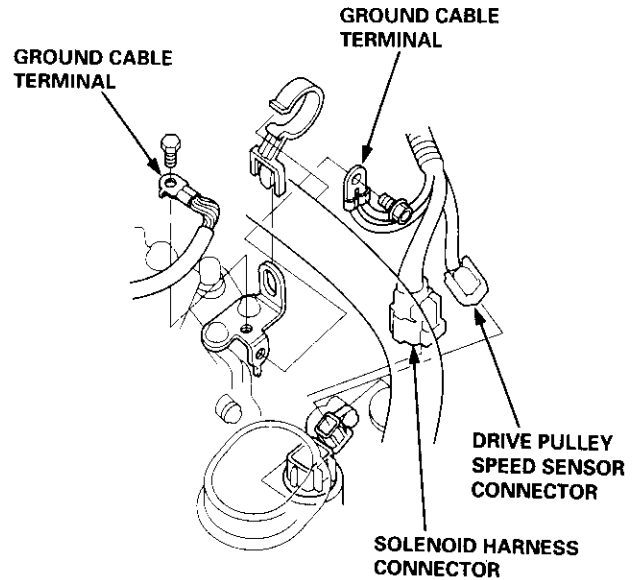


5. Remove the clip, then separate the shift cable from the control lever.

CAUTION: Take care not to bend the shift cable.

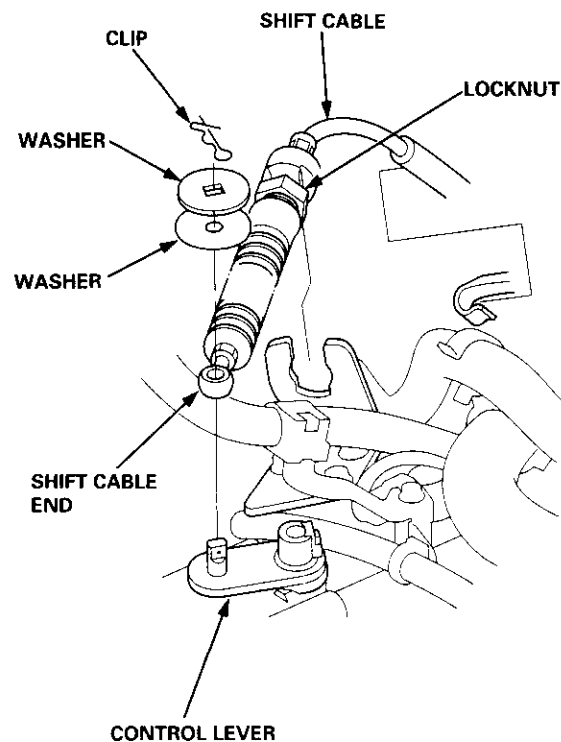




6. Disconnect the vehicle speed sensor (VSS) connector, the driven pulley speed sensor connector, and the secondary gear shaft speed sensor connector.

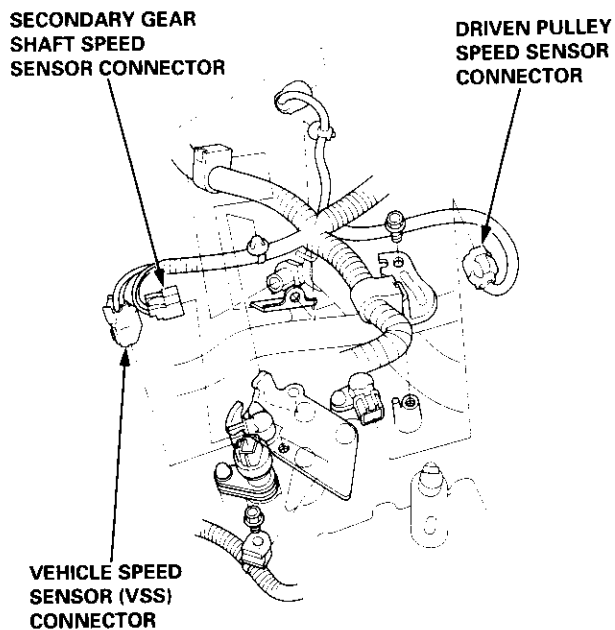


7. Remove the transmission housing mounting bolts.

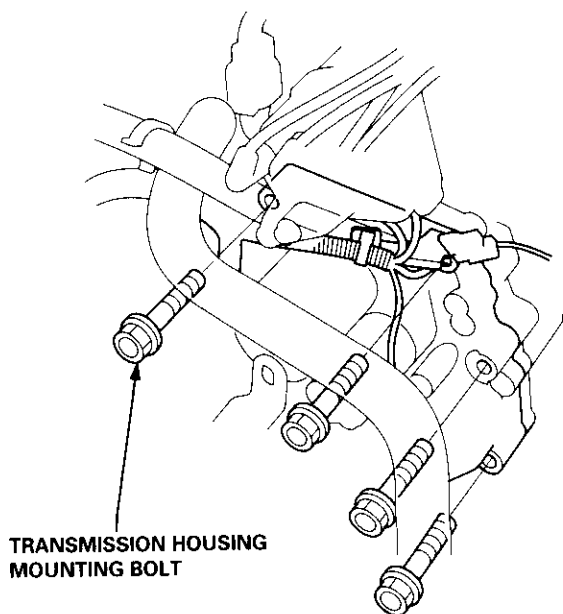


8. Remove the drain plug, and drain the CVT fluid. Reinstall the drain plug with a new sealing washer.

CAUTION: While installing the drain plug, be sure not to allow dust and other foreign particles to enter into the transmission.

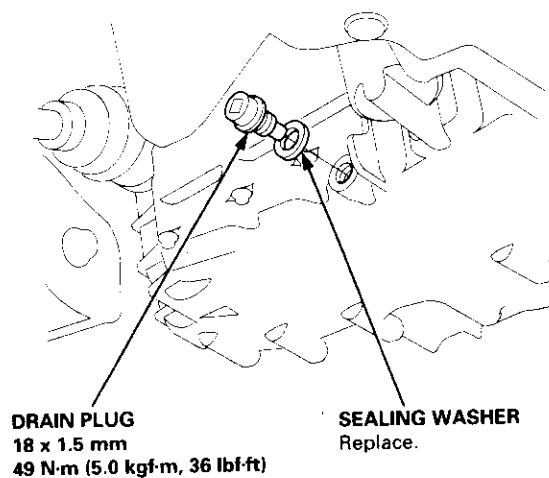

9. Remove the splash shield.

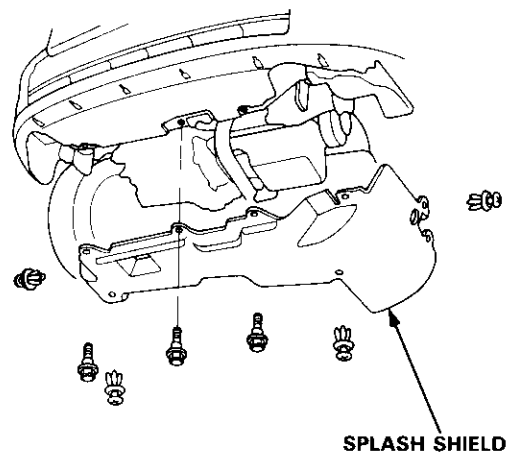


(cont'd)

Transmission

Removal (cont'd)


10. Remove the cotter pins and castle nuts, then separate the ball joints from the lower arm (see section 18).

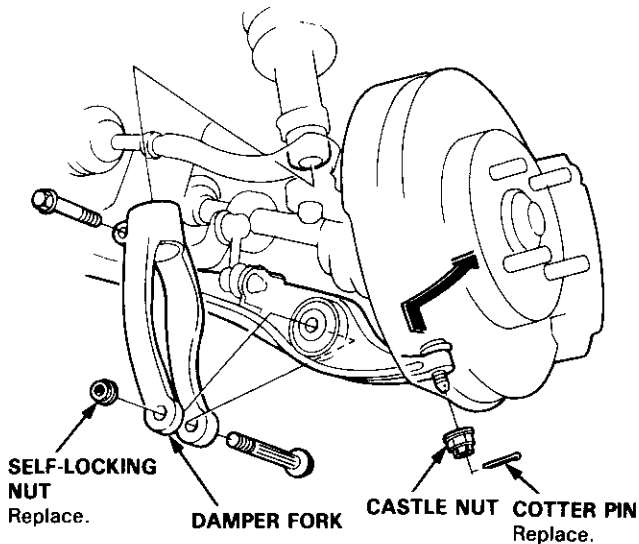


11. Remove the right damper fork bolt, then separate right damper fork and damper.
12. Pry the right and left driveshafts out of the differential.
13. Pull on the inboard joint and the right and left driveshafts (see section 16).
14. Tie plastic bags over the driveshaft ends.

NOTE: Coat all precision finished surfaces with clean engine oil.

15. Remove the exhaust pipe A.

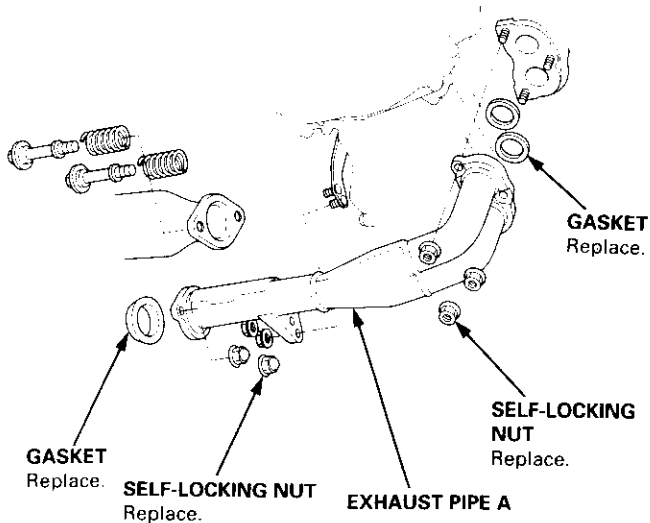


16. Remove the right front mount/bracket.

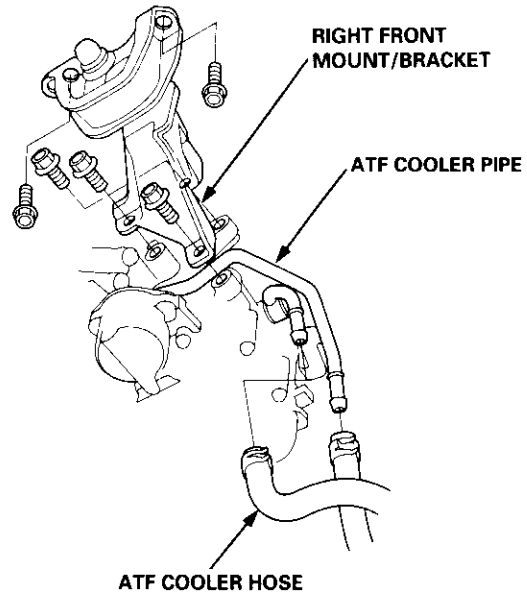

17. Remove the ATF cooler hoses at the ATF cooler pipes. Turn the ends of the ATF cooler hoses up to prevent CVT fluid from flowing out, then plug the ATF cooler hoses and pipes.

NOTE: Check for any sign of leakage at the hose joints.


18. Remove the engine stiffeners and the flywheel cover.

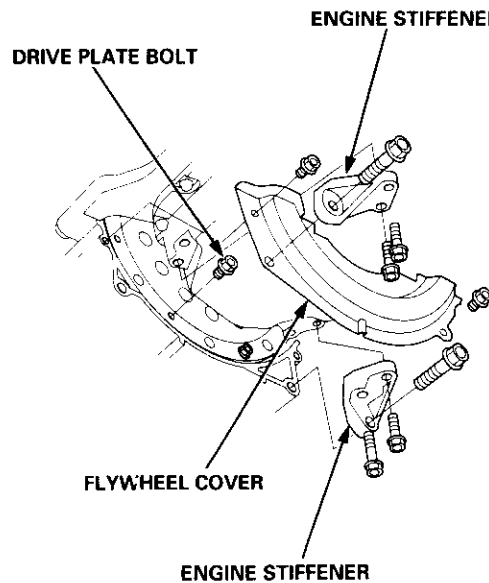


19. Remove the eight drive plate bolts one at a time while rotating the crankshaft pulley.




20. Remove the distributor.
21. Attach a hoisting bracket to the engine, then lift the engine slightly.

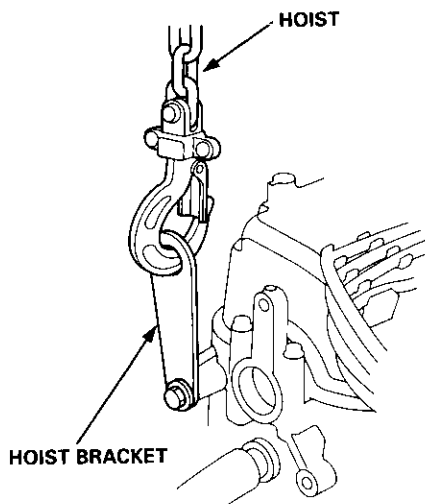

22. Place a jack under the transmission, and raise the transmission just enough to take weight off of the mounts, then remove the transmission mount bracket.

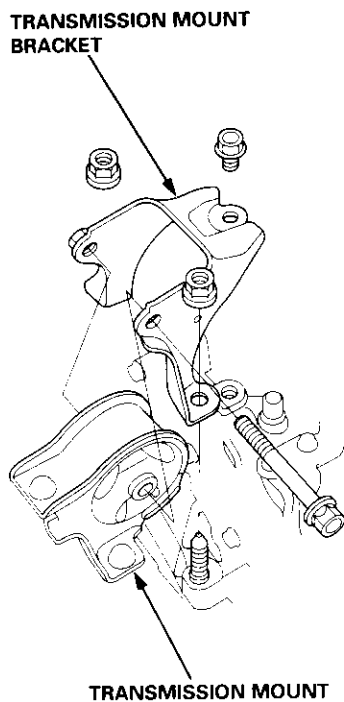


23. Remove the transmission housing mounting bolt and rear engine mounting bolts.

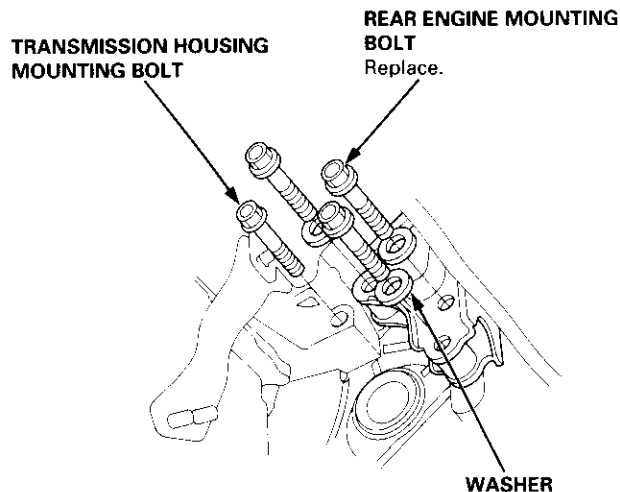

24. Pull the transmission away from the engine until it clears the 14 mm dowel pins, then lower it on the transmission jack.

Illustrated Index

Transmission/Lower Valve Body Assembly

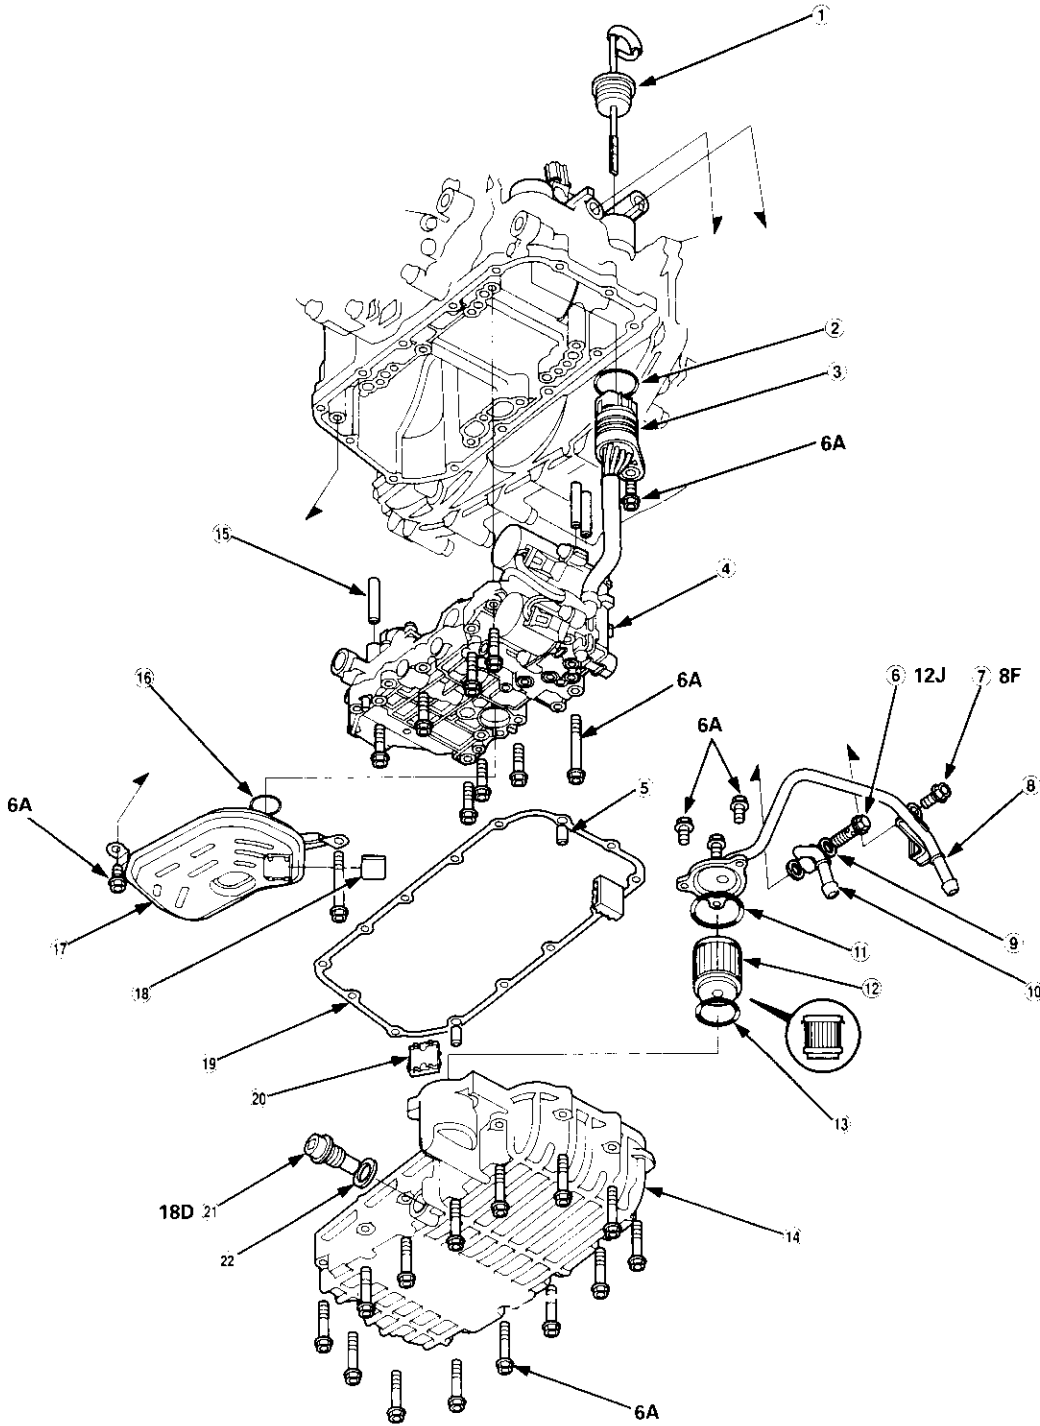




- ① ATF DIPSTICK
- ② O-RING Replace.
- ③ SOLENOID HARNESS CONNECTOR
- ④ LOWER VALVE BODY ASSEMBLY
- ⑤ DOWEL PIN
- ⑥ JOINT BOLT
- ⑦ ATF COOLER INLET PIPE BRACKET BOLT
- ⑧ ATF COOLER INLET PIPE ASSEMBLY
- ⑨ SEALING WASHER Replace.
- ⑩ ATF COOLER OUTLET PIPE
- ⑪ O-RING Replace.
- ⑫ ATF FILTER
- ⑬ O-RING Replace.
- ⑭ ATF PAN
- ⑮ DOWEL PIN
- ⑯ O-RING Replace.
- ⑰ ATF STRAINER
- ⑱ ATF MAGNET
- ⑲ ATF PAN GASKET Replace.
- ⑳ ATF MAGNET
- ㉑ DRAIN PLUG
- ㉒ SEALING WASHER Replace.

TORQUE SPECIFICATIONS

Bolt/Nut No.	Torque Value	Size	Remarks
6A	12 N·m (1.2 kgf·m, 8.7 lbf·ft)	6 x 1.0 mm	
8F	26 N·m (2.7 kgf·m, 20 lbf·ft)	8 x 1.25 mm	
12J	28 N·m (2.9 kgf·m, 21 lbf·ft)	12 x 1.25 mm	Joint bolt
18D	49 N·m (5.0 kgf·m, 36 lbf·ft)	18 x 1.5 mm	Drain plug

Illustrated Index

Transmission Housing/Flywheel Housing

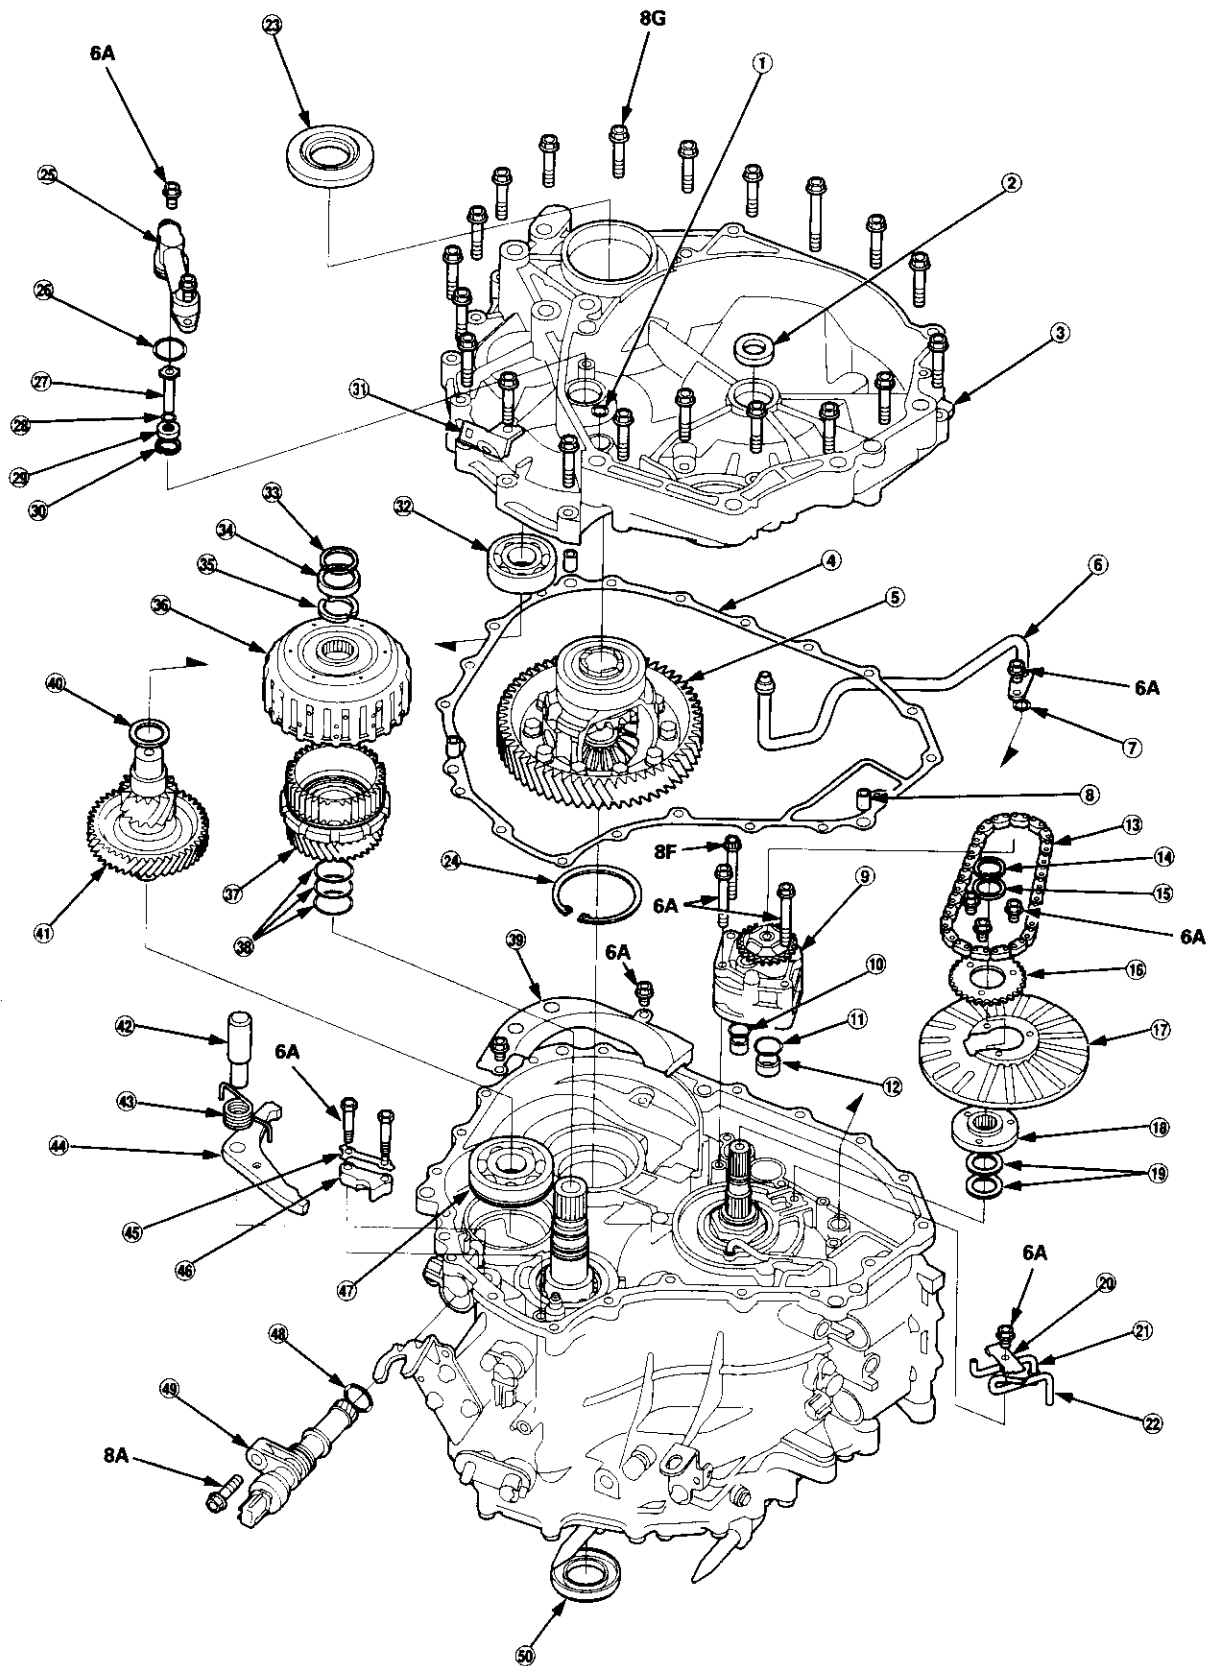



- ① O-RING Replace.
- ② OIL SEAL Replace.
- ③ FLYWHEEL HOUSING
- ④ FLYWHEEL HOUSING GASKET Replace.
- ⑤ DIFFERENTIAL ASSEMBLY
- ⑥ ATF PASSAGE PIPE ASSEMBLY
- ⑦ O-RING Replace.
- ⑧ DOWEL PIN
- ⑨ ATF PUMP ASSEMBLY
- ⑩ DOWEL PIN, 18 x 10 mm
- ⑪ O-RING Replace.
- ⑫ DOWEL PIN, 22 x 10 mm
- ⑬ ATF PUMP DRIVE CHAIN
- ⑭ SNAP RING
- ⑮ THRUST SHIM, 22 x 28 mm Selective part
- ⑯ ATF PUMP DRIVE SPROCKET
- ⑰ PITOT FLANGE
- ⑱ ATF PUMP DRIVE SPROCKET HUB
- ⑲ THRUST WASHERS
- ⑳ PITOT PIPE BRACKET
- ㉑ PITOT LUBRICATION PIPE
- ㉒ PITOT PIPE
- ㉓ OIL SEAL Replace.
- ㉔ SET RING, 80 mm Selective part
- ㉕ ATF PASSAGE PIPE HOLDER ASSEMBLY


- ㉖ O-RING Replace.
- ㉗ START CLUTCH ATF FEED PIPE
- ㉘ O-RING Replace.
- ㉙ FEED PIPE FLANGE
- ㉚ SNAP RING
- ㉛ CONNECTOR BRACKET
- ㉜ BALL BEARING
- ㉝ SNAP RING
- ㉞ COTTER RETAINER
- ㉟ COTTERS, 25.5 mm Selective part
- ㊱ START CLUTCH ASSEMBLY
- ㊲ SECONDARY DRIVE GEAR ASSEMBLY
- ㊳ O-RINGS Replace.
- ㊴ DIFFERENTIAL COVER
- ㊵ THRUST SHIM, 25 x 35 mm Selective part
- ㊶ SECONDARY GEAR SHAFT
- ㊷ PARKING BRAKE PAWL SHAFT
- ㊸ PARKING BRAKE PAWL SPRING
- ㊹ PARKING BRAKE PAWL
- ㊺ TONGUED WASHER Replace.
- ㊻ PARKING BRAKE ROD HOLDER
- ㊼ BALL BEARING
- ㊽ O-RING Replace.
- ㊾ VEHICLE SPEED SENSOR
- ㊿ OIL SEAL Replace.

TORQUE SPECIFICATIONS

Bolt/Nut No.	Torque Value	Size	Remarks
6A	12 N·m (1.2 kgf·m, 8.7 lbf·ft)	6 x 1.0 mm	
8A	22 N·m (2.2 kgf·m, 16 lbf·ft)	8 x 1.25 mm	
8F	26 N·m (2.7 kgf·m, 20 lbf·ft)	8 x 1.25 mm	
8G	29 N·m (3.0 kgf·m, 22 lbf·ft)	8 x 1.25 mm	

Illustrated Index

Right Side Cover/Intermediate Housing

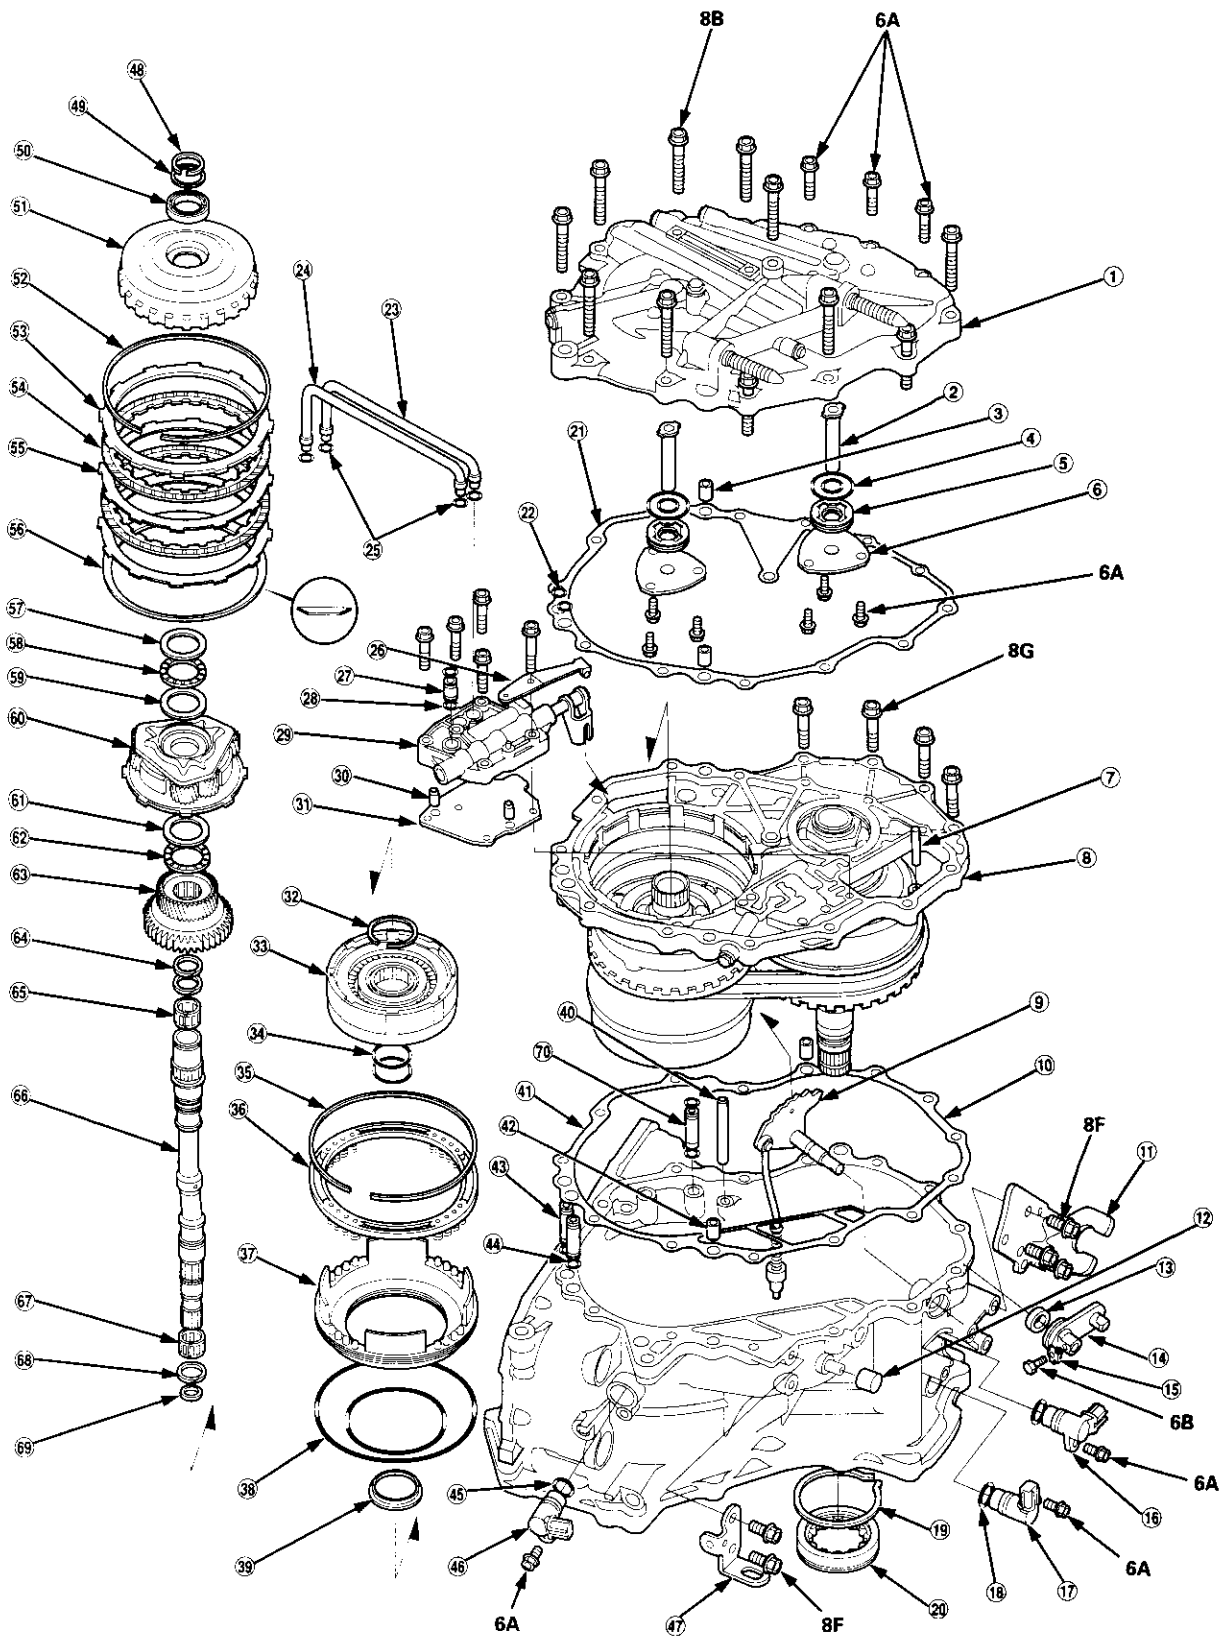



- ① RIGHT SIDE COVER
- ② ATF FEED PIPE
- ③ DOWEL PIN
- ④ O-RING Replace.
- ⑤ FEED PIPE FLANGE
- ⑥ FEED PIPE FLANGE PLATE
- ⑦ ROLLER
- ⑧ INTERMEDIATE HOUSING ASSEMBLY
- ⑨ CONTROL SHAFT ASSEMBLY
- ⑩ TRANSMISSION HOUSING
- ⑪ SHIFT CABLE BRACKET
- ⑫ BREATHER CAP
- ⑬ OIL SEAL Replace.
- ⑭ CONTROL LEVER
- ⑮ LOCK WASHER Replace.
- ⑯ SECONDARY GEAR SHAFT SPEED SENSOR
- ⑰ DRIVEN PULLEY SPEED SENSOR
- ⑱ O-RING Replace.
- ⑲ SNAP RING
- ⑳ TRANSMISSION HOUSING DRIVEN PULLEY
SHAFT ROLLER BEARING
- ㉑ RIGHT SIDE COVER GASKET Replace.
- ㉒ O-RING Replace.
- ㉓ MANUAL VALVE BODY LINE A
- ㉔ MANUAL VALVE BODY LINE B
- ㉕ O-RING Replace.
- ㉖ DETENT SPRING
- ㉗ ATF FEED PIPE
- ㉘ O-RING Replace.
- ㉙ MANUAL VALVE BODY
- ㉚ DOWEL PIN
- ㉛ MANUAL VALVE BODY SEPARATOR PLATE
- ㉜ SNAP RING
- ㉝ FORWARD CLUTCH ASSEMBLY
- ㉞ O-RING Replace.
- ㉟ SNAP RING
- ㊱ SPRING RETAINER/RETURN SPRING ASSEMBLY
- ㊲ REVERSE BRAKE PISTON
- ㊳ O-RING Replace.
- ㊴ SNAP RING RETAINER
- ㊵ ATF FEED PIPE
- ㊶ TRANSMISSION HOUSING GASKET Replace.
- ㊷ DOWEL PIN
- ㊸ ATF FEED PIPE
- ㊹ O-RING Replace.
- ㊺ O-RING Replace.
- ㊻ DRIVE PULLEY SPEED SENSOR
- ㊼ TRANSMISSION HANGER
- ㊽ SNAP RING
- ㊾ THRUST SHIM, 25 x 31 mm Selective part
- ㊿ BALL BEARING
- ① RING GEAR
- ② SNAP RING
- ③ REVERSE BRAKE END PLATE Selective part
- ④ REVERSE BRAKE DISC
- ⑤ REVERSE BRAKE PLATE
- ⑥ DISC SPRING
- ⑦ THRUST WASHER
- ⑧ THRUST NEEDLE BEARING
- ⑨ THRUST WASHER
- ⑩ CARRIER ASSEMBLY
- ⑪ THRUST WASHER
- ⑫ THRUST NEEDLE BEARING
- ⑬ SUN GEAR
- ⑭ SEALING RING Replace.
- ⑮ NEEDLE BEARING
- ⑯ INPUT SHAFT
- ⑰ NEEDLE BEARING
- ⑱ SEALING RING Replace.
- ⑲ SEALING RING (RUBBER) Replace.
- ⑳ ATF FEED PIPE

TORQUE SPECIFICATIONS


Bolt/Nut No.	Torque Value	Size	Remarks
6A	12 N·m (1.2 kgf·m, 8.7 lbf·ft)	6 x 1.0 mm	
6B	14 N·m (1.4 kgf·m, 10 lbf·ft)	6 x 1.0 mm	
8B	37 N·m (3.8 kgf·m, 27 lbf·ft)	8 x 1.25 mm	
8F	26 N·m (2.7 kgf·m, 20 lbf·ft)	8 x 1.25 mm	
8G	29 N·m (3.0 kgf·m, 22 lbf·ft)	8 x 1.25 mm	

Transmission Housing/Lower Valve Body Assembly

Removal

NOTE:


- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air.
- Blow out all passages.
- When removing the lower valve body, replace the following:
 - O-rings
 - ATF pan gasket
 - Sealing washers

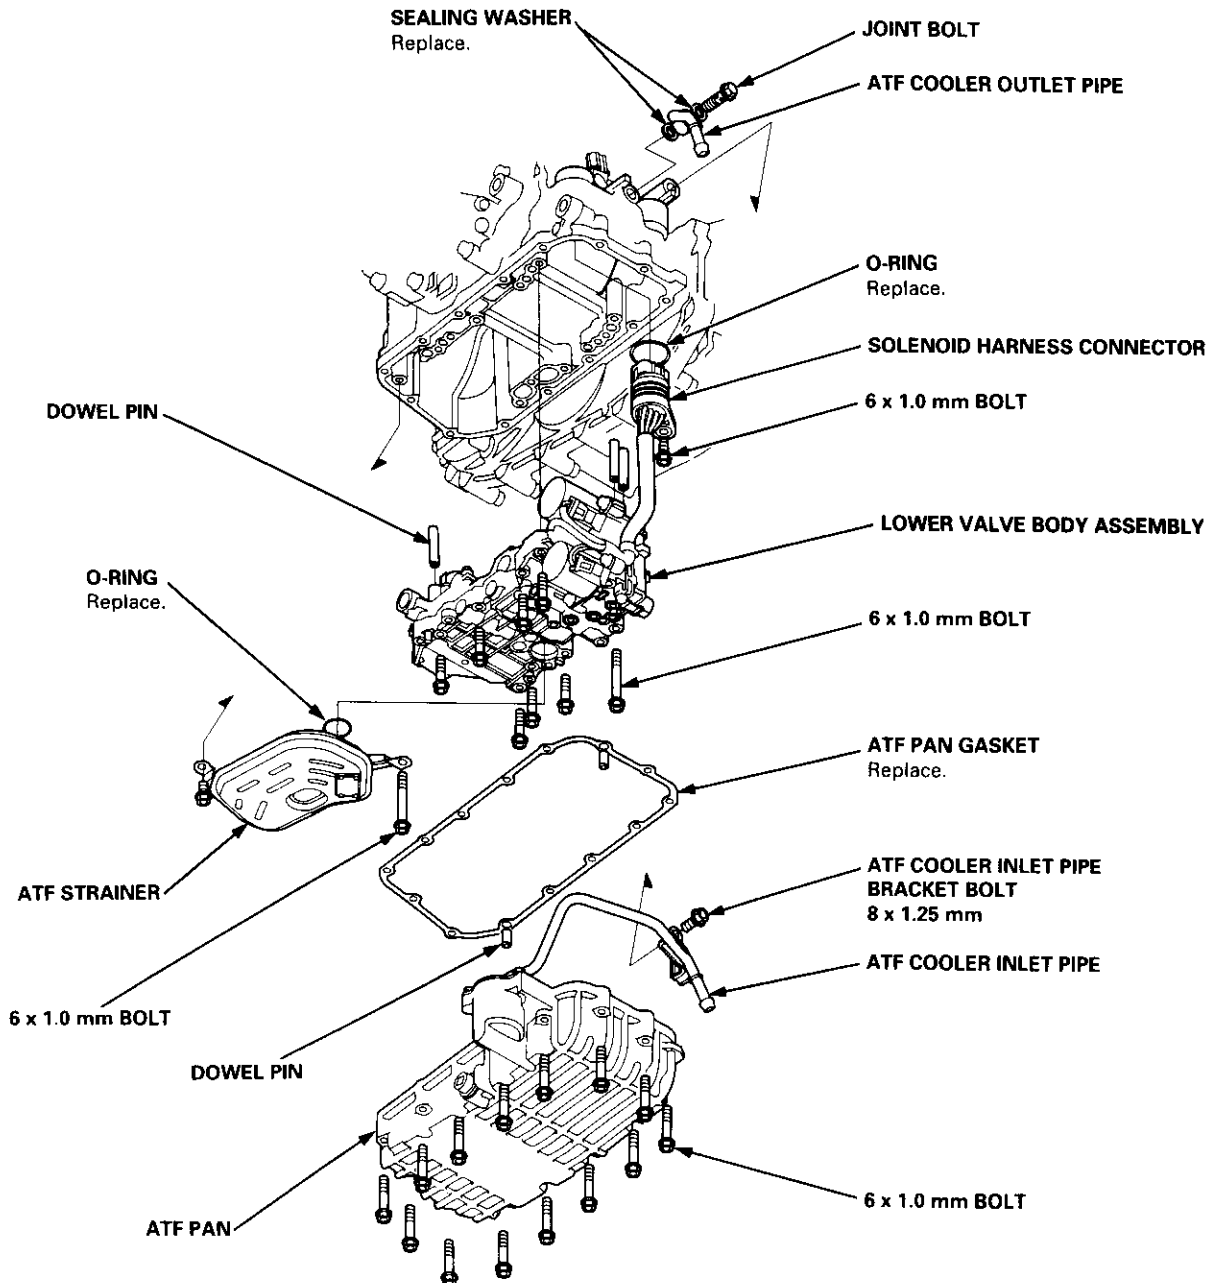



1. Remove the ATF cooler inlet pipe bracket bolt.
2. Remove the ATF cooler outlet pipe.
3. Remove the ATF pan (fourteen bolts).
4. Remove the ATF strainer (two bolts).
5. Remove the one bolt securing the solenoid harness connector, then push the connector.
6. Remove the lower valve body (eight bolts).
7. Clean the inlet opening of the ATF strainer thoroughly with compressed air, then check that it is in good condition, and the inlet opening is not clogged.

ATF STRAINER

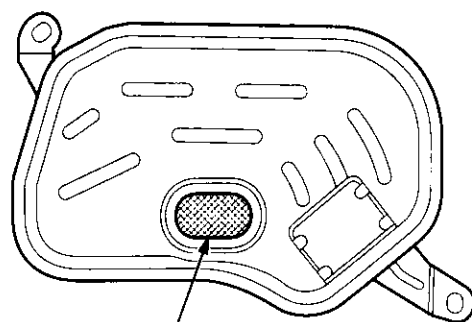

INLET OPENING

8. Replace the ATF strainer if it is clogged or damaged.


NOTE: The ATF strainer can be reused if it is not clogged.

Transmission Housing/Flywheel Housing

Removal


NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air.
- Blow out all passages.
- When removing the transmission housing/flywheel housing, replace the following:
 - O-rings
 - Secondary drive gear assembly
 - Start clutch assembly
 - Flywheel housing gasket

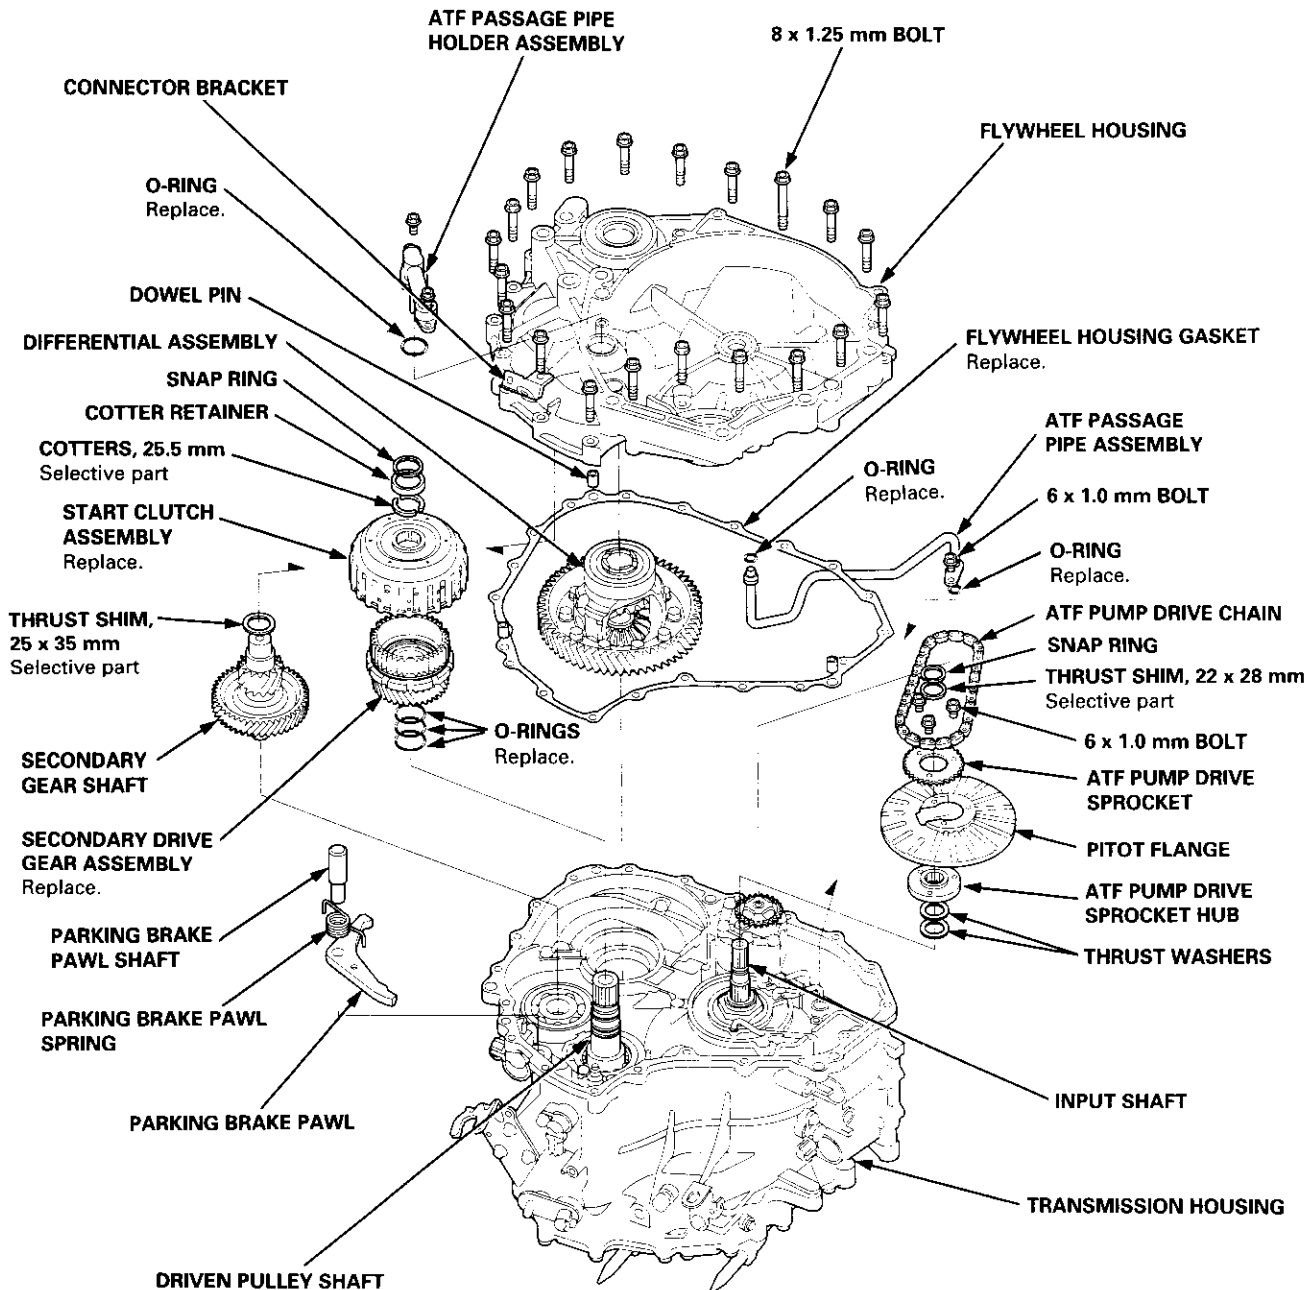



1. Remove the ATF passage pipe holder assembly.
2. Remove the flywheel housing (twenty bolts).
3. Remove the ATF passage pipe assembly (one bolt).
4. Remove the ATF pump drive sprocket (three bolts), then remove the ATF pump drive chain.
5. Move the pitot flange toward its cutout, then remove the pitot flange.

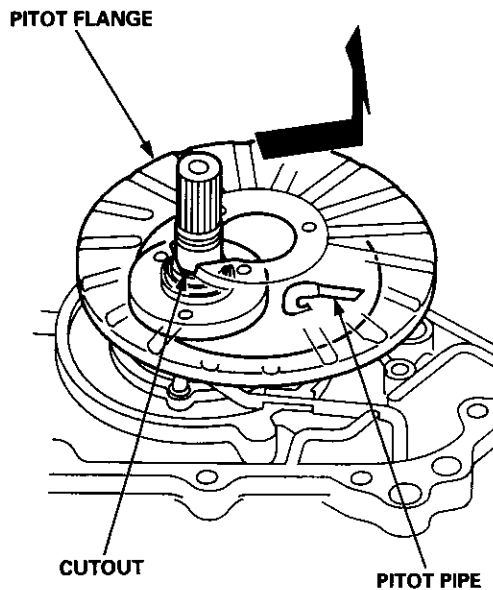


6. Remove the snap ring securing the ATF pump drive sprocket hub, then remove the 22 x 28 mm thrust shim, the ATF pump drive sprocket hub and the thrust washers.
7. Remove the differential assembly.
8. Remove the parking brake pawl shaft, the parking brake pawl spring, and the parking brake pawl.
9. Remove the snap ring securing the start clutch, then remove the cotter retainer and the cotters.


10. Set the special tool on the start clutch, and attach the pawl of the special tool to the parking gear securely as shown.

CAUTION:

- Do not place the pawl of the special tool on the start clutch guide. If the pawl of the special tool contacts the start clutch guide, the start clutch guide may be damaged.
- Be sure not to allow dust and other foreign particles to enter into the driven pulley shaft.

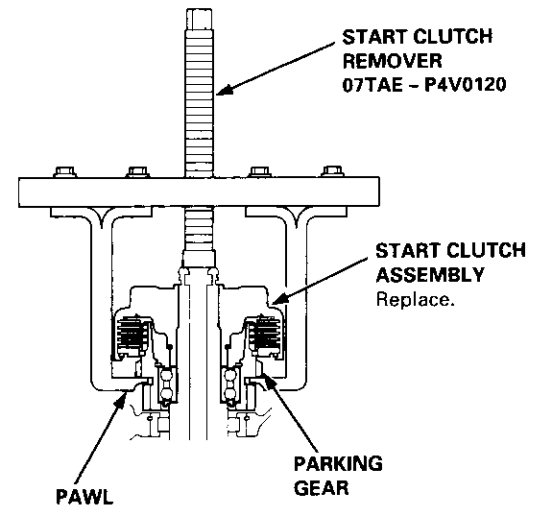

11. Remove the start clutch and the secondary drive gear assembly using the special tool, then remove the secondary gear shaft.

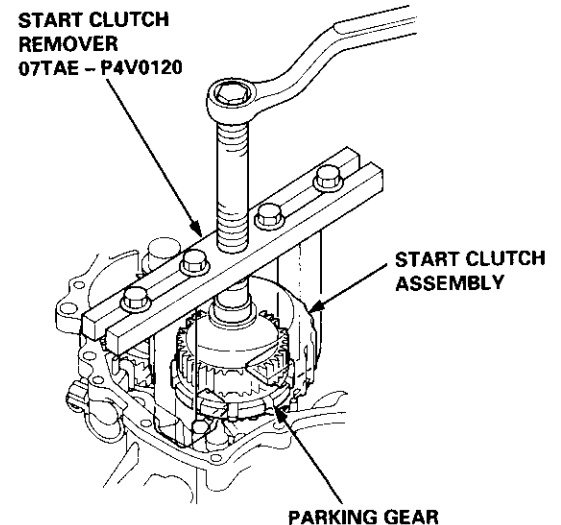


Right Side Cover/Intermediate Housing

Removal

NOTE:


- Clean all parts in solvent or carburetor cleaner, and dry with compressed air.
- Blow out all passages.
- When removing the right side cover/intermediate housing, replace the following parts:
 - O-rings
 - Right side cover gasket
 - Transmission housing gasket
 - Sealing rings
 - Sealing washers

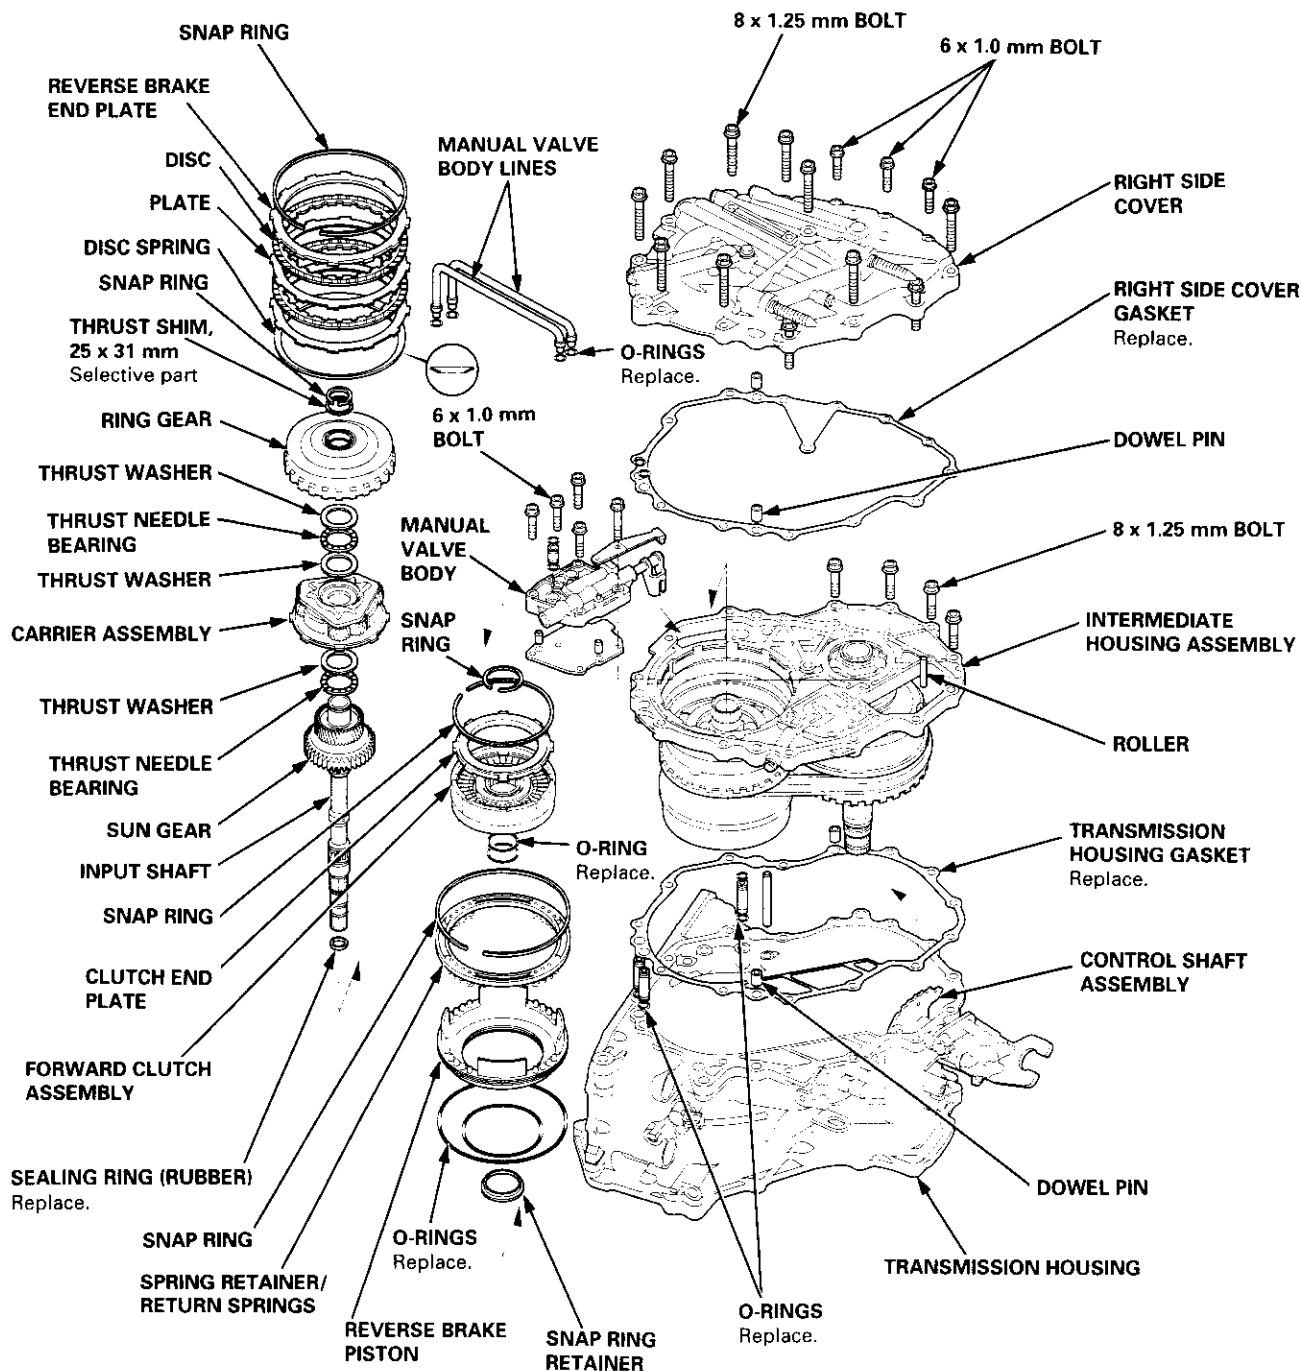




1. Remove the right side cover (three 6 mm bolts, eleven 8 mm bolts).
2. Remove the manual valve body lines A and B.
3. Remove the snap ring securing the ring gear, then remove the thrust shim and the ring gear.
4. Remove the snap ring securing the reverse brake discs and plates, then remove the reverse brake end plate, brake discs, brake plates, and disc spring.
5. Remove the carrier with the thrust washers and the thrust needle bearing, from the forward clutch.
6. Remove the sun gear and the input shaft as a sub assembly by pulling it.
The sun gear is press fitted tightly into input shaft.
7. Remove the snap ring securing the forward clutch, and remove the snap ring securing the forward clutch end plate, then remove the forward clutch end plate.
8. Reinstall the carrier on the forward clutch, then secure the carrier with the snap ring on the forward clutch end plate.
9. Remove the forward clutch and carrier assembly together.
10. Install the special tool to remove the snap ring securing the reverse brake return spring retainer as shown.

**REVERSE BRAKE
SPRING COMPRESSOR
07TAE - P4V0110**

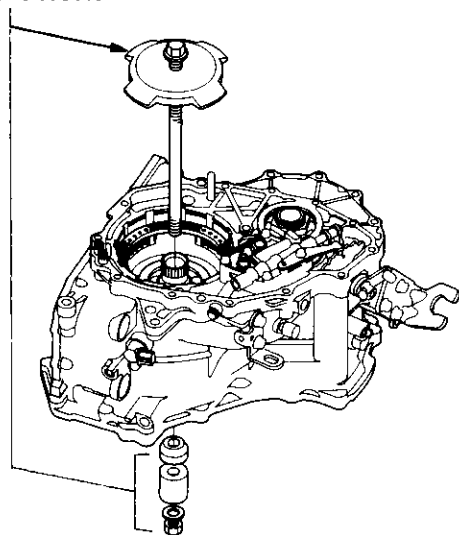


11. Compress the return springs, then remove the snap ring.

CAUTION: If the spring retainer tab is on the reverse brake piston, the spring retainer may be damaged. Be sure the spring retainer tab is not on the piston.

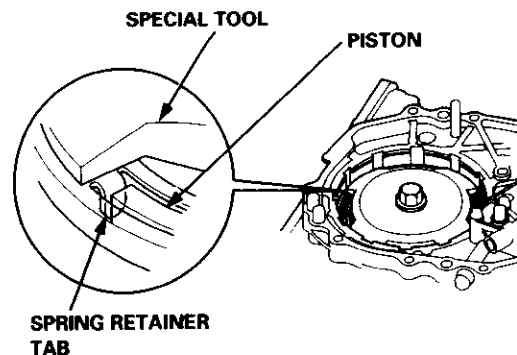

12. Remove the special tool, then remove the spring retainer/return spring assembly.
13. Remove the sealing bolt securing the reverse brake pressure inspection hole.
14. Apply air pressure to the inspection hole to remove the reverse brake piston.

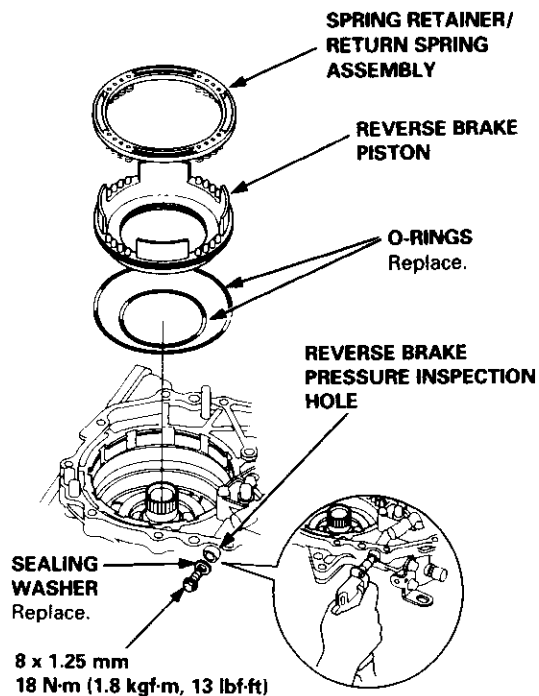


15. Remove the snap ring retainer from the drive pulley shaft.
16. Remove the manual valve body (five bolts).
17. Remove the roller, and push the control shaft assembly toward the outside of the transmission housing, then remove the intermediate housing (four bolts).

Manual Valve Body

Disassembly/Inspection/Reassembly

NOTE:


- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Coat all parts with CVT Fluid during assembly.

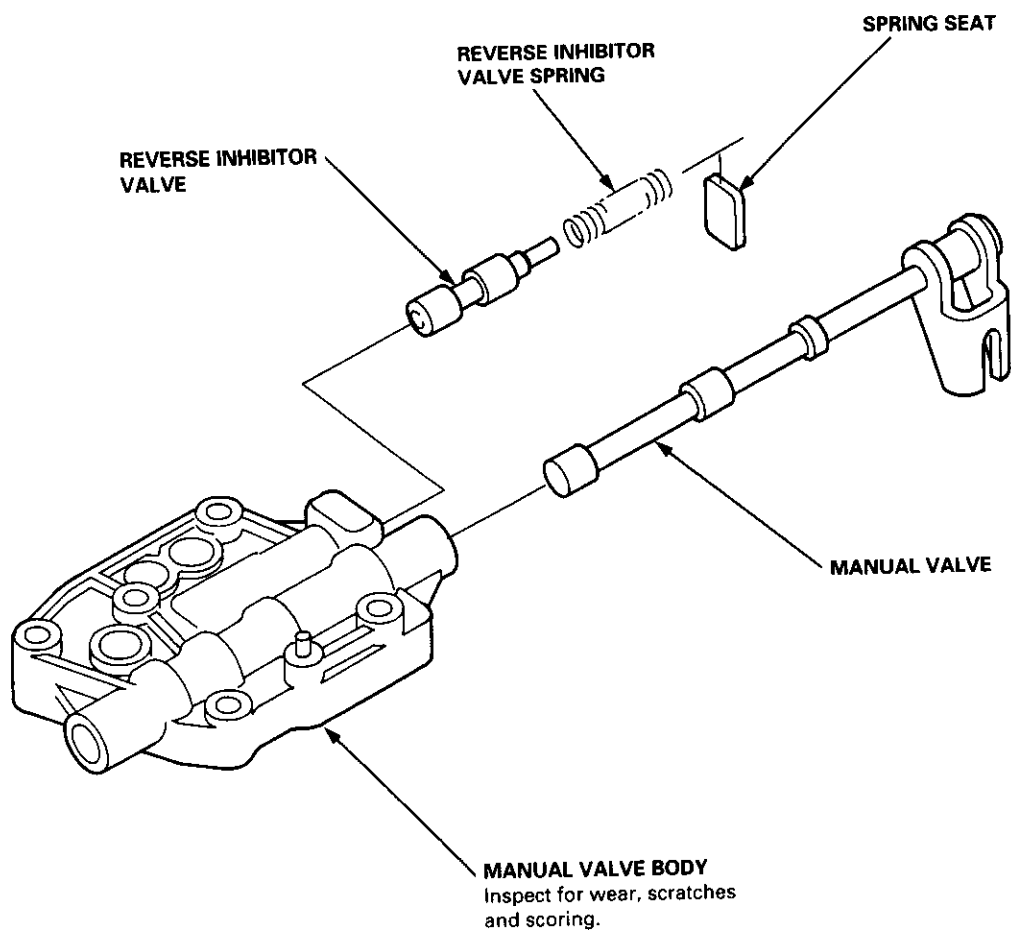

Forward Clutch




Illustrated Index

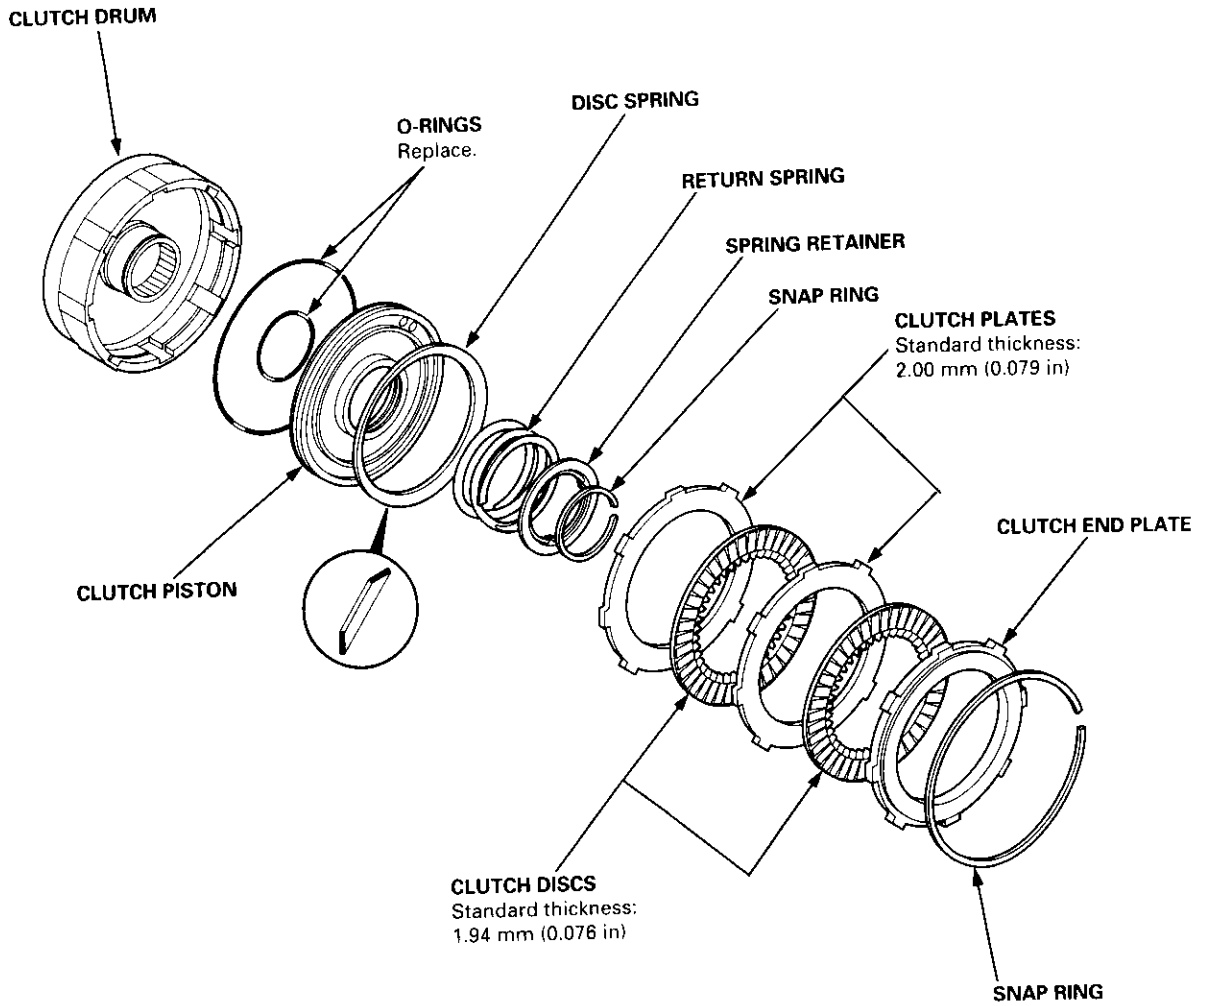


Forward Clutch

Disassembly


1. Remove the snap ring, then remove the clutch end plate, clutch discs, and plates.

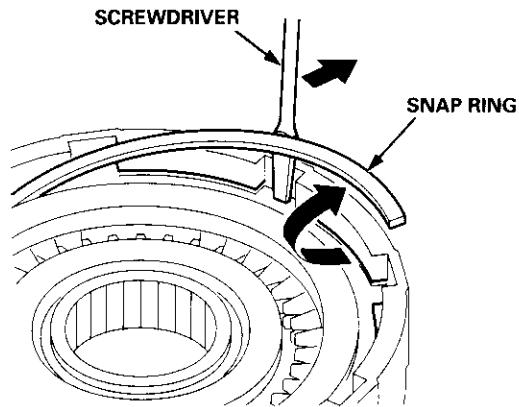



2. Remove the disc spring.

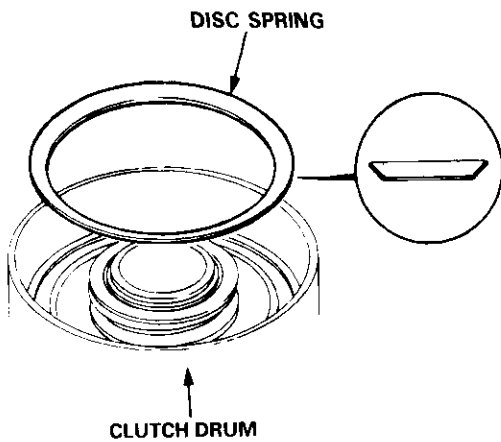

3. Install the special tools as shown.

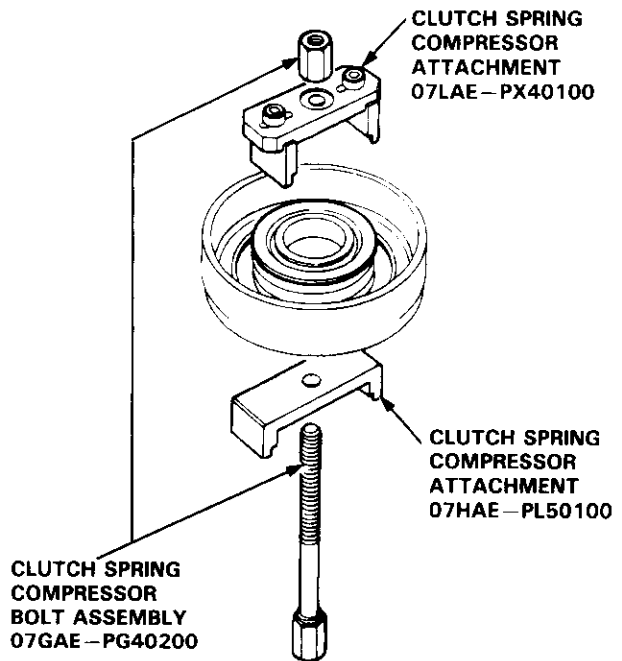


CAUTION: If either end of the special tool is set over an area of the spring retainer which is unsupported by the return spring, the retainer may be damaged. Be sure the special tool is adjusted to have full contact with the spring retainer.

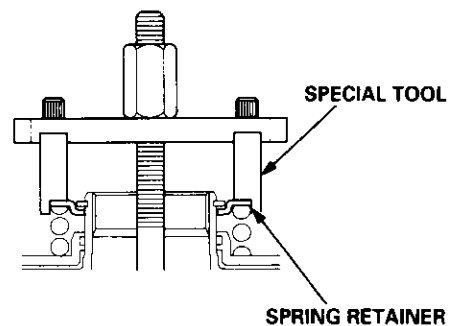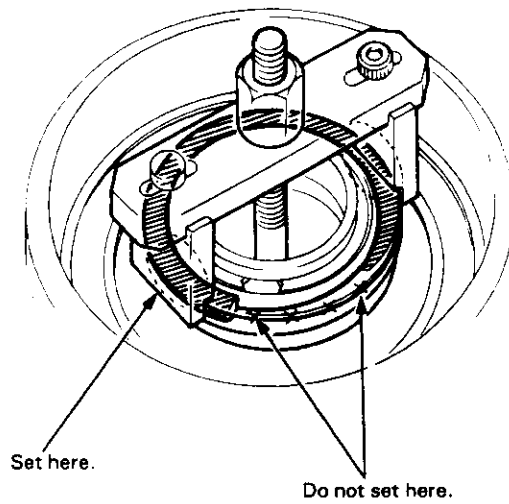





4. Compress the return spring.

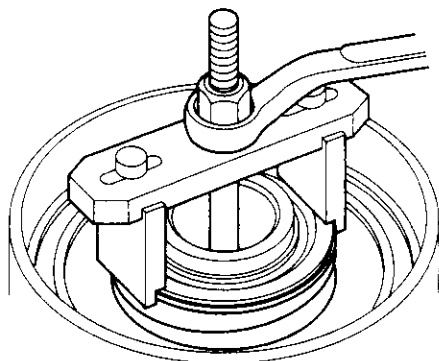

5. Remove the snap ring. Then remove the special tools, spring retainer, and return spring.

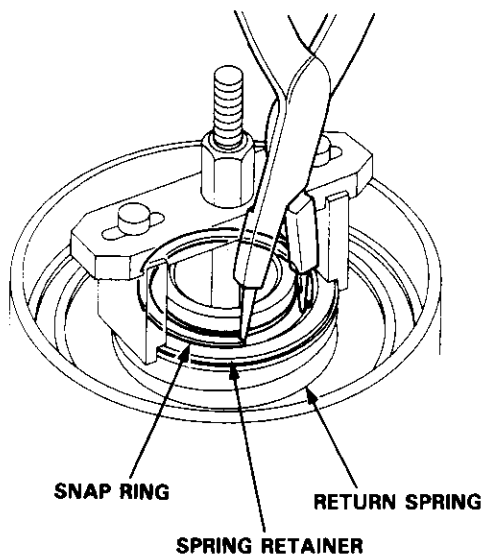

6. Wrap a shop rag around the clutch drum, and apply air pressure to the fluid passage to remove the piston. Place a finger tip on the other end while applying air pressure.

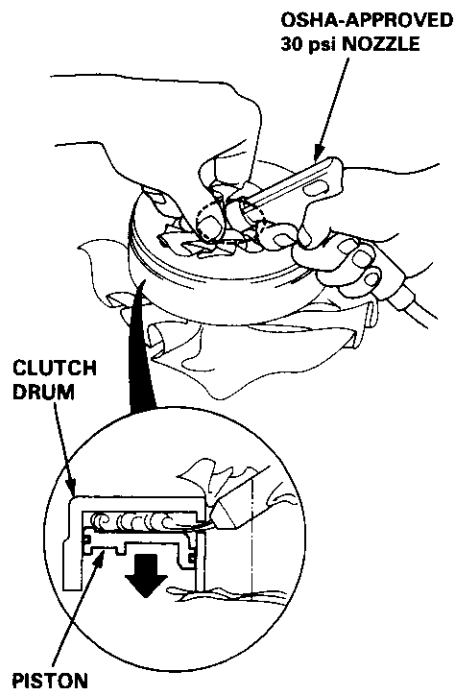


Forward Clutch

Reassembly


NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry them with compressed air.
- Blow out all passages.
- Lubricate all parts with CVT Fluid before reassembly.

1. Inspect the check valve; if it's loose, replace the piston.

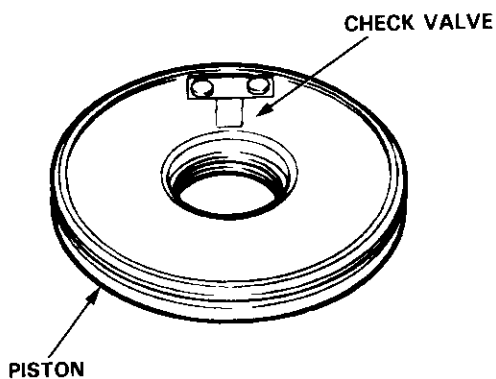


2. Install new O-rings on the clutch piston.

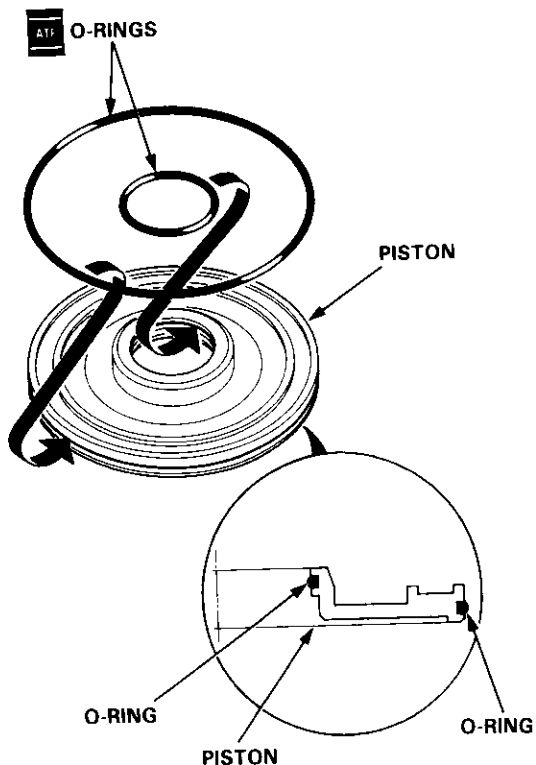


3. Install the piston in the clutch drum. Apply pressure and rotate to ensure proper seating.

NOTE: Lubricate the piston O-ring with CVT Fluid before installing.

CAUTION: Do not pinch the O-ring by installing the piston with too much force.

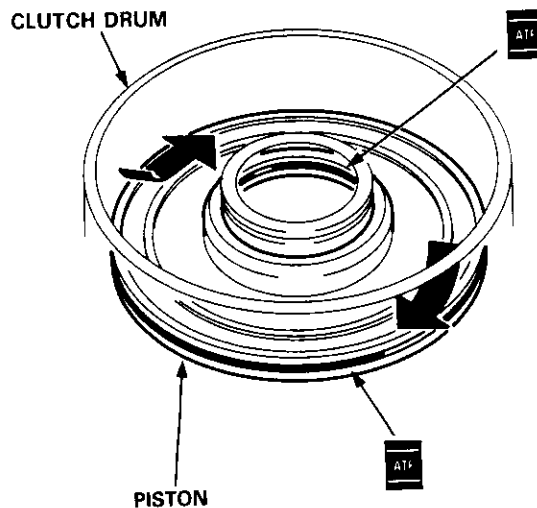


4. Install the return spring and spring retainer, and position the snap ring on the retainer.

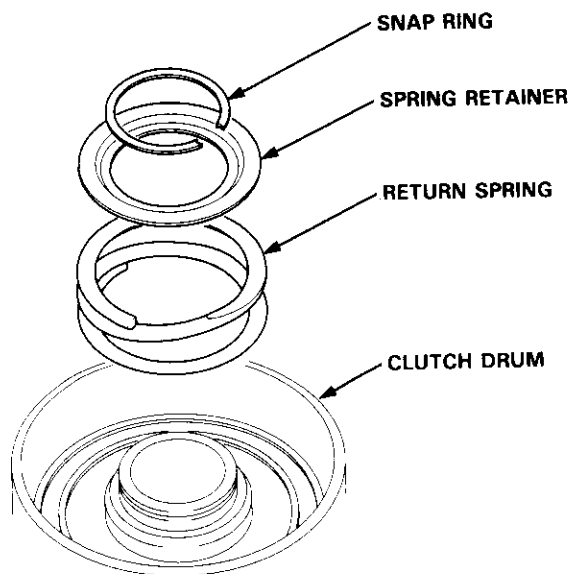





5. Install the special tools as shown.

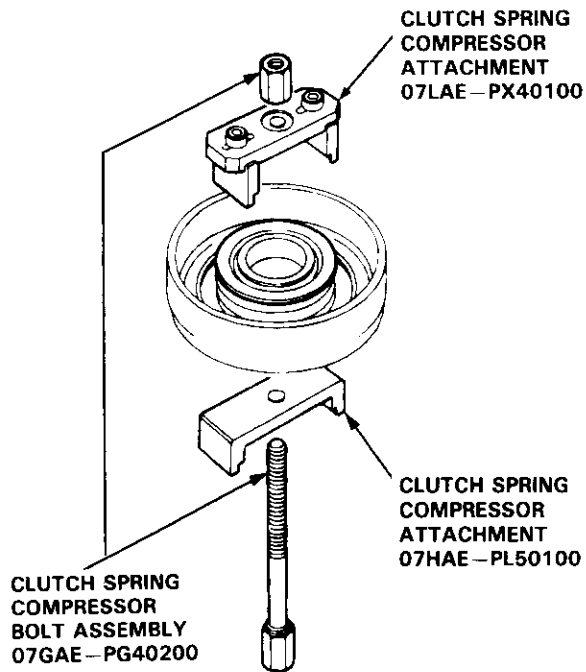


CAUTION: If either end of the special tool is set over an area of the spring retainer which is unsupported by the return spring, the retainer may be damaged. Be sure the special tool is adjusted to have full contact with the spring retainer.

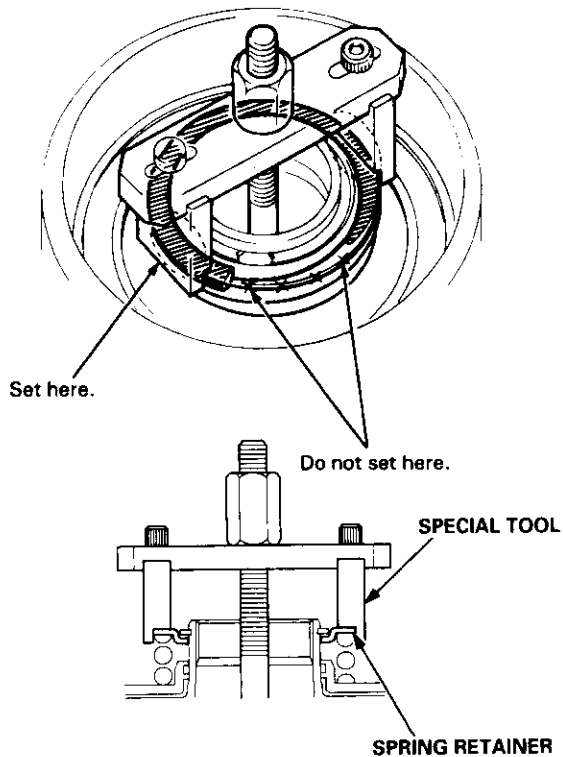

6. Compress the return spring.

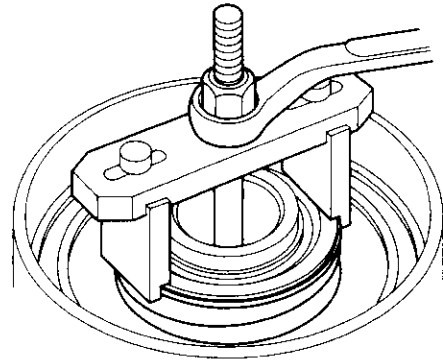

7. Install the snap ring.

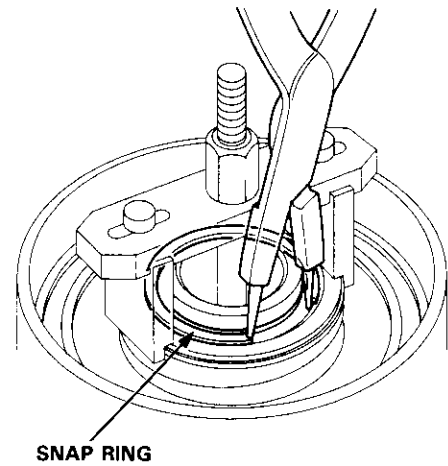

8. Remove the special tools.


(cont'd)

Forward Clutch

Reassembly (cont'd)

9. Install the disc spring.


NOTE: Install the disc spring in the direction shown.

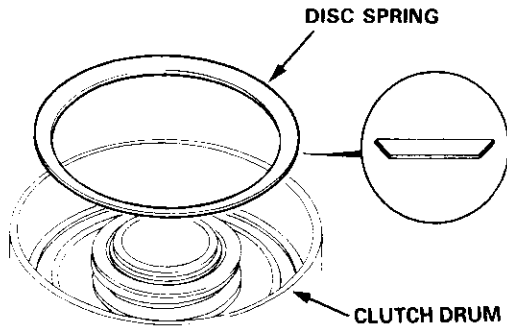


10. Soak the clutch discs thoroughly in CVT Fluid for a minimum of 30 minutes.

11. Starting with a clutch plate, alternately install the clutch plates and discs. Install the clutch end plate with flat side toward the disc.


NOTE: Before installing the plates and discs, make sure the inside of the clutch drum is free of dirt or other foreign matter.

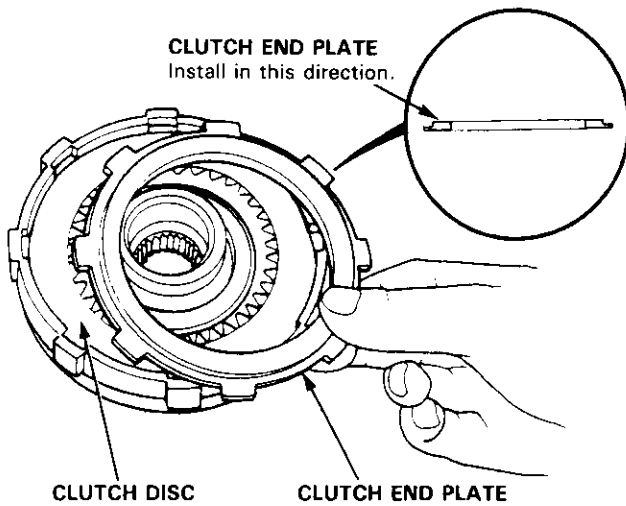

12. Install the snap ring.

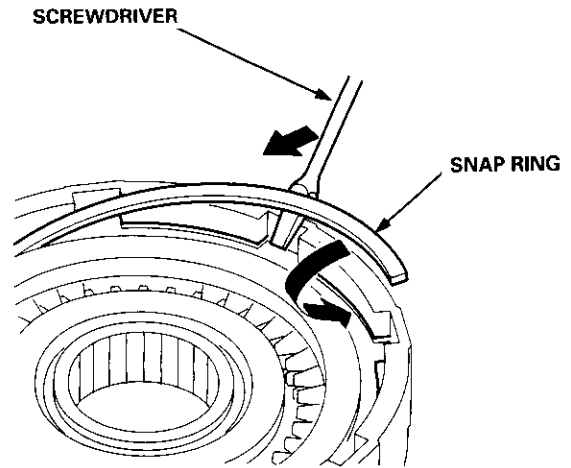

13. Verify that the snap ring end gap is correct.

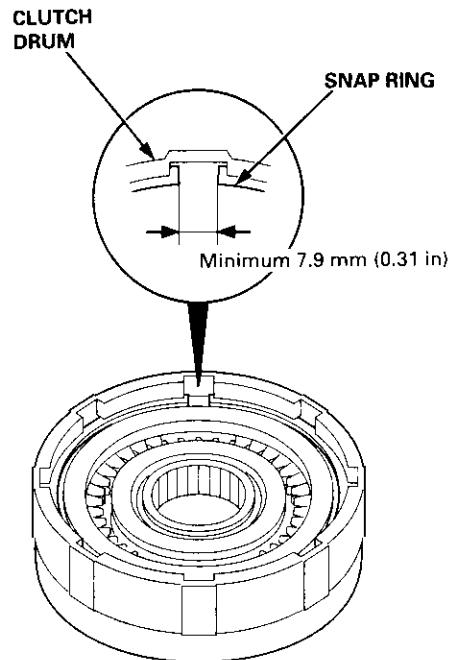




14. Measure the clearance between the clutch end plate and top disc with a dial indicator. Zero the dial indicator with the clutch end plate lowered, and lift it up to the snap ring. The distance that the clutch end plate moves is the clearance between the clutch end plate and top disc.

NOTE: Take measurements in at least three places, and use the average as the actual clearance.


Clutch End Plate-to-Top Disc Clearance:

STANDARD: 0.6 – 0.8 mm (0.024 – 0.031 in)

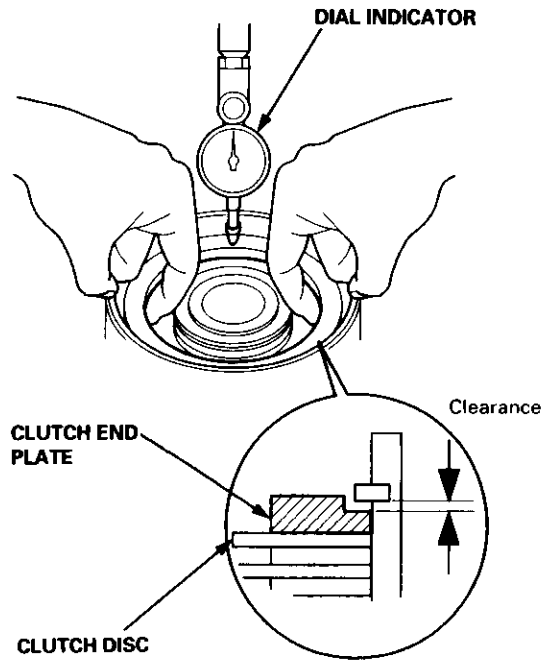

15. If the clearance is out of tolerance, select a new clutch end plate from the following table, then recheck.

NOTE: If the thickest clutch end plate is installed but the clearance is still over the standard, replace the clutch discs and clutch plates.

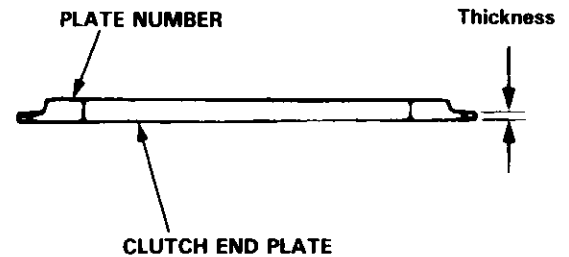

FORWARD CLUTCH END PLATE



Plate No.	Part Number	Thickness
1 or 15	22561 – P4V – 003	3.5 mm (0.138 in)
2 or 16	22562 – P4V – 003	3.6 mm (0.142 in)
3 or 17	22563 – P4V – 003	3.7 mm (0.146 in)
4 or 18	22564 – P4V – 003	3.8 mm (0.150 in)
5 or 19	22565 – P4V – 003	3.9 mm (0.154 in)
6 or 20	22566 – P4V – 003	4.0 mm (0.157 in)
7 or 21	22567 – P4V – 003	4.1 mm (0.161 in)
8 or 22	22568 – P4V – 003	4.2 mm (0.165 in)
9 or 23	22569 – P4V – 003	4.3 mm (0.169 in)
10 or 24	22570 – P4V – 003	4.4 mm (0.173 in)
11 or 25	22571 – P4V – 003	4.5 mm (0.177 in)
12 or 26	22572 – P4V – 003	4.6 mm (0.181 in)
13 or 27	22573 – P4V – 003	4.7 mm (0.185 in)

16. After replacing the clutch end plate, make sure that the clearance is within tolerance.



Secondary Gear Shaft

25 x 35 mm Thrust Shim Selection

1. Measure the distance between the flywheel housing surface and the ball bearing as shown, then note the measurement (Measurement A).

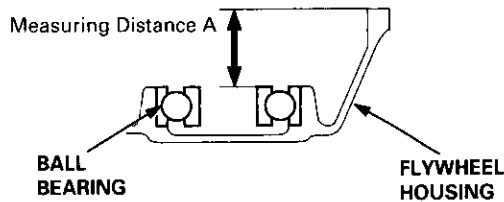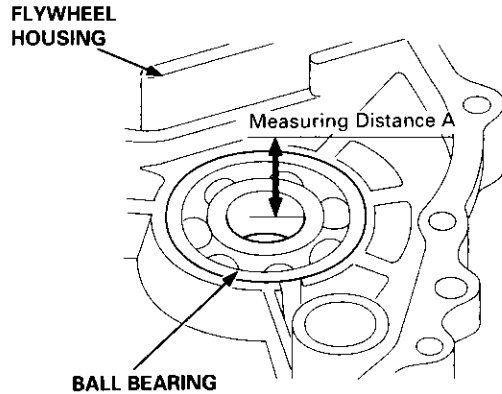

2. Install the secondary gear shaft in the transmission housing.
3. Measure the distance between the transmission housing surface and the thrust washer mounting surface of the secondary gear shaft as shown, then note the measurement (Measurement B).

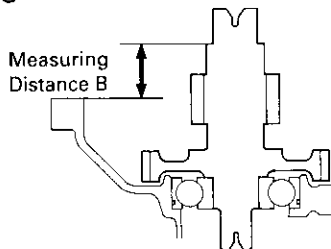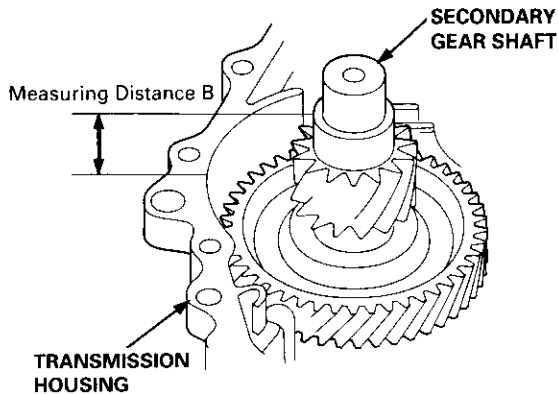

4. Calculate 25 x 35 mm thrust shim thickness by following formula.

FORMULA:

$$\begin{aligned} & \text{25 x 35 mm Thrust Shim Thickness} \\ & = \text{Measurement A} - \text{Measurement B} + \text{Flywheel} \\ & \quad \text{Housing Gasket Thickness: 0.5 mm (0.020 in)} \end{aligned}$$

Example:

Measurement A: 32.7 mm (1.287 in)

Measurement B: 30.1 mm (1.185 in)

$$\begin{aligned} & \text{25 x 35 mm Thrust Shim Thickness} \\ & = 32.7 \text{ mm (1.287 in)} - 30.1 \text{ mm (1.185 in)} \\ & \quad + 0.5 \text{ mm (0.020 in)} \\ & = 3.1 \text{ mm (0.122 in)} \end{aligned}$$

Select 25 x 35 mm Thrust Shim D.


5. Select the 25 x 35 mm thrust shim from the following table.

THRUST SHIM, 25 x 35 mm

No.	Part Number	Thickness
A	90551 - P4V - 000	2.8 mm (0.110 in)
B	90552 - P4V - 000	2.9 mm (0.114 in)
C	90553 - P4V - 000	3.0 mm (0.118 in)
D	90554 - P4V - 000	3.1 mm (0.122 in)
E	90555 - P4V - 000	3.2 mm (0.126 in)
F	90556 - P4V - 000	3.3 mm (0.130 in)
G	90557 - P4V - 000	3.4 mm (0.134 in)
H	90558 - P4V - 000	3.5 mm (0.138 in)
I	90559 - P4V - 000	3.6 mm (0.142 in)
J	90560 - P4V - 000	3.7 mm (0.146 in)
K	90561 - P4V - 000	3.8 mm (0.150 in)




Illustrated Index

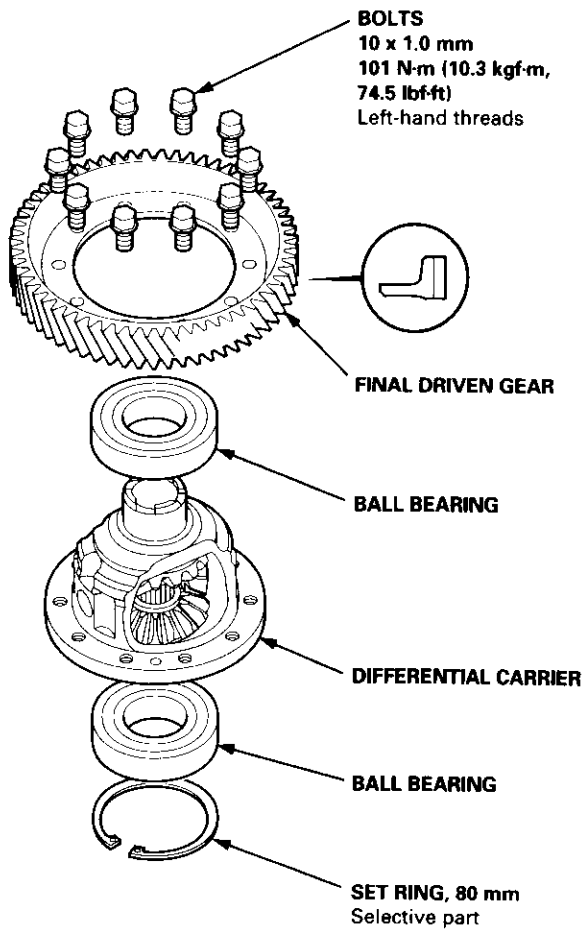

Backlash Inspection

1. Place the differential assembly on V-blocks, and install both axles.
2. Check the backlash of both pinion gears.

Standard (New): 0.05 – 0.15 mm (0.002 – 0.006 in)

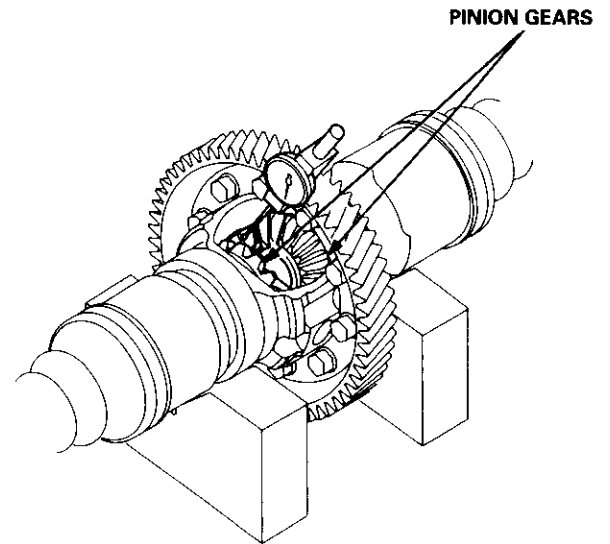


3. If the backlash is out of tolerance, replace the differential carrier.

Differential


Bearing Replacement

NOTE: Check the bearings for wear and rough rotation. If the bearings are OK, removal is not necessary.

1. Remove the ball bearings using a bearing puller.

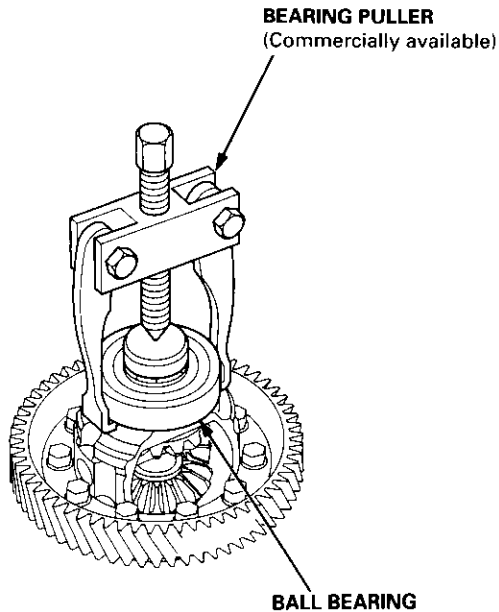


2. Install the new ball bearings using the special tool with a press as shown.

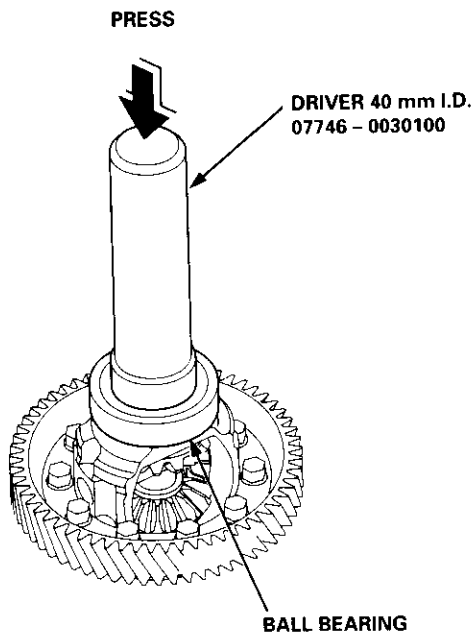

Differential Carrier Replacement

1. Remove the final driven gear from the differential carrier.

NOTE: The final driven gear bolts have left-hand threads.

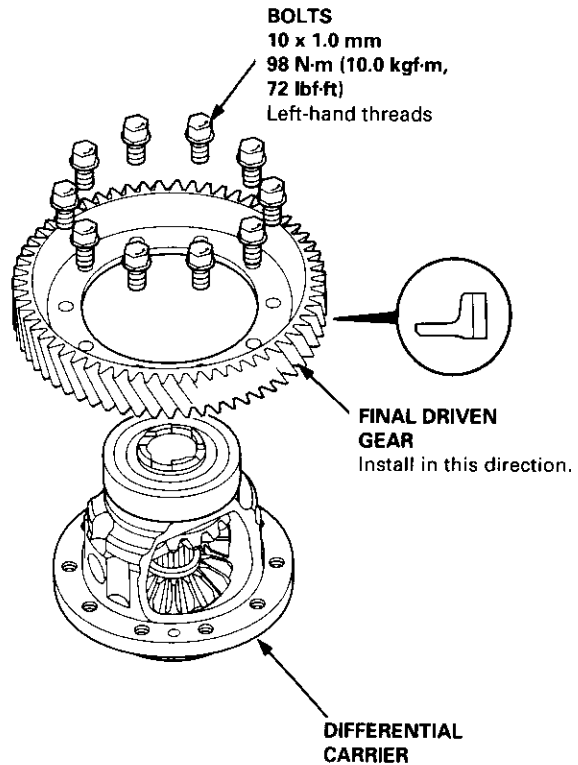


2. Install the final driven gear with its chamfered side on the inner bore facing the differential carrier.
3. Torque the bolts to the specified torque in a crisscross pattern.

TORQUE: 98 N·m (10.0 kgf·m, 72 lbf·ft)




Oil Seal Removal

1. Remove the differential assembly.
2. Remove the oil seal from the transmission housing.

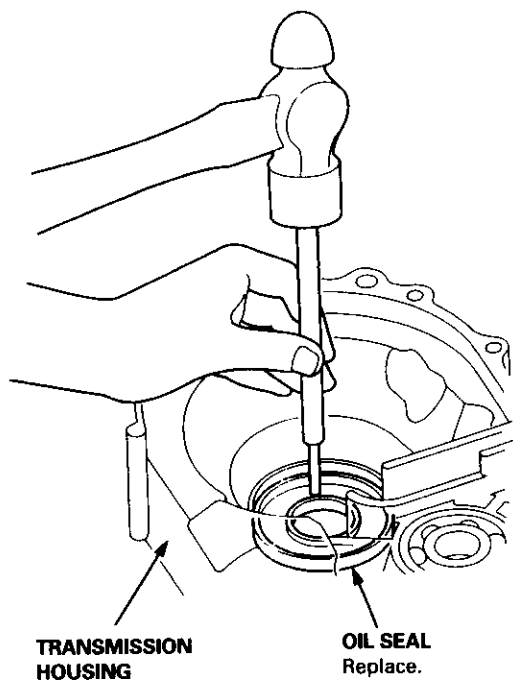


3. Remove the oil seal from the flywheel housing.

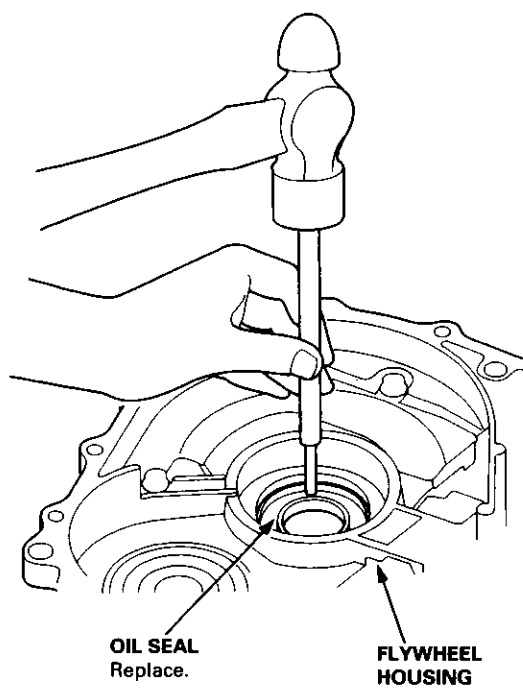


Oil Seal Installation/Side Clearance

1. Install a 2.50 mm (0.098 in) thick 80 mm wide set ring in the transmission housing.

NOTE: Do not install the oil seal yet.

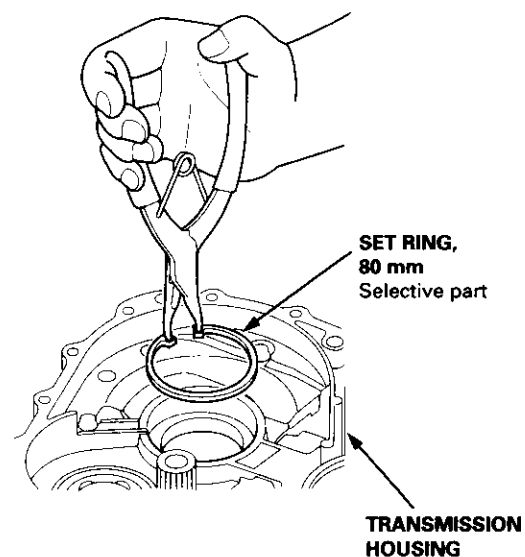

2. Install the differential assembly into the transmission housing using the special tool as shown.

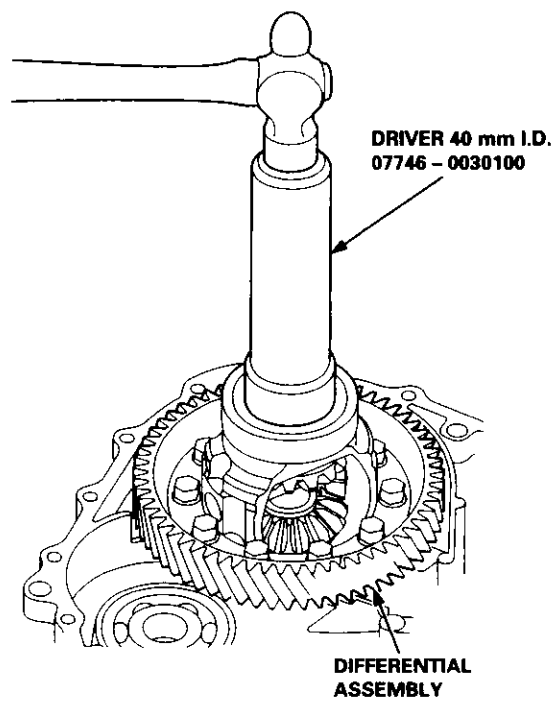


(cont'd)

Differential


Oil Seal Installation/Side Clearance (cont'd)

3. Install the flywheel housing, and tighten the bolts.

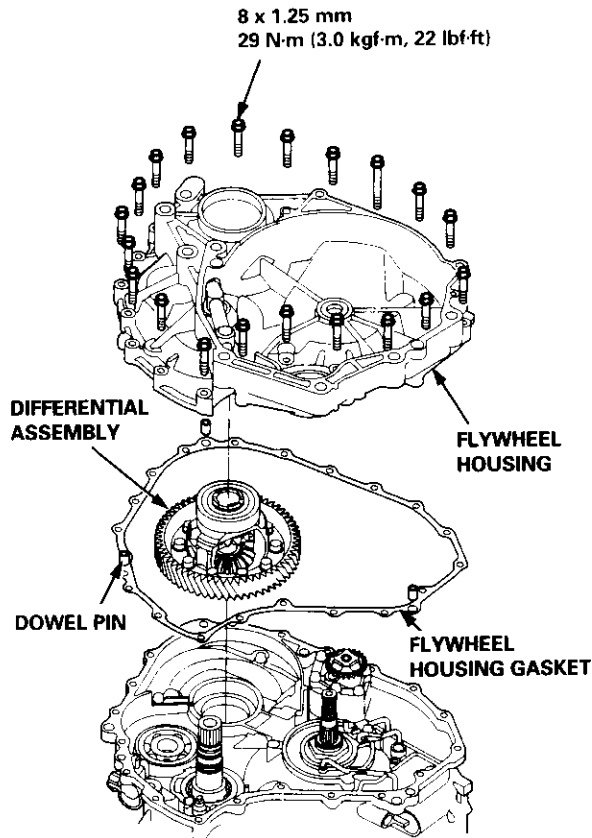

4. Measure the clearance between the 80 mm set ring and outer race of the ball bearing in the transmission housing.

STANDARD: 0 - 0.15 mm (0 - 0.006 in)

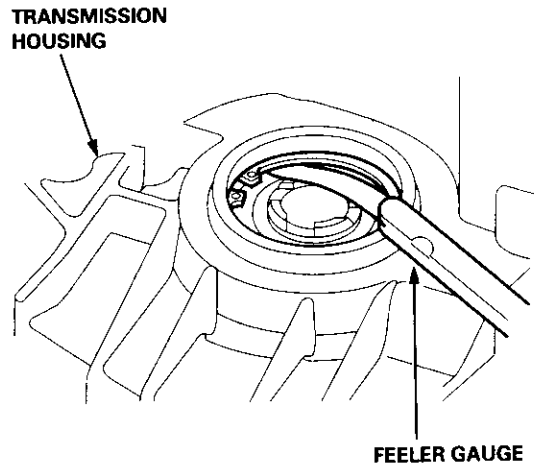

5. If the clearance is more than the standard, select a new set ring from the table, and install it.

SET RING, 80 mm


Part Number	Thickness
90414 - 689 - 000	2.50 mm (0.098 in)
90415 - 689 - 000	2.60 mm (0.102 in)
90416 - 689 - 000	2.70 mm (0.106 in)
90417 - 689 - 000	2.80 mm (0.110 in)
90418 - 689 - 000	2.90 mm (0.114 in)
90419 - PH8 - 000	3.00 mm (0.118 in)

NOTE: If the clearance measured in step 4 is standard, it is not necessary to perform steps 7 and 8.


6. Remove the flywheel housing.
7. Replace the 2.50 mm (0.098 in) set ring, 80 mm with the one of the correct thickness selected in step 5.



8. Install the oil seal in the transmission housing using the special tools as shown.

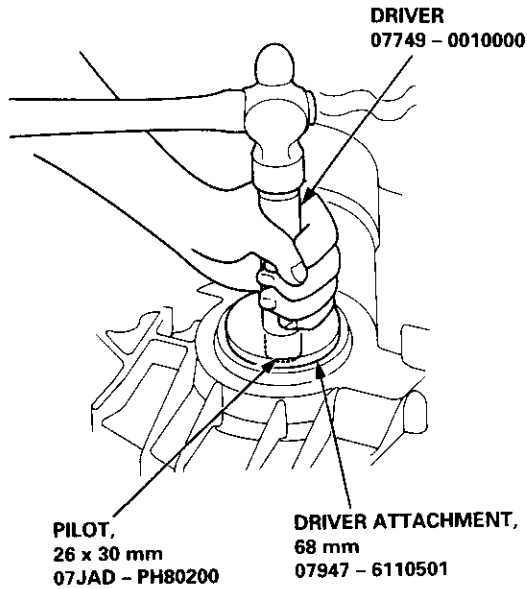


9. Install the oil seal in the flywheel housing using the special tools as shown.

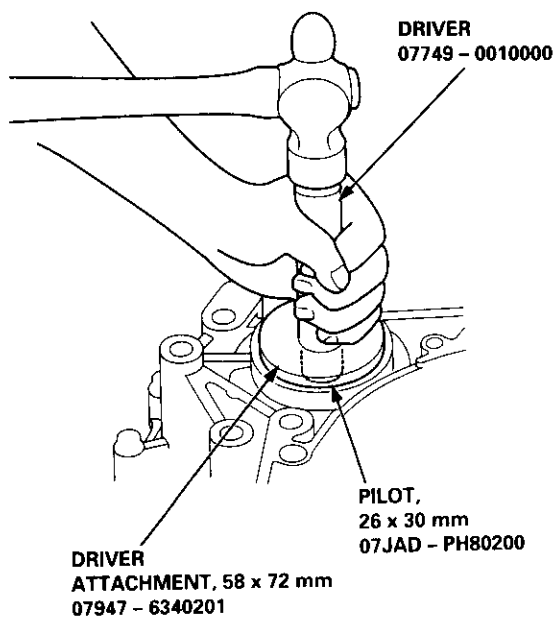


Replacement

1. Remove the input shaft oil seal from the flywheel housing.

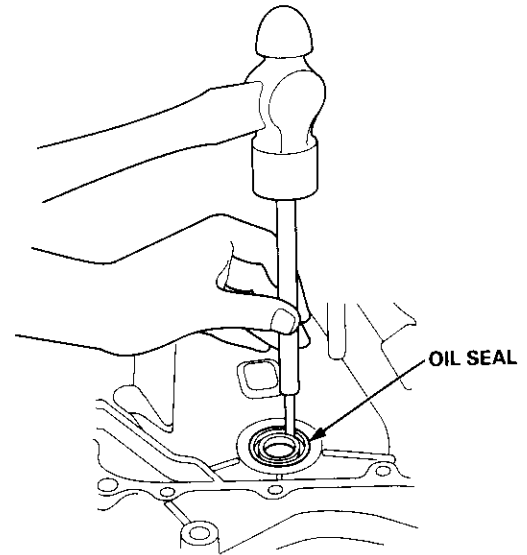

2. Install the oil seal in the flywheel housing using the special tools as shown.


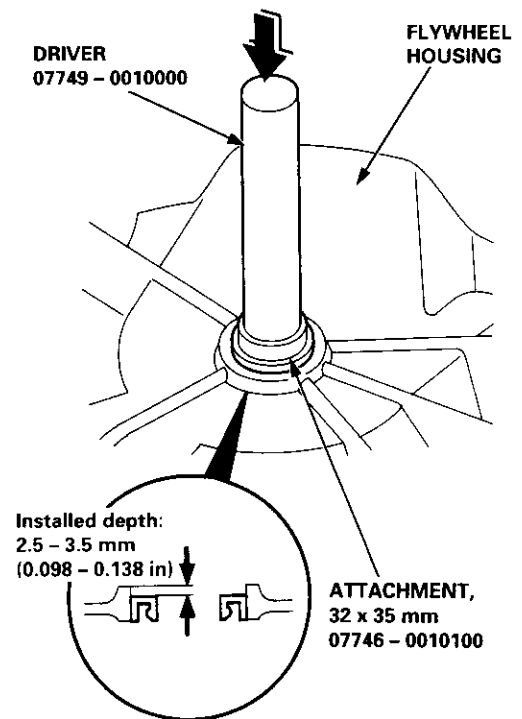


Transmission Housing Bearings

Driven Pulley Shaft Bearing Replacement

1. To remove the driven pulley shaft bearing from the transmission housing, expand the snap ring with snap ring pliers, then push the bearing out using the special tools and a press as shown.


NOTE: Do not remove the snap ring unless it's necessary to clean the groove in the housing.

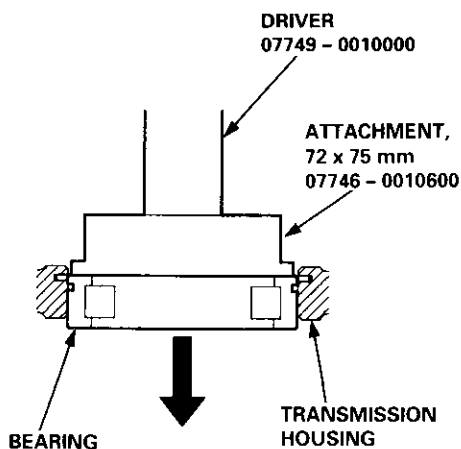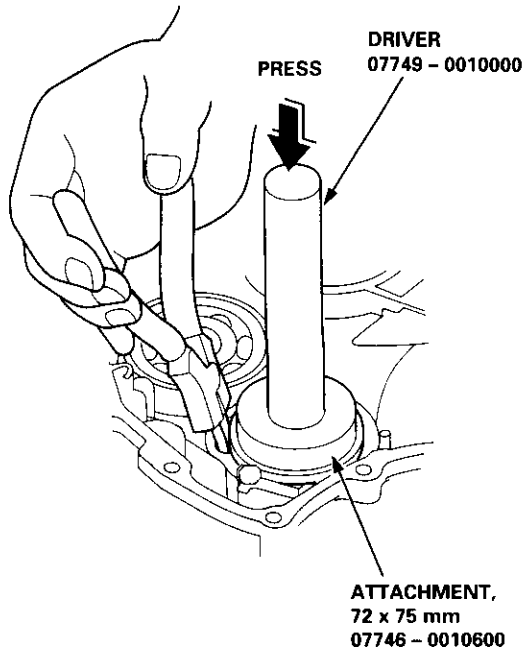

2. Expand the snap ring with snap ring pliers, insert the new bearing part-way into the housing using the special tools and a press as shown. Install the bearing with the groove facing outside the housing.


NOTE: Coat all parts with CVT Fluid.

3. Release the pliers, then push the bearing down into the housing until the ring snaps in place around it, using the special tools as shown.

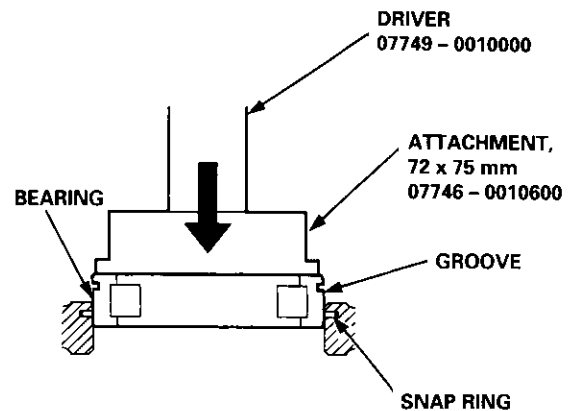

4. After installing the bearing verify the following:


- The snap ring is seated in the bearing and housing grooves.
- The snap ring operates properly.
- The ring end gap is correct.

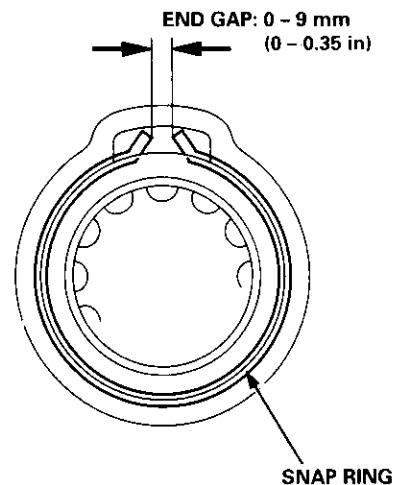




Secondary Gear Shaft Bearing Replacement

1. Remove the secondary gear shaft bearing using the special tools as shown.

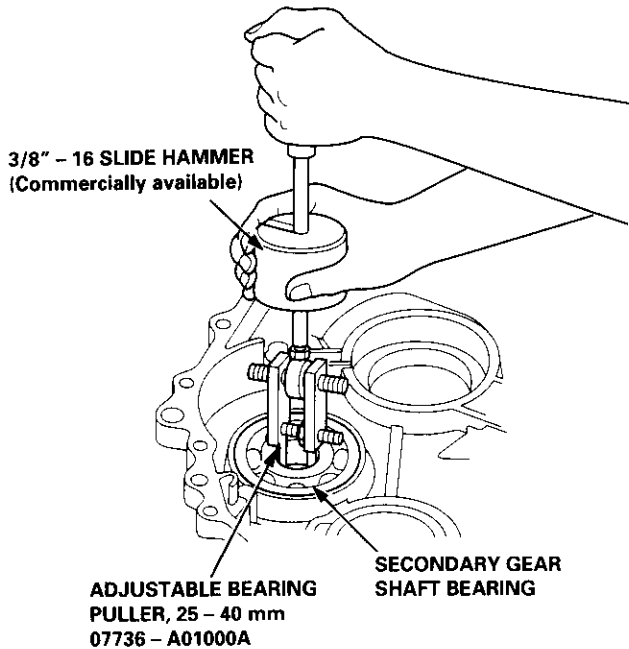


2. Install the new secondary gear shaft bearing until it bottoms in the transmission housing, using the special tools as shown.

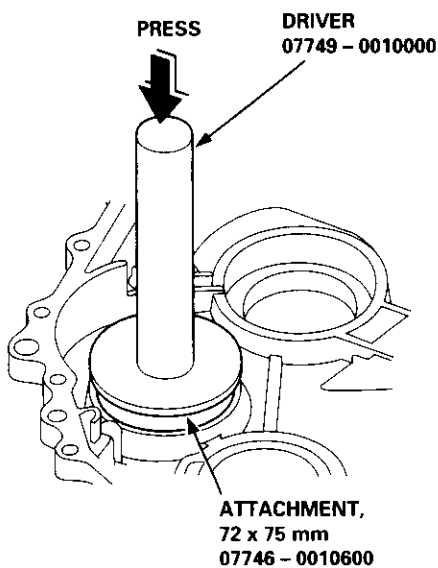


Secondary Gear Shaft Bearing Replacement

1. Remove the secondary gear shaft bearing using the special tool as shown.

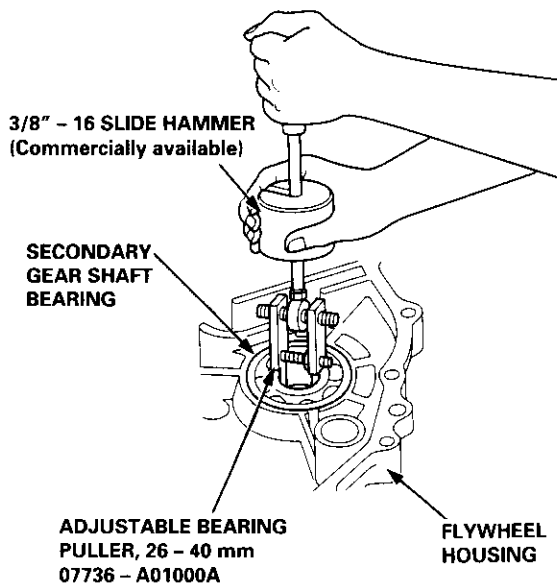

2. Install the new secondary gear shaft bearing until it bottoms in the flywheel housing, using the special tools as shown.

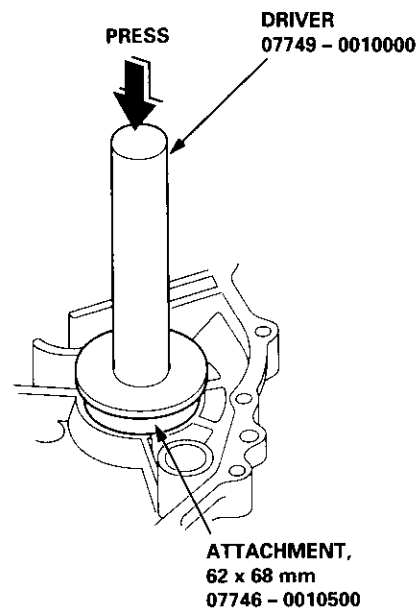


Ring Gear Bearing


Control Shaft Assembly

Replacement

1. Remove the ring gear bearing.

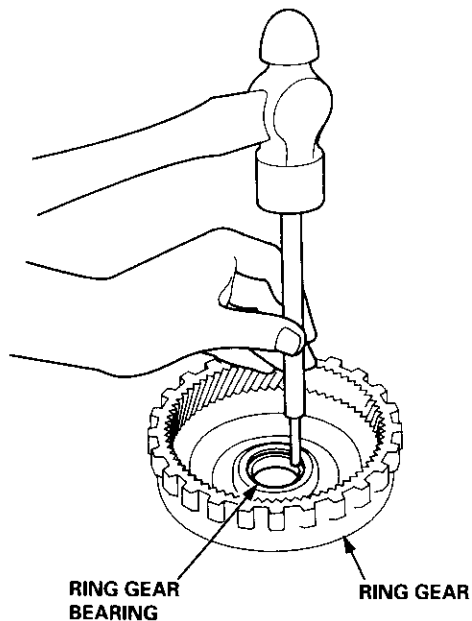


2. Install the new ring gear bearing until it bottoms in the ring gear, using the special tools as shown.

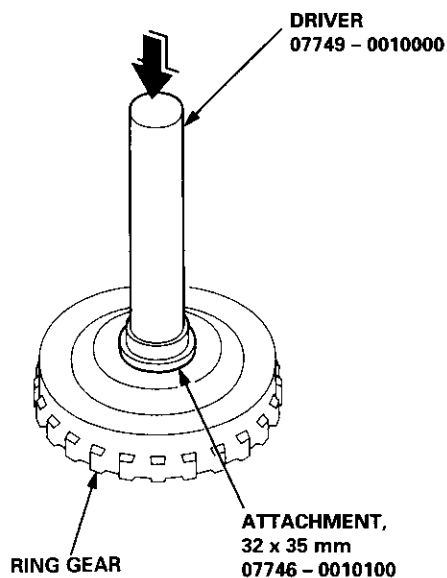

Removal/Installation

1. Remove the bolt and lock washer.

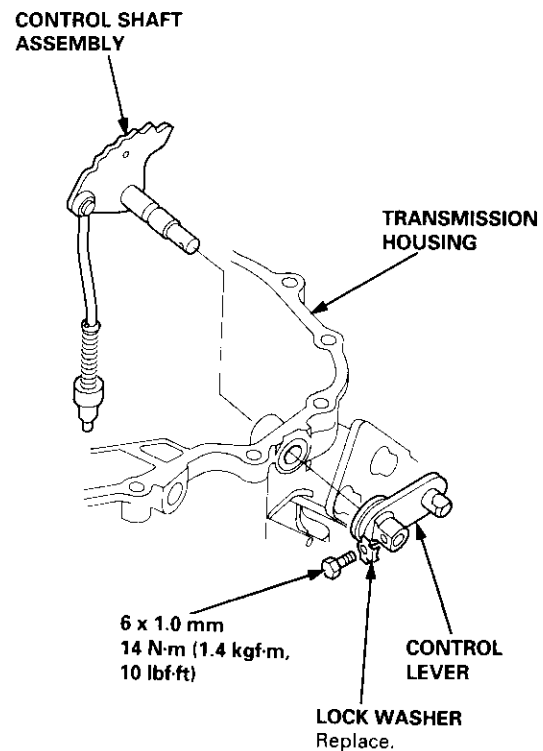

2. Remove the control lever from the control shaft.
3. Remove the control shaft assembly.
4. Install the control shaft assembly in the transmission housing.
5. Install the control lever to the control shaft.
6. Install and tighten the bolt with a new lock washer.


Transmission

Reassembly

CAUTION: While reassembling, be sure not to allow dust and other foreign particles to enter into the transmission.

NOTE:

- Coat all parts with CVT Fluid.
- Replace the following parts:
 - O-rings
 - Sealing rings
 - Sealing washers
 - Gaskets
 - Start clutch assembly and Secondary drive gear assembly

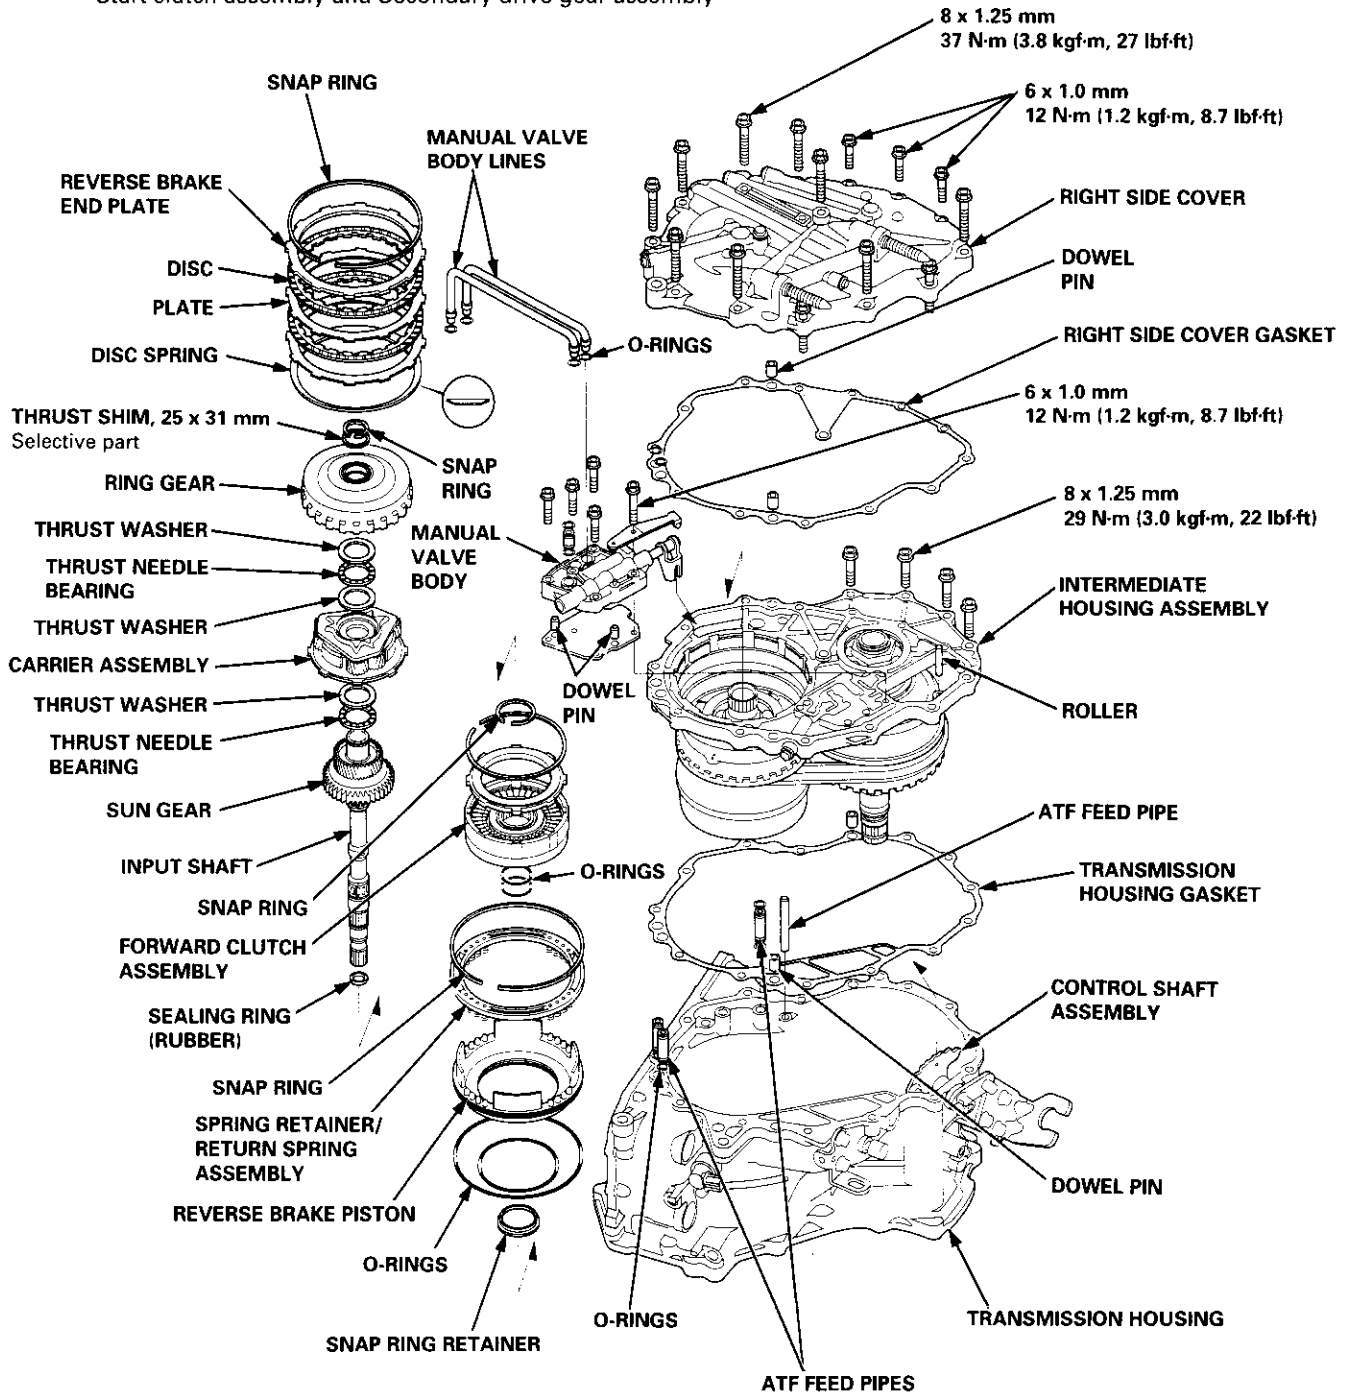




1. Install the ATF feed pipe in the transmission housing, and install the three ATF feed pipes with new O-rings in the transmission housing.
2. Install the two dowel pins and new transmission housing gasket on the transmission housing.
3. Push the control shaft assembly toward the outside of the transmission housing, then install the intermediate housing assembly (four bolts).
4. Install the manual valve body separator plate and the two dowel pins on the intermediate housing, then install the manual valve body with the detent spring (five bolts).
5. Put the control shaft assembly back, then install the roller in the intermediate housing.
6. Install the reverse brake piston in the intermediate housing.
7. Install the spring retainer/return spring assembly on the reverse brake piston.


NOTE: Install the return springs on the spring guides of the reverse brake piston securely.

8. Install the special tool to compress the return spring as shown.


**REVERSE BRAKE
SPRING COMPRESSOR**
07TAE - P4V0110

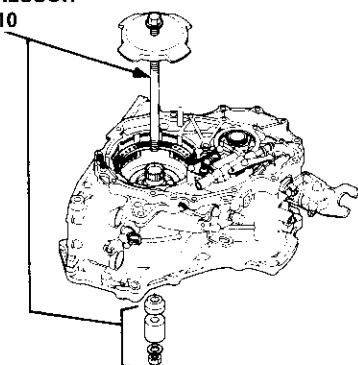

CAUTION: If the spring retainer tab is on the reverse brake piston, the spring retainer may be damaged. Be sure the spring retainer tab is not on the piston.

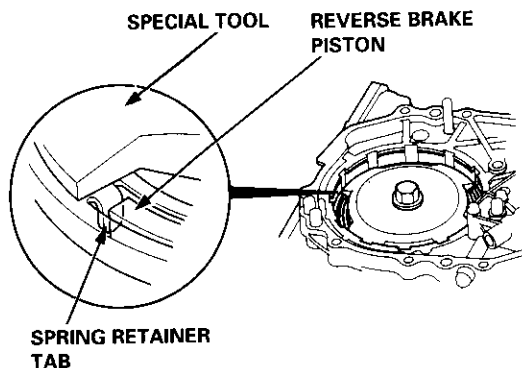


9. Compress the return springs, then install the snap ring in the intermediate housing above the spring retainer.
10. Verify that the snap ring end gap is correct.

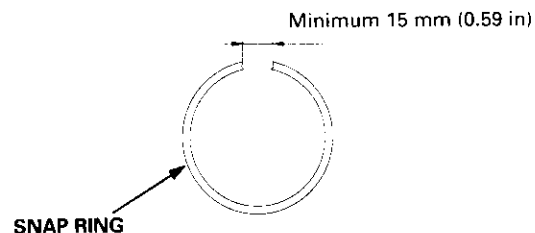

11. Soak the reverse brake discs thoroughly in CVT Fluid for minimum 30 minutes.
12. Install the disc spring on the reverse brake piston.
13. Starting with a reverse brake plate, alternately install the reverse brake plates and discs. Install the reverse brake end plate, and the snap ring.
14. Measure the clearance between the reverse brake end plate and the top disc with a dial indicator. Zero the dial indicator with a reverse brake end plate lowered, and lift it up to the snap ring. The distance that the reverse brake and plate moves is the clearance between the reverse end plate, and the top disc.

NOTE: Take measurements in at least three places, and use the average as the actual clearance.

STANDARD: 0.45 - 0.75 mm (0.018 - 0.030 in)

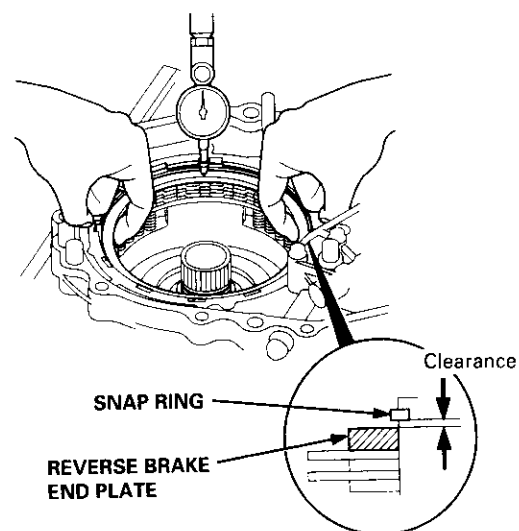

(cont'd)

Transmission

Reassembly (cont'd)


15. If the clearance is not within the standard, remove the reverse brake end plate and measure its thickness.
16. Select and install a new reverse brake end plate, then recheck.

NOTE: If the thickest reverse brake end plate is installed, but the clearance is still over the standard, replace the reverse brake discs and plates.


REVERSE BRAKE END PLATE

Plate No.	Part Number	Thickness
1	22551 - P4V - 003	3.6 mm (0.142 in)
2	22552 - P4V - 003	3.8 mm (0.150 in)
3	22553 - P4V - 003	4.0 mm (0.157 in)
4	22554 - P4V - 003	4.2 mm (0.165 in)
5	22555 - P4V - 003	4.4 mm (0.173 in)
6	22556 - P4V - 003	4.6 mm (0.181 in)
7	22557 - P4V - 003	4.8 mm (0.189 in)
8	22558 - P4V - 003	5.0 mm (0.200 in)


17. After replacing the reverse brake end plate, make sure that the clearance is within the standard.
18. Remove the snap ring, reverse brake end plate, discs, plates, and disc spring.
19. Install the snap ring retainer on the drive pulley shaft.
20. Wrap the drive pulley shaft splines with tape to prevent damage to the O-rings, then install new O-rings.
21. Install the forward clutch assembly on the drive pulley shaft, then install the snap ring.

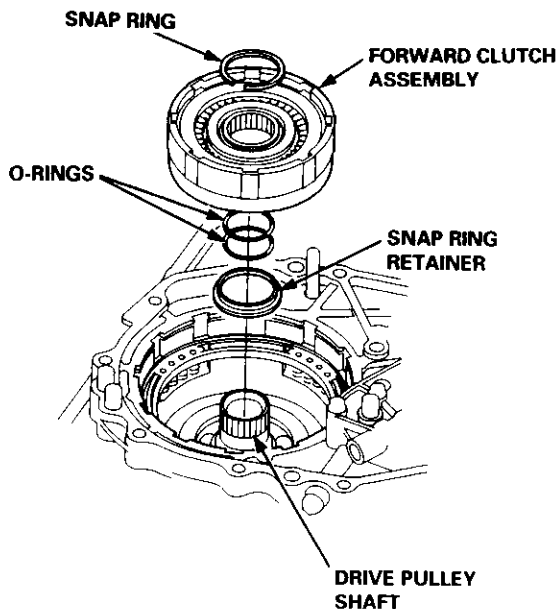

22. Verify that the outside diameter of the snap ring is correct.

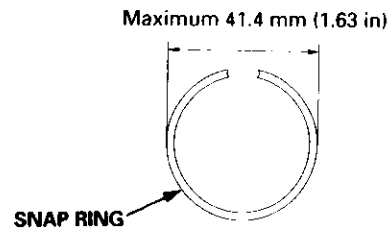


23. Install the input shaft and the sun gear as a sub assembly.
24. Install the thrust needle bearing and the thrust washer on the sun gear.

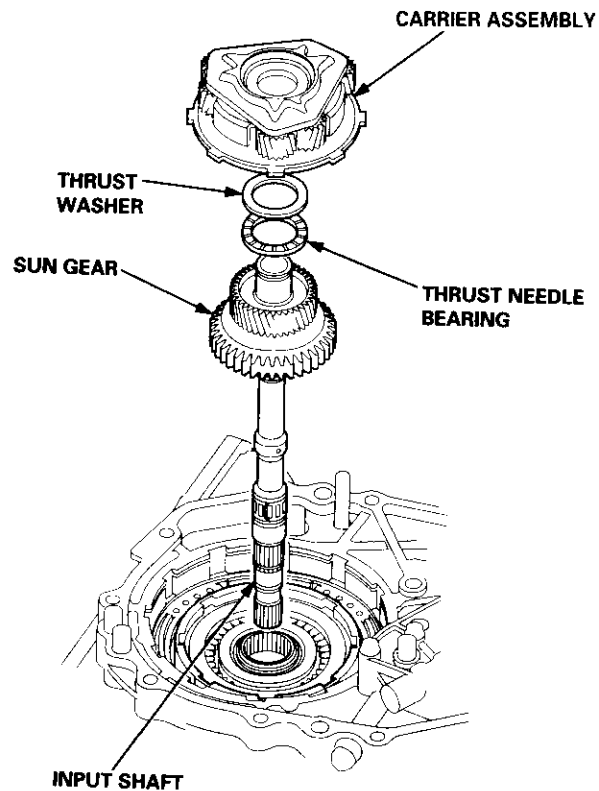

25. Install the carrier assembly on the forward clutch.




26. Install the thrust washer, the thrust needle bearing, and the thrust washer on the carrier assembly.

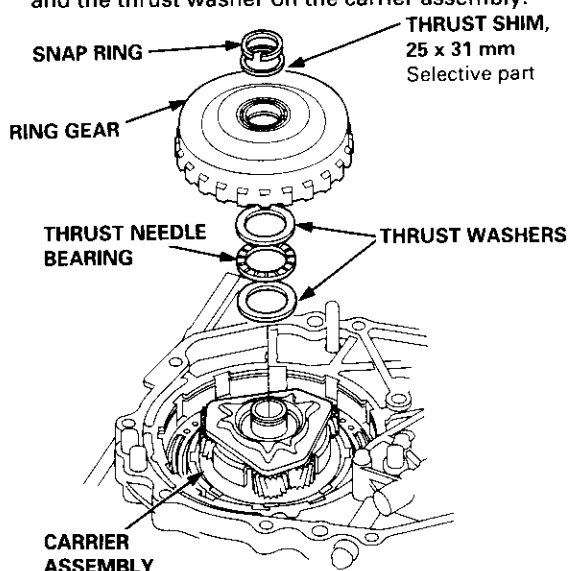

27. Install the ring gear and the 25 x 31 mm thrust shim, then install the snap ring.
28. Verify that the outside diameter of the snap ring is correct.


Maximum 30.7 mm (1.21 in)

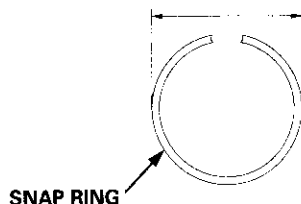

29. Measure the clearance between the 25 x 31 mm thrust shim and the snap ring.

STANDARD: 0.05 – 0.11 mm (0.0020 – 0.0043 in)

NOTE: Take measurements in at least three places, and use the average as the actual clearance.

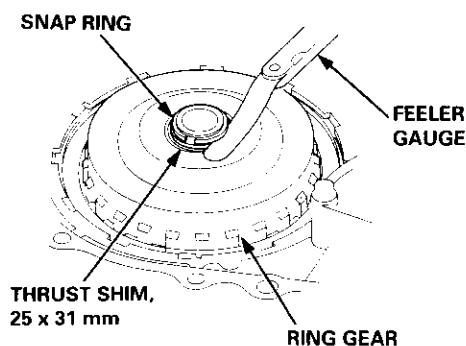


30. If the clearance is out of tolerance, remove the 25 x 31 mm thrust shim and measure its thickness.
31. Select and install a new 25 x 31 mm thrust shim, then recheck.

THRUST SHIM, 25 x 31 mm

No.	Part Number	Thickness
A	90451 – P4V – 000	1.05 mm (0.041 in)
B	90452 – P4V – 000	1.12 mm (0.044 in)
C	90453 – P4V – 000	1.19 mm (0.047 in)
D	90454 – P4V – 000	1.26 mm (0.050 in)
E	90455 – P4V – 000	1.33 mm (0.052 in)
F	90456 – P4V – 000	1.40 mm (0.055 in)
G	90457 – P4V – 000	1.47 mm (0.058 in)
H	90458 – P4V – 000	1.54 mm (0.061 in)
I	90459 – P4V – 000	1.61 mm (0.063 in)
J	90460 – P4V – 000	1.68 mm (0.066 in)
K	90461 – P4V – 000	1.75 mm (0.069 in)
L	90462 – P4V – 000	1.82 mm (0.072 in)
M	90480 – P4V – 000	1.085 mm (0.0427 in)
N	90481 – P4V – 000	1.155 mm (0.0454 in)
O	90482 – P4V – 000	1.225 mm (0.0482 in)
P	90483 – P4V – 000	1.295 mm (0.0510 in)
Q	90484 – P4V – 000	1.365 mm (0.0537 in)
R	90485 – P4V – 000	1.435 mm (0.0565 in)
S	90486 – P4V – 000	1.505 mm (0.0593 in)
T	90487 – P4V – 000	1.575 mm (0.0620 in)
U	90488 – P4V – 000	1.645 mm (0.0648 in)
V	90489 – P4V – 000	1.715 mm (0.0675 in)
W	90490 – P4V – 000	1.785 mm (0.0703 in)

32. After replacing the 25 x 31 mm thrust shim, make sure that the clearance is within tolerance and the snap ring outside diameter is correct.
33. Install the disc spring in the direction shown.
34. Starting with a reverse brake plate, alternately install the reverse brake plates and discs. Install selected reverse brake end plate, then install the snap ring.

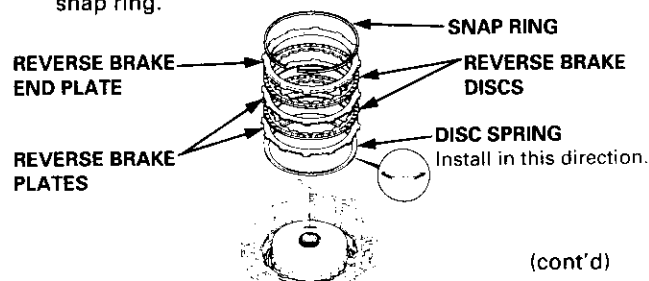


(cont'd)


Transmission

Reassembly (cont'd)

35. Verify that the snap ring end gap is correct.

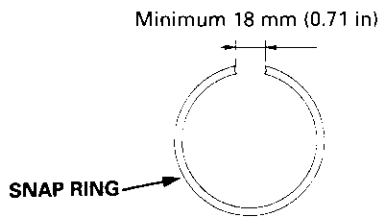


36. Install the manual valve body pipes A and B with new O-rings on the manual valve body and the intermediate housing.

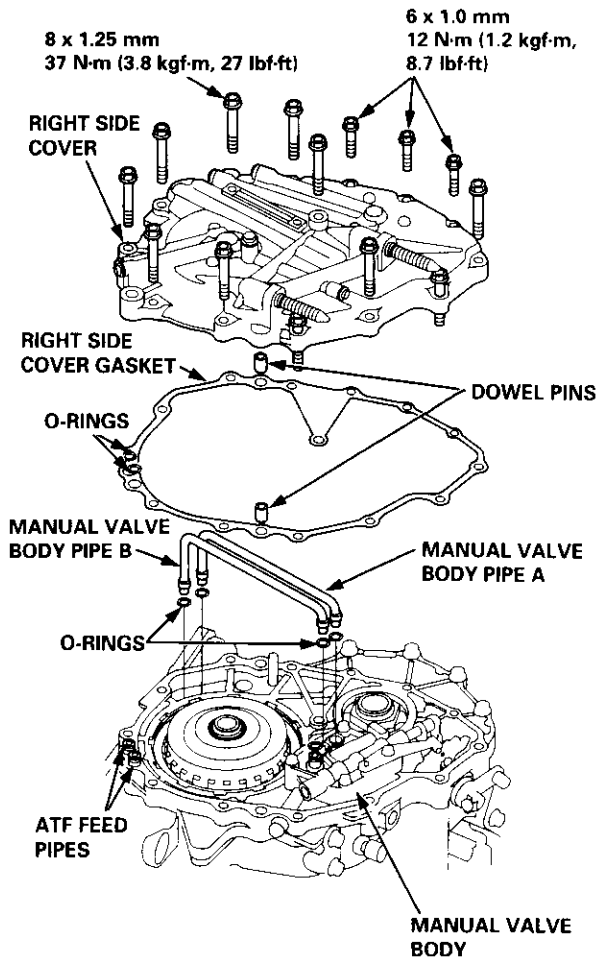

37. Install the two dowel pins and new right side cover gasket on the intermediate housing, then install new O-rings on the ATF feed pipes.
38. Install the right side cover (three 6 mm bolts, eleven 8 mm bolts).


NOTE: Install the nine 8 mm bolts in the right side cover (two 8 mm bolts remain in the right side cover) then tighten the eleven 8 mm bolts.

39. Install the parking brake pawl, spring, and shaft on the transmission housing, then move the control lever to any gear other than **P** position.

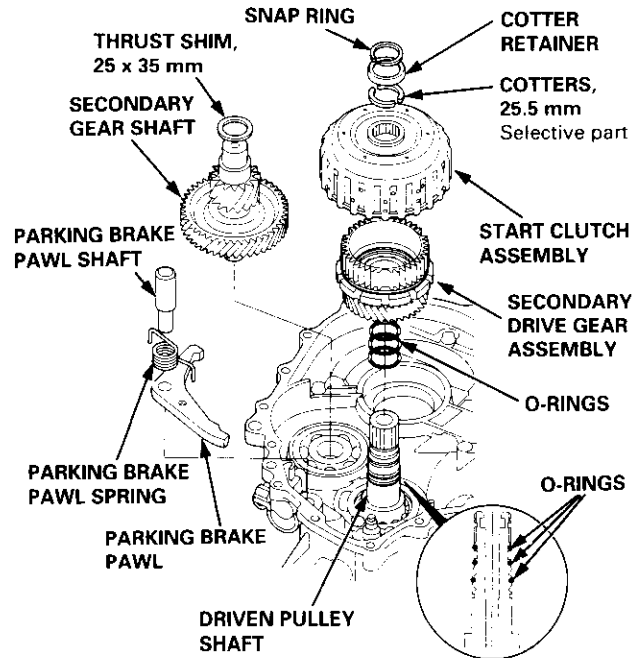


40. Install the secondary gear shaft with selected 25 x 35 mm thrust shim (see page 14-100).
41. Wrap the driven pulley shaft splines with tape to prevent damage to the O-rings, then install new O-rings.
42. Assemble the secondary drive gear assembly in the start clutch assembly, then install them on the driven pulley shaft.
43. Pull the handle of the special tool up, then install the tip of it into the driven pulley shaft hole, and set the special tool on the start clutch.

CAUTION: While installing the start clutch and the secondary drive gear assembly using the special tool, be sure not to allow dust and other foreign particles to enter into the transmission.

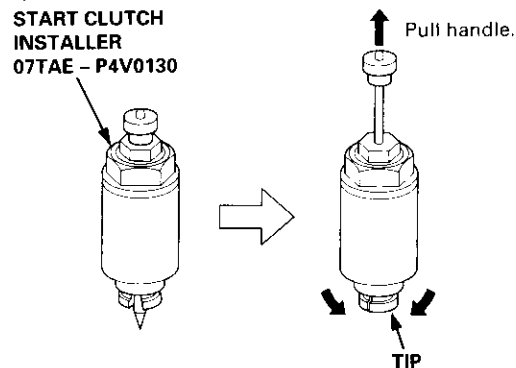




44. Push the handle of the special tool, then tighten the nut to seat the secondary drive gear assembly on the driven pulley shaft securely.

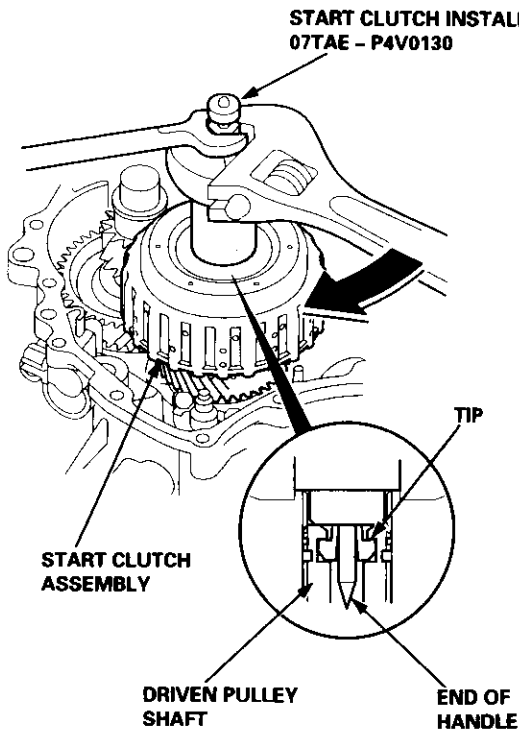

45. Pull the handle of the special tool up, and remove the special tool.
46. Install the cotters, then measure the clearance between the cotters and the start clutch guide.

STANDARD: 0 - 0.13 mm (0 - 0.005 in)

NOTE: Take measurements in at least three places, and use the average as the actual clearance.

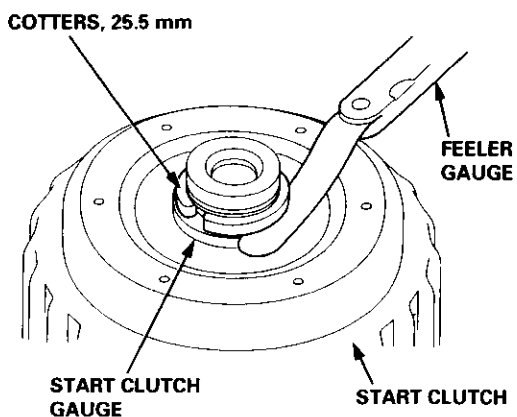


47. If the clearance is not within the standard, remove the cotters and measure their thickness.
48. Select and install new cotters, then recheck.


COTTERS, 25.5 mm

No.	Part Number	Thickness
A	90429 - P4V - 000	2.9 mm (0.114 in)
B	90430 - P4V - 000	3.0 mm (0.118 in)
C	90431 - P4V - 000	3.1 mm (0.122 in)
D	90432 - P4V - 000	3.2 mm (0.126 in)

49. After replacing the 25.5 mm cotters, make sure that the clearance is the standard.
50. Install the cotter retainer and the snap ring.
51. Verify that the outside diameter of the snap ring is correct.

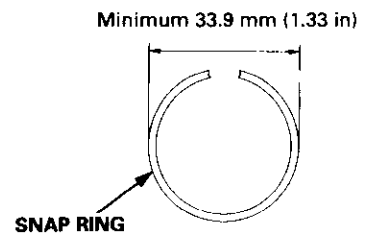

52. Install the thrust washers, the ATF pump drive sprocket hub and the 22 x 28 mm thrust shim on the input shaft, then install the snap ring.

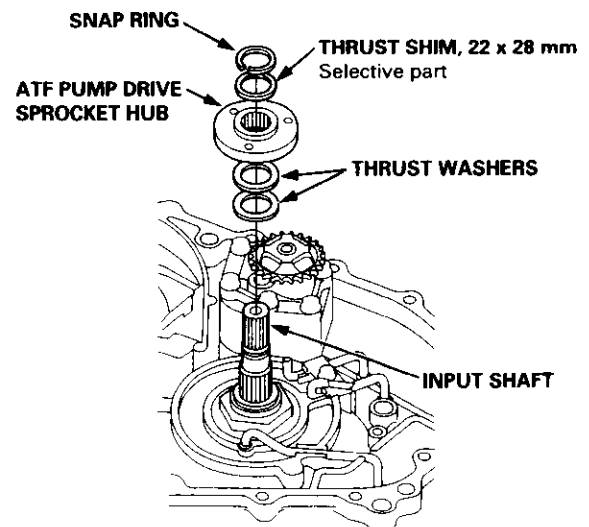


(cont'd)

Transmission

Reassembly (cont'd)

53. Verify that the outside diameter of the snap ring is correct.


Maximum 26.3 mm (1.04 in)

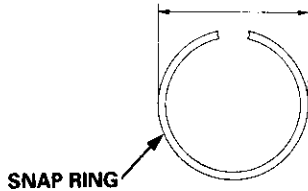

54. Measure the clearance between the 22 x 28 mm thrust shim and the snap ring.

STANDARD: 0.37 – 0.65 mm (0.015 – 0.026 in)

NOTE: Take measurements in at least three places, and use the average as the actual clearance.

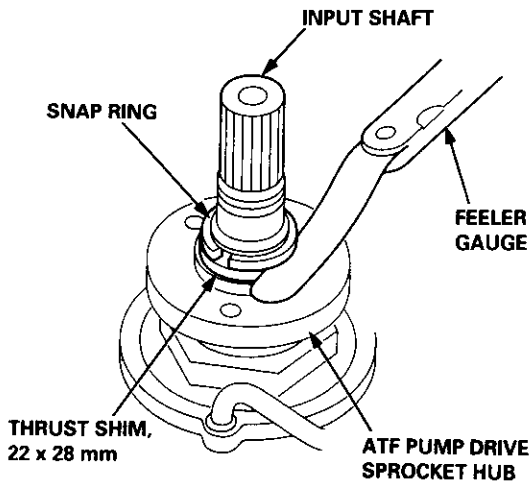


55. If the clearance is out of tolerance, remove the 22 x 28 mm thrust shim and measure its thickness.
56. Select and install a new 22 x 28 mm thrust shim, then recheck.

THRUST SHIM, 22 x 28 mm


No.	Part Number	Thickness
C	90573 - P4V - 000	1.15 mm (0.045 in)
D	90574 - P4V - 000	1.40 mm (0.055 in)
E	90575 - P4V - 000	1.65 mm (0.065 in)
F	90576 - P4V - 000	1.90 mm (0.075 in)
G	90577 - P4V - 000	2.15 mm (0.085 in)
H	90578 - P4V - 000	2.40 mm (0.095 in)

57. After replacing the 22 x 28 mm thrust shim, make sure that the clearance is within tolerance and the snap ring outside diameter is correct.

58. Install the pitot flange using its cutout as shown to clear the pitot pipes.

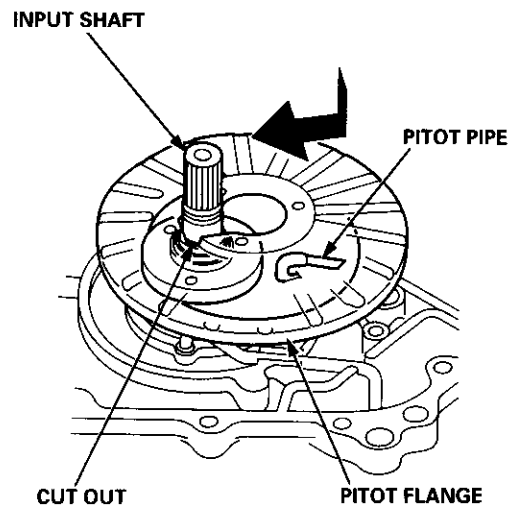


59. Install the ATF pump drive sprocket, and put the ATF pump drive chain on the ATF pump drive and driven sprockets, then install and tighten the bolts (three bolts).

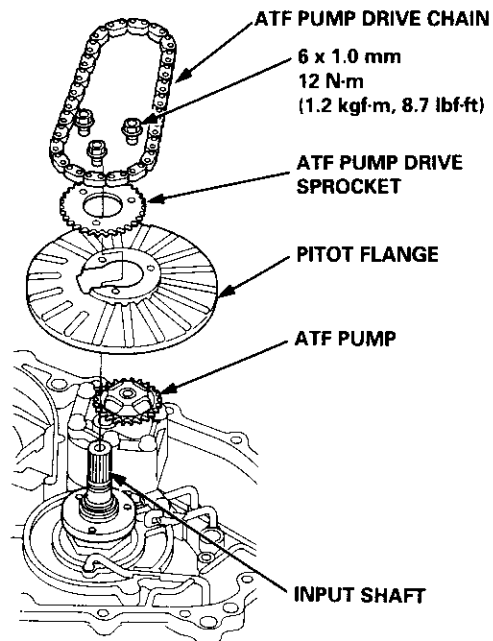



60. Install the differential assembly.
61. Install the ATF passage pipe assembly with new O-rings (one bolt).
62. Install the three dowel pins and new flywheel housing gasket on the transmission housing.
63. Install the flywheel housing and connector bracket (twenty bolts).
64. Install the ATF passage pipe holder assembly (two bolts).

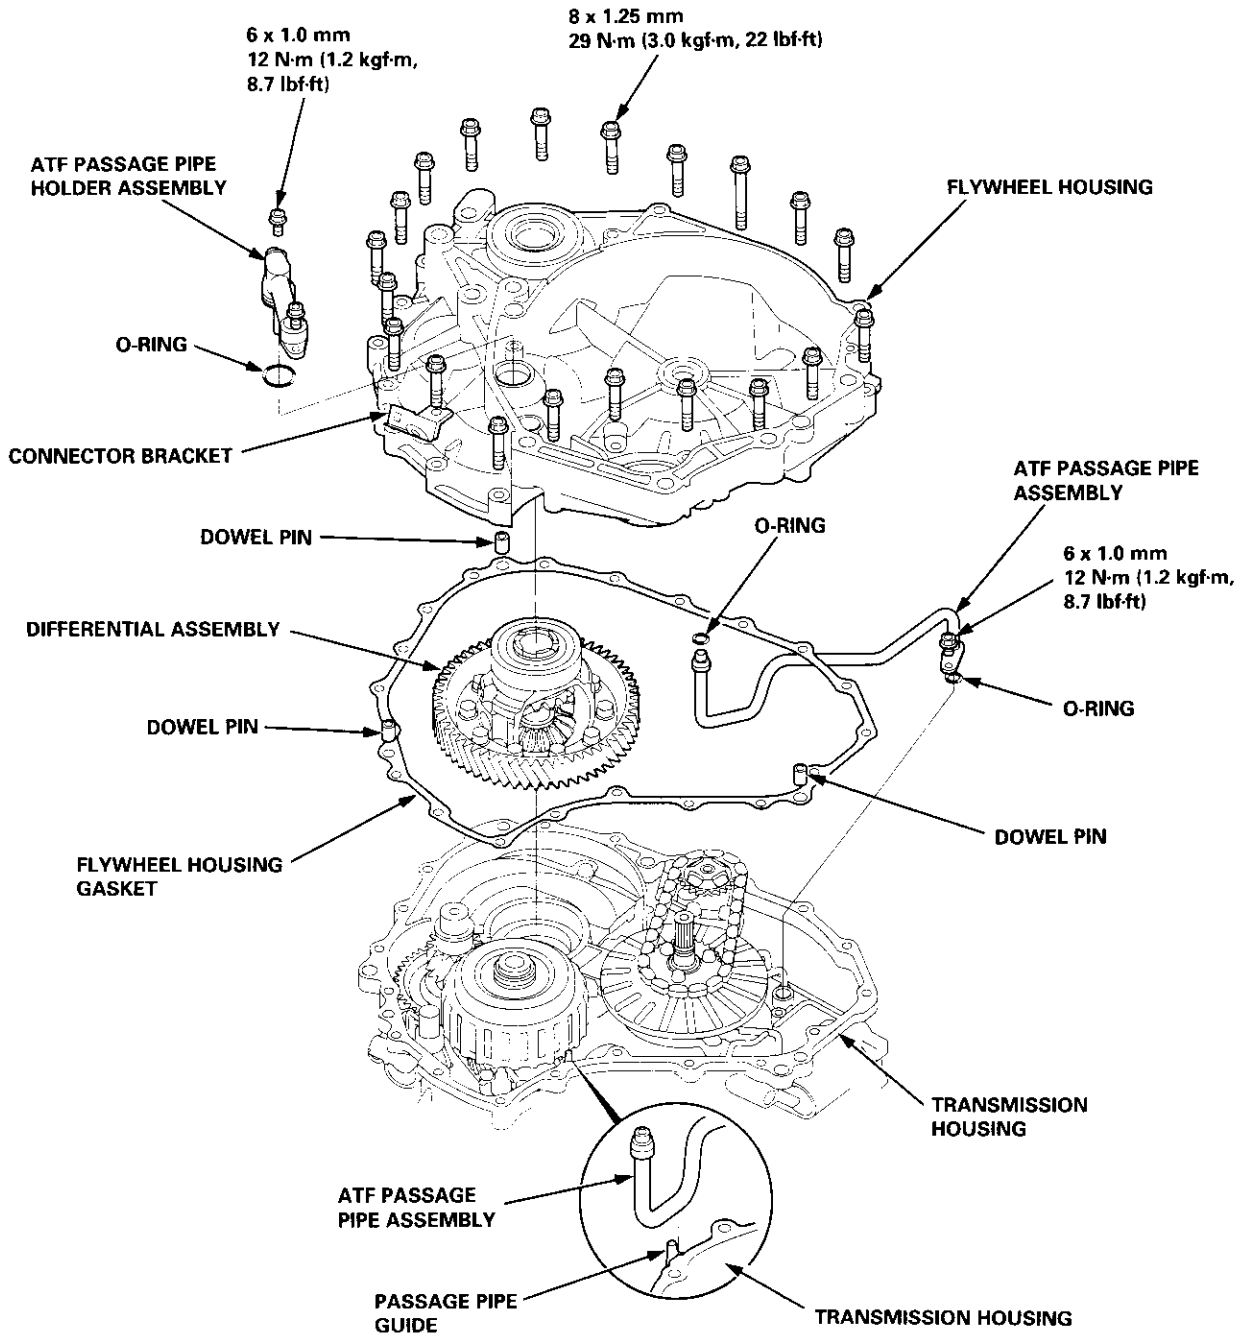


(cont'd)


Transmission

Reassembly (cont'd)

65. Install the solenoid harness connector with a new O-ring (one bolt), then install the lower valve body assembly with three dowel pins (eight bolts).
66. Install the ATF strainer with a new O-ring (two bolts).
67. If necessary, assemble the ATF pan, ATF filter, and the ATF cooler inlet pipe (see page 14-235).
68. Install the ATF pan with the two dowel pins and a new ATF pan gasket (fourteen bolts).
69. Install the ATF cooler inlet pipe bracket bolt.
70. Install the ATF cooler outlet pipe with the joint bolt and new sealing washers.

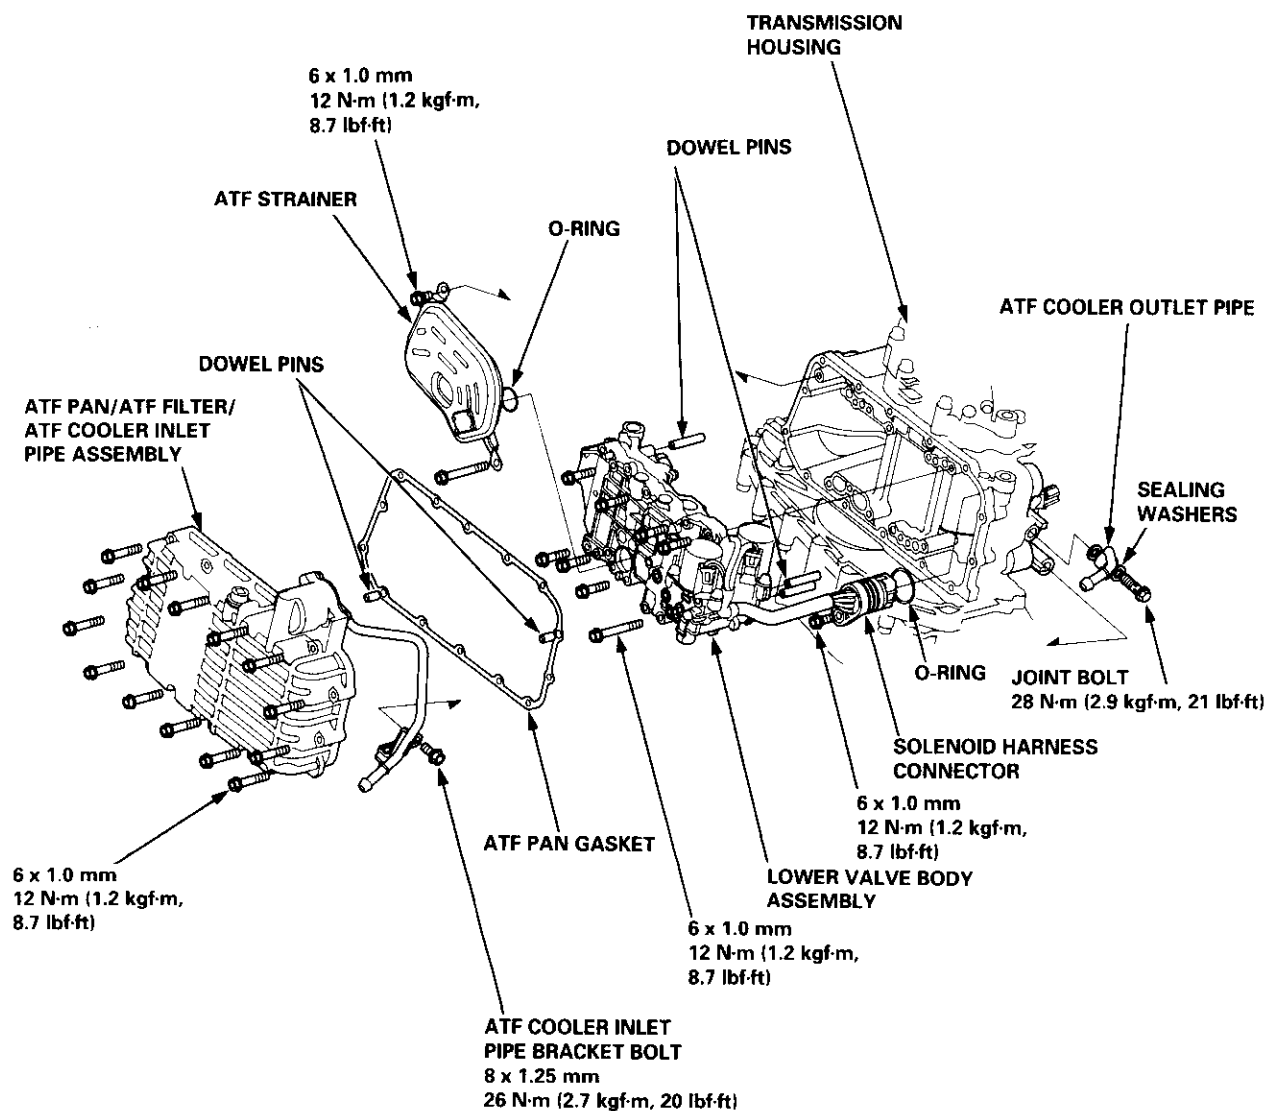


Flywheel/Drive Plate

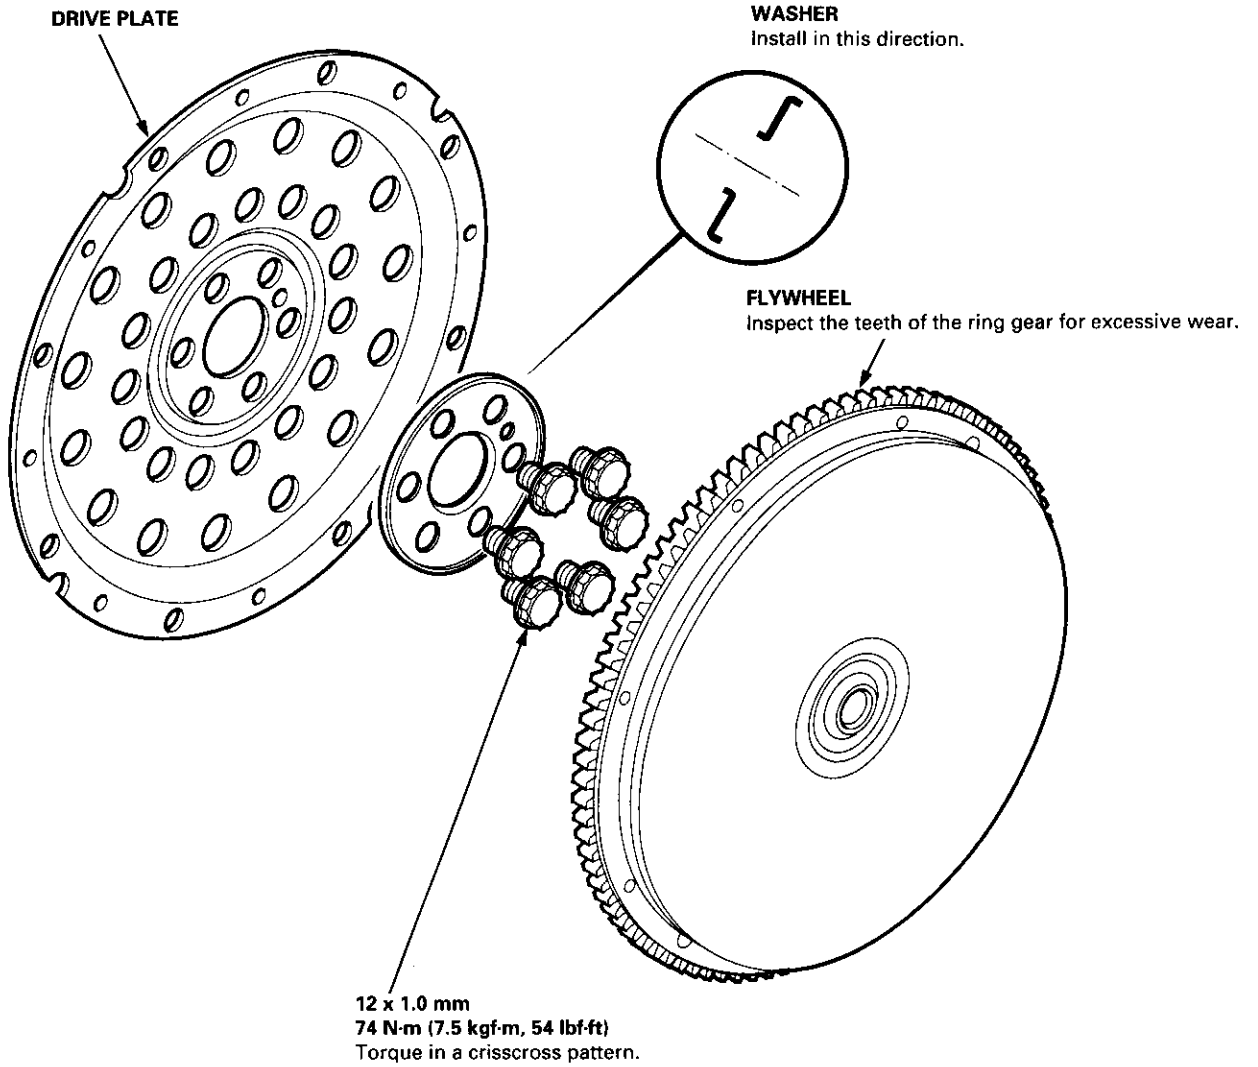


Transmission

Installation


1. Flush the ATF cooler as described on pages 14-284 and 14-285.
2. Remove the used grease in the flywheel hub cap and flywheel splines.
3. Fill the inside of the flywheel hub cap, and coat the flywheel hub splines with Super High Temp Urea Grease (P/N 08798 - 9002) as shown.

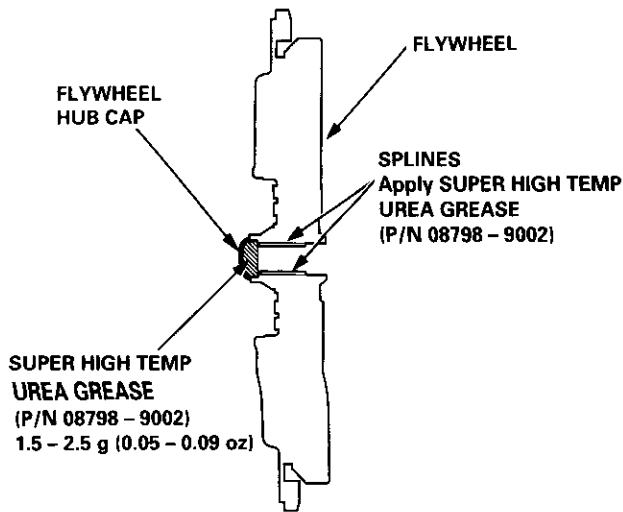


4. Install a new sealing ring (rubber) on the input shaft, and install two 14 x 20 mm dowel pins in the flywheel housing.
5. Install the flywheel securely on the input shaft, then install the starter motor on the flywheel housing.

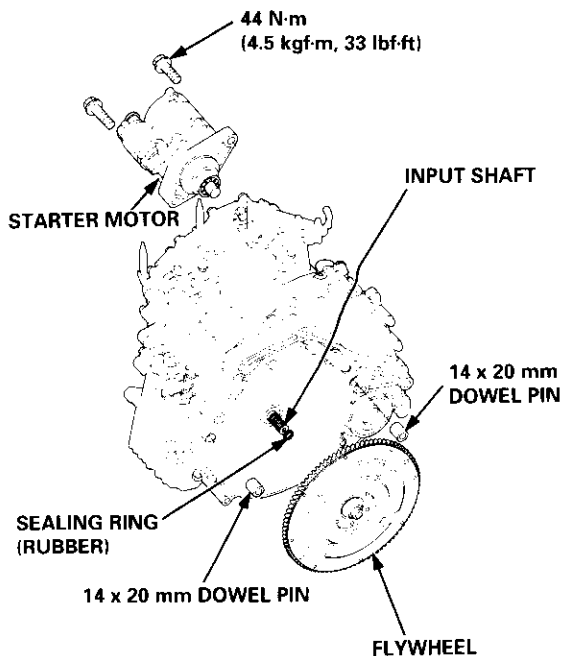

6. Place the transmission on a jack, and raise it to the engine assembly level.
7. Attach the transmission on the engine, then install the transmission housing mounting bolt and rear engine mounting bolts.

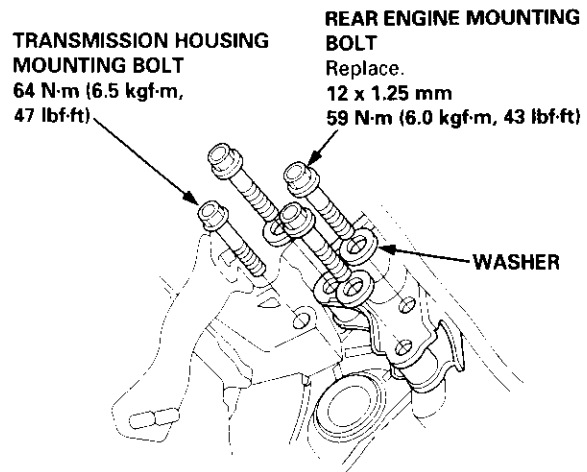


8. Install the transmission mount bracket. Tighten the long bolt loosely, and tighten the nuts and bolt on the mount bracket to the specified torque. Then tighten the long bolt to the specified torque.

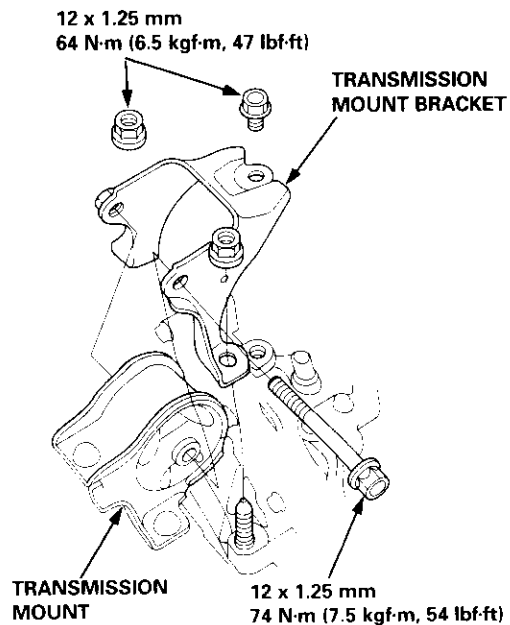




9. Install the remaining transmission housing mounting bolts.

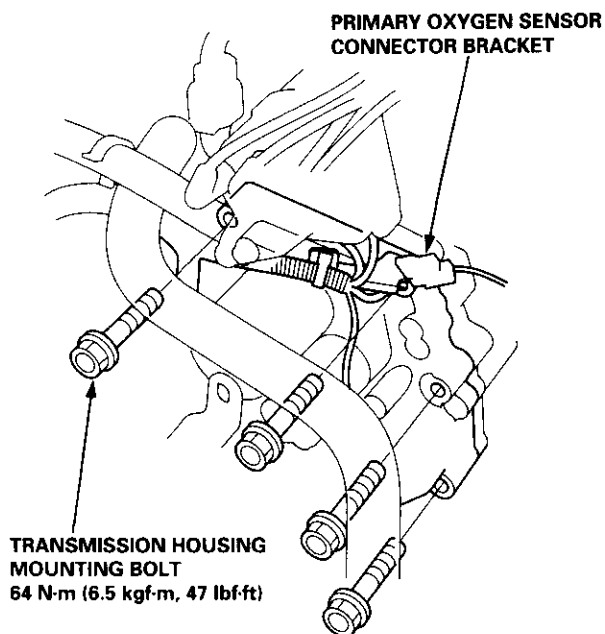

10. Remove the transmission jack and the hoist, then remove the hoist bracket from the engine.

11. Attach the flywheel to the drive plate with eight bolts and torque as follows:
Rotate the crankshaft pulley as necessary to tighten the bolts to half of the specified torque, then to the final torque, in a crisscross pattern.
After tightening the last bolt, check that the crankshaft rotates freely.

12. Install the flywheel cover and the engine stiffeners.

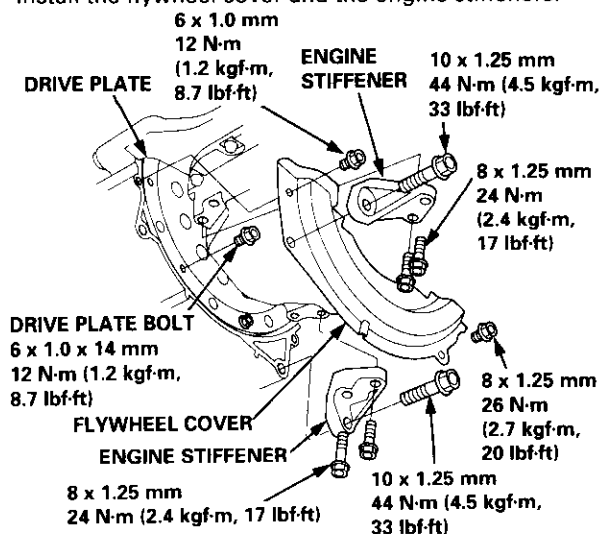


13. Tighten the crankshaft pulley bolt, if necessary (see section 6).


14. Connect the ATF cooler hoses to the ATF cooler pipes (see page 14-289).

CAUTION: While connecting the ATF cooler hoses, be sure not to allow dust and other foreign particles to enter into the transmission.

15. Install the right front mount/bracket.

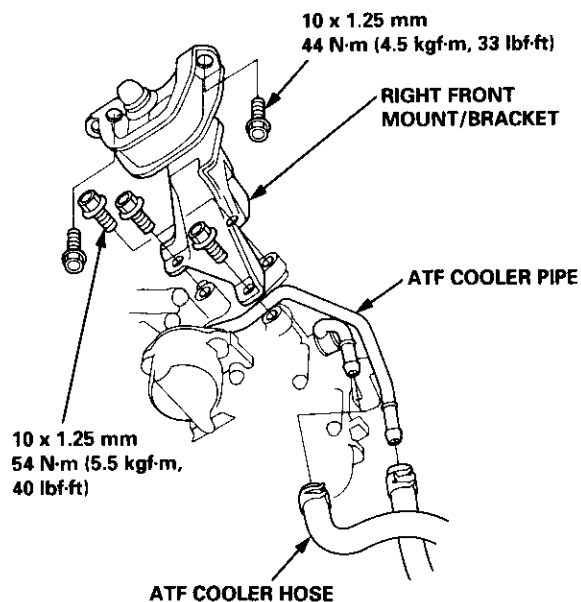

16. Install the exhaust pipe A.

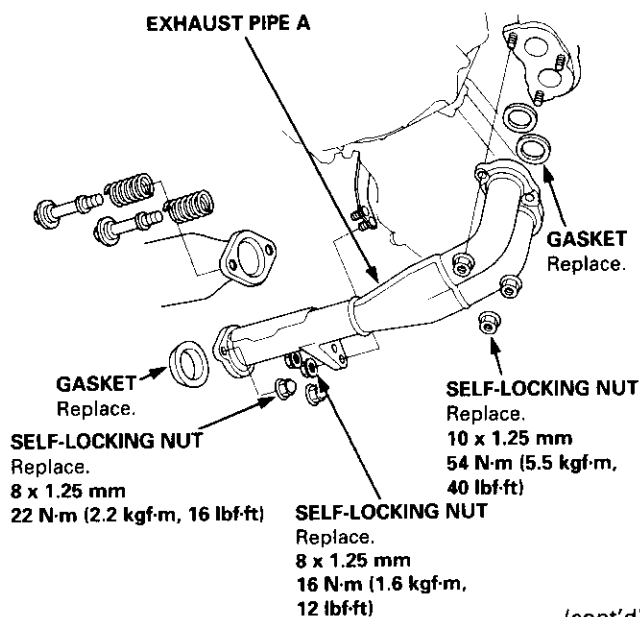

(cont'd)

Transmission

Installation (cont'd)


17. Install a new set ring on the end of each driveshaft.
18. Install the right and left driveshafts (see section 16).

CAUTION: While installing the driveshafts in the differential, be sure not to allow dust and other foreign particles to enter into the transmission.


NOTE:

- Clean the areas where the driveshafts contact the transmission (differential) thoroughly with solvent or carburetor cleaner, and dry with compressed air.
 - Turn the right and left steering knuckle fully outward, and slide each driveshaft into the differential until you feel its set ring clip engage the side gear.
19. Install the damper fork, then install the right and left ball joints to each lower arm with the castle nuts and new cotter pins.


10 x 1.25 mm
43 N·m
(4.4 kgf·m, 32 lbf·ft)

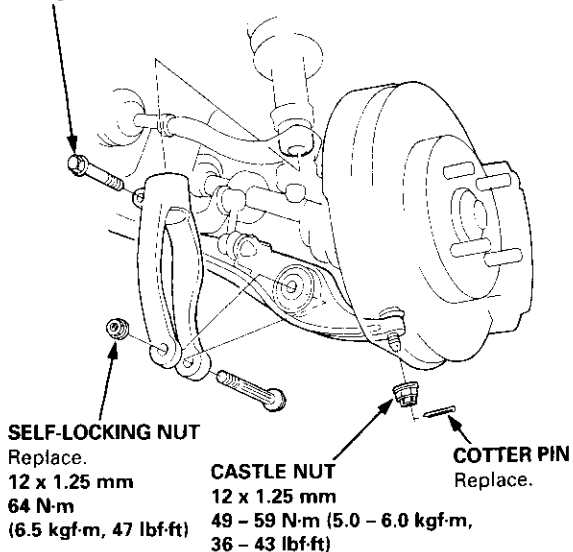

20. Install the splash shield.

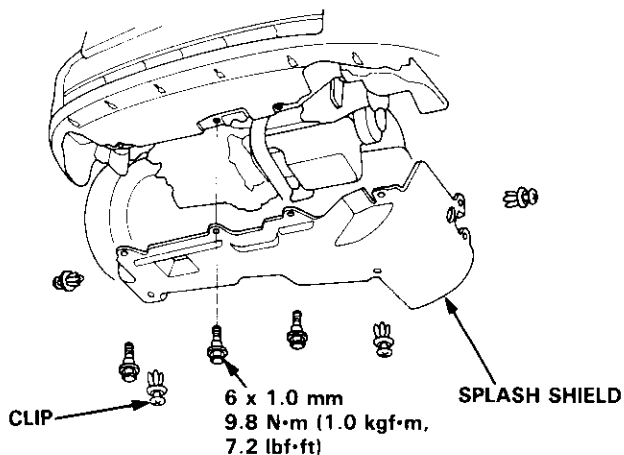

21. Connect the vehicle speed sensor connector, the driven pulley speed sensor connector and the secondary gear shaft speed sensor connector.

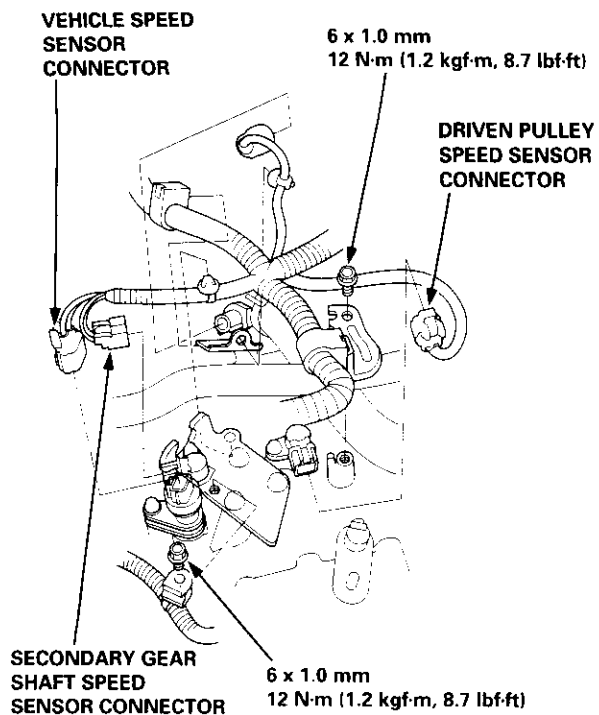





22. Install the shift cable end on the control lever, and install the shift cable on the shift cable bracket.

CAUTION: Take care not to bend the shift cable.

23. Install the clip in the direction shown.

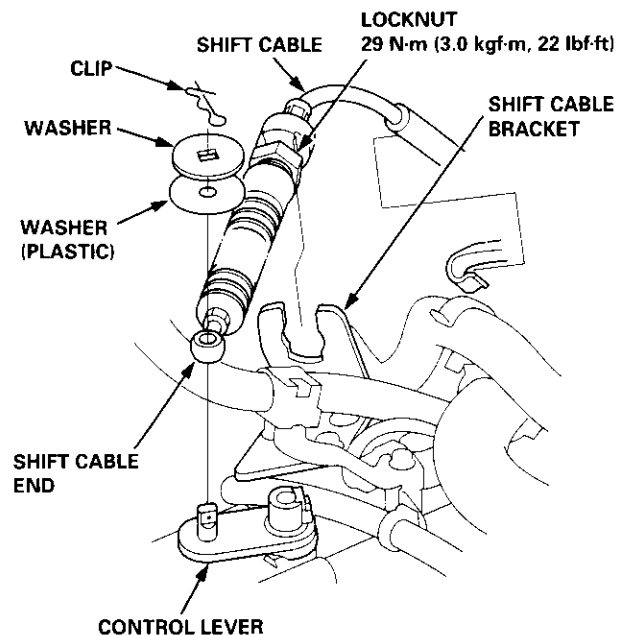


24. Connect the solenoid harness connector, the drive pulley speed sensor connector, and the ground cable terminals.

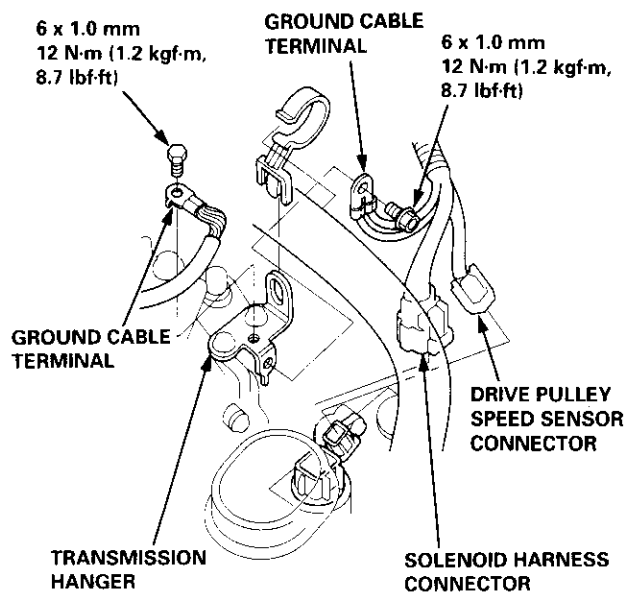

25. Connect the starter motor cable on the starter motor, and install the cable holder.

NOTE: When installing the starter motor cable, make sure that the crimped side of the ring terminal is facing out (see section 23).

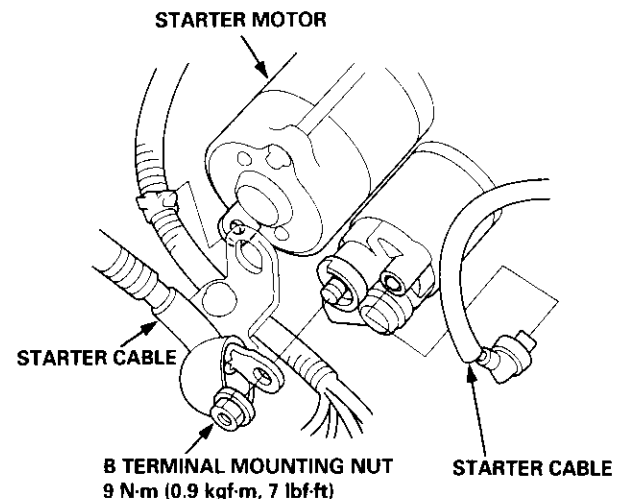

26. Install all removed connectors and clamps.
27. Install the distributor.
28. Install the intake air duct and air cleaner housing assembly.
29. Refill the transmission with the recommended Genuine Honda CVT Fluid (see page 14-231).

CAUTION: While filling the CVT Fluid, be sure not to allow dust and other foreign particles to enter into the transmission.

30. Connect the battery positive (+) terminal first, then the negative (-) terminal to the battery.
31. Check the ignition timing (see section 23).
32. Start the engine. Set the parking brake, and shift the transmission through all gears three times. Check shift cable adjustment (see page 14-287).
33. Check the front wheel alignment (see section 18).
34. Let the engine reach operating temperature (the radiator fan comes on) with the transmission in **N** or **P** position, then turn it off and check fluid level.
35. Perform the start clutch calibration procedure on page 14-225.
36. Road test as described on pages 14-228 and 14-229.

Transmission

Cooler Flushing

▲ WARNING To prevent injury to face and eyes, always wear safety glasses or a face shield when using the transmission flusher.

NOTE: This procedure should be performed before reinstalling the transmission.


1. Check tool and hoses for wear and cracks before using. If wear or cracks are found, replace the hoses before using.
2. Using the measuring cup, fill the tank with 21 ounces (approximately 2/3 full) of biodegradable flushing fluid (J35944 - 20). Do not substitute with any other fluid. Follow the handling procedure on the fluid container.
3. Secure the flusher filler cap, and pressurize the tank with compressed air to between 550 - 829 kpa (5.6 - 8.45 kgf/cm², 80 - 120 psi).

NOTE: The air line should be equipped with a water trap to ensure a dry air system.


4. Hang the tool under the vehicle.
5. Attach the tank's discharge hose to the return line of the transmission cooler using a clamp.
6. Connect the drain hose to the inlet line on the transmission cooler using a clamp.

IMPORTANT:

Securely clamp the opposite end of the drain hose to a bucket or floor drain.

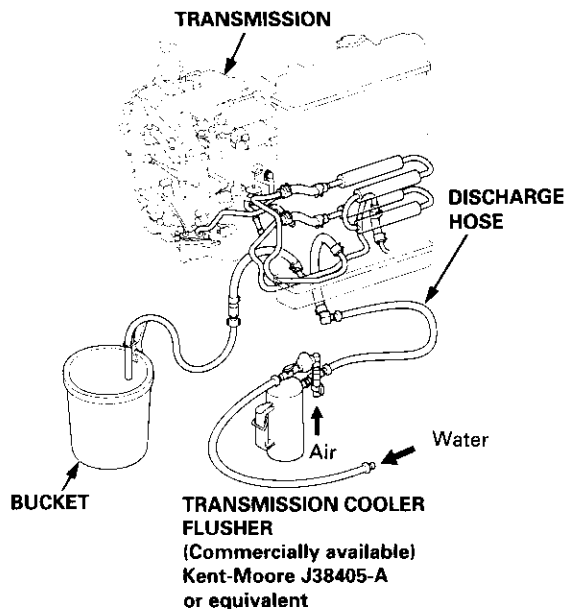

7. With the water and air valves off, attach the water and air supplies to the flusher. (Hot water if available.)

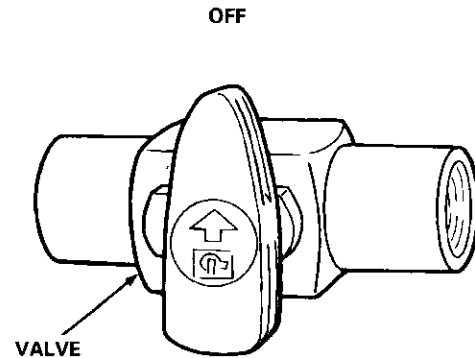

8. Turn on the flusher water valve so water will flow through the cooler for 10 seconds.

NOTE: If water does not flow through the cooler, it is completely plugged, cannot be flushed, and must be replaced.


9. Depress the trigger to mix the flushing fluid into the water flow. Use the wire clip to hold the trigger down.
 10. While flushing with the water and flushing fluid for two minutes, turn the air valve on for five seconds every 15 - 20 seconds to create a surging action.
AIR PRESSURE: MAX 845 kpa (8.45 kgf/cm², 120 psi)
 11. Turn the water valve off. Release the trigger, then reverse the hoses to the cooler so you can flush in the opposite direction. Repeat steps 8 through 10.
 12. Release the trigger, and rinse the cooler with water only for one minute.
 13. Turn the water valve off, and turn off the water supply.
 14. Turn the air valve on to dry the system out with air for two full minutes or until no moisture is visible leaving the drain hose.
- CAUTION: Residual moisture in the cooler or lines can damage the transmission.**
15. Remove the flusher from the cooler line. Attach the drain hose to a container.
 16. Install the transmission, and leave the drain hose attached to the cooler line.



17. Make sure the transmission is in the **P** position. Fill the transmission with CVT Fluid, and run the engine for 30 seconds or until approximately 0.95 ℓ (1.0 US qt., 0.8 Imp qt.) is discharged.
18. Remove the drain hose, and reconnect the cooler return hose to the transmission (see page 14-287).
19. Refill the transmission with CVT Fluid to the proper level (see page 14-231).

TOOL MAINTENANCE

1. Empty and rinse after each use. Fill the can with water and pressurize the can. Flush the discharge line to ensure that the unit is clean.
2. If discharge liquid does not foam, the orifice may be blocked.
3. To clean, disconnect the plumbing from the tank at the large coupling nut.

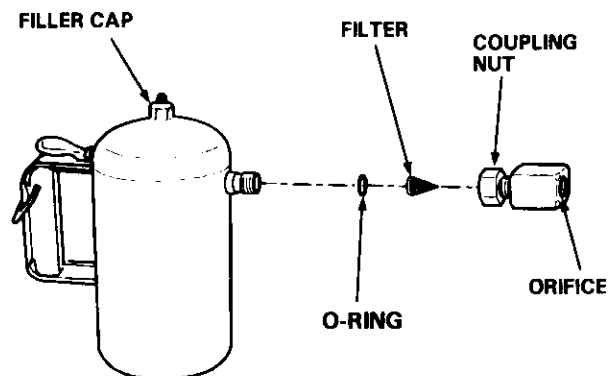


4. Remove the in-line filter from the discharge side and clean if necessary.
5. The fluid orifice is located behind the filter. Clean it with the pick stored in the bottom of the tank handle, or blow it clean with air. Securely reassemble all parts.

Shift Cable


Removal/Installation

WARNING Make sure lifts, jacks and safety stands are placed properly (see section 1).


1. Remove the front console (see section 20).
2. Shift to **N** position, then remove the lock pin from the adjuster.

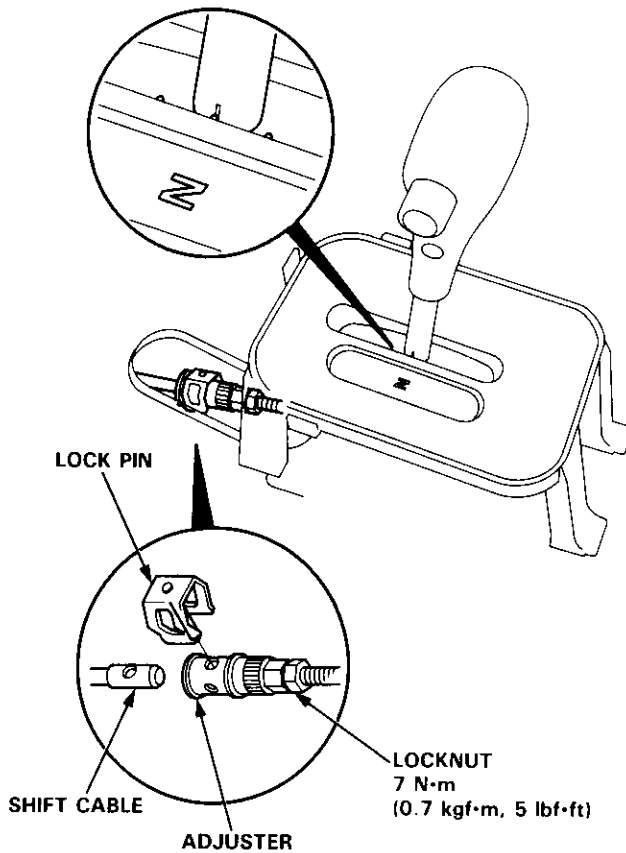

3. Remove the air cleaner housing assembly.
4. Remove the clip from the control lever, and loosen the locknut.

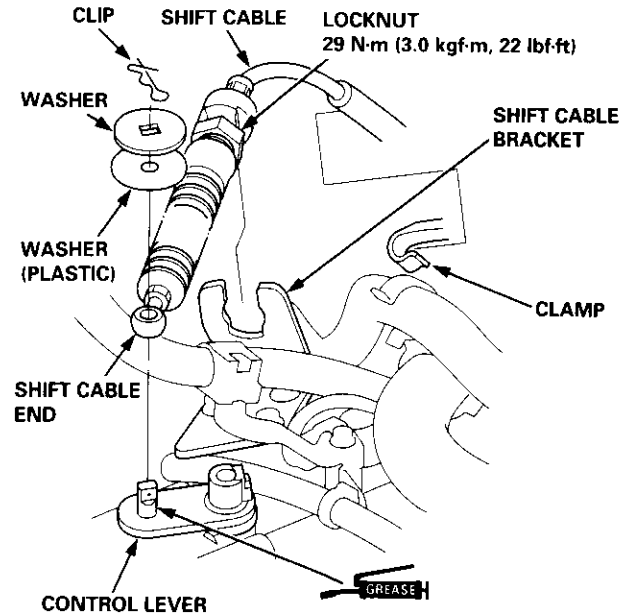

5. Remove the shift cable from the control lever, the shift cable bracket, and the clamp.
6. Remove the shift cable bracket bolts and nuts, then remove the shift cable. Take care not to bend the shift cable when removing/installing it.

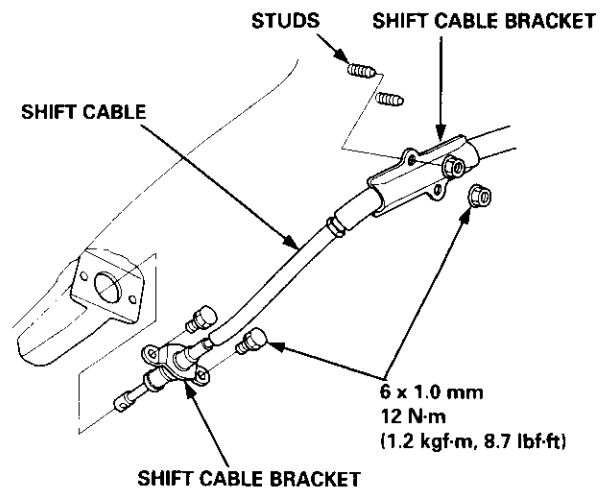


7. Install the shift cable in the reverse order of removal.
8. Check the cable adjustment (see page 14-287).




Adjustment

▲ WARNING Make sure lifts, jacks and safety stands are placed properly (see section 1).

1. Remove the front console (see section 20).
2. Shift to **N** position, then remove the lock pin from the adjuster.

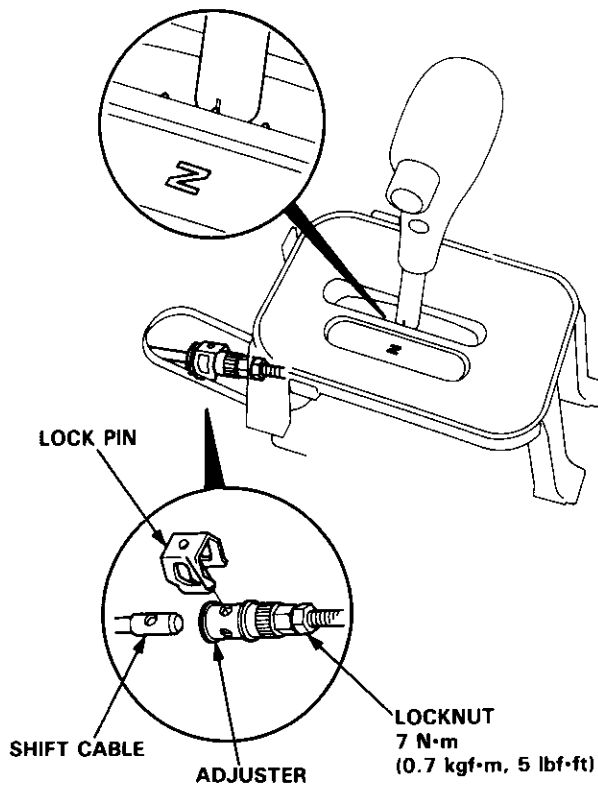


3. Check that the hole in the adjuster is perfectly aligned with the hole in the shift cable. There are two holes in the adjuster. They are positioned 90° apart to allow cable adjustment in 1/4 turn increments.

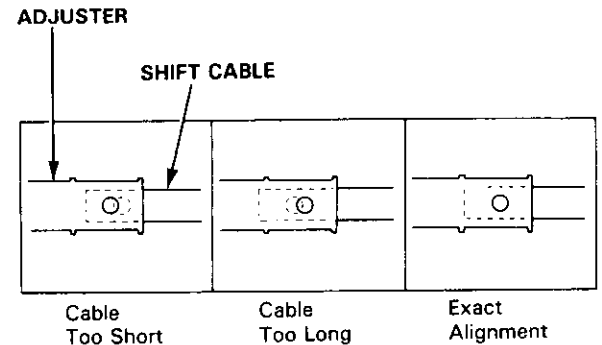

4. If the hole is not perfectly aligned, loosen the locknut on the adjuster and adjust as required.
5. Tighten the locknut to 7 N·m (0.7 kgf·m, 5 lbf·ft).
6. Install the lock pin on the adjuster. If you feel the lock pin binding as you reinstall it, the cable is still out of adjustment and must be readjusted.
7. Make sure the lock pin is seated in the adjuster securely.
8. Move the shift lever to each position, and verify that the shift position indicator follows the automatic transaxle gear position switch.
9. Start the engine, and check the shift lever in all positions. If any gear does not work properly, refer to troubleshooting (see page 14-226 and 14-227).
10. Insert the ignition key into the key cylinder on the A/T gear position indicator panel, and verify that the shift lock lever is released.


Shift Lever

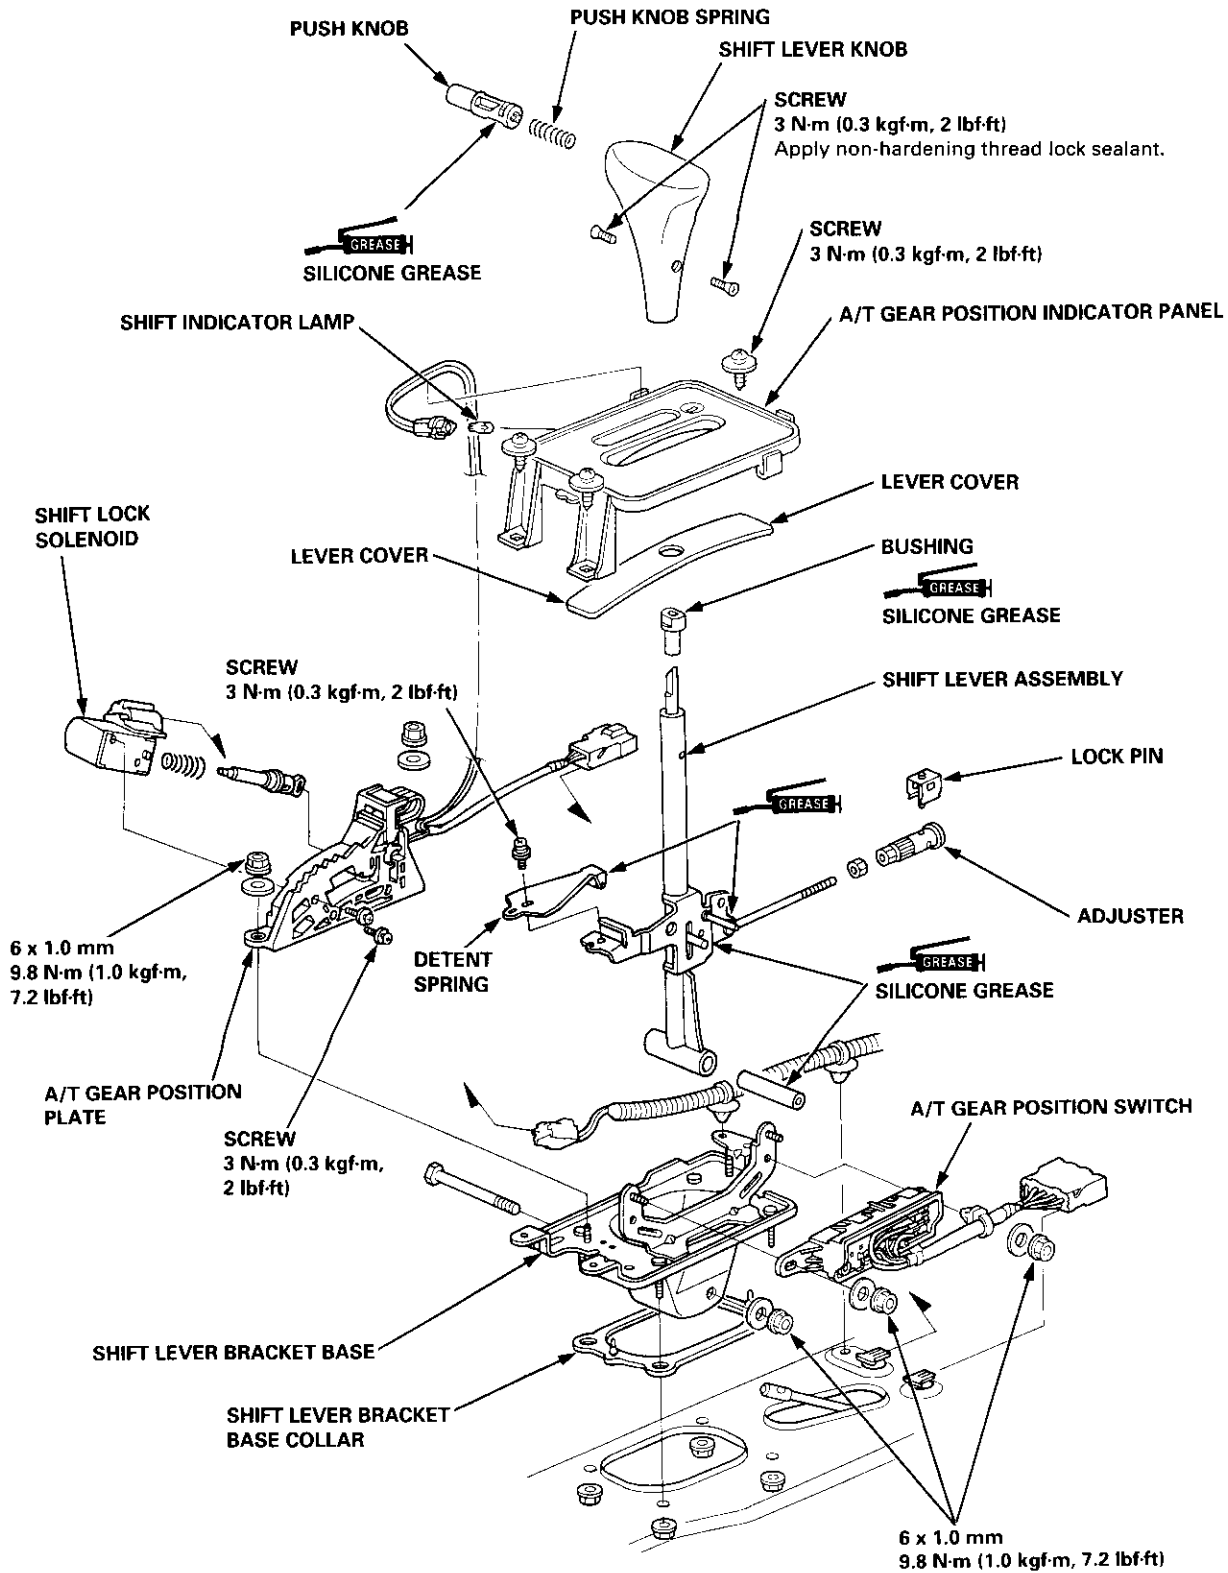



Adjustment

1. Check that the index mark on the indicator aligns with the **N** mark on the shift indicator panel when the transmission is in NEUTRAL.

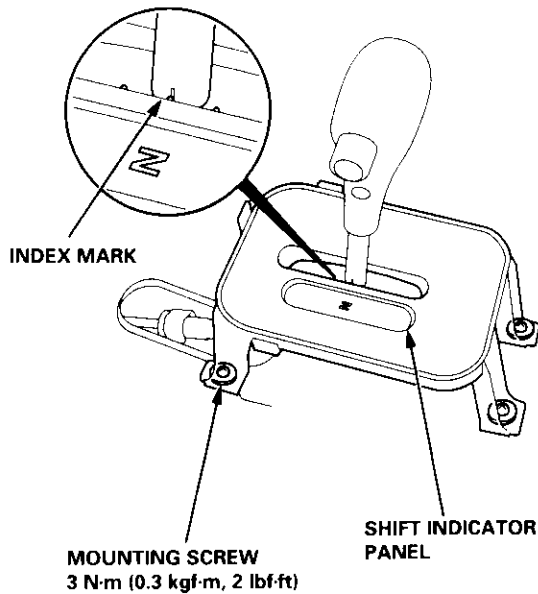


2. If not aligned, remove the front console (see section 20).
3. Remove the shift indicator panel mounting screws and adjust by moving the panel.


NOTE: Whenever the shift indicator panel is removed, reinstall the panel as described above.

Installation

1. Install the ATF cooler, ATF cooler pipe assembly and the ATF cooler hoses.

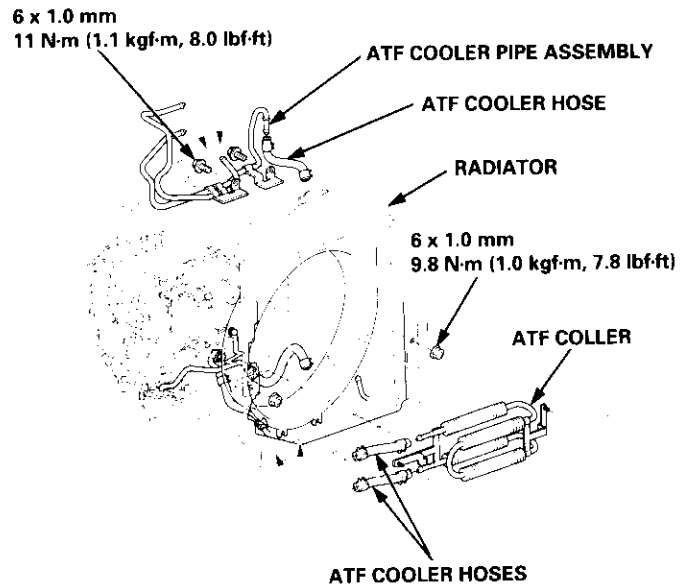

2. Connect the ATF cooler hoses to the ATF cooler lines and ATF cooler, and secure them with the clips as shown.

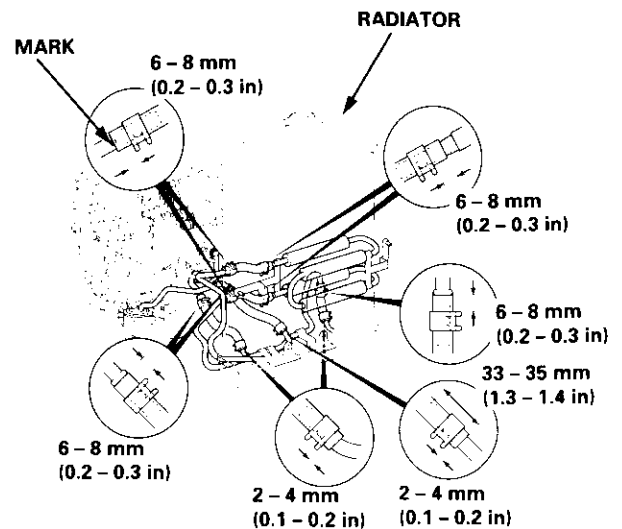

Differential

Manual Transmission section 13

Automatic Transmission section 14




Driveshafts

Special Tools	16-2
Driveshafts	
Inspection	16-3
Removal	16-3
Disassembly	16-5
Reassembly	16-7
Installation	16-11



Special Tools

Ref. No.	Tool Number	Description	Qty	Page Reference
①	07MAC - SL00200	Ball Joint Remover, 28 mm	1	16-4

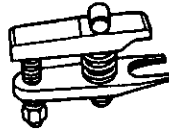

①



Inspection

Driveshaft Boot


Check the boots on the driveshaft for cracks, damage, leaking grease and loose boot bands. If any damage is found, replace the boot and boot bands.

Loose Splines

Turn the driveshaft by hand and make sure the splines and joint are not excessively loose. If any damage is found, replace the inboard joint.


Twisted or Cracked

Make sure the driveshaft is not twisted or cracked. Replace it if necessary.

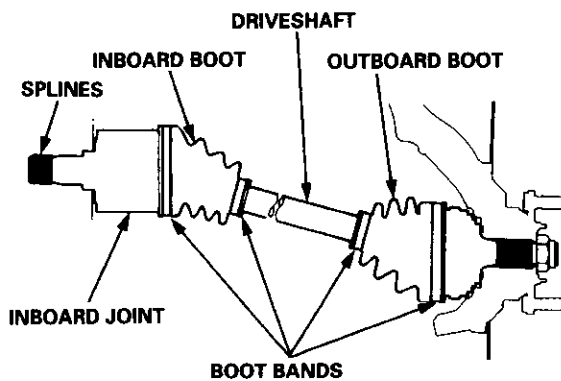


Removal

1. Loosen the wheel nuts slightly.
2. Raise the front of the vehicle, and support it with safety stands in the proper locations (see section 1).
3. Remove the wheel nuts and front wheels.

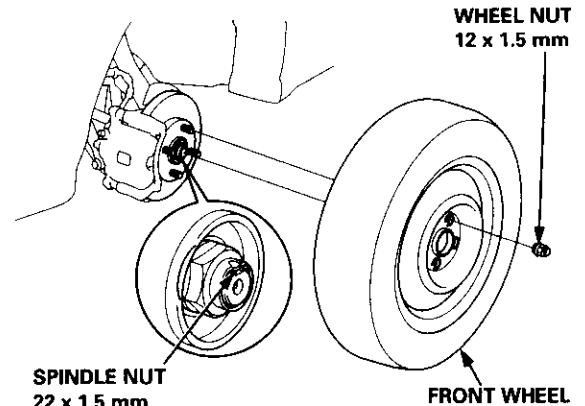

4. Drain the transmission fluid (see section 13 or 14).
5. Raise the locking tab on the spindle nut, then remove the nut.
6. Remove the self-locking nut and flange bolts.

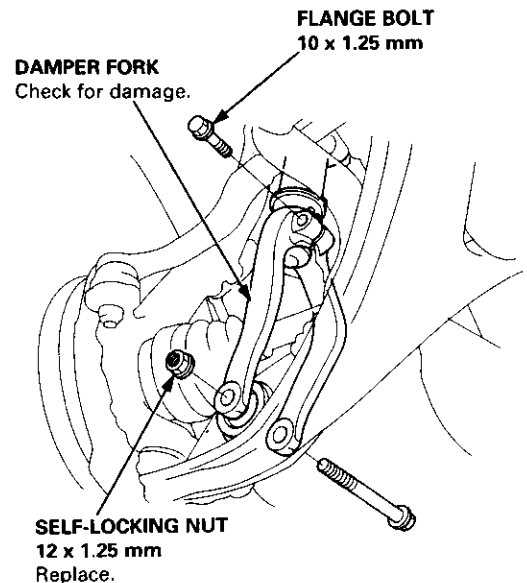


7. Remove the damper fork.

(cont'd)

Driveshafts

Removal (cont'd)


- Remove the cotter pin from the lower arm ball joint castle nut, and remove the nut.

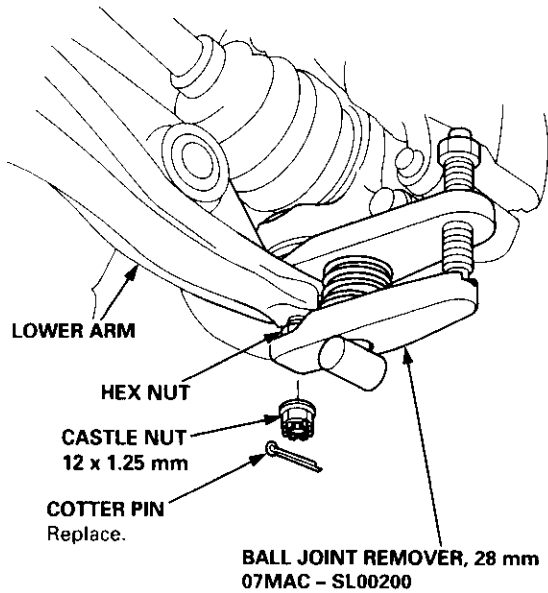


- Install a 12 mm hex nut on the ball joint. Be sure that the hex nut is flush with the ball joint pin end, or the threaded section of the ball joint pin might be damaged by the special tool.
- Use the special tool as shown in section 18, to separate the ball joint and lower arm. Be careful not to damage the ball joint boot.

NOTE: If necessary, apply penetrating type lubricant to loosen the ball joint.


- Pry the driveshaft assembly with a screwdriver, as shown, to force the set ring at the driveshaft end past the groove.

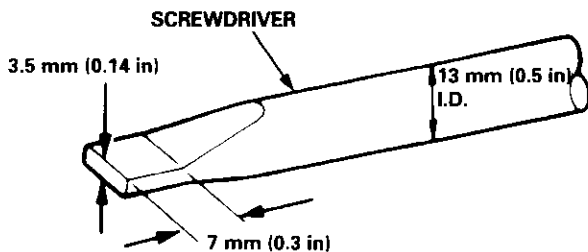

- Pull the inboard joint, and remove the driveshaft from the differential case as an assembly. Do not pull on the driveshaft; the inboard joint may come apart. Use care when prying out the assembly, and pull it straight to avoid damaging the differential oil seal.

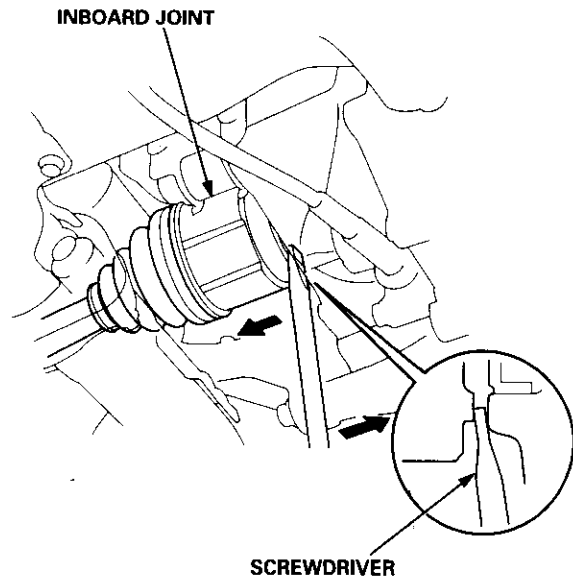


- Pull the knuckle outward, and remove the driveshaft outboard joint from the front wheel hub using a plastic hammer.

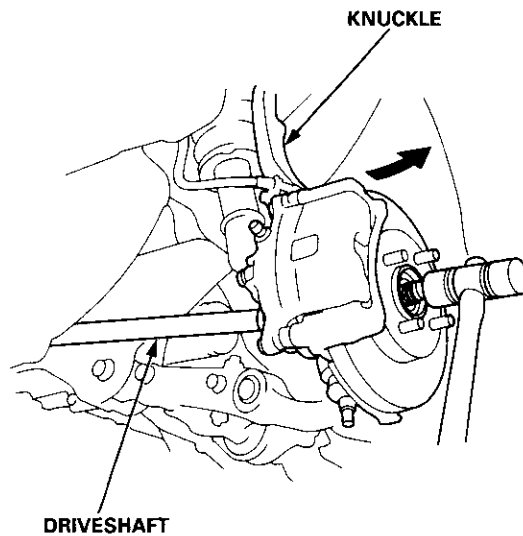




Disassembly


1. Carefully clamp the driveshaft in a vise with soft jaws, then remove the set ring from the inboard joint.
2. To remove the boot band, pry up the locking tabs with a screwdriver and raise the end of the band. Take care not to damage the boot.

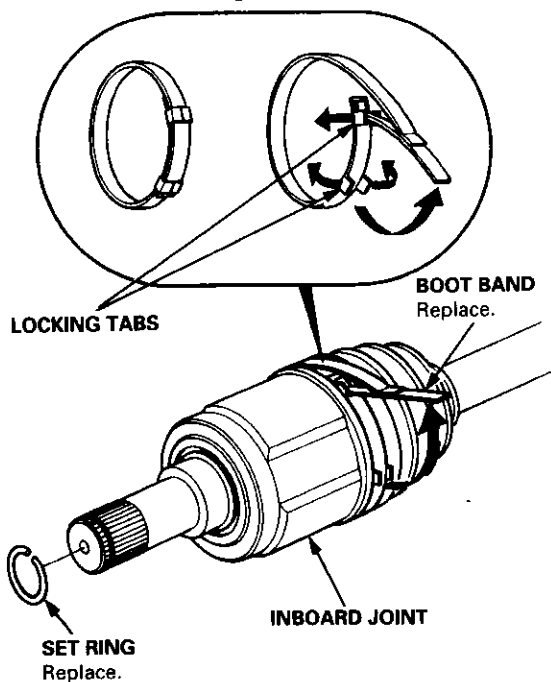


— If the boot band is the welded type, cut it off as shown.

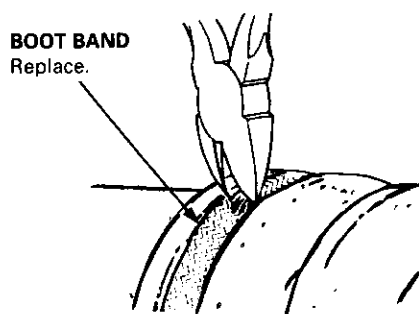

— If the boot band is the crimping type, pry up the end of the band with a screwdriver.

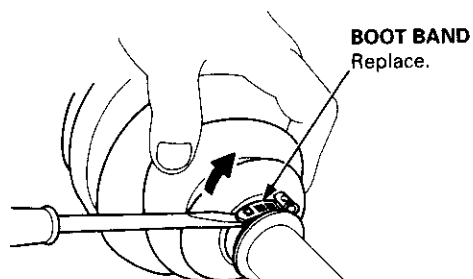


— If the boot band is double loop type, raise the band bend as shown.

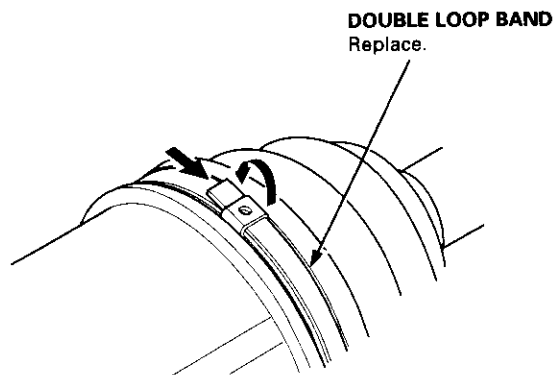

3. Mark each roller and inboard joint to identify the locations of rollers and grooves in the inboard joint. Then remove the inboard joint on the shop towel. Be careful not to drop the rollers when separating them from the inboard joint.

INBOARD JOINT

Check splines for wear or damage.
Check inside bore for wear.
Inspect for cracks.

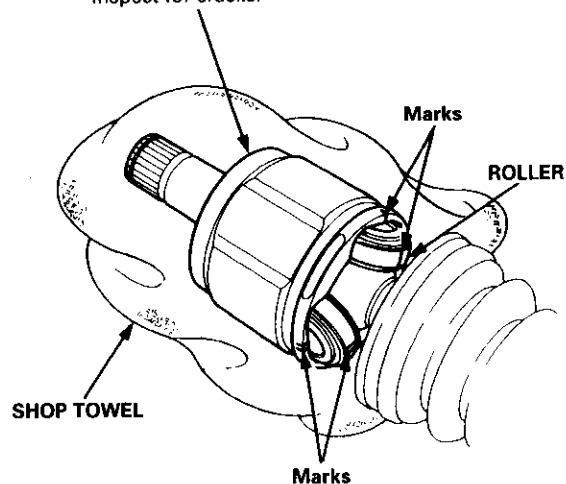


(cont'd)

Driveshafts


Disassembly (cont'd)

4. Mark the rollers and spider to identify the locations of rollers on the spider, then remove the rollers.

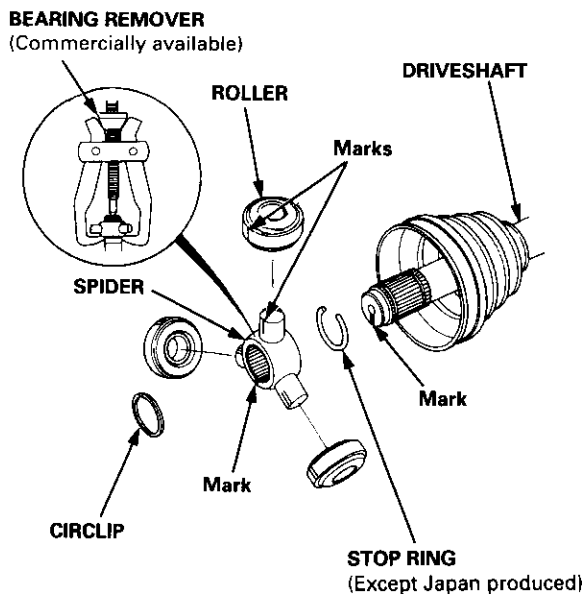


5. Remove the circlip.
6. Mark the spider and driveshaft to identify the position of the spider on the shaft.
7. Remove the spider using a bearing remover.
8. Remove the stop ring (except Japan produced).

9. Wrap the splines on the driveshaft with vinyl tape to prevent damage to the boots and dynamic damper.

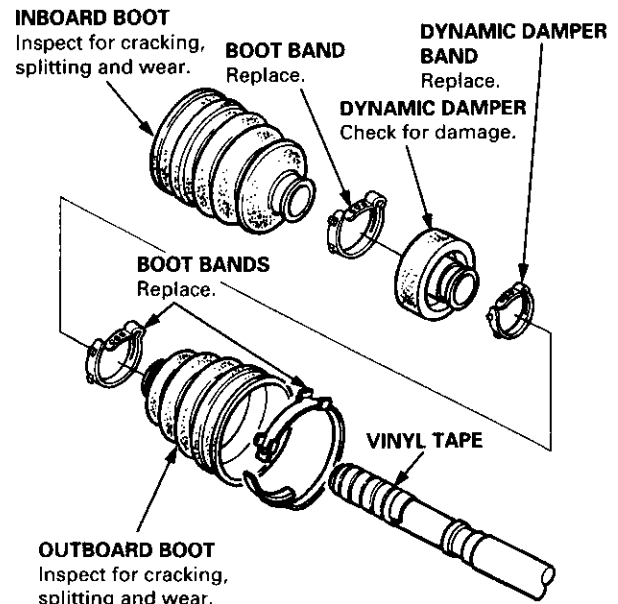


10. Remove the boot band and inboard boot. Take care not to damage the boot.
11. Remove the dynamic damper band and dynamic damper, if equipped. Take care not to damage the dynamic damper.
12. Remove the boot bands and outboard boot, then remove the vinyl tape.
13. Inspect the outboard joint for faulty movement and wear. If any roughness or excess play is felt, replace the outboard joint.

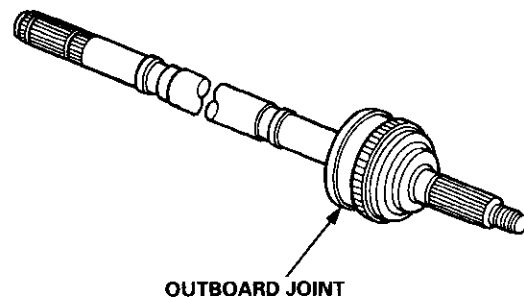




Reassembly

Note these items during reassembly:

- Clean the disassembled parts with solvent, and dry them thoroughly with compressed air. Do not wash the rubber parts with solvent.
-  : Thoroughly pack the inboard joint and both joint boots with the joint grease included in the new driveshaft set.

Grease quantity:

Inboard Joint	Japan Produced	110 – 120 g (3.9 – 4.2 oz)
	Except Japan Produced	120 – 130 g (4.2 – 4.6 oz)
Outboard Joint	Japan Produced	70 – 80 g (2.5 – 2.8 oz)
	Except Japan Produced	115 – 135 g (4.0 – 4.8 oz)

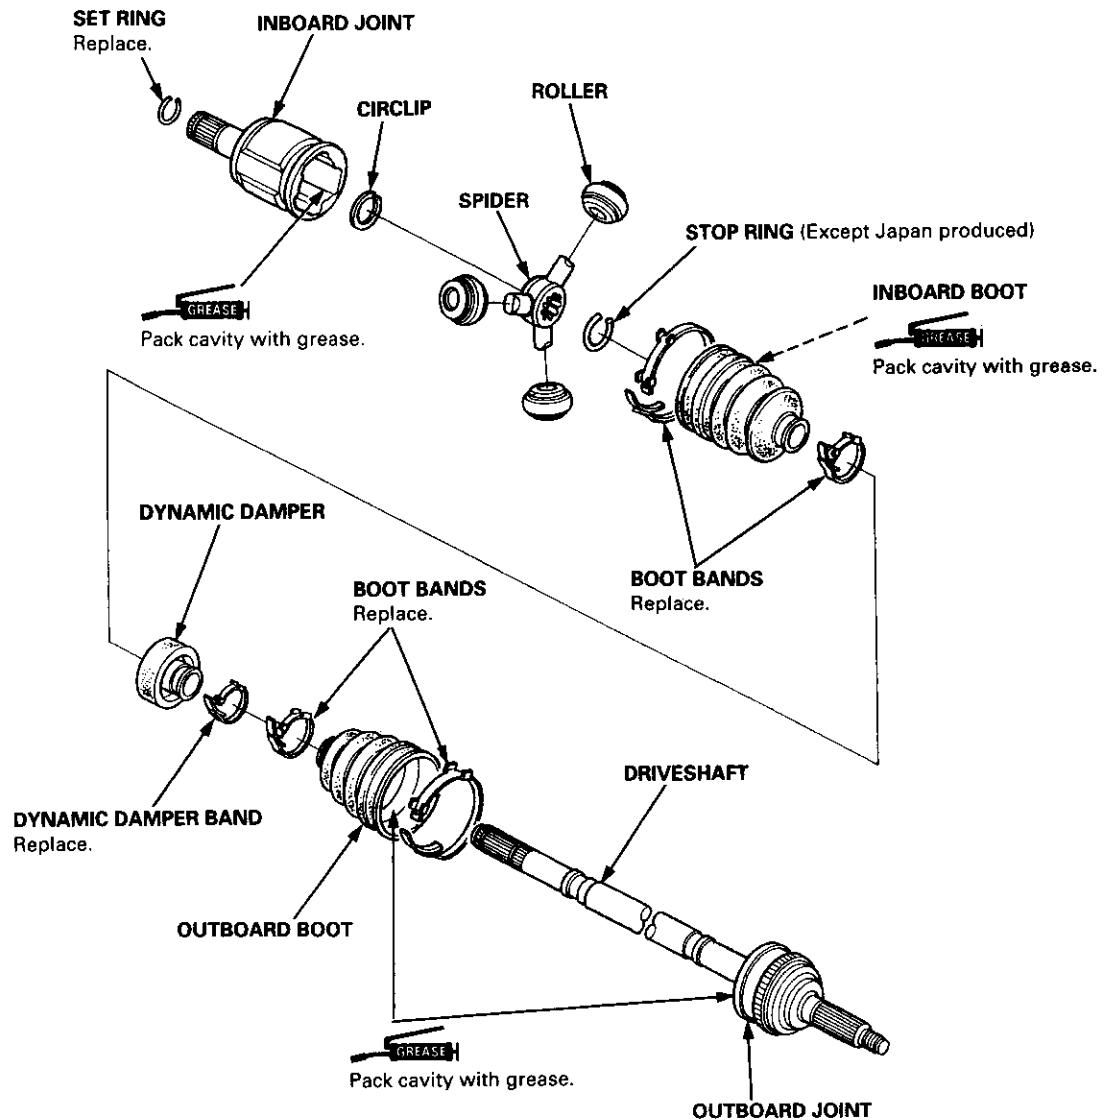


(cont'd)

Driveshafts

Reassembly (cont'd)

1. Wrap the splines with vinyl tape to prevent damage to the boots and dynamic damper.

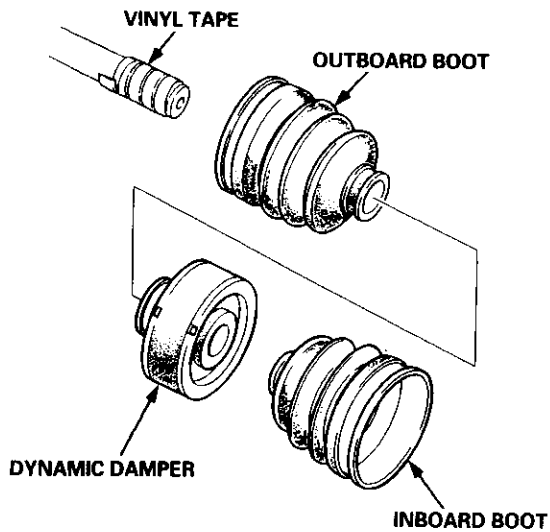


2. Install the outboard boot, dynamic damper and inboard boot to the driveshaft, then remove the vinyl tape. Take care not to damage the boots and dynamic damper.

3. Pack the outboard joint with the joint grease included in the new driveshaft set.


Grease quantity:

Japan Produced: 70 - 80 g (2.5 - 2.8 oz)

Except Japan Produced: 115 - 135 g (4.0 - 4.8 oz)

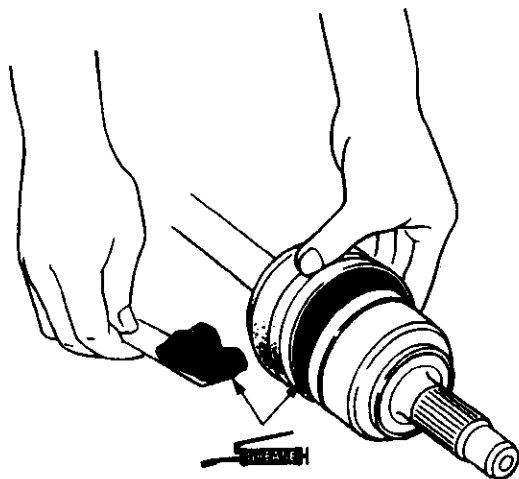

4. Install the stop ring into the driveshaft groove (except Japan produced). Always rotate the stop ring in its groove to be sure it is fully seated.

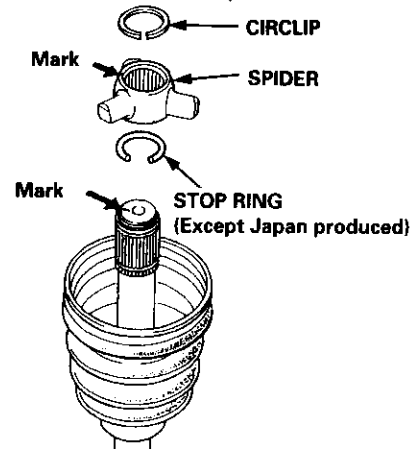


5. Install the spider on the driveshaft by aligning the marks on the spider and end of the driveshaft.

6. Fit the circlip into the driveshaft groove. Always rotate the circlip in its groove to be sure it is fully seated.

7. Fit the rollers to the spider with their high shoulders facing outward, and note these items:

- Reinstall the rollers in their original positions on the spider by aligning the marks.
- Hold the driveshaft pointed up to prevent the rollers from falling off.

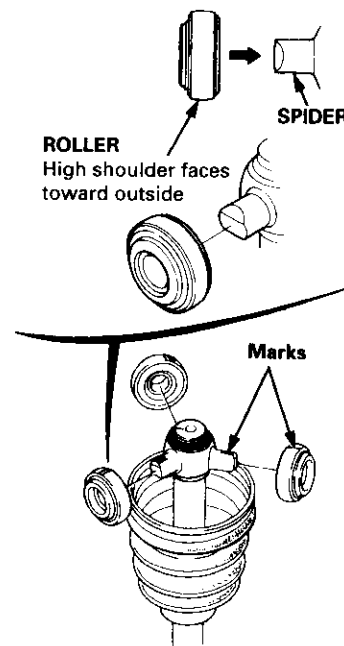




8. Pack the inboard joint with the joint grease included in the new driveshaft set.

Grease quantity:


Japan Produced: 110 – 120 g (3.9 – 4.2 oz)

Except Japan Produced: 120 – 130 g (4.2 – 4.6 oz)

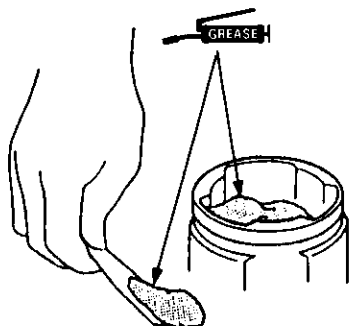

9. Fit the inboard joint onto the driveshaft, and note these items:


- Reinstall the inboard joint onto the driveshaft by aligning the marks on the inboard joint with the marks on the rollers.
- Hold the driveshaft so the inboard joint points up to prevent it from falling off.

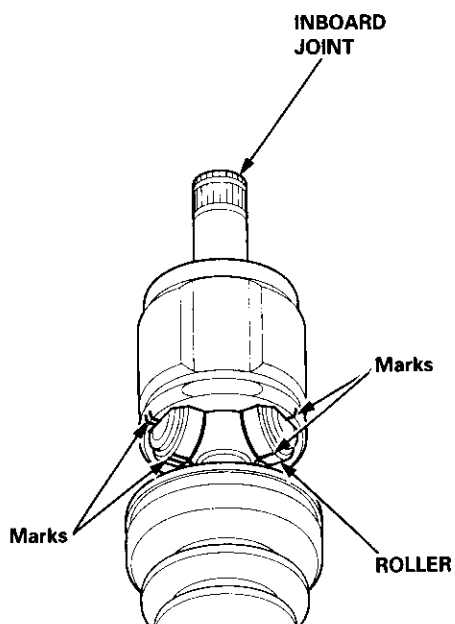

10. Adjust the length of the driveshafts to the figure below, then adjust the boots to halfway between full compression and full extension. The ends of boots seat in the groove of the driveshaft and joint.

Left driveshaft: 774 – 779 mm (30.5 – 30.7 in)

Right driveshaft: 501 – 506 mm (19.7 – 19.9 in)

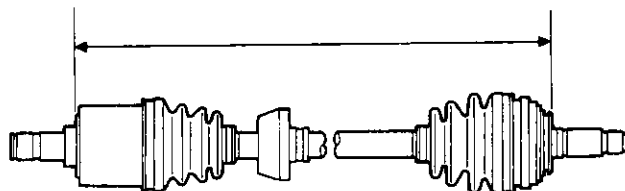



11. Position the dynamic damper as shown below.

Left:

Without "SR1" mark: 94 ± 2 mm (3.7 ± 0.1 in)

With "SR1" mark: 75 ± 2 mm (2.9 ± 0.1 in)

Right: 55 ± 2 mm (2.2 ± 0.1 in)

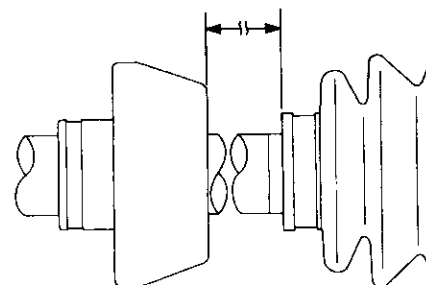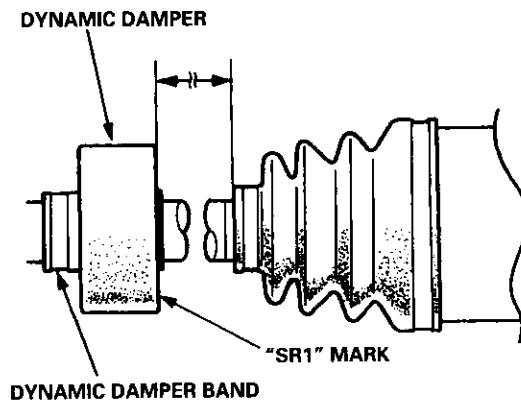


(cont'd)


Driveshafts

Reassembly (cont'd)


12. Set the double loop band onto the boot and dynamic damper with the band end toward to front of the vehicle.

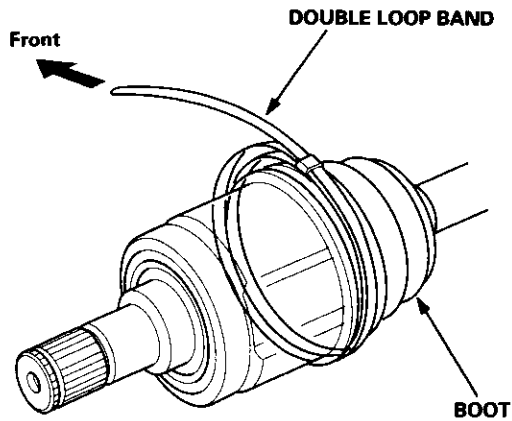


13. Pull up the slack in the band by hand.
14. Mark a position on the band 10 – 14 mm (0.4 – 0.6 in) from the clip.

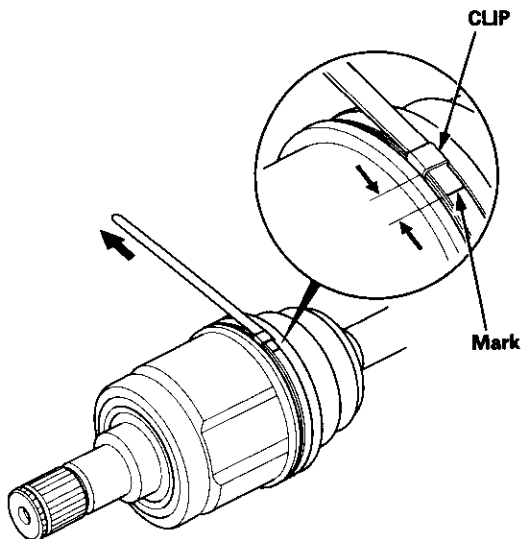

15. Thread the free end of the band through the nose section of the boot band tool and into the slot on the winding mandrel.
16. Place a wrench on the winding mandrel of the boot band tool, and tighten the band until the mark you made on the band meets the edge of the clip.

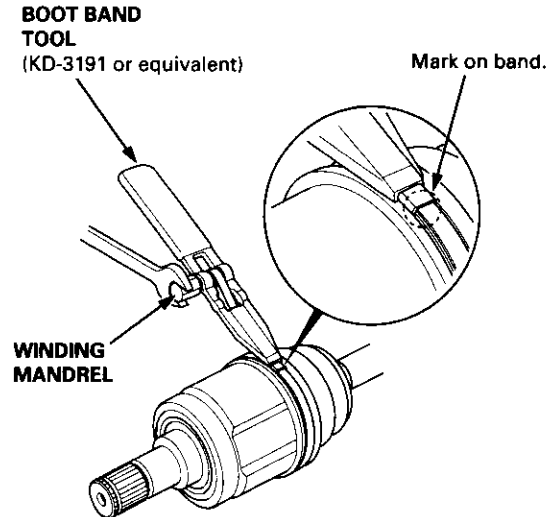


17. Raise up the boot band tool to bend the free end of the band 90 degrees, then center-punch the clip.

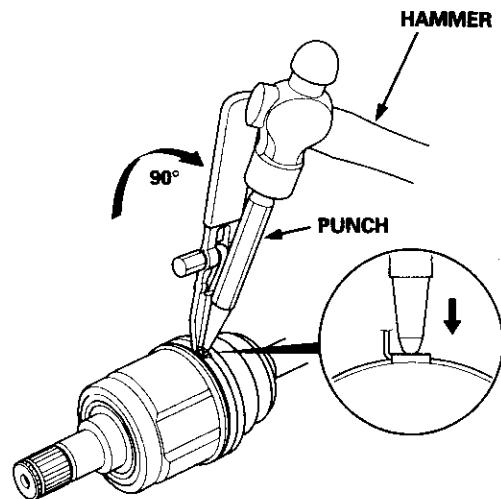




Installation

18. Unwind the boot band tool, and cut off the excess 5 – 10 mm (0.2 – 0.4 in) from the clip.

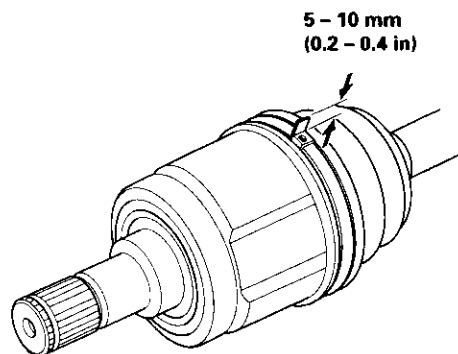


19. Secure the end of the boot band by tapping it down with a hammer.

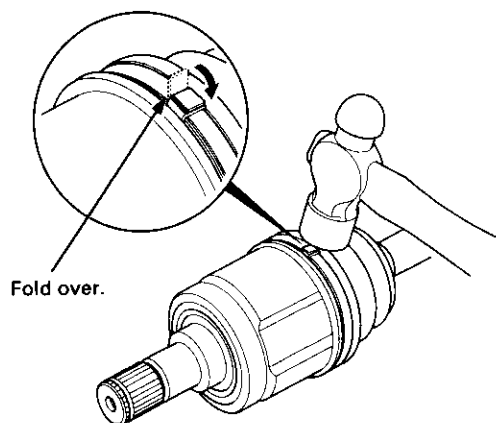


Note these items after reassembly:

- Make sure the band and clip does not interfere with anything and the band does not move.
- Remove any grease remaining on the surrounding surfaces.

1. Install the new set ring onto the driveshaft groove. Always use a new set ring whenever the driveshaft is being installed.

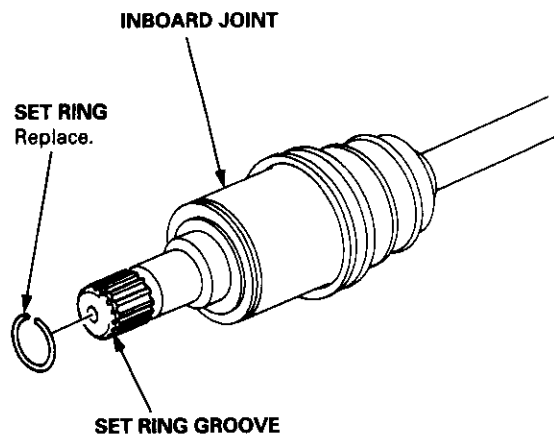

2. Install the outboard joint into the knuckle.

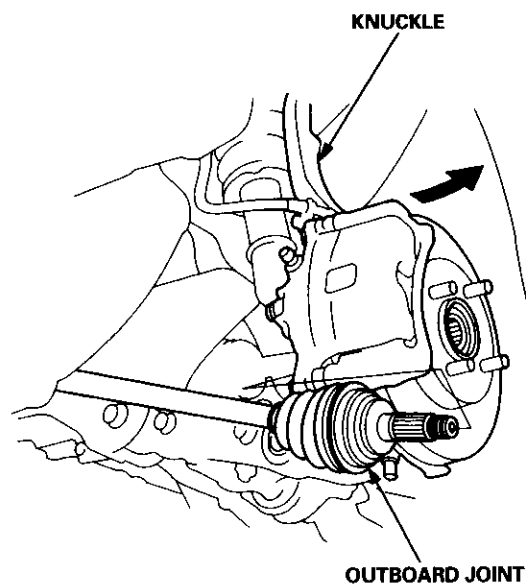


(cont'd)


Driveshafts

Installation (cont'd)


3. Clean the areas where the driveshaft contact the transmission (differential) thoroughly with solvent or carburetor cleaner, and dry with compressed air. Insert the inboard end of the driveshaft into the differential until the set ring locks in the groove.

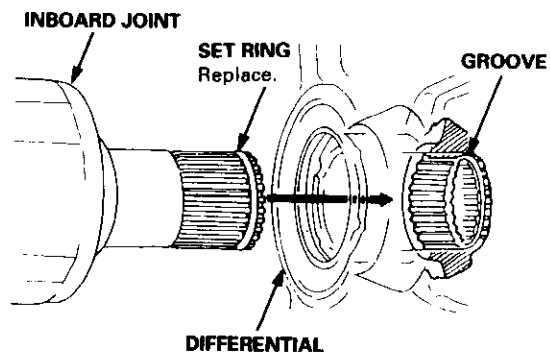


4. Install the knuckle on the lower arm. Be careful not damage the ball joint boot. Wipe off the grease before tightening the nut at the ball joint. Torque the castle nut to the lower torque specification, then tighten it only far enough to align the slot with the pin hole. Do not align the nut by loosening.

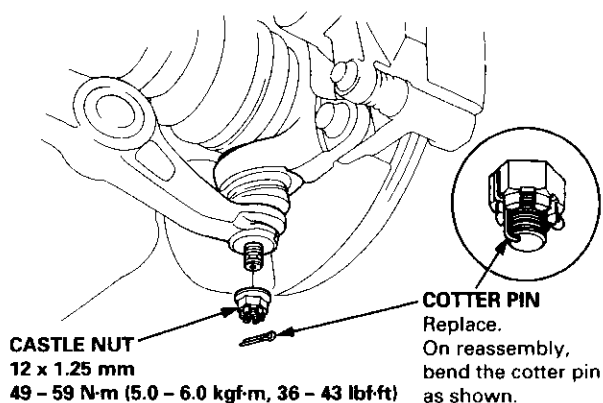

5. Install the damper fork over the driveshaft and onto the lower arm. Install the damper in the damper fork so the aligning tab is aligned with the slot in the damper fork.

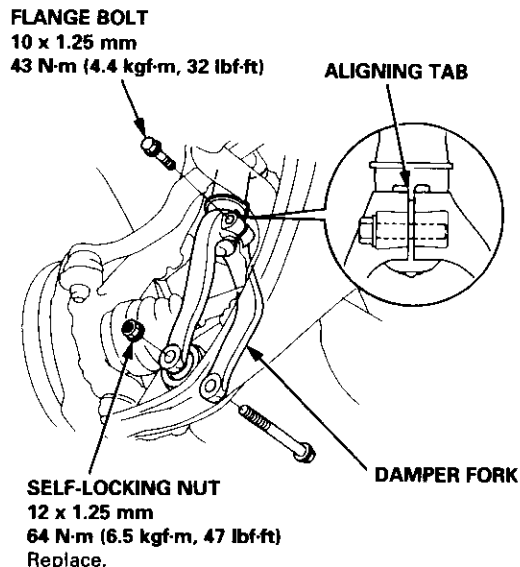

6. Loosely install the flange bolts and the new self-locking nut.
7. Apply oil to the seating surface of the new spindle nut.

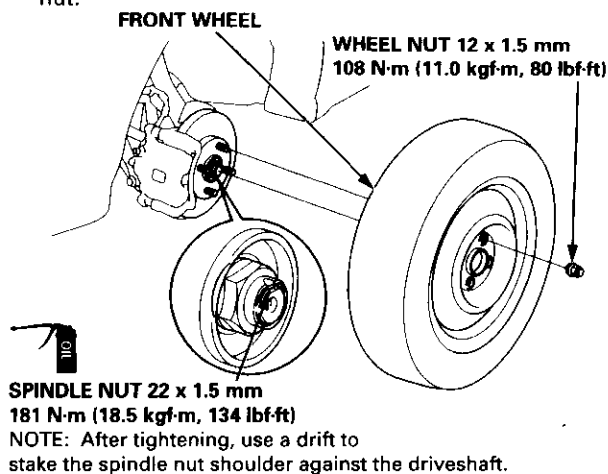

8. Install a new spindle nut, then tighten the nut.
9. Clean the mating surfaces of the brake disc and the wheel, then install the front wheel with the wheel nuts.
10. Tighten the flange bolts and the new self-locking nut with the vehicle's weight on the damper.
11. Refill the transmission with recommended fluid (see section 13 or 14).
12. Check the front wheel alignment and adjust if necessary (see section 18).

Steering

Special Tools 17-2

Manual Steering

Component Locations

Index 17-3

Inspection and Adjustment

Steering Operation 17-4

Rack Guide Adjustment 17-5

*Steering Wheel

(See power steering section)

*Steering Column

(See power steering section)

Steering Gearbox

Removal 17-5

Disassembly 17-7

Reassembly 17-9

Installation 17-13

Power Steering

Component Locations

Index 17-15

System Description

Fluid Flow Diagram 17-16

Steering Pump 17-17

Steering Gearbox 17-20

Troubleshooting

General Troubleshooting 17-22

Noise and Vibration 17-26

Fluid Leaks 17-28

Inspection and Adjustment

Steering Operation 17-30

Power Assist Check

With Vehicle Parked 17-30

Steering Linkage and Gearbox 17-31

Pump Belt 17-32

Rack Guide Adjustment 17-33

Fluid Replacement 17-33

Pump Pressure Check 17-34

*Steering Wheel

Removal 17-35

Installation 17-35

Disassembly/Reassembly 17-36

*Steering Column

Removal/Installation 17-37

Inspection 17-38

Power Steering Hoses, Lines

Fluid Leakage Inspection 17-39

Replacement 17-39

Power Steering Pump

Removal/Installation 17-40

Disassembly 17-41

Inspection 17-42

Reassembly 17-44

Steering Gearbox

Removal 17-47

Disassembly 17-49

Reassembly 17-55

Installation 17-65


Ball Joint Boot Replacement 17-68



Special Tools

Ref. No	Tool Number	Description	Qty	Page Reference
①	07GAF - PH70100	Pilot Collar	1	17-54
②	07GAG - SD4010A or 07GAG - SD40100	Piston Seal Ring Guide	1	17-59
③	07GAG - SD4020A or 07GAG - SD40200	Piston Seal Ring Sizing Tool	1	17-59
④	*07JGG - 001010A	Belt Tension Gauge	1	17-32
⑤	07MAC - SL00200	Ball Joint Remover, 28 mm	1	17-6, 47
⑥	07NAD - SR3020A	Cylinder End Seal Remover Attachment	1	17-51
⑦	07NAG - SR3090A or 07NAG - SR30900	Piston Seal Ring Sizing Tool	1	17-56
⑧	07RAK - S040110	P/S Joint Adaptor (Pump)	1	17-34
⑨	07RAK - S040121 or 07RAK - S040120	P/S Joint Adaptor (Hose)	1	17-34
⑩	07406 - 001000A or 07406 - 0010001	P/S Pressure Gauge	1	17-34
⑪	07725 - 0030000	Universal Holder	1	17-42, 46
⑫	07746 - 0010100	Attachment, 32 x 35 mm	1	17-57, 58
⑬	07746 - 0020100	Driver, 22 mm I.D.	1	17-10
⑭	07746 - 0030300	Attachment, 30 mm I.D.	1	17-44
⑮	07749 - 0010000	Driver	1	17-57
⑯	07916 - SA50001	Locknut Wrench, 40 mm	1	17-5, 33
⑰	07965 - SA50500	Front Hub Dis/Assembly Tool	1	17-68
⑱	07974 - SA5020A or 07974 - SA50200	Sleeve Seal Ring Sizing Tool	1	17-57
⑲	07974 - SA50800	Ball Joint Boot Clip Guide	1	17-57, 68

* Included in the Belt Tension Gauge Set, 07TGG - 001000A.

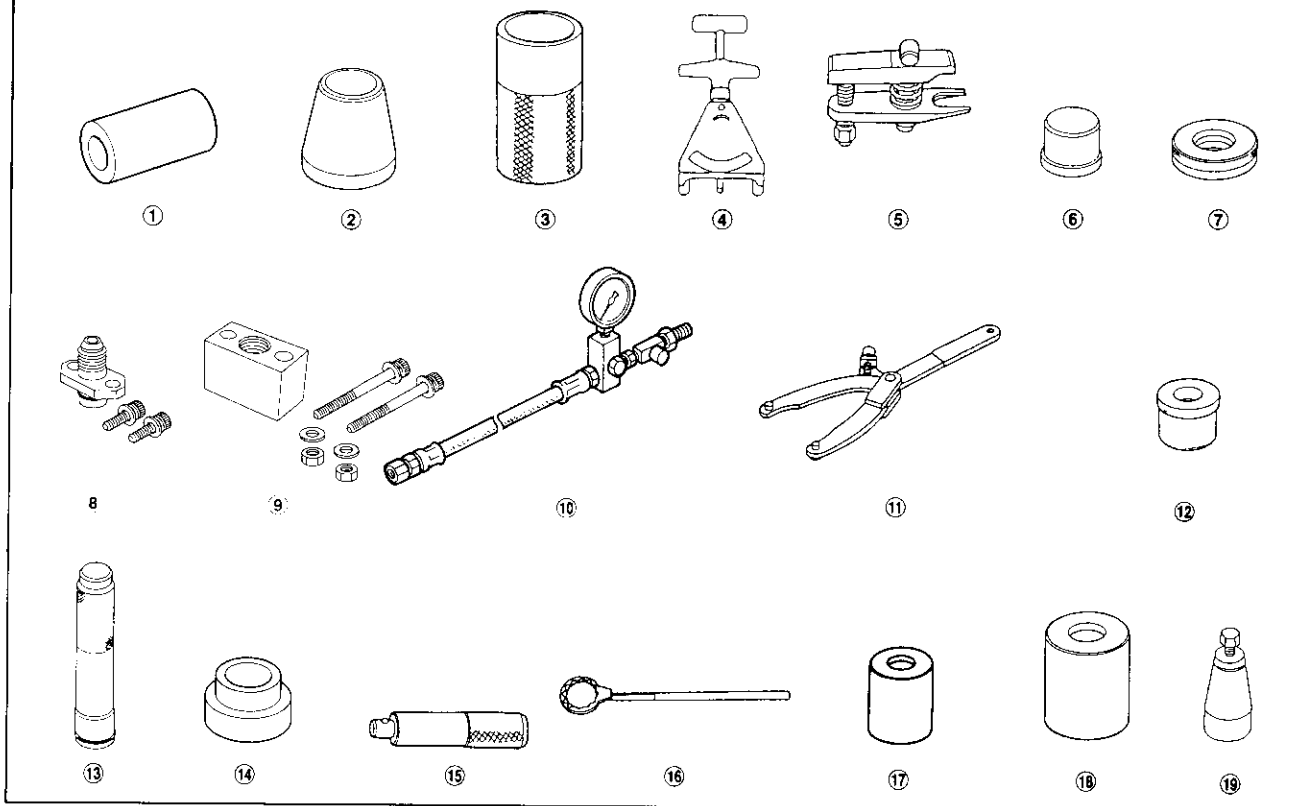




Index

Manual Steering

NOTE:

- If an intact airbag assembly has been removed from a scrapped vehicle or has been found defective or damaged during transit, storage or service, it should be deployed (see section 24).
- Before removing the gearbox, remove the driver's airbag assembly and steering wheel.
- After installing the gearbox, check the wheel alignment and adjust if necessary.

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

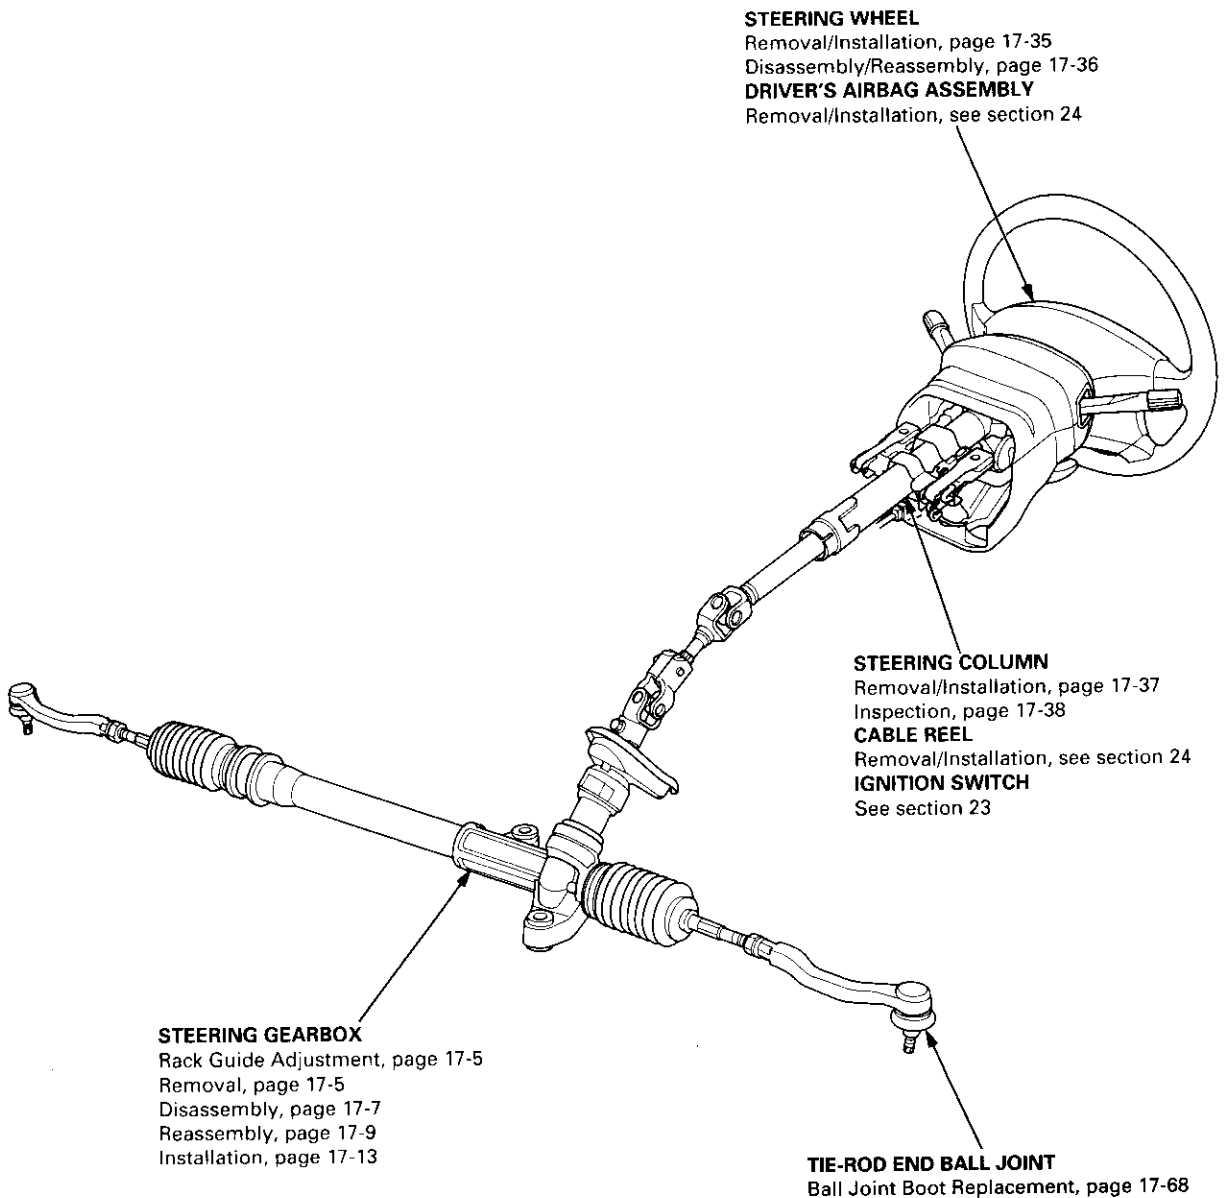

Inspection and Adjustment

Steering Operation


Steering Wheel Rotational Play

Place the front wheels in a straight ahead position and measure the distance the steering wheel can be turned without moving the front wheels.

ROTATIONAL PLAY: 0 – 10 mm (0 – 0.4 in)

If the play exceeds the service limit, perform rack guide adjustment (see page 17-5).

If the play is still excessive after rack guide adjustment, inspect the steering linkage and gearbox as described below.

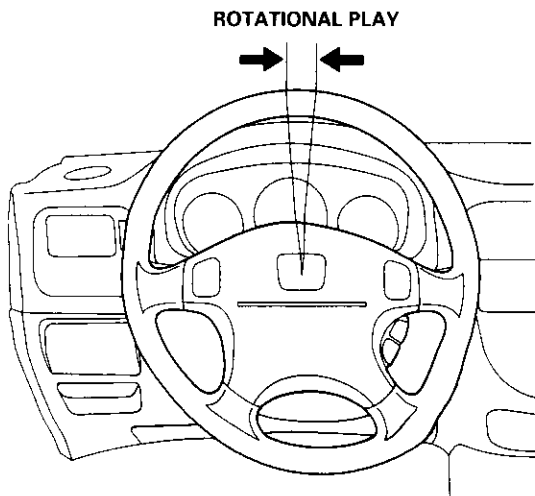


Steering Effort Check

Raise the front wheels off the ground.


Turn the steering wheel with a spring scale and check its reading.

Standard: 15 N (1.5 kgf, 3.3 lbf) maximum

If it reads more, perform rack guide adjustment (see page 17-5).

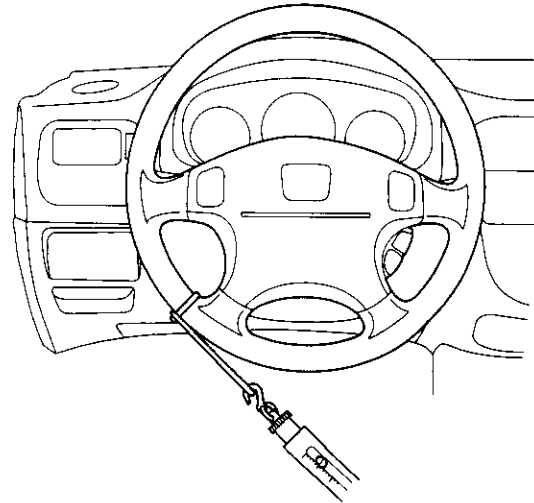

Steering Linkage and Gearbox

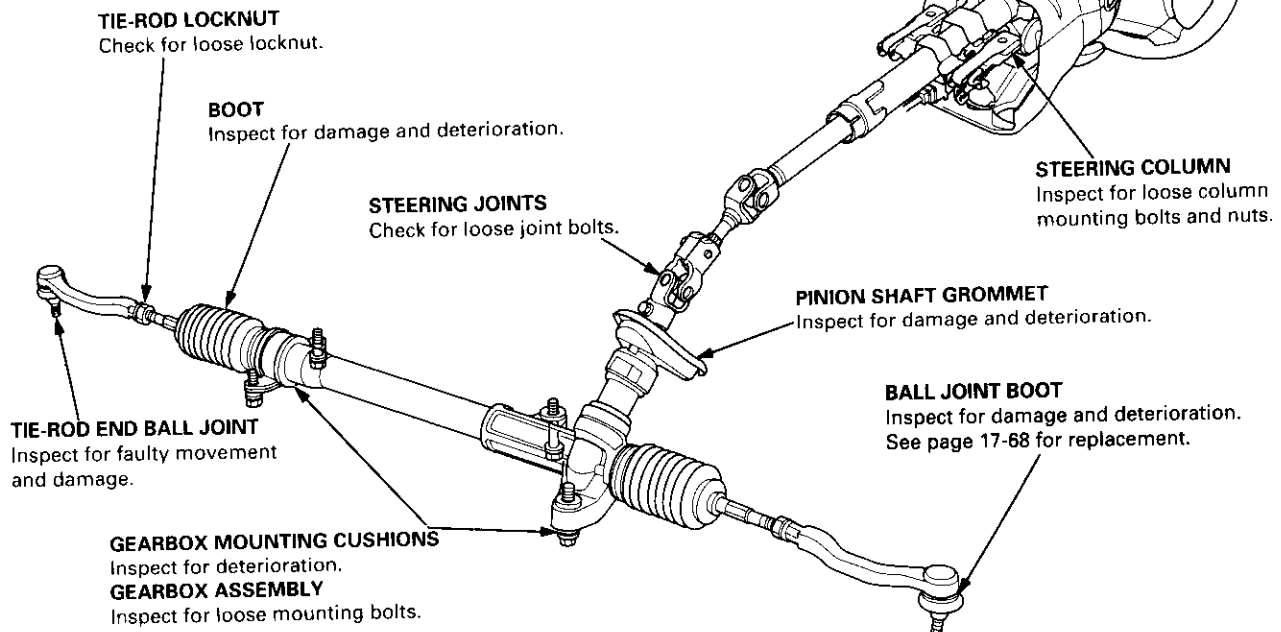




Rack Guide Adjustment

NOTE: Perform the rack guide adjustment with the wheels in the straight ahead position.

1. Loosen the rack guide screw locknut with the special tool, then loosen the rack guide screw.

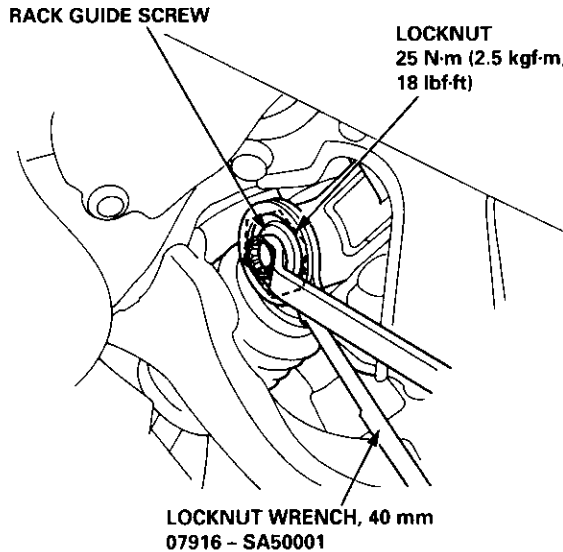

2. Tighten the rack guide screw until it compresses the spring and seats against the rack guide, then loosen it.
3. Retighten the rack guide screw to 4 N·m (0.4 kgf·m, 2.9 lbf·ft), then back it off to specified angle.


Specified Return Angle: 30° max.

4. Tighten the locknut while holding the rack guide screw.
5. Check for tight or loose steering through the complete turning travel.
6. Recheck steering effort (see page 17-4).


Removal

NOTE: Using solvent and a brush, to wash any oil and dirt off the gearbox. Blow dry with compressed air.

1. Raise the front of vehicle, and support it on safety stands in the proper locations (see section 1).
2. Remove the front wheels.
3. Remove the steering wheel (see page 17-35).
4. Remove the steering joint cover.

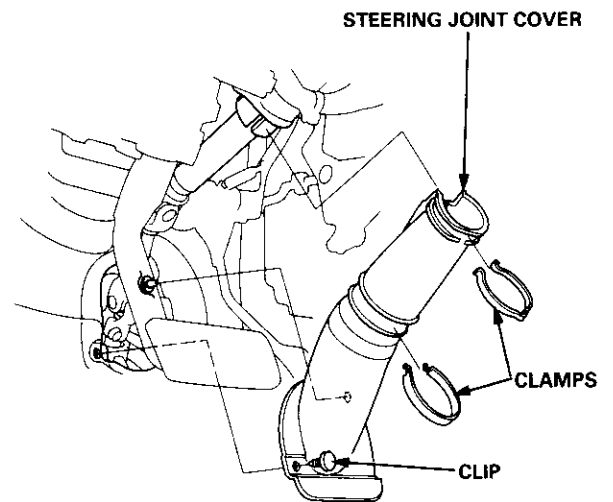

5. Remove the steering joint lower bolt, and disconnect the steering joint by moving the joint toward the column.

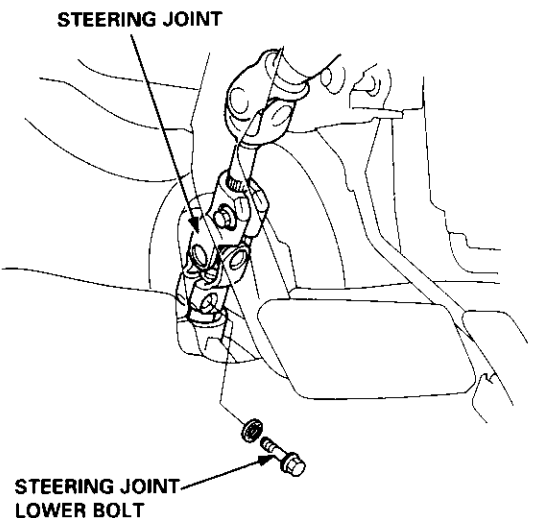


(cont'd)

Steering Gearbox

Removal (cont'd)

6. Remove the cotter pin from the castle nut ('96 - '97 model) or nut ('98 model) and remove the nut.

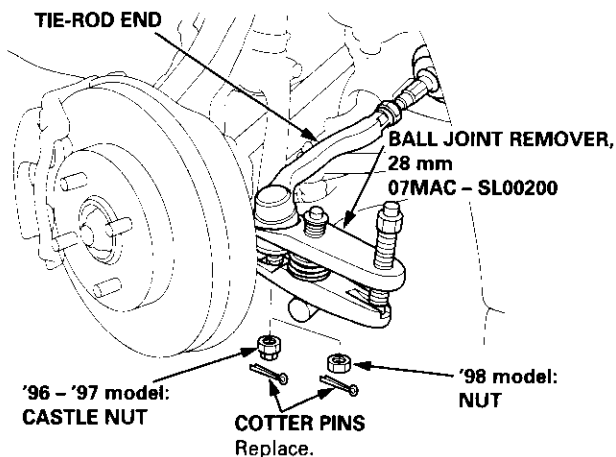


7. Install the 10 mm hex nut on the ball joint. Be sure that the 10 mm hex nut is flush with the ball joint pin end, or the threaded section of the ball joint pin might be damaged by the ball joint remover.

NOTE: Remove the ball joint using the special tool. Refer to section 18 for how to use the ball joint remover.


8. Separate the tie-rod ball joint and knuckle using the special tool.

CAUTION: Avoid damaging the ball joint boot.


9. Remove the left tie-rod end, then slide the rack all the way to the right.
10. Separate the exhaust pipe A or TWC (see section 9).
11. Disconnect the shift linkage (see section 13 or section 14).
12. Remove the stiffener plate.

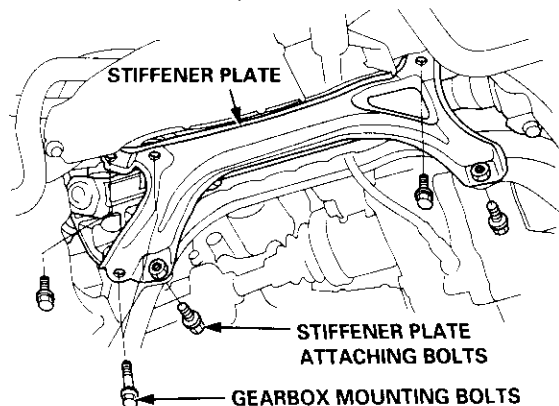

13. Remove the mounting bracket.

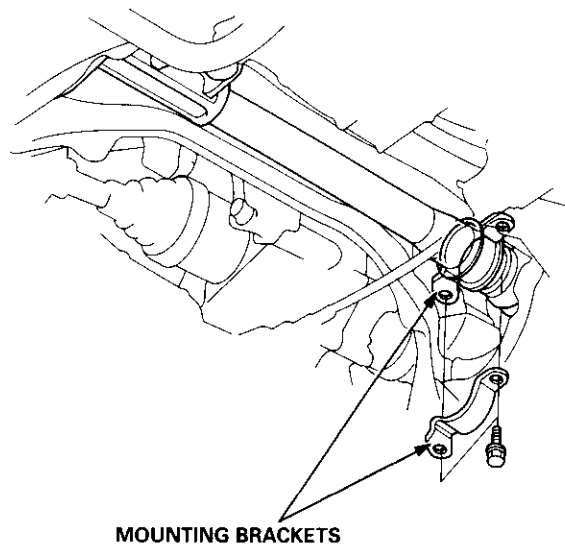

14. Pull the steering gearbox all the way down to clear the pinion shaft from the bulkhead, then remove the pinion shaft grommet.
15. Move the steering gearbox to right so the left rack end clears the rear beam, then tilt the left side down to remove it from the car.

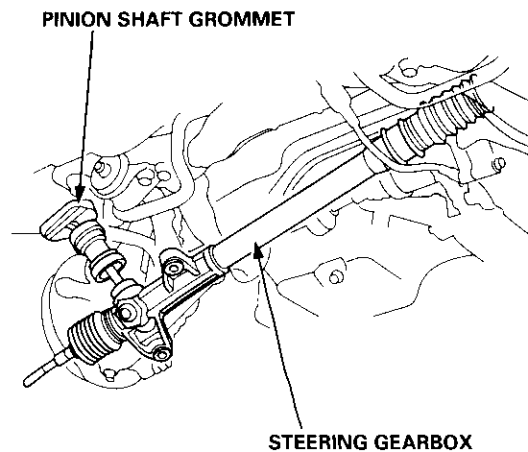




Disassembly

1. Place the gearbox in a vise with a soft jaws, then clamp the gearbox at the mount bracket or gear housing.


CAUTION: Be careful not to distort the gear housing by clamping it too tight in the vise incorrectly.

2. Remove the tie-rod end and locknut.
3. Remove the boot bands and tie-rod clips. Pull the boots away from the ends of the gearbox.

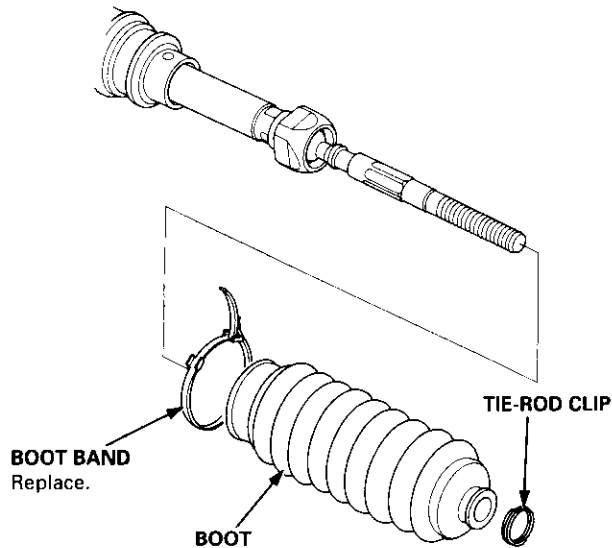


4. Hold the steering rack with one wrench, and unscrew the rack end with another wrench.

CAUTION: Be careful not to damage the rack surface with the wrench.

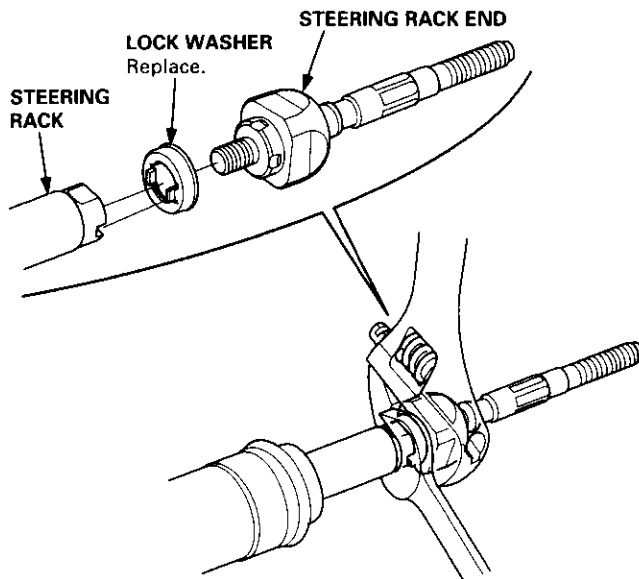


5. Push the right end of the rack back into the cylinder housing so the smooth surface that rides against the seal won't be damaged.
6. Loosen the locknut, and remove the rack guide screw.
7. Remove the disc washer, spring and rack guide from the gear housing.

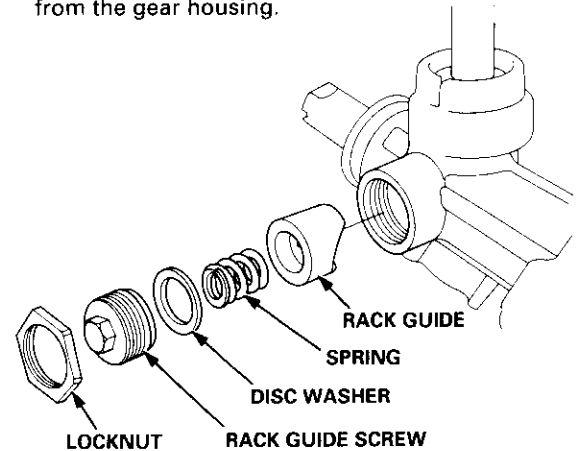

8. Remove the pinion dust seal and the 35 mm snap ring.
9. Hold the pinion shaft with a vise securely. Remove the pinion by tapping evenly around the flanged section of the gearbox with a plastic hammer.

CAUTION: Do not tap on the steering rack.

NOTE: Do not reuse the removed pinion.

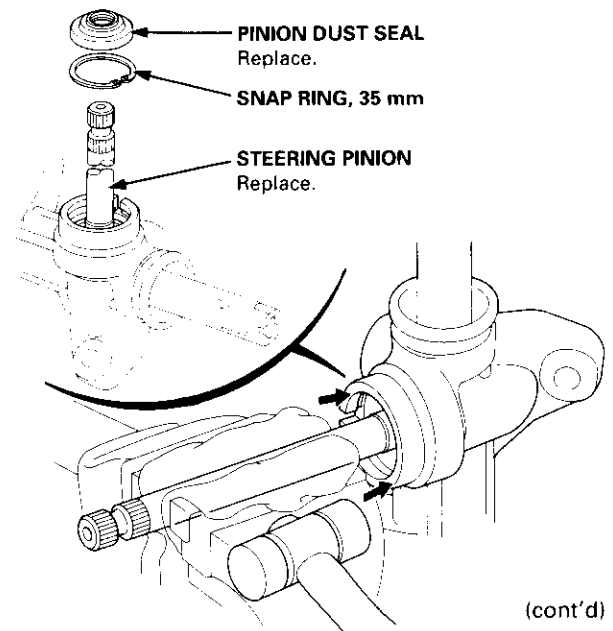


(cont'd)

Steering Gearbox


Disassembly (cont'd)

10. Slide the steering rack out of the cylinder housing.

CAUTION: Be careful not to damage the bushing in the cylinder housing.

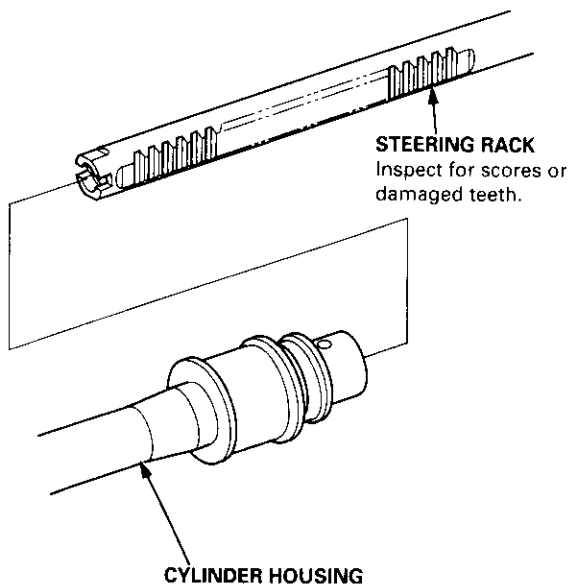


11. Remove the rack end bushing.

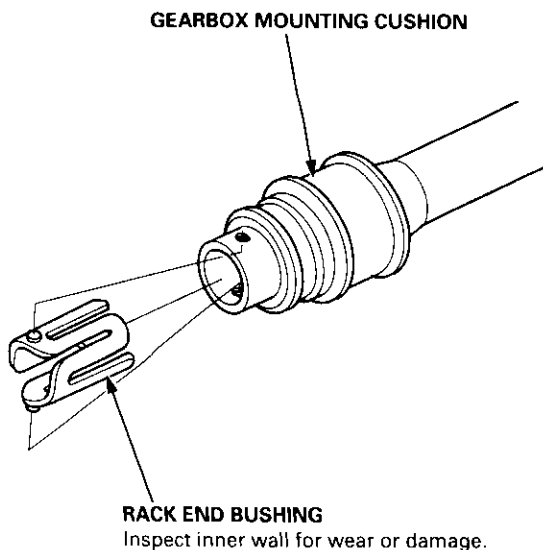

12. Replace the gearbox mounting cushion if necessary:

- To remove the cushion, use a sharp knife and make a cut down the length of the cushion. Be careful not to damage the paint on the outside of the cylinder housing. Remove the old cushion.
- Apply weatherstrip adhesive to the inside of the new cushion. Install the cushion onto the cylinder housing and position it 20 - 22 mm (0.79 - 0.87 in) from the end of the cylinder housing as shown.

NOTE: After installing the cushion, wipe off any excess adhesive that may have dripped into the inside of the cylinder housing.

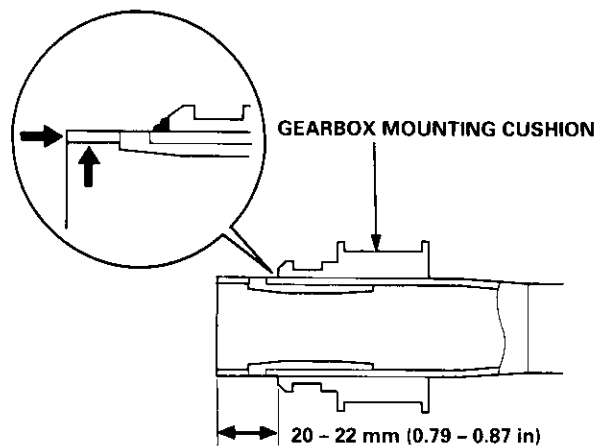




Reassembly

NOTE:

- Clean the disassembled parts with solvent, and dry them with compressed air. Do not dip the rubber parts in solvent.
- Always replace the non-reuseable parts with new ones before assembly.
- Do not allow dust, dirt, or other foreign materials to enter the steering gearbox.

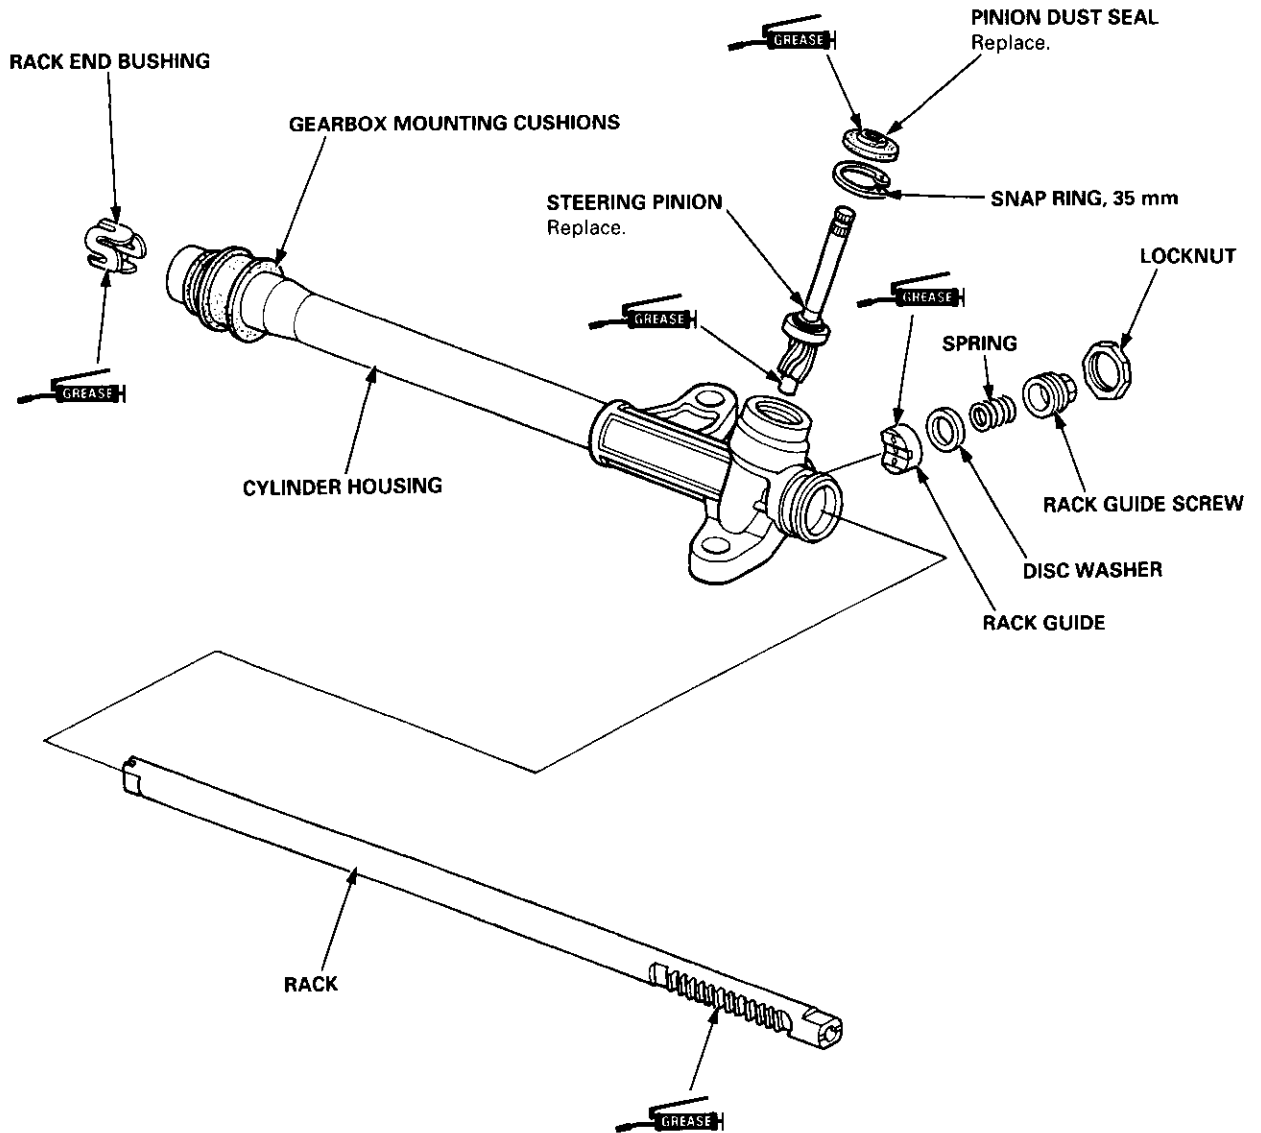

(cont'd)

Steering Gearbox


Reassembly (cont'd)

1. Apply a thin coat of grease to the inside surface of the rack end bushing.


Grease quantity: 1 – 3 g (0.04 – 0.1 oz)

CAUTION: Do not fill the slots with grease; they must remain open to serve as air passages.


2. Install the rack end bushing by aligning the round projection on the bushing with the hole in the cylinder housing

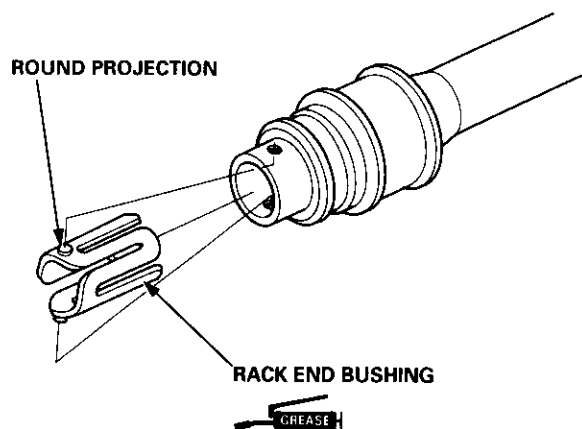

3. Grease the steering rack teeth.
4. Install the steering rack into the cylinder housing carefully to avoid damaging the rack end bushing.

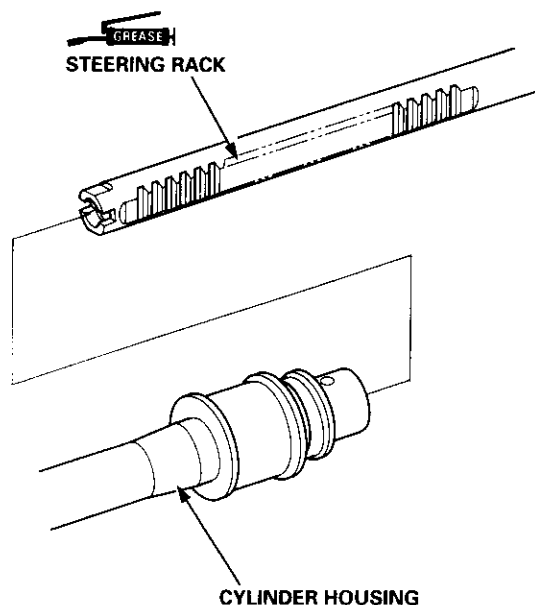


5. Drive in the steering pinion in the gear housing with the special tools.

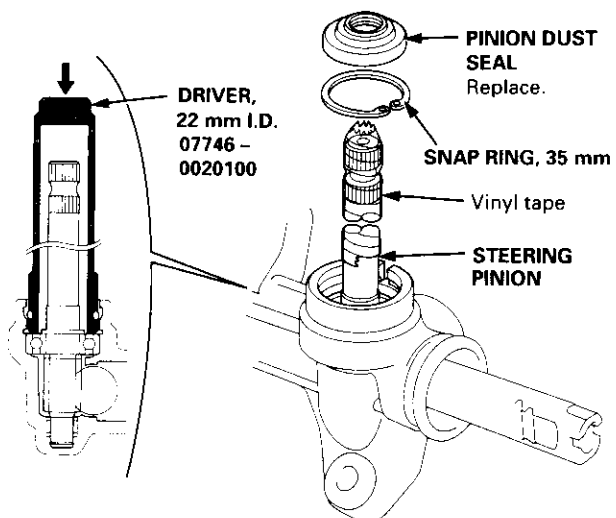

6. Install the 35 mm snap ring securely in the gear housing groove.
7. Apply vinyl tape to the pinion shaft, then coat the vinyl tape with grease.
8. Install the pinion dust seal on the gear housing until it seats properly, then remove the tape.
9. Grease the sliding surface of the rack guide, and install it on to the gear housing.
10. Install the spring, disc washer and rack guide screw on the gear housing.


NOTE: Install the disc washer with its convex side facing in.

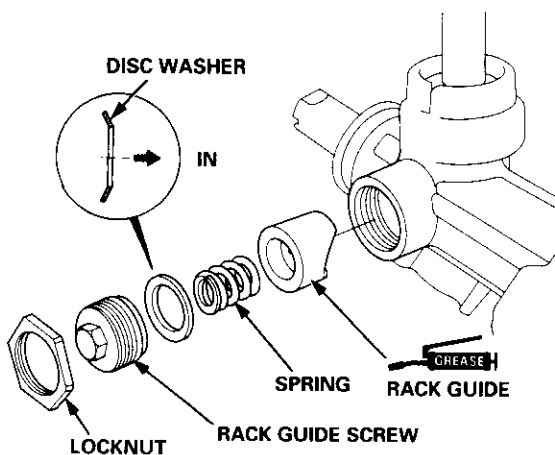

11. Adjust the rack guide screw (see page 17-5).



12. Install the new lock washer in the groove in the steering rack.
13. Install the steering rack end into the rack.

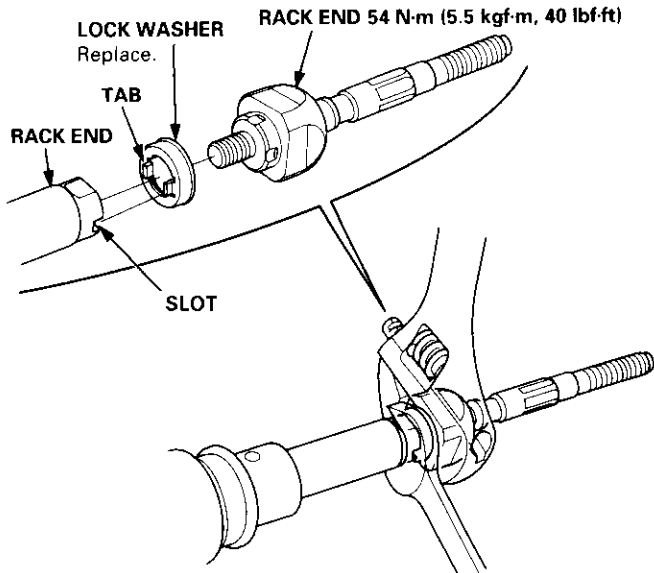


14. Hold the steering rack with a wrench and tighten the rack end with another.


CAUTION: Be careful not to damage the rack surface with the wrench.

15. After tightening the rack ends, stake the four sections of the lock washer with a roll pin drift and a mallet.

- Place the wood block on the press table, then set the lock washer section of the rack end on the wood block securely.
- Be sure the tool is aligned with the flat sections of the steering rack end before pressing.
- Stake the lock washer in the center of the flat section of the steering rack end.

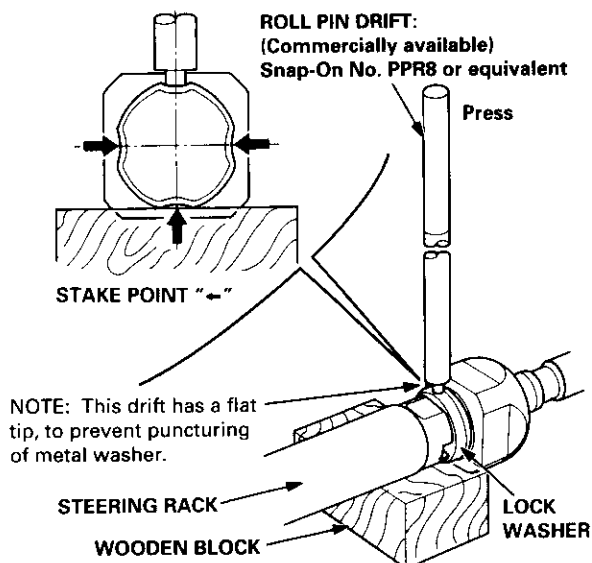


16. Apply grease around the outside of the rack end housing.

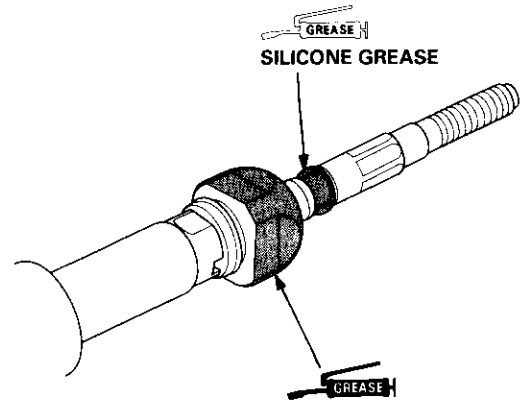

17. Apply a light coat of silicone grease to the boot grooves on the rack ends.

18. Install the boots in the rack end with the tie-rod clips.

NOTE: Install the boot band with the rack in the straight ahead position (right and left tie-rods are equal in length).

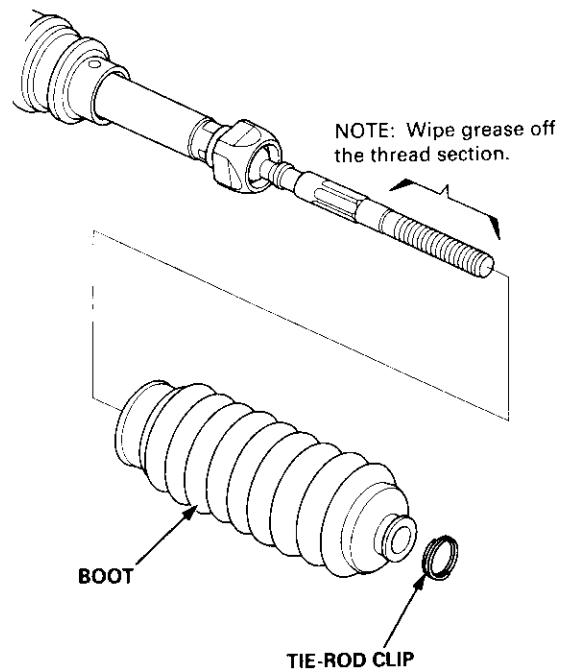

(cont'd)



Steering Gearbox

Reassembly (cont'd)

19. Install the boot band so that the locking tabs of the band (stake points) are in the range shown below. (Tabs should face up and slightly forward.)
20. Bend both sets of locking tabs.
21. Lightly tap on the doubled-over portions to reduce their height.

CAUTION: Stake the band locking tabs firmly.

22. Slide the rack right and left to be certain that the boots are not deformed or twisted.

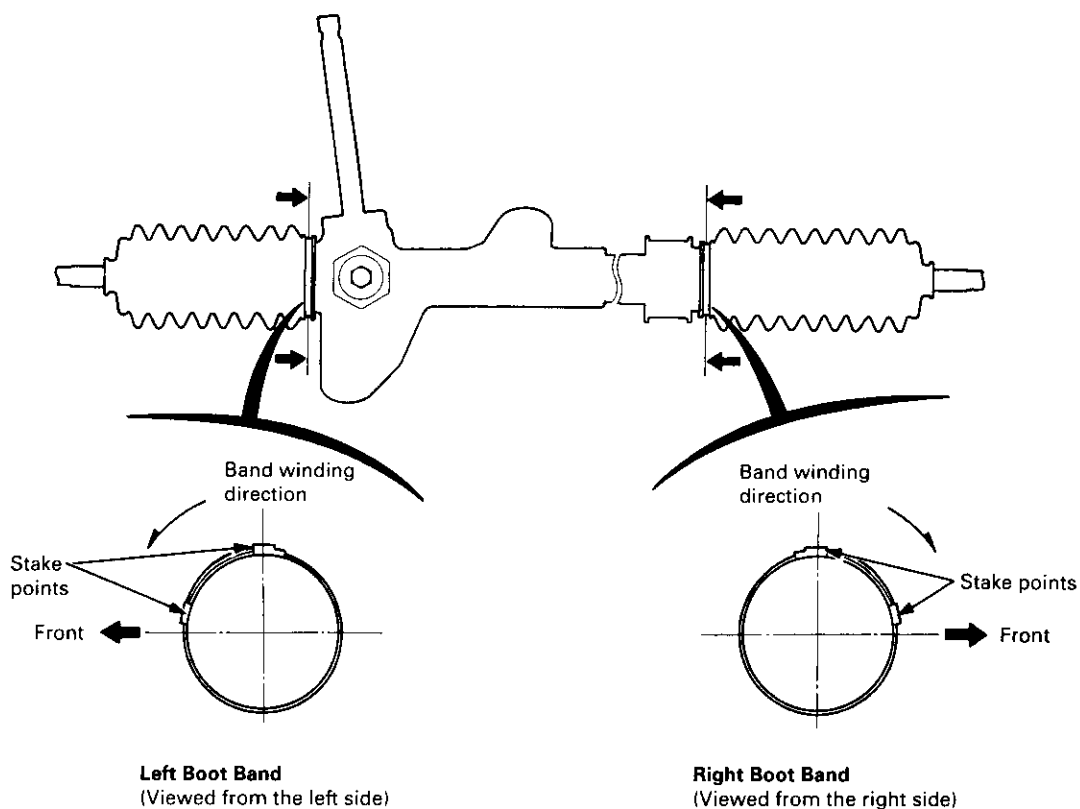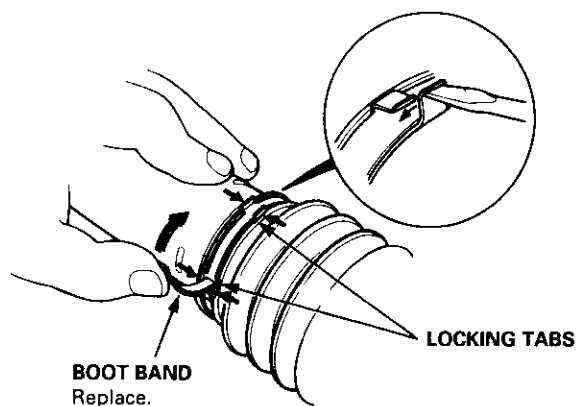





Installation

1. Slide the rack all the way to the right.
2. Install the pinion shaft grommet, and insert the pinion shaft up through the bulkhead.

NOTE: Align the notch in the pinion shaft grommet with the tab on the gear housing.

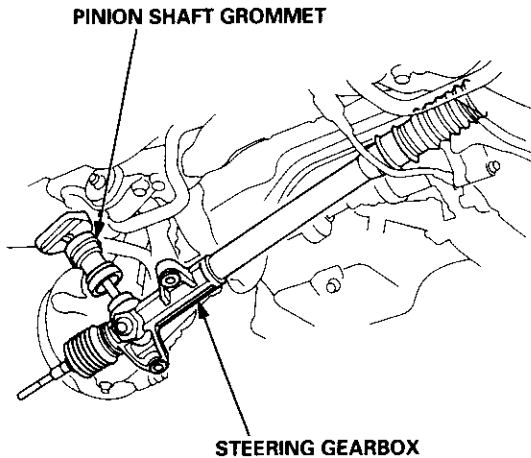


3. Install the mounting brackets with the two gearbox mounting bolts on the cushion.

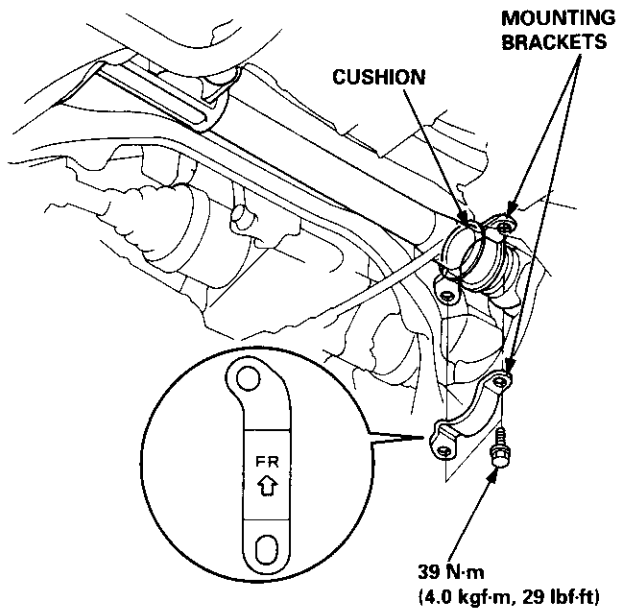

NOTE: The arrow on the bracket point toward the front.

4. Install the stiffener plate with the two gearbox mounting bolts and stiffener plate attaching bolts. NOTE: Install the bolts loosely first, then tighten them securely.

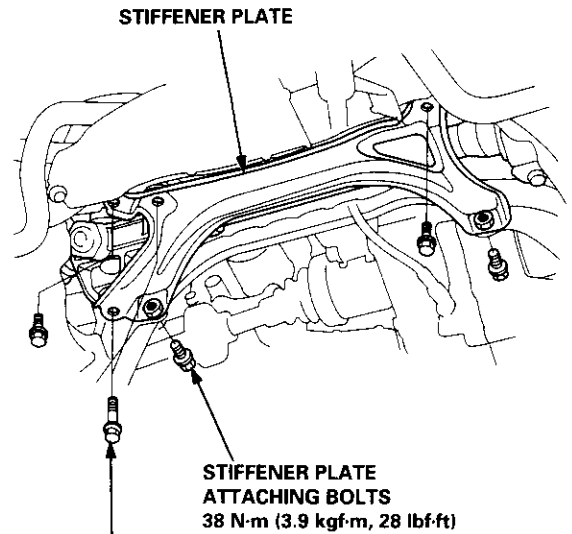


GEARBOX MOUNTING BOLTS
43 N-m (4.4 kgf-m, 32 lbf-ft)

5. Center the steering rack within its stroke.
6. Slip the lower end of the steering joint onto the pinion shaft (line up the bolt hole with the groove around the shaft), and tighten the lower bolt.

NOTE:

- Connect the steering shaft and pinion with the steering wheel and steering rack centered.
- Be sure that the lower steering joint bolt is securely in the groove in the steering gearbox pinion.
- If the steering wheel and rack are not centered, reposition the serrations at lower end of the steering joint.

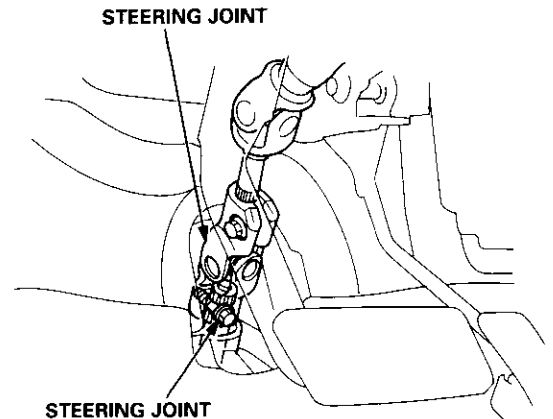


STEERING JOINT LOWER BOLT
22 N-m
(2.2 kgf-m, 16 lbf-ft)

(cont'd)

Steering Gearbox

Installation (cont'd)


- Center the cable reel by first rotating it clockwise until it stops. Then rotate it counterclockwise (approximately two turns) until the arrow mark on the label points straight up. Reinstall the steering wheel (see page 17-35).
- Install the steering joint cover with the clamps and clips.

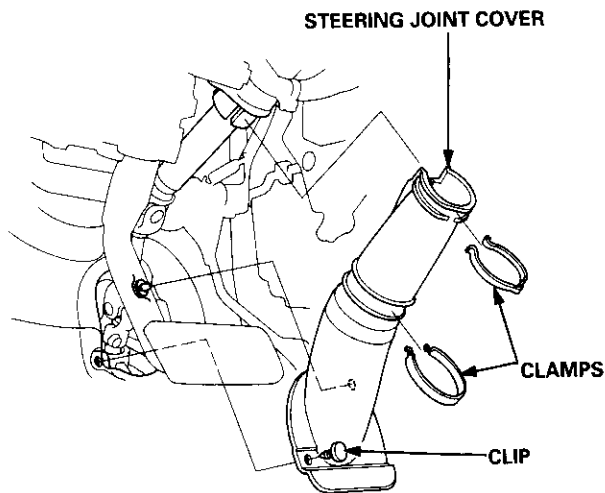

- Reconnect the tie-rod ends to the steering knuckles, then tighten the castle nut ('96 - '97 model) or nut ('98 model) to the specified torque, and install new cotter pins.

NOTE: Before connecting the tie-rod ends, wipe off any grease contamination from the ball joint tapered section and threads.

CAUTION: Torque the castle nut to the lower torque specification, then tighten it only far enough to align the slot with the pin hole. Do not align the nut by loosening ('96 - '97 model only).

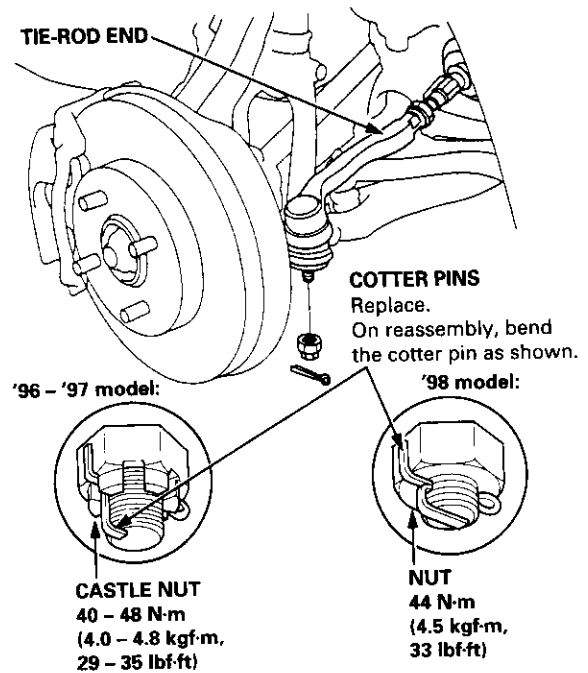

- Install the exhaust pipe A or TWC (see section 9).
- Connect the shift linkage (see section 13 or section 14).
- Install the front wheels.
- After installation, perform the following checks.
 - Adjust the front toe (see section 18).
 - Check the steering wheel spoke angle. Adjust by turning the right and left tie-rods, if necessary.

NOTE: Turn the right and left tie-rods equally.




Index

Power Steering:

NOTE:

- If an intact airbag assembly has been removed from a scrapped vehicle or has been found defective or damaged during transit, storage or service, it should be deployed (see section 24).
- Before removing the gearbox, remove the driver's airbag assembly and steering wheel.
- After installing the gearbox, check the wheel alignment and adjust if necessary.


SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

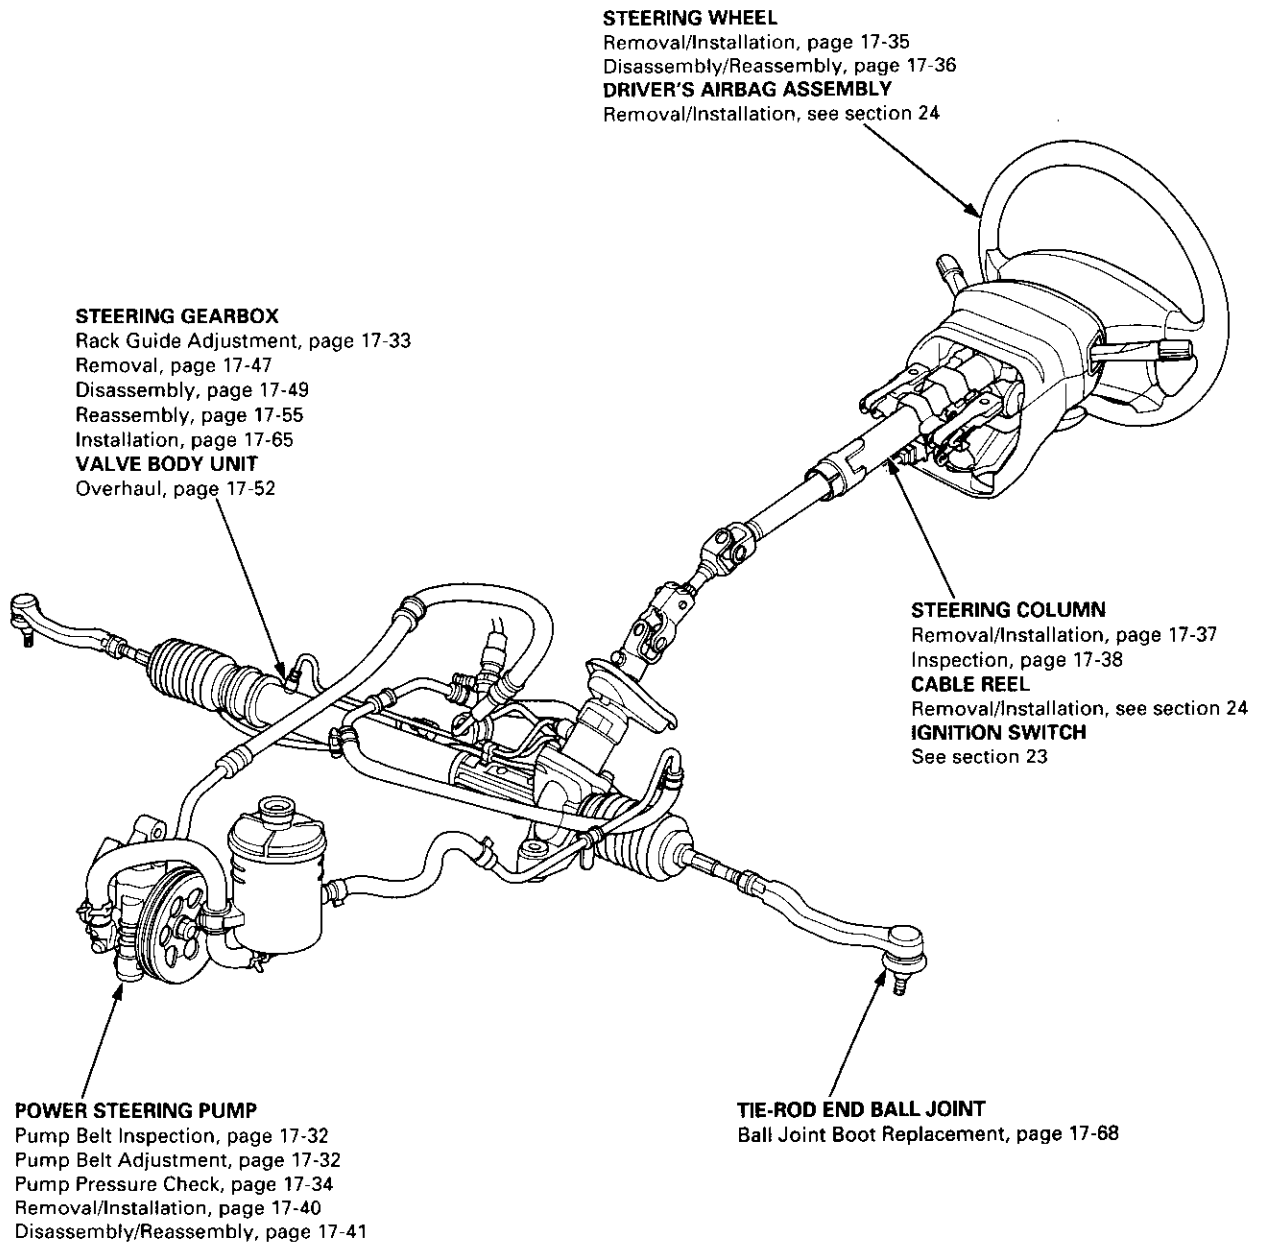

System Description

Fluid Flow Diagram

The system is a compact rotary-valve-type power steering, connected to the steering gearbox. The fluid pressure is provided by a vane-type pump which is driven by the engine crank pulley. The amount of fluid and pressure is regulated by the flow control valve built into the pump. The fluid pressure from the pump is delivered to the valve body unit around the pinion of the steering gearbox. The valve inside the valve body unit controls the hydraulic pressure and changes the direction of the flow. The fluid then flows to the power cylinder, where rack thrust is generated. Fluid returning from the power cylinder flows back to the reservoir, where the fluid is "filtered" and supplied to the pump again.

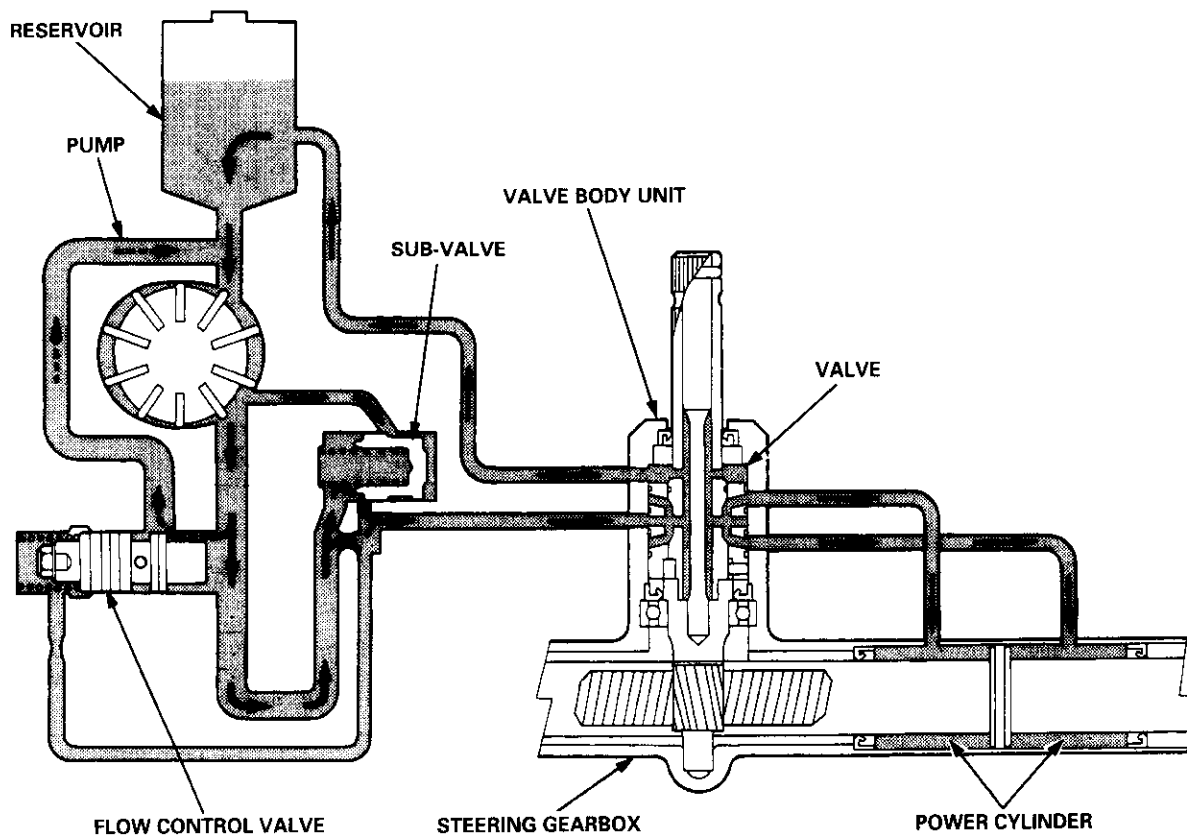




Steering Pump


Construction

The pump is a vane-type incorporating a flow control valve (with an integrated relief valve) and is driven by a POLY-V-belt from the crank pulley. The pump features 10 vanes. Each vane performs two intake/discharge operations for every rotation of the rotor. This means that the hydraulic fluid pressure pulse becomes extremely small during discharge.

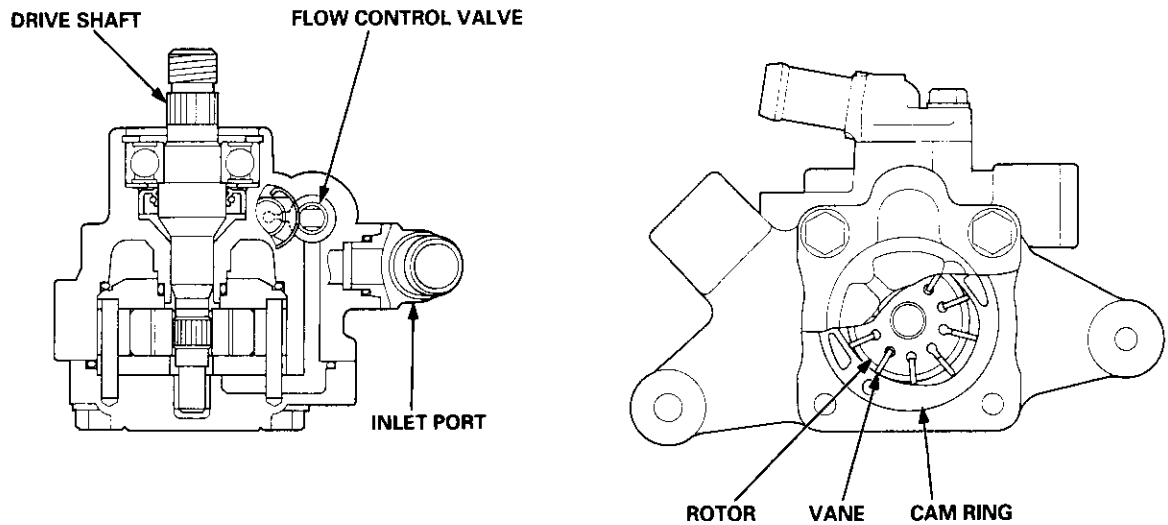

Operation

The belt-driven pulley rotates the rotor through the drive shaft. As the rotor rotates, the hydraulic pressure is applied to the vane chamber of the rotor and the vanes will rotate while being pushed onto the inner circumference of the cam ring. The inner circumference of the cam ring has an extended portion with respect to the center of the shaft, so the vanes move downward in the axial direction as the rotor rotates. As a result of this roller movement, the internal volume of the vane chamber will change, resulting in fluid intake and discharge.

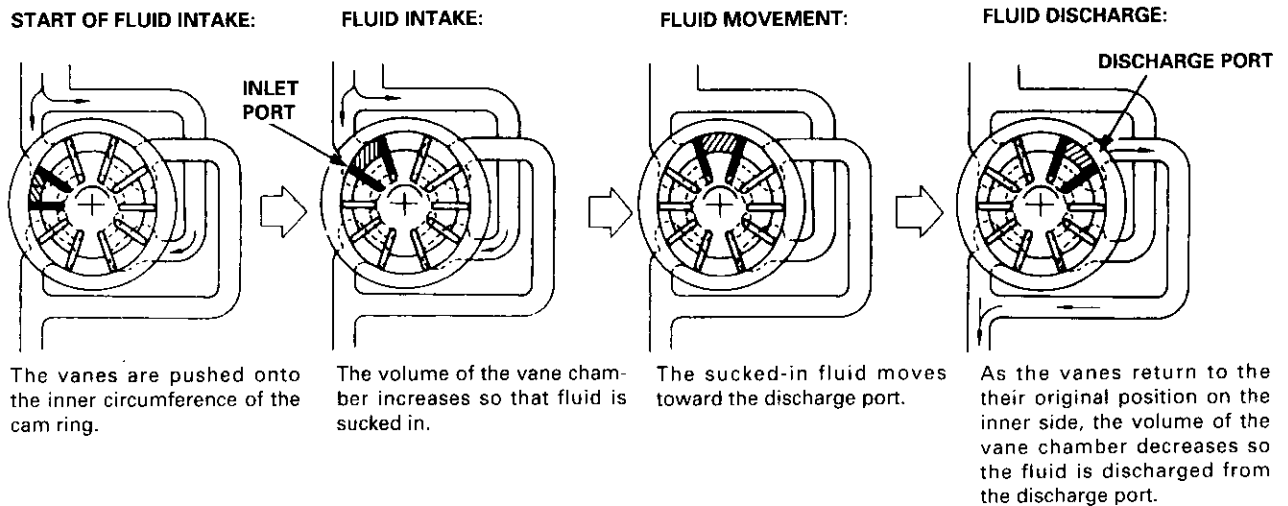


(cont'd)

System Description

Steering Pump (cont'd)

The flow control valve and sub-valve in the pump performs the following steps ① through ④ to control the flow of fluid, that is to increase the discharge volume when engine speed is low, and to decrease it when the engine speed increases. The assistance thrust of the steering gearbox changes in compliance with the change in the discharge volume.


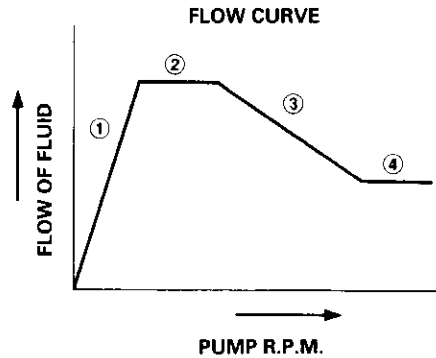


- ① When the engine starts, fluid discharged from the discharge port starts to flow through oil passage A, the fixed orifice and the variable orifice to the steering gearbox. When the engine speed is extremely low, the return port is closed by the flow control valve.

Fluid pressure discharged from the discharge port is applied to the top of the sub-valve, and the fluid pressure that passed through oil passage A is applied to the bottom of the sub-valve. When this happens, the pressure difference between the ends of oil passage A, which is caused by the resistance oil passage A when the fluid flows through the passage, is applied to the sub-valve. However, the pressure difference applied to the sub-valve, that is the force that pushes the sub-valve down, is too small to overcome the spring force, and the variable orifice is fully open when the engine speed is extremely low.

- ② Because the fluid volume flowing through the fixed orifice and variable orifice increases, a pressure difference is created between the ends of these orifices, and it increases in proportion to the engine speed. As the fluid pressure that passed the fixed orifice and variable orifice is directed to the bottom of the flow control valve, a pressure difference is created between the top and bottom of the valve, which pushes down the flow control valve and opens the return port. As a result, part of the fluid discharged from the discharge port returns to the pump suction port, keeping the discharge volume constant.


In this condition, the sub-valve does not move, and the variable orifice stays fully open.

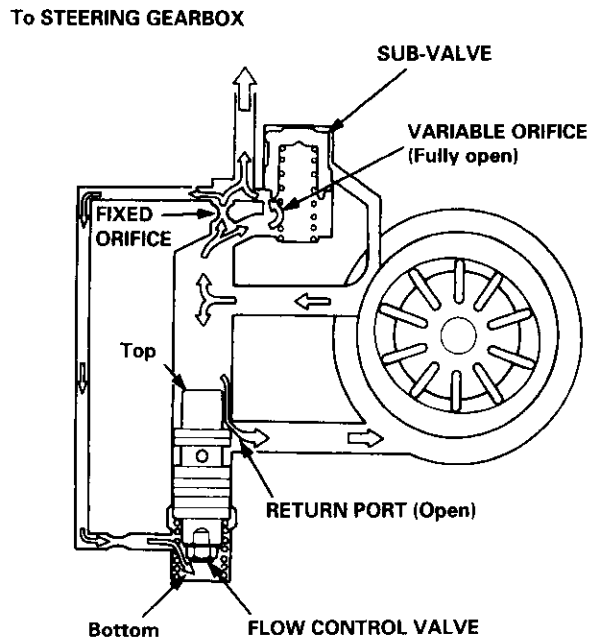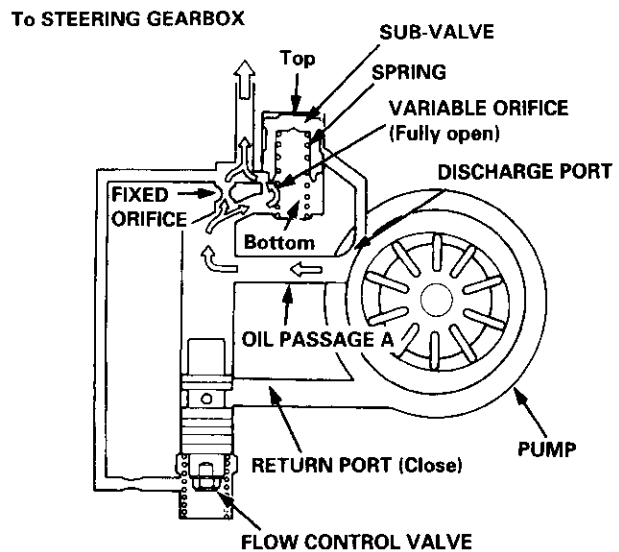




- ③ The fluid volume that flows through oil passage A and the pressure difference applied to the sub-valve increase in proportion to the engine speed. The sub-valve lowers overcoming the spring force, and it starts to close the variable orifice to regulate the discharge volume. When this happens, the fluid volume flowing to the steering gearbox decreases as the engine speed increases. At the same time, the flow control valve continues to control the fluid volume to the return port.

To STEERING GEARBOX

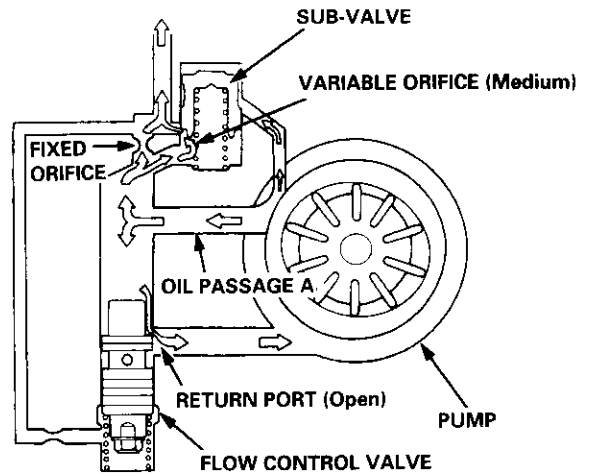

- ④ As the engine speed increases further, the pressure difference at the sub-valve increases further as well. The sub-valve then closes the variable orifice completely, regulating the discharge volume further. When this happens, the fluid volume discharged from the pump to the steering gearbox is regulated and maintained at a given level until the engine speed reaches the high speed range. The flow control valve functions continues to control the fluid volume to the return port.


To STEERING GEARBOX

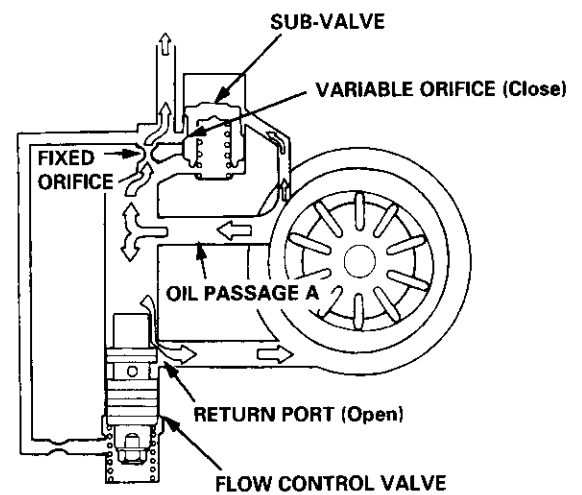

Pressure Relief

Pressure at the discharge side of the fixed orifice is directed to the bottom of the flow control valve. When the pressure builds up, the relief valve in the flow control valve opens to release the pressure at the bottom of the valve. This allows the flow control valve to be pushed back by the pressure difference, and the fluid volume to the pump return port increases.


As explained above, the system keeps the pump discharge pressure (relief pressure) from exceeding the given level by controlling the volume of the fluid to the pump return port.

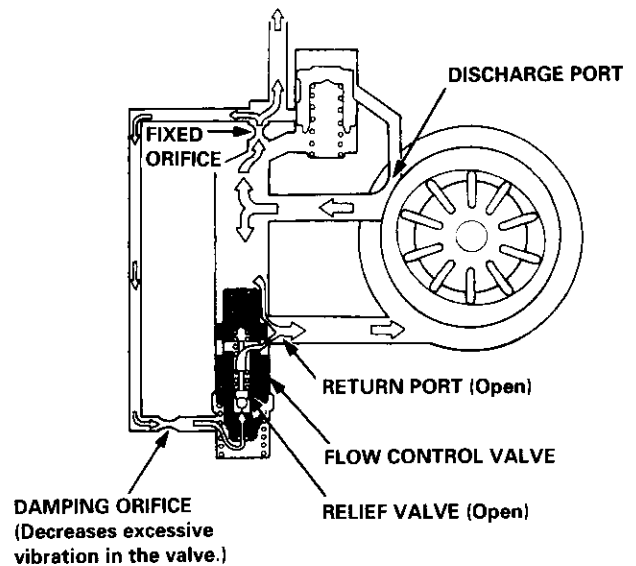

System Description

Steering Gearbox

The rack-and-pinion type steering gearbox has a valve body unit incorporated with the pinion to control the steering fluid pressure. Steering fluid from the pump is regulated by a rotary valve in the valve body unit and is sent through the cylinder line to the power cylinder, where hydraulic pressure is applied. The steering fluid in the other side of the power cylinder returns through the cylinder line and valve body unit to the reservoir.

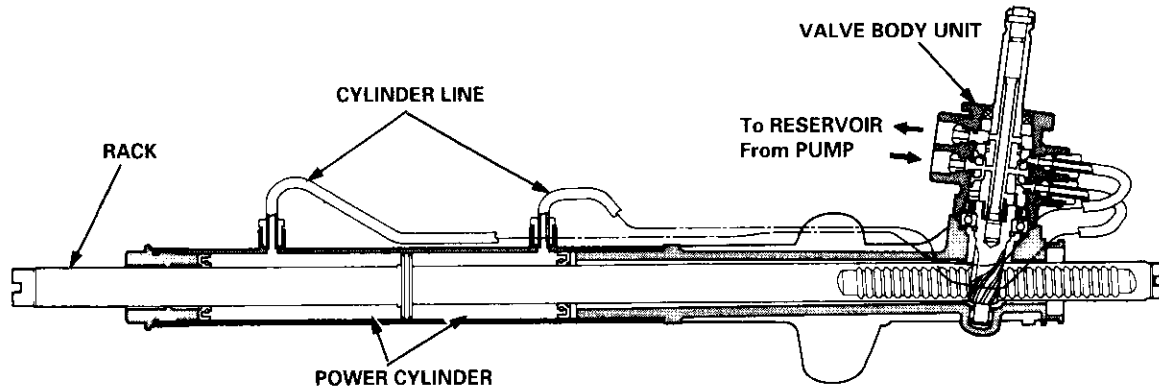


Valve Body Unit

Inside the valve body unit is the valve, which is coaxial with the pinion shaft, and controls the steering fluid pressure. The valve housing is connected with the fluid line from the pump, the return line to the reservoir, and the two cylinder lines from the respective power cylinder. The pinion shaft is double-structured with the input shaft connected to the pinion gear, both of which are interconnected with the torsion bar.

The pin inserted in the valve and the pinion shaft groove engage; this allows the pinion shaft to rotate together with the valve. Because of this construction, the difference in angle in the circumferential direction between the input shaft and the valve becomes larger according to the torsional strength of the pinion or steering resistance. However, maximum torsion between the shafts is regulated by the engaged splines of the shafts at the pin engagement section to hold the torsion bar within the set value.

This allows the steering system to function as an ordinary rack-and-pinion type steering if the steering fluid is not pressurized because of a faulty pump.

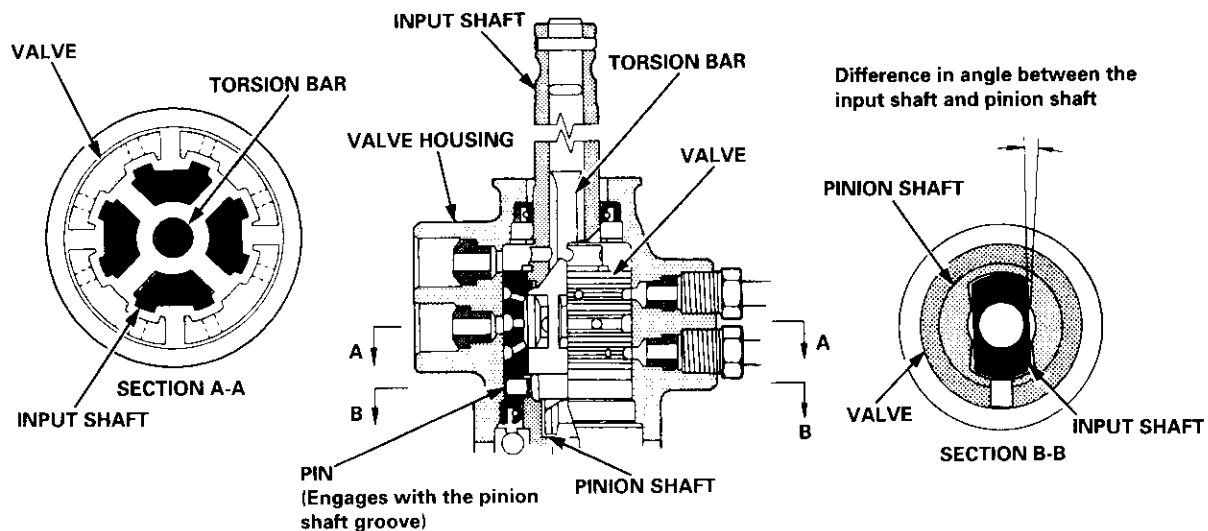




Pressure Control


Low assist at higher speeds:

When steering resistance is low, such as when driving at high speeds, or when driving straight ahead, the input shaft is near or in the neutral position, so there is little or no flow to any of the power cylinder orifices. Most of the feed pressure from the pump is bypassed to the reservoir. Because of this, the pressure stays the same in both sides of the power cylinder, resulting in low or no assist.

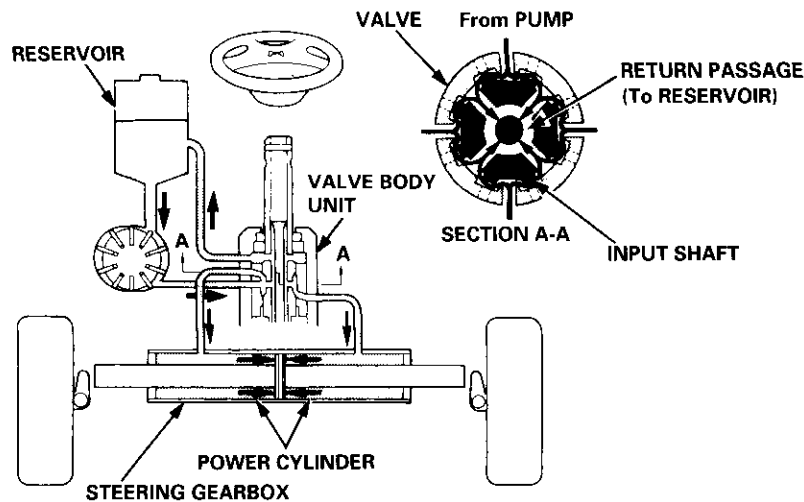

High assist at lower speeds:

When steering resistance is high, such as when driving at low speeds, or when turning the wheel with the vehicle stopped, the difference in angle created between the input shaft and the valve opens the fluid passage on one side, and closes the fluid passage on the other side, at each pair of orifices. The fluid pressure increases in the side of the power cylinder fed by the larger fluid passage. This increased pressure pushes on the rack piston, allowing the steering wheel to be turned with light effort. On the other side of the power cylinder, the return passage opens allowing the steering fluid to return through the input shaft to the reservoir. The fluid passages to the power cylinder automatically change in size, increasing as the steering resistance increases. In other words, the passages become larger and power assist increases when the steering effort would normally be high, (for example, when parking or making low speed turns), and the passages become smaller and power assist decreases when the steering effort would normally be low, (for example, when driving at high speeds or straight ahead).

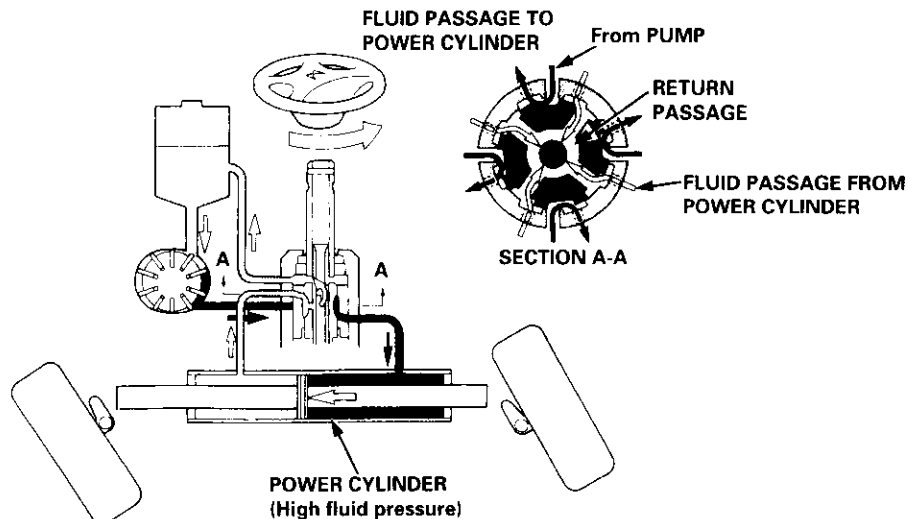


Troubleshooting


General Troubleshooting

Check the following before you begin:

- Has the suspension been modified in a way that would affect steering?
- Are tire sizes, tire variety and air pressure correct?
- Is the steering wheel original equipment or equivalent?
- Is the power steering pump belt properly adjusted?
- Is steering fluid reservoir filled to proper level?
- Is the engine idle speed correct and steady?

Hard Steering (Check the power assist, see page 17-30. If the force is over 29 N (3.0 kgf, 6.6 lbf), Proceed with this troubleshooting.)

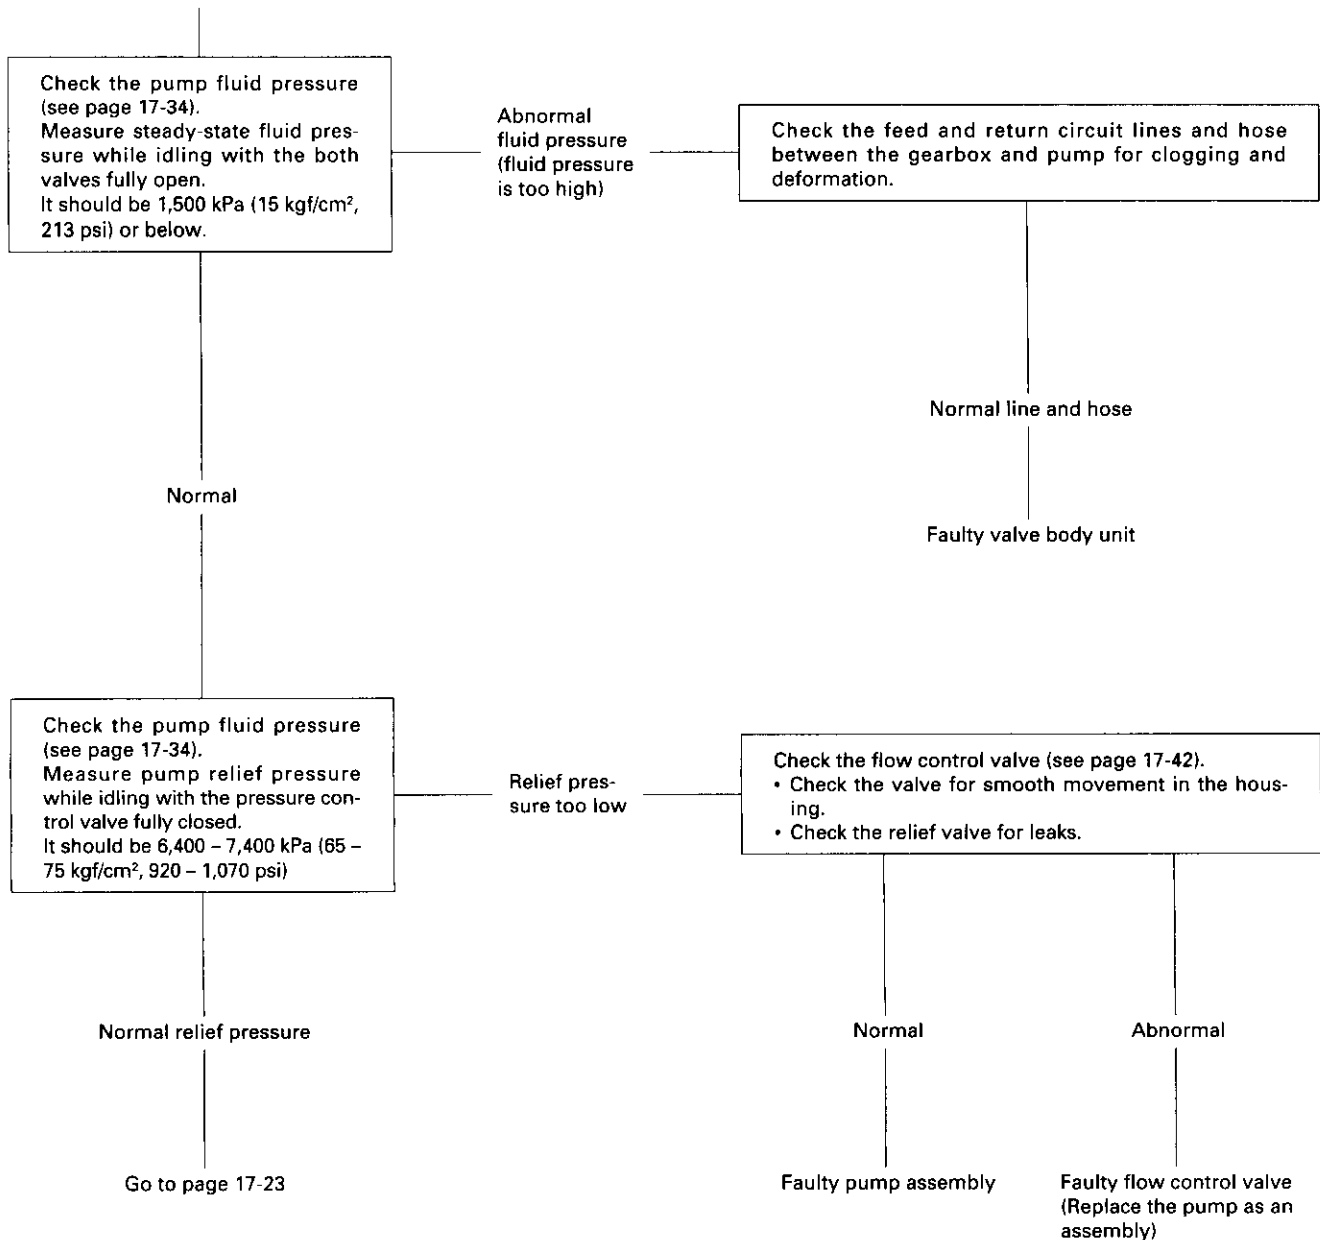

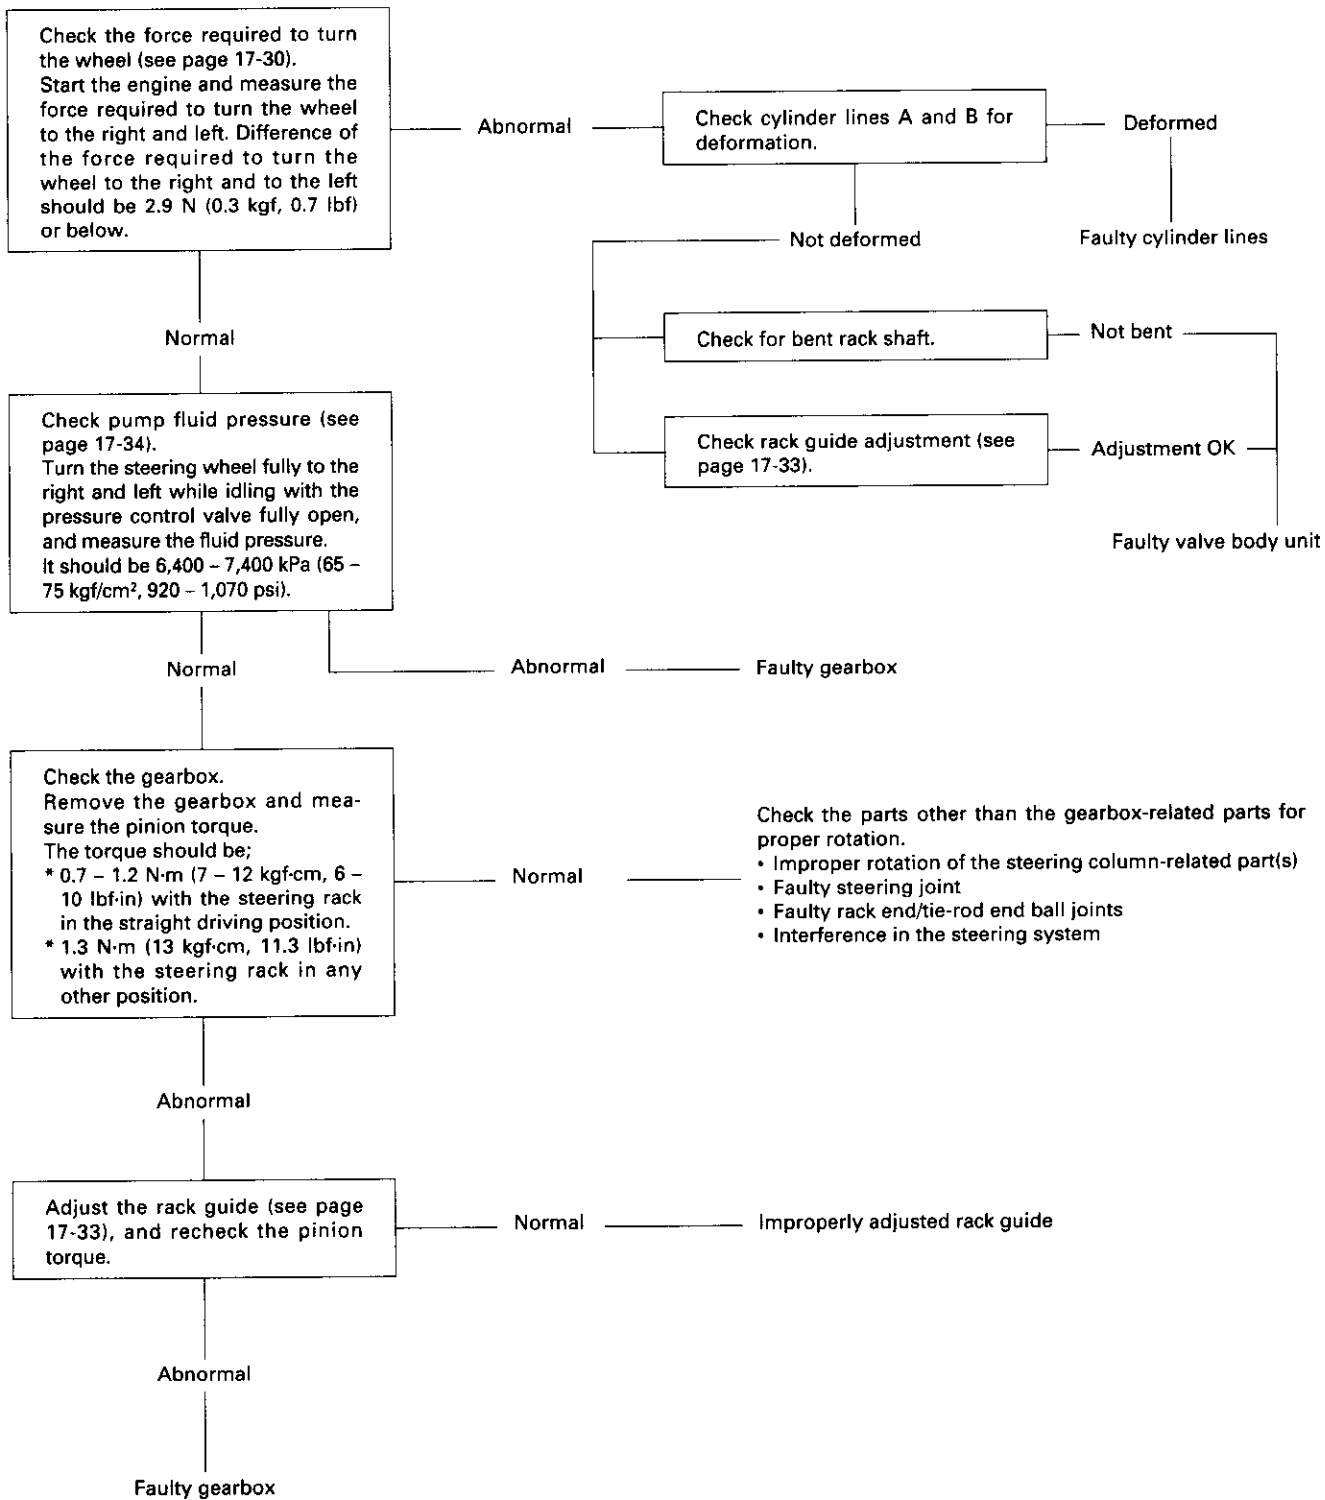

(cont'd)

Troubleshooting

General Troubleshooting (cont'd)

Assist (excessively light steering) at high speed.

Check the rack guide for proper adjustment (see page 17-33).

If the problem is not corrected by adjusting the rack guide, adjust the front wheel alignment (see section 18).

Shock or vibration when wheel is turned to full lock.

Check the rack guide for proper adjustment (see page 17-33).

Rack guide was backed off excessively.

Adjust the rack guide.

Rack guide is adjusted properly.

If the problem is not corrected by adjusting the rack guide, replace the gearbox.

Check the belt for slippage and adjust as necessary (see page 17-32).

Steering wheel will not return smoothly.

Check cylinder lines A and B for deformation.

A or B cylinder line is deformed; replace it.

A and B cylinder lines are normal, check wheel alignment (see section 18).

Wheel alignment is abnormal, adjust as needed.

Wheel alignment is normal. Remove the gearbox from the frame and measure the pinion torque on the gearbox.

- It should be 0.7 – 1.2 N·m (7 – 12 kgf·cm, 6 – 10 lbf·in) or below with the steering rack in the straight ahead driving position.
- 1.3 N·m (13 kgf·cm, 11.3 lbf·in) with the steering rack in any other position.

If the measurements are out of specifications, adjust the rack guide.

If the problem is not corrected by adjusting the rack guide, replace the gearbox.



Uneven or rough steering.

Improperly adjusted rack guide.

Adjust the rack guide (see page 17-33).

If the problem is not corrected by adjusting the rack guide, replace the gearbox.

Belt slipping on pulley.

Adjust the belt tension. Replace the belt, if necessary (see page 17-32).

Idle speed low or erratic.

If the engine stalls when the wheel is turned while car is stopped or moving at low speed, adjust the idle speed (see section 11).

Air in reservoir, or check power steering fluid level.

Check power steering fluid level. If the level is excessively low, check for leaks in the system. Add fluid to the specified level.

If fluid level is OK, check O-rings and seals on both ends of the pump inlet hose, and the P/S pump housing mating surfaces and the pump shaft oil seal for suction leaks. Replace parts as necessary.

Steering wheel kicks back during wide turns.

Pump belt slipping on pulley (pump stops momentarily).

Adjust the belt tension (see page 17-32) or replace belt.


Install the power steering pressure gauge. Close the pressure control valve fully and measure the pump pressure (see page 17-34).

Check if pump pressure is normal and the gauge needle travel is 500 kPa (5 kgf/cm², 71 psi) or less. Check the flow control valve if the needle travel exceeds 500 kPa (5 kgf/cm², 71 psi). If the flow control valve is normal, replace the pump as an assembly.


Troubleshooting

Noise and Vibration

NOTE: Pump noise in first 2 – 3 minutes after starting in cold weather is normal.

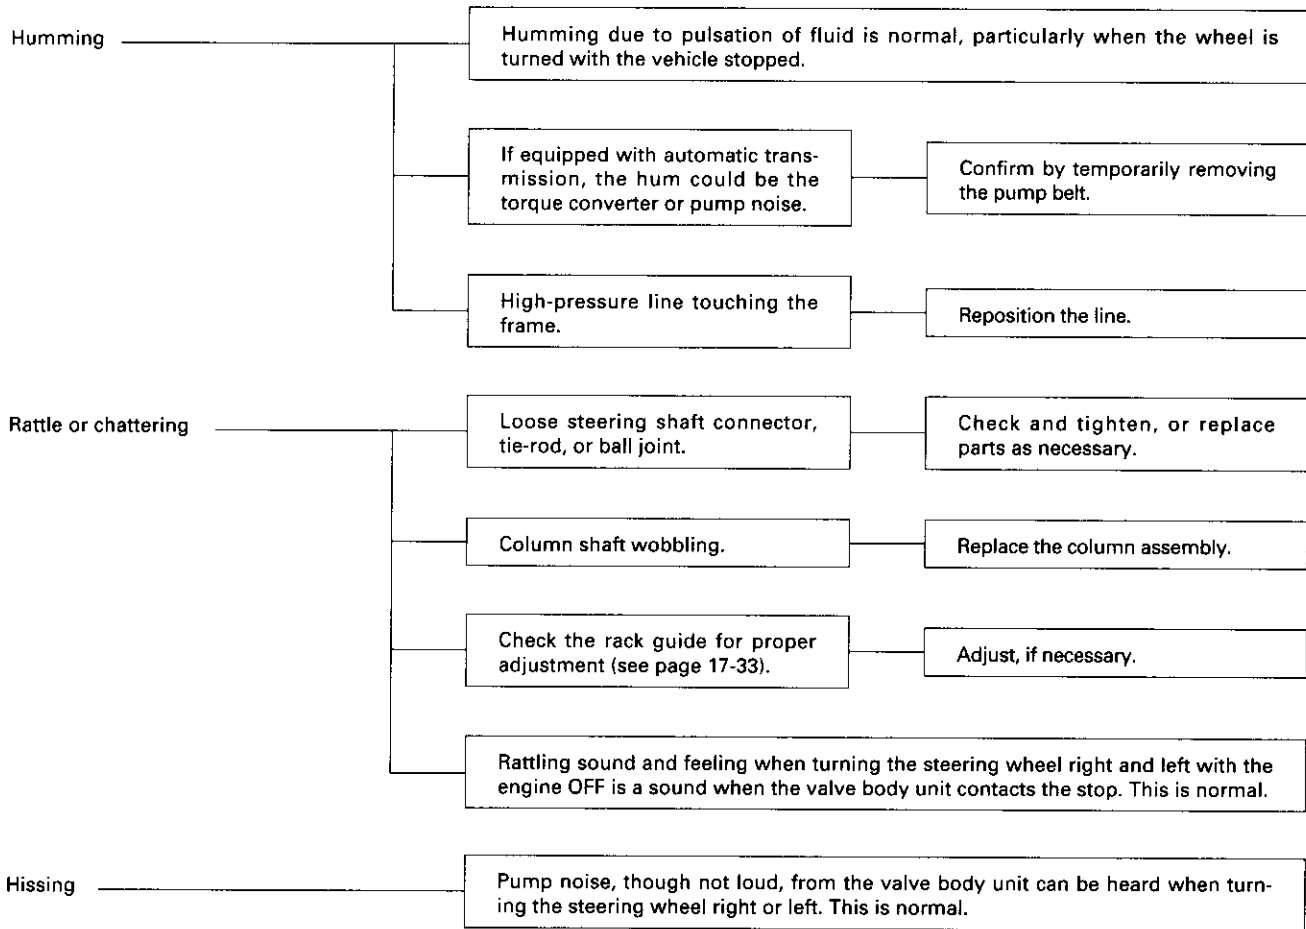


CAUTION: When inspecting, do not hold the steering wheel all the way to the right or the left.

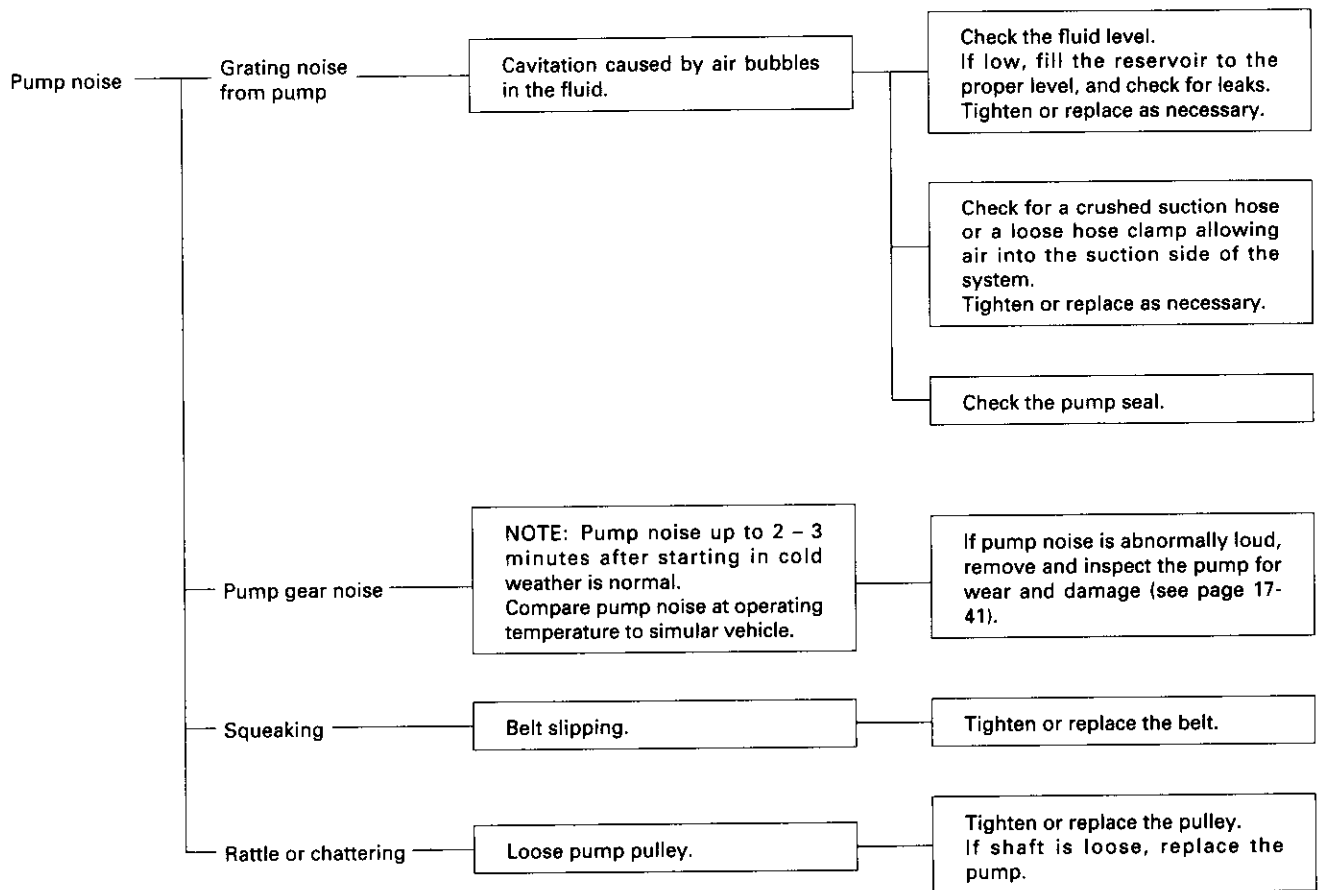


Troubleshooting

Fluid Leaks

- Check the gearbox assembly for oil leaks carefully. Oil can leak out of various points, depending on location of the faulty oil seals/seal rings. Check the following before removing the gearbox from the frame.

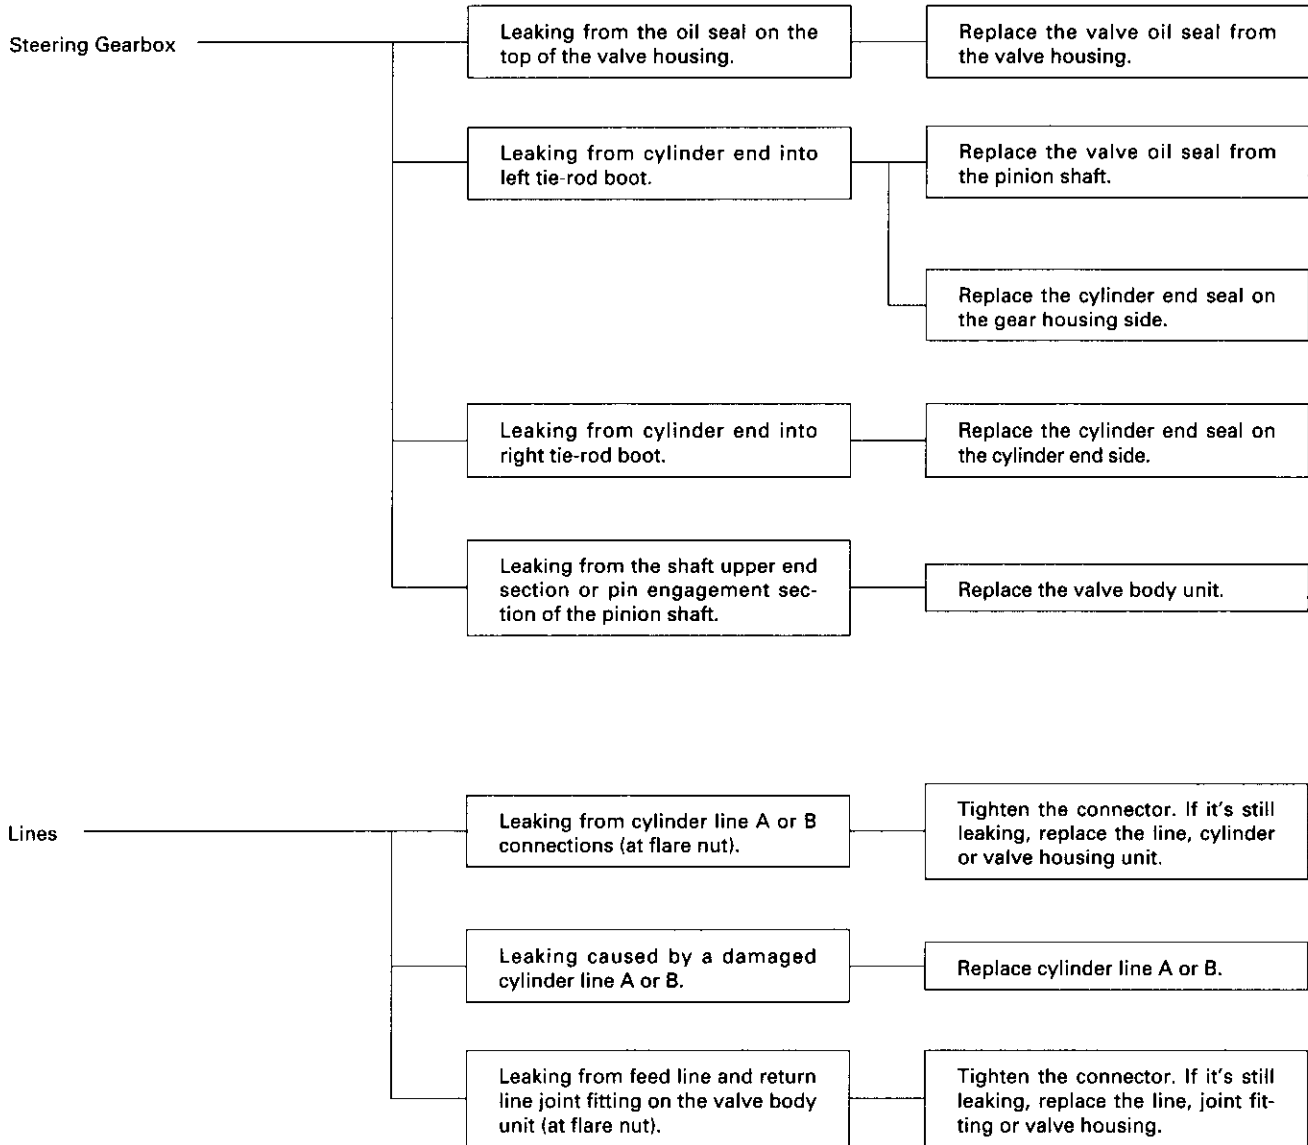

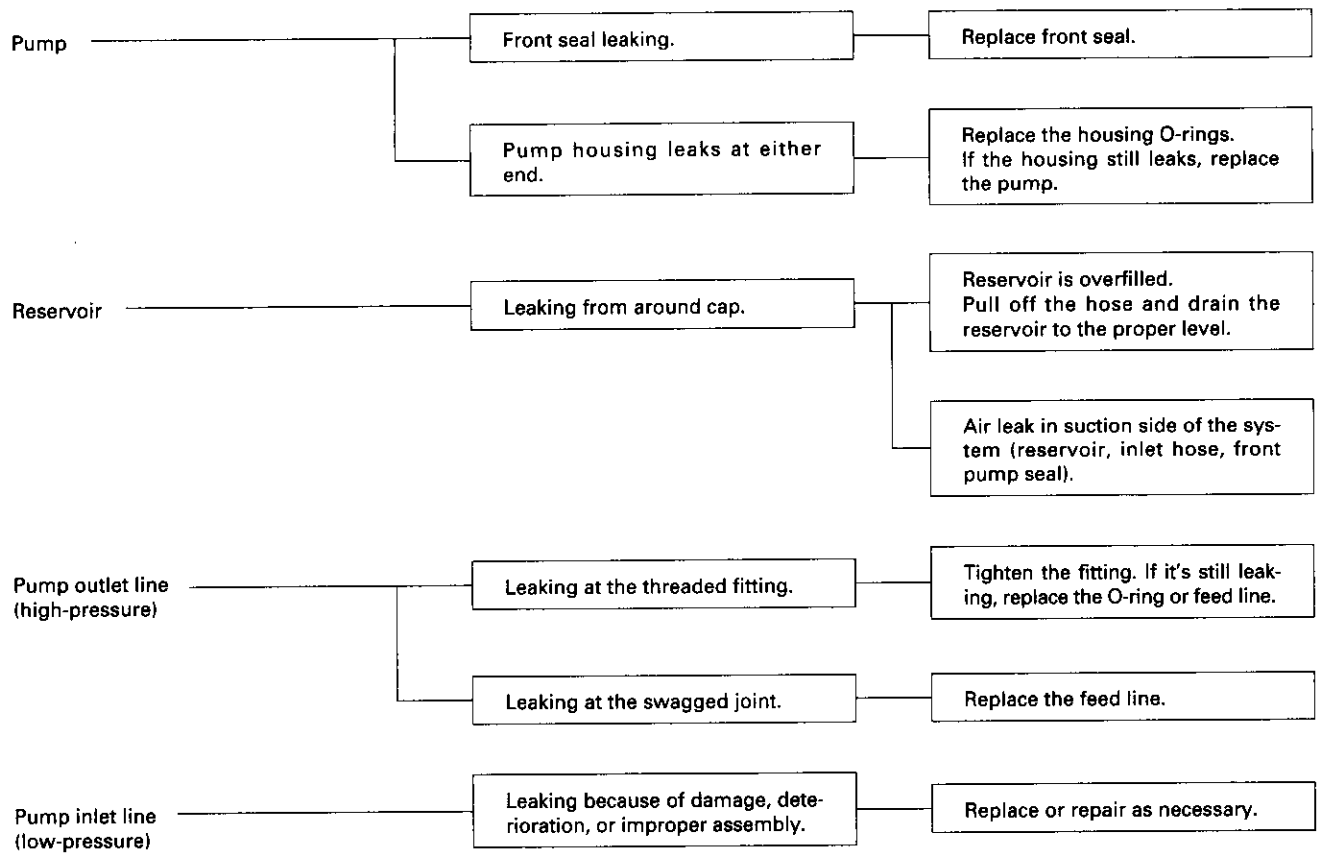

Inspection and Adjustment


Steering Operation

Place the front wheels in the straight ahead position, and measure the distance the steering wheel can be turned without moving the front wheels.

ROTATIONAL PLAY: 0 – 10 mm (0 – 0.39 in)


If the play exceeds the service limit, perform rack guide adjustment (see page 17-33).

If the play is still excessive after rack guide adjustment, inspect the steering linkage and gearbox as described on the next page.

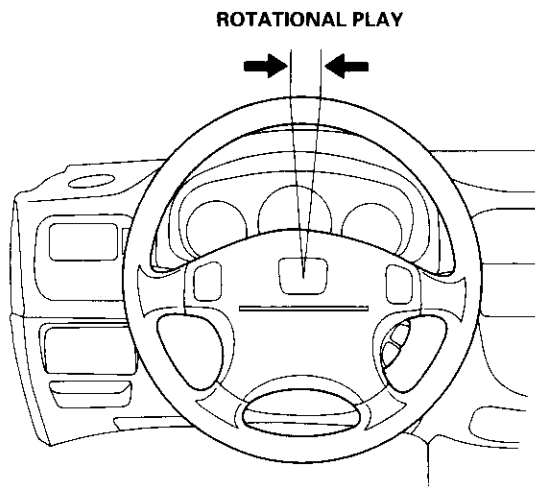

Power Assist Check with Vehicle Parked


1. Check the power steering fluid level (see page 17-33) and pump belt tension (see page 17-32).
2. Start the engine, allow it to idle, and turn the steering wheel from lock-to-lock several times to warm up the fluid.
3. Attach a spring scale to the steering wheel. With the engine idling and the vehicle on a clean, dry floor, pull the scale as shown and read it as soon as the tires begin to turn.

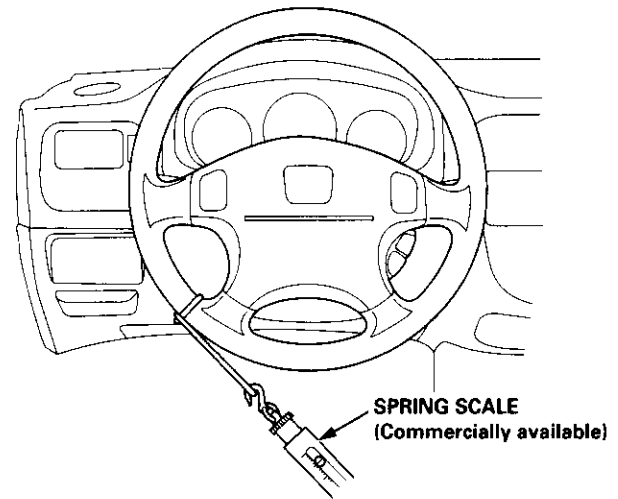

4. The scale should read no more than 29 N (3.0 kgf, 6.6 lbf). If it reads more, check the gearbox and pump.



Steering Linkage and Gearbox

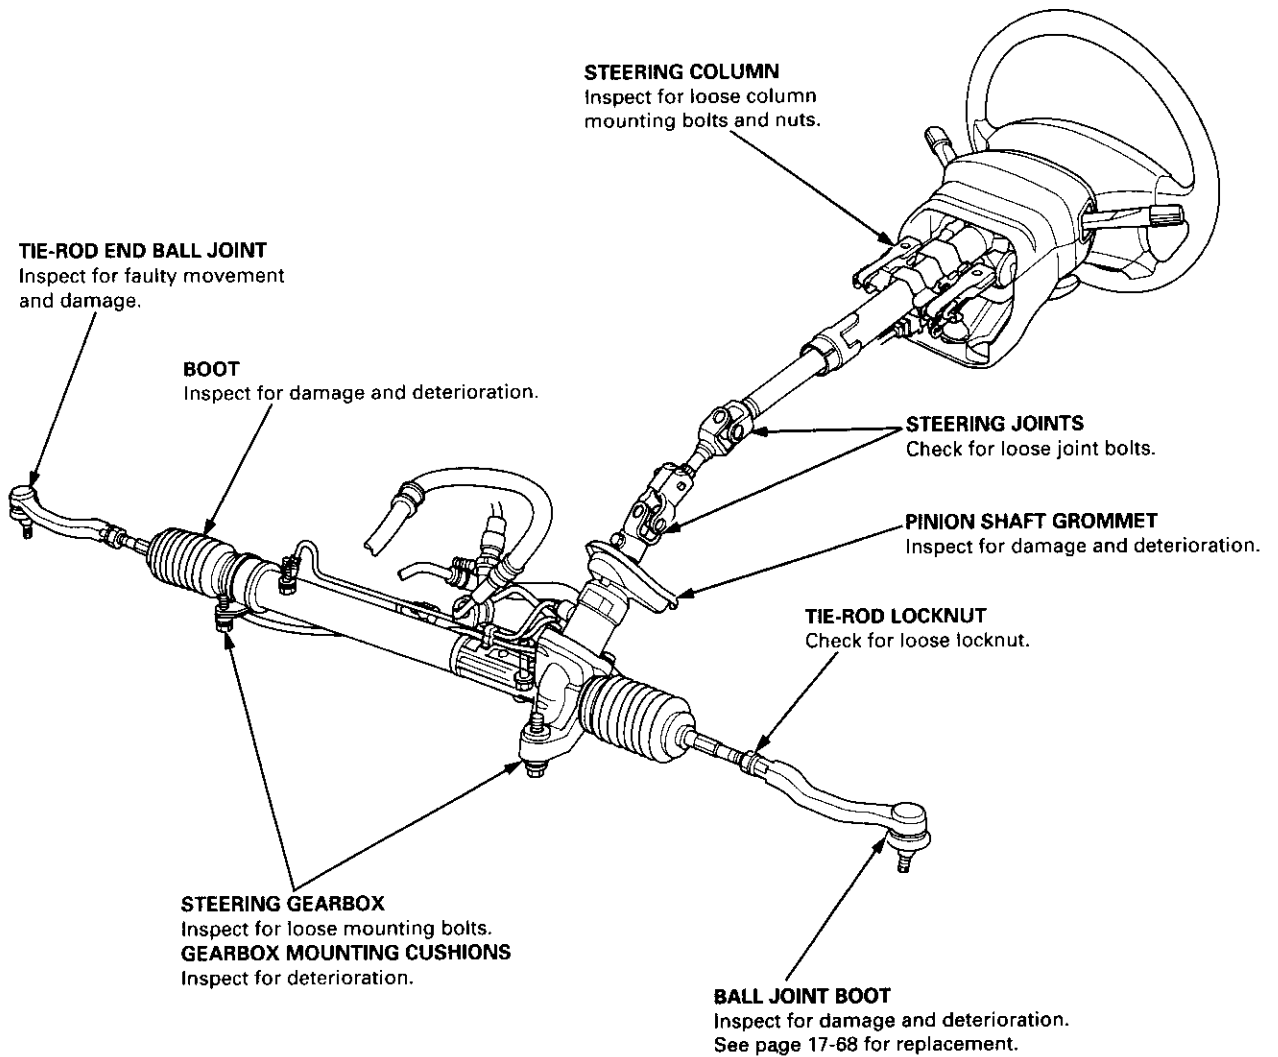

Inspection and Adjustment

Pump Belt

NOTE: When using a new belt, first adjust the deflection or tension to the values for the new belt, then readjust the deflection or tension to the values for the used belt after running engine for five minutes.

Inspection

Attach the special tool to the belt and measure the tension of the belt.


Tension:

Used Belt: 340 – 490 N (35 – 50 kgf, 77 – 110 lbf)

New Belt: 640 – 780 N (65 – 80 kgf, 143 – 176 lbf)

NOTE:

- If there are cracks or any damage evident on the belt, replace it with a new one.
- Follow the manufacturer's instructions for the tension gauge.

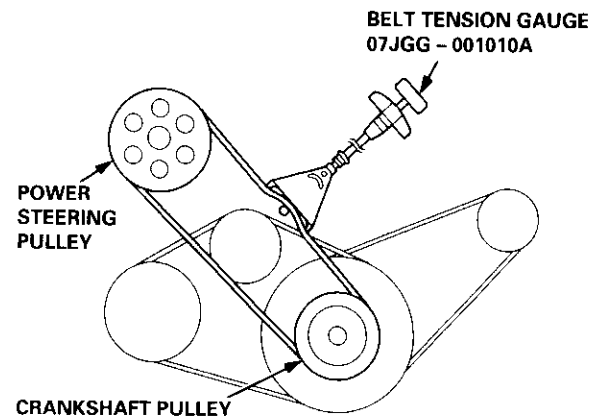

Inspect the pump belt for cracks or any damage. Replace the belt with a new one if necessary.


Measurement without Belt Tension Gauge:

Apply a force of 98 N (10 kgf, 22 lbf) and measure the deflection between the power steering pump and the crankshaft pulleys.

Deflection:


Used Belt: 10.5 – 14.0 mm (0.41 – 0.55 in)

New Belt: 7.5 – 10.0 mm (0.30 – 0.39 in)

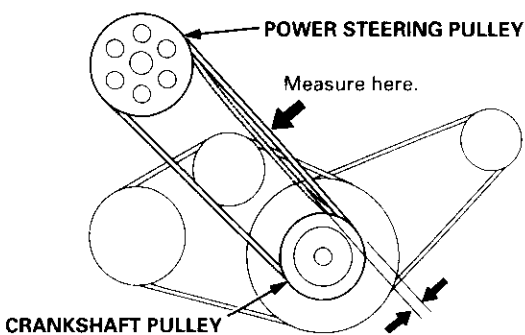

Adjustment

1. Loosen the power steering pump mounting bolts.

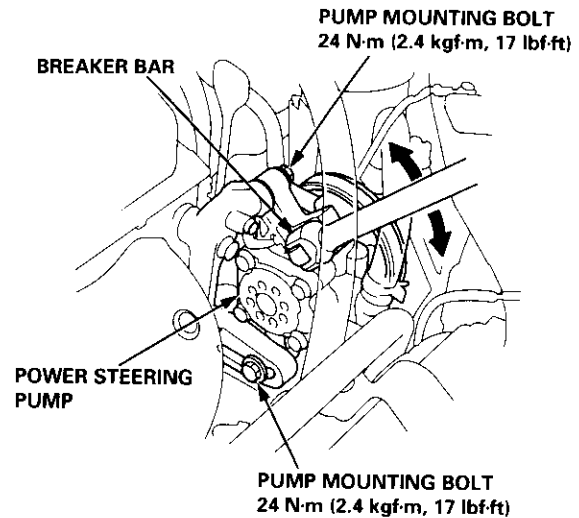


2. Adjust the belt tension by moving the power steering pump with a 1/2" drive breaker bar to obtain the proper belt tension, then retighten the mounting bolts.
3. Start the engine and turn the steering wheel from lock-to-lock several times, then stop the engine and recheck the deflection of the belt.



Rack Guide Adjustment

NOTE: Perform rack guide adjustment with the wheels in the straight ahead position.

1. '96 - '97 model:
Loosen the rack guide screw locknut with the special tool, then loosen the rack guide screw.

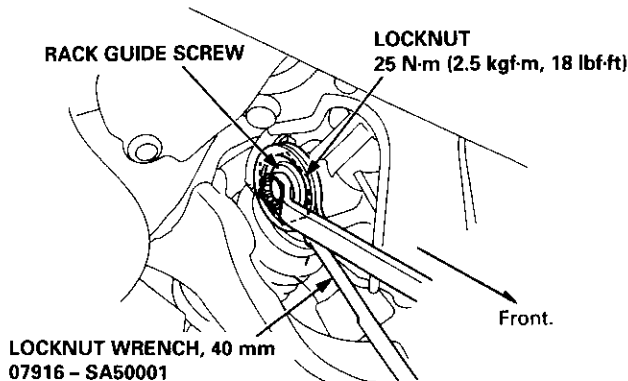

'98 model:

Remove the old sealant off of the threaded section, then apply new sealant to the first three threads. Loosely install the rack guide screw.

2. Tighten the rack guide screw to 25 N-m (2.5 kgf-m, 18 lbf-ft), then loosen it.
3. Retighten the rack guide screw to 3.9 N-m (0.4 kgf-m, 2.9 lbf-ft), then back it off to specified angle.

Specified Return Angle: 20° max.

4. Tighten the locknut while holding the rack guide screw.
5. Check for tight or loose steering through the complete turning travel.
6. Perform following inspections:
 - Steering operation (see page 17-30).
 - Power assist with vehicle parked.

Fluid Replacement

Check the reservoir at regular intervals, and add fluid as necessary.


CAUTION: Always use Genuine Honda Power Steering Fluid-V or S. Using any other type of power steering fluid or automatic transmission fluid can cause increased wear and poor steering in cold weather.

SYSTEM CAPACITY:

0.85 liter (0.90 US. qt, 0.75 Imp.qt)
at disassembly


RESERVOIR CAPACITY:

0.4 liter (0.42 US. qt, 0.35 Imp.qt)

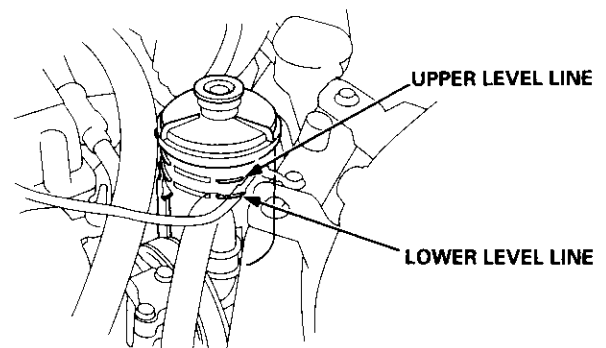

1. Raise the reservoir, then disconnect the return hose.
2. Connect a hose of suitable diameter to the disconnected return hose, and put the hose end in a suitable container.

CAUTION: Take care not to spill the fluid on the body and parts. Wipe off any spilled fluid at once.

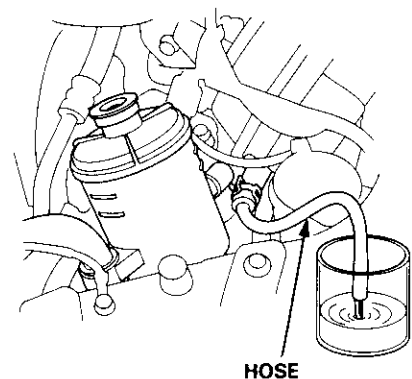

3. Start the engine, let it run at idle, and turn the steering wheel from lock-to-lock several times. When fluid stops running out of the hose, shut off the engine. Discard the fluid.
 4. Reinstall the return hose on the reservoir.
 5. Fill the reservoir to the upper level line.
 6. Start the engine and run it at fast idle, then turn the steering from lock-to-lock several times to bleed air from the system.
 7. Recheck the fluid level and add some if necessary.
- CAUTION: Do not fill the reservoir beyond the upper level line.**

Inspection and Adjustment


Pump Pressure Check

Check the fluid pressure as follows to determine whether the trouble is in the pump or gearbox.

NOTE: First check the power steering fluid level and pump belt tension.

CAUTION: Disconnect the high pressure hose with care so as not to spill the power steering fluid on the frame and other parts.

1. Disconnect the outlet line from the pump outlet fitting, then install the P/S joint adaptor (pump) on the pump outlet.
2. Connect the P/S joint adaptor (hose) to the power steering pressure gauge, then connect the outlet hose to the adaptor.
3. Install the power steering pressure gauge to the P/S joint adaptor (pump) as shown.

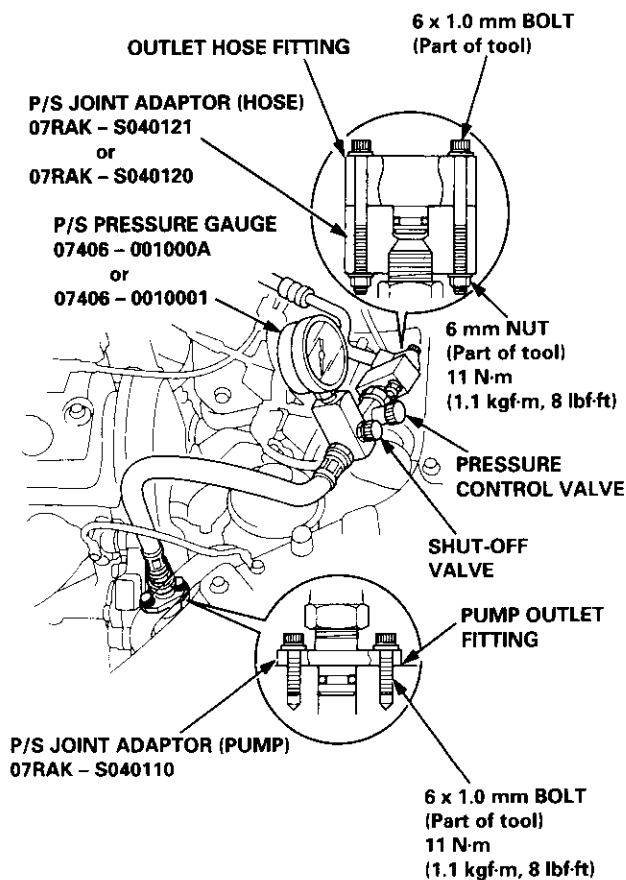


4. Open the shut-off valve fully.
5. Open the pressure control valve fully.

6. Start the engine and let it idle.
7. Turn the steering wheel from lock-to-lock several times to warm the fluid to operating temperature.
8. Measure steady-state fluid pressure while idling. If the pump is in good condition, the gauge should read less than 1500 kPa (15 kgf/cm², 213 psi). If it reads high, check the outlet line or valve body unit (see General Troubleshooting 17-22).
9. Close the pressure control valve, then close the shut-off valve gradually until the pressure gauge needle is stable. Read the pressure.
10. Immediately open the pressure control valve fully.

CAUTION: Do not keep the pressure control valve closed more than 5 seconds or the pump could be damaged by over-heating.

If the pump is in good condition, the gauge should read at least 6,400 - 7,400 kPa (65 - 75 kgf/cm², 920 - 1,070 psi). A low reading means pump output is too low for full assist. Repair or replace the pump.

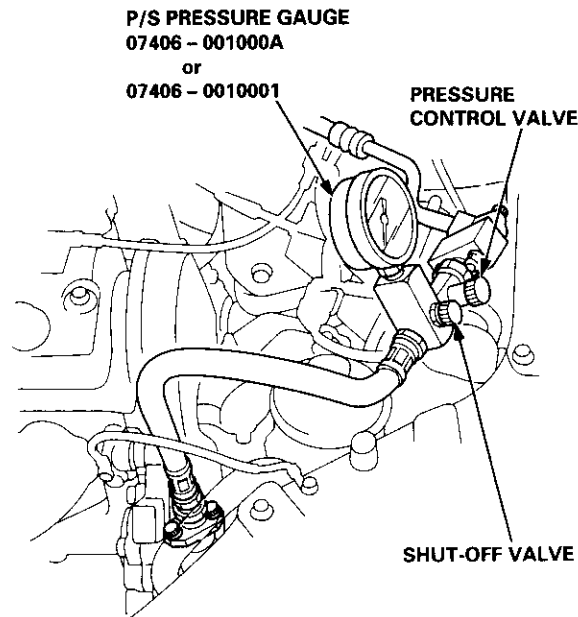

Steering Wheel




Removal


SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

NOTE: Before removing the steering wheel, align the front wheels straight ahead.

1. Remove the driver's airbag assembly from the steering wheel (see section 24).
2. Disconnect the horn connector and cruise control switches connector.

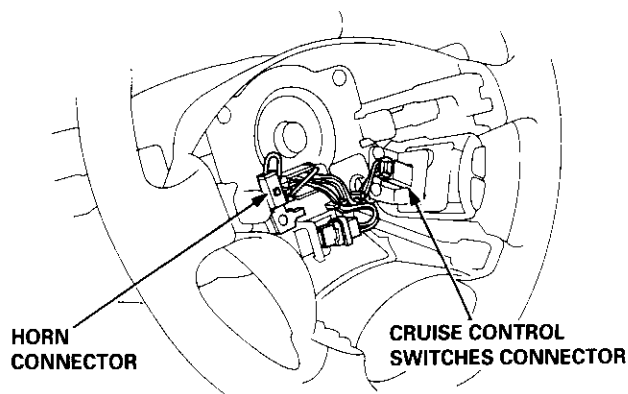

3. Remove the steering wheel nut.

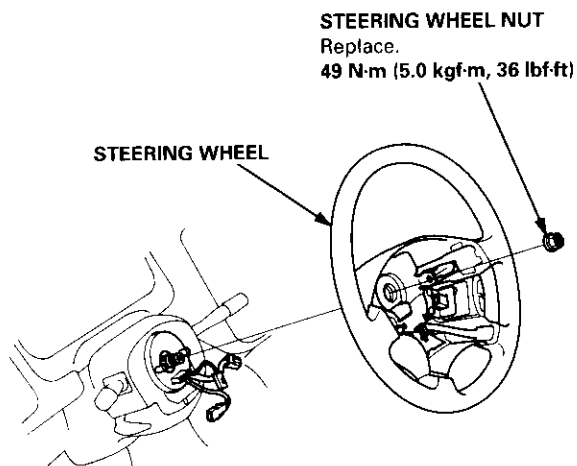


4. Remove the steering wheel by rocking it slightly from side-to-side as you pull steadily with both hands.

Installation

CAUTION: Do not tap on the steering wheel or steering column shaft when installing the steering wheel.


NOTE: Before installing the steering wheel, align the front wheels straight ahead.

1. Before installing the steering wheel, center the cable reel. Do this by first rotating the cable reel clockwise until it stops. Then rotate it counterclockwise approximately two turns. The arrow mark on the cable reel label should point straight up.

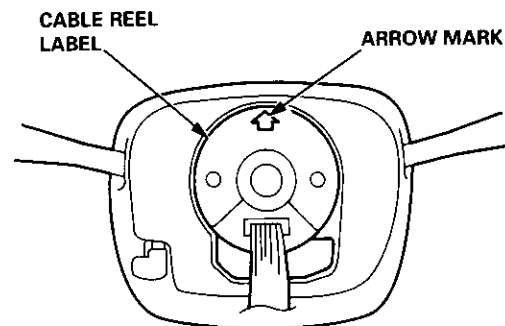

2. Install the steering wheel with the steering wheel nut.


NOTE: Be sure the steering wheel shaft engages the cable reel and canceling sleeve.

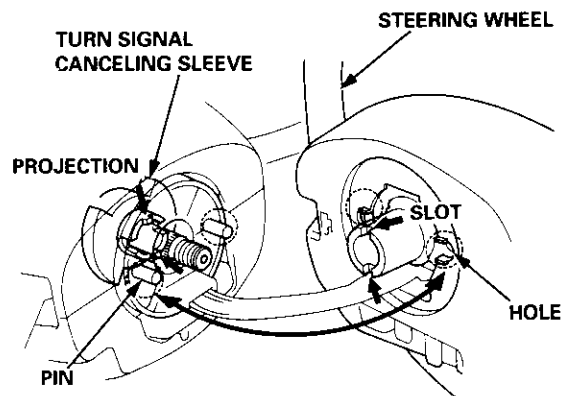

3. Attach the cruise control switches connector to the steering wheel clip.
4. Connect the horn connector.
5. Install the driver's airbag assembly, and confirm proper system operation (see section 24).
6. Check the horn and cruise control switches for proper operations.

Steering Wheel

Disassembly/Reassembly

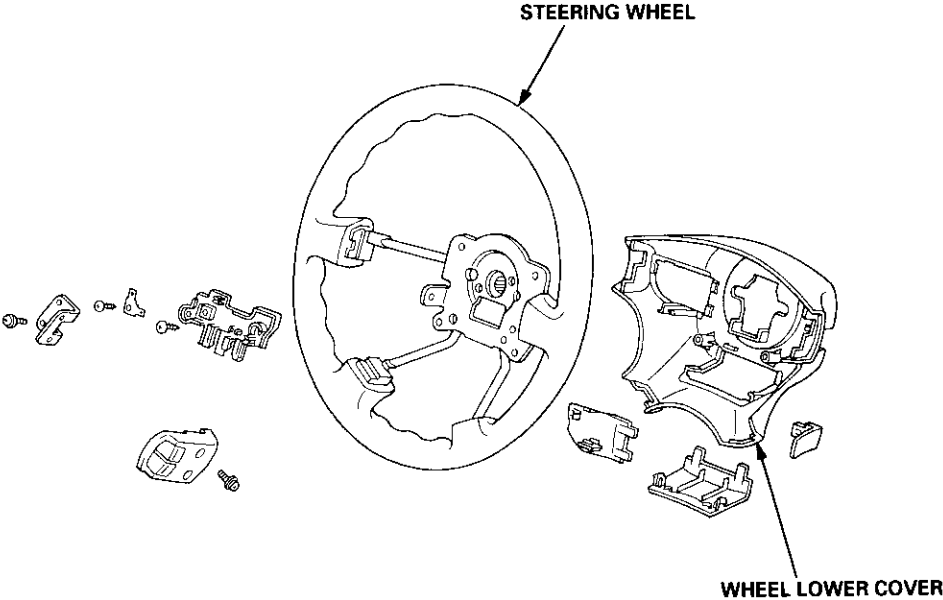



Removal/Installation

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

NOTE: Before removing the steering column for SRS, remove the driver's airbag assembly and cable reel (see section 24).


1. Remove the steering wheel (see page 17-35).
2. Remove the driver's dashboard lower cover and driver's knee bolster (see section 20).
3. Remove the combination switch assembly from the steering column shaft by disconnecting the connectors.
4. Disconnect the ignition switch connectors.
5. Remove the steering joint cover.
6. Remove the steering joint bolts.
7. Disconnect the steering joint by moving the joint toward the column, and remove it from the column shaft.
8. Remove the steering column by removing the attaching nuts and bolt.

9. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the steering joint is connected as follows:
 - a. Insert the upper end of the steering joint onto the steering shaft (line up the bolt hole with the flat on the shaft), and loosely install the upper joint bolt.
 - b. Slip the lower end of the steering joint onto the pinion shaft (line up the bolt hole with the groove around the shaft), and loosely install the lower joint bolt.

Be sure that the lower joint bolt is securely in the groove in the pinion shaft.
 - c. Pull on the steering joint to make sure that the steering joint is fully seated. Then tighten the joint bolts.
- Be sure the wires are not caught or pinched by any parts when installing the column.
 - Make sure the wire harness is routed and fastened properly.
 - Make sure the connectors are properly connected.

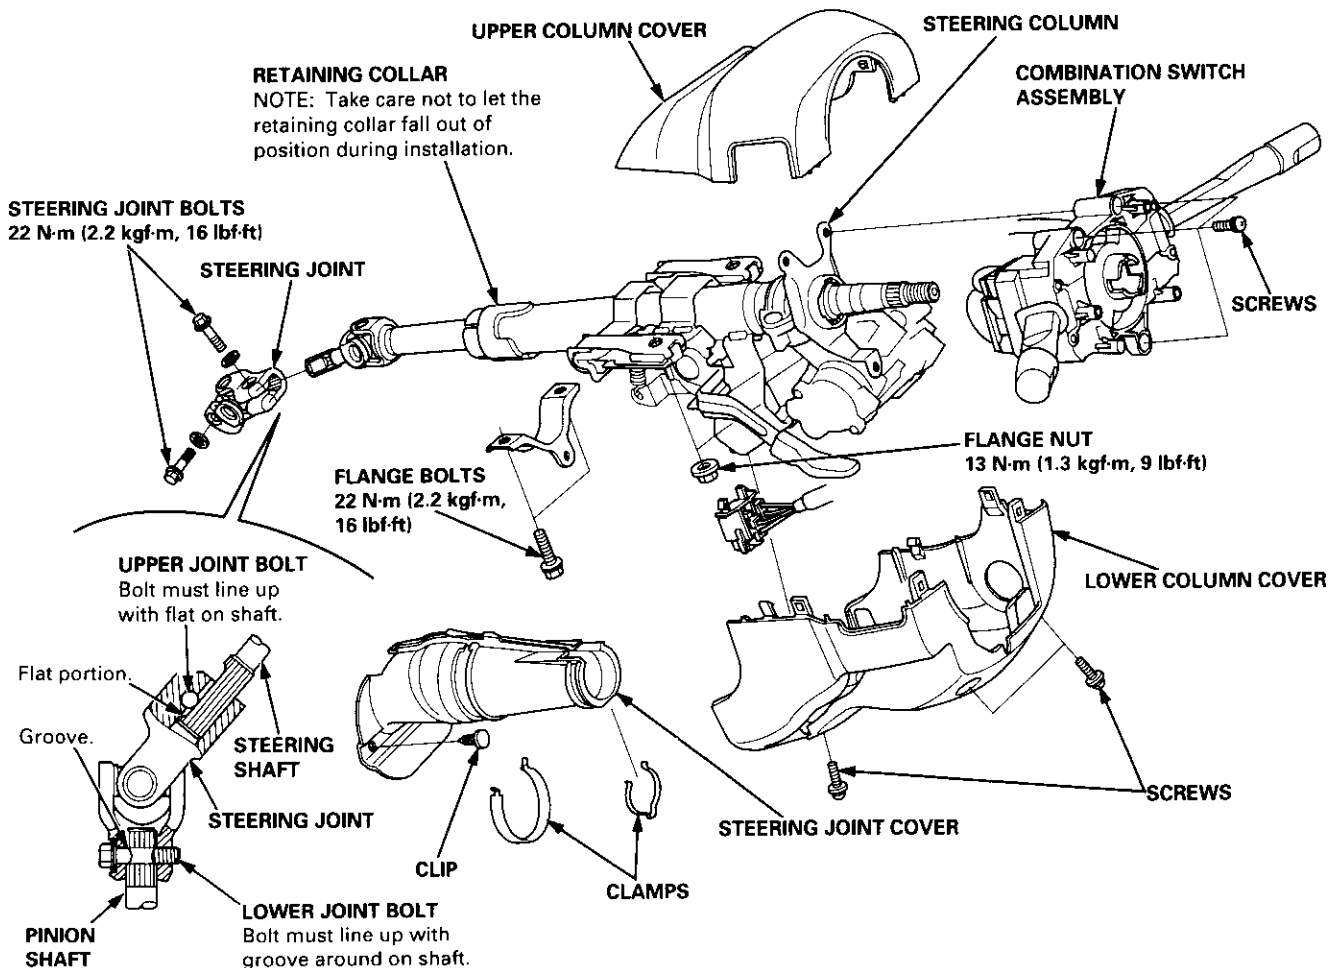


Steering Column

Inspection

NOTE: The tilt steering column type is shown; the conventional steering column is similar except for the tilt mechanism.

- Check the steering column ball bearing and the steering joint bearings for play and proper movement. If there is noise or if there is excessive play, replace the steering column as an assembly.
- Check the retaining collar for damage. If it is damaged, replace the retaining collar.
- Check the absorbing plates, absorbing plate guides and sliding capsules for distortion or breakage. Replace the steering column as an assembly if they are distorted or broken.

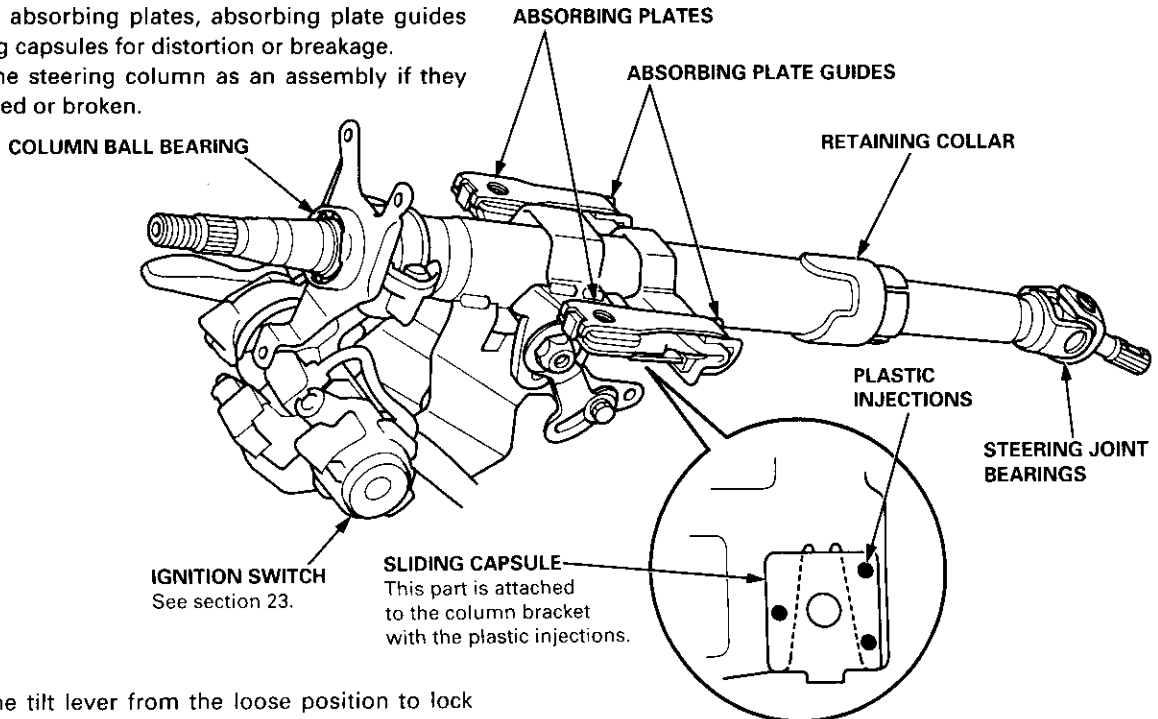


1. Move the tilt lever from the loose position to lock position 3 to 5 times; then measure the tilt lever preload 10 mm (0.4 in) from the end of the tilt lever.

Preload: 70 – 90 N (7 – 9 kgf, 15 – 20 lbf)

2. If the measurement is out of the specification, adjust the preload using the following procedures.
 - a. Loosen the tilt lever, and set the steering column in the neutral position.
 - b. Remove the 6 mm lock bolt and remove the stop.
 - c. Adjust the preload by turning the tilt lock bolt left or right.
 - d. Pull up the tilt lever to the uppermost position and install the stop. Check the preload again. If the measurement is still out of specification, repeat the above procedures "a" through "c" to adjust.

CAUTION: Be careful not to loosen the tilt lever when installing the stop or tightening the 6 mm lock bolt.

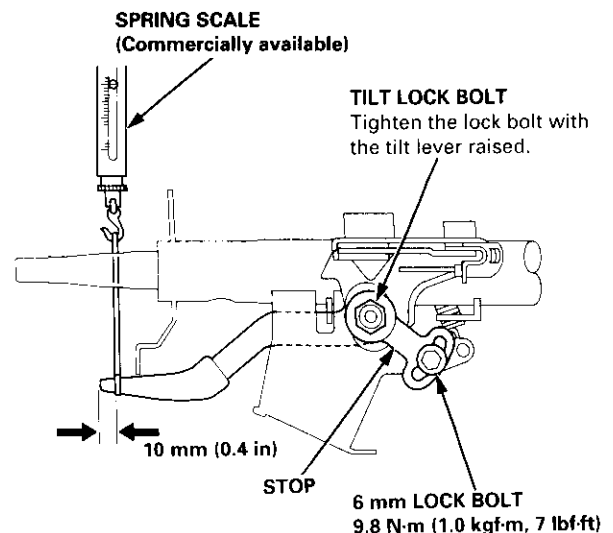


Power Steering Hoses, Lines



Fluid Leakage Inspection

HOSES and LINES

- Inspect hoses for damage, leaks, interference or twisting.
- Inspect fluid lines for damage, rusting and leakage.
- Inspect for leaks at hose and line joints and connections.

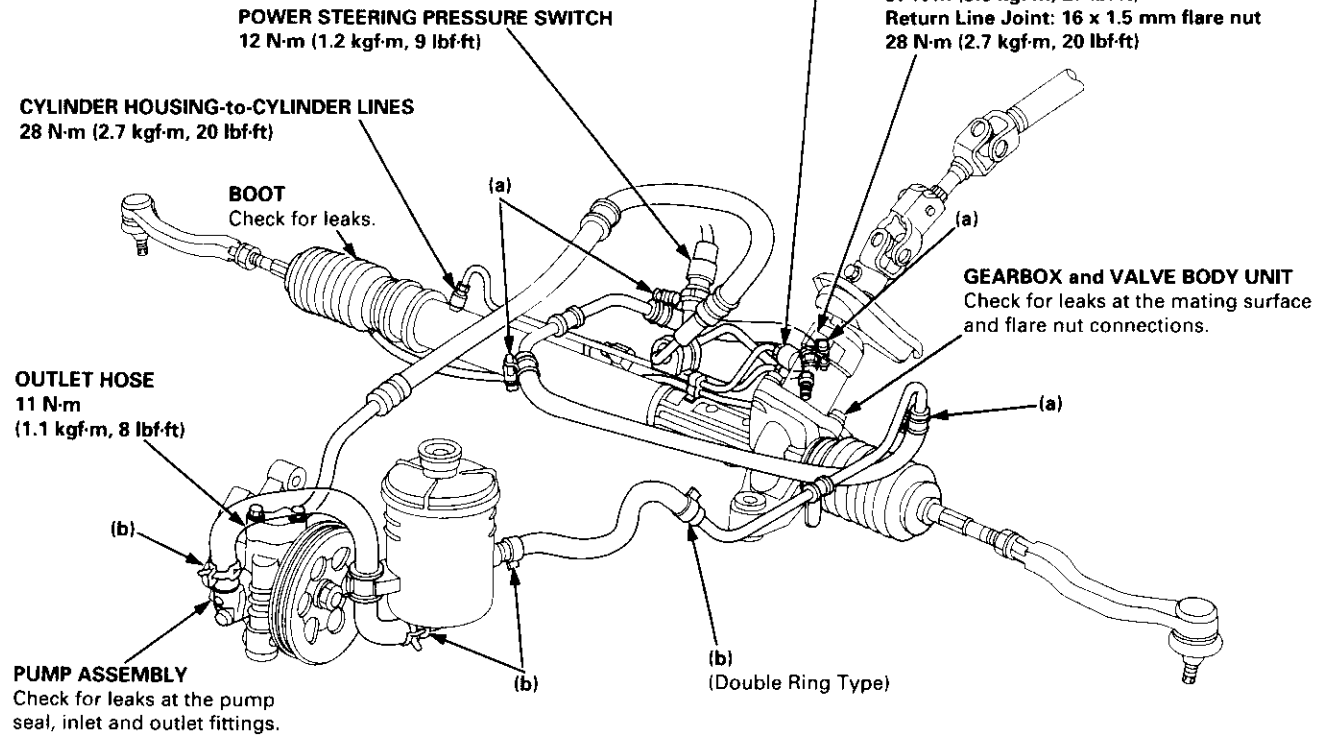

Replacement

NOTE:

- Connect each hose to the corresponding pipe securely until it contacts the stop on the line. Install the clamp or adjustable clamp at the specified distance from the hose end as shown.
- Add the power steering fluid to the specified level on the reservoir and check for leaks.



ADJUSTABLE HOSE CLAMP:

- Position the adjustable hose clamps at the points indicated (a) in the drawing above.
- Slide the hose over the line until it contacts the stop.

CAUTION: Check all clamps for deterioration or deformation; replace with the clamps new ones if necessary.

HOSE CLAMP:

- Position the hose clamps at the points indicated (b) in the drawing above.
- Slide the hose over the line until it contacts the stop.

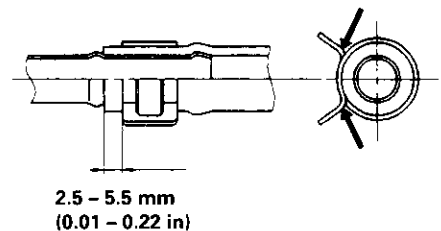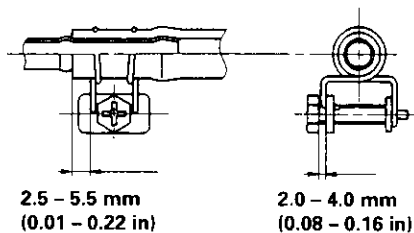


Power Steering Pump

Removal/Installation

NOTE: Before disconnecting the hoses from the pump, place a suitable container under the car.

1. Remove the belt by loosening the pump mounting bolts.

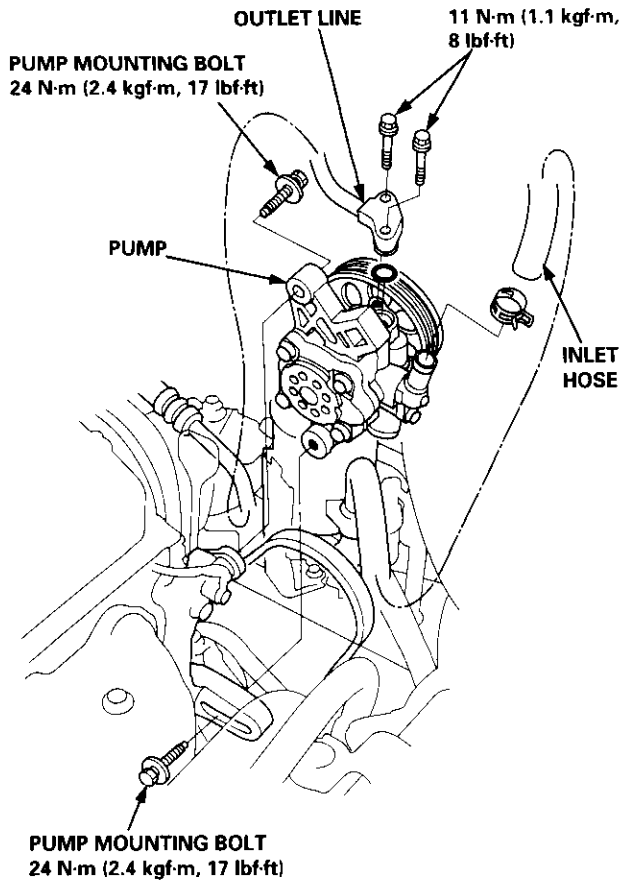

2. Cover the A/C compressor with several shop towels to protect it from spilled power steering fluid.
3. Disconnect the inlet hose and the outlet line from the pump, and plug them.

NOTE: Take care not to spill the fluid on the body or parts. Wipe off any spilled fluid at once.

4. Remove the pump mounting bolts, then remove the pump.


NOTE:

- Do not turn the steering wheel with the pump removed.
- Wrap the opening of the pump with a piece of tape to prevent foreign material from entering the pump.

5. Connect the inlet hose and the outlet line. Tighten the pump fittings securely.
6. Loosely install the pump in the pump bracket with mounting bolts.
7. Install the pump belt.

CAUTION:

- Make sure that the power steering belt is properly positioned on the pulleys.
- Do not get power steering fluid or grease in the power steering belt or pulley faces. Clean off any fluid or grease before installation.

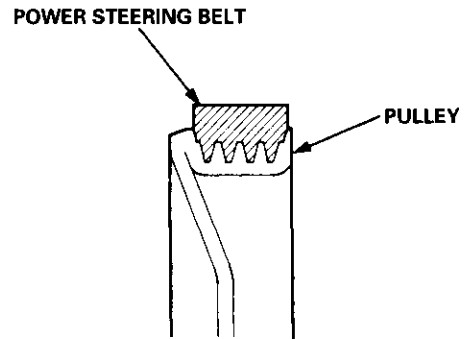

8. Adjust the pump belt (see page 17-32).
9. Fill the reservoir to the upper level line (see page 17-33).




Disassembly

CAUTION: The power steering components are made of aluminum. Avoid damaging the components during assembly.

NOTE:

- Clean the disassembled parts with a solvent, and dry them with compressed air. Do not dip the rubber parts in a solvent.
- Always replace the O-rings and rubber seals with new ones before assembly.
- Apply recommended power steering fluid to the parts indicated in the assembly procedures.
- Do not allow dust, dirt, or other foreign materials to enter the power steering system.
- Replace the pump as an assembly if the parts indicated with asterisk (*) are worn or damaged.

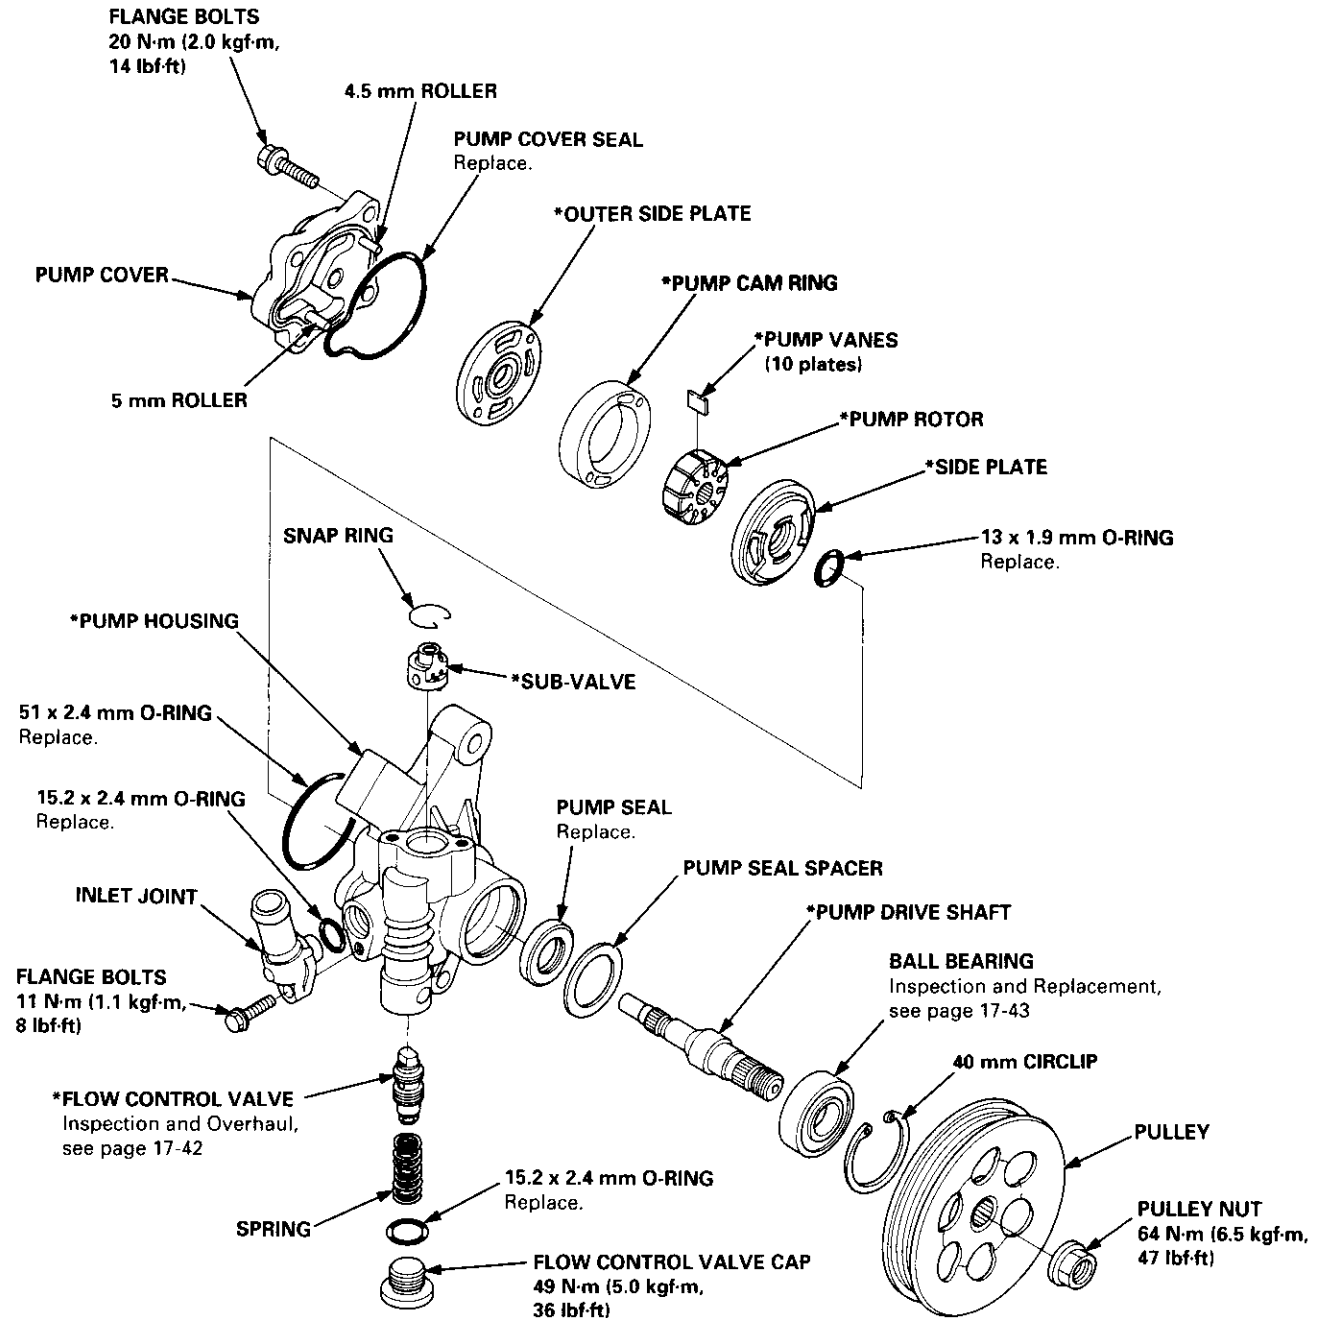


(cont'd)

Power Steering Pump

Disassembly (cont'd)

1. Drain the fluid from the pump.
2. Hold the steering pump in a vise with soft jaws, hold the pulley with the special tool, and remove the pulley nut and pulley.

CAUTION: Be careful not to damage the pump housing with the jaws of the vise and extension bar.

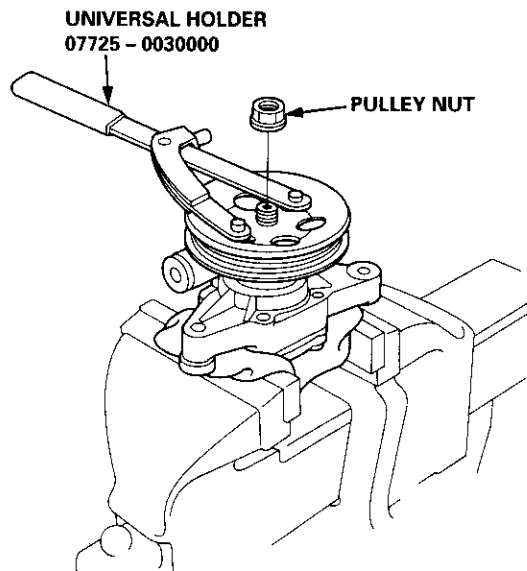


3. Loosen the flow control valve cap with a hex wrench and remove it.
4. Remove the O-ring, flow control valve and spring.
5. Remove the inlet joint and O-ring.
6. Remove the pump cover and pump cover seal.
7. Remove the outer side plate, pump cam ring, pump rotor, pump vanes, side plate and O-rings.
8. Remove the snap ring, then remove the sub-valve from the pump housing.
9. Remove the circlip, then remove the pump drive shaft by tapping the shaft end with the plastic hammer.
10. Remove the pump seal spacer and pump seal.


Inspection

Flow Control Valve:

1. Check the flow control valve for wear, burrs, and other damage to the edges of the grooves in the valve.

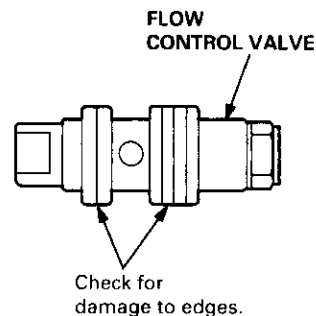


2. Inspect the bore the flow control valve for scratches or wear.
3. Slip the valve back in the pump, and check that it moves in and out smoothly.

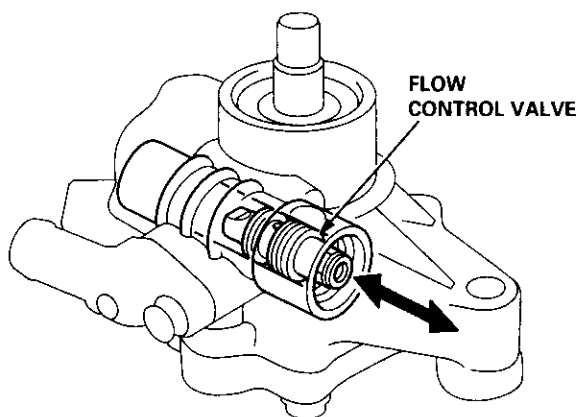


If OK, go on step 4; if not, replace the pump as an assembly. The flow control valve is not available separately.

4. Attach a hose to the end of the valve as shown.

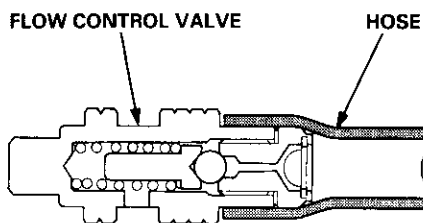




- Submerge the valve in a container of power steering fluid or solvent, and blow in the hose. If air bubbles leak through the valve at less than 98 kPa (1.0 kgf/cm², 14.2 psi), repair it as follows.

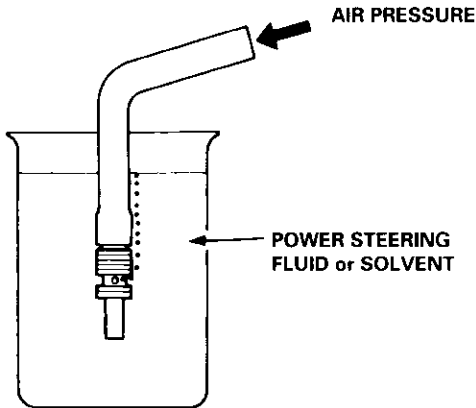

- Hold the bottom end of the valve with an open end wrench.
- Unscrew the seat in the top end of the valve, and remove any shims, the relief check ball, relief valve and relief valve spring.

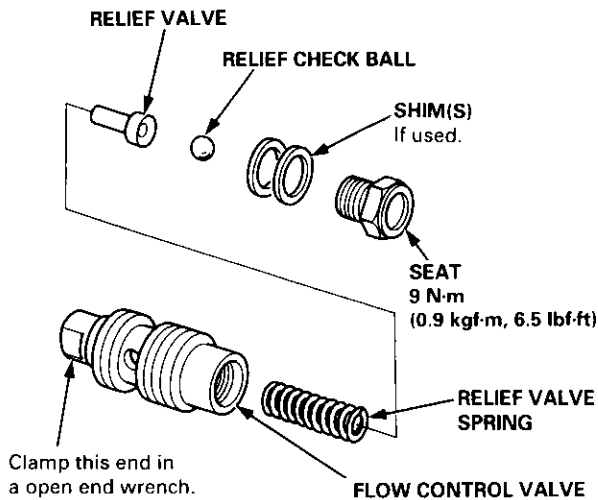


- Clean all the parts in solvent, dry them off, then reassemble and retest the valve. If the flow control valve tests OK, reinstall it in the pump. If the flow control valve still leaks air, replace the pump as an assembly. The flow control valve is not available separately.

NOTE: If necessary, relief pressure is adjusted at the factory by adding shims under the check ball seat. If you found shims in your valve, be sure you reinstall as many as you took out.


Ball Bearing:

- Inspect the ball bearing by rotating the outer race slowly. If any play or roughness is felt, replace the ball bearing.

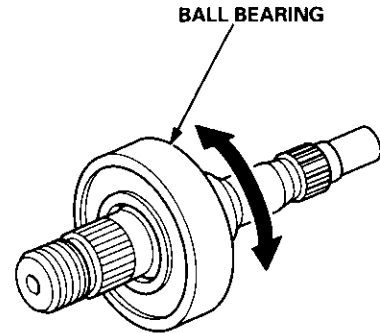

- Remove and discard the ball bearing using a press as shown.
- Install the new ball bearing using a press as shown.

Ball Bearing Replacement:

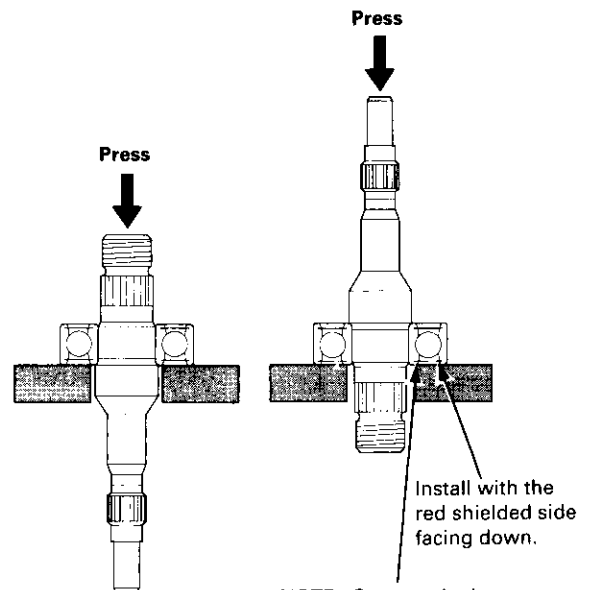


NOTE: Support the inner race with the tool securely.

Power Steering Pump

Reassembly


1. Align the pin of the sub-valve with the oil passage in pump housing, and push down the sub-valve. Install the snap ring properly.

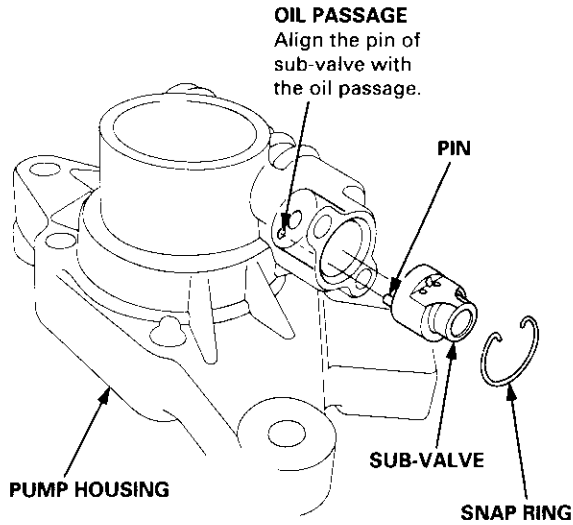


2. Install the new pump seal in the pump housing by hand, then install the pump seal spacer.

NOTE: Insert the pump seal with its grooved side facing in.


3. Position the pump drive shaft in the pump housing, then drive it in using a special tool as shown.
4. Install the 40 mm circlip with its radiused side facing out.

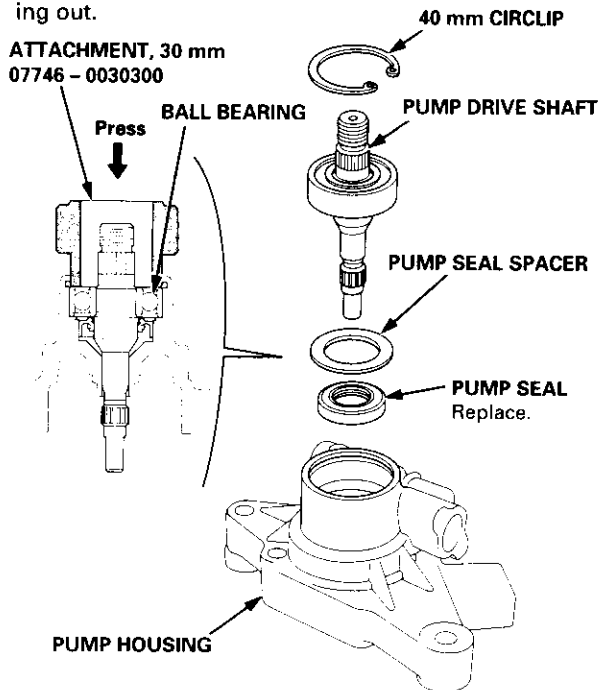

5. Coat the pump cover seal and the cover bushing with the power steering fluid, then install the pump cover seal into the groove in the pump cover.
6. Install the outer side plate over the two rollers.

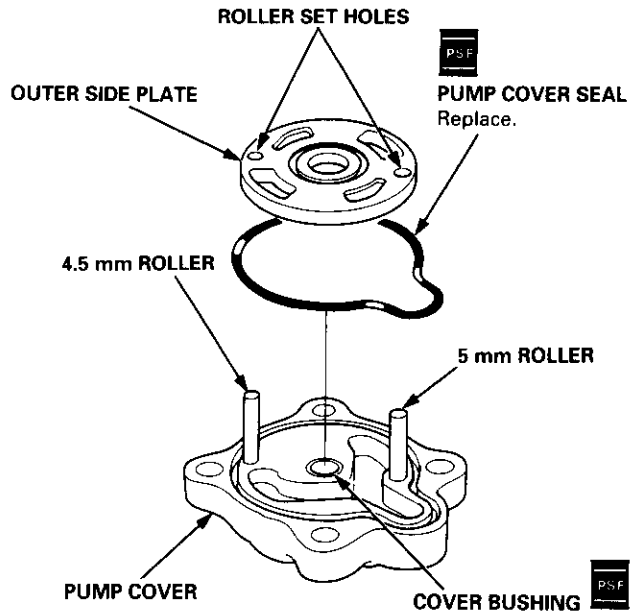


7. Set the pump cam ring over the two rollers with the "O" mark on the cam ring upward.

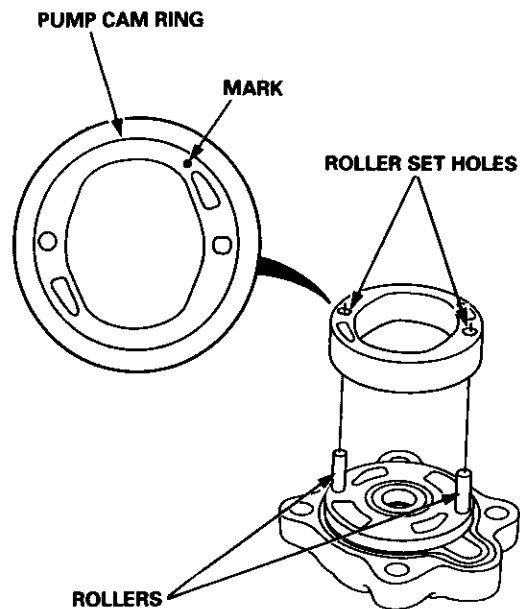




8. Assemble pump rotor to the pump cover with the "o" marks on the rotor facing down.
9. Set the 10 vanes in the grooves in the rotor.


NOTE: Be sure that the round ends of the vanes are in contact with the sliding surface of the cam ring.

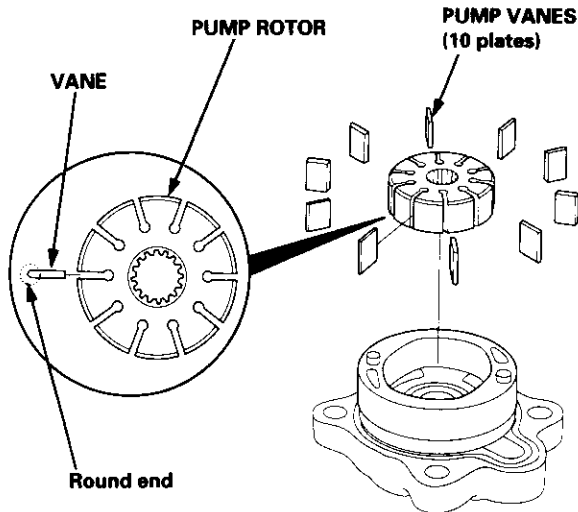


10. Coat the O-ring with power steering fluid, and install it into the grooves in the side plate.
11. Install the side plate on the cam ring by aligning the roller set holes in the side plate with the rollers.

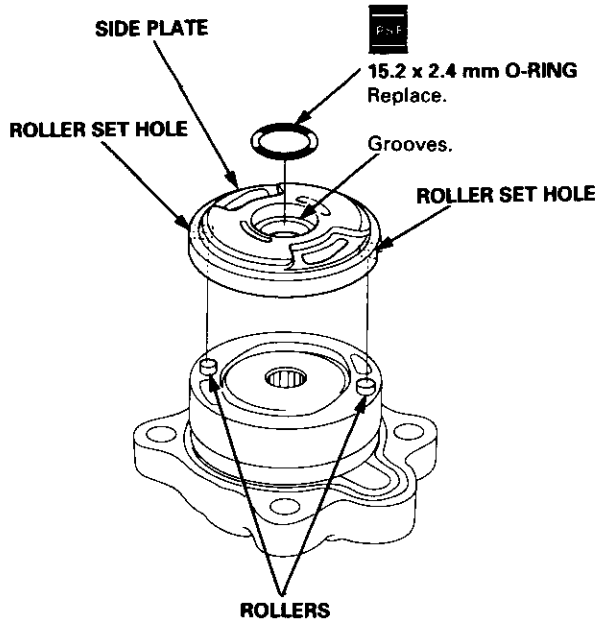

12. Coat the O-ring with power steering fluid, and position it into the pump housing.
13. Install the pump cover assembly in the pump housing.

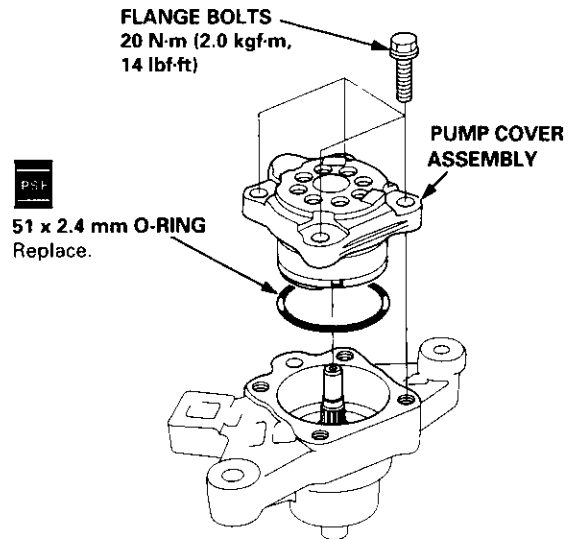

14. Coat the flow control valve with power steering fluid.
15. Install the flow control valve and spring on the pump housing.
16. Coat the O-ring with power steering fluid, and install it on the flow control valve cap.
17. Install the flow control valve cap on the pump housing, and tighten it.

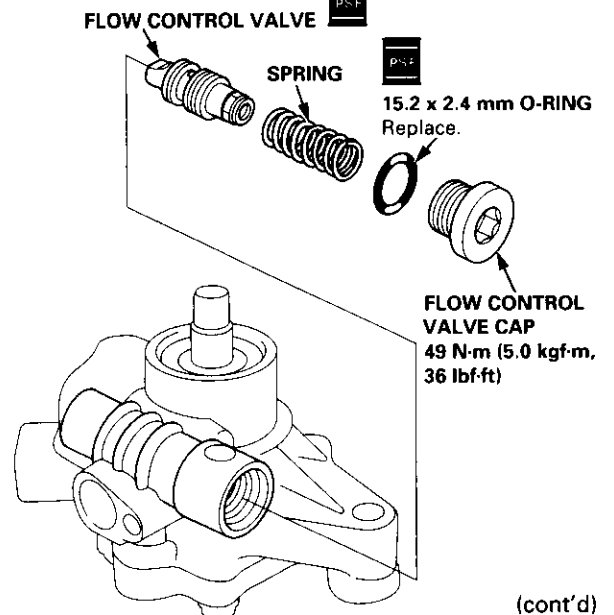


(cont'd)

Power Steering Pump


Reassembly (cont'd)

18. Coat the O-ring with power steering fluid, and install it into the grooves in the inlet joint.
19. Install the inlet joint on the pump housing.

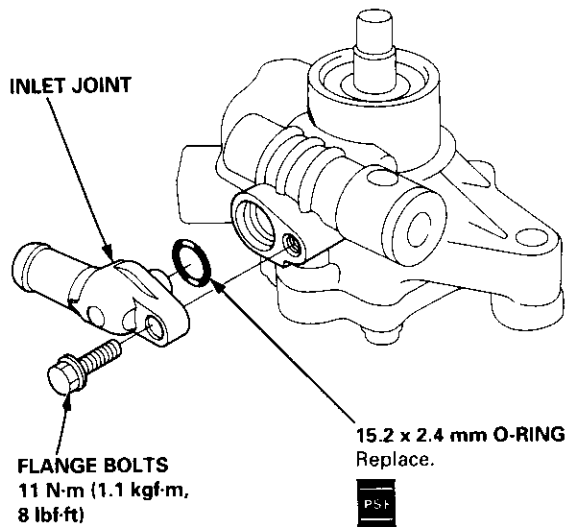


20. Install the pulley as shown below, then loosely install the pulley nut. Hold the steering pump in a vise with soft jaws.

CAUTION: Be careful not to damage the pump housing with the jaws of the vise.

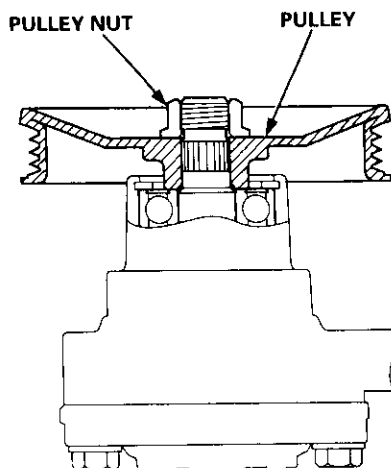

21. Hold the pulley with the special tool, and tighten the pulley nut.

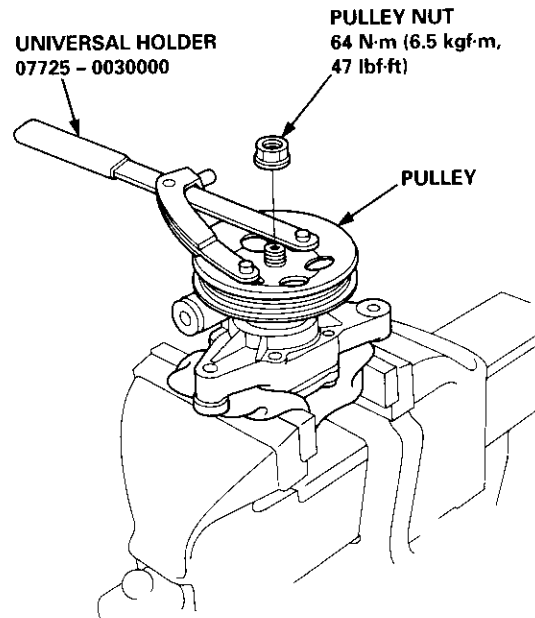

22. Check that the pump turns smoothly by turning the pulley by hand.


Steering Gearbox




Removal

NOTE: Using solvent and a brush, wash any oil and dirt off the valve body unit its lines, and the end of the gearbox. Blow dry with compressed air.


1. Drain the power steering fluid as described on page 17-33.
2. Raise the front of vehicle, and support it on safety stands in the proper locations (see section 1).
3. Remove the front wheels.
4. Remove the driver's airbag assembly, and steering wheel (see page 17-35).
5. Remove the steering joint cover.

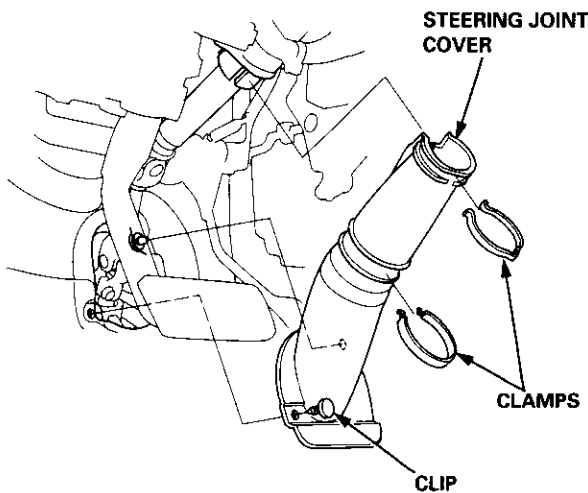

6. Remove the steering joint lower bolt, and disconnect the steering joint by moving the joint toward the column.

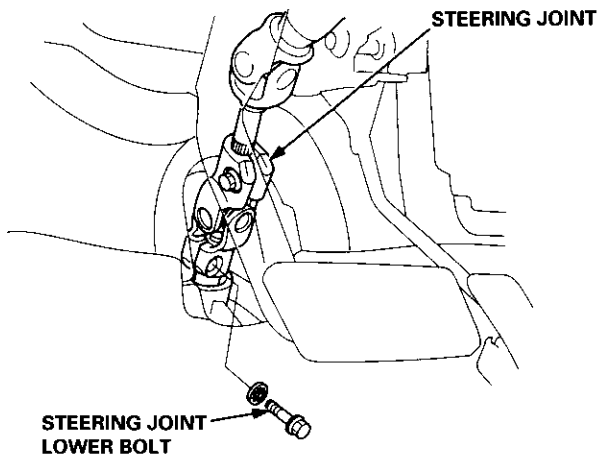

7. Remove the cotter pin from the castle nut ('96 - '97 model) or nut ('98 model) and remove the nut.

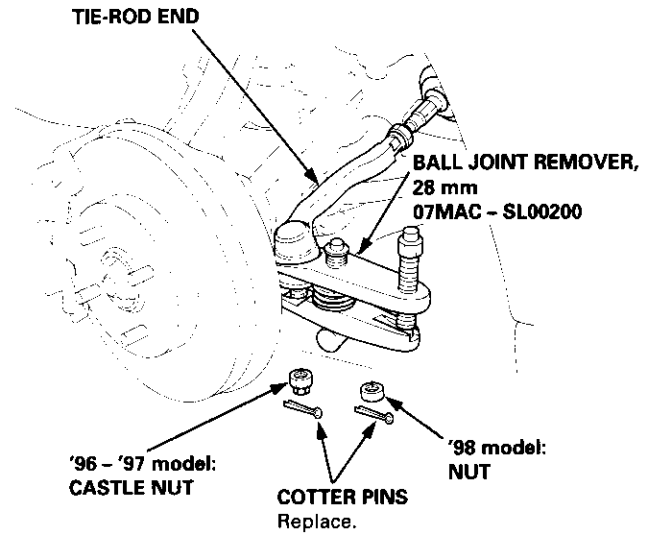

8. Install the 10 mm hex nut on the ball joint. Be sure that the 10 mm hex nut is flush with the ball joint pin end, or the threaded section of the ball joint pin might be damaged by the special tool.

NOTE: Remove the ball joint using the special tool. Refer to section 18 for how to use the ball joint remover.

9. Separate the tie-rod ball joint and knuckle using the special tool.

CAUTION: Avoid damaging the ball joint boot.

10. Remove the left tie-rod end, then slide the rack all the way to the right.
11. Separate the exhaust pipe A or TWC (see section 9).
12. Disconnect the shift linkage (see section 13 or section 14).

(cont'd)


Steering Gearbox

Removal (cont'd)

13. Loosen the 14 mm flare nut and disconnect the feed line.
14. Loosen the adjustable hose clamp and disconnect the return hose.
15. Loosen the 16 mm flare nut and remove the return hose joint from the valve body unit.


CAUTION: After disconnecting the hose and line, plug or seal the hose and line with a piece of tape or equivalent to prevent foreign materials from entering the valve body unit.

NOTE: Do not loosen the cylinder line A and B between the valve body unit and cylinder.

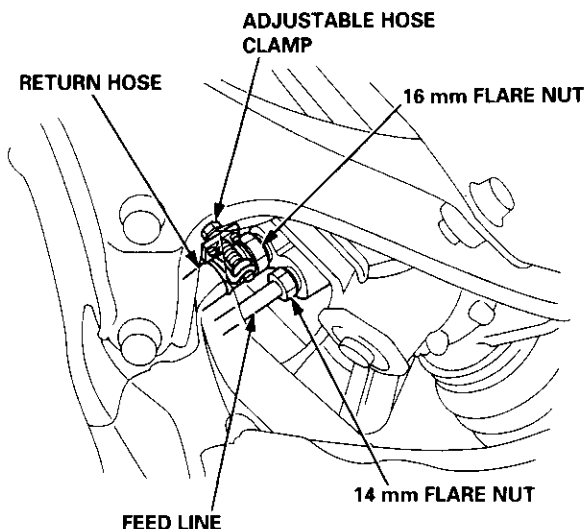


16. Remove the stiffener plate.

NOTE: Some stiffener plate attaching bolts are also used as gearbox mounting bolts. The gearbox will tilt to side when these bolts are removed.

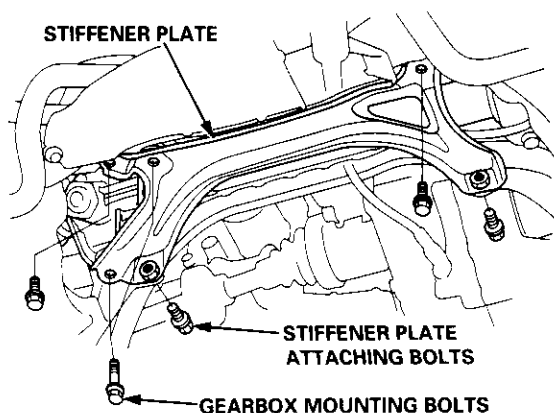


17. Remove the mounting brackets.

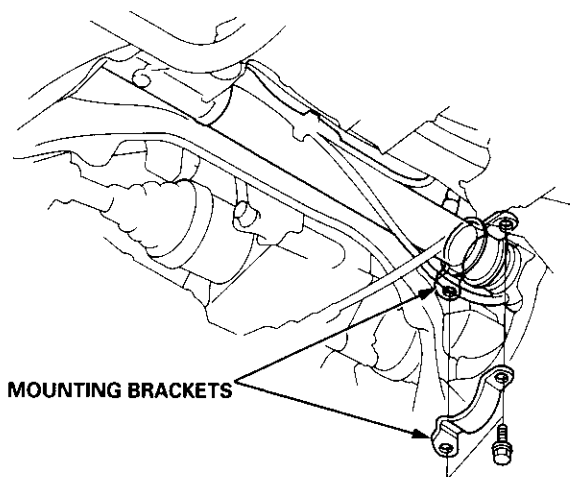

18. Pull the steering gearbox all the way down to clear the pinion shaft from the bulkhead, then remove the pinion shaft grommet.
19. Move the steering gearbox to right so the left rack end clears the rear beam, then tilt the left side down to remove it from the vehicle.

CAUTION: Be careful not to bend or damage the feed line and cylinder lines when removing the gearbox.

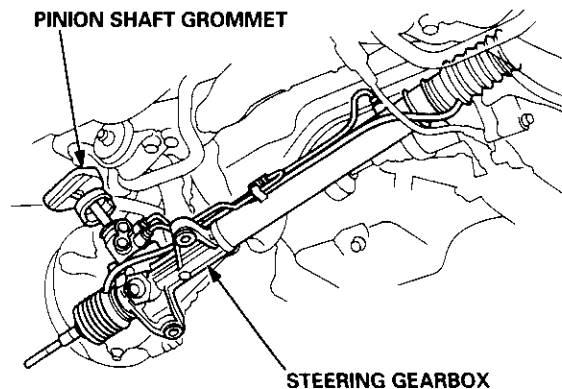




Disassembly

Steering Rack Disassembly


NOTE:

- Before disassemble the gearbox, wash it off with solvent and a brush.
- Do not dip seals and O-rings in solvent.

1. Remove the steering gearbox (see page 17-47).
2. Remove the tie-rod end and locknut.
3. Remove air tube and clips.

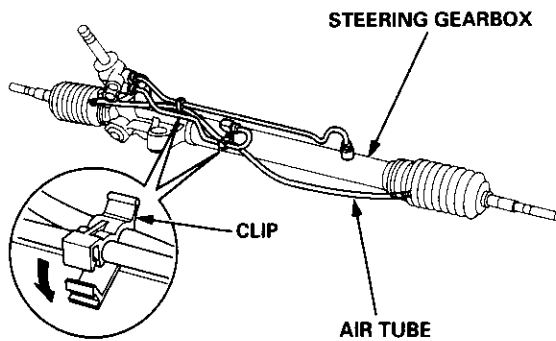


4. Remove the boot bands and tie-rod clips. Pull the boots away from the ends of the gearbox.

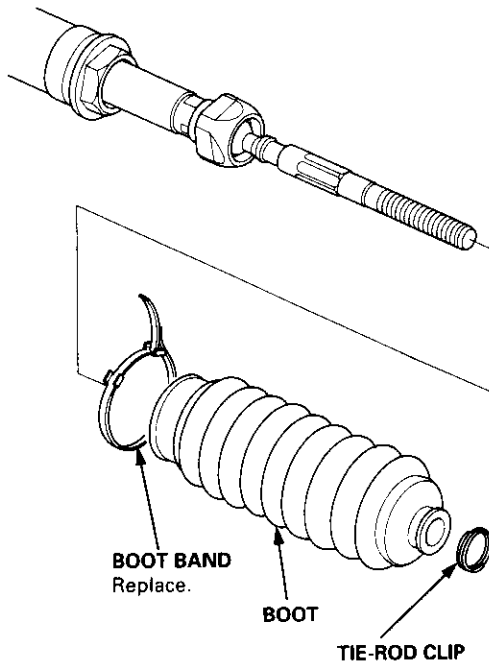


5. Hold the steering rack with a wrench ('98 model: left end only), and unscrew the rack end with another wrench.

CAUTION: Be careful not to damage the rack surface with the wrench.

NOTE: '96 - '97 model is shown.

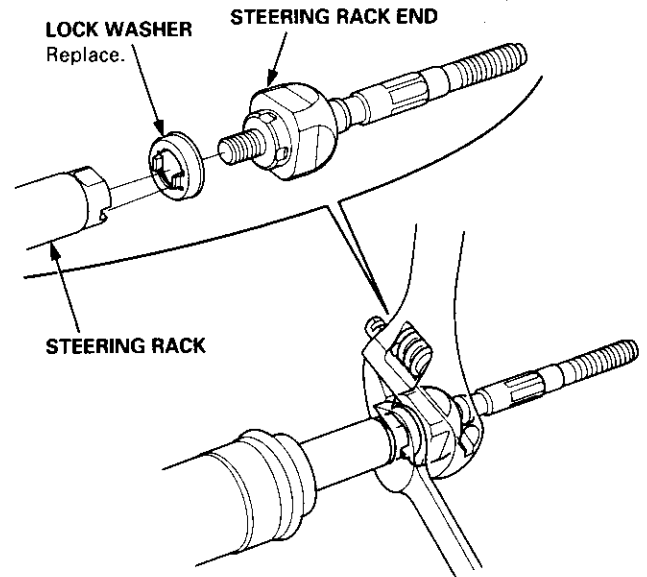

6. Loosen the locknut, then remove the rack guide screw ('98 model) and O-ring ('96 - '97 model only).
7. Remove the spring and the rack guide from the gear housing.

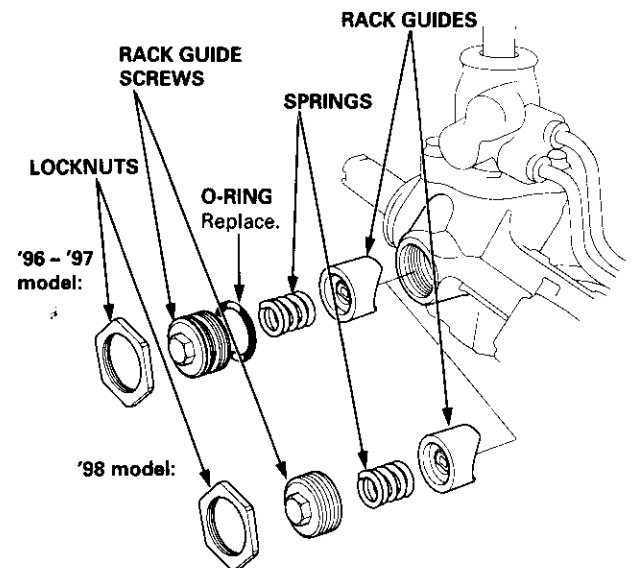


(cont'd)


Steering Gearbox

Disassembly (cont'd)

8. Remove cylinder lines A and B from the gearbox.

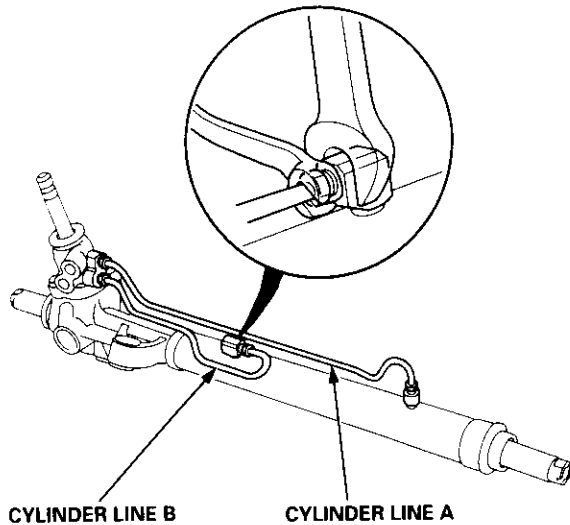


9. Drain the fluid from the cylinder fittings by slowly moving the steering rack back and forth.
10. Remove the two flange bolts, then remove the valve body unit from the gearbox. (See page 17-52 for valve body unit disassembly.)

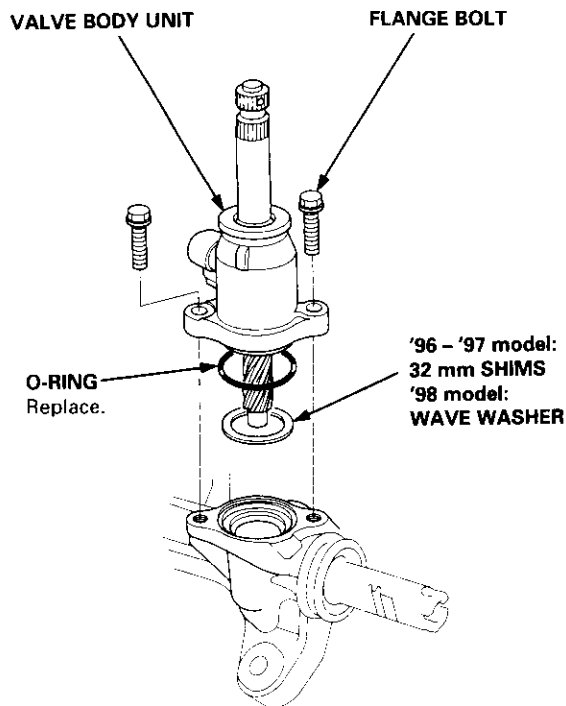


11. Drill a 3 mm (0.12 in) diameter hole approximately 2.5 - 3.0 mm (0.10 - 0.12 in) in depth in the staked point on the cylinder.

CAUTION:

- Do not allow metal shavings to enter the cylinder housing.
- After removing the cylinder end, remove any burrs at the staked point.

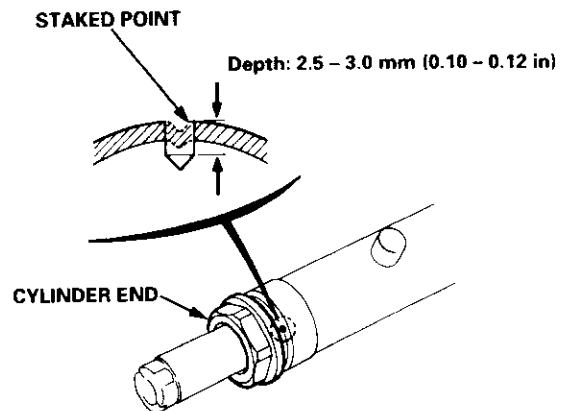

12. Hold the steering gearbox using a C-clamp as shown.

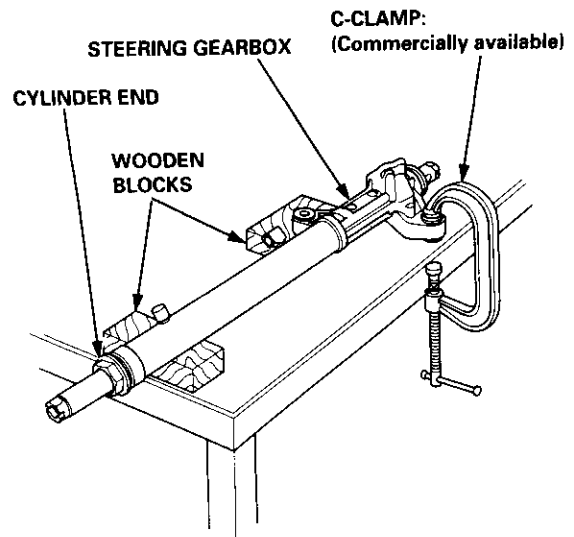


13. Loosen and remove the cylinder end.




- Assemble a 12 x 1.25 mm flange nut onto a 12 x 175 mm grade 10 flange bolt as shown.

NOTE: Wrap the flange portion of the bolt with vinyl tape to protect the cylinder.

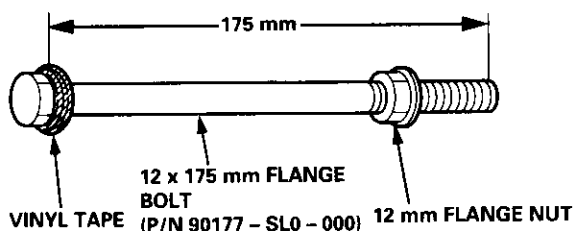

- Install the flange bolt into the end of the steering rack until it bottoms in the hole, then back the flange bolt out 1/4 turn. Hold the flange bolt, and tighten the flange nut against the rack by hand.
- Install the bearing separator on the gearbox housing as shown.

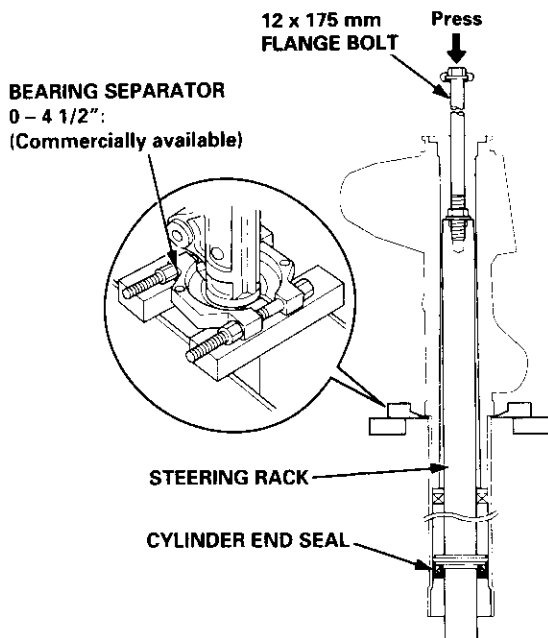


- Set the gearbox in a press so the gear housing point upward, then press the cylinder end seal and steering rack out of the gearbox.

NOTE: Hold the steering rack to keep it from falling when pressed clear.

CAUTION:

- Be careful not damage to inner surface of the cylinder housing with the flange bolt.
- Do not place your fingers under the steering rack.

- Remove the 12 mm bolt and nut from the steering rack.
- Remove the cylinder end seal from the steering rack.

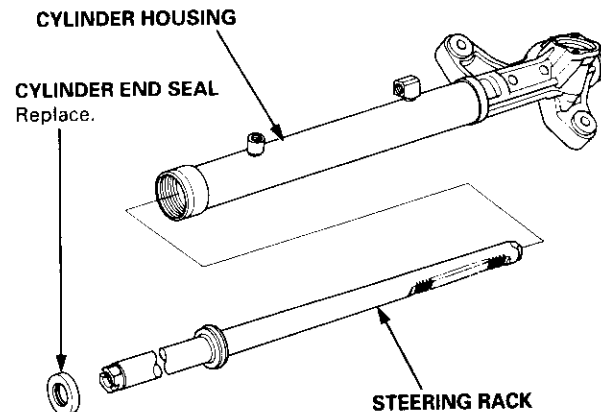


- Insert a 24" long, 3/8" drive extension and the special tool into the cylinder from the gearbox side.
- NOTE: Make sure that the special tool is securely positioned on the backup ring edges.

CAUTION: Be careful not damage to inner surface of the cylinder housing with the special tool.

- Set the gearbox in a press, then press out the cylinder end seal and backup ring from the gearbox.

CAUTION:

- Keep the tool straight to avoid damaging the cylinder wall. Check the tool angle, and correct it if necessary, when removing the cylinder end seal.
- Use a press to remove the cylinder end seal. Do not try to remove the seal by striking the tool. It will break the backup ring, and the cylinder end seal will remain in the gearbox.

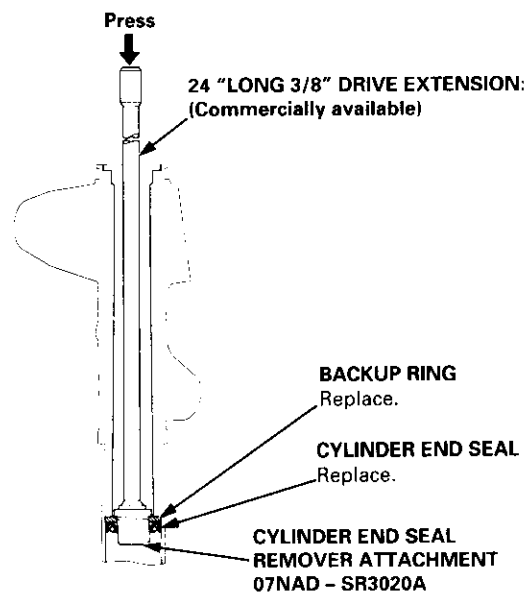


(cont'd)

Steering Gearbox

Disassembly (cont'd)


22. Carefully pry the piston seal ring and O-ring off the piston rack.

CAUTION: Be careful not to damage the inside of seal ring groove and piston edges when removing the seal ring.

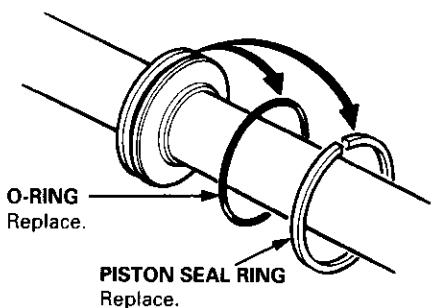

Valve Body Unit Disassembly

23. Before removing the valve housing, apply vinyl tape to splines of the pinion shaft.
24. Separate the valve housing from the pinion shaft/valve using a press.

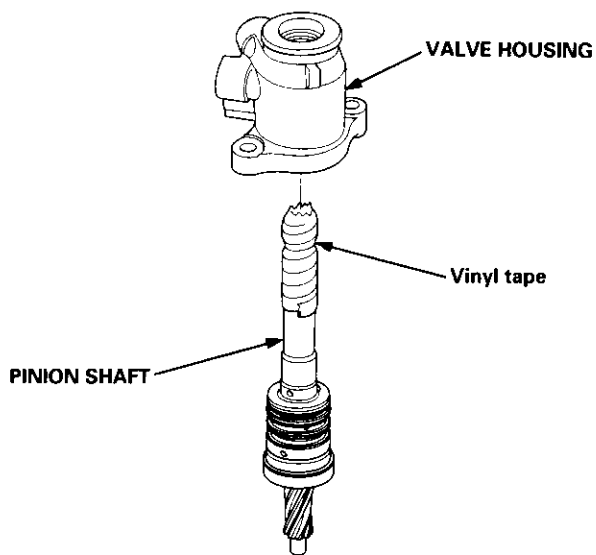


25. Check the inner wall of the valve housing where the seal ring slides with your finger. If there is a step in the wall, the valve housing is worn. Replace the valve housing.

NOTE:

- There may be the sliding marks from the seal ring on the wall of the valve housing. Replace the valve housing only if the wall is stepped.
- When the valve housing is replaced, install new shim(s) on the bearing surface of the housing to adjust the thickness.


Check the inside of valve housing whether the wall is stepped.

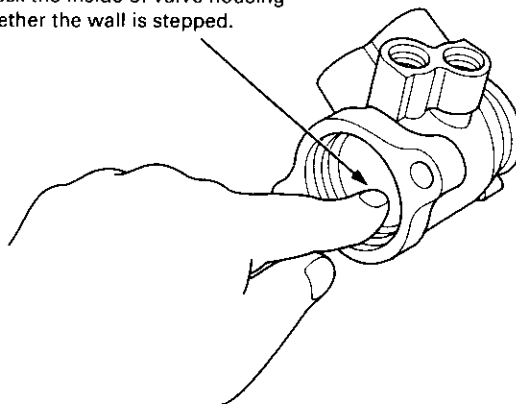




26. Check for wear, burrs and other damage to the edges of the grooves in the sleeve.

NOTE: The pinion shaft and sleeve are a precision matched set. If either the pinion shaft or sleeve must be replaced, replace both parts as a set.

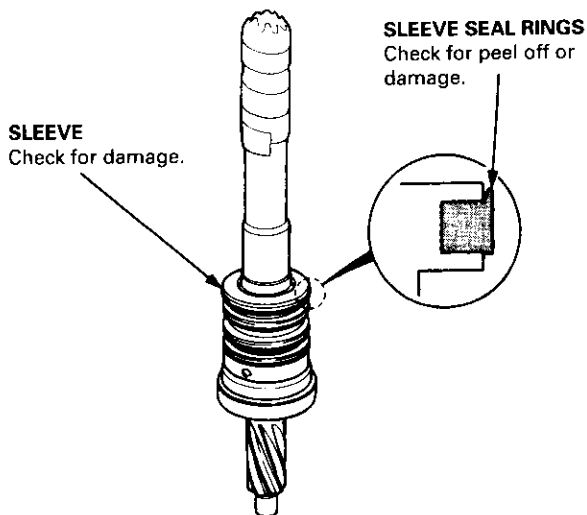


27. Remove the circlip and pinion shaft sleeve from the pinion shaft.

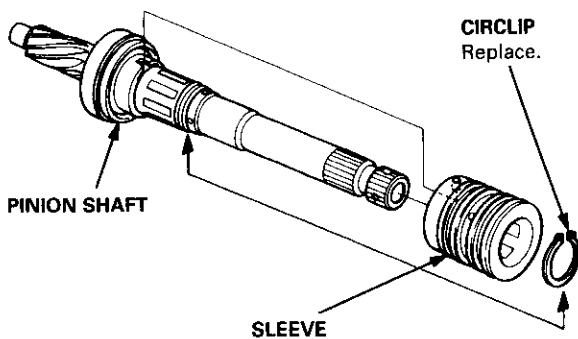


28. Using a cutter or an equivalent tool, cut and remove the four seal rings from the sleeve.

CAUTION: Be careful not to damage the edges of the sleeve grooves and outer surface when removing the seal rings.

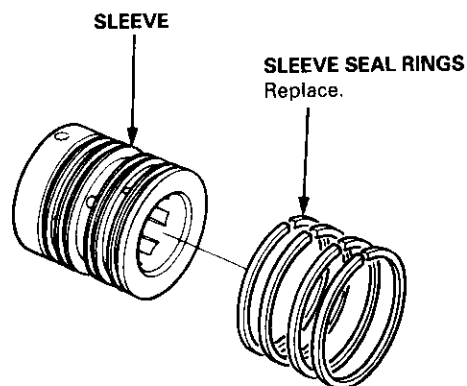

29. Using a cutter or an equivalent tool, cut the valve seal ring and O-ring at the groove the pinion shaft. Remove the valve seal ring and O-ring.

CAUTION: Be careful not to damage the edges of the pinion shaft groove and outer surface when removing the valve seal ring and O-ring.

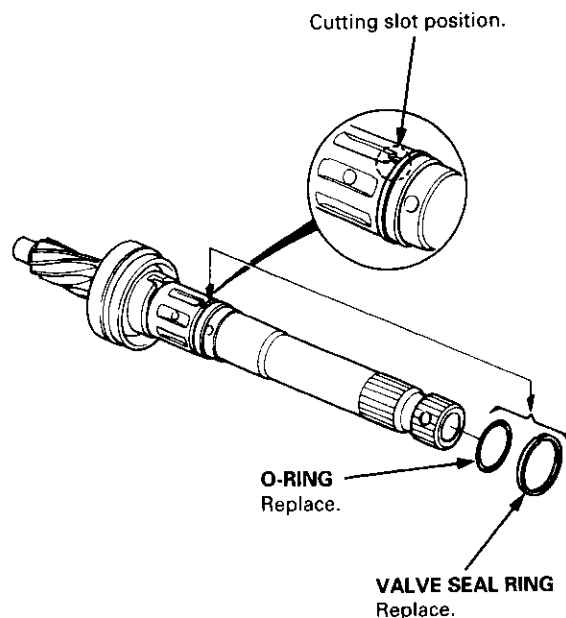

(cont'd)


Steering Gearbox

Disassembly (cont'd)

30. Remove the valve oil seal and backup ring ('96 - '97 model) or wave washer ('98 model) from the pinion shaft.


NOTE:

- Inspect the ball bearing by rotating the outer race slowly. If there is any excessive play, replace the pinion shaft and sleeve as an assembly.
- The pinion shaft and sleeve are a precise fit; do not intermix old and new pinion shafts and sleeves.

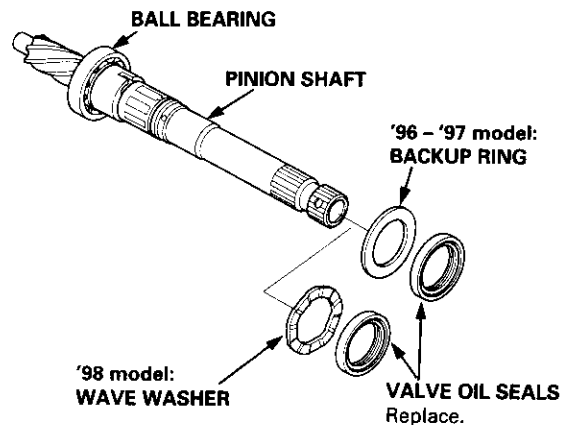

31. Press the valve oil seal and roller bearing ('96 - '97 model) or bushing ('98 model) out of the valve housing using a hydraulic press and special tool shown below.

NOTE: Do not use a hammer; it will damage the special tool.

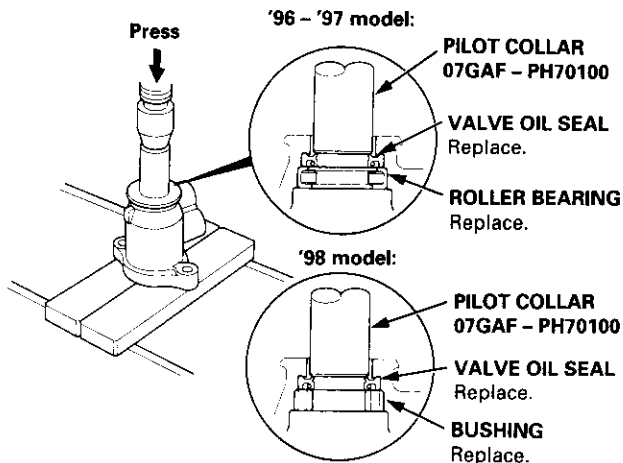




Reassembly

NOTE:

- Clean the disassembled parts with a solvent, and dry them with compressed air. Do not dip the rubber parts in a solvent.
- Always replace the O-rings and rubber seals with new ones before assembly.
- Apply the recommended power steering fluid to the parts indicated in the assembly procedures.
- Do not allow dust, dirt, or other foreign materials to enter the power steering system.
- Use the appropriate special tools where necessary.

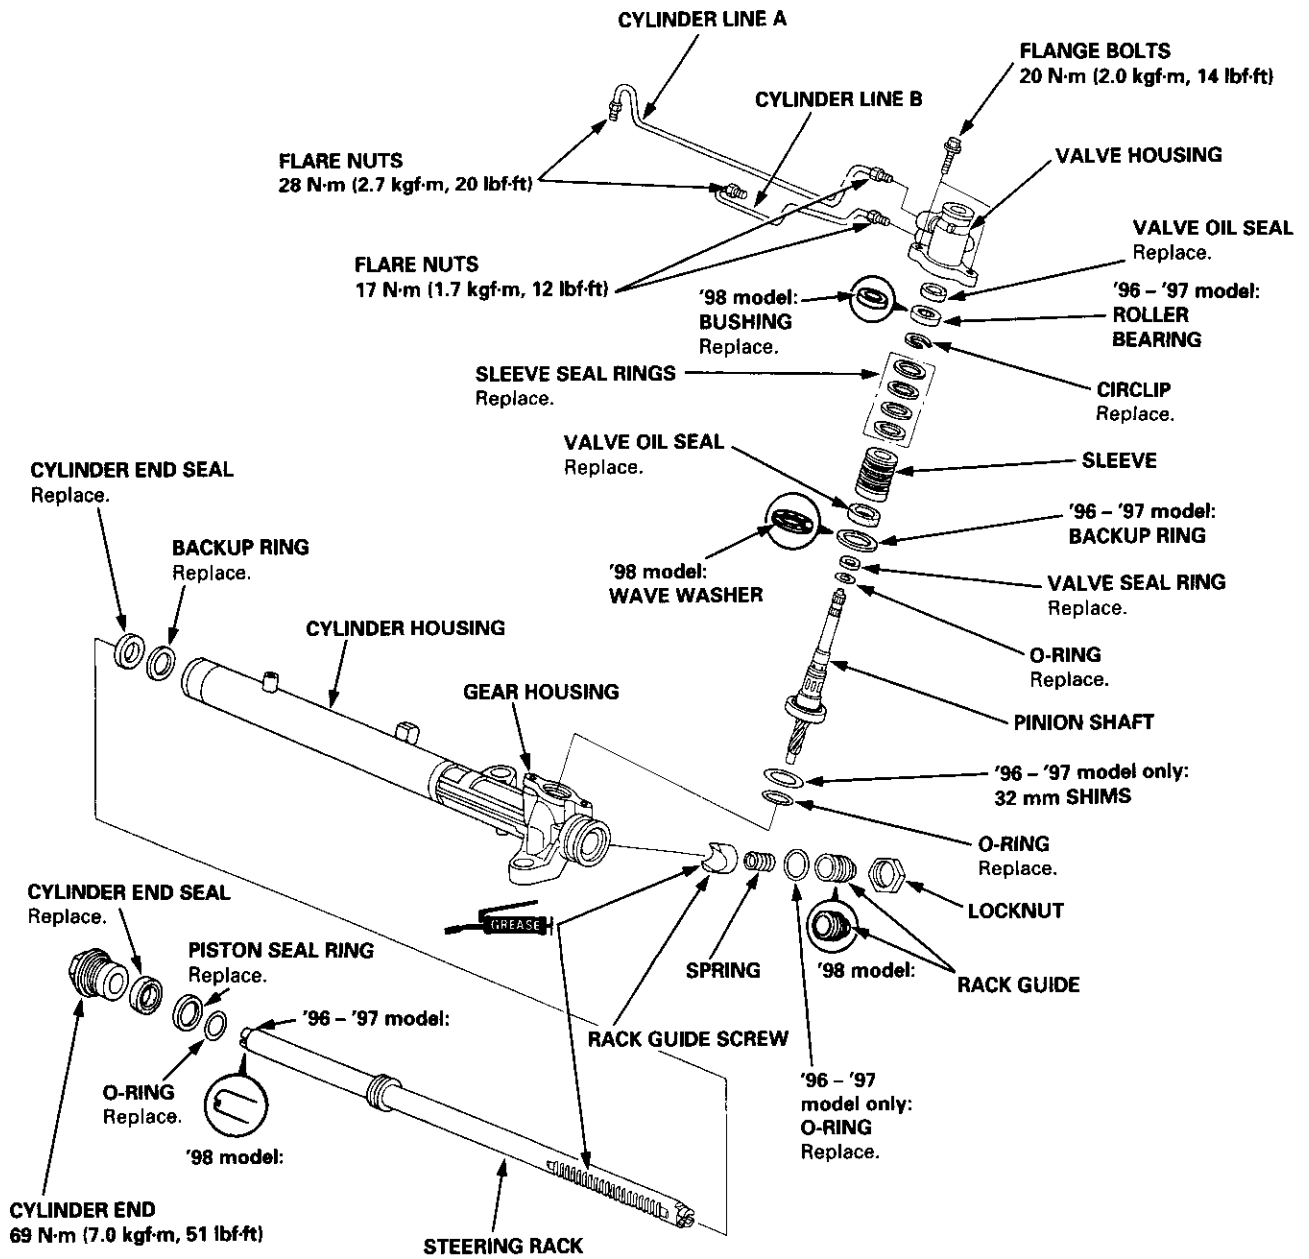


(cont'd)

Steering Gearbox

Reassembly (cont'd)


Valve Body Unit Reassembly

1. Apply vinyl tape to the stepped portion of the pinion shaft, and coat the surface of the vinyl tape with the power steering fluid.
2. Install the backup ring ('96 - '97 model) or wave washer ('98 model) with its tapered side as shown below.
3. Coat the inside surface of the new valve oil seal with power steering fluid.
4. Slide the valve oil seal over the pinion shaft, being careful not to damage the sealing lip.


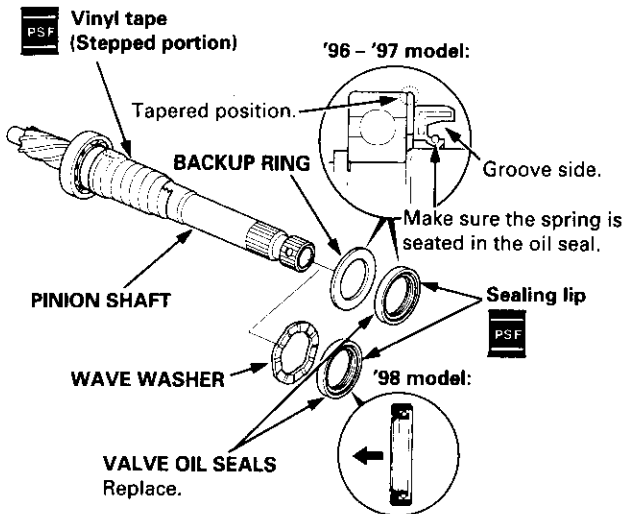


CAUTION: Install the valve oil seal with its grooved side facing opposite the bearing.

5. Apply vinyl tape to the splines and stepped portion of the shaft, and coat the surface of the vinyl tape with the power steering fluid.
6. Fit the new O-ring in the groove of the pinion shaft. Then slide the new valve seal ring over the shaft and the groove in on the pinion shaft.
7. Remove the vinyl tape from the pinion shaft.

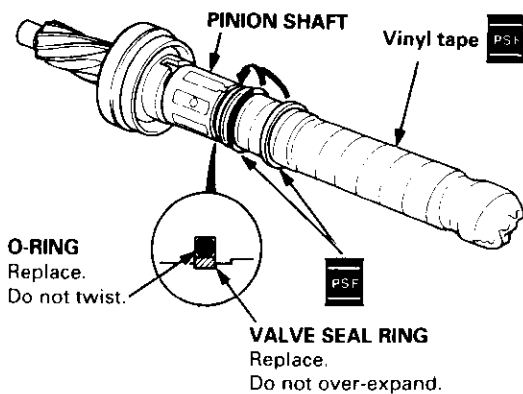

8. Apply power steering fluid to the surface of the valve seal ring that was installed on the pinion shaft.
9. Apply power steering fluid to the inside of the special tool. Set the larger diameter end of the special tool over the valve seal ring.
10. Move the special tool up and down several times to make the valve seal ring fit in the pinion shaft.
11. Remove the special tool.
12. Turn the special tool over, and set the smaller diameter end of the special tool over the valve seal ring. Move the special tool up and down several times to make the valve seal ring fit snugly in the pinion shaft.

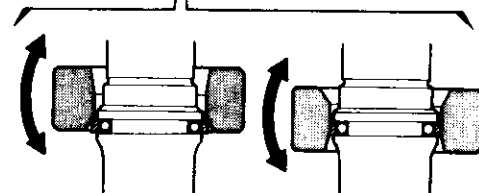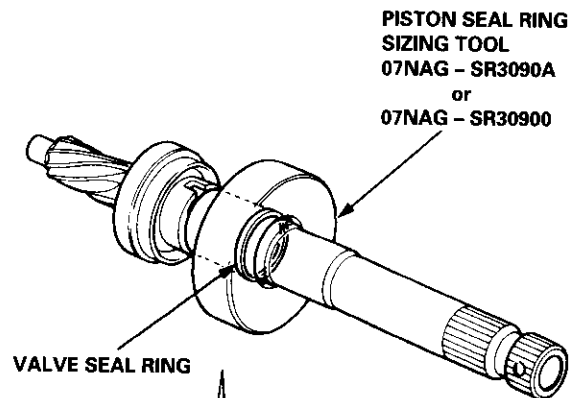

Use the larger diameter end of the special tool first to make the valve seal ring fit in the pinion shaft.

Make the valve seal ring fit snugly in the pinion shaft using the other end (smaller diameter end) of the special tool.




- Apply power steering fluid to the surface of the special tool. Set the new seal rings over the special tool from the smaller diameter end of the tool, and expand the seal rings. Do two rings at a time from each end of the sleeve.

NOTE:

- Do not over-expand the seal ring. Install the resin seal rings with care so as not to damage them. After installation, be sure to contract the seal rings using the special tool (sizing tool).
- There are two types of sleeve seal rings: black and brown. Do not mix the different types of sleeve seal rings as they are not compatible.


- Set the special tool in the grooves in the sleeve, and set each ring in each groove securely.

NOTE: After installation, compress the seal rings with your fingers temporarily.

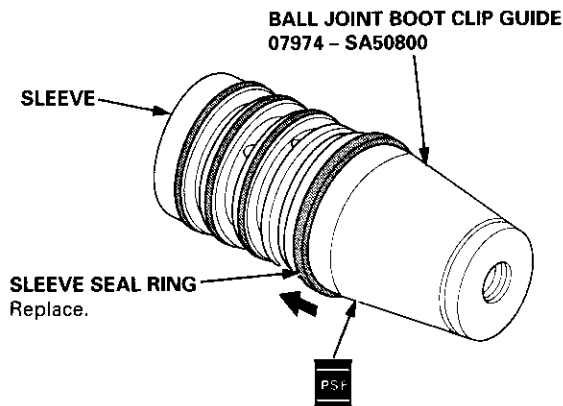

- Apply power steering fluid to the seal rings on the sleeve, and to the entire inside surface of the special tool.
- Insert the sleeve into the special tool slowly.
- Move the sleeve each direction several times to make the seal rings snugly fit in the sleeve.


NOTE: Be sure that the seal rings are not turned up.

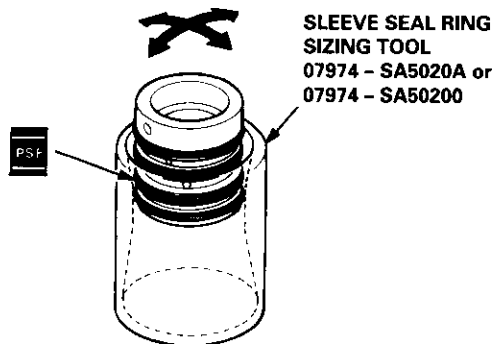

- Apply power steering fluid to the surface of the pinion shaft. Assemble the sleeve over the pinion shaft by aligning the locating pin on the inside of the sleeve with the cutout in the shaft. Then install the new circlip securely in the pinion shaft groove.


NOTE:

- Be careful not to damage the valve seal ring when inserting the sleeve.
- Install the circlip with its radiused side toward the sleeve.

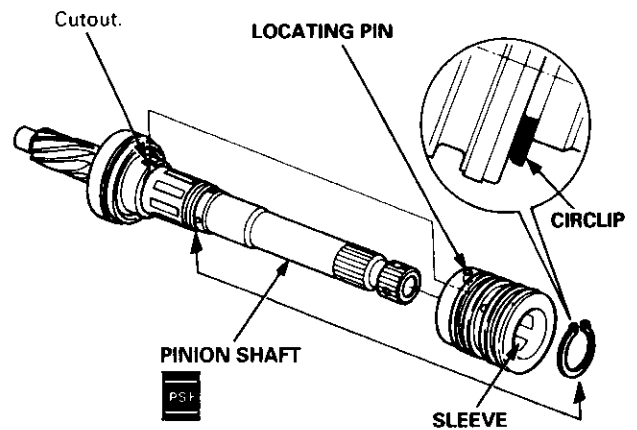

- Apply power steering fluid to the seal ring lip of the valve oil seal, then install the seal in the valve housing using a hydraulic press and special tools as shown.

CAUTION: Install the valve oil seal with its grooved side facing the tool.

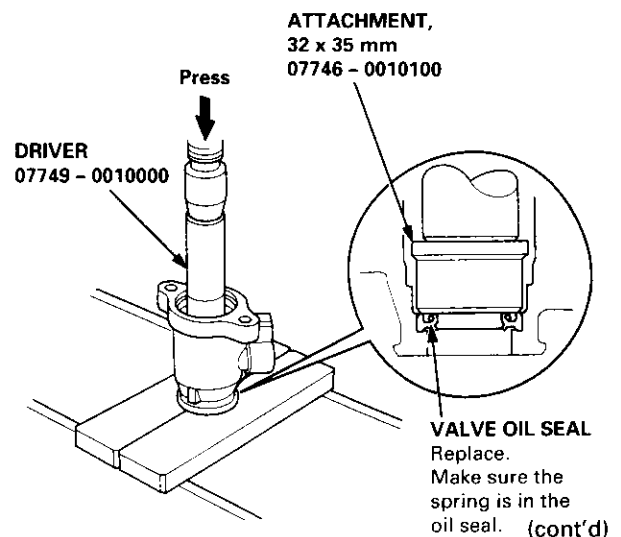


Steering Gearbox


Reassembly (cont'd)

20. Press the new bearing ('96 - '97 model) or new bushing ('98 model) into the valve housing using a hydraulic press and special tool as shown.

NOTE: Place the roller bearing ('96 - '97 model) or bushing ('98 model) on the valve housing with the stamped letter facing ('96 - '97 model only) up towards the valve side.

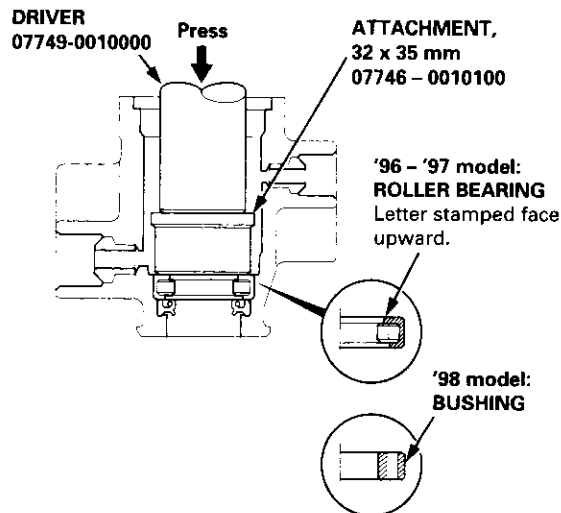

21. Apply vinyl tape to the pinion shaft, then coat the vinyl tape with power steering fluid.

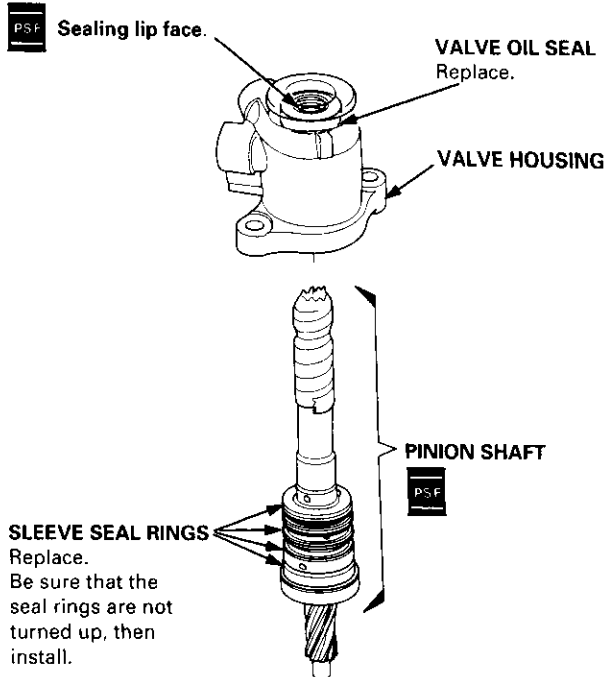


22. Insert the pinion shaft into the valve housing.

CAUTION: Be careful not to damage the valve seal rings.

23. Remove the vinyl tape from the pinion shaft.

24. Press the pinion shaft/sleeve using a hydraulic press as shown.

NOTE: Check that the pinion shaft/sleeve turns smoothly by turning the pinion shaft.

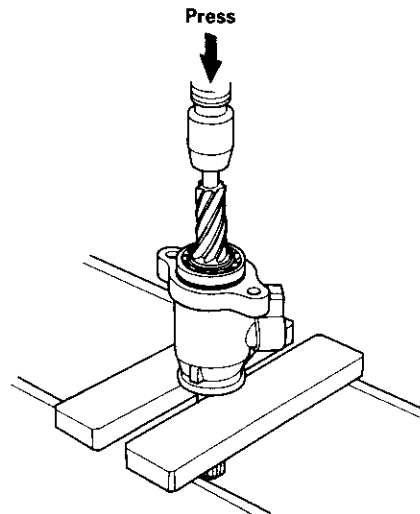




Steering Rack Reassembly


25. Coat the piston seal ring guide with power steering fluid, then slide it onto the rack, big end first.
26. Position the new O-ring and new piston seal ring on the special tool, then slide them down toward the big end of the tool.

NOTE:


- Do not over expand the resin seal rings. Install the resin seal rings with care so as not to damage them. After installation, be sure to contract the seal ring using the special tool (sizing tool).
 - Replace the piston's O-ring and seal ring as a set.
27. Pull the O-ring off into the piston groove, then pull the piston seal ring off into the piston groove on top of the O-ring.

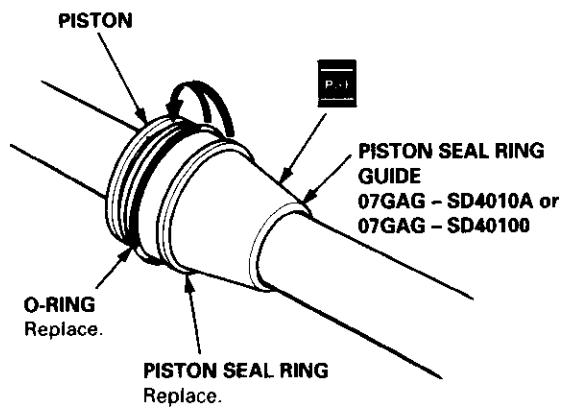


28. Coat the piston seal ring and the inside of the special tool with power steering fluid.
29. Carefully slide the tool onto the rack and over the piston seal ring.
30. Move the special tool back and forth several times to make the piston seal ring fit snugly in the piston.

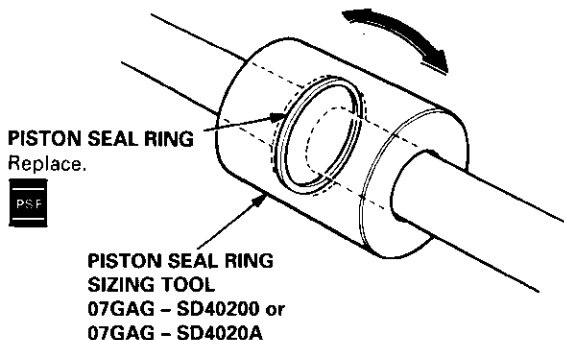

31. Wrap vinyl tape around the rack teeth and rack end edges, then coat the surface of the tape with the power steering fluid.
NOTE: Make sure that the vinyl tape is wrapped carefully so that there is no stepped portion.

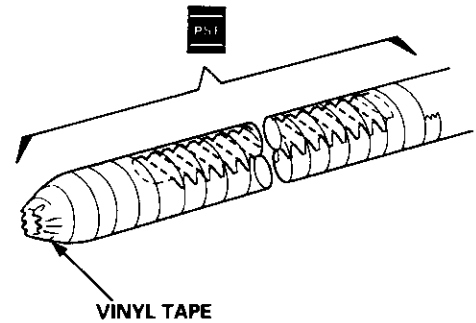

32. Coat the inside surface of the new cylinder end seal with power steering fluid.
33. Install the cylinder end seal onto the steering rack with its grooved side toward the piston.
CAUTION: When installing the cylinder end seal, be careful not damage the sealing lip face of the seal with the edges or teeth of the steering rack.

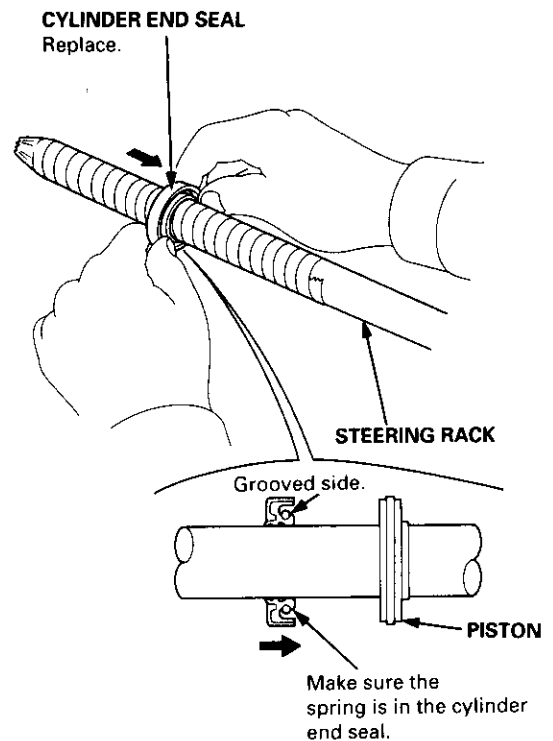


34. Remove the vinyl tape from the steering rack.
NOTE: Remove any residue of tape adhesive.

(cont'd)

Steering Gearbox


Reassembly (cont'd)

35. Install the new backup ring on the steering rack, then place the cylinder end seal to piston.

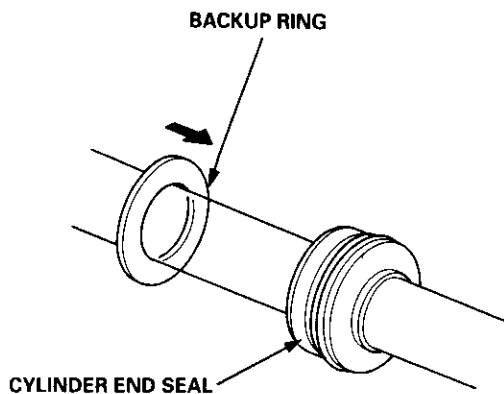

36. Grease the steering rack teeth, then insert the steering rack into the gear housing.


CAUTION: Be careful not to damage to inner surface of the cylinder housing with the rack edges.

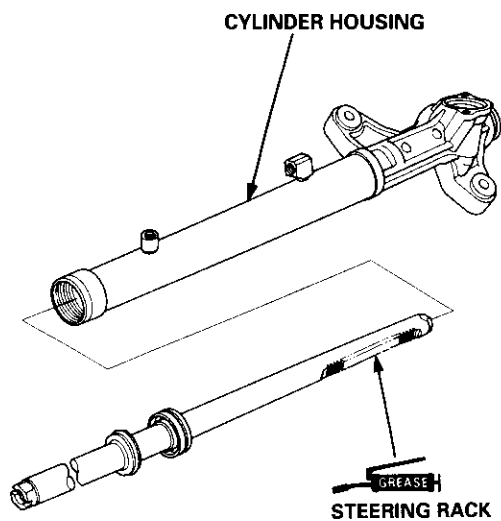

37. Install the flange bolt into the end of the steering rack until it bottoms in the hole, then back the flange bolt out 1/4 turn. Hold the flange bolt and tighten the flange nut against the rack by hand.

38. Install the cylinder end seal into the bottom of the cylinder by pressing on the bolt with a press as shown.


CAUTION: Do not push on the bolt with excessive force as it may damage the cylinder end seal.

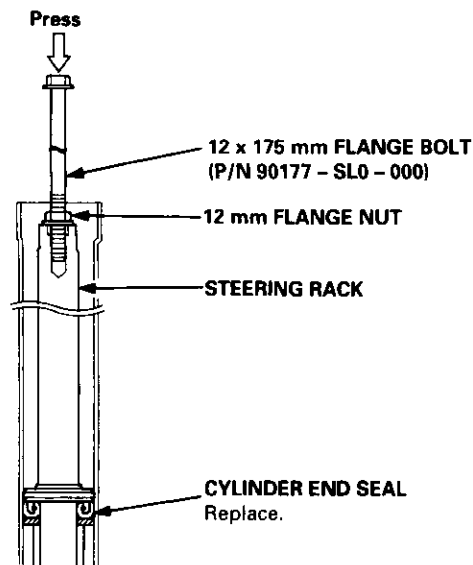

39. Remove the flange bolt, and center the steering rack.

40. Wrap vinyl tape around the rack end edges, and coat the surface of the tape with the power steering fluid.


NOTE: Make sure that the vinyl tape is wrapped carefully so that there is no stepped portion.

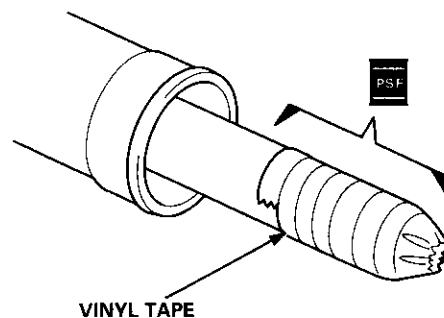




41. Coat the inside surface of the new cylinder end seal with power steering fluid.
42. Install the cylinder end seal onto the steering rack with its grooved side toward the piston.
43. Push in the cylinder end seal with your finger.

CAUTION: When installing the cylinder end seal, be careful not damage the sealing face of the seal with the threads and burrs at the staked position of the cylinder housing.

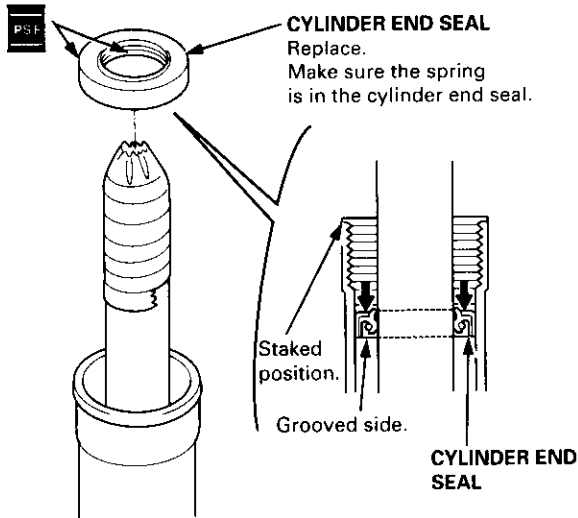


44. Remove the vinyl tape from the steering rack.
- NOTE: Remove any residue of tape adhesive.**
45. Hold the steering gearbox using a C-clamp as shown.

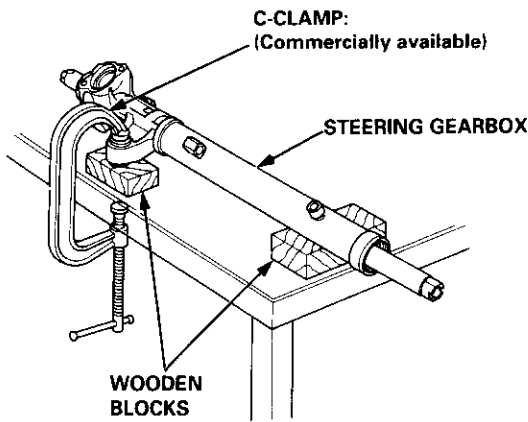

46. Coat the inside surface of the cylinder end with power steering fluid, then install the cylinder end by screwing it into the cylinder housing.
47. Remove the C-clamp from the steering gearbox.
48. After tightening the cylinder end, stake the point of the cylinder housing shown below. For '98 model go to step 51.

NOTE: Stake the cylinder in the position opposite from where the stake was removed during disassembly.

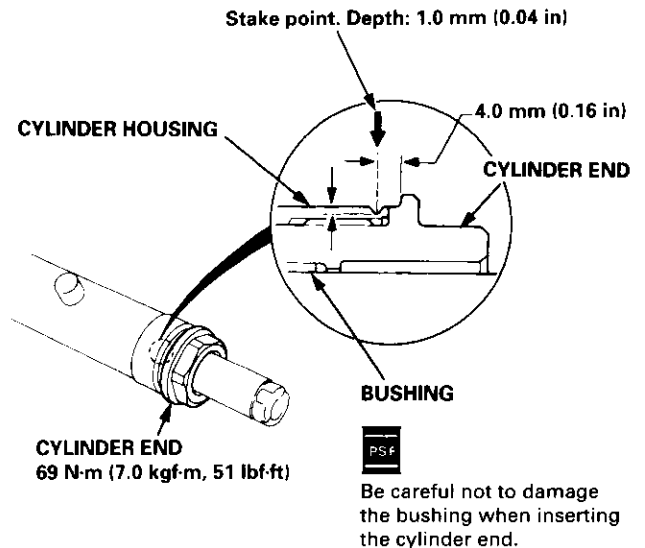

49. Select the 32 mm shim(s) ('96 - '97 model only).

NOTE: Only reinstall the original 32 mm shim(s) when the steering gearbox is reassembled without replacing the pinion shaft, valve housing, and gearbox housing with new ones.

If the pinion shaft, valve housing, and gearbox housing are replaced, select the new shim(s) as follows.

Shim selection:

- a. Set the four 32 mm shims on the bearing surface of the gearbox housing. Total thickness of the four shims should equal no more than 0.70 mm.
Shim set: four 32 mm shims (Thickness: 0.10 mm, 0.15 mm, 0.20 mm, 0.25 mm respectively)


CAUTION: The four 32 mm shims do not have thickness identification marks. Measure the thickness of each shim using a micrometer, and mark the shim for identification.

(cont'd)

Steering Gearbox


Reassembly (cont'd)

- b. Install the valve body unit on the gearbox, and tighten the flange bolts to the specified torque.

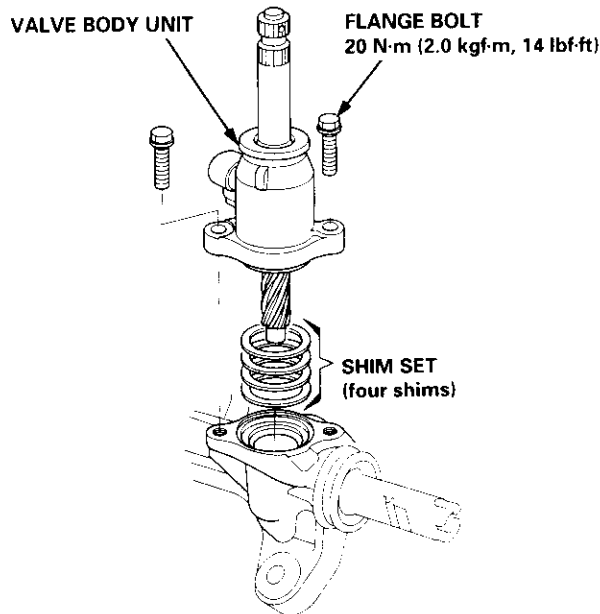

- c. Measure the clearance between the gearbox and valve body unit using a feeler gauge as shown.

NOTE: Measure the clearance at the point midway between the two mounting bolts.

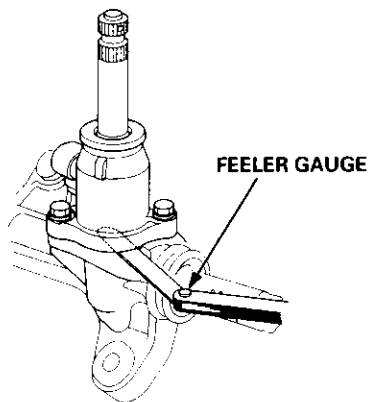

- d. Determine the required thickness of the 32 mm shims by subtracting the clearance obtained in the step "c" from the total thickness of the four shims.
(Total thickness of the 4 shims) - (Clearance) = Required thickness of the shims

NOTE: Select the shims so that the total thickness is close to, but less than, the required thickness.

Example:


Measurement is 0.28 mm (0.011 in):

$$0.70 - 0.28 = 0.42 \text{ mm } (0.028 - 0.011 = 0.017 \text{ in})$$

The selected shims should be 0.25 mm (0.010 in) and 0.15 mm (0.006 in) in thickness.

If the required shim thickness is 0.10 mm or less, no shims are necessary.

50. Set the selected 32 mm shims on the bearing surface of the gearbox housing.

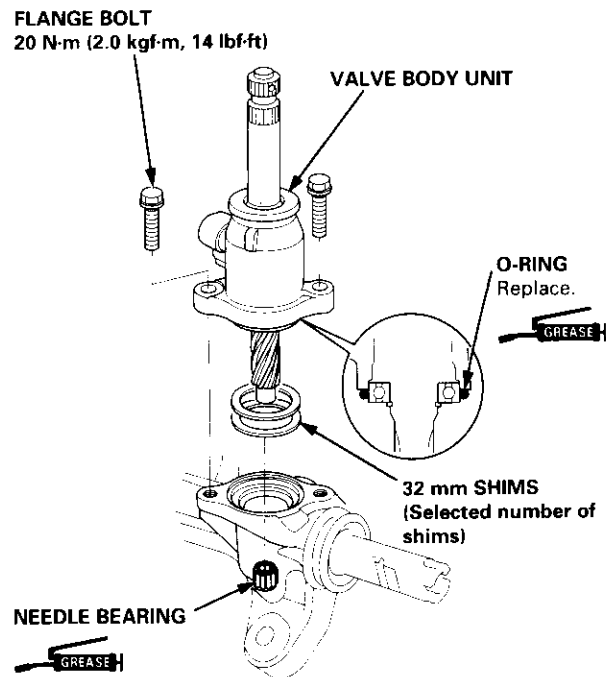

51. Coat the new O-ring with grease, and carefully fit it on the valve housing.

52. Apply grease to the needle bearing in the gearbox housing.

53. Install the valve body unit on the gearbox housing by engaging the gears.

NOTE: Note the valve body unit installation position (direction of line connection).


54. Tighten the flange bolts to the specified torque.



55. Install the cylinder lines A and B.

NOTE:

- Clean the joints of the cylinder lines A and B thoroughly. The joints must be free of foreign material.
- Install the cylinder lines A and B by tightening the flare nuts by hand first, then tighten the flare nuts to the specified torque.

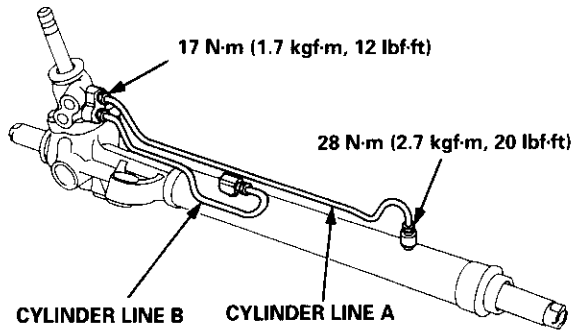

56. Grease the sliding surface of the rack guide, and install it onto the gear housing.

57. '96 - '97 model:

Apply a thin coat of grease to the new O-ring, and install it on the rack guide screw.


'98 model:

Remove the old sealant off of the threaded section, then apply new sealant to the first three threads.

58. Install the spring, rack guide screw and locknut on the gear housing.

59. Adjust the rack guide screw (see page 17-33).

NOTE: After adjusting, check that the rack moves smoothly by sliding the rack right and left.

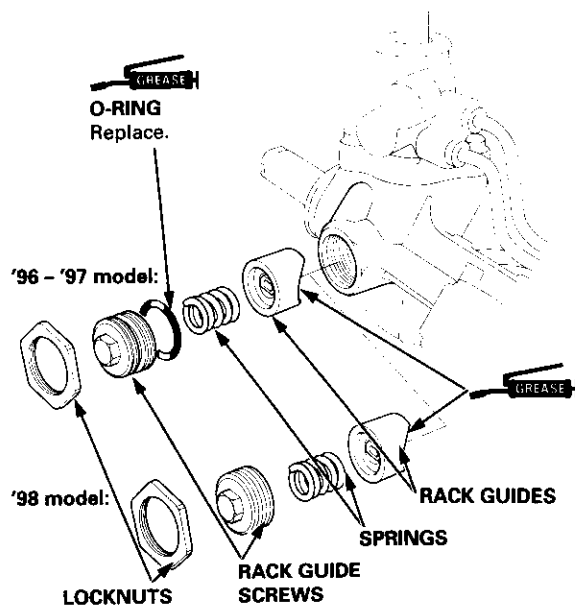


60. Install the new lockwasher in the groove in the steering rack.

61. Screw each rack ends into the rack.

62. Hold the steering rack with a wrench ('98 model: left end only), and tighten the rack ends.


CAUTION: Be careful not to damage the rack surface with the wrench.

NOTE: '96 - '97 model is shown.

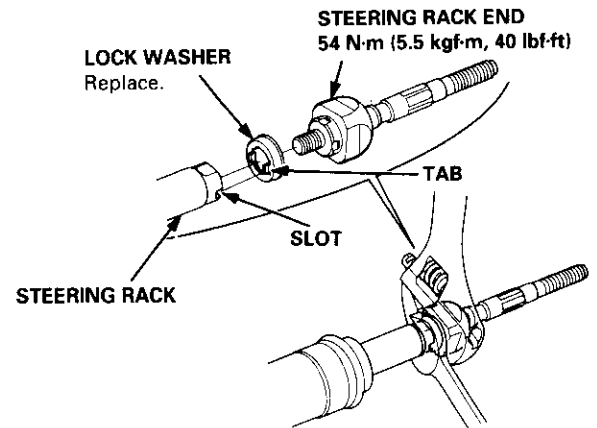

63. After tightening the rack ends, stake the four sections of lock washer with a drift and a mallet.

- Place the wood block on the press table, then set the lock washer section of the rack end on the wood block securely.
- Be sure the tool is aligned with the flat sections of the steering rack end before pressing.
- Stake the lock washer in the center of the flat section of the steering rack end.

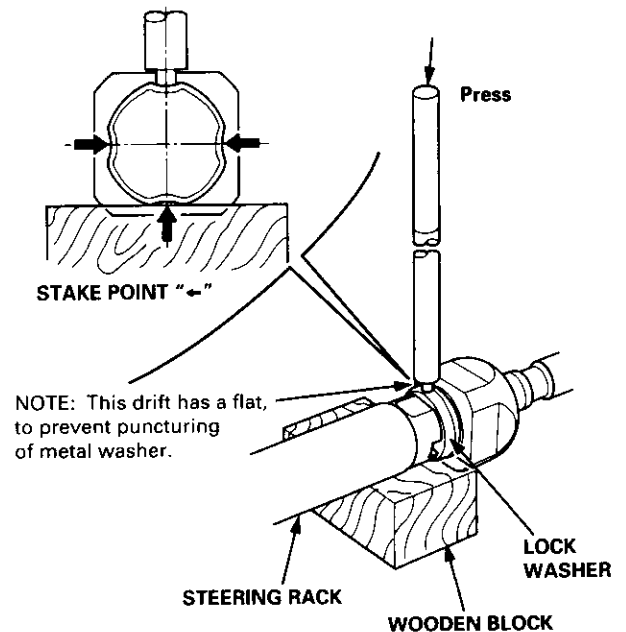


(cont'd)

Steering Gearbox

Reassembly (cont'd)


64. Apply grease to the circumference of the rack end housing.

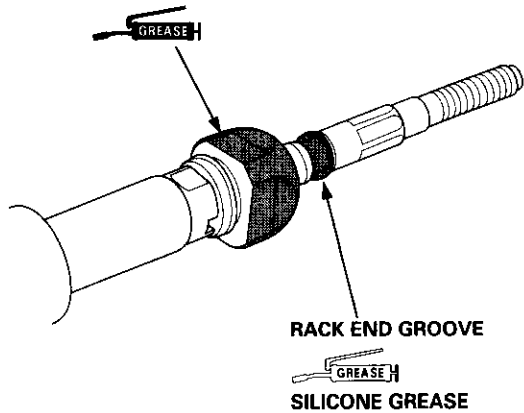


65. Apply a light coat of silicone grease to the boot grooves on the rack ends.

66. Install the boots in the rack end with the tie-rod clips.

NOTE: Install the boots with the rack in the straight ahead position (right and left tie-rods are equal in length).

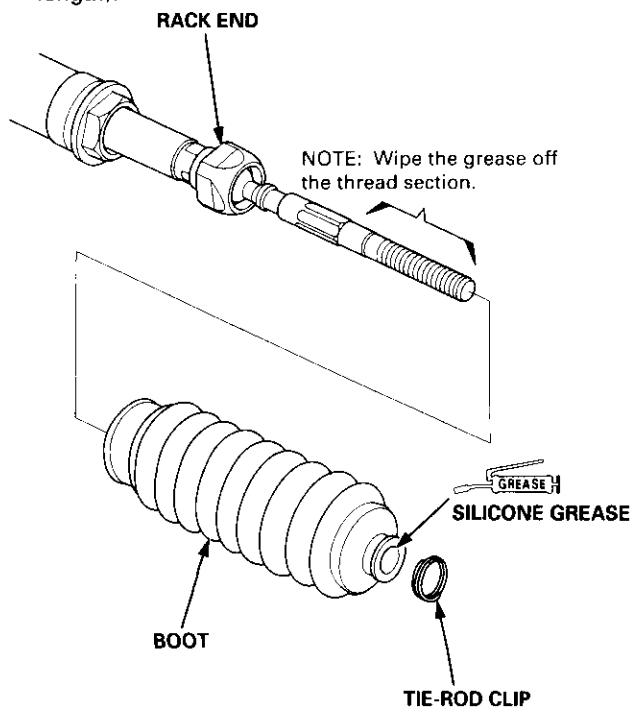


67. Adjust the air hose fitting position of the boots by turning it as shown below.

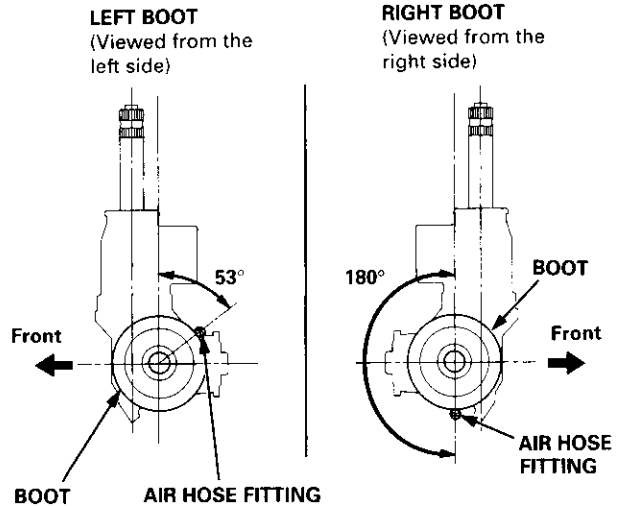

68. Install new boot bands on the boot, and bend both sets of locking tabs.

CAUTION: Stake the band locking tabs firmly.

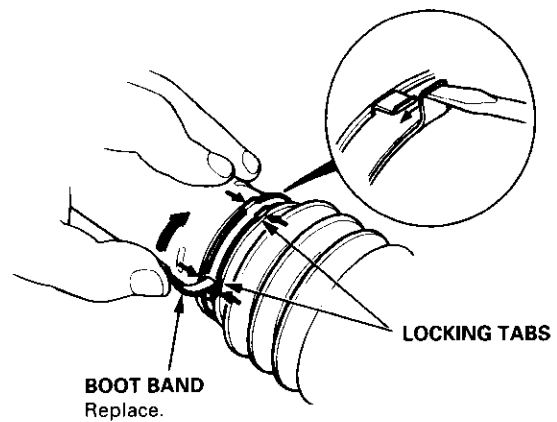


69. Lightly tap on the doubled-over portions to reduce their height.

70. Slide the rack right and left to be certain that the boots are not deformed or twisted.



71. Connect the air tube between the right and left boot.
72. Install the clips on the cylinder lines, then clamp the air tube with the clips.

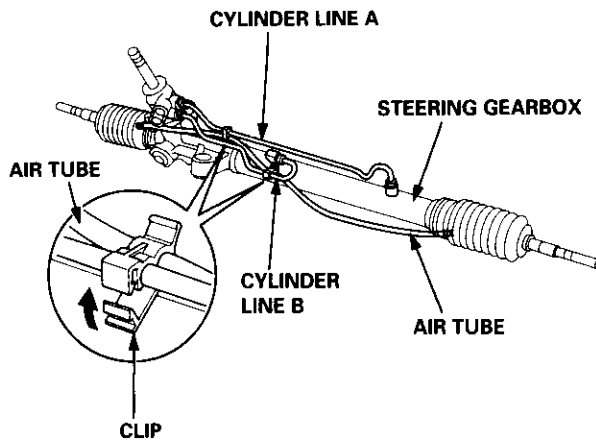


Installation


CAUTION: Be careful not to bend or damage the feed line and cylinder lines when installing the gearbox.

1. Before installing the gearbox, slide the rack all the way to right.
2. Install the mounting cushion on the steering gearbox.
3. Install the pinion shaft grommet, then insert the pinion shaft up through the bulkhead.

NOTE: Align the notch in the pinion shaft grommet with the tab on the valve housing.

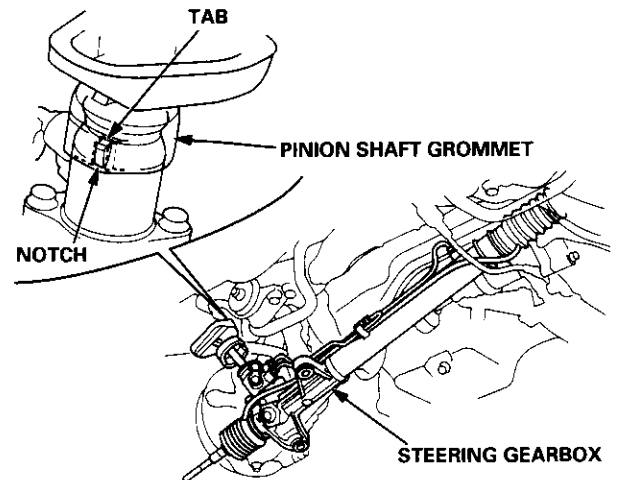

4. Install the mounting bracket over the mounting cushion, then install two gearbox mounting bolts.

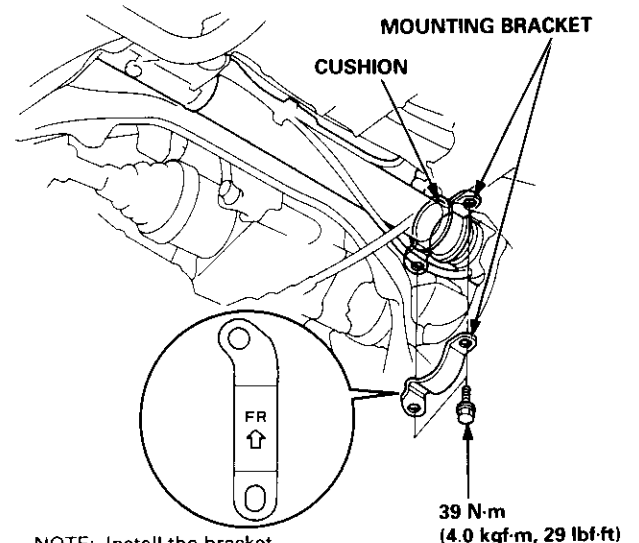

NOTE: Install the bracket with the arrow pointing toward the front.

(cont'd)


Steering Gearbox

Installation (cont'd)

5. Install the stiffener plate with the two gearbox mounting bolts and stiffener plate attaching bolts.


CAUTION: Be sure the air tube is not caught or pinched by stiffener plate.

NOTE: Install the bolts loosely first, then tighten them securely.

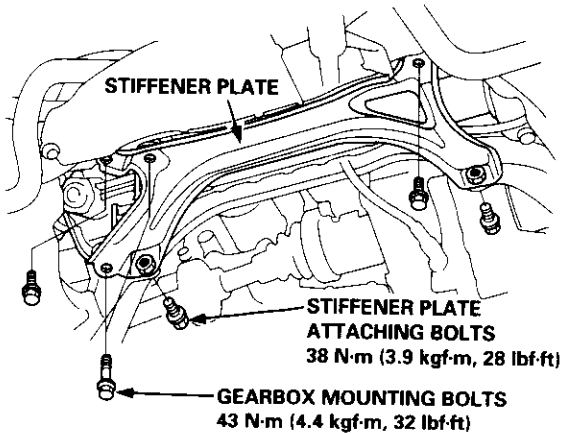

6. Install the return hose joint by tightening the 16 mm flare nut.
7. Connect the return hose securely, and tighten the adjustable hose clamp from the engine compartment.
8. Connect the feed line and tighten the 14 mm flare nut.


NOTE: Make sure that there is no interference between the fluid lines, the rear beam or any other parts.

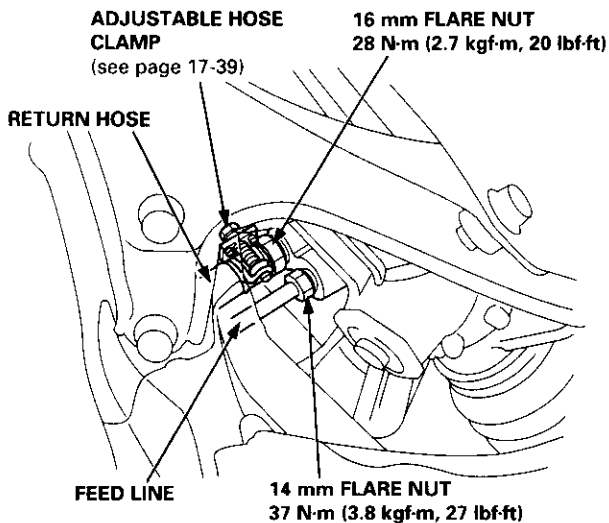

9. Center the steering rack within its stroke.
10. Slip the lower end of the steering joint onto the pinion shaft (line up the bolt hole with the groove around the shaft), and tighten the lower bolt.

NOTE:


- Connect the steering shaft and pinion with the cable reel and steering rack centered.
- Be sure that the lower steering joint bolt is securely in the groove in the steering gearbox pinion.
- If the steering wheel and rack are not centered, reposition the serrations at lower end of the steering joint.

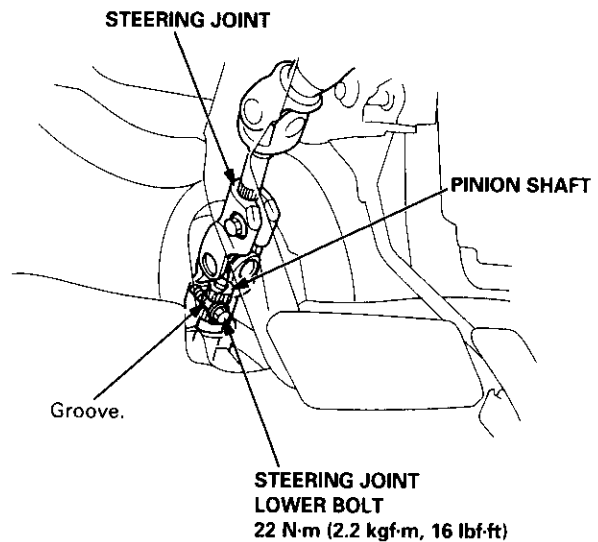

11. Center the cable reel by first rotating it clockwise until it stops. Then rotate it counterclockwise (approximately two turns) until the arrow mark on the label points straight up. Reinstall the steering wheel (see page 17-35).




12. Install the steering joint cover with the clamps and a clip.

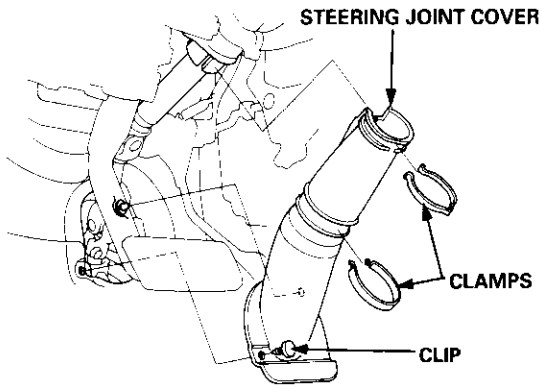

13. Reconnect the tie-rod ends to the steering knuckles, tighten the castle nut ('96 - '97 model) or nut ('98 model) to the specified torque, and install new cotter pins.

NOTE: Before connecting the tie-rod ends, wipe off any grease contamination from the ball joint tapered section and threads.

CAUTION: Torque the castle nut to the lower torque specification, then tighten it only far enough to align the slot with the pin hole. Do not align the nut by loosening ('96 - '97 model only).

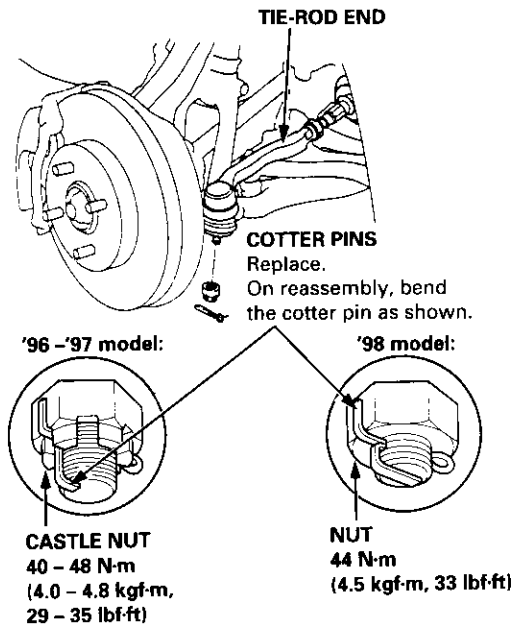

14. Install the exhaust pipe A or TWC (see section 9).
15. Connect the shift linkage (see section 13 or section 14).
16. Install the front wheels.
17. Fill the system with power steering fluid, and bleed air from the system (see page 17-33).
18. After installation, perform the following checks.
 - Start the engine, allow it to idle, and turn the steering wheel from lock-to-lock several times to warm up the fluid. Check the gearbox for leaks (see page 17-39).
 - Adjust the front toe (see section 18).
 - Check the steering wheel spoke angle. Adjust by turning the right and left tie-rods, if necessary.

NOTE: Turn the right and left tie-rods equally.

Ball joint Boot Replacement

'96 - '97 model:


1. Remove the boot set ring and the boot.

CAUTION: Do not contaminate the boot installation section with grease.


2. Pack the interior of the boot and lip with grease.
3. Wipe the grease off the sliding surface of the ball pin, then pack the lower area with fresh grease.

CAUTION:

- Keep grease off the boot installation section and the tapered section of the ball pin.
- Do not allow dust, dirt, or other foreign materials to enter the boot.

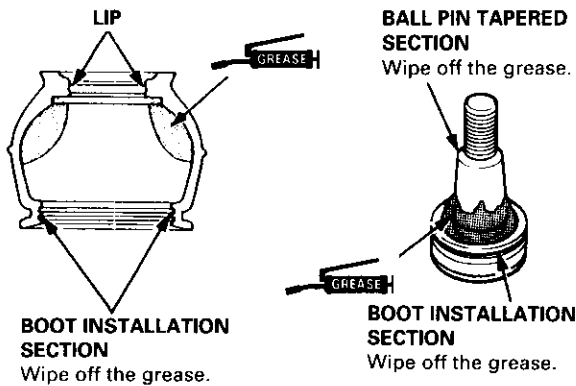

4. Install the boot in the groove of the boot installation section securely, then bleed the air from the boot.

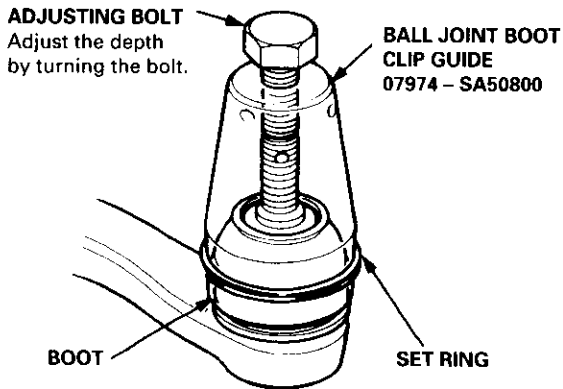

5. Adjust the special tool with the adjusting bolt until the end of the tool aligns with the groove on the boot. Slide the set ring over the tool and into position.

CAUTION: After installing the boot, check the ball pin tapered section for grease contamination and wipe it if necessary.


'98 model:

CAUTION: Do not contaminate the boot installation section with grease.

1. Remove the boot from the tie-rod end, and wipe the old grease off the ball pin.
2. Pack the lower area of the ball pin with fresh grease.
3. Pack the interior of the new boot and lip with fresh grease.


CAUTION:

- Keep grease off the boot installation section and the tapered section of the ball pin.
- Do not allow dust, dirt, or other foreign materials to enter the boot.

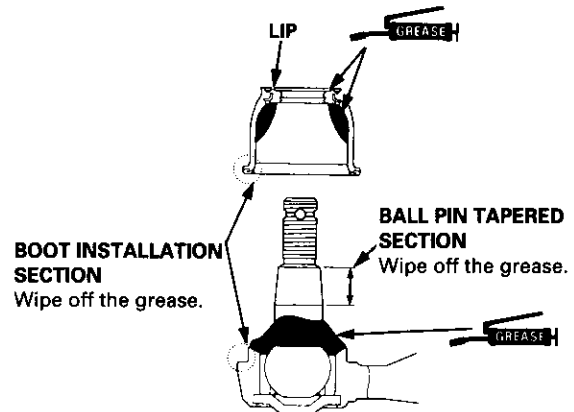

4. Install the new boot using the special tool as shown below.

NOTE: The boot must not be a gap at the boot installation sections.

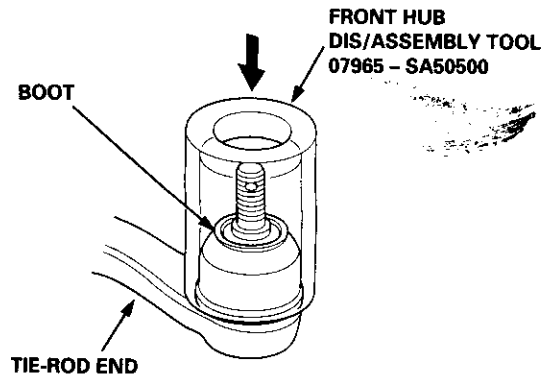

CAUTION: After installing the boot, check the ball pin tapered section for grease contamination, and wipe it if necessary.


Suspension

Special Tools	18-2	Front Damper	
Component Locations		Removal	18-16
Index	18-3	Disassembly/Inspection	18-17
Wheel Alignment		Reassembly	18-18
Caster	18-4	Installation	18-18
Camber	18-4	Rear Suspension	
Front Toe Inspection/ Adjustment	18-5	Suspension Arms Replacement	18-20
Rear Toe Inspection/ Adjustment	18-5	Hub Bearing Unit Replacement	18-21
Turning Angle Inspection	18-6	Upper Arm Bushing Replacement	18-22
Wheel/Hub Inspection		Rear Damper	
Bearing End Play	18-7	Removal	18-23
Wheel Runout	18-7	Disassembly/Inspection	18-24
Front Suspension		Reassembly	18-25
Suspension Arms Replacement	18-8	Installation	18-26
Knuckle/Hub Replacement	18-9		
Lower Ball Joint Replacement	18-15		
Ball Joint Boot Replacement	18-16		



Special Tools

Ref. No.	Tool Number	Description	Qty	Page Reference
①	07GAF - SE00200	Hub Assembly Guide Attachment	1	18-14
②	07GAF - SE00401	Hub Dis/Assembly Base	1	18-13
③	07GAG - SD40700	Ball Joint Boot Clip Guide	1	18-16
④	07JAF - SH20110	Hub Dis/Assembly Pilot, 38 mm	1	18-13
⑤	07JAF - SH20120	Hub Dis/Assembly Shaft, 22.4 x 25.4 mm	1	18-13
⑥	07JAF - SH20200	Ball Joint Remover Base	1	18-15
⑦	07MAC - SL00200	Ball Joint Remover, 28 mm	1	18-11, 12
⑧	07746 - 0010500	Attachment, 62 x 68 mm	1	18-13
⑨	07749 - 0010000	Driver	1	18-13
⑩	07947 - 6340201	Driver Attachment	1	18-14
⑪	07965 - SB00100	Ball Joint Remover/Installer	1	18-15
⑫	07965 - SB00200	Ball Joint Installer Base	1	18-15
⑬	07965 - SD90100	Support Base	1	18-14
⑭	07974 - SA50700	Ball Joint Boot Clip Guide	1	18-15, 16




①



②




⑨, ⑭




④




⑤



⑥




⑦

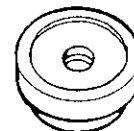

⑧, ⑩




⑨

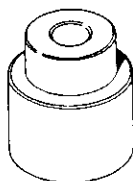

⑪



⑫

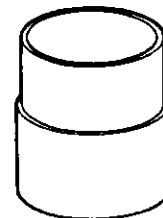

⑬

Component Locations



Index

Wheel Alignment, page 18-4

Front Suspension:

FRONT DAMPER

- Removal, page 18-16
- Disassembly/Inspection, page 18-17
- Reassembly, page 18-18
- Installation, page 18-18

UPPER ARM

- Replacement, page 18-8

KNUCKLE/HUB


- Replacement, page 18-9
- Wheel Bearing Replacement, page 18-13
- Lower Ball Joint Replacement, page 18-15

STABILIZER BAR

- Replacement, page 18-8

LOWER ARM

- Replacement, page 18-8

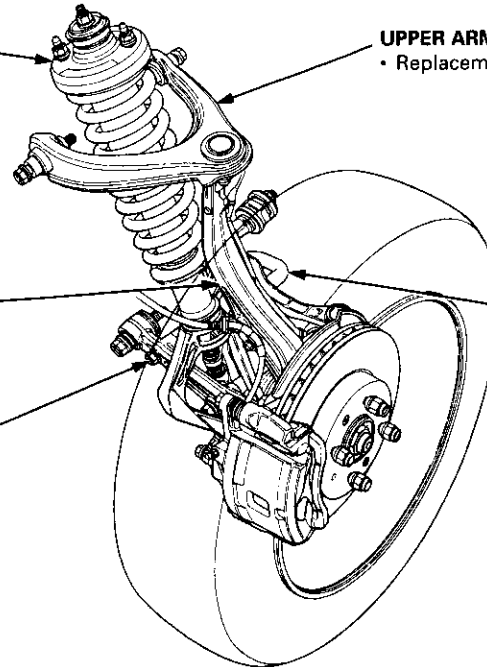

Rear Suspension:

REAR DAMPER

- Removal, page 18-23
- Disassembly/Inspection, page 18-24
- Reassembly, page 18-25
- Installation, page 18-26

UPPER ARM

- Replacement, page 18-20

LOWER ARM


- Replacement, page 18-20

COMPENSATOR ARM

- Replacement, page 18-20

TRAILING ARM

- Replacement, page 18-20

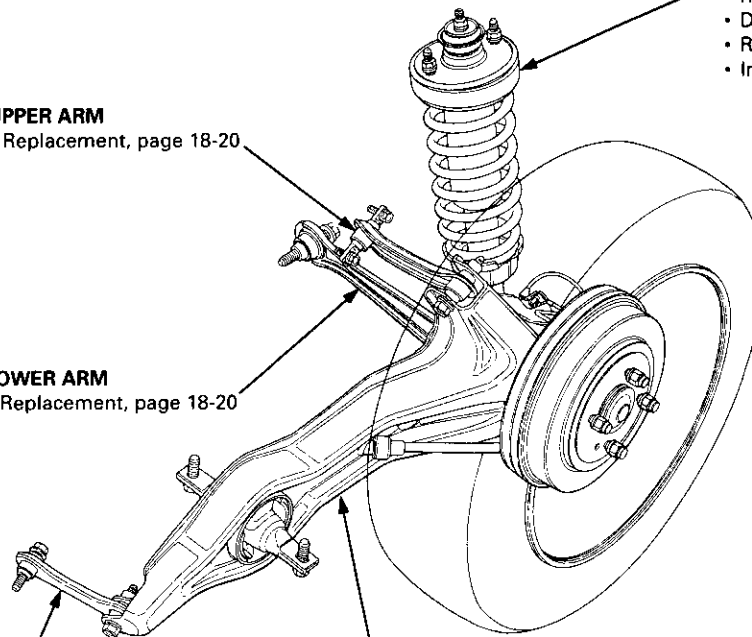


Wheel Alignment

Caster

NOTE: For proper inspection/adjustment of the wheel alignment check and adjust the following before checking the alignment.

- Check that the suspension is not modified.
- Check the tire size and tire pressure.
- Check the runout of the wheels and tires.
- Check the suspension ball joints. (Hold a wheel with your hands and move it up and down and right and left to check for wobbling.)

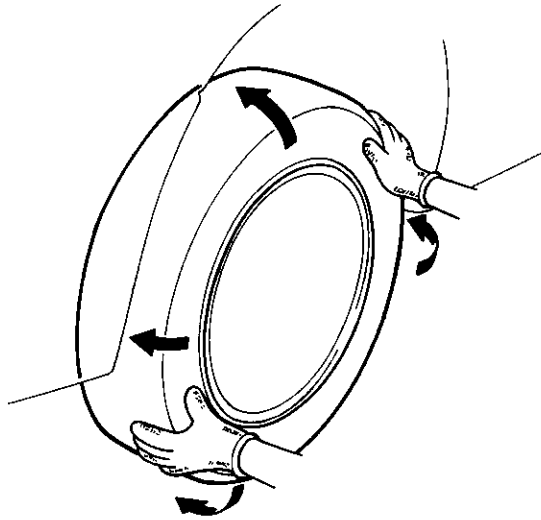

Inspection

NOTE: Use commercially-available computerized four wheel alignment equipment to measure wheel alignment (caster, camber, toe, and turning angle). Follow the equipment manufacturer's instructions.

1. Check the caster angle.

Caster angle: $1^{\circ}40' \pm 1^{\circ}$

2. If out of specification, check for bent or damaged suspension components.

Camber

Inspection

NOTE: Use commercially-available computerized four wheel alignment equipment to measure wheel alignment (caster, camber, toe, and turning angle). Follow the equipment manufacturer's instructions.

1. Check the camber angle.

Camber angle:

Front: $0^{\circ}00' \pm 1^{\circ}$

Rear: $-1^{\circ} \pm 1^{\circ}$

2. If out of specification, check for bent or damaged suspension components.



Front Toe Inspection/Adjustment

NOTE: Use commercially-available computerized four wheel alignment equipment to measure wheel alignment (caster, camber, toe, and turning angle). Follow the equipment manufacturer's instructions.

1. Check the tire pressure.
2. Center steering wheel spokes.
3. Check the toe with the wheels pointed straight ahead.


Front toe: IN 1 ± 2 mm (IN 1/16 ± 1/16 in)

— If adjustment is required, go on to step 4.

— If no adjustment is required, remove alignment equipment.

4. Loosen the tie-rod locknuts, and turn both tie-rods in the same direction until the front wheels are in straight ahead position.

TIE-ROD LOCKNUT
14 x 1.5 mm
44 N·m (4.5 kgf·m, 33 lbf·ft)

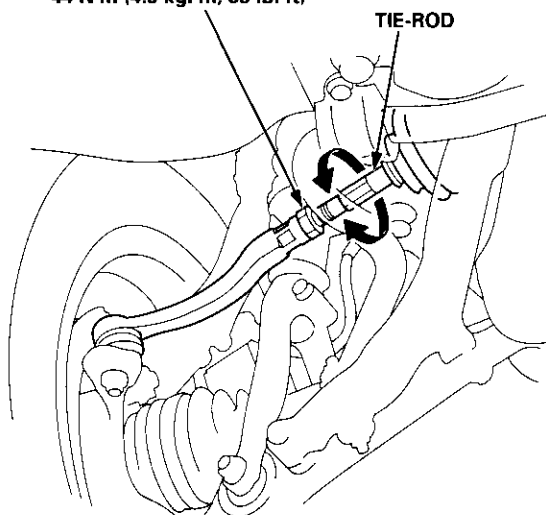

5. Turn both tie-rods equally until the toe reading on the turning radius gauge is correct.
6. After adjusting, tighten the tie-rod locknuts.

NOTE: Reposition the tie-rod boot if it is twisted or displaced.

Rear Toe Inspection/Adjustment

NOTE: Use commercially-available computerized four wheel alignment equipment to measure wheel alignment (caster, camber, toe, and turning angle). Follow the equipment manufacturer's instructions.

1. Release parking brake.

NOTE:

- Measure difference in toe measurements with the wheels pointed straight ahead.
- If the parking brake is engaged, you may get an incorrect reading.


Rear toe-in: 2 ±1 mm (1/16 ±1/16 in)

— If adjustment is required, go to step 2.

— If no adjustment is required, remove alignment equipment.

2. Before adjustment, note the locations of adjusting bolts on the right and left compensator arms.
3. Loosen the adjusting bolts, and slide the compensator arm in or out, as shown, to adjust the toe.

ADJUSTING BOLT
10 x 1.25 mm
64 N·m (6.5 kgf·m, 47 lbf·ft)

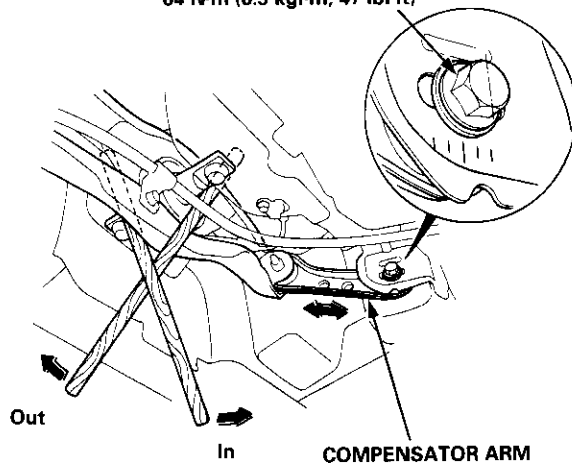

4. Tighten the adjusting bolts.

• Example:

- After the rear toe inspection, the wheel is 2 mm (0.08 in) out of the specification.
- Move the arm so the adjusting bolt moves 2 mm (0.08 in) inward from the position recorded before the adjustment.
- The distance the adjusting bolt is moved should be equal to the amount out-of-specification.

Wheel Alignment

Turning Angle Inspection


NOTE: Use commercially-available computerized four wheel alignment equipment to measure wheel alignment (caster, camber, toe, and turning angle). Follow the equipment manufacturer's instructions.

1. Turn the wheel right and left while applying the brake, and measure the turning angle of both wheels.

Turning angle:

Inward wheel: 39°50'

Outward wheel (reference): 33°10'

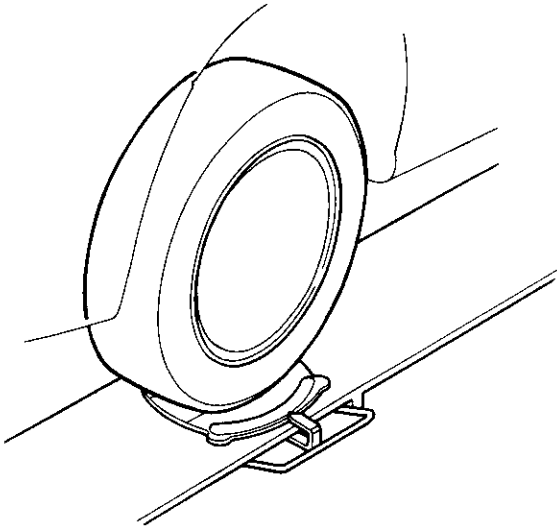

2. If the turning angle is not within the specifications, check for bent or damaged suspension components.




Bearing End Play

1. Raise the vehicle off the ground, and support it with safety stands in the proper locations (see section 1).
2. Remove the wheels, then reinstall the wheel nuts.
3. Attach the dial gauge as shown.
4. Measure the bearing end play by moving the disc in or outward.

Front/Rear:


Standard: 0 – 0.05 mm (0 – 0.002 in)

Front:

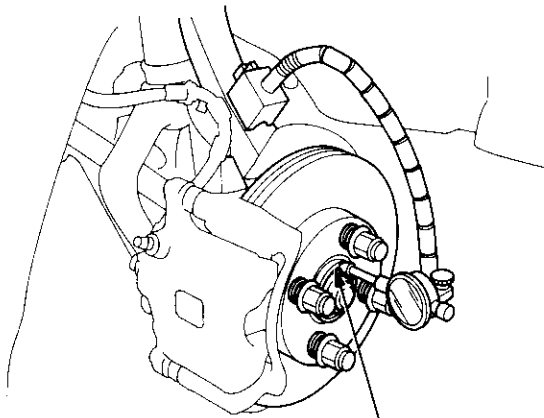

Measure end play at the hub flange.

Rear:

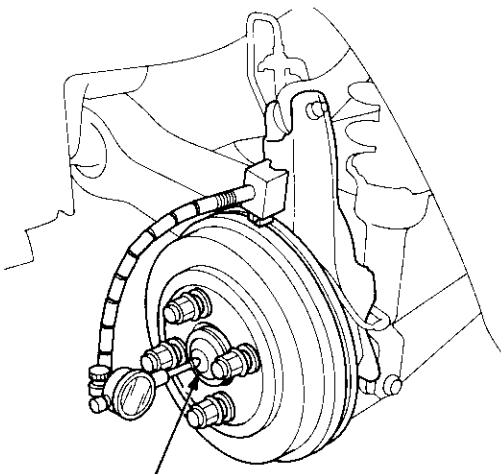

Measure end play at center of the hub cap.

5. If the bearing end play measurement is more than the standard, replace the wheel bearing.

Wheel Runout

1. Raise the vehicle off the ground, and support it with safety stands in the proper locations (see section 1).
2. Check for bent or deformed wheels.
3. Attach the dial gauge as shown.
4. Measure the wheel runout by turning the wheel.


Front and Rear Wheel Axial Runout:

Standard:

Steel Wheel: 0 – 1.0 mm (0 – 0.04 in)

Aluminum Wheel: 0 – 0.7 mm (0 – 0.03 in)

Service Limit: 2.0 mm (0.08 in)

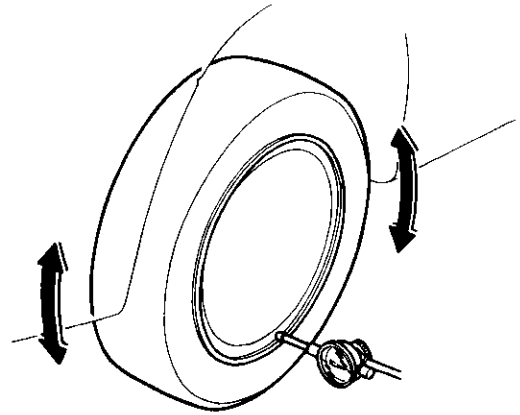


Front and Rear Wheel Radial Runout:

Standard:

Steel Wheel: 0 – 1.0 mm (0 – 0.04 in)

Aluminum Wheel: 0 – 0.7 mm (0 – 0.03 in)

Service Limit: 1.5 mm (0.06 in)

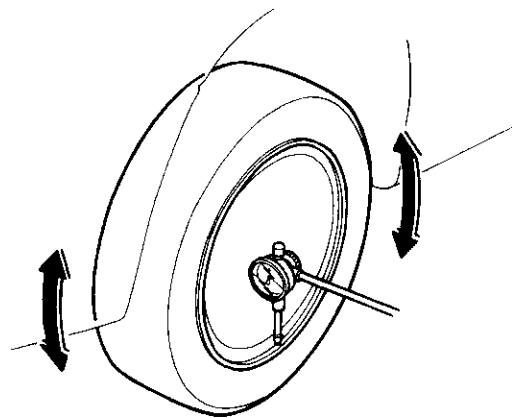

5. If the wheel runout is more than the service limit, replace the wheel.

Front Suspension


Suspension Arms Replacement

CAUTION:

- Replace the self-locking nuts after removal.
- The vehicle should be on the ground before any bolts or nuts connected to rubber mounts or bushings are tightened.

NOTE:

- Wipe off any dirt, oil from grease on the threads before tightening the fasteners.
- The right and left damper forks are not interchangeable. The left damper fork is marked with "AL" while the right damper fork is marked with "AR".
- The right and left upper arms are not interchangeable. The left upper arm is marked with "SO1-L" while the right arm is marked with "SO1-R".
- Before tightening the upper and lower mounting nuts on the stabilizer link, adjust the location of the link with the suspension under vehicle load.
- When installing the radius arm washers, the "FR" mark faces the front of the vehicle.
- After installing the suspension arm, check the front wheel alignment, and adjust if necessary (see page 18-4).

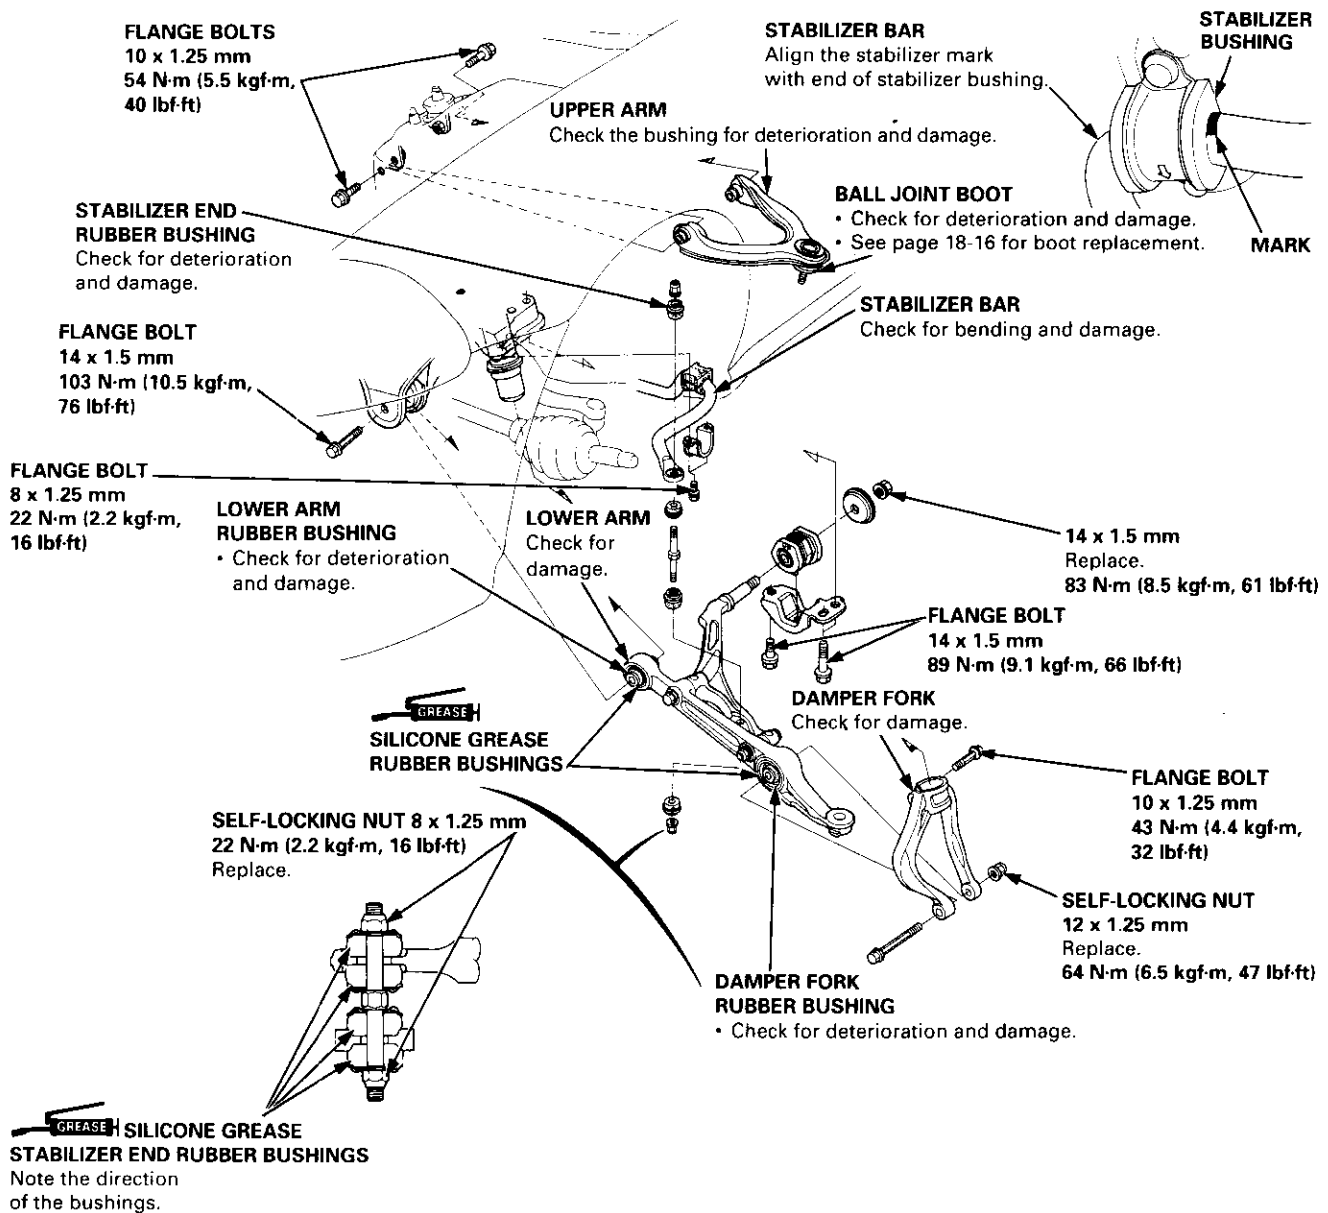




Knuckle/Hub Replacement

CAUTION:

- Replace the self-locking nuts after removal.
- The vehicle should be on the ground before any bolts or nuts connected to rubber mounts or bushings are tightened.
- Torque the castle nut to the lower torque specification, then tighten it only far enough to align the slot with the pin hole. Do not align the nut by loosening.

NOTE:

- Use only genuine Honda wheel weights for aluminum wheels. Non-genuine wheel weights may corrode and damage the aluminum wheels.
- On the aluminum wheels, remove the center cap from the inside of the wheel after removing the wheel.
- Before installing the brake disc, clean the mating surfaces of the front hub and brake disc.
- Before installing the wheel, clean the mating surfaces of the brake disc and wheel.
- Wipe off the grease before tightening the nut at the ball joint.

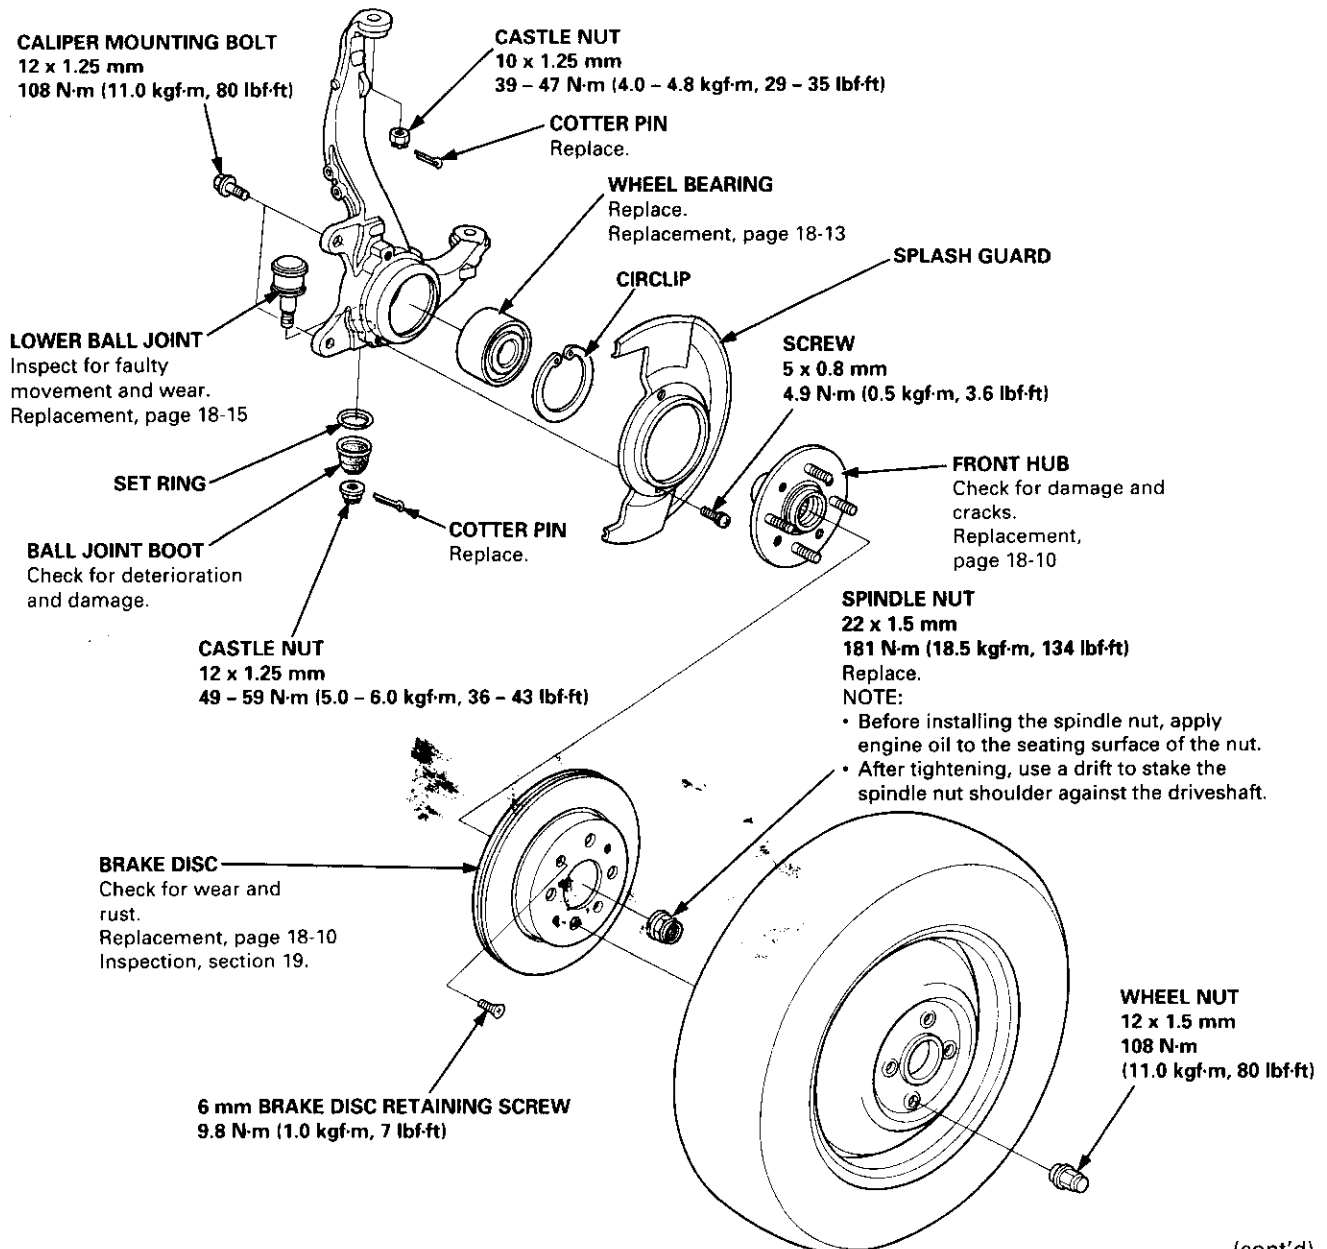


(cont'd)


Front Suspension

Knuckle/Hub Replacement (cont'd)

1. Loosen the wheel nuts slightly.
2. Raise the front of vehicle, and support it with safety stands in the proper locations (see section 1).
3. Remove the wheel nuts and wheel.

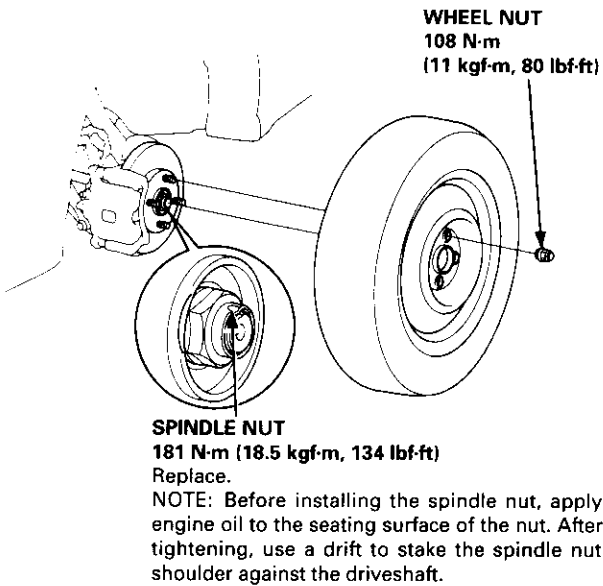


4. Raise the locking tab on the spindle nut, then remove the nut.
5. Remove the brake hose mounting bolts.

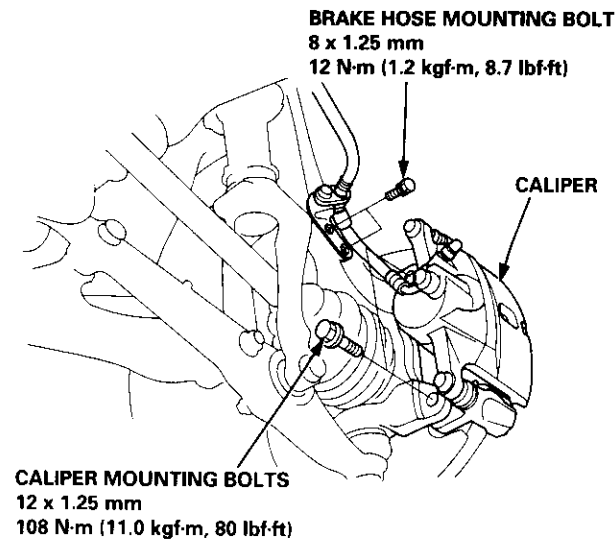

6. Remove the caliper mounting bolts and hang the caliper assembly to one side.

CAUTION: To prevent accidental damage to the caliper assembly or brake hose, use a short piece of wire to hang the caliper from the undercarriage.

7. Remove the 6 mm brake disc retaining screws.

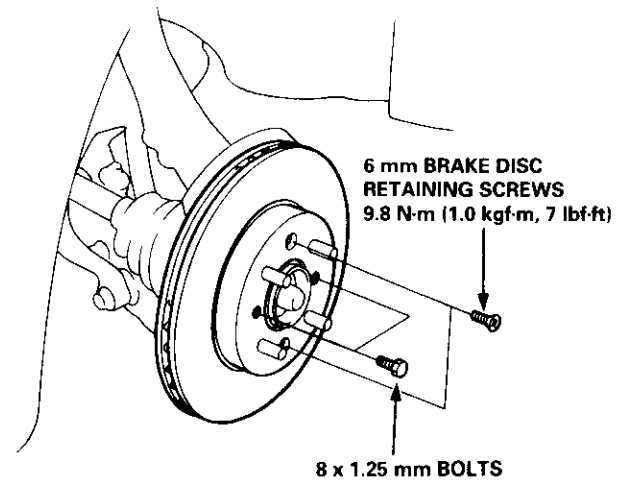


8. Screw two 8 x 1.25 mm bolts into the disc to push it away from the hub.

NOTE: Turn each bolt two turns at a time to prevent cocking the disc excessively.

9. Remove the brake disc from the knuckle.
10. Check the front hub for damage and cracks.
11. Remove the wheel sensor from the knuckle (for cars with ABS).

NOTE: Do not disconnect the wheel sensor connector.

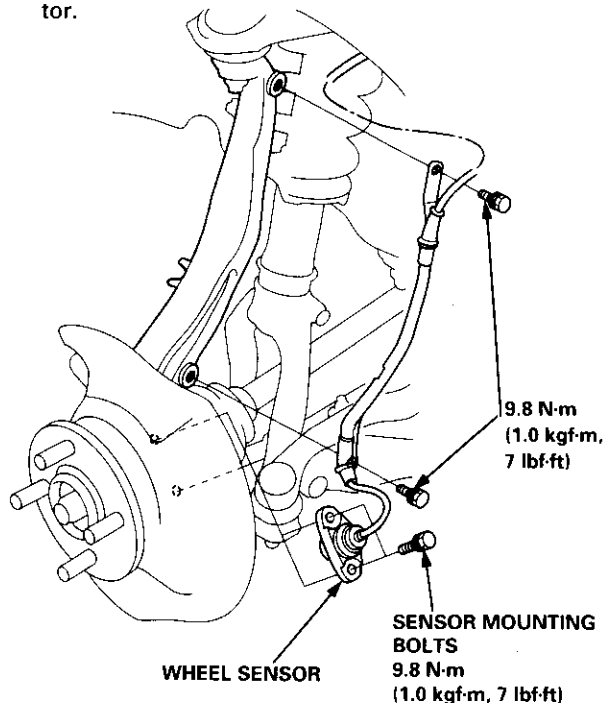




NOTE: Use the special tool to separate the ball joints from the suspension or steering arm.


CAUTION: Be careful not to damage the ball joint boot.

12. Clean any dirt or grease off the ball joint.
13. Remove the cotter pin from the steering arm and remove the nut.
14. Apply grease to the special tool on the areas shown. This will ease installation of the tool and prevent damage to the pressure bolt threads.

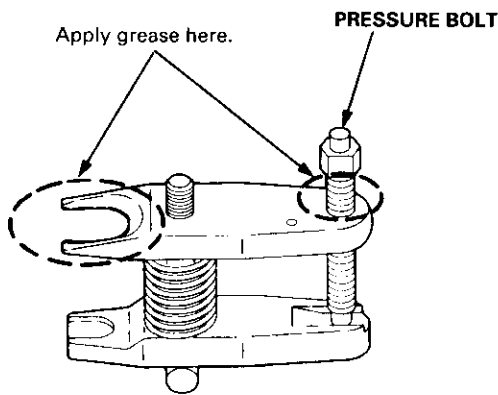


15. Install a 10 mm hex nut on the ball joint. Be sure that the hex nut is flush with the ball joint pin end to prevent damage to the threaded end of the ball joint.
16. Install the special tool as shown. Insert the jaws carefully, making sure you do not damage the ball joint boot. Adjust the jaw spacing by turning the pressure bolt.

NOTE: If necessary, apply penetrating type lubricant to loosen the ball joint.

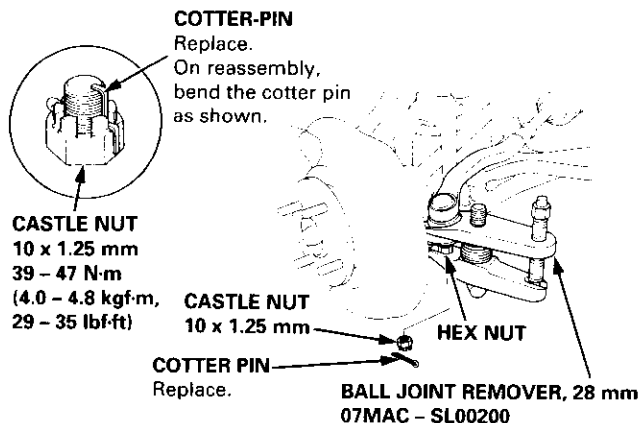

17. Once the special tool is in place, turn the adjusting bolt as necessary to make the jaws parallel. Then hand-tighten the pressure bolt, and recheck the jaws to make sure they are still parallel.

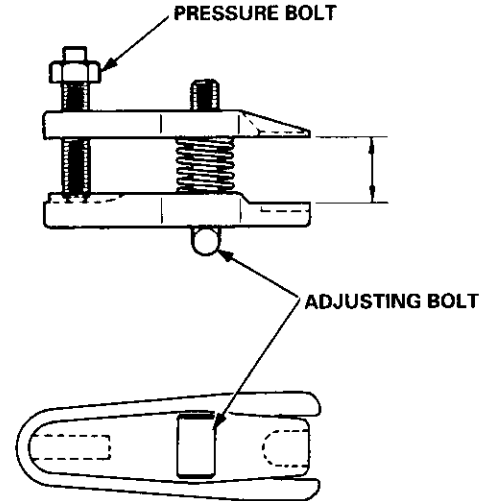

NOTE: After making the adjustment to the adjusting bolt, be sure the head of the adjusting bolt is in this position to allow the jaw to pivot.

18. With a wrench, tighten the pressure bolt until the ball joint shaft pops loose from the steering arm.

⚠ WARNING Wear eye protection. The ball joint can break loose suddenly and scatter dirt or other debris in your eyes.



19. Remove the tool, then remove the nut from the end of the ball joint and pull the ball joint out of the steering/suspension arm. Inspect the ball joint boot and replace it if damaged.

(cont'd)

Front Suspension

Knuckle/Hub Replacement (cont'd)


20. Remove the cotter pin from the lower arm ball joint castle nut, and remove the nut.

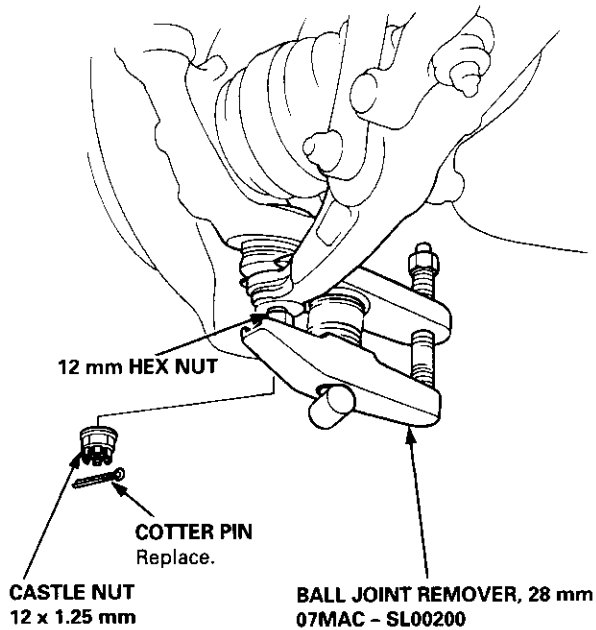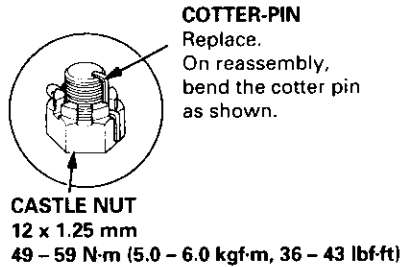

21. Install a 12 mm hex nut on the ball joint. Be sure that the hex nut is flush with the ball joint pin end, or the threaded section of the ball joint pin might be damaged by the ball joint remover.
22. Use the special tool as shown on page 18-11 to separate the ball joint and lower arm.

NOTE: If necessary, apply penetrating type lubricant to loosen the ball joint.

23. Remove the cotter pin from the upper ball joint castle nut, and remove the nut.

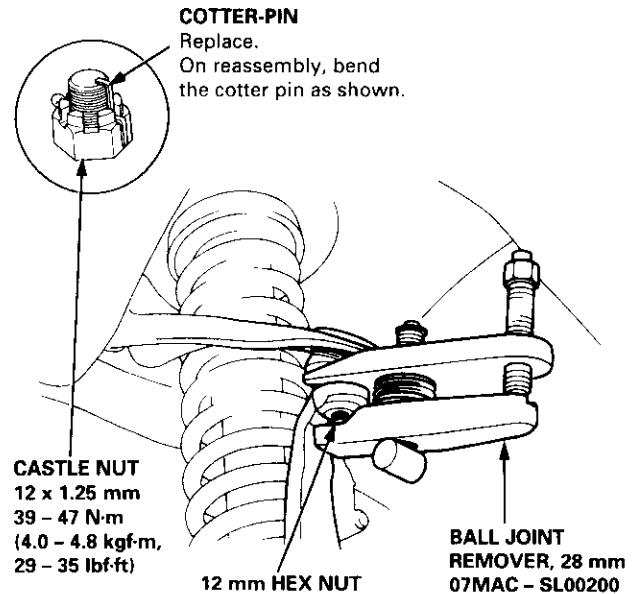


24. Install the 12 mm hex nut on the ball joint. Be sure that the hex nut is flush with the ball joint pin end, or the threaded section of the ball joint pin might be damaged by the ball joint remover.

25. Use the special tool as shown on page 18-11 to separate the ball joint and knuckle.

NOTE: If necessary, apply penetrating type lubricant to loosen the ball joint.

26. Pull the knuckle outward and remove the driveshaft outboard joint from the knuckle by tapping the driveshaft end with a plastic hammer, then remove the knuckle.

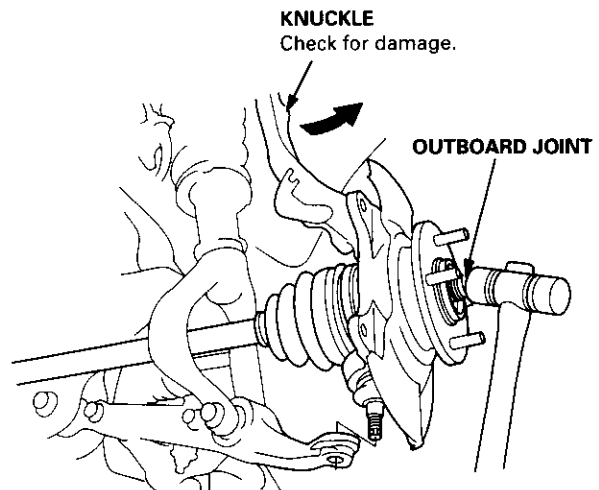




NOTE: Replace the bearing with a new one after removal.


27. Separate the hub from the knuckle using the special tools and a hydraulic press.

CAUTION:


- Take care not to distort the splash guard.
- Hold onto the hub to keep it from falling when pressed clear.
- To prevent damage to the tool, make sure the threads are fully engaged before pressing.

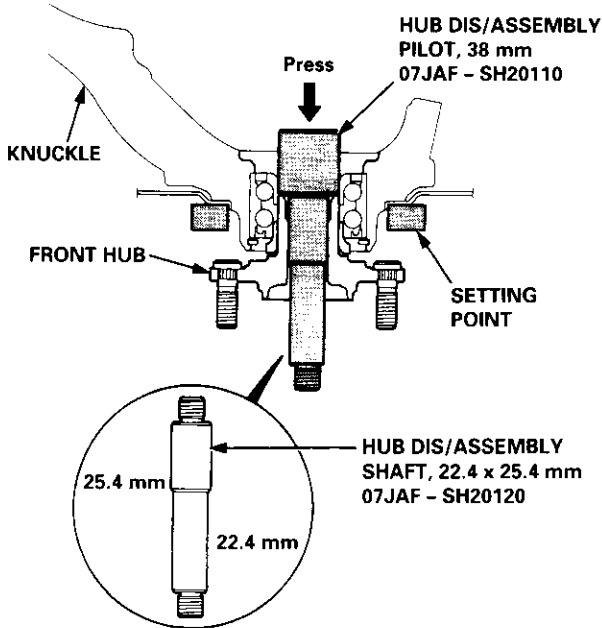


28. Remove the circlip and the splash guard from the knuckle.

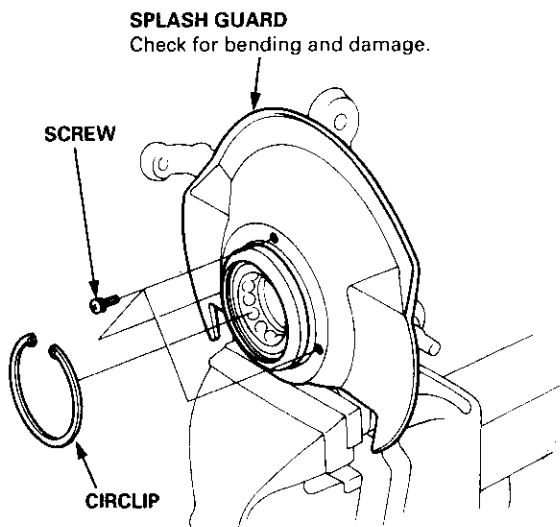

29. Press the wheel bearing out of the knuckle using the special tools and a press as shown.

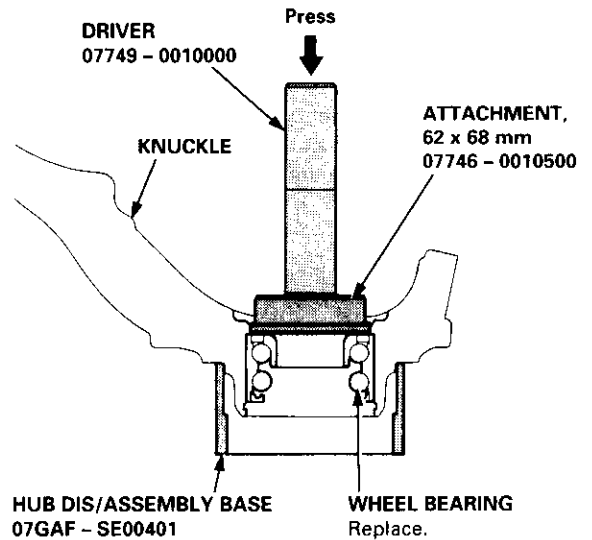

30. Press the wheel bearing inner race from the hub using the special tools, a bearing separator, and a press as shown.

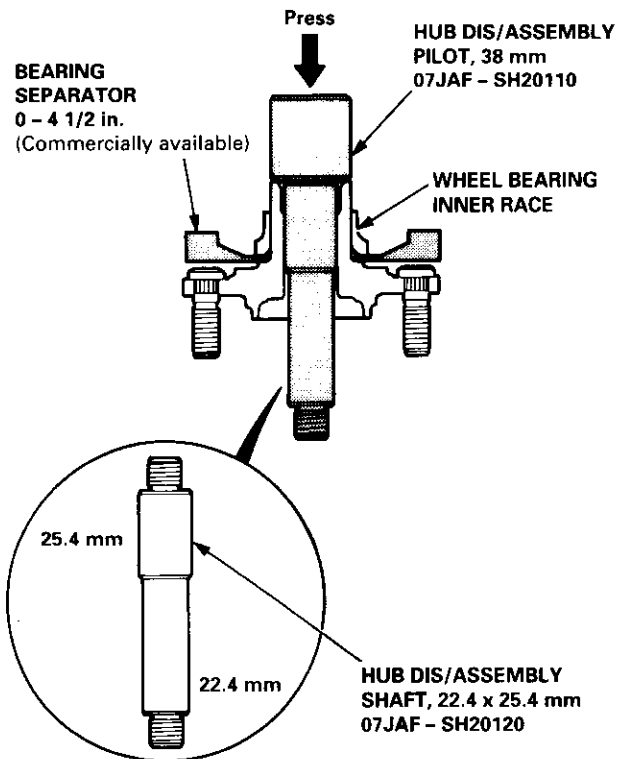

(cont'd)


Front Suspension

Knuckle/Hub Replacement (cont'd)


NOTE: Wash the knuckle and hub thoroughly in high flash point solvent before reassembly.

31. Press a new wheel bearing into the knuckle using the special tools and a press as shown.

NOTE: Place the wheel bearing on the knuckle with the pack seal (metal color) toward the inside. Be careful not to damage the sleeve of the pack seal.

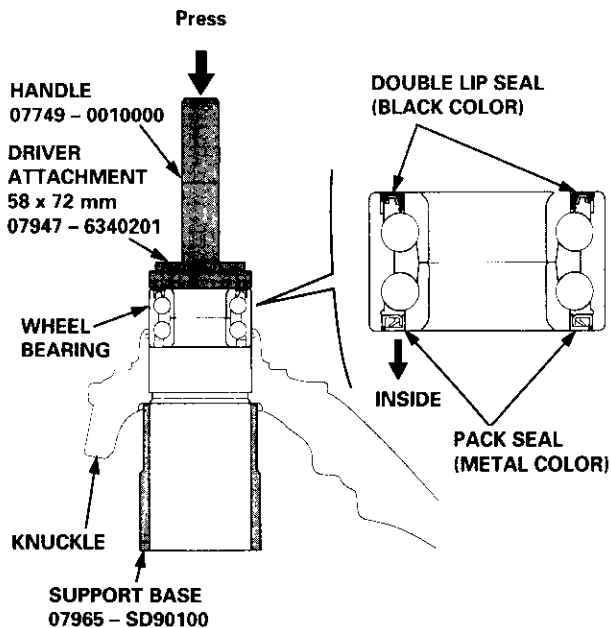


32. Install the circlip securely in the knuckle groove.
33. Install the splash guard and tighten the screws.

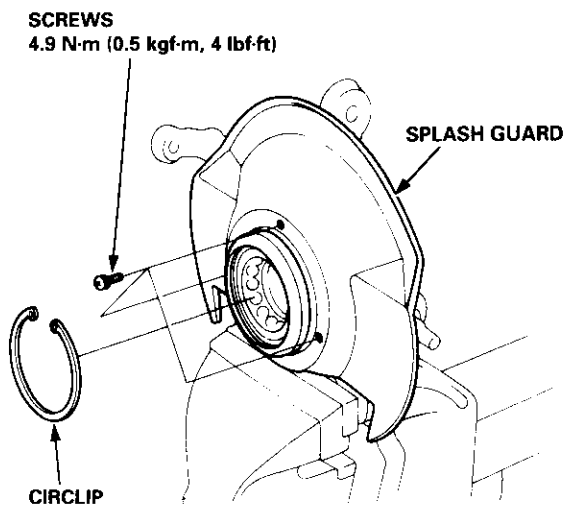

34. Install the hub on the knuckle using the special tools shown and a hydraulic press as shown.

CAUTION: Take care not to distort the splash guard.

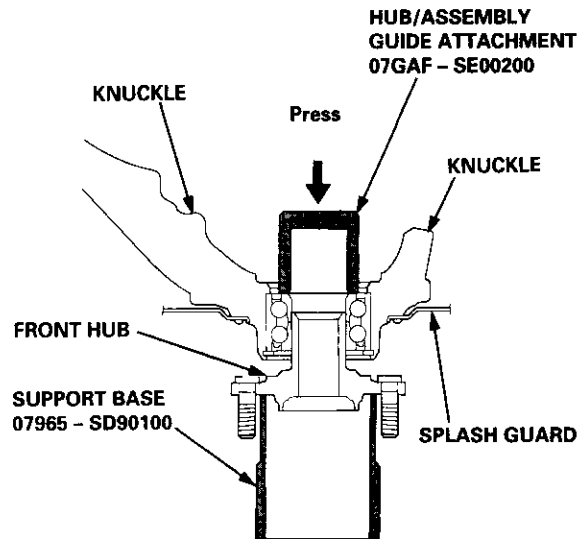

35. Install the knuckle in the reverse order of removal, and pay particular attention to the following items:


- Be careful not to damage the ball joint boots when installing the knuckle.
- Torque all mounting hardware to the specified torque values.
- Torque the castle nuts to the lower torque specifications, then tighten them only far enough to align the slot with the pin hole. Do not align the castle nut by loosening.
- Install new cotter pins on the castle nuts after torquing.
- Avoid twisting the sensor wires when installing the wheel sensor.
- Before installing the brake disc, clean the mating surfaces of the front hub and the inside of the brake disc.
- Before installing the wheel, clean the mating surface of the brake disc and the inside of the wheel.
- Check the front wheel alignment, and adjust it if necessary (see page 18-7).



Lower Ball Joint Replacement

1. Remove the knuckle (see page 18-10).
2. Remove the boot by prying the set ring off.
3. Check the boot for deterioration and damage, replace if necessary.
4. Install the special tools on the ball joint and tighten the castle nut.
5. Position the special tools over the ball joint as shown, then set the assembly in a vise. Press the ball joint out of the knuckle.


BALL JOINT REMOVER/INSTALLER
07965 - SB00100

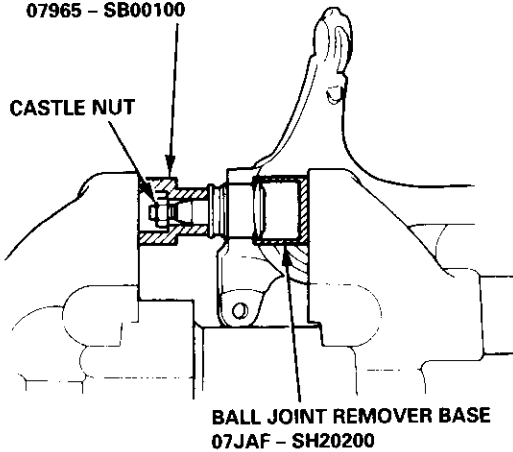


6. Place the ball joint in position by hand.
7. Install the special tools over the ball joint as shown, then press the ball joint in.

BALL JOINT REMOVER/INSTALLER
07965 - SB00100

BALL JOINT INSTALLER BASE
07965 - SB00200

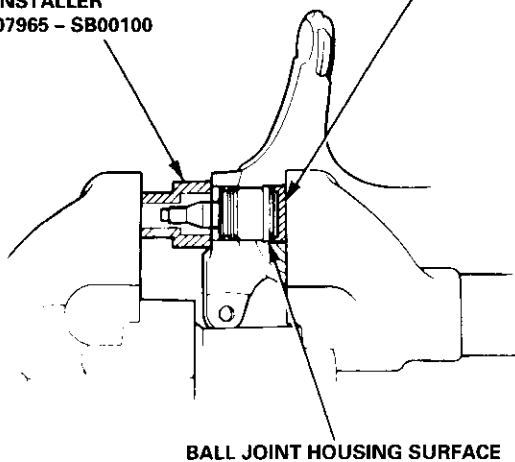

8. Install the ball joint boot and set ring using the special tool (see page 18-16).

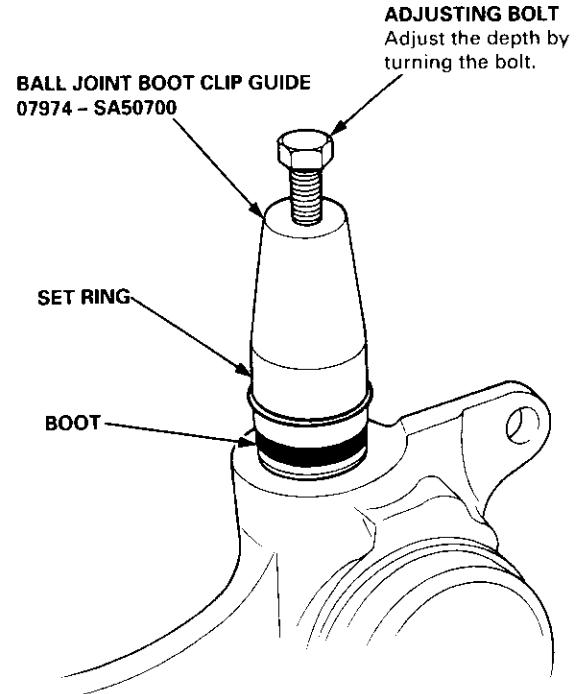

9. Install the knuckle in the reverse order of removal, and pay particular attention to the following items:

- Be careful not to damage the ball joint boots when installing the knuckle.
- Torque all mounting hardware to the specified torque values.
- Torque the castle nuts to the lower torque specifications, then tighten them only far enough to align the slot with the pin hole. Do not align the castle nut by loosening.
- Install new cotter pins on the castle nuts after torquing.
- Avoid twisting the sensor wires when installing the wheel sensor.
- Before installing the brake disc, clean the mating surfaces of the front hub and the inside of the brake disc.
- Before installing the wheel, clean the mating surface of the brake disc and the inside of the wheel.
- Check the front wheel alignment, and adjust it if necessary (see page 18-4).

Front Suspension


Front Damper

Ball Joint Boot Replacement

1. Remove the set ring and the boot.

CAUTION: Do not contaminate the boot installation section with grease.

2. Pack the interior of the boot and lip with grease.

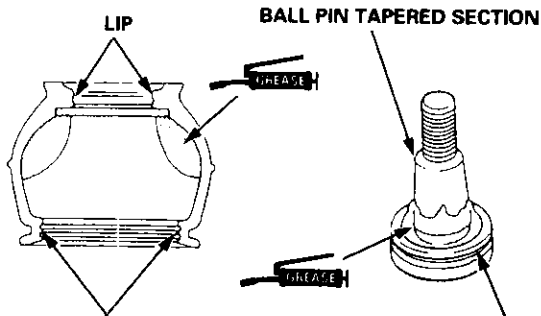

BOOT INSTALLATION SECTION Wipe off the grease.
BOOT INSTALLATION SECTION Wipe off the grease.

3. Wipe the grease off the sliding surface of the ball pin and pack with fresh grease.


CAUTION:

- Keep grease off the boot installation section and the tapered section of the ball pin.
- Do not allow dust, dirt, or other foreign materials to enter the boot.

4. Install the boot in the groove of the boot installation section securely, then bleed air.

5. Install the upper and lower ball joint boot set rings using the special tools as follows:


Lower ball joint: Adjust the special tool with the adjusting bolt until the end of the tool aligns with the groove on the boot. Slide the set ring over the tool and into position.

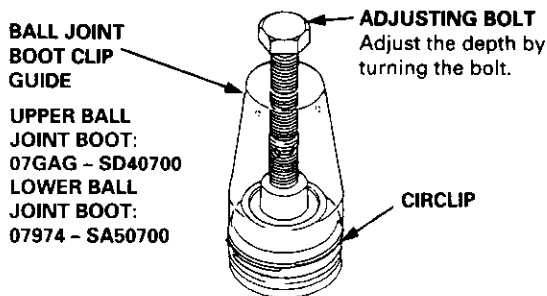


CAUTION: After installing the boot, check the ball pin tapered section for grease contamination and wipe it if necessary.

Removal

1. Remove the front wheels (see page 18-10).
2. Remove the damper pinch bolt from the top of damper fork.

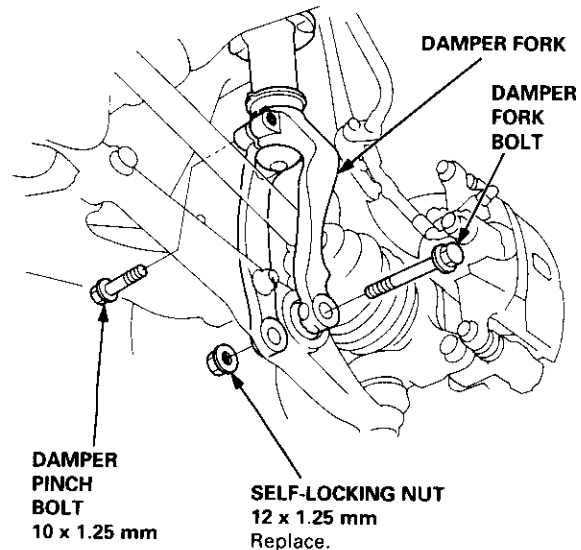

3. Remove the damper fork bolt and self-locking nut from the bottom of the damper fork, then remove damper fork.
4. Remove the damper by removing the two nuts.

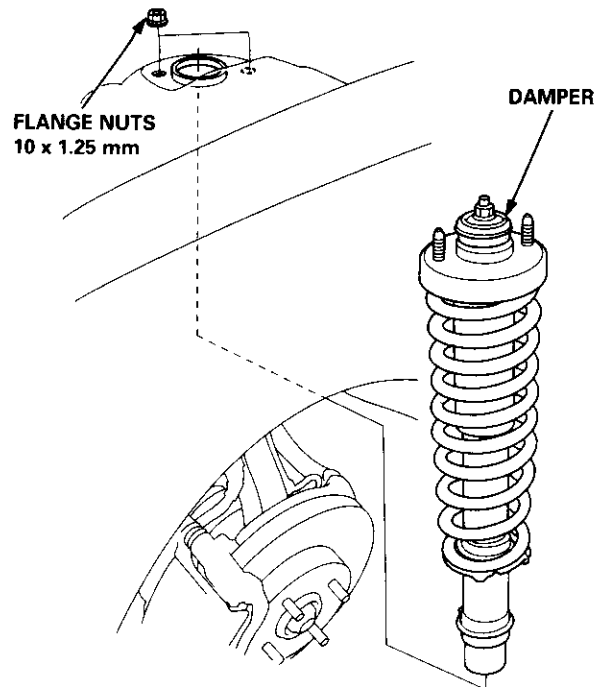




Disassembly/Inspection

Disassembly

1. Compress the damper spring with the spring compressor according to the manufacturer's instructions, then remove the self-locking nut.


CAUTION: Do not compress the spring more than necessary to remove the nut.

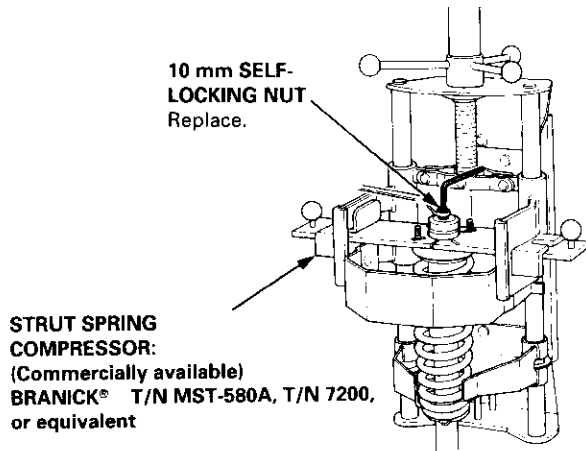


2. Release the pressure from the spring compressor, then disassemble the damper as shown in the next column.

Inspection

1. Reassemble all parts, except the spring.
2. Push on the damper assembly as shown.

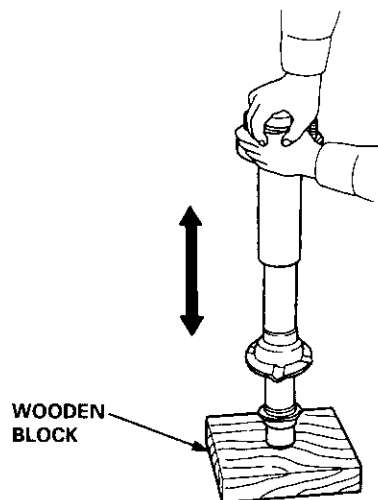

3. Check for smooth operation through a full stroke, both compression and extension.
NOTE: The damper should move smoothly. If it does not (no compression or no extension), the gas is leaking, and the damper should be replaced.
4. Check for oil leaks, abnormal noises or binding during these tests.

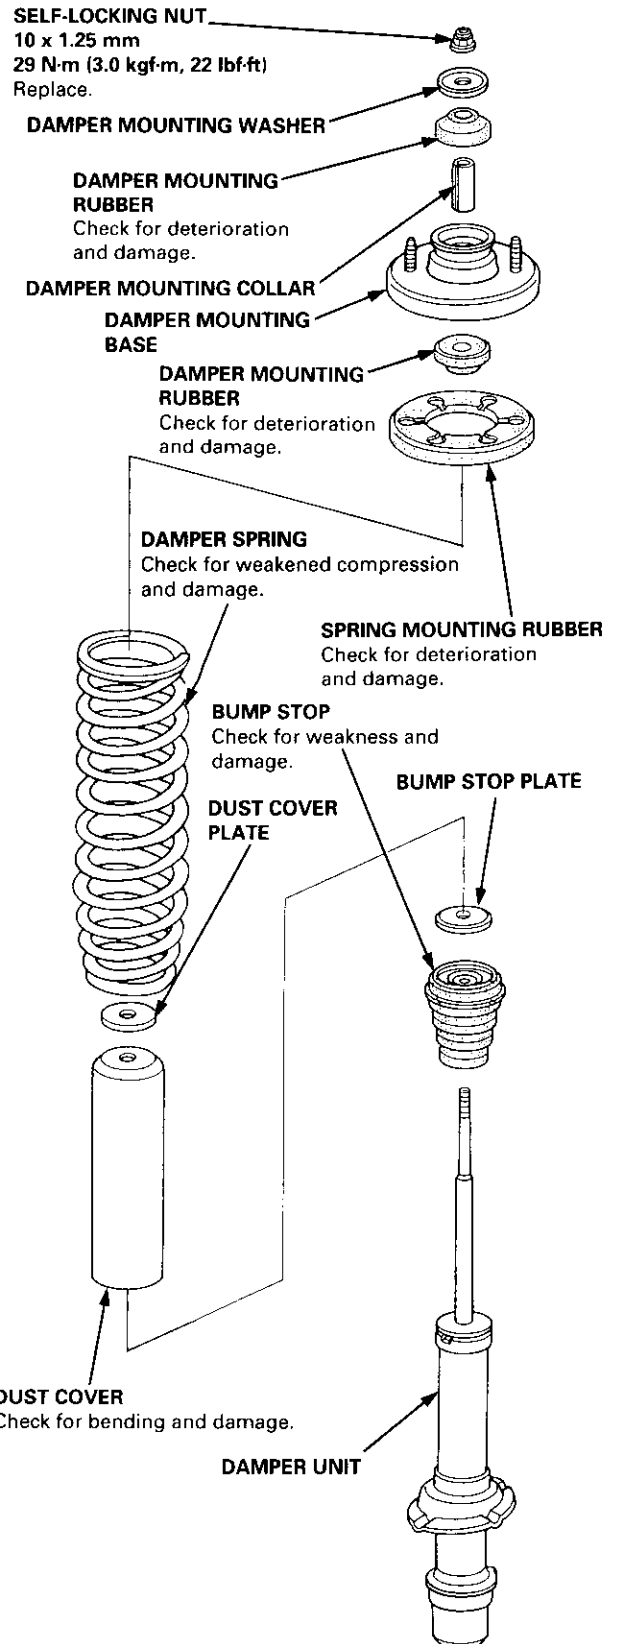


Front Damper


Reassembly

1. Install the damper unit on a spring compressor.
2. Assemble the damper in reverse order of removal except the damper mounting washer and self locking nut.

NOTE: Align the bottom of damper spring and spring lower seat as shown.

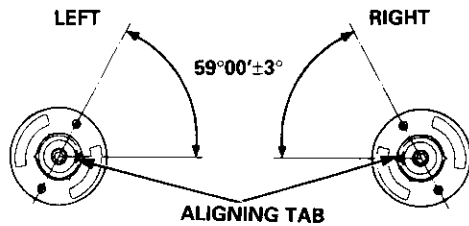


STRUT SPRING COMPRESSOR:
(Commercially available)
BRANICK® T/N MST-580A, T/N 7200,
or equivalent

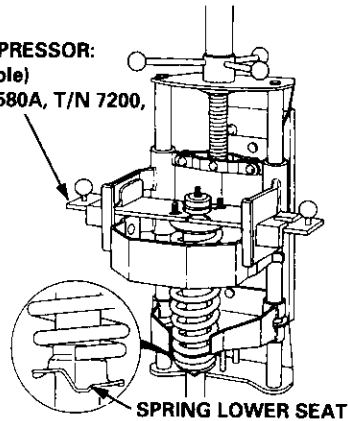

3. Position the damper mounting base on the damper unit as shown.
4. Compress the damper spring.
5. Install the damper mounting rubber, damper mounting washer and a new 10 mm self-locking nut.
6. Hold the damper shaft and tighten the 10 mm self-locking nut.


SELF-LOCKING NUT
10 x 1.25 mm
29 N·m (3.0 kgf·m, 22 lbf·ft)
Replace.

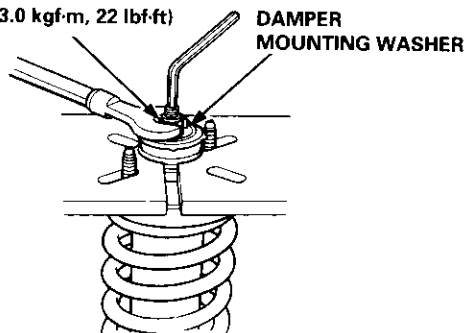

Installation


1. Loosely install the damper on the frame with the aligning tab facing inside, then loosely install the two flange nuts.

FLANGE NUTS
10 x 1.25 mm
49 N·m (5.0 kgf·m, 36 lbf·ft)

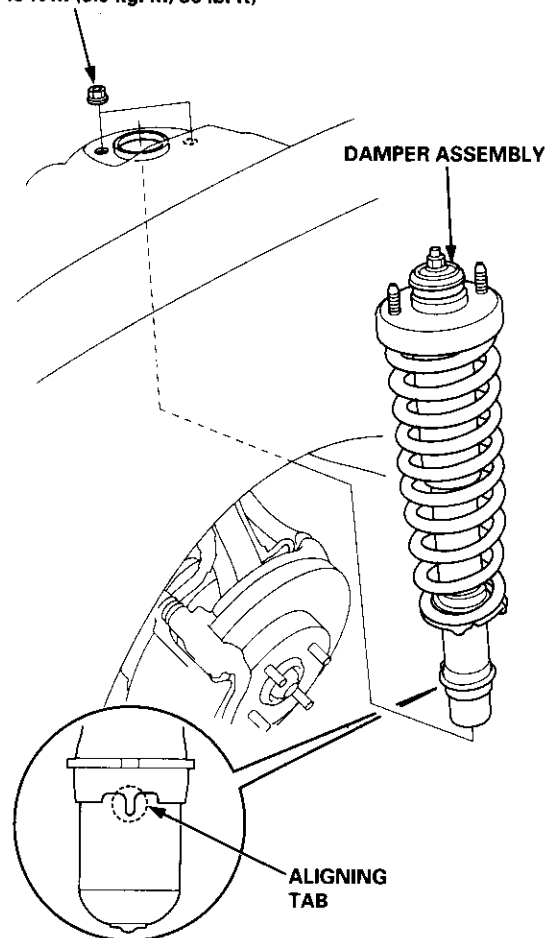



2. Install the damper fork over the driveshaft and onto the lower arm. Install the front damper in the damper fork so the aligning tab is aligned with the slot in the damper fork.

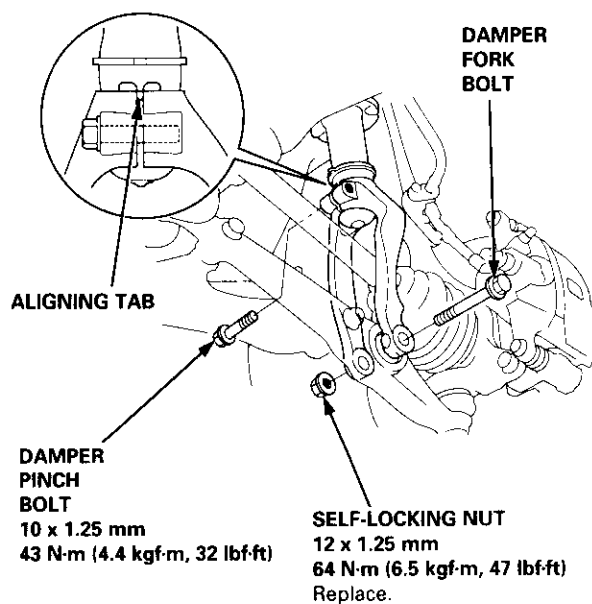

3. Loosely install the damper pinch bolt on the top of the damper fork.
4. Loosely install the damper fork bolt and a new self-locking nut on the bottom of the damper fork.
5. Raise the knuckle with a floor jack until the vehicle just lifts off the safety stand.

⚠ WARNING The floor jack must be securely positioned or personal injury may result.

6. Tighten the damper pinch bolt.
7. Tighten the damper fork bolt and self-locking nut.
8. Tighten the flange nuts on top of the damper.
9. Install the brake hose mounts with the brake hose mounting bolts.
10. Install the front wheel.

Rear Suspension

Suspension Arms Replacement


WARNING When the suspension arms are to be removed, place additional weight in the trunk before hoisting. When substantial weight is removed from the rear of the vehicle, the center of gravity may change causing the car to tip forward.

CAUTION:

- Replace the self-locking nuts after removal.
- The vehicle should be on the ground before any bolts or nuts connected to rubber mounts or bushings are tightened.

NOTE:

- Make sure the toe adjusting bolts on the compensator arm are installed in the same direction.
- "↑ UP L" or "↑ UP LH G" or "↑ UP LK" or "↑ UP LS" is stamped on the left upper arm and "↑ UP R" or "↑ UP RH G" or "↑ UP RK" or "↑ UP RS" on the right upper arm.
- The right and left compensator arm are symmetrical. Install so the "↑ UP" mark stamped side faces forward.
- After installing the suspension arm, check the rear wheel alignment, and adjust if necessary (see page 18-4).

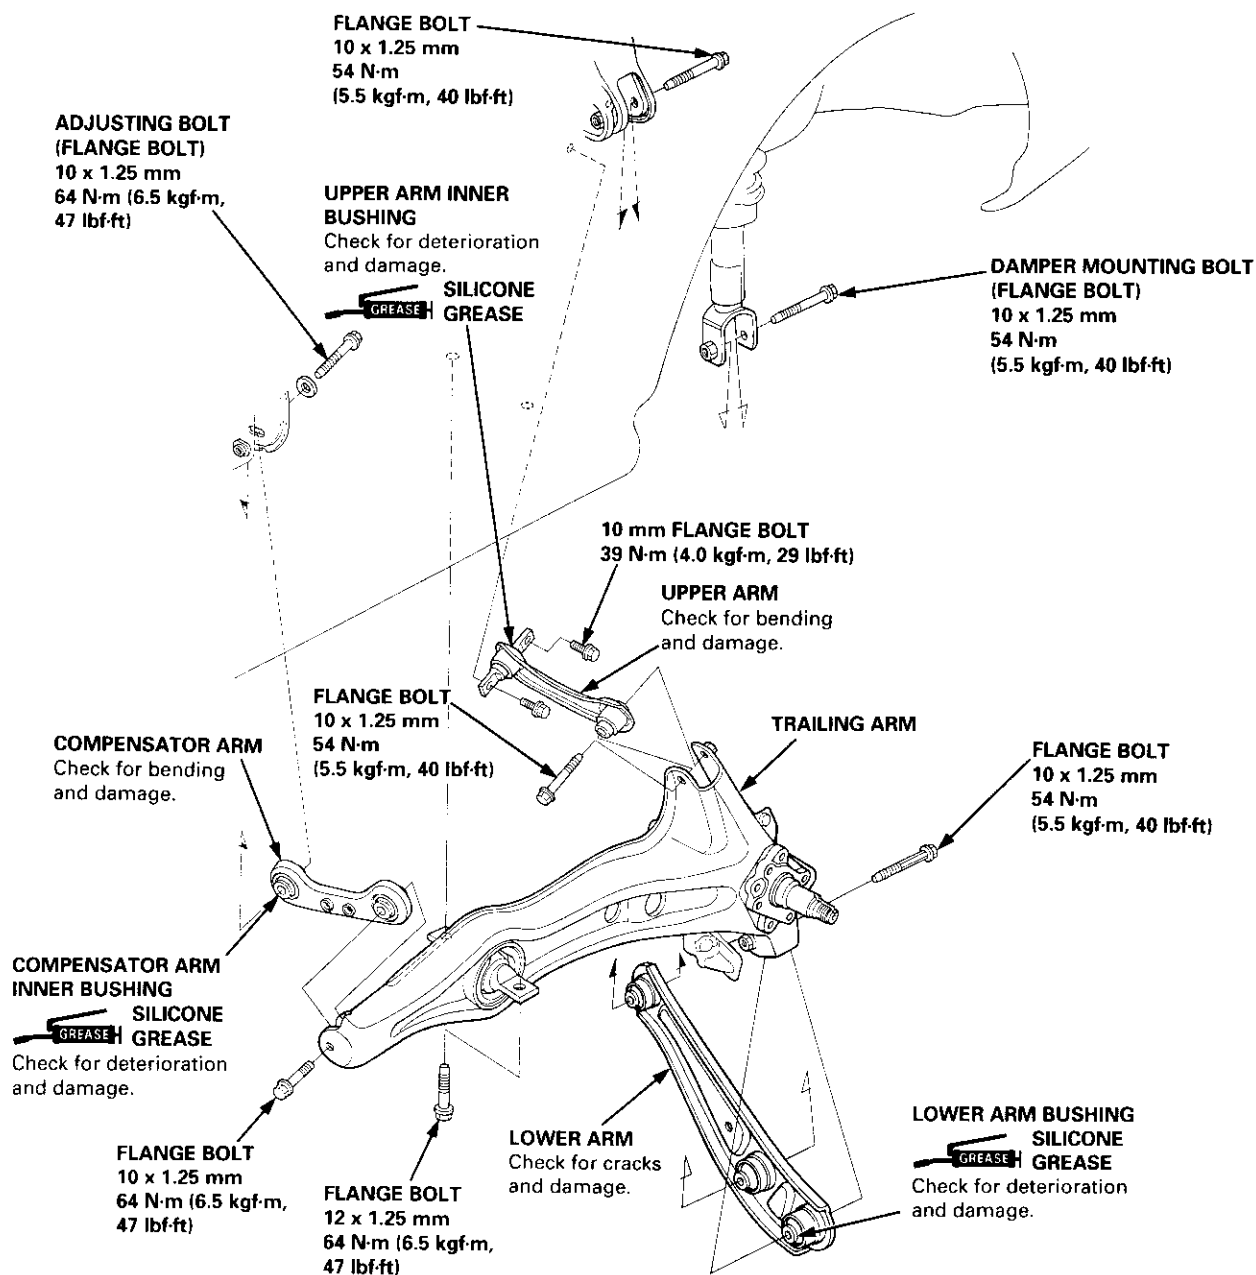




Hub Bearing Unit Replacement

NOTE:

- Use only genuine Honda wheel weights for aluminum wheels. Non-genuine wheel weights may corrode and damage the aluminum wheels.
- On the aluminum wheels, remove the center cap from the inside of the wheel after removing the wheel.
- Before installing the brake drum, clean the mating surfaces of the rear hub and the brake drum.
- Before installing the wheel, clean the mating surfaces of the brake drum and wheel.

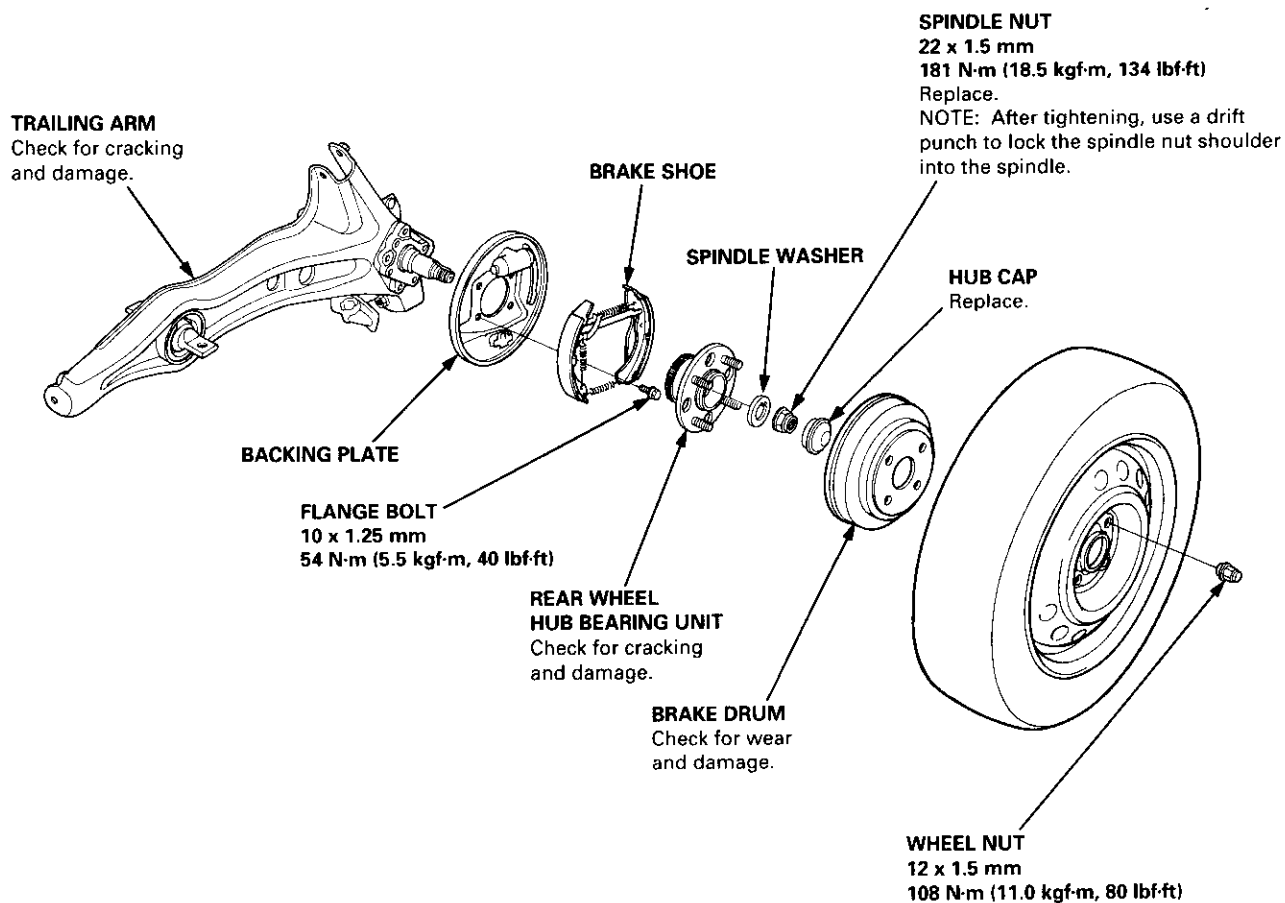

(cont'd)

Rear Suspension

Hub Bearing Unit Replacement (cont'd)

1. Loosen the wheel nuts slightly.
2. Raise the rear of vehicle, and support it with safety stands in the proper locations (see section 1).
3. Remove the wheel nuts and rear wheel.

SPINDLE NUT

22 x 1.5 mm
181 N·m (18.5 kgf·m, 134 lbf·ft)
Replace.

NOTE: After tightening, use a drift to stake the spindle nut shoulder against the spindle.

HUB CAP


Replace.

NOTE: Take care not to damage the hub bearing unit on disassembly.

WHEEL NUT

12 x 1.5 mm
108 N·m (11.0 kgf·m, 80 lbf·ft)


4. Pull the parking brake lever up.
5. Remove the hub cap.
6. Raise the locking tab on the spindle nut, then remove the nut.
7. Release the parking brake lever.
8. Remove the brake drum, hub bearing unit and spindle washer.

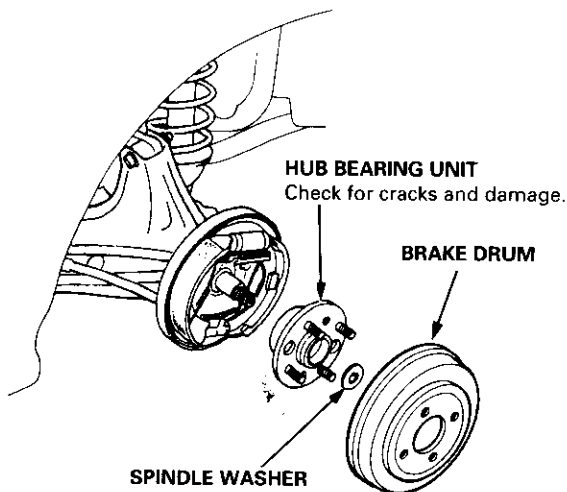


9. Install in the reverse order of removal.

Upper Arm Bushing Replacement

1. Remove the upper arm bushing and inner bushing as shown.

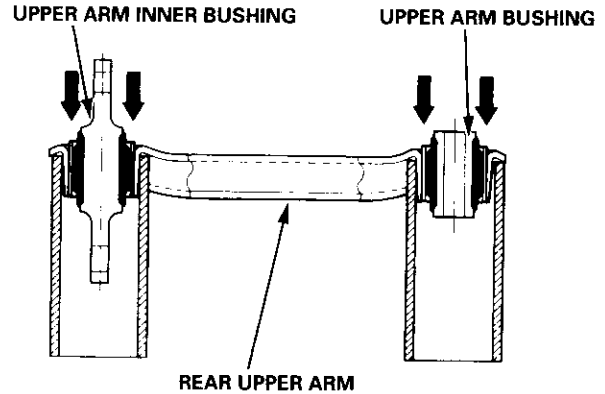


2. Mark a scribe line on the upper arm inner bushing so that it is in line with the bolt mounting surface.
3. Mark on the upper arm at two points so that they are in line and make a right angle with the arm as shown.

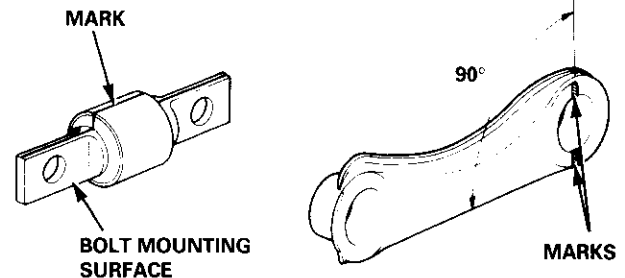

4. Drive in the upper arm inner bushing with the marks aligned.
5. Drive the upper arm bushing into the upper arm.

NOTE: Drive in the upper arm bushing and inner bushing until their leading edges are flush with the upper arm.

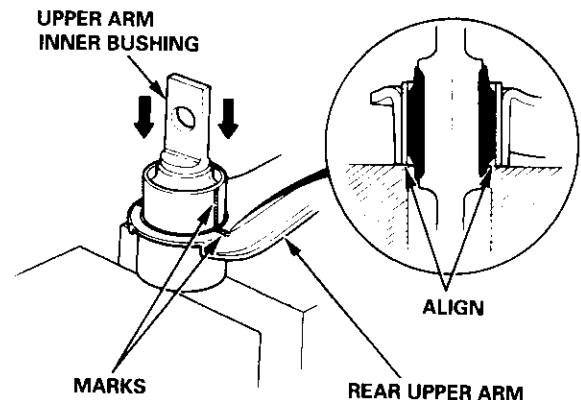


Rear Damper




Removal

1. Remove the rear wheels (see page 18-22).
2. Remove the speaker cover and speaker (Hatchback).
Sedan and Coupe: Remove the trunk side panel (see section 20).
3. Remove the two flange nuts.

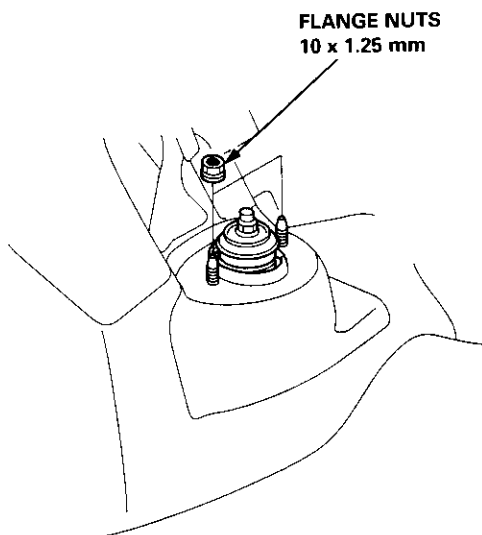


4. Remove the flange bolt from the damper.

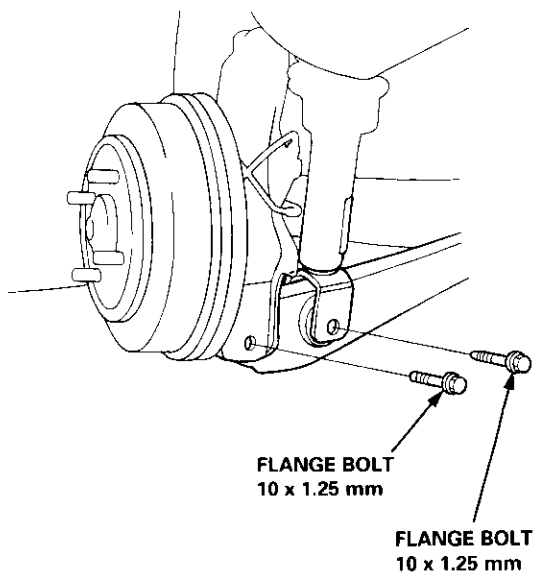

5. Remove the flange bolt that connects the lower arm to the trailing arm.

6. Lower the rear suspension, and remove the damper.

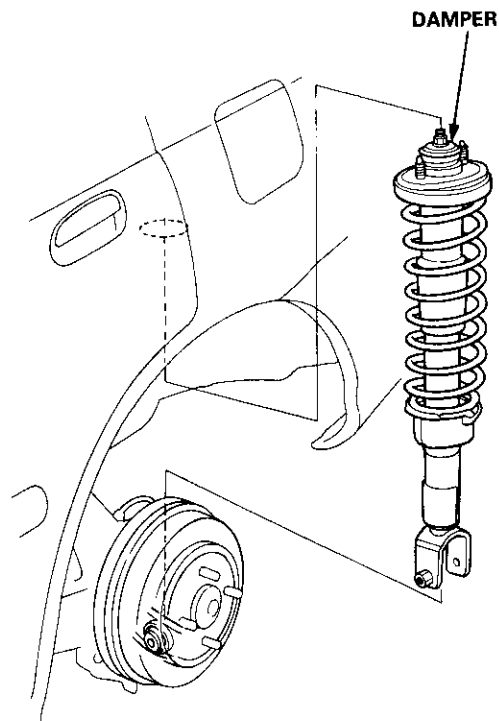


Rear Damper

Disassembly/Inspection

Disassembly

1. Compress the damper spring with the spring compressor according to the manufacturer's instructions, then remove the self-locking nut.

CAUTION: Do not compress the spring more than necessary to remove the self-locking nut.

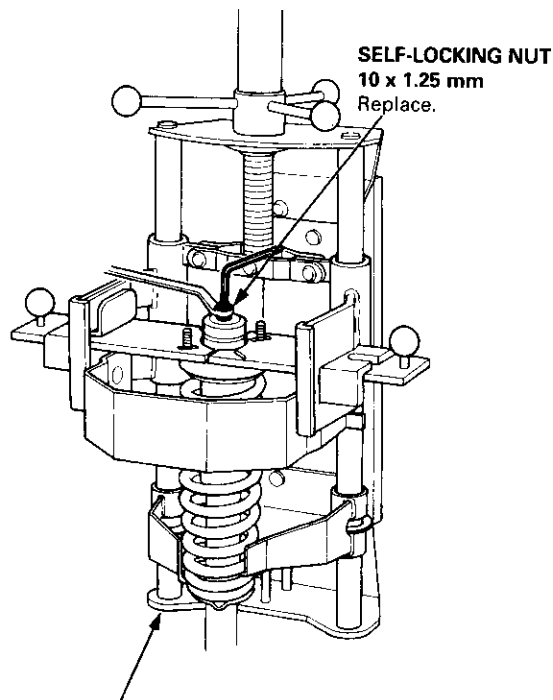


STRUT SPRING COMPRESSOR:
(Commercially available)
BRANICK® T/N MST-580A, T/N 7200, or equivalent

2. Release the pressure from the spring compressor, then disassemble the damper as shown on page 18-25.

Inspection

1. Reassemble all parts, except the spring.
2. Push on the damper as shown.

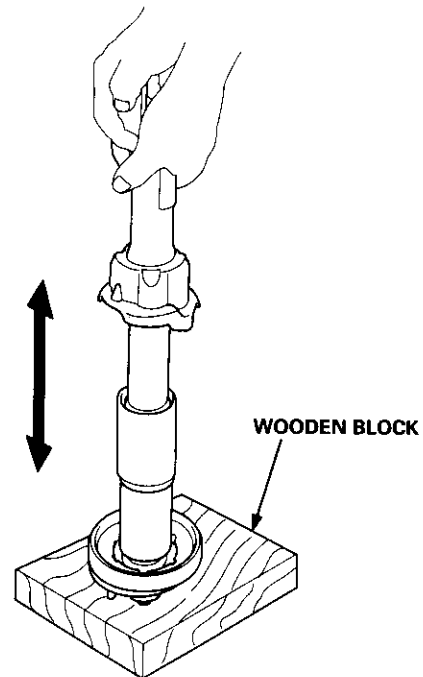


3. Check for smooth operation through a full stroke, both compression and extension.

NOTE: The damper should move smoothly. If it does not (no compression or no extension), the gas is leaking, and the damper should be replaced.

4. Check for oil leaks, abnormal noises and binding during these tests.



Reassembly

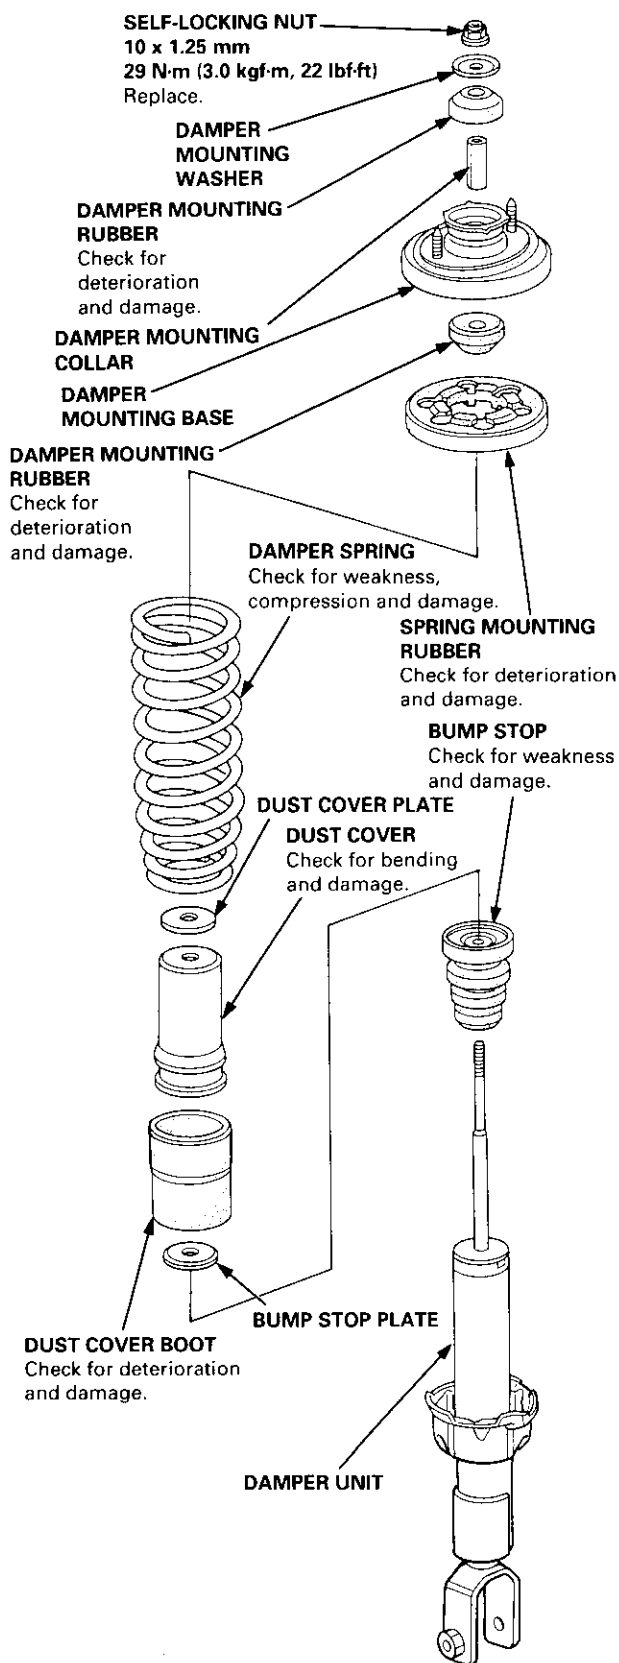


1. Install the damper unit on a spring compressor.

NOTE: Follow the manufacturer's instructions.

2. Assemble the rear damper in reverse order of disassembly except the damper mounting washer and self-locking nut.


NOTE: Align the bottom of damper spring and spring lower seat as shown.

3. Position the damper mounting base on the damper unit as shown.

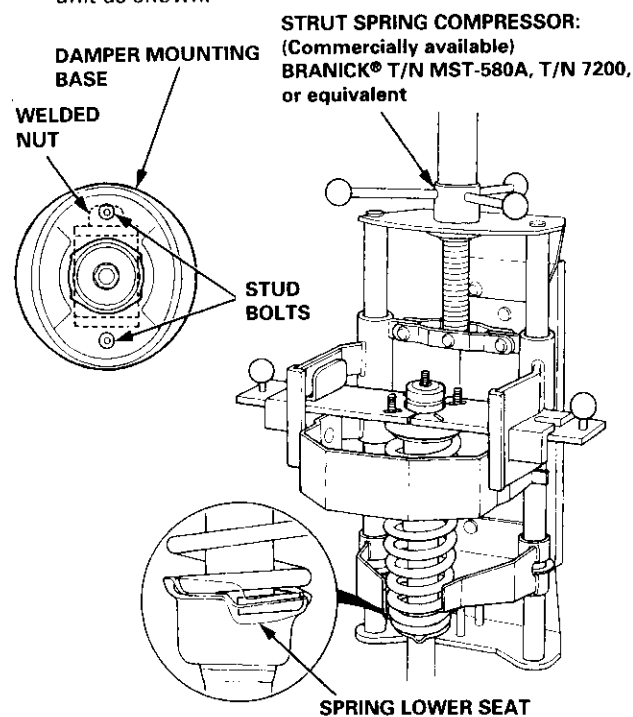

4. Compress the damper spring with the spring compressor.
5. Install the damper mounting washer, and loosely install a new self-locking nut.
6. Hold the damper shaft with a hex wrench and tighten the self-locking nut.


SELF-LOCKING NUT
10 x 1.25 mm
29 N-m (3.0 kgf-m, 22 lbf-ft)
Replace.

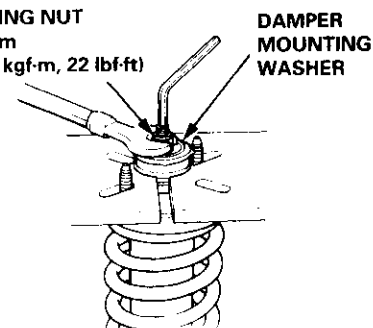


Rear Damper

Installation


1. Lower the rear suspension, and position the damper with the spring stop pointed toward the left side of the vehicle.

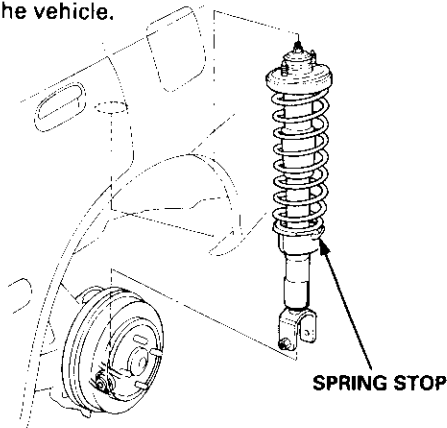

2. Loosely install the two flange nuts.

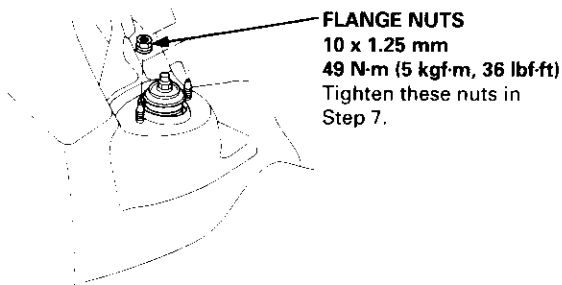

3. Loosely install the flange bolt.

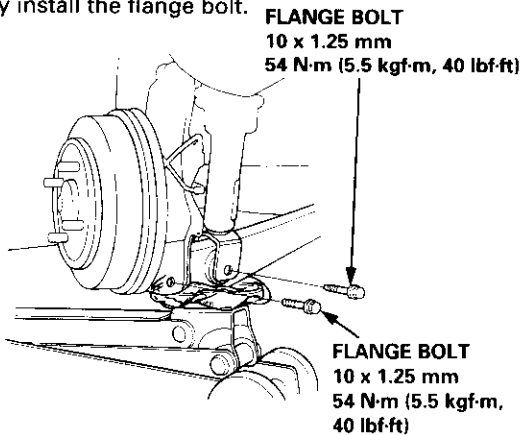

4. Raise the rear suspension with a floor jack until the vehicle just lifts off the safety stand.

⚠ WARNING The floor jack must be securely positioned or personal injury may result.

5. Tighten the flange bolt.
6. Tighten the two flange nuts on top of the damper to the specified torque.
7. Check the rear wheel alignment and adjust if necessary (see page 18-4).

Brakes

Conventional Brakes	19-1
Anti-lock Brake System (ABS)	19-31



Conventional Brake


Special Tools	19-2
Component Locations	
Index	19-3
Inspection and Adjustment	
Brake System Rubber Parts and Brake Booster	19-4
Brake Pedal	19-5
Parking Brake	19-6
Bleeding	19-7
Front Brake Pads	
Inspection and Replacement	19-8
Front Brake Disc	
Disc Runout Inspection	19-12
Disc Thickness and Parallelism Inspection	19-12
Front Brake Caliper	
Disassembly	19-13
Reassembly	19-16
Master Cylinder/Brake Booster	
Removal/Installation	19-21
Pushrod Clearance Adjustment	19-22
Brake Booster Inspection	19-23

Rear Drum Brake	
Index/Inspection	19-24
Inspection	19-25
Brake Shoe Disassembly	19-26
Brake Shoe Reassembly	19-26
Brake Hoses/Lines	
Inspection/Torque Specifications	19-28
Hose Replacement	19-29
Parking Brake Cable	
Inspection and Replacement	19-30



Special Tools

Ref. No.	Tool Number	Description	Qty	Page Reference
①	07JAG - SD40100	Pushrod Adjustment Gauge	1	19-22

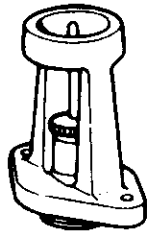


①

Component Locations



Index

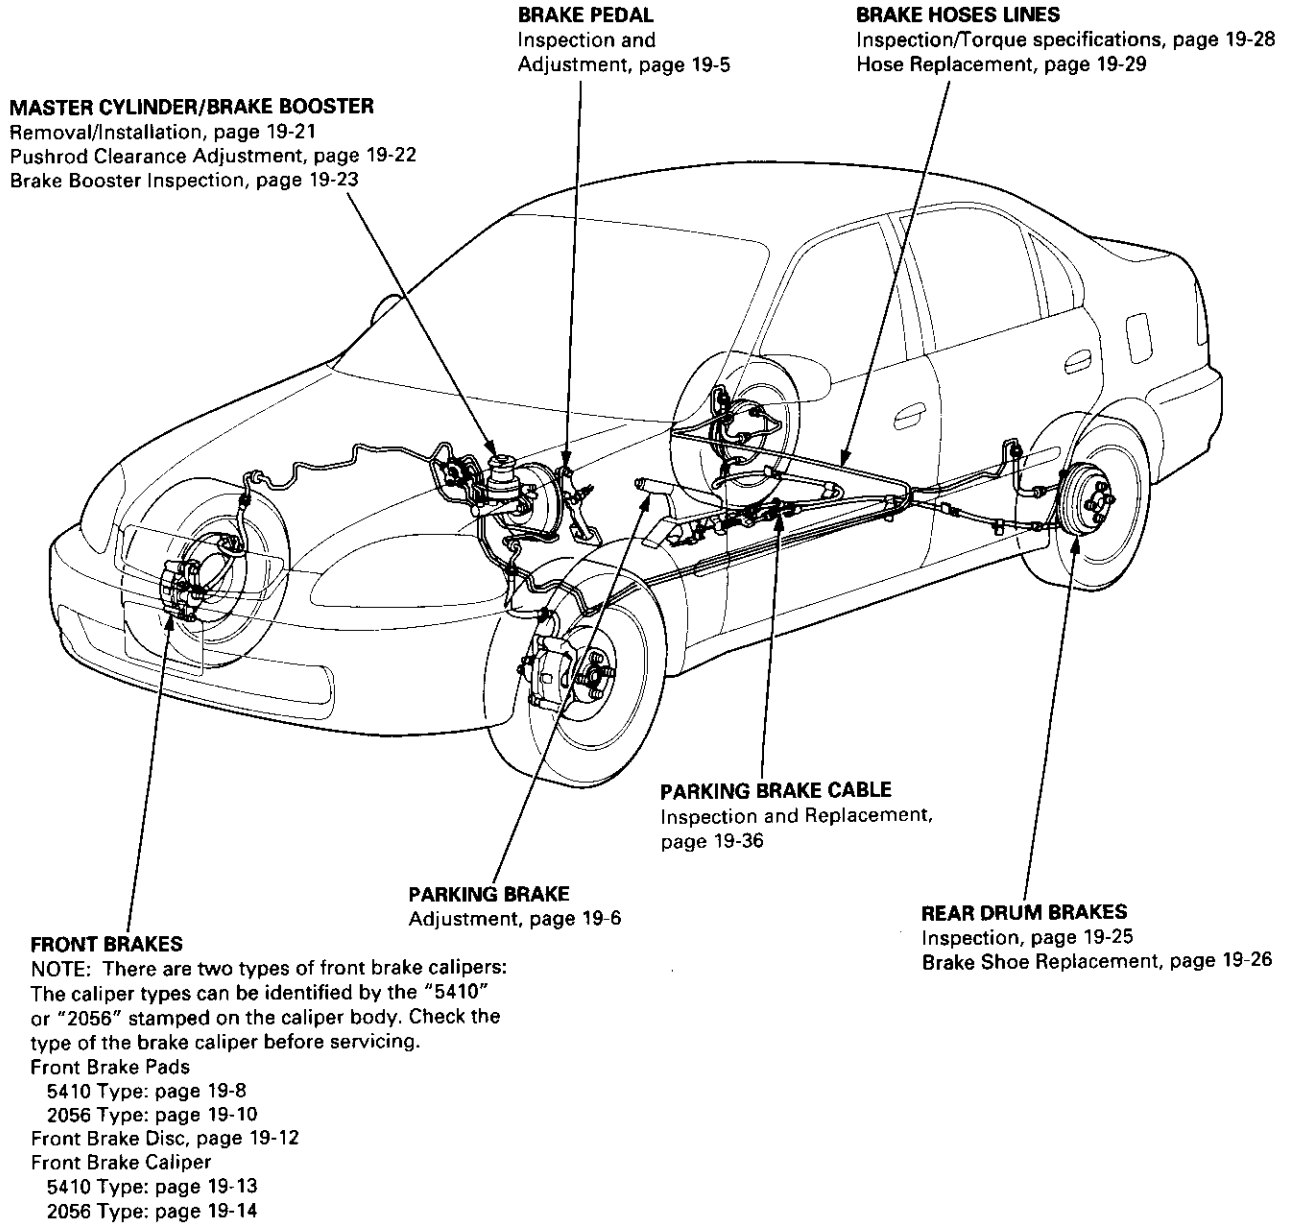

Inspection and Adjustment

Brake System Rubber Parts and Brake Booster

A Brake Booster

Check brake operation by applying the brakes. If the brakes do not work properly, check the brake booster. Replace the brake booster as an assembly if it does not work properly or if there are signs of leakage.

B Piston Cup and Pressure Cup Inspection

- Check brake operation by applying the brakes. Visually check for damage or signs of fluid leakage. Replace the master cylinder as an assembly if the pedal does not work properly or if there is damage or signs of fluid leakage.
- Check for a difference in brake pedal stroke between quick and slow brake applications. Replace the master cylinder if there is a difference in pedal stroke.

C Brake Hoses


Visually check for damage or signs of fluid leakage. Replace the brake hose with a new one if it is damaged or leaking.

D Caliper Piston Seal and Piston Boots

Check brake operation by applying the brakes. Visually check for damage or signs of fluid leakage. If the pedal does not operate properly, the brakes drag, or there is damage or signs of fluid leakage, disassemble and inspect the brake caliper. Replace the boots and seals with new ones whenever the brake caliper is disassembled.

E Wheel Cylinder Piston Cup and Dust Cover

Check brake operation by applying the brakes. Visually check for damage or signs of fluid leakage. If the pedal does not operate properly, the brakes drag, or there is damage or signs of fluid leakage, disassemble and inspect the wheel cylinder. If necessary, replace the wheel cylinder as an assembly.

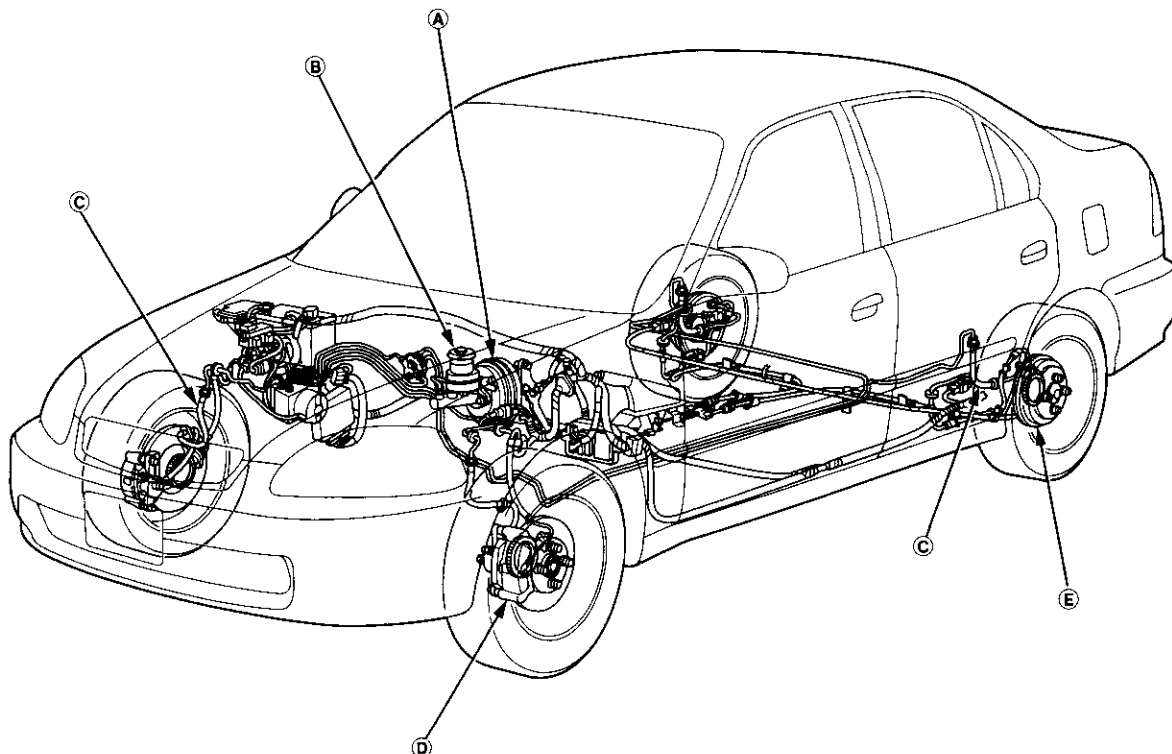




Brake Pedal

Pedal Height

1. Disconnect the brake switch connector, loosen the brake switch locknut, and back off the brake switch until it is no longer touching the brake pedal.
2. At the carpet cutout, measure the pedal height from the right side center of the pedal pad.

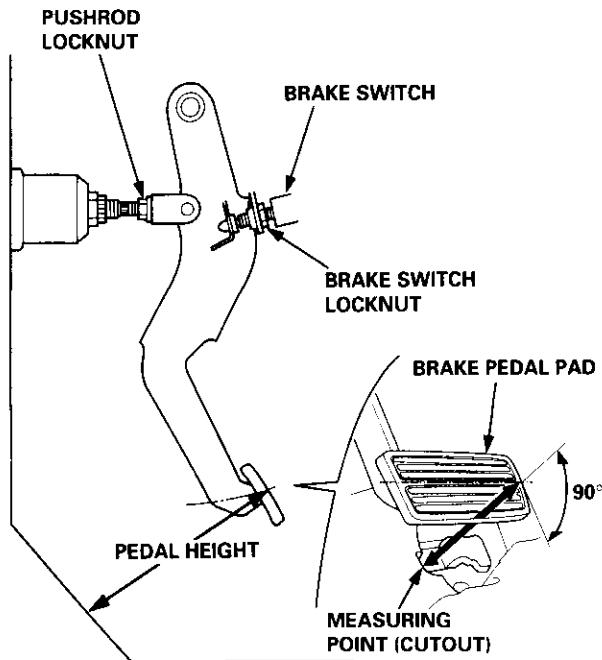


Standard Pedal Height (with carpet removed):

M/T: 156.5 mm (6.16 in)
 A/T, CVT: 161 mm (6 5/16 in)


3. Loosen the pushrod locknut, and screw the pushrod in or out with pliers until the standard pedal height from the floor is reached. After adjustment, tighten the locknut firmly.

NOTE: Do not adjust the pedal height with the pushrod depressed.

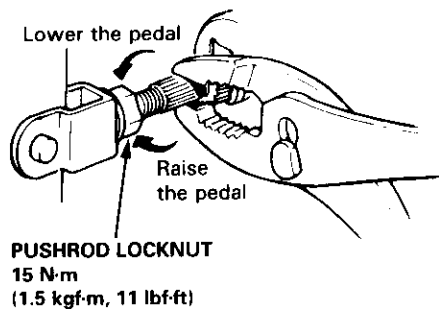

4. Screw in the brake switch until its plunger is fully depressed (threaded end touching the pad on the pedal arm). Then back off the switch 1/4 turn to make 0.3 mm (0.01 in) of clearance between the threaded end and pad. Tighten the locknut firmly. Connect the brake switch connector.

CAUTION: Make sure that the brake lights go off when the pedal is released.

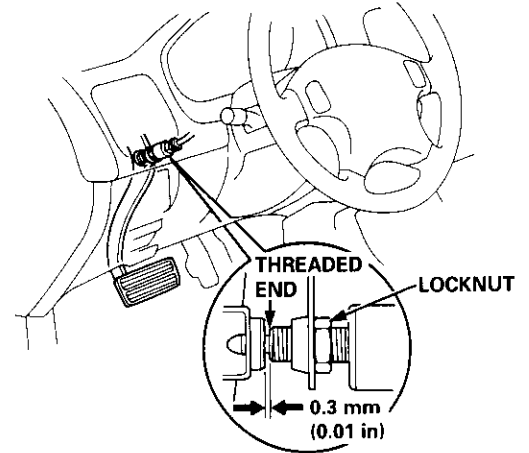

5. Check the brake pedal free play as described below.


Pedal Free Play

1. With the engine off, inspect the play on the pedal pad by pushing the pedal by hand.

Free Play: 1 – 5 mm (1/16 – 3/16 in)

2. If the pedal free play is out of specification, adjust the brake switch.

CAUTION: If the pedal free play is insufficient, it may result in brake drag.

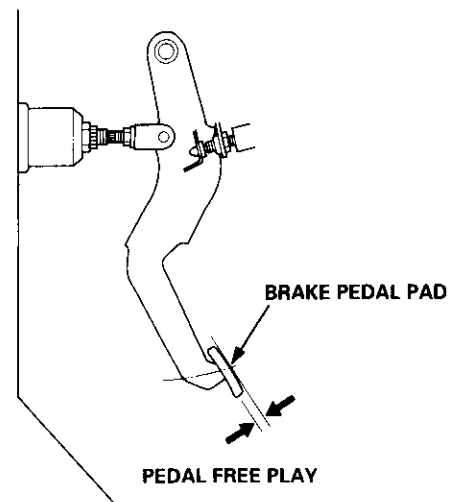


Inspection and Adjustment

Parking Brake

Inspection

1. Pull the parking brake lever with 196 N (20 kgf, 44 lbf) force to fully apply the parking brake. The parking brake lever should be locked within the specified notches.

Lever Locked Notches: 6 – 9

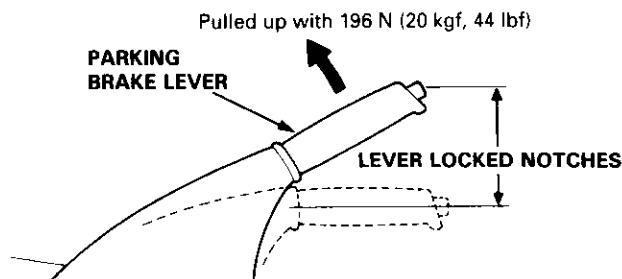

2. Adjust the parking brake if the lever notches are out of specification.


Adjustment

NOTE: After rear brake shoe servicing, loosen the parking brake adjusting nut, start the engine, and depress the brake pedal several times to set the self-adjusting brake before adjusting the parking brake.

1. Raise the rear wheels off the ground, and support the vehicle on safety stands.

▲ WARNING Block the front wheels before jacking up the rear of the vehicle.

2. Remove the rear console (see section 20).
3. Pull the parking brake lever up one notch.
4. Tighten the adjusting nut until the rear wheels drag slightly when turned.

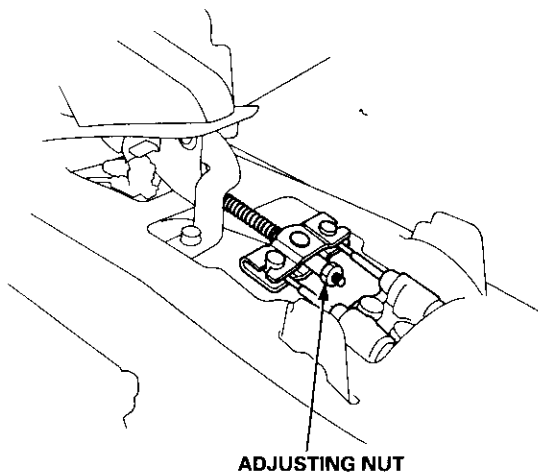

5. Release the parking brake lever fully, and check that the rear wheels do not drag when turned. Readjust if necessary.
6. Make sure that the parking brakes are fully applied when the parking brake lever is pulled up fully.
7. Reinstall the rear console.




Bleeding

CAUTION:

- Always use Genuine Honda DOT 3 Brake Fluid. Using a non-Honda brake fluid can cause corrosion and decrease the life of the system.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not spill brake fluid on the vehicle, it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.


NOTE: The reservoir on the master cylinder must be at the MAX (upper) level mark at the start of the bleeding procedure and checked after bleeding each brake caliper. Add fluid as required.

1. Make sure the brake fluid level in the reservoir is at the MAX (upper) level line.

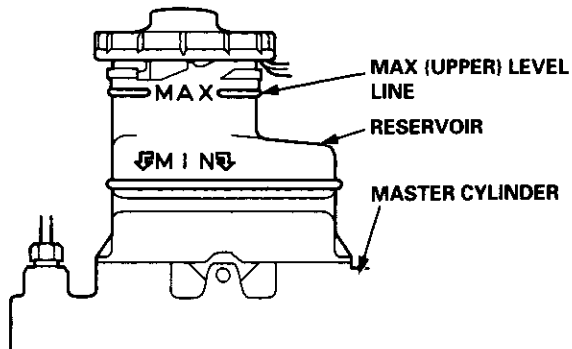


2. Have someone slowly pump the brake pedal several times, then apply steady pressure.
3. Loosen the brake bleed screw to allow air to escape from the system. Then tighten the bleed screw securely.
4. Repeat the procedure for each wheel in the sequence shown below until air bubbles no longer appear in the fluid.
5. Refill the master cylinder reservoir to the MAX (upper) level line.

BLEEDING SEQUENCE:

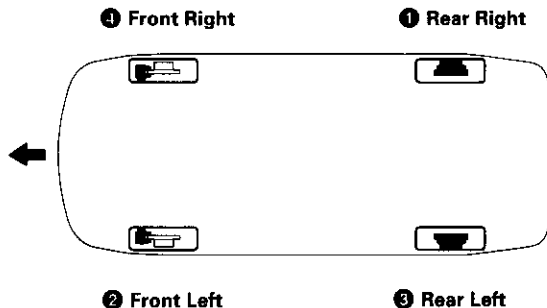


FRONT:

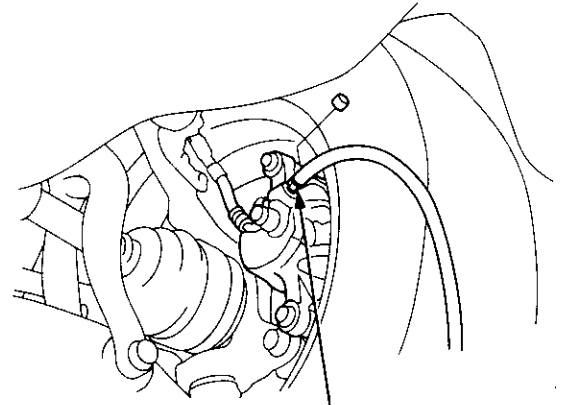

BLEED SCREW
9 N·m (0.9 kgf·m, 6.5 lbf·ft)

REAR:

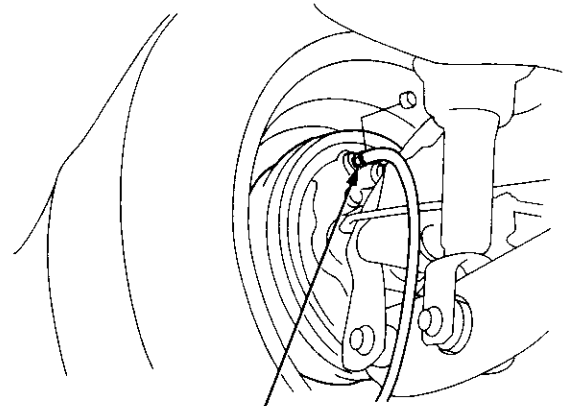


BLEED SCREW
7 N·m (0.7 kgf·m, 5 lbf·ft)

Front Brake Pads

Inspection and Replacement

NOTE: There are two types of front brake calipers: The caliper types can be identified by the "5410" or "2056" stamped on the caliper body as shown below. Check the type of the brake caliper before servicing.

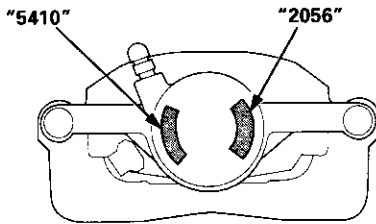


5410 Type:

NOTE: For 2056 type disassembly procedures, see page 19-10.

⚠ WARNING

- Never use an air hose or dry brush to clean brake assemblies.
- Use an OSHA approved vacuum cleaner to avoid breathing brake dust.


1. Loosen the front wheel nuts slightly, then raise the vehicle, and support it on safety stands. Remove the front wheels.
2. Remove the brake hose bracket from the knuckle.
3. Remove the caliper bolt, and pivot the caliper up out of the way.

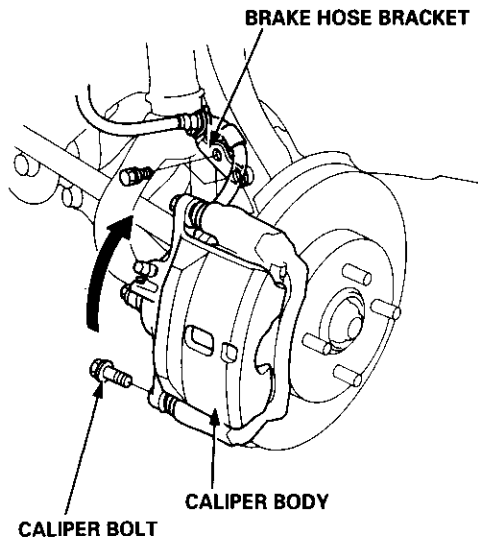

NOTE: Check the hoses and pin boots for damage and deterioration.

4. Remove the pad shim, pad retainers and pads.

NOTE: When the caliper is equipped with an outer pad shim, replace the shim together with the pads as a set.

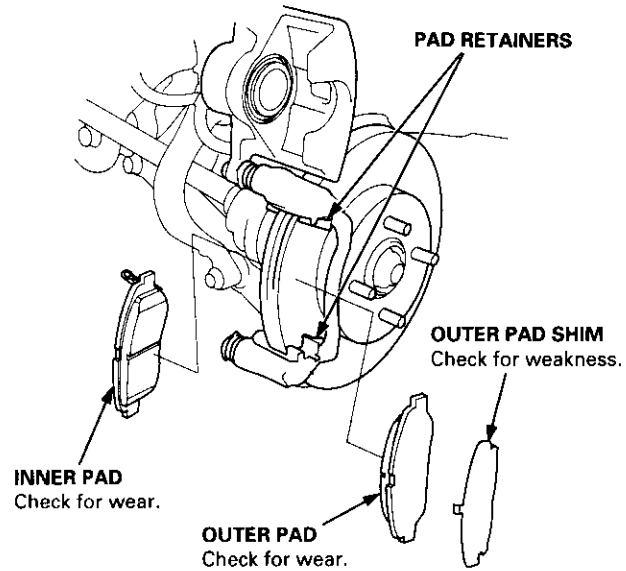


5. Using vernier calipers, measure the thickness of each brake pad lining.

Brake Pad Thickness:

Standard: 9.5 - 10.5 mm (0.37 - 0.41 in)

Service Limit: 1.6 mm (0.06 in)

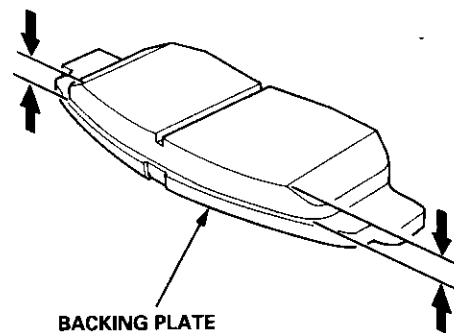


NOTE: Measurement does not include pad backing plate thickness.

6. If the brake pad thickness is less than service limit, replace the front pads as a set.




7. Clean the caliper thoroughly; remove any rust, and check for grooves and cracks.
8. Check the brake disc for damage and cracks.
9. Install the pad retainers.

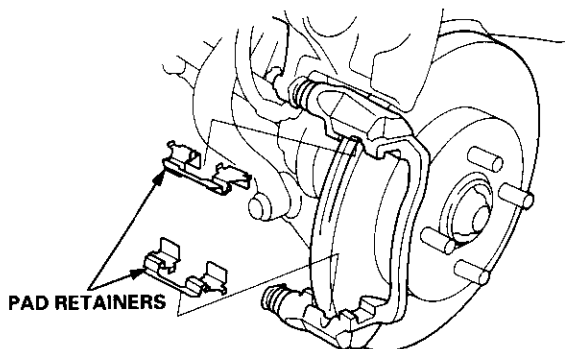

10. Apply grease to the points indicated by the arrows in the following illustration:

NOTE: Use the pad grease included in the pad set or Molykote M77 grease, and apply a thin coat of grease evenly to the designated points.

- Piston end and inner pad contact surface
- Pad and caliper bracket contact surface
- Outer pad and caliper body contact surface
- Outer pad shim and outer pad contact surface
- Outer pad shim and caliper body contact surface

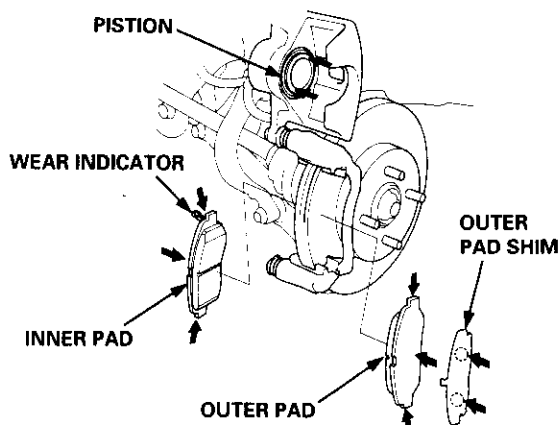


11. Install the brake pads and pad shim correctly.

⚠ WARNING

- When reusing the pads, always reinstall the brake pads in their original positions to prevent loss of braking efficiency.
- Contaminated brake discs or pads reduce stopping ability. Keep grease off the discs and pads.

NOTE: Install the pad with the wear indicator on the inside.

12. Push in the piston so that the caliper will fit over the pads. Make sure that the piston boot is in position to prevent damaging it when pivoting the caliper down.

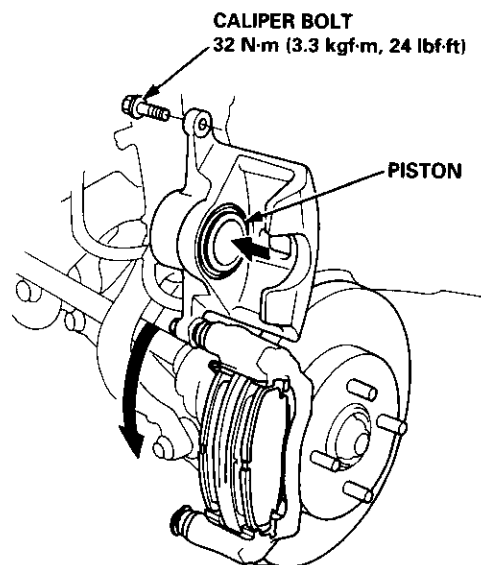

13. Pivot the caliper down into position, then install caliper bolt and tighten it.

CAUTION: Be careful not damage the pin boot when pivoting the caliper down.

14. Install the brake hose bracket on the knuckle.

NOTE: Inspect the brake hose for interference or twisting.

15. Depress the brake pedal several times to make sure the brakes work, then test-drive.

NOTE: Engagement of the brake may require a greater pedal stroke immediately after the brake pads have been replaced as a set. Several applications of the brake pedal will restore the normal pedal stroke.

16. After installation, check for leaks at hose and line joints or connections, and retighten if necessary.

(cont'd)

Front Brake Pads


Inspection and Replacement (cont'd)

2056 Type:

WARNING

- Never use an air hose or dry brush to clean brake assemblies.
- Use an OSHA approved vacuum cleaner to avoid breathing brake dust.


1. Loosen the front wheel nuts slightly, then raise the vehicle, and support it on safety stands. Remove the front wheels.
2. Remove the brake hose bracket from the knuckle.
3. Remove the caliper bolt B, and pivot the caliper up out of the way.

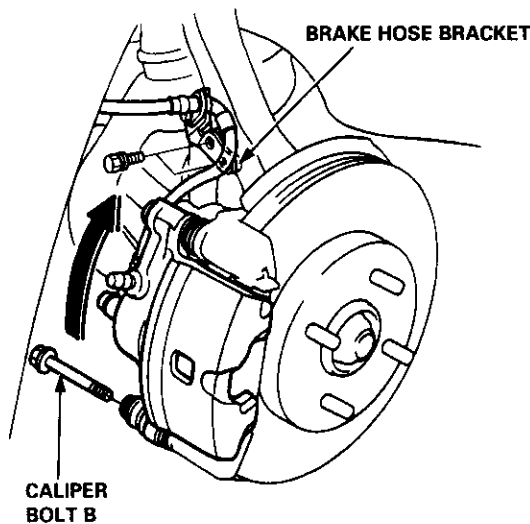

NOTE: Check the hoses and pin boots for damage and deterioration.

4. Remove the pad shim, pad retainers and pads.

NOTE: When replacing the pads, replace the shim together with the pads as a set.

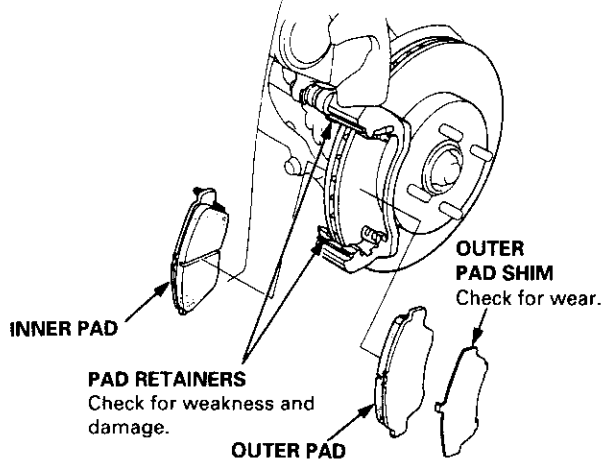


5. Using vernier calipers, measure the thickness of each brake pad lining.

Brake Pad Thickness:


Standard: 8.5 – 9.5 mm (0.33 – 0.37 in)

Service Limit: 1.6 mm (0.06 in)

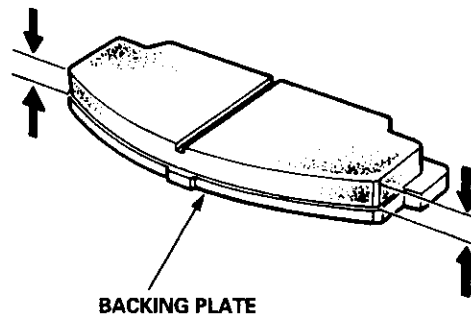

NOTE: Measurement does not include pad backing plate thickness.

6. If the brake pad thickness is less than service limit, replace the front pads as a set.
7. Clean the caliper thoroughly; remove any rust, and check for grooves and cracks.
8. Check the brake disc for damage and cracks.
9. Install the pad retainers.

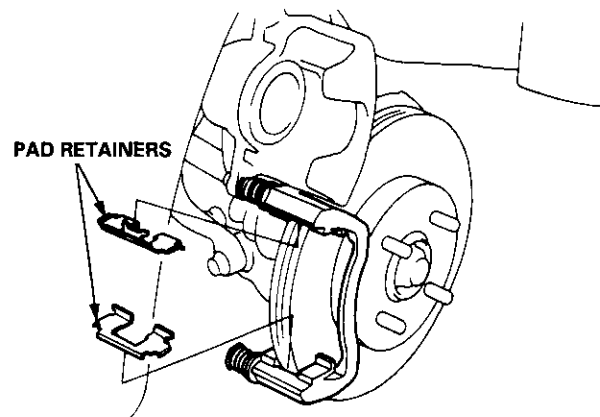




10. Apply grease to the points indicated by the arrows in the following illustration:

NOTE: Use the pad grease included in the pad set or Molykote M77 grease, and apply a thin coat of grease evenly to the designated points.

- Piston end and inner pad contact surface
- Pad and caliper bracket contact surface
- Outer pad and caliper body contact surface
- Outer pad shim and outer pad contact surface
- Outer pad shim and caliper body contact surface

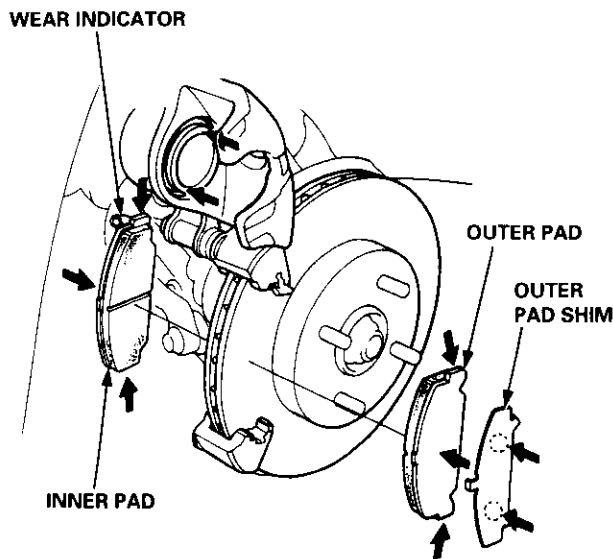


11. Install the brake pads and pad shim correctly.

▲ WARNING

- When reusing the pads, always reinstall the brake pads in their original positions to prevent loss of braking efficiency.
- Contaminated brake discs or pads reduce stopping ability. Keep grease off the discs and pads.

NOTE: Install the pad with the wear indicator on the inside.

12. Push in the piston so that the caliper will fit over the pads. Make sure that the piston boot is in position to prevent damaging it when pivoting the caliper down.

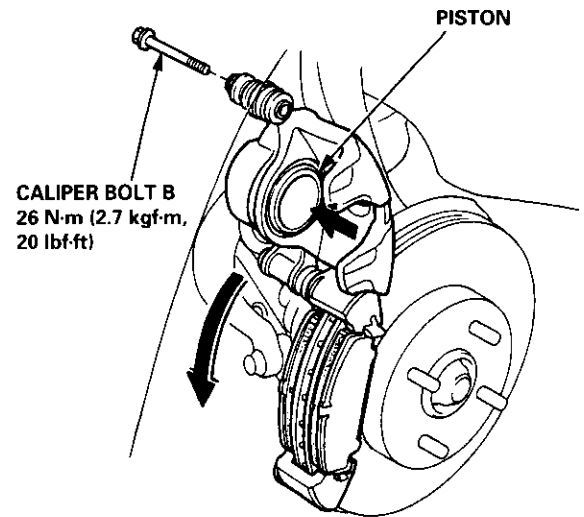

13. Pivot the caliper down into position, then install caliper bolt B and tighten it.

14. Install the brake hose bracket on the knuckle.

NOTE: Inspect the brake hose for interference and twisting.

15. Depress the brake pedal several times to make sure the brakes work, then road-test.

NOTE: Engagement of the brake may require a greater pedal stroke immediately after the brake pads have been replaced as a set. Several applications of the brake pedal will restore the normal pedal stroke.


16. After installation, check for leaks at hose and line joints and connections, and retighten if necessary.

Front Brake Disc

Disc Runout Inspection

1. Loosen the front wheel nuts slightly, then raise the vehicle, and support it on safety stands. Remove the front wheels.
2. Remove the brake pads (see page 19-8).
3. Inspect the disc surface for damage and cracks. Clean the disc thoroughly and remove all rust.
4. Use wheel nuts and suitable plain washers to hold the disc securely against the hub, then mount a dial indicator as shown, and measure the runout at 10 mm (0.4 in) from the outer edge of the disc.

Brake Disc Runout:
Service Limit: 0.10 mm (0.004 in)

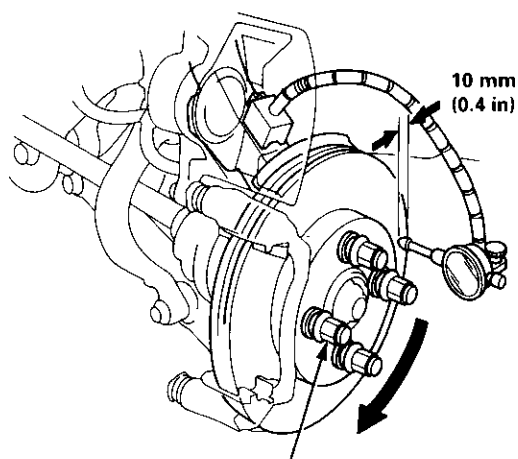

**WHEEL NUT AND
PLAIN WASHER**
108 N·m
(11 kgf·m, 80 lbf·ft)


5. If the disc is beyond the service limit, refinish the brake disc with an on-car brake lathe. The Kwik-Lathe produced by Kwik-way manufacturing Co. and the "Front Brake Disc Lathe" offered by Snap-on Tools Co. are approved for this operation.

Max. Refinish Limit: 19.0 mm (0.75 in)

NOTE: A new disc should be refinished if its runout is greater than 0.10 mm (0.004 in)

Disc Thickness and Parallelism Inspection

1. Loosen the front wheel nuts slightly, then raise the vehicle, and support it on safety stands. Remove the front wheels.
2. Remove the brake pads (see page 19-8).
3. Using a micrometer, measure disc thickness at eight points, approximately 45° apart and 10 mm (0.4 in) in from the outer edge of the disc.

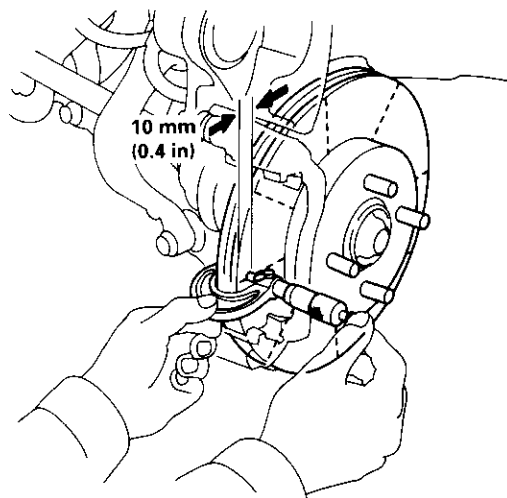

Brake Disc Thickness:
Standard: 20.9 – 21.8 mm (0.82 – 0.86 in)
Max. Refinishing Limit: 19.0 mm (0.75 in)

NOTE: Replace the brake disc if the smallest measurement is less than the max. refinishing limit.

Brake Disc Parallelism: 0.015 mm (0.0006 in) max.

NOTE: This is the maximum allowable difference between the thickness measurements.

4. If the disc is beyond the service limit for parallelism, refinish the brake disc with an on-car brake lathe. The Kwik-Lathe produced by Kwik-Way Manufacturing Co. and the "Front Brake Disc Lathe" offered by Snap-on Tools Co. are approved for this operation.


NOTE: See section 18 for brake disc replacement.

Front Brake Caliper



Disassembly

NOTE: There are two types of front brake calipers: The caliper types can be identified by the "5410" or "2056" stamped on the caliper body as shown below. Check the type of the brake caliper before servicing.

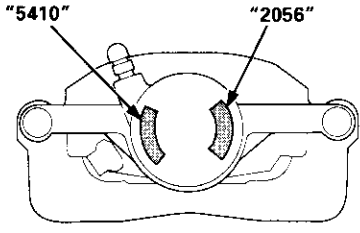

5410 Type:

NOTE: For 2056 type disassembly procedures, see page 19-13.


⚠ WARNING

- Never use an air hose or dry brush to clean brake assemblies.
- Use an OSHA approved vacuum cleaner to avoid breathing brake dust.

CAUTION:


- Do not spill brake fluid on the vehicle; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- To prevent spills, cover the hose joints with rags or shop towels.
- Clean all parts in brake fluid and air dry; blow out all passages with compressed air.

1. Remove the banjo bolt, and disconnect the brake hose from the caliper.

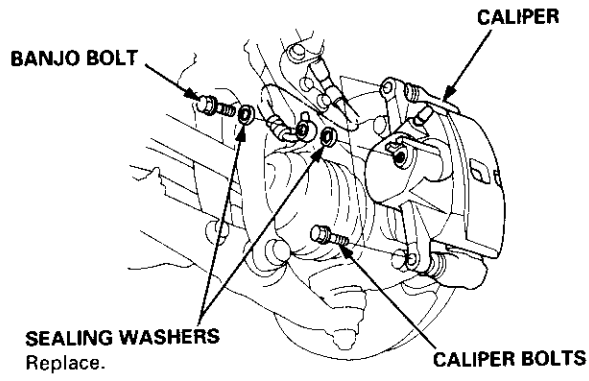

2. Remove the caliper bolts, then remove the caliper from the bracket.


3. Remove the caliper pins and pin boots from the caliper bracket.

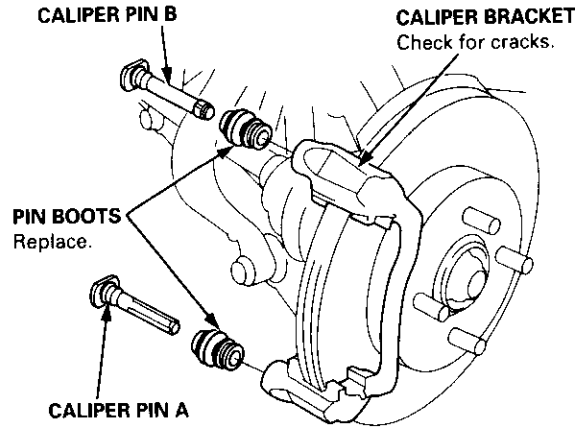

4. If necessary, apply compressed air to the caliper fluid inlet to get the piston out. Place a shop rag or wooden block as shown to cushion the piston when it is expelled. Use low pressure air in short spurts.


⚠ WARNING

- Do not place your fingers in front of the piston.
- Do not use high air pressure; use an OSHA approved 30 PSI nozzle.

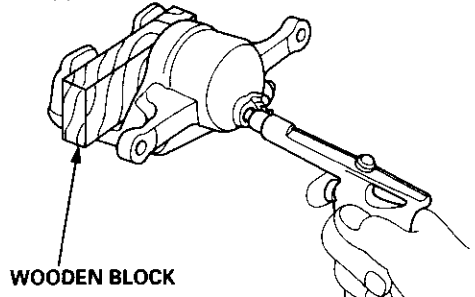

5. Remove the piston from the caliper, and check the piston for scoring.
6. Remove the boot clip, piston boot and piston seal.

CAUTION: Take care not to damage the cylinder bore.

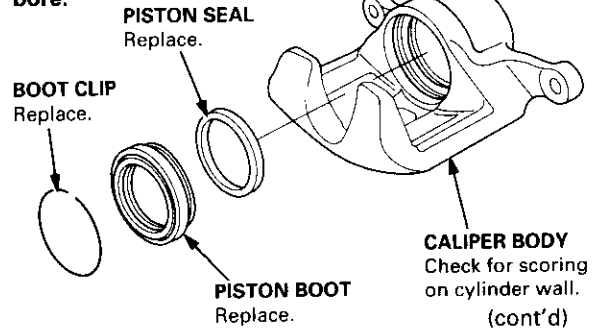

Front Brake Caliper

Disassembly (cont'd)

2056 Type:


⚠ WARNING

- Never use an air hose or dry brush to clean brake assemblies.
- Use an OSHA approved vacuum cleaner to avoid breathing brake dust.


CAUTION:

- Do not spill brake fluid on the vehicle; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- To prevent spills, cover the hose joints with rags or shop towels.
- Clean all parts in brake fluid and air dry; blow out all passages with compressed air.


1. Remove the banjo bolt, and disconnect the brake hose from the caliper.

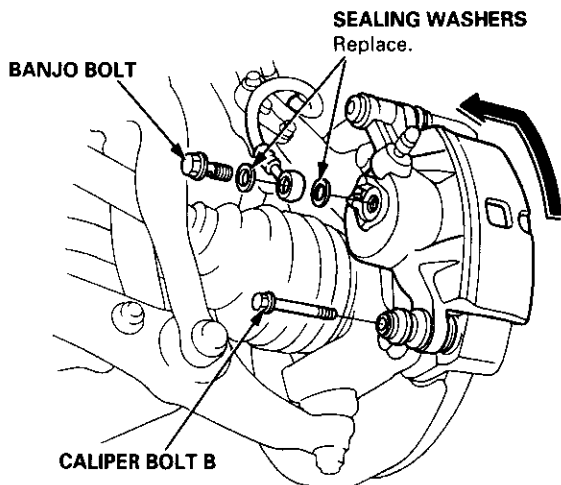

2. Remove caliper bolt B, pivot the caliper up out of the way, then remove the caliper from the bracket.
3. Remove the guide pin boot from sleeve A on the caliper bracket.

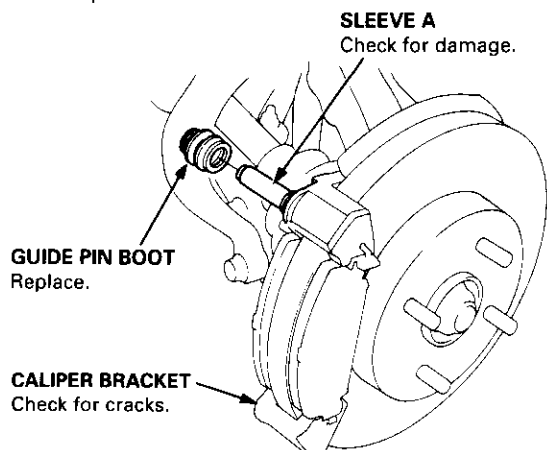


4. Remove the pin boot, sleeve B and sleeve boot from the caliper body.

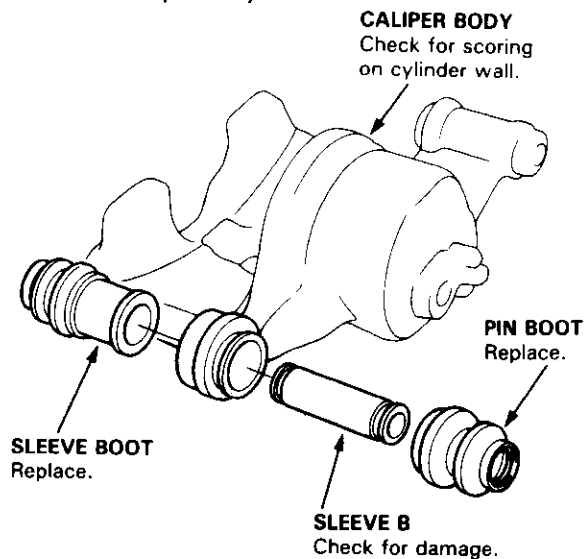

5. If necessary, apply compressed air to the caliper fluid inlet to get the piston out. Place a shop rag or wooden block as shown to cushion the piston when it is expelled. Use low pressure air in short spurts.

⚠ WARNING

- Do not place your fingers in front of the piston.
- Do not use high air pressure; use an OSHA approved 30 PSI nozzle.

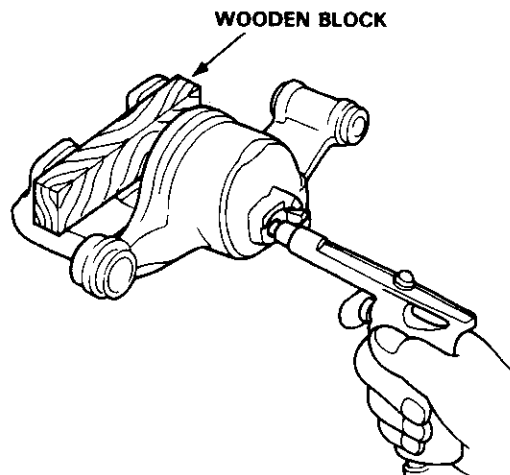


6. Remove the piston from the caliper, and check the piston for scoring.



7. Remove the boot clip, piston boot and piston seal.

CAUTION: Take care not to damage the cylinder bore.

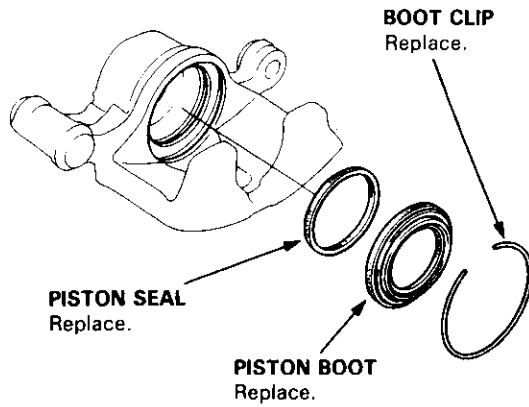

Front Brake Caliper

Reassembly

5410 Type:

NOTE: For 2056 type reassembly procedures, see page 19-18.

⚠ WARNING

- Never use an air hose or dry brush to clean brake assemblies.
- Use an OSHA approved vacuum cleaner to avoid breathing brake dust.
- Contaminated brake discs or pads reduce stopping ability.
- When reusing the pads, always reinstall the brake pads in their original positions to prevent loss of braking efficiency.

CAUTION:


- Do not spill brake fluid on the vehicle; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- Clean all parts in brake fluid and air dry; blow out all passages with compressed air.
- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Always use Genuine Honda DOT 3 Brake Fluid. Using a non-Honda brake fluid can cause corrosion and decrease the life of the system.

NOTE:

- Coat the piston, piston seal, and caliper bore with clean brake fluid.
- Replace all rubber parts with new ones whenever disassembled.

 GREASE: Use recommended rubber grease in the caliper seal set.


 GREASE: Use recommended seal grease in the caliper seal set.

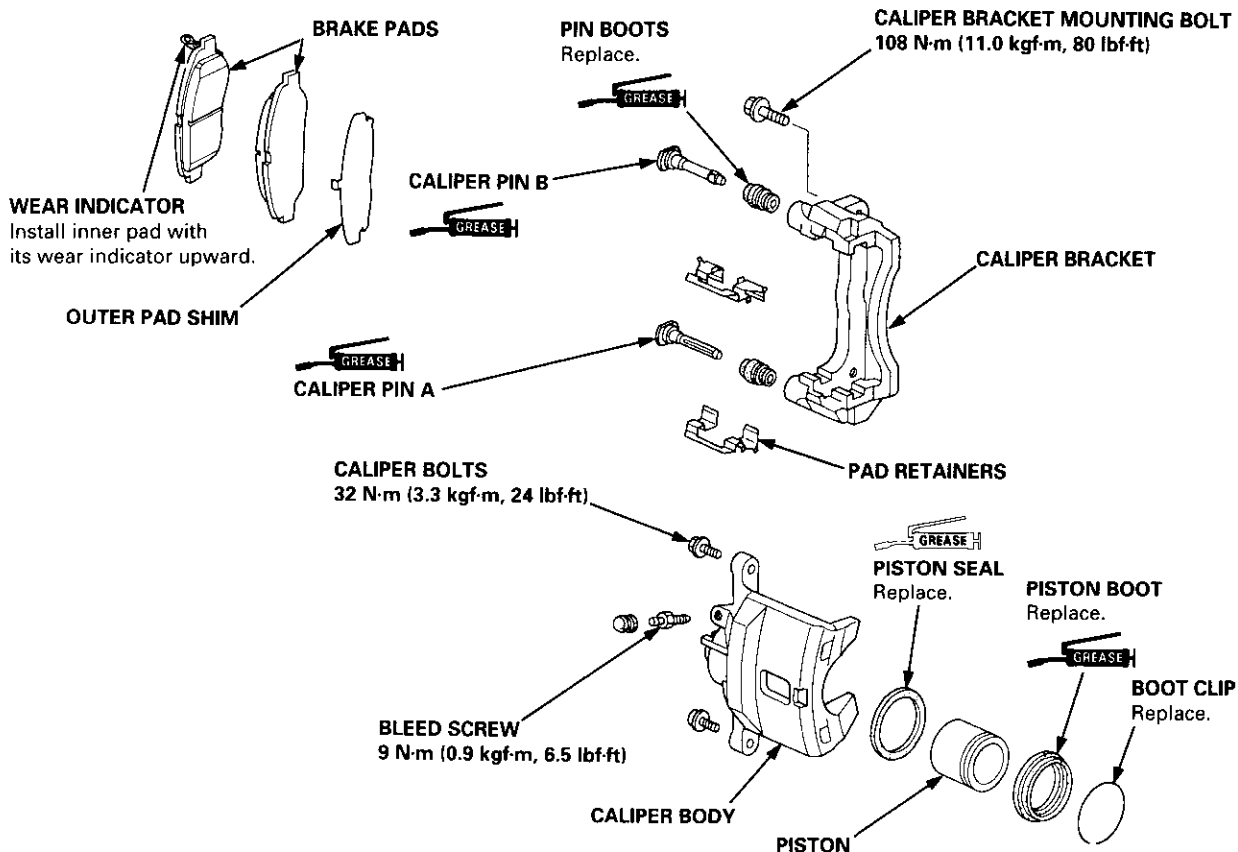




1. Clean the piston and caliper bore with brake fluid, and inspect for wear and damage.
2. Coat the new piston seal with the recommended rubber grease in the caliper seal set, and install the seal in the cylinder groove.
3. Apply the recommended seal grease in the caliper seal set to the sealing lips and inside of a new piston boot, and secure install it in the caliper with the new boot clip.


CAUTION: Be careful not to damage the caliper cylinder wall.

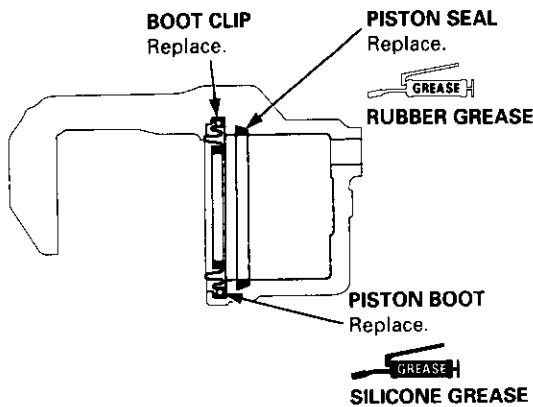

4. Lubricate the caliper and piston with brake fluid, then install the piston in the cylinder with the dished end facing in.

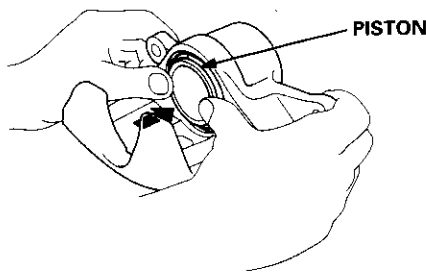

5. Apply the recommended seal grease in the caliper seal set to the sliding surface of the pins and the inside of the new pin boots.
6. Install the pin boots into the grooves in the caliper bracket properly.

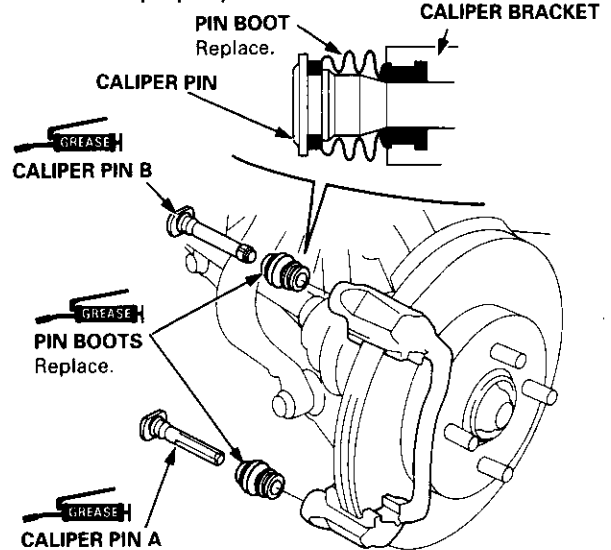


7. Insert pin A and pin B into the caliper bracket.
8. Install the pin boots into the grooves in the pins properly.
9. Install the brake pads in their original positions (see page 19-9).
10. Push in the piston so that the caliper will fit over the pads, and install the caliper.
11. Tighten the caliper bolts.
12. Connect the brake hose to the caliper with new sealing washers, and tighten the banjo bolt.

BANJO BOLT
34 N-m (3.5 kgf-m, 25 lbf-ft)

SEALING WASHERS
Replace.

CALIPER BOLT
32 N-m (3.3 kgf-m, 24 lbf-ft)

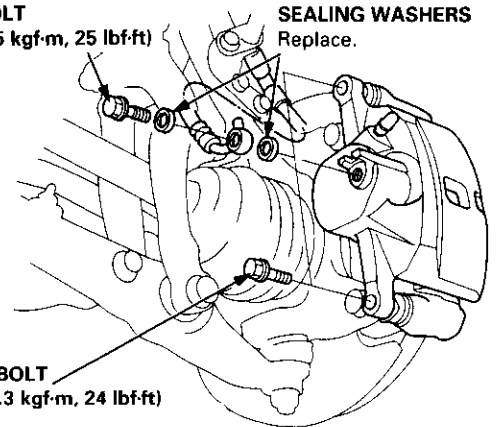

13. Fill the brake reservoir and bleed the brake system (see page 19-7).
14. Perform the following checks.
 - Check for leaks at hose and line joints and connections, and retighten if necessary.
 - Check for brake hoses for interference and twisting.

(cont'd)

Front Brake Caliper

Reassembly (cont'd)

2056 Type:

⚠ WARNING

- Never use an air hose or dry brush to clean brake assemblies.
- Use an OSHA approved vacuum cleaner to avoid breathing brake dust.
- Contaminated brake discs or pads reduce stopping ability.
- When reusing the pads, always reinstall the brake pads in their original positions to prevent loss of braking efficiency.


CAUTION:


- Do not spill brake fluid on the vehicle; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- Clean all parts in brake fluid and air dry; blow out all passages with compressed air.
- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Always use Genuine Honda DOT 3 Brake Fluid. Using a non-Honda brake fluid can cause corrosion and decrease the life of the system.

NOTE:

- Coat the piston, piston seal, and caliper bore with clean brake fluid.
- Replace all rubber parts with new ones whenever disassembled.

 GREASE: Use recommended rubber grease in the caliper seal set.


 GREASE: Use recommended seal grease in the caliper seal set.

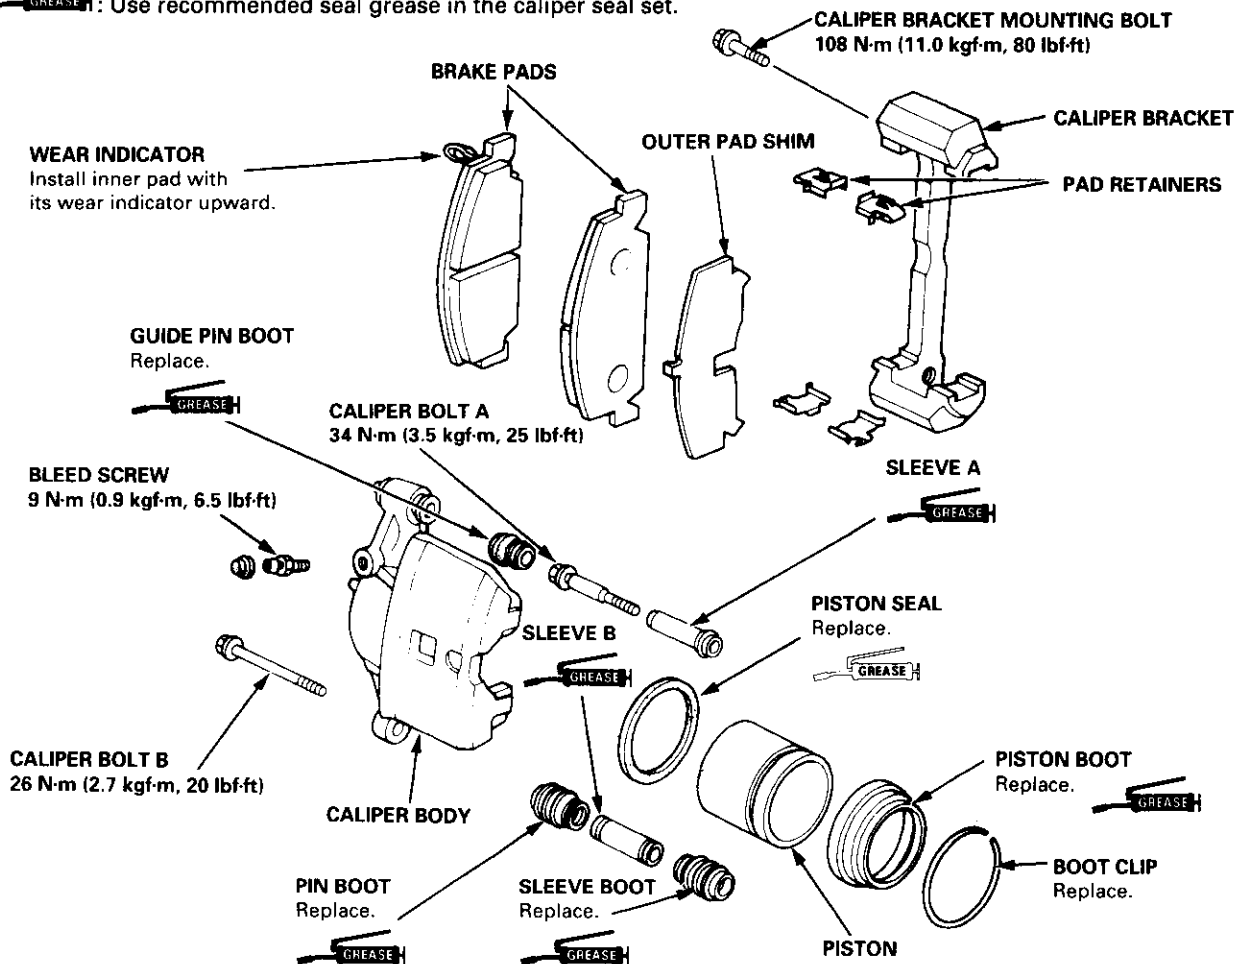




1. Clean the piston and caliper bore with brake fluid, and inspect for wear and damage.
2. Coat a new piston seal with the recommended rubber grease in the caliper seal set, and install the seal in the cylinder groove.
3. Apply the recommended seal grease in the caliper seal set to the sealing lips and inside of a new piston boot, and secure install it in the caliper with a new boot clip.

CAUTION: Be careful not to damage the caliper cylinder wall.


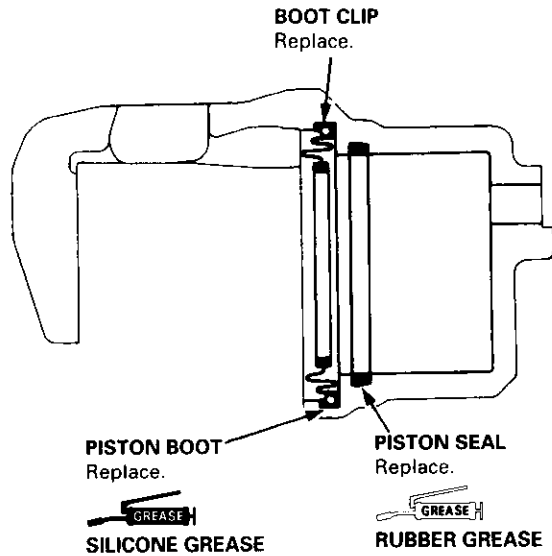


4. Lubricate the caliper and piston with brake fluid, then install the piston in the cylinder with the dished end facing in.

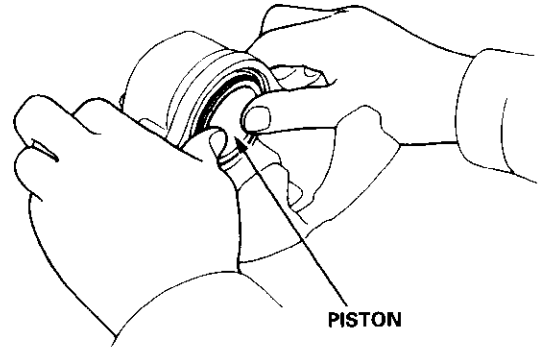

5. Apply the recommended seal grease in the caliper seal set to the sliding surface of sleeve B and the inside of the new pin and sleeve boots.
6. Install the new sleeve and pin boots and sleeve B on the caliper.

NOTE: Be sure to install the boots into the grooves in the caliper and sleeve B properly.

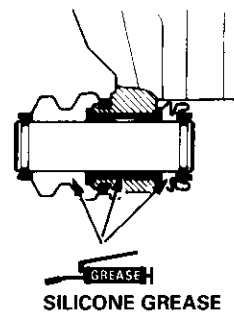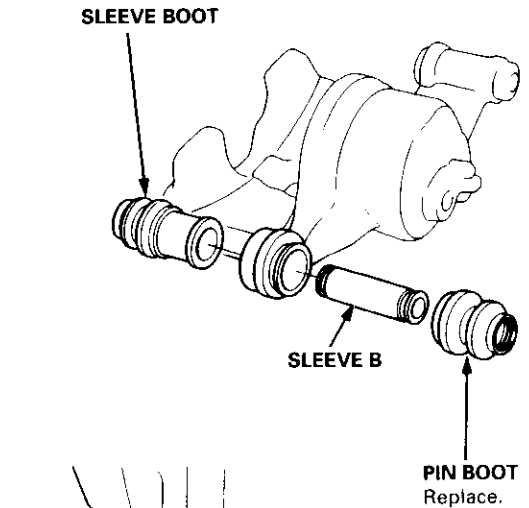


(cont'd)

Front Brake Caliper


Reassembly (cont'd)

7. Apply the recommended seal grease in the caliper seal set to the sliding surface of sleeve A and the inside of a new guide pin boot.
8. Install the guide pin boot into the groove in the sleeve A.
9. Make sure that the brake pad retainers and brake pads are in their original positions (see page 19-10).

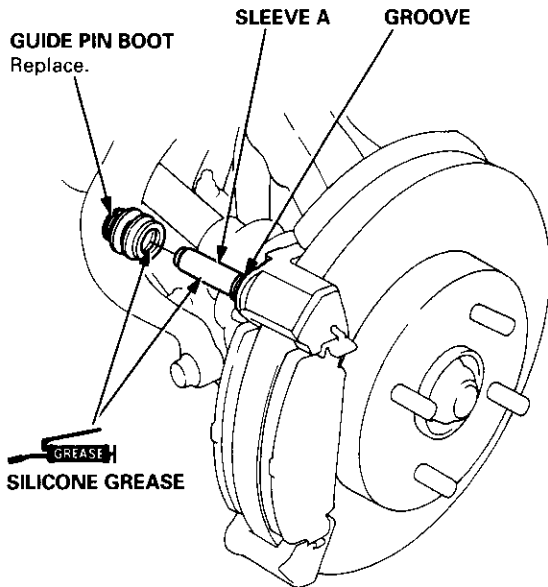


10. Install the caliper onto sleeve A, and pivot it down into position.

NOTE: Install the guide pin boot into the groove in the caliper properly.

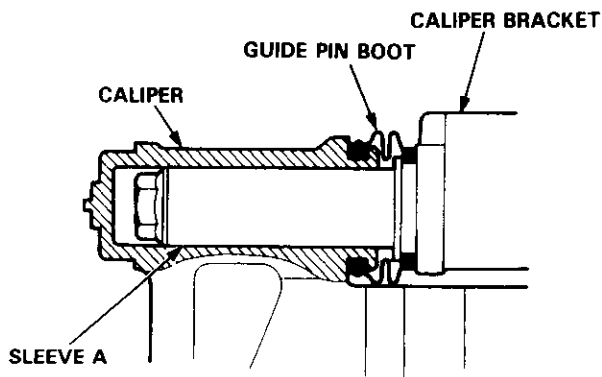

11. Connect the brake hose to the caliper with new sealing washers, and tighten the banjo bolt.
12. Tighten the caliper bolt B.

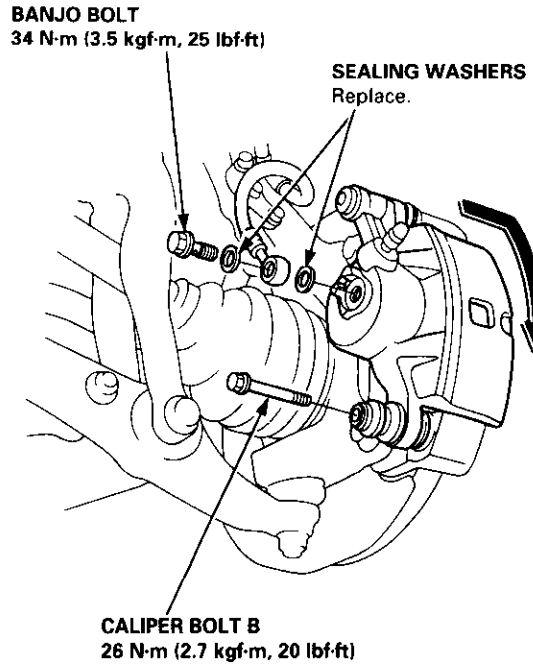

13. Fill the brake reservoir and bleed the brake system (see page 19-7).
14. Perform the following checks.
 - Check for leaks at hose and line joints and connections, and retighten if necessary.
 - Check for brake hoses for interference and twisting.

Master Cylinder/Brake Booster



Removal/Installation

CAUTION:

- Be careful not to bend or damage the brake lines when removing the master cylinder.
- Do not spill brake fluid on the vehicle; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- To prevent spills, cover the hose joints with rags or shop towels.

1. Disconnect the brake fluid level switch connectors.
2. Remove the reservoir cap from the master cylinder.
3. The brake fluid may be sucked out through the top of the master cylinder reservoir with a syringe.
4. Disconnect the brake lines from the master cylinder.
5. Remove the master cylinder mounting nuts and washers.
6. Remove the master cylinder from the brake booster.
7. Disconnect the vacuum hose from the brake booster.
8. Remove the cotter pin and clevis pin from the clevis.

CAUTION: Do not disconnect the clevis by removing it from the operating rod of the brake booster. If the clevis is loosened, adjust the pushrod length before installing the brake booster (see page 19-22).


9. Remove the four booster mounting nuts.
10. Pull the brake booster forward until the clevis is clear of the bulkhead.
11. Remove the brake booster from the engine compartment.
12. Install the brake booster and master cylinder in the reverse order of removal.

CAUTION:

- When connecting the brake lines, make sure that there is no interference between the brake lines and other parts.
- Be careful not to bend or damage the brake lines when installing the master cylinder.

NOTE: If replacing the master cylinder or brake booster, check and adjust the pushrod clearance before installing the master cylinder (see page 19-22).

13. Fill the master cylinder reservoir, and bleed the brake system (see page 19-7).
14. After installation, check the brake pedal height and brake pedal free play (see page 19-5) and adjust if necessary.

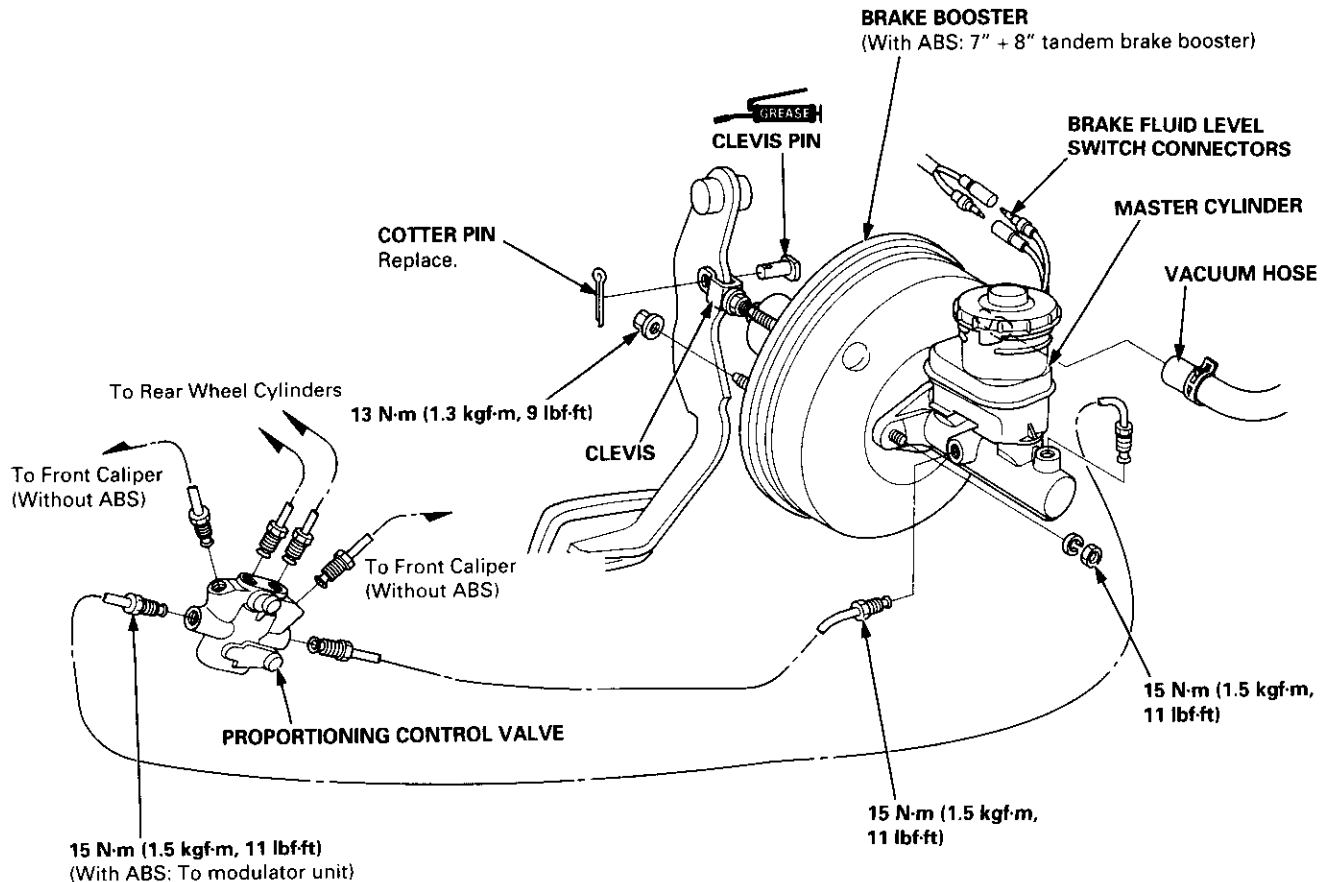


Master Cylinder/Brake Booster

Pushrod Clearance Adjustment

NOTE:


- Master cylinder pushrod-to piston clearance must be checked and adjustments made, if necessary, before installing master cylinder.
- ABS type is shown, conventional brake type is similar.

1. Set the special tool on the master cylinder body; push in the center shaft until the top of it contacts the end of the secondary piston by turning the adjusting nut.

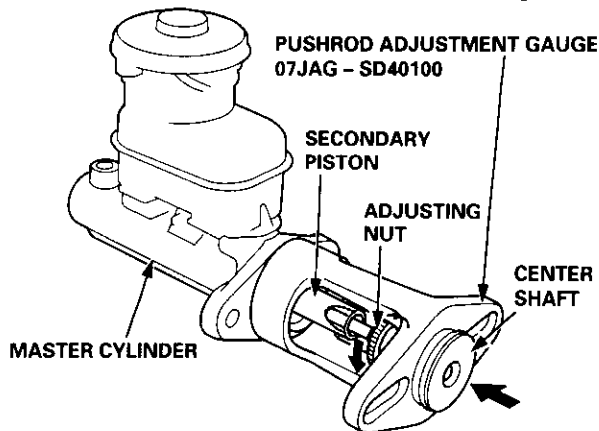

2. Without disturbing the center shaft's position, install the special tool upside down on the booster.
3. Install the master cylinder nuts and tighten to the specified torque.
4. Connect the booster in-line with a vacuum gauge 0 - 101 kPa (0 - 760 mmHg, 30 in.Hg) to the booster's engine vacuum supply, and maintain an engine speed that will deliver 66 kPa (500 mmHg, 20 in.Hg) vacuum.
5. With a feeler gauge, measure the clearance between the gauge body and the adjusting nut as shown.

Clearance: 0 - 0.4 mm (0 - 0.02 in)

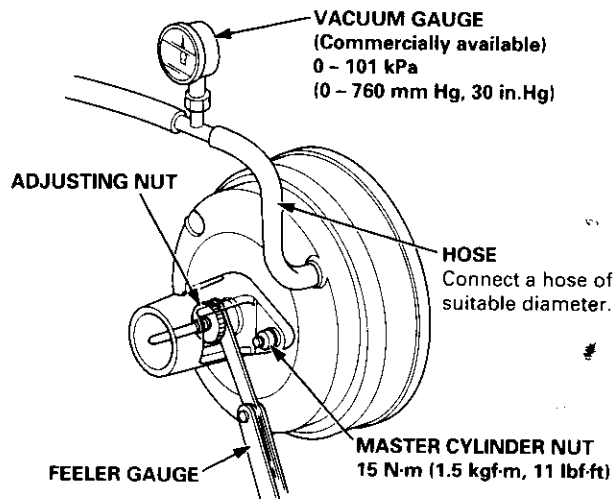

NOTE: If the clearance between the gauge body and adjusting nut is 0.4 mm (0.02 in), the pushrod-to-piston clearance is 0 mm. However, if the clearance between the gauge body and adjusting nut is 0 mm, the pushrod-to-piston clearance is 0.4 mm (0.02 in) or more. Therefore it must be adjusted and rechecked.

6. If clearance is incorrect, loosen the star locknut and turn the adjuster in or out to adjust.


NOTE:

- Adjust the clearance while the specified vacuum is applied to the booster.
- Hold the clevis while adjusting.


7. Tighten the star locknut securely.

8. Remove the special tool.

0 - 0.4 mm (0 - 0.02 in)

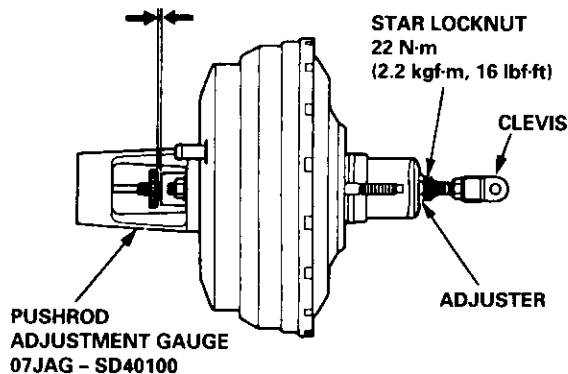

9. Adjust the pushrod length as shown if the booster is removed.

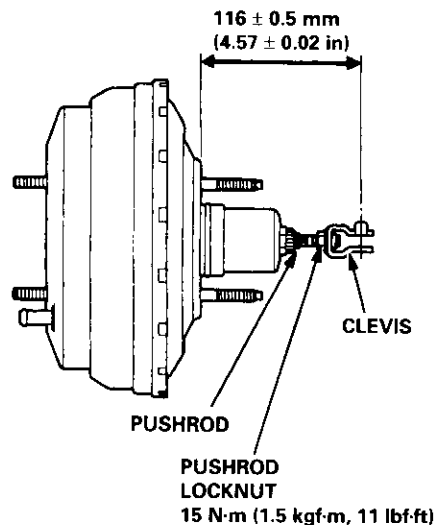

10. Install the master cylinder (see page 19-21).



Brake Booster Inspection

Functional Test


1. With the engine stopped, depress the brake pedal several times to deplete the vacuum reservoir, then depress the pedal hard and hold it for 15 seconds. If the pedal sinks, either the master cylinder is bypassing internally, or the brake system (master cylinder, lines, modulator, proportioning control valve, or caliper) is leaking.
2. Start the engine with the pedal depressed. If the pedal sinks slightly, the vacuum booster is operating normally. If the pedal height does not vary, the booster or check valve is faulty.
3. With the engine running, depress the brake pedal lightly. Apply just enough pressure to hold back automatic transmission creep. If the brake pedal sinks more than 25 mm (1.0 in.) in three minutes, the master cylinder is faulty. A slight change in pedal height when the A/C compressor cycles on and off is normal. (The A/C compressor load changes the vacuum available to the booster.)

Leak Test

1. Depress the brake pedal with the engine running, then stop the engine. If the pedal height does not vary while depressed for 30 seconds, the vacuum booster is OK. If the pedal rises, the booster is faulty.
2. With the engine stopped, depress the brake pedal several times using normal pressure. When the pedal is first depressed, it should be low. On consecutive applications, the pedal height should gradually rise. If the pedal position does not vary, check the booster check valve.

Booster Check Valve Test

1. Disconnect the brake booster vacuum hose at the booster.
2. Start the engine and let it idle. There should be vacuum. If no vacuum is available, the check valve is not working properly. Replace the brake booster vacuum hose and check valve, and retest.

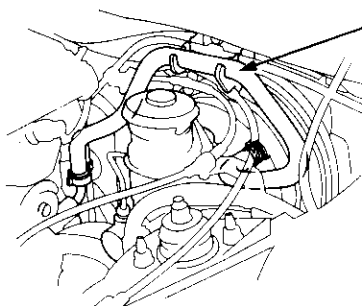

**BRAKE BOOSTER
VACUUM HOSE**
(Check valve
built-in)


Rear Drum Brakes

Index/Inspection

⚠ WARNING

- Never use an air hose or dry brush to clean brake assemblies.
- Use an OSHA approved vacuum cleaner to avoid breathing brake dust.
- Contaminated brake linings or drums reduce stopping ability.
- Block the front wheels before jacking up the rear of the vehicle.

1. Block the front wheels, loosen the rear wheel nuts slightly, support the rear of vehicle on safety stands, then remove the rear wheels.
2. Release the parking brake, and remove the rear brake drum.

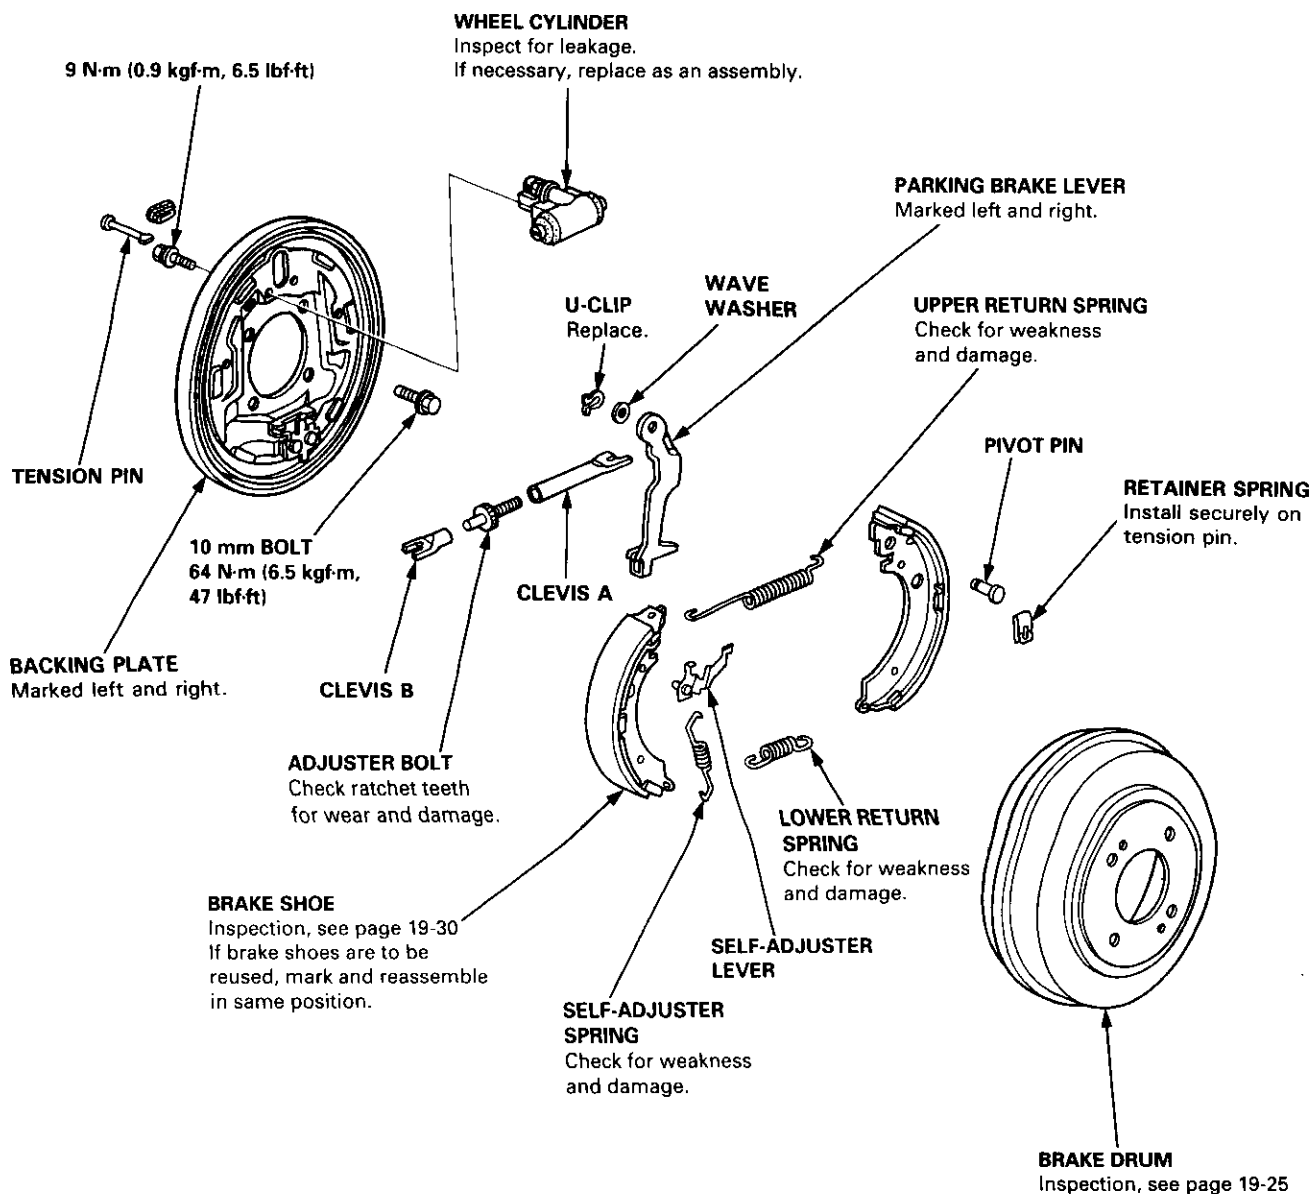




Inspection

1. Check the wheel cylinder for leakage.
2. Check the brake linings for cracking, glazing, wear and contamination.
3. Measure the brake lining thickness.

Brake Lining Thickness:

Standard: 4.0 mm (0.157 in)

Service Limit: 2.0 mm (0.08 in)

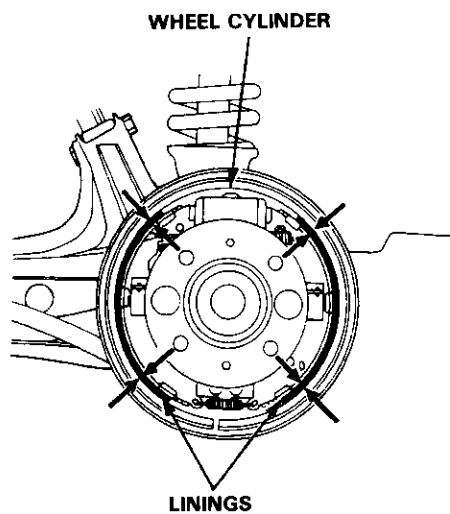

NOTE: Measurement does not include brake shoe thickness.


4. If the brake lining thickness is less than service limit, replace the brake shoes as a set.
5. Check the bearings in the hub unit for smooth operation. If defective, refer to section 18.

6. Measure the inside diameter of the brake drum using the inside vernier calipers.

Drum Inside Diameter:

Standard: 199.9 – 200.0 mm (7.870 – 7.874 in)

Service Limit: 201.0 mm (7.913 in)

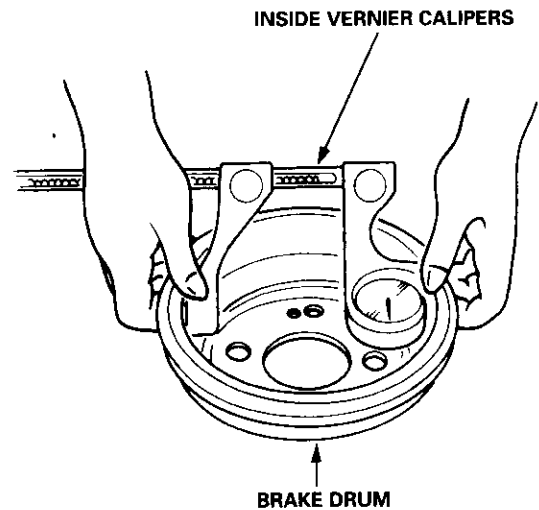


7. If the inside diameter of the brake drum is more than service limit, replace the brake drum.
8. Check the brake drum for scoring, grooves and cracks.

Rear Drum Brake

Brake Shoe Disassembly


1. Remove the tension pins by pushing the retainer springs and turning them.

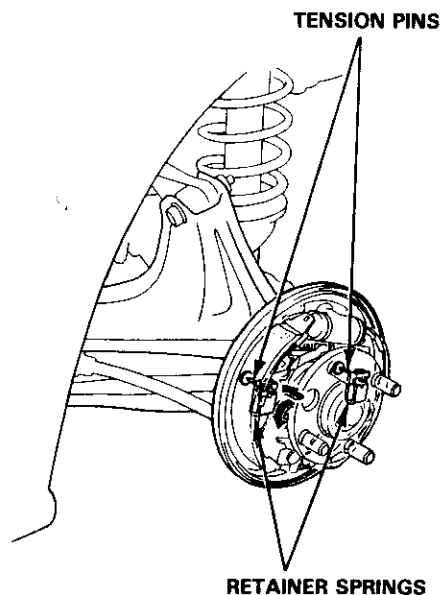


2. Lower the brake shoe assembly, and remove the lower return spring.

NOTE: Be careful not to damage the dust cover on the wheel cylinder.

3. Remove the brake shoe assembly.
4. Disconnect the parking brake cable from the parking brake lever.
5. Remove the upper return spring, self-adjuster lever and self-adjuster spring, and separate the brake shoes.

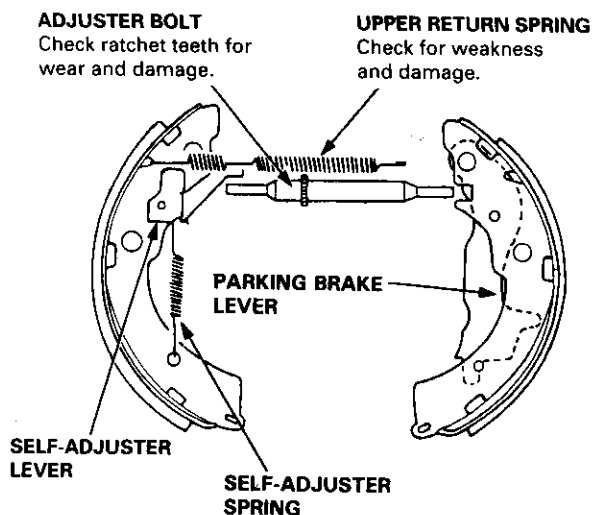


6. Remove the wave washer, parking brake lever and pivot pin from the brake shoe by removing the U-clip.

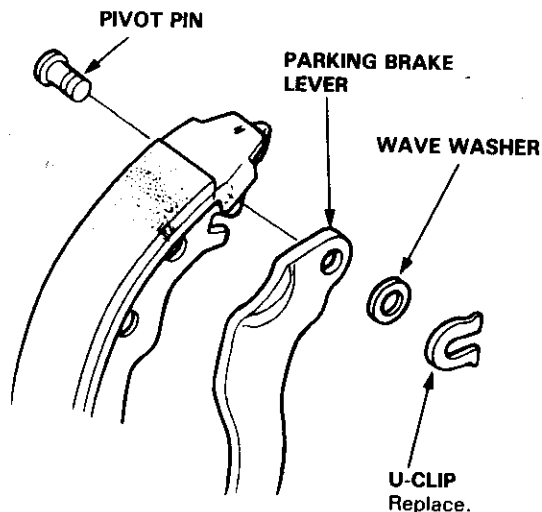

Brake Shoe Reassembly

1. Apply brake cylinder grease (P/N: 08733 - B020E) or equivalent rubber grease to the sliding surface of the pivot pin, and insert the pin into the brake shoe.
2. Install the parking brake lever and wave washer on the pivot pin and secure with U-clip.

NOTE: Pinch the U-clip securely to prevent the pivot pin from coming out of the brake shoe.

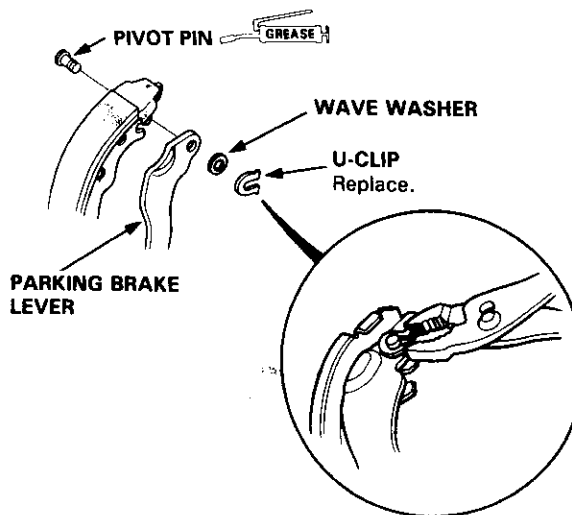




3. Connect the parking brake cable to the parking brake lever.
4. Apply grease on each sliding surface.

⚠ WARNING Contaminated brake linings reduce stopping ability. Keep grease or oil off the brake linings. Wipe any excess grease off the parts.


- Apply brake cylinder grease (P/N: 08733 - B020E) or equivalent rubber grease to the sliding surfaces as shown.

→ ● Sliding surface

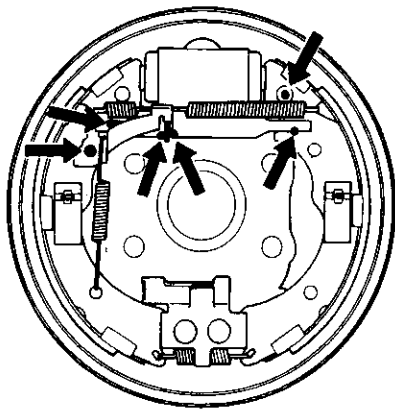

- Apply Molykote 44MA to the brake shoe ends and opposite edges of the shoes as shown.


→ ● Opposite edge of the shoe
 ⇨ ○ Brake shoe ends

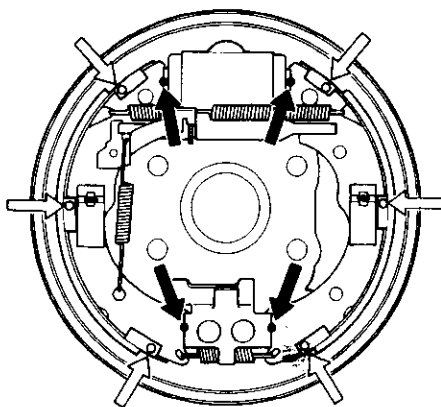

5. Clean the threaded portions of clevises A and B. Coat the threads of the clevises with grease. To shorten the clevises, turn the adjuster bolt.
6. Hook the self-adjuster spring to the self-adjuster lever first, then to the brake shoe.
7. Install the clevises and upper return spring noting the installation direction.

NOTE: Be careful not to damage the wheel cylinder dust covers.

8. Install the lower return spring.
9. Install the tension pins and retaining springs.

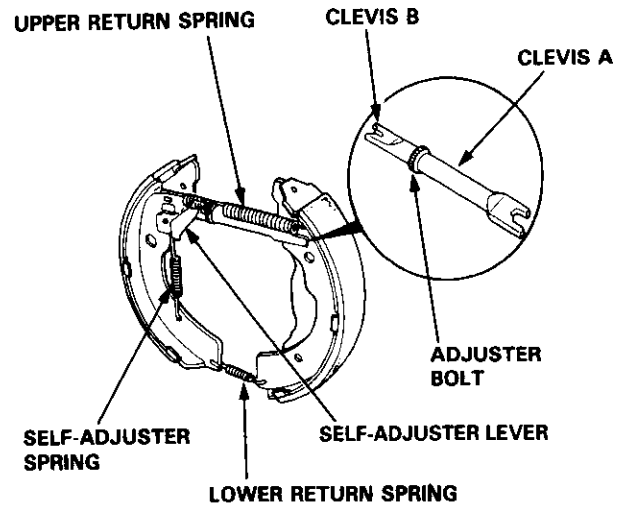


10. Install the brake drum.
11. If the wheel cylinder has been removed, bleed the brake system (see page 19-6), and check for leaks at brake line connections, and retighten if necessary.
12. Depress the brake pedal several times to set the self-adjusting brake.
13. Adjust the parking brake (see page 19-6).

Brake Hoses/Lines

Inspection/Torque Specifications

1. Inspect the brake hoses for damage, deterioration, leaks, interference and twisting.
2. Check the brake lines for damage, rusting and leakage. Also check for bent brake lines.
3. Check for leaks at hose and line joints and connections, and retighten if necessary.
4. Check the master cylinder and ABS modulator unit for damage and leakage.

CAUTION: Replace the brake hose clip whenever the brake hose is serviced.

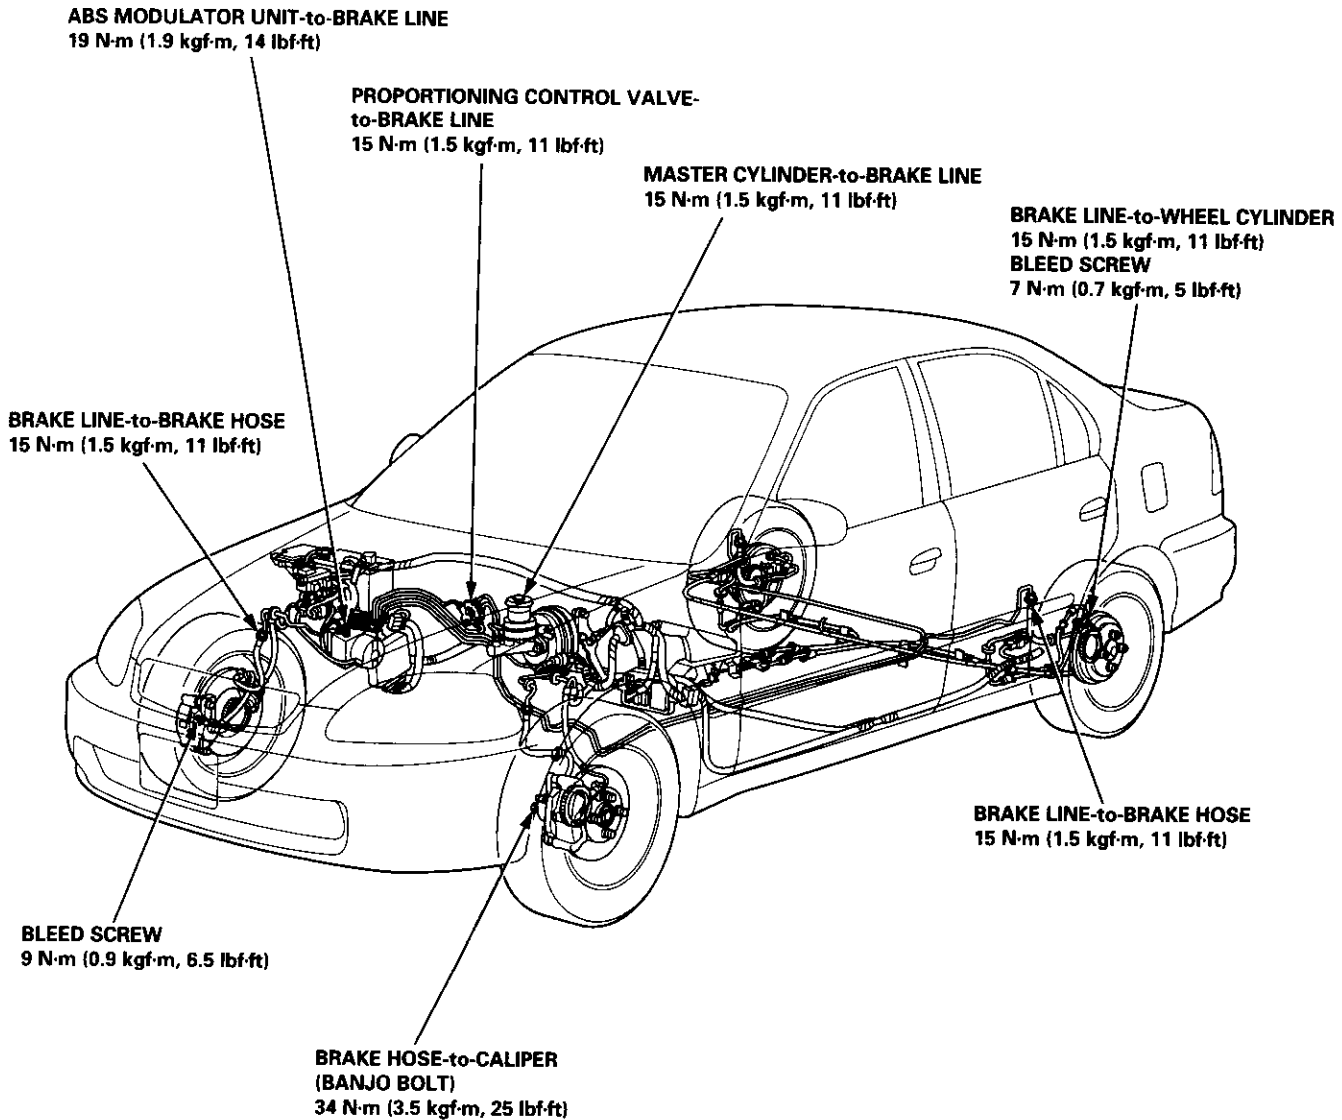




Hose Replacement


CAUTION:

- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.
- Do not spill brake fluid on the vehicle; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.

1. Replace the brake hose if the hose is twisted, cracked, or if it leaks.
2. Disconnect the brake hose from the brake line using a 10 mm flare nut wrench.

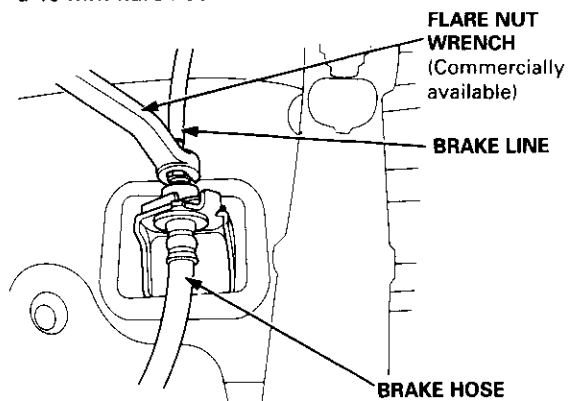


3. Remove and discard the brake hose clip from the brake hose.

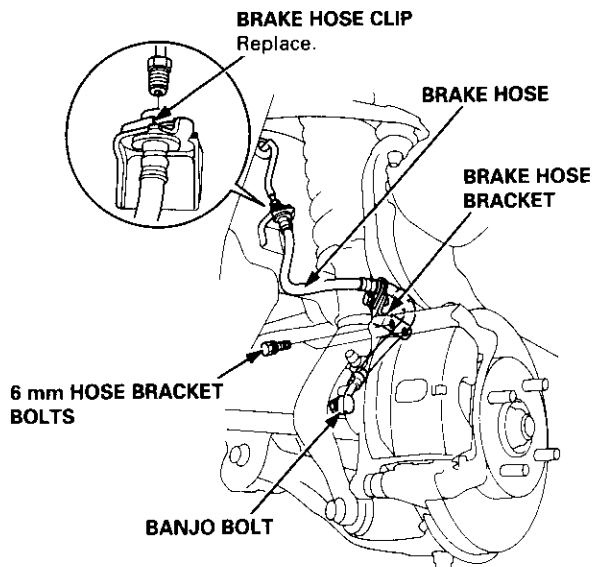


4. Remove the banjo bolt, and disconnect the brake hose from the caliper.
5. Remove the brake hose bracket from the knuckle.

6. Install the brake hose bracket and brake hose on the knuckle first, then connect the brake hose to the caliper with the banjo bolt and new sealing washers.

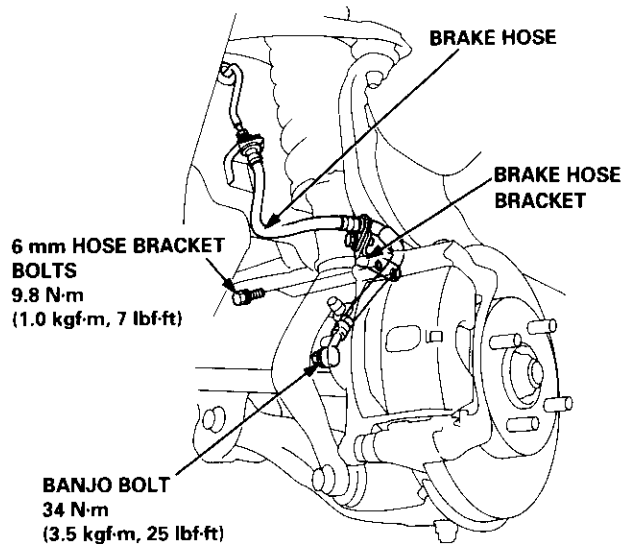

7. Install the brake hose on the upper brake hose bracket with a new brake hose clip.

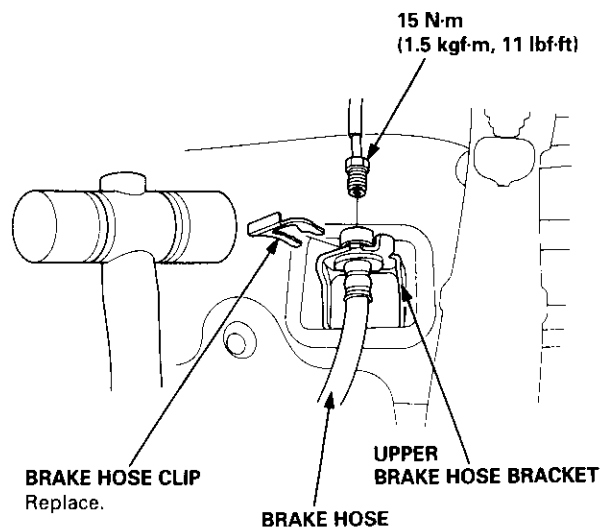


8. Connect the brake line to the brake hose.
9. After installing the brake hose, bleed the brake system (see page 19-7).
10. Perform the following checks.
 - Check the brake hose and line joint for leaks, and tighten if necessary.
 - Check the brake hoses for interference and twisting.


Parking Brake Cable

Inspection and Replacement

CAUTION: The parking brake cables must not be bent or distorted. This will lead to stiff operation and premature cable failure.

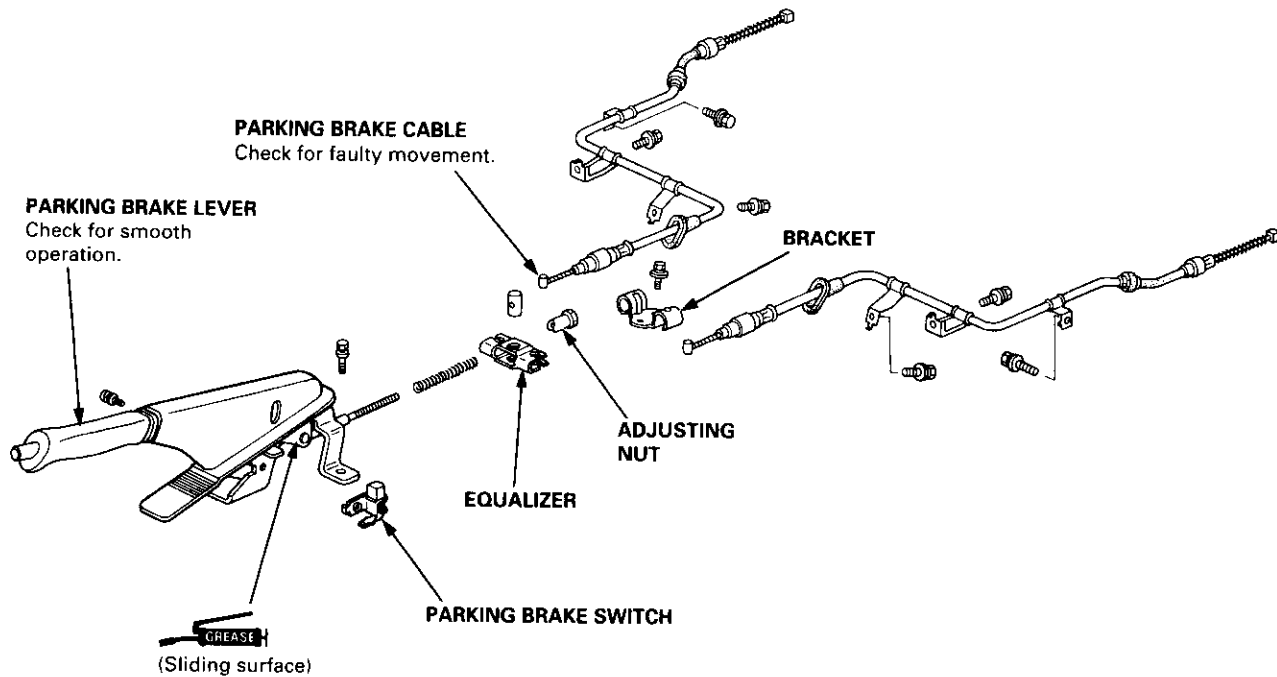

Remove the parking brake cable from the backing plate using a 12 mm offset wrench as shown.

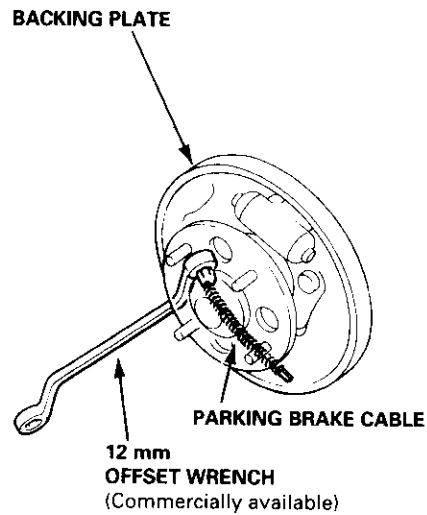


Anti-lock Brake System (ABS)

Special Tools	19-32	Wheel Sensor	19-52
Component Locations	19-33	Solenoid	19-54
Anti-lock Brake System (ABS)		ABS Pump Motor	19-56
Features/Construction	19-34	Main Relay	19-59
Operation	19-35	Ignition Voltage	19-60
Circuit Diagram	19-38	Central Processing Unit (CPU)	19-61
ABS Control Unit Terminal		Modulator Unit	
Arrangement	19-40	Removal/Installation	19-62
Troubleshooting Precautions	19-42	ABS Control Unit	
Diagnostic Trouble Code (DTC)		Replacement	19-63
Diagnostic Trouble Code (DTC)		Pulsers/Wheel Sensors	
Indication	19-44	Inspection	19-63
DTC Erasure	19-45	Wheel Sensor Replacement	19-64
Symptom-to System Chart	19-46		
Troubleshooting			
ABS Indicator Light Does Not			
Come On	19-48		
ABS Indicator Light Does Not			
Go Off	19-50		








Special Tools

Ref. No.	Tool Number	Description	Qty	Page Reference
①	07PAZ - 0010100	SCS Service Connector	1	19-44

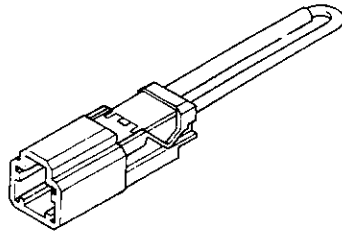

①

Component Locations

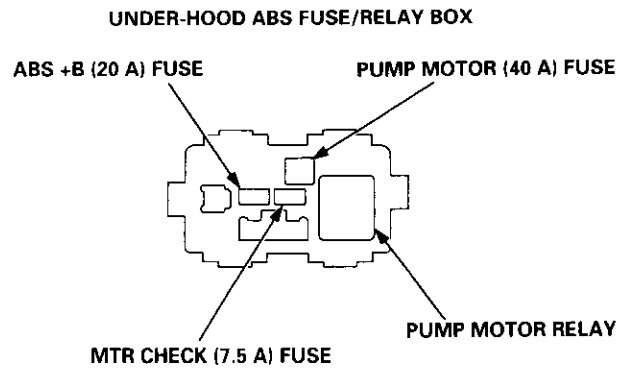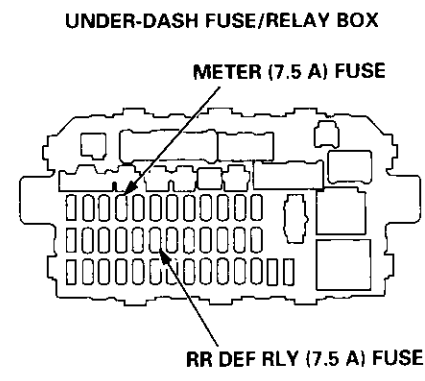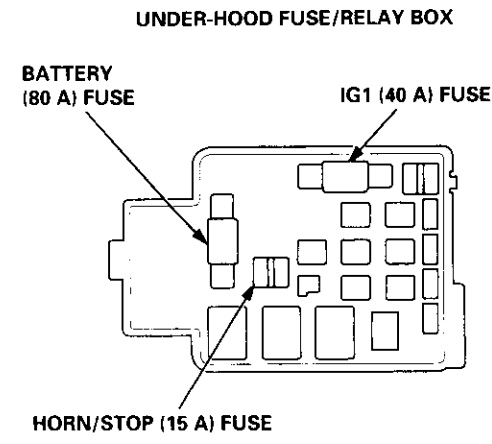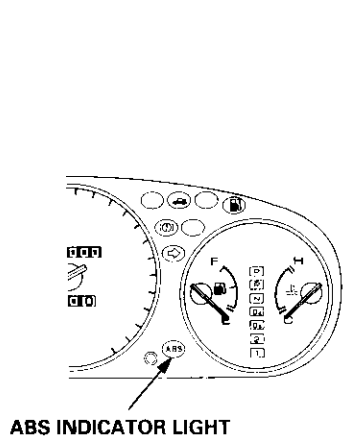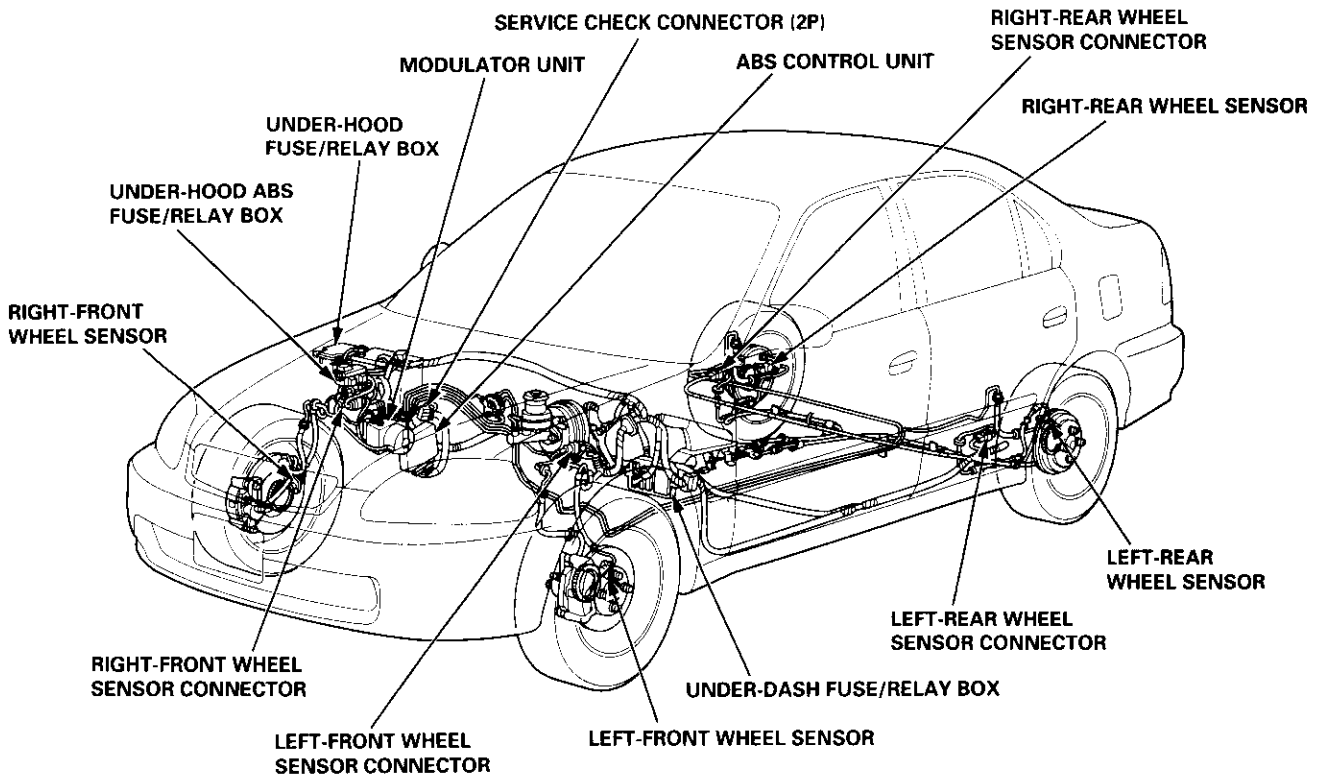

Anti-lock Brake System (ABS)


Features/Construction

When the brake pedal is depressed during driving, the wheels can lock before the vehicle comes to a stop. In such a case, the maneuverability of the vehicle is reduced if the front wheels are locked, and the stability of the vehicle is reduced if the rear wheels are locked, creating an extremely unstable condition. The ABS precisely controls the slip rate of the wheels to ensure the grip force of the tires, and it thereby ensures the maneuverability and stability of the vehicle.


Judging the vehicle speed, the ABS calculates the slip rate of the wheels based on the vehicle speed and the wheel speed, then it controls the brake fluid pressure to attain the target slip rate.

Grip Force of Tire and Road Surface

COEFFICIENT OF FRICTION

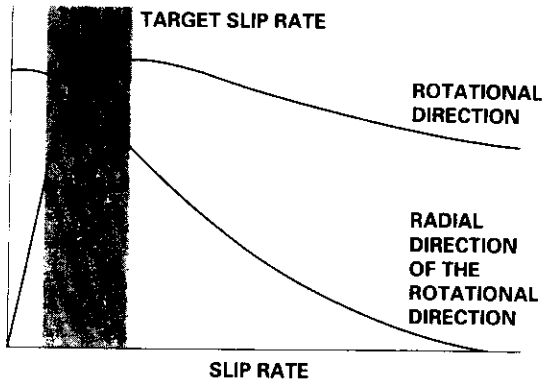


Slip Rate

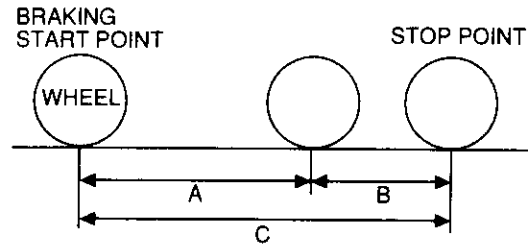

- A: Distance without slip
- B: Slipped distance
- C: Actual distance to stop

$$\text{SLIP RATE} = \frac{B}{C} = \frac{\text{VEHICLE SPEED} - \text{WHEEL SPEED}}{\text{VEHICLE SPEED}}$$

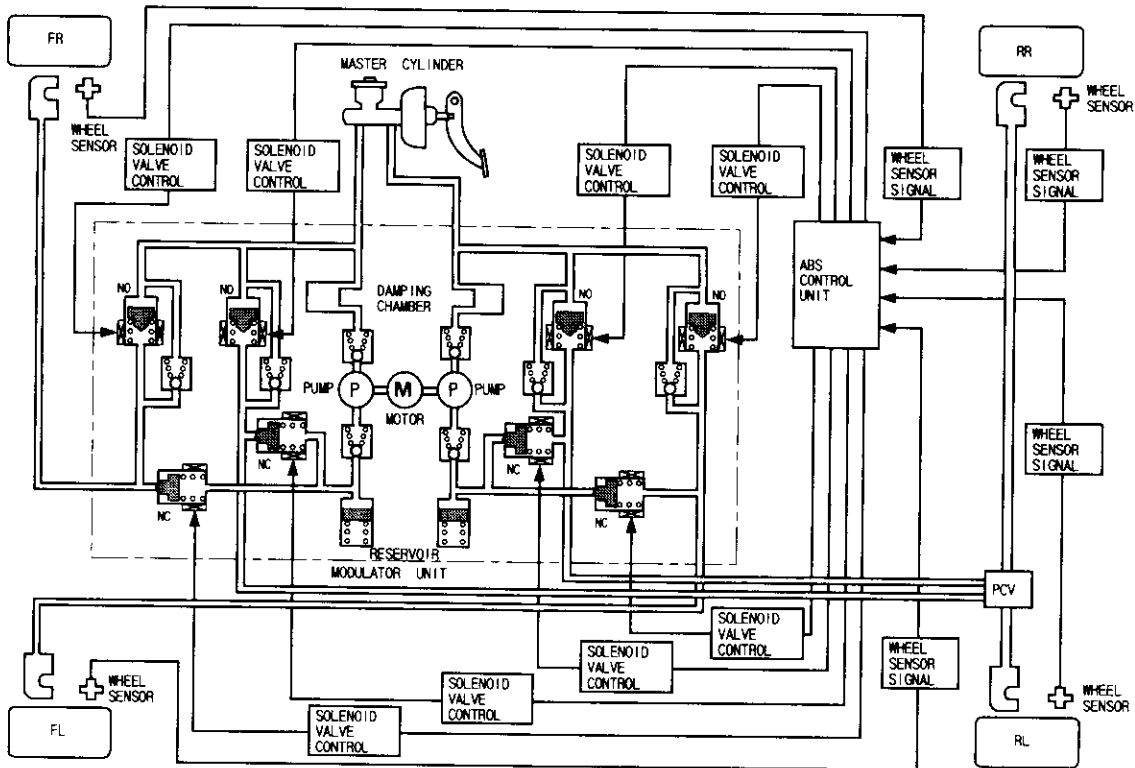

Operation


ABS Control Unit

Main Control

The ABS control unit detects the wheel speed based on the wheel sensor signal it received, then it calculates the vehicle speed based on the detected wheel speed. The control unit detects the vehicle speed during deceleration based on the rate of deceleration.

The ABS control unit calculates the slip rate of each wheel, and it transmits the control signal to the modulator unit solenoid valve when the slip rate is high.

The pressure reduction control is a three-mode system, that is pressure reduction, pressure retaining and pressure intensifying modes.

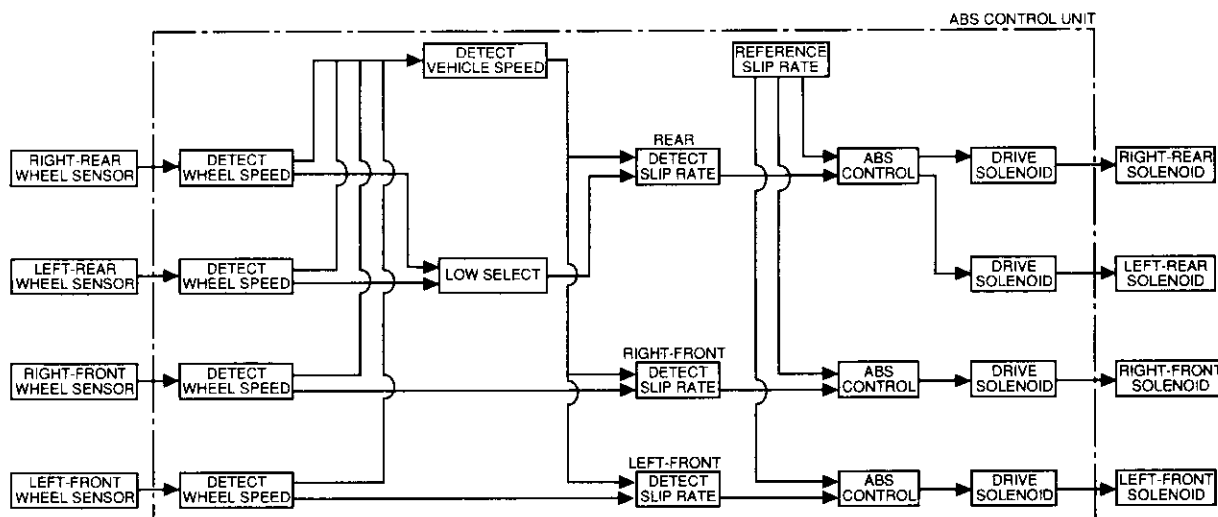

Self-diagnosis Function

The ABS control unit is equipped with a main CPU and a sub CPU, and the CPUs check each other.

The CPUs check the circuit of the system.

When the CPUs detect failure, they shift to the "system down mode" or the "control inhibition mode".

MODE	ABS INDICATOR LIGHT	MAIN RELAY	SOLENOID VALVE	CPU	Restart condition		DTC
					Ignition switch	OFF → ON	
SYSTEM DOWN	ON	No operation	Drive inhibition	Operation*1	Ignition switch	OFF → ON	Memory
CONTROL INHIBITION	ON	No operation	Drive inhibition	Operation	Automatic		Memory

*1: Except CPU failure

The self-diagnosis can be classified into these four categories.

- ①: Initial diagnosis
- ②: Except ABS control
- ③: During ABS control
- ④: During warning

On-board Diagnosis Function

The ABS control unit is connected to the data link connector (16P).

The ABS system can be diagnosed with the Honda PGM Tester.

(cont'd)

Anti-lock Brake System (ABS)

Operation (cont'd)


ABS Modulator

The ABS modulator consists of the inlet solenoid valve, outlet solenoid valve, reservoir, pump, pump motor and the damping chamber.

The modulator reduces the caliper fluid pressure directly, and it is also referred to as a circulating type because the brake fluid circulates through the caliper, reservoir and the master cylinder.

The hydraulic control has three modes: pressure reduction, pressure retaining and pressure intensifying.

The hydraulic circuit is the independent four channel type, one channel for each wheel.

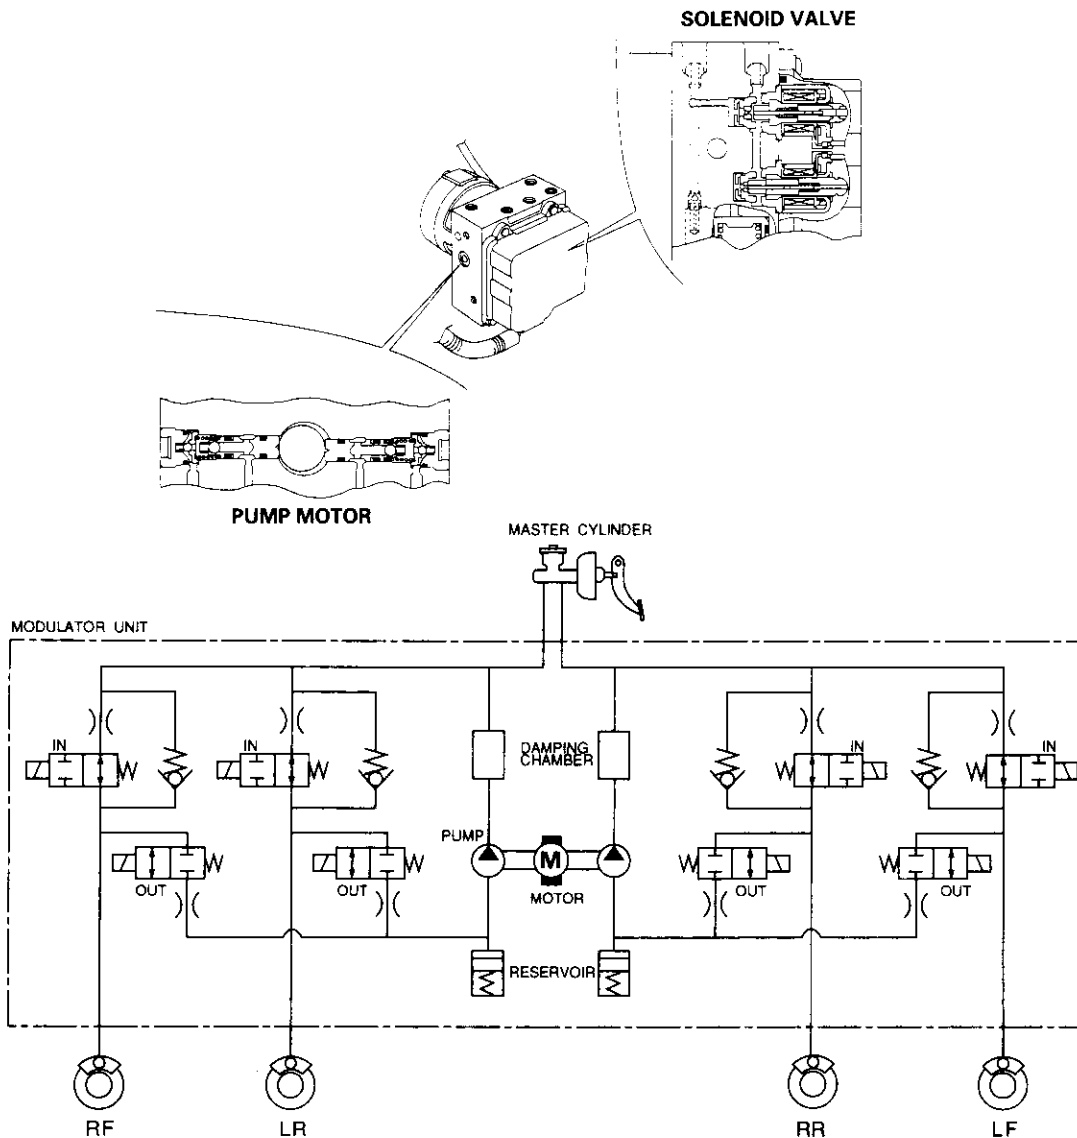

Pressure intensifying mode: Inlet valve open, outlet valve closed

Master cylinder fluid is pumped out to the caliper.

Pressure retaining mode: Inlet valve closed, outlet valve closed

Caliper fluid is retained by the inlet valve and outlet valve.

Pressure reduction mode: Inlet valve closed, outlet valve open

Caliper fluid flows through the outlet valve to the reservoir.

Motor operation mode:


When starting the pressure reduction mode, the pump motor is ON.

When stopping ABS operation, the pump motor is OFF.

The reservoir fluid is pumped out by the pump, through the damping chamber, to the master cylinder.

IN: INLET VALVE (NORMALLY OPEN)
OUT: OUTLET VALVE (NORMALLY CLOSED)

Wheel Speed and Modulator Control

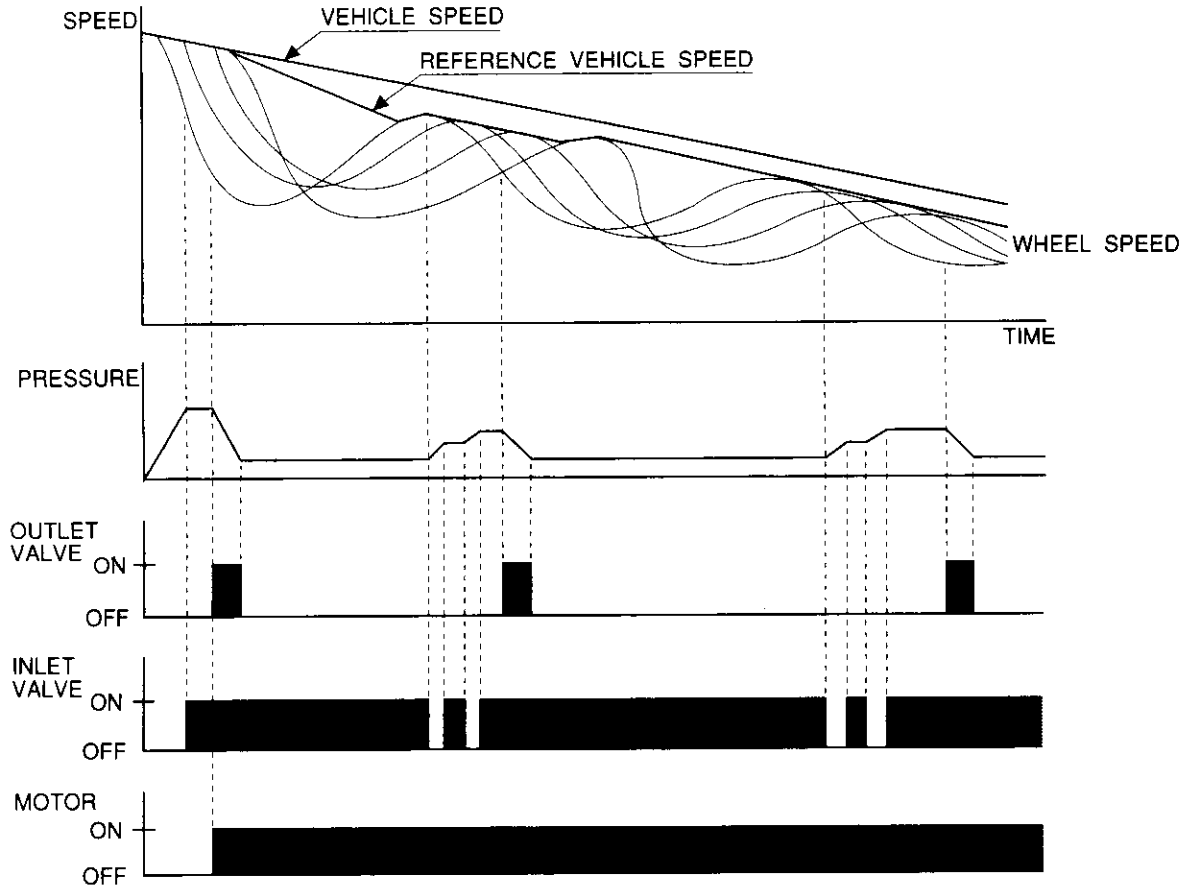

When the wheel speed drops sharply below the vehicle speed, the inlet valve closes to retain the caliper fluid pressure. When the wheel speed drops further, the outlet valve opens momentarily to reduce the caliper fluid pressure. The pump motor starts at this time.

As the wheel speed is restored, the inlet valve opens momentarily to increase the caliper fluid pressure.

Wheel Sensor


The wheel sensors are the magnetic contactless type.

As the gear pulser teeth rotate past the wheel sensor's magnetic coil, AC current is generated. The AC frequency changes in accordance with the wheel speed. The ABS control unit detects the wheel sensor signal frequency and thereby detects the wheel speed.



There are four wheel sensors, one for each wheel.

The gear pulser has 50 teeth.


GEAR PULSER

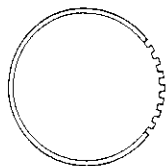

WHEEL SENSOR

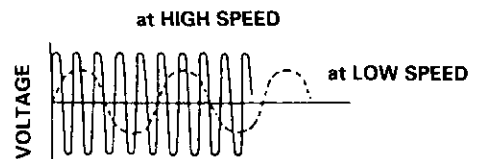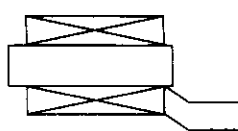

Circuit Diagram

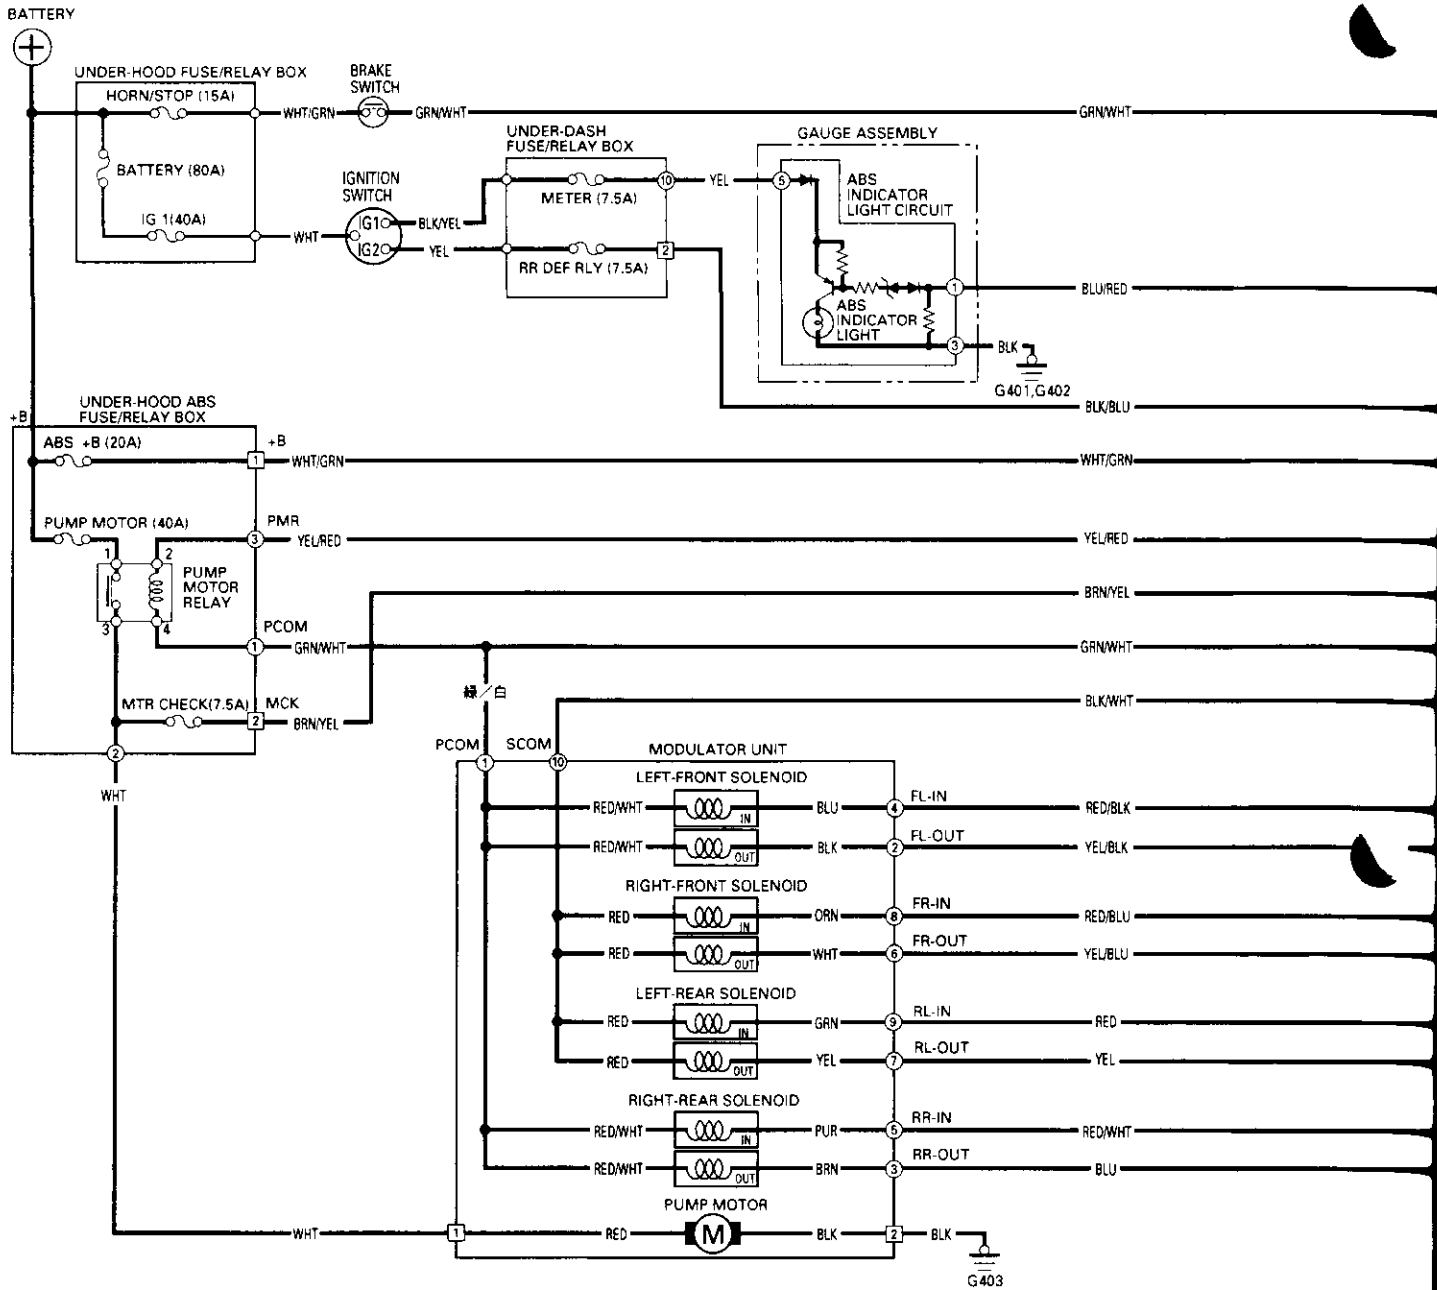


UNDER-HOOD ABS FUSE/RELAY BOX
3P CONNECTOR (○ number)




UNDER-HOOD ABS FUSE/RELAY BOX
2P CONNECTOR (□ number)




UNDER-DASH FUSE/RELAY BOX
20P CONNECTOR (○ number)




UNDER-DASH FUSE/RELAY BOX
18P CONNECTOR (□ number)



GAUGE ASSEMBLY 5P CONNECTOR
(○ number)




MODULATOR UNIT 10P CONNECTOR
(○ number)




PUMP MOTOR 2P CONNECTOR
(□ number)



WIRE SIDE OF FEMALE TERMINALS

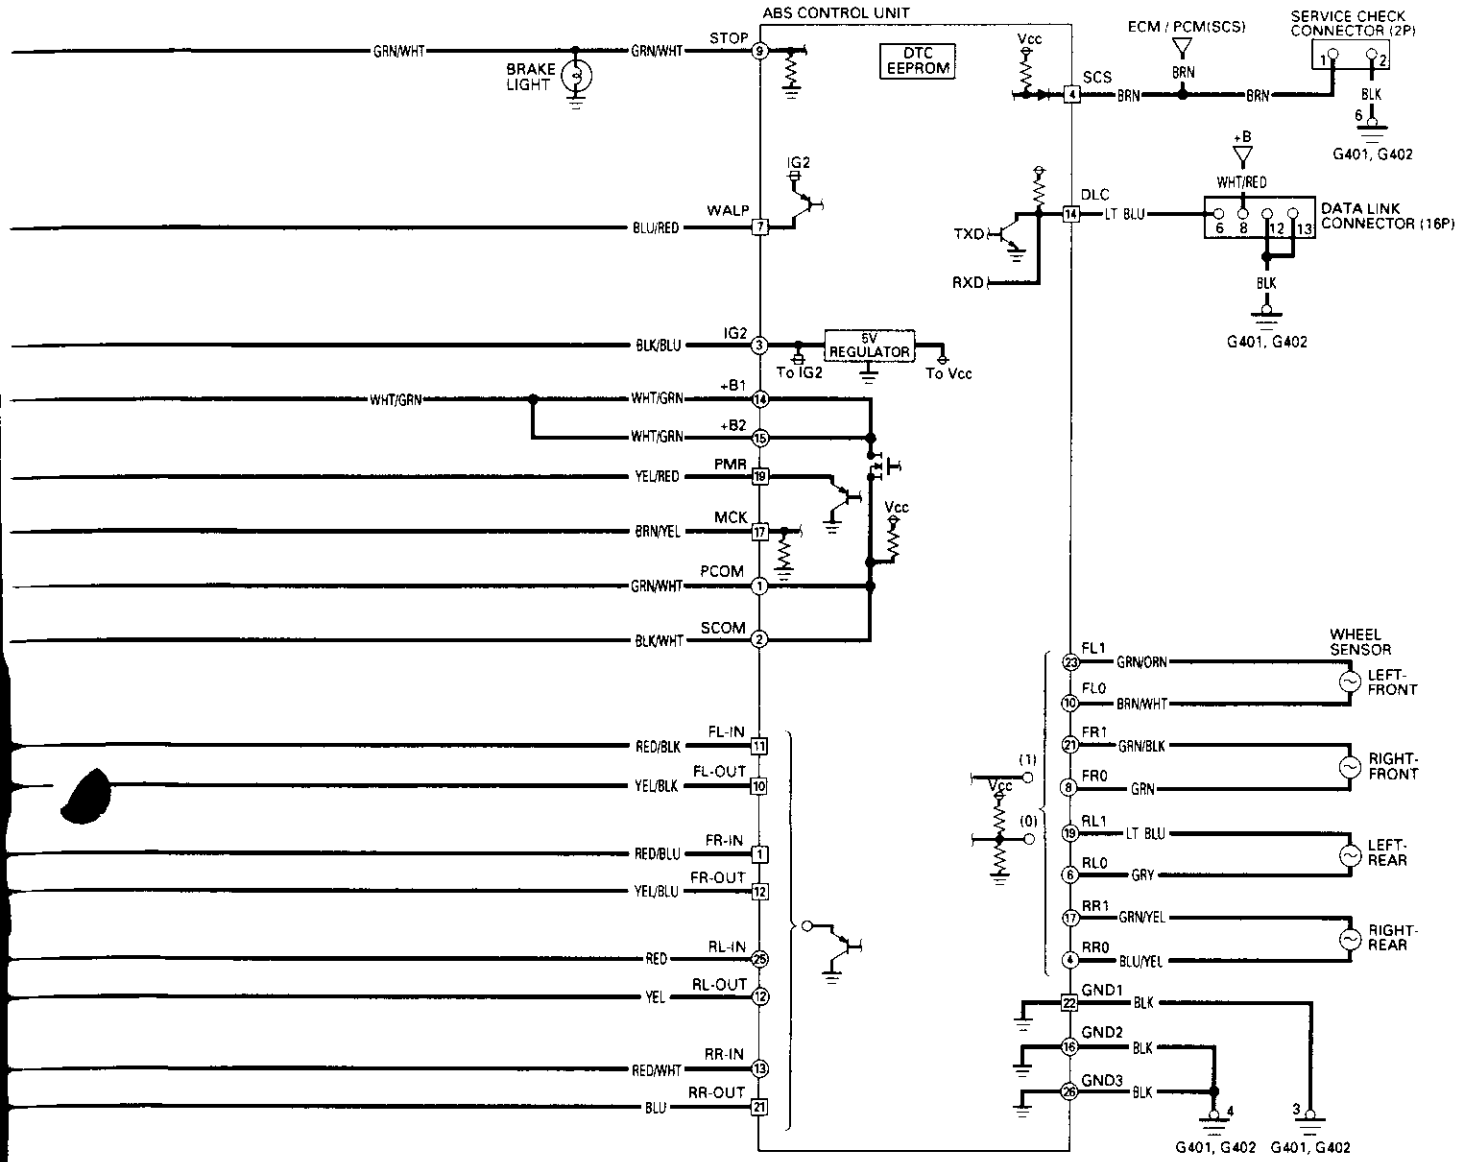

ABS CONTROL UNIT 26P CONNECTOR
(○ number)




ABS CONTROL UNIT 22P CONNECTOR
(□ number)




SERVICE CHECK CONNECTOR (2P)



DATA LINK CONNECTOR (16P)



WHEEL SENSOR 2P CONNECTOR



WIRE SIDE OF FEMALE TERMINALS

TERMINAL SIDE OF MALE TERMINALS

ABS Control Unit Terminal Arrangement

ABS CONTROL UNIT 26P CONNECTOR




WIRE SIDE OF FEMALE TERMINALS

VB: Battery Voltage

Terminal number	Wire color	Terminal sign (Terminal name)	Description	Voltage				
				Measurement terminals	Conditions (Ignition Switch ON (III))		Output voltage	
1	GRN/WHT	PCOM (Primary common)	Power source for the solenoid valve and pump motor.	1-GND	Engine	ON	Solenoid ON	0 V
						OFF	Solenoid OFF	AC: 3~6 V
2	BLK/WHT	SCOM (Secondary common)	Power source for the solenoid valve.	2-GND		OFF (Connect the SCS service connector)		Approx. 3 V
3	BLK/BLU	IG2 (Ignition 2)	Detects ignition switch 2 signal. (System activate signal)	3-GND				VB
4	BLU/YEL	RR0 (Rear-right 0)	Detects right-rear wheel sensor signal.	4-17		When the wheel is turned at 1 turn/second.		53 mV or above on digital tester (AC range) (Reference) 150 mVp-p or above on oscilloscope
6	GRY	RL0 (Rear-left 0)	Detects left-rear wheel sensor signal.	6-19				
8	GRN	FR0 (Front-right 0)	Detects right-front wheel sensor signal.	8-21				
						Stops		Approx. 2.5 V
9	GRN/WHT	STOP (Stop)	Detects brake switch signal. (Prevents unnecessary ABS operation)	9-GND		Brake pedal depressed.		VB
						Brake pedal released.		0 V
10	BRN/WHT	FLO (Front-left 0)	Detects left-front wheel sensor signal.	10-23		When the wheel is turned at 1 turn/second.		53 mV or above on digital tester (AC range) (Reference) 150 mVp-p or above on oscilloscope
						Stops		
12	YEL	RL-OUT (Rear-left outlet)	Drives left-rear outlet solenoid valve.	12-GND	Engine	ON	Solenoid ON	0 V
						OFF	Solenoid OFF	AC: 3~6 V
13	RED/WHT	RR-IN (Rear-right inlet)	Drives right-rear inlet solenoid valve.	13-GND		OFF (Connect the SCS service connector)		Approx. 3 V
14	WHT/GRN	B1 (Battery 1)	Power source for the solenoid valve and pump motor.	14-GND				VB
15	WHT/GRN	B2 (Battery 2)	Power source for the solenoid valve and pump motor.	15-GND				
16	BLK	GND2 (Ground 2)	Ground for the ABS control unit.	16-GND				Below 0.3 V
17	GRN/YEL	RR1 (Rear-right 1)	Detects right-rear wheel sensor signal.	17-4		When the wheel is turned at 1 turn/second.		53 mV or above on digital tester (AC range) (Reference) 150 mVp-p or above on oscilloscope
19	LT BLU	RL1 (Rear-left 1)	Detects left-rear wheel sensor signal.	19-6				
21	GRN/BLK	FR1 (Front-right 1)	Detects right-front wheel sensor signal.	21-8				
23	GRN/ORN	FL1 (Front-left 1)	Detects left-front wheel sensor signal.	23-10				
						Stops		Approx. 2.5 V
25	RED	RL-IN (Rear-left inlet)	Drives left-rear inlet solenoid valve.	25-GND	Engine	ON	Solenoid ON	0 V
						OFF	Solenoid OFF	AC: 3~6 V
						OFF (Connect the SCS service connector)		Approx. 3 V
26	BLK	GND3 (Ground 3)	Ground for the ABS control unit.	26-GND				Below 0.3 V

ABS CONTROL UNIT 22P CONNECTOR



WIRE SIDE OF FEMALE TERMINALS

VB: Battery Voltage

Terminal number	Wire color	Terminal sign (Terminal name)	Description	Measurement terminals	Voltage			
					Conditions (Ignition Switch ON (III))		Output voltage	
1	RED/BLU	FR-IN (Front-right inlet)	Drives right-front inlet solenoid valve.	1-GND	Engine	ON	Solenoid ON	0 V
							Solenoid OFF	AC: 3~6 V
						OFF (Connect the SCS service connector)		Approx. 3 V
4	BRN	SCS (Service check signal)	Detects service check signal (Diagnostic trouble code indication)	4-GND	SCS service connector connected.		0 V	
					SCS service connector disconnected.		Approx. 5 V	
7	BLU/RED	WALP (Warning lamp)	Drives ABS indicator light (The indicator light goes off when ABS control unit outputs battery voltage).	7-GND	Indicator light ON		Approx. 2 V	
					Indicator light OFF		VB	
10	YEL/BLK	FL-OUT (Front-left outlet)	Drives left-front outlet solenoid valve.	10-GND	Engine	ON	Solenoid ON	0 V
							Solenoid OFF	AC: 3~6 V
						OFF (Connect the SCS service connector)		Approx. 3 V
11	RED/BLK	FL-IN (Front-left inlet)	Drives left-front inlet solenoid valve.	11-GND	Engine	ON	Solenoid ON	0 V
							Solenoid OFF	AC: 3~6 V
						OFF (Connect the SCS service connector)		Approx. 3 V
12	YEL/BLU	FR-OUT (Front-right outlet)	Drives right-front outlet solenoid valve.	12-GND	Engine	ON	Solenoid ON	0 V
							Solenoid OFF	AC: 3~6 V
						OFF (Connect the SCS service connector)		Approx. 3 V
14	LT BLU	DLC (Data link connector)	Communicates with Honda PGM Tester.	14-GND	—		Approx. 5 V	
17	BRN/YEL	MCK (Motor check)	Detects pump motor drive signal.	17-GND	Pump motor relay	ON		VB
						OFF		0 V
19	YEL/RED	PMR (Pump motor relay)	Drives pump motor relay.	19-GND	Engine	ON	Solenoid ON	0 V
							Solenoid OFF	AC: 3~6 V
						OFF (Connect the SCS service connector)		Approx. 3 V
21	BLU	RR-OUT (Rear-right outlet)	Drives right-rear outlet solenoid valve.	21-GND	Engine	ON	Pump motor relay ON	0 V
							Pump motor relay OFF	AC: 3~6 V
						OFF (Connect the SCS service connector)		Approx. 3 V
22	BLK	GND2 (Ground 2)	Ground for the ABS control unit.	22-GND			Below 0.3 V	

Troubleshooting Precautions

ABS Indicator Light

1. The ABS indicator light comes on when the ABS control unit detects a problem in the system. However, even though the system is normal, the ABS indicator light can come on, too, under the following conditions. To determine the actual cause of problem, question the customer about the problem, taking the following conditions into consideration.
 - Signal disturbance
 - Wheel spin
 - Only drive wheels rotate
 - Battery voltage fluctuates
2. When a problem is detected and the ABS indicator light comes on, the indicator light can stay on until the ignition switch is turned off, or it can automatically go off, depending on the mode.
 - Light stays on until the ignition switch is turned off: When the system is in the system down mode.
 - Light automatically goes off: When the system is in the control inhibition mode.
(refer to symptom-to-system chart)
3. The ABS indicator light stays on when the system is reactivated without erasing the DTC, but it goes off after starting the car.
When the wheel sensor system is faulty and the ABS indicator light comes on, the algorithm of the system automatically turns off the ABS indicator light after the wheel speed signal returns to the normal speed. While, when the DTC is erased, the CPU is reset and the ABS indicator light goes off when the system checked out normal by the initial diagnosis. Therefore, test-drive the car after servicing the wheel sensor system, and be sure that the ABS indicator light does not come on.
4. When the ABS control unit outputs battery voltage to gauge assembly, the ABS indicator light goes off.

Diagnostic Trouble Code (DTC)

1. The diagnostic trouble code (DTC) is memorized when a problem is detected and the ABS indicator light does not go off, or when the ABS indicator light comes on.
The DTC is not memorized when the ABS indicator light comes on unless the CPU is activated.
2. The memory can hold any number of DTCs. However, when the same DTC is detected twice or more, the later one is written over the old one.
Therefore, when the same problem is detected repeatedly, it is recorded as one DTC.
3. The DTCs are indicated in the order of ascending number, not in the order they occur.
4. The DTCs are memorized in the EEPROM (non-volatile memory).
Therefore, the memorized DTCs cannot be canceled by disconnecting the battery. Perform the specified procedures to erase.

Self-diagnosis

1. The self-diagnosis can be classified into these four categories.
 - Initial diagnosis: Performed right after the engine starts and until the ABS indicator light goes off.
 - Except ABS control: Performed when the ABS is not functioning.
 - During ABS control: Performed when the ABS is functioning.
 - During warning: Performed when the ABS indicator light is ON.
2. The system performs the following controls when a problem is detected by the self-diagnosis.
 - ABS indicator light ON
 - Memory of DTC
 - Mode change to the "system down mode" or the "control inhibition mode".

MODE	ABS INDICATOR LIGHT	MAIN RELAY	SOLENOID VALVE	CPU	Restart condition		DTC
					Ignition switch	OFF → ON	
SYSTEM DOWN	ON	No operation	Drive inhibition	Operation*1	Ignition switch	OFF → ON	Memory
CONTROL INHIBITION	ON	No operation	Drive inhibition	Operation	Automatic		Memory

*1: Except CPU failure

Kickback

1. The motor operates when the ABS is functioning, and the fluid in the reservoir is forced out to the master cylinder causing kickback at the brake pedal.
2. The ABS control unit operates the solenoid valve when the brake pedal is released after the initial diagnosis. You may hear the faint solenoid valve operation sound at this time, but it is normal.

Pump Motor

1. The pump motor operates when the ABS is functioning.
2. The ABS control unit checks the pump motor operation during acceleration. You may hear the faint operation sound at this time, but it is normal.

Brake Fluid Replacement/Air Bleeding

1. Brake fluid replacement and air bleeding procedures are same as conventional brakes.

Troubleshooting

1. The troubleshooting flowcharts explain the procedures on the assumption that the cause of the problem is still present and the ABS indicator light is still on.
Note that troubleshooting following the flowchart when the ABS indicator light does not come on can result in incorrect judgment.
2. Question the customer about the conditions when the problem occurred, and try to reproduce the same conditions for troubleshooting.
Self-diagnosis is made at various times such as the initial diagnosis, except ABS control, during ABS control, during acceleration, during the specified vehicle speed, etc. Therefore, the symptom cannot be checked unless the check conditions match with the problem conditions.
3. When the ABS indicator light does not come on during the test-drive, but the troubleshooting is performed based on the DTC, check for the loose connectors, poor contact of the terminals, etc, before troubleshooting.
4. After troubleshooting, erase the DTC and test-drive the car. Be sure that the ABS indicator light does not come on.
5. The connector illustrations show the female connectors with a single outline and the male connectors with a double outline.
6. The connector terminal cavities containing female terminals are always numbered by looking at the connector from the wire side, and the cavities containing male terminals are always numbered by looking at the connector from the terminal side.

Diagnostic Trouble Code (DTC)

Diagnostic Trouble Code (DTC) Indication

NOTE: This operation can also be carried out with Honda PGM Tester.




1. Connect the SCS service connector to the service check connector inside the passenger's side kick panel.
2. Turn the ignition switch ON (II), but do not start the engine.
NOTE: Do not depress the brake pedal when turning the ignition switch.
3. Record the blinking frequency of the ABS indicator light. The blinking frequency indicates the DTC.
4. Turn the ignition switch OFF, and remove the SCS service connector.
NOTE: The Malfunction Indicator Lamp (MIL) will stay on after the engine is started if the SCS service connector is connected.
5. Erase the DTC.

Conditions for DTC indication

- The car is stopped.
- The SCS service connector is connected before the ignition switch is turned ON (II).
- The brake pedal is released.
- The SCS service connector remains connected during this procedure.

The DTC indication stops and the ABS control unit executes the software function if at least one of the following conditions is satisfied.

- The car is not stopped.
- The ABS control unit receives the normal signal (which is for the ABS control unit) from a Honda PGM Tester.
- The SCS service connector is disconnected during this procedure.

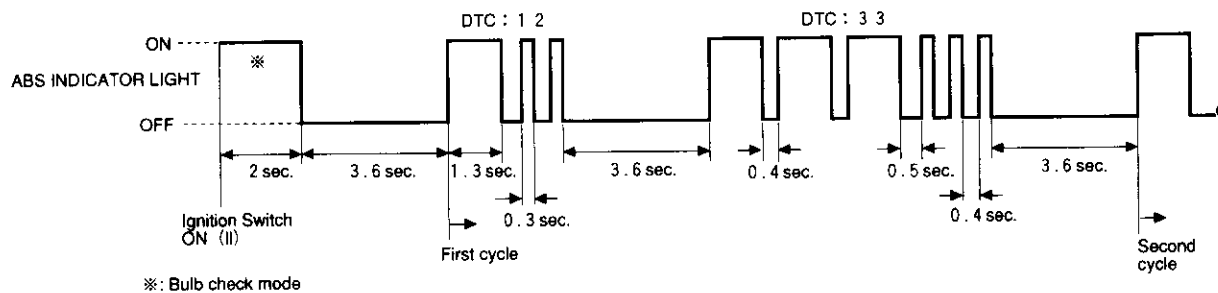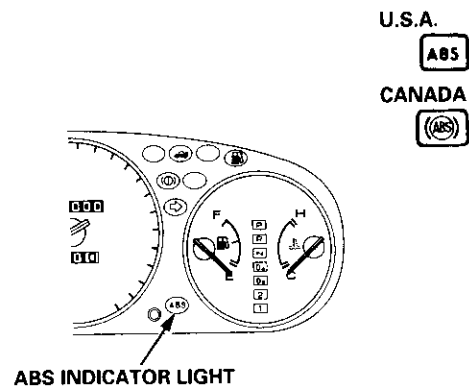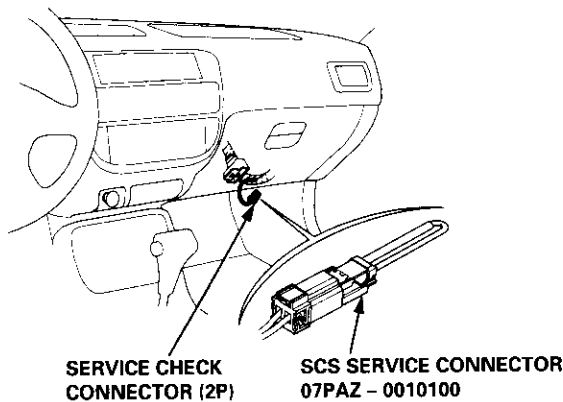

- When ignition switch is turned ON (II), the ABS indicator light comes on to check the bulb. Do not count it as a DTC.
- The ABS control unit can memorize any number of DTCs.
- The new DTC is not memorized when the ABS control unit has already memorized the same DTC.
- If the DTC is not memorized, the ABS indicator light stays ON after it goes off for 3.6 seconds.

Diagnostic Trouble Code (DTC)

Symptom-to-System Chart

DTC	ABS INDICATOR LIGHT	DIAGNOSIS/SYMPTOM	DETECTION TIMING				PROBLEM LOCATION	PROBABLE CAUSE
			INITIAL DIAGNOSIS	EXCEPT ABS CONTROL	DURING ABS CONTROL	DURING WARNING		
NO DTC	OFF	ABS indicator light does not come on when ignition switch is turned on (II)						<ul style="list-style-type: none"> Open in the power source circuit for the ABS indicator light Blown ABS indicator light bulb Open in the ABS indicator light drive circuit. Short to power in the WALP circuit Faulty ABS control unit
	ON	ABS indicator light does not go off after engine is started						<ul style="list-style-type: none"> Open in the IG2 circuit Open in the +B circuit Open and/or short to body ground in the WALP circuit Faulty ABS control unit
11	ON*	Wheel sensor (open/short to body ground/short to power)	○	○	○	○	FR	<ul style="list-style-type: none"> Open, short to body ground and/or short to power in the wheel sensor circuit Faulty wheel sensor Faulty ABS control unit
13							FL	
15							RR	
17							RL	
12	ON*	Wheel sensor/Pulser (chipped pulser gear/noise)					FR	<ul style="list-style-type: none"> Short to wheel sensor (0) circuit in the wheel sensor (1) circuit Faulty wheel sensor installation Chipped pulser gear Faulty ABS control unit
14							FL	
16							RR	
18							RL	
31	ON	Solenoid (open/short to body ground/short to power/stuck)	○	○	○		FR-IN	<ul style="list-style-type: none"> Open, short to body ground and/or short to power in the solenoid drive circuit Open in the COM circuit Open solenoid Faulty ABS control unit
32							FR-OUT	
33							FL-IN	
34							FL-OUT	
35							RR-IN	
36							RR-OUT	
37							RL-IN	
38							RL-OUT	
51	ON	Motor lock		○	○		<ul style="list-style-type: none"> Open in the motor power source circuit Open in the motor GND circuit Faulty pump motor Faulty ABS control unit 	
52	ON	Motor stuck OFF		○	○		<ul style="list-style-type: none"> Open in the COM, PMR and/or MCK circuit Open and/or blown fuse in the under-hood ABS fuse/relay box power source circuit Faulty pump motor relay Faulty ABS control unit 	
53	ON	Motor stuck ON		○			<ul style="list-style-type: none"> Short to body ground in the PMR circuit Short to power in the pump motor power source circuit Faulty pump motor relay Faulty ABS control unit 	
54	ON	Main relay stuck OFF	○	○	○		<ul style="list-style-type: none"> Open, short to body ground and/or blown fuse in the B1 or B2 circuit Short to body ground and/or short to power in the COM circuit Faulty modulator unit Faulty ABS control unit 	
61	ON	Ignition voltage (low voltage/high voltage)	○	○	○	○	<ul style="list-style-type: none"> Connection of the 24 V battery for engine start Faulty charging system Open in the IG2 circuit Faulty ABS control unit 	
81	ON	CPU	○	○	○	○	<ul style="list-style-type: none"> External factor(s) can be the cause(s) of the problem Faulty ABS control unit 	


*: If DTCs 11-18 (wheel sensor codes) were detected the last time the car was driven, the ABS indicator light will stay on until the ignition switch is turned ON (II), and the control unit confirms that the wheel sensors are OK.

CONDITION FOR DETECTION	MANAGEMENT		REFER TO PAGE
	DURING ABS CONTROL	EXCEPT ABS CONTROL	
			19-48
			19-50
The ABS indicator light comes on when vehicle is stopped and wheel sensor a given voltage does not input.	System down	System down	19-52
The ABS indicator comes on under the following conditions. <ul style="list-style-type: none"> • When more than one of wheels are at a standstill and the velocity of the fastest wheel reaches a given speed. • When the velocity of the fastest wheel reaches or exceeds a given speed, and if there are some wheels whose velocity is slower than a certain percentage of the fastest wheel speed for a given period. • When there are temporary open or short circuits of the wheel sensor, chipped pulser gear, or signal disturbance. 	System down	System down	19-52
The main relay repeats ON/OFF switching at all times. <ul style="list-style-type: none"> • When the main relay is ON, a short test pulse is sent to each valve. If there is some discrepancy, the ABS indicator light comes on. • When the main relay is OFF, a short test pulse is sent to each valve. If the solenoid drive voltage is out of a given range, the ABS indicator light comes on. 	System down	System down	19-54
<ul style="list-style-type: none"> • The pump motor is activated once or twice after every ignition switch ON (II) operation while the vehicle accelerates, then the motor drive voltage is checked. When the voltage is abnormal, the ABS indicator light comes on. • After ABS control completion, the motor switched is off and the main CPU checks the motor drive voltage. When the voltage is abnormal, the ABS indicator light comes on. 	—	System down	19-56
During an active motor test or ABS control, the main CPU checks the supply voltage to the motor. When the voltage is abnormal, the ABS indicator light comes on.	System down	System down	19-56
If the motor drive voltage indicates motor operation when the main CPU does not switch the motor ON, the ABS indicator comes on.	—	System down	19-56
<ul style="list-style-type: none"> • When a solenoid valve failure is detected, the CPU checks the voltage of the main relay output. If the voltage is lower than a given voltage, the ABS indicator light comes on. • The main relay repeats ON/OFF switching at all times. When the main relay is off, a short test pulse is sent to each valve. The CPU monitors the reference voltage. If the voltage is out of a given range, the ABS indicator light comes on. 	System down	System down	19-59
When the ignition voltage is lower or higher than a given voltage, the CPU inhibits ABS control and switches off the main relay, and the ABS indicator light comes on. When the ignition voltage recovers to normal range, ABS inhibition is canceled.	Inhibit all wheels	Inhibit all wheels	19-60
The main CPU and sub CPU check each other under certain conditions. When the CPUs detect the following discrepancies, the ABS indicator light comes on. <ul style="list-style-type: none"> • When there is discrepancy in the calculated wheel speed velocity that continues for more than a given period. • When there is discrepancy in the phase information that continues for more than a given period. • When there is discrepancy in the calculated control parameter. • When the watch dog control pulse is fails for a given period. • When the checksum of the ROM is fails. • When there is discrepancy in the data reading and writing procedure of RAM. 	System down	System down	19-61

Troubleshooting


ABS Indicator Light Does Not Come On

The ABS indicator light does not come on when ignition switch is turned ON (II)

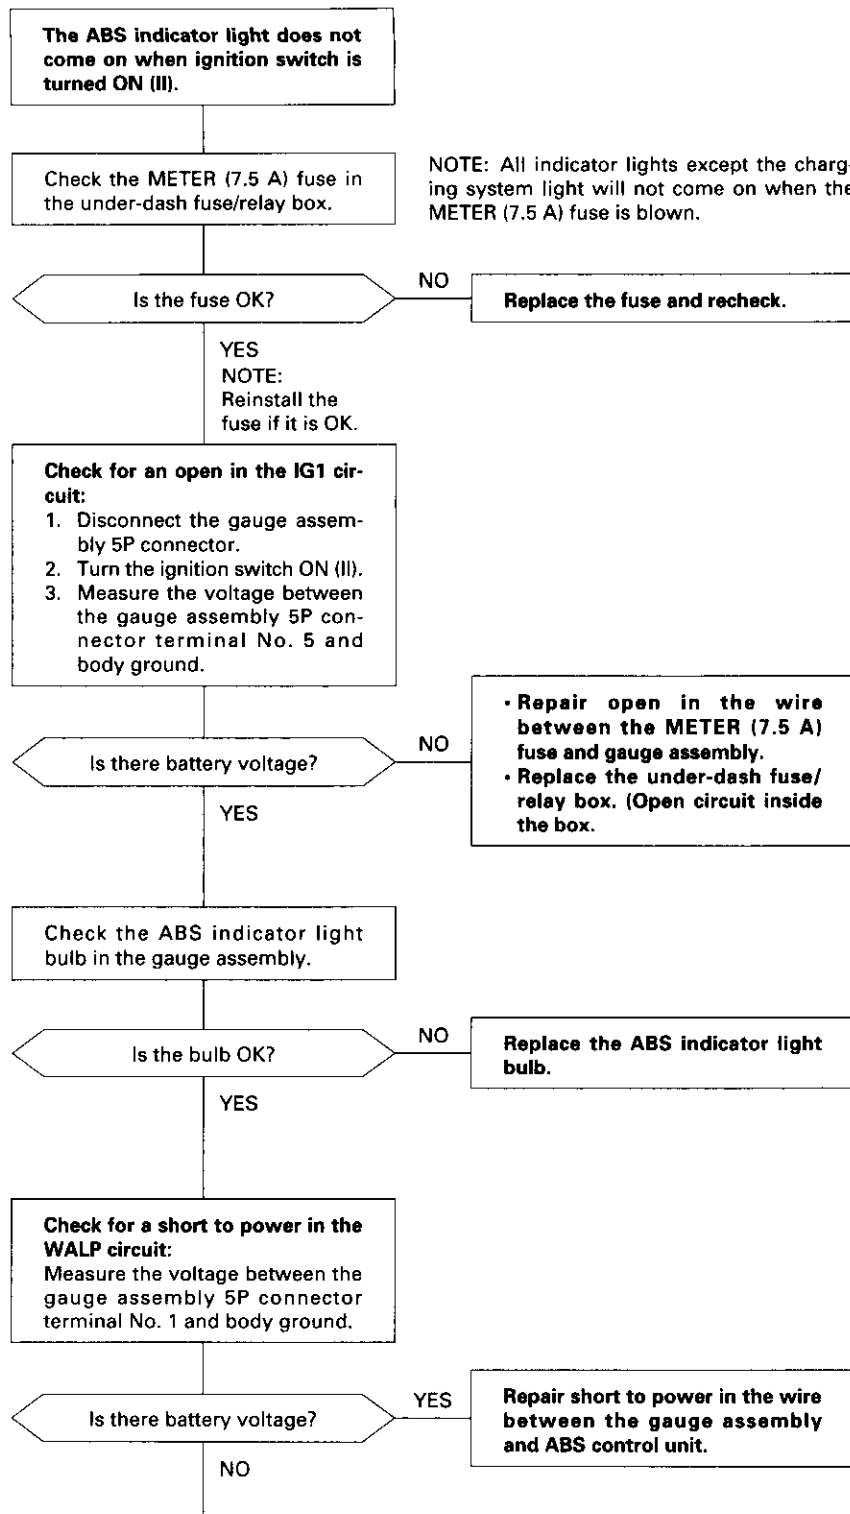


(To page 19-49)

GAUGE ASSEMBLY 5P CONNECTOR

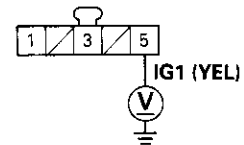

WIRE SIDE OF FEMALE TERMINALS

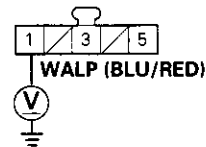

(From page 19-48)

Check the gauge assembly:

1. Turn the ignition switch OFF.
2. Connect the gauge assembly 5P connector.
3. Connect the terminal No. 3 to body ground with a jumper wire.
4. Turn the ignition switch ON (II).

Does the ABS indicator light come on?


NO

Replace the ABS indicator light drive circuit in the gauge assembly.

YES

- Repair open in the wire between the gauge assembly and body ground.
- Repair poor ground (G401, G402).


GAUGE ASSEMBLY 5P CONNECTOR

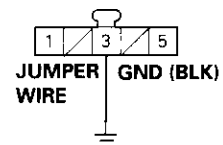

Troubleshooting

ABS Indicator Light Does Not Go Off


The ABS indicator light does not go off after the engine is started.

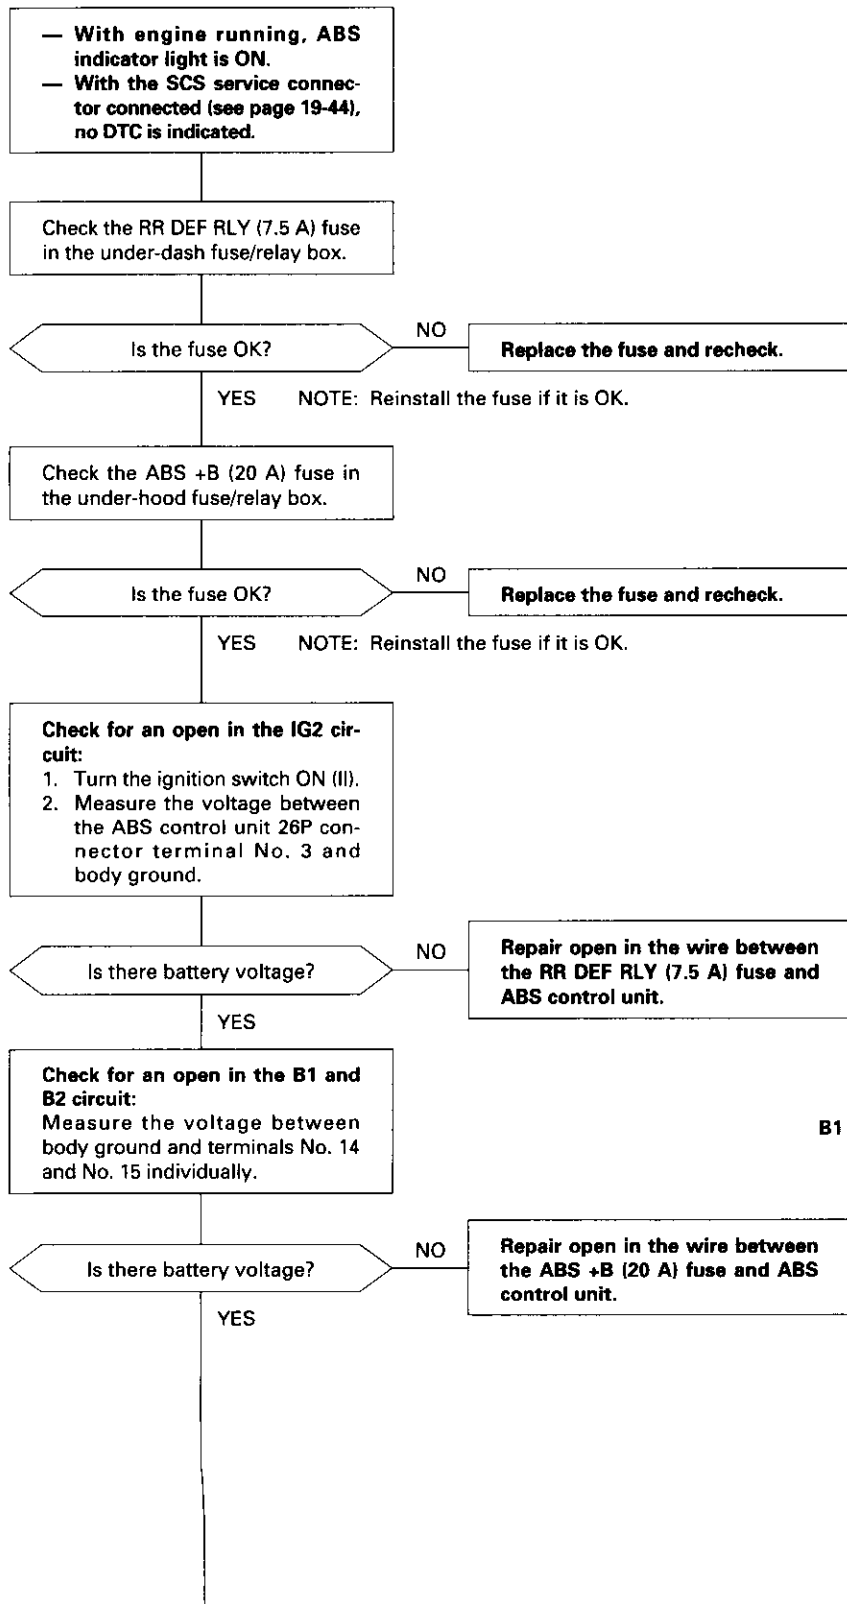

(To page 19-51)


ABS CONTROL UNIT 26P CONNECTOR

IG2 (BLK/BLU)



WIRE SIDE OF FEMALE TERMINALS

ABS CONTROL UNIT 26P CONNECTOR

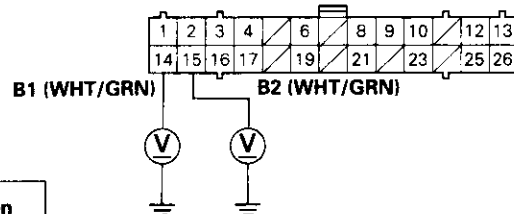

WIRE SIDE OF FEMALE TERMINALS

(From page 19-50)

Check for a short to body ground in the WALP circuit:

1. Turn the ignition switch OFF.
2. Disconnect the ABS control unit 22P and gauge assembly 5P connectors.
3. Check for continuity between the ABS control unit 22P connector terminal No. 7 and body ground.

Is there continuity? YES

Repair short to body ground in the wire between the ABS control unit and gauge assembly.

NO

Check the ABS control unit:

1. Connect the ABS control unit 22P connector.
2. Turn the ignition switch ON (II).
3. Measure the voltage between the ABS control unit 22P connector terminal No. 7 and body ground.

Is there battery voltage? NO

Check for an open in the GND2 circuit:

1. Connect the ABS control unit 26P connector terminal No. 16 to body ground with a jumper wire.
2. Measure the voltage between the ABS control unit 22P connector terminal No. 7 and body ground.

YES

Is there battery voltage? YES

- Repair open in the wire between the ABS control unit and body ground.
- Repair poor ground (G401, G402).

NO

Check for loose ABS control unit connectors. If necessary, substitute a known-good ABS control unit and recheck.

Check for an open in the WALP circuit:
Measure the voltage between the gauge assembly 5P connector terminal No. 1 and body ground.


Is there battery voltage? NO

Repair open in the wire between the ABS control unit and gauge assembly.

YES


Replace the ABS indicator light drive circuit in the gauge assembly.

ABS CONTROL UNIT 22P CONNECTOR

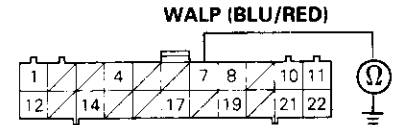


WIRE SIDE OF FEMALE TERMINALS

ABS CONTROL UNIT 22P CONNECTOR

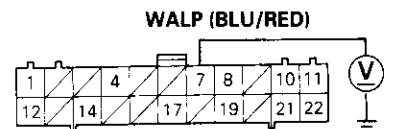


WIRE SIDE OF FEMALE TERMINALS

ABS CONTROL UNIT 26P CONNECTOR

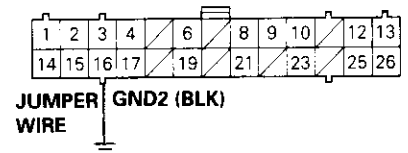

WIRE SIDE OF FEMALE TERMINALS

GAUGE ASSEMBLY 5P CONNECTOR

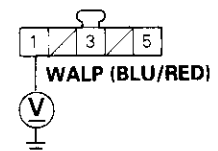

WIRE SIDE OF FEMALE TERMINALS

Troubleshooting

Wheel Sensor

Diagnostic Trouble Code (DTC) 11-18: Wheel Sensor Diagnosis

NOTE: The ABS indicator light comes on when only the drive wheels are turning, signal disturbance is detected, etc. Therefore, test-drive the car at a speed of 12 mph (20 km/h) or more after turning the ignition switch from OFF to ON (II), and if the ABS indicator light does not come on, the system is OK.

- With the ignition switch ON (II), ABS indicator light does not go off.
- After driving, ABS indicator light comes on.
- With the SCS service connector connected (see page 19-50), DTCs 11-18 are indicated.

Check the wheel sensor circuit:

1. Disconnect the ABS control unit 26P connector.
2. Measure the resistance between the appropriate wheel sensor (0) and (1) circuit terminals*.

Is the resistance OK?
(Front: 750 - 1050 Ω/20°C, 68°F)
(Rear: 850 - 1150 Ω/20°C, 68°F)
(Drum)

NO

- Repair open in the (0) or (1) circuit wire, or short to the (0) circuit wire in the (1) circuit wire between the ABS control unit and appropriate wheel sensor.
- Replace the appropriate wheel sensor.

YES

Check for a short to body ground in the wheel sensor circuit:
Check for continuity between the ABS control unit 26P connector appropriate wheel sensor (0) circuit terminal* and body ground.

Is there continuity?

YES

- Repair short to body ground in the (0) or (1) circuit wire between the ABS control unit and appropriate wheel sensor.
- Replace the appropriate wheel sensor.

NO

Check for a short to power in the wheel sensor circuit:

1. Reconnect the ABS control unit 26P connector.
2. Start the engine.
3. Measure the voltage between the ABS control unit 26P connector appropriate wheel sensor (0) circuit terminal and body ground.

Is there 4 V or more?

YES

- Repair short to power in the (0) or (1) circuit wire between the ABS control unit and appropriate wheel sensor.

NO


NOTE:

- Normal voltage: Approx. 2 V
- 0 V: Replace the ABS control unit.
- 4 V or more indicates a short to power.



*

DTC	Appropriate Terminal	
	(0) SIDE	(1) SIDE
11, 12 (Right-front)	No. 8: FR0	No. 21: FR1
13, 14 (Left-front)	No. 10: FL0	No. 23: FL1
15, 16 (Right-rear)	No. 4: RR0	No. 17: RR1
17, 18 (Left-rear)	No. 6: RL0	No. 19: RL1

ABS CONTROL UNIT 26P CONNECTOR

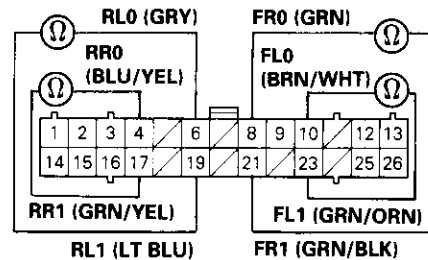


WIRE SIDE OF FEMALE TERMINALS

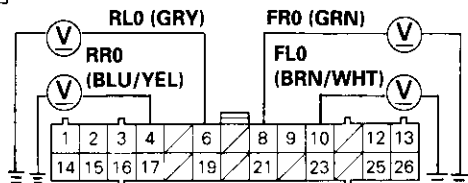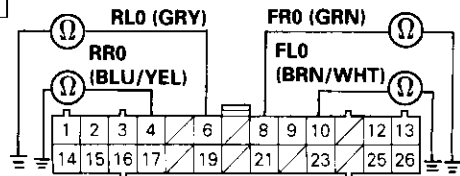

NOTE: Judgement value for short to power is at 4 V.

(To page 19-53)

(From page 19-52)

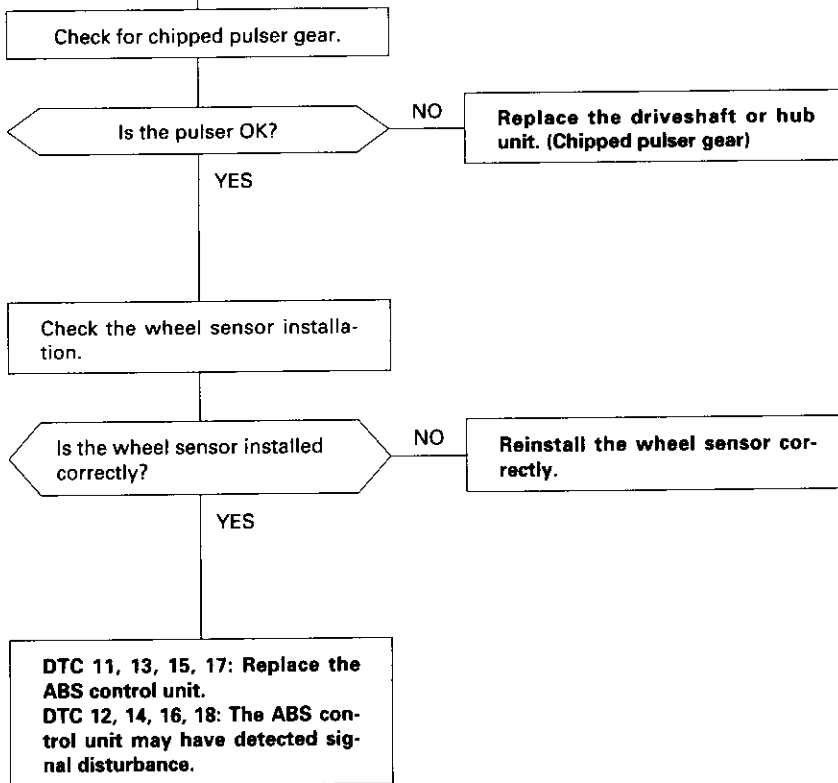

Troubleshooting

Solenoid

Diagnostic Trouble Code (DTC) 31-38: Solenoid Diagnosis

- With the ignition switch ON (II), ABS indicator light does not go off, or ABS indicator light comes on while ABS is functioning.
- With the SCS service connector connected (see page 19-50), DTCs 31-38 are indicated.

Check for a short to power in the solenoid circuit:

1. Disconnect the ABS control unit 22P and 26P connectors.
2. Start the engine.
3. Measure the voltage between the ABS control unit connector appropriate solenoid circuit terminal* and body ground.

Is there battery voltage?

YES

Repair short to power in the appropriate solenoid circuit wire between the ABS control unit and modulator unit.

NO

Check for a short to body ground in the solenoid circuit:
Check for continuity between the appropriate solenoid circuit terminal* and body ground.

Is there continuity?

YES

- Repair short to body ground in the appropriate solenoid circuit wire between the ABS control unit and modulator unit.
- Replace the modulator unit.

NO

Check the ABS control unit:

1. Turn the ignition switch OFF.
2. Connect the ABS control unit 22P and 26P connectors.
3. Connect the SCS service connector.
4. Turn the ignition switch ON (II).
5. Measure the voltage between the ABS control unit 26P connector appropriate COM circuit terminal** and body ground.

Is there approx. 3 V?

NO

Check for loose ABS control unit connectors. If necessary, substitute a known-good ABS control unit and recheck.

YES

(To page 19-55)


*

DTC	Appropriate Connector	Appropriate Terminal
31: FR-IN	22P	No. 1
32: FR-OUT	22P	No. 12
33: FL-IN	22P	No. 11
34: FL-OUT	22P	No. 10
35: RR-IN	26P	No. 13
36: RR-OUT	22P	No. 21
37: RL-IN	26P	No. 25
38: RL-OUT	26P	No. 12

**


DTC	Appropriate Terminal
31: FR-IN	No. 2: SCOM
32: FR-OUT	No. 2: SCOM
33: FL-IN	No. 1: PCOM
34: FL-OUT	No. 1: PCOM
35: RR-IN	No. 1: PCOM
36: RR-OUT	No. 1: PCOM
37: RL-IN	No. 2: SCOM
38: RL-OUT	No. 2: SCOM

ABS CONTROL UNIT 22P CONNECTOR

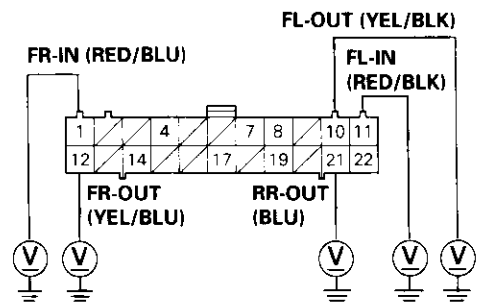


WIRE SIDE OF FEMALE TERMINALS

ABS CONTROL UNIT 26P CONNECTOR

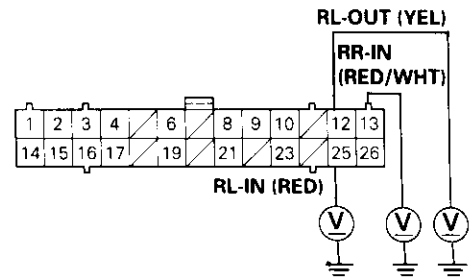


WIRE SIDE OF FEMALE TERMINALS

ABS CONTROL UNIT 22P CONNECTOR

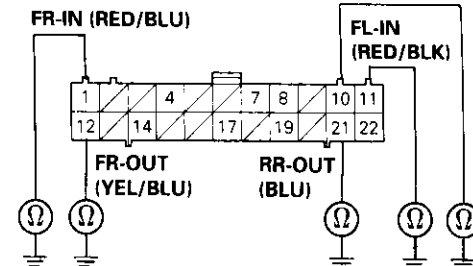


ABS CONTROL UNIT 26P CONNECTOR

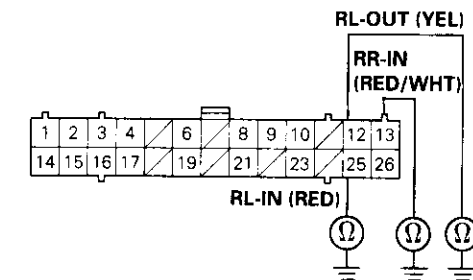


PCOM (GRN/WHT)

SCOM (BLK/WHT)



(From page 19-54)

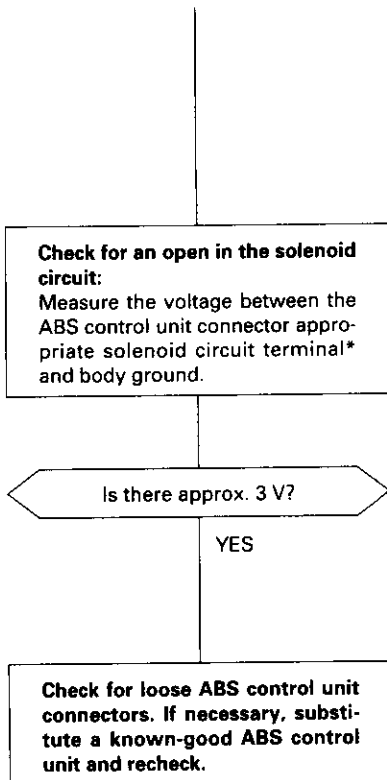


*

DTC	Appropriate Connector	Appropriate Terminal
31: FR-IN	22P	No. 1
32: FR-OUT	22P	No. 12
33: FL-IN	22P	No. 11
34: FL-OUT	22P	No. 10
35: RR-IN	26P	No. 13
36: RR-OUT	22P	No. 21
37: RL-IN	26P	No. 25
38: RL-OUT	26P	No. 12


- Repair open in the appropriate COM circuit wire between the ABS control unit and modulator unit.
- Repair open in the appropriate solenoid circuit wire between the ABS control unit and modulator unit.
- Replace the modulator unit.

ABS CONTROL UNIT 22P CONNECTOR

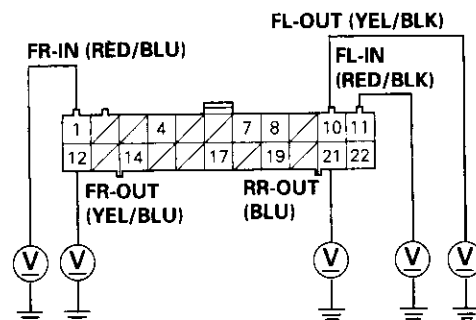

WIRE SIDE OF FEMALE TERMINALS

ABS CONTROL UNIT 26P CONNECTOR

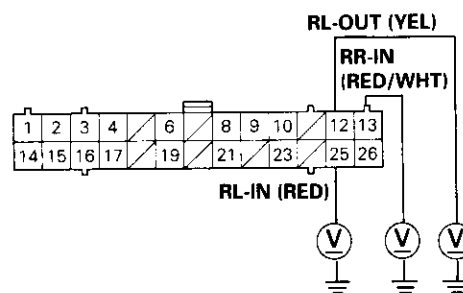

WIRE SIDE OF FEMALE TERMINALS

Troubleshooting

ABS Pump Motor

Diagnostic Trouble Code (DTC) 51-53: ABS Pump Motor Diagnosis

— With the ignition switch ON (II), ABS indicator light does not go off.
 — With the SCS service connector connected (see page 19-50), DTCs 51-53 are indicated.

Check the MTR CHECK (7.5 A) fuse.

Is the fuse OK?

NO
Replace the fuse and recheck.

YES
 NOTE: Reinstall the fuse if it is OK.

NOTE: Short the PMR terminal to body ground for a moment, and recheck the fuse. If the fuse is blown, check for a short to body ground in the MCK circuit.

Check the PUMP MOTOR (40 A) fuse.

Is the fuse OK?

NO
Replace the fuse and recheck.

YES
 NOTE: Reinstall the fuse if it is OK.

NOTE: Short the PMR terminal to body ground for a moment, and recheck the fuse. If the fuse is blown, check for a short to body ground in the wire between the under-hood ABS fuse/relay box and pump motor.

Check the pump motor relay (see section 23).

Is the relay OK?

NO
Replace the pump motor relay.

YES

Check the pump motor power source circuit:
 Turn the ignition switch ON (II).

Does the pump motor operate?

YES
Check for a short to power in the pump motor power source circuit:
 Remove the pump motor relay.

NO


Does the pump motor operate?

YES
Repair short to power in the wire between the under-hood ABS fuse/relay box and ABS pump motor.

NO

Check for loose ABS control unit connectors. If necessary, substitute a known-good ABS control unit and recheck.

ABS CONTROL UNIT 22P CONNECTOR

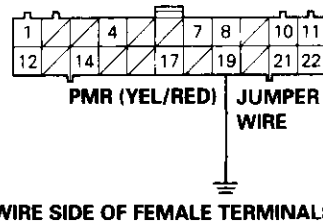

(To page 19-57)

(From page 19-56)

Check the pump motor circuit:
 1. Remove the pump motor relay.
 2. Turn the ignition switch ON (II).
 3. Connect the pump motor relay connector +B and MOTOR terminals with a jumper wire for a moment.

Does the pump motor operate?

YES



NO

Check for an open in the pump motor +B circuit:
 1. Turn the ignition switch OFF.
 2. Disconnect the pump motor 2P connector.
 3. Turn the ignition switch ON (II).
 4. Connect the pump motor relay connector +B and MOTOR terminals with a jumper wire.
 5. Measure the voltage between the pump motor 2P connector terminal No. 1 and body ground.

Is there battery voltage?

YES

NO

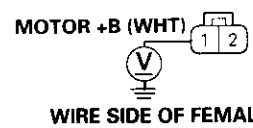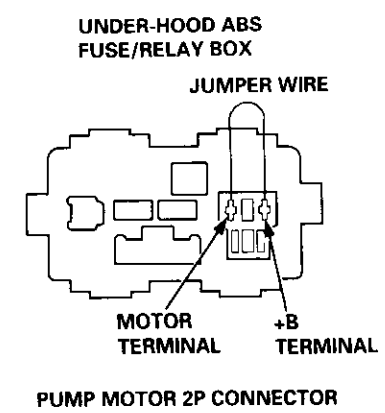


Repair open in the wire between the under-hood ABS fuse/relay box and pump motor.

Check the pump motor operation:
 Connect the battery (+) terminal to the pump motor 2P connector terminal No. 1, and the (-) terminal to the terminal No. 2 for a moment.

Does the pump motor operate?

YES

NO

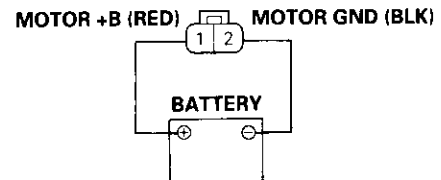

Replace the modulator unit. (Faulty pump motor)

Check for a short to body ground in the PMR circuit:
 1. Turn the ignition switch OFF.
 2. Disconnect the ABS control unit 22P connector.
 3. Check for continuity between terminal No. 19 and body ground.


Is there continuity?

NO

YES

Repair open in the wire between the pump motor and body ground, or poor ground (G403).

Repair short to body ground in the wire between the under-hood ABS fuse/relay box and ABS control unit.

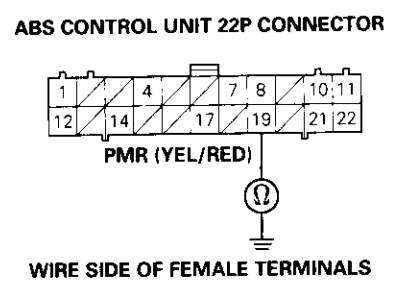

(To page 19-58)

(cont'd)

Troubleshooting

ABS Pump Motor (cont'd)

(From page 19-57)

Check for an open in the PCOM circuit:

1. Turn the ignition switch OFF.
2. Reconnect the ABS control unit 22P connector.
3. Connect the SCS service connector.
4. Turn the ignition switch ON (II).
5. Measure the voltage between the pump motor relay connector PCOM terminal and body ground.

Is there approx. 3 V?

NO
Repair open in the wire between the under-hood ABS fuse/relay box and ABS control unit.

YES

Check for an open in the PMR circuit:
Measure the voltage between the ABS control unit 22P connector terminal No. 19 and body ground.

Is there approx. 3 V?

NO
Repair open in the wire between the under-hood ABS fuse/relay box and ABS control unit.

YES

Check for an open in the MCK circuit:


1. Turn the ignition switch OFF.
2. Disconnect the SCS service connector.
3. Turn the ignition switch ON (II).
4. Measure the voltage between the ABS control unit 22P connector terminal No. 17 and body ground while connecting the pump motor relay connector +B and MOTOR terminal with a jumper wire for moment.

Is there battery voltage?


NO
Repair open in the wire between the under-hood ABS fuse/relay box and ABS control unit.

YES


Check for loose ABS control unit connectors. If necessary, substitute a known-good ABS control unit and recheck.

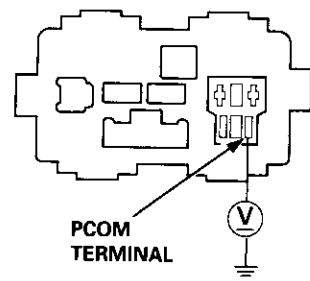

ABS CONTROL UNIT 22P CONNECTOR

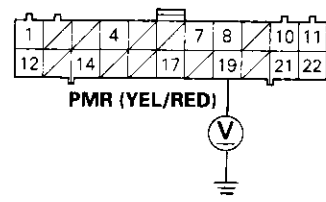

WIRE SIDE OF FEMALE TERMINALS

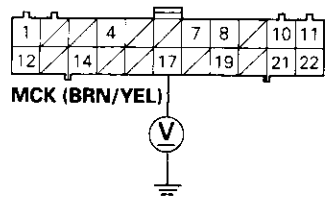

Main Relay

Diagnostic Trouble Code (DTC) 54: Main Relay Diagnosis

— With the ignition switch ON (II), ABS indicator light does not go off.
 — With the SCS service connector connected (see page 19-50), DTC 54 is indicated.

Check the ABS +B (20 A) fuse.

Is the fuse OK? **NO** → Replace the fuse and recheck.

YES
 NOTE: Reinstall the fuse if it is OK.

Check for an open in the B1, B2 circuit:
 Measure the voltage between body ground and the ABS control unit 26P connector terminal No. 14 and No. 15 individually.

Is there battery voltage? **NO** → Repair open in the wire between the ABS control unit and under-hood ABS fuse/relay box.

YES

Check for a short to body ground in the PMR circuit:
 1. Turn the ignition switch OFF.
 2. Remove the pump motor relay.
 3. Disconnect the ABS control unit 22P connector.
 4. Check for continuity between terminal No. 19 and body ground.

Is there continuity? **YES** → Repair short to body ground in the wire between the under-hood ABS fuse/relay box and ABS control unit.

NO


Check for a short to body ground in the PCOM, SCOM circuit:
 1. Disconnect the ABS control unit 26P connector.
 2. Check for continuity between body ground and the ABS control unit 26P terminals No. 1 and No. 2 individually.

Is there continuity? **YES** →
 • Repair short to body ground in the PCOM circuit wire between the ABS control unit and under-hood ABS fuse/relay box.
 • Repair short to body ground in the PCOM or SCOM circuit wire between the ABS control unit and modulator unit.
 • Replace the modulator unit. (Short circuit inside the unit)

NO


(To page 19-60)

ABS CONTROL UNIT 26P CONNECTOR

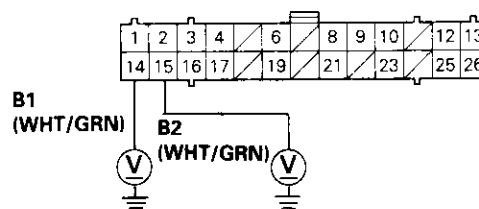


WIRE SIDE OF FEMALE TERMINALS

ABS CONTROL UNIT 22P CONNECTOR

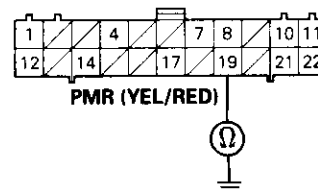

WIRE SIDE OF FEMALE TERMINALS

PCOM (GRN/WHT) SCOM (BLK/WHT)

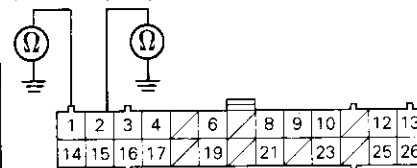

(cont'd)

Troubleshooting

Main Relay (cont'd)

(From page 19-59)

Check for a short to power in the PCOM, SCOM circuit:

1. Start the engine.
2. Measure the voltage between body ground and ABS control unit 26P connector terminals No. 1 and No. 2 individually.


Is there 8 V or more?

NO

Turn the ignition switch OFF and connect the SCS service connector. Then turn the ignition switch ON (II) and measure the voltage between the PCOM and SCOM terminals and body ground. If there is 0 V, replace the ABS control unit.

- YES**
- Repair short to power in the PCOM circuit wire between the ABS control unit and under-hood ABS fuse/relay box.
 - Repair short to power in the PCOM or SCOM circuit wire between the ABS control unit and modulator unit.
 - Replace the modulator unit. (Short to power inside the unit)

NOTE: 8 V or more indicates a short to power.

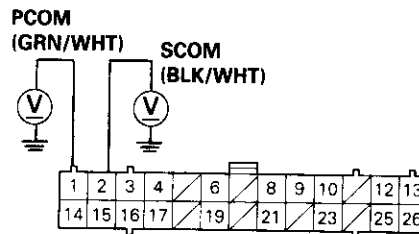

Ignition Voltage

Diagnostic Trouble Code (DTC) 61: Ignition Voltage Diagnosis

- With the engine running, ABS indicator light is ON.
- With the SCS service connector connected (see page 19-50), DTC 61 is indicated.

Problem verification:

1. Erase the DTC.
2. Start the engine.
3. Make sure that the ABS indicator light comes on and DTC 61 is indicated.

Is DTC 61 indicated? NO **The system is OK at this time.**

YES

Check the IG2 circuit:


Measure the voltage between the ABS control unit 26P connector terminal No. 3 and body ground.

Is there 18 V or above? YES **Check the charging system.**

NO

If the voltage is 0 V, check for an open in the IG2 circuit.
If there is 12 – 17 V, substitute a known-good ABS control unit and recheck.

ABS CONTROL UNIT 26P CONNECTOR

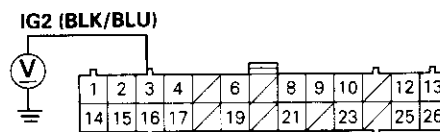

WIRE SIDE OF FEMALE TERMINALS

Troubleshooting


Central Processing Unit (CPU)

Diagnostic Trouble Code (DTC) 81: CPU Diagnosis

- With the ignition switch ON (II), ABS indicator light does not go off.
- With the SCS service connector connected (see page 19-50), DTC 81 is indicated.

Problem verification:

1. Erase the DTC.
2. Test-drive the vehicle.
3. Make sure that the ABS indicator light comes on and DTC 81 is indicated.

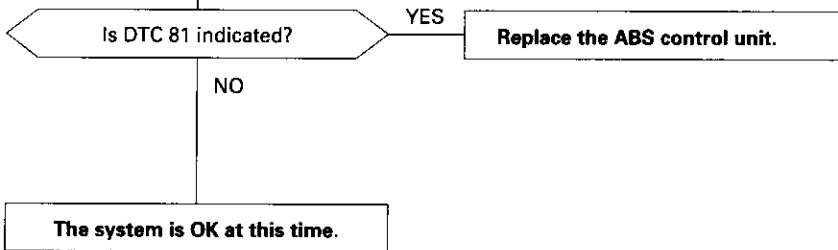

Removal/Installation

CAUTION:

- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- Take care not to damage or deform the brake lines during removal and installation.
- To prevent the brake fluid from flowing, plug and cover the hose ends and joints with a shop towel or equivalent material.


NOTE: Tighten the flare nuts to 15 N·m (1.5 kgf·m, 11 lbf·ft).

Removal

1. Disconnect the modulator unit 10P and pump motor 2P connectors.
2. Disconnect the brake lines, then remove the modulator unit.


Installation

1. Install the modulator unit, then connect the brake lines.
2. Connect the modulator unit 10P and pump motor 2P connectors.
3. Bleed the brake system.
4. Start the engine, and check that the ABS indicator light goes off.

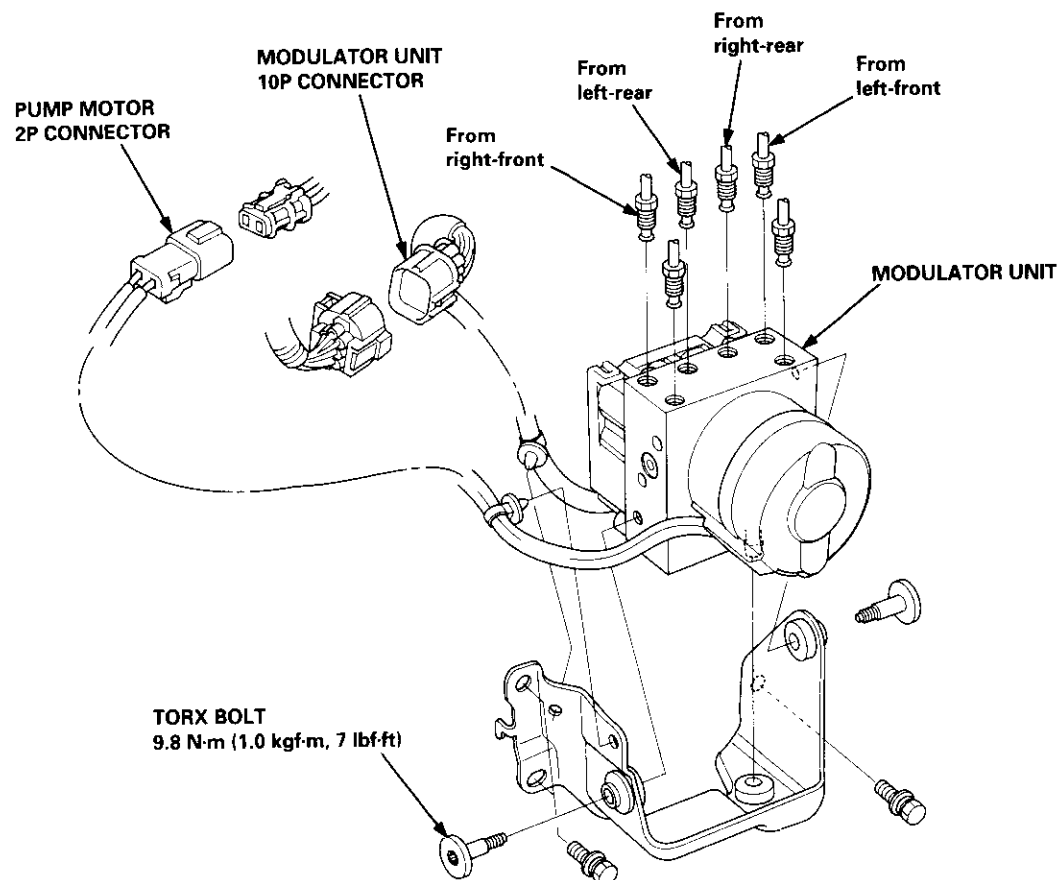

Replacement

1. Remove the right side kick panel.
2. Disconnect the ABS control unit connectors.
3. Remove the ABS control unit.
4. Install the ABS control unit in the reverse order of removal.

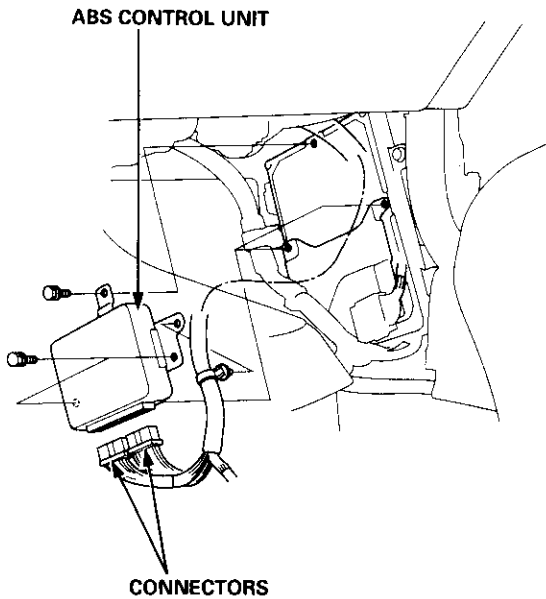


Inspection

1. Check the front and rear pulser for chipped or damaged teeth.
2. Measure the air gap between the wheel sensor and pulser all the way around while rotating the pulser.

Standard: 0.4 – 1.0 mm (0.02 – 0.04 in)

NOTE: If the gap exceeds 1.0 mm (0.04 in), the probability is a distorted suspension arm which should be replaced.

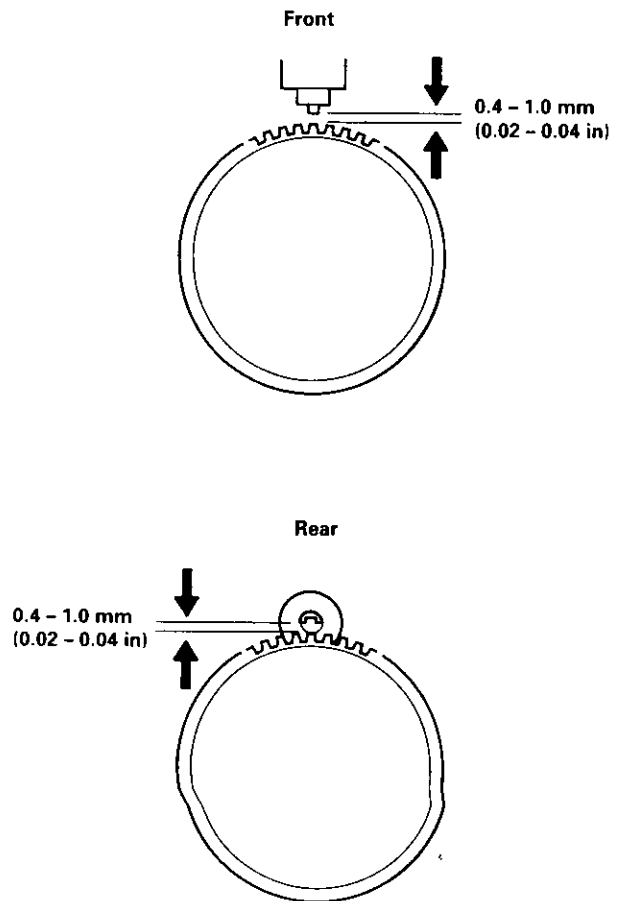


Wheel Sensor Replacement

NOTE:


- Be careful when installing the sensors to avoid twisting the wires.
- The torque value of the bolts is at 9.8 N·m (1.0 kgf·m, 7 lbf·ft).

Front

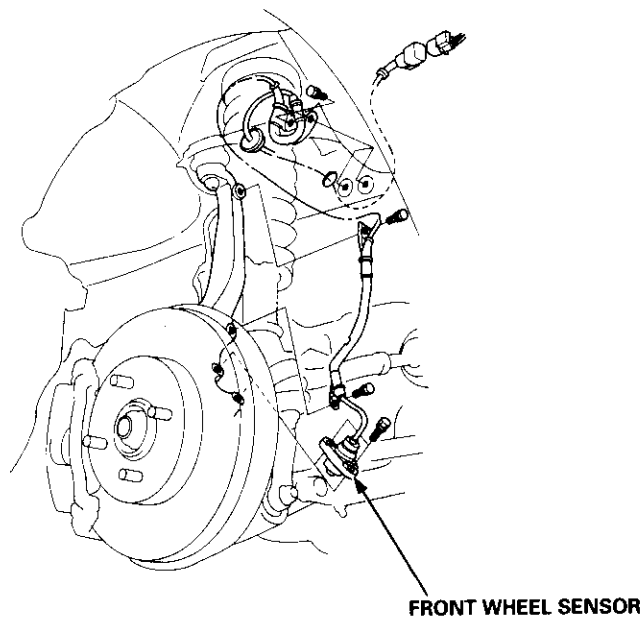

Rear

1. Remove the hub bearing unit (see section 18).
2. Remove the four backing plate bolts.
3. Pull the backing plate away from the trailing arm, then remove the wheel sensor. It is not necessary to disconnect the brake line.

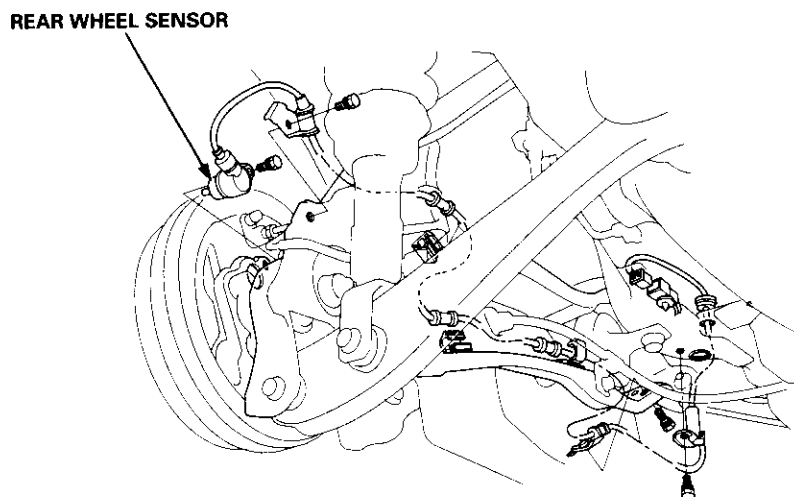

Body ('96 model)

Doors

Front Door Index (4D)	20-2
Rear Door Index (4D)	20-8
Door Index (2D/3D)	20-14

Emblems

Installation	20-118
--------------------	--------

Exterior

Component Location Index	20-93
*Frame Repair Chart	20-120

***Interior**

Component Location Index	20-58
--------------------------------	-------

Mirrors

Mirror Replacement	20-24
Mirror Holder Replacement	20-25
Mirror Cover Replacement	20-25
Rearview Mirror Replacement	20-25

Moonroof

Index	20-50
-------------	-------

Opener Cable/Opener and Latch/ Wiper and Washer

Component Location Index	20-107
--------------------------------	--------

Seats and Seat Belts

Component Location Index	20-73
--------------------------------	-------

Sub-frame

.....	20-119
-------	--------

Windshield, Rear Window and Quarter Glass

Index	20-26
-------------	-------

Body ('97 model)

.....	20-123
-------	--------

Body ('98 model)


.....	20-131
-------	--------




Doors

Front Door Index

4D:

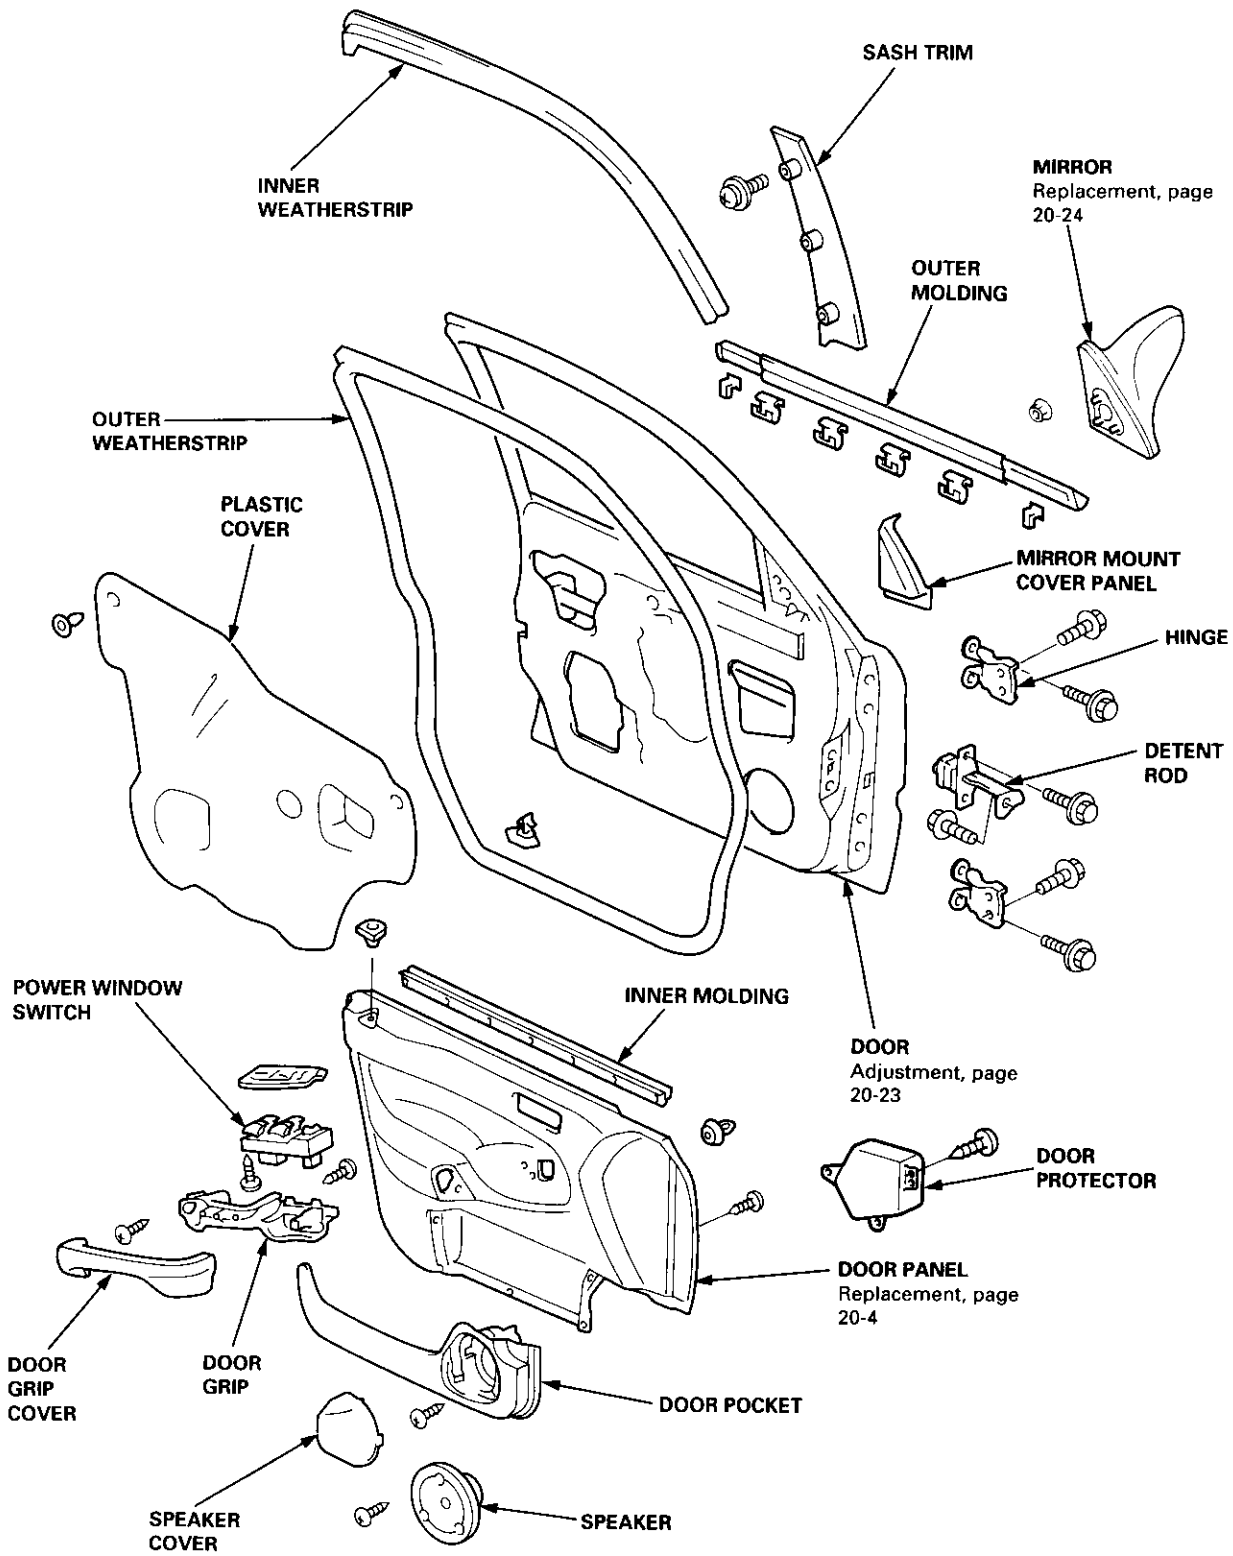

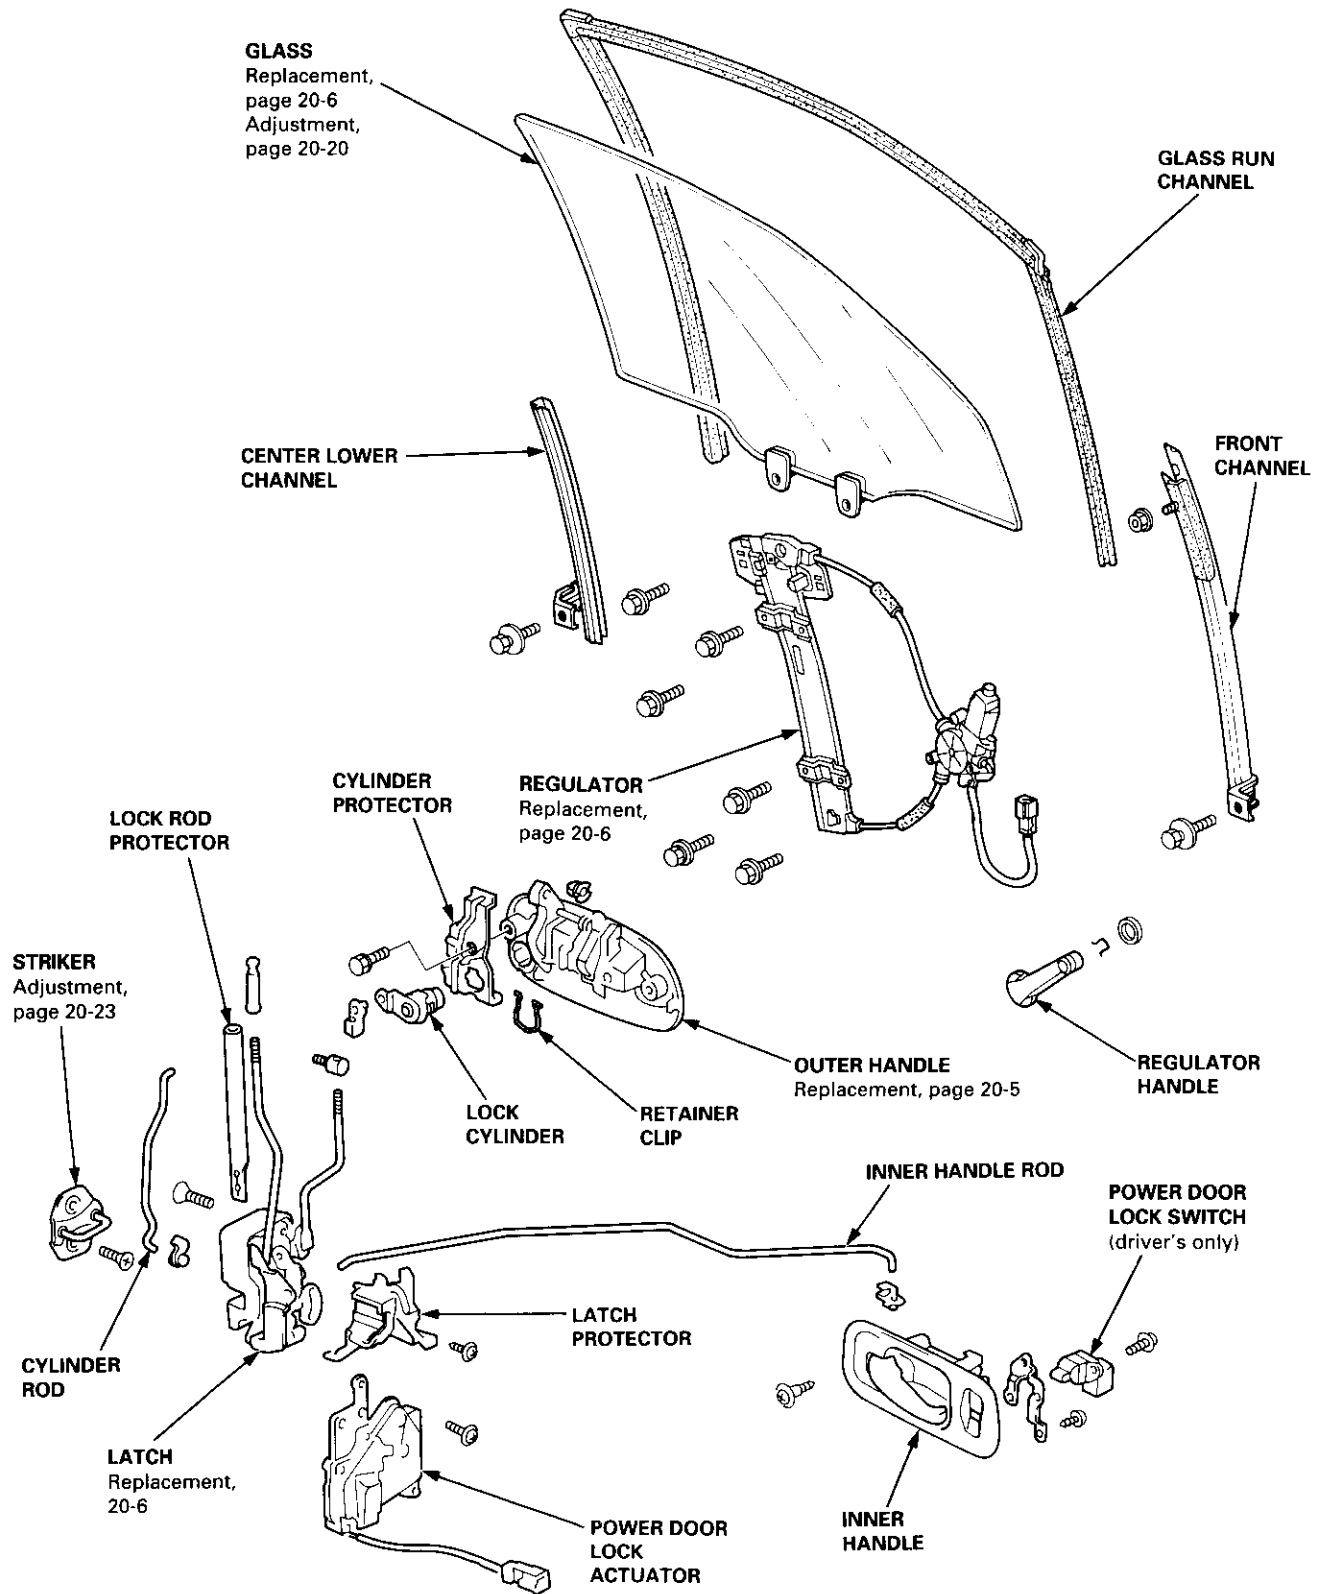


Doors

Door Panel Replacement


NOTE: Take care not to scratch the door panel and other parts.

1. Remove:
 - Inner handle (see page 20-3)
 - Mirror mount cover panel (see page 20-24)
2. If applicable, remove the regulator handle by pulling the clip out with a wire hook.

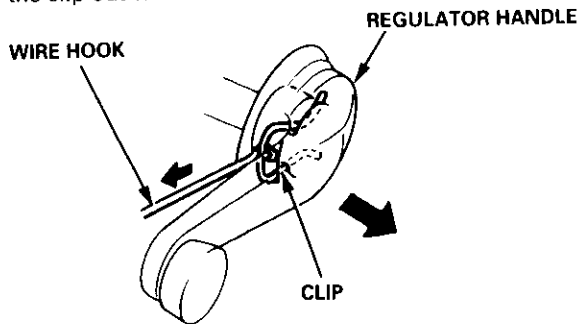


3. Remove the door grip cover and speaker cover, then remove the screws.

►: Screw locations, 5

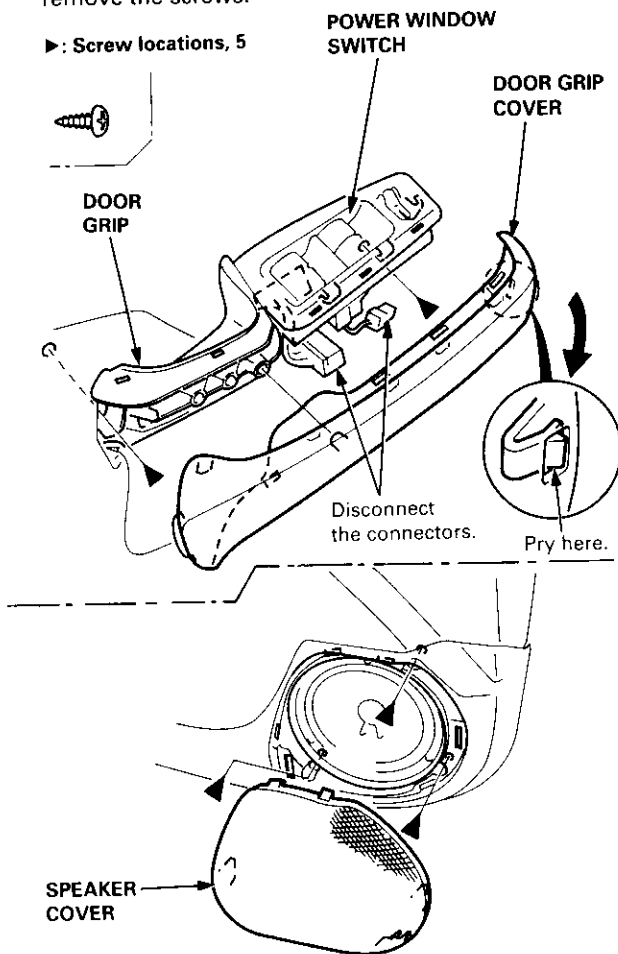


4. Release the clips that hold the door panel. Remove the door panel by pulling it upward.

NOTE: Remove the door panel with as little bending as possible to avoid creasing or breaking it.

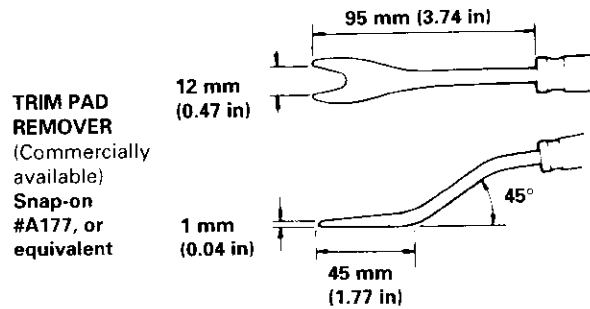

►: Clip locations, 5

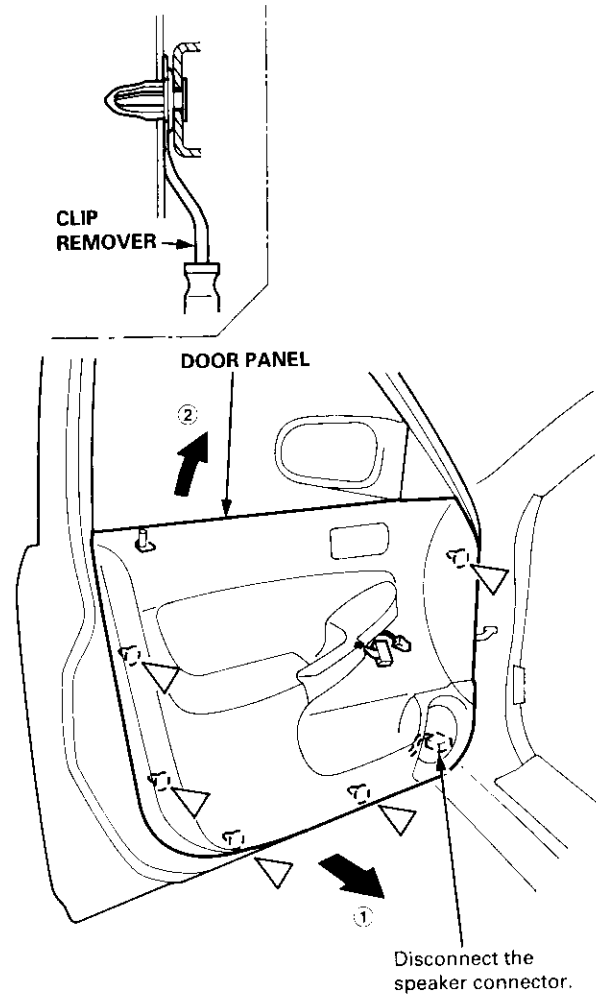


5. Installation is the reverse of the removal procedure.



Outer Handle Replacement



NOTE: Raise the glass fully.

1. Remove:
 - Door panel
 - Plastic cover (see page 20-2)
2. Pull out the retainer clip.

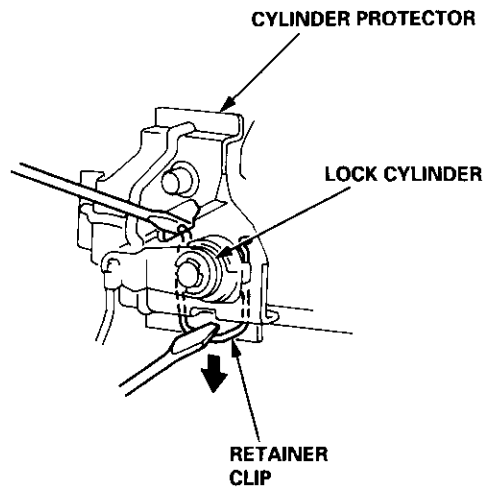

3. Remove the bolts, then remove the cylinder protector, lock cylinder and outer handle.



►: Bolt locations, 2

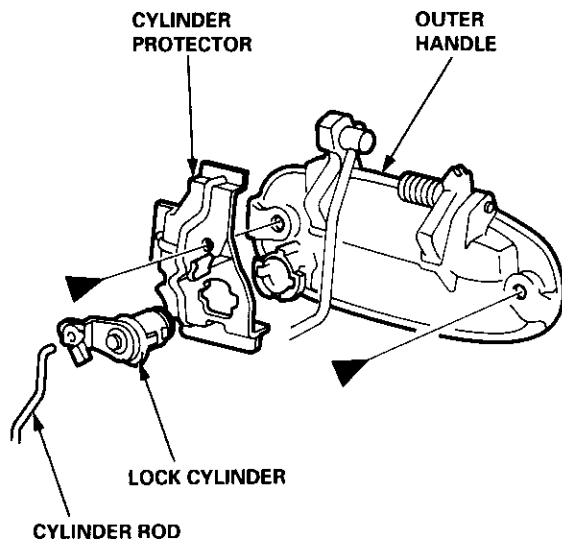

4. Pull out the outer handle. Pry the outer handle rod out of its joint using diagonal cutters.

NOTE:

- To ease reassembly, note location (A) of the outer handle rod on the joint before disconnecting it.
- Take care not to bend the outer handle rod.
- Use a shop towel to protect the opening in the door.

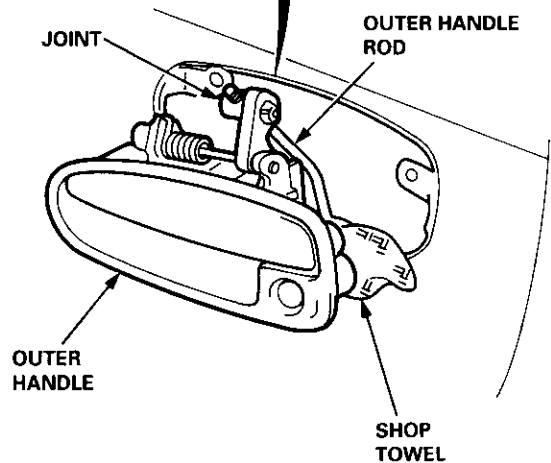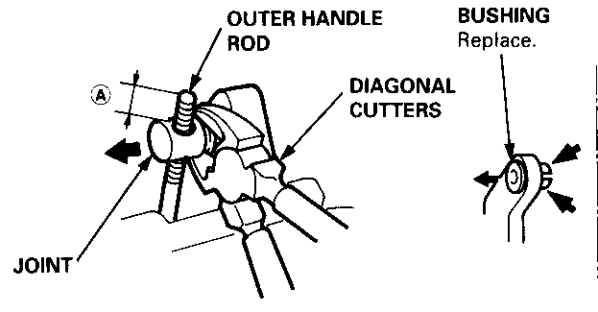

5. Installation is the reverse of the removal procedure.

NOTE: Make sure the door locks and opens properly.

Doors



Latch Replacement

NOTE: Raise the glass fully.

1. Remove:
 - Door panel (see page 20-4)
 - Plastic cover (see page 20-2)
 - Outer handle (see page 20-5)
2. Remove the bolt, then move the center lower channel forward.
3. Disconnect the connector, and detach the harness clip from the door. Remove the latch through the hole in the door.

NOTE: Take care not to bend the inner handle rod, outer handle rod, cylinder rod and lock rod.

►: Screw locations, 3

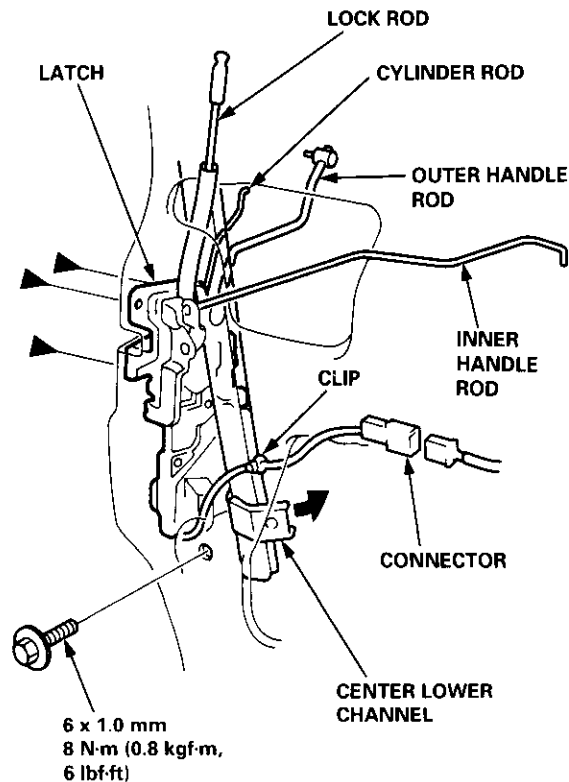

4. Installation is the reverse of the removal procedure.

NOTE:



- Make sure the inner handle rod and connector are connected properly.
- Make sure the door locks and opens properly.

Glass/Regulator Replacement

1. Remove:
 - Door panel (see page 20-4)
 - Plastic cover (see page 20-2)
2. Carefully move the glass until you can see the bolts, then remove them. Carefully pull the glass out through the window slot.

NOTE: Take care not to drop the glass inside the door.

►: Bolt locations, 2

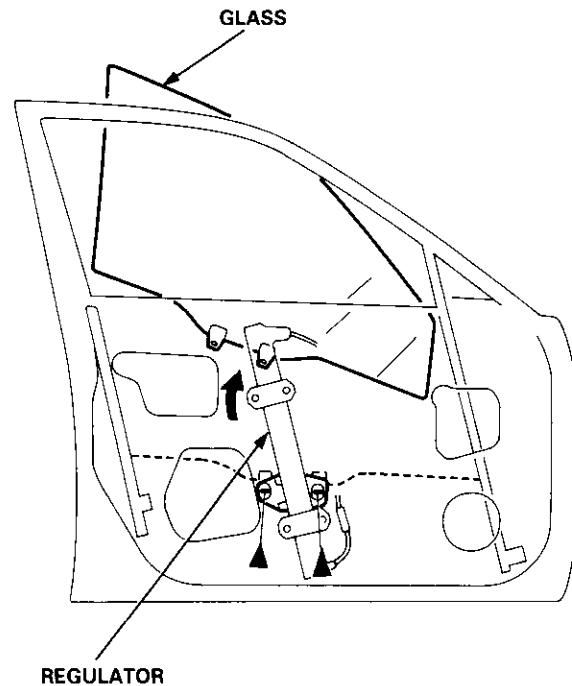



3. Disconnect the connector, and detach the harness clip, then remove the regulator through the hole in the door.

► Bolt locations

A ►, 4





6 x 1.0 mm
8 N·m (0.8 kgf·m,
6 lbf·ft)

B ►, 3



6 x 1.0 mm
8 N·m (0.8 kgf·m,
6 lbf·ft)
Loosen.

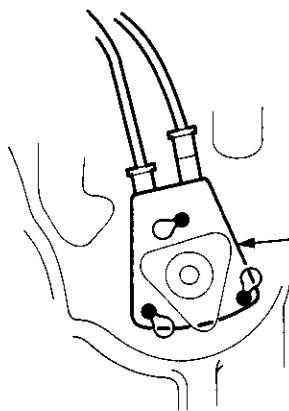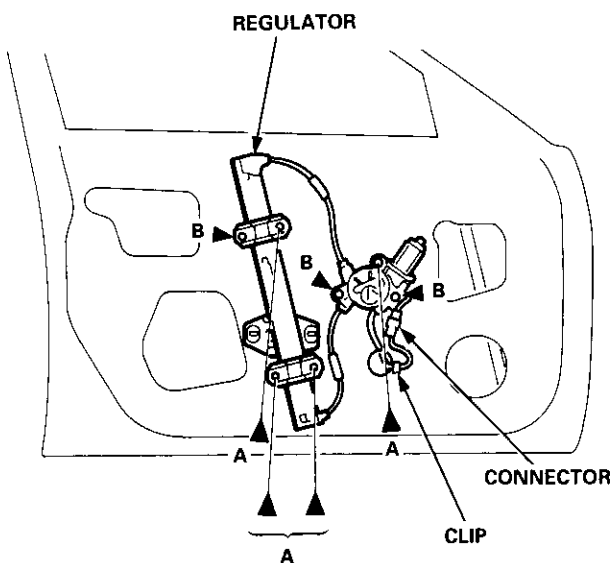


●: Nut locations, 3



6 x 1.0 mm
8 N·m (0.8 kgf·m,
6 lbf·ft)
Loosen.

REGULATOR
(Manual type)

4. Grease all the sliding surfaces of the regulator where shown.

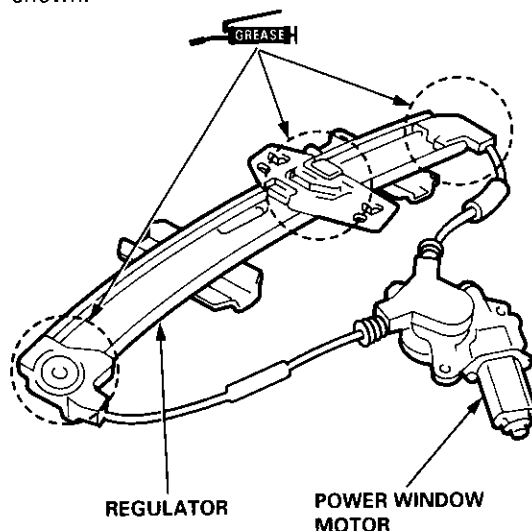


5. Installation is the reverse of the removal procedure.


NOTE: Roll the glass up and down to see if it moves freely without binding. Also make sure that there is no clearance between the glass and glass run channel when the glass is closed. Adjust the position of the glass as necessary (see page 20-20).

Doors

Rear Door Index

4D:

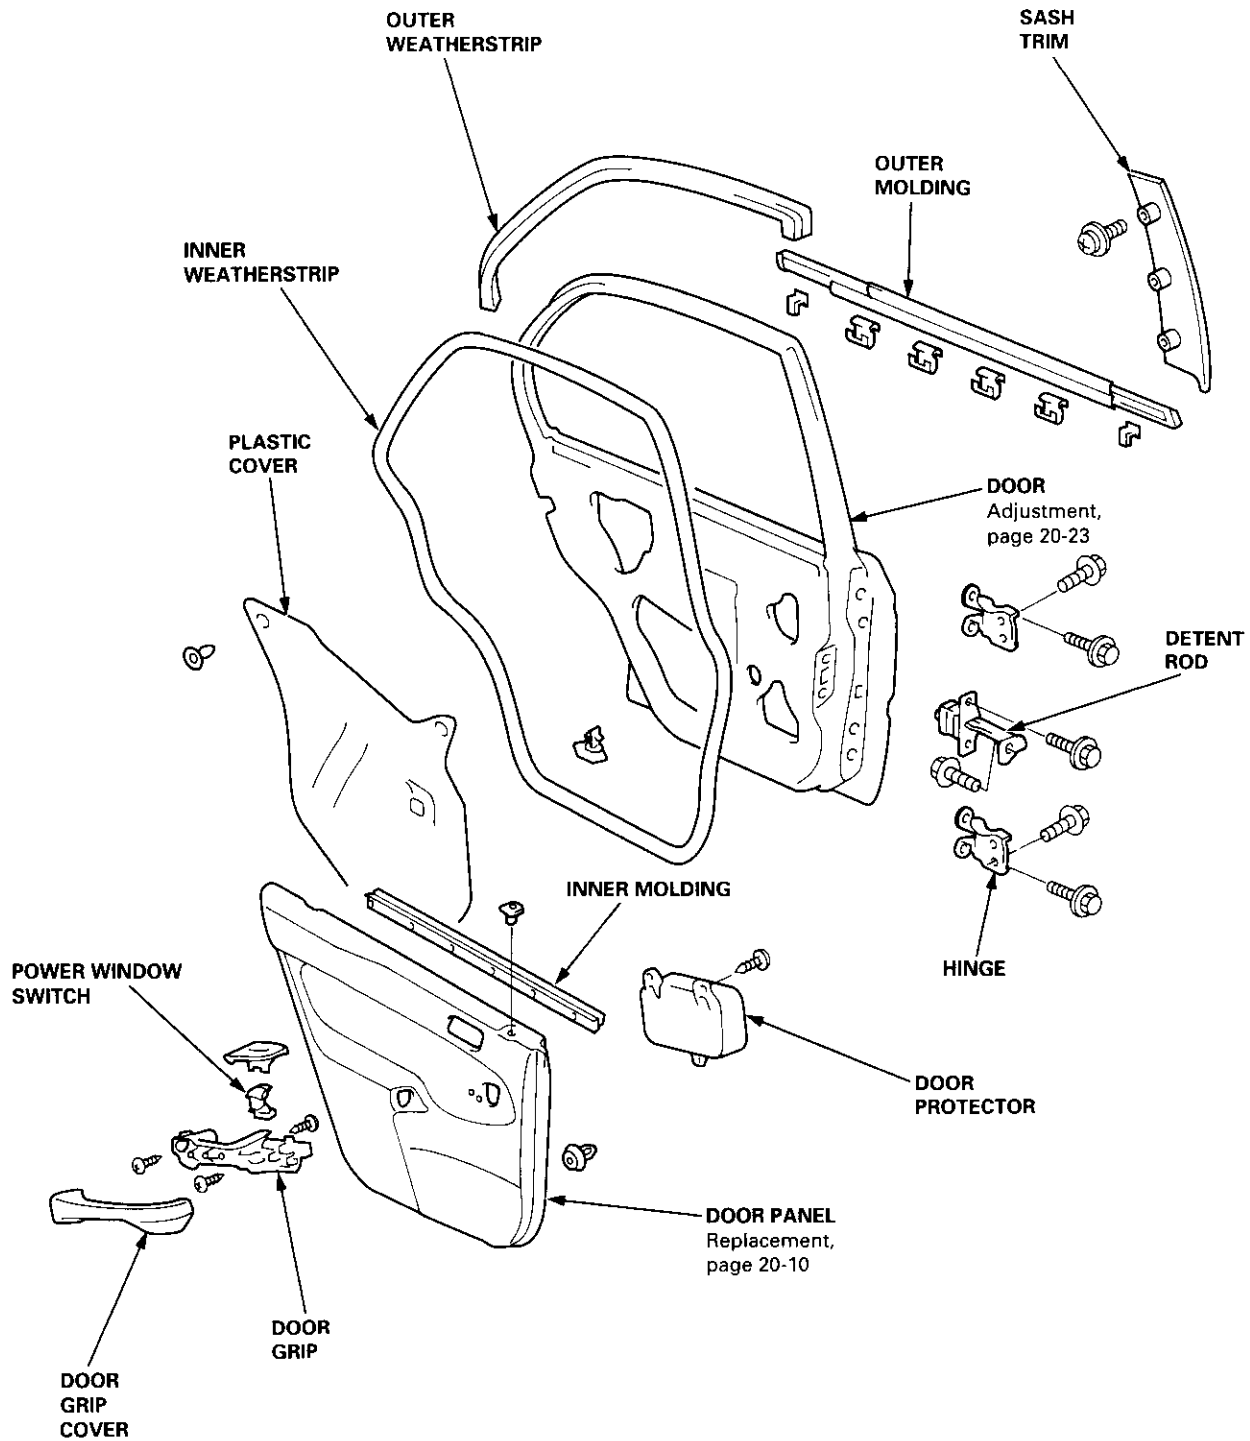

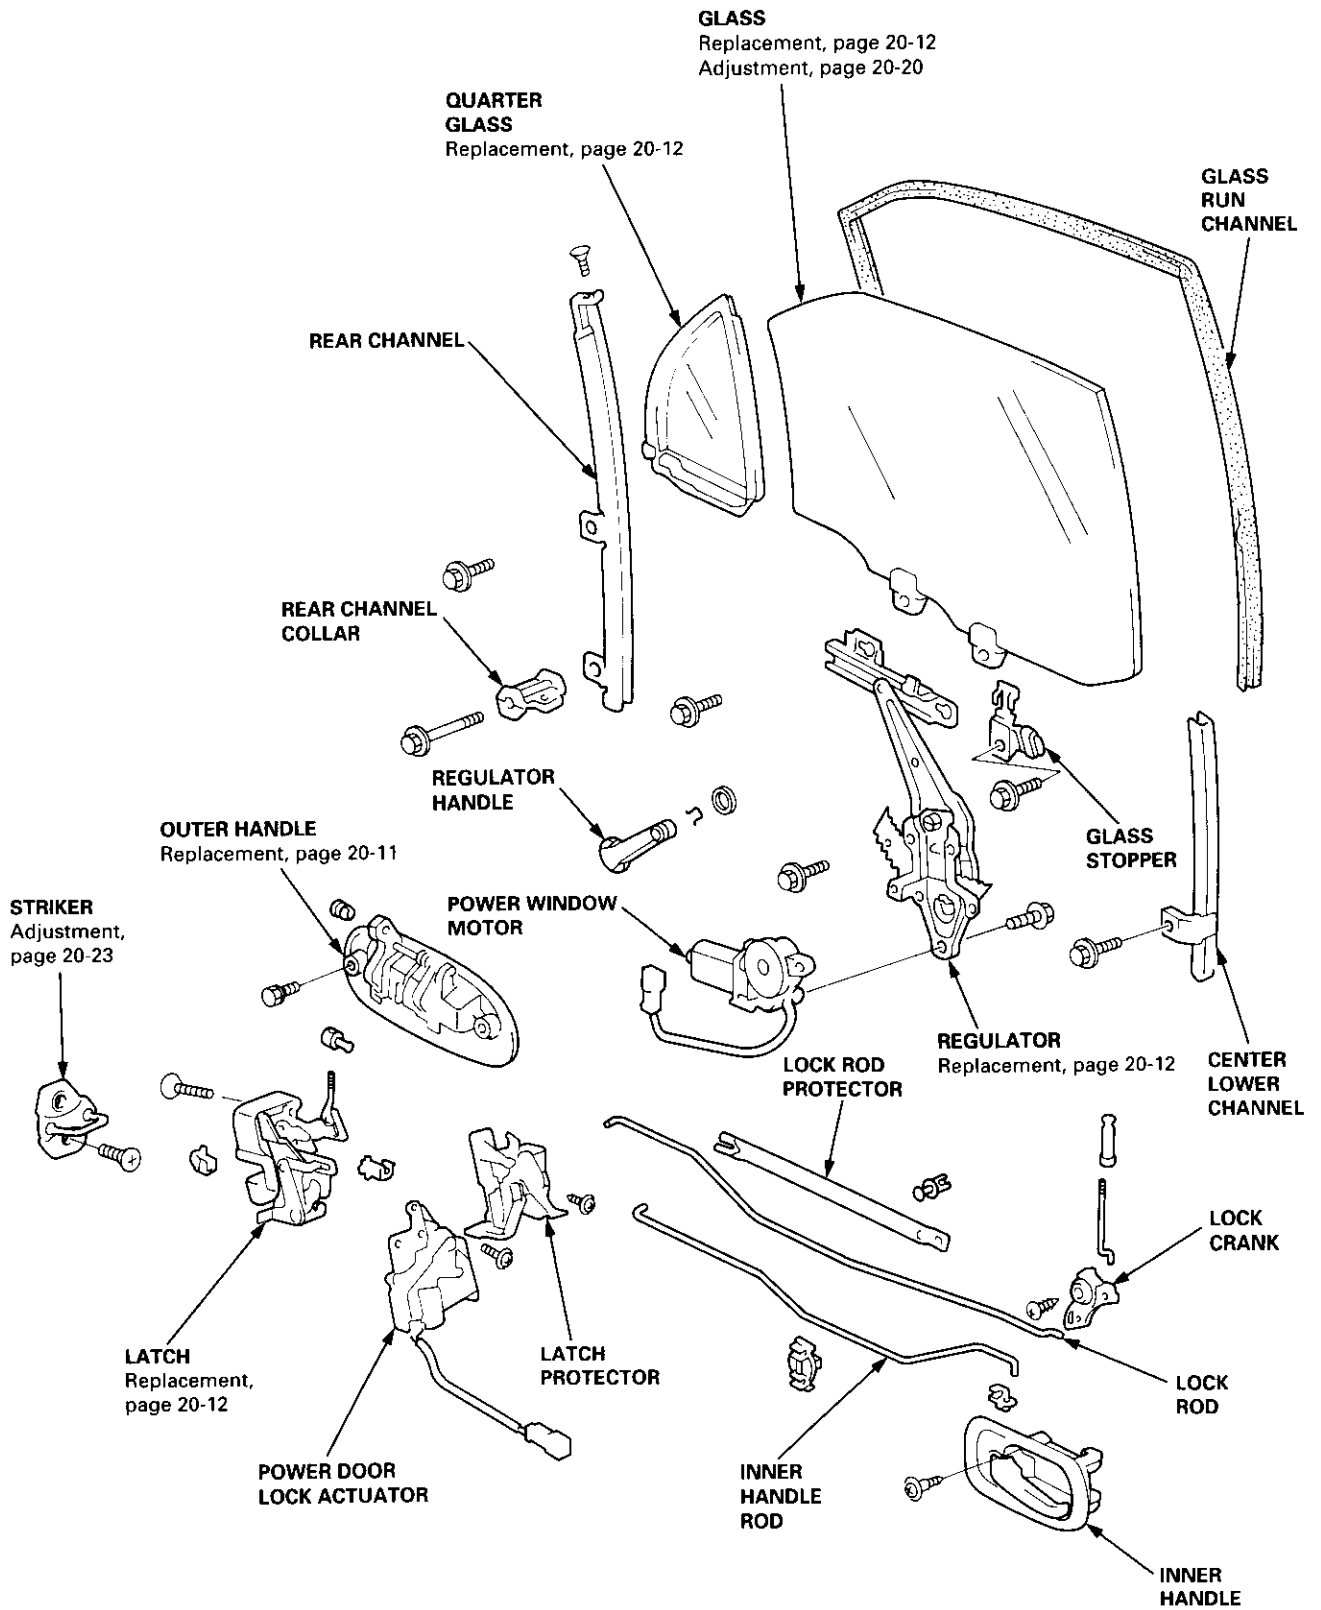


Doors

Door Panel Replacement


NOTE: Take care not to scratch the door panel and other parts.

1. Remove:
 - Inner handle (see page 20-9)
 - Regulator handle (see page 20-4)
2. Remove the door grip cover, then remove the screws.


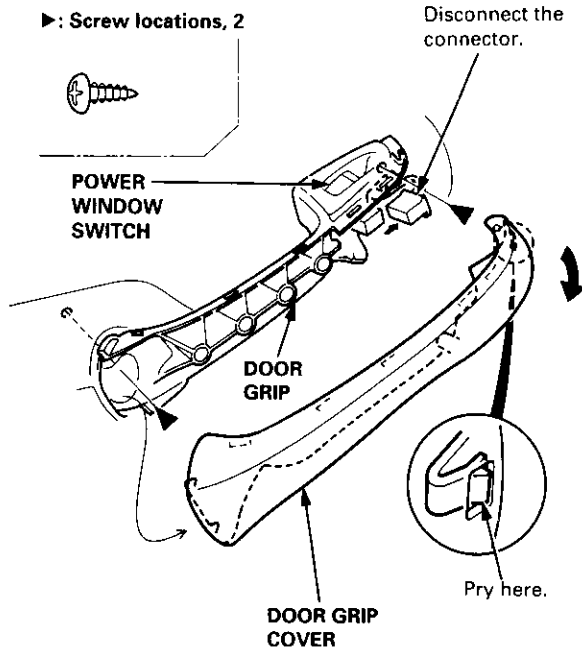


3. Release the clips that hold the door panel. Remove the door panel by pulling it upward.

NOTE: Remove the door panel with as little bending as possible to avoid creasing or breaking it.

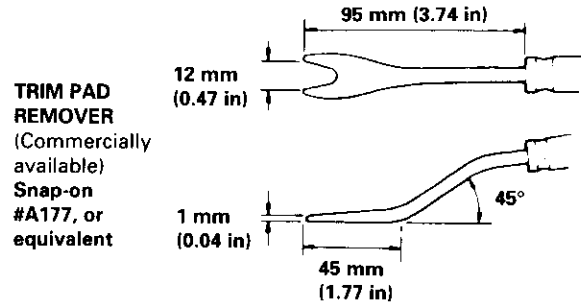

►: Clip locations, 7

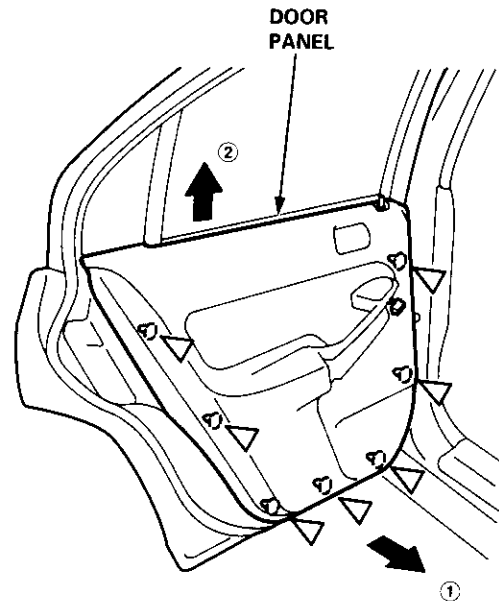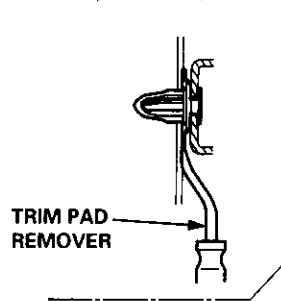

4. Installation is the reverse of the removal procedure.




Outer Handle Replacement

NOTE: Raise the glass fully.


1. Remove:
 - Door panel
 - Plastic cover (see page 20-8)
2. Remove the screws.

►: Screw locations, 3

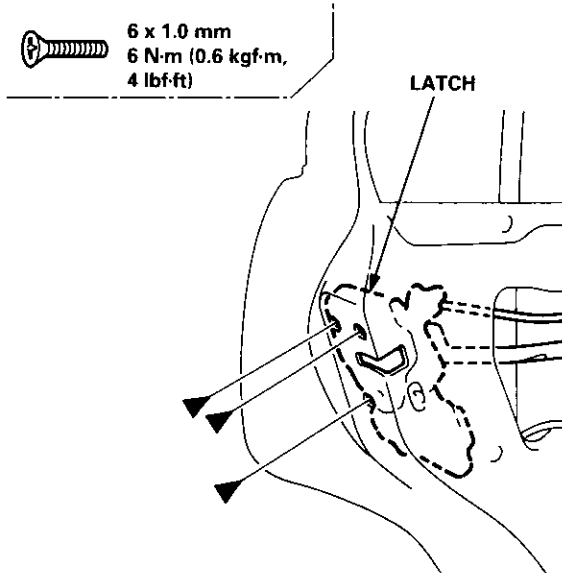

3. Move the latch down, and remove the bolts.



►: Bolt locations, 2

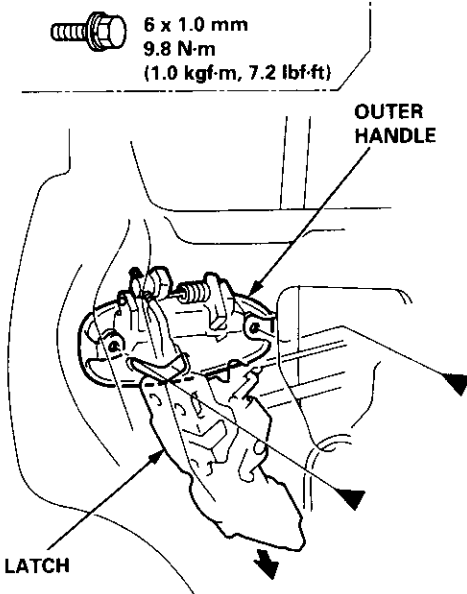

4. Pull out the outer handle. Pry the outer handle rod out of its joint using diagonal cutters.

NOTE:

- To ease reassembly, note location (A) of the outer handle rod on the joint before disconnecting it.
- Take care not to bend the outer handle rod.
- Use a shop towel to protect the opening in the door.

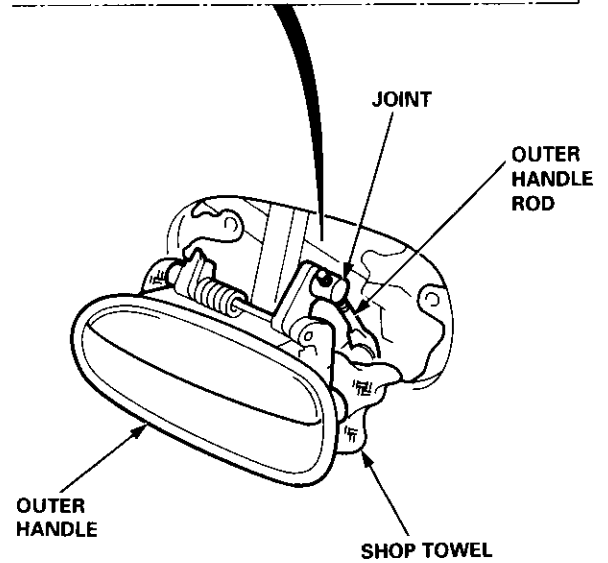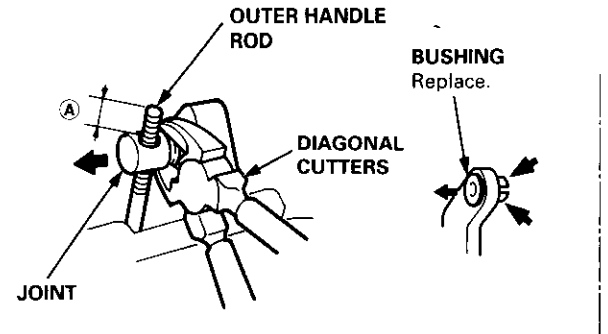

5. Installation is the reverse of the removal procedure.

NOTE: Make sure the door locks and opens properly.

Doors



Latch Replacement

NOTE: Raise the glass fully.

1. Remove:
 - Door panel (see page 20-10)
 - Plastic cover (see page 20-8)
 - Outer handle (see page 20-11)
2. Remove the lock crank and clip.


▶: Screw location, 1

▷: Clip location, 1

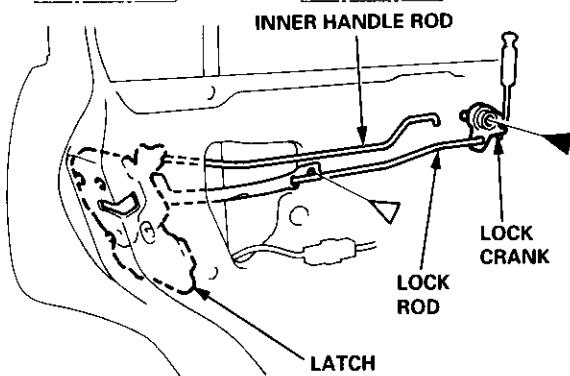

3. Remove the rear channel collar.

NOTE: Take care not to bend the lock rod and inner handle rod.

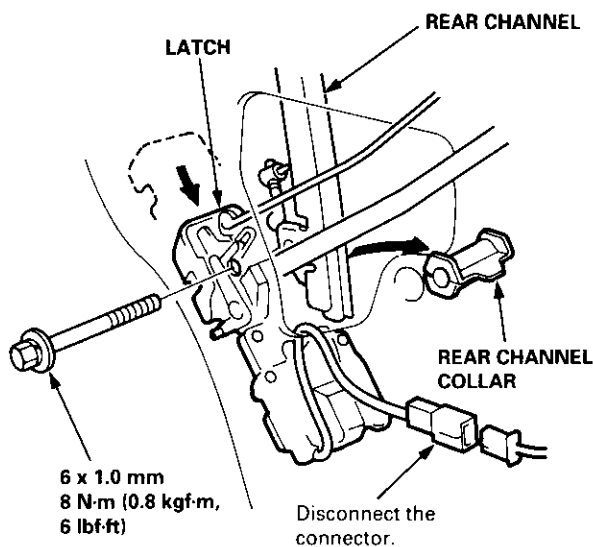

4. Remove the latch through the hole in the door.
5. Installation is the reverse of the removal procedure.

NOTE: Make sure the door locks and opens properly.

Glass/Regulator Replacement


1. Remove:
 - Door panel (see page 20-10)
 - Plastic cover (see page 20-8)
2. Carefully move the glass until you can see the bolts, then remove them.

NOTE: Take care not to drop the glass inside the door.

▶: Bolt locations, 2



6 x 1.0 mm
9.8 N-m (1.0 kgf-m,
7.2 lbf-ft)

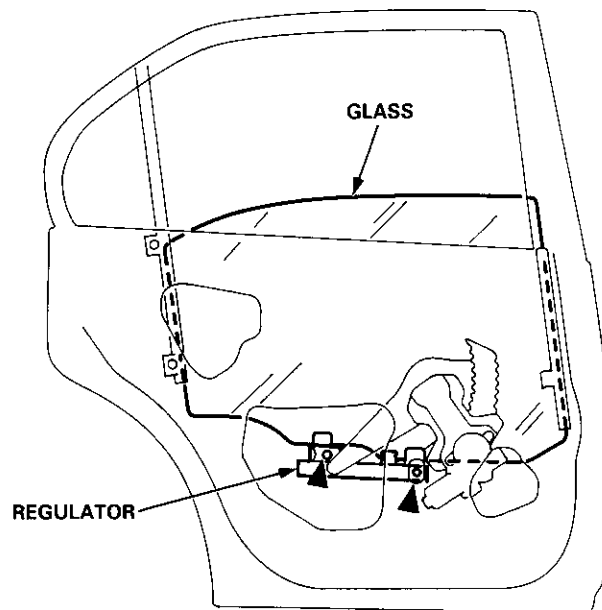

3. Carefully lower the glass. Remove the bolts and screw from the rear channel, then remove the glass from the rear channel.

NOTE: Take care not to drop the glass inside the door.

▶: Bolt, screw locations

A, 1




6 x 1.0 mm
8 N-m (0.8 kgf-m,
6 lbf-ft)

C, 1




B, 1




6 x 1.0 mm
8 N-m (0.8 kgf-m, 6 lbf-ft)



4. Carefully remove the glass from the window slot.

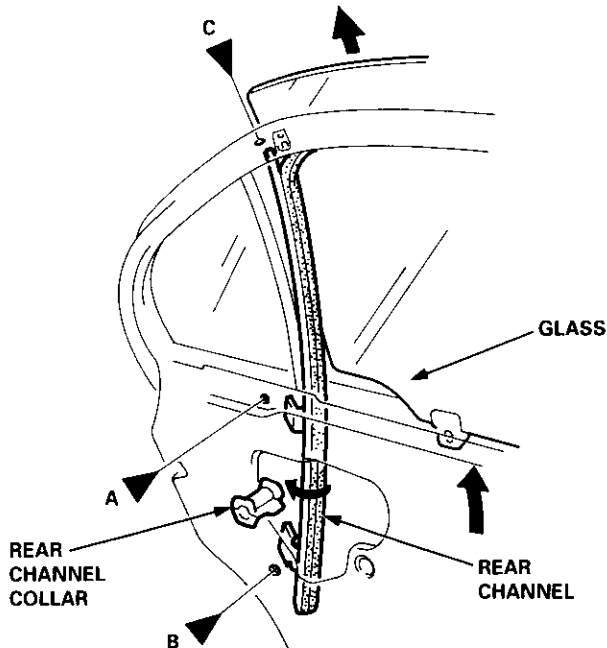

5. Remove the outer molding, then remove the quarter glass.

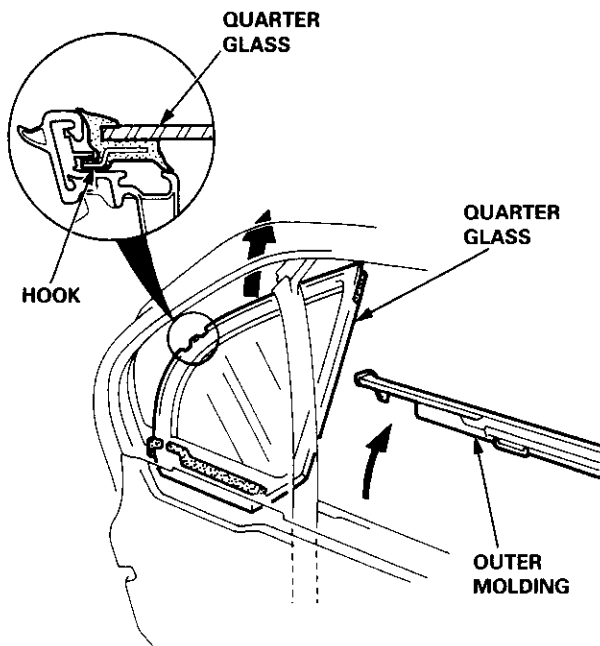

6. Disconnect the connector, and detach the harness clip, then remove the regulator through the hole in the door.

► Bolt locations


A ►, 2

6 x 1.0 mm
8 N-m (0.8 kgf-m,
6 lbf-ft)



B ►, 2


6 x 1.0 mm
8 N-m (0.8 kgf-m,
6 lbf-ft)
Loosen.

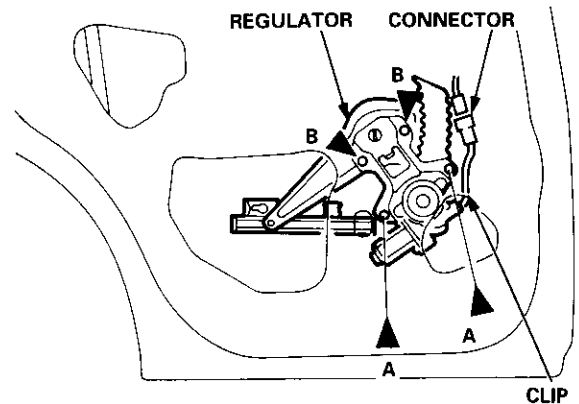


7. Grease all the sliding surfaces of the regulator where shown.

NOTE:


- If necessary, remove the power window motor from the regulator.
- Before removing the power window motor, scribe a line across the sector gear and regulator.

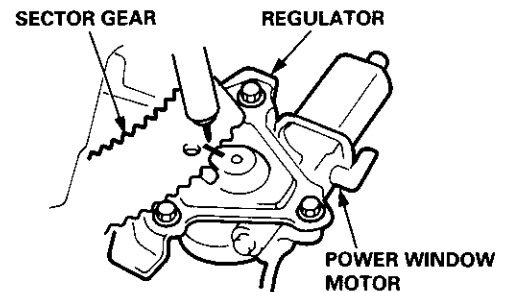

► Bolt locations, 3



6 x 1.0 mm
7 N-m (0.7 kgf-m,
5 lbf-ft)

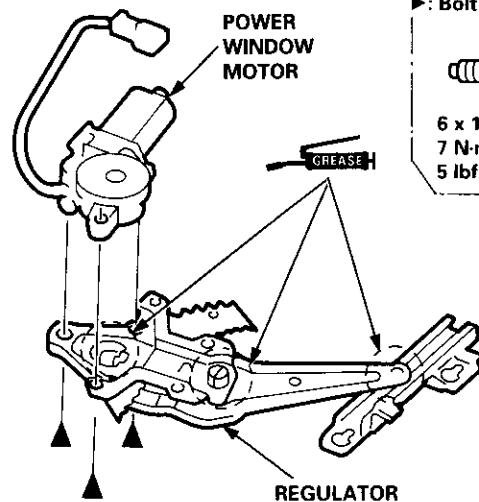


8. Installation is the reverse of the removal procedure.


NOTE: Roll the glass up and down to see if it moves freely without binding. Also make sure that there is no clearance between the glass and glass run channel when the glass is closed. Adjust the position of the glass as necessary (see page 20-20).

Doors

Door Index

2D/3D:

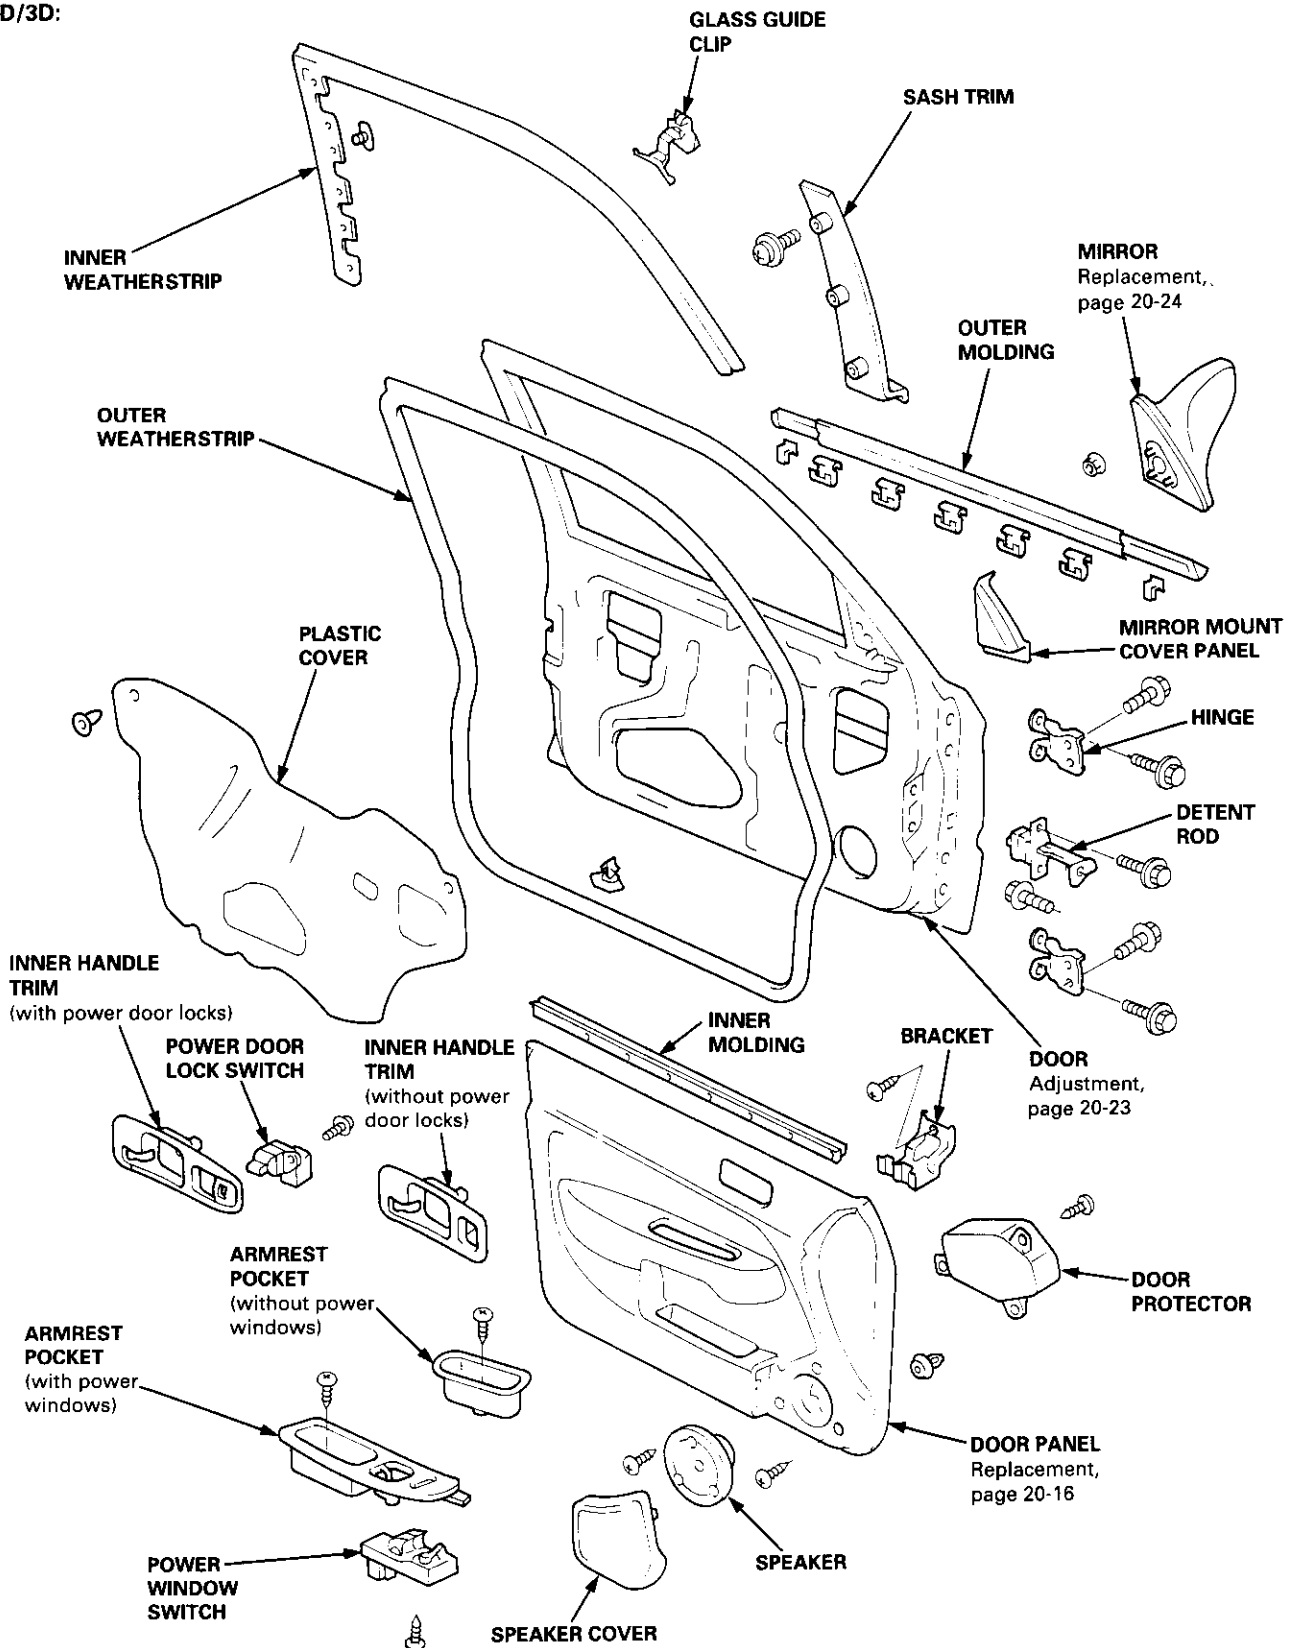

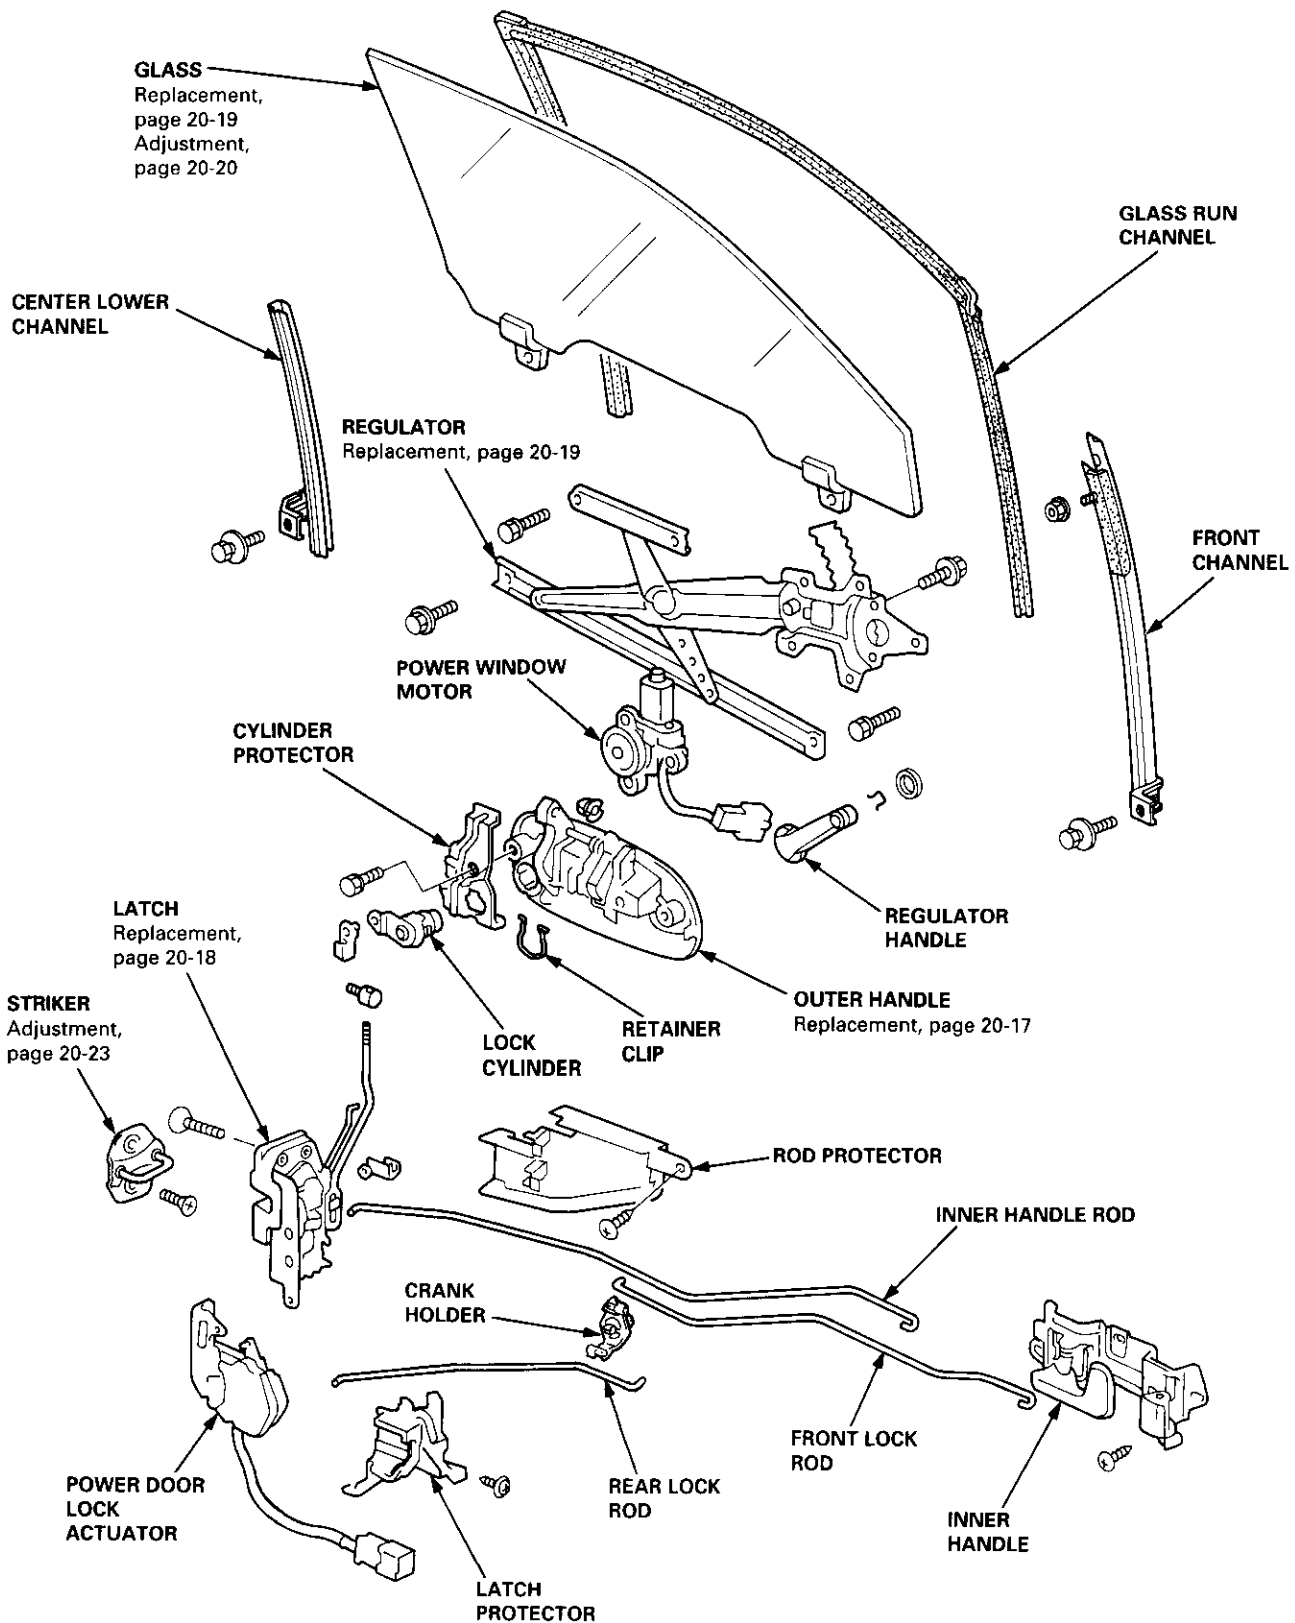


Doors


Door Panel Replacement

NOTE: Take care not to scratch the door panel and other parts.


1. Remove:
 - Inner handle trim (see page 20-14)
 - Mirror mount cover panel (see page 20-24)
2. If applicable, remove the regulator handle by pulling the clip out with a wire hook.

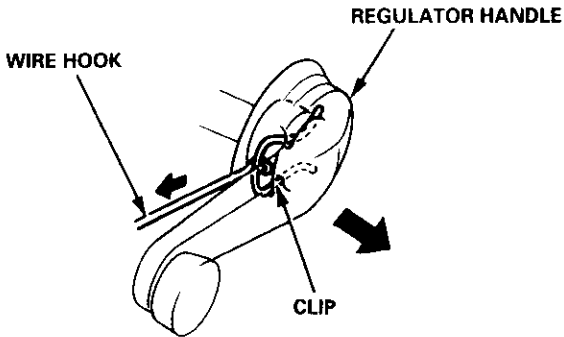

3. Remove the armrest pocket, then disconnect the power window switch connector.

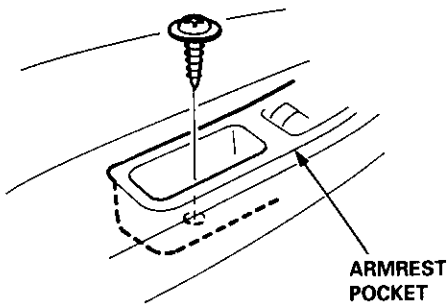


4. Remove the speaker cover, then remove the screws.


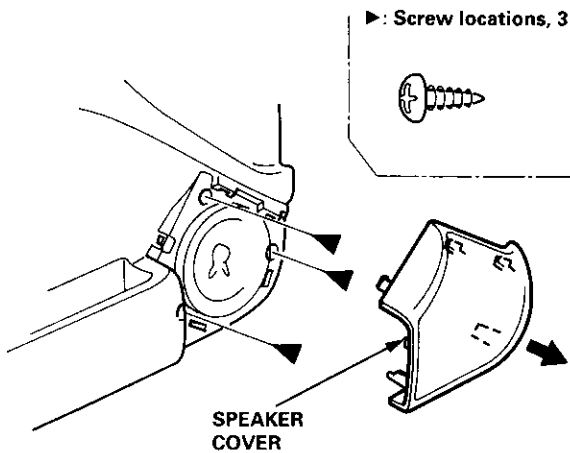


5. Release the clips that hold the door panel. Remove the door panel by pulling it upward. Disconnect the speaker connector.

NOTE: Remove the door panel with as little bending as possible to avoid creasing or breaking it.

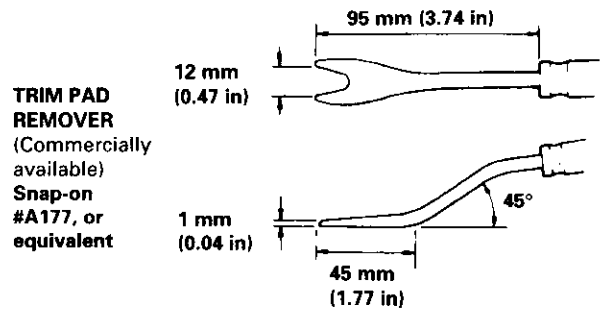

▷: Clip locations, 6

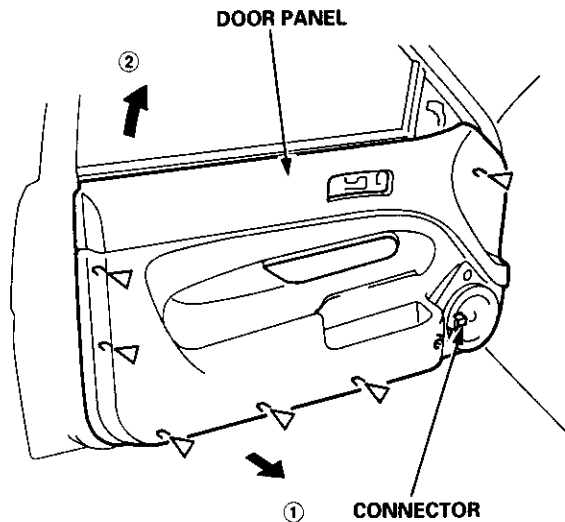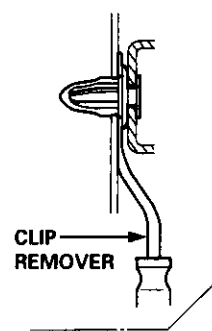


6. Installation is the reverse of the removal procedure.



Outer Handle Replacement

NOTE: Raise the glass fully.

1. Remove:
 - Door panel
 - Plastic cover (see page 20-14)
2. Pull out the retainer clip.

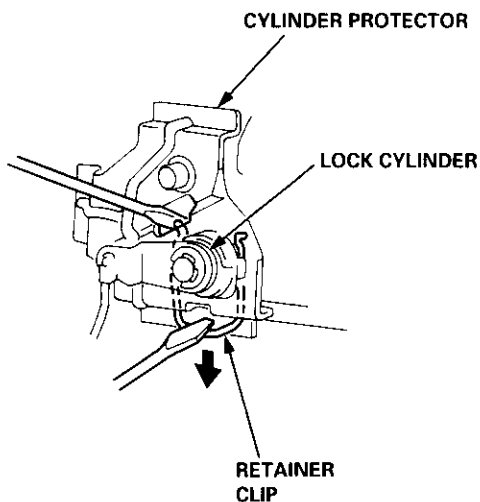


3. Remove the bolts, then remove the cylinder protector, lock cylinder and outer handle.

►: Bolt locations, 2





6 x 1.0 mm
 9.8 N·m (1.0 kgf·m,
 7.2 lbf·ft)

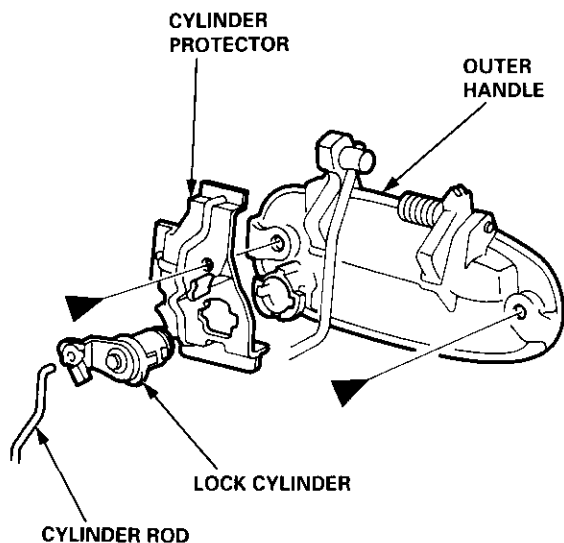

4. Pull out the outer handle. Pry the outer handle rod out of its joint using diagonal cutters.

NOTE:

- To ease reassembly, note location **A** of the outer handle rod on the joint before disconnecting it.
- Take care not to bend the outer handle rod.
- Use a shop towel to protect the opening in the door.

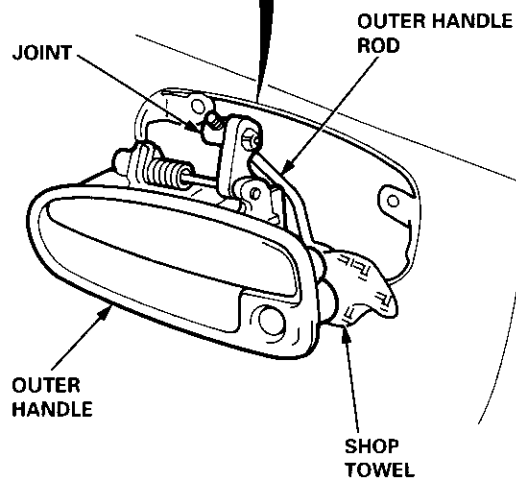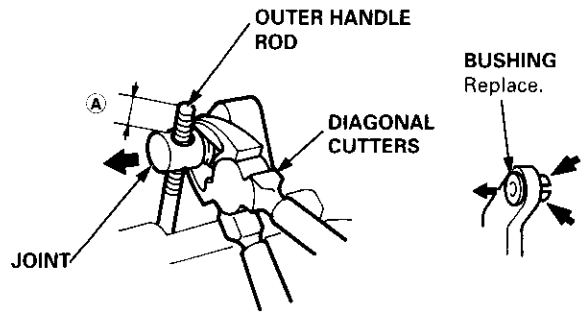

5. Installation is the reverse of the removal procedure.


NOTE: Make sure the door locks and opens properly.

Doors

Latch Replacement

NOTE: Raise the glass fully.

1. Remove:
 - Door panel (see page 20-16)
 - Plastic cover (see page 20-14)
 - Outer handle (see page 20-17)
2. Remove the rod protector.

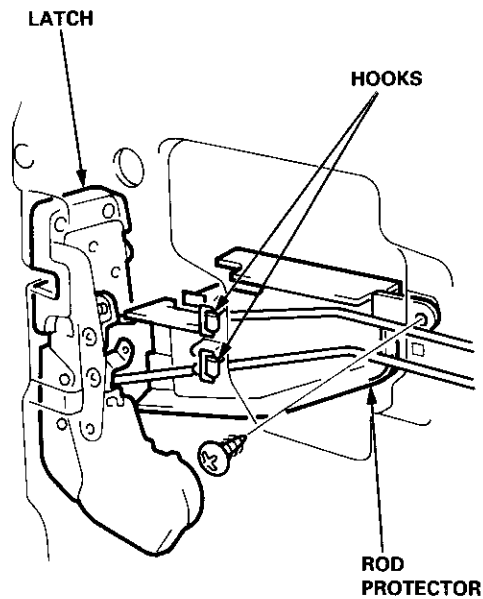



3. Remove the bolts and move the center lower channel.

NOTE: Take care not to bend the inner handle rod and lock rods.

►: Screw locations

A ►, 3

B ►, 3

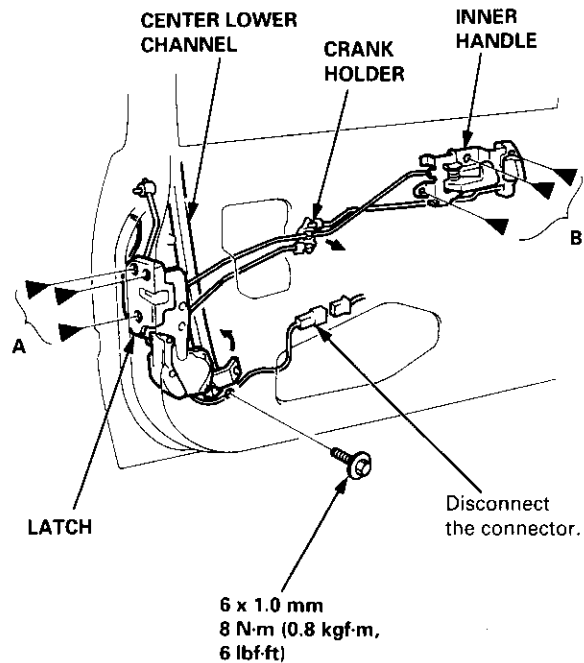

4. Remove the inner handle, then remove the latch through the hole in the door.
5. Installation is the reverse of the removal procedure.

NOTE: Make sure the door locks and opens properly.




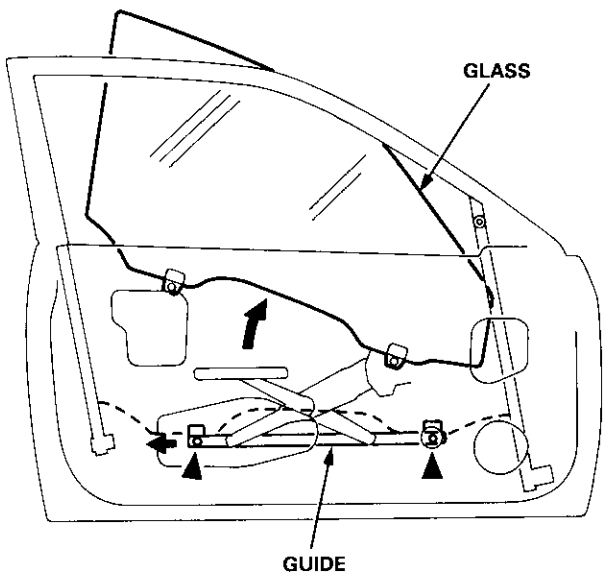
Glass/Regulator Replacement

1. Remove:
 - Door panel (see page 20-16)
 - Plastic cover (see page 20-14)
2. Carefully move the glass until you can see the bolts, then loosen them. Slide the guide rearward, remove the glass from the guide, and carefully pull the glass out through the window slot.

NOTE: Take care not to drop the glass inside the door.

►: Bolt locations, 2



6 x 1.0 mm
9.8 N-m (1.0 kgf-m,
7.2 lbf-ft)
Loosen.





3. Disconnect the connector, and detach the harness clip, then remove the regulator through the hole in the door.

NOTE: Scribe a line around the rear roller guide bolt to show the original adjustment.

►: Bolt locations

<p>A ►, 4</p>  <p>6 x 1.0 mm 8 N-m (0.8 kgf-m, 6 lbf-ft)</p>	<p>B ►, 2</p>  <p>6 x 1.0 mm 8 N-m (0.8 kgf-m, 6 lbf-ft) Loosen.</p>
---	---

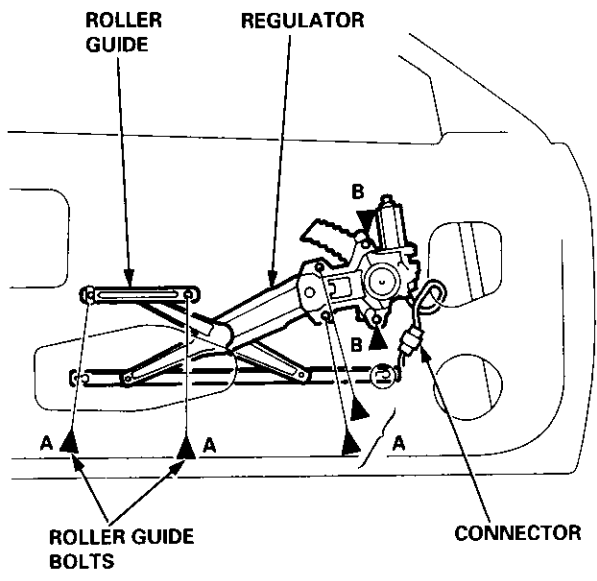

(cont'd)


Doors

Glass/Regulator Replacement (cont'd)


- Grease all the sliding surfaces of the regulator where shown.

NOTE:


- If necessary, remove the power window motor from the regulator.
- Before removing the power window motor, scribe a line across the sector gear and regulator.

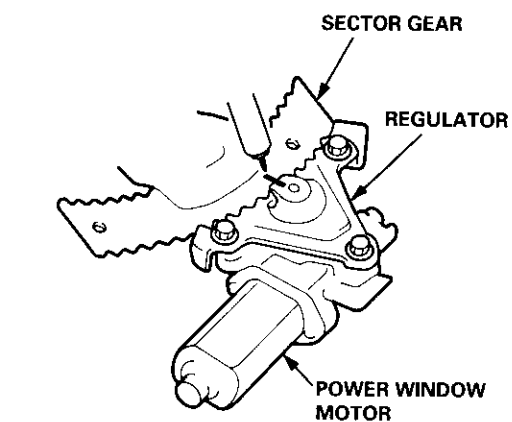

►: Bolt locations, 3



7 N·m (0.7 kgf·m,
5 lbf·ft)

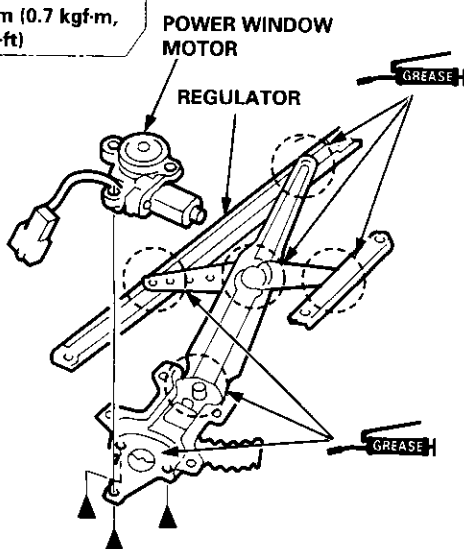

- Installation is the reverse of the removal procedure.

NOTE: Roll the glass up and down to see if it moves freely without binding. Also make sure that there is no clearance between the glass and glass run channel when the glass is closed. Adjust the position of the glass as necessary.

Glass Adjustment

NOTE:

- Place the vehicle on a firm, level surface when adjusting the glass.
- Check the weatherstrips and glass run channel for damage or deterioration, and replace them if necessary.

- Remove:
 - Door panel (see pages 20-4, 10, 16)
 - Plastic cover (see pages 20-2, 8, 14)

- Adjust the glass.


4D:

- Raise the glass fully.
- Loosen the glass mounting bolts (front door) and regulator mounting bolts.
- Push the glass rearward (front door glass) or forward (rear door glass).
- Tighten the glass mounting bolts (front door) and regulator mounting bolts.

A ►: Glass mounting bolt locations.


B ►: Regulator mounting bolt locations.

Front:

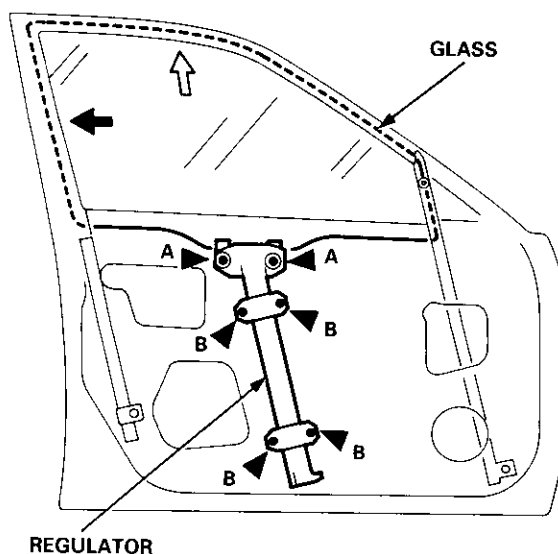




Rear:

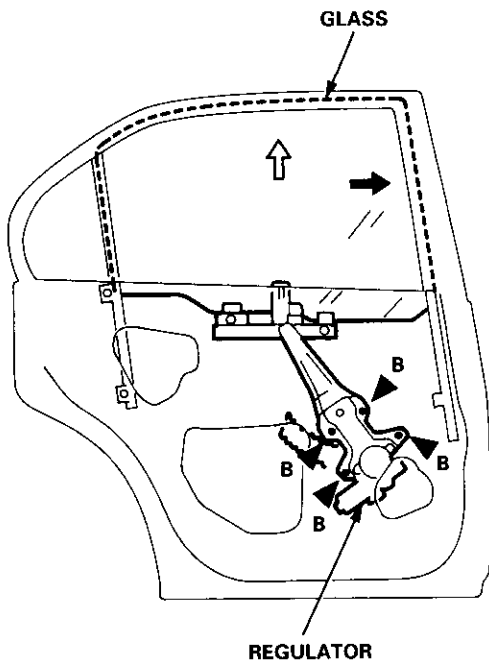


Rear:

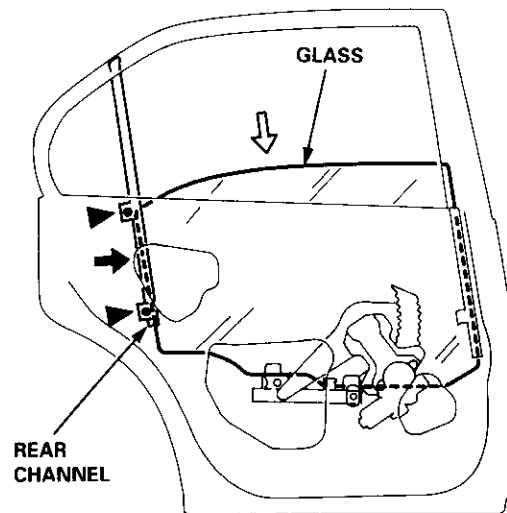

- e. Loosen the front channel mounting bolts (front door) or rear channel mounting bolt (rear door).
- f. Lower the glass.
- g. Push the front or rear channels against the glass, then tighten the mounting bolts.


►: Front and rear channel mounting bolt locations

Front:

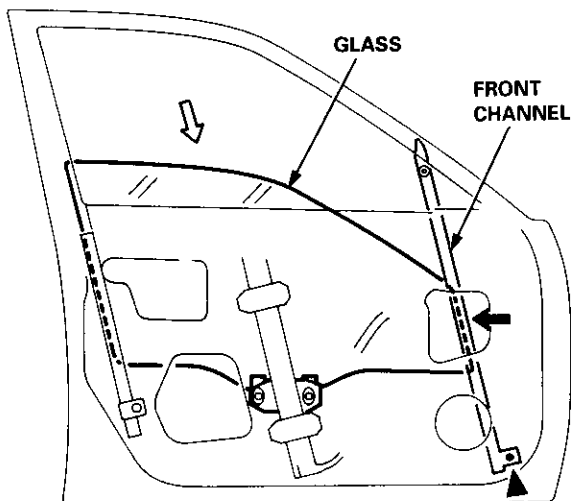

2D/3D:

- a. Raise the glass as far up as possible, and hold it against the glass run channel.
- b. Loosen the roller guide bolts, and adjust the glass so it is parallel with the glass run channel.

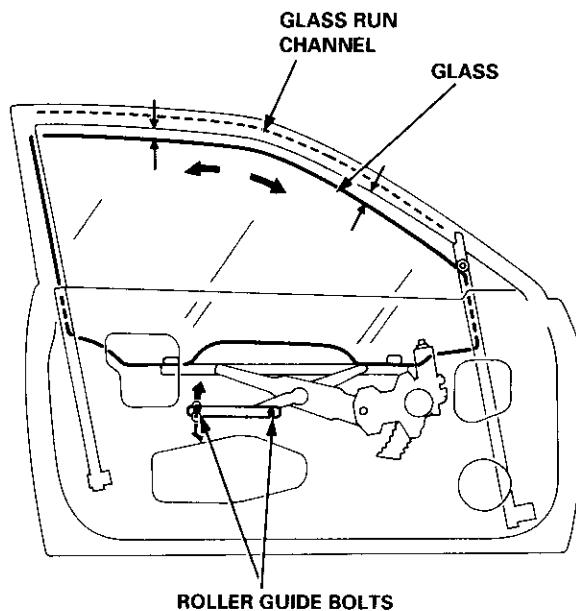


(cont'd)

Doors


Glass Adjustment (cont'd)

- c. Tighten the roller guide bolts.
- d. Loosen the front channel bolts.
- e. Lower the glass.
- f. Push the front channel against the glass, then tighten the mounting bolts.

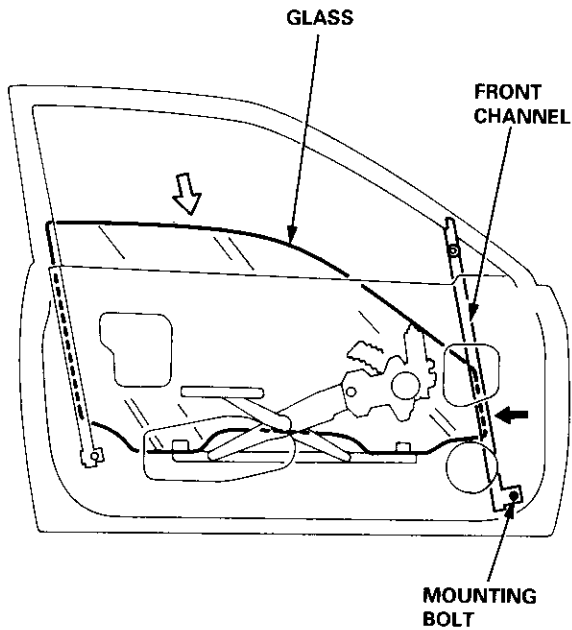

3. Check that the glass moves smoothly.
4. Raise the glass fully and check for gaps.
5. Check the glass operation.

NOTE: Check that the glass contacts the glass run channel evenly.


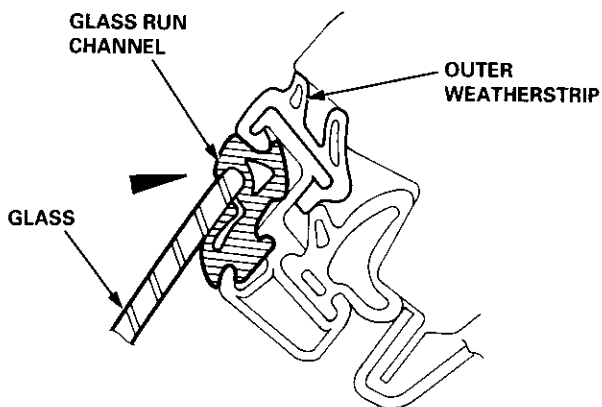


6. Check for water leaks.


Spray water over the roof and on the sealing area as shown.

NOTE:

- Adjust the water pressure as shown.
- Do not squeeze the tip of the hose.

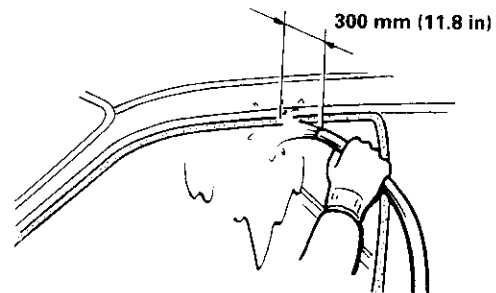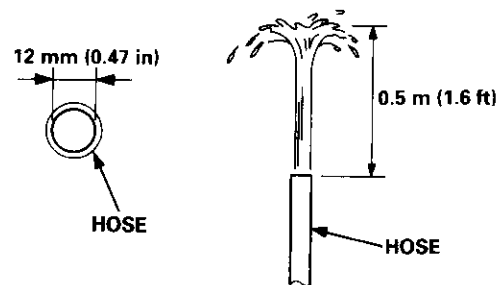

7. Attach the plastic cover, then install the door panel (see pages 20-4, 10, 16).
8. Install the regulator handle so it points forward and up at a 45 degree angle with the glass closed.

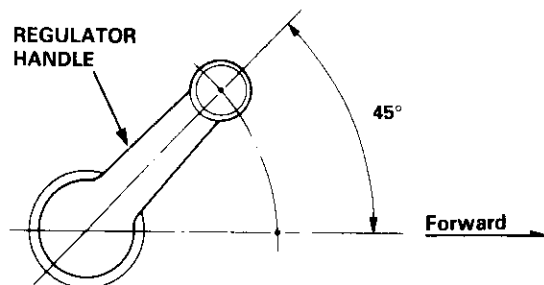



Position Adjustment

NOTE: Place the vehicle on a firm, level surface when adjusting the doors.

After installing the door, check for a flush fit with the body, then check for equal gaps between the front, rear, and bottom door edges and the body. The door and body edges should also be parallel. Adjust at the hinges as shown.


CAUTION: Place a shop towel on the jack to prevent damage to the door when loosening the door and hinge mounting bolts for adjustment.

DOOR MOUNTING BOLTS

8 x 1.25 mm

28 N·m (2.9 kgf·m, 21 lbf·ft)

Loosen the door mounting bolts slightly to move the door IN or OUT until it's flush with the body. If necessary, you can install a shim behind one hinge to make the door edges PARALLEL with the body.

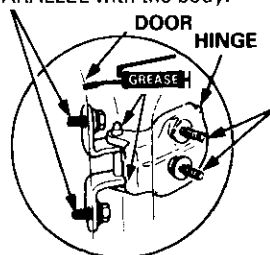


HINGE MOUNTING BOLTS


8 x 1.25 mm

28 N·m (2.9 kgf·m, 21 lbf·ft)

Remove the inner fender, loosen the hinge mounting bolts, and move the door BACKWARD or FORWARD, UP or DOWN as necessary to equalize the gaps. Lower the glass.

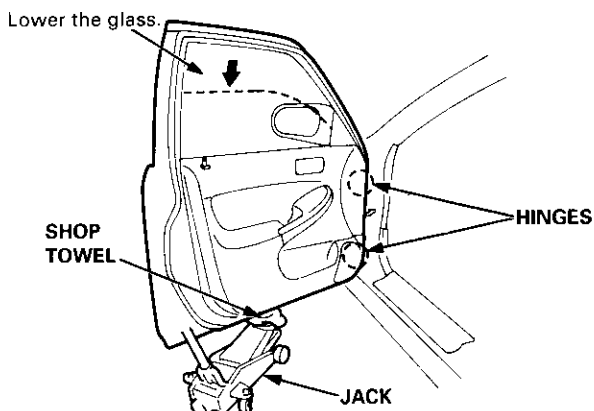

The door and body edges should be parallel.

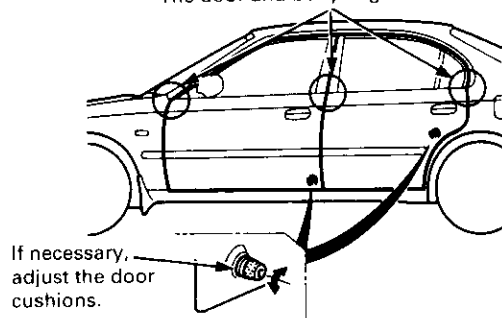

If necessary, adjust the door cushions.


NOTE: Check for water leaks.

Striker Adjustment

Make sure the door latches securely without slamming. If it needs adjustment:

NOTE: The striker nuts are fixed. The striker can be adjusted 1.5 mm (0.059 in) up or down, and 3 mm (0.1 in) in or out.

1. Loosen the screws, then insert a shop towel between the body and striker.

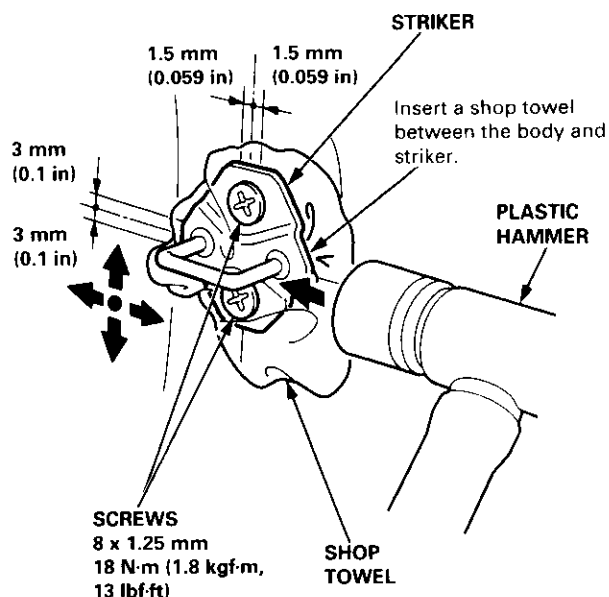

2. Lightly tighten the screws.
3. Wrap the striker with a shop towel, then adjust the striker by tapping it with a plastic hammer.

CAUTION: Do not strike the striker too hard.

NOTE: Hold the outer handle out, and push the door against the body to be sure the striker allows a flush fit.

4. If the door latches properly, loosen the screws, then remove a shop towel. Tighten the screws and recheck.


Mirrors

Mirror Replacement

NOTE: Take care not to scratch the mirror, mirror base cover and door.


1. Lower the door glass.
2. Carefully pry out the mirror mount cover panel by hand.

Power mirror:

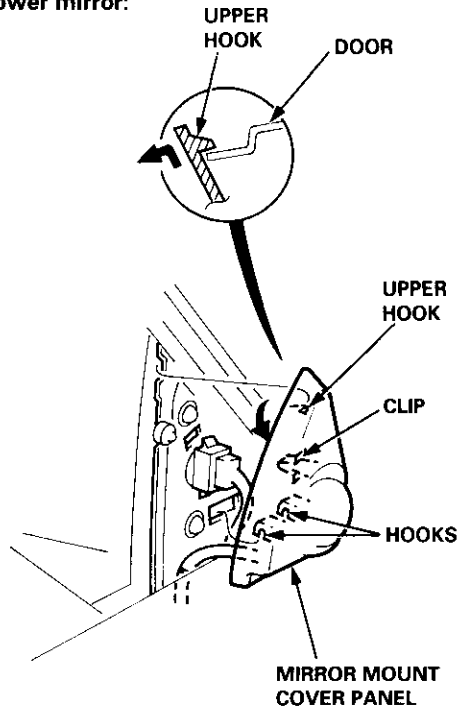

Manual mirror:

Remove the cap, screw and knob, then remove the mirror mount cover panel.

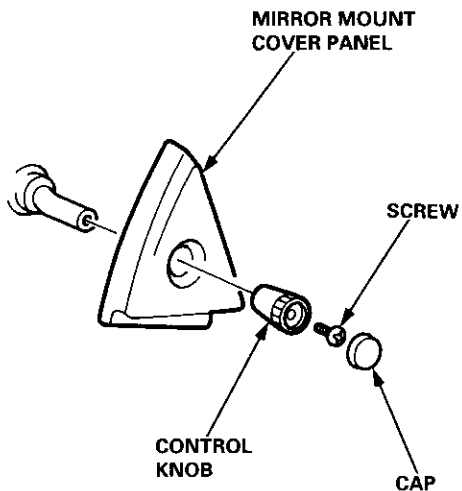


3. Remove the mirror mounting nuts while supporting the mirror.

●: Nut locations, 3



5 x 0.8 mm
5 N·m (0.5 kgf·m,
4 lbf·ft)

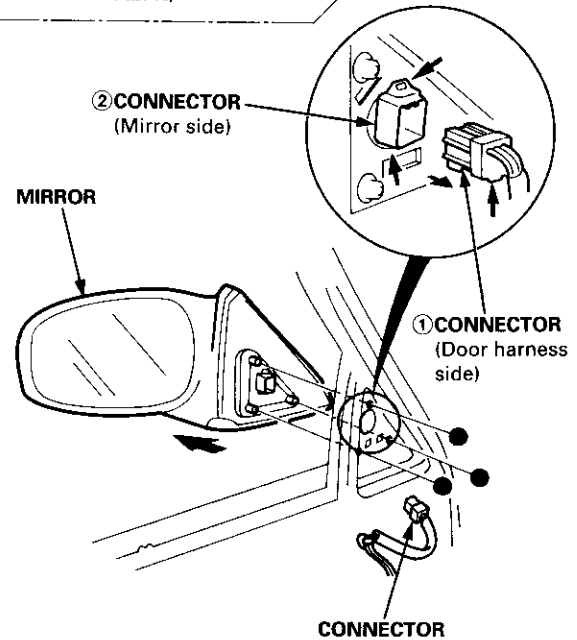

4. Installation is the reverse of the removal procedure.


NOTE: Make sure the connector is connected properly.



Mirror Holder Replacement

CAUTION: Wear gloves to remove and install the mirror holder.

1. Carefully pry out the mirror holder with a flat tip screwdriver as shown.

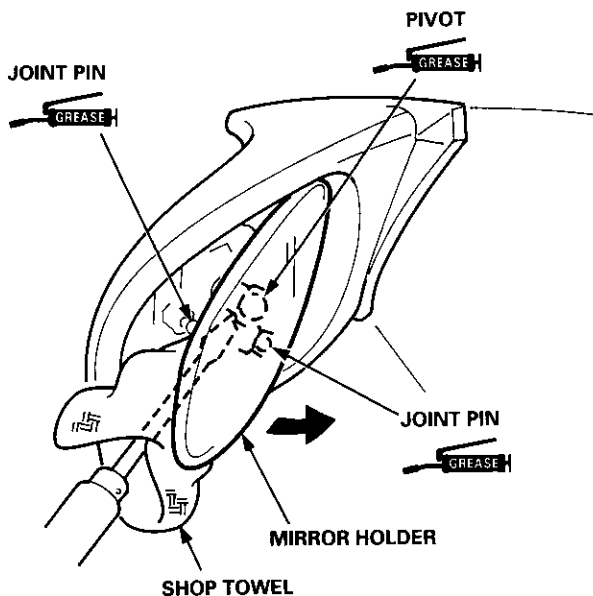

2. Installation is the reverse of the removal procedure.

NOTE: Apply grease to the locations indicated by the arrows.

Mirror Cover Replacement


►: Screw locations

A ►, 3

B ►, 2



To remove the screws, pull the seal away.

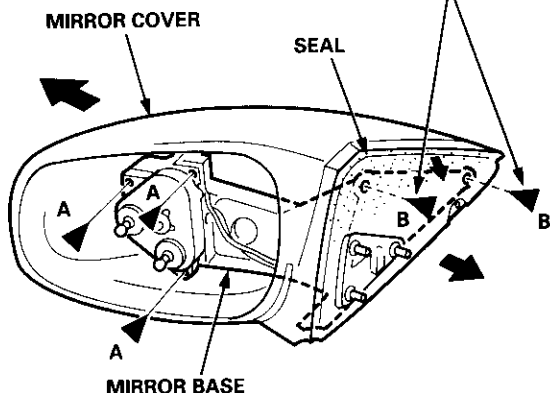


Rearview Mirror Replacement

1. Remove the rubber damper.
2. Pry the cover off using the end of a flat tip screwdriver.

CAUTION: When prying with a flat tip screwdriver, wrap it with a shop towel to prevent damage.

3. Remove the screws, then remove the rearview mirror.
4. Installation is the reverse of the removal procedure.

SCREW
5 x 0.8 mm
4 N-m (0.4 kgf-m,
3 lbf-ft)

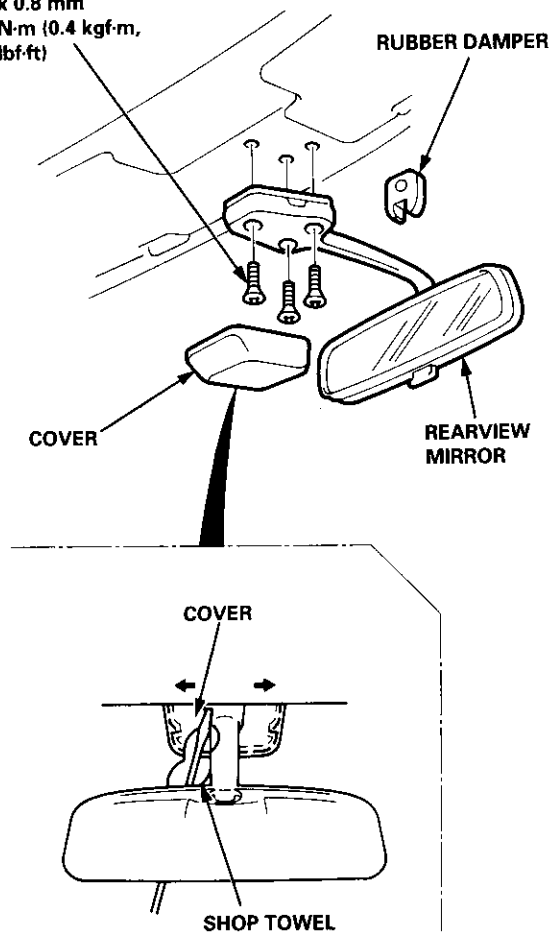


Windshield, Rear Window and Quarter Glass


Index

NOTE: The numbers after the part names show the quantities of the parts used.

Windshield (2D/3D/4D):

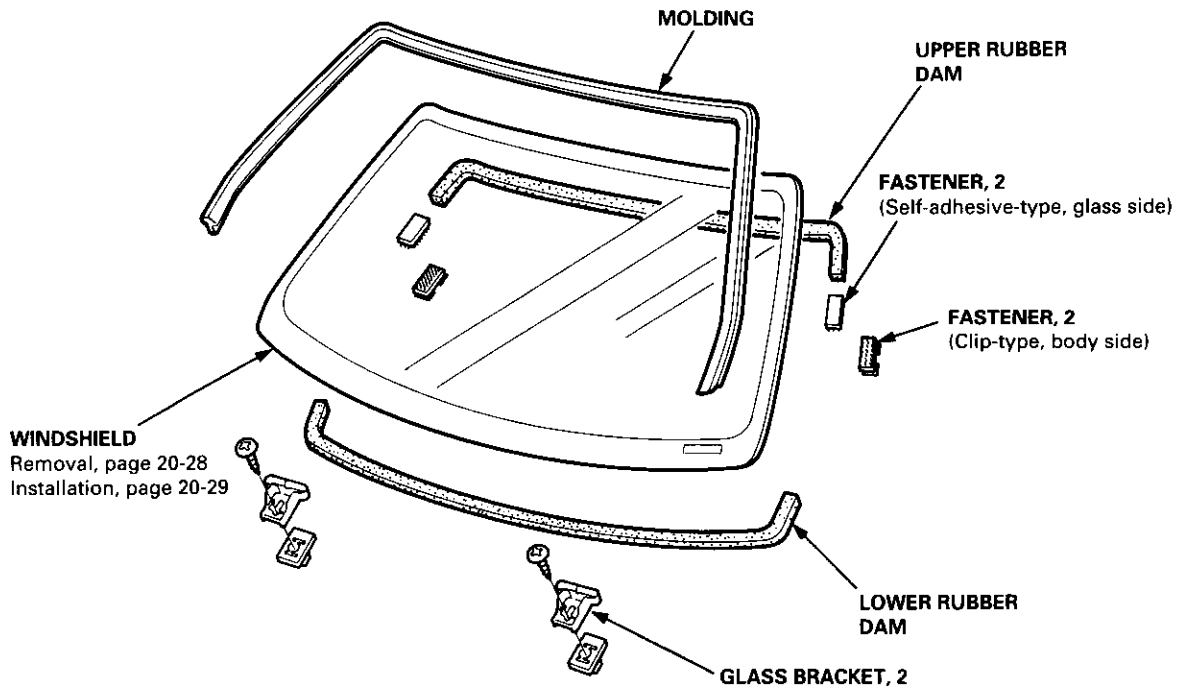


Rear Window (2D/4D):

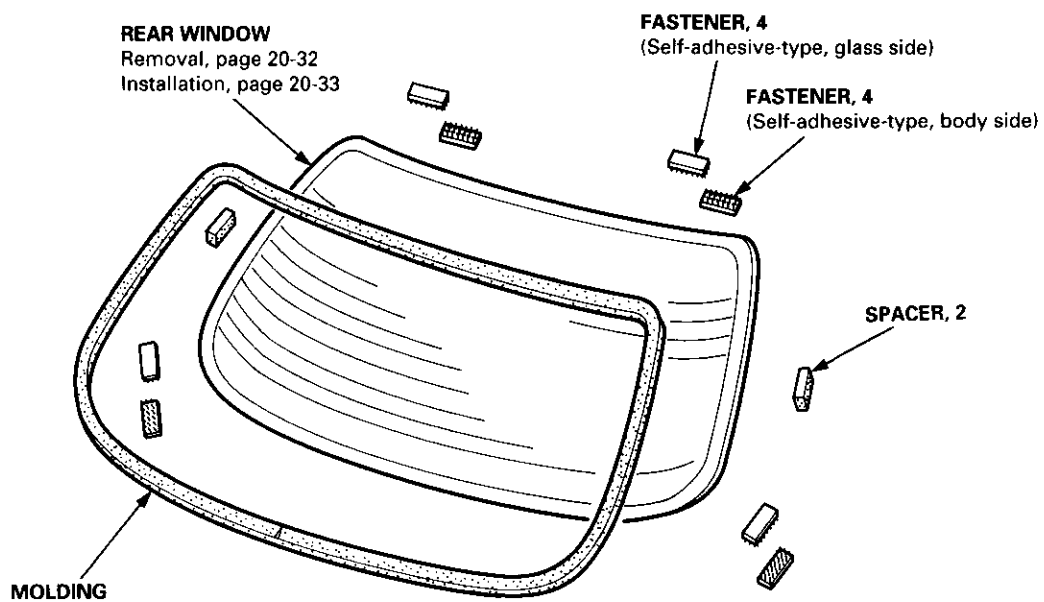




Rear Window (3D):

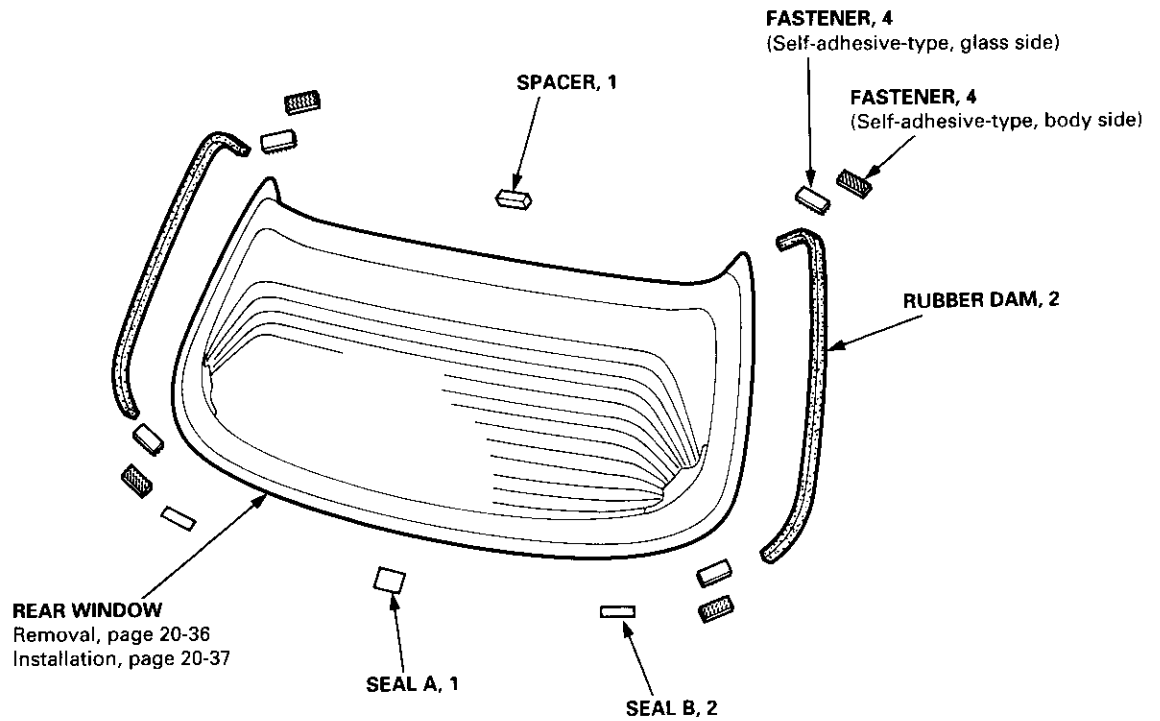


Quarter Glass:

3D:

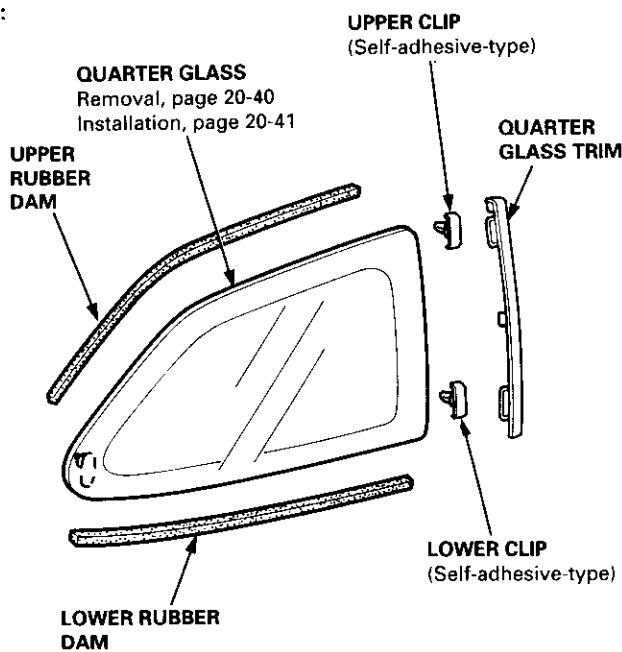

2D:

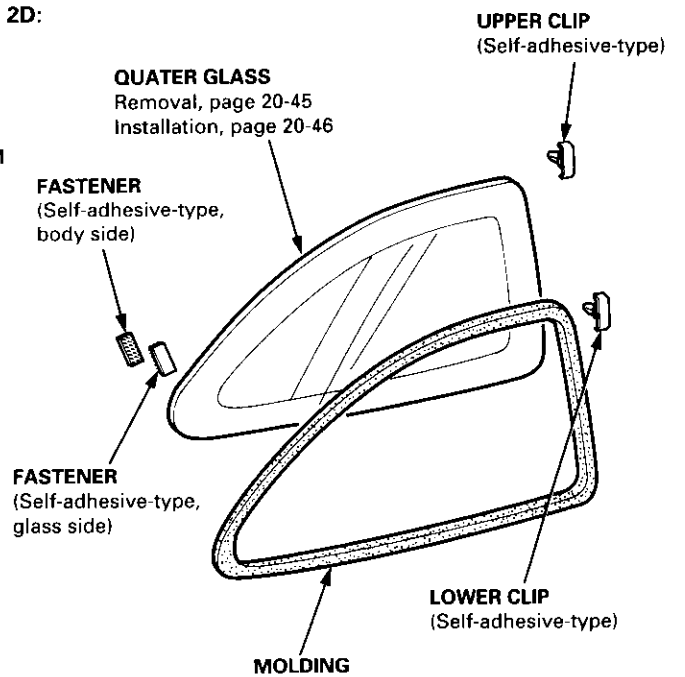

Windshield

Removal


CAUTION:

- Wear gloves to remove and install the windshield.
- Use seat covers to avoid damaging any surfaces.

1. To remove the windshield, first remove the:
 - Rearview mirror (see page 20-25)
 - Sunvisors and holders (see page 20-64)
 - Front pillar trim (see pages 20-59, 60, 61)
 - Windshield wiper arms and cowl cover (see page 20-113)

2. Peel off the molding, and remove the glass brackets.


NOTE: When molding removal is difficult, cut the molding with a knife.

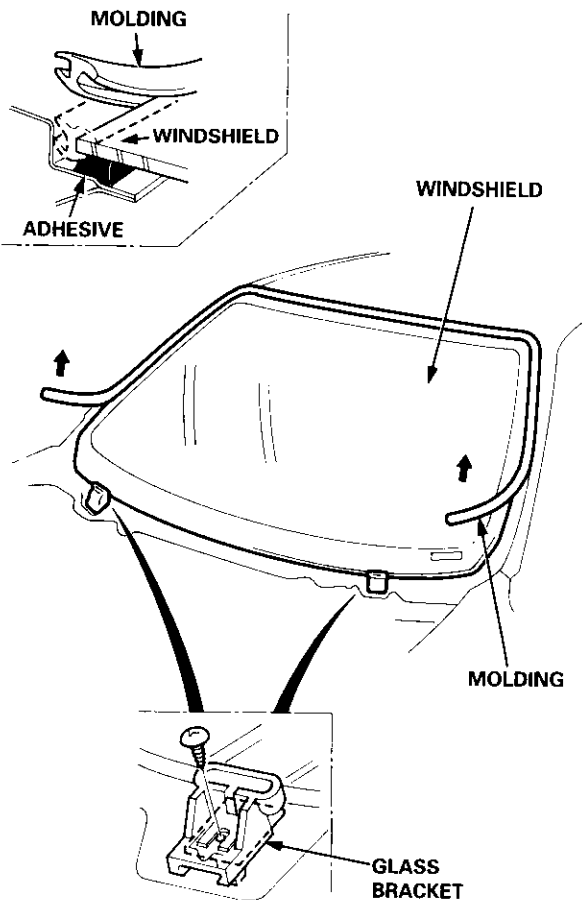

3. Pull down the front of the headliner (see page 20-64).


CAUTION: Take care not to bend the headliner excessively.

4. Apply protective tape along the edge of the dashboard and body as shown. Using an awl, make a hole through the rubber dam and adhesive from inside the car. Push the piano wire through the hole, and wrap each end around a piece of wood.

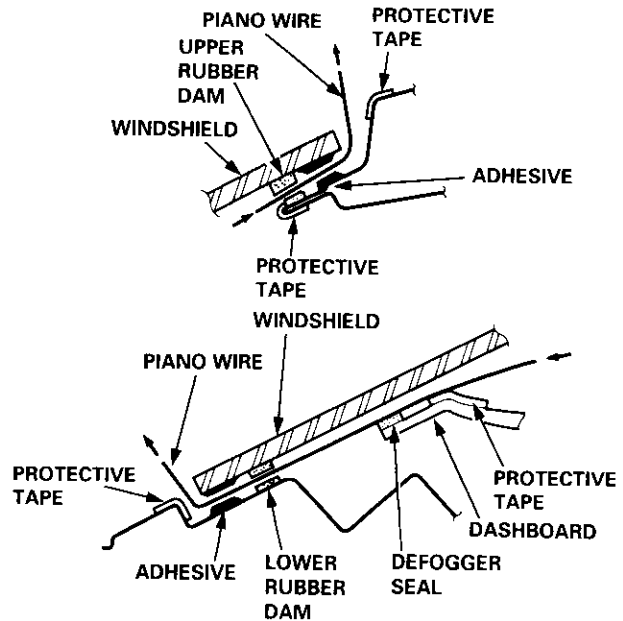

5. With a helper on the outside, pull the piano wire back and forth in a sawing motion, and carefully cut through the rubber dam and adhesive around the entire windshield.

CAUTION: Hold the piano wire as close to the windshield as possible to prevent damage to the body and dashboard.

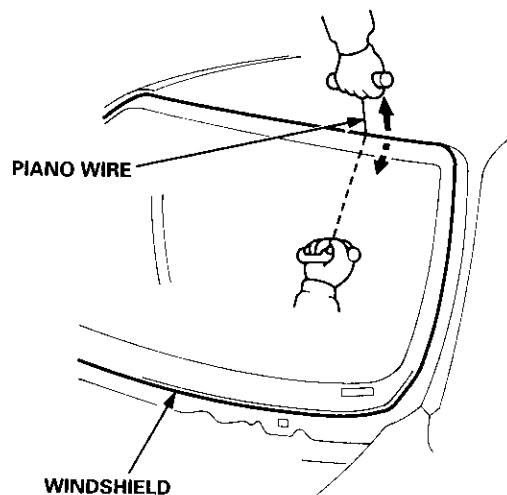

6. Carefully remove the windshield.



Installation

- Using a knife, scrape the old adhesive smooth to a thickness of about 2 mm (0.08 in) on the bonding surface around the entire windshield opening flange.

NOTE:

- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove the rubber dams and fasteners from the body.
- Mask off surrounding surfaces before painting.

- Clean the body bonding surface with a sponge dampened in alcohol.

NOTE: After cleaning, keep oil, grease and water from getting on the surface.


- If the old windshield is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the windshield surface with alcohol where new adhesive is to be applied.

NOTE: Make sure the bonding surface is kept free of water, oil and grease.

CAUTION: Avoid setting the windshield on its edges; small chips may later develop into cracks.


NOTE:

- Clean the shadowed area.
- Clean area **A** as shown.

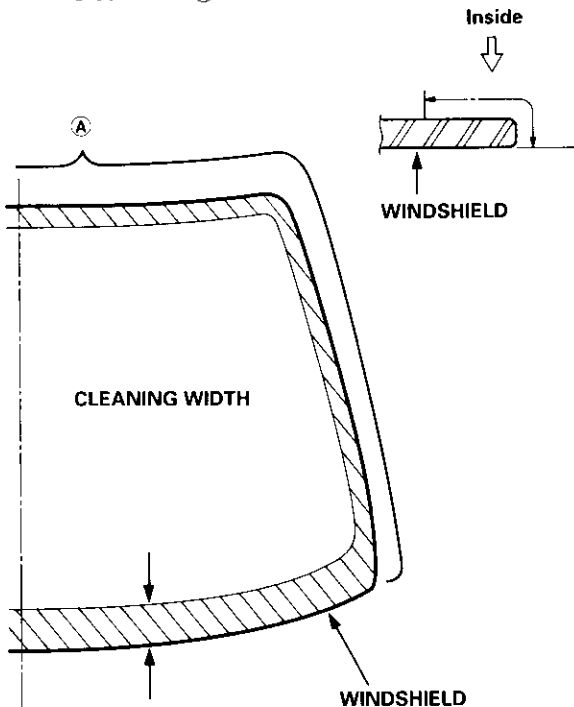


- Glue the rubber dam and fasteners to the inside face of the windshield as shown.

NOTE: Be careful not to touch the windshield where adhesive will be applied.

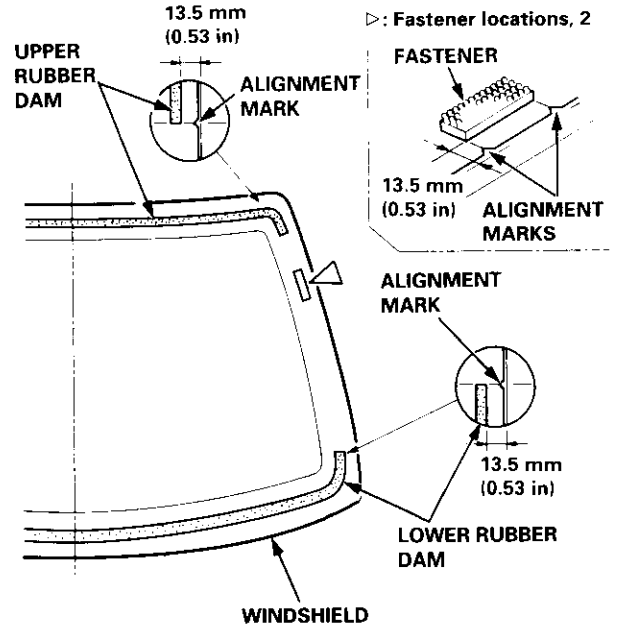

- Align and glue the molding to the edge of the windshield.

NOTE: Be careful not to touch the windshield where adhesive will be applied.

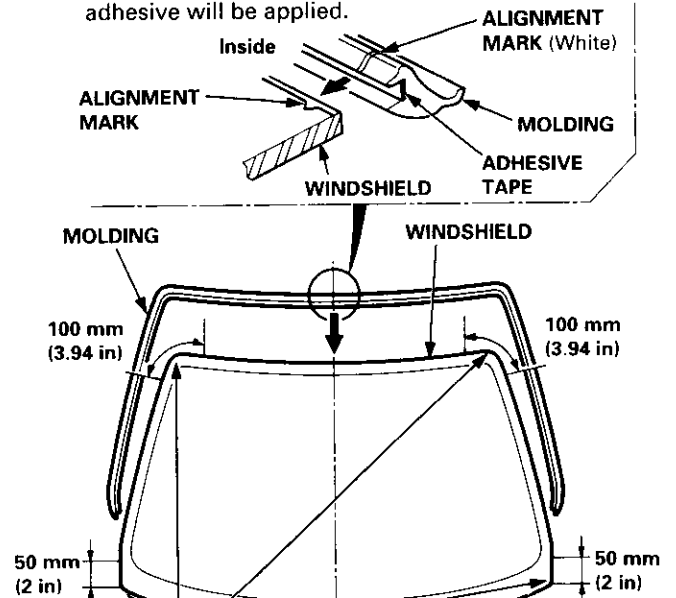


Apply primer (3M N-200, or equivalent) to edge of the windshield. (cont'd)

Windshield

Installation (cont'd)


6. Install the glass brackets and fasteners as shown.

NOTE: The numbers after the part names show the quantities of the parts used.

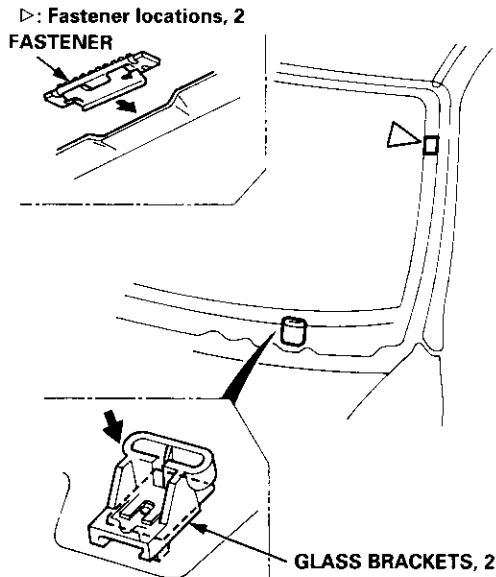

7. Set the windshield on the glass brackets, then center it in the opening. Make alignment marks across the windshield and body with a grease pencil at the four points shown.

NOTE: Be careful not to touch the windshield where adhesive will be applied.

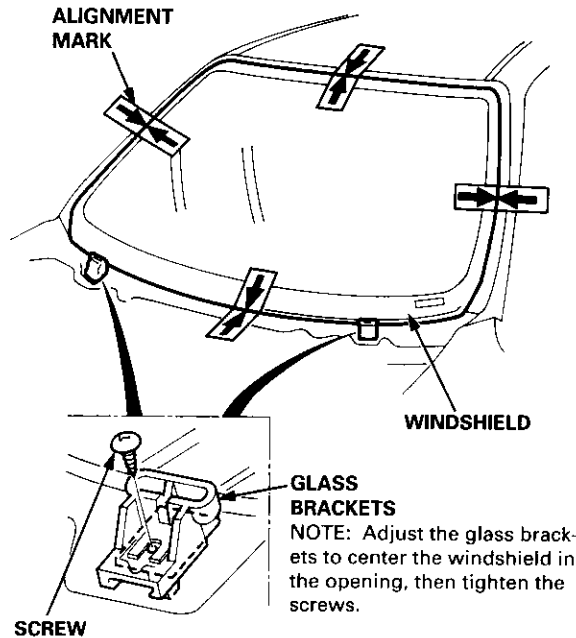


8. Remove the windshield.

9. With a sponge, apply a light coat of glass primer around the edge of the windshield as shown, then lightly wipe it off with gauze or cheesecloth.

NOTE:


- Do not apply body primer to the windshield, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the windshield properly, causing a leak after the windshield is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

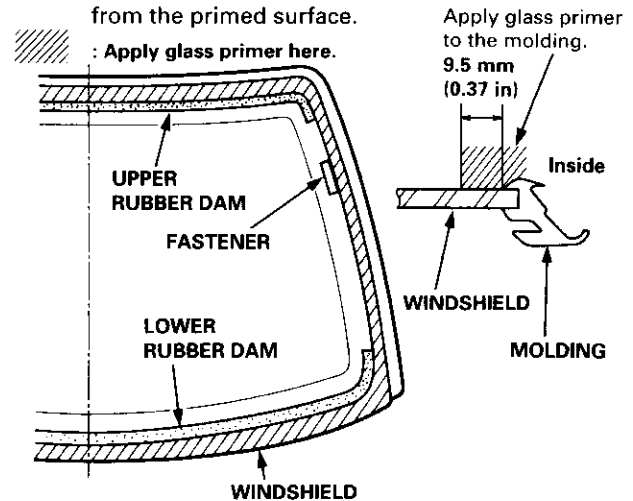

10. With a sponge, apply a light coat of body primer to the original adhesive remaining around the windshield opening flange. Let the body primer dry for at least 10 minutes.

NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.
- Mask off the dashboard before painting the flange.

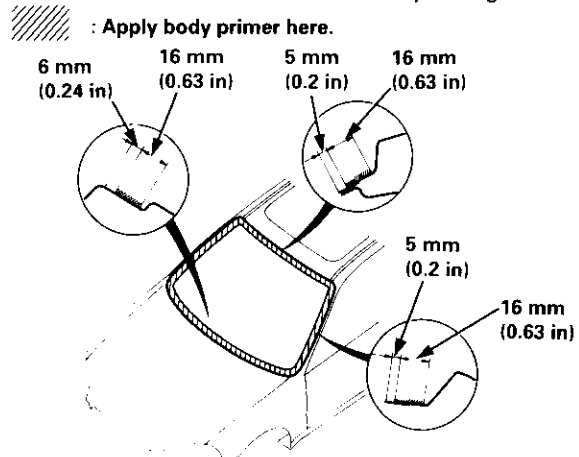




11. Thoroughly mix the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:

- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that come with the adhesive.

12. Before filling a cartridge, cut the end of the nozzle as shown.

Cut nozzle end as shown.

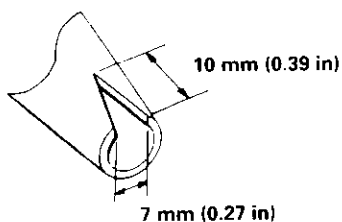

13. Pack adhesive into the cartridge without air pockets to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive around the edge of the windshield as shown.


NOTE: Apply the adhesive within 30 minutes after applying the glass primer.

12 mm (0.47 in)




8 mm (0.31 in)

Make a slightly thicker bead at each corner.

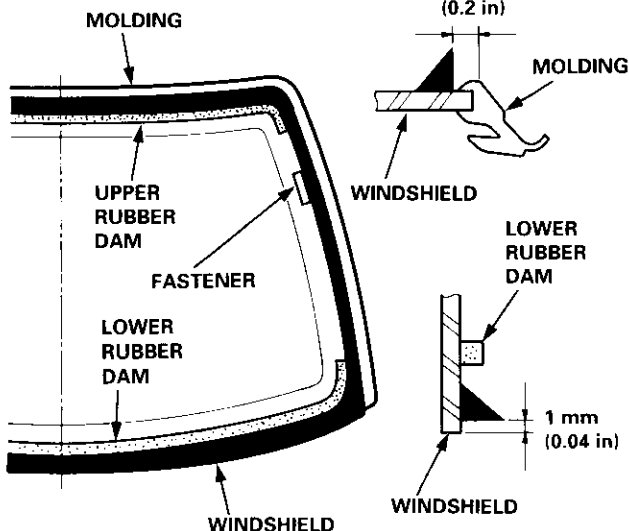

14. Use suction cups to hold the windshield over the opening, align it with the alignment marks made in step 7, and set it down on the adhesive. Lightly push on the windshield until its edge is fully seated on the adhesive all the way around.

NOTE: Do not open or close the doors until adhesive is dry.

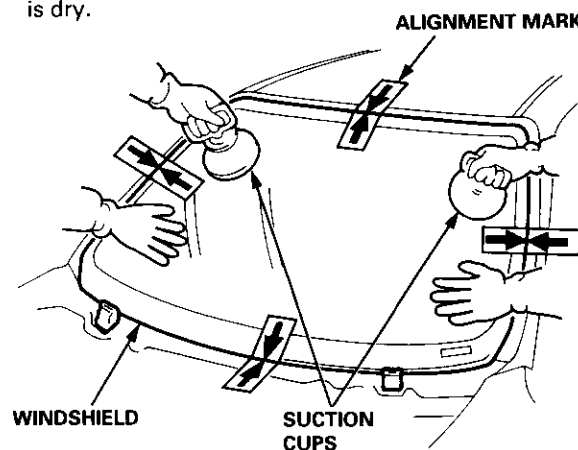

15. Scrape or wipe the excess adhesive off with a putty knife or towel.

NOTE: To remove adhesive from a painted surface or the windshield, wipe with a soft shop towel dampened with alcohol.

16. Let the adhesive dry for at least one hour, then spray water over the windshield and check for leaks. Mark the leaking areas, let the windshield dry, then seal with sealant.

NOTE:

- Let the car stand for at least four hours after windshield installation. If the car has to be used within the first four hours, it must be driven slowly.
- Keep the windshield dry for the first hour after installation.
- Check that the ends of the side molding are set under the air scoop.

17. Reinstall all remaining removed parts.

NOTE:

- Install the rearview mirror rubber damper after the adhesive has dried thoroughly.
- Advise the customer not to do the following things for two to three days:
 - Slam the doors with all the windows rolled up.
 - Twist the body excessively (such as when going in and out of driveways at an angle or driving over rough, uneven roads).

Rear Window

Removal



2D/4D:

CAUTION:



- Wear gloves to remove and install the rear window.
- Use seat covers to avoid damaging any surfaces.
- Do not damage the rear window defogger grid lines, window antenna grid lines, and terminals.

1. To remove the rear window, first remove the:
 - Trunk lid
 - Rear seat cushion (see pages 20-79, 81)
 - Rear seat side bolsters (4D, see page 20-79)
 - Rear seat-back (2D, see page 20-81)
 - Rear shelf (see pages 20-59, 61)
 - Rear pillar trim (4D, see page 20-59)
 - Side trim panel (2D, see page 20-61)
 - Quarter trim panel (2D, see page 20-61)
 - Rear roof trim (see page 20-65)
2. Disconnect the rear window defogger connector from each side.
3. Peel off the molding.

NOTE: When molding removal is difficult, cut the molding with a knife.

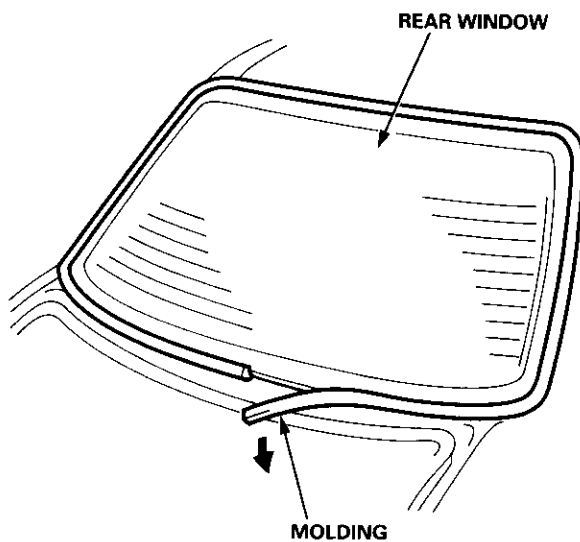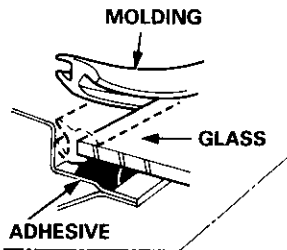


4. Apply protective tape along the edge of the body as shown. Using an awl, make a hole through the adhesive from inside the car. Push the piano wire through the hole, and wrap each end around a piece of wood.

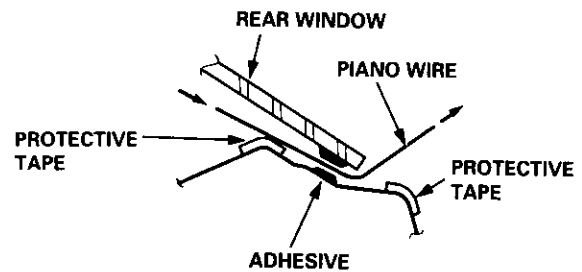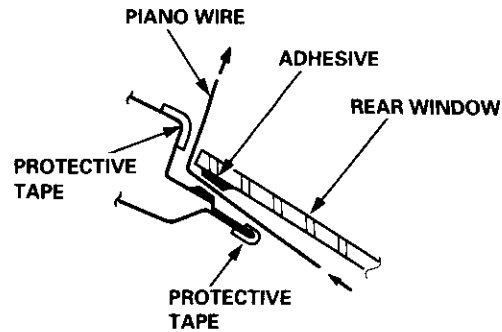

5. With a helper on the outside, pull the piano wire back and forth in a sawing motion, and carefully cut through the adhesive around the entire rear window.

CAUTION: Hold the piano wire as close to the rear window as possible to prevent damage to the body.

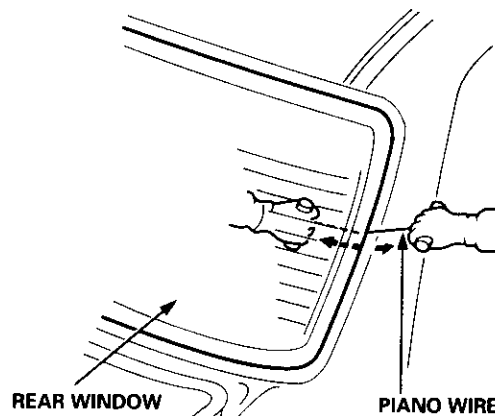

6. Carefully remove the rear window.



Installation

- Using a knife, scrape the old adhesive smooth to a thickness of about 2 mm (0.08 in) on the bonding surface around the entire rear window opening flange.

NOTE:

- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding
- Mask off surrounding surfaces before painting.
- Remove the fasteners and spacers from the body.

- Clean the body bonding surface with a sponge dampened in alcohol.


NOTE: After cleaning, keep oil, grease and water from getting on the surface.

- If the old rear window is to be reinstalled, use a putty knife to scrape off all traces of old adhesive and the rubber dam, then clean the rear window surface with alcohol where new adhesive is to be applied.

NOTE: Make sure the bonding surface is kept free of water, oil and grease.


CAUTION: Avoid setting the rear window on its edges; small chips may later develop into cracks.

NOTE: Clean the shadowed area.

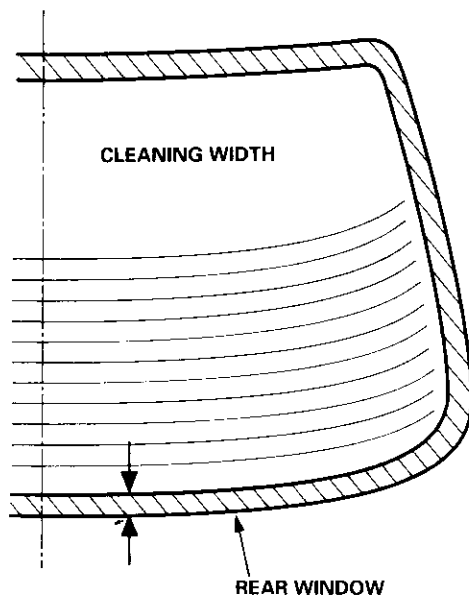


- Apply the double-faced adhesive tape (NITTO 501, or equivalent) to the edge of the rear window, then install the molding around the edge of the rear window as shown.

NOTE: Be careful not to touch the rear window where adhesive will be applied.

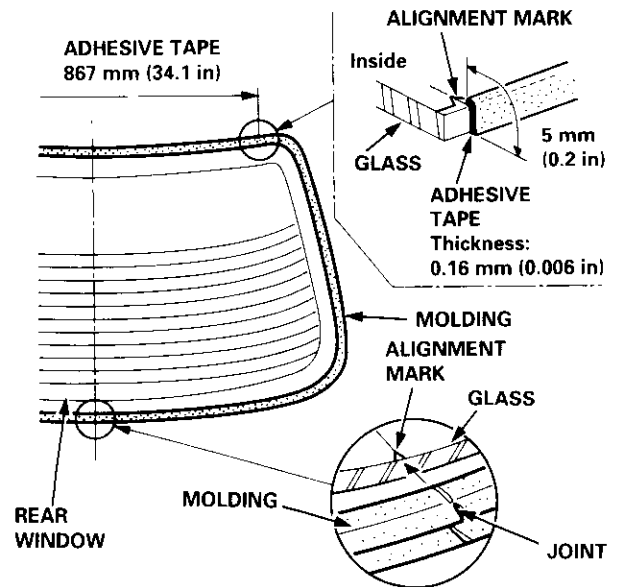

- Glue the fasteners and spacers to the inside face of the rear window as shown.

NOTE: Be careful not to touch the rear window where adhesive will be applied.

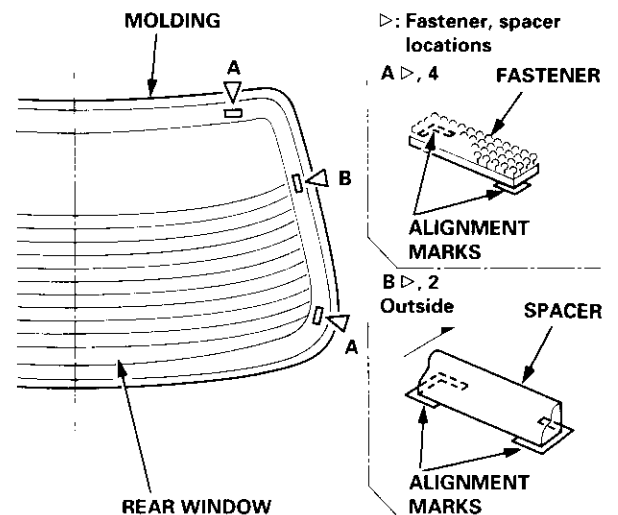



(cont'd)

Rear Window


Installation (cont'd)

6. Glue the fasteners to the body as shown.

▷: Fastener locations, 4

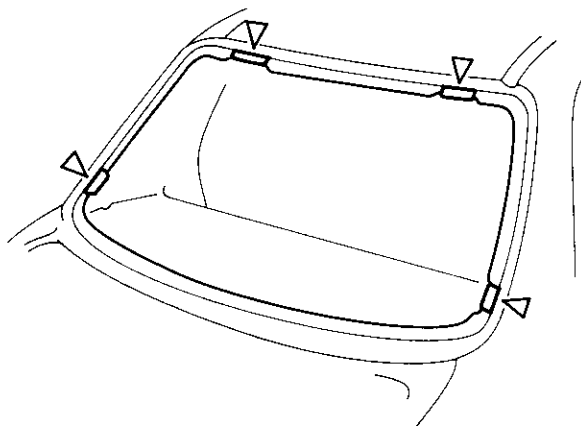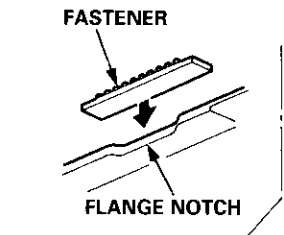

7. Set the rear window, then center it in the opening. Make alignment marks across the rear window and body with a grease pencil at the four points shown.

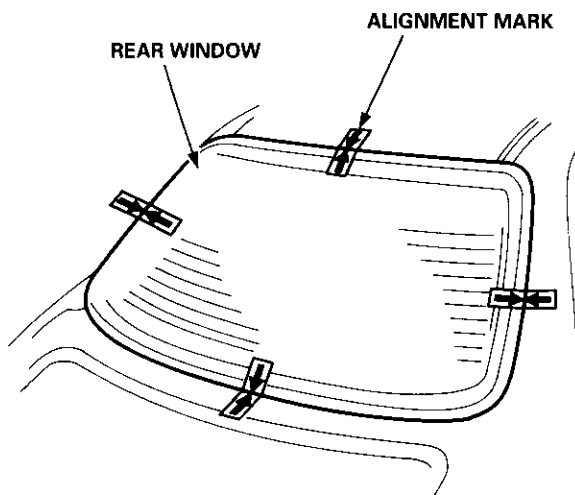


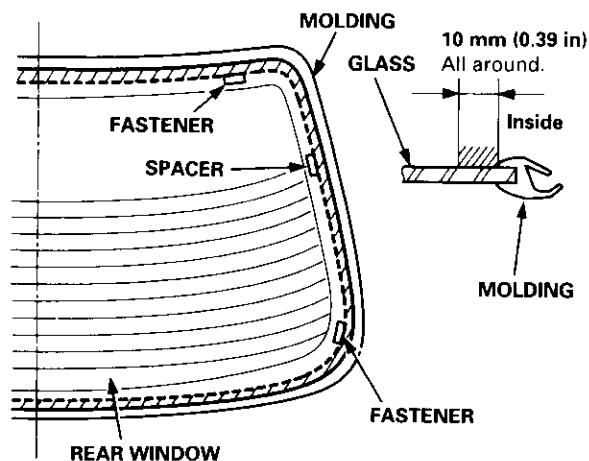
8. Remove the rear window.

9. With a sponge, apply a light coat of glass primer around the edge of the rear window as shown, then lightly wipe it off with gauze or cheesecloth.

NOTE:

- Do not apply body primer to the rear window, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the rear window properly, causing a leak after the rear window is installed.
- Keep water, dust, and abrasive materials away from the primed surface.


 : Apply glass primer here.




10. With a sponge, apply a light coat of body primer to the original adhesive remaining around the rear window opening flange. Let the body primer dry for at least 10 minutes.

NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.

 : Apply body primer here.

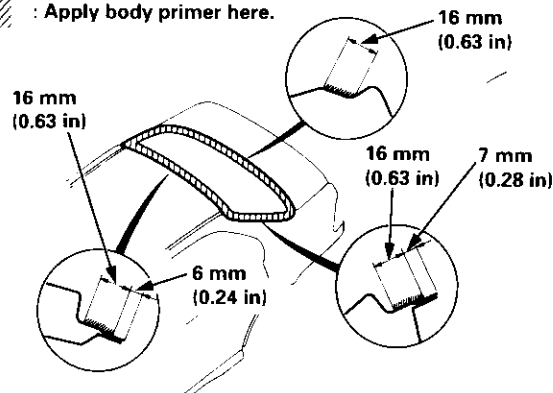




11. Thoroughly mix the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:


- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that came with the adhesive.

12. Before filling a cartridge, cut the end of the nozzle as shown.

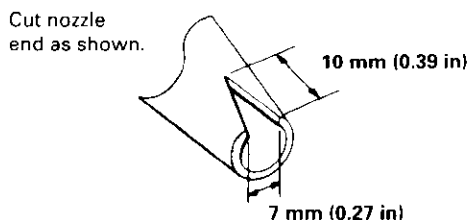


13. Pack adhesive into the cartridge without air pockets to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive around the edge of the rear window as shown.

NOTE: Apply the adhesive within 30 minutes after applying the glass primer.

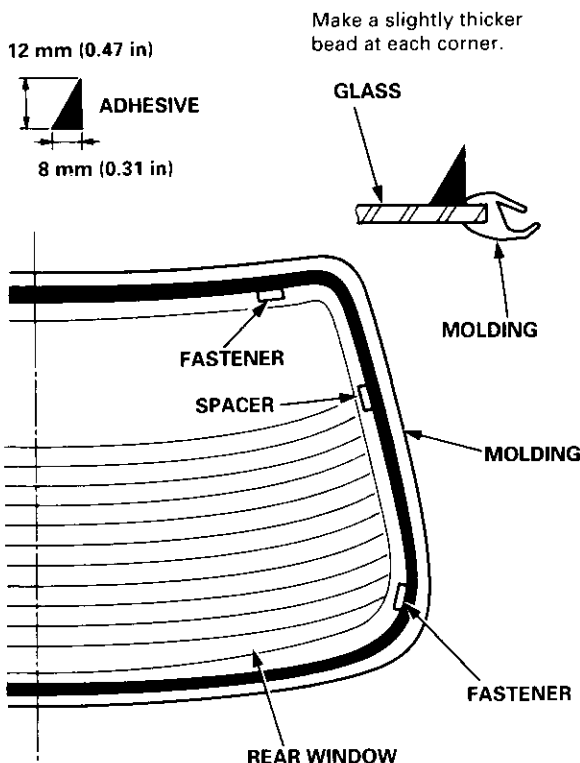

14. Use suction cups to hold the rear window over the opening, align it with the alignment marks made in step 7, and set it down on the adhesive. Lightly push on the rear window until its edges are fully seated on the adhesive all the way around.

NOTE: Do not open or close the doors until the adhesive is dry.

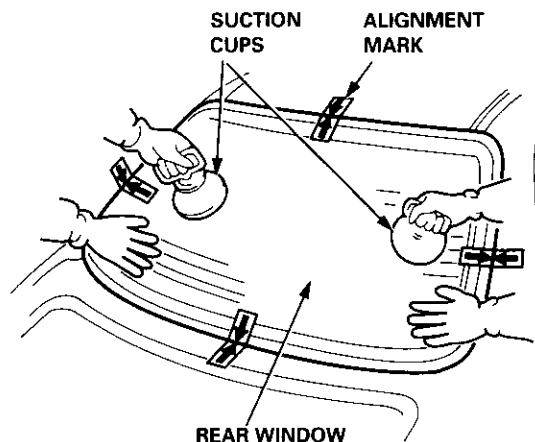

15. Scrape or wipe the excess adhesive off with a putty knife or towel.

NOTE: To remove adhesive from a painted surface or the rear window, use a soft shop towel dampened with alcohol.

16. Let the adhesive dry for at least one hour, then spray water over the rear window and check for leaks. Mark the leaking areas, let the rear window dry, then seal with sealant.

NOTE: Let the car stand for at least four hours after rear window installation. If the car has to be used within the first four hours, it must be driven slowly.

17. Reinstall all remaining removed parts.

NOTE: Advise the customer not to do the following things for two to three days:

- Slam the doors with all the windows rolled up.
- Twist the body excessively (such as when going in and out of driveways at an angle or driving over rough, uneven roads).

Rear Window

Removal

3D:


CAUTION:

- Wear gloves to remove and install the rear window.
- Use seat covers to avoid damaging any surfaces.
- Do not damage the rear window defogger grid lines.
- Take care not scratch the rear window molding.


1. To remove the rear window, first remove the:
 - Rear center shelf (see page 20-60)
 - Hatch upper trim, hatch trim panel and hatch side trim (see page 20-63)
 - Rear window wiper arm (see page 20-115)
 - Hatch spoiler (see page 20-101)
2. Disconnect the rear window defogger connector from each side.
3. Apply protective tape to the inner edge of the tailgate.
4. From inside the hatch, use a knife to cut through the rear window adhesive all the way around.

NOTE:


- If the rear window is to be reinstalled, take care not to damage the molding.
- If the molding is damaged, replace the rear window and molding as an assembly.

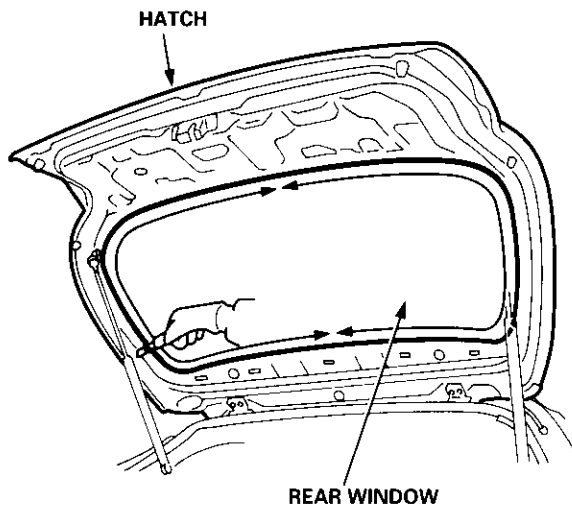


Upper portion:

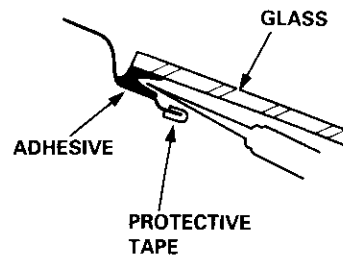

Side portion:

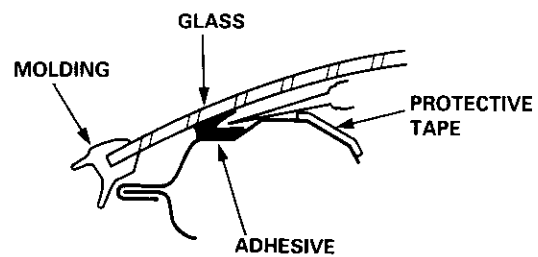

Lower portion:

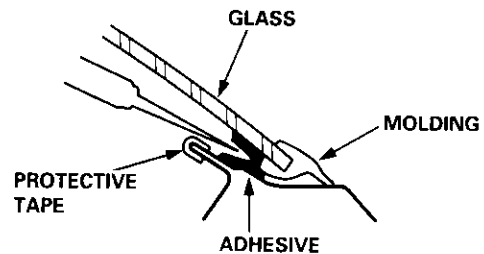

5. Carefully remove the rear window.

NOTE: Check the molding for damage, and replace the rear window if necessary.



Installation

- Using a knife, scrape the old adhesive smooth to a thickness of about 2 mm (0.08 in) on the bonding surface around the entire rear window opening flange.

NOTE:

- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove the rubber dams, spacers and fasteners from the hatch.
- Mask off surrounding surfaces before applying primer.

- Clean the hatch bonding surface with a sponge dampened in alcohol.


NOTE: After cleaning, keep oil, grease or water from getting on the surface.

- If the old rear window is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the rear window surface with alcohol where new adhesive is to be applied.

NOTE: Make sure the bonding surface is kept free of water, oil and grease.

CAUTION: Avoid setting the rear window on its edges; the molding can be permanently deformed.

NOTE: Clean the shadowed area.

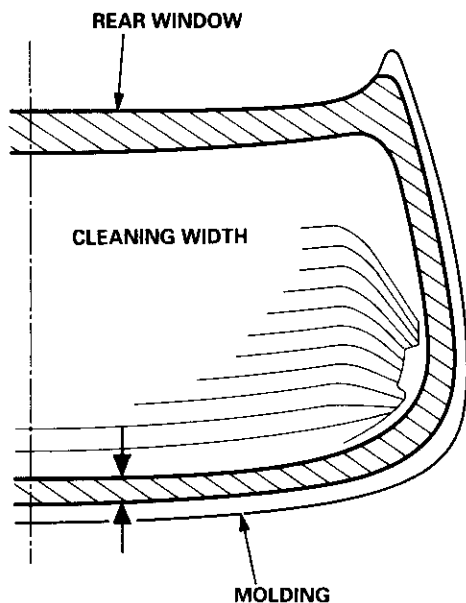


- Glue the rubber dams to the inside face of the rear window, as shown, to contain the adhesive during installation, and glue the fasteners, spacer and seals as shown.

NOTE:


- Glue the rubber dams using the printed dots as a guide.
- Be careful not to touch the rear window where adhesive will be applied.

▷: Fastener, spacer and seal locations


A ▷, 4

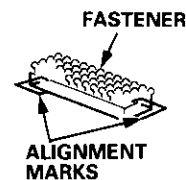




B ▷, 1

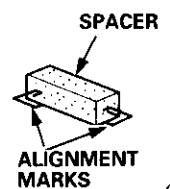

C ▷, 2

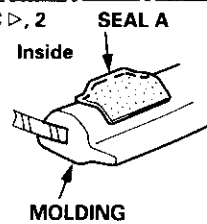

D ▷, 2

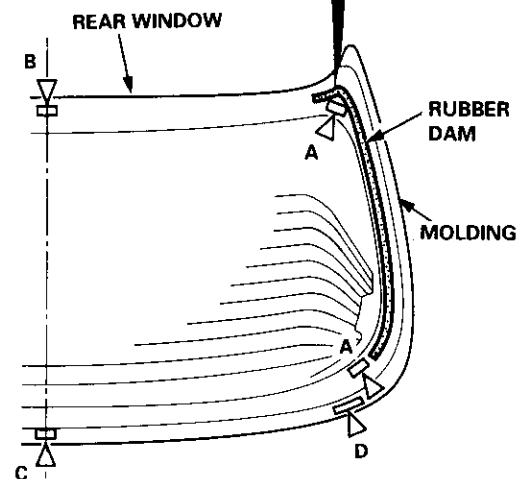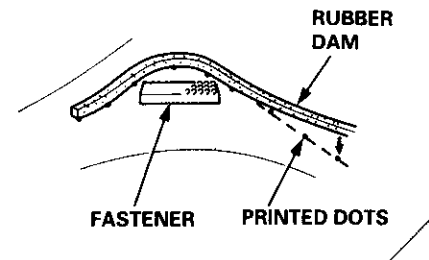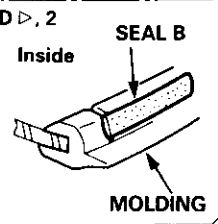



(cont'd)

Rear Window

Installation (cont'd)


5. Install the fasteners to the hatch as shown.

▷: Fastener locations, 4

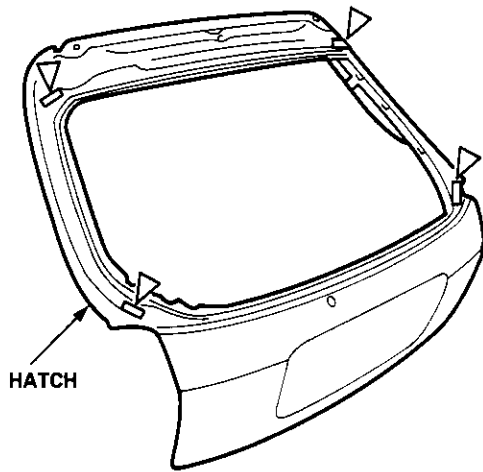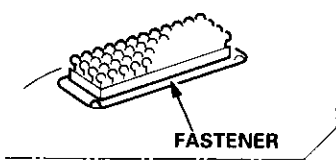

6. Set the rear window upright on the hatch, then center it in the opening. Make alignment marks across the rear window and body with a grease pencil at the four points shown.

NOTE: Be careful not to touch the rear window where adhesive will be applied.

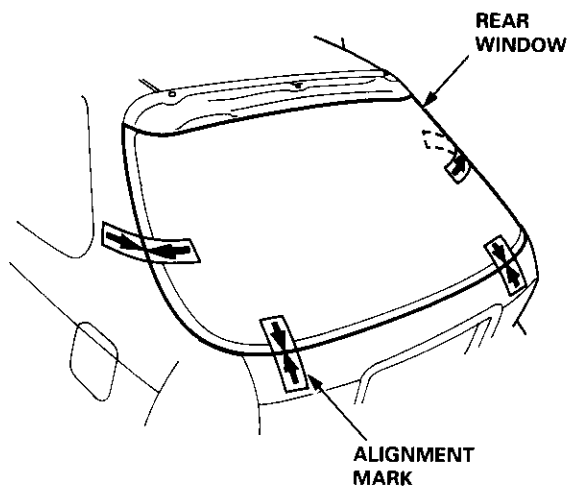




7. Remove the rear window.

8. With a sponge, apply a light coat of glass primer around the edge of the rear window, then lightly wipe it off with gauze or cheesecloth.

NOTE:

- Do not apply body primer to the rear window, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the rear window properly, causing a leak after the rear window is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

▨ : Apply glass primer here.

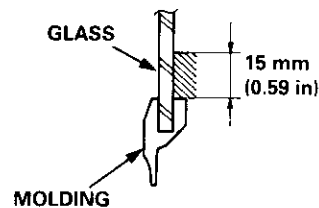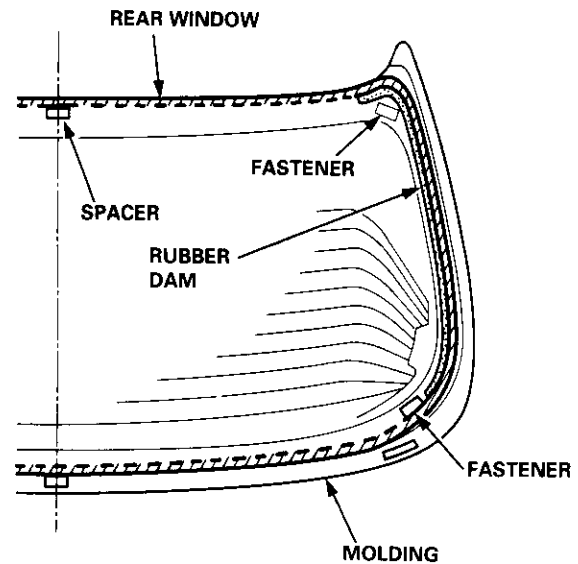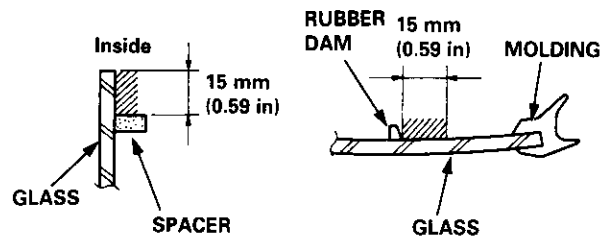


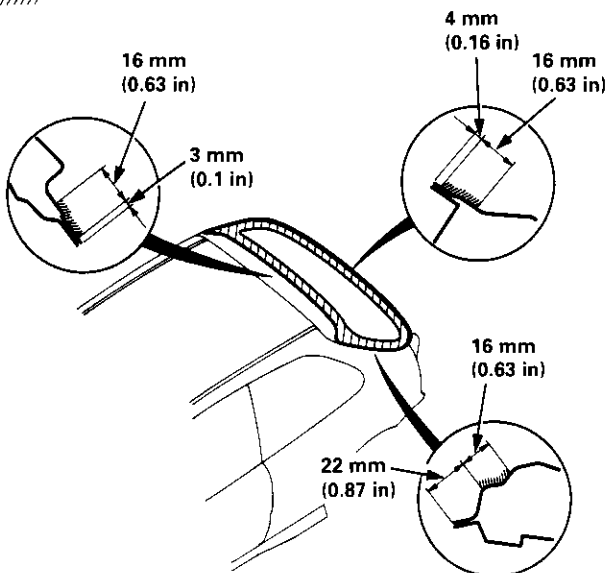


9. With a sponge, apply a light coat of body primer to the original adhesive remaining around the rear window opening flange. Let the body primer dry for at least 10 minutes.

NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.

 : Apply body primer here.




10. Thoroughly mix the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:

- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that came with the adhesive.





11. Before filling a cartridge, cut the end of the nozzle as shown.

Cut nozzle end as shown.

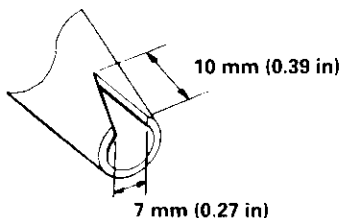

12. Pack adhesive into the cartridge without air pockets to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive around the edge of the rear window as shown.

NOTE: Apply the adhesive within 30 minutes after applying the glass primer.

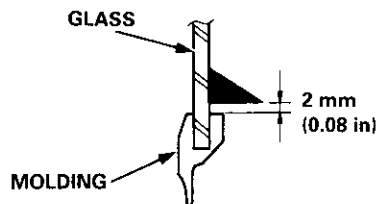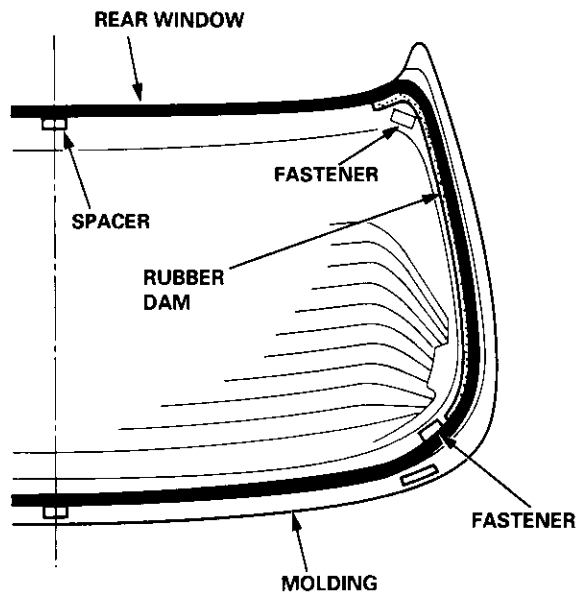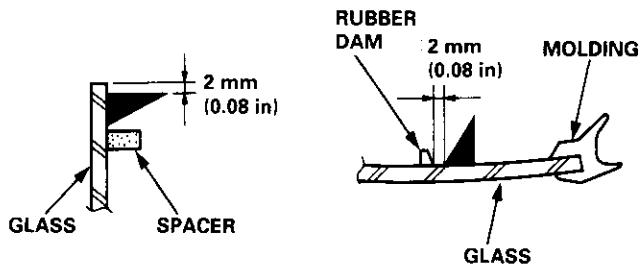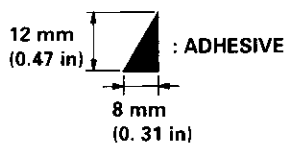


(cont'd)

Installation (cont'd)

- Use suction cups to hold the rear window over the opening, align it with the alignment marks made in step 6, and set it down on the adhesive. Lightly push on the rear window until its edges are fully seated on the adhesive all the way around.

NOTE: Do not open or close the doors until the adhesive is dry.

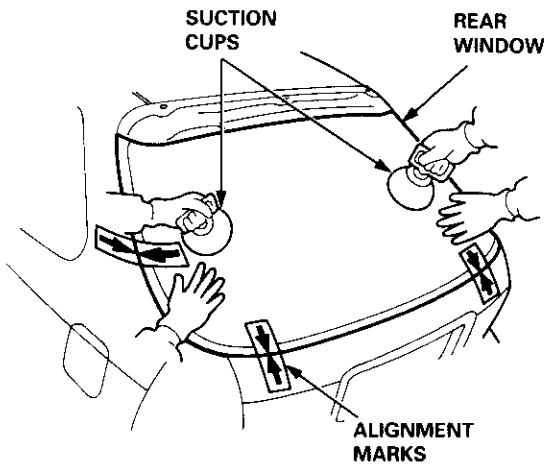

- Scrape or wipe the excess adhesive off with a putty knife or towel.

NOTE: To remove adhesive from a painted surface or the rear window, use a soft shop towel dampened with alcohol.

- Let the adhesive dry for at least one hour, then spray water over the rear window and check for leaks. Mark the leaking areas, let the rear window dry, then seal with sealant.

NOTE: Let the car stand for at least four hours after rear window installation. If the car has to be used within the first four hours, it must be driven slowly.

- Reinstall all remaining removed parts.

NOTE: Advise the customer not to do the following things for two to three days:

- Slam the doors with all the windows rolled up.
- Twist the body excessively (such as when going in and out of driveways at an angle or driving over rough, uneven roads).

Removal

3D:


CAUTION:

- Wear gloves to remove and install the quarter glass.
- Use seat covers to avoid damaging any surfaces.

- To remove the quarter glass, first remove the:
 - Rear seat-back and rear seat cushion (see page 20-80)
 - Rear center shelf and rear side shelf (see page 20-60)
 - Rear trim panel and side trim panel (see page 20-60)
 - Upper anchor bolts from the front and rear seat belts (see pages 20-86, 89)
 - Quarter trim panel (see page 20-60)
- From inside the car, use a knife to cut through the quarter glass adhesive all the way around.

NOTE:


- If the clip on the rear edge is broken, the quarter glass can be reinstalled using butyl tape (see page 20-42).
- Apply protective tape along the edge of the entire quarter glass opening flange.

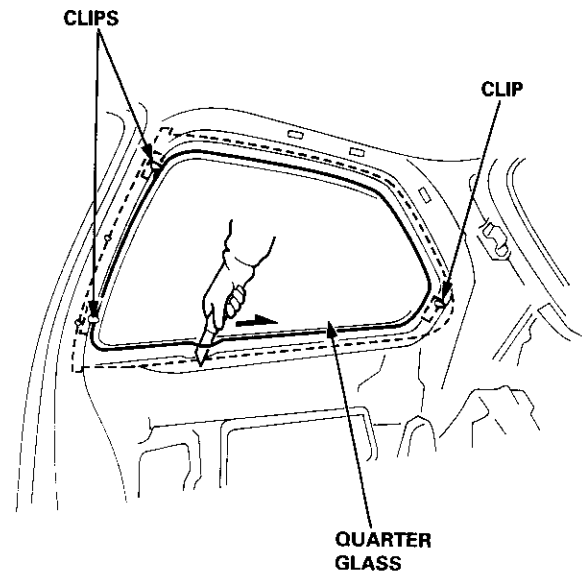




Installation


Upper portion:

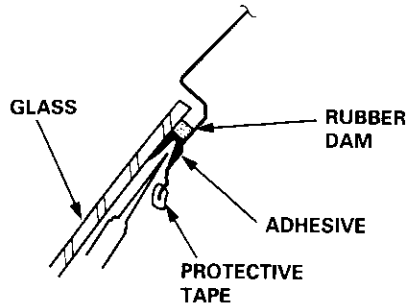

Lower portion:

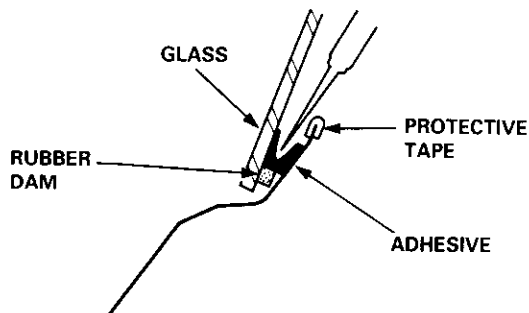

Pillar portion:

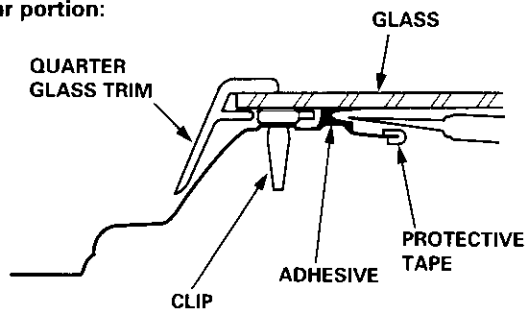

3. Carefully remove the quarter glass.

NOTE: Check the quarter glass trim and clips for damage, and replace them if necessary.

1. Using a knife, scrape the old adhesive smooth to a thickness of about 2 mm (0.08 in) on the bonding surface around the entire quarter glass opening flange.

NOTE:

- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove the rubber dams from the body.
- If any of the clips are broken, remove them from the body.
- Mask off surrounding surfaces before applying primer.

2. Clean the body bonding surface with a sponge dampened in alcohol.


NOTE: After cleaning, keep oil, grease and water from getting on the surface.

3. If the quarter glass is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the quarter glass surface with alcohol where adhesive is to be applied.

NOTE: Make sure the bonding surface is kept free of water, oil and grease.

CAUTION: Avoid setting the quarter glass on its edges; small chips may later develop into cracks.

NOTE: Clean the shadowed area.

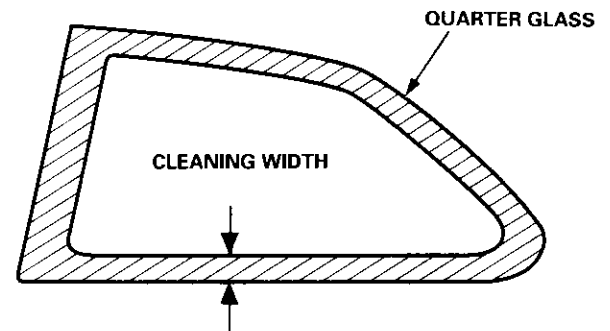


(cont'd)

Quarter Glass

Installation (cont'd)


4. Glue the upper and lower rubber dams to the inside face of the quarter glass, as shown, to contain the adhesive during installation.

NOTE: Be careful not to touch the quarter glass where adhesive will be applied.

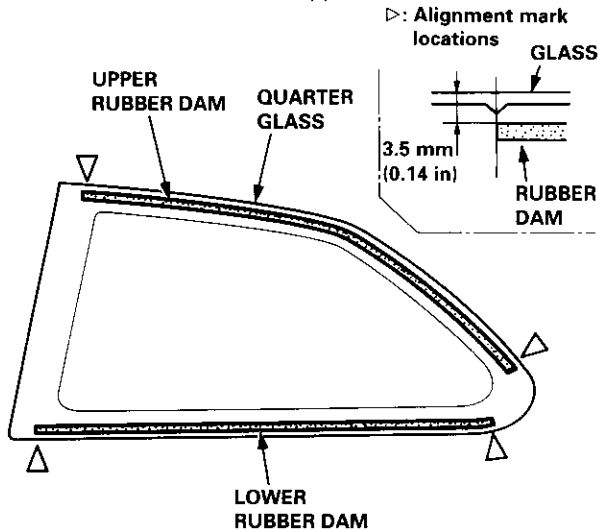

5. Install the quarter glass trim on the quarter glass, then glue the upper and lower clips as shown.

NOTE: Be careful not to touch the quarter glass where adhesive will be applied.

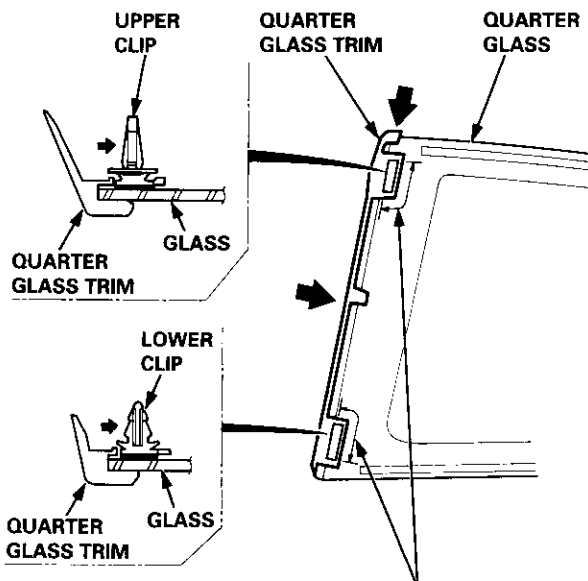


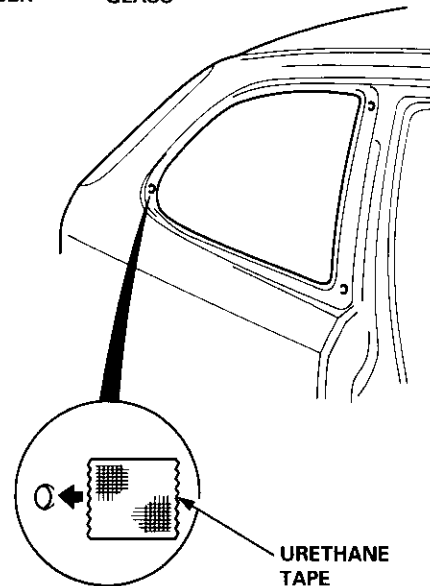
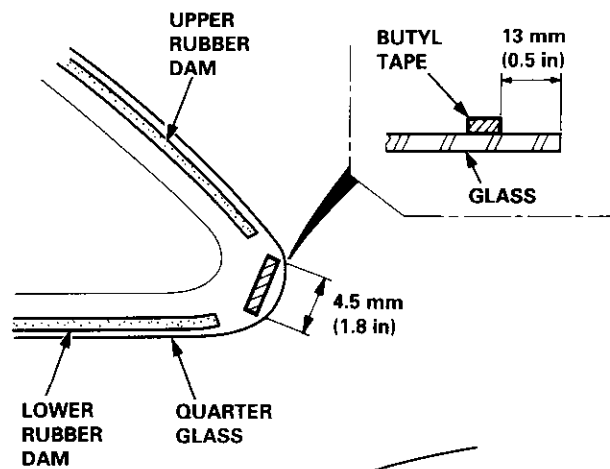
NOTE: Contact the clips against the quarter glass trim at the areas indicated by the arrows.

6. If the old quarter glass is to be reinstalled (and the clip on the rear edge is broken off), apply a light coat of primer (3M C-100, or equivalent), then apply butyl tape to the quarter glass, as shown, and seal the body hole with piece of urethane tape.

NOTE:

- Be careful not to touch the quarter glass where adhesive will be applied.
- Do not peel the separator off the butyl tape.

 : Butyl tape locations (3M 8628, or equivalent)
 Thickness: 3.2 mm (0.13 in)
 Width: 6.4 mm (0.25 in)






- With a sponge, apply a light coat of glass primer to the inside face of the quarter glass, as shown, then lightly wipe it off with gauze or cheesecloth.

NOTE:

- Do not apply body primer to the quarter glass, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the quarter glass properly, causing a leak after the quarter glass is installed.
- Keep water, dust, and abrasive materials away from the primed surface.


 : Apply glass primer here.

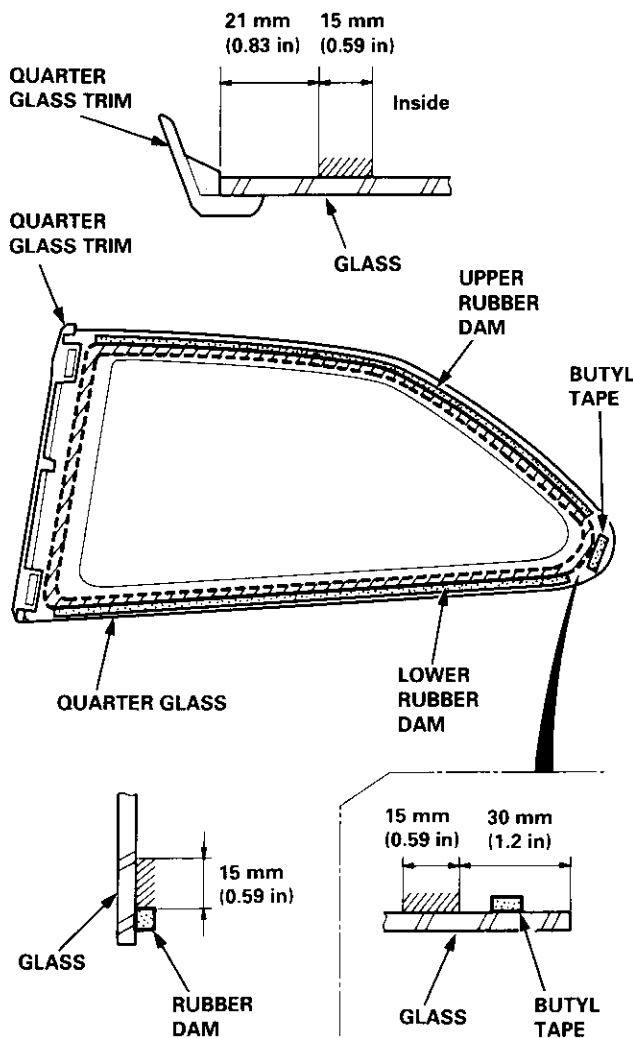


- With a sponge, apply a light coat of body primer to the original adhesive remaining around the quarter glass opening flange. Let the body primer dry for at least 10 minutes.

NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.
- Mask off the rear side trim panel before painting the flange.

 : Apply body primer here.

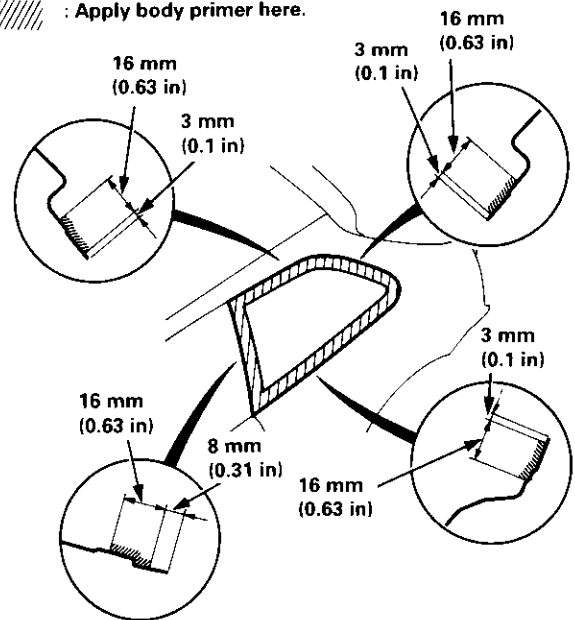


- Thoroughly mix the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:

- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that came with the adhesive.

- Before filling a cartridge, cut the end of the nozzle as shown.

Cut nozzle end as shown.

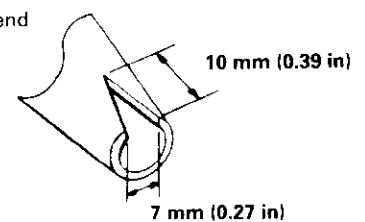

(cont'd)


Quarter Glass

Installation (cont'd)

11. Pack adhesive into the cartridge without air pockets to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive around the edge of the quarter glass as shown.


NOTE:

- If the old quarter glass is to be reinstalled, peel the separator off the butyl tape after applying the adhesive.
- Apply the adhesive within 30 minutes after applying the glass primer.

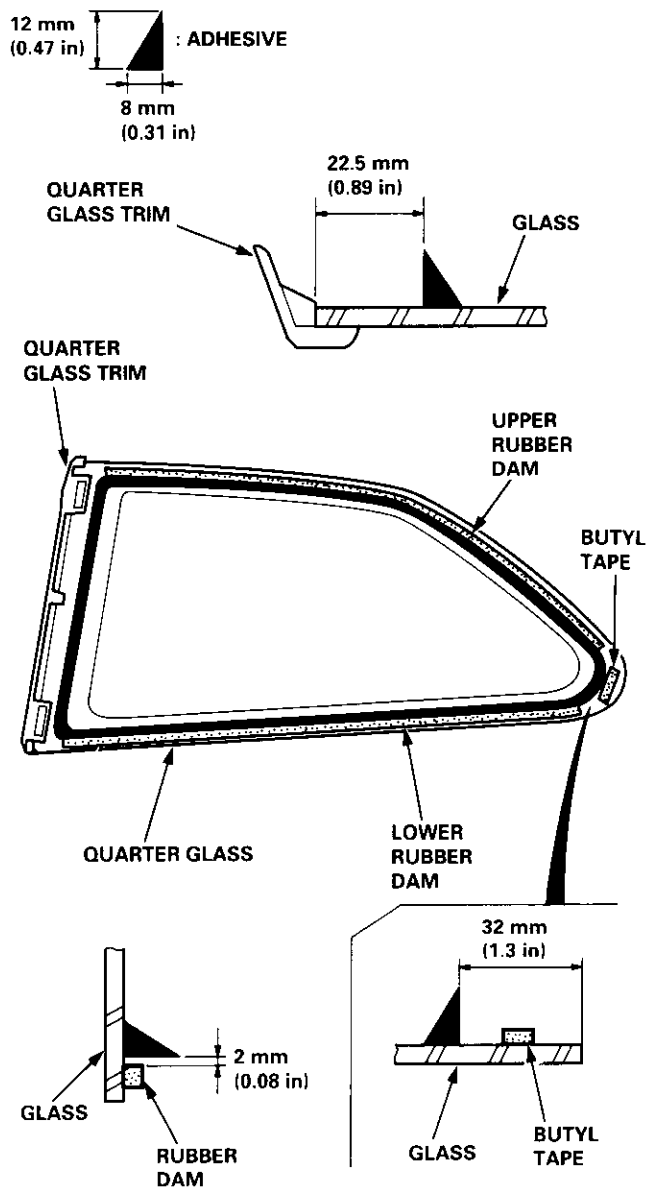

12. Use suction cups to hold the quarter glass over the opening, align the clips, and set it down on the adhesive. Lightly push on the quarter glass until its edges are fully seated on the adhesive all the way around.

NOTE: Do not open or close the doors until the adhesive is dry.

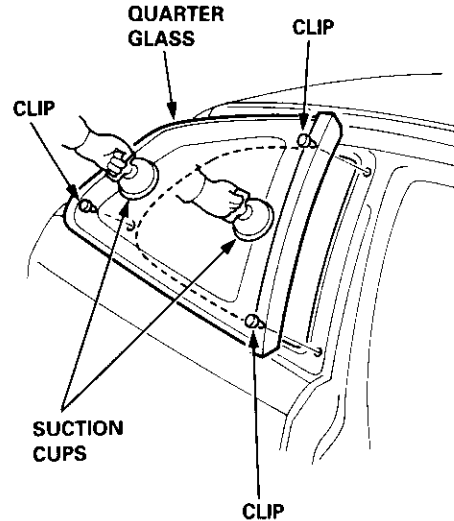

13. Scrape or wipe the excess adhesive off with a putty knife or towel.

NOTE: To remove adhesive from a painted surface or the quarter glass, wipe with a soft shop towel dampened with alcohol.

14. Let the adhesive dry for at least one hour, then spray water over the quarter glass and check for leaks. Mark the leaking areas, let the quarter glass dry, then seal with sealant.

NOTE: Let the car stand for at least four hours after quarter glass installation. If the car has to be used within the first four hours, it must be driven slowly.

15. Reinstall all remaining removed parts.

NOTE: Advise the customer not to do the following things for two to three days:

- Slam the doors with all the windows rolled up.
- Twist the body excessively (such as when going in and out of driveways at an angle or driving over rough, uneven roads).



Removal

2D:

CAUTION:


- Wear gloves to remove and install the quarter glass.
- Use seat covers to avoid damaging any surfaces.

1. To remove the quarter glass, first remove the:
 - Rear seat-back and rear seat cushion (see page 20-81)
 - Side trim panel (see page 20-61)
 - Rear shelf (see page 20-61)
 - Upper anchor bolt from the front seat belt (see page 20-86)
 - Quarter trim panel (see page 20-61)


2. From inside the car, use a knife to cut through the quarter glass adhesive all the way around.

NOTE:


- If the quarter glass is to be reinstalled, take care not to damage the molding.
- Apply protective tape along the edge of the entire quarter glass opening flange.

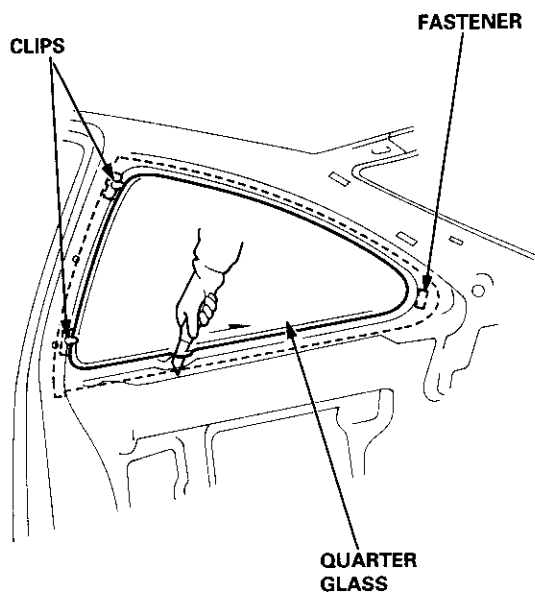


Upper portion:

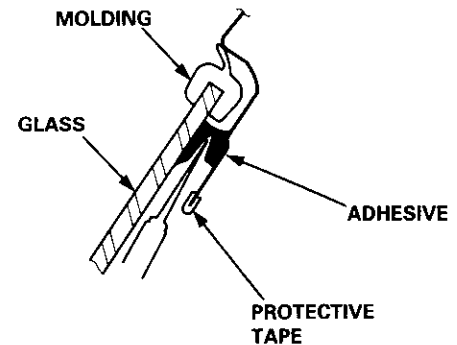

Rear edge portion:

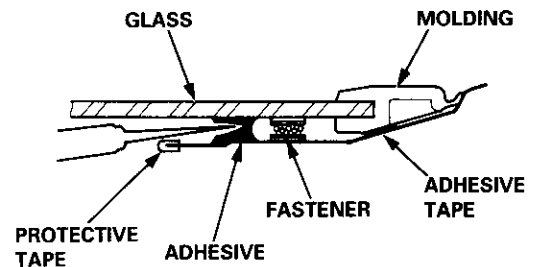

Pillar portion:

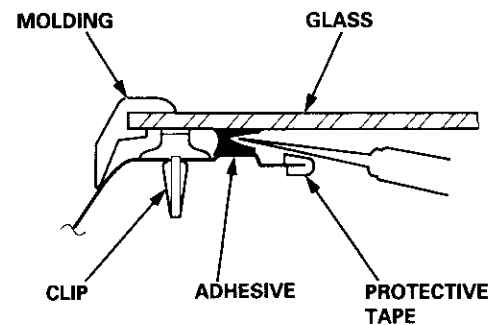

3. Carefully remove the quarter glass.

NOTE: Check the molding for damage, and replace it if necessary.

Quarter Glass

Installation

1. Using a knife, scrape the old adhesive smooth to a thickness of about 2 mm (0.08 in) on the bonding surface around the entire quarter glass opening flange.

NOTE:

- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove the fastener from the body.
- If any of the clips are broken, remove them from the body.
- Mask off surrounding surfaces before applying primer.

2. Clean the body bonding surface with a sponge dampened in alcohol.


NOTE: After cleaning, keep oil, grease and water from getting on the surface.

3. If the quarter glass is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the quarter glass surface with alcohol where adhesive is to be applied.

NOTE: Make sure the bonding surface is kept free of water, oil and grease.

CAUTION: Avoid setting the quarter glass on its edges; small chips may later develop into cracks.

NOTE: Clean the shadowed area.

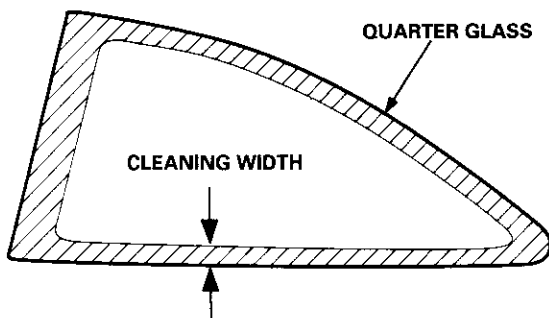

4. Install the molding around the edge of the quarter glass as shown.

NOTE:

- If the old molding is to be reinstalled, scrape off the old adhesive tape from the molding, and clean the molding surface with alcohol where new adhesive tape is to be applied. Apply the double-faced adhesive tape to the molding and quarter glass as shown.
- Be careful not to touch the quarter glass where adhesive will be applied.

Adhesive tape A (3M 4215, or equivalent)

Thickness: 0.4 mm (0.02 in)

Width: 5 mm (0.2 in)

Length: 440 mm (17.3 in)

Adhesive tape B (NITTO 501, or equivalent)

Thickness: 0.16 mm (0.006 in)

Width: 8 mm (0.3 in)


Length: 440 mm (17.3 in)

Adhesive tape C (3M 4213, or equivalent)

Thickness: 0.8 mm (0.03 in)

Width: 5 mm (0.2 in)

Length: 30 mm (1.2 in)

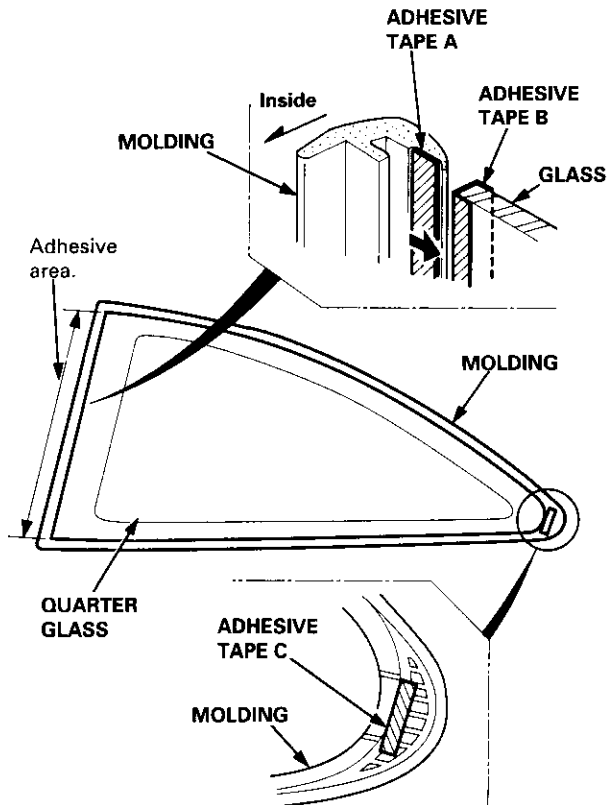




- If the old quarter glass is to be reinstalled, glue the upper and lower clips and fastener as shown.

NOTE: Be careful not to touch the quarter glass where adhesive will be applied.

▷: Clip, fastener locations


A▷, 2

B▷, 1

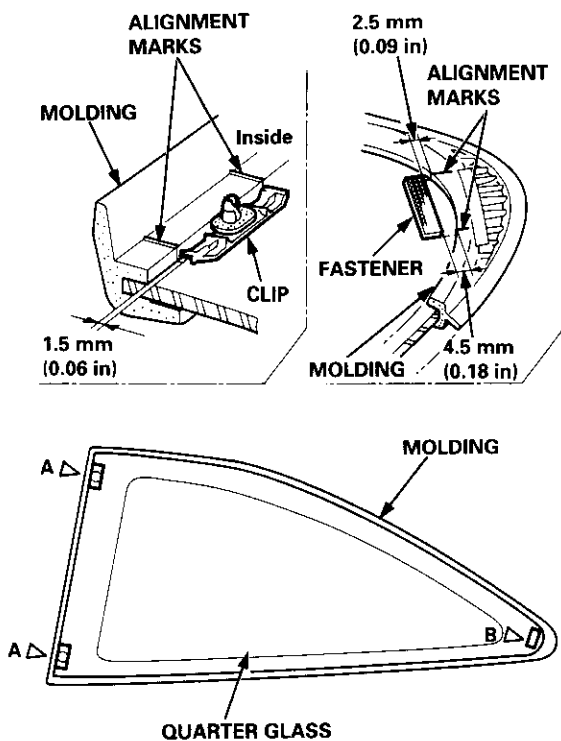

- Glue the fastener to the body as shown.

▷: Fastener location, 1

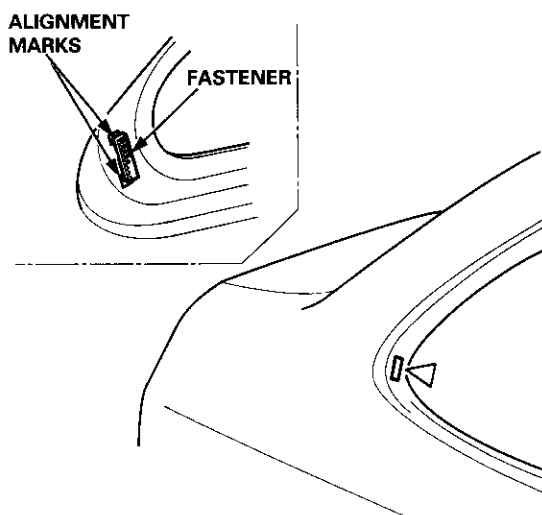


- With a sponge, apply a light coat of glass primer to the inside face of the quarter glass, as shown, then lightly wipe it off with gauze or cheesecloth.

NOTE:

- Do not apply body primer to the quarter glass, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the quarter glass properly, causing a leak after the quarter glass is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

▨ : Apply body primer here.

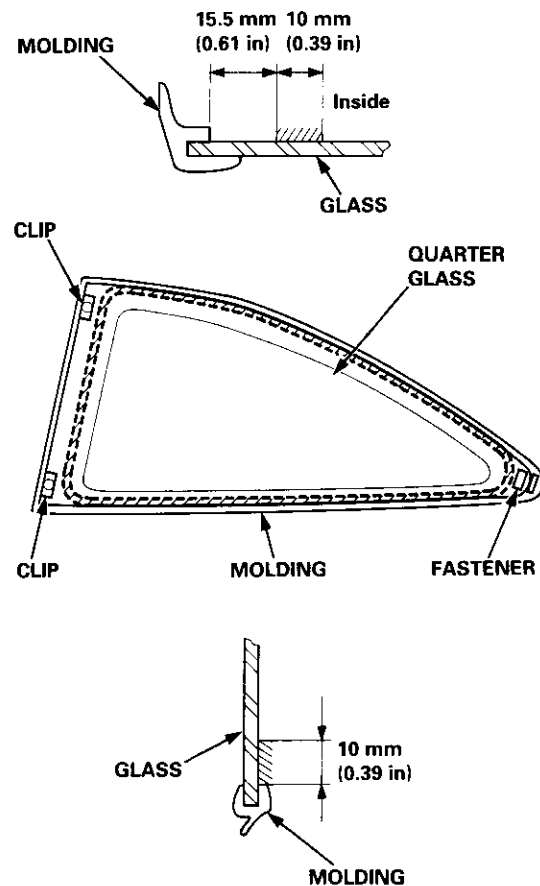

(cont'd)


Quarter Glass

Installation (cont'd)

- With a sponge, apply a light coat of body primer to the original adhesive remaining around the quarter glass opening flange. Let the body primer dry for at least 10 minutes.

NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.
- Mask off the rear side trim panel before painting the flange.

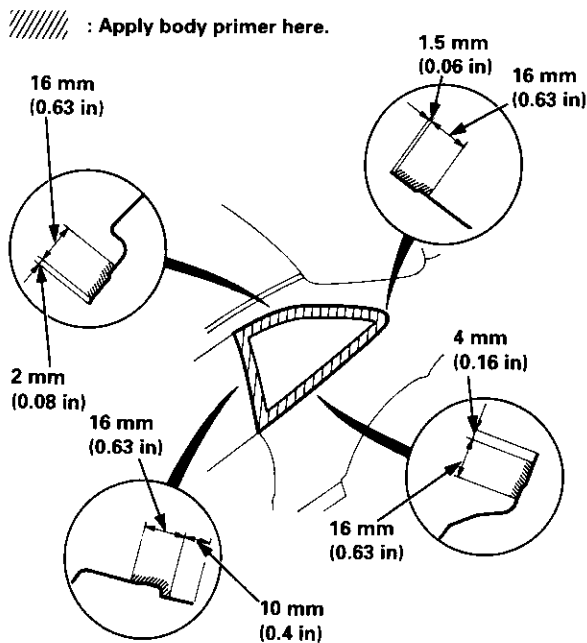


- Thoroughly mix the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:

- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that came with the adhesive.



- Before filling a cartridge, cut the end of the nozzle as shown.

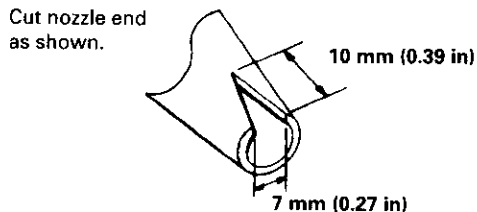

- Pack adhesive into the cartridge without air pockets to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive around the edge of the quarter glass as shown.

NOTE:


- If the old quarter glass is to be reinstalled, peel the separator off the butyl tape after applying the adhesive.
- Peel the separator off the adhesive tape after applying the adhesive.
- Apply the adhesive within 30 minutes after applying the glass primer.

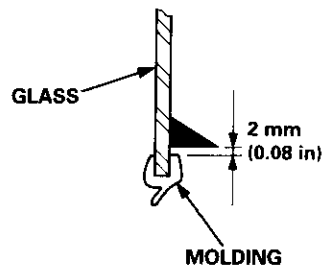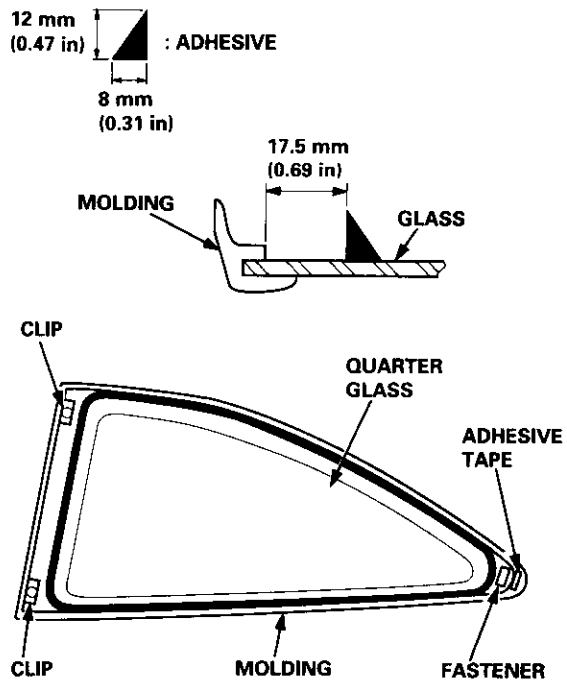



12. Use suction cups to hold the quarter glass over the opening, align the clips, and set it down on the adhesive. Lightly push on the quarter glass until its edges are fully seated on the adhesive all the way around.

NOTE: Do not open or close the doors until the adhesive is dry.

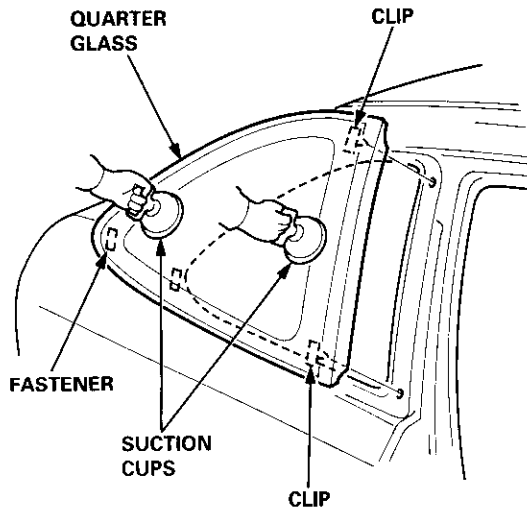

13. Scrape or wipe the excess adhesive off with a putty knife or towel.

NOTE: To remove adhesive from a painted surface or the quarter glass, wipe with a soft shop towel dampened with alcohol.

14. Let the adhesive dry for at least one hour, then spray water over the quarter glass and check for leaks. Mark the leaking areas, let the quarter glass dry, then seal with sealant.

NOTE: Let the car stand for at least four hours after quarter glass installation. If the car has to be used within the first four hours, it must be driven slowly.


15. Reinstall all remaining removed parts.

NOTE: Advise the customer not to do the following things for two to three days:

- Slam the doors with all the windows rolled up.
- Twist the body excessively (such as when going in and out of driveways at an angle or driving over rough, uneven roads).

Moonroof

Index

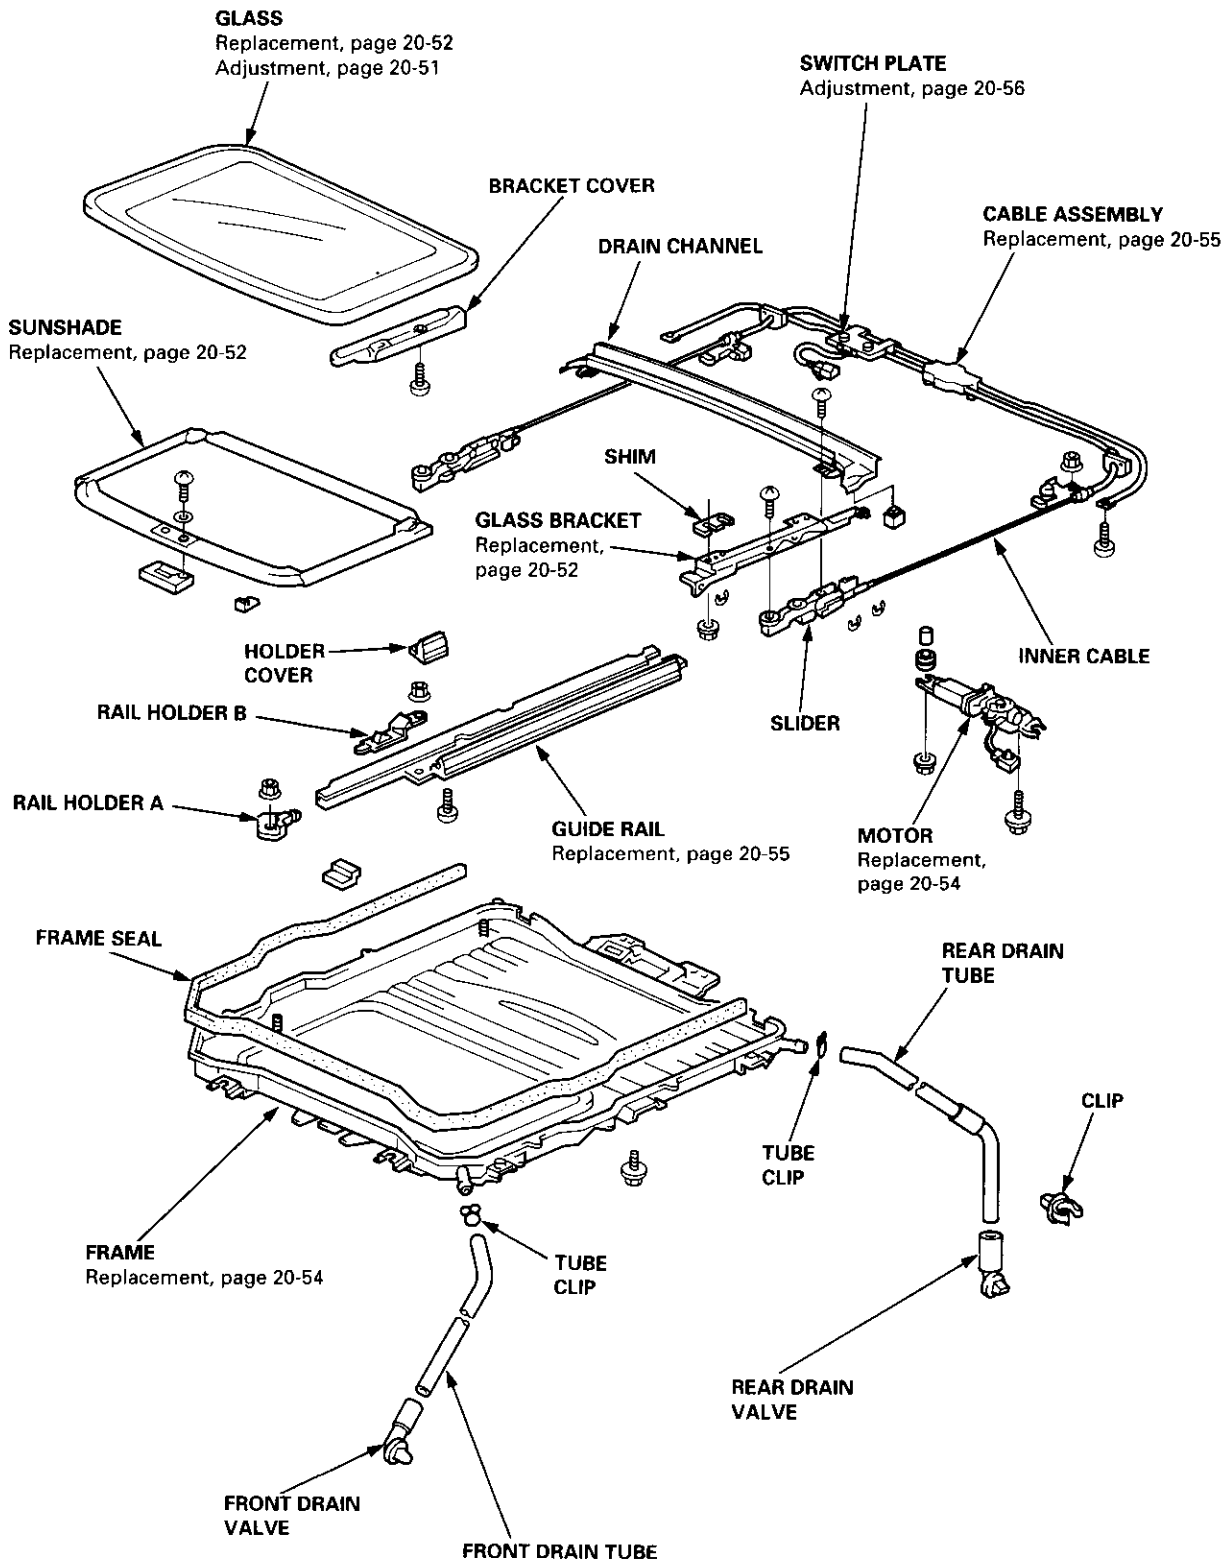




Troubleshooting

Symptom	Probable Cause
Water leaks	<ol style="list-style-type: none"> 1. Clogged drain tube. 2. Gap between glass weatherstrip and roof panel. 3. Defective or improperly installed glass weatherstrip. 4. Gap between drain seal and roof panel.
Wind noise	<ol style="list-style-type: none"> 1. Excessive clearance between glass weatherstrip and roof panel.
Motor noise	<ol style="list-style-type: none"> 1. Loose motor. 2. Worn gear or bearing. 3. Cable assembly deformed.
Glass does not move, but motor turns	<ol style="list-style-type: none"> 1. Clutch out of adjustment. 2. Foreign matter stuck between guide rail and slider. 3. Inner cable loose. 4. Cable assembly not attached properly.
Glass does not move and motor does not turn (glass can be moved with moonroof wrench)	<ol style="list-style-type: none"> 1. Blown fuse. 2. Faulty switch. 3. Battery run down. 4. Defective motor. 5. Faulty relay.

Glass Height Adjustment


The roof panel should be even with the glass weatherstrip, to within $1.7 \pm_{-1.0}^{+0.5}$ mm ($0.07 \pm_{-0.04}^{+0.02}$ in) all the way around. If not, open the glass fully, and:

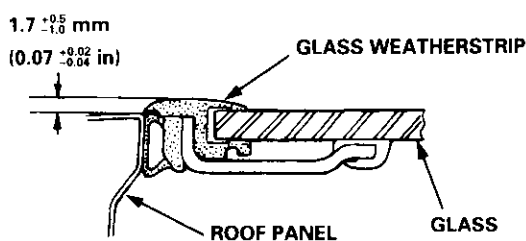

1. Remove the bracket cover.
2. Loosen the nuts, and install the shims between the glass frame and glass bracket as shown.

Shim thickness: Front max. 3 mm (0.12 in)
Rear max. 2 mm (0.08 in)


3. Repeat on opposite side if necessary.

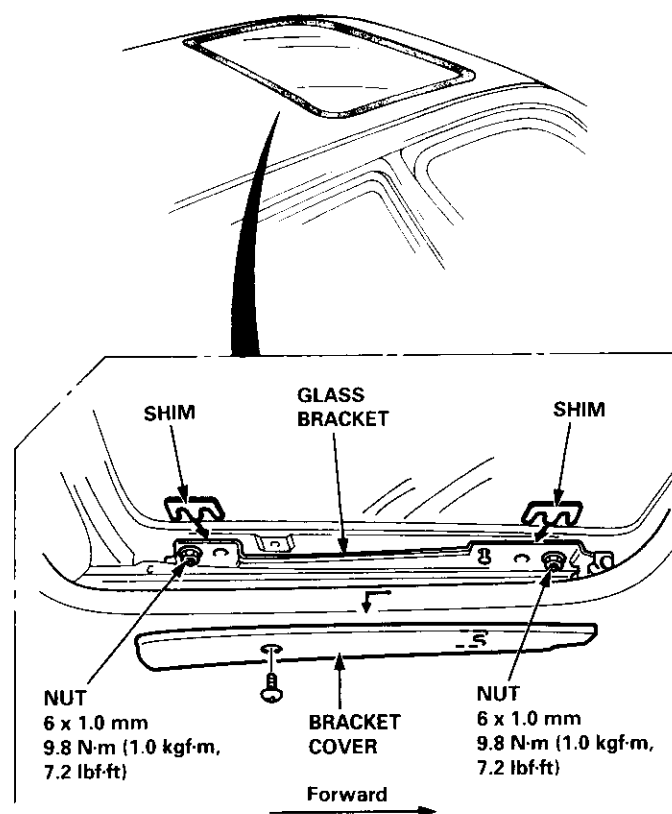


Moonroof

Glass, Glass Bracket and Sunshade Replacement

1. Close the glass fully.
2. Slide the sunshade all the way back.
3. Remove both bracket covers.

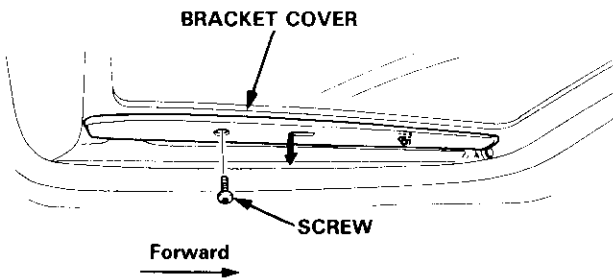


4. Remove the nuts from both glass brackets.

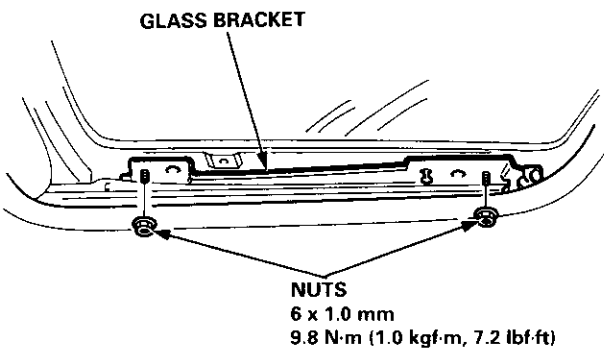


5. Remove the glass by lifting up and pulling forward as shown.


NOTE: Do not damage the roof panel.

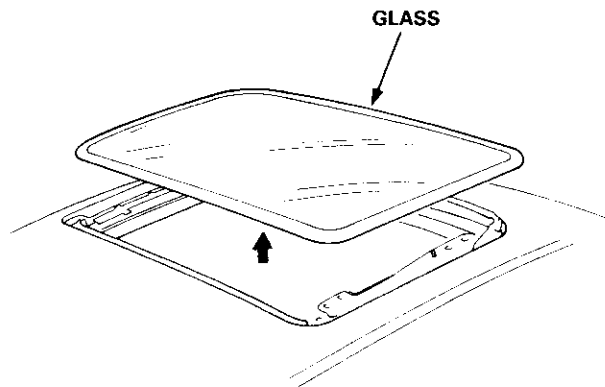


6. Remove the drain channel.

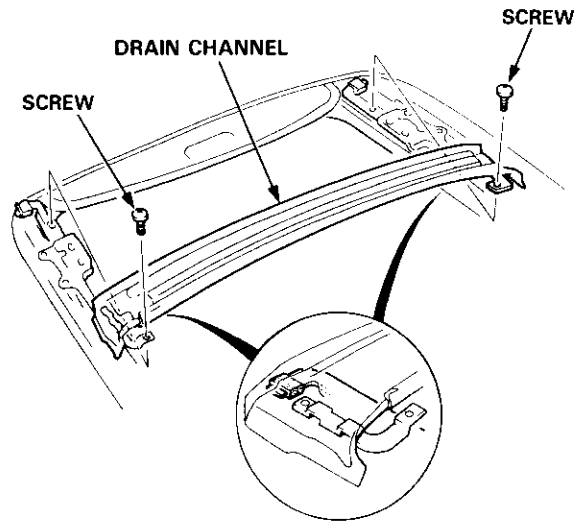

7. Remove the holder cover, then remove the rail holder B.

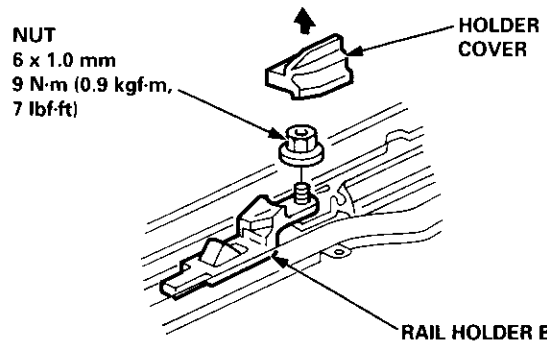


8. Using the moonroof wrench, move the glass bracket to the position where the moonroof normally pivots down, and remove the screws.

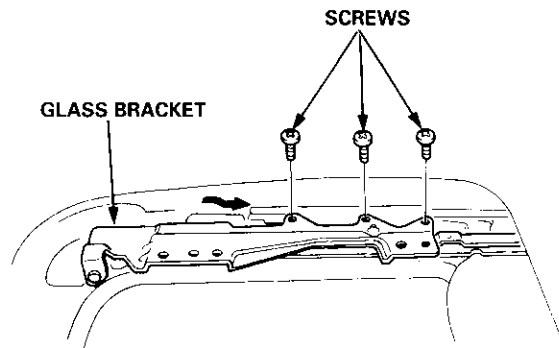




9. Remove the rail holder A.

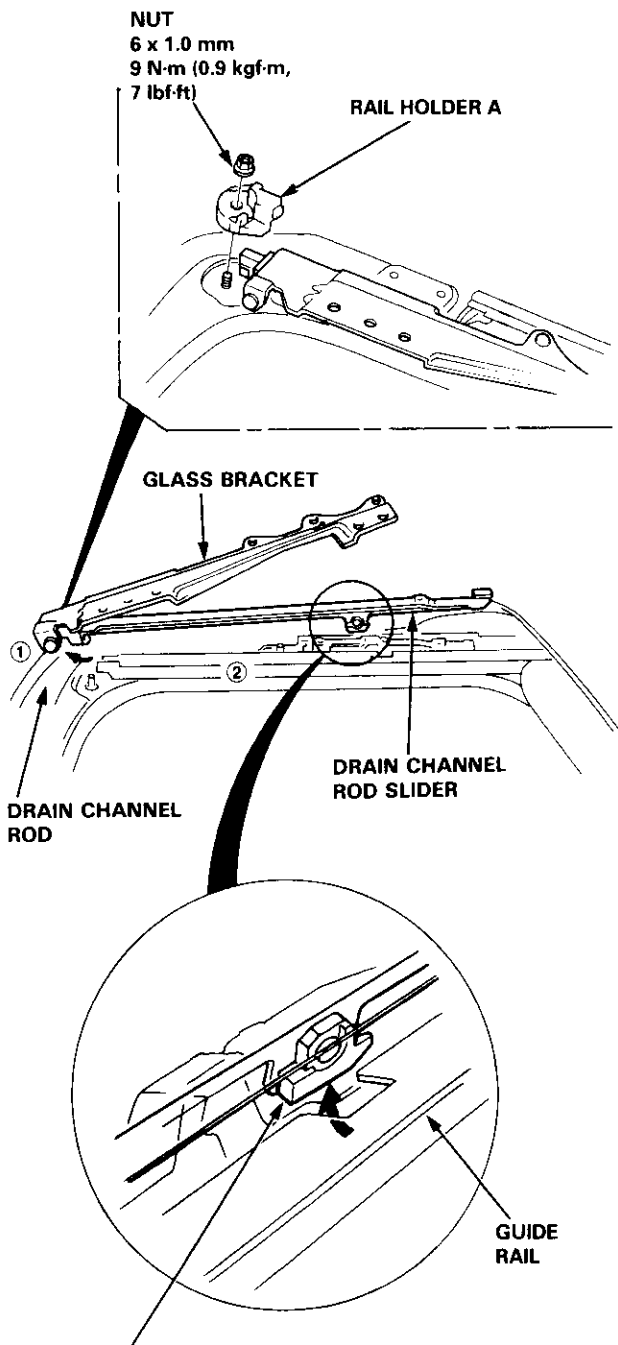

DRAIN CHANNEL ROD STOP
Rotate as shown to remove it from the guide rail.

- 10. Remove the drain channel rod slider by moving the cable slider forward using the moonroof wrench.
- 11. Detach the drain channel rod stop from the cutout of the guide rail as shown.

12. Slide the sunshade forward, then remove it.

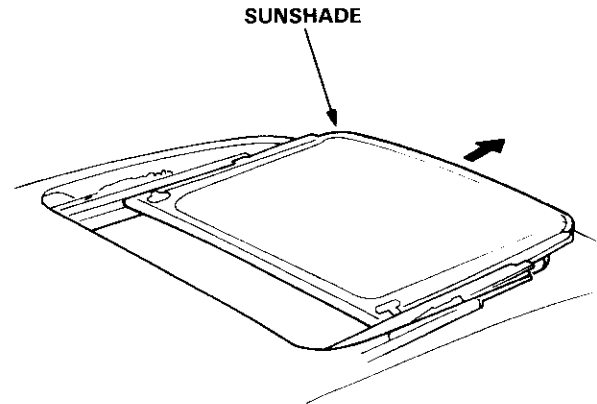

13. Installation is the reverse of the removal procedure.

NOTE: Check the glass height (see page 20-51).

14. Check for water leaks.

NOTE: Do not use high-pressure water.

Moonroof

Motor, Drain Tube and Frame Replacement

CAUTION:

- Wear gloves to remove and install the frame.
- Be careful not to damage the seats, dashboard and other interior trim.

1. Remove the headliner (see page 20-64).
2. Disconnect the motor connector and glass position switch connector.


NOTE: When removing the motor, detach the connector from the frame, remove the bolts and nuts, then remove the motor.

3. Remove the glass (see page 20-52).
4. Disconnect the drain tubes, and detach the ceiling light harness.
5. Remove the frame mounting bolts.

NOTE:

- An assistant is helpful when removing the bolts.
- Remove the front bolts last.


6. Detach the rear hooks by moving the frame forward, then remove the frame.

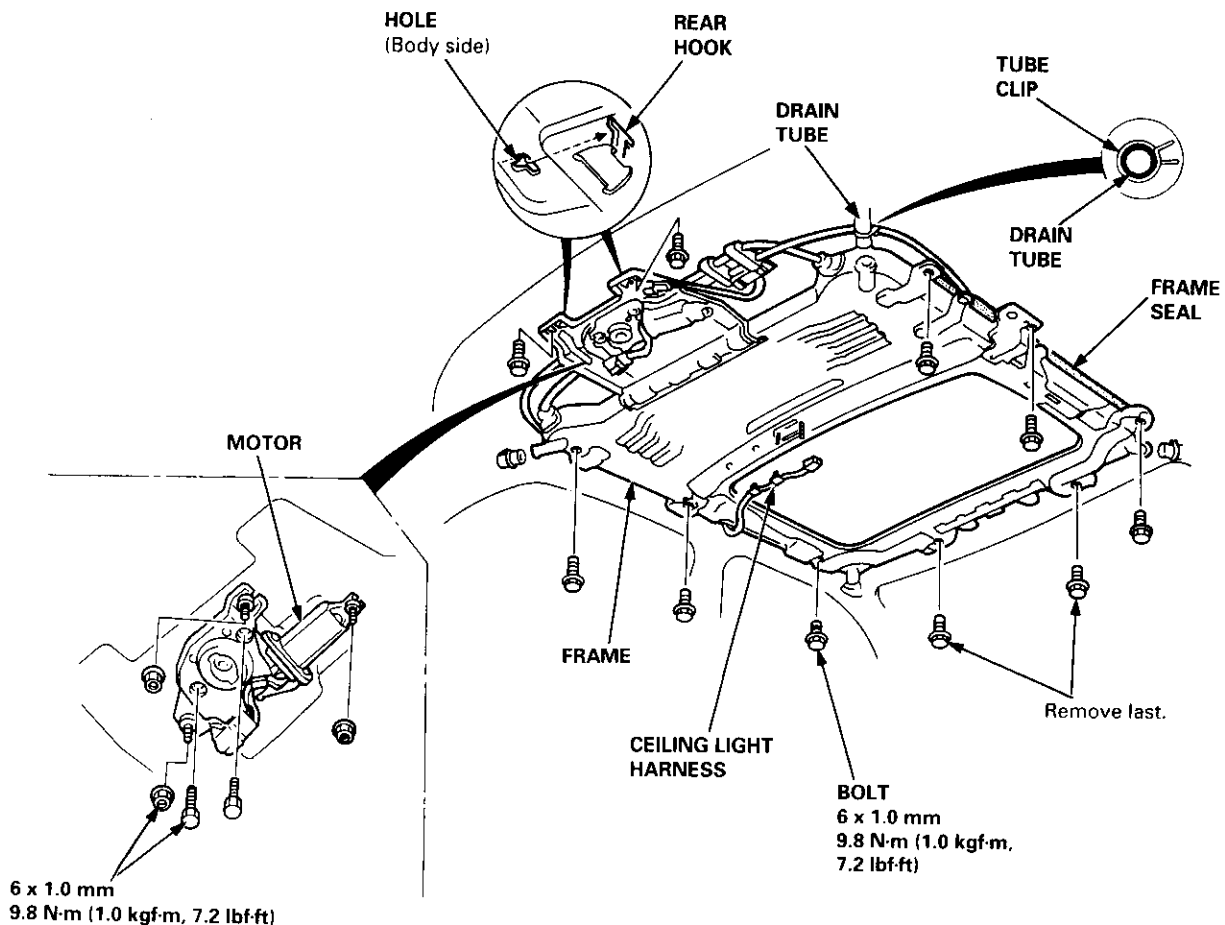



7. Pull the drain tubes out the front and rear pillars.


NOTE: Before pulling out the drain tube, tie a string to the end of it so it can be reinstalled.

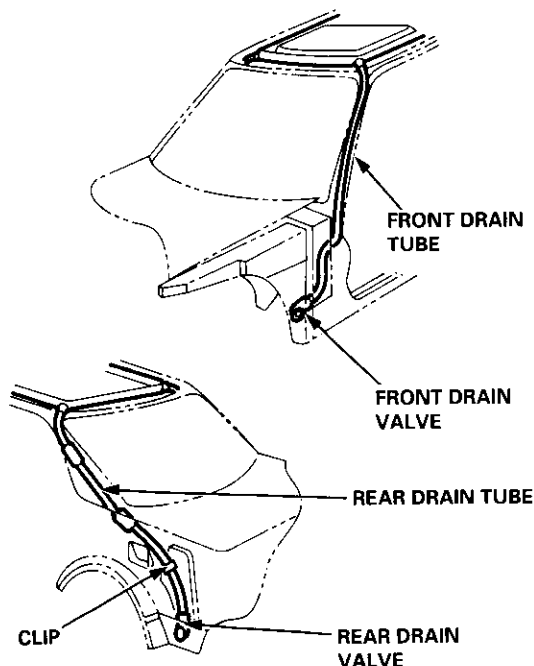

8. Installation is the reverse of the removal procedure.

NOTE:

- Before installing the frame, clear the drain tubes and drain valves by using compressed air.
- Check the frame seal.
- Clean the surface of the frame.
- When installing the frame, first attach the rear hooks into the body holes.
- When connecting the drain tube, slide it over the frame nozzle at least 10 mm (0.39 in).
- Install the tube clip as shown.

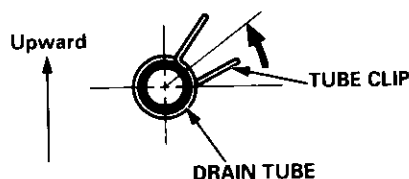

9. Check for water leaks.


NOTE: Do not use high-pressure water.

Guide Rails/Cable Assembly Replacement

CAUTION: Wear gloves to remove and install the guide rails and cable assembly.

1. Remove the frame.
2. Remove the motor and glass bracket (see page 20-52).
3. Remove the nuts, and lift off each guide rail, then remove the cable assembly with sliders attached.


NOTE: Take care not to bend the cable tubes and guide rails.

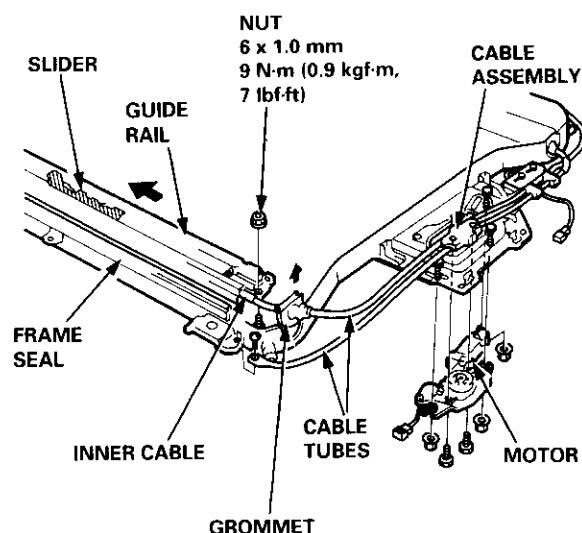

4. Installation is the reverse of the removal procedure.

NOTE:

- Damaged parts should be replaced.
- Grease the sliding portion with Super High Temp Urea Grease, P/N 08758 - 9002.
- Fill the groove in each grommet with sealant.

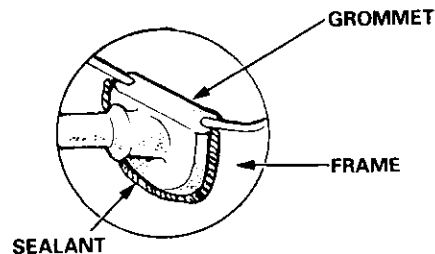

- Install the frame seal securely.
- Before installing the motor, make sure both sliders are parallel.
- Before installing the motor, install the frame and glass, then check the opening drag (see page 20-57).


Moonroof

Switch Plate Adjustment (Fully Closed Position)



1. Remove the headliner (see page 20-64).
2. Using the moonroof wrench, close the glass fully.

NOTE: Check the glass fit to the roof panel.
3. Using an open-end wrench, loosen the switch plate mounting bolts.
4. Adjust position of the switch plate (switch cam) as shown.
5. Check the operation of the glass (from tilt-up position to fully closed position, from the fully open position to the fully closed position) by operating the moonroof switch.

NOTE: Check the glass height (see page 20-51).

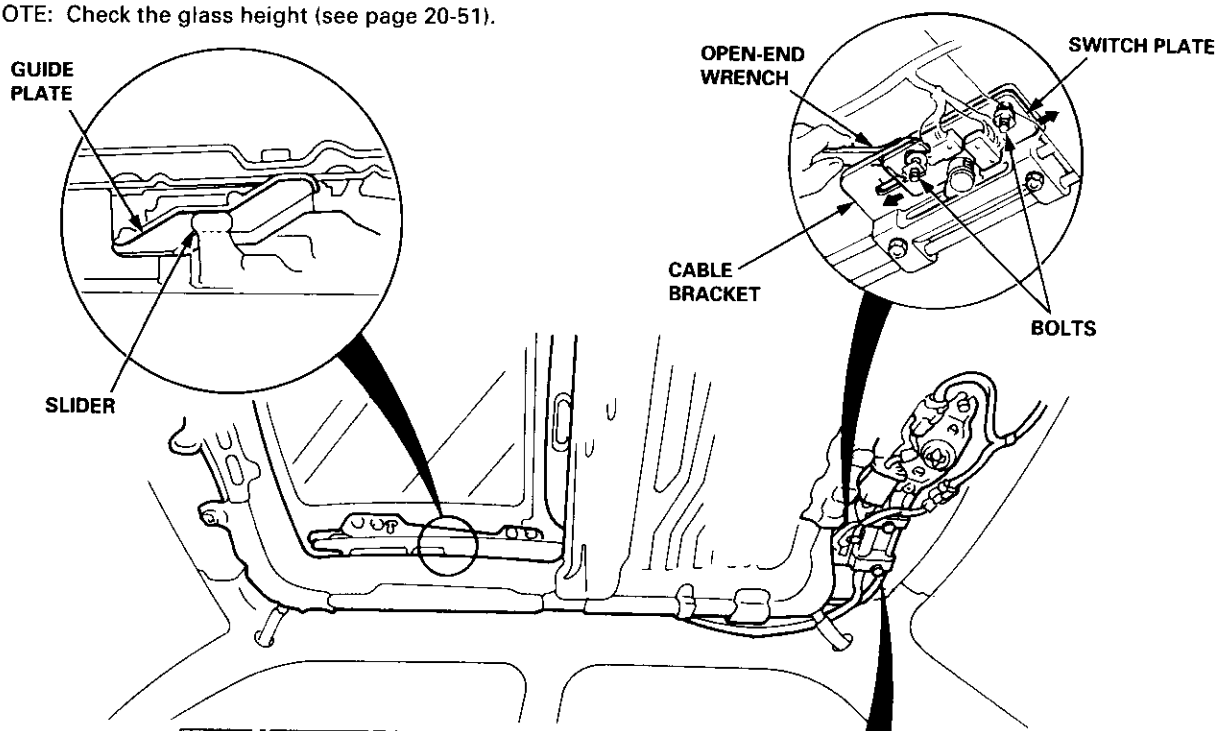

Check the switch plate contacts the cable bracket.

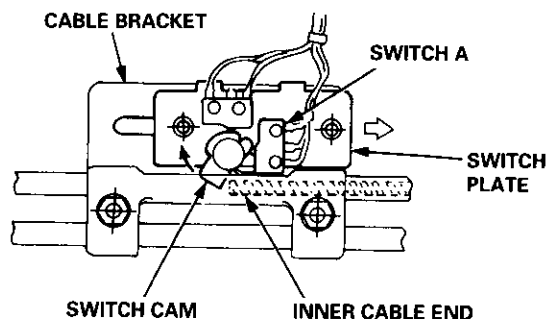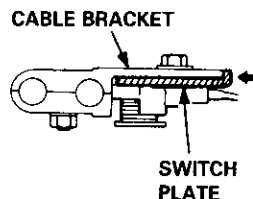

While moving the switch plate little by little, secure the switch plate at the position where the switch cam contacts the switch A (a faint click is heard).

6. Close the glass fully, and check for water leaks.

NOTE: Do not use high-pressure water.




Opening Drag Check (Motor Removed)

Before installing the motor, measure the effort required to open the glass using a spring scale as shown.

CAUTION: When using a spring scale, protect the leading edge of the glass with a shop towel.

If load is over 40 N (4 kgf, 9 lbf), check the side clearance and glass height (see page 20-51).

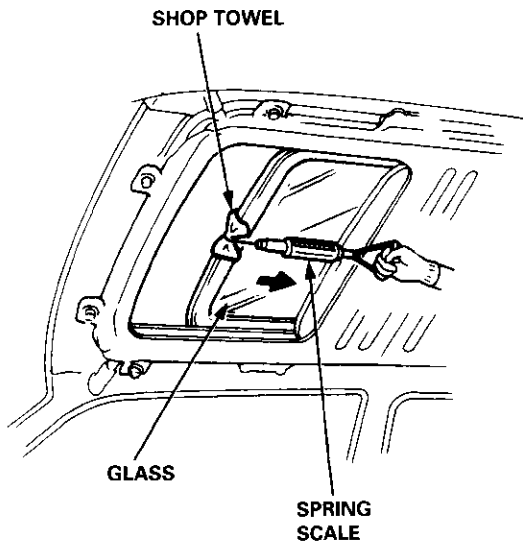


Closing Force Check (Motor Installed)


1. After installing all removed parts, have a helper hold the switch to close the glass while you measure the force required to stop it. Attach a spring scale as shown. Read the force as soon as the glass stops moving, then immediately release the switch and spring scale.

CAUTION: When using a spring scale, protect the leading edge of the glass with a shop towel.

Closing Force: 200 – 290 N
(20 – 30 kgf, 44 – 66 lbf)

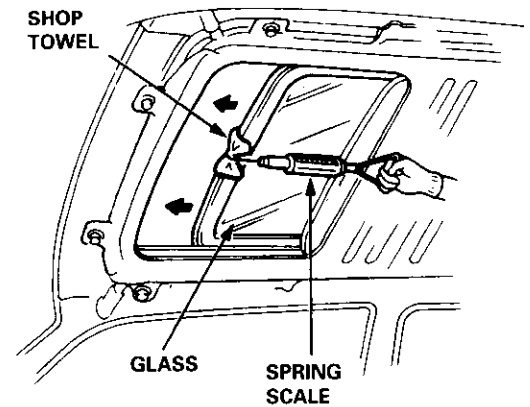

2. If the force is not within specification, install a new lock washer, adjust the tension by turning the motor clutch adjusting nut, and bend the lock washer against the motor clutch adjusting nut.

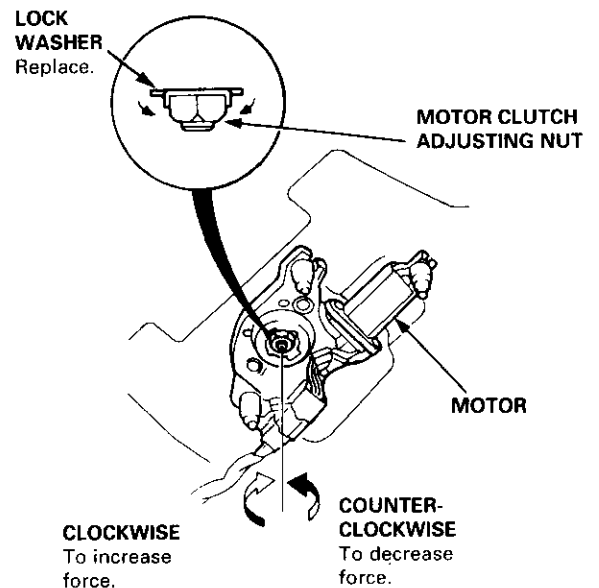


Interior


Component Location Index

SRS components are located in the parts areas marked with an asterisk (*). Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.


2D/3D/4D:

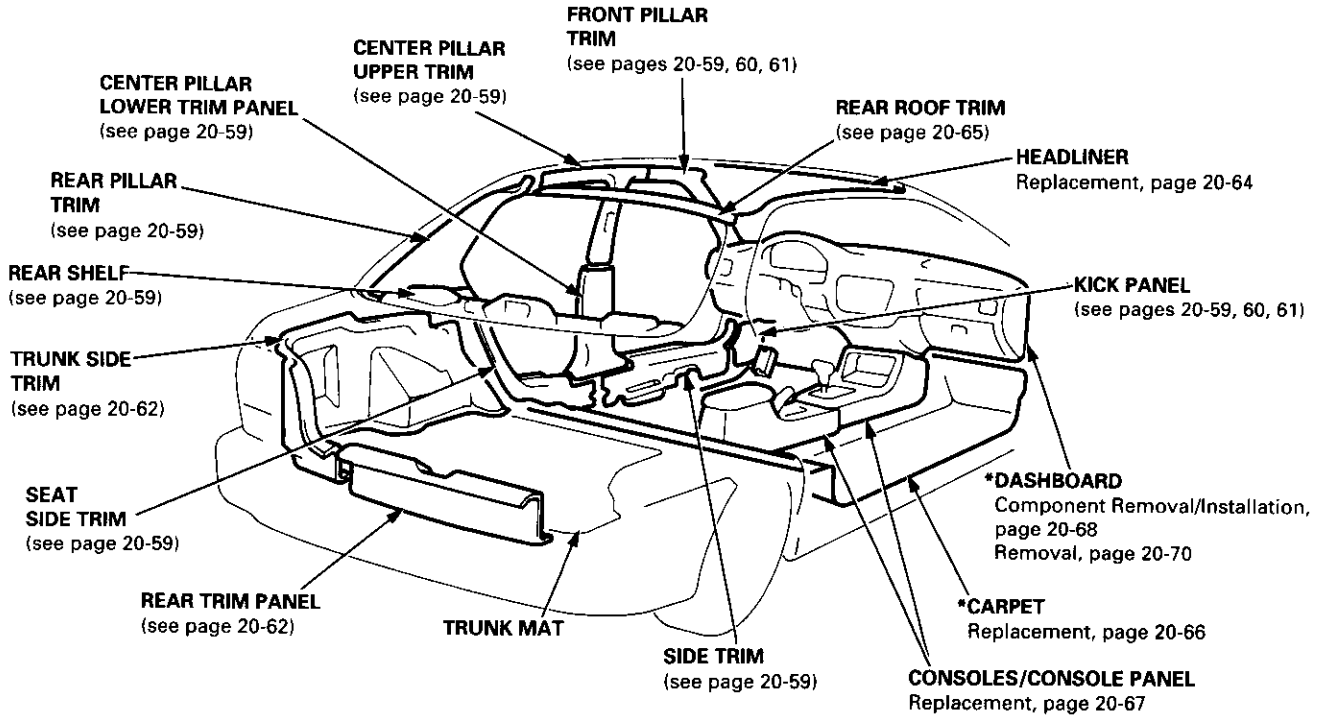

3D:

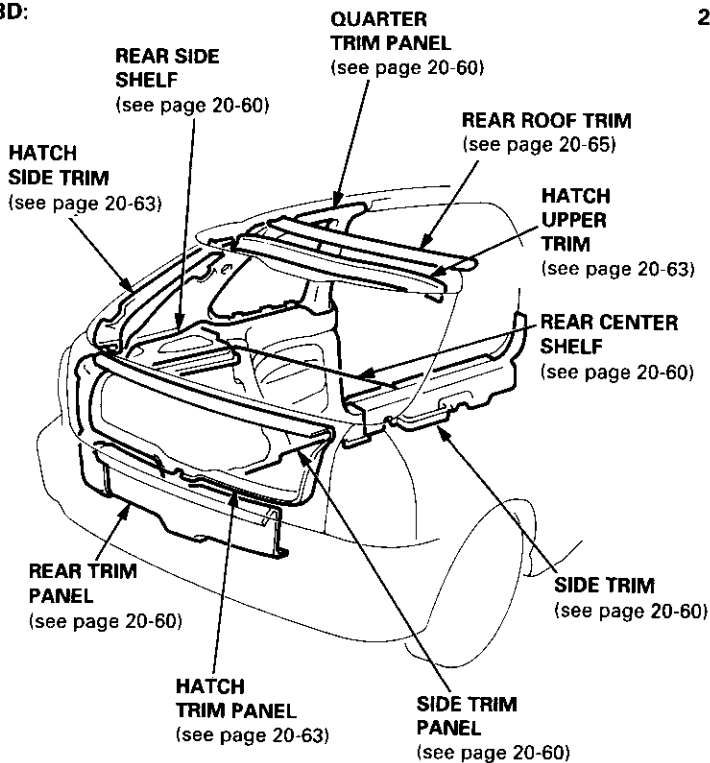

2D:

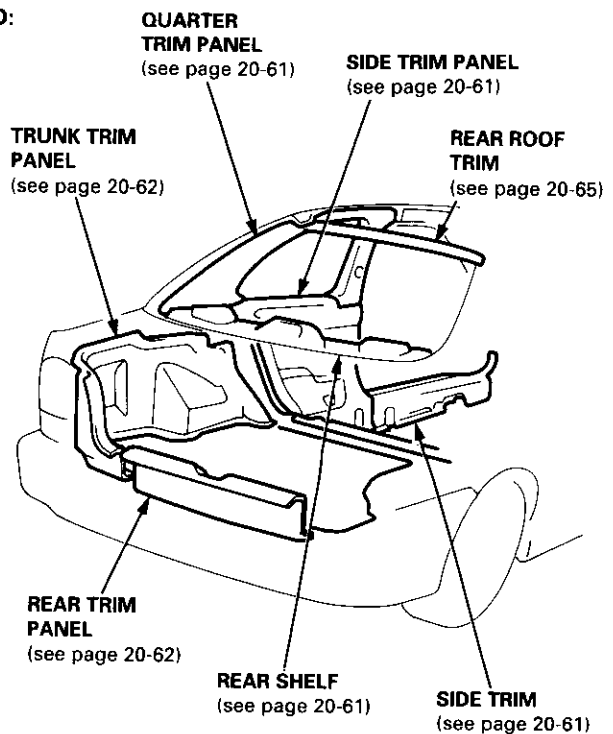



Interior Trim

Replacement

CAUTION:

- Wear gloves to remove and install the trim and panels.
- When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

NOTE: Take care not to bend or scratch the trim and panels.

4D:

▷: Clip locations







A ▷, 2

B ▷, 6

C ▷, 21

D ▷, 2

E ▷, 2

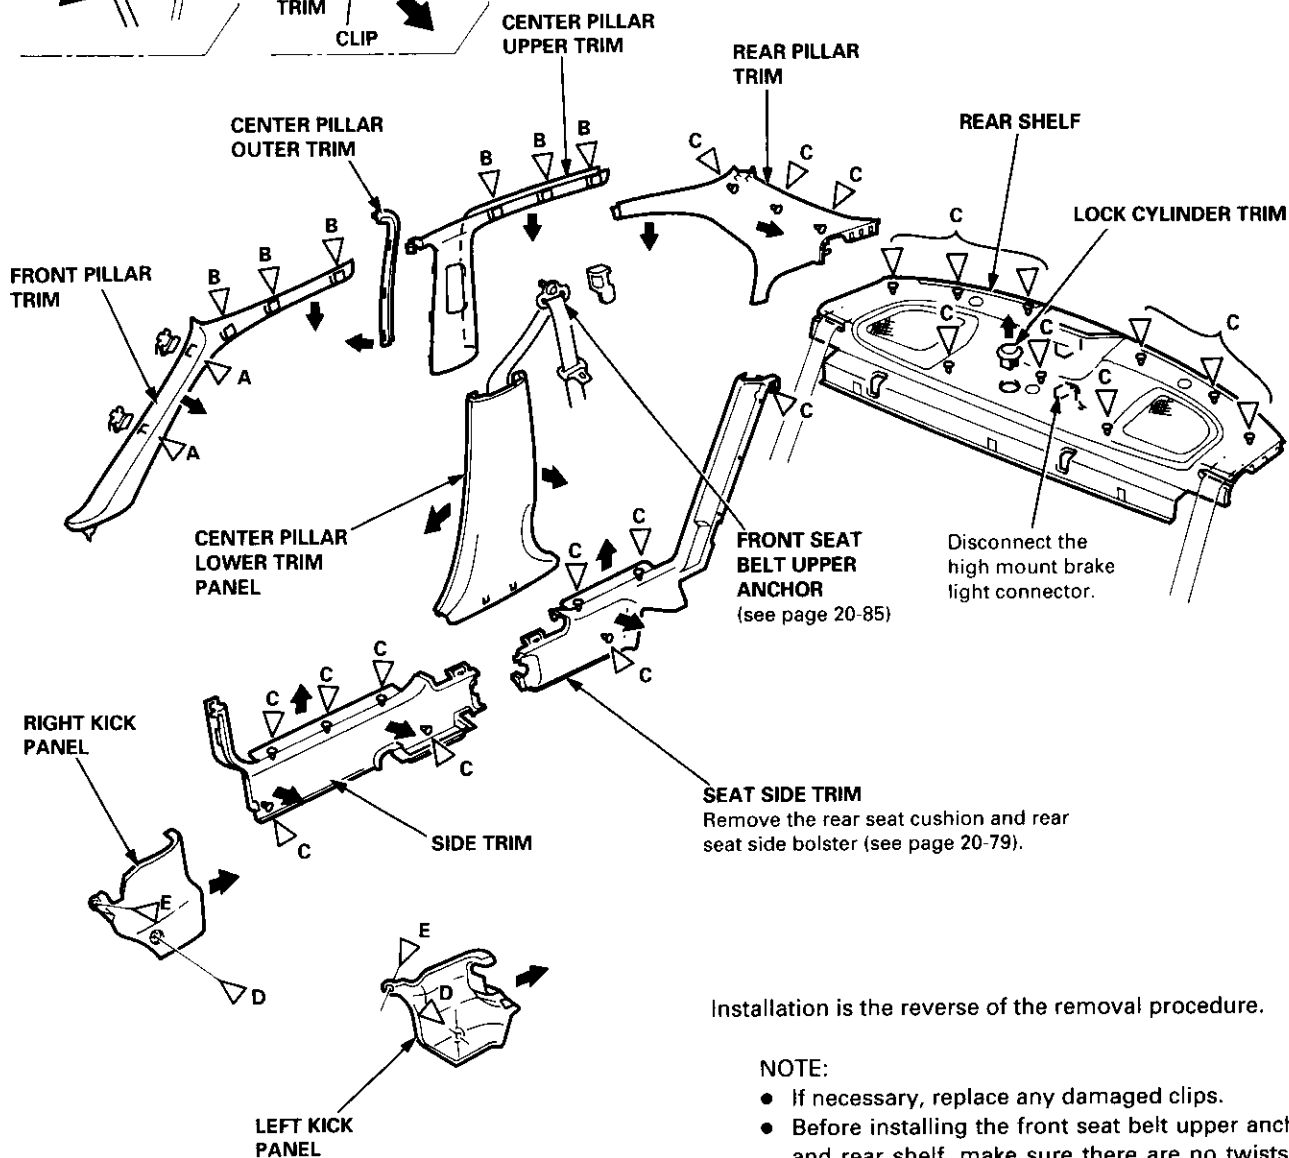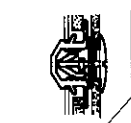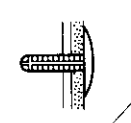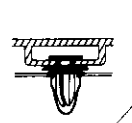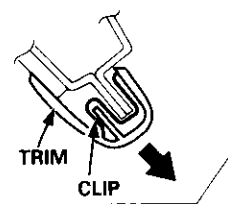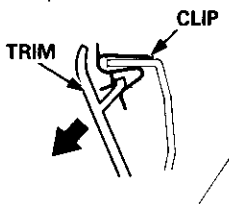

Installation is the reverse of the removal procedure.

NOTE:


- If necessary, replace any damaged clips.
- Before installing the front seat belt upper anchor and rear shelf, make sure there are no twists or kinks in the seat belts.

(cont'd)

Interior Trim

Replacement (cont'd)

3D:

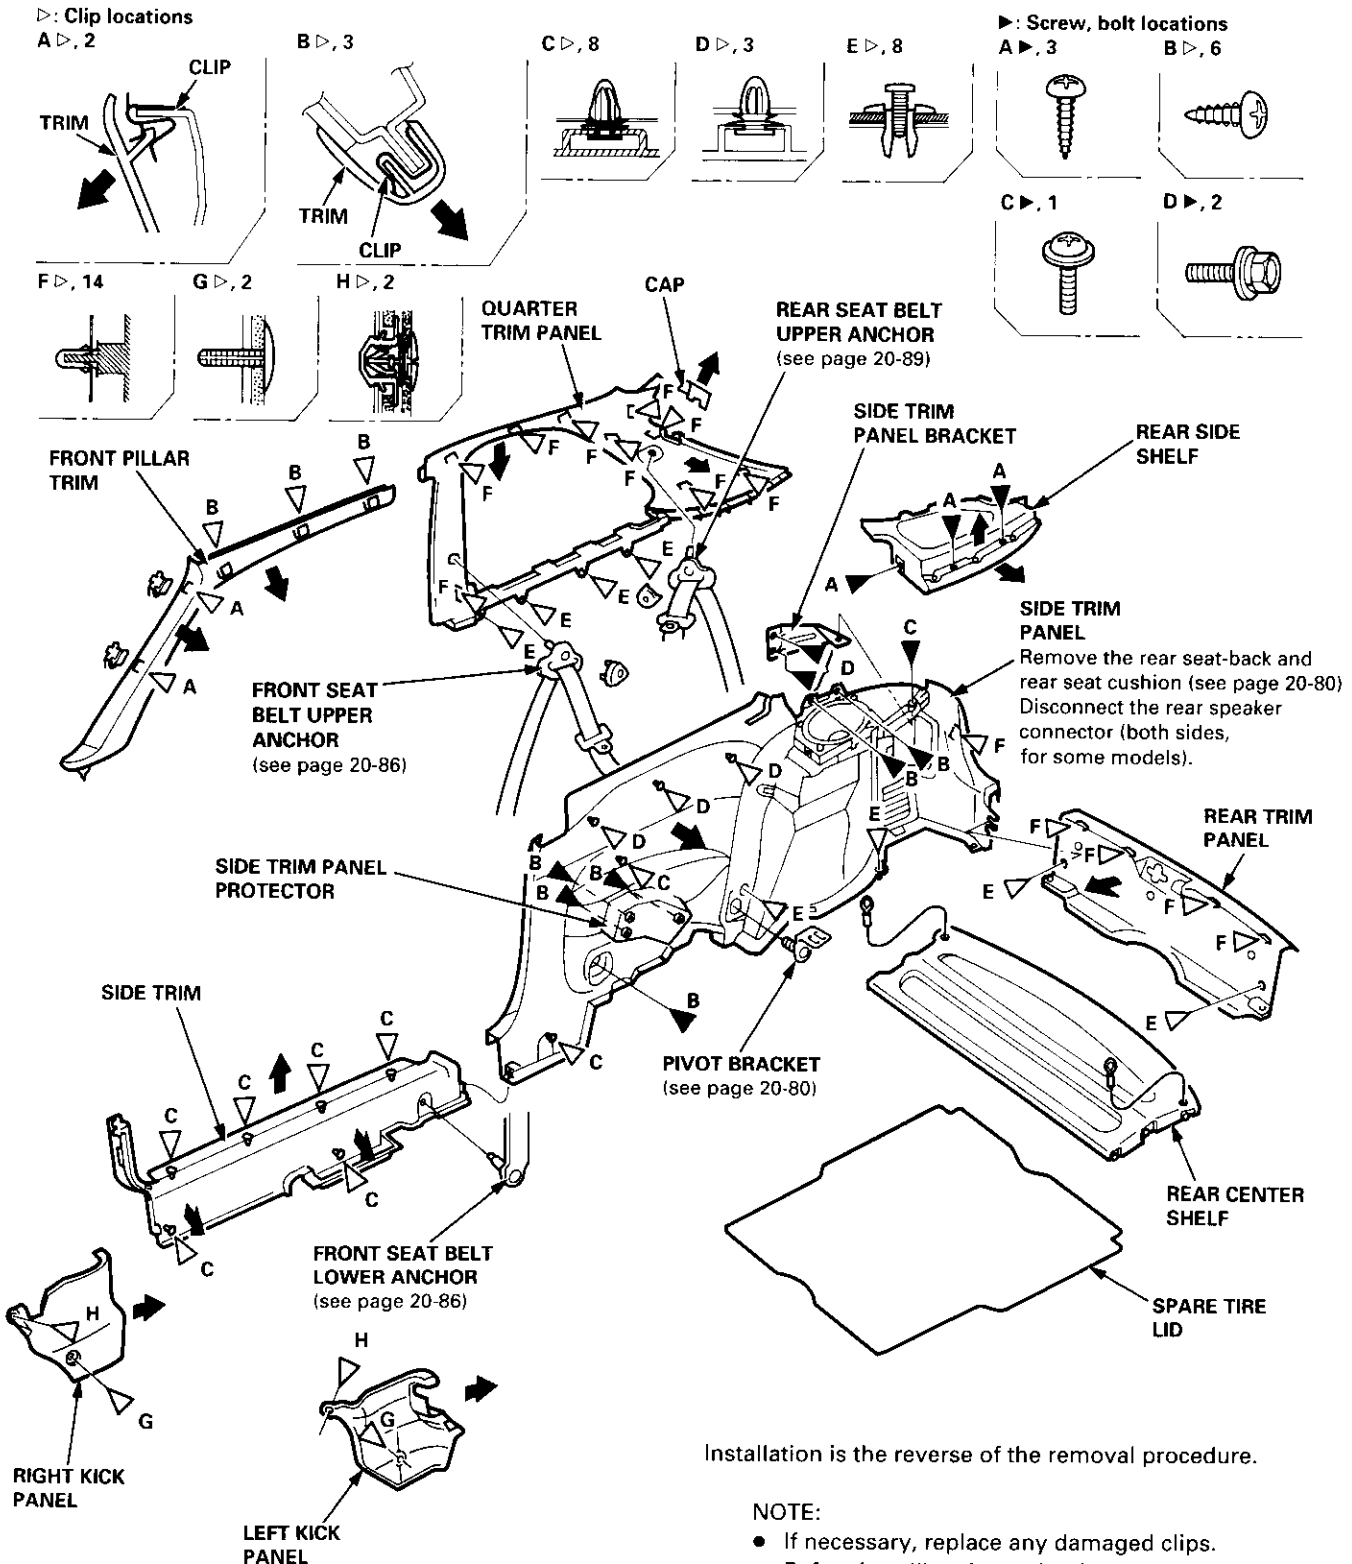

Installation is the reverse of the removal procedure.


NOTE:

- If necessary, replace any damaged clips.
- Before installing the anchor bolts, make sure there are no twists or kinks in the seat belts.




2D:


▷: Clip locations
A ▷, 2

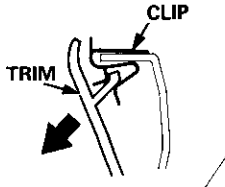


B ▷, 3

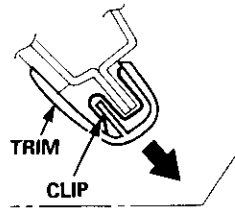

C ▷, 14




D ▷, 3




E ▷, 2




▶: Screw locations, 4





F ▷, 8



G ▷, 4



H ▷, 2

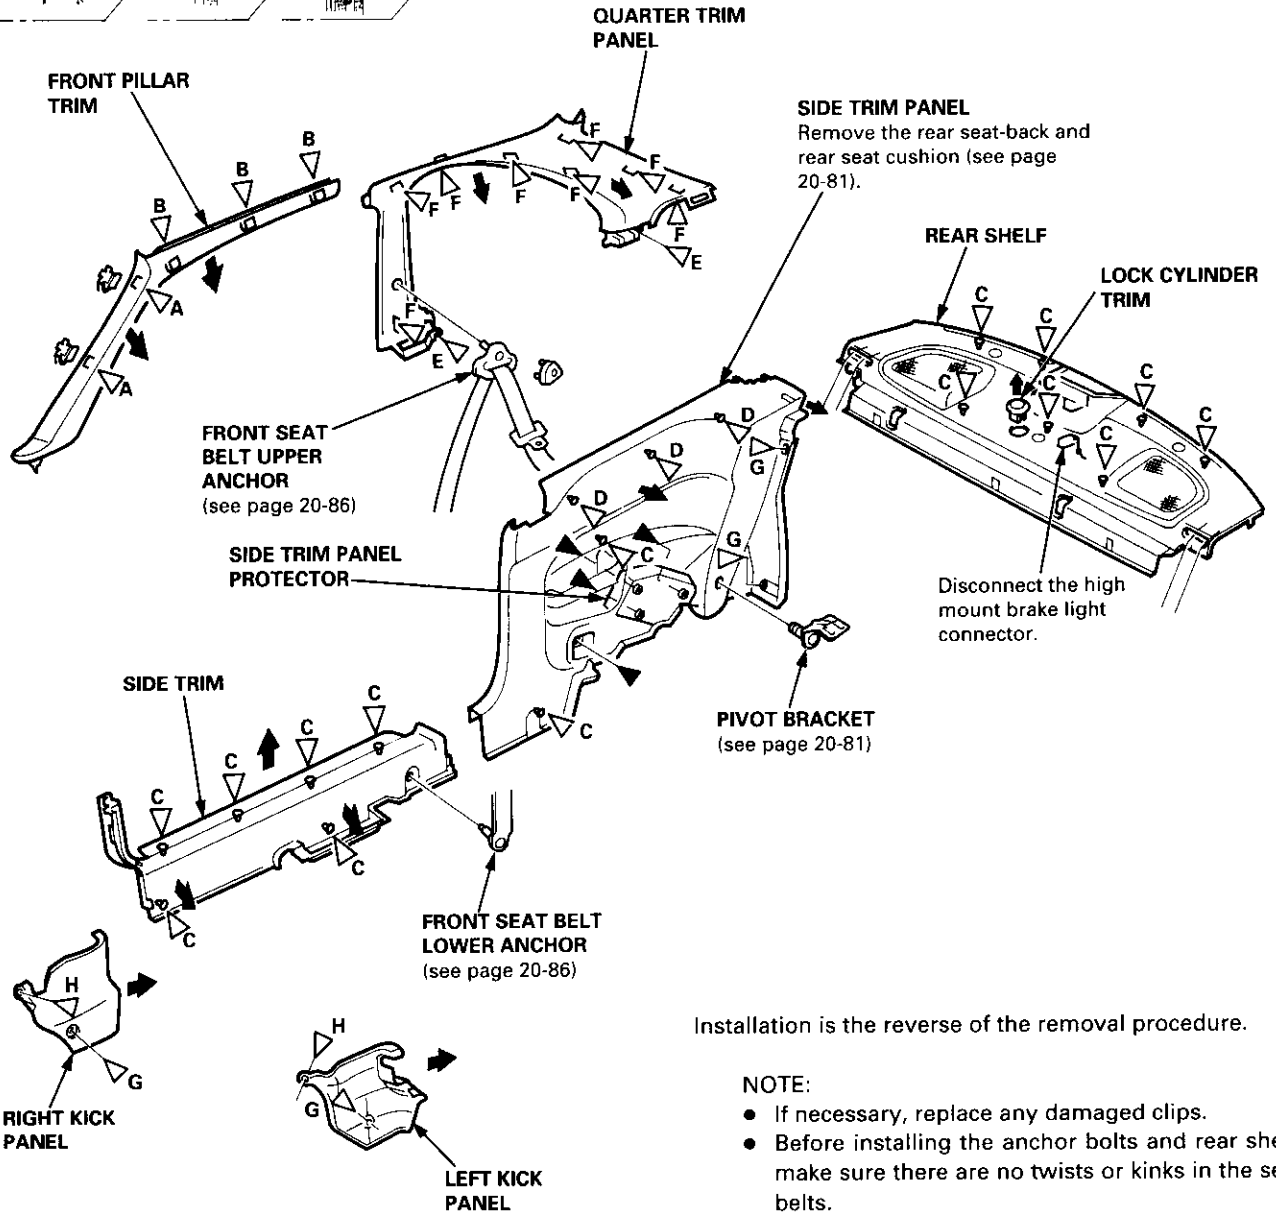

Installation is the reverse of the removal procedure.

NOTE:

- If necessary, replace any damaged clips.
- Before installing the anchor bolts and rear shelf, make sure there are no twists or kinks in the seat belts.

Trunk Trim

Replacement


CAUTION:

- Wear gloves to remove and install the trim and panels.
- When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

NOTE:

- Take care not to bend or scratch the trim and panels.
- When removing the trunk side trim or trunk trim panel, fold the seat-back forward.


Japan-produced:

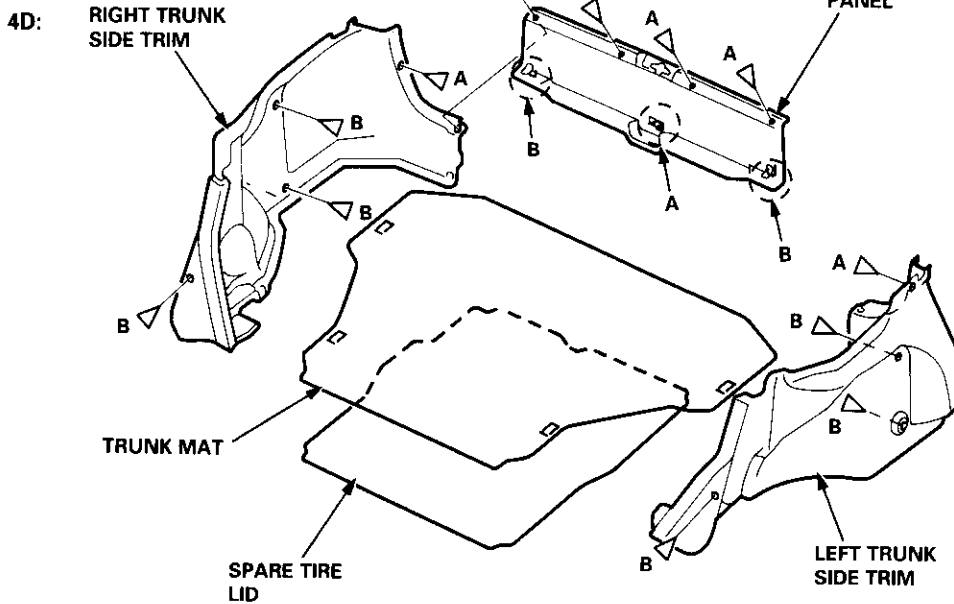


▷: Clip locations

A ▷, 6

NOTE: Do not push the inner clip in too far.

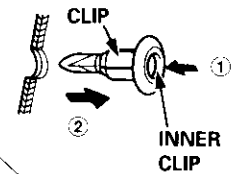


B ▷, 6

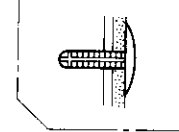


○: Hook locations



A ○, 1

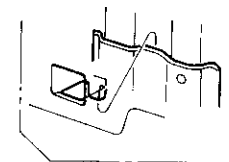

B ○, 2

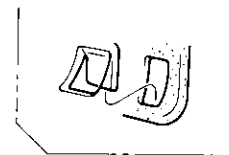

USA-produced:

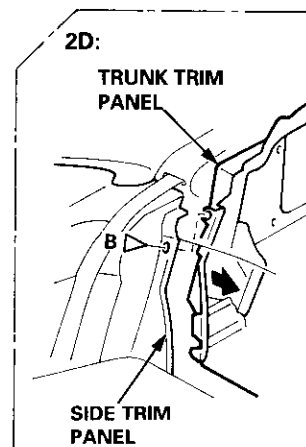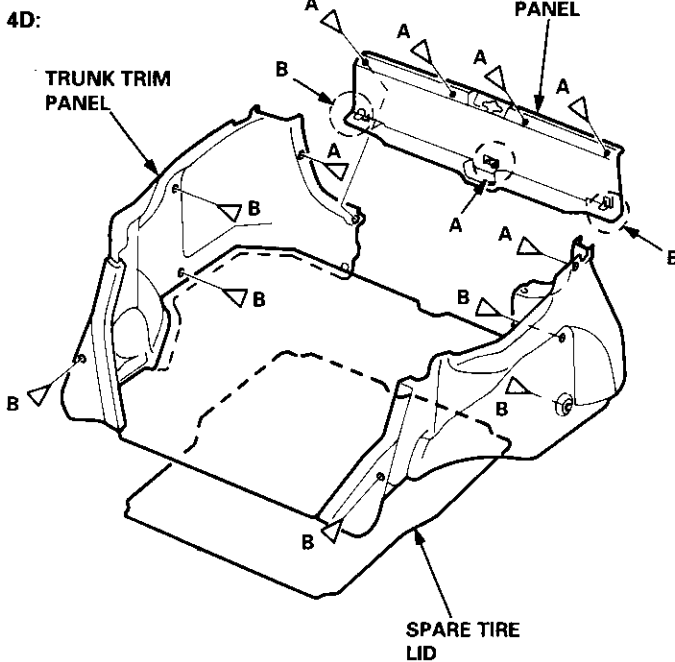

Installation is the reverse of the removal procedure.

NOTE:

- If necessary, replace any damaged clips.
- To install the A clips, pull the inner clip up, install the clip, then push the inner clip until it's flush.



Hatch Trim

Replacement

CAUTION:


- Wear gloves to remove and install the trim.
- When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

NOTE: Take care not to bend or scratch the trim and panel.


▷: Clip locations

A ▷, 2


NOTE: Do not push the inner clip in too far.

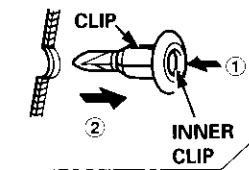

B ▷, 7



C ▷, 13

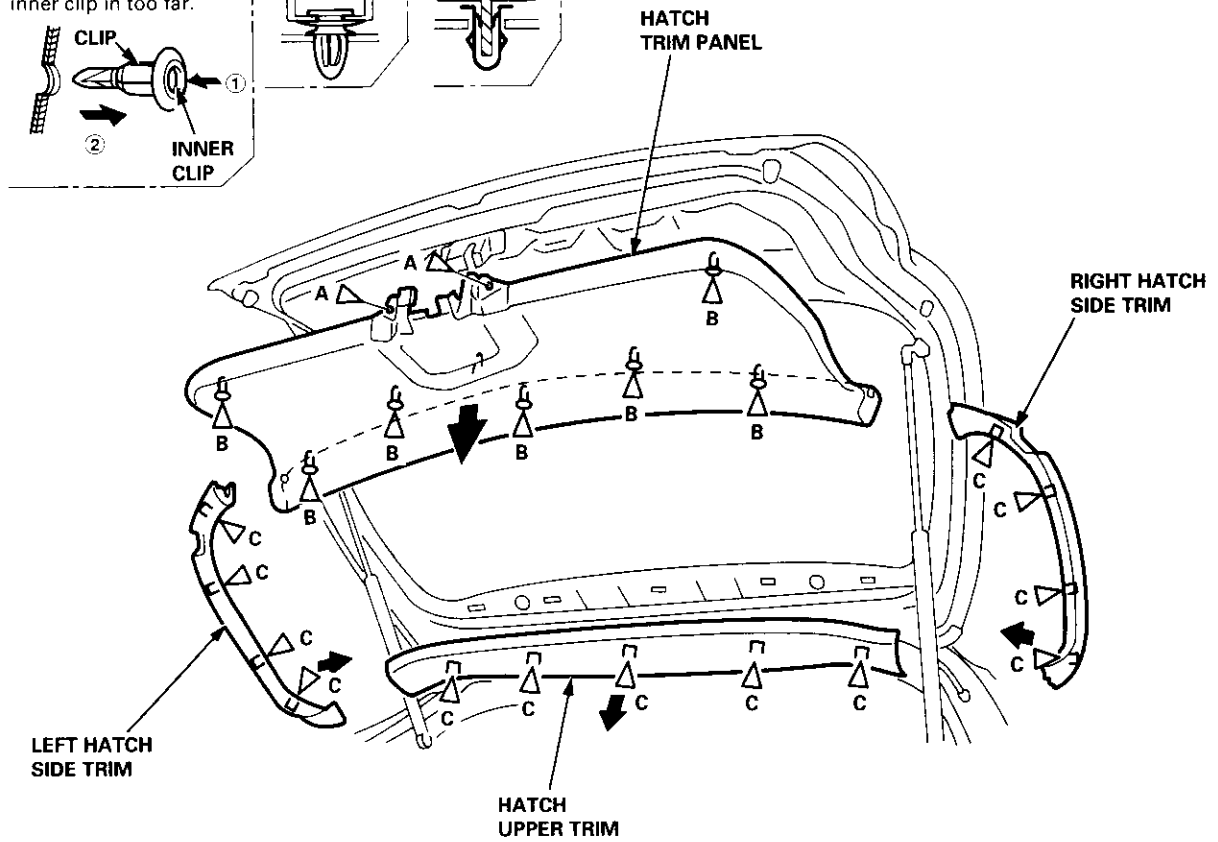

Installation is the reverse of the removal procedure.

NOTE:

- If necessary, replace any damaged clips.
- To install the A clips, pull the inner clip up, install the clip, then push the inner clip until it's flush.

Headliner

Replacement

CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

NOTE:

- Take care not to bend and scratch the headliner.
- Be careful not to damage the dashboard and other interior trim.

1. Remove:

4D:

- Front pillar trim (both sides, see page 20-59)
- Center pillar lower trim panel (both sides, see page 20-59)
- Upper anchor bolt from the front seat belt (both sides, see page 20-85)
- Center pillar outer trim and center pillar upper trim (both sides, see page 20-59)
- Ceiling light (see section 23)
- Rearview mirror (see page 20-25)


3D:

- Front pillar trim (both sides, see page 20-60)
- Right rear seat-back and rear seat cushion (see page 20-80)
- Rear center shelf (see page 20-60)
- Rear side shelf and side trim panel (right side, see page 20-60)
- Upper anchor bolts from the front and rear seat belts (right side, see pages 20-86, 89)
- Quarter trim panel (right side, see page 20-60)
- Ceiling light (see section 23)
- Rearview mirror (see page 20-25)



2D:

- Front pillar trim (both sides, see page 20-61)
- Right rear seat-back and rear seat cushion (see page 20-81)
- Side trim panel (right side, see page 20-61)
- Upper anchor bolt from the front seat belt (right side, see page 20-86)
- Quarter trim panel (right side, see page 20-61)
- Ceiling light (see section 23)
- Rearview mirror (see page 20-25)

2. Remove the sunvisor and holder from each side.

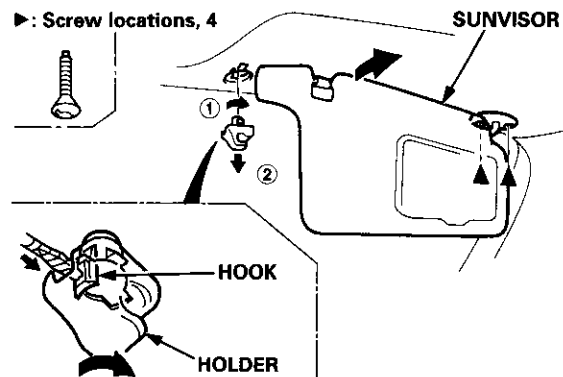

3. Remove the grab handles and coat hanger.

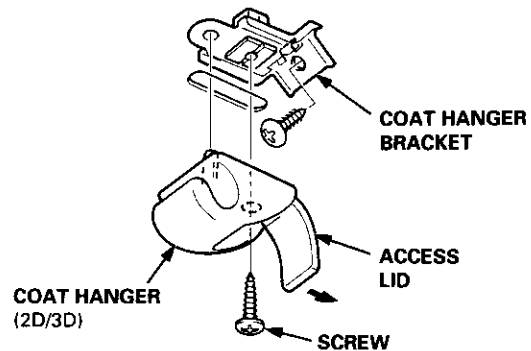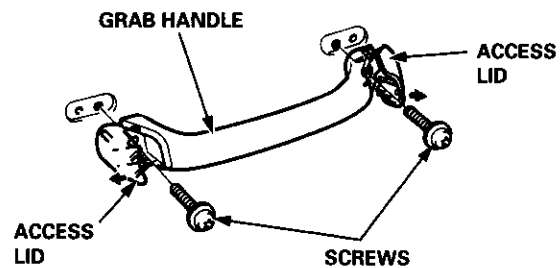



4. Remove the rear roof trim and clips, and remove the roof trim and socket plug (moonroof model).


▷: Clip locations

A ▷ 2D/4D, 7
3D, 5


B ▷ With moonroof, 1
Without moonroof, 3




2D/3D/4D:

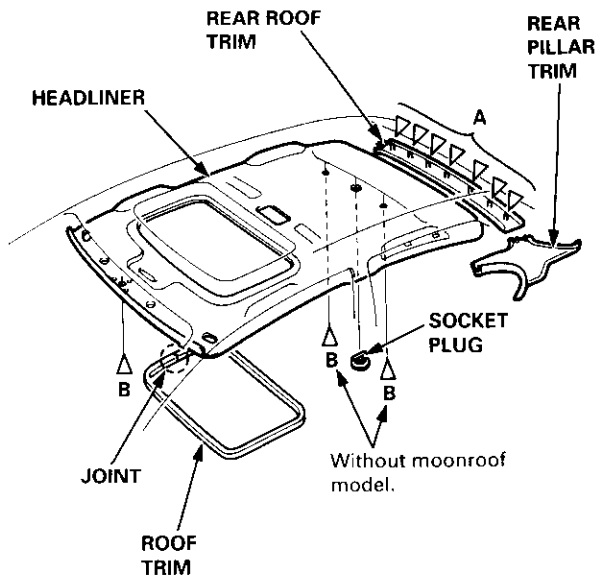

3D:

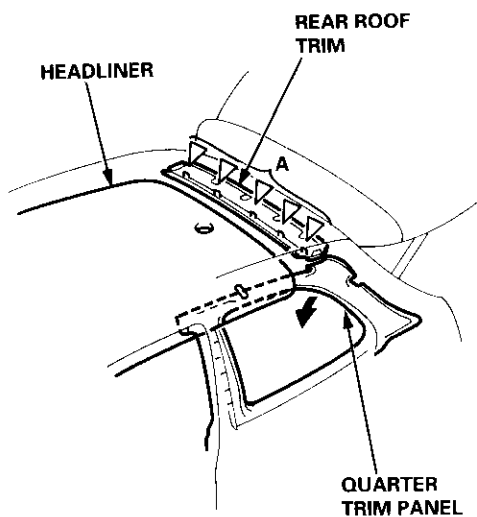

2D:

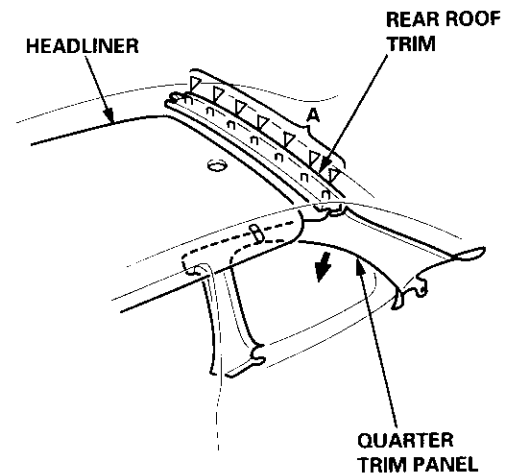

5. 4D: Lower the rear pillar trim on both sides.
3D: Remove the upper anchor bolts from the front and rear seat belts (see pages 20-86, 89), then lower the quarter trim panel on left side.
2D: Remove the upper anchor bolt from the front seat belt (see page 20-86), then lower the quarter trim panel on left side.
6. Lower the headliner.
7. Carefully remove the headliner through the passenger's door opening (2D/4D) or hatch opening (3D).
8. Installation is the reverse of the removal procedure.

NOTE:

- When inserting the headliner through the opening, be careful not to fold or bend it. Also, be careful not to scratch the body.
- Check that both sides of the headliner are securely attached to the trim.
- When installing the roof trim, install the joint toward the right side (moonroof model).


Carpet

Replacement

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

1. Remove:
 - Front seat (see page 20-74)
 - Rear seat cushion (see pages 20-79, 80, 81)
 - Kick panel (see pages 20-59, 60, 61)
 - Center pillar lower trim panel (4D, see page 20-59)
 - Front seat belt lower anchor (2D/3D, see page 20-86)
 - Side trim (see pages 20-59, 60, 61)
 - Front and rear consoles
 - Console panel
2. Remove the SRS unit covers.
3. Cut areas **A** and **B** in the carpet, then pull it back as shown.

▷: Clip locations, 2

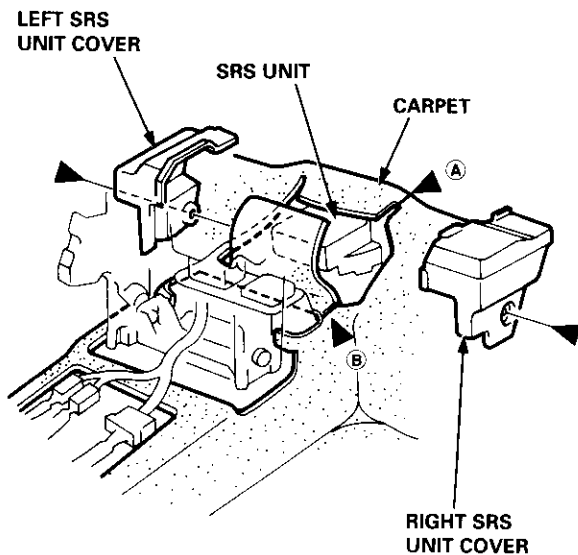

4. Remove the footrest and parking brake lever mounting bolts, and detach the clips, then remove the carpet.

▷: Clip locations, 3


▷: Bolt locations

A ▷, 2 B ▷, 2




6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

2D/3D/4D:

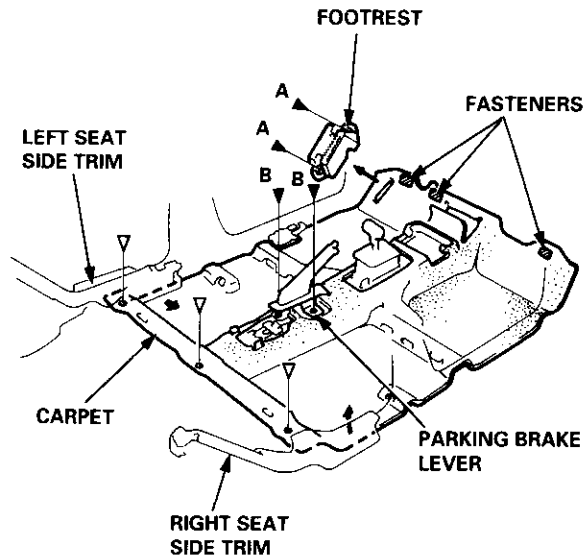

2D/3D:

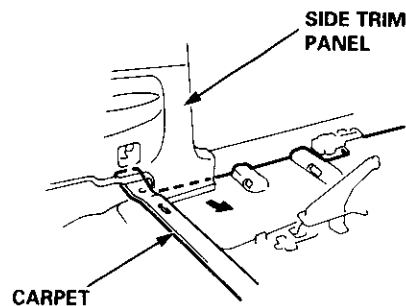

5. Installation is the reverse of the removal procedure.

NOTE:

- Take care not to damage, wrinkle or twist the carpet.
- Make sure the wire harnesses are routed correctly.
- If necessary, replace any damaged clips.
- Slip the carpet under the seat side trim (4D) or side trim panel (2D/3D) on each side properly.
- Reattach the cut areas **A** and **B** in the carpet with wire ties.



Consoles/Console Panel

Replacement

NOTE: Take care not to scratch the front and rear consoles, front seat and related parts.

Disassemble in numbered sequence.

►: Screw locations




A ►, 8

B ►, 4

▷: Clip locations

A ▷, 2

B ▷, 2

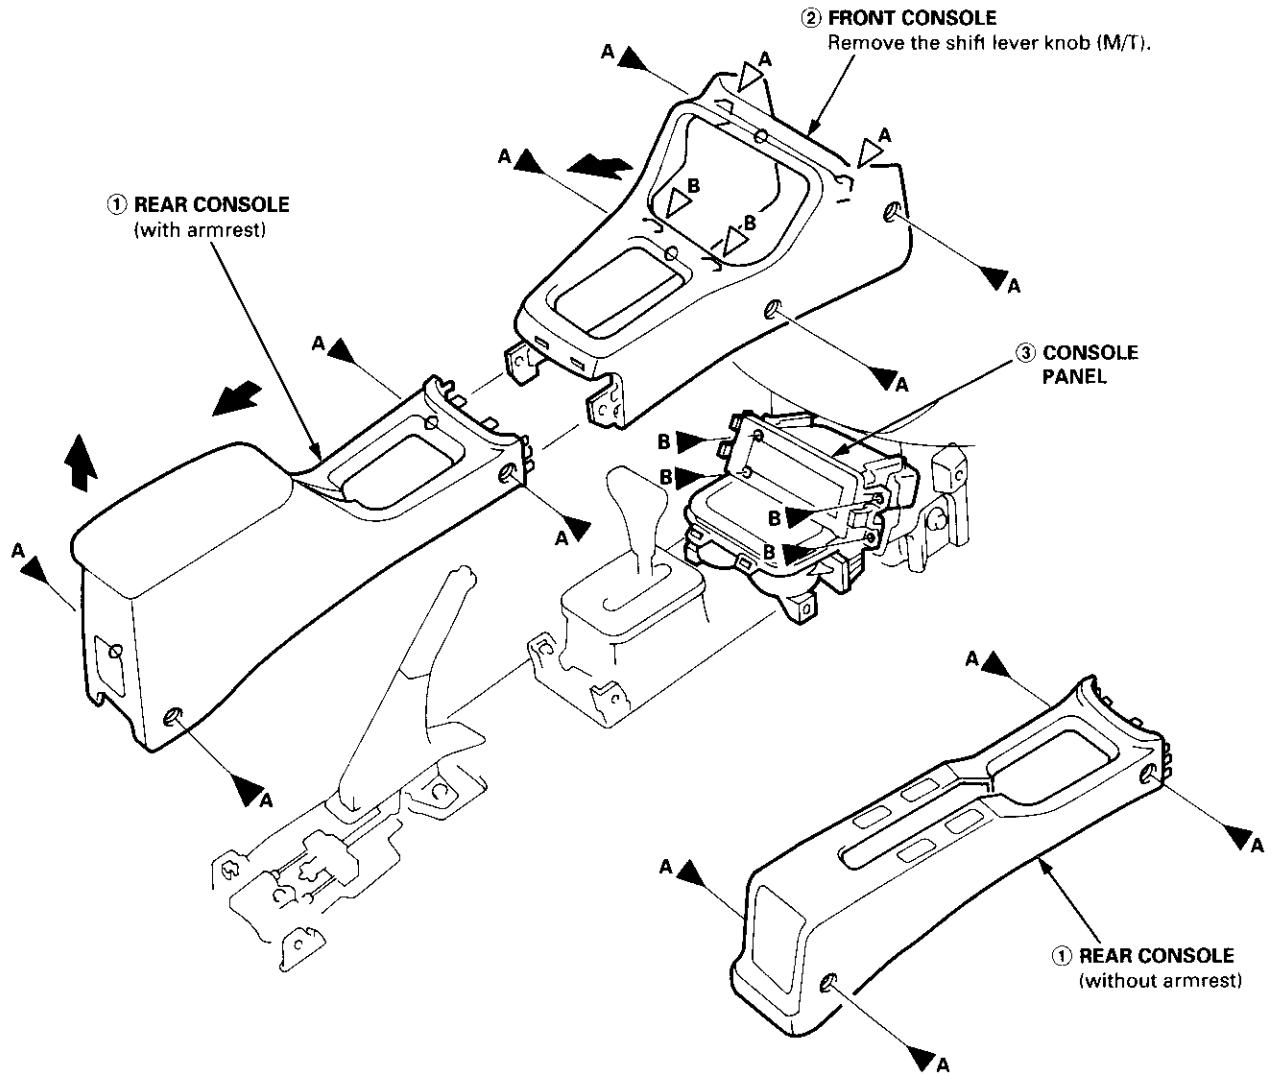

Installation is the reverse of the removal procedure.

NOTE:

- If necessary, replace any damaged clips.
- Make sure the wire harnesses are not pinched.
- Make sure the connector is connected properly.

Dashboard

Component Removal/Installation

CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.

NOTE: Take care not to scratch the dashboard and related parts.



Instrument panel removal:

1. Lower the steering column.
2. Remove the screws, and detach the clips, then carefully remove the instrument panel.

►: Screw locations, 2



▷: Clip locations, 2

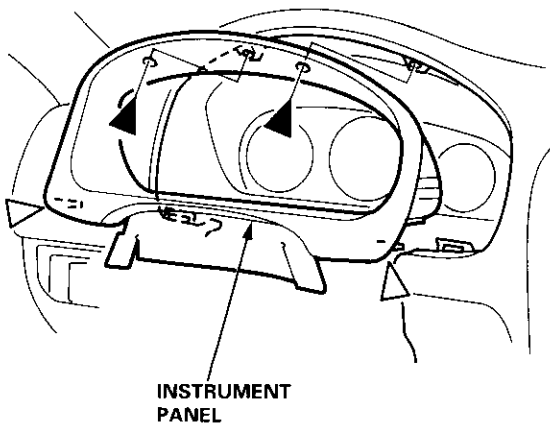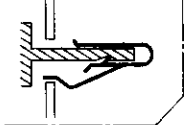

3. Installation is the reverse of the removal procedure.

Driver's dashboard lower cover and knee bolster removal:

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

1. Remove the screws, and detach the clips, then remove the driver's dashboard lower cover. If equipped with power mirrors and moonroof, disconnect the connectors.

►: Screw, bolt locations

A ►, 3

B ►, 2






6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

▷: Clip locations

A ►, 2

B ►, 1

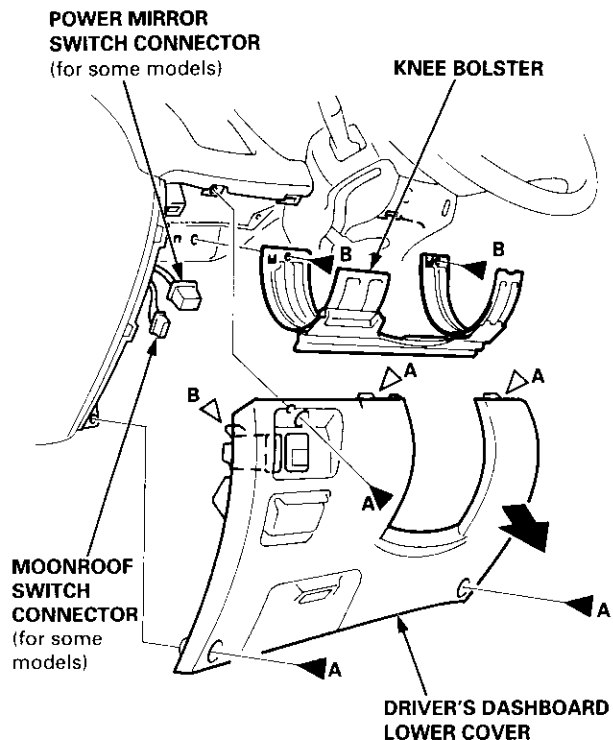



2. Remove the bolts, then remove the knee bolster.
3. Installation is the reverse of the removal procedure.



Glove box removal:

Remove the bolts, then remove the glove box.

►: Bolt locations, 2

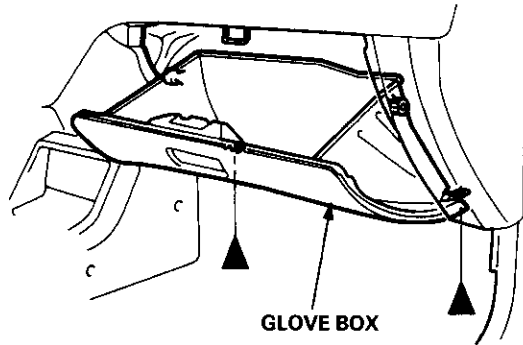


Installation is the reverse of the removal procedure.

Side air vent/Side defogger trim removal:


SIDE DEFOGGER TRIM

Carefully pry it at the side edge, then remove it.

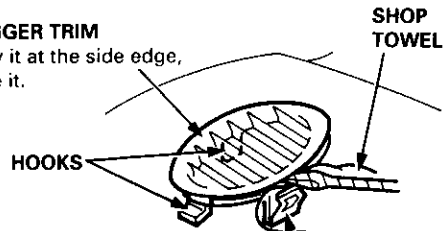

SIDE AIR VENT

Remove the driver's dashboard lower cover, or open the glove box, then push the clips from each opening by hand, and pull it out. Disconnect the connectors (driver's side).

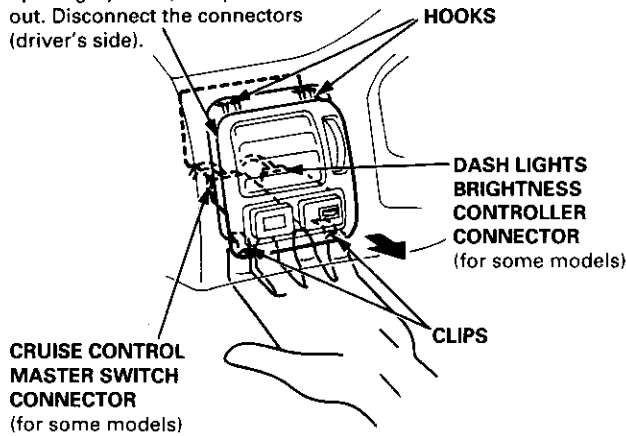


Center dashboard lower cover:


1. Remove:
 - Driver's dashboard lower cover
 - Glove box
2. Remove the screws and bolt, then remove the center dashboard lower cover. Disconnect the accessory socket connector.

►: Bolt, screw locations

A ►, 1



B ►, 5

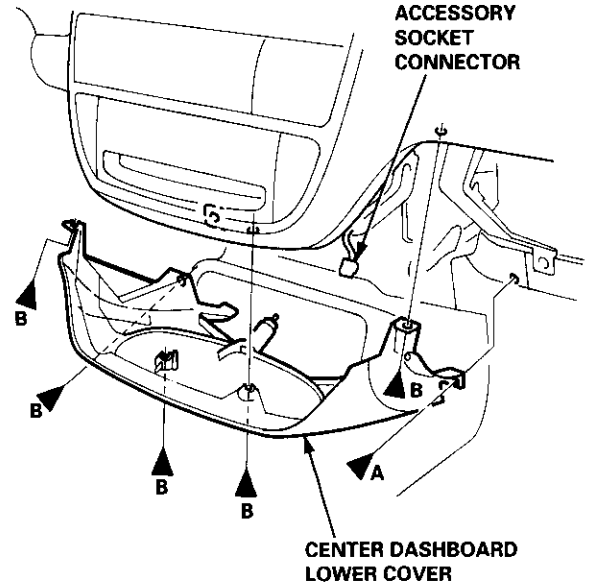

3. Installation is the reverse of the removal procedure.

(cont'd)

Dashboard

Component Removal/Installation (cont'd)

Center panel removal:


1. Remove:
 - Center dashboard lower cover (see page 20-69)
 - Radio (see section 23)
2. Remove the rear window defogger switch and hazard warning switch, then disconnect the connectors.

►: Screw locations, 5

▷: Clip locations

A ▷, 4

B ▷, 3

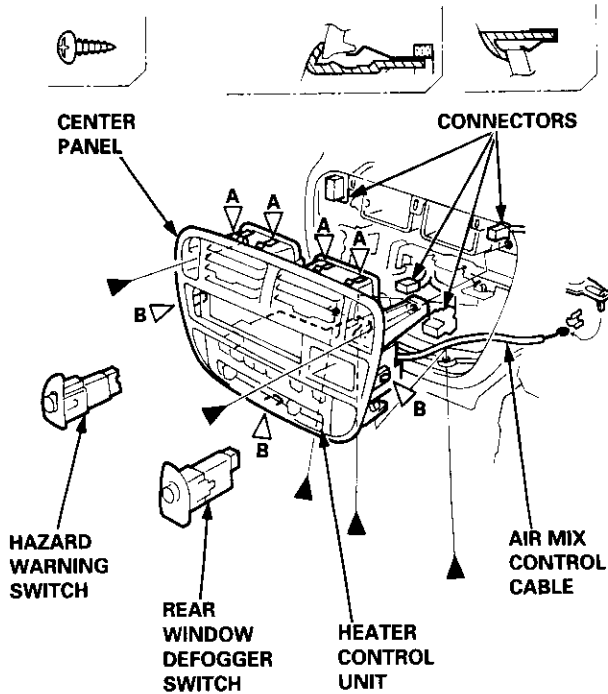

3. Disconnect the air mix control cable, and remove the screws, then pull out the center panel.
4. Disconnect the connectors from the heater control unit.
5. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the connectors are connected properly.
- Adjust the air mix control cable (see section 21).

Removal

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

NOTE:


- An assistant is helpful when removing and installing the dashboard.
- Take care not to scratch the dashboard, body and related parts.

1. Remove:
 - Front and rear consoles (see page 20-67)
 - Console panel (see page 20-67)
 - Driver's dashboard lower cover and knee bolster (see page 20-68)
 - Glove box (see page 20-69)
 - Center dashboard lower cover (see page 20-69)
2. Lower the steering column (see section 17).

▲ WARNING To avoid accidental deployment and possible injury, always disconnect the driver's airbag connector before lowering the steering column (see section 24).

NOTE: To prevent damage to the steering column, wrap it with a shop towel.

3. Disconnect the dashboard wire harness connectors, remove the nuts, then move the under-dash fuse/relay box. Disconnect the antenna lead and moonroof relay connectors.

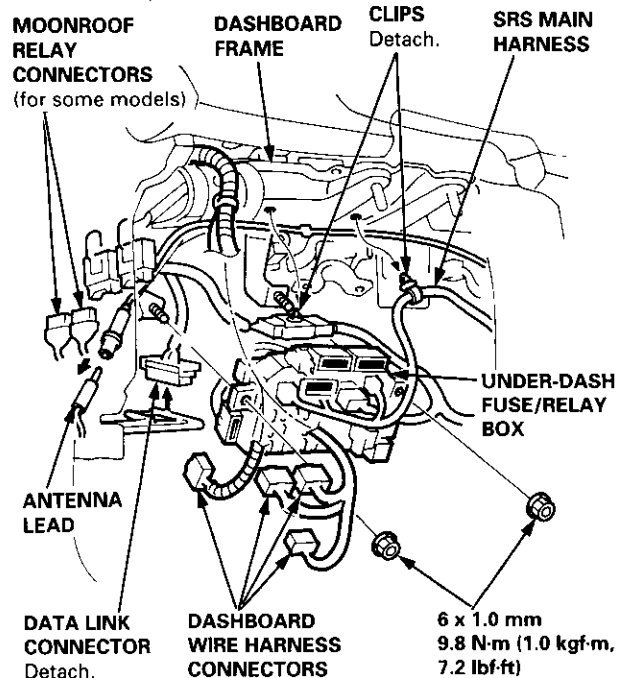




4. Remove the following parts from the dashboard.
 - Driver's dashboard side cover
 - Passenger's dashboard lower cover
 - Dashboard center lid
5. Disconnect the connectors and air mix control cable.


▲ WARNING To avoid accidental deployment and possible injury, always disconnect the front passenger's airbag connector when the SRS main harness is disconnected (see section 24).

▶: Bolt, screw locations


A ▶, 7



B ▶, 1



C ▶, 1



D ▶, 1




▷: Clip locations


A ▷, 1



B ▷, 1



C ▷, 6

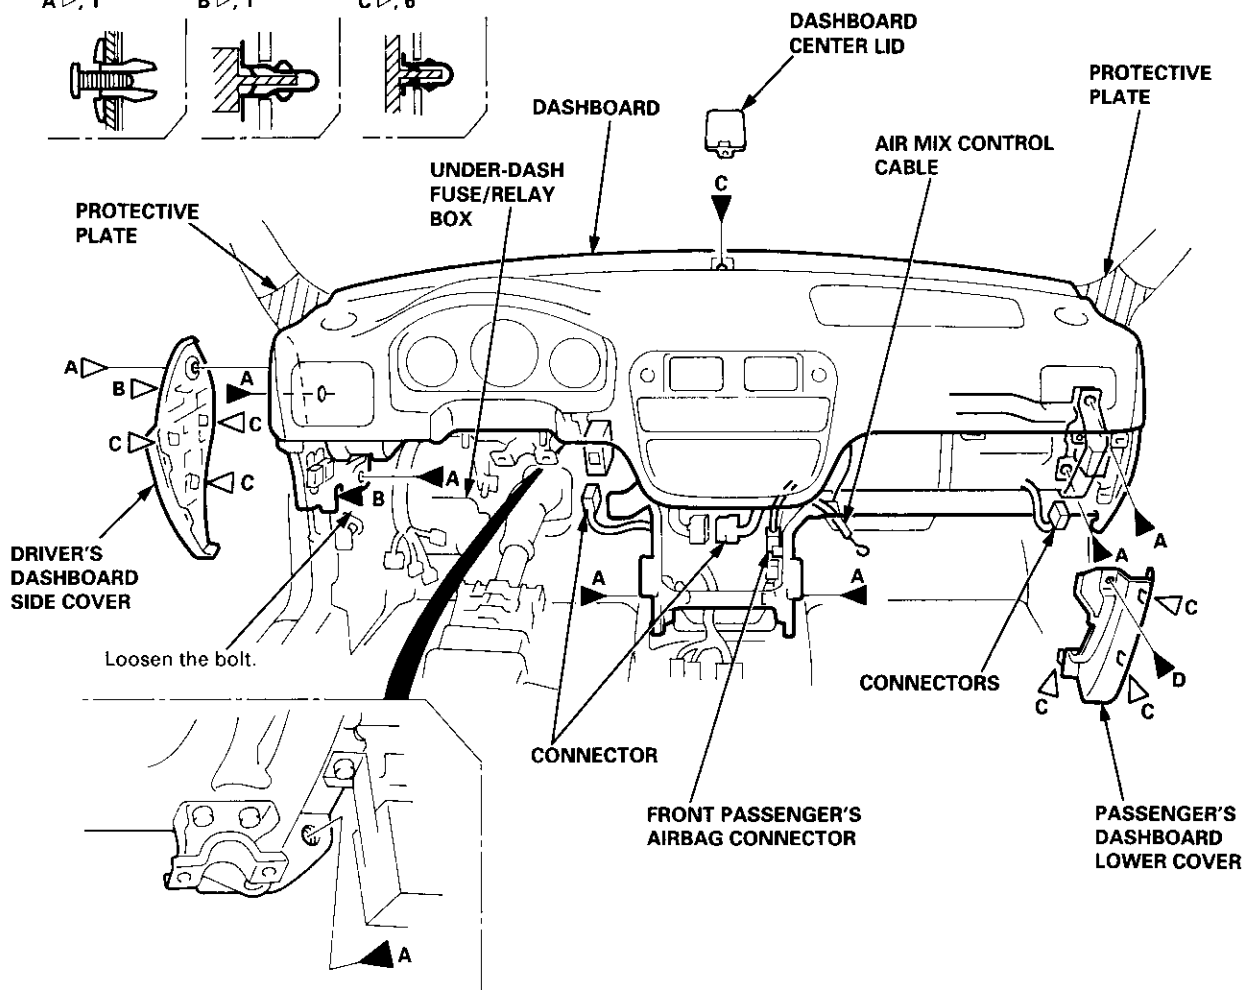

6. Remove the bolts, then lift and remove the dashboard.


CAUTION: Use protective plates on the bottom of the front pillar trim.

(cont'd)

Dashboard

Removal (cont'd)

7. If necessary, remove the dashboard frame from the dashboard.

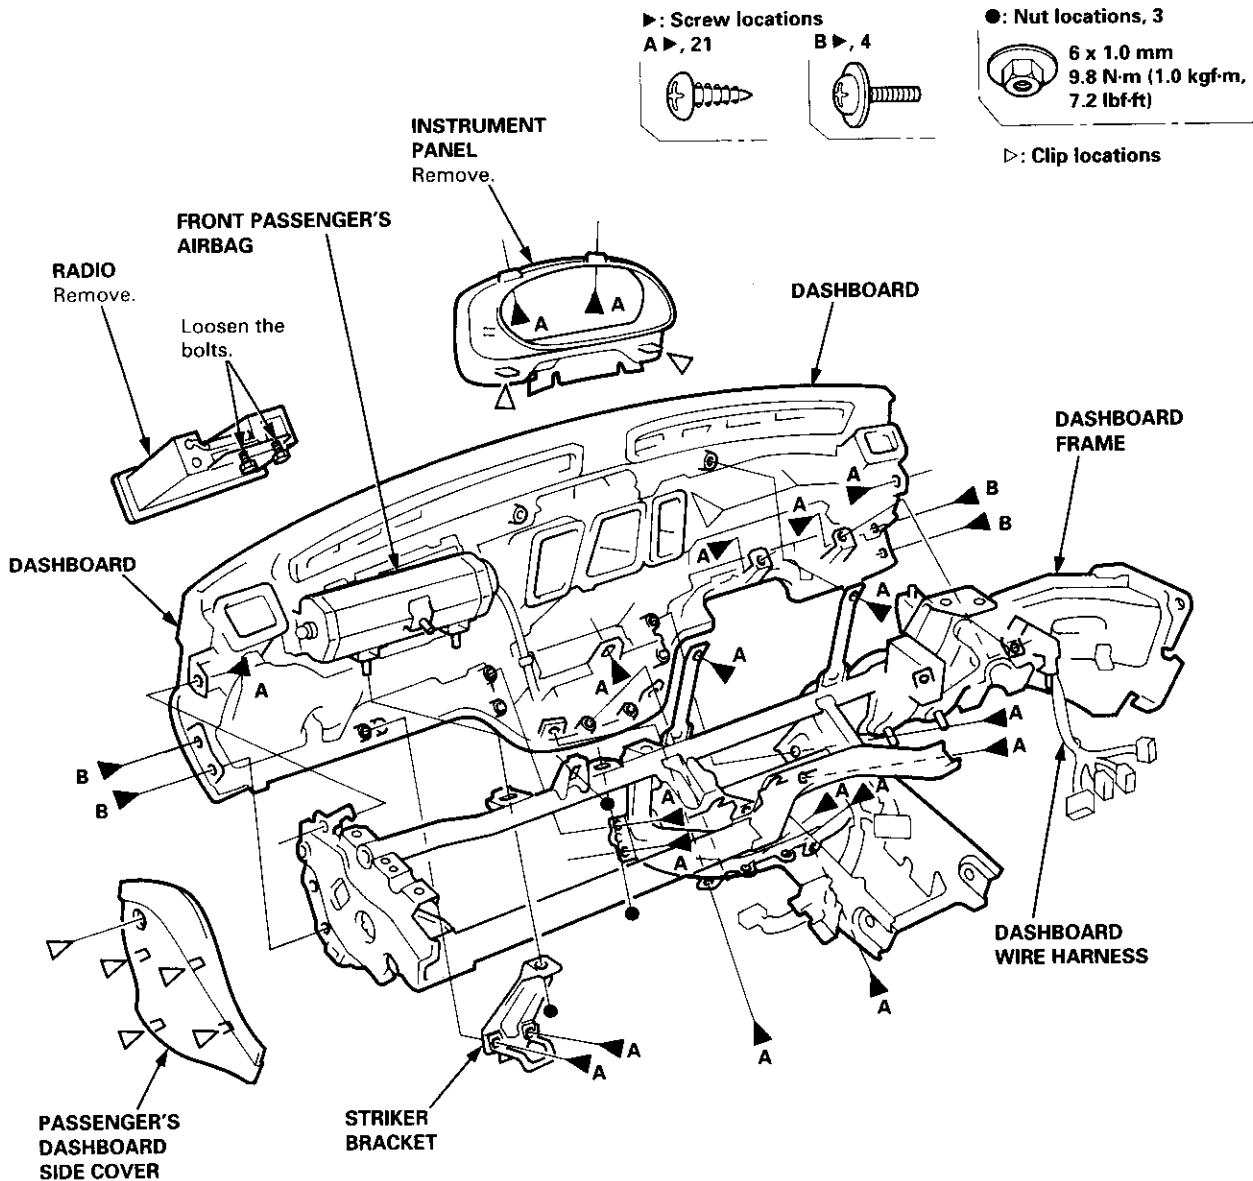

8. Installation is the reverse of the removal procedure.


NOTE:

- Before tightening the bolts, make sure the dashboard wire harnesses are not pinched.
- Make sure the connectors, antenna lead and air mix control cable are connected properly.




Component Location Index

2D/3D/4D:

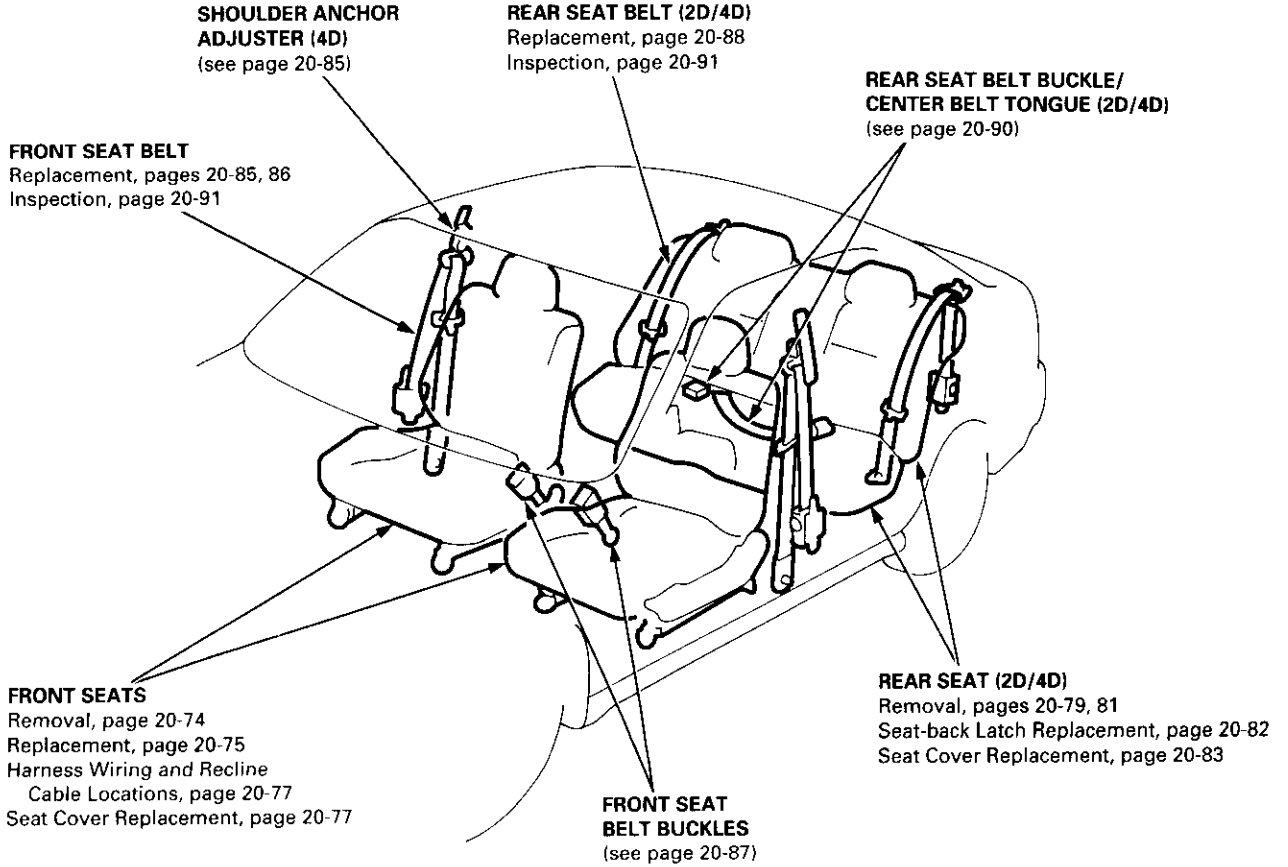

3D:

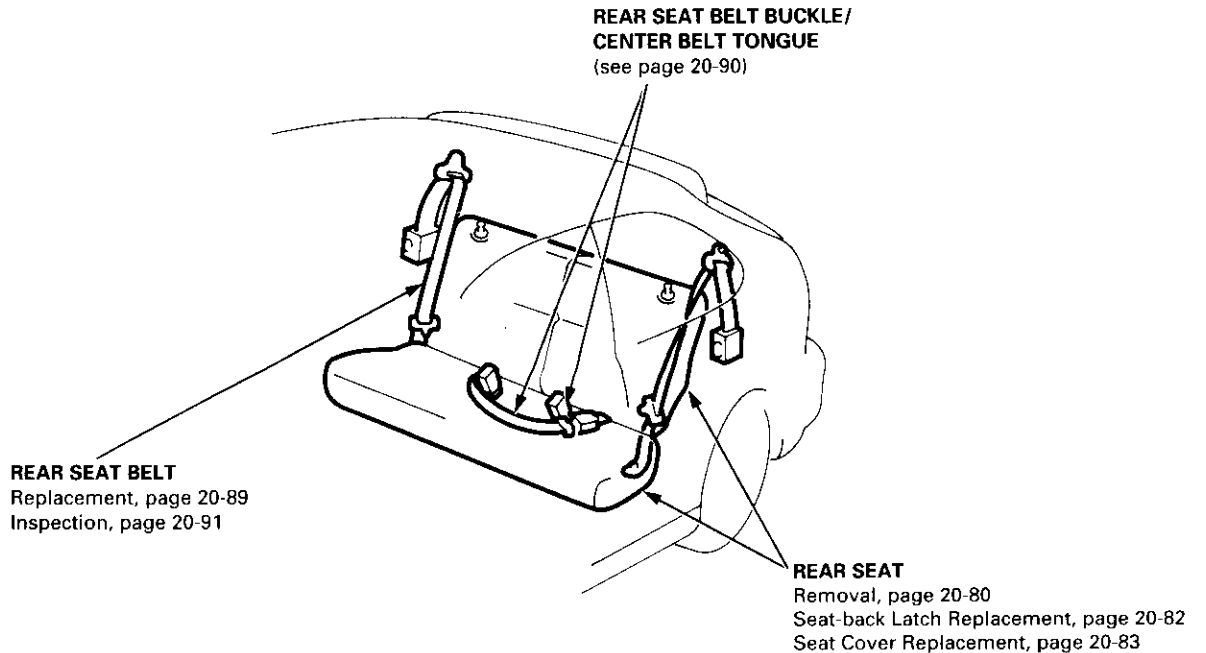



Front Seat

Removal


CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

NOTE: Take care not to scratch the seat covers and body.

1. Remove the seat track end cover, then remove the bolts.

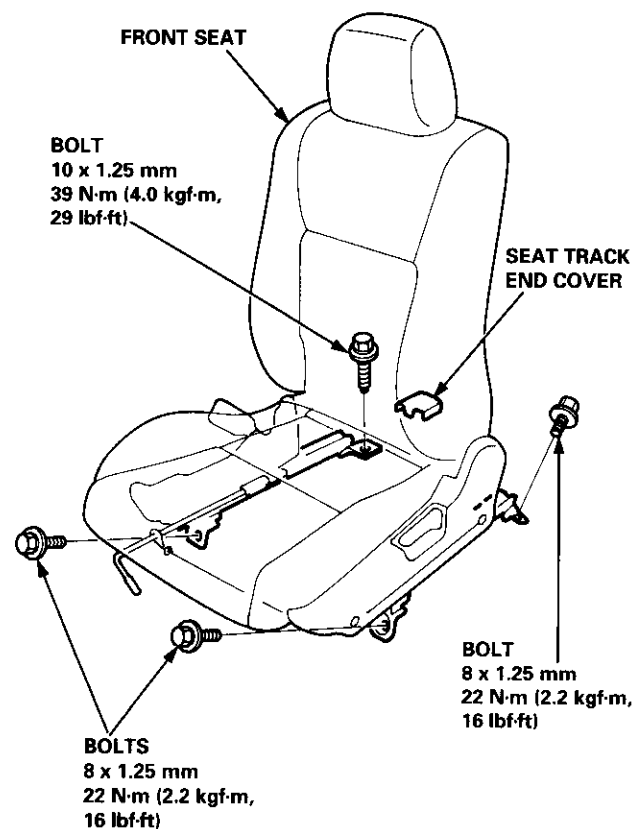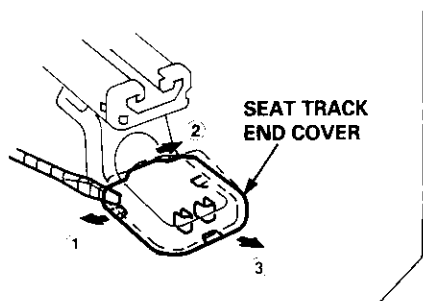

2. Lift the driver's front seat, then disconnect the seat belt switch connector.

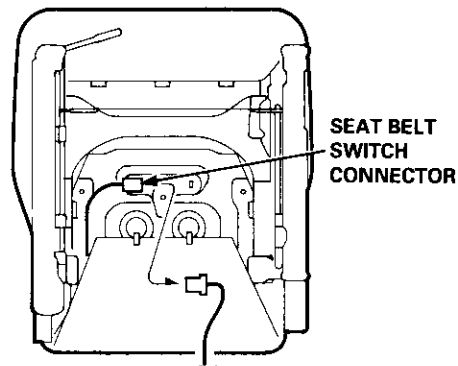

3. Remove the headrest.
4. Carefully remove the front seat through the door opening.
5. Installation is the reverse of the removal procedure.

NOTE: Make sure the connector is connected properly.



Replacement


CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

NOTE:

- Take care not to scratch the seat covers and body.
- Remove the front seat through the door opening.

Driver's:

NOTE: Refer to page 20-77 for the seat belt switch harness wiring location.

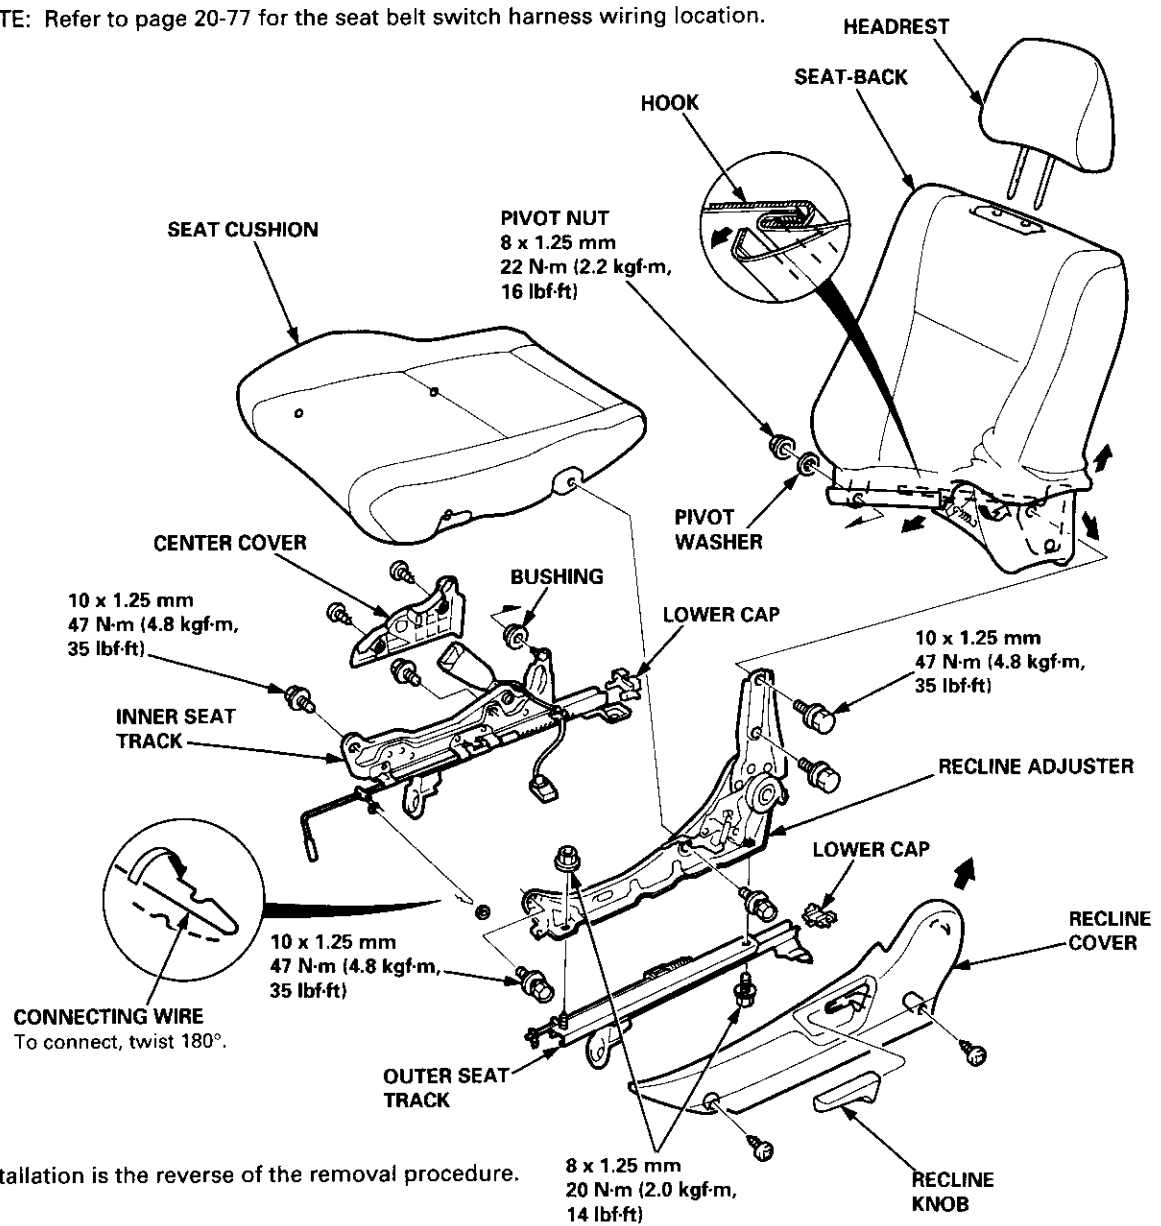

Installation is the reverse of the removal procedure.

NOTE:

- Make sure the bushing and pivot washer are installed properly.
- To prevent wrinkles when installing the seat-back cover, make sure the material is stretched evenly over the pad.
- Grease the sliding portion.


(cont'd)

Front Seat

Replacement (cont'd)

Passenger's (with recline cable):

NOTE: Refer to page 20-77 for the recline cable location.

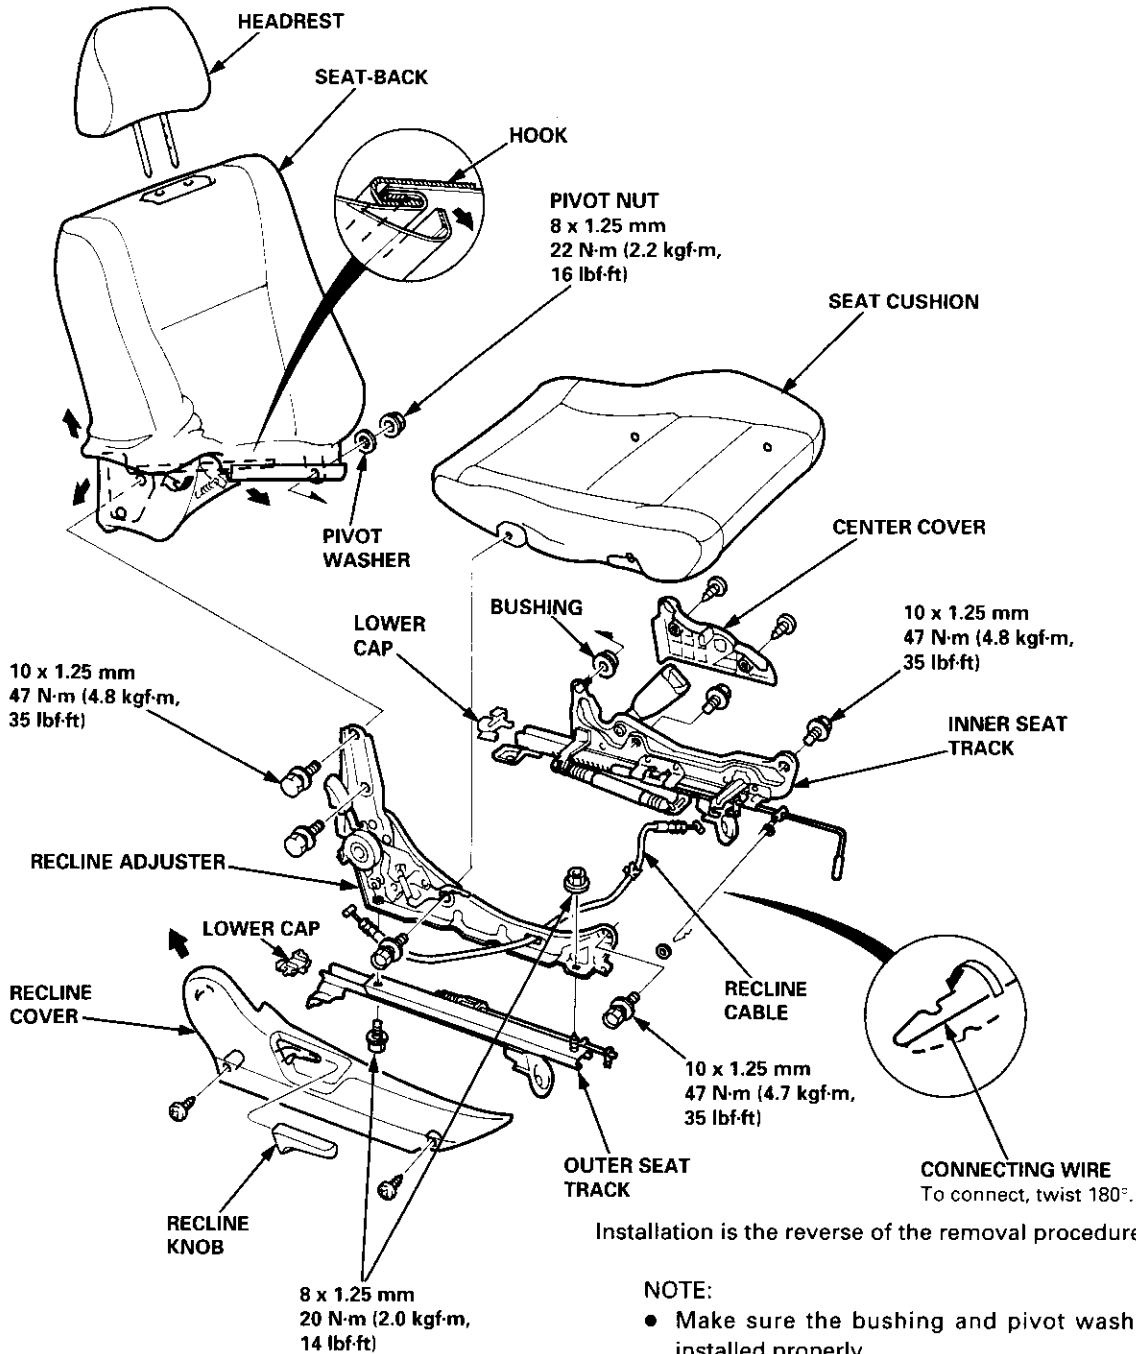




Harness Wiring and Recline Cable Locations


NOTE: When installing the seat cushion, make sure the seat belt switch harness, connector and recline cable are fastened correctly on the seat cushion frame.

Driver's:

▷: Clip locations

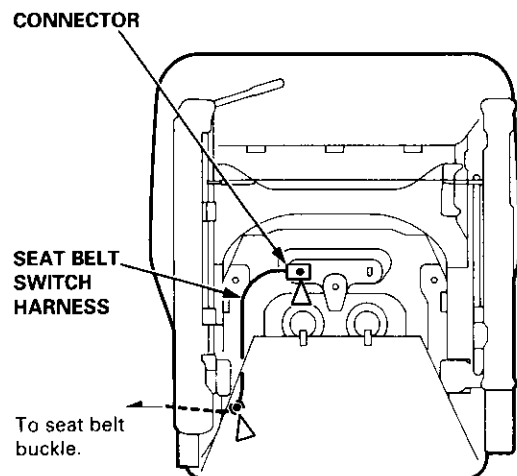

Passenger's (with recline cable):

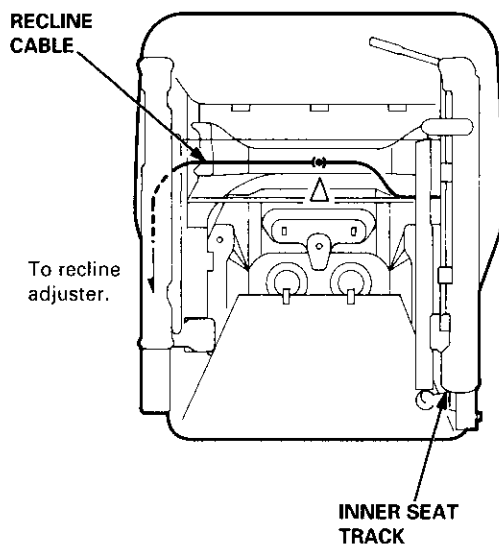


Seat Cover Replacement

CAUTION: Wear gloves to remove and install the seat covers.



NOTE: Take care not to tear the seams or damage the seat covers.

Seat-back cover removal:

1. Release the hook, and fold back the seat-back cover.

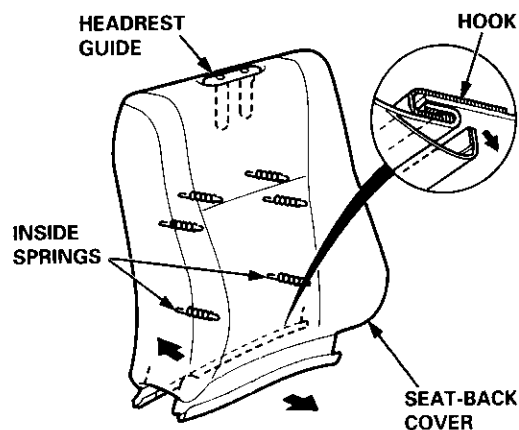

2. Release all inside springs, then fold back the seat-back cover.
3. Remove the headrest.
4. Remove the headrest guide, then remove the seat-back cover.

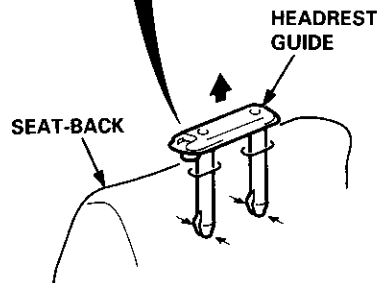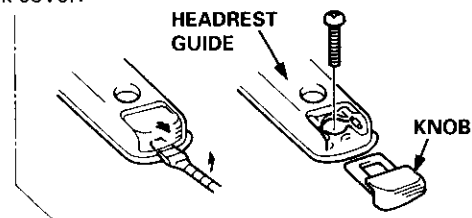

5. Installation is the reverse of the removal procedure.

NOTE: To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the inside springs and hook.

(cont'd)


Front Seat

Seat Cover Replacement (cont'd)

Seat cushion cover removal:


1. Remove the seat cushion (see pages 20-75, 76).
2. Remove the clips from under the seat cushion, then loosen the seat cushion cover.

▷: Clip locations

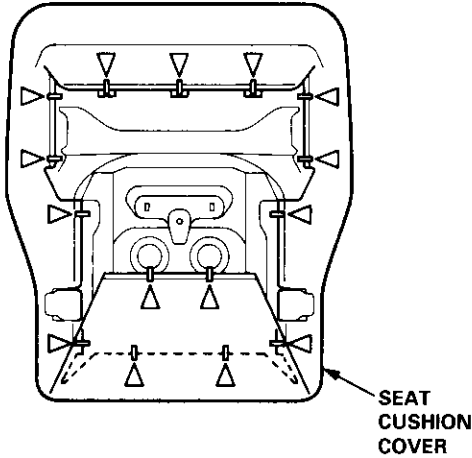

3. Pull back the edge of the seat cushion cover all the way around, then release the clips, and remove the seat cushion cover.


▷: Clip locations

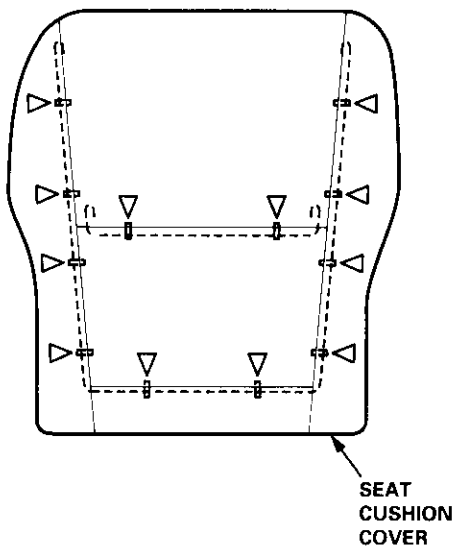

4. Installation is the reverse of the removal procedure.

NOTE:

- To prevent wrinkles when installing a seat cushion cover, make sure the material is stretched evenly over the pad before securing the clips.
- Replace the released clips with new ones.

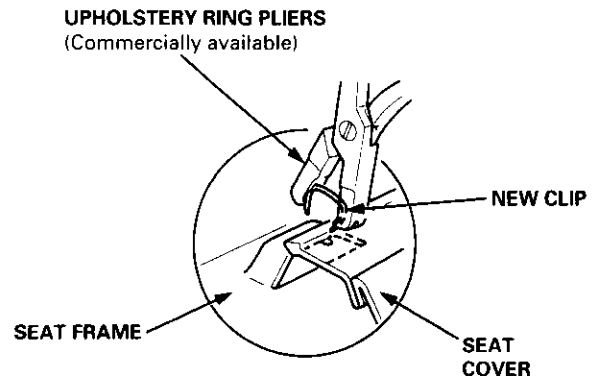

Rear Seat




Removal

NOTE: Take care not to scratch the seat covers and body.


4D:

▶ Bolt locations


A ▶, 6




B ▶, 2




C ▶, 1





D ▶, 1




○: Hook locations, 2

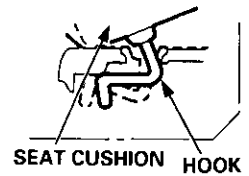

▷ Clip locations, 14

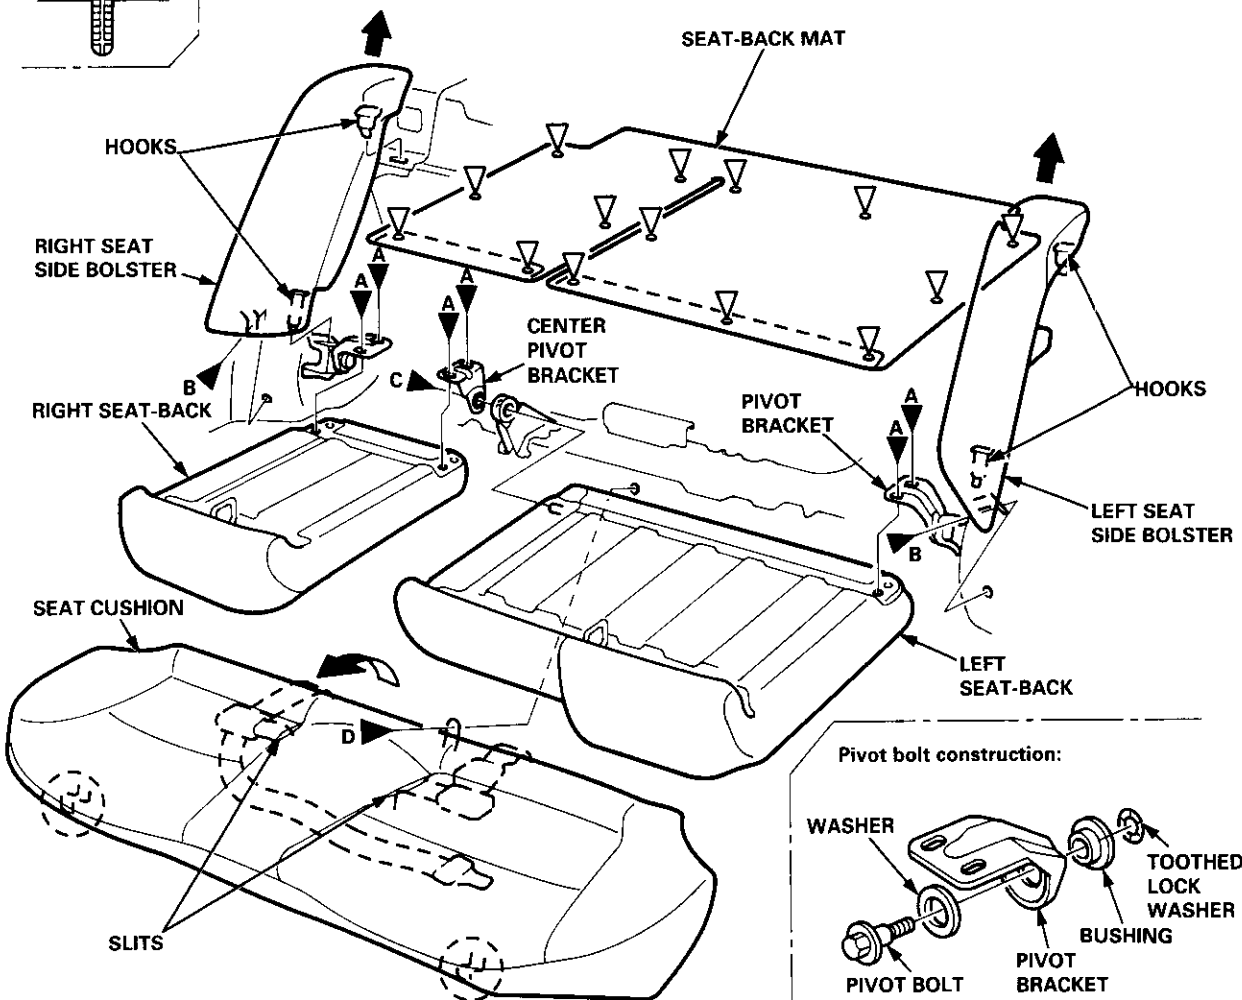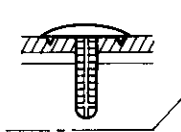

Pivot bolt construction:

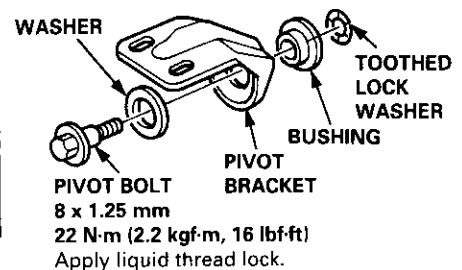

Installation is the reverse of the removal procedure.

NOTE:

- Before attaching the seat-back and seat cushion, make sure there are no twists or kinks in the rear seat belts and center belt.
- When installing the seat cushion, slip the seat belt buckles through the slits in the seat cushion.
- Make sure the seat-back locks securely.
- If necessary, adjust the seat-back latch (see page 20-82) and seat-back.

(cont'd)

Rear Seat

Removal (cont'd)

3D:

►: Bolt locations







A ►, 6

B ►, 1

C ►, 1

○: Hook locations, 2

▷: Clip locations, 14

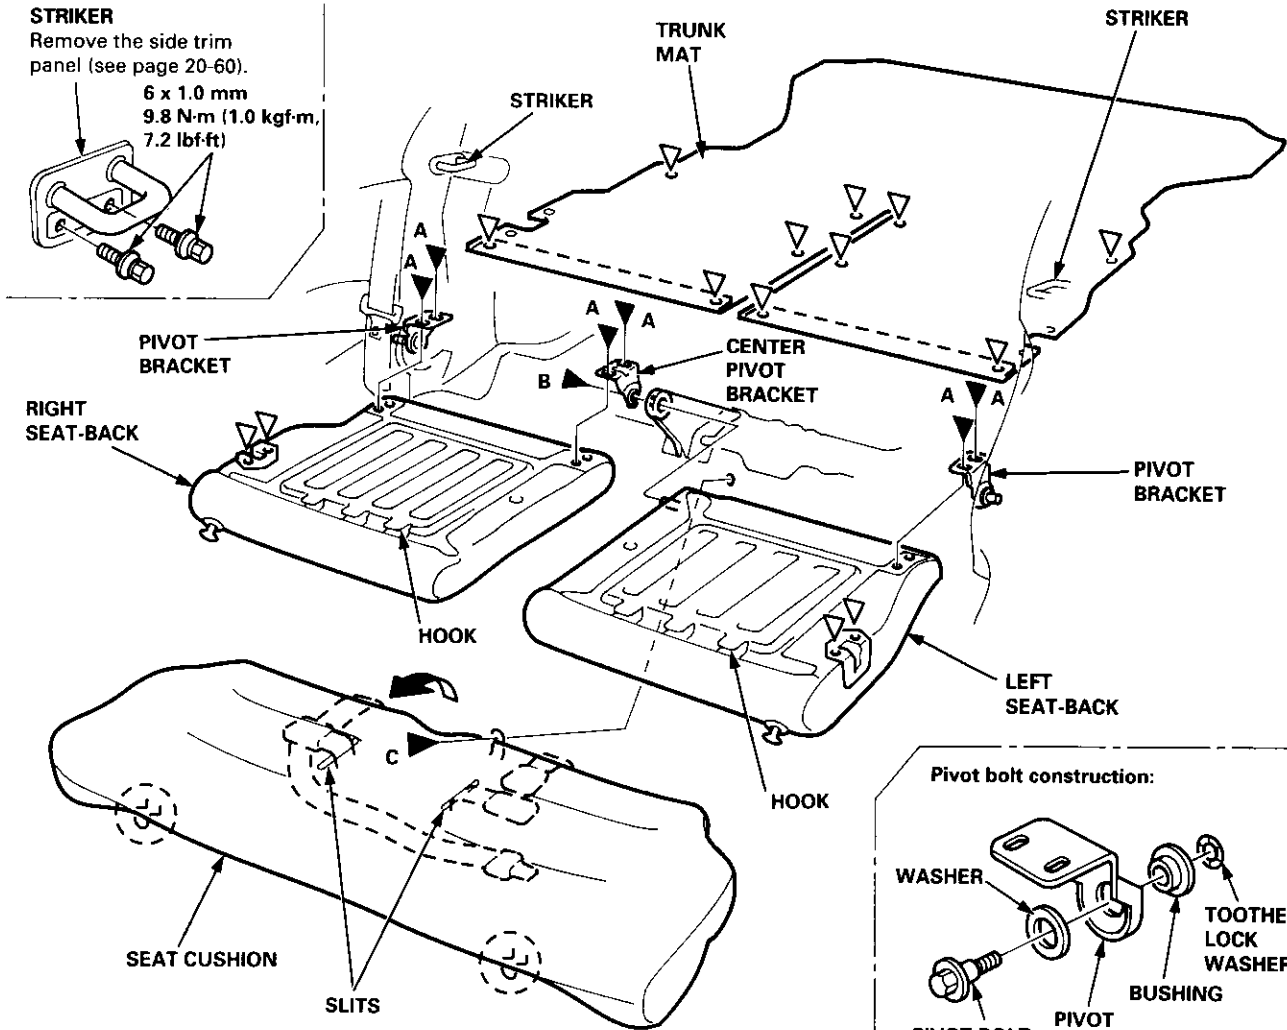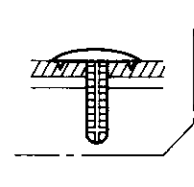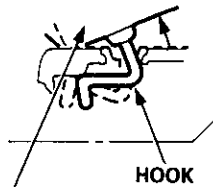

Installation is the reverse of the removal procedure.

NOTE:

- Before attaching the seat-back and seat cushion, make sure there are no twists or kinks in the rear seat belts and center belt.
- When installing the seat cushion, slip the seat belt buckles through the slits in the seat cushion.
- Make sure the seat-back locks securely.
- If necessary, adjust the striker and seat-back.



2D:

▶: Bolt locations







A ▶, 6

B ▶, 1

C ▶, 1

○: Hook locations, 2

▷: Clip locations, 14

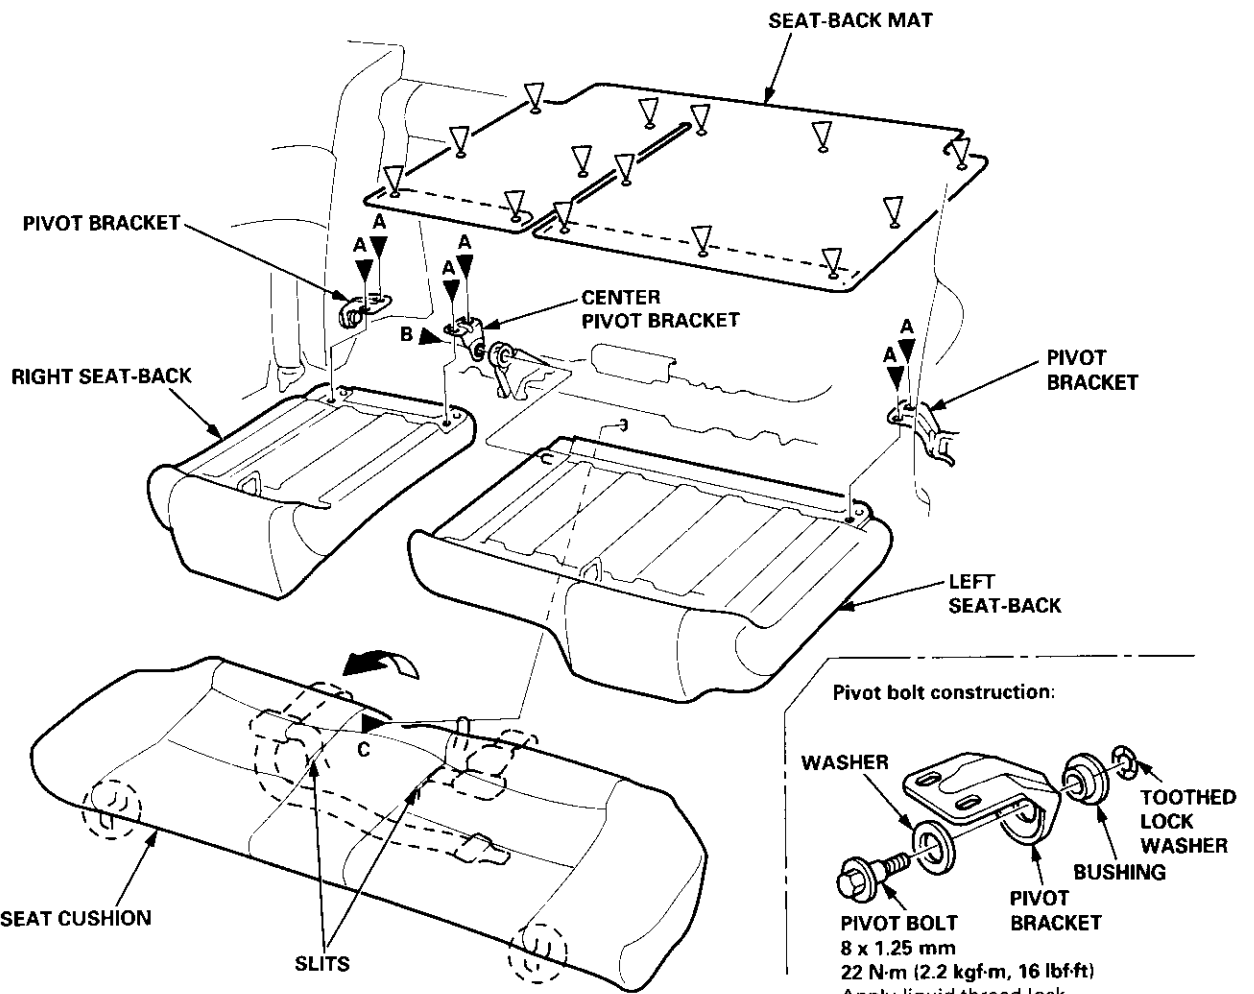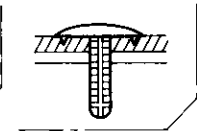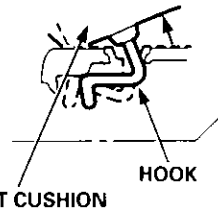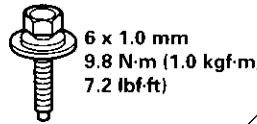

Installation is the reverse of the removal procedure.

NOTE:

- Before attaching the seat-back and seat cushion, make sure there are no twists or kinks in the rear seat belts and center belt.
- When installing the seat cushion, slip the seat belt buckles through the slits in the seat cushion.
- Make sure the seat-back locks securely.
- If necessary, adjust the seat-back latch (see page 20-82) and seat-back.

Rear Seat

Seat-back Latch Replacement


2D/4D:

Remove the lock cylinder trim, then remove the rear shelf (see pages 20-59, 61).


NOTE: Take care not to bend each lock rod.

►: Bolt, screw locations

A ►, 4



B ►, 2

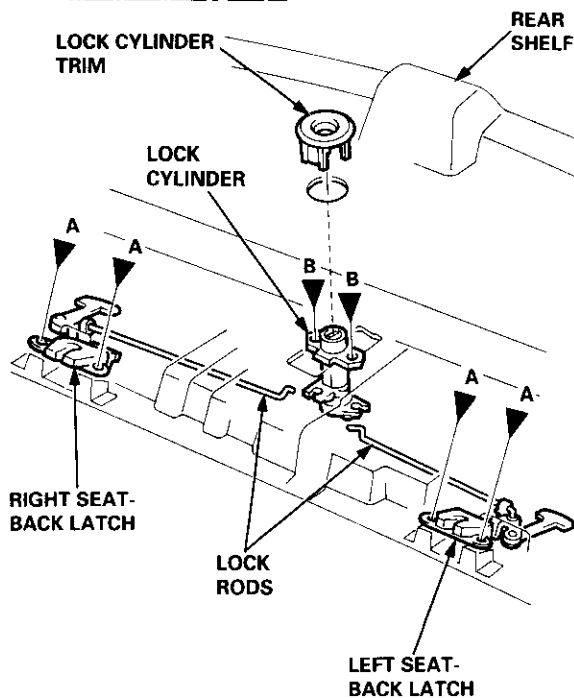

Installation is the reverse of the removal procedure.

NOTE:


- Make sure each lock rod is connected securely.
- Make sure each seat-back locks securely and opens properly.
- If necessary, adjust the seat-back latch.

3D:


Pull the trunk mat away from the seat-back (see page 20-80).

►: Bolt, screw locations

A ►, 2



B ►, 1

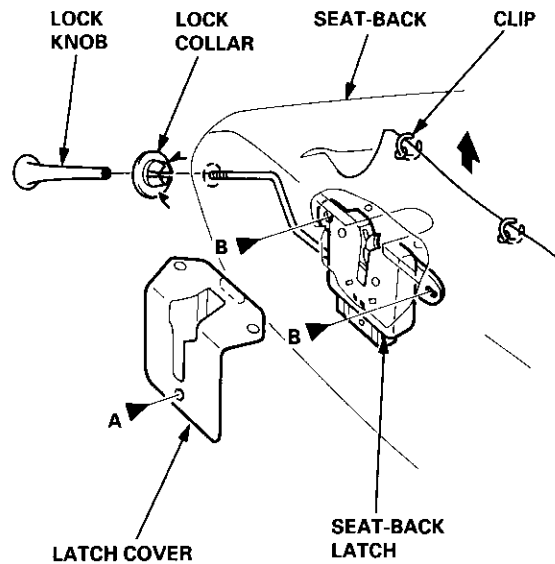

Installation is the reverse of the removal procedure.

NOTE:

- Replace the released clips with new ones.
- Make sure the seat-back locks securely and opens properly.



Seat Cover Replacement

CAUTION: Wear gloves to remove and install the seat covers.


NOTE: Take care not to tear the seams or damage the seat covers.

Seat-back cover removal:

2D/4D:


1. Remove the seat-back (see pages 20-79, 81).
2. Loosen the seat-back cover by releasing all the clips.

▷: Clip locations

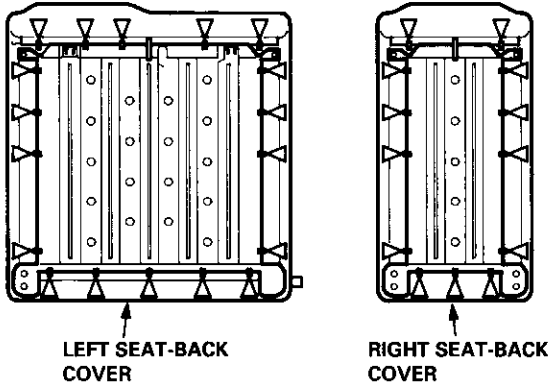

3. Pull back the edge of the seat-back cover all the way around, then release the clips.

▷: Clip locations

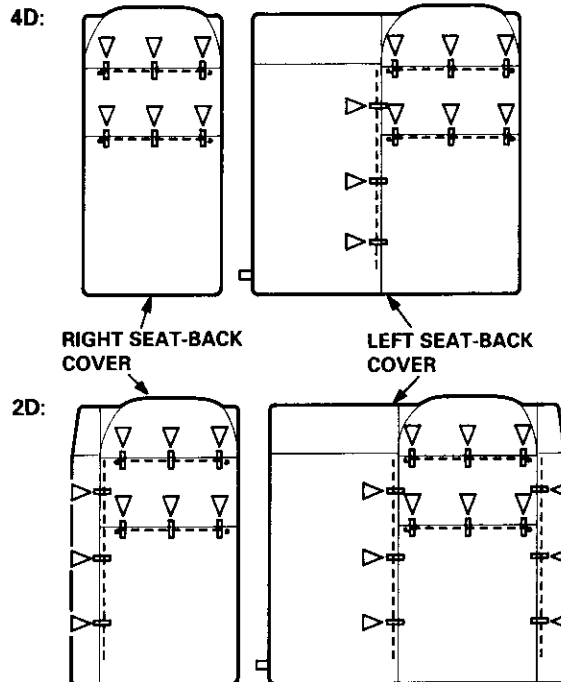

4. Installation is the reverse of the removal procedure.

NOTE:


- To prevent wrinkles when installing a seat cushion cover, make sure the material is stretched evenly over the pad before securing the clips.
- Replace the released clips with new ones.

3D:

1. Remove the seat-back (see page 20-80).
2. Loosen the seat-back cover by releasing all the clips.


NOTE: Remove the lock knob, lock collar and latch cover.

▷: Clip locations

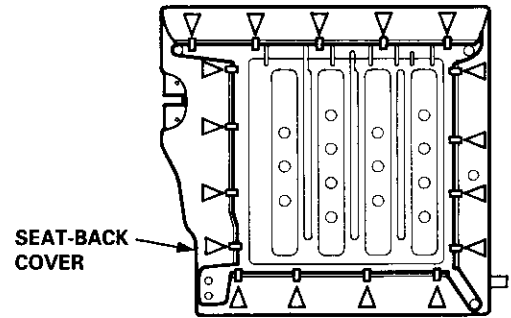

3. Pull back the edge of the seat-back cover all the way around, then release the clips.

▷: Clip locations

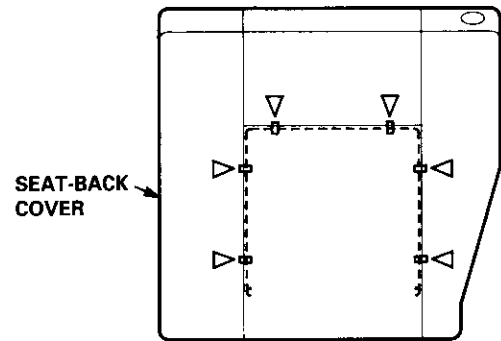

4. Installation is the reverse of the removal procedure.

NOTE:

- To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the clips.
- Replace the released clips with new ones.

(cont'd)


Rear Seat

Seat Cover Replacement (cont'd)

Seat side bolster cover removal (4D):

1. Remove the seat side bolster (see page 20-79).
2. Loosen the seat side bolster cover by releasing all the clips, then remove it.

▷: Clip locations

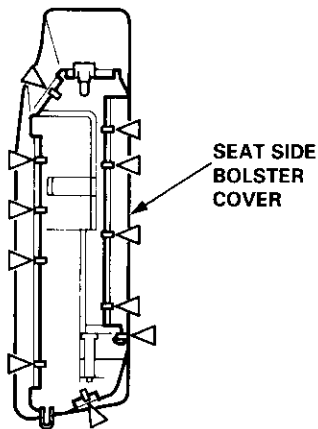

3. Installation is the reverse of the removal procedure.

NOTE:


- To prevent wrinkles when installing a seat side bolster cover, make sure the material is stretched evenly over the pad before securing the clips.
- Replace the released clips with new ones.

Seat cushion cover removal:


1. Remove the seat cushion (see pages 20-79, 80, 81).
2. Loosen the seat cushion cover by releasing all the clips.

▷: Clip locations

4D:

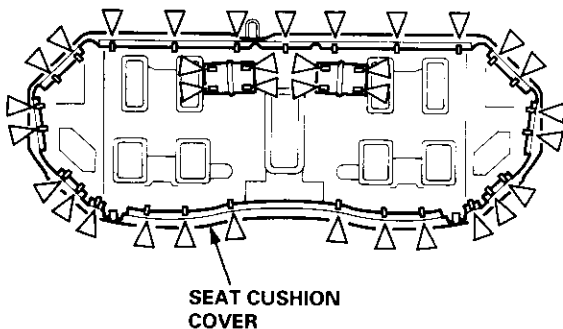


2D/3D:

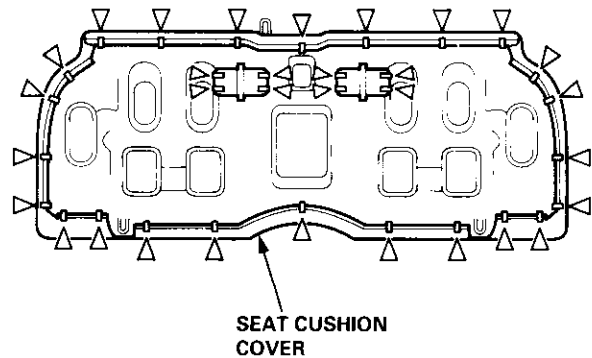


3. Pull back the edge of the seat cushion cover all the way around, release the clips, and remove the seat cushion cover.

▷: Clip locations

4D:

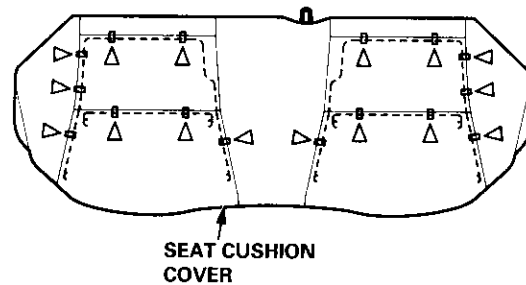

2D/3D:

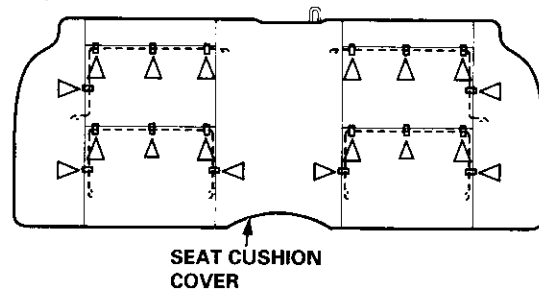


4. Installation is the reverse of the removal procedure.

NOTE:

- To prevent wrinkles when installing a seat cushion cover, make sure the material is stretched evenly over the pad before securing the clips.
- Replace the released clips with new ones.

UPHOLSTERY RING PLIERS
(Commercially available)

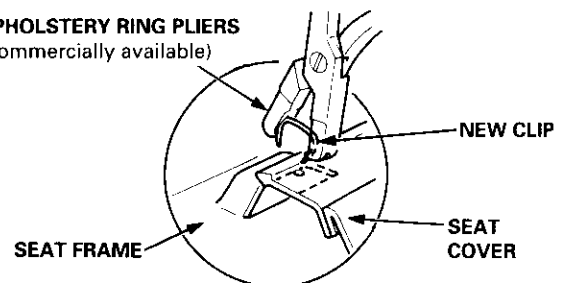




Replacement

CAUTION: Check the front seat belts for damage, and replace then if necessary. Be careful not to damage then during removal and installation.


Front seat belt removal (4D):

1. Slide the front seat forward fully.
2. Remove the center pillar lower trim panel (see page 20-59).
3. Remove the upper anchor cover and lower anchor cap.

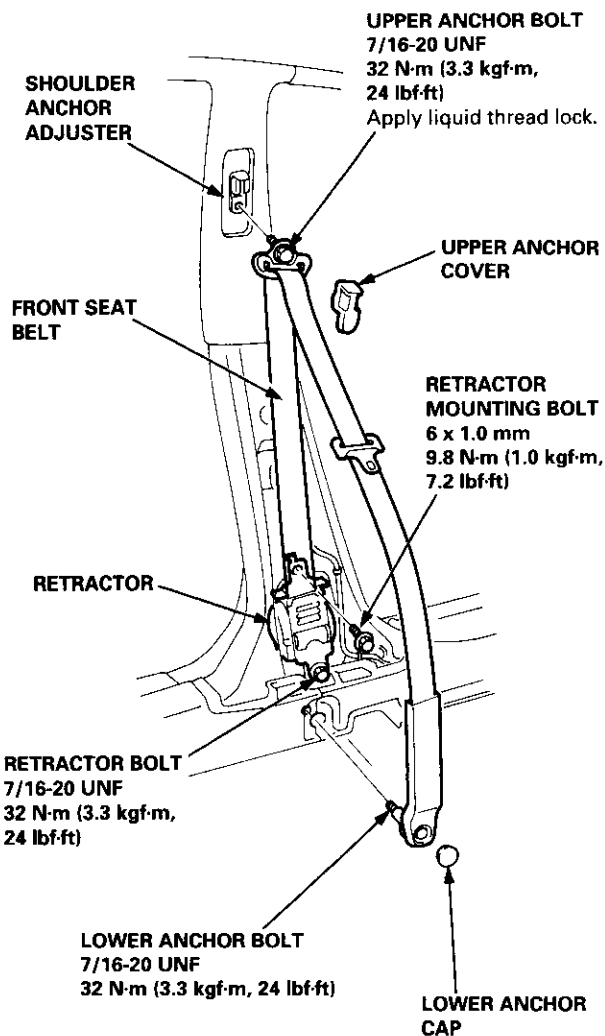

4. Remove all the anchor bolts and the retractor bolt, remove the retractor mounting bolt, then remove the front seat belt and retractor.

5. Remove the center pillar upper trim (see page 20-59).
6. Remove the shoulder anchor adjuster.

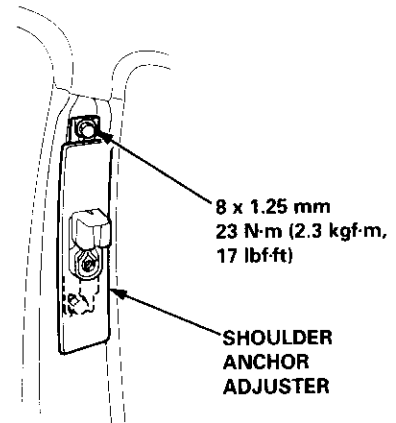


7. Installation is the reverse of the removal procedure.

NOTE:

- Check that the retractor locking mechanism functions as described on page 20-91.
- Make sure you assemble the washers and collars on the upper and lower anchor bolts as shown.
- Before installing the anchor bolts, make sure there are no twists or kinks in the front seat belt.

Upper anchor bolt construction:

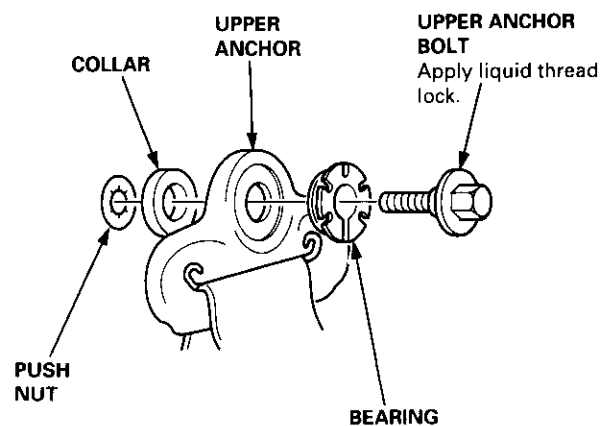


(cont'd)


Front Seat Belt

Replacement (cont'd)

Lower anchor bolt construction:

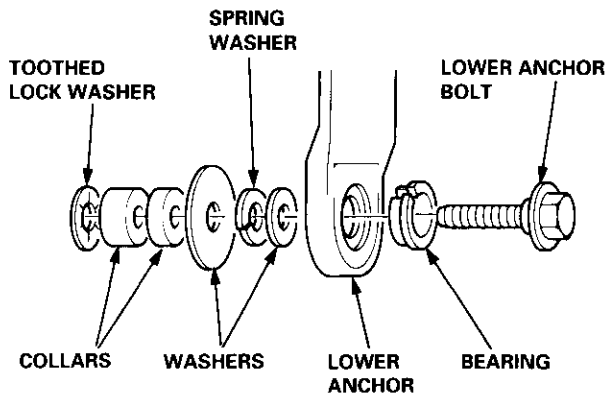


Retractor bolt construction:

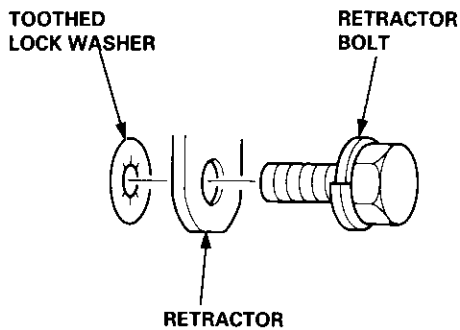

Front seat belt removal (2D/3D):

1. Slide the front seat forward fully.
2. Remove:
 - Rear seat-back and rear seat cushion (see pages 20-80, 81)
 - Rear center shelf and rear side shelf (3D, see page 20-60)
 - Rear trim panel (3D, see page 20-60)
 - Side trim panel (see pages 20-60, 61)
3. Remove the upper anchor cover and lower anchor cap.

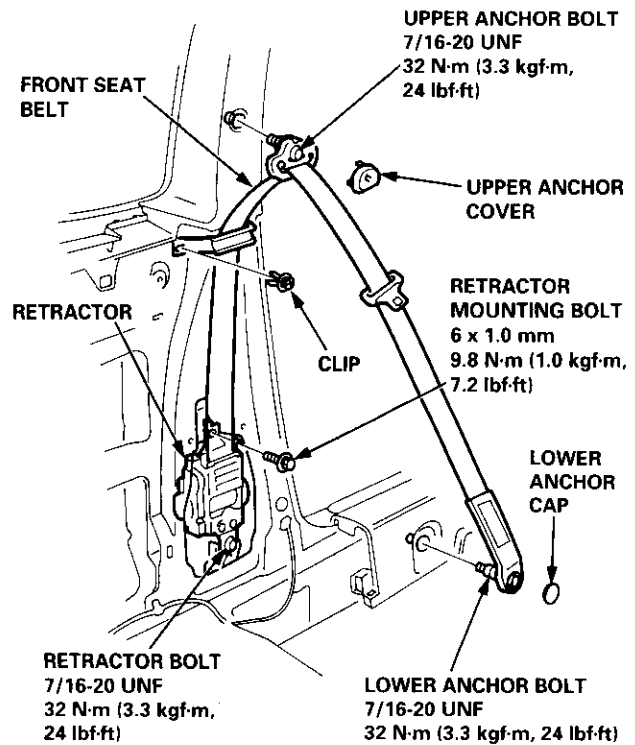

4. Remove all the anchor bolts and the retractor bolt, remove the retractor mounting bolt, then remove the front seat belt and retractor.




5. Installation is the reverse of the removal procedure.


NOTE:

- Check that the retractor locking mechanism functions as described on page 20-91.
- Make sure you assemble the washers and collars on the upper and lower anchor bolts as shown.
- Before installing the anchor bolts, make sure there are no twists or kinks in the front seat belt.


Upper anchor bolt construction:

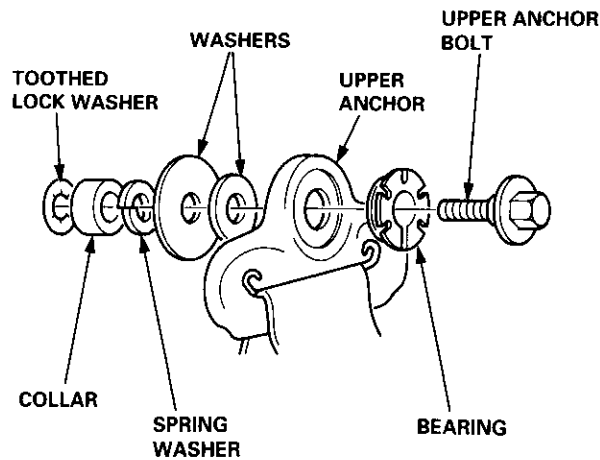

Lower anchor bolt construction:

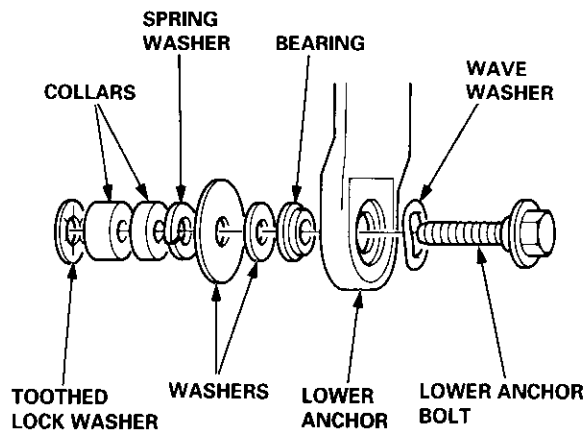


Retractor bolt construction:

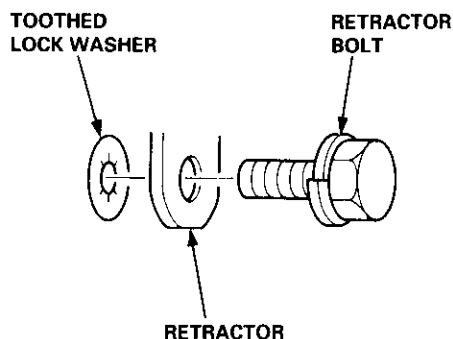

Seat belt buckle removal:


1. Remove the front seat through the door opening (see page 20-74).
2. Remove the center cover (see pages 20-75, 76).
3. Remove the center anchor bolt, then remove the seat belt buckle.

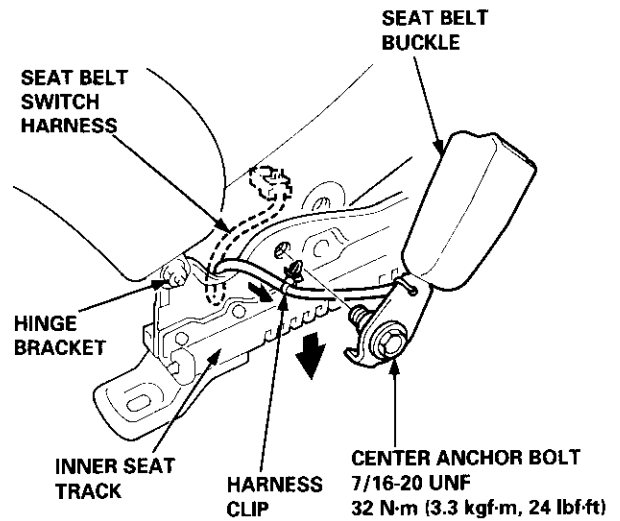

4. Driver's: Detach the seat belt switch connector and harness clip from the seat cushion (see page 20-77). Remove the seat cushion mounting bolts from the inner seat track (see page 20-75), and move the inner seat track, then pull the seat belt switch harness out.

NOTE: Take care not to damage the hinge bracket.

Center anchor bolt construction:

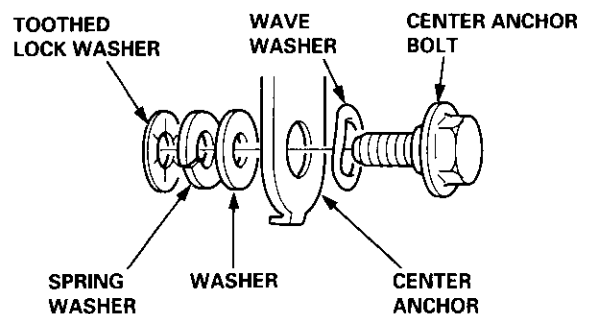

5. Installation is the reverse of the removal procedure.

NOTE: Make sure you assemble the washers and bearing on the center anchor bolt as shown.


Rear Seat Belt

Replacement

CAUTION: Check the rear seat belts for damage, and replace then if necessary. Be careful not to damage them during removal and installation.

Rear seat belt removal (2D/4D):

1. Remove:
 - Rear seat cushion (see pages 20-79, 81)
 - Rear seat-back (2D, see page 20-81)
 - Side trim panel (2D, see page 20-61)
 - Rear shelf (see pages 20-59, 61)
 - Rear trim panel (see page 20-62)
 - Trunk side trim, Japan-produced (see page 20-62)
 - Trunk trim panel, USA-produced (see page 20-62)
2. Remove all the anchor bolts and retractor bolt, then remove the rear seat belt and retractor.

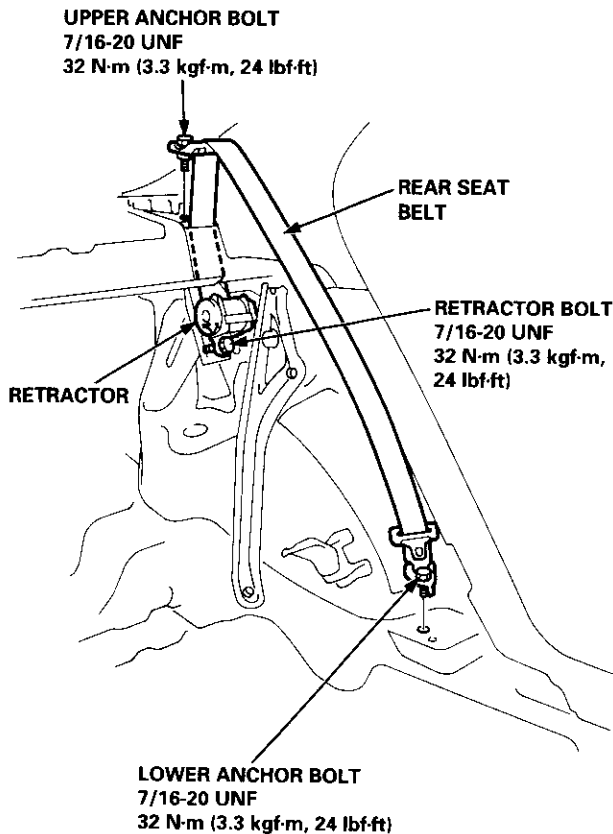


3. Installation is the reverse of the removal procedure.


NOTE:

- Check that the retractor locking mechanism functions as described on page 20-91.
- Make sure you assemble the washers and collar on the upper anchor bolt as shown.
- Before installing the anchor bolt, make sure there are no twists or kinks in the rear seat belt.


Upper anchor bolt construction:

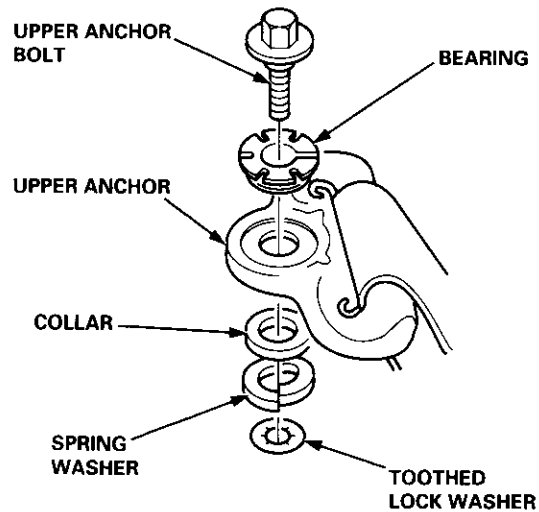

Lower anchor bolt construction:

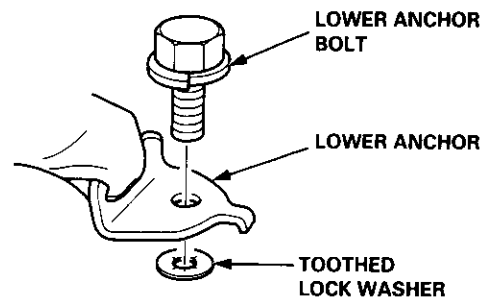


Retractor bolt construction:

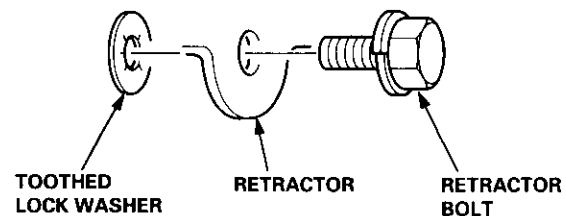



Rear seat belt removal (3D):

1. Remove:
 - Rear seat-back and rear seat cushion (see page 20-80)
 - Rear center shelf and rear side shelf (see page 20-60)
 - Rear trim panel and side trim panel (see page 20-60)
2. Remove the upper anchor cover.

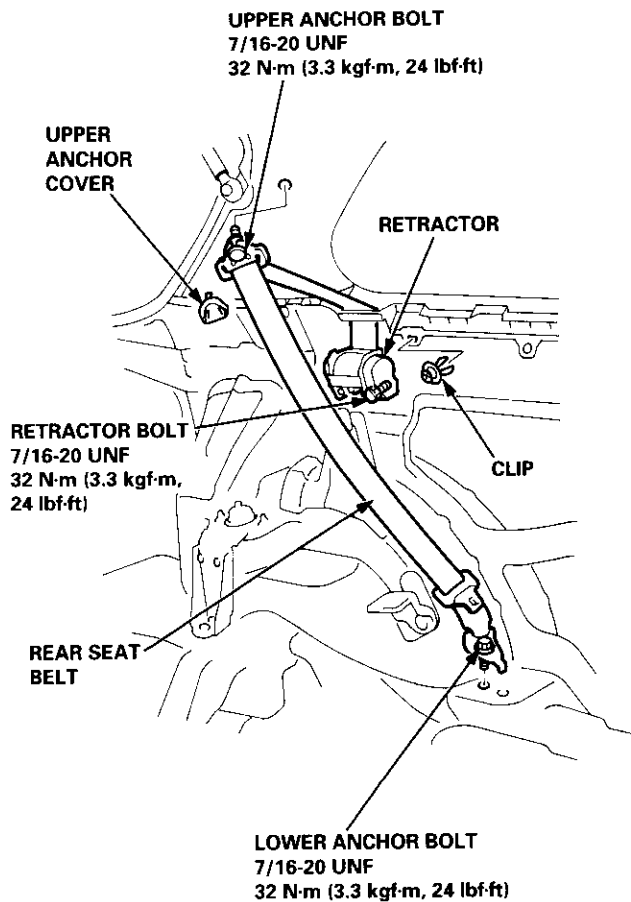


3. Remove all the anchor bolts and retractor bolt, then remove the rear seat belt and retractor.

4. Installation is the reverse of the removal procedure.


NOTE:

- Check that the retractor locking mechanism functions as described on page 20-91.
- Make sure you assemble the washers and collars on the upper anchor bolt as shown.
- Before installing the anchor bolt, make sure there are no twists or kinks in the rear seat belt.


Upper anchor bolt construction:

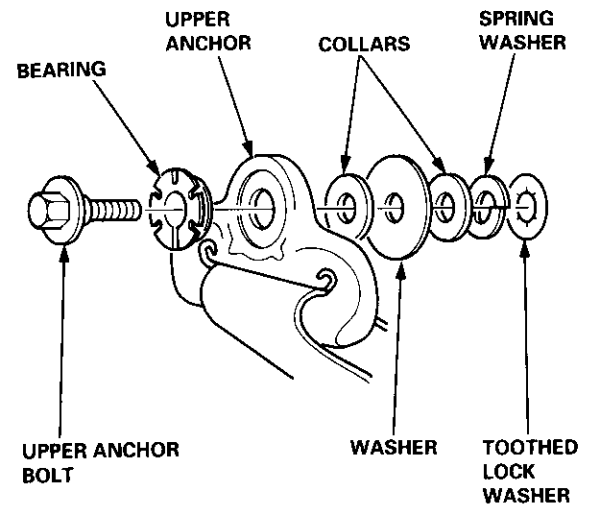

Lower anchor bolt construction:

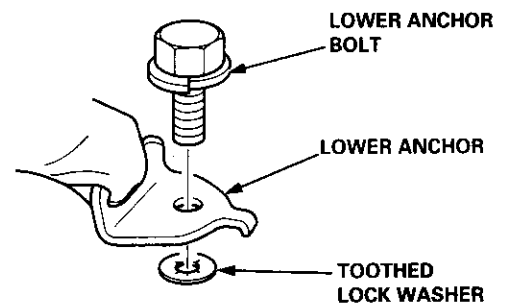

Retractor bolt construction:

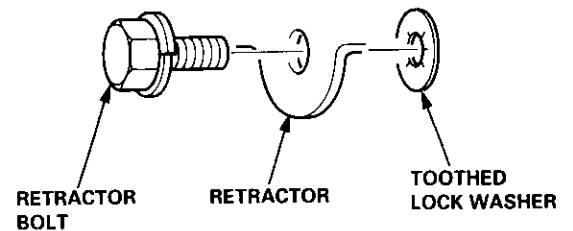

(cont'd)


Rear Seat Belt

Replacement (cont'd)


Seat belt buckle/Center belt tongue removal:

1. Remove the rear seat cushion (see pages 20-79, 80, 81).
2. Remove the center anchor bolts, then remove the seat belt buckles and center belt tongue.


2D/4D:

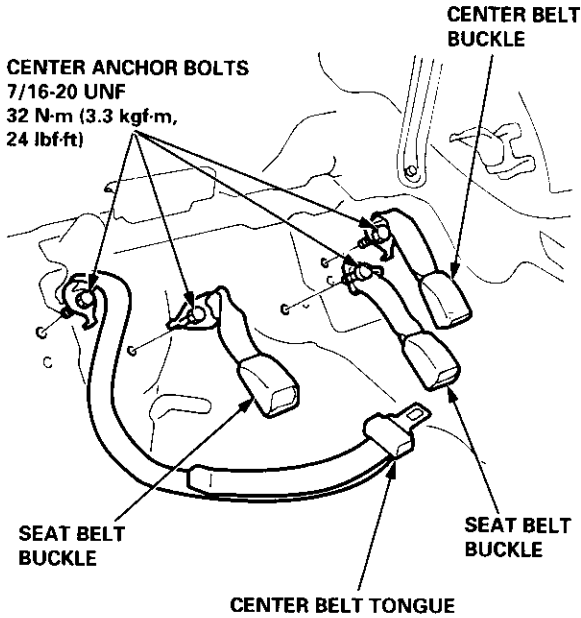

3D:

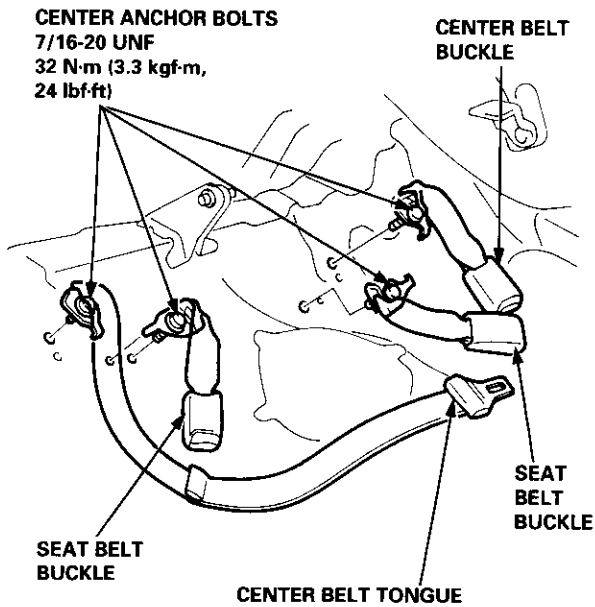

Center anchor bolt construction:

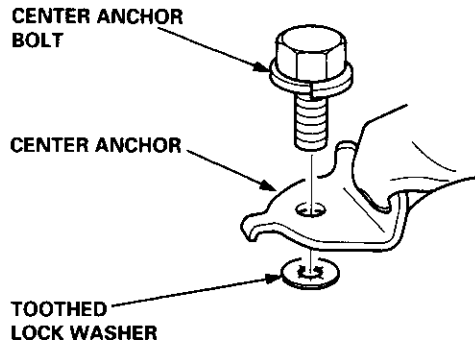

3. Installation is the reverse of the removal procedure.

NOTE: Before attaching the seat-back and seat cushion, make sure there are no twists or kinks in the center belts.

Seat Belts



Inspection

Retractor Inspection


1. Before installing the retractor, check that the seat belt can be pulled out freely.
2. Make sure that the seat belt does not lock when the retractor is leaned slowly up to 15° from the mounted position. The seat belt should lock when the retractor is leaned over 40°.

CAUTION: Do not attempt to disassemble the retractor.


*: Mounted Position

Front:

4D:

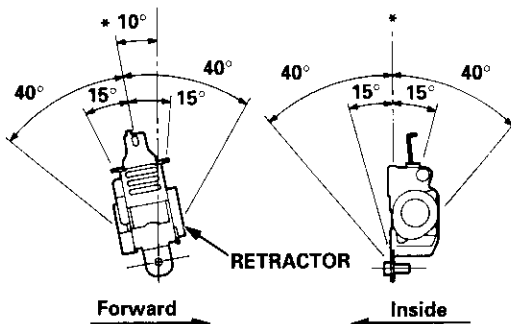


2D/3D:

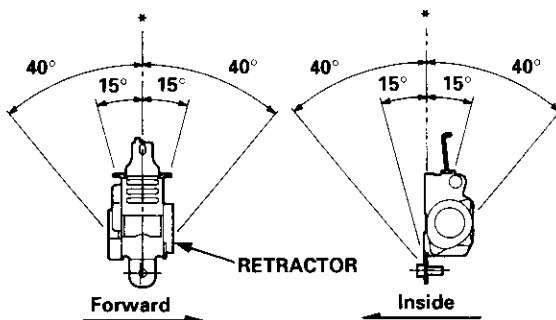


Rear:

2D/4D:

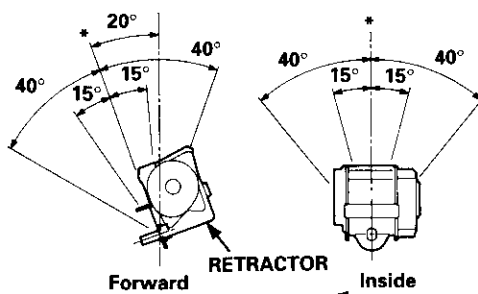

3D:

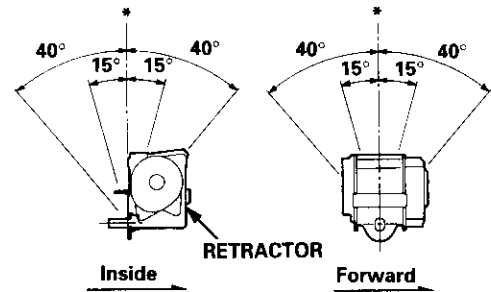

3. Replace the seat belt with a new one if there is any abnormality.

On-the-Car Seat Belt Inspection

1. Check that the seat belt is not twisted or caught on anything.
2. After installing the anchors, check for free movement on the anchor bolts. If necessary, remove the anchor bolts and check that the washers and other parts are not damaged or improperly installed.
3. Check the seat belts for damage or discoloration. Clean with a shop towel if necessary.

CAUTION: Use only soap and water to clean.

NOTE: Dirt build-up in the metal loops of the upper anchors can cause the seat belts to retract slowly. Wipe the inside of the loops with a clean cloth dampened in isopropyl alcohol.

4. Check that the seat belt does not lock when pulled out slowly. The seat belt is designed to lock only during a sudden stop or impact.
5. Make sure that the seat belt will retract automatically when released.
6. For each passenger's seat belt, make sure that the locking mechanism in the seat belt retractor will engage when the seat belt is pulled all the way out.
7. Replace the seat belt with a new one if there is any abnormality.


Seat Belts

Child Seat Anchor Plate

Attachment points are provided for a rear seat mounted child restraint system which uses a top tether. The attachment points are located on the rear shelf or rear trim panel, just behind the rear seat-back. When using a child seat with a top tether, install the child seat anchor plates securely.


2D/4D:

NOTE: Remove the plug covers from the attachment points of the rear shelf.

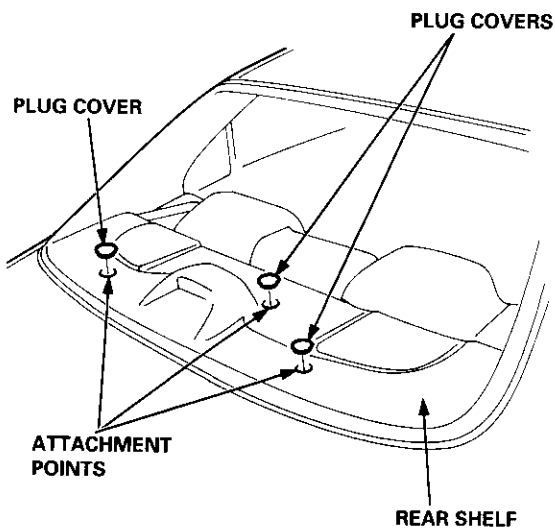


3D:

NOTE: The rear trim panel has perforations at each attachment point. Cut the rear trim panel along the perforations to make a hole.

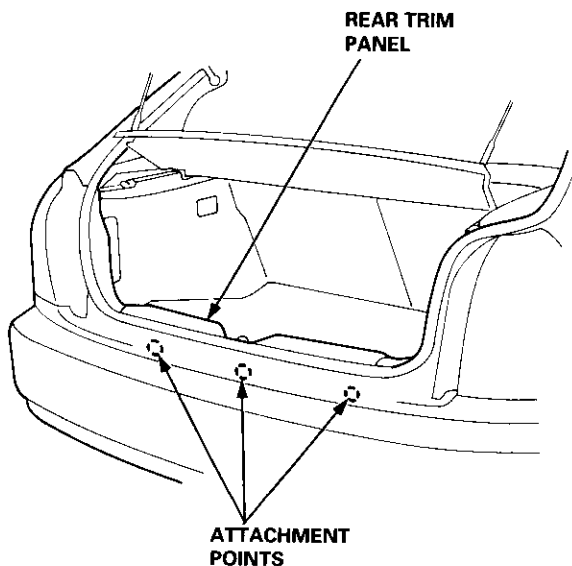

8 x 1.25 mm
22 N·m (2.2 kgf·m, 16 lbf·ft)

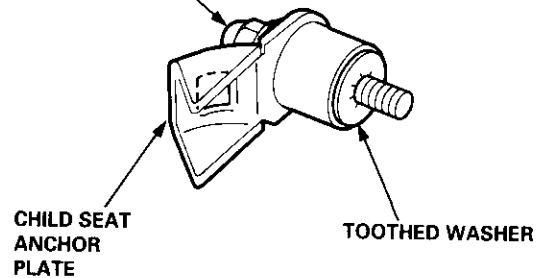

NOTE:

- Do not remove the toothed washer from the child seat anchor plate. Use the child seat anchor plate with the toothed washer attached to it.
- When installing a child seat on the rear seat, follow the instructions of the manufacturer of the child seat.
- Additional anchor plates are available.

⚠ WARNING

- Do not use the child seat anchor plate for any other purpose; it is designed exclusively for installation of a child seat.
- Make sure the rear seat-back is locked firmly when installing a child seat.




Exterior


Component Location Index

NOTE: Refer to the Civic Body Repair Manual, 1996 Model Series, P/N. 61S0330, for the hood, trunk lid and hatch removal.

2D/3D/4D:

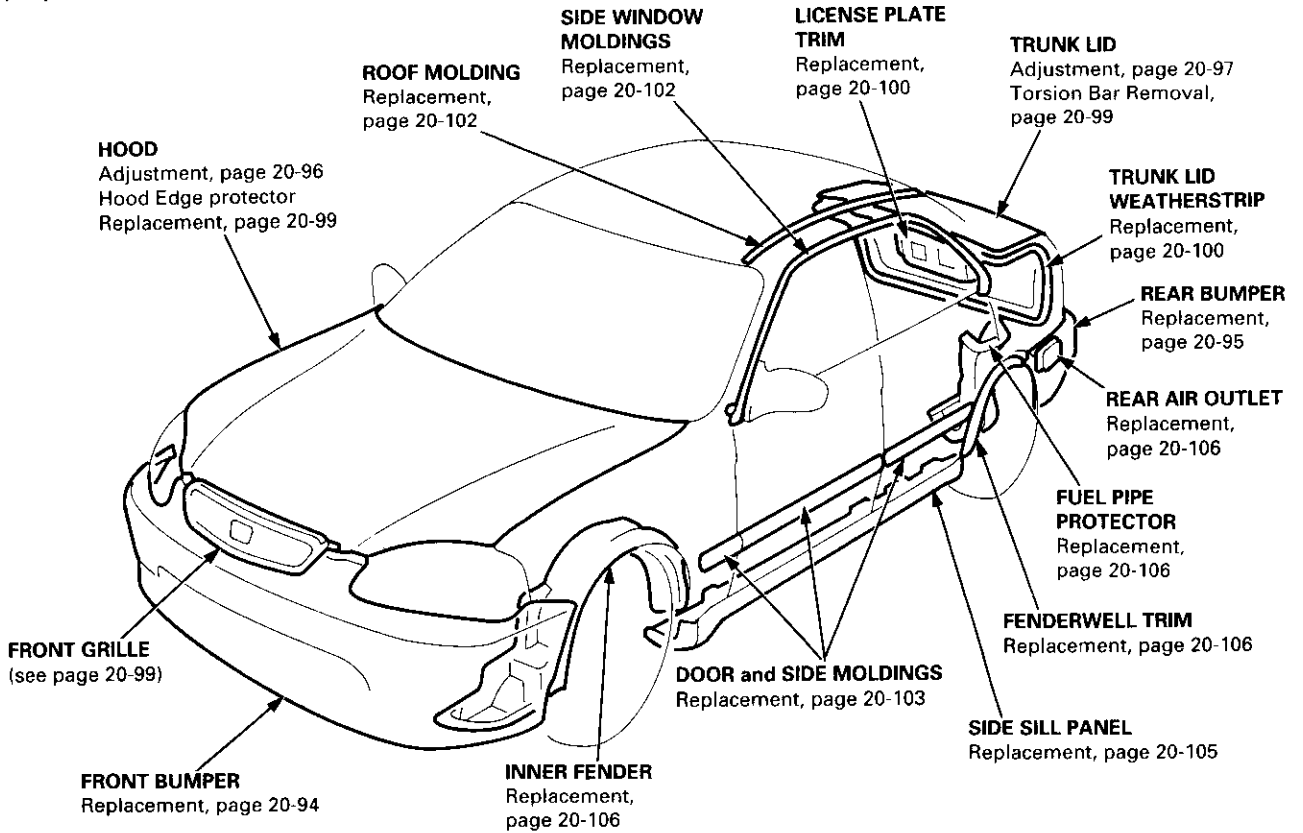

3D:

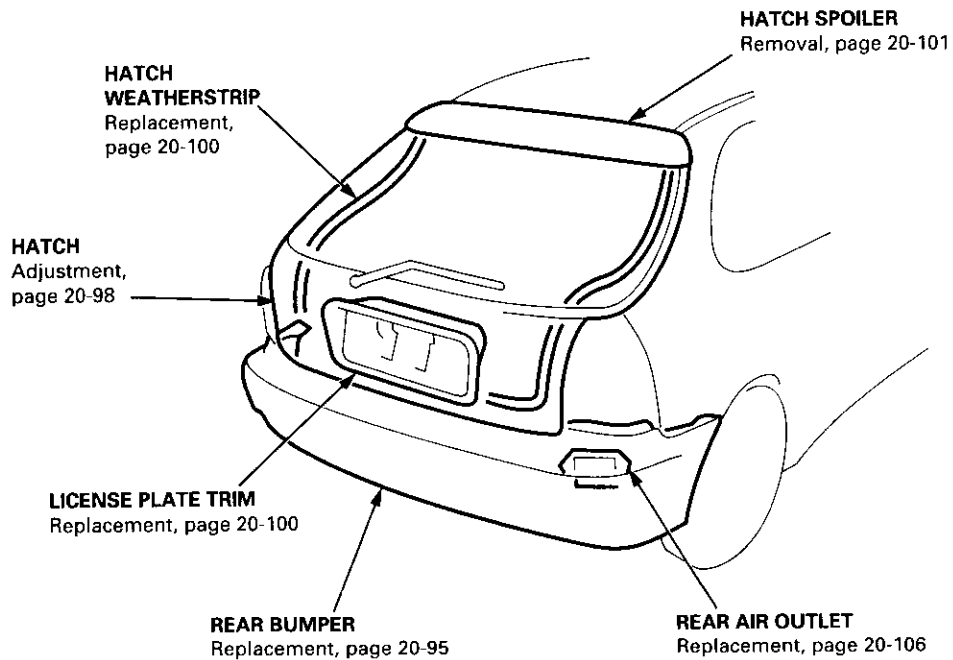

Front Bumper

Replacement

CAUTION: Wear gloves to remove and install the front bumper.

NOTE:

- An assistant is helpful when removing the front bumper.
- Take care not to scratch the front bumper and body.


▶: Bolt, screw locations

A ▶, 2




6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)


B ▶, 2



▷: Clip locations, 7




C ▶, 4




8 x 1.25 mm
22 N·m (2.2 kgf·m,
16 lbf·ft)

D ▶, 4



6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

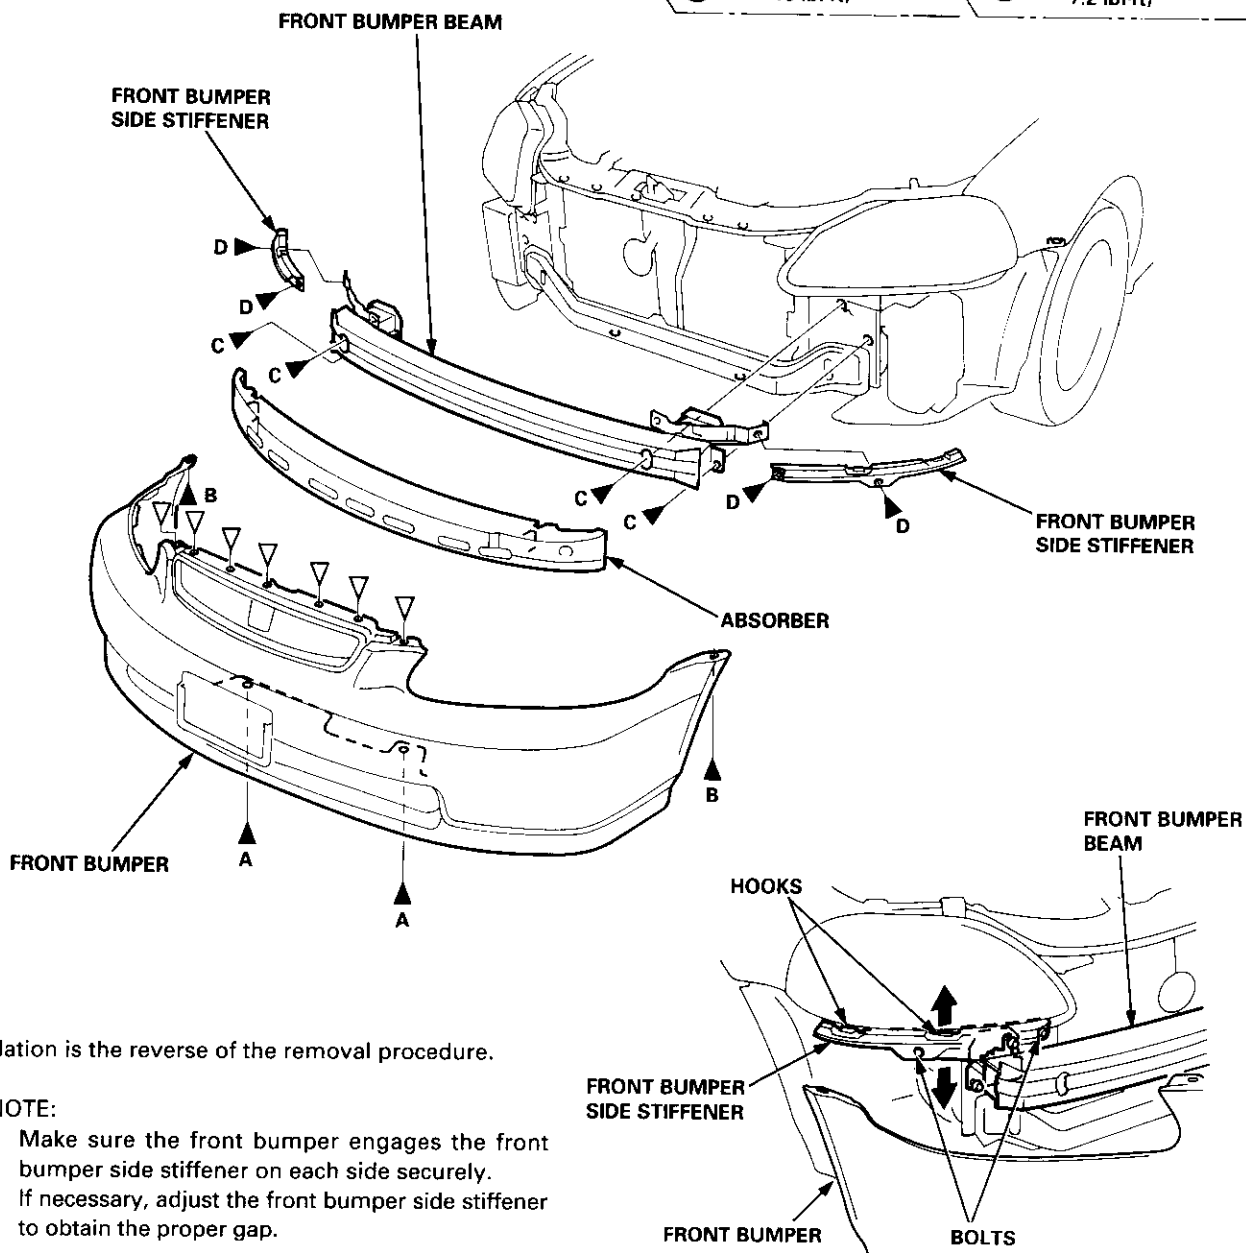

Installation is the reverse of the removal procedure.

NOTE:

- Make sure the front bumper engages the front bumper side stiffener on each side securely.
- If necessary, adjust the front bumper side stiffener to obtain the proper gap.



Rear Bumper



Replacement

CAUTION: Wear gloves to remove and install the rear bumper.

NOTE:


- An assistant is helpful when removing the rear bumper.
- Take care not to scratch the rear bumper and body.
- 2D and 4D shown here; 3D removal procedures are the same as 4D.

▶: Screw, bolt locations
A ▶, 2 B ▶, 4

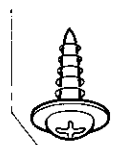

12 x 1.25 mm
54 N·m (5.5 kgf·m,
40 lbf·ft)

▷: Clip locations, 7

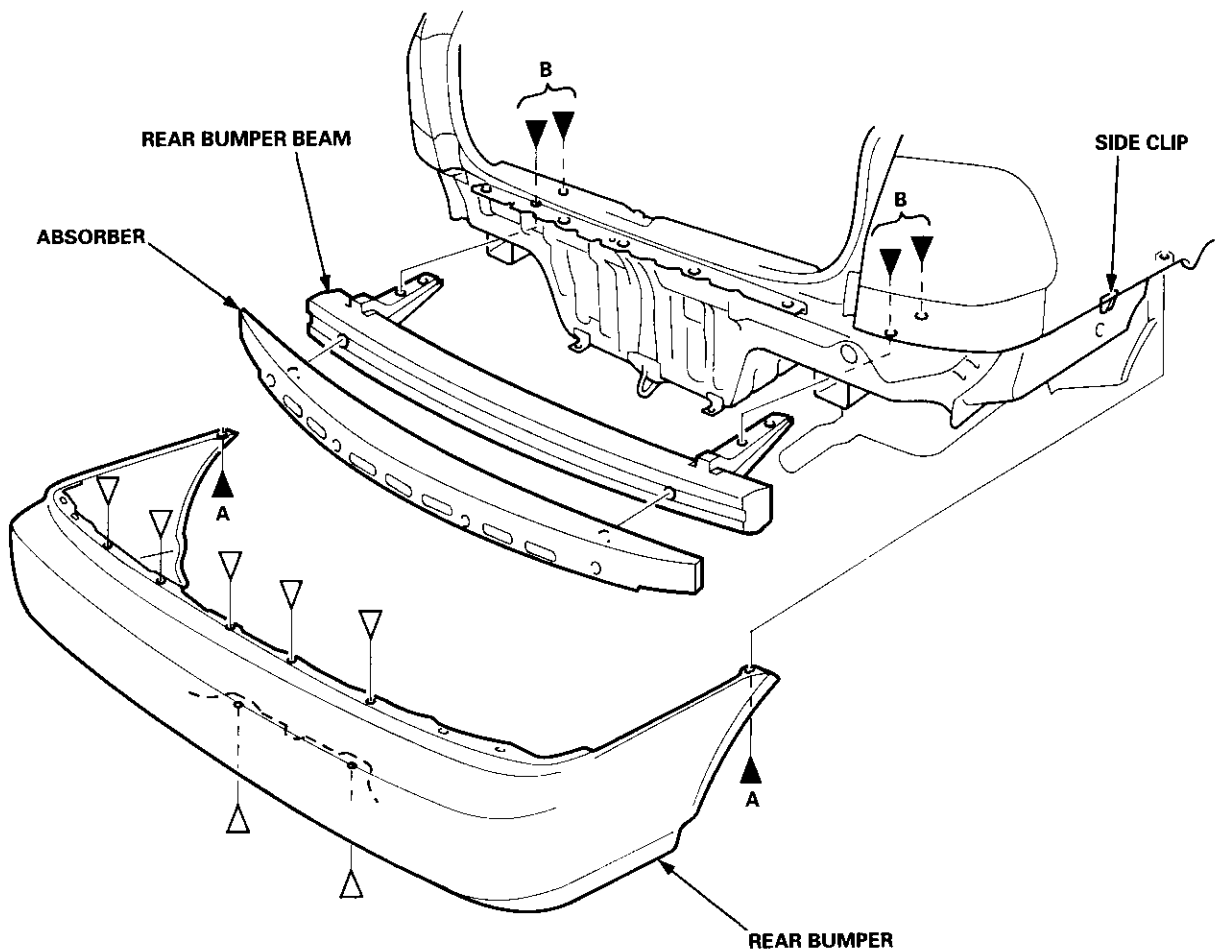

Installation is the reverse of the removal procedure.

NOTE:



- If necessary, replace any damaged clips.
- Make sure the rear bumper engages the side clip on each side securely.

Hood



Adjustment

NOTE: Before adjusting the hood, loosen each bolt slightly.

1. Adjust the hood hinges right and left, as well as fore and aft, by using the elongated holes.
2. Turn the hood edge cushions, as necessary, to make the hood fit flush with the body at front and side edges.
3. Adjust the hood latch to obtain the proper height at the forward edge.
4. After adjustment, tighten each bolt securely.

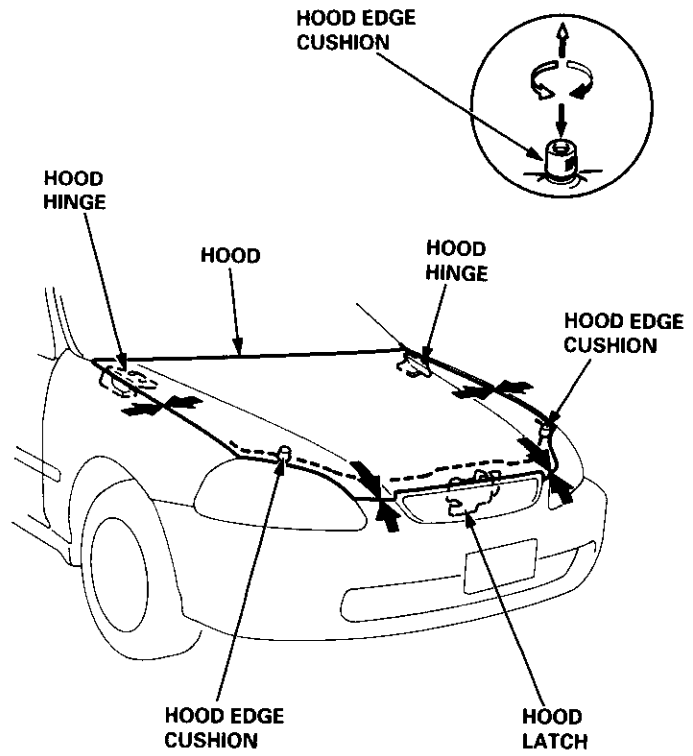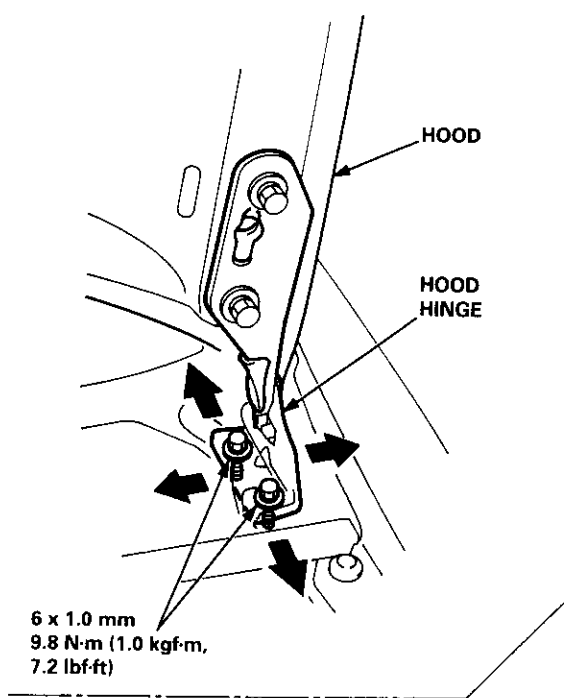

NOTE: Move the hood latch right or left until the striker is centered in the hood latch as shown.

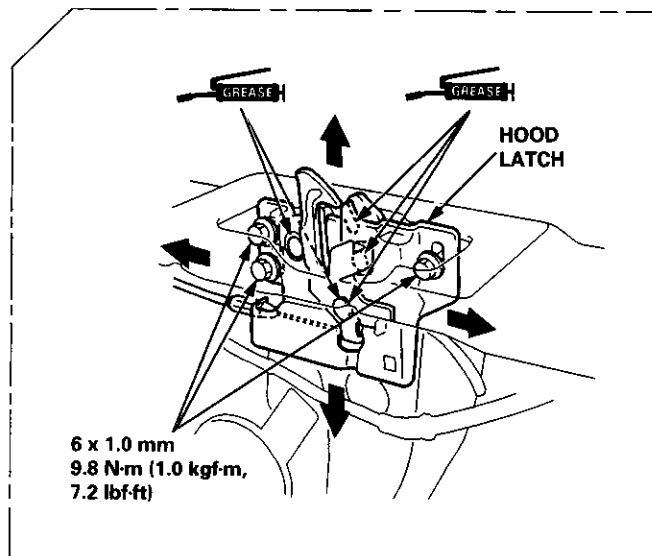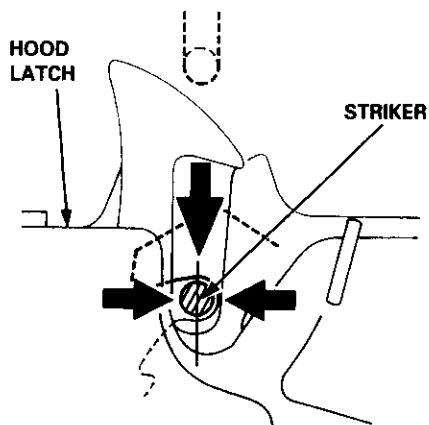





Trunk Lid



Adjustment

NOTE: Before adjusting the trunk lid, loosen each bolt slightly.

1. Adjust the trunk lid hinges right and left, as well as fore and aft, by using the elongated holes.
2. Turn the trunk lid edge cushions, as necessary, to make the trunk lid fit flush with the body at the rear and side edges.
3. Adjust the fit between the trunk lid and the trunk lid opening by moving the striker.
4. After adjustment, tighten each bolt securely.

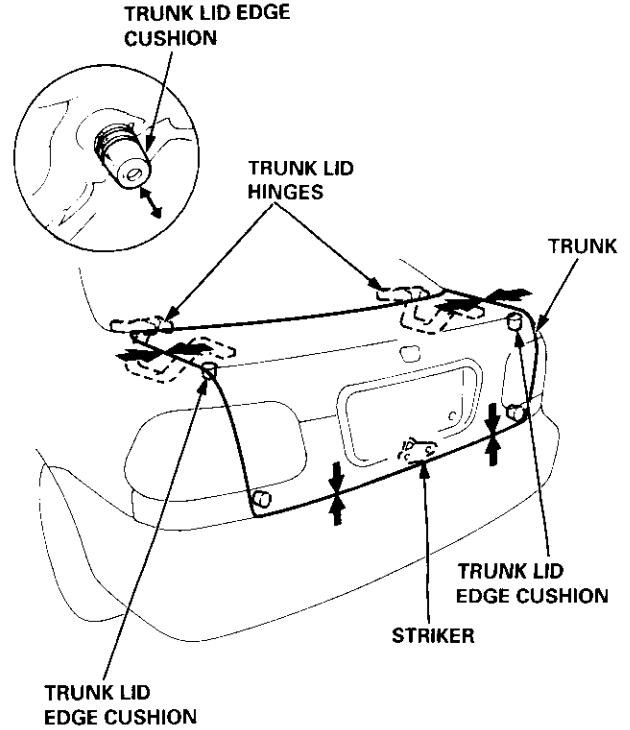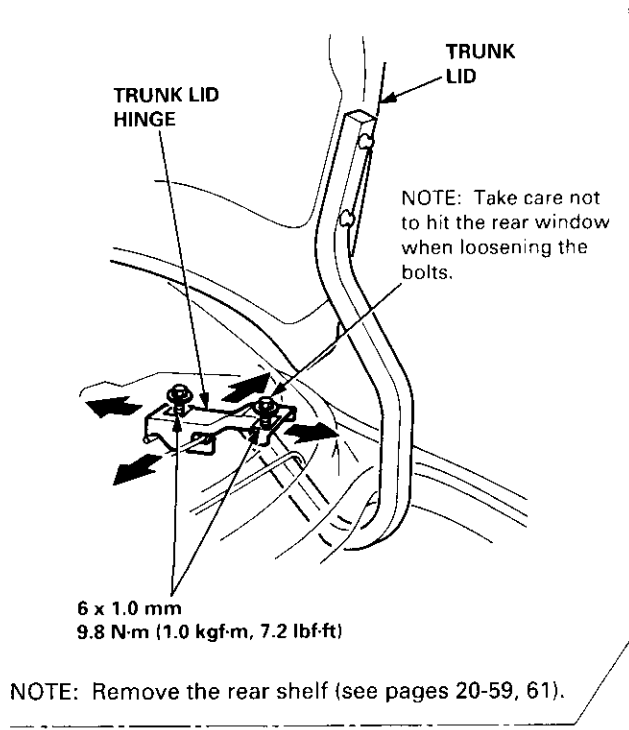

NOTE: Move the striker right or left until it's centered in the trunk lid latch as shown.

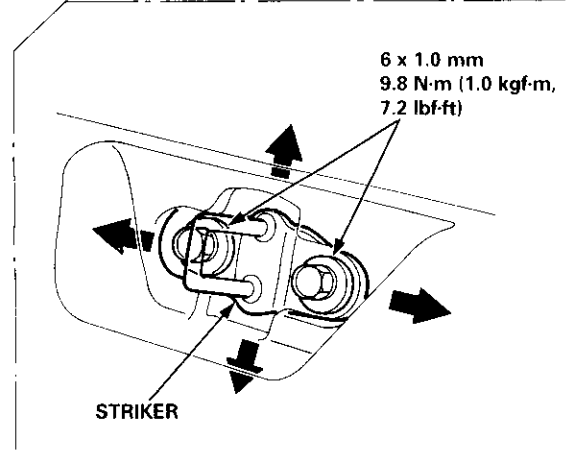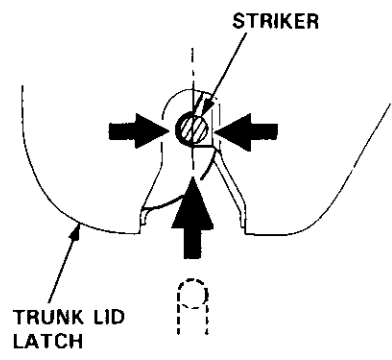


Hatch

Adjustment



NOTE:

- Before adjusting the hatch, loosen each bolt and nut slightly.
- The support struts should be removed.
- To adjust, remove both hatch side trim (see page 20-63) and the rear roof trim (see page 20-65).

1. Adjust the hatch hinges right and left, as well as fore and aft, by using the elongated holes.
2. Turn the hatch edge cushions, as necessary, to make the hatch fit flush with the body at each side.
3. Adjust the hatch fit to the hatch opening by moving the striker.
4. After adjustment, tighten each bolt and nut securely.

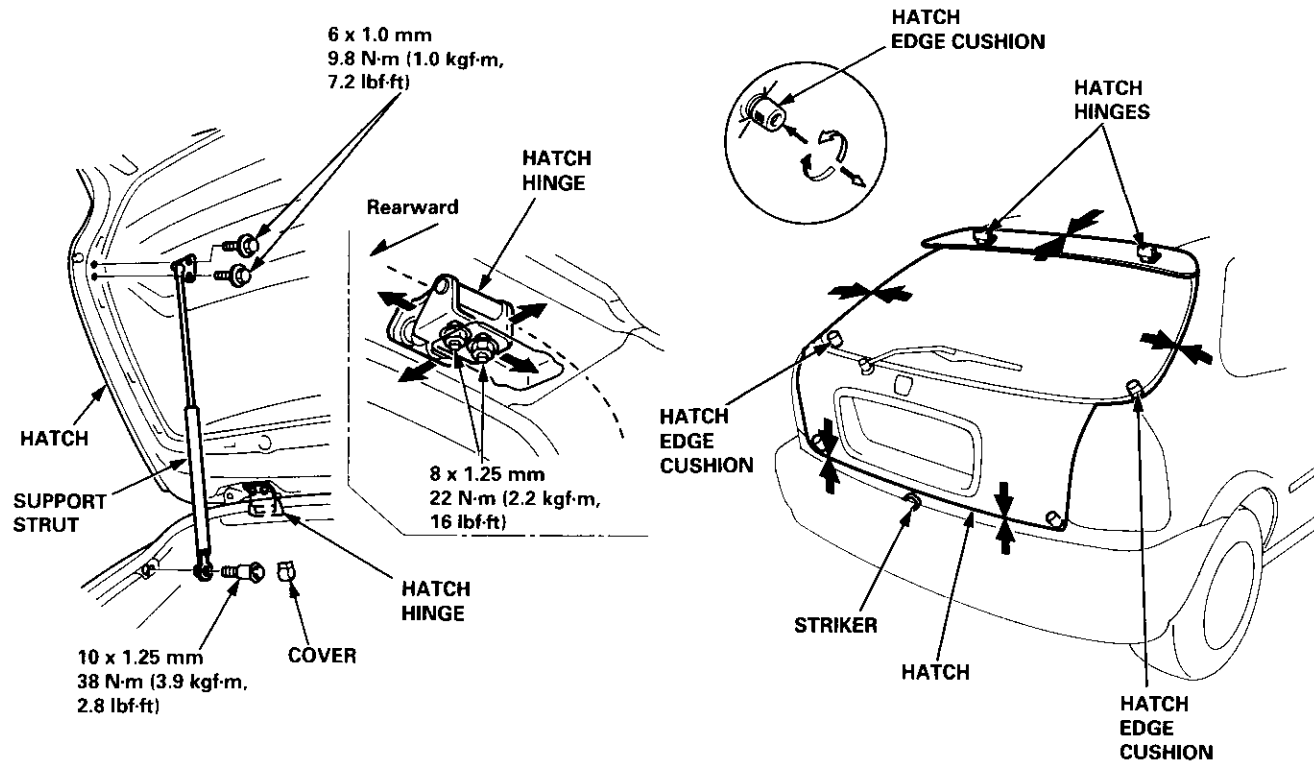

NOTE: Move the striker right or left until it's centered in the hatch latch, as shown.

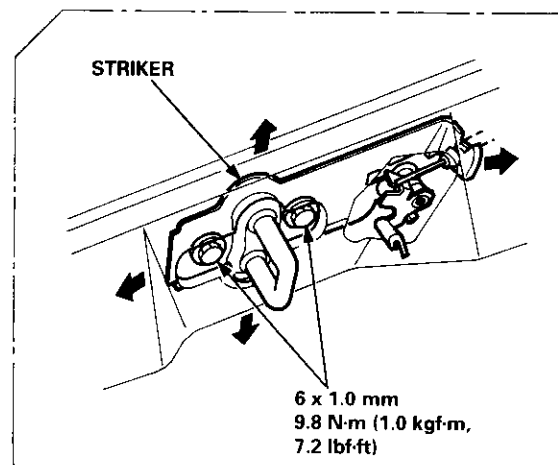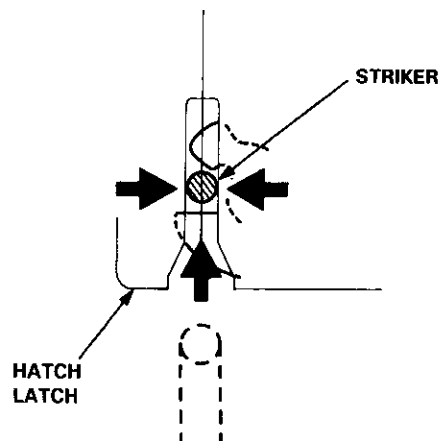





Replacement

Front grille:

NOTE: Take care not to scratch the front bumper.

Remove the front bumper (see page 20-94). Remove the clips and screws, then slide the front grille forward by detaching the hooks.

►: Screw locations, 4

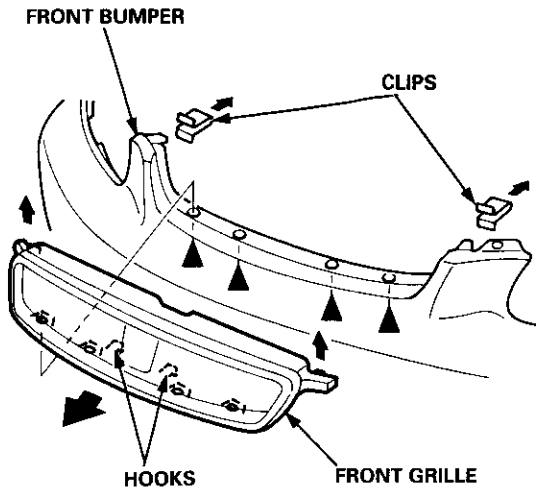
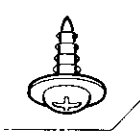


Hood edge protector:

NOTE:

- When removing the clips, use a clip remover.
- If necessary, replace any damaged clips.

▷: Clip locations, 18

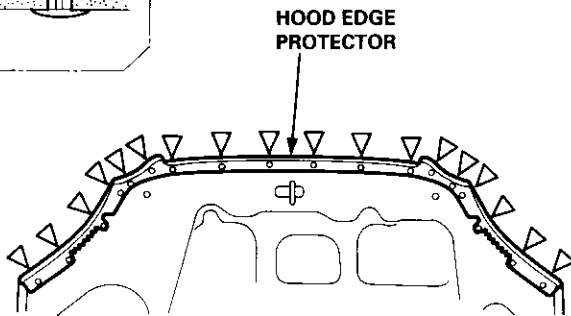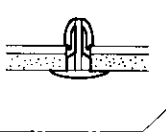


Removal

CAUTION: Wear gloves to remove and install the torsion bars.

NOTE: Take care not to damage the body.


Remove the torsion bars with the torsion bar assembly tool while holding the trunk lid as shown.

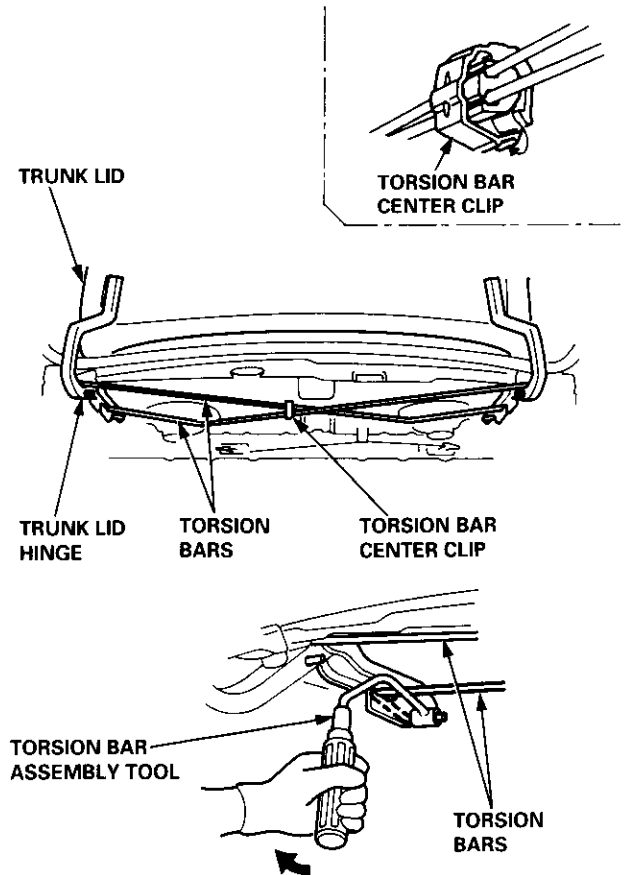

Installation is the reverse of the removal procedure.

NOTE:

- Adjust the torsion bars fore or aft with the torsion bar assembly tool as shown.

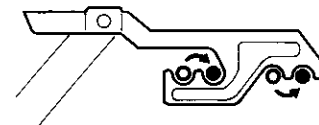

- = Normal position
- = Higher tension

- Make sure the trunk lid opens properly.

Trunk Lid/Hatch Weatherstrip

License Plate Trim


Replacement

When installing the trunk lid/hatch weatherstrip, align it with the alignment mark on the trunk lid/hatch opening.



NOTE:

- Make sure there are no wrinkles in the weatherstrip.
- Check for water leaks.

2D/4D:

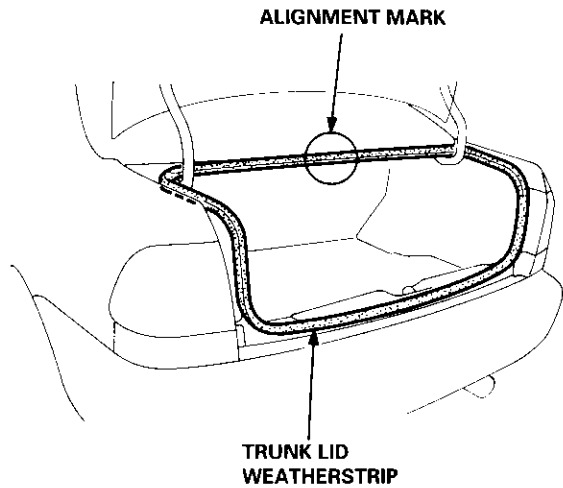

3D:

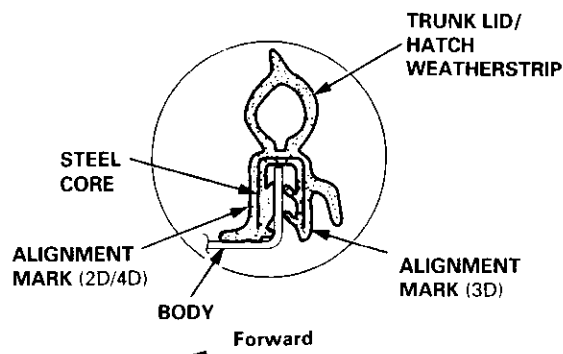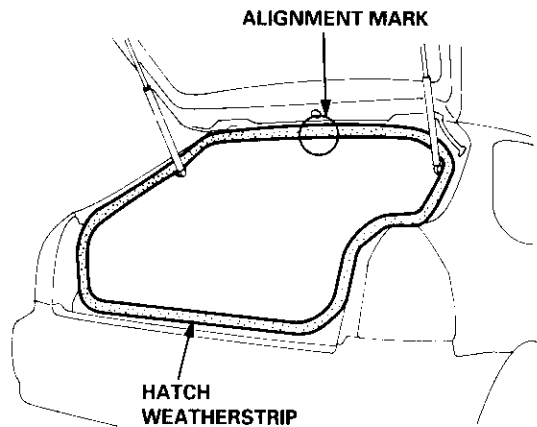

Replacement

CAUTION: Wear gloves to remove and install the license plate trim.

NOTE: Take care not to scratch the trunk lid/hatch.


1. Remove the license plate.
2. 3D: Remove the hatch trim panel (see page 20-63).
3. Remove the nuts and clips, and detach the clip, then remove the license plate trim.

NOTE: Take care not to drop the nuts inside the trunk lid/hatch.

●: Nut locations, 2

▷: Clip locations, 3

5 x 0.8 mm
1.8 N·m (0.18 kgf·m,
1.3 lbf·ft)

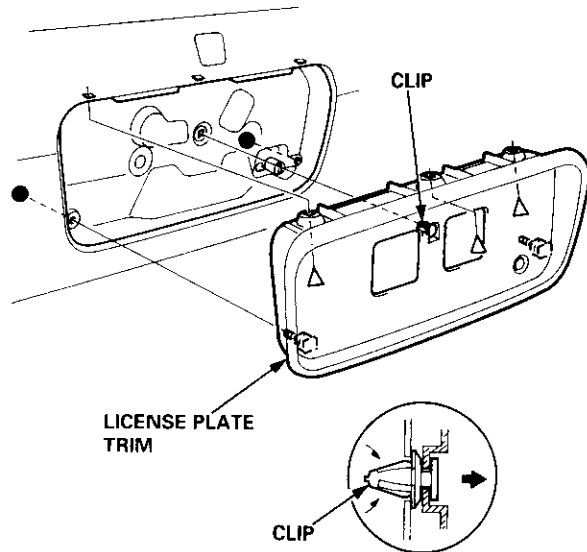

4. Installation is the reverse of the removal procedure.

NOTE: If necessary, replace any damaged clips.

Hatch Spoiler



Removal



NOTE: Take care not to scratch the hatch and body.

1. Remove the hatch upper trim (see page 20-63).
2. Remove the nuts, and detach the clip, then lift the hatch spoiler up.

●: Nut locations, 4



6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

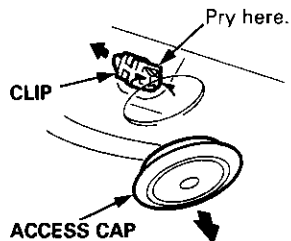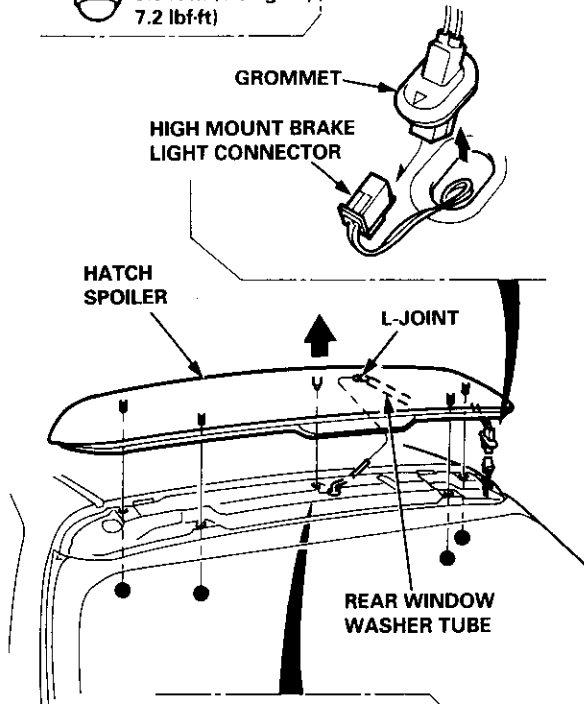

3. Disconnect the high mount brake light connector and rear window washer tube, then remove the hatch spoiler.

4. If necessary, remove the spoiler trim from the spoiler frame.


NOTE: The hatch spoiler trim for Canada produced cars cannot be disassembled.

▷: Clip locations


A ▷, 4



B ▷, 8

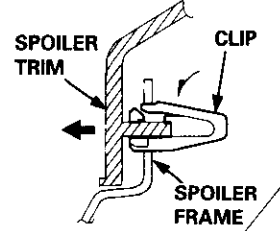

▷: Screw locations, 4

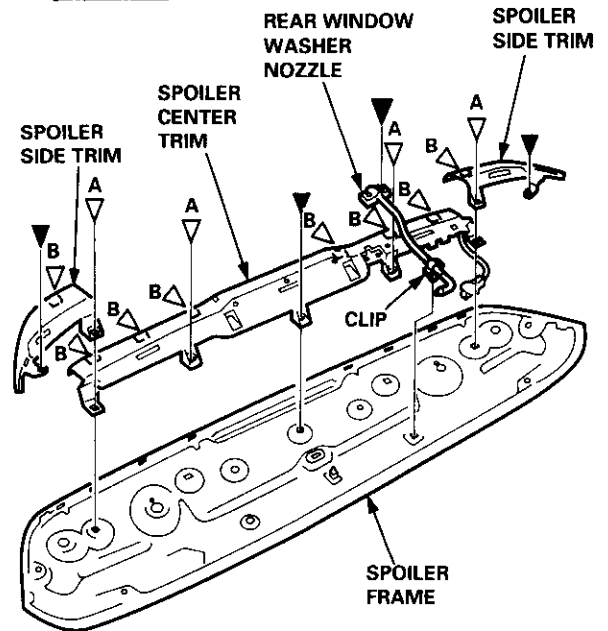

5. Installation is the reverse of the removal procedure.

NOTE:

- If necessary, replace any damaged clips.
- Make sure the connector and washer tube are connected properly.

Side Window Moldings

Roof Molding



Replacement

CAUTION: Wear gloves to remove and install the side window moldings.



NOTE:

- Take care not to scratch the body.
- Remove the screw, and pull the side window molding by hand.


▷: Clip locations
A ▷, 13

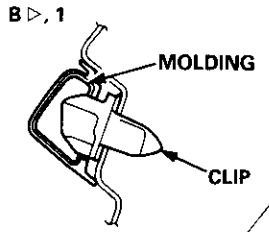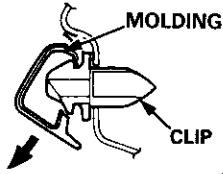

C ▷, 1

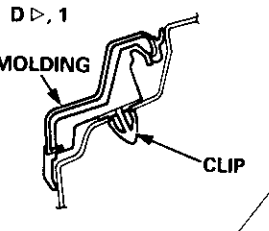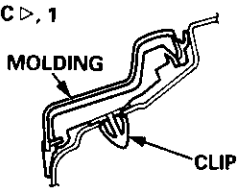

▷: Screw locations, 1

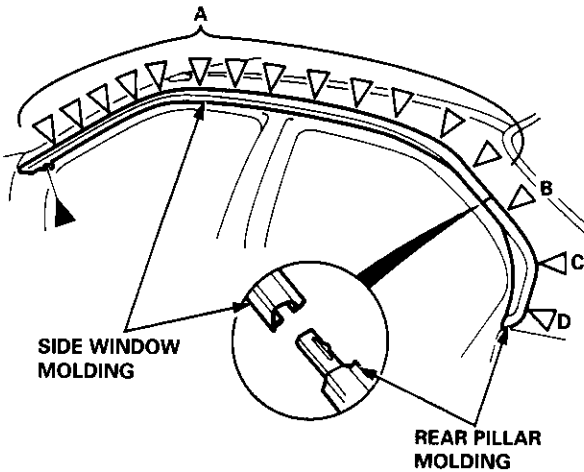




Installation is the reverse of the removal procedure.

NOTE: If necessary, replace any damaged clips.

Replacement

CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage, and use protective tape on the body.


NOTE: Take care not to scratch the body.

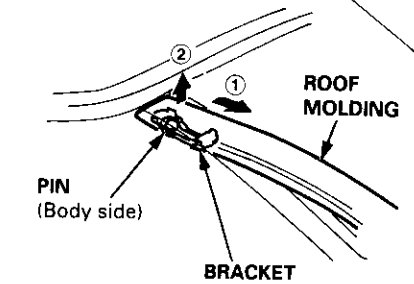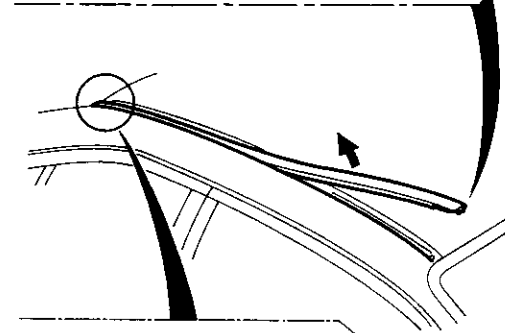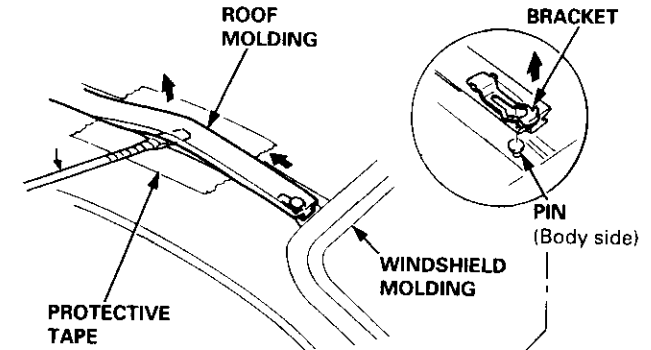

Installation is the reverse of the removal procedure.

NOTE:

- Take care not to damage the windshield molding.
- Make sure the roof molding is installed securely.

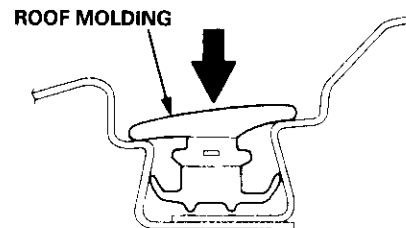



Door and Side Moldings


Replacement

CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.


NOTE:

- To remove the front side molding, remove the inner fender (see page 20-106).
- To remove the door molding, remove the door panel (see pages 20-4, 10, 16) and plastic cover.
- To remove the rear side molding, remove the side trim panel (see pages 20-60, 61).
- Take care not to bend the door moldings.
- Before reassembling, clean the door bonding surface with a sponge dampened in alcohol.
- After cleaning, keep oil, grease and water from getting on the surface.
- If necessary, replace any damaged clips.

4D:

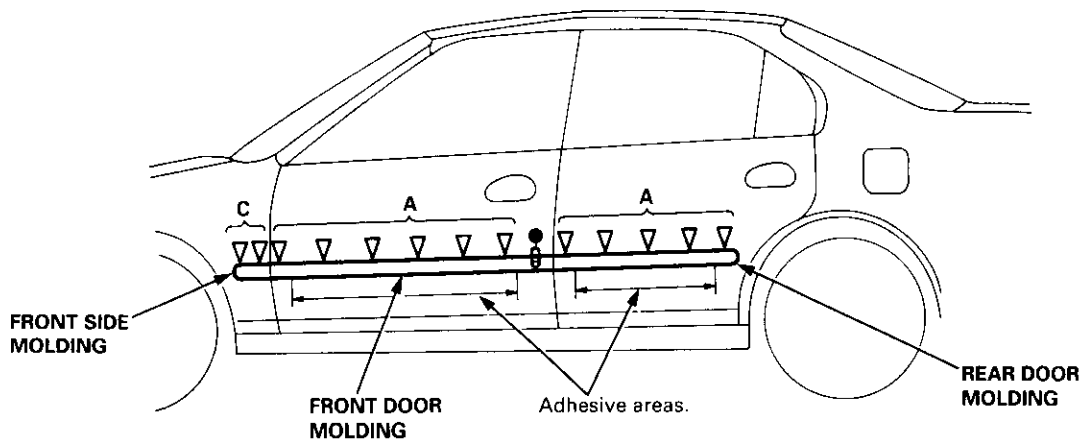


2D/3D:

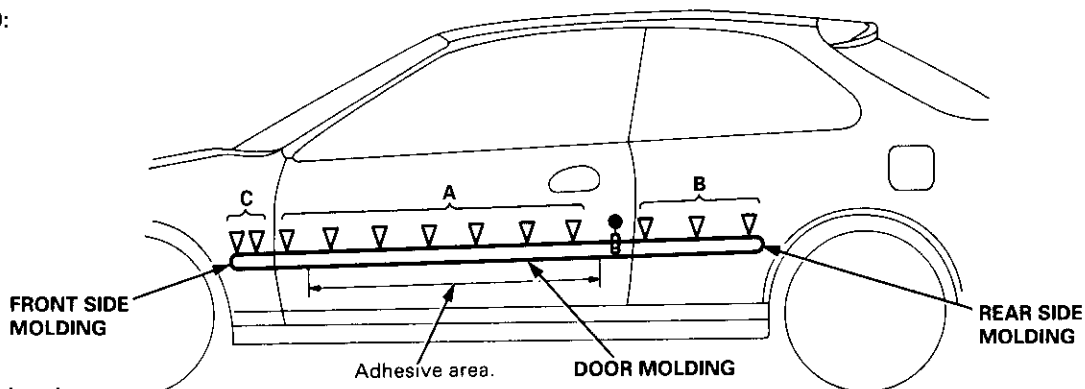


▷: Clip locations


A▷: 4D, 11
2D/3D, 7

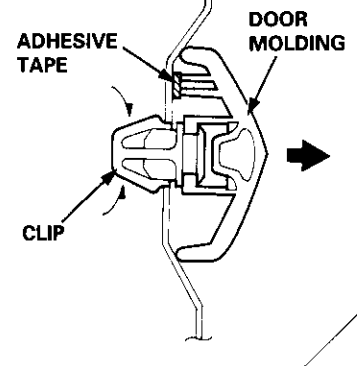


B▷, 3

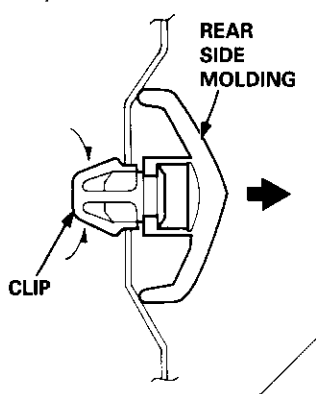

C▷, 2

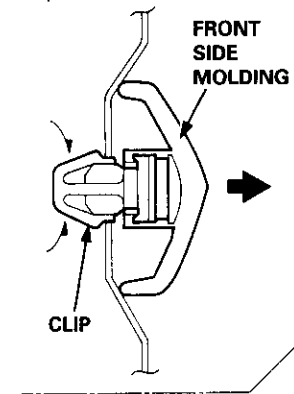

●: Plastic nut location, 1

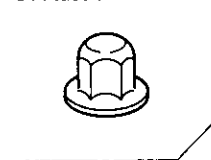

(cont'd)

Door and Side Moldings

Replacement (cont'd)

Door molding removal:

The following materials and tools are required to repair the door moldings.

NOTE: Follow the manufacturer's instructions.

Materials: (Reference)


- Stripe remover
3M 08907
- Stripe adhesive remover
3M 08908
- Adhesive tape
3M Super Automotive Attachment Tape

Tools:

- Protective tape
- Knife or Cutter
- Sponge or Shop towel
- Infrared dryer
- Film
- Putty knife
- Alcohol


CAUTION: Wear gloves to remove and install the door moldings.

1. Remove the door panel, and pull back the plastic cover.
2. Apply protective tape on and around the molding.

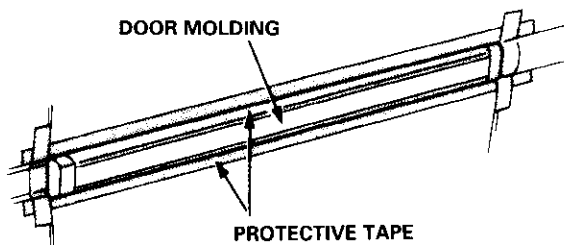



3. Release the clips from inside of the door. Carefully cut the adhesive tape with a knife or cutter while pulling the edge of the molding away from the door as shown.

NOTE: Take care not to scratch or bend the molding.

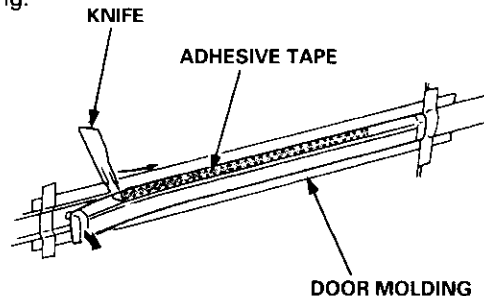

Door molding installation:

1. Glue the new adhesive tape to the moldings as shown.

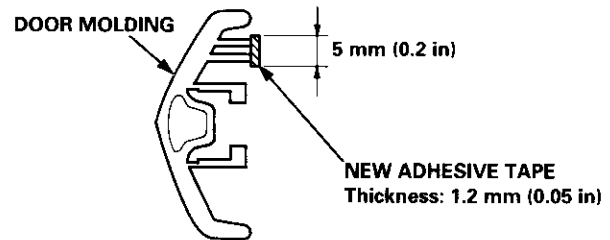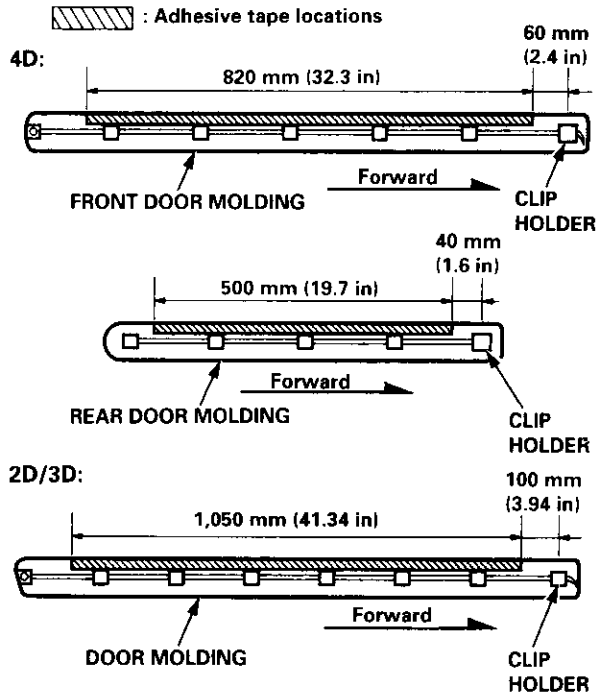

2. Install the clips on the molding.
3. Heat the bonding surface of the door and door molding with an infrared dryer.
 - Door: 104 – 140°F (40 – 60°C)
 - Molding: 68 – 86°F (20 – 30°C)

NOTE: Use care when heating to prevent deformation of the molding.

4. Align the molding with the clip locations, and set the molding. Lightly push on the molding until its edge is fully seated on the adhesive tape.

NOTE: Do not spray water on the molding within the first 24 hours after installation.

5. Reassemble all removed parts.



Side Sill Panel


Replacement

NOTE:

- Take care not to scratch the body.
- 4D shown here; 2D and 3D removal procedure is the same as 4D.


▷: Clip locations

A ▷, 3

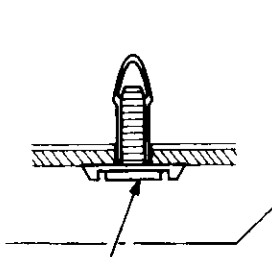



NOTE: Loosen the screw, then remove the lower clip using a clip remover.

B ▷, 7

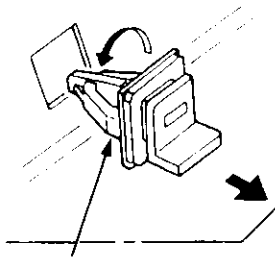


SIDE CLIP
Remove the side clips from the body by turning them 45°

▷: Screw locations, 4

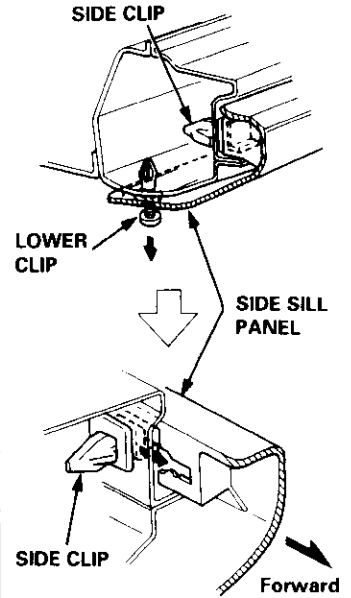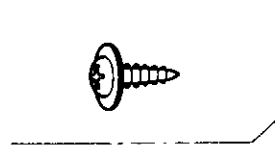

NOTE: When removing the side sill panel, the side clips will stay in the body.

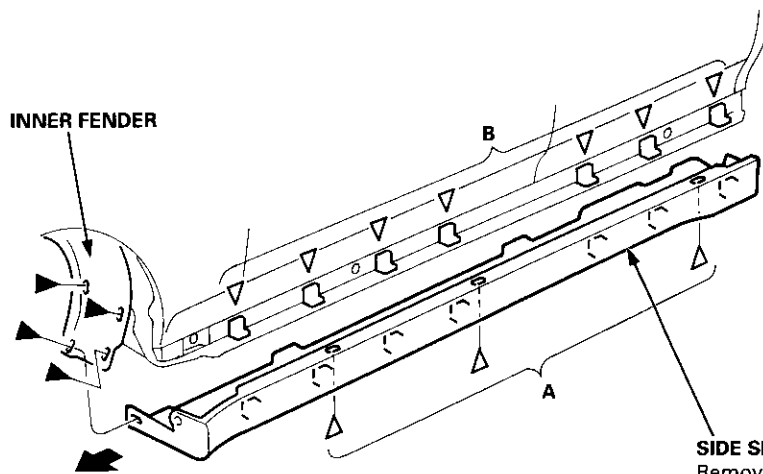

SIDE SILL PANEL
Remove the lower clips, then remove the side sill panel by sliding it forward.

To install the side sill panel, remove the side clips from the body, install them on the side sill panel, then install the side sill panel on the car.

NOTE:

- Take care not to twist the side sill panel.
- If necessary, replace any damaged side and lower clips.

Inner Fender, Fenderwell Trim, Fuel Pipe Protector and Rear Air Outlet

Replacement



NOTE: If necessary, replace any damaged clips.

Inner fender:

►: Screw locations, 4



▷: Clip locations, 7

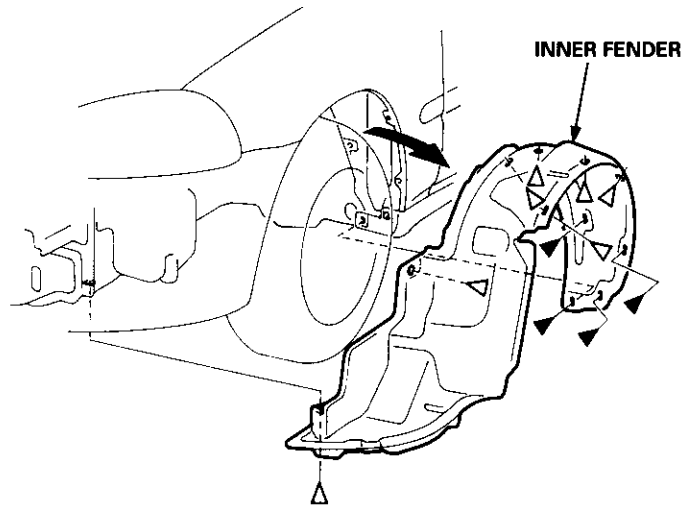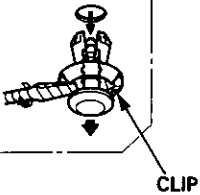


Fenderwell trim/Fuel pipe protector/Rear air outlet:

NOTE:


- Take care not to bend the fenderwell trim.
- Before installing the fenderwell trim, clean the body bonding surface with a sponge dampened in alcohol.
- After cleaning, keep oil, grease or water from getting on the surface.
- To remove the fuel pipe protector, first remove the rear wheel (see section 18).
- To remove the rear air outlet, first remove the rear bumper (see page 20-95).

▷: Clip locations




A ▷, 4

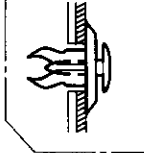

B ▷, 4

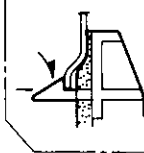

C ▷, 2

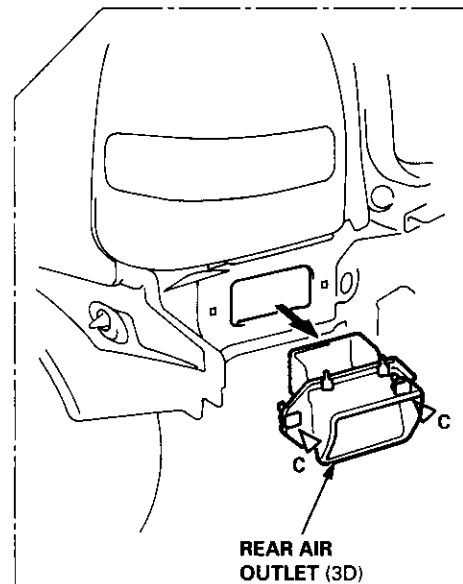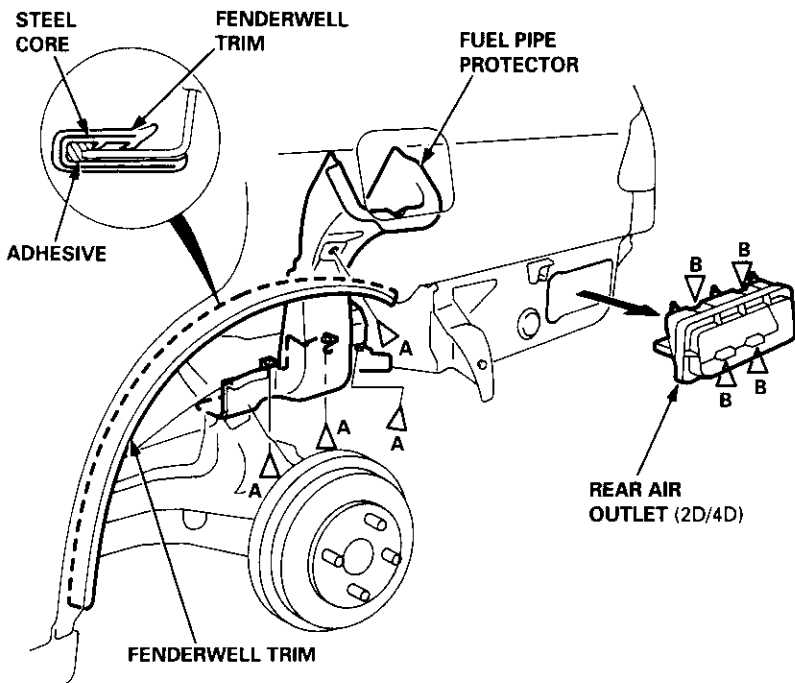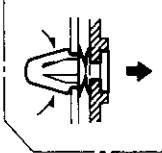


Opener Cable/Opener and Latch/Wiper and Washer




Component Location Index

2D/3D/4D:

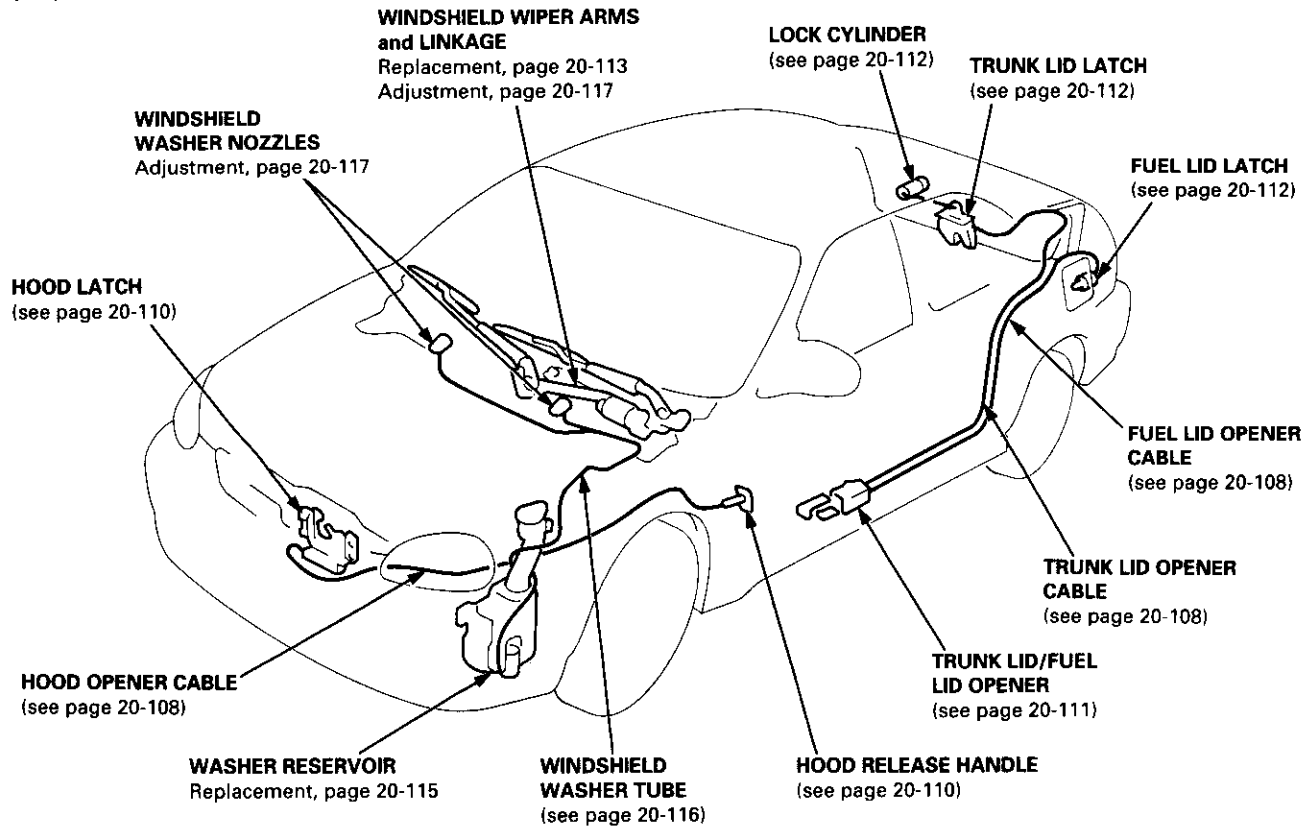

3D:

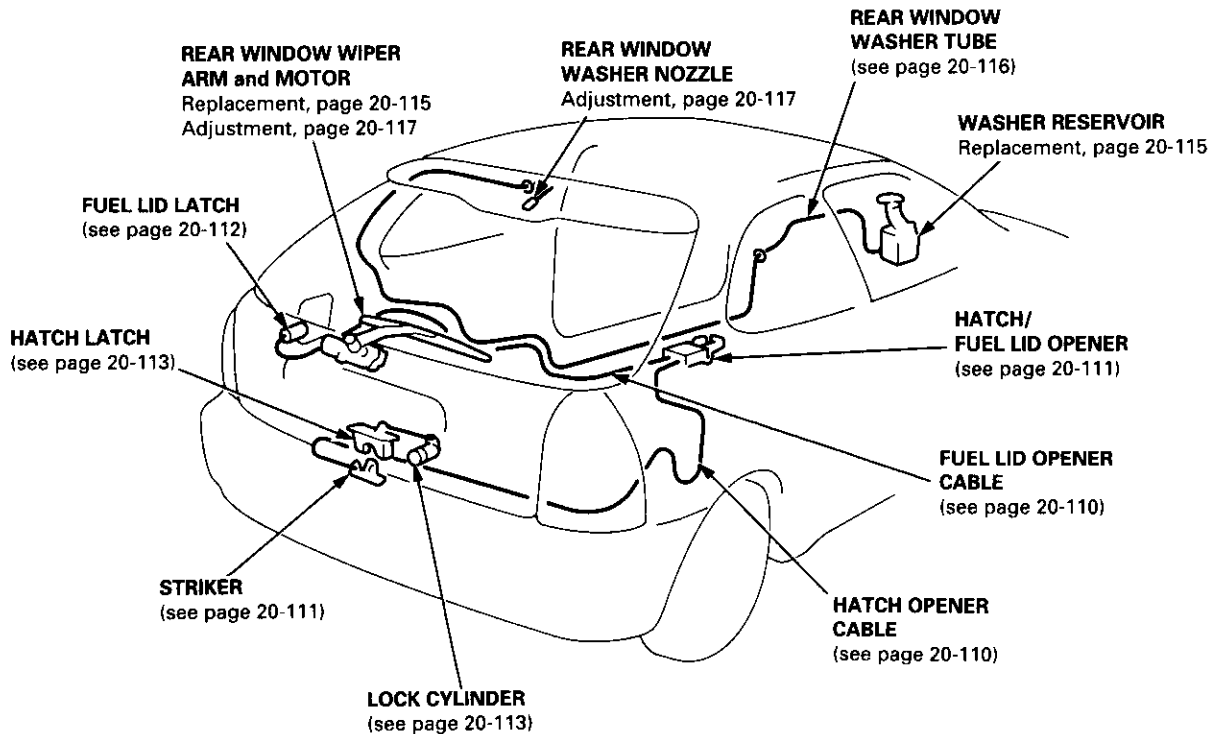

Opener Cables

Replacement

NOTE:

- When removing the clips, use a clip remover.
- Take care not to bend the opener cables.


Hood opener cable:

NOTE: Remove the front bumper (see page 20-94) and inner fender (see page 20-106).

▷: Clip locations

A ▷, 5


B ▷, 1

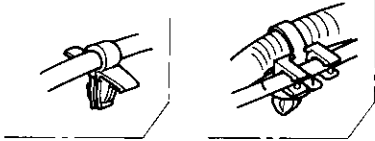

HOOD RELEASE HANDLE
(see page 20-110)

HOOD LATCH
(see page 20-110)

HOOD OPENER CABLE

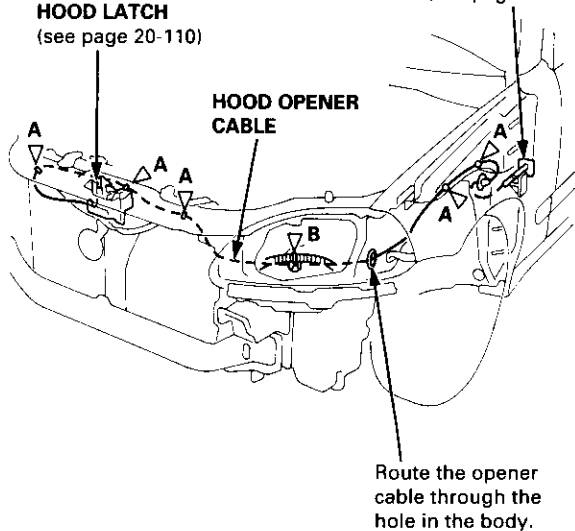

Route the opener cable through the hole in the body.

Installation is the reverse of the removal procedure.

NOTE:

- Make sure the hood opener cable is routed and connected properly.
- Make sure the hood opens properly.

Trunk lid/Fuel lid opener cable (2D/4D):

NOTE: Remove the following parts from the left side of the vehicle, then pull the carpet back, as necessary (see page 20-66).


- Rear seat cushion (see pages 20-79, 81)
- Rear seat side bolster (4D, see page 20-79)
- Rear seat-back (2D, see page 20-81)
- Center pillar lower trim panel (4D, see page 20-59)
- Lower anchor bolt from the front seat belt (2D, see page 20-86)
- Side trim (see pages 20-59, 61)
- Seat side trim (4D, see page 20-59)
- Side trim panel (2D, see page 20-61)
- Trunk mat and spare tire lid
- Rear trim panel (see page 20-62)
- Trunk side trim, Japan-produced (see page 20-62)
- Trunk trim panel, USA-produced (see page 20-62)

▷: Clip, cable cushion locations

A ▷, 4


B ▷, 4D, 1
2D, 2




C ▷, 1 (4D)

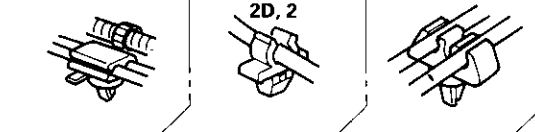

D ▷, 3

E ▷, 4D, 1
2D, 2

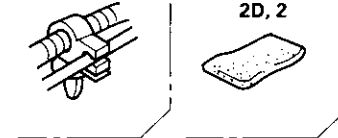

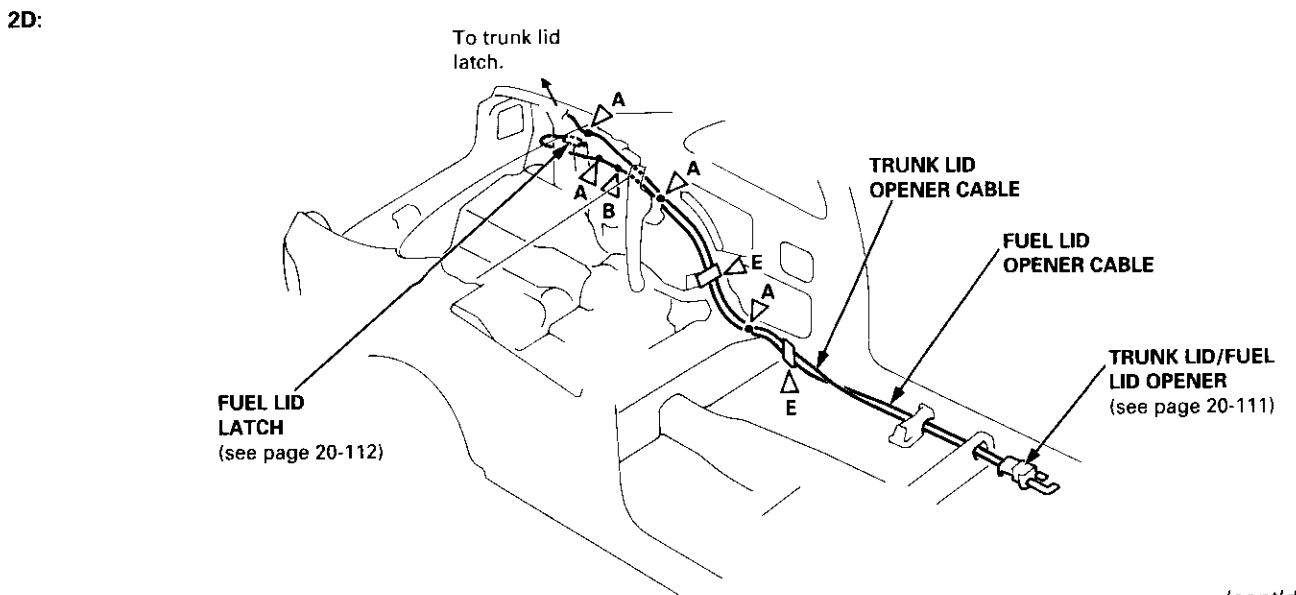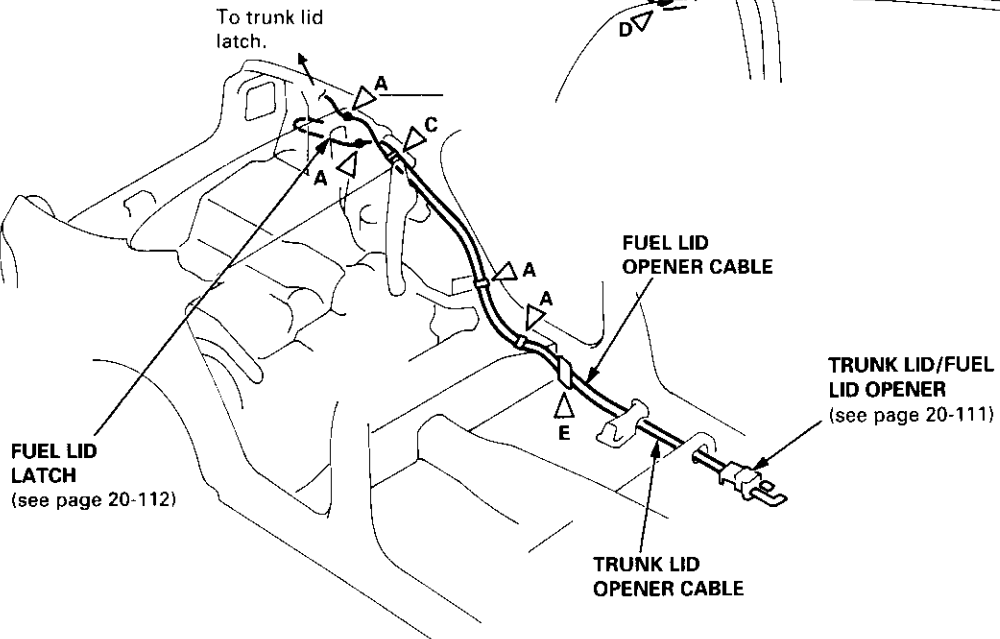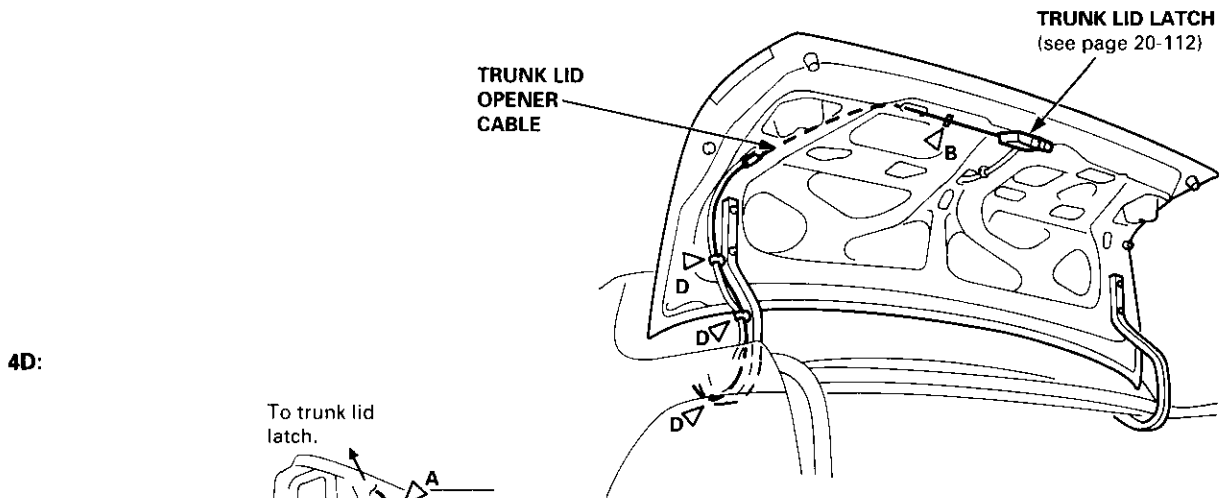

(cont'd)

Opener Cables

Opener and Latch

Replacement (cont'd)

Hatch/Fuel lid opener cable (3D):

NOTE: Remove the following parts, then pull the carpet back as necessary (see page 20-66).

- Rear seat cushion and rear seat-back (see page 20-80)
- Lower anchor bolt from the front seat belt (see page 20-86)
- Side trim (see page 20-60)
- Spare tire lid
- Rear center shelf and rear side shelf (see page 20-60)
- Rear trim panel (see page 20-60)
- Side trim panel (see page 20-60)


▷: Clip, cable cushion locations

A ▷, 9


B ▷, 1

C ▷, 1

D ▷, 5

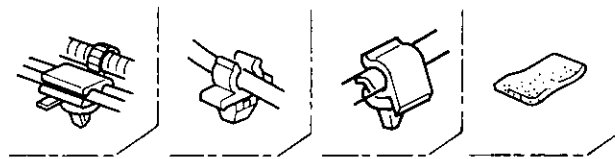

Route the opener cable through the hole in the body.

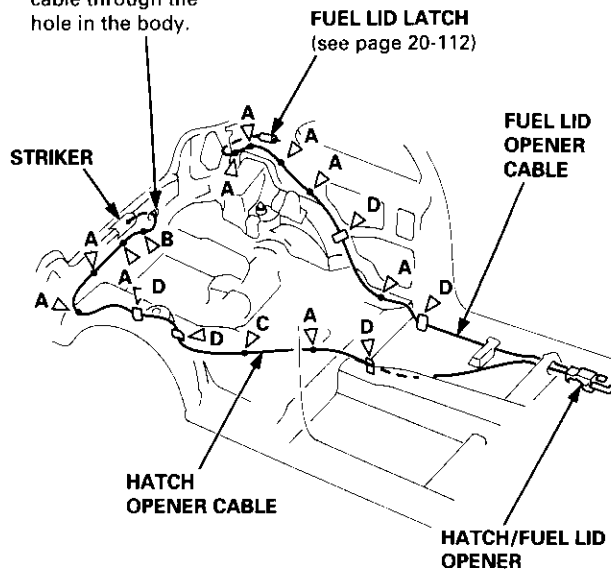

Installation is the reverse of the removal procedure.

NOTE:

- Make sure each opener cable is routed and connected properly.
- Make sure the hatch and fuel lid open properly.


Replacement

NOTE: Take care not to bend the opener cables.


Hood release handle:

NOTE: Remove the kick panel (see pages 20-59, 60, 61).

▷: Bolt locations, 2





HOOD OPENER CABLE (see page 20-108)

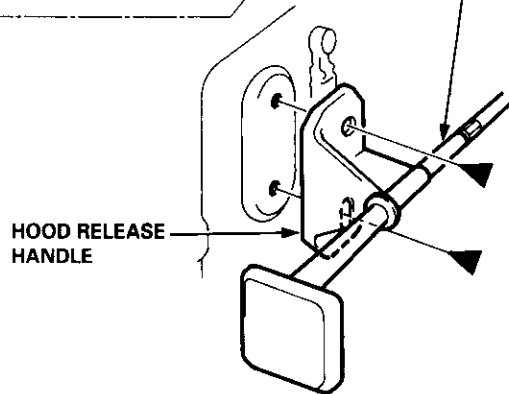

Hood latch:

NOTE: Remove the front bumper (see page 20-94).

▷: Bolt locations, 3

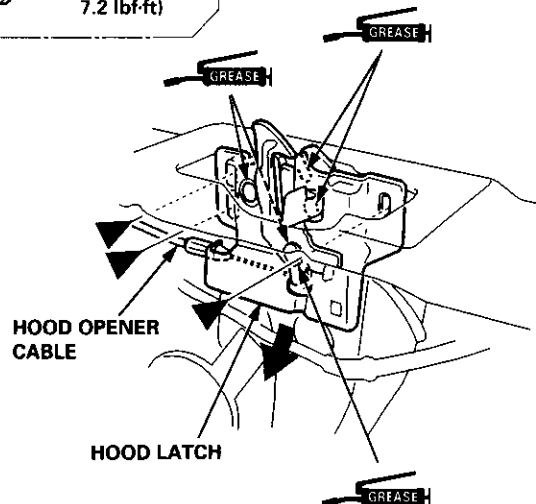

Installation is the reverse of the removal procedure.

NOTE:



- Make sure the opener cable is connected properly.
- Make sure the hood opens properly and locks securely.



Trunk lid or Hatch/Fuel lid opener:

NOTE: Remove the side trim (see pages 20-59, 60, 61).

►: Bolt locations, 2

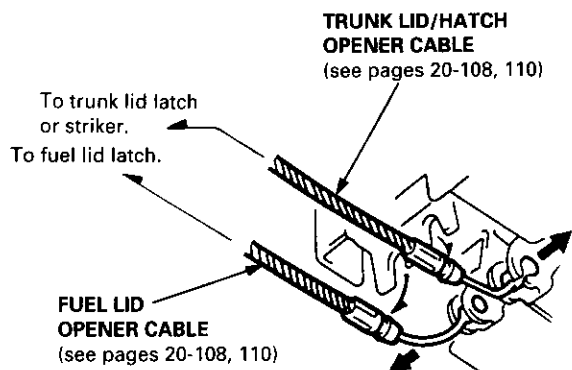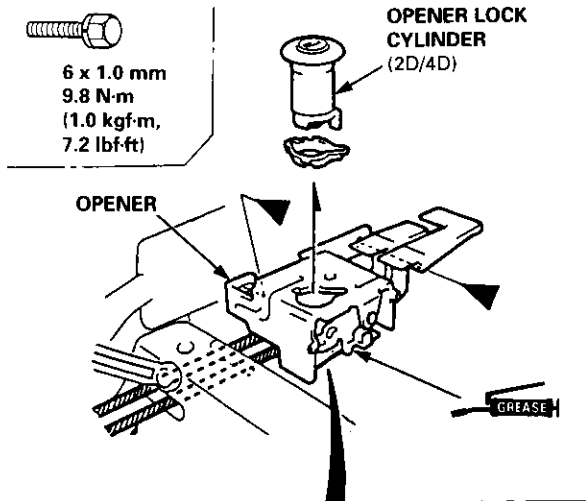

Installation is the reverse of the removal procedure.


NOTE:

- Make sure the opener cable is connected properly.
- Make sure the trunk lid or hatch and fuel lid open properly.

Striker (3D):

NOTE: Remove the rear trim panel (see page 20-60).

►: Bolt locations, 2

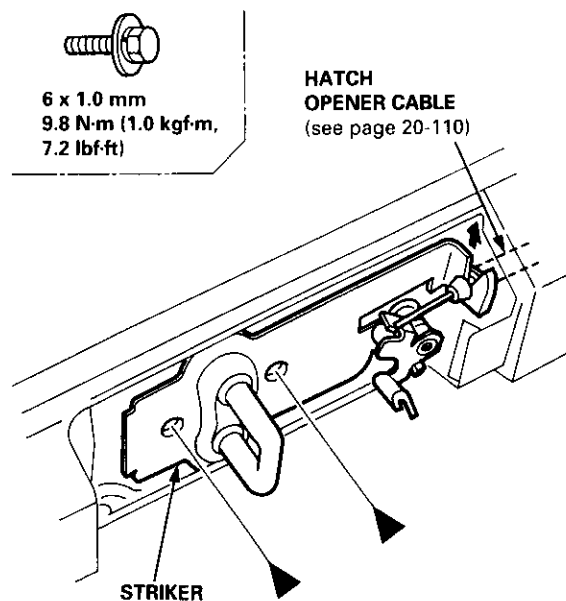

Installation is the reverse of the removal procedure.

NOTE:

- Make sure each opener cable is connected properly.
- Make sure the hatch opens properly and locks securely.

(cont'd)

Opener and Latch

Replacement (cont'd)

Fuel lid latch:

NOTE: Remove the following parts.


2D/4D:

- Rear trim panel (see page 20-62)
- Rear edge of the trunk side trim or trunk trim panel (left side, see page 20-62)

3D:

- Access panel on the side trim panel

►: Bolt locations, 2




FUEL LID LATCH

FUEL LID

After installing check for a flush fit with the body.

GREASE

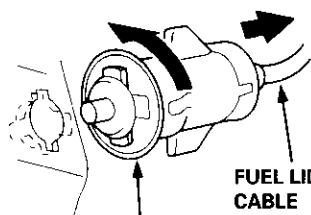

FUEL LID OPENER CABLE
(see pages 20-108, 110)

FUEL LID LATCH

Remove the fuel lid latch by turning it 90°

Installation is the reverse of the removal procedure.

NOTE:





- Make sure each opener cable is connected properly.
- Make sure the fuel lid opens properly and locks securely.

Trunk lid latch/Lock cylinder:


►: Bolt locations

A ►, 3

B ►, 1

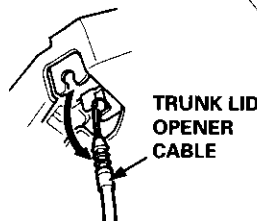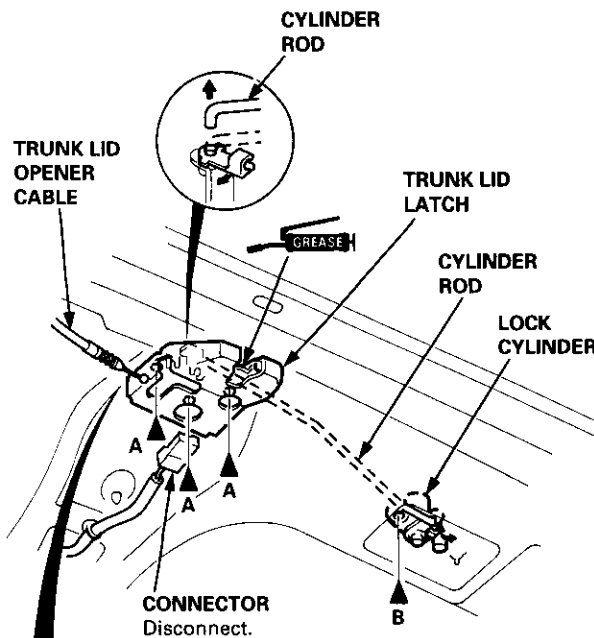

TRUNK LID OPENER CABLE

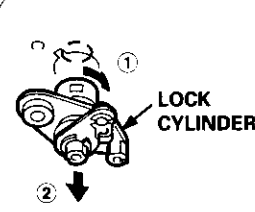

LOCK CYLINDER

Installation is the reverse of the removal procedure.

NOTE:

- Grease the trunk lid latch.
- Make sure the trunk lid opens properly and locks securely.
- Make sure the connector and cylinder rod are connected properly.




Hatch latch/Lock cylinder:



NOTE: Remove the hatch trim panel (see page 20-63).

► Bolt locations

A ►, 3



B ►, 1

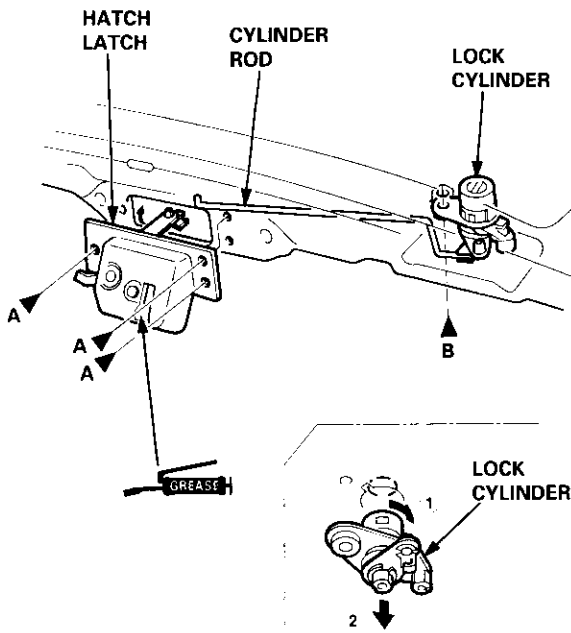

Installation is the reverse of the removal procedure.

NOTE:


- Grease the hatch latch.
- Make sure the hatch opens properly and locks securely.
- Make sure the cylinder rod is connected properly.

Replacement

CAUTION: Wear gloves to remove and install the windshield wiper linkage.


NOTE: Take care not to scratch the hood and body.

1. Remove the windshield wiper arms, then remove the hood seal and cowl cover.

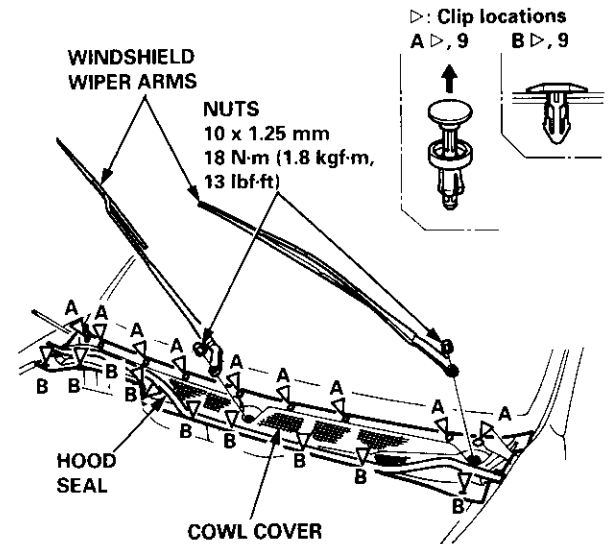

2. Disconnect the connector, then remove the windshield wiper linkage assembly.

Japan/Canada-produced:

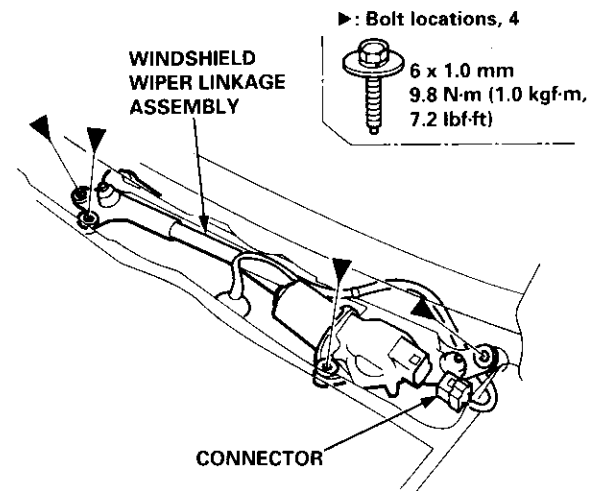


(cont'd)

Windshield Wiper Arms and Linkage

Replacement (cont'd)


USA-produced:

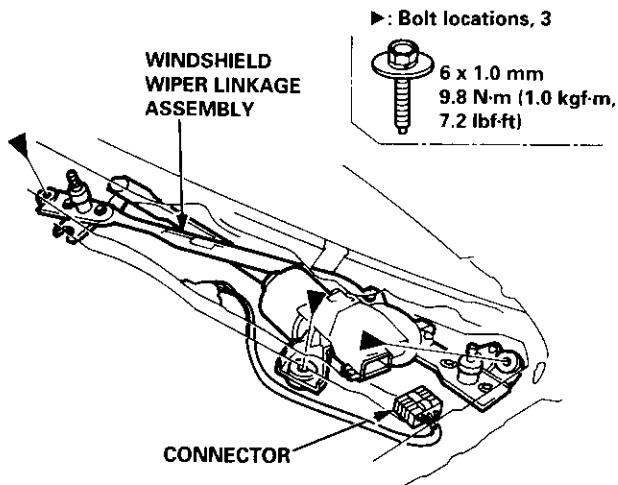

3. Separate the windshield wiper linkage and windshield wiper motor.


Japan/Canada-produced:

NOTE: Scribe a line across the link and windshield wiper linkage to show the original adjustment.

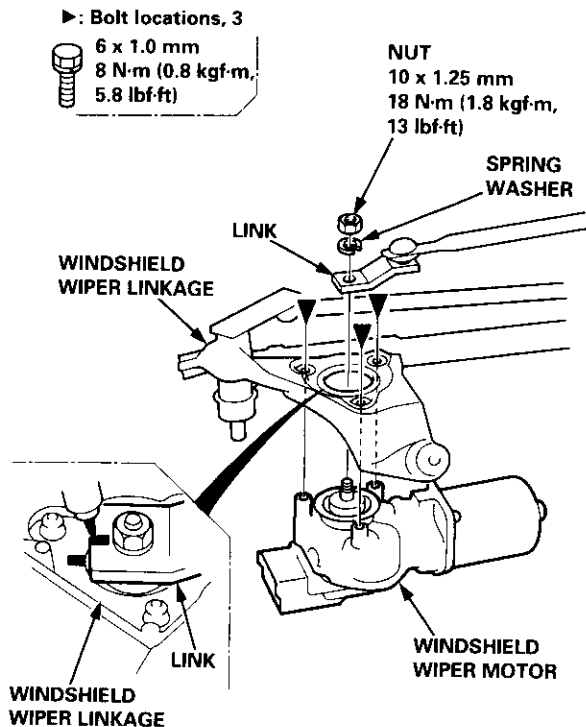

USA-produced:

NOTE: Scribe a line across the link and windshield wiper motor to show the original adjustment.

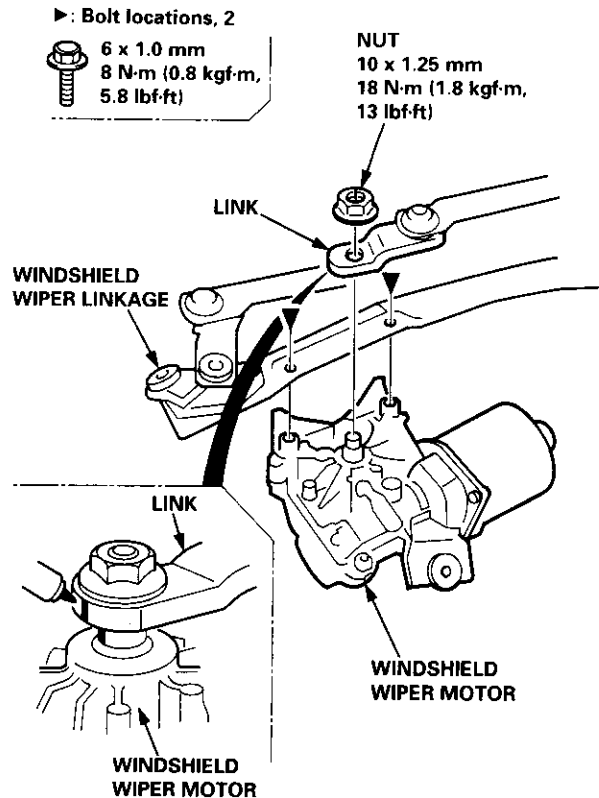

4. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the connector is connected properly.
- If necessary, replace any damaged clips.
- Install the windshield wiper arms as described on page 20-117.
- Check the windshield wiper motor operation.
- Grease the moving parts.

Rear Window wiper Arm and Motor

Washer Reservoir




Replacement

1. Remove the hatch trim panel (see page 20-63).
2. Remove the rear window wiper arm and wiper motor as shown.

►: Bolt locations, 3



6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

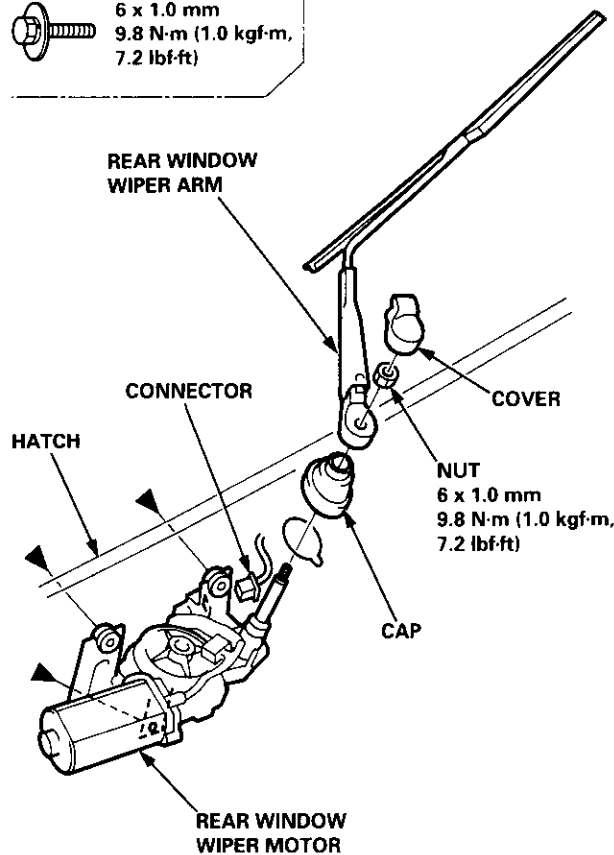

3. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the connector is connected properly.
- Install the rear window wiper arm as described on page 20-117.
- Check the rear window wiper motor operation.
- Grease the moving parts.


Replacement

1. Remove the front bumper (see page 20-94).
2. Disconnect the connectors and washer tubes from the washer motors.

►: Bolt locations, 3



6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

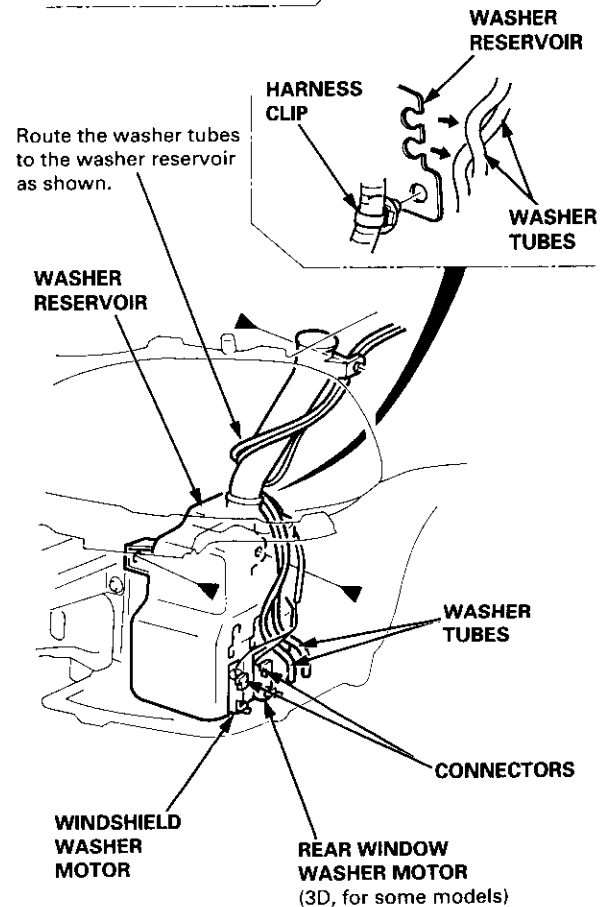

3. Remove the bolts, then remove the washer reservoir.
4. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the washer motor connectors and washer tubes are connected properly.
- Check the washer motor operation.

Washer Tube

Replacement

NOTE:

- To remove the windshield washer tube, remove the left inner fender (see page 20-106).
- To remove the rear window washer tube (3D), remove the following parts from the left side of the vehicle.




- Inner fender (see page 20-106)
- Kick panel and side trim (see page 20-60)
- Rear seat-back and rear seat cushion (see page 20-80)
- Spare tire lid
- Rear center shelf and rear side shelf (see page 20-60)
- Rear trim panel and side trim panel (see page 20-60)
- Quarter trim panel (see page 20-60)
- Rear roof trim (see page 20-65)
- Hatch spoiler (see page 20-101)

▷: Washer nozzle, clip and cushion locations

A ▷, 2

B ▷, 3






C ▷, 1

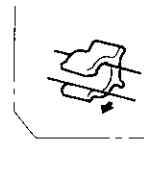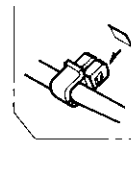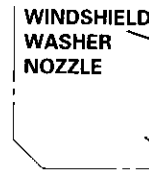

D ▷, 1

E ▷, 1

F ▷, 11

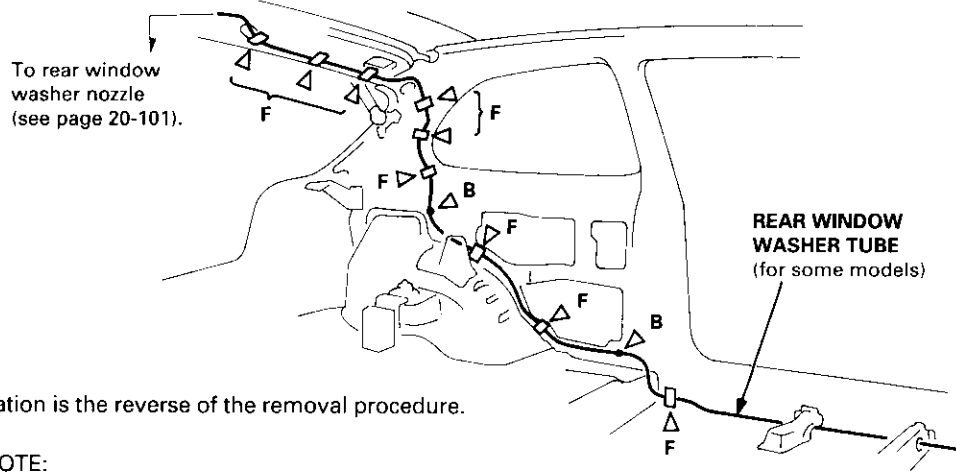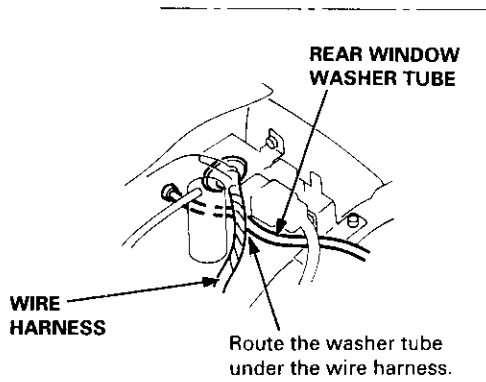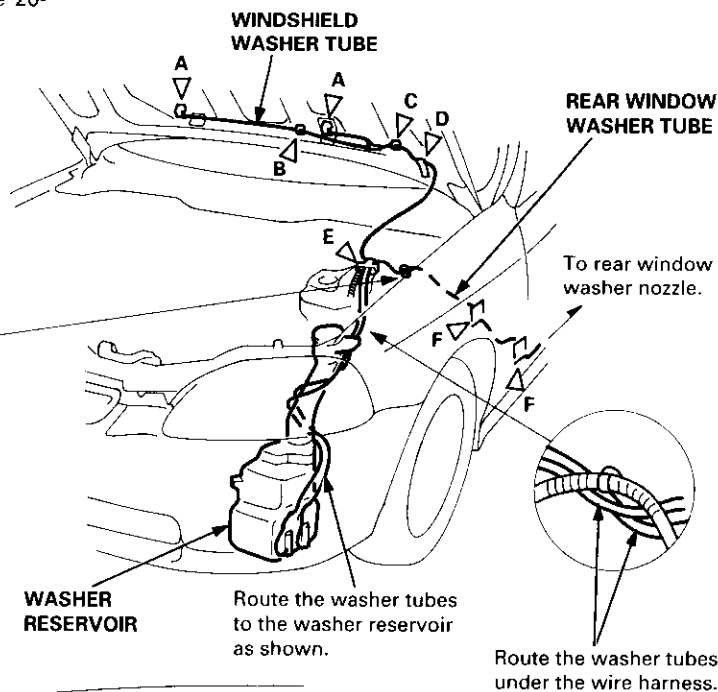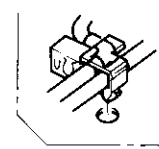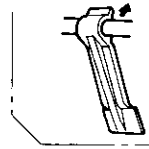

Installation is the reverse of the removal procedure.

NOTE:

- Take care not to pinch the washer tubes.
- If necessary, replace any damaged clips.
- After installing, adjust the aim of the washer nozzles (see page 20-117).




Wiper Arms/Washer Nozzles

Adjustment

Windshield Wiper/Washer:

1. Adjust the wiper arms so that their park positions match the illustration.

View from front to rear

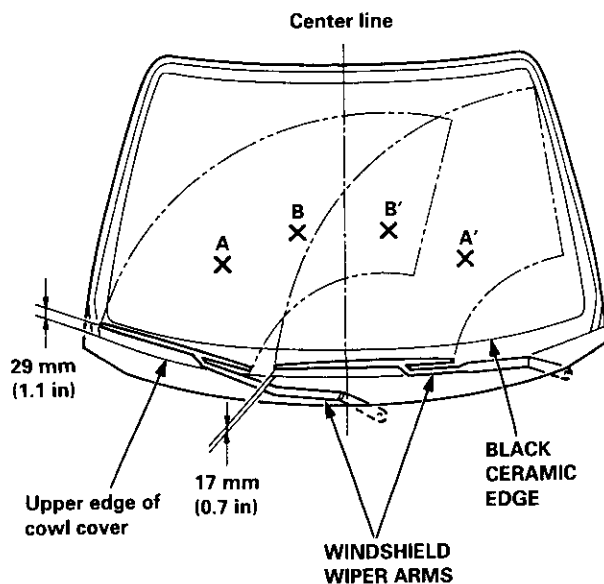

2. By inserting a tack and moving it as necessary, adjust the washer nozzles so that they aim at positions A, A', B, and B' shown in the illustration.


NOTE: The fluid jets should hit within a 50 mm (2.0 in) radius around each of points A, A', B, and B'.

Nozzle aim	Distance from center line	Distance from black ceramic edge
A and A'	400 mm (15.7 in)	255 mm (10.0 in)
B and B'	115 mm (4.5 in)	322 mm (12.7 in)

Rear Window Wiper/Washer (3D):

1. Adjust the rear window wiper arm so that its park position matches the illustration.

View from rear to front

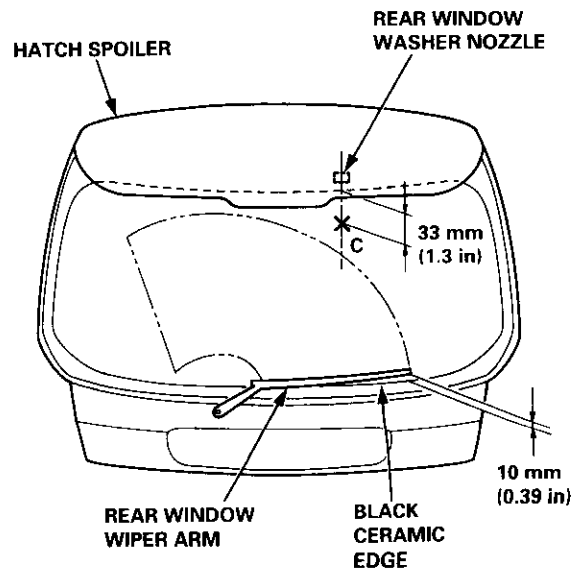

2. By inserting a tack and moving it as necessary, adjust the washer nozzle so that it aims at position C as shown in the illustration.

NOTE: The fluid jet should hit within a 50 mm (2.0 in) radius around point C.

Emblems

Installation

Apply the emblems where shown.


NOTE:

- Before applying, clean the body surface with a sponge dampened in alcohol.
- After cleaning, keep oil, grease and water from getting on the surface.


Attachment Points (Reference):

Unit: mm (in)


4D:

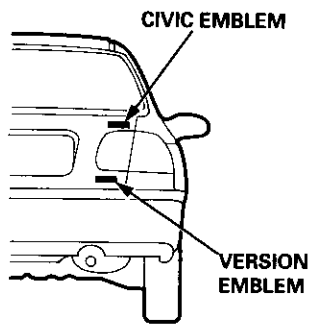


3D:

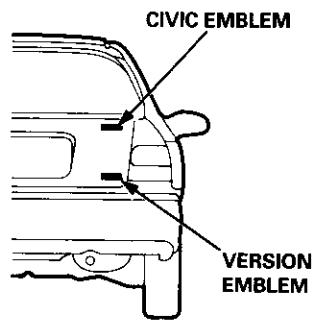

2D:

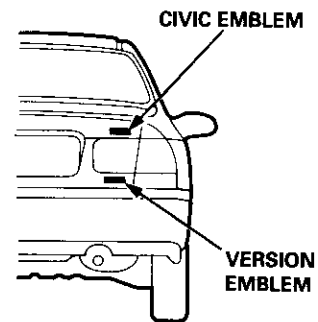


CIVIC emblem

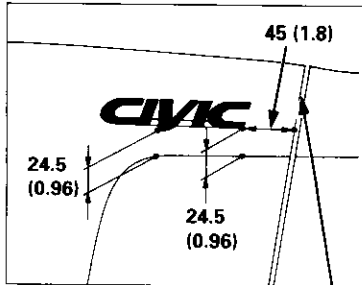


TRUNK LID

CIVIC emblem

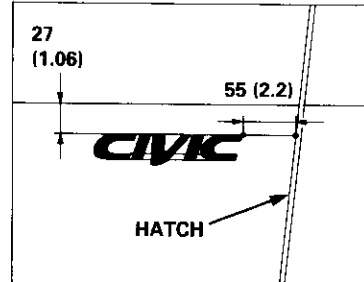


HATCH

CIVIC emblem

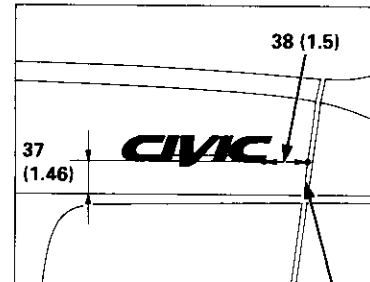


TRUNK LID

Version emblem

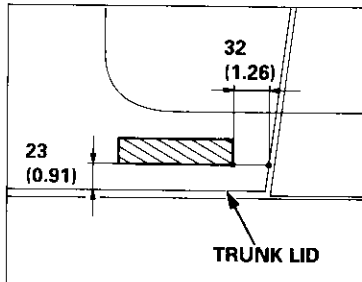


TRUNK LID

Version emblem

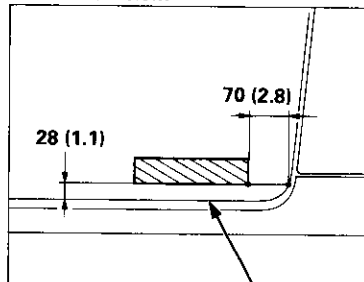

HATCH

Version emblem

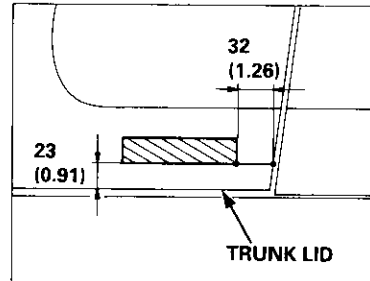



TRUNK LID



Sub-frame


Sub-frame Torque Sequence:

CAUTION: After loosening the sub-frame mounting bolts, be sure to replace them with new ones.

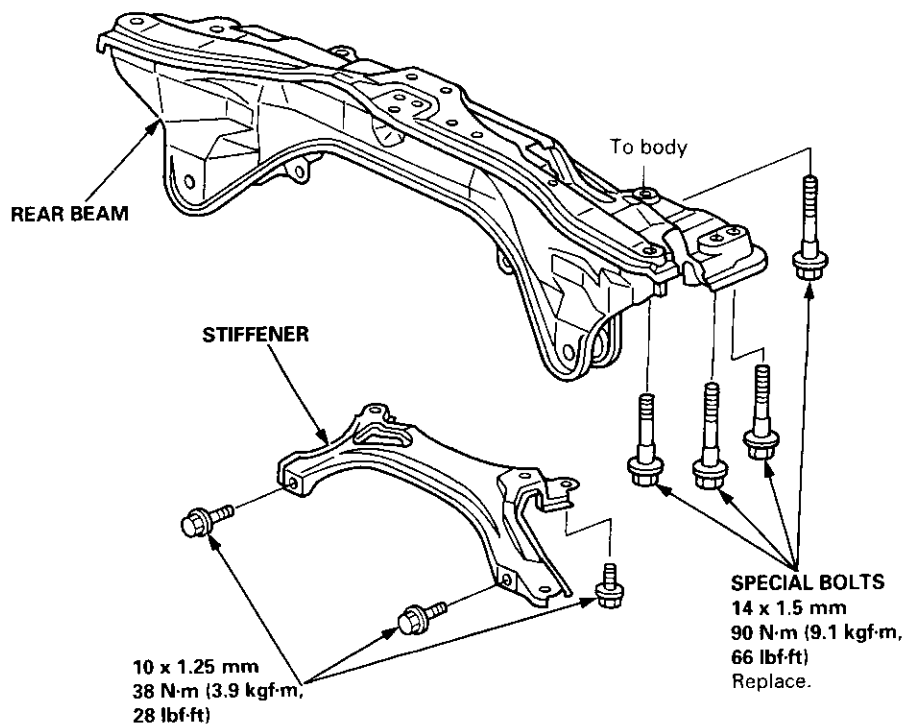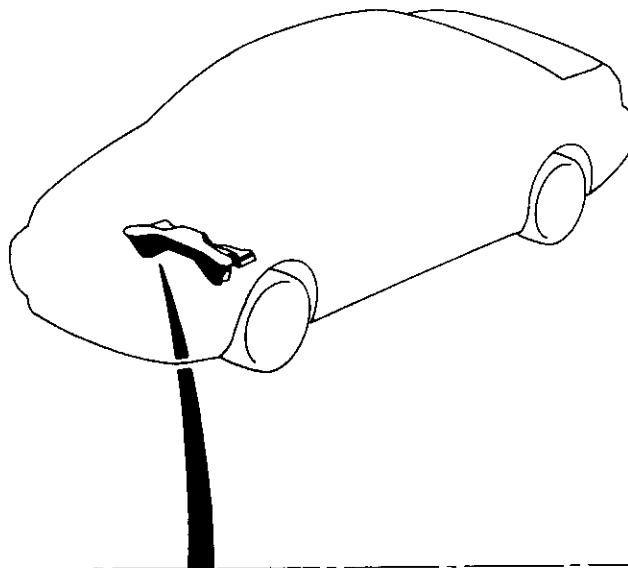



Frame Repair Chart

Unit: mm (in)
 ø: Inner diameter

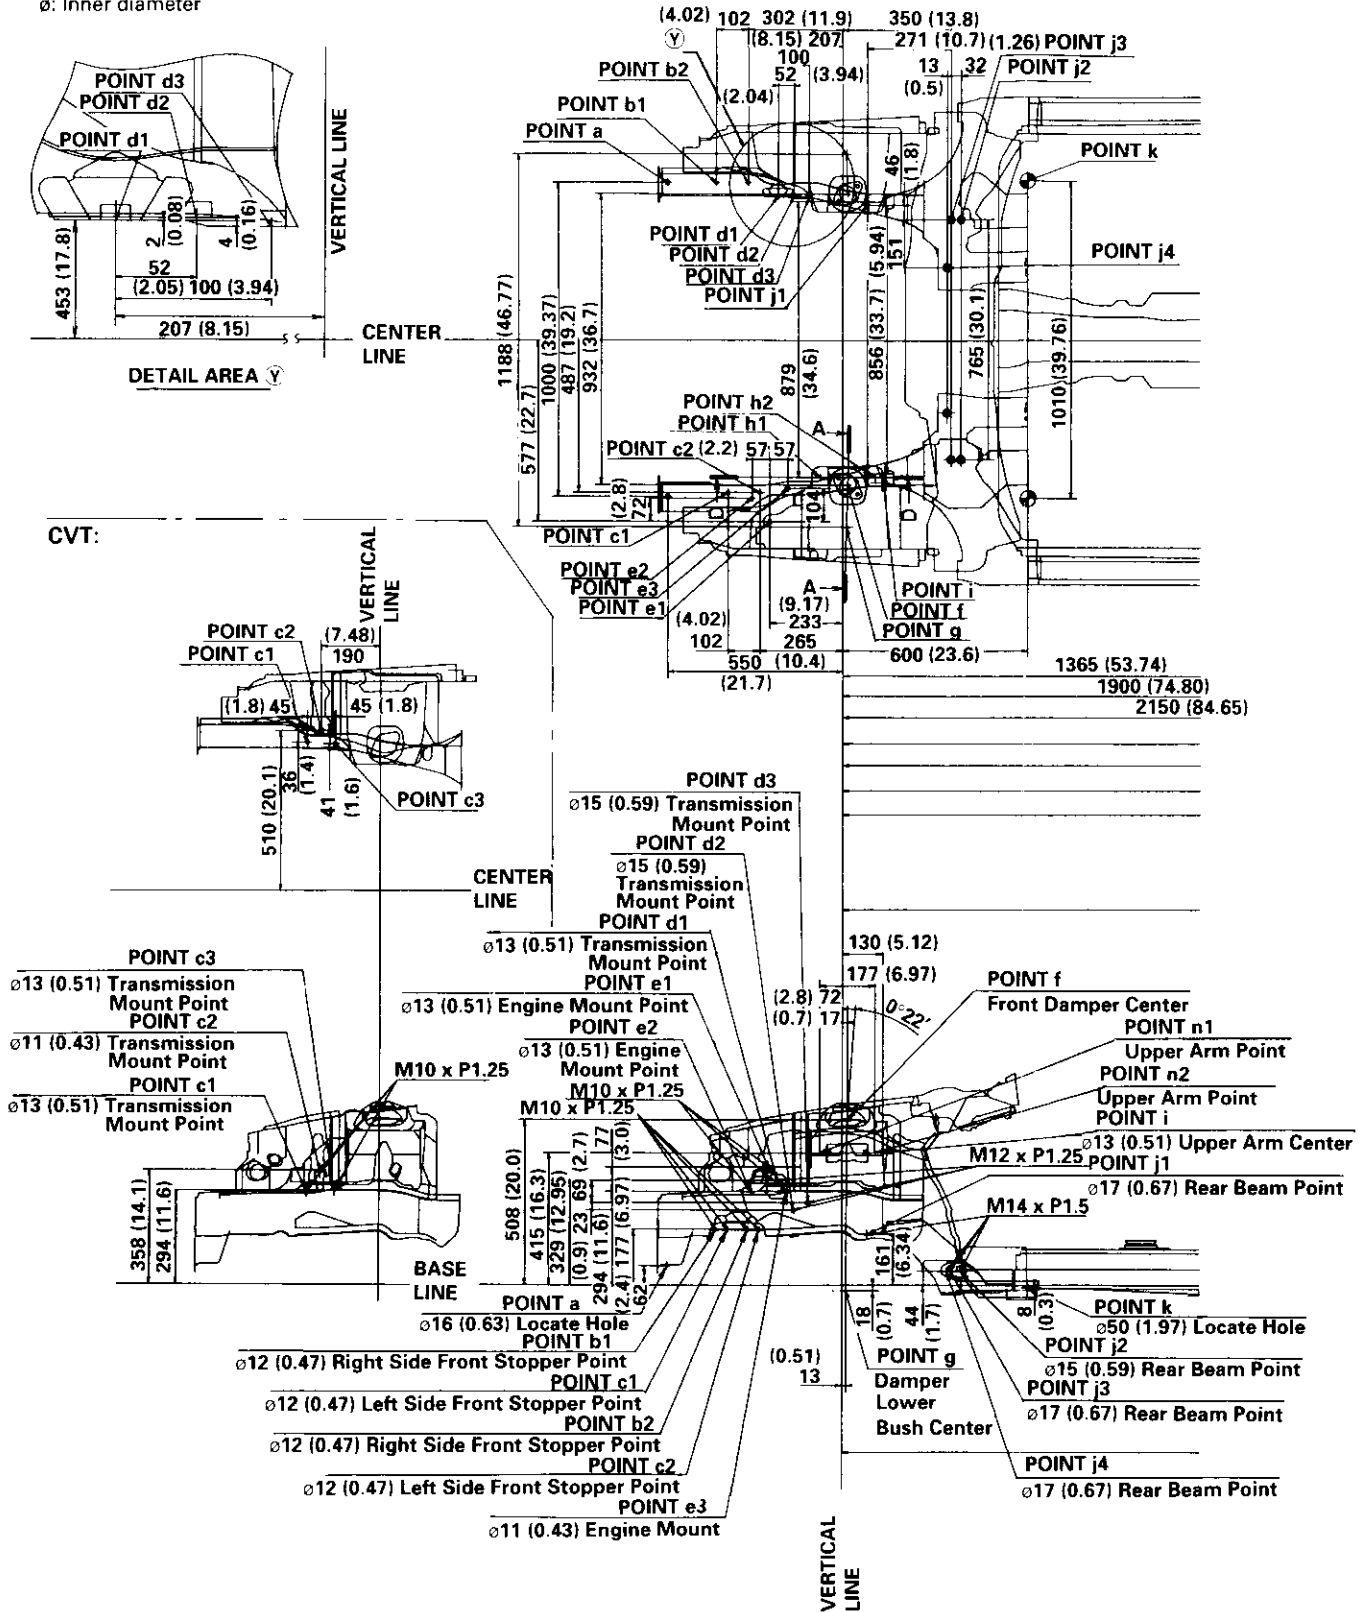






[]: 3D

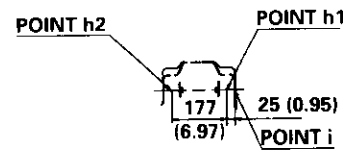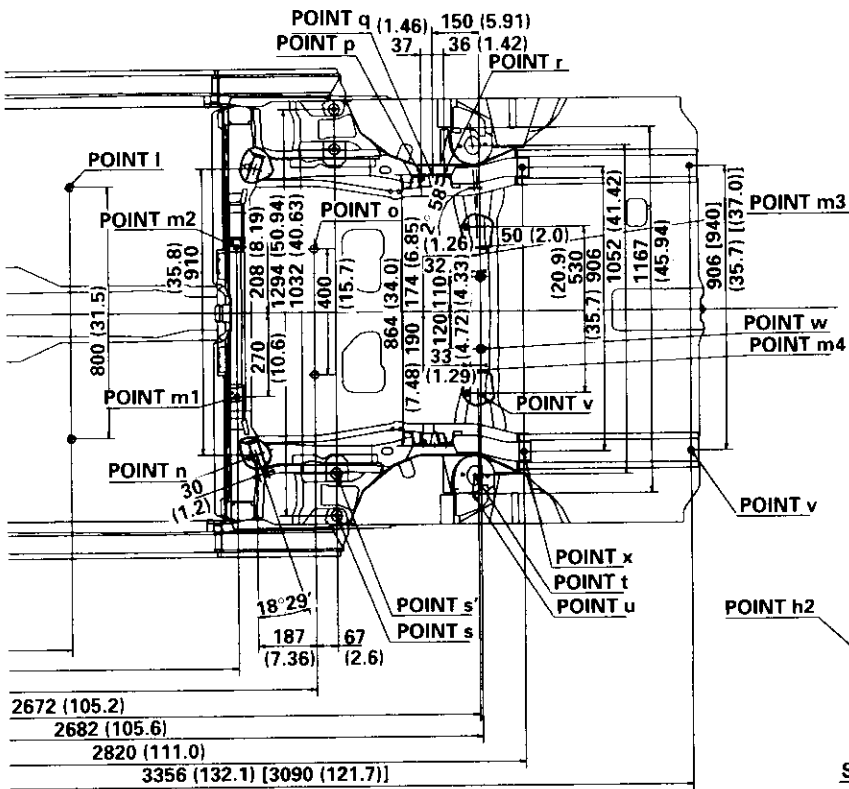

SECTION DD

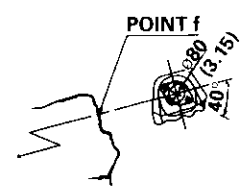

SECTION AA

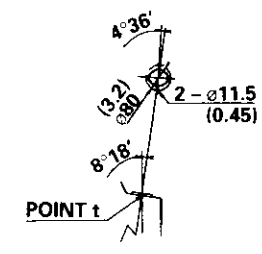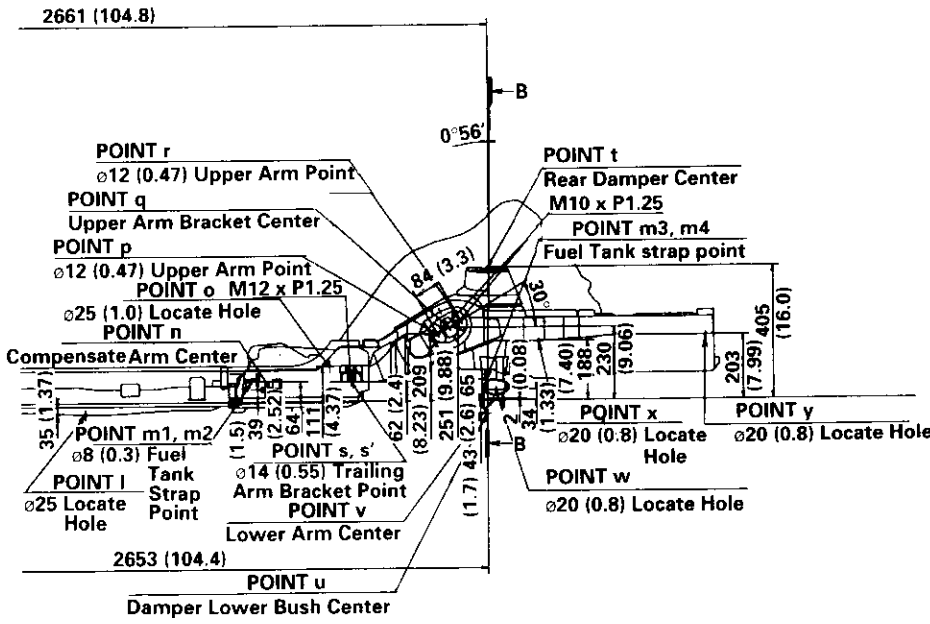

SECTION BB

Body ('97 model)

Front Seat Belt

Removal/Installation 20-128

Rear Seat

Removal/Installation 20-126

Washer Tube

Replacement 20-129

Windshield

Index 20-124




Outline of '97 Model Changes

- The molding side seal was added.
- The method of installing the rear seat cushion was changed. (2D/3D)
- A middle floor gusset was added and the method of detaching the seat belt retractor was changed. (2D/3D)
- The installation position of the washer tube was changed.

Windshield

Index

NOTE: The numbers after the part names show the quantities of the parts used.

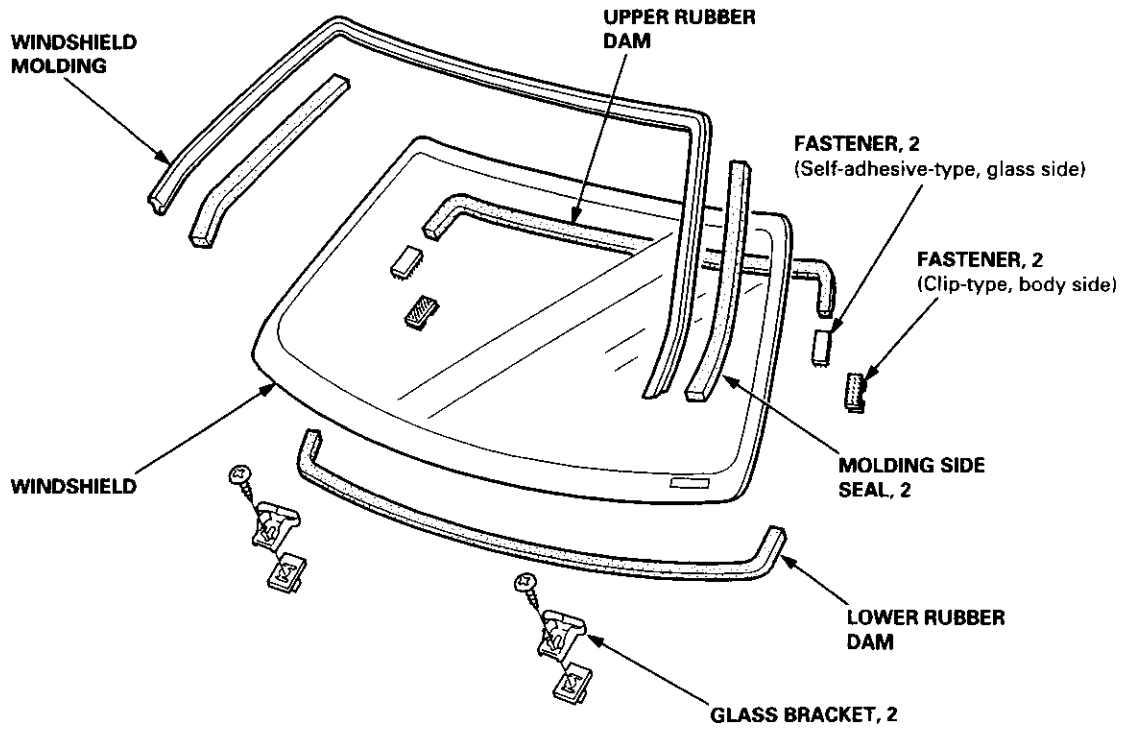




Molding Side Seal

Installation

Glue the molding side seal to the windshield molding on each side.

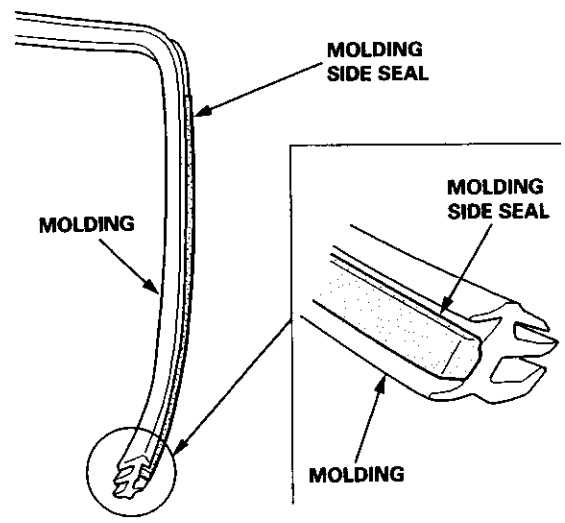

Rear Seat





Removal/Installation

3D:



▶: Bolt locations
A ▶, 6

B ▶, 1


C ▶, 1

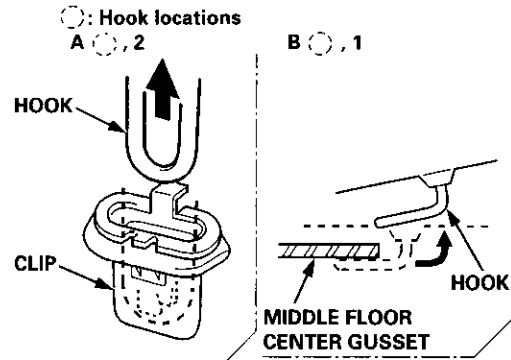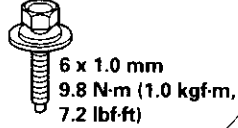


STRIKER
Remove the side trim panel (see page 20-60).

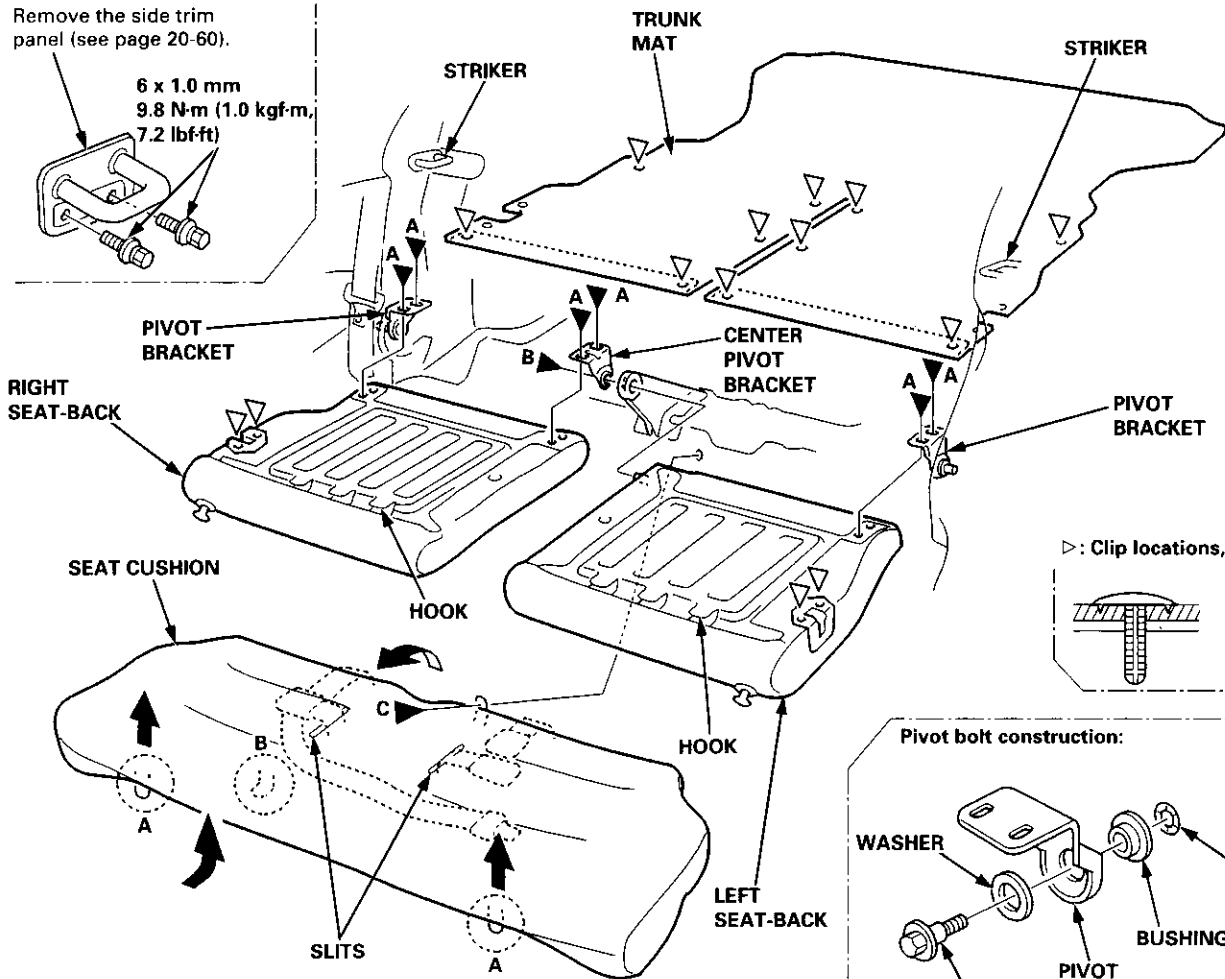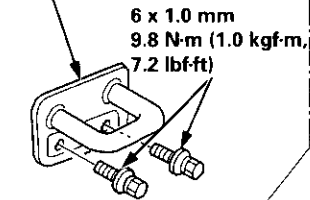

▷: Clip locations, 14



Pivot bolt construction:

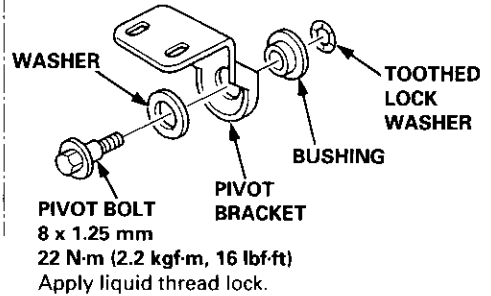

Installation is the reverse of the removal procedure.

NOTE:


- Before attaching the seat-back and seat cushion, make sure there are no twists or kinks in the rear seat belts and center belt.
- When installing the seat cushion, slip the seat belt buckles through the slits in the seat cushion.
- Make sure the seat-back locks securely.
- If necessary, adjust the striker and seat-back.




2D:

► Bolt locations


A ►, 6



B ►, 1





C ►, 1





○: Hook locations

A ○, 2


B ○, 1

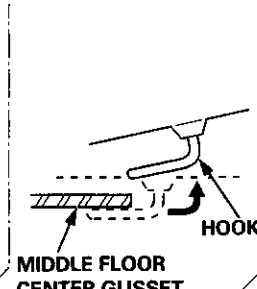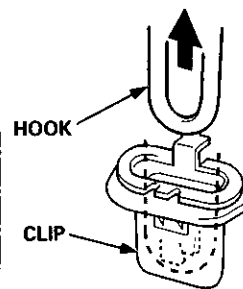

► Clip locations, 14

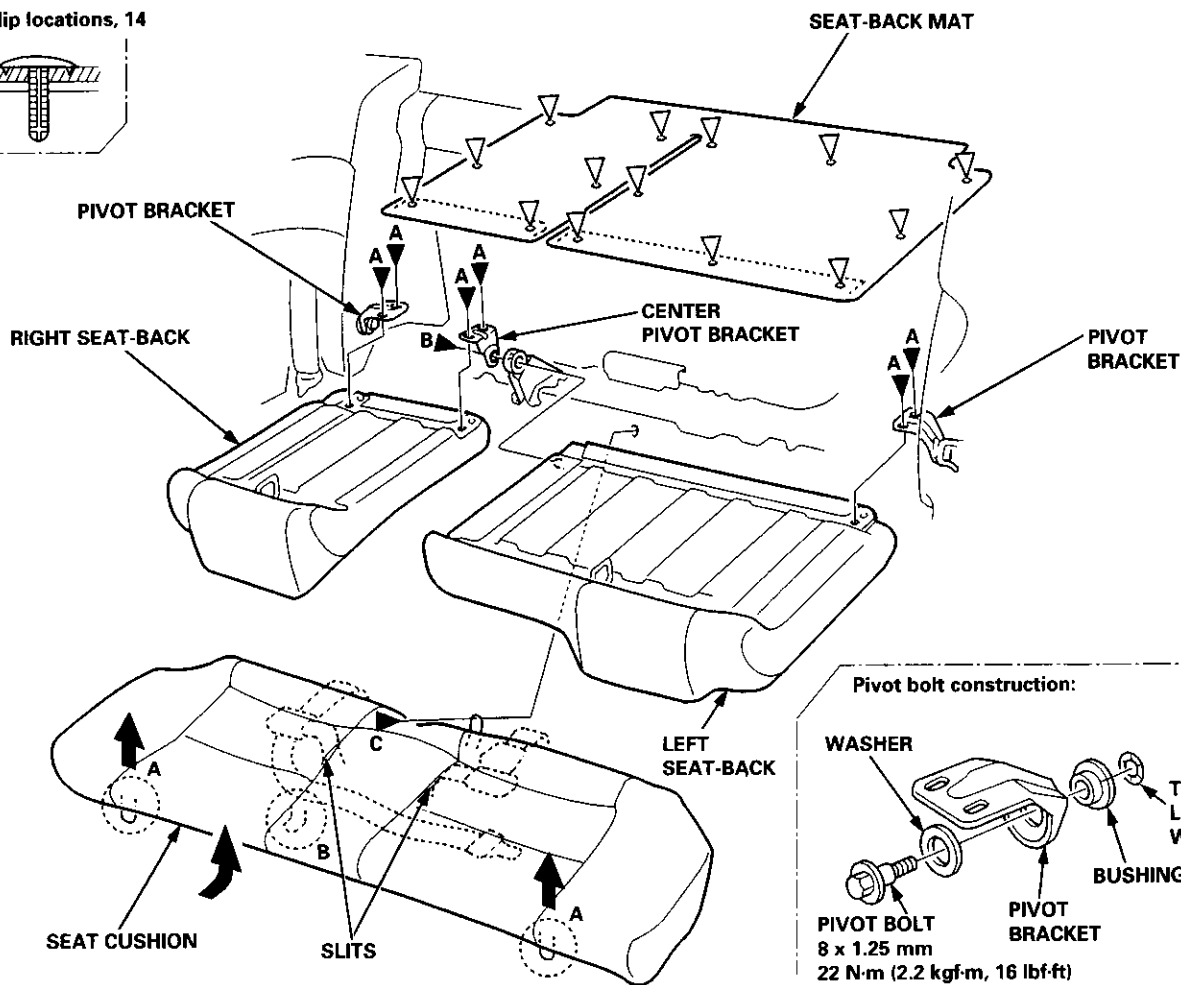

Pivot bolt construction:

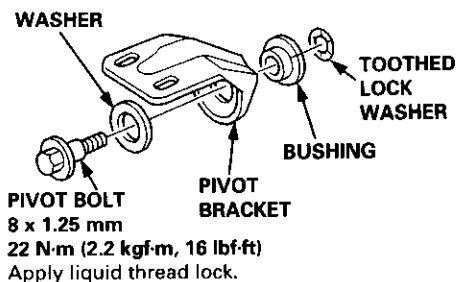

Installation is the reverse of the removal procedure.

NOTE:

- Before attaching the seat-back and seat cushion, make sure there are no twists or kinks in the rear seat belts and center belt.
- When installing the seat cushion, slip the seat belt buckles through the slits in the seat cushion.
- Make sure the seat-back locks securely.
- If necessary, adjust the seat-back latch and seat-back.



Front Seat Belt

Removal/Installation


2D/3D:

1. Slide the front seat forward fully.
2. Remove:
 - Rear seat-back and rear seat cushion (see pages 20-126, 127)
 - Rear center shelf and rear side shelf (3D, see page 20-60)
 - Rear trim panel (3D, see page 20-60)
 - Side trim panel (see pages 20-60, 61)
3. Pull back the carpet as necessary, and remove the bolts, then remove the middle floor gusset.

►: Bolt locations, 8

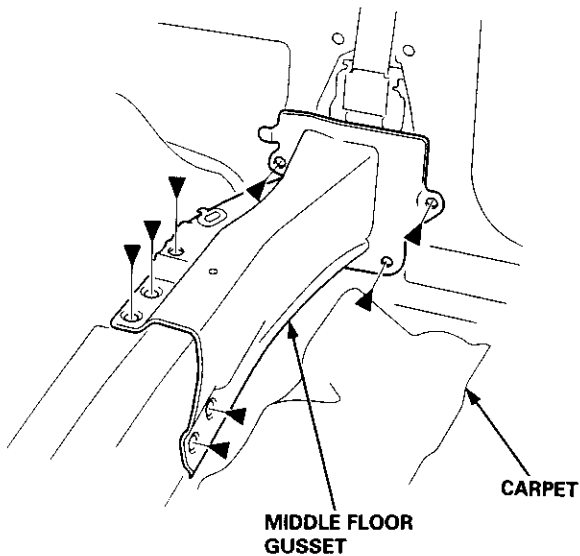

4. Remove the upper anchor cover and lower anchor cap.

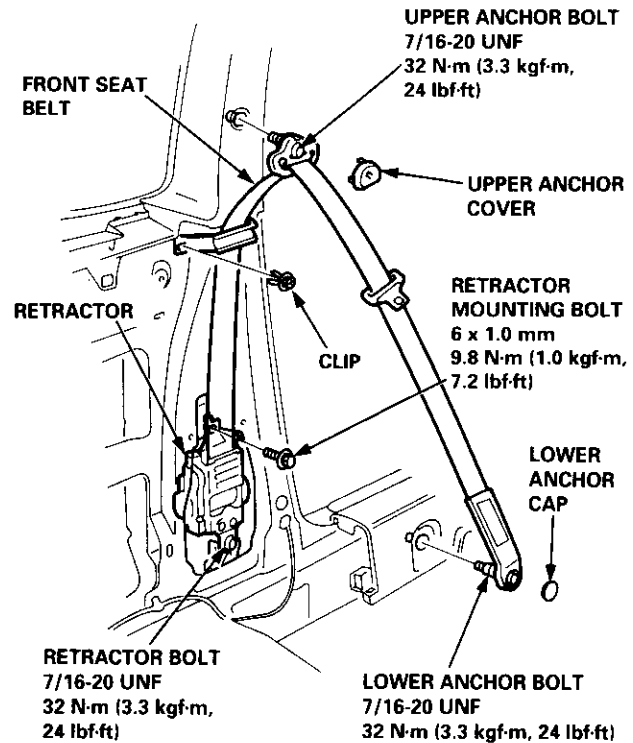

5. Remove all the anchor bolts and the retractor bolt, remove the retractor mounting bolt, then remove the front seat belt and retractor.
6. Installation is the reverse of the removal procedure.

NOTE:

- Check that the retractor locking mechanism functions as described on page 20-91.
- Make sure you assemble the washers and collars on the upper and lower anchor bolts as shown.
- Before installing the anchor bolts, make sure there are no twists or kinks in the front seat belt.



Washer Tube

Replacement

NOTE: To remove the windshield washer tube, remove the left inner fender (see page 20-106).

▷: Washer nozzle, clip and cushion locations

A ▷, 2

B ▷, 1

C ▷, 1











D ▷, 1

E ▷, 1

F ▷, 1

G ▷, 1

WINDSHIELD
WASHER
NOZZLE

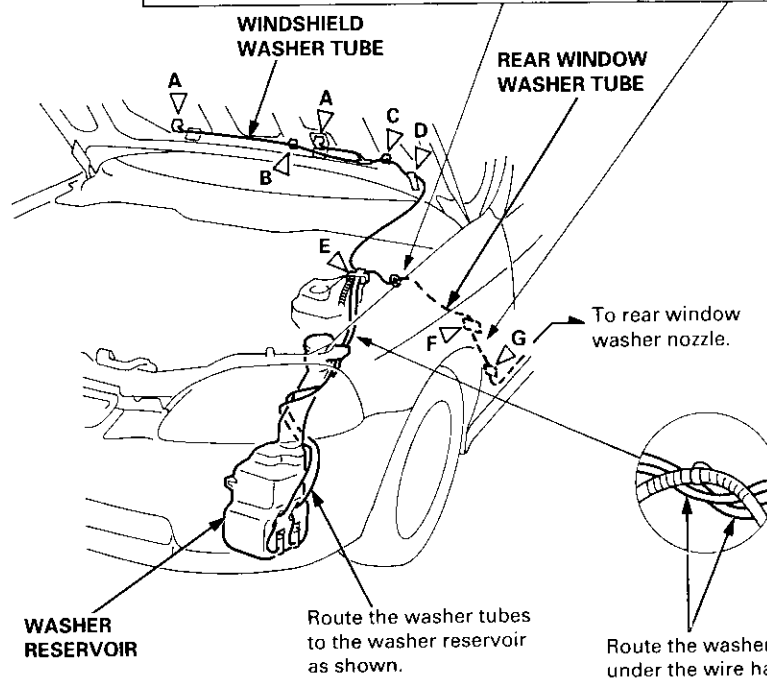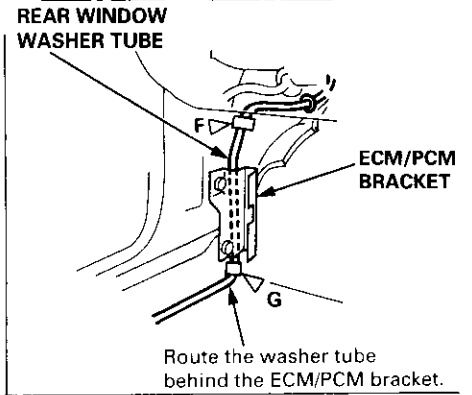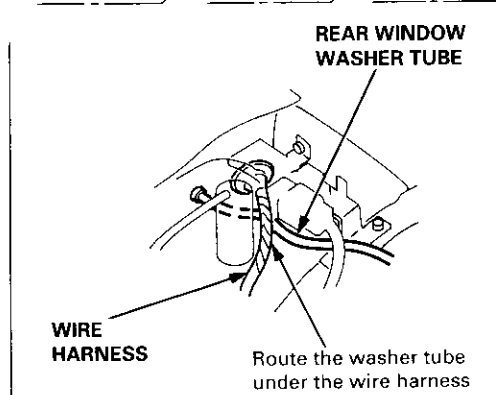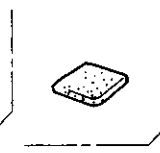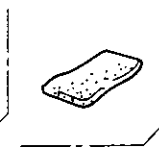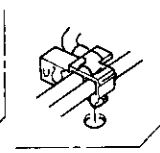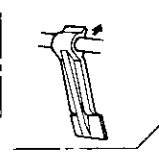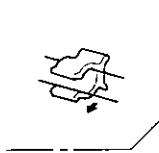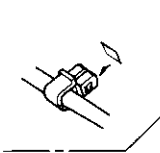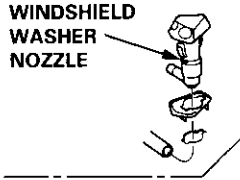

Installation is the reverse of the removal procedure.

NOTE:

- Take care not to pinch the washer tubes.
- If necessary, replace any damaged clips.
- After installing, adjust the aim of the washer nozzles (see page 20-117).

(cont'd)

Washer Tube

Replacement (cont'd)

NOTE: To remove the rear window washer tube (3D), remove the following parts from the left side of the vehicle.



- Inner fender (see page 20-106)
- Kick panel and side trim (see page 20-60)
- Rear seat-back and rear seat cushion (see page 20-80)
- Spare tire lid
- Rear center shelf and rear side shelf (see page 20-60)
- Rear trim panel and side trim panel (see page 20-60)
- Quarter trim panel (see page 20-60)
- Rear roof trim (see page 20-65)
- Hatch spoiler (see page 20-101)

▷: Washer nozzle, clip and cushion locations

A ▷, 9

B ▷, 2

C ▷, 1

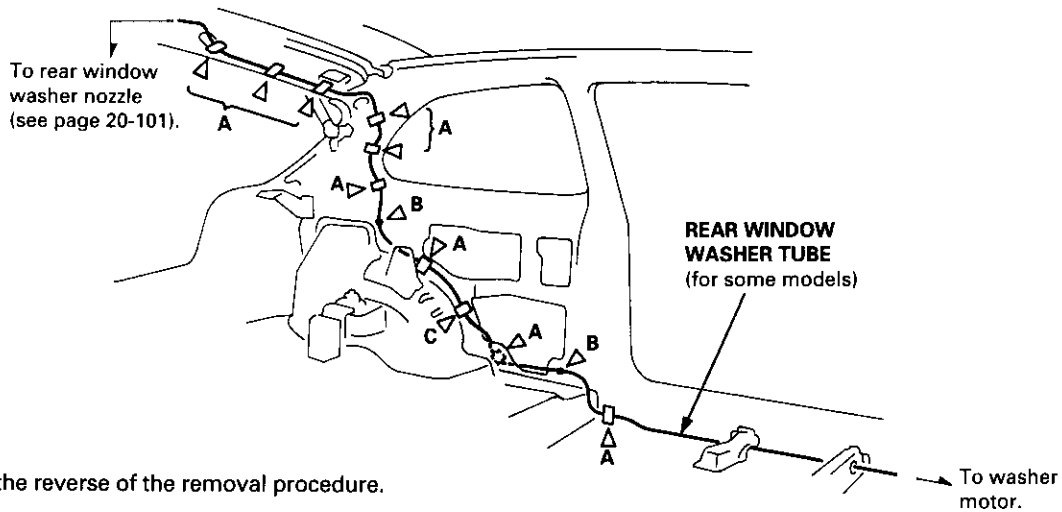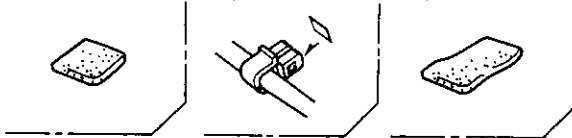

Installation is the reverse of the removal procedure.

NOTE:

- Take care not to pinch the washer tubes.
- If necessary, replace any damaged clips.
- After installing, adjust the aim of the washer nozzles (see page 20-117).

Body ('98 model)

Opener and Latch

Replacement 20-132



Outline of '98 Model Changes


- The hood latch cover was added.
- The hatch handle was added. (3D)

Opener and Latch

Replacement

HOOD LATCH COVER


NOTE: Take care not to the hood latch cover and body.

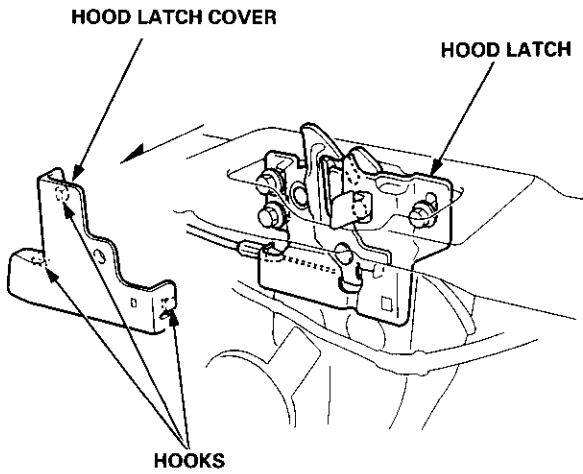


Hatch Handle

1. Remove the hatch trim panel (see page 20-63).
2. Remove the hatch handle bolts.


▶: Bolt locations, 2


 6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

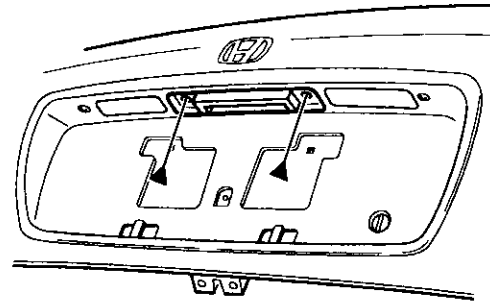

3. Remove the nut.

●: Nut location, 1


 6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

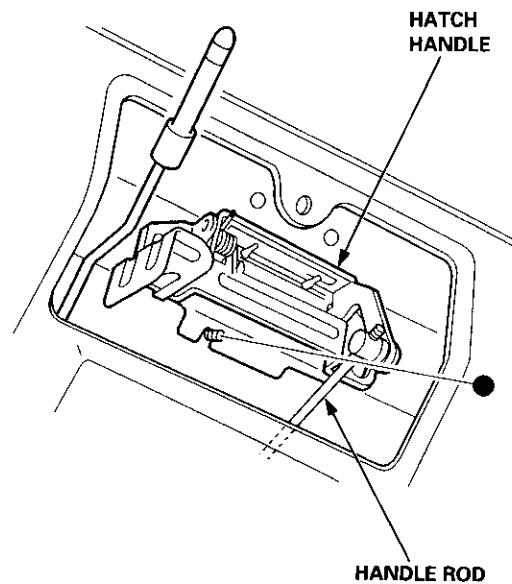



Hatch Latch/Lock Cylinder



4. Note the position of the joint on the handle rod (A). Pry the handle rod of the joint using diagonal cutters; take care not to bend the rod. Remove the hatch handle.

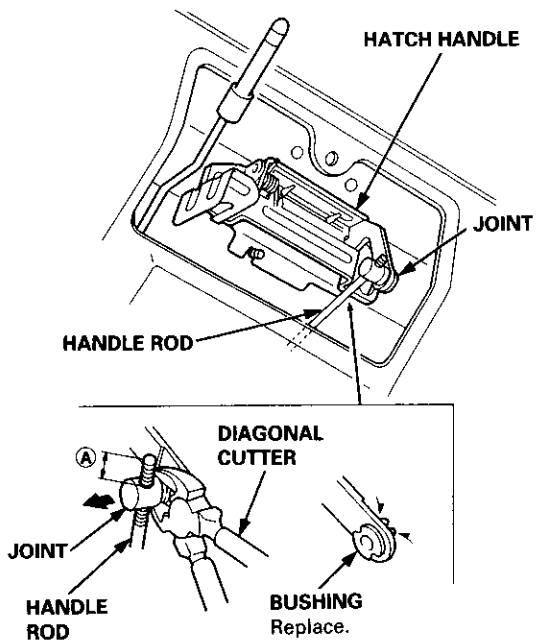


5. Install in the reverse order of removal, and note these items:
 - Make sure the handle rod is connected properly.
 - Before installing the hatch trim panel, make sure the hatch opens properly.

1. Remove the hatch trim panel (see page 20-63).
2. Remove the hatch latch screws.

►: Screw locations, 3

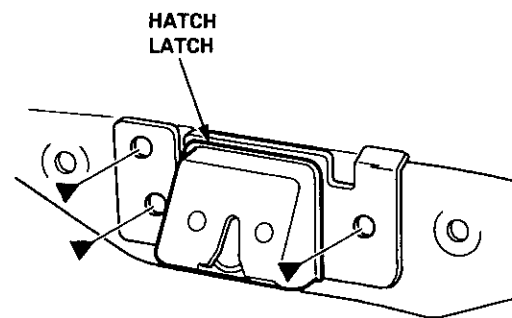

3. Disconnect the lock rod, the handle rod, the lock cylinder rod, and the connector, then remove the hatch latch.

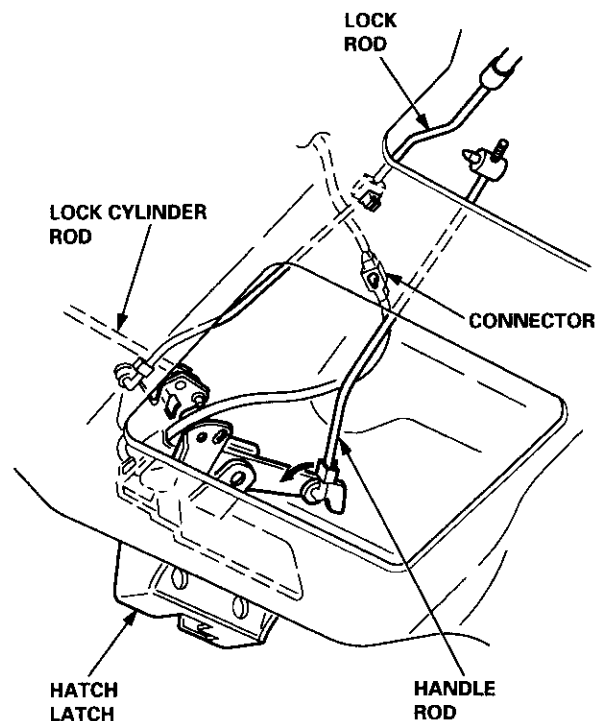


(cont'd)

Opener and Latch

Replacement (cont'd)

4. Pull the lock rod out.


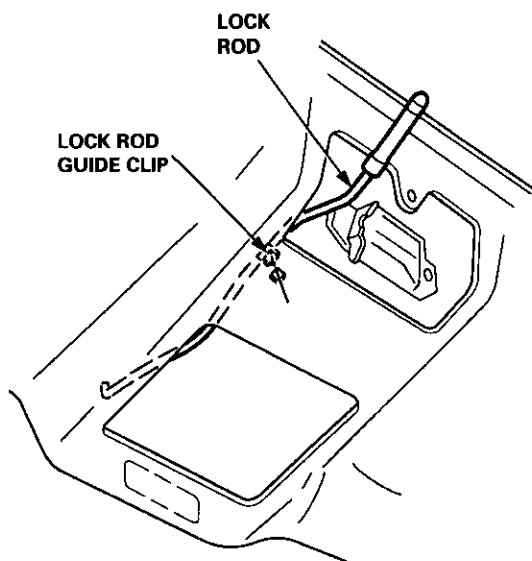


5. If necessary, remove the lock cylinder.

►: Bolt location, 1



6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

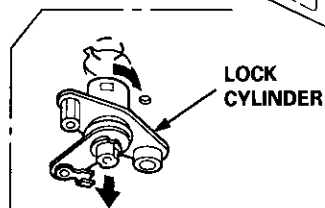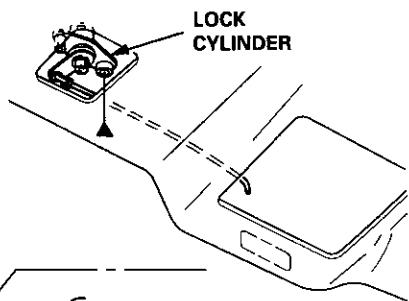

6. Install in the reverse order of removal, and note these items:

- Apply grease to the hatch latch.
- Make sure the connector is connected properly.
- Before installing the hatch trim panel, make sure the hatch opens properly and locks securely.

Heater and Air Conditioning


Heater 21-1
Air Conditioning 22-1

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

The Civic SRS includes a driver's airbag located in the steering wheel hub. In addition, all models (except some models for Canada) have a passenger's airbag located in the dashboard above the glove box. Information necessary to safely service the SRS is included in this Service Manual. Items marked with an asterisk (*) on the contents page include, or are located near, SRS components. Servicing, disassembling or replacing these items will require special precautions and tools, and should therefore be done by an authorized Honda dealer.

▲ WARNING


- To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of severe frontal collision, all SRS service work must be performed by an authorized Honda dealer.
- Improper service procedures, including incorrect removal and installation of the SRS, could lead to personal injury caused by unintentional activation of the airbags.
- Do not bump the SRS unit. Otherwise, the system may fail in case of a collision, or the airbags may deploy when the ignition switch is ON (II).
- All SRS electrical wiring harnesses are covered with yellow insulation. Related components are located in the steering column, front console, dashboard, dashboard lower panel, and in the dashboard above the glove box. Do not use electrical test equipment on these circuits.



Heater


Illustrated Index	21-2	Temperature Control	
Circuit Diagram	21-3	Adjustment	21-23
Troubleshooting		Mode Control Motor	
Symptom Chart	21-4	Test	21-24
Heater Control Panel Input/Output		Replacement	21-24
Signals	21-5	Recirculation Control Motor	
Flowcharts		Test	21-25
Blower Motor Speed	21-6	Replacement	21-25
Blower Motor	21-8	Relay	
Mode Control Motor	21-11	Test	21-26
Recirculation Control Motor	21-14	Heater Fan Switch	
Blower Unit		Test	21-26
Replacement	21-16	Mode Control Switch	
Overhaul	21-17	Test	21-27
* Heater Unit			
Replacement	21-18		
Overhaul	21-20		
Heater Control Panel			
Replacement	21-21		
Overhaul	21-22		

* Read SRS precautions before working in this area.



Illustrated Index



SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

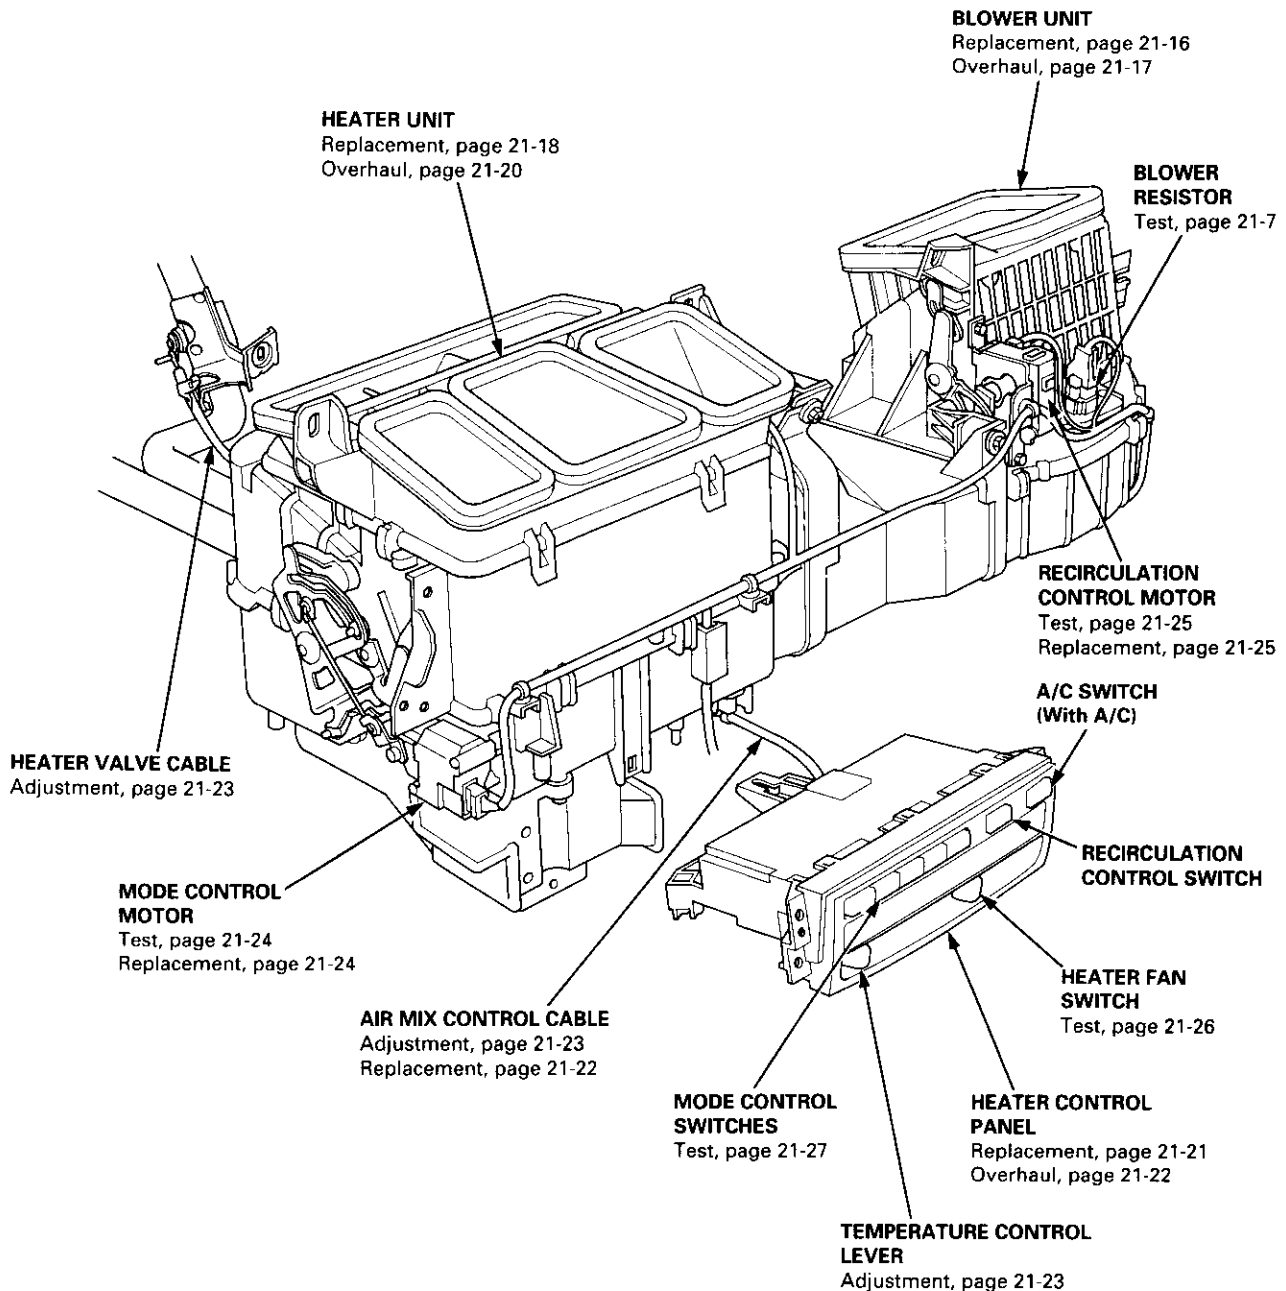

Defroster-activated A/C System

Turning the defroster on activates the A/C and sets the air flow mode to FRESH. It is possible to turn the A/C off or to change the air flow to RECIRCULATE by pressing the A/C button or the FRESH/RECIRCULATE button.

Circuit Diagram

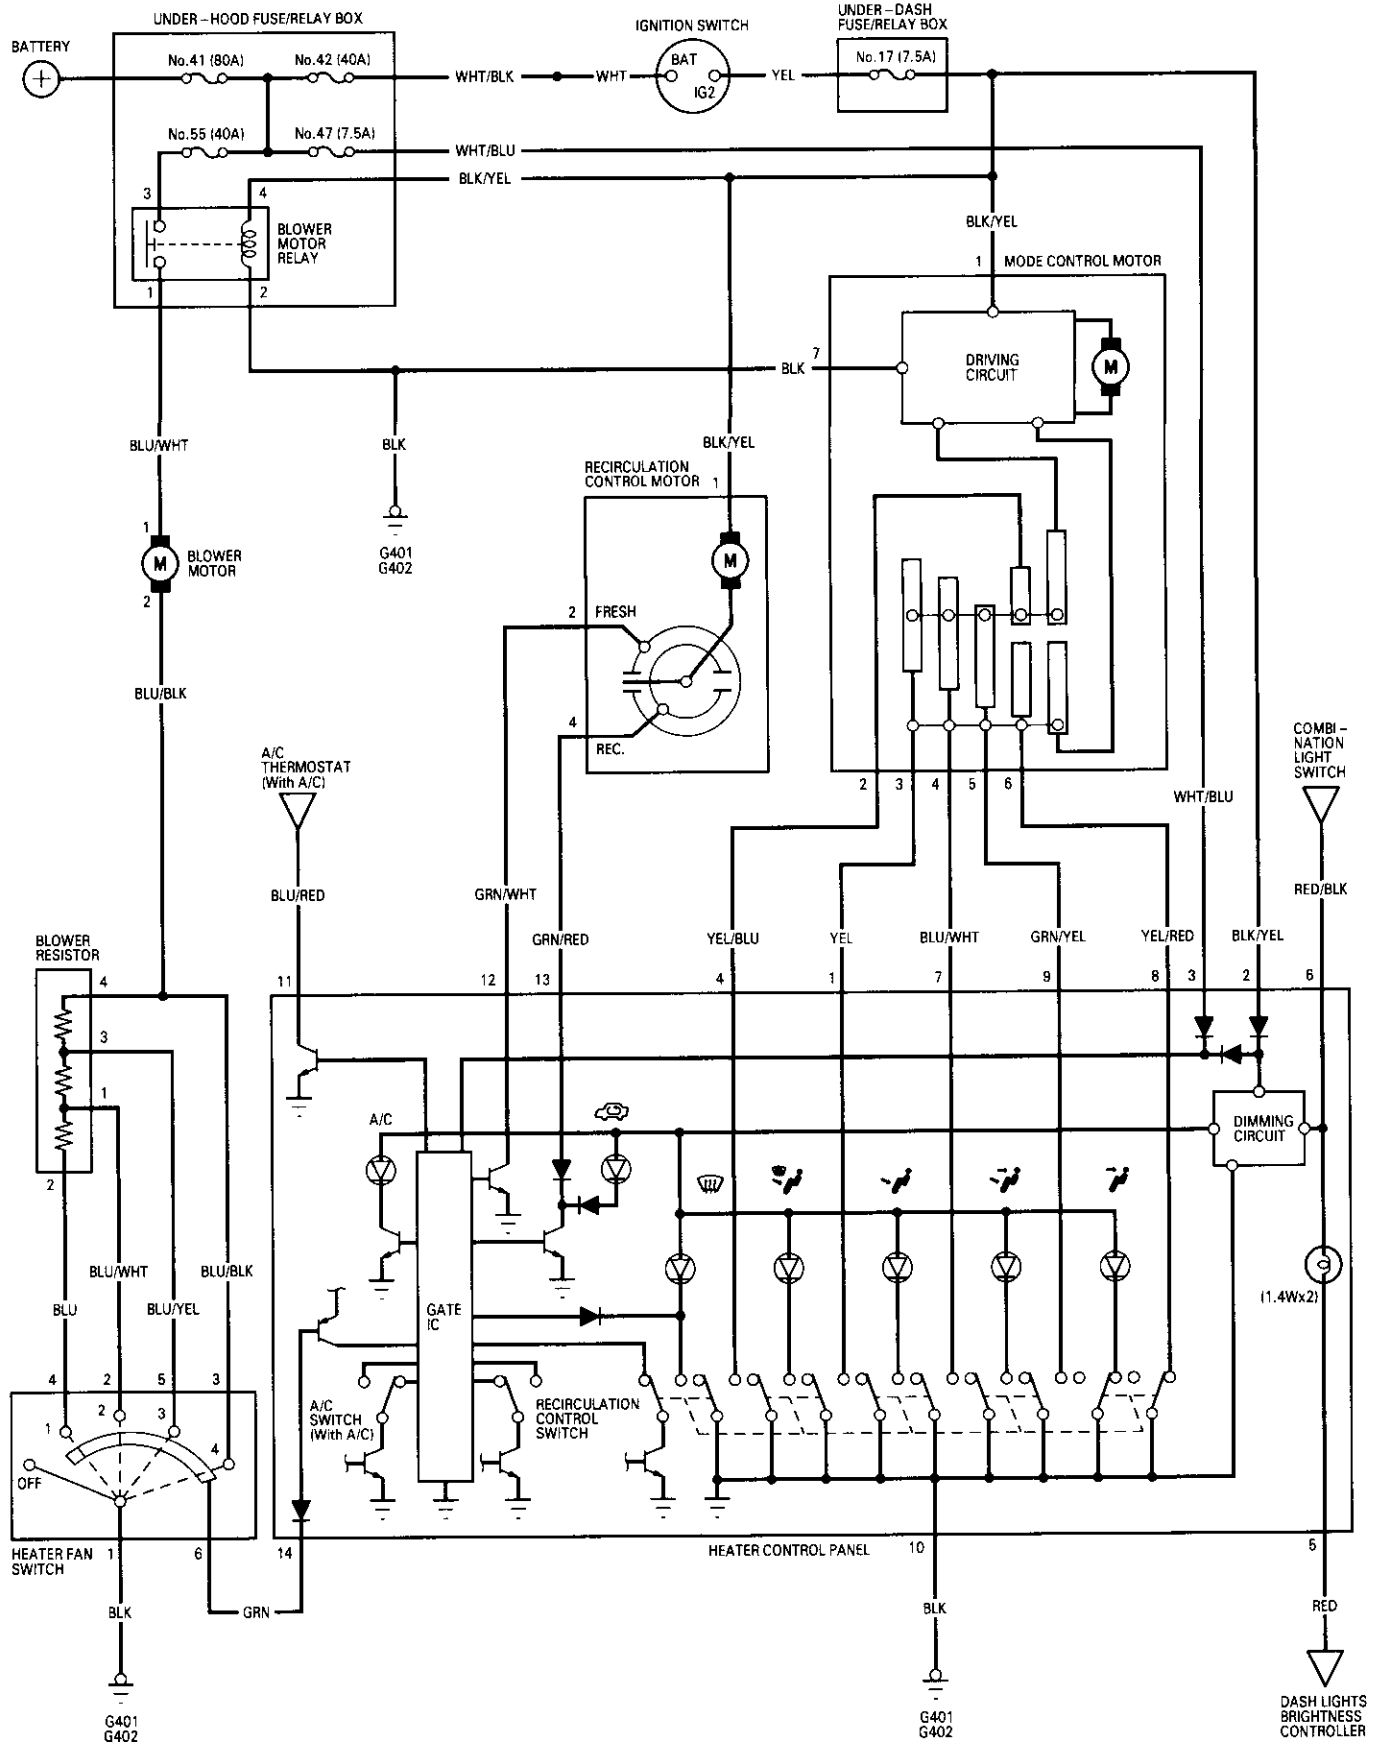


Troubleshooting

Symptom Chart

NOTE:


- Check the engine coolant level, and allow the engine to warm up before troubleshooting.
 - Any abnormality must be corrected before continuing the test.
 - Because of the precise measurements needed, use a multimeter when testing.
 - Before performing any troubleshooting procedures check:
 - Fuses *1No. 47 (7.5 A), *1No. 55 (40 A), *2No. 17 (7.5 A)
 - Grounds No. G401, G402
 - Cleanliness and tightness of all connectors
- *1: In the under-hood fuse/relay box
 *2: In the under-dash fuse/relay box

Symptom		Remedy
Hot air flow is low.	Blower motor runs, but one or more speeds are inoperative.	Perform the procedures in the flowchart (see page 21-6).
	Blower runs properly.	Check for the following: <ul style="list-style-type: none"> • Clogged heater duct • Clogged heater outlet • Incorrect door position
No hot air flow.	Blower motor does not run at all.	Perform the procedures in the flowchart (see page 21-8).
	Blower motor runs.	Check for the following: <ul style="list-style-type: none"> • Clogged heater duct • Clogged blower outlet • Clogged heater valve • Faulty air mix door • Heater valve cable adjustment (see page 21-23) • Air mix control cable adjustment (see page 21-23) • Faulty cooling system thermostat (see section 10) • Clogged evaporator (with air conditioning) • Frozen evaporator (with air conditioning)
Mode control motor does not run, or one or more modes are inoperative.		Perform the procedures in the flowchart (see page 21-11).
Recirculation control door does not change between FRESH and RECIRCULATE.		Perform the procedures in the flowchart (see page 21-14).



Heater Control Panel Input/Output Signals

HEATER CONTROL PANEL 14P CONNECTOR

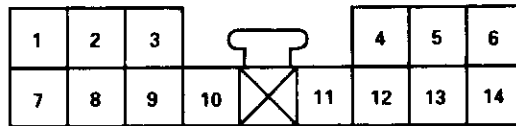


WIRE SIDE OF FEMALE TERMINALS


Terminal No.	Wire color	Signal		Terminal No.	Wire color	Signal	
1	YEL	HEAT/DEF	INPUT	8	YEL/RED	VENT	INPUT
2	BLK/YEL	IG2	INPUT	9	GRN/YEL	HEAT/VENT	INPUT
3	WHT/BLU	+B	INPUT	10	BLK	GROUND	OUTPUT
4	YEL/BLU	DEF	INPUT	11	BLU/RED	A/C THERMOSTAT	INPUT
5	RED	DASH LIGHTS BRIGHTNESS CONTROLLER	OUTPUT	12	GRN/WHT	FRESH	INPUT
6	RED/BLK	COMBINATION LIGHT SWITCH	INPUT	13	GRN/RED	RECIRCULATE	INPUT
7	BLU/WHT	HEAT	INPUT	14	GRN	HEATER FAN SWITCH	OUTPUT

Troubleshooting


Blower Motor Speed

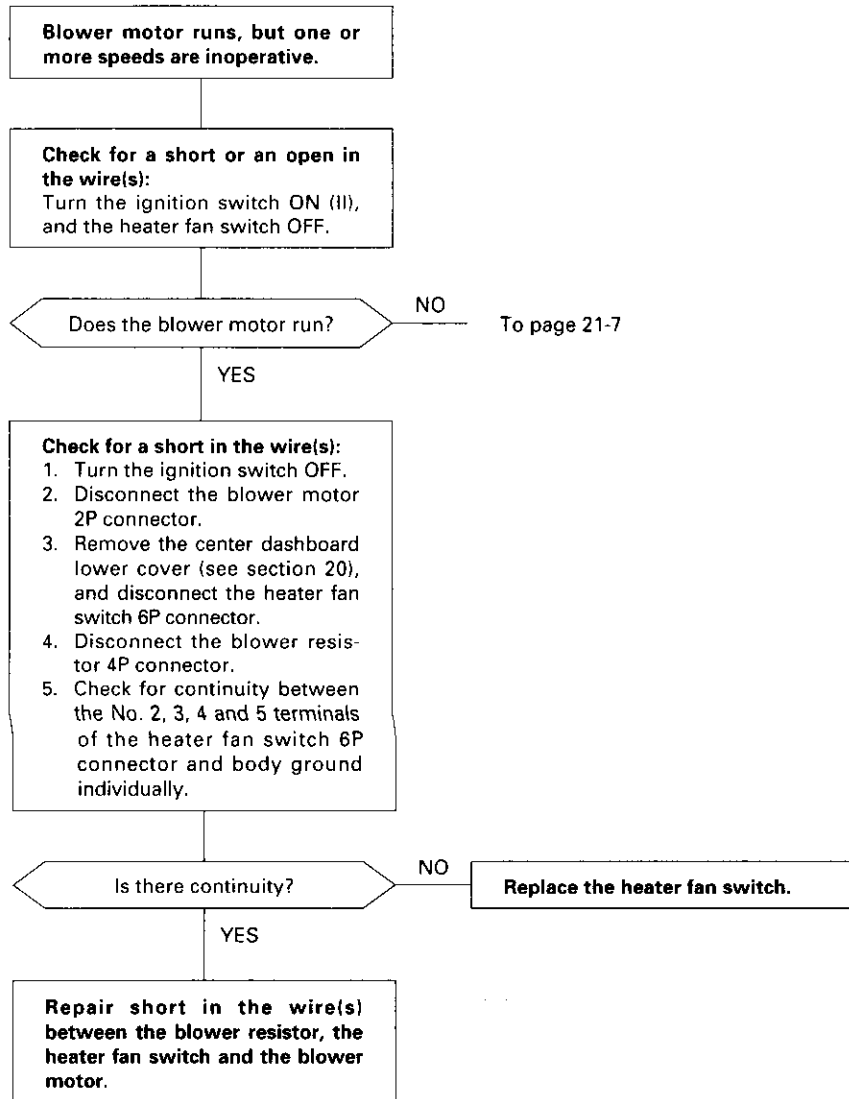

HEATER FAN SWITCH 6P CONNECTOR

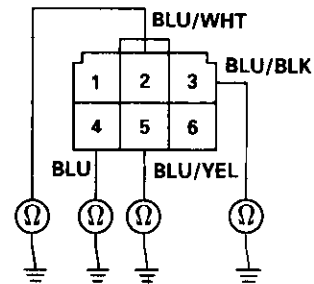

WIRE SIDE OF FEMALE TERMINALS



From page 21-6

Check the blower resistor:

1. Turn the ignition switch OFF.
2. Disconnect the blower resistor 4P connector.
3. Measure the resistance between the No. 2 and No. 4 terminals of the blower resistor.

Is there approx. 2 - 3 ohms?

NO

Replace the blower resistor.

YES

Check for an open in the wire(s):

1. Reconnect the blower resistor 4P connector.
2. Remove the center dashboard lower cover (see section 20), and disconnect the heater fan switch 6P connector.
3. Turn the ignition switch ON (II).
4. Ground each of these terminals individually in the following order: No. 4, 2, 5 and 3.

Does the blower motor run at progressively higher speeds?


YES

Replace the heater fan switch.


NO

Repair open or cause of excessive resistance in the appropriate wire(s) between the blower resistor and the heater fan switch.

BLOWER RESISTOR

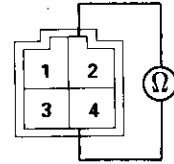


HEATER FAN SWITCH 6P CONNECTOR

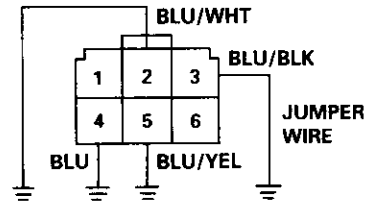


WIRE SIDE OF FEMALE TERMINALS

Troubleshooting


Blower Motor

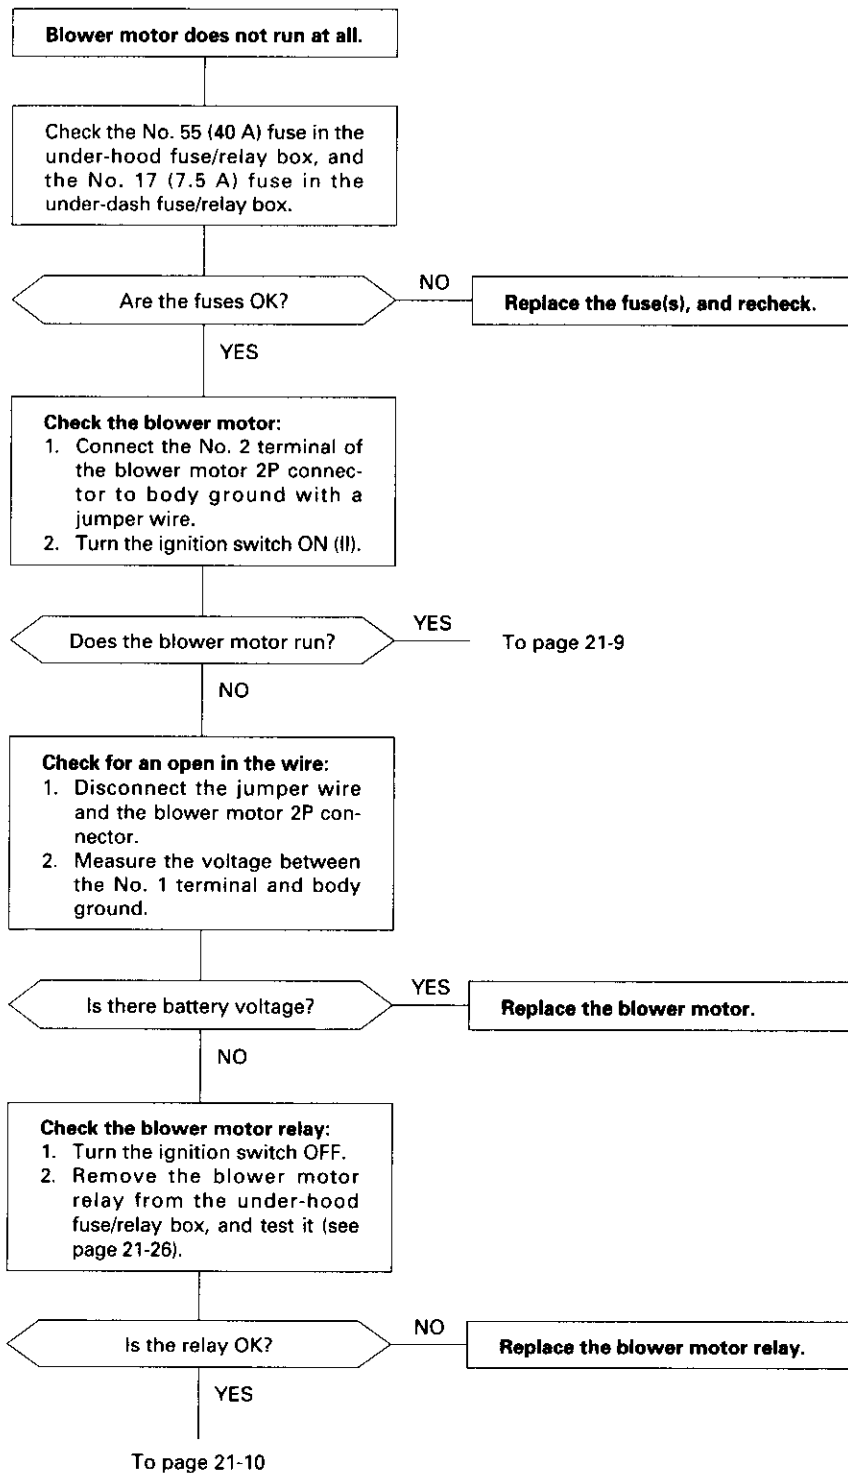


BLOWER MOTOR 2P CONNECTOR

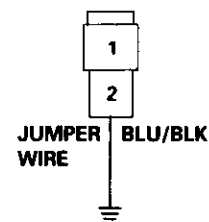

WIRE SIDE OF FEMALE TERMINALS

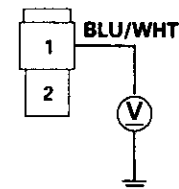



From page 21-8

Check for an open in the wire:

1. Turn the ignition switch OFF, and disconnect the jumper wire.
2. Remove the center dashboard lower cover (see section 20), and disconnect the heater fan switch 6P connector.
3. Turn the ignition switch ON (II).
4. Measure the voltage between the No. 3 terminal and body ground.

Is there battery voltage?

NO

Repair open in the wire between the blower motor and the heater fan switch.

YES

Check for an open in the wire:

1. Turn the ignition switch OFF.
2. Check for continuity between the No. 1 terminal of the heater fan switch 6P connector and body ground.

Is there continuity?


YES

Replace the heater fan switch.


NO

Check for an open in the wire between the heater fan switch and body ground. If the wire is OK, check for poor ground at G401 and G402.

HEATER FAN SWITCH 6P CONNECTOR

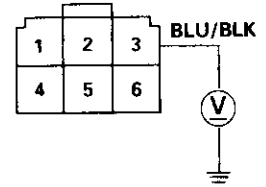

WIRE SIDE OF FEMALE TERMINALS

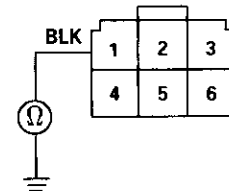

(cont'd)

Troubleshooting

Blower Motor (cont'd)

From page 21-8

Check the under-hood fuse/relay box:
Measure the voltage between the No. 3 terminal of the blower motor relay 4P socket and body ground.

Is there battery voltage?

NO

Replace the under-hood fuse/relay box.

YES

Check for an open in the wire:
1. Turn the ignition switch ON (II).
2. Measure the voltage between the No. 4 terminal of the blower motor relay 4P socket and body ground.

Is there battery voltage?

NO

Repair open in the wire between the No. 17 fuse and the blower motor relay.

YES

Check for an open in the wire:
1. Turn the ignition switch OFF.
2. Check for continuity between the No. 2 terminal of the blower motor relay 4P socket and body ground.

Is there continuity?



NO

Check for an open in the wire between the blower motor relay and body ground. If the wire is OK, check for poor ground at G401 and G402.


YES

Repair open in the BLU/WHT wire between the blower motor relay and the blower motor.

BLOWER MOTOR RELAY 4P SOCKET



BLK/YEL




BLK





Mode Control Motor

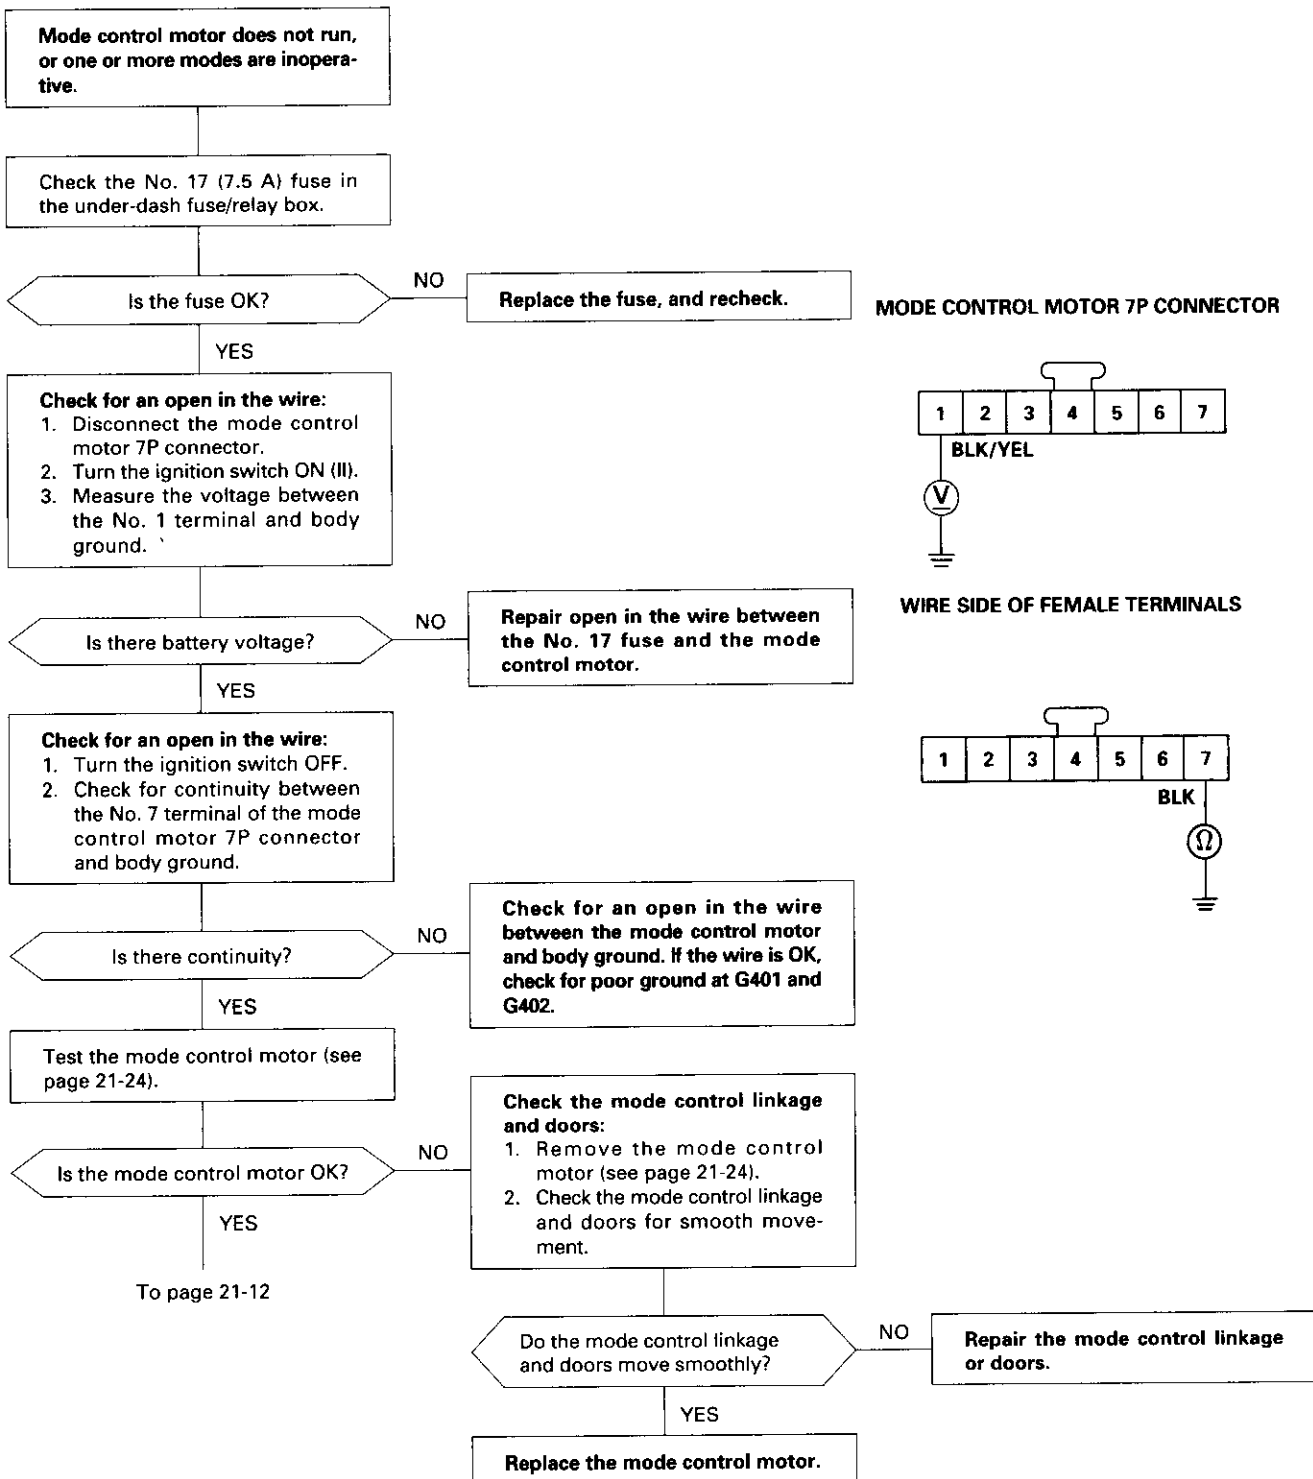

(cont'd)

Troubleshooting


Mode Control Motor (cont'd)

From page 21-11

Check for a short in the wire(s):

1. Remove the center dashboard lower cover (see section 20), and disconnect the heater control panel 14P connector.
2. Check for continuity between the No. 1, 4, 7, 8 and 9 terminals and body ground individually.

HEATER CONTROL PANEL 14P CONNECTOR

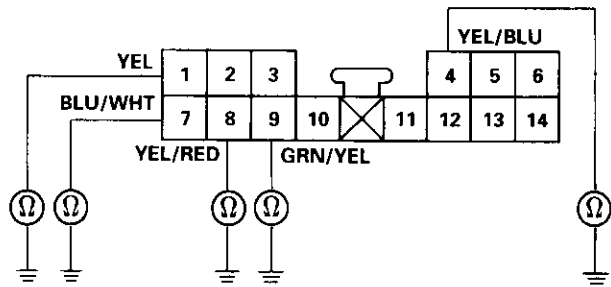

WIRE SIDE OF FEMALE TERMINALS


Is there continuity?

YES

Repair any short in the wire(s) between the mode control panel and the heater control panel.

NO

Check for a short to power:
Check the same wires for voltage.

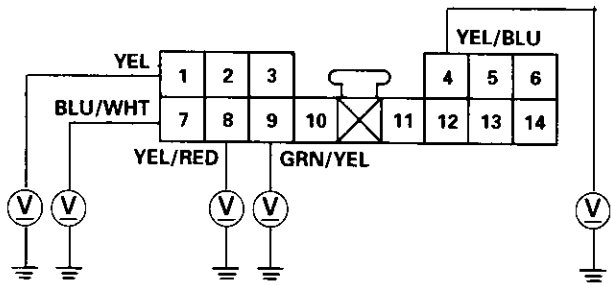


Is there any voltage?

YES

Repair short to power in the wire between the mode control panel and the heater control panel. (This short damages the heater control panel.)

NO

To page 21-13



From page 21-12

Check for an open in the wire(s):
 Check for continuity between the following terminals of the mode control motor 7P connector and the heater control panel 14P connector.

7P:	14P:
No. 2 —	No. 4
No. 3 —	No. 1
No. 4 —	No. 7
No. 5 —	No. 9
No. 6 —	No. 8

Is there continuity?

NO


Repair any open in the wire(s) between the mode control motor and the heater control panel.

YES

Check for loose wires or poor connections at the heater control panel 14P connector. If the connections are good, replace the heater control panel.

HEATER CONTROL PANEL 14P CONNECTOR

WIRE SIDE OF FEMALE TERMINALS

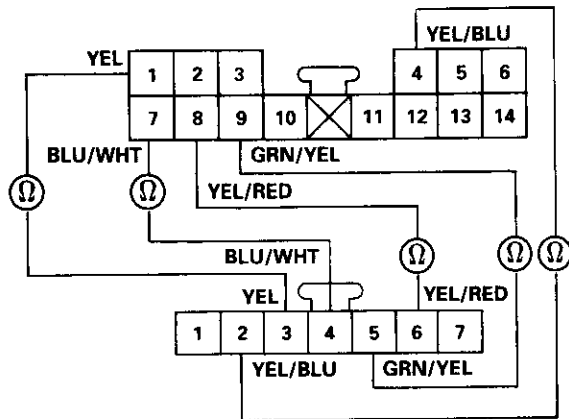


MODE CONTROL MOTOR 7P CONNECTOR

WIRE SIDE OF FEMALE TERMINALS

Troubleshooting

Recirculation Control Motor

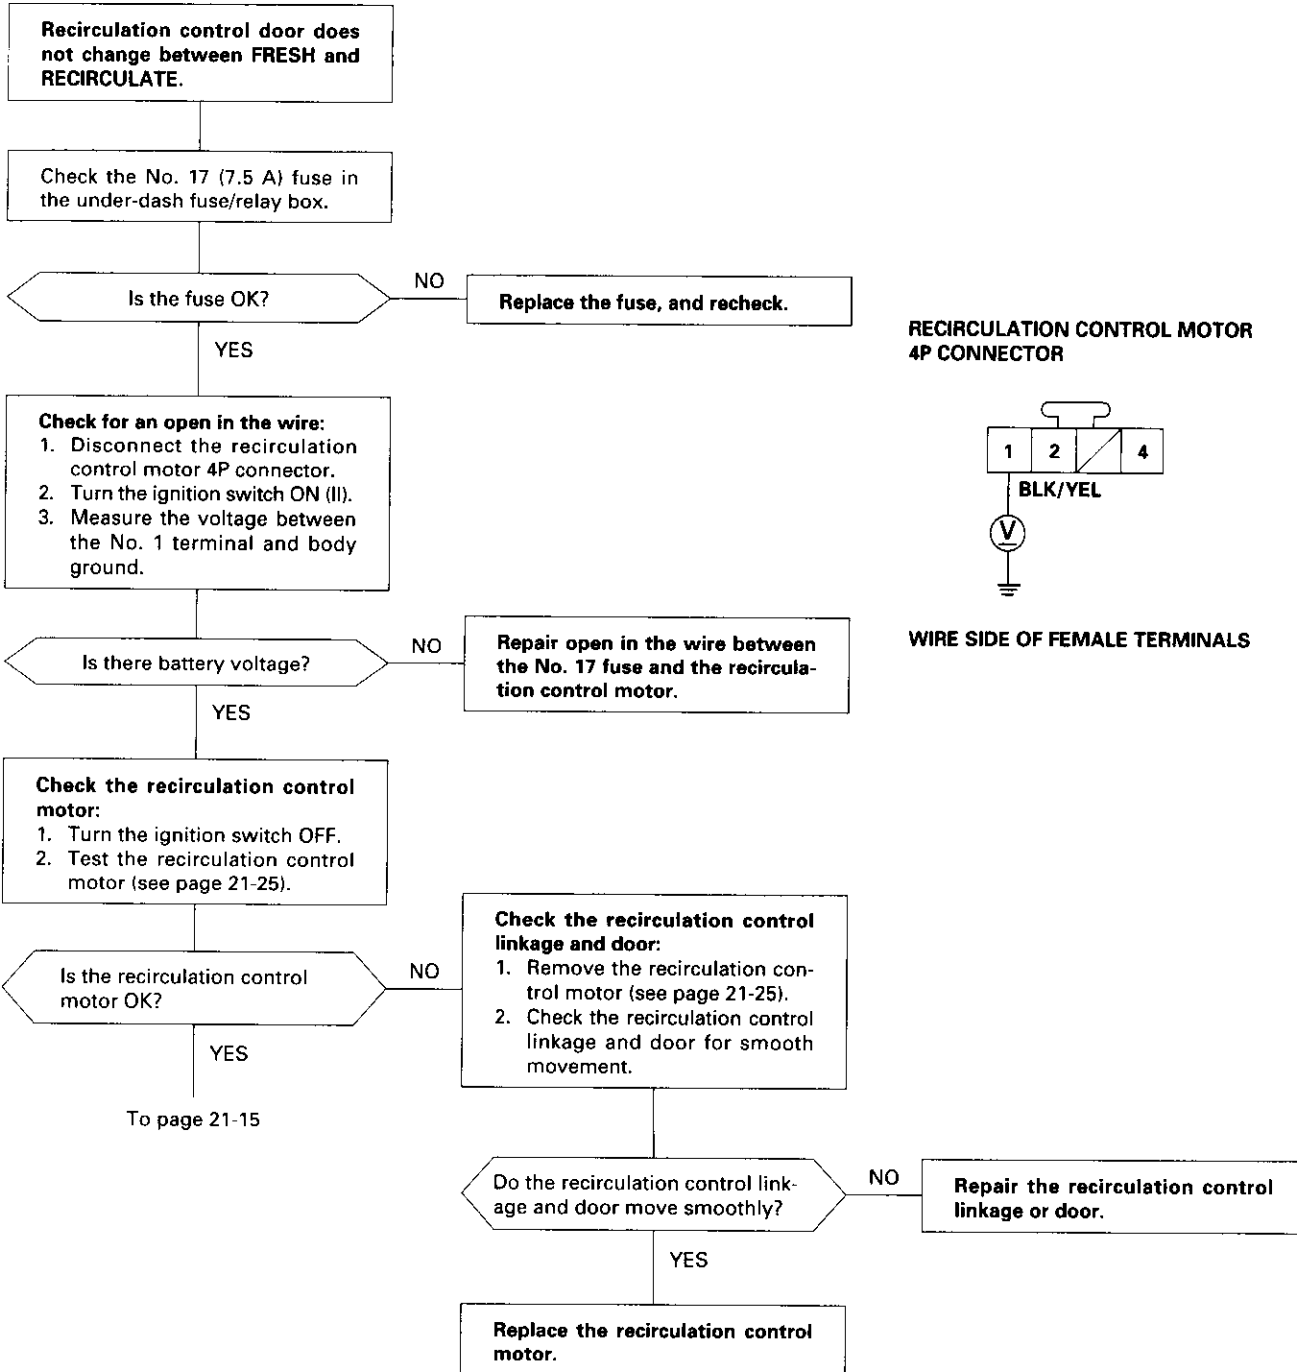



From page 21-14

Check for a short in the wire(s):
 1. Remove the center dashboard lower cover (see section 20), and disconnect the heater control panel 14P connector.
 2. Check for continuity between the No. 12 and No. 13 terminals and body ground individually.

Is there continuity? YES

Repair short in the wire(s) between the recirculation control motor and the heater control panel.

NO

Check for a short to power:
 Check the same wires for voltage.

Is there any voltage? YES

Repair short to power in the wire between the recirculation control motor and the heater control panel. (This short damages the heater control panel.)

NO

Check for an open in the wire(s):
 Check for continuity between the following terminals of the recirculation control motor 4P connector and the heater control panel 14P connector.
 4P: 14P:
 No. 2 — No. 12
 No. 4 — No. 13


Is there continuity? NO

Repair open in the wire(s) between the recirculation control motor and the heater control panel.



YES

Check for loose wires or poor connections at the heater control panel 14P connector. If the connections are good, replace the heater control panel.

HEATER CONTROL PANEL 14P CONNECTOR

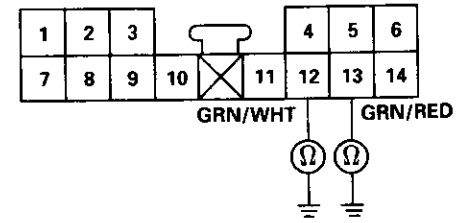

WIRE SIDE OF FEMALE TERMINALS

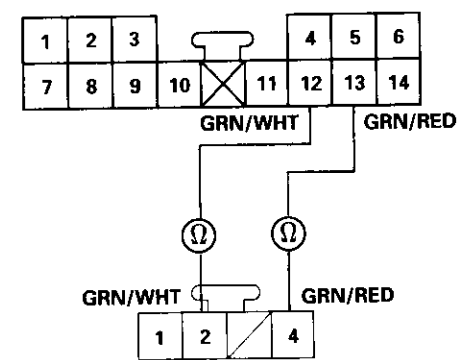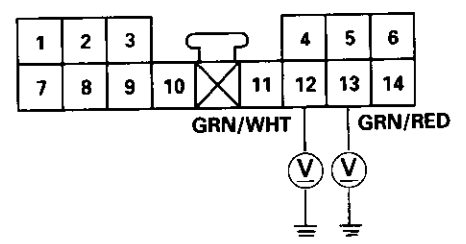

RECIRCULATION CONTROL MOTOR 4P CONNECTOR


WIRE SIDE OF FEMALE TERMINALS

Blower Unit

Replacement


NOTE: The blower motor, recirculation control motor and blower resistor can be replaced without removing the blower unit (see next page).

1. Remove the glove box (see section 20).
2. Remove the self-tapping screw and the passenger's dashboard lower cover. Remove the bolt, the nut and the knee bolster, then remove the five bolts and the glove box frame.

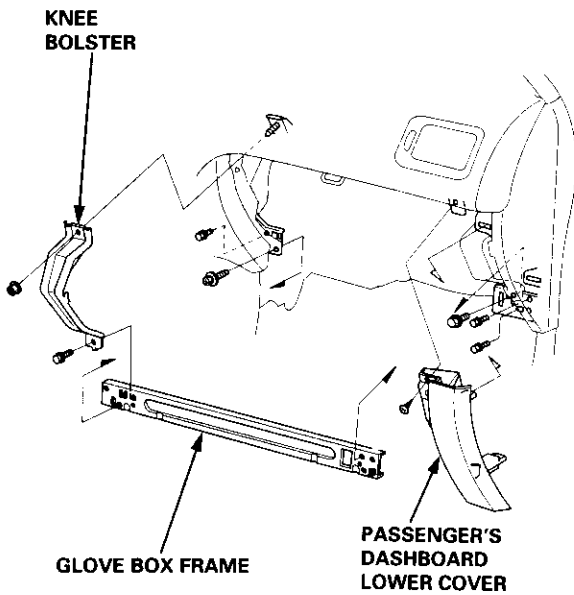


Without Air Conditioning

- 3-a. Remove the wire harness from the heater duct, then remove the two self-tapping screws and the heater duct.

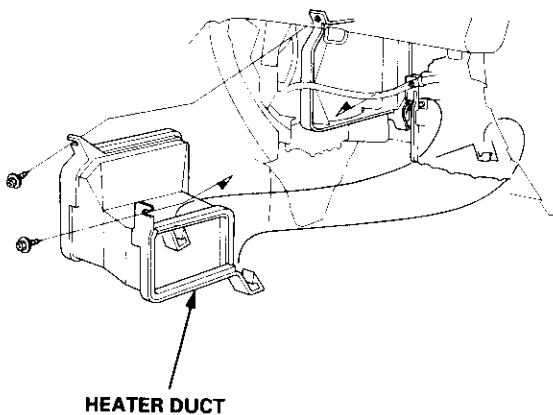


With Air Conditioning


- 3-b. Remove the evaporator (see page 22-25).

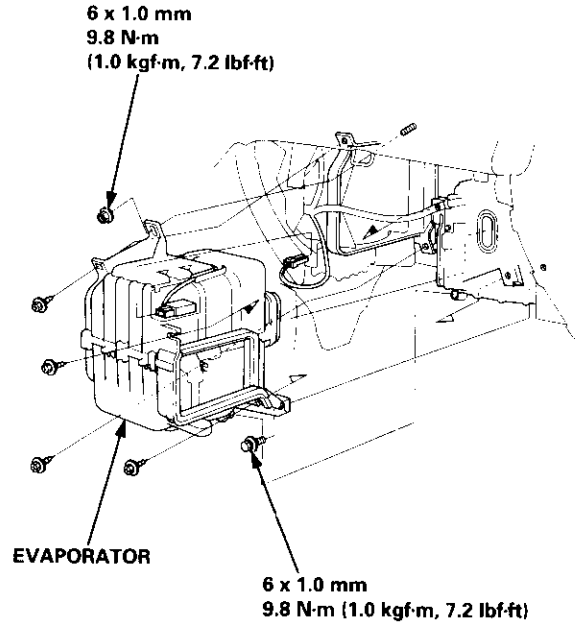

4. Disconnect the connectors from the blower motor, blower resistor and recirculation control motor. Remove the wire harness clip from the recirculation control motor, and release the wire harness from the clamp on the blower unit. Remove the two mounting bolts, the mounting nut and the blower unit.

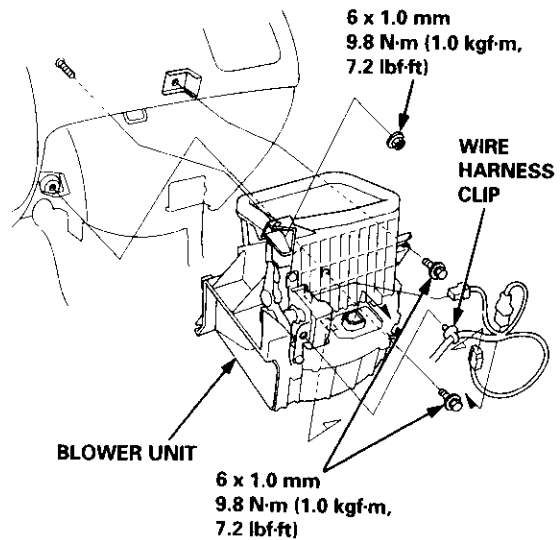


5. Install in the reverse order of removal. Make sure that there is no air leakage.



Overhaul

NOTE:

- Before reassembly, make sure that the recirculation control door and linkage move smoothly without binding.
- When attaching the recirculation control motor, make sure its positioning will not allow the recirculation control door to be pulled too far.
- After attaching the recirculation control motor, connect power and ground, and watch the movement of the recirculation control door.

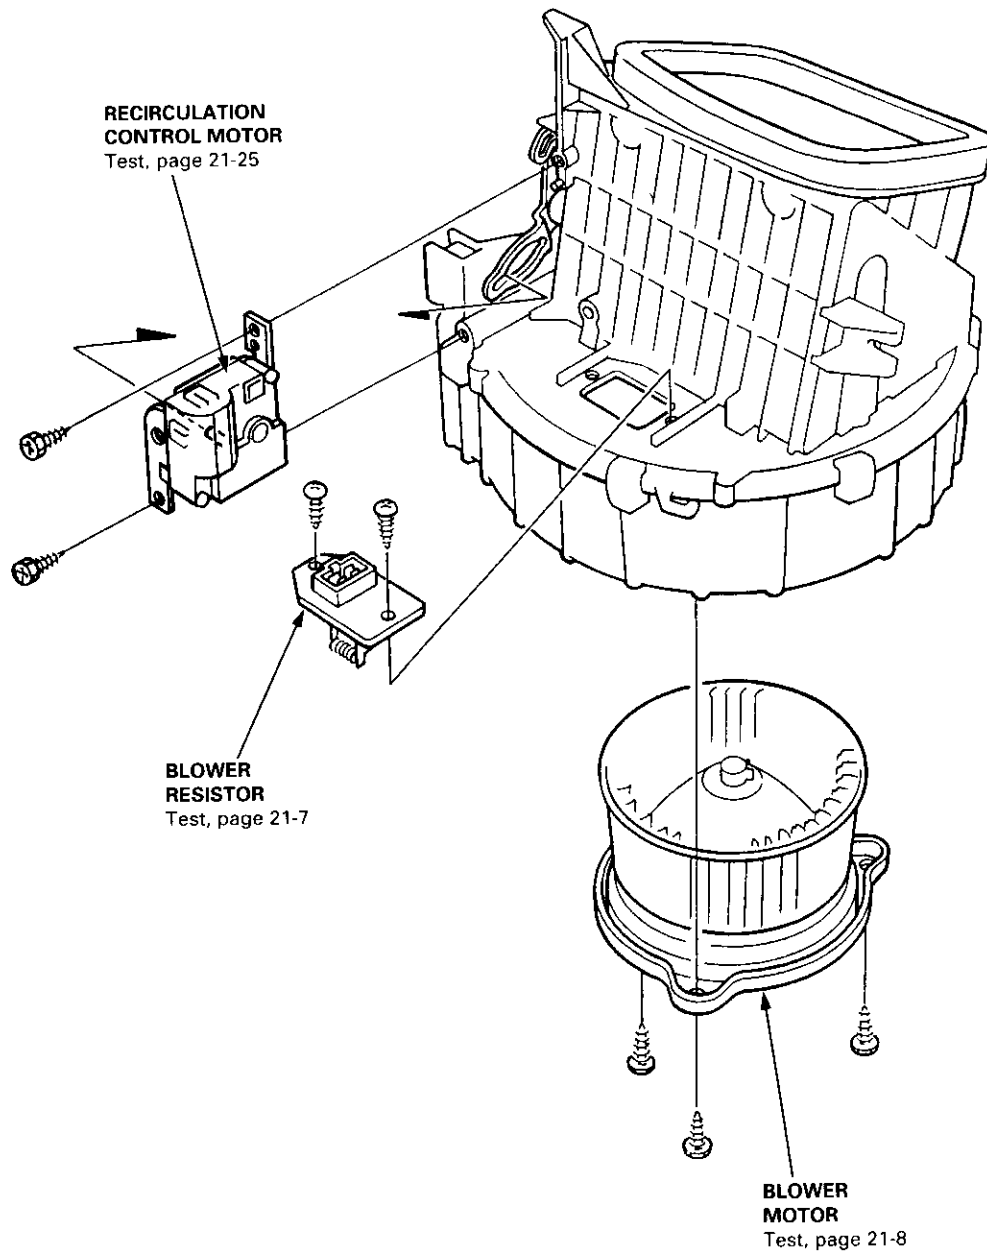

Heater Unit


Replacement

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

1. Disconnect the negative cable from the battery.
2. When the engine is cool, set the temperature control lever to MAX. HOT (open the heater valve), then drain the engine coolant from the radiator (see section 10).

⚠ WARNING Do not remove the radiator cap when the engine is hot; the engine coolant is under pressure and could severely scald you.


3. Open the clamp, then disconnect the heater valve cable from the heater valve arm.

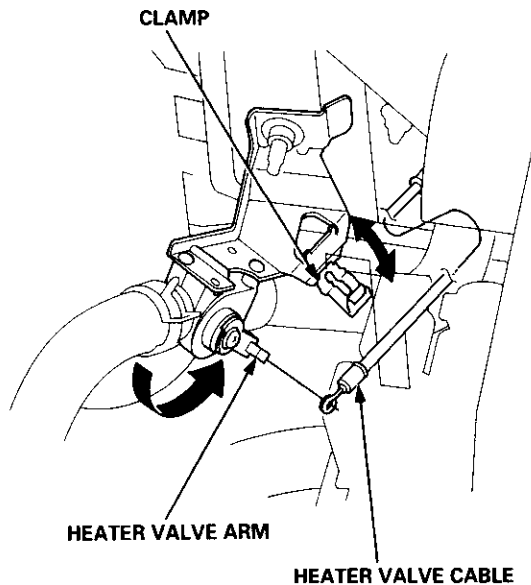

4. Disconnect the heater hoses from the heater unit.

CAUTION: Engine coolant will damage paint. Quickly rinse any spilled engine coolant from painted surfaces.


NOTE: Engine coolant will run out when the hoses are disconnected; drain it into a clean drip pan.

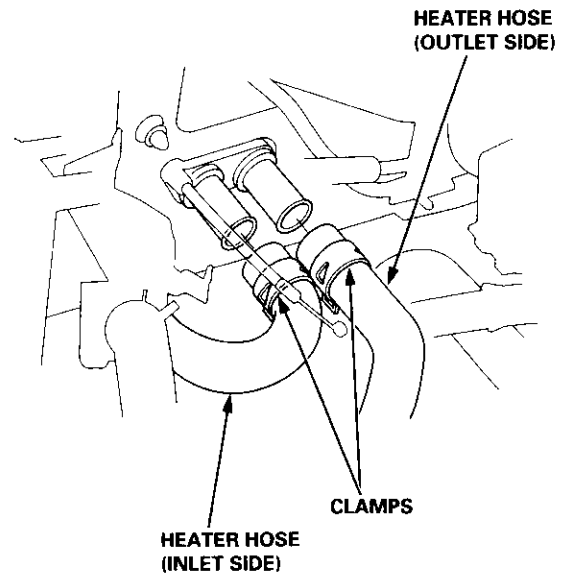


5. Remove the mounting nut from the heater unit.


NOTE: When removing the mounting nut, take care not to damage or bend the fuel pipes, the brake pipes, etc.

8 x 1.25 mm
22 N·m (2.2 kgf·m, 16 lbf·ft)

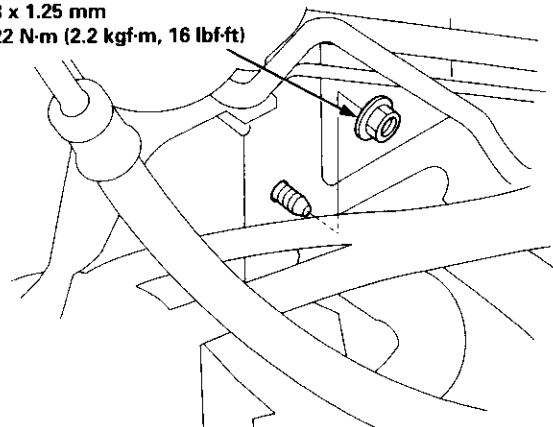



6. Remove the dashboard (see section 20).
7. Remove the heater duct (see page 21-16) or evaporator (see page 22-25).
8. Disconnect the connector from the mode control motor, and remove the wire harness clips and wire harness from the heater unit. Remove the clip from the heater duct, then remove the two mounting nuts and the heater unit.

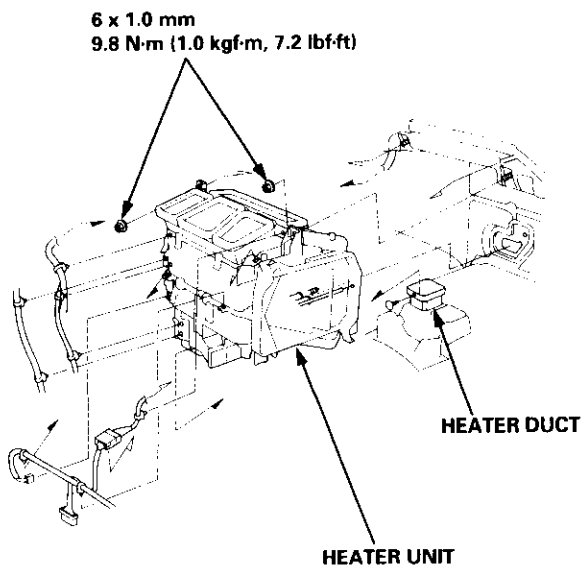

9. Install in the reverse order of removal. Make note of the following items.
 - Apply sealant to the grommets.
 - Do not interchange the inlet and outlet heater hoses. Make sure that the clamps are secure.
 - Refill the cooling system with engine coolant (see section 10).
 - Connect all cables, and make sure they are properly adjusted (see page 21-23).
 - Make sure that there is no air leakage.

Heater Unit


Overhaul

1. Remove the two self-tapping screws and the heater core cover.
2. Pull out the grommet from the heater core pipes.
3. Remove the self-tapping screw and the clamp.


4. Pull out the heater core from the heater unit.

NOTE: Be careful not to bend the inlet and outlet pipes during heater core removal.

5. Assemble in the reverse order of disassembly.

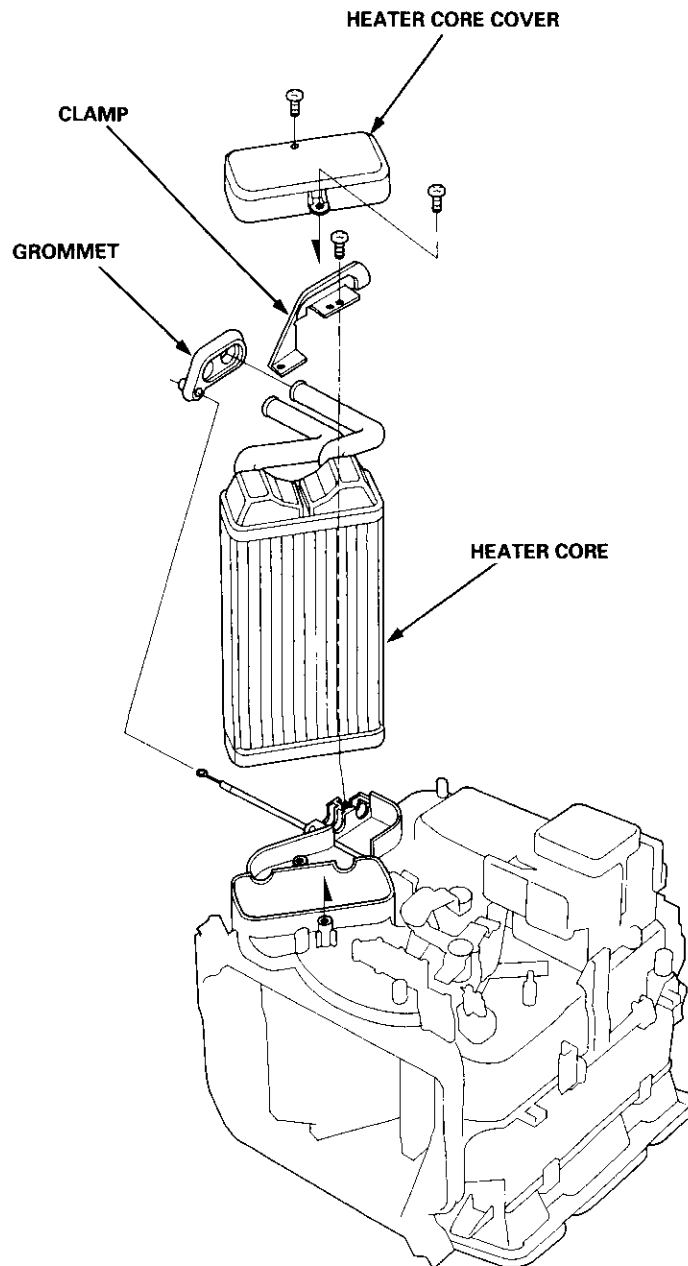


Heater Control Panel




Replacement

1. Remove the driver's dashboard lower cover, the glove box and the center dashboard lower cover (see section 20).
2. Disconnect the air mix control cable from the heater unit (see page 21-23).
3. Remove the rear window defogger switch, the hazard warning switch and the audio unit (see section 23).
4. Disconnect the connectors from the heater control panel. Remove the five self-tapping screws and the center panel together with the heater control panel.

NOTE: The locking tabs are on the bottom of the connectors.

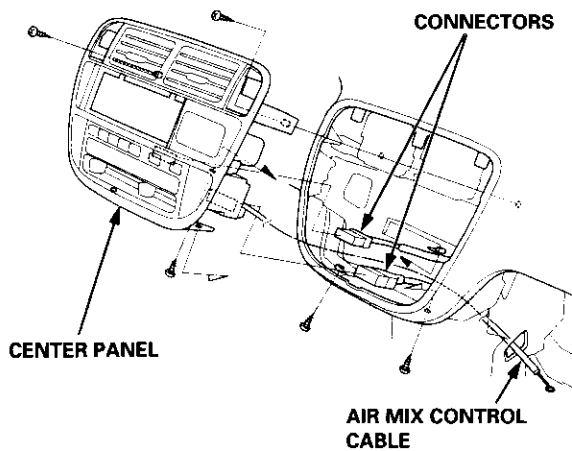


5. Remove the four self-tapping screws and the heater control panel.

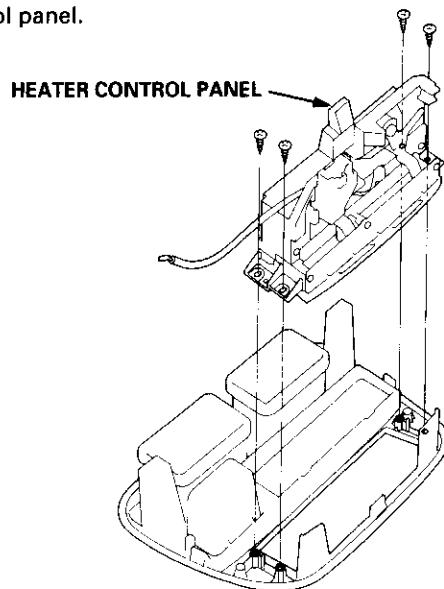

6. Install in the reverse order of removal. Adjust the air mix control cable and the heater valve cable (see page 21-23).


Heater Control Panel

Overhaul

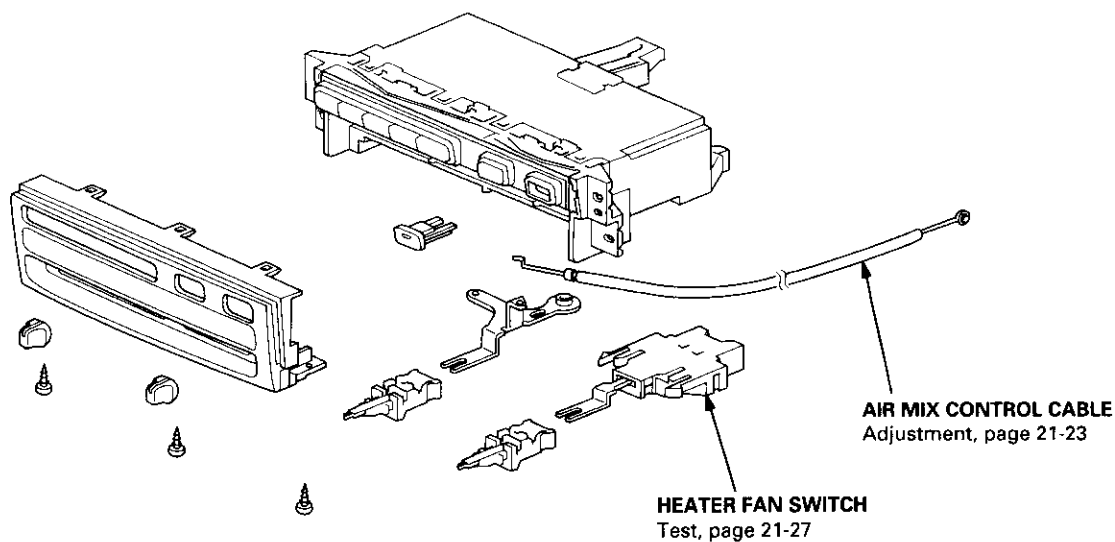

Air Mix Control Cable Replacement

1. Cut the inner cable on the lever side of the cable holder, then remove both pieces of the inner cable.
2. Using a sharp knife, cut completely through the end of the cable housing at the two locations.
3. Slide the large section of the cable housing out of the cable holder, being careful not to damage the cable stops.
4. Carefully remove the cut pieces of the cable housing with a small flat tip screwdriver.
5. Hook the tip of the new air mix control cable to the temperature control lever, then push the cable housing into the cable holder until it locks into place.

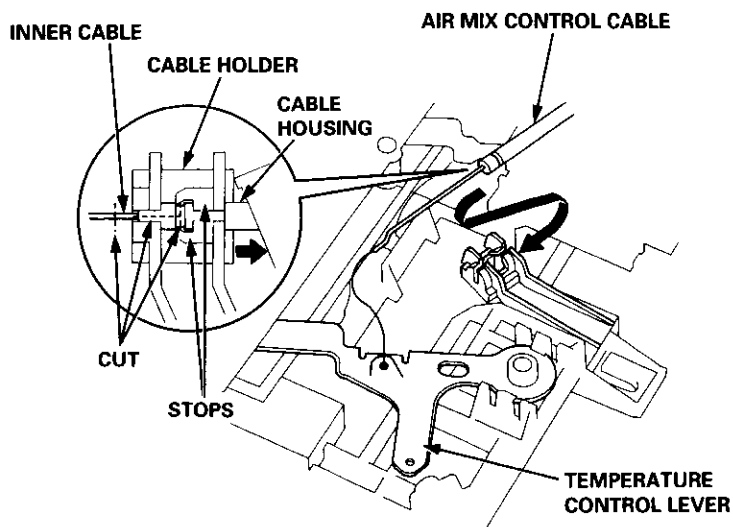


NOTE: After assembly, check that the temperature control lever slides smoothly through the full stroke from right to left.

Temperature Control




Adjustment

1. Under the hood, disconnect the heater valve cable from the heater valve.

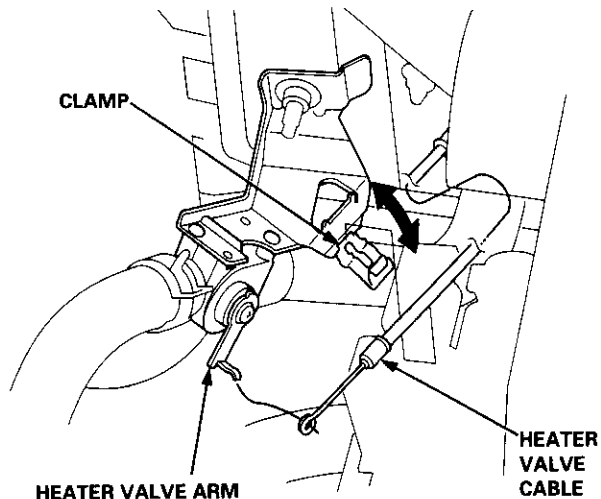


2. Under the dash, disconnect the air mix control cable housing from the cable clamp.

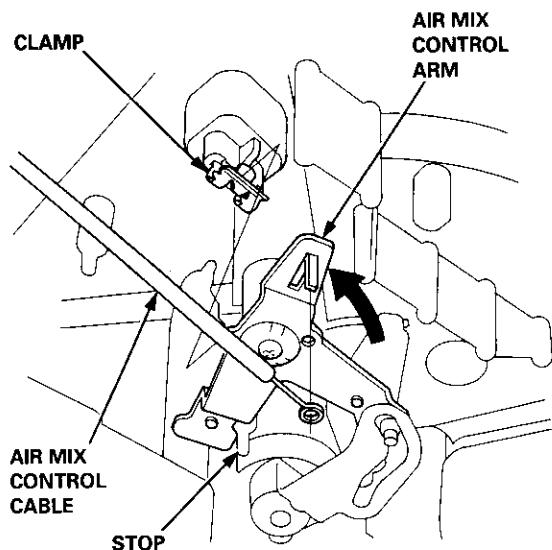

3. Set the temperature control lever to MAX. COOL.
4. With the air mix control cable attached to the air mix control arm, gently pull on the outer cable housing to fully close the door and to remove any slack in the cable. Don't pull too hard, or the temperature control lever will move.
5. Hold the air mix control arm against the stop, then snap the air mix control cable housing into the cable clamp.

6. Under the hood, move the heater valve arm to the fully closed position, then attach the heater valve cable to the heater valve arm.

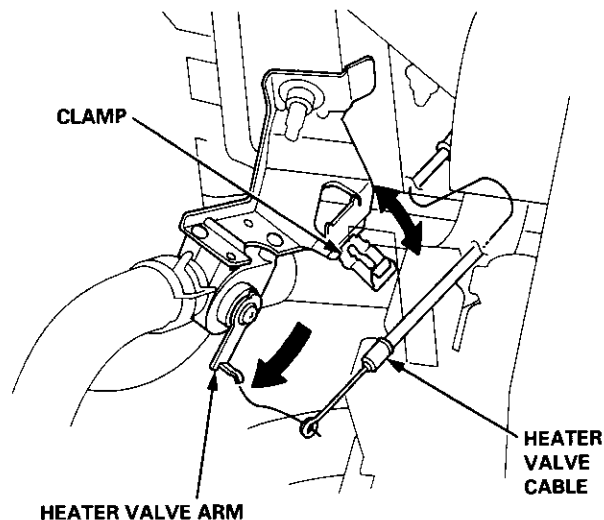

7. Hold the heater valve arm in the closed position, and gently pull on the heater cable outer housing to take up any slack, then install the heater valve cable housing into the cable clamp.

Mode Control Motor

Test


1. Disconnect the 7P connector from the mode control motor.
2. Connect battery power to the No. 1 terminal, and ground the No. 7 terminal.

CAUTION: Never connect the battery in the opposite direction.

3. Using a jumper wire, connect the No. 7 terminal individually to the No. 2, 3, 4, 5 and 6 terminals in that order. Each time the connection is made, the mode control motor should run smoothly and stop.

NOTE: If the mode control motor does not run when jumping the first terminal, jump that terminal again after jumping the other terminals. The mode control motor is OK if it runs when jumping the first terminal again.


MODE CONTROL MOTOR

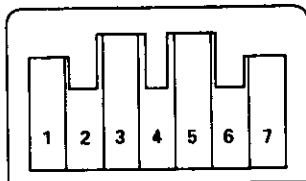

4. If the mode control motor does not run in step 3, remove it, then check the mode control linkage and doors for smooth movement. If they move smoothly, replace the mode control motor.


Replacement

1. Disconnect the 7P connector from the mode control motor.
2. Remove the rod from the arm of the mode control motor.
3. Remove the two self-tapping screws and the mode control motor.

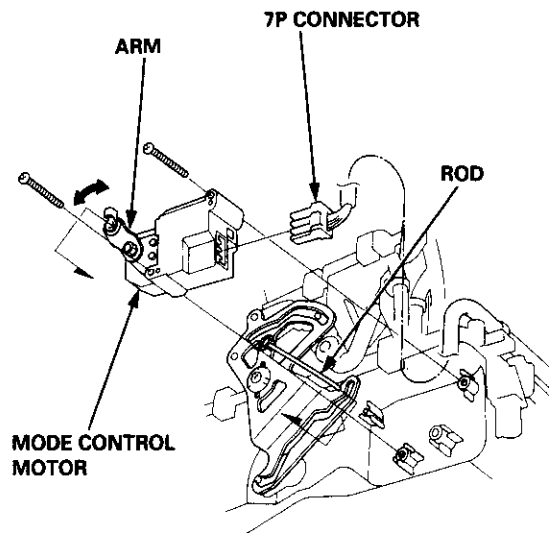

4. Install in the reverse order of removal. After installation, make sure the mode control motor runs smoothly.

Recirculation Control Motor



Test


1. Disconnect the 4P connector from the recirculation control motor.
2. Connect battery power to the No. 1 terminal, and ground the No. 2 and No. 4 terminals; the recirculation control motor should run smoothly.

CAUTION: Never connect the battery in the opposite direction.

3. Disconnect the No. 2 or No. 4 terminals from ground; the recirculation control motor should stop at FRESH or RECIRCULATE.

NOTE: Don't cycle the recirculation control motor for a long time.


RECIRCULATION CONTROL MOTOR

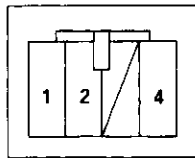

4. If the recirculation control motor does not run in step 2, remove it, then check the recirculation control linkage and door for smooth movement. If they move smoothly, replace the recirculation control motor.

Replacement

1. Disconnect the 4P connector from the recirculation control motor, and remove the wire harness clip from it.
2. Remove the two self-tapping screws and the recirculation control motor.

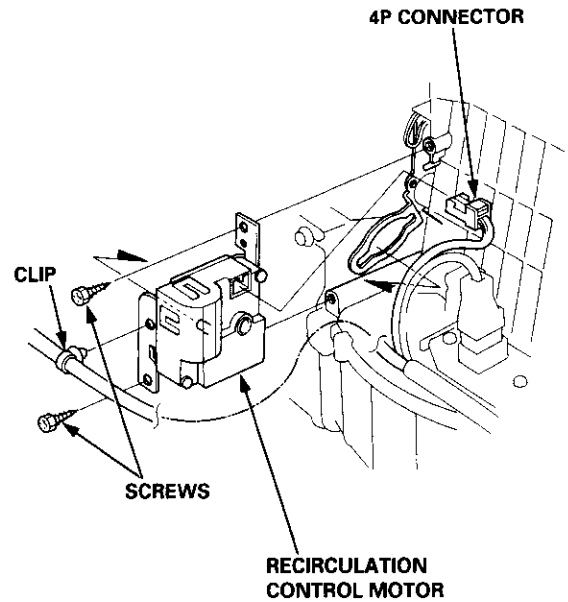



3. Install in the reverse order of removal. After installation, make sure the recirculation control motor runs smoothly.

Relay

Heater Fan Switch

Test


There should be continuity between the No. 1 and No. 3 terminals when power and ground are connected to the No. 2 and No. 4 terminals, and there should be no continuity when power is disconnected.

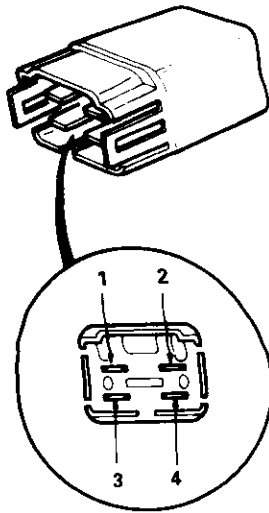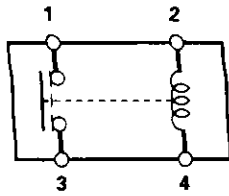

Test

Check for continuity between the terminals according to the table below.

Terminal Position	1	6	4	2	5	3
OFF						
1	○	○	○			
2	○	○		○		
3	○	○			○	
4	○	○				○

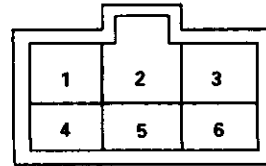


Mode Control Switch



Test


Check for continuity between the terminals according to the table below.

Position \ Terminal	10	7	1	4	8	9
Heat	○	○				
Heat/Def	○		○			
Def	○			○		
Vent	○				○	
Heat/Vent	○					○

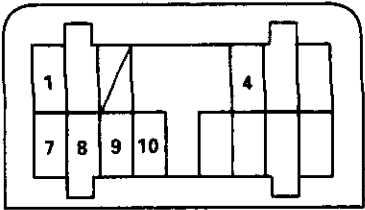

Air Conditioning


Special Tools	22-2	Evaporator	
Illustrated Index	22-3	Replacement	22-25
Wiring/Connector Locations	22-4	Overhaul	22-26
Description		Compressor	
Outline	22-5	Replacement	22-27
Circuit Diagram	22-6	Illustrated Index	22-29
Troubleshooting		Clutch Inspection	22-30
Symptom Chart	22-7	Clutch Overhaul	22-31
Condenser Fan	22-8	Thermal Protector Replacement	22-33
Compressor	22-11	Relief Valve Replacement	22-33
A/C System	22-15	A/C Compressor Belt	
A/C Thermostat		Adjustment	22-34
Test	22-18	Condenser	
Relay		Replacement	22-35
Test	22-18	A/C System Service	
A/C Service Tips and Precautions	22-19	Evacuation	22-36
A/C System Torque Specifications	22-20	Charging	22-37
A/C System Service		Leak Test	22-37
Recovery	22-21		
Performance Test	22-22		
Pressure Test Chart	22-24		




Special Tools

Ref. No.	Tool Number	Description	Qty	Page Reference
①	*07JGG - 001010A	Belt Tension Gauge	1	22-34
②	07SAZ - 001000A	Backprobe Set	2	22-12, 14
③	07947 - 6340300	Driver Attachment	1	22-31
④	07965 - 6920500	Hub Assembly Guide Attachment	1	22-32


* Included in the Belt Tension Gauge Set, 07TGG-001000A.

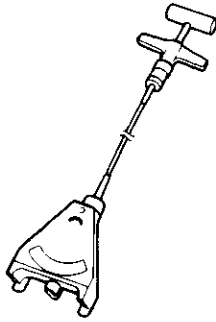


①

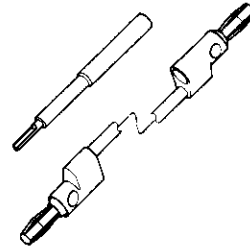



②

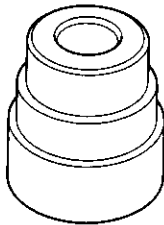


③

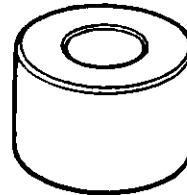

④

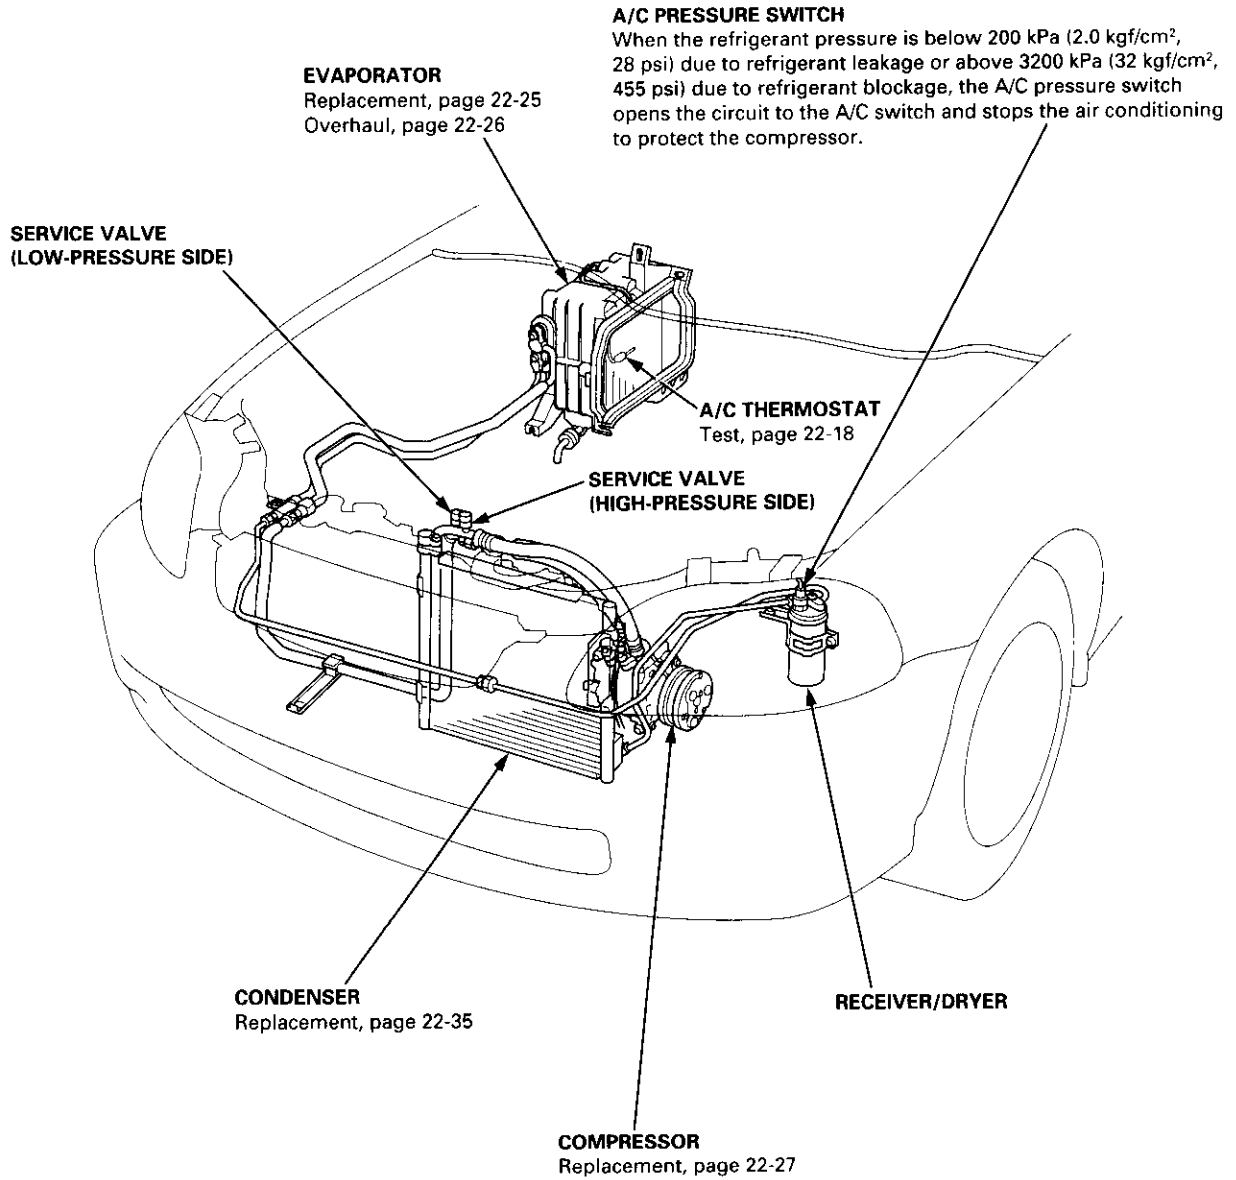

Wiring/Connector Locations


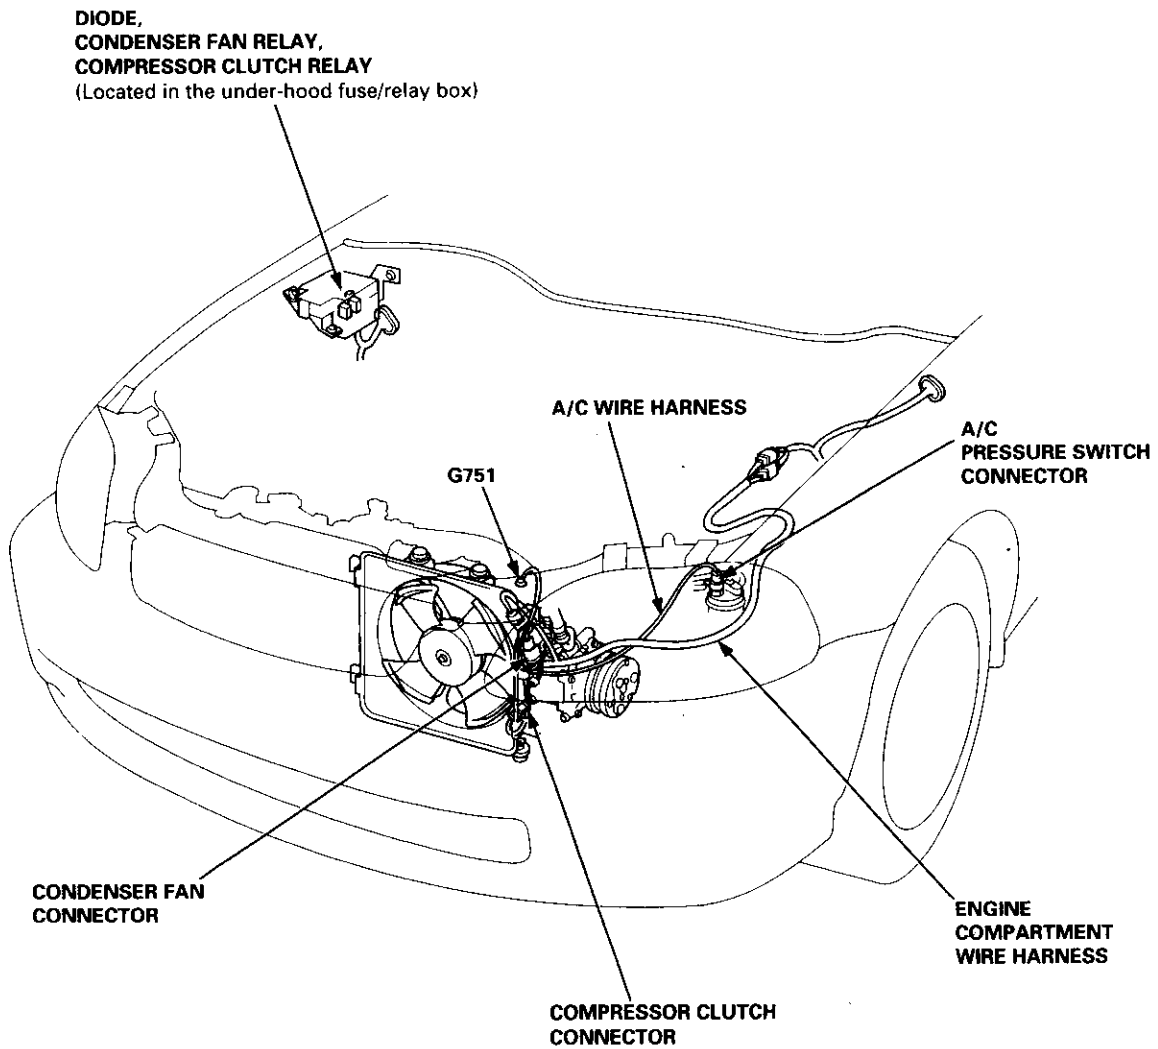


Description



Outline


The air conditioner system removes heat from the passenger compartment by circulating refrigerant through the system as shown below.

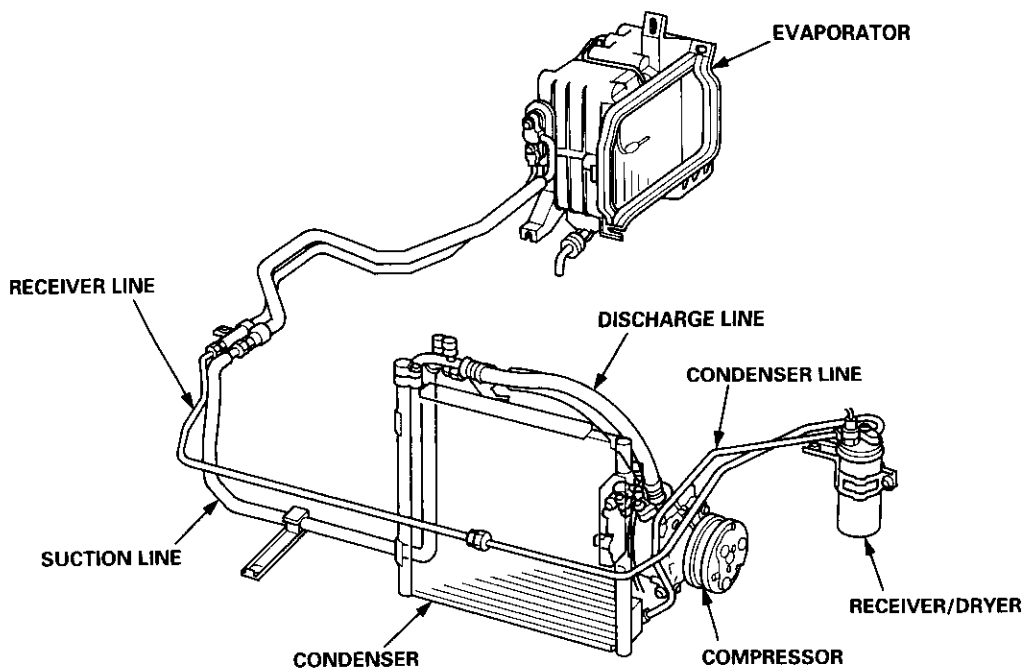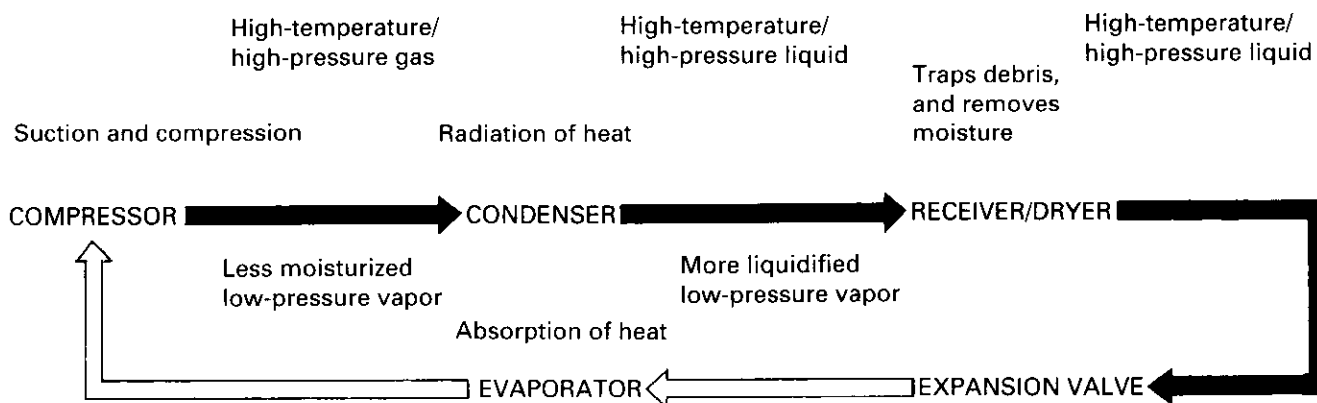


This car uses HFC-134a (R-134a) refrigerant which does not contain chlorofluorocarbons. Pay attention to the following service items:

- Do not mix refrigerants CFC-12 (R-12) and HFC-134a (R-134a). They are not compatible.
- Use only the recommended polyalkyleneglycol (PAG) refrigerant oil (SP-10) designed for the R-134a compressor. Intermixing the recommended (PAG) refrigerant oil with any other refrigerant oil will result in compressor failure.
- All A/C system parts (compressor, discharge line, suction line, evaporator, condenser, receiver/dryer, expansion valve, O-rings for joints) have to be proper for refrigerant R-134a. Do not confuse with R-12 parts.
- Use a halogen gas leak detector designed for refrigerant R-134a.
- R-12 and R-134a refrigerant servicing equipment are not interchangeable. Use only a Recovery/Recycling/Charging System that is U.L.-listed and is certified to meet the requirements of SAE J2210 to service R-134a air conditioning systems.
- Always recover the refrigerant R-134a with an approved Recovery/Recycling/Charging System before disconnecting any A/C fitting.

Circuit Diagram

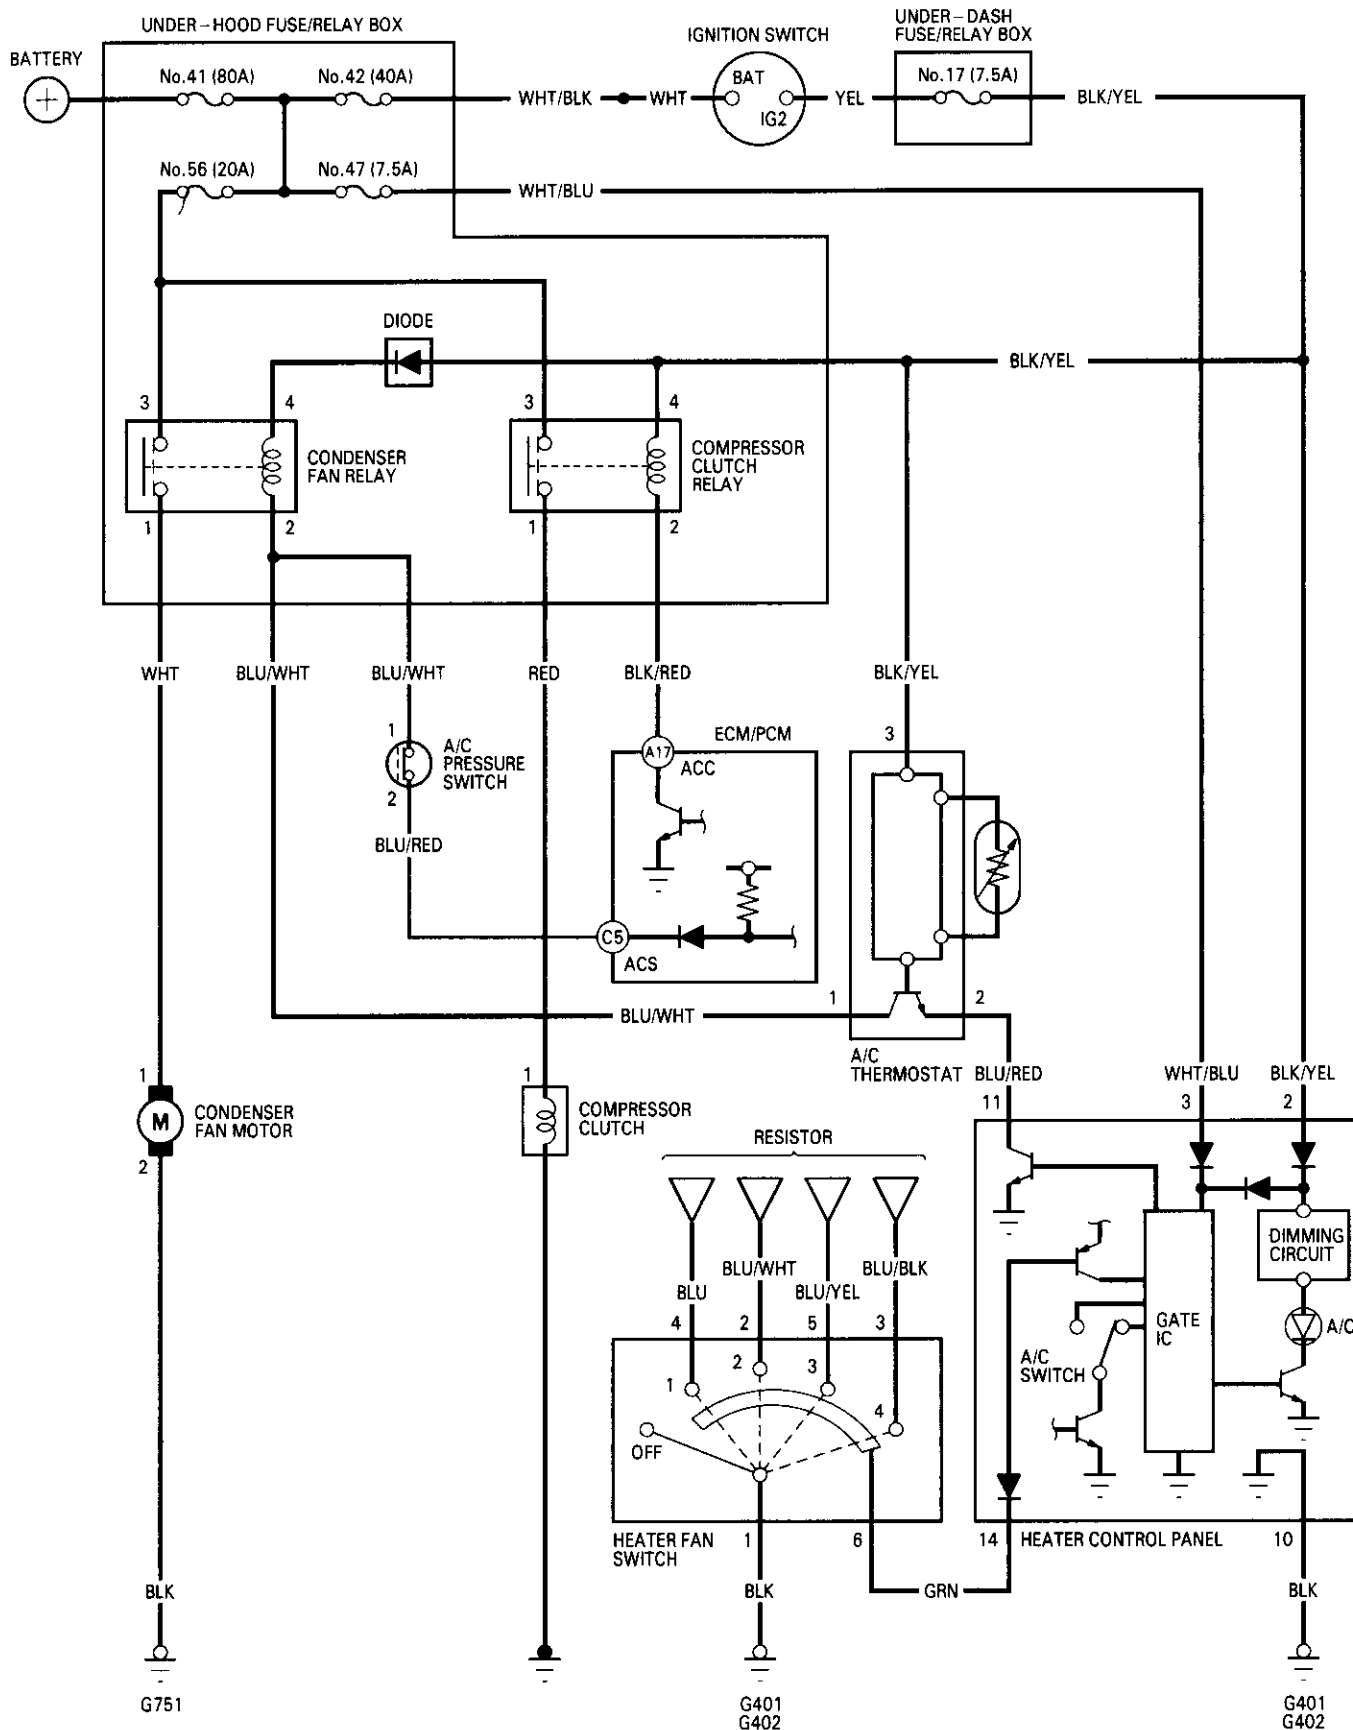



Symptom Chart


NOTE:

- Any abnormality must be corrected before continuing the test.
 - Because of the precise measurements needed, use a multimeter when testing.
 - Before performing any troubleshooting procedures check:
 - Fuses *1No. 47 (7.5 A), *1No. 56 (20 A), *2No. 17 (7.5 A)
 - Grounds No. G401, G402, G751
 - Cleanliness and tightness of all connectors
- *1: In the under-hood fuse/relay box
*2: In the under-dash fuse/relay box



Symptom	Remedy
Condenser fan does not run at all.	Perform the procedures in the flowchart (see page 22-8).
Compressor clutch does not engage.	Perform the procedures in the flowchart (see page 22-11).
A/C system does not come on (compressor and fan).	Perform the procedures in the flowchart (see page 22-15).

Troubleshooting

Condenser Fan

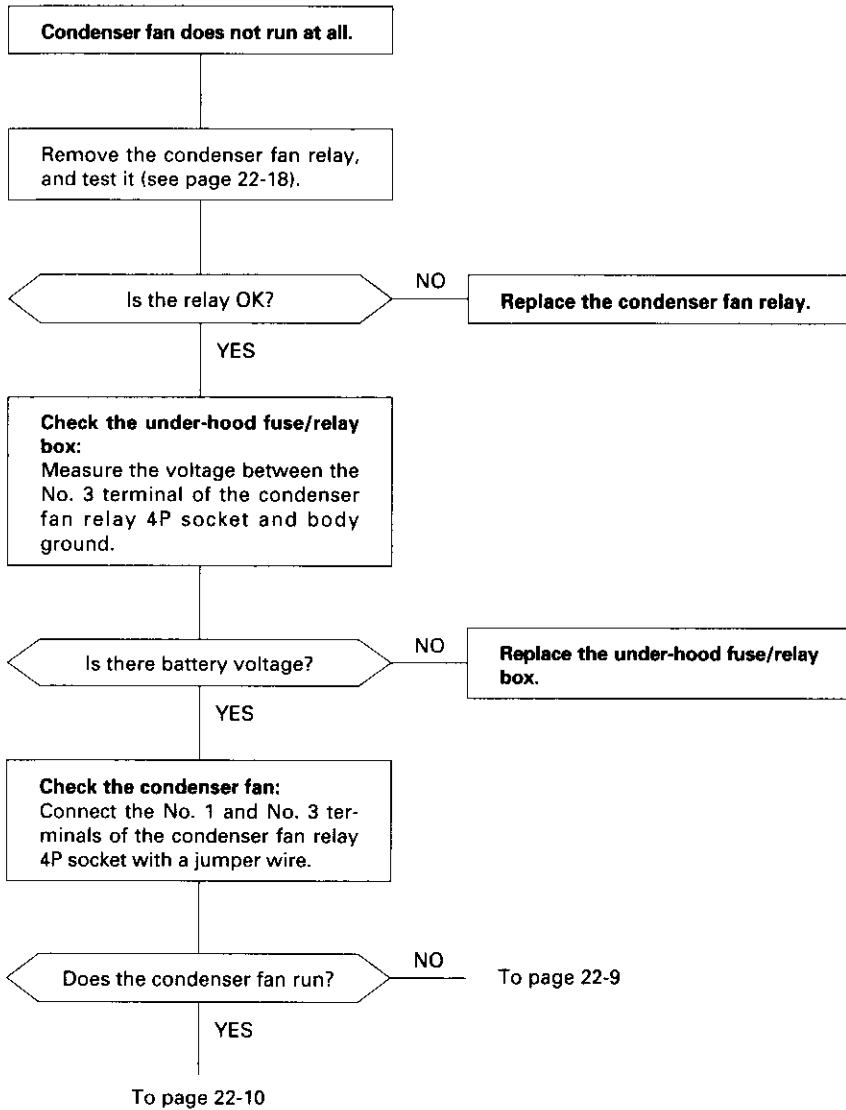

CONDENSER FAN RELAY 4P SOCKET

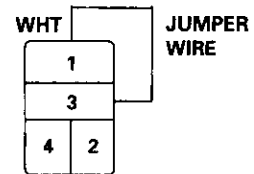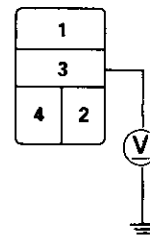



From page 22-8

Check for an open in the wire:
1. Disconnect the jumper wire.
2. Disconnect the condenser fan 2P connector.
3. Check for continuity between the No. 1 terminal of the condenser fan relay 4P socket and the No. 1 terminal of the condenser fan 2P connector.

Is there continuity?

NO
Repair open in the wire between the condenser fan relay and the condenser fan.

YES

Check for an open in the wire:
Check for continuity between the No. 2 terminal of the condenser fan 2P connector and body ground.


Is there continuity?

YES
Replace the condenser fan motor.


NO

Check for an open in the wire between the condenser fan and body ground. If the wire is OK, check for poor ground at G751.

CONDENSER FAN RELAY 4P SOCKET

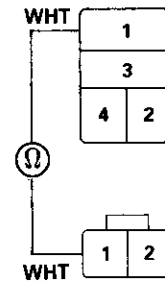

CONDENSER FAN 2P CONNECTOR WIRE SIDE OF FEMALE TERMINALS

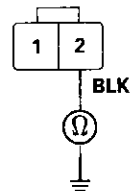

(cont'd)

Troubleshooting

Condenser Fan (cont'd)

From page 22-8

Check the diode:

1. Disconnect the jumper wire.
2. Remove the diode from the under-hood fuse/relay box.
3. Check for current flow in both directions between the A and B terminals.


Is there current flow in only one direction?


NO

Replace the diode.


YES

Replace the under-hood fuse/relay box.



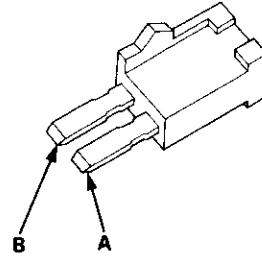




Compressor

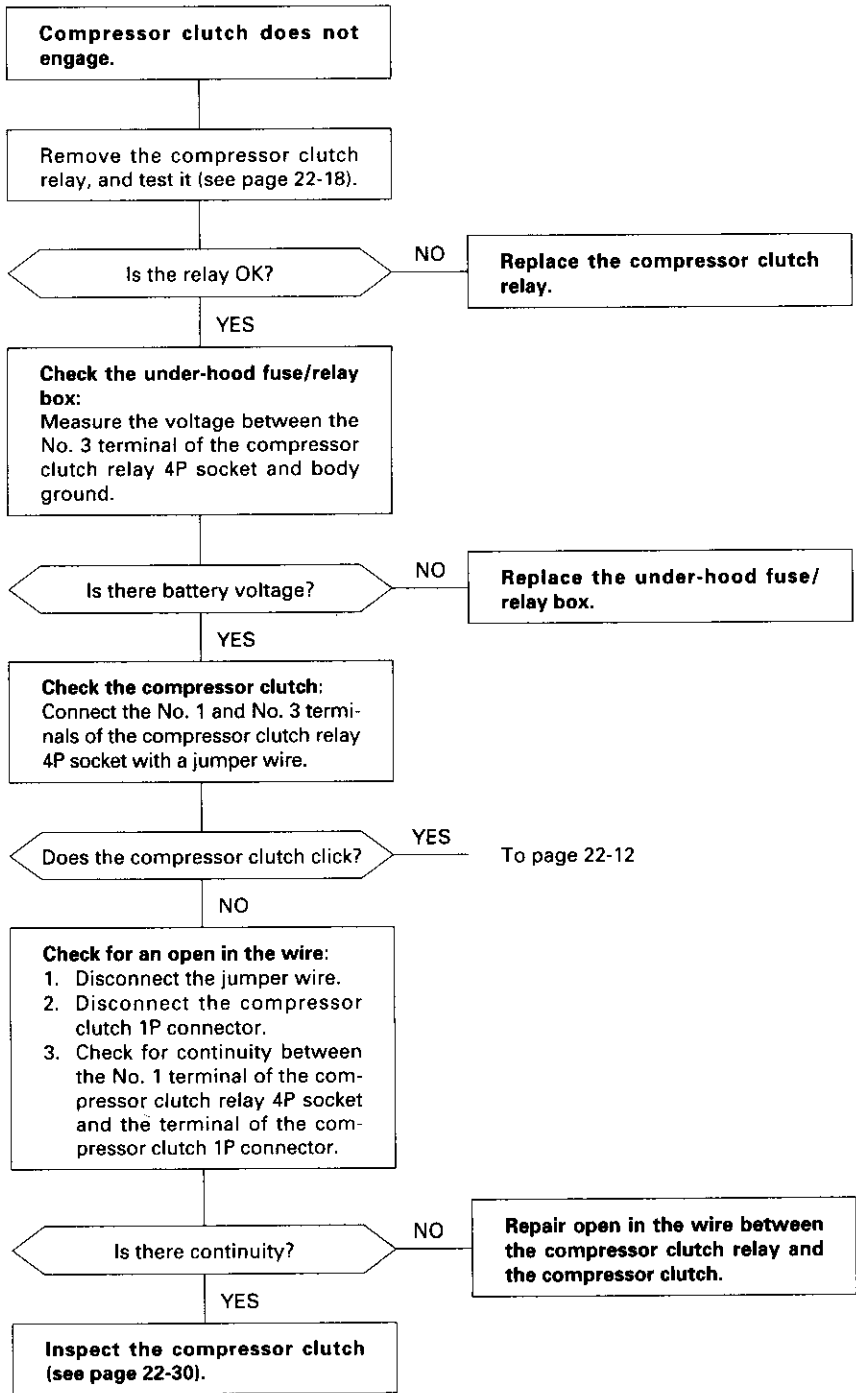

COMPRESSOR CLUTCH RELAY 4P SOCKET

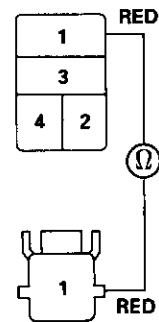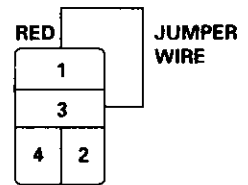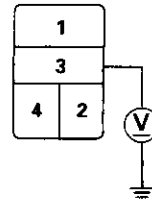


COMPRESSOR CLUTCH 1P CONNECTOR WIRE SIDE OF FEMALE TERMINAL

(cont'd)


Troubleshooting

Compressor (cont'd)


From page 22-11

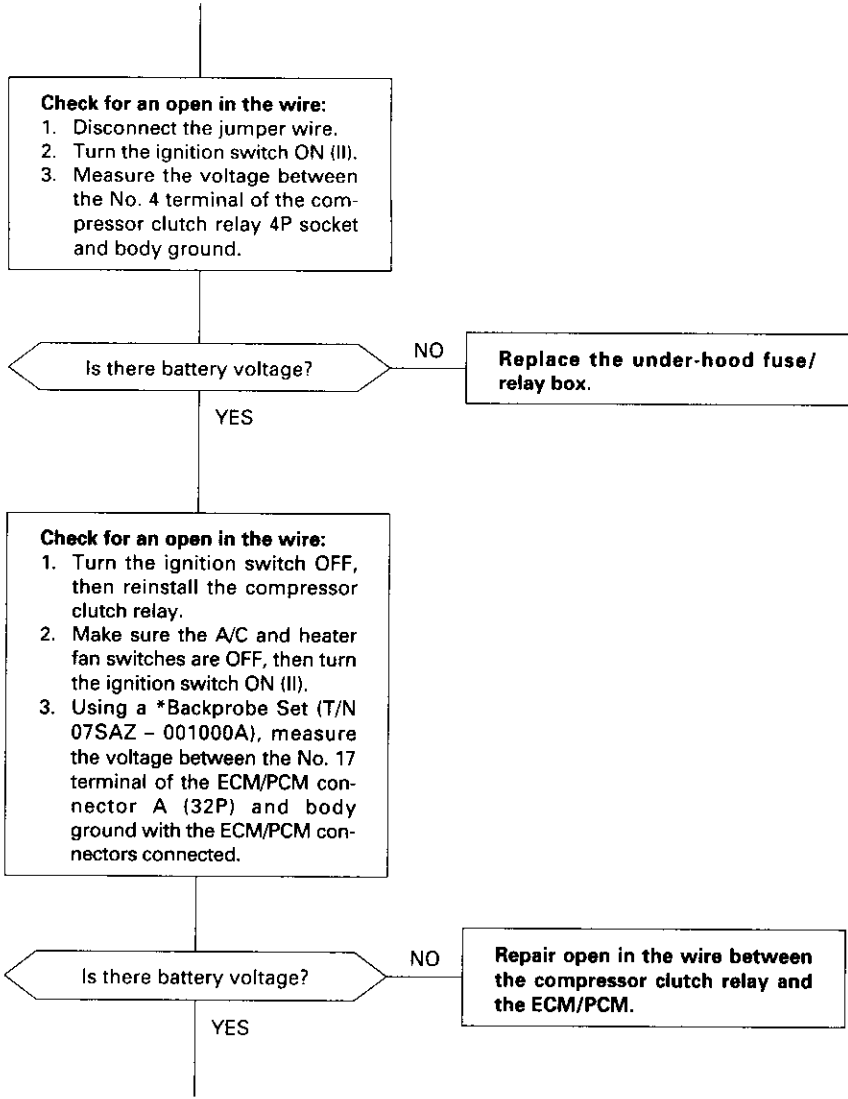

COMPRESSOR CLUTCH RELAY 4P SOCKET

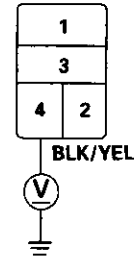


ECM/PCM CONNECTOR A (32P)

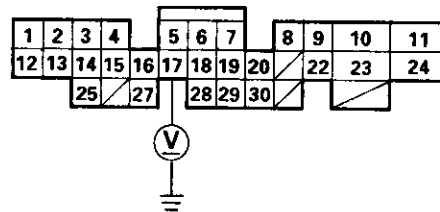


WIRE SIDE OF FEMALE TERMINALS


***How to use the backprobe sets**
 Connect the backprobe adapters to the stacking patch cords, and connect the cords to a multimeter. Using the wire insulation as a guide for the contoured tip of the backprobe adapter, gently slide the tip into the connector from the wire side until it comes in contact with the terminal end of the wire (see section 11).



From page 22-12

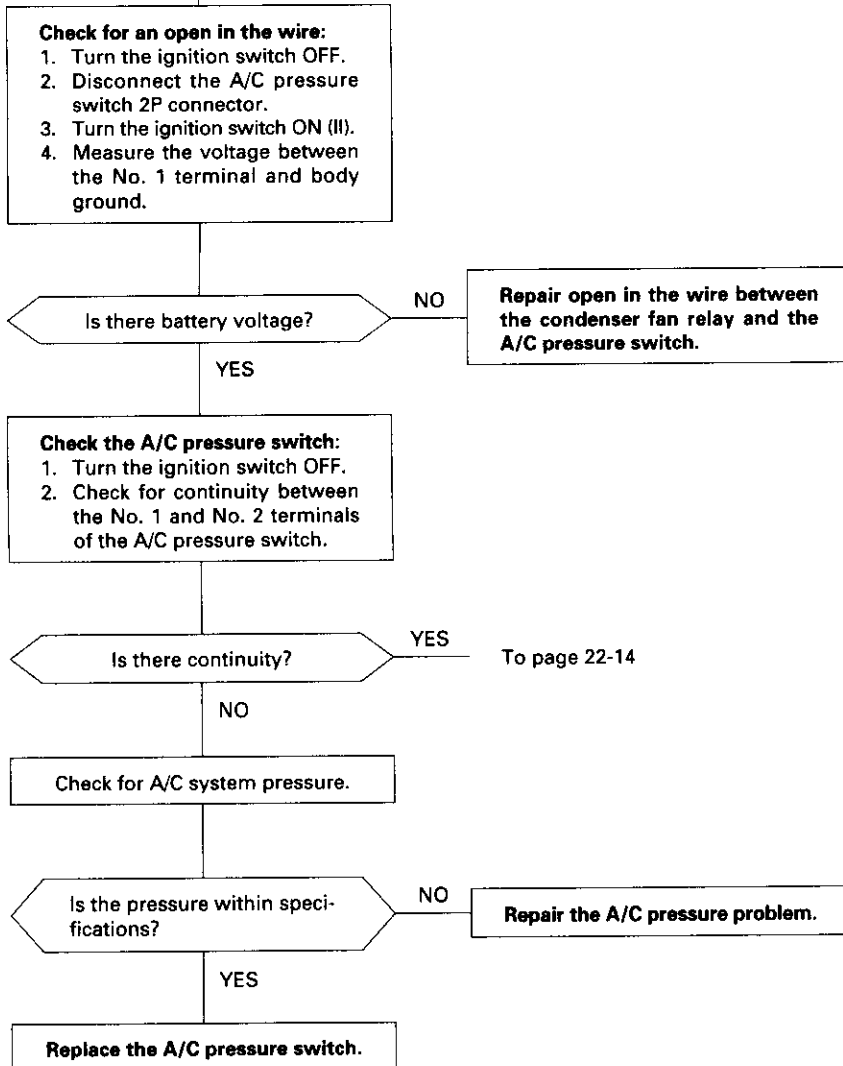


A/C PRESSURE SWITCH 2P CONNECTOR

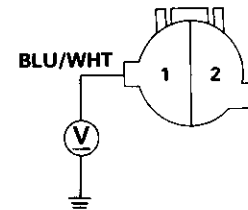

WIRE SIDE OF FEMALE TERMINALS

A/C PRESSURE SWITCH

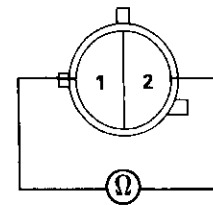

(cont'd)

Troubleshooting


Compressor (cont'd)

From page 22-13

Check for an open in the wire:

1. Reconnect the A/C pressure switch 2P connector, then turn the ignition switch ON (II).
2. Using a *Backprobe Set (T/N 07SAZ - 001000A), measure the voltage between the No. 5 terminal of the ECM/PCM connector C (31P) and body ground with the ECM/PCM connectors connected.

ECM/PCM CONNECTOR C (31P)

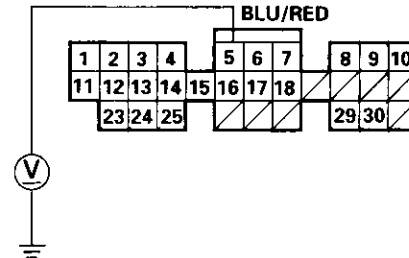

WIRE SIDE OF FEMALE TERMINALS

Is there battery voltage?

NO


Repair open in the wire between the A/C pressure switch and the ECM/PCM.

YES


Check for loose wires or poor connections at the ECM/PCM connectors A (32P) and C (31P). If the connections are good, substitute a known-good ECM/PCM, and recheck. If the symptom/indication goes away, replace the original ECM/PCM.

*How to use the backprobe sets



Connect the backprobe adapters to the stacking patch cords, and connect the cords to a multimeter. Using the wire insulation as a guide for the contoured tip of the backprobe adapter, gently slide the tip into the connector from the wire side until it comes in contact with the terminal end of the wire (see section 11).




A/C System

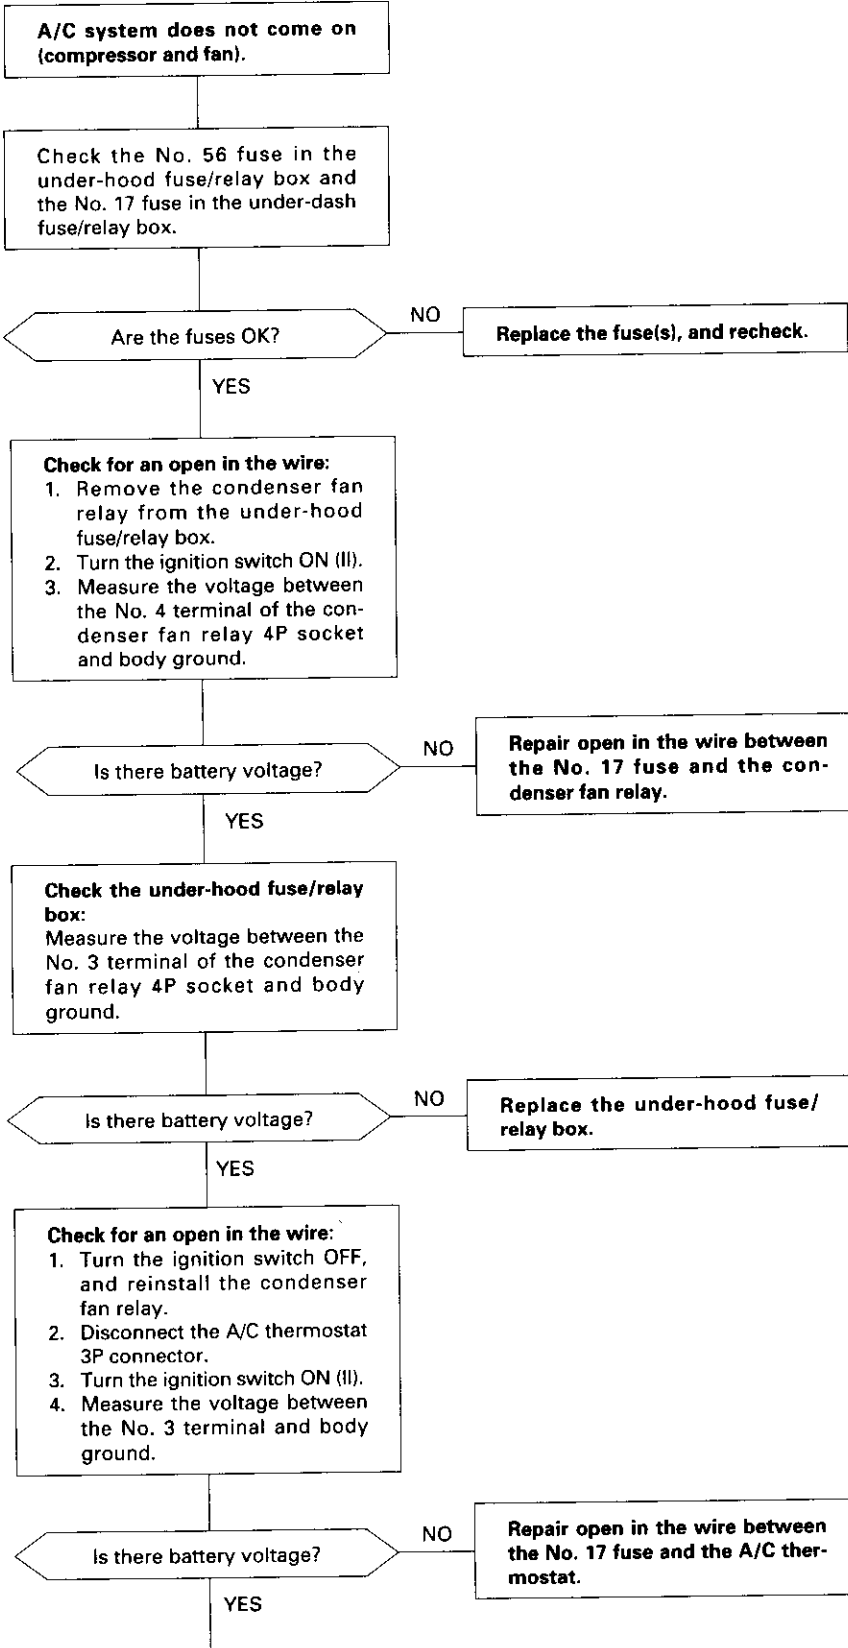

CONDENSER FAN RELAY 4P SOCKET

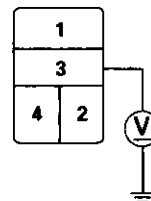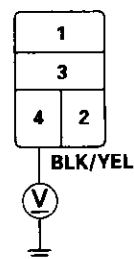

A/C THERMOSTAT 3P CONNECTOR

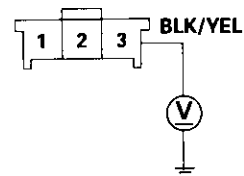

WIRE SIDE OF FEMALE TERMINALS

To page 22-16

(cont'd)

Troubleshooting

A/C System (cont'd)

From page 22-15

Check for an open in the wire:
Measure the voltage between the No. 1 terminal of the A/C thermostat 3P connector and body ground.

Is there battery voltage?

NO
Repair open in the wire between the condenser fan relay and the A/C thermostat.

YES

Check the A/C thermostat:
1. Turn the ignition switch OFF.
2. Reconnect the A/C thermostat 3P connector.
3. Connect the No. 2 terminal to ground with a jumper wire.
4. Start the engine.

Do both fans run and does the compressor clutch engage?

NO
Replace the A/C thermostat.

YES



Check for an open in the wire:
1. Turn the ignition switch OFF, then disconnect the jumper wire.
2. Remove the center dashboard lower cover (see section 20), and disconnect the heater control panel 14P connector.
3. Turn the ignition switch ON (II).
4. Measure the voltage between the No. 11 terminal and body ground.

Is there battery voltage?


NO
Repair open in the wire between the A/C thermostat and the heater control panel.

YES


To page 22-17

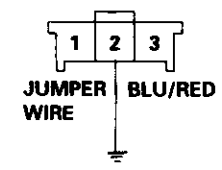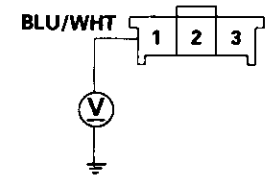

HEATER CONTROL PANEL 14P CONNECTOR

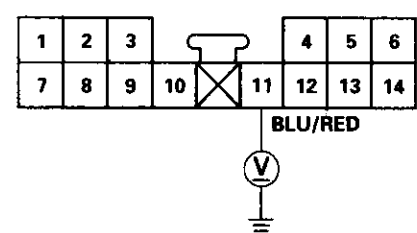

WIRE SIDE OF FEMALE TERMINALS



From page 22-16

Check for an open in the wire:
 1. Turn the ignition switch OFF.
 2. Disconnect the heater fan switch 6P connector.
 3. Check for continuity between the No. 14 terminal of the heater control panel 14P connector and the No. 6 terminal of the heater fan switch 6P connector.

Is there continuity? NO

Repair open in the wire between the heater control panel and the heater fan switch.

YES

Check for an open in the wire:
 Check for continuity between the No. 1 terminal of the heater fan switch 6P connector and body ground.

Is there continuity? NO

Check for an open in the wire between the heater fan switch and body ground. If the wire is OK, check for poor ground at G401 and G402.

YES

Test the heater fan switch (see page 21-26).

Is the heater fan switch OK? NO



Replace the heater fan switch.

YES

Check for loose wires or poor connections at the heater control panel 14P connector. If the connections are good, replace the heater control panel.


HEATER CONTROL PANEL 14P CONNECTOR

WIRE SIDE OF FEMALE TERMINALS



HEATER FAN SWITCH 6P CONNECTOR

WIRE SIDE OF FEMALE TERMINALS

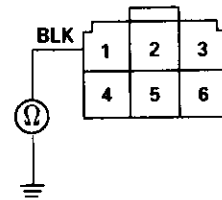

A/C Thermostat

Relay

Test

Connect battery power to the No. 3 terminal, ground the No. 2 terminal, and connect a test light between the No. 1 and No. 3 terminals.

NOTE: Use a 12 V, 3 W - 18 W test light.

Dip the A/C thermostat into a cup filled with ice water, and check the test light.


Serpentine type evaporator

The light should go off at 36 - 39°F (2 - 4°C) or less, and should come on at 39 - 41°F (4 - 5°C) or more.

Laminate type evaporator



The light should go off at 39 - 43°F (4 - 6°C) or less, and should come on at 43 - 45°F (6 - 7°C) or more.

If the light doesn't come on and go off as specified, replace the A/C thermostat.

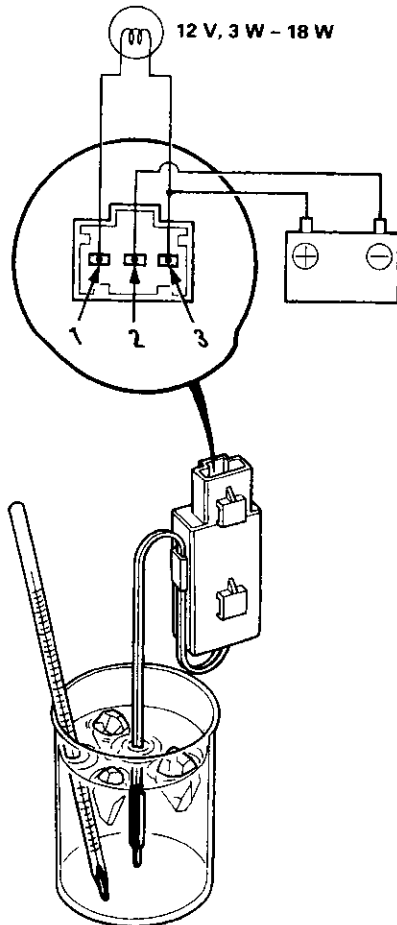


Test

There should be continuity between the No. 1 and No. 3 terminals when power and ground are connected to the No. 2 and No. 4 terminals, and there should be no continuity when power is disconnected.

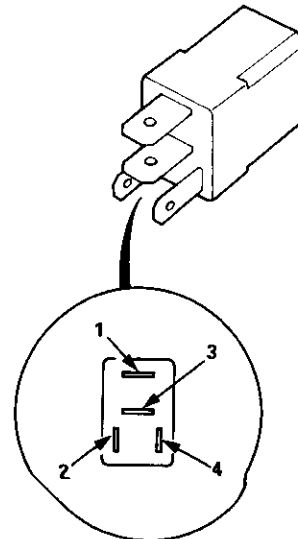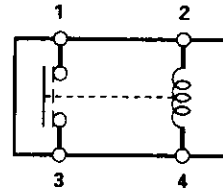

A/C Service Tips and Precautions



The air conditioner system uses HFC-134a (R-134a) refrigerant and polyalkyleneglycol (PAG) refrigerant oil*, which are not compatible with CFC-12 (R-12) refrigerant and mineral oil. Do not use R-12 refrigerant or mineral oil in this system, and do not attempt to use R-12 servicing equipment; damage to the air conditioner system or your servicing equipment will result.

*Sanden SP-10:

- P/N 38897 – P13 – A01AH: 120 ml (4 fl-oz, 4.2 Imp-oz)
- P/N 38899 – P13 – A01: 40 ml (1 1/3 fl-oz, 1.4 Imp-oz)

Use only service equipment that is U.L.-listed and is certified to meet the requirements of SAE J2210 to remove R-134a from the air conditioner system.

CAUTION: Exposure to air conditioner refrigerant and lubricant vapor or mist can irritate eyes, nose and throat. Avoid breathing the air conditioner refrigerant and lubricant vapor or mist.

If accidental system discharge occurs, ventilate work area before resuming service.

R-134a service equipment or vehicle air conditioner systems should not be pressure tested or leak tested with compressed air.

WARNING Some mixtures of air and R-134a have been shown to be combustible at elevated pressures and can result in fire or explosion causing injury or property damage. Never use compressed air to pressure test R-134a service equipment or vehicle air conditioner systems.

Additional health and safety information may be obtained from the refrigerant and lubricant manufacturers.


1. Always disconnect the negative cable from the battery whenever replacing air conditioning parts.
2. Keep moisture and dust out of the system. When disconnecting any lines, plug or cap the fittings immediately; don't remove the caps or plugs until just before you reconnect each line.
3. Before connecting any hose or line, apply a few drops of refrigerant oil to the O-ring.
4. When tightening or loosening a fitting, use a second wrench to support the matching fitting.
5. When discharging the system, use a R-134a refrigerant Recovery/Recycling/Charging System; don't release refrigerant into the atmosphere.
6. Add refrigerant oil after replacing the following parts:

NOTE:


- To avoid contamination, do not return the oil to the container once dispensed, and never mix it with other refrigerant oils.
- Immediately after using the oil, replace the cap on the container, and seal it to avoid moisture absorption.
- Do not spill the refrigerant oil on the vehicle; it may damage the paint; if the refrigerant oil contacts the paint, wash it off immediately.

Condenser	20 ml (2/3 fl-oz, 0.7 Imp-oz)
Evaporator	45 ml (1 2/3 fl-oz, 1.6 Imp-oz)
Line or hose	10 ml (1/3 fl-oz, 0.4 Imp-oz)
Receiver/Dryer	10 ml (1/3 fl-oz, 0.4 Imp-oz)
Leakage repair	25 ml (5/6 fl-oz, 0.9 Imp-oz)
Compressor	For compressor replacement, subtract the volume of oil drained from the removed compressor from 130 ml (4 1/3 fl-oz, 4.6 Imp-oz), and drain the calculated volume of oil from the new compressor: 130 ml (4 1/3 fl-oz, 4.6 Imp-oz) — Volume of removed compressor = Volume to drain from new compressor.

NOTE: Even if no oil is drained from the removed compressor, don't drain more than 50 ml (1 2/3 fl-oz, 1.8 Imp-oz) from the new compressor.

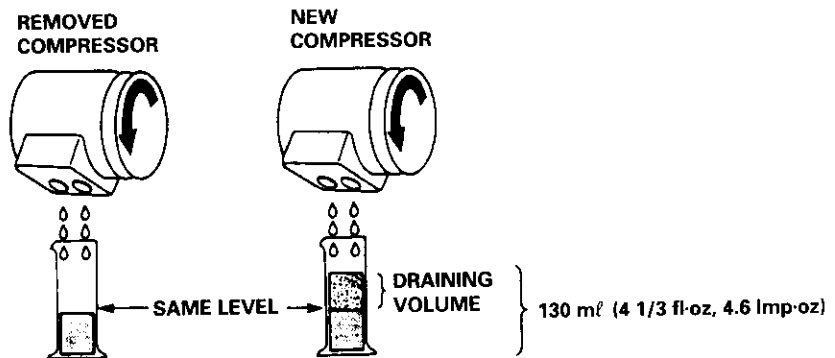

A/C System Torque Specifications

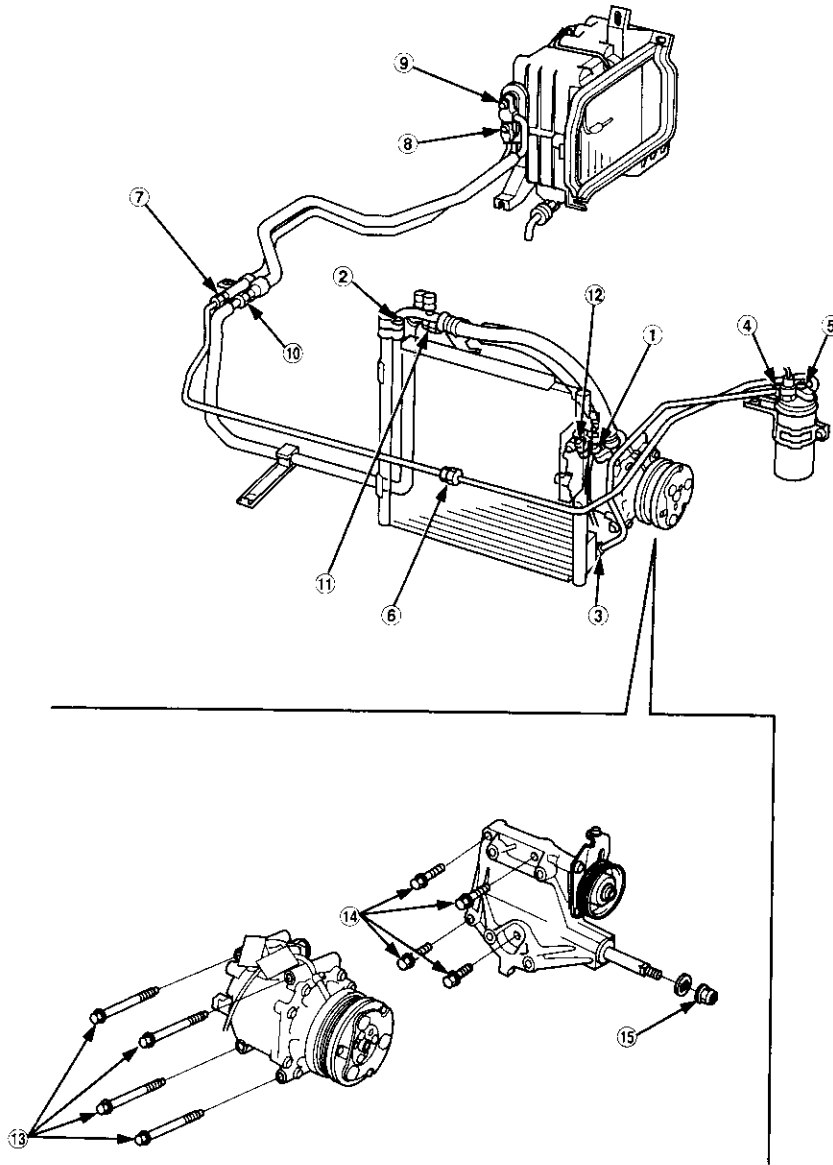

① Discharge hose to the compressor (6 x 1.0 mm)	9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)
② Discharge hose to the condenser (6 x 1.0 mm).....	9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)
③ Condenser pipe to the condenser (6 x 1.0 mm)	9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)
④ Condenser pipe to the receiver/dryer (6 x 1.0 mm).....	9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)
⑤ Receiver pipe A to the receiver/dryer (6 x 1.0 mm).....	9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)
⑥ Receiver pipe B to the receiver pipe A	13 N·m (1.3 kgf·m, 9.4 lbf·ft)
⑦ Receiver pipe C to the receiver pipe B	13 N·m (1.3 kgf·m, 9.4 lbf·ft)
⑧ Receiver pipe C to the evaporator (6 x 1.0 mm)	9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)
⑨ Suction pipe B to the evaporator (6 x 1.0 mm).....	9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)
⑩ Suction pipe A to the suction pipe B	31 N·m (3.2 kgf·m, 23 lbf·ft)
⑪ Suction hose to the suction pipe A	31 N·m (3.2 kgf·m, 23 lbf·ft)
⑫ Suction hose to the compressor (6 x 1.0 mm)	9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)
⑬ Compressor to the compressor bracket (8 x 1.25 mm).....	24 N·m (2.4 kgf·m, 17 lbf·ft)
⑭ Compressor bracket to the cylinder block (10 x 1.25 mm)	44 N·m (4.5 kgf·m, 33 lbf·ft)
⑮ Compressor bracket to the left front engine mount (12 x 1.25 mm)	59 N·m (6.0 kgf·m, 43 lbf·ft)



Recovery

Use only service equipment that is U.L.-listed and is certified to meet the requirements of SAE J2210 to remove HFC-134a (R-134a) from the air conditioner system.

CAUTION: Exposure to air conditioner refrigerant and lubricant vapor or mist can irritate eyes, nose and throat. Avoid breathing the air conditioner refrigerant and lubricant vapor or mist.

If accidental system discharge occurs, ventilate work area before resuming service.

R-134a service equipment or vehicle air conditioner systems should not be pressure tested or leak tested with compressed air.


⚠ WARNING Some mixtures of air and R-134a have been shown to be combustible at elevated pressures and can result in fire or explosion causing injury or property damage. Never use compressed air to pressure test R-134a service equipment or vehicle air conditioner systems.

Additional health and safety information may be obtained from the refrigerant and lubricant manufacturers.

1. Connect a R-134a refrigerant Recovery/Recycling/Charging System to the vehicle, as shown, following the equipment manufacturer's instructions.
2. Measure the amount of refrigerant oil removed from the A/C system after the recovery process is completed.

NOTE: Be sure to install the same amount of new refrigerant oil back into the A/C system before charging.

Recovery/Recycling/Charging System

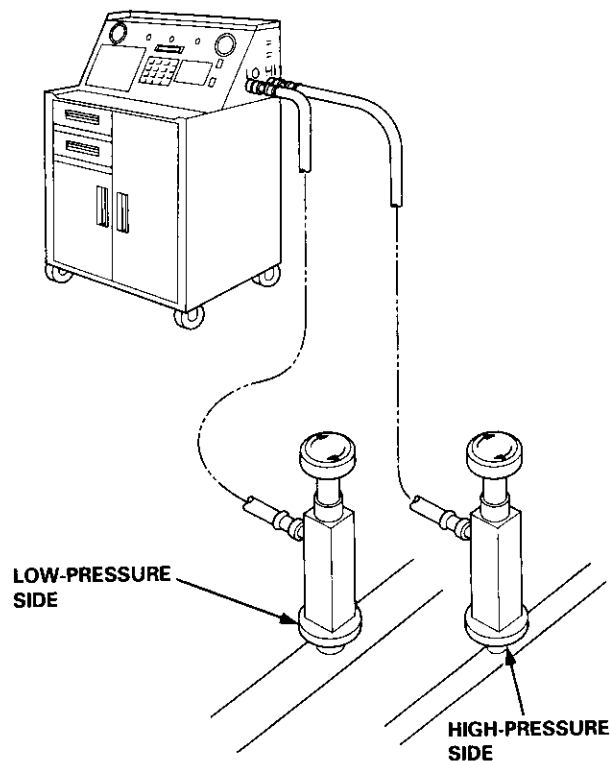

A/C System Service

Performance Test

The performance test will help determine if the air conditioner system is operating within specifications.

Use only service equipment that is U.L.-listed and is certified to meet the requirements of SAE J2210 to remove HFC-134a (R-134a) from the air conditioner system.

CAUTION: Exposure to air conditioner refrigerant and lubricant vapor or mist can irritate eyes, nose and throat. Avoid breathing the air conditioner refrigerant and lubricant vapor or mist.

If accidental system discharge occurs, ventilate work area before resuming service.



R-134a service equipment or vehicle air conditioner systems should not be pressure tested or leak tested with compressed air.

▲ WARNING Some mixtures of air and R-134a have been shown to be combustible at elevated pressures and can result in fire or explosion causing injury or property damage. Never use compressed air to pressure test R-134a service equipment or vehicle air conditioner systems.

Additional health and safety information may be obtained from the refrigerant and lubricant manufacturers.

1. Connect a R-134a refrigerant Recover/Recycling/Charging System to the vehicle, as shown, following the equipment manufacturer's instructions.
2. Insert a thermometer in the center vent outlet. Determine the relative humidity and air temperature.
3. Test conditions:
 - Avoid direct sunlight.
 - Open hood.
 - Open front doors.
 - Set the temperature control lever to MAX. COOL, the mode control switch on VENT and the recirculation control switch on RECIRCULATE.
 - Turn the A/C switch on, and the heater fan switch on MAX.
 - Run the engine at 1,500 rpm.
 - No driver or passengers in vehicle
4. After running the air conditioning for 10 minutes under the above test conditions, read the delivery temperature from the thermometer in the dash vent and the high and low system pressure from the A/C gauges.


Recovery/Recycling/Charging System

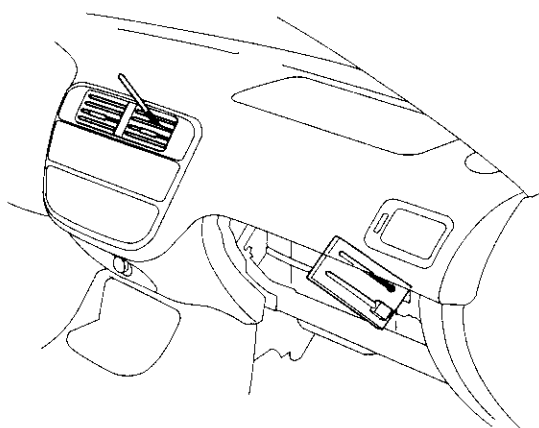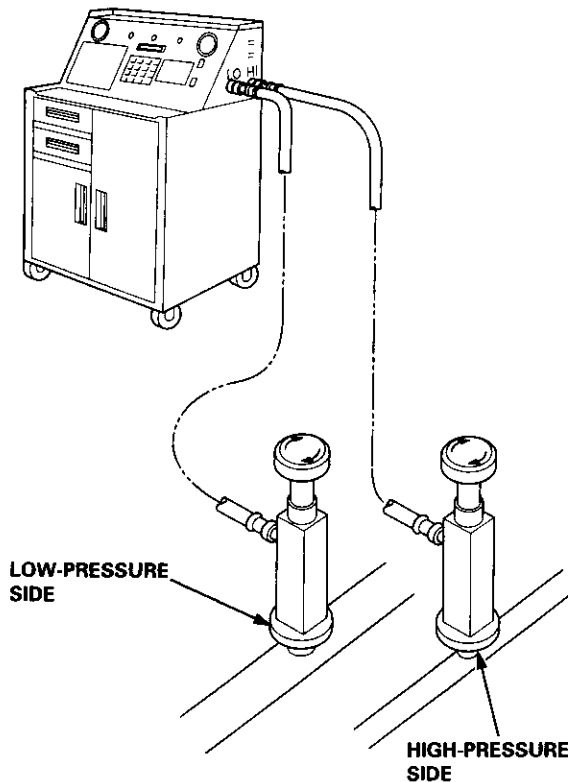



5. To complete the charts:

- Mark the delivery temperature along the vertical line.
- Mark the intake temperature (ambient air temperature) along the bottom line.
- Draw a line straight up from the air temperature to the humidity.
- Mark a point one line above and one line below the humidity level (10% above and 10% below the humidity level).
- From each point, draw a horizontal line across the delivery temperature.
- The delivery temperature should fall between the two lines.
- Complete the low side pressure test and high side pressure test in the same way.
- Any measurements outside the line may indicate the need for further inspection.

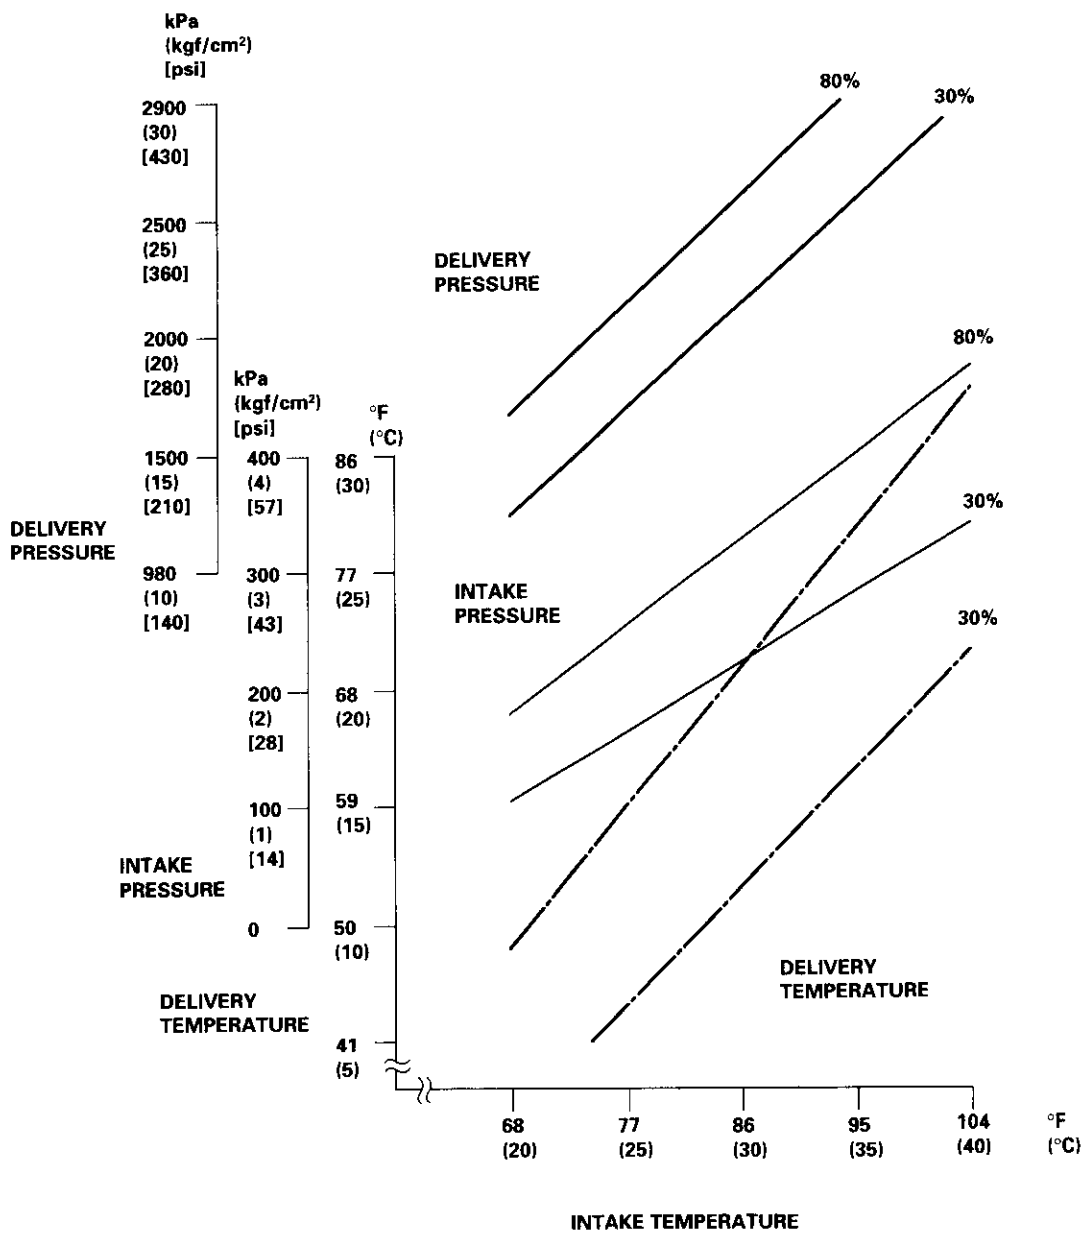


A/C System Service

Pressure Test Chart

NOTE: Performance Test is on page 22-22.

Test results	Related symptoms	Probable cause	Remedy
Discharge (high) pressure abnormally high	After stopping compressor, pressure drops to about 200 kPa (2.0 kgf/cm ² , 28 psi) quickly, and then falls gradually.	Air in system	Recover, evacuate, and recharge with specified amount. Evacuation: see page 22-36 Charging: see page 22-37
	Reduced or no air flow through condenser	<ul style="list-style-type: none"> • Clogged condenser fins • Condenser fan not working properly 	<ul style="list-style-type: none"> • Clean. • Check voltage and fan rpm. • Check fan direction.
	Line to condenser is excessively hot.	Restricted flow of refrigerant in system	Restricted lines
Discharge pressure abnormally low	High and low pressures are balanced soon after stopping compressor. Low side is higher than normal.	<ul style="list-style-type: none"> • Faulty compressor discharge valve • Faulty compressor seal 	Replace the compressor.
	Outlet of expansion valve is not frosted, low pressure gauge indicates vacuum.	<ul style="list-style-type: none"> • Faulty expansion valve • Moisture in system 	<ul style="list-style-type: none"> • Replace. • Recover, evacuate, and recharge with specified amount.
Suction (low) pressure abnormally low	Expansion valve is not frosted, and low pressure line is not cold. Low pressure gauge indicates vacuum.	<ul style="list-style-type: none"> • Frozen expansion valve • Faulty expansion valve 	Replace the expansion valve.
	Discharge temperature is low, and the air flow from vents is restricted.	Frozen evaporator	Run the fan with compressor off, then check A/C thermostat.
	Expansion valve is frosted.	Clogged expansion valve	Clean or replace.
	Receiver/dryer outlet is cool, and inlet is warm (should be warm during operation).	Clogged receiver/dryer	Replace.
Suction pressure abnormally high	Low pressure hose and check joint are cooler than the temperature around evaporator.	<ul style="list-style-type: none"> • Expansion valve open too long • Loose expansion capillary tube 	Repair or replace.
	Suction pressure is lowered when condenser is cooled by water.	Excessive refrigerant in system	Recover, evacuate, and recharge with specified amount.
	High and low pressure are equalized as soon as the compressor is stopped, and both gauges fluctuate while running.	<ul style="list-style-type: none"> • Faulty gasket • Faulty high pressure valve • Foreign particle stuck in high pressure valve 	Replace the compressor.
Suction and discharge pressures abnormally high	Reduced air flow through condenser.	<ul style="list-style-type: none"> • Clogged condenser fins • Condenser fan not working properly 	<ul style="list-style-type: none"> • Clean condenser. • Check voltage and fan rpm. • Check fan direction.
Suction and discharge pressure abnormally low	Low pressure hose and metal end areas are cooler than evaporator.	Clogged or kinked low pressure hose parts	Repair or replace.
	Temperature around expansion valve is too low compared with that around receiver/dryer.	Clogged high pressure line	Repair or replace.
Refrigerant leaks	Compressor clutch is dirty.	Compressor shaft seal leaking	Replace the compressor.
	Compressor bolt(s) are dirty.	Leaking around bolt(s)	Tighten bolt(s) or replace compressor.
	Compressor gasket is wet with oil.	Gasket leaking	Replace the compressor.


Evaporator




Replacement

1. Remove the battery.
2. Recover the refrigerant with a Recovery/Recycling/Charging System (see page 22-21).
3. Remove the bolts, then disconnect the suction and receiver lines from the evaporator.


NOTE: Plug or cap the lines immediately after disconnecting them to avoid moisture and dust contamination.

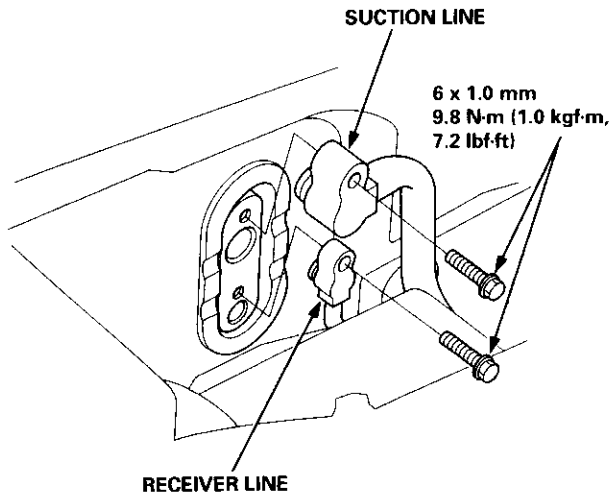

4. Remove the glove box (see section 20).
5. Remove the self-tapping screw and the passenger's dashboard lower cover. Remove the bolt, the nut and the knee bolster, then remove the five bolts and the glove box frame.

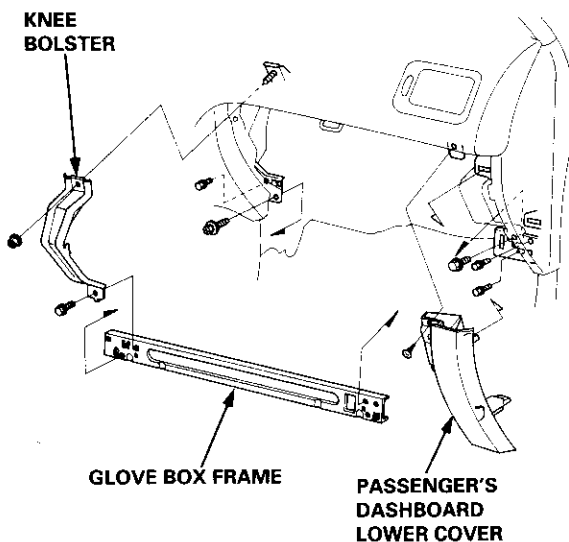

6. Disconnect the connector from the A/C thermostat, and remove the wire harness from the evaporator. Remove the four self-tapping screws, the mounting bolt and the mounting nut. Disconnect the drain hose, then remove the evaporator.

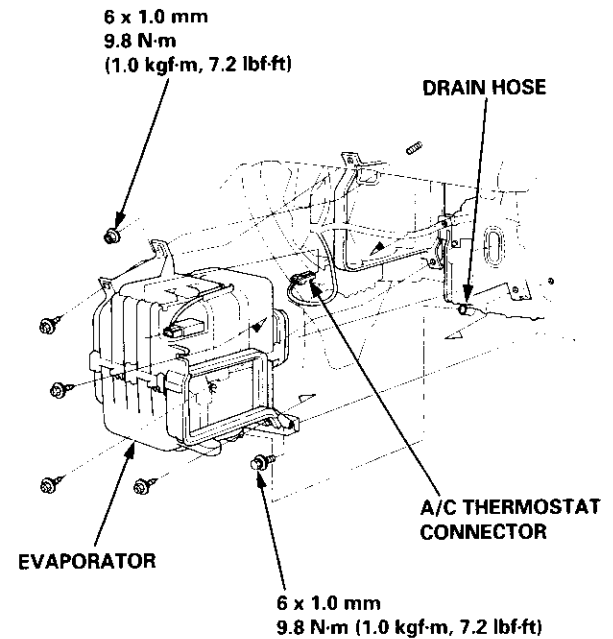

7. Install in the reverse order of removal. Make note of the following items.
 - If you're installing a new evaporator, add refrigerant oil (SP-10) (see page 22-19).
 - Replace the O-rings with new ones at each fitting, and apply a thin coat of refrigerant oil before installing them.NOTE: Be sure to use the right O-rings for HFC-134a (R-134a) to avoid leakage.
 - Apply sealant to the grommets.
 - Make sure that there is no air leakage.
 - Charge the system (see page 22-37), and test its performance (see page 22-22).

Evaporator


Overhaul

1. Pull out the A/C thermostat sensor from the evaporator fins.
2. Remove the self-tapping screws and clamps from the housings.
3. Carefully separate the housings, then remove the evaporator.
4. If necessary, remove the expansion valve.


NOTE: When loosening the expansion valve nuts, use a second wrench to hold the expansion valve or the evaporator pipe. Otherwise, they can be damaged.

5. Assemble in the reverse order of disassembly. Make note of following items.

- Replace the O-rings with new ones at each fitting, and apply a thin coat of refrigerant oil before installing them.
NOTE: Be sure to use the right O-rings for HFC-134a (R-134a) to avoid leakage.
- Install the expansion valve capillary tube so that it is in direct contact with the suction line. Then wrap with tape.
- Reinstall the A/C thermostat sensor to its original location.

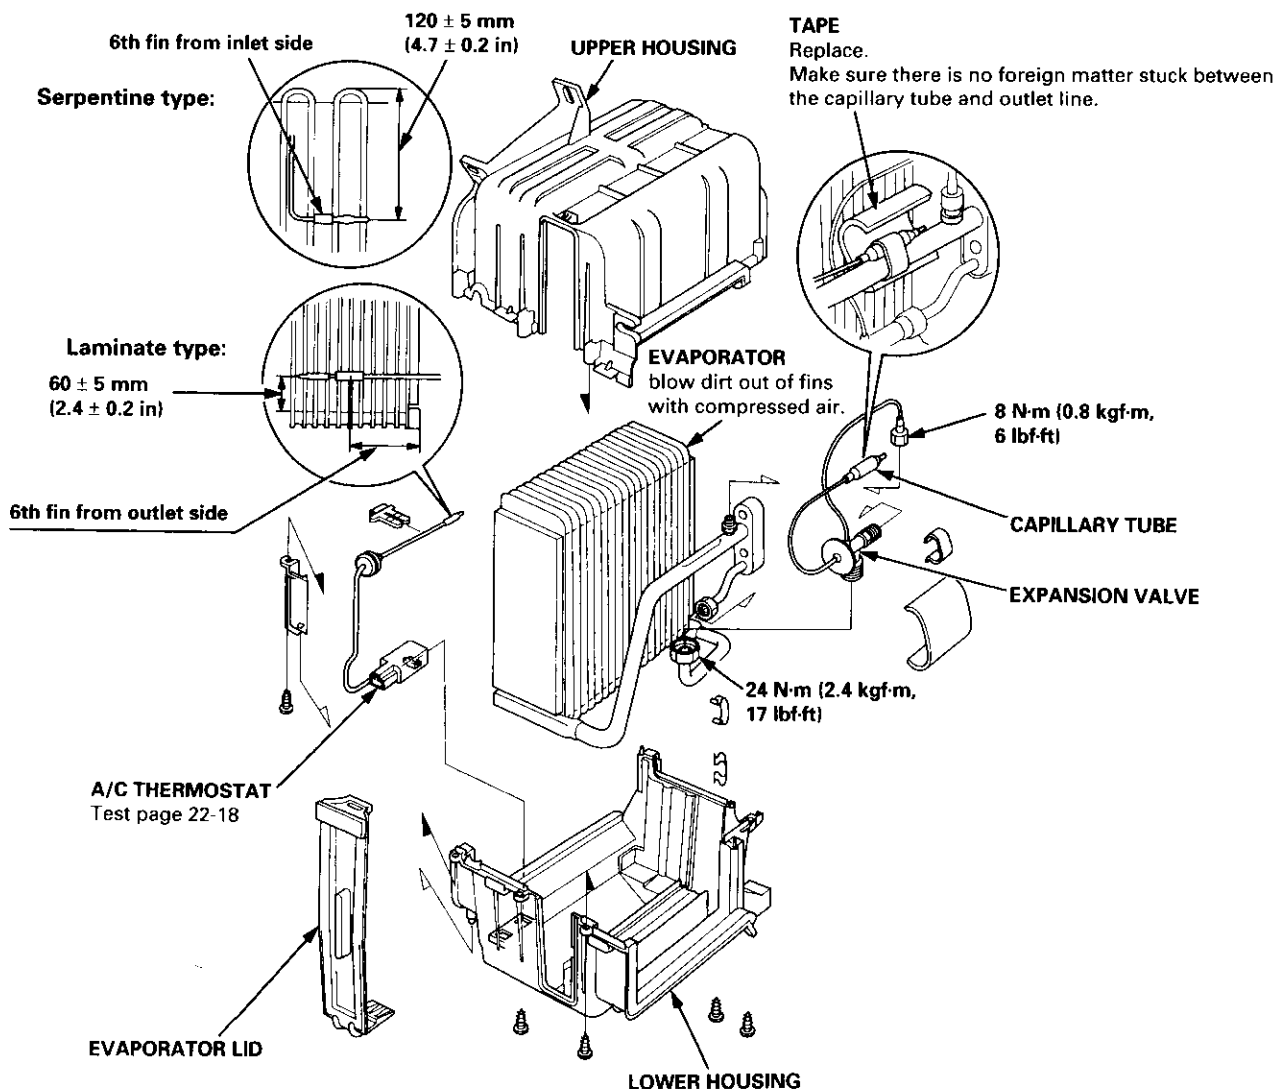


Compressor

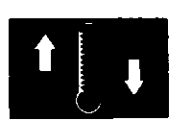

Replacement

1. If the compressor is marginally operable, run the engine at idle speed, and let the air conditioner work for a few minutes, then shut the engine off.
2. Disconnect the negative cable from the battery.
3. Recover the refrigerant with a Recovery/Recycling/Charging System (see page 22-21).
4. Remove the bolts, then disconnect the suction and discharge lines from the compressor.

NOTE: Plug or cap the lines immediately after disconnecting them to avoid moisture and dust contamination.

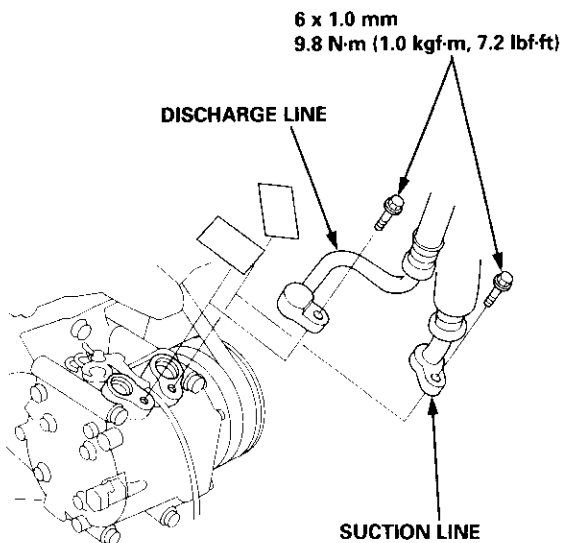


5. Remove the condenser (see page 22-35).


NOTE: Do not disconnect the discharge hose from the condenser.

6. Remove the power steering pump belt (see section 17).

7. Loosen the center nut of the idler pulley and the adjusting bolt, then remove the A/C compressor belt from the pulleys. Remove the two mounting bolts from the left front engine mount, then remove the A/C compressor belt by passing it through the gap between the body and the left front engine mount.

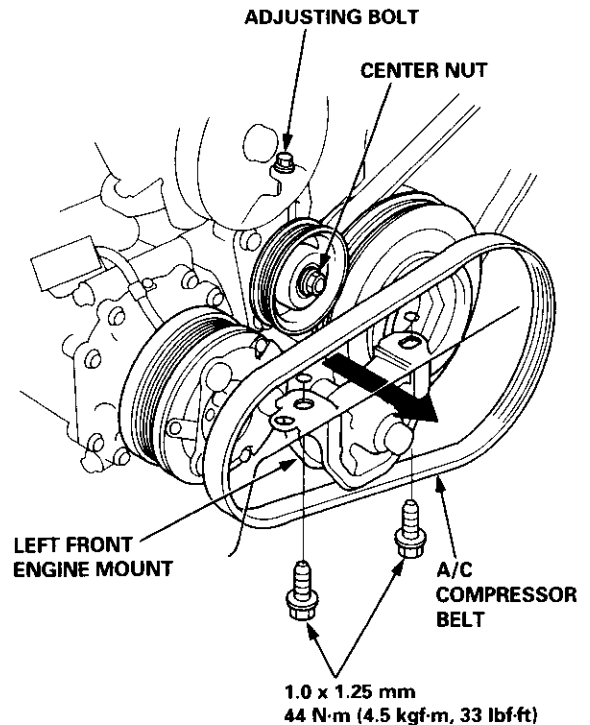

8. Remove the four mounting bolts and the compressor.

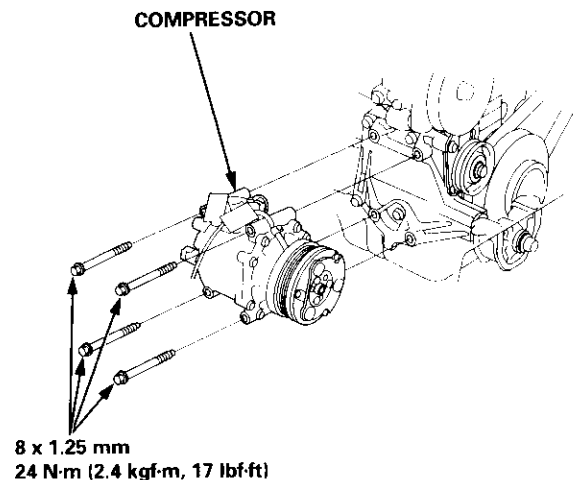

(cont'd)

Compressor


Replacement (cont'd)

9. If necessary, remove the compressor bracket as follows.

— Remove the nut and the washer.

NOTE: When tightening the nut of the left front engine mount, make sure the washer is set properly on the left front engine mount as shown.

— Remove the four mounting bolts and the compressor bracket.

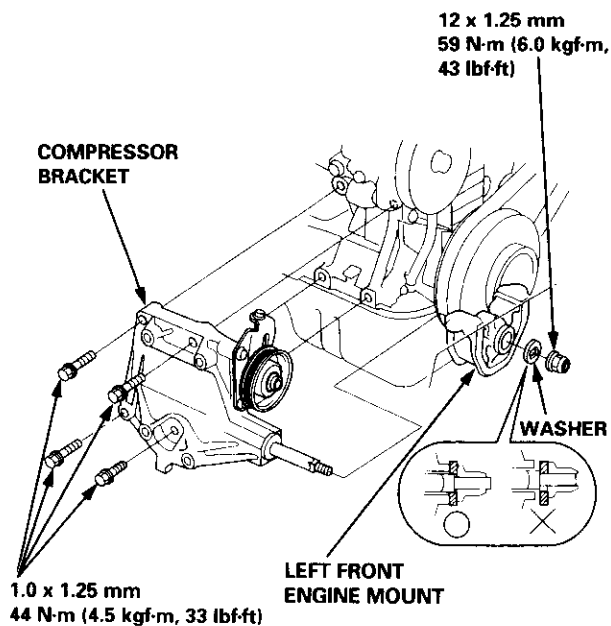


10. Install in the reverse order of removal. Make note of the following items.

- If you're installing a new compressor, drain all the refrigerant oil from the removed compressor, and measure its volume. Subtract the volume of drained oil from 130ml (4 1/3 fl-oz, 4.6 Imp-oz); the result is the amount of oil you should drain from the new compressor (through the suction fitting).


- Replace the O-rings with new ones at each fitting, and apply a thin coat of refrigerant oil before installing them.

NOTE: Be sure to use the right O-rings for HFC-134a (R-134a) to avoid leakage.

- Use refrigerant oil (SP-10) for R-134a Sanden and Hadsys spiral type compressors only.
- To avoid contamination, do not return the oil to the container once dispensed, and never mix it with other refrigerant oils.
- Immediately after using the oil, replace the cap on the container, and seal it to avoid moisture absorption.
- Do not spill the refrigerant oil on the vehicle; it may damage the paint; if the refrigerant oil contacts the paint, wash it off immediately.
- Adjust the A/C compressor belt (see page 22-34) and the power steering pump belt (see section 17).
- Charge the system (see page 22-37), and test its performance (see page 22-22).




Illustrated Index

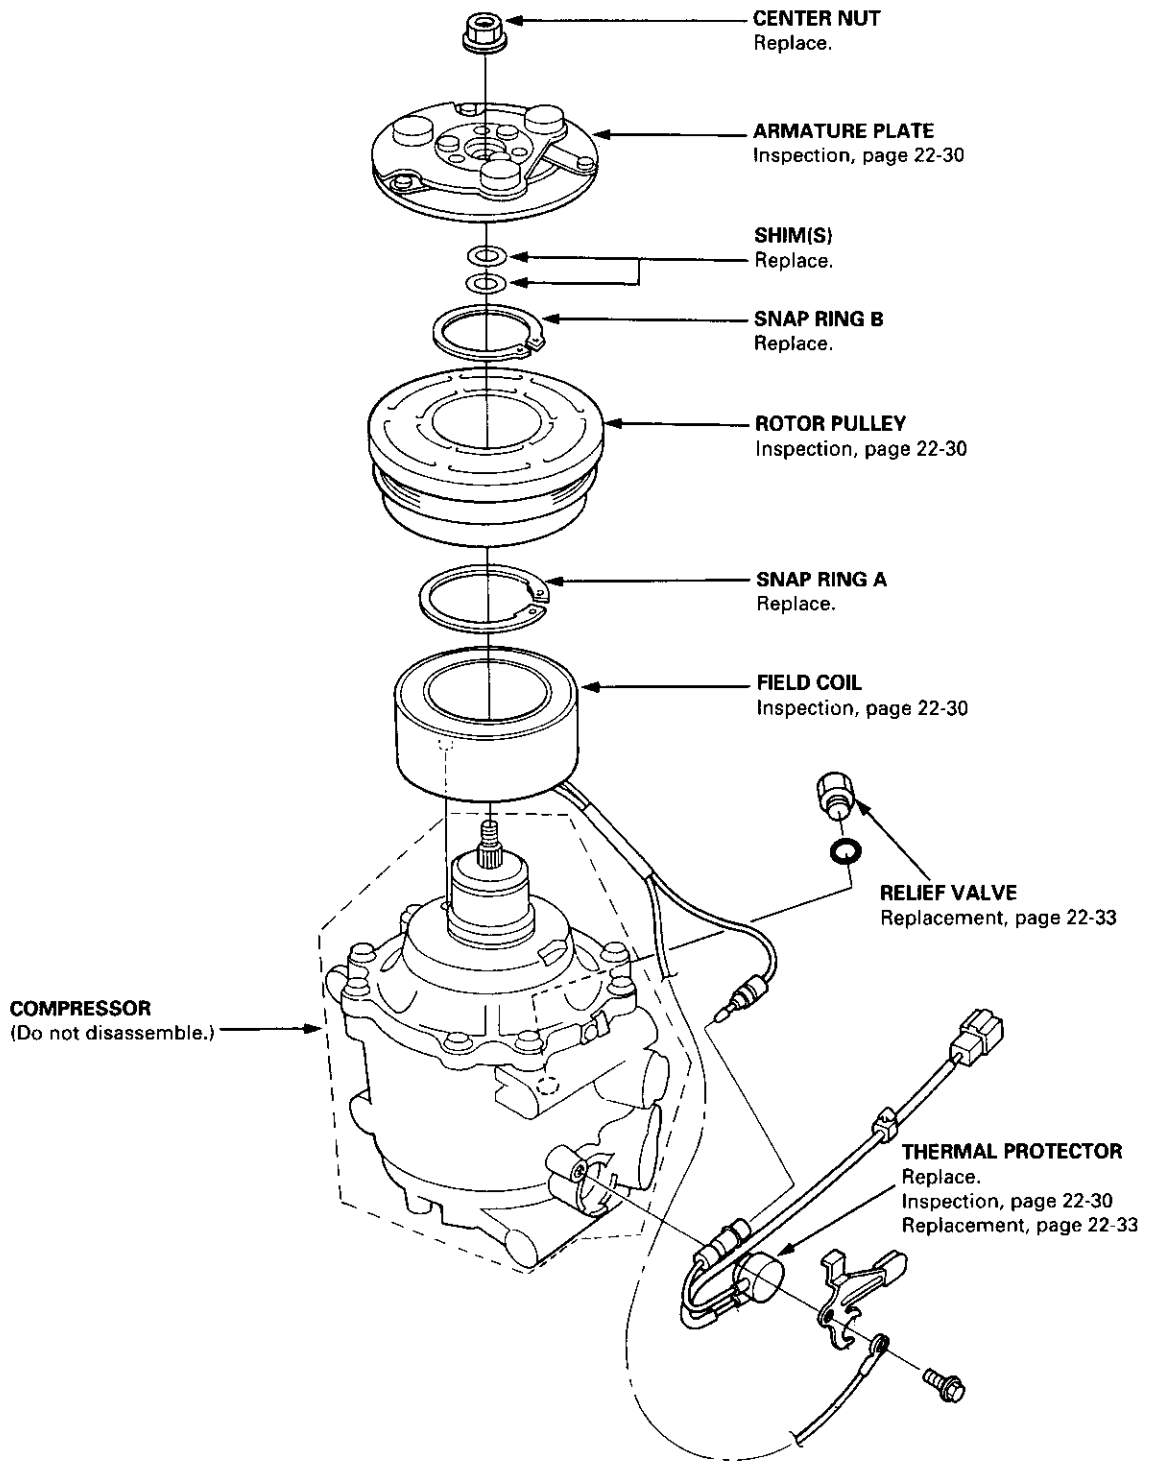

Compressor

Clutch Inspection


- Check the plated parts of the armature plate for color changes, peeling or other damage. If there is damage, replace the clutch set.
- Check the rotor pulley bearing play and drag by rotating the rotor pulley by hand. Replace the clutch set with a new one if it is noisy or has excessive play/drag.

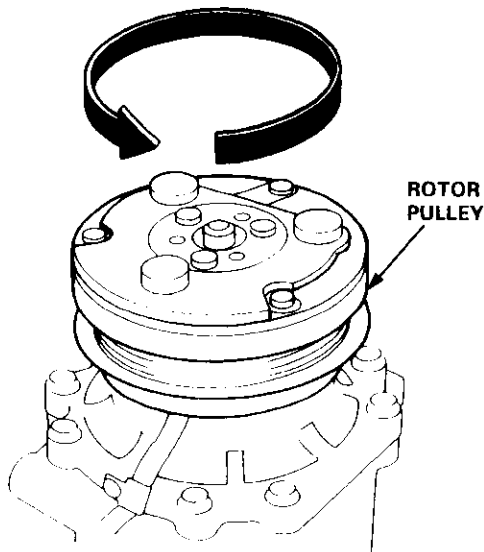


- Measure the clearance between the rotor pulley and the armature plate all the way around. If the clearance is not within specified limits, the armature plate must be removed and shims added or removed as required, following the procedure on page 22-31.

Clearance: 0.5 ± 0.15 mm (0.020 ± 0.006 in)

NOTE: The shims are available in four thicknesses: 0.1 mm, 0.2 mm, 0.4 mm and 0.5 mm

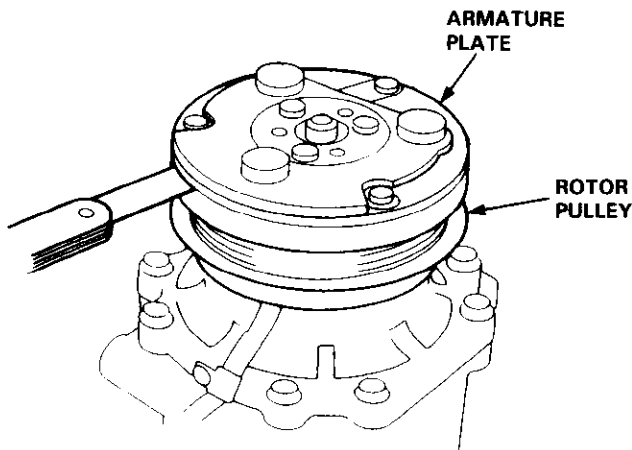


- Release the field coil connector from the holder, then disconnect it. Check the thermal protector for continuity. If there is no continuity, replace the thermal protector.

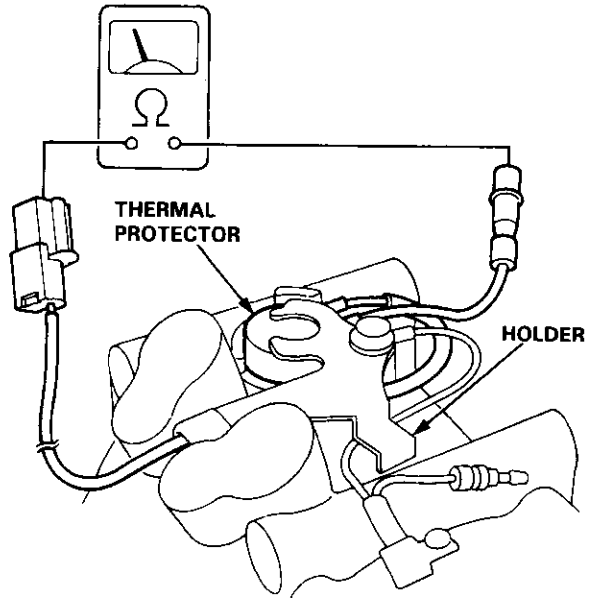


- Check resistance of the field coil.

Field Coil Resistance: 3.2 ± 0.15 ohms at 68°F (20°C)


If resistance is not within specifications, replace the field coil.

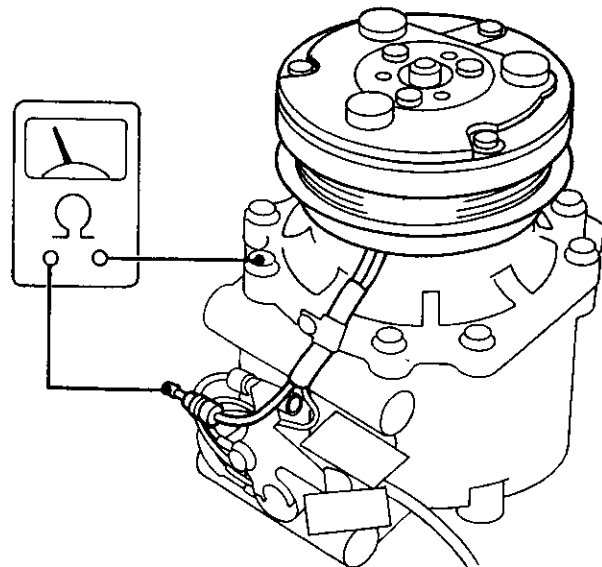




Clutch Overhaul

1. Remove the center nut while holding the armature plate with the tool.

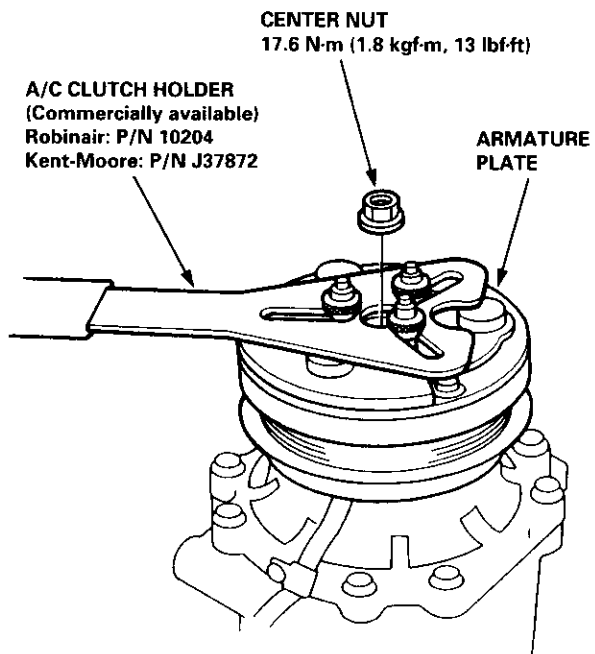


2. Remove the armature plate by pulling it up by hand.

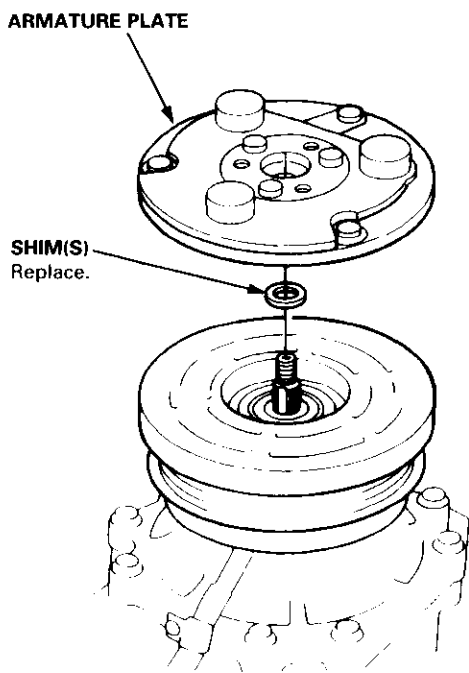

3. Remove snap ring B with snap ring pliers.


NOTE:

- Be careful not to damage the rotor pulley and compressor during removal/installation.
- Once snap ring B is removed, replace it with a new one.

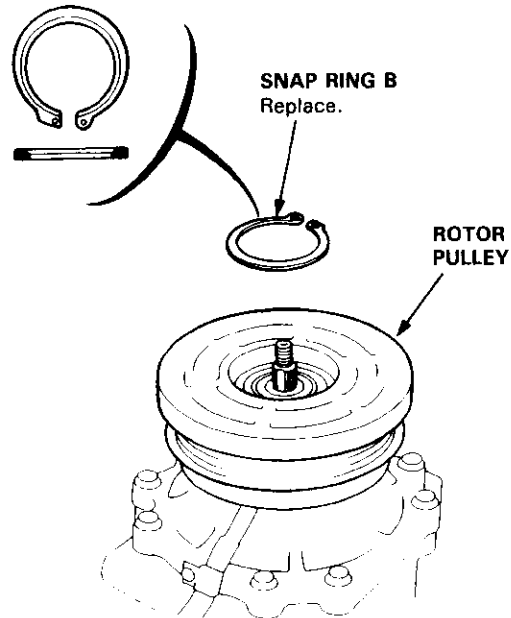

4. Remove the rotor pulley from the shaft with a puller and the special tool.

NOTE: Put the claws of the puller on the back of the rotor pulley, not on the belt area; otherwise the rotor pulley can be damaged.

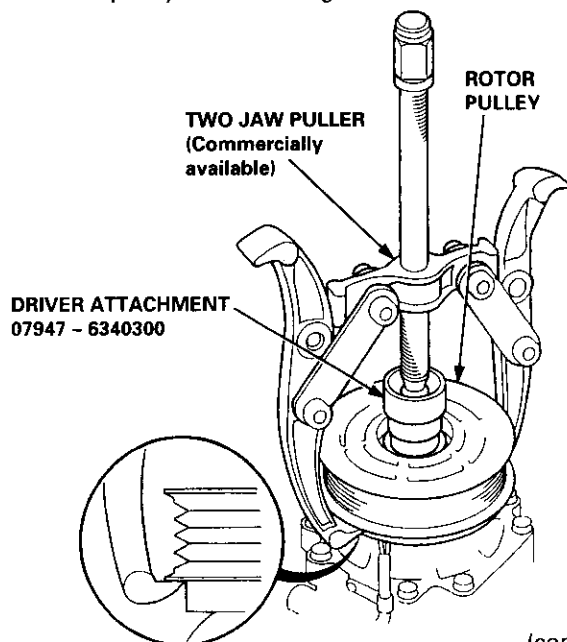

(cont'd)


Compressor

Clutch Overhaul (cont'd)

5. Remove the screw from the field coil ground terminal, then disconnect the field coil connector. Remove snap ring A with snap ring pliers, then remove the field coil.


NOTE:

- Be careful not to damage the field coil and compressor during remove/installation.
- Once snap ring A is removed, replace it with a new one.
- When installing the field coil, align the boss on the field coil with the hole in the compressor.

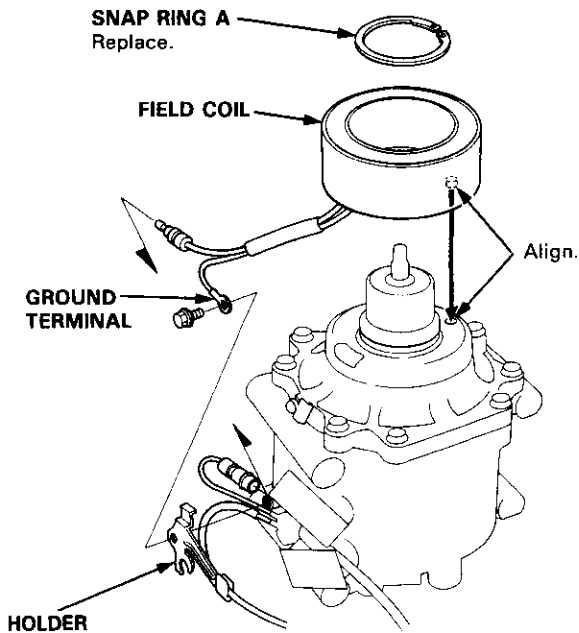

6. Position the rotor pulley squarely over the field coil. Press the rotor pulley onto the compressor boss with the special tool. If the rotor pulley does not press on straight, remove it, and check the rotor pulley and compressor boss for burrs or damage.

CAUTION: Maximum press load: 39,200 kPa (400 kgf/cm², 5,690 psi)

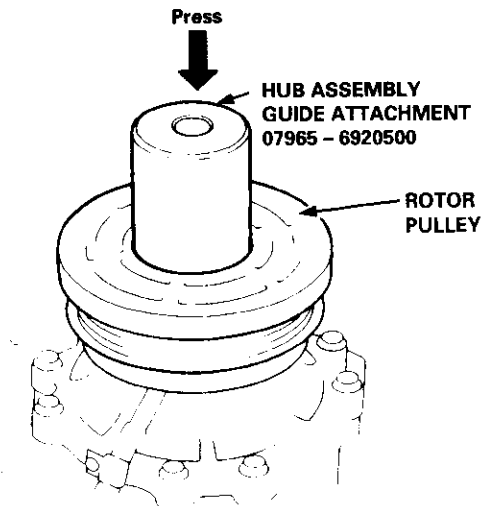


7. Assemble in the reverse order of disassembly. Make note of the following items.

- Install the field coil with the wire side facing down.
- Clean the rotor pulley and compressor sliding surfaces with non-petroleum solvent.
- Make sure the snap rings are fully seated in the groove.
- Make sure that the rotor pulley turns smoothly after it's reassembled.
- Route and clamp the wires properly or they can be damaged by the rotor pulley.




Thermal Protector Replacement

1. Remove the bolt, the ground terminal and the holder. Disconnect the field coil connector, then remove the thermal protector.

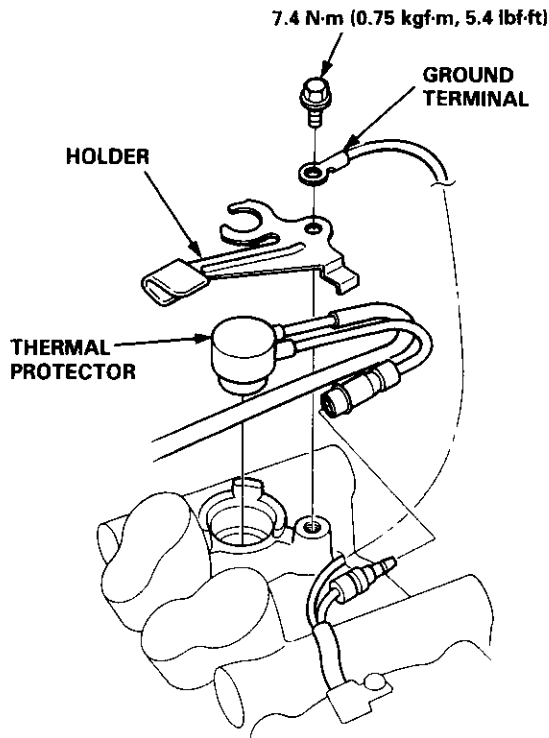

2. Replace the thermal protector with a new one, and apply silicone sealant to the top of the thermal protector.

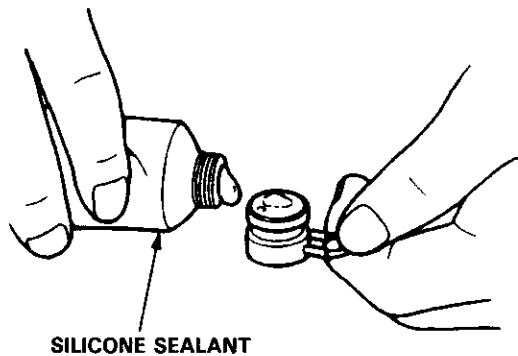


3. Install in the reverse order of removal.

Relief Valve Replacement

1. Remove the relief valve and the O-ring.

NOTE:

- Do not let the compressor oil run out.
- Make sure that no foreign matter enters the system.

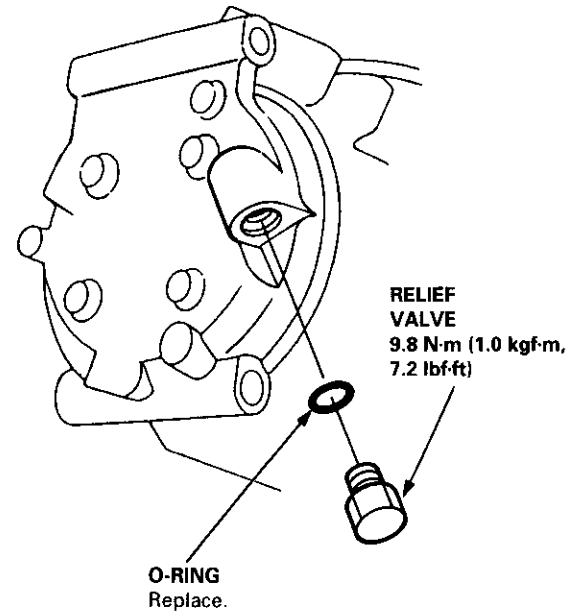

2. Clean the mating surfaces.
3. Replace the O-ring with a new one at the relief valve, and apply a thin coat of refrigerant oil before installing it.

NOTE:

- To avoid contamination, do not return the oil to the container once dispensed, and never mix it with other refrigerant oils.
- Immediately after using the oil, replace the cap on the container, and seal it to avoid moisture absorption.
- Do not spill the refrigerant oil on the vehicle; it may damage the paint; if the refrigerant oil contacts the paint, wash it off immediately.

4. Install and tighten the relief valve.
5. Charge the system (see page 22-37), and test its performance (see page 22-22).

A/C Compressor Belt

Adjustment

Deflection Method

1. Apply a force of 98 N (10 kgf, 22 lbf), and measure the deflection between the A/C compressor and the crankshaft pulley.


A/C Compressor Belt

Used Belt: 7.5 – 9.5 mm (0.30 – 0.37 in)

New Belt: 5.0 – 6.5 mm (0.20 – 0.26 in)

NOTE:

- If there are cracks or any damage evident on the belt, replace it with a new one.
 - "Used belt" means a belt which has been used for five minutes or more.
 - "New belt" means a belt which has been used for less than five minutes.
2. Loosen the center nut of the idler pulley.
 3. Turn the adjusting bolt to get proper belt tension.
 4. Retighten the center nut of the idler pulley.
 5. Recheck the deflection of the A/C compressor belt.

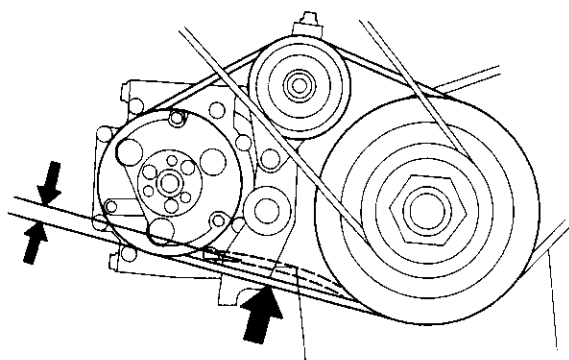

Tension Gauge Method

1. Attach the special tool to the A/C compressor belt as shown below, and measure the tension of the belt.


A/C Compressor Belt

Used Belt: 340 – 490 N (35 – 50 kgf, 77 – 110 lbf)


New Belt: 690 – 830 N (70 – 85 kgf, 150 – 190 lbf)

NOTE:

- Follow the manufacturer's instructions for the belt tension gauge.
 - If there are cracks or any damage evident on the belt, replace it with a new one.
 - "Used belt" means a belt which has been used for five minutes or more.
 - "New belt" means a belt which has been used for less than five minutes.
2. Loosen the center nut of the idler pulley.
 3. Turn the adjusting bolt to get proper belt tension.
 4. Retighten the center nut of the idler pulley.
 5. Recheck the tension of the A/C compressor belt.

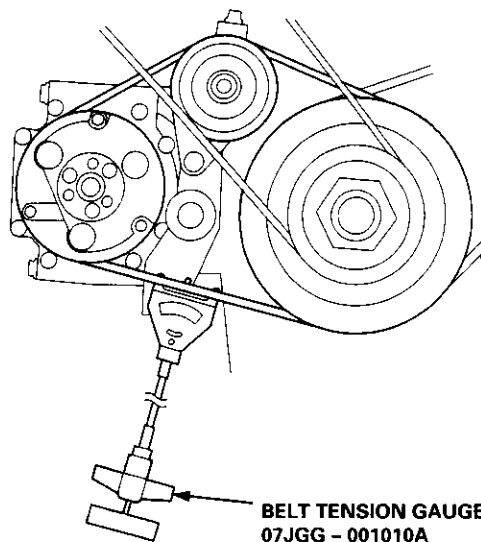


Condenser




Replacement

1. Recover the refrigerant with a Recovery/Recycling/Charging System (see page 22-21).
2. Disconnect the condenser fan connector from the A/C wire harness, then remove the A/C wire harness from the condenser fan shroud.

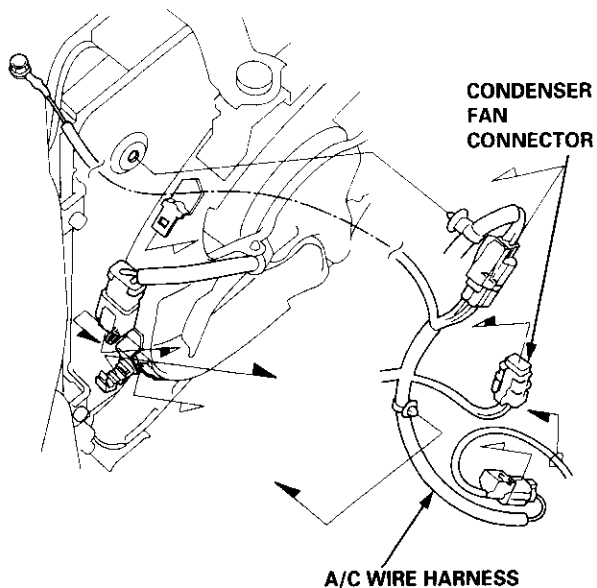


3. Remove the bolts, then disconnect the discharge and condenser lines from the condenser.

NOTE: Plug or cap the lines immediately after disconnecting them to avoid moisture and dust contamination.

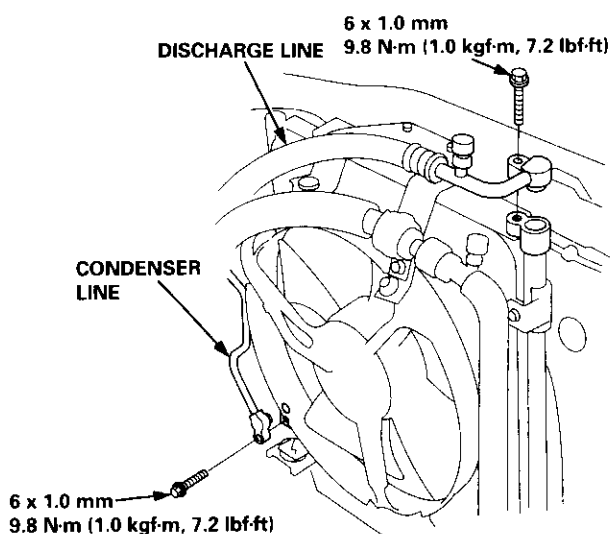

4. Remove the bolt from the suction hose bracket, and remove the two bolts and the upper mount bracket. Remove the condenser assembly by lifting it up.

NOTE: Be careful not to damage the condenser fins when removing the condenser assembly.

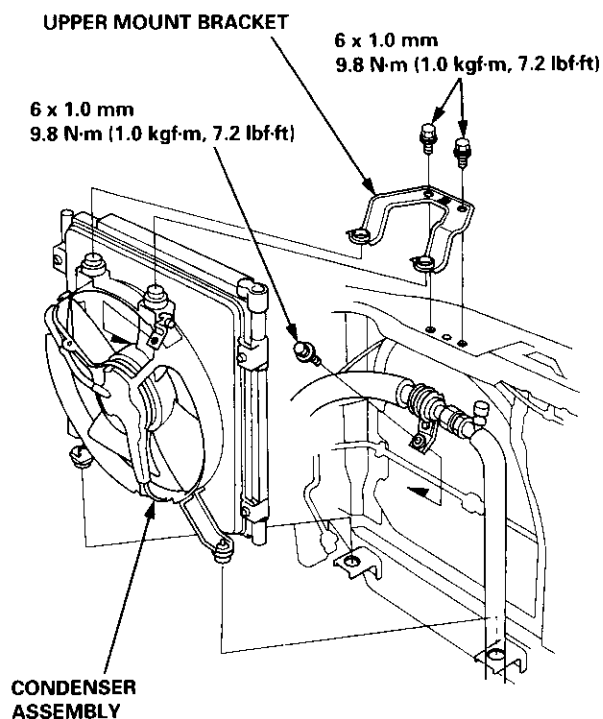

5. Install in the reverse order of removal. Make note of the following items.

- If you're installing a new condenser, add refrigerant oil (SP-10) (see page 22-19).
 - Replace the O-rings with new ones at each fitting, and apply a thin coat of refrigerant oil before installing them.
- NOTE: Be sure to use the right O-rings for HFC-134a (R-134a) to avoid leakage.
- Be careful not to damage the condenser fins when installing the condenser assembly.
 - Charge the system (see page 22-37), and test its performance (see page 22-22).

A/C System Service

Evacuation

Use only service equipment that is U.L.-listed and is certified to meet the requirements of SAE J2210 to remove HFC-134a (R-134a) from the air conditioner system.

CAUTION: Exposure to air conditioner refrigerant and lubricant vapor or mist can irritate eyes, nose and throat. Avoid breathing the air conditioner refrigerant and lubricant vapor or mist.

If accidental system discharge occurs, ventilate work area before resuming service.

R-134a service equipment or vehicle air conditioner systems should not be pressure tested or leak tested with compressed air.


⚠ WARNING Some mixtures of air and R-134a have been shown to be combustible at elevated pressures and can result in fire or explosion causing injury or property damage. Never use compressed air to pressure test R-134a service equipment or vehicle air conditioner systems.

Additional health and safety information may be obtained from the refrigerant and lubricant manufacturers.

1. When an A/C System has been opened to the atmosphere, such as during installation or repair, it must be evacuated using a R-134a refrigerant Recovery/Recycling/Charging System. (If the system has been open for several days, the receiver/dryer should be replaced, and the system should be evacuated for several hours.)
2. Connect a R-134a refrigerant Recovery/Recycling/Charging System to the vehicle, as shown, following the equipment manufacturer's instructions.

NOTE: If low pressure does not reach more than 93.3 kPa (700 mmHg, 27.6 in.Hg) in 15 minutes, there is probably a leak in the system. Partially charge the system, and check for leaks (see Leak Test).

Recovery/Recycling/Charging System

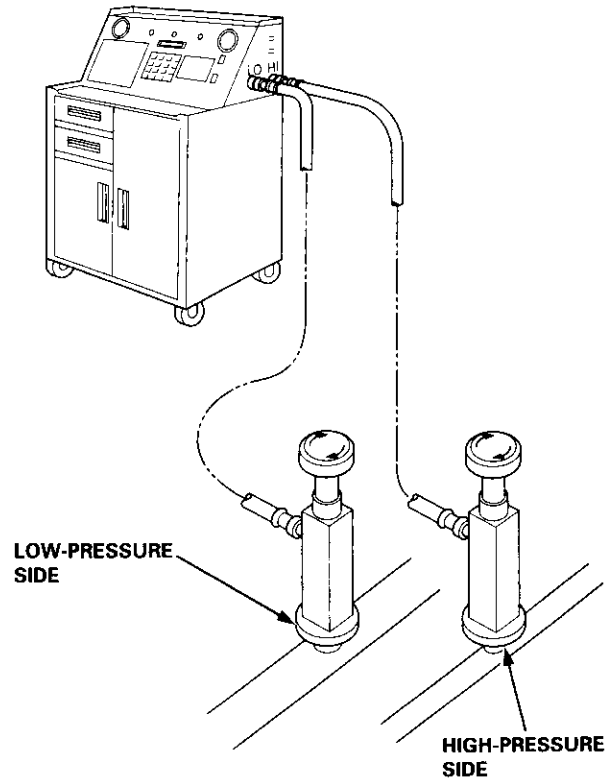



Charging

Use only service equipment that is U.L.-listed and is certified to meet the requirements of SAE J2210 to remove HFC-134a (R-134a) from the air conditioner system.

CAUTION: Exposure to air conditioner refrigerant and lubricant vapor or mist can irritate eyes, nose and throat. Avoid breathing the air conditioner refrigerant and lubricant vapor or mist.


If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from the refrigerant and lubricant manufacturers.

Refrigerant capacity: 650⁺⁰₋₅₀ g (22.9⁺⁰_{-1.8} oz)

CAUTION: Do not overcharge the system; the compressor will be damaged.

Connect a R-134a refrigerant Recovery/Recycling/Charging System to the vehicle, as shown, following the equipment manufacturer's instructions.

Recovery/Recycling/Charging System

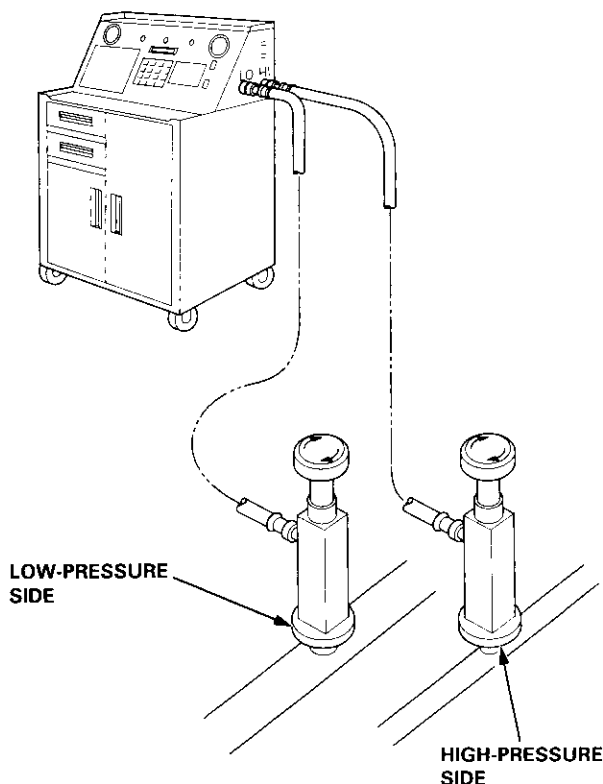

Leak Test

Use only service equipment that is U.L.-listed and is certified to meet the requirements of SAE J2210 to remove HFC-134a (R-134a) from the air conditioner system.

CAUTION: Exposure to air conditioner refrigerant and lubricant vapor or mist can irritate eyes, nose and throat. Avoid breathing the air conditioner refrigerant and lubricant vapor or mist.

If accidental system discharge occurs, ventilate work area before resuming service.

R-134a service equipment or vehicle air conditioner systems should not be pressure tested or leak tested with compressed air.

⚠ WARNING Some mixtures of air and R-134a have been shown to be combustible at elevated pressures and can result in fire or explosion causing injury or property damage. Never use compressed air to pressure test R-134a service equipment or vehicle air conditioner systems.

Additional health and safety information may be obtained from the refrigerant and lubricant manufacturers.

1. Connect a R-134a refrigerant Recovery/Recycling/Charging System to the vehicle, as shown in the previous column following the equipment manufacturer's instructions.

NOTE: Be sure to install the same amount of new refrigerant oil back into the A/C system before charging.

2. Open high pressure valve to charge the system to the specified capacity, then close the supply valve, and remove the charging system couplers.

Refrigerant capacity: 650⁺⁰₋₅₀ g (22.9⁺⁰_{-1.8} oz)

3. Check the system for leaks using a R-134a refrigerant leak detector with an accuracy of 14 g (0.5 oz) per year or better.
4. If you find leaks that require the system to be opened (to repair or replace hoses, fittings, etc.), recover the system according to the Recovery Procedure on page 22-21.
5. After checking and repairing leaks, the system must be evacuated (see System Evacuation on page 22-36).

Electrical

Special Tools	23-2	*Ignition Switch	23-75
Troubleshooting		Ignition System	23-88
Tips and Precautions	23-3	*A/T Gear Position Indicator	23-133
Five-step Troubleshooting	23-5	*Integrated Control Unit	23-140
Wire Color Codes	23-5	Interlock System	23-128
Schematic Symbols	23-6	Lighting System	23-146
Relay and Control Unit Locations		Lights, Exterior	
Engine Compartment	23-7	Back-up Lights	23-157
Dashboard	23-8	Brake Lights	23-158
Door	23-12	Daytime Running Lights (Canada)	23-150
*Airbags	Section 24	Front Parking Lights	23-151
Air Conditioning	Section 21	Front Turn Signal Lights	23-151
Alternator	23-98	Headlights	23-151
Anti-lock Brake System (ABS)	Section 19	High Mount Brake Light	23-159
Automatic Transmission System	Section 14	License Plate Lights	23-156
Battery	23-77	Taillights	23-153
Blower Controls	Section 21	Interior Lights	23-162
Charging System	23-72	Moonroof	23-203
Connector Identification and Wire Harness		Power Distribution	23-57
Routing	23-11	Power Door Locks	23-219
Cruise Control	23-208	Power Mirrors	23-180
Dash Lights Brightness Controller	23-160	Power Relays	23-72
Fan Controls	23-111	Power Windows	23-191
Fuel Pump	Section 11	Rear Window Defogger	23-176
Fuses	23-52	Spark Plugs	23-97
PGM-FI Control System	Section 11	Starting System	23-79
*Gauges		*Stereo Sound System	23-167
Circuit Diagram	23-116	*Supplemental Restraint System (SRS)	Section 24
Fuel Gauge	23-126	Turn Signal/Hazard Flasher System	23-154
Speedometer	23-114	*Under-dash Fuse/Relay Box	23-71
Ground Distribution	23-65	Vehicle Speed Sensor (VSS)	23-124
Heater Controls	Section 21	*Wipers/Washers	23-186
*Horn	23-173		


NOTE: Unless otherwise specified, references to automatic transmission (A/T) in this section include the CVT.




Special Tools

Ref. No.	Tool Number	Description	Qty	Page Reference
①	A973X - 041 - XXXXX	Vacuum Pump Gauge, 0 - 30 in.Hg.	1	23-215
②*	07JGG - 001010A	Belt Tension Gauge	1	23-110
③	07LAJ - PT3020A	Test Harness	1	23-124, 125
④	07NAC - SR20100	Fuel Sender Wrench	1	23-126
⑤	07PAZ - 0010100	SCS Service Connector	1	23-91


*: Included in Belt Tension Gauge Set 07TGG - 001000A

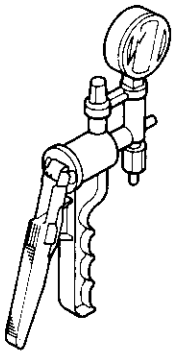


①

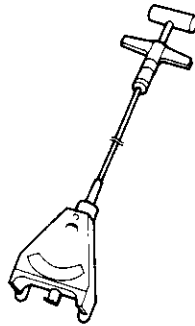


②

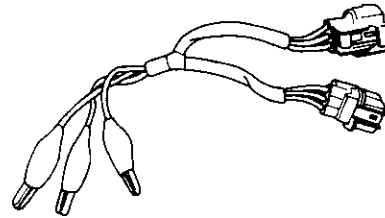

③

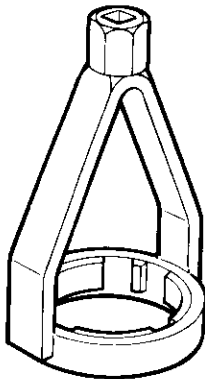

④

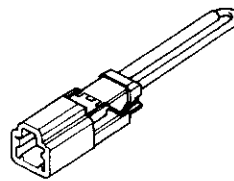

⑤



Tips and Precautions

Before Troubleshooting


- Check applicable fuses in the appropriate fuse/relay box.
- Check the battery for damage, state of charge, and clean and tight connections.
- Check the alternator belt tension.

CAUTION:


- Do not quick-charge a battery unless the battery ground cable has been disconnected, otherwise you will damage the alternator diodes.
- Do not attempt to crank the engine with the battery ground cable loosely connected or you will severely damage the wiring.

Handling Connectors


- Make sure the connectors are clean and have no loose wire terminals.
- Make sure multiple cavity connectors are packed with grease (except watertight connectors).
- All connectors have push-down release type locks.

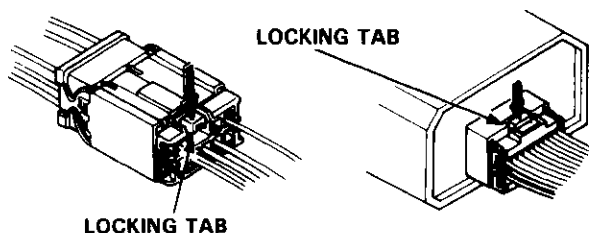


- Some connectors have a clip on their side used to attach them to a mount bracket on the body or on another component. This clip has a pull type lock.
- Some mounted connectors cannot be disconnected unless you first release the lock and remove the connector from its mount bracket.

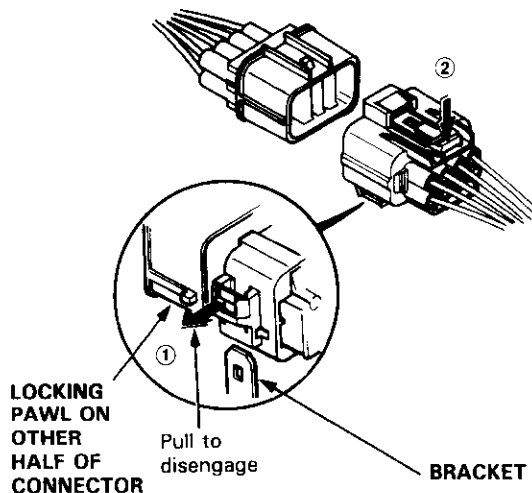


- Never try to disconnect connectors by pulling on their wires; pull on the connector halves instead.
- Always reinstall plastic covers.

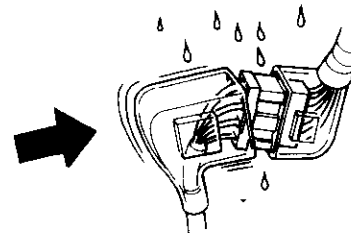


- Before connecting connectors, make sure the terminals are in place and not bent.

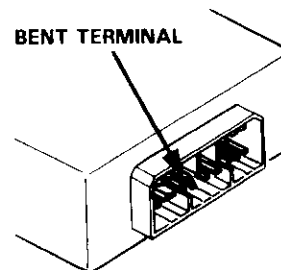

- Check for loose retainer and rubber seals.

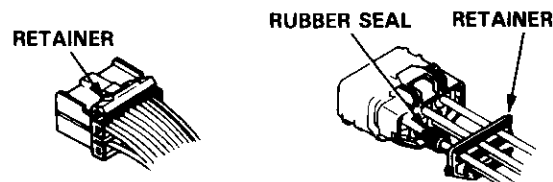

- The backs of some connectors are packed with grease. Add grease if necessary. If the grease is contaminated, replace it.

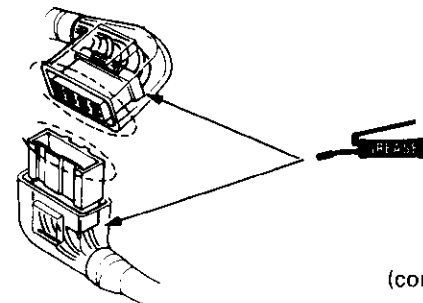


(cont'd)

Troubleshooting


Tips and Precautions (cont'd)

- Insert the connector all the way and make sure it is securely locked.
- Position wires so that the open end of the cover faces down.

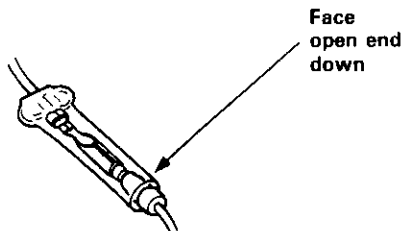


Handling Wires and Harnesses

- Secure wires and wire harnesses to the frame with their respective wire ties at the designated locations.
- Remove clips carefully; don't damage their locks.

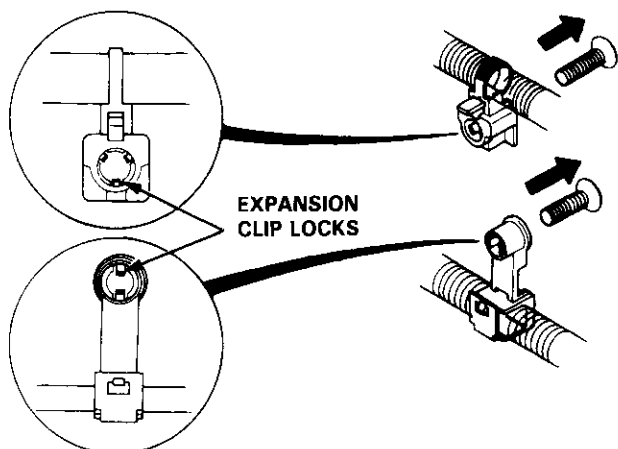


Slip pliers under the clip base and through the hole at an angle, then squeeze the expansion tabs to release the clip.

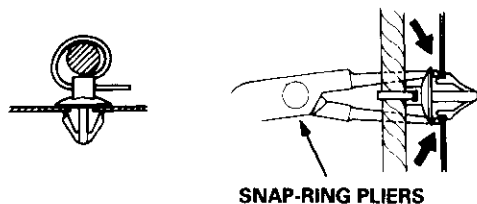


- After installing harness clips, make sure the harness doesn't interfere with any moving parts.
- Keep wire harnesses away from exhaust pipes and other hot parts, from sharp edges of brackets and holes, and from exposed screws and bolts.

- Seat grommets in their grooves properly.

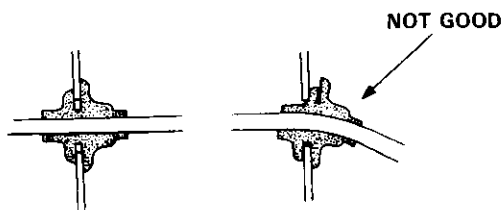


Testing and Repairs

- Do not use wires or harnesses with broken insulation. Replace them or repair them by wrapping the break with electrical tape.
- After installing parts, make sure that no wires are pinched under them.
- When using electrical test equipment, follow the manufacturer's instructions and those described in this manual.
- If possible, insert the probe of the tester from the wire side (except waterproof connector).

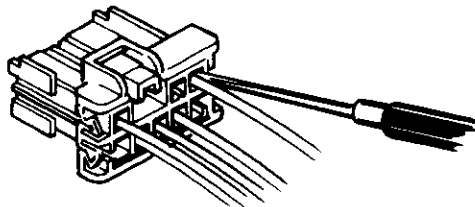

- Use a probe with a tapered tip.



- Refer to the instructions in the Honda Terminal Kit for identification and replacement of connector terminals.



Five-step Troubleshooting

1. **Verify The Complaint**
Turn on all the components in the problem circuit to verify the customer complaint. Note the symptoms. Do not begin disassembly or testing until you have narrowed down the problem area.

2. **Analyze The Schematic**
Look up the schematic for the problem circuit. Determine how the circuit is supposed to work by tracing the current paths from the power feed through the circuit components to ground. If several circuits fail at the same time, the fuse or ground is a likely cause.

Based on the symptoms and your understanding of the circuit operation, identify one or more possible causes of the problem.

3. **Isolate The Problem By Testing The Circuit**
Make circuit tests to check the diagnosis you made in step 2. Keep in mind that a logical, simple procedure is the key to efficient troubleshooting. Test for the most likely cause of failure first. Try to make tests at points that are easily accessible.

4. **Fix The Problem**
Once the specific problem is identified, make the repair. Be sure to use proper tools and safe procedures.


5. **Make Sure The Circuit Works**
Turn on all components in the repaired circuit in all modes to make sure you've fixed the entire problem. If the problem was a blown fuse, be sure to test all of the circuits on the fuse. Make sure no new problems turn up and the original problem does not recur.

Wire Color Codes

The following abbreviations are used to identify wire colors in the circuit schematics:






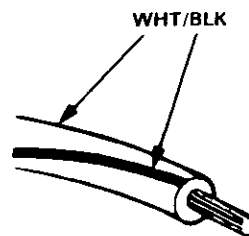


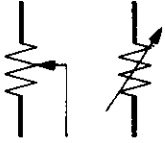

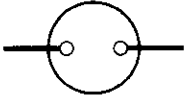




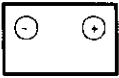














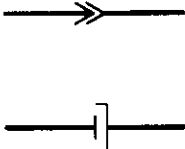

WHT	White
YEL	Yellow
BLK	Black
BLU	Blue
GRN	Green
RED	Red
ORN	Orange
PNK	Pink
BRN	Brown
GRY	Gray
PUR	Purple
LT BLU	Light Blue
LT GRN	Light Green

The wire insulation has one color or one color with another color stripe. The second color is the stripe.

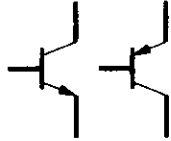

Troubleshooting

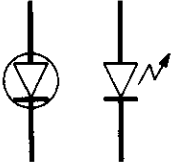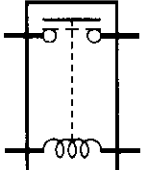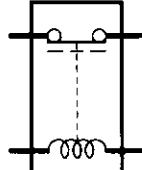
Schematic Symbols

<p>BATTERY</p>  	<p>GROUND</p> <p>Ground terminal</p>  <p>Component ground</p> 		<p>FUSE</p> 	<p>COIL, SOLENOID</p> 	<p>CIGARETTE LIGHTER</p> 
<p>RESISTOR</p> 	<p>VARIABLE RESISTOR</p> 	<p>THERMISTOR</p> 	<p>IGNITION SWITCH</p> 	<p>BULB</p> 	<p>HEATER</p> 
<p>MOTOR</p> 	<p>PUMP</p> 	<p>CIRCUIT BREAKER</p> 	<p>HORN</p> 	<p>DIODE</p> 	<p>SPEAKER, BUZZER</p> 
<p>ANTENNA</p> <p>Mast</p>  <p>Window</p> 		<p>TRANSISTOR (Tr)</p> 	<p>SWITCH (In normal position)</p> <p>Normally open switch</p>  <p>Normally closed switch</p> 		<p>LIGHT EMITTING DIODE (LED)</p> 
<p>RELAY (In normal position)</p> <p>Normally open relay</p>  <p>Normally closed relay</p> 		<p>CONDENSER</p> 	<p>CONNECTION</p> <p>Input</p>  <p>Output</p> 	<p>CONNECTOR</p> 	<p>REED SWITCH</p> 

Relay and Control Unit Locations



Engine Compartment

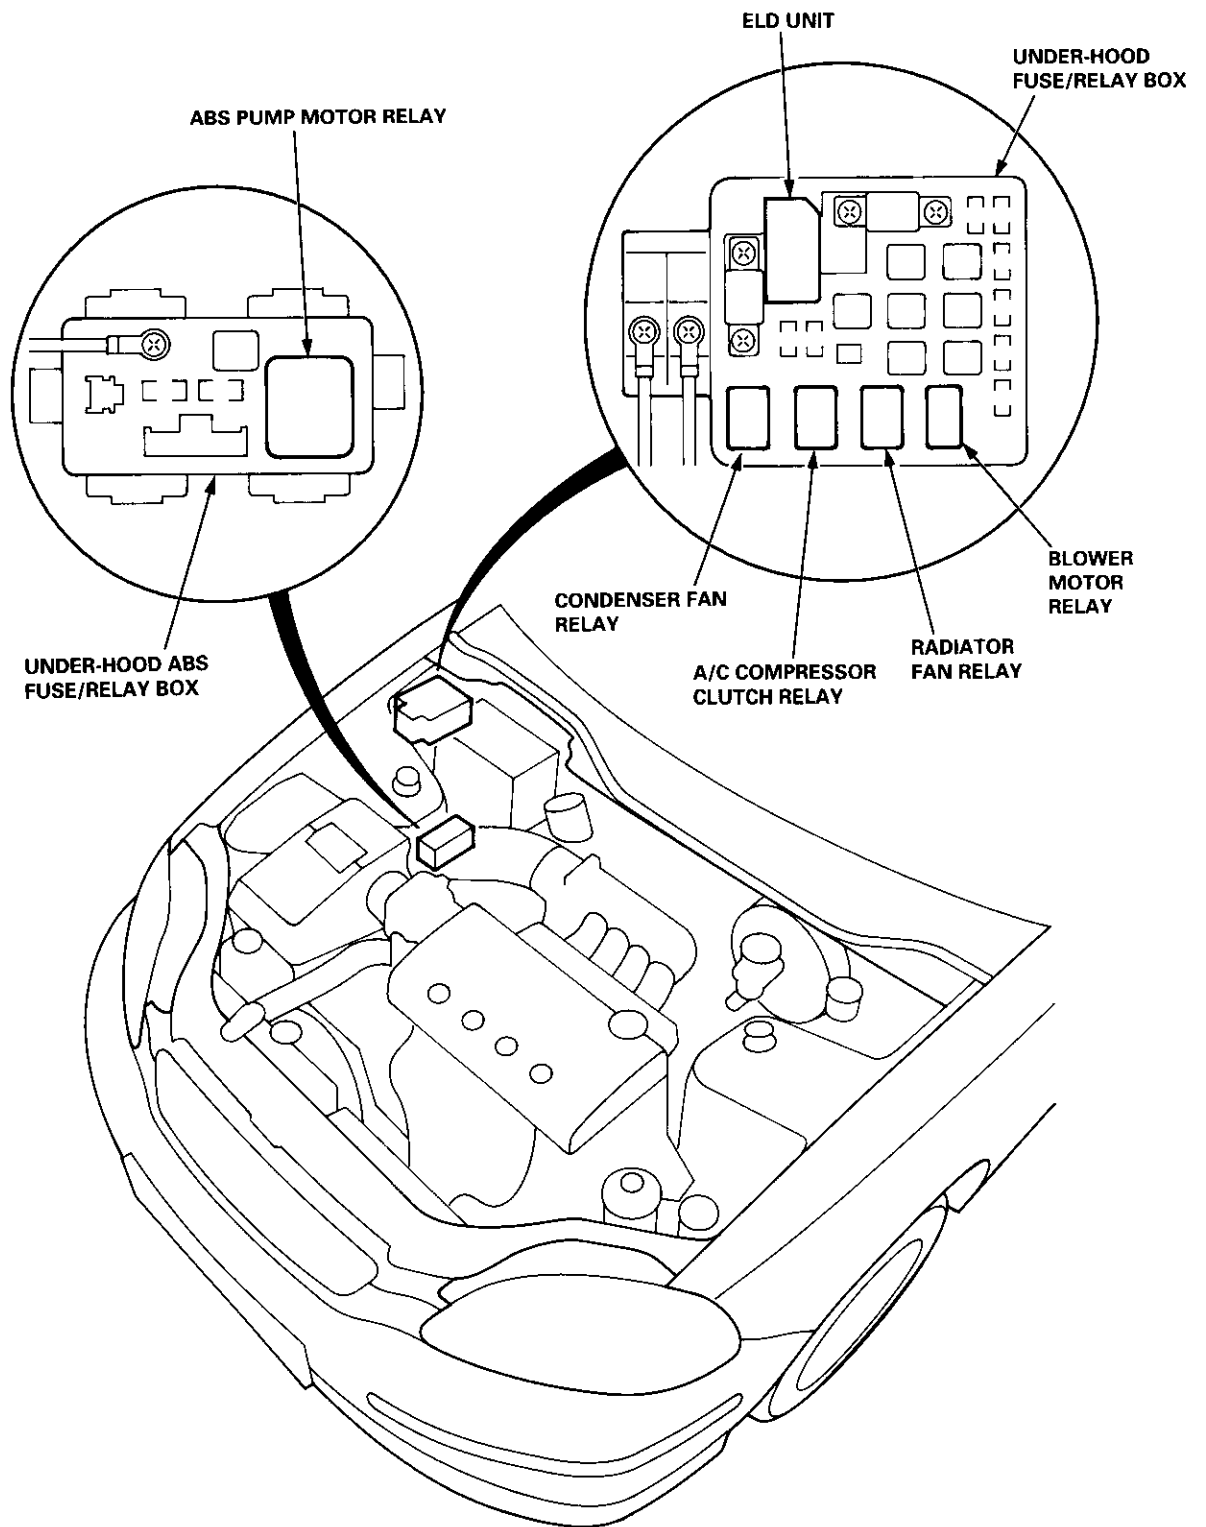


Relay and Control Unit Locations

Dashboard: 96, 97 models

CRUISE CONTROL UNIT



DAYTIME
RUNNING LIGHTS
CONTROL UNIT
(Canada)

DASH LIGHTS BRIGHTNESS CONTROLLER
(Has built-in control unit)

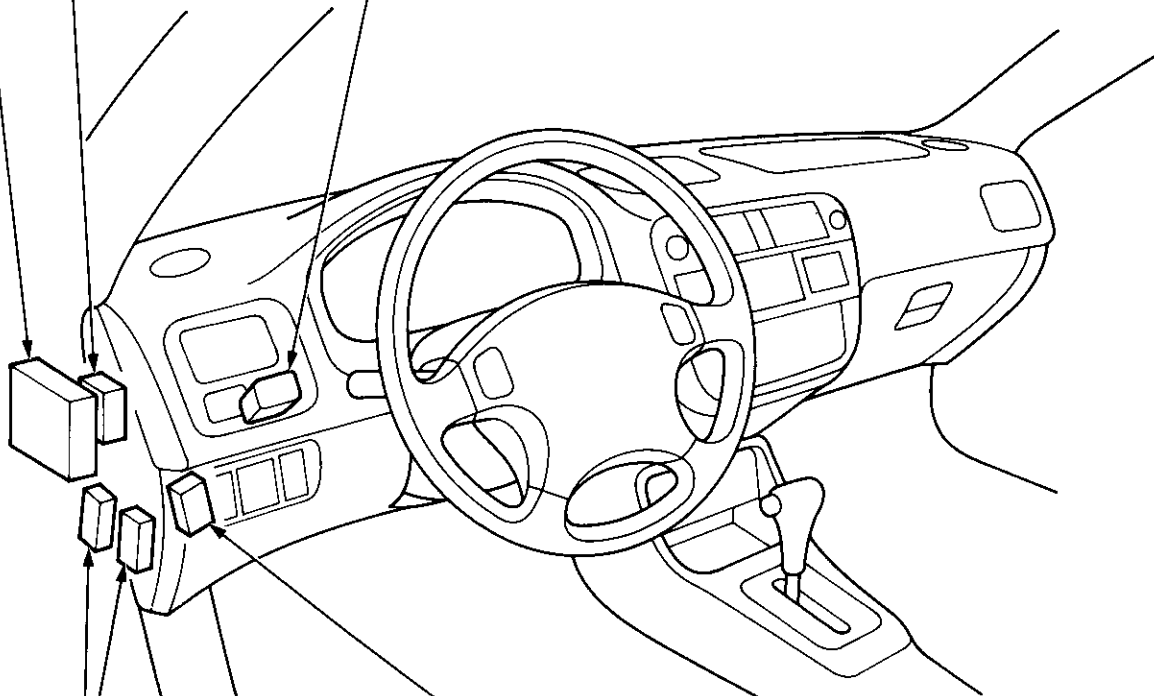

- MOONROOF OPEN RELAY
[Wire colors: GRN/ORN, GRN/RED,
WHT, YEL, and BLK]
- MOONROOF CLOSE RELAY
[Wire colors: GRN/ORN, GRN/YEL,
WHT, GRN/RED, and BLK]

STARTER CUT RELAY
[Wire colors: BLK/WHT, BLK/WHT,
BLU/BLK, and BLK/RED]

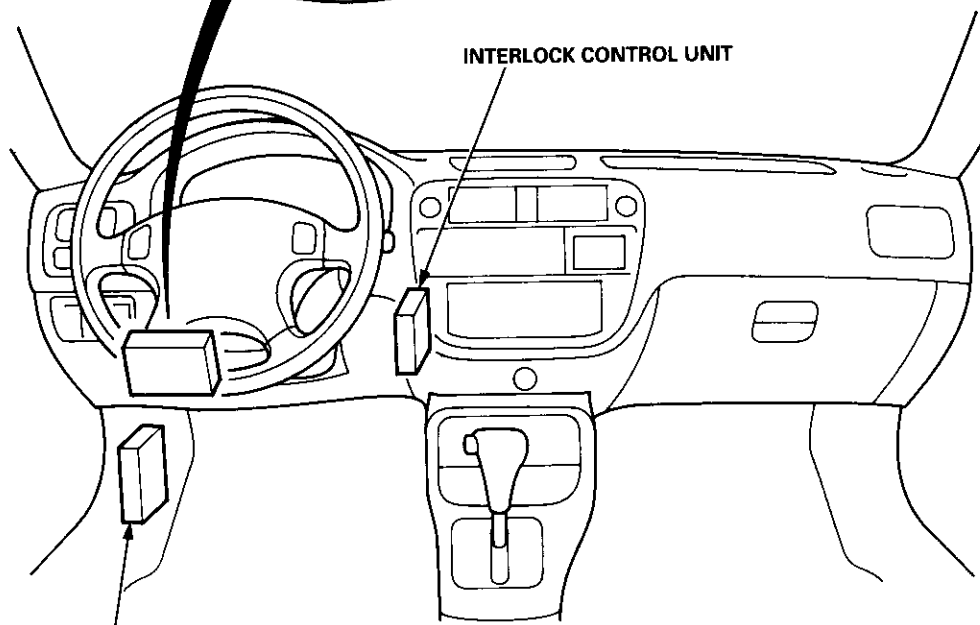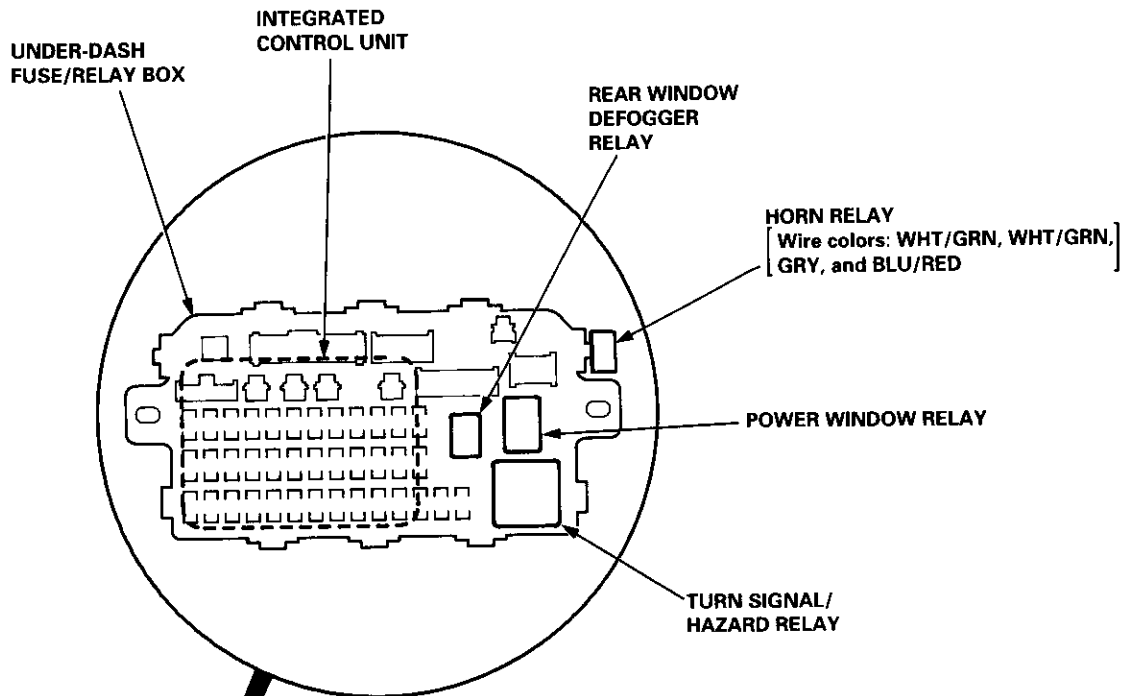



*TCM (CVT)

*: Coupe

Relay and Control Unit Locations

Dashboard: 98 model

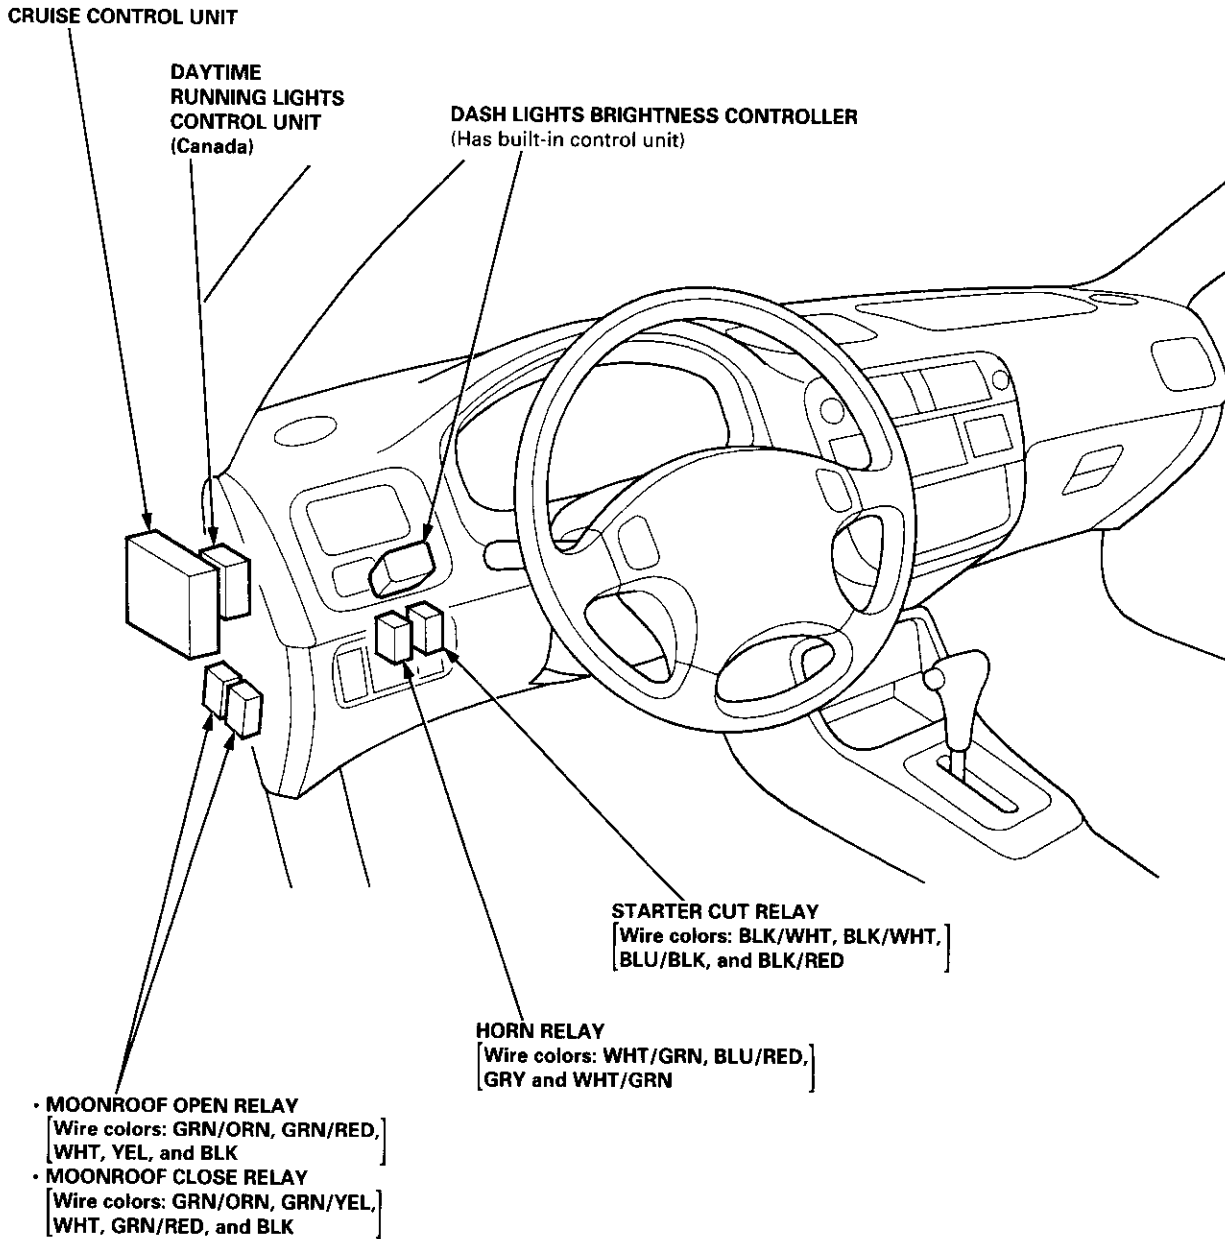


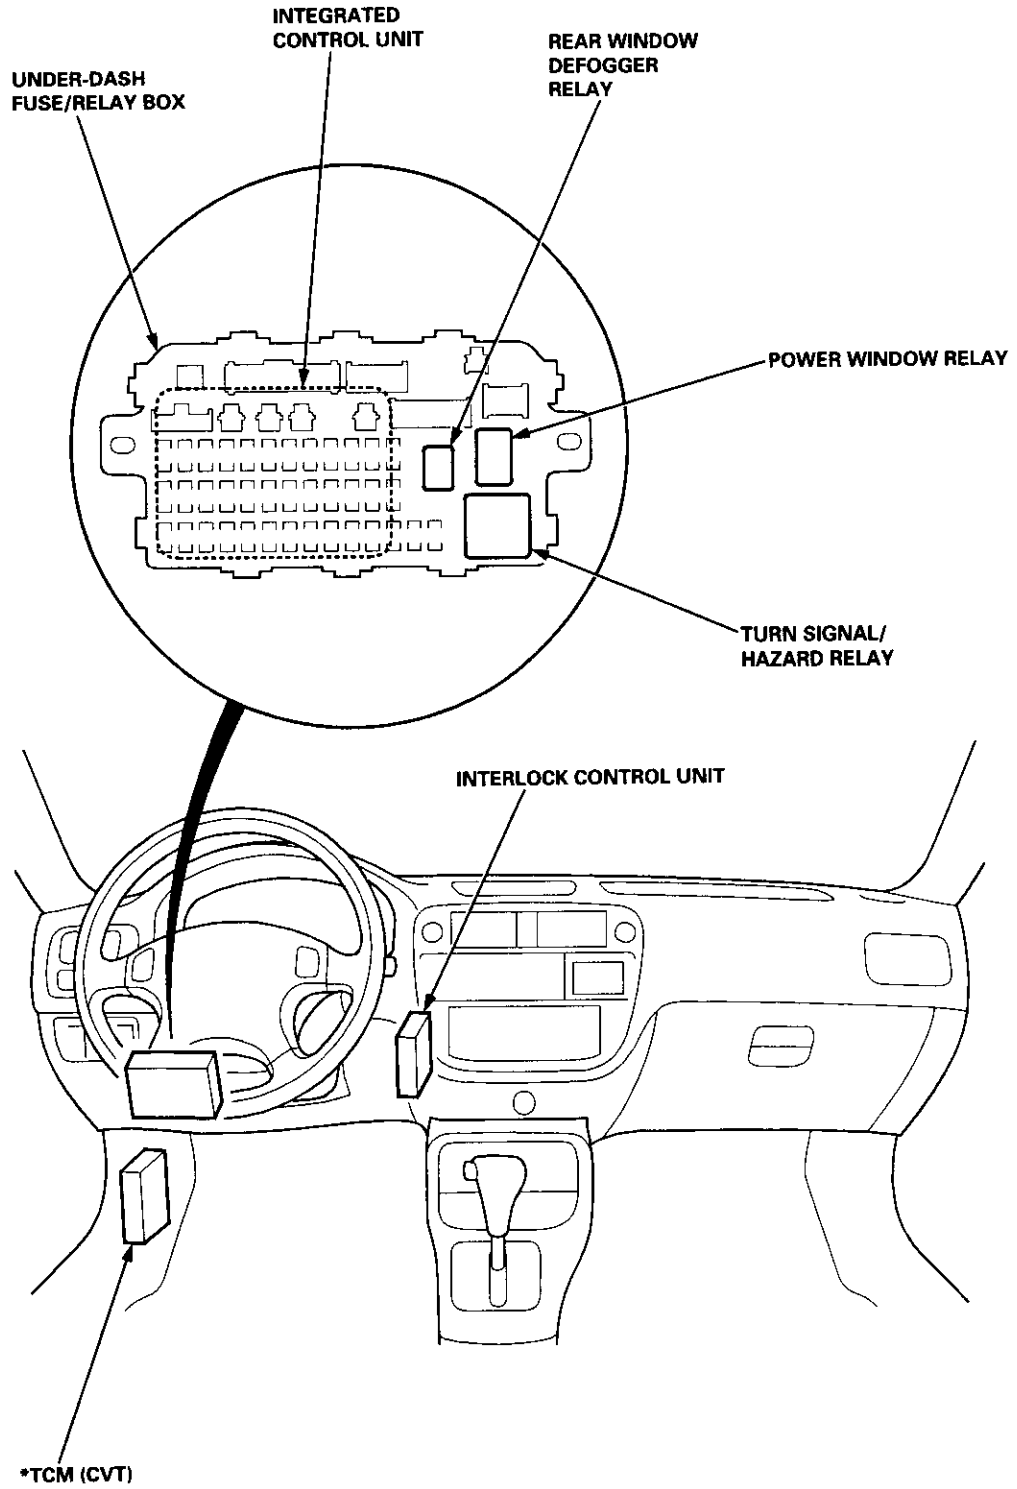

*: Coupe

Relay and Control Unit Locations

Dashboard/Door

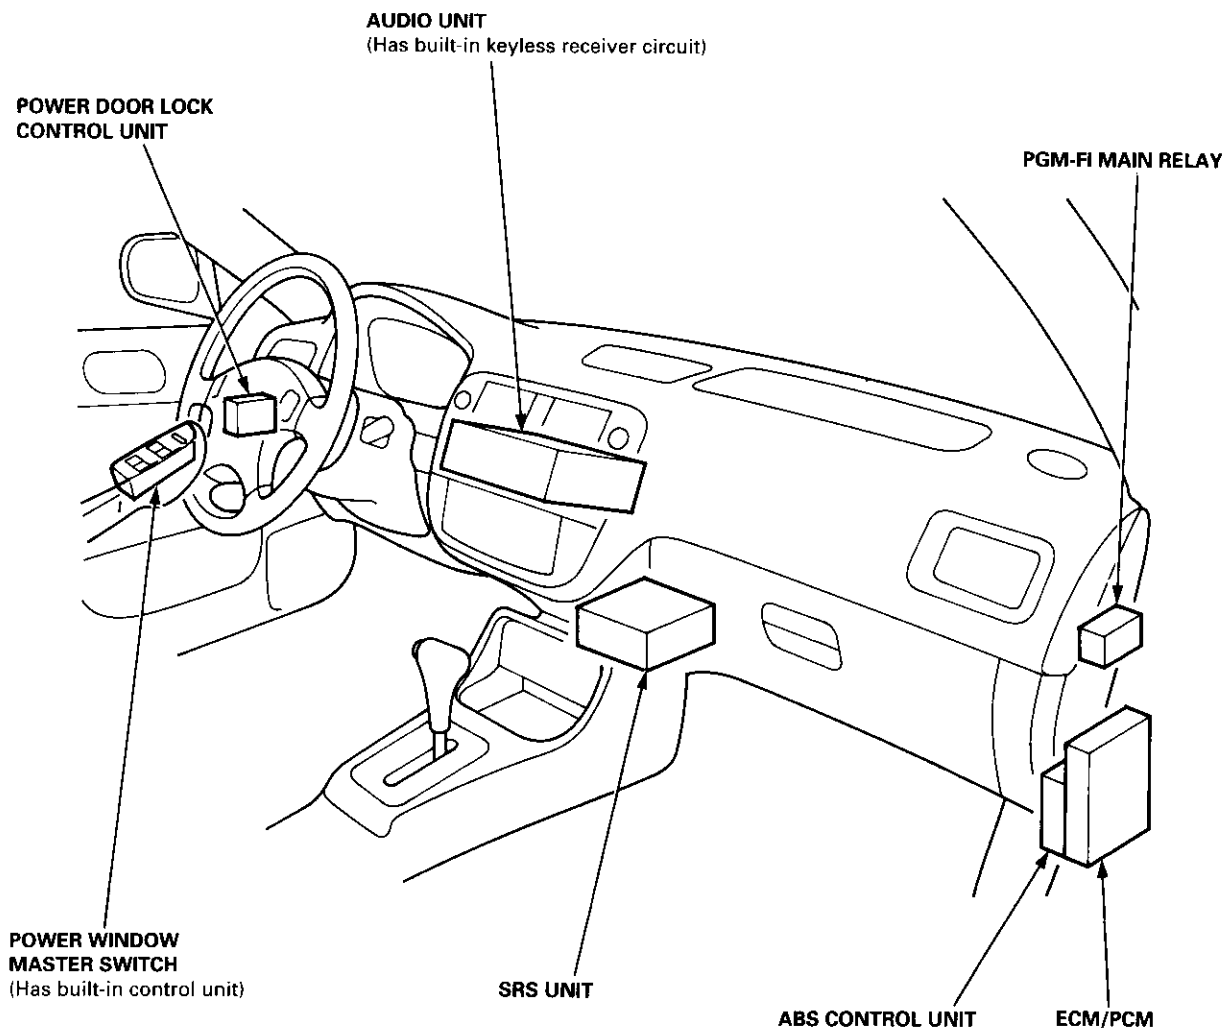

Connector Identification and Wire Harness Routing



How to Identify Connectors:

Identification numbers have been assigned to all connectors. The number is preceded by the letter "C" for connectors, "G" for ground terminals or "T" for non-ground terminals.

Harness	Location	Engine Compartment	Dashboard	Others (Floor, Door, Trunk/Hatch, and Roof)
Starter cables		T1, T2 and ⊕		
Battery ground cable		G1 and ⊖		
Engine ground cable A		T3 G2		
Engine ground cable B		T4 G3		
Under-hood ABS fuse/relay box wire harness (With ABS)		T5 and ⊕		
Engine wire harness		C101 thru C147 T101 and T102 G101		
Engine compartment wire harness		C201 thru C214 G201 and G202		
Main wire harness		C301 thru C310 C351 thru C360	C401 thru C446 G401 and G402	
Dashboard wire harness			C501 thru C520 G501	
Floor wire harness			C551 thru C573 (C574) G551 and G552	
Rear wire harness				C601 thru C617 G601
Driver's door wire harness				C631 thru C639
Passenger's door wire harness				C651 thru C656
Left rear door wire harness (Sedan)				C661 thru C664
Right rear door wire harness (Sedan)				C671 thru C674
Roof wire harness (Without moonroof)				C701 thru C703
Moonroof wire harness (With moonroof)				C711 thru C718
Heater sub-harness A			C721 thru C727	
Heater sub-harness B			C741 thru C743	
A/C wire harness		C751 thru C754 G751		
Hatch wire harness (Hatchback)		C761 thru C768 G761		
Rear window defogger ground wire				C771 G771
Secondary heated oxygen sensor sub-harness				C781 and C782
Fuel tank pressure sensor sub-harness				C791 thru C793
SRS main harness				C801 thru C807 G801

(): 97, 98 model

Connector Identification and Wire Harness Routing

Starter Cables

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
T1		Right side of engine compartment	Under-hood fuse/relay box Starter motor	
T2		Right side of engine compartment		
⊕		Battery	Battery positive terminal	

Battery Ground Cable

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
G1		Right front shock tower	Body ground, via battery ground cable	
⊖		Battery	Battery negative terminal	

Engine Ground Cable A

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
T3		Left side of engine	Power steering pump bracket	
G2		Left side of engine compartment	Body ground, via engine ground cable A	

Engine Ground Cable B


Connector or Terminal	Number of Cavities	Location	Connects to	Notes
T4		Right side of engine compartment	Transmission	
G3		Right side of front frame	Body ground, via engine ground cable B	

Under-hood ABS Fuse/Relay Box Wire Harness

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
T5		Right side of engine compartment	Under-hood fuse/relay box	
⊕		Battery	Battery positive terminal	

A/C Wire Harness

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C751	4	Right side of engine compartment	Engine compartment wire harness (C209) Compressor clutch Condenser fan motor A/C pressure switch	
C752	1	Right side of engine compartment		
C753	2	Right side of engine compartment		
C754	2	Right side of engine compartment		
G751		Left side of engine compartment	Body ground, via A/C wire harness	

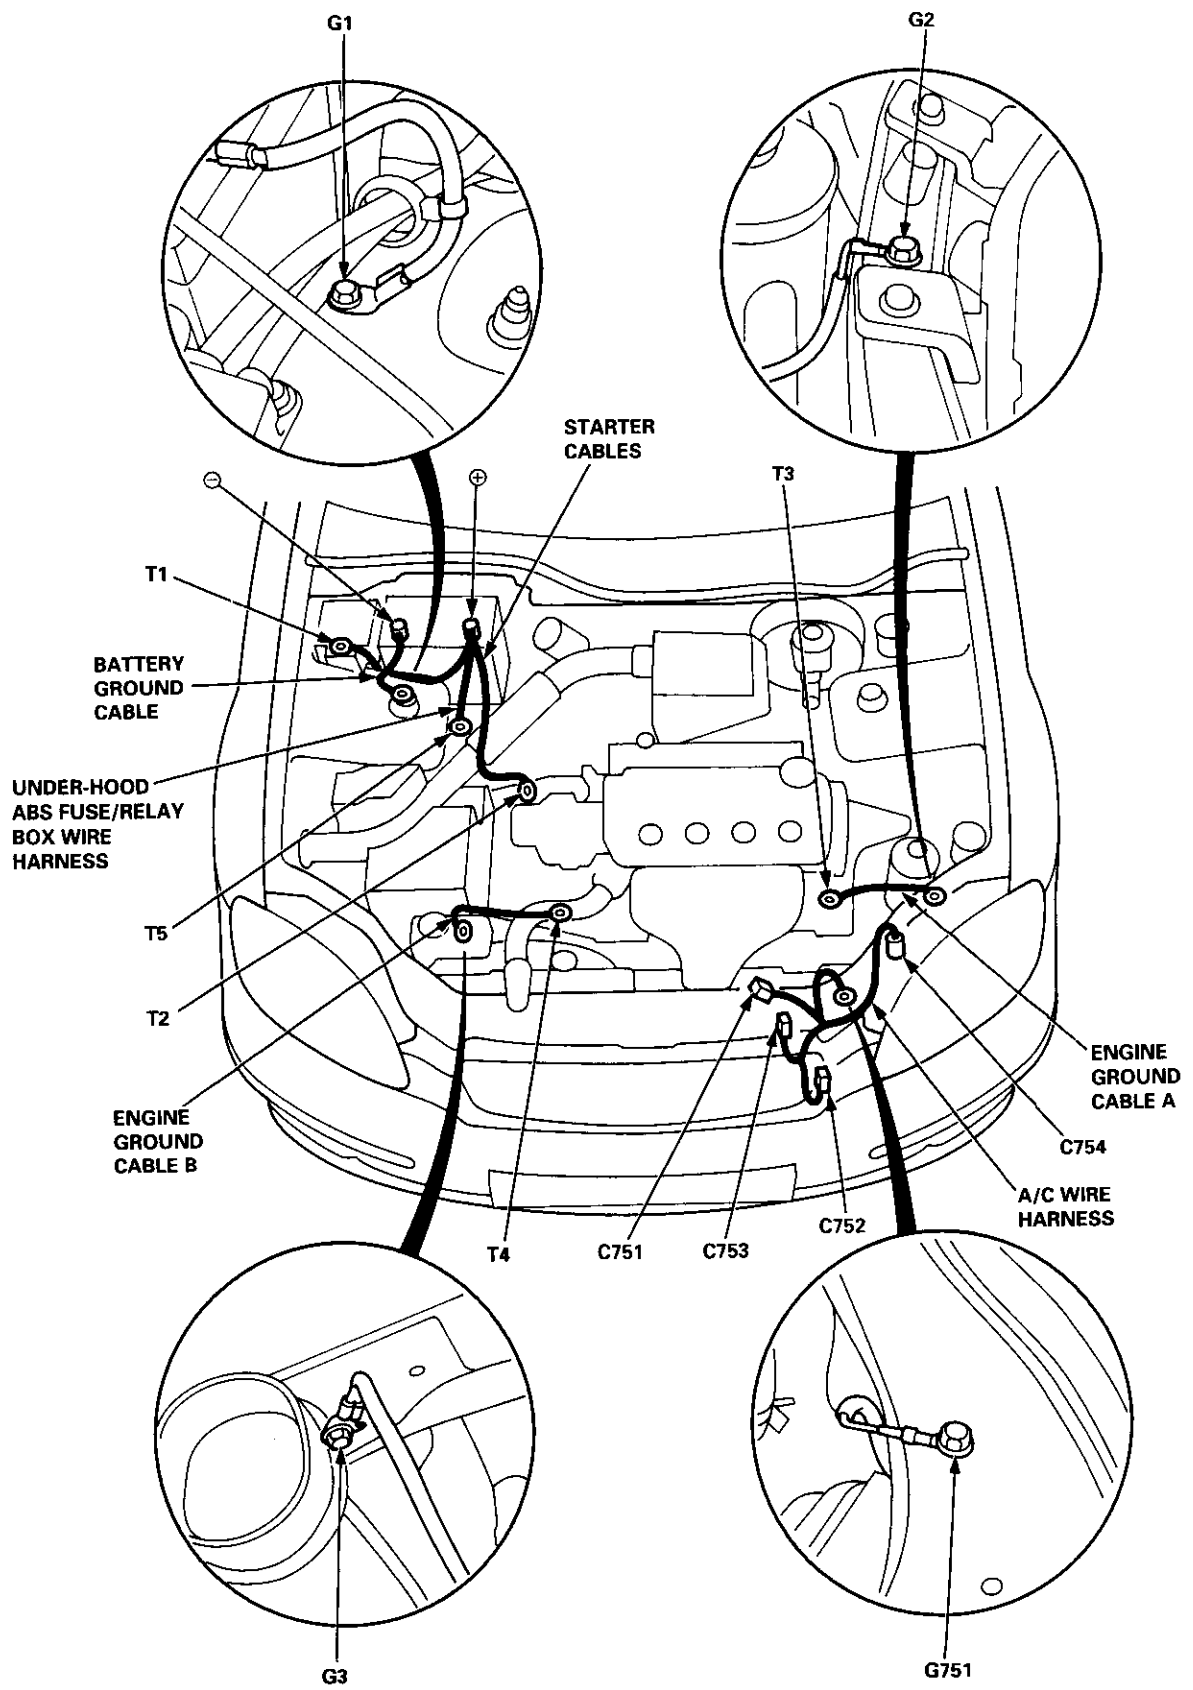

Connector Identification and Wire Harness Routing


Engine Wire Harness (D16Y5, D16Y8 engines)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C101	10	Left side of engine compartment	Main wire harness (C303)	
C102	3	Middle of engine	Crankshaft speed fluctuation (CKF) sensor	
C103	1	Middle of engine	Engine oil pressure switch	
C104	4	Left side of engine compartment	Alternator	USA
C104	3	Left side of engine compartment	Alternator	Canada
C105	2	Middle of engine	No. 1 fuel injector	
C106	2	Middle of engine	No. 2 fuel injector	
C107	2	Middle of engine	No. 3 fuel injector	
C108	2	Middle of engine	No. 4 fuel injector	
C109	3	Middle of engine	IAC valve	A/T
C110	3	Middle of engine	Throttle position (TP) sensor	
C111	3	Middle of engine	Manifold absolute pressure (MAP) sensor	
C112	2	Middle of engine	Intake air temperature (IAT) sensor	
C113	2	Middle of engine	Power steering pressure (PSP) switch	USA
C114	2	Middle of engine	EVAP purge control solenoid valve	
C115	14	Middle of engine	Junction connector	
C116	14	Middle of engine	Junction connector	
C117	3	Left side of engine compartment	Vehicle speed sensor (VSS)	*2 (A/T)
C118	2	Middle of engine	Countershaft speed sensor	
C119	2	Middle of engine	Engine coolant temperature (ECT) switch A	
C120	10	Middle of engine	Distributor	
C121	1	Middle of engine	Engine coolant temperature (ECT) sending unit	
C122	2	Middle of engine	Engine coolant temperature (ECT) sensor	*3
C123	4	Middle of engine	Primary HO2S (sensor 1)	*1 (M/T)
C123	8	Middle of engine	Primary HO2S (sensor 1)	M/T
C124	2	Middle of engine	Back-up light switch	*2 (A/T)
C124	2	Middle of engine	Lock-up control solenoid valve	*1
C125	4	Middle of engine	Secondary HO2S (sensor 2)	*2
C126	2	Middle of engine	Mainshaft speed sensor	*2
C127	2	Middle of engine	Linear solenoid valve	*2
C128	2	Middle of engine	Shift control solenoid valve	
C129	1	Right side of engine compartment	Starter solenoid	
C130	20	Behind right kick panel	Junction connector	
C131	22	Under right side of dash	Main wire harness (C446)	
C132	32	Under right side of dash	ECM/PCM	*2 (A/T)
C133	25	Under right side of dash	PCM	
C134	31	Under right side of dash	ECM/PCM	
C135	16	Under right side of dash	ECM/PCM	
C136	14	Under right side of dash	Main wire harness (C305)	A/T: 96 model
C136	14	Under right side of dash	Main wire harness (C305)	*1 (A/T): 97, 98 models
C136	8	Under right side of dash	Main wire harness (C305)	A/T: 97, 98 models
C137	2	Middle of engine	Knock sensor (KS)	
C138	2	Middle of engine	IAC valve	M/T
C139	1	Middle of engine	VTEC solenoid valve	
C140	2	Middle of engine	VTEC pressure switch	
C141	2	Middle of engine	EVAP control canister vent shut valve	*2
C142	2	Middle of engine	EGR control solenoid valve	*1 (A/T)
C143	2	Left side of engine compartment	Secondary gear shaft speed sensor	*1 (A/T)
C144	3	Middle of engine	EGR valve	*1 (A/T)
C144	6	Middle of engine	EGR valve	*1 (M/T)
C145	2	Right side of engine compartment	Drive pulley speed sensor	*1 (A/T)
C146	8	Right side of engine compartment	Solenoid connector (CVT)	*1 (CVT)
C147	2	Right side of engine compartment	Driven pulley speed sensor	*1 (A/T)
T101		Left side of engine compartment	Alternator	
T102		Right side of engine compartment	Under-hood fuse/relay box	
G101		Middle of engine	Engine ground, via engine wire harness	

*1: D16Y5 engine

*2: D16Y8 engine

*3: D16Y5 (A/T), D16Y8 engines

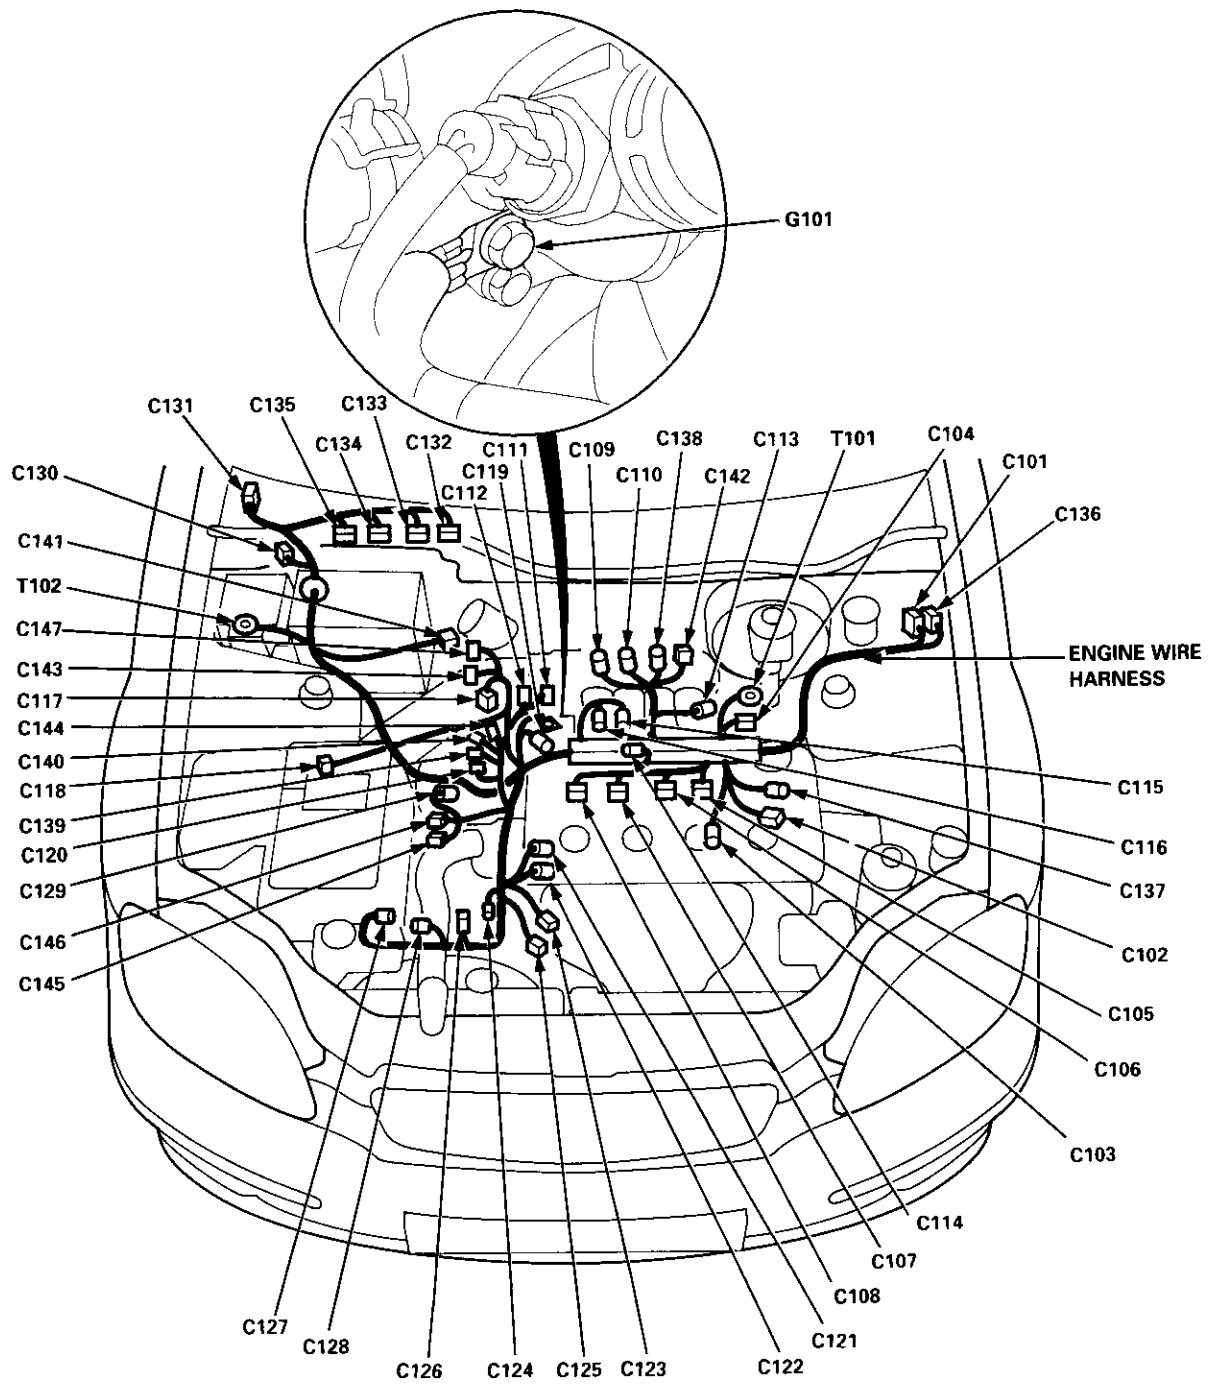


Connector Identification and Wire Harness Routing

Engine Wire Harness (D16Y7 engine): 96 model

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C101	10	Left side of engine compartment	Main wire harness (C303)	
C102	3	Middle of engine	Crankshaft speed fluctuation (CKF) sensor	
C103	1	Middle of engine	Engine oil pressure switch	
C104	4	Left side of engine compartment	Alternator	USA
C104	3	Left side of engine compartment	Alternator	Canada
C105	2	Middle of engine	No. 1 fuel injector	
C106	2	Middle of engine	No. 2 fuel injector	
C107	2	Middle of engine	No. 3 fuel injector	
C108	2	Middle of engine	No. 4 fuel injector	
C109	3	Middle of engine	IAC valve	
C110	3	Middle of engine	Throttle position (TP) sensor	
C111	3	Middle of engine	Manifold absolute pressure (MAP) sensor	
C112	2	Middle of engine	Intake air temperature (IAT) sensor	
C113	2	Middle of engine	Power steering pressure (PSP) switch	USA
C114	2	Middle of engine	EVAP purge control solenoid valve	
C115	14	Middle of engine	Junction connector	
C116	14	Middle of engine	Junction connector	
C117	3	Left side of engine compartment	Vehicle speed sensor (VSS)	
C118	2	Middle of engine	Countershaft speed sensor	A/T
C119	2	Middle of engine	Engine coolant temperature (ECT) switch A	
C120	10	Middle of engine	Distributor	
C121	1	Middle of engine	Engine coolant temperature (ECT) sending unit	
C122	2	Middle of engine	Engine coolant temperature (ECT) sensor	
C123	4	Middle of engine	Primary HO2S (sensor 1)	
C124	2	Middle of engine	Back-up light switch	M/T
C124	2	Middle of engine	Lock-up control solenoid valve	A/T
C125	4	Middle of engine	Secondary HO2S (sensor 2)	
C126	2	Middle of engine	Mainshaft speed sensor	A/T
C127	2	Middle of engine	Linear solenoid valve	A/T
C128	2	Middle of engine	Shift control solenoid valve	A/T
C129	1	Right side of engine compartment	Starter solenoid	
C130	20	Behind right kick panel	Junction Connector	
C131	22	Under right side of dash	Main wire harness (C446)	
C132	32	Under right side of dash	ECM/PCM	
C133	25	Under right side of dash	PCM	A/T
C134	31	Under right side of dash	ECM/PCM	
C135	16	Under right side of dash	ECM/PCM	
T101		Left side of engine compartment	Alternator	
T102		Right side of engine compartment	Under-hood fuse/relay box	
G101		Middle of engine	Engine ground, via engine wire harness	



96 model:

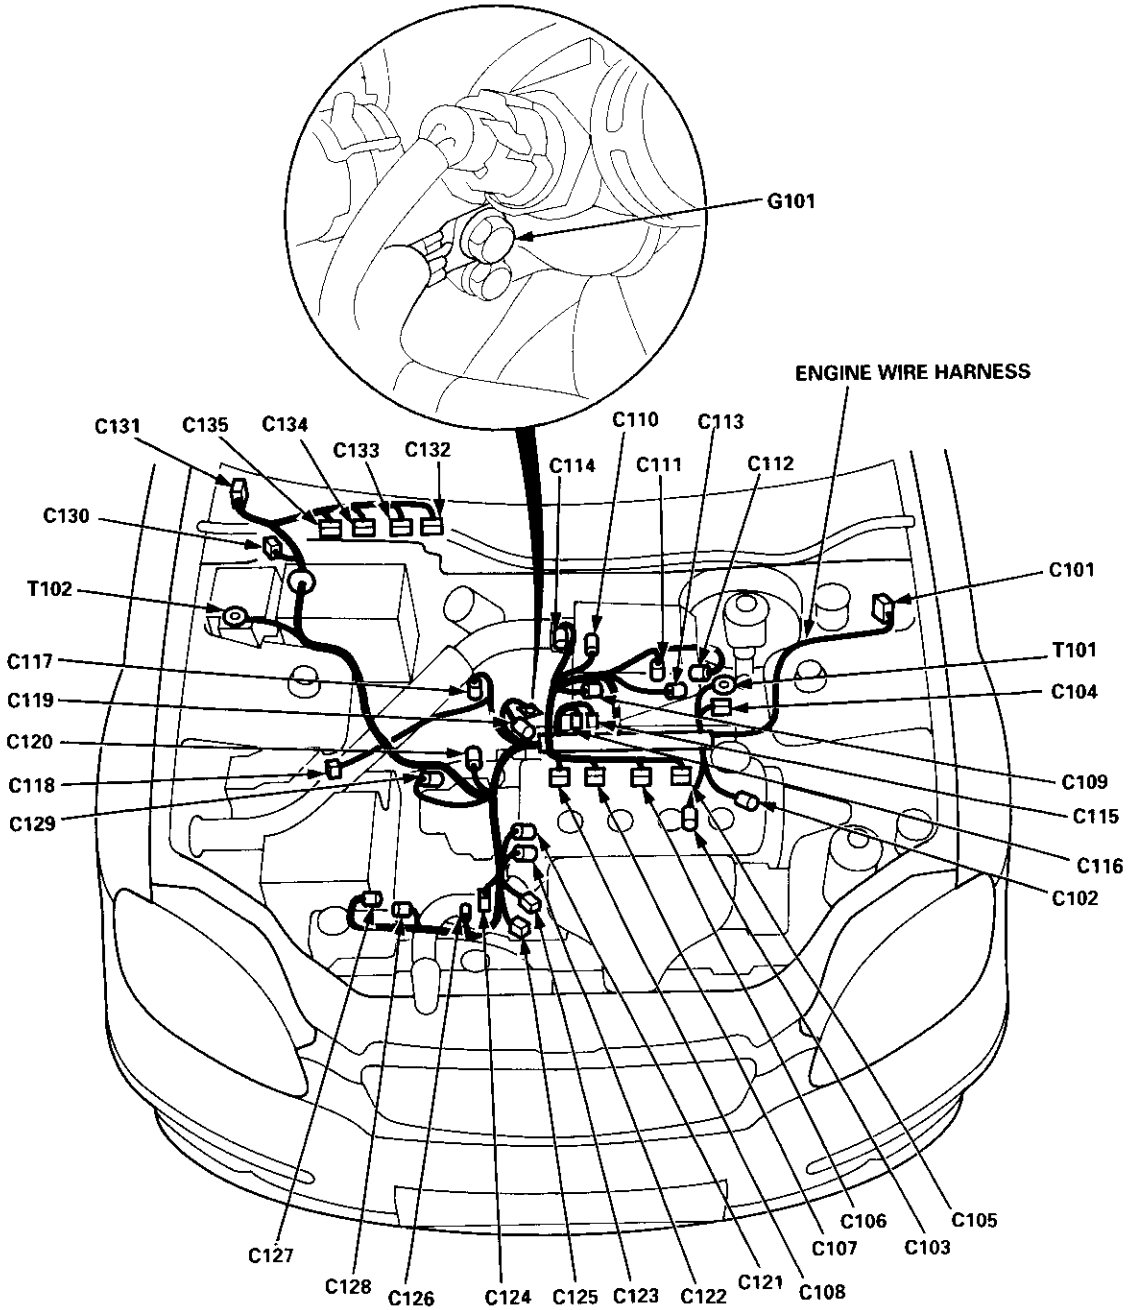


Connector Identification and Wire Harness Routing

Engine Wire Harness (D16Y7 engine): 97 model

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C101	10	Left side of engine compartment	Main wire harness (C303)	
C102	3	Middle of engine	Crankshaft speed fluctuation (CKF) sensor	
C103	1	Middle of engine	Engine oil pressure switch	
C104	4	Left side of engine compartment	Alternator	USA
C104	3	Left side of engine compartment	Alternator	Canada
C105	2	Middle of engine	No. 1 fuel injector	
C106	2	Middle of engine	No. 2 fuel injector	
C107	2	Middle of engine	No. 3 fuel injector	
C108	2	Middle of engine	No. 4 fuel injector	
C109	3	Middle of engine	IAC valve	
C110	3	Middle of engine	Throttle position (TP) sensor	
C111	3	Middle of engine	Manifold absolute pressure (MAP) sensor	
C112	2	Middle of engine	Intake air temperature (IAT) sensor	
C113	2	Middle of engine	Power steering pressure (PSP) switch	USA
C114	2	Middle of engine	EVAP purge control solenoid valve	
C115	14	Middle of engine	Junction connector	
C116	14	Middle of engine	Junction connector	
C117	3	Left side of engine compartment	Vehicle speed sensor (VSS)	
C118	2	Middle of engine	Countershaft speed sensor	A/T
C119	2	Middle of engine	Engine coolant temperature (ECT) switch A	
C120	10	Middle of engine	Distributor	
C121	1	Middle of engine	Engine coolant temperature (ECT) sending unit	
C122	2	Middle of engine	Engine coolant temperature (ECT) sensor	
C123	4	Middle of engine	Primary HO2S (sensor 1)	
C124	2	Middle of engine	Back-up light switch	
C124	2	Middle of engine	Lock-up control solenoid valve	A/T
C125	4	Middle of engine	Secondary HO2S (sensor 2)	
C126	2	Middle of engine	Mainshaft speed sensor	A/T
C127	2	Middle of engine	Linear solenoid valve	A/T
C128	2	Middle of engine	Shift control solenoid valve	A/T
C129	1	Right side of engine compartment	Starter solenoid	
C130	20	Behind right kick panel	Junction connector	
C131	22	Under right side of dash	Main wire harness (C446)	
C132	32	Under right side of dash	ECM/PCM	
C133	25	Under right side of dash	PCM	A/T
C134	31	Under right side of dash	ECM/PCM	
C135	16	Under right side of dash	ECM/PCM	
C136	8	Left side of engine compartment	Main wire harness (C305)	A/T
C137	2	Middle of engine	EVAP control canister vent shut valve	
T101		Left side of engine compartment	Alternator	
T102		Right side of engine compartment	Under-hood fuse/relay box	
G101		Middle of engine	Engine ground, via engine wire harness	



97 model:

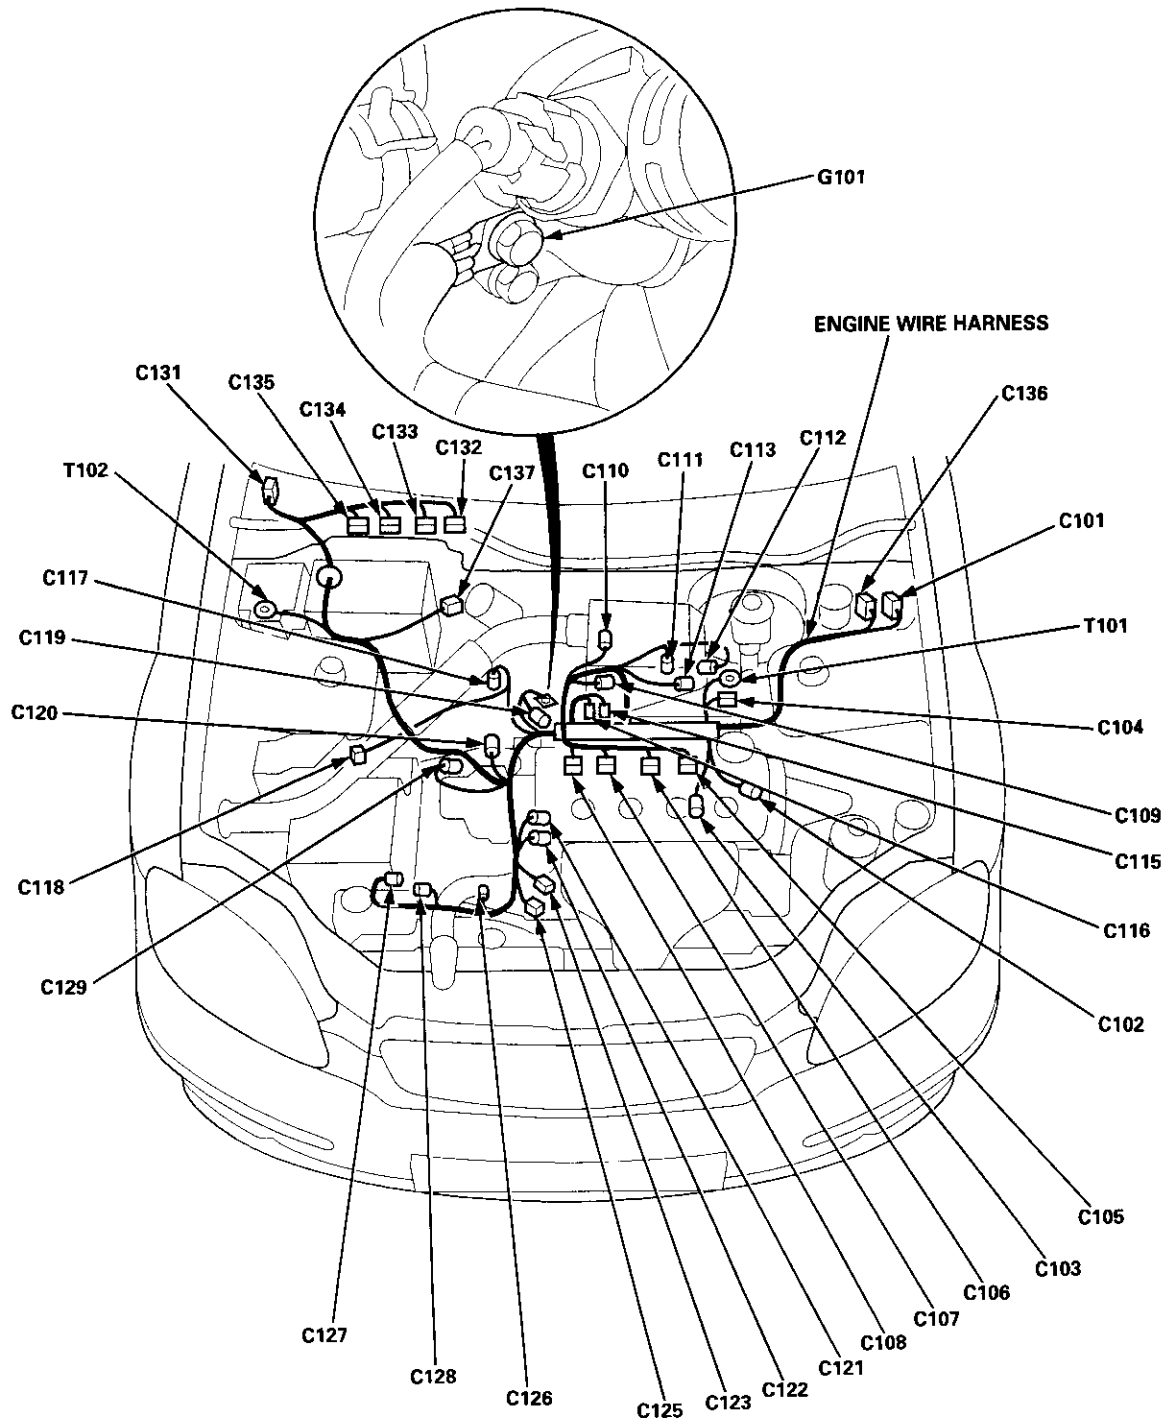


Connector Identification and Wire Harness Routing

Engine Compartment Wire Harness

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C201	10	Left side of engine compartment	Main wire harness (C308)	
C202	6	Left side of engine compartment	Main wire harness (C309)	*1
C202	2	Left side of engine compartment	Main wire harness (C309)	*2
C203	4	Left side of engine compartment	Cruise actuator	*1
C204	2	Behind front bumper	Windshield washer motor	
C205	2	Behind front bumper	Rear window washer motor	
C206	3	Left side of engine compartment	Left front turn signal/parking light	
C207	1	Behind front bumper	Front fog light	Optional
C208	3	Left side of engine compartment	Left headlight	
C209	4	Left side of engine compartment	A/C wire harness (C751)	
C210	2	Behind front bumper	Horn	96, 97 models
C210	1	Behind front bumper	Horn	98 model
C211	2	Right side of engine compartment	Radiator fan motor	
C212	3	Right side of engine compartment	Right headlight	
C213	3	Right side of engine compartment	Right front turn signal/parking light	
C214	8	Right side of engine compartment	Main wire harness (C355)	
G201		Right side of engine compartment	Body ground, via engine compartment wire harness	
G202		Left side of engine compartment	Body ground, via engine compartment wire harness	

*1: With cruise control

*2: Without cruise control

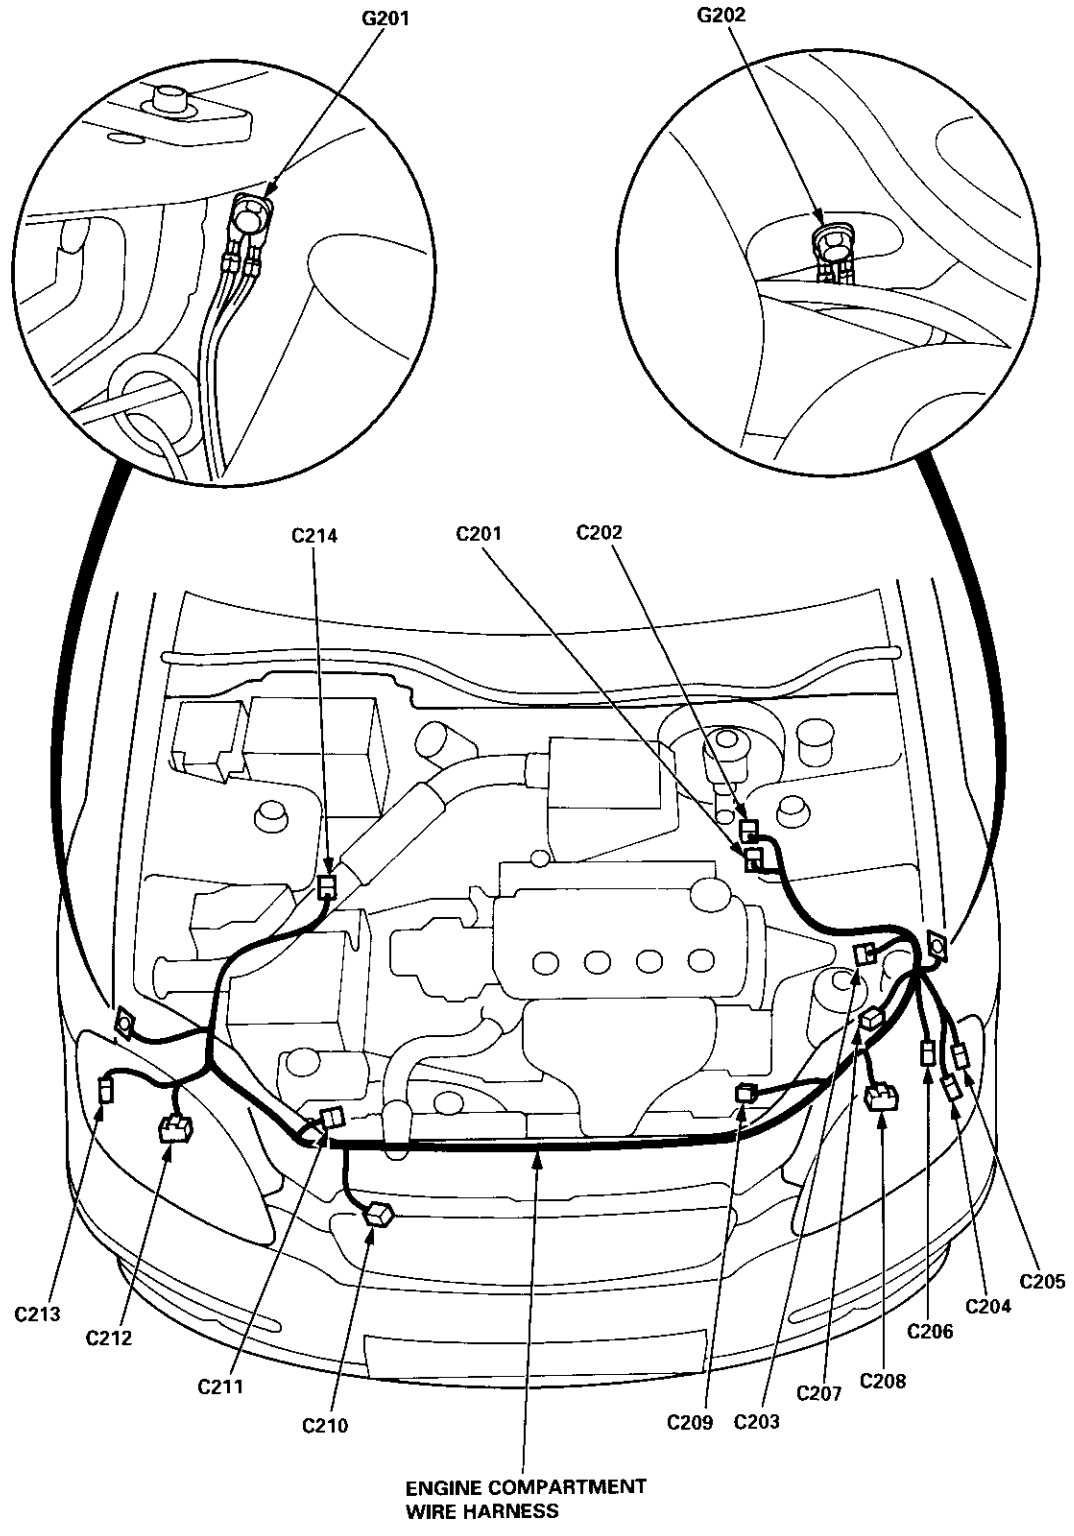

Connector Identification and Wire Harness Routing

Main Wire Harness (Left side of engine compartment branch)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C301	5	Left side of engine compartment	Windshield wiper motor	
C302	2	Left side of engine compartment	Test tachometer connector	
C303	10	Left side of engine compartment	Engine wire harness (C101)	
C304	3	Left side of engine compartment	Daytime running lights resistor	Canada
C305	14	Left side of engine compartment	Engine wire harness (C136)	*1
C305	8	Left side of engine compartment	Engine wire harness (C136)	*2
C306	1	Left side of engine compartment	Brake fluid level switch (+)	
C307	1	Left side of engine compartment	Brake fluid level switch (-)	
C308	10	Left side of engine compartment	Engine compartment wire harness (C201)	
C309	6	Left side of engine compartment	Engine compartment wire harness (C202)	*3
C309	2	Left side of engine compartment	Engine compartment wire harness (C202)	*4
C310	2	Left side of engine compartment	Left front ABS wheel sensor	ABS

*1: D16Y5 engine


*2: D16Y8 engine

*3: With cruise control

*4: Without cruise control

Main Wire Harness (Right side of engine compartment branch)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C351	11	Right side of engine compartment	Under-hood fuse/relay box (C908)	
C352	9	Right side of engine compartment	Under-hood fuse/relay box (C906)	
C353	5	Right side of engine compartment	Under-hood fuse/relay box (C905)	
C354	3	Right side of engine compartment	Under-hood fuse/relay box (C907)	USA
C355	8	Right side of engine compartment	Engine compartment wire harness (C214)	
C356	3	Right side of engine compartment	Under-hood ABS fuse/relay box (C927)	ABS
C357	2	Right side of engine compartment	Under-hood ABS fuse/relay box (C926)	ABS
C358	2	Right side of engine compartment	Right front ABS wheel sensor	ABS
C359	10	Right side of engine compartment	ABS solenoid	ABS
C360	2	Right side of engine compartment	ABS pump motor	ABS
G403		Right side of engine compartment	Body ground, via main wire harness	

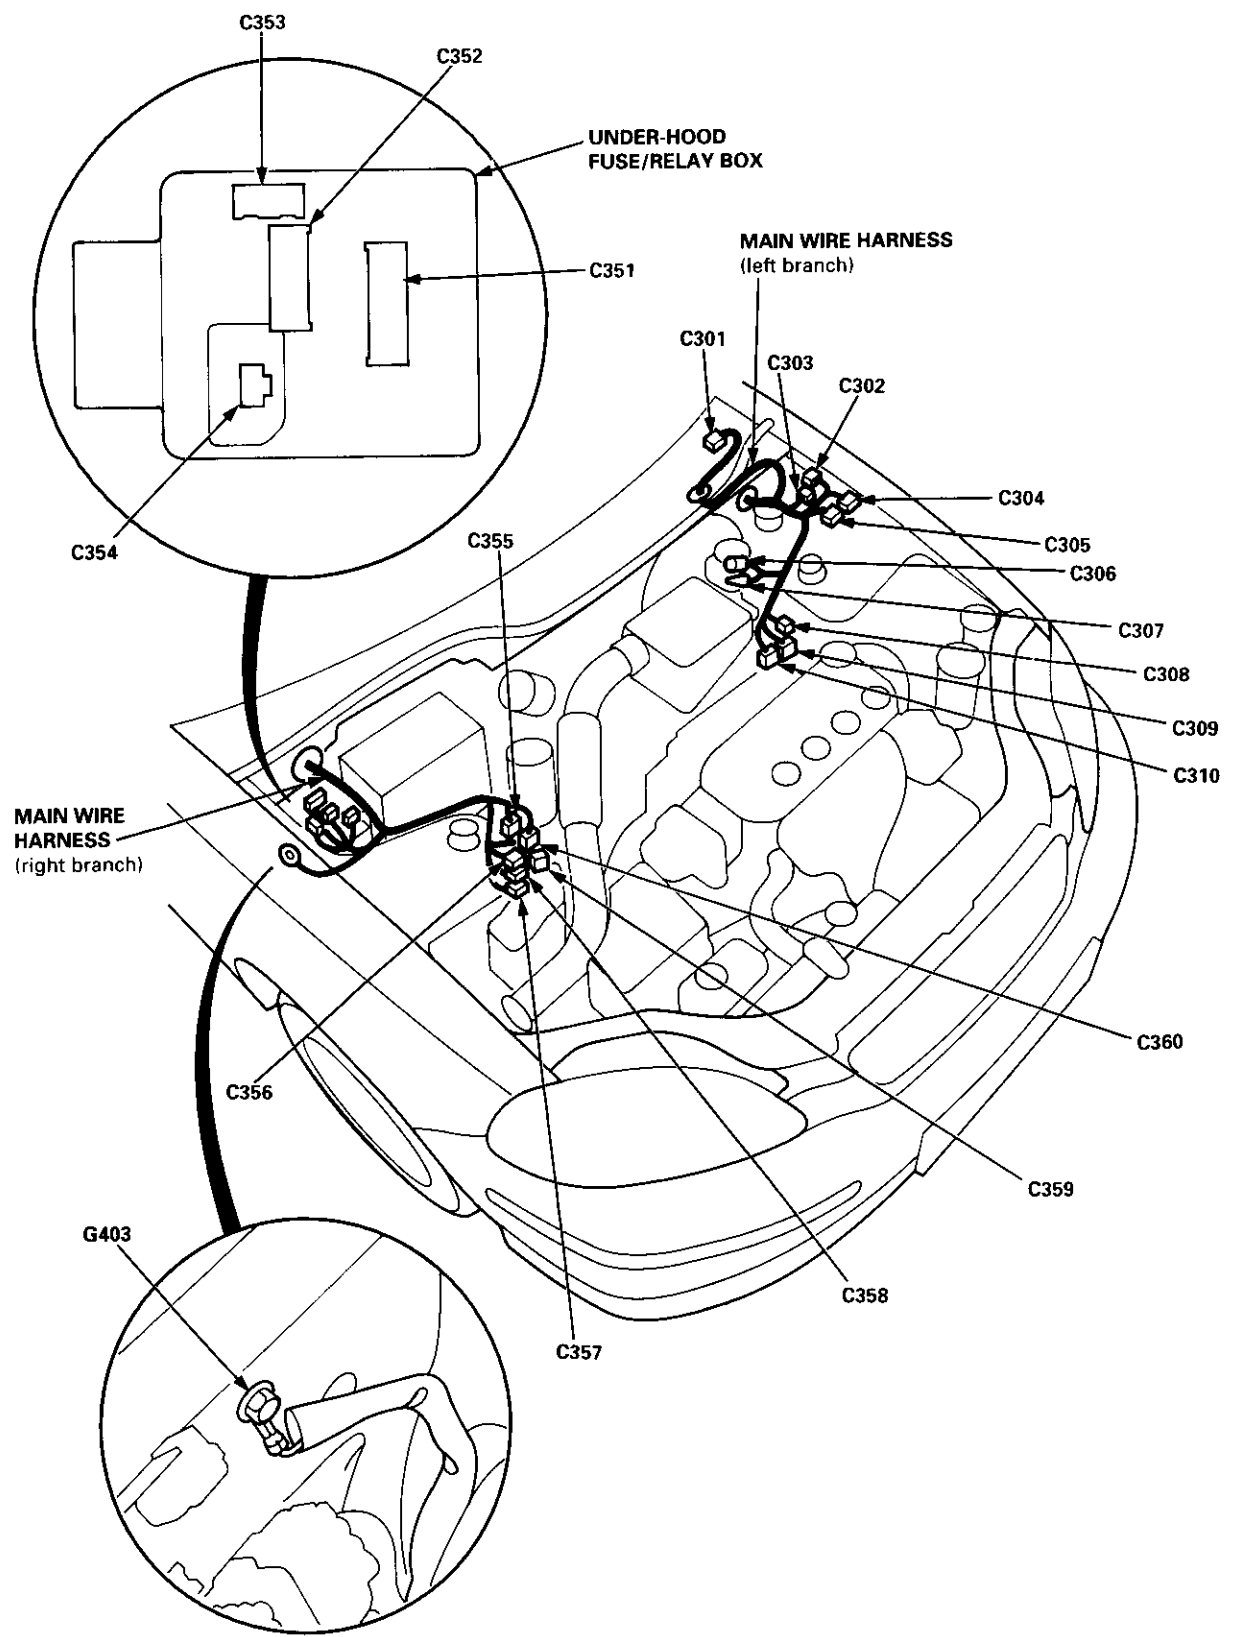

Connector Identification and Wire Harness Routing

Main Wire Harness (Left side of dash and floor branch)


Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C401	14	Above under-dash fuse/relay box	Floor wire harness (C555)	
C402	4	Under left side of dash	Floor wire harness (C554)	ABS
C403	4	Under left side of dash	Security system	Optional
C404	14	Under left side of dash	Cruise control unit	
C405	4	Under left side of dash	Daytime running lights control unit	Canada
C406	8	Under left side of dash	Daytime running lights control unit	Canada
C407	2	Under left side of dash	Roof wire harness (C701)	*2
C407	2	Under left side of dash	Moonroof wire harness (C711)	*4
C408	1	Under left side of dash	Front fog light connector	Optional
C409	10	Behind under-dash fuse/relay box	Integrated control unit	
C410	12	Under left side of dash	Dashboard wire harness (C504)	A/T
C411	24	Under left side of dash	Dashboard wire harness (C502)	
C412	3	Above under-dash fuse/relay box	SRS main harness (C802)	
C413	16	Under left side of dash	Data link connector	
C414	4	Under left side of dash	Starter cut relay	M/T
C415	7	Above under-dash fuse/relay box	Ignition switch	
C416	6	Under left side of dash	Security system	Optional
C417	2	Under left side of dash	Clutch switch	*5
C418	2	Under left side of dash	Clutch interlock switch	M/T
C419	18	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C919)	
C420	20	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C920)	
C421	18	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C922)	
C422	7	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C914)	
C423	6	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C915)	
C424	4	Under left side of dash	Horn relay	
C425	4	Under left side of dash	Brake switch	
C426	8	In the steering column cover	Windshield wiper/washer switch	
C427	6	In the steering column cover	Rear window wiper/washer switch	
C428	4	In the steering column cover	Turn signal switch	
C429	7	In the steering column cover	Combination light/turn signal switch	
C430	3	Under left side of dash	Cable reel	
C431	8	Under left side of dash	Interlock control unit	A/T
C432	4	Under middle of dash	Secondary heated oxygen sensor sub-harness (C781)	*6
C433	14	Under middle of dash	A/T gear position switch	A/T
C434	2	Under middle of dash	Shift lock solenoid	A/T
C435	4	Under middle of dash	Parking pin switch and A/T gear position console light	A/T
C437	26	Under left side of dash	Transmission control module (TCM)	CVT
C438	22	Under left side of dash	Transmission control module (TCM)	CVT
C439	1	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C925)	Optional
G401		Left kick panel	Body ground, via main wire harness	

*2: Without moonroof

*4: With moonroof

*5: M/T (with cruise control or for D16Y5 engine)

*6: With secondary heated oxygen sensor (H02S)

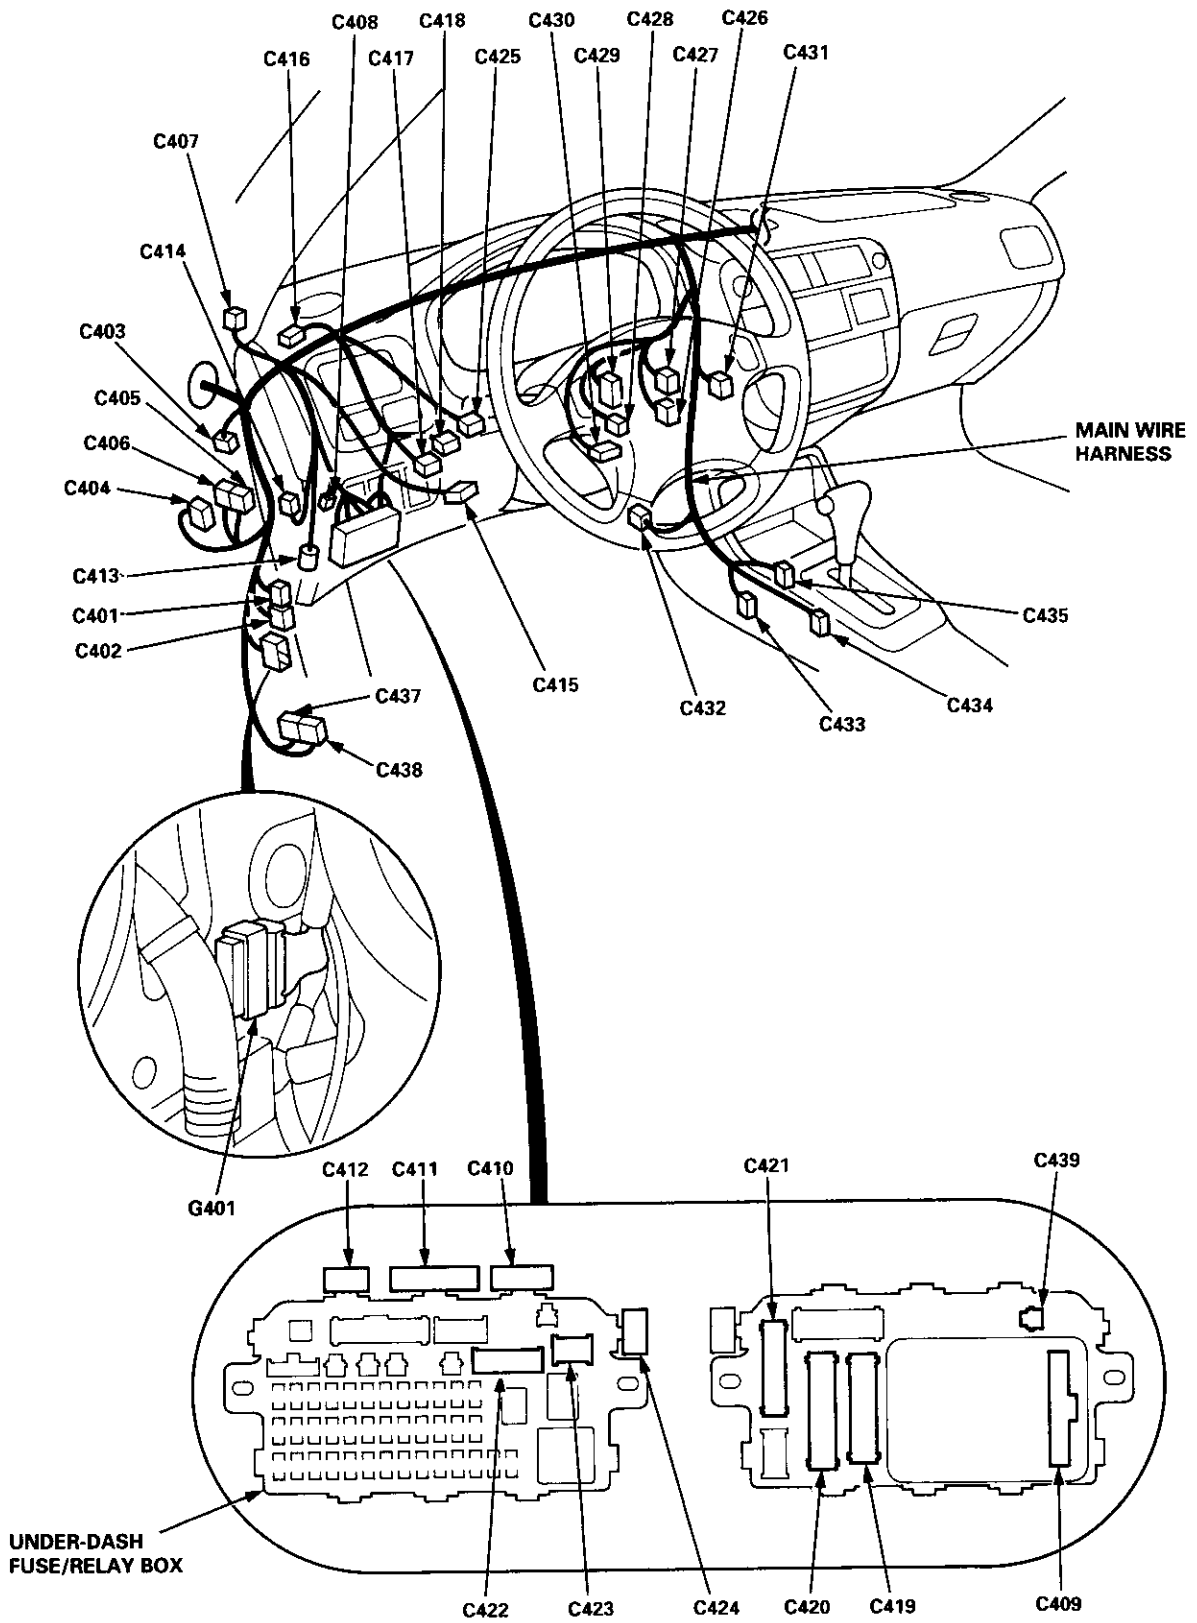

Connector Identification and Wire Harness Routing

Main Wire Harness (Left side of dash and floor branch): 98 model

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C401	14	Above under-dash fuse/relay box	Floor wire harness (C555)	
C402	4	Under left side of dash	Floor wire harness (C554)	ABS
C403	4	Under left side of dash	Security system	Optional
C404	14	Under left side of dash	Cruise control unit	
C405	4	Under left side of dash	Daytime running lights control unit	Canada
C406	8	Under left side of dash	Daytime running lights control unit	Canada
C407	2	Under left side of dash	Roof wire harness (C701)	*2
C407	2	Under left side of dash	Moonroof wire harness (C711)	*4
C408	1	Under left side of dash	Front fog light connector	Optional
C409	10	Behind under-dash fuse/relay box	Integrated control unit	
C410	12	Under left side of dash	Dashboard wire harness (C504)	A/T
C411	24	Under left side of dash	Dashboard wire harness (C502)	
C412	3	Above under-dash fuse/relay box	SRS main harness (C802)	
C413	16	Under left side of dash	Data link connector	
C414	4	Under-dash relay box	Starter cut relay	M/T
C415	7	Above under-dash fuse/relay box	Ignition switch	
C416	6	Under left side of dash	Security system	Optional
C417	2	Under left side of dash	Clutch switch	*5
C418	2	Under left side of dash	Clutch interlock switch	M/T
C419	18	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C919)	
C420	20	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C920)	
C421	18	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C922)	
C422	7	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C914)	
C423	6	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C915)	
C424	4	Under-dash relay box	Horn relay	
C425	4	Under left side of dash	Brake switch	
C426	8	In the steering column cover	Windshield wiper/washer switch	
C427	6	In the steering column cover	Rear window wiper/washer switch	
C428	4	In the steering column cover	Turn signal switch	
C429	7	In the steering column cover	Combination light/turn signal switch	
C430	3	Under left side of dash	Cable reel	
C431	8	Under left side of dash	Interlock control unit	A/T
C432	4	Under middle of dash	Secondary heated oxygen sensor sub-harness (C781)	*6
C433	14	Under middle of dash	A/T gear position switch	A/T
C434	2	Under middle of dash	Shift lock solenoid	A/T
C435	4	Under middle of dash	Parking pin switch and A/T gear position console light	A/T
C437	26	Under left side of dash	Transmission control module (TCM)	CVT
C438	22	Under left side of dash	Transmission control module (TCM)	CVT
G401		Left kick panel	Body ground, via main wire harness	

*2: Without moonroof


*4: With moonroof

*5: M/T (with cruise control or for D16Y5 engine)

*6: With secondary heated oxygen sensor (H02S)




98 model:

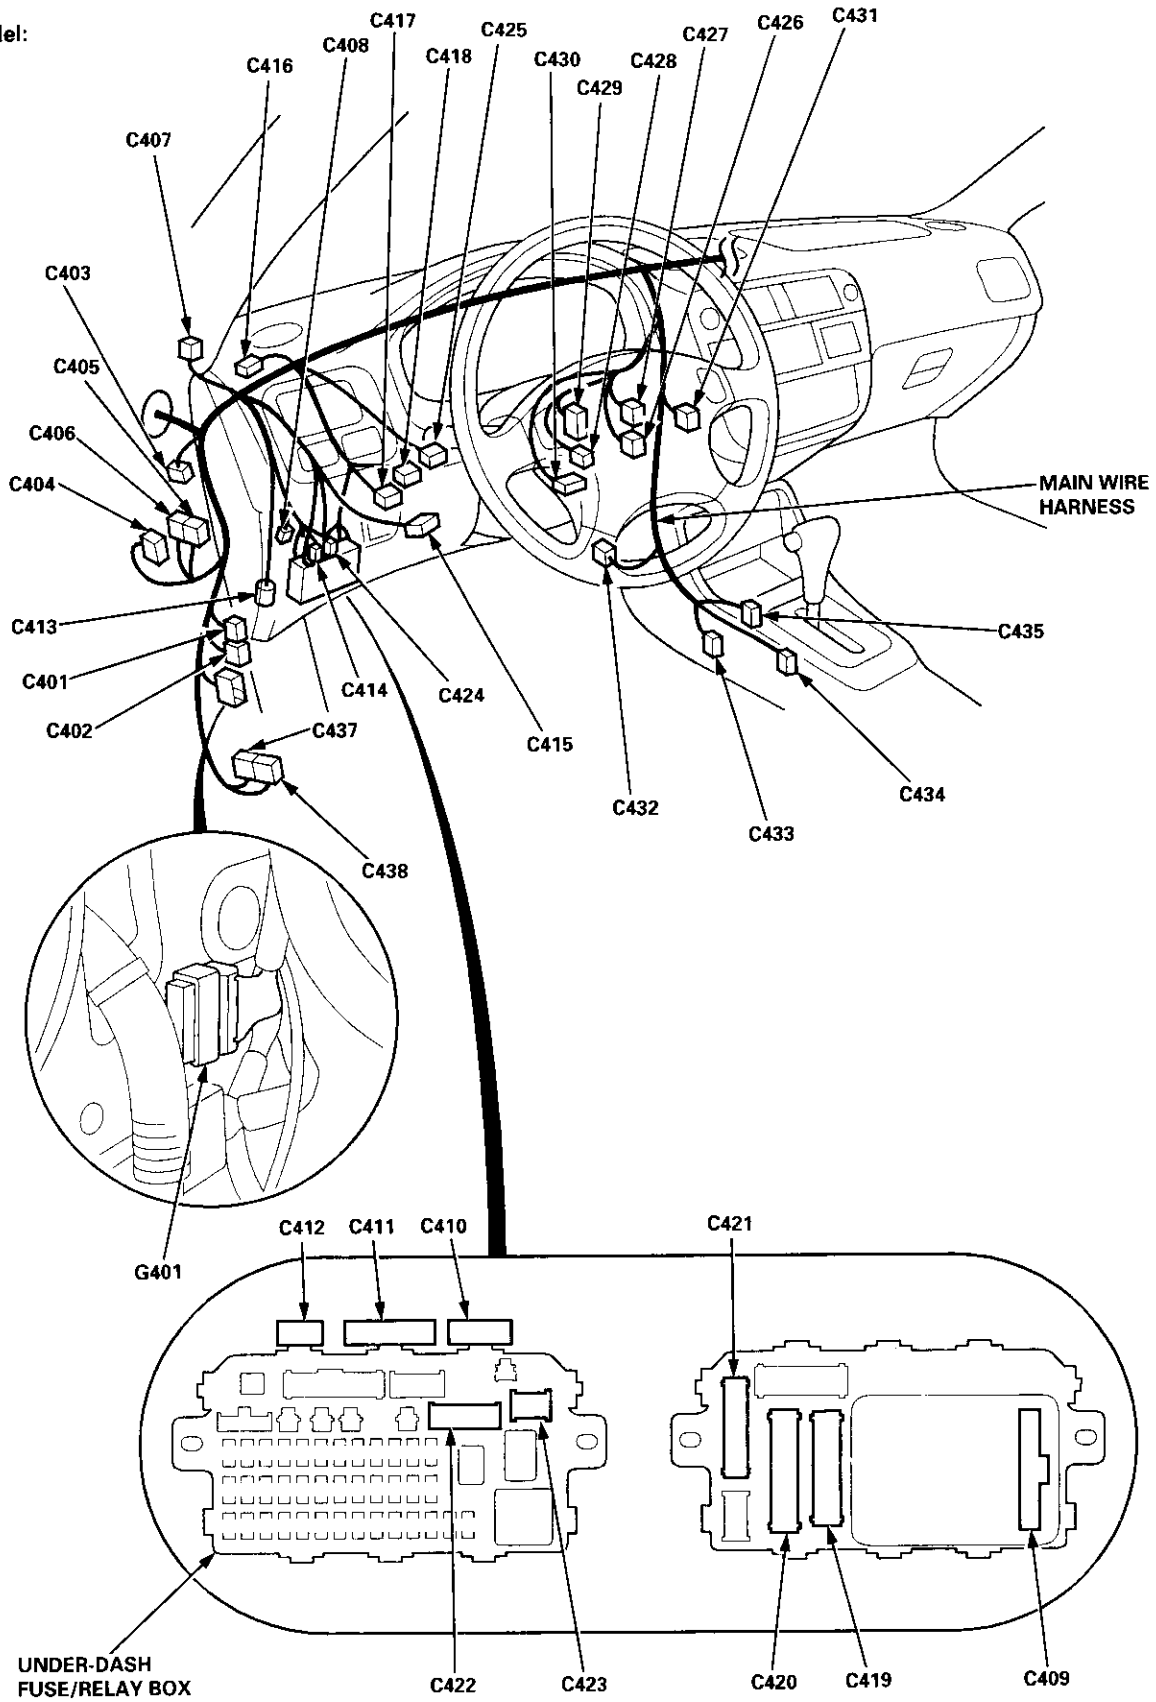

Connector Identification and Wire Harness Routing

Main Wire Harness (Right side of dash branch)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C440	16	Under middle of dash	Heater sub-harness A (C721)	
C441	2	Under right side of dash	Service check connector	
C442	20	Under right side of dash	Junction connector	
C443	7	Under right side of dash	PGM-FI main relay	
C444	22	Under right side of dash	ABS control unit	
C445	26	Under right side of dash	ABS control unit	
C446	22	Under right side of dash	Engine wire harness (C131)	
G402		Right kick panel	Body ground, via main wire harness	

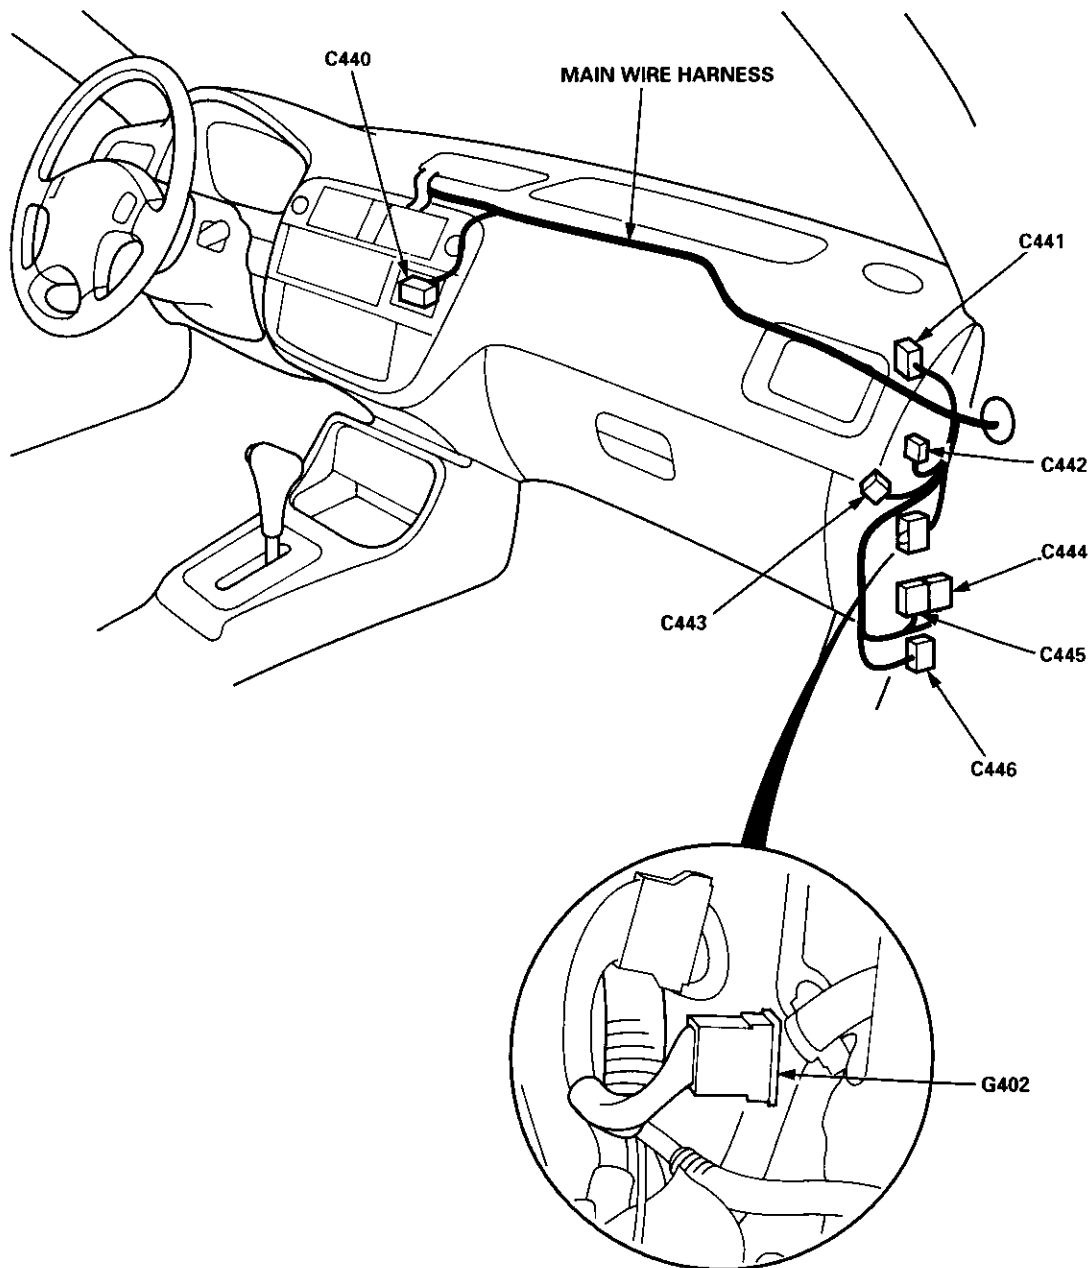




Dashboard Wire Harness

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C501	20	Behind dashboard lower panel	Under-dash fuse/relay box (C912)	
C502	24	Above under-dash fuse/relay box	Main wire harness (C411)	
C503	16	Above under-dash fuse/relay box	Floor wire harness (C553)	
C504	12	Above under-dash fuse/relay box	Main wire harness (C410)	A/T
C505	5	Left side of steering wheel	Cruise main switch	
C506	3	Left side of steering wheel	Dash lights brightness controller	
C507	20	Below gauges	Junction connector	
C508	5	Behind gauges	Gauge assembly	SRS
C509	5	Behind gauges	Gauge assembly	*1
C510	14	Behind gauges	Gauge assembly	A/T
C511	16	Behind gauges	Gauge assembly	
C512	13	Behind gauges	Gauge assembly	
C513	10	Right side of gauges	Hazard warning switch	
C514	5	Right side of gauges	Rear window defogger switch	
C515	16	Behind middle of dash	Audio unit (Keyless receiver circuit)	
C516	22	Behind middle of dash	Security control unit	Optional
C517	16	Behind middle of dash	Audio unit	
C518	5	Behind middle of dash	Security system	Optional
C519	2	Behind middle of dash	Cigarette lighter	
C520	5	Behind gauges	Gauge assembly	ABS
G501		Under middle of dash	Body ground, via dashboard wire harness	

*1: With shift-up indicator or cruise control system (96, 97 models)
 With cruise control system (98 model)

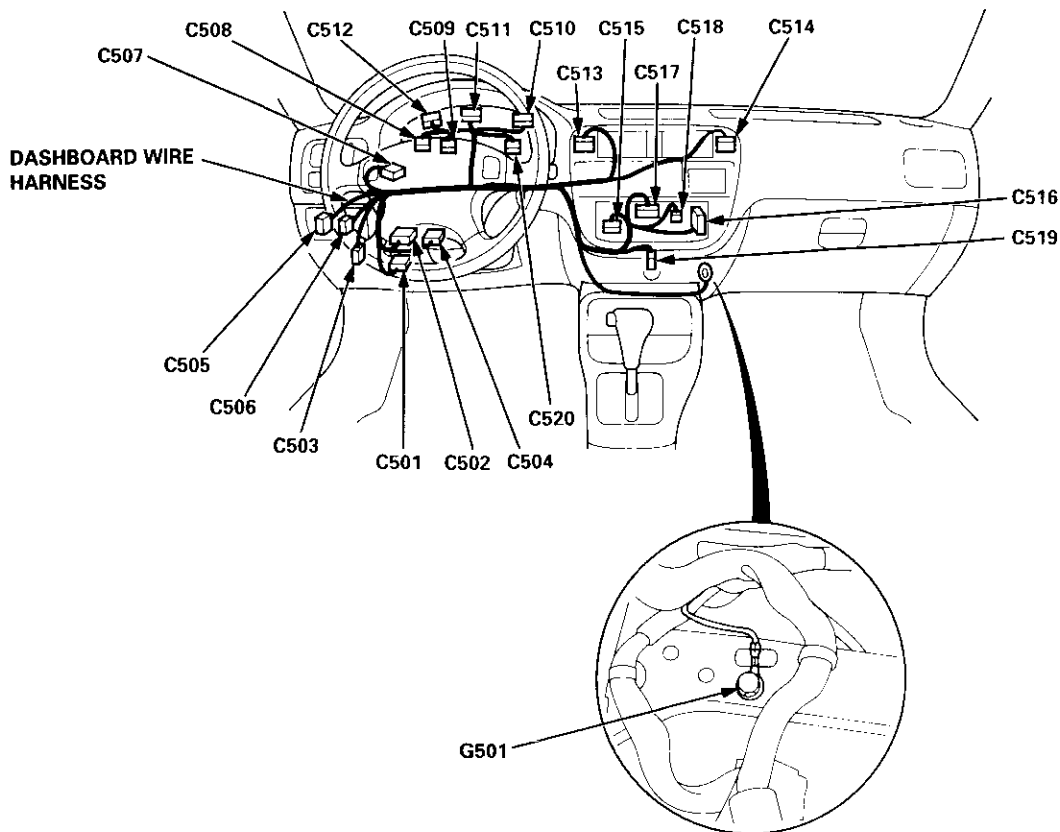

Connector Identification and Wire Harness Routing

Floor Wire Harness (Coupe/Hatchback)


Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C551	16	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C923)	
C552	8	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C921)	
C553	16	Above under-dash fuse/relay box	Dashboard wire harness (C503)	ABS
C554	4	Under left side of dash	Main wire harness (C402)	
C555	14	Above under-dash fuse/relay box	Main wire harness (C401)	*1
C556	25	Driver's door	Driver's door wire harness (C631)	*2
C556	2	Driver's door	Driver's door wire harness (C631)	*1
C557	25	Passenger's door	Passenger's door wire harness (C651)	*2
C557	2	Passenger's door	Passenger's door wire harness (C651)	
C558	1	Middle of floor	Parking brake switch	
C559	2	Left side of floor	Driver's seat belt switch	
C560	1	Left B-pillar	Passenger's door switch	ABS
C561	2	Inside of left rear wheel	Left rear ABS wheel sensor	
C562	14	Left C-pillar	Rear wire harness (C601)	
C563	2	Left C-pillar	Rear wire harness (C602)	
C564	3	Fuel tank	Fuel gauge sending unit	
C565	2	Fuel tank	Fuel pump	ABS
C566	2	Inside of right rear wheel	Right rear ABS wheel sensor	
C567	1	Left B-pillar	Driver's door switch	
C568	6	Fuel tank	Fuel tank pressure sensor sub-harness (C791)	*3
C569	10	Left side of dash	Power mirror switch	
G551		Left kick panel	Body ground, via floor wire harness	
G552		Left side of floor	Body ground, via floor wire harness	

*1: With power windows

*2: Without power windows

*3: 97 model: D16Y8 engine (Coupe)

98 model: D16Y8 engine (Coupe/Hatchback)

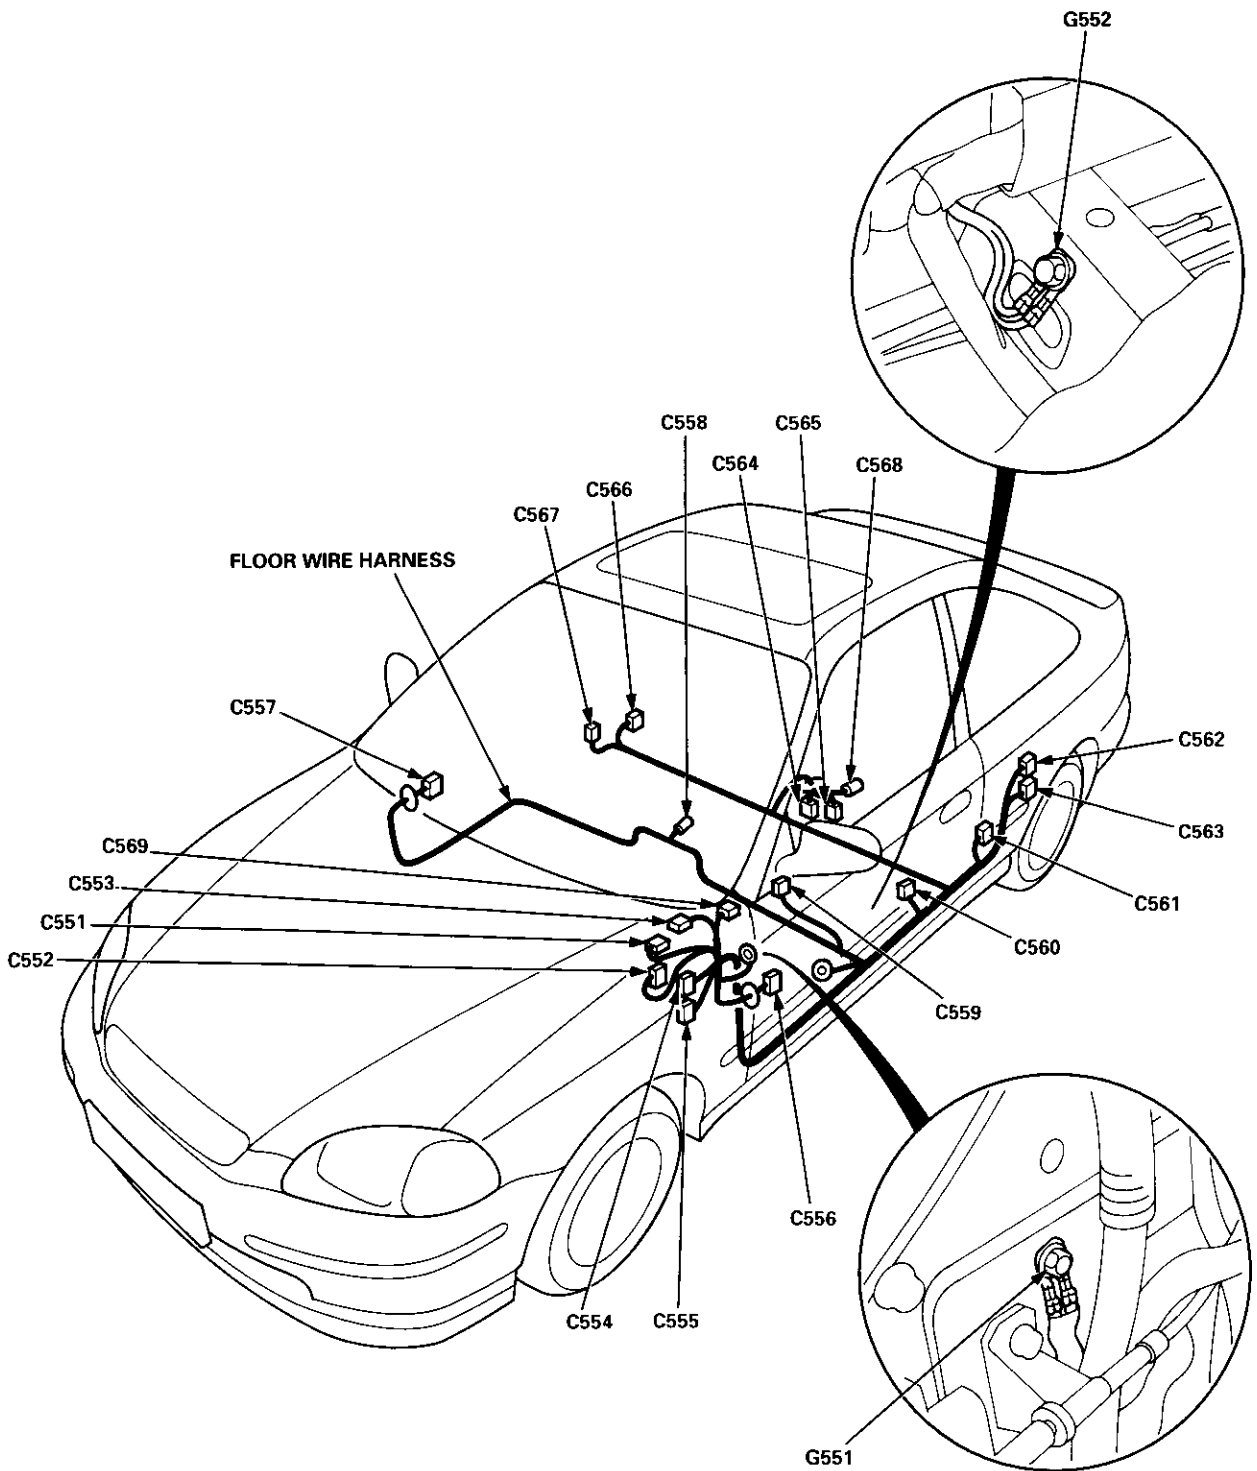

Connector Identification and Wire Harness Routing

Floor Wire Harness (Sedan): 96 model


Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C551	16	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C923)	
C552	8	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C921)	
C553	16	Above under-dash fuse/relay box	Dashboard wire harness (C503)	
C554	4	Under left side of dash	Main wire harness (C402)	ABS
C555	14	Above under-dash fuse/relay box	Main wire harness (C401)	
C556	25	Driver's door	Driver's door wire harness (C631)	*1
C556	2	Driver's door	Driver's door wire harness (C631)	*2
C557	25	Passenger's door	Front passenger's door wire harness (C651)	*1
C557	2	Passenger's door	Front passenger's door wire harness (C651)	*2
C558	1	Middle of floor	Parking brake switch	
C559	2	Left side of floor	Driver's seat belt switch	
C560	1	Right B-pillar	Front passenger's door switch	
C561	2	Inside of left rear wheel	Left rear ABS wheel sensor	ABS
C562	14	Left C-pillar	Rear wire harness (C601)	
C563	2	Left C-pillar	Rear wire harness (C602)	
C564	3	Fuel tank	Fuel gauge sending unit	
C565	2	Fuel tank	Fuel pump (FP)	
C566	2	Inside of right rear wheel	Right rear ABS wheel sensor	ABS
C567	1	Left B-pillar	Driver's door switch	
C569	10	Left side of steering wheel	Power mirror switch	
C570	6	Right B-pillar	Right rear door wire harness (C671)	
C571	6	Left B-pillar	Left rear door wire harness (C661)	
C572	1	Left quarter panel	Left rear door switch	
C573	1	Right quarter panel	Right rear door switch	
G551		Left kick panel	Body ground, via floor wire harness	
G552		Left side of floor	Body ground, via floor wire harness	

*1: With power windows

*2: Without power windows



96 model:

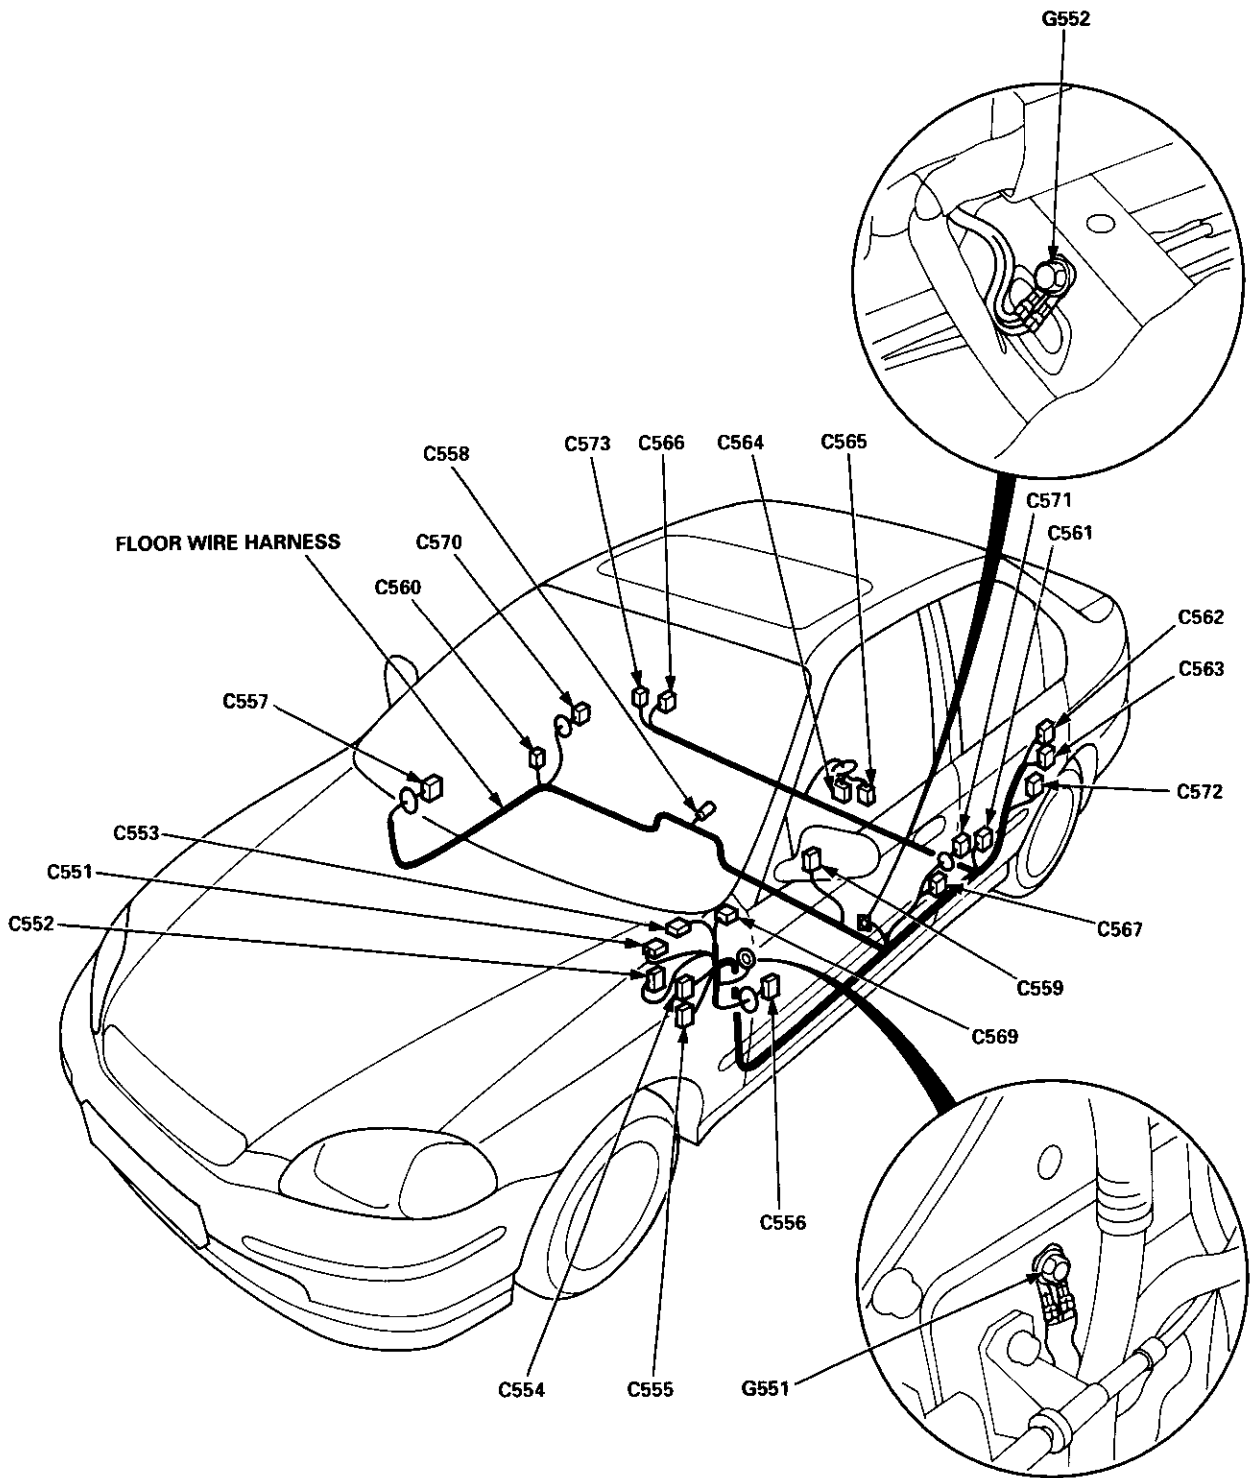


Connector Identification and Wire Harness Routing

Floor Wire Harness (Sedan): 97, 98 models


Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C551	16	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C923)	
C552	8	Behind under-dash fuse/relay box	Under-dash fuse/relay box (C921)	
C553	16	Above under-dash fuse/relay box	Dashboard wire harness (C503)	
C554	4	Under left side of dash	Main wire harness (C402)	ABS
C555	14	Above under-dash fuse/relay box	Main wire harness (C401)	
C556	25	Driver's door	Driver's door wire harness (C631)	*1
C556	2	Driver's door	Driver's door wire harness (C631)	*2
C557	25	Passenger's door	Front passenger's door wire harness (C651)	*1
C557	2	Passenger's door	Front passenger's door wire harness (C651)	*2
C558	1	Middle of floor	Parking brake switch	
C559	2	Left side of floor	Driver's seat belt switch	
C560	1	Right B-pillar	Front passenger's door switch	
C561	2	Inside of left rear wheel	Left rear ABS wheel sensor	ABS
C562	16	Left C-pillar	Rear wire harness (C601)	
C563	2	Left C-pillar	Rear wire harness (C602)	
C564	3	Fuel tank	Fuel gauge sending unit	
C565	2	Fuel tank	Fuel pump (FP)	
C566	2	Inside of right rear wheel	Right rear ABS wheel sensor	ABS
C567	1	Left B-pillar	Driver's door switch	
C569	10	Left side of steering wheel	Power mirror switch	
C570	6	Right B-pillar	Right rear door wire harness (C671)	
C571	6	Left B-pillar	Left rear door wire harness (C661)	
C572	1	Left quarter panel	Left rear door switch	
C573	1	Right quarter panel	Right rear door switch	
C574	6	Fuel tank	Fuel tank pressure sensor sub-harness (C791)	
G551		Left kick panel	Body ground, via floor wire harness	
G552		Left side of floor	Body ground, via floor wire harness	

*1: With power windows

*2: Without power windows




97, 98 models:

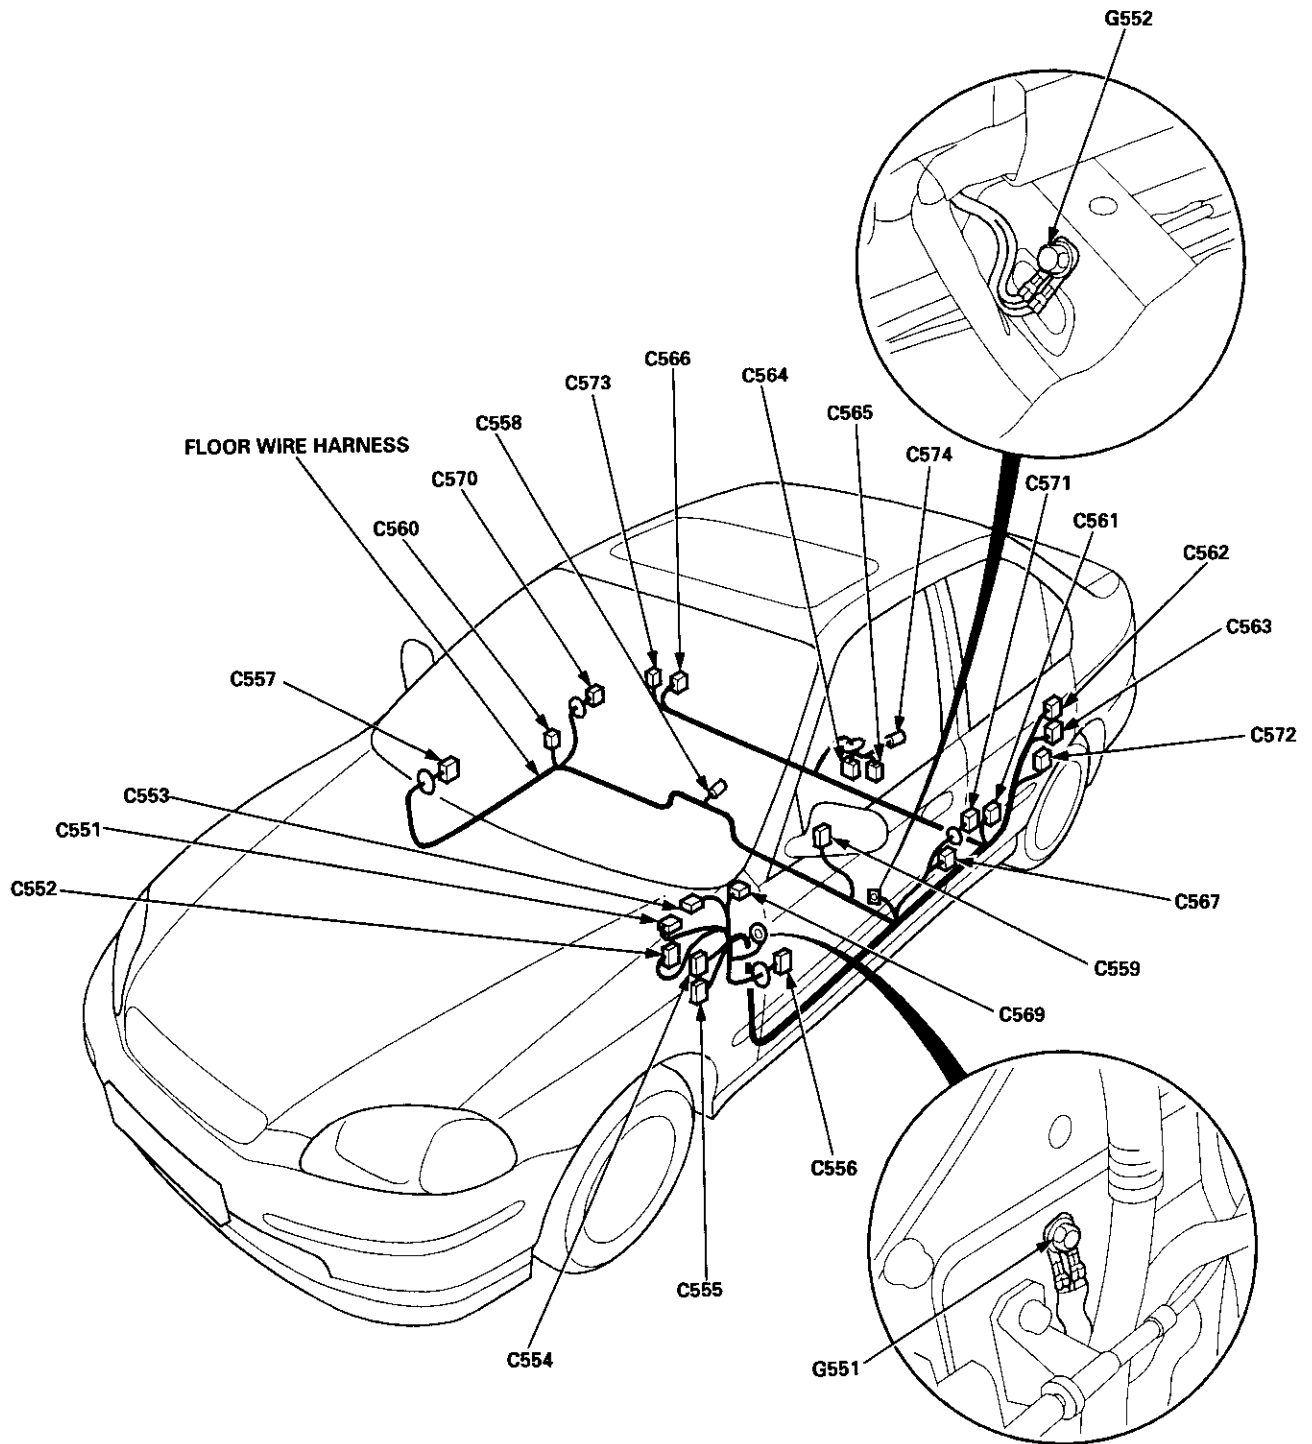

Connector Identification and Wire Harness Routing

Rear Wire Harness (Hatchback)


Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C601	14	Left quarter panel	Floor wire harness (C562)	Optional
C602	2	Left quarter panel	Floor wire harness (C563)	
C603	2	Left quarter panel	Left rear speaker	
C604	6	Left side of cargo area	Left outer taillight	Optional
C605	6	Right side of cargo area	Right outer taillight	
C606	2	Right quarter panel	Right rear speaker	
C607	6	Right quarter panel	Hatch wire harness (C761)	
C608	2	Right quarter panel	Hatch wire harness (C762)	
G601		Middle of cargo area	Body ground, via rear wire harness	

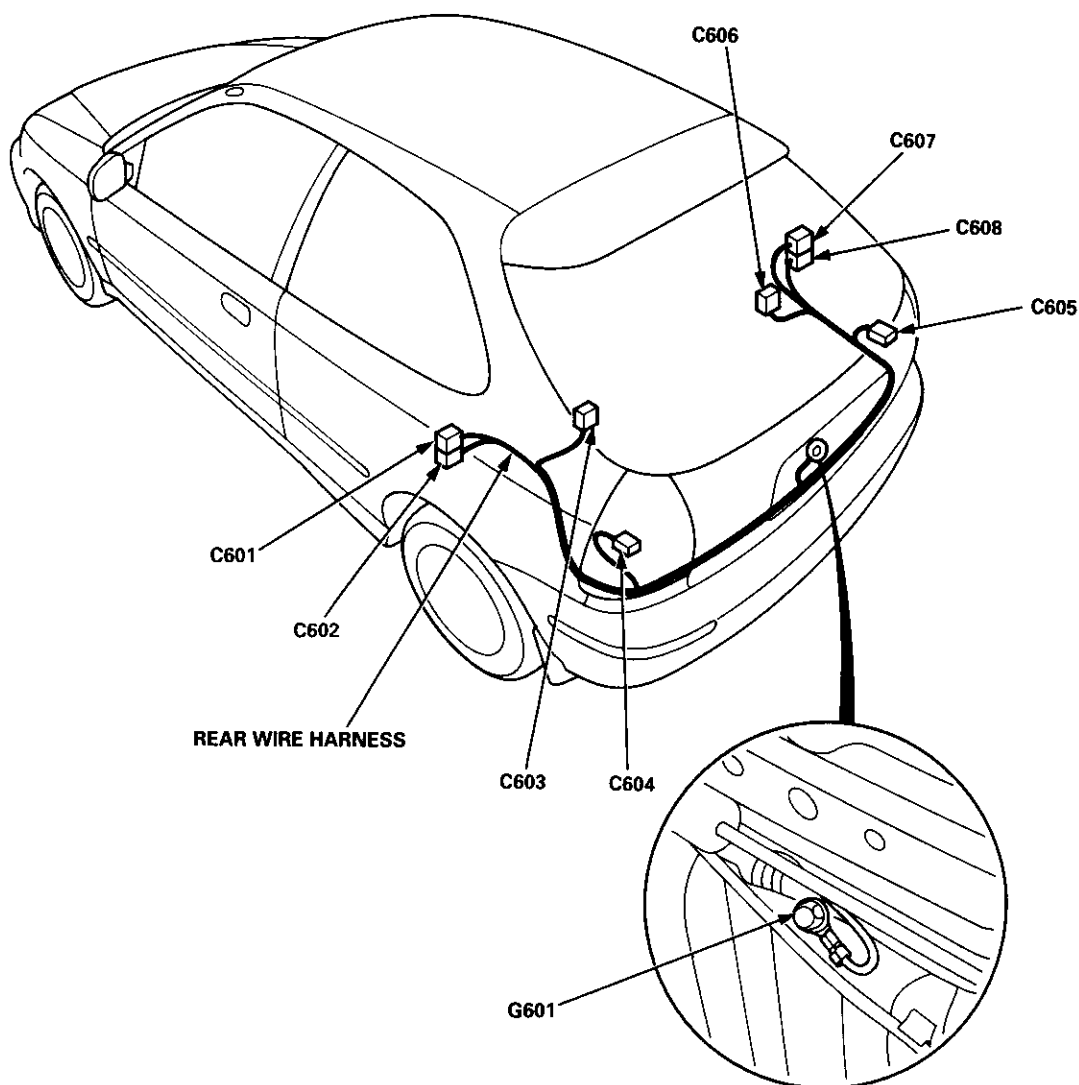



Rear Wire Harness (Coupe/Sedan)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C601	16	Left quarter panel	Floor wire harness (C562)	
C602	2	Left quarter panel	Floor wire harness (C563)	
C603	2	Left quarter panel	Left rear speaker	
C604	4	Left side of trunk	Left outer taillight	
C605	4	Right side of trunk	Right outer taillight	
C606	2	Right quarter panel	Right rear speaker	
C609	1	Left side of rear window	Rear window defogger (+)	
C610	2	Middle of rear shelf	High mount brake light	
C611	2	Middle of rear shelf	Trunk light	
C612	1	Right side of rear window	Rear window defogger (-)	
C613	4	Left side of trunk	Left inner taillight	
C614	2	Middle of trunk	Left license plate light	
C615	2	Middle of trunk	Trunk latch switch	
C616	2	Middle of trunk	Right license plate light	
C617	4	Right side of trunk	Right inner taillight	
G601		Middle of trunk	Body ground, via rear wire harness	

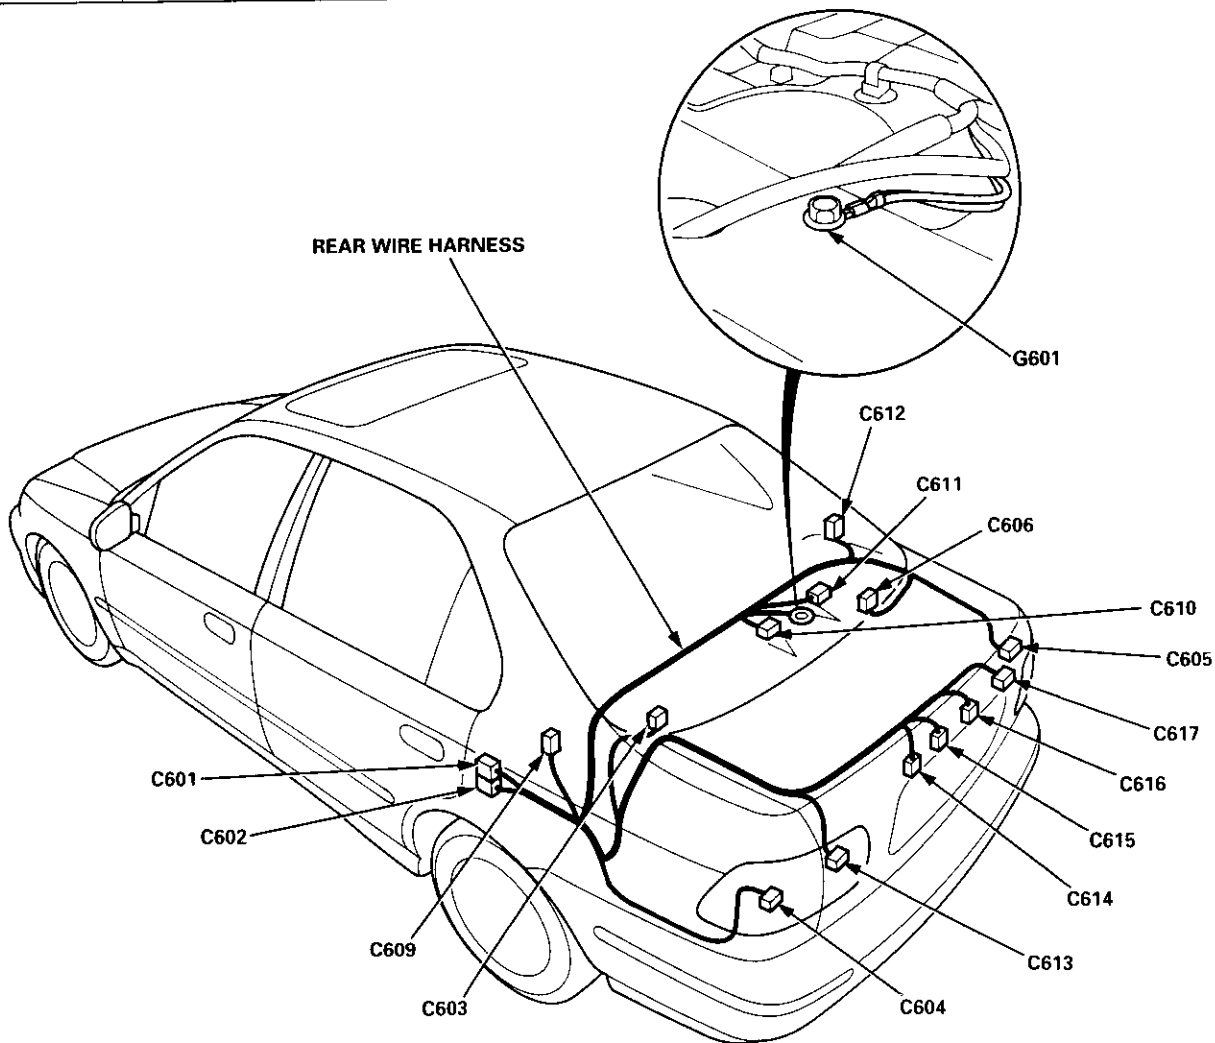

Connector Identification and Wire Harness Routing

Driver's Door Wire Harness (Coupe/Hatchback)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C631	25	Driver's door	Floor wire harness (C556)	*1
C631	2	Driver's door	Floor wire harness (C556)	*2
C632	2	Driver's door	Left front door speaker	
C633	4	Driver's door	Driver's power window motor	Coupe
C634	4	Driver's door	Driver's door lock actuator	Coupe
C635	2	Driver's door	Tweeter	Coupe
C636	12	Driver's door	Power window master switch	Coupe
C638	3	Driver's door	Driver's door lock switch	Coupe
C639	8	Inside of left power mirror	Left power mirror	Coupe
C640	12	Driver's door	Power door lock control unit	Coupe

*1: With power windows



*2: Without power windows

Passenger's Door Wire Harness (Coupe/Hatchback)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C651	25	Passenger's door	Floor wire harness (C557)	*1
C651	2	Passenger's door	Floor wire harness (C557)	*2
C652	2	Passenger's door	Right front door speaker	
C653	2	Passenger's door	Front passenger's power window motor	Coupe
C654	2	Passenger's door	Front passenger's door lock actuator	Coupe
C655	5	Passenger's door	Front passenger's power window switch	Coupe
C656	8	Inside of right power mirror	Right power mirror	Coupe
C657	2	Passenger's door	Tweeter	Coupe

*1: With power windows

*2: Without power windows

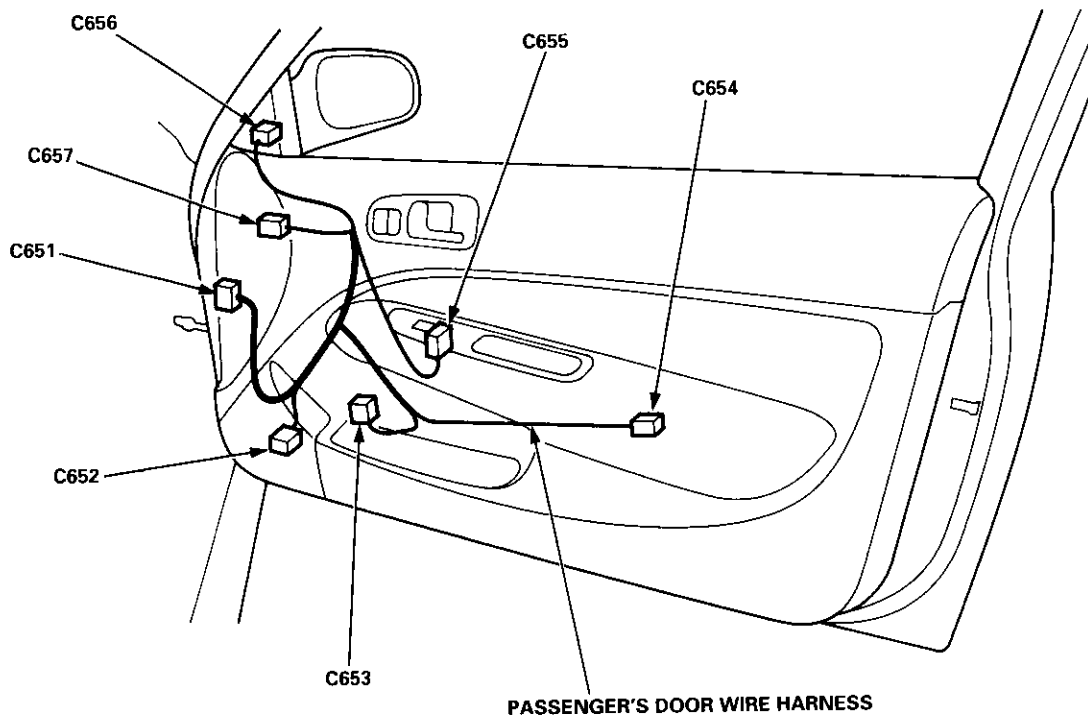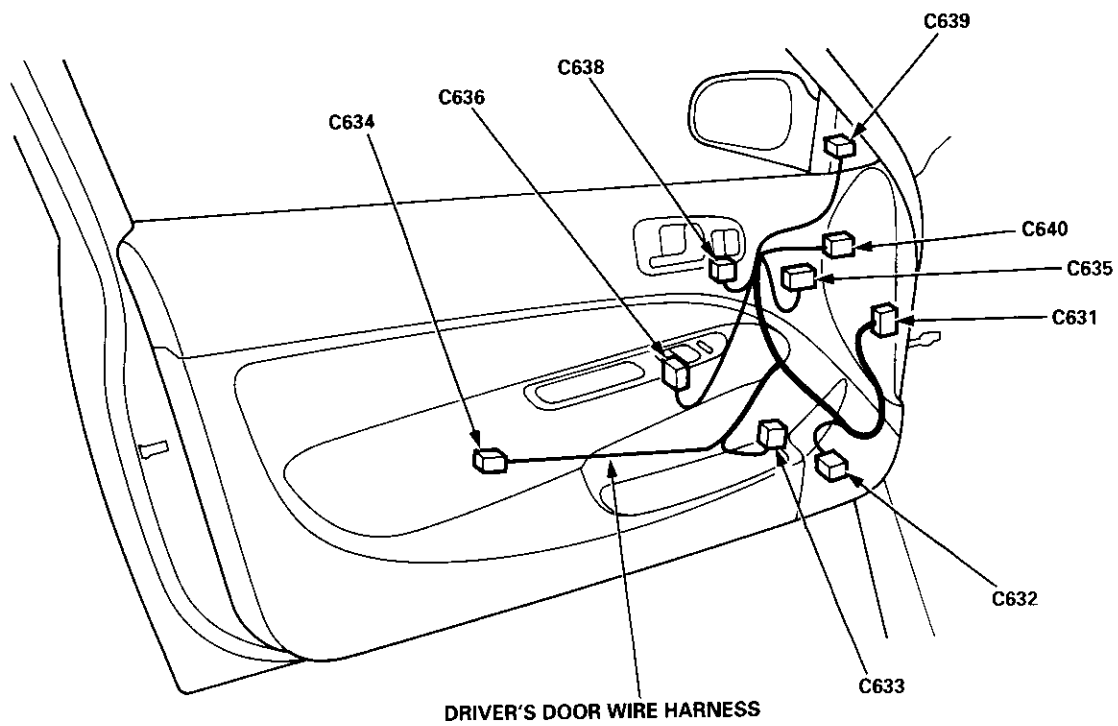

Connector Identification and Wire Harness Routing

Driver's Door Wire Harness (Sedan)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C631	25	Driver's door	Floor wire harness (C556)	*1
C631	2	Driver's door	Floor wire harness (C556)	*2
C632	2	Driver's door	Left front door speaker	
C633	4	Driver's door	Driver's power window motor	
C634	4	Driver's door	Driver's door lock actuator	
C636	16	Driver's door	Power window master switch	
C637	1	Driver's door	Power window master switch	
C638	3	Driver's door	Driver's door lock switch	
C639	8	Inside of left power mirror	Left power mirror	
C640	12	Driver's door	Power door lock control unit	

*1: With power windows



*2: Without power windows

Front Passenger's Door Wire Harness (Sedan)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C651	25	Passenger's door	Floor wire harness (C557)	*1
C651	2	Passenger's door	Floor wire harness (C557)	*2
C652	2	Passenger's door	Right front door speaker	
C653	2	Passenger's door	Front passenger's power window motor	
C654	2	Passenger's door	Front passenger's door lock actuator	
C655	5	Passenger's door	Front passenger's power window switch	
C656	8	Inside of right power mirror	Right power mirror	

*1: With power windows

*2: Without power windows

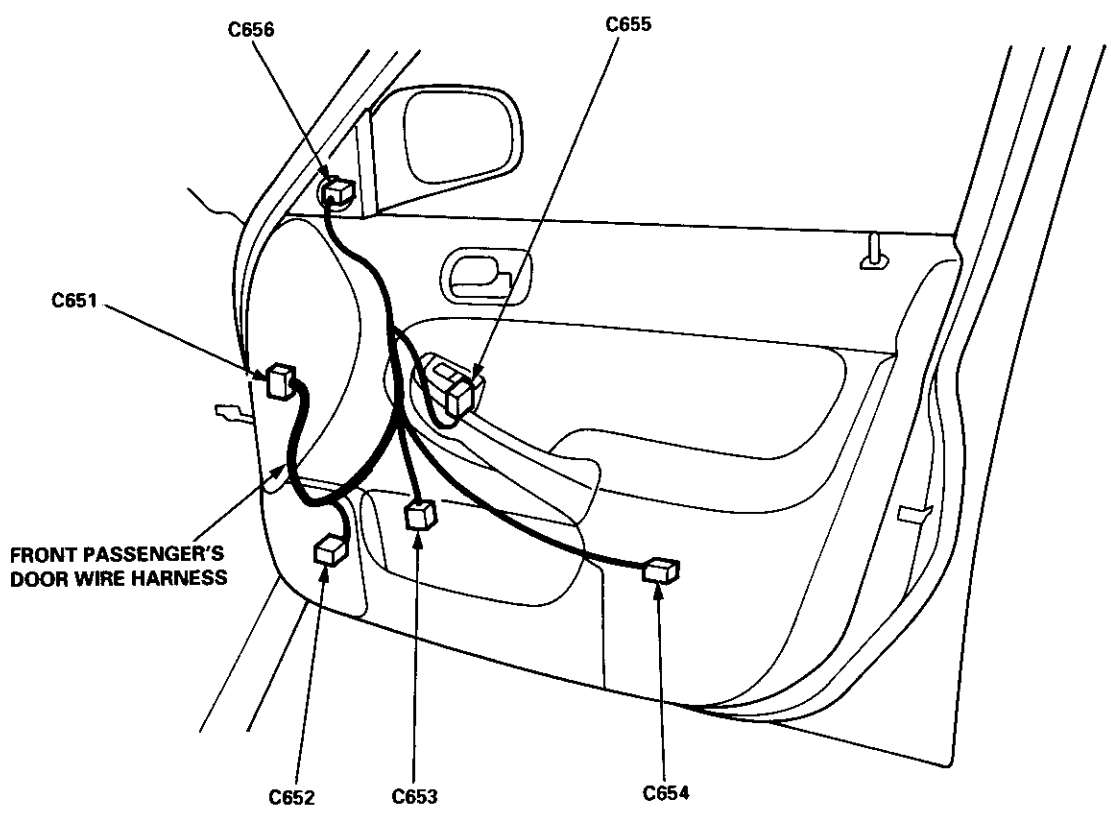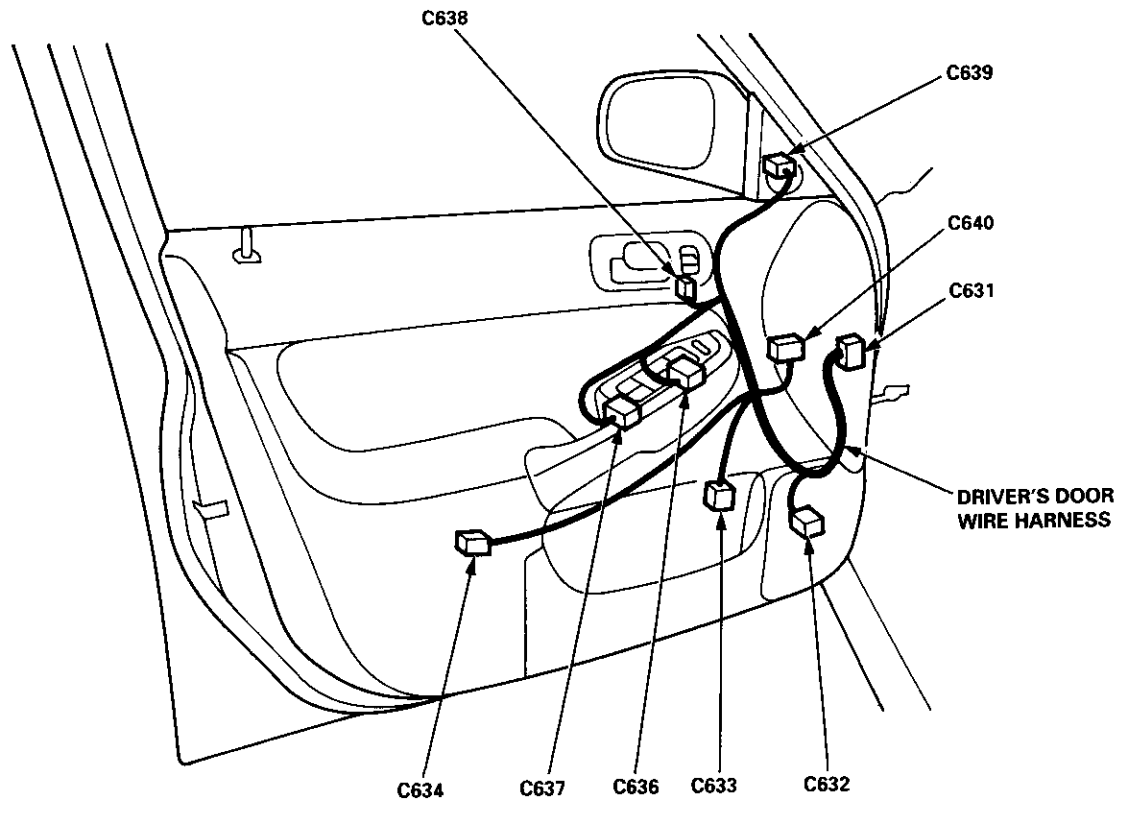

Connector Identification and Wire Harness Routing


Left Rear Door Wire Harness (Sedan)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C661	6	Left B-pillar	Floor wire harness (C571)	
C662	2	Left rear door	Left rear power window motor	
C663	5	Left rear door	Left rear power window switch	
C664	2	Left rear door	Left rear door lock actuator	


Right Rear Door Wire Harness (Sedan)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C671	6	Right B-pillar	Floor wire harness (C570)	
C672	2	Right rear door	Right rear power window motor	
C673	5	Right rear door	Right rear power window switch	
C674	2	Right rear door	Right rear door lock actuator	

Left Rear Door:

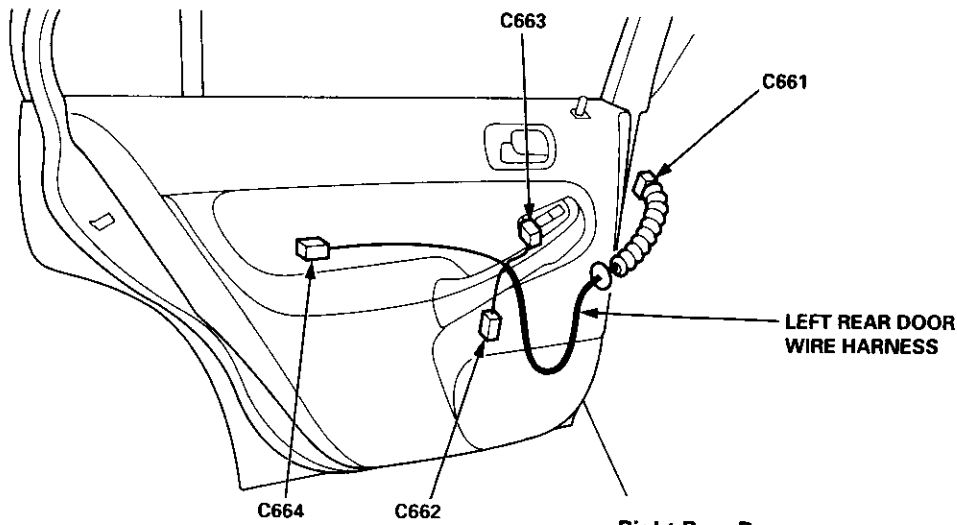

Right Rear Door:

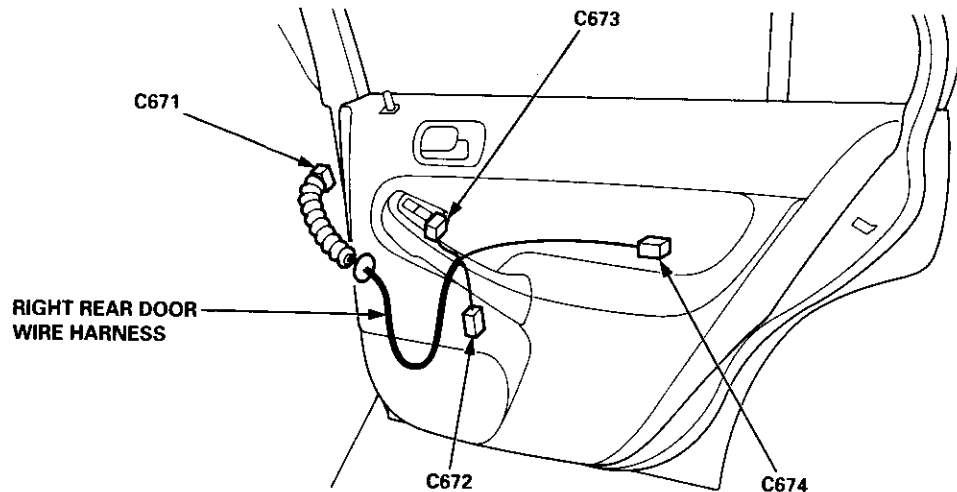




Heater Sub-harness A

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C721	16	Under left side of dash	Main wire harness (C437)	
C722	7	Behind glove box	Mode control motor	
C723	20	Behind glove box	Heater sub-harness B (C741)	
C724	3	Behind glove box	A/C thermostat	
C725	2	Behind glove box	Blower motor	
C726	4	Behind glove box	Blower resistor	
C727	4	Behind glove box	Recirculation control motor	

Heater Sub-harness B

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C741	20	Behind glove box	Heater sub-harness A (C723)	
C742	6	Behind middle of dash	Heater fan switch	
C743	14	Behind middle of dash	Heater control panel	

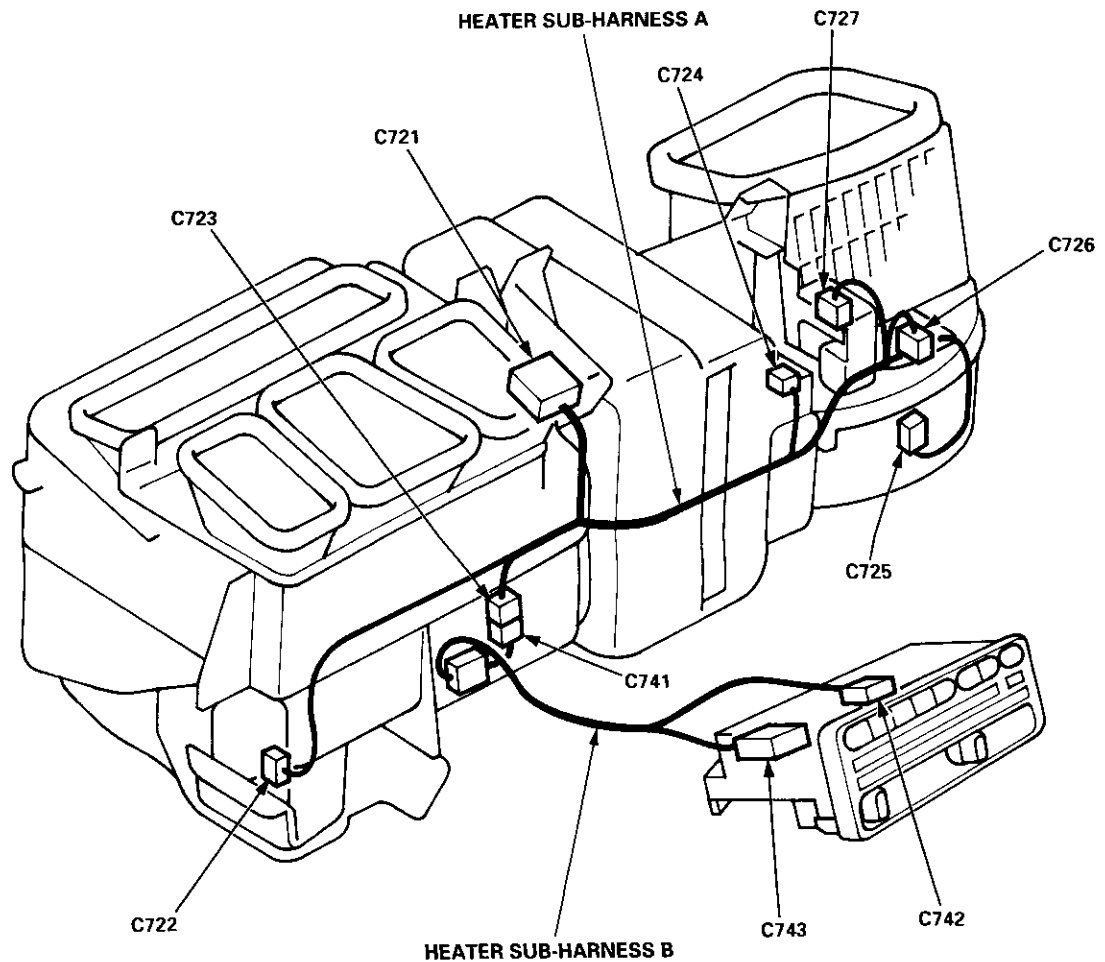

Connector Identification and Wire Harness Routing

Hatch Wire Harness (Hatchback)


Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C761	6	Right quarter panel	Rear wire harness (C607)	
C762	2	Right quarter panel	Rear wire harness (C608)	
C763	2	Rear of roof	High mount brake light	
C764	1	Right side of tailgate	Rear window defogger (+)	
C765	2	Middle of tailgate	Right license light	
C766	2	Middle of tailgate	Left license light	
C767	4	Middle of tailgate	Rear window wiper motor	
C768	2	Middle of tailgate	Tailgate latch switch	
G761		Middle of tailgate	Body ground, via tailgate wire harness	

Rear Window Defogger Ground Wire (Hatchback)


Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C771	1	Left side of tailgate	Rear window defogger (-)	
G771		Left side of tailgate	Body ground, via rear window defogger ground wire	



96, 97 models:

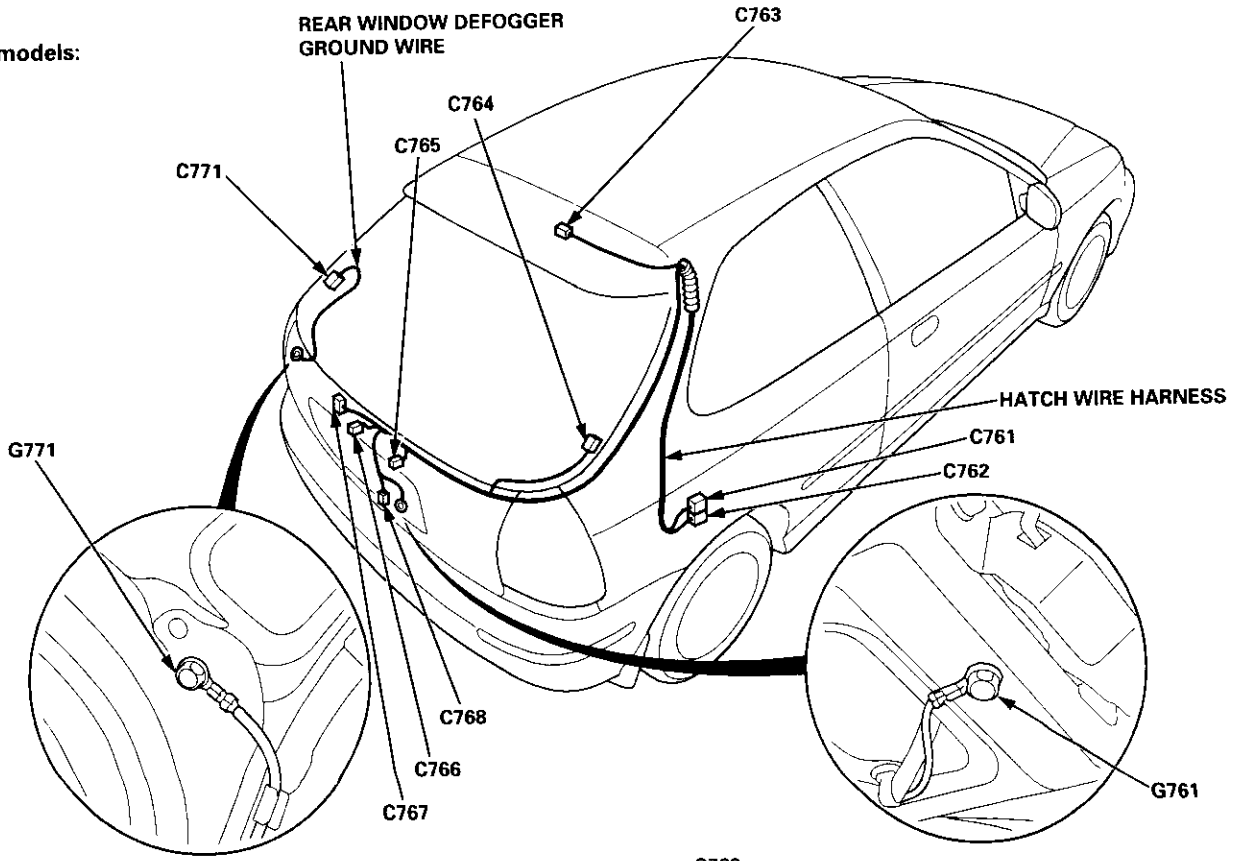

98 model:

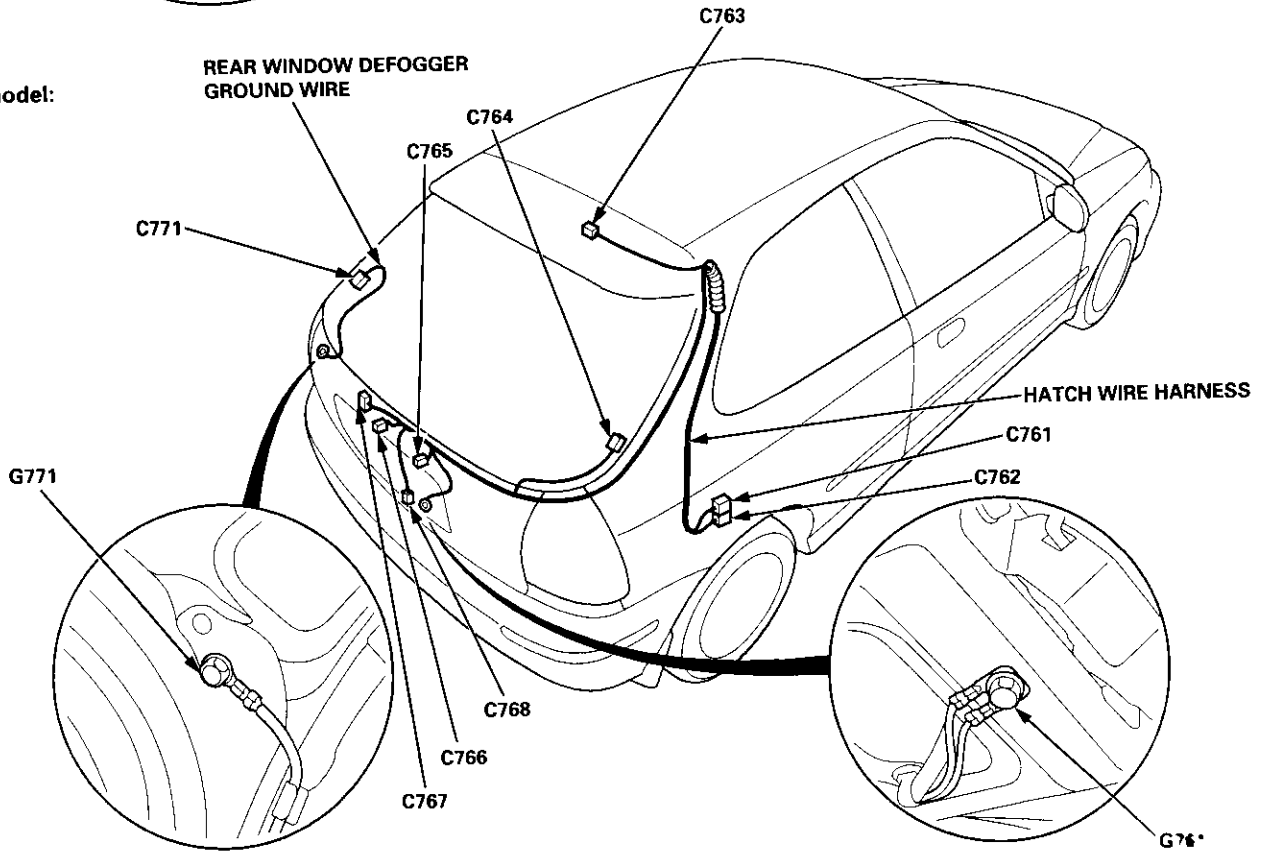

Connector Identification and Wire Harness Routing

Roof Wire Harness (Coupe/Hatchback)



Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C701	2	Under left side of dash	Main wire harness (C407)	
C702	2	Center of roof	Ceiling light	

Roof Wire Harness (Sedan)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C701	2	Under left side of dash	Main wire harness (C407)	
C702	1	Center of roof	Ceiling light (Power)	
C703	1	Center of roof	Ceiling light (Ground)	

Moonroof Wire Harness (Coupe/Sedan)

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C711	2	Under left side of dash	Main wire harness (C407)	Optional
C712	3	Behind dashboard lower panel	Under-dash fuse/relay box (C910)	
C713	6	Left side of dashboard bracket	Moonroof open relay	
C714	6	Left side of dashboard bracket	Moonroof close relay	
C715	4	Left side of steering wheel	Moonroof switch	
C716	3	Center of roof	Ceiling light	
C717	2	Rear of roof	Moonroof motor	
C718	4	Rear of roof	Moonroof motor (Tilt switch)	
C719	1	Front of roof	Spot light	

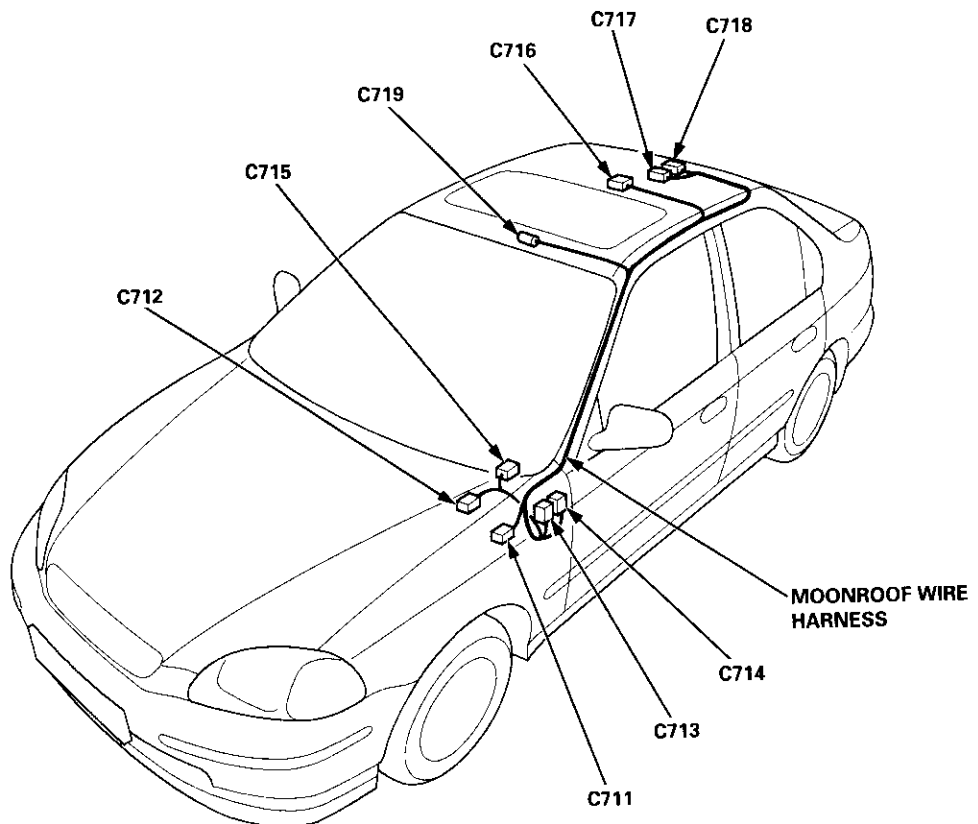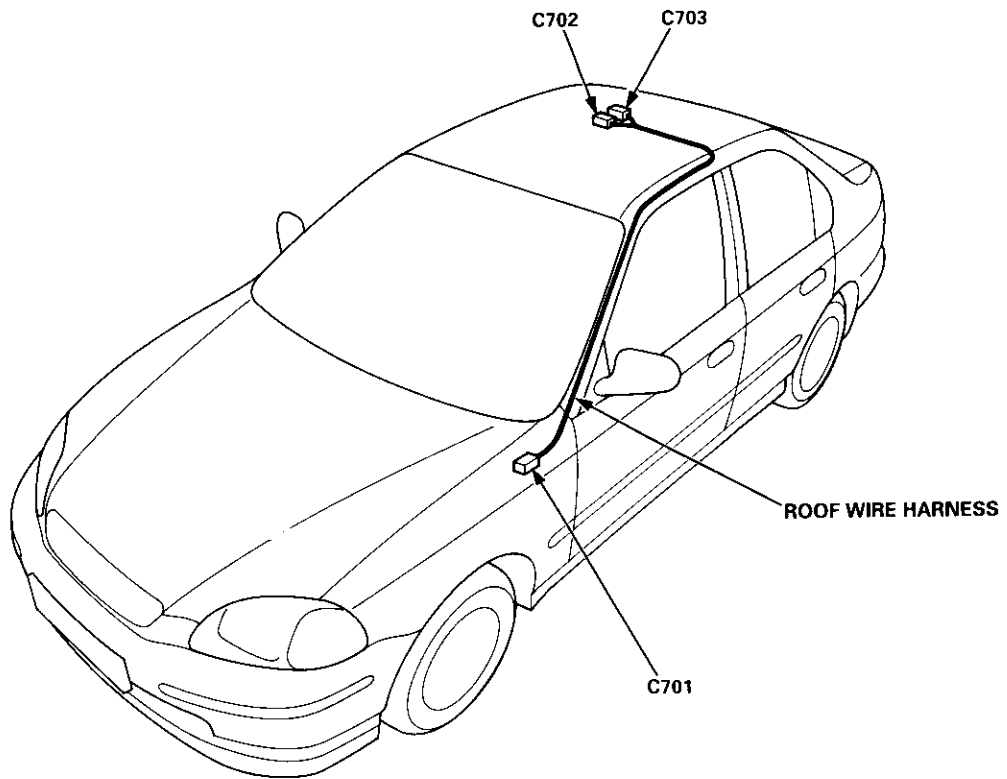



Connector Identification and Wire Harness Routing

Rear Heated Oxygen Sensor Sub-harness

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C781	4	Under middle of dash	Main wire harness (C432) Secondary heated oxygen sensor (Secondary HO2S)	
C782	4	Under middle of dash		

Fuel Tank Pressure Sensor Sub-harness


Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C791	6	Middle of floor	Floor wire harness (C568: Coupe/ Hatchback, C574: Sedan) Fuel tank pressure sensor EVAP two way valve	
C792	3	Left side of fuel tank		
C793	2	Left side of fuel tank		

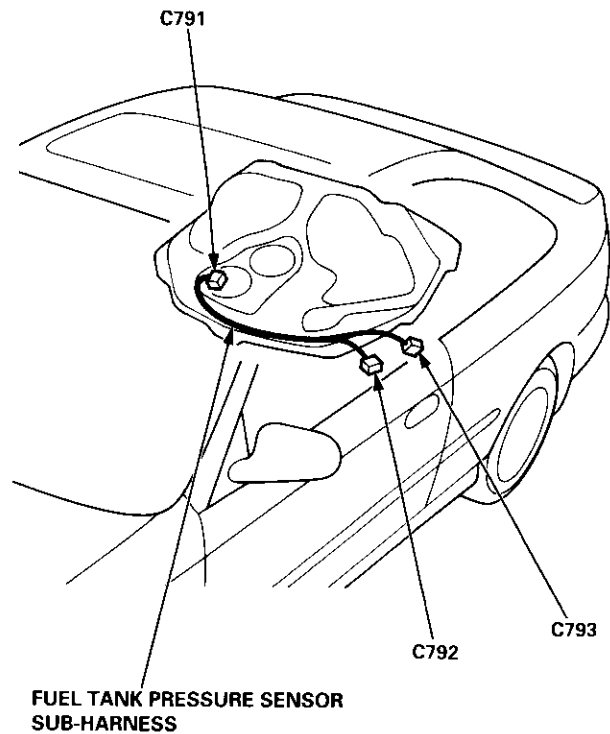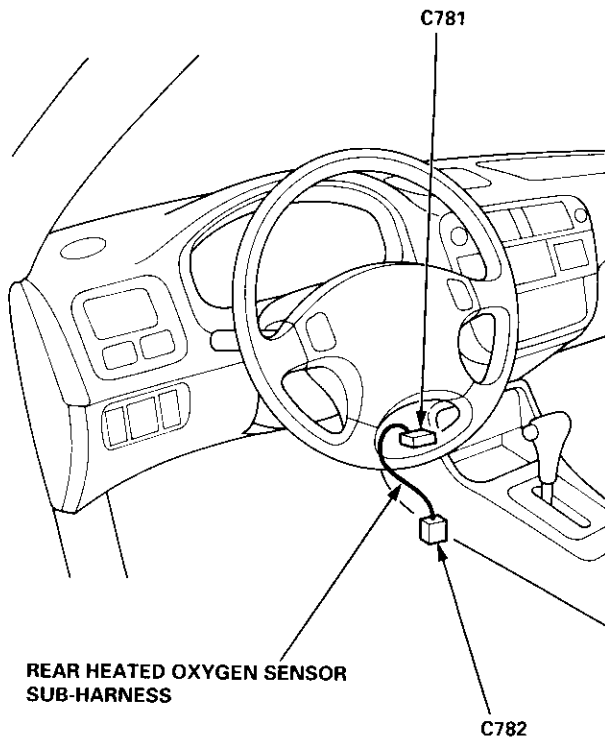




SRS Main Harness

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C801	2	Under left side of dash	Under-dash fuse/relay box (C911)	USA Canada
C802	3	Above under-dash fuse/relay box	Main wire harness (C412)	
C803	2	Right side of under-dash fuse/relay box	Memory erase signal (MES) connector	
C804	2	Under left side of dash	Cable reel	
C805	2	Under right side of dash	Passenger's airbag assembly	
C806	2	Middle of floor	Dummy resistor connector	
C807	18	Middle of floor	SRS unit	
G801		Middle of floor	Body ground, via SRS main harness	

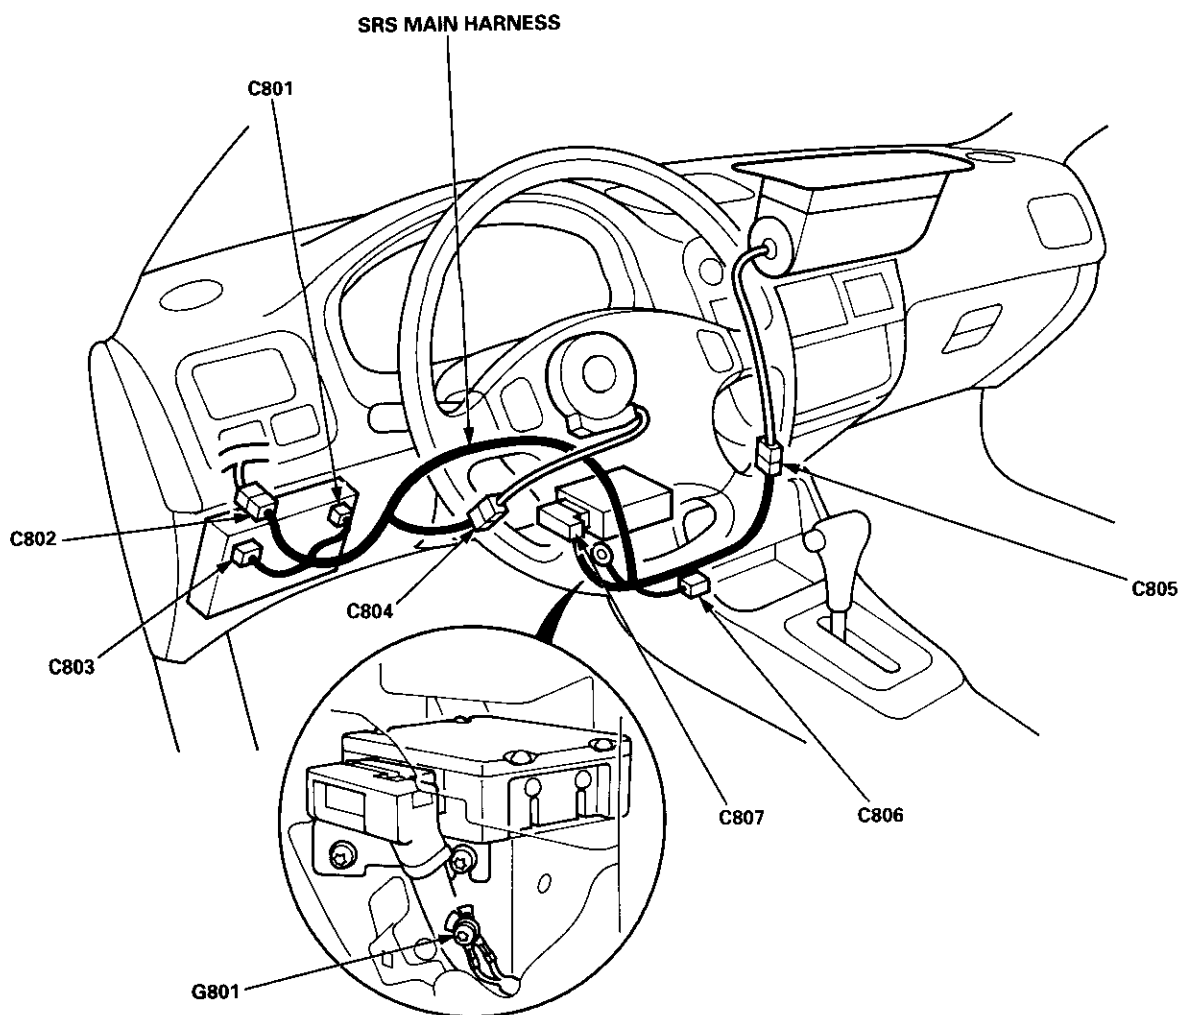


Fuses

Under-hood Fuse/Relay Box

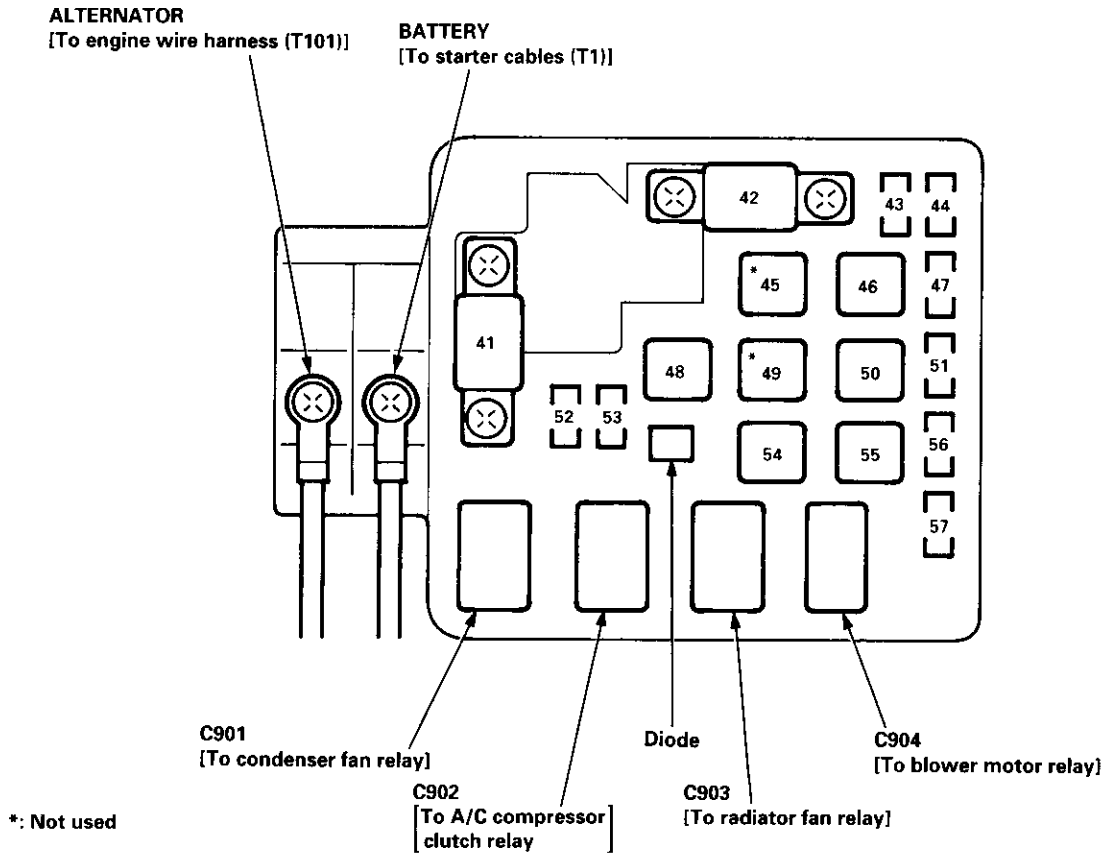

NOTE: View from the backside of the under-hood fuse/relay box.

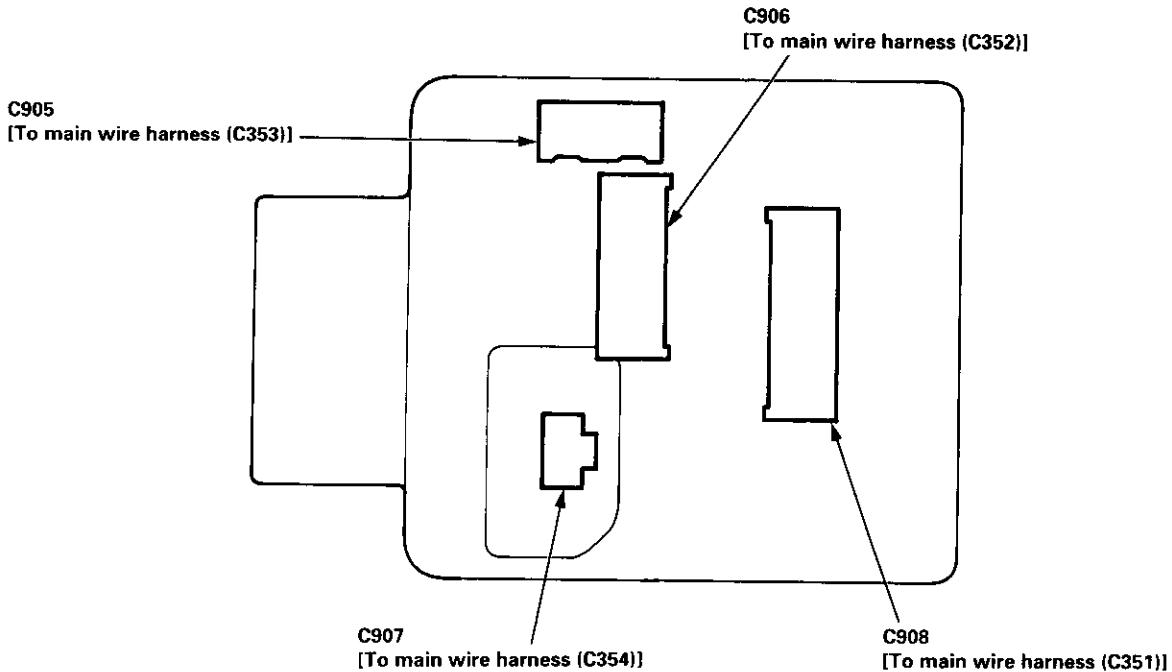





Fuse Number	Amps	Wire Color	Component(s) or Circuit(s) Protected
41	80 A	—	Power distribution
42	40 A	WHT/BLK	To ignition switch (BAT)
43	7.5 A	WHT/RED	Ceiling light, data link connector, trunk light
44	15 A	WHT/BLK	PGM-FI main relay
45	—	—	Not used
46	40 A	WHT/BLU	Power window motors (via power window relay)
47	7.5 A	WHT/BLU	Audio unit, clock, TCM (CVT), ECM/PCM (VBU)
48	30 A	WHT	No. 33 (7.5 A) fuse, To combination light switch (headlight)
49	—	—	Not used
50	30 A	WHT/GRN	Rear window defogger (via rear window defogger relay)
51	20 A	WHT/GRN	Power door lock control unit, moonroof motor
52	15 A	WHT/GRN	Horn system, brake lights, brake signal
53	10 A	WHT/BLK	Hazard warning light, turn signal/hazard relay
54	40 A	WHT/RED	Option (+B)
55	40 A	BLU/WHT	Blower motor (via blower motor relay)
56	20 A	WHT	Condenser fan motor (via condenser fan relay)
		RED	A/C compressor clutch (via A/C compressor clutch relay)
57	20 A	BLK/RED	Radiator fan motor (via radiator fan relay)

Fuses

Under-dash Fuse/Relay Box

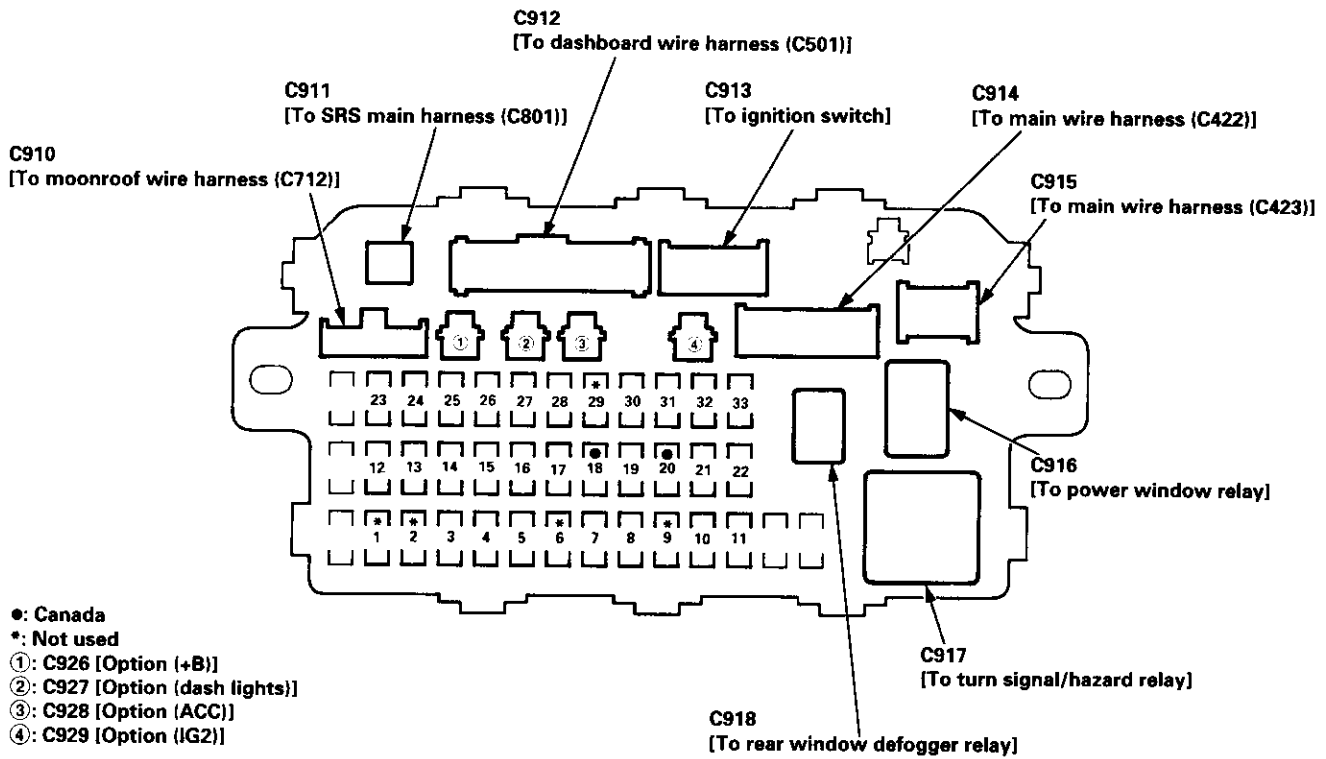

NOTE: View from the backside of the under-dash fuse/relay box.

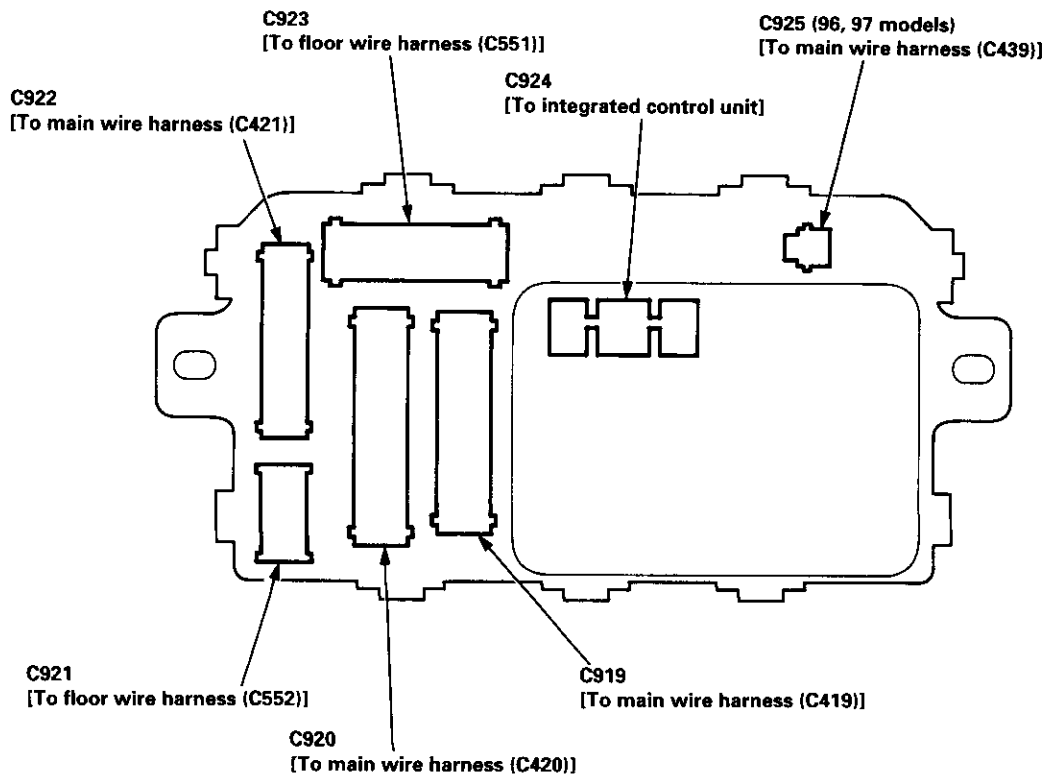




Fuse Number	Amps	Wire Color	Component(s) or Circuit(s) Protected
1	—	—	Not used
2	—	—	Not used
3	10 A	GRN	Rear window wiper motor, rear window washer motor
4	10 A	RED/BLU	Right headlight (high beam)
5	10 A	RED/GRN	Left headlight (high beam), high beam indicator light
6	—	—	Not used
7	20 A	RED/WHT	Left rear power window motor
8	20 A	YEL/BLK	Right rear power window motor
9	—	—	Not used (96, 97 models)
	15 A	RED	Distributor (ignition control module) (98 model)
10	20 A	GRN/BLK	Front passenger's power window motor
11	20 A	BLU/BLK	Driver's power window motor
12	7.5 A	YEL/BLK	Turn signal/hazard relay (via turn signal/hazard switch)
13	15 A	YEL/GRN	PGM-FI main relay
		GRY or BLK/YEL	SRS unit (VA)
14	7.5 A	BLK/YEL	Cruise control system, audio unit
15	7.5 A	BLK/WHT	Alternator, VSS, ELD unit (USA), EVAP purge control solenoid valve, oxygen sensors, TCM (CVT)
16	7.5 A	BLK/BLU	ABS pump motor, rear window defogger
17	7.5 A	BLK/YEL	A/C system, power mirror, option (IG2)
18	7.5 A	YEL/BLK	Daytime running lights relay (Canada)
19	7.5 A	YEL/RED	Back-up lights
20	10 A	BLK/WHT	Daytime running lights control unit (Canada)
21	10 A	RED/WHT	Right headlight (low beam)
22	10 A	RED/YEL	Left headlight (low beam)
23	10 A	GRY or PNK	SRS unit (VB)
24	7.5 A	GRN/ORN	Moonroof relays
25	7.5 A	YEL	Gauge and indicator lights, interlock control unit
26	20 A	GRN/BLK	Windshield wiper motor, windshield washer motor, integrated control unit (Canada)
27	15 A	YEL/GRN	Accessory socket (ACC)
28	10A/15A*	YEL/RED	Audio unit, option (ACC)
29	—	—	Not used
30	7.5 A	RED/BLK	Dash lights, option (dash lights)
31	7.5 A	BLU/WHT	ECM/PCM, PGM-FI main relay, integrated control unit
32	7.5 A	RED/BLK	Front parking lights, taillights, license plate lights
33	7.5 A	WHT/GRN	Interlock control unit, key interlock solenoid

*('98 Model Only)

Fuses

Under-hood ABS Fuse/Relay Box

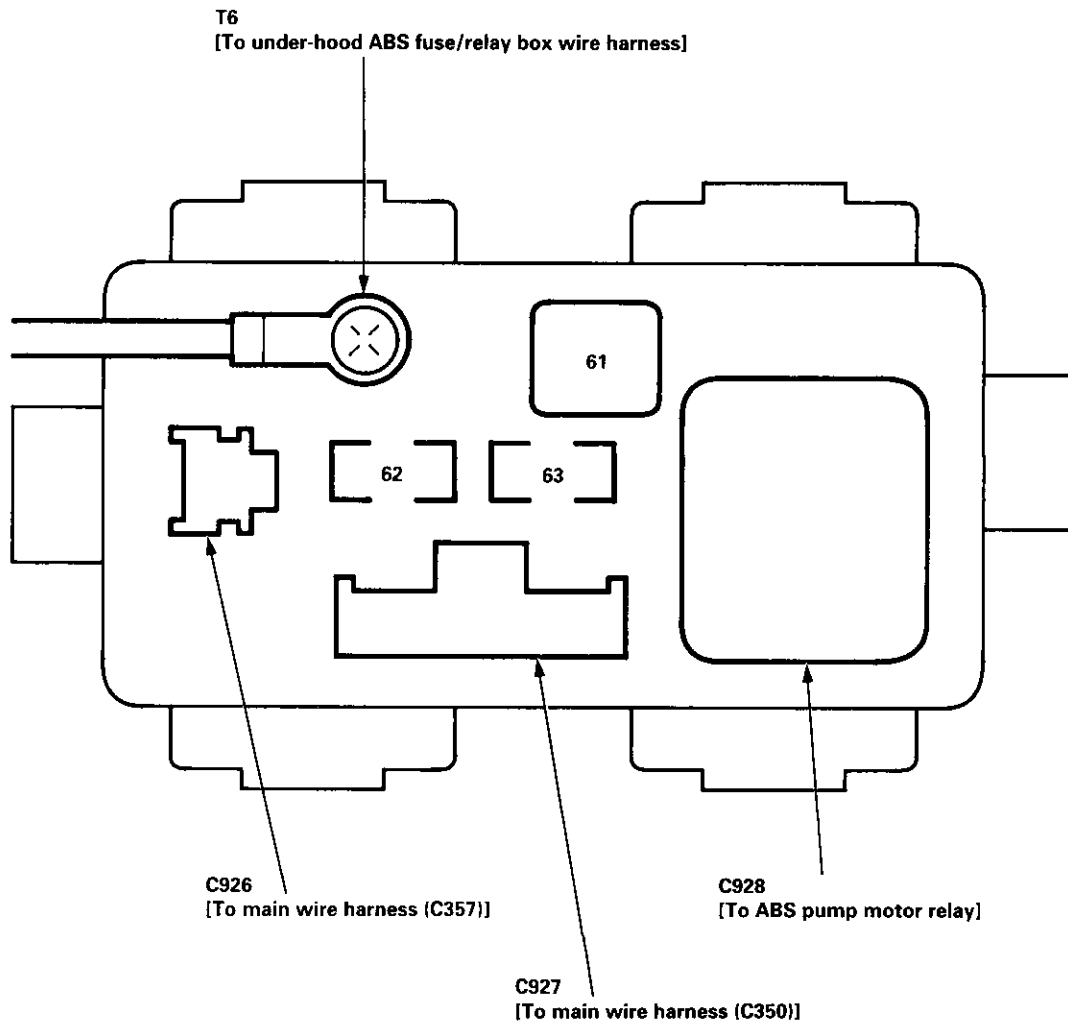


Fuse Number	Amps	Wire Color	Component(s) or Circuit(s) Protected
61	40 A	WHT	ABS pump motor (via ABS pump motor relay)
62	7.5 A	BRN/YEL	ABS control unit (motor check)
63	20 A	WHT/GRN	ABS control unit (+B1)

Power Distribution




Circuit Identification

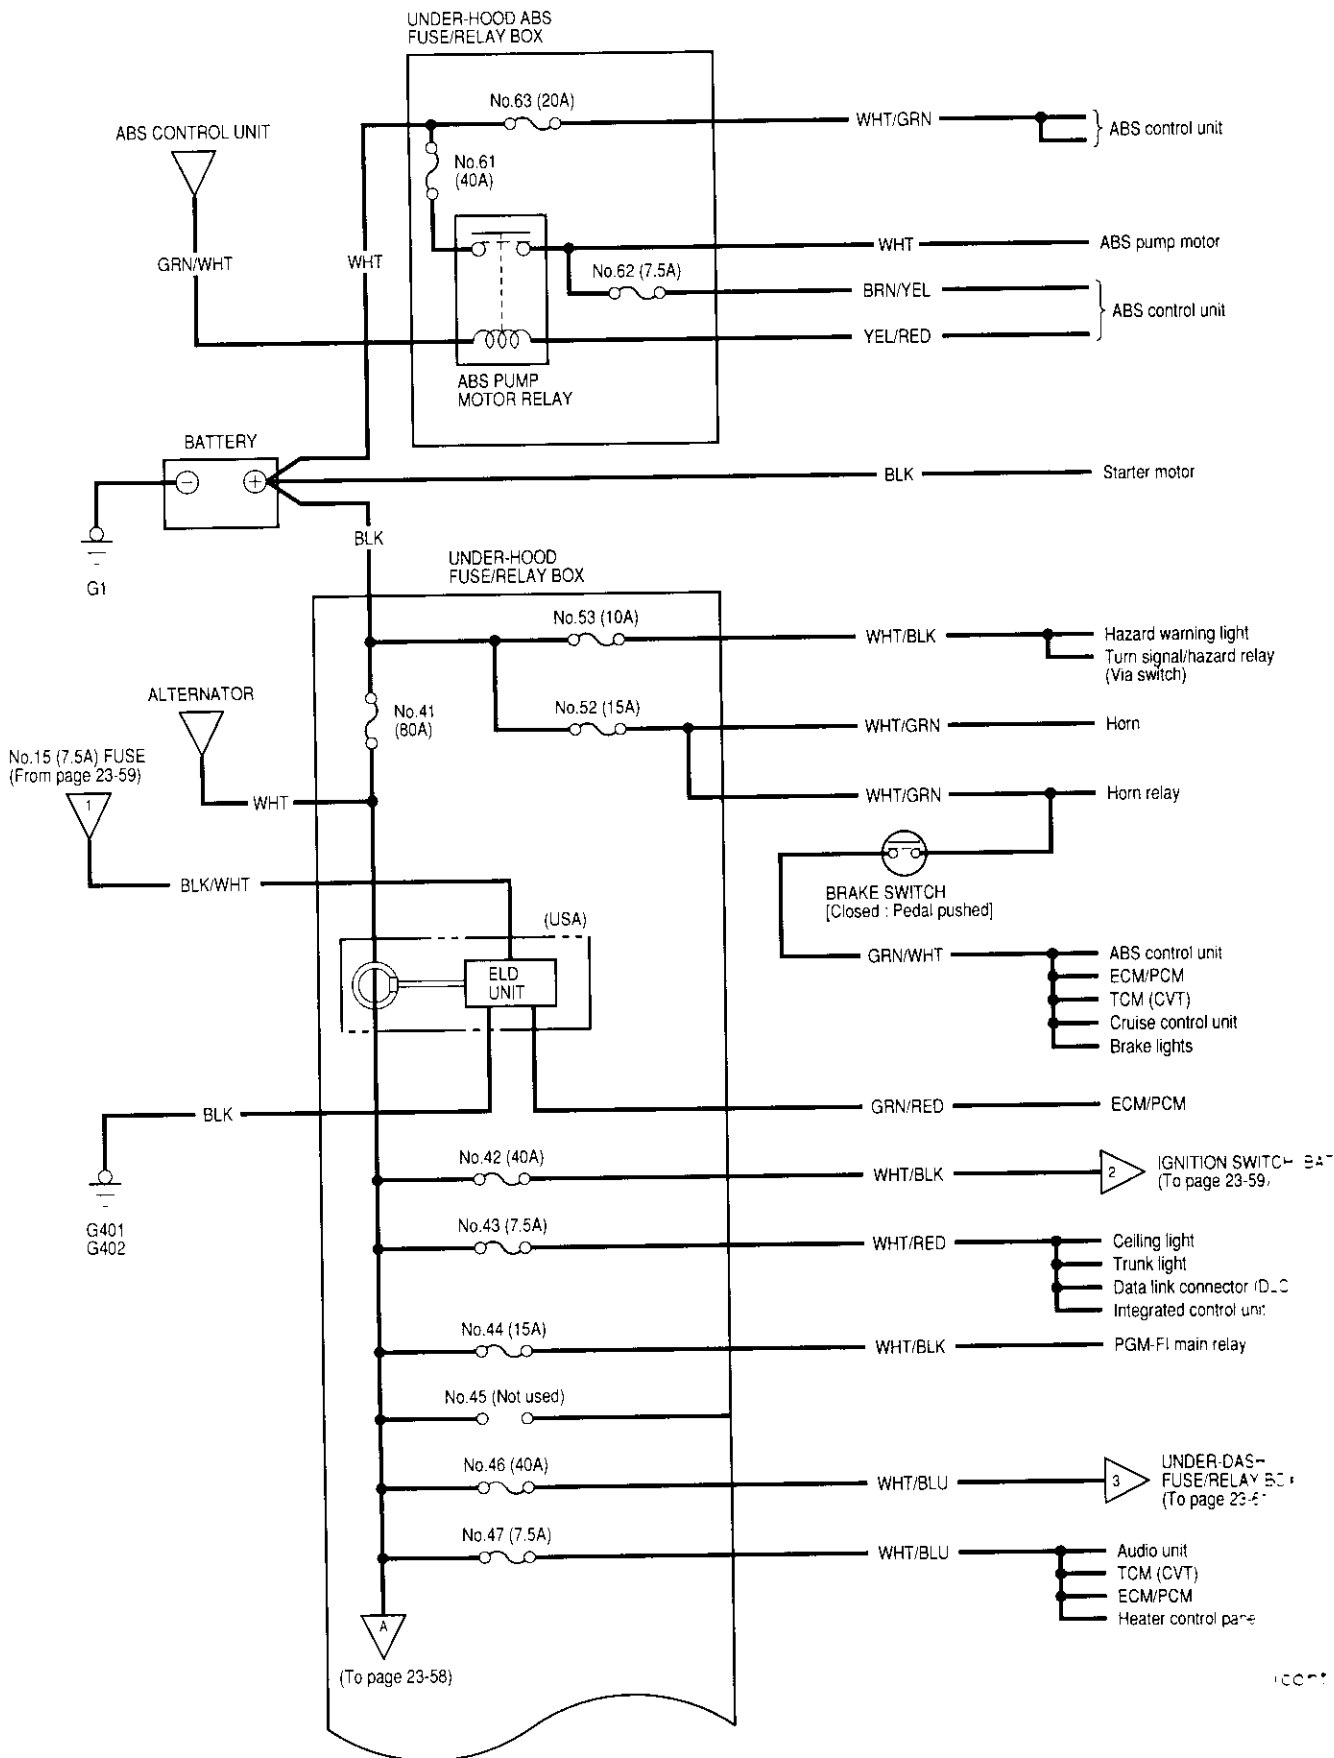


Power Distribution

Circuit Identification (cont'd)

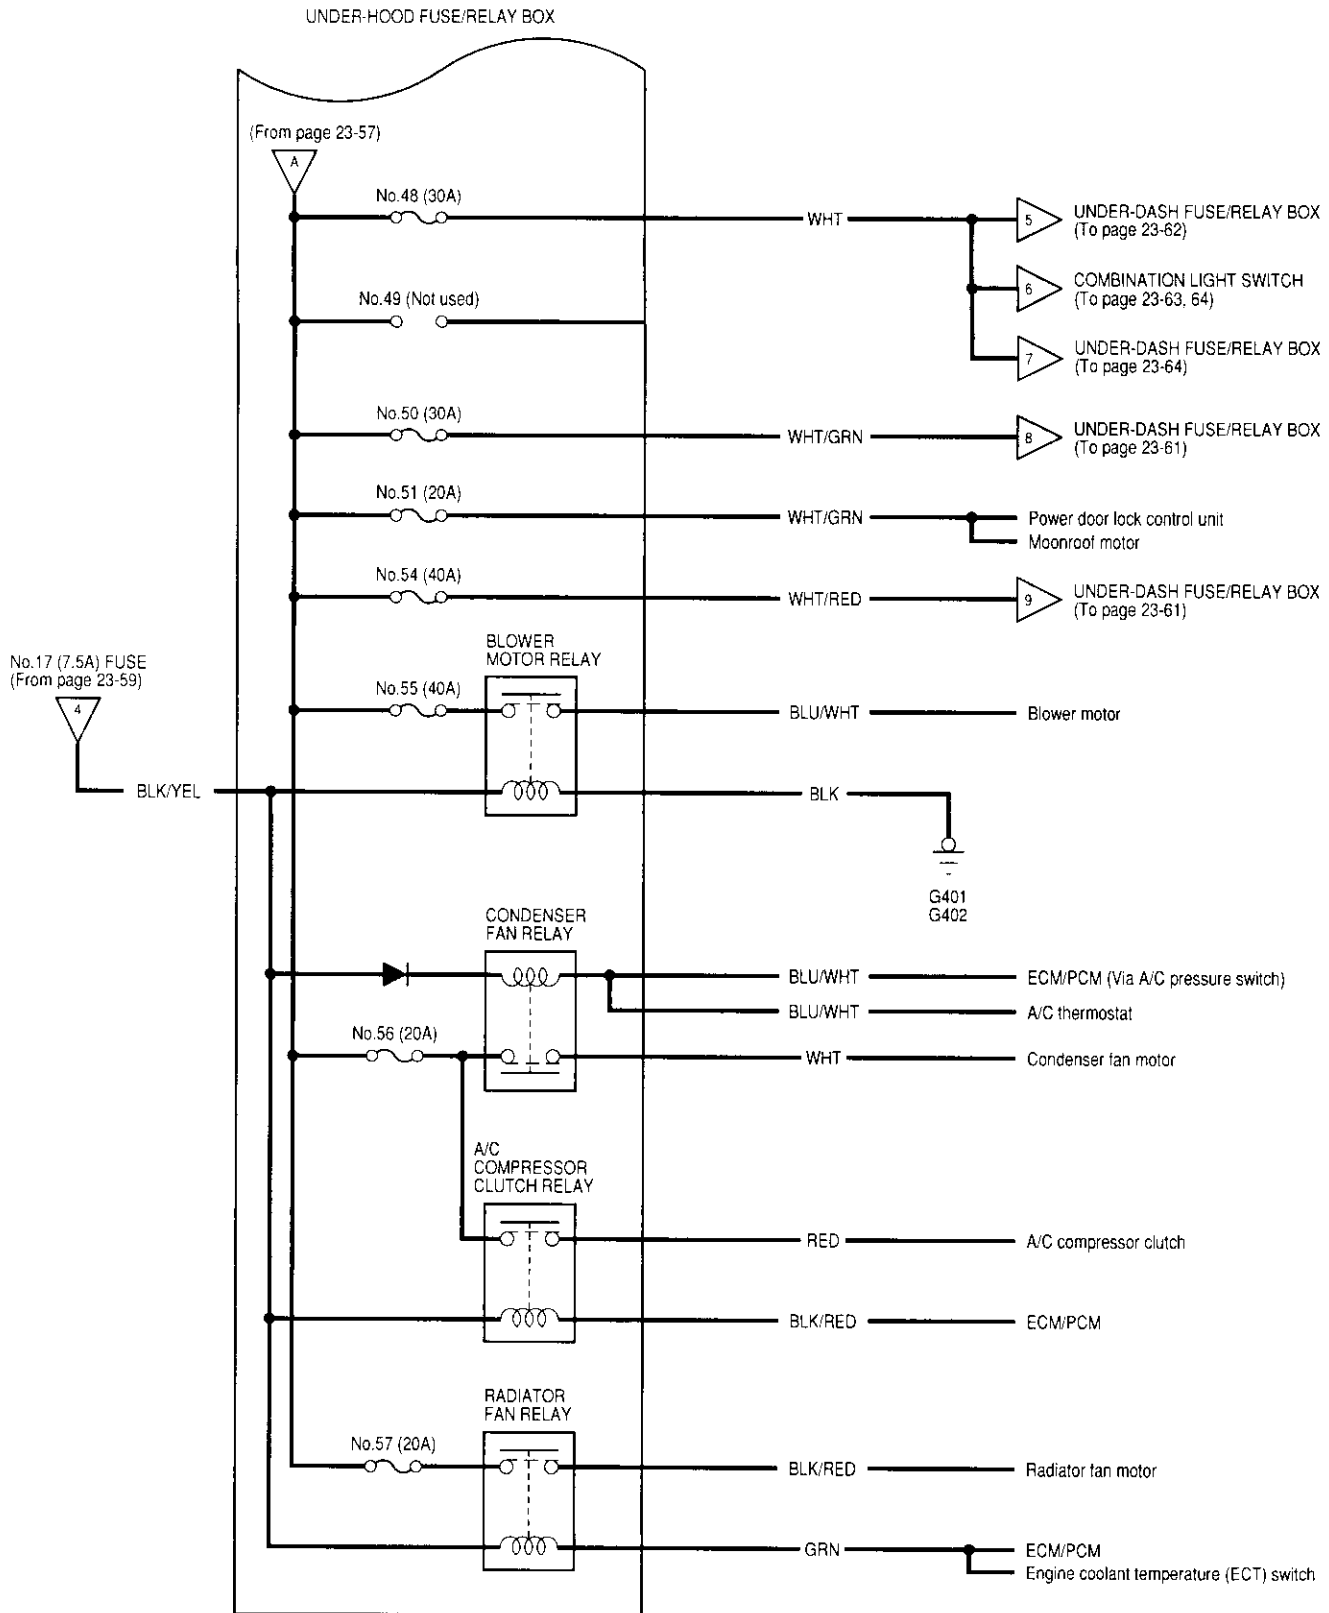




No. 42 (40A) FUSE
(From page 23-57)

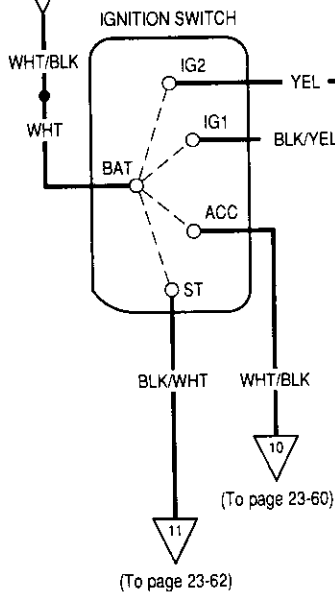

UNDER-DASH FUSE/RELAY BOX

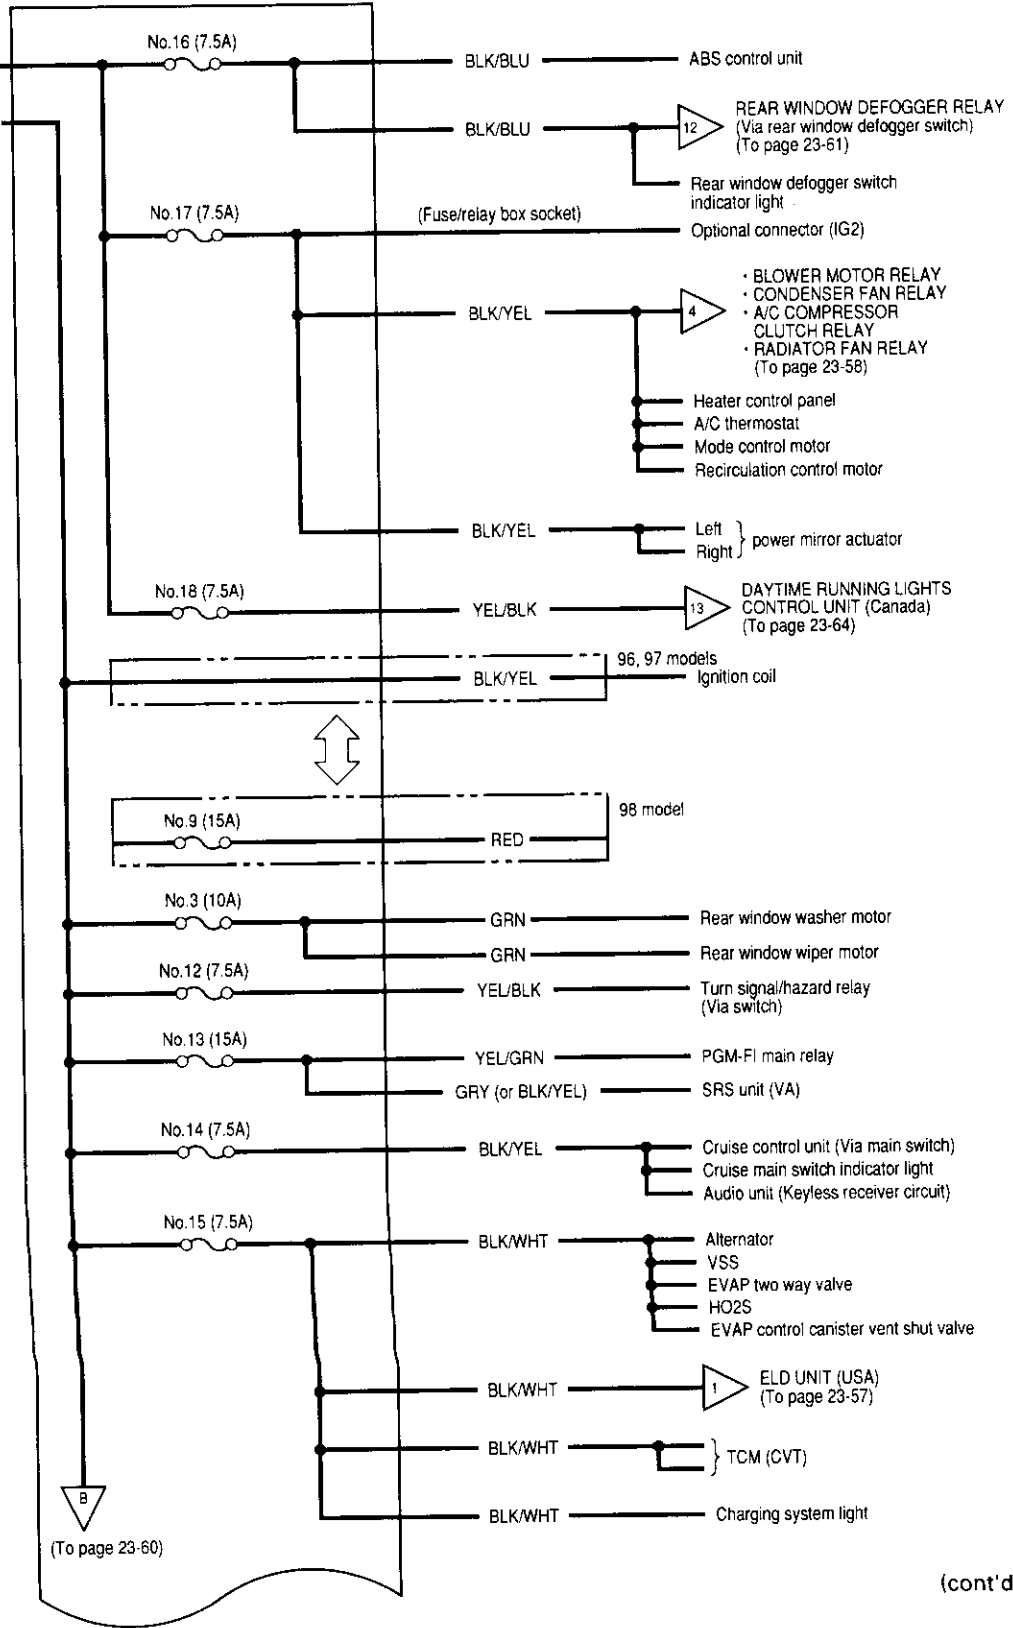



(To page 23-60)

(cont'd)

Power Distribution

Circuit Identification (cont'd)

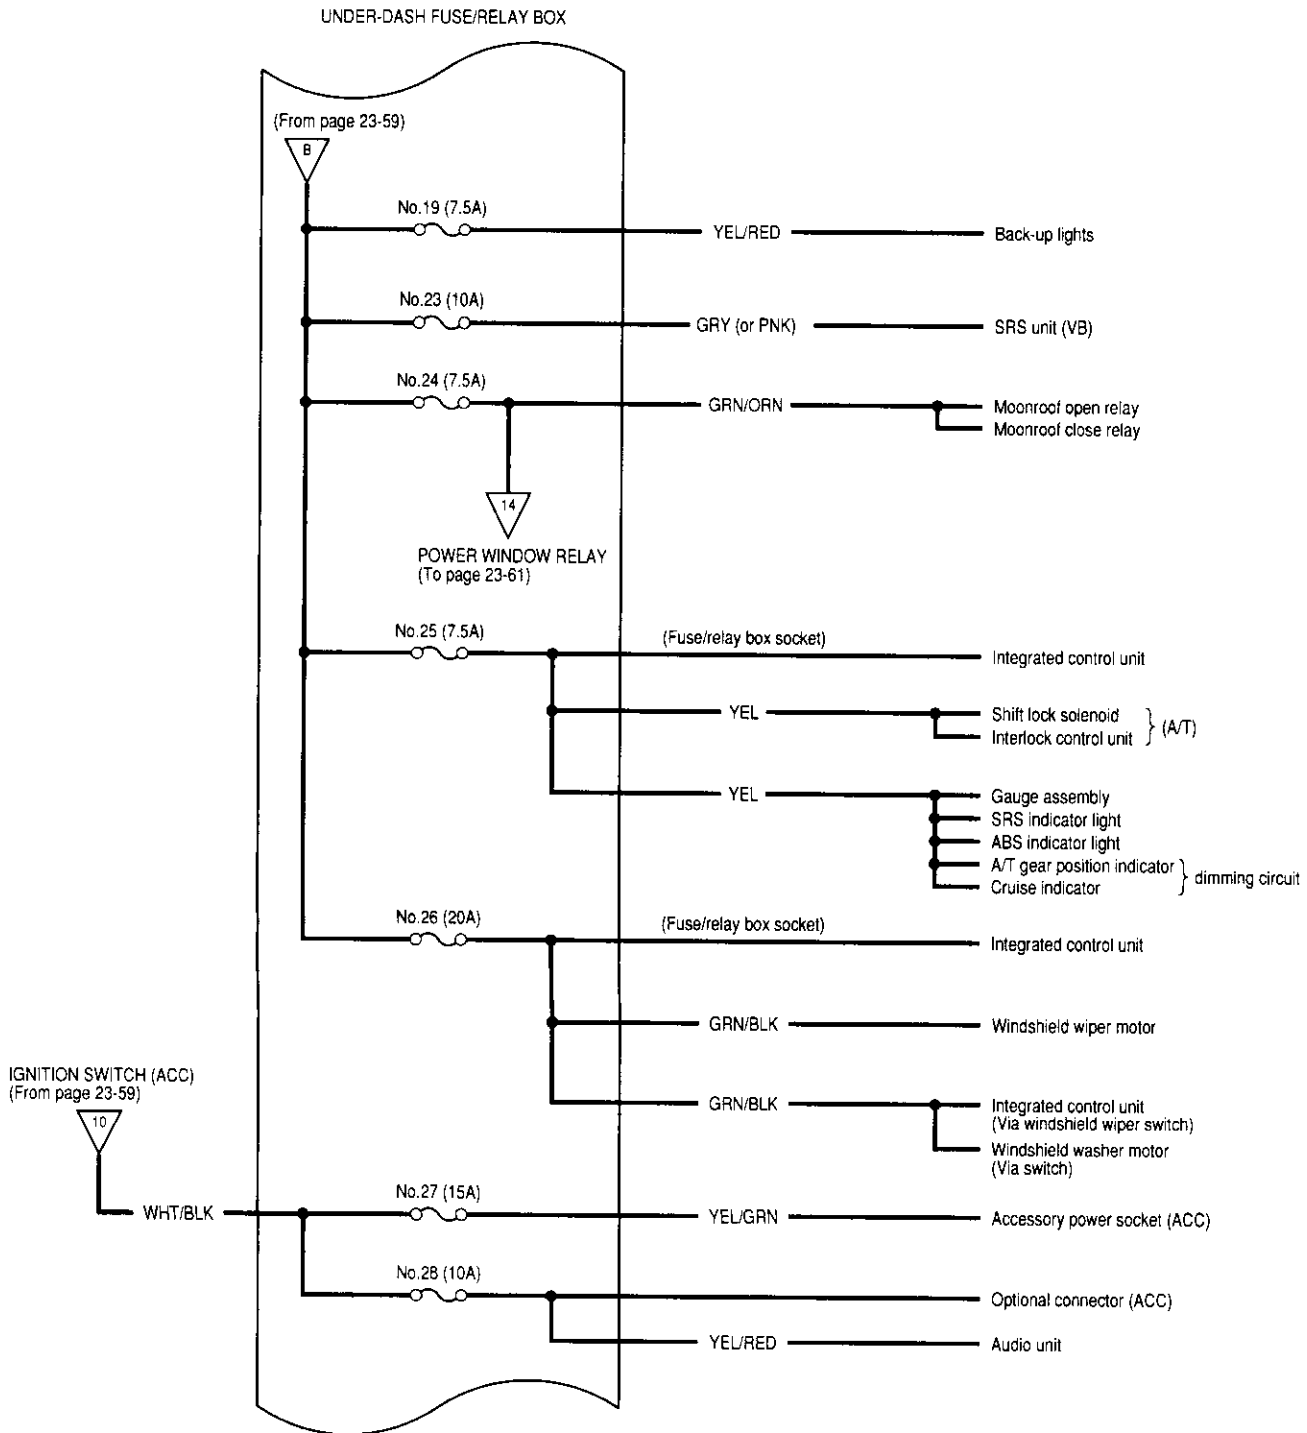

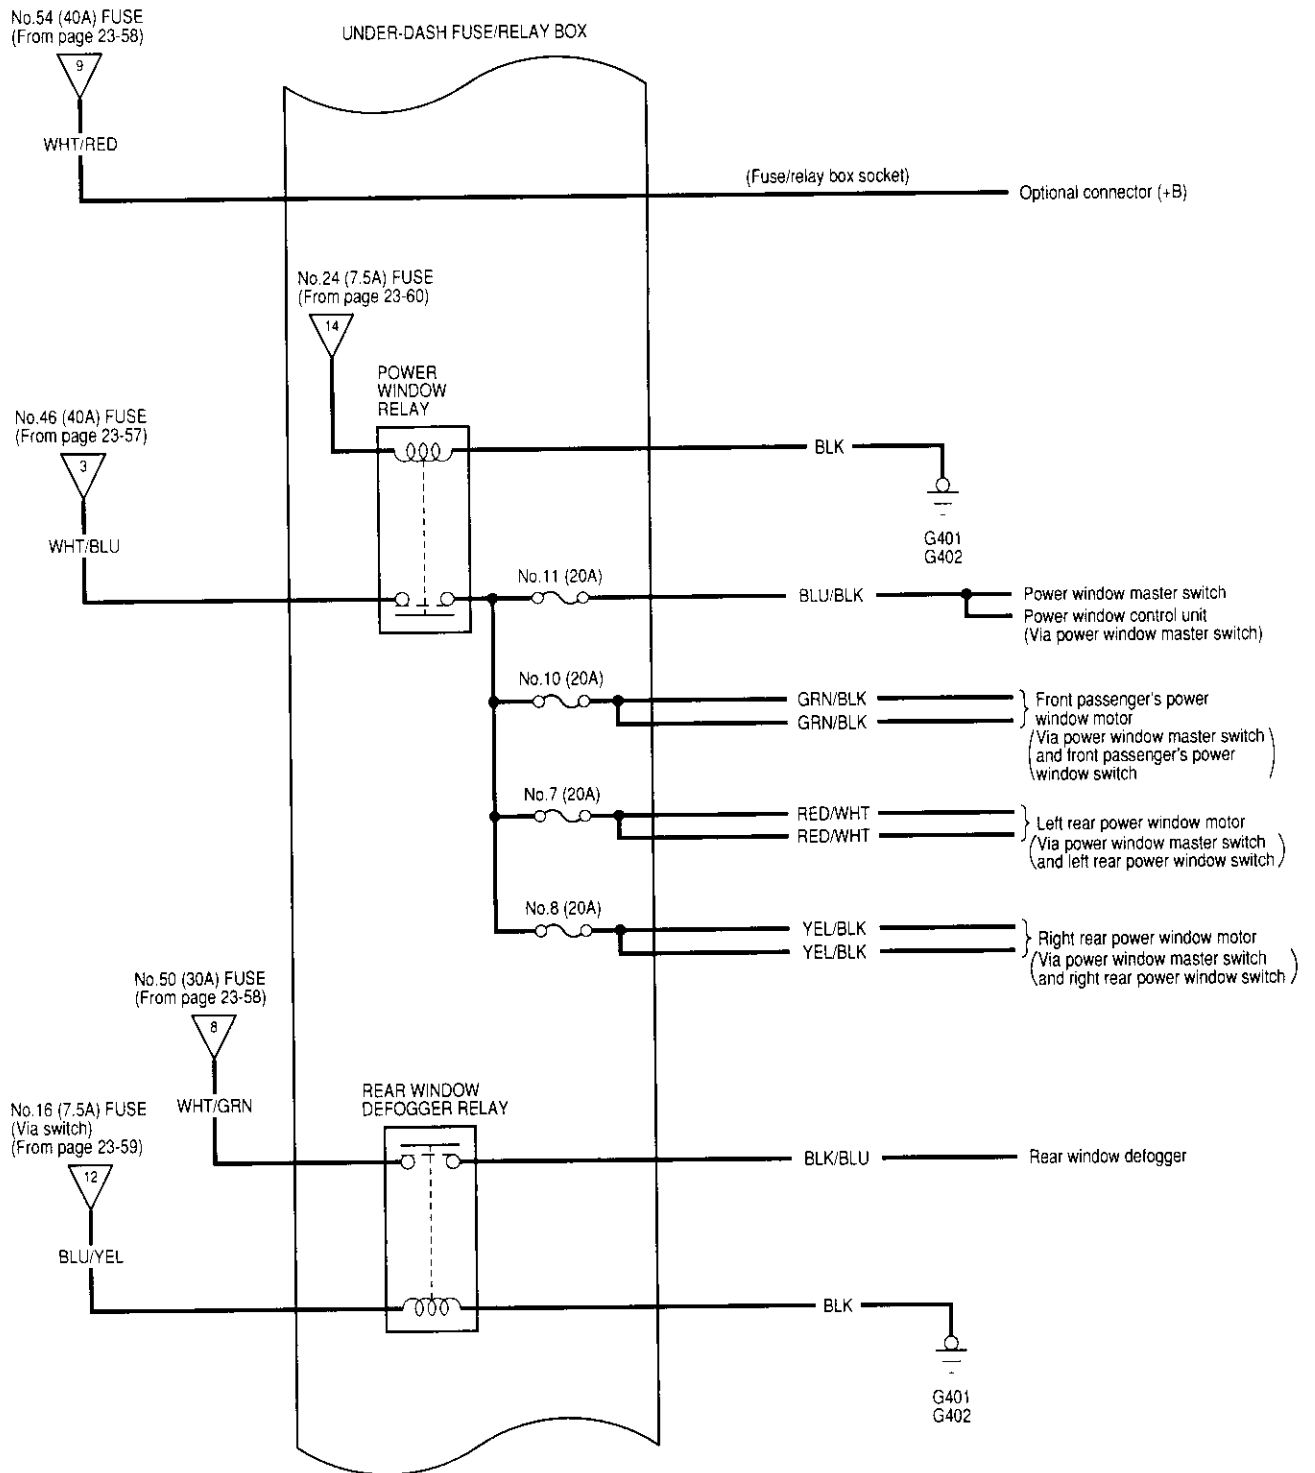


(cont'd)



Power Distribution

Circuit Identification (cont'd)

(M/T)

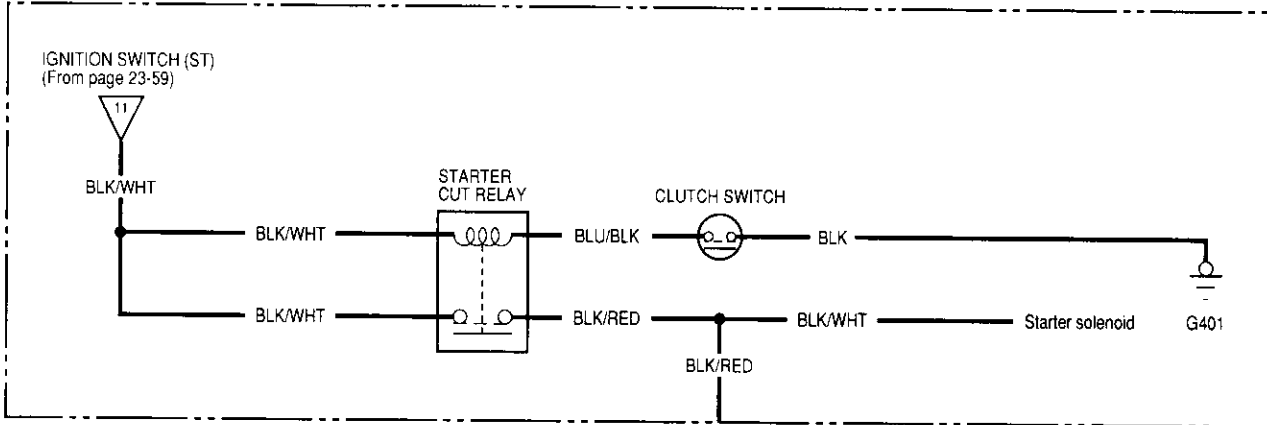


(A/T)

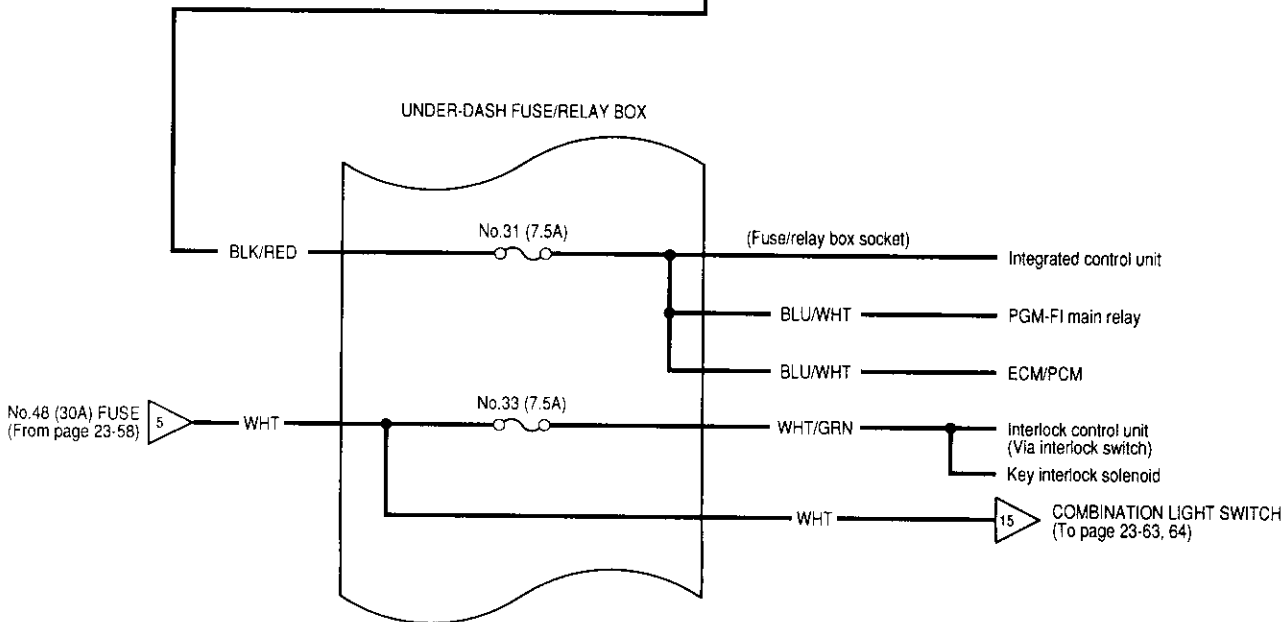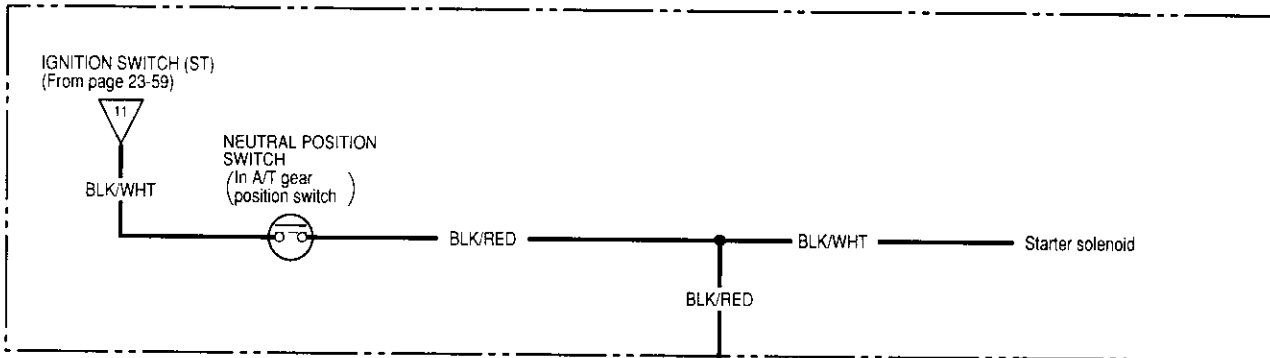



USA:

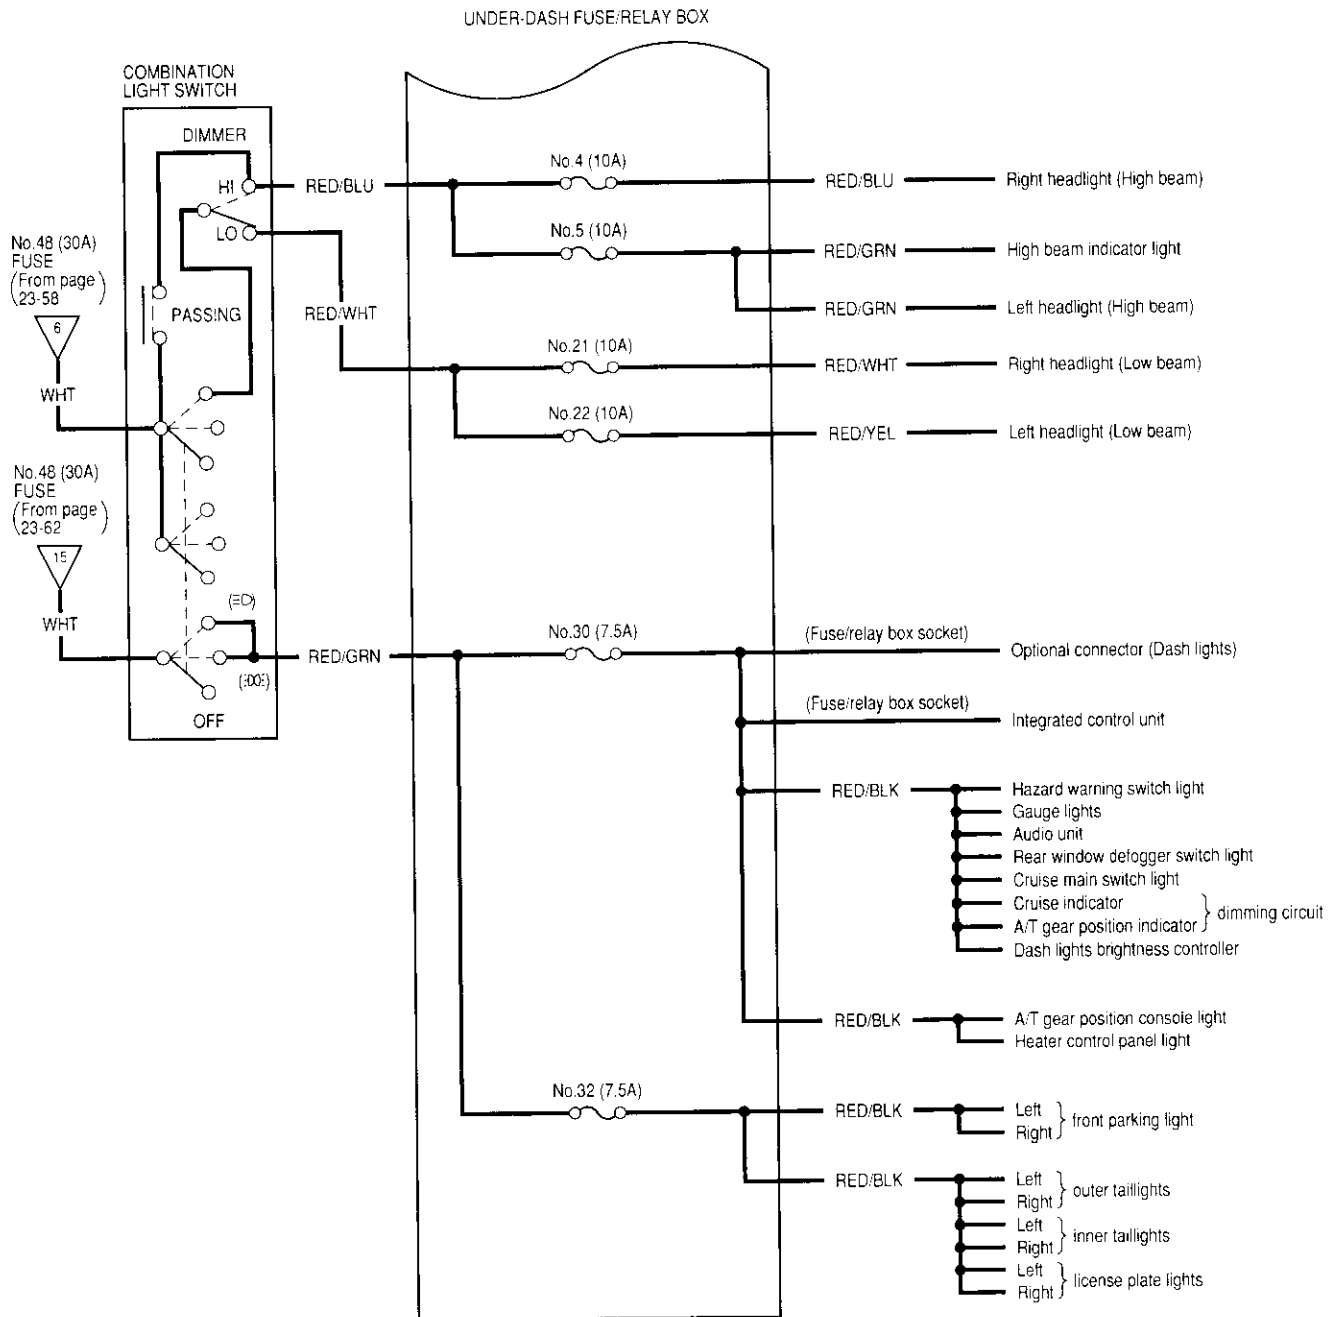


(cont'd)

Power Distribution

Circuit Identification (cont'd)


Canada:

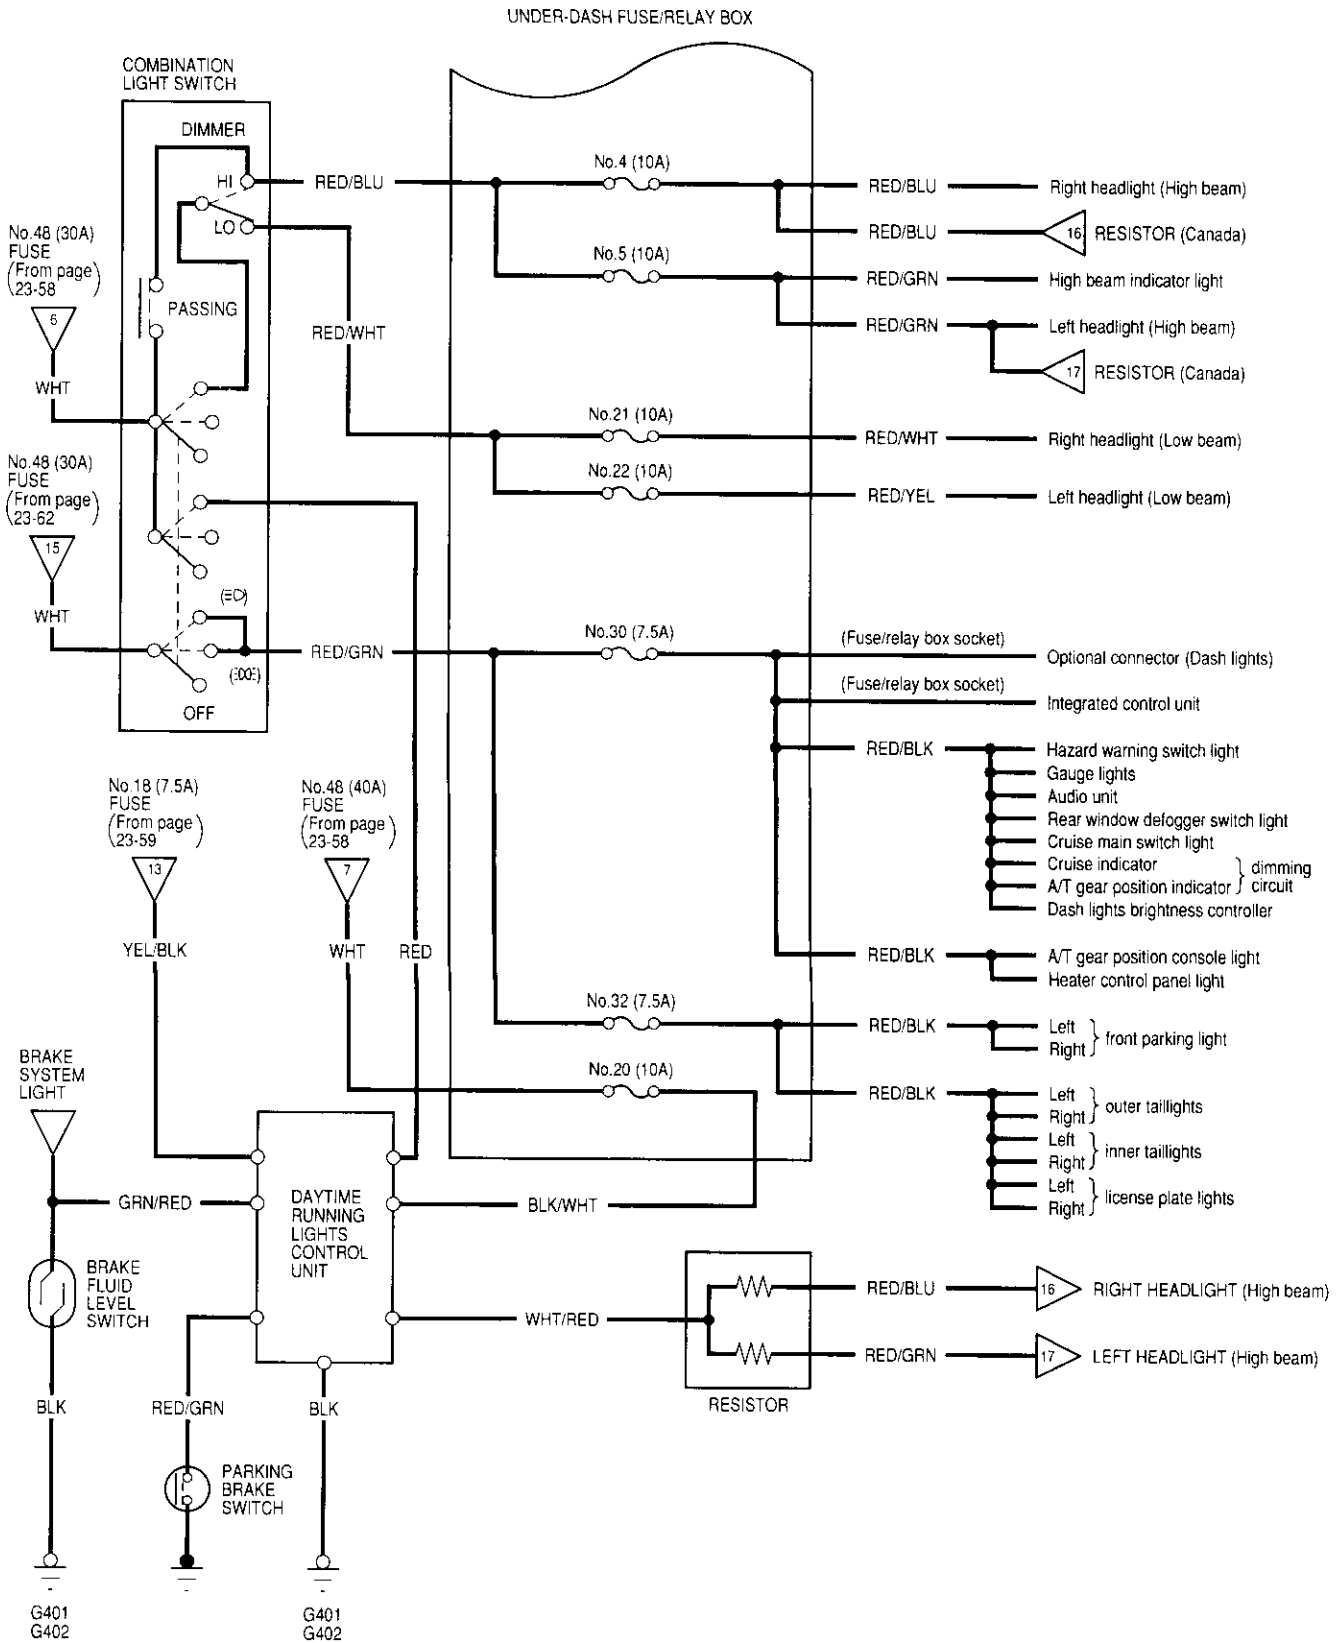



Ground Distribution

Circuit Identification

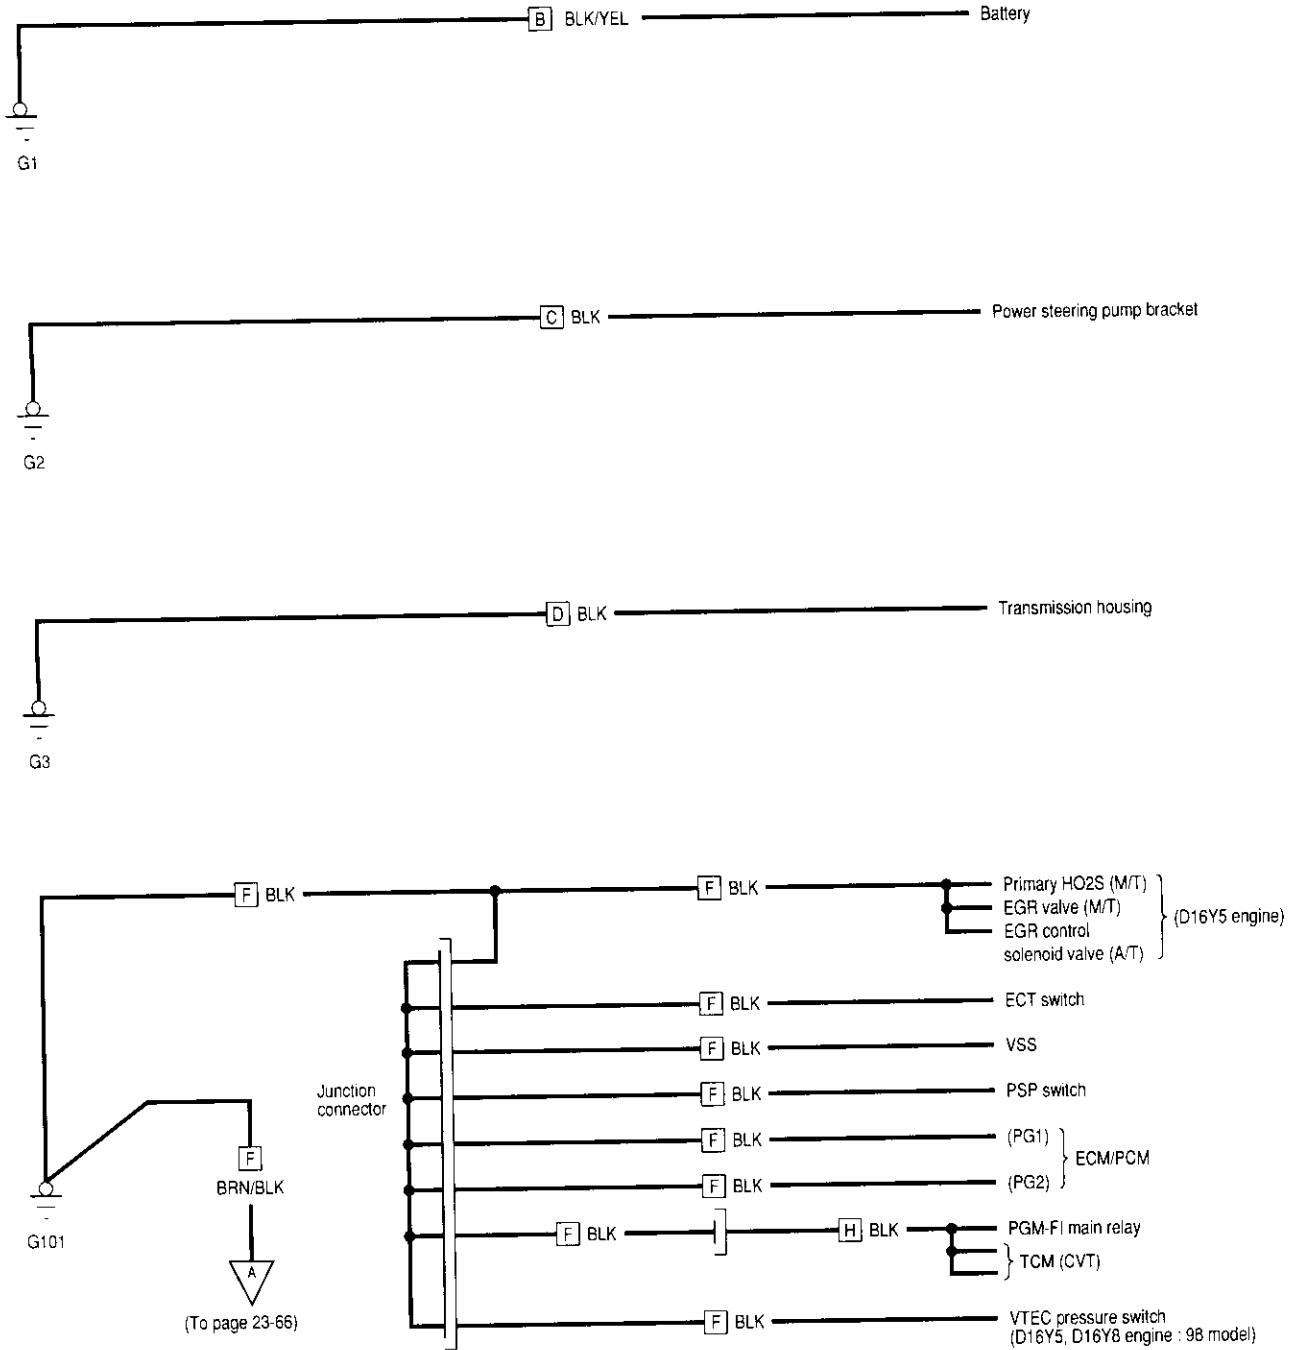

B : Battery ground cable
C : Engine ground cable A


D : Engine ground cable B
F : Engine wire harness



H : Main wire harness

(cont'd)

Ground Distribution

Circuit Identification (cont'd)

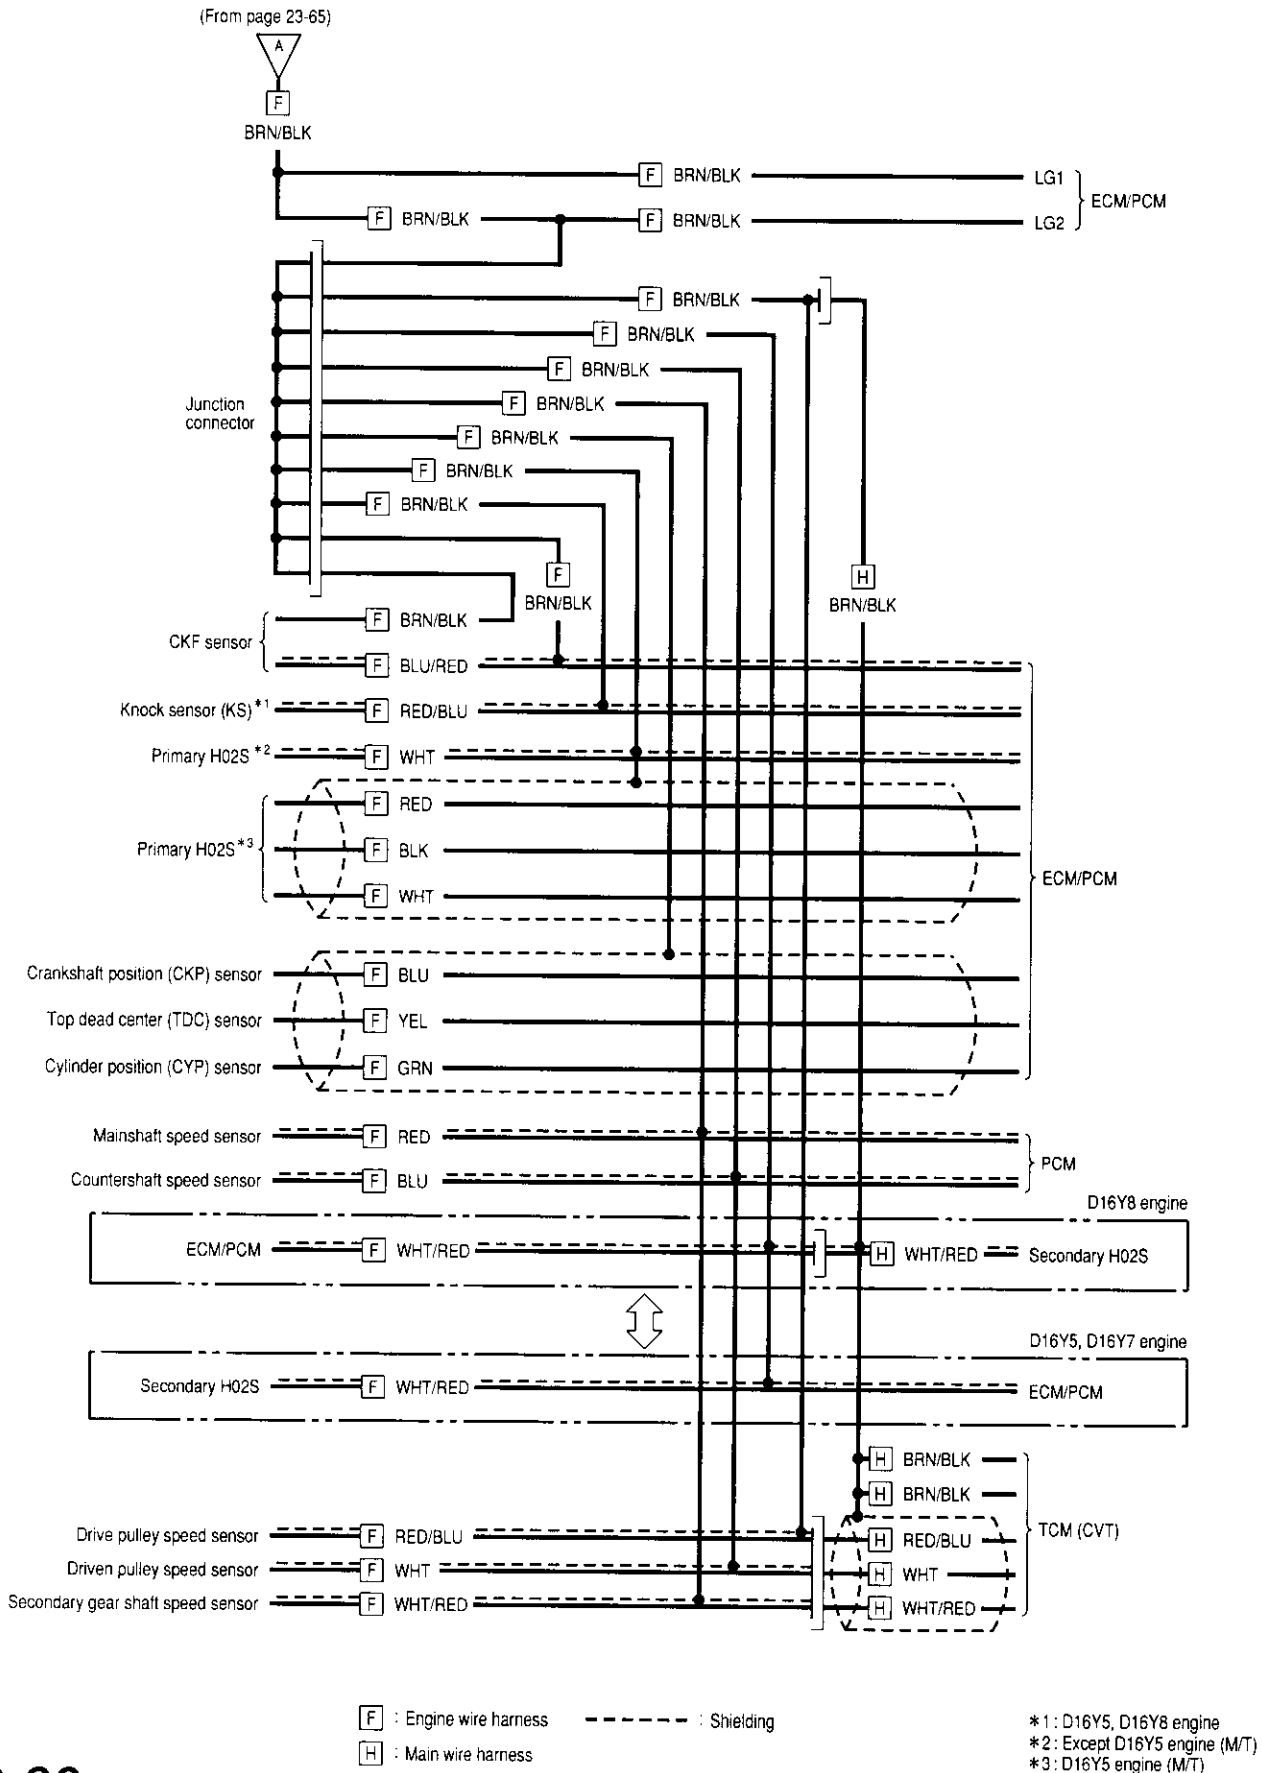

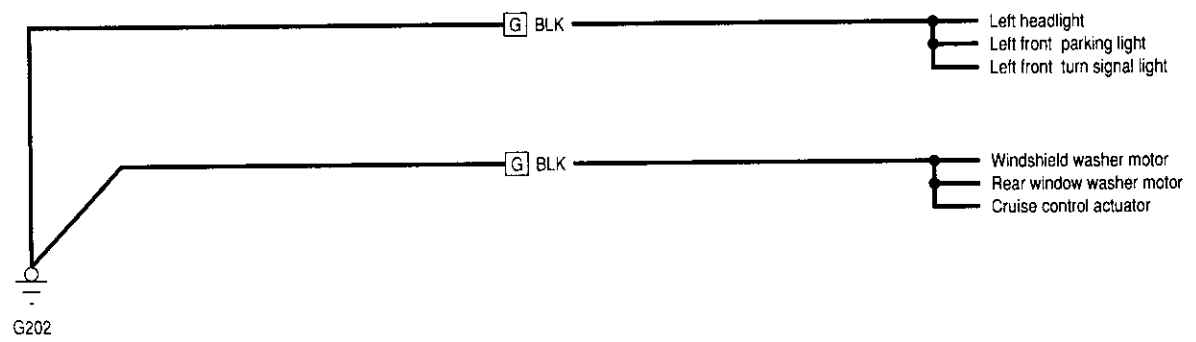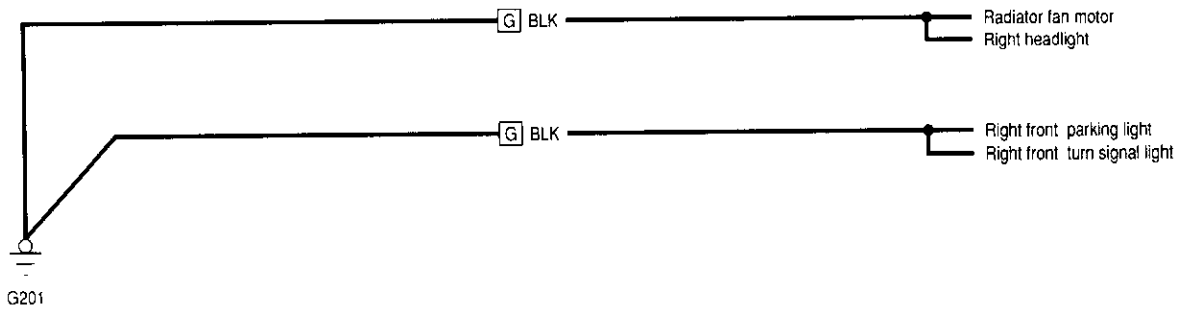



G : Engine compartment wire harness

(cont'd)


Ground Distribution

Circuit Identification (cont'd)

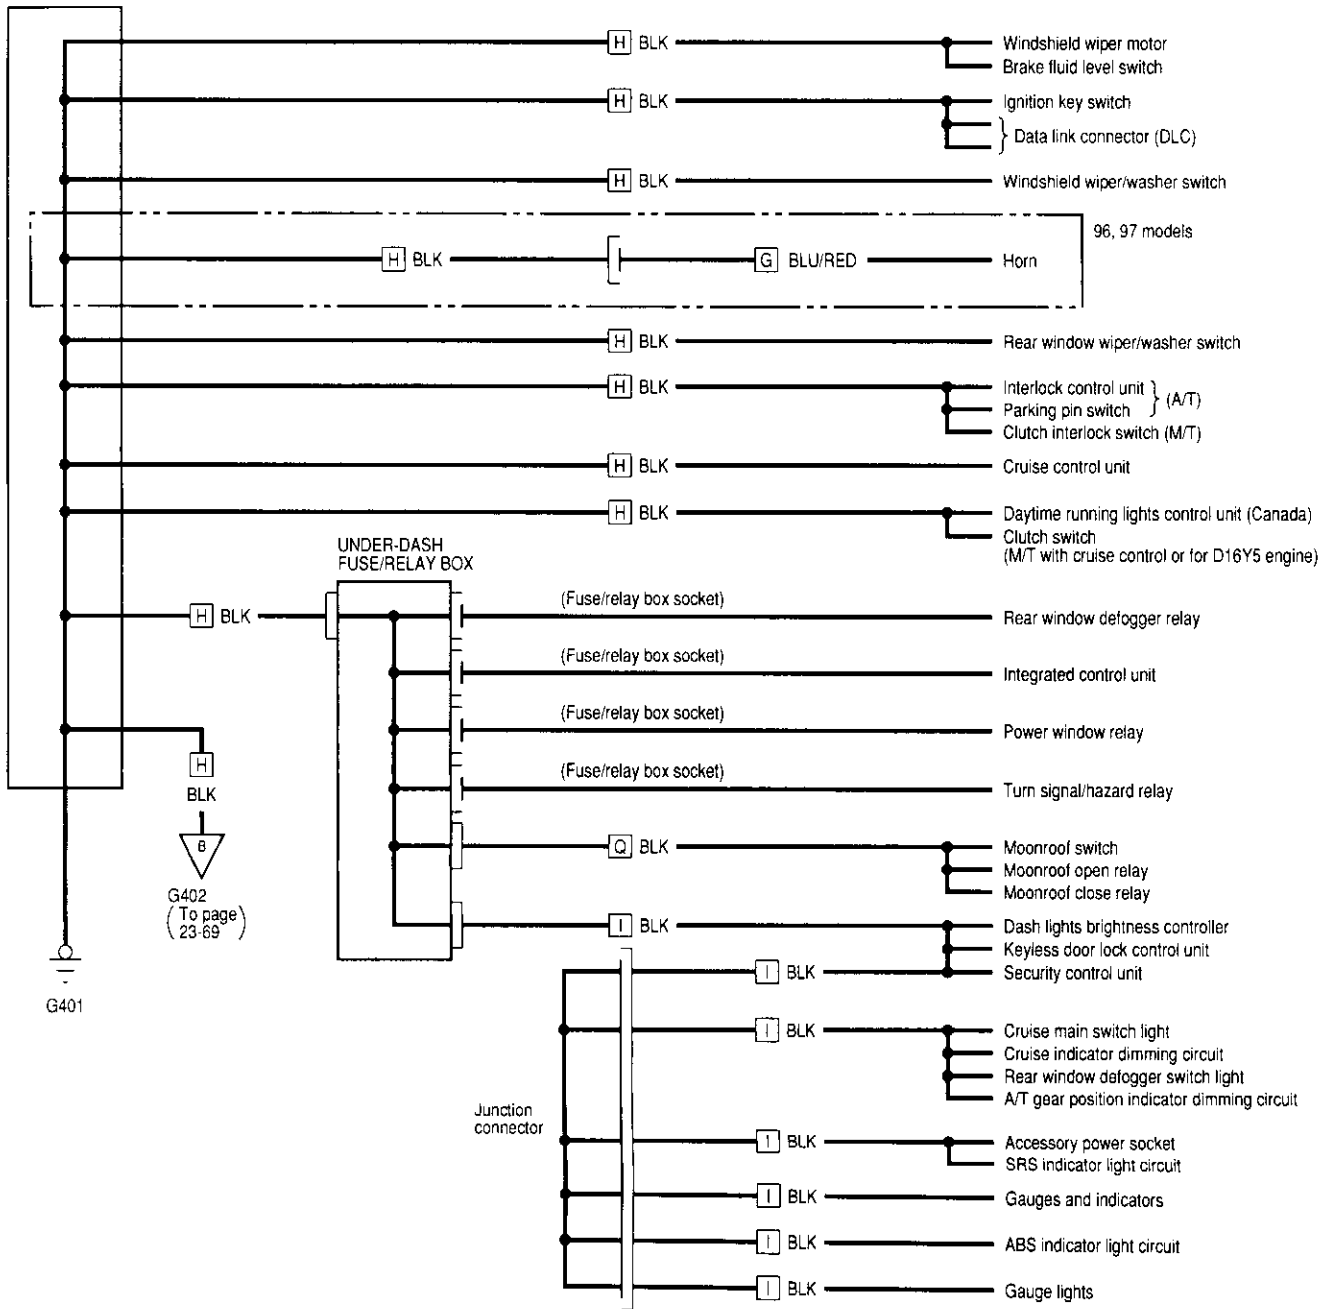


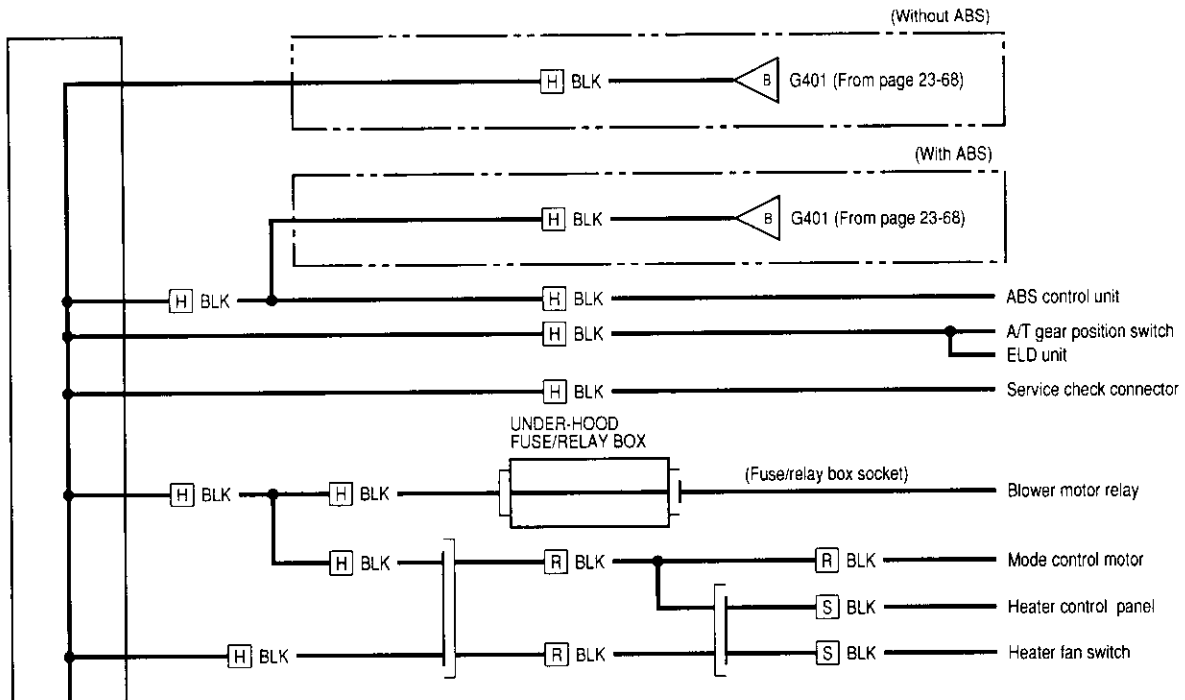


G402

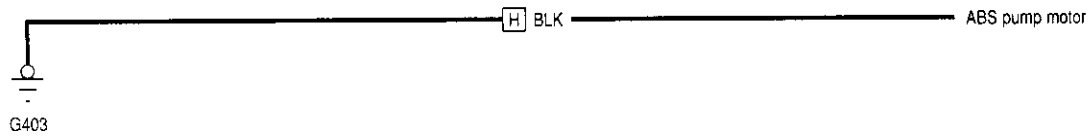


G403

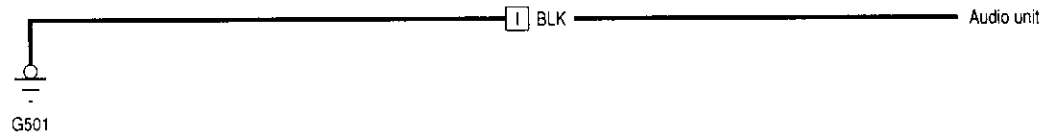

G501

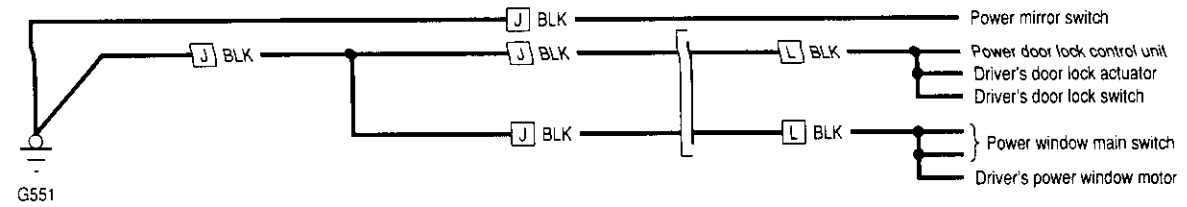

G551

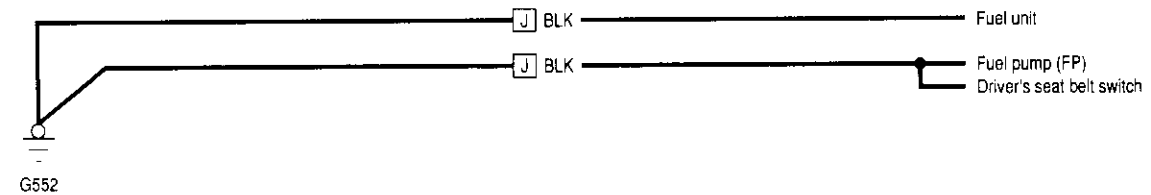







G552

- | | |
|------------------------------|----------------------------------|
| [H] : Main wire harness | [L] : Driver's door wire harness |
| [I] : Dashboard wire harness | [R] : Heater sub-harness A |
| [J] : Floor wire harness | [S] : Heater sub-harness B |

CONT. 2

Ground Distribution

Circuit Identification (cont'd)

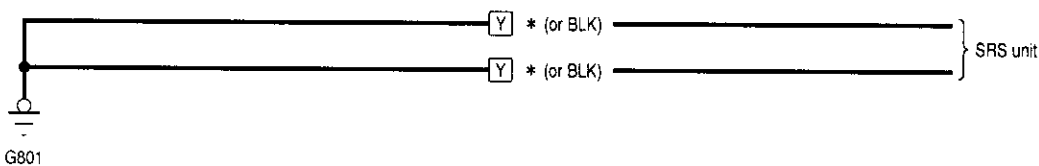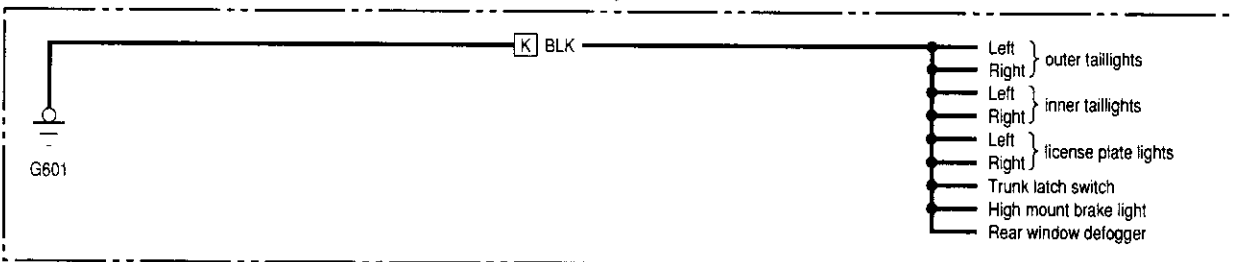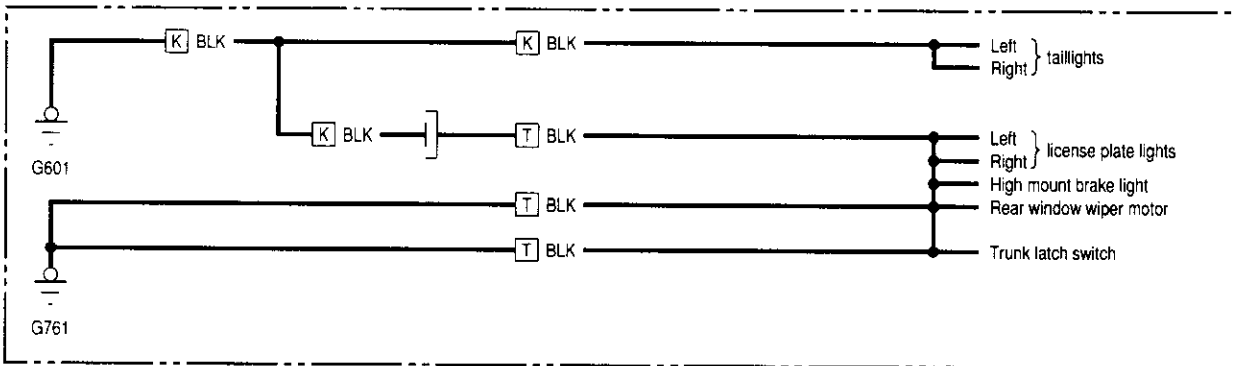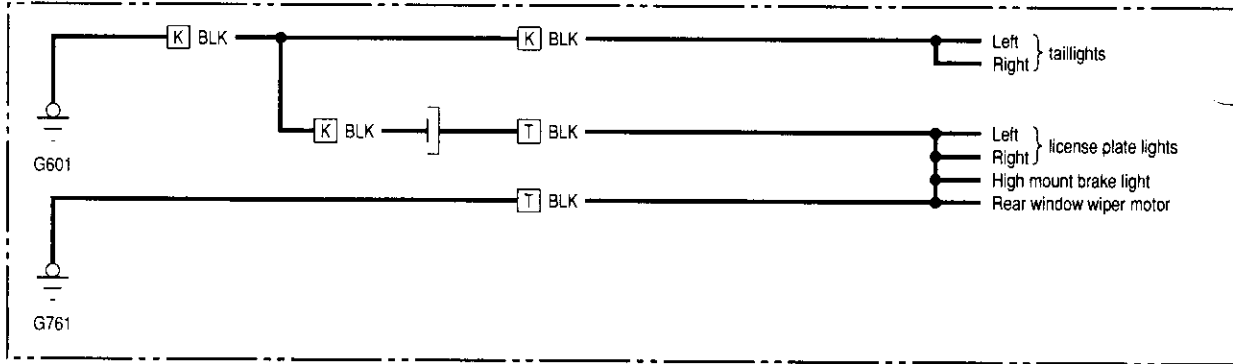

K : Rear wire harness
S : A/C wire harness
T : Hatch wire harness

U : Rear window defogger ground wire
Y : SRS main harness

* GRY : 96, 97 models
 GRN : 98 model




Under-dash Fuse/Relay Box

Removal/Installation

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

Removal:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait at least three minutes.
2. Disconnect the airbag connectors (see section 24).
3. Remove the driver's dashboard lower cover and knee bolster (see section 20).
4. Remove the two mounting nuts, and pull the under-dash fuse/relay box out from under the dash.

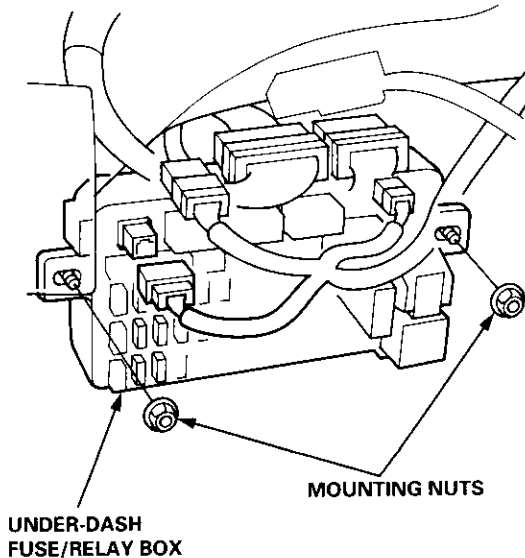

5. Disconnect the connectors from the under-dash fuse/relay box, and take out the under-dash fuse/relay box (see section 24).

Installation:

1. Connect the connectors to the under-dash fuse/relay box, then install the under-dash fuse/relay box in the reverse order of removal (see section 24).
2. Install the driver's dashboard lower cover (see section 20).
3. Connect the airbag connectors (see section 24).
4. Connect the battery positive cable, then connect the negative cable.
5. Confirm that all systems work properly.

Power Relays


Relay Test

NOTE: See page 23-155 for turn signal/hazard relay input test.


Normally-open type:

1. Check for continuity between the terminals.
 - There should be continuity between the No. 1 and No. 3 terminals when power and ground are connected to the No. 2 and No. 4 terminals.
 - There should be no continuity between the No. 1 and No. 3 terminals when power is disconnected.


Terminal	1	3
Power (No. 2 - No. 4)		
Disconnected		
Connected	○	○

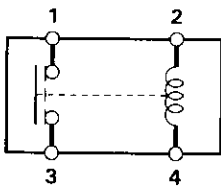


- Blower motor relay

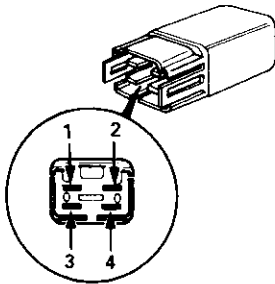


- ABS pump motor relay

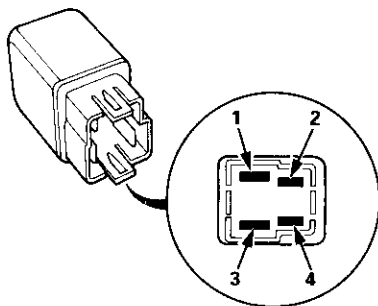

- Rear window defogger relay

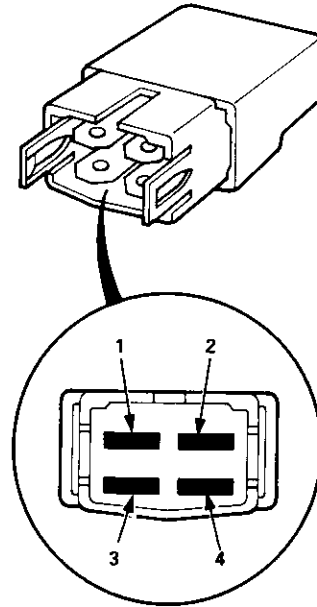

- Starter cut relay: 96, 97 models
- Horn relay: 96, 97 models

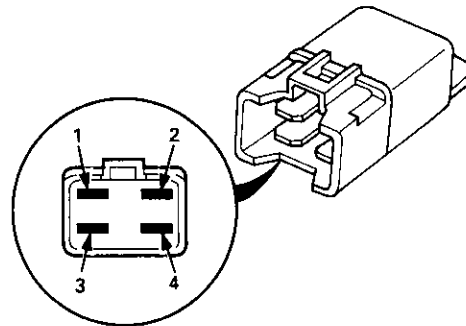





Normally-open type:

1. Check for continuity between the terminals.
 - There should be continuity between the No. 1 and No. 2 terminals when power and ground are connected to the No. 3 and No. 4 terminals.
 - There should be no continuity between the No. 1 and No. 2 terminals when power is disconnected.

Terminal	1	2
Power (No.3 - No.4)		
Disconnected		
Connected		

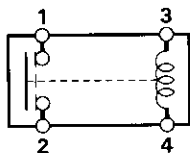


- Power window relay
- Radiator fan relay
- Condenser fan relay
- A/C compressor clutch relay
- Starter cut relay: 98 model
- Horn relay: 98 model

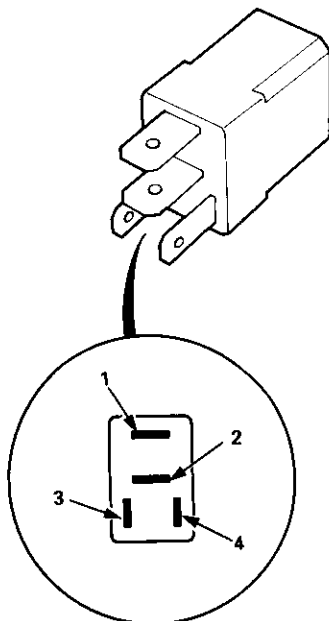


Five-terminal type:

1. Check for continuity between the terminals.
 - There should be continuity between the No. 1 and No. 2 terminals when power and ground are connected to the No. 3 and No. 5 terminals.
 - There should be continuity between the No. 2 and No. 4 terminals when power is disconnected.

Terminal	1	2	4
Power (No. 3 - No. 5)			
Disconnected			
Connected			

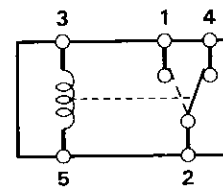

- Moonroof open relay: 96, 97 models
- Moonroof close relay: 96, 97 models

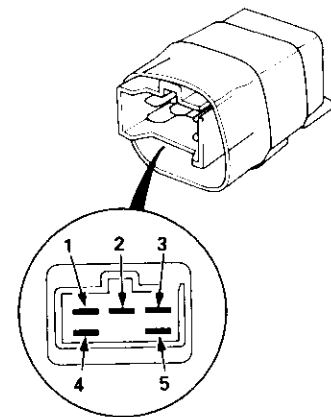


Power Relay

Relay Test


Five-terminal type:

1. Check for continuity between the terminals.
 - There should be continuity between the No. 1 and No. 2 terminals when power and ground are connected to the No. 5 and No. 3 terminals.
 - There should be continuity between the No. 1 and No. 4 terminals when power is disconnected.

Terminal	1	2	4
Power (No. 5 – No. 3)			
Disconnected	○	—	○
Connected	○	○	

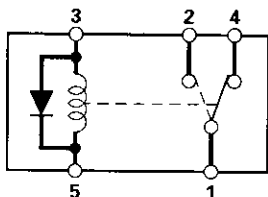

- Moonroof open relay: 98 model
- Moonroof close relay: 98 model

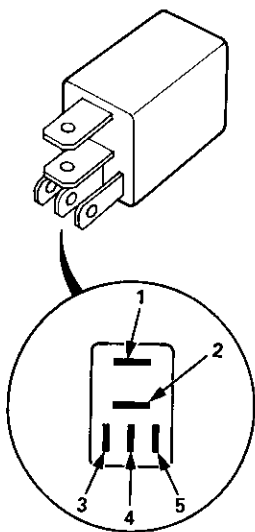

Ignition Switch




Test

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

1. Disconnect the battery negative cable.
2. Remove the driver's dashboard lower cover and knee bolster (see section 20).
3. Disconnect the 5P connector from the under-dash fuse/relay box and the 7P connector from the main wire harness.
4. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	1 (ACC)	(3) (BAT)	5 (IG1)	3 (IG2)	(1) (ST)
O (LOCK)					
I (ACC)	○	○			
II (ON)	○	○	○	○	
III (START)		○	○		○

[] : 7P connector

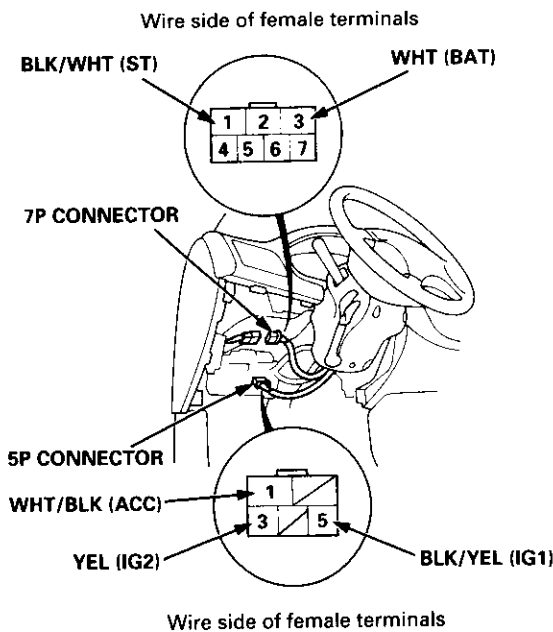


5. If the continuity checks do not agree with the table, replace the electrical switch.

Electrical Switch Replacement

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

1. Disconnect the battery negative cable.
2. Remove the driver's dashboard lower cover (see section 20).
3. Disconnect the 5P connector from the under-dash fuse/relay box and the 7P connector from the main wire harness (see left column).
4. Remove the steering column covers (see section 17).
5. Insert the ignition key, and turn it to "0 (LOCK)".
6. Remove the two screws and the electrical switch from the steering lock.

ELECTRICAL SWITCH

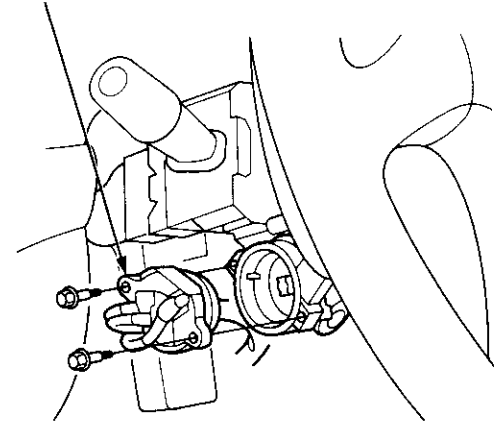

7. Install in the reverse order of removal.

Ignition Switch


Steering Lock Replacement

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

Remove:

1. Disconnect the battery negative cable.
2. Remove the driver's dashboard lower cover and knee bolster (see section 20).
3. Disconnect the 5P connector from the under-dash fuse/relay box and the 7P connector from the main wire harness (see previous page).
4. Remove the steering column covers, then remove the mounting bolts and nuts from the steering column (see section 17).
5. Lower the steering column assembly.
6. Center-punch each of the two shear bolts, then drill their heads off with a 5 mm (3/16 in) drill bit.


CAUTION: Do not damage the steering lock body.

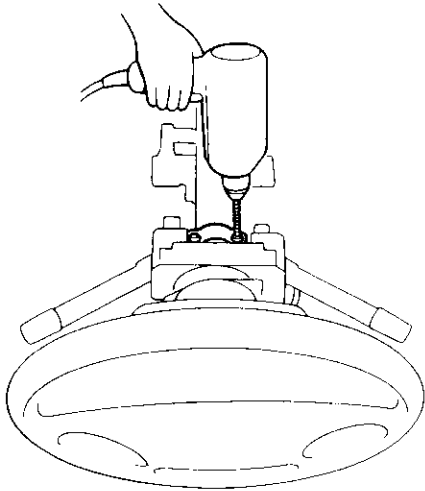

7. Remove the shear bolts and the steering lock assembly.

Installation:

1. Install the new steering lock assembly without the key inserted.
2. Loosely tighten the new shear bolts.
3. Insert the ignition key, and check for proper operation of the steering wheel lock and that the ignition key turns freely.
4. Tighten the shear bolts until the hex heads twist off.

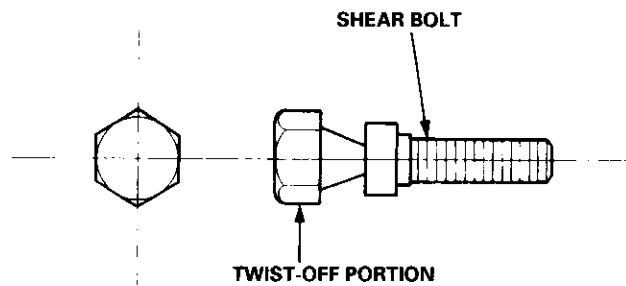

5. Install in the reverse order of removal.




Test

⚠ WARNING

- **Battery fluid (electrolyte) contains sulfuric acid. It may cause severe burns if it gets on your skin or in your eyes. Wear protective clothing and a face shield.**
 - If electrolyte gets on your skin or clothes, rinse it off with water immediately.
 - If electrolyte gets in your eyes, flush it out by splashing water in your eyes for at least 15 minutes; call a physician immediately.
- **A battery gives off hydrogen gas. If ignited, the hydrogen will explode and could crack the battery case and splatter acid on you. Keep sparks, flames, and cigarettes away from the battery.**
- **Overcharging will raise the temperature of the electrolyte. This may force electrolyte to spray out of the battery vents. Follow the charger manufacturer's instructions, and charge the battery at a proper rate.**

Use either a JCI or Bear ARBST tester, and follow the manufacturer's procedures. If you don't have one of these computerized testers, follow this conventional test procedure:



To get accurate results, the temperature of the electrolyte must be between 70°F (21°C) and 100°F (38°C).

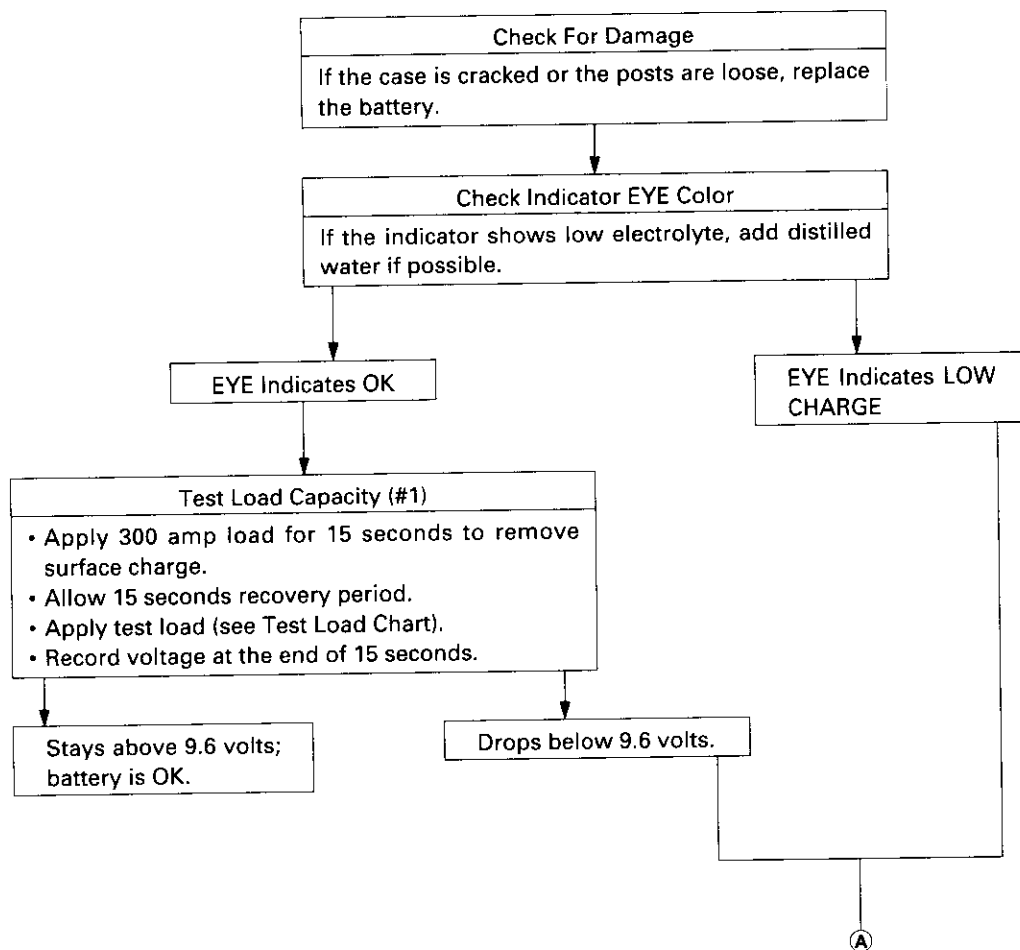

(cont.)

Battery

Test (cont'd)

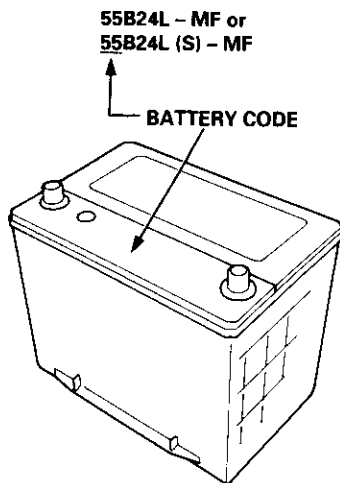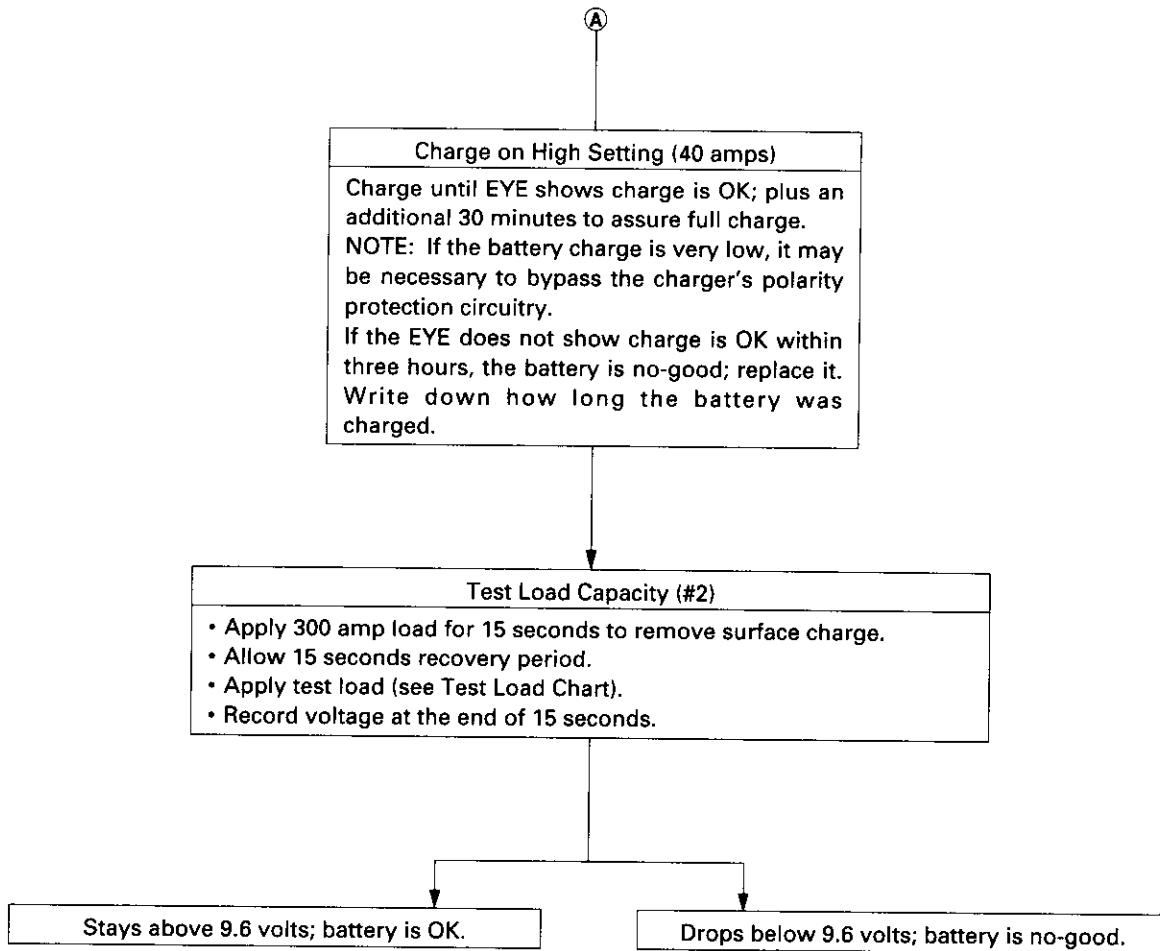


TEST LOAD CHART		
Use the test load or 1/2 the cold cranking amps (CCA) printed on the label on the top of the battery. If neither is indicated, use the information below:		
BATTERY CODE	COLD CRANKING AMPS (CCA)	LOAD (amps)
55	405 (*410)	200

*: 55B24L (S) - MF

Starting System




Component Location Index

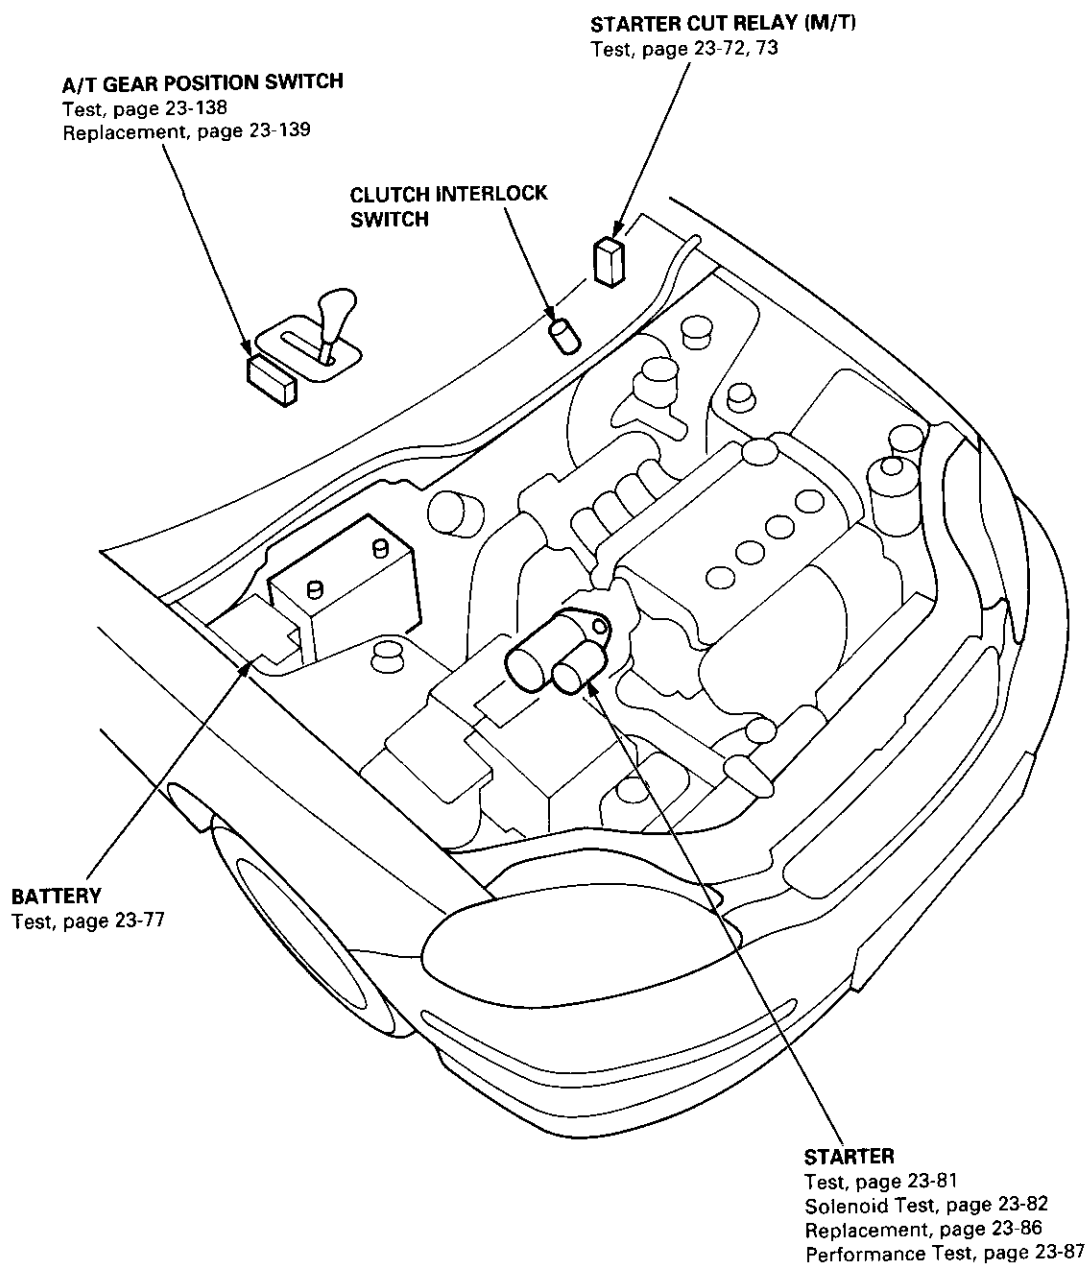

Starting System

Component Location Index

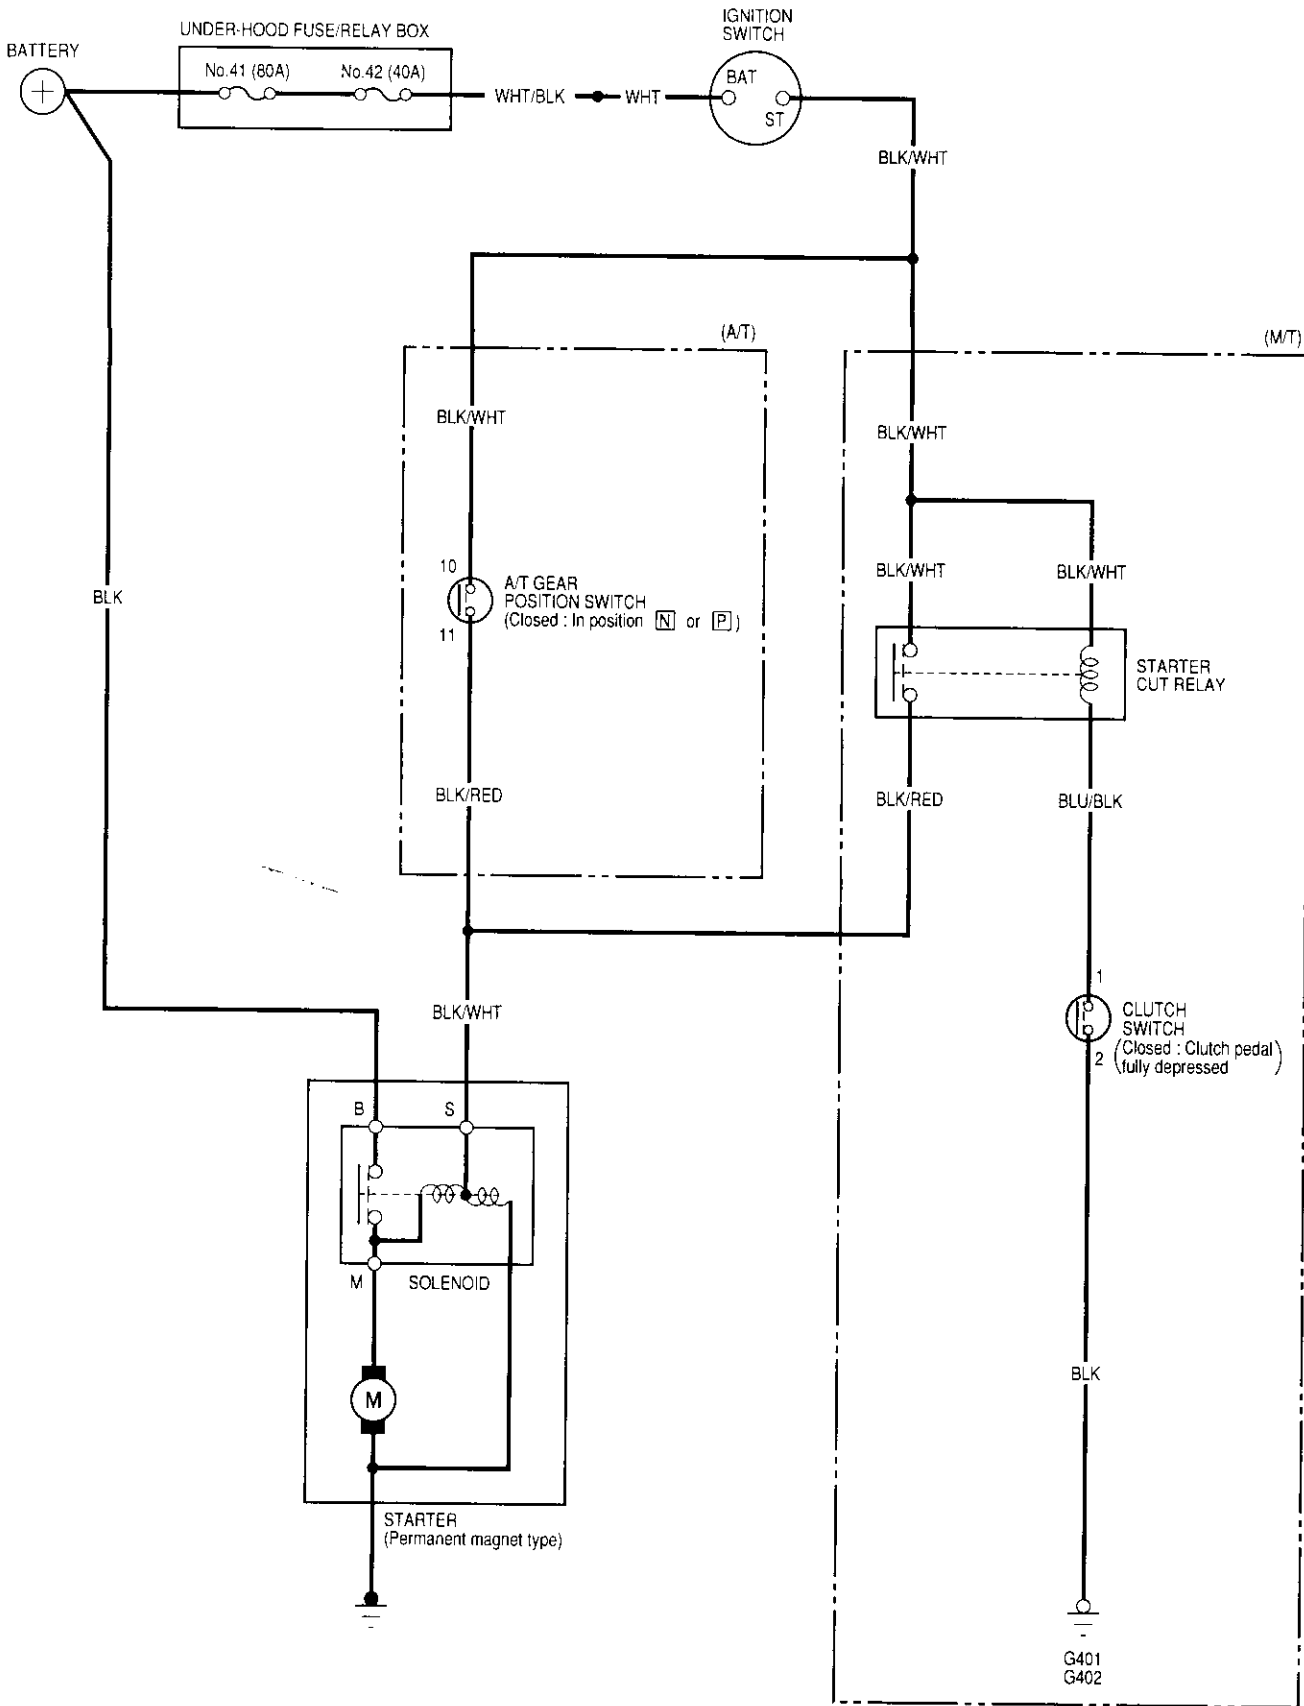



Starter Test


NOTE: The air temperature must be between 59 and 100°F (15 and 38°C) before testing.

Recommended Procedure:

- Use a starter system tester.
- Connect and operate the equipment in accordance with the manufacturer's instructions.
- Test and troubleshoot as described.

Alternate Procedure:

- Use the following equipment:
 - Ammeter, 0 – 400 A
 - Voltmeter, 0 – 20 V (accurate within 0.1 volt)
 - Tachometer, 0 – 1,200 rpm
- Hook up a voltmeter and ammeter as shown.

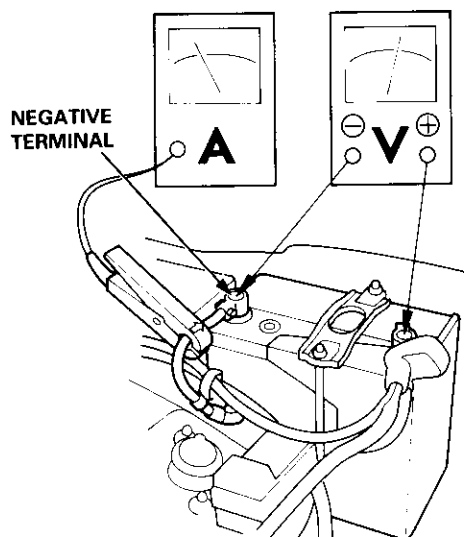


NOTE: After this test, or any subsequent repair, reset the ECM/PCM to clear any codes (see section 11).

Check the Starter Engagement:

1. Remove the No. 44 (15 A) fuse from the under-hood fuse/relay box.
2. Turn the ignition switch to START (III) with the shift lever in **N** or **P** position (A/T) or with the clutch pedal depressed (M/T). The starter should crank the engine.
 - If the starter does not crank the engine, go to step 3.
 - If it cranks the engine erratically or too slowly, go to "Check for Wear and Damage" on the next page.

3. Check the battery, battery positive cable, ground, starter cut relay, and the wire connections for looseness and corrosion. Test again. If the starter still does not crank the engine, go to step 4.
4. Unplug the connector (BLK/WHT wire and solenoid terminal) from the starter.
5. Connect a jumper wire from the battery positive (+) terminal to the solenoid terminal. The starter should crank the engine.

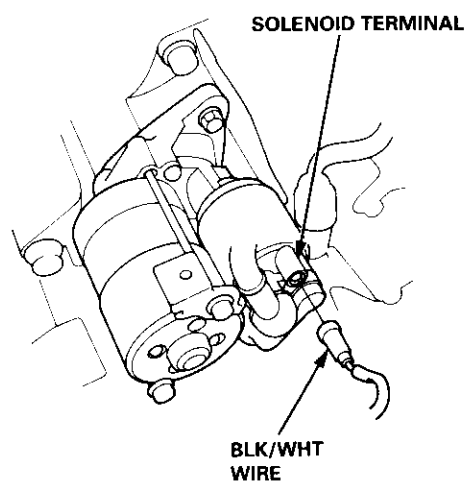

- If the starter still does not crank the engine, remove it, and diagnose its internal problem.
 - If the starter cranks the engine, go to step 6.
6. Check the ignition switch (see page 23-75).
 7. Check the starter cut relay and clutch interlock switch (see page 23-72, 73).
 8. Check the A/T gear position switch (see page 23-138).
 9. Check for an open in the wire between the ignition switch and starter.

(cont'd)

Starting System

Starter Test (cont'd)

Check for Wear and Damage

The starter should crank the engine smoothly and steadily. If the starter engages, but cranks the engine erratically, remove it, and inspect the starter drive gear and torque converter or flywheel ring gear for damage.

- Check the drive gear overrunning clutch for binding or slipping when the armature is rotated with the drive gear held.
— If damaged, replace the gears.

Check Cranking Voltage and Current Draw

Cranking voltage should be no less than 8.5 volts. Current draw should be no more than 350 amperes.

If cranking voltage is too low, or current draw too high, check for:

- dead or low battery.
- open circuit in starter armature commutator segments.
- starter armature dragging.
- shorted armature winding.
- excessive drag in engine.

Check Cranking rpm

Engine speed during cranking should be above 100 rpm. If speed is too low, check for:

- loose battery or starter terminals.
- excessively worn starter brushes.
- open circuit in commutator segments.
- dirty or damaged helical spline or drive gear.
- defective drive gear overrunning clutch.

Check Starter Disengagement

With the shift lever in **N** or **P** position (A/T) or with the clutch pedal depressed (M/T), turn the ignition switch to START (III), and release to ON (II).


The starter drive gear should disengage from the torque converter or flywheel ring gear when you release the key.

If the drive gear hangs up on the torque converter or flywheel ring gear, check for:

- solenoid plunger and switch malfunction.
- dirty drive gear assembly or damaged overrunning clutch.

Starter Solenoid Test

1. Check the hold-in coil for continuity between the S terminal and the armature housing (ground). The coil is OK if there is continuity.

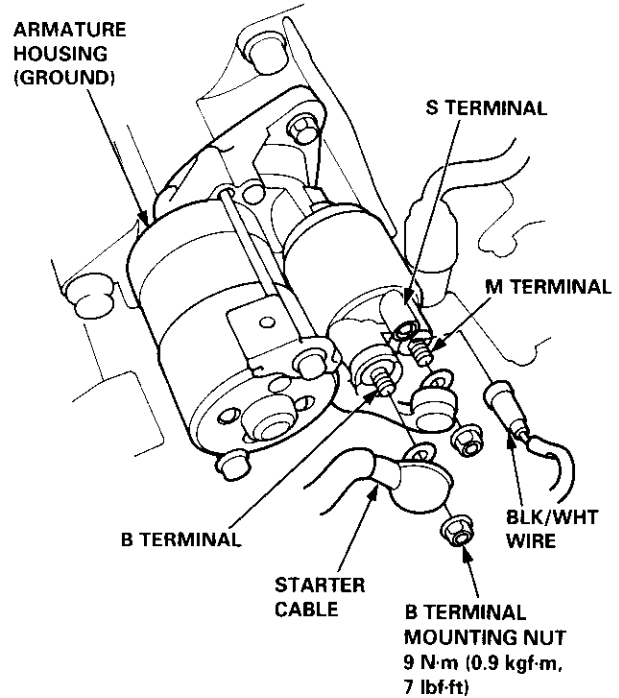

2. Check the pull-in coil for continuity between the S and M terminals. The coil is OK if there is continuity.




Armature Inspection and Test

1. Inspect the armature for wear or damage due to contact with the permanent magnet or field winding.

- If there is wear or damage, replace the armature.

Inspect for damage.


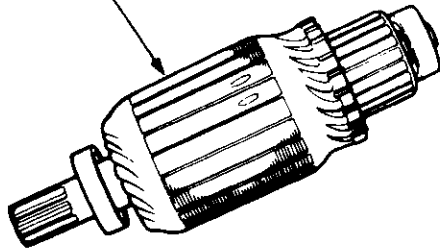


2. Check commutator surface and diameter.

- If the surface is dirty or burnt, resurface with emery cloth or a lathe within the following specifications, or recondition with #500 or #600 sandpaper.
- If commutator diameter is below the service limit, replace the armature.

Commutator Diameter

Standard (NEW)	Service Limit
28.0 – 28.1 mm (1.102 – 1.106 in)	27.5 mm (1.083 in)

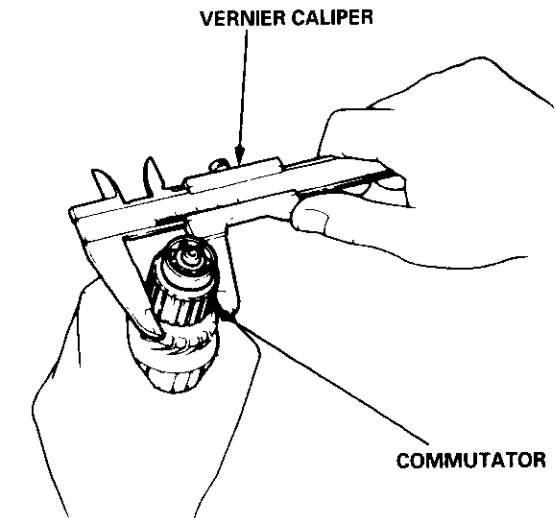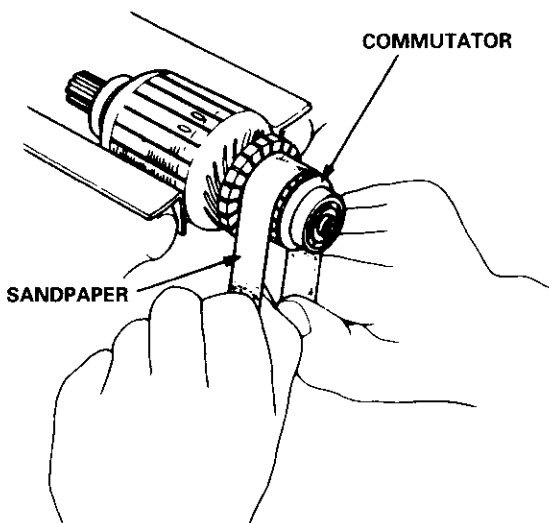


3. Measure the commutator runout.

- If the commutator runout is within the service limit, check the commutator for carbon dust or brass chips between the segments.
- If the commutator runout is not within the service limit, replace the armature.

Commutator Runout

Standard (NEW)	Service Limit
0 – 0.02 mm (0 – 0.0008 in)	0.05 mm (0.002 in)

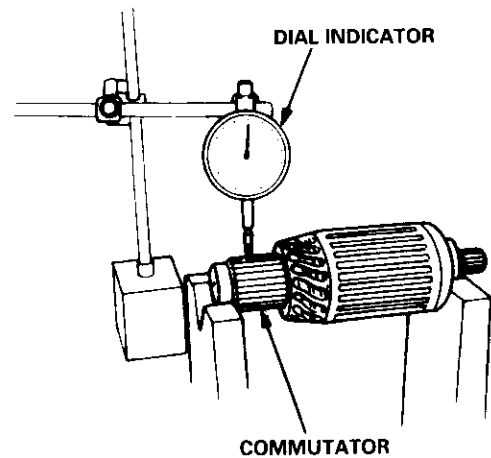


(cont'd)

Starting System

Armature Inspection and Test (cont'd)


4. Check for mica depth. If necessary, undercut mica with a hacksaw blade to achieve proper depth. If service limit cannot be maintained, replace the armature.

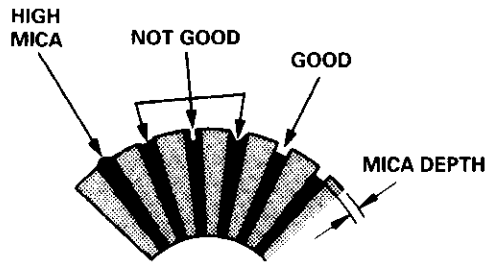


Commutator Mica Depth

Standard (NEW)	Service Limit
0.4 – 0.5 mm (0.016 – 0.02 in)	0.15 mm (0.006 in)

5. Check for continuity between the segments of the commutator. If an open circuit exists between any segments, replace the armature.

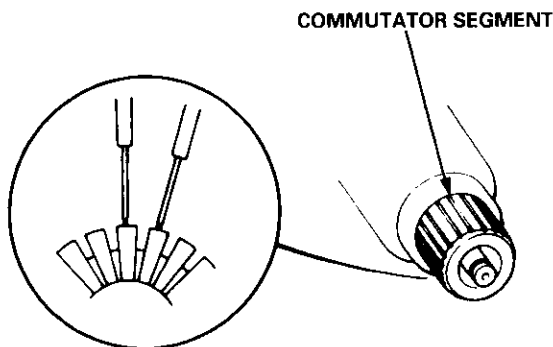


6. Place the armature on an armature tester. Hold a hacksaw blade on the armature core.

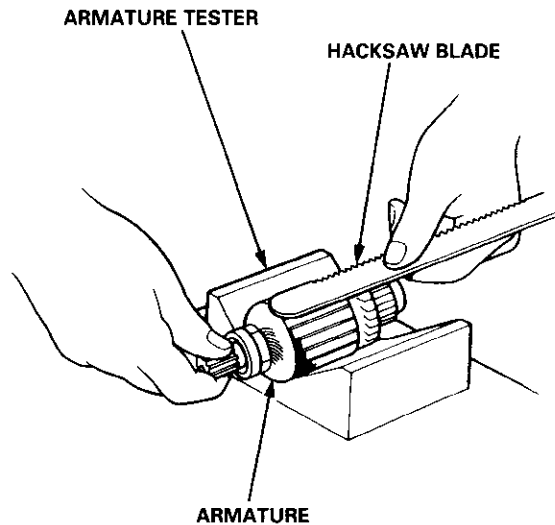

- If the blade is attracted to the core or vibrates while the core is turned, the armature is shorted. Replace the armature.


7. Check with an ohmmeter that no continuity exists between the commutator and armature coil core, and between the commutator and armature shaft. If there is continuity, replace the armature.

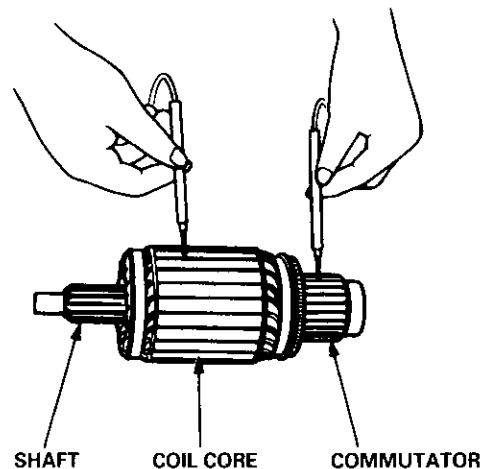




Brush Holder Test

1. Check that there is no continuity between the ⊕ and ⊖ brush holders.
If there is continuity, replace the brush holder assembly.

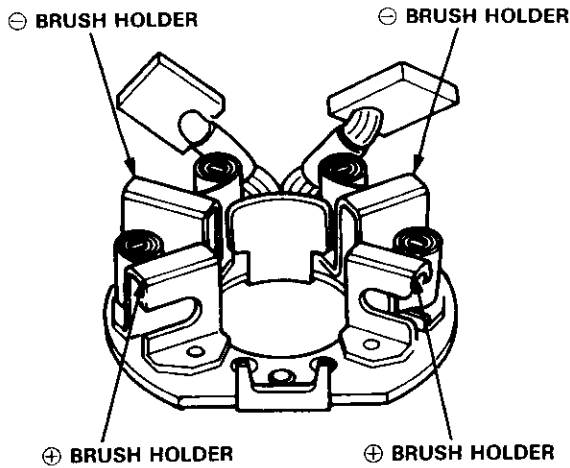

2. Insert the brush into the brush holder, and bring the brush into contact with the commutator, then attach a spring scale to the spring. Measure the spring tension at the moment the spring lifts off the brush.

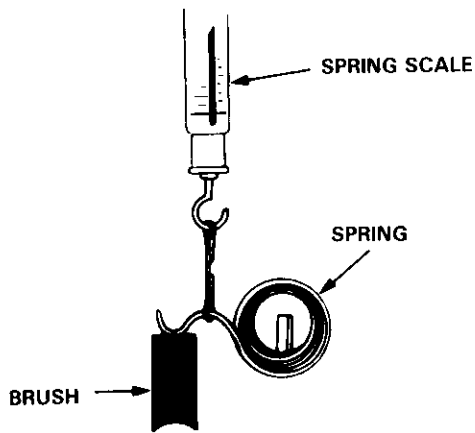


Spring Tension
15.7 – 17.7 N (1.60 – 1.80 kgf, 3.5 – 4.0 lbf)

Brush Inspection

Measure the brush length. If not within the service limit, replace the brush (or brush holder assembly).

Brush Length


Standard (NEW)	Service Limit
15.8 – 16.2 mm (0.62 – 0.64 in)	11.0 mm (0.43 in)

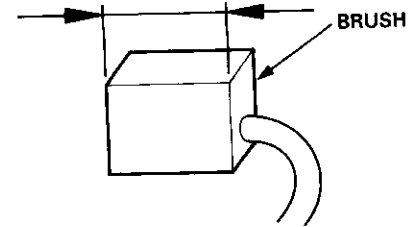

NOTE: To seat new brushes after installing them in their holders, slip a strip of #500 or #600 sandpaper, with the grit side up, over the commutator and smoothly rotate the armature. The contact surface of the brushes will be sanded to the same contour as the commutator.

Overrunning Clutch Inspection


1. Slide the overrunning clutch along the shaft. Does it move freely? If not, replace it.
2. Rotate the overrunning clutch both ways. Does it lock in one direction and rotate smoothly in reverse? If it does not lock in either direction or it locks in both directions, replace it.

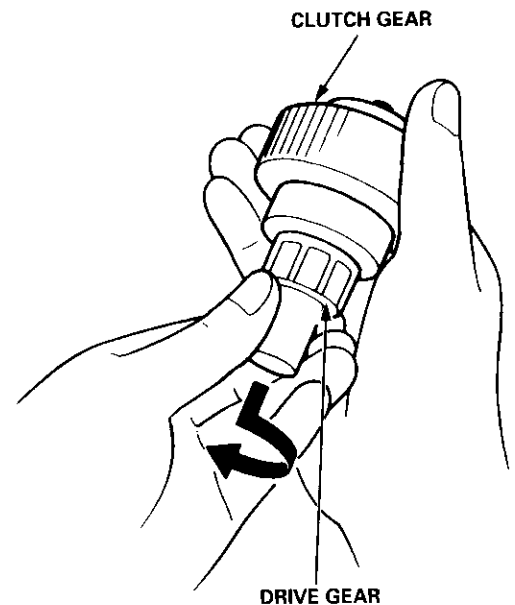

Starting System


Starter Reassembly

1. Disconnect the battery negative cable.
2. Disconnect the starter cable from the B terminal on the solenoid, then disconnect the BLK/WHT wire from the S terminal.

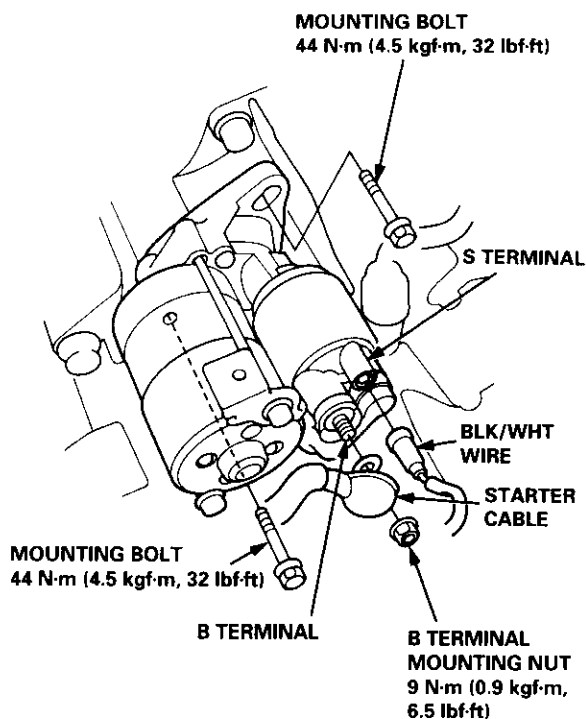

3. Remove the two bolts holding the starter, then remove the starter.
4. Install in the reverse order of removal.


NOTE: When installing the starter cable, make sure that the crimped side of the ring terminal is facing out.

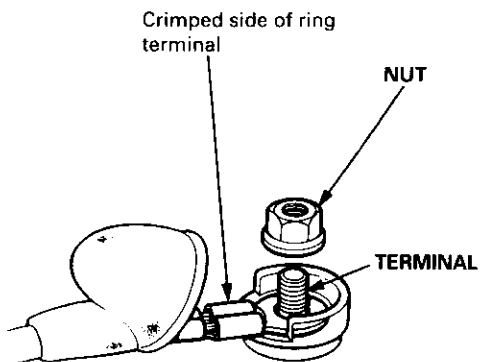


5. Connect the battery positive cable and negative cable to the battery.

Starter Reassembly


1. Pry back each brush spring with a screwdriver, then position the brush about halfway out of its holder, and release the spring to hold it there.

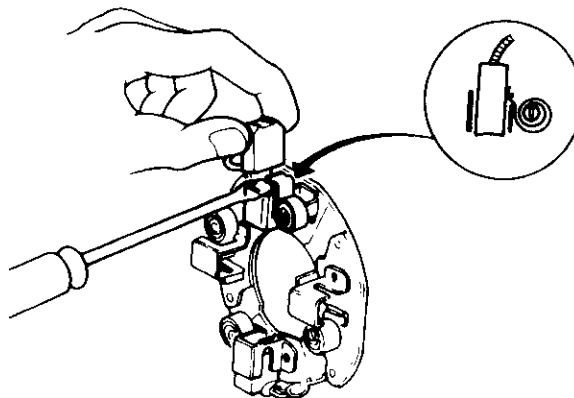

2. Install the armature in the housing. Next, pry back each brush spring again, and push the brush down until it seats against the commutator, then release the spring against the end of the brush.

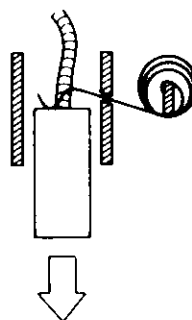

3. Install the end cover on the brush holder.

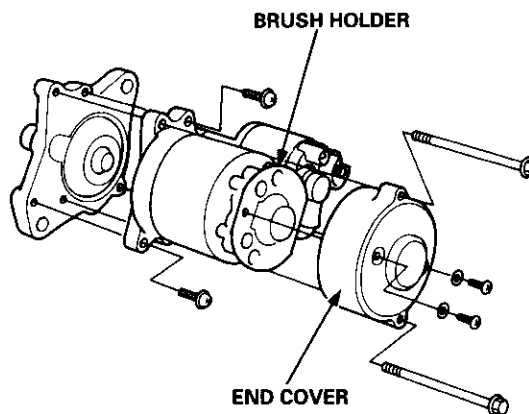




Performance Test

NOTE: Before starting the following checks, disconnect the wire from terminal M, and make a connection as described below using as heavy a wire as possible (preferably equivalent to the wire used for the car).

Pull-in Coil Test:

Connect the battery as shown. If the starter pinion pops out, it is working properly.


CAUTION: Do not leave the battery connected for more than 10 seconds.

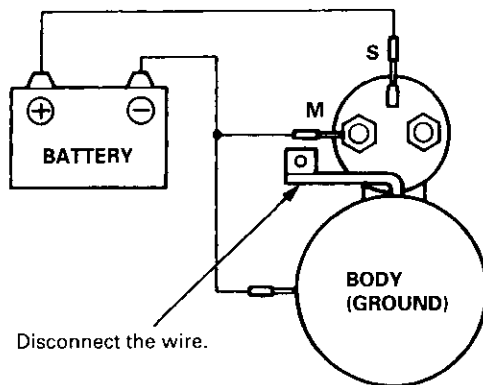

Hold-in Coil Test:

Disconnect the battery from the M terminal. If the pinion does not retract, the hold-in coil is working properly.


CAUTION: Do not leave the battery connected for more than 10 seconds.

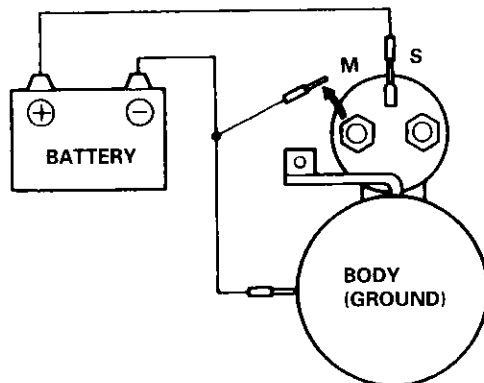

Retracting Test:


Disconnect the battery also from the body. If the pinion retracts immediately, it is working properly.

CAUTION: Do not leave the battery connected for more than 10 seconds.

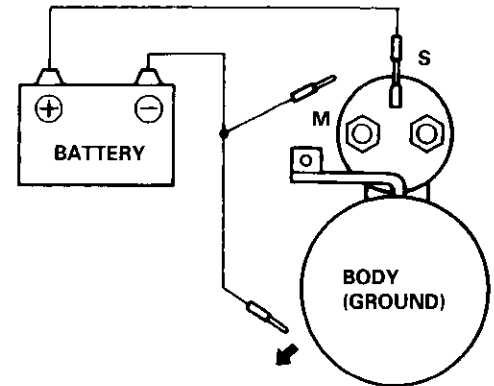

Starter No-load Test:

1. Clamp the starter firmly in a vise.
2. Connect the starter to the battery as described in the diagram below, and confirm that the motor starts and keeps rotating.

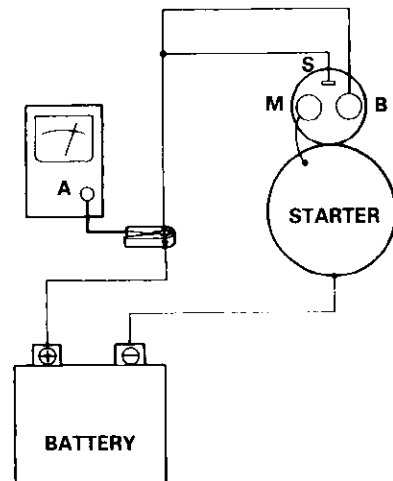

3. If the electric current and motor speed meet the specifications when the battery voltage is at 11.5 V, the starter is working properly.

Specifications:


80 A or less (Electric current), 2,600 rpm or more (Motor-speed)

Ignition System

Component Location Index

IGNITION TIMING CONTROL SYSTEM


- Troubleshooting, section 11
- Idle speed Inspection/Adjustment, section 11
- Inspection and Setting, page 23-91

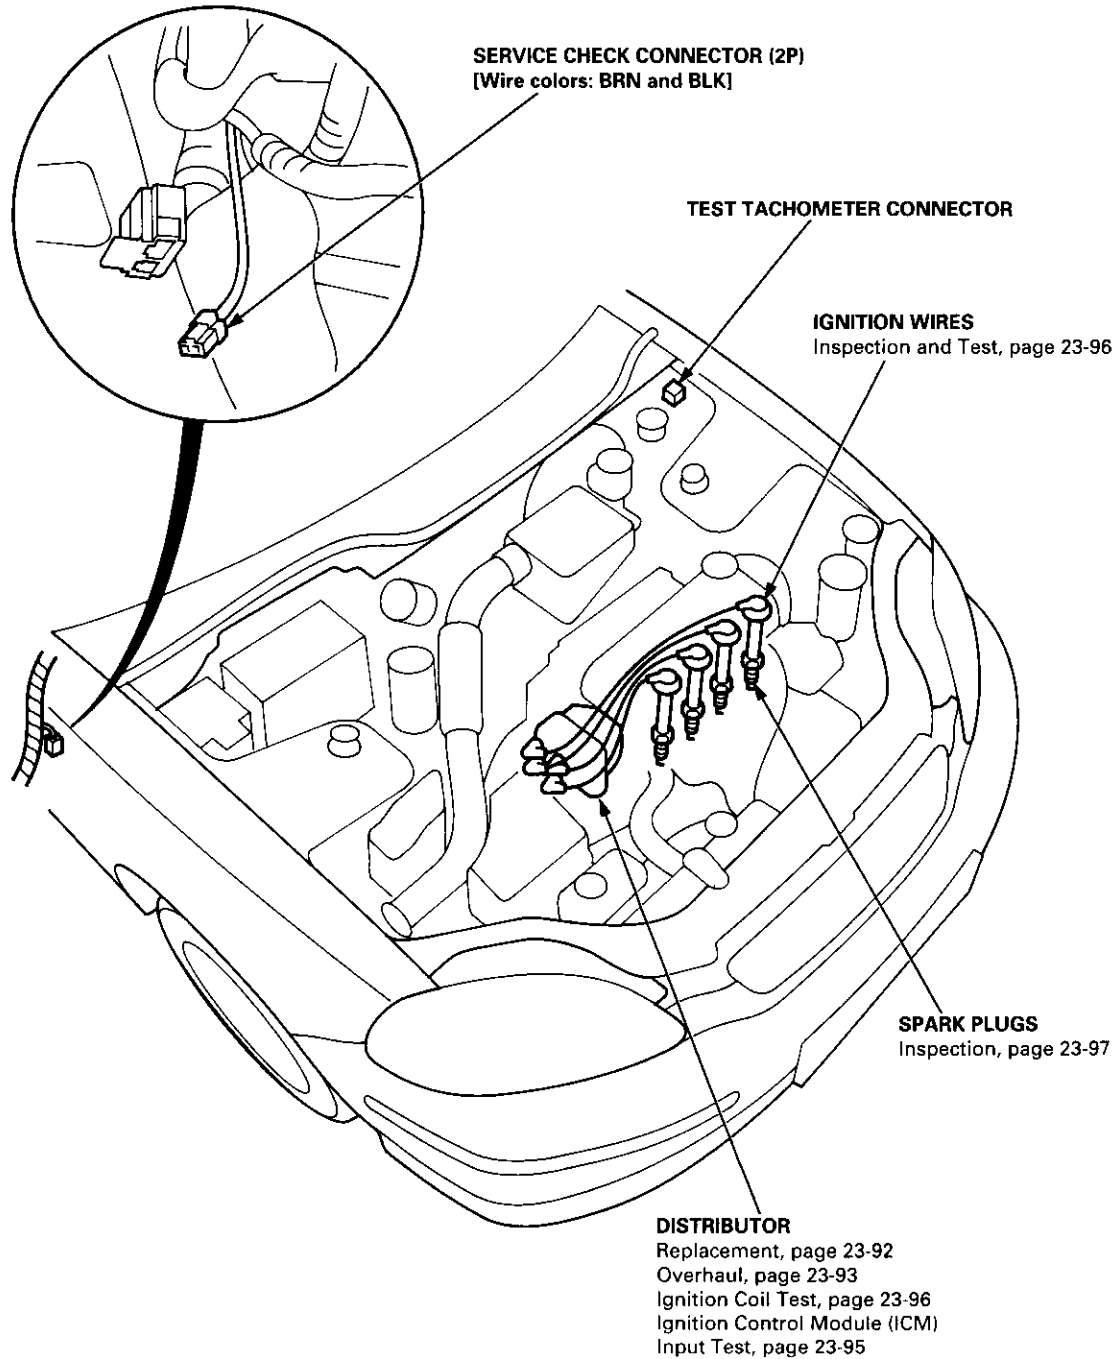

Ignition System




Circuit Diagram : 96, 97 models

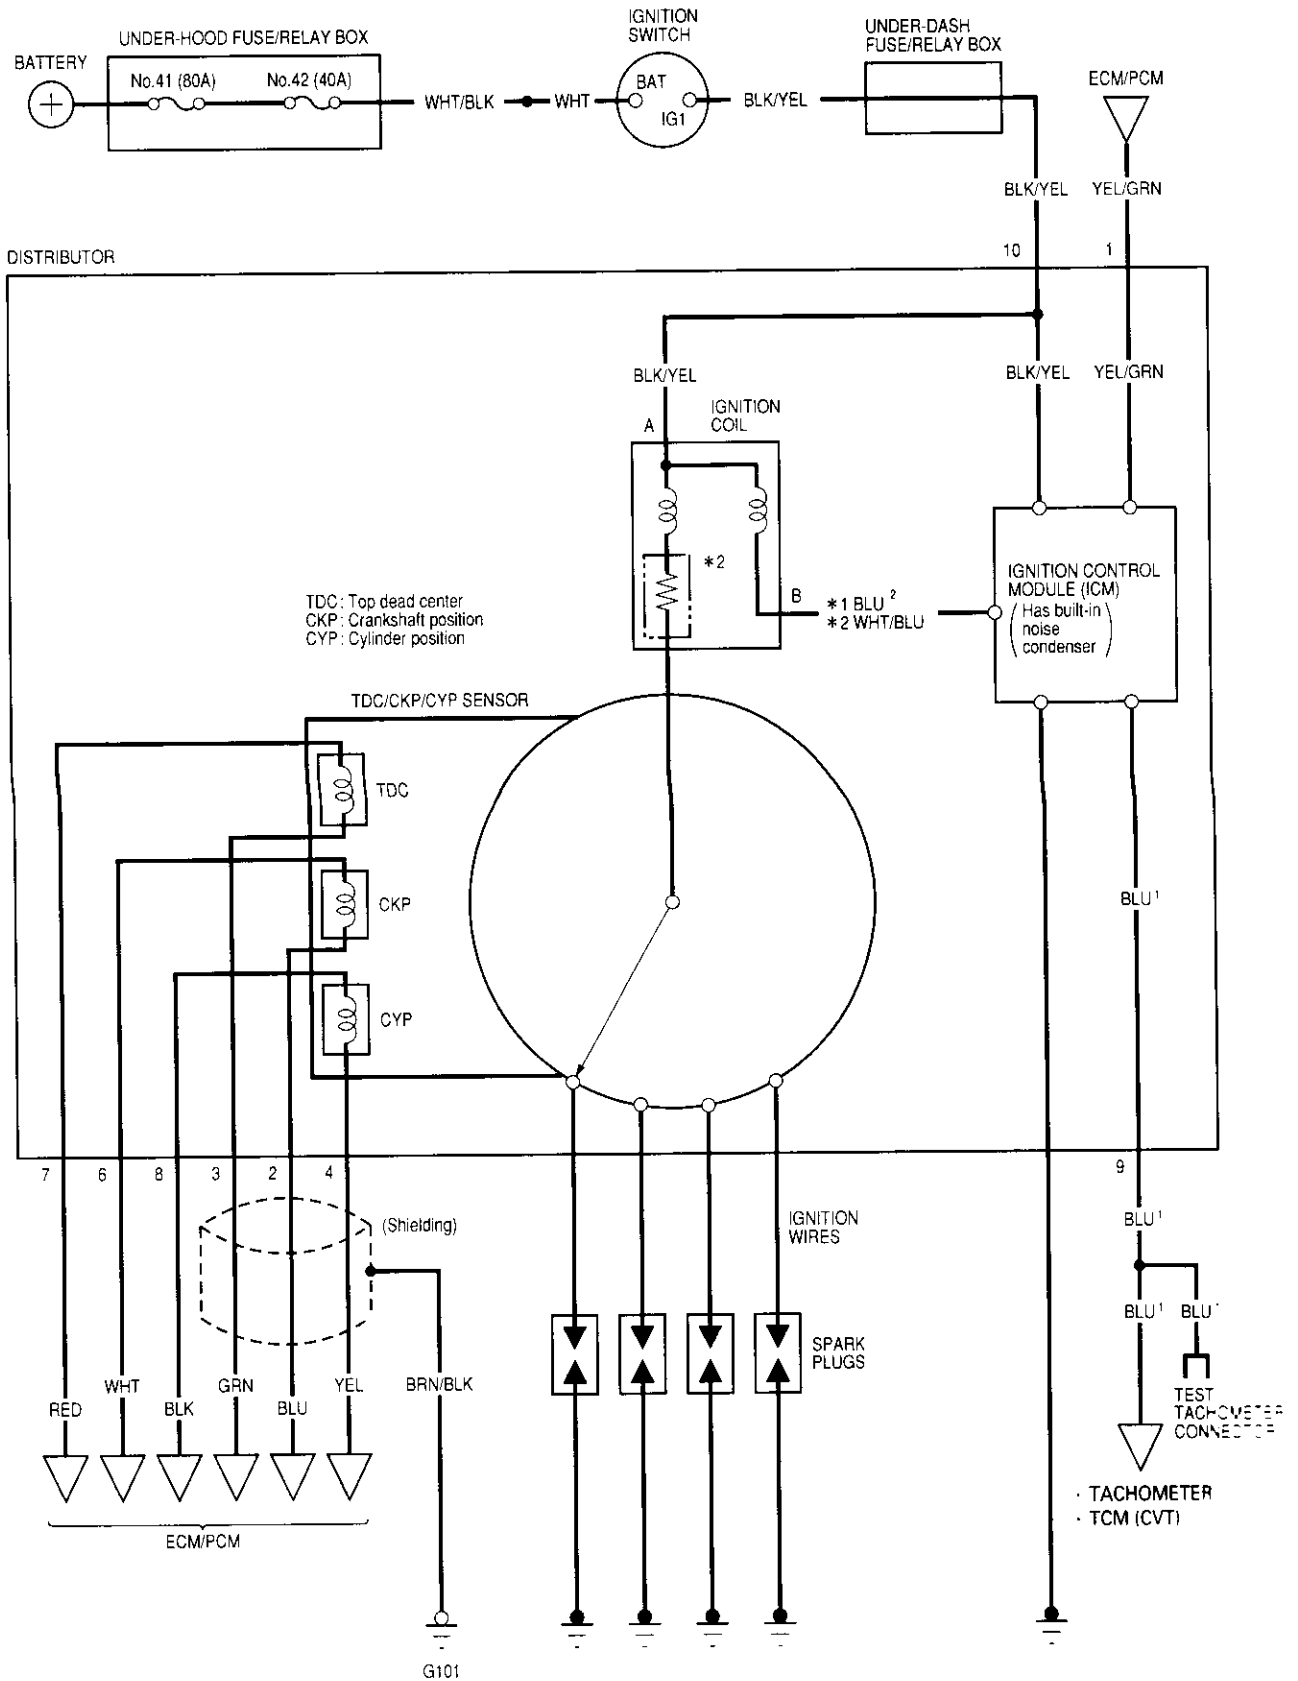

Ignition System

Circuit Diagram : 98 model

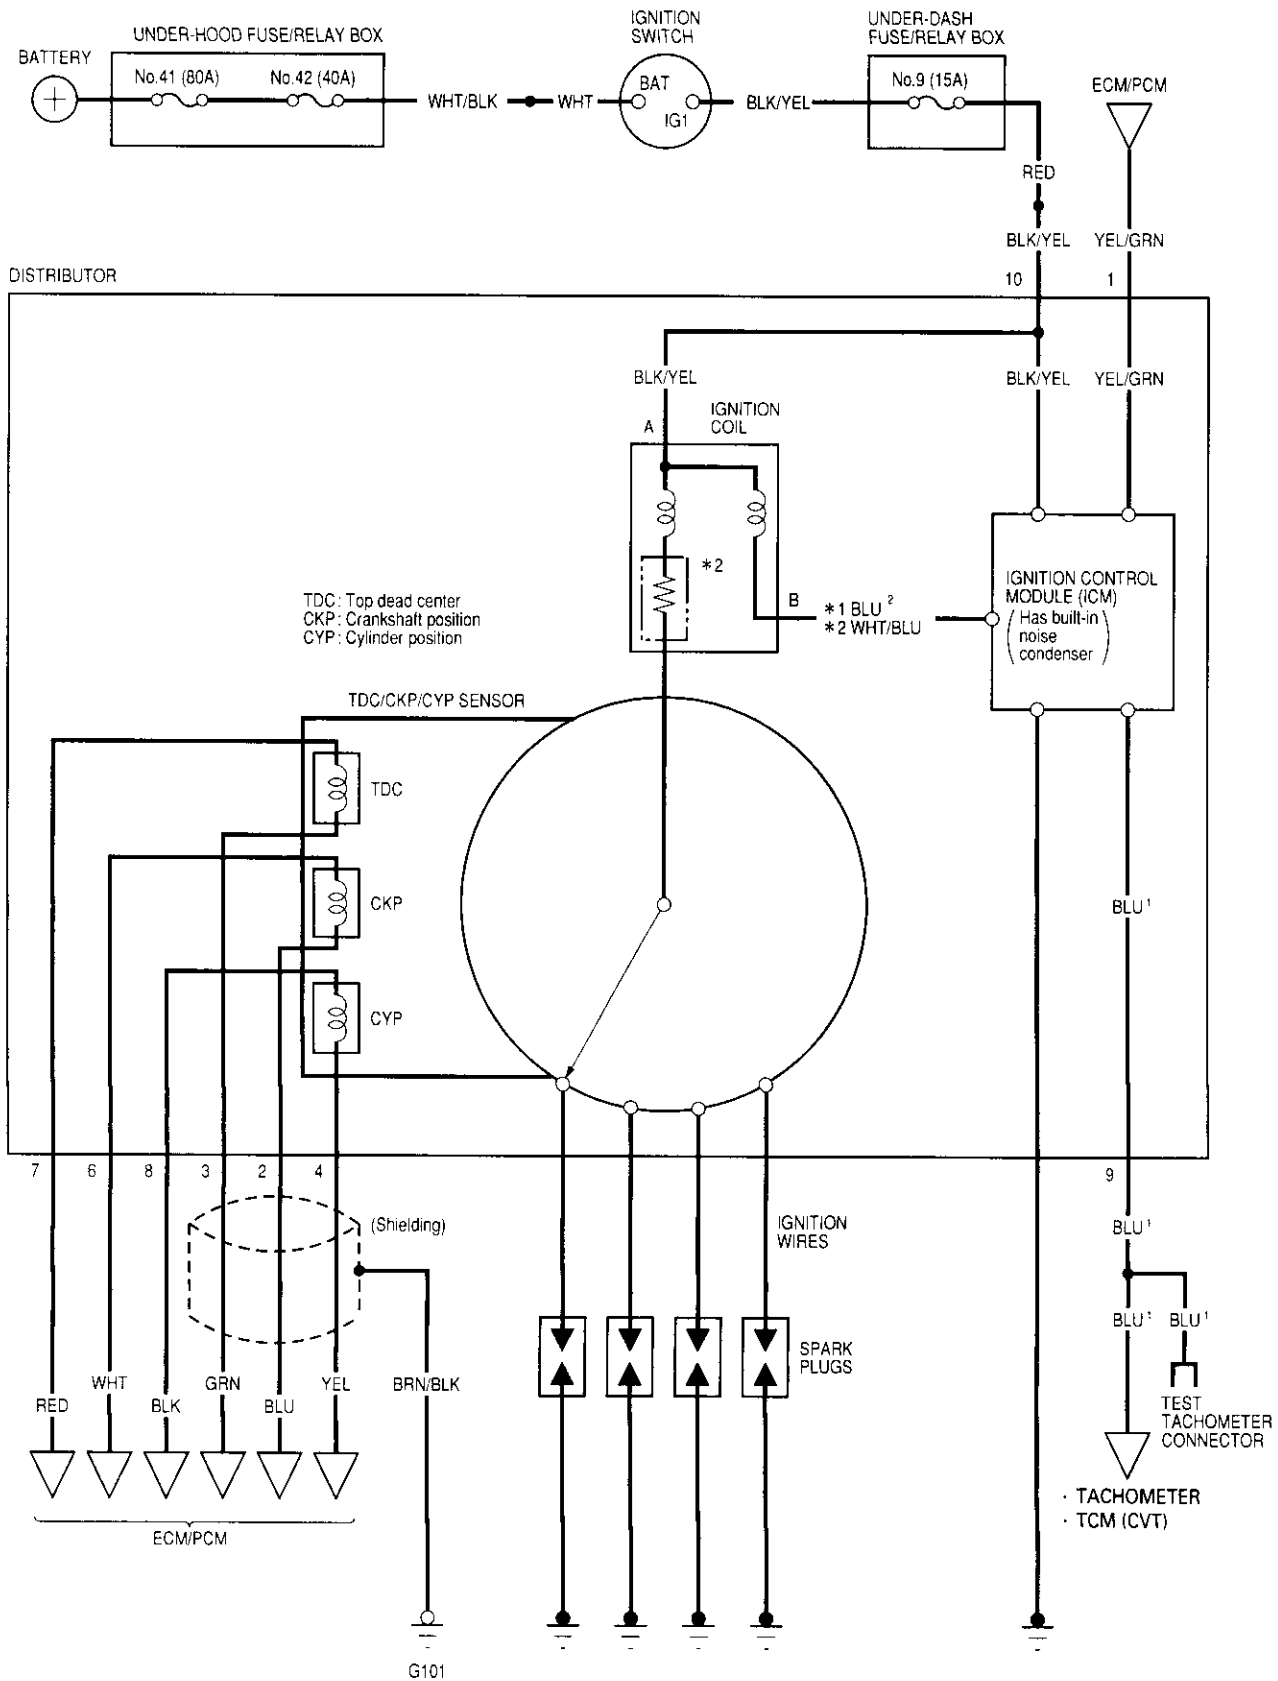




Ignition Timing Inspection and Setting


1. Check the idle speed, and adjust it if necessary (see section 11).
2. Pull out the service check connector 2P (BRN and BLK wires) from the connector holder located under the dash on the front passenger side, then connect the SCS service connector (T/N 07PAZ - 0010100) to it.
3. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P**, M/T in neutral) until the radiator fan comes on, then let it idle.
4. Connect the timing light to the No. 1 ignition wire, then point the light toward the pointer on the timing belt cover.
5. Check the ignition timing in no load conditions: headlights, blower fan, rear window defogger, and air conditioner are not operating.

Ignition Timing:

M/T	$12^{\circ} \pm 2^{\circ}$ BTDC (RED) during idling in neutral
A/T	$12^{\circ} \pm 2^{\circ}$ BTDC (RED) during idling in N or P

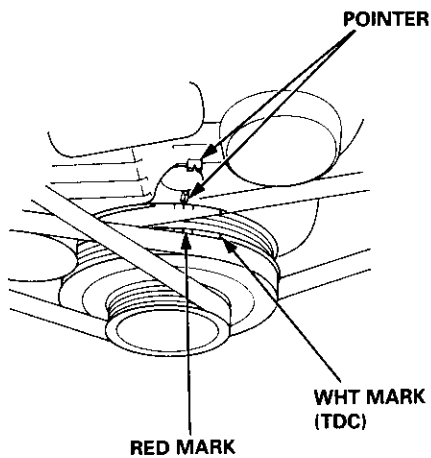

6. Adjust the ignition timing if necessary, as follows. Loosen the distributor mounting bolts, and turn the distributor ignition (DI) housing counterclockwise to advance the timing, or clockwise to retard the timing.

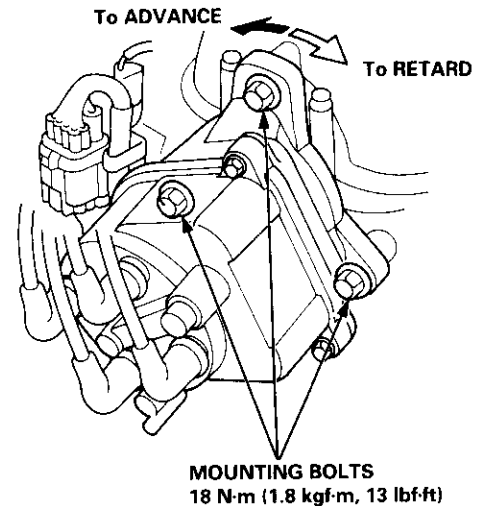


7. Tighten the distributor mounting bolts, and recheck the ignition timing.
8. Disconnect the SCS service connector from the service check connector.

Ignition System

Distributor Replacement

Removal:

1. Disconnect the connector from the distributor.
2. Disconnect the ignition wires from the distributor ignition (DI) cap.
3. Remove the mounting bolts from the distributor, then remove the distributor from the cylinder head.

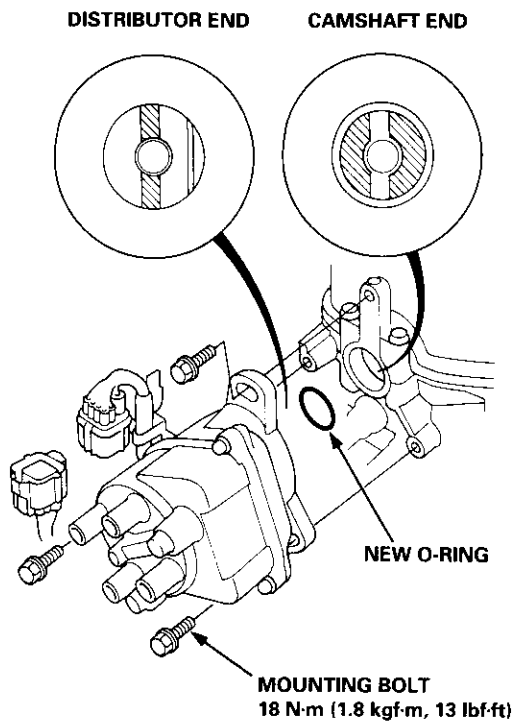

Installation:

NOTE: Before you install the distributor, bring the No. 1 piston to compression stroke TDC.


1. Coat a new O-ring with engine oil, then install it.
2. Slip the distributor into position.

NOTE: The lug on the end of the distributor and its mating grooves in the camshaft end are both offset to eliminate the possibility of installing the distributor 180° out of time.


3. Install the mounting bolts, and tighten them lightly.

4. Connect the ignition wires to the distributor ignition (DI) cap as shown.

HITACHI:

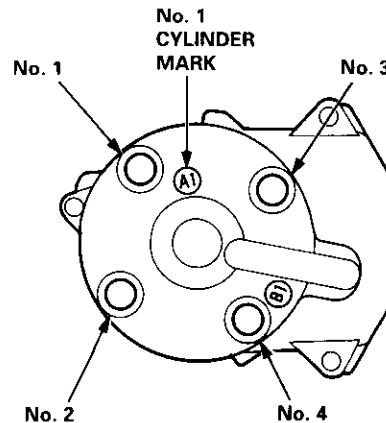

TEC:


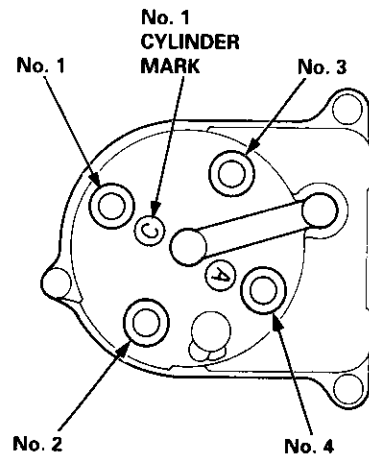


5. Connect the connector to the distributor.
6. Set the ignition timing (see previous page).
7. After setting the ignition timing, tighten the mounting bolts.



Distributor Overhaul

HITACHI:

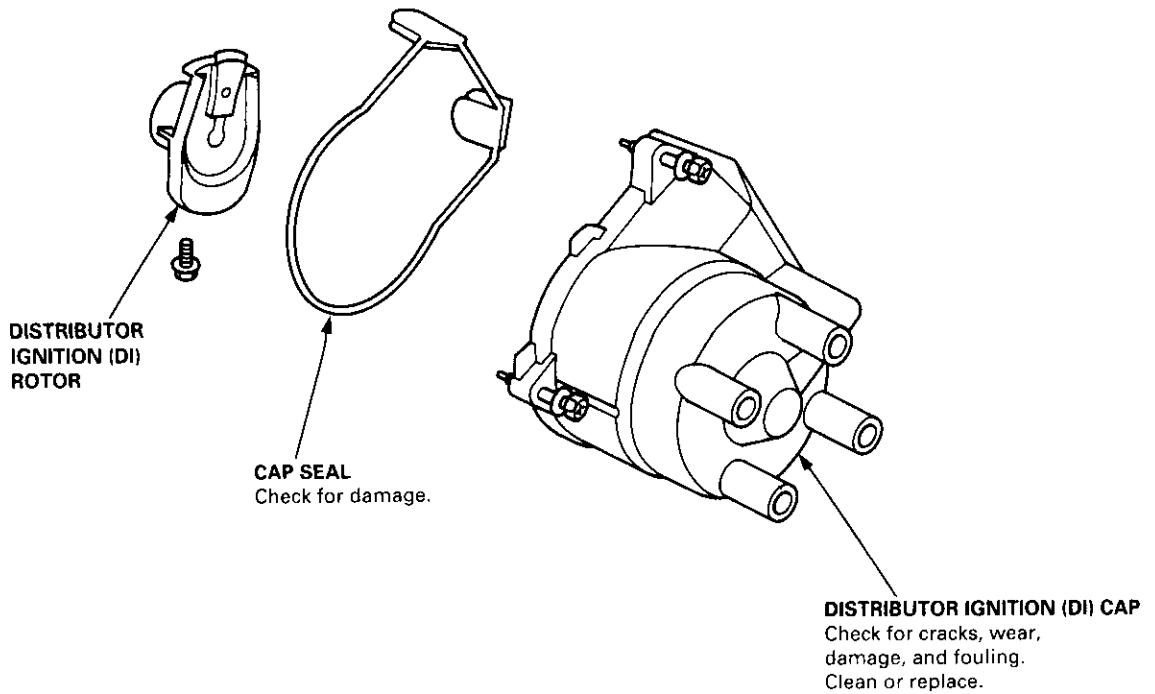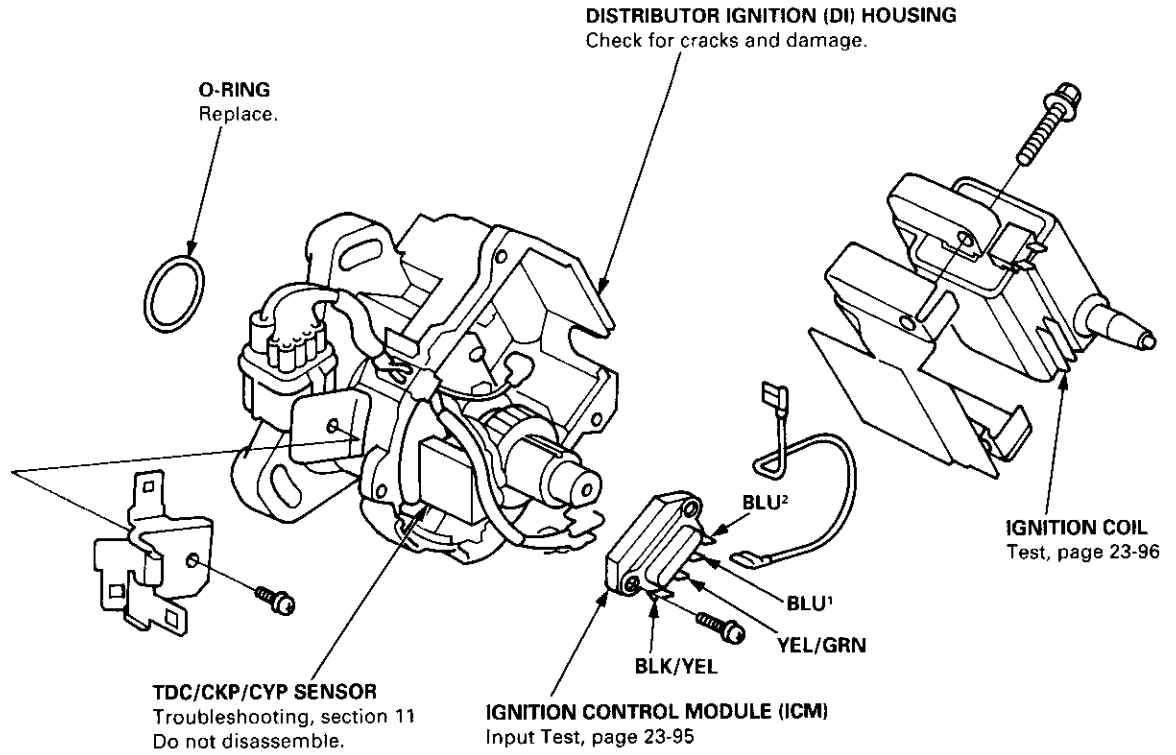


(cont'd)

Ignition System

Distributor Overhaul (cont'd)

TEC:

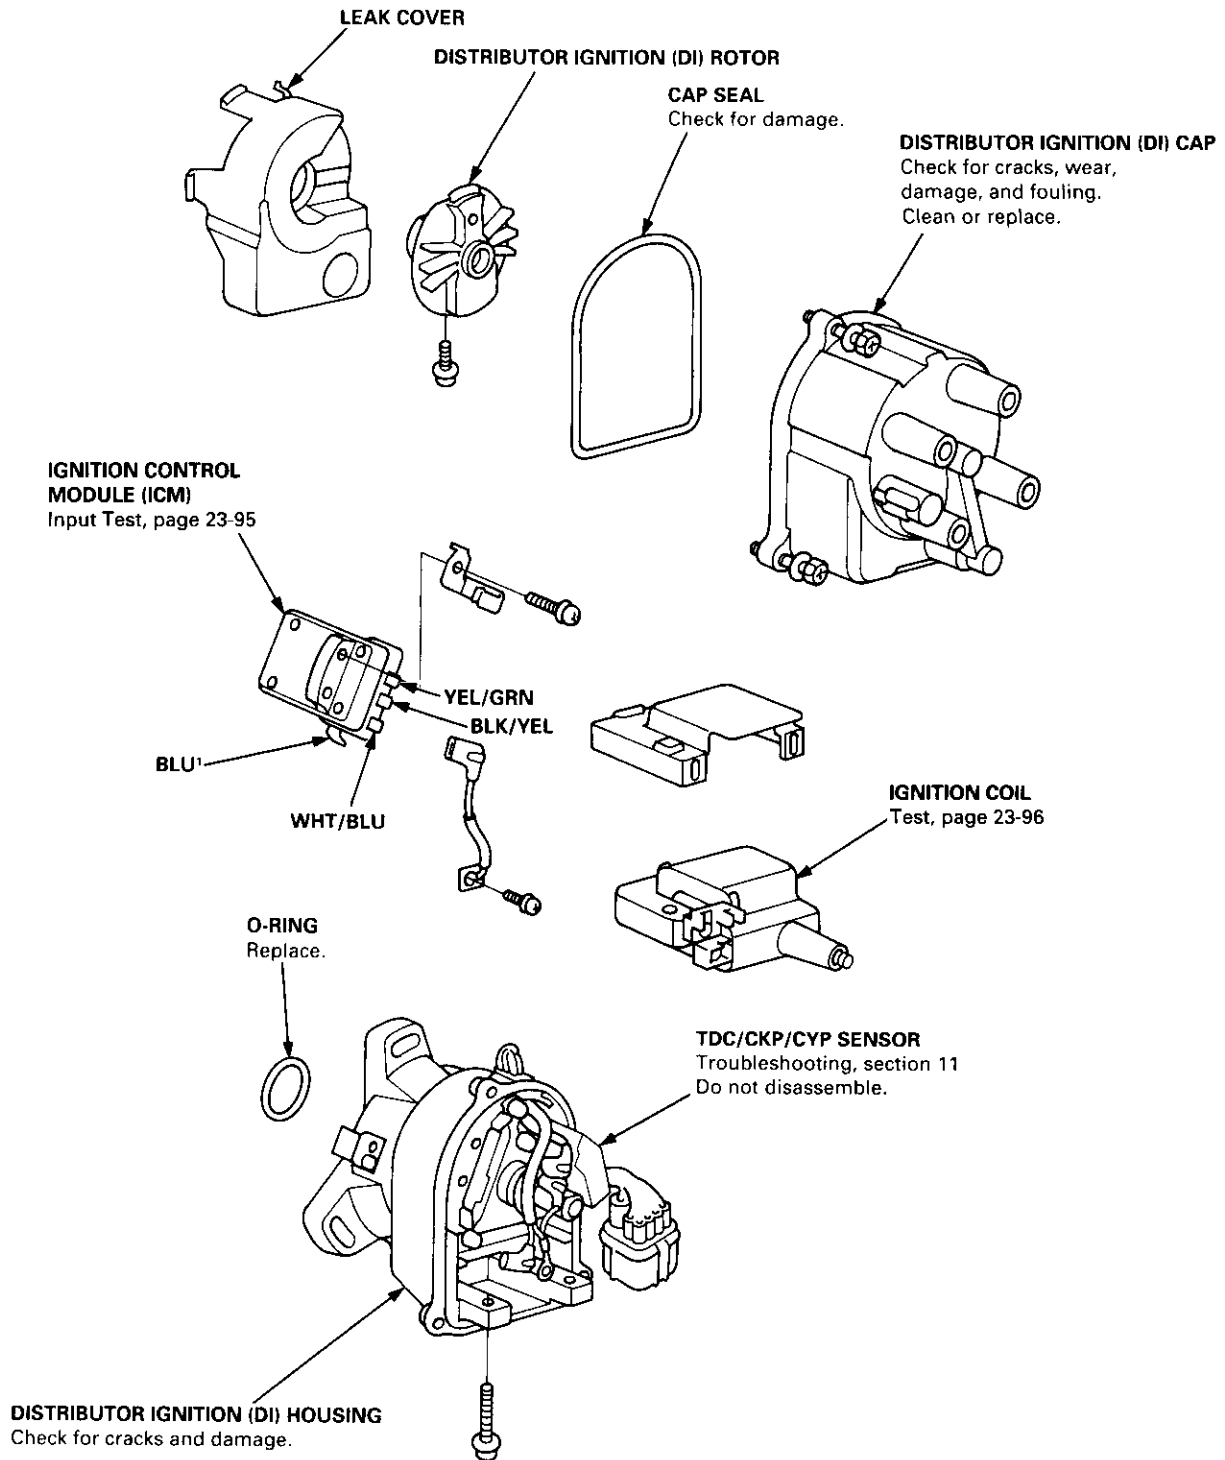




Ignition Control Module (ICM) Input Test

NOTE:


- See section 11 when the malfunction indicator lamp (MIL) turned on.
- Perform an input test for the ignition control module (ICM) after finishing the fundamental tests for the ignition system and the fuel and emissions systems.

1. Remove the distributor ignition (DI) cap, the distributor ignition (DI) rotor and the leak cover (TEC).
2. Disconnect the wires from the ICM.

HITACHI:

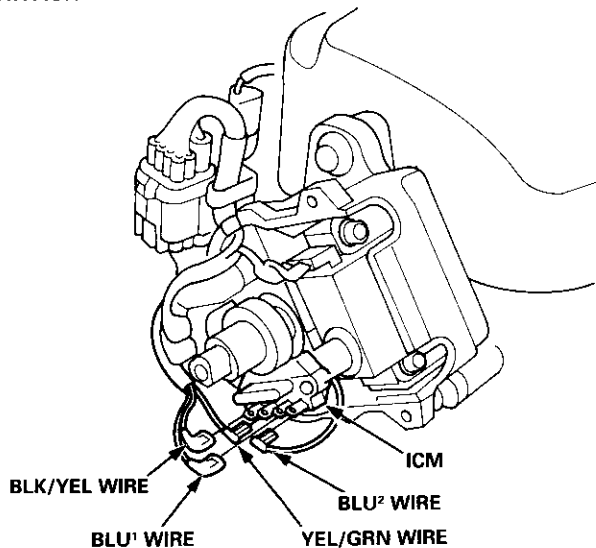

TEC:

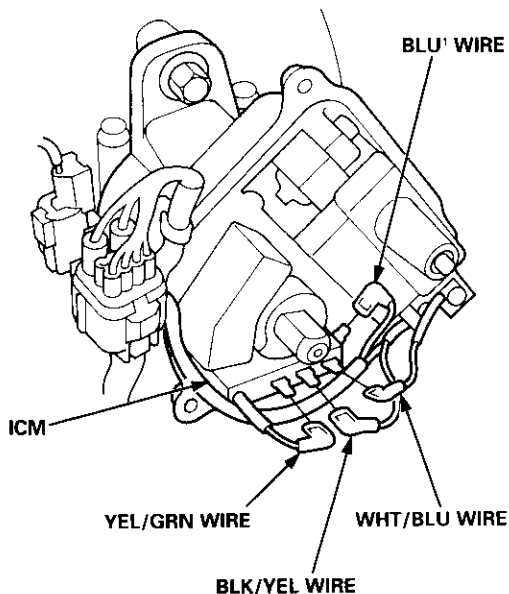

3. Turn the ignition switch ON (II). Check for voltage between the BLK/YEL wire and body ground. There should be battery voltage.
 - If there is no battery voltage, check the BLK/YEL wire between the under-dash fuse/relay box and the ICM.
 - If there is battery voltage, go to step 4.
4. Turn the ignition switch ON (II). Check for voltage between the wire*¹ and body ground. There should be battery voltage.
 - If there is no battery voltage, check:
 - the ignition coil.
 - the *¹wire between the ignition coil and the ICM.
 - If there is battery voltage, go to step 5.

*1: BLU² wire (HITACHI)
WHT/BLU wire (TEC)

5. Disconnect the ECM/PCM connector A (32P). Check for continuity on the YEL/GRN wire between the ECM/PCM and the ICM. There should be continuity.
6. Check for continuity on the YEL/GRN wire to body ground. There should be no continuity.
7. Check for continuity on the BLU¹ wire between the test tachometer connector and the ICM. There should be continuity.
8. Check for continuity on the BLU¹ wire to body ground. There should be no continuity.
9. If all the tests are normal, replace the ICM.

Ignition System

Ignition Coil Test

Using an ohmmeter, measure resistance between the terminals. If the resistance is not within specifications, replace the ignition coil.

NOTE: Resistance will vary with the coil temperature; specifications are at 68°F (20°C).

HITACHI:

Primary Winding Resistance


(Between the A and B terminals):

0.45 – 0.55 Ω

Secondary Winding Resistance

(Between the A and secondary winding terminals):

22.4 – 33.6 k Ω

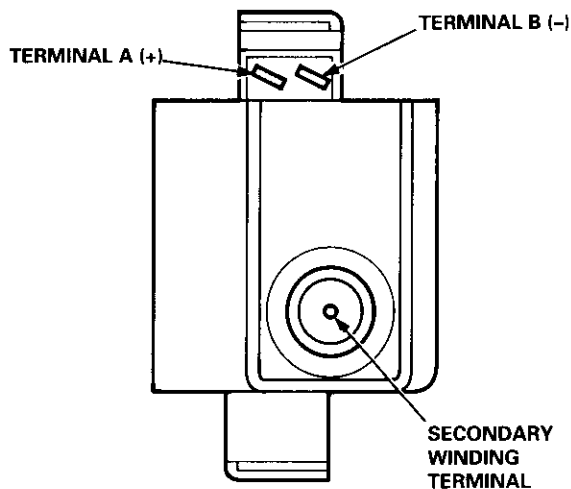

TEC:

Primary Winding Resistance


(Between the A and B terminals):

0.63 – 0.77 Ω

Secondary Winding Resistance

(Between the A and secondary winding terminals):


12.8 – 19.2 k Ω

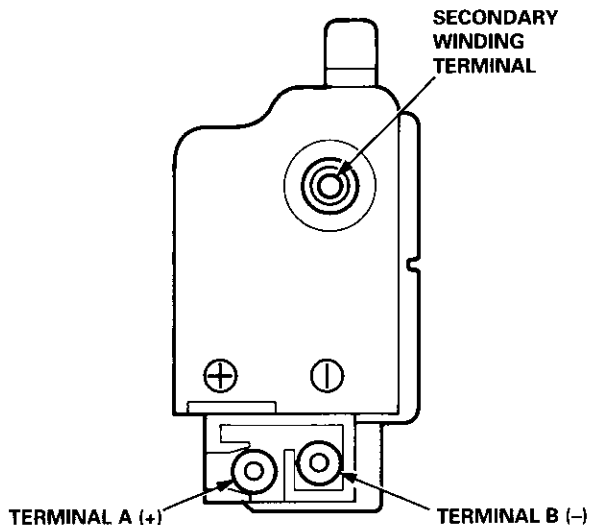

Ignition Wire Inspection and Test

CAUTION: Carefully remove the ignition wires by pulling on the rubber boots. Do not bend the wires; you might break them inside.


1. Check the condition of the ignition wire terminals. If any terminal is corroded, clean it, and if it is broken or distorted, replace the ignition wire.

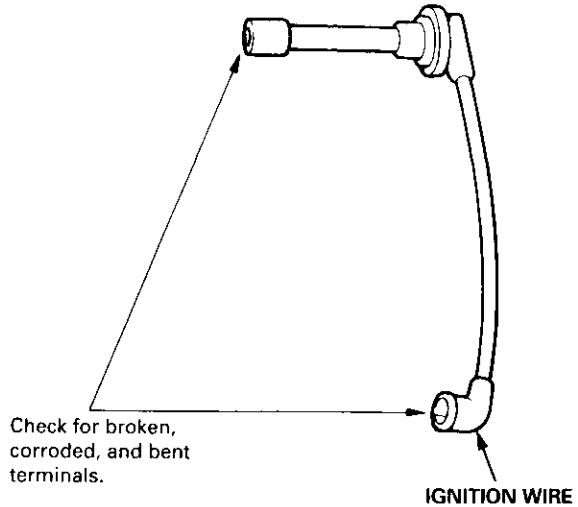

2. Connect ohmmeter probes and measure resistance.

Ignition Wire Resistance:

25 k Ω max. at 68°F (20°C)

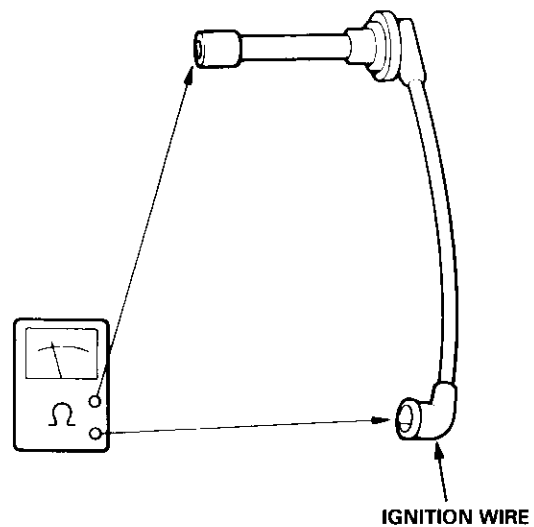

3. If resistance exceeds 25 k Ω , replace the ignition wire.

Ignition System

Ignition Coil Test

Using an ohmmeter, measure resistance between the terminals. If the resistance is not within specifications, replace the ignition coil.

NOTE: Resistance will vary with the coil temperature; specifications are at 68°F (20°C).

HITACHI:

Primary Winding Resistance


(Between the A and B terminals):

0.45 – 0.55 Ω

Secondary Winding Resistance

(Between the A and secondary winding terminals):

22.4 – 33.6 k Ω

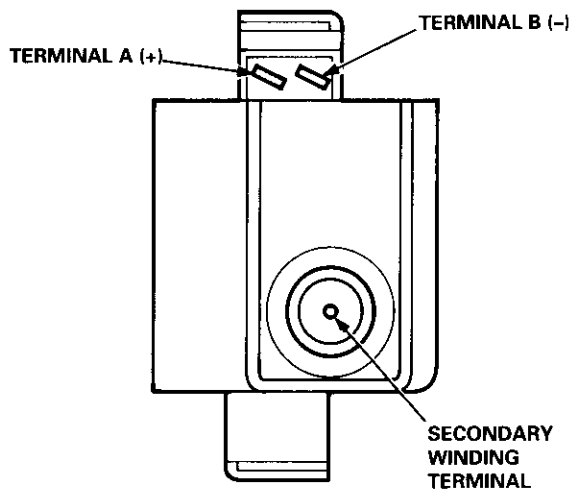

TEC:

Primary Winding Resistance


(Between the A and B terminals):

0.63 – 0.77 Ω

Secondary Winding Resistance

(Between the A and secondary winding terminals):


12.8 – 19.2 k Ω

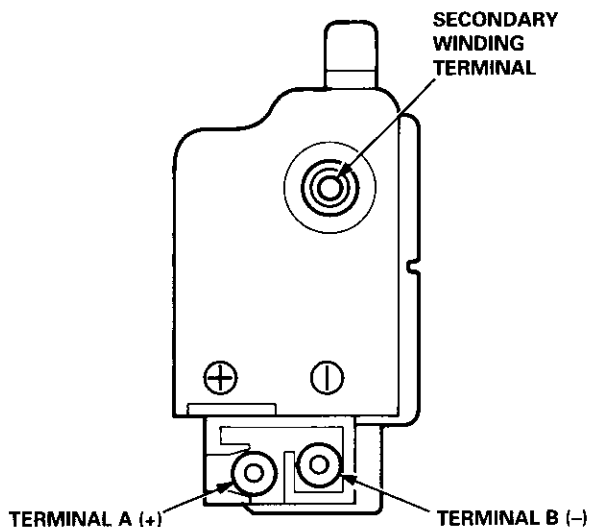

Ignition Wire Inspection and Test

CAUTION: Carefully remove the ignition wires by pulling on the rubber boots. Do not bend the wires; you might break them inside.


1. Check the condition of the ignition wire terminals. If any terminal is corroded, clean it, and if it is broken or distorted, replace the ignition wire.

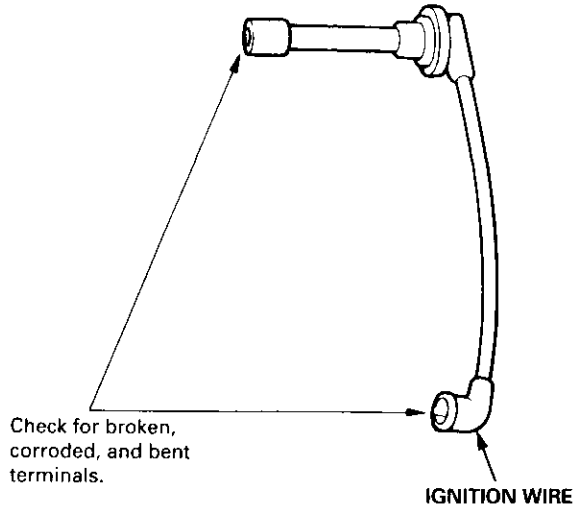

2. Connect ohmmeter probes and measure resistance.

Ignition Wire Resistance:

25 k Ω max. at 68°F (20°C)

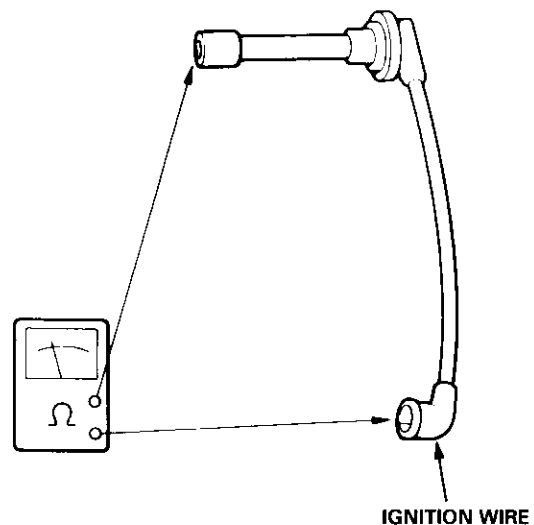


3. If resistance exceeds 25 k Ω , replace the ignition wire.



Spark Plug Inspection

1. Inspect the electrodes and ceramic insulator for:

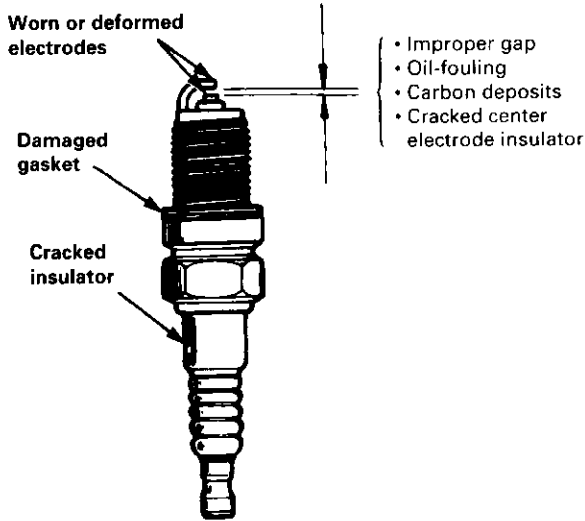

Burned or worn electrodes may be caused by:

- Advanced ignition timing
- Loose spark plug
- Plug heat range too low
- Insufficient cooling

Fouled plugs may be caused by:


- Retarded ignition timing
- Oil in combustion chamber
- Incorrect spark plug gap
- Plug heat range too high
- Excessive idling/low speed running
- Clogged air cleaner element
- Deteriorated ignition coil or ignition wires

2. Check the electrode gap.


- Adjust the gap with a suitable gapping tool.

Electrode Gap

Standard	1.1 \pm 0.1 mm (0.043 \pm 0.004 in)
----------	---

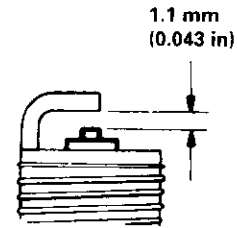

- Replace the plug if the center electrode is rounded as shown below:

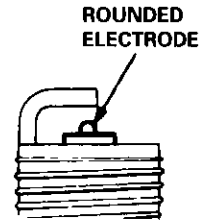


Engine Types	Spark Plugs
D16Y5	ZFR4F-11 (NGK) KJ14CR-L11 (DENSO)
D16Y7, D16Y8	ZFR5F-11 (NGK) KJ16CR-L11 (DENSO)

3. Apply a small quantity of anti-seize compound to the plug threads, and screw the plugs into the cylinder head finger-tight. Then torque them to 18 N·m (1.8 kgf·m, 13 lbf·ft).

Charging System


Component Location Index

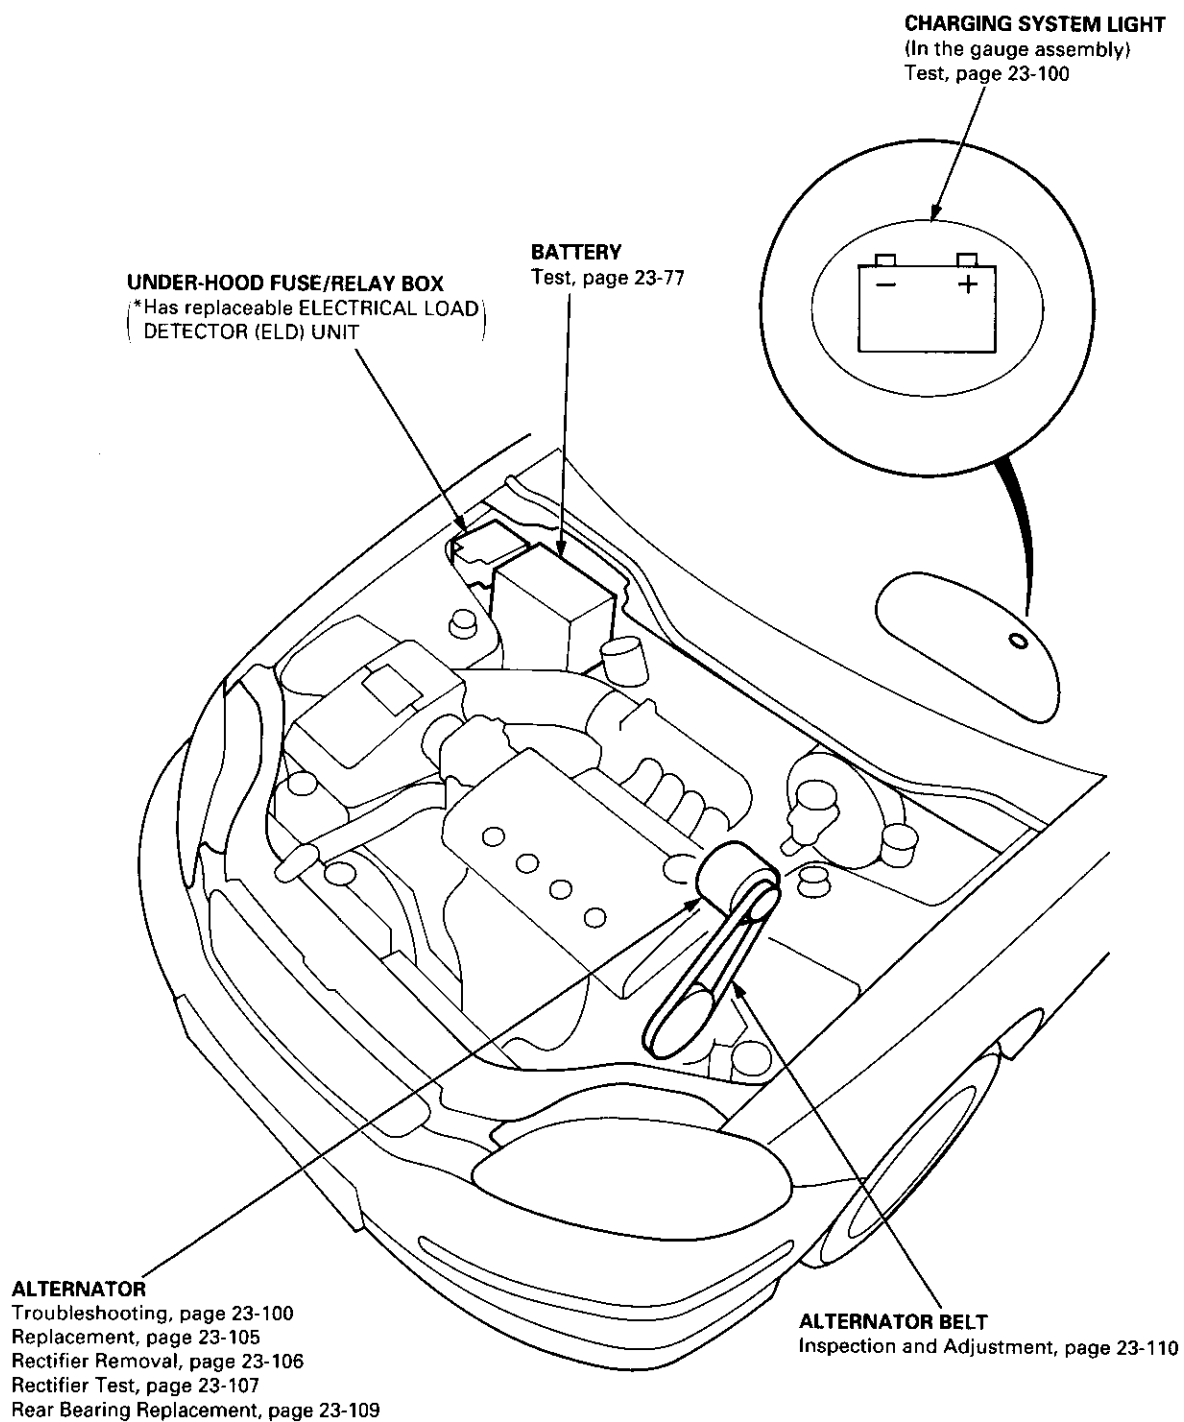

*ELD unit: USA



Circuit Diagram

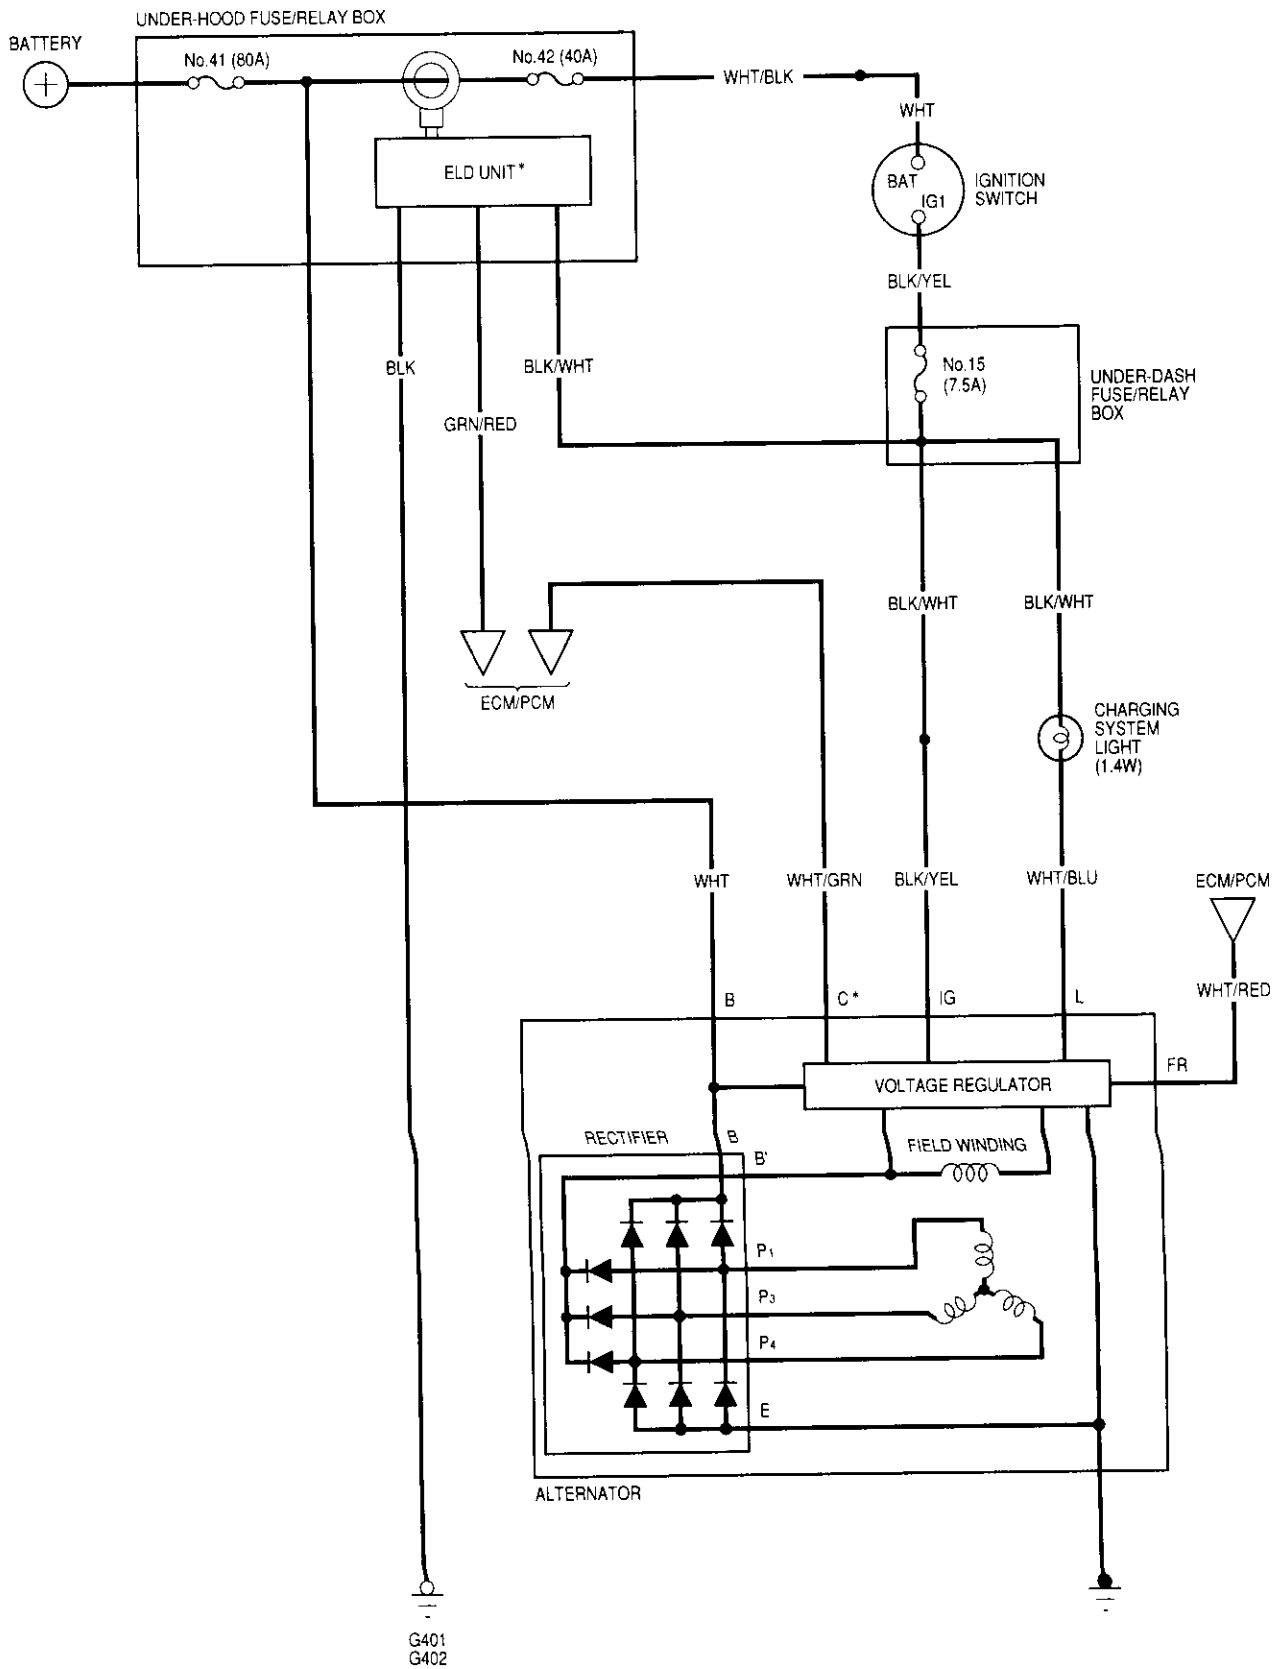

G401
G402

* : USA


Charging System

Troubleshooting


If the charging system light does not come on or does not go off, or the battery is dead or low, test the following items in the order listed below:

1. Battery (see page 23-77)
2. Charging system light
3. Voltage
4. Alternator control system (USA)
5. Alternator/regulator


Charging System Light Test

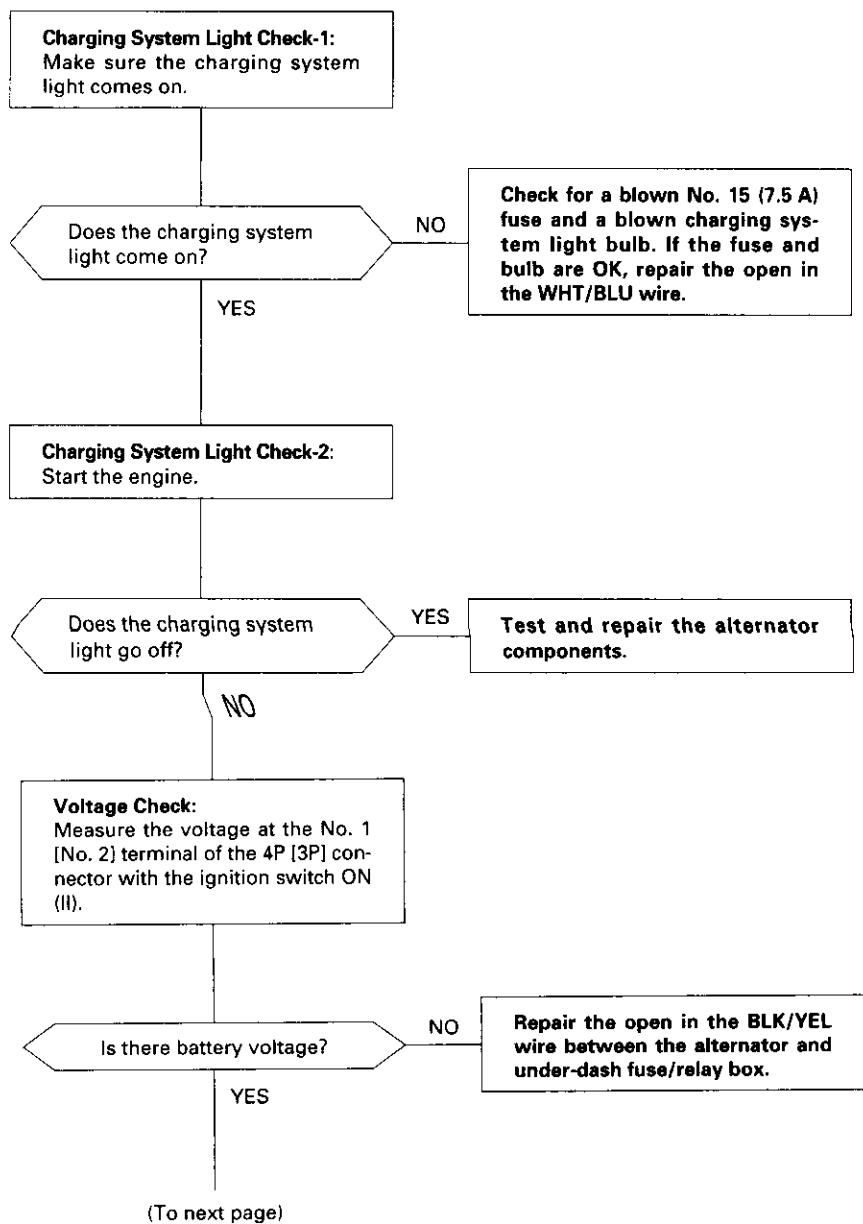

ALTERNATOR 4P CONNECTOR (USA)

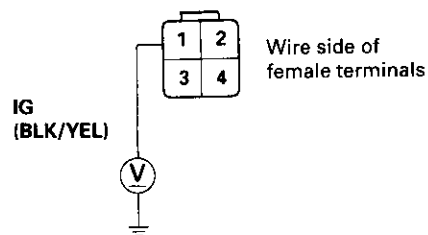

ALTERNATOR 3P CONNECTOR (Canada)

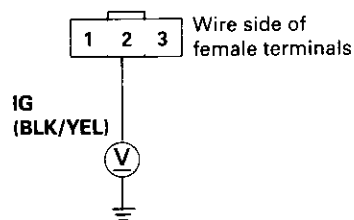

[]: Canada



(From previous page)

Check for an open in the L circuit-1:

1. Turn the ignition switch OFF.
2. Disconnect the 4P [3P] connector from the alternator.
3. Ground the No. 3 terminal of the 4P [3P] connector.
4. Turn the ignition switch ON (II).

Does the charging system light come on? **NO** → Turn the ignition switch OFF, and repair the open in the WHT/BLU wire.

YES


Check for an open in the L circuit-2:
Disconnect the No. 3 terminal of the 4P [3P] connector from the ground.

Does the charging system light go off? **YES** → Test and repair the alternator components.




NO

Turn the ignition switch OFF, and repair the short to ground in the WHT/BLU wire.

ALTERNATOR 4P CONNECTOR (USA)

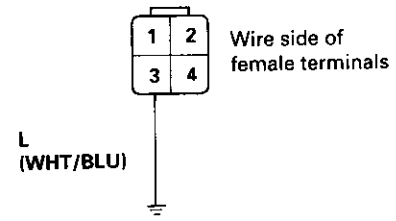

ALTERNATOR 3P CONNECTOR (Canada)

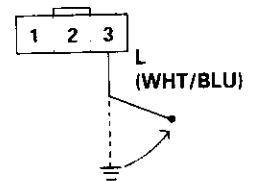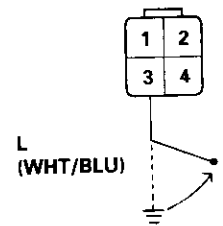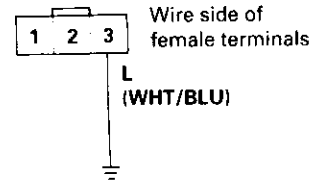

[]: Canada

(cont'd)

Charging System

Troubleshooting (cont'd)


Alternator Control System Test (USA)

NOTE: Before testing, check proper operation of the ELD by confirming with the MIL (see section 11).

Check for a short in the circuit (ALTC line):

1. Reconnect the 4P connector to the alternator.
2. Start the engine, and turn the headlights (high beam) ON.
3. Measure voltage between the 4P connector terminal No. 2 and the positive terminal of the battery.

CAUTION: Be sure to use a voltmeter with its plus terminal connected to battery plus and its minus terminal to the 4P connector terminal No. 2.

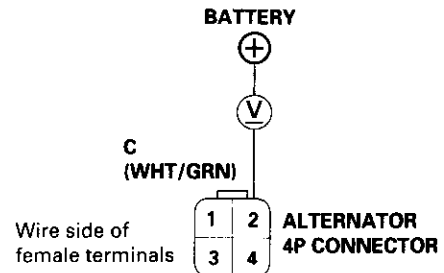


Is there 1 V or less?

YES

NO

Check for an open in the wire (ALTC line):

1. Turn the headlight and ignition switch OFF.
2. Disconnect the 32P connector from the ECM/PCM.
3. Check for continuity between the ECM/PCM 32P connector terminal No. 19 and alternator 4P connector terminal No. 2.

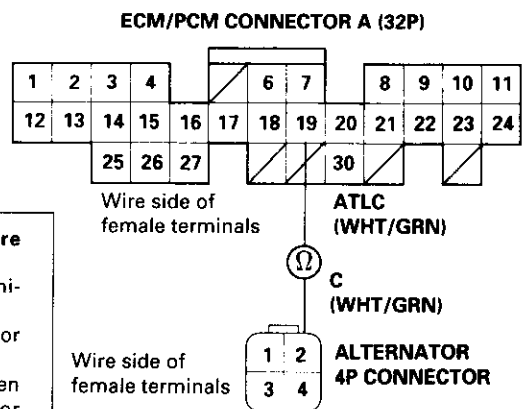

Is there continuity?

NO


Repair open in the wire between the alternator and ECM/PCM.

YES

Test and repair the alternator components.

Check for short in the wire (ALTC line):

1. Turn the headlight and ignition switch OFF.
2. Disconnect the 32P connector from the ECM/PCM.
3. Check for continuity between the ECM/PCM 32P connector terminal No. 19 and body ground.

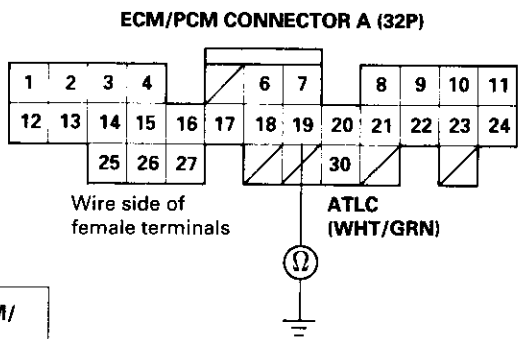

Is there continuity?

NO

YES

Substitute a known-good ECM/PCM, and recheck. If prescribed voltage is now available, replace the original ECM/PCM.

Repair short in the wire between the alternator and ECM/PCM.




Alternator/Regulator Test

NOTE: Make sure the battery is sufficiently charged (see page 23-77).


Alternator/Regulator Test-1:

1. Connect a Sun VAT-40 (or equivalent tester), and turn the selector switch to position 1 (starting).
2. Shift to neutral (A/T in **P** or **N**) position, and start the engine. Hold the engine at 3,000 rpm with no load until the radiator fan comes on, then let it idle.
3. Raise the engine speed to 2,000 rpm, and hold it there.

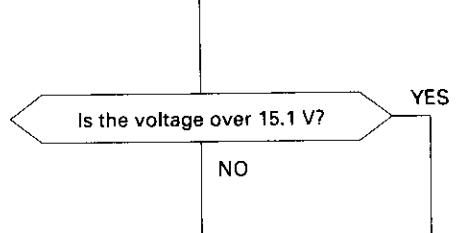

Alternator/Regulator Test-2:

1. Release the accelerator pedal, and let the engine idle.
2. Make sure all accessories are turned off. Turn the selector switch to position 2 (charging).
3. Remove the inductive pick-up, and zero the ammeter.
4. Place the inductive pick-up over the battery ground cable so that the arrow points to the battery negative terminal.
5. Raise the engine speed to 2,000 rpm, and hold it there.

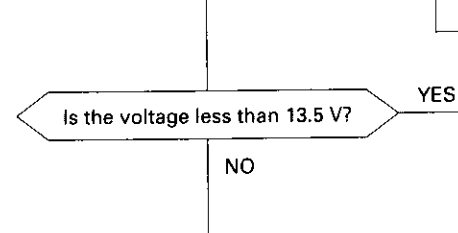


Alternator/Regulator Test-3:

Apply a load with a VAT-40 until the battery voltage drops to between 12 - 13.5 V.

2

To next page

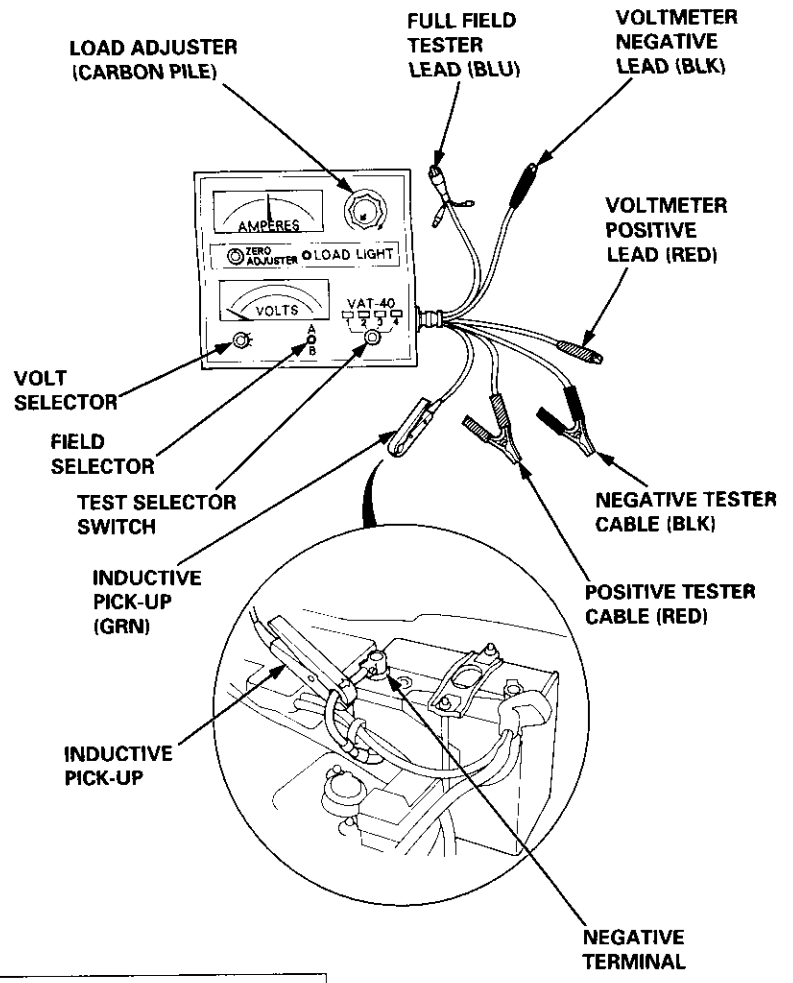

Replace the voltage regulator.

Test and repair the alternator components.

(cont'd)

Charging System

Troubleshooting (cont'd)

From previous page

2


Is the amperage 50 A or more? YES **The charging system is OK.**

NO

Alternator/Regulator Test-4:
With the engine speed still at 2,000 rpm, full-field the alternator.

CAUTION: The voltage will rise quickly when the alternator is full-fielded. Do not allow the voltage to exceed 18 V; it may damage the electrical system.

NOTE: Attach a probe to a VAT-40 full field test lead, and insert the probe into the full field access hole at the back of the alternator. Switch the field selector to the "A (Ground)" position momentarily, and check the amperage reading.

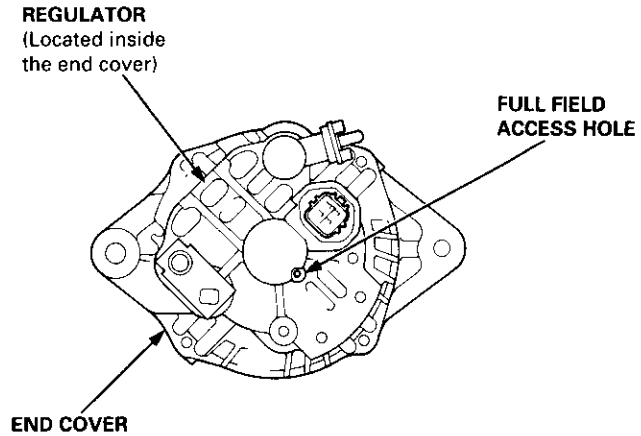

Is the alternator output 50 A or more? NO **Test and repair the alternator components.**

YES


Replace the voltage regulator.



Alternator Replacement

NOTE: Remove the alternator from below the vehicle.


1. Remove the battery negative cable, then disconnect the positive cable.
2. Disconnect the 4P (or 3P) connector from the alternator.

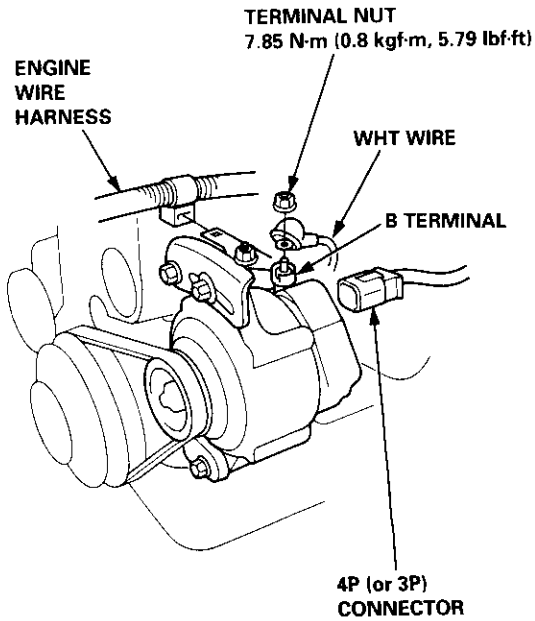

(): Canada

3. Remove the terminal nut and the WHT wire from the B terminal.

4. Remove the adjusting bolt and through bolt nut, then remove the alternator belt from the pulley.

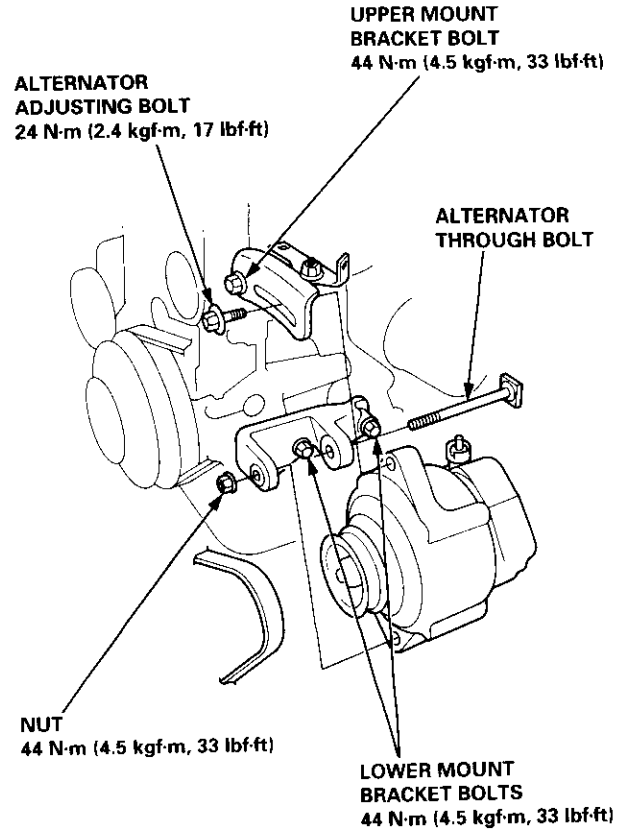


5. Pull out the alternator through bolt, then remove the alternator.
6. If necessary, remove the mount bracket bolts, and the upper and lower mount brackets.
7. Adjust the alternator belt tension after installation (see page 23-110).


Charging System

Rectifier Removal


1. Remove the four through bolts.

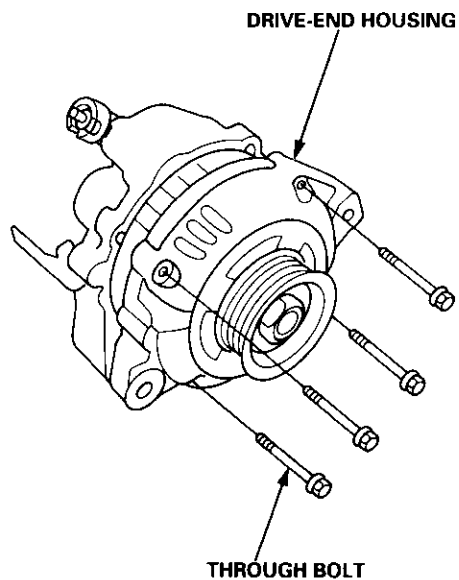


2. Heat the rear bearing seat with a 1,000 W hair drier for about five minutes (120 - 140°F, 50 - 60°C).

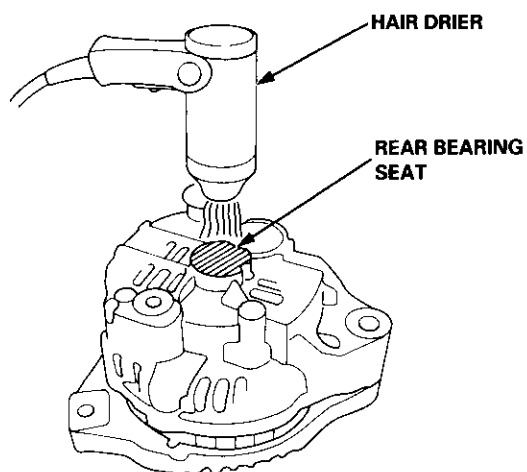

3. Separate the rear housing from the drive-end housing by inserting a flat tip screwdriver into the openings and prying them apart. Be careful not to damage the stator with the tip of the screwdriver.

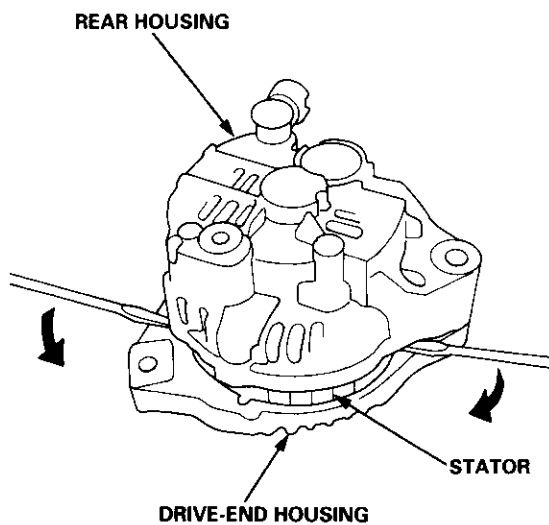


4. Separate the rear housing and drive-end housing with the stator attached to the rear housing.

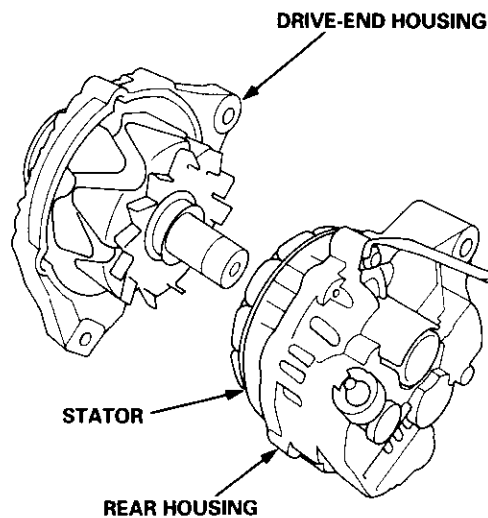




5. Separate the rear housing from the stator/rectifier assembly by removing the four screws and the terminal nut.

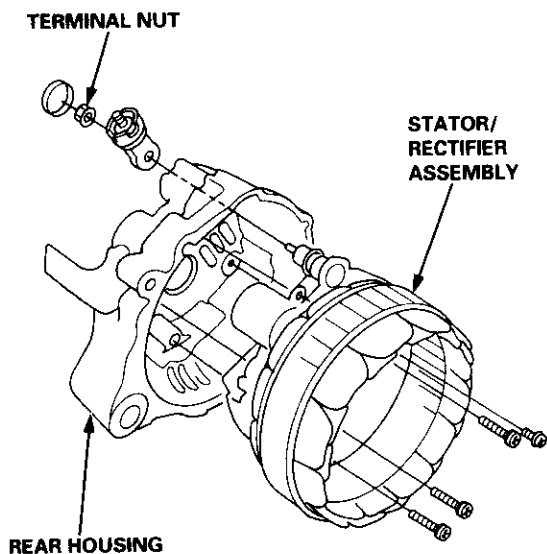

6. Unsolder the rectifier from the stator leads.
 - To avoid damaging the diodes with heat, pinch the stator leads between pliers to carry heat off, and apply the soldering iron only long enough to separate the leads from the rectifier.
 - Use a 100 W soldering iron.

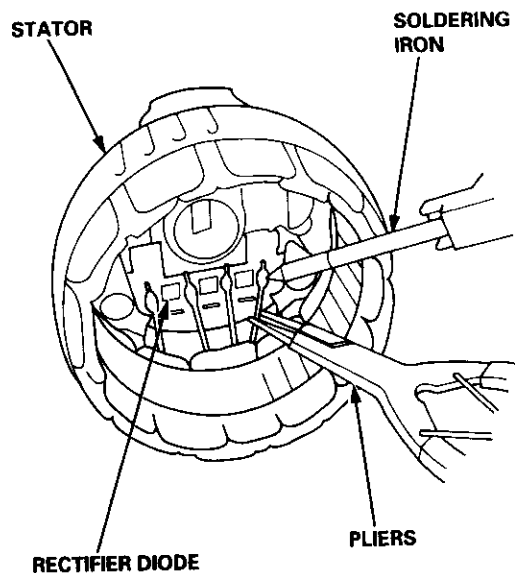


7. Install the new rectifier in the reverse order of removal.
 - Apply the soldering iron only long enough to ensure a good connection so the heat will not damage the diodes.
 - Use only a rosin core type solder or solder joints will corrode.

Rectifier Test

NOTE: The diodes are designed to allow current to pass in one direction while blocking it in the opposite direction. Since the alternator rectifier is made up of nine diodes, each diode must be tested for continuity in both directions with an ohmmeter that has diode checking capability; a total of 18 checks.

1. Check for continuity in each direction between
 - the B and P terminals.
 - the B' and P terminals.
 - E (ground) and the P terminals.All diodes should have continuity in only one direction.

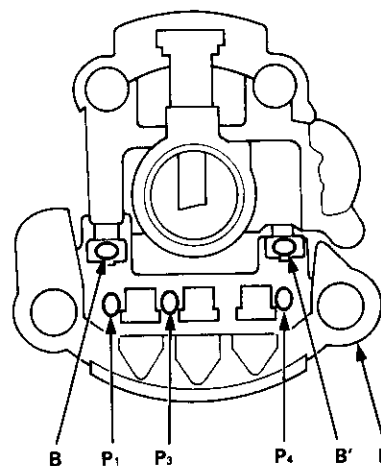


2. If any of the diodes fails, replace the rectifier assembly. (Diodes are not available separately.)

Charging System

Rotor Slip Ring Test


1. Check the resistance between the slip rings. There should be 1.8 – 3.0 ohms.
 - If resistance meets the specification, go to step 2.
 - If resistance does not meet the specification, replace the alternator.

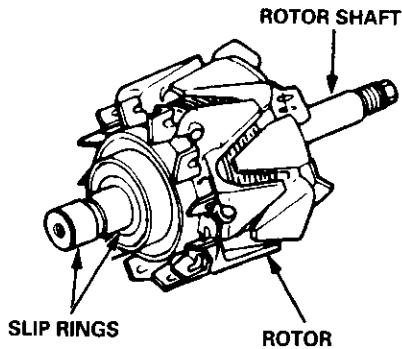

2. Check that there is no continuity between the slip rings and the rotor or rotor shaft.
3. If the rotor fails either continuity check, replace the alternator.

Stator Test

1. Check that there is continuity between each pair of leads.

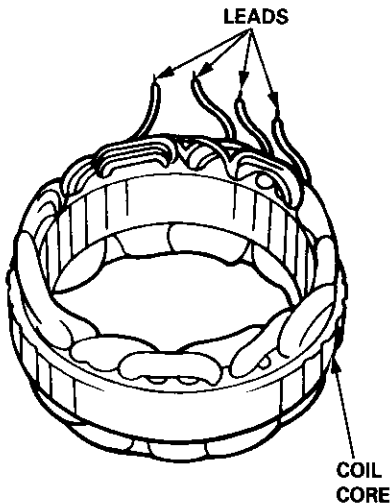


2. Check that there is no continuity between each lead and the coil core.
3. If the coil fails either continuity check, replace the alternator.

Alternator Brush Inspection


1. Separate the drive-end housing from the rear housing as described on page 23-106.
2. Separate the rear housing from the stator/rectifier assembly by removing the four screws and the terminal nut from the rear housing (see page 23-106).
3. Measure the length of the brushes with vernier calipers.

Alternator Brush Length:

① Standard (NEW)	② Service Limit
19.0 mm (0.75 in)	5.0 mm (0.20 in)

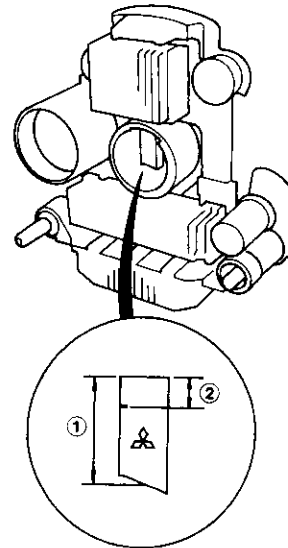


4. If the brushes are less than the service limit, replace them.

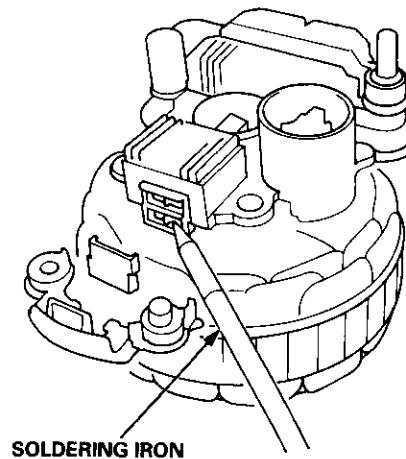




Rear Bearing Replacement

1. Pull off the rear bearing.
 - Make sure the tips of the bearing puller jaws are thin enough to fit between the bearing and the slip rings.
 - Do not reuse the bearing.

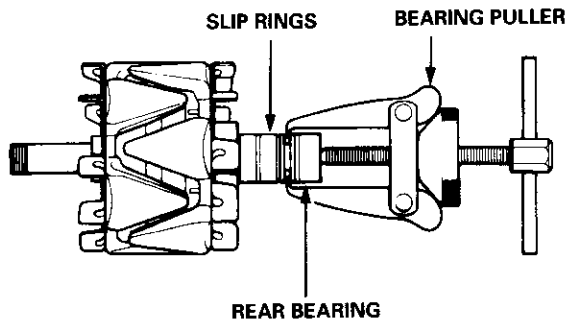


2. Use a hand press to install the new bearing. Apply pressure only on the inner race to avoid damaging the bearing.

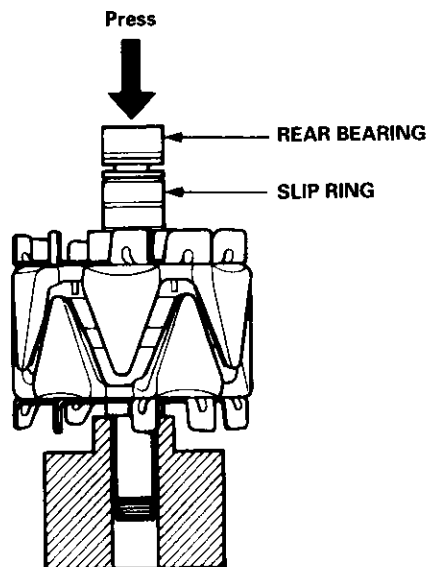


Alternator Reassembly

1. Push the brushes in, then insert a pin or drill bit (about 1.8 mm diameter) to hold them there.

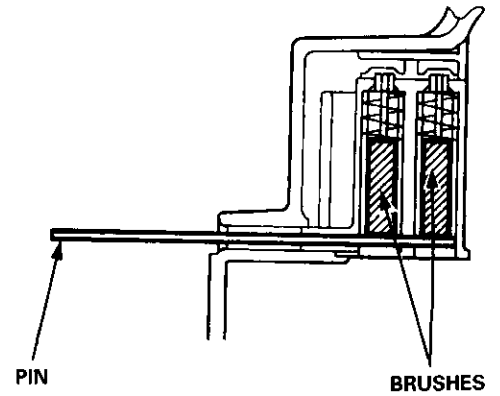

2. Heat the rear bearing seat in the rear housing as described on page 23-106. After heating, continue immediately with assembling before the rear bearing seat cools completely.
3. Put the rear housing/stator assembly and drive-end housing/rotor assembly together, tighten the four through bolts and pull out the pin.

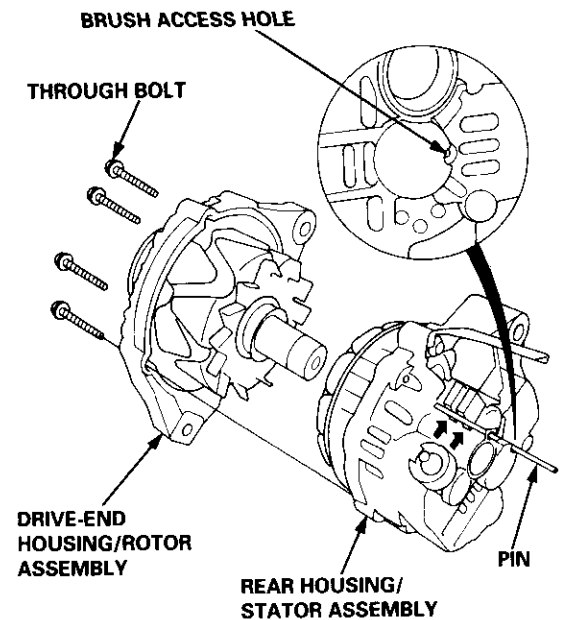

4. After assembling the alternator, turn the pulley by hand to make sure the rotor rotates smoothly and without noise.

Charging System


Alternator Belt Inspection and Adjustment

Deflection Method:

Apply a force of 98 N (10 kgf, 22 lbf), and measure the deflection between the alternator and the crankshaft pulley.

Deflection	8.0 – 10.5 mm (0.31 – 0.41 in)
------------	--------------------------------

NOTE: On a brand-new belt (one that has been run for less than five minutes), the deflection should be 6.0 – 8.5 mm (0.26 – 0.33 in) when first measured. If the belt is worn or damaged, replace it.

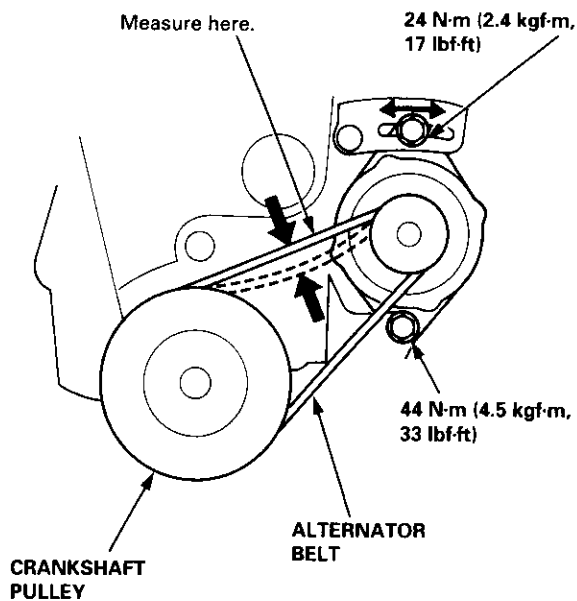

If adjustment is necessary:


1. Loosen the lower mounting nut and the upper mounting bolt.
2. Move the alternator to obtain the proper belt tension, then retighten the upper mounting bolt and the lower mounting nut to the specified torques.
3. Recheck the deflection of the belt.

Belt Tension Gauge Method:

Following the gauge manufacturer's instructions, attach the special tool to the belt, and measure the tension.

Tension	340 – 490 N (35 – 50 kgf, 77 – 110 lbf)
---------	---

NOTE: On a brand-new belt (one that has been run for less than five minutes), the tension should be 540 – 740 N (55 – 75 kgf, 121 – 165 lbf) when first measured. If the belt is worn or damaged, replace it.

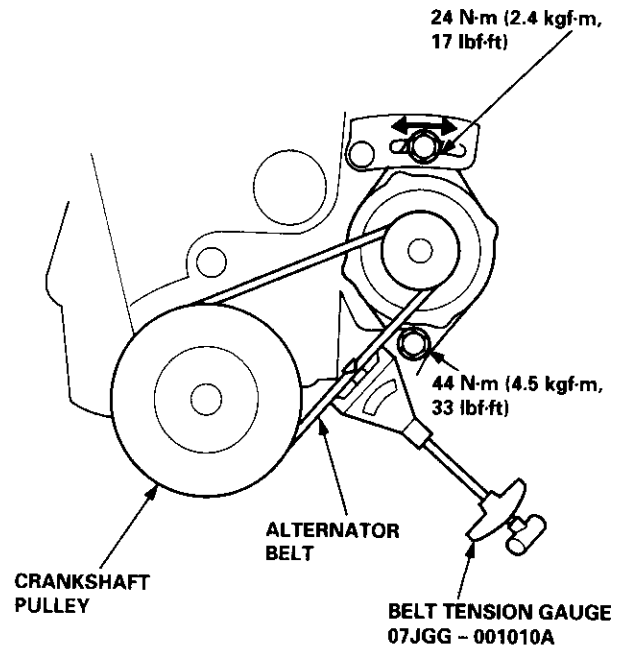


If adjustment is necessary:

1. Loosen the lower mounting nut and the upper mounting bolt.
2. Move the alternator to obtain the proper belt tension, then retighten the upper mounting bolt and the lower mounting nut to the specified torques.
3. Recheck the tension of the belt.




Fan Controls

Component Location Index

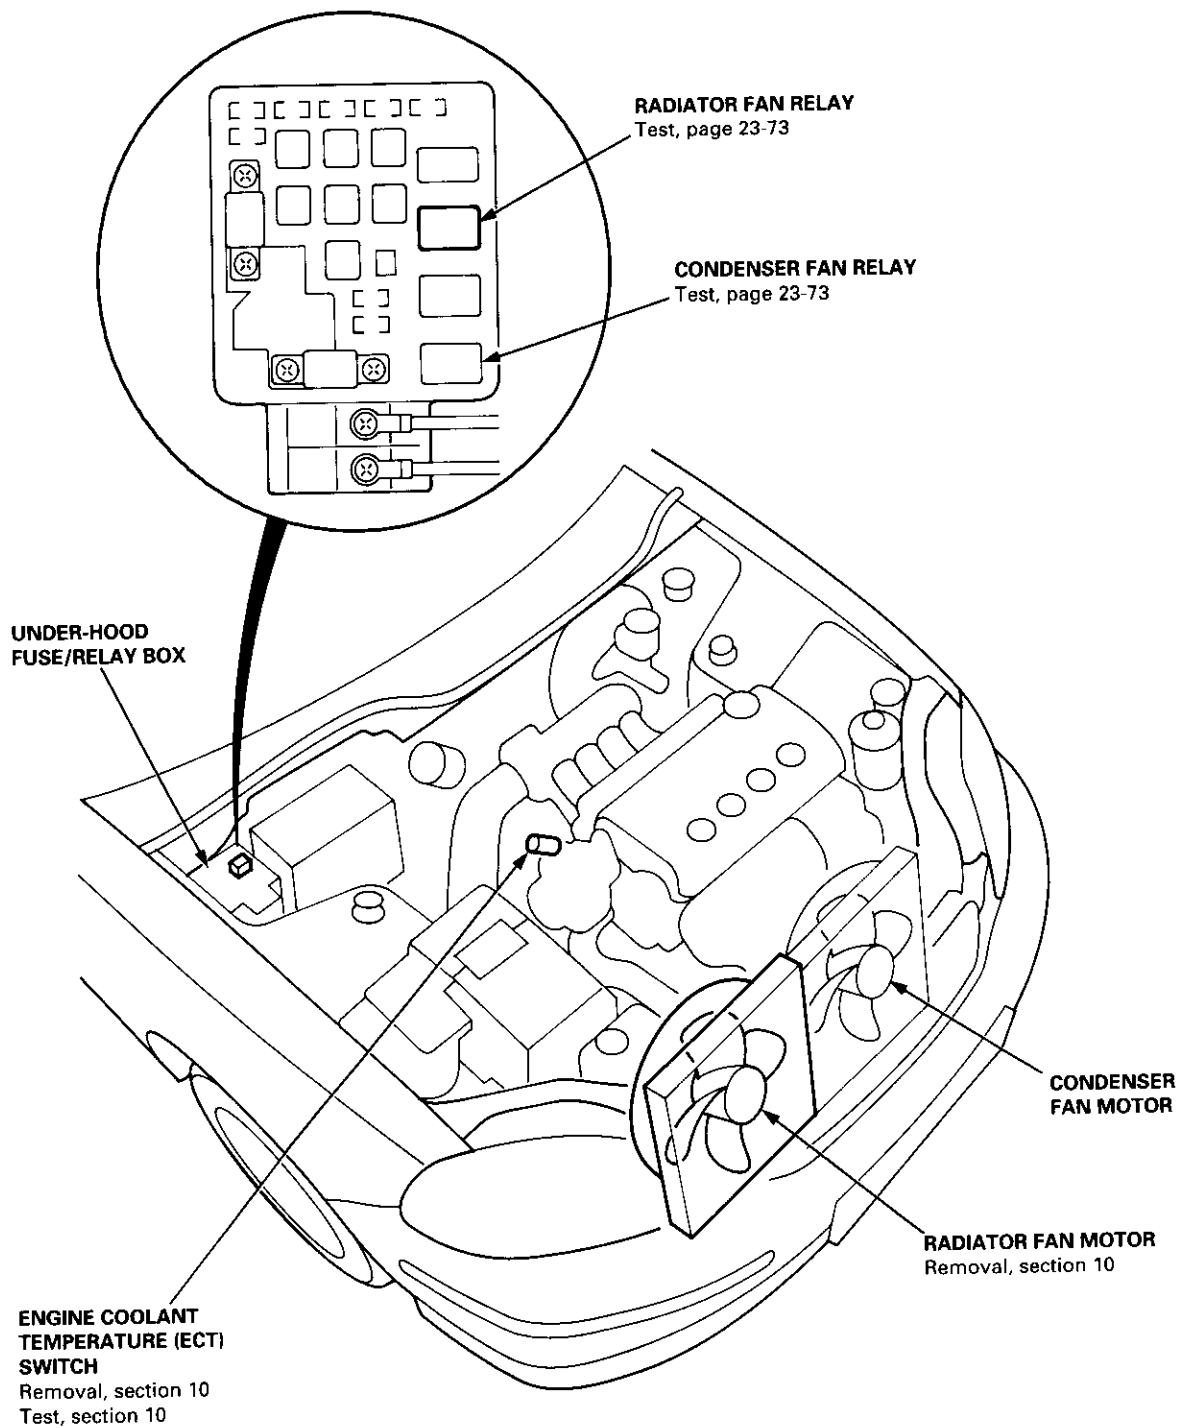

Fan Controls

Circuit Diagram

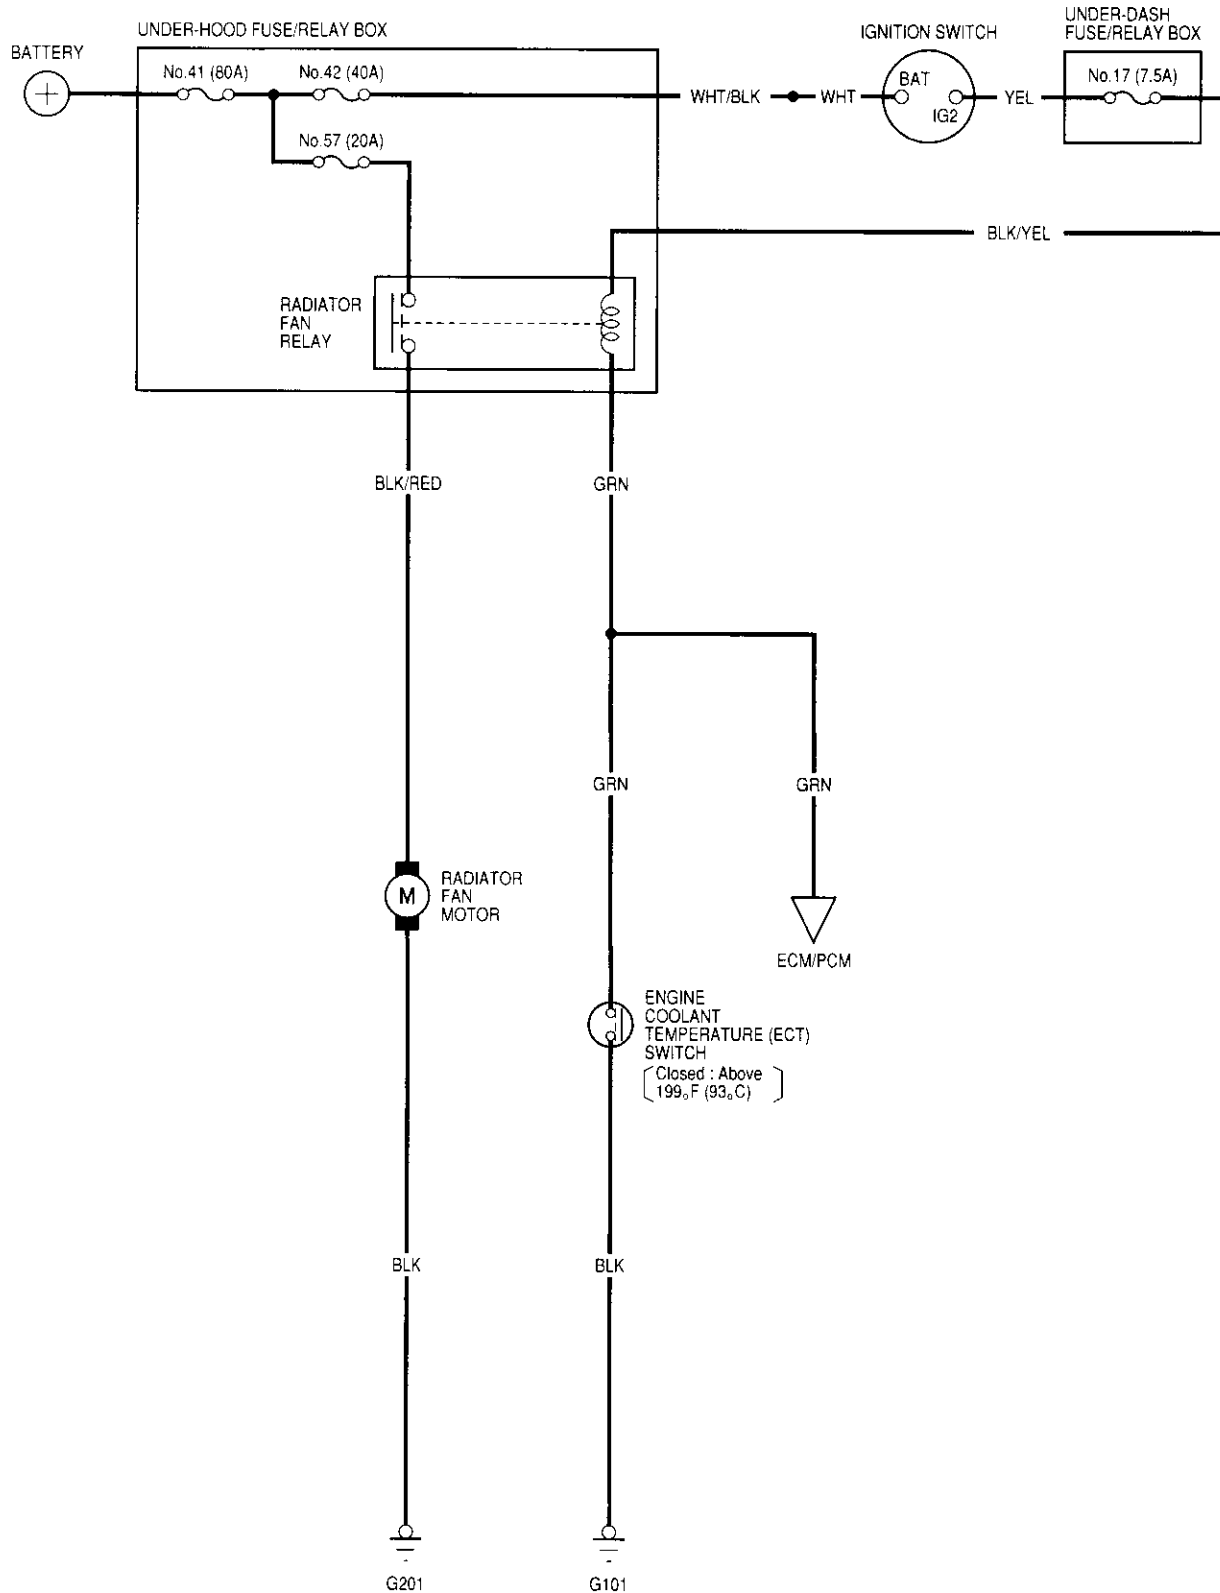


Gauge Assembly



Component Location Index

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

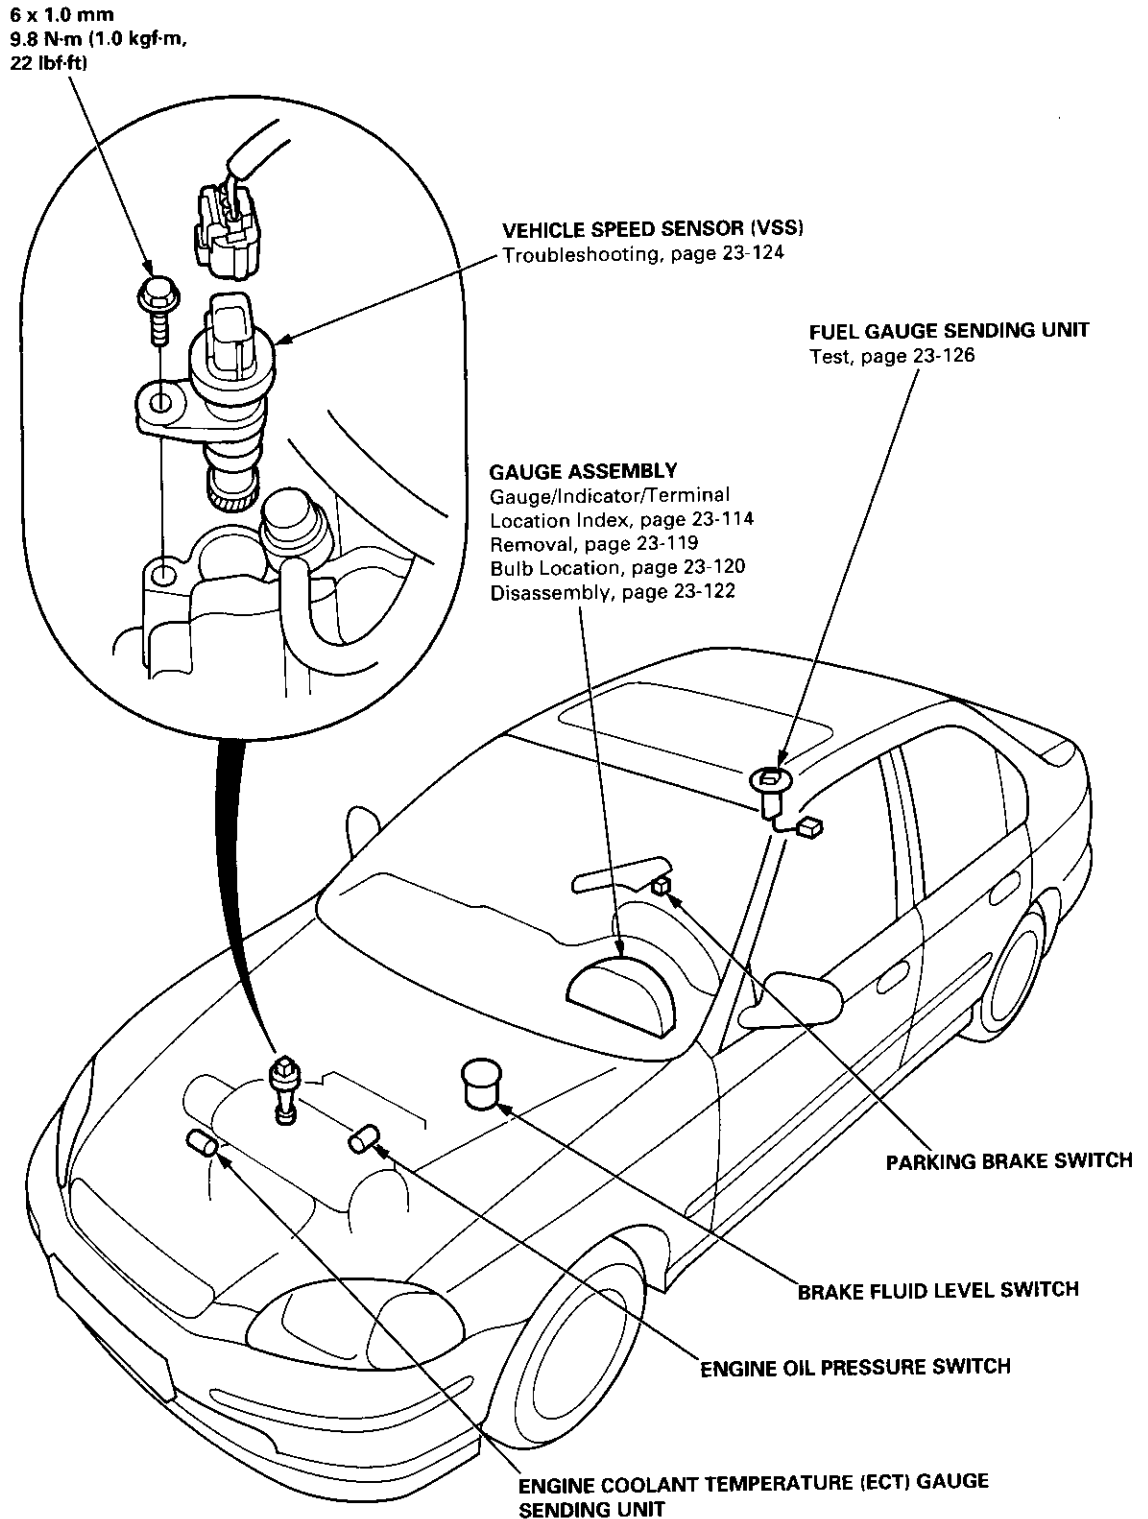


Gauge Assembly


Gauge/Indicator/Terminal Location Index

With tachometer:




CONNECTOR "A"
(A/T GEAR POSITION INDICATOR)

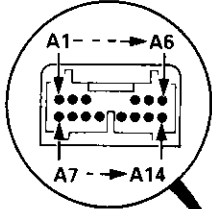


CONNECTOR "B"
(GAUGE and INDICATOR)

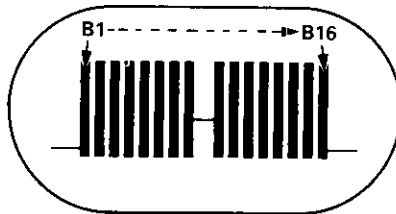


CONNECTOR "C"
(GAUGE and INDICATOR)

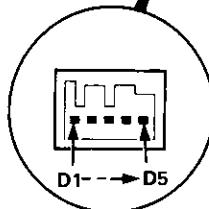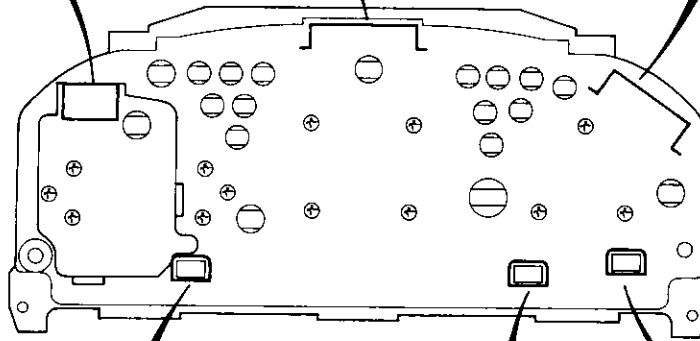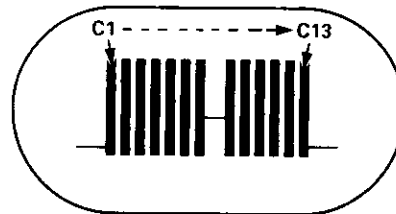

CONNECTOR "D"
(ABS INDICATOR)

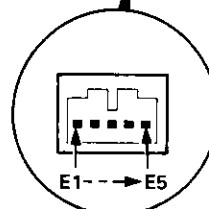


CONNECTOR "E"
(SHIFT-UP or CRUISE
INDICATOR)

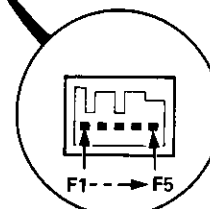

CONNECTOR "F"
(SRS INDICATOR)

SPEEDOMETER:
Indicates 60 km/h at 637 rpm or
60 mph at 1,025 rpm of the
vehicle speed sensor (VSS).

**A/T GEAR POSITION
INDICATOR**
See page 23-133

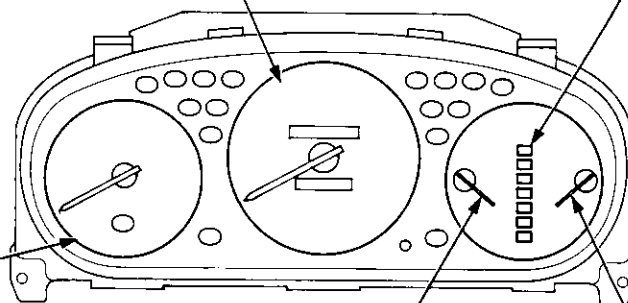

TACHOMETER:
Indicates 100 rpm at
200 pulses per minute
of the ignition control
module (ICM).


FUEL GAUGE
Gauge/Sending Unit Test, page 23-126

ENGINE COOLANT TEMPERATURE (ECT) GAUGE
See section 5




Without tachometer:




CONNECTOR "A"
(A/T GEAR POSITION INDICATOR)

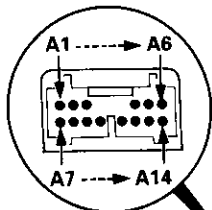


CONNECTOR "B"
(GAUGE and INDICATOR)

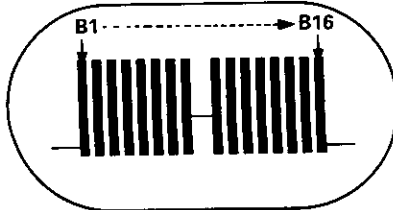

CONNECTOR "C"
(GAUGE and INDICATOR)

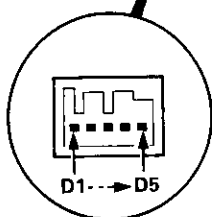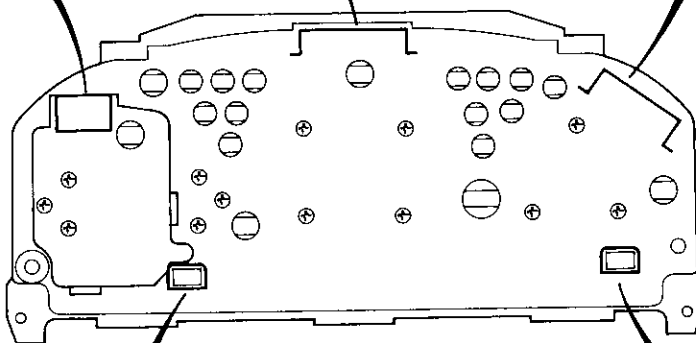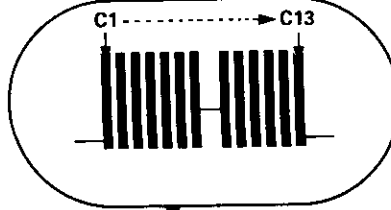


CONNECTOR "D"
(ABS INDICATOR)

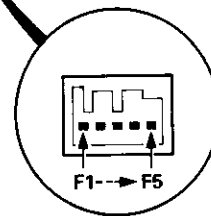

CONNECTOR "F"
(SRS INDICATOR)

SPEEDOMETER:
Indicates 60 km/h at 637 rpm or
60 mph at 1,025 rpm of the
vehicle speed sensor (VSS).

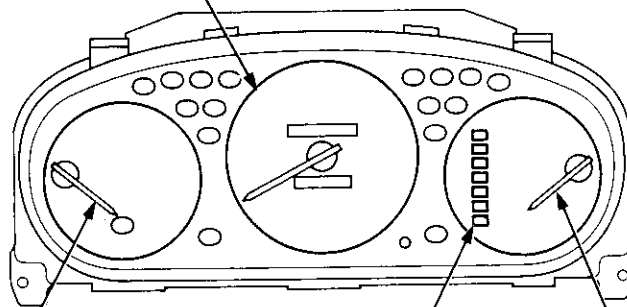


ENGINE COOLANT TEMPERATURE (ECT) GAUGE
See section 5


A/T GEAR POSITION
INDICATOR
See page 23-133

FUEL GAUGE
Gauge/Sending Unit Test, page 23-126

Gauge Assembly

Circuit Diagram

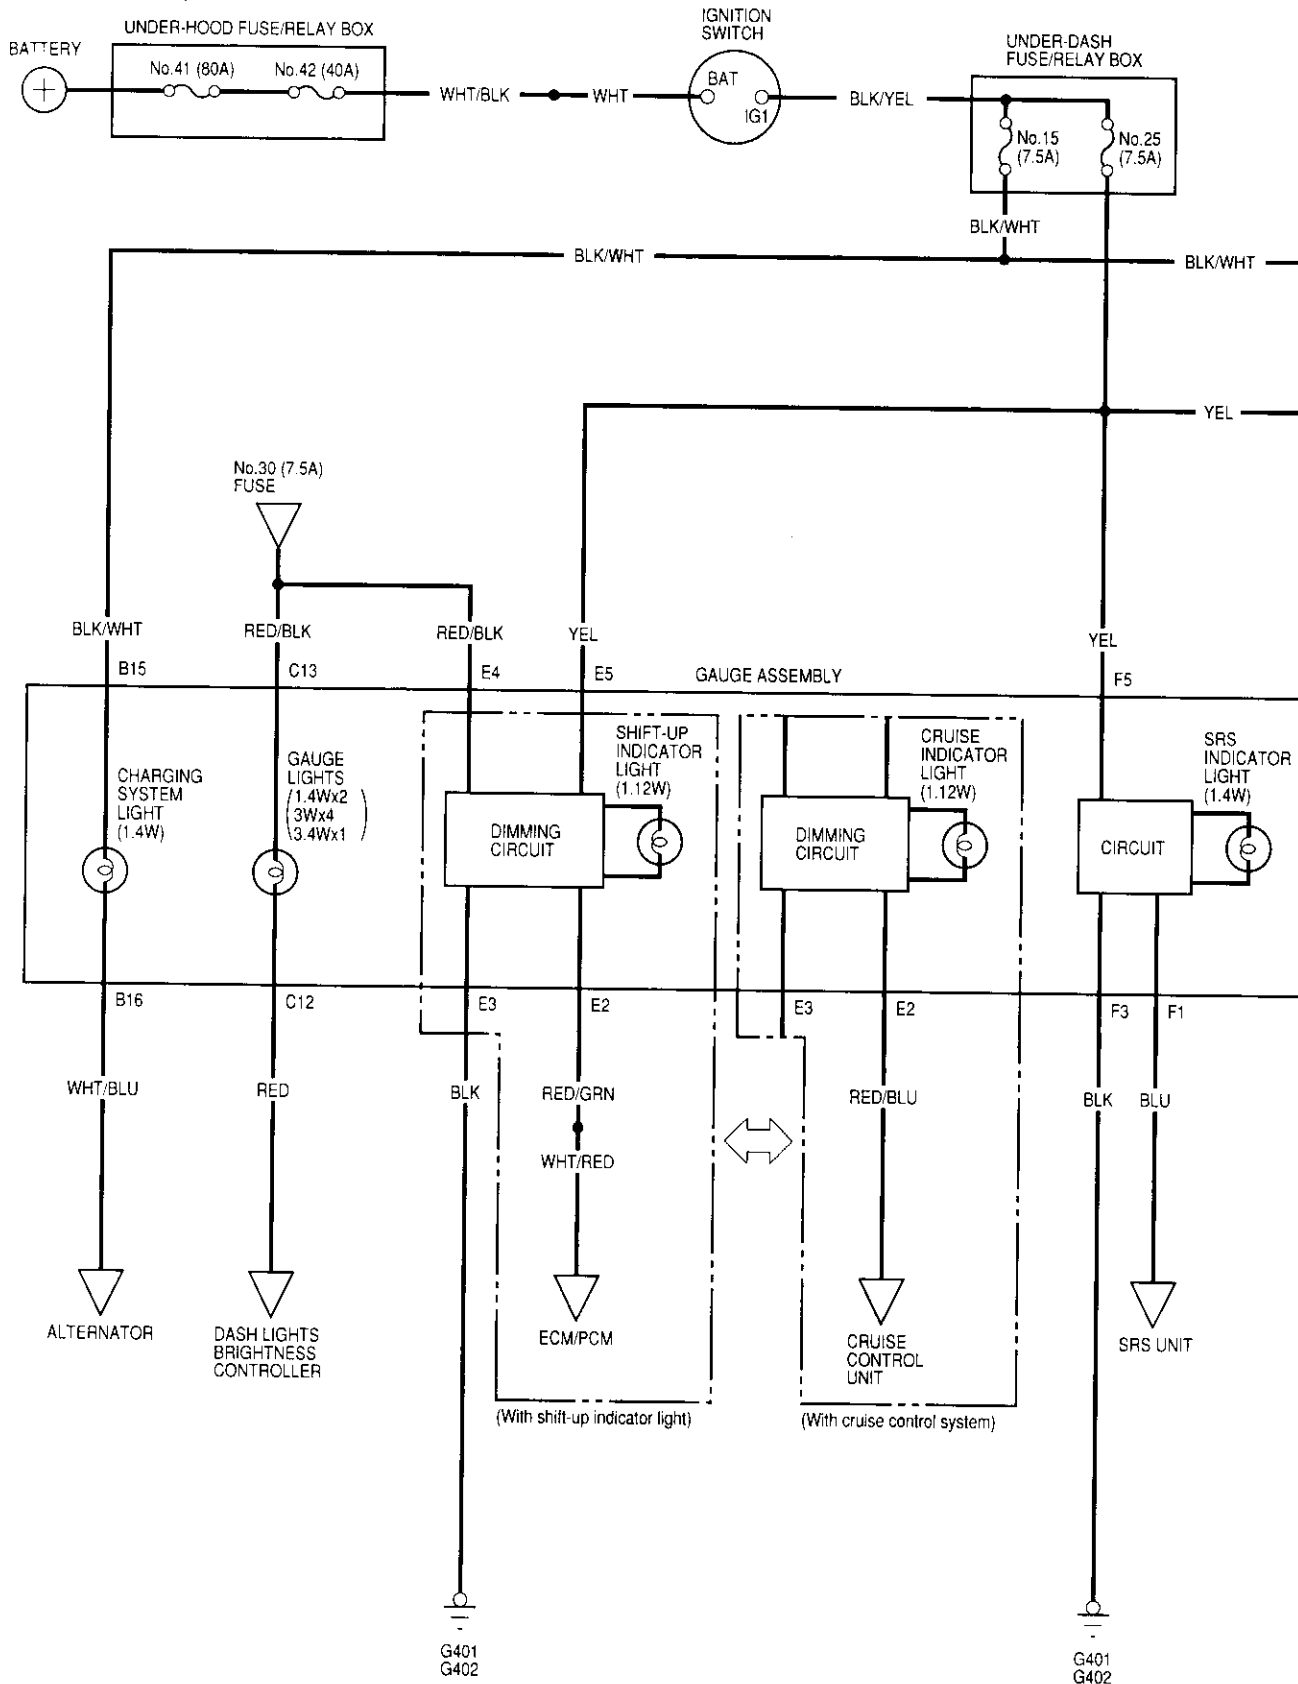


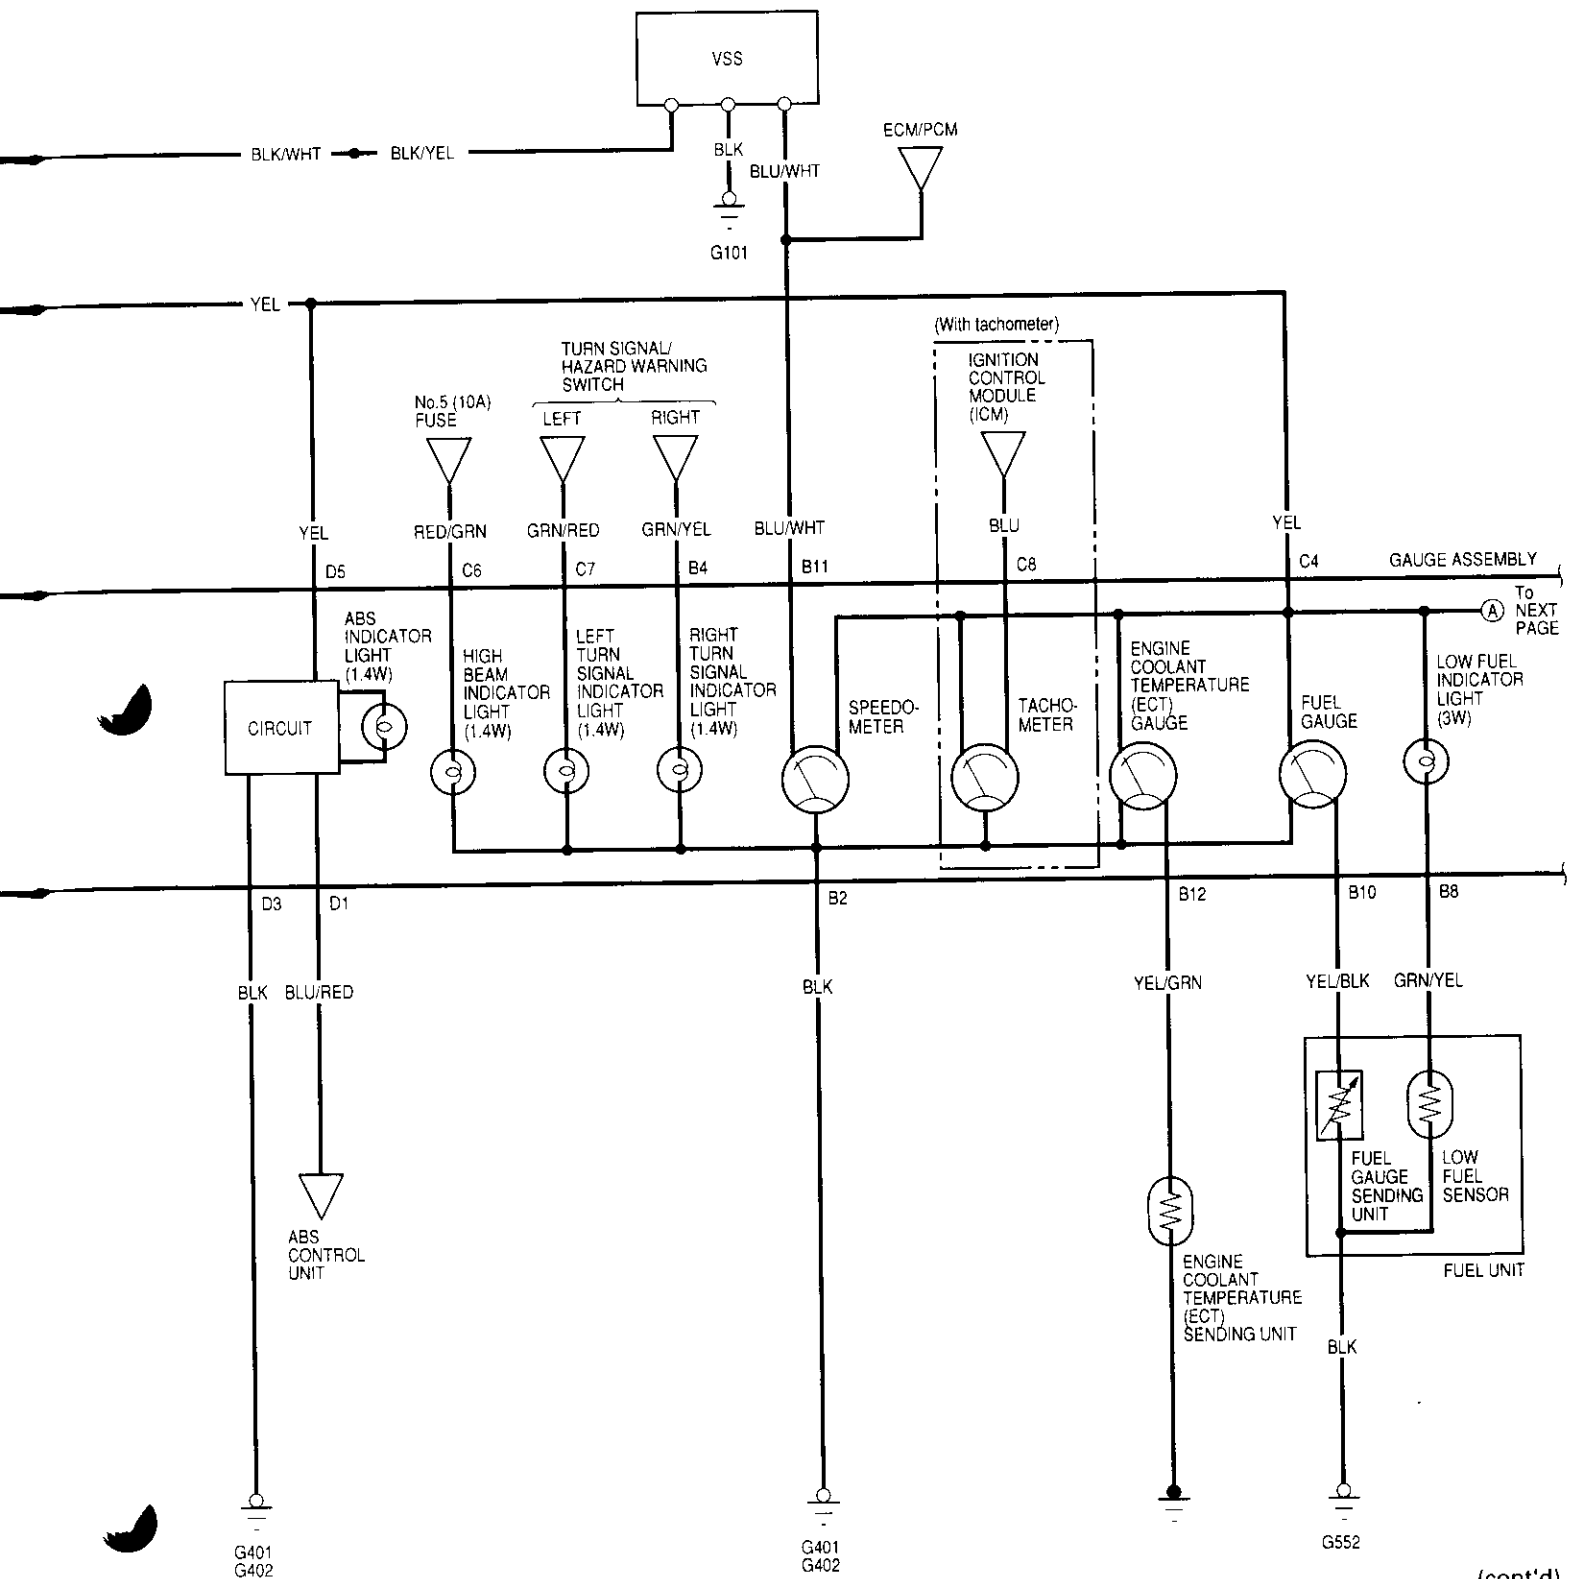

(cont'd)

Gauge Assembly

Circuit Diagram (cont'd)

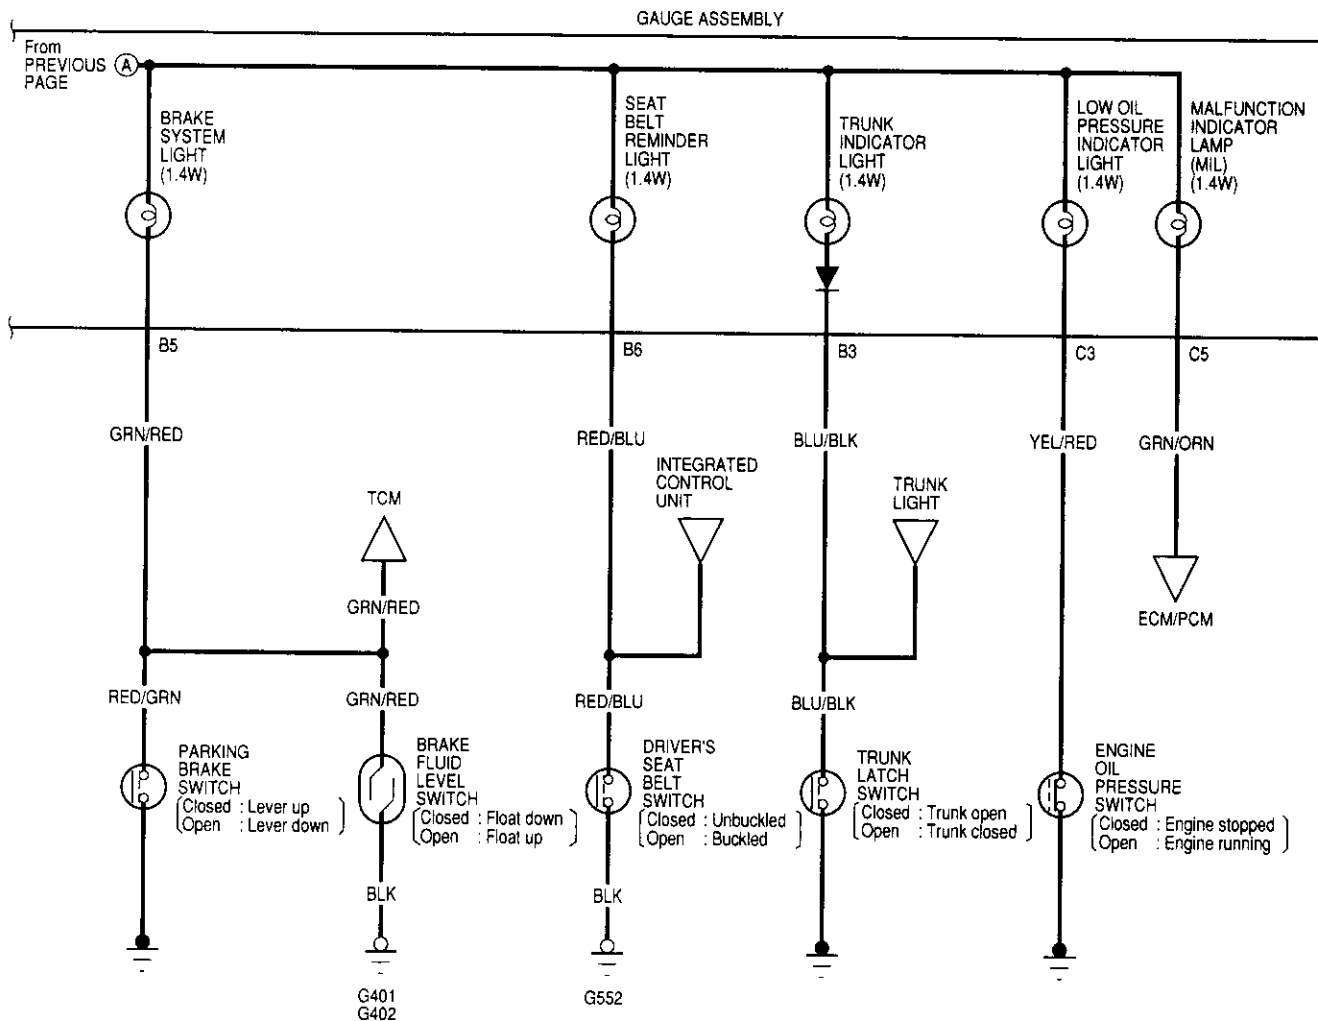




Removal

1. Remove the two screws from the instrument panel.
2. Remove the instrument panel.


CAUTION: Carefully remove the instrument panel without damaging the clips.

3. Tilt the steering wheel down with the tilt adjustment lever.
4. Spread a protective cloth over the steering column.
5. Remove the four mounting screws from the gauge assembly.
6. Pry the gauge assembly out, and disconnect all connectors from it.
7. Take out the gauge assembly.

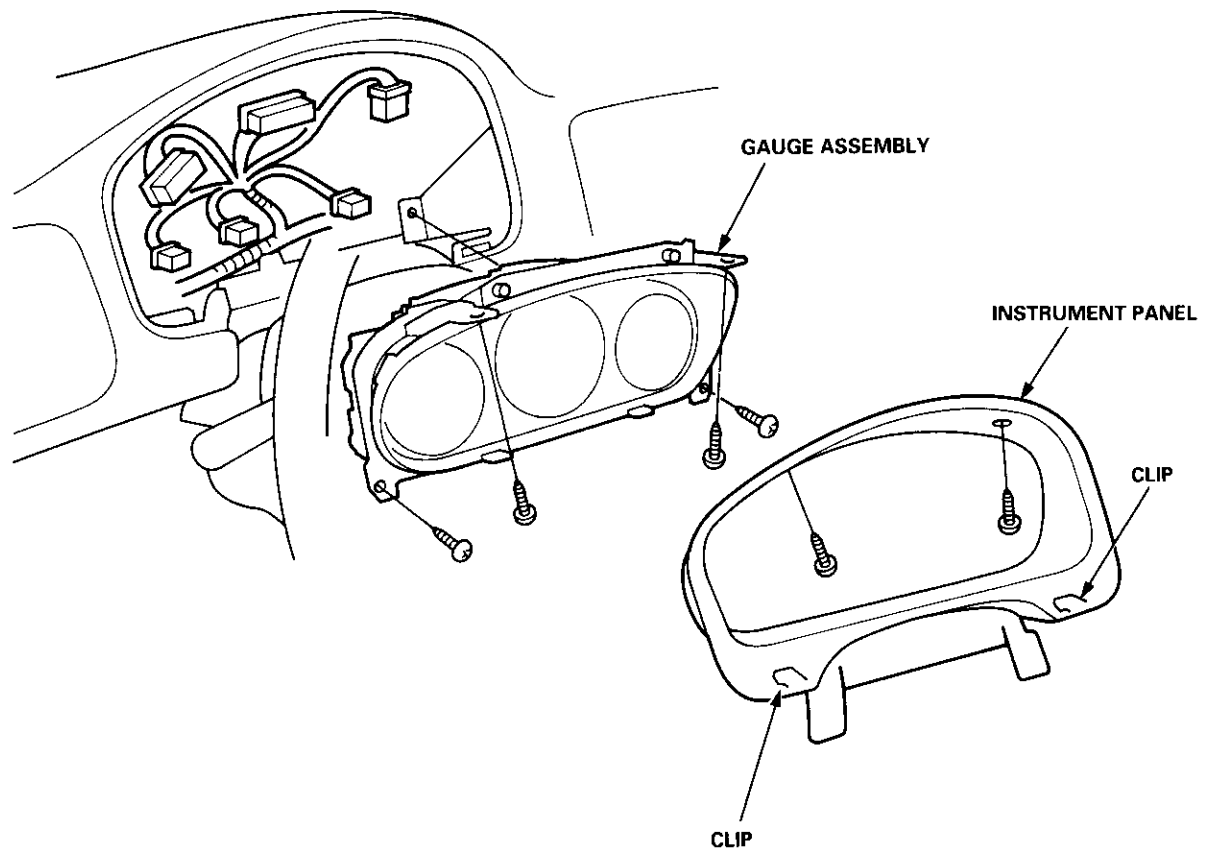


Gauge Assembly

Bulb Locations (With Tachometer)

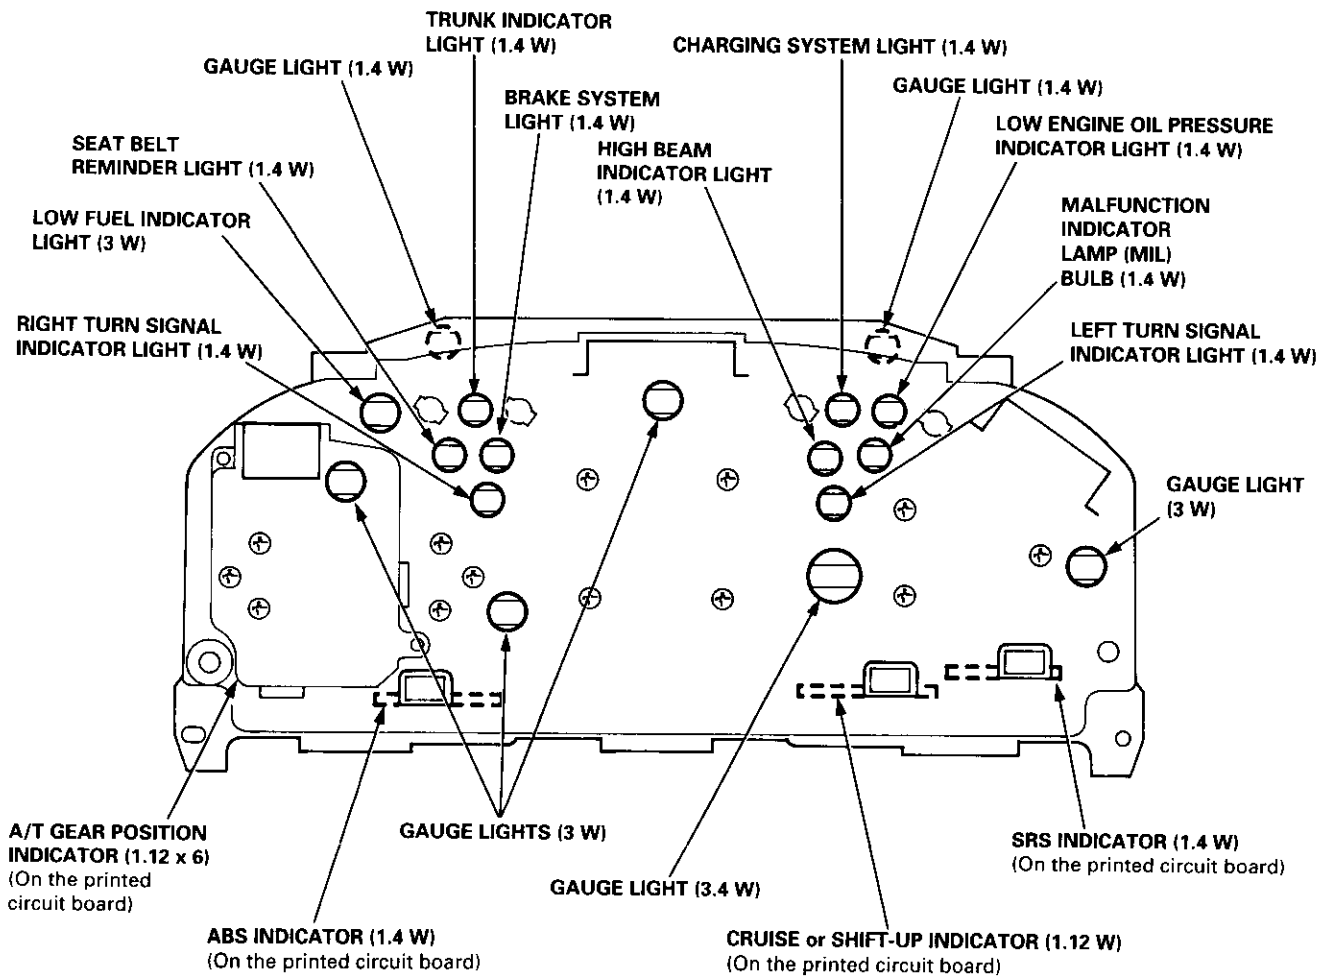




Bulb Locations (Without Tachometer)

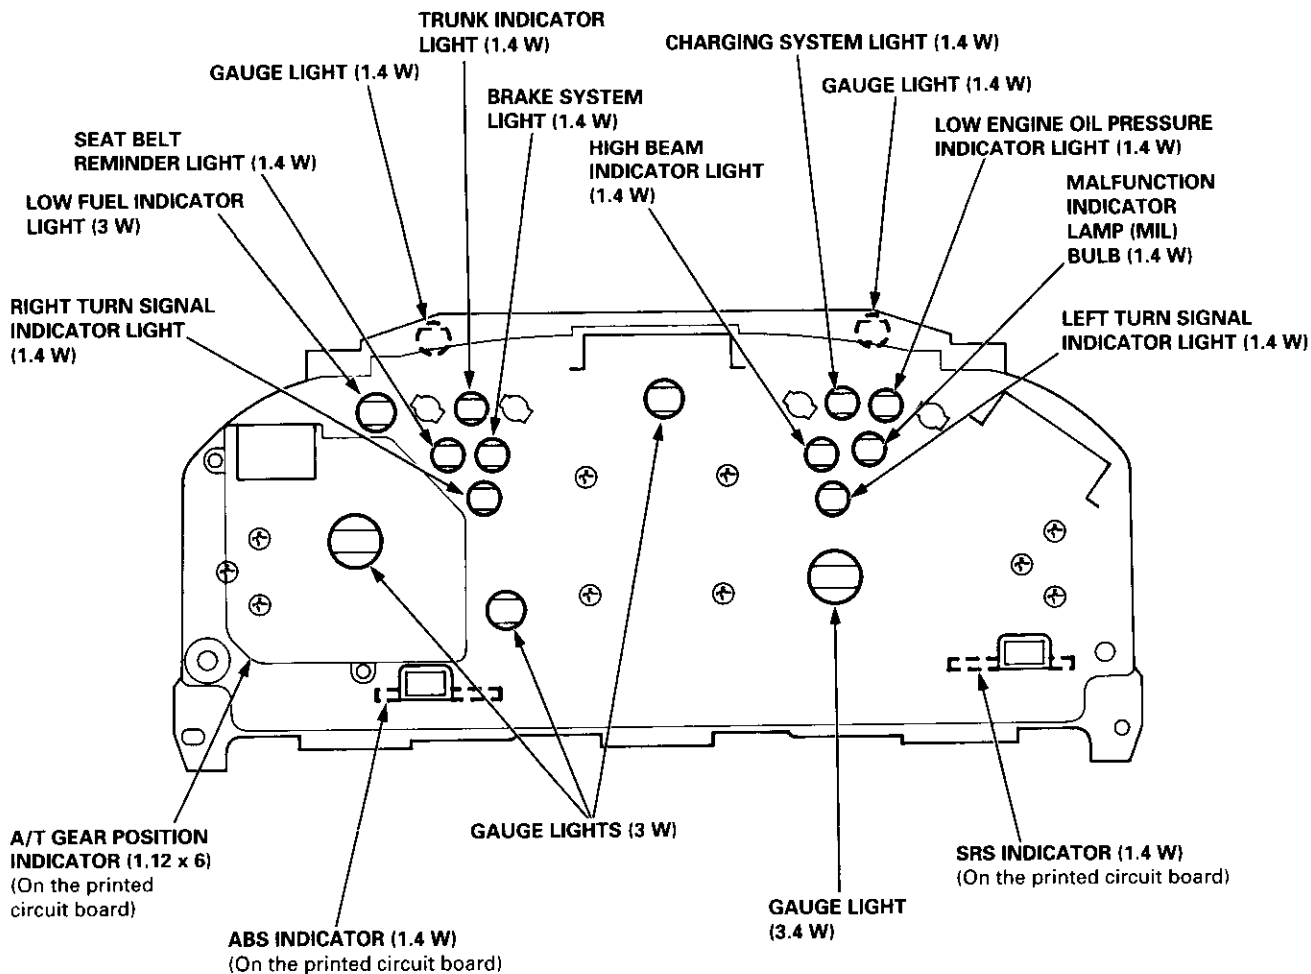

Gauge Assembly

Disassembly (With Tachometer)


NOTE: Handle the terminals and printed circuit boards carefully to avoid damaging them.

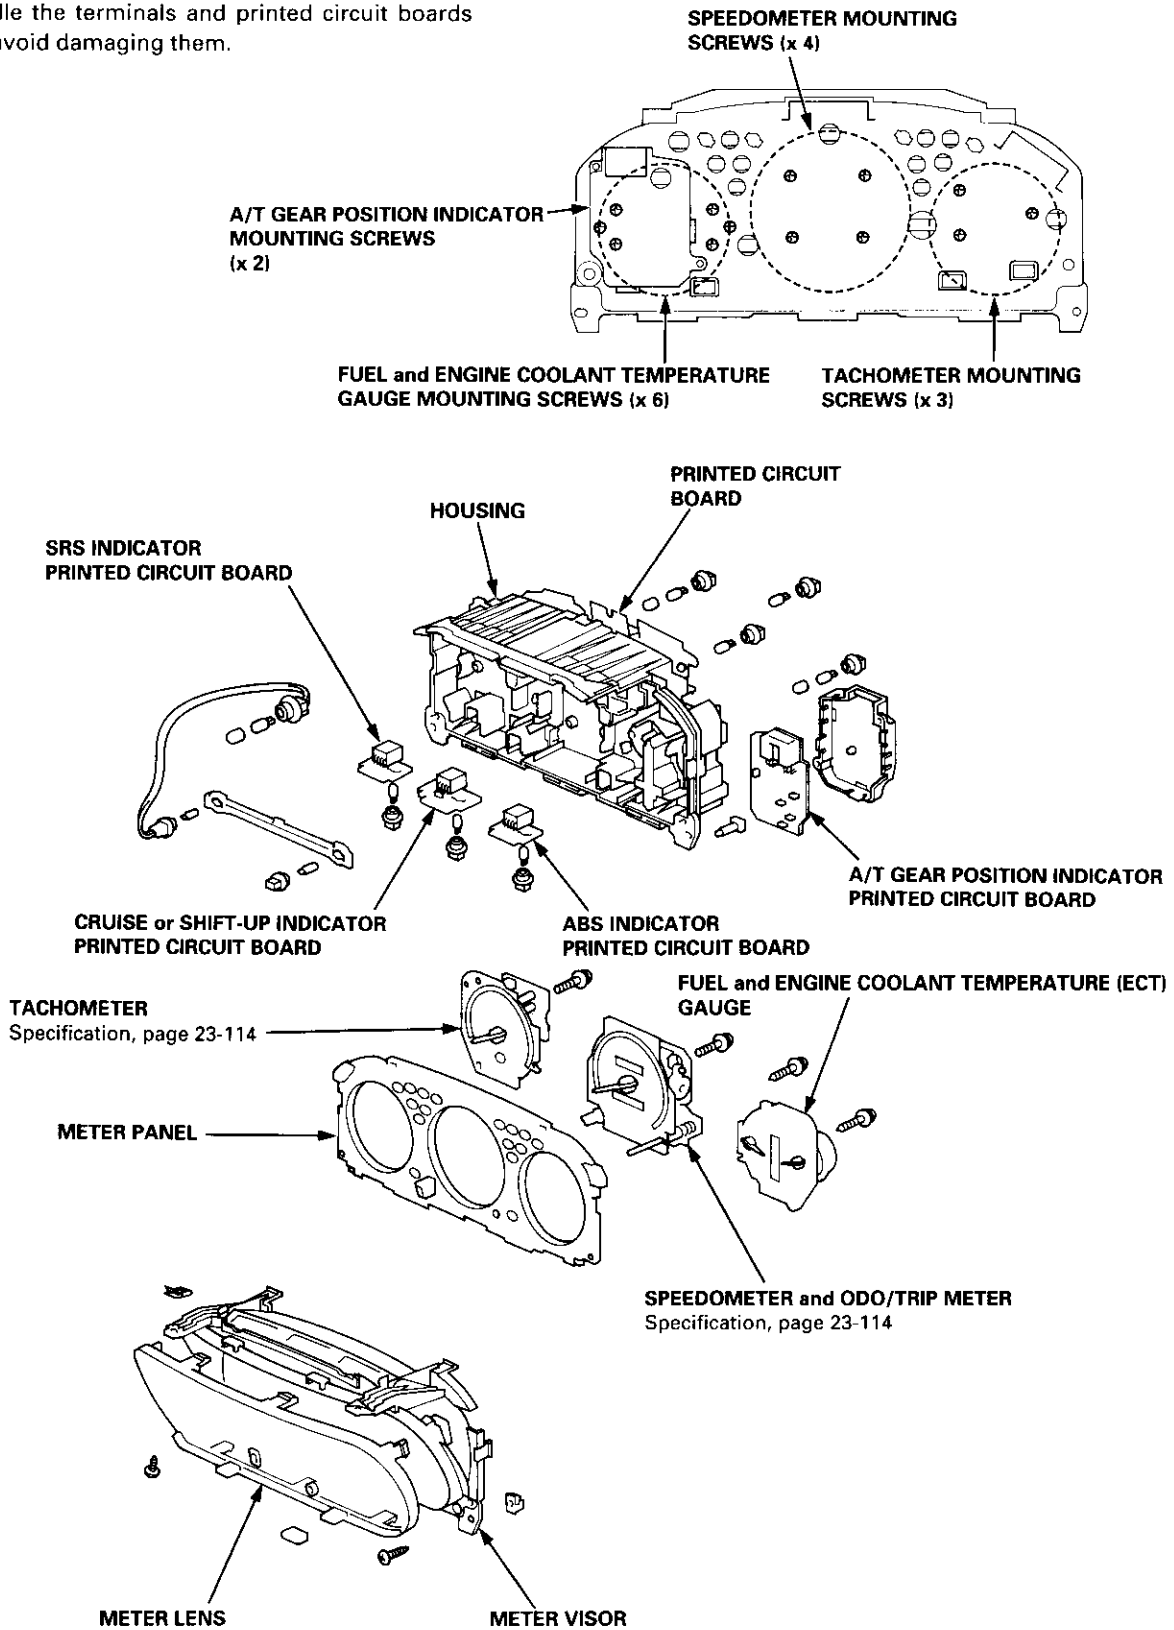



Disassembly (Without Tachometer)

NOTE: Handle the terminals and printed circuit boards carefully to avoid damaging them.

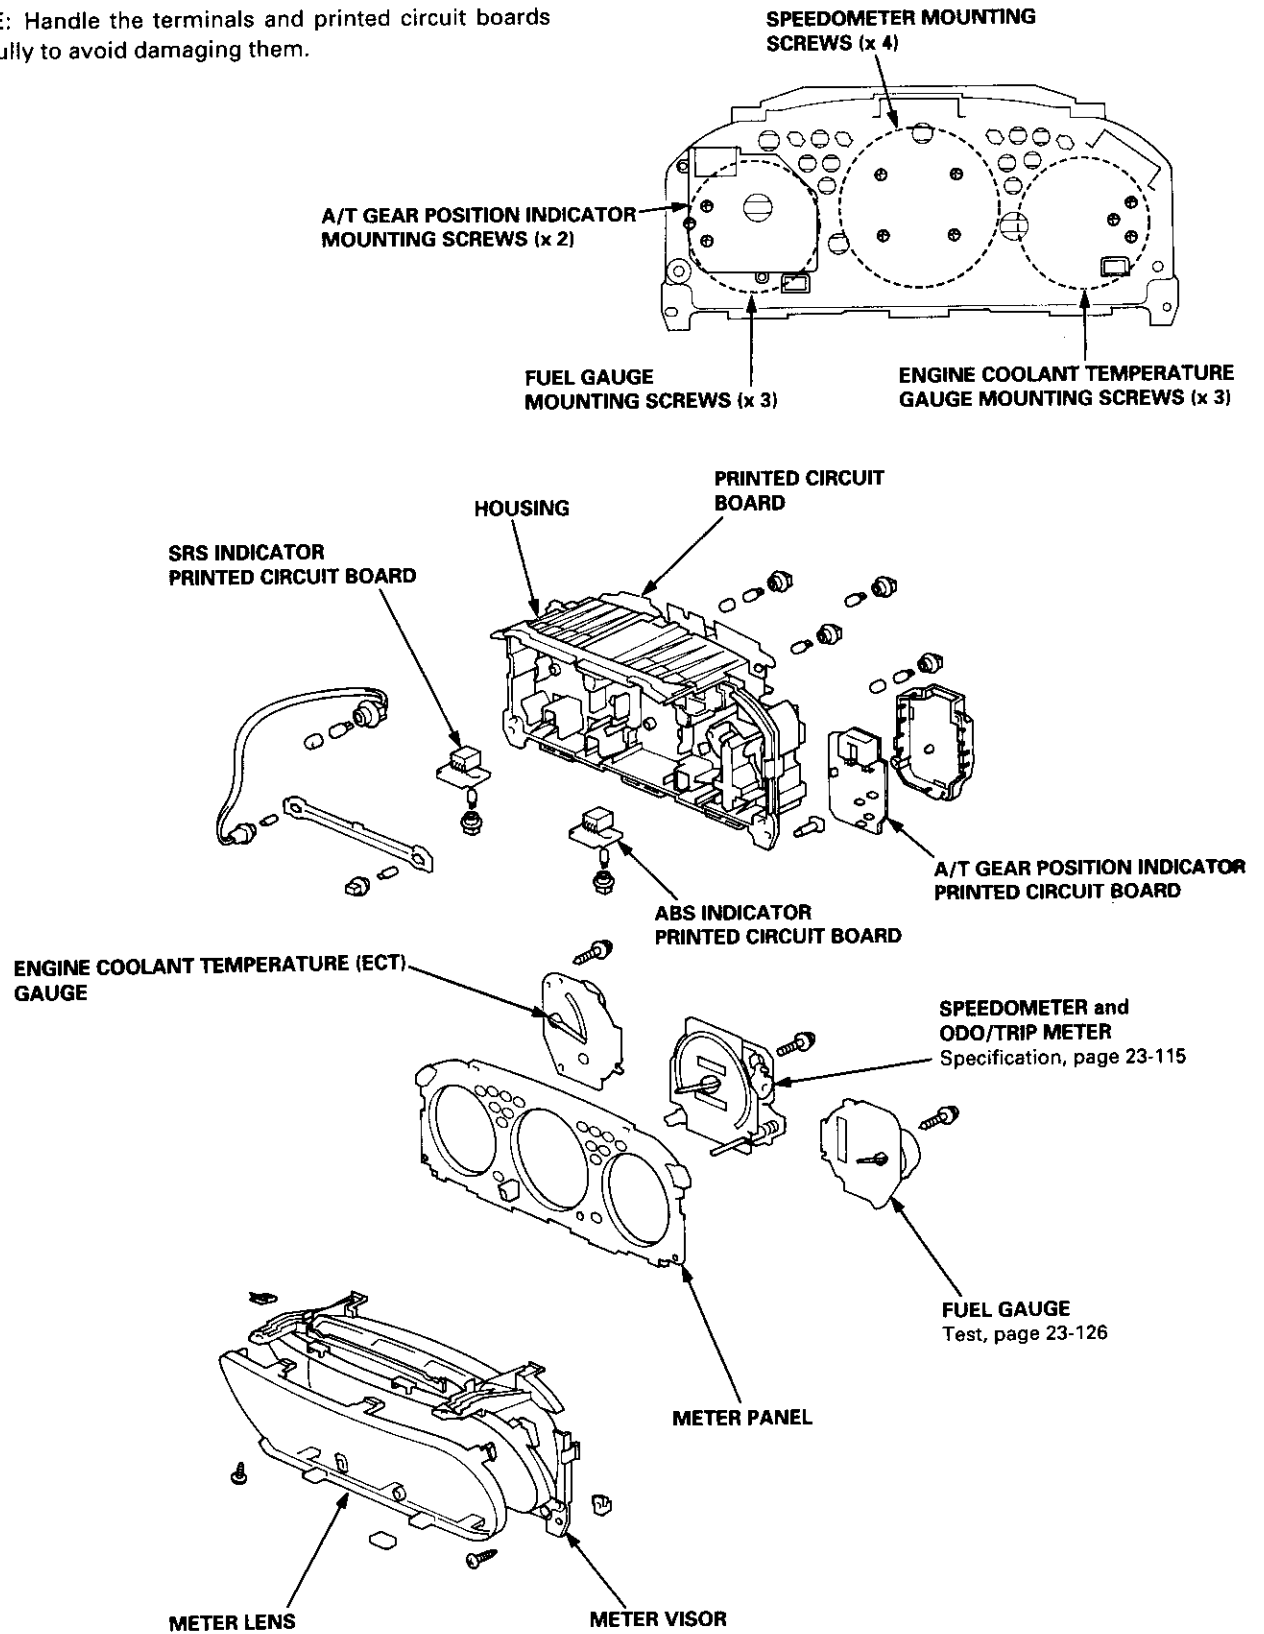

Vehicle Speed Sensor (VSS)

Troubleshooting

Before testing, inspect the No. 15 (7.5 A) fuse in the under-dash fuse/relay box.

Test the BLK wire:

1. Disconnect the 3P connector from the vehicle speed sensor (VSS).
2. Connect the test harness (07LAJ - PT30200) only to the engine wire harness.
3. Connect the RED test harness clip to the positive probe of a ohmmeter.
4. Check for continuity between the RED test harness clip and body ground.

Is there continuity?

NO

Repair open in the BLK wire between the VSS and G101.

YES

Test the BLK/YEL wire:

1. Connect the WHT test harness clip to the positive probe of a voltmeter, and connect the RED test harness clip to the negative probe.
2. Turn the ignition switch ON (II).

Is there battery voltage?

NO

Repair open in the BLK/YEL wire between the VSS and the under-dash fuse/relay box.

YES



(To next page)

TEST HARNESS
07LAJ - PT3020A

RED TEST HARNESS
CLIP

PROTECTIVE
TAPE

VSS

GRN TEST HARNESS
CLIP

TEST HARNESS
07LAJ - PT3020A

RED TEST HARNESS
CLIP

PROTECTIVE
TAPE

VSS

WHT TEST HARNESS CLIP



(From previous page)

A

Test the BLU/WHT wire:
Connect the GRN test harness clip to the positive probe of a voltmeter, and connect the RED test harness clip to the negative probe.

Is there about 5 V or more ?

NO

Repair open in the BLU/WHT wire between the VSS and ECM/PCM, TCM (CVT), and cruise control unit.

YES

Test the VSS:
1. Turn the ignition switch OFF.
2. Connect the other test harness connector to the VSS.
3. Raise the front of the vehicle, and support it with safety stands.
4. Put the vehicle in neutral with the ignition switch ON (II).
5. Slowly rotate one wheel with the other wheel blocked.

Does voltage pulse from 0 to approx. 5 V or more ?

NO

Replace the VSS.

YES

Speedometer Test:
1. Disconnect the 16P connector "B" from the gauge assembly.
2. Touch a probe to the BLU/WHT wire, and connect it to body ground through a voltmeter.
3. Slowly rotate one wheel with the other wheel blocked.


Does the meter indicate pulsing voltage?

NO


Repair open in the BLU/WHT wire between the VSS and the speedometer.

YES

Replace the speedometer.

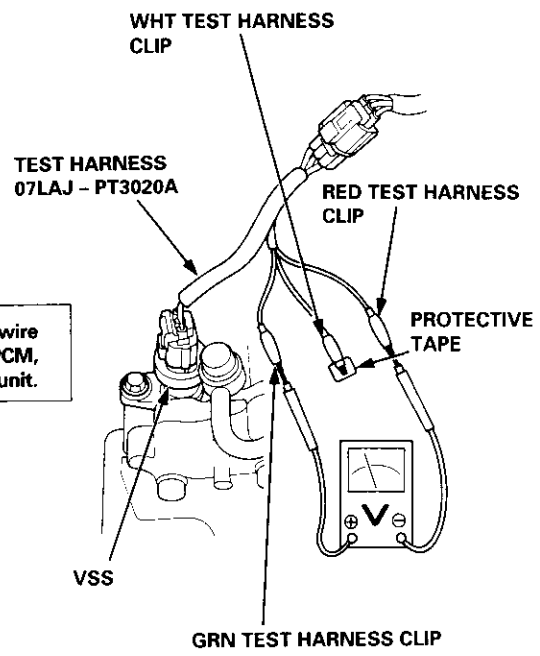

GAUGE ASSEMBLY 16P CONNECTOR "B"

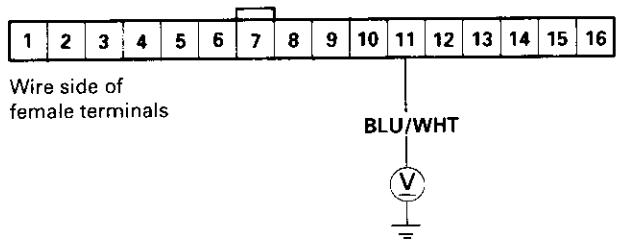


Fuel Gauge

Gauge/Sending Unit Test

▲ WARNING Do not smoke while working on the fuel system. Keep open flame away from your work area.

NOTE: Refer to page 23-117 for the fuel gauge system circuit.

1. Check the No. 25 (7.5 A) fuse in the under-dash fuse/relay box before testing.
2. Remove the access panel from the floor.

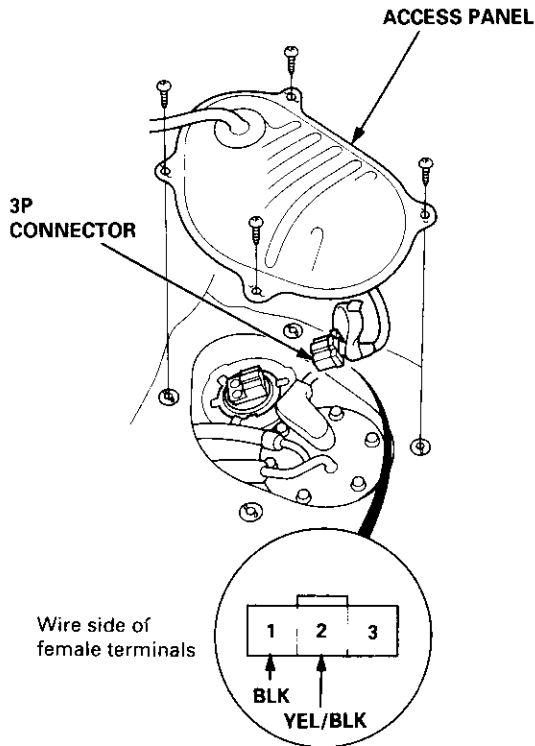

3. Disconnect the 3P connector from the fuel gauge sending unit.
4. Connect the voltmeter positive probe to the No. 2 terminal and the negative probe to the No. 1 terminal, then turn the ignition switch ON (II). There should be between 5 and 8 V.
 - If the voltage is as specified, go to step 5.
 - If the voltage is not as specified, check for:
 - an open in the YEL/BLK or BLK wire.
 - poor ground (G552).
5. Turn the ignition switch OFF.
6. Attach a jumper wire between the No. 1 and No. 2 terminals, then turn the ignition switch ON (II).

7. Check that the pointer of the fuel gauge starts moving toward the "F" mark.


CAUTION: Turn the ignition switch OFF before the pointer reaches "F" on the gauge dial. Failure to do so may damage the fuel gauge.

NOTE: The fuel gauge is a bobbin (cross-coil) type, hence the fuel level is continuously indicated even when the ignition switch is OFF, and the pointer moves more slowly than that of a bimetal type.


- If the pointer of the fuel gauge does not move at all, replace the gauge.
- If the gauge is OK, inspect the fuel gauge sending unit.

8. Remove the fuel gauge sending unit as shown.

Japan-produced

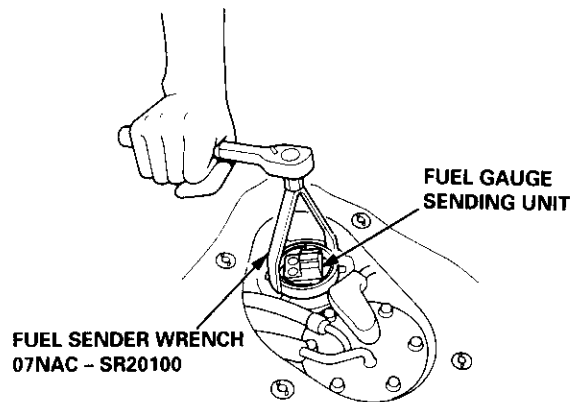

USA, Canada-produced

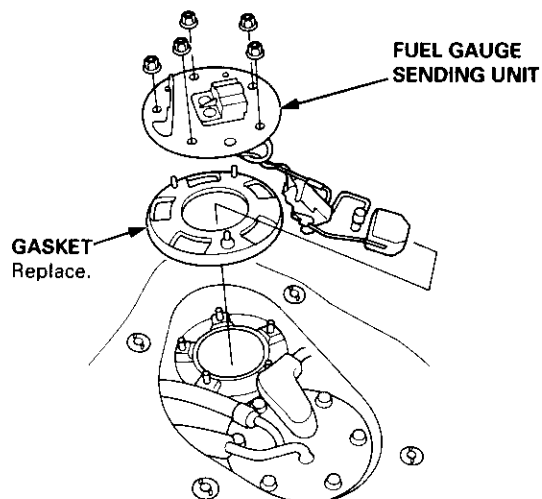




9. Measure the resistance between the No. 1 and No. 2 terminals at E (EMPTY), 1/2 (HALF FULL) and F (FULL) by moving the float.

USA, Canada-produced (Ceramic board type):

Float Position	E	1/2	F
Resistance (Ω)	105 - 108	29.5 - 35.5	3.5 - 5

Japan-Produced (Wire-wound type):

Float Position	E	1/2	F
Resistance (Ω)	105 - 110	25.5 - 39.5	2 - 5

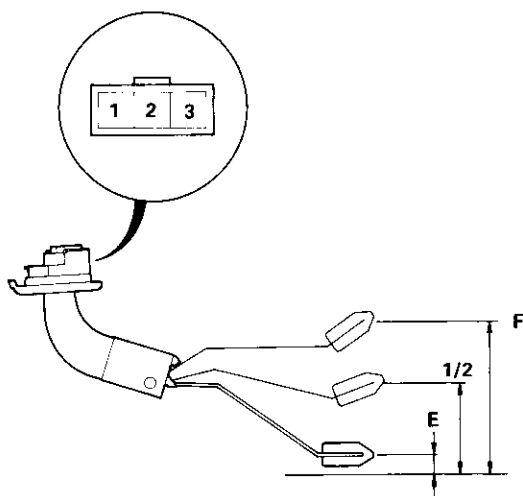



Top of the workbench (Bottom of the fuel tank)

If the resistance readings are beyond the range, replace the fuel gauge sending unit.

Interlock System

Component Location Index

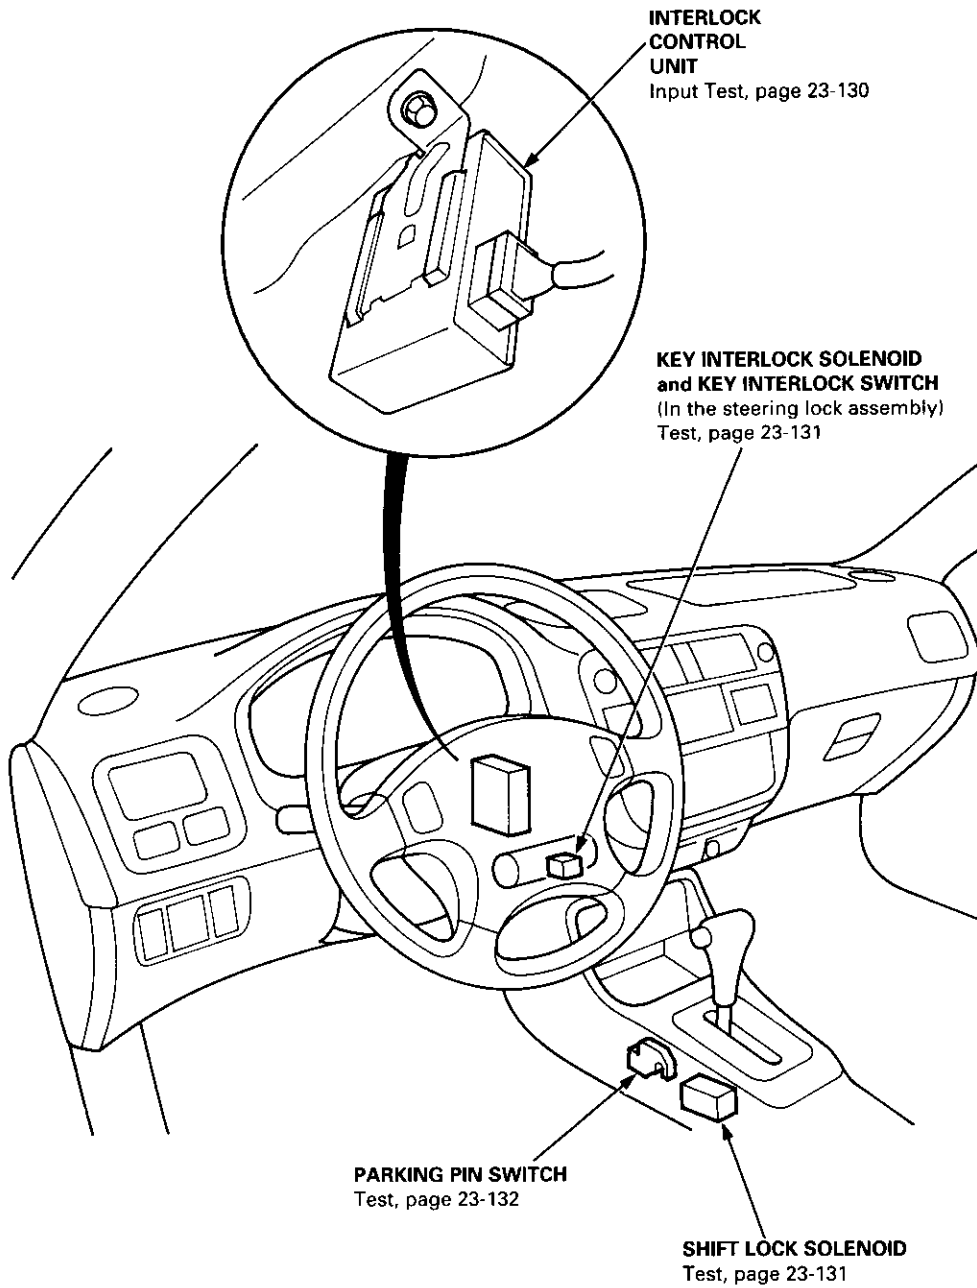

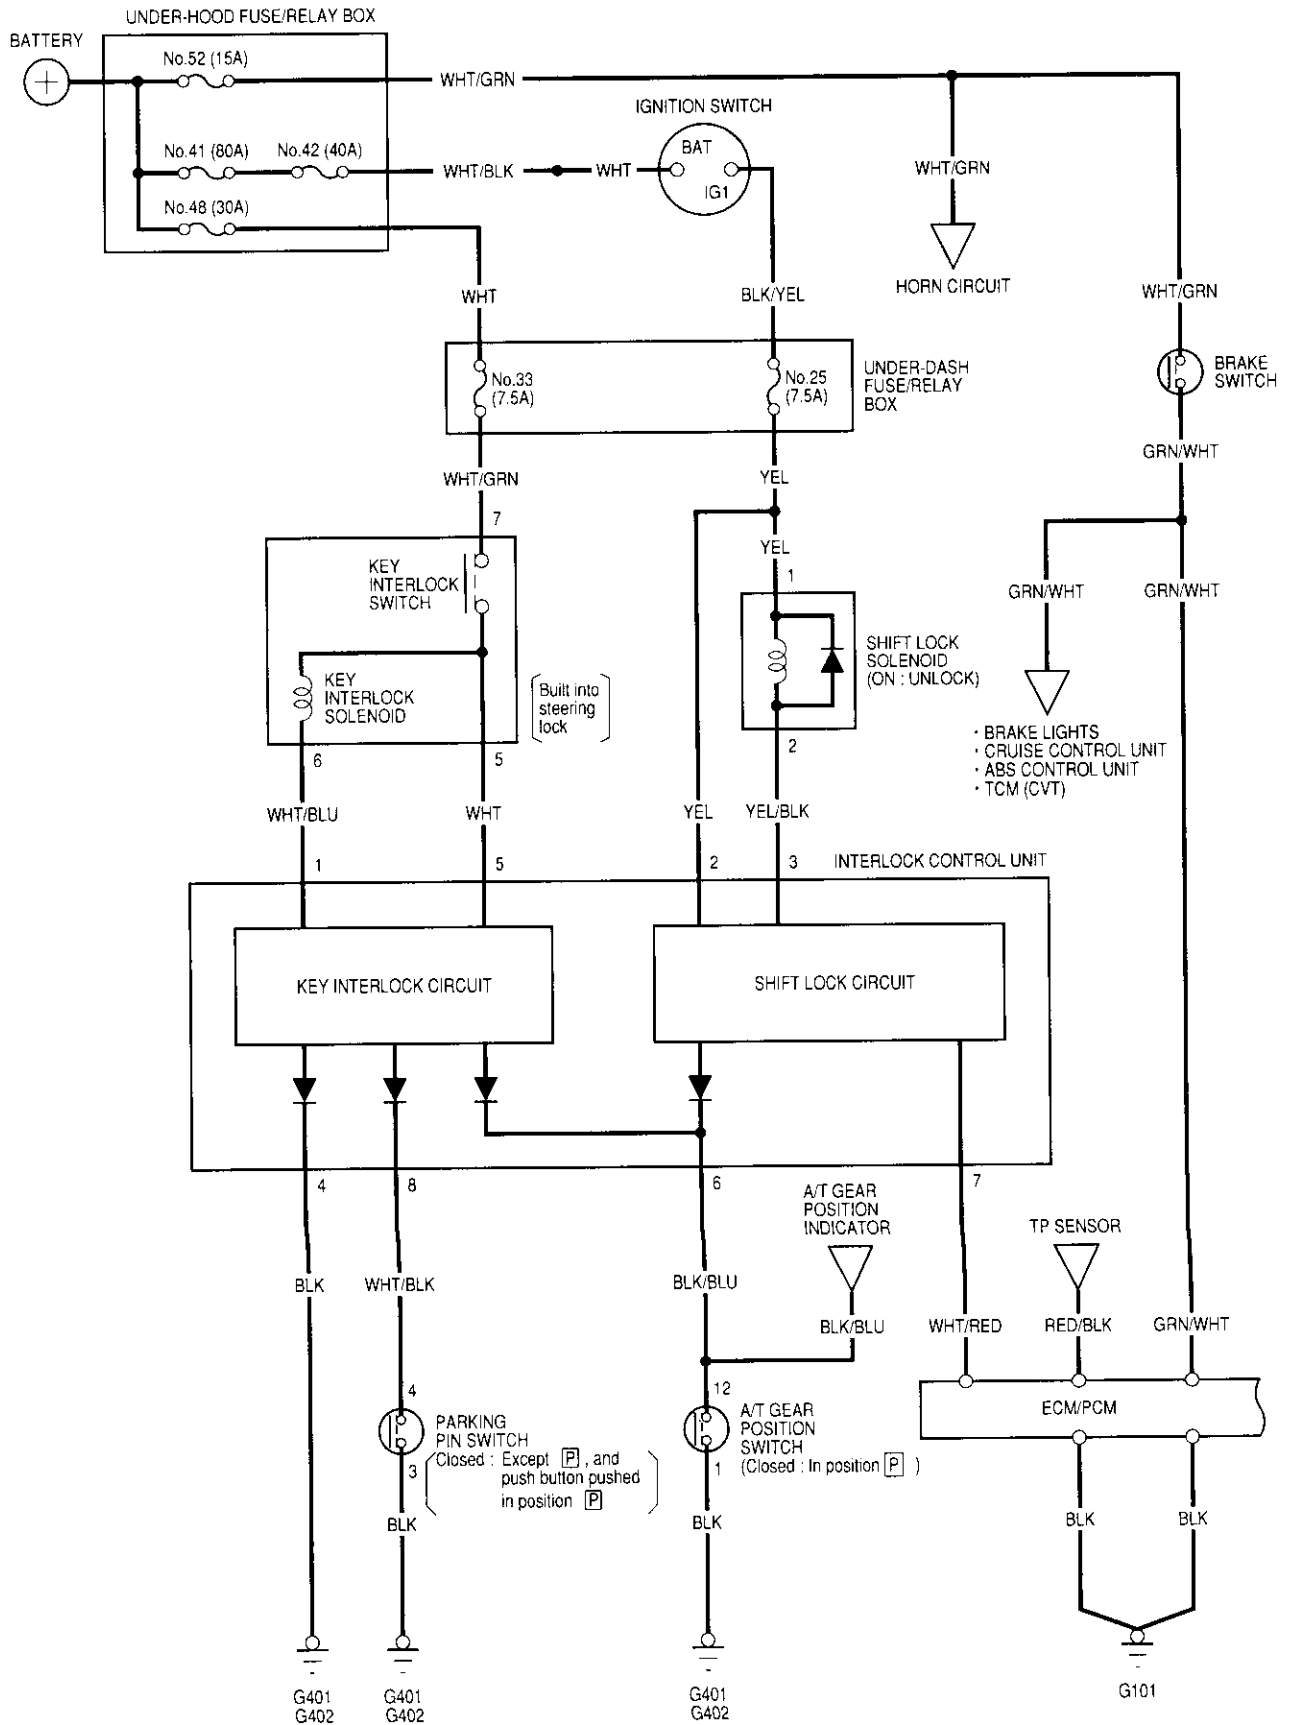


Interlock System

Control Unit Input Test

1. Disconnect the 8P connector from the interlock control unit.
2. Inspect the connector and socket terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, make the following input tests at the connector.
 - If a test indicates a problem, find and correct the cause, then recheck the system.
 - If all the input tests prove OK, substitute a known-good control unit, and recheck the system. If the check is OK, the control unit must be faulty; replace it.

NOTE: If the shift lock solenoid clicks when the ignition switch is turned ON (II) and you step on the brake pedal (with the shift lever in **P**), the shift lock system is electronically normal; if the shift lever cannot be shifted from **P**, test the A/T gear position switch, parking pin switch, and see section 14.

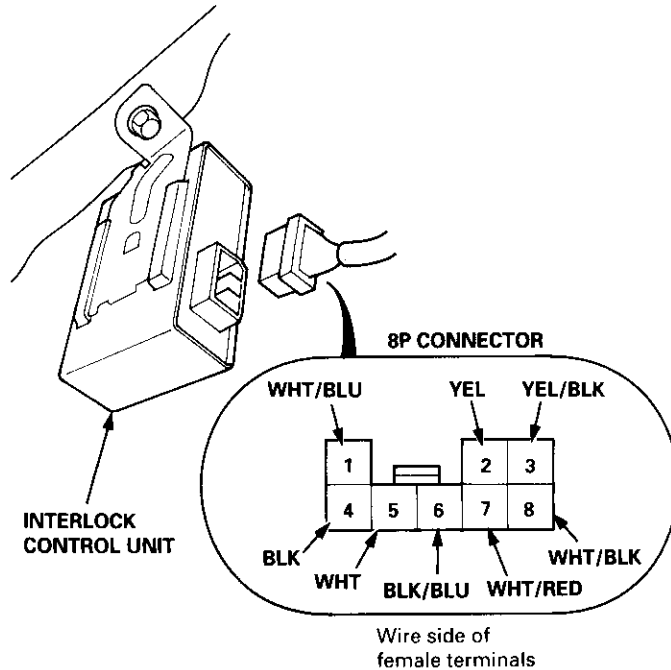

Key Interlock System:

Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
1	WHT/BLU	Ignition switch turned to ACC (I) and key pushed in	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 48 (30 A) fuse in the underhood fuse/relay box • Blown No. 33 (7.5 A) fuse in the underdash fuse/relay box • Faulty steering lock assembly (key interlock solenoid) • An open in the wire
5	WHT			
4	BLK	Under all conditions	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire
6	BLK/BLU	Shift lever in P	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • Faulty A/T gear position switch • An open in the wire

Reconnect the 8P connector to the interlock control unit.


Shift Lock System:

Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
2	YEL	Ignition switch ON (II)	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 25 (7.5 A) fuse in the underdash fuse/relay box • An open in the wire
3	YEL/BLK	Ignition switch ON (II)	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 25 (7.5 A) fuse in the underdash fuse/relay box • Faulty shift lock solenoid • An open in the wire
6	BLK/BLU	Shift lever in P	Check for voltage to ground: There should be 1 V or less.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • Faulty A/T gear position switch • An open in the wire
7	WHT/RED	Ignition switch ON (II) Brake pedal depressed	Check for voltage to ground: There should be 1 V or less.	<ul style="list-style-type: none"> • Blown No. 52 (15 A) fuse in the underhood fuse/relay box • Faulty PCM • Faulty brake switch (see section 11) • Faulty throttle position (TP) sensor (see section 11) • An open in the wire
		Ignition switch ON (II) Brake pedal and accelerator depressed at the same time	Check for voltage to ground: There should be battery voltage.	



Key Interlock Solenoid Test

1. Remove the driver's dashboard lower cover and knee bolster (see section 20).
2. Disconnect the 7P connector from the main wire harness.

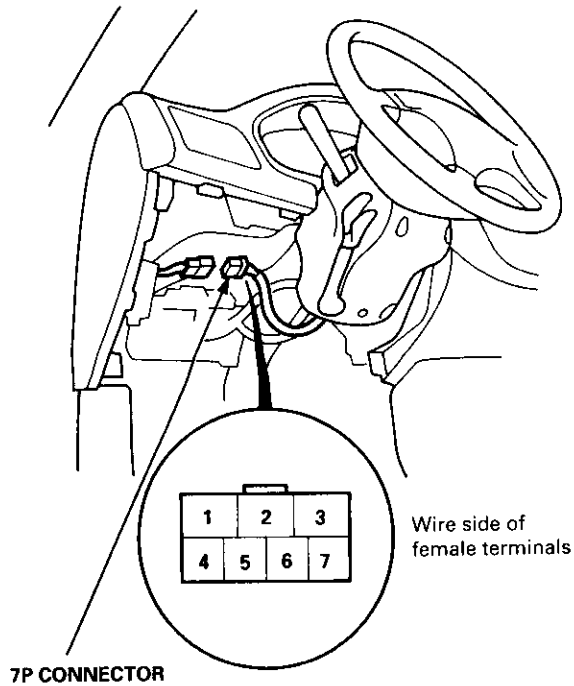

3. Check for continuity between the terminals in each key position according to the table.


		Terminal	5	6	7
Position					
Ignition switch ACC (I)	Key pushed in		○	○	○
	Key released		○	○	

4. Check that the key cannot be removed with power and ground connected to the No. 7 and No. 5 terminals.
 - If the key cannot be removed, the key interlock solenoid is OK.
 - If the key can be removed, replace the steering lock assembly (the interlock solenoid is not available separately).

Shift Lock Solenoid Test

1. Remove the front console (see section 20).
2. Disconnect the shift lock solenoid 2P connector.
3. Connect battery power to the No. 1 terminal and ground to the No. 2 terminal of the solenoid momentarily.

NOTE: Do not connect power to the No. 2 (-) terminal (reverse polarity) or you will damage the diode inside the solenoid.

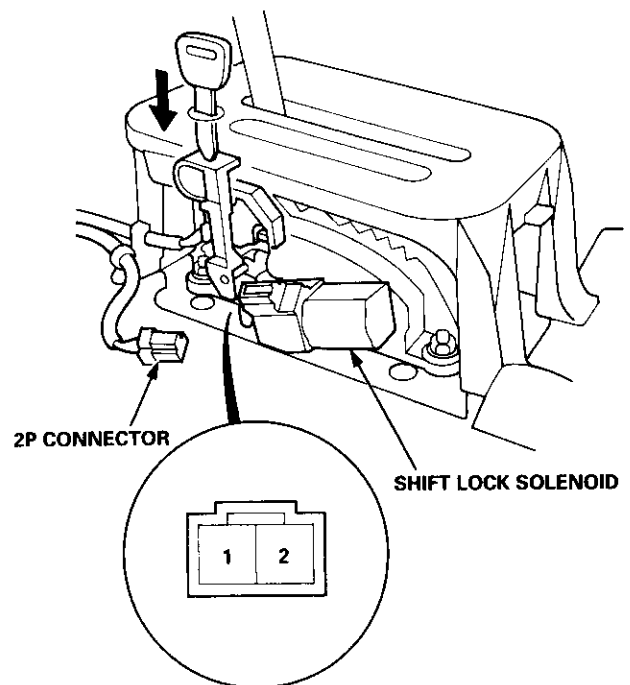


4. Check that the shift lock releases when the release lever is pushed, and check that it locks when the release lever is released.
5. If the solenoid does not work, replace the solenoid.

Interlock System

Parking Pin Switch Test

1. Remove the front console (see section 20).
2. Disconnect the 4P connector from the parking pin switch.
3. Check for continuity between the No. 3 and No. 4 terminals with:
 - the shift lever any position other than **P**, or
 - the push button pushed in **P**.There should be continuity.
4. Check for continuity between the No. 3 and No. 4 terminals with the shift lever in **P** and the push button released. There should be no continuity. If necessary, replace the parking pin switch.

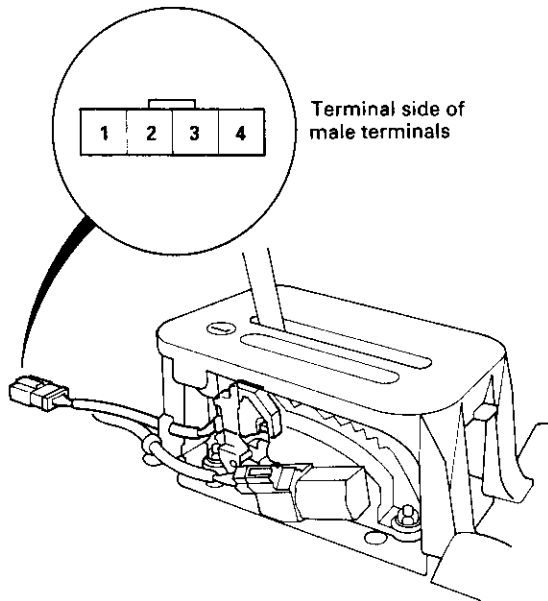


NOTE: Parking pin switch 4P connector No. 1 and No. 2 terminals are for A/T gear position console light, refer to the circuit diagram on page 23-134.



A/T Gear Position Indicator


Component Location Index

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

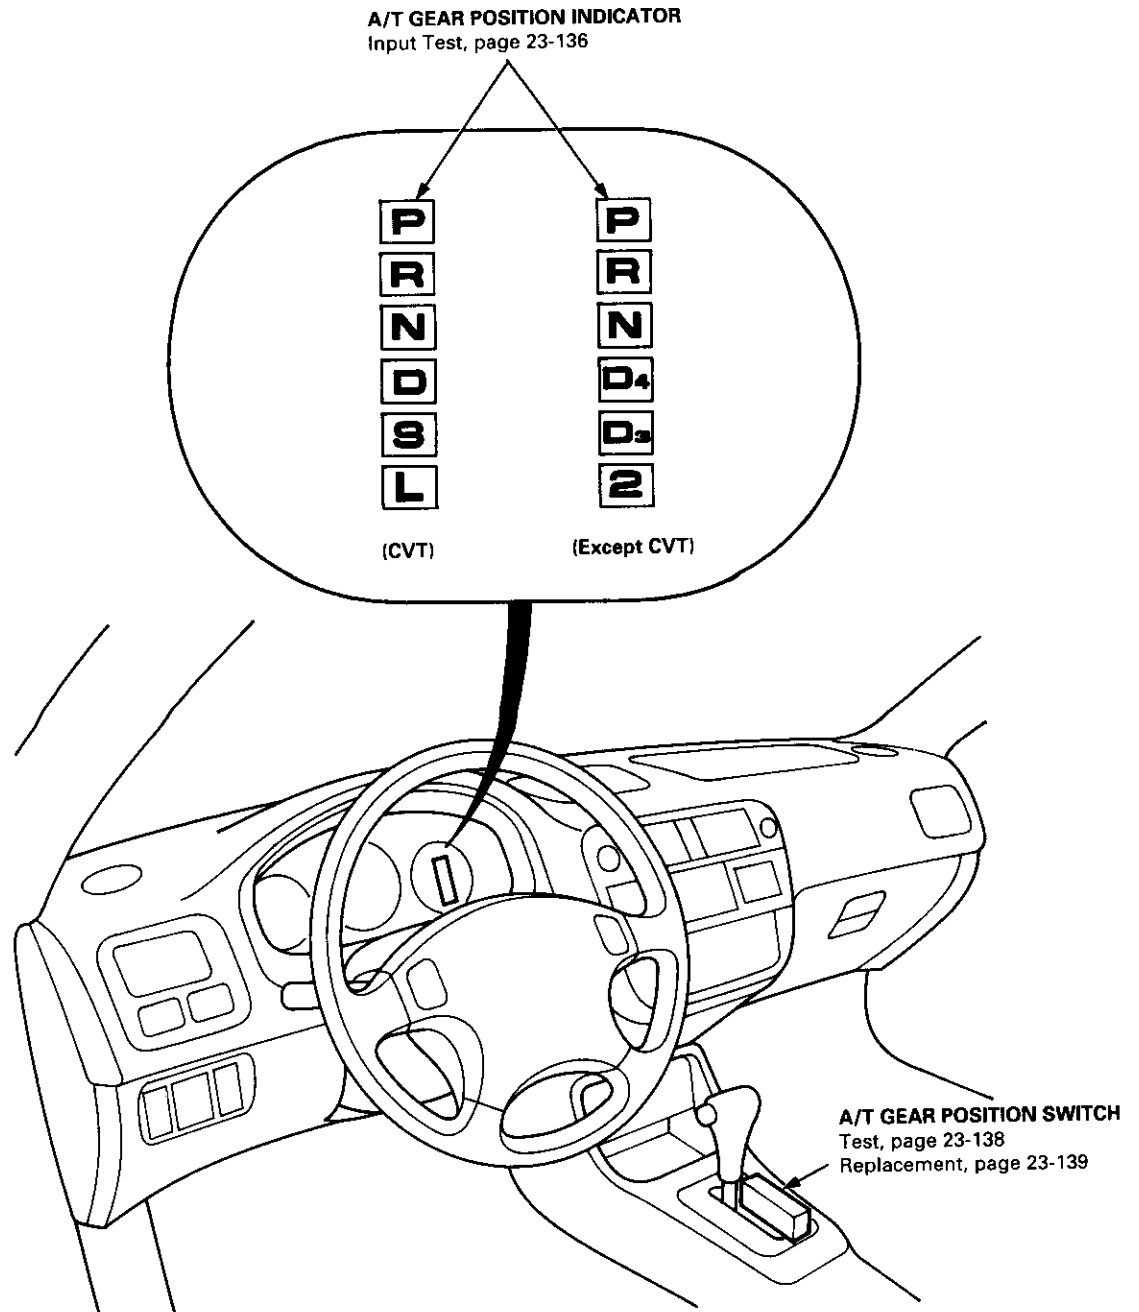

A/T Gear Position Indicator


Circuit Diagram

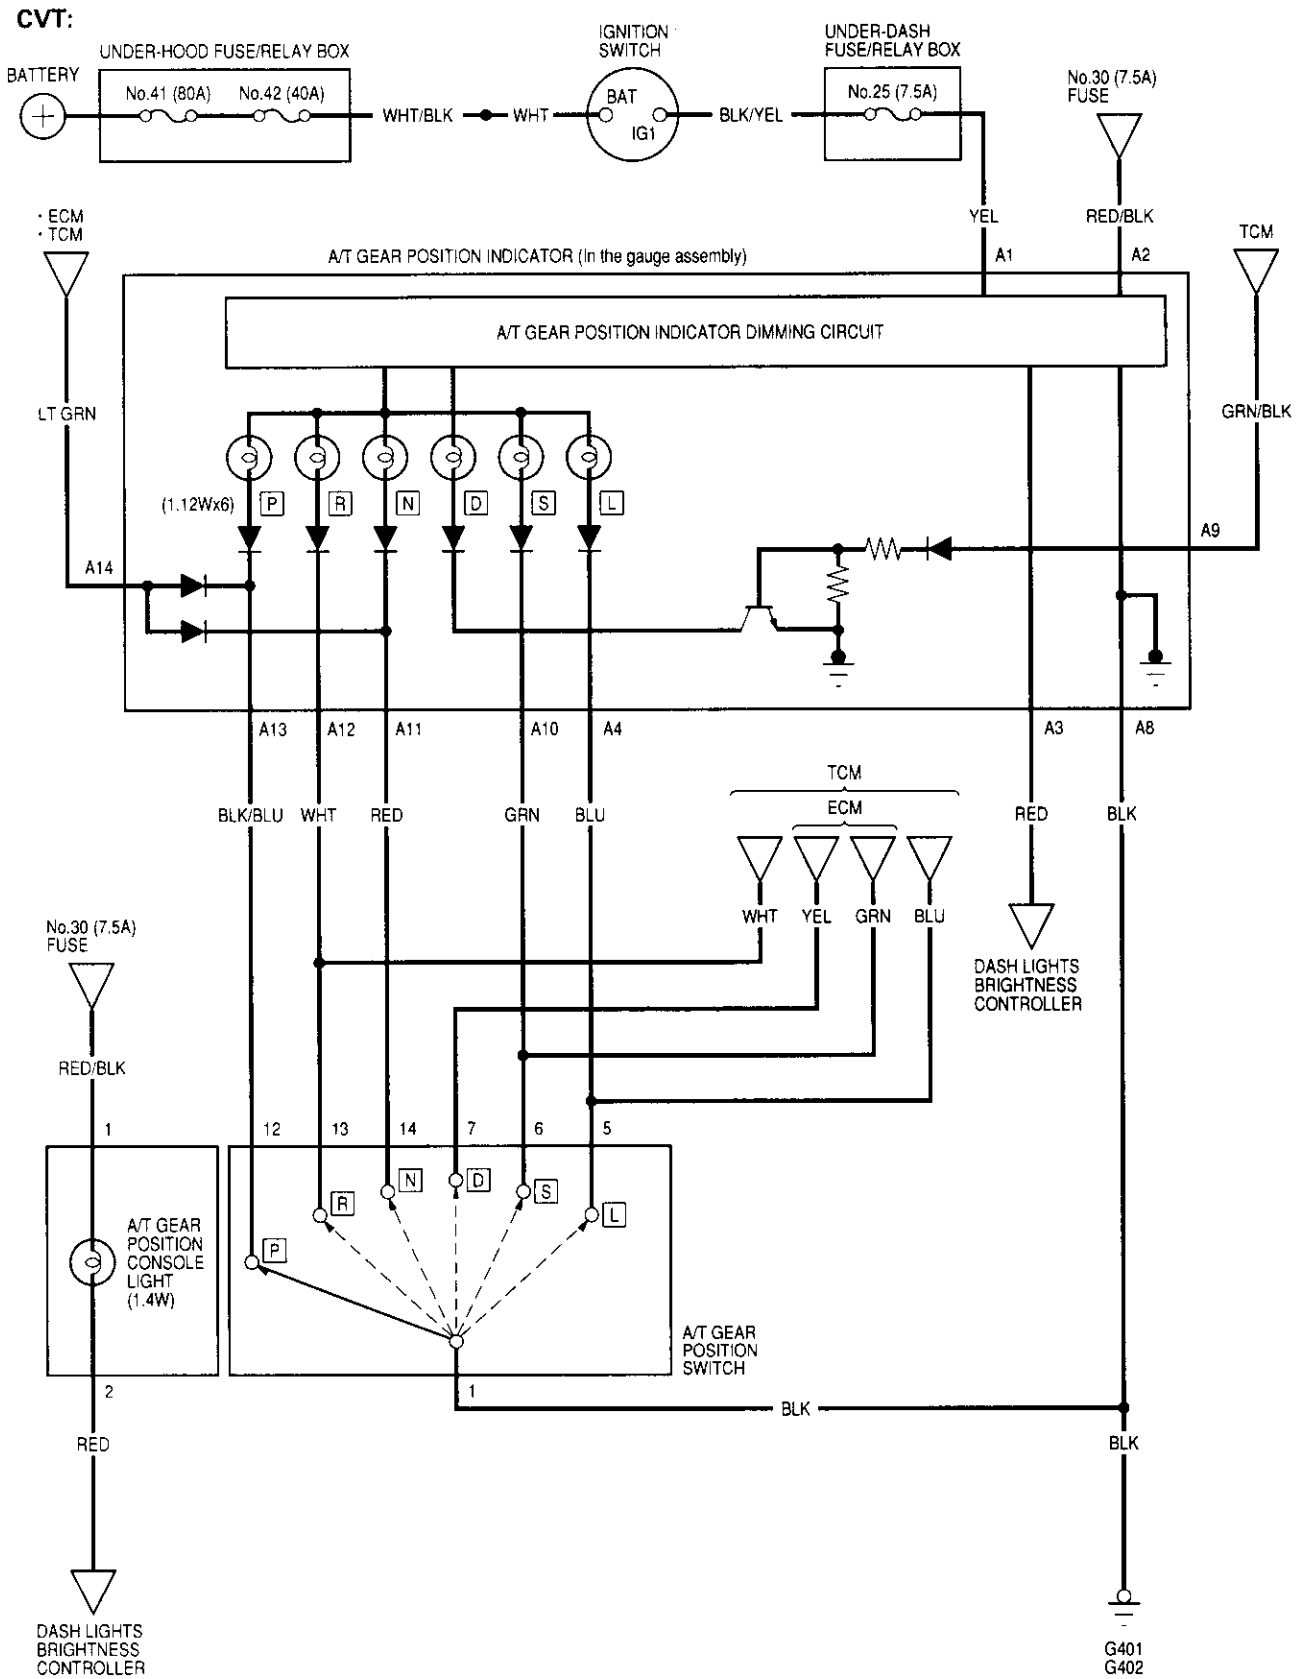



Circuit Diagram

Except CVT:

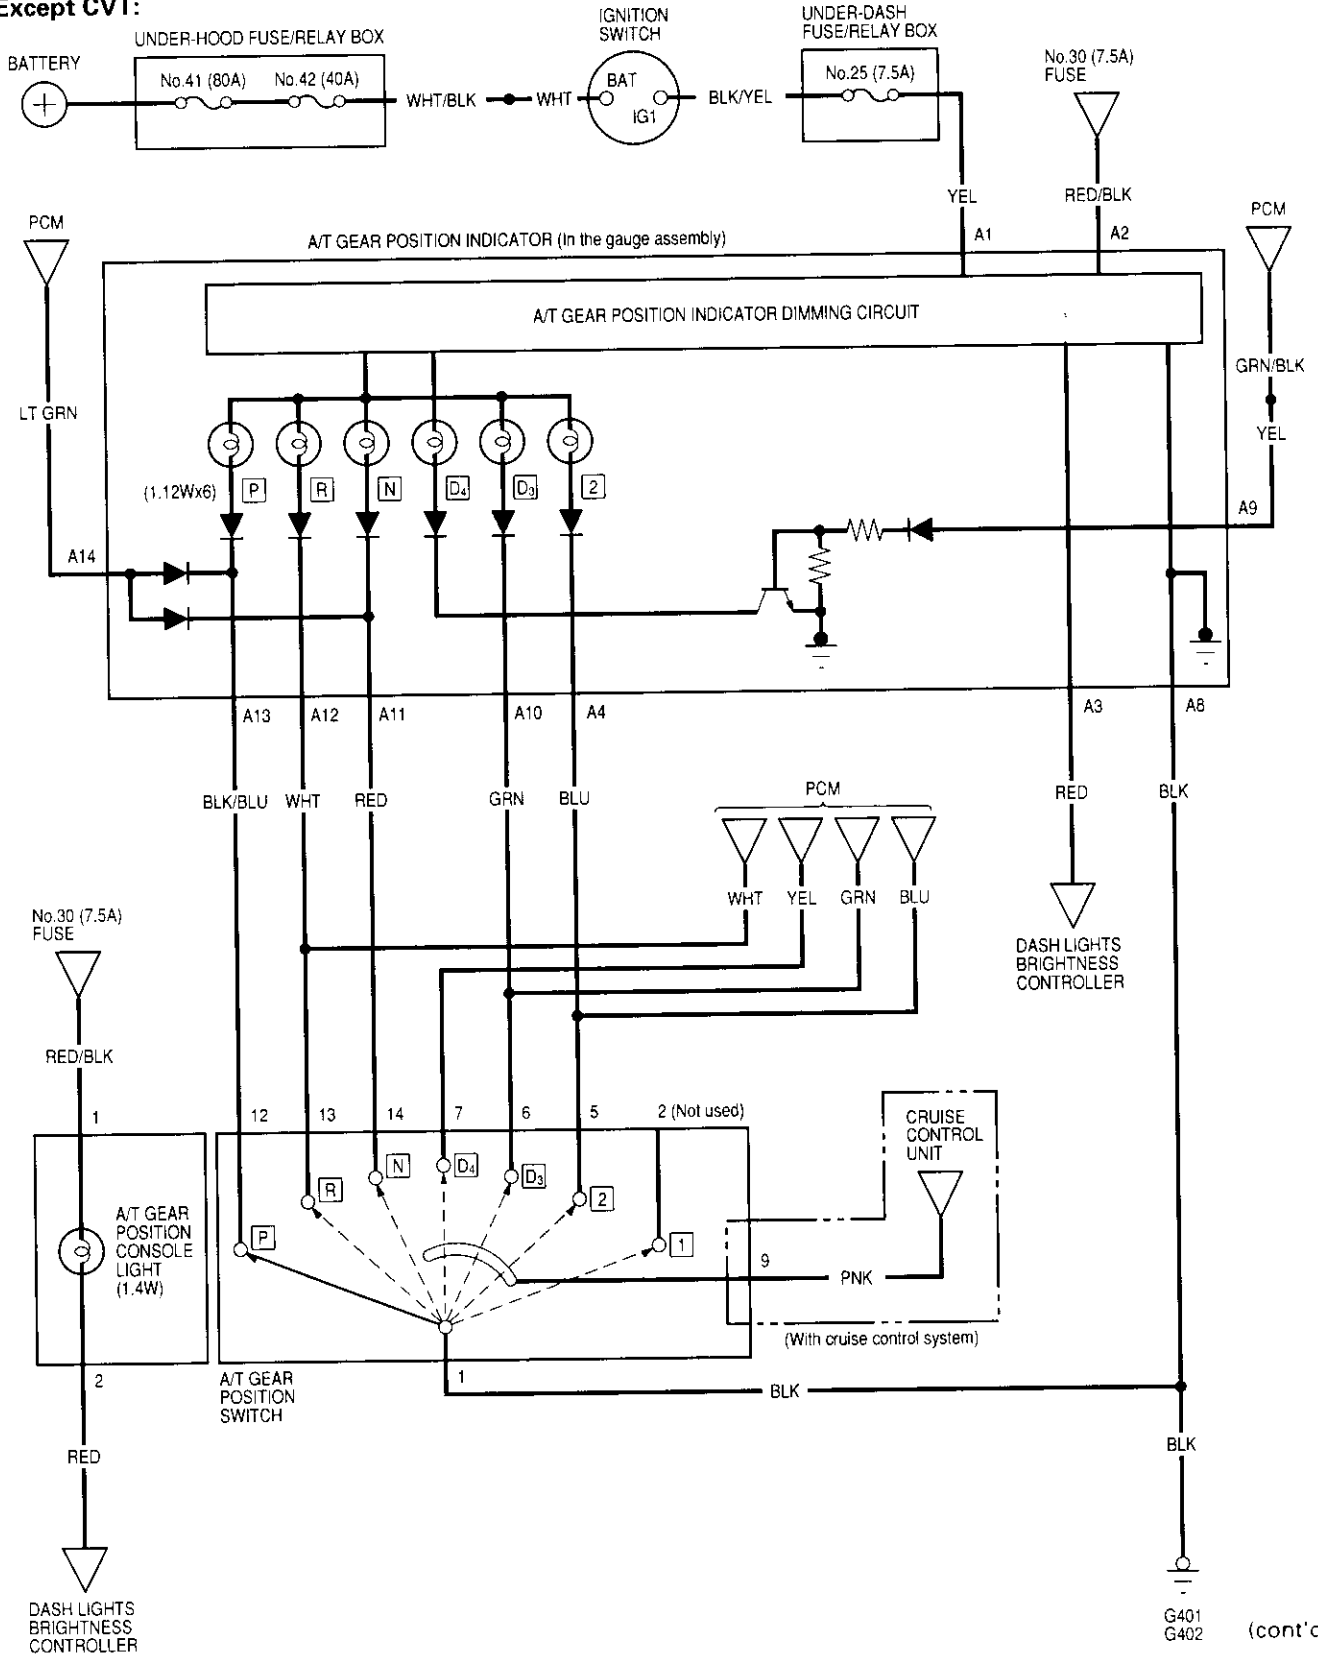


G401
G402 (cont'd)

A/T Gear Position Indicator

Indicator Input Test

1. Remove the gauge assembly from the dashboard (see page 23-119), and disconnect the 14P connector from the gauge assembly.
2. Inspect the connector and socket terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, make the following input tests at the 14P connector.
 - If a test indicates a problem, find and correct the cause, then recheck the system.
 - If all the input tests prove OK, but the indicator is faulty, replace the printed circuit board.

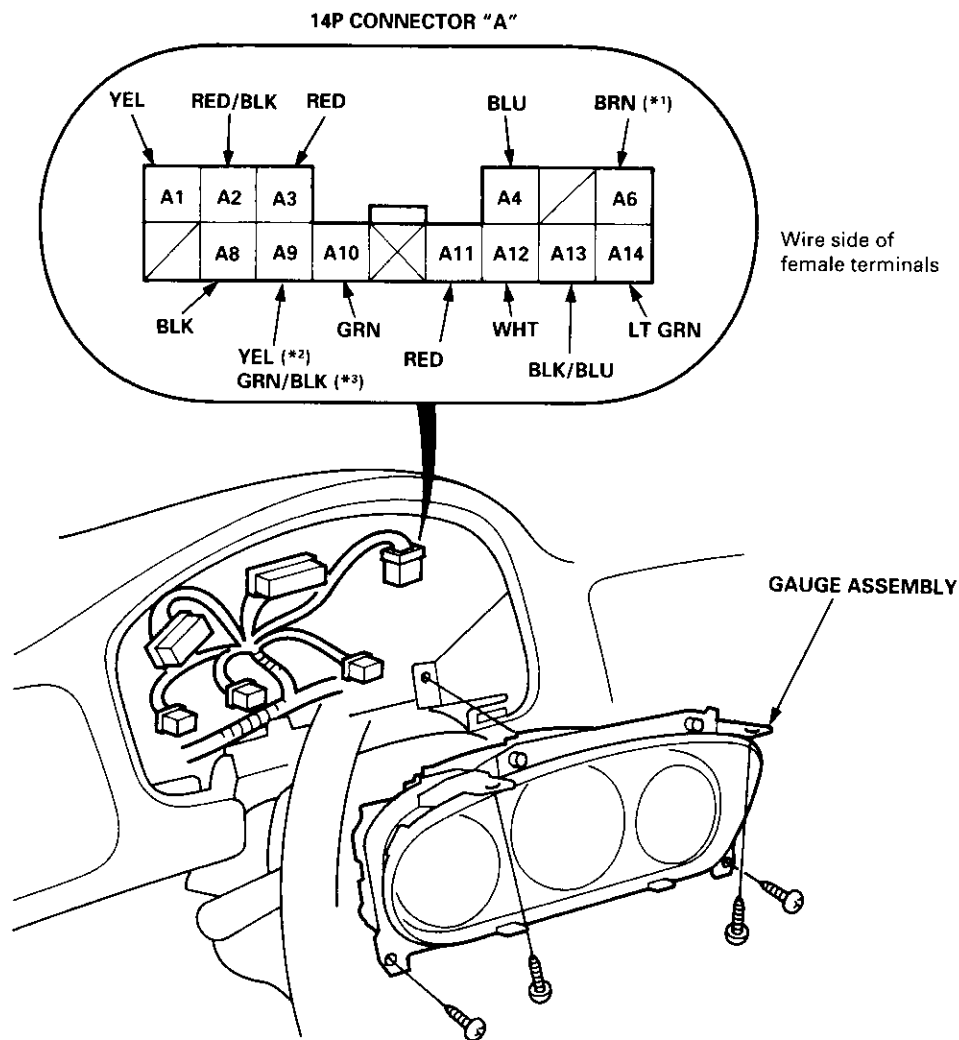

*1: Not used
*2: Except CVT
*3: CVT



Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
A1	YEL	Ignition switch ON (II)	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> Blown No. 25 (7.5 A) fuse in the under-dash fuse/relay box An open in the wire
A2	RED/BLK	Combination light switch ON and dash lights brightness control dial on full bright	Check for voltage between RED/BLK and RED terminals: There should be battery voltage.	<ul style="list-style-type: none"> Blown No. 30 (7.5 A) fuse in the under-dash fuse/relay box Faulty combination light switch Faulty dash lights brightness controller An open in the wire
A3	RED			
A4	BLU	Shift lever in 2 or L	Check for continuity to ground: There should be continuity. NOTE: There should be no continuity in any other position.	<ul style="list-style-type: none"> Faulty A/T gear position switch An open in the wire
A10	GRN	Shift lever in D₂ or S		
A11	RED	Shift lever in N		
A12	WHT	Shift lever in R		
A13	BLK/BLU	Shift lever in P NOTE: Don't depress the brake pedal.		
A9	YEL* ¹	Ignition switch ON (II) and shift lever in any position except D₂	Check for voltage to ground: There should be battery voltage for two seconds after the ignition switch is turned ON (II), and then less than 1 V.	<ul style="list-style-type: none"> Faulty TCM*² Faulty PCM*¹ An open in the wire
	GRN/BLK* ²	Ignition switch ON (II) and shift lever in any position except D		
A8	BLK	Under all conditions	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> Poor ground (G401, G402) An open in the wire
A14	LT GRN	Ignition switch ON (II)	Check for voltage to ground: <ul style="list-style-type: none"> There should be battery voltage*² There should be about 5 V*¹ 	<ul style="list-style-type: none"> Faulty TCM*² Faulty PCM*¹ An open in the wire


*1: Except CVT

*2: CVT

A/T Gear Position Indicator

A/T Gear Position Switch Test

1. Remove the front console (see section 20).
2. Disconnect the 14P connector from the A/T gear position switch.
3. Check for continuity between the terminals in each switch position according to the table.
 - Move the shift lever back and forth without pushing the shift lever at each switch position, and check for continuity within the range of free play of the shift lever.
 - If there is no continuity within the range of free play, adjust the position of the switch as described on the next page.

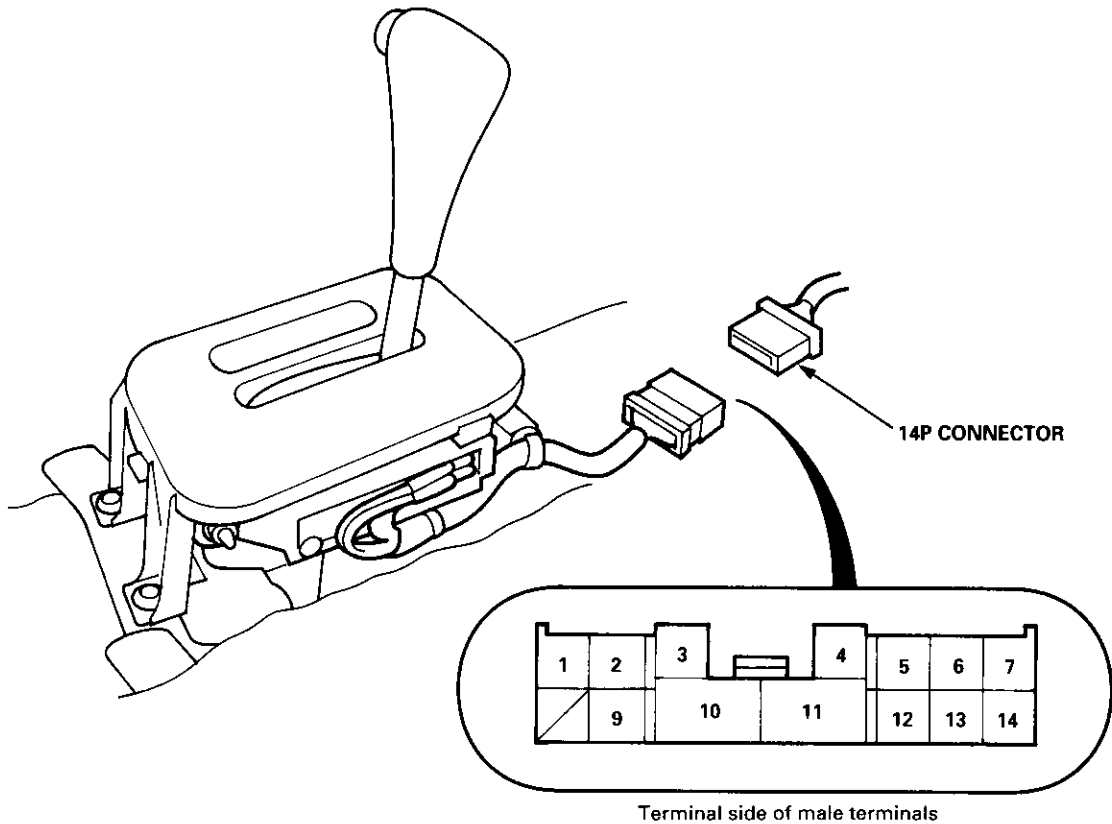


A/T Gear Position Switch									Back - up Light Switch		Neutral Position Switch		
Terminal Position	1	2	5	6	7	*1 9	12	13	14	3	4	10	11
(Not used)	○	○											
2 L	○	○	○			○							
D₃ S	○			○		○							
D₄ D	○				○	○							
N N	○								○			○	○
R R	○									○	○		
P P	○						○					○	○

* 1 : With cruise control system



A/T Gear Position Switch Replacement

1. Remove the front console, then disconnect the 14P connector from the A/T gear position switch.
2. Remove the two mounting nuts.

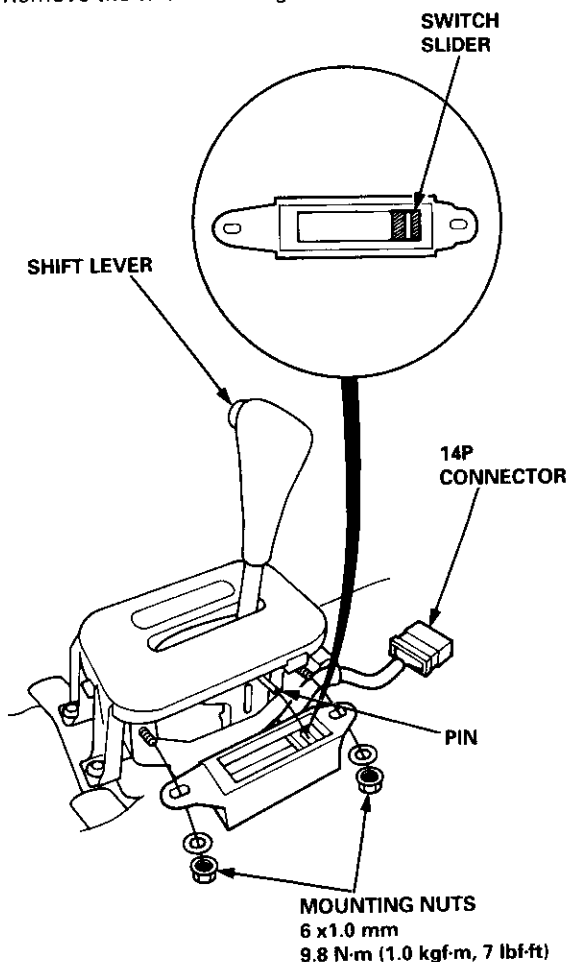



3. Position the switch slider to "Neutral" as shown above.
4. Move the shift lever to "Neutral", then slip the switch into position.
5. Attach the switch with the two mounting nuts.
6. Test the switch in the **P** and **N** position of the shift lever. The engine should start when the shift lever is in position **P** anywhere in the range of free play.
7. Connect the 14P connector, clamp the harness, and install the front console.

A/T Gear Position Switch Adjustment

1. Shift to the **P** position, and loosen the nuts.
2. Slide the switch in the direction of **D₊** or **D₋** position [within 2.0 mm (0.079 in.)] so that there is continuity between the No. 1 and No. 7 terminals in the range of free play of the shift lever.
3. Recheck for continuity between each of the terminals.


NOTE:


- If adjustment is not possible, check for damage to the shift lever detent and/or the bracket. If there is no damage, replace the console switch.
- The engine should start when the shift lever is in position **N** in the range of free play.

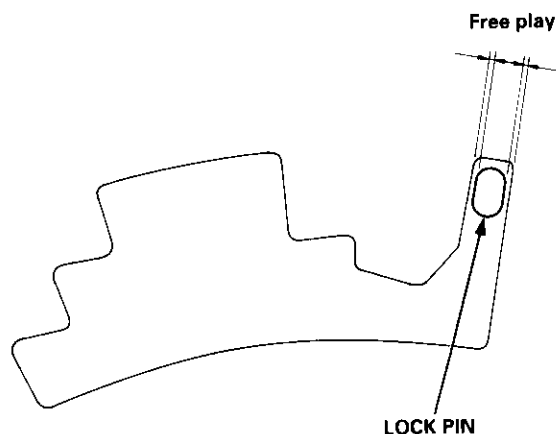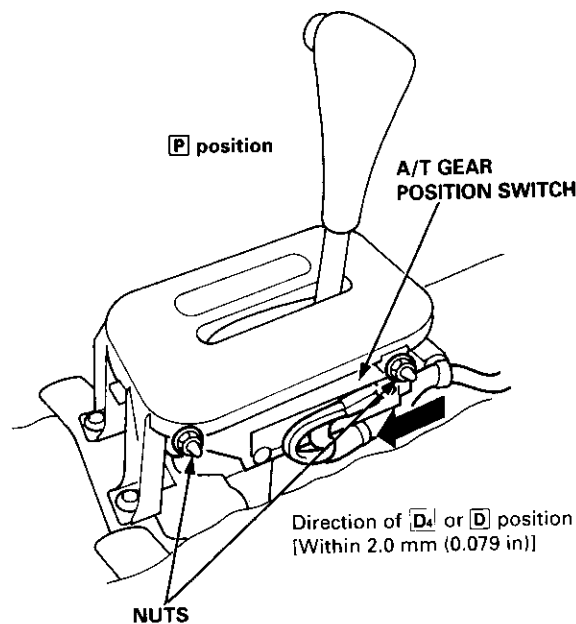

Integrated Control Unit

Circuit Diagram

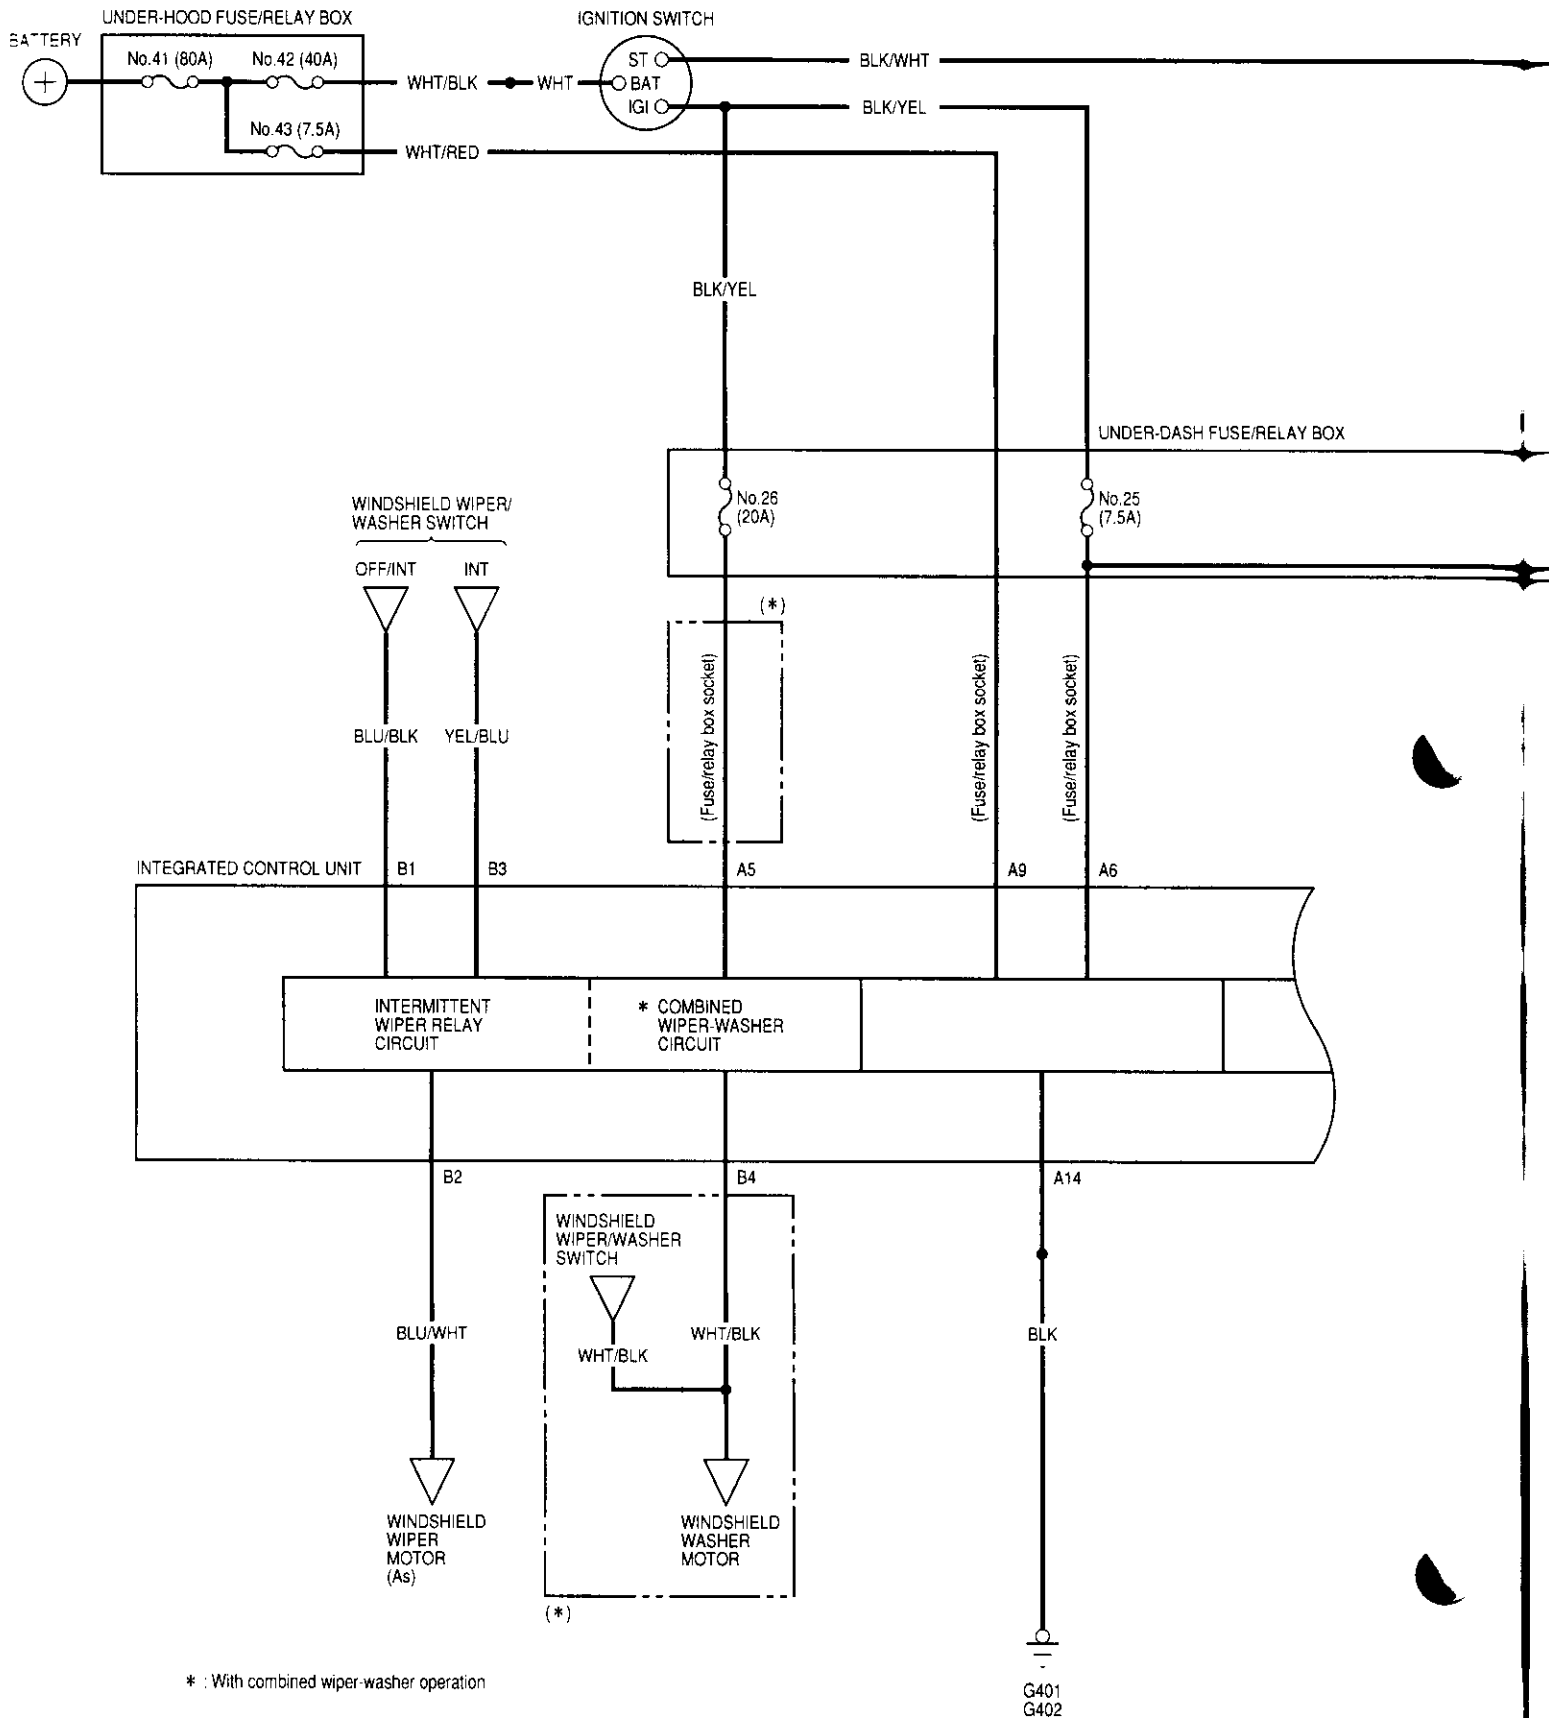

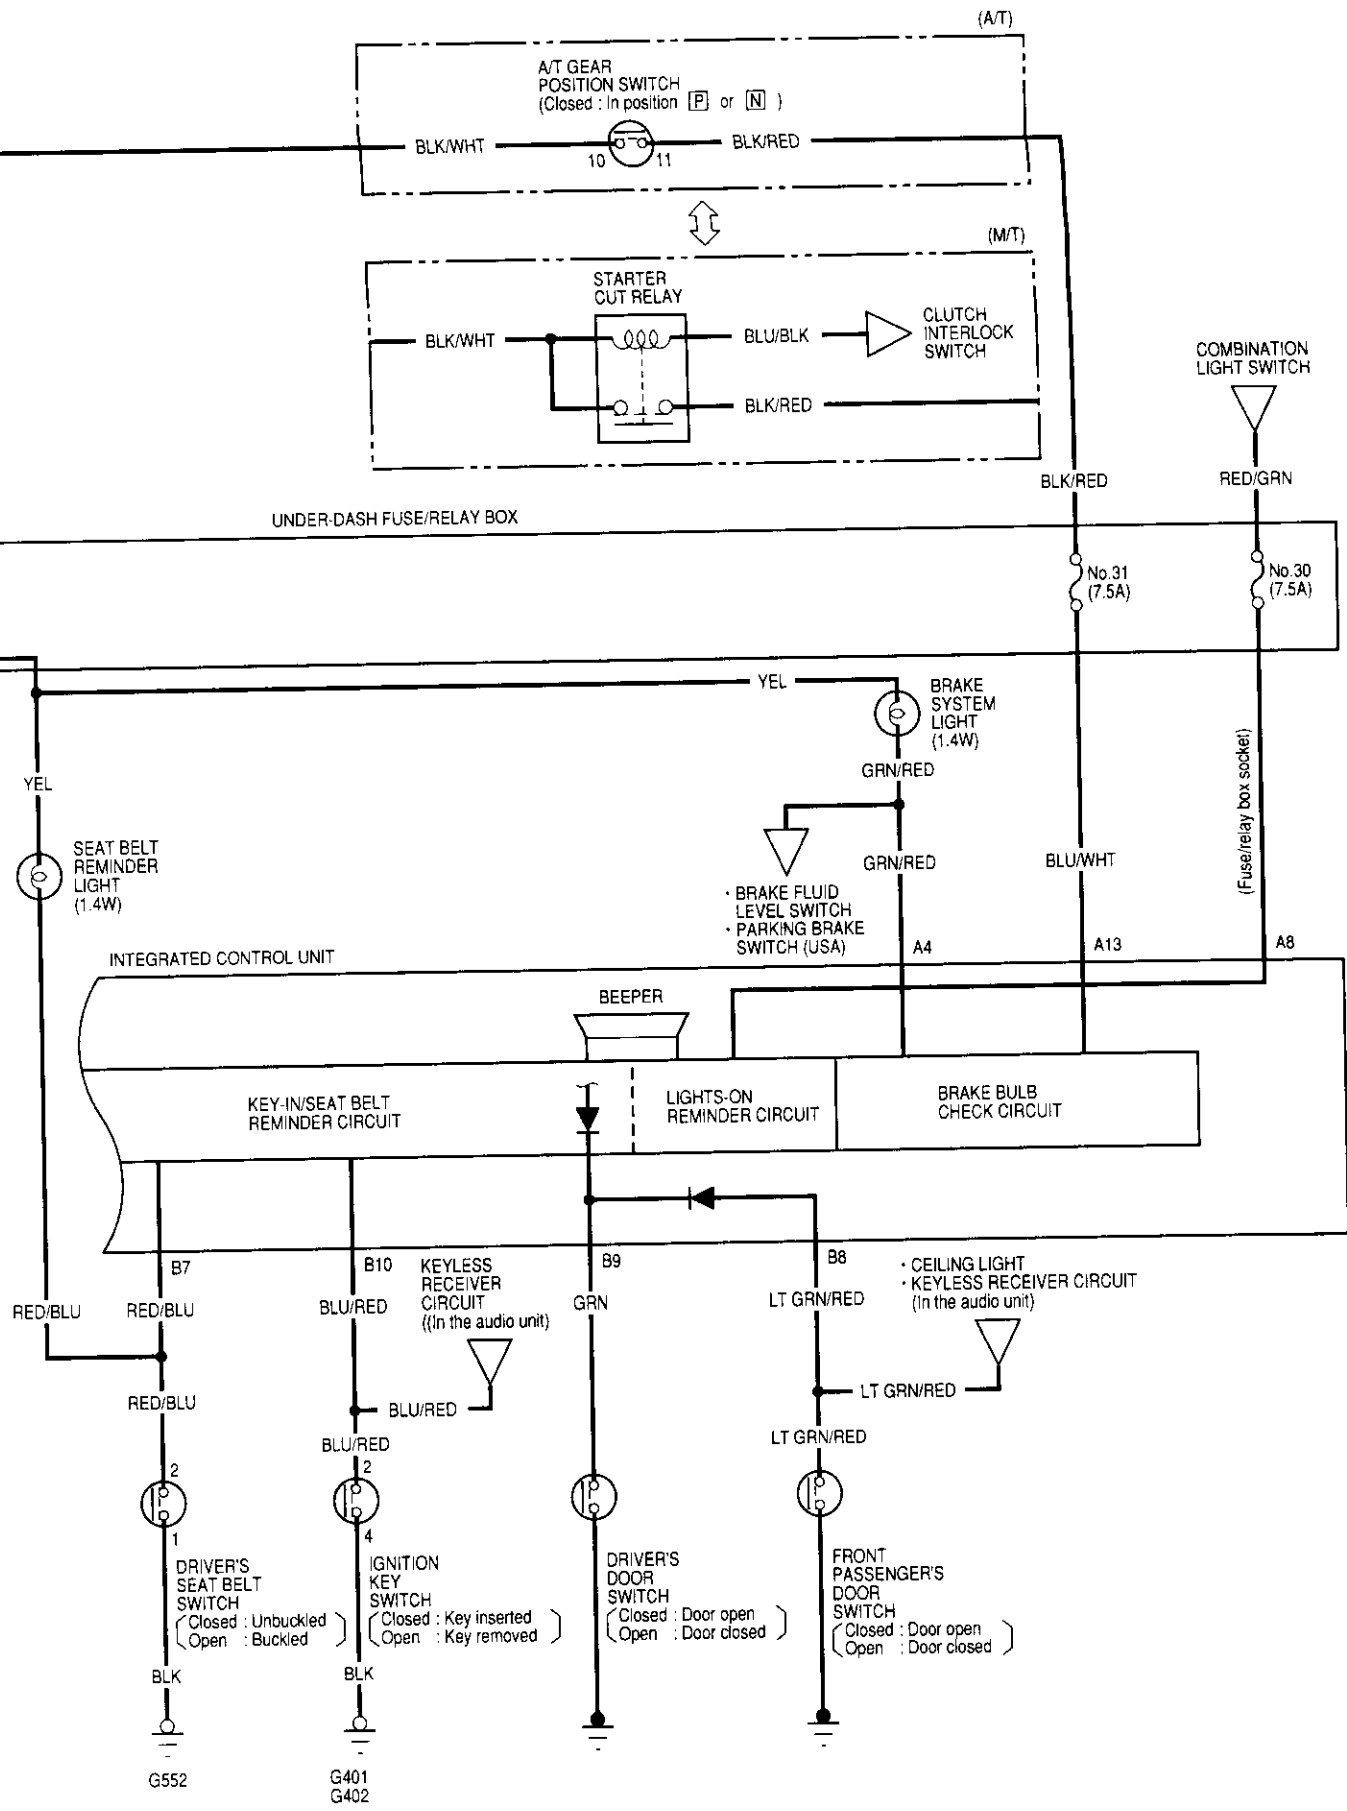


Integrated Control Unit

Input Test

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

1. Remove the driver's dashboard lower cover and knee bolster (see section 20).
2. Disconnect the 10P connector from the integrated control unit.
3. Remove the integrated control unit from the under-dash fuse/relay box.
4. Inspect the connector and socket terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, make the following input tests at the connector and the fuse/relay box socket.
 - If any test indicates a problem, find and correct the cause, then recheck the system.
 - If all the input tests prove OK, the control unit must be faulty; replace it.

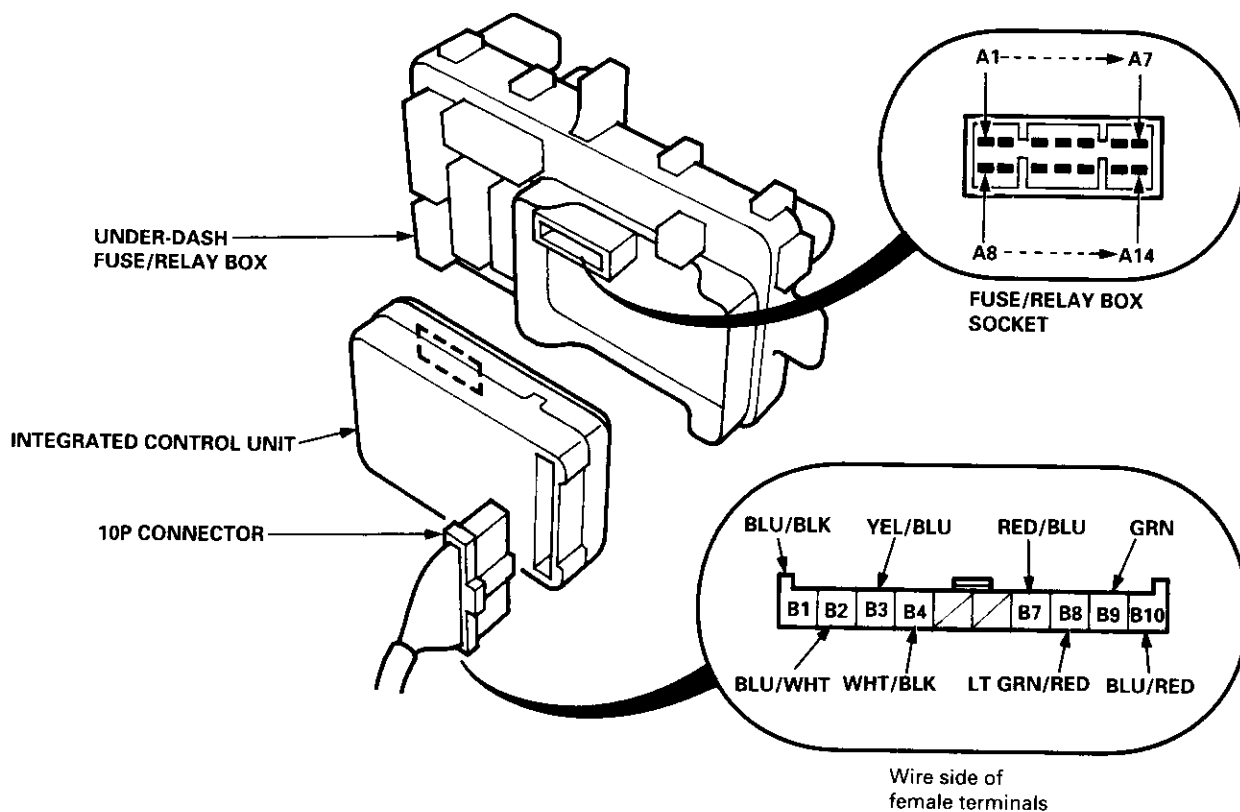



All Systems:

Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
A14	BLK	Under all conditions	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire
A9	—	Under all conditions	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 43 (7.5 A) fuse in the under-hood fuse/relay box • An open in the wire
A6	—	Ignition switch ON (II)	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 25 (7.5 A) fuse in the under-dash fuse/relay box • An open in the wire

Intermittent Wiper System:



Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
B1 • B2	BLU/BLK and BLU/WHT	Ignition switch ON (II), and windshield wiper switch at OFF or INT	Check for continuity between the BLU/BLK and BLU/WHT terminals: There should be continuity.	<ul style="list-style-type: none"> • Blown No. 26 (20 A) fuse in the under-dash fuse/relay box • Faulty windshield wiper switch • Faulty windshield wiper motor • An open in the wire
B3	YEL/BLU	Ignition switch ON (II), and windshield wiper switch at INT	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 26 (20 A) fuse in the under-dash fuse/relay box • Faulty windshield wiper switch • An open in the wire
*A5	—	Ignition switch ON (II)	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 26 (20 A) fuse in the under-dash fuse/relay box • An open in the wire
*B4	WHT/BLK	Ignition switch ON (II), and windshield washer switch ON	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Faulty windshield washer switch • An open in the wire

*: With combined wiper-washer operation

(cont'd)

Integrated Control Unit

Input Test (cont'd)

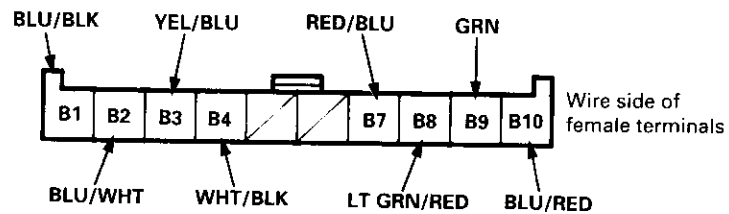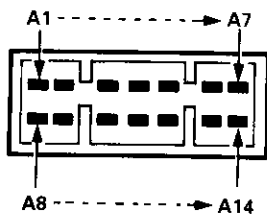

Key-in/Seat Belt Reminder, Lights-on Reminder System:


Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
A8	_____	Combination light switch ON	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 30 (7.5 A) fuse in the under-dash fuse/relay box • Faulty combination light switch • An open in the wire
B7	RED/BLU	Ignition switch ON (II), and driver's seat belt switch unbuckled	Check for voltage to ground: There should be 1 V or less.	<ul style="list-style-type: none"> • Poor ground (G552) • Faulty seat belt switch • An open in the wire
B9	GRN	Driver's door open	Check for voltage to ground: There should be 1 V or less.	<ul style="list-style-type: none"> • Faulty driver's door switch • An open in the wire
B10	BLU/RED	Ignition key inserted into the ignition key switch	Check for voltage to ground: There should be 1 V or less.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • Faulty ignition key switch • An open in the wire

Bulb Check System (Brake System Light):

Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
A4	GRN/RED	Ignition switch ON (II), brake fluid reservoir full, and parking brake lever down	Connect to ground: Brake system light should come on.	<ul style="list-style-type: none"> • Blown No. 25 (7.5 A) fuse in the under-dash fuse/relay box • Blown brake system light bulb • An open in the wire
A13	BLU/WHT	Ignition switch at START (III)	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 31 (7.5 A) fuse in the under-dash fuse/relay box • Faulty starter cut relay • An open in the wire



Component Location Index

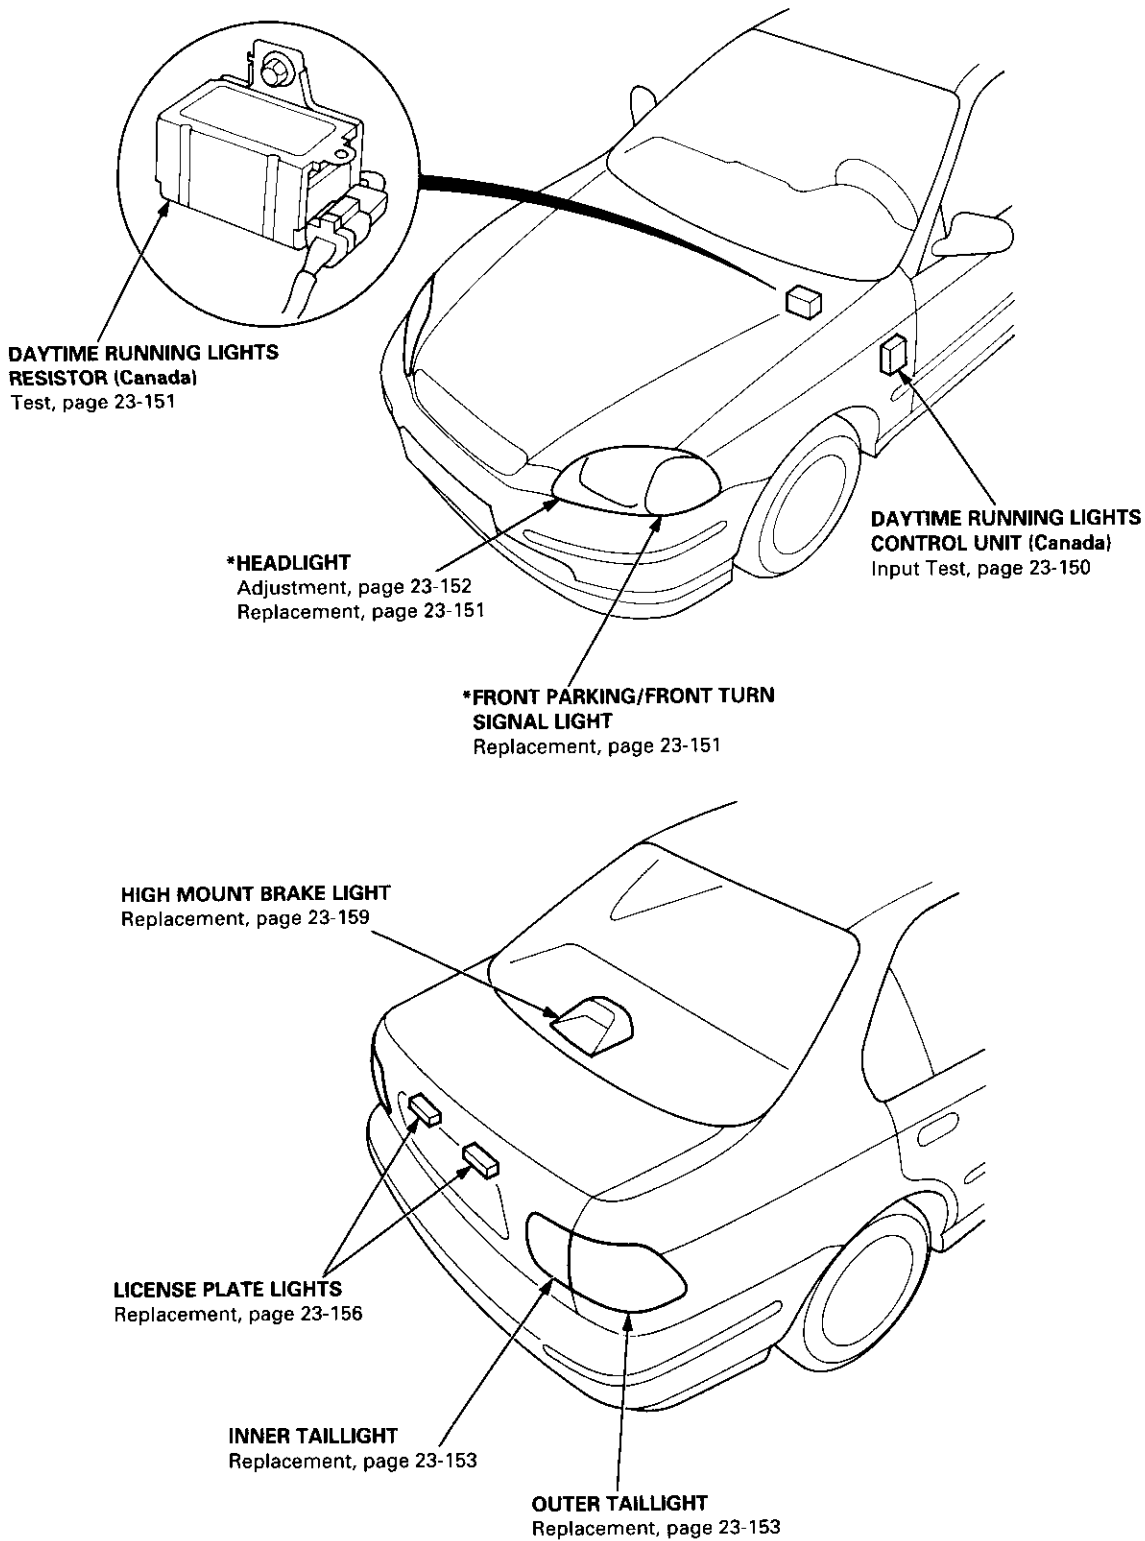


*: Headlight and front parking/front turn signal light cannot be separated.

(cont'd)


Lighting System

Component Location Index (cont'd)

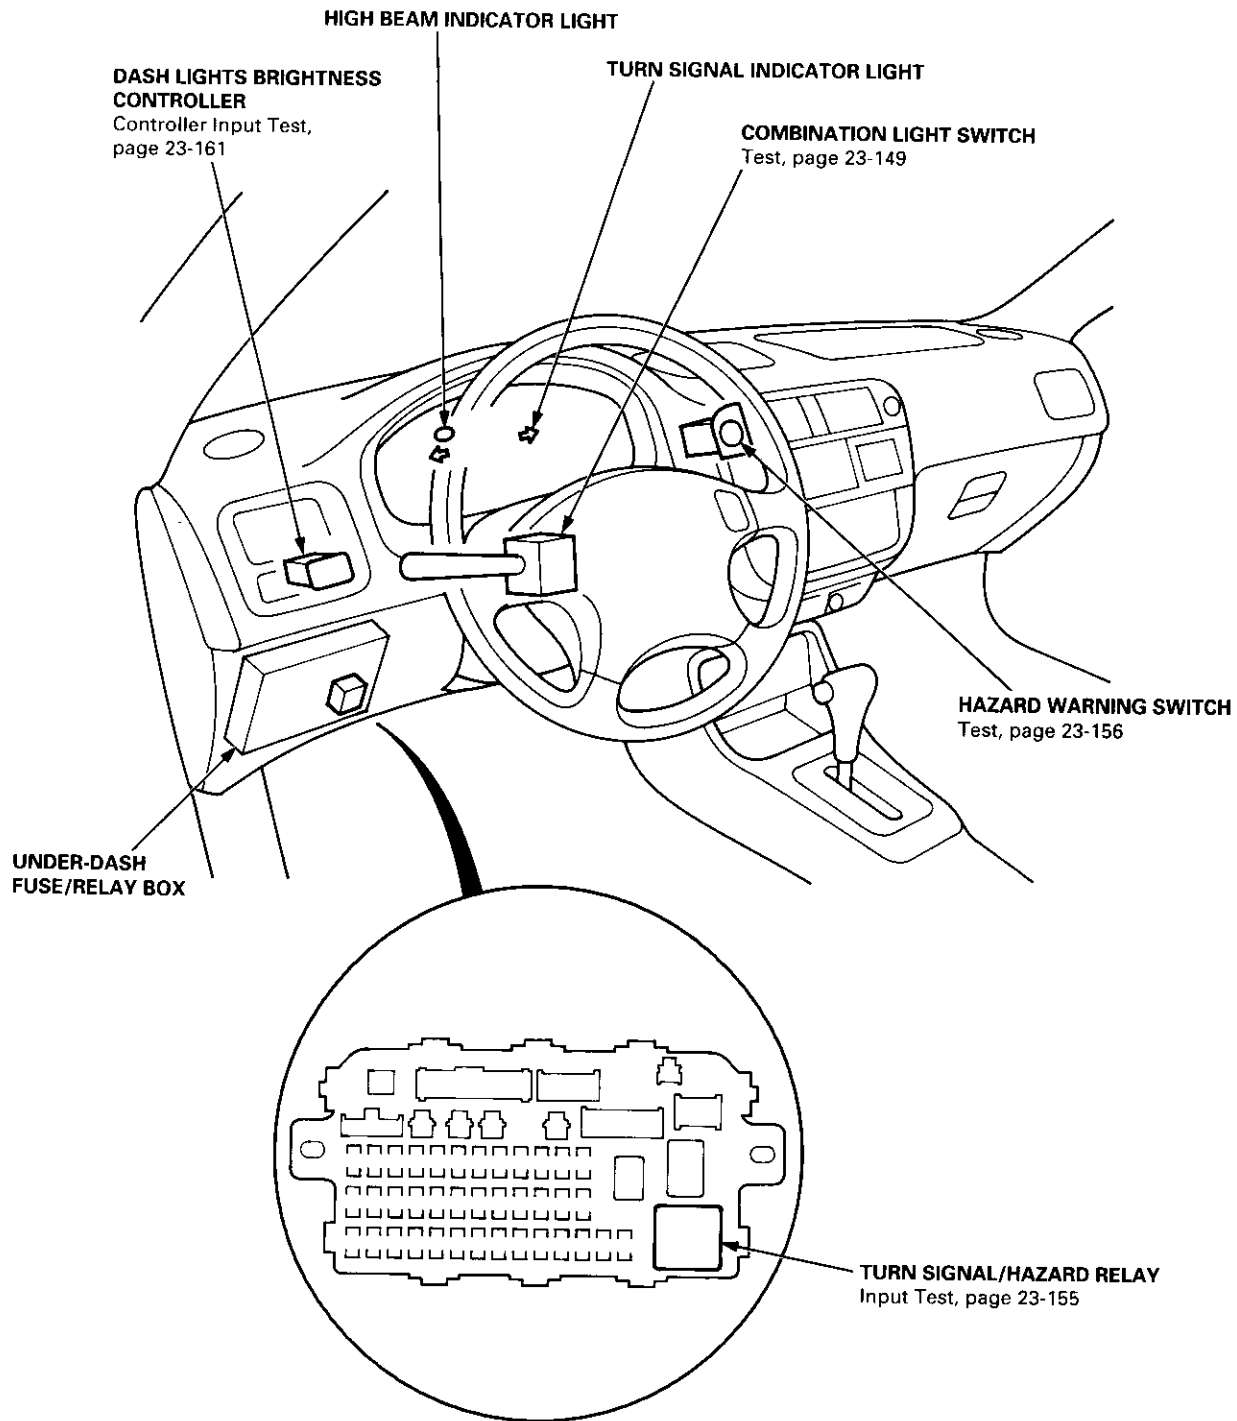




Circuit Diagram (USA)

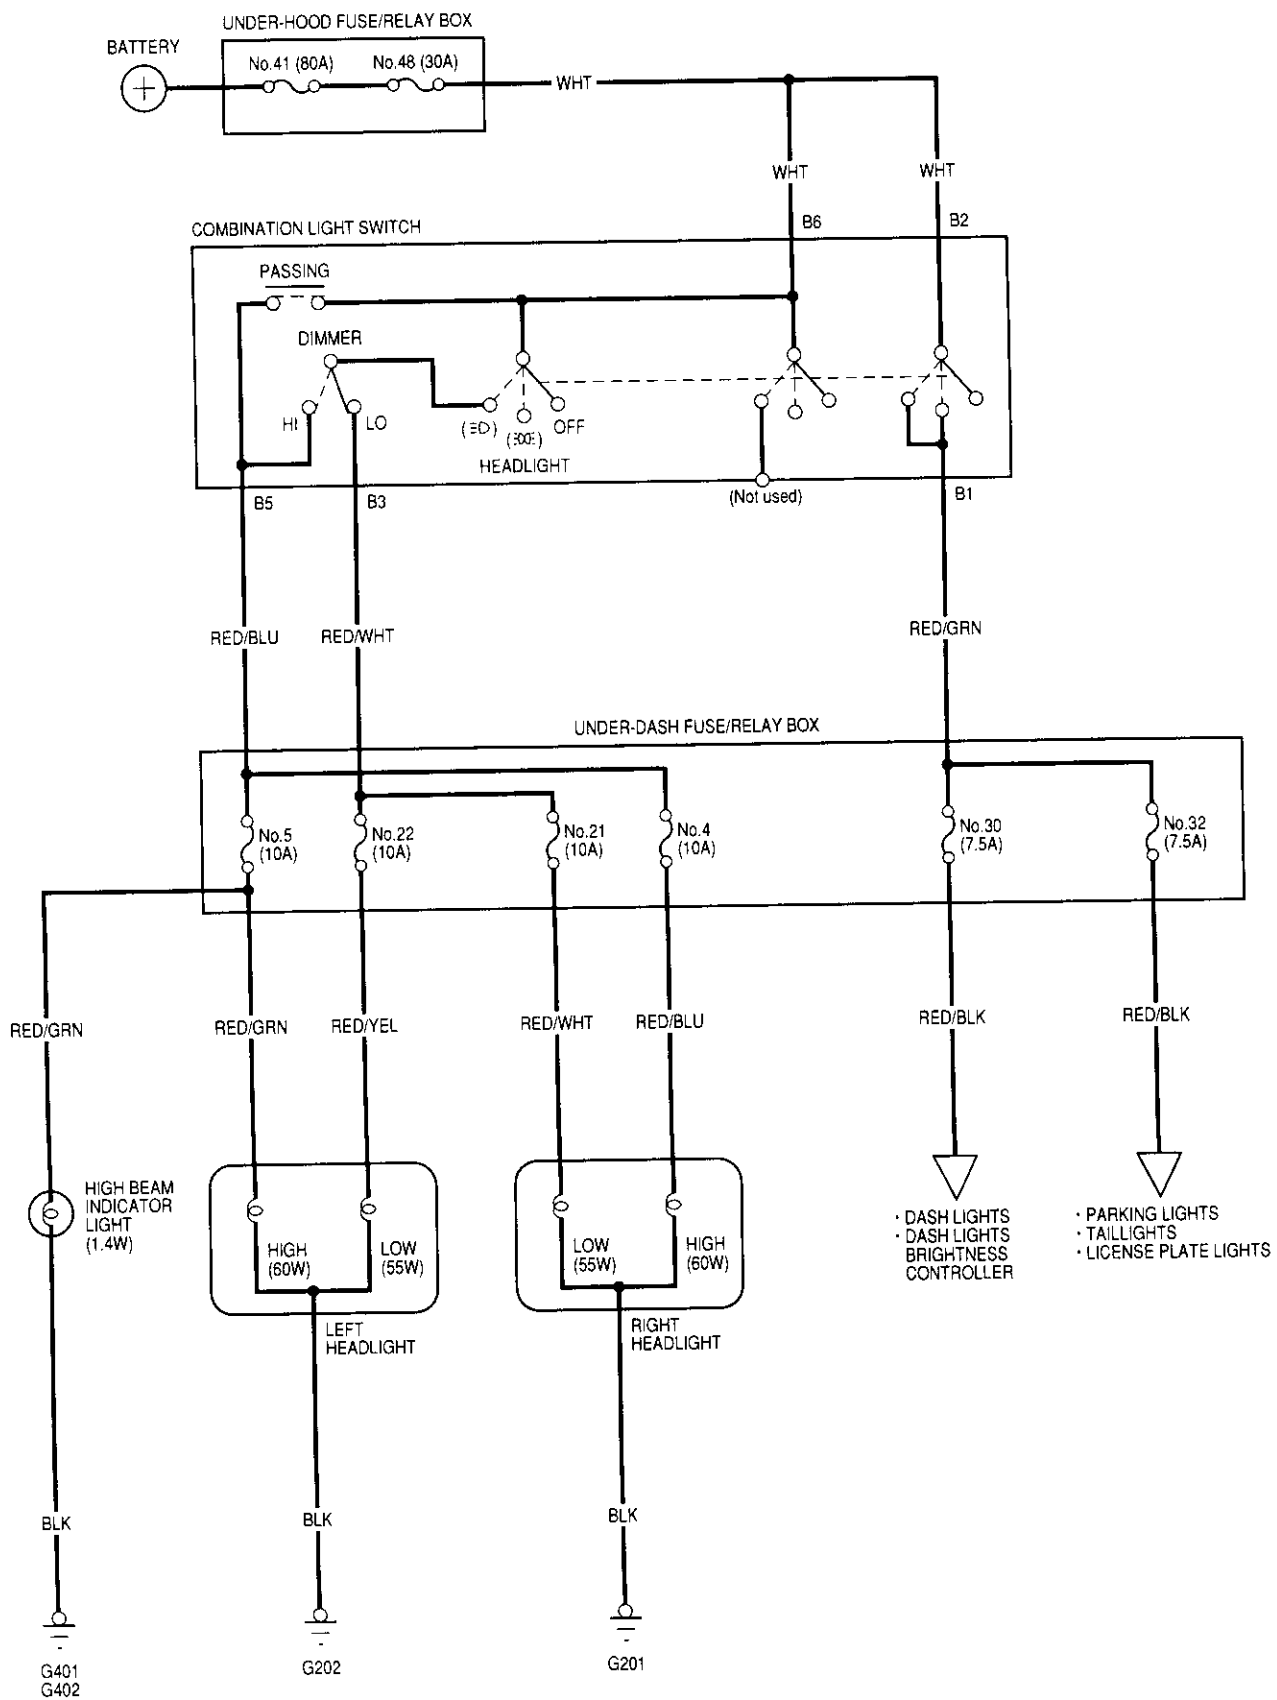

Lighting System


Circuit Diagram (Canada)

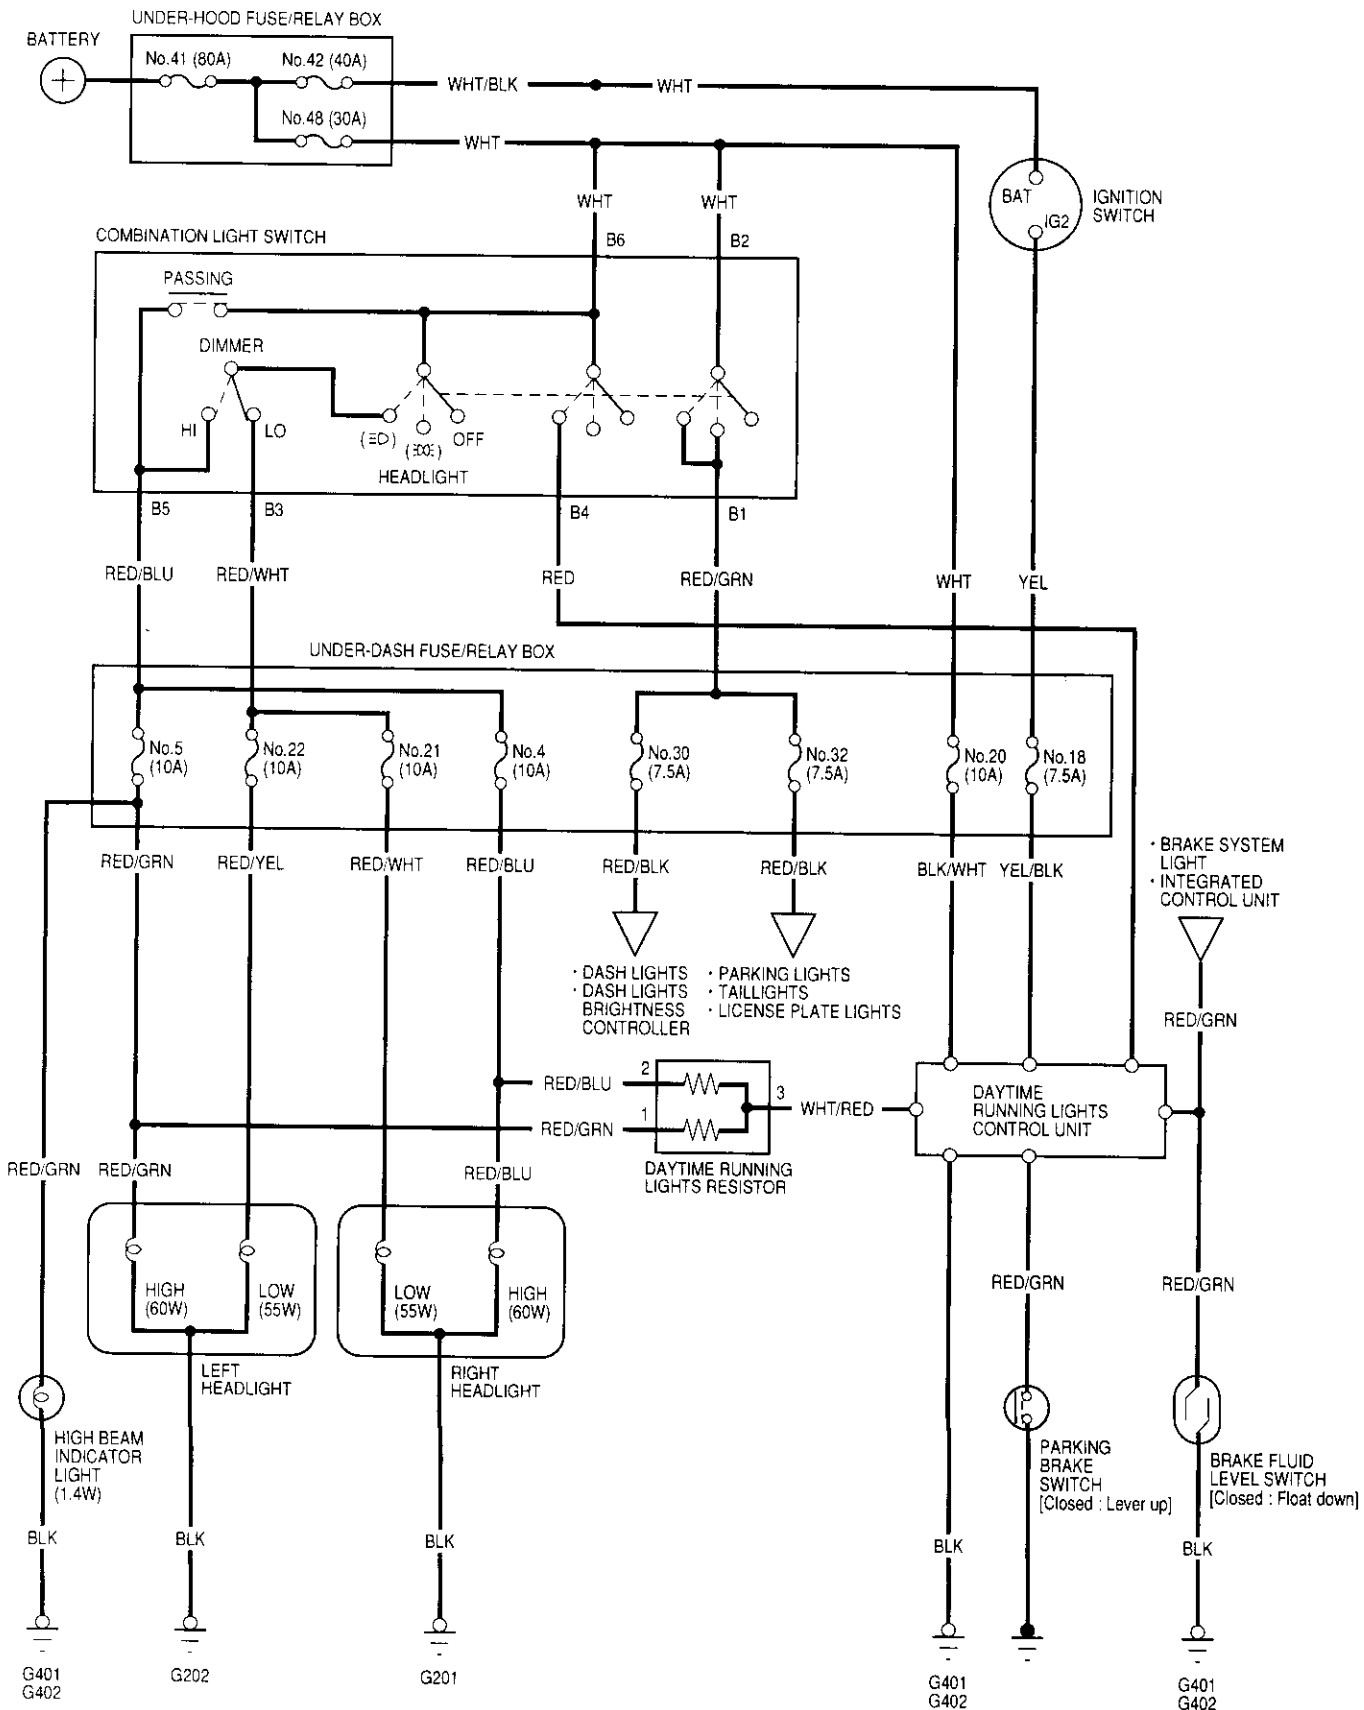



Combination Light Switch Test

1. Remove the driver's dashboard lower cover and steering column covers (see section 20).
2. Disconnect the 4P and 7P connectors from the switch.
3. Inspect the connector and socket terminals to be sure they are all making good contact.
 - If the terminals are bent, loose, or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, check for continuity between them in each switch position according to the tables. If there is no continuity between any of them, check for continuity in the switch harness.
 - If there is continuity in the switch harness, replace the combination light switch.
 - If there is no continuity in the switch harness, replace it.

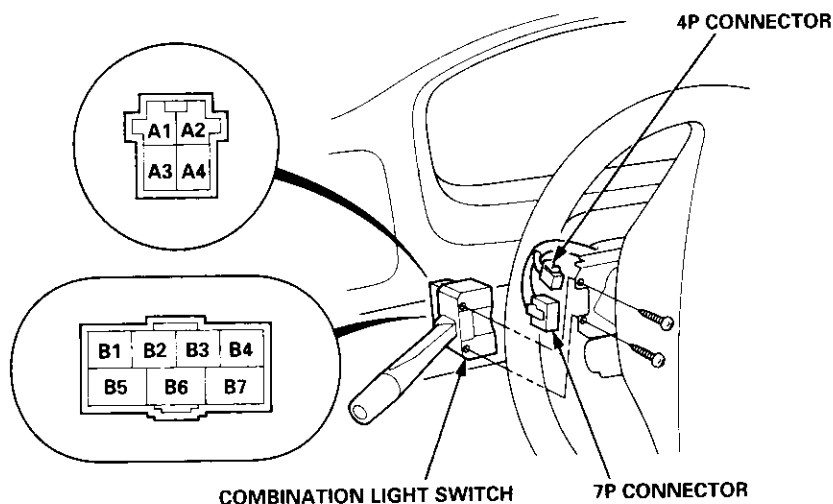

Headlight/Dimmer/Passing Switch :

Terminal		B1	B2	B3	* B4	B5	B6
Position							
Headlight switch	OFF						
		<input type="radio"/>	<input type="radio"/>				
	LOW	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	HIGH	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Passing switch	OFF						
	ON					<input type="radio"/>	<input type="radio"/>

* : Canada


Turn Signal Switch :

Terminal		A1	A2	A4
Position				
RIGHT		<input type="radio"/>		<input type="radio"/>
NEUTRAL				
LEFT		<input type="radio"/>	<input type="radio"/>	

Lighting System

Daytime Running Lights Control Unit Input Test (Canada)

1. Remove the driver's dashboard lower cover and knee bolster (see section 20).
2. Disconnect the connectors from the daytime running lights control unit.
3. Inspect the connector and socket terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, make the following input tests at the connector.
 - If any test indicates a problem, find and correct the cause, then recheck the system.
 - If all the input tests prove OK, the control unit must be faulty; replace it.

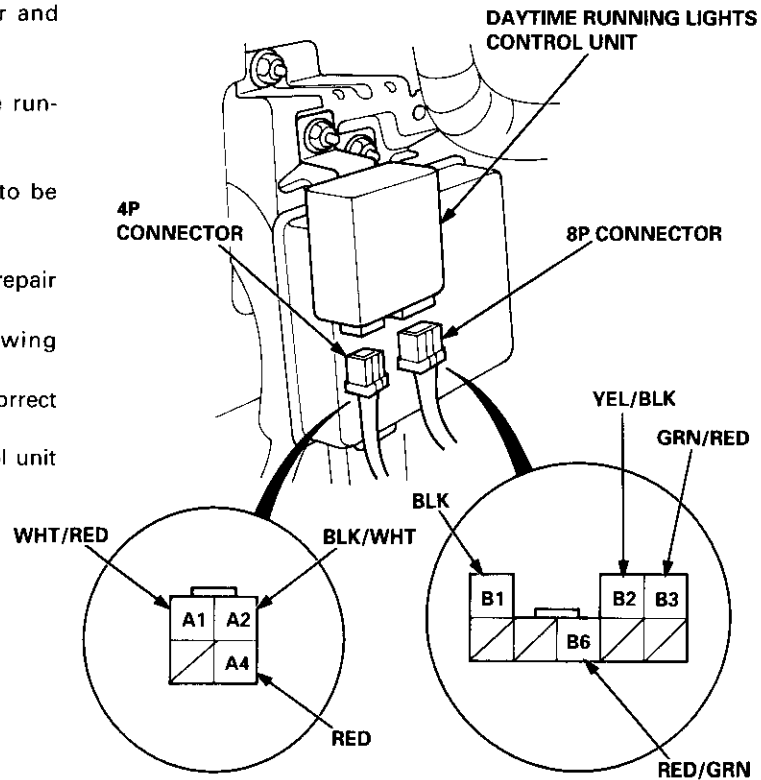


Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
B1	BLK	Under all conditions	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire
A2	BLK/WHT	Under all conditions	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 20 (10 A) fuse in the under-dash fuse/relay box • An open in the wire
B2	YEL/BLK	Ignition switch ON (II)	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 18 (7.5 A) fuse in the under-dash fuse/relay box • Faulty ignition switch • An open in the wire
A4	RED	Combination light switch in "ΞO" position	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 48 (30 A) fuse in the under-hood fuse/relay box • Faulty combination light switch • An open in the wire
A1	WHT/RED	Combination light switch OFF; connect a jumper wire between the YEL/BLK and WHT/RED terminals, then turn the ignition switch ON (II)	Headlights (high beam) should come on, (and high beam indicator should come on).	<ul style="list-style-type: none"> • Poor ground (G201, G202, G401, G402) • Blown bulbs • Faulty daytime running lights resistor • An open in the wire
B3	GRN/RED	Ignition switch ON (II), brake fluid reservoir full, and parking brake lever down	Connect to ground: The brake system light should come on.	<ul style="list-style-type: none"> • Blown No. 25 (7.5 A) fuse in the under-dash fuse/relay box • Blown brake system light • An open in the wire
B6	RED/GRN	Parking brake lever up	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Faulty parking brake switch • An open in the wire



Daytime Running Lights Resistor Test (Canada)

CAUTION: The daytime running lights resistor becomes very hot when the daytime running lights are on; do not touch it or the attaching hardware immediately after the lights have been turned off.

1. Disconnect the 3P connector from the resistor.

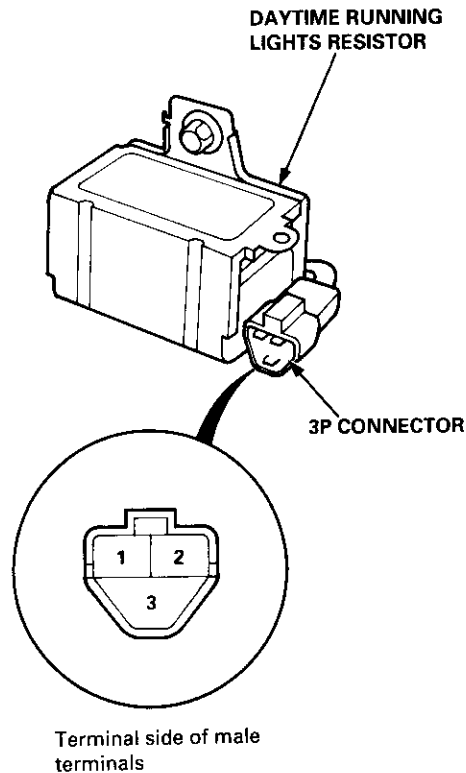

2. Measure the resistance between the resistor terminals (No. 1 and No. 2) and the power terminal No. 3.


Resistance: $1.6 \Omega \pm 0.08 \Omega$

3. Replace the resistor with a new one if any of the resistances are beyond specification.

Replacement

CAUTION: Halogen headlights become very hot in use; do not touch them or the attaching hardware immediately after they have been turned off.

1. Remove the front bumper (see section 20).
2. Remove the mounting bolts.
3. Disconnect each connector, then remove the headlight/front turn signal/parking light assembly.

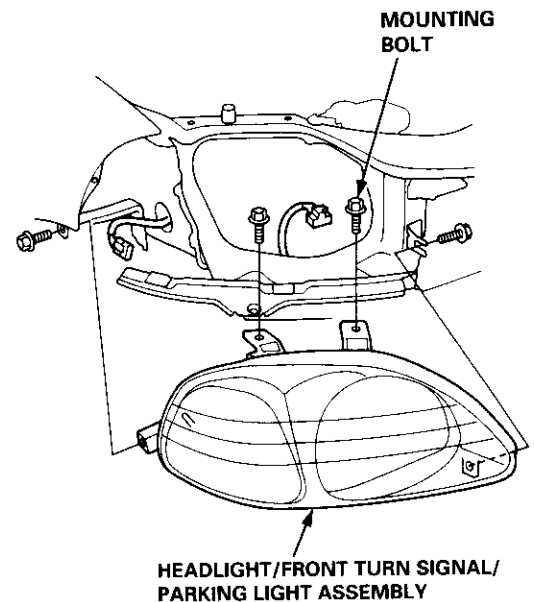

HEADLIGHT: 60/55 W
FRONT TURN SIGNAL/PARKING LIGHT: 21/5 W

Headlights


Adjustment

Before adjusting the headlights:

- Park the vehicle on level ground.
- Make sure the fuel tank is full.
- The driver or someone who weighs the same should sit in the driver's seat.
- Load the trunk with the items you usually carry.
- Push down on the front and rear bumpers several times to make sure the car is sitting normally.

CAUTION: Halogen headlights become very hot in use; do not touch them or the attaching hardware immediately after they have been turned off.

1. Open the hood.
2. Check the horizontal adjustment indicator. The "0" mark on the horizontal indicator gear should be aligned with the mark on the horizontal indicator.

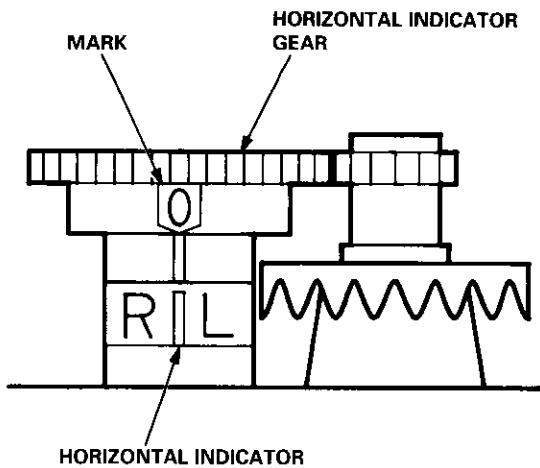


3. If the indicator is not aligned with its "0" mark as described above, an adjustment can be made by using a Phillips screwdriver.

4. Adjust the headlights to local requirements by turning the adjusters.
5. After headlight replacement, it may be necessary to readjust the horizontal indicator gear.

- First install the headlight, and adjust its horizontal and vertical aimings according to local requirements.
- Then check that the arrow on the horizontal indicator gear is aligned with the mark on the horizontal indicator.
 - If they are not aligned, remove the screw, adjust the indicator gear, and retighten the screw.

NOTE: As the outer lenses are made of an acrylic-coated, polycarbonated material, do not cover the headlights when they are turned on.

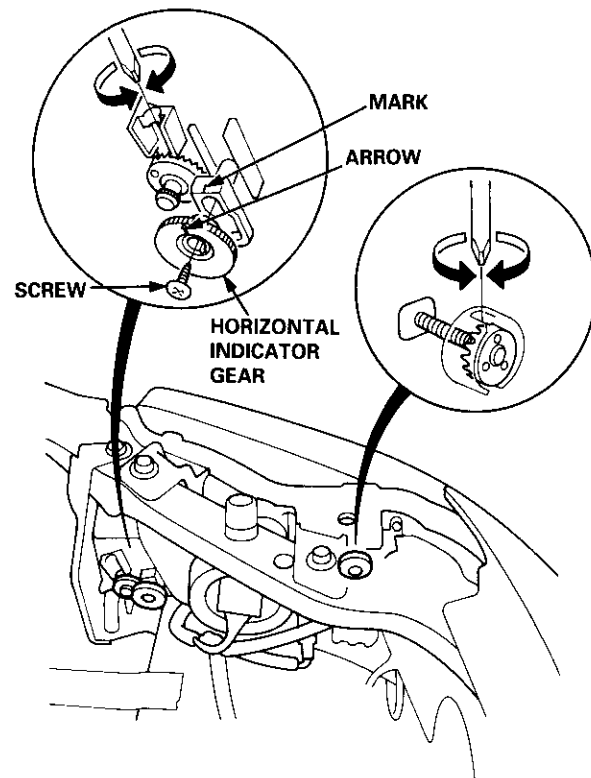



Taillights


Replacement

NOTE:

- Inspect the gasket; replace it if it is distorted or stays compressed.
- After installing the taillights, run water over them to make sure they do not leak.

Outer Taillights:

1. Open the trunk lid/hatch.
2. Disconnect the 4P or 6P connector from the outer taillight.
3. Remove the four mounting nuts, then pull out the outer taillight.

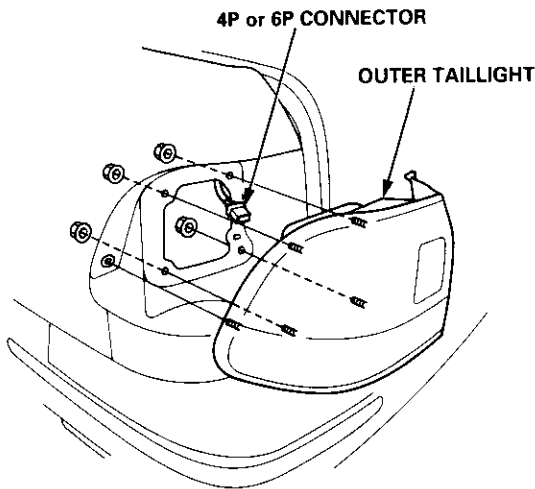

Hatchback:

BRAKE/TAILLIGHT: 21/5 W
TURN SIGNAL LIGHT: 21 W
BACK-UP LIGHT: 21 W


Coupe/Sedan:

BRAKE/TAILLIGHT: 21/5 W
TURN SIGNAL LIGHT: 21 W


Inner Taillights (Coupe/Sedan):

1. Open the trunk lid, then remove the access panel.
2. Disconnect the 4P connector from the inner taillight.
3. Remove the four [three] mounting nuts, then pull out the inner taillight.
 []: Sedan

Coupe:

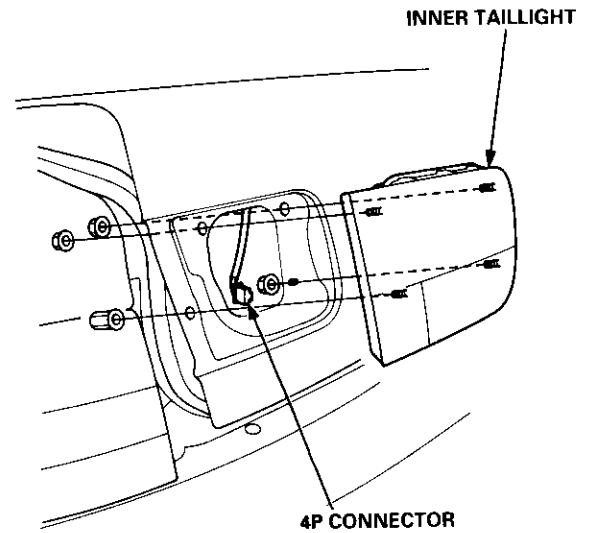


Sedan:

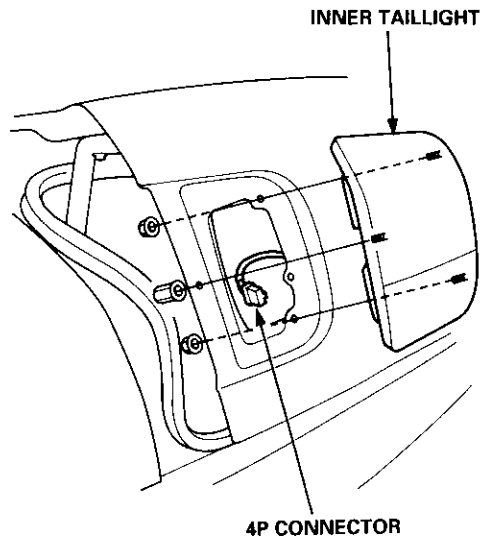

BRAKE/TAILLIGHT: 21/5 W
BACK-UP LIGHT: 21 W

Turn Signal/Hazard Flasher System

Circuit Diagram

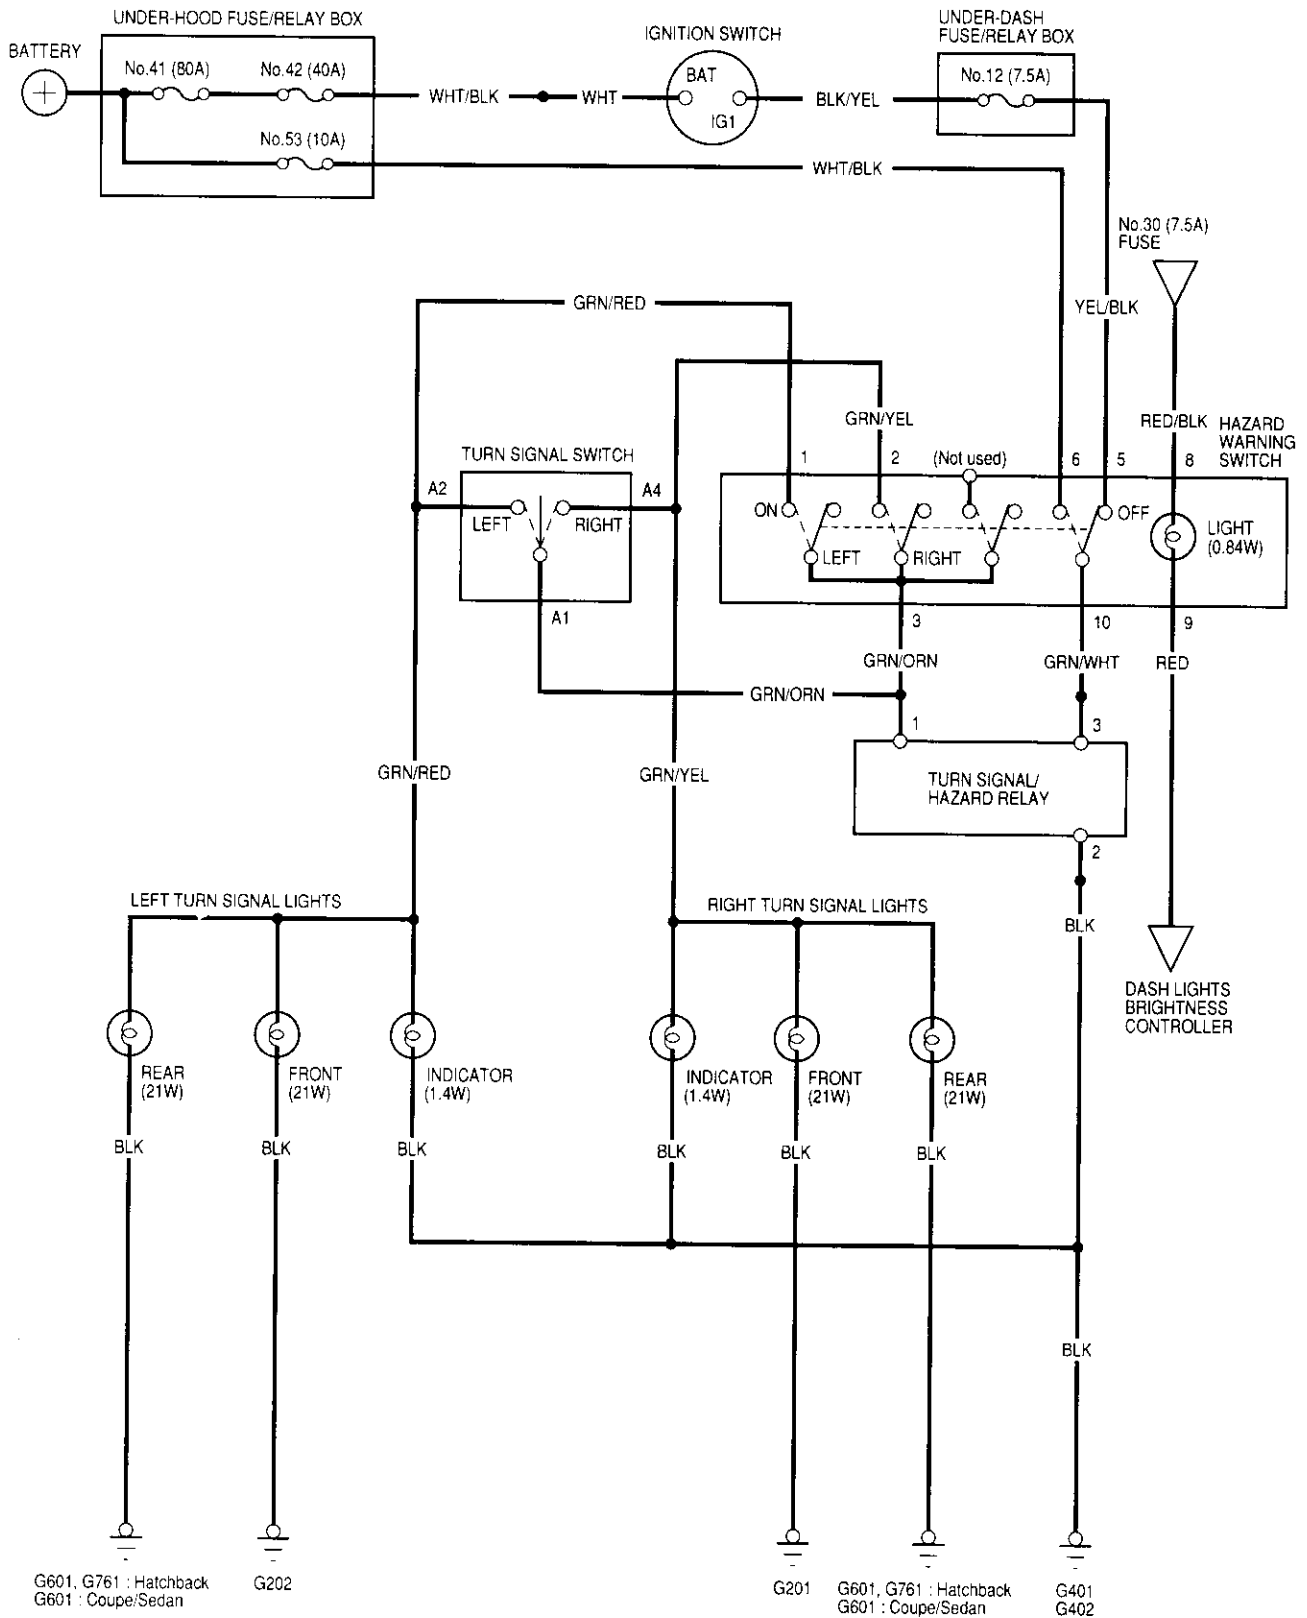




Turn Signal/Hazard Relay Input Test

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

1. Remove the turn signal/hazard relay from the under-dash fuse/relay box.
2. Inspect the relay and fuse/relay box socket terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, make the following input tests at the fuse/relay box socket.
 - If any test indicates a problem, find and correct the cause, then recheck the system.
 - If all the input tests prove OK, the turn signal/hazard relay must be faulty; replace it.

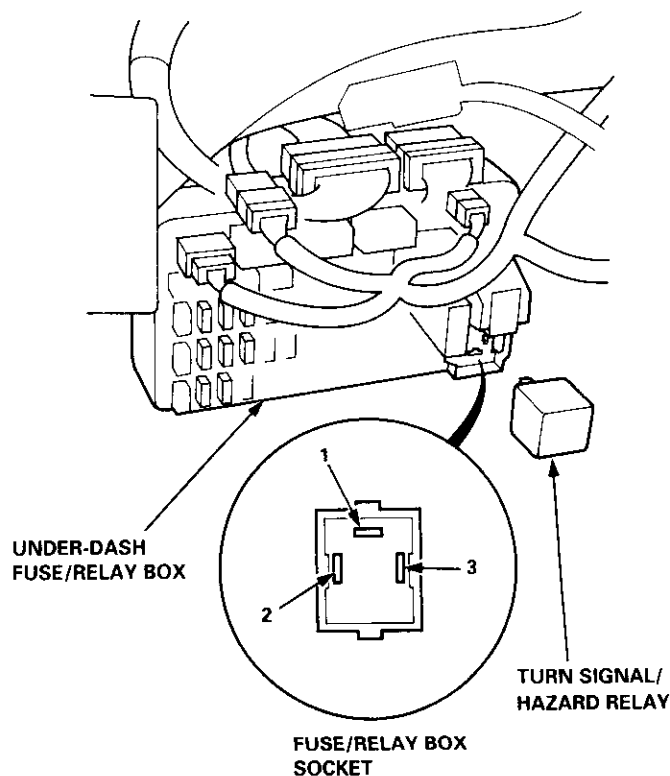

Cavity	Test condition	Test: Desired results	Possible cause if result is not obtained
1	Hazard warning switch ON; connect the No. 1 terminal to the No. 3 terminal.	Hazard lights should come on.	<ul style="list-style-type: none"> • Poor ground (G201, G202, G401, G402, G551, G552, G601, G761) • Faulty hazard warning switch • An open in the wire
	Ignition switch ON (II) and turn signal switch in right or left; connect the No. 1 terminal to the No. 3 terminal.	Right or left turn signal lights should come on.	<ul style="list-style-type: none"> • Faulty turn signal switch
2	Under all conditions	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire
3	Ignition switch ON (II)	Connect for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 12 (7.5 A) fuse in the under-dash fuse/relay box • Faulty hazard warning switch • An open in the wire
	Hazard warning switch ON	Connect for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 53 (10 A) fuse in the under-hood fuse/relay box • Faulty hazard warning switch • An open in the wire


Turn Signal/Hazard Flasher System

License Plate Lights

Hazard Warning Switch Test

CAUTION: Be careful not to damage the hazard warning switch or the center outlet panel when prying the switch out.

1. Pry the hazard warning switch out of the center outlet panel.
2. Disconnect the 10P connector from the hazard warning switch.
3. Check for continuity between the terminals in each switch position according to the table.

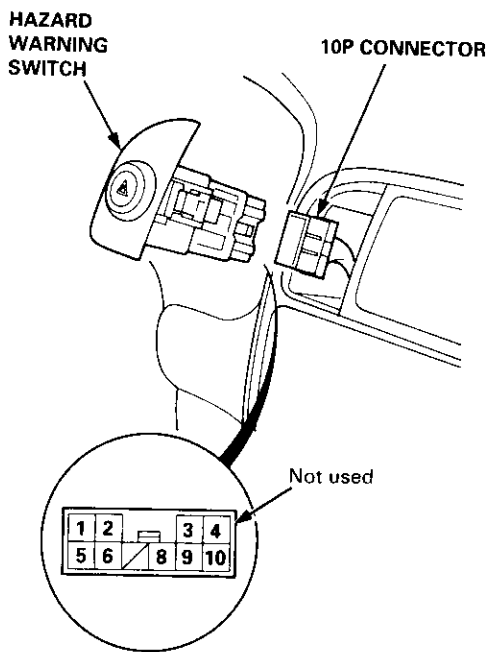


Terminal	1	2	3	4	5	6	8	9	10
Position									
OFF					○		○	○	○
ON	○	○	○	○		○	○	○	○

Terminal No.4 is not used

Replacement


Sedan/Coupe:

1. Remove the two screws from the license plate light, and pull the light out part of the way.
2. Disconnect the 2P connector from the light.
3. Take the lens off, then replace the bulb.

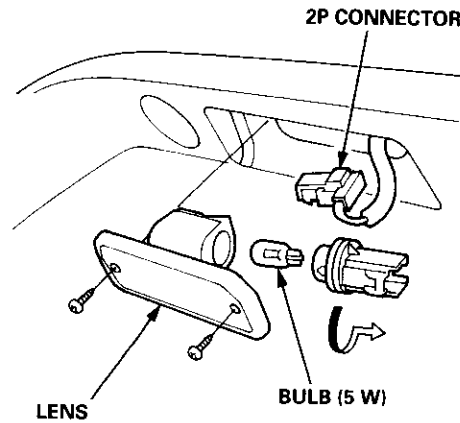

Hatchback:


1. Carefully pry the licence plate light out of the license plate trim.
2. Disconnect the 2P connector from the light.

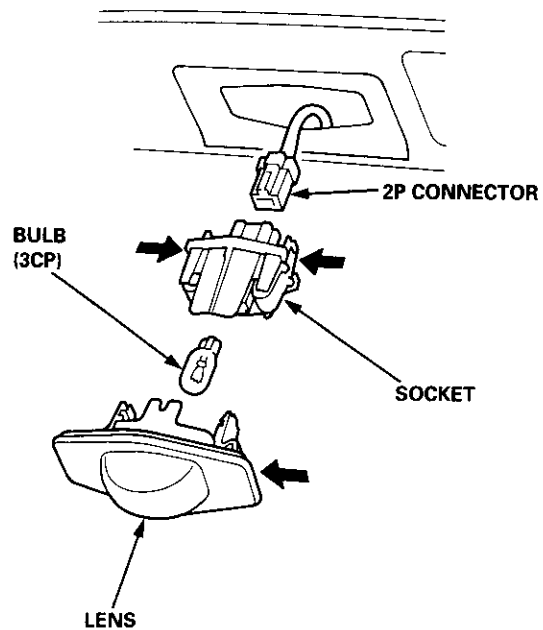

Back-up Lights




Circuit Diagram

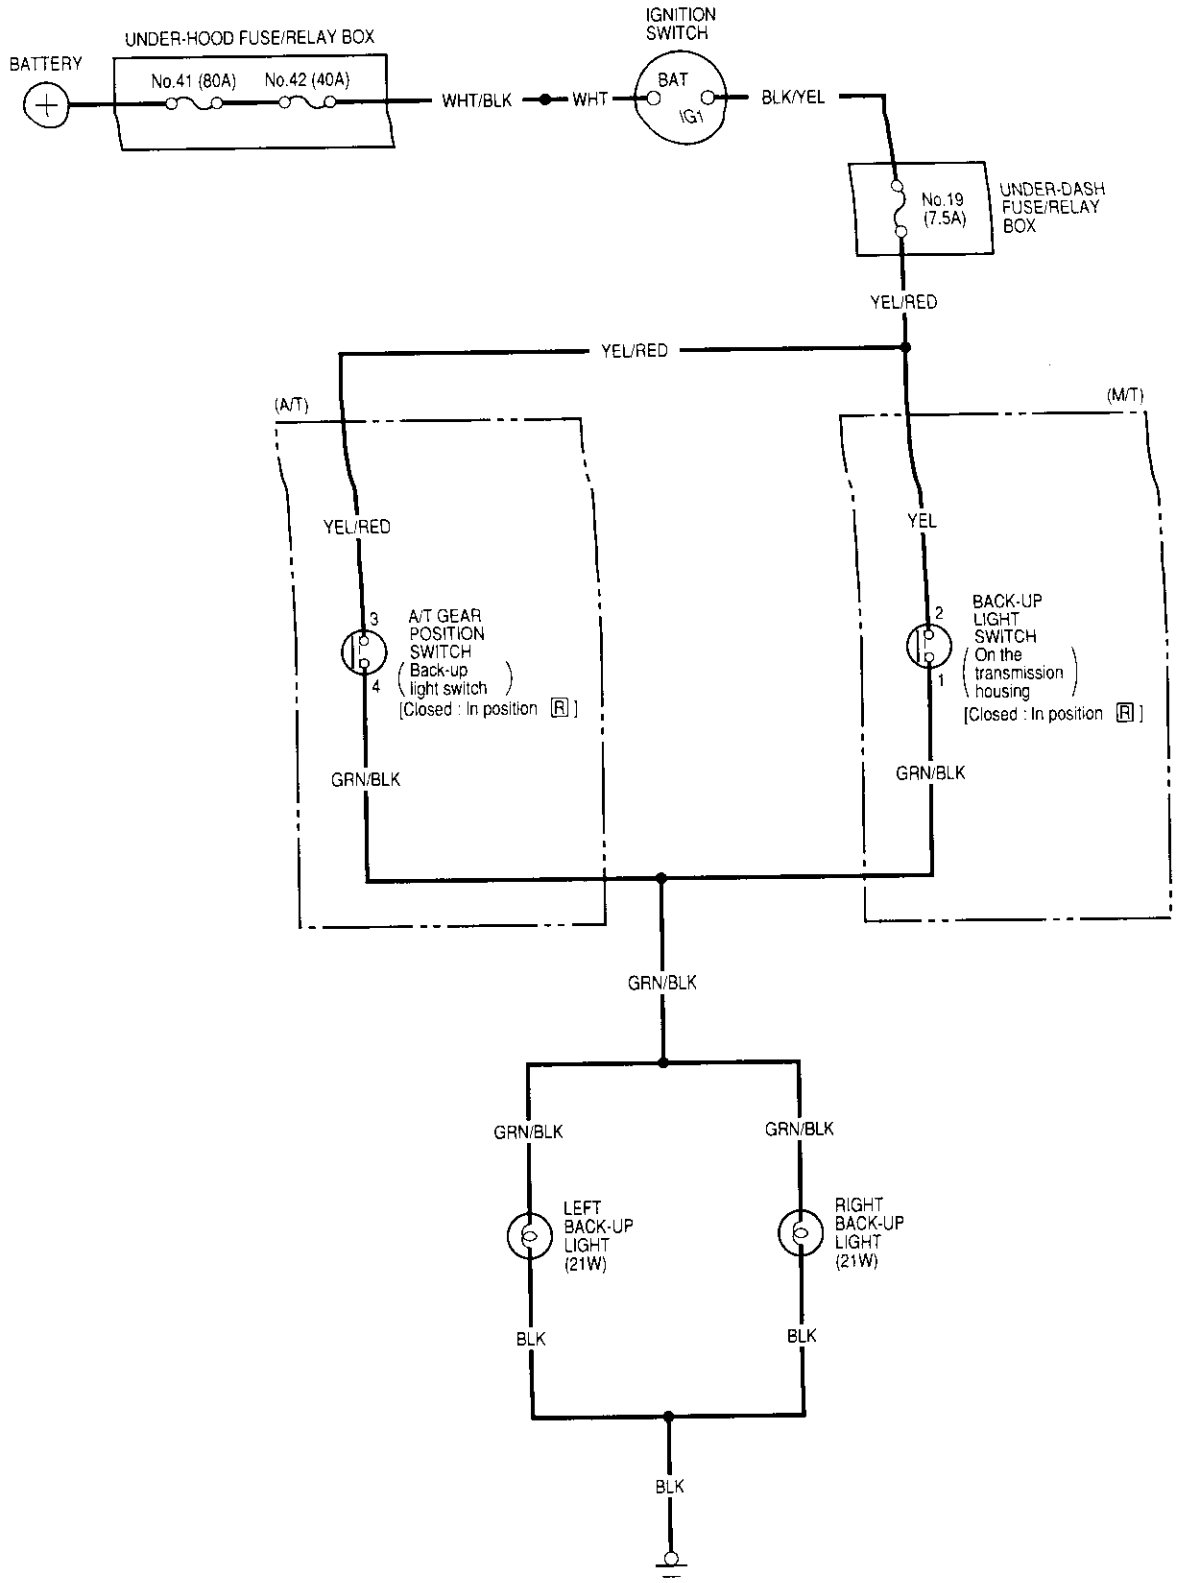

G601, G761 : Hatchback
G601 : Coupe/Sedan

Brake Lights

Circuit Diagram

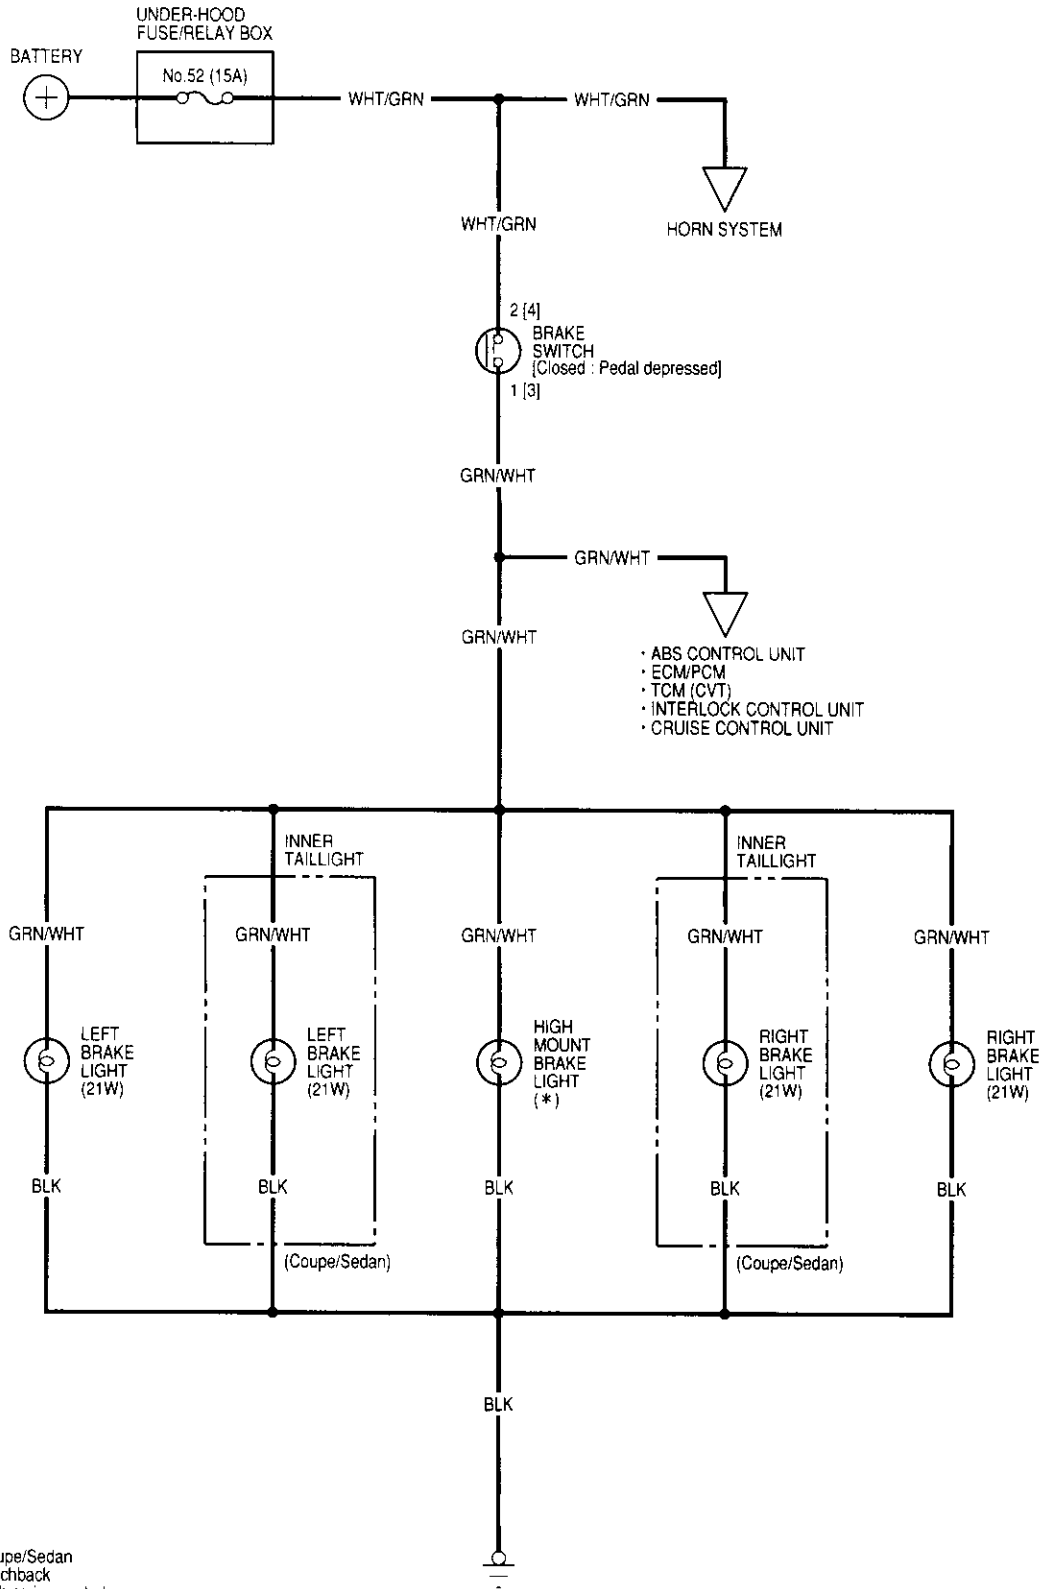

* 21W : Coupe/Sedan
 18W : Hatchback
 [] : With cruise control


G601, G761 : Hatchback
 G601 : Coupe/Sedan



High Mount Brake Light Replacement


Hatchback:

1. Loosen the two screws, then remove the high mount brake light. Be careful not to damage the hatch spoiler.
2. Remove the bulb socket from the light.

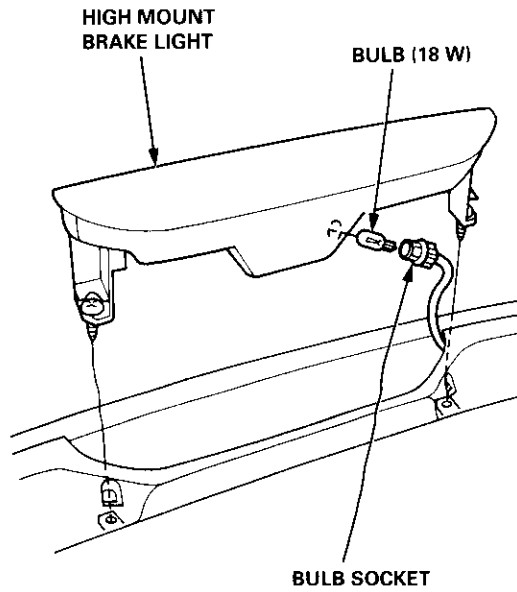


Coupe/Sedan:

1. Remove the rear shelf (see section 20).
2. Remove the two screws, then remove the high mount brake light from the rear shelf.

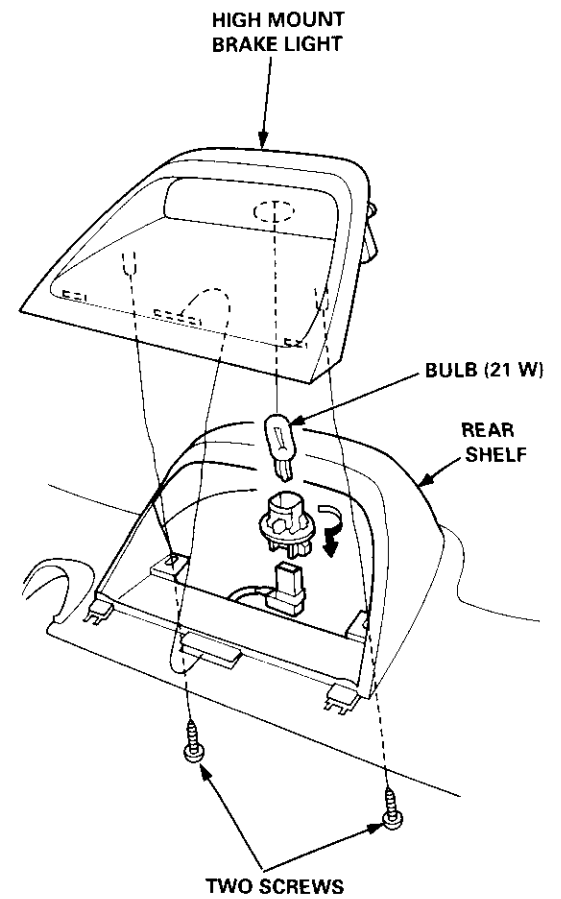

Dash Lights Brightness Controller

Circuit Diagram

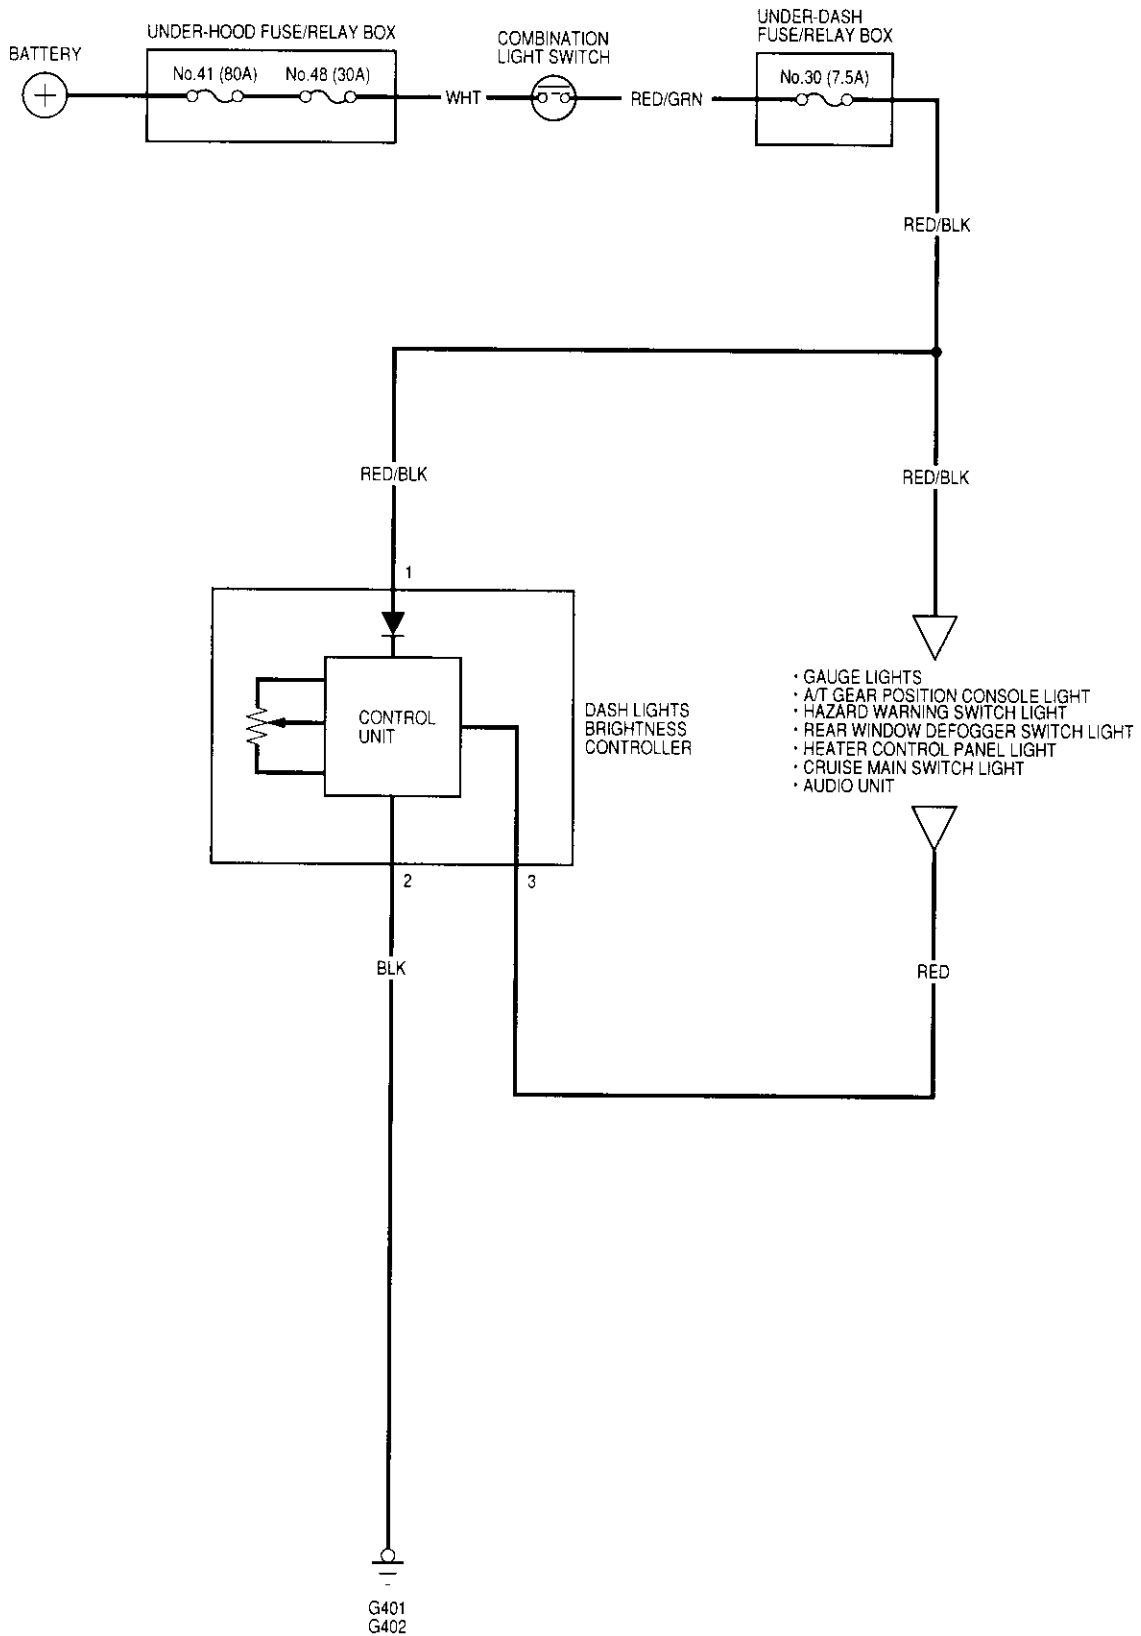




Controller Input test

NOTE: The control unit is built into the dash lights brightness controller.


1. Carefully pry the controller out of the dashboard.
2. Disconnect the 3P connector from the controller.
3. Inspect the connector terminals to be sure they are all making good contact.
 - If the terminals are bent, loose, or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, make the following input tests at the connector.
 - If any test indicates a problem, find and correct the cause, then recheck the system.
 - If all the input tests prove OK, the controller must be faulty; replace it.

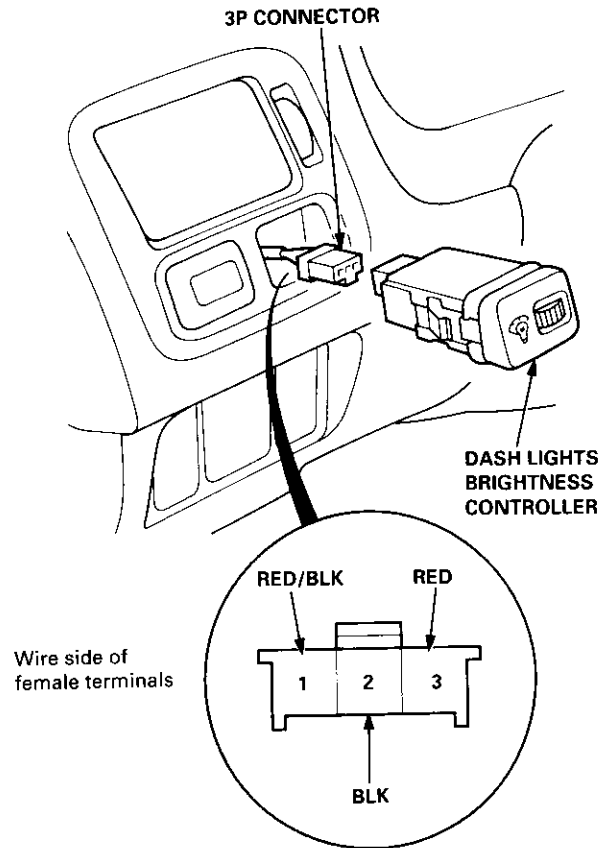

Cavity	Wire	Test condition	Test: Desired results	Possible cause if result is not obtained
1	RED/BLK	Combination light switch ON	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 30 (7.5 A) fuse in the under-dash fuse/relay box • Faulty combination light switch • An open in the wire
2	BLK	Under all conditions	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire
3	RED	Combination light switch ON	Connect to ground: Dash lights should come on full bright.	<ul style="list-style-type: none"> • An open in the wire


Interior Lights

Component Location Index

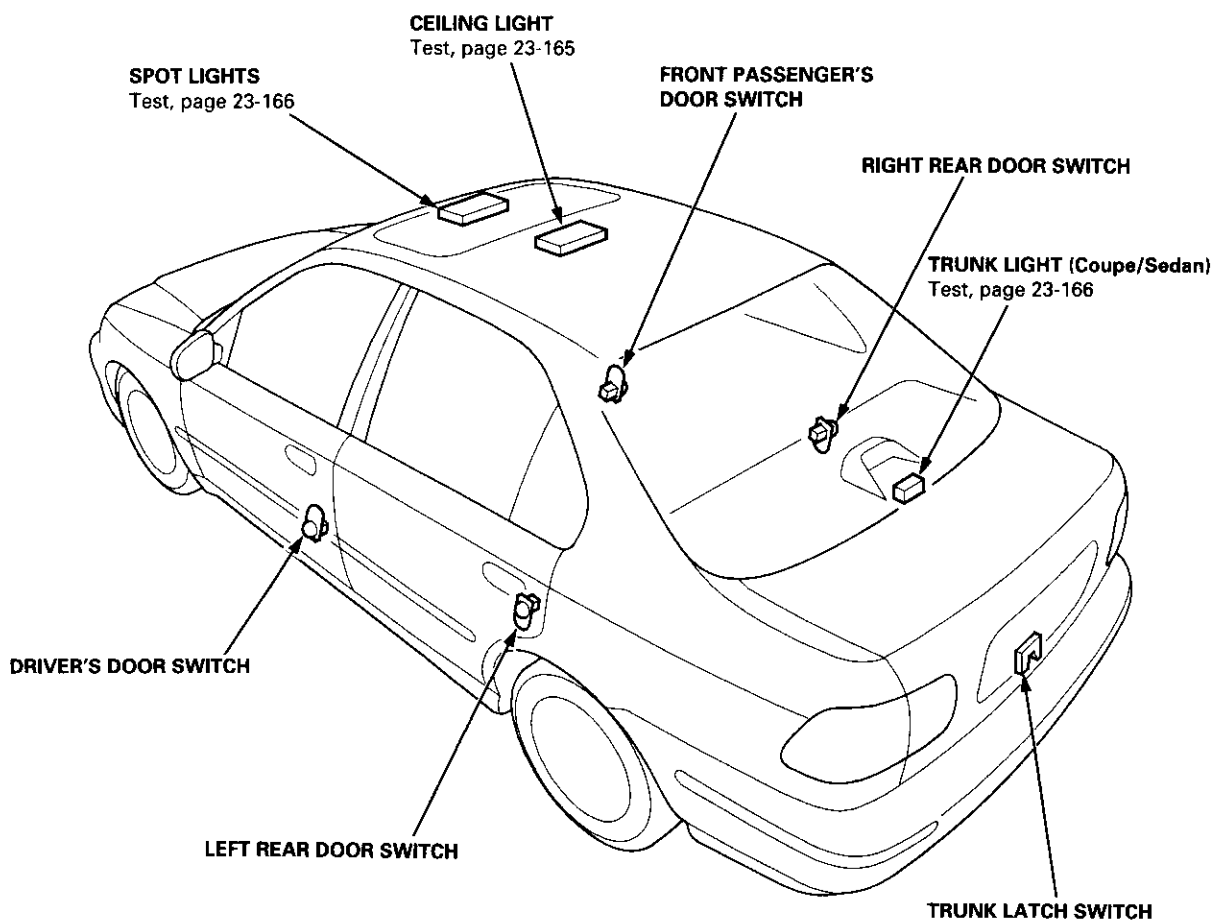



Circuit Diagram (Without Spotlights)

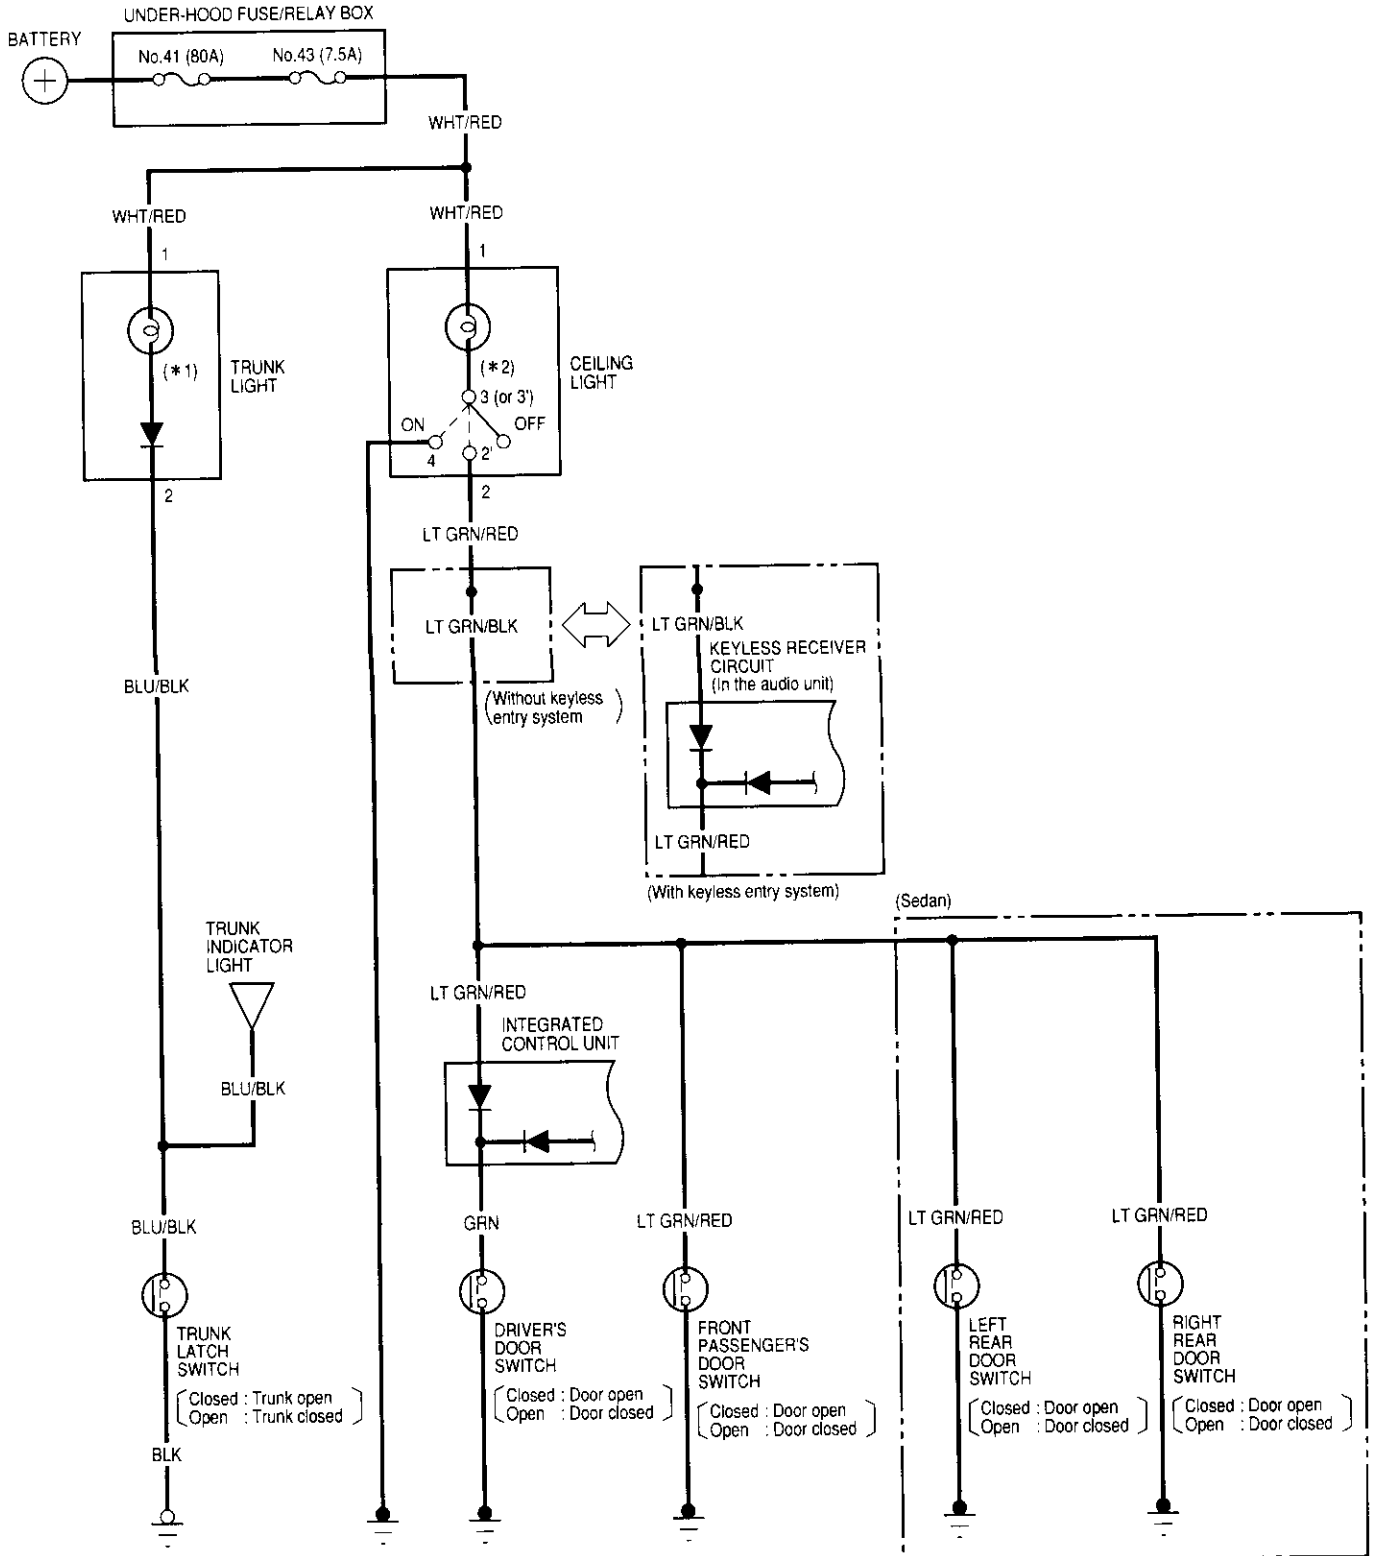


G601, G761 : Hatchback
G601 : Coupe/Sedan

- *1 3.4W : USA, Canada-produced
5W : Japan-produced
- *2 8W : With moonroof
5W : Without moonroof

Interior Lights

Circuit Diagram (With Spotlights)

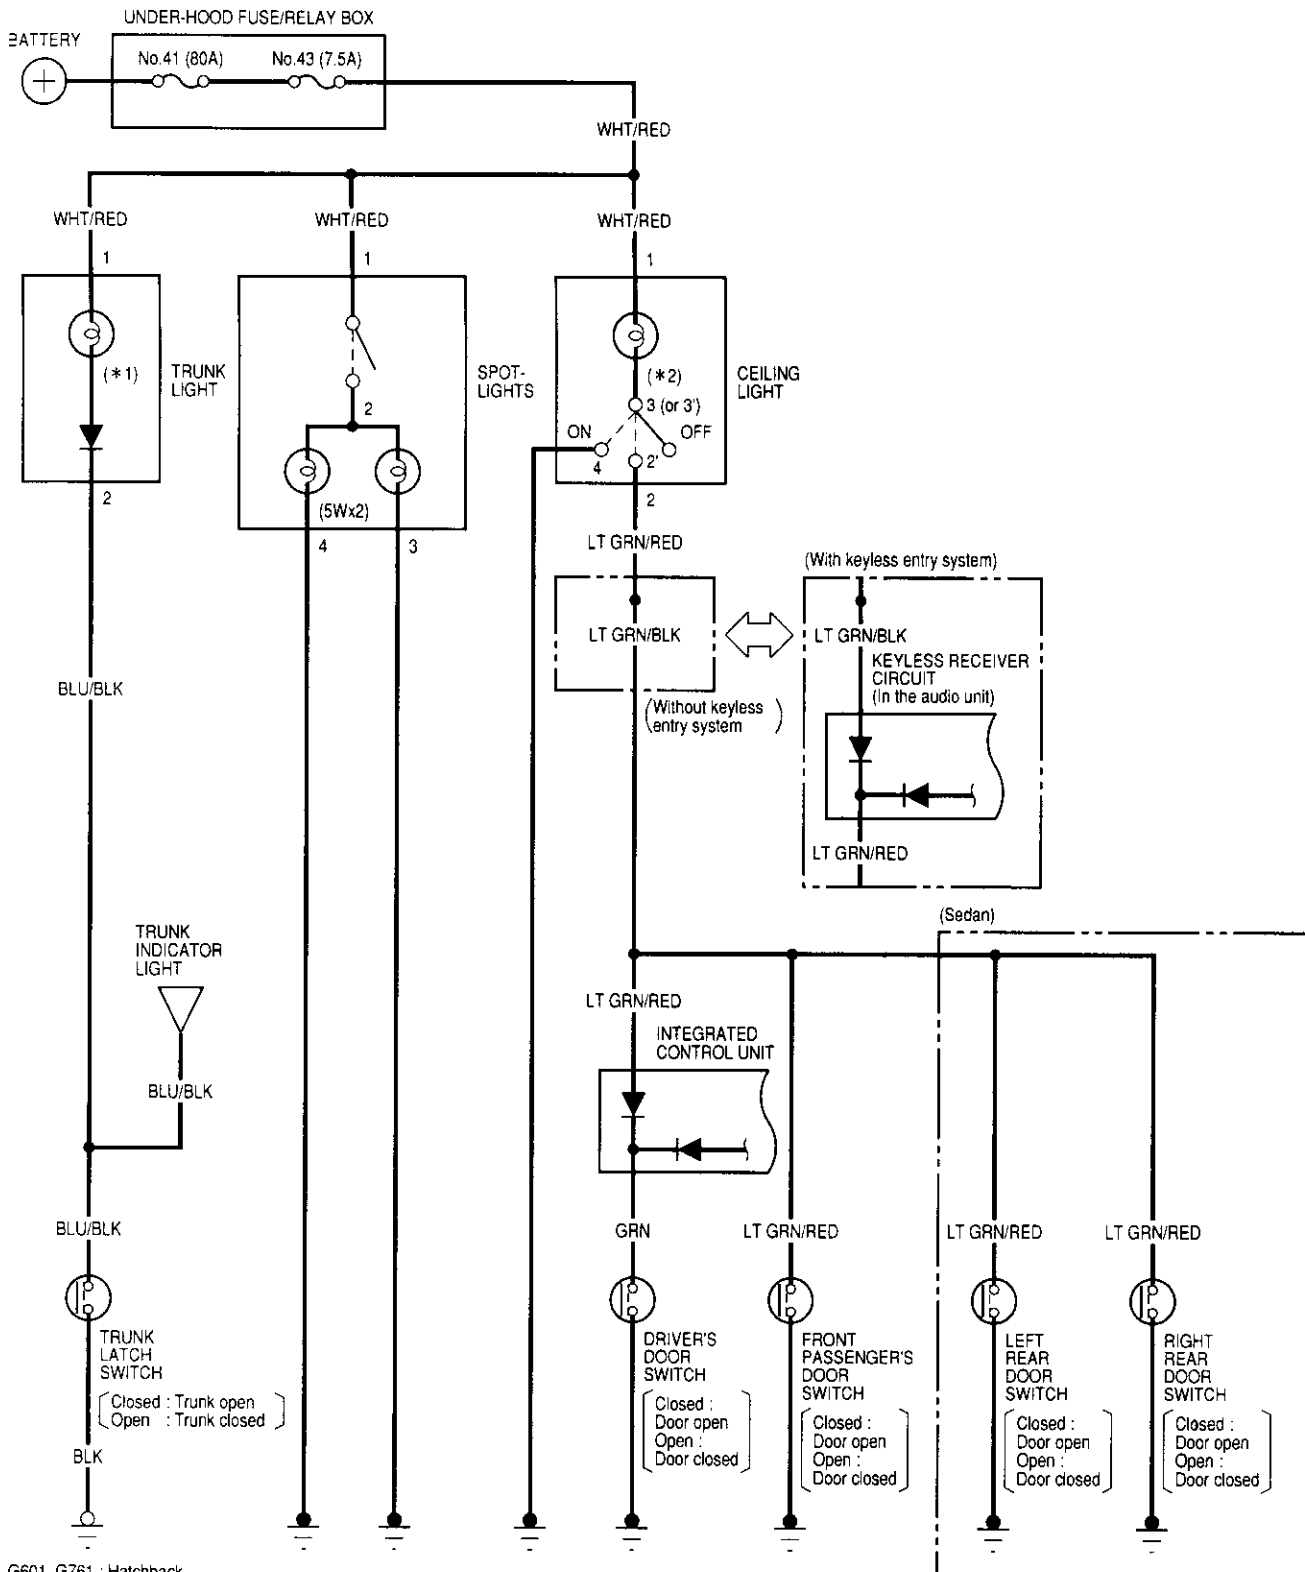

G601, G761 : Hatchback
G601 : Coupe/Sedan

- * 1 3.4W : USA , Canada-produced
5W : Japan-produced
- * 2 8W : With moonroof
5W : Without moonroof




Ceiling Light Test

1. Turn the light switch OFF.
2. Pry off the lens.
3. Remove the two mounting nuts (or a bolt) from the housing, then remove the housing.
4. Disconnect the connector(s) from the housing.
5. Check for continuity between the terminals in each switch position according to the table.


Terminal	1		2 or 2'	3 or 3'	4
Position					
OFF	○	⊗	—	○	
MIDDLE	○	⊗	○	○	
ON	○	⊗		○	○

With moonroof:

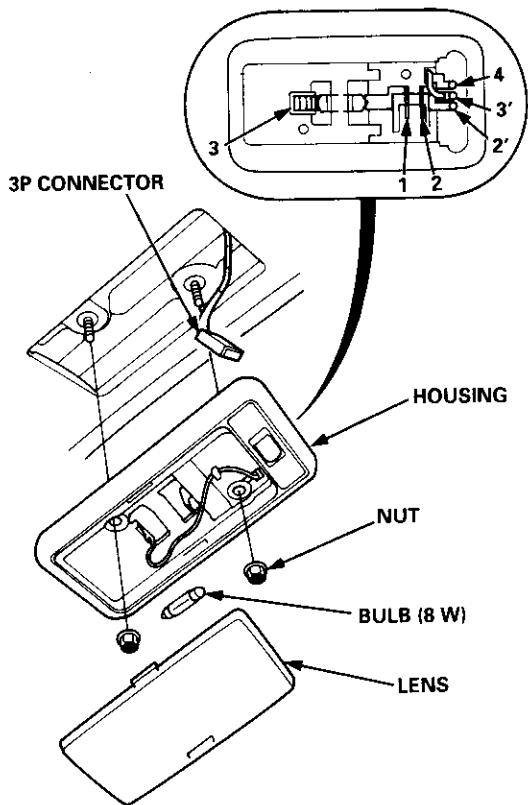


Without moonroof:

Coupe/Hatchback:

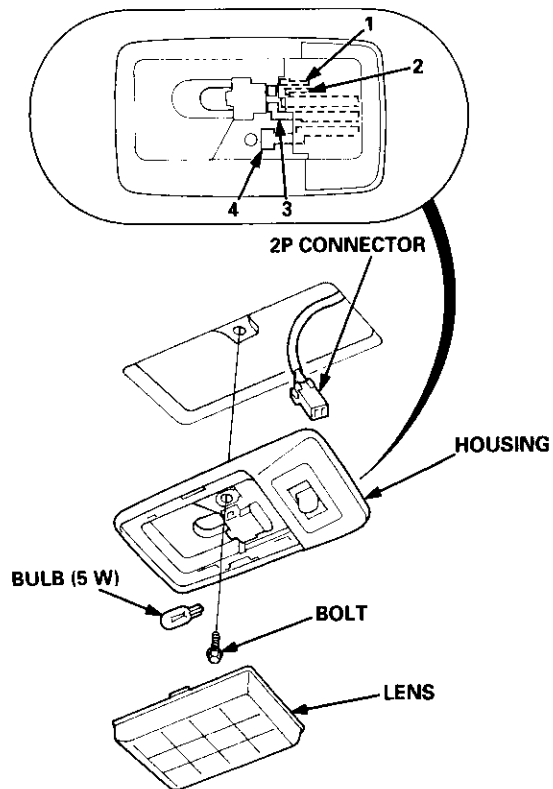


Sedan:

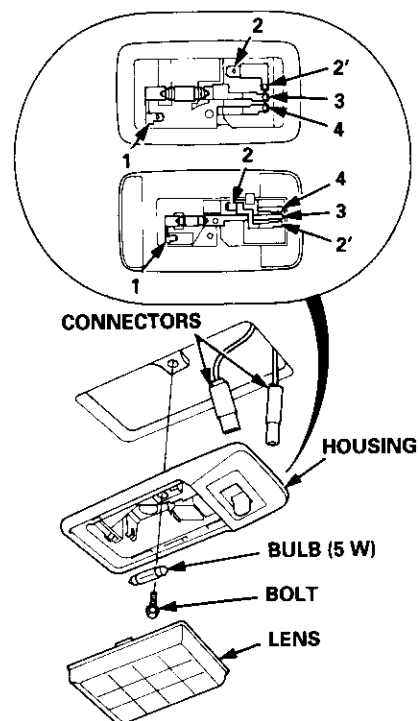

Interior Lights

Spotlights Test


1. Turn the spotlight switch OFF.
2. Pry off the lens.
3. Remove the two screws and the housing.
4. Disconnect the 1P connector from the housing.
5. Check for continuity between the terminals in each switch position according to the table.

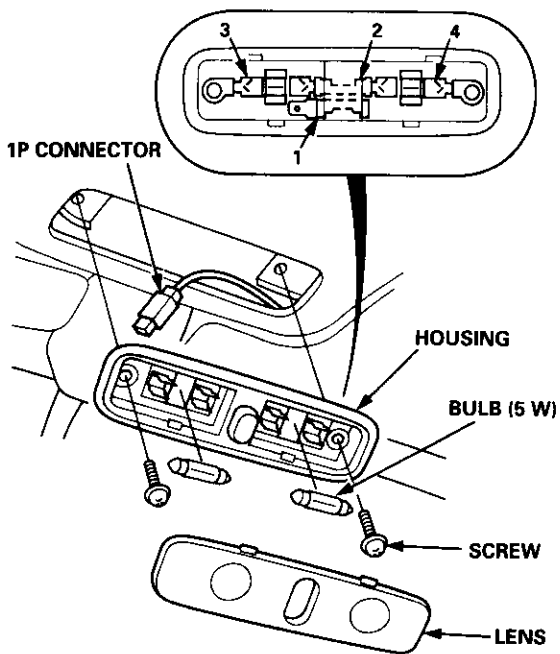

Terminal Position	1	2	3	4
OFF		○	⊕	○
ON	○	○	⊕	○

Trunk Light Test

1. Open the trunk light cover from the housing.
2. Pry out the light assembly.
3. Disconnect the 2P connector from the housing.
4. Make sure that the bulb is OK. Check for continuity between the No. 1 (+) and No. 2 (-) terminals.

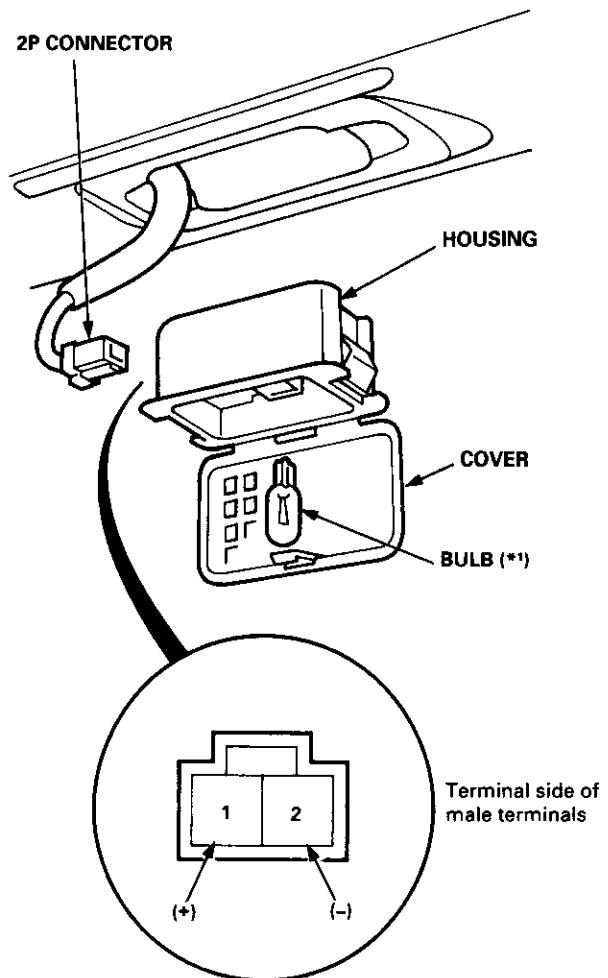


*1 3.4 W: USA, Canada-produced
5 W: Japan-produced



Stereo Sound System


Component Location Index

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

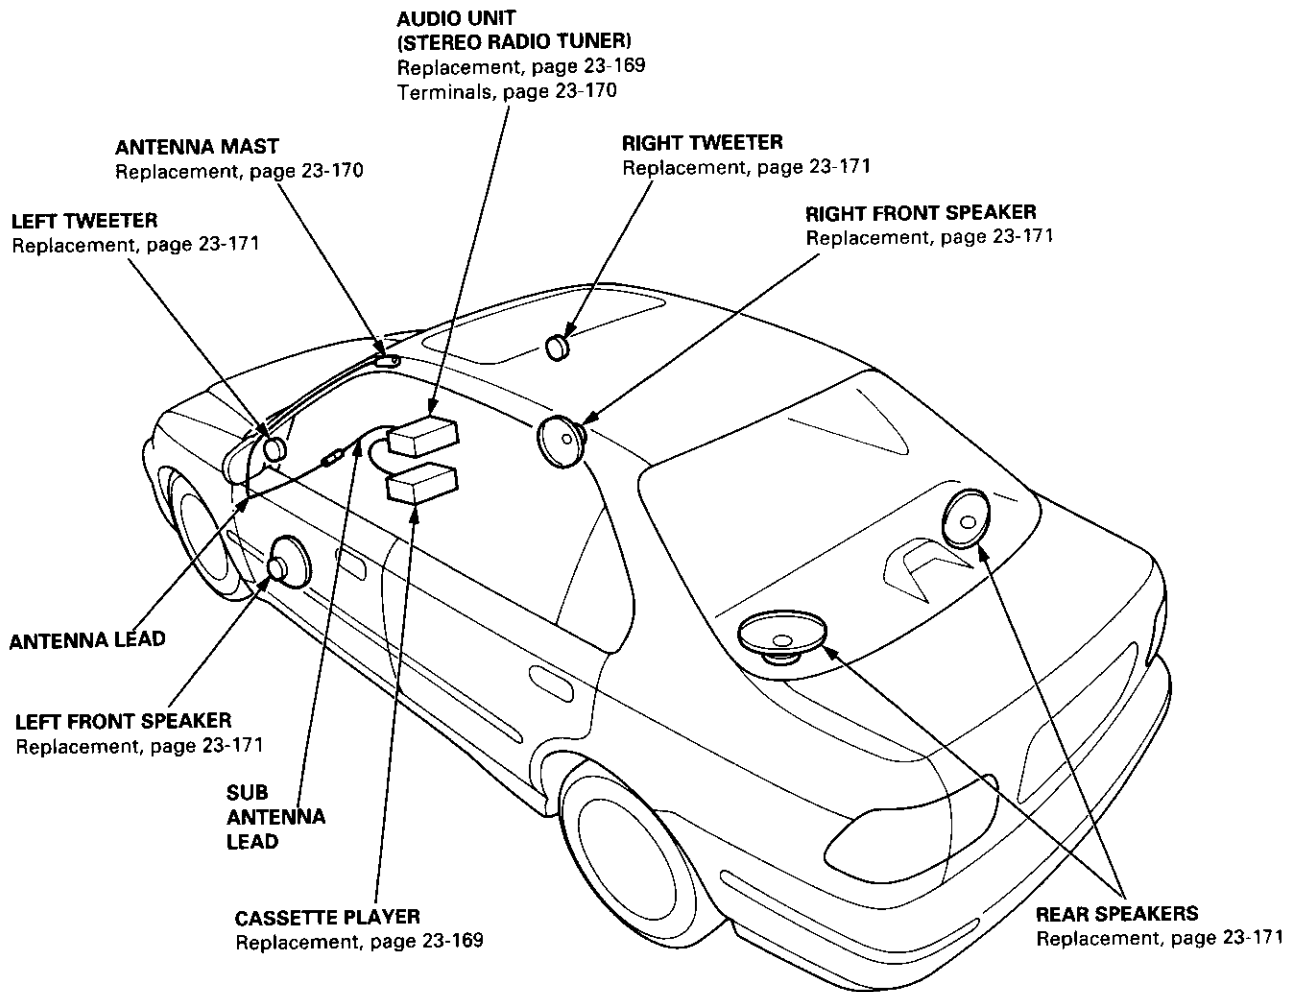

Stereo Sound System

Circuit Diagram

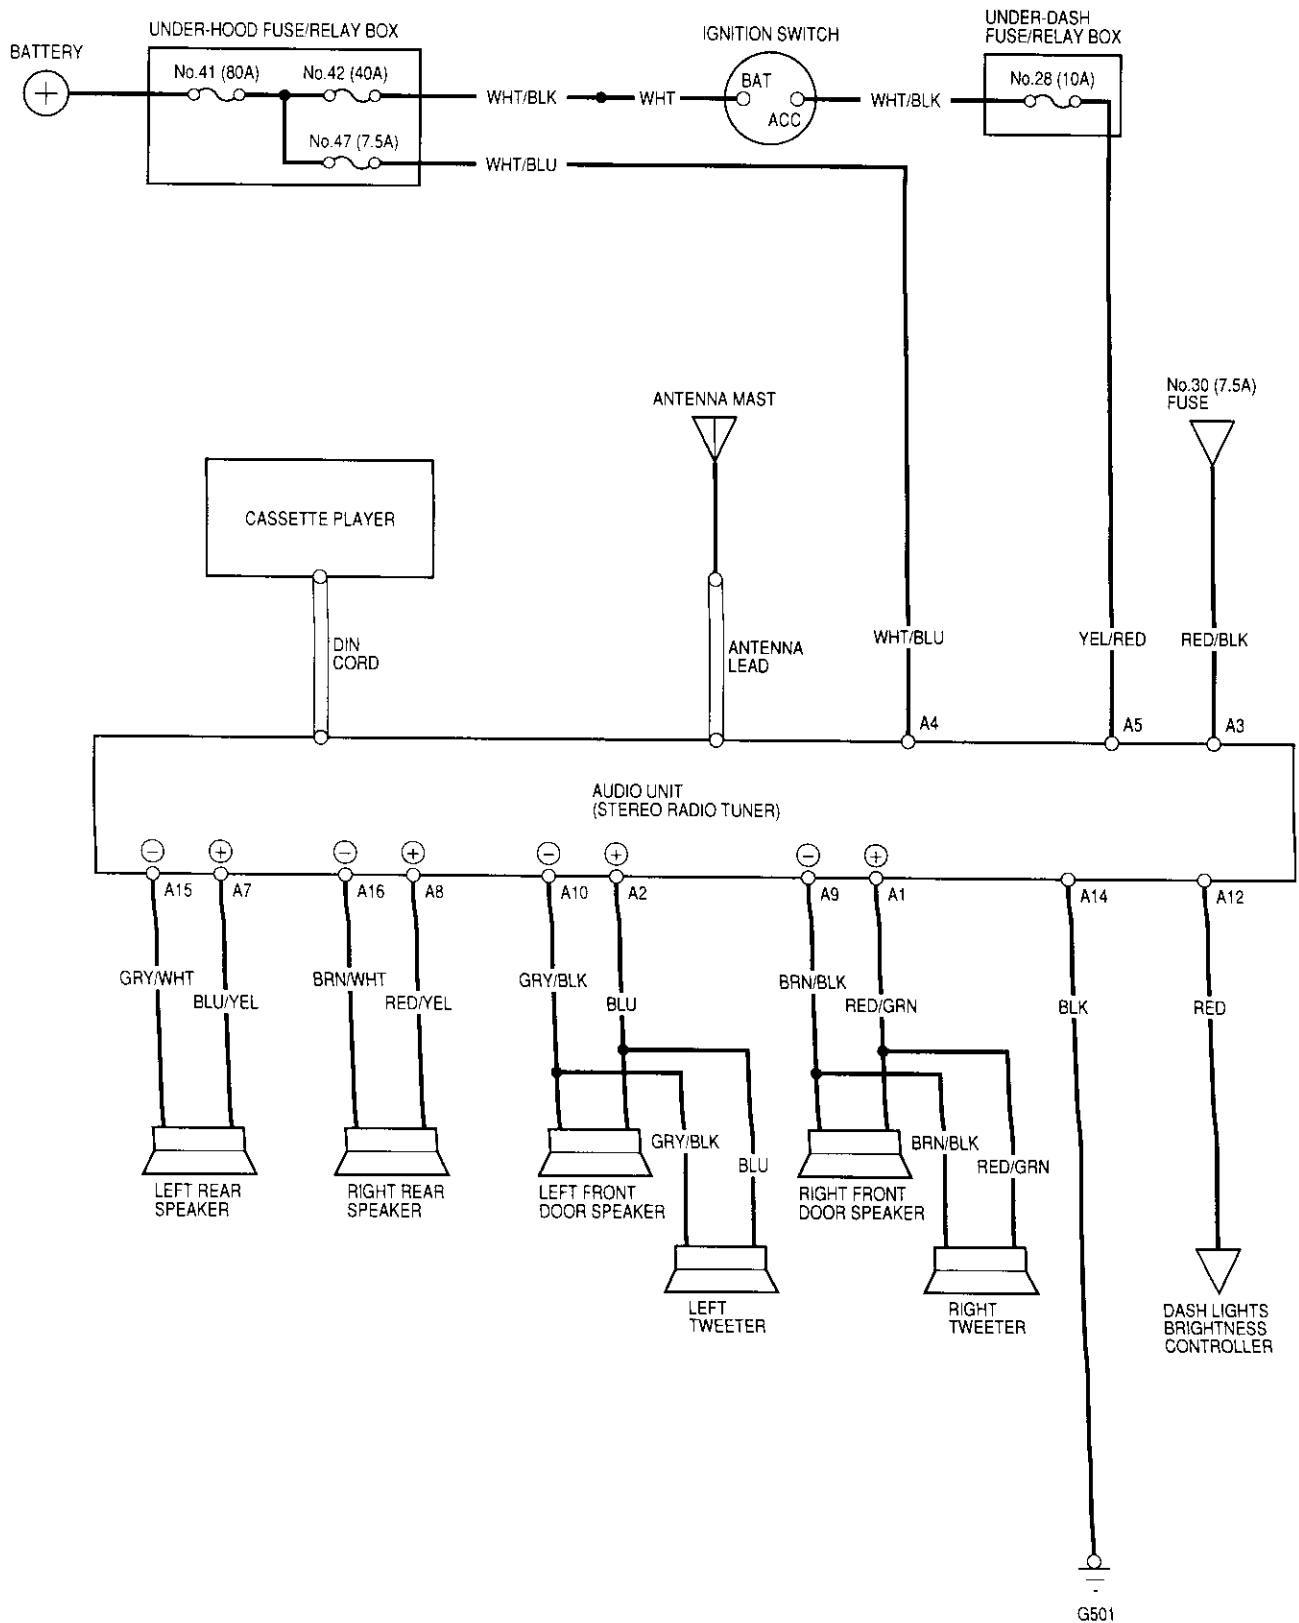




Removal


Stereo Radio Tuner:

1. Remove the center dashboard lower cover (see section 20).
2. Remove the two mounting bolts, and pull the stereo radio tuner out.
3. Disconnect the 16P connectors, sub antenna lead and DIN cord (with cassette player), then remove the stereo radio tuner.

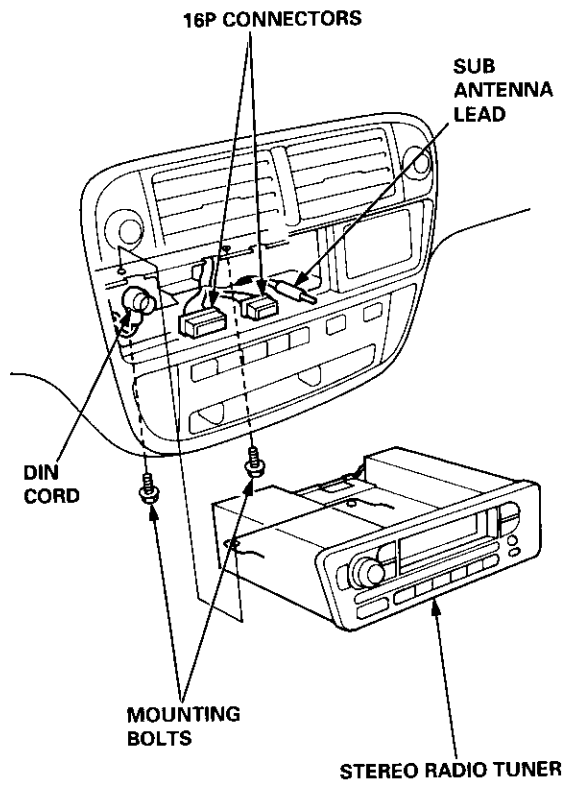

Cassette Player:


1. Remove the front console panel (see section 20).
2. Remove the DIN cord from the stereo radio tuner.
3. Remove the four mounting bolts, then remove the cassette player.

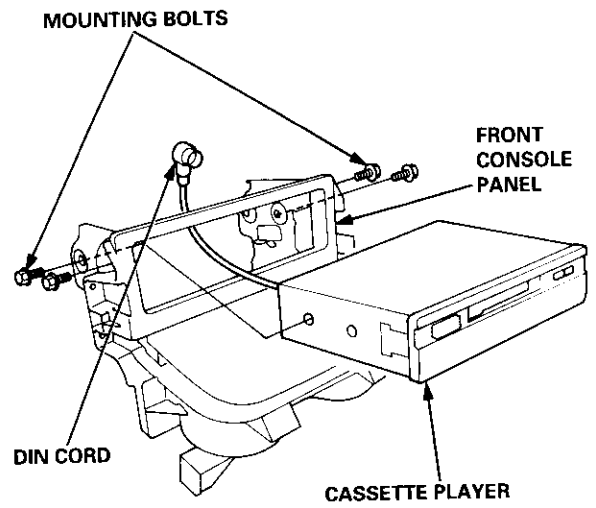

Stereo Sound System

Stereo Radio Tuner Terminals

For keyless entry
(and security) system

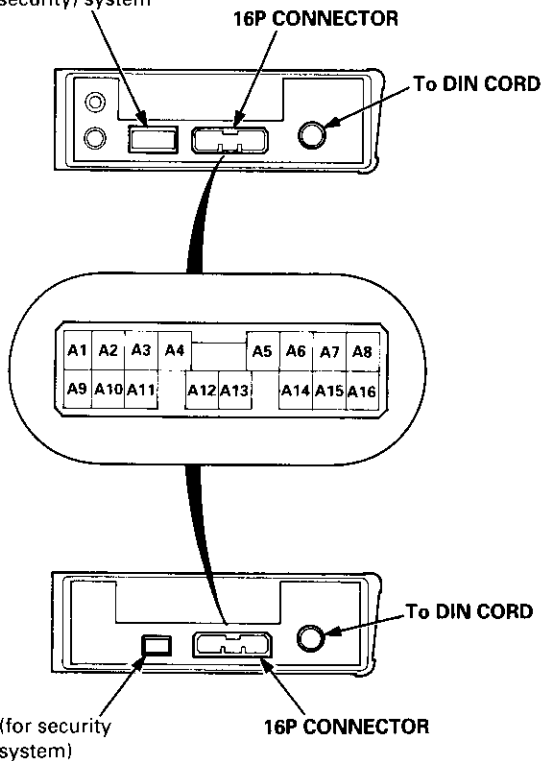


(for security
system)

Cavity	Wire	Connects to
A1	RED/GRN	Right front door speaker ⊕, right tweeter ⊕
A2	BLU	Left front door speaker ⊕, left tweeter ⊕
A3	RED/BLK	Lights-on signal
A4	WHT/BLU	Constant power (tuning memory)
A5	YEL/RED	ACC (main stereo power supply)
A7	BLU/YEL	Left rear door speaker ⊕
A8	RED/YEL	Right rear door speaker ⊕
A9	BRN/BLK	Right front door speaker ⊖, right tweeter ⊖
A10	GRY/BLK	Left front door speaker ⊖, left tweeter ⊖
A12	RED	Dash lights brightness con- troller
A14	BLK	Ground (G501)
A15	GRY/WHT	Left rear door speaker ⊖
A16	BRN/WHT	Right rear door speaker ⊖

Terminals A6, A11 and A13: Not used

Mast Antenna Replacement

1. Disconnect the connector between the antenna lead and sub antenna lead.
2. Remove the two mounting screws, then remove the mast antenna.

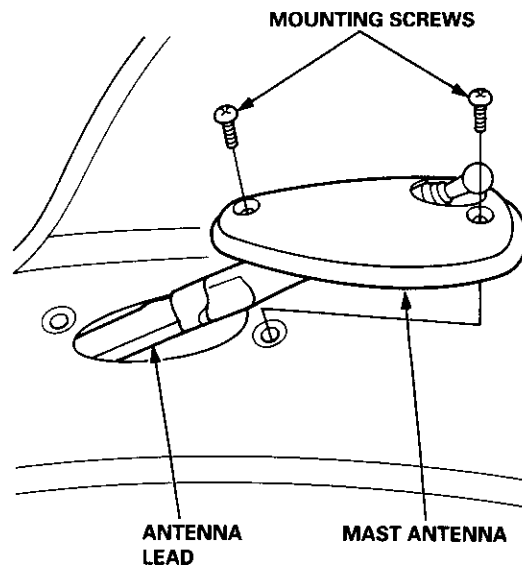




Speaker Replacement


Front speaker:

1. Remove the speaker cover.
2. Remove the three screws from the speaker.
3. Disconnect the 2P connector, and remove the door speaker.

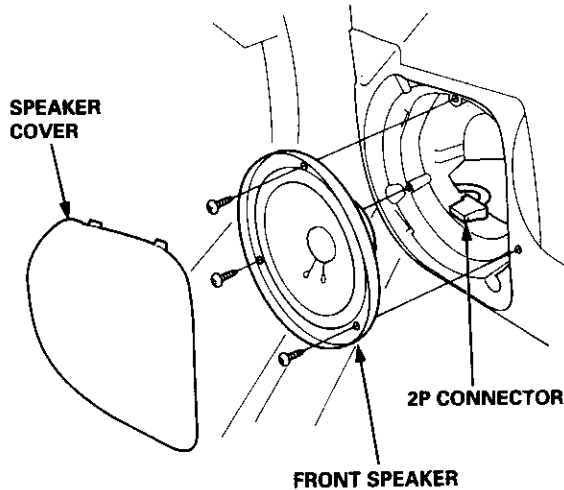


Tweeter:

1. Remove the door panel (see section 20).
2. Disconnect the 2P connector from the tweeter.
3. Remove the mirror garnish.
4. Remove the two screws, then remove the tweeter.

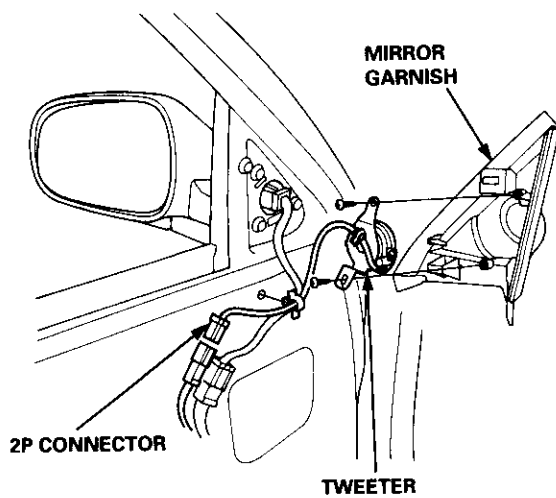


Rear speaker:

1. Remove the rear side shelf or rear shelf (see section 20).
2. Disconnect the 2P connector from the speaker.
3. Remove the four screws, then remove the speaker.

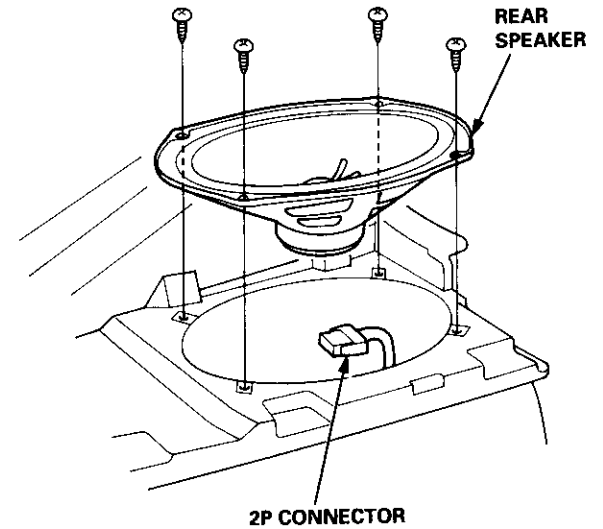

Coupe/Sedan:

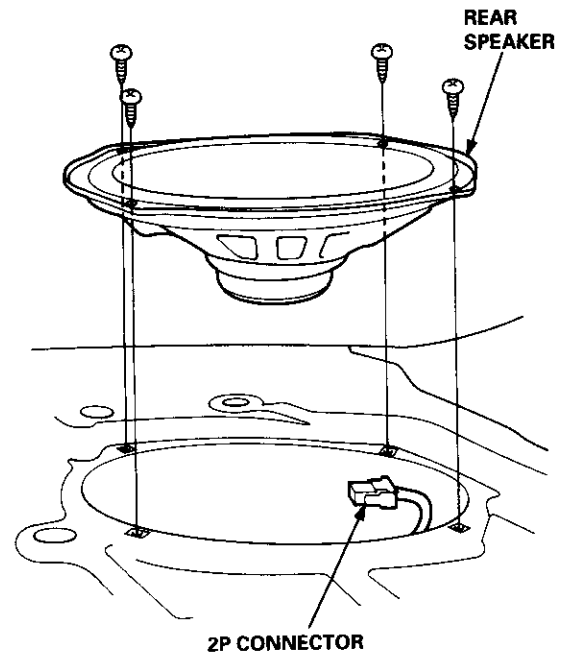

Horn

Component Location Index

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

HORN ASSEMBLY
Test, page 23-173

HORN SWITCHES
Test, page 23-174

HORN RELAY: 98 model
[Wire colors: WHT/GRN, GRY,
WHT/GRN, BLU/RED]
Test, page 23-73


CABLE REEL
Replacement, section 24

HORN RELAY: 96, 97 models
[Wire colors: WHT/GRN, GRY,
WHT/GRN, BLU/RED]
Test, page 23-72

UNDER-DASH FUSE/RELAY BOX




Circuit Diagram: 96, 97 models

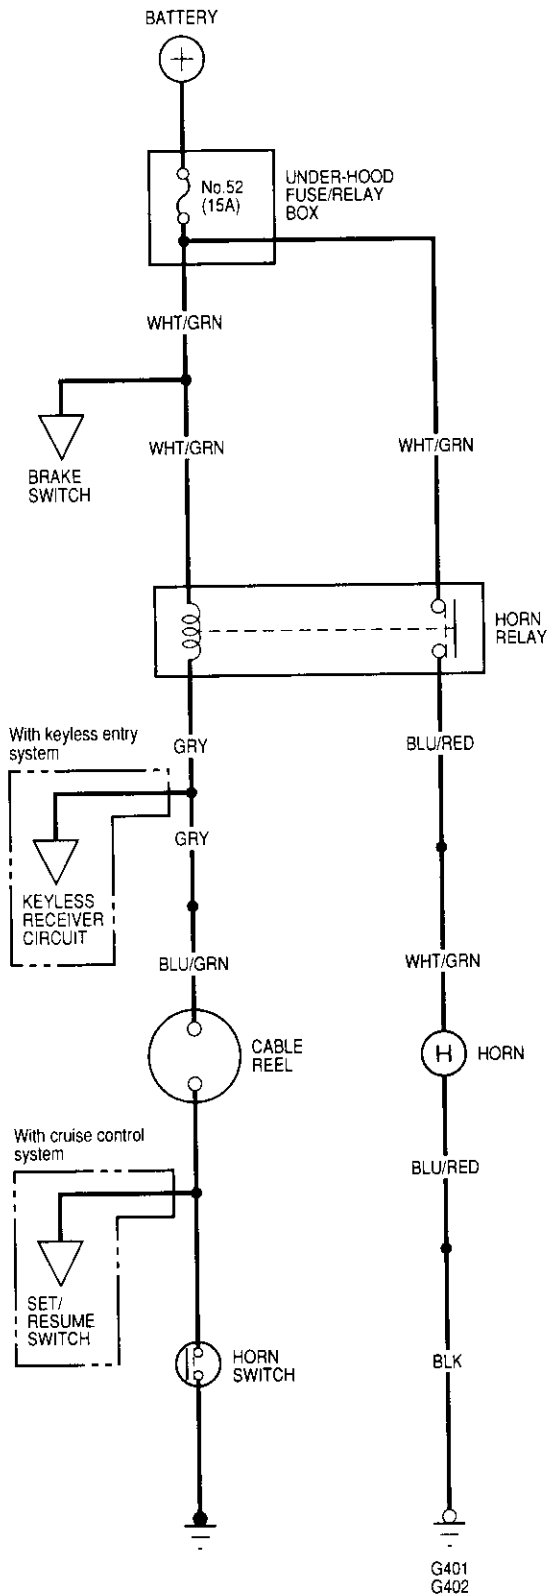


Horn Test: 96, 97 models

1. Remove the front bumper (see section 20).
2. Disconnect the 2P connector from the horn.

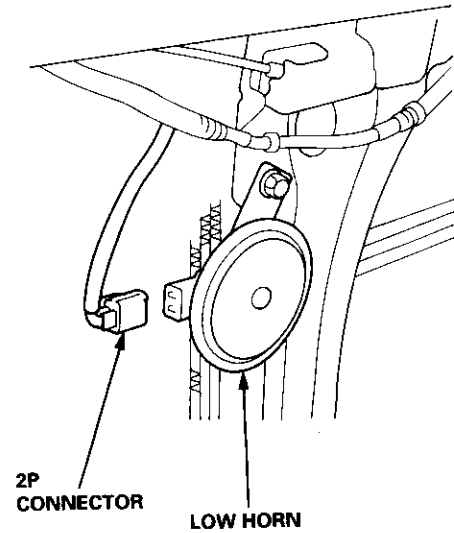


3. Remove the horn.
4. Test the horn by connecting battery power to one terminal and grounding the other. If the horn fails to sound, replace it.

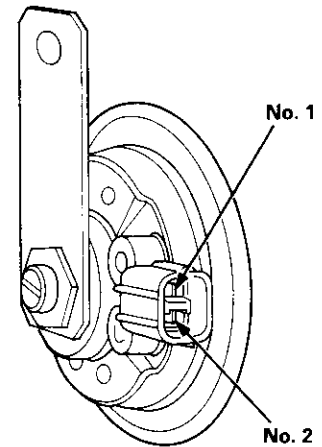


Horn

Circuit Diagram: 98 model

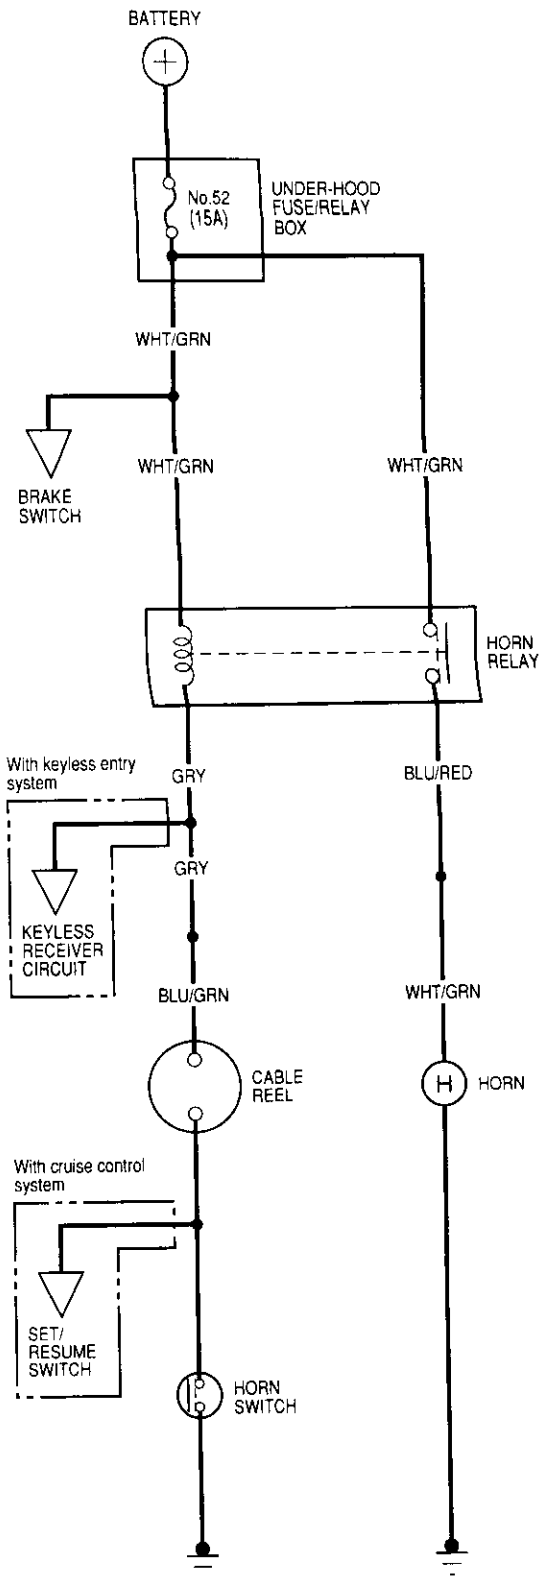

Horn Test: 98 model

1. Remove the front bumper (see section 20).
2. Disconnect the 1P connector from the horn.

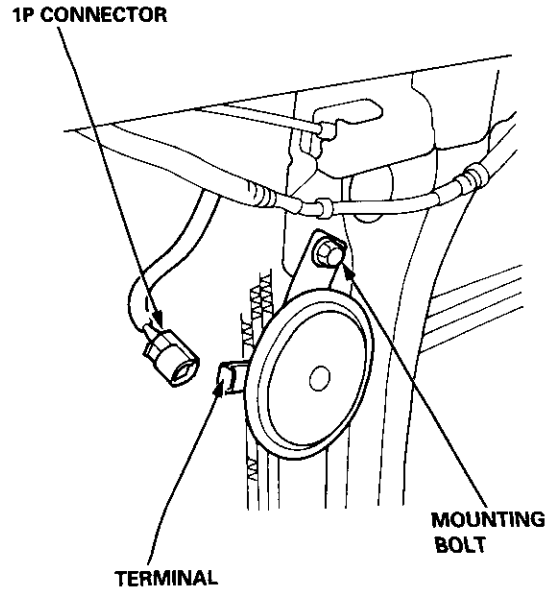


3. Test the horn by connecting battery power to the terminal and grounding the mounting bolt. If the horn fails to sound, replace it.




Switch Test

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait at least three minutes.
2. Disconnect the driver's airbag connector (see section 24).
3. Remove the driver's dashboard lower cover (see section 20).
4. Disconnect the cable reel sub-harness 3P connector from the main wire harness.

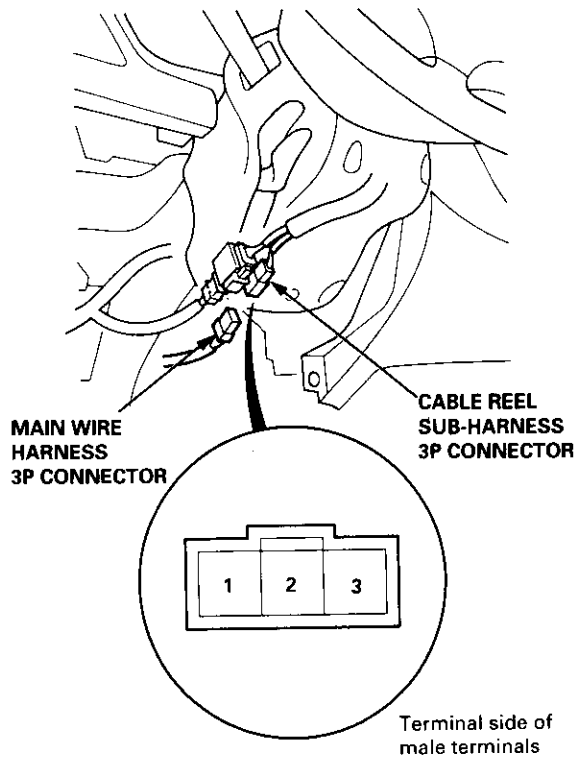


5. Check for continuity between the No. 2 terminal of the cable reel sub-harness and body ground with the horn switch pressed.

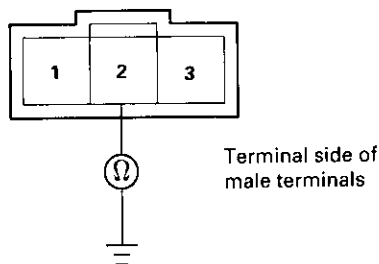

- If there is continuity, the horn switch is OK.
- If there is no continuity, go to step 6.


6. Remove the driver's airbag assembly (see section 24), then disconnect the horn connector from the steering wheel.
7. Check for continuity between the No. 2 terminal of the cable reel sub-harness 3P connector and horn positive terminal.

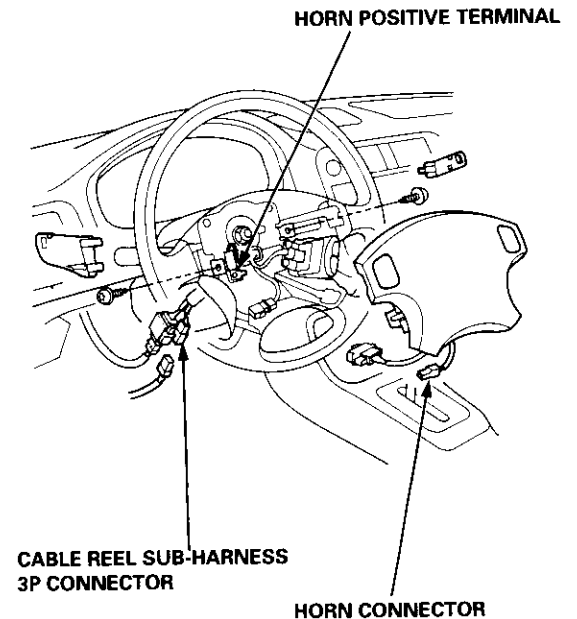

- If there is no continuity, replace the cable reel (see section 24).
 - If there is continuity, repair or replace the horn switch.
8. If all tests prove OK, reinstall the driver's airbag assembly (see section 24), and reconnect the cable reel sub-harness connector.
 9. Reconnect the driver's airbag connector, and reinstall the access panel on the steering wheel.
 10. Reconnect the battery positive cable, then the negative terminal.
 11. After installing the airbag assembly, confirm proper system operation:
 - Turn the ignition switch ON (II); the SRS indicator light should come on for about six seconds and then go off.
 - Make sure both horn buttons work.


Rear Window Defogger

Component Location Index

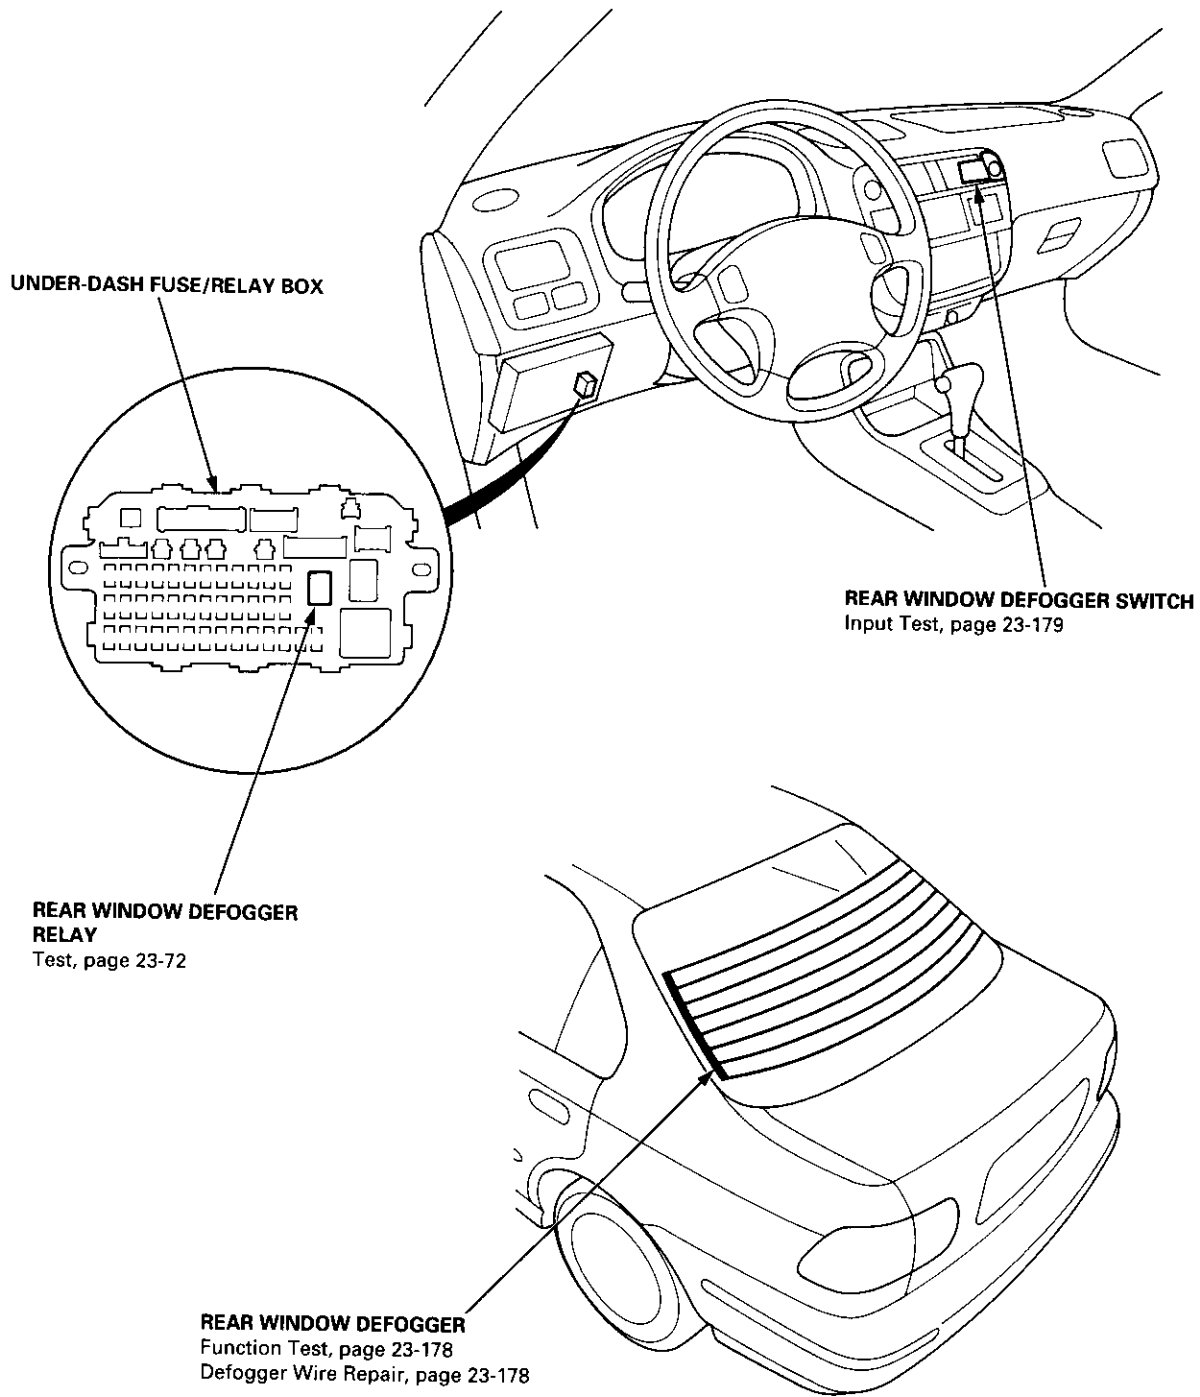



Circuit Diagram

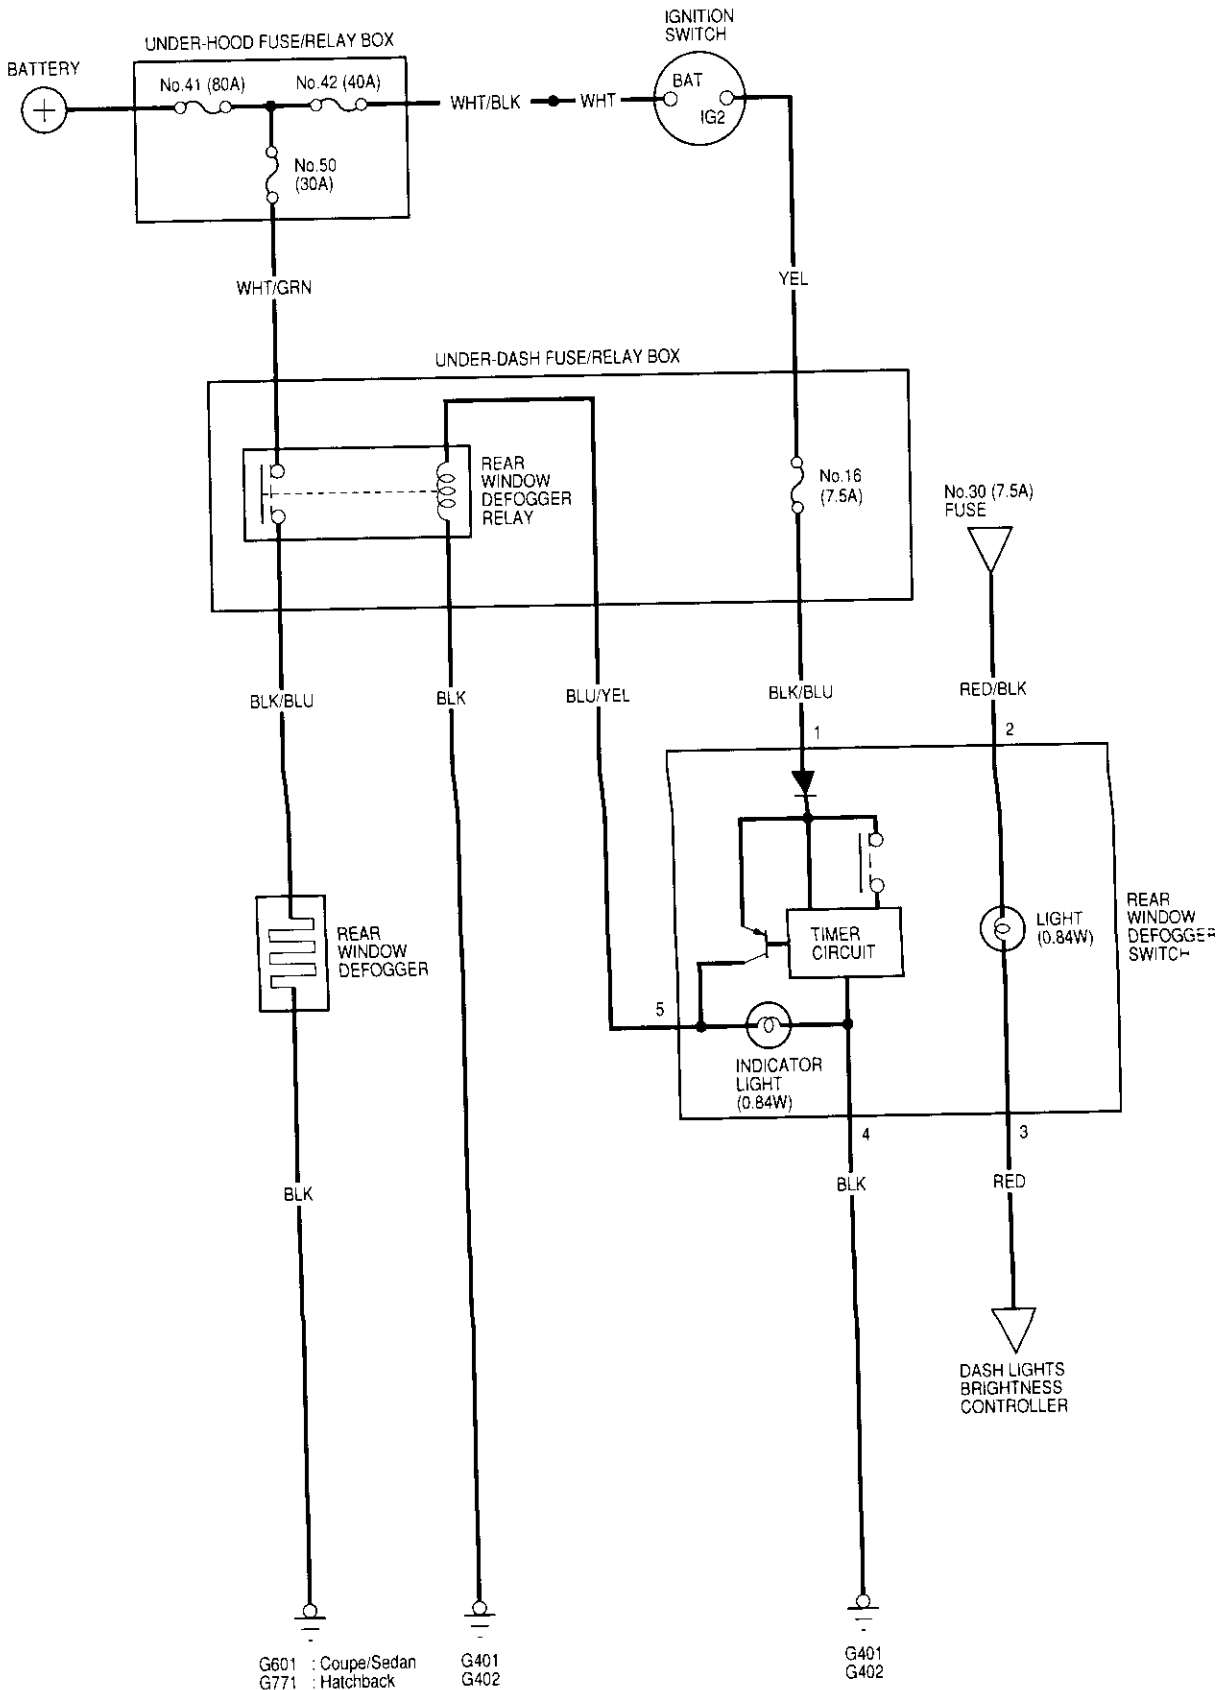


Rear Window Defogger

Function Test

CAUTION: Be careful not to scratch or damage the defogger wires with the tester probe.

1. Check for voltage between the positive terminal and body ground with the ignition switch and defogger switch ON.
There should be battery voltage.

- If there is no voltage, check for:
 - faulty defogger relay.
 - faulty defogger switch.
 - an open in the BLK/BLU wire.
- If there is battery voltage, go to step 2.

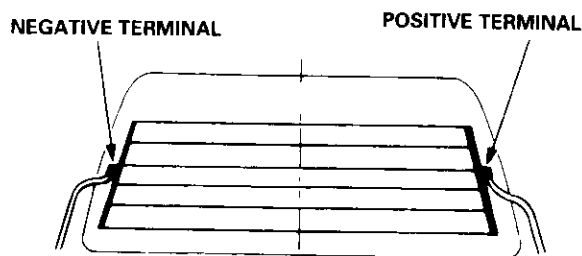


2. Check for continuity between the negative terminal and body ground.
If there is no continuity, check for an open in the defogger ground wire.
3. Touch the voltmeter positive probe to the halfway point of each defogger wire, and the negative probe to the negative terminal.
There should be approximately 6 V with the ignition switch and the defogger switch ON.
 - If the voltage is as specified, the defogger wire is OK.
 - If the voltage is not as specified, repair the defogger wire.
 - If it is more than 6 V, there is a break in the negative half of the wire.
 - If it is less than 6 V, there is a break in the positive half of the wire.

Defogger Wire Repair


NOTE: To make an effective repair, the broken section must be no longer than one inch.

1. Lightly rub the area around the broken section with fine steel wool, then clean it with alcohol.
2. Carefully mask above and below the broken portion of the defogger wire with cellophane tape.

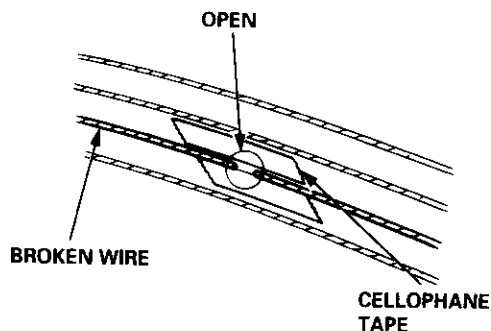

3. Using a small brush, apply a heavy coat of silver conductive paint extending about 1/8" on both sides of the break. Allow 30 minutes to dry.

NOTE: Thoroughly mix the paint before use.

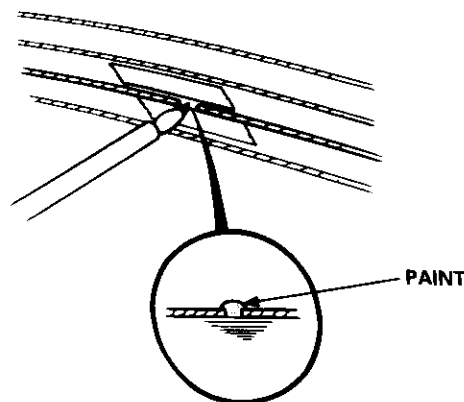

4. Check for continuity in the repaired wire.
5. Apply a second coat of paint in the same way. Let it dry three hours before removing the tape.




Switch Input Test

CAUTION: Be careful not to damage the rear window defogger switch or the center panel when prying the switch out.

NOTE: Before testing, check for blown No. 16 (7.5 A) fuse in the under-dash fuse/relay box.

1. Pry the switch out of the center panel (see section 20).
2. Disconnect the 5P connector from the switch.
3. Turn the ignition switch ON (II), and check the voltage between the BLK/BLU (+) and the BLK (-) terminals. There should be battery voltage.
 - If there is no voltage, check for an open in the BLK/BLU wire.
 - If there is battery voltage, go to step 4.

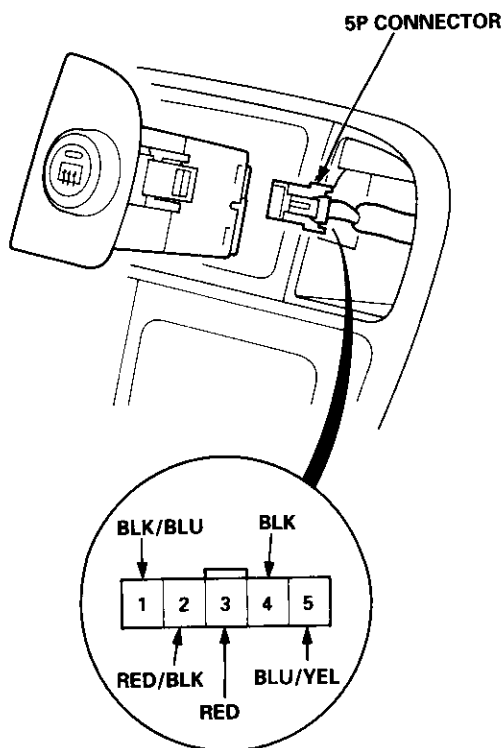


Wire side of female terminals

4. Connect a jumper wire between the BLK/BLU and the BLU/YEL terminals.
5. Turn the ignition switch ON (II), and check that the rear window defogger works; if it does, replace the defogger switch.

Power Mirrors

Component Location Index


- Power Mirror
Function Test, page 23-182
- Power Mirror Test, page 23-183
Replacement, section 20
- Actuator Replacement, page 23-184

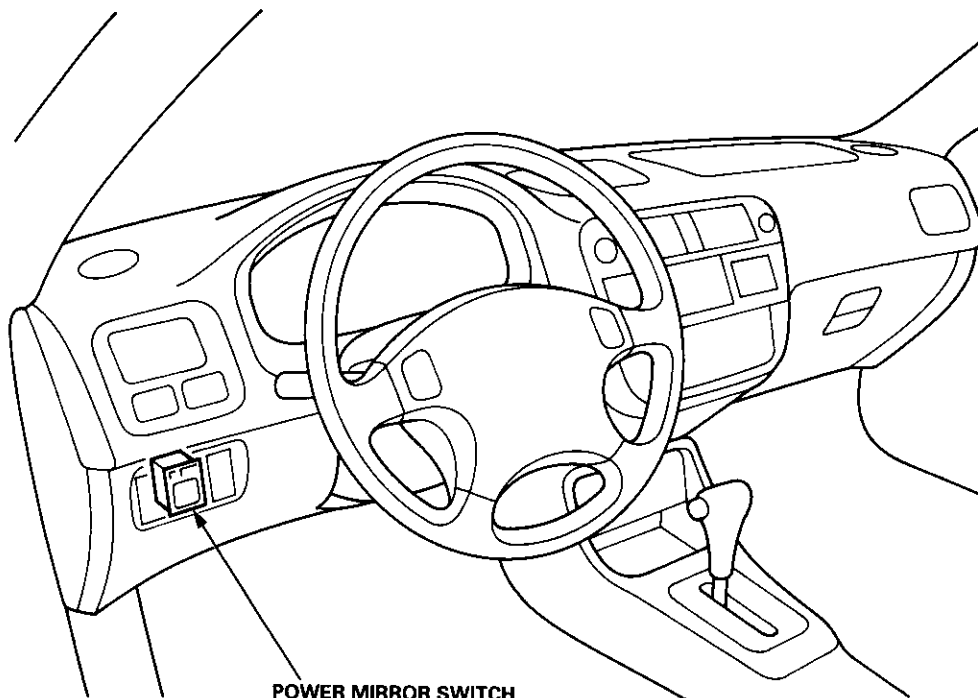

POWER MIRROR SWITCH
Test, page 23-183



Circuit Diagram

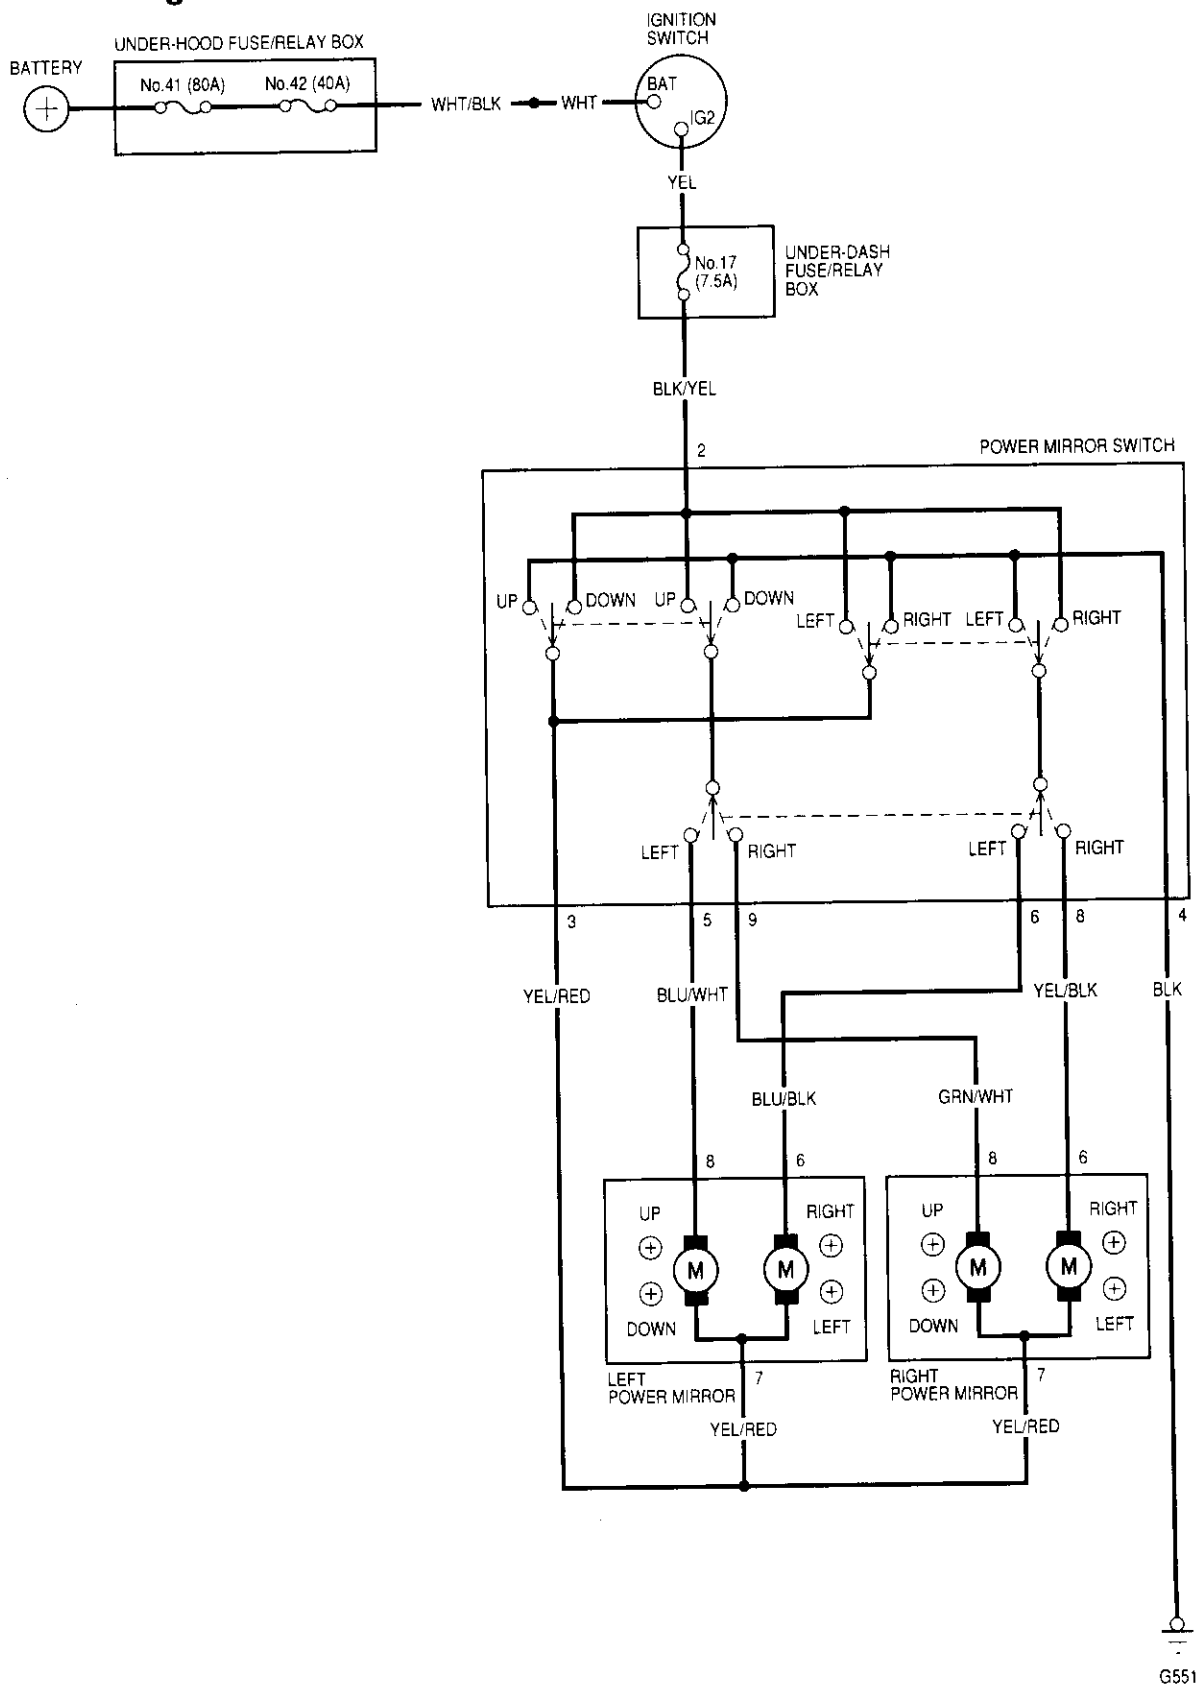


Power Mirrors

Function Test

CAUTION: Be careful not to damage the mirror switch or the dashboard driver's lower cover when prying the switch out.

1. Pry the switch out of the driver's dashboard lower cover.
2. Disconnect the 10P connector from the switch.

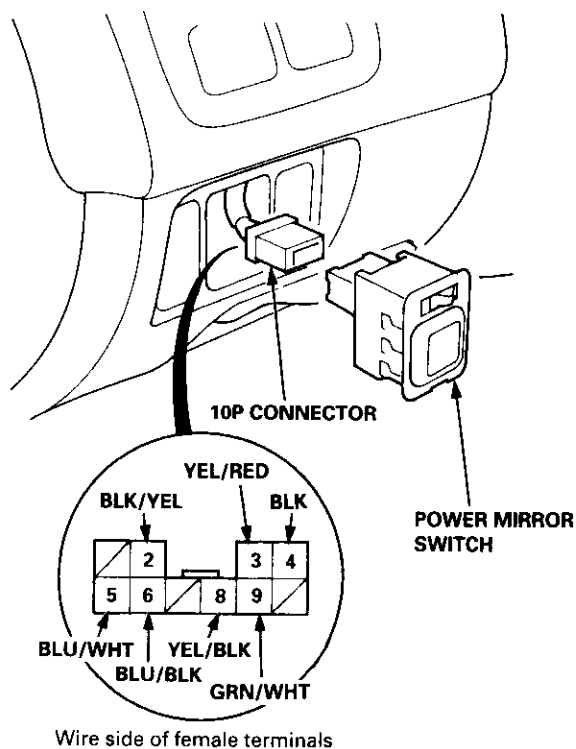

Mirror Test

Both inoperative:

1. Check for voltage between the No. 2 (BLK/YEL) terminal and body ground with the ignition switch ON (II).
There should be battery voltage.
 - If there is no voltage, check for:
 - blown No. 17 (7.5 A) fuse in the under-dash fuse/relay box.
 - an open in the BLK/YEL wire.
 - If there is battery voltage, go to step 2.
2. Check for continuity between the No. 4 (BLK) terminal and body ground.
There should be continuity.
 - If there is no continuity, check for:
 - an open in the BLK wire.
 - poor ground (G551).

Left mirror inoperative:

Connect the No. 2 (BLK/YEL) terminal of the 10P connector to the No. 3 (YEL/RED) terminal and the No. 5 (or No. 6) terminal to body ground with jumper wires. The left mirror should tilt down (or swing left) when the ignition switch is turned ON (II).

- If the mirror does not tilt down (or does not swing left), remove the left door panel, and check for an open in the BLU/WHT (or BLU/BLK) wire between the left power mirror and the switch.
 - If the wire is OK, check the left power mirror actuator.
- If the mirror neither tilts down nor swings left, repair the YEL/RED wire.
- If the mirror operates properly, check the mirror switch.

Right mirror inoperative:

Connect the No. 2 (BLK/YEL) terminal of the 10P connector to the No. 3 (YEL/RED) terminal and the No. 9 (or No. 8) terminal to body ground with jumper wires. The right mirror should tilt down (or swing left) when the ignition switch is turned ON (II).

- If the mirror does not tilt down (or does not swing left), remove the right door panel, and check for an open in the GRN/WHT (or YEL/BLK) wire between the right power mirror and the switch.
 - If the wire is OK, check the right power mirror actuator.
- If the mirror neither tilts down nor swings left, repair the YEL/RED wire.
- If the mirror operates properly, check the mirror switch.




Switch Test

1. Remove the switch as described in Function Test (see page 23-182).
2. Check for continuity between the terminals in each switch position according to the table.


Mirror Switch:

Terminal		2	3	4	5	6	8	9
Position								
L	UP	○	○—○	○	○			
	DOWN	○	○	○—○	○			
	LEFT	○	○	○	○—○	○		
	RIGHT	○	○—○	○	○	○		
R	UP	○	○—○	○				○
	DOWN	○	○	○—○	○			○
	LEFT	○	○	○	○—○		○	
	RIGHT	○	○—○	○			○	

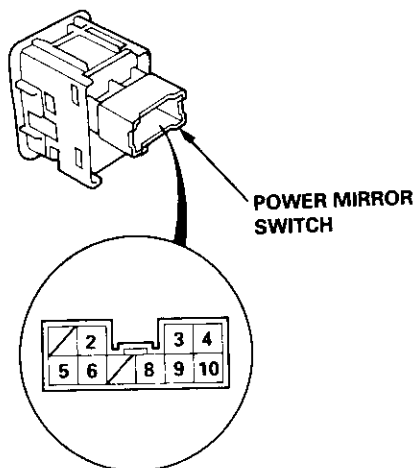

Power Mirror Test

1. Pry out the cover panel (see section 20).

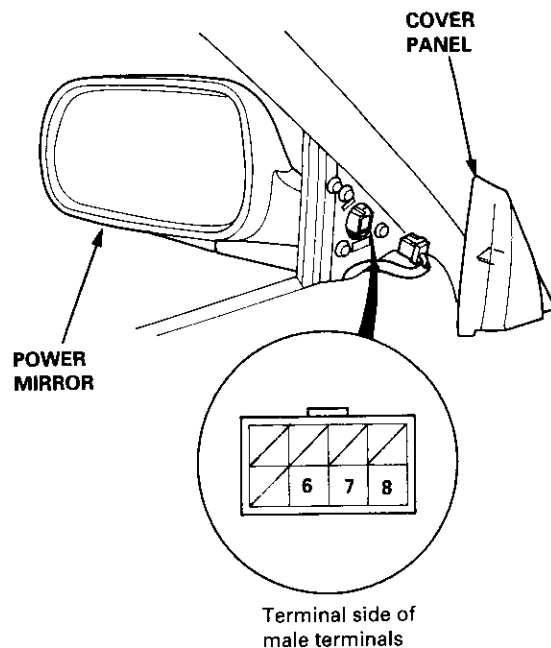


2. Disconnect the 8P connector from the power mirror.
3. Check actuator operation by connecting power and ground according to the tables.

Terminal	6	7	8
Position			
TILT UP		⊖	⊕
TILT DOWN		⊕	⊖
SWING LEFT	⊖	⊕	
SWING RIGHT	⊕	⊖	


Power Mirrors

Mirror Actuator Replacement (Donnelly Type)

1. Remove the power mirror from the door (see section 20), and disconnect the 8P connector.
2. Remove the mirror base cover from the mirror housing.

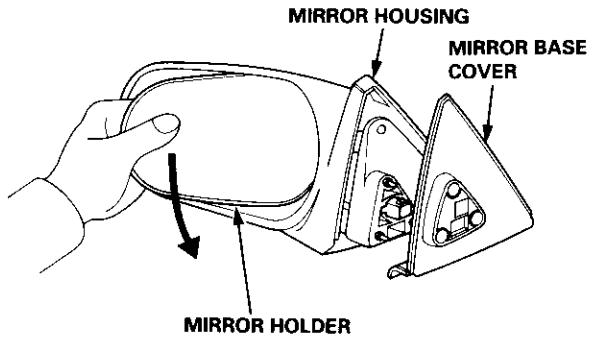


3. Remove the mirror holder from the mirror housing. Gently pull it out by hand.
4. Remove the three screws from the actuator and the two screws from the bracket at the base of the assembly.

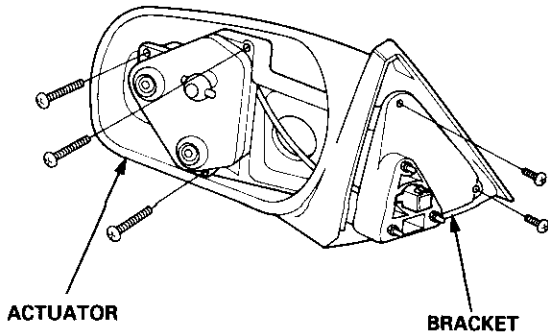


5. Remove the bracket from the housing.

6. Remove the two screws, cut the wire harness, and remove the actuator.

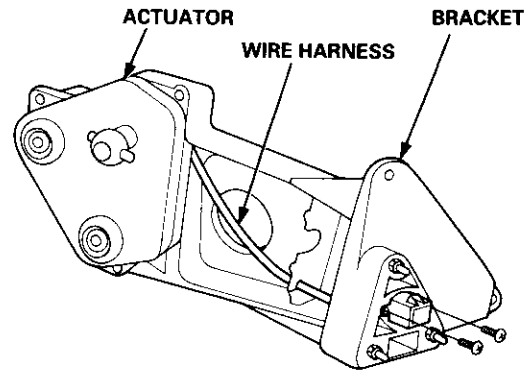


7. Record the terminal locations and wire colors.
8. Route the wire harness of the new actuator through the hole in the bracket. Be sure to pass the wire under the bracket clip.

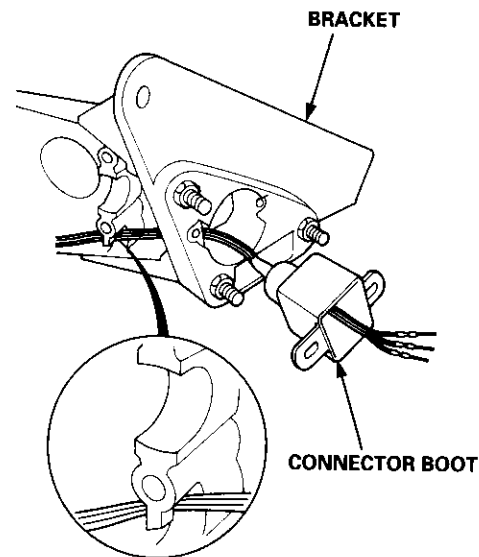

9. Pass the connector boot over the wire harness.



10. Insert the terminals into the connector in the original arrangement (recorded in step 7), as shown below.

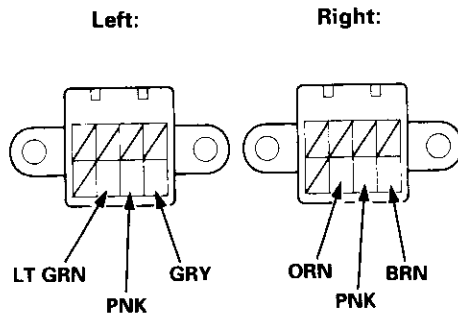


11. Apply tape to seal the intersection of the connector boot and the wire harness.
12. Reassemble in the reverse order of disassembly. Be careful not to break the mirror when reinstalling it to the actuator.
13. Reinstall the mirror assembly to the door.
14. Operate the power mirror to check that the actuator works smoothly.

Wipers/Washers


Component Location Index

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

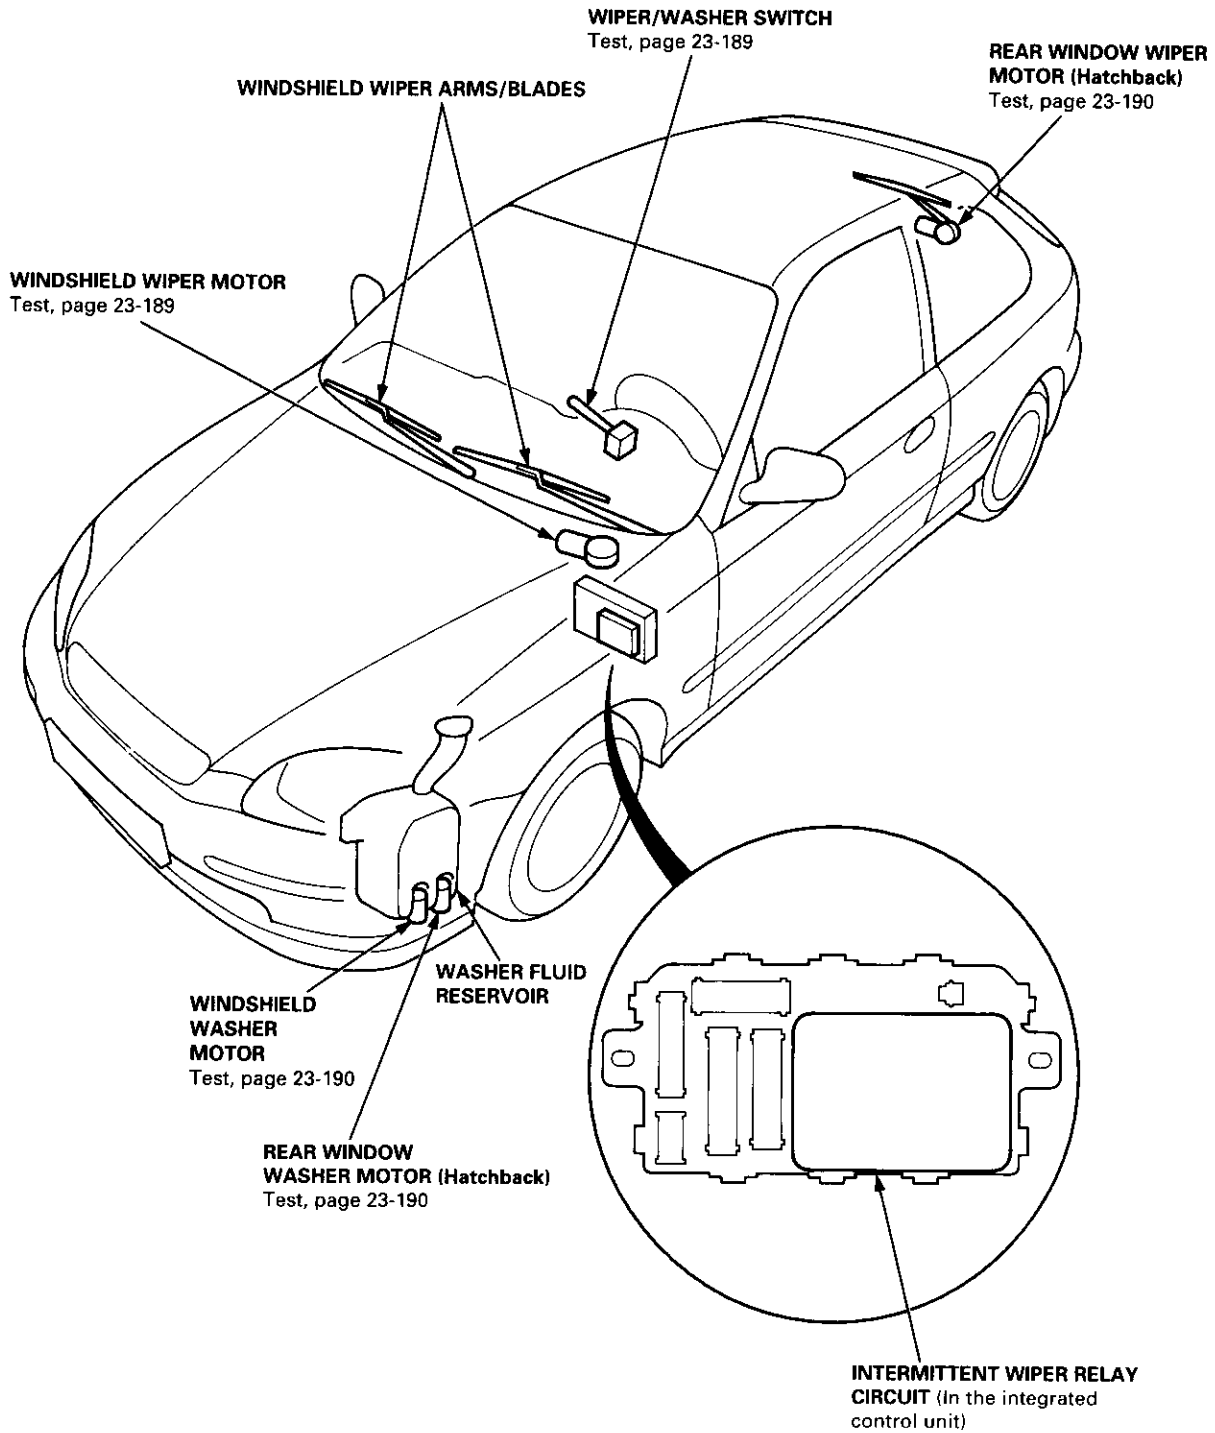




Circuit Diagram (Windshield)

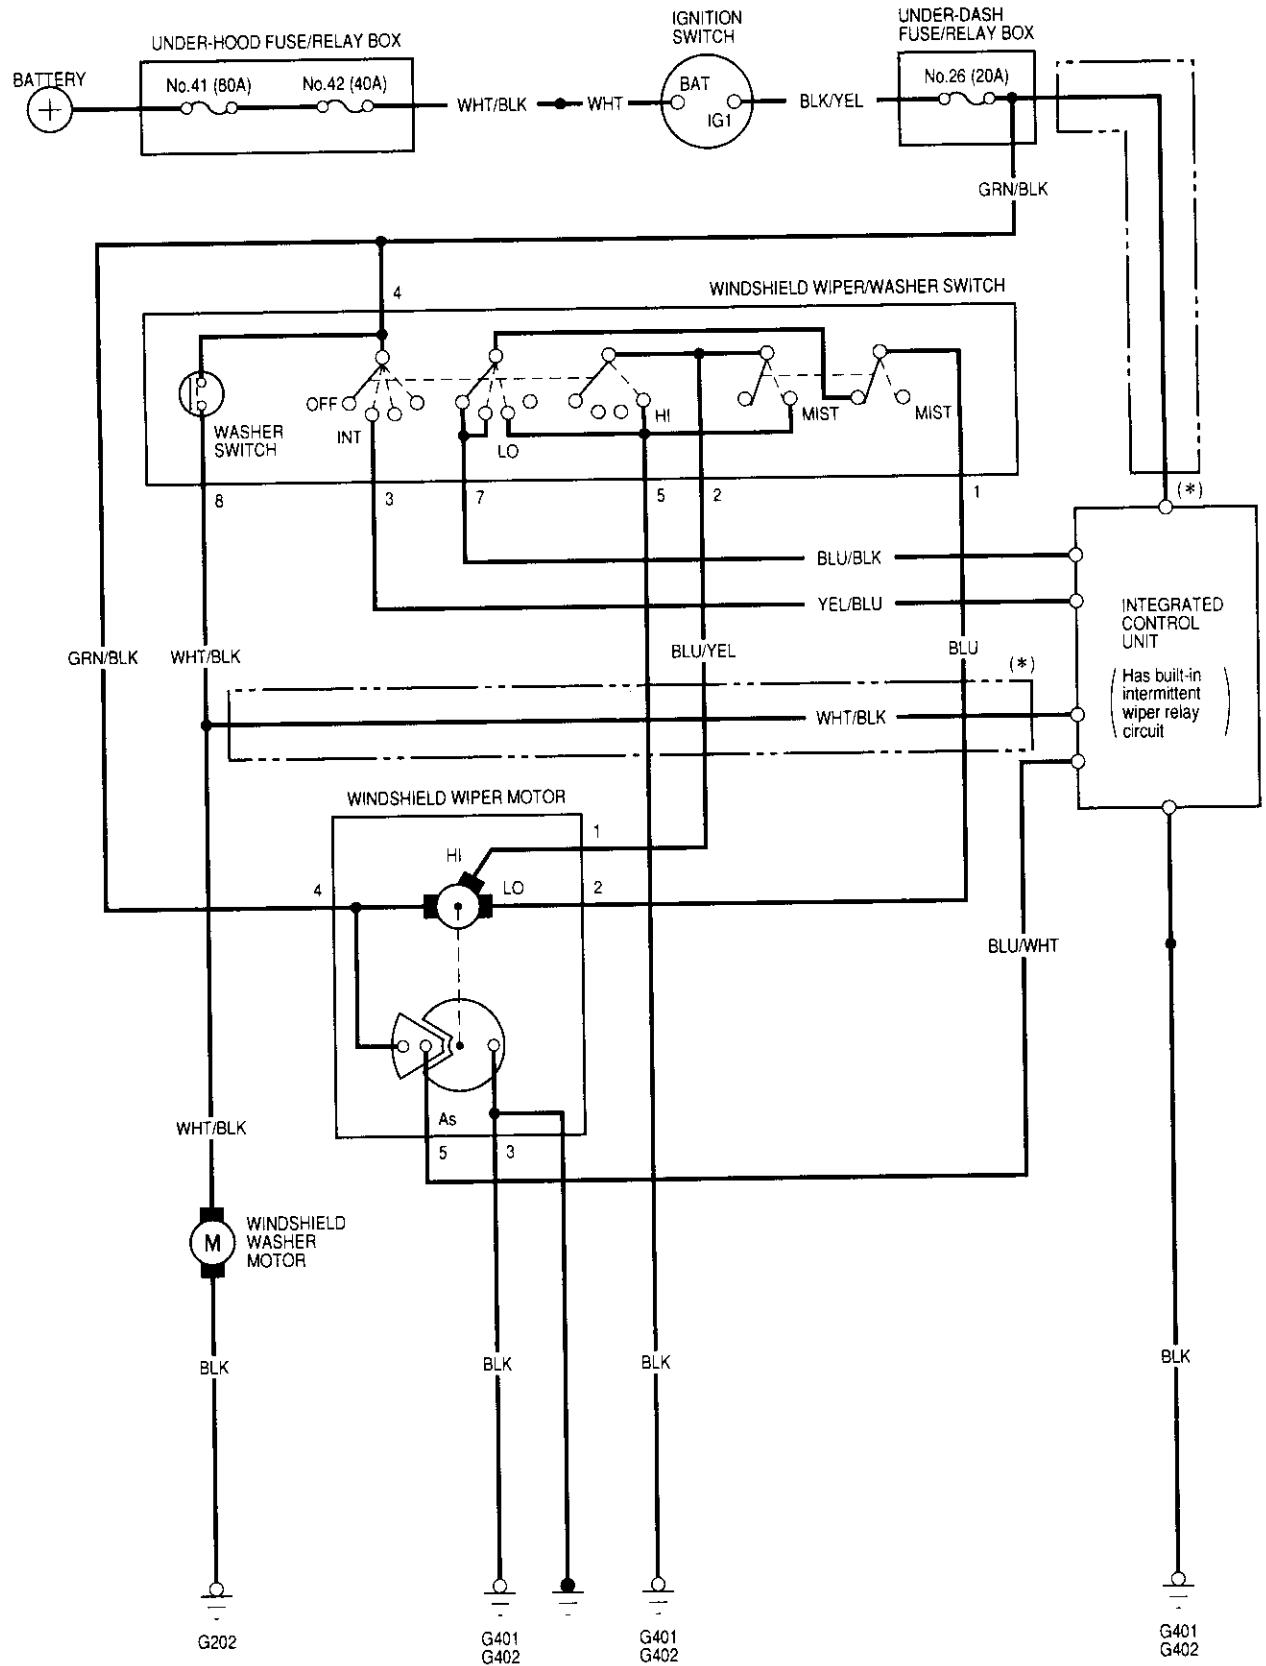

* : With COMBINED OPERATION WIPER/WASHER

Wipers/Washers


Circuit Diagram (Rear Window)

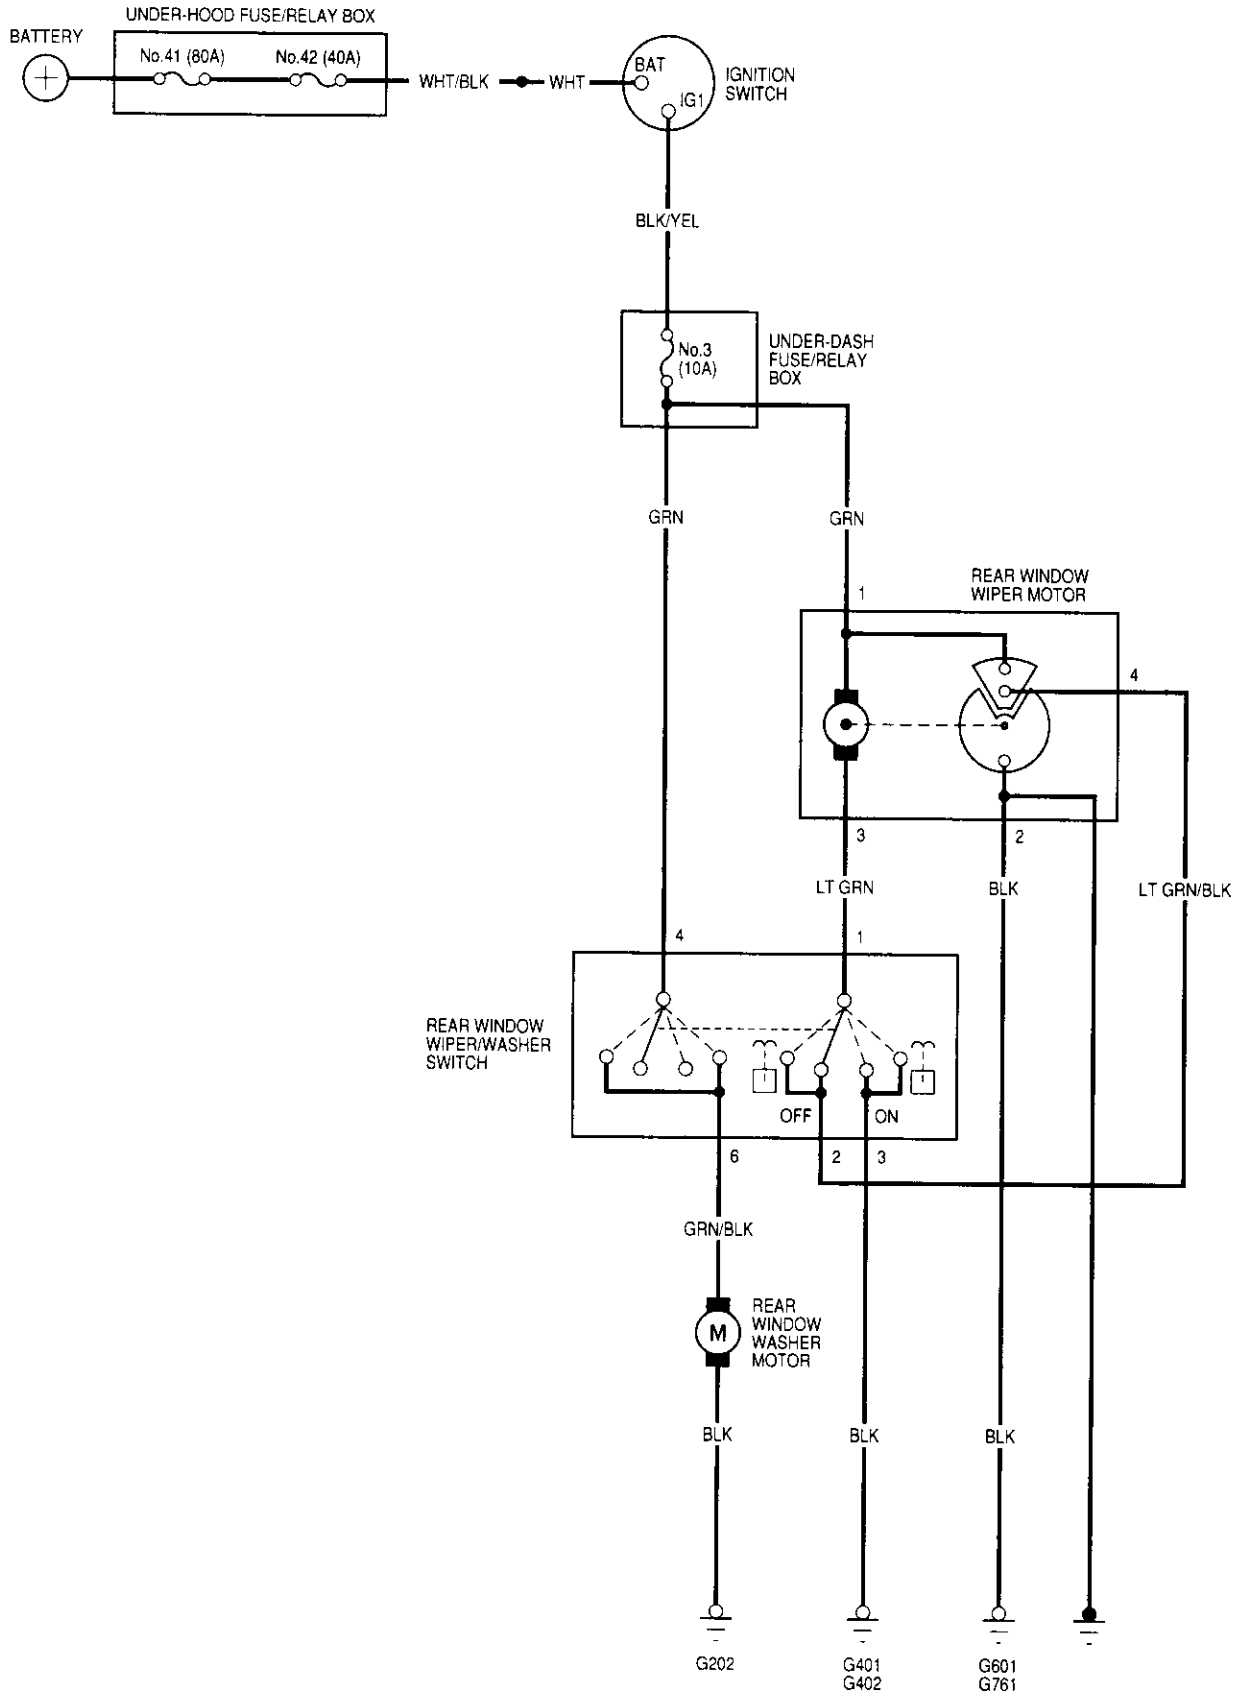



Wiper/Washer Switch Test

1. Remove the driver's dashboard lower cover (see section 20).
2. Remove the steering column covers.
3. Disconnect the 8P and 6P connectors from the switch, remove the two screws, and pull out the switch.

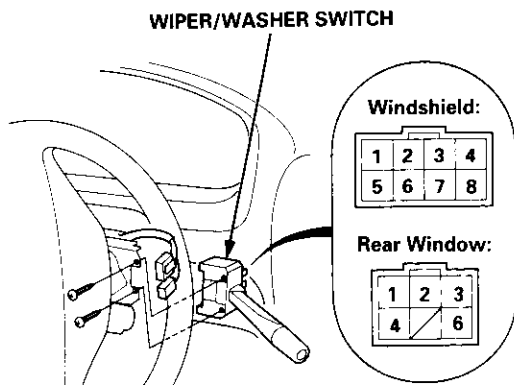

4. Check for continuity between the terminals in each switch position according to the table.

Windshield Wiper/Washer Switch:

Terminal	1	2	3	4	5	7	8
Position							
OFF	○					○	
INT	○					○	
LO	○				○		
HI		○			○		
Mist switch "ON"		○			○		
Washer switch "ON"				○			○


Rear Window Wiper/Washer Switch:

Terminal	1	2	3	4	6
Position					
Washer switch "ON" (Wiper switch "OFF")	○	○		○	○
OFF	○	○			
ON	○		○		
Washer switch "ON" (Wiper switch "ON")	○		○	○	○

Windshield Wiper Motor Test

1. Open the hood, and remove the cap nuts. Carefully remove the wiper arms so that they do not touch the hood.
2. Remove the cowl cover by prying out the trim clips (see section 20).
3. Disconnect the 5P connector from the windshield wiper motor.

Terminal side of male terminals

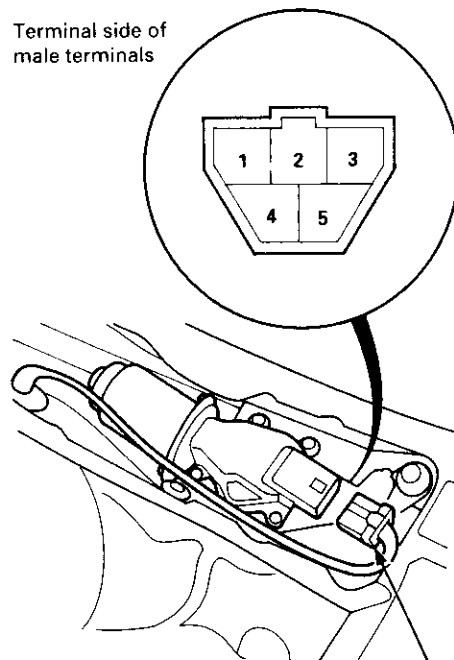

5P CONNECTOR

4. Test the motor by connecting battery power and ground according to the table.

Terminal	1	2	4
Position			
LOW SPEED		⊖	⊕
HIGH SPEED	⊖		⊕

If the motor does not run or fails to run smoothly, replace it.


5. Connect an analog voltmeter between the No. 5 (+) and No. 3 (-) terminals, and run the motor at low or high speed.

The voltmeter should indicate 0 V and 4 V or less alternately.

Wipers/Washers

Rear Wiper Motor Test (Hatchback)

1. Remove the hatch lower trim panel (see section 20).
2. Disconnect the 4P connector from the wiper motor assembly.

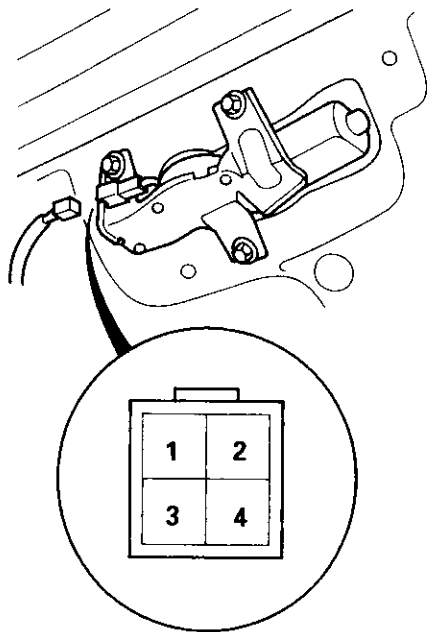

3. Test the motor by connecting battery power to the No. 1 terminal and ground to the No. 3 terminal.


If the motor does not run or fails to run smoothly, replace it.

4. Reconnect the 4P connector to the wiper motor.
5. Connect an analog voltmeter between the No. 4 (+) and No. 2 (-) terminals.
6. Run the motor by turning the wiper switch ON.

The voltmeter should indicate 0 V and 4 V or less alternately.

Washer Motor Test

1. Remove the front bumper (see section 20).
2. Disconnect the 2P connectors from the washer.

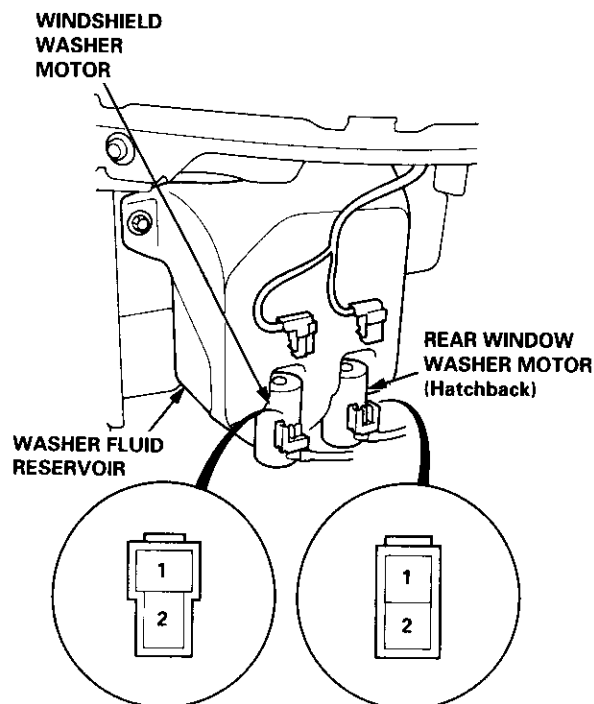

3. Test the washer motor by connecting battery power and ground according to the table.


Terminal	1	2
Battery		
Disconnected		
Connected	⊕	⊖

- If the motor fails to run smoothly, replace it.
- If the motor runs smoothly, but little or no washer fluid is pumped, check for a disconnected or blocked washer hose, or a clogged pump outlet in the motor.

Power Windows




Component Location Index

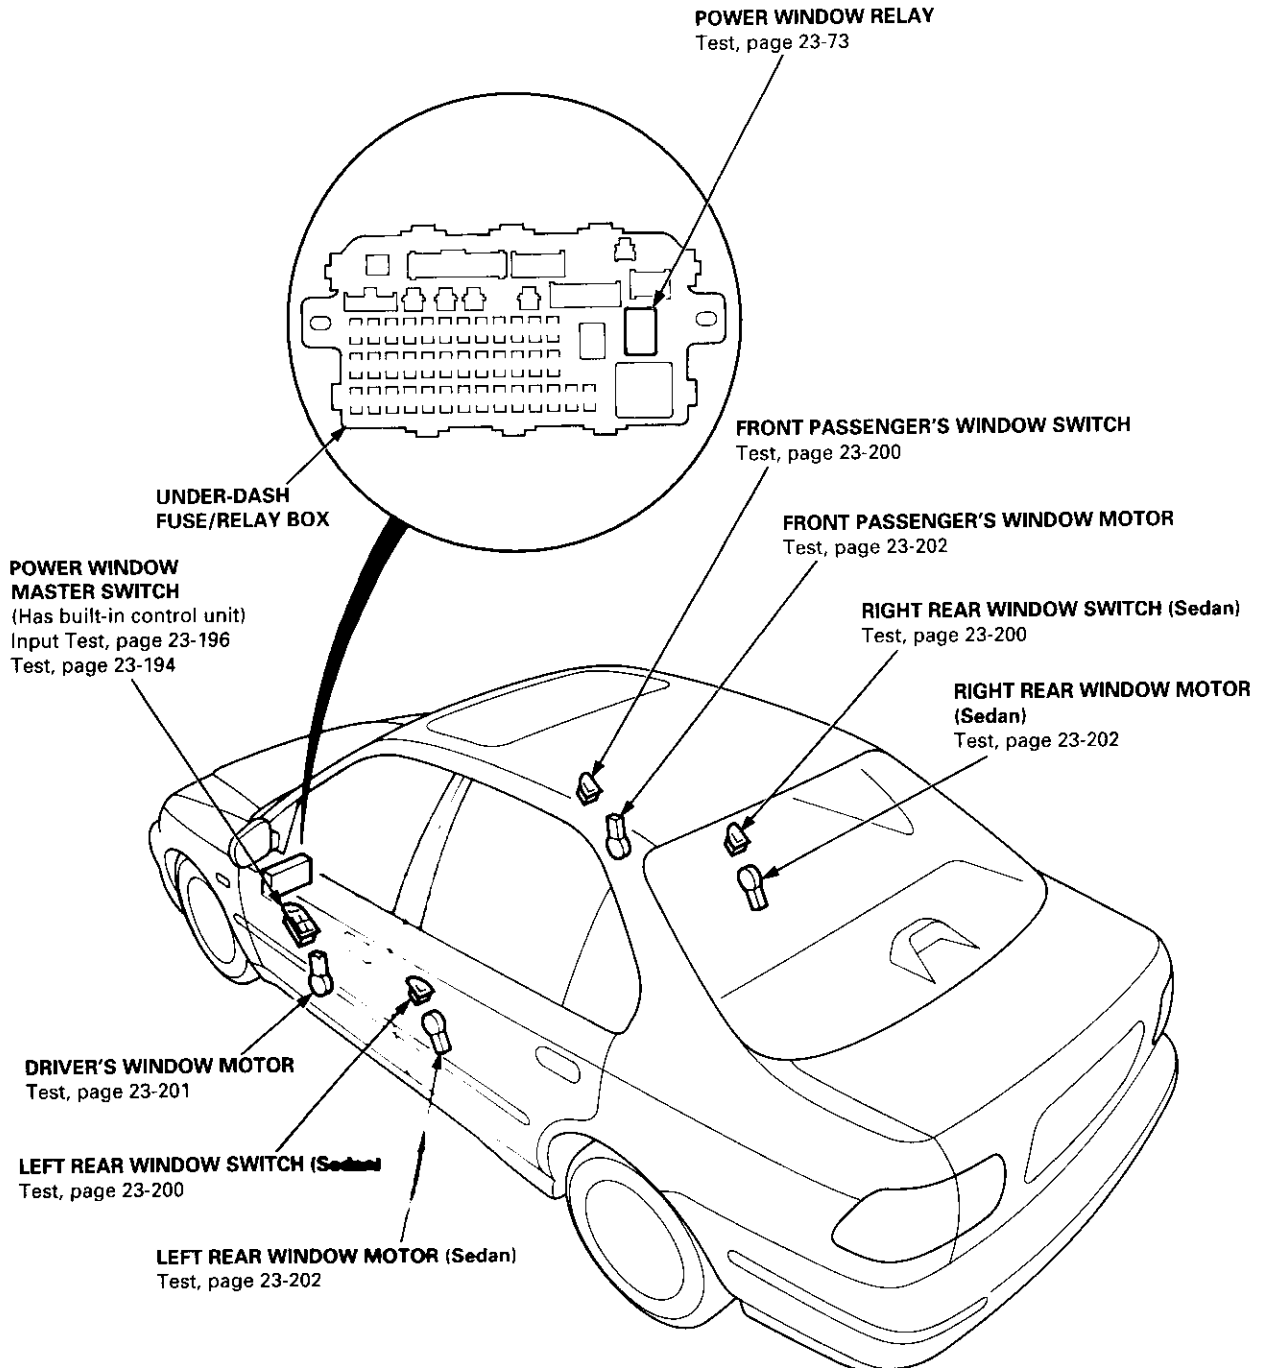


Power Windows

Circuit Diagram (Coupe/Hatchback)

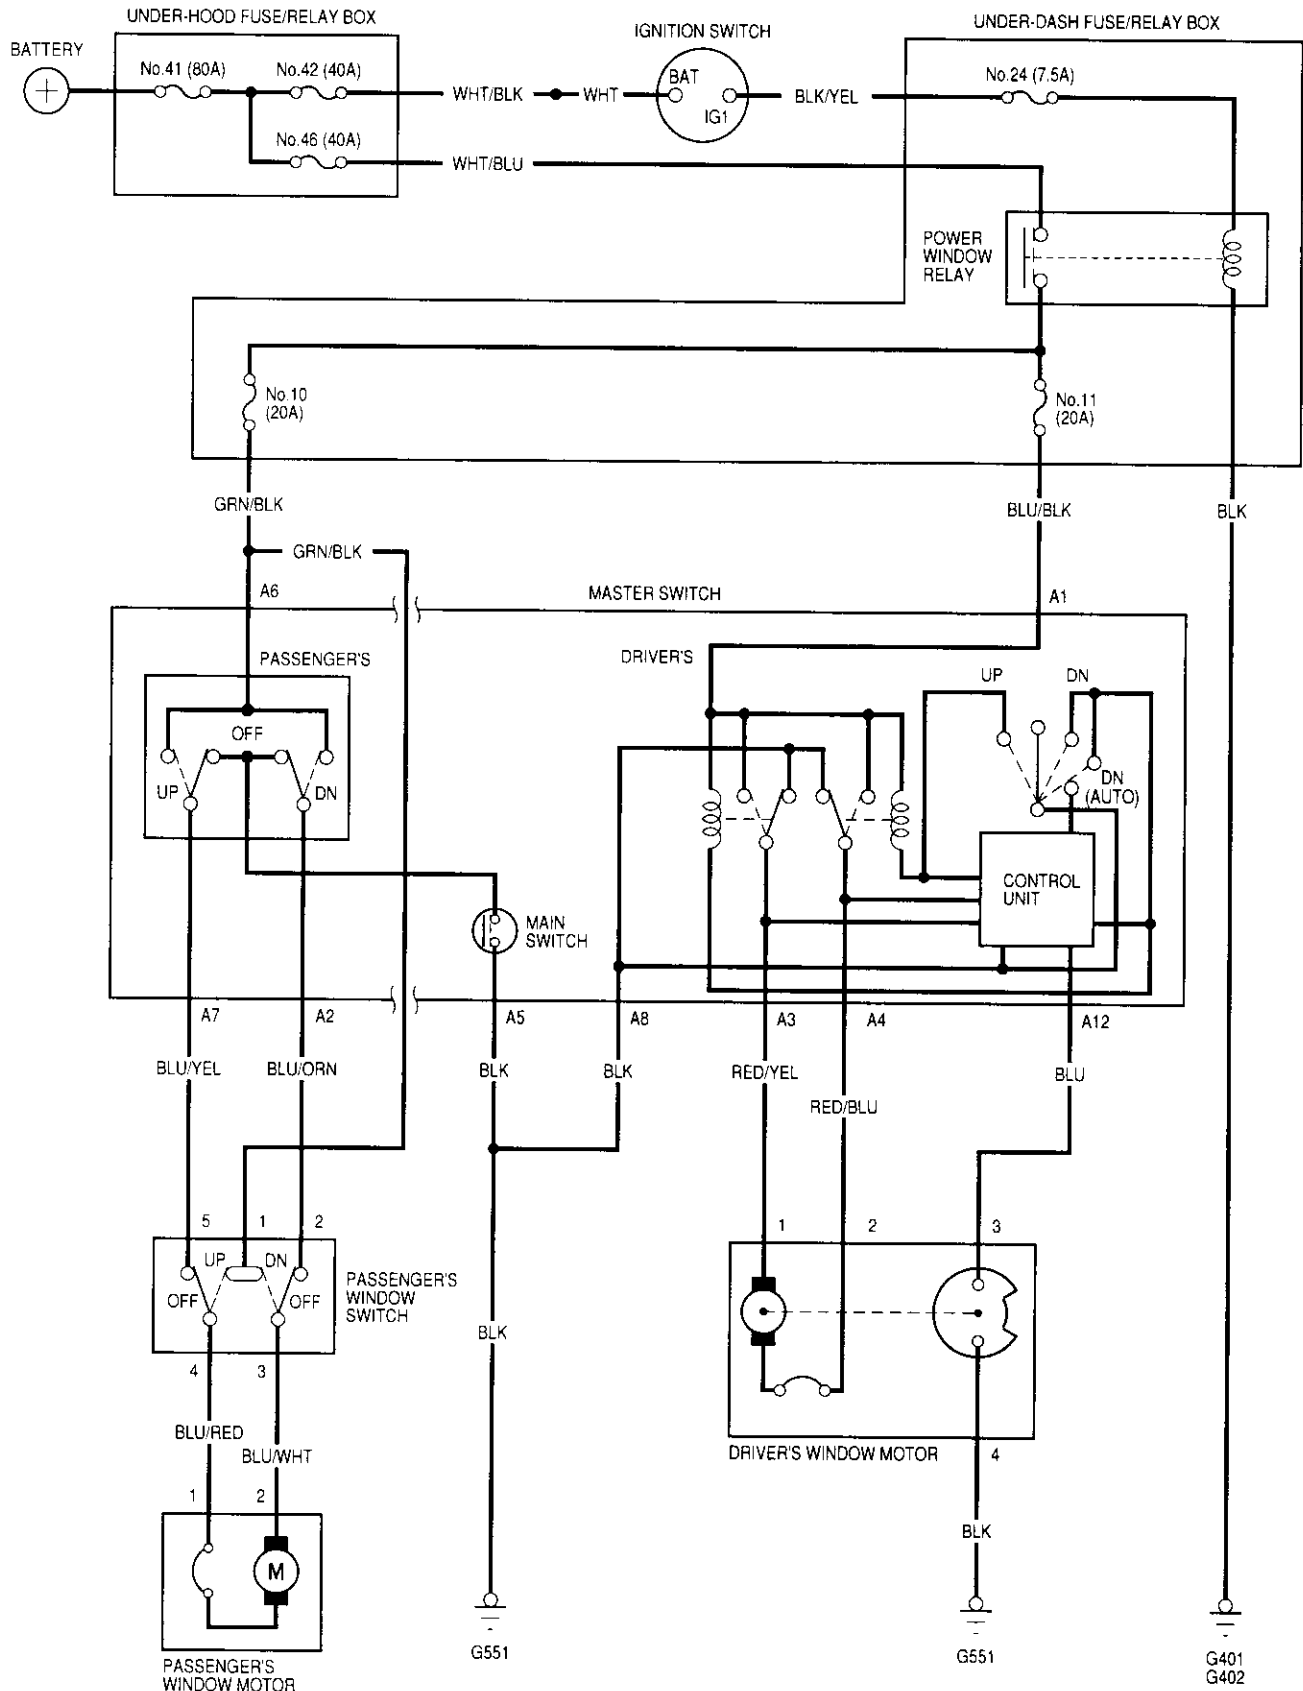




Circuit Diagram (Sedan)

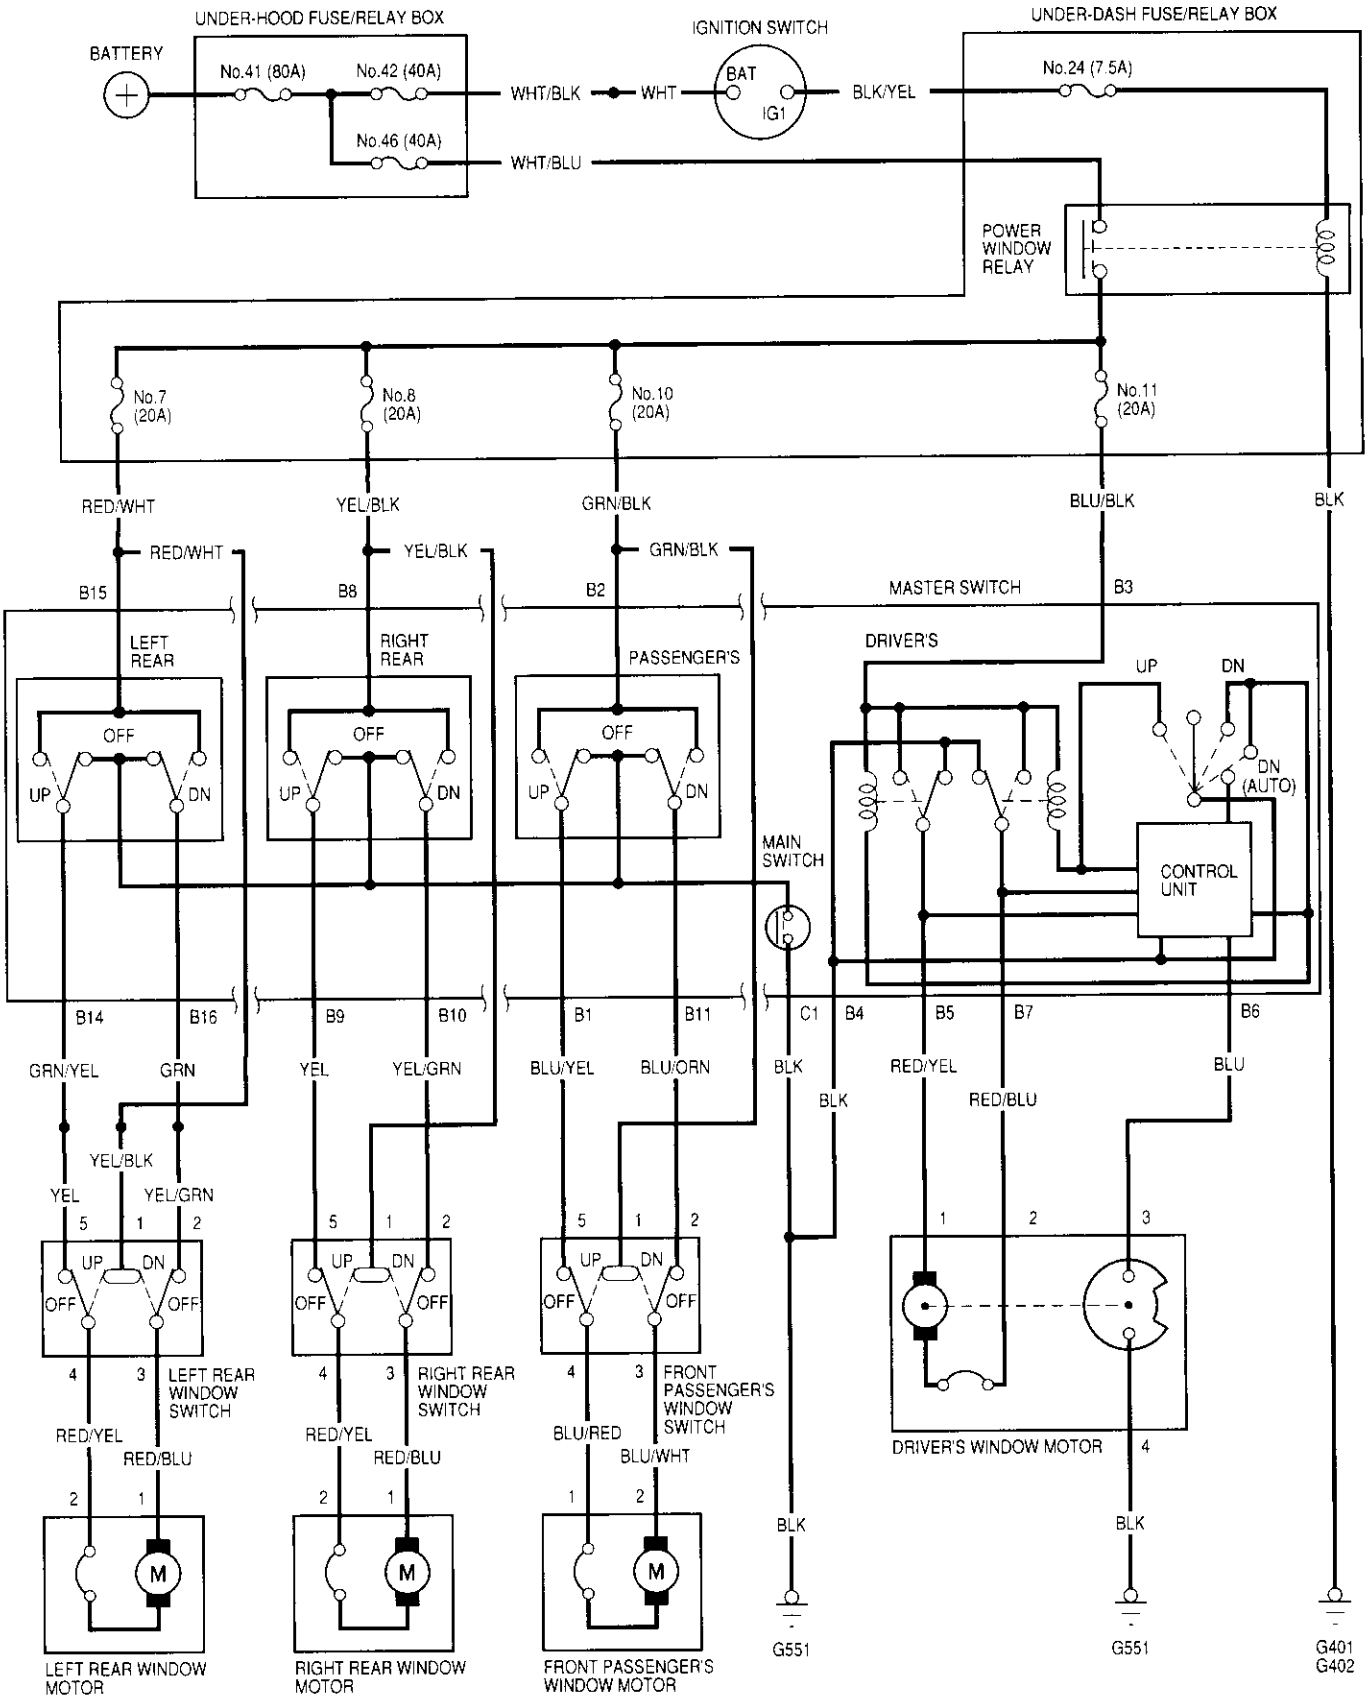

Power Windows

Master Switch Test (Coupe/Hatchback)

1. Remove the master switch from the driver's door panel (see page 23-196).
2. Disconnect the 12P connector from the master switch.

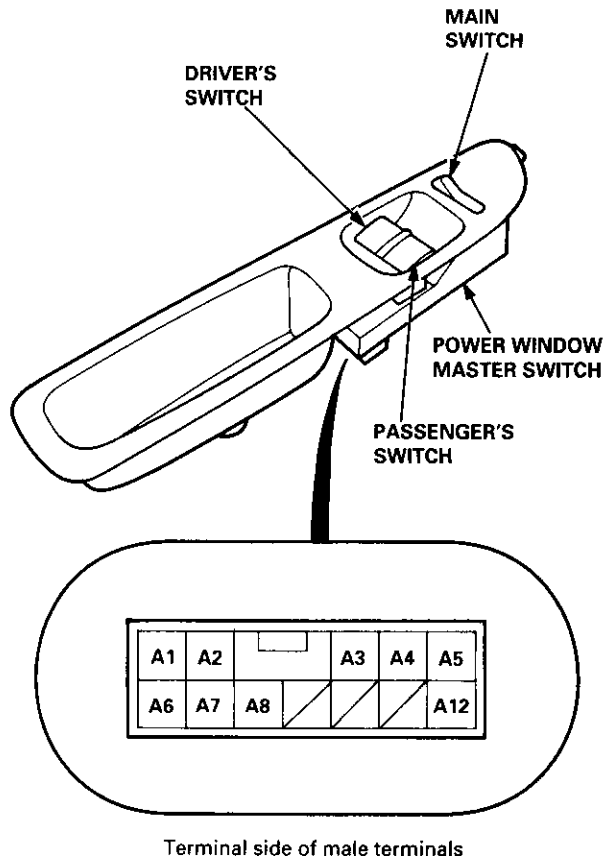

3. Check for continuity between the terminals in each switch position according to the table.

Driver's Switch:

The driver's switch is combined with the control unit so you cannot isolate the switch to test it. Instead, run the master switch input test procedures at terminals A1, A3, A4, A8 and A12 on page 23-196. If the tests are normal, the driver's switch must be faulty.


Passenger's Switch:

Terminal		A2	A5	A6	A7
Position	Main Switch				
OFF	ON	○—○			○
	OFF	○			○
UP	ON	○—○		○—○	
	OFF			○—○	
DOWN	ON	○—○		○—○	
	OFF	○	○—○		○



Master Switch Test (Sedan)

1. Remove the armrest from the driver's door panel (see page 23-198).
2. Disconnect the 16P and 1P connectors from the master switch.

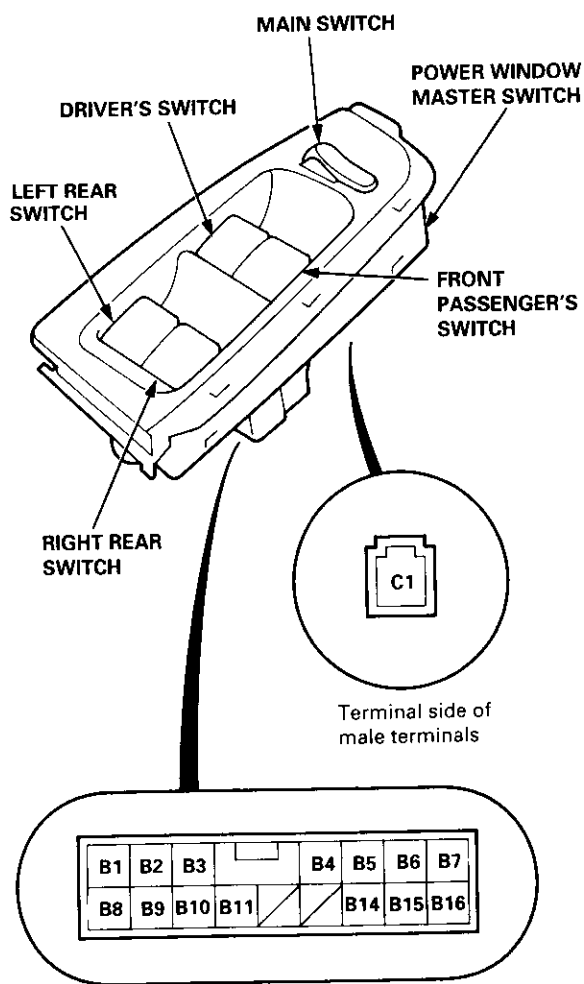

3. Check for continuity between the terminals in each switch position according to the tables.

Driver's Switch:

The driver's switch is combined with the control unit so you cannot isolate the switch to test it. Instead, run the master switch input test procedures at terminals B3, B4, B5, B6 and B7 on page 23-198. If the tests are normal, the driver's switch must be faulty.

Front Passenger's Switch:

Position	Terminal		B1	B2	B11	C1
		Main Switch				
OFF	ON		○		○	○
	OFF		○		○	
UP	ON		○	○		○
	OFF		○	○		
DOWN	ON		○			○
	OFF			○	○	

Left Rear Switch:

Position	Terminal		B14	B15	B16	C1
		Main Switch				
OFF	ON		○		○	○
	OFF		○		○	
UP	ON		○	○		○
	OFF		○	○		
DOWN	ON			○	○	○
	OFF			○	○	

Right Rear Switch:


Position	Terminal		B8	B9	B10	C1
		Main Switch				
OFF	ON			○	○	○
	OFF			○	○	
UP	ON		○	○		○
	OFF		○	○		
DOWN	ON		○		○	○
	OFF		○	○	○	

Power Windows

Master Switch Input Test (Coupe/Hatchback)

NOTE: The control unit is built into the power window master switch, and only controls driver's door window operations.

1. Remove the driver's door panel, and disconnect the 12P connector from the master switch.
2. Inspect the connector and socket terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, make the following input tests at the connector.
 - If a test indicates a problem, find and correct the cause, then recheck the system.
 - If all the input tests prove OK, the power window master switch must be faulty; replace it.

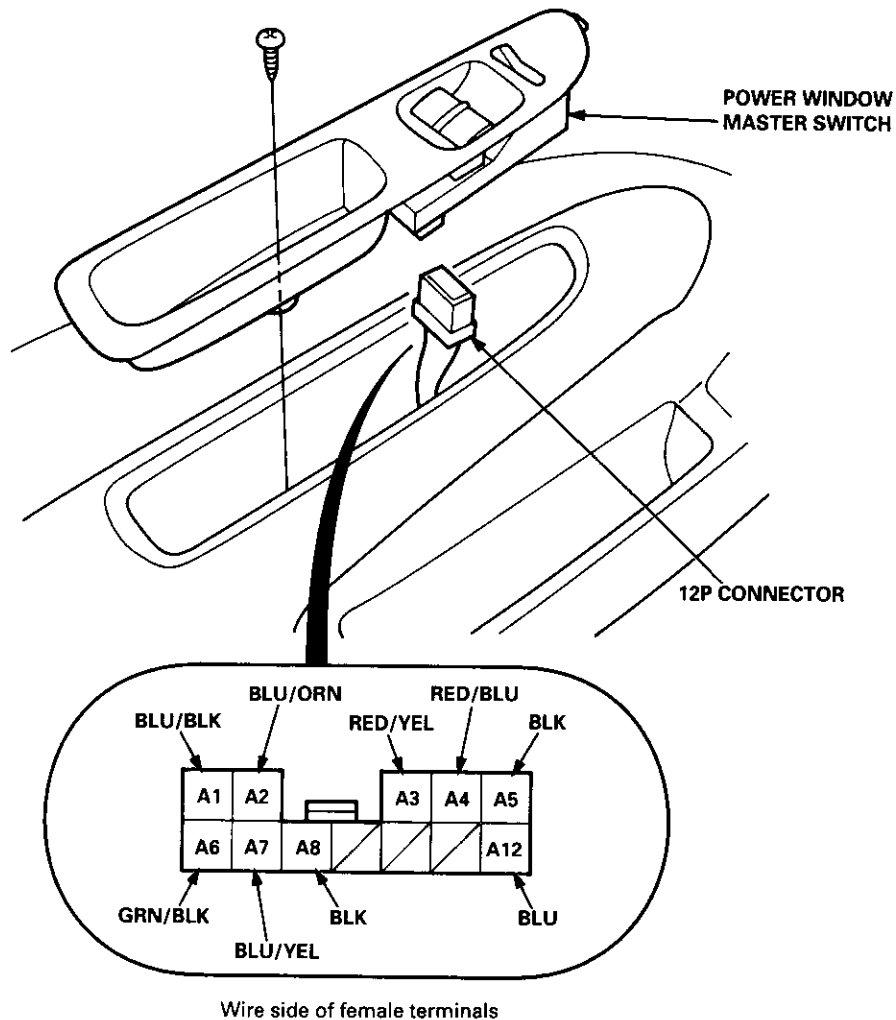




Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
A5	BLK	Under all conditions	Check for continuity to ground: There should be continuity.	• Poor ground (G551) • An open in the wire
A8				
A1	BLU/BLK	Ignition switch ON (II)	Check for voltage to ground: There should be battery voltage.	• Blown No. 10 or 11 (20 A) fuse in the under-dash fuse/relay box • Faulty power window relay • An open in the wire
A6	GRN/BLK			
A4	RED/BLU	Connect the BLU/BLK terminal to the RED/YEL terminal, and the RED/BLU terminal to the BLK terminal, then turn the ignition switch ON (II).	Check the driver's window motor: It should run (the window moves down).	• Faulty driver's window motor • An open in the wire
A3	RED/YEL			
A7	BLU/YEL	Connect the GRN/BLK terminal to the BLU/YEL terminal, and the BLU/ORN terminal to the BLK terminal, then turn the ignition switch ON (II).	Check the passenger's window motor: It should run (the window moves down).	• Faulty passenger's window motor • Faulty passenger's window switch • An open in the wire
A2	BLU/ORN			
A12	BLU	Connect the BLU/BLK terminal to the RED/YEL terminal, and the BLK terminal to the RED/BLU terminal, then turn the ignition switch ON (II).	Check for voltage between the BLU and BLK terminals: Approx. 6 V should be indicated as the driver's window motor runs.	• Faulty pulser • Faulty driver's window motor • An open in the wire
A8	BLK			

Power Windows

Master Switch Input Test (Sedan)

NOTE: The control unit is built into the power window master switch, and only controls driver's door window operations.

1. Remove the driver's armrest, and disconnect the 16P and 1P connectors from the master switch.
2. Inspect the connector and socket terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, make the following input tests at the connector.
 - If a test indicates a problem, find and correct the cause, then recheck the system.
 - If all the input tests prove OK, the power window maser switch must be faulty; replace it.

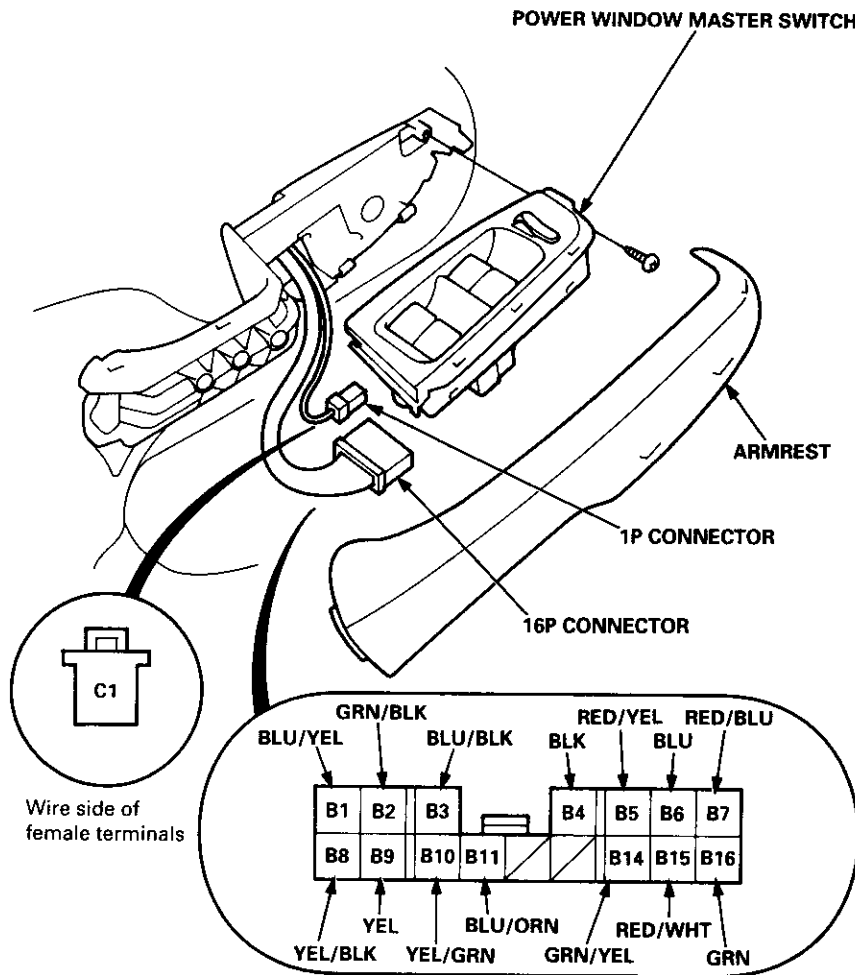




Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
B4	BLK	Under all conditions	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G551) • An open in the wire
C1				
B3	BLU/BLK	Ignition switch ON (II)	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 7, 8, 10 or 11 (20 A) fuse in the under-dash fuse/relay box • Faulty power window relay • An open in the wire
B2	GRN/BLK			
B8	YEL/BLK			
B15	RED/WHT			
B7	RED/BLU	Connect the BLU/BLK terminal to the RED/YEL terminal, and the RED/BLU terminal to the BLK terminal, then turn the ignition switch ON (II).	Check the driver's window motor: It should run (the window moves down).	<ul style="list-style-type: none"> • Faulty driver's window motor • An open in the wire
B5	RED/YEL			
B1	BLU/YEL	Connect the GRN/BLK terminal to the BLU/YEL terminal, and the BLU/ORN terminal to the BLK terminal, then turn the ignition switch ON (II).	Check the front passenger's window motor: It should run (the window moves down).	<ul style="list-style-type: none"> • Faulty front passenger's window motor • Faulty front passenger's window switch • An open in the wire
B11	BLU/ORN			
B9	YEL	Connect the YEL/BLK terminal to the YEL terminal, and the YEL/GRN terminal to the BLK terminal, then turn the ignition switch ON (II).	Check the right rear motor: It should run (the window moves down).	<ul style="list-style-type: none"> • Faulty right rear window motor • Faulty right window switch • An open in the wire
B10	YEL/GRN			
B14	GRN/YEL	Connect the RED/WHT terminal to the GRN/YEL terminal, and the GRN terminal to the BLK terminal, then turn the ignition switch ON (II).	Check the left rear motor: It should run (the window moves down).	<ul style="list-style-type: none"> • Faulty left rear window motor • Faulty left rear window switch • An open in the wire
B16	GRN			
B6	BLU	Connect the BLU/BLK terminal to the RED/YEL terminal, and the BLK terminal to the RED/BLU terminal, then turn the ignition switch ON (II).	Check for voltage between the BLU and BLK terminals: Approx. 6 V should be indicated as the driver's window motor runs.	<ul style="list-style-type: none"> • Faulty pulser • Faulty driver's window motor • An open in the wire
B4	BLK			

Power Windows

Passenger's Window Switch Test

Coupe/Hatchback:


1. Remove the armrest pocket from the door panel (see section 20).

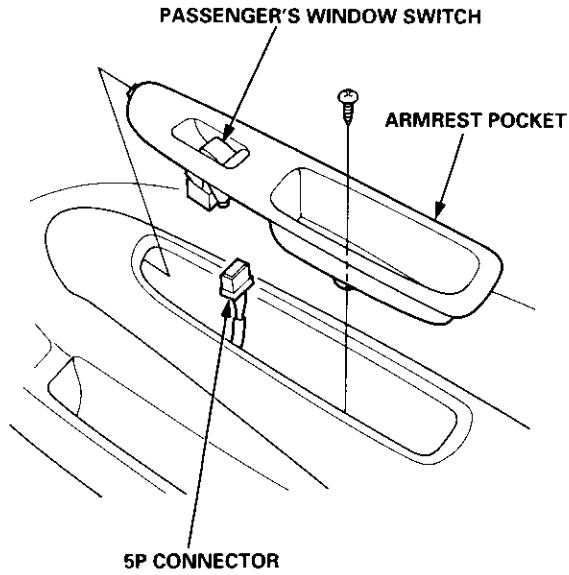

2. Disconnect the 5P connector from the passenger's window switch.


Sedan:

1. Remove the armrest (see section 20).

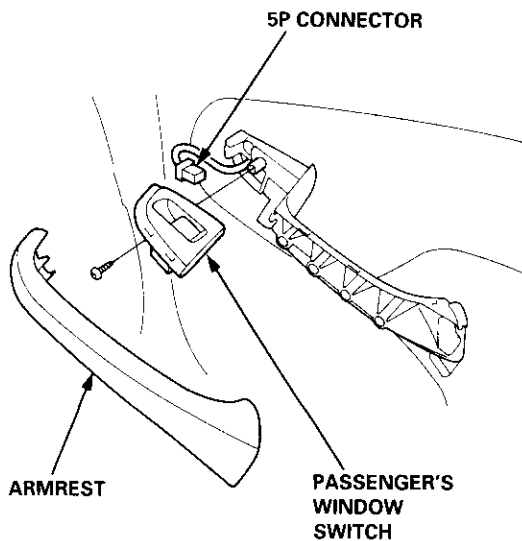

2. Disconnect the 5P connector, then remove the mounting screw from the passenger's switch.

Switch side of 5P terminal:



Terminal side of male terminals

3. Check for continuity between the terminals in each switch position according to the table.


Terminal Position	1	2	3	4	5
UP	○	○	○	○	
OFF		○	○	○	○
DOWN	○		○	○	○



Driver's Window Motor Test

Motor Test:

1. Remove the driver's door panel (see section 20).

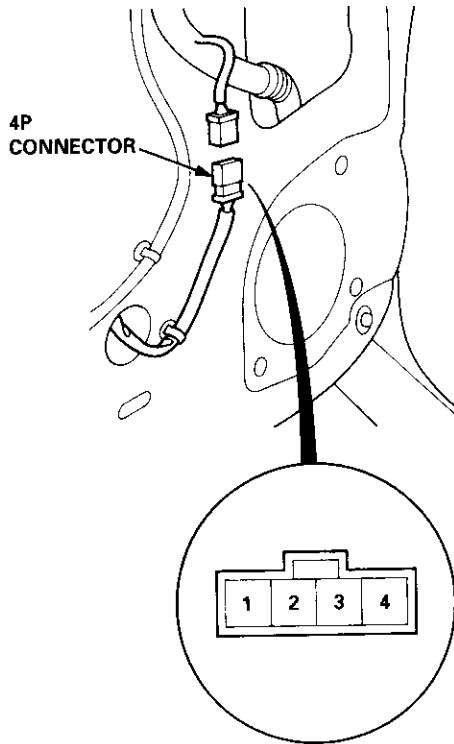

Terminal side of male terminals

2. Disconnect the 4P connector from the motor.
3. Test the motor in each direction by connecting battery power and ground according to the table.

Terminal	1	2
Direction		
UP	⊖	⊕
DOWN	⊕	⊖

CAUTION: When the motor stops running, disconnect one lead immediately.

4. If the motor does not run or fails to run smoothly, replace it.

Pulser Test:


5. Connect the test leads of an analog ohmmeter to the No. 3 and No. 4 terminals.
6. Run the motor by connecting power and ground to the No. 1 and No. 2 terminals. The ohmmeter needle should move back and forth alternately.

Power Windows

Passenger's Window Motor Test

Front:

1. Remove the passenger's door panel (see section 20).
2. Disconnect the 2P connector from the window motor.

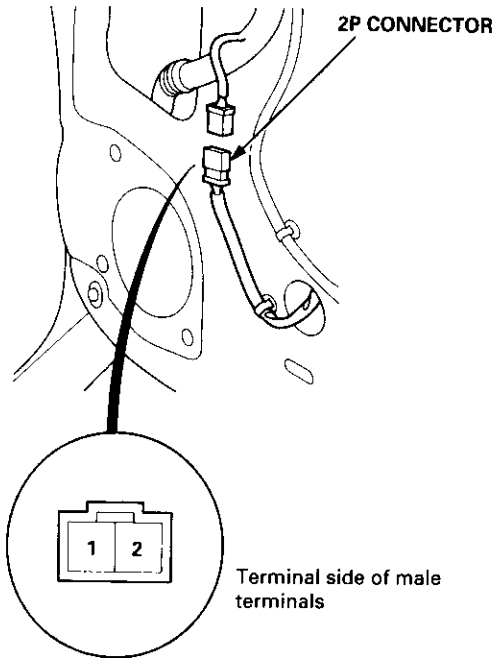

3. Check window motor operation by connecting power and ground according to the table.

Terminal	1	2
Direction		
UP	⊕	⊖
DOWN	⊖	⊕


CAUTION: When the motor stops running, disconnect one lead immediately.

4. If the motor does not run or fails to run smoothly, replace it.

Rear:

1. Remove the passenger's door panel (see section 20).
2. Disconnect the 2P connector from the window motor.

NOTE: The illustration shows the right rear window motor; the left rear window motor is symmetrical.

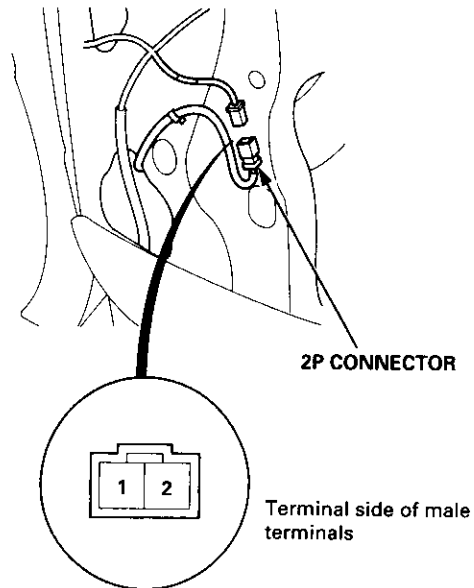

3. Check window motor operation by connecting power and ground according to the table.


Terminal	1	2
Direction		
UP	⊖	⊕
DOWN	⊕	⊖

CAUTION: When the motor stops running, disconnect one lead immediately.

4. If the motor does not run or fails to run smoothly, replace it.




Component Location Index

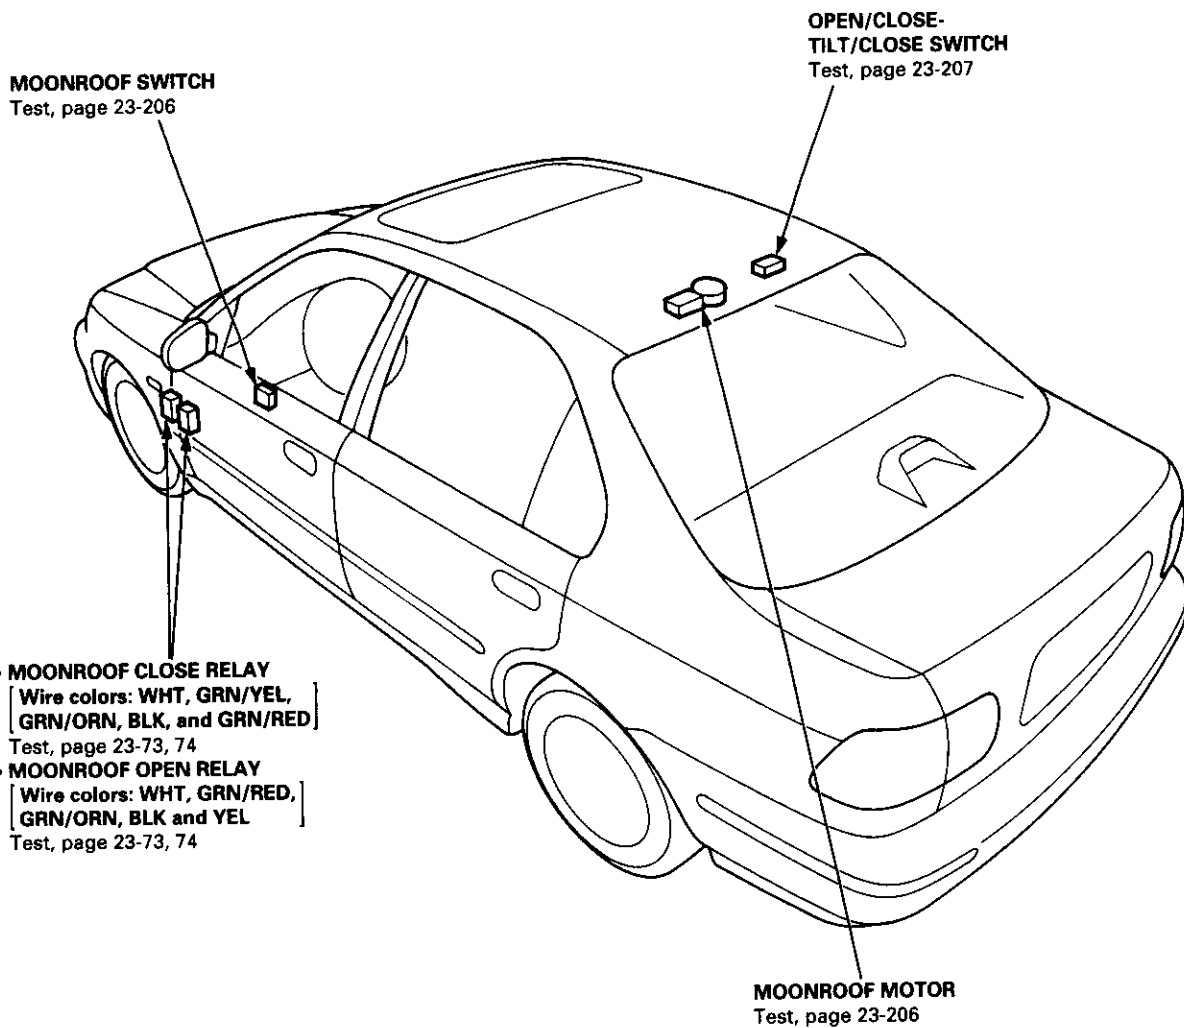

Moonroof

Circuit Diagram

*1 : 96, 97 models
 *2 : 98 model

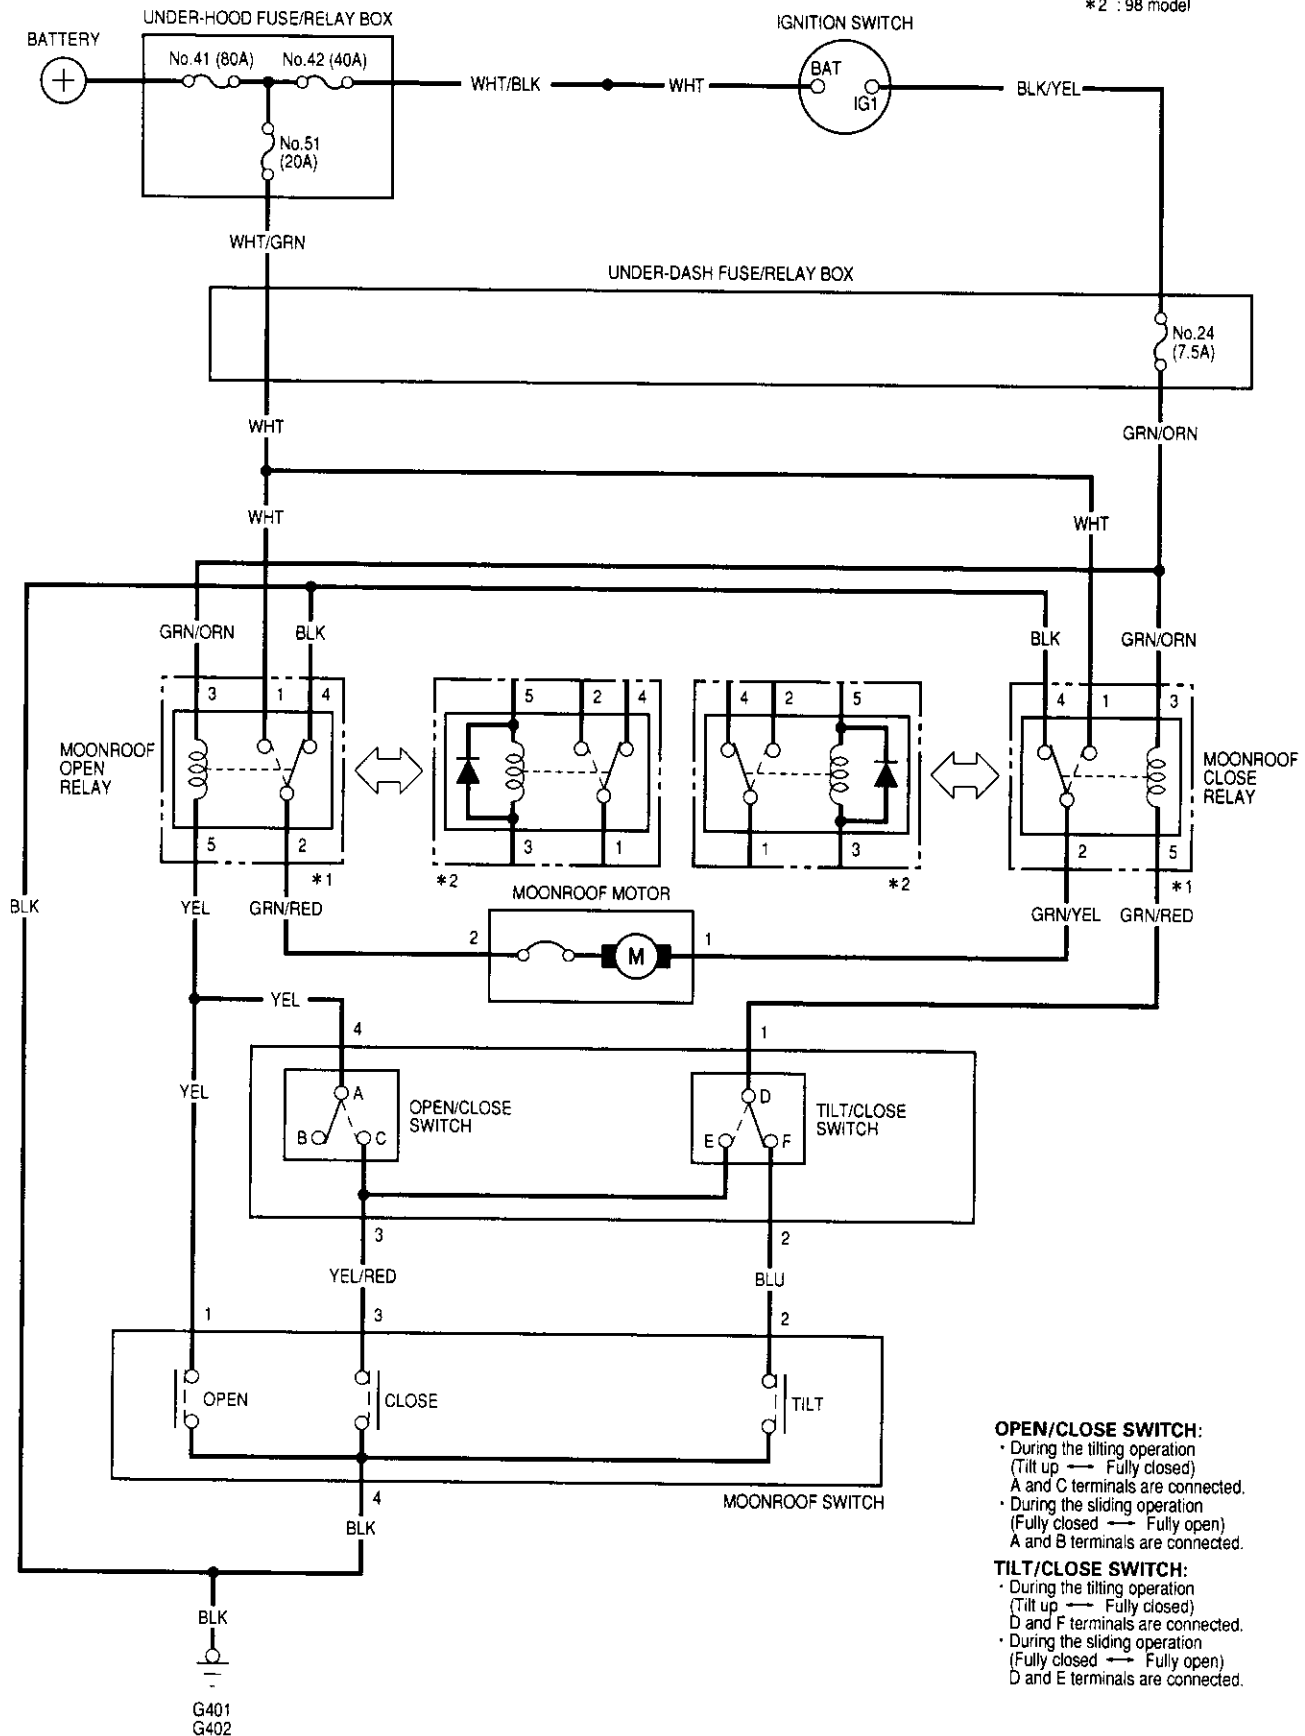

OPEN/CLOSE SWITCH:
 • During the tilting operation (Tilt up → Fully closed) A and C terminals are connected.
 • During the sliding operation (Fully closed → Fully open) A and B terminals are connected.

TILT/CLOSE SWITCH:
 • During the tilting operation (Tilt up → Fully closed) D and F terminals are connected.
 • During the sliding operation (Fully closed → Fully open) D and E terminals are connected.




Function Test

CAUTION: Be careful not to damage the moonroof switch or the driver's dashboard lower cover when prying the switch out.

NOTE: Check the No. 51 (20 A) fuse in the under-hood fuse/relay box and No. 24 (7.5 A) fuse in the under-dash fuse/relay box, before testing.

1. Pry the switch out of the driver's dashboard lower cover.
2. Disconnect the 4P connector from the switch.

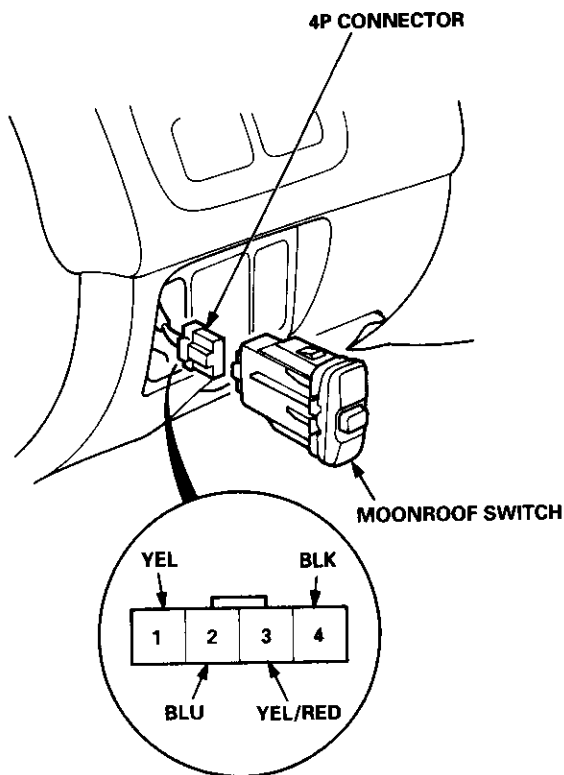

Wire side of female terminals

3. Connect the No. 1 (YEL) terminal to body ground with a jumper wire, then turn the ignition switch ON (II). The moonroof should open.
 - If the moonroof opens, check the switch.
 - If the moonroof does not open, check for:
 - an open in the YEL wire.
 - faulty moonroof open relay.
 - faulty moonroof close relay.
 - poor ground (G401, G402).
4. Connect the No. 3 (YEL/RED) terminal to body ground with a jumper wire, then turn the ignition switch ON (II). The moonroof should close.
 - If the moonroof closes, check the switch.
 - If the moonroof does not close, check for:
 - an open in the YEL/RED or GRN/RED wire.
 - faulty moonroof close relay.
 - faulty moonroof open relay.
 - faulty tilt/close switch.
5. Connect the No. 2 (BLU) terminal to body ground with a jumper wire, then turn the ignition switch ON (II). The moonroof should tilt up.
 - If the moonroof tilts up, check the switch.
 - If the moonroof does not tilt up, check for:
 - an open in the BLU wire.
 - faulty tilt/close switch.
6. Connect the No. 3 (YEL/RED) terminal to body ground with a jumper wire, then turn the ignition switch ON (II). The moonroof should tilt down.



If the moonroof does not tilt down, the open/close relay must be faulty.
7. Check for continuity to body ground on the No. 4 (BLK) terminal. There should be continuity.
 - If there is continuity, check the switch.
 - If there is no continuity, check for:
 - an open in the BLK wire.
 - poor ground (G401, G402).

Moonroof

Switch Test

- Carefully remove the switch from the driver's dashboard lower cover (see page 23-205).
- Check for continuity between the terminals in each switch position according to the table.


Terminal	1	2	3	4
Position				
OFF				
OPEN	○	—	—	○
CLOSE			○	○
TILT		○	—	○

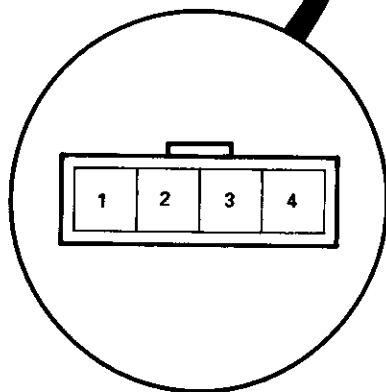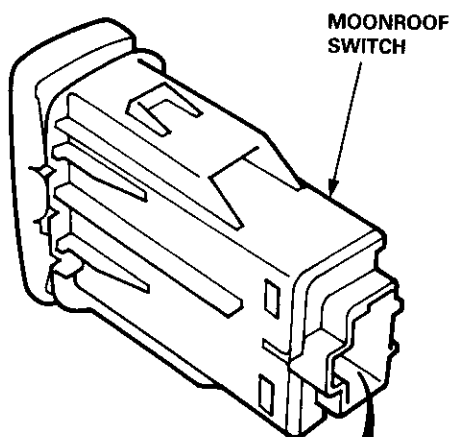

Motor Test

- Remove the headliner (see section 20).
- Disconnect the 2P connector from the moonroof motor.

Terminal side of male terminals

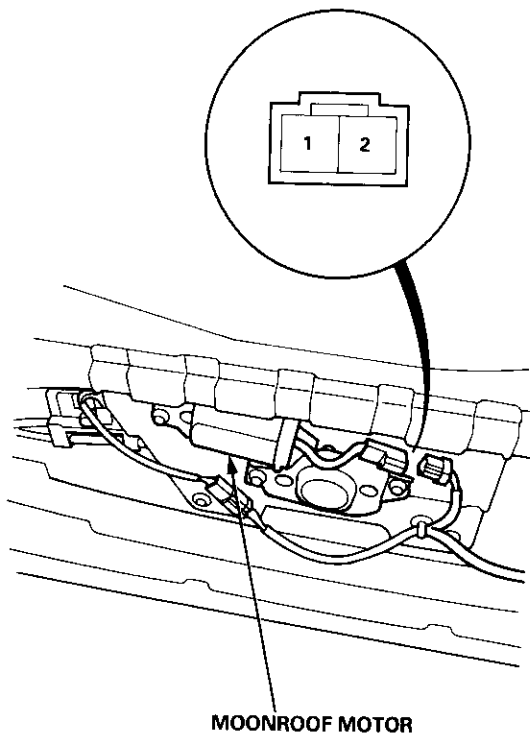

- Check the motor by connecting power and ground according to the table.

Terminal	1	2
Position		
OPEN	⊖	⊕
CLOSE	⊕	⊖

- If the motor does not run, replace it (see section 20).

NOTE: See Closing Force Check in section 20 for motor clutch test.




Open/Close-Tilt/Close Switch Test

1. Remove the headliner (see section 20).
2. Disconnect the 2P and 4P connectors from the moonroof motor and the switch.
3. Check for continuity between the terminals in each switch position according to the table.

Terminal	1	2	3	4
Position				
CLOSE ↔ TILT	○	○	○	○
CLOSE ↔ OPEN	○		○	


4. If there is no continuity, adjust or replace the switch.

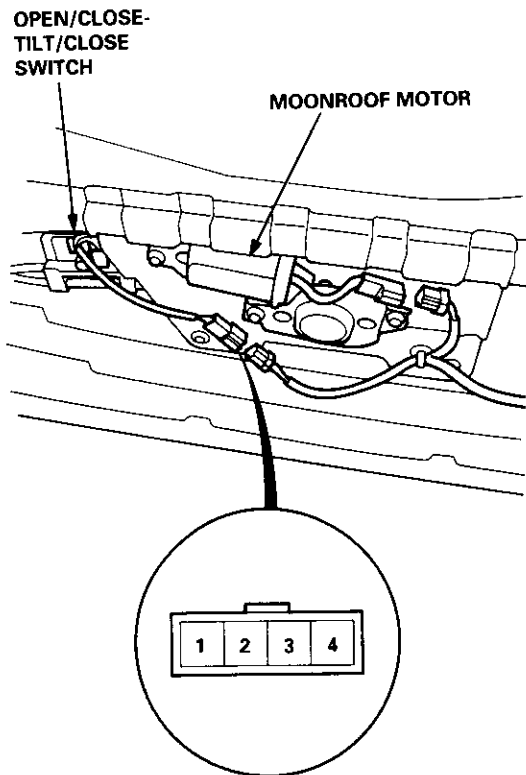

Terminal side of male terminals


Cruise Control

Component Location Index

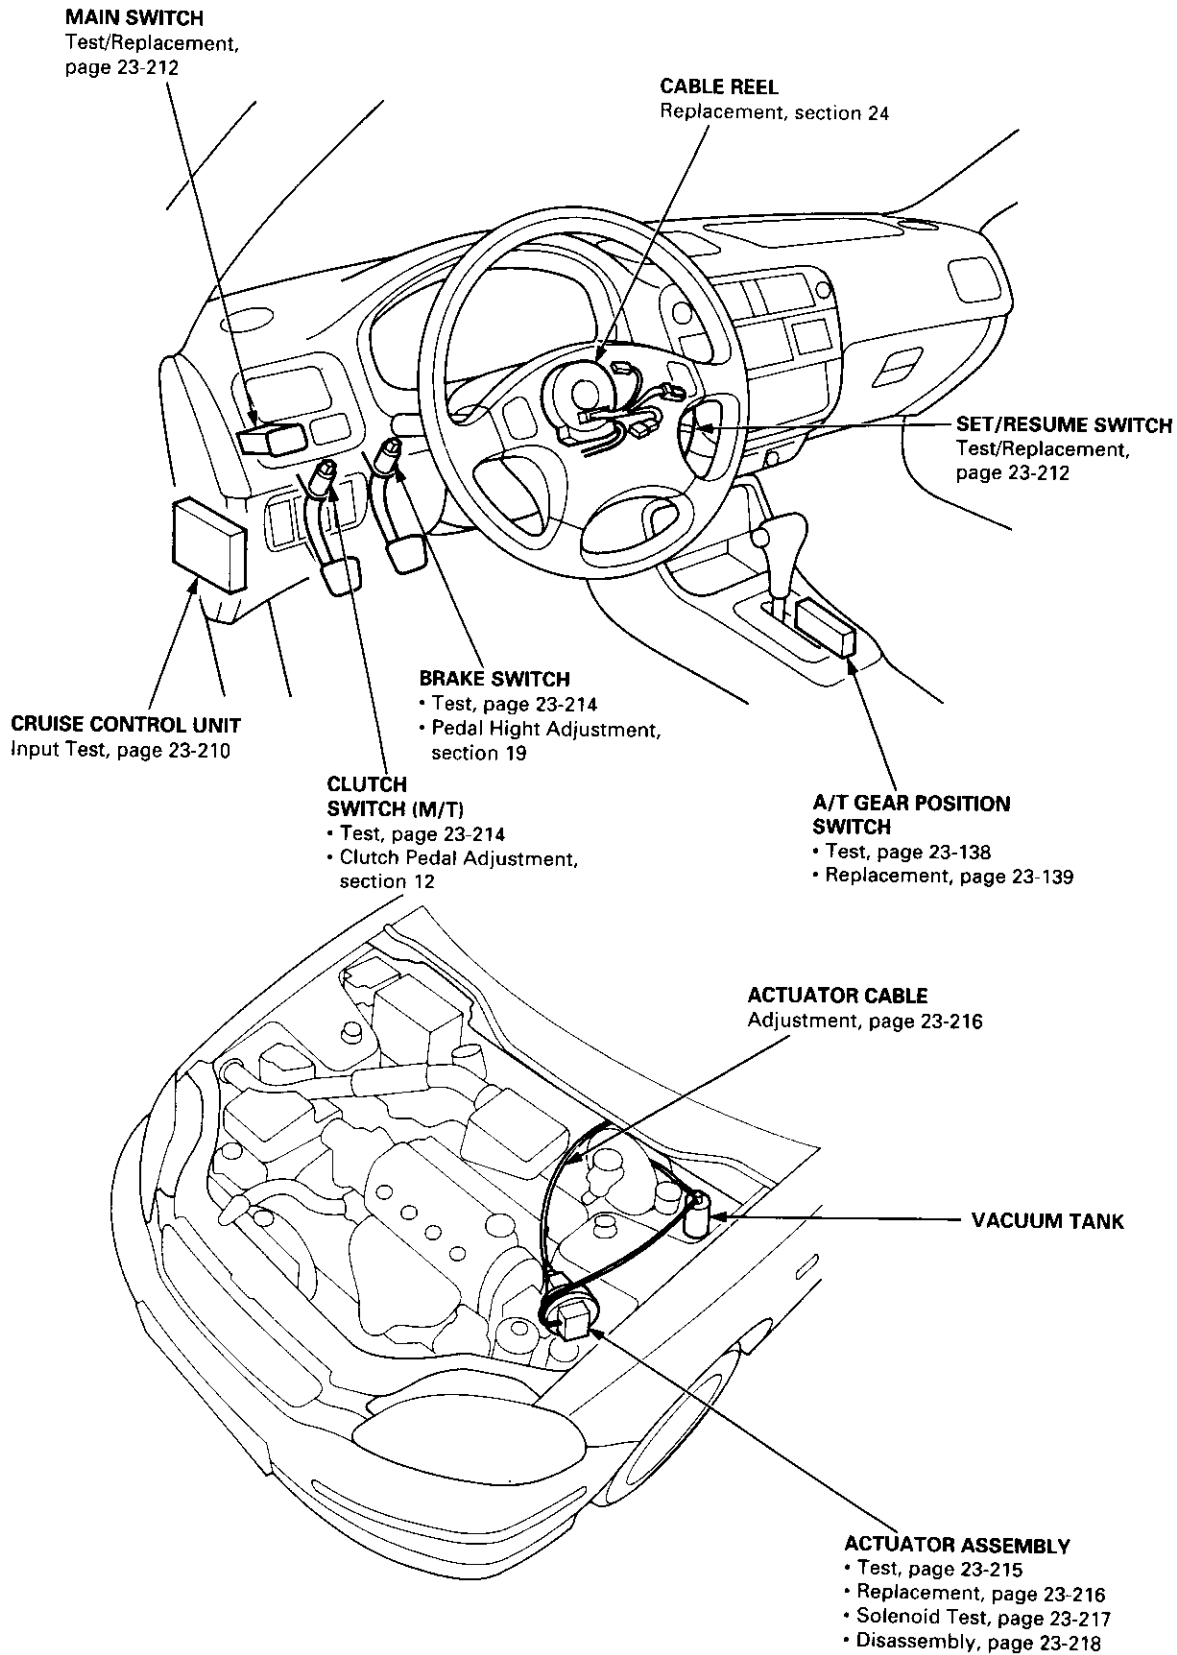



Circuit Diagram

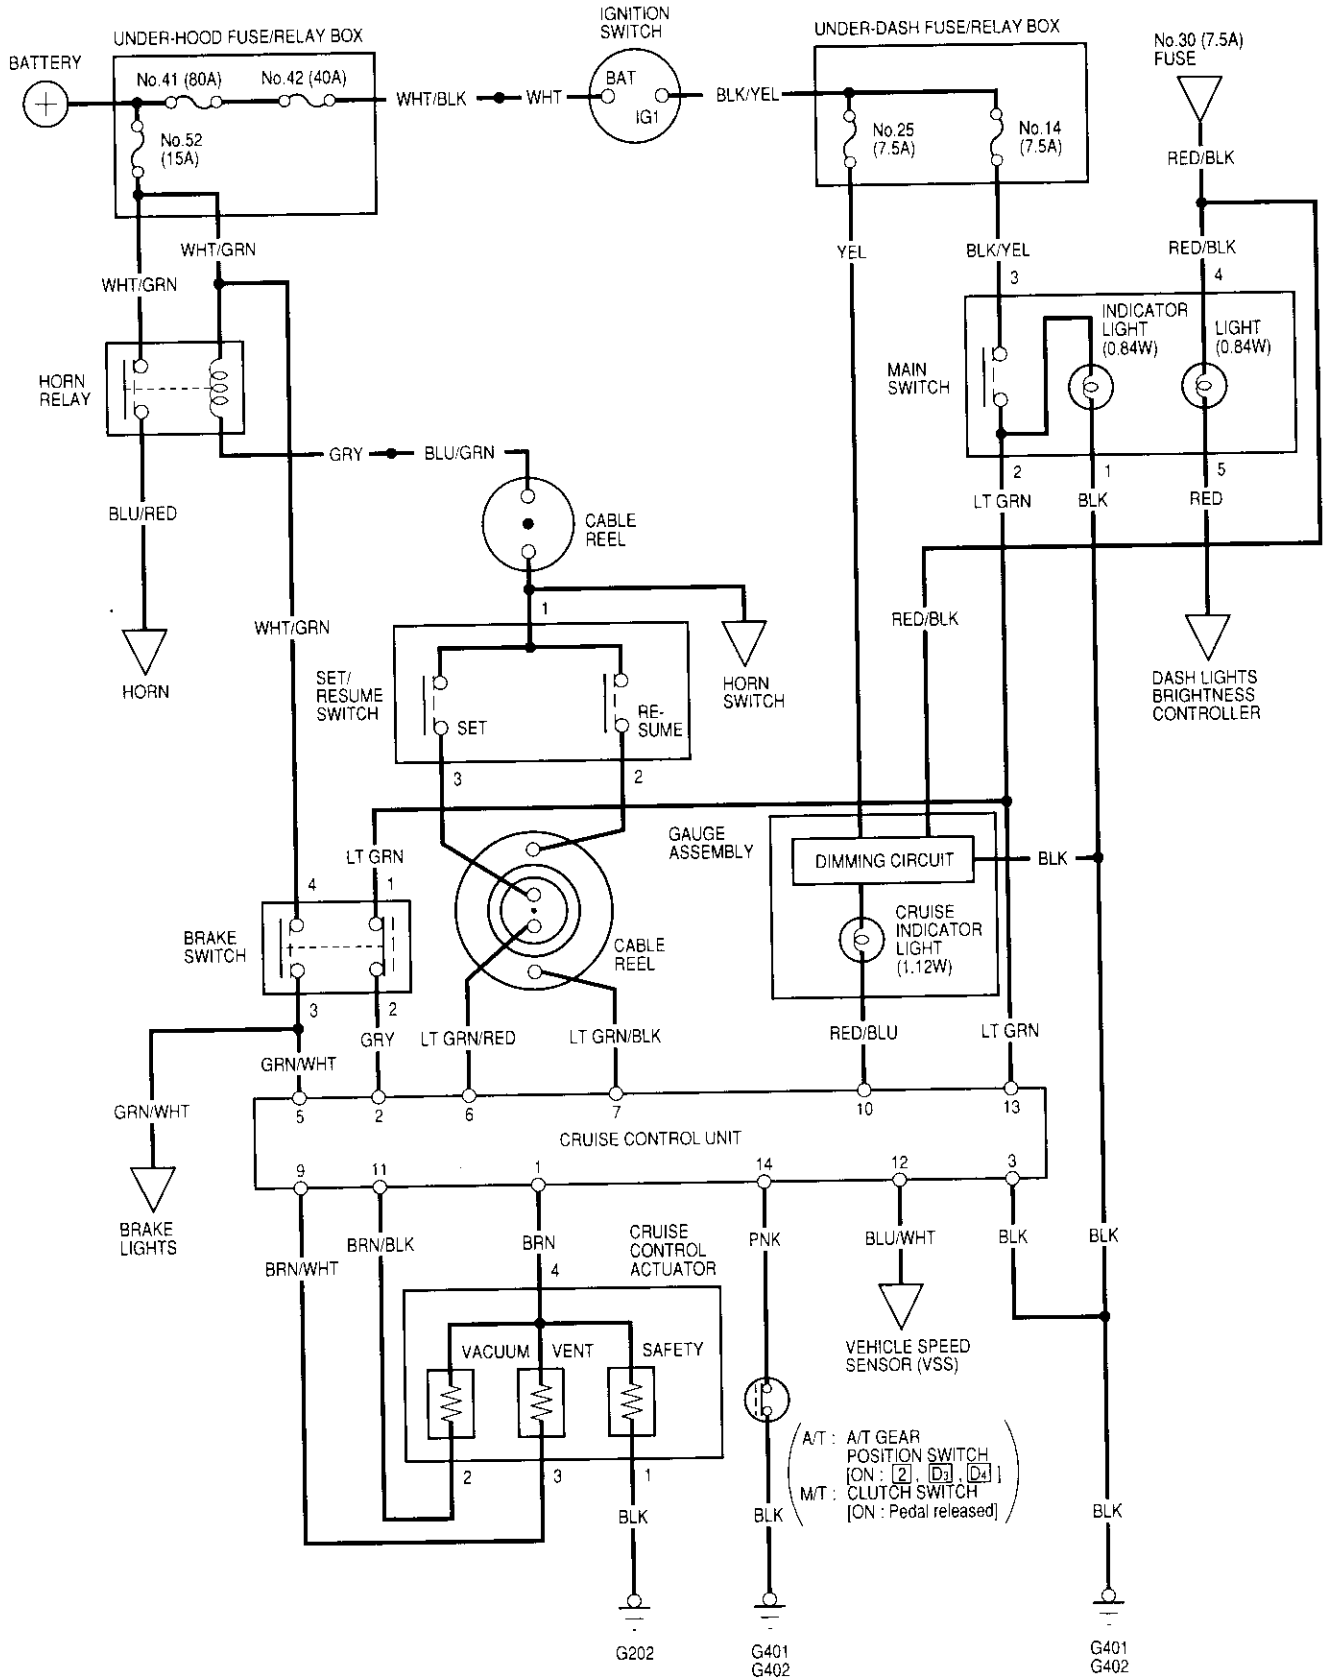

Cruise Control

Control Unit Input Test



SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section (24) before performing repairs or service.

1. Remove the driver's dashboard lower cover and knee bolster (see section 20).
2. Disconnect the 14P connector from the control unit.
3. Inspect the connector and socket terminals to be sure they are all making good contact.

If the terminals are bent, loose, or corroded, repair them as necessary, and recheck the system.

If the terminals look OK, make the following input tests at the connector.

- If any test indicates a problem, find and correct the cause, then recheck the system.
- If all the input tests prove OK, the control unit must be faulty; replace it.

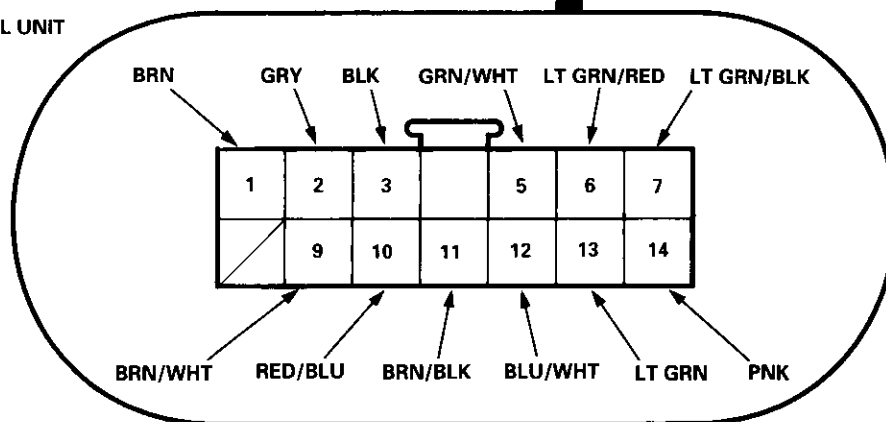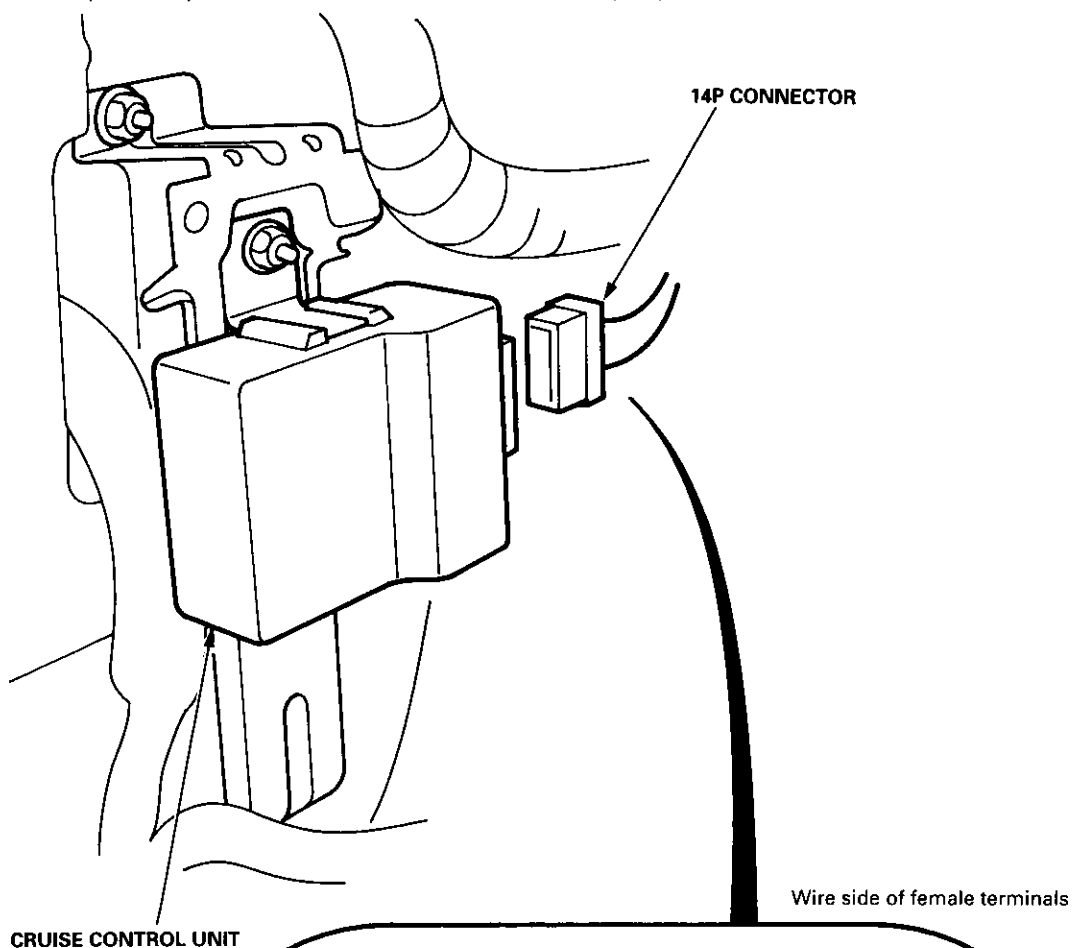




Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
9	BRN/WHT	Under all conditions	Check for resistance to ground: There should be 80 – 120 Ω.	<ul style="list-style-type: none"> • Faulty actuator solenoid • Poor ground (G202) • An open in the wire
1	BRN	Under all conditions	Check for resistance to ground: There should be 40 – 60 Ω.	
11	BRN/BLK	Under all conditions	Check for resistance to ground: There should be 70 – 110 Ω.	
2	GRY	Ignition switch ON (III), main switch ON and brake pedal pushed, then released	Check for voltage to ground: There should be 0 V with the pedal pushed and battery voltage with the pedal released.	<ul style="list-style-type: none"> • Faulty brake switch • An open in the wire
3	BLK	Under all conditions	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire
5	GRN/WHT	Brake pedal pushed, then released	Check for voltage to ground: There should be battery voltage with the pedal pushed, and 0 V with the pedal released.	<ul style="list-style-type: none"> • Blown No. 52 (15 A) fuse in the under-hood fuse/relay box • Faulty brake switch • An open in the wire
6	LT GRN/ RED	Set button pushed	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 52 (15 A) fuse in the under-hood fuse/relay box • Faulty horn relay • Faulty set/resume switch • Faulty cable reel • An open in the wire
7	LT GRN/ BLK	Resume button pushed		
10	RED/BLU	Ignition switch ON (II)	Attach to ground: Cruise indicator light in the gauge assembly should come on.	<ul style="list-style-type: none"> • Blown bulb • Blown No. 25 (7.5 A) fuse in the under-dash fuse/relay box • Faulty dimming circuit in the gauge assembly • An open in the wire
12	BLU/WHT	Ignition switch ON (II) and main switch ON; raise the front of the car, and rotate one wheel slowly with the other wheel blocked.	Check for voltage between the BLU/WHT ⊕ and BLK ⊖ terminals: There should be 0 – 5 V or more –0 – 5 V or more repeatedly.	<ul style="list-style-type: none"> • Faulty vehicle speed sensor (VSS) • An open in the wire
13	LT GRN	Ignition switch ON (II) and main switch ON	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 14 (7.5 A) fuse in the under-dash fuse/relay box • Faulty main switch • An open in the wire
14	PNK	A/T: Shift lever in 2 , D₃ or D₄ M/T: Clutch pedal released	Check for continuity to ground: There should be continuity. NOTE: There should be no conti- nuity when the clutch pedal is depressed or when the shift lever is in other positions.	<ul style="list-style-type: none"> • Faulty A/T gear position switch • Faulty or misadjusted clutch switch (M/T) • Poor ground (G401, G402) • An open in the wire

Cruise Control

Main Switch Test/Replacement

1. Remove the driver's dashboard lower cover (see section 20).
2. Carefully push out the switch from behind the dashboard.
3. Disconnect the connector from the switch.

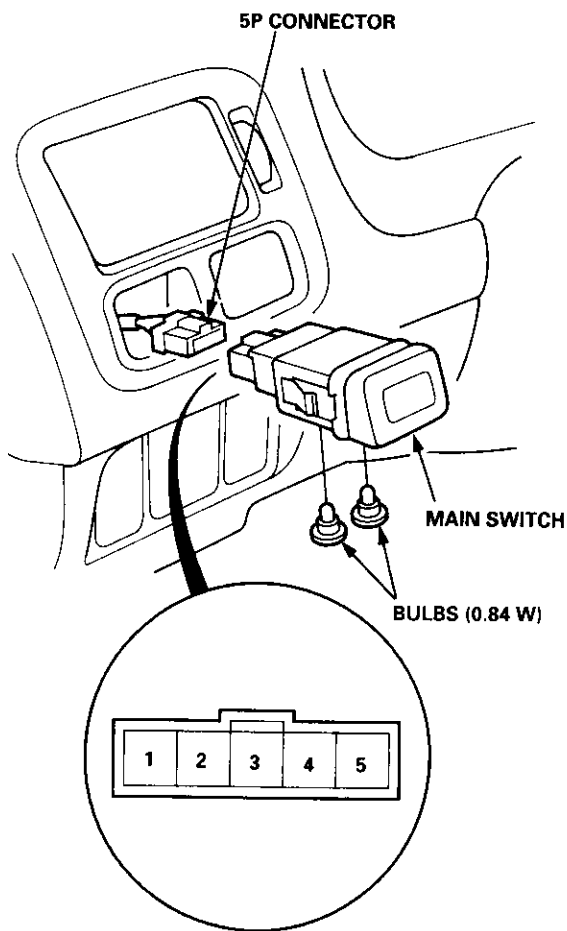


4. Check for continuity between the terminals in each switch position according to the table.

Terminal	1	2	3	4	5
Position					
OFF	○	⊗	○	○	⊗
ON	○	⊗	○	○	⊗

If there is no continuity, replace the switch.

Set/Resume Switch Test/Replacement

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait at least three minutes.
2. Disconnect the driver's airbag connector (see section 24).
3. Remove the dashboard driver's lower cover (see section 20).
4. Disconnect the cable reel sub-harness 3P connector from the main wire harness.

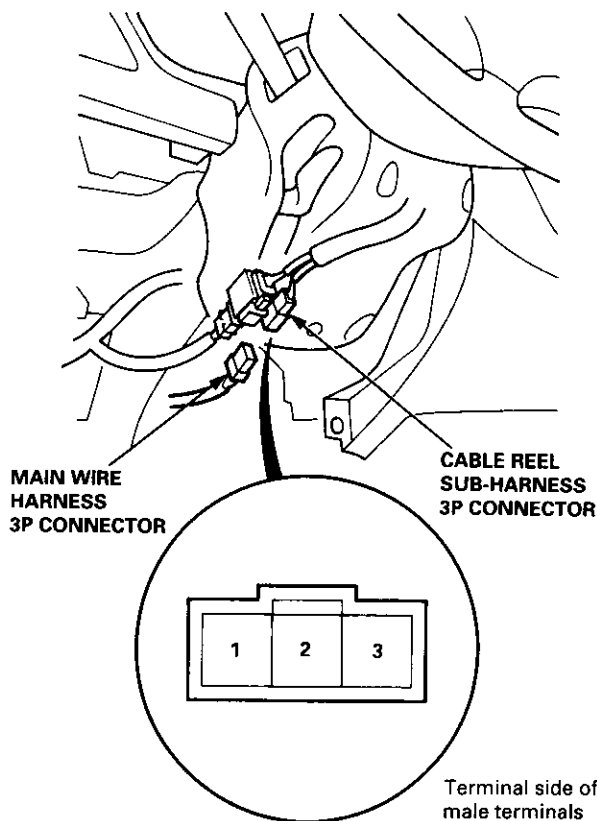


5. Check for continuity between the terminals of the cable reel sub-harness 3P connector in each switch position according to the table.

Terminal	1	2	3
Position			
SET (ON)	○	○	
RESUME (ON)		○	○

- If there is continuity, and it matches the table, the switch is OK.
- If there is no continuity in one or both positions, go to step 6.



- Remove the two screws, then remove the switch.

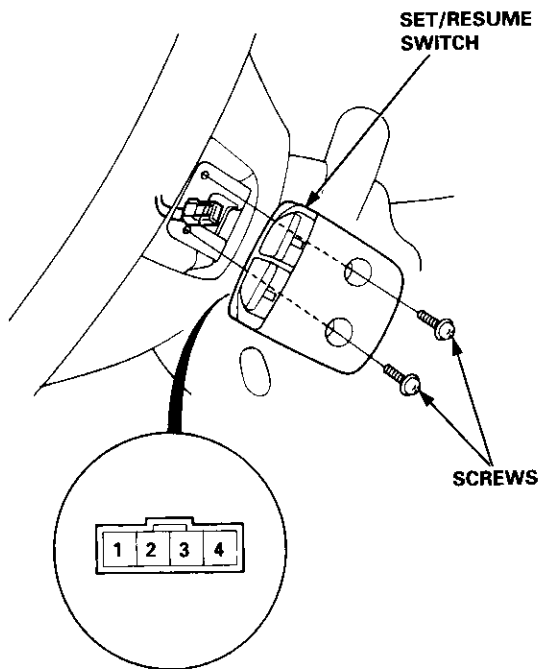

- Check for continuity between the terminals in switch position according to the table.

Terminal	1	2	3
Position			
SET (ON)	○	—	○
RESUME (ON)	○	○	


- If there is continuity, and it matches the table, replace the cable reel.
- If there is no continuity in one or both positions, replace the switch.

- If all tests prove OK, reconnect the cable reel and cable reel sub-harness connector, then reinstall the steering column covers.
- Reconnect the driver's airbag connector, and reinstall the access panel on the steering wheel.
- Reconnect the battery positive cable, then the negative cable.
- After connecting the airbag connectors, confirm proper system operation: Turn the ignition switch ON (II); the SRS indicator light should come on for about six seconds and then go off.

Cruise Control

Brake Switch Test

1. Disconnect the 4P connector from the switch.

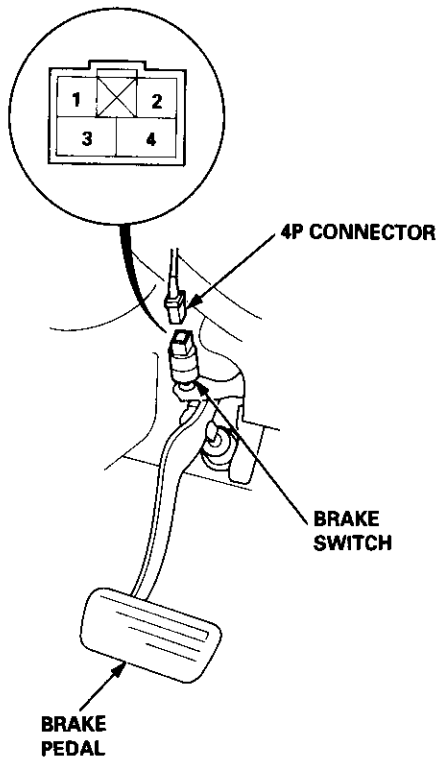


2. Check for continuity between the terminals according to the table.

Terminal	1	2	3	4
Brake pedal RELEASED	○	○		
DEPRESSED			○	○

3. If necessary, replace the switch or adjust pedal height (see section 19).

Clutch Switch Test (M/T)

1. Disconnect the 2P connector from the switch.

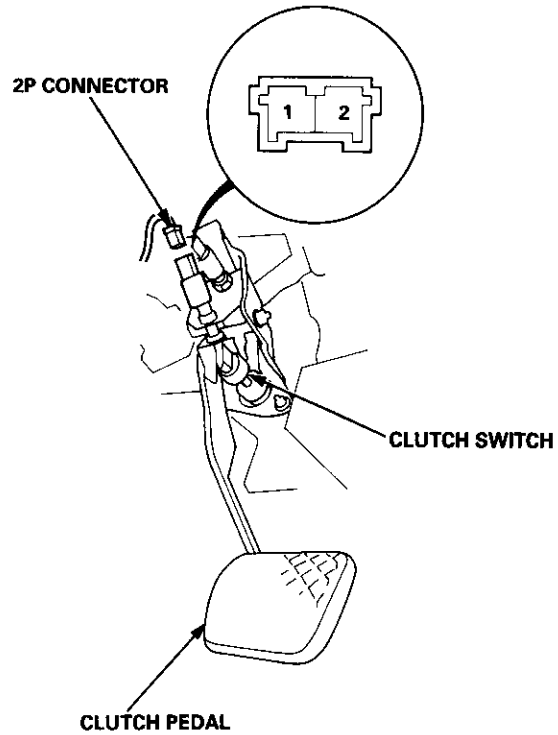

2. Check for continuity between the terminals according to the table.


Terminal	1	2
Clutch pedal RELEASED		
DEPRESSED	○	○

3. If necessary, replace the switch or adjust pedal height (see section 12).




Actuator Test


1. Disconnect the actuator cable from the actuator rod and the 4P connector.
2. Connect battery power to the No. 4 terminal and ground to the No. 1, No. 2 and No. 3 terminals.
3. Connect a vacuum pump to the vacuum hose. Then apply vacuum to the actuator.

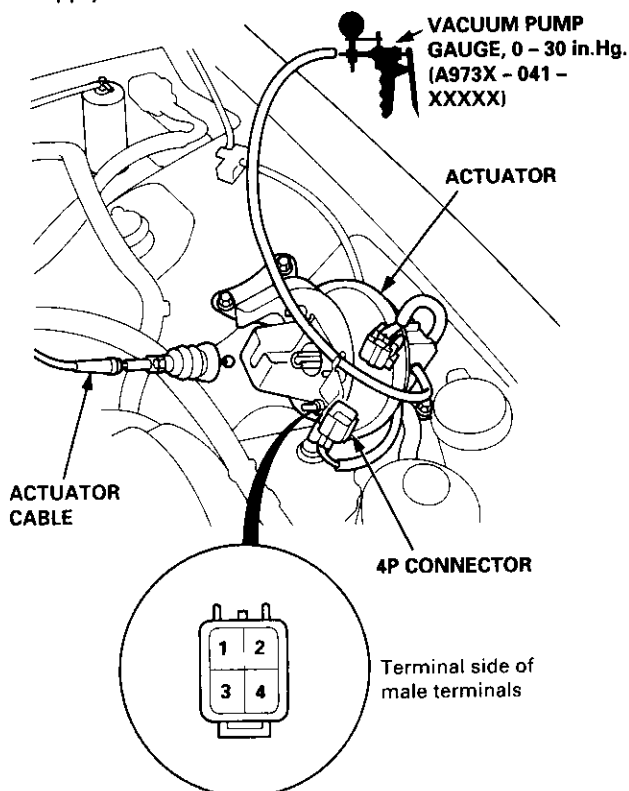

4. The actuator rod should pull in completely. If the rod pulls in only part-way or not at all, check for a leaking vacuum line or defective solenoid.

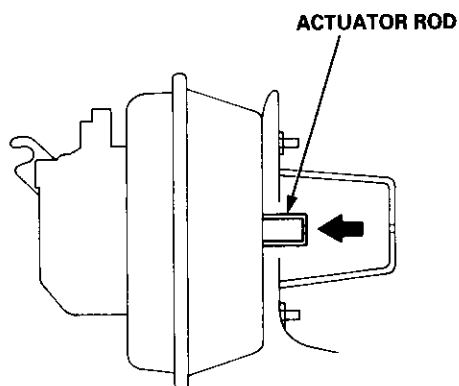

5. With voltage and vacuum still applied, try to pull the actuator rod out by hand. You should not be able to pull it out. If you can, it is defective.

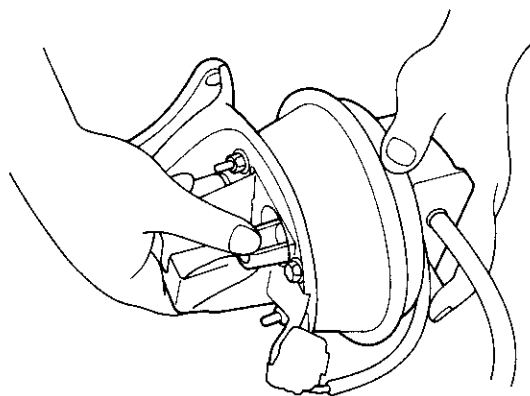


6. Disconnect ground from the No. 3 terminal. The actuator rod should return. If it does not return, but the vent hose and filter are not plugged, the solenoid valve assembly is defective.
7. Repeat steps 2 through 5, and disconnect ground from the No. 1 terminal. The actuator rod should return. If it does not return, but the vent hose and filter are not plugged, the solenoid valve assembly is defective.
8. If you replace the solenoid valve assembly, be sure to use new O-rings on each solenoid.
9. Disconnect power and ground from the 4P connector. Disconnect the vent hose from the actuator. Connect a vacuum pump to the actuator vent hose port, and apply vacuum. The actuator rod should pull in completely. If not, the vacuum valve is stuck open. Replace the actuator.


Cruise Control

Actuator Replacement

1. Pull back the boot, and loosen the locknut. Then disconnect the cable from the bracket.
2. Disconnect the cable end from the actuator rod.

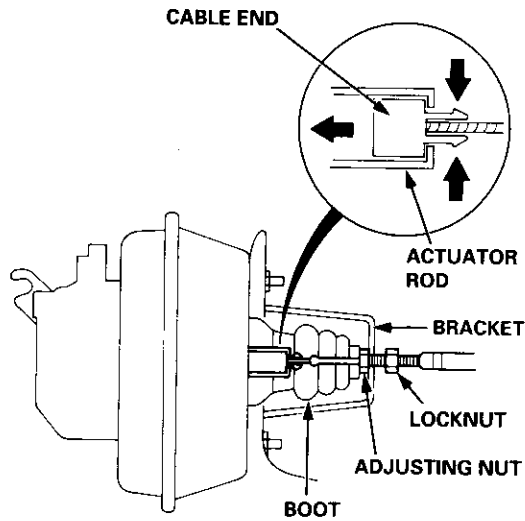


3. Disconnect the 4P connector from the actuator.
4. Disconnect the vacuum hose from the vacuum tank. Pull out the vent hose.
5. Remove the three mounting bolts and the actuator with the bracket.

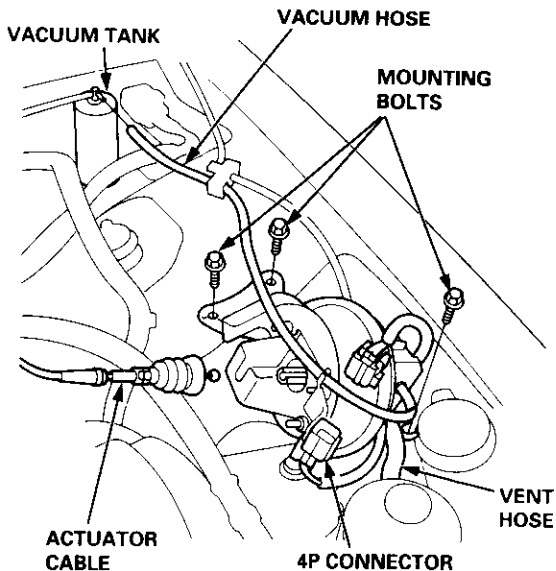

6. If necessary, disconnect the cable end from the linkage over the accelerator pedal, then turn the grommet 90° in the bulkhead, and remove the cable.
7. Install in the reverse order of removal, and adjust free play at the actuator rod after connecting the cable (see next column).

Actuator Cable Adjustment

1. Check that the actuator cable operates smoothly with no binding or sticking.
2. Start the engine. Hold the engine at 3,000 rpm with no load (A/T in **N** or **P**, M/T in neutral) until the radiator fan comes on, then let it idle.
3. Measure the amount of movement of the actuator rod until the cable pulls on the accelerator lever (engine speed starts to increase). Free play should be 11 ± 1.0 mm (0.43 ± 0.04 in).

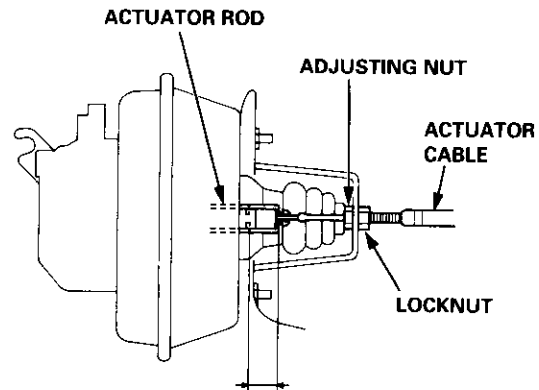

**LOCKNUT FREE PLAY: 11 ± 1.0 mm
(0.43 ± 0.04 in)**

4. If free play is not within specs, loosen the locknut, and turn the adjusting nut as required.


NOTE: If necessary, check the throttle cable free play (see section 11), then recheck the actuator rod free play.

5. Retighten the locknut, and recheck the free play.



Actuator Solenoid Test


1. Disconnect the 4P connector from the actuator.

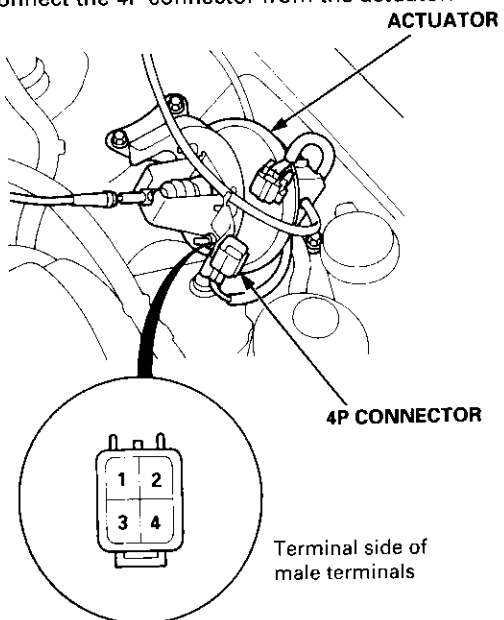

2. Check for resistance between the terminals according to the table.


Terminal	1	2	3	4
Resistance (Ω)				
VENT SOLENOID 40 - 60 Ω			○ — ○	
VACUUM SOLENOID 30 - 50 Ω		○ — ○		○
SAFETY SOLENOID 40 - 60 Ω	○ — ○			○

NOTE: Resistance will vary slightly with temperature; specified resistance is at 70°F (20°C).

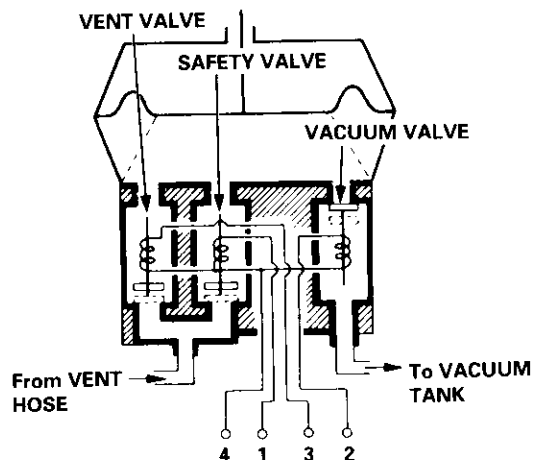

Cruise Control

Actuator Disassembly

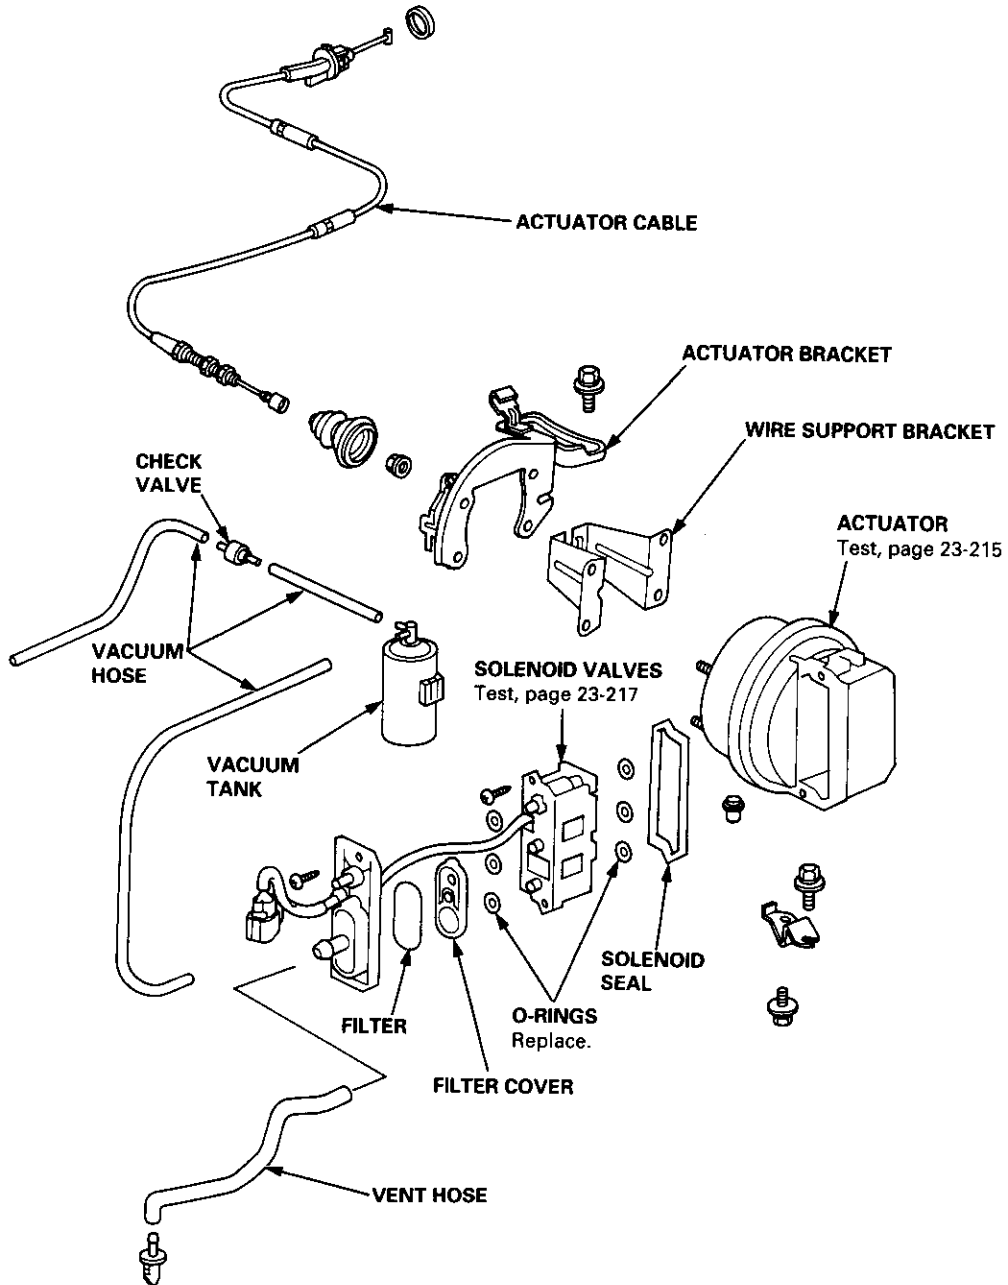




Power Door Locks

Component Location Index


NOTE (With keyless entry system):


- If the doors unlock or lock with the transmitter, but the LED on the transmitter does not come on, the LED is faulty; replace the transmitter.
- When you unlock the doors with the transmitter, the ceiling light (middle position) comes on for 30 seconds. (However, if the audio unit is not installed, the light does not come on.)
- If any door is open, you cannot lock or unlock the doors with the transmitter.
- The horn sounds only the first time you press a transmitter button. (Pressing repeatedly does not activate the horn again.)
- If you unlocked the doors with the transmitter, but do not open any of the doors within 30 seconds, the doors relock automatically.
- The doors do not lock or unlock with the transmitter if the ignition key is inserted in the ignition switch.
- If you press the PANIC button for more than two seconds, the horn sounds for about 30 seconds, and the transmitter LED comes on. (The panic mode will not be activated if the ignition key is in the ignition switch.) The panic mode is cancelled by pressing any of the transmitter buttons.
- After replacing the transmitter battery, press the lock and unlock buttons five or six times to activate the transmitter.

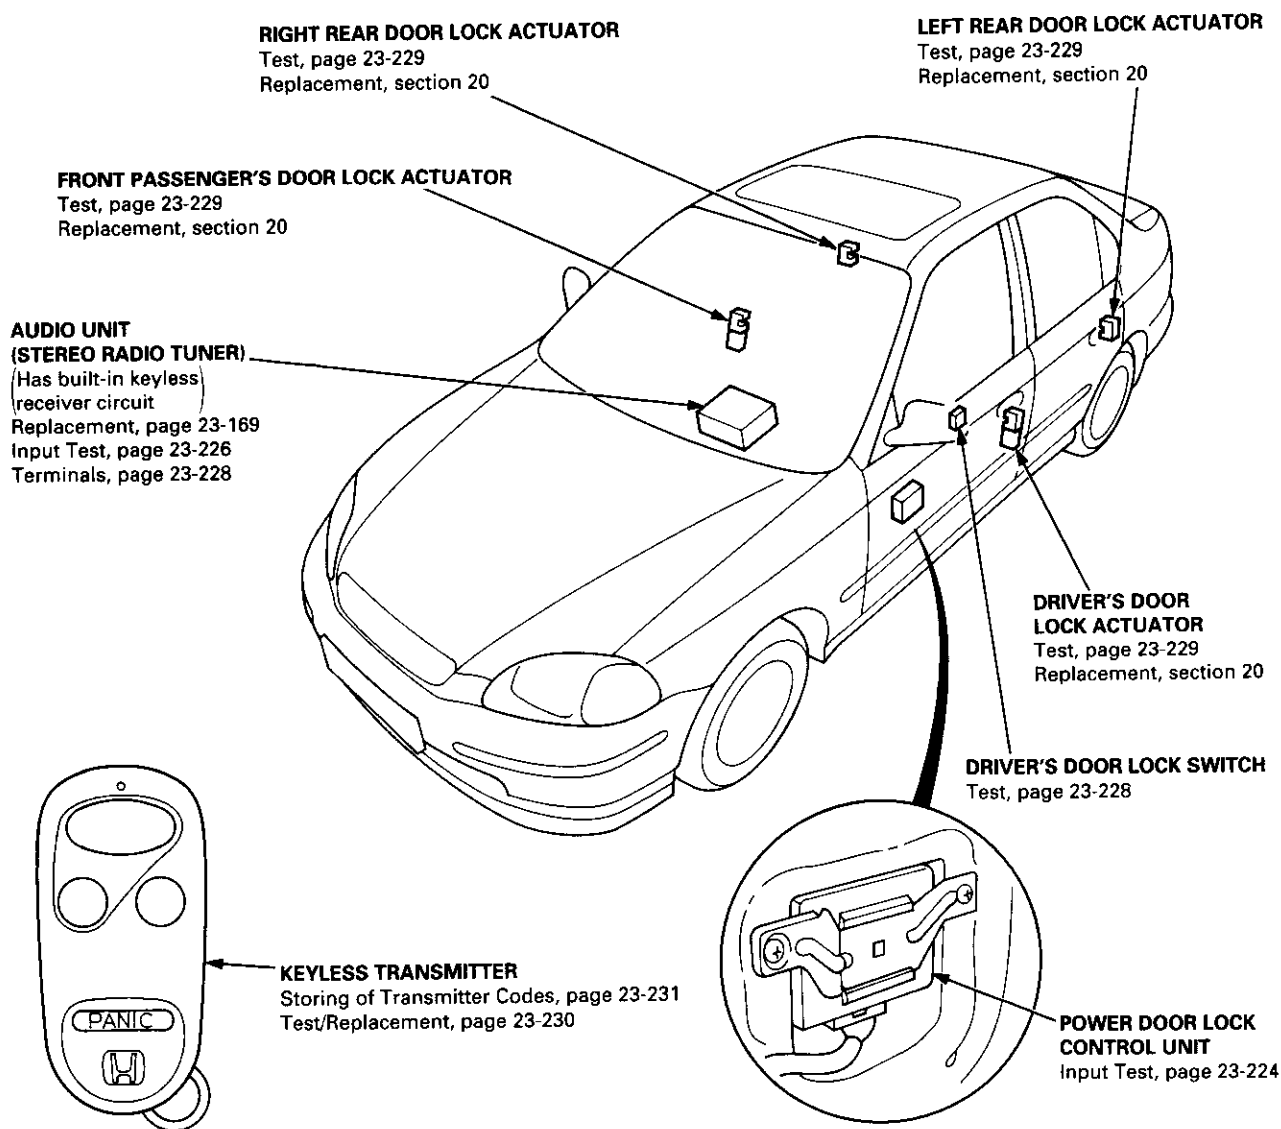

Power Door Locks


Circuit Diagram (With Keyless Entry System)

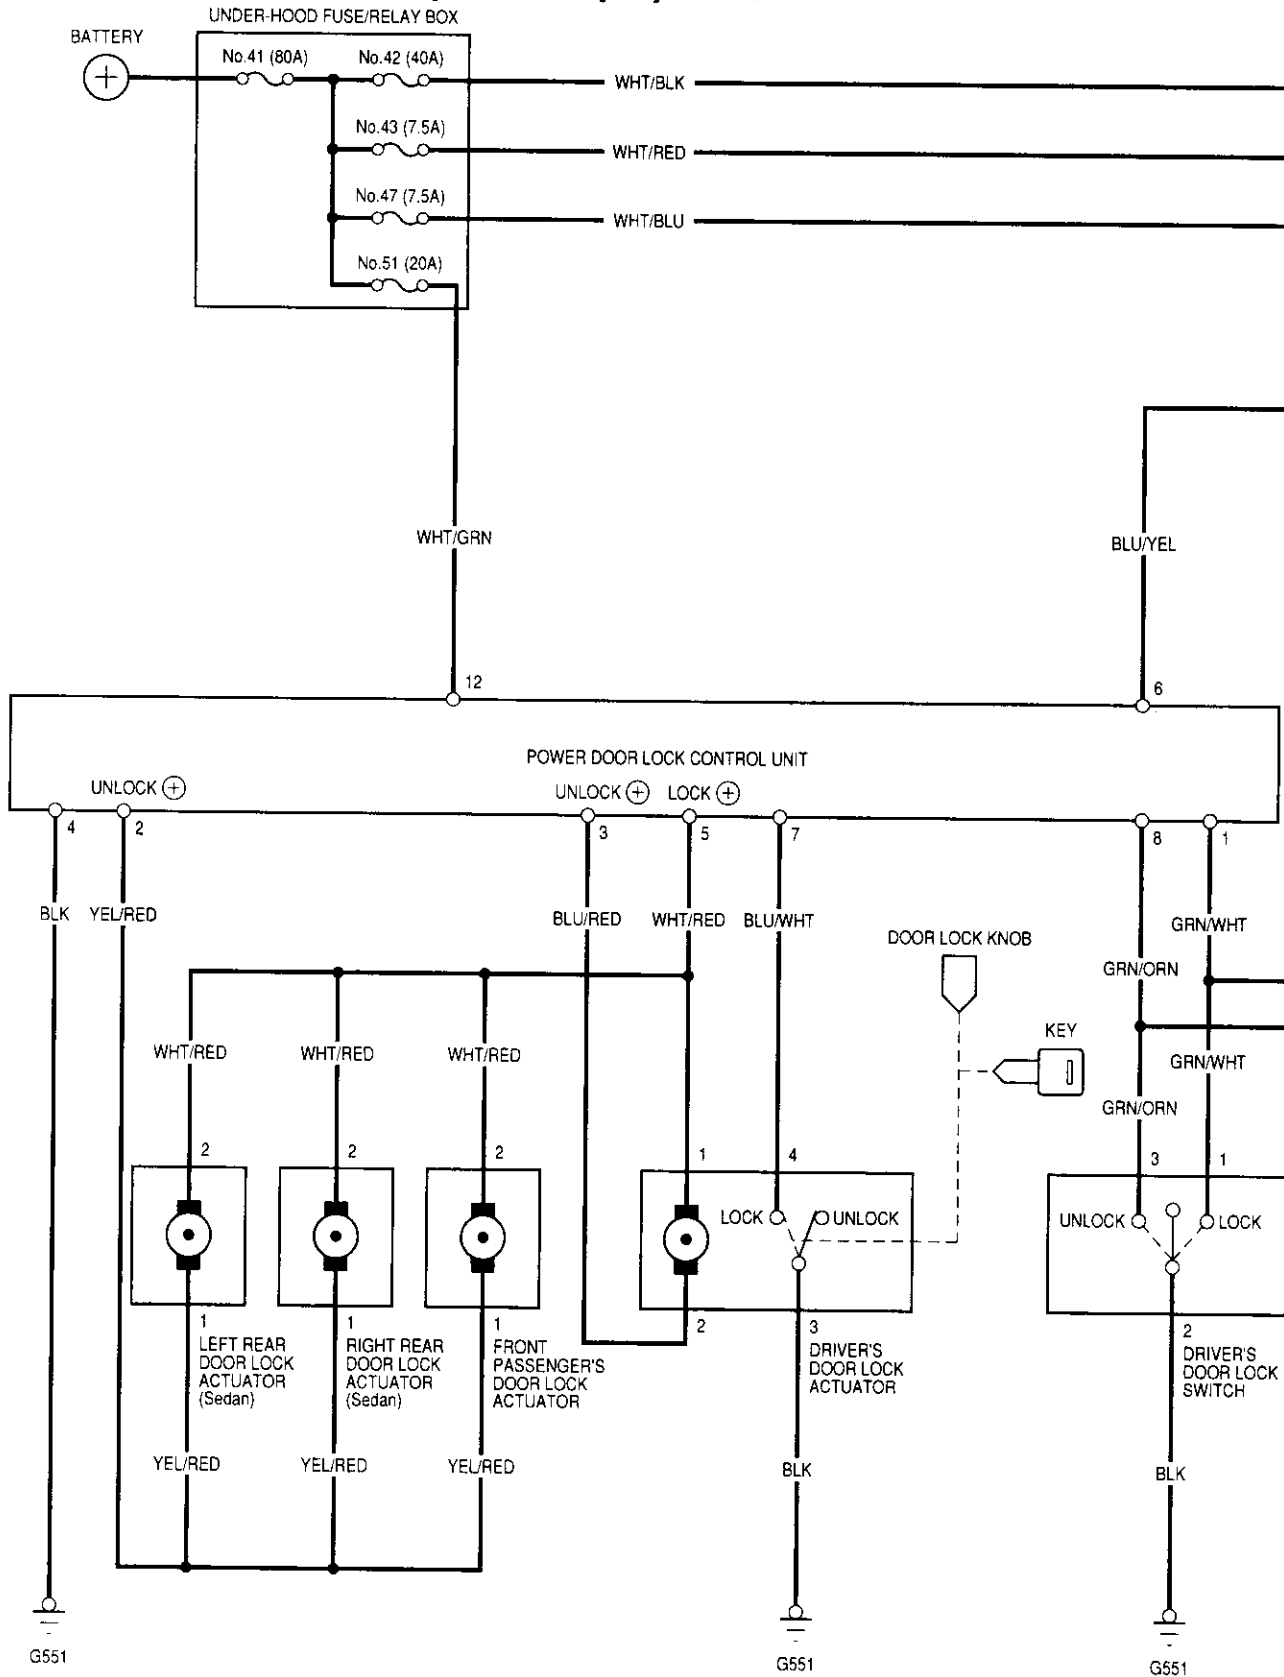

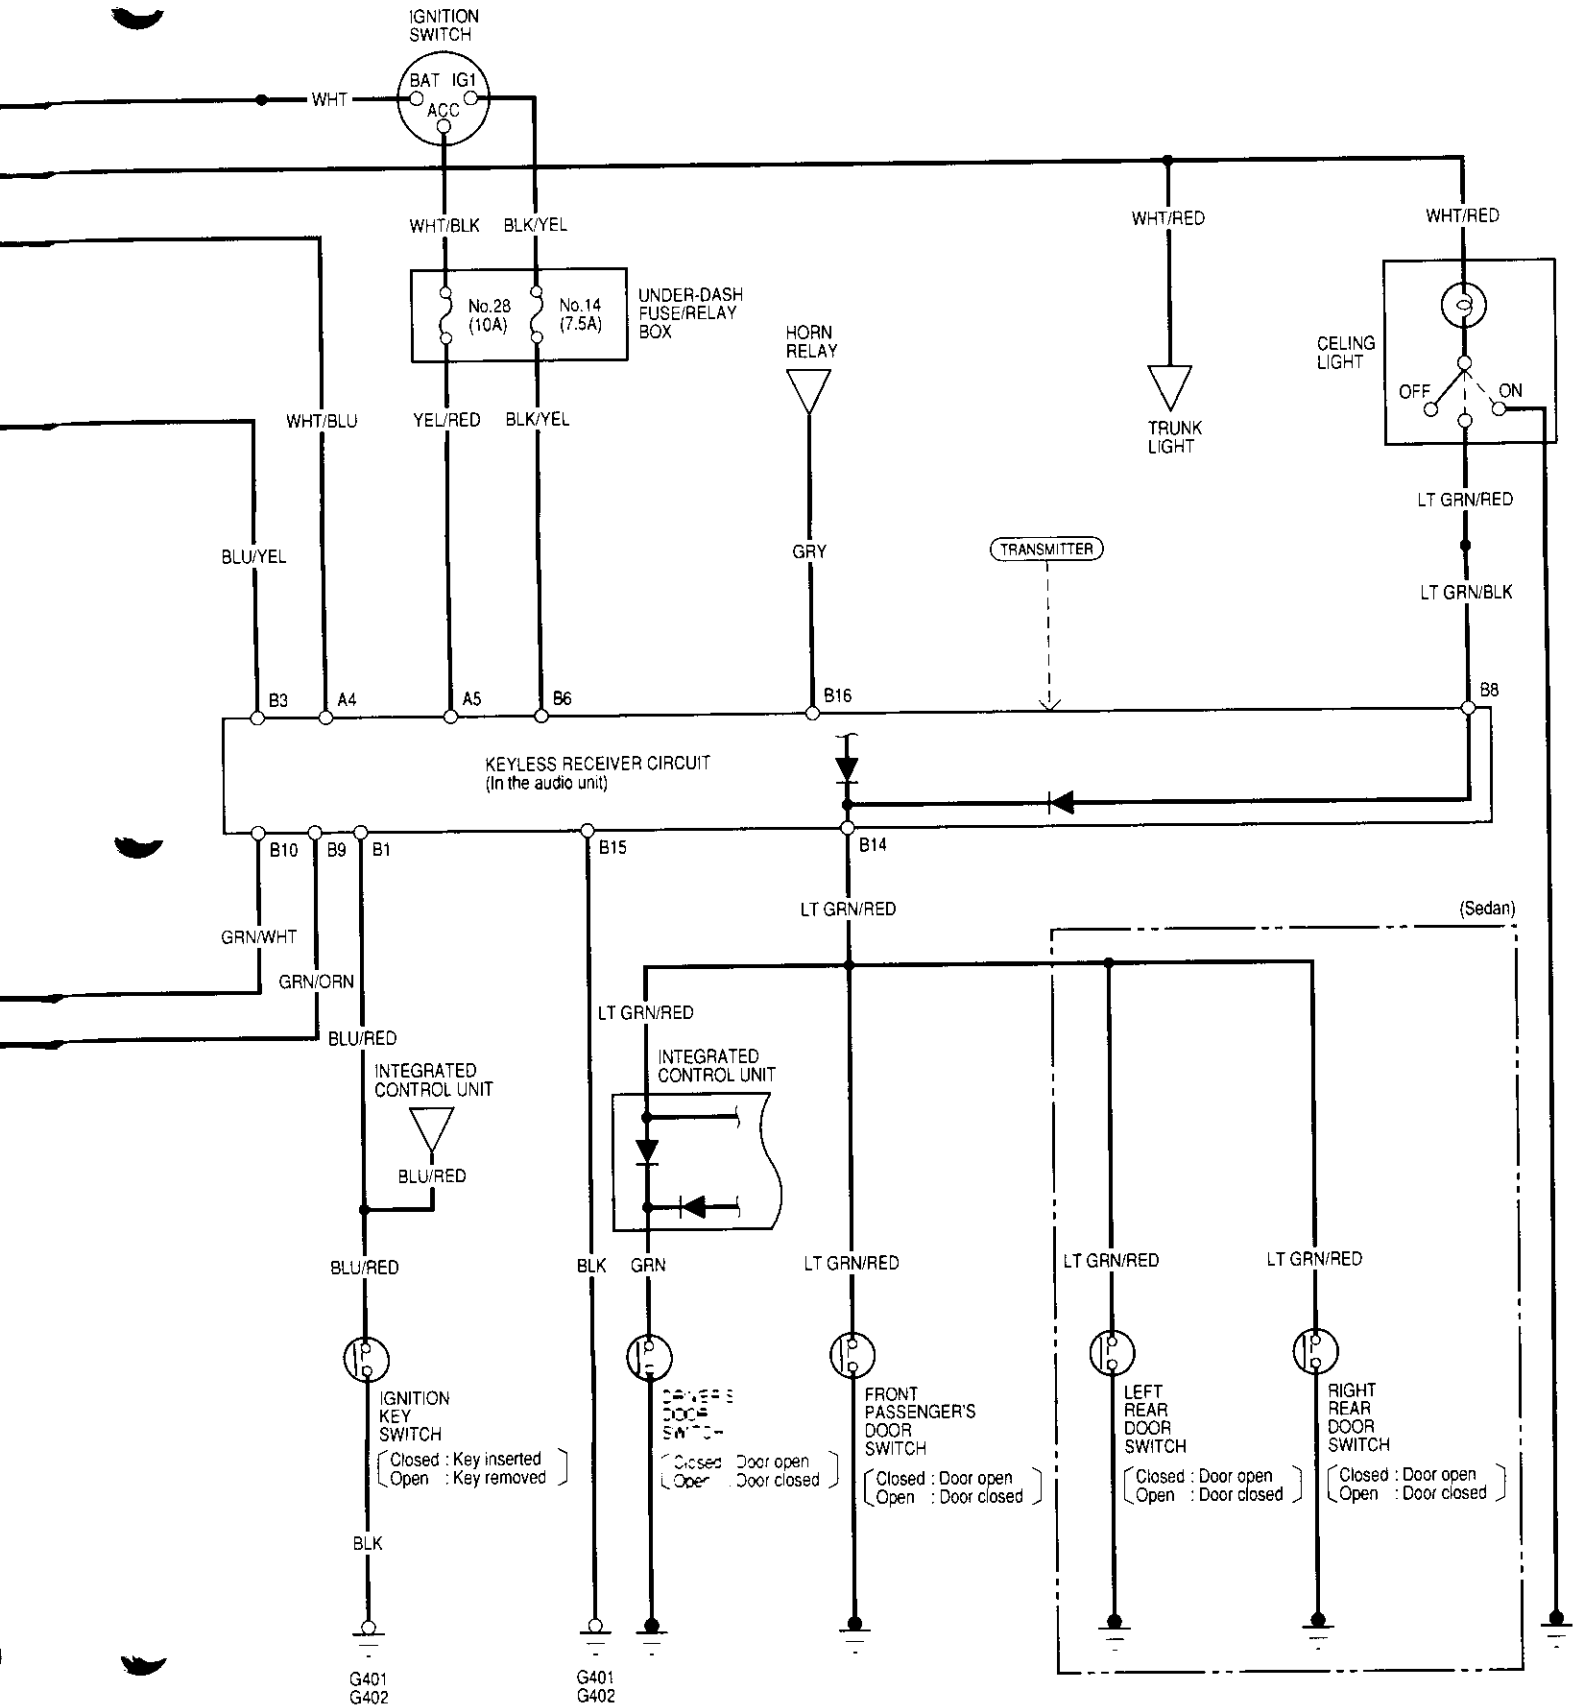

Power Door Locks

Circuit Diagram (Without Keyless Entry System)

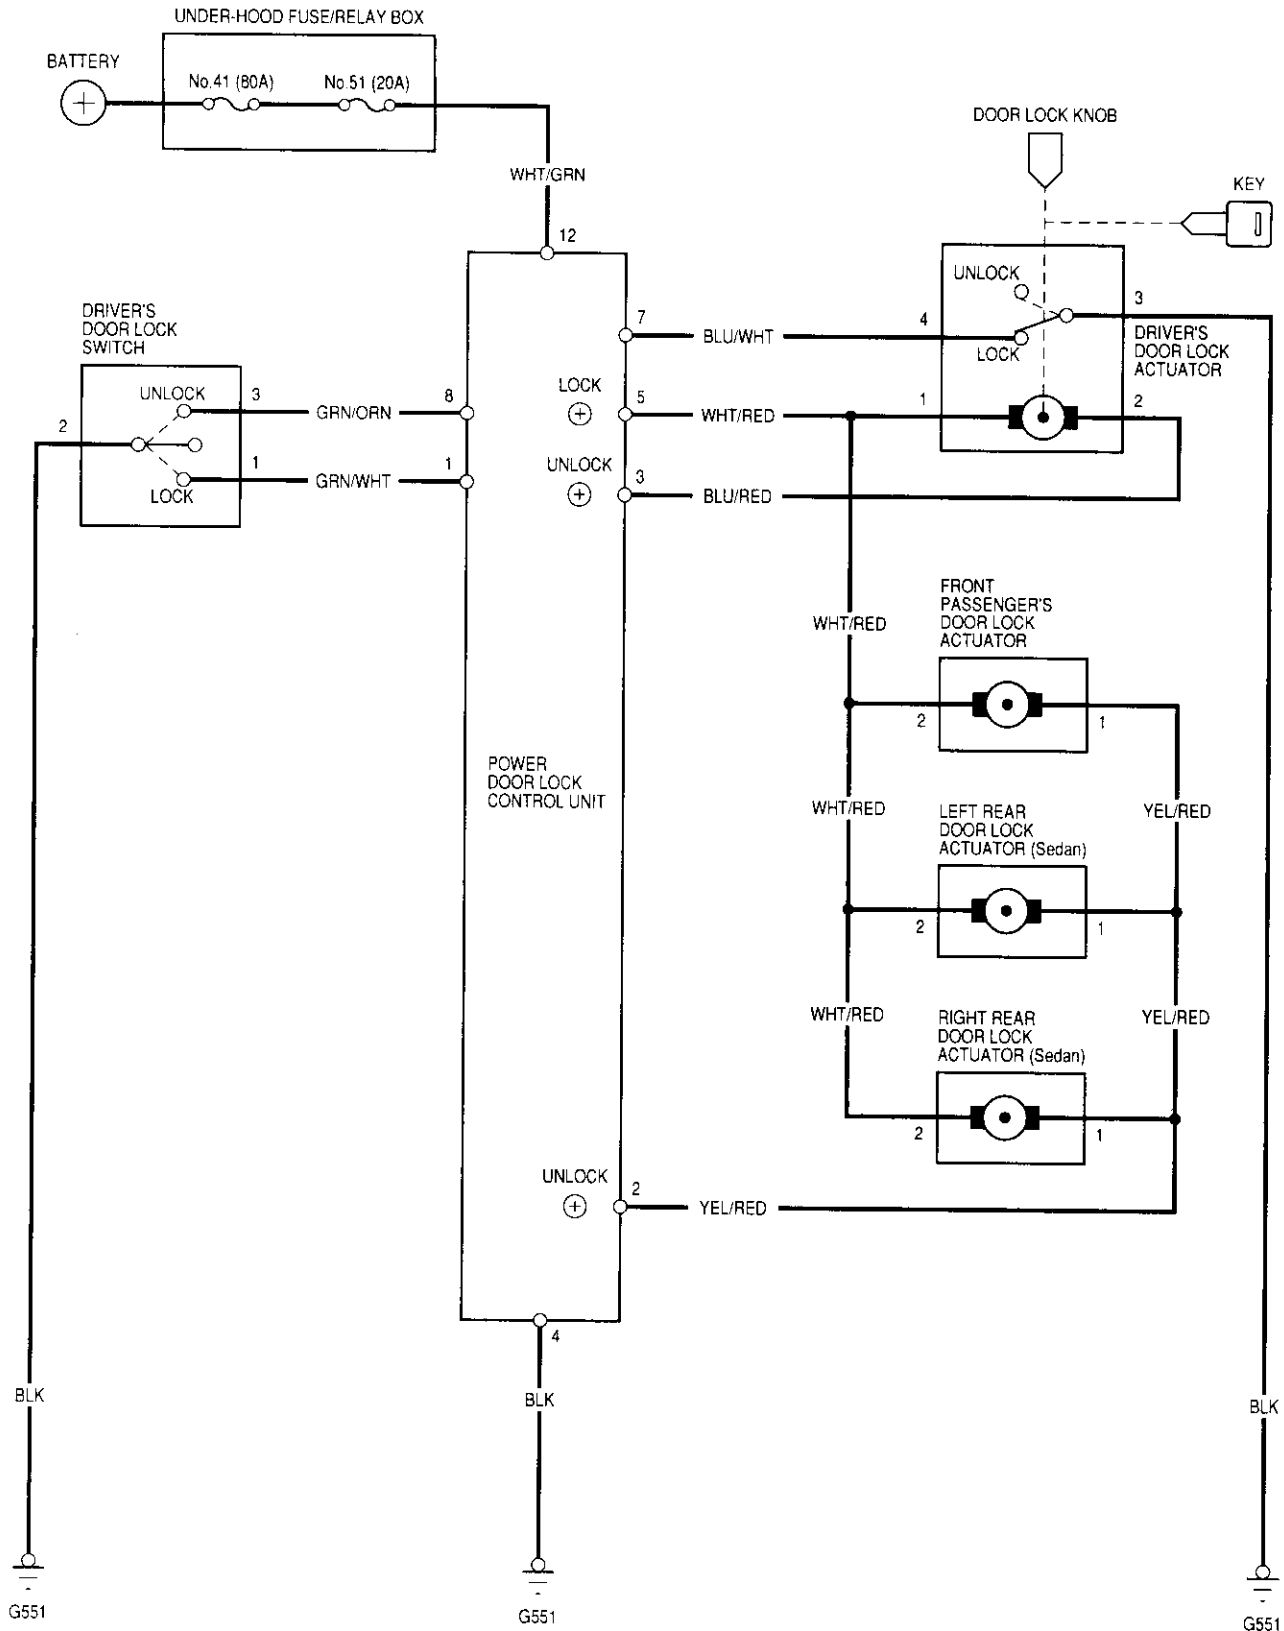



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Symptom		Item to be inspected	Blown No. 51 (20 A) fuse (In the under-hood fuse/relay box)	Driver's door lock knob switch (In the driver's door lock actuator)	Control unit input	Passenger's door actuator	Disconnected or obstructed door lock rod/linkage	Driver's door lock switch	Transmitter inspection	Audio unit input (Has built-in keyless receiver circuit)	Floor ground	Open circuit, loose or disconnected terminals
Power door lock system does not work at all.			1		2						G551	WHT/GRN
Doors don't lock with driver's door lock knob switch.	All doors		1	2	3							BLU/WHT
	One or more doors					1	2					YEL/RED or WHT/RED
Doors don't lock or unlock with driver's door lock switch.	All doors		1		3			2				GRN/WHT, GRN/ORN, YEL/RED or WHT/RED
	One or more doors					1	2					YEL/RED or WHT/RED
* The power door lock system works properly but the keyless entry system doesn't.									1	2	G401 G402	GRN/WHT or GRN/ORN

*: with keyless entry system


NOTE:

- When the remote transmitter button is pressed the first time, only the driver's door will unlock. When the button is pressed the second time, all the doors will unlock.
- The doors will relock automatically after 30 seconds if a door is not opened, or the key is out of the ignition switch.
- The keyless entry system will not lock or unlock the doors when the key is in the ignition switch.

Power Door Locks

Control Unit Input Test

1. Remove the driver's door panel (see section 20).
2. Disconnect the 12P connector from the control unit.
3. Inspect the connector and socket terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, make the following input tests at the connector.
 - If any test indicates a problem, find and correct the cause, then recheck the system.
 - If all the input tests prove OK, the control unit must be faulty; replace it.

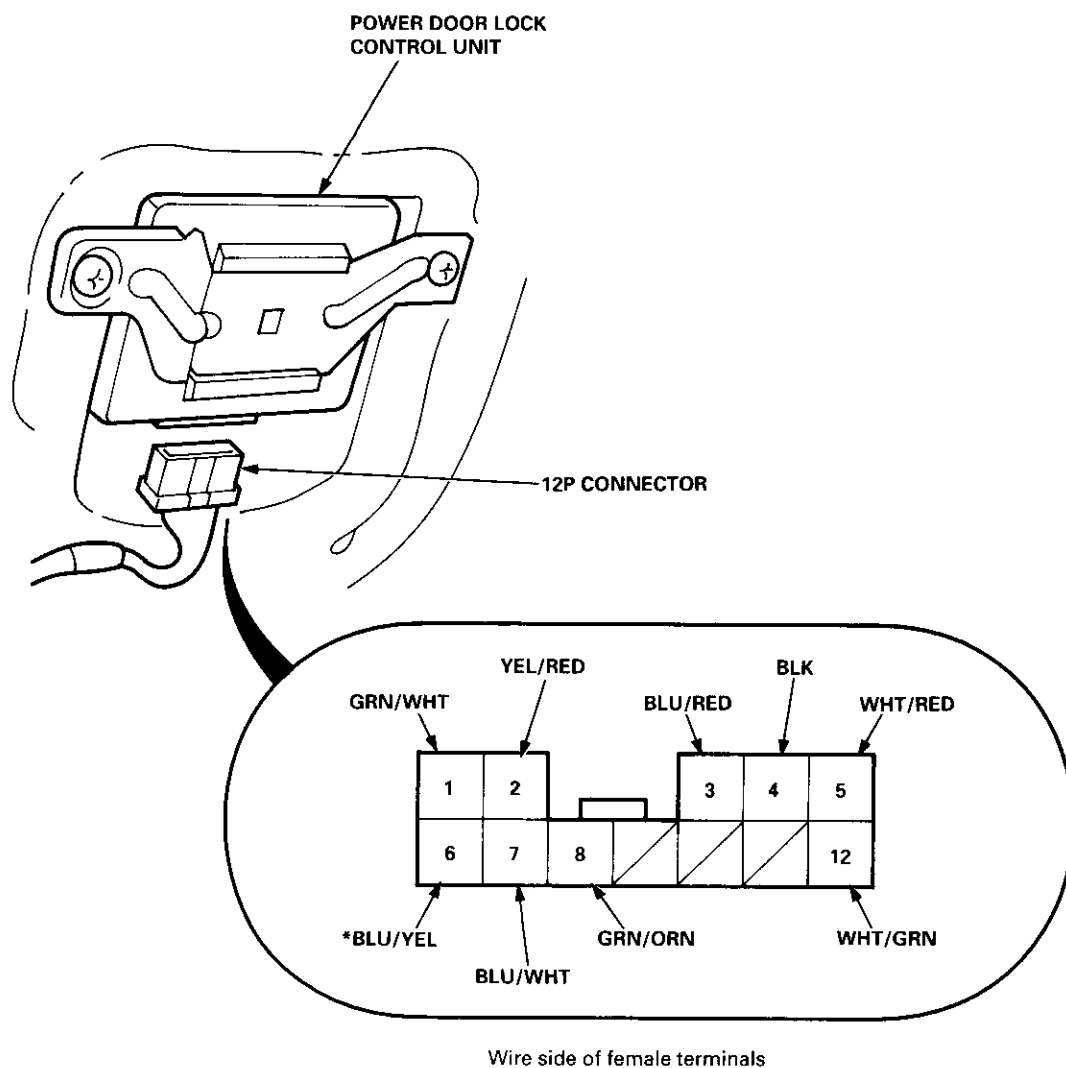

*: With keyless entry system



Disconnect the 12P connector from the power door lock control unit.

CAUTION: To prevent damage to the actuator, apply battery voltage only momentarily.

Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
4	BLK	Under all conditions	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G551) • An open in the wire
12	WHT/GRN	Under all conditions	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 51 (20 A) fuse in the under-hood fuse/relay box • An open in the wire
2	YEL/RED	Connect the YEL/RED terminal to the WHT/GRN terminal, and the WHT/RED terminal to the BLK terminal momentarily.	Check door lock operation: All passenger's doors should unlock.	<ul style="list-style-type: none"> • Blown No. 51 (20 A) fuse in the under-hood fuse/relay box • Faulty actuator • An open in the wire
3	BLU/RED	Connect the BLU/RED terminal to the WHT/GRN terminal, and the WHT/RED terminal to the BLK terminal momentarily.	Check door lock operation: Driver's door should unlock.	
5	WHT/RED	Connect the WHT/RED terminal to the WHT/GRN terminal, and the YEL/RED terminal to the BLK terminal momentarily.	Check door lock operation: All passenger doors should lock.	
*6	BLU/YEL	Under all conditions.	Check for continuity between the power door lock control unit 12P connector No.6 terminal and audio unit 16P connector No.3 terminal: There should be continuity.	<ul style="list-style-type: none"> • An open in the wire

*: With keyless entry system


Reconnect the 12P connector to the power door lock control unit.

Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
1	GRN/WHT	Driver's door lock switch in LOCK	Check for voltage to ground: There should be 1 V or less.	<ul style="list-style-type: none"> • Faulty driver's door lock switch • Poor ground (G551) • An open in the wire
8	GRN/ORN	Driver's door lock switch in UNLOCK		
7	BLU/WHT	Driver's door lock knob in LOCK	Check for voltage to ground: There should be 1 V or less.	<ul style="list-style-type: none"> • Faulty driver's door lock actuator • Poor ground (G551) • An open in the wire

Power Door Locks

Audio Unit (Keyless Receiver Circuit) Input Test (with keyless entry system)

1. Remove the audio unit, then disconnect the A and B connectors (see page 23-169).
2. Inspect the connector and socket terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, make the following input tests at the connector.
 - If any test indicates a problem, find and correct the cause, then recheck the system.
 - If all the input tests prove OK, the control unit must be faulty; replace it.

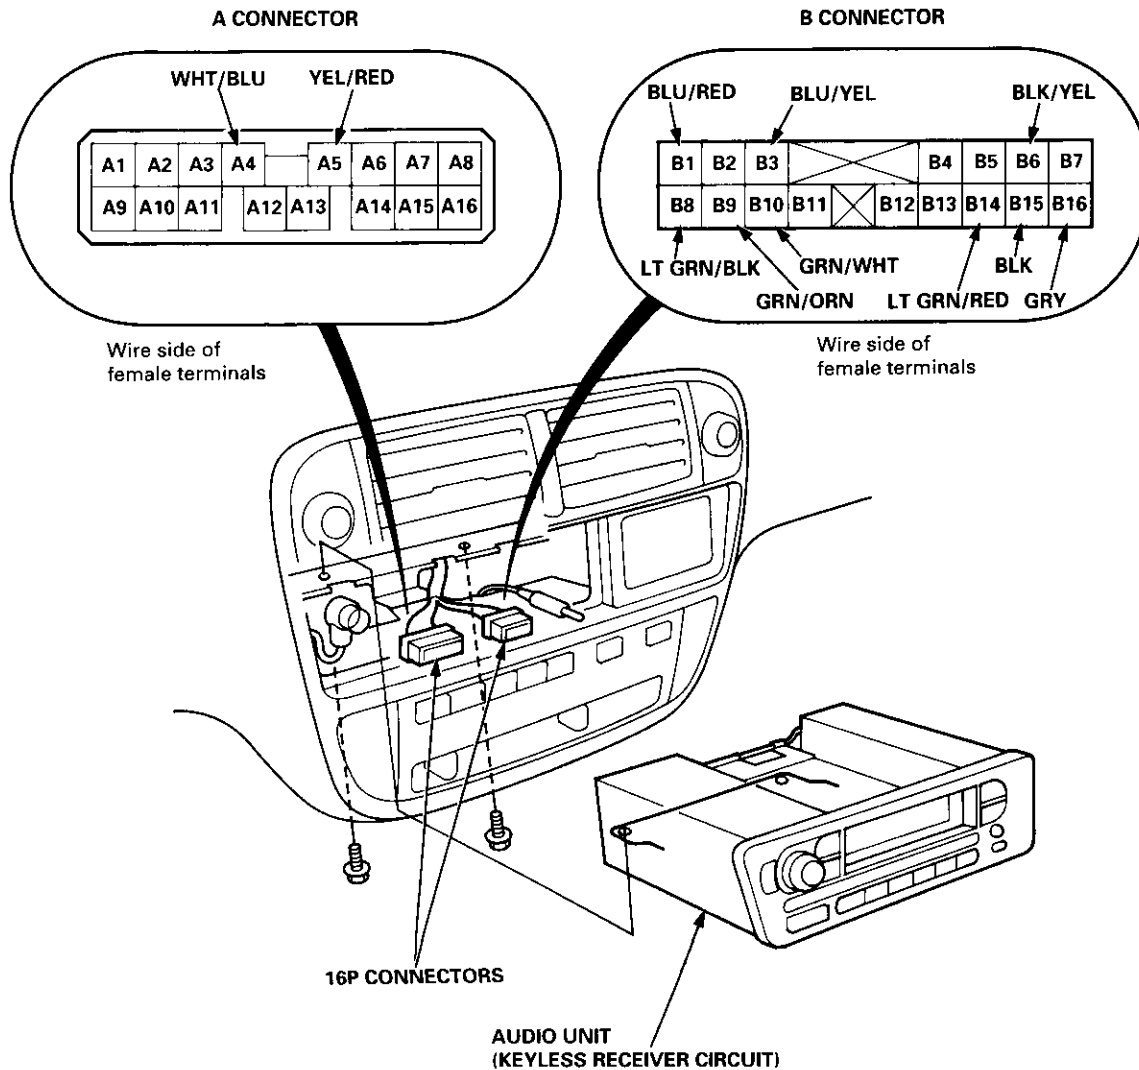



Disconnect the A and B connectors from the audio unit.


Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
A4	WHT/BLU	Under all conditions	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> Blown No. 47 (7.5 A) fuse in the under-hood fuse/relay box An open in the wire
A5	YEL/RED	Ignition switch ACC (I)	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> Blown No. 28 (10 A) fuse in the under-dash fuse/relay box An open in the wire
B6	BLK/YEL	Ignition switch ON (II)	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> Blown No. 14 (7.5 A) fuse in the under-dash fuse/relay box An open in the wire
B15	BLK	Under all conditions	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> Poor ground (G401, G402) An open in the wire
B1	BLU/RED	Ignition key inserted into the ignition key switch	Check for voltage to ground: There should be 1 V or less.	<ul style="list-style-type: none"> Poor ground (G401, G402) Faulty ignition key switch An open in the wire Short in the wire
		Ignition key removed from the ignition key switch	Check for voltage to ground: There should be 4 V or more.	
B3	BLU/YEL	Under all conditions	Check for continuity between the audio unit 16P connector No. 3 terminal and power door lock control unit 12P connector No. 6 terminal: There should be continuity.	<ul style="list-style-type: none"> An open in the wire
B8	LT GRN/BLK	Ceiling light switch in "middle position"	Connect to ground: The ceiling light should come on.	<ul style="list-style-type: none"> Blown No. 43 (7.5 A) fuse in the under-hood fuse/relay box Blown ceiling light bulb Faulty ceiling light An open in the wire
B14	LT GRN/RED	Each door open, one at a time	Check for voltage to ground: There should be 1 V or less.	<ul style="list-style-type: none"> Faulty door switch An open in the wire
B16	GRY	Under all conditions	Connect to ground: Horn should sound.	<ul style="list-style-type: none"> Blown No. 52 (15 A) fuse in the under-hood fuse/relay box Faulty horn Faulty horn relay An open in the wire

Reconnect the B connector only to the audio unit.

Cavity	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
B9	GRN/ORN	Driver's door lock switch in UNLOCK	Check for voltage to ground: There should be 1 V or less.	<ul style="list-style-type: none"> Poor ground (G551) Faulty driver's door lock switch An open in the wire Short in the wire
		Driver's door lock switch in LOCK	Check for voltage to ground: There should be 4 V or more.	
B10	GRN/WHT	Driver's door lock switch in UNLOCK	Check for voltage to ground: There should be 4 V or more.	<ul style="list-style-type: none"> Poor ground (G551) Faulty driver's door lock switch An open in the wire Short in the wire
		Driver's door lock switch in LOCK	Check for voltage to ground: There should be 1 V or less.	

Power Door Locks

Audio Unit (keyless receiver circuit) Terminals

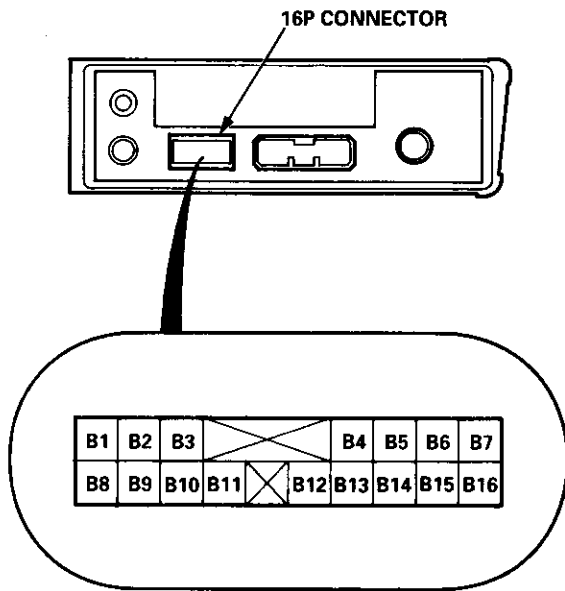


Cavity	Wire	Destination
B1	BLU/RED	Ignition key switch
*B2	LT GRN	Trunk latch switch
B3	BLU/YEL	Unlock (Driver's door)
B4	BLU	Valet switch
*B5	LT BLU	Security (IN)
B6	BLK/YEL	No. 14 (7.5 A) fuse
*B7	ORN	Security (D2)
B8	LT GRN/BLK	Ceiling light
B9	GRN/ORN	Unlock (All door)
B10	GRN/WHT	Lock (Output)
*B11	BLU/WHT	LED ⊖
*B12	WHT/BLK	Security (D0)
*B13	YEL/BLU	Security (D1)
B14	LT GRN/RED	Door switch
B15	BLK	Ground (G401, G402)
B16	GRY	Horn

*: For security system (option)


Driver's Door Lock Switch Test

1. Remove the inner handle (see section 20).
2. Disconnect the 3P connector from the door lock switch.

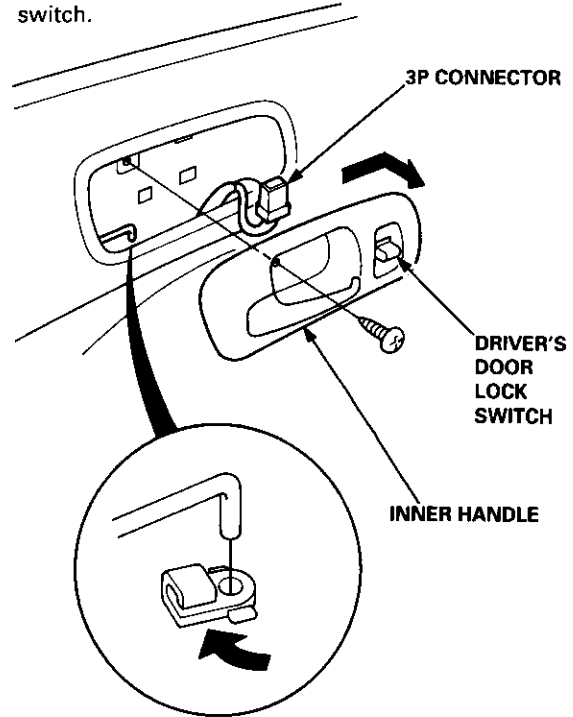

3. Check for continuity between the terminals in each switch position according to the table.


Terminal Position	1	2	3
LOCK	○	○	
OFF			
UNLOCK		○	○

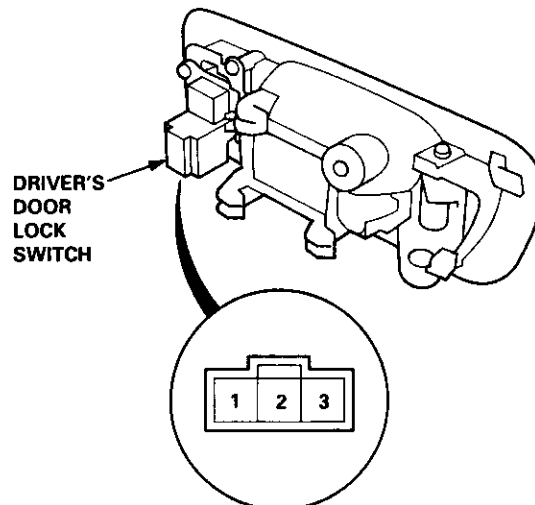



Driver's Door Lock Actuator Test

1. Remove the driver's door panel (see section 20).
2. Disconnect the 4P connector from the actuator.

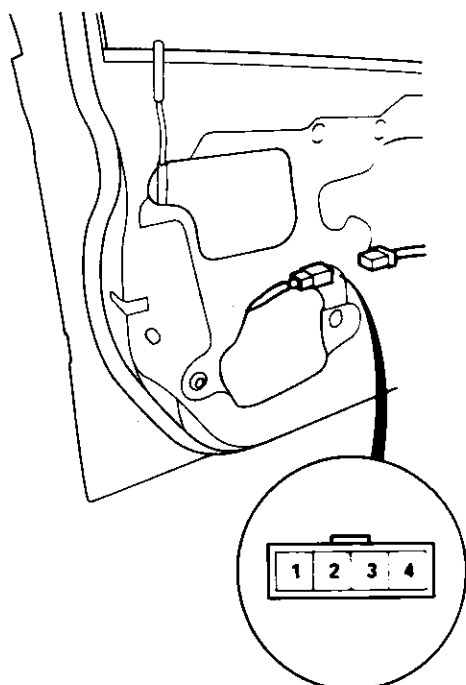

Terminal side of male terminals

3. Check for continuity between the terminals in each knob switch position according to the table.

Terminal Position	3	4
LOCK	○	○
UNLOCK		

4. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.


Terminal Position	1	2
LOCK	⊕	⊖
UNLOCK	⊖	⊕

5. If the actuator fails to work properly, replace it.

Passenger's Door Lock Actuator Test

1. Remove the passenger's door panel (see section 20).
2. Disconnect the 2P connector from the actuator.

NOTE: The front passenger's door lock actuator is shown; the left rear and right rear door lock actuators are similar.

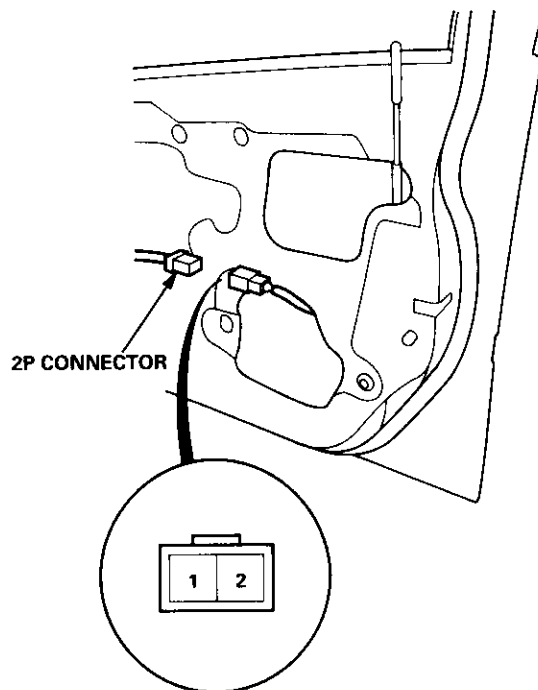

Terminal side of male terminals

3. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

Terminal Position	1	2
LOCK	⊖	⊕
UNLOCK	⊕	⊖



4. If the actuator fails to work properly, replace it.


Power Door Locks

Transmitter Inspection/Replacement

NOTE:

- If the doors unlock or lock with the transmitter, but the LED on the transmitter does not come on, the LED is faulty; replace the transmitter.
- If any door is open, you cannot lock or unlock the doors with the transmitter.
- If you unlocked with the transmitter, but do not open any of the doors within 30 seconds, the doors relock automatically.
- The doors do not lock or unlock with the transmitter if the ignition key is inserted in the ignition switch.

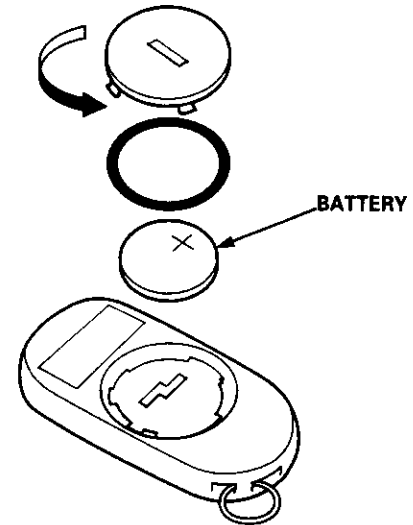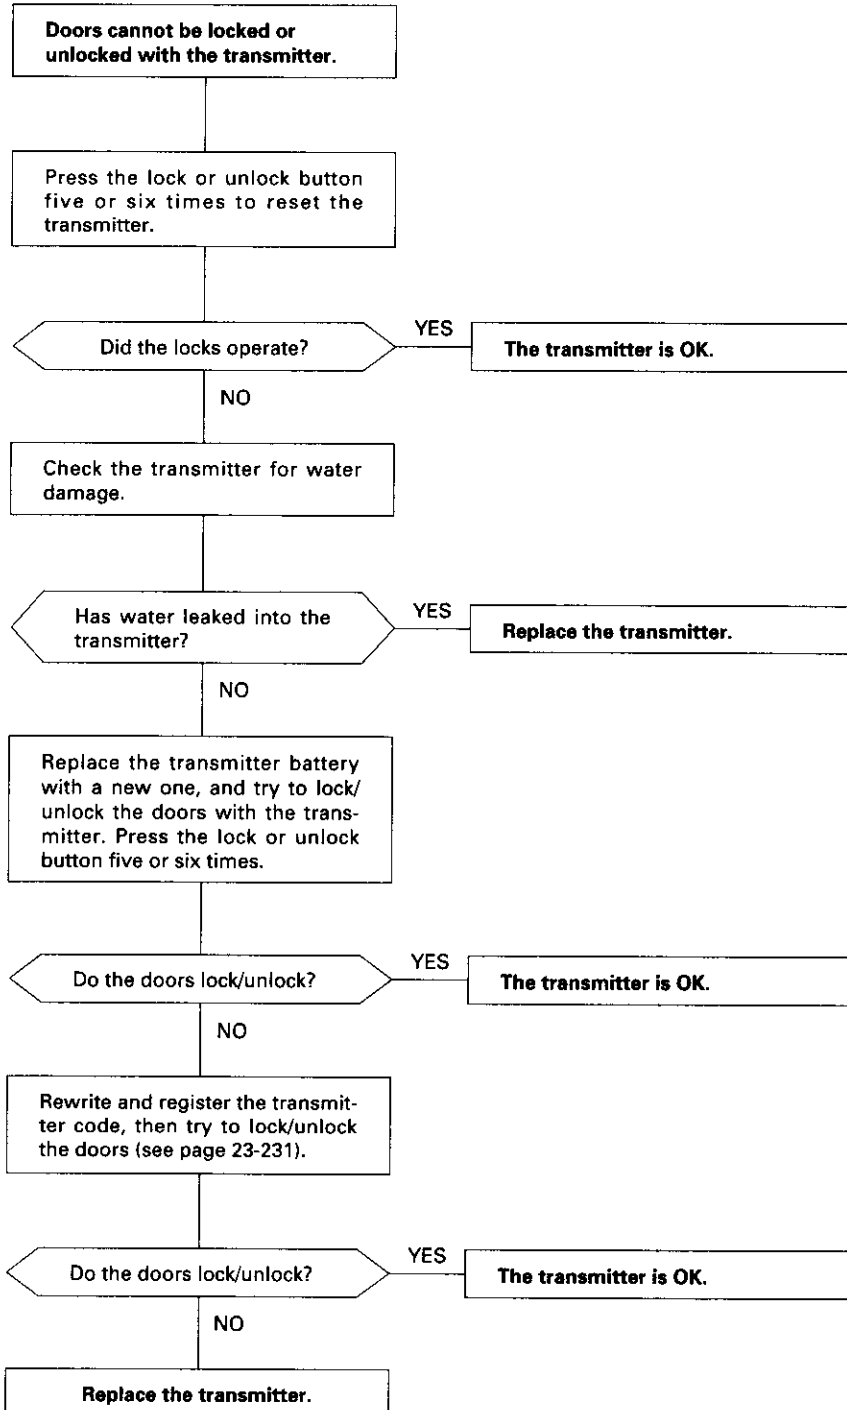



Storing of Transmitter Codes

NOTE:

- The codes of up to four transmitters can be stored in the control unit. (If a fifth code is stored, the code which was stored first will be erased.)
- When the system enters the registration mode, all previously stored codes will be erased.
- The system leaves the registration mode and returns to the normal mode if you
 - turn the valet switch OFF, or
 - turn the ignition switch OFF, or
 - do not press the transmitter button for more than 10 seconds.

Procedure:

1. Insert the ignition key into the ignition switch.
2. Turn the ignition switch ON (II).

Within 10 seconds, go to step 3.

3. Press and hold the valet switch for at least five seconds. (You will hear the sound of the actuators turning to UNLOCK.)

Within 10 seconds, go to step 4.



4. Press one of the transmitter buttons. (You will hear the sound of the actuators turning to UNLOCK.)

NOTE: If you want to register the codes of more than one transmitter, repeat step 4 within 10 seconds with the next transmitter.

5. Turn the ignition switch OFF; the registration procedure is completed.

NOTE: After storing its code, make sure the transmitter works properly by repeatedly pressing one of its buttons. (The system starts to work when you press any transmitter button six times.)

NOTE: If the tuner is turned ON, it will go off and come on again when the registration procedure is completed.

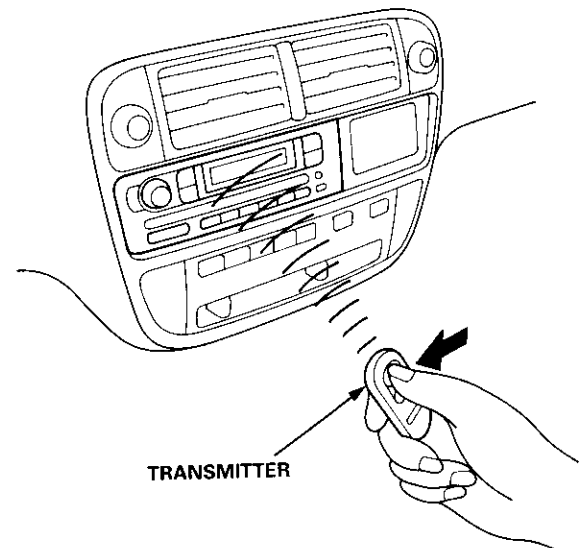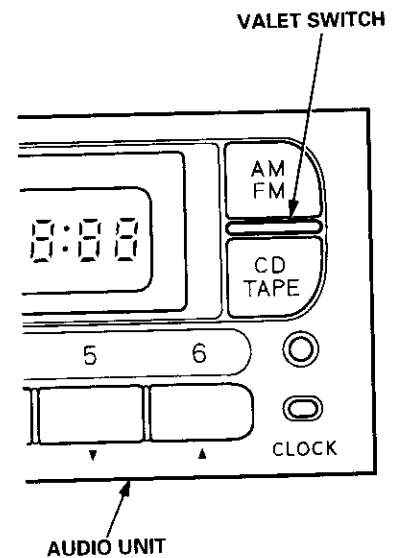


Supplemental Restraint System (SRS)

Special Tools	24-2	Troubleshooting	
Component/Wiring Locations		Self-diagnostic Procedures	24-13
Index	24-3	Reading the DTC	24-13
Description	24-5	Erasing the DTC Memory	24-15
Circuit Diagram	24-6	Troubleshooting Intermittent	
Precautions/Procedures		Failures	24-15
General Precautions	24-7	SRS Unit Identification	24-16
Airbag Handling and Storage	24-7	Diagnostic Trouble Code (DTC)	
SRS Unit Precautions	24-8	Chart – '96 – 97 Models	24-17
Inspection After Deployment	24-8	Diagnostic Trouble Code (DTC)	
Wiring Precautions	24-9	Chart – '98 Model	24-19
Backprobing Spring-loaded Lock		SRS Indicator Light Wire	
Connectors	24-9	Connections	24-25
Spring-loaded Lock Connector	24-10	Flowcharts	24-26
Spring-loaded Lock Connector with		Airbag	
Built-in Short Contact	24-10	Replacement	24-67
Disconnecting the Airbag		Disposal	24-70
Connector(s)	24-11	Cable Reel	
Steering-related Precautions	24-12	Replacement	24-72
		SRS Unit	
		Replacement	24-76


Special Tools

Ref. No.	Tool Number	Description	Qty	Page Reference
①	07HAZ - SG00400	Deployment Tool	1	24-70
②	07PAZ - 0010100	SCS Service Connector	1	24-14
③	07TAZ - SZ50200	SRS Service Connector (2 Ω)	1	24-42
④*	07TAZ - 001020A	Backprobe Adapter, 17 mm	2	24-30


*: Use with the stacking patch cords from T/N 07SAZ - 001000A, Backprobe Set.

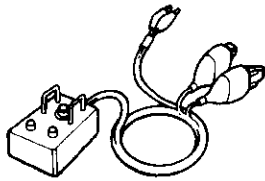


①

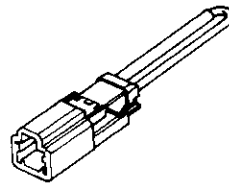

②

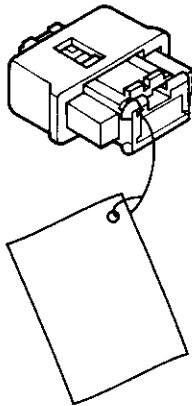


③

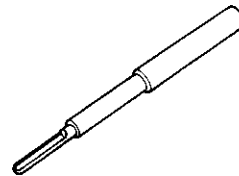


④

SRS INFLATOR
SIMULATOR
07SAZ - TB4011A

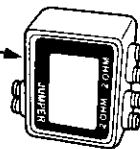

SRS SIMULATOR
LEAD C
07TAZ - SZ5011A

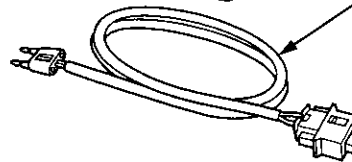


NOTE: The SRS Service Connector (2 Ω), T/N 07TAZ - SZ50200, is not available. Instead, use the SRS Inflator Simulator, T/N 07SAZ - TB4011A, and the SRS Simulator Lead C, T/N 07TAZ - SZ5011A. When the SRS Service Connector (2 Ω), T/N 07TAZ - SZ50200, is called for, connect the lead to one of the simulator's "2 Ω" jacks.




Component/Wiring Locations

Index: With Front Passenger's Airbag

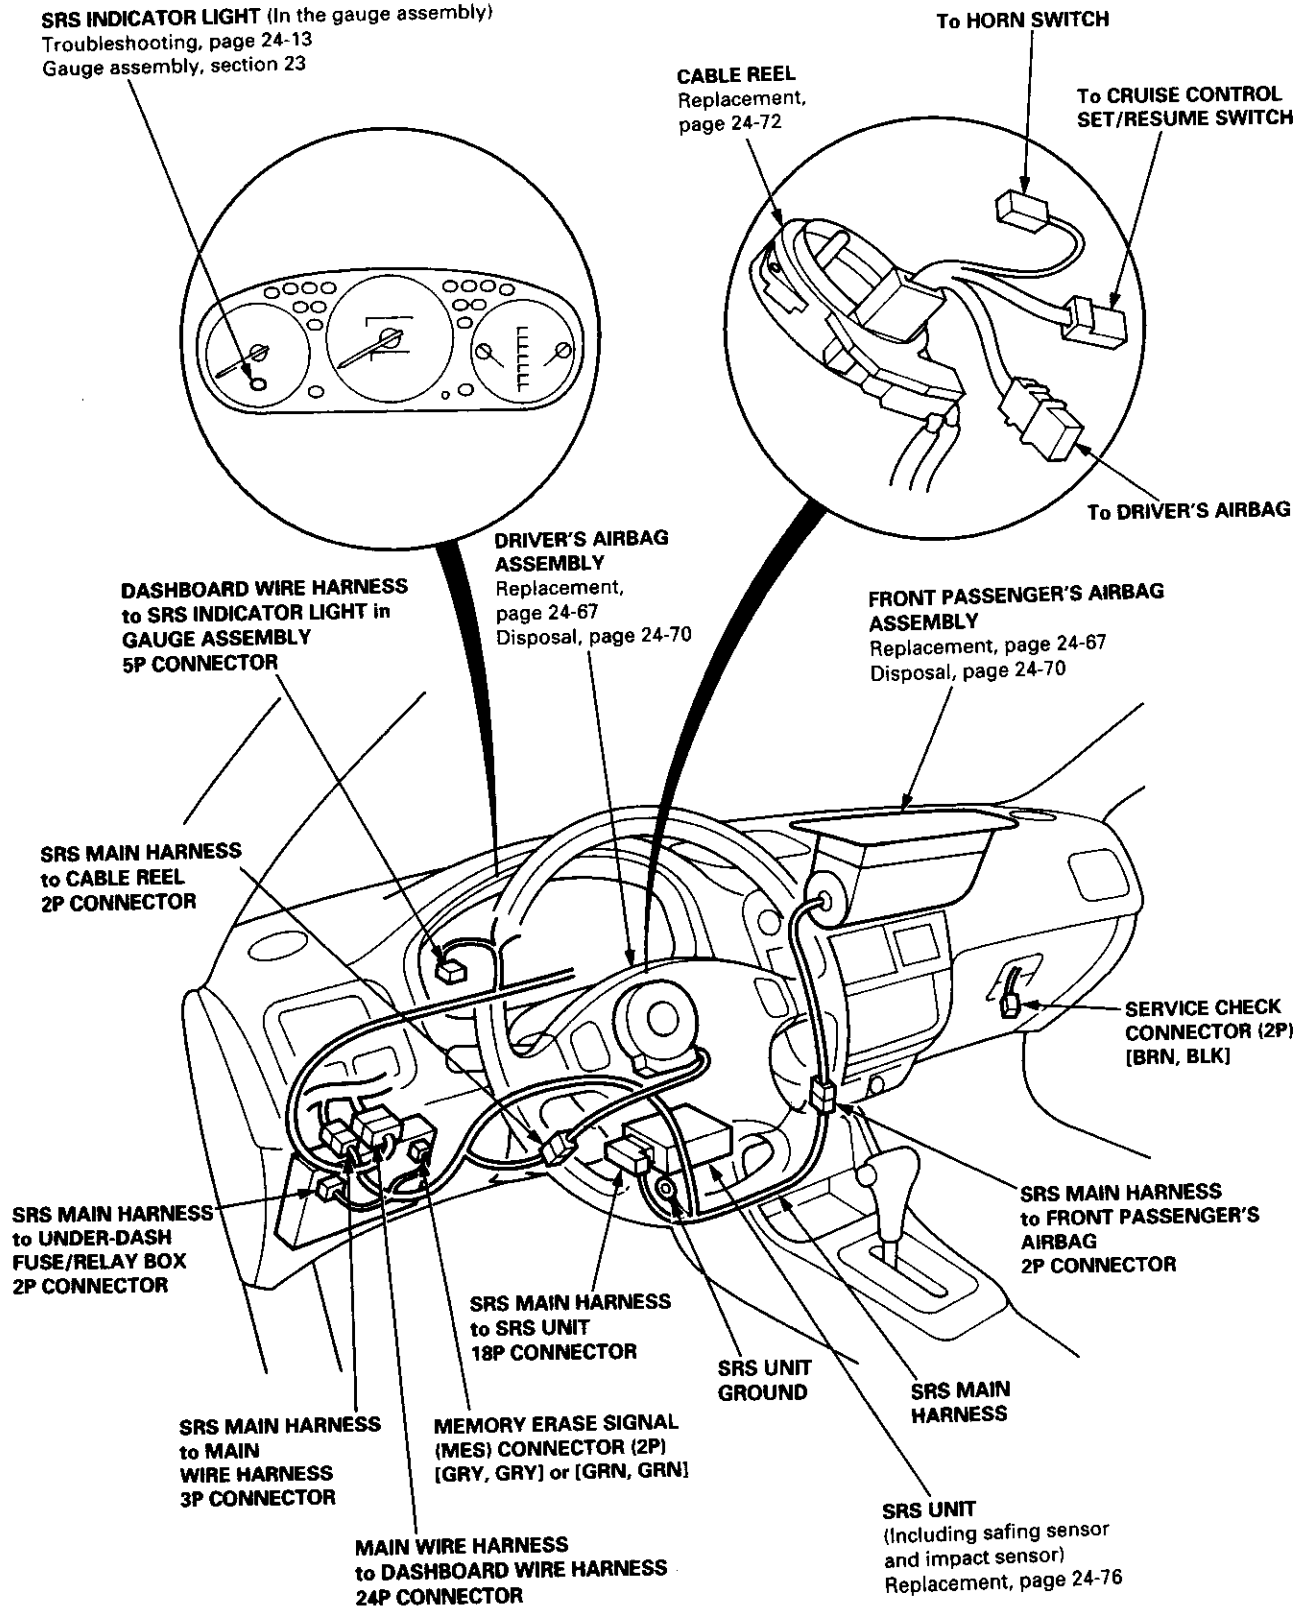

Component/Wiring Locations


Index: Without Front Passenger's Airbag (Part of CANADA Model)

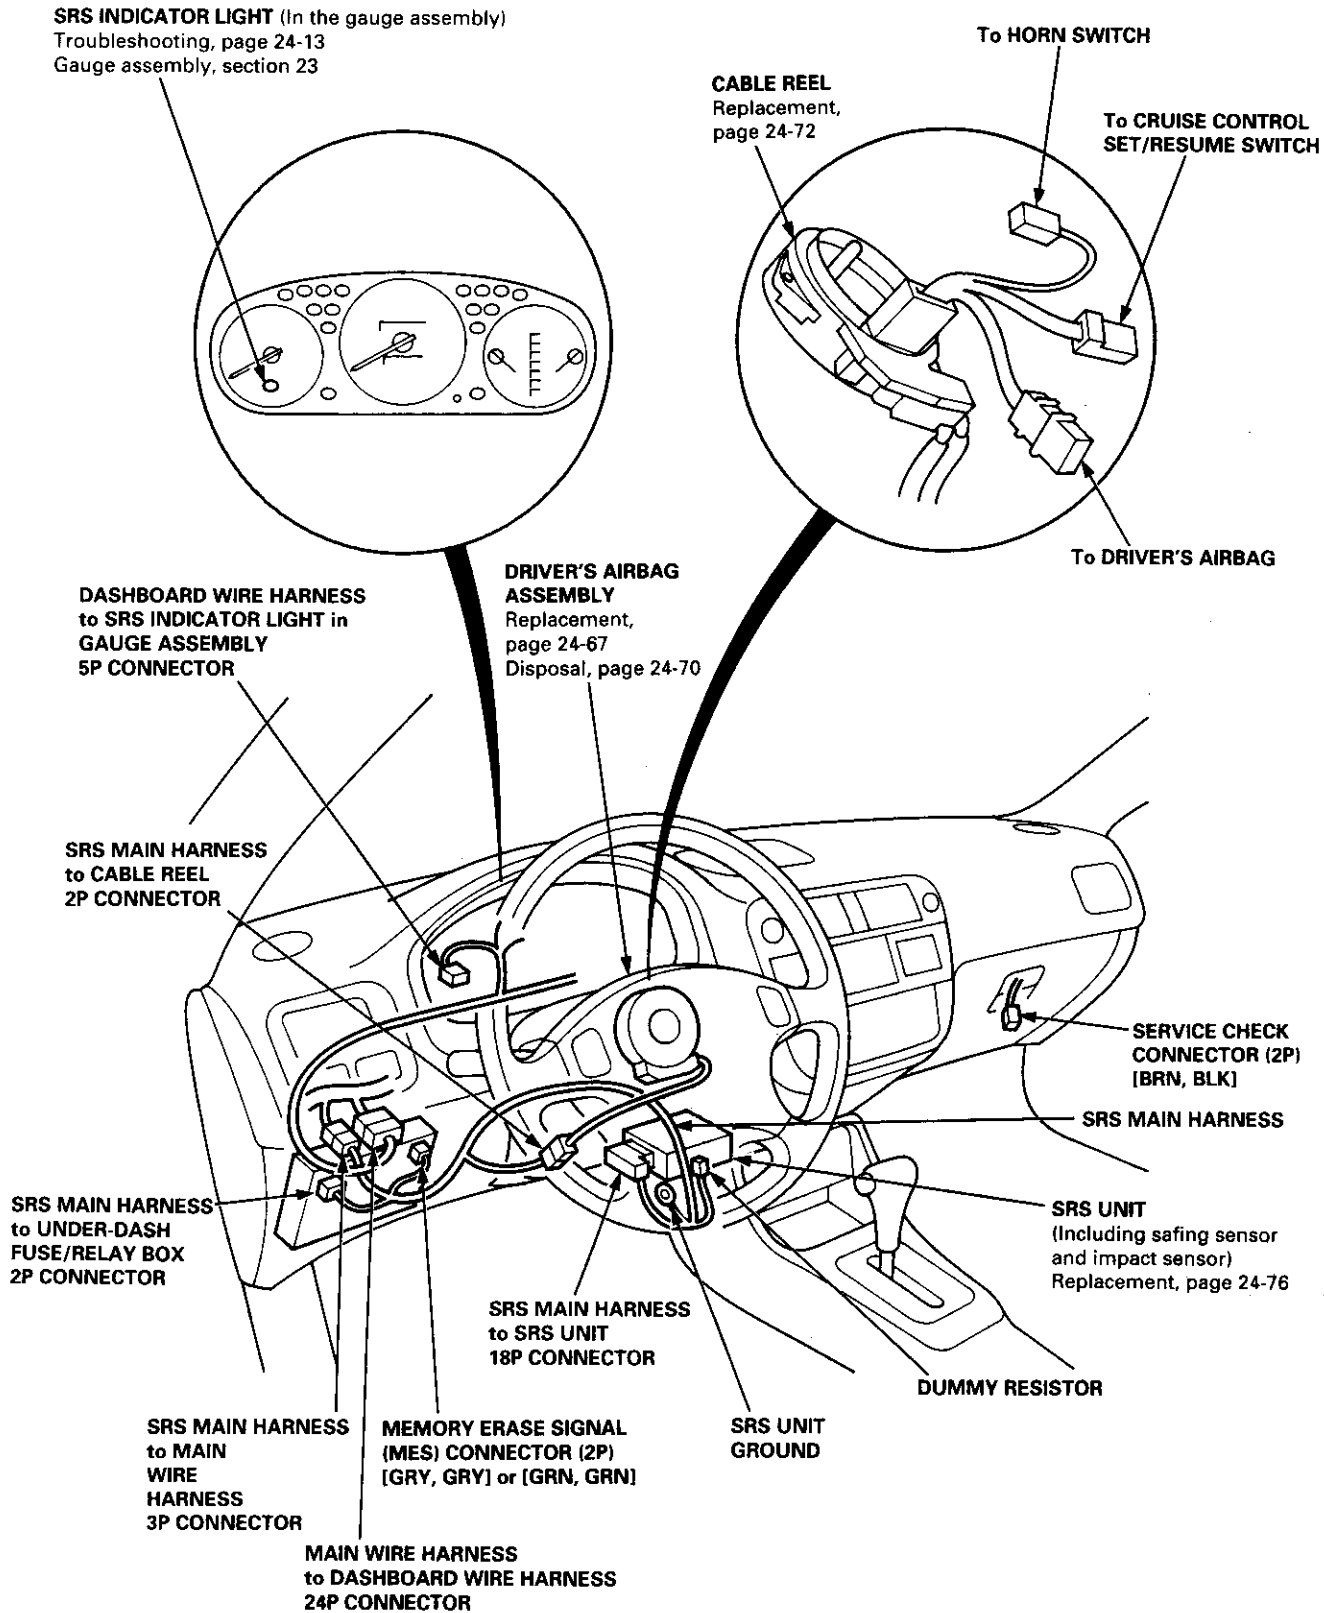



Description

The SRS is a safety device which, when used in conjunction with the seat belt, is designed to help protect the driver (and front passenger) in a frontal impact exceeding a certain set limit. The system consists of the SRS unit (including safing sensor and impact sensor), the cable reel, the driver's airbag (and front passenger's airbag).

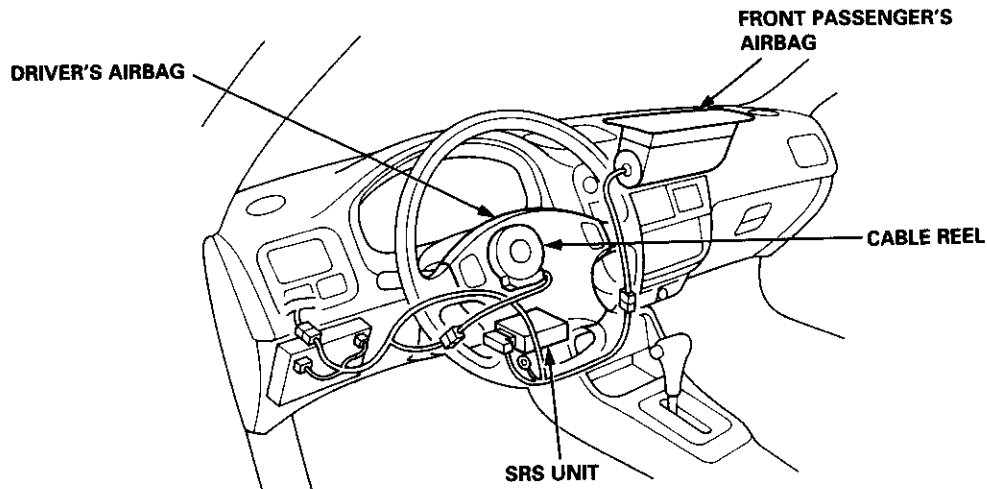


Operation

The main circuit in the SRS unit senses and judges the force of impact and, if necessary, ignites the inflator charge(s). If battery voltage is too low or power is disconnected due to the impact, the voltage regulator and the back-up power circuit respectively will keep voltage at a constant level.

For the SRS to operate:

- (1) The impact sensor must activate, and send electric signals to the microprocessor.
- (2) The microprocessor must compute the signals, and must send signals to the airbag inflator(s).
- (3) The inflator(s) must ignite and deploy the airbag(s).

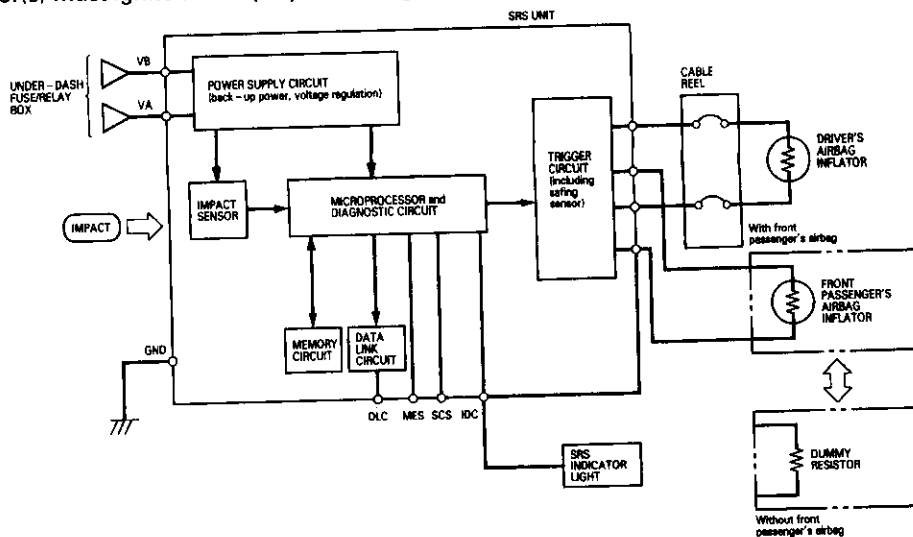


Self-diagnosis System

A self-diagnosis circuit is built into the SRS unit; when the ignition switch is turned ON (II), the SRS indicator light comes on and goes off after about six seconds if the system is operating normally.


If the light does not come on, or does not go off after six seconds, or if it comes on while driving, it indicates an abnormality in the system. The system must be inspected and repaired as soon as possible.

For better serviceability, the memory will store the cause of the malfunction, and the data link circuit passes on the information from the memory to the data link connector (DLC). This information can be read with the Honda PGM Tester connected to the DLC (16P).

Circuit Diagram

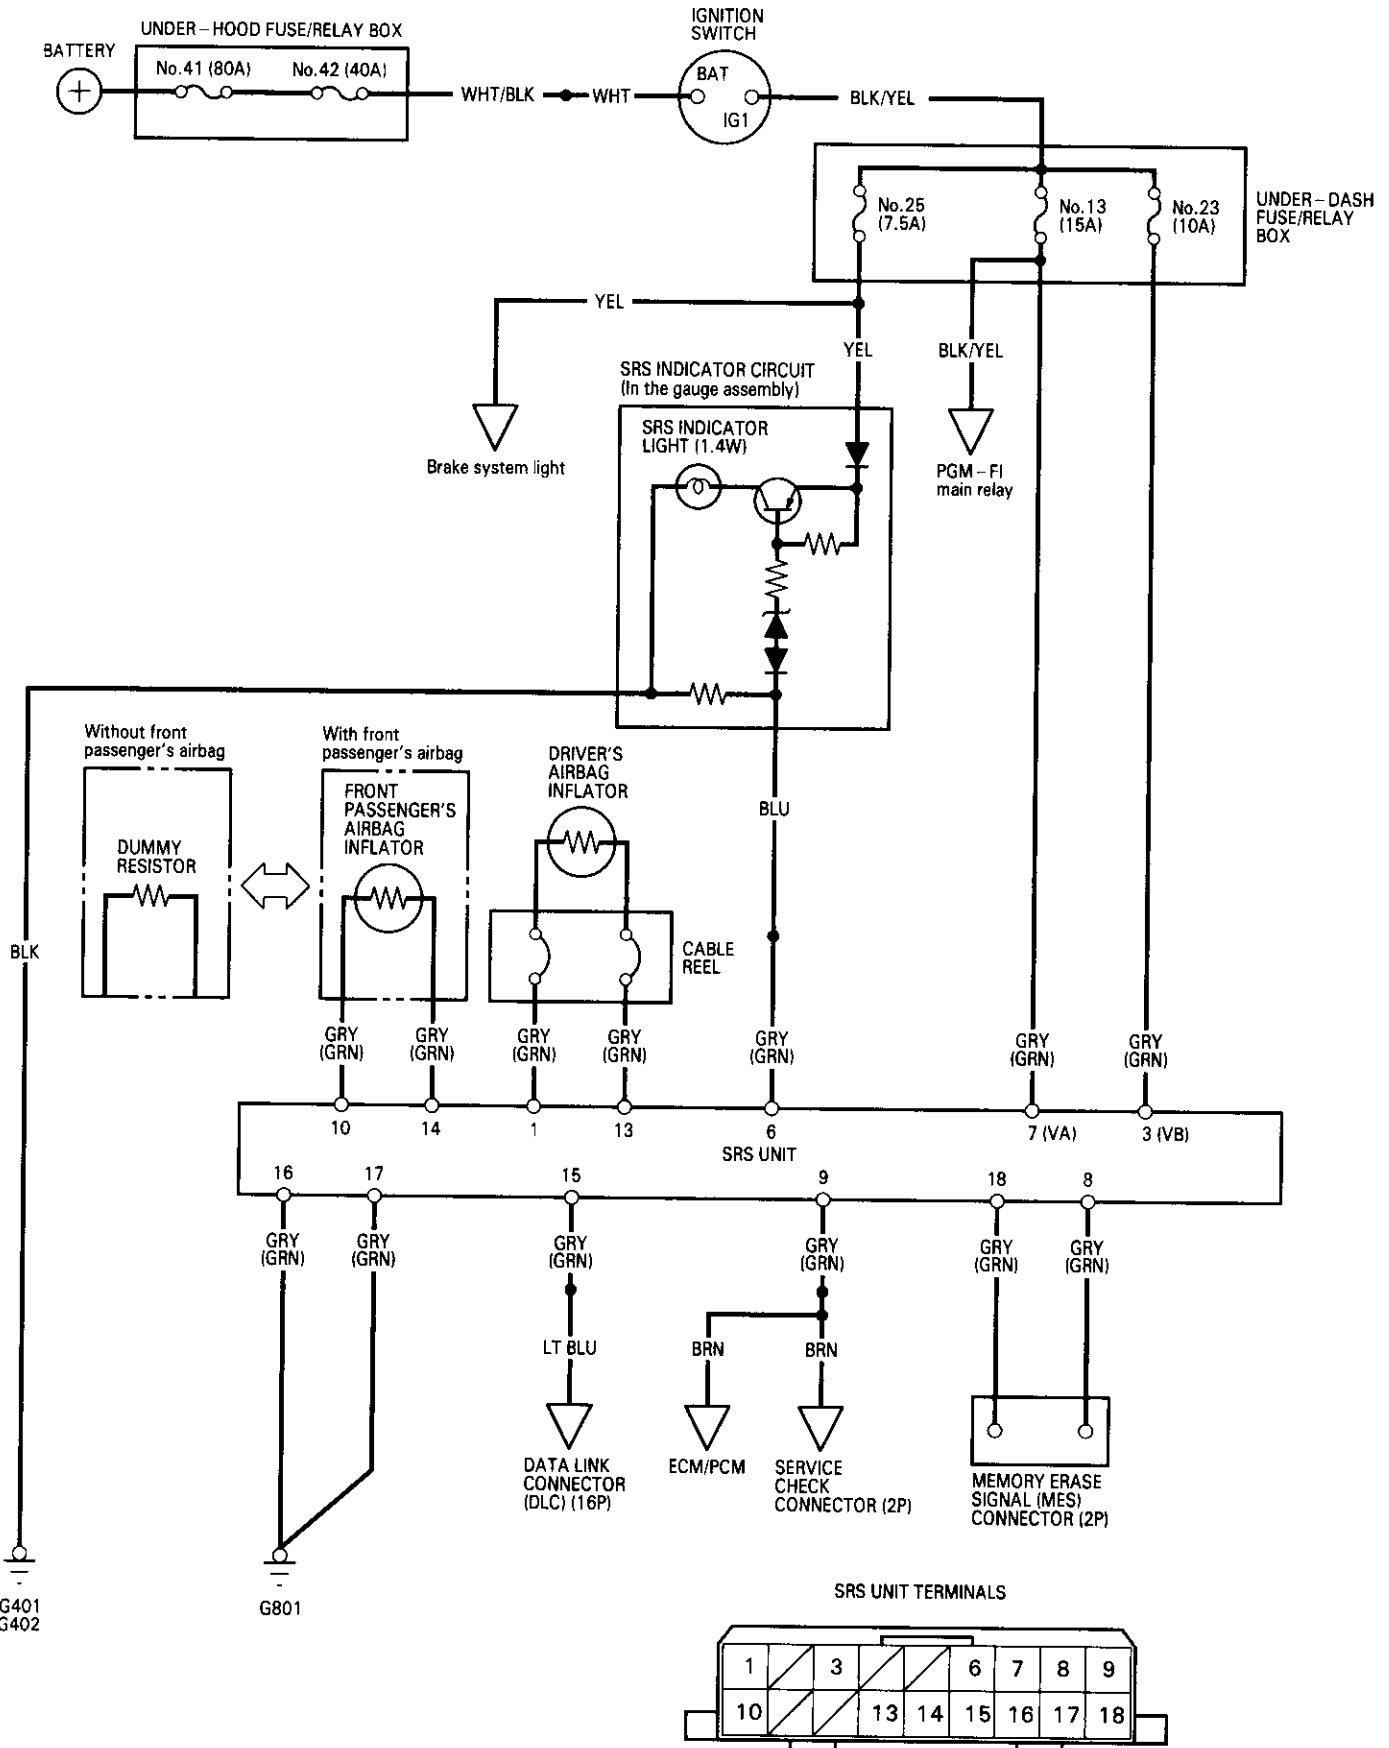

SRS UNIT TERMINALS

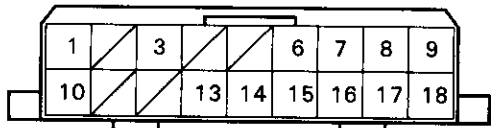


Terminal side of male terminals



Precautions/Procedures

General Precautions

- Carefully inspect any SRS part before you install it. Do not install any part that shows signs of being dropped or improperly handled, such as dents, cracks or deformation:
 - Airbag assemblies
 - Cable reel
 - SRS unit

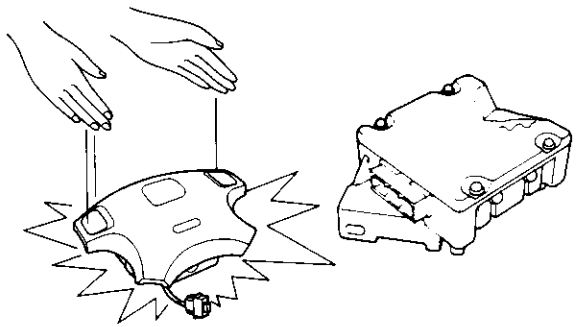

- Use only a digital multimeter to check the system. If it's not a Honda multimeter, make sure its output is 10 mA (0.01 A) or less when switched to the smallest value in the ohmmeter range. A tester with a higher output could damage the airbag circuit or cause accidental deployment and possible injury.
- Do not install used SRS parts from another vehicle. When making SRS repairs, use only new parts.
- Except when performing electrical inspections, always disconnect both the negative cable and positive cable from the battery, and wait at least three minutes before beginning work.
- Replacement of the combination light and wiper/washer switches and cruise control switch can be done without removing the steering wheel:
 - For combination light and wiper/washer switch replacement, see section 23.
 - For cruise control set/resume switch replacement, see section 23.
- Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbag(s) could accidentally deploy and cause damage or injury.
- Whenever the airbag(s) has(have) been activated, replace the SRS unit.


Airbag Handling and Storage

Do not try to disassemble the airbag assembly. It has no serviceable parts. Once an airbag has been operated (deployed), it cannot be repaired or reused.

For temporary storage of the airbag assembly during service, please observe the following precautions:

- Store the removed airbag assembly with the pad surface up. The driver's (and front passenger's) airbag connector(s) has (have) a built-in short contact (see page 24-11).

▲ WARNING If the airbag is improperly stored face down, accidental deployment could propel the unit with enough force to cause serious injury.

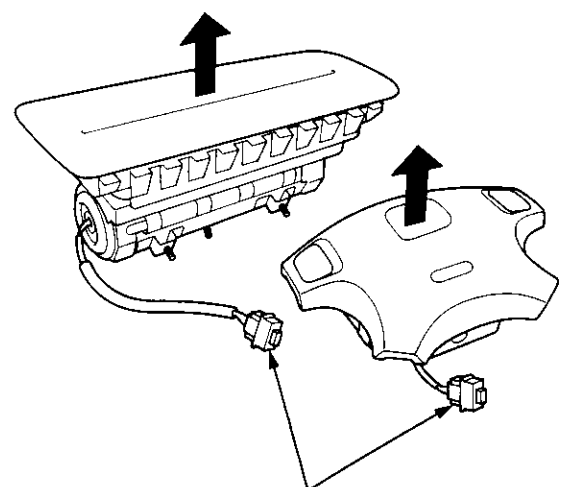

AIRBAG CONNECTORS
(With built-in short contact)


- Store the removed airbag assembly on a secure flat surface away from any high heat source (exceeding 212°F/100°C) and free of any oil, grease, detergent or water.

CAUTION: Improper handling or storage can internally damage the airbag assembly, making it inoperative. If you suspect the airbag assembly has been damaged, install a new unit, and refer to the Deployment/Disposal procedures for disposing of the damaged airbag.

Precautions/Procedures

SRS Unit Precautions

- Take extra care when painting or doing body work in the area below the dashboard. Avoid direct exposure of the SRS unit or wiring to heat guns, welding, or spraying equipment.
- Disconnect the airbag connector(s) before disconnecting SRS harness connectors (see page 24-11).
- After any degree of frontal body damage, or after a collision without airbag deployment, inspect the SRS unit for physical damage. If it is dented, cracked, or deformed, replace it.

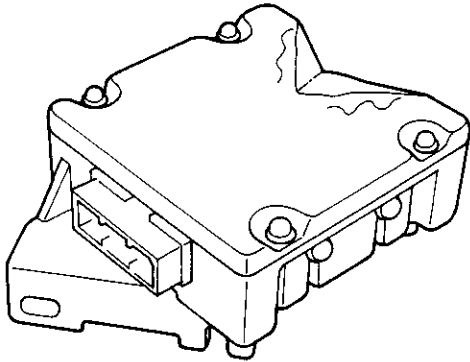

- Be sure the SRS unit is installed securely.
- Do not disassemble the SRS unit.
- Store the SRS unit in a cool (less than about 104°F/ 40°C) and dry (less than 80% humidity, no moisture) place. Do not spill water or oil on the SRS unit, and keep it away from dust.
- During installation or replacement, be careful not to bump (impact wrench, hammer, etc.) the area around the SRS unit. The airbag(s) could accidentally deploy and cause damage or injury.

Inspection After Deployment


After a collision in which the airbag(s) was (were) deployed, replace the SRS unit, and inspect the following:

1. Inspect all the SRS wire harnesses. Replace, don't repair, any damaged harnesses.
2. Inspect the cable reel for heat damage. If there is any damage, replace the cable reel.
3. After the vehicle is completely repaired, turn the ignition switch on. If the SRS indicator light comes on for about six seconds and then goes off, the SRS system is OK. If the indicator light does not function properly, go to SRS Troubleshooting.


Wiring Precautions

- Never attempt to modify, splice or repair SRS wiring.

NOTE: SRS wiring can be identified by special yellow outer protective covering.

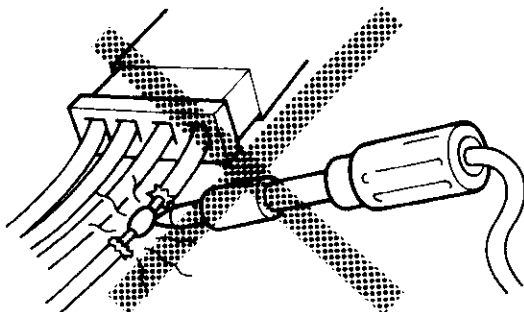

- Be sure to install the harness wires so that they are not pinched or interfering with other parts.

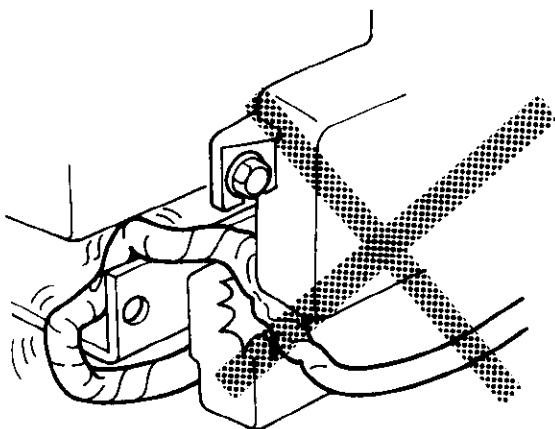


- Make sure all SRS ground locations are clean and grounds are securely fastened for optimum metal-to-metal contact. Poor grounding can cause intermittent problems that are difficult to diagnose.

Backprobing Spring-loaded Lock Connectors


- When checking voltage or resistance on this type of connector the first time, it is necessary to remove the retainer to insert tester probes from the wire side.

NOTE: It is not necessary to reinstall the removed retainer; the terminals will stay locked in the connector housing.

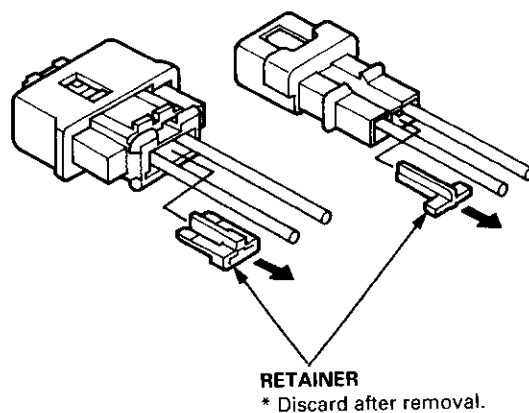

- To remove the retainer, insert a flat tip screwdriver between connector body and retainer, and carefully pry out the retainer.

NOTE: Take care not to break the connector.

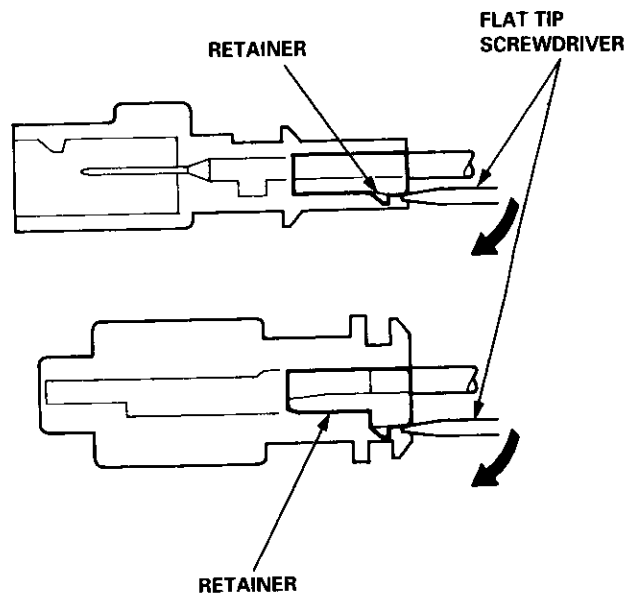

Precautions/Procedures


Spring-loaded Lock Connector

Some SRS system connectors have a spring-loaded lock.

Disconnecting

To release the lock, pull the spring-loaded sleeve toward the stop while holding the opposite half of the connector. Then pull the connector halves apart.


NOTE: Be sure to pull on the sleeve and not on the connector half.

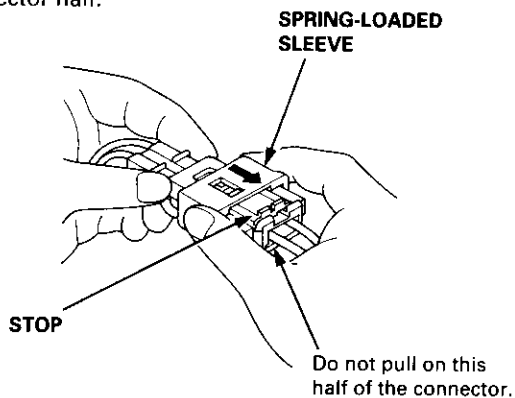


Connecting

1. Hold the pawl-side connector half, and press on the back of the sleeve-side connector half in the direction shown. As the two connector halves are pressed together, the sleeve is pushed back by the pawl.

NOTE: Do not touch the sleeve.

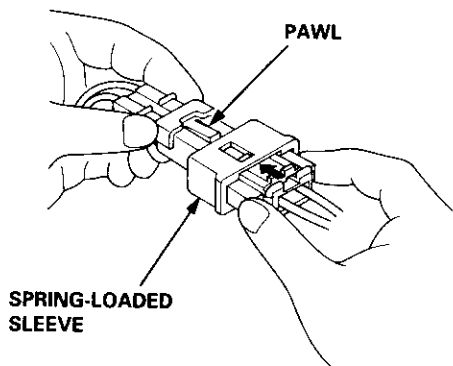


2. When the connector halves are completely connected, the pawl is released, and the spring-loaded sleeve locks the connector.

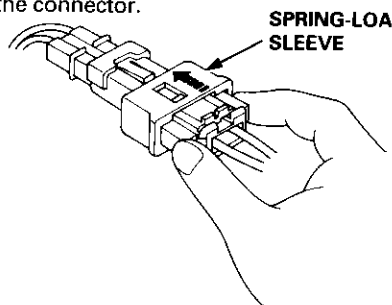


Spring-loaded Lock Connector with Built-in Short Contact

The driver's airbag (and front passenger's) airbag has (have) a spring-loaded lock connector with a built-in short contact. When this connector is disconnected, the power terminal and the ground terminal in the airbag connector are automatically shorted.

Connector halves disconnected:

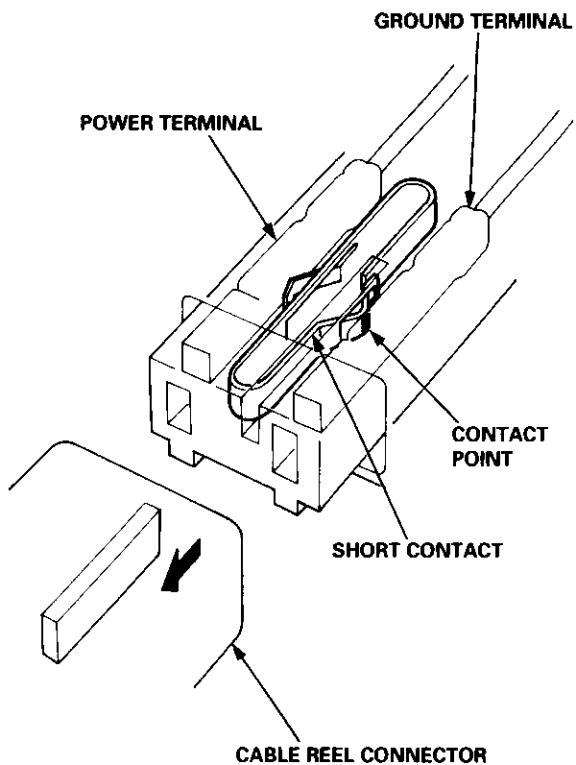

Connector halves connected:

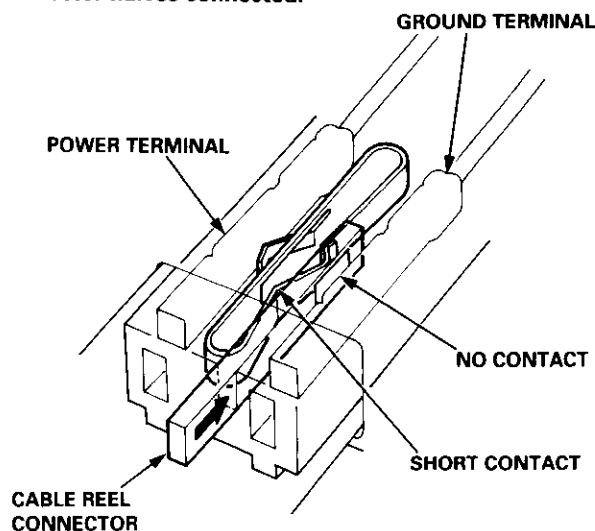




Disconnecting the Airbag Connector(s)

⚠ WARNING To prevent accidental airbag deployment, turn the ignition switch OFF, disconnect the negative battery cable, and wait three minutes before disconnecting any SRS connectors.


- Before disconnecting the SRS main harness (A) from the SRS unit, disconnect both airbags (C, D).
- Before disconnecting the cable reel 2P connector (B), disconnect the driver's airbag 2P connector (C).

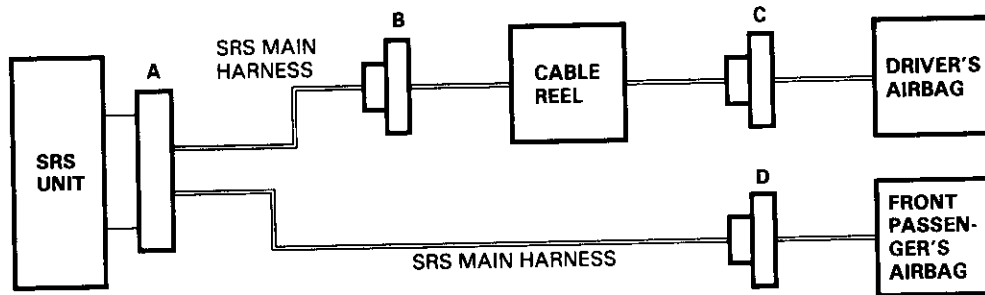

1. Disconnect the negative battery cable, and wait at least three minutes.
2. Disconnect the airbag connector(s).


Driver's Side:

- Remove the access panel from the steering wheel, then disconnect the driver's airbag 2P connector and cable reel 2P connector.

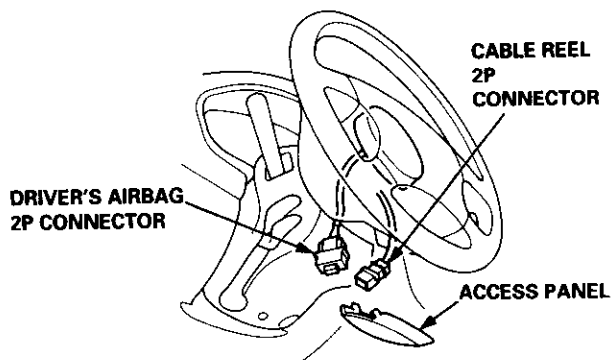

Front Passenger's Side:

- Remove the glove box, then disconnect the front passenger's airbag 2P connector and SRS main harness 2P connector.

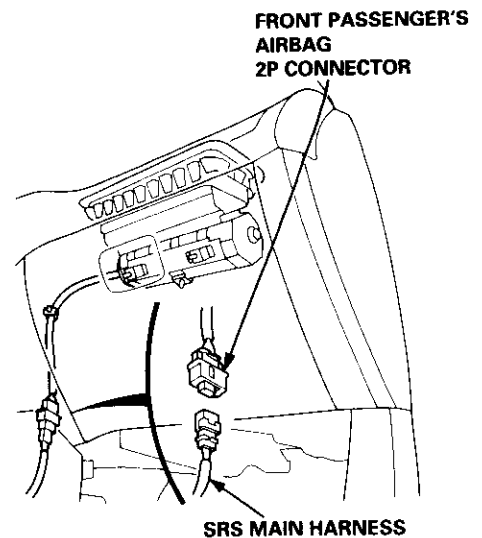


Precautions/Procedures


Steering-related Precautions

Steering Wheel and Cable Reel Alignment

NOTE: To avoid misalignment of the steering wheel on reassembly, make sure the wheels are turned straight ahead before removing the steering wheel.

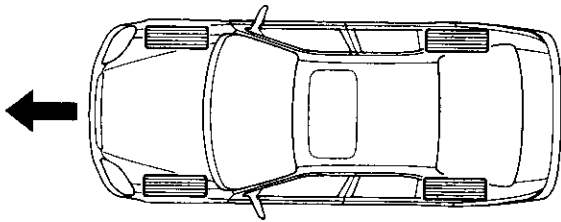

Rotate the cable reel clockwise until it stops. Then rotate it counterclockwise (approximately two and a half turns) until the arrow mark on the cable reel label points straight up.

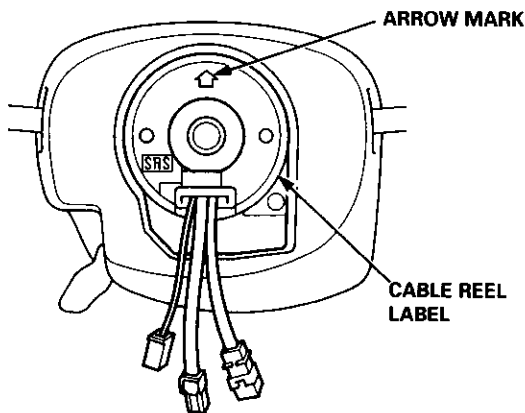


Steering Column Removal

CAUTION:

- Before removing the steering column, first disconnect the connector between the cable reel and the SRS main harness.
- If the steering column is going to be removed without dismantling the steering wheel, lock the steering by turning the ignition key to 0-LOCK position, or remove the key from the ignition so that the steering wheel will not turn.

NOTE:

- When the airbag assembly and cable reel are disconnected, and the battery is reconnected and the ignition switch is turned ON (II), the SRS unit will store this as an open in the driver's airbag inflator, and the SRS indicator light will come on. In such a case, make sure to confirm the DTC, then clear the SRS unit memory.
- For disconnecting the spring-loaded lock type connector, refer to page 24-10.

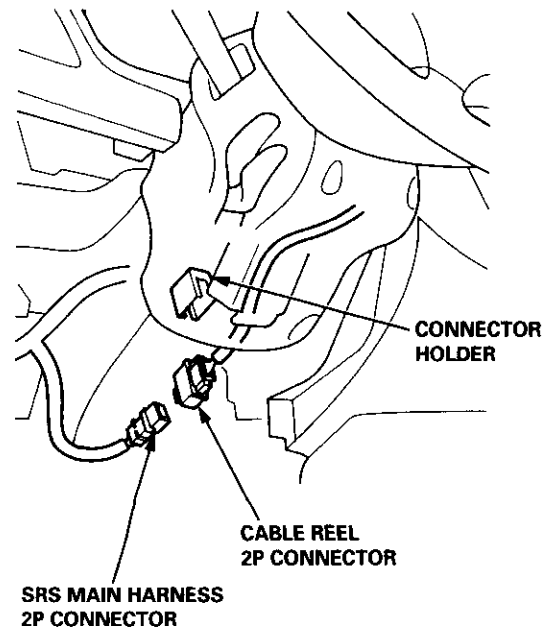

Do not replace the original steering wheel with any other design because it will make it impossible to properly install the airbag (only use genuine Honda replacement parts).

After reassembly, confirm the wheels are still turned straight ahead and that the steering wheel spoke angle is correct. If minor spoke angle adjustment is necessary, do so only by adjusting the tie-rods, not by removing and repositioning the steering wheel.



Troubleshooting

Self-diagnostic Procedures

The self-diagnostic function of the SRS system allows it to locate the causes of system problems and to store this information in memory. For easier troubleshooting, this data can be retrieved via a data link circuit.

- When you turn the ignition switch ON (II), the SRS indicator will come on. If it goes off after six seconds, the system is normal.
- If there is an abnormality, the system locates and defines the problem, stores this information in memory, and turns the SRS indicator light on. The data will remain in the memory even when the ignition switch is turned off or if the battery is disconnected.
- When you connect the SCS service connector to the service check connector (2P), and turn the ignition switch ON (II), the SRS indicator light will indicate the diagnostic trouble code (DTC) by the number of blinks.
- After reading and recording the DTC, proceed with the troubleshooting for this code.


Precautions

- Use only a digital multimeter to check the system. If it's not a Honda multimeter, make sure its output is 10 mA (0.01 A) or less when switched to the smallest value in the ohmmeter range. A tester with a higher output could damage the airbag circuit or cause accidental airbag deployment and possible injury.
- Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbags could accidentally deploy and cause damage or injuries.
- Before you remove the SRS main harness, disconnect the driver's airbag connector (and the front passenger's airbag connector).
- Make sure the battery is sufficiently charged (see section 23). If the battery is dead or low, measuring values won't be correct.
- Do not touch a tester probe to the terminals in the SRS unit or harness connectors, and do not connect the terminals with a jumper wire. Use only the backprobe set and the SCS service connector. For backprobing spring-loaded lock type connectors, refer to page 24-9.

Reading the DTC

When the SRS indicator light is on, read the DTC using one of these methods:


- A. Connect the Honda PGM Tester to the 16P Data Link Connector (DLC), and follow the tester's prompts. If the tester indicates no DTC, double-check by jumping the service check connector and watching the SRS indicator light (see next page).

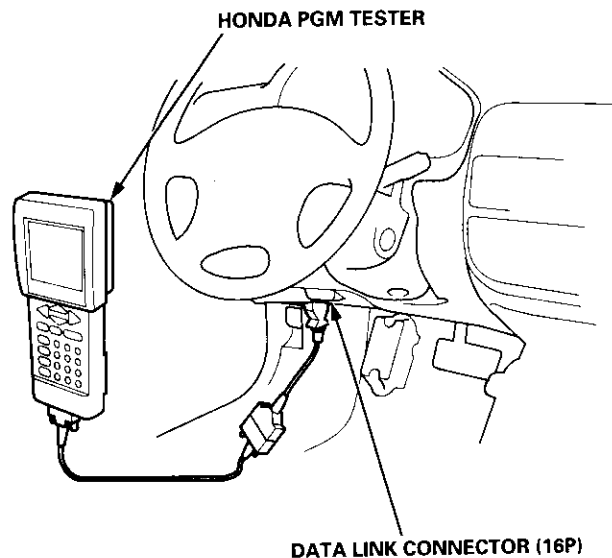

Troubleshooting

B. The SRS indicator light can also indicate the DTC by the number of blinks when the SCS service connector is connected to the service check connector (2P).


1. Turn the ignition switch OFF, and wait for ten seconds. Then connect the SCS service connector to the service check connector (2P). If you do not wait ten seconds, the SRS unit will not be completely reset and will not output DTCs.

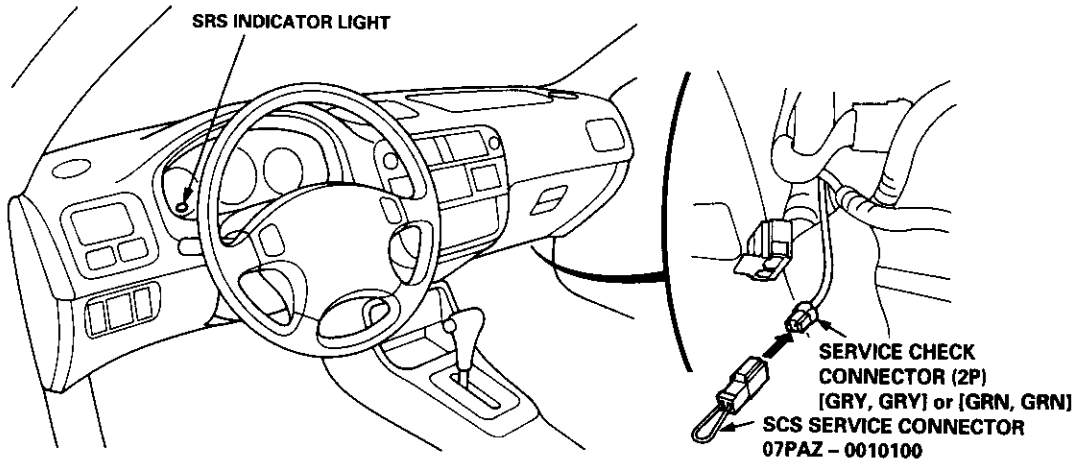


2. Turn the ignition switch ON (II). The SRS indicator light comes on for about six seconds and goes off. Then it will indicate the DTC:
 - The DTC consists of a main code and a sub-code.
 - Including the most recent problem, up to three different malfunctions can be indicated.
 - In case of a continuous failure, the DTC will be indicated repeatedly (see example 1 below).
 - In case of an intermittent failure, the SRS indicator light will indicate the DTC one time, then it will stay on (see example 2 below).
 - If both a continuous and an intermittent failure occur, both DTCs will be indicated as continuous failures.
 - In case the system is normal (no DTC), the SRS indicator light will stay on (see example 3).
3. Read the DTC.
4. Turn the ignition switch OFF, and wait for ten seconds. Then disconnect the SCS service connector from the service check connector (2P).

Examples of DTC Indications:


1. Continuous failure, SRS Indicator Light is:

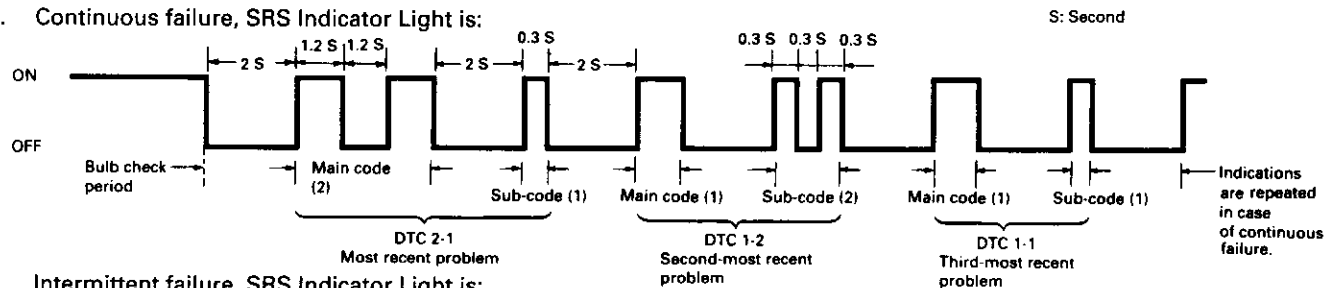

2. Intermittent failure, SRS Indicator Light is:

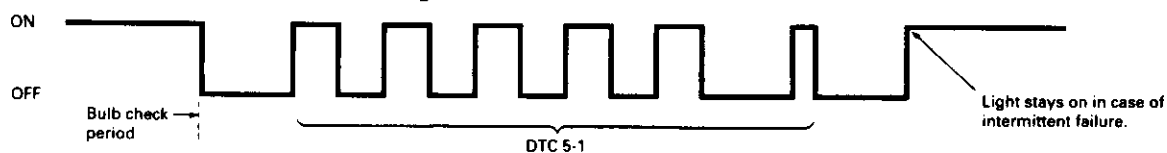

3. Normal (no failure), SRS Indicator Light is:

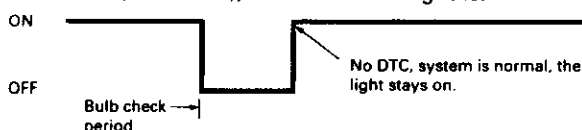




Erasing the DTC Memory

To erase the DTC(s) from the SRS unit, use a Honda PGM Tester (see the Honda PGM Tester SRS vehicle System Supplement) or the following procedure.


1. Make sure the ignition switch is OFF.
2. Connect the SCS service connector to the MES connector (2P). Do not use a jumper wire.

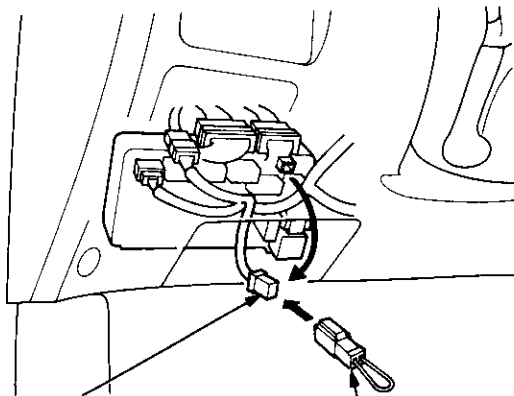

MEMORY ERASE SIGNAL (MES) CONNECTOR (2P) [GRY, GRN] or [GRN, GRN]

SCS SERVICE CONNECTOR 07PAZ - 0010100

3. Turn the ignition switch ON (II).
4. The SRS indicator light comes on for about six seconds and goes off. Remove the SCS service connector from the MES connector (2P) within four seconds after the SRS indicator light went off.
5. The SRS indicator light comes on again. Reconnect the SCS service connector to the MES connector (2P) within the four seconds after the SRS indicator light comes on.
6. The SRS indicator light goes off. Remove the SCS service connector from the MES connector (2P) within four seconds.
7. The SRS indicator light indicates that the memory is erased by blinking two times.
8. Turn the ignition switch OFF, and wait for ten seconds.

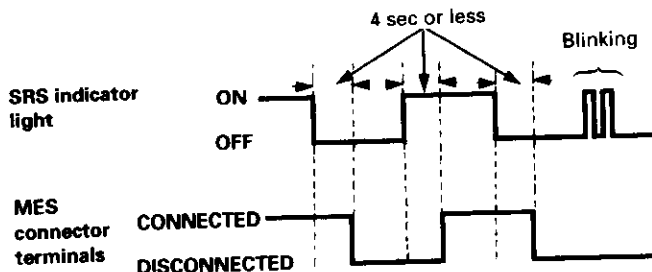


Troubleshooting Intermittent Failures


If there was a malfunction, but it doesn't recur, it will be stored in the memory as an intermittent failure, and the SRS indicator light comes on.

After checking the DTC, troubleshoot as follows:

1. Read the DTC (see "Reading the DTC").
2. Erase the DTC memory (see "Erasing the DTC Memory").
3. With the shift lever in neutral, turn the ignition switch ON (II), and let the engine idle.
4. The SRS indicator light comes on for about six seconds and goes off.

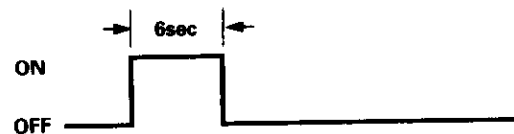

5. Shake the wire harness and the connector, take a test drive (quick acceleration, quick braking, cornering), and turn the steering wheel fully left and right, and hold it there for five to ten seconds to find the cause of the intermittent failure. If the problem recurs, the SRS indicator light will stay on.

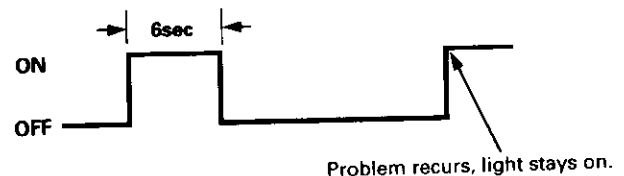

6. If you can't duplicate the intermittent failure, the system is OK at this time.

Troubleshooting

SRS Unit Identification


*: On '98 models, the troubleshooting procedures are different for each type of SRS unit. Identify the SRS unit in the vehicle using the chart below, then follow the proper flowchart in the following pages.

'98 Model SRS units

MAKER	PARTS NUMBER	IDENTIFICATION MARK*	Remark
NEC	77960 - S04 - A91	M1	Driver's side SRS airbag only
	77960 - S04 - N91	M1	Driver's & Passenger's side SRS airbag
KEIHIN	77960 - S04 - N91	M2	Driver's & Passenger's side SRS airbag
SIEMENS	77960 - S02 - A82	M3	Driver's & Passenger's side SRS airbag

'96 - '97 Models SRS units

MAKER	PARTS NUMBER	Remark
NEC	77960 - S04 - C81	Driver's side SRS airbag only
	77960 - S04 - N81	Driver's & Passenger's side SRS airbag
TAKATA	77960 - S04 - N82	Driver's & Passenger's side SRS airbag
SIEMENS	77960 - S02 - A81	Driver's & Passenger's side SRS airbag, '97 Model only

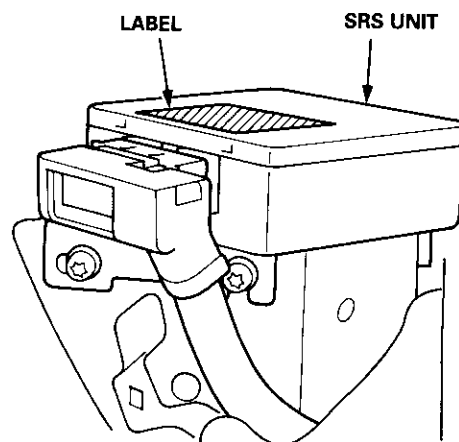



Diagnostic Trouble Code (DTC) Chart — '96 – 97 Models

SRS indicator light	DTC	Possible cause	Corrective action	See page
doesn't come on	none (doesn't come on)	Faulty SRS indicator light circuit	Troubleshooting	24-26
comes on	none *4 (doesn't go off)	Faulty SRS indicator light circuit, internal failure of SRS unit, faulty SRS power supply.	Troubleshooting	24-29
	1-1	Open in the driver's airbag inflator		24-42
	1-2	Increased resistance in the driver's airbag inflator		24-42
	1-3	Short to another wire in the driver's airbag inflator or decreased resistance		24-44
	1-4	Short to power in the driver's airbag inflator		24-46
	1-5	Short to ground in the driver's airbag inflator		24-48
	2-1	With front passenger's airbag: Open in the passenger's airbag inflator Without front passenger's airbag: Open in the dummy resistor		Troubleshooting
	2-2	With front passenger's airbag: Increased resistance in the passenger's airbag inflator Without front passenger's airbag: Increased resistance in the dummy resistor	24-50 24-58	
	2-3	With front passenger's airbag: Short to another wire in the passenger's airbag inflator or decreased resistance Without front passenger's airbag: Short to another wire in the dummy resistor or decreased resistance	24-52 24-59	
	2-4	With front passenger's airbag: Short to power in the passenger's airbag inflator Without front passenger's airbag: Short to power in the dummy resistor	24-54 24-60	
	2-5	With front passenger's airbag: Short to ground in the passenger's airbag inflator Without front passenger's airbag: Short to ground in the dummy resistor	24-56 24-61	

(cont'd)

Troubleshooting

Diagnostic Trouble Code (DTC) Chart — '96 – '97 Models (cont'd)

SRS indicator light	DTC	Possible cause	Corrective action	See page
comes on	5-1*2	Internal failure of the SRS unit	SRS unit replacement	24-76
	5-2			
	5-3			
	5-4			
	5-5			
	6-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	6-2			
	6-3			
	6-4			
	7-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	7-2			
	7-3			
	8-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	8-2			
	8-3			
	8-4			
	8-5			
8-6	Internal failure of the SRS unit or two failures at a time	Troubleshooting	24-62	
8-6*3	Internal failure of the SRS unit	SRS unit replacement	24-76	
9-1*1*4	Internal failure of the SRS unit	SRS unit replacement	24-76	
9-2*2*4	Faulty SRS power supply (VB line)	Troubleshooting	24-64	
10-1	SRS unit replacement code (SRS unit must not be used any longer)	SRS unit replacement	24-76	

NOTE:

*1: In case of an intermittent failure DTC 9-1, it means there was an internal failure of the SRS unit or a faulty SRS indicator light circuit. Do the troubleshooting for intermittent failures (see page 24-15).

*2: If both DTC 9-2 and DTC 5-1 are indicated, do the troubleshooting for DTC 9-2.

*3: Apply to the '97 model coupe HX and DX.

*4: DTC cannot be read with a Honda PGM Tester; check by jumping the SCS service connector.



Diagnostic Trouble Code (DTC) Chart — '98 Model

NEC SRS Unit

SRS indicator light	DTC	Possible cause	Corrective action	See page
doesn't come on	none (doesn't come on)	Faulty SRS indicator light circuit	Troubleshooting	24-26
comes on	none*3 (doesn't go off)	Faulty SRS indicator light circuit, internal failure of SRS unit, faulty SRS power supply (VB line)	Troubleshooting	24-34
	No DTC*3 (light comes on after self-diagnosis)	Faulty SRS power supply (VA line)	Troubleshooting	24-39
	1-1	Open in the driver's airbag inflator	Troubleshooting	24-42
	1-2	Increased resistance in the driver's airbag inflator		24-42
	1-3	Short to another wire in the driver's airbag inflator or decreased resistance		24-44
	1-4	Short to power in the driver's airbag inflator		24-46
	1-5	Short to ground in the driver's airbag inflator		24-48
	2-1	With front passenger's airbag: Open in the passenger's airbag inflator Without front passenger's airbag: Open in the dummy resistor		Troubleshooting
	2-2	With front passenger's airbag: Increased resistance in the passenger's airbag inflator Without front passenger's airbag: Increased resistance in the dummy resistor	24-50 24-58	
	2-3	With front passenger's airbag: Short to another wire in the passenger's airbag inflator or decreased resistance Without front passenger's airbag: Short to another wire in the dummy resistor or decreased resistance	24-52 24-59	
	2-4	With front passenger's airbag: Short to power in the passenger's airbag inflator Without front passenger's airbag: Short to power in the dummy resistor	24-54 24-60	
	2-5	With front passenger's airbag: Short to ground in the passenger's airbag inflator Without front passenger's airbag: Short to ground in the dummy resistor	24-56 24-61	

(cont'd)

Troubleshooting

Diagnostic Trouble Code (DTC) Chart — '98 Model (cont'd)

SRS indicator light	DTC	Possible cause	Corrective action	See page
comes on	5-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	5-4			
	6-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	6-2			
	6-3			
	6-4			
	7-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	7-2			
	7-3			
	8-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	8-2			
	8-6	Internal failure of the SRS unit or two failures at a time	Troubleshooting	24-62
	9-1*1 *3	Internal failure of the SRS unit	SRS unit replacement	24-76
	9-2*2 *3	Internal failure of the SRS unit	SRS unit replacement	24-76
10-1	SRS airbags deployed (SRS unit must be replaced)	SRS unit replacement	24-76	

NOTE:

- *1: In case of an intermittent failure DTC 9-1, it means there was an internal failure of the SRS unit or a faulty SRS indicator light circuit. Do the troubleshooting for intermittent failures (page 24-15).
- *2: In case of an intermittent failure DTC 9-2, it means there was an internal failure of the power supply (VB line). Do the troubleshooting for intermittent failures.
- *3: DTC cannot be read with a Honda PGM Tester; check by jumping the SCS service connector.



KEIHIN SRS Unit

SRS indicator light	DTC	Possible cause	Corrective action	See page
doesn't come on	none (doesn't come on)	Faulty SRS indicator light circuit	Troubleshooting	24-26
comes on	none*3 (doesn't go off)	Faulty SRS indicator light circuit, internal failure of SRS unit, faulty SRS power supply (VB line)	Troubleshooting	24-34
	1-1	Open in the driver's airbag inflator	Troubleshooting	24-42
	1-2	Increased resistance in the driver's airbag inflator		24-42
	1-3	Short to another wire in the driver's airbag inflator or decreased resistance		24-44
	1-4	Short to power in the driver's airbag inflator		24-46
	1-5	Short to ground in the driver's airbag inflator		24-48
	2-1	Open in the passenger's airbag inflator	Troubleshooting	24-50
	2-2	Increased resistance in the passenger's airbag inflator		24-50
	2-3	Short to another wire in the passenger's airbag inflator or decreased resistance		24-52
	2-4	Short to power in the passenger's airbag inflator		24-54
	2-5	Short to ground in the passenger's airbag inflator		24-56

(cont'd)


Troubleshooting

Diagnostic Trouble Code (DTC) Chart — '98 Model (cont'd)

SRS indicator light	DTC	Possible cause	Corrective action	See page
comes on	5-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	5-2			
	5-3			
	5-4			
	6-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	6-2			
	6-3			
	6-4			
	7-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	7-2			
	7-3			
	8-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	8-2			
	8-6			
	9-1*1 *3	Internal failure of the SRS unit	SRS unit replacement	24-76
	9-2*2 *3	Internal failure of the SRS unit	SRS unit replacement	24-76
10-1	SRS airbags deployed (SRS unit must be replaced)	SRS unit replacement	24-76	

NOTE:

- *1: In case of an intermittent failure DTC 9-1, it means there was an internal failure of the SRS unit or a faulty SRS indicator light circuit. Do the troubleshooting for intermittent failures (page 24-15).
- *2: In case of an intermittent failure DTC 9-2, it means there was an internal failure of the power supply (VB line). Do the troubleshooting for intermittent failures.
- *3: DTC cannot be read with a Honda PGM Tester; check by jumping the SCS service connector.



SIEMENS SRS Unit

SRS indicator light	DTC	Possible cause	Corrective action	Sec page
doesn't come on	none (doesn't come on)	Faulty SRS indicator light circuit	Troubleshooting	24-26
comes on	none* ³ (doesn't go off)	Faulty SRS indicator light circuit, internal failure of SRS unit, faulty SRS power supply (VB line)	Troubleshooting	24-34
	1-1	Open in the driver's airbag inflator	Troubleshooting	24-42
	1-3	Short to another wire in the driver's airbag inflator or decreased resistance		24-44
	1-4	Short to power in the driver's airbag inflator		24-46
	1-5	Short to ground in the driver's airbag inflator		24-48
	2-1	Open in the passenger's airbag inflator	Troubleshooting	24-50
	2-3	Short to another wire in the passenger's airbag inflator or decreased resistance		24-52
	2-4	Short to power in the passenger's airbag inflator		24-54
	2-5	Short to ground in the passenger's airbag inflator		24-56

(cont'd)

Troubleshooting

Diagnostic Trouble Code (DTC) Chart — '98 Model (cont'd)

SRS indicator light	DTC	Possible cause	Corrective action	See page
comes on	5-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	5-4			
	6-3	Internal failure of the SRS unit	SRS unit replacement	24-76
	6-4			
	7-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	7-2			
	7-3			
	8-1	Internal failure of the SRS unit	SRS unit replacement	24-76
	8-2			
	8-6			
	9-1*1 *3	Internal failure of the SRS unit	SRS unit replacement	24-76
	9-2*2 *3	Internal failure of the SRS unit	SRS unit replacement	24-76
	10-1	SRS airbags deployed (SRS unit must be replaced)	SRS unit replacement	24-76


NOTE:

- *1: In case of an intermittent failure DTC 9-1, it means there was an internal failure of the SRS unit or a faulty SRS indicator light circuit. Do the troubleshooting for intermittent failures (page 24-15).
- *2: In case of an intermittent failure DTC 9-2, it means there was an internal failure of the power supply (VB line). Do the troubleshooting for intermittent failures.
- *3: DTC cannot be read with a Honda PGM Tester; check by jumping the SCS service connector.




SRS Indicator Light Wire Connections

SRS Indicator Light Power Circuit

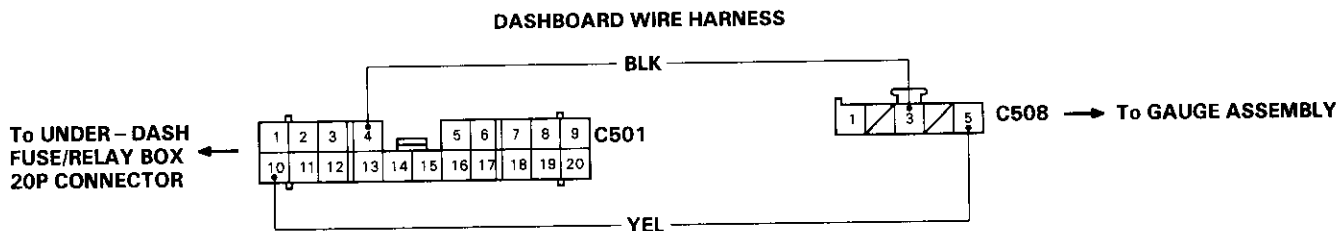

C411, C412 : Terminal side of male terminals
 C501, C502, C508, C801, C802, C807 : Wire side of female terminals

SRS Indicator Light Control Circuit

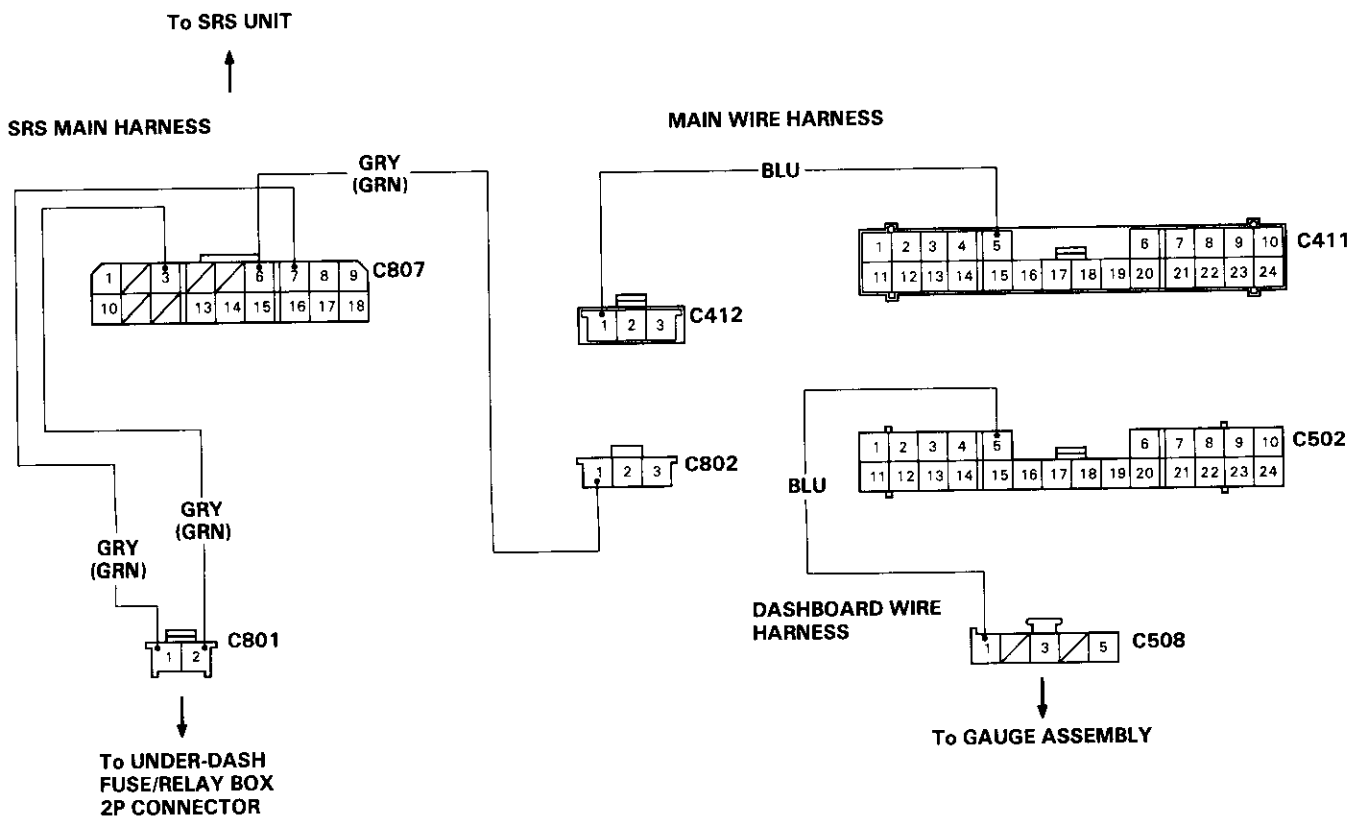

C501 : DASHBOARD WIRE HARNESS 20P CONNECTOR
 C508 : DASHBOARD WIRE HARNESS 5P CONNECTOR
 C801 : SRS MAIN HARNESS 2P CONNECTOR
 C807 : SRS MAIN HARNESS 18P CONNECTOR

C802 : SRS MAIN HARNESS 3P CONNECTOR
 C412 : MAIN WIRE HARNESS 3P CONNECTOR
 C411 : MAIN WIRE HARNESS 24P CONNECTOR
 C502 : DASHBOARD WIRE HARNESS 24P CONNECTOR

Troubleshooting

The SRS Indicator Light Doesn't Come On

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbag(s) could accidentally deploy and cause damage or injuries.

Check the power supply (fuse):

Turn the ignition switch ON (II), and check whether the other indicator lights come on or not (brake system, etc.).

Do the other indicator lights come on?

YES

NO

Check the fuse:

Check the No. 25 (7.5 A) fuse in the under-dash fuse/relay box.

Is the fuse OK?

YES

NO

Check the bulb:

Replace the No. 25 (7.5 A) fuse, and check that the SRS indicator light comes on.

Does the SRS indicator light come on?

YES

NO

END

Check the wire harness between fuse and gauge assembly:

Check for an open in the wire harness between fuse No. 25 (7.5 A) and the gauge assembly, and repair. Check that the SRS indicator light comes on.

Does the SRS indicator light come on?

YES

NO

END

Check the SRS indicator light bulb:

1. Turn the ignition switch OFF.
2. Remove the gauge assembly.
3. Check for blown SRS indicator light bulb.

Is the SRS indicator light bulb OK?

YES

NO

Check the SRS indicator light circuit:


Replace the bulb, and reconnect the gauge assembly connectors. Then turn the ignition switch ON (II).

Does the SRS indicator light come on?

YES

NO

END

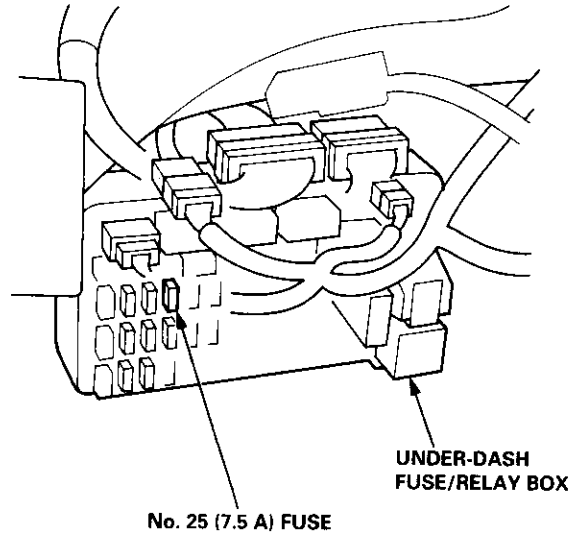

(A) To page 24-27

(B) To page 24-27

From page 24-26

From page 24-26

(A)

(B)

Check the SRS indicator light circuit:

1. Disconnect the dashboard wire harness 5P connector from the gauge assembly.
2. Connect a voltmeter between the No. 1 terminal (+) of the 5P connector and ground.
3. Turn the ignition switch ON (II), and measure voltage.



Is there 8.5 V or less for six seconds after the ignition switch has been turned ON (III)?

YES

NO

Faulty SRS indicator light circuit in the gauge assembly; replace the SRS printed circuit board in the gauge assembly.

**DASHBOARD WIRE HARNESS
5P CONNECTOR**

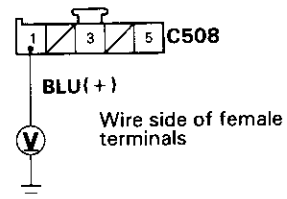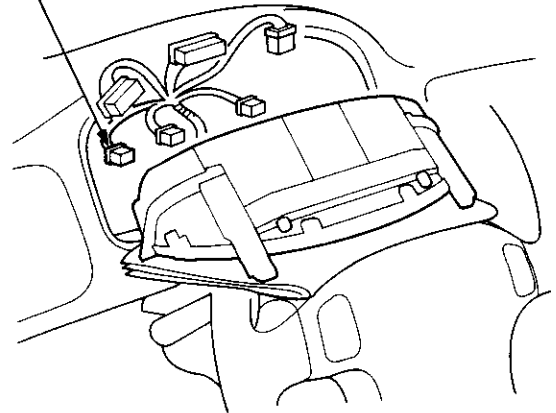

Check the wire harness of the SRS indicator light circuit (1):

1. Turn the ignition switch OFF.
2. Disconnect the main wire harness 24P connector from the dashboard wire harness.
3. Connect a voltmeter between the No. 5 terminal (+) of the main wire harness 24P connector and ground.
4. Turn the ignition ON (II), and measure voltage.


Is there 8.5 V or less for six seconds after the ignition switch has been turned ON (III)?

YES


NO

Short to power in the BLU wire of the dashboard wire harness; repair the harness.

**MAIN WIRE HARNESS
24P CONNECTOR**

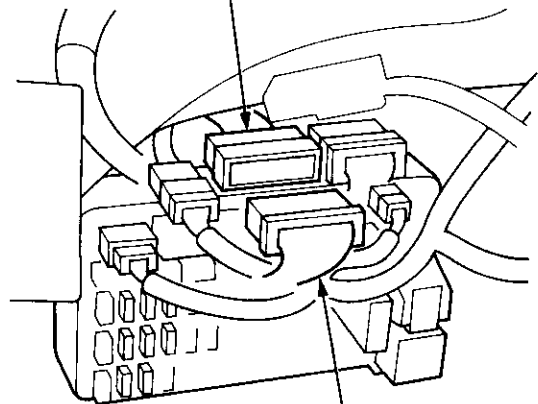

**DASHBOARD WIRE HARNESS
24P CONNECTOR**

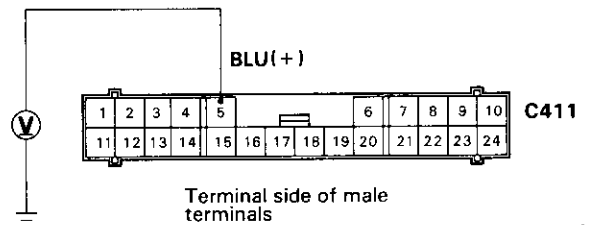

To page 24-28

(cont'd)

Troubleshooting

The SRS Indicator Light Doesn't Come On (cont'd)

From page 24-27

Check the wire harness of the SRS indicator light circuit (2):




1. Turn the ignition switch OFF.
2. Disconnect the SRS main harness 3P connector from the main wire harness.
3. Connect a voltmeter between the No. 1 terminal (+) of the SRS main harness 3P connector and ground.
4. Turn the ignition switch ON (II), and measure voltage.

Is there 8.5 V or less for six seconds after the ignition switch has been turned ON (II)?

YES

NO

Short to power in the BLU wire of the main wire harness; repair the harness.

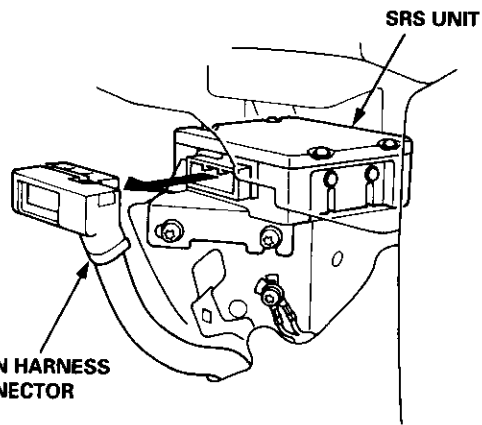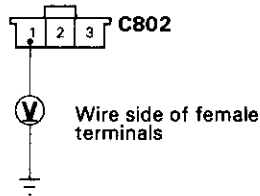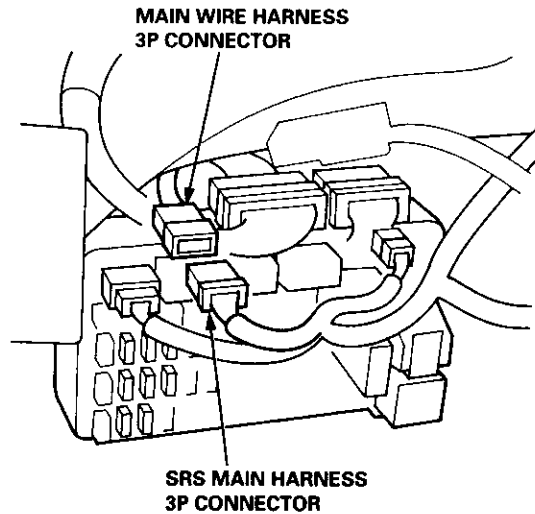

Check the wire harness of the SRS indicator circuit (3):

1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then the positive cable, and wait three minutes.
3. Disconnect the driver's (and front passenger's) airbag connector(s) (see page 24-11).
4. Disconnect the SRS main harness 18P connector from the SRS unit.
5. Connect a voltmeter between the No. 6 terminal (+) of the SRS main harness 18P connector and ground.
6. Turn the ignition switch ON (II), and measure voltage. There should be 0.5 V or less.


Is voltage as specified?

YES

NO

Faulty SRS unit; replace the unit (see page 24-76).

SRS MAIN HARNESS 18P CONNECTOR

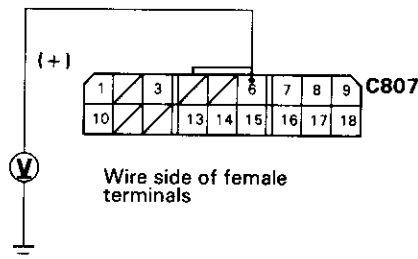

Short to power in the BLU wire of the SRS main harness; replace the harness.



The SRS Indicator Light Doesn't Go Off — '96 - '97 Models

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbag(s) could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch OFF, and wait for ten seconds.
3. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check the No. 13 (15 A) and No. 23 (10 A) fuses:

1. Turn the ignition switch OFF.
2. Check for blown No. 13 (15 A) and No. 23 (10 A) fuses in the under-dash fuse/relay box.

Are the fuses OK?

YES NO

Replace the fuses, and erase the memory

1. Replace the fuses.
2. Connect the SCS service connector to the MES connector.
3. Erase the DTC memory (see page 24-15).
4. Turn the ignition switch OFF, then disconnect the SCS service connector from the MES connector.
5. Turn the ignition switch ON (II).

Does the SRS indicator light go off after six seconds?

YES NO

END

Confirm the DTC, and continue troubleshooting.

Check for an open in the SRS main harness (VA line):


1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the driver's (and front passenger's) airbag connector(s) (see page 24-11).
4. Disconnect the SRS main harness 18P connector from the SRS unit.
5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Connect a voltmeter between the No. 7 terminal (+) of the SRS main harness 18P connector and ground.
7. Turn the ignition switch on.

Is there battery voltage?

YES NO

(A)
To page 24-30


Open in the SRS main harness (VA line); replace the SRS main harness.

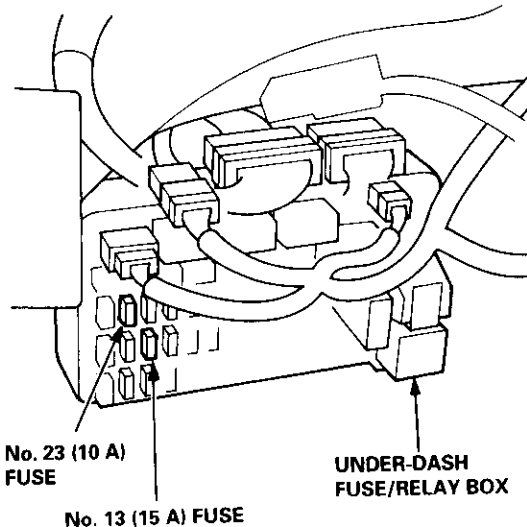

No. 23 (10 A) FUSE

UNDER-DASH FUSE/RELAY BOX


No. 13 (15 A) FUSE

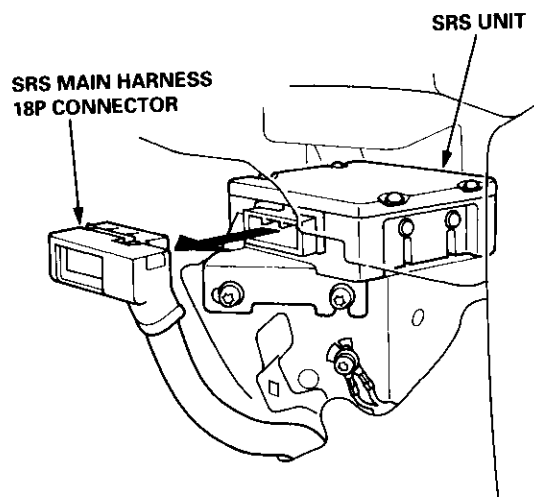

SRS MAIN HARNESS 18P CONNECTOR

SRS UNIT

SRS MAIN HARNESS 18P CONNECTOR

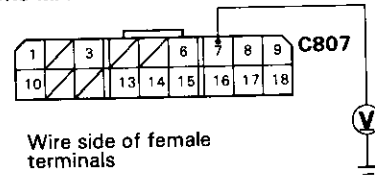

Wire side of female terminals

(cont'd)

Troubleshooting

The SRS Indicator Light Doesn't Go Off — '96 – 97 Models (cont'd)

From page 24-29
(A)

Check the SRS unit:
Connect the SRS main harness 18P connector terminals No. 6 and No. 7 with a jumper wire and backprobe adapters.



Does the SRS indicator light go off?

YES


NO

**Faulty SRS unit or poor contact at the SRS main harness 18P connector; check the connector.
If the connector is OK, replace the SRS unit.**

(B)
To page 24-31

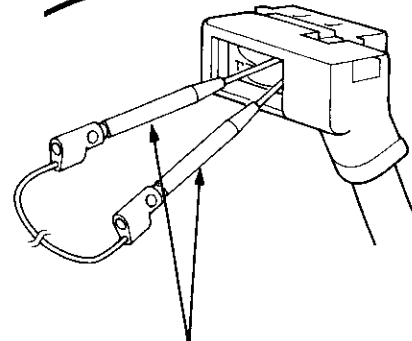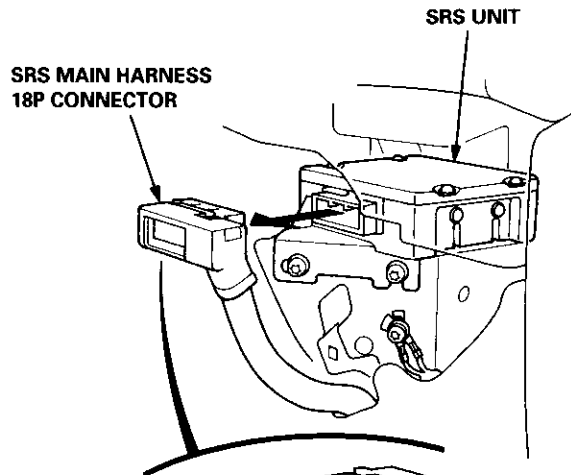

BACKPROBE ADAPTER, 17 mm
07TAZ - 001020A

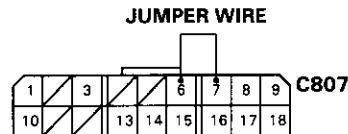

Wire side of female terminals

From page 24-30
(B)

Check the SRS indicator circuit:
 1. Turn the ignition switch OFF.
 2. Remove the gauge assembly.
 NOTE: Do not disconnect the dashboard wire harness 5P connector from the gauge assembly.
 3. Turn the ignition switch ON (II).
 4. Connect the dashboard wire harness 5P connector terminals No. 1 and No. 5 with a jumper wire.

Does the SRS indicator light go off?

YES NO

Faulty SRS indicator light circuit in the gauge assembly; replace the SRS printed circuit board in the gauge assembly.

Check for a short to ground in the SRS indicator light circuit:
 1. Turn the ignition switch OFF.
 2. Disconnect the dashboard wire harness 5P connector from the gauge assembly.
 3. Check resistance between the No. 1 terminal of the dashboard wire harness 5P connector and ground. There should be 1 MΩ or more.

Is the resistance as specified?

YES NO

(C)
To page 24-32

Check for an open in the SRS indicator light circuit:
 1. Check resistance between the No. 6 terminal of the SRS main harness 18P connector and No. 1 terminal of the dashboard wire harness 5P connector; there should be 0 - 1.0 Ω.



Is the resistance as specified?

YES NO



(D)
To page 24-33

(E)
To page 24-33



DASHBOARD WIRE HARNESS 5P CONNECTOR

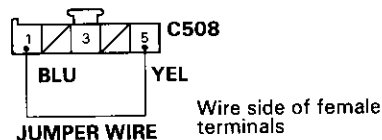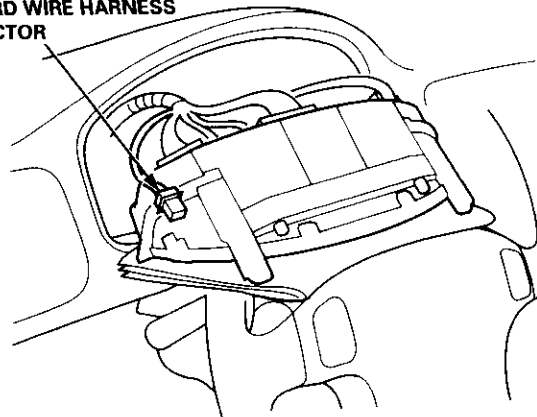

DASHBOARD WIRE HARNESS 5P CONNECTOR

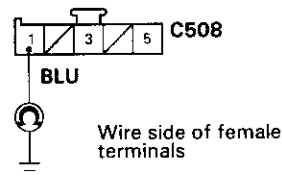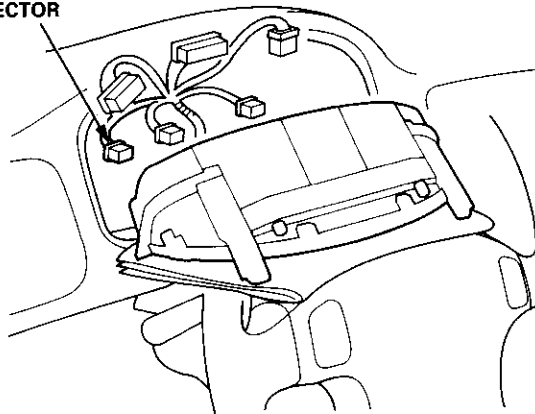

SRS MAIN HARNESS 18P CONNECTOR

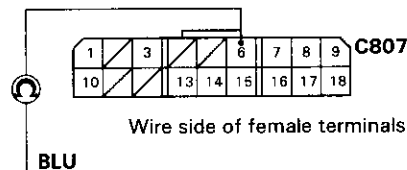

DASHBOARD WIRE HARNESS 5P CONNECTOR

(cont'd)

Troubleshooting

The SRS Indicator Light Doesn't Go Off — '96 - 97 Models (cont'd)

From page 24-31
(C)

Check for a short to ground in the main wire harness:



1. Disconnect the dashboard wire harness 24P connector from the main wire harness.
2. Check resistance between the No. 5 terminal of the main wire harness 24P connector and ground. There should be 1 MΩ or more.

Is the resistance as specified?

YES

NO

Short to ground in the dashboard wire harness; repair the dashboard wire harness.

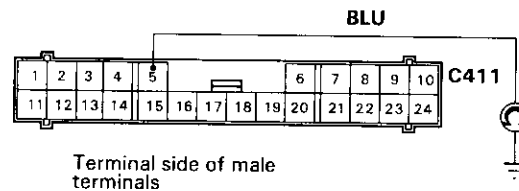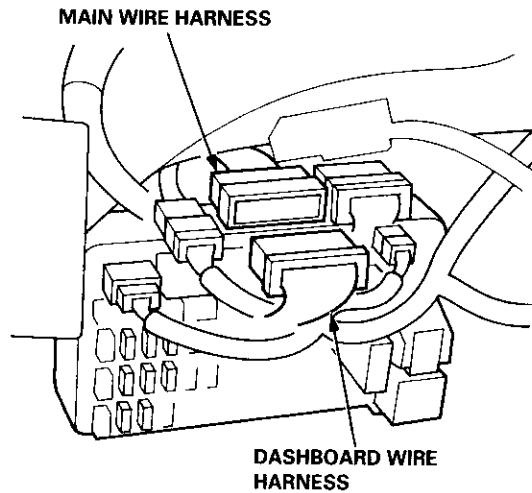

Check for a short to ground in the SRS main harness:



1. Disconnect the SRS main harness 3P connector from the main wire harness.
2. Check resistance between the No. 1 terminal of the SRS main harness 3P connector and ground. There should be 1 MΩ or more.

Is the resistance as specified?

YES

NO

Short to ground in the main wire harness; repair the main wire harness.

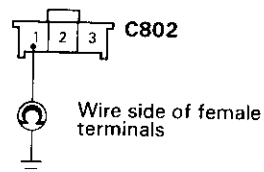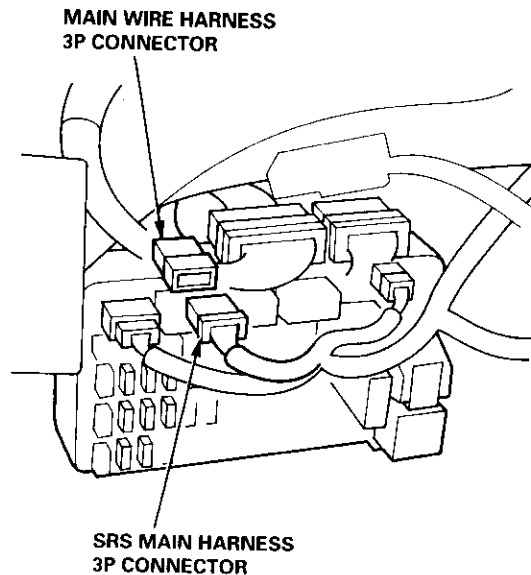

From page 24-31
(D)

Check the SRS indicator circuit input voltage:

1. Reconnect the SRS main harness 18P connector to the SRS unit.
2. Connect a voltmeter between the No. 1 terminal (+) of the dashboard 5P connector and ground.
3. Turn the ignition switch ON (II), and measure voltage.

Is there 8.5 V or more six seconds after the ignition switch has been turned ON (III)?



YES **NO**

The problem has disappeared due to disconnecting and connecting the connectors. Be sure all terminals make good contact, and recheck the system (see Troubleshooting Intermittent Failures on page 24-15).

Poor contact at the SRS main harness 18P connector; check the connector.

- If the connector is OK, substitute a known-good SRS unit, and recheck.
- If the problem is still present, replace the SRS main harness.

**DASHBOARD WIRE HARNESS
5P CONNECTOR**

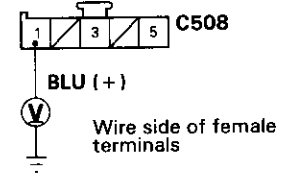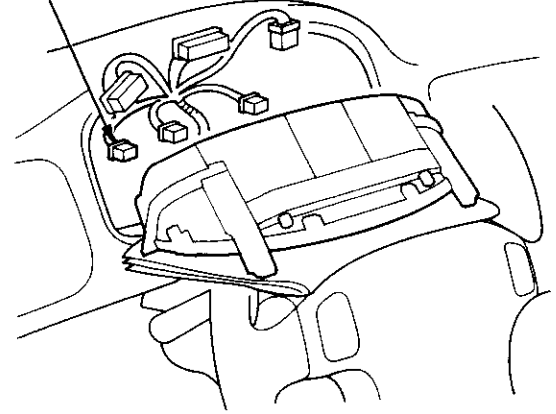

From page 24-31
(E)

Check for an open in the dashboard wire harness:

1. Disconnect the dashboard wire harness 24P connector from the main wire harness.
2. Check resistance between the No. 6 terminal of the SRS main harness 18P connector and No. 5 terminal of the main wire harness 24P connector; there should be 0 – 1.0 Ω.

Is the resistance as specified?

YES **NO**

Open in the BLU wire of the dashboard wire harness; repair the dashboard wire harness.

Check for an open in the main wire harness:





1. Disconnect the SRS main harness 3P connector from the main wire harness.
2. Check resistance between the No. 6 terminal of the SRS main harness 18P connector and No. 1 terminal of the SRS main harness 3P connector; there should be 0 – 1.0 Ω.

Is the resistance as specified?

YES **NO**

Open in the BLU wire of the main wire harness; repair the main wire harness.

Open in the SRS main harness; replace the SRS main harness.

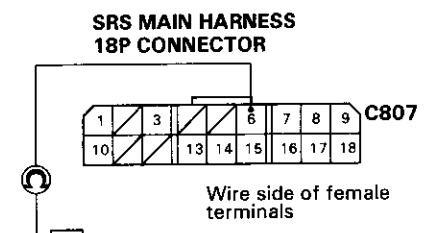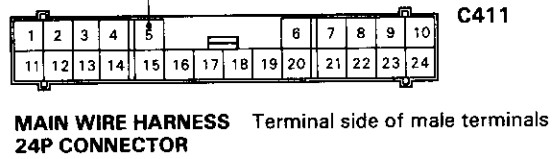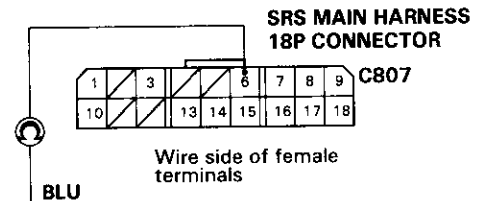

Troubleshooting

The SRS Indicator Light Doesn't Go Off — '98 Model

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbags could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check the No. 23 (10 A) fuse:

1. Turn the ignition switch OFF.
2. Check for blown No. 23 (10 A) fuse in the under-dash fuse/relay box.

Is the fuse OK?

YES NO

Replace the fuse, and erase the memory

1. Replace the No. 23 (10 A) fuse.
2. Erase the DTC memory (see page 24-15).
3. Turn the ignition switch ON (II).

Does the SRS indicator light go off after six seconds?

YES NO

END

Confirm the DTC, and continue troubleshooting.


Check for an open in the SRS main harness (VB line):

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the driver's (and front passenger's) airbag connector(s) (see page 24-11).
3. Disconnect the SRS main harness 18P connector from the SRS unit.
4. Reconnect the battery positive cable, then reconnect the negative cable.
5. Connect a voltmeter between the No. 3 terminal (+) of the SRS main harness 18P connector and ground.
6. Turn the ignition switch ON (II).

Is there battery voltage?


YES NO

Open in the SRS main harness (VB line); replace the harness.

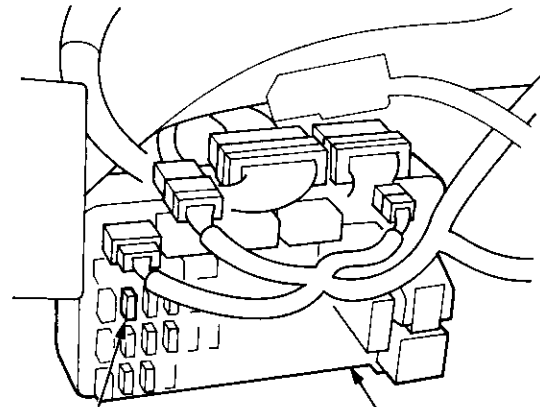


No. 23 (10 A) FUSE

UNDER-DASH FUSE/RELAY BOX

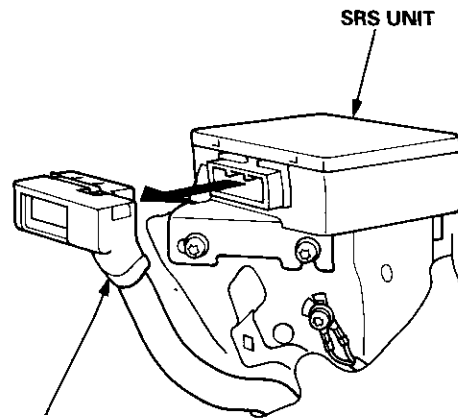

SRS MAIN HARNESS 18P CONNECTOR

SRS MAIN HARNESS 18P CONNECTOR

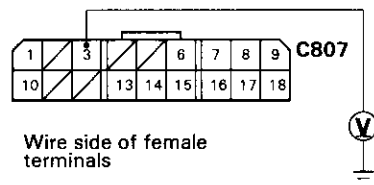

(A)
To page 24-35



From page 24-34
(A)

Check the SRS unit:

Connect the SRS main harness 18P connector terminals No. 6 and No. 3 with a jumper wire and backprobe adapters.

Does the SRS indicator light go off?

YES

NO

Faulty SRS unit or poor contact at the SRS main harness 18P connector; check the connector.
If the connector is OK, replace the SRS unit.

Did fuse No. 23 (10 A) blow?

YES

NO

(B)
To page 24-36

Check for a short to ground in the SRS indicator light circuit:

1. Turn the ignition switch OFF.
2. Disconnect the dashboard wire harness 5P connector from the gauge assembly.
3. Check resistance between the No. 1 terminal of the dashboard wire harness 5P connector and ground. There should be 1 MΩ or more.

Is the resistance as specified?

YES


NO

(C)
To page 24-37

Short to ground in the gauge assembly; replace the gauge assembly.


SRS MAIN HARNESS
18P CONNECTOR

SRS UNIT

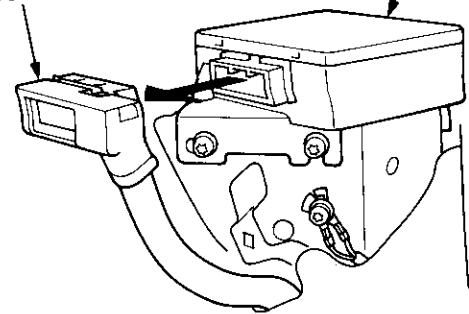


SRS MAIN HARNESS 18P CONNECTOR

JUMPER WIRE




Wire side of female terminals

DASHBOARD WIRE HARNESS
5P CONNECTOR

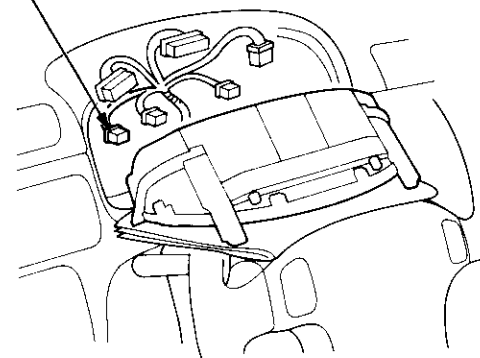

DASHBOARD WIRE HARNESS
5P CONNECTOR



BLU



Wire side of female terminals


(cont'd)

Troubleshooting

The SRS Indicator Light Doesn't Go Off — '98 Model (cont'd)

From page 24-35
(B)

DASHBOARD WIRE HARNESS
5P CONNECTOR

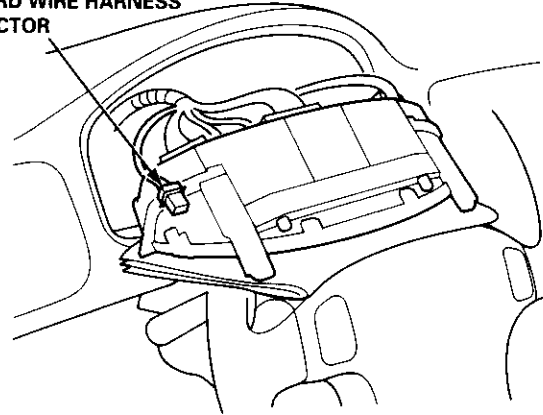

Check the SRS indicator circuit:

1. Turn the ignition switch OFF.
2. Remove the gauge assembly. Do not disconnect the dashboard wire harness 5P connector from the gauge assembly.
3. Turn the ignition switch ON (II).
4. Connect the dashboard wire harness 5P connector terminals No. 1 and No. 5 with a jumper wire.

Does the SRS indicator light go off?

YES

NO

Faulty SRS indicator light circuit in the gauge assembly; replace the SRS printed circuit board in the gauge assembly.

Check for an open in the SRS indicator light circuit:


1. Turn the ignition switch OFF.
2. Disconnect the dashboard wire harness 5P connector from the gauge assembly.
3. Check resistance between the No. 6 terminal of the SRS main harness 18P connector and No. 1 terminal of the dashboard wire harness 5P connector; there should be 0 – 1.0 Ω.

Is the resistance as specified?


YES

NO

DASHBOARD WIRE HARNESS
5P CONNECTOR

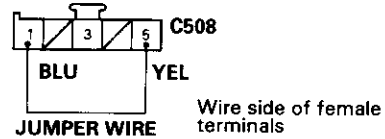

SRS MAIN HARNESS
18P CONNECTOR

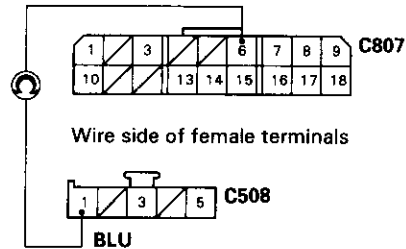

DASHBOARD WIRE HARNESS
5P CONNECTOR

(D)
To page 24-38

(E)
To page 24-38

From page 24-35
(C)

Check for a short to ground in the main wire harness:
 1. Disconnect the dashboard wire harness 24P connector from the main wire harness.
 2. Check resistance between the No. 5 terminal of the dashboard wire harness 24P connector and ground. There should be 1 MΩ or more.

Is the resistance as specified?

YES

NO

Short to ground in the dashboard wire harness; repair the dashboard wire harness.

Check for a short to ground in the SRS main harness:
 1. Disconnect the SRS main harness 3P connector from the main wire harness.
 2. Check resistance between the No. 1 terminal of the SRS main harness 3P connector and ground. There should be 1 MΩ or more.

Is the resistance as specified?


YES

NO

Short to ground in the main wire harness; repair the main wire harness.


Short to ground in the SRS main harness; replace the SRS main harness.

MAIN WIRE HARNESS 24P CONNECTOR

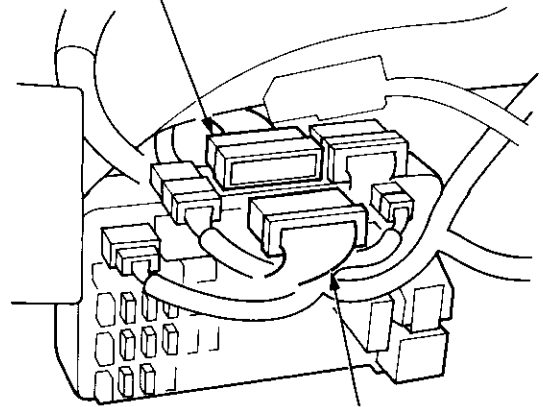


DASHBOARD WIRE HARNESS 24P CONNECTOR

DASHBOARD WIRE HARNESS 24P CONNECTOR




Wire side of female terminals

MAIN WIRE HARNESS 3P CONNECTOR

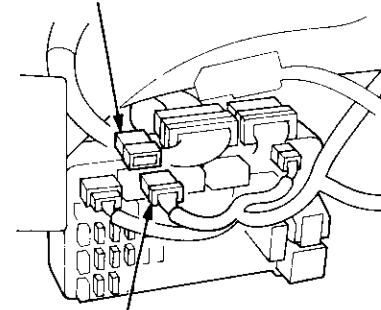

SRS MAIN HARNESS 3P CONNECTOR

SRS MAIN HARNESS 3P CONNECTOR



Wire side of female terminals

(cont'd)

Troubleshooting

The SRS Indicator Light Doesn't Go Off — '98 Model (cont'd)

From page 24-36
(D)

Check the SRS indicator circuit input voltage:

1. Reconnect the SRS main harness 18P connector to the SRS unit.
2. Connect a voltmeter between the No. 1 terminal (+) of the dashboard 5P connector and ground.
3. Turn the ignition switch ON (II), wait for six seconds, then measure voltage.

Is there 8.5 V or more?

YES

NO

The problem has disappeared due to disconnecting and connecting the connectors. Be sure all terminals make good contact, and recheck the system (see Troubleshooting Intermittent Failures on page 24-15).

Poor contact at the SRS main harness 18P connector; check the connector.

- If the connector is OK, substitute a known-good SRS unit, and recheck.
- If the problem is still present, replace the SRS main harness.

From page 24-36
(E)

Check for an open in the dashboard wire harness:

1. Disconnect the main wire harness 24P connector from the dashboard wire harness.
2. Check resistance between the No. 6 terminal of the SRS main harness 18P connector and No. 5 terminal of the main wire harness 24P connector; there should be 0 – 1.0 Ω .

Is the resistance as specified?

YES

NO

Open in the BLU wire of the dashboard wire harness; repair the dashboard wire harness.

Check for an open in the main wire harness:

1. Disconnect the SRS main harness 3P connector from the main wire harness.
2. Check resistance between the No. 6 terminal of the SRS main harness 18P connector and No. 1 terminal of the SRS main harness 3P connector; there should be 0 – 1.0 Ω .

Is the resistance as specified?


YES

NO


Open in the BLU wire of the main wire harness; repair the main wire harness.

Open in the SRS main harness; replace the SRS main harness.

DASHBOARD WIRE HARNESS
5P CONNECTOR

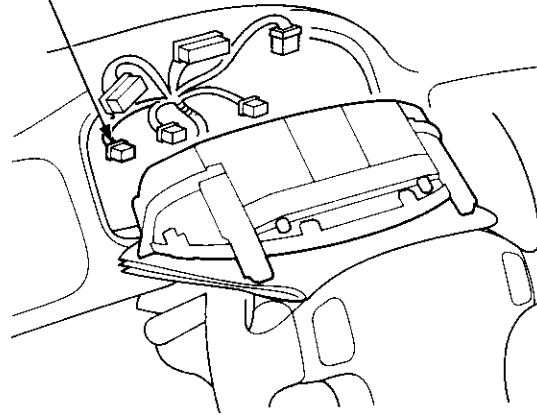

DASHBOARD WIRE HARNESS
5P CONNECTOR




BLU




Wire side of female terminals

SRS MAIN HARNESS
18P CONNECTOR




BLU

MAIN WIRE HARNESS
24P CONNECTOR




Terminal side of male terminals

SRS MAIN HARNESS
18P CONNECTOR



Wire side of female terminals



SRS MAIN HARNESS
3P CONNECTOR

No DTC — '98 Model

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbags could accidentally deploy and cause damage or injuries.

Check the fuse:

Check for blown No. 13 (15 A) fuse in the under-dash fuse/relay box.

Is the fuse OK?

YES

NO

(A) To page 24-40


Replace the fuse. Turn the ignition switch ON (II), and check that the fuse doesn't blow.

Is the fuse OK?

YES

NO

The problem has disappeared. Test-drive the vehicle and see **Troubleshooting Intermittent Failures** on page 24-15.

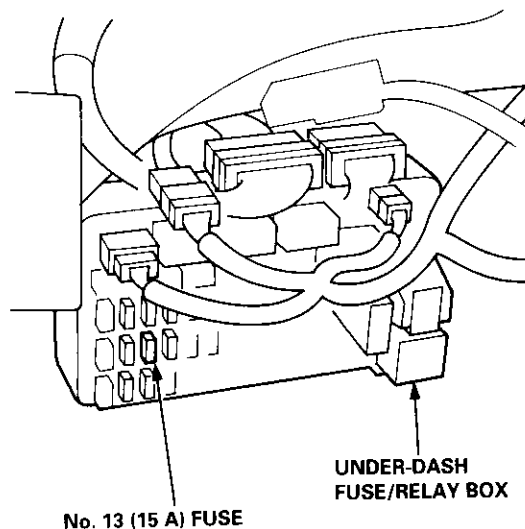

Check for short to ground between the under-dash fuse/relay box and the SRS unit.



1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the driver's (and front passenger's) airbag connector(s) (see page 24-11).
4. Disconnect the SRS main harness 18P connector from the SRS unit.
5. Check resistance between the No. 7 terminal of the SRS main harness 18P connector and ground. There should be 1 MΩ or more.

Is the resistance as specified?

YES

NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

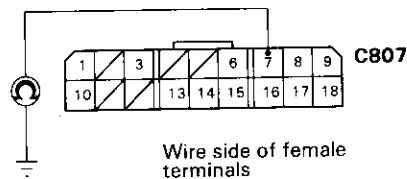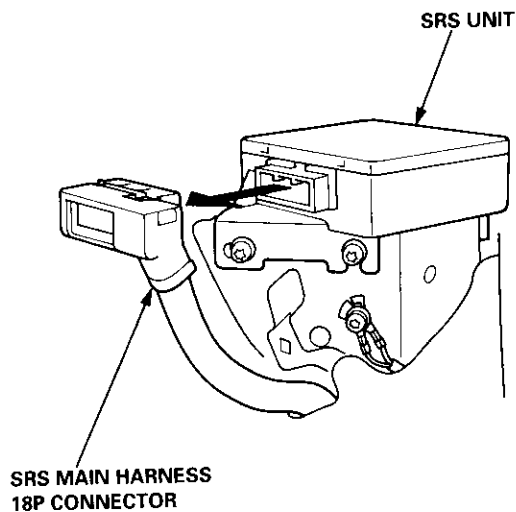

(B)
To page 24-40

(cont'd)

Troubleshooting

No DTC — '98 Model (cont'd)

from page 24-39
(B)

Check for short to ground in the SRS main harness:

1. Disconnect the SRS main harness 2P connector from the under-dash fuse/relay box.
2. Check resistance between the No. 7 terminal of the SRS main harness 18P connector and ground. There should be 1.0 MΩ or more.



Is the resistance as specified?

YES

NO

Short to ground in the under-dash fuse/relay box; replace the under-dash fuse/relay box.

Short to ground in the SRS main harness; replace the SRS main harness.

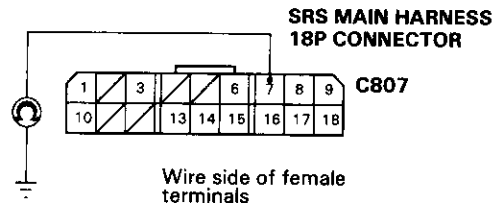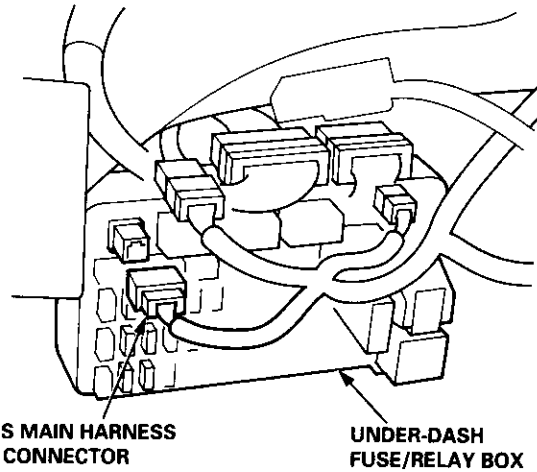

(A) From page 24-39

Check for an open in the SRS main harness:

1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the driver's (and front passenger's) airbag connector(s) (see page 24-11).
4. Disconnect the SRS main harness 18P connector from the SRS unit.
5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Connect a voltmeter between the No. 7 terminal of the SRS main harness 18P connector and ground.
7. Turn the ignition switch ON (II), and measure voltage.


Is there battery voltage?

YES

NO

Poor contact at the SRS main harness 18P connector; check the connector.

- If the connector is OK, substitute a known-good SRS unit, and recheck.
- If the problem is still present, replace the SRS main harness.

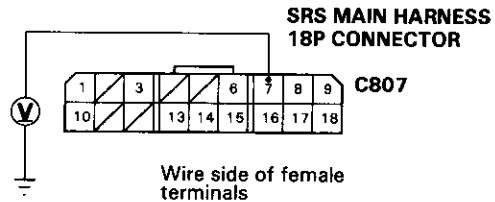

To page 24-41

From page 24-40

Check for an open in the SRS main harness:

1. Turn the ignition switch OFF.
2. Disconnect the SRS main harness 2P connector from the under-dash fuse/relay box.
3. Check resistance between the No. 1 terminal of the SRS main harness 2P connector and No. 7 terminal of the SRS main harness 18P connector.
There should be 0 – 0.5 Ω.

Is the resistance as specified?


YES

NO

Poor contact at the SRS main harness 2P connector; check the connector.


- If the connector is OK, substitute a known-good under-dash fuse/relay box, and recheck.
- If the problem is still present, replace the SRS main harness.

Open in the SRS main harness; replace the SRS main harness.

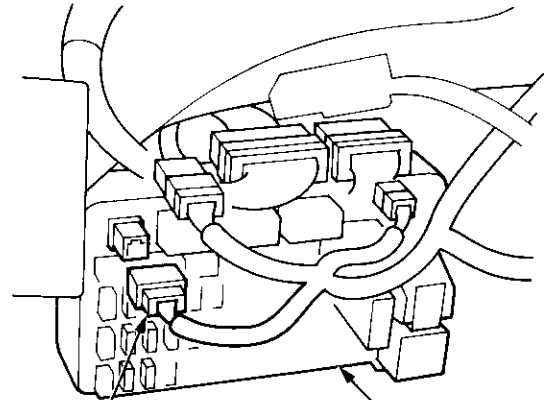

SRS MAIN HARNESS 2P CONNECTOR

UNDER-DASH FUSE/RELAY BOX

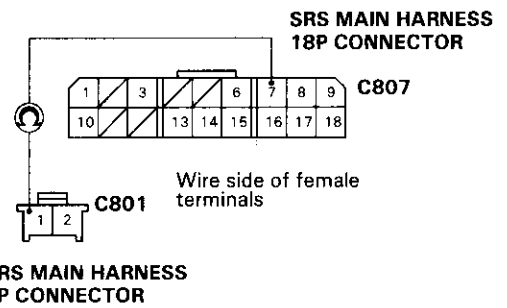

Troubleshooting

DTC 1-1 and DTC 1-2

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbag(s) could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES

NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for an open in the driver's airbag inflator:

1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the driver's airbag 2P connector from the cable reel 2P connector.

CAUTION: Do not disconnect the passenger's airbag connector.

4. Connect the special tool (2 Ω) to the cable reel 2P connector.
5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Erase the DTC memory (see page 24-15).
7. Read the DTC (see page 24-13).

Is DTC 1-1 or DTC 1-2 indicated?

YES



NO

Open or increased resistance in the driver's airbag inflator; replace the driver's airbag assembly (see page 24-67).




Check for an open in the cable reel:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the special tool (2 Ω) from the cable reel 2P connector.
3. Remove the dashboard lower cover, and disconnect the cable reel 2P connector from the SRS main harness.
4. Connect the special tool (2 Ω) to the SRS main harness 2P connector. (cont'd)

To page 24-43

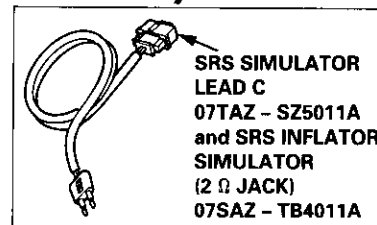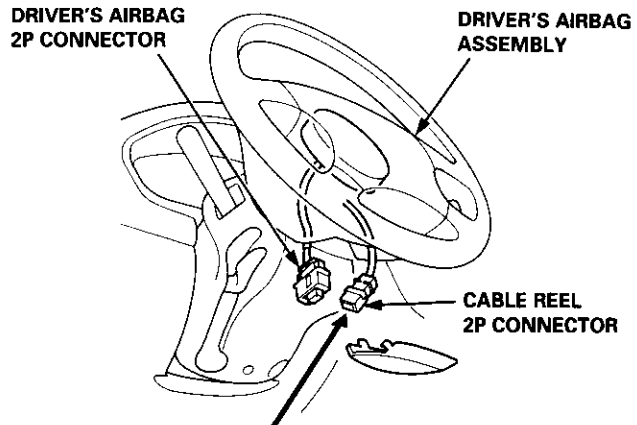

or

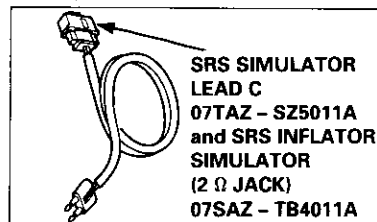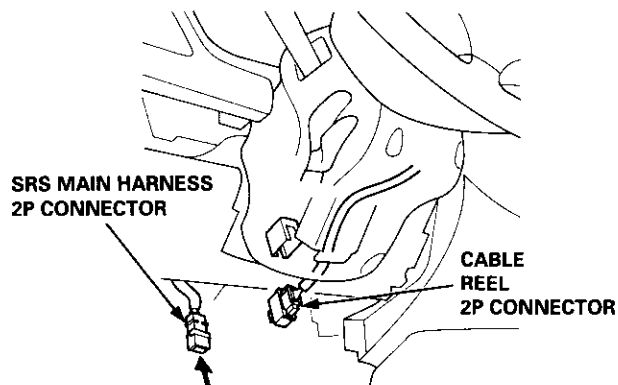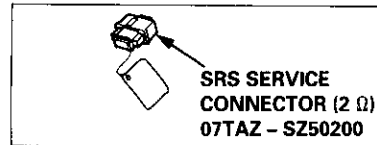

or



From page 24-42

Check for an open in the cable reel (cont'd)

5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Erase the DTC memory (see page 24-15).
7. Read the DTC (see page 24-13).

Is DTC 1-1 or DTC 1-2 indicated?

YES NO

Open or increased resistance in the cable reel; replace the cable reel (see page 24-72).

Check for an open in the SRS main harness:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the front passenger's airbag connector from the SRS main harness (with front passenger's airbag).
3. Disconnect the SRS main harness 18P connector from the SRS unit. Do not disconnect the special tool (2 Ω) from the SRS main harness 2P connector.
4. Check resistance between terminals No. 1 and No. 13 of the SRS main harness 18P connector. There should be approx. 2.0 - 3.0 Ω.



Is the resistance as specified?

YES NO

Poor contact at the SRS main harness 18P connector; check the connector.

- If the connector is OK, substitute a known-good SRS unit, and recheck.
- If the problem is still present, replace the SRS main harness.

Open or increased resistance in the SRS main harness; replace the harness.

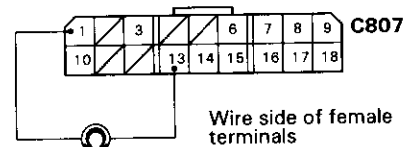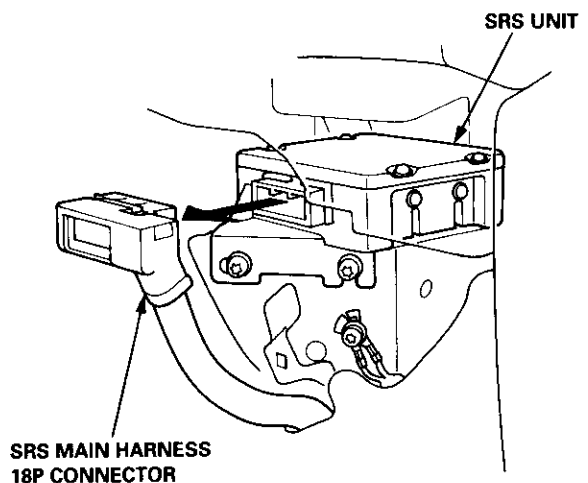

Troubleshooting

DTC 1-3

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbag(s) could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for a short to another wire in the driver's airbag inflator:

1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the driver's airbag 2P connector from the cable reel 2P connector.
CAUTION: Do not disconnect the passenger's airbag connector.
4. Connect the special tool (2 Ω) to the cable reel 2P connector.
5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Erase the DTC memory (see page 24-15).
7. Read the DTC (see page 24-13).



Is DTC 1-3 indicated?

YES NO




Short in the driver's airbag inflator; replace the driver's airbag assembly (see page 24-67).

Check for a short in the cable reel:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the special tool (2 Ω) from the cable reel 2P connector.
3. Remove the dashboard lower cover, and disconnect the cable reel 2P connector from the SRS main harness.
4. Connect the special tool (2 Ω) to the SRS main harness 2P connector. (cont'd)

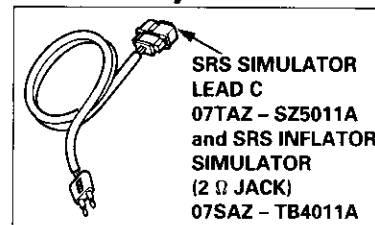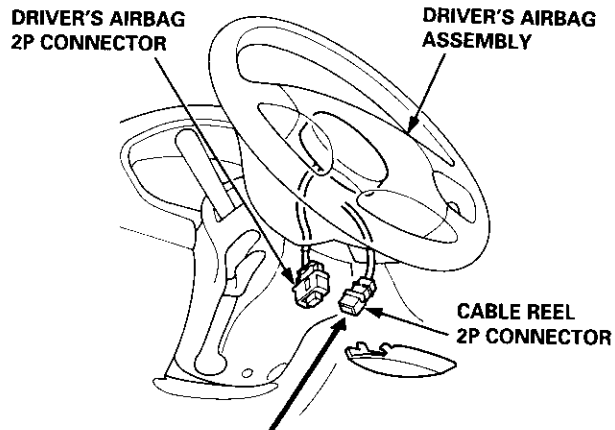

or

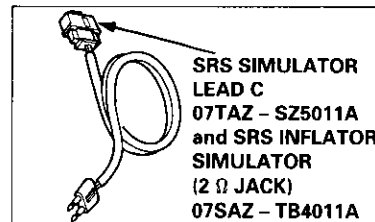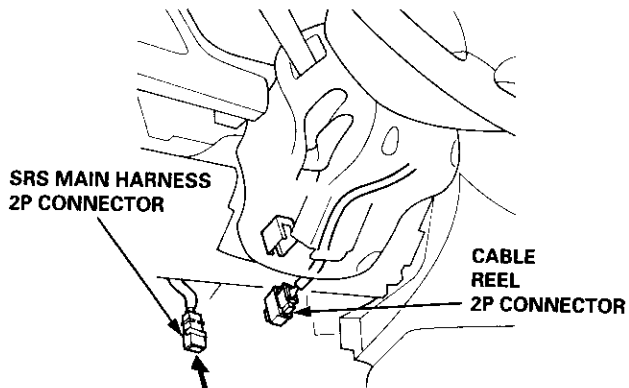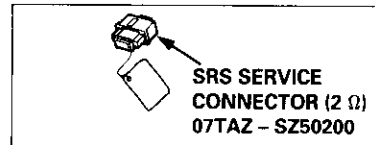

or



To page 24-45

From page 24-44

Check for a short in the cable reel (cont'd):
 5. Reconnect the battery positive cable, then reconnect the negative cable.
 6. Erase the DTC memory (see page 24-15).
 7. Read the DTC (see page 24-13).

Is DTC 1-3 indicated?

YES NO

Short in the cable reel; replace the cable reel (see page 24-72).



Check for a short in the SRS main harness:
 1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
 2. Disconnect the front passenger's airbag connector from the SRS main harness (with front passenger's airbag).
 3. Disconnect the SRS main harness 18P connector from the SRS unit. Do not disconnect the special tool (2 Ω) from the SRS main harness 2P connector.
 4. Check resistance between terminals No. 1 and No. 13 of the SRS main harness 18P connector.
 There should be approx. 2.0 – 3.0 Ω.

Is the resistance as specified?

YES NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

Short in the SRS main harness; replace the SRS main harness.

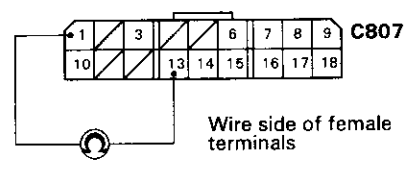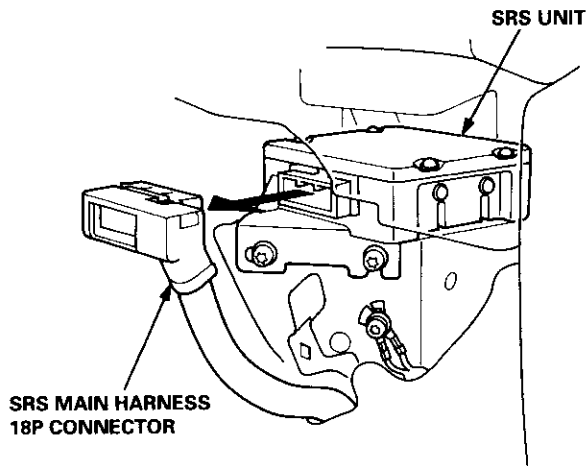

Troubleshooting

DTC 1-4

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbag(s) could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES

NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for a short to power in the driver's airbag inflator:

1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the driver's airbag 2P connector from the cable reel 2P connector.

CAUTION: Do not disconnect the passenger's airbag connector.

4. Connect the SRS service connector (2 Ω) to the cable reel 2P connector.
5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Erase the DTC memory (see page 24-15).
7. Read the DTC (see page 24-13).

Is DTC 1-4 indicated?



YES

NO




Short to power in the driver's airbag inflator; replace the driver's airbag assembly (see page 24-67).

Check for a short to power in the cable reel:


1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the special tool (2 Ω) from the cable reel 2P connector.
3. Remove the dashboard lower cover, and disconnect the cable reel 2P connector from the SRS main harness.
4. Connect the special tool (2 Ω) to the SRS main harness 2P connector. (cont'd)

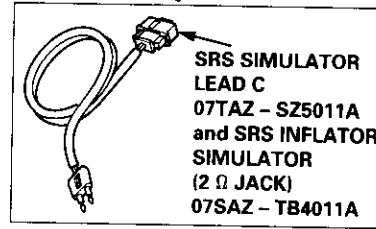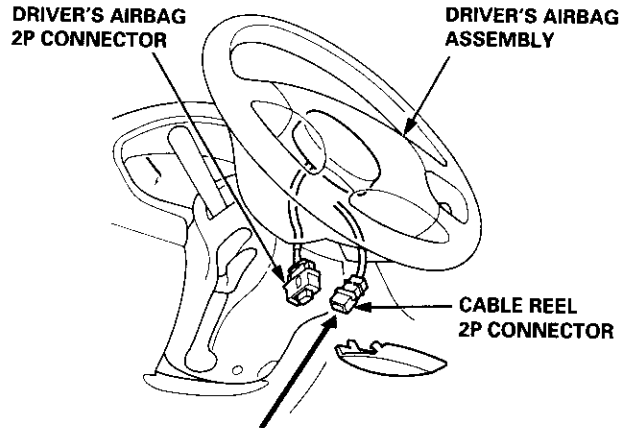

or

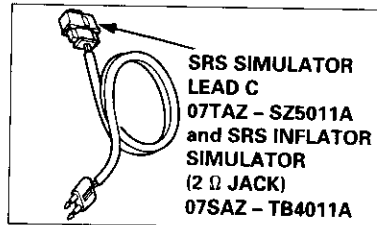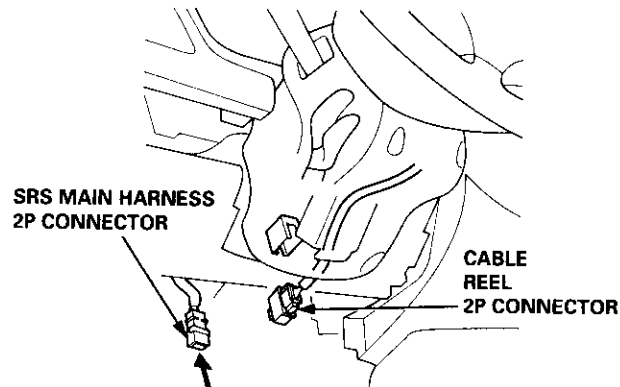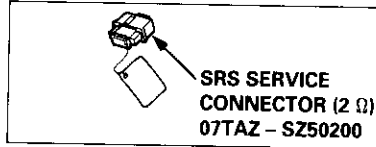

or

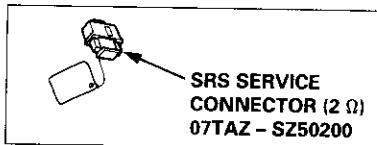

To page 24-47

From page 24-46

Check for a short to power in the cable reel (cont'd):
 5. Reconnect the battery positive cable, then reconnect the negative cable.
 6. Erase the DTC memory (see page 24-15).
 7. Read the DTC (see page 24-13).

Is DTC 1-4 indicated?

YES

NO

Short to power in the cable reel; replace the cable reel (see page 24-72).

Check for a short to power in the SRS main harness:
 1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
 2. Disconnect the front passenger's airbag connector from the SRS main harness (with front passenger's airbag).
 3. Remove the special tool (2 Ω) from the SRS main harness 2P connector.
 4. Disconnect the SRS main harness 18P connector from the SRS unit.
 5. Reconnect the battery positive cable, then reconnect the negative cable.
 6. Connect a voltmeter between the No. 1 (+) terminal of the SRS main harness 18P connector and body ground.
 7. Turn the ignition switch ON (II), and measure voltage. There should be 0.5 V or less.
 8. Turn the ignition switch OFF.
 9. Connect a voltmeter between the No. 13 (+) terminal of the SRS main harness 18P connector and body ground.
 10. Turn the ignition switch ON (II), and measure voltage. There should be 0.5 V or less.



Are voltages as specified?

YES

NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

Short to power in the SRS main harness; replace the SRS main harness.

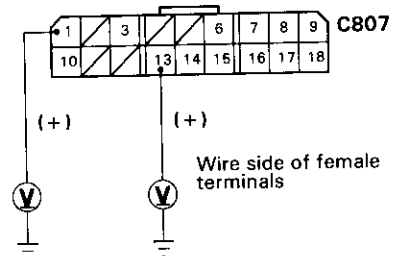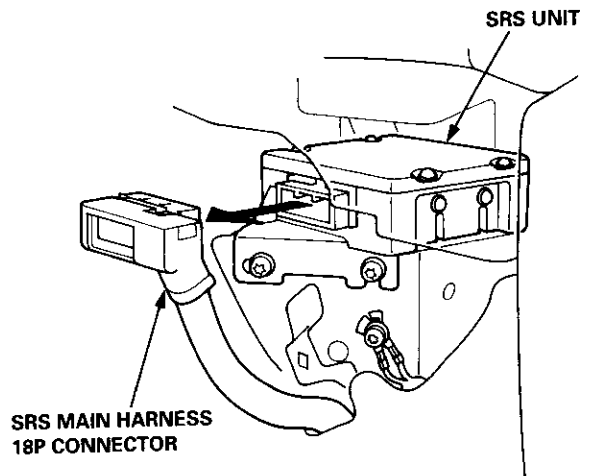

Troubleshooting

DTC 1-5

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbag(s) could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (See page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES

NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for a short to ground in the driver's airbag inflator:

1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the driver's airbag 2P connector from the cable reel 2P connector.
CAUTION: Do not disconnect the passenger's airbag connector.
4. Connect the special tool (2 Ω) to the cable reel 2P connector.
5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Erase the DTC memory (see page 24-15).
7. Read the DTC (see page 24-13).

Is DTC 1-5 indicated?

YES



NO

Short to ground in the driver's airbag inflator; replace the driver's airbag assembly (see page 24-67).



Check for a short to ground in the cable reel:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the special tool (2 Ω) from the cable reel 2P connector.
3. Remove the dashboard lower cover, and disconnect the cable reel 2P connector from the SRS main harness.
4. Connect the Special tool (2 Ω) to the SRS main harness 2P connector (cont'd).


To page 24-49

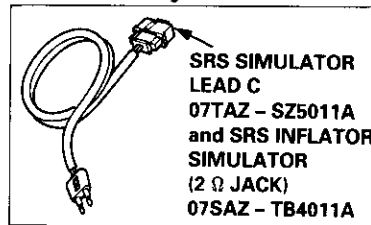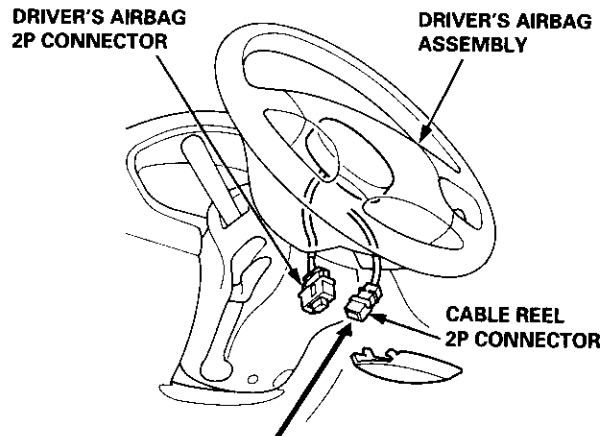

or

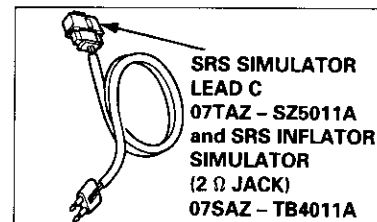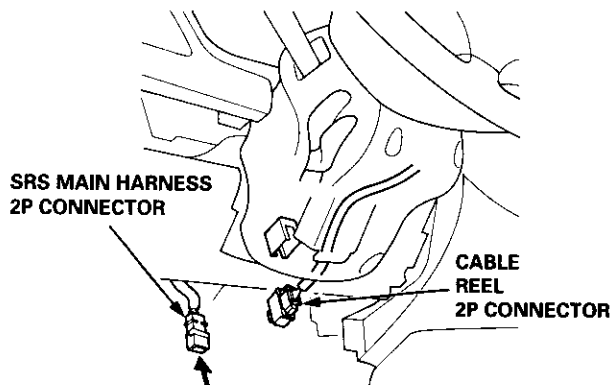

or

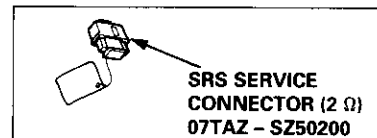

From page 24-48

Check for a short to ground in the cable reel (cont'd):
 5. Reconnect the battery positive cable, then reconnect the negative cable.
 6. Erase the DTC memory (see page 24-15).
 7. Read the DTC (see page 24-13).

Is DTC 1-5 indicated?

YES NO

Short to ground in the cable reel; replace the cable reel (see page 24-72).



Check for a short to ground in the SRS main harness:
 1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
 2. Disconnect the front passenger's airbag 2P connector from the SRS main harness (with front passenger's airbag).
 3. Remove the special tool (2 Ω) from the SRS main harness 2P connector.
 4. Check resistance between the No. 1 terminal of the SRS main harness 18P connector and ground, and between the No. 13 terminal of the SRS main harness 18P connector and ground.
 There should be 1 MΩ or more.

Is the resistance as specified?

YES NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

Short to ground in the SRS main harness; replace the SRS main harness.

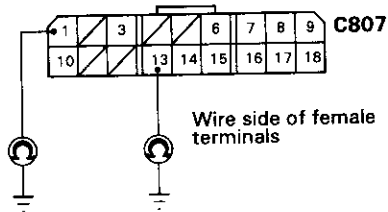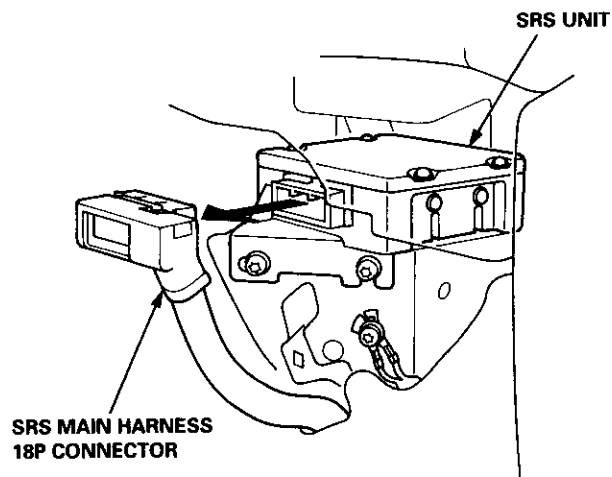

Troubleshooting

DTC 2-1 and DTC 2-2 — With Front Passenger's Airbag

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbags could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for an open in the passenger's airbag inflator:



1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the front passenger's airbag connector from the SRS main harness (see page 24-11).
4. Connect the special tool (2 Ω) to the SRS main harness 2P connector.
CAUTION: Do not disconnect the driver's airbag connector.
5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Erase the DTC memory (see page 24-15).
7. Read the DTC (see page 24-13).

Is DTC 2-1 or DTC 2-2 indicated?


YES NO

Open or increased resistance in the passenger's airbag inflator; replace the passenger's airbag assembly (see page 24-67).

FRONT PASSENGER'S AIRBAG 2P CONNECTOR

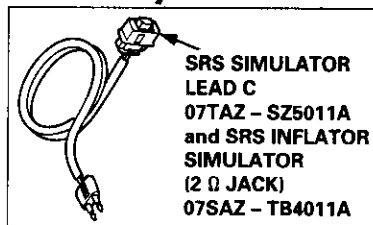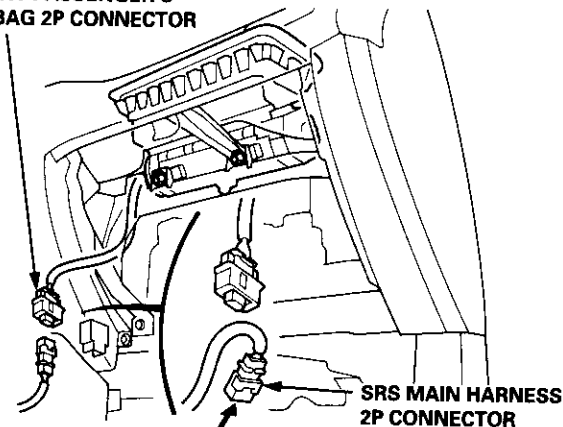

OR

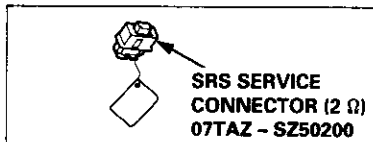

To page 24-51

From page 24-50

Check for an open in the SRS main harness:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the driver's airbag 2P connector from the cable reel 2P connector (see page 24-11).
3. Disconnect the SRS main harness 18P connector from the SRS unit. Do not disconnect the special tool (2 Ω) from the SRS main harness 2P connector.
4. Check resistance between the No. 10 terminal and No. 14 terminal of the SRS main harness 18P connector. There should be approx. 2.0 – 3.0 Ω.

Is the resistance as specified?



YES

NO

Poor contact at the SRS main harness 18P connector; check the connector.

- If the connector is OK, substitute a known-good SRS unit, and recheck.
- If the problem is still present, replace the SRS main harness.

Open or increased resistance in the SRS main harness; replace the harness.

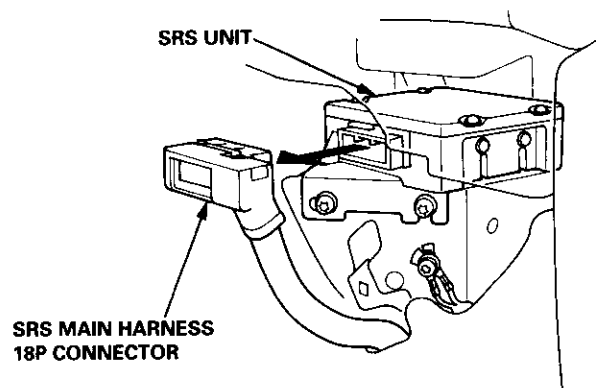

Wire side of female terminals

Troubleshooting

DTC 2-3 — With Front Passenger's Airbag

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbags could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES

NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for a short to another wire or decreased resistance in the passenger's airbag inflator:

1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the front passenger's airbag 2P connector from the SRS main harness (see page 24-11).
4. Connect the special tool (2 Ω) to the SRS main harness 2P connector.

CAUTION: Do not disconnect the driver's airbag connector.

5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Erase the DTC memory (see page 24-15).
7. Read the DTC (see page 24-13).



Is DTC 2-3 indicated?

YES


NO

Short to another wire or decreased resistance in the passenger's airbag inflator; replace the passenger's airbag assembly (see page 24-67).

FRONT PASSENGER'S AIRBAG 2P CONNECTOR

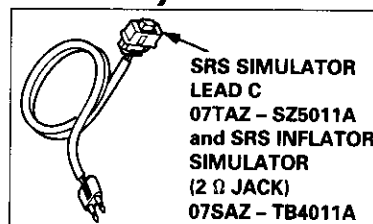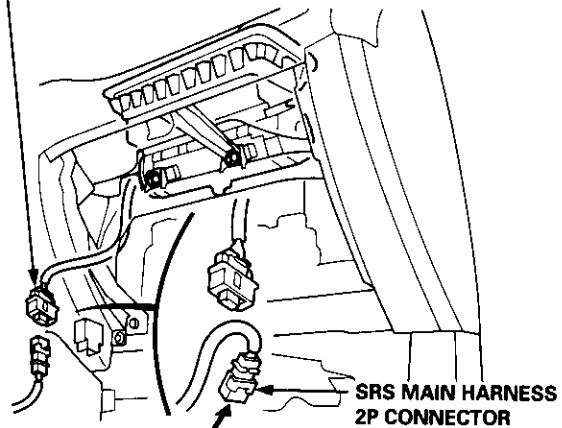

or

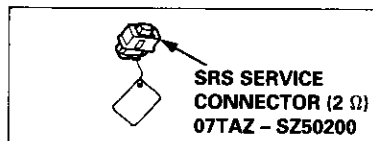

To page 24-53

From page 24-52

Check for a short to another wire or decreased resistance in the SRS main harness:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the driver's airbag 2P connector from the cable reel 2P connector.
3. Disconnect the SRS main harness 18P connector from the SRS unit. Do not disconnect the special tool (2 Ω) from the SRS main harness 2P connector.
4. Check resistance between the No. 10 terminal and No. 14 terminal of the SRS main harness 18P connector. There should be approx. 2.0 – 3.0 Ω.



Is the resistance as specified?

YES

NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

Short to another wire or decreased resistance in the SRS main harness; replace the SRS main harness.

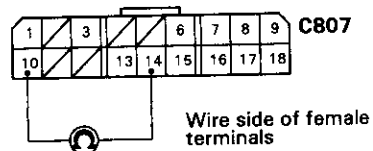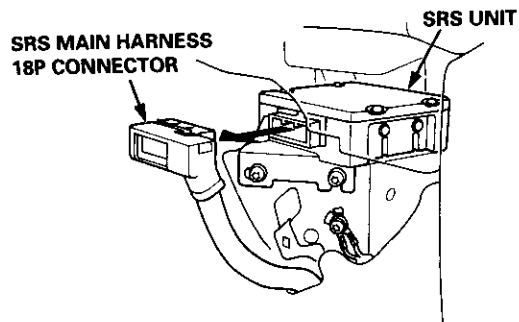

Troubleshooting

DTC 2-4 — With Front Passenger's Airbag

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbags could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES

NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for a short to power in the passenger's airbag inflator:

1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the front passenger's airbag 2P connector from the SRS main harness (see page 24-11).
4. Connect the special tool (2 Ω) to the SRS main harness 2P connector.

CAUTION: Do not disconnect the driver's airbag connector.

5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Erase the DTC memory (see page 24-15).
7. Read the DTC (see page 24-13).



Is DTC 2-4 indicated?

YES


NO

Short to power in the passenger's airbag inflator; replace the passenger's airbag assembly (see page 24-67).

FRONT PASSENGER'S AIRBAG 2P CONNECTOR

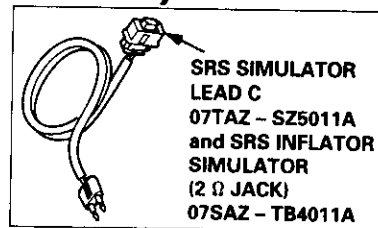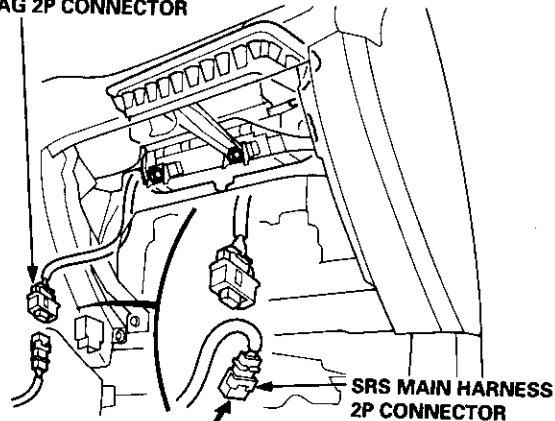

or

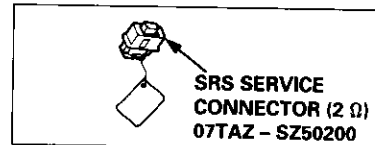

To page 24-55

From page 24-54

Check for a short to power in the SRS main harness:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the driver's airbag 2P connector from the cable reel 2P connector.
3. Disconnect the SRS main harness 18P connector from the SRS unit.
4. Remove the special tool (2 Ω) from the SRS main harness 2P connector.
5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Connect a voltmeter between the No. 10 (+) terminal of SRS main harness 18P connector and ground.
7. Turn the ignition switch ON (II), and measure voltage. There should be 0.5 V or less.
8. Connect a voltmeter between the No. 14 (+) terminal of the SRS main harness 18P connector and ground, and measure voltage. There should be 0.5 V or less.




Are voltages as specified?

YES

NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

Short to power in the SRS main harness; replace the SRS main harness.

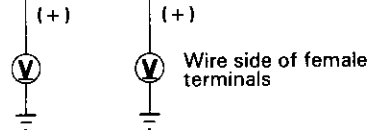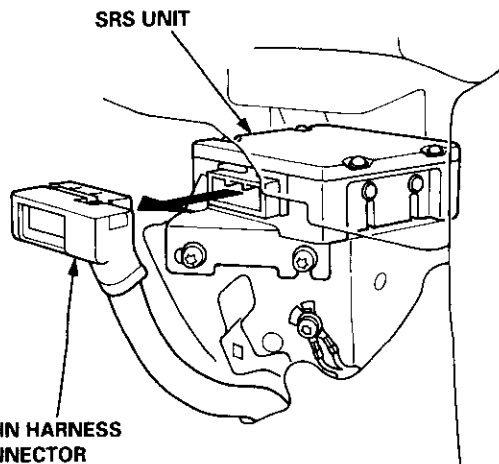

Troubleshooting

DTC 2-5 — With Front Passenger's Airbag

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbags could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES

NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for a short to ground in the passenger's airbag inflator:

1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the front passenger's airbag 2P connector from the SRS main harness (see page 24-11).
4. Connect the special tool (2 Ω) to the SRS main harness 2P connector.

CAUTION: Do not disconnect the driver's airbag connector.

5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Erase the DTC memory (see page 24-15).
7. Read the DTC (see page 24-13).



Is DTC 2-5 indicated?

YES


NO

Short to ground in the passenger's airbag inflator; replace the passenger's airbag assembly (see page 24-67).

FRONT PASSENGER'S AIRBAG 2P CONNECTOR

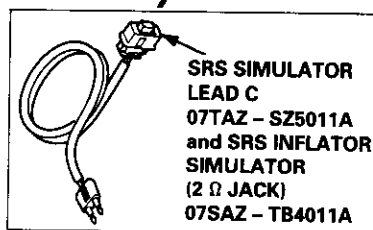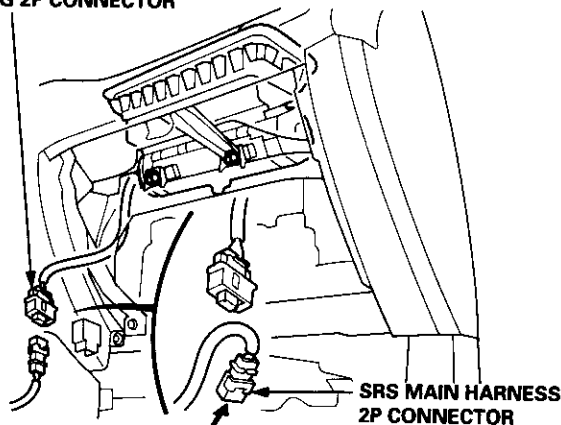

or

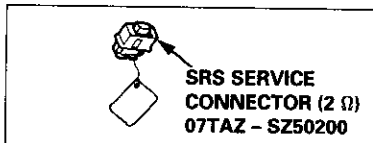

To page 24-57

From page 24-56

Check for a short to ground in the SRS main harness:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the driver's airbag 2P connector from the cable reel 2P connector.
3. Disconnect the SRS main harness 18P connector from the SRS unit.
4. Remove the special tool (2 Ω) from the SRS main harness 2P connector.
5. Check resistance between the No. 10 terminal of the SRS main harness 18P connector and ground, and between the No. 14 terminal of the SRS main harness 18P connector and ground. There should be 1 MΩ or more.



Is the resistance as specified?

YES

NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

Short to ground in the SRS main harness; replace the SRS main harness.

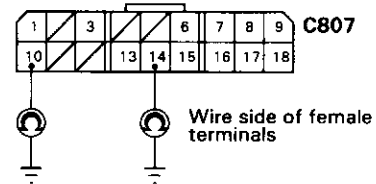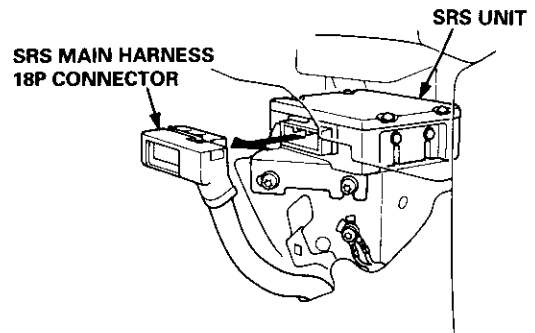

Troubleshooting

DTC 2-1 and DTC 2-2 — Without Front Passenger's Airbag

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbag could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for an open or increased resistance in the dummy resistor:

1. Turn the ignition switch OFF.
2. Remove the dummy resistor from the SRS main harness 2P connector.
3. Check the resistance between the A and B terminals of the dummy resistor. There should be 1.5 – 2.5 Ω .

Is the resistance as specified?

YES NO

Faulty dummy resistor; replace the dummy resistor.

Check for an open or increased resistance in the SRS main harness:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the driver's airbag 2P connector from the cable reel 2P connector (see page 24-11).
3. Disconnect the SRS main harness 18P connector from the SRS unit.
4. Connect the dummy resistor to the SRS main harness 2P connector.
5. Check resistance between the No. 10 terminal and No. 14 terminal of the SRS main harness 18P connector. There should be approx. 1.5 – 2.5 Ω .





Is the resistance as specified?

YES NO

Poor contact at the SRS main harness 18P connector; check the connector.

- If the connector is OK, substitute a known-good SRS unit, and recheck.
- If the problem is still present, replace the SRS main harness.

Open or increased resistance in the SRS main harness; replace the harness.

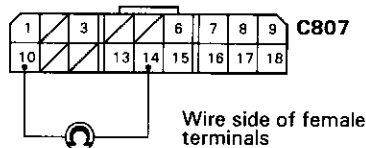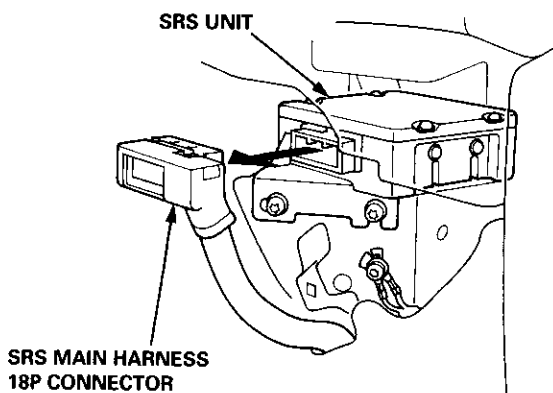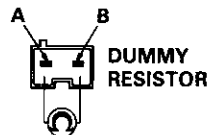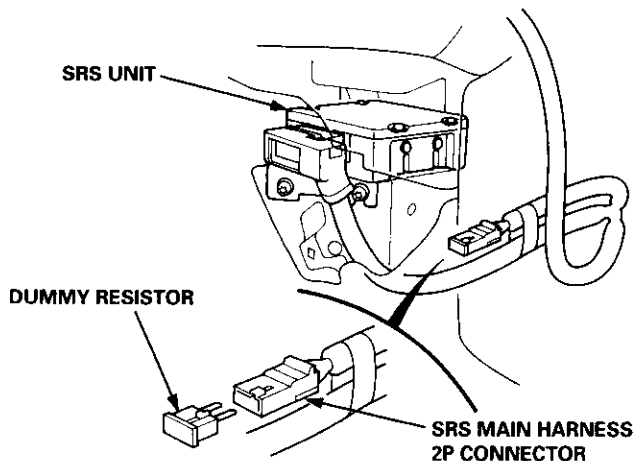



DTC 2-3 — Without Front Passenger's Airbag

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbag could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES

NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for a short to another wire or decreased resistance in the dummy resistor:

1. Turn the ignition switch OFF.
2. Remove the dummy resistor from the SRS main harness 2P connector.
3. Check the resistance between the A and B terminals of the dummy resistor. There should be 1.5 – 2.5 Ω .

Is the resistance as specified?

YES

NO

Faulty dummy resistor; replace the dummy resistor.

Check for a short to another wire or decreased resistance in the SRS main harness:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the driver's airbag 2P connector from the cable reel 2P connector (see page 24-11).
3. Disconnect the SRS main harness 18P connector from the SRS unit.
NOTE: Do not connect the dummy resistor to the SRS main harness 2P connector.
4. Check resistance between the No. 10 terminal and No. 14 terminal of the SRS main harness 18P connector. There should be 1 M Ω or more.





Is the resistance as specified?

YES

NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

Short to another wire or decreased resistance in the SRS main harness; replace the SRS main harness.

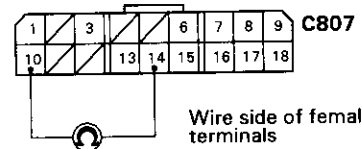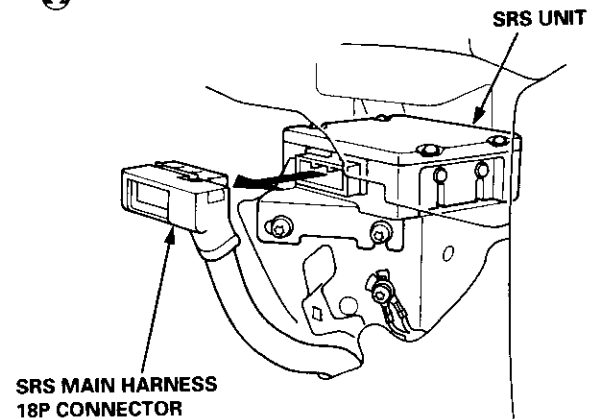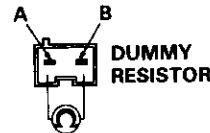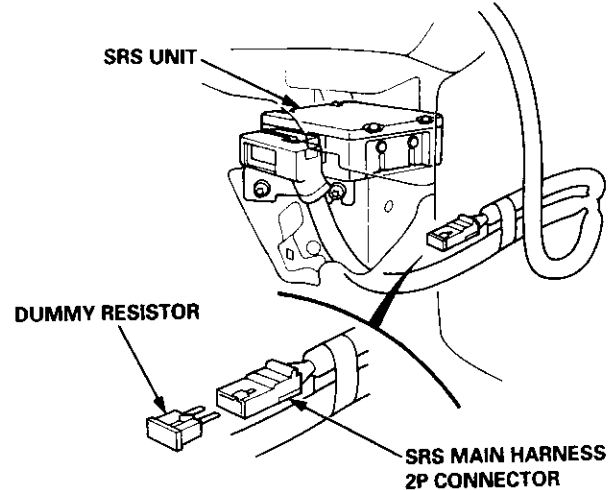

Troubleshooting

DTC 2-4 — Without Front Passenger's Airbag

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not bump the SRS unit; the airbag could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES

NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for a short to power in the SRS main harness:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the driver's airbag 2P connector from the cable reel 2P connector (see page 24-11).
3. Disconnect the SRS main harness 18P connector from the SRS unit.
4. Reconnect the battery positive cable, then reconnect the negative cable.
5. Connect a voltmeter between the No. 10 (+) terminal of the SRS main harness 18P connector and ground.
6. Turn the ignition switch ON (II), and measure voltage. There should be 0.5 V or less.
7. Connect a voltmeter between the No. 14 (+) terminal of the SRS main harness 18P connector and ground, and measure voltage. There should be 0.5 V or less.



Are voltages as specified?

YES

NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

Short to power in the SRS main harness or the dummy resistor; check for contact between the dummy resistor and another wire. If there is no contact, replace the SRS main harness.

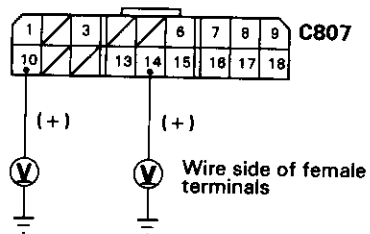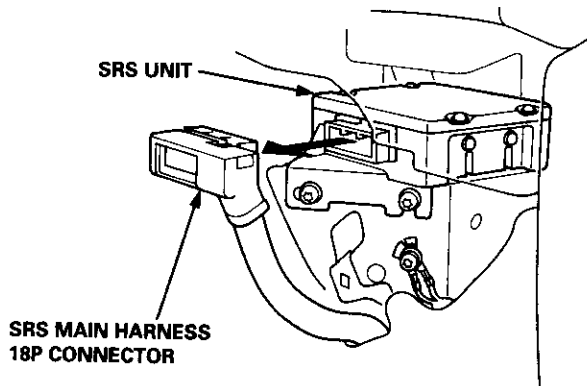

DTC 2-5 — Without Front Passenger's Airbag

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbag could accidentally deploy and cause damage or injuries.

Try to reproduce the SRS indicator light:

1. Erase the DTC memory (see page 24-15).
2. Turn the ignition switch ON (II), and check that the SRS indicator light comes on for about six seconds and goes off.

Does the SRS indicator light stay on?

YES NO

Intermittent failure, system is OK at this time. See Troubleshooting Intermittent Failures on page 24-15.

Check for a short to ground in the SRS main harness:



1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the driver's airbag 2P connector from the cable reel 2P connector (see page 24-11).
3. Disconnect the SRS main harness 18P connector from the SRS unit.
4. Check resistance between No. 10 terminal of the SRS main harness 18P connector and ground, and between the No. 14 terminal of the SRS main harness 18P connector and ground. There should be 1 MΩ or more.

Is the resistance as specified?

YES NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

Short to ground in the SRS main harness or the dummy resistor; check for contact between the dummy resistor and ground. If there is no contact, replace the SRS main harness.

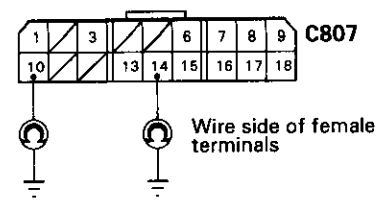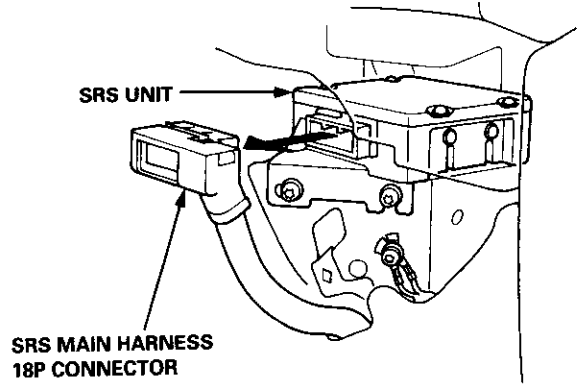

Troubleshooting

DTC 8-6

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbags could accidentally deploy and cause damage or injuries.

Besides indicating an abnormality in the SRS unit, DTC 8-6 may also indicate that two problems equivalent to DTC 1-1 and 2-4, 1-4 and 2-1, or 1-4 and 2-4 occurred at the same time. Proceed in the order shown below.

Check the SRS main harness:

1. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
2. Disconnect the driver's airbag (and front passenger's airbag) connector(s) (see page 24-11).
3. Disconnect the SRS main harness 18P connector from the SRS unit.
4. Reconnect the battery positive cable, then reconnect the negative cable.
5. Turn the ignition switch ON (II).
6. Connect a voltmeter and measure voltage between the No. 10 terminal of the SRS main harness 18P connector and ground, and between the No. 14 terminal and ground. There should be approx. 0 - 0.5 V.

Are voltages as specified?

YES

NO

Short to power in the SRS main harness; replace the SRS main harness.

Check the SRS main harness and the cable reel:




Connect a voltmeter and measure voltage between the No. 1 terminal of the SRS main harness 18P connector and ground, and between the No. 13 terminal and ground. There should be approx. 0 - 0.5 V.

Are voltages as specified?

YES

NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

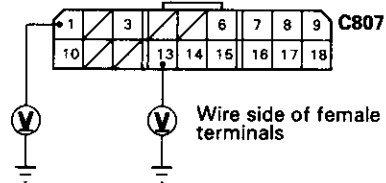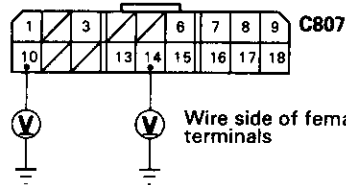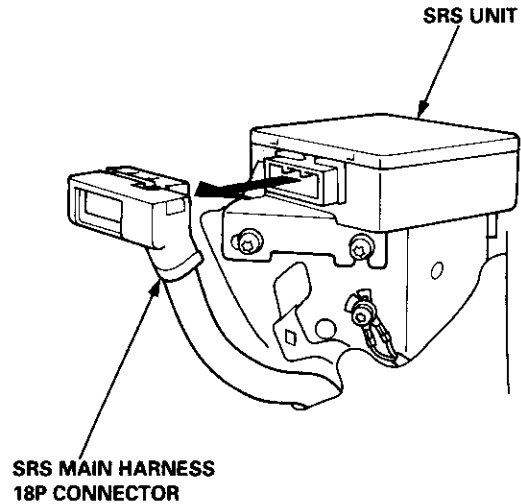

To page 24-63 (A)

From page 24-62 (A)

Check the cable reel:

1. Turn the ignition switch OFF.
2. Disconnect the cable reel 2P connector from the SRS main harness.
3. Turn the ignition switch ON (II).
4. Connect a voltmeter and measure **voltage between** the No. 1 terminal of the SRS main harness 18P connector and ground, and between the No. 13 terminal and ground. There should be approx. 0 - 0.5 V.


Are voltages as specified?

YES

NO

Short to power in the cable reel; replace the cable reel (see page 24-72).

Short to power in the SRS main harness; replace the SRS main harness.

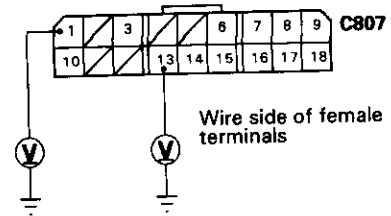

Troubleshooting

DTC 9-2

CAUTION: Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbag(s) could accidentally deploy and cause damage or injuries.

Check the fuse:

1. Turn the ignition switch OFF.
2. Check for blown No. 23 (10 A) fuse in the under-dash fuse/relay box.

Is the fuse OK?

YES NO


(A) To page 24-65

Replace the fuse. Turn the ignition switch ON (II), and check that the fuse doesn't blow.

Is the fuse OK?


YES NO

The problem has disappeared. Test-drive the vehicle and see Troubleshooting Intermittent Failures on page 24-15.

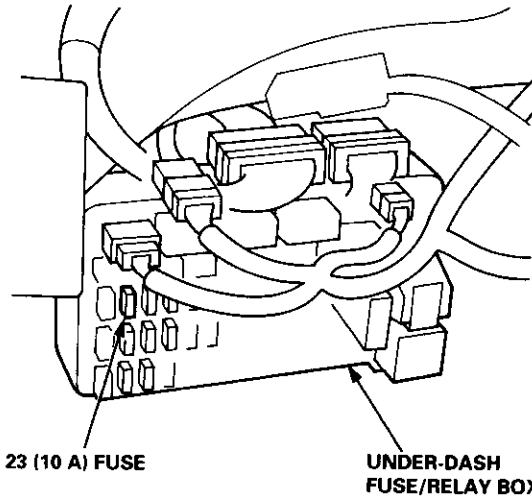


SRS MAIN HARNESS 18P CONNECTOR

SRS UNIT

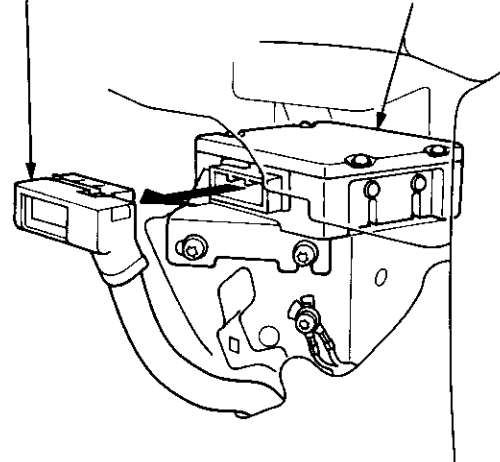

SRS MAIN HARNESS 18P CONNECTOR

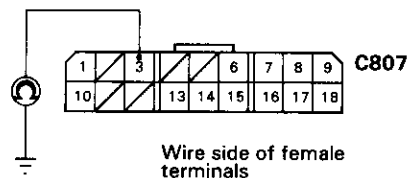

Check for short to ground between the under-dash fuse/relay box and the SRS unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the driver's (and front passenger's) airbag connector(s) (see page 24-11).
4. Disconnect the SRS main harness 18P connector from the SRS unit.
5. Check resistance between the No. 3 terminal of the SRS main harness 18P connector and ground. There should be 1 MΩ or more.

Is the resistance as specified?

YES NO

Faulty SRS unit; replace the SRS unit (see page 24-76).

(B)

To page 24-65

(B) from page 24-64

Check for short to ground in the SRS main harness:


1. Disconnect the SRS main harness 2P connector from the under-dash fuse/relay box.
2. Check resistance between the No. 3 terminal of the SRS main harness 18P connector and ground. There should be 1.0 MΩ or more.

Is the resistance as specified?

YES NO

Short to ground in the under-dash fuse/relay box; replace the under-dash fuse/relay box.

Short to ground in the SRS main harness; replace the SRS main harness.

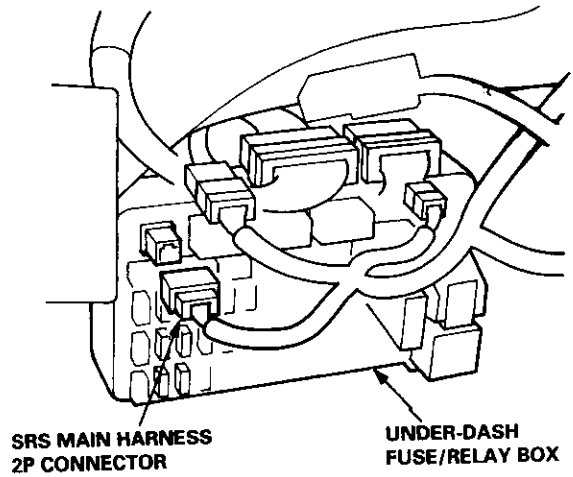

(A) From page 24-64

Check for an open in the SRS main harness:



1. Turn the ignition switch OFF.
2. Disconnect the battery negative cable, then disconnect the positive cable, and wait for three minutes.
3. Disconnect the driver's (and front passenger's) airbag connector (see page 24-11).
4. Disconnect the SRS main harness 18P connector from the SRS unit.
5. Reconnect the battery positive cable, then reconnect the negative cable.
6. Connect a voltmeter between the No. 3 terminal of the SRS main harness 18P connector and ground.
7. Turn the ignition switch ON (II), and measure voltage.

Is there battery voltage?

YES NO

Poor contact at the SRS main harness 18P connector; check the connector.

- If the connector is OK, substitute a known-good SRS unit, and recheck.
- If the problem is still present, replace the SRS main harness

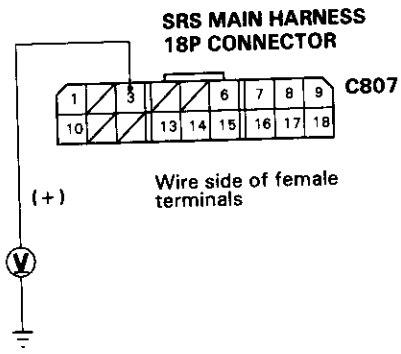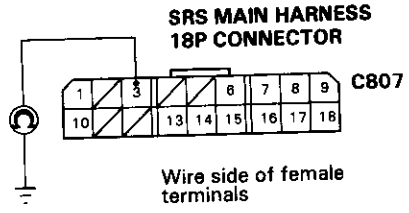

To page 24-66

(cont'd)

Troubleshooting

DTC 9-2 (cont'd)

From page 24-65

Check for an open in the SRS main harness:

1. Turn the ignition switch OFF.
2. Disconnect the SRS main harness 2P connector from the under-dash fuse/relay box.
3. Check resistance between the No. 2 terminal of the SRS main harness 2P connector and No. 3 terminal of the SRS main harness 18P connector.
There should be 0 - 0.5 Ω .

Is the resistance as specified?



YES

NO

Poor contact at the SRS main harness 2P connector; check the connector.

- If the connector is OK, substitute a known-good under-dash fuse/relay box, and recheck.
- If the problem is still present, replace the SRS main harness.

Open in the SRS main harness; replace the SRS main harness.

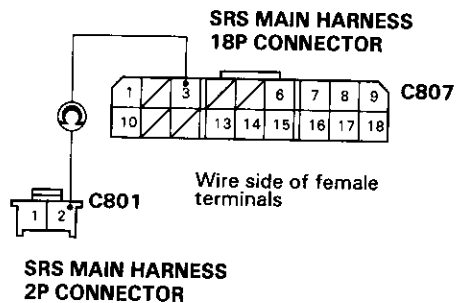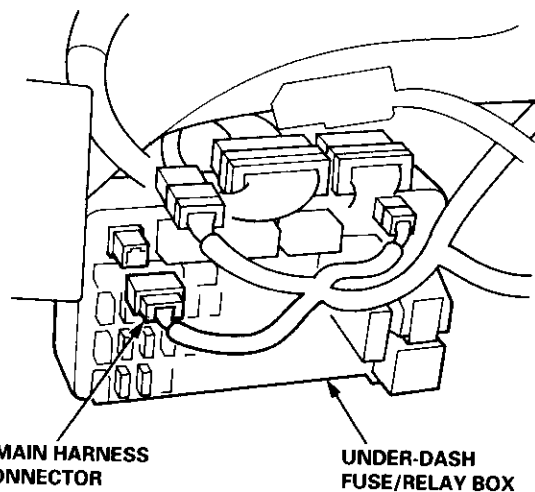



Airbag

Replacement

After a collision in which the airbags were deployed, the airbag assemblies and the SRS unit must be replaced.

WARNING Store a removed airbag with the pad surface up. If the airbag is improperly stored face down, accidental deployment could propel the unit with enough force to cause serious injury.

CAUTION:

- Always disconnect the airbag connector(s) when the harness is disconnected.
- Do not disassemble or tamper with the airbag.

NOTE:


- Do not install used SRS parts from another vehicle. When repairing, use only new SRS parts.
- Carefully inspect the airbag before you install it. Do not install an airbag that shows signs of being dropped or improperly handled, such as dents, cracks or deformation.

1. Disconnect the battery negative cable, then disconnect the positive cable from the battery, and wait at least three minutes.
2. Disconnect the airbag connector(s):

Driver's Side:

- Remove the access panel from the steering wheel, then disconnect the 2P connector between the driver's airbag and cable reel.


NOTE: When disconnected, the airbag connector is automatically shorted.

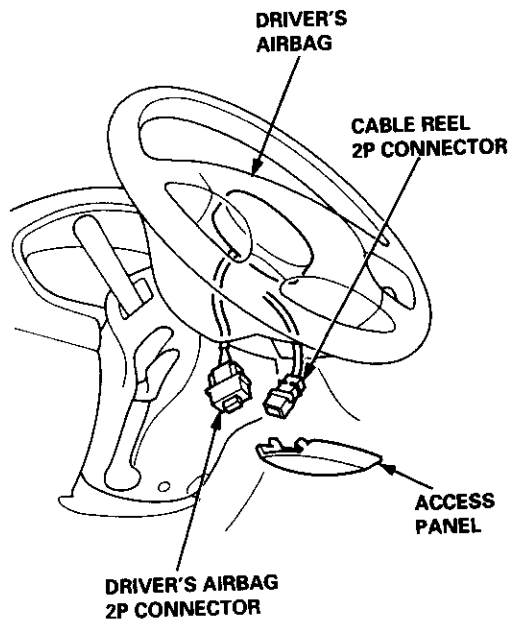

Front Passenger's Side:

- Disconnect the 2P connector between the front passenger's airbag and SRS main harness.


NOTE: When disconnected, the airbag connector is automatically shorted.

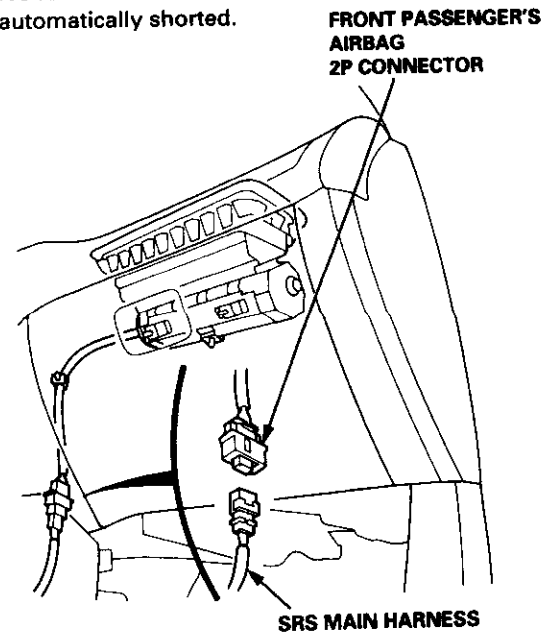

4. Remove the airbag(s):

Driver's Side:

- Remove the two Torx bolts using a Torx T30 bit, then remove the driver's airbag.

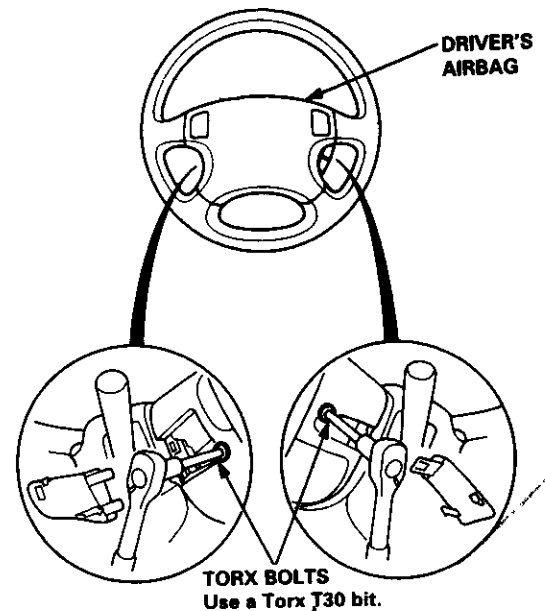

(cont'd)


Airbag

Replacement (cont'd)

Front Passenger's Side:

- Remove the three mounting nuts from the bracket, then remove the harness clip.
- Lift the front passenger's airbag out of the dashboard by covering the lid and dashboard with a cloth, and prying carefully with a flat-tip screwdriver.

NOTE: The lid of the airbag has pawls on its side which attach it to the dashboard.

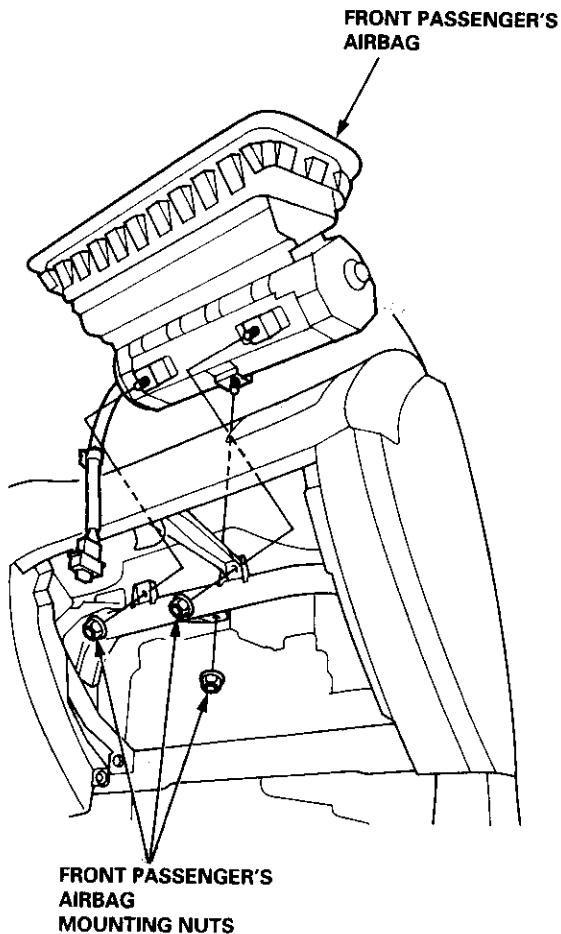


CAUTION: Be sure to install the SRS wiring so that it is not pinched or interfering with other parts.

4. Install the new airbag(s):


Driver's Side: Place the driver's airbag into the steering wheel, and secure it with new Torx bolts.

TORX BOLTS
9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)
Replace.
Use a Torx T30 bit.

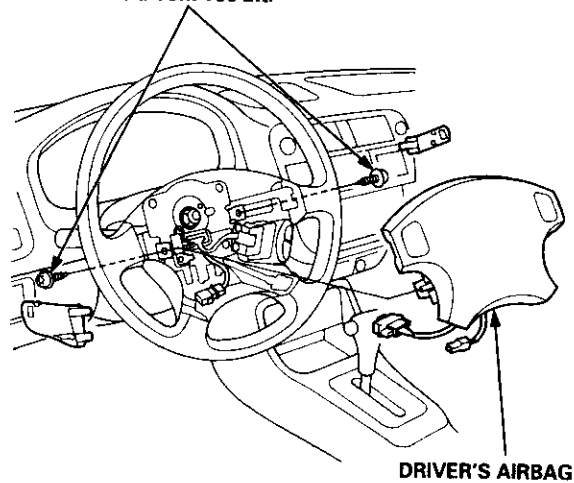

Front Passenger's Side:

- Place the front passenger's airbag into the dashboard.
- Tighten the front passenger's airbag mounting nuts.

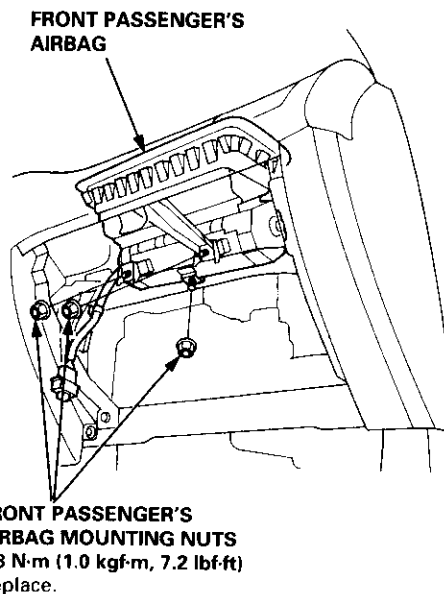




5. Reconnect the airbag connector(s).


Front Passenger's Side:

- Attach the airbag connector to the connector holder, then reinstall the glove box.

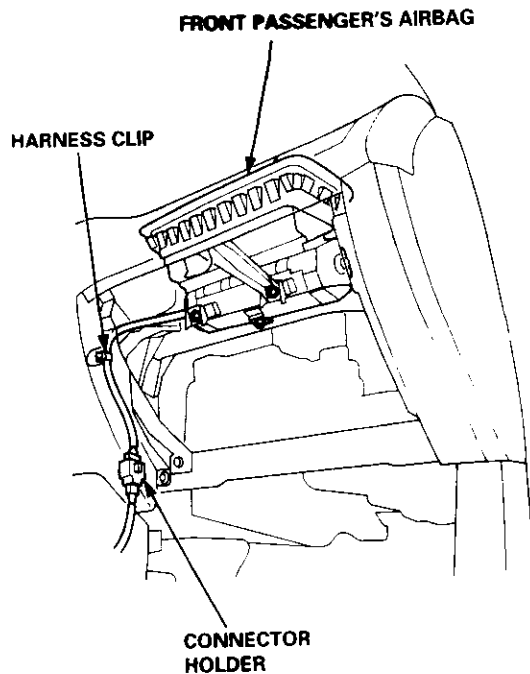

Driver's Side:

- Connect the driver's airbag 2P connector to the cable reel 2P connector, then install the access panel on the steering wheel.

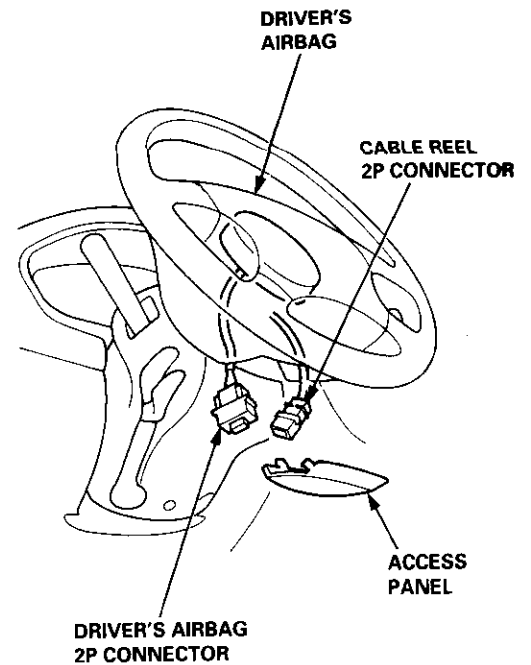

6. Connect the battery positive cable, then connect the negative cable.
7. After installing the airbag, confirm proper system operation:
 - Turn the ignition switch ON (II); the SRS indicator light should come on for about six seconds and then go off.
 - Make sure both horn buttons work.

Airbag

Disposal

Before scrapping any airbags (including those in a whole vehicle to be scrapped), the airbags must be deployed. If the vehicle is still within the warranty period, before you deploy the airbags, the Honda District Service Manager must give approval and/or special instructions. Only after the airbags have been deployed (as the result of vehicle collision, for example), can they be scrapped.

If the airbags appear intact (not deployed), treat them with extreme caution.

Follow this procedure:

Deploying the Airbags: In-vehicle


NOTE: If an SRS vehicle is to be entirely scrapped, its airbags should be deployed while still in the vehicle. The airbags should not be considered as salvageable parts and should never be installed in another vehicle.

▲ WARNING Confirm that each airbag assembly is securely mounted; otherwise, severe personal injury could result from deployment.

1. Disconnect the battery negative cable, then disconnect the positive cable.
2. Confirm that the special tool is functioning properly by following the check procedure on the tool label or on page 24-71.


Driver's Airbag:

3. Remove the access panel, then disconnect the 2P connector between the driver's airbag and the cable reel.

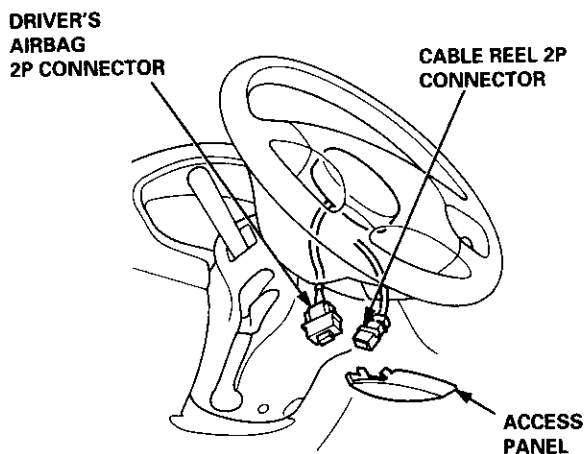


Front Passenger's Airbag:

4. Remove the glove box, then disconnect the 2P connector between the front passenger's airbag and SRS main harness.

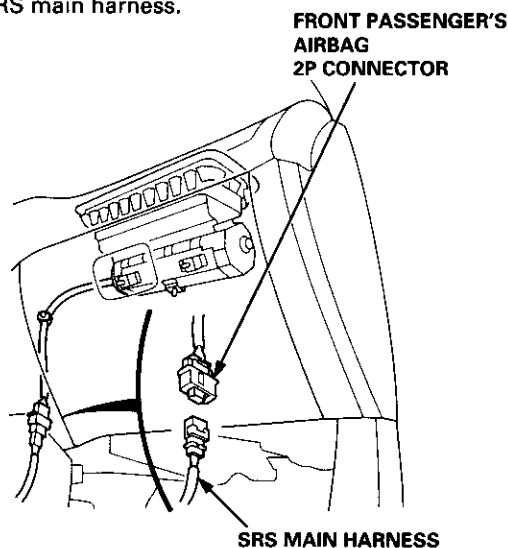

5. Cut off the airbag connector, strip the ends of the airbag wires, and connect the deployment tool alligator clips to the airbag. Place the deployment tool at least thirty feet (10 meters) away from the airbag.

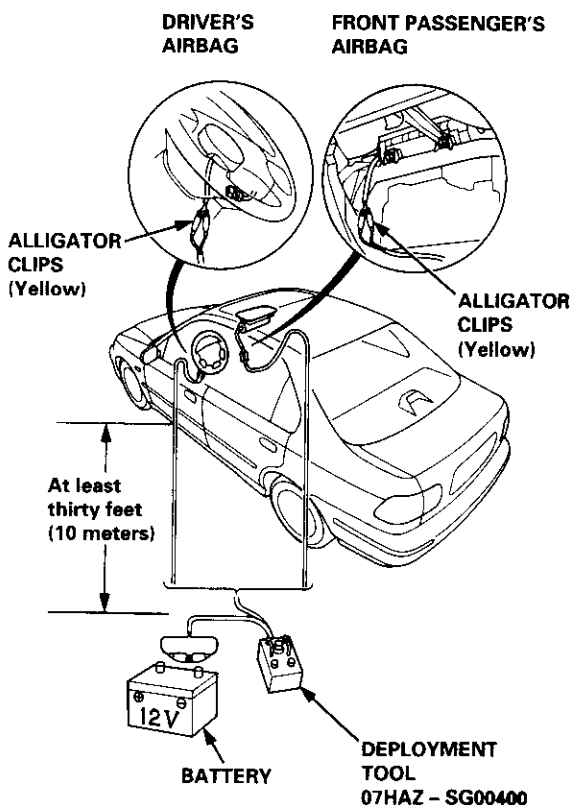




6. Connect a 12 volt battery to the tool:
 - If the green light on the tool comes on, the airbag igniter circuit is defective and cannot deploy the airbag. Go to Damaged Airbag Special Procedure.
 - If the red light on the tool comes on, the airbag is ready to be deployed.
7. Push the tool's deployment switch. The airbag should deploy (deployment is both highly audible and visible; a loud noise and rapid inflation of the bag, followed by slow deflation).
 - If the airbags deploy and the green light on the tool comes on, continue with this procedure.
 - If an airbag doesn't deploy, yet the green light comes ON, its igniter is defective. Go to Damaged Airbag Special Procedure.

During deployment, the airbag assembly can become hot enough to burn you. Wait thirty minutes after deployment before touching the assembly.

8. Dispose of the complete airbag assembly. No part of it can be reused. Place it in a sturdy plastic bag, and seal it securely.

CAUTION:


- Wear a face shield and gloves when handling a deployed airbag.
- Wash your hands and rinse them well with water after handling a deployed airbag.

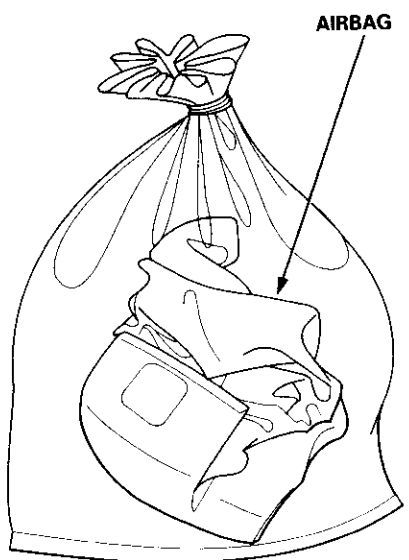

Deploying the Airbag: Out-of-vehicle

NOTE: If an intact airbag has been removed from a scrapped vehicle, or has been found defective or damaged during transit, storage or service, it should be deployed as follows:

WARNING Position the airbag face up, outdoors on flat ground at least thirty feet (10 m) from any obstacles or people.

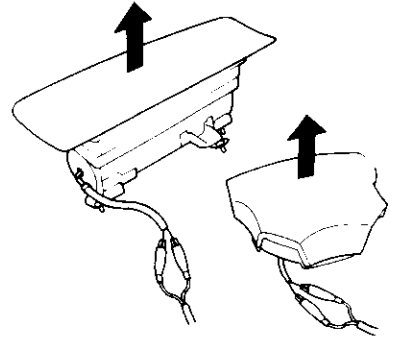

1. Confirm that the special tool is functioning properly by following the check procedure on this page or on the tool label.
2. Follow steps 5, 6, 7, and 8 of the in-vehicle deployment procedure.

Damaged Airbag Special Procedure

WARNING If an airbag cannot be deployed, it should not be treated as normal scrap; it should still be considered a potentially explosive device that can cause serious injury.

1. If installed in a vehicle, follow the removal procedure on page 24-67.
2. In all cases, make a short circuit by twisting together the two airbag inflator wires.
3. Package the airbag in exactly the same packaging that the new replacement part came in.
4. Mark the outside of the box "DAMAGED AIRBAG NOT DEPLOYED" so it does not get confused with your parts stock.
5. Contact your Honda District Service Manager for how and where to return it for disposal.

Deployment Tool: Check Procedure

1. Connect the yellow clips to both switch protector handles on the tool; connect the tool to a battery.
2. Push the operation switch: green means the tool is OK; red means the tool is faulty.
3. Disconnect the battery and the yellow clips.

Cable Reel

Replacement

⚠ WARNING Store a remove airbag assembly with the pad surface up. If the airbag is improperly stored face down, accidental deployment could propel the unit with enough force to cause serious injury.


CAUTION:

- Always disconnect the airbag connector(s) when the harness is disconnected.
- Do not disassemble or tamper with the airbag.


NOTE: Carefully inspect the airbag assembly before installing it. Do not install an airbag that shows signs of being dropped or improperly handled, such as dents, cracks or deformation.

1. Disconnect the battery negative cable, then disconnect the positive cable from the battery, and wait at least three minutes.
2. Remove the access panel from the steering wheel, then disconnect the 2P connector between the driver's airbag and cable reel.

NOTE: When disconnected, the airbag connector is automatically shorted.

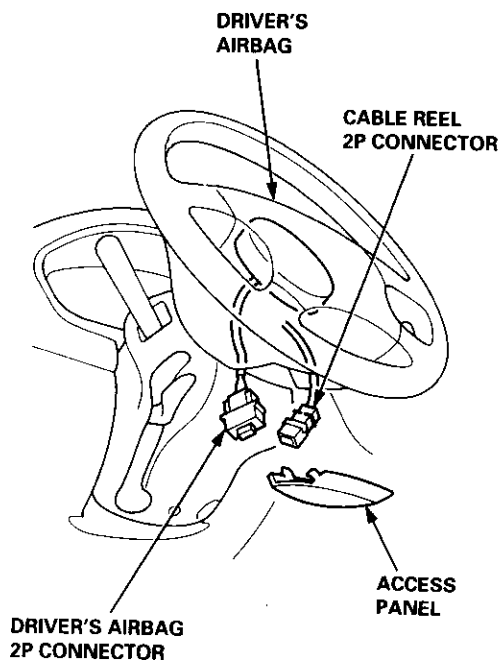


3. Make sure the wheels are aligned straight ahead.
4. Remove the driver's dashboard lower cover.

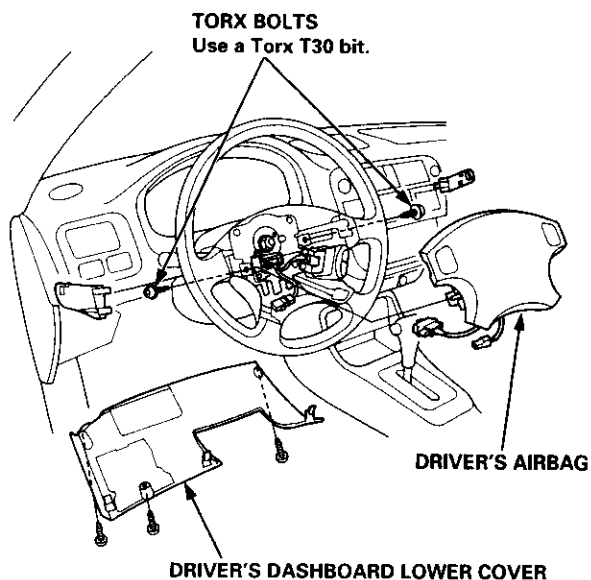


5. Remove the two Torx bolts from the steering wheel, and disconnect the horn connector. Then remove the driver's airbag.


6. Disconnect the connectors from the horn and cruise control set/resume switches, then remove the steering wheel nut.

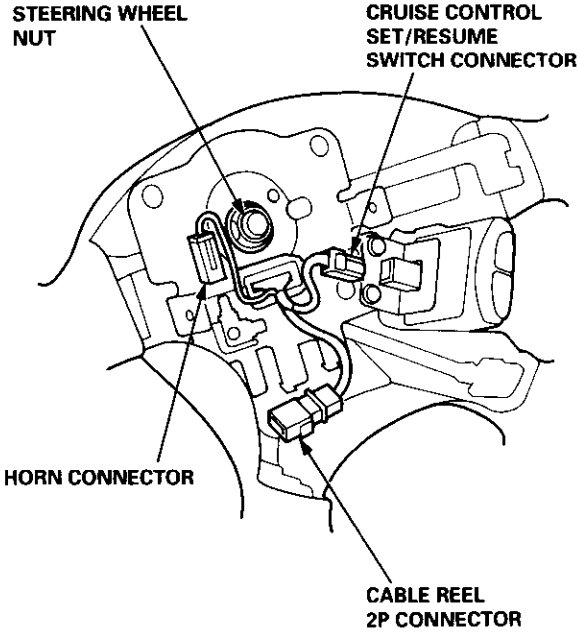


7. Remove the steering wheel using a steering wheel puller.

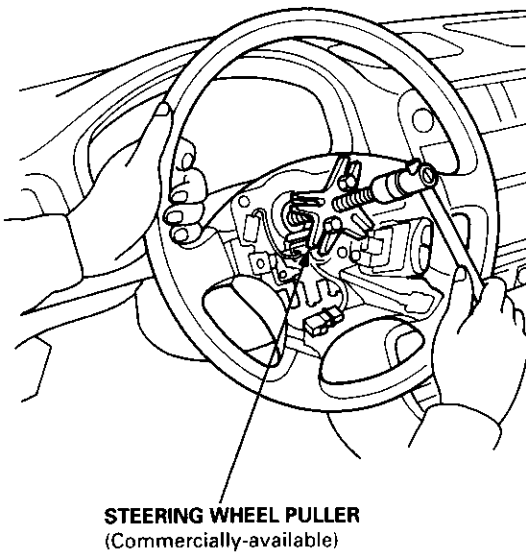

8. Remove the column covers.

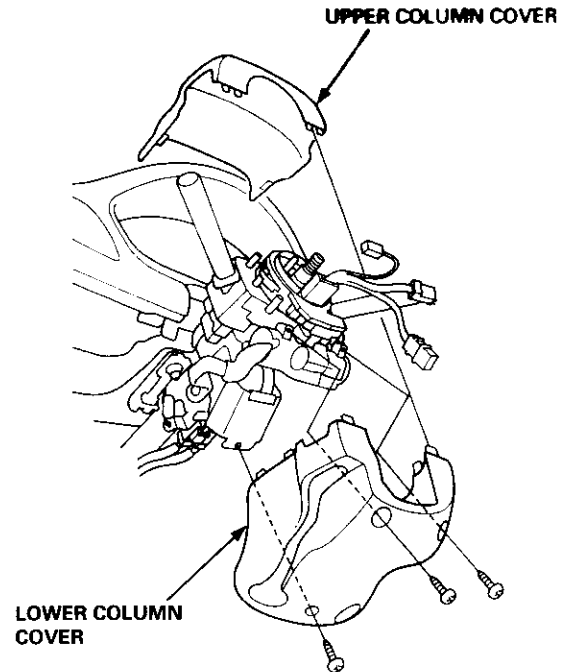

9. Disconnect the 3P connector between the main wire harness and cable reel sub-harness, and the 2P connector between the cable reel and SRS main harness.

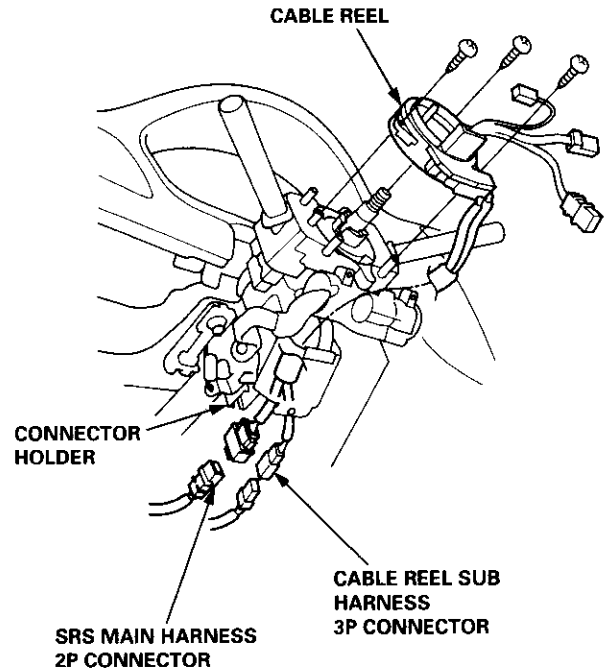

10. Remove the cable reel from the column. (cont'd)


Cable Reel

Replacement (cont'd)


NOTE:

- Before installing the steering wheel, the front wheels should be aligned straight ahead.
- Be sure to install the harness wires so that they are not pinched or interfering with other parts.
- After reassembly, confirm that the wheels are still turned straight ahead and that the steering wheel spoke angle is correct (road test). If minor spoke angle adjustment is necessary, do so only by adjusting the tie-rods, not by removing and repositioning the steering wheel.

11. Set the cancel sleeve so that the projections are aligned vertically.

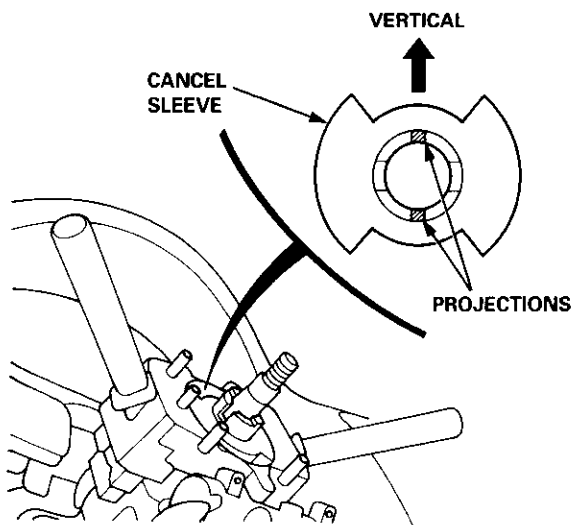


12. Carefully install the cable reel on the steering column shaft. Then connect the 3P connector to the cable reel sub-harness, and connect the 2P connector to the SRS main harness.

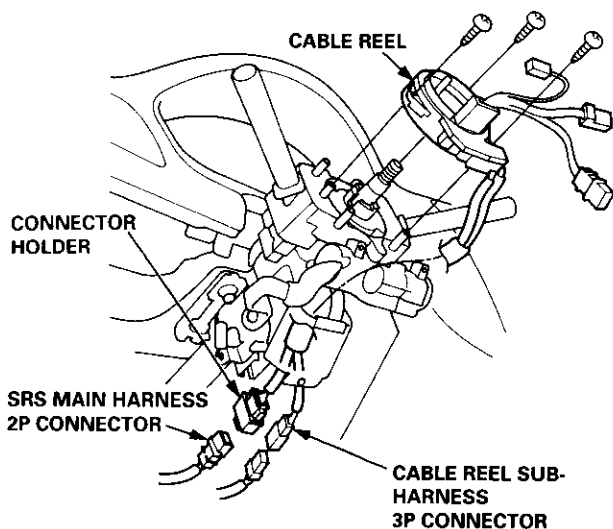


13. Install the steering column covers.

14. If necessary, center the cable reel. (New replacement cable reels come centered.) Do this by first rotating the cable reel clockwise until it stops. Then rotate it counterclockwise (approximately two and a half turns) until the arrow mark on the cable reel label points straight up.

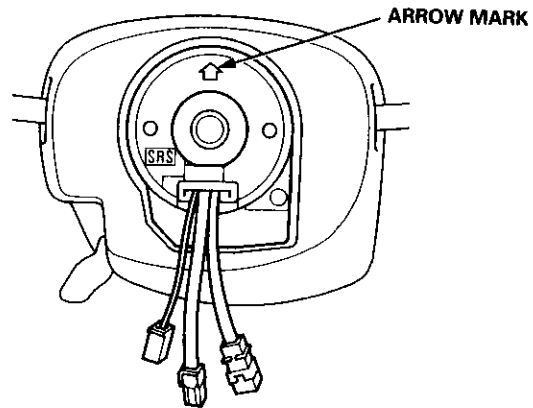


15. Install the steering wheel, then connect the horn connector and cruise control set/resume switch connector.

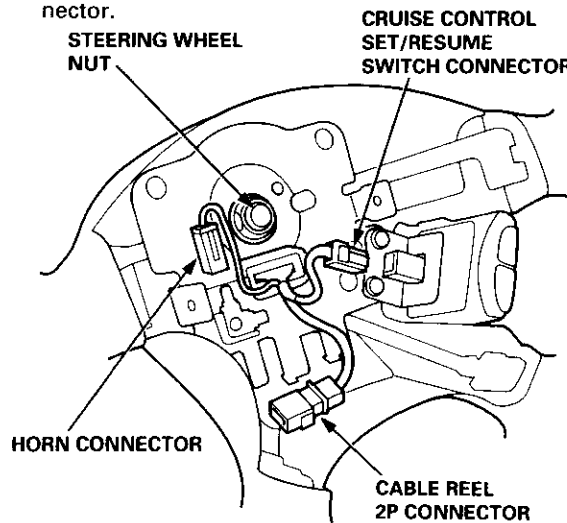


16. Install the steering wheel nut, and connect the horn connector to the steering wheel. Then install the driver's airbag.

TORX BOLTS
9.8 N-m (1.0 kgf-m, 7.2 lbf-ft)
Replace.
Use a Torx T30 bit.

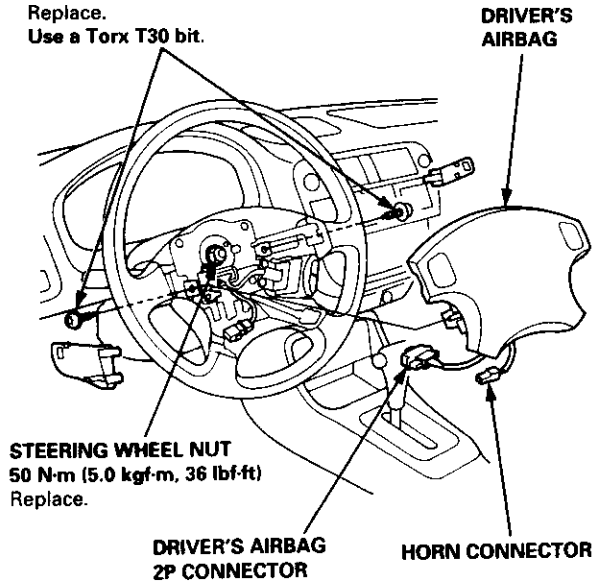

STEERING WHEEL NUT
50 N-m (5.0 kgf-m, 36 lbf-ft)
Replace.

17. Attach the cable reel 2P and 3P connector to the connector holder. Then install the driver's dashboard lower cover.

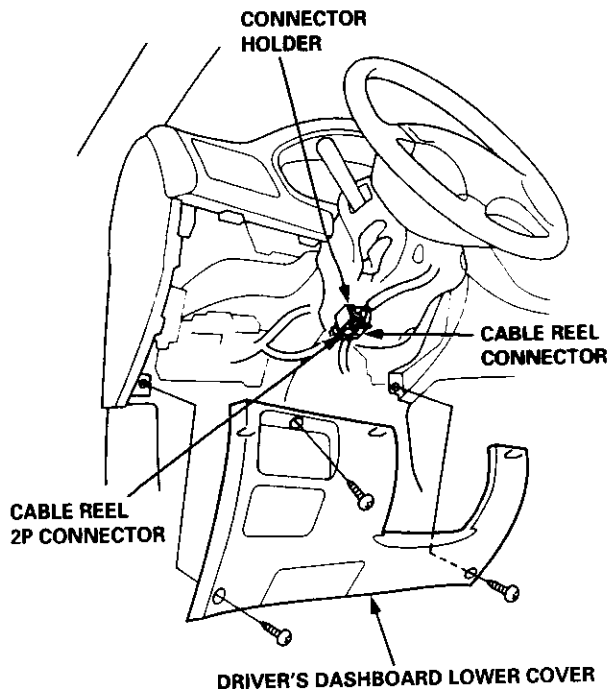

18. Reconnect the driver's airbag 2P connector to the cable reel 2P connector, and reinstall the access panel on the steering wheel.

19. Reconnect the battery positive cable, then the negative cable.

20. After installing the cable reel, confirm proper system operation:

- Turn the ignition switch ON (II); the SRS indicator light should come on for about six seconds and then go off.
- Make sure both horn buttons work.
- Make sure the headlight and wiper switches work.
- Go for a test drive, and make sure the cruise control switches work.

SRS Unit

Replacement

CAUTION:

- Before disconnecting any part of the SRS wire harness, disconnect the airbag connector(s).
- During installation or replacement, do not bump (impact wrench, hammer etc.) the area near the SRS unit.

NOTE:

- Do not damage the SRS unit terminals or connectors.
- Do not disassemble the SRS unit; it has no serviceable parts.
- Store the SRS unit in a clean, dry area.
- Do not use any SRS unit which has been subjected to water or shows signs of being dropped or improperly handled, such as dents, cracks or deformation.

1. Disconnect the battery negative cable, then disconnect the positive cable from the battery, and wait at least three minutes.
2. Disconnect the airbag connector(s):

NOTE: When disconnected, the airbag connector is automatically shorted.


Driver's Side:

- Remove the access panel from the steering wheel, then disconnect the 2P connector between the driver's airbag and cable reel (see page 24-11).


Front Passenger's Side:

- Disconnect the 2P connector between the front passenger's airbag and SRS main harness (see page 24-11).

3. Remove the right side cover from the SRS unit.

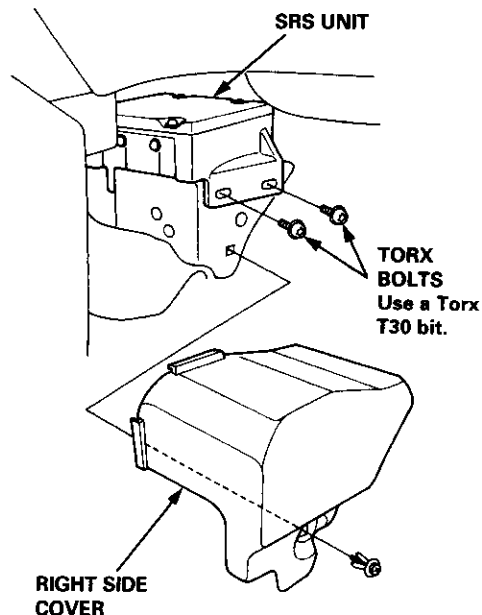


4. Remove the left side cover from the SRS unit, then disconnect the SRS main harness 18P connector from the SRS unit.

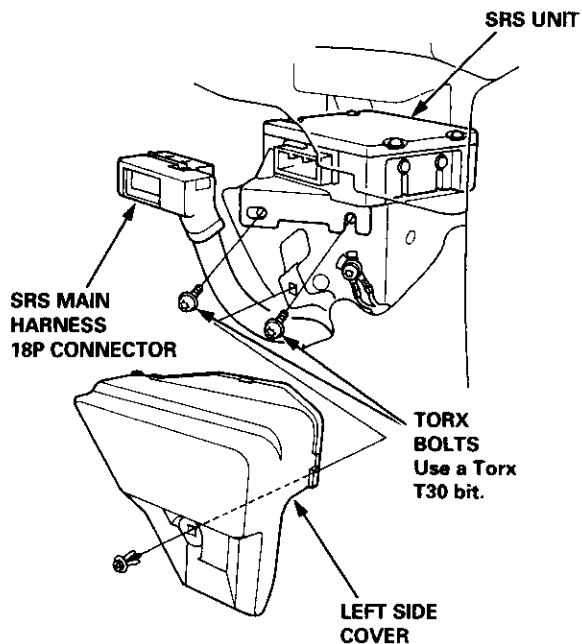

5. Remove the four Torx bolts from the SRS unit, then pull out the SRS unit from the driver's side.




6. Install the new SRS unit.

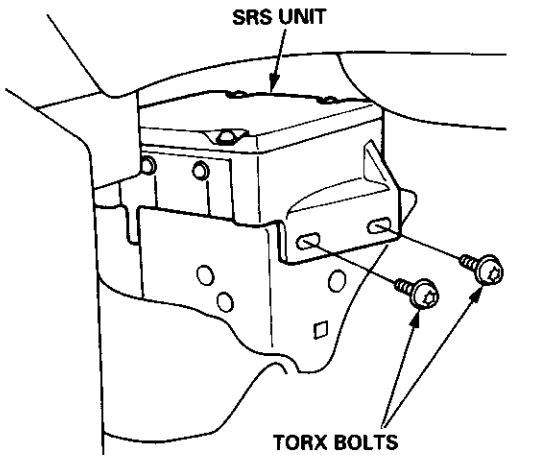

TORX BOLTS
9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)
Use a Torx T30 bit.
Replace.

**SRS MAIN HARNESS
18P CONNECTOR**

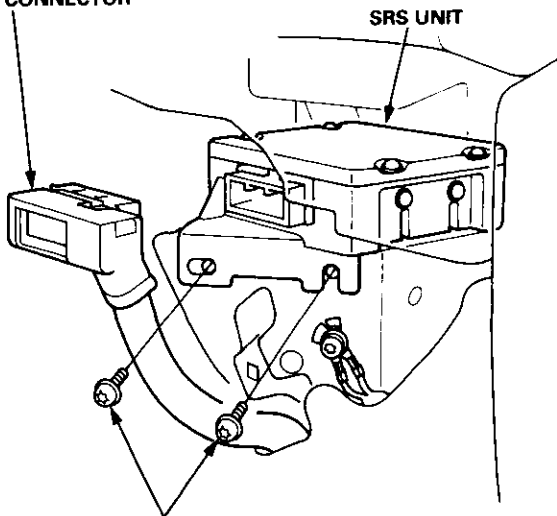

TORX BOLTS
9.8 N·m (1.0 kgf·m, 7.2 lbf·ft)
Use a Torx T30 bit.
Replace.


7. Connect the SRS main harness 18P connector to the SRS unit; push it into position until it clicks.
8. Install the SRS unit covers (right and left). Make sure the covers snap together in the middle.

9. Reconnect the driver's airbag 2P connector to the cable reel 2P connector, then reinstall the access panel on the steering wheel.
10. Reconnect the front passenger's airbag connector to the SRS main harness.
11. Reconnect the battery positive cable, then the negative cable.
12. After installing the SRS unit, confirm proper system operation: Turn the ignition switch ON (II); the SRS indicator light should come on for about six seconds and then go off.

Troubleshooting 96 EX ECU Plug A (a-d)

Engine/Powertrain Control Module Terminal Arrangement ('96 – 98 Models, '99 – 00 D16Y5 engine with M/T)

ECM/PCM CONNECTOR A (32P)

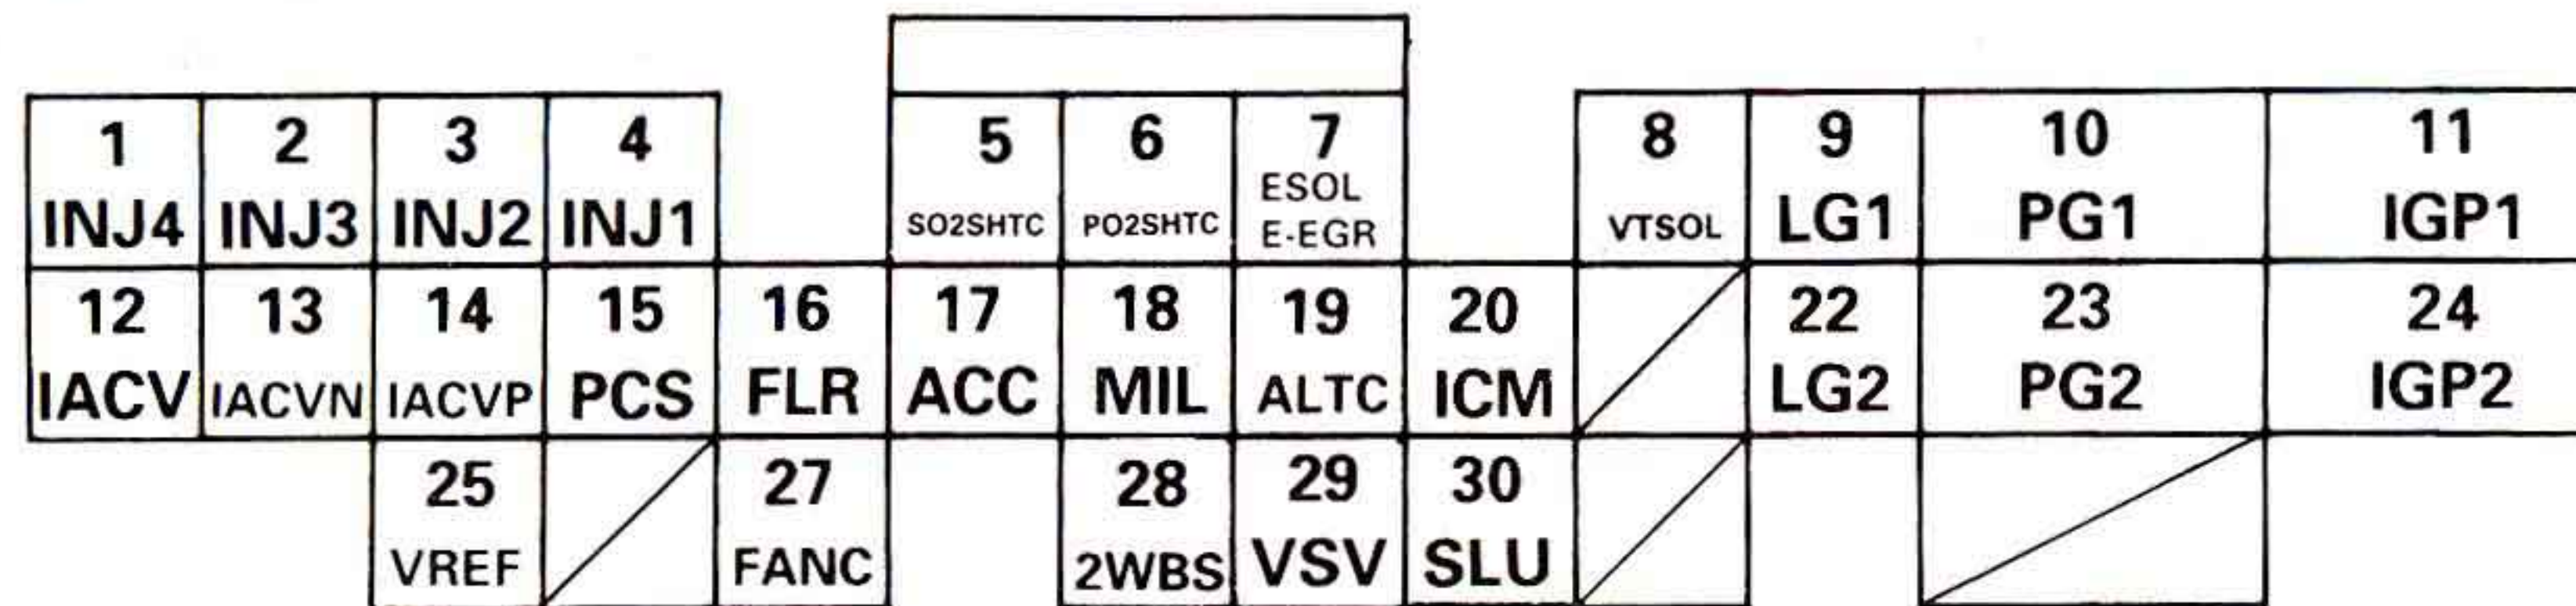

Wire side of female terminals

ECM/PCM CONNECTOR A (32P)


NOTE: Standard battery voltage is 12 V.

Terminal number	Wire color	Terminal name	Description	Signal
1	YEL	INJ4 (No. 4 FUEL INJECTOR)	Drives No. 4 fuel injector.	With engine running: duty controlled
2	BLU	INJ3 (No. 3 FUEL INJECTOR)	Drives No. 3 fuel injector.	
3	RED	INJ2 (No. 2 FUEL INJECTOR)	Drives No. 2 fuel injector.	
4	BRN	INJ1 (No. 1 FUEL INJECTOR)	Drives No. 1 fuel injector.	
5	BLK/WHT	SO2SHTC (SECONDARY HEATED OXYGEN SENSOR HEATER CONTROL)	Drives secondary heated oxygen sensor heater.	With ignition switch ON (II): battery voltage With fully warmed up engine running: duty controlled
6	BLK/WHT	PO2SHTC (PRIMARY HEATED OXYGEN SENSOR HEATER CONTROL)	Drives primary heated oxygen sensor heater.	With ignition switch ON (II): battery voltage With fully warmed up engine running: duty controlled
7	RED*3	ESOL (EGR CONTROL SOLENOID VALVE)	Drives EGR control solenoid valve.	With EGR operating during driving with fully warmed up engine: duty controlled With EGR not operating: 0 V
	PNK*10	E-EGR	Drives EGR valve.	With EGR operating during driving with fully warmed up engine: duty controlled. With EGR not operating: 0 V
8*12	GRN/YEL	VTS (VTEC SOLENOID VALVE)	Drives VTEC solenoid valve.	With engine at low engine speed: 0 V With engine at high engine speed: battery voltage
9	BRN/BLK	LG1 (LOGIC GROUND)	Ground for the ECM/PCM control circuit.	Less than 1.0 V at all times
10	BLK	PG1 (POWER GROUND)	Ground for the ECM/PCM power circuit.	
11	YEL/BLK	IGP1 (POWER SOURCE)	Power source for the ECM/PCM control circuit.	With ignition switch ON (III): battery voltage With ignition switch OFF: 0 V
12*5	BLK/BLU	IACV (IDLE AIR CONTROL VALVE)	Drives IACV.	With engine running: duty controlled
13*4	ORN	IACV N (IDLE AIR CONTROL VALVE NEGATIVE SIDE)	Drives the IAC valve (negative side).	
14*4	BLK/BLU	IACV P (IDLE AIR CONTROL VALVE POSITIVE SIDE)	Drives IAC valve (positive side).	
15	RED/YEL	PCS (EVAP PURGE CONTROL SOLENOID VALVE)	Drives EVAP purge control solenoid valve.	With engine running, engine coolant below 154°F (68°C): battery voltage With engine running, engine coolant above 154°F (68°C): duty controlled
16	GRN/YEL	FLR (FUEL PUMP RELAY)	Drives fuel pump relay.	0 V for two seconds after turning ignition switch ON (III), then battery voltage
17	BLK/RED	ACC (A/C CLUTCH RELAY)	Drives A/C clutch relay.	With compressor ON: 0 V With compressor OFF: battery voltage
18	GRN/ORN	MIL (MALFUNCTION INDICATOR LAMP)	Drives MIL.	With MIL turned ON: 0 V With MIL turned OFF: battery voltage
19*1	WHT/GRN	ALTC (ALTERNATOR CONTROL)	Sends alternator control signal.	With fully warmed-up engine running: battery voltage During driving with small electrical load: 0 V
20	YEL/GRN	ICM (IGNITION CONTROL MODULE)	Sends ignition pulse.	With ignition switch ON (II): battery voltage With engine running: about 10 V (depending on engine speed)
22	BRN/BLK	LG2 (LOGIC GROUND)	Ground for the ECM/PCM control circuit.	Less than 1.0 V at all times
23	BLK	PG2 (POWER GROUND)	Ground for the ECM/PCM power circuit.	
24	YEL/BLK	IGP2 (POWER SOURCE)	Power source for the ECM/PCM control circuit.	With ignition switch ON (II): battery voltage With ignition switch OFF: 0 V
25*6	WHT/RED	VREF (REFERENCE VOLTAGE)	Provides reference voltage to TCM.	With ignition switch ON (II): about 5 V With ignition switch OFF: 0 V
27*1	GRN	FANC (RADIATOR FAN CONTROL)	Drives radiator fan relay.	With radiator fan running: 0 V With radiator fan stopped: battery voltage
28*8, *15	BLU	2WBS (EVAP BYPASS SOLENOID VALVE)	Drives EVAP bypass solenoid valve.	With ignition switch ON (III): battery voltage
29*8, *15	LT GRN/WHT	VSV (EVAP CONTROL CANISTER VENT SHUT VALVE)	Drives EVAP control canister vent shut valve.	With ignition switch ON (III): battery voltage
30*3	WHT/RED	SLU (INTERLOCK CONTROL UNIT)	Detects interlock control unit signal.	With ignition switch ON (II) and brake pedal depressed: battery voltage


*1: USA model
 *2: A/T (D16Y7, D16Y8 engine)
 *3: CVT (D16Y5 engine)
 *4: A/T and D16Y7 engine
 *5: Except A/T and D16Y7 engine
 *6: A/T (D16Y8 engine)
 *7: CVT (D16Y5 engine) and D16Y8 engine
 *8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine, '99 – 00 D16Y5 (M/T) engine

*9: D16Y5 engine
 *10: M/T (D16Y5 engine)
 *11: Except M/T (D16Y5 engine)
 *12: D16Y5, D16Y8 engine
 *13: D16Y8 engine
 *14: D16Y7 engine
 *15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98 D16Y7 engine

96 EX ECU Plug B (a-d)

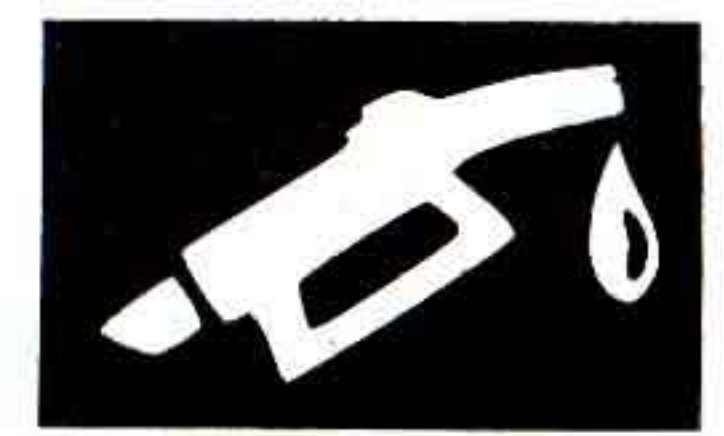

PCM CONNECTOR B (25P)

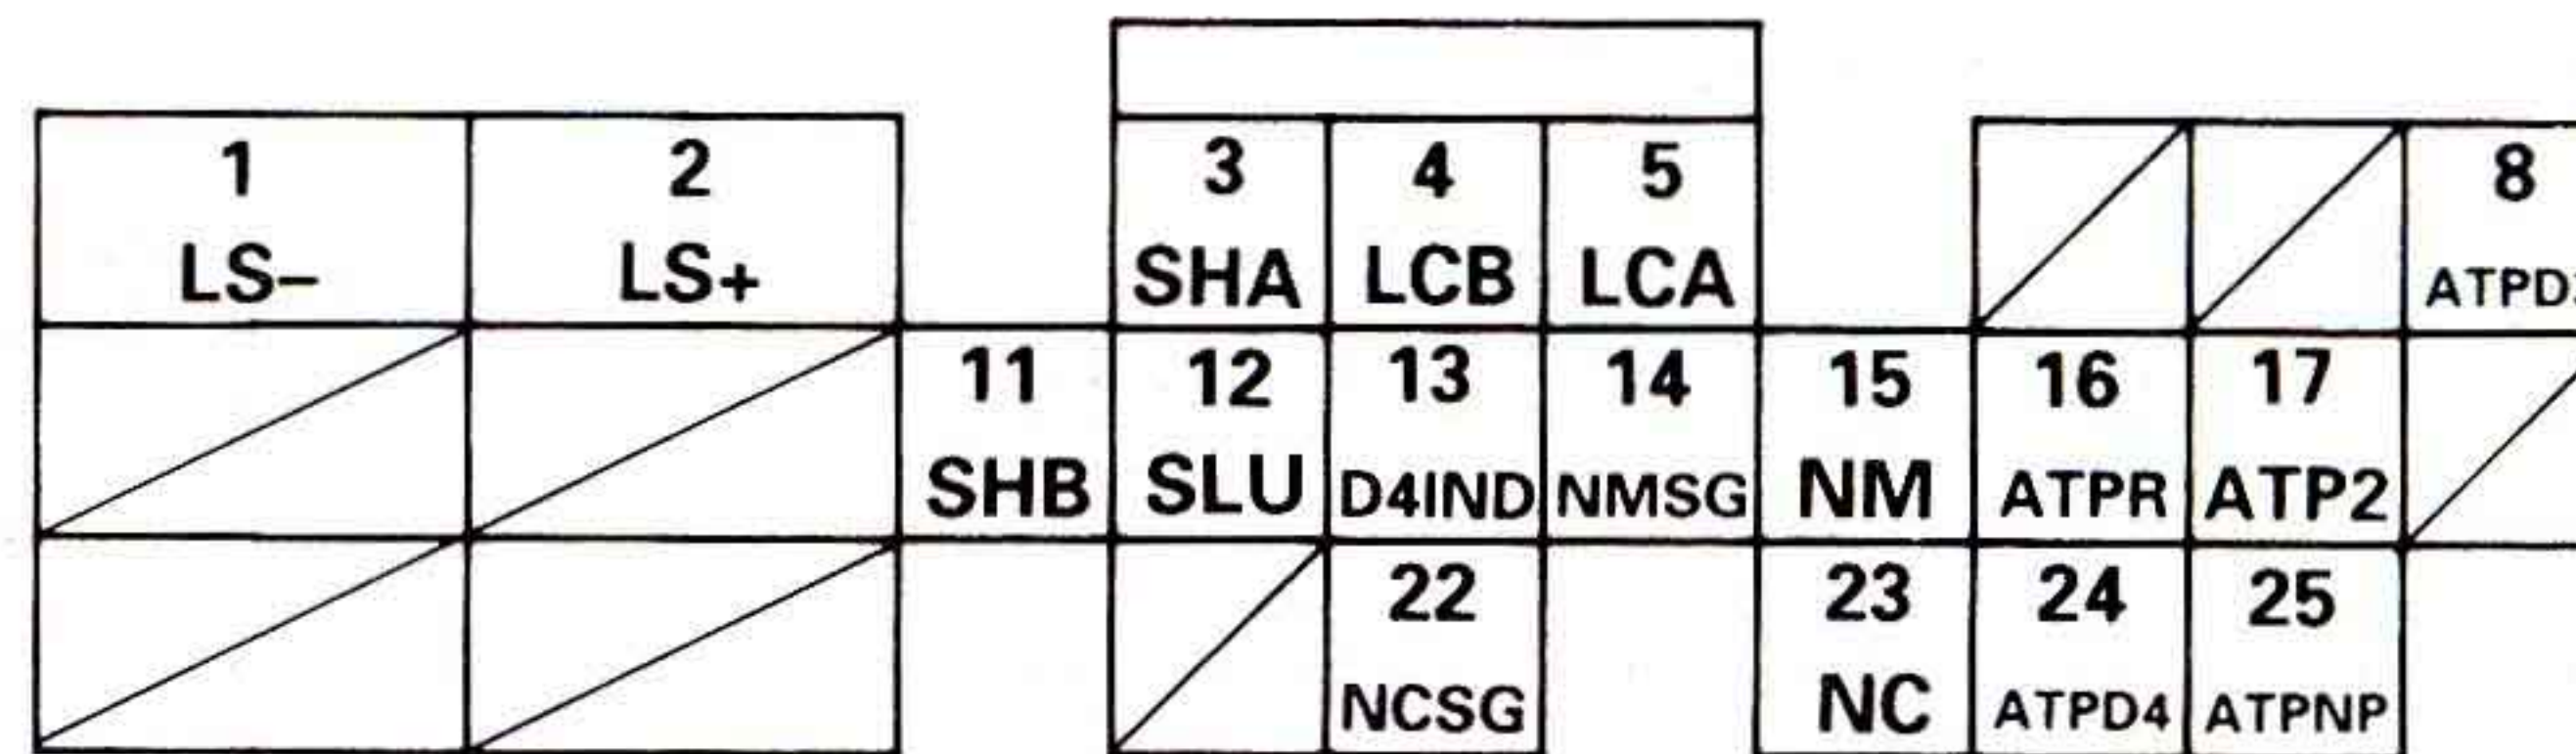

Wire side of female terminals

PCM CONNECTOR B (25P)*2

NOTE: Standard battery voltage is 12 V.

Terminal number	Wire color	Terminal name	Description	Signal
1	WHT	LS- (LINEAR SOLENOID VALVE - SIDE)	Ground for linear solenoid valve.	With ignition switch ON (II): pulses
2	RED	LS+ (LINEAR SOLENOID VALVE + SIDE)	Drives linear solenoid valve.	With ignition switch ON (II): pulses
3	BLU/YEL	SHA (SHIFT CONTROL SOLENOID VALVE A)	Drives shift control solenoid valve A.	With engine running in 2nd, 3rd gears: battery voltage With engine running in 1st, 4th gears: about 0 V
4	GRN/BLK	LC B (LOCK-UP CONTROL SOLENOID VALVE B)	Drives lock-up control solenoid valve B.	With lock-up ON: battery voltage With lock-up OFF: 0 V
5	YEL	LC A (LOCK-UP CONTROL SOLENOID VALVE A)	Drives lock-up control solenoid valve A.	With lock-up ON: battery voltage With lock-up OFF: 0 V
8	PNK	ATPD3 (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In D₃ position: 0 V In any other position: battery voltage
11	GRN/WHT	SHB (SHIFT CONTROL SOLENOID VALVE B)	Drives shift control solenoid valve B.	With engine running in 1st, 2nd: battery voltage With engine running in 3rd, 4th: about 0 V
12	WHT/RED	SLU (INTERLOCK CONTROL UNIT)	Drives interlock control unit.	With ignition switch ON (II) and brake pedal depressed: 0 V
13	GRN/BLK	D4 IND (D4 INDICATOR LIGHT)	Drives D4 indicator light.	With D₄ indicator light turned ON: battery voltage With D₄ indicator light turned OFF: 0 V
14	WHT	NMSG (MAINSHAFT SPEED SENSOR GROUND)	Ground for mainshaft speed sensor.	
15	RED	NM (MAINSHAFT SPEED SENSOR)	Detects mainshaft speed sensor signal.	With engine running: pulses
16	WHT	ATPR (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In R position: 0 V In any other position: battery voltage
17	BLU	ATP2 (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In 2 position: 0 V In any other position: battery voltage
22	GRN	NCSG (COUNTERSHAFT SPEED SENSOR GROUND)	Ground for countershaft speed sensor.	
23	BLU	NC (COUNTERSHAFT SPEED SENSOR)	Detects countershaft speed sensor signal.	With ignition switch ON (II), and front wheels rotating: pulses
24	YEL	ATPD4 (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In D₄ position: 0 V In any other position: 5 V
25	LT GRN	ATPNP (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In N or P position: 0 V In any other position: battery voltage

*1: USA model

*2: A/T (D16Y7, D16Y8 engine)

*3: CVT (D16Y5 engine)

*4: A/T and D16Y7 engine

*5: Except A/T and D16Y7 engine

*6: A/T (D16Y8 engine)

*7: CVT (D16Y5 engine) and D16Y8 engine

*8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine, '99 - 00 D16Y5 (M/T) engine

*9: D16Y5 engine

*10: M/T (D16Y5 engine)

*11: Except M/T (D16Y5 engine)

*12: D16Y5, D16Y8 engine

*13: D16Y8 engine

*14: D16Y7 engine


*15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98D16Y7 engine

(cont'd)

Troubleshooting 96 EX ECU Plug C (a-d)

Engine/Powertrain Control Module Terminal Arrangement ('96 – 98 Models '99 – 00 D16Y5 engine with M/T) (cont'd)

ECM/PCM CONNECTOR C (31P)

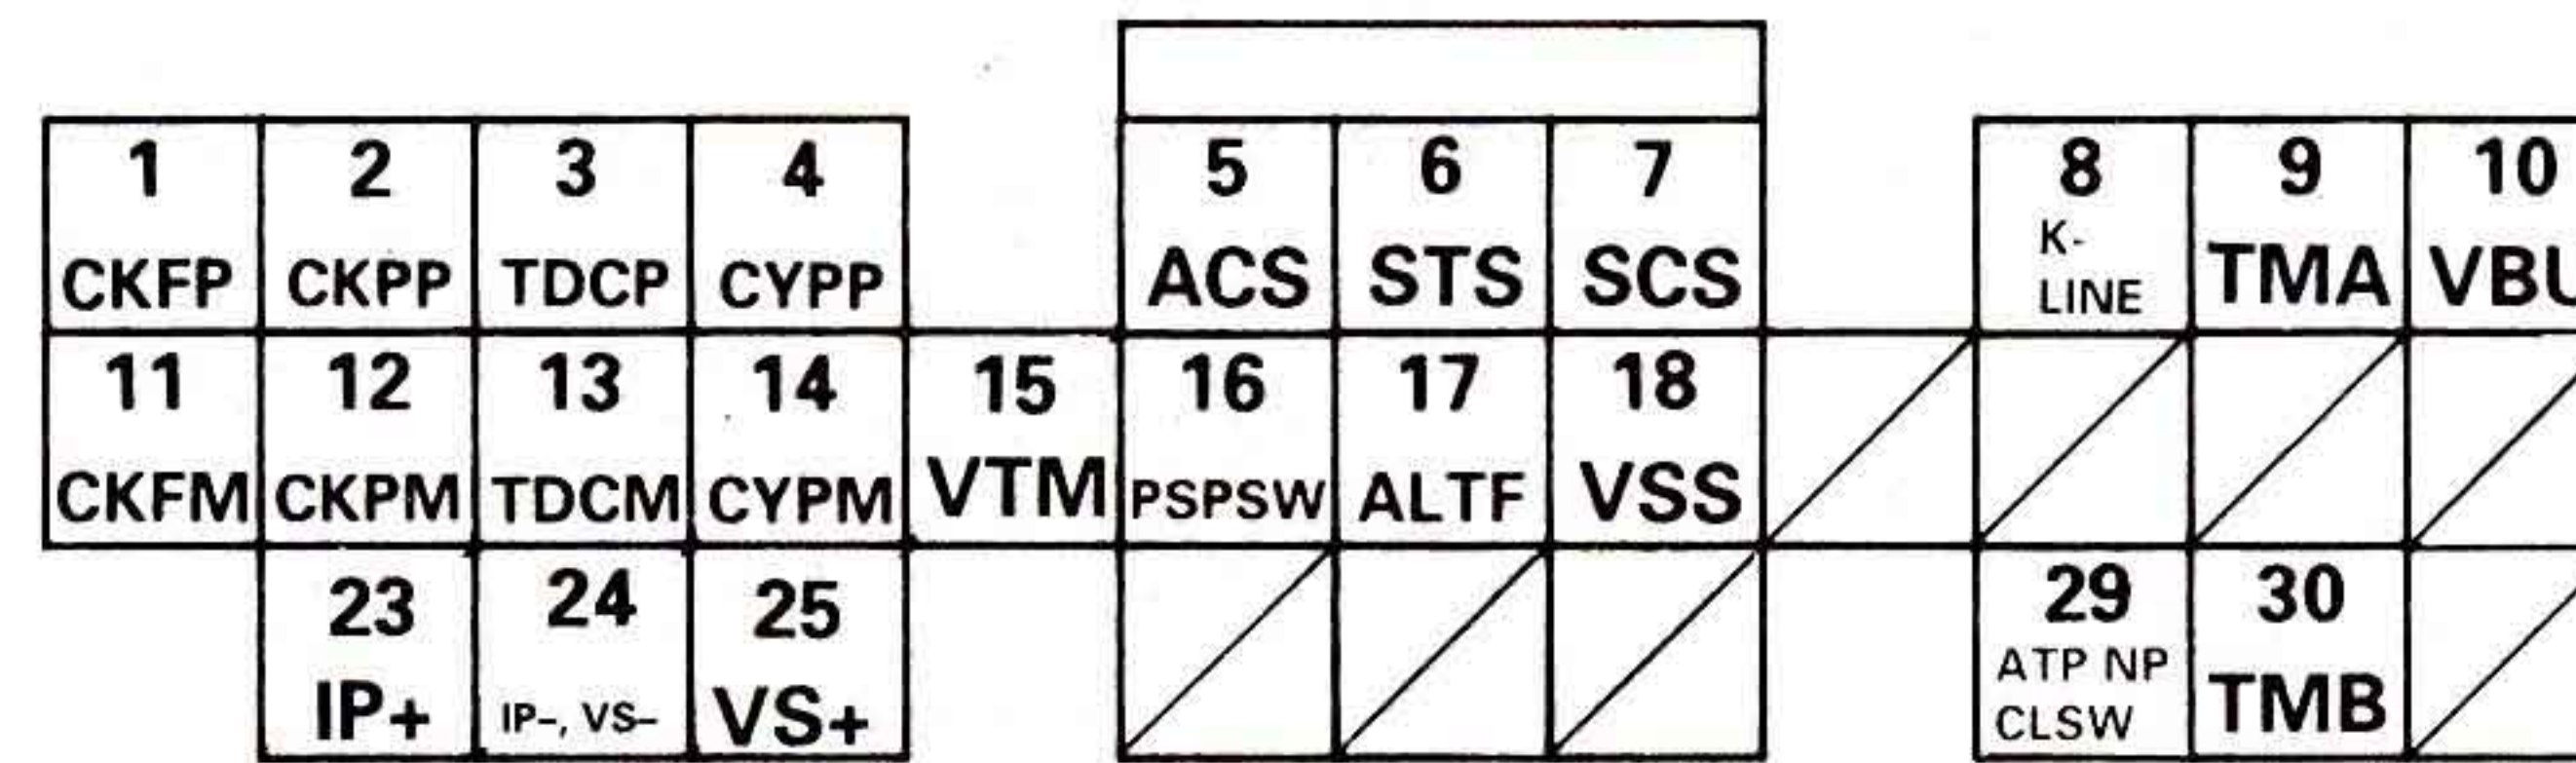

Wire side of female terminals

ECM/PCM CONNECTOR C (31P)

NOTE: Standard battery voltage is 12 V.

Terminal number	Wire color	Terminal name	Description	Signal
1	BLU/RED	CKFP (CKF SENSOR P SIDE)	Detects CKF sensor.	With engine running: pulses
2	BLU	CKPP (CKP SENSOR P SIDE)	Detects CKP sensor.	With engine running: pulses
3	GRN	TDCP (TDC SENSOR P SIDE)	Detects TDC sensor.	With engine running: pulses
4	YEL	CYPP (CYP SENSOR P SIDE)	Detects CYP sensor.	With engine running: pulses
5	BLU/RED	ACS (A/C SWITCH SIGNAL)	Detects A/C switch signal.	With A/C switch ON: 0 V With A/C switch OFF: battery voltage
6	BLU/ORN	STS (STARTER SWITCH SIGNAL)	Detects starter switch signal.	With starter switch ON (III): battery voltage With starter switch OFF: 0 V
7	BRN	SCS (SERVICE CHECK SIGNAL)	Detects service check connector signal (the signal causing a DTC indication)	With the connector connected: 0 V With the connector disconnected: about 5 V or battery voltage
8	LT BLU	K-LINE (DLC)	Sends and receives scan tool signal.	With ignition switch ON (II): about 5 V
9*3	GRY	TMA	Data communication with TCM: ECM control data output	With ignition switch ON (II): pulses
10	WHT/BLU	VBU (VOLTAGE BACK UP)	Power source for the ECM/PCM control circuit. Power source for the DTC memory	Battery voltage at all times
11	WHT/RED	CKFM (CKF SENSOR M SIDE)	Ground for CKF sensor signal.	
12	WHT	CKPM (CKP SENSOR M SIDE)	Ground for CKP sensor signal.	
13	RED	TDCM (TDC SENSOR M SIDE)	Ground for TDC sensor signal.	
14	BLK	CYPM (CKP SENSOR M SIDE)	Ground for CYP sensor signal.	
15*12	BLU/BLK	VTM (VTEC PRESSURE SWITCH)	Detects VTEC pressure switch signal.	With engine at low engine speed: 0 V With engine at high engine speed: battery voltage
16	GRN	PSPSW (P/S OIL PRESSURE SWITCH)	Detects PSP switch signal.	At idle with steering wheel in straight ahead position: 0 V At idle with steering wheel at full lock: battery voltage
17	WHT/RED	ALTF (ALTERNATOR FR SIGNAL)	Detects alternator FR signal.	With fully warmed up engine running: 0 V – battery voltage (depending on electrical load)
18	BLU/WHT	VSS (VEHICLE SPEED SENSOR)	Detects VSS signal.	With ignition switch ON (II) and front wheels rotating: cycles 0 V – 5 V
23*10	BLK	IP+ (HO2S PUMP CELL +)	Controls HO2S pump cell.	With ignition switch ON (II): about 0.5 – 5.3 V
24*10	RED	IP-, VS- (HO2S COMMON)	Reference voltage supply.	With fully warmed up engine at idle: about 2.6 – 2.8 V
25*10	WHT	VS+ (VS CELL VOLTAGE)	Detects VS cell voltage.	With ignition switch ON (II): about 7 V
29	LT GRN*3	ATPNP (A/T GEAR POSITION SWITCH)	Detects A/T gear position switch signal.	In N or P position: 0 V In any other position: battery voltage
	RED*10	CLSW (CLUTCH SWITCH)	Detects clutch switch signal.	With clutch pedal released: about 5 V With clutch pedal depressed: 0 V
30	PNK*3	TMB	Data communication with TCM: ECM control data input	With ignition switch ON (II): pulses

*1: USA model

*2: A/T (D16Y7, D16Y8 engine)

*3: CVT (D16Y5 engine)

*4: A/T and D16Y7 engine

*5: Except A/T and D16Y7 engine

*6: A/T (D16Y8 engine)

*7: CVT (D16Y5 engine) and D16Y8 engine

*8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine, '99 – 00 D16Y5 (M/T) engine

*9: D16Y5 engine

*10: M/T (D16Y5 engine)

*11: Except M/T (D16Y5 engine)


*12: D16Y5, D16Y8 engine

*13: D16Y8 engine

*14: D16Y7 engine

*15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98D16Y7 engine

96 EX ECU Plug D (a-d)

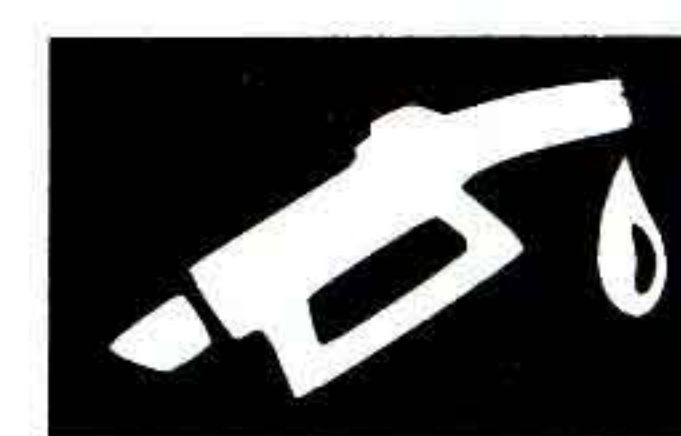

ECM/PCM CONNECTOR D (16P)

1		2	3	4		5
TPS		ECT	MAP	VCC1		BKSW
6	7	8	9	10	11	12
KS	PO2S/ LABEL	IAT	EGRL	VCC2	SG2	SG1
13	14	15		16		
SHO2SG	SO2S	PTANK		EL		

Wire side of female terminals

ECM/PCM CONNECTOR D (16P)

NOTE: Standard battery voltage is 12 V.

Terminal number	Wire color	Terminal name	Description	Signal
1	RED/BLK	TPS (THROTTLE POSITION SENSOR)	Detects TP sensor signal.	With throttle fully open: about 4.8 V With throttle fully closed: about 0.5 V
2	RED/WHT	ECT (ENGINE COOLANT TEMPERATURE SENSOR)	Detects ECT sensor signal.	With ignition switch ON(II): about 0.1 – 4.8 V (depending on engine coolant temperature)
3	RED/GRN	MAP (MANIFOLD ABSOLUTE PRESSURE SENSOR)	Detects MAP sensor signal.	With ignition switch ON(II): about 3 V At idle: about 1.0 V (depending on engine speed)
4	YEL/RED	VCC1 (SENSOR VOLTAGE)	Power source for MAP sensor.	With ignition switch ON (II): about 5 V With ignition switch OFF: 0 V
5	GRN/WHT	BKSW (BRAKE SWITCH)	Detects brake switch signal.	With brake pedal released: 0 V With brake pedal depressed: battery voltage
6*7	RED/BLU	KS (KNOCK SENSOR)	Detects KS signal.	With engine knocking: pulses
7	WHT*11	PHO2S (PRIMARY HEATED OXYGEN SENSOR, SENSOR 1)	Detects primary heated oxygen sensor (sensor 1) signal.	With throttle fully opened from idle with fully warmed up engine: above 0.6 V With throttle quickly closed: below 0.4 V
	WHT*10	LABEL	Detects LABEL resistance.	With engine running: about 0.3 – 4.9 V
8	RED/YEL	IAT (INTAKE AIR TEMPERATURE SENSOR)	Detects IAT sensor signal.	With ignition switch ON (II): about 0.1 – 4.8 V (depending on intake air temperature)
9*3	WHT/BLK	EGRL (EGR VALVE LIFT SENSOR)	Detects EGR valve lift sensor signal.	At idle without vacuum: about 1.2 V With 27 kPa (200 mmHg, 8 in. Hg): about 4.3 V
10	YEL/BLU	VCC2 (SENSOR VOLTAGE)	Provides sensor voltage.	With ignition switch ON(II): about 5 V With ignition switch OFF: 0 V
11	GRN/BLK	SG2 (SENSOR GROUND)	Sensor ground.	Less than 1.0 V at all times
12	GRN/WHT	SG1 (SENSOR GROUND)	Ground for MAP sensor.	Less than 1.0 V at all times
13	GRN/BLK*12 RED/YEL*14	SHO2SG (SECONDARY HEATED OXYGEN SENSOR, SENSOR 2 GROUND)	Ground for secondary heated oxygen sensor (sensor 2).	
14	WHT/RED	SHO2S (SECONDARY HEATED OXYGEN SENSOR, SENSOR 2)	Detects secondary heated oxygen sensor (sensor 2) signal.	With throttle fully opened from idle with fully warmed up engine: above 0.6 V With throttle quickly closed: below 0.4 V
15*8, *15	LT GRN	PTANK (FUEL TANK PRESSURE SENSOR)	Detects fuel tank pressure sensor.	With fuel fill cap opened: about 2.5 V
16*1	GRN/RED	EL (ELD)	Detects ELD signal.	With parking lights turned on at idle: about 2.5 – 3.5 V With low beam headlights turned on at idle: about 1.5 – 2.5 V

*1: USA model

*2: A/T (D16Y7, D16Y8 engine)

*3: CVT (D16Y5 engine)

*4: A/T and D16Y7 engine

*5: Except A/T and D16Y7 engine

*6: A/T (D16Y8 engine)

*7: CVT (D16Y5 engine) and D16Y8 engine

*8: '96 D16Y8 engine (coupe), '97 D16Y8 engine (coupe: all models, sedan: KL model), '98 D16Y5 engine, '98 D16Y8 engine, '99 – 00 D16Y5 (M/T) engine

*9: D16Y5 engine

*10: M/T (D16Y5 engine)

*11: Except M/T (D16Y5 engine)

*12: D16Y5, D16Y8 engine

*13: D16Y8 engine

*14: D16Y7 engine

*15: '97 D16Y7 engine (coupe: KL model, sedan: KL (LX) model), '98 D16Y7 engine:

(cont'd)

Connector Identification and Wire Harness Routing

96 EX Engine Harness 1/2


Engine Wire Harness (D16Y5, D16Y8 engines): '96 – 98 models

Connector or Terminal	Number of Cavities	Location	Connects to	Notes
C101	10	Left side of engine compartment	Main wire harness (C303)	
C102	3	Middle of engine	Crankshaft speed fluctuation (CKF) sensor	
C103	1	Middle of engine	Engine oil pressure switch	
C104	4	Left side of engine compartment	Alternator	USA
C104	3	Left side of engine compartment	Alternator	Canada
C105	2	Middle of engine	No. 1 fuel injector	
C106	2	Middle of engine	No. 2 fuel injector	
C107	2	Middle of engine	No. 3 fuel injector	
C108	2	Middle of engine	No. 4 fuel injector	
C109	3	Middle of engine	IAC valve	A/T
C110	3	Middle of engine	Throttle position (TP) sensor	
C111	3	Middle of engine	Manifold absolute pressure (MAP) sensor	
C112	2	Middle of engine	Intake air temperature (IAT) sensor	
C113	2	Middle of engine	Power steering pressure (PSP) switch	USA
C114	2	Middle of engine	EVAP purge control solenoid valve	
C115	14	Middle of engine	Junction connector	
C116	14	Middle of engine	Junction connector	
C117	3	Left side of engine compartment	Vehicle speed sensor (VSS)	
C118	2	Middle of engine	Countershaft speed sensor	*2 (A/T)
C119	2	Middle of engine	Engine coolant temperature (ECT) switch A	
C120	10	Middle of engine	Distributor	
C121	1	Middle of engine	Engine coolant temperature (ECT) sending unit	
C122	2	Middle of engine	Engine coolant temperature (ECT) sensor	
C123	4	Middle of engine	Primary HO2S (sensor 1)	*3
C123	8	Middle of engine	Primary HO2S (sensor 1)	*1 (M/T)
C124	2	Middle of engine	Back-up light switch	M/T
C124	2	Middle of engine	Lock-up control solenoid valve	*2 (A/T)
C125	4	Middle of engine	Secondary HO2S (sensor 2)	*1
C126	2	Middle of engine	Mainshaft speed sensor	*2
C127	2	Middle of engine	Linear solenoid valve	*2
C128	2	Middle of engine	Shift control solenoid valve	*2
C129	1	Right side of engine compartment	Starter solenoid	
C130	20	Behind right kick panel	Junction connector	
C131	22	Under right side of dash	Main wire harness (C446)	
C132	32	Under right side of dash	ECM/PCM	
C133	25	Under right side of dash	PCM	*2 (A/T)
C134	31	Under right side of dash	ECM/PCM	
C135	16	Under right side of dash	ECM/PCM	
C136	14	Under right side of dash	Main wire harness (C305)	A/T: '96 model
C136	14	Under right side of dash	Main wire harness (C305)	*1 (A/T): '97 – 98 models
C136	8	Under right side of dash	Main wire harness (C305)	A/T: '97 – 98 models
C137	2	Middle of engine	Knock sensor (KS)	
C138	2	Middle of engine	IAC valve	M/T
C139	1	Middle of engine	VTEC solenoid valve	
C140	2	Middle of engine	VTEC pressure switch	
C141	2	Middle of engine	EVAP control canister vent shut valve	*2
C142	2	Middle of engine	EGR control solenoid valve	*1 (A/T)
C143	2	Left side of engine compartment	Secondary gear shaft speed sensor	*1 (A/T)
C144	3	Middle of engine	EGR valve	*1 (A/T)
C144	6	Middle of engine	EGR valve	*1 (M/T)
C145	2	Right side of engine compartment	Drive pulley speed sensor	*1 (A/T)
C146	8	Right side of engine compartment	Solenoid connector (CVT)	*1 (CVT)
C147	2	Right side of engine compartment	Driven pulley speed sensor	*1 (A/T)
T101		Left side of engine compartment	Alternator	
T102		Right side of engine compartment	Under-hood fuse/relay box	
G101		Middle of engine	Engine ground, via engine wire harness	

*1: D16Y5 engine


*2: D16Y8 engine

*3: D16Y5 (A/T), D16Y8 engines

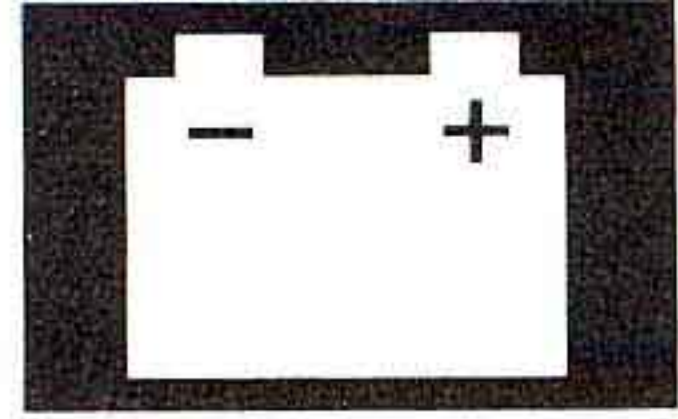

96 EX Engine Harness 2/2


'96 - 98 models:

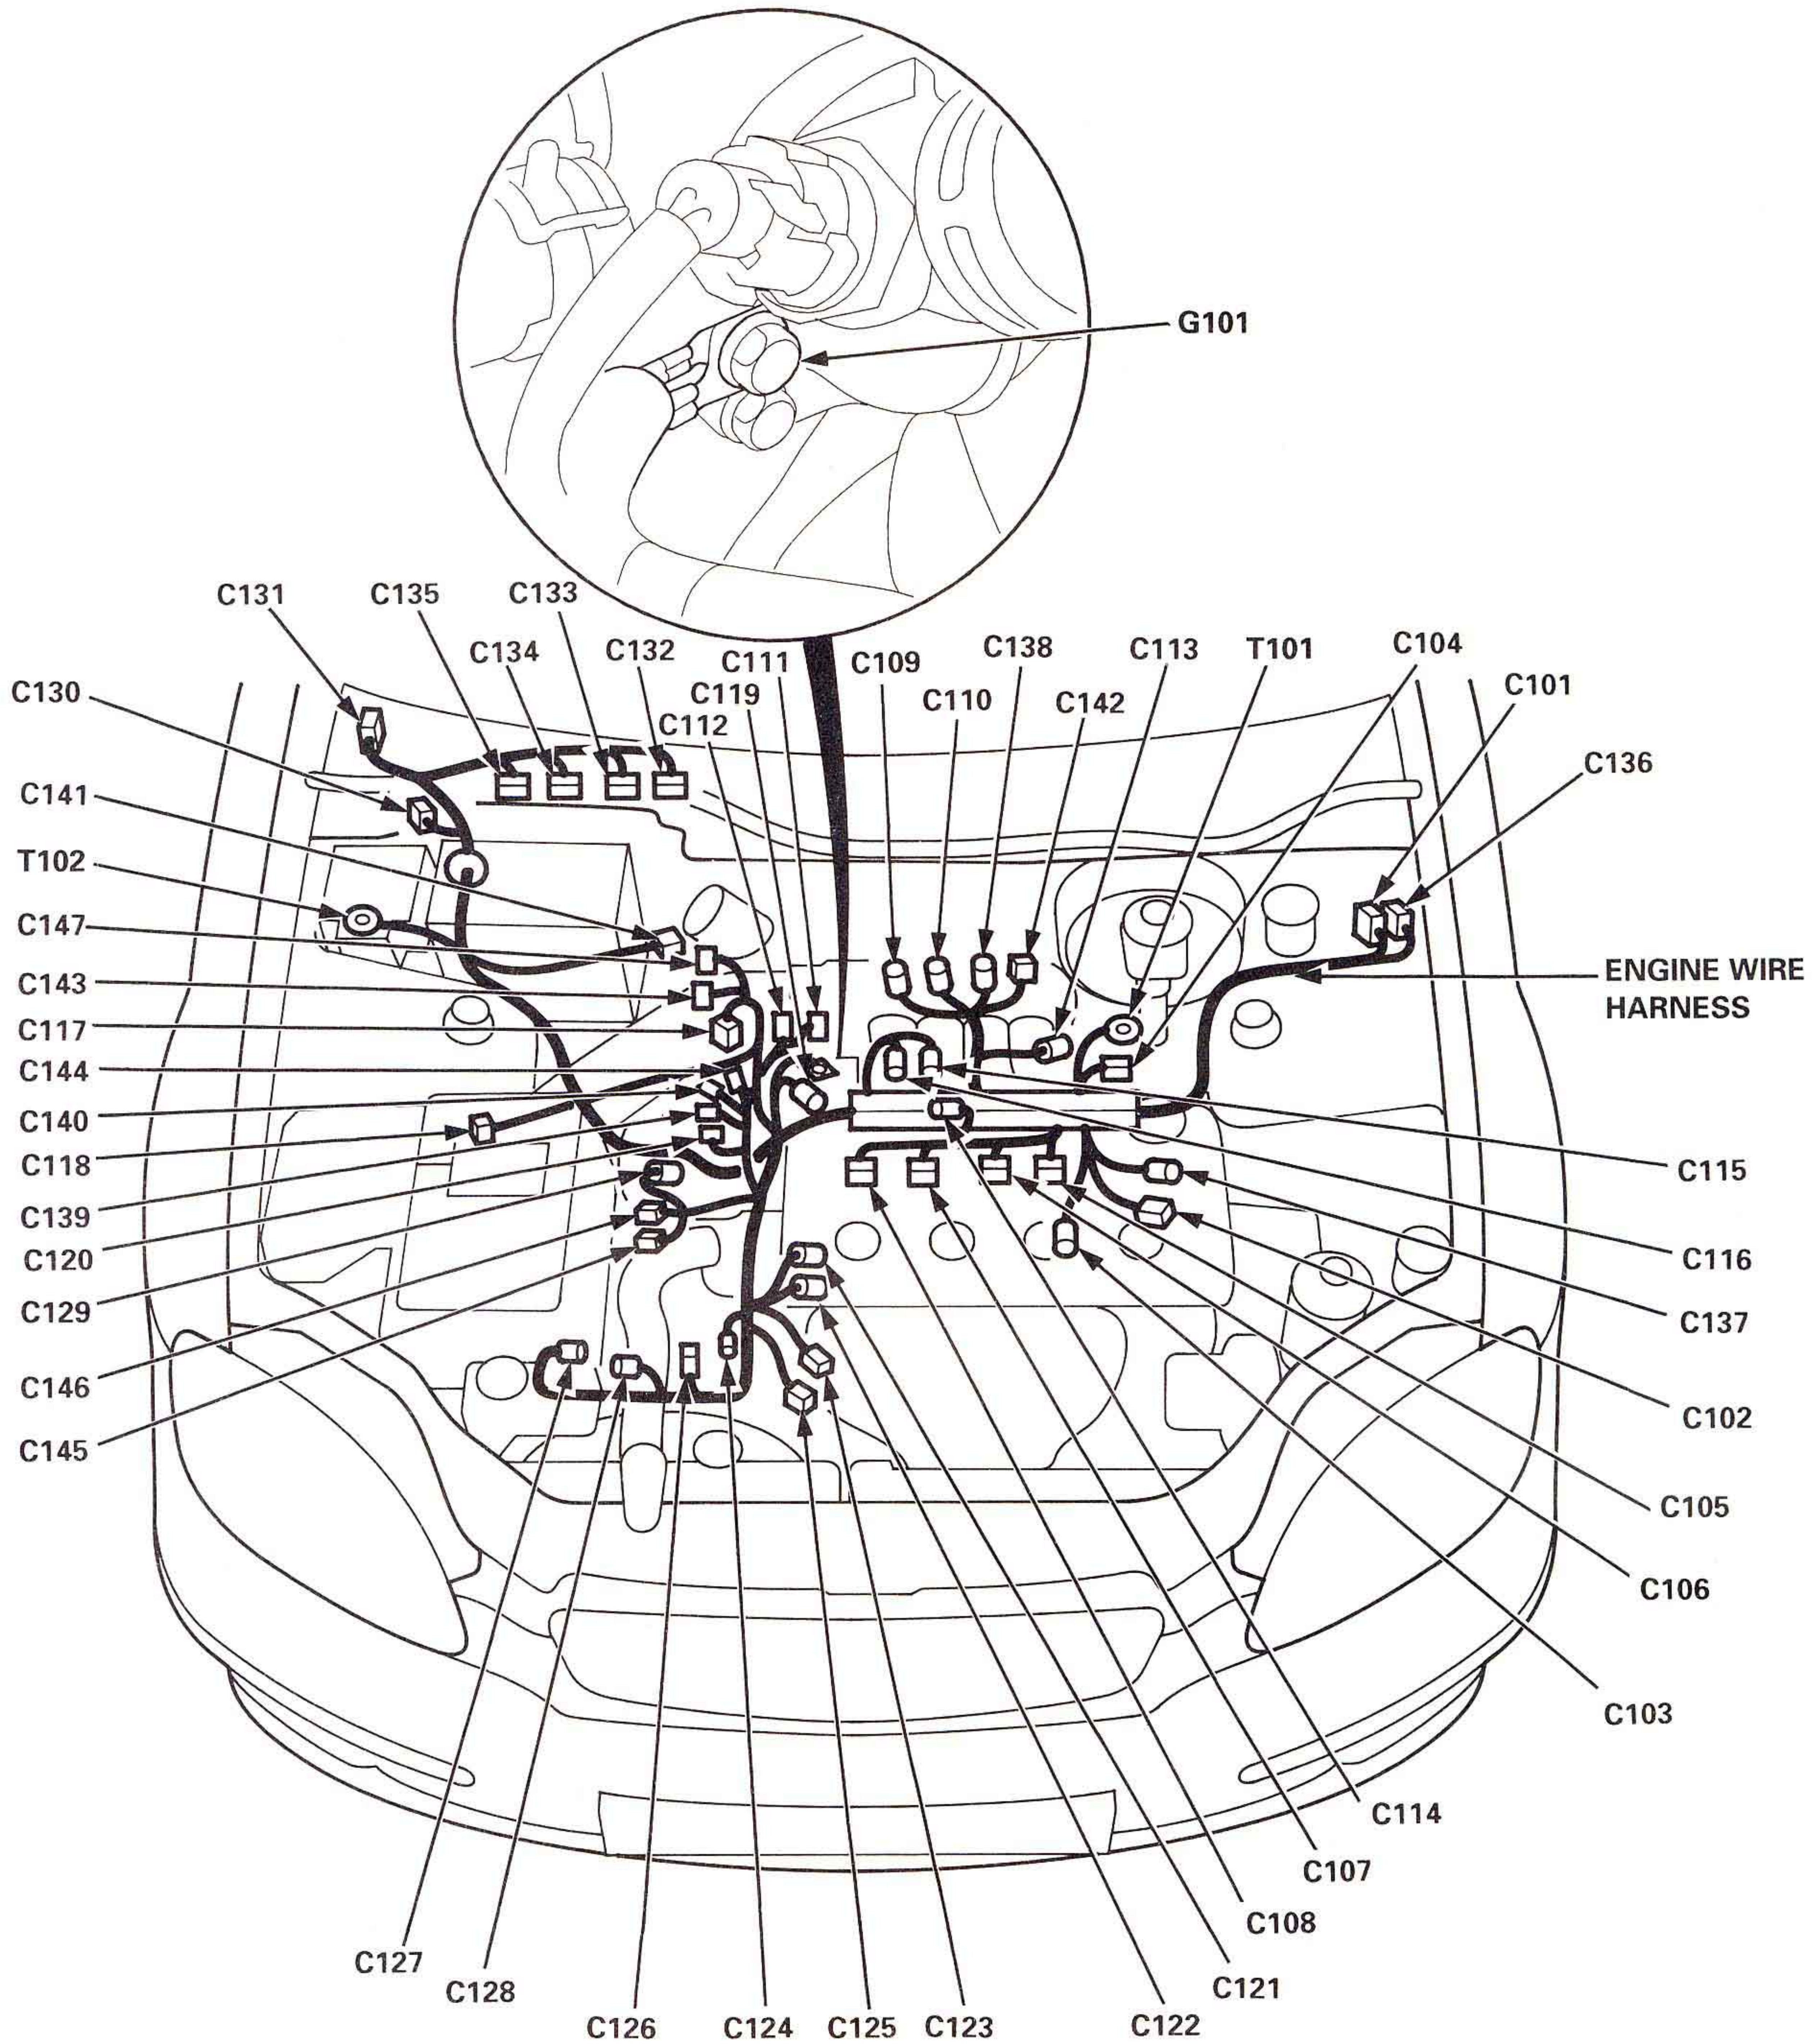

96 EX Engine Harness Plugs 1/4


System Connectors [Engine Compartment]















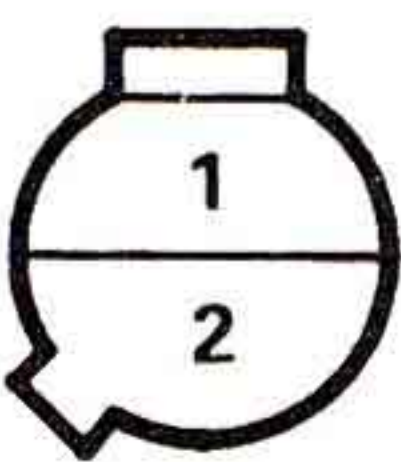
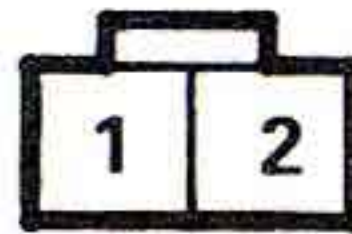
'96 - '98 D16Y5, D16Y8 engine, '99 - 00 D16Y5 engine with M/T:

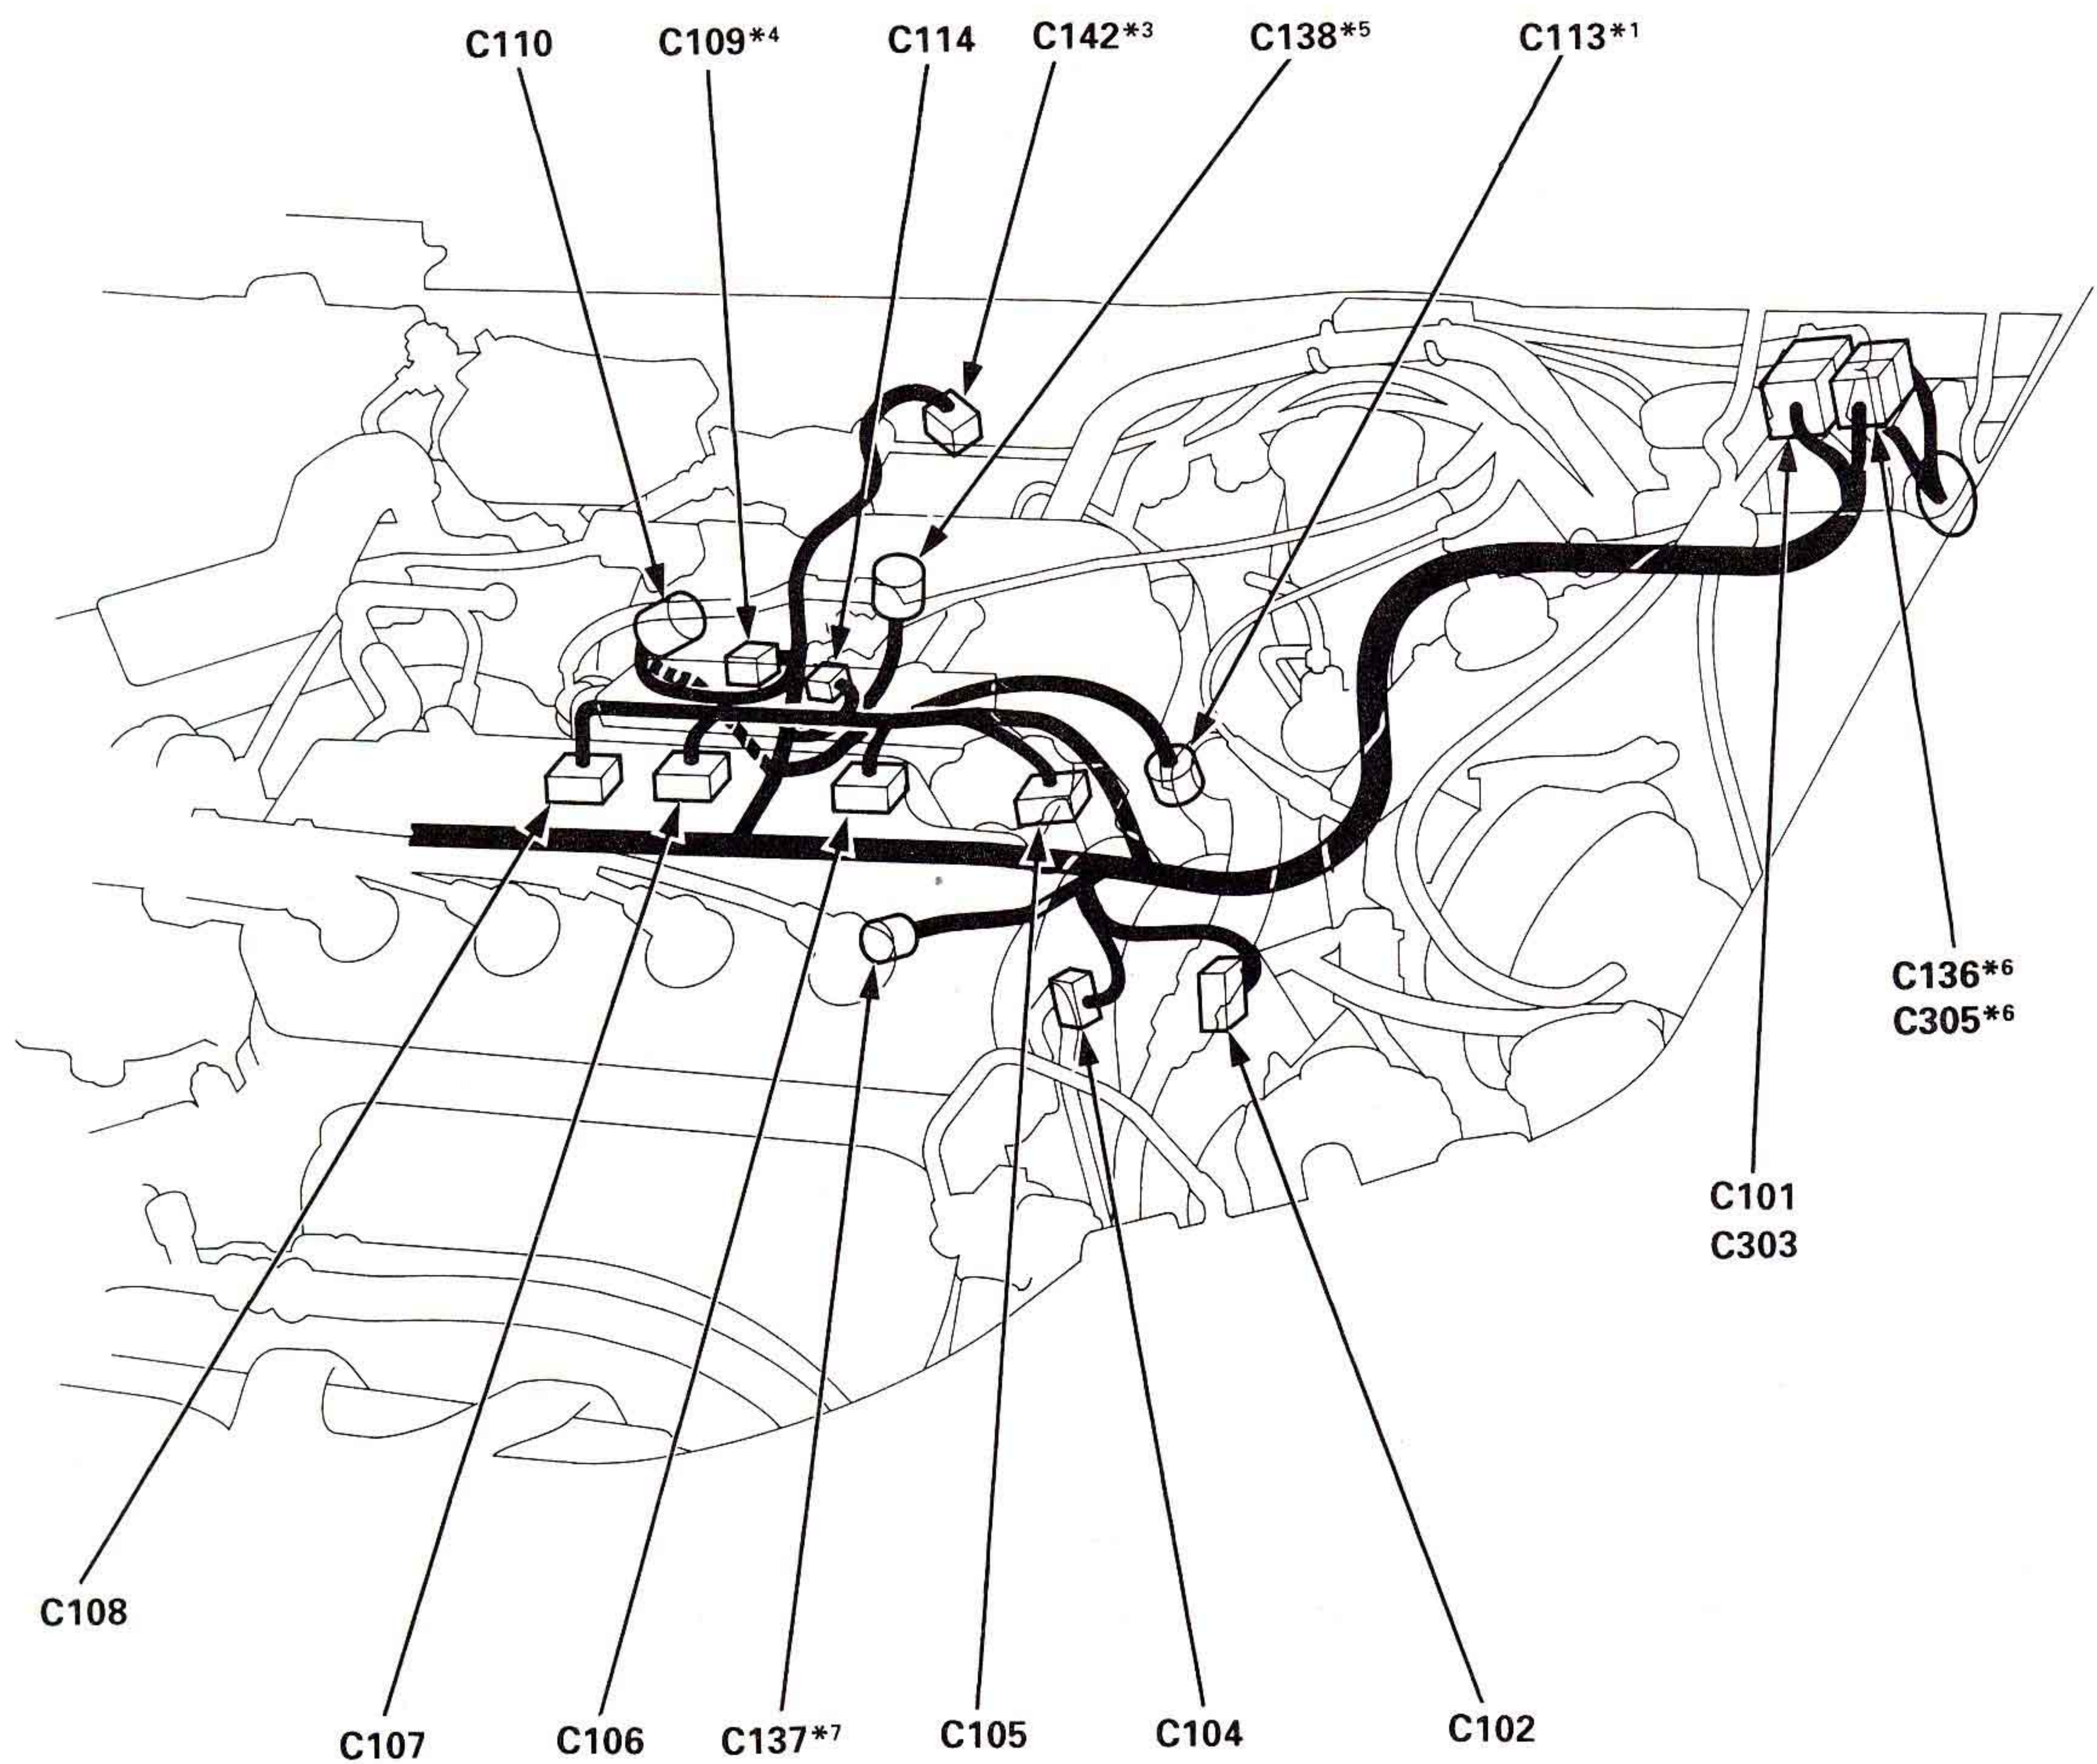

-----: M/T (D16Y5 engine)

96 EX Engine Harness Plugs 2/4

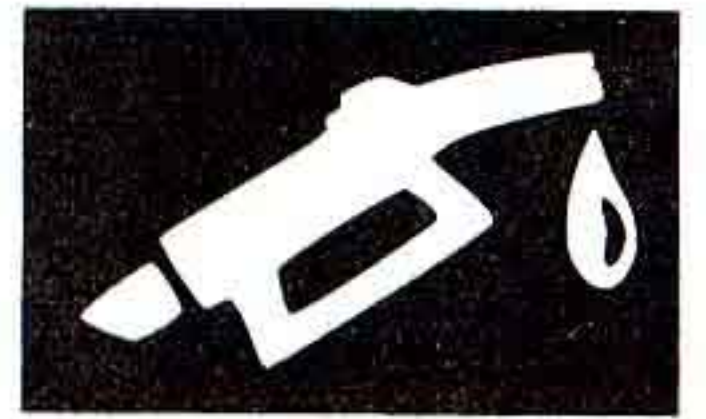
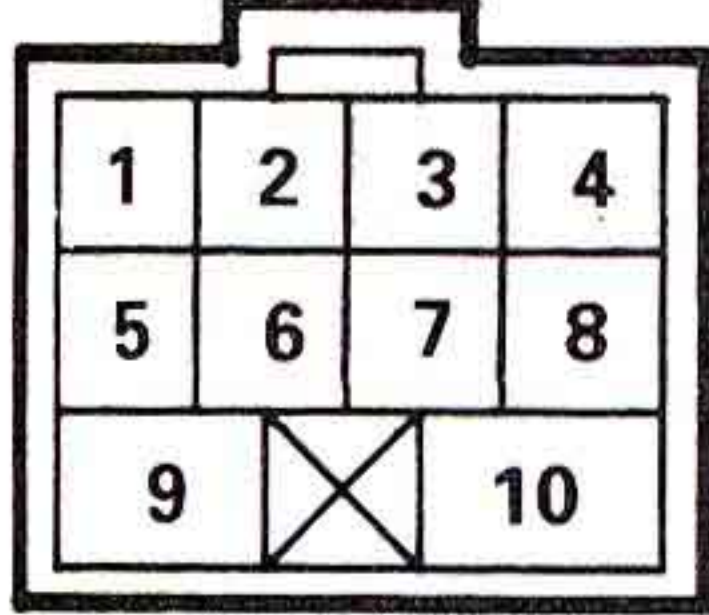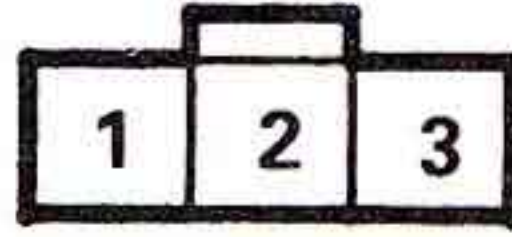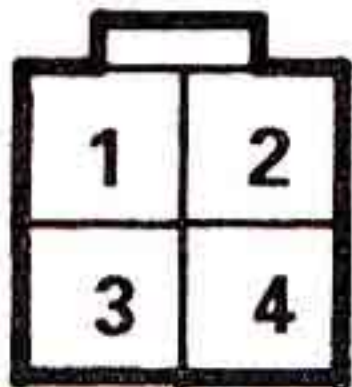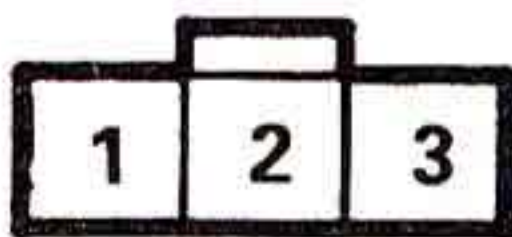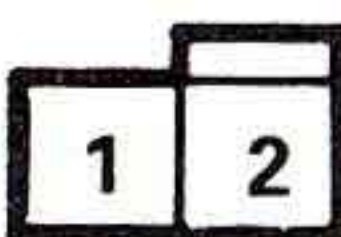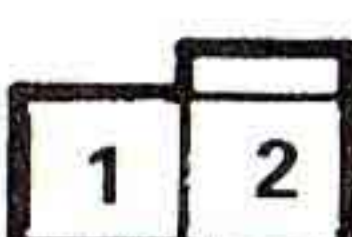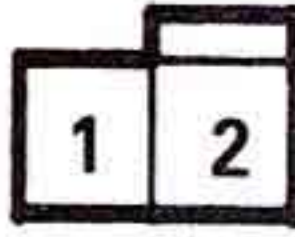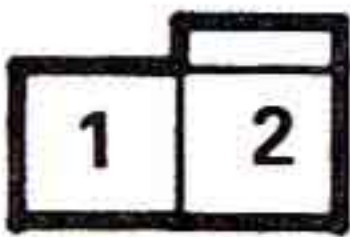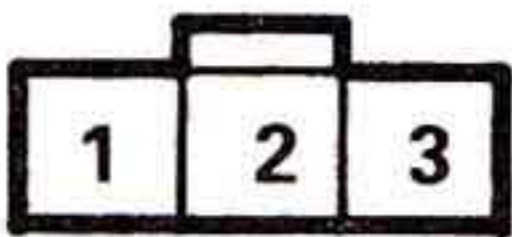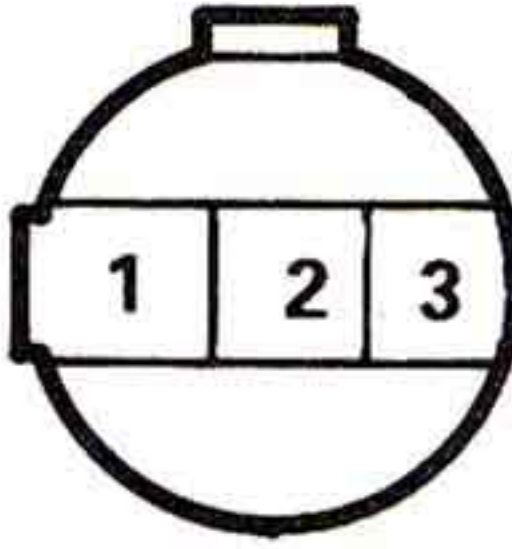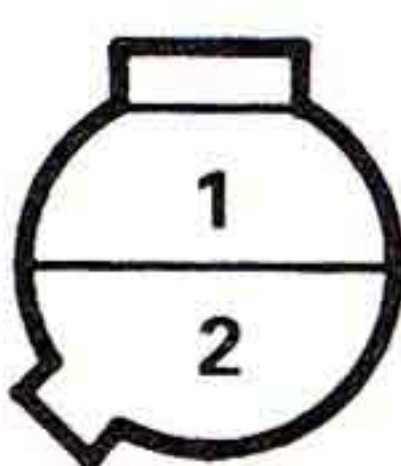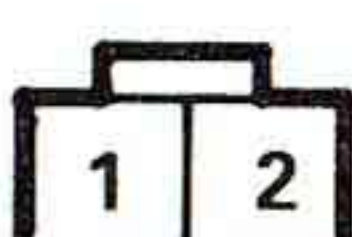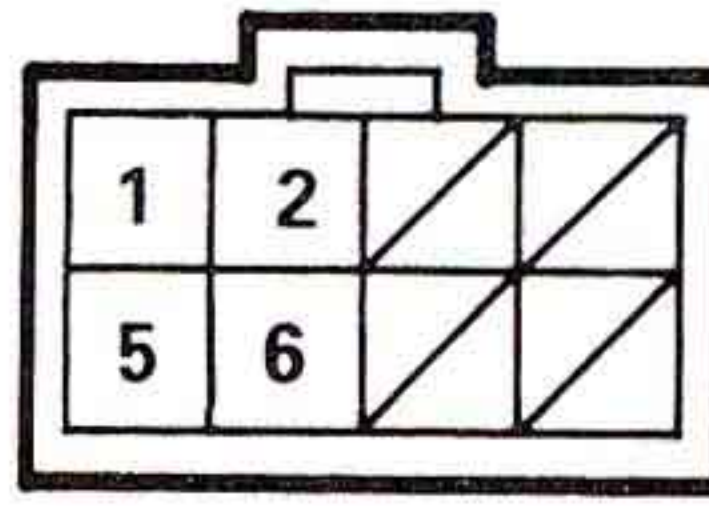
<p>C101</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① BLK/YEL</td><td>6 WHT/BLU</td></tr> <tr><td>② BLK¹</td><td>7 YEL/GRN</td></tr> <tr><td>3 YEL/RED</td><td>8 BLU</td></tr> <tr><td>④ BRN/BLK¹</td><td>9 BLK/WHT</td></tr> <tr><td>⑤ YEL/BLK¹</td><td>10 BLK/YEL</td></tr> </table>	① BLK/YEL	6 WHT/BLU	② BLK ¹	7 YEL/GRN	3 YEL/RED	8 BLU	④ BRN/BLK ¹	9 BLK/WHT	⑤ YEL/BLK ¹	10 BLK/YEL	<p>C102</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① WHT/RED⁴</td></tr> <tr><td>② BRN/BLK¹</td></tr> <tr><td>③ BLU/RED¹</td></tr> </table>	① WHT/RED ⁴	② BRN/BLK ¹	③ BLU/RED ¹	<p>C104 *1</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>1 BLK/YEL</td></tr> <tr><td>② WHT/GRN</td></tr> <tr><td>3 WHT/BLU</td></tr> <tr><td>④ WHT/RED⁵</td></tr> </table>	1 BLK/YEL	② WHT/GRN	3 WHT/BLU	④ WHT/RED ⁵	<p>C104 (Canada)</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① WHT/RED⁵</td></tr> <tr><td>2 BLK/YEL</td></tr> <tr><td>3 WHT/BLU</td></tr> </table>	① WHT/RED ⁵	2 BLK/YEL	3 WHT/BLU	<p>C105</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① YEL/BLK¹</td></tr> <tr><td>② BRN¹</td></tr> </table>	① YEL/BLK ¹	② BRN ¹	<p>C106</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① YEL/BLK¹</td></tr> <tr><td>② RED¹</td></tr> </table>	① YEL/BLK ¹	② RED ¹
① BLK/YEL	6 WHT/BLU																												
② BLK ¹	7 YEL/GRN																												
3 YEL/RED	8 BLU																												
④ BRN/BLK ¹	9 BLK/WHT																												
⑤ YEL/BLK ¹	10 BLK/YEL																												
① WHT/RED ⁴																													
② BRN/BLK ¹																													
③ BLU/RED ¹																													
1 BLK/YEL																													
② WHT/GRN																													
3 WHT/BLU																													
④ WHT/RED ⁵																													
① WHT/RED ⁵																													
2 BLK/YEL																													
3 WHT/BLU																													
① YEL/BLK ¹																													
② BRN ¹																													
① YEL/BLK ¹																													
② RED ¹																													
<p>C107</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① YEL/BLK¹</td></tr> <tr><td>② BLU¹</td></tr> </table>	① YEL/BLK ¹	② BLU ¹	<p>C108</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① YEL/BLK¹</td></tr> <tr><td>② YEL¹</td></tr> </table>	① YEL/BLK ¹	② YEL ¹	<p>C109*4</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① ORN</td></tr> <tr><td>② YEL/BLK¹</td></tr> <tr><td>③ BLK/BLU²</td></tr> </table>	① ORN	② YEL/BLK ¹	③ BLK/BLU ²	<p>C110</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① GRN/BLK³</td></tr> <tr><td>② RED/BLK</td></tr> <tr><td>③ YEL/BLU</td></tr> </table>	① GRN/BLK ³	② RED/BLK	③ YEL/BLU	<p>C113*1</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① GRN⁴</td></tr> <tr><td>② BLK¹</td></tr> </table>	① GRN ⁴	② BLK ¹	<p>C114</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① BLK/YEL</td></tr> <tr><td>② RED/YEL¹</td></tr> </table>	① BLK/YEL	② RED/YEL ¹										
① YEL/BLK ¹																													
② BLU ¹																													
① YEL/BLK ¹																													
② YEL ¹																													
① ORN																													
② YEL/BLK ¹																													
③ BLK/BLU ²																													
① GRN/BLK ³																													
② RED/BLK																													
③ YEL/BLU																													
① GRN ⁴																													
② BLK ¹																													
① BLK/YEL																													
② RED/YEL ¹																													
<p>C136*6</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① GRN/BLK²</td><td>⑤ LT GRN²</td></tr> <tr><td>② WHT/RED³</td><td>⑥ BLU³</td></tr> <tr><td>3 ———</td><td>7 ———</td></tr> <tr><td>4 ———</td><td>8 ———</td></tr> </table>	① GRN/BLK ²	⑤ LT GRN ²	② WHT/RED ³	⑥ BLU ³	3 ———	7 ———	4 ———	8 ———	<p>C137*7</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① RED/BLU</td></tr> <tr><td>2 ———</td></tr> </table>	① RED/BLU	2 ———	<p>C138*5</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① BLK/BLU¹</td></tr> <tr><td>② YEL/BLK¹</td></tr> </table>	① BLK/BLU ¹	② YEL/BLK ¹	<p>C142*3</p>  <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><td>① BLK¹</td></tr> <tr><td>② RED²</td></tr> </table>	① BLK ¹	② RED ²												
① GRN/BLK ²	⑤ LT GRN ²																												
② WHT/RED ³	⑥ BLU ³																												
3 ———	7 ———																												
4 ———	8 ———																												
① RED/BLU																													
2 ———																													
① BLK/BLU ¹																													
② YEL/BLK ¹																													
① BLK ¹																													
② RED ²																													

NOTE: • Different wires with the same color have been given a number suffix to distinguish them (for example, YEL/BLK¹ and YEL/BLK² are not the same).


- ○: Related to Fuel and Emissions System.
- — Connector with male terminals (double outline): View from terminal side
- — Connector with female terminals (single outline): View from wire side

(cont'd)


96 EX Engine Harness Plugs 3/4

System Connectors [Engine Compartment] (cont'd)

'96 - '98 D16Y5, D16Y8 engine, '99 - '00 D16Y5 engine with M/T:

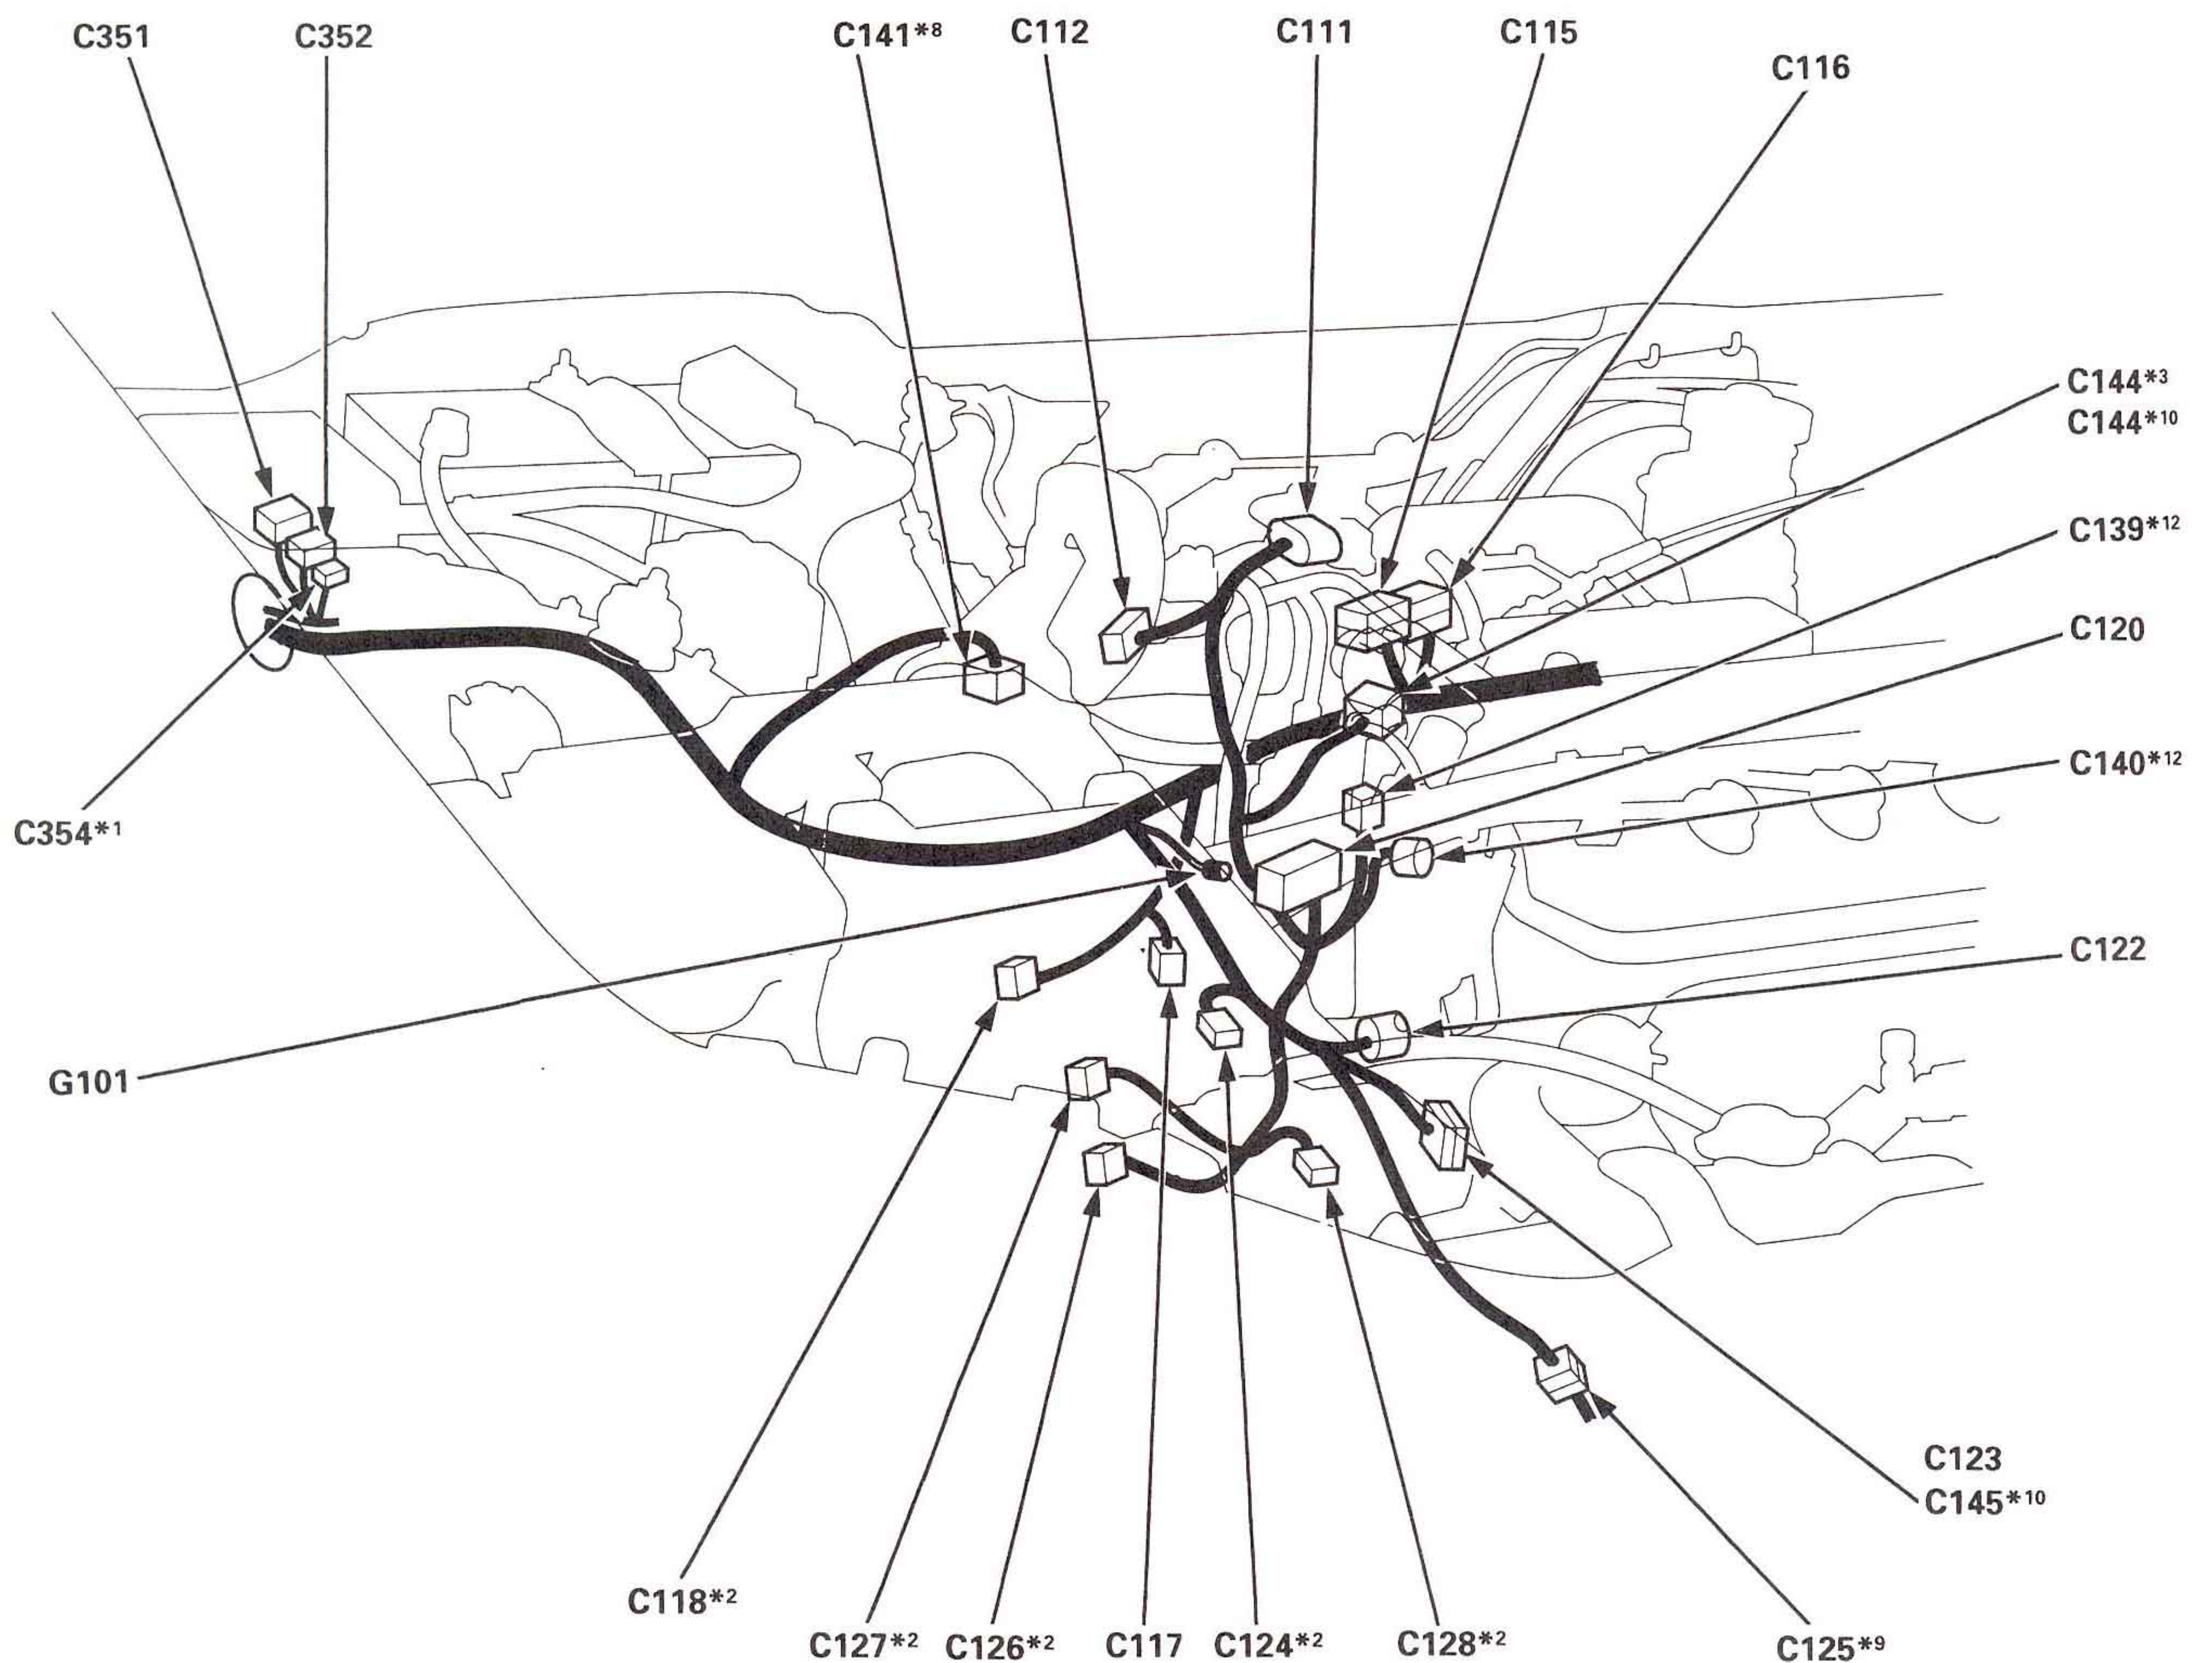

96 EX Engine Harness Plugs 4/4

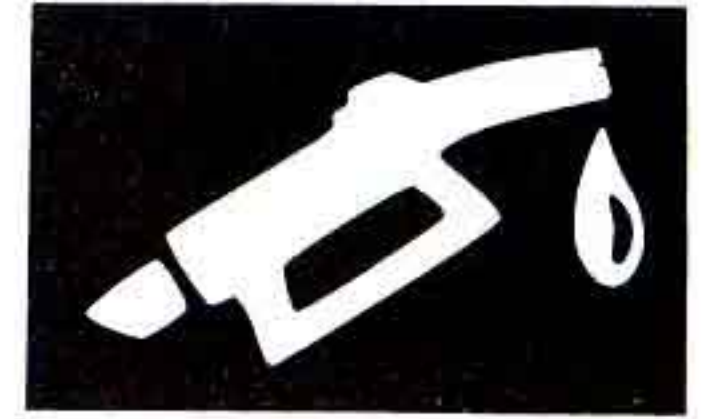

<p>C111</p> <table border="1" style="margin-top: 10px;"> <tr><td>① YEL/RED</td></tr> <tr><td>② GRN/WHT³</td></tr> <tr><td>③ RED/GRN</td></tr> </table>	① YEL/RED	② GRN/WHT ³	③ RED/GRN	<p>C112</p> <table border="1" style="margin-top: 10px;"> <tr><td>① GRN/BLK³</td></tr> <tr><td>② RED/YEL²</td></tr> </table>	① GRN/BLK ³	② RED/YEL ²	<p>C115</p> <table border="1" style="margin-top: 10px;"> <tr><td>① BLK/YEL</td><td>⑧ GRN/BLK³</td></tr> <tr><td>② BLK/YEL</td><td>⑨ GRN/BLK³</td></tr> <tr><td>③ BLK/YEL</td><td>⑩ GRN/BLK³</td></tr> <tr><td>④ —</td><td>⑪ GRN/BLK³</td></tr> <tr><td>⑤ BLK/YEL</td><td>⑫ GRN/BLK³</td></tr> <tr><td>⑥ BLK/YEL</td><td>⑬ GRN/BLK³</td></tr> <tr><td>⑦ BLK/YEL</td><td>⑭ GRN/BLK³</td></tr> </table>	① BLK/YEL	⑧ GRN/BLK ³	② BLK/YEL	⑨ GRN/BLK ³	③ BLK/YEL	⑩ GRN/BLK ³	④ —	⑪ GRN/BLK ³	⑤ BLK/YEL	⑫ GRN/BLK ³	⑥ BLK/YEL	⑬ GRN/BLK ³	⑦ BLK/YEL	⑭ GRN/BLK ³	<p>C116</p> <table border="1" style="margin-top: 10px;"> <tr><td>1 —</td><td>8 BLK</td></tr> <tr><td>② YEL/BLK¹</td><td>⑨ BLK¹</td></tr> <tr><td>③ YEL/BLK¹</td><td>⑩ BLK¹</td></tr> <tr><td>④ YEL/BLK¹</td><td>⑪ BLK¹</td></tr> <tr><td>⑤ YEL/BLK¹</td><td>⑫ BLK¹</td></tr> <tr><td>⑥ YEL/BLK¹</td><td>⑬ BLK¹</td></tr> <tr><td>⑦ YEL/BLK¹</td><td>⑭ BLK¹</td></tr> </table>	1 —	8 BLK	② YEL/BLK ¹	⑨ BLK ¹	③ YEL/BLK ¹	⑩ BLK ¹	④ YEL/BLK ¹	⑪ BLK ¹	⑤ YEL/BLK ¹	⑫ BLK ¹	⑥ YEL/BLK ¹	⑬ BLK ¹	⑦ YEL/BLK ¹	⑭ BLK ¹	<p>C117</p> <table border="1" style="margin-top: 10px;"> <tr><td>① BLK¹</td></tr> <tr><td>② BLK/YEL</td></tr> <tr><td>③ BLU/WHT</td></tr> </table>	① BLK ¹	② BLK/YEL	③ BLU/WHT			
① YEL/RED																																											
② GRN/WHT ³																																											
③ RED/GRN																																											
① GRN/BLK ³																																											
② RED/YEL ²																																											
① BLK/YEL	⑧ GRN/BLK ³																																										
② BLK/YEL	⑨ GRN/BLK ³																																										
③ BLK/YEL	⑩ GRN/BLK ³																																										
④ —	⑪ GRN/BLK ³																																										
⑤ BLK/YEL	⑫ GRN/BLK ³																																										
⑥ BLK/YEL	⑬ GRN/BLK ³																																										
⑦ BLK/YEL	⑭ GRN/BLK ³																																										
1 —	8 BLK																																										
② YEL/BLK ¹	⑨ BLK ¹																																										
③ YEL/BLK ¹	⑩ BLK ¹																																										
④ YEL/BLK ¹	⑪ BLK ¹																																										
⑤ YEL/BLK ¹	⑫ BLK ¹																																										
⑥ YEL/BLK ¹	⑬ BLK ¹																																										
⑦ YEL/BLK ¹	⑭ BLK ¹																																										
① BLK ¹																																											
② BLK/YEL																																											
③ BLU/WHT																																											
<p>C118*2</p> <table border="1" style="margin-top: 10px;"> <tr><td>① GRN²</td></tr> <tr><td>② BLU⁴</td></tr> </table>	① GRN ²	② BLU ⁴	<p>C120</p> <table border="1" style="margin-top: 10px;"> <tr><td>① YEL/GRN</td><td>⑥ WHT⁴</td></tr> <tr><td>② BLU⁵</td><td>⑦ RED⁵</td></tr> <tr><td>③ GRN³</td><td>⑧ BLK³</td></tr> <tr><td>④ YEL⁴</td><td>⑨ BLU</td></tr> <tr><td>⑤ —</td><td>⑩ BLK/YEL</td></tr> </table>	① YEL/GRN	⑥ WHT ⁴	② BLU ⁵	⑦ RED ⁵	③ GRN ³	⑧ BLK ³	④ YEL ⁴	⑨ BLU	⑤ —	⑩ BLK/YEL	<p>C122</p> <table border="1" style="margin-top: 10px;"> <tr><td>① RED/WHT</td></tr> <tr><td>② GRN/BLK³</td></tr> </table>	① RED/WHT	② GRN/BLK ³	<p>C123</p> <table border="1" style="margin-top: 10px;"> <tr><td>① WHT⁶</td></tr> <tr><td>② GRN/BLK³</td></tr> <tr><td>③ BLK/YEL</td></tr> <tr><td>④ BLK/WHT²</td></tr> </table>	① WHT ⁶	② GRN/BLK ³	③ BLK/YEL	④ BLK/WHT ²	<p>C124*2</p> <table border="1" style="margin-top: 10px;"> <tr><td>① GRN/BLK¹</td></tr> <tr><td>② YEL²</td></tr> </table>	① GRN/BLK ¹	② YEL ²	<p>C125</p> <table border="1" style="margin-top: 10px;"> <tr><td>① WHT/RED⁵</td></tr> <tr><td>② GRN/BLK⁴</td></tr> <tr><td>③ BLK/YEL</td></tr> <tr><td>④ BLK/WHT¹</td></tr> </table>	① WHT/RED ⁵	② GRN/BLK ⁴	③ BLK/YEL	④ BLK/WHT ¹														
① GRN ²																																											
② BLU ⁴																																											
① YEL/GRN	⑥ WHT ⁴																																										
② BLU ⁵	⑦ RED ⁵																																										
③ GRN ³	⑧ BLK ³																																										
④ YEL ⁴	⑨ BLU																																										
⑤ —	⑩ BLK/YEL																																										
① RED/WHT																																											
② GRN/BLK ³																																											
① WHT ⁶																																											
② GRN/BLK ³																																											
③ BLK/YEL																																											
④ BLK/WHT ²																																											
① GRN/BLK ¹																																											
② YEL ²																																											
① WHT/RED ⁵																																											
② GRN/BLK ⁴																																											
③ BLK/YEL																																											
④ BLK/WHT ¹																																											
<p>C126*2</p> <table border="1" style="margin-top: 10px;"> <tr><td>① WHT²</td></tr> <tr><td>② RED⁴</td></tr> </table>	① WHT ²	② RED ⁴	<p>C127*2</p> <table border="1" style="margin-top: 10px;"> <tr><td>① RED³</td></tr> <tr><td>② WHT¹</td></tr> </table>	① RED ³	② WHT ¹	<p>C128*2</p> <table border="1" style="margin-top: 10px;"> <tr><td>① BLU/YEL</td></tr> <tr><td>② GRN/WHT¹</td></tr> </table>	① BLU/YEL	② GRN/WHT ¹	<p>C139*12</p> <table border="1" style="margin-top: 10px;"> <tr><td>① GRN/YEL¹</td></tr> </table>	① GRN/YEL ¹	<p>C140*12</p> <table border="1" style="margin-top: 10px;"> <tr><td>① BLK¹</td></tr> <tr><td>② RED²</td></tr> </table>	① BLK ¹	② RED ²	<p>C141*8</p> <table border="1" style="margin-top: 10px;"> <tr><td>① LT GRN/WHT</td></tr> <tr><td>② BLK/YEL</td></tr> </table>	① LT GRN/WHT	② BLK/YEL																											
① WHT ²																																											
② RED ⁴																																											
① RED ³																																											
② WHT ¹																																											
① BLU/YEL																																											
② GRN/WHT ¹																																											
① GRN/YEL ¹																																											
① BLK ¹																																											
② RED ²																																											
① LT GRN/WHT																																											
② BLK/YEL																																											
<p>C144 *3</p> <table border="1" style="margin-top: 10px;"> <tr><td>① WHT/BLK</td></tr> <tr><td>② GRN/BLK³</td></tr> <tr><td>③ YEL/BLU</td></tr> </table>	① WHT/BLK	② GRN/BLK ³	③ YEL/BLU	<p>C144 *10</p> <table border="1" style="margin-top: 10px;"> <tr><td>① WHT/BLK</td></tr> <tr><td>② GRN/BLK³</td></tr> <tr><td>③ YEL/BLU</td></tr> <tr><td>④ BLK¹</td></tr> <tr><td>⑤ —</td></tr> <tr><td>⑥ PNK¹</td></tr> </table>	① WHT/BLK	② GRN/BLK ³	③ YEL/BLU	④ BLK ¹	⑤ —	⑥ PNK ¹	<p>C145*10</p> <table border="1" style="margin-top: 10px;"> <tr><td>① BLK/WHT²</td><td>⑤ —</td></tr> <tr><td>② BLK¹</td><td>⑥ WHT⁵</td></tr> <tr><td>③ GRN/BLK³</td><td>⑦ BLK⁴</td></tr> <tr><td>④ WHT⁶</td><td>⑧ RED⁶</td></tr> </table>	① BLK/WHT ²	⑤ —	② BLK ¹	⑥ WHT ⁵	③ GRN/BLK ³	⑦ BLK ⁴	④ WHT ⁶	⑧ RED ⁶	<p>C351</p> <table border="1" style="margin-top: 10px;"> <tr><td>1 —</td><td>⑦ WHT/BLK</td></tr> <tr><td>2 WHT/BLU</td><td>⑧ WHT/BLU</td></tr> <tr><td>3 WHT/GRN</td><td>⑨ WHT/GRN</td></tr> <tr><td>4 BLK</td><td>⑩ —</td></tr> <tr><td>5 WHT/RED</td><td>⑪ BLU/WHT</td></tr> <tr><td>⑥ WHT/RED</td><td></td></tr> </table>	1 —	⑦ WHT/BLK	2 WHT/BLU	⑧ WHT/BLU	3 WHT/GRN	⑨ WHT/GRN	4 BLK	⑩ —	5 WHT/RED	⑪ BLU/WHT	⑥ WHT/RED		<p>C352</p> <table border="1" style="margin-top: 10px;"> <tr><td>1 GRN</td><td>6 BLK/YEL</td></tr> <tr><td>2 BLU/WHT</td><td>7 —</td></tr> <tr><td>3 WHT/BLK</td><td>⑧ WHT/GRN</td></tr> <tr><td>④ WHT/BLK</td><td>9 WHT</td></tr> <tr><td>⑤ BLK/RED</td><td></td></tr> </table>	1 GRN	6 BLK/YEL	2 BLU/WHT	7 —	3 WHT/BLK	⑧ WHT/GRN	④ WHT/BLK	9 WHT	⑤ BLK/RED	
① WHT/BLK																																											
② GRN/BLK ³																																											
③ YEL/BLU																																											
① WHT/BLK																																											
② GRN/BLK ³																																											
③ YEL/BLU																																											
④ BLK ¹																																											
⑤ —																																											
⑥ PNK ¹																																											
① BLK/WHT ²	⑤ —																																										
② BLK ¹	⑥ WHT ⁵																																										
③ GRN/BLK ³	⑦ BLK ⁴																																										
④ WHT ⁶	⑧ RED ⁶																																										
1 —	⑦ WHT/BLK																																										
2 WHT/BLU	⑧ WHT/BLU																																										
3 WHT/GRN	⑨ WHT/GRN																																										
4 BLK	⑩ —																																										
5 WHT/RED	⑪ BLU/WHT																																										
⑥ WHT/RED																																											
1 GRN	6 BLK/YEL																																										
2 BLU/WHT	7 —																																										
3 WHT/BLK	⑧ WHT/GRN																																										
④ WHT/BLK	9 WHT																																										
⑤ BLK/RED																																											
<p>C354*1</p> <table border="1" style="margin-top: 10px;"> <tr><td>① BLK/WHT</td></tr> <tr><td>② BLK</td></tr> <tr><td>③ GRN/RED</td></tr> </table>	① BLK/WHT	② BLK	③ GRN/RED																																								
① BLK/WHT																																											
② BLK																																											
③ GRN/RED																																											

NOTE:

- Different wires with the same color have been given a number suffix to distinguish them (for example, YEL/BLK¹ and YEL/BLK² are not the same).
- ○: Related to Fuel and Emissions System.
- — Connector with male terminals (double outline): View from terminal side
- — Connector with female terminals (single outline): View from wire side

(cont'd)