


**2007**

**Honda VTX1300S/R**

**VTX**

**OWNER'S MANUAL**

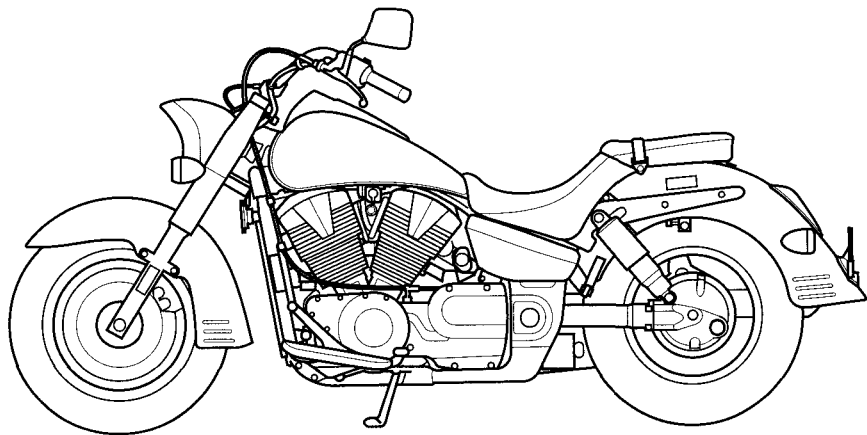

# Introduction

---

Congratulations on choosing your Honda motorcycle.

When you own a Honda, you're part of a worldwide family of satisfied customers — people who appreciate Honda's reputation for building quality into every product.

Before riding, take time to get acquainted with your motorcycle and how it works. To protect your investment, we urge you to take responsibility for keeping your motorcycle well maintained. Scheduled service is a must, of course. But it's just as important to observe the break-in guidelines, and perform all pre-ride and other periodic checks detailed in this manual.

We also recommend that you read this owner's manual before you ride. It's full of facts, instructions, safety information, and helpful tips. To make it easy to use, the manual contains a detailed list of topics at the beginning of each section, and both an in-depth table of contents and an index at the back of the book.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your Honda, other property, or the environment.

## Introduction

Read the Warranties Booklet (page 207 ) thoroughly so you understand the coverages that protect your new Honda and are aware of your rights and responsibilities.

If you have any questions, or if you ever need special service or repairs, remember that your Honda dealer knows your motorcycle best and is dedicated to your complete satisfaction.

Please report any change of address or ownership to your Honda dealer so we will be able to contact you concerning important production information.

You may also want to visit our website at [www.honda.com](http://www.honda.com).

Happy riding!

California Proposition 65 Warning

**WARNING:** This product contains or emits chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

# A Few Words About Safety


---

Your safety, and the safety of others, is very important. And operating this motorcycle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a motorcycle. You must use your own good judgment.

You will find important safety information in a variety of forms, including:

- **Safety Labels** — on the motorcycle.
- **Safety Messages** — preceded by a safety alert symbol  and one of three signal words: **DANGER, WARNING, or CAUTION.**

These signal words mean:

## Safety Messages

## A Few Words About Safety

---

### **DANGER**

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

### **WARNING**

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

### **CAUTION**

You **CAN** be **HURT** if you don't follow instructions.

- **Safety Headings** — such as Important Safety Reminders or Important Safety Precautions.
- **Safety Section** — such as Motorcycle Safety.
- **Instructions** — how to use this motorcycle correctly and safely.

This entire manual is filled with important safety information — please read it carefully.

**Safety Messages**

# Contents

---

These pages give an overview of the contents of your owner's manual. The first page of each section lists the topics covered in that section.

## **Motorcycle Safety..... 1**

Important safety information you should know, plus a look at the safety-related labels on your motorcycle.

## **Instruments & Controls..... 11**

The location and function of indicators and controls on your motorcycle and operating instructions for various controls and features.

## **Before Riding..... 27**

The importance of wearing a helmet and other protective gear, how to make sure you and your motorcycle are ready to ride, and important information about loading.

## **Basic Operation & Riding ..... 37**

How to start and stop the engine, shift gears, and brake. Also, riding precautions and important information about riding with a passenger or cargo.

## **Servicing Your Honda ..... 53**

Why your motorcycle needs regular maintenance, what you need to know before servicing your Honda, an owner maintenance schedule, and instructions for specific maintenance and adjustment items.

## **Tips..... 141**

How to store and transport your motorcycle and how to be an environmentally-responsible rider.

## **Taking Care of the Unexpected ..... 149**

What to do if you have a flat tire, your engine won't start, etc.

## **Technical Information ..... 181**

ID numbers, technical specifications, and other technical facts.

## **Consumer Information ..... 203**

Information on warranties, emission controls, how to get Honda service manuals, and...

## **“Reporting Safety Defects” ..... 213**

## **Table of Contents ..... 214**

Sequential listing of topics in this owner's manual.

## **Index..... 218**

## **Quick Reference**

Handy facts about fuel, engine oil, tire sizes, and air pressures.





This section presents some of the most important information and recommendations to help you ride your motorcycle safely. Please take a few moments to read these pages. This section also includes information about the location of safety labels on your motorcycle.

Important Safety Information .....	2
Accessories & Modifications .....	5
Safety Labels .....	7

# Important Safety Information

---

Your motorcycle can provide many years of service and pleasure — if you take responsibility for your own safety and understand the challenges you can meet while riding.

There is much that you can do to protect yourself when you ride. You'll find many helpful recommendations throughout this manual. The following are a few that we consider most important.

## **Always Wear a Helmet**

It's a proven fact: helmets significantly reduce the number and severity of head injuries. So always wear an approved motorcycle helmet and make sure your passenger does the same. We also recommend that you wear eye protection, sturdy boots, gloves, and other protective gear (page 28 ).

## **Take Time to Learn & Practice**

Even if you have ridden other motorcycles, take time to become familiar with how this motorcycle works and handles. Practice in a safe area until you build your skills and get accustomed to the motorcycle's size and weight.

Because many accidents involve inexperienced or untrained riders, we urge all riders to take a certified course approved by the Motorcycle Safety Foundation (MSF). See page 30 .

## **Ride Defensively**

The most frequent motorcycle collision happens when a car turns left in front of a motorcycle. Another common situation is a car moving suddenly into your lane.

Always pay attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or make an evasive maneuver. For other riding tips, see the booklet, *You and Your Motorcycle: Riding Tips and Practice Guide*, which came with your new motorcycle (USA only).

## **Make Yourself Easy to See**

Some drivers do not see motorcycles because they are not looking for them. To make yourself more visible, wear bright reflective clothing, position yourself so other drivers can see you, signal before turning or changing lanes, and use your horn when it will help others notice you.

# Important Safety Information

---

## **Ride within Your Limits**

Pushing limits is another major cause of motorcycle accidents. Never ride beyond your personal abilities or faster than conditions warrant. Remember that alcohol, drugs, fatigue, and inattention can significantly reduce your ability to make good judgments and ride safely.

## **Don't Drink and Ride**

Alcohol and riding don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and ride, and don't let your friends drink and ride either.

## **Keep Your Honda in Safe Condition**

It's important to keep your motorcycle properly maintained and in safe riding condition. To help avoid problems, inspect your motorcycle before every ride and perform all recommended maintenance. Never exceed load limits (page 35 ), and do not modify your motorcycle (page 6 ) or install accessories that would make your motorcycle unsafe (page 5 ).

Modifying your motorcycle or using non-Honda accessories can make your motorcycle unsafe. Before you consider making any modifications or adding an accessory, be sure to read the following information.

## **⚠ WARNING**

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

## **Accessories**

We strongly recommend that you use only genuine Honda accessories that have been specifically designed and tested for your motorcycle. Because Honda cannot test all other accessories, you must be personally responsible for proper selection, installation, and use of non-Honda accessories.

Check with your Honda dealer for assistance and always follow these guidelines:

- Make sure the accessory does not obscure any lights, reduce ground clearance and lean angle, limit suspension travel or steering travel, alter your riding position, or interfere with operating any controls. (cont'd)

## Accessories & Modifications

---

- Do not install any fairing or windscreen unless it was designed and tested by Honda for your motorcycle. Some fairings or windscreens, even smaller ones, can cause unstable handling of your motorcycle. This is especially true if the fairing or windscreen is poorly designed or improperly mounted.
- Do not add any electrical equipment that will exceed the motorcycle's electrical system capacity (page 189). A blown fuse can cause a loss of lights or engine power (page 173 ).
- Do not pull a trailer or sidecar with your motorcycle. This motorcycle was not designed for these attachments, and their use can seriously impair your motorcycle's handling.

### Modifications

We strongly advise you not to remove any original equipment or modify your motorcycle in any way that would change its design or operation. Such changes could seriously impair your motorcycle's handling, stability, and braking, making it unsafe to ride.

Removing or modifying your lights, exhaust system, emission control system, or other equipment can also make your motorcycle illegal.


Safety labels on your motorcycle either warn you of potential hazards that could cause serious injury or they provide important safety information. Read these labels carefully and don't remove them.

If a label comes off or becomes hard to read, contact your Honda dealer for a replacement.

For your protection, always wear your helmet while riding.  
Read the owner's manual carefully.

**⚠ WARNING**

Improper loading can cause a crash and you may be seriously hurt or killed.  
See "Load Limits and Guidelines" in your Owner's Manual for complete instructions.

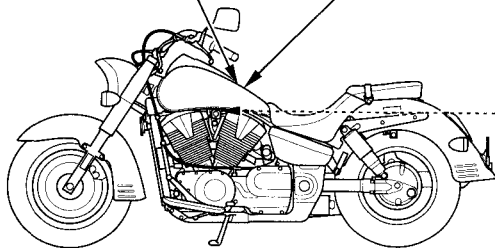

# Safety Labels


VTX1300S

<For USA>

TIRE INFORMATION			
COLD TIRE PRESSURES : [UP TO MAXIMUM WEIGHT CAPACITY]	FRONT	225kPa	2.25kgf/cm <sup>2</sup> 33psi.
	REAR	250kPa	2.50kgf/cm <sup>2</sup> 36psi.
[UP TO 90kg (200lbs) LOAD]	FRONT	225kPa	2.25kgf/cm <sup>2</sup> 33psi.
	REAR	225kPa	2.25kgf/cm <sup>2</sup> 33psi.
MAXIMUM WEIGHT CAPACITY :		183	kg ( 404 lbs.)
TIRE SIZE :		FRONT 140/80-17M/C 69H REAR 170/80-15M/C 77H	
TIRE BRAND	FRONT	REAR	Read Owner's Manual
DUNLOP	D404F	K555J	
MIN. RECOMMEND TIRE CENTER TREAD DEPTH			
FRONT 1.5mm(0.06in.) REAR 2.0mm(0.08in.)			

<For Canada>

TIRE INFORMATION					
COLD TIRE PRESSURES :		FRONT	225kPa	2.25kgf/cm <sup>2</sup>	33psi.
[UP TO MAXIMUM WEIGHT CAPACITY]		REAR	250kPa	2.50kgf/cm <sup>2</sup>	36psi.
[UP TO 90kg(200lbs) LOAD]		FRONT	225kPa	2.25kgf/cm <sup>2</sup>	33psi.
		REAR	225kPa	2.25kgf/cm <sup>2</sup>	33psi.
MAXIMUM WEIGHT CAPACITY :		187 kg (413 lbs.)			
TIRE SIZE :		FRONT 140/80-17M/C 69H REAR 170/80-15M/C 77H			
TIRE BRAND	FRONT	REAR	Read Owner's Manual!		
DUNLOP	D404F	K555J			
MIN. RECOMMEND TIRE CENTER TREAD DEPTH					
FRONT 1.5mm(0.06in.) REAR 2.0mm(0.08in.)					

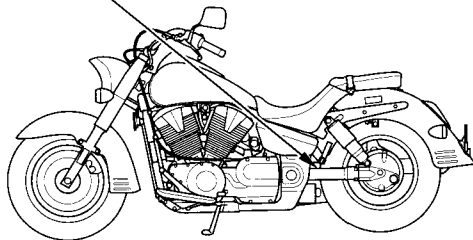




< For USA >

VTX1300R

TIRE INFORMATION			
COLD TIRE PRESSURES :			
[UP TO MAXIMUM WEIGHT CAPACITY]	FRONT	225kPa	2.25kgf/cm <sup>2</sup> 33psi.
	REAR	250kPa	2.50kgf/cm <sup>2</sup> 36psi.
[UP TO 90kg (200lbs) LOAD]	FRONT	225kPa	2.25kgf/cm <sup>2</sup> 33psi.
	REAR	225kPa	2.25kgf/cm <sup>2</sup> 33psi.
MAXIMUM WEIGHT CAPACITY :		183	kg ( 404 lbs. )
TIRE SIZE :		FRONT 140/80-17M/C 69H REAR 170/80-15M/C 77H	
TIRE BRAND	FRONT	REAR	Read Owner's Manual
DUNLOP	D404F	K555J	
MIN. RECOMMEND TIRE CENTER TREAD DEPTH			THIS MOTORCYCLE IS EQUIPPED WITH TUBELESS TIRES.
FRONT 1.5mm (0.06in.) REAR 2.0mm (0.08in.)			

< For Canada >

TIRE INFORMATION			
COLD TIRE PRESSURES :			
[UP TO MAXIMUM WEIGHT CAPACITY]	FRONT	225kPa	2.25kgf/cm <sup>2</sup> 33psi.
	REAR	250kPa	2.50kgf/cm <sup>2</sup> 36psi.
[UP TO 90kg(200lbs) LOAD]	FRONT	225kPa	2.25kgf/cm <sup>2</sup> 33psi.
	REAR	225kPa	2.25kgf/cm <sup>2</sup> 33psi.
MAXIMUM WEIGHT CAPACITY : 187 kg (413 lbs.)			
TIRE SIZE : FRONT 140/80-17M/C 69H REAR 170/80-15M/C 77H			
TIRE BRAND	FRONT	REAR	Read Owner's Manual
DUNLOP	D404F	K555J	
MIN. RECOMMEND TIRE CENTER TREAD DEPTH			THIS MOTORCYCLE IS EQUIPPED WITH TUBELESS TIRES.
FRONT 1.5mm(0.06in.) REAR 2.0mm(0.08in.)			

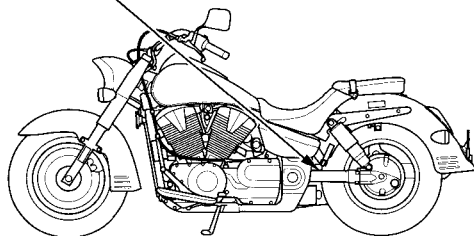




This section shows the location of all gauges, indicators, and controls you would normally use before or while riding your motorcycle.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations .....	12
Indicators .....	15
Controls & Features.....	19
Fuel Valve.....	19
Choke Knob.....	20
Ignition Switch .....	21
Start Button.....	22
Engine Stop Switch .....	22
Headlight Dimmer Switch .....	23
Turn Signal Switch.....	23
Horn Button .....	24
Odometer/Tripmeter Select and	
Reset Button .....	24


# Operation Component Locations

---

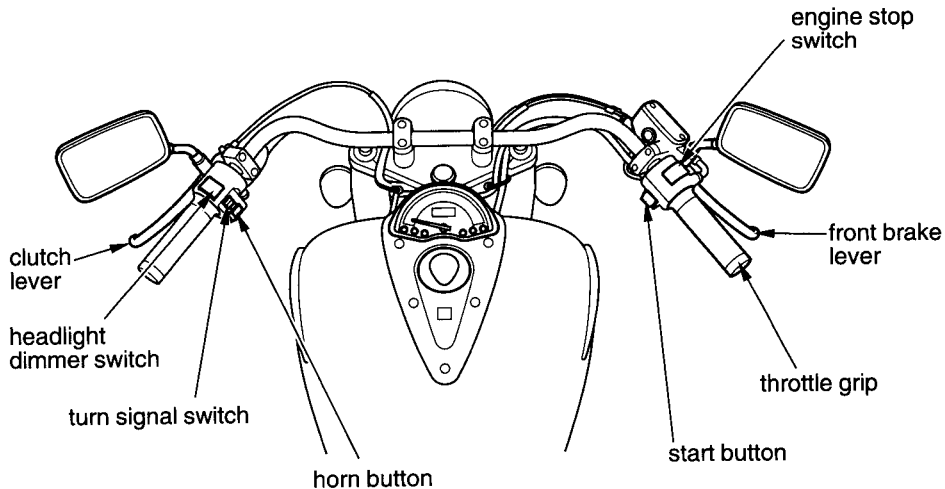


# Operation Component Locations


---

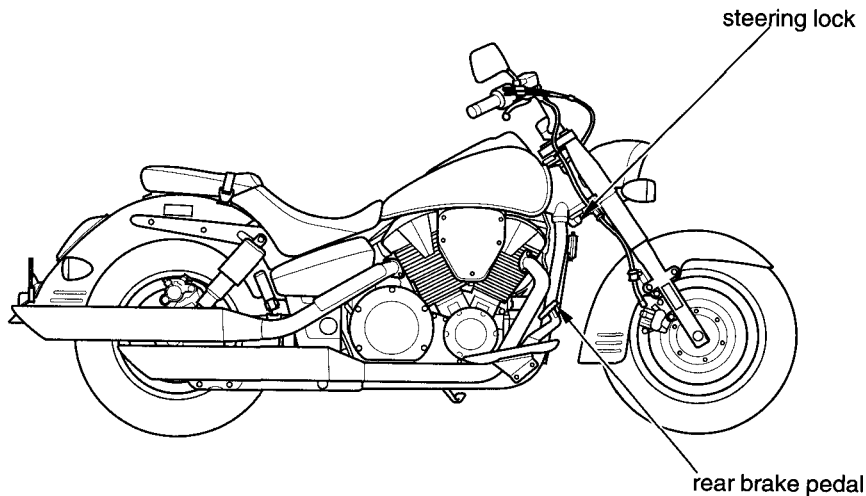

# Operation Component Locations

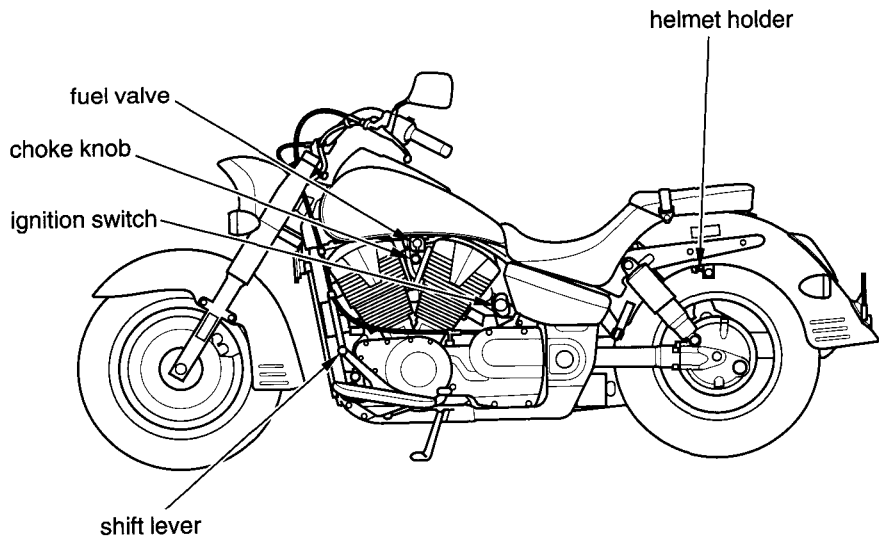

The indicators on your motorcycle keep you informed, alert you to possible problems, and make your riding safer and more enjoyable. Refer to the indicators frequently. Their functions are described on the following pages.

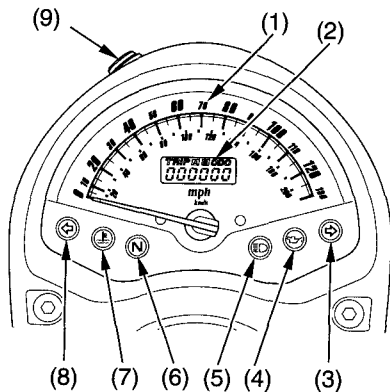

- (1) speedometer
- (2) odometer/tripmeter A&B display
- (3) right turn signal indicator
- (4) low oil pressure indicator
- (5) high beam indicator
- (6) neutral indicator
- (7) high coolant temperature indicator
- (8) left turn signal indicator
- (9) odometer/tripmeter select and reset button

USA: Odometer & tripmeter read in miles.

Canada: Odometer & tripmeter read in kilometers.

# Indicators

---

## Lamp Check

The low oil pressure indicator comes on when you turn the ignition switch ON so you can check that it is working. The indicator remains on until after the engine is started. The low oil pressure indicator is identified in the table on the next page with the words: *Lamp Check*.

When applicable, the high beam and neutral indicators come on when you turn the ignition switch ON and remain on until you select the low beam or shift out of neutral.

If one of these indicators does not come on when it should, have your Honda dealer check for problems.



1	speedometer	Shows riding speed in miles (USA) or kilometers (Canada) per hour.
2	odometer/tripmeter A & B display	
	odometer	Shows the total miles (USA) or kilometers (Canada) ridden (page 24 ).
	tripmeter A & B	Shows the number of miles (USA) or kilometers (Canada) ridden since you last reset the meter. The tripmeter has two sub modes, “A” and “B”. To zero (0) the tripmeter, push and hold the select and reset button (page 24 ).
3	right turn signal indicator (amber)	Flashes when the right turn signal operates.
4	low oil pressure indicator (red)	Lights when engine oil pressure is low enough to cause engine damage. If the low oil pressure indicator lights during operation, pull safely to the side of the road. See page 172 for instructions and cautions. <i>Lamp Check</i> .

# Indicators

---

5	high beam indicator (blue)	Lights when the headlight is on high beam.
6	neutral indicator (green)	Lights when the transmission is in neutral.
7	high coolant temperature indicator (red)	Lights when the coolant is over the specified temperature. If the indicator comes on, pull safely to the side of the road. See page 170 for instructions and cautions.
8	left turn signal indicator (amber)	Flashes when the left turn signal operates.
9	odometer/tripmeter select and reset button	Resets the tripmeter or selects the operation mode: tripmeter or odometer (page 24).


## Fuel Valve

### LEFT SIDE

**ON**

**OFF**

**RES**

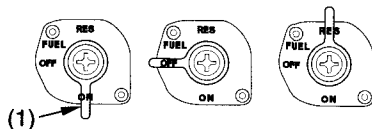

(1) fuel valve

The fuel valve is located on the left side under the fuel tank.

The three-way fuel valve is used to control the flow of fuel from the fuel tank to the carburetor.

ON — normal position for riding.

OFF — for parking, storing, or transportation.

RES — for extra fuel to get to a gas station for refueling.

With the fuel valve set to ON, fuel flows to the carburetor only when the engine is being started or is running. A diaphragm shuts off fuel flow when the engine is turned off.

For complete information about fueling your motorcycle, see page 79 .


# Controls & Features

---

## Choke Knob



LEFT SIDE

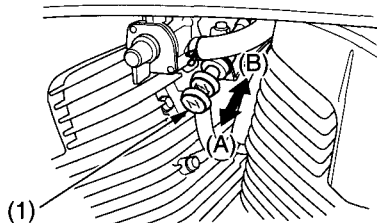

(1) choke knob

(A) fully ON

(B) fully OFF


The choke knob ( 1 ) may be used when starting the engine. See page 40 .

## Ignition Switch

The ignition switch (1) is used for starting and stopping the engine (page 39). The ignition key is also used to lock the steering for theft prevention (page 49). Insert the key and turn it to the right for the ON position.

Key Position	Function
ON	Electrical circuits on.
OFF	No electrical circuits function.

LEFT SIDE

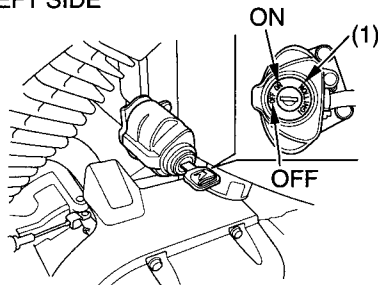

(1) ignition switch

If a key ring is used, we recommend a fabric or leather type with just the key attached. The use of a metal key ring or the attachment of additional keys to any type of key ring may damage the finish of the side cover and engine cover while inserting the key or riding.

# Controls & Features

## Start Button



The start button (1) is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, page 40.


When the start button is pushed, the starter motor will crank the engine; the headlight will automatically go out, but the taillight will stay on.

The starter motor will not operate if the engine stop switch is in the OFF position when the start button is pushed.

## Engine Stop Switch



### RIGHT HANDLEBAR

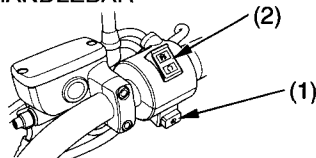

(1) start button

(2) engine stop switch



The engine stop switch (2) is used to stop the engine in an emergency. To operate, push the switch to the OFF position. The switch must be in the RUN position to start the engine, and it should normally remain in the RUN position even when the engine is OFF.

If your motorcycle is stopped with the ignition switch ON and the engine stop switch OFF, the headlight and taillight will remain on, resulting in battery discharge.

## Headlight Dimmer Switch


The headlight dimmer switch (1) is used to change between the high and low beams of the headlight. To operate, turn the switch to HI for high beam, LO for low beam.



## Turn Signal Switch



The turn signal switch (2) is used to signal a turn or a lane change. To operate, move the switch all the way in the proper direction and release it. The appropriate turn signal lights will start blinking. To cancel the light, push the switch in.
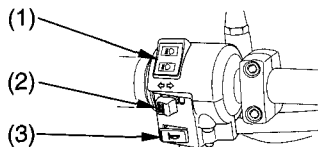
## LEFT HANDLEBAR



- (1) headlight dimmer switch  HI
- (2) turn signal switch  LO
- (3) horn button

# Controls & Features

## Horn Button



The horn is used to alert other motorists. To operate, push the horn button (3).


## Odometer/Tripmeter Select and Reset Button

The display (4) has two functions, odometer and tripmeter.

The tripmeter has two sub modes, A (7) and B (8).

To select a mode, push the button (5).


To reset the tripmeter, push and hold the button with the display in the tripmeter mode.

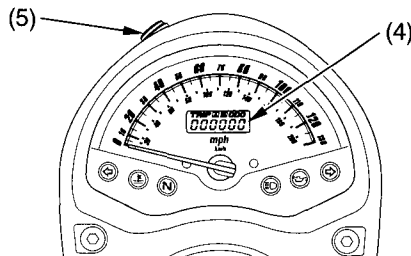

(4) odometer/tripmeter A&B display

(5) odometer/tripmeter A&B  
select and reset button



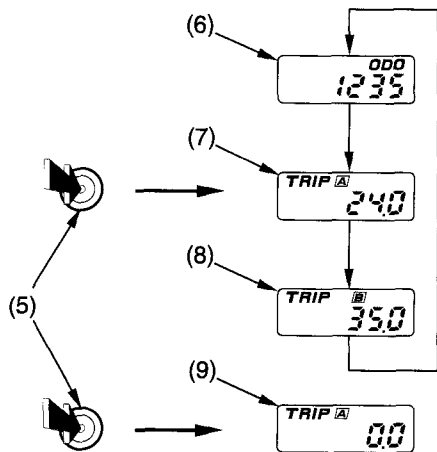



Before each ride, you need to make sure you and your Honda are both ready to ride. To help get you prepared, this section discusses how to evaluate your riding readiness, what items you should check on your motorcycle, and adjustments to make for your comfort, convenience, or safety. This section also includes important information about loading.

For information about adjusting the suspension on your Honda, see page 111.

Are You Ready to Ride ? .....	28
Protective Apparel.....	28
Rider Training .....	30
Is Your Motorcycle Ready to Ride ? ....	31
Pre-ride Inspection .....	31
Load Limits & Guidelines.....	34
Loading .....	34
Load Limits .....	35
Loading Guidelines .....	35

# Are You Ready to Ride?

---

Before you ride your motorcycle for the first time, we urge you to:

- Read this owner's manual.
- Make sure you understand all the safety messages.
- Know how to operate all the controls.

Before each ride, be sure:

- You feel well and are in good physical and mental condition.
- You are wearing an approved motorcycle helmet (with chin strap tightened securely), eye protection, and other protective clothing.
- You don't have any alcohol or drugs in your system.

Make sure your passenger is ready to ride, too, and is wearing proper gear including a helmet.

If you are not riding with a passenger and want to carry an extra helmet, use a commercially-available elastic cord, strap, or net to secure the helmet to the seat.

## Protective Apparel

For your safety, we strongly recommend that you always wear an approved motorcycle helmet, eye protection, boots, gloves, long pants, and a long-sleeved shirt or jacket whenever you ride.

Although complete protection is not possible, wearing proper gear can reduce the chance of injury when you ride.

Following are suggestions to help you choose the proper gear.

## Helmets and Eye Protection

Your helmet is your most important piece of riding gear because it offers the best protection against head injuries. A helmet should fit your head comfortably and securely. A bright-colored helmet and reflective strips can make you more noticeable in traffic.

An open-face helmet offers some protection, but a full-face helmet offers more. Regardless of the style, look for a DOT (Department of Transportation) sticker in any helmet you buy (USA only). Always wear a face shield or goggles to protect your eyes and help your vision.

## **WARNING**

Not wearing a helmet increases the chance of serious injury or death in a crash.

Be sure you and your passenger always wear a helmet, eye protection, and other protective apparel when you ride.

## Additional Riding Gear

In addition to a helmet and eye protection, we also recommend:

- Sturdy boots with non-slip soles to help protect your feet and ankles.
- Leather gloves to help protect your hands.

(cont'd)

# Are You Ready to Ride?

---

- A motorcycle riding suit or jacket for comfort as well as protection. Bright-colored and reflective clothing can help make you more noticeable in traffic. Avoid loose clothes that could get caught on any part of your motorcycle.

## Rider Training

Developing your riding skills is an ongoing process. Even if you have ridden other motorcycles, take time to become familiar with how this motorcycle works and handles. Practice riding the motorcycle in a safe area to build your skills. Do not ride in traffic until you get accustomed to the motorcycle's controls, and feel comfortable with its size and weight.

We urge all riders to take a certified course approved by the Motorcycle Safety Foundation (MSF). New riders should start with the basic course, and even experienced riders will find the advanced course beneficial. For information about the MSF training course nearest you, call the national toll-free number: (800) 446-9227.

Other riding tips can be found in the *Riding Tips* booklet that came with your motorcycle (USA only).

# Is Your Motorcycle Ready to Ride?

Before each ride, it's important to inspect your motorcycle and make sure any problem you find is corrected. A pre-ride inspection is a must, not only for safety, but because having a breakdown, or even a flat tire, can be a major inconvenience.

## **WARNING**

Improperly maintaining this motorcycle or failing to correct a problem before riding can cause a crash in which you can be seriously hurt or killed.

Always perform a pre-ride inspection before every ride and correct any problems.

## **Pre-ride Inspection**

Check the following items before you get on the motorcycle:

*Tires & Wheels* Look at the tires. If a tire appears low, use an air pressure gauge to check its pressure. Also look for signs of excessive wear (page 121 ) or damage to the tires and wheels (cast type) or the rims and spokes (spoke type).

# Is Your Motorcycle Ready to Ride?

---

*Leaks,  
Loose  
Parts* Walk around your motorcycle and look for anything that appears unusual, such as a leak or loose cable.

*Lights* Make sure the headlight, brakelight, taillight, and turn signals are working properly.

If you are carrying a passenger or cargo, also check the following:

*Load Limits* Make sure you do not exceed the load limits (page 35 ).

*Cargo* Check that all cargo is secure.

*Adjustments* Adjust the rear suspension (page 111 ) according to your load.



# Is Your Motorcycle Ready to Ride?

---

Check these items after you get on the motorcycle:

*Throttle*      Rotate the throttle to check it moves smoothly without binding.

*Brakes*        Pull the brake lever and press on the brake pedal to check that they operate normally.

*Indicators*    Turn the ignition on and check for normal operation of the indicators (page 15 ).

If you haven't ridden the motorcycle in over a week, you should also check other items, such as the oil level and other fluids. See *Periodic Maintenance* (page 60 ). Periodic maintenance should also be done at least once a month, no matter how often you ride.

Remember, be sure to take care of any problem you find, or have your Honda dealer correct it before you ride.

# Load Limits & Guidelines

---

Your motorcycle has been designed to carry you and one passenger. When you carry a passenger, you may feel some difference during acceleration and braking. But so long as you keep your motorcycle well-maintained, with good tires and brakes, you can safely carry loads within the given limits and guidelines.

However, exceeding the weight limit or carrying an unbalanced load can seriously impair your motorcycle's handling, braking, and stability. Non-Honda accessories, improper modifications, and poor maintenance can also reduce your safety margin.

## Loading

How much weight you put on your motorcycle, and how you load it, are important to your safety. Anytime you ride with a passenger or cargo, you should be aware of the following information.

### **⚠ WARNING**

Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.

## Load Limits

Following are the load limits for your motorcycle:

**maximum weight capacity:**

404 lbs (183 kg)

413 lbs (187 kg) (Canada only)

includes the weight of the rider,  
passenger, all cargo, and all accessories.

**maximum cargo weight:**

40 lbs (18 kg)

The weight of added accessories will reduce the maximum cargo weight you can carry.

## Loading Guidelines

Your motorcycle is primarily intended for transporting you and a passenger. You may wish to secure a jacket or other small items to the seat when you are not riding with a passenger.

If you wish to carry more cargo, check with your Honda dealer for advice, and be sure to read the information regarding accessories on page 5 .

Improperly loading your motorcycle can affect its stability and handling. Even if your motorcycle is properly loaded, you should ride at reduced speeds and never exceed 80 mph (130 km/h) when carrying cargo.

# Load Limits & Guidelines

---

Follow these guidelines whenever you carry a passenger or cargo:

- Check that both tires are properly inflated, and that pressure in the rear tire is increased to suit the load (page 118).
- If you change your normal load, you may need to adjust the rear suspension (page 111).
- To prevent loose items from creating a hazard, make sure that all cargo is tied down securely before you ride.
- Place cargo weight as low and close to the center of your motorcycle as possible.
- Balance cargo weight evenly on both sides.

- Do not attach large or heavy items (such as a sleeping bag or tent) to the handlebar, forks, or fender.

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle, clutch, and brakes. It also provides important information on riding with a passenger or cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 192).

For information about carburetor adjustment for riding at high altitude, see page 193.

To protect the catalytic converters in your motorcycle's exhaust system, avoid extended idling and the use of leaded gasoline.

Safe Riding Precautions .....	38
Starting & Stopping the Engine .....	39
Preparation.....	39
Starting Procedure .....	40
Flooded Engine.....	42
How to Stop the Engine .....	43
Shifting Gears.....	44
Braking .....	46
Parking.....	48
Theft-Prevention Tips .....	51
Riding with a Passenger or Cargo.....	52

## Safe Riding Precautions

---

Before riding your motorcycle for the first time, please review the *Motorcycle Safety* section beginning on page 1, and the *Before Riding* section beginning on page 27 .

Even if you have ridden other motorcycles, take time to become familiar with how this motorcycle works and handles. Practice in a safe area until you build your skills and get accustomed to the motorcycle's size and weight.

Make sure flammable materials such as dry grass or leaves do not come in contact with the exhaust system when riding, idling, or parking your motorcycle.

# Starting & Stopping the Engine

---

Always follow the proper starting procedure described below.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your motorcycle's exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

Your motorcycle can be started with the transmission in gear by pulling in the clutch lever before operating the starter.

Your motorcycle is equipped with a side stand ignition cut-off system. If the side stand is down—the engine cannot be started unless the transmission is in neutral. If the side stand is up—the engine can be started in neutral, or in gear with the

clutch lever pulled in. After starting with the side stand down, the engine will stop if the transmission is put in gear before raising the side stand.

## Preparation

Before starting, insert the key, turn the ignition switch ON, and confirm the following:

- The transmission is in neutral (neutral indicator light ON).
- The engine stop switch is set to RUN.
- The low oil pressure indicator is ON.
- The fuel valve is ON.

# Starting & Stopping the Engine

The low oil pressure indicator should go off a few seconds after the engine starts. If the low oil pressure indicator lights during operation, stop the engine immediately and check the engine oil level.


## Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

### Normal Air Temperature

10° – 35°C (50° – 95°F)

#### LEFT SIDE

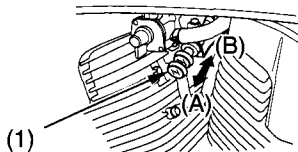

(1) choke knob

(A) fully ON

(B) fully OFF



# Starting & Stopping the Engine

---

1. Pull the choke knob out all the way to fully ON (A), if the engine is cold.
2. With the throttle closed, press the start button.
3. Immediately after the engine starts, operate the choke knob to keep fast idle.
4. About a half minute after the engine starts, push the choke knob (1) in all the way to fully OFF (B).
5. If idling is unstable, open the throttle slightly.

## High Air Temperature

35°C (95°F) or above

1. Do not use the choke.
2. With the throttle 1/8 – 1/4 open, press the start button.
3. Start the engine.

## Low Air Temperature

10°C (50°F) or below

1. Follow steps 1-2 under *Normal Air Temperature*.
2. When engine rpm begins to pick up, operate the choke knob to keep fast idle.

(cont'd)

# Starting & Stopping the Engine

---

3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke knob is at fully OFF (B).

## NOTICE

*Extended use of the choke may impair piston and cylinder wall lubrication and damage the engine.*

Snapping the throttle or fast idling for more than about 5 minutes at normal air temperature may cause exhaust pipe discoloration.

## Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

1. Leave the engine stop switch set to RUN.
2. Push the choke knob in all the way to fully OFF.
3. Open the throttle fully.
4. Press the start button for 5 seconds.

5. If the engine starts, quickly close the throttle, then open it slightly if idling is unstable.

If the engine does not start, wait 10 seconds, then follow the *High Air Temperature* procedure (page 41).

If the engine still won't start, refer to *If Your Engine Quits or Won't Start*, page 151 .

## How to Stop the Engine

### Normal Engine Stop

To stop the engine, shift into neutral and turn the ignition switch OFF.


The engine stop switch should normally remain in the RUN position even when the engine is OFF.

If your motorcycle is stopped with the engine stop switch OFF and the ignition switch ON, the headlight and taillight will remain on, resulting in battery discharge.

### Emergency Engine Stop

To stop the engine in an emergency, use the engine stop switch. To operate, press the switch to the OFF position.

# Shifting Gears

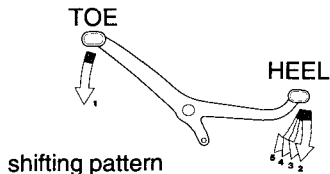

Your motorcycle has five forward gears which is coordinated with a cable-operated clutch system.

To shift to 1st gear (from neutral), or to shift down (5th-1st gear), press the shift lever with your toe. To shift up from 1st gear (2nd-5th gear), press the shift lever with your heel.

Learning when to shift gears comes with experience. Keep the following tips in mind:

- As a general rule, shift while moving in a straight line.
- Close the throttle and pull the clutch lever in completely before shifting. Improper shifting may damage the engine, transmission, and drive train.
- Learn to recognize the engagement point as you release the clutch lever. It is at this point the transmission of power to the rear wheel resumes.
- Upshift to a higher gear or reduce throttle before engine rpm (speed) gets too high. Learn the relationship between engine sound and the normal shifting points.
- Downshift to a lower gear before you feel the engine laboring (lugging) at low rpm.

- Avoid downshifting to help slow your motorcycle when engine rpm is high. Downshifting when engine speed is near its allowable maximum may over-rev the engine and cause possible damage.
- To prevent transmission damage, do not coast or tow the motorcycle for long distances with the engine off.

## Recommended Shift Points

Ride in the highest gear that lets the engine run and accelerate smoothly. This will give you good fuel economy and effective emissions control. When changing gears under normal conditions, use these recommended shift points:

### *Shifting Up:*

From 1st to 2nd:	12 mph (20 km/h)
From 2nd to 3rd:	19 mph (30 km/h)
From 3rd to 4th:	25 mph (40 km/h)
From 4th to 5th:	31 mph (50 km/h)

### *Shifting Down:*

From 5th to 4th:	22 mph (35 km/h)
From 4th to 3rd:	16 mph (25 km/h)

Pull the clutch lever in when speed drops below 12 mph (20 km/h), when engine roughness is evident, or when engine stalling is imminent; and shift down to 1st gear for acceleration.

# Braking

---

Your motorcycle is equipped with disc braking systems which are hydraulically activated. Operating the brake lever applies the front disc brake. Depressing the brake pedal applies the rear disc brake.

As a general rule, the front braking system provides about 70 percent of total stopping power.

For full braking effectiveness, use both the pedal and lever simultaneously. Using both braking systems will stop your motorcycle faster with greater stability.

To slow or stop, apply the brake lever and brake pedal smoothly, while downshifting to match your speed.

Gradually increase braking as you feel the brakes slowing your speed. The increase in engine compression from downshifting will help slow your motorcycle.

To prevent stalling the engine, pull the clutch lever in before coming to a complete stop. For support, put your left foot down first, then your right foot when you are through using the brake pedal.

Applying the brakes too hard may cause the wheels to lock and slide, reducing control of your motorcycle. If this happens, release the brake controls, steer straight ahead until you regain control, then reapply the brakes more gently.

When possible, reduce your speed or complete braking before entering a turn. Avoid braking or closing the throttle quickly while turning. Either action may cause one or both wheels to slip and reduce your control of your motorcycle.

Your ability to brake in a turn and to brake hard in an emergency situation are important riding skills. We suggest attending a Motorcycle Safety Foundation experienced rider training course (page 30 ) to retain these skills.

When riding in wet or rainy conditions, or on loose surfaces, the ability to maneuver and stop will be reduced. All of your actions should be smooth under these conditions. Rapid acceleration, braking or turning may cause loss of control. For

your safety, exercise extreme caution when braking, accelerating or turning.

When descending a long, steep grade, use engine compression braking by downshifting, with intermittent use of both brakes. Continuous brake application can overheat the brakes and reduce their effectiveness.

Riding with your foot resting on the brake pedal or your hand on the brake lever may actuate the brakelight, giving a false indication to other drivers. It may also overheat the brakes, reducing effectiveness.

# Parking

---

1. Look for a level parking area. If you can't park on a paved surface, make sure the ground surface is firm, especially under the side stand. If you must park on a hill, leave the transmission in gear and position the rear tire against the curb at a 45 degree angle.


Make sure flammable materials such as dry grass or leaves do not come in contact with the exhaust system when parking your motorcycle. Refer to *Catalytic Converters*, page 199.

2. Use the side stand to support the motorcycle while parked.
  - To lower the side stand, use your foot to guide it down. Remember that lowering the side stand with the transmission in gear will stop the engine, even if the clutch lever is pulled in. That is a function of the side stand ignition cut-off system.
  - Check that the side stand is down all the way so that the side stand ignition cut-off system (page 39 ) is activated.
  - If you have to park on a soft surface, insert something solid under the side stand for support.



3. Use the steering lock ( 1 ), which locks the handlebar in place. Turn the handlebar all the way to the left. Insert the ignition key ( 2 ) in the lock and turn it 180 degrees clockwise. Remove the key.

RIGHT FRONT

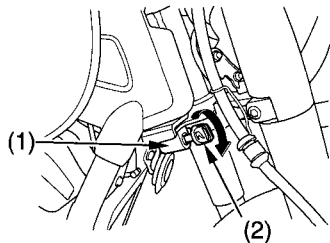

(1) steering lock


(2) ignition key

(cont'd)

# Parking

4. Use the helmet holder (3) to secure your helmet with your motorcycle:
- Insert the ignition key (2) and turn it counterclockwise to unlock the holder.
  - Hang your helmet on the holder pin (4).
  - Push in on the holder pin. Remove the key.

LEFT REAR

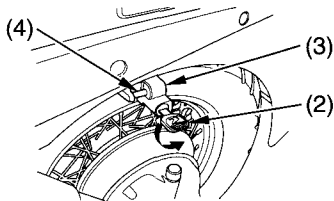

- (2) ignition key      (4) holder pin  
(3) helmet holder

## ⚠ WARNING

Riding with a helmet attached to the holder can interfere with the rear wheel or suspension and could cause a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

5. Turn the fuel valve OFF.

### Theft-Prevention Tips

- Park your motorcycle in a locked garage whenever possible. If a garage isn't available, park in a concealed area or in a well-lit area with enough pedestrian traffic to discourage a thief.
  - Always take the ignition key with you.
  - Always use the steering lock (page 49 ), even if you're parking for just a minute or two. A thief can easily push an unlocked motorcycle to a waiting truck.
  - In addition to the steering lock, use a good quality anti-theft device made specifically to lock a motorcycle to a secure object.
- If you decide to use an anti-theft device, select one of good quality and be sure to follow the manufacturer's instructions.
  - Keep your owner's manual, current registration, and insurance information with your motorcycle. This will make it easier for the authorities to find you if your motorcycle is stolen and recovered.

## Riding with a Passenger or Cargo

---

Your motorcycle is designed to carry you and one passenger. Whenever you add a passenger or cargo, you must be careful not to exceed the total load limits for this vehicle (*Load Limits*, page 35). Make sure your cargo is properly secured (*Loading Guidelines*, page 35).

Also consider adjusting the suspension (page 111 ) for the extra load.

Be aware that carrying a passenger or heavy cargo can affect acceleration, braking, and handling.

Before riding with a passenger, make sure your passenger is wearing the proper protective apparel (page 28 ).

Tell your passenger to hold the seat strap or your waist, lean with you in the turns, and keep their feet on the passenger footpegs at all times, even when the motorcycle is stopped at a traffic light.

To help keep your motorcycle in good shape, this section includes a Maintenance Schedule for required service, a list of periodic checks you should perform at least once a month, and step-by-step instructions for specific maintenance tasks. You'll also find important safety precautions, information on fuels and oils, and tips for keeping your Honda looking great.

For information about the exhaust emission and noise emission requirements of the U.S. Environmental Protection Agency (EPA) and the California Air Resources Board (CARB), see page 194 .

For information about replacing fuses, see page 173 .

USA only

**Maintenance, replacement or repair of the emission control devices and systems may be performed by any motorcycle repair establishment or individual using parts that are "certified" to EPA standards.**

## *Before You Service Your Honda*

The Importance of Maintenance .....	56
Maintenance Safety .....	57
Important Safety Precautions .....	58
Periodic Maintenance .....	60
Maintenance Schedule .....	62
Maintenance Record .....	67

(cont'd)

# Servicing Your Honda

---

## *Service Preparations*

Maintenance Component Locations .....	69
Side Cover Removal.....	72
Storage Compartment.....	74
Tool Kit.....	75
Owner's Manual Storage.....	76
Seat Removal.....	77

## *Service Procedures*

### Fluids & Filters

Fuel .....	78
Engine Oil & Filter.....	81
Coolant.....	90
Air Cleaner .....	94
Crankcase Breather.....	96
Final Drive Oil.....	97

### Engine

Throttle .....	99
Clutch System.....	101
Engine Idle Speed.....	105
Spark Plugs .....	107

### Chassis

Suspension .....	111
Brakes .....	114
Tires .....	118
Side Stand.....	128

### Electrical

Battery.....	129
--------------	-----

Appearance Care .....	134
-----------------------	-----

The following table summarizes the three types of inspections and servicing recommendations for your motorcycle. Both the pre-ride inspection and the scheduled maintenance at the recommended intervals are necessary to assure safe and dependable performance. The periodic checks provide additional confidence in your motorcycle's performance.

Type of Inspection/Service	Refer to page:	When Performed	Who Performs
Pre-ride Inspection	31	before every ride	you
Periodic Maintenance	60	monthly*	you
Maintenance Schedule	62	interval on schedule	your Honda dealer**

\* more often if you ride frequently or long distances; or anytime you clean your motorcycle

\*\* unless you have the proper tools and service data and are mechanically qualified

# The Importance of Maintenance

---

Keeping your motorcycle well-maintained is absolutely essential to your safety. It's also a good way to protect your investment, get maximum performance, avoid breakdowns, and have more fun. A properly maintained motorcycle will also help to reduce air pollution.

Remember, proper maintenance is the owner's responsibility. Be sure to inspect your motorcycle before each ride, perform the periodic checks, and follow the Maintenance Schedule in this section.

## **WARNING**

Improperly maintaining this motorcycle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

If your motorcycle overturns or is involved in a crash, be sure your Honda dealer inspects all major parts, even if you are able to make some repairs.



This section includes instructions on how to perform some important maintenance tasks. If you have basic mechanical skills, you can perform many of these tasks with the tools provided with your motorcycle.

Other tasks that are more difficult and require special tools are best performed by professionals. Wheel removal should normally be handled only by a Honda technician or other qualified mechanic. Instructions are included in this manual only to assist in emergency service.

Some of the most important safety precautions follow. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

## WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

# Maintenance Safety

---

## Important Safety Precautions

- Make sure the engine is off before you begin any maintenance or repairs. This will help eliminate several potential hazards:

**Carbon monoxide poisoning from engine exhaust.** Be sure there is adequate ventilation whenever you operate the engine.

**Burns from hot motorcycle parts.** Let the engine and exhaust system cool before touching.

**Injury from moving parts.** Do not run the engine unless instructed to do so.

- Read the instructions before you begin, and make sure you have the tools and skills required.
- To help prevent the motorcycle from falling over, park it on a firm, level surface, using the side stand or a maintenance stand to provide support.
- To reduce the possibility of a fire or explosion, be careful when working around gasoline. Use only non-flammable solvent, not gasoline, to clean parts. Keep cigarettes, sparks, and flames away from all fuel-related parts.

Remember that your Honda dealer knows your motorcycle best and is fully equipped to maintain and repair it. To ensure the best quality and reliability, use only new genuine Honda parts or their equivalents for repair and replacement. If you have the tools and skills required for additional maintenance jobs, you can purchase an official Honda Service Manual (page 204 ).

## Periodic Maintenance

---

In addition to the regularly scheduled maintenance (page 62 ) and daily pre-ride inspection (page 31 ), consider performing the periodic checks on the following page at least once a month, even if you haven't ridden your motorcycle, or as often as once a week if you ride frequently or for long distances. It's a good idea to perform this maintenance any time you clean your motorcycle.

Check the odometer reading and perform any scheduled maintenance checks that are needed (page 62 ). Remember, more frequent checks may be needed for riding in severe conditions.

## Periodic Maintenance

Tires & Wheels	<p>Check the air pressure with a gauge and add air if needed (page 118). Examine the tread for wear (page 121).</p> <p>Look closely for nails, embedded objects, cuts, and other types of damage (page 121 ). Roll your motorcycle so you can inspect the entire surface.</p> <p>Check the condition of the wheels (cast type) or the rims and spokes (spoke wheels).</p>
Fluids	<p>Check the levels of the engine oil (page 85 ), coolant (page 92 ), brake fluid (page 115 ), and final drive oil (page 97 ). Add the correct fluid as necessary, and investigate the cause of any low fluid level.</p>
Lights	<p>Make sure the headlight, brakelight, taillight, and turn signals are working properly.</p>
Freeplay	<p>Check the freeplay of the clutch lever (page 101 ) and throttle grip (page 99 ).</p>
Fuses	<p>Make sure you have a full supply of spare fuses.</p>
Nuts & Bolts	<p>Check the major fasteners and tighten as needed.</p>

# Maintenance Schedule

---

The required Maintenance Schedule that follows specifies how often you should have your motorcycle serviced, and what things need attention. It is essential to have your motorcycle serviced as scheduled to maintain safe, dependable performance and proper emission control.

The service intervals in this Maintenance Schedule are based on average riding conditions. Some items will need more frequent service if you ride in unusually wet or dusty areas or at full throttle. Consult your Honda dealer for recommendations applicable to your individual needs and use.

Some items in the Maintenance Schedule can be performed with basic mechanical skills and hand tools. Procedures for these items are provided in this manual. Other items involve more extensive procedures and may require special training, tools, and equipment. We recommend that you have your Honda dealer perform these tasks unless you have advanced mechanical skills and the required tools and equipment. Procedures for such items in this schedule are provided in an official Honda Service Manual available for purchase (page 204 ).

If you do not feel capable of performing a given task or need assistance, remember that your Honda dealer knows your motorcycle best and is fully equipped to maintain and repair it. If you decide to do your own maintenance, use only genuine Honda parts or their equivalents for repair or replacement to ensure the best quality and reliability.

Perform the pre-ride inspection (page 31 ) and owner maintenance (page 62 ) at each scheduled maintenance period.

Each item on the maintenance schedule requires some mechanical knowledge. Certain items (particularly those marked \* and \*\*) may require more technical information and tools. Consult your Honda dealer.

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 204 ).

\*\*In the interest of safety, we recommend these items be serviced only by your Honda dealer.

# Maintenance Schedule

---

## *Summary of Maintenance Schedule Notes & Procedures:*

### NOTES:

1. At higher odometer readings, repeat at the frequency interval established here.
2. Service more frequently if the motorcycle is ridden in unusually wet or dusty areas.
3. Service more frequently if the motorcycle is ridden often at full throttle or in the rain.
4. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
5. California type only.

### Maintenance Procedures:

I: inspect and clean, adjust, lubricate,  
or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace



# Maintenance Schedule

ITEM				FREQUENCY		ODOMETER READING (Note 1)								Refer to page
						× 1,000 mi	0.6	4	8	12	16	20	24	
				NOTE		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	
EMISSION RELATED ITEMS	*	FUEL LINE							I		I		I	—
	*	THROTTLE OPERATION							I		I		I	—
	*	CARBURETOR CHOKE							I		I		I	—
		AIR CLEANER	2							R			R	94
		CRANKCASE BREATHER	3					C	C	C	C	C	C	96
		SPARK PLUGS						I	R	I	R	I	R	107
	*	VALVE CLEARANCE					I		I		I		I	—
		ENGINE OIL						INITIAL=600 mi (1,000 km) or 1 month: R REGULAR=EVERY 8,000 mi (12,800 km) or 12 months: R						81
		ENGINE OIL FILTER					R		R		R		R	86
	*	ENGINE IDLE SPEED					I	I	I	I	I	I	I	105
		RADIATOR COOLANT	4						I		I		R	90
	*	COOLING SYSTEM							I		I		I	—
	*	SECONDARY AIR SUPPLY SYSTEM							I		I		I	—
	*	EVAPORATIVE EMISSION CONTROL SYSTEM	5							I			I	—

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 204).

# Maintenance Schedule

			FREQUENCY	ODOMETER READING (Note 1)								Refer to page
				× 1,000 mi	0.6	4	8	12	16	20	24	
ITEM			NOTE	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	
NON-EMISSION RELATED ITEMS		FINAL DRIVE OIL									R	97
		BRAKE FLUID	4					R			R	114
		BRAKE PAD WEAR										117
		BRAKE SYSTEM										114
	*	BRAKE LIGHT SWITCH										—
	*	HEADLIGHT AIM										—
		CLUTCH SYSTEM										101
		SIDE STAND										128
	*	SUSPENSION										—
	*	NUTS, BOLTS, FASTENERS										—
	**	WHEELS/TIRES (VTX1300R)										—
	**	WHEELS/TIRES (VTX1300S)										—
	**	STEERING HEAD BEARINGS										—

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 204 ).

\*\*In the interest of safety, we recommend these items be serviced only by your Honda dealer.

## Maintenance Record

Keeping an accurate maintenance record will help ensure that your motorcycle is properly maintained. Retain detailed receipts to verify the maintenance was performed. If the motorcycle is sold, these receipts should be transferred with the motorcycle to the new owner. Make sure whoever performs the maintenance completes this record. All scheduled maintenance, including the 600 mile (1,000 km) initial maintenance, is considered a normal owner operating cost and will be charged for by your dealer. Use the space under Notes to record anything you want to remind yourself about or mention to your dealer.

Miles (km)	Odometer	Date	Performed By:	Notes
600 (1,000)				
4,000 (6,400)				
8,000 (12,800)				
12,000 (19,200)				
16,000 (25,600)				
20,000 (32,000)				


# Maintenance Record

---

Miles (km)	Odometer	Date	Performed By:	Notes
24,000 (38,400)				
28,000 (44,800)				
32,000 (51,200)				
36,000 (57,600)				
40,000 (64,000)				
44,000 (70,400)				
48,000 (76,800)				
52,000 (83,200)				
56,000 (89,600)				
60,000 (96,000)				
64,000 (102,400)				
68,000 (108,800)				


# Maintenance Component Locations

---

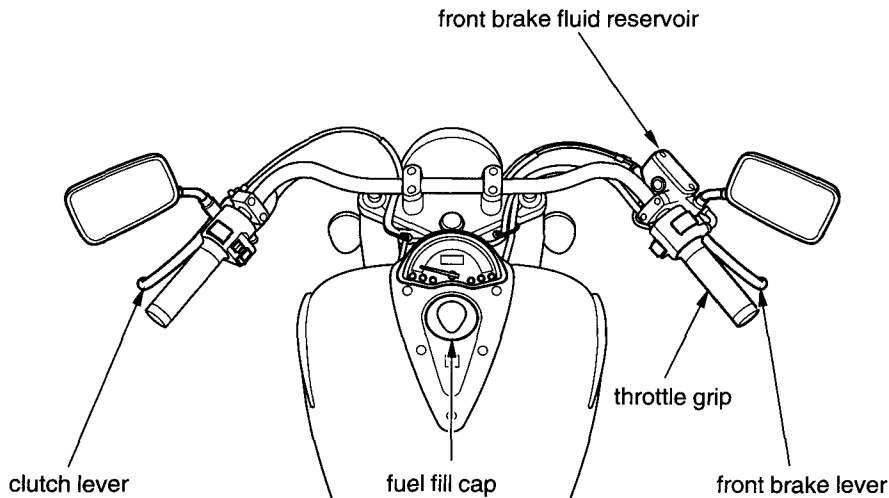


# Maintenance Component Locations

---

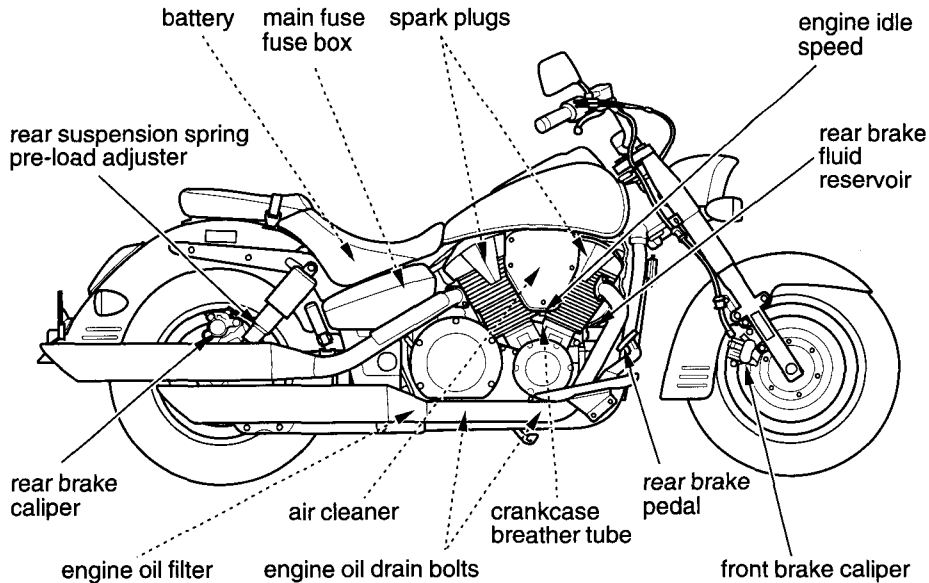

# Maintenance Component Locations

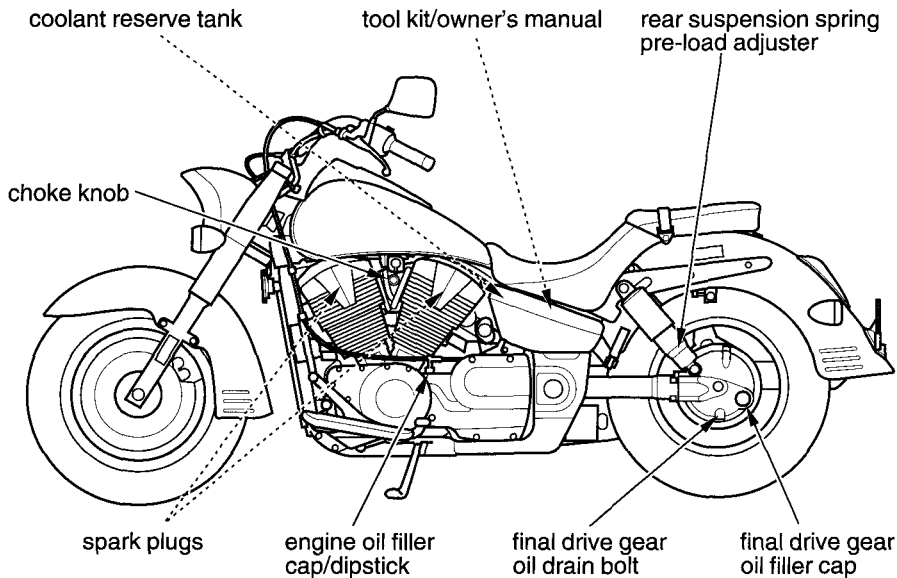


# Side Cover Removal

Refer to *Safety Precautions* on page 58 .

The left side cover must be removed to access the storage compartment, or to service the coolant.

## LEFT SIDE

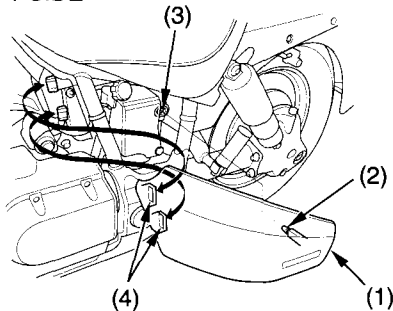

(1) left side cover  
(2) prong

(3) frame grommet  
(4) recesses

## Left Side Cover Removal

1. Carefully pull the left side cover (1) out until the prong (2) is clear of the frame grommet (3).
2. Remove the left side cover.

## Left Side Cover Installation


1. Align the recesses (4) with the tabs.
2. Position the cover so the prong is aligned with the frame grommet.
3. Push the prong in.



Refer to *Safety Precautions* on page 58 .

The right side cover must be removed to service the fuses.

## RIGHT SIDE

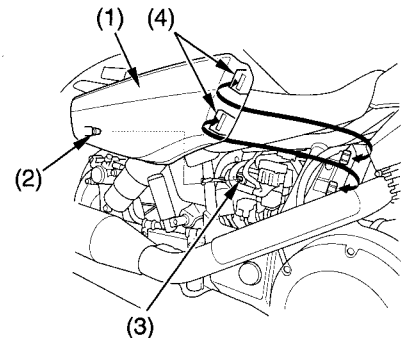

- |                      |              |
|----------------------|--------------|
| (1) right side cover | (3) grommet  |
| (2) prong            | (4) recesses |

## Right Side Cover Removal


1. Carefully pull the right side cover (1) out until the prong (2) is clear of the frame grommet (3).
2. Remove the right side cover.

## Right Side Cover Installation

1. Align the recesses (4) with tabs.
2. Position the cover so the prong is aligned with the frame grommet.
3. Push the prong in.

# Storage Compartment

## LEFT SIDE

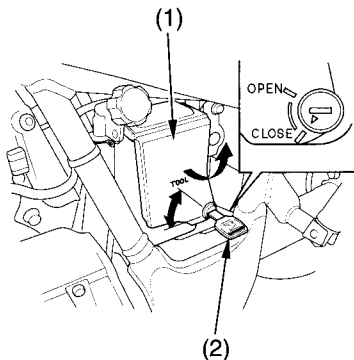

(1) storage compartment

(2) ignition key

The storage compartment (1) is located behind the left side cover (page 72).

The tool kit and owner's manual (and other documents) should be stored in the storage compartment.


To open the storage compartment (1), remove the left side cover (page 72). Insert the ignition key (2) and turn it clockwise. Open the storage compartment lid.

To close the storage compartment, close the compartment lid. Turn the ignition key counterclockwise and remove it. Install the left side cover (page 72).

The tool kit (1) is stored in the storage compartment (2) (page 74 ) behind the left side cover (page 72 ).

An optional, larger tool kit may be available. Check with your Honda dealer's parts department.

### LEFT SIDE

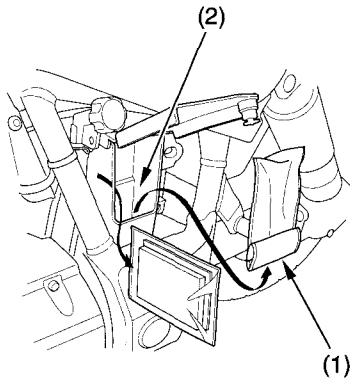


(1) tool kit      (2) storage compartment

# Owner's Manual Storage

Your motorcycle provides storage for the owner's manual so you'll have it with you for easy reference. Store your owner's manual (and other documents) in the plastic storage bag (1) in the storage compartment (2) (page 74 ) behind the left side cover (page 72 ).

Be careful not to flood this area when washing your motorcycle.

## LEFT SIDE

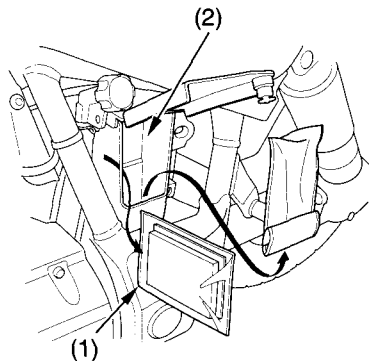


(1) plastic storage bag

(2) storage compartment

Refer to *Safety Precautions* on page 58 .

The seat must be removed for battery maintenance.

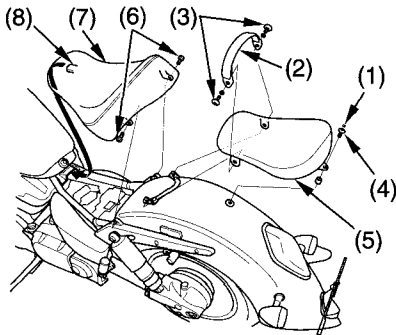

- (1) cap
- (2) seat strap
- (3) bolts A
- (4) bolt B

- (5) rear seat
- (6) bolts C
- (7) front seat
- (8) tab

## Removal

1. Remove the cap (1).
2. Remove the seat strap (2) by removing the bolts A (3).
3. Remove the bolt B (4).
4. Pull the rear seat (5).
5. Remove the front seat mounting bolts C (6).
6. Pull the front seat (7) back and up.

## Installation

1. Insert the front seat tab (8) into the recess under the frame.
2. Install the front seat mounting bolts C.
3. Install the rear seat.
4. Install the seat strap, bolts A, and bolt B.
5. Install the cap.

# Fuel

---

Refer to *Safety Precautions* on page 58 .

## Fuel Recommendation

type	unleaded
pump octane number	86 (or higher)

We recommend that you use unleaded fuel because it produces fewer engine deposits and extends the life of exhaust system components.

The use of leaded gas will damage the catalytic converters.

Your engine is designed to use any gasoline that has a pump octane number of 86 or higher. Gasoline pumps at service stations normally display the pump octane number. For information on the use of oxygenated fuels, see page 200 .

Use of lower octane gasoline can cause persistent “pinging” or “spark knock” (a loud rapping noise) which, if severe, can lead to engine damage. Light pinging experienced while operating under a heavy load, such as climbing a hill, is no cause for concern.

If pinging or spark knock occurs at a steady engine speed under normal load, change brands of gasoline. If pinging or spark knock persists, consult your Honda dealer.

Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust, or water in the fuel tank.

## Fuel Capacity


Fuel tank capacity, including reserve:  
4.76 US gal (18.0 l)

Reserve capacity:  
1.16 US gal (4.4 l)

The tank should be refilled as soon as possible after switching to reserve, and the fuel valve should be returned to the ON position after refueling to avoid running out of fuel with no reserve.

## Refueling Procedure

Refer to *Safety Precautions* on page 58.

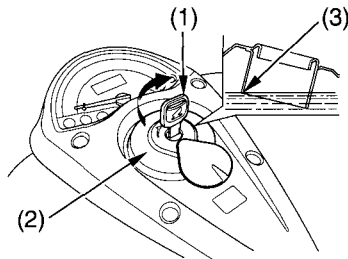

- (1) ignition key                      (3) filler neck  
(2) fuel fill cap

1. Insert the ignition key (1) in the fuel fill cap (2) and turn it clockwise.

(cont'd)

2. Open the cap.
3. Add fuel until the level reaches the bottom of the filler neck (3). Avoid overfilling the tank. There should be no fuel in the filler neck.

## **WARNING**

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

4. After refueling, align the latch in the cap with the slot in the filler neck. Push the cap into the filler neck until it snaps and locks.
5. Remove the ignition key from the cap.
6. Turn the fuel valve ON (if it was set on RES).



Engine oil quality is a major factor that affects both the performance and the service life of the engine.

Using the proper oil (page 82 ) and filter, and regularly checking, adding, and changing oil will help extend your engine's life. Even the best oil wears out. Changing oil helps get rid of dirt and deposits in the engine. Operating the engine with old or dirty oil can damage your engine. Running the engine with insufficient oil can cause serious damage to the engine and transmission.

Change the engine oil as specified in the maintenance schedule on page 65 .

When running in very dusty conditions, oil changes should be performed more frequently than specified in the maintenance schedule.

# Engine Oil & Filter

---

## Oil Recommendation

API classification	SG or higher except oils labeled as energy conserving on the circular API service label
viscosity (weight)	SAE 10W-30
JASO T 903 standard	MA

### suggested oil\*

Pro Honda GN4 4-stroke oil (USA & Canada), or Honda 4-stroke oil (Canada only), or an equivalent motorcycle oil.


- \* Suggested oils are equal in performance to SJ oils that are not labeled as energy conserving on the circular API service label.

## Engine Oil & Filter

- Your motorcycle does not need oil additives. Use the recommended oil.
- Do not use oils with graphite or molybdenum additives. They may adversely affect clutch operation.
- Do not use API SH or higher oils displaying a circular API “energy conserving” service label on the container. They may affect lubrication and clutch performance.




NOT RECOMMENDED

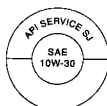

OK

- Do not use non-detergent, vegetable, or castor based racing oils.

Other viscosities shown in the following chart may be used when the average temperature in your riding area is within the indicated range.

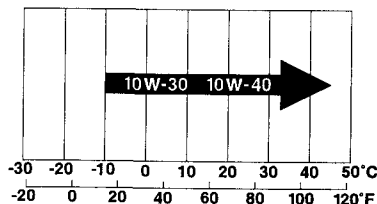

# Engine Oil & Filter


---

## JASO T 903 standard

The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines.

There are two classes: MA and MB.

Oil conforming to the standard is labeled on the oil container. For example, the following label shows the MA classification.

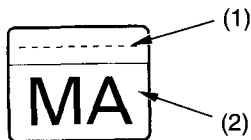


PRODUCT MEETING JASO T 903  
COMPANY GUARANTEEING THIS MA PERFORMANCE:

- (1) code number of the sales company  
of the oil
- (2) oil classification

## Checking & Adding Oil

Refer to *Safety Precautions* on page 58 .

### LEFT SIDE

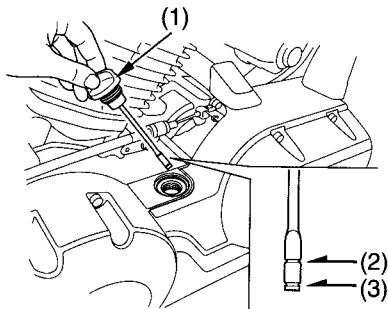

- (1) oil filler cap/dipstick
- (2) upper level mark
- (3) lower level mark

1. Park your motorcycle on its side stand on a firm, level surface.
2. Start the engine and let it idle for 3—5 minutes. Make sure the low oil pressure indicator goes off. If the indicator remains on, stop the engine immediately.
3. Stop the engine and wait 2—3 minutes.
4. Remove the oil filler cap/dipstick (1) and wipe it clean.
5. Hold the motorcycle in an upright position.
6. Insert the oil filler cap/dipstick until it seats, but don't screw it in.

(cont'd)

# Engine Oil & Filter

---

7. Remove the oil filler cap/dipstick and check the oil level.
  - If the oil is at or near the upper level mark (2) — you do not have to add oil.
  - If the oil is below or near the lower level mark (3) — add the recommended oil until it reaches the upper level mark. (Do not overfill.)
8. Reinstall the oil filler cap/dipstick.
9. Check for oil leaks.

## Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 58 .

Your motorcycle's oil filter has very specific performance requirements. Use a new genuine Honda oil filter or a filter of equal quality specified for your model.

### NOTICE

*Using the wrong oil filter may result in leaks or premature engine damage.*


This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid (page 147 ). If you do not have the skills or the tools, see your Honda dealer.

### *Drain the Engine Oil:*

1. Park the motorcycle on its side stand on a firm, level surface.
2. If the engine is cold, start it and let it idle for 3—5 minutes. Turn the engine off. Wait 2—3 minutes for the oil to settle.

3. Place a drain pan under the crankcase.
4. To drain the oil, remove the oil filler cap/dipstick, drain bolts (1), (2) and sealing washers (3).

### RIGHT FRONT, UNDER ENGINE

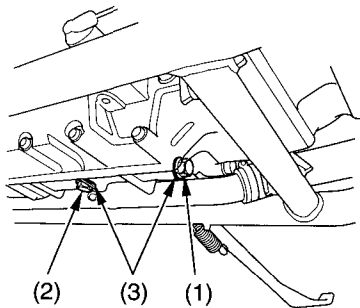

- (1) drain bolt (front)    (3) sealing washers  
(2) drain bolt (rear)

(cont'd)

# Engine Oil & Filter


## *Install a New Oil Filter:*

5. Remove the oil filter (4) with a filter wrench and let the remaining oil drain out. Discard the oil filter in an approved manner (page 147).
6. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 147).

### **NOTICE**


*Improper disposal of drained fluids is harmful to the environment.*

## RIGHT REAR, UNDER ENGINE

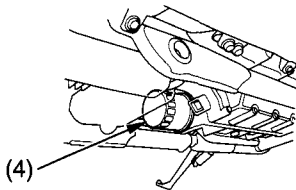

(4) oil filter

7. Apply a thin coat of engine oil to the rubber seal (5) of a new oil filter.

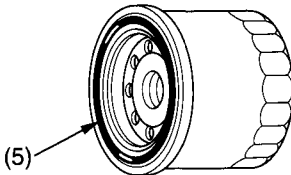

(5) rubber seal



8. Install the new oil filter and tighten it by hand.
  9. Using an oil filter wrench attachment and a torque wrench, tighten the new oil filter to the specified torque:  
19 lbf·ft (26 N·m , 2.7 kgf·m)
  10. Check the condition of the sealing washers on the drain bolts. Replace the washers every other time the oil is changed.  
Install the drain bolts and tighten them to the specified torque:  
22 lbf·ft (30 N·m , 3.1 kgf·m)
- Add Engine Oil:*
11. Fill the crankcase with the recommended oil (page 82 ), approximately:  
3.9 US qt (3.7 ℓ)
12. Install the oil filler cap/dipstick securely.
  13. Start the engine and let it idle for 3—5 minutes.
  14. Stop the engine and wait 2—3 minutes.
  15. Hold the motorcycle upright and check that the oil level is at the upper level mark on the oil filler cap/dipstick (page 85 ).
  16. Check that there are no oil leaks.
- If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.

# Coolant

---

Your motorcycle's liquid cooling system dissipates engine heat through the coolant jacket that surrounds the cylinder and cylinder head.

Maintaining the coolant will allow the cooling system to work properly and prevent freezing, overheating, and corrosion.

## Coolant Recommendation

Use Pro Honda HP coolant or an equivalent high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines. Check the antifreeze container label.

Use only distilled water as a part of the coolant solution. Water that is high in mineral content or salt may be harmful to the aluminum engine.

### NOTICE

*Using coolant with silicate inhibitors may cause premature wear of water pump seals or blockage of radiator passages. Using tap water may cause engine damage.*

The factory provides a 50/50 solution of antifreeze and water in this motorcycle. This coolant solution is recommended for most operating temperatures and provides good corrosion protection.

Decreasing the concentration of antifreeze to less than 40% will not provide proper corrosion protection.

Increasing the concentration of antifreeze is not recommended because it decreases cooling system performance. Higher concentrations of antifreeze (up to 60%) should only be used to provide additional protection against freezing. Check the cooling system frequently during freezing weather.


# Coolant

## Checking & Adding Coolant

Refer to *Safety Precautions* on page 58 .

LEFT CENTER

LEFT SIDE

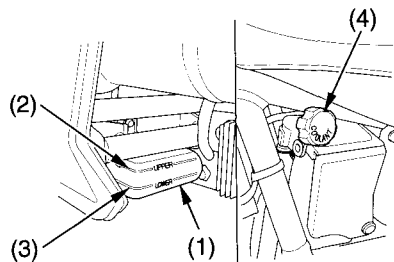

- (1) reserve tank
- (2) UPPER level mark
- (3) LOWER level mark
- (4) reserve tank cap

1. With the engine at normal operating temperature, check the coolant level in the reserve tank ( 1 ). It should be between the UPPER ( 2 ) and LOWER ( 3 ) level marks.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.

2. Remove the left side cover (page 72 ).
3. Remove the reserve tank cap ( 4 ).  
Always add coolant to the reserve tank.  
Do not attempt to add coolant by removing the radiator cap.
4. Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.
5. Install the reserve tank cap.
6. Install the left side cover (page 72 ).

## Coolant Replacement

Refer to *Safety Precautions* on page 58 .

Coolant should be replaced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 204 ).

## WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

To properly dispose of drained coolant, refer to *You & the Environment*, page 147 .

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

# Air Cleaner

---

Refer to *Safety Precautions* on page 58 .

Service the air cleaner more frequently if you ride in unusually wet or dusty areas. Your Honda dealer can help you determine the correct service interval for your riding conditions.

Your motorcycle's air cleaner has very specific performance requirements. Use a new genuine Honda air cleaner specified for your model or an air cleaner of equivalent quality.

## NOTICE

*Using the wrong air cleaner may result in premature engine damage.*

Proper air cleaner maintenance can prevent premature engine wear or damage, expensive repairs, low engine power, poor gas mileage, and spark plug fouling.


## NOTICE

*Improper or lack of proper air cleaner maintenance can cause poor performance and premature engine wear.*

## Replacement

1. Remove the bolts ( 1 ), washers ( 2 ) and air cleaner housing cover ( 3 ).
2. Remove the air cleaner ( 4 ).
3. Discard the air cleaner.  
Thoroughly clean the inside of the air cleaner case ( 5 ).
4. Install a new air cleaner and reinstall the air cleaner housing cover.
5. Reinstall the washers and make sure the bolts are tightened securely to the specified torque:  
2.6 lbf·ft ( 3.5 N·m , 0.4 kgf·m )

## RIGHT SIDE

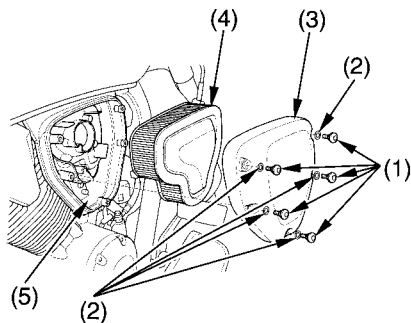

- |                               |                      |
|-------------------------------|----------------------|
| (1) bolts                     | (4) air cleaner      |
| (2) washers                   | (5) air cleaner case |
| (3) air cleaner housing cover |                      |


# Crankcase Breather

Refer to *Safety Precautions* on page 58 .

Service the crankcase breather more frequently if your motorcycle is ridden in the rain or often at full throttle. Service the breather if you can see deposits in the transparent section of the drain tube.

## Draining

RIGHT FRONT

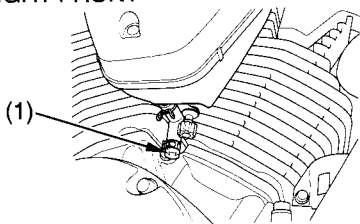

(1) crankcase breather tube plug

1. Place a drain pan under the crankcase breather tube plug (1).
2. Remove the plug to drain the deposits in the tube.
3. Reinstall the crankcase breather tube plug.




## Oil Recommendation

type	hypoid gear oil
viscosity (weight)	SAE 80

## Checking & Adding Oil

Refer to *Safety Precautions* on page 58 .

LEFT REAR

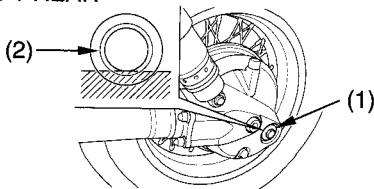

(1) oil filler cap


(2) oil filler hole

1. Place the motorcycle on its side stand on a firm, level surface.
2. Remove the oil filler cap ( 1 ).
3. Check the oil level. It should be flush with the lower edge of the oil filler hole ( 2 ).
4. If the level is low, check for leaks. Add the recommended oil through the oil filler hole until it reaches the lower edge of the opening.
5. Install the oil filler cap.

## Changing Oil

Refer to *Safety Precautions* on page 58 .

### LEFT REAR

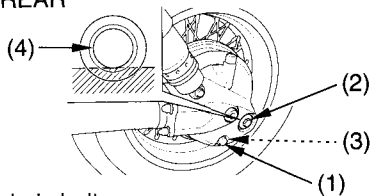

- (1) oil drain bolt
- (2) oil filler cap
- (3) sealing washer
- (4) oil filler inspection hole


Change the oil with the final drive at normal operating temperature to assure complete and rapid draining.

1. Place the motorcycle on its side stand on a firm, level surface.
2. Place a drain pan under the oil drain bolt (1).
3. Remove the oil filler cap (2) and the oil drain bolt.
4. After the oil has completely drained, check that the sealing washer (3) is in good condition. Reinstall the oil drain bolt with its sealing washer (or a new washer, if necessary) and tighten it to the specified torque:  
**15 lbf·ft (20 N·m , 2.0 kgf·m)**
5. Fill the final drive with the recommended oil:  
**4.1 US oz (120 cm<sup>3</sup>)**  
Make sure the final drive oil level is at the lower edge of the oil filler inspection hole (4).
6. Install the oil filler cap.

## Throttle Freeplay

Refer to *Safety Precautions* on page 58 .

### RIGHT HANDLEBAR

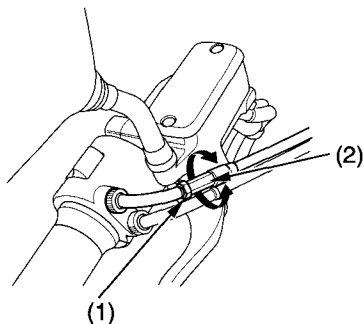

(1) lock nut

(2) adjuster

### Inspection

Check freeplay at the throttle grip flange.

Freeplay:

1/16—1/4 in (2—6 mm)

If necessary, adjust to the specified range.

### Adjustment

1. Loosen the lock nut (1).
2. Turn the adjuster (2).
3. After adjustment, check for smooth rotation of the throttle grip from fully closed to fully open in all steering positions.

# Throttle

---

## Throttle Inspection

Refer to *Safety Precautions* on page 58 .

1. Check that the throttle assembly is positioned properly and the securing bolts are tight.
2. Check for smooth rotation of the throttle from fully open to fully closed in all steering positions. If there is a problem, see your Honda dealer.


Your motorcycle's manually-activated, wet, multiplate clutch is part of the primary drive system. Proper freeplay adjustment allows a smooth, gradual engagement when shifting gears.

Improper freeplay adjustment can cause premature clutch wear.

## Clutch Freeplay

Refer to *Safety Precautions* on page 58 .

### LEFT HANDLEBAR

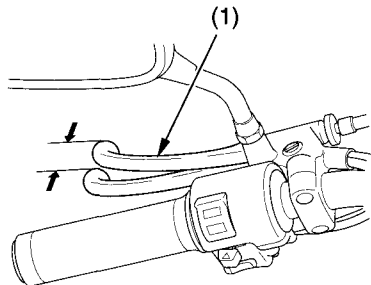

(1) clutch lever

# Clutch System

## Inspection

### 1. Check freeplay:


**3/8 – 13/16 in (10 – 20 mm)**

If necessary, adjust to the specified range.

## Upper Adjustment

Attempt adjustment with the upper clutch cable adjuster first.

## LEFT HANDLEBAR

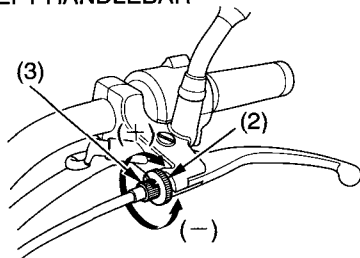

(2) upper lock nut

(3) upper clutch cable adjuster

(+) increase freeplay


(-) decrease freeplay

1. Loosen the upper lock nut (2).
2. Turn the upper clutch cable adjuster (3) to obtain the specified freeplay.
3. Tighten the upper lock nut and check the freeplay again.

## Lower Adjustment

If the upper clutch cable adjuster is threaded out near its limit — or the correct freeplay cannot be obtained — attempt adjustment with the lower clutch cable adjuster.

### LEFT SIDE

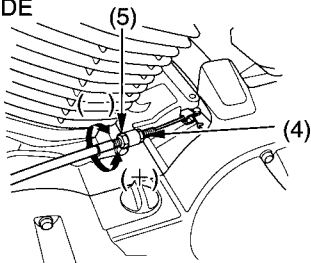

- (4) lower lock nut
- (5) lower adjusting nut
- (+) increase freeplay
- (-) decrease freeplay

1. Loosen the upper lock nut (2) and turn the upper clutch cable adjuster (3) all the way in (to provide maximum freeplay). Tighten the upper lock nut.
2. Loosen the lower lock nut (4).
3. Turn the lower adjusting nut (5) to obtain the specified freeplay.
4. Tighten the lower lock nut and check the adjustment.

(cont'd)

# Clutch System

---

5. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. Your motorcycle should move smoothly and accelerate gradually.

If you cannot get proper adjustment, or the clutch does not work properly, the cable or clutch friction discs may be worn. See your Honda dealer or refer to the official Honda Service Manual (page 204 ).

## Other Inspections & Lubrication

- Check that the clutch lever assembly is positioned properly and the securing bolts are tight.
- Check the clutch cable for kinks or signs of wear. If necessary, have it replaced.
- Lubricate the clutch cable with a commercially-available cable lubricant to prevent premature wear and corrosion.



The best way to assure proper carburetion is to see your Honda dealer for regularly scheduled servicing, including carburetor adjustment.

Remember, idle speed adjustment is not a “cure-all” for other problems in your engine’s fuel-delivery system. Adjusting the idle will not compensate for a fault elsewhere.


The engine must be at normal operating temperature for accurate idle speed adjustment.

For information about high altitude carburetor adjustment, see page 193 .

## Idle Speed Adjustment

Refer to *Safety Precautions* on page 58 .

RIGHT SIDE

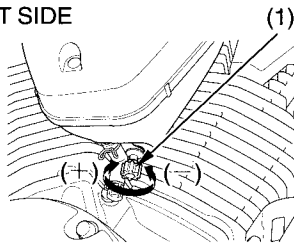

(1) throttle stop screw      (+) increase  
   (−) decrease

1. If the engine is cold, start it and warm it up with ten minutes of stop-and-go riding. Stop the engine.

(cont'd)

## Engine Idle Speed

---

2. Place your motorcycle on its side stand on a firm, level surface.
3. Connect a tachometer to the engine.
4. Shift into neutral. Start the engine.
5. Adjust idle speed with the throttle stop screw ( 1 ).

Idle speed (in neutral):

**900  $\pm$  100 rpm**

## Spark Plug Recommendation

standard spark plug	DCPR6E (NGK) or XU20EPR-U (DENSO)
for extended high speed riding	DCPR7E (NGK) or XU22EPR-U (DENSO)

Use only the recommended type of spark plugs in the recommended heat range.

### NOTICE


*Using spark plugs with an improper heat range can cause engine damage.*

# Spark Plugs

## Spark Plug Replacement & Inspection

Refer to *Safety Precautions* on page 58.


### RIGHT SIDE

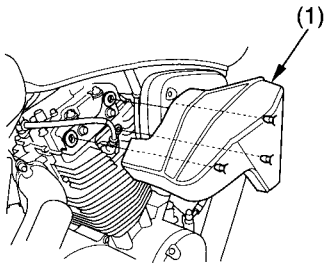

(1) overhead cover


1. Grasp the overhead covers (1) on both sides and pull out.
2. Clean any dirt from around the spark plug bases.
3. Disconnect the spark plug caps (2). Take care to avoid damaging the spark plug wire when disconnecting the caps.
4. Using a spark plug wrench (3), remove the spark plugs.

### RIGHT SIDE

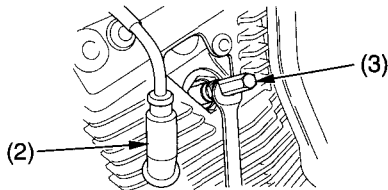

- (2) spark plug caps  
(3) spark plug wrench

5. Inspect the electrodes and center porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner, if available, or a wire brush.
6. Check the spark plug gap (4) of each new plug, using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (5) carefully.  
The gap should be:  
0.031—0.035 in (0.80—0.90 mm)

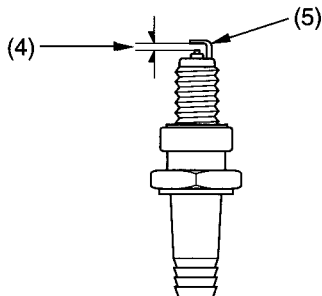

(4) spark plug gap      (5) side electrode

7. With the plug washers attached, thread the spark plugs in by hand to prevent cross-threading.

(cont'd)

# Spark Plugs

---

8. Tighten each spark plug:

- If the old plug is good:  
1/8 turn after it seats.
- If installing a new plug, tighten it twice to prevent loosening:
  - a) First, tighten the plug:  
NGK: 3/4 turn after it seats.  
DENSO: 1/2 turn after it seats.
  - b) Then loosen the plug.
  - c) Next, tighten the plug again:  
1/8 turn after it seats.

## NOTICE

*Improperly tightened spark plugs can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.*

9. Reinstall the spark plug caps. Take care to avoid pinching any cables or wires.

10. Reinstall the overhead covers (page 108).

Your front and rear suspension systems use springs and hydraulic damping devices that suspend your weight and most of the weight of your motorcycle.

The spring pre-load for your rear suspension system adjusts the amount of force required to begin compression of the spring.

The oil damper systems hydraulically control the natural compression and rebound of the suspension springs so that traction and comfort are maintained as the wheels ride over road surfaces.

Consider adjusting your rear suspension pre-load whenever you change your normal load, by adding or subtracting a passenger, cargo, or accessories, or when the road or riding conditions change.

The way you ride your motorcycle and the type of ride you want to experience can also influence your suspension needs.

Lower spring pre-load provides a softer ride and is usually preferred for light loads and smooth roads. Higher spring pre-load provides a firmer ride and is recommended for heavy loads, rough road conditions, and faster, more challenging riding.

# Suspension

## Rear Suspension Adjustment

The rear suspension can be adjusted for rider (and passenger) weight and riding conditions by changing the spring pre-load.


To adjust, use an appropriate pin spanner or see your Honda dealer.

Do not attempt to disassemble, service, or dispose of the damper; see your Honda dealer. The instructions found in this owner's manual are limited to adjustments of the shock assembly only.

## Rear Suspension Spring Pre-load

Refer to *Safety Precautions* on page 58 .

### LEFT SIDE

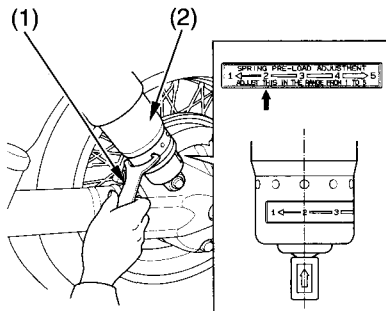

- (1) pin spanner
- (2) shock absorber



The spring pre-load adjuster has 5 positions for different load or riding conditions.

Use the pin spanner ( 1 ) to adjust the rear shock spring pre-load.

Position 1: for a light load and smooth road conditions.

Position 2: standard position.

Positions 3 to 5: for when the motorcycle is more heavily loaded. (Also increase spring pre-load for stiffer rear suspension.)

Make sure that both shock absorbers are adjusted to the same position.

Always adjust the shock absorber position in sequence (1-2-3-4-5 or 5-4-3-2-1).

Attempting to adjust directly from 1 to 5 or 5 to 1 may damage the shock absorber.

# Brakes

---

The hydraulic braking systems on your motorcycle dissipate the heat generated by the friction of the brake pads on the brake discs as the wheels are slowed.

As the brake pads wear, the brake fluid level will drop. A leak in the system will also cause the level to drop.

Frequently inspect the system to ensure there are no fluid leaks. Periodically inspect the brake fluid level and the brake pads for wear.

If the brake lever or brake pedal freeplay does not feel within the normal range while riding, check the brake pads for wear (page 117 ). Worn pads should be replaced. If the pads are not worn beyond the recommended limit, there is probably

air in the brake system. See your Honda dealer to have the air bled from the system.

## Brake Fluid Recommendation

brake fluid	Honda DOT 4 Brake Fluid
----------------	----------------------------

The recommended brake fluid is Honda DOT 4 Brake Fluid, or any brake fluid of equal quality and performance. Use fresh brake fluid from a sealed container. Be sure to read the label before opening the sealed container. An opened container may be contaminated or may have absorbed moisture from the air.

## Fluid Level Inspection

Refer to *Safety Precautions* on page 58 .

If your inspection indicates a low fluid level, have your Honda dealer add the recommended brake fluid.


Do not add or replace brake fluid, except in an emergency. If you do add fluid, have your Honda dealer check the system as soon as possible.

### NOTICE

*Brake fluid can damage plastic and painted surfaces. Handle with care.*

Wipe up spills immediately. Avoid contact with skin or eyes. In case of contact, wash thoroughly and call a doctor immediately if it contacts your eyes.


### RIGHT HANDLEBAR (Front Brake)

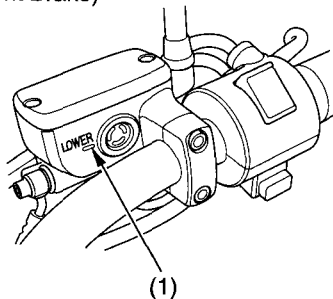

(1) LOWER level mark

# Brakes

## RIGHT SIDE (Rear Brake)

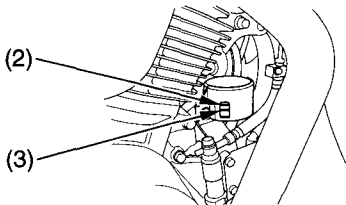

- (2) UPPER level mark  
(3) LOWER level mark

1. Place your motorcycle in an upright position on a firm, level surface.
2. Check the fluid level.  
Front : It should be above the LOWER level mark ( 1 ).  
Rear : It should be between the UPPER ( 2 ) and LOWER level ( 3 ) marks.

If the level is at or below the LOWER level mark, check the brake pads for wear (page 117).

Worn pads should be replaced. If the pads are not worn beyond the recommended limit, have your brake system inspected for leaks.

### Other Inspections

- Make sure there are no fluid leaks.
- Check for deterioration or cracks in the hoses and fittings.


## Brake Pad Wear

Refer to *Safety Precautions* on page 58 .

Brake pad wear depends upon the severity of usage, the type of riding, and road conditions. Generally, the pads will wear faster on wet and dirty roads. Inspect the pads at each regular maintenance interval (page 66 ).


Check the cutouts ( 1 ) in each pad. If either pad is worn to the cutout, replace both pads as a set. See your Honda dealer for this service.

RIGHT FRONT

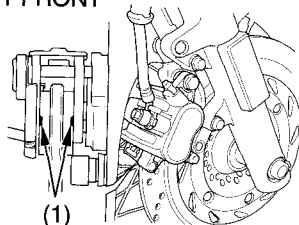

(1) cutouts

RIGHT REAR

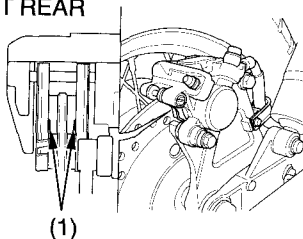

(1) cutouts

# Tires

---

To safely operate your motorcycle, your tires must be the proper type and size, in good condition with adequate tread, and correctly inflated for the load you are carrying.

## WARNING

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

The following pages give detailed information on how and when to check

your air pressure, how to inspect your tires for wear and damage, and our recommendations for tire repair and replacement.

## Air Pressure

Refer to *Safety Precautions* on page 58.

Properly inflated tires provide the best combination of handling, tread life, and riding comfort. Generally, underinflated tires wear unevenly, adversely affect handling, and are more likely to fail from being overheated. Overinflated tires make your motorcycle ride harshly, are more prone to damage from road hazards, and wear unevenly.

We recommend that you visually check your tires before every ride and use an air pressure gauge to measure the air pressure at least once a month or any time you think the tires might be low. Even tires that are in good condition may lose one to two psi per month if not checked and adjusted regularly.

## *VTX1300R*

**Cast Wheels:** Tubeless tires have some degree of self-sealing ability if they are punctured.

However, because leakage is often very slow, you should look closely for punctures whenever a tire is not fully inflated.

Always check air pressure when your tires are “cold” — after the motorcycle has been parked for at least three hours. If you check air pressure when your tires are “warm” — even if your motorcycle has only been ridden for a few miles — the readings will be higher. If you let air out of warm tires to match the recommended cold pressures, the tires will be underinflated.

# Tires

---

The recommended "cold" tire pressures are:

front	33 psi (225 kPa , 2.25 kgf/cm <sup>2</sup> )
rear	33 psi (225 kPa , 2.25 kgf/cm <sup>2</sup> ) with less than 200 lbs (90 kg) of added weight*
	36 psi (250 kPa , 2.50 kgf/cm <sup>2</sup> ) with more than 200 lbs (90 kg) of added weight*

\*includes the weight of the rider,  
passenger, all cargo & all accessories



## Inspection


Refer to *Safety Precautions* on page 58 .

Whenever you check the tire pressures, you should also look for:

- Bumps or bulges in the side of the tire or the tread. Replace any tire that has a bump or bulge.
- Cuts, slits, or cracks in the tires. Replace the tire if you can see fabric or cord.
- Nails or other foreign objects embedded in the side of the tire or tread.
- Excessive tread wear.

Also, if you hit a pothole or hard object while riding, pull to the side of the road as soon as you safely can and carefully inspect the tires for damage.

## Tread Wear

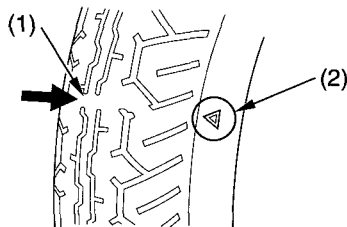

- (1) wear indicator  
(2) wear indicator location mark

# Tires

---

For the best performance, you should replace a tire before the tread depth at the center reaches the following limits:

front	0.06 in (1.5 mm)
rear	0.08 in (2.0 mm)

If the wear indicators are visible, replace the tire immediately as it is no longer safe.

## **Tire & Tube Repair (Spoke Wheels)**

Refer to *Safety Precautions* on page 58 . We strongly recommend that you replace, not repair, any tire that is punctured or damaged. A repaired tube will not have the same reliability as a new one, and it may fail while you are riding. And the tire will have lower speed and performance limits than a new one.

A temporary repair can sometimes be made in an emergency situation.

However, since a temporary repair may not hold, you must ride very slowly, preferably without any cargo or passenger, and have the tire and tube replaced as soon as possible.

(For more information on temporary repairs, see *If You Have a Flat Tire*, page 156 .)

If you decide to only replace the tube but not the tire, you should not exceed 50 mph (80 km/h) for the first 24 hours, or 80 mph (130 km/h) at any time thereafter. In addition, you may not be able to safely carry as much weight. Repair work should be done by a professional and the wheel should be balanced before you ride.

If you have a tire and tube professionally repaired at a non-Honda facility, we recommend that you have the work checked by your Honda dealer.

## **Tire Repair (Cast Wheels)**

Refer to *Safety Precautions* on page 58 .

We strongly recommend that you replace, not repair, any tire that is punctured or damaged. As discussed below, a tire that is repaired, either temporarily or permanently, will have lower speed and performance limits than a new or undamaged tire.

# Tires

---

A temporary repair can sometimes be made in an emergency situation. However, since a temporary repair may not hold, you must ride very slowly, preferably without any cargo or passenger, and have the tire replaced or permanently repaired as soon as possible. (For more information on temporary repairs, see *If You Have a Flat Tire*, page 156 .)

A permanent repair, such as an internal plug patch, can be made if a tire has only a small puncture in the tread area. With such a repair, you should not exceed 50 mph (80 km/h) for the first 24 hours, or 80 mph (130 km/h) at any time thereafter. In addition, you may not be able to safely carry as much weight. If you choose to have a tire repaired, be sure the repair work is performed by a professional and that the wheel is balanced before you ride.

If you have a tire professionally repaired at a non-Honda facility, we recommend that you have the work checked by your Honda dealer.

## Tire Replacement

Refer to *Safety Precautions* on page 58 .

The tires that came on your motorcycle were designed to match the performance capabilities of your motorcycle and provide the best combination of handling, braking, durability, and comfort.

You should replace the tires with tires of the same size, load range, and speed rating as the originals.

## WARNING

Installing improper tires on your motorcycle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in this owner's manual.

# Tires

---

The recommended tires for your motorcycle are:

## Spoke Wheels:

front	140/80 – 17M/C 69H DUNLOP D404F
rear	170/80 – 15M/C 77H DUNLOP K555J
type	bias-ply, tube

## Cast Wheels:

front	140/80 – 17M/C 69H DUNLOP D404F
rear	170/80 – 15M/C 77H DUNLOP K555J
type	bias-ply, tubeless

Whenever you replace a tire, remember:

- Have the wheel balanced after the tire is installed.
- Have the tire replaced by your Honda dealer if possible.
- Spoke Wheels: Have a new tube installed whenever a tire is replaced. The old tube will probably be stretched. If installed in a new tire, it could fail.

If you have a tire professionally replaced at a non-Honda facility, we recommend that you have the work checked by your Honda dealer.

## Important Safety Reminders:

### Spoke Wheels

- Do not install a radial tire on this motorcycle. Mixing bias-ply and radial tires can adversely affect handling and stability.
- Do not install car tires on this motorcycle. During installation the tire may separate from the rim with enough force to cause serious injury or death.

## Important Safety Reminders:


### Cast Wheels

- Do not install a tube inside a tubeless tire on this motorcycle. Excessive heat build-up can cause the tube to burst.
- Use only tubeless tires on this motorcycle. The rims are designed for tubeless tires, and during hard acceleration or braking, a tube-type tire could slip on the rim and cause the tire to rapidly deflate.
- Do not install a radial tire on this motorcycle. Mixing bias-ply and radial tires can adversely affect handling and stability.

# Side Stand

Refer to *Safety Precautions* on page 58 .

## LEFT SIDE

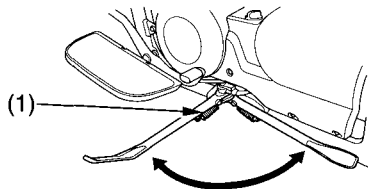

(1) side stand spring

- Check that the side stand assembly is working properly. If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with clean grease.

- Check the spring for damage or loss of tension.
- Check the side stand ignition cut-off system:
  1. Sit astride the motorcycle and put the transmission in neutral.
  2. Raise the side stand.
  3. Start the engine.
  4. Pull the clutch lever in.
  5. Shift the transmission into gear.
  6. Lower the side stand all the way.The engine should stop as you lower the side stand. If the engine doesn't stop, see your Honda dealer for service.



Your motorcycle has a maintenance-free type battery. You do not have to check the battery electrolyte level or add distilled water as you would with a conventional-type battery.

## NOTICE

*Your battery is a maintenance-free type and can be permanently damaged if the cap strip is removed.*

Electrical accessories use current from the battery — even when the ignition is OFF. Limited operation also allows the battery to discharge. If you have electrical accessories on your motorcycle — or do not ride frequently, we recommend that you charge the battery frequently (see *Battery Charging*, page 133 ).

If you do not expect to ride your motorcycle for at least two weeks, we recommend you remove the battery — or at least disconnect the battery cables (negative cable first).

If you plan to store your motorcycle, see *Battery Storage*, page 130 .

If your battery seems weak and/or is leaking electrolyte (causing slow starting or other electrical problems), see your Honda dealer.

**WARNING:** Battery posts, terminals and related accessories contain lead and lead compounds. **Wash hands after handling.**

# Battery

## Battery Storage

Refer to *Safety Precautions* on page 58 .

If you plan to store your motorcycle, we recommend you remove the battery and store it where it can be charged at least every 30 days to maintain its service life.

If you do not remove the battery, we recommend disconnecting the battery cables (negative cable first).

You will get the best storage results from removing the battery and slow (trickle) charging it every 30 days (see *Battery Charging*, page 133 ).

Before you remove the battery, be sure to read all the information that follows, as well as the information on the battery label.

### **WARNING**

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.


Wear protective clothing and a face shield, or have a skilled mechanic do the battery maintenance.

The battery is located in the battery box below the seat.

## Removal


1. Make sure the ignition switch is OFF.
2. Remove the seat (page 77 ).
3. Remove the ECM (1)
4. Remove the battery cover (3 ) by removing the screws (2 ).

## UNDER SEAT

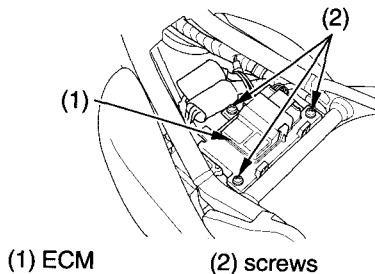

5. Disconnect the negative ( - ) terminal lead (4 ) from the battery first.
6. Disconnect the positive ( + ) terminal lead (5 ).
7. Pull the battery (6 ) out of the battery box.

## UNDER SEAT

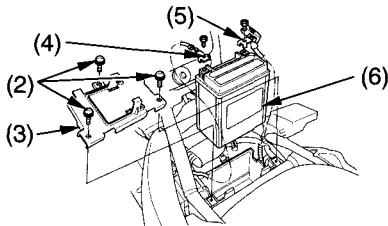

- (3) battery cover  
(4) negative ( - ) terminal lead  
(5) positive ( + ) terminal lead  
(6) battery

(cont'd)

## Battery

---


8. Charge the battery (see following section), unless you have been riding regularly.
9. Store your battery in an easy-to-reach location off the floor, in an area protected from freezing temperatures and direct sunlight.
10. Clean the battery box after removing the battery for storage. Dry the battery box and, if paint is missing, re-paint the area.
11. Slow charge the battery (see following section) once every 30 days.

### Installation

1. Reinstall in the reverse order of removal.  
Be sure to connect the positive (+) terminal first, then the negative (−) terminal.
2. Check all bolts and other fasteners are secure.

## Battery Charging

Refer to *Safety Precautions* on page 58.

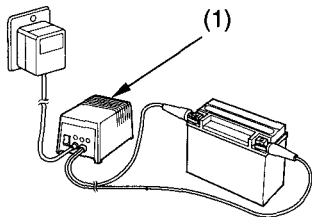

(1) “trickle” charger

Be sure to read the information that came with your battery charger and follow the instructions on the battery. Improper charging may damage the battery.

We recommend using a “trickle” charger (1) for home charging. These units can be left connected for long periods without risking damage to the battery. However, do not intentionally leave the charger connected longer than the time period recommended in the charger’s instructions.

Avoid using an automotive-type battery charger. An automotive charger can overheat a motorcycle battery and cause permanent damage.

# Appearance Care

---

Frequent cleaning and polishing will keep your Honda looking newer longer. Frequent cleaning also identifies you as an owner who values your motorcycle. A clean motorcycle is also easier to inspect and service.

## General Recommendations

Refer to *Safety Precautions* on page 58.

- To clean your motorcycle, you may use:
  - water
  - a mild, neutral detergent and water
  - a mild spray and wipe cleaner/polisher
  - a mild spray and rinse cleaner/degreaser and water

- Avoid products that contain harsh detergents or chemical solvents that could damage the metal, paint, and plastic on your motorcycle.
- If your motorcycle is still warm from recent operation, give the engine and exhaust system time to cool off.
- Park in a shady area. Washing your motorcycle in bright sunlight may cause the finish to fade because water droplets intensify the sun's brightness. Spotting is also more likely because surface water can dry before you have time to wipe it off.
- Clean your motorcycle regularly to protect surface finishes.

- We recommend the use of a garden hose to wash your motorcycle. High pressure washers (like those at coin-operated car washes) can damage certain parts of your motorcycle.

**NOTICE**

*High pressure water (or air) can damage certain parts of your motorcycle.*

- After cleaning, inspect for damage, wear, and leaks (fuel, oil, coolant, and brake fluid).

# Appearance Care

---

## Washing Your Motorcycle with a Mild Detergent

Refer to *Safety Precautions* on page 58 .

1. Rinse your motorcycle thoroughly with cool water to remove loose dirt.
2. Fill a bucket with cool water. Mix in a mild, neutral detergent, such as dish washing liquid or a product made especially for washing motorcycles or automobiles.
3. Wash your motorcycle with a sponge or a soft towel. As you wash, check for heavy grime. If necessary, use a mild cleaner/degreaser to remove the grime.
4. After washing, rinse your motorcycle thoroughly with plenty of clean water to remove any residue. Detergent residue can corrode alloy parts.
5. Dry your motorcycle with a chamois or a soft towel. Leaving water on the surface to air dry can cause dulling and water spots. As you dry, inspect for chips and scratches.
6. Start the engine and let it idle for several minutes. The engine heat will help dry moist areas.



7. As a precaution, ride your motorcycle at a slow speed and apply the brakes several times. This will help dry the brakes and restore normal braking performance.

If the inside of the headlight lens appears clouded immediately after washing, it should clear after a few minutes of riding.

### **Spray Cleaning Your Motorcycle**

Refer to *Safety Precautions* on page 58 .

Avoid using spray cleaner products on the tires or suspension components.

Suggestions for using spray cleaner(s) follow:

## Appearance Care

---

<b>Motorcycle Condition</b>	<b>Recommended Cleaning</b>
Dust and fingerprint smudges.	Apply a spray cleaner/polish and wipe the paint, chrome, glass, and clear plastic.
Light road grime.	Spray any difficult-to-reach or very dirty areas with a spray cleaner/degreaser. Rinse and dry. Apply a spray cleaner/polish and wipe with a non-abrasive cloth.
Heavy grime. Oil leaks. Brake dust.	Use a spray cleaner/degreaser. If necessary, rub with a sponge. Rinse and dry. Apply a spray cleaner/polish and wipe with a non-abrasive cloth.
Dull, corroded chrome or aluminum.	Apply a high quality chrome/aluminum polish and wipe with a non-abrasive cloth.

### Painted Aluminum Wheel Maintenance (Cast Wheels)

Refer to *Safety Precautions* on page 58 .

Aluminum may corrode from contact with dirt, mud, or road salt. Clean the wheels after riding through any of these substances. Use a wet sponge and mild detergent. Avoid stiff brushes, steel wool, or cleaners containing abrasives or chemical compounds.

After washing, rinse with plenty of water and dry with a clean cloth.

If the paint is chipped, apply touch-up paint.

# Appearance Care

---

## Finishing Touches

Refer to *Safety Precautions* on page 58 .

After washing your motorcycle, consider using a commercially-available spray cleaner/polish or quality liquid or paste wax to finish the job. Use only a non-abrasive polish or wax made specifically for motorcycles or automobiles. Apply the polish or wax according to the instructions on the container.

If a surface on your motorcycle is chipped or scratched, your Honda dealer has touch-up paint to match your motorcycle's color. Be sure to use your motorcycle's color code (page 184 ) when you buy touch-up paint.

If the frame has a chip that exposes the metal, first apply primer (to prevent corrosion) and then apply the touch-up paint. Several thin layers of touch-up paint are better than one thick coat.

Here's a few helpful tips on how to store and transport your Honda, and how to be an environmentally responsible motorcycle owner.

Storing Your Honda .....	142
Transporting Your Motorcycle .....	146
You & the Environment .....	147

# Storing Your Honda

---

If you won't be riding for an extended period, such as during the winter, thoroughly inspect your motorcycle and correct any problem before storing it. That way, needed repairs won't be forgotten and it will be easier to get your motorcycle running again.

For more information about storage, refer to the *Honda Motorcycle Winter Storage Guide*, available from your Honda dealer (USA only).

We suggest you perform the following procedures to keep your motorcycle in top condition. These storage procedures will reduce the deterioration that can occur during storage.

## Preparation for Storage

Refer to *Safety Precautions* on page 58 .

This procedure requires a means for draining and disposing of drained fuel (page 147).

1. Change the engine oil and filter (page 86 ).
2. Make sure the cooling system is filled with a 50/50% antifreeze solution (page 90 ).
3. Fill the fuel tank. Make sure the fuel fill cap is properly installed.
4. Check that the fuel valve is OFF.

5. Drain the carburetor into an approved gasoline container and dispose of it in an approved manner (page 147). If storage will last longer than one month, carburetor draining is important, to assure proper performance after storage.

## **WARNING**

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

6. To prevent rusting in the cylinders, perform the following:
- Remove the spark plug caps from the spark plugs. Using tape or string, secure the caps to any convenient plastic body part so that they are positioned away from the spark plugs.
  - Remove the spark plugs from the engine and store them in a safe place. Do not connect the spark plugs to the spark plug caps.
  - Pour a tablespoon (15—20 cc) of clean engine oil into each cylinder and cover the spark plug holes with a piece of cloth.

(cont'd)

## Storing Your Honda

---

- With the engine stop switch in the RUN position, press the start button several times to crank the engine and distribute the oil.
  - Reinstall the spark plugs and spark plug caps.
7. Remove the battery and charge it fully. Store it in an area protected from freezing temperatures and direct sunlight. Slow charge the battery (page 133 ) once a month.
  8. Wash and dry your motorcycle. Wax all painted surfaces. Apply rust-inhibiting oil to the chrome pieces.
  9. Inflate the tires to their recommended pressures (page 118 ).
  10. Store your motorcycle in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
  11. Place your motorcycle on blocks to lift both tires off the floor.
  12. Cover your motorcycle with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.



### Removal from Storage

Refer to *Safety Precautions* on page 58 .

1. Uncover and clean your motorcycle.
2. If your motorcycle has been stored for more than four months — change the engine oil (page 86 ).
3. If your motorcycle has been stored for more than two months — ask your Honda dealer to drain and replace the fuel.
4. Charge the battery (page 133 ) as required. Install the battery.
5. Perform a pre-ride inspection (page 31 ), then test-ride your motorcycle at low speeds.

# Transporting Your Motorcycle

---

If your motorcycle needs to be transported, it should be carried on a motorcycle trailer, or a truck or trailer with a flatbed area. For information about 24-hour emergency assistance, see page 211 (USA only). Do not tow your motorcycle, as towing can seriously damage the transmission.

When contacting a towing or transporting service, be sure to ask if they have a flatbed area, a loading ramp or power ramp to safely lift the motorcycle, and motorcycle tie-down straps.

Owning and riding a motorcycle can be enjoyable, but you must do your part to protect nature.

Following are tips on how you can be an environmentally-responsible motorcycle owner.

- **Choose Sensible Cleaners.** Use a biodegradable detergent when you wash your motorcycle. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer. Don't throw cleaning solvents away; see the following guidelines for proper disposal.

- **Recycle Wastes.** It's illegal and thoughtless to put used engine oil in the trash, down a drain, or on the ground. Used oil, gasoline, coolant, and cleaning solvents contain poisons that can hurt refuse workers and contaminate our drinking water, lakes, rivers, and oceans. Before changing your oil, make sure you have the proper containers. Put oil and other toxic wastes in separate sealed containers and take them to a recycling center. Call your local or state office of public works or environmental services to find a recycling center in your area, and to get instructions on how to dispose of non-recyclable wastes.



# Taking Care of the Unexpected

---

This section discusses the more common problems that can occur with your motorcycle while you're riding. It tells you how to evaluate each problem and what actions you can take to try to resume riding. If the problem cannot be safely solved, this section also gives instructions on the proper way to have your motorcycle transported.

For information about transporting your motorcycle, see page 146 .

General Guidelines .....	150
If Your Engine Quits or Won't Start .....	151
If You Have a Flat Tire .....	156
If Your Engine Overheats .....	170
If the Low Oil Pressure Indicator Lights .....	172
If a Fuse Blows.....	173
If You Crash .....	177
If You Lose Your Key .....	178
If Your Battery Is Low (or Dead) .....	179

# Taking Care of the Unexpected

---

## General Guidelines

Keeping your motorcycle well-maintained is the best way to reduce the possibility of having a problem on the road. However, since problems can arise even with well-maintained machines, you may consider subscribing to an emergency roadside service plan. (USA only: For information about the Honda Rider's Club of America, see page 211.)

Remember to take along your owner's manual, the tool kit that came with your motorcycle, and any other items (such as tire repair supplies and additional tools) that might help you solve a problem on your own.

Should you ever have a problem while riding, please follow these guidelines:

- Always put personal safety first.
- Take time to assess the situation and your options before deciding what to do.
- If the problem is relatively minor and you have the tools, supplies, and skills to make a temporary repair, be sure to have permanent repairs made as soon as possible.
- Do not continue riding if you are hurt or your motorcycle is not in safe riding condition.

Additional recommendations for specific problems follow.

## If Your Engine Quits or Won't Start

---

Proper operation and maintenance can prevent starting and engine performance problems. In many cases, the cause of the problem may be a simple operational oversight.

If you have a problem starting the engine—or experience poor engine performance—the following information may help you. If you can't correct the problem, see your Honda dealer.

If your motorcycle won't start, listen as you press the start button. If you don't hear the starter motor turning, refer to the *Starter motor doesn't operate* symptom. If you can hear the starter motor working normally, refer to the *Starter motor works, but the engine won't start* symptom.

## If Your Engine Quits or Won't Start

SYMPTOM: Starter motor doesn't operate.	
POSSIBLE CAUSE	WHAT TO DO
ignition switch OFF	Turn the ignition switch ON.
engine stop switch OFF	Turn the engine stop switch to RUN.
transmission not in neutral	Shift into neutral.
side stand down (when transmission not in neutral)	Put the transmission in neutral or raise the side stand and pull the clutch lever in.
blown fuse	Replace with a new fuse of the same rating (page 173).
battery lead loose	Tighten the battery lead.
low (or dead) battery	Charge the battery (page 133 ). If charging doesn't help, see your Honda dealer.
faulty starter motor	If all possible causes are negative, the starter motor may be faulty. See your Honda dealer.



## If Your Engine Quits or Won't Start

SYMPTOM: <b>Starter motor works, but the engine won't start.</b>	
POSSIBLE CAUSE	WHAT TO DO
out of fuel	Fill the fuel tank.
flooded engine	See <i>Flooded Engine</i> (page 42 ).
loose or unconnected spark plug caps	Install the spark plug caps securely. If the engine still won't start, see your Honda dealer.
loose battery cables	Tighten the battery terminal bolts.
weak battery	Charge the battery (page 133 ). If charging doesn't help, see your Honda dealer.

## If Your Engine Quits or Won't Start

SYMPTOM: <b>Engine starts, but stalls as you shift into gear.</b>	
POSSIBLE CAUSE	WHAT TO DO
side stand down	Raise the side stand. Start again.

SYMPTOM: <b>Engine starts, but runs poorly.</b>	
POSSIBLE CAUSE	WHAT TO DO
idles roughly, too fast, stalls	Check engine idle adjustment (page 105 ). If the problem persists, see your Honda dealer.
overheating	Check the high coolant temperature indicator. Refer to <i>If Your Engine Overheats</i> , page 170 .
low oil pressure	Check the low oil pressure indicator. Refer to <i>If the Low Oil Pressure Indicator Lights</i> , page 172 .
runs erratically, misfires	May damage catalytic converters. See your Honda dealer.
blubbers (rich fuel mixture)	See your Honda dealer.

## If Your Engine Quits or Won't Start

SYMPTOM: Engine starts, but runs poorly. (cont'd)	
POSSIBLE CAUSE	WHAT TO DO
sooty exhaust (rich fuel mixture)	See your Honda dealer.
detonates or pings under load	If applicable, switch to the recommended octane gasoline (page 78 ) or change your brand of gasoline. If the problem persists, see your Honda dealer.
afterfires (backfires)	May damage catalytic converters. See your Honda dealer.
pre-ignition (runs on after ignition switched OFF)	May damage catalytic converters. See your Honda dealer.

# If You Have a Flat Tire

---

## Spoke Wheels

A flat tire is always unwelcome, especially if you are far from help. If you think you are losing air, or you hit a pothole or hard object, pull safely to the side of the road so you can inspect the tires and assess the situation. (Be sure to park on a firm, level surface and use the side stand for support.) You should examine the tire treads and sidewalls for foreign objects or damage.

If a tire has major damage or the bead has come loose from the rim, there is probably not much you can do except have your motorcycle transported to a Honda dealer or other qualified service facility. (USA only: For information about 24-hour

emergency roadside assistance, see page 211.) Even with a simple puncture, this may be the safest and least troublesome solution. For transporting instructions, see page 146.

Honda does not recommend that you make a temporary repair to a tube-type tire. However, if you decide to make a temporary repair so you can get to a service facility, ride cautiously at reduced speed and have the tube and tire replaced before you ride again.

### **WARNING**

Riding your motorcycle with a temporary tire or tube repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

If you must ride with a temporary tire repair, ride slowly and carefully and do not exceed 30 mph (50 km/h) until the tire and tube are replaced.

Due to the uncertainty of any temporary repair, you should ride slowly (not over 30 mph, 50 km/h) and carefully (preferably without a passenger or cargo) until the tire and tube are replaced. Stop frequently and

check the air pressure. If the tire is losing pressure, it may be unsafe to continue riding. As the tire gets low, it will affect the handling of your motorcycle (especially with a passenger and cargo) and it may overheat and blow out.

### **Spoke Wheels: Should You Repair or Replace a Tire or Tube?**

We strongly recommend that you replace, not repair, any tire or tube that is punctured or damaged, even if the tire has only a minor puncture. For a full discussion of repairs and replacement, see the text beginning on page 122.

# If You Have a Flat Tire

---

## Cast Wheels

A flat tire is always unwelcome, especially if you are far from help. If you think you are losing air, or you hit a pothole or hard object, pull safely to the side of the road so you can inspect the tires and assess the situation. (Be sure to park on a firm, level surface and use the side stand for support.) You should examine the tire treads and sidewalls for foreign objects or damage. If you find a tire that has been punctured or damaged, you have two options.

### Option 1:

#### Have Your Motorcycle Transported

If a tire has a major puncture or a cut in the tread or sidewall, or the bead has come

loose from the rim, there is probably not much you can do except have your motorcycle transported to a Honda dealer or other qualified service facility. (USA only: For information about 24-hour emergency roadside assistance, see page 211 .) Even with a simple puncture, this may be the safest and least troublesome solution. For transporting instructions, see page 146 .

### Option 2:

#### Make a Temporary Roadside Repair

If a tire has only a minor nail puncture and is not completely flat, you may be able to make an emergency repair that could allow you to continue riding to where you can get the tire replaced or permanently repaired.

## If You Have a Flat Tire

### **WARNING**

Riding your motorcycle with a temporary tire repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

If you must ride with a temporary tire repair, ride slowly and carefully and do not exceed 30 mph (50 km/h) until the tire is permanently repaired or replaced.

Due to the uncertainty of any temporary repair, you should ride slowly (not over 30 mph, 50 km/h) and carefully (preferably without a passenger or cargo) until the tire is replaced or permanently

repaired. Stop frequently and check the air pressure. If the tire is losing pressure, it may be unsafe to continue riding. As the tire gets low, it will affect the handling of your motorcycle (especially with a passenger and cargo) and it may overheat and blow out.

# If You Have a Flat Tire

---

## Cast Wheels: Types of Temporary Repairs

The following types of temporary repairs generally require a source of air to inflate the tire. Possible sources include CO<sub>2</sub> cartridges or cans of compressed air designed to inflate a tire.

- **Inflate the tire:** Tubeless tires have some self-sealing ability if they are punctured and the result is usually just a slow leak. If this is the case, you can try inflating the tire to see if it will hold air pressure. If you can see a nail or other object embedded in the tire tread, do not remove it at this time.
- **Plug the hole:** The idea here is to do something to temporarily stop the leak. If you have a tubeless tire repair kit, you can pull out the nail and try inserting an external plug in the puncture. Follow the instructions that came with the repair kit and be sure to inflate the tire to the correct pressure.



### **Cast Wheels: Should You Repair or Replace a Tire?**

We strongly recommend that you replace, not permanently repair, any tire that is punctured or damaged, even if the tire has only a minor puncture. For a full discussion of repairs and replacement, see page 123 .

# If You Have a Flat Tire

## Emergency Front Wheel Removal/Installation


Refer to *Safety Precautions* on page 58 .

We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

### Removal

1. Park your motorcycle on a firm, level surface.
2. Carefully raise the center of the motorcycle with a chain hoist.

### RIGHT SIDE

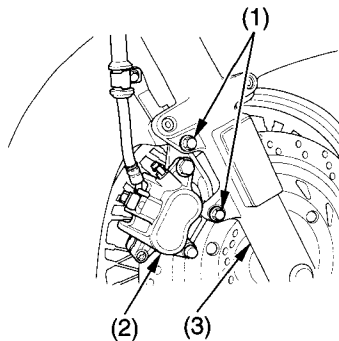


- (1) fixing bolts
- (2) brake caliper assembly
- (3) fork leg

## If You Have a Flat Tire

3. Remove the fixing bolts ( 1 ) and remove the right brake caliper assembly ( 2 ) from the fork leg ( 3 ).
  - To avoid damage to the brake hose during removal, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.

4. Remove the front axle bolt ( 4 ), and then loosen the right and left axle pinch bolts ( 5 ).

### RIGHT FRONT

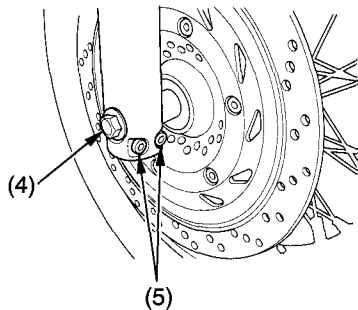


- (4) front axle bolt  
(5) axle pinch bolts

(cont'd)

# If You Have a Flat Tire

5. Remove the front axle shaft (6), wheel and side collars.
- Avoid depressing the brake lever when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.


## LEFT FRONT

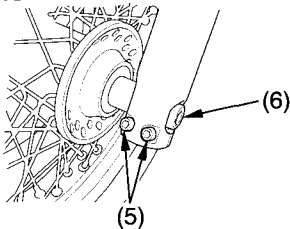

(5) axle pinch bolts    (6) front axle shaft

## Installation

1. Install the side collars and position the wheel between the fork legs. Insert the front axle shaft from the left side, through the left fork leg and wheel hub.
2. Align the index line (7) of the front axle shaft with the recessed surface (8) of the fork leg.

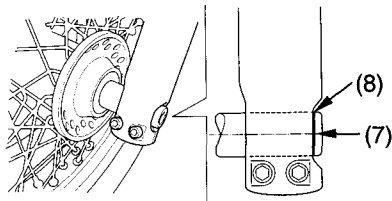

(7) index line

(8) surface

## If You Have a Flat Tire


---

3. Tighten the axle pinch bolts on the left fork leg to the specified torque:  
**16 lbf·ft (22 N·m , 2.2 kgf·m)**
4. Tighten the front axle bolt to the specified torque:  
**44 lbf·ft (59 N·m , 6.0 kgf·m)**
5. Install the right brake caliper onto the fork leg.  
To avoid damaging the brake pads, carefully fit the brake disc (9) between the pads.
6. Install the caliper fixing bolts and tighten to the specified torque:  
**23 lbf·ft (31 N·m , 3.2 kgf·m)**
7. Operate the front brake and pump the fork several times. Check for free wheel rotation after the brake is released. Recheck the wheel if the brake drags or the wheel does not rotate freely.

8. If the clearances between each surface of the brake disc and the brake bracket (10) (not the brake pads) are symmetrical, follow next step.  
If the clearances are not symmetrical, loosen the left axle pinch bolts and pull the left fork outward or push inward to adjust the clearance. Then follow the next step.

## If You Have a Flat Tire

9. Tighten the axle pinch bolts on the right fork leg to the specified torque:  
16 lbf·ft (22 N·m , 2.2 kgf·m)
- Visually check that the clearances between each surface of the brake disc and the brake bracket (not the brake pads) are symmetrical.

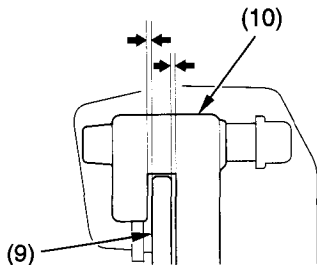

(9) brake disc      (10) brake bracket

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.

## Emergency Rear Wheel Removal/Installation

Refer to *Safety Precautions* on page 58.


We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

### Removal

1. Park your motorcycle on a firm, level surface.
2. Carefully raise the center of the motorcycle with a chain hoist.

3. While holding the other end of the rear axle shaft (1) with a wrench, remove the rear axle nut (3).

### LEFT REAR

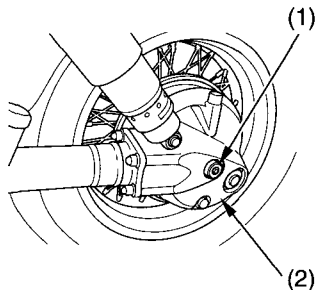


- (1) rear axle shaft  
(2) final drive gear case

(cont'd)

# If You Have a Flat Tire

---

## RIGHT REAR

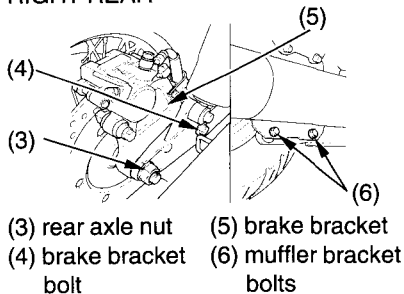

4. Remove the muffler bracket bolts (6).
5. Remove the rear brake bracket bolt (4).
6. Pull the rear axle shaft out.
7. Remove the rear brake bracket (5).
8. Move the wheel to the right to separate it from the final drive gear case (2), avoiding the muffler to right side.

9. Remove the wheel and side collar, keeping the muffler on right side.

- To avoid damage to the brake hose during removal, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.
- Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.
- Avoid depressing the brake pedal when the wheel is off the motorcycle. This will force the caliper piston out of the cylinder. The result will be a loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.



## If You Have a Flat Tire

### Installation

Before installing the wheel, check that the wheel hub and final drive gear splines are coated with molybdenum disulfide paste (USA only: Pro Honda Moly 60 Paste, or equivalent).

1. Install the side collar and position the wheel between the swingarm and the final drive gear case. Be sure the splines on the wheel hub fit into the final drive gear case.
2. Install the rear brake bracket and rear brake bracket bolt.
  - To avoid damaging the brake pads while setting the brake caliper assembly over the brake disc, carefully fit the brake disc between the pads.
3. Insert the rear axle shaft from the left side, through the final drive gear case,

wheel hub and rear brake bracket.

4. Tighten the rear brake bracket bolt to the specified torque:  
**51 lbf·ft (69 N·m , 7.0 kgf·m)**
5. Tighten the rear axle nut to the specified torque:  
**81 lbf·ft (110 N·m , 11.2 kgf·m)**
6. Install the muffler bracket bolts and tighten to the specified torque:  
**25 lbf·ft (34 N·m , 3.5 kgf·m)**
7. After installing the wheel, apply the brake several times. Check for free wheel rotation after the brake is released. Recheck the wheel if the brake drags or the wheel does not rotate freely. If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.

# If Your Engine Overheats

---

Normally, the temperature of the coolant in the cooling system will rise to a level about midway between cold and boiling. Hot weather may cause the temperature to rise higher than normal. So will temporary stress such as climbing a hill. If you're stuck in stop-and-go traffic, the temperature may climb some, but the radiator fan is designed to prevent overheating. Be aware of these variations.

If the high coolant temperature indicator (page 15 ) comes on for no apparent reason, pull safely to the side of the road. If possible, park in a shady area.

## NOTICE

*Continuing to ride with an overheated engine can cause serious engine damage.*

- A steaming engine indicates a coolant leak. Shut the engine off and wait until the steaming stops. Look for a leak, but don't touch the engine or radiator system. Let everything cool off first.
- If there's no obvious problem, leave the engine on so the fan and coolant circulating system can continue working. Monitor the high coolant temperature indicator. The indicator may turn off after a brief stop with no load on the engine.

## If Your Engine Overheats

- Check the radiator fan.

If the fan is not working, turn the engine off. Open the fuse box (page 173 ) and check the radiator fan fuse. If the fuse is blown, replace it with the proper (same rating) spare fuse. Start the engine. If the high coolant temperature indicator comes on and stays on, turn the engine off.

If the radiator fan is working, visually check the coolant level in the reserve tank, located just behind the crankcase. It isn't necessary to touch the radiator system.

- If the reserve tank is low or empty, don't ride without adding coolant (page 92 ). After adding coolant, turn the engine on and check the high coolant temperature indicator.

If the indicator doesn't turn off, do not

ride. The engine needs repair. Transport your motorcycle to a Honda dealer (page 146 ).

If the temperature drops to normal, check the coolant level. If it has gone down, add more coolant.

If you are able to resume riding, continue to monitor the high coolant temperature indicator frequently.

If there's a mild leak, you can ride for awhile, carefully watching the high coolant temperature indicator. Be prepared to stop and add more coolant or water. If the leak is bad, transport your motorcycle to a Honda dealer (page 146 ).

# If the Low Oil Pressure Indicator Lights

---

If you check your engine oil level regularly, you should never see the low oil pressure indicator while riding. Normally, it will only light momentarily when you turn the ignition switch ON. Occasionally, it may flicker at or near idling speed.

Low oil pressure may be caused by an oil leak, a low oil level, or some problem in the engine's lubrication system.

If the indicator comes on while you're riding, don't ignore it. Pull safely to the side of the road. If possible, pull the clutch lever in and coast to a stop. Stop the engine as soon as it's safe to do so.

## NOTICE

*Continuing to ride with low oil pressure can cause serious engine damage.*

- Check for an oil leak.
- Then check the oil level. If necessary, add the recommended oil (page 82 ) to the upper level mark. If you must leave your motorcycle to get oil, secure it as much as possible.
- After adding oil, start the engine, and check that the low oil pressure indicator goes off. Check for a possible leak.

If the indicator goes off and there is no leak — resume riding. If there is a leak — do not ride the motorcycle until the leak is repaired by a Honda dealer.

All of the electrical circuits on your motorcycle have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your motorcycle stops working, the first thing you should check for is a blown fuse.

Determine from the chart on the circuit fuse box cover which fuse or fuses control that component. Check those fuses first, but check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

- The main fuse and spare are located on the starter magnetic switch behind the right side cover.
- The circuit fuse box (including spare fuses) is located behind the right side cover.

### Recommended Fuses


main fuse	30A
other fuses	20A, 10A

1. To prevent an accidental short circuit, turn the ignition switch OFF before checking or replacing the fuses.

(cont'd)

# If a Fuse Blows

## RIGHT SIDE

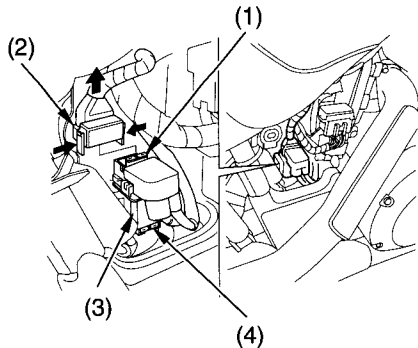


- (1) main fuse
- (2) wire connector
- (3) starter magnetic switch
- (4) spare main fuse

## Main Fuse Access:

2. To access the main fuse (1), remove the right side cover (page 73 ).
3. Disconnect the wire connector (2) of the starter magnetic switch (3).
4. Pull the main fuse out. If it is blown (5), install the spare main fuse (4).
5. Reconnect the wire connector.

## MAIN FUSE

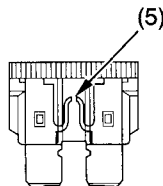


- (5) blown fuse

## Circuit Fuse Access:

6. Open the fuse box cover ( 6 ).


### RIGHT SIDE

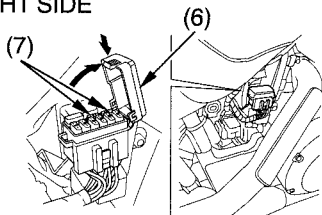

(6) fuse box cover      (7) spare fuses

7. To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a burned wire inside the fuse. If the fuse is blown ( 8 ), replace it with a spare fuse ( 7 ) of the same rating.

## CIRCUIT FUSE

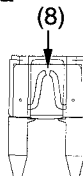

(8) blown fuse

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### NOTICE

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

8. Close the fuse box cover.  
9. Install the right side cover.

## If a Fuse Blows

---

If you do not have a spare fuse and you cannot ride the motorcycle without fixing the problem, take a fuse of the same rating or a lower rating from one of the other circuits that you can do without temporarily.

If you replace a blown fuse with a spare fuse that has a lower rating, replace the fuse with the correct rating as soon as you can. Also remember to replace any spare fuses that were installed.

If the replacement fuse of the same rating burns out in a short time, there is probably a serious electrical problem on your motorcycle. Leave the blown fuse in that circuit and have your motorcycle checked by your Honda dealer.



Personal safety is your first priority after any accident. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the accident.

If you decide you are capable of riding safely, carefully inspect your motorcycle for damage and determine if it is safe to ride. Check the tightness of critical nuts and bolts securing such parts as the handlebar, control levers, brakes, and wheels.

If there is minor damage, or you are unsure about possible damage, ride slowly and cautiously. Sometimes, crash damage is hidden or not immediately apparent, so you should have your motorcycle thoroughly checked at a qualified service facility as soon as possible. Also, be sure to have your Honda dealer check the frame and suspension after any serious crash.

If your motorcycle cannot be ridden, see *Transporting Your Motorcycle*, page 146.

## If You Lose Your Key

---

Be sure to record your key number in the Quick Reference section at the rear of the manual. You'll need this number to have a duplicate key made.

A lost key won't be a problem if you take preventative action. Store one duplicate key in a safe place at home and carry a second duplicate in your wallet.

If you lose your key and aren't carrying a duplicate, either get your spare or have one made. If you don't know your key number, call the dealer you purchased your Honda from. They may have it listed in their records. If they don't, transport your motorcycle to them or the nearest Honda dealer. The dealer will probably have to remove the ignition switch assembly to find the key number so they can make a key for you.

## **If Your Battery Is Low (or Dead)**

---

Jump starting is not recommended, especially if you use an automobile battery. The greater amperage of an automobile battery when the car engine is running can damage your motorcycle's electrical system.

Bump starting is also not recommended.

If you can't charge the battery or it appears unable to hold a charge, contact your Honda dealer.



## Technical Information

---

This section contains dimensions, capacities, and other technical data, plus information on government requirements and how to break-in your motorcycle.

Vehicle Identification.....	182
Specifications .....	185
Break-in Guidelines.....	192
High Altitude Carburetor Adjustment.....	193
Emission Control Systems .....	194
Catalytic Converters .....	199
Oxygenated Fuels .....	200


# Vehicle Identification

## Serial Numbers

The VIN and engine serial numbers are required when you register your motorcycle. They may also be required when ordering replacement parts. You may record these numbers in the Quick Reference section at the rear of this manual.

The VIN (vehicle identification number) is stamped on the right side of steering head and also appears on the Safety Certification Label attached to the left side of the down tube.


LEFT SIDE

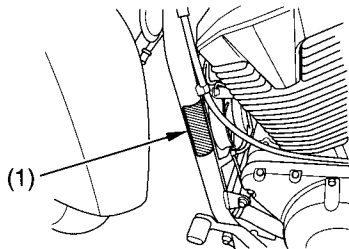

(1) VIN

# Vehicle Identification


## RIGHT SIDE

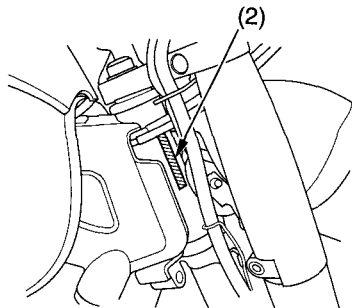

(2) VIN

The engine number (3) is stamped on the top of the crankcase.

## LEFT SIDE

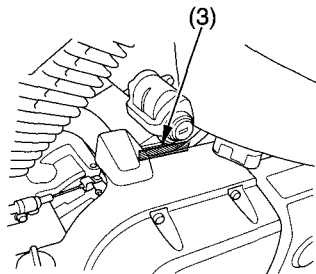

(3) engine number

# Vehicle Identification


---

## Color Label & Code

The color label (1) is attached to the frame behind the left side cover. Remove the left side cover (page 72 ) to check the label.

The color code is helpful when ordering replacement parts. You may record the color and code in the Quick Reference section at the rear of this manual.

LEFT SIDE

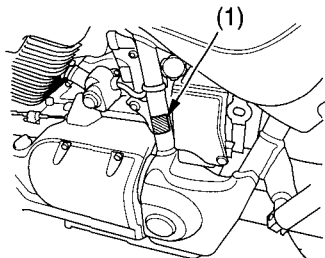

(1) color label



<b>Dimensions</b>	
overall length	101.4 in (2,575 mm)
overall width	37.8 in (960 mm)
overall height	44.3 in (1,125 mm)
wheelbase	65.7 in (1,670 mm)
ground clearance	5.1 in (130 mm)

## Specifications

Fuel & Lubricants	
fuel recommendation	unleaded gasoline, pump octane number of 86 or higher
fuel tank capacity	4.76 US gal (18.0 ℓ) including reserve
engine oil capacity	after disassembly: 4.5 US qt (4.3 ℓ) after draining: 3.7 US qt (3.5 ℓ) after draining & oil filter change: 3.9 US qt (3.7 ℓ)
engine oil recommendation	API Service Classification SG or higher except oils labeled as energy conserving on the circular API service label, SAE 10W-30, JASO T 903 standard MA, Pro Honda GN4 4-stroke oil (USA & Canada) or Honda 4-stroke oil (Canada only), or an equivalent motorcycle oil
final drive oil capacity	after draining: 4.1 US oz (120 cm <sup>3</sup> )
cooling system, recommendation	Pro Honda HP Coolant or an equivalent high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines
cooling system, capacity	2.9 US qt (2.7 ℓ)

Capacities	
passenger capacity	Operator and one passenger
maximum weight capacity	USA: 404 lbs (183 kg) Canada: 413 lbs (187 kg) rider, passenger, all cargo and accessories

Engine Specifications	
displacement	80.0 cu-in (1,312 cm <sup>3</sup> )
bore & stroke	3.52 × 4.11 in (89.5 × 104.3 mm)
compression ratio	9.2 : 1
spark plug (standard)	DCPR6E (NGK) or XU20EPR-U (DENSO)
spark plug (high speed riding)	DCPR7E (NGK) or XU22EPR-U (DENSO)
spark plug gap	0.031 – 0.035 in (0.80 – 0.90 mm)
valve clearance (cold)	intake 0.006 in (0.15 mm) exhaust 0.012 in (0.30 mm)
idle speed	900 ± 100 rpm

# Specifications

---

Power Transmission	
primary reduction	1.935
secondary reduction	0.944
final reduction	2.818
gear ratio, 1st	1.900
2nd	1.148
3rd	0.912
4th	0.778
5th	0.697
final drive	shaft

<b>Chassis &amp; Suspension</b>	
caster	32°00'
trail	5.7 in (144 mm)
tire size, front	140/80 – 17M/C 69H DUNLOP D404F
tire size, rear	170/80 – 15M/C 77H DUNLOP K555J
tire type	bias-ply, tube...VTX1300S bias-ply, tubeless ...VTX1300R
tire pressure, front (cold)	33 psi (225 kPa , 2.25 kgf/cm <sup>2</sup> )
tire pressure, rear (cold)	33 psi (225 kPa , 2.25 kgf/cm <sup>2</sup> ) – with less than 200 lbs (90 kg) of added weight 36 psi (250 kPa , 2.50 kgf/cm <sup>2</sup> ) – with more than 200 lbs (90 kg) of added weight

<b>Electrical</b>	
battery	12V – 12Ah
generator	0.364 kW/5,000 rpm

# Specifications

---

<b>Lights</b>	
headlight	12V – 60/55W
brake/tail light	12V – 21/5W
license light	12V – 5W
turn signal lights	12V – 21/5W (front) 12V – 21W (rear)

<b>Fuses</b>	
main fuse	30A
other fuses	20A, 10A

Torque Specifications	
engine oil drain bolt	22 lbf·ft (30 N·m , 3.1 kgf·m)
engine oil filter	19 lbf·ft (26 N·m , 2.7 kgf·m)
front wheel axle bolt	44 lbf·ft (59 N·m , 6.0 kgf·m)
front wheel caliper fixing bolts	23 lbf·ft (31 N·m , 3.2 kgf·m)
front wheel axle pinch bolts	16 lbf·ft (22 N·m , 2.2 kgf·m)
rear wheel axle nut	81 lbf·ft (110 N·m , 11.2 kgf·m)
rear brake bracket bolt	51 lbf·ft (69 N·m , 7.0 kgf·m)
muffler bracket bolts	25 lbf·ft (34 N·m , 3.5 kgf·m)
final drive oil drain bolt	15 lbf·ft (20 N·m , 2.0 kgf·m)
air cleaner housing cover bolts	2.6 lbf·ft (3.5 N·m , 0.4 kgf·m)

## Break-in Guidelines

---

Help assure your motorcycle's future reliability and performance by paying extra attention to how you ride during the first 300 miles (500 km).

During this period, avoid full-throttle starts and rapid acceleration.



## High Altitude Carburetor Adjustment

---

Your engine's air-fuel mixture becomes overly rich when operated at high altitudes. Above 6,500 feet (2,000 m), a rich mixture can cause driveability problems, reduce engine performance, and increase fuel consumption. To compensate, you can have the carburetor adjusted for high altitude riding. See your Honda dealer.

However, the carburetor must be returned to standard factory specifications before riding again at lower altitudes (below 5,000 feet, 1,500 m). See your Honda dealer.

Sustained riding at lower altitudes with the lean high-altitude setting may cause rough idling, stalling, or engine damage from overheating.

# Emission Control Systems

---

## Exhaust Emission Requirements

The U.S. Environmental Protection Agency (EPA), the California Air Resources Board (CARB), and Environment Canada require that your motorcycle comply with applicable exhaust emissions standards during its useful life, when operated and maintained according to the instructions provided.


## Noise Emission Requirements

The EPA also requires that motorcycles built after January 1, 1983 comply with applicable noise emission standards for one year or 3,730 miles (6,000 km) after the time of sale to the ultimate purchaser, when operated and maintained according to the instructions provided. (USA only)

## Warranty Compliance

Compliance with the terms of the Distributor's Warranties for Honda Motorcycle Emission Control Systems is necessary in order to keep the emissions system warranty in effect. (USA only)

### UNDER SEAT

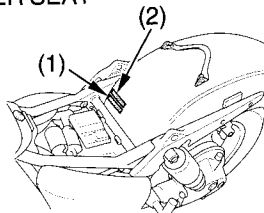

- (1) vehicle emission control information label
- (2) vehicle emission control information label (Canada only)

The Vehicle Emission Control Information label (1) (2) is attached on the rear fender under the seat.

## Source of Exhaust Emissions

The combustion process produces carbon monoxide (CO), oxides of nitrogen (NOx) and hydrocarbons (HC). Control of hydrocarbons and oxides of nitrogen is very important because, under certain conditions, they react to form photochemical smog when subjected to sunlight. Carbon monoxide does not react in the same way, but it is toxic.

Honda Motor Co., Ltd. utilizes various systems to reduce carbon monoxide, oxides of nitrogen and hydrocarbons.

# Emission Control Systems

---

## **Exhaust Emission Control System**

The exhaust emission control system includes a secondary air supply system, and two oxidation catalytic converters.

No adjustment to these systems should be made although periodic inspection of the components is recommended.

## ***Secondary Air Injection System***

The secondary air injection system introduces filtered air into the exhaust gases in the exhaust port. The secondary air injection system helps improve emission performance.

## ***Oxidation Catalytic Converters***

The oxidation catalytic converters are in the exhaust system. Through chemical reactions, they convert HC and CO in the engine's exhaust to carbon dioxide (CO<sub>2</sub>) and water vapor.

## **Crankcase Emission Control System**

The engine is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere. Blow-by gas is returned to the combustion chamber through the air cleaner and the carburetor.

## **Evaporative Emission Control System (California only)**

This motorcycle complies with the requirements of the California Air Resources Board (CARB) evaporative emission regulations. Fuel vapor from the fuel tank and carburetor is directed into the charcoal canister and air cleaner where it is absorbed and stored while the engine is stopped. When the engine is running and the purge control diaphragm valve is open, fuel vapor in the charcoal canister and air cleaner is drawn into the engine through the carburetor.

## **Problems That May Affect Motorcycle Exhaust Emissions**

If you are aware of any of the following symptoms, have the vehicle inspected and repaired by your authorized Honda motorcycle dealer.

### **Symptoms:**

1. Hard starting or stalling after starting
2. Rough idle
3. Misfiring or backfiring during acceleration
4. After-burning (backfiring)
5. Poor performance (driveability) and poor fuel economy

# Emission Control Systems

---

## Noise Emission Control System TAMPERING WITH THE NOISE CONTROL SYSTEM IS PROHIBITED:

U. S. federal law prohibits, or Canadian provincial laws may prohibit the following acts or the causing thereof: ( 1 ) The removal or rendering inoperative by any person, other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; or ( 2 ) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

## AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE FOLLOWING ACTS:

1. Removal of, or puncturing the muffler, baffles, header pipes or any other component which conducts exhaust gases.
2. Removal of, or puncturing of any part of the intake system.
3. Lack of proper maintenance.
4. Replacing any moving parts of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

This motorcycle is equipped with oxidation catalytic converters. Each catalytic converter contains precious metals that serve as catalysts, promoting chemical reactions to convert the exhaust gasses without affecting the metals.

Catalytic converters act on HC and CO. Replacement parts must be original Honda parts or equivalents.

The catalytic converters must operate at high temperature for the chemical reactions to take place. They can set fire to any combustible materials that come near them. Park your motorcycle away from high grasses, dry leaves, or other flammables.

Defective catalytic converters contribute to air pollution, and can impair your engine's performance. Follow these guidelines to protect your motorcycle's catalytic converters.

- Always use unleaded gasoline. Even a small amount of leaded gasoline can contaminate the catalyst metals, making the catalytic converters ineffective.
- Keep the engine tuned-up.
- An engine that is misfiring may overheat the catalytic converters, causing damage to the converters or motorcycle. Have your motorcycle diagnosed and repaired if it is misfiring, backfiring, stalling or otherwise not running properly.

# Oxygenated Fuels

---

Some conventional gasolines are being blended with alcohol or an ether compound. These gasolines are collectively referred to as oxygenated fuels. To meet clean air standards, some areas of the United States and Canada use oxygenated fuels to help reduce emissions. If you use an oxygenated fuel, be sure it is unleaded and meets the minimum octane rating requirement.

Before using an oxygenated fuel, try to confirm the fuel's contents. Some states/provinces require this information to be posted on the pump.

The following are the EPA-approved percentages of oxygenates:

ETHANOL (ethyl or grain alcohol) 10%  
by Volume

You may use gasoline containing up to 10% ethanol by volume. Gasoline containing ethanol may be marketed under the name "Gasohol".

MTBE (Methyl Tertiary Butyl Ether) 15%  
by Volume

You may use gasoline containing up to 15% MTBE by volume.



### METHANOL (methyl or wood alcohol) 5% by Volume

You may use gasoline containing methanol containing up to 5% methanol by volume as long as it also contains cosolvents and corrosion inhibitors to protect the fuel system. Gasoline containing more than 5% methanol by volume may cause starting and/or performance problems. It may also damage metal, rubber, and plastic parts of your fuel system.

If you notice any undesirable operating symptoms, try another service station or switch to another brand of gasoline.

Fuel system damage or performance problems resulting from the use of an oxygenated fuel containing more than the percentages of oxygenates mentioned above are not covered under warranty.

Oxygenated fuels can damage paint and plastic. Be careful not to spill fuel when filling the fuel tank. Wipe up any spills immediately.

#### NOTICE

*Oxygenated fuels can damage paint and plastic. Damage caused by spilled fuel is not covered by warranty.*



## Consumer Information

---

This section contains information on your warranty and how to get an official Honda service manual.

Authorized Manuals .....	204
Warranty Coverage .....	207
Warranty Service .....	208
Contacting Honda.....	209
Your Honda Dealer .....	210
The Honda Rider's Club (USA only) .....	211
Reporting Safety Defects (USA only) .....	213

## Authorized Manuals

---

The Service Manual used by your authorized Honda dealer is available from Helm, Inc. (USA only, Canada: See your Honda dealer to order authorized manuals.)

Also available but not necessary to service your model is the Honda Common Service Manual which explains theory of operation and basic service information for various systems common to all Honda motorcycles, motor scooters and ATVs.

These Honda manuals are written for the professional technician, but most mechanically-capable owners should find them easy to use if they have the proper tools and observe proper safety standards. Special Honda tools are necessary for some procedures.

Publication Item No.	Description	Price Each*
61MEA04	2007 VTX1300S/R/C Service Manual	\$60.00
61CM002	Common Service Manual	\$48.00
31MEA640	2007 VTX1300S/R Owner's Manual	\$16.00
<i>* Prices are subject to change without notice and without incurring obligation.</i>		

**Order Toll Free: 1-888-CYCLE93 (1-888-292-5393)**

*(NOTE: For Credit Card Orders Only)*

**Monday — Friday 8:00 AM — 6:00 PM EST**

**OR**

By completing this form you can order the materials desired. You can pay by check or money order, or charge to your credit card. Mail to Helm, Inc. at the address shown on the back of this order form (USA only).

Canada: See your Honda dealer to order authorized manuals.

<b>Publication Item No.</b>	<b>Item Description</b>	<b>Qty.</b>	<b>Price Each*</b>	<b>Total Price</b>
*Prices are subject to change without notice and without incurring obligation.  Orders are mailed within 10 days. Please allow adequate time for delivery.		<b>Sub Total</b>		
		<b>Purchaser's Sales Tax</b>		
		<b>Mich. Add 6 %</b>		
		<b>Calif. Add 8.25 %</b>		
		<b>Handling Charge</b>		<b>\$5.00</b>
		<b>Grand Total</b>		

## SHIP TO

NOTE: Dealers and Companies please provide dealer or company name, and also the name of the person to whose attention the shipment should be sent.

Customer Name \_\_\_\_\_ Attention \_\_\_\_\_

Street Address - No P. O. Box Number \_\_\_\_\_ Apartment Number \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip Code \_\_\_\_\_

Daytime Telephone Number (      ) \_\_\_\_\_

## PAYMENT

☐ Check or money order enclosed payable to Helm Inc.  
U.S. funds only. Do not send cash.

☐ Check here if your billing address is different from the  
shipping address shown above.

☐ MasterCard

Account Number

--	--	--	--

--	--	--	--

--	--	--	--

--	--	--	--

Expiration: Mo. Yr.

—
---

☐ VISA

☐ Discover

Customer Signature \_\_\_\_\_ Date \_\_\_\_\_

These Publications cannot be returned for credit without receiving advance authorization within 14 days of delivery. On returns, a restocking fee may be applied against the original order.

**HELM** P.O. BOX 07280, DETROIT, MICHIGAN 48207

Your new Honda is covered by these warranties:

- Motorcycle Limited Warranty
- Exhaust Emission Warranty
- Noise Control Warranty

There are responsibilities, restrictions, and exclusions which apply to these warranties. Please read the Warranties Booklet given to you by your Honda dealer at the time of purchase. Be sure to keep your Honda owner's card with your Warranties Booklet (USA only).

It is important to realize that your warranty applies to defects in material or workmanship of your Honda. Your warranty coverage does not apply to normal wear or deterioration associated with using the motorcycle.

Your warranty coverage will not be voided if you choose to perform your own maintenance. However, you should have the proper tools and service information and be mechanically qualified. Failures that occur due directly to improper maintenance are not covered.

Almost all of your warranty coverage can be extended through the Honda Protection Plan (USA only). For more information, see your Honda dealer.

# Warranty Service

---

Please remember that recommended maintenance interval servicing is not included in your warranty coverage. Additionally, your warranty does not apply to the normal wear of items (such as brakes, tires, etc.).

If you believe you have a problem with your motorcycle, call the service department of your Honda dealer. Make an appointment for an inspection and diagnosis. Remember, as the owner of the motorcycle, you will be asked to authorize that inspection. Your dealer will give you the results of the inspection. If the problem is covered under warranty, your dealer will perform the warranty repairs for you.

If you have questions about warranty coverage or the nature of the repair, it is best to talk to the service manager of your Honda dealer.

Sometimes, in spite of the best intentions of all concerned, a misunderstanding may occur. If you aren't satisfied with your dealer's handling of the situation, we suggest you discuss your problem with the appropriate member of the dealership's management team. If the problem has already been reviewed with the Service Manager, Parts Manager, Sales Manager, etc., contact the Owner of the dealership or their designated representative.



## Contacting Honda

---

Your owner's manual was written to cover most of the questions you might ask about your Honda. Any questions not answered in the owner's manual can be answered by your Honda dealer. If your dealer doesn't have the answer right away, they will get it for you.

If you have a difference of opinion with your dealer, please remember that each dealership is independently owned and operated. That's why it's important to work to resolve any differences at the dealership level.

If you wish to comment on your experiences with your Honda or with your dealer, please send your comments to the following address (USA only):

Motorcycle Division, American Honda Motor Co., Inc., P.O. Box 2220, Torrance, CA 90509-2220, mailstop: 100-4C-7B, telephone: (866) 784-1870.

Canada: Refer to the Warranties Booklet that was supplied with your vehicle.

Please include the following information in your letter:

- name, address, and telephone number
- product model, year, and VIN
- date of purchase
- dealer name and address

We will likely ask your Honda dealer to respond, or possibly acknowledge your comments directly.

# Your Honda Dealer

---

Once you purchase your new Honda, get familiar with the organization of your Honda dealer so you can utilize the full range of services available.

The service department is there to perform regular maintenance and unexpected repairs. It has the latest available service information from Honda. The service department will also handle warranty inspections and repairs.

The parts department offers Genuine Honda parts, Pro Honda products, Hondaline accessories (USA only), and Honda accessories and products (Canada only). The same quality that went into your Honda can be found in Genuine Honda replacement parts. You'll also find comparable quality in the accessories and

products available from the parts department.

The sales department offers the Honda Protection Plan to extend almost all of your warranty coverage (USA only). Your Honda dealer can inform you about competition and other riding events in your area. You'll also find that your dealer is a source of information about American Honda's Rider Education Centers and the Honda Rider's Club of America (USA only).

We're sure you'll be as pleased with the service your Honda dealer continues to provide after the sale as you are with the quality and dependability of your Honda.

## The Honda Rider's Club (USA only)

---

One of the best ways to get the most enjoyment from owning and riding your Honda is through the Honda Rider's Club of America. Your purchase of a new motorcycle, scooter, ATV or PWC from a participating U.S. Honda dealer entitles you to a complimentary one-year membership in the Club. There are hundreds of HRCA Chapter-sponsoring dealers across the USA with events and activities almost every weekend.

Membership benefits include:

- 24-hour, toll-free roadside assistance for your new Honda (includes roadside assistance for your transport vehicle [up to one ton] as long as your Honda is aboard or in tow). *For street-legal motorcycles and scooters only.*
- An exclusive HRCA website complete with access to the official Honda

Common Service Manual, contests, insider information and more.

- Reimbursement (up to \$75) for successful completion of a Motorcycle Safety Foundation training course. Separate, complimentary training from the Specialty Vehicle Institute of America for purchasers of new ATVs.
- One full year of *Honda Red Rider* magazine (six issues).
- Discounts from HRCA partners for experienced rider courses.
- Discounted vehicle insurance from the HRCA's insurance partner.
- Racing contingency programs and assistance at selected dual-sport, off-road and motocross events for off-road motorcycles and selected ATVs.

## The Honda Rider's Club (USA only)

---

*If you purchased an off-road motorcycle, ATV or PWC, your benefits do not include roadside assistance or trip interruption protection.*

Contact your Honda dealer for more information or call: 1-800-847-4722 or log on to [www.hrca.honda.com](http://www.hrca.honda.com).

## Reporting Safety Defects (USA only)

---

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590

You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

# Table of Contents

---

The following presents the contents of each section of your owner's manual.

<b>MOTORCYCLE SAFETY .....</b>	<b>1</b>
Important Safety Information .....	2
Accessories & Modifications .....	5
Safety Labels .....	7
 <b>INSTRUMENTS &amp; CONTROLS .....</b>	 <b>11</b>
Operation Component Locations .....	12
Indicators .....	15
Controls & Features	
Fuel Valve.....	19
Choke Knob.....	20
Ignition Switch .....	21
Start Button.....	22
Engine Stop Switch .....	22
Headlight Dimmer Switch .....	23
Turn Signal Switch.....	23
Horn Button .....	24

Odometer/Tripmeter	
Select and Reset Button .....	24

<b>BEFORE RIDING.....</b>	<b>27</b>
Are You Ready to Ride ? .....	28
Protective Apparel.....	28
Rider Training .....	30
Is Your Motorcycle Ready to Ride ? ....	31
Pre-ride Inspection .....	31
Load Limits & Guidelines.....	34
Loading .....	34
Load Limits .....	35
Loading Guidelines .....	35

# Table of Contents

<b>BASIC OPERATION &amp; RIDING.....</b>	<b>37</b>
Safe Riding Precautions .....	38
Starting & Stopping the Engine .....	39
Preparation.....	39
Starting Procedure .....	40
Flooded Engine.....	42
How to Stop the Engine .....	43
Shifting Gears.....	44
Braking .....	46
Parking .....	48
Theft-Prevention Tips .....	51
Riding with a Passenger or Cargo.....	52

## **SERVICING YOUR HONDA ..... 53**

### *Before You Service Your Honda*

The Importance of Maintenance .....	56
Maintenance Safety .....	57
Important Safety Precautions.....	58
Periodic Maintenance .....	60
Maintenance Schedule .....	62

Maintenance Record.....	67
-------------------------	----

### *Service Preparations*

Maintenance Component Locations .....	69
Side Cover Removal.....	72
Storage Compartment.....	74
Tool Kit.....	75
Owner's Manual Storage.....	76
Seat Removal.....	77

(cont'd)

# Table of Contents

---

## SERVICING YOUR HONDA (cont'd)

### *Service Procedures*

#### Fluids & Filters

Fuel .....	78
Engine Oil & Filter .....	81
Coolant .....	90
Air Cleaner .....	94
Crankcase Breather .....	96
Final Drive Oil .....	97

#### Engine

Throttle .....	99
Clutch System .....	101
Engine Idle Speed .....	105
Spark Plugs .....	107

#### Chassis

Suspension .....	111
Brakes .....	114
Tires .....	118
Side Stand .....	128

#### Electrical

Battery .....	129
---------------	-----

Appearance Care .....	134
-----------------------	-----

<b>TIPS.....</b>	<b>141</b>
------------------	------------

Storing Your Honda .....	142
Transporting Your Motorcycle .....	146
You & the Environment .....	147



# Table of Contents

<b>TAKING CARE OF THE UNEXPECTED ..... 149</b>	
General Guidelines .....	150
If Your Engine Quits or Won't Start ...	151
If You Have a Flat Tire .....	156
If Your Engine Overheats .....	170
If the Low Oil Pressure Indicator Lights .....	172
If a Fuse Blows.....	173
If You Crash .....	177
If You Lose Your Key .....	178
If Your Battery Is Low (or Dead) .....	179
<b>TECHNICAL INFORMATION ..... 181</b>	
Vehicle Identification.....	182
Specifications .....	185
Break-in Guidelines.....	192
High Altitude Carburetor Adjustment.....	193
Emission Control Systems .....	194
Catalytic Converters.....	199
Oxygenated Fuels .....	200
<b>CONSUMER INFORMATION ..... 203</b>	
Authorized Manuals .....	204
Warranty Coverage .....	207
Warranty Service .....	208
Contacting Honda.....	209
Your Honda Dealer .....	210
The Honda Rider's Club (USA only) .....	211
Reporting Safety Defects (USA only) .....	213
<b>TABLE OF CONTENTS ..... 214</b>	
<b>INDEX ..... 218</b>	
<b>QUICK REFERENCE</b>	

# Index

---

## A

accessories .....	5
air cleaner.....	94
air pressure, tires.....	118
American Honda, contacting.....	209
apparel, protective .....	28
appearance care .....	134
authorized manual .....	204

## B

battery .....	129
brakes,	
fluid.....	114
pad wear.....	117
braking .....	46
break-in guidelines .....	192

button,

odometer/tripmeter select and reset.....	24
---	----

## C

capacity, fuel .....	79
carburetor, altitude adjustment.....	193
care, appearance .....	134
choke knob.....	20
cleaner, air.....	94
cleaning, appearance care .....	134
clutch system .....	101
color label .....	184
compartment,	
owner's manual .....	76
storage.....	74
tool kit.....	75

component locations,	
indicators and controls .....	12
maintenance .....	69
consumer information .....	203
coolant.....	90
crankcase breather .....	96
customer service .....	209

## D

defects, safety .....	212
display, odometer/tripmeter	
A & B.....	15, 24
drive, final.....	97

## E

emission control systems.....	195
-------------------------------	-----

engine,	
flooded .....	42
idle speed .....	105
low oil pressure.....	172
number .....	183
oil .....	81
overheats .....	170
pinging .....	78
starting .....	39
stop switch .....	22
stopping.....	43
won't start .....	151
environment .....	147

## F

final drive.....	97
flat tire.....	156
flooded engine .....	42

(cont'd)

# Index

---

fuel,	
oxygenated.....	200
recommendation .....	78
tank capacity .....	79
valve.....	19
fuses .....	173

## G

gap, spark plug.....	109
gasohol.....	200
gasoline .....	78

## H

headlight dimmer switch .....	23
helmet holder .....	50
high altitude carburetor adjustment .....	193
high beam indicator .....	18

high coolant temperature	
indicator .....	15,18,170
Honda,	
contacting .....	209
Rider's Club.....	211
dealer.....	210
Honda service manual .....	204
horn button.....	24

## I

identification, vehicle.....	182
idle speed, engine .....	105
ignition cut-off system, side stand .....	39
ignition switch .....	21
indicators.....	15
inspection, pre-ride .....	31

## K

- key, lost..... 178
- kit, tool ..... 75

## L

- labels, safety ..... 7
- limit, weight..... 35
- load limits ..... 35
- loading guidelines..... 35
- location, components,
  - indicators & controls ..... 12
  - maintenance..... 69
- lock, steering..... 49
- low oil pressure indicator..... 15,17,172

## M

- maintenance,
  - component locations..... 69
  - importance ..... 56
  - periodic ..... 60
  - record ..... 67
  - safety..... 57
  - schedule ..... 62
- manual, service ..... 204
- manual, authorized ..... 204
- maximum weight limit ..... 35
- modifications ..... 6

## N

- neutral indicator..... 15,18
- numbers, serial..... 182

# Index

---

## O

odometer .....	15, 24
oil,	
engine.....	81
final drive .....	97
low pressure.....	172
operating controls .....	19
overheat, engine.....	170
owner's manual storage.....	76
oxygenated fuels.....	200

## P

parking .....	48
pinging, engine .....	78
plugs, spark .....	107
pre-load, rear suspension.....	112
pre-ride inspection.....	31

problems, unexpected.....	149
protective apparel .....	28

## R

removal,	
seat .....	77
side cover .....	72
reporting safety defects .....	213
rider training .....	3, 30
Rider's Club, Honda.....	211
riding,	
basic operation.....	37
clothing .....	28
safety.....	2
safety precautions.....	38
with passenger or cargo.....	52

## S

- ul style="list-style-type: none;">
- safety,
  - important precautions ..... 58
  - labels ..... 7
  - reporting defects ..... 213
  - riding precautions ..... 38
- schedule, maintenance ..... 62
- seat removal ..... 77
- serial numbers ..... 182
- service,
  - customer ..... 209
  - manuals ..... 204
  - warranty ..... 208
- shifting gears ..... 44
- side cover removal ..... 72
- side stand ..... 128
- side stand ignition cut-off system ..... 39
- spark knock ..... 78
- spark plugs ..... 107
- specifications ..... 185
- speedometer ..... 15, 17
- stand, side ..... 128
- start button ..... 22
- starting,
  - engine ..... 39
  - troubleshooting ..... 151
- steering lock ..... 49
- stop switch, engine ..... 22
- stopping engine ..... 43
- storage,
  - compartment ..... 74
  - motorcycle ..... 142
  - owner's manual ..... 76
- suspension, rear pre-load ..... 112
- switch,
  - headlight dimmer ..... 23
  - ignition ..... 21
  - turn signal ..... 23

# Index

---

## T

theft prevention tips.....	51
throttle .....	99
tires,	
air pressure.....	118
flat.....	156
replacing .....	125
tool kit.....	75
training, rider .....	3, 30
transporting your motorcycle .....	146
tripmeter.....	15, 24
trouble, unexpected .....	149
troubleshooting, starting.....	151
turn signal indicators .....	15

## V

valve, fuel .....	19
vehicle identification no. (VIN).....	182

## W

warranty,	
coverage.....	207
extended.....	207
service .....	208
washing your motorcycle .....	136
weight limit.....	35
wheels,	
front removal .....	162
rear removal.....	167







The following is a brief, but important collection of information you need to know about your Honda. You'll also find space to record important notes.

### How To Avoid Costly Repairs

The engine of your Honda can be the most expensive component to repair. Proper maintenance, especially the use of the recommended fluids and filters, prevents premature wear and damage.

Frequent causes of costly repairs are:

- Engine oil: insufficient quantity, improper oil.
- Air cleaner: dirty, leaking because of improper installation (poor seal).

Record important information on the following page:

## Quick Reference

---

VIN	
Engine No.	
Ignition Key No.	
Color Label	
Owner's Name	
Address	
City/State	
Phone	
Dealer's Name	
Address	
City/State	
Phone	
Service Mgr.	

**Quick Reference**

## Quick Reference

Scheduled Maintenance	Initial: 600 miles (1,000 km) Regular: every 4,000 miles (6,400 km)
Pre-ride Inspection	Check the following items each time before you ride (page 31 ): tires & wheels, leaks, loose parts, lights, throttle, brakes, indicators.
Periodic Checks	Check the following items monthly (page 60 ): tires & wheels, fluids, lights, freeplay, fuses, nuts & bolts.
Fuel/Capacity	unleaded gasoline, pump octane number 86 or higher <b>4.76 US gal (18.0 l)</b>
Engine Oil	API Service Classification SG or higher except oils labeled as energy conserving on the circular API service label, SAE 10W-30, JASO T 903 standard MA, Pro Honda GN4 4-stroke oil or equivalent
Maximum Weight Capacity	<b>404 lbs (183 kg)</b> <b>413 lbs (187 kg)</b> Canada rider, passenger, all cargo and accessories

## Quick Reference

Tires	Front: 140/80 – 17M/C 69H DUNLOP D404F Rear: 170/80 – 15M/C 77H DUNLOP K555J Type: bias-ply, tube ...VTX1300S bias-ply, tubeless ...VTX1300R
Tire Pressure (cold)	Front: 33 psi (225 kPa , 2.25 kgf/cm <sup>2</sup> ) Rear: 33 psi (225 kPa , 2.25 kgf/cm <sup>2</sup> ) with less than 200 lbs (90 kg) of added weight 36 psi (250 kPa , 2.50 kgf/cm <sup>2</sup> ) with more than 200 lbs (90 kg) of added weight
Spark Plugs	standard: DCPR6E (NGK) or XU20EPR-U (DENSO) high speed riding: DCPR7E (NGK) or XU22EPR-U (DENSO)
Coolant	ethylene glycol antifreeze (silicate-free) for aluminum engines in 50/50 solution with Pro Honda HP Coolant or an equivalent distilled water
Fuses	main: 30A other: 20A, 10A
Final Drive Oil	Hypoid Gear Oil SAE 80

## Quick Reference