

FOREWORD

This wiring diagram manual has been prepared to provide information on the electrical system of the 2007 SCION tC.

Applicable models: ANT10 Series

Refer to the following manuals for additional service specifications and repair procedures for these models:

Manual Name	Pub. No.
● 2007 SCION tC Repair Manual	RM0300U
● 2007 SCION tC New Car Features	NM0300U

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice.

TOYOTA MOTOR CORPORATION

NOTICE

Always follow the directions given in the above repair manuals when handling supplemental restraint system components (such as removal, installation, inspection, etc.) in order to prevent accidents and supplemental restraint system malfunction.

©2006 TOYOTA MOTOR CORPORATION

All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.

First Printing : May 29, 2006 01-060529-00

2007 tC ELECTRICAL WIRING DIAGRAM

	Section Code	Page
INTRODUCTION	A	2
HOW TO USE THIS MANUAL	B	3
TROUBLESHOOTING	C	12
ABBREVIATIONS	D	17
GLOSSARY OF TERMS AND SYMBOLS	E	18
RELAY LOCATIONS	F	20
ELECTRICAL WIRING ROUTING	G	34
SYSTEM CIRCUITS	H	45
GROUND POINT	I	184
POWER SOURCE (Current Flow Chart)	J	188
CONNECTOR LIST	K	194
PART NUMBER OF CONNECTORS	L	206
OVERALL ELECTRICAL WIRING DIAGRAM .	M	210

A INTRODUCTION

This manual consists of the following 13 sections:

No.	Section	Description
A	INDEX	Index of the contents of this manual.
	INTRODUCTION	Brief explanation of each section.
B	HOW TO USE THIS MANUAL	Instructions on how to use this manual.
C	TROUBLE--SHOOTING	Describes the basic inspection procedures for electrical circuits.
D	ABBREVIATIONS	Defines the abbreviations used in this manual.
E	GLOSSARY OF TERMS AND SYMBOLS	Defines the symbols and functions of major parts.
F	RELAY LOCATIONS	Shows position of the Electronic Control Unit, Relays, Relay Block, etc. This section is closely related to the system circuit.
G	ELECTRICAL WIRING ROUTING	Describes position of Parts Connectors, Splice points, Ground points, etc. This section is closely related to the system circuit.
H	INDEX	Index of the system circuits.
	SYSTEM CIRCUITS	Electrical circuits of each system are shown from the power supply through ground points. Wiring connections and their positions are shown and classified by code according to the connection method. (Refer to the section, "How to use this manual"). The "System Outline" and "Service Hints" useful for troubleshooting are also contained in this section.
I	GROUND POINT	Shows ground positions of all parts described in this manual.
J	POWER SOURCE (Current Flow Chart)	Describes power distribution from the power supply to various electrical loads.
K	CONNECTOR LIST	Describes the form of the connectors for the parts appeared in this book. This section is closely related to the system circuit.
L	PART NUMBER OF CONNECTORS	Indicates the part number of the connectors used in this manual.
M	OVERALL ELECTRICAL WIRING DIAGRAM	Provides circuit diagrams showing the circuit connections.

This manual provides information on the electrical circuits installed on vehicles by dividing them into a circuit for each system.

The actual wiring of each system circuit is shown from the point where the power source is received from the battery as far as each ground point. (All circuit diagrams are shown with the switches in the OFF position.)

When troubleshooting any problem, first understand the operation of the circuit where the problem was detected (see System Circuit section), the power source supplying power to that circuit (see Power Source section), and the ground points (see Ground Point section). See the System Outline to understand the circuit operation.

When the circuit operation is understood, begin troubleshooting of the problem circuit to isolate the cause. Use Relay Location and Electrical Wiring Routing sections to find each part, junction block and wiring harness connectors, wiring harness and wiring harness connectors and ground points of each system circuit. Internal wiring for each junction block is also provided for better understanding of connection within a junction block.


Wiring related to each system is indicated in each system circuit by arrows (from__, to__). When overall connections are required, see the Overall Electrical Wiring Diagram at the end of this manual.

B HOW TO USE THIS MANUAL

* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the SYSTEM CIRCUITS SECTION.

[A]

Stop Light

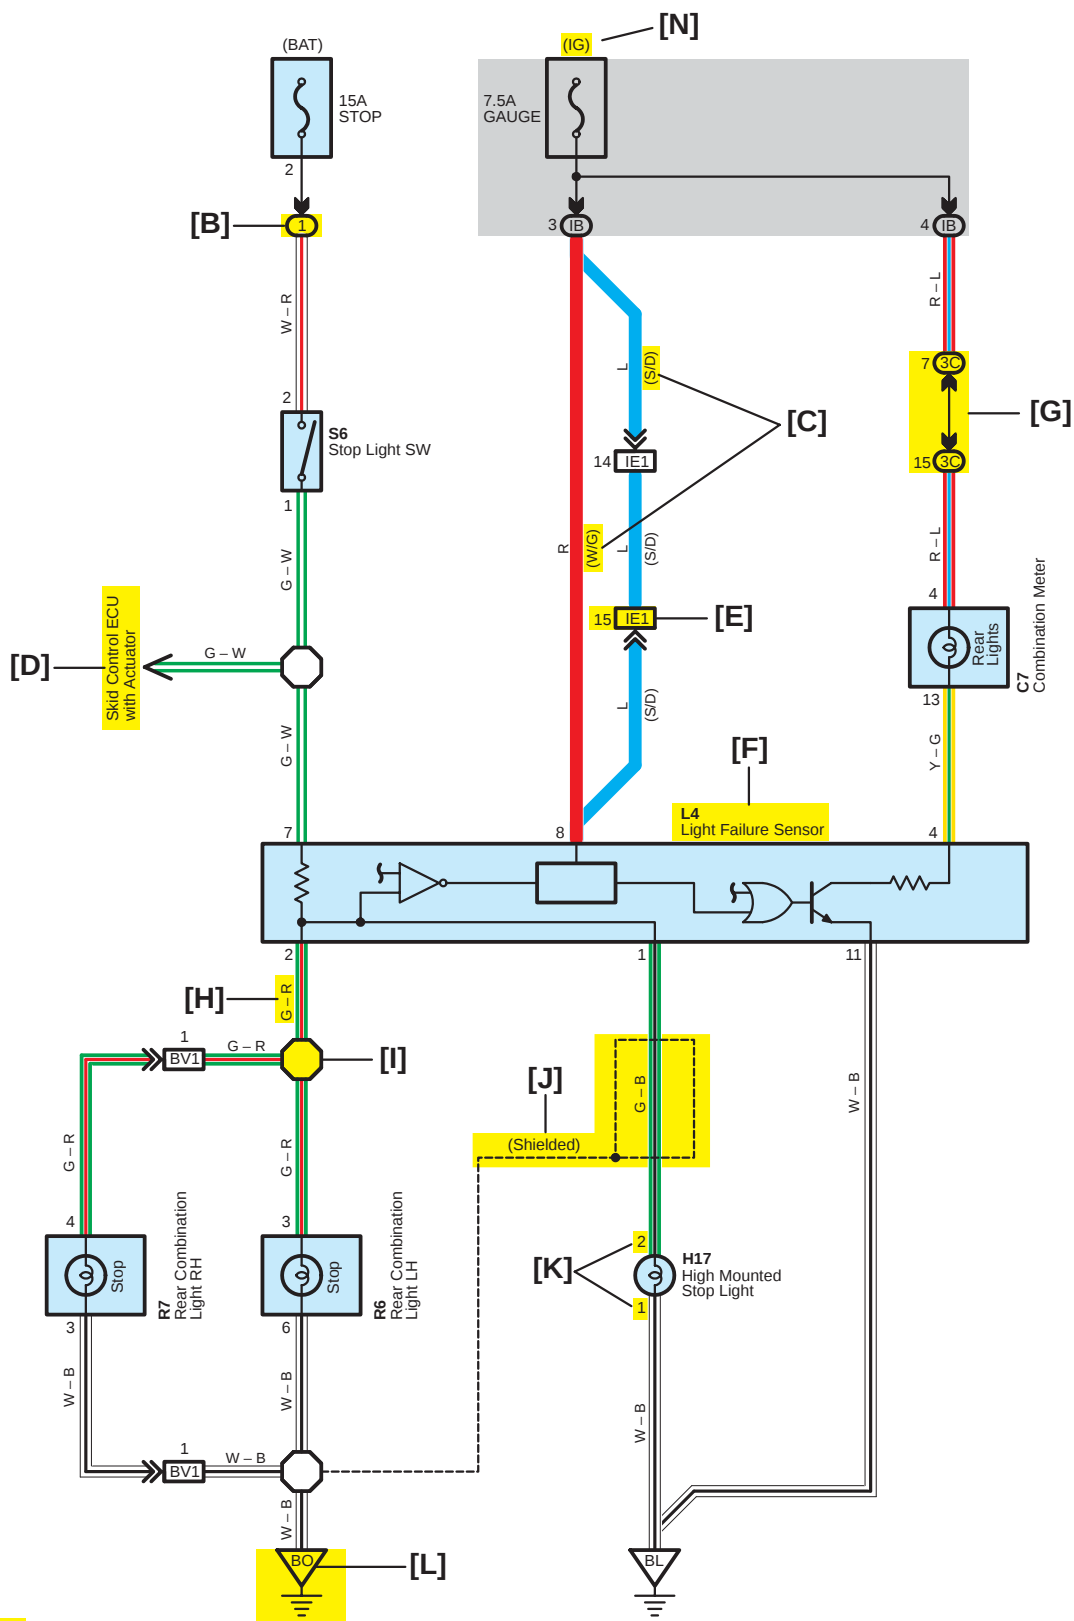

50 — [M]

[A] : System Title


[B] : Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B

Example: ① Indicates Relay Block No.1

[C] : () is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

[D] : Indicates related system.

[E] : Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (⇨). Outside numerals are pin numbers.

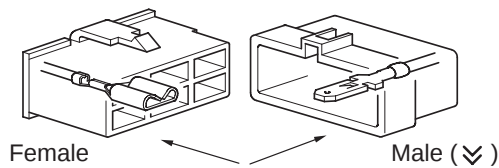


The first letter of the code for each wiring harness and wiring harness connector(s) indicates the component's location, e.g, "E" for the Engine Compartment, "I" for the Instrument Panel and Surrounding area, and "B" for the Body and Surrounding area.

When more than one code has the first and second letters in common, followed by numbers (e.g, IH1, IH2), this indicates the same type of wiring harness and wiring harness connector.

[F] : Represents a part (all parts are shown in sky blue). The code is the same as the code used in parts position.

[G] : Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts.

Example:

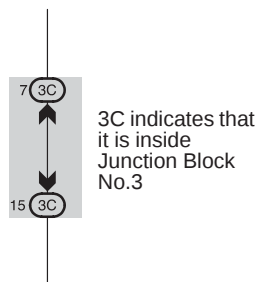


[H] : Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

B = Black	W = White	BR = Brown
L = Blue	V = Violet	SB = Sky Blue
R = Red	G = Green	LG = Light Green
P = Pink	Y = Yellow	GR = Gray
O = Orange		


The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

Example: L – Y

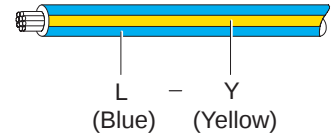

[I] : Indicates a wiring Splice Point

Example:

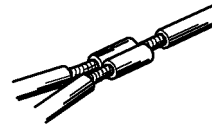


[J] : Indicates a shielded cable.




[K] : Indicates the pin number of the connector. The numbering system is different for female and male connectors.

Example: Numbered in order from upper left to lower right

Numbered in order from upper right to lower left



Female



Male

[L] : Indicates a ground point.

The first letter of the code for each ground point(s) indicates the component's location, e.g, "E" for the Engine Compartment, "I" for the Instrument Panel and Surrounding area, and "B" for the Body and Surrounding area.

[M] : Page No.

[N] : Indicates the ignition key position(s) when the power is supplied to the fuse(s).

B HOW TO USE THIS MANUAL

[O]

System Outline

Current is applied at all times through the STOP fuse to TERMINAL 2 of the stop light SW.

When the ignition SW is turned on, current flows from the GAUGE fuse to TERMINAL 8 of the light failure sensor, and also flows through the rear lights warning light to TERMINAL 4 of the light failure sensor.

Stop Light Disconnection Warning

When the ignition SW is turned on and the brake pedal is pressed (Stop light SW on), if the stop light circuit is open, the current flowing from TERMINAL 7 of the light failure sensor to TERMINALS 1, 2 changes, so the light failure sensor detects the disconnection and the warning circuit of the light failure sensor is activated.

As a result, the current flows from TERMINAL 4 of the light failure sensor to TERMINAL 11 to GROUND and turns the rear lights warning light on. By pressing the brake pedal, the current flowing to TERMINAL 8 of the light failure sensor keeps the warning circuit on and holds the warning light on until the ignition SW is turned off.

[P]



: Parts Location

Code	See Page	Code	See Page	Code	See Page
C7	34	L4	36	R7	37
H17	36	R6	37	S6	35

[Q]



: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	18	R/B No.1 (Instrument Panel Brace LH)

[R]



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3C	22	Instrument Panel Wire and J/B No.3 (Instrument Panel Brace LH)
IB	20	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)

[S]



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
BV1	50	Luggage Room Wire and Floor Wire (Luggage Room Left)

[T]



: Ground Points

Code	See Page	Ground Points Location
BL	50	Under the Left Center Pillar
BO	50	Back Panel Center

[O] : Explains the system outline.

[P] : Indicates the reference page showing the position on the vehicle of the parts in the system circuit.

Example : Part "L4" (Light Failure Sensor) is on page 36 of the manual.

* The letter in the code is from the first letter of the part, and the number indicates its order in parts starting with that letter.

Example : L 4
└─┬─┘ Parts is 4th in order
└───┘ Light Failure Sensor

[Q] : Indicates the reference page showing the position on the vehicle of Relay Block Connectors in the system circuit.

Example : Connector "1" is described on page 18 of this manual and is installed on the left side of the instrument panel.

[R] : Indicates the reference page showing the position on the vehicle of J/B and Wire Harness in the system circuit.

Example : Connector "3C" connects the Instrument Panel Wire and J/B No.3. It is described on page 22 of this manual, and is installed on the instrument panel left side.

[S] : Indicates the reference page describing the wiring harness and wiring harness connector (the female wiring harness is shown first, followed by the male wiring harness).

Example : Connector "IE1" connects the floor wire (female) and Instrument panel wire (male). It is described on page 42 of this manual, and is installed on the left side kick panel.


[T] : Indicates the reference page showing the position of the ground points on the vehicle.

Example : Ground point "BO" is described on page 50 of this manual and is installed on the back panel center.

B HOW TO USE THIS MANUAL


The ground points circuit diagram shows the connections from all major parts to the respective ground points. When troubleshooting a faulty ground point, checking the system circuits which use a common ground may help you identify the problem ground quickly. The relationship between ground points (∇_{EA} , ∇_{IB} and ∇_{IC} shown below) can also be checked this way.

I GROUND POINT

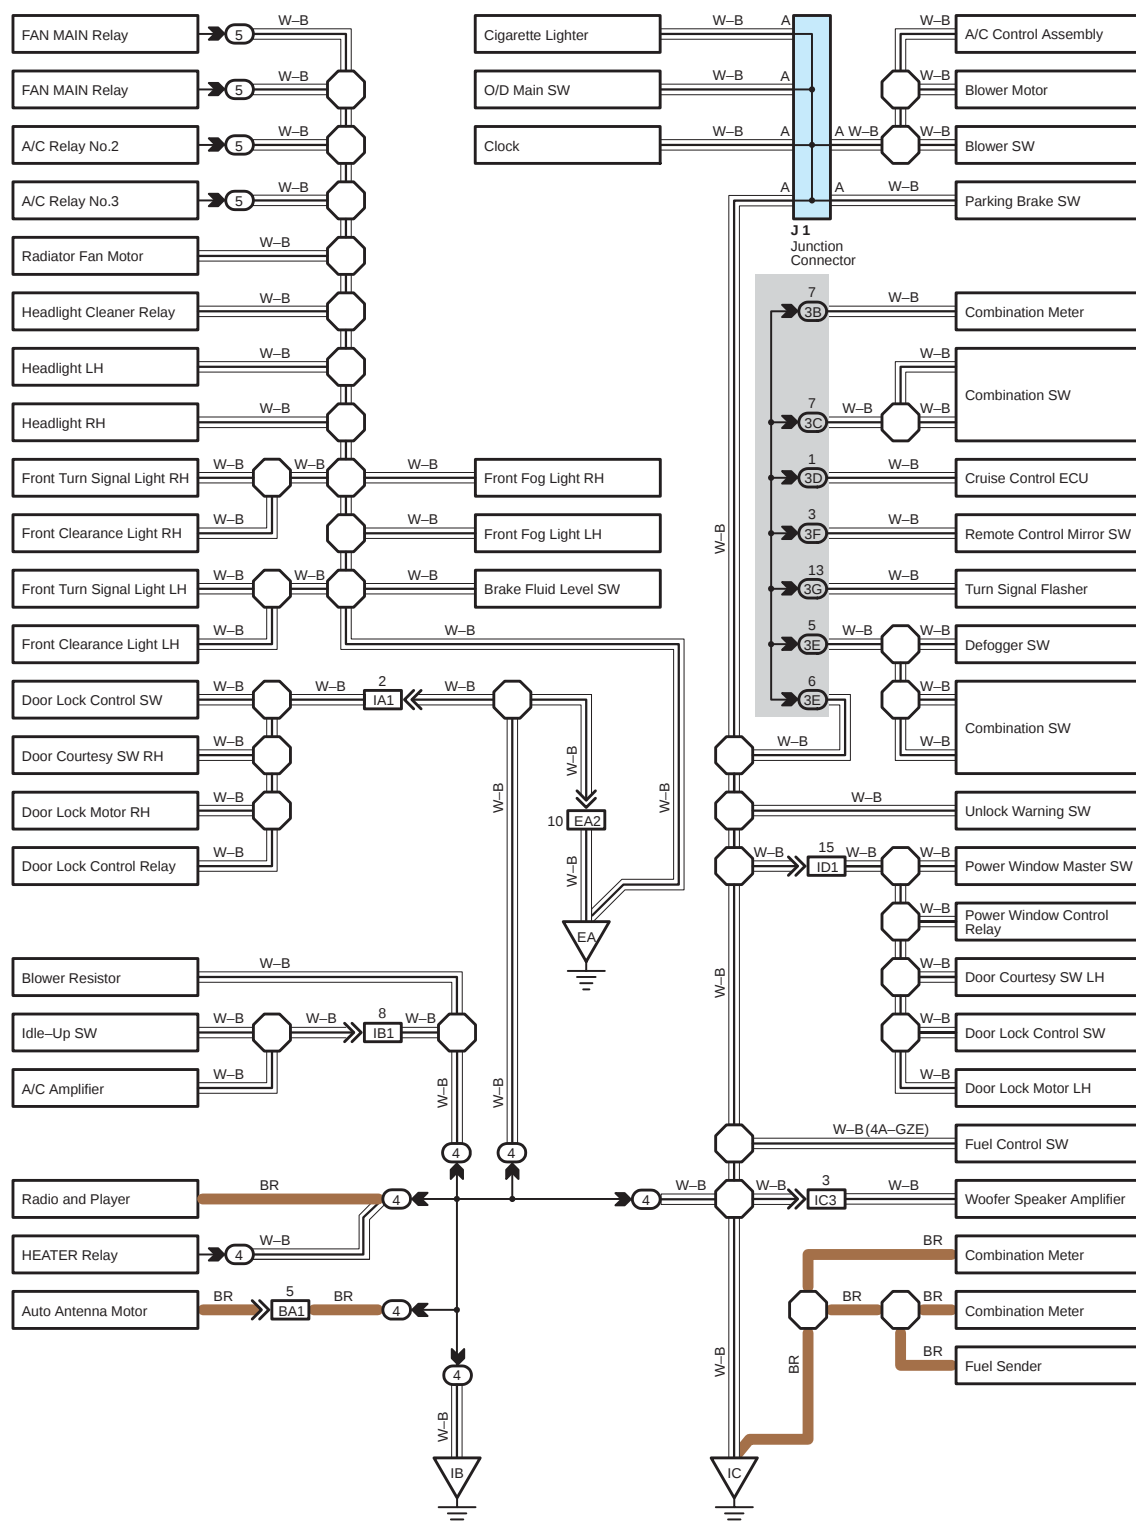

* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the SYSTEM CIRCUITS SECTION.

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuses, etc.) and other parts

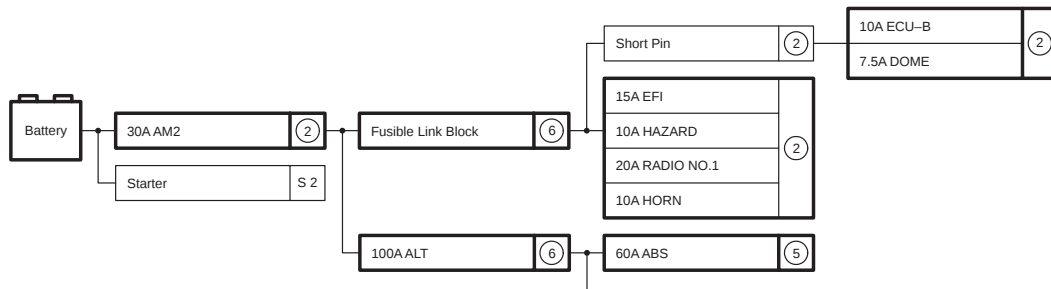


Fuse		System	Page
20A	STOP	ABS	194
		ABS and Traction Control	187
		Cruise Control	180
		Electronically Controlled Transmission	166
		Multiplex Communication System	210
10A	DOME	Cigarette Lighter	214
		Combination Meter	230
		Headlight	112
		Interior Light	122
		Key Reminder and Seat Belt Warning	
		Light Auto Turn Off System	


[illegible]

9

K CONNECTOR LIST

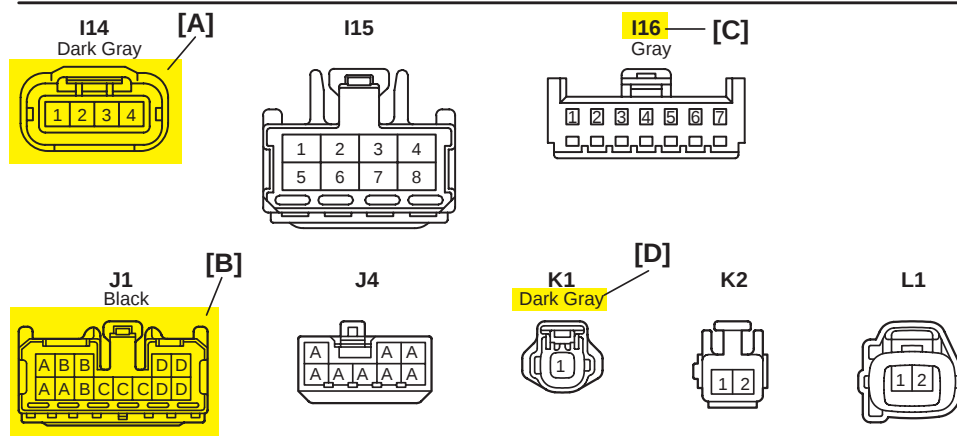


K CONNECTOR LIST

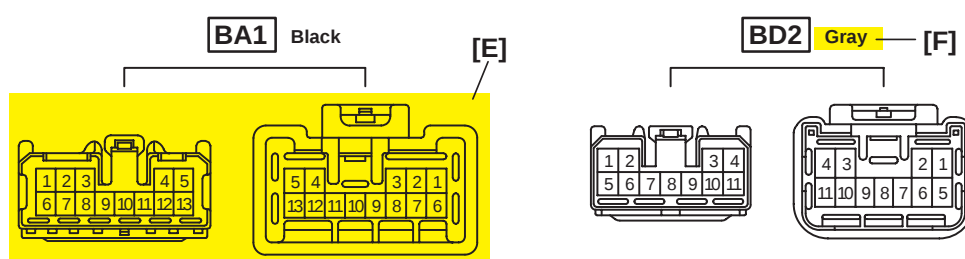

[A] : Indicates connector to be connected to a part. (The numeral indicates the pin No.)

[B] : Junction Connector
Indicates a connector which is connected to a short terminal.

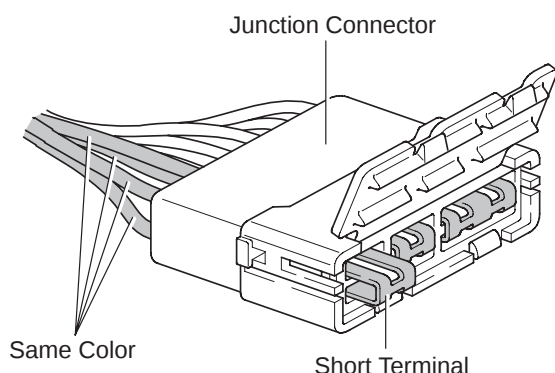

Junction connector in this manual include a short terminal which is connected to a number of wire harnesses. Always perform inspection with the short terminal installed. (When installing the wire harnesses, the harnesses can be connected to any position within the short terminal grouping. Accordingly, in other vehicles, the same position in the short terminal may be connected to a wire harness from a different part.)
Wire harness sharing the same short terminal grouping have the same color.

[C] : Parts Code
The first letter of the code is taken from the first letter of part, and the numbers indicates its order in parts which start with the same letter.

[D] : Connector Color
Connectors not indicated are milky white in color.

[E] : Indicates the connector shapes which are used to join wire harnesses.
On Left : Female connector shapes
On Right : Male connector shapes
Numbers indicate pin numbers.

[F] : Indicates connector colors. (Connectors with not indicated colors are white)

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	D 4	Diode (Courtesy)	90980-11608
A 2	A/C Condenser Fan Motor	90980-11237	D 5	Diode (Interior Light)	90980-10962
A 3	A/C Condenser Fan Relay	90980-10940	D 6	Diode (Moon Roof)	90980-11608
A 4	A/C Condenser Fan Resistor	90980-10928	D 7	Door Lock Control Relay	90980-10848
A 5	A/C Magnetic Clutch	90980-11271	D 8	Door Lock Control SW LH	90980-11148
A 6	A/T Oil Temp. Sensor	90980-11413	D 9	Door Lock Control SW RH	
[A]	ABS Actuator [B]	909-151	D10	Door Courtesy SW LH	90980-11097
A 8	ABS Actuator	90980-11009	D11	Door Courtesy SW RH	
A 9	ABS Speed Sensor Front LH	90980-10941	D12	Door Courtesy SW Front LH	90980-11156
A10	ABS Speed Sensor Front RH	90980-11002	D13	Door Courtesy SW Front RH	
A11	Airbag Sensor Front LH	90980-11856	D14	Door Courtesy SW Rear LH	
A12	Airbag Sensor Front RH		D15	Door Courtesy SW Rear RH	90980-11170
A13	Airbag Sensor Front LH	90980-11194	D16	Door Courtesy SW Rear LH	
		90980-11194			

[A] : Part Code


[B] : Part Name

[C] : Part Number

Toyota Part Number are indicated.

Not all of the above part numbers of the connector are established for the supply.

C TROUBLESHOOTING

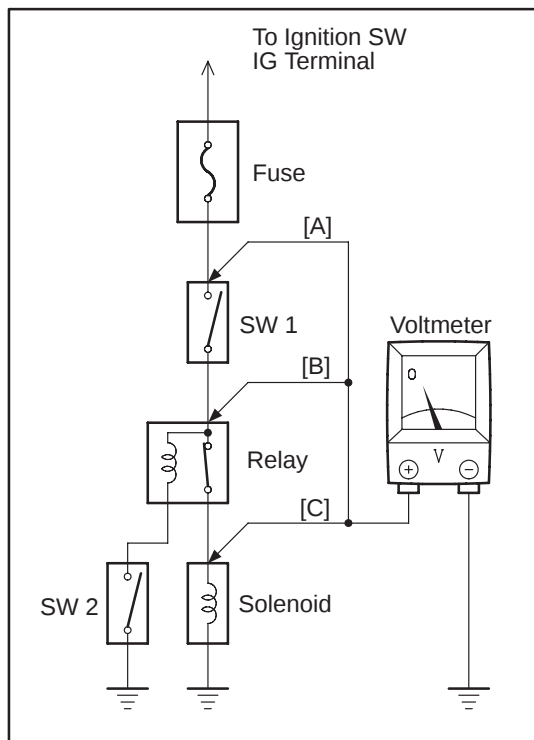

VOLTAGE CHECK

- (a) Establish conditions in which voltage is present at the check point.

Example:


[A] – Ignition SW on

[B] – Ignition SW and SW 1 on

[C] – Ignition SW, SW 1 and Relay on (SW 2 off)

- (b) Using a voltmeter, connect the negative lead to a good ground point or negative battery terminal, and the positive lead to the connector or component terminal.


This check can be done with a test light instead of a voltmeter.

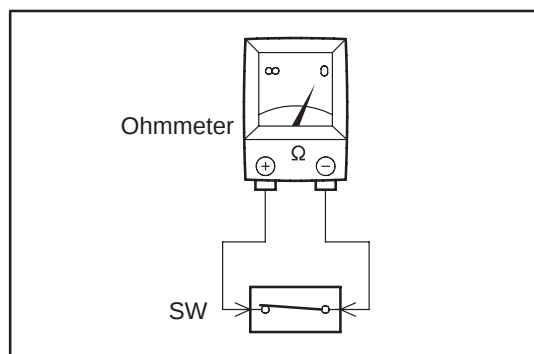

CONTINUITY AND RESISTANCE CHECK

- (a) Disconnect the battery terminal or wire so there is no voltage between the check points.


- (b) Contact the two leads of an ohmmeter to each of the check points.

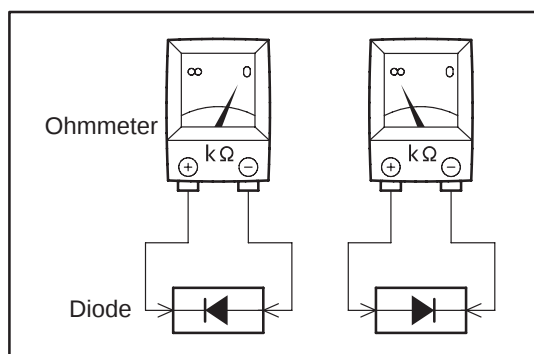


If the circuit has diodes, reverse the two leads and check again.

When contacting the negative lead to the diode positive side and the positive lead to the negative side, there should be continuity.

When contacting the two leads in reverse, there should be no continuity.

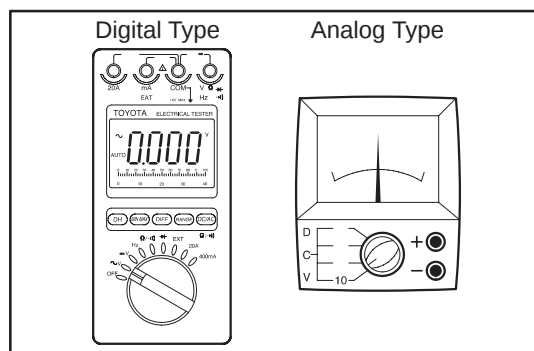

- (c) Use a volt/ohmmeter with high impedance (10 k Ω /V minimum) for troubleshooting of the electrical circuit.

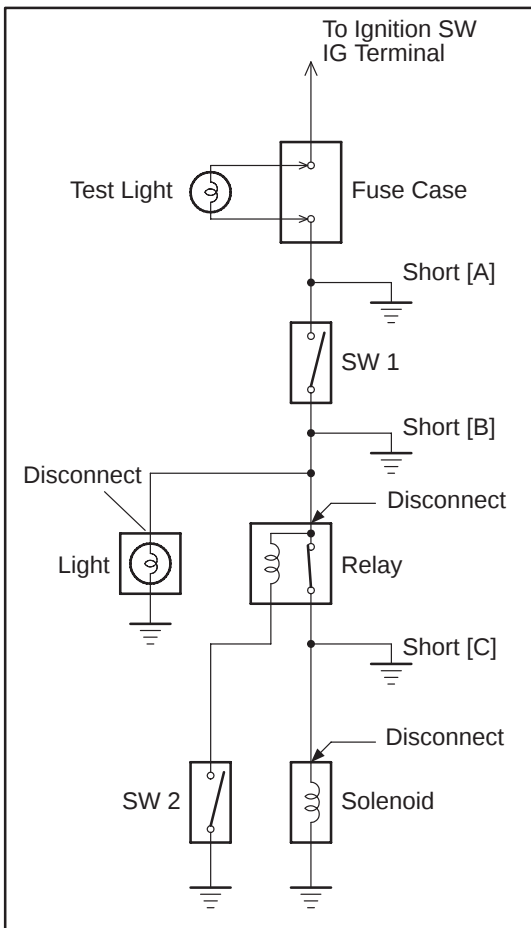

FINDING A SHORT CIRCUIT

- Remove the blown fuse and disconnect all loads of the fuse.
- Connect a test light in place of the fuse.
- Establish conditions in which the test light comes on.

Example:

- [A] – Ignition SW on
- [B] – Ignition SW and SW 1 on
- [C] – Ignition SW, SW 1 and Relay on (Connect the Relay) and SW 2 off (or Disconnect SW 2)

- Disconnect and reconnect the connectors while watching the test light.
The short lies between the connector where the test light stays lit and the connector where the light goes out.
- Find the exact location of the short by lightly shaking the problem wire along the body.


CAUTION:

- Do not open the cover or the case of the ECU unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)
- When replacing the internal mechanism (ECU part) of the digital meter, be careful that no part of your body or clothing comes in contact with the terminals of leads from the IC, etc. of the replacement part (spare part).


DISCONNECTION OF MALE AND FEMALE CONNECTORS

To pull apart the connectors, pull on the connector itself, not the wire harness.

HINT: Check to see what kind of connector you are disconnecting before pulling apart.

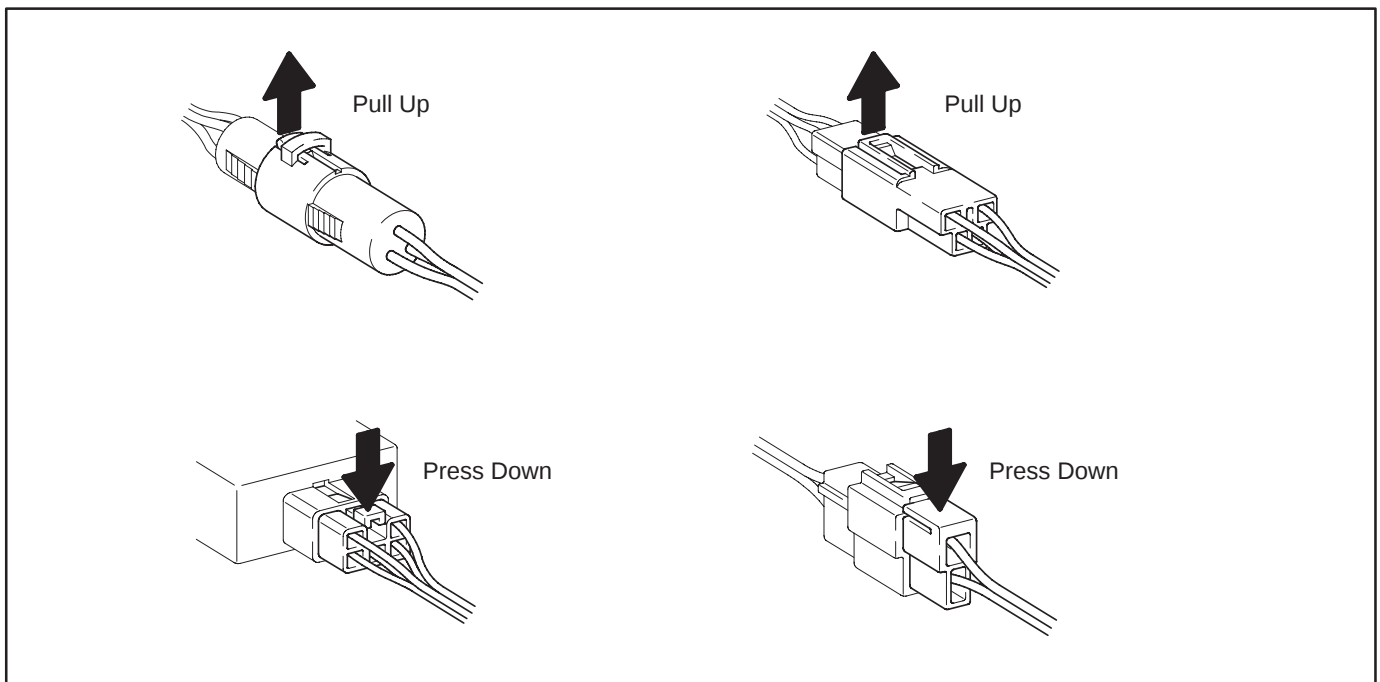

C TROUBLESHOOTING

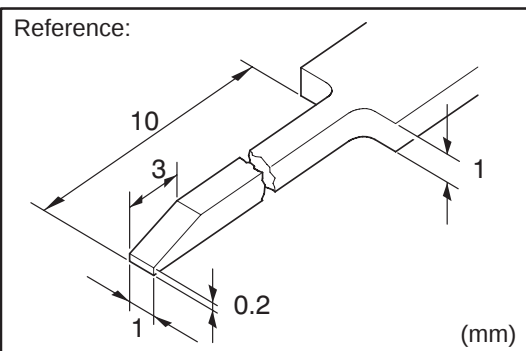

HOW TO REPLACE TERMINAL (with terminal retainer or secondary locking device)

1. PREPARE THE SPECIAL TOOL

HINT : To remove the terminal from the connector, please construct and use the special tool or like object shown on the left.

2. DISCONNECT CONNECTOR

3. DISENGAGE THE SECONDARY LOCKING DEVICE OR TERMINAL RETAINER.

(a) Locking device must be disengaged before the terminal locking clip can be released and the terminal removed from the connector.

(b) Use a special tool or the terminal pick to unlock the secondary locking device or terminal retainer.

NOTICE:




Do not remove the terminal retainer from connector body.

[A] For Non-Waterproof Type Connector

HINT : The needle insertion position varies according to the connector's shape (number of terminals etc.), so check the position before inserting it.



"Case 1"

Raise the terminal retainer up to the temporary lock position.

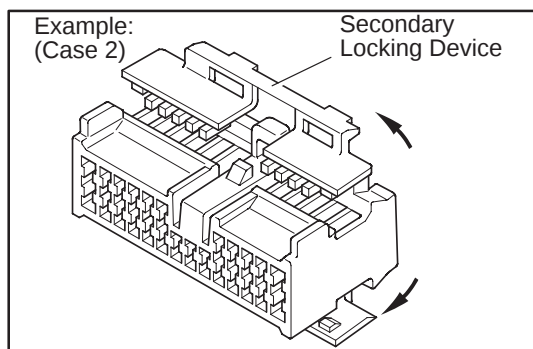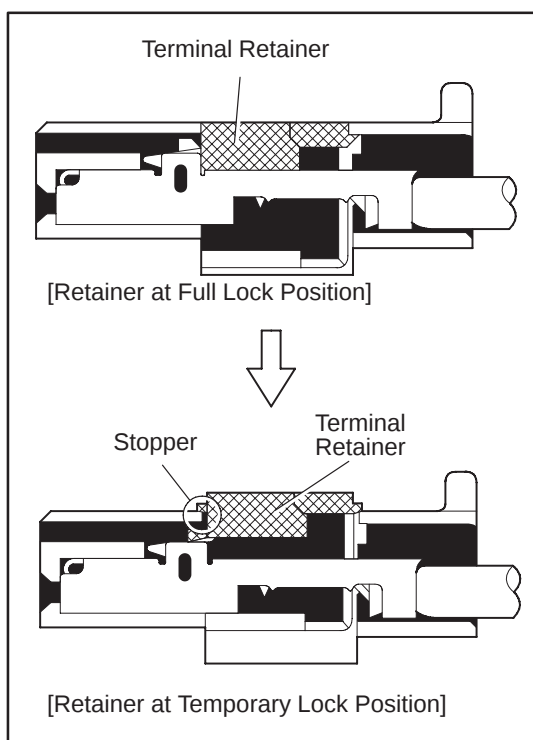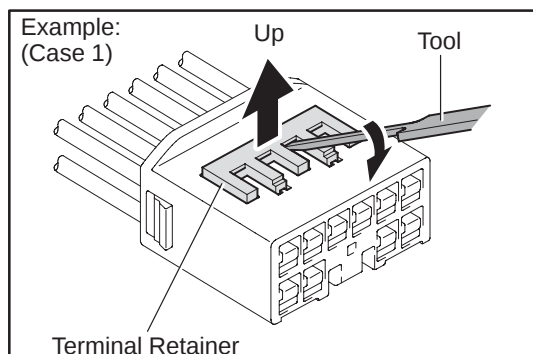

"Case 2"

Open the secondary locking device.

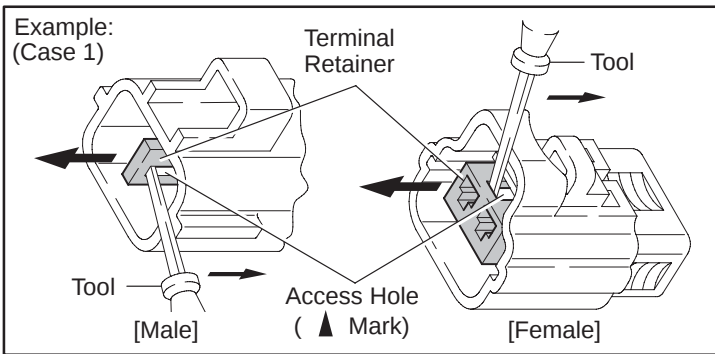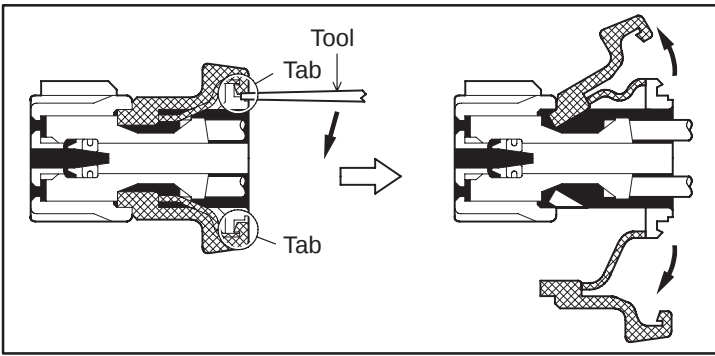

[B] For Waterproof Type Connector

HINT : Terminal retainer color is different according to connector body.


Example:

Terminal Retainer : Connector Body

Black or White : Gray

Black or White : Dark Gray

Gray or White : Black

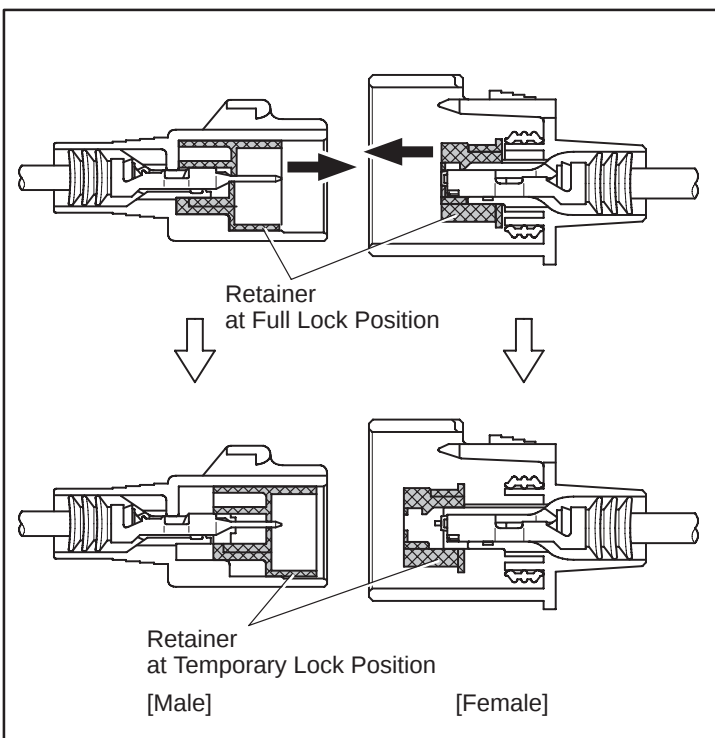


"Case 1"

Type where terminal retainer is pulled up to the temporary lock position (Pull Type).

Insert the special tool into the terminal retainer access hole (▲Mark) and pull the terminal retainer up to the temporary lock position.


HINT : The needle insertion position varies according to the connector's shape (Number of terminals etc.), so check the position before inserting it.

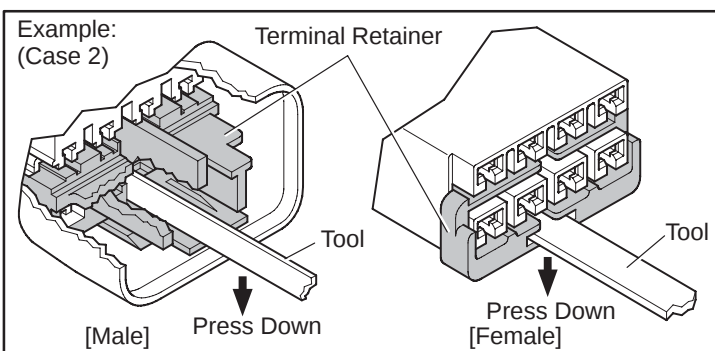


"Case 2"

Type which cannot be pulled as far as Power Lock insert the tool straight into the access hole of terminal retainer as shown.


C TROUBLESHOOTING

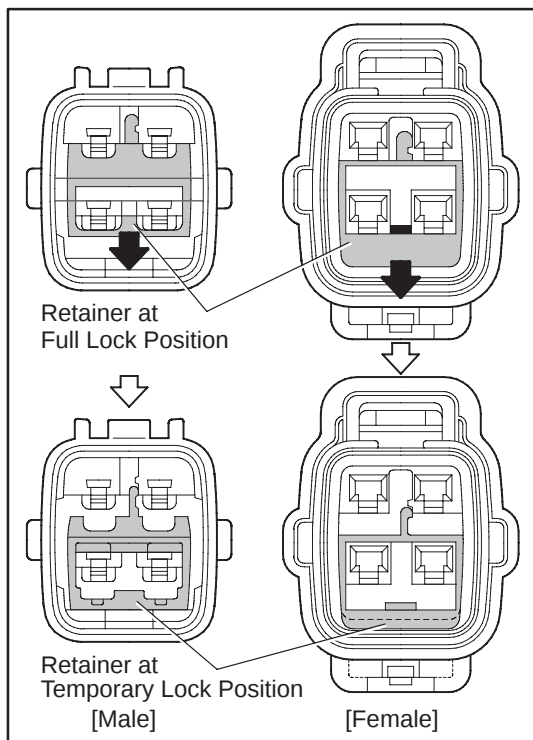

Push the terminal retainer down to the temporary lock position.

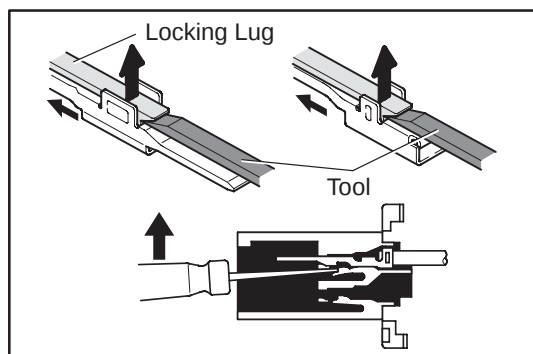

(c) Release the locking lug from terminal and pull the terminal out from rear.

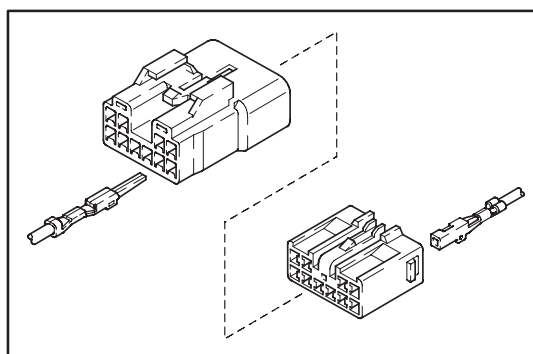


4. INSTALL TERMINAL TO CONNECTOR

(a) Insert the terminal.

HINT:

1. Make sure the terminal is positioned correctly.
2. Insert the terminal until the locking lug locks firmly.
3. Insert the terminal with terminal retainer in the temporary lock position.

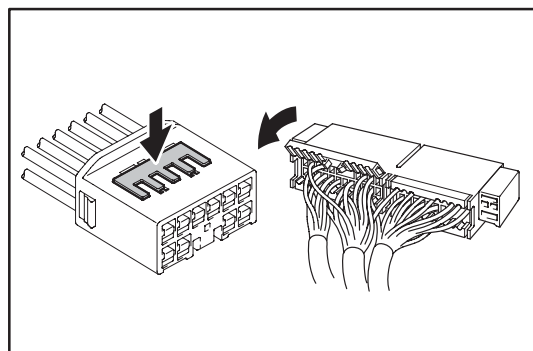

(b) Push the secondary locking device or terminal retainer in to the full lock position.

5. CONNECT CONNECTOR






ABBREVIATIONS











The following abbreviations are used in this manual.

A/C	=	Air Conditioning
A/T	=	Automatic Transaxle
ABS	=	Anti-Lock Brake System
CAN	=	Controller Area Network
DEF	=	Defogger
ECU	=	Electronic Control Unit
ESA	=	Electronic Spark Advance
FL	=	Fusible Link
IC	=	Integrated Circuit
INT	=	Intermittent
J/B	=	Junction Block
LH	=	Left-Hand
M/T	=	Manual Transaxle
R/B	=	Relay Block
RH	=	Right-Hand
SFI	=	Sequential Multiport Fuel Injection
SRS	=	Supplemental Restraint System
SW	=	Switch
TEMP.	=	Temperature
TVIP	=	TOYOTA Vehicle Intrusion Protection
VSV	=	Vacuum Switching Valve
w/	=	With
w/o	=	Without

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.


E GLOSSARY OF TERMS AND SYMBOLS

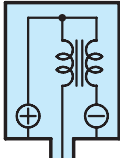 BATTERY Stores chemical energy and converts it into electrical energy. Provides DC current for the auto's various electrical circuits.	 GROUND The point at which wiring attaches to the Body, thereby providing a return path for an electrical circuit; without a ground, current cannot flow.
 CAPACITOR (Condenser) A small holding unit for temporary storage of electrical voltage.	HEADLIGHTS Current flow causes a headlight filament to heat up and emit light. A headlight may have either a single (1) filament or a double (2) filament 1. SINGLE FILAMENT  2. DOUBLE FILAMENT 
 CIGARETTE LIGHTER An electric resistance heating element.	
 CIRCUIT BREAKER Basically a reusable fuse, a circuit breaker will heat and open if too much current flows through it. Some units automatically reset when cool, others must be manually reset.	 HORN An electric device which sounds a loud audible signal.
 DIODE A semiconductor which allows current flow in only one direction.	 IGNITION COIL Converts low-voltage DC current into high-voltage ignition current for firing the spark plugs.
 DIODE, ZENER A diode which allows current flow in one direction but blocks reverse flow only up to a specific voltage. Above that potential, it passes the excess voltage. This acts as a simple voltage regulator.	 LIGHT Current flow through a filament causes the filament to heat up and emit light.
 PHOTODIODE The photodiode is a semiconductor which controls the current flow according to the amount of light.	 LED (LIGHT EMITTING DIODE) Upon current flow, these diodes emit light without producing the heat of a comparable light.
 DISTRIBUTOR, IIA Channels high-voltage current from the ignition coil to the individual spark plugs.	 METER, ANALOG Current flow activates a magnetic coil which causes a needle to move, thereby providing a relative display against a background calibration.
 FUSE A thin metal strip which burns through when too much current flows through it, thereby stopping current flow and protecting a circuit from damage.  FUSIBLE LINK (for Medium Current Fuse) A heavy-gauge wire placed in high amperage circuits which burns through on overloads, thereby protecting the circuit. The numbers indicate the crosssection surface area of the wires.  (for High Current Fuse or Fusible Link)	 METER, DIGITAL Current flow activates one or many LED's, LCD's, or fluorescent displays, which provide a relative or digital display.
	 MOTOR A power unit which converts electrical energy into mechanical energy, especially rotary motion.

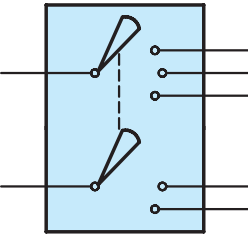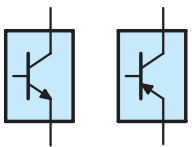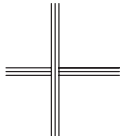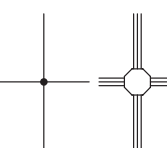
 RELAY Basically, an electrically operated switch which may be normally closed (1) or open (2). Current flow through a small coil creates a magnetic field which either opens or closes an attached switch. 1. NORMALLY CLOSED 2. NORMALLY OPEN	 SPEAKER An electromechanical device which creates sound waves from current flow.
 RELAY, DOUBLE THROW A relay which passes current through one set of contacts or the other.	SWITCH, MANUAL Opens and closes circuits, thereby stopping (1) or allowing (2) current flow. 1. NORMALLY OPEN  2. NORMALLY CLOSED 
 RESISTOR An electrical component with a fixed resistance, placed in a circuit to reduce voltage to a specific value.	SWITCH, DOUBLE THROW A switch which continuously passes current through one set of contacts or the other. 
 RESISTOR, TAPPED A resistor which supplies two or more different non adjustable resistance values.	SWITCH, IGNITION A key operated switch with several positions which allows various circuits, particularly the primary ignition circuit, to become operational. 
 RESISTOR, VARIABLE or RHEOSTAT A controllable resistor with a variable rate of resistance. Also called a potentiometer or rheostat.	SWITCH, WIPER PARK Automatically returns wipers to the stop position when the wiper switch is turned off. 
 SENSOR (Thermistor) A resistor which varies its resistance with temperature.	TRANSISTOR A solidstate device typically used as an electronic relay; stops or passes current depending on the voltage applied at "base". 
 SENSOR, SPEED Uses magnetic impulses to open and close a switch to create a signal for activation of other components. (Reed Switch Type)	WIRES Wires are always drawn as straight lines on wiring diagrams. Crossed wires (1) without a black dot at the junction are not joined; crossed wires (2) with a black dot or octagonal (○) mark at the junction are spliced (joined) connections. (1) NOT CONNECTED  (2) SPLICED 
 SHORT PIN Used to provide an unbroken connection within a junction block.	
 SOLENOID An electromagnetic coil which forms a magnetic field when current flows, to move a plunger, etc.	

F RELAY LOCATIONS


[Engine Compartment]

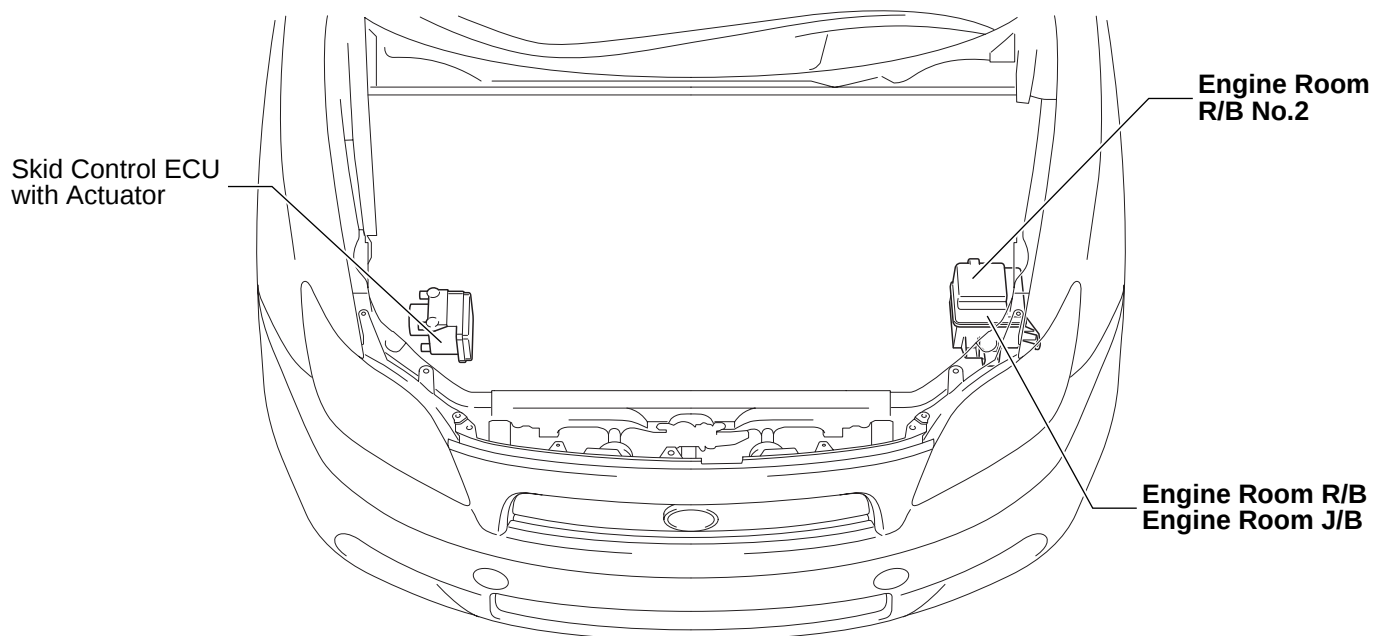

[Body]

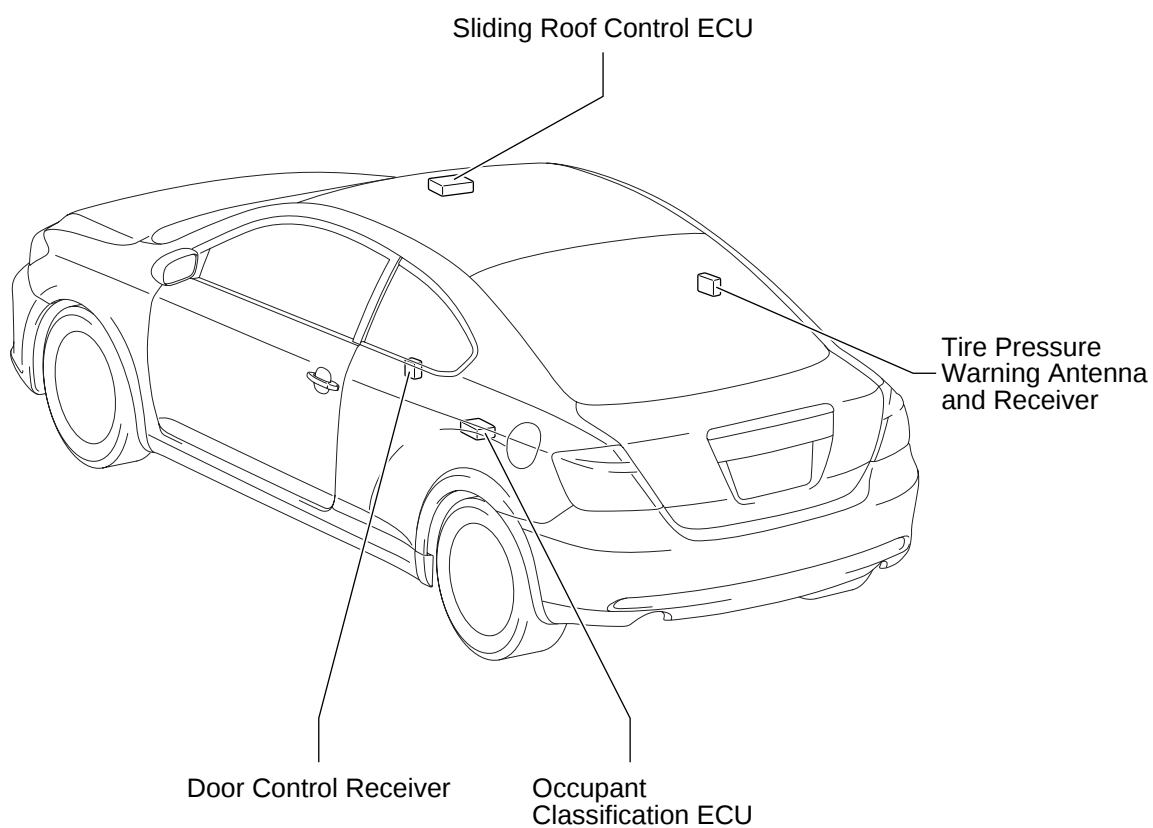


[Instrument Panel]

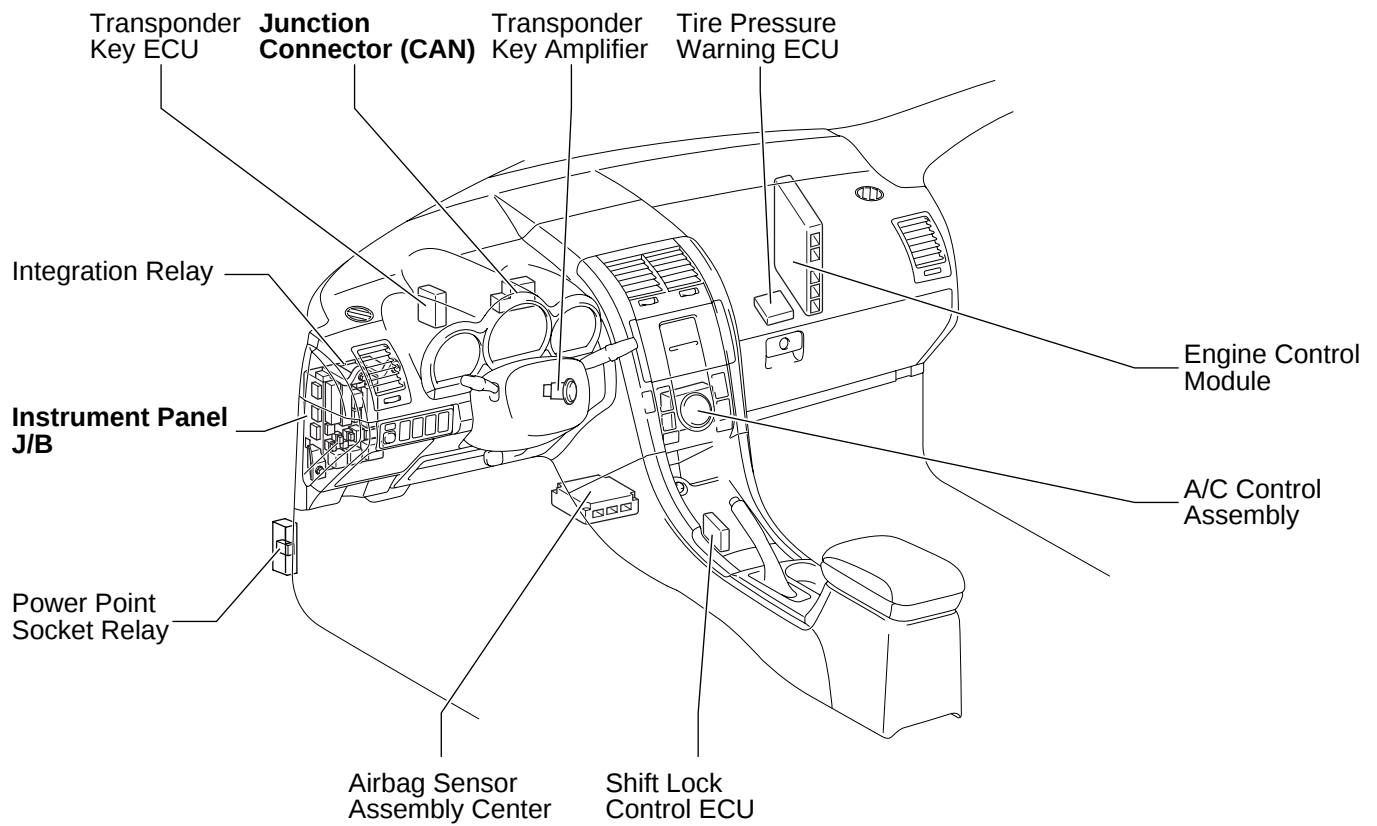


F RELAY LOCATIONS

② : Engine Room R/B	Engine Compartment Left (See Page 20)
○ : Engine Room J/B	


- * 1:H-LP RH LO
- * 2:H-LP LH LO
- * 3:H-LP RH HI
- * 4:H-LP LH HI

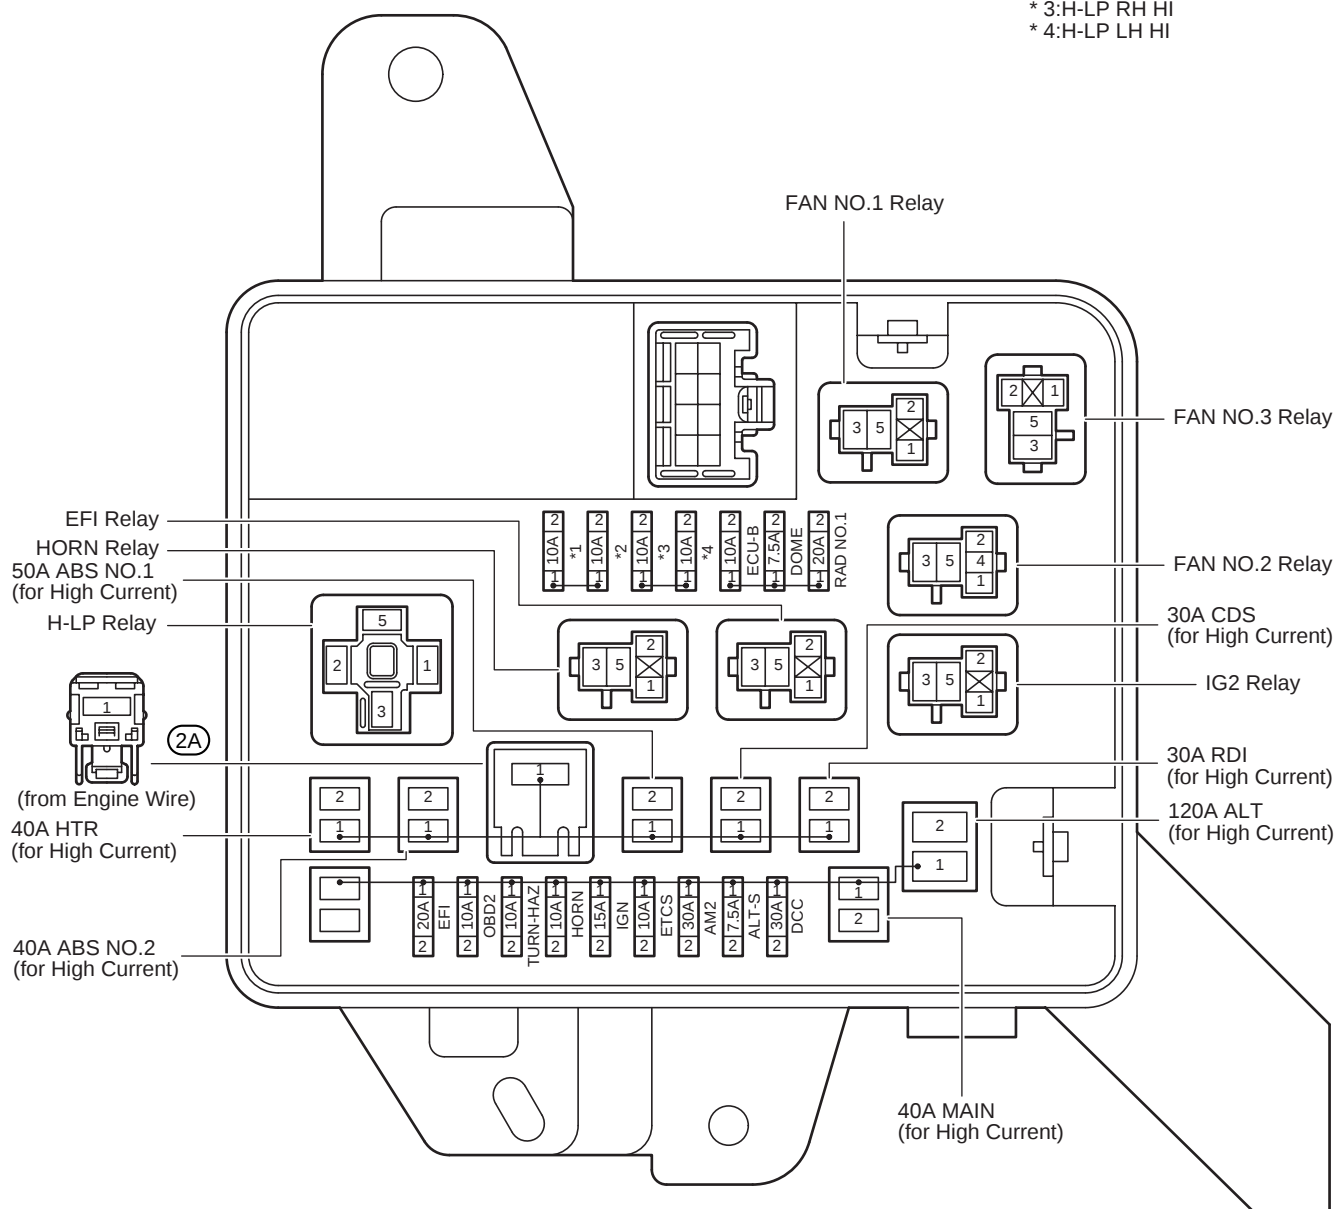


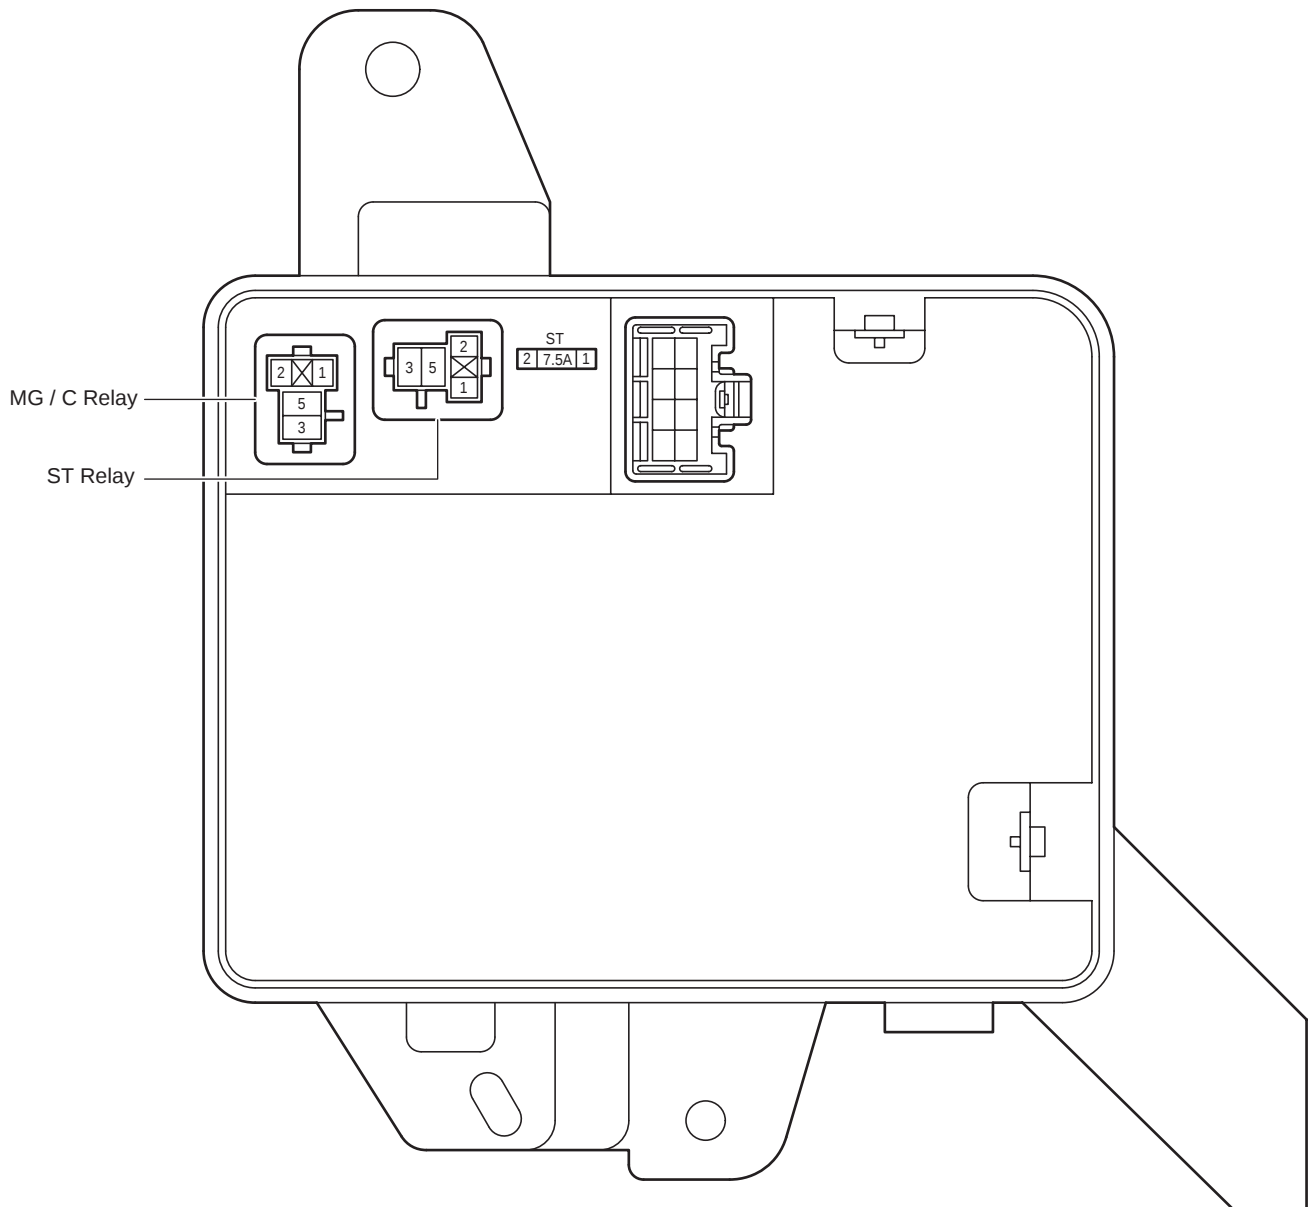③ : Engine Room R/B No.2 Inside of the Engine Room R/B Box (See Page 20)

F RELAY LOCATIONS


○ : Instrument Panel J/B Lower Finish Panel (See Page 21)

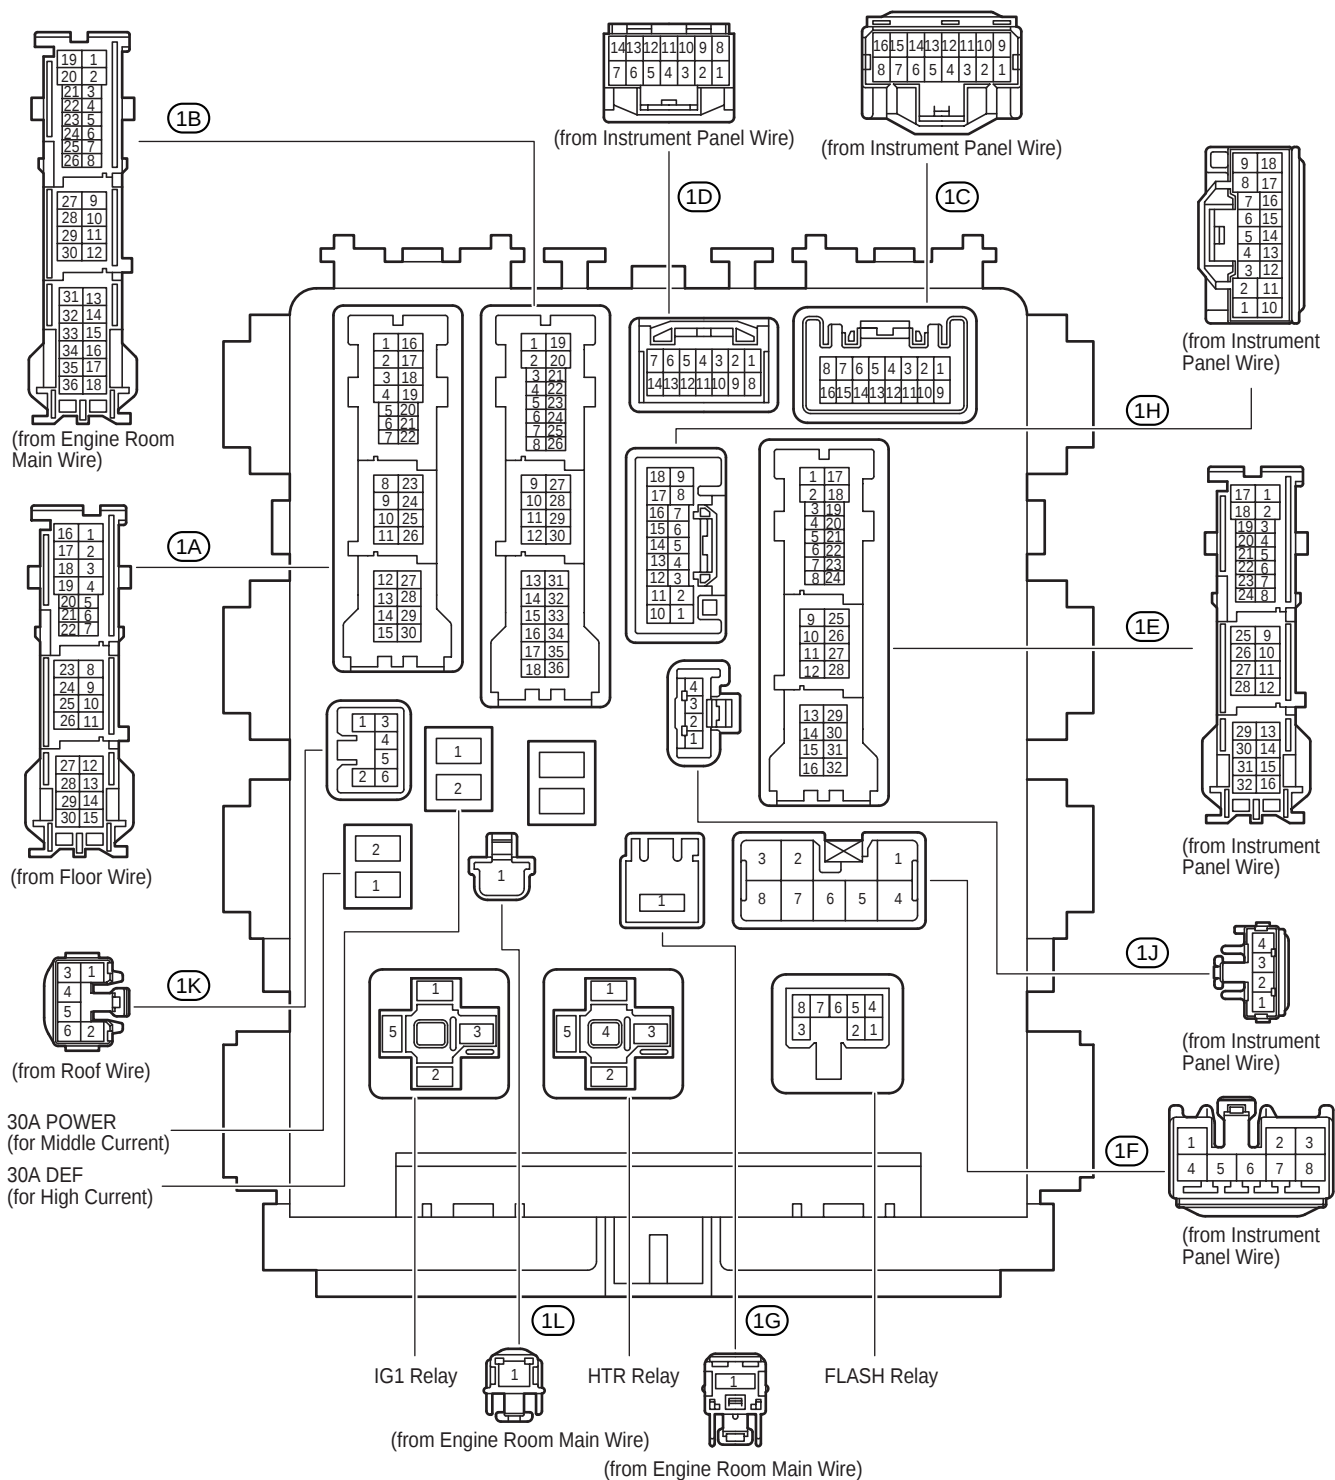

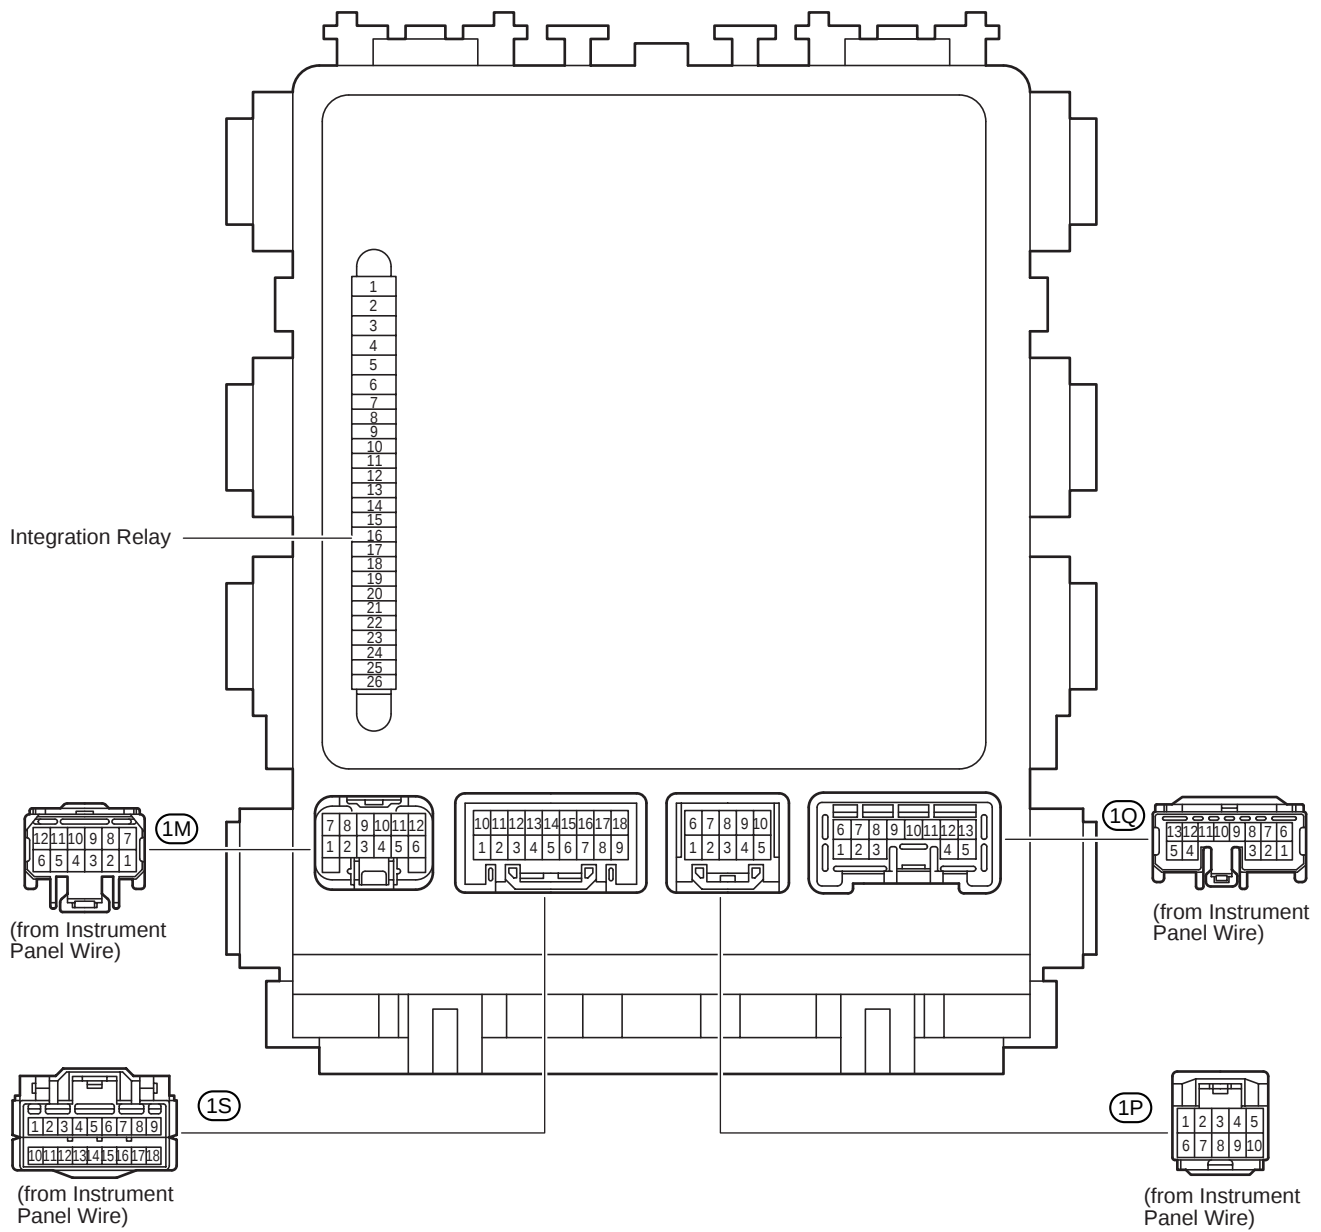

F RELAY LOCATIONS

 : Instrument Panel J/B	Lower Finish Panel (See Page 21)
--	----------------------------------

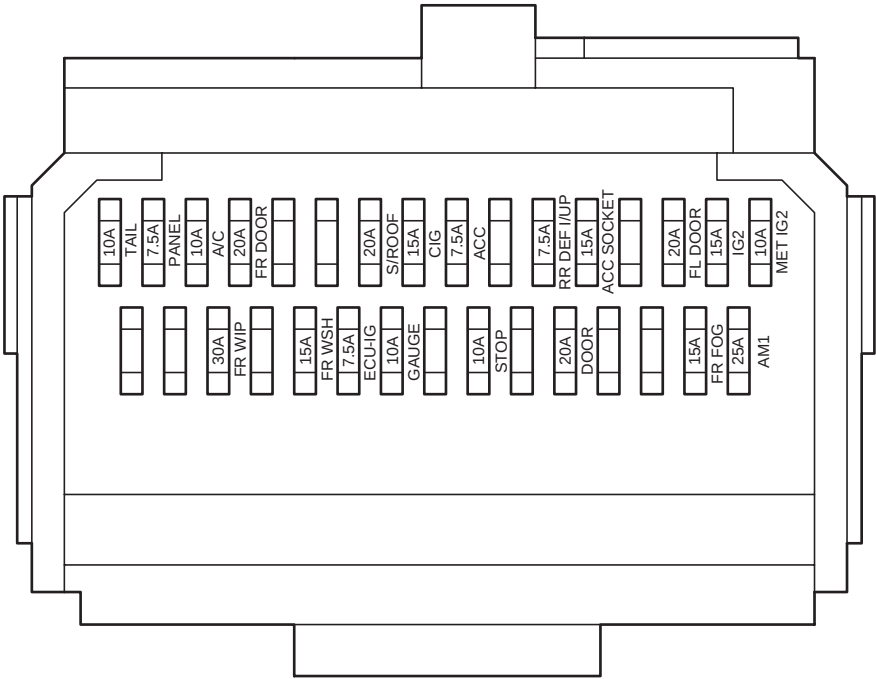


cardiagn.com

F RELAY LOCATIONS


[Instrument Panel J/B Inner Circuit]

* 1:w/ Jam Protection
* 2:w/o Jam Protection

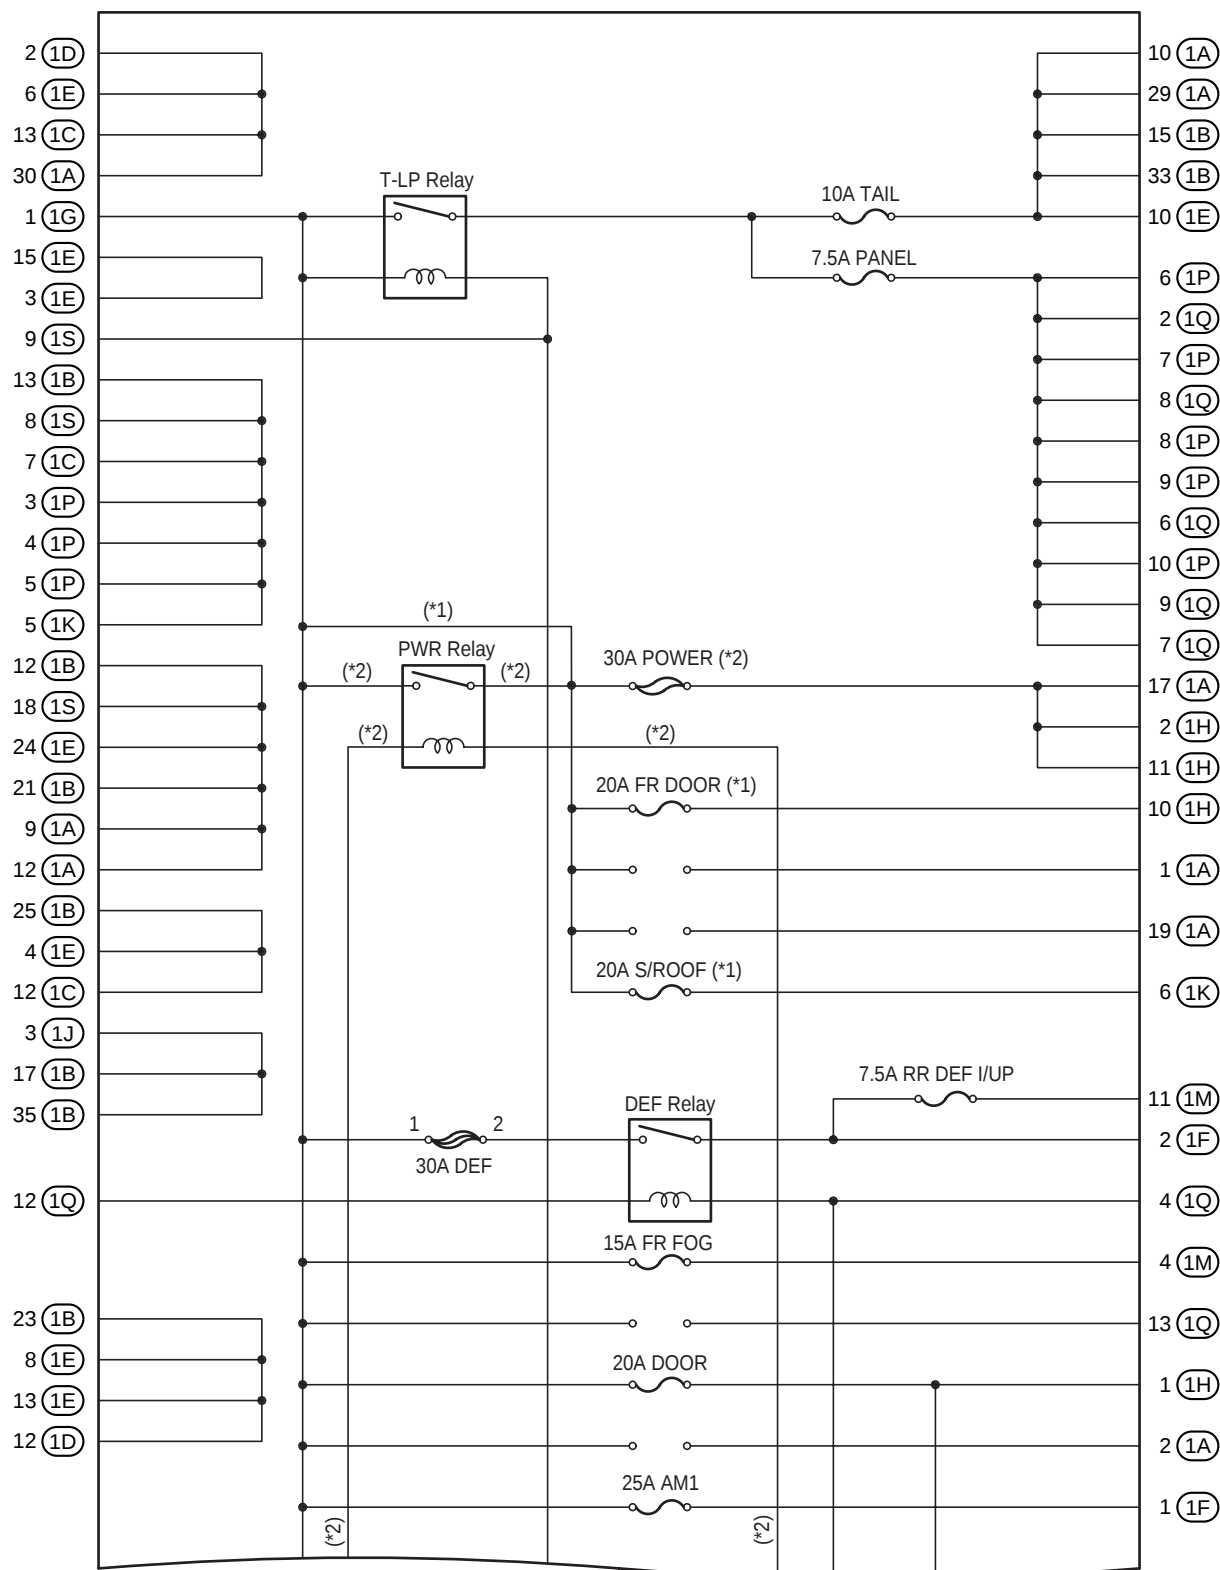

(Cont. Next Page)

(Cont'd)

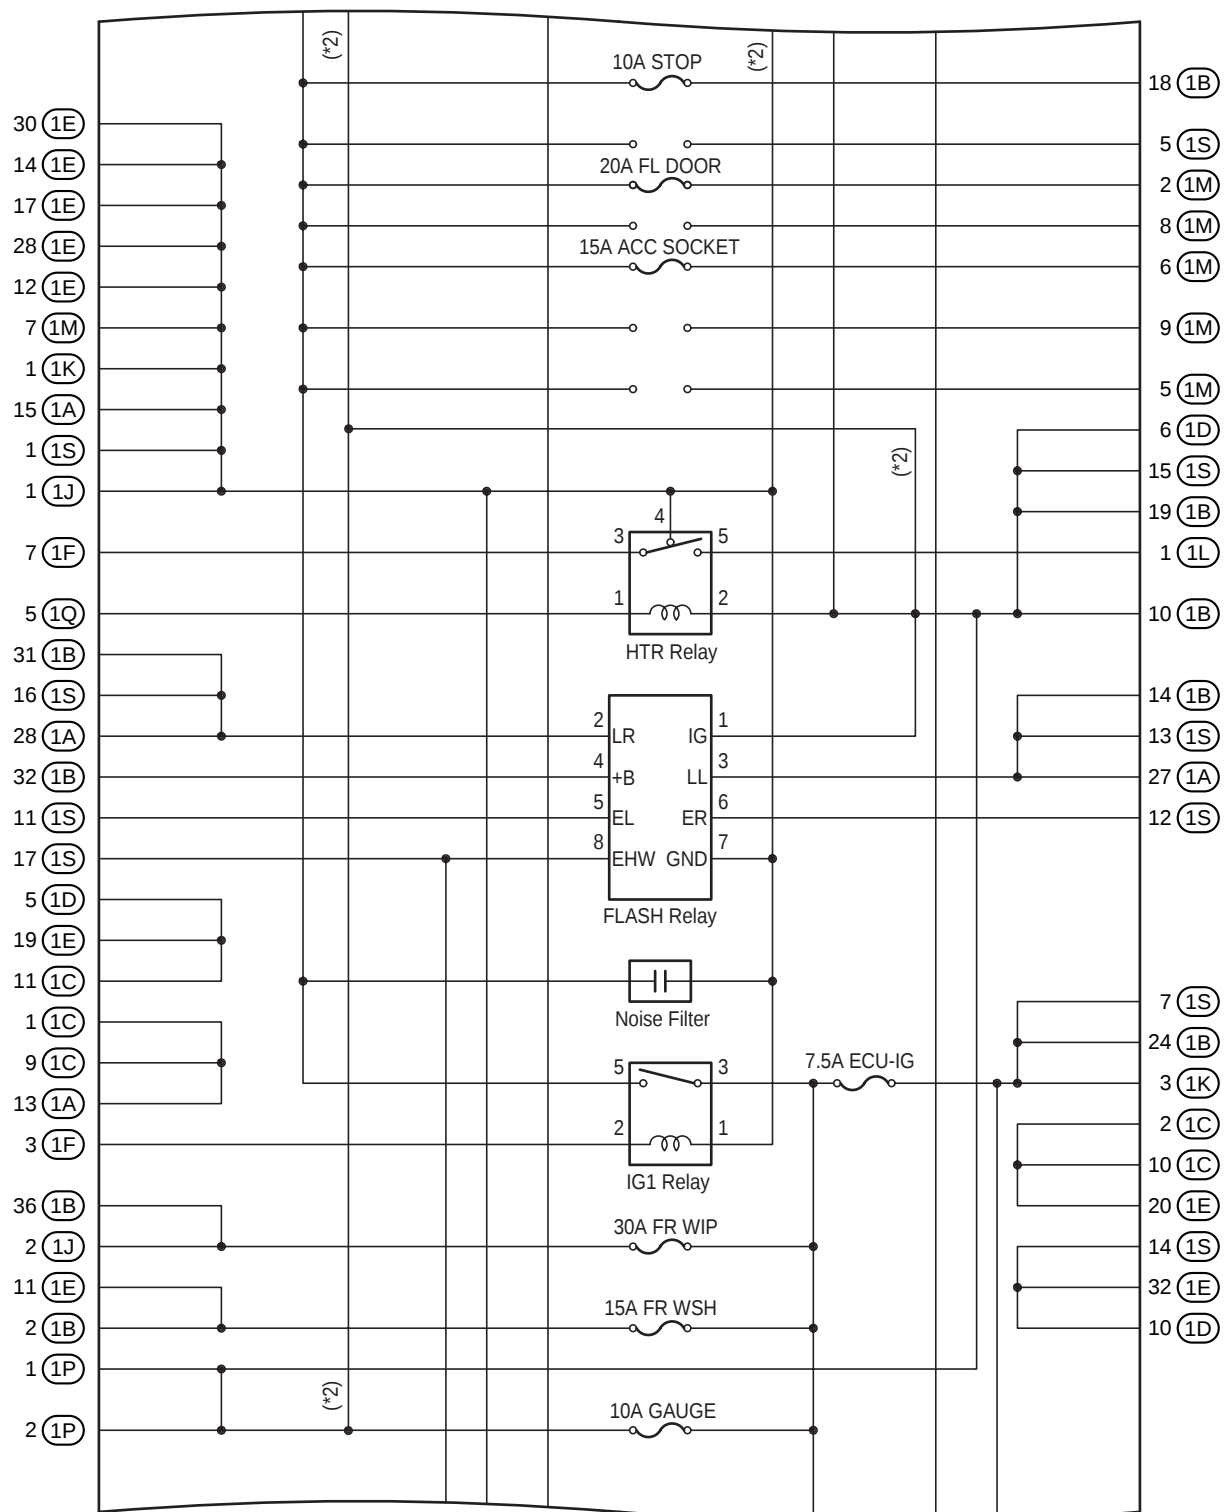


(Cont. Next Page)

[Instrument Panel J/B Inner Circuit]

The diagram illustrates the internal wiring of a control panel. On the left, a vertical busbar contains terminals labeled 25 (1A), 11 (1Q), 10 (1Q), 1 (1Q), 29 (1B), 10 (1S), 10 (1M), 8 (1F), 18 (1E), 2 (1E), 11 (1B), 5 (1E), 9 (1B), 15 (1C), 21 (1E), 27 (1B), 16 (1E), 1 (1M), 12 (1M), 3 (1Q), 4 (1S), 6 (1S), and 14 (1D). On the right, another vertical busbar contains terminals 8 (1A), 1 (1D), 4 (1F), and 5 (1F). The wiring includes a 10A A/C fuse connected to terminals 10 (1M) and 8 (1F). A C/OPN Relay is connected to terminals 11 (1B) and 5 (1E). A 15A IG2 fuse is connected to terminals 21 (1E) and 4 (1F). A 10A MET IG2 fuse is connected to terminals 1 (1M) and 5 (1F). A 15A CIG fuse is connected to terminals 3 (1Q) and 5 (1F). A 7.5A ACC fuse is connected to terminals 4 (1S) and 5 (1F). The diagram also shows a 10A A/C fuse connected to terminals 10 (1M) and 8 (1F).

(Cont. Next Page)


(Cont'd)

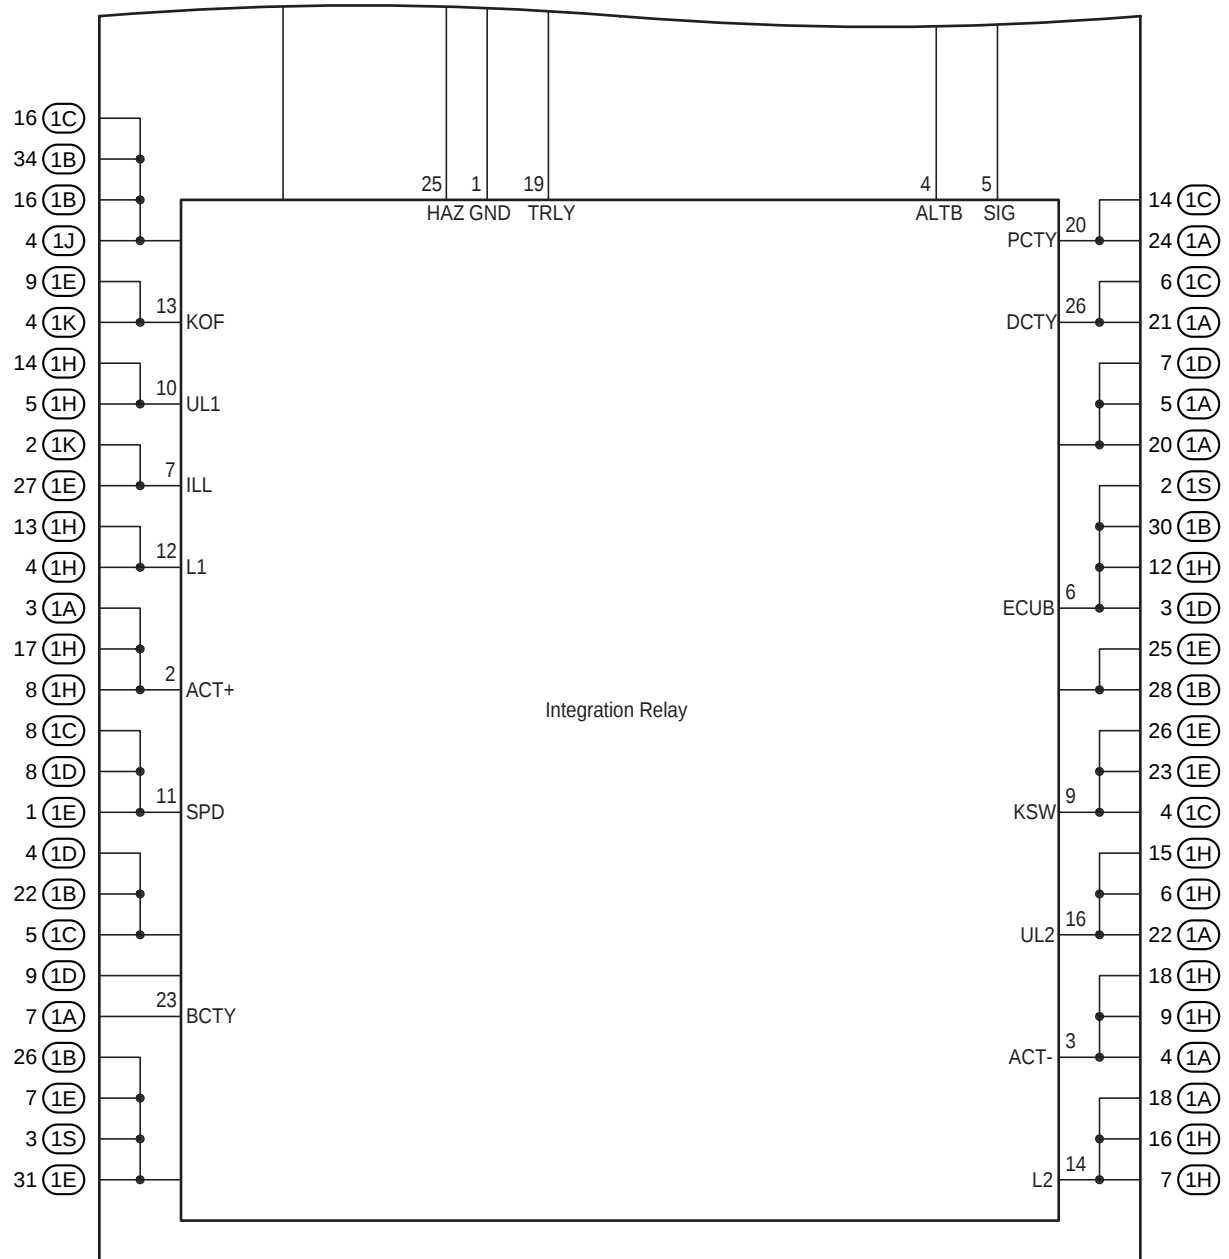


F RELAY LOCATIONS

Junction Connector
(CAN)

Behind of the Combination Meter (See Page 21)

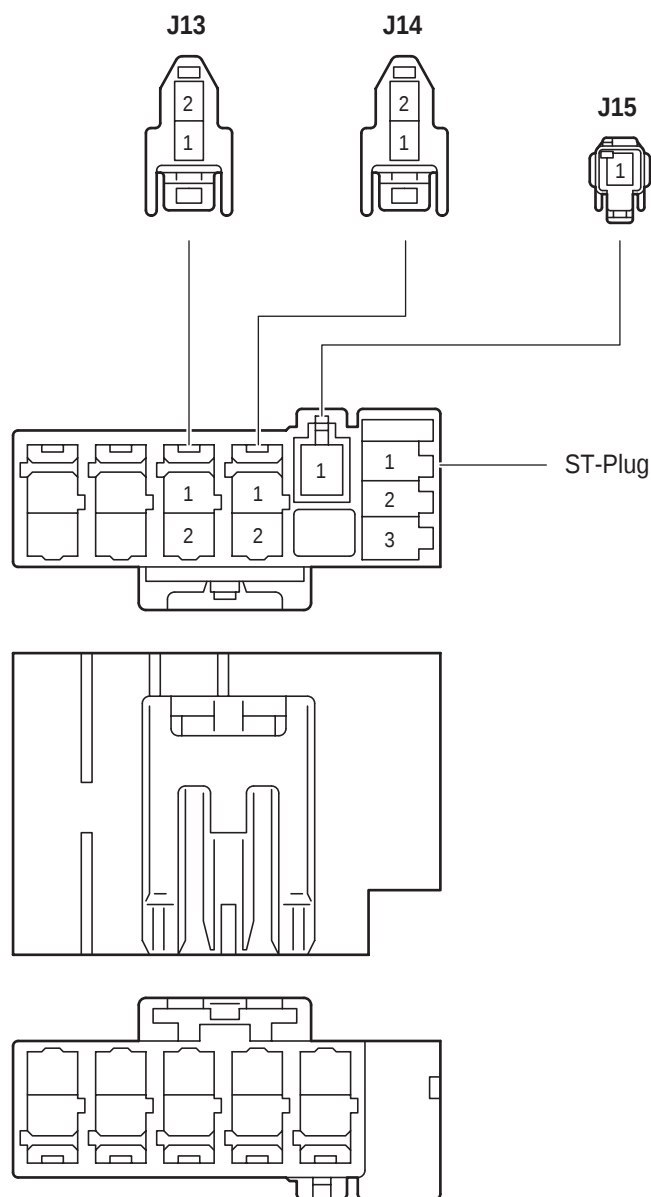


[Junction Connector Inner Circuit] (CAN)

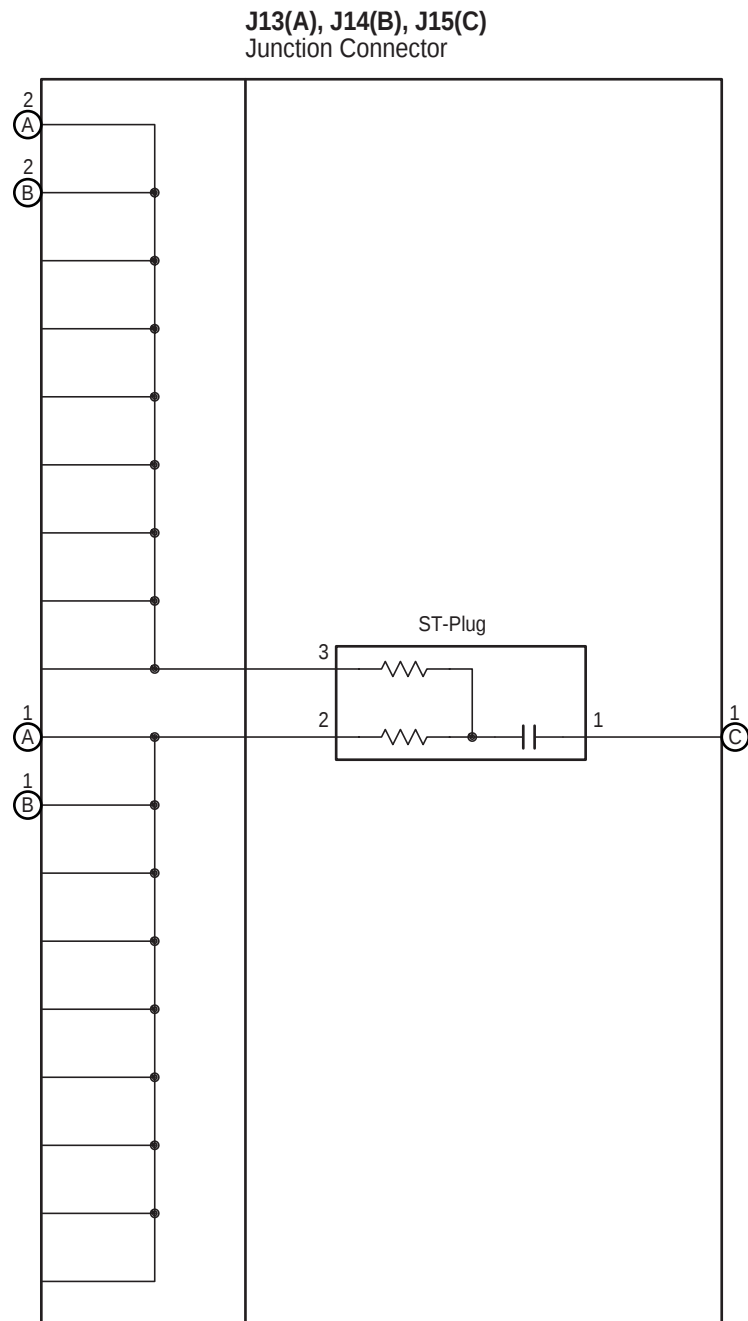

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

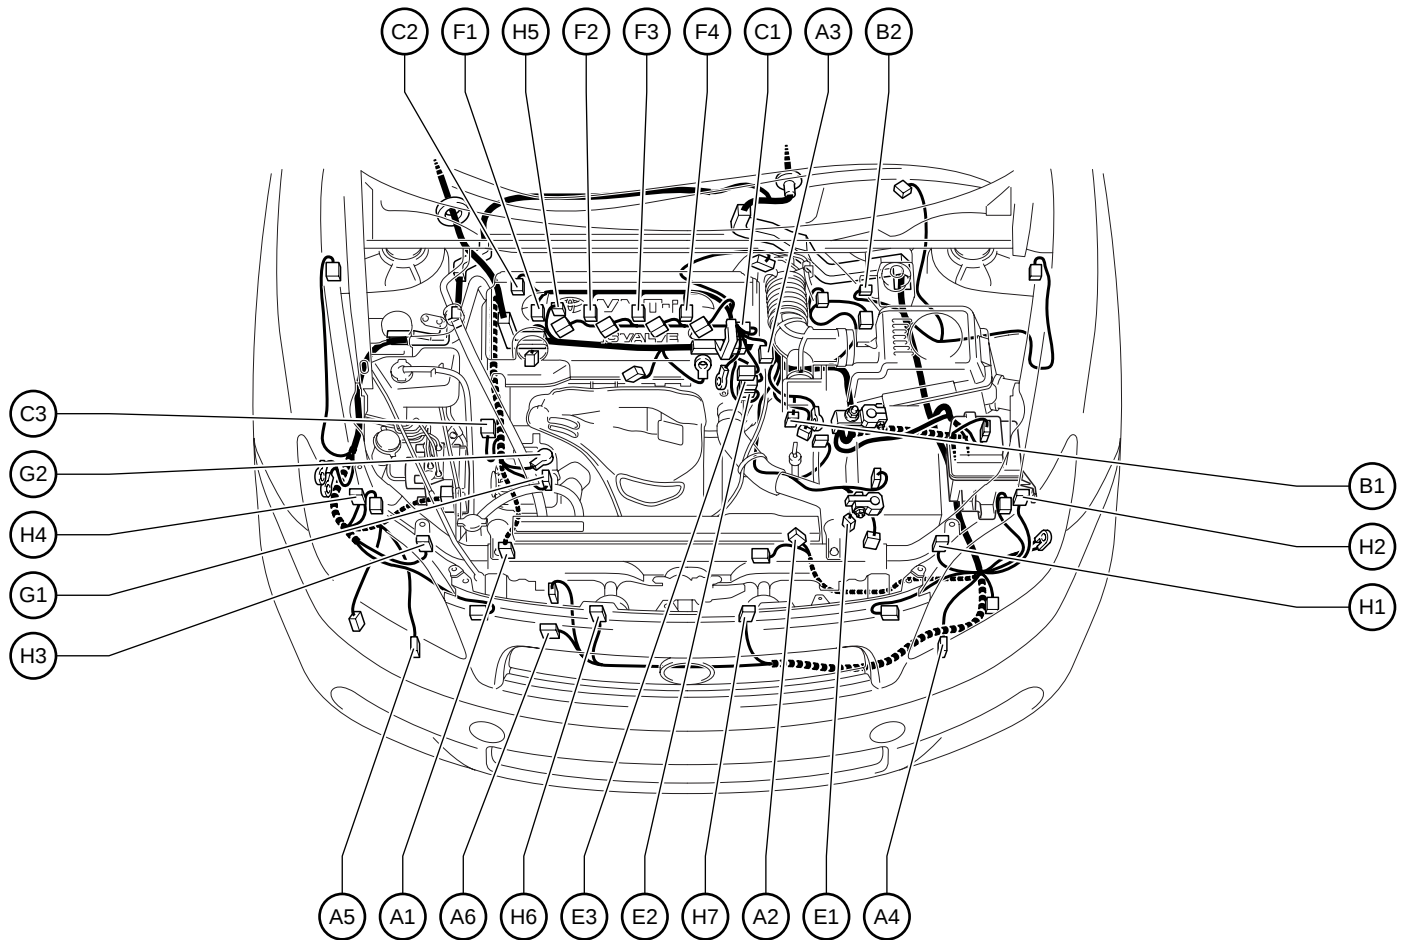

- A 1 A/C Compressor
- A 2 A/C Condenser Fan Motor
- A 3 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 4 Airbag Sensor (Front LH)
- A 5 Airbag Sensor (Front RH)
- A 6 Ambient Temp. Sensor

- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Crankshaft Position Sensor


- E 1 Electronically Controlled Transmission Solenoid
- E 2 Engine Coolant Temp. Sensor
- E 3 Engine Oil Pressure SW

- F 1 Fuel Injector (No.1)
- F 2 Fuel Injector (No.2)
- F 3 Fuel Injector (No.3)
- F 4 Fuel Injector (No.4)

- G 1 Generator
- G 2 Generator

- H 1 Headlamp (LH High)
- H 2 Headlamp (LH Low)
- H 3 Headlamp (RH High)
- H 4 Headlamp (RH Low)
- H 5 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 6 Horn (Low)
- H 7 Horn (High)

Position of Parts in Engine Compartment

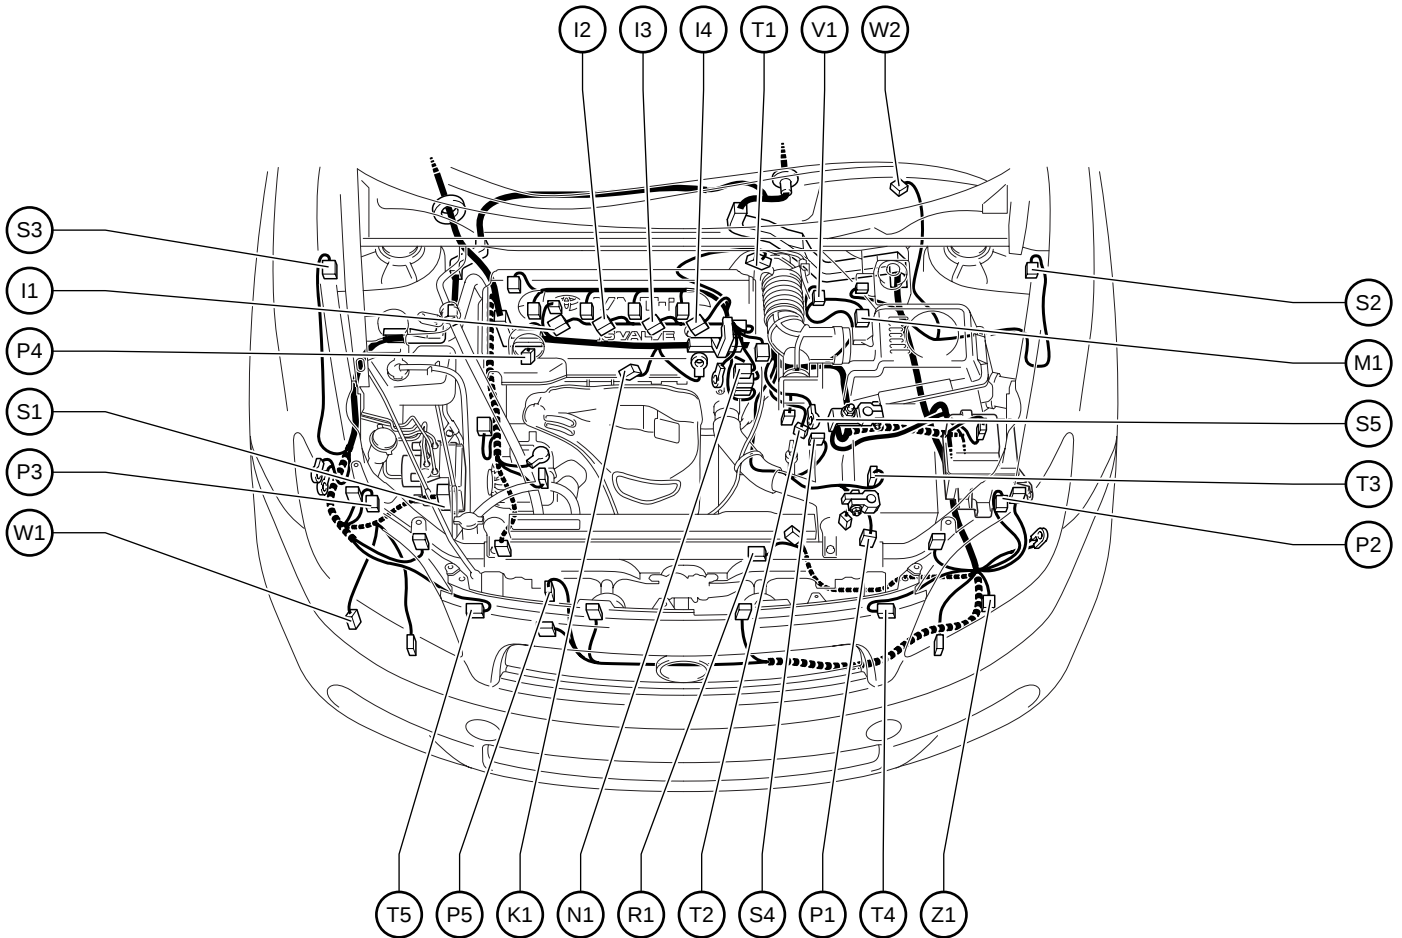

- I 1 Ignition Coil (No.1)
- I 2 Ignition Coil (No.2)
- I 3 Ignition Coil (No.3)
- I 4 Ignition Coil (No.4)

- K 1 Knock Control Sensor (Bank 1)

- M 1 Mass Air Flow Meter

- N 1 Noise Filter (Ignition)

- P 1 Park/Neutral Position SW

- P 2 Parking Lamp (LH)

- P 3 Parking Lamp (RH)

- P 4 Power Steering Oil Pressure SW

- P 5 Pressure SW

- R 1 Radiator Fan Motor

- S 1 Skid Control ECU with Actuator

- S 2 Speed Sensor (Front LH)

- S 3 Speed Sensor (Front RH)

- S 4 Starter

- S 5 Starter

- T 1 Throttle Body Assembly

- T 2 Transmission Revolution Sensor (Counter Gear)

- T 3 Transmission Revolution Sensor (Turbine)

- T 4 Turn Signal Lamp (Front LH)

- T 5 Turn Signal Lamp (Front RH)

- V 1 VSV (Purge)


- W 1 Windshield Washer Motor

- W 2 Windshield Wiper Motor

- Z 1 Option Connector (Front Fog Lamp)


G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

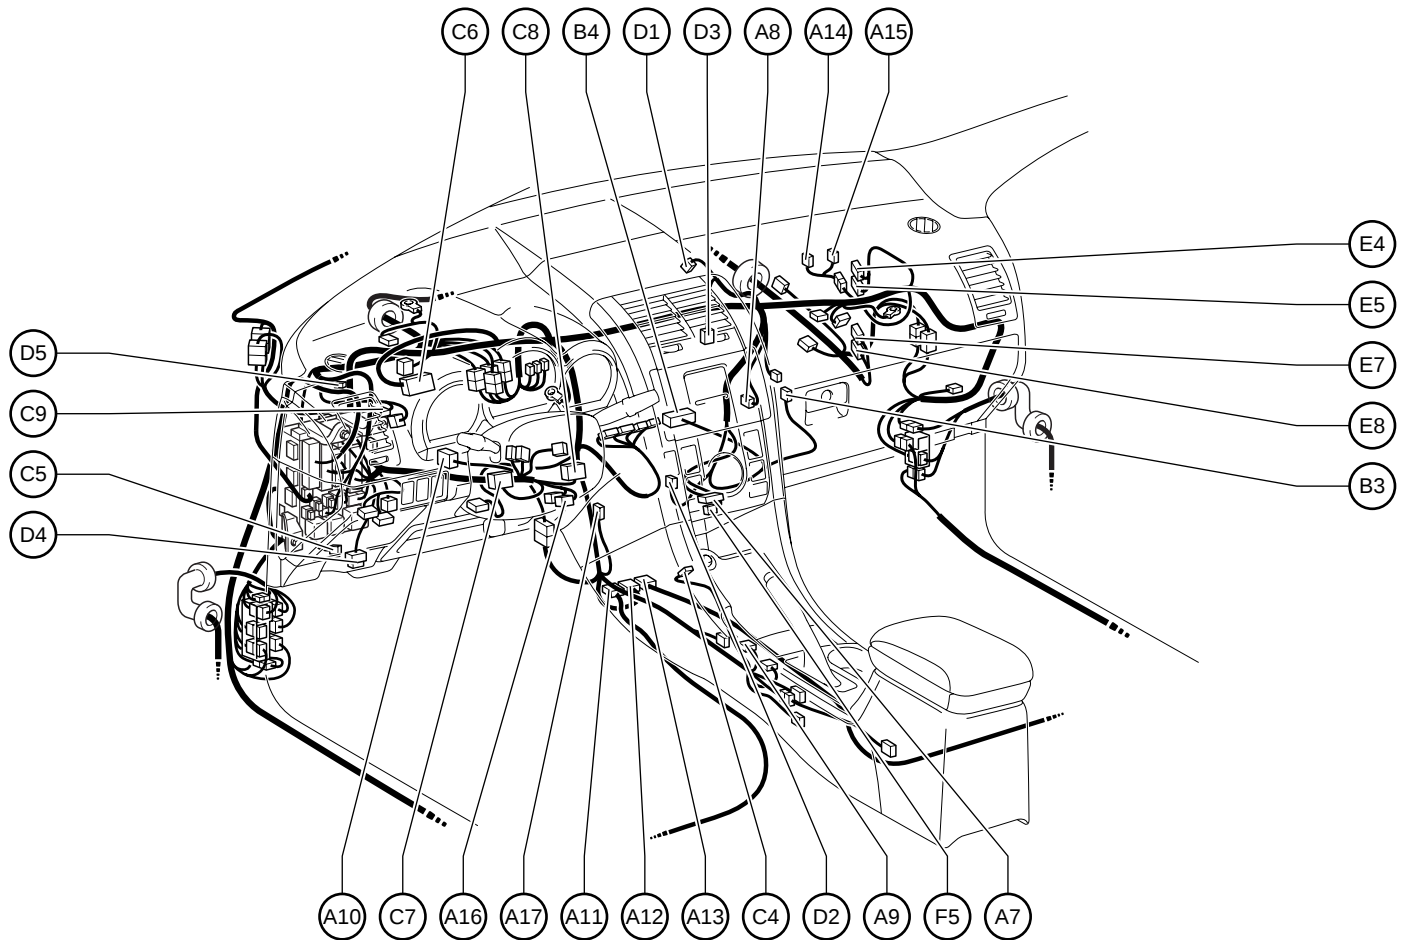

- | | |
|--|--|
| A 7 A/C Control Assembly | D 1 Damper Servo Motor (Air Inlet) |
| A 8 A/C Thermistor No.1 | D 2 Damper Servo Motor (Air Mix) |
| A 9 A/T Shift Lever Illumination | D 3 Damper Servo Motor (Air Vent Mode) |
| A10 Accelerator Position Sensor | D 4 Data Link Connector 3 |
| A11 Airbag Sensor Assembly Center | D 5 Diode (Fan) |
| A12 Airbag Sensor Assembly Center | E 4 Engine Control Module |
| A13 Airbag Sensor Assembly Center | E 5 Engine Control Module |
| A14 Airbag Squib (Front Passenger's Airbag Assembly) | E 7 Engine Control Module |
| A15 Airbag Squib (Front Passenger's Airbag Assembly) | E 8 Engine Control Module |
| A16 Airbag Squib (Steering Wheel Pad) | |
| A17 Antenna Amplifier | |
| | F 5 Front Console Illumination |
| B 3 Blower Motor | |
| B 4 Blower Motor Control | |
| C 4 Cigarette Lighter | |
| C 5 Clutch Start SW | |
| C 6 Combination Meter | |
| C 7 Combination SW | |
| C 8 Combination SW | |
| C 9 Cruise Control Clutch SW | |

Position of Parts in Instrument Panel

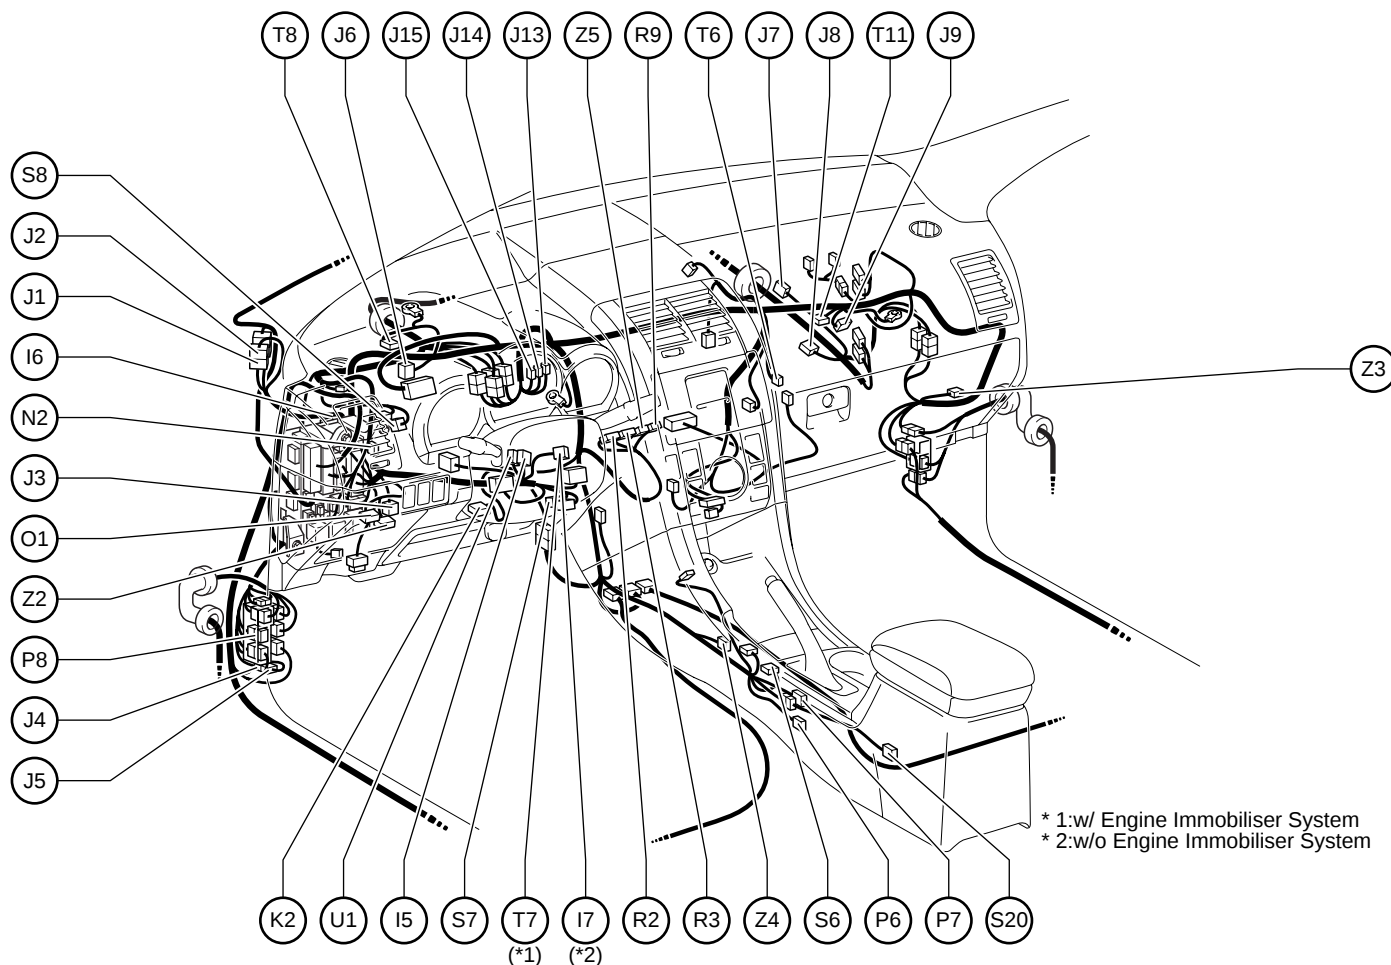

I 5 Ignition SW
I 6 Integration Relay
I 7 Ignition Cylinder Lamp

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector

K 2 Knee Airbag Squib

N 2 Noise Filter (DOME)

O 1 Outer Mirror SW

P 6 Parking Brake SW
P 7 Power Point Socket
P 8 Power Point Socket Relay

R 2 Radio Receiver Assembly
R 3 Radio Receiver Assembly
R 9 Radio Receiver Assembly

S 6 Shift Lock Control ECU
S 7 Spiral Cable
S 8 Stop Lamp SW
S20 Stereo Jack Adapter


T 6 Tire Pressure Warning Reset SW
T 7 Transponder Key Amplifier
T 8 Transponder Key ECU
T 11 Tire Pressure Warning ECU

U 1 Unlock Warning SW

Z 2 Option Connector (Front Fog Lamp SW)
Z 3 Option Connector (TVIP)
Z 4 Option Connector (IPOD Unit)
Z 5 Option Connector (Radio Receiver Assembly)

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

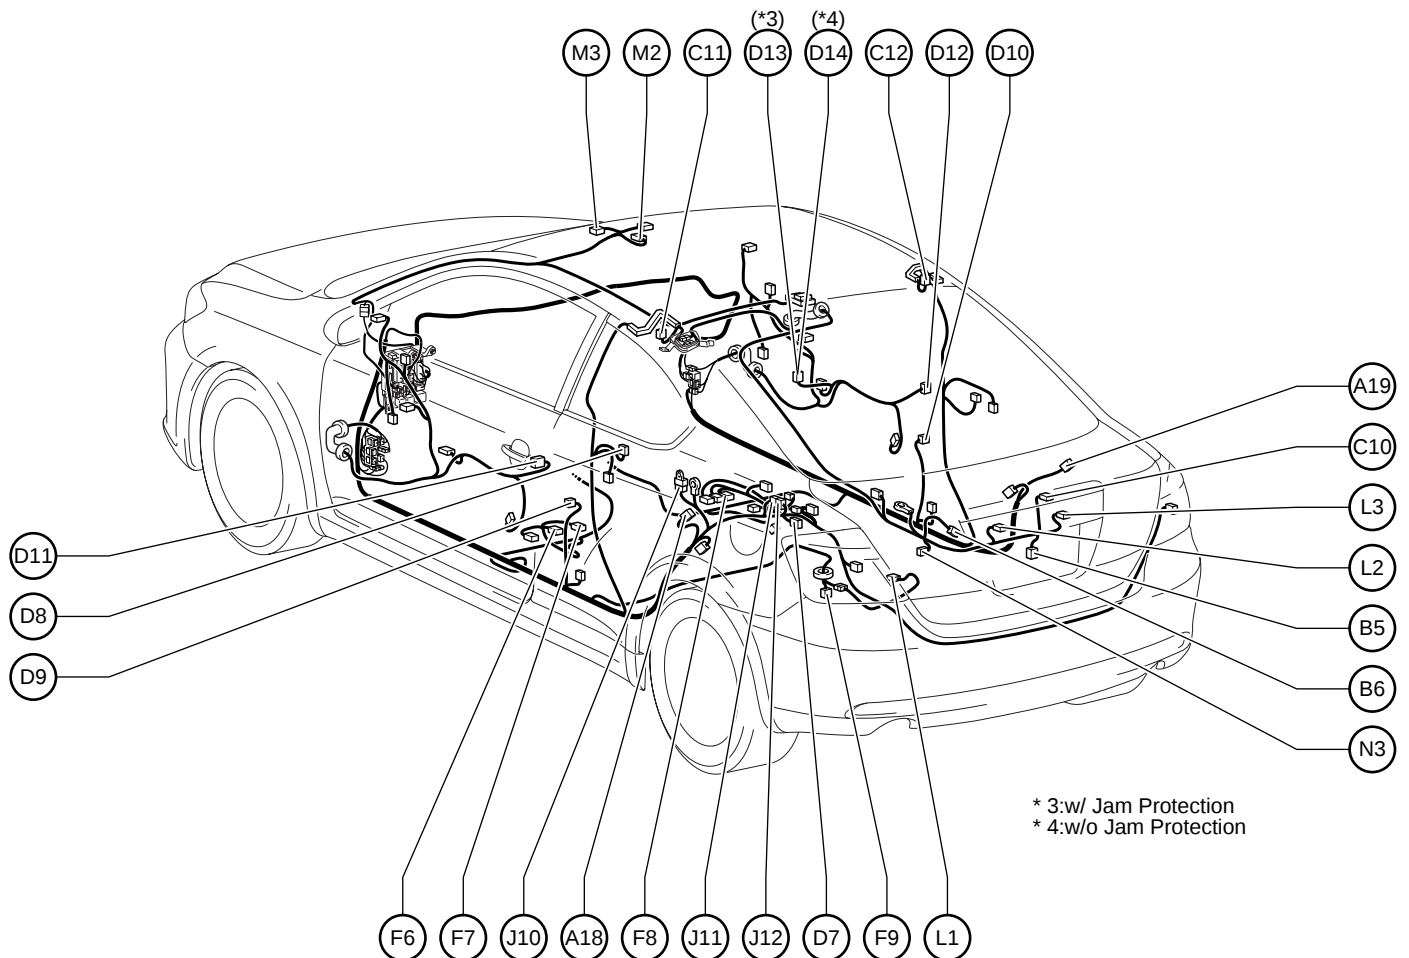

A18 Airbag Sensor (Rear LH)

A19 Airbag Sensor (Rear RH)

B 5 Back Door Lock Assembly

B 6 Back Door Opener SW

C10 Center Stop Lamp

C11 Curtain Shield Airbag Squib (LH)

C12 Curtain Shield Airbag Squib (RH)

D 7 Diode (Room Lamp)

D 8 Door Control Receiver

D 9 Door Courtesy SW (Driver's Side)

D10 Door Courtesy SW (Front Passenger's Side)

D11 Door Lock Assembly (Driver's Side)

D12 Door Lock Assembly (Front Passenger's Side)

D13 Door Lock Control SW

D14 Door Lock Control SW

F 6 Front Seat Inner Belt (Driver's Side)

F 7 Front Seat Inner Belt (Driver's Side)

F 8 Front Seat Inner Belt (Front Passenger's Side)

F 9 Fuel Suction Pump and Gage Assembly

J 10 Junction Connector

J 11 Junction Connector

J 12 Junction Connector

L 1 Canister Pump Module

L 2 License Plate Lamp (LH)


L 3 License Plate Lamp (RH)

M 2 Map Lamp

M 3 Map Lamp

N 3 Noise Filter (DEF and Stop)

Position of Parts in Body

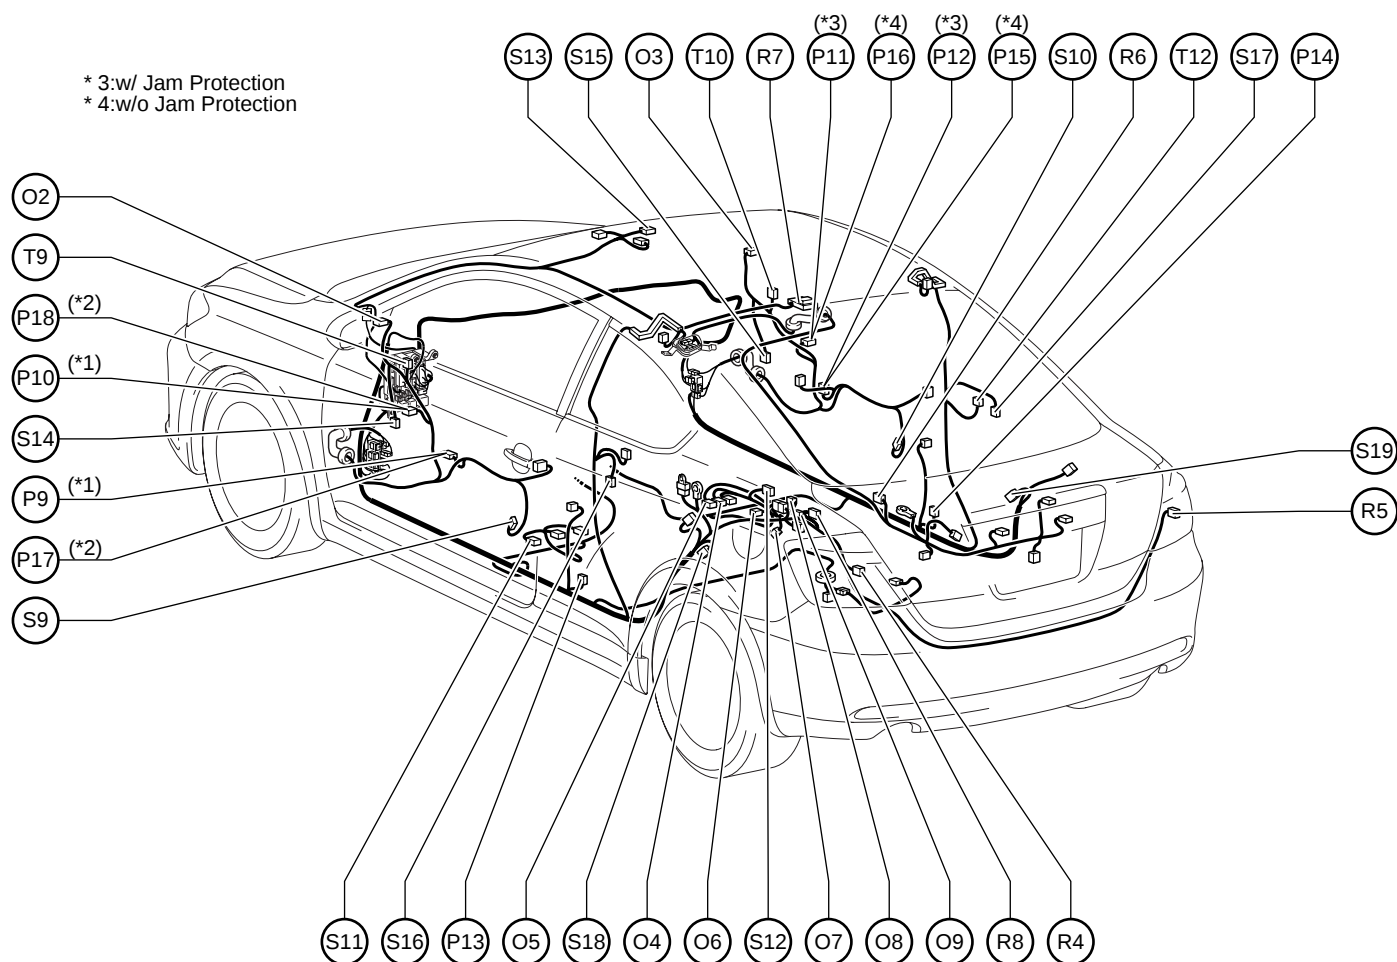

O 2 Outer Rear View Mirror (LH)
O 3 Outer Rear View Mirror (RH)
O 4 Occupant Classification ECU
O 5 Occupant Classification ECU
O 6 Occupant Classification Sensor Front LH
O 7 Occupant Classification Sensor Rear LH
O 8 Occupant Classification Sensor Front RH
O 9 Occupant Classification Sensor Rear RH

P 9 Power Window Master SW
P10 Power Window Regulator Motor (Front LH)
P11 Power Window Regulator Motor (Front RH)
P12 Power Window SW (Front Passenger's Side)
P13 Pretensioner (LH)
P14 Pretensioner (RH)
P15 Power Window SW (Front Passenger's Side)
P16 Power Window Regulator Motor (Front RH)
P17 Power Window Master SW
P18 Power Window Regulator Motor (Front LH)

R 4 Rear Combination Lamp (LH)
R 5 Rear Combination Lamp (RH)
R 6 Rear Window Defogger
R 7 Room Lamp (Center)
R 8 Room Lamp (Left Quarter)


S 9 Side Airbag Sensor (LH)
S10 Side Airbag Sensor (RH)
S11 Side Airbag Squib (LH)
S12 Side Airbag Squib (RH)
S13 Sliding Roof Control ECU
S14 Speaker (Front Door LH)
S15 Speaker (Front Door RH)
S16 Speaker (Rear LH)
S17 Speaker (Rear RH)
S18 Speed Sensor (Rear LH)
S19 Speed Sensor (Rear RH)

T 9 Tweeter (LH)
T10 Tweeter (RH)
T12 Tire Pressure Warning Antenna and Receiver

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

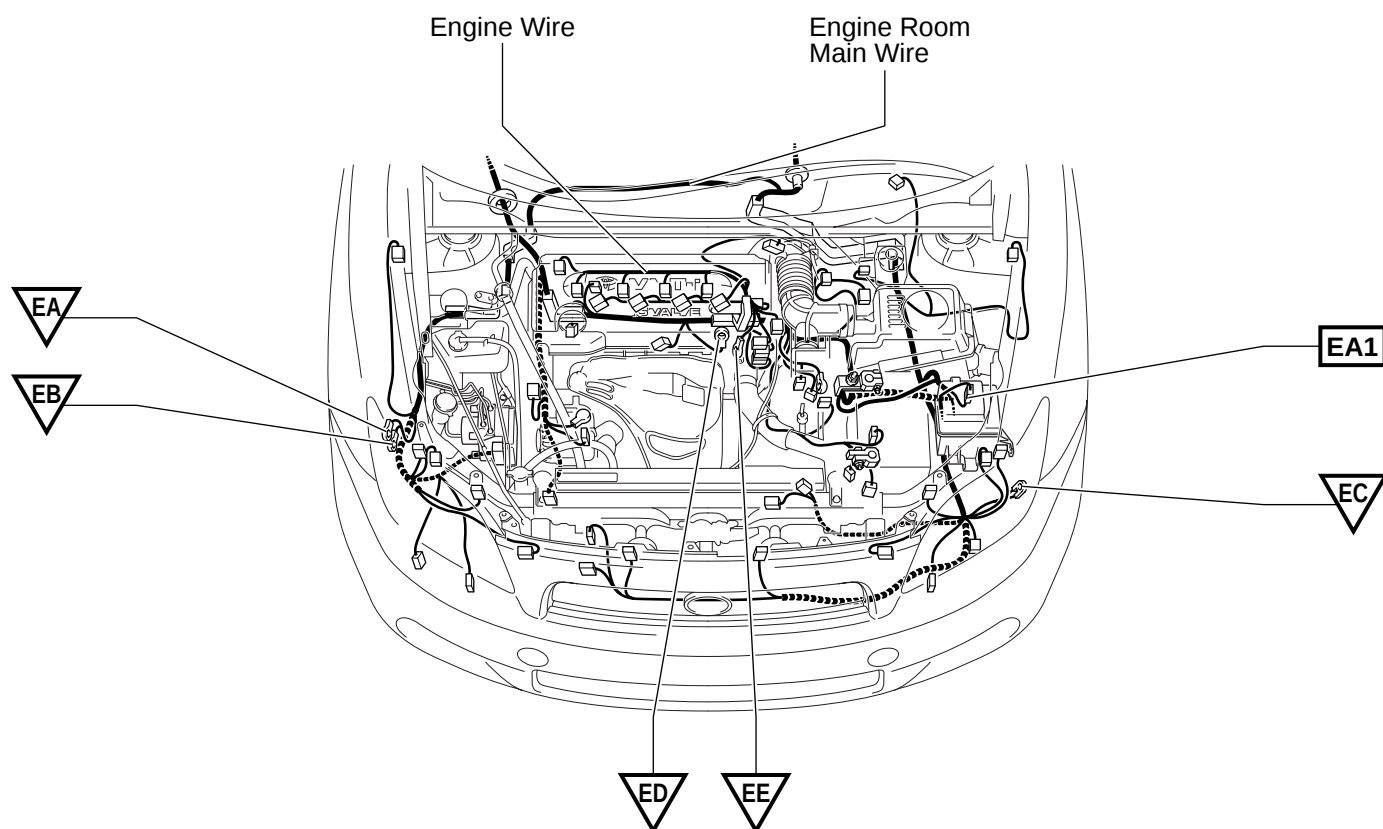


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

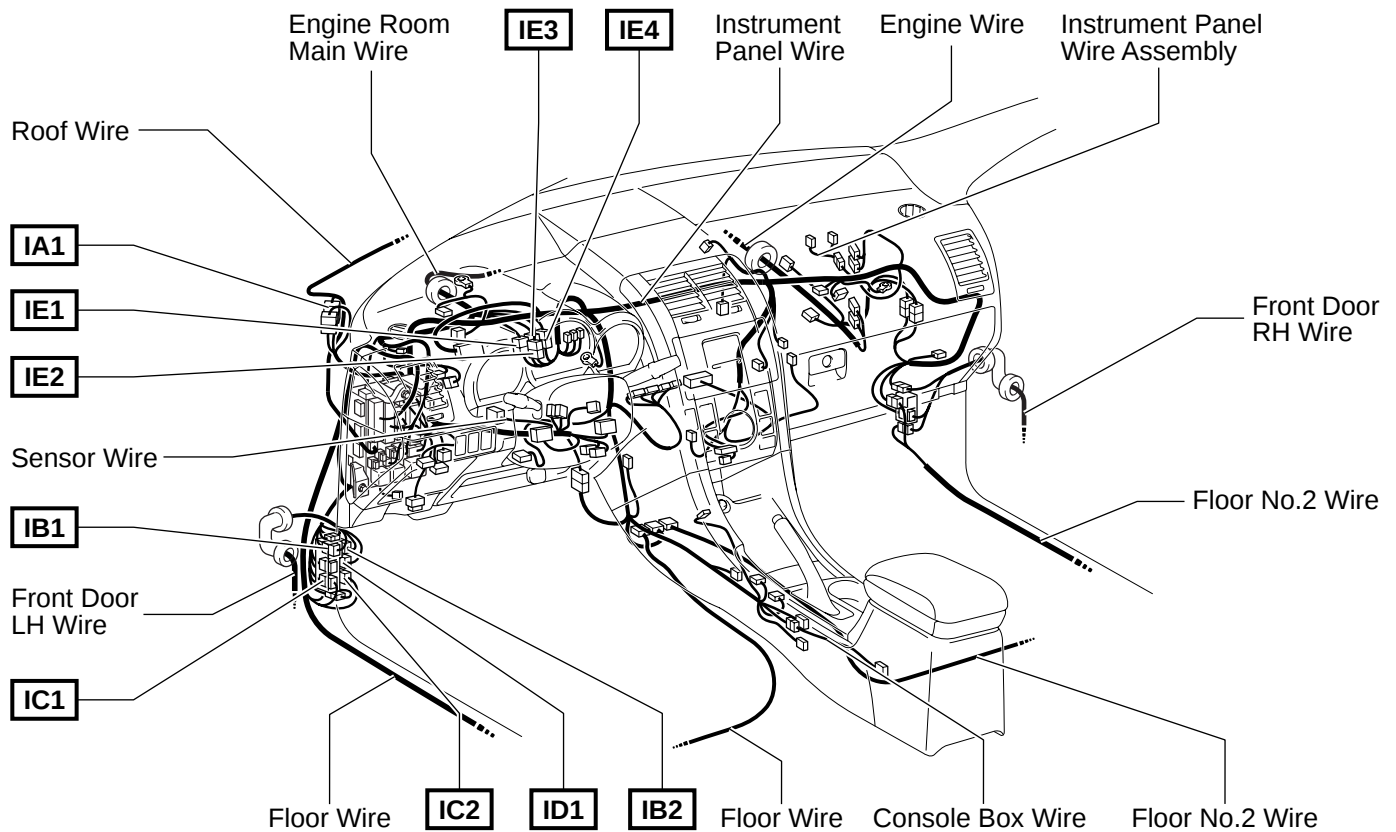

▽ : Location of Ground Points

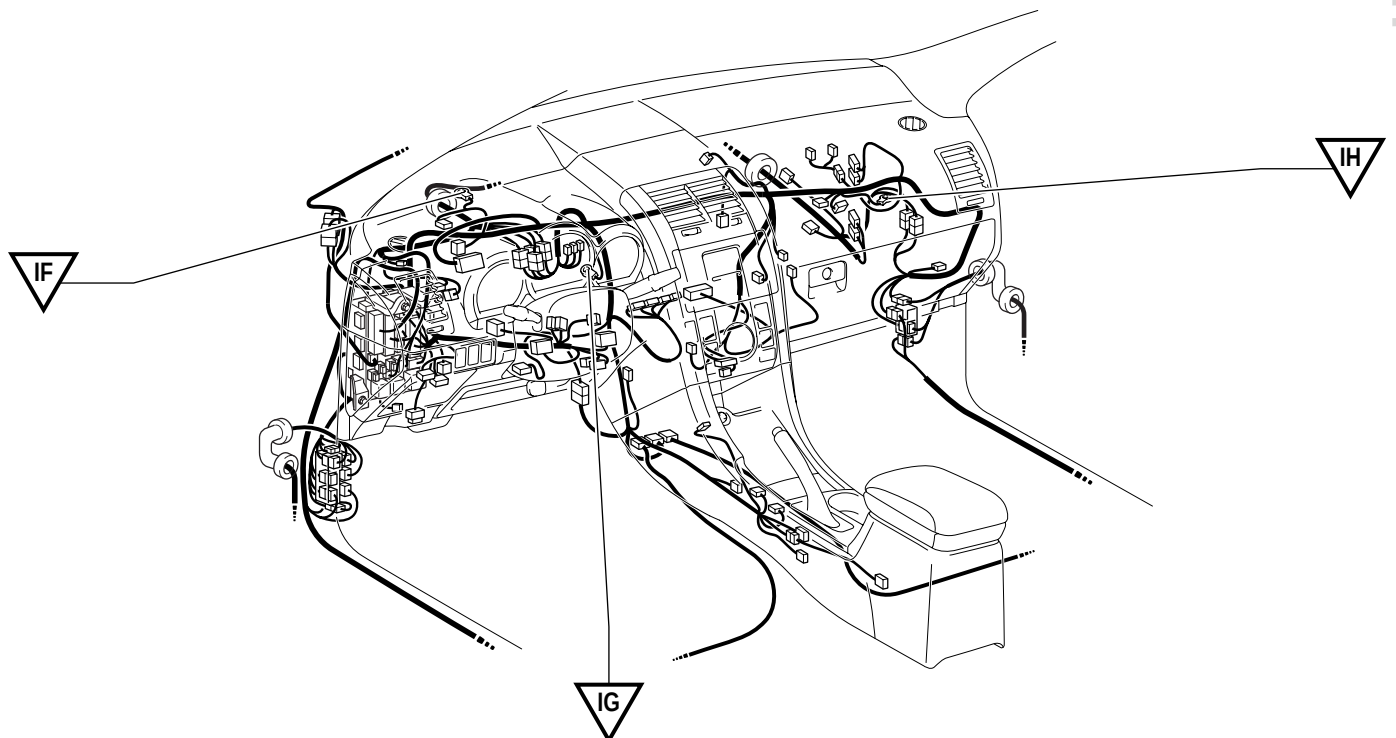

□ : Location of Connector Joining Wire Harness and Wire Harness

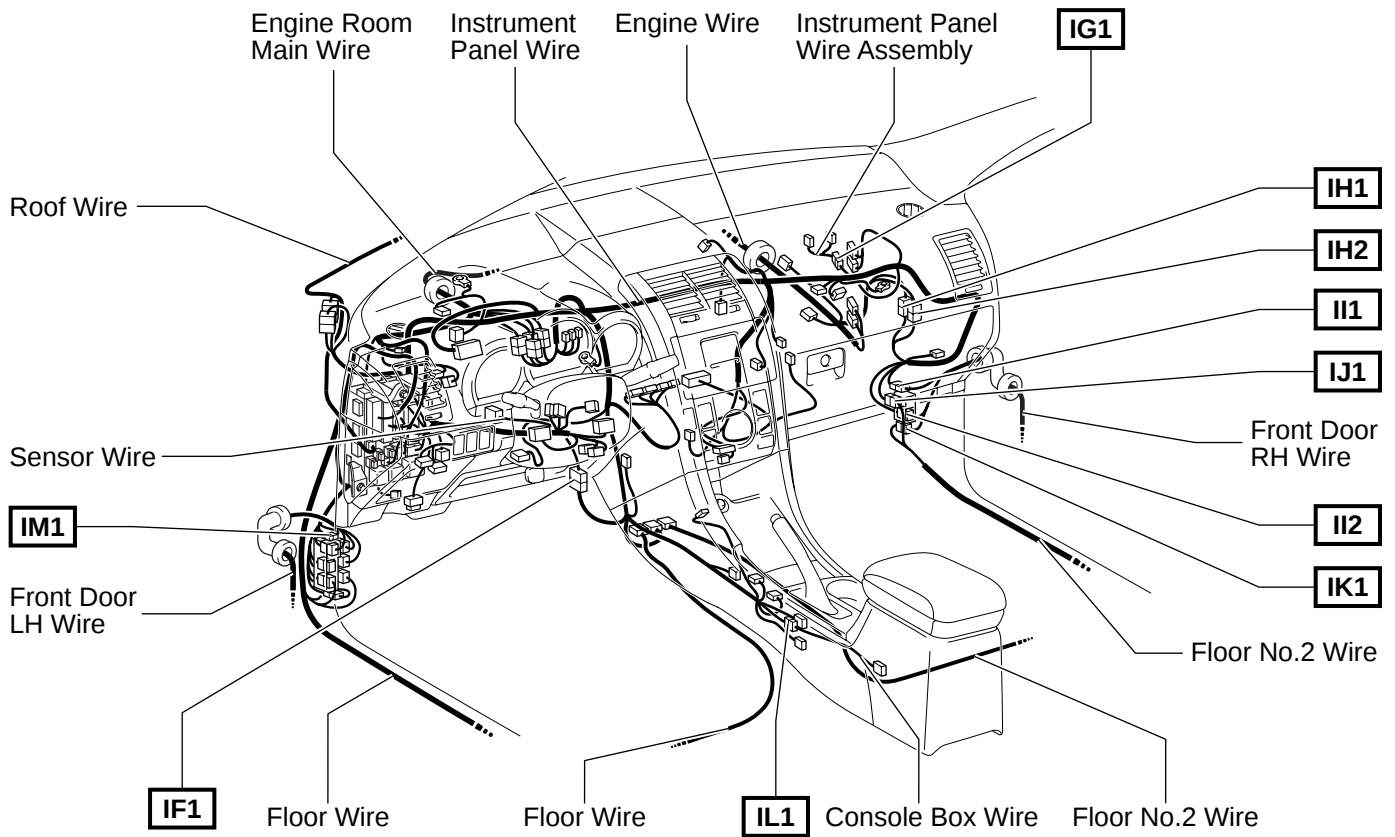


cardiagn.com

G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

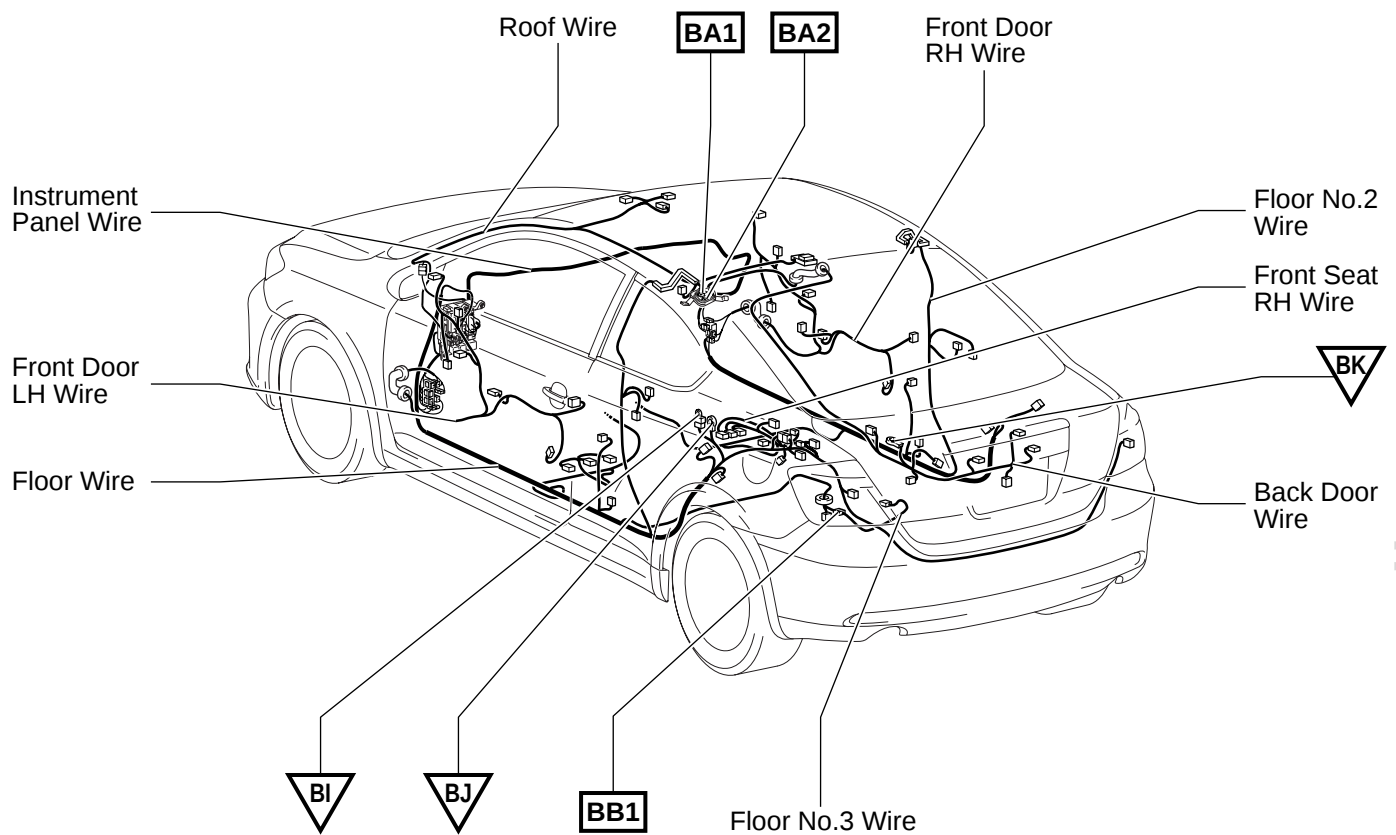

cardiagn.com


2007 tC

ELECTRICAL WIRING DIAGRAM


SYSTEM CIRCUITS

	Page
ABS	136
Air Conditioning	178
Audio System	166
Back Door Opener	114
Back-Up Light	90
Charging	54
Cigarette Lighter	154
Combination Meter	170
Cruise Control	130
Door Lock Control	104
Electronically Controlled Transmission and A/T Indicator	124
Engine Control	56
Engine Immobiliser System	66
Front Wiper and Washer	92
Headlight	72
Horn	152
Ignition	52
Illumination	82
Interior Light	78
Key Reminder	158
Light Reminder	160
Multiplex Communication System (CAN)	70
Power Outlet	156
Power Source	46
Power Window (w/ Jam Protection)	96
Power Window (w/o Jam Protection)	102
Radiator Fan and Condenser Fan	176
Rear Window Defogger	164
Remote Control Mirror	94
Seat Belt Warning	162
Shift Lock	122
Sliding Roof	118
SRS	145
Starting	50
Stop Light	88
Taillight	86
Tire Pressure Warning System	142
Turn Signal and Hazard Warning Light	74
Wireless Door Lock Control	108

Power Source

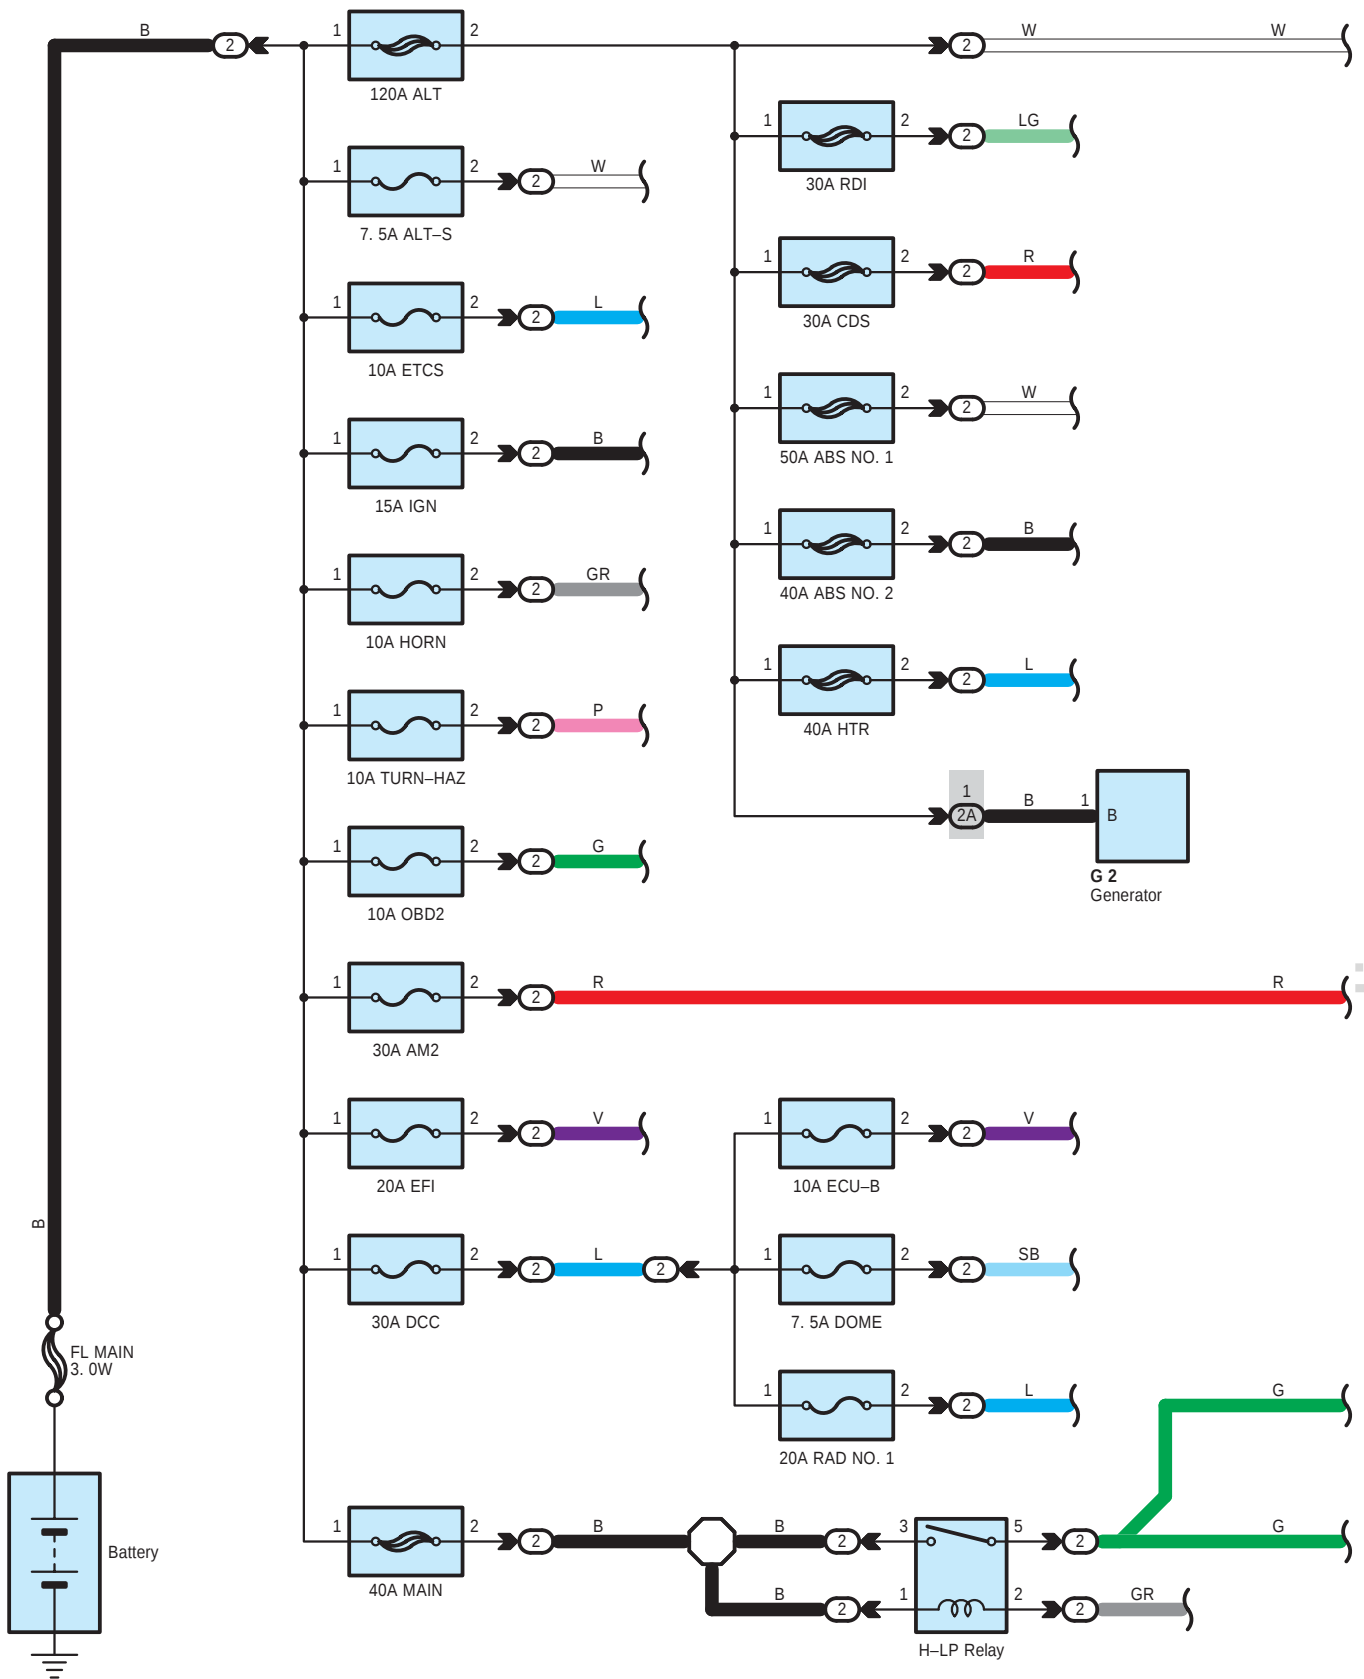

cardiagn.com

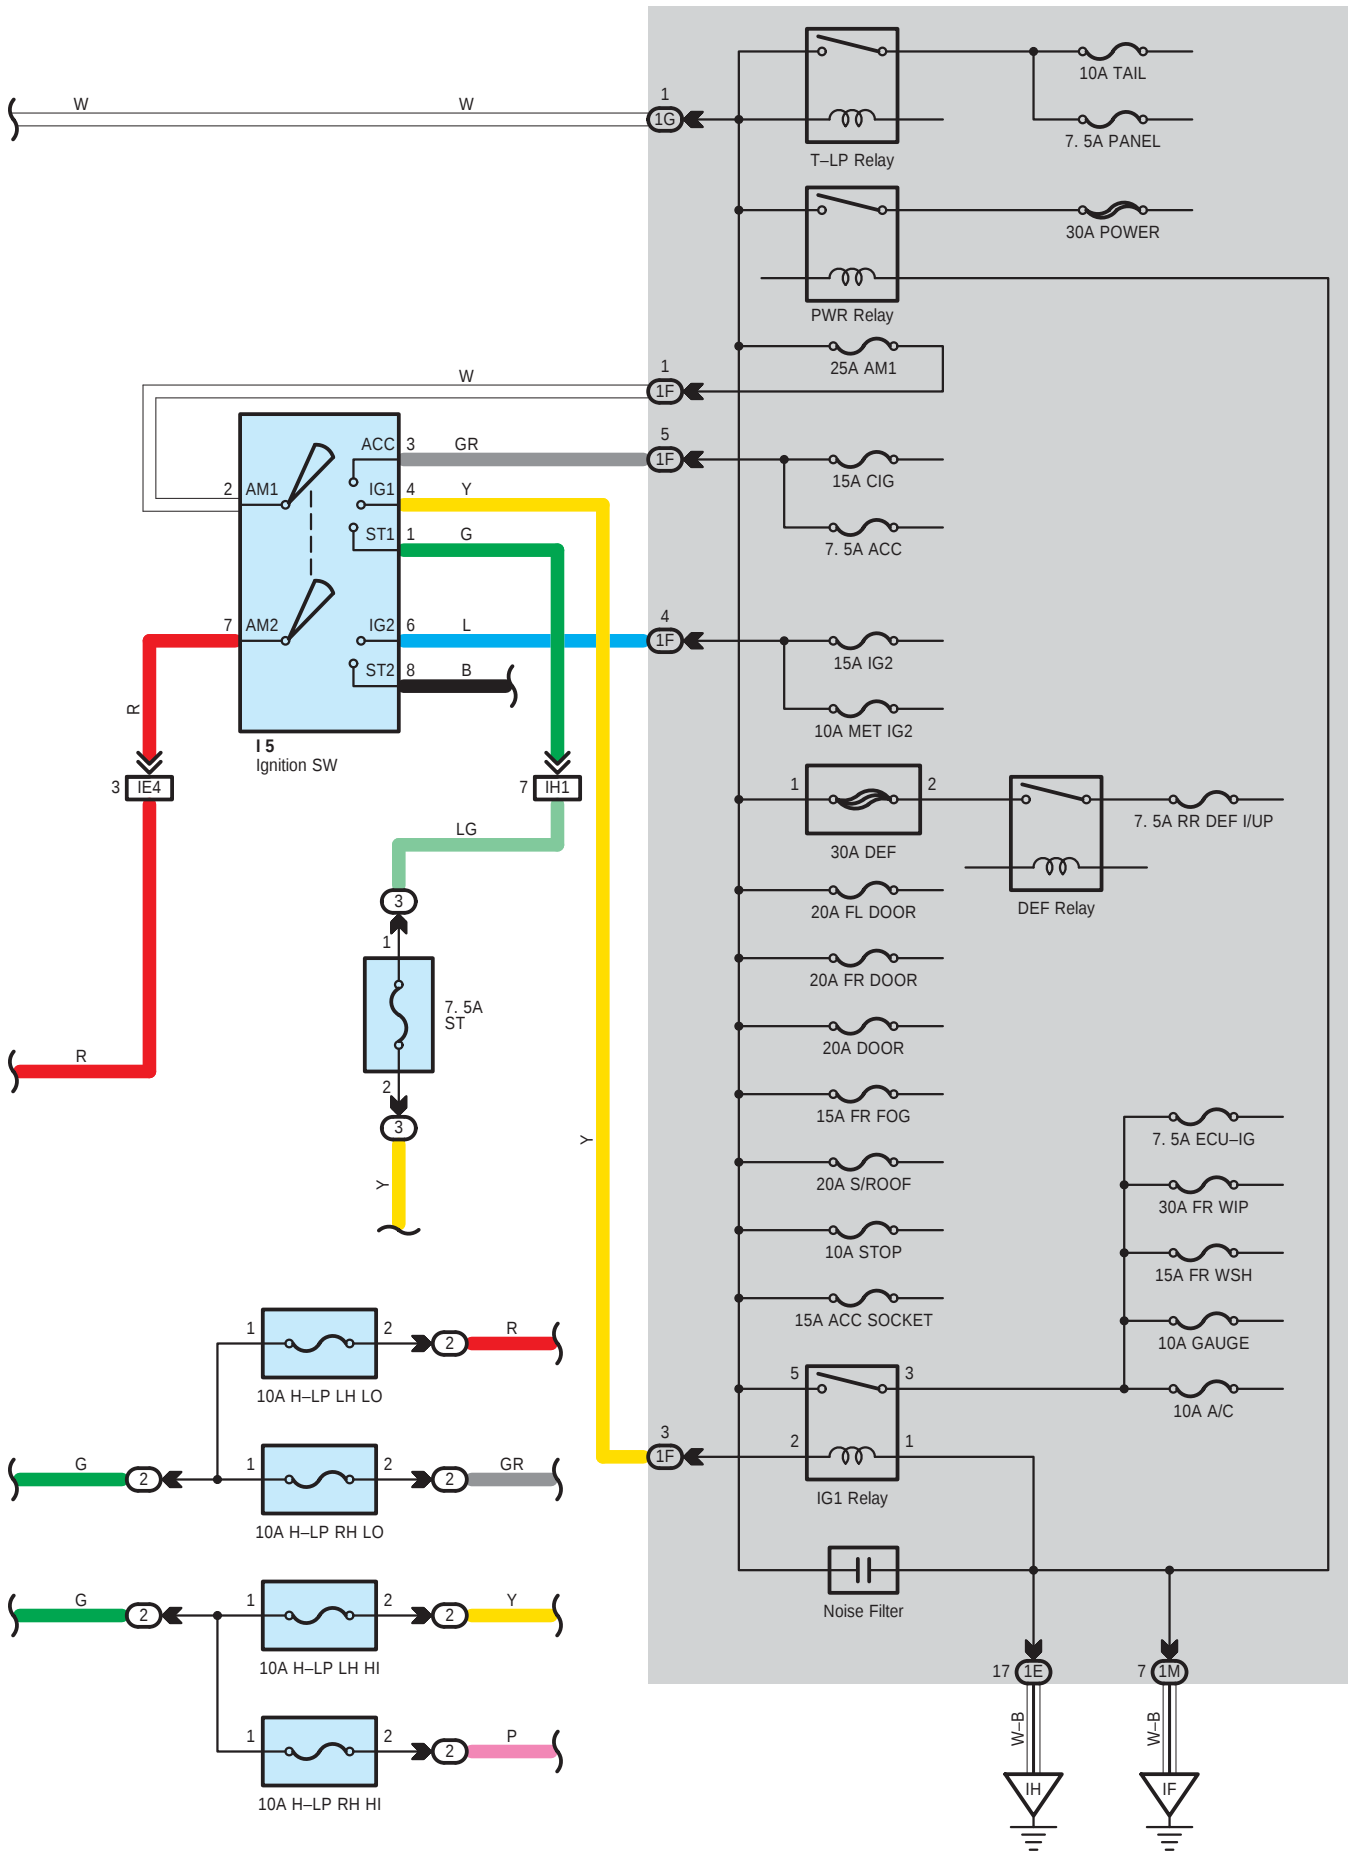

Power Source

: Parts Location

Code	See Page	Code	See Page	Code	See Page
G2	34	I5	37		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.2 (Inside of the Engine Room R/B Box)

: Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1F		
1G	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
2A	22	Engine Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE4	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)

: Ground Points

Code	See Page	Ground Points Location
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH

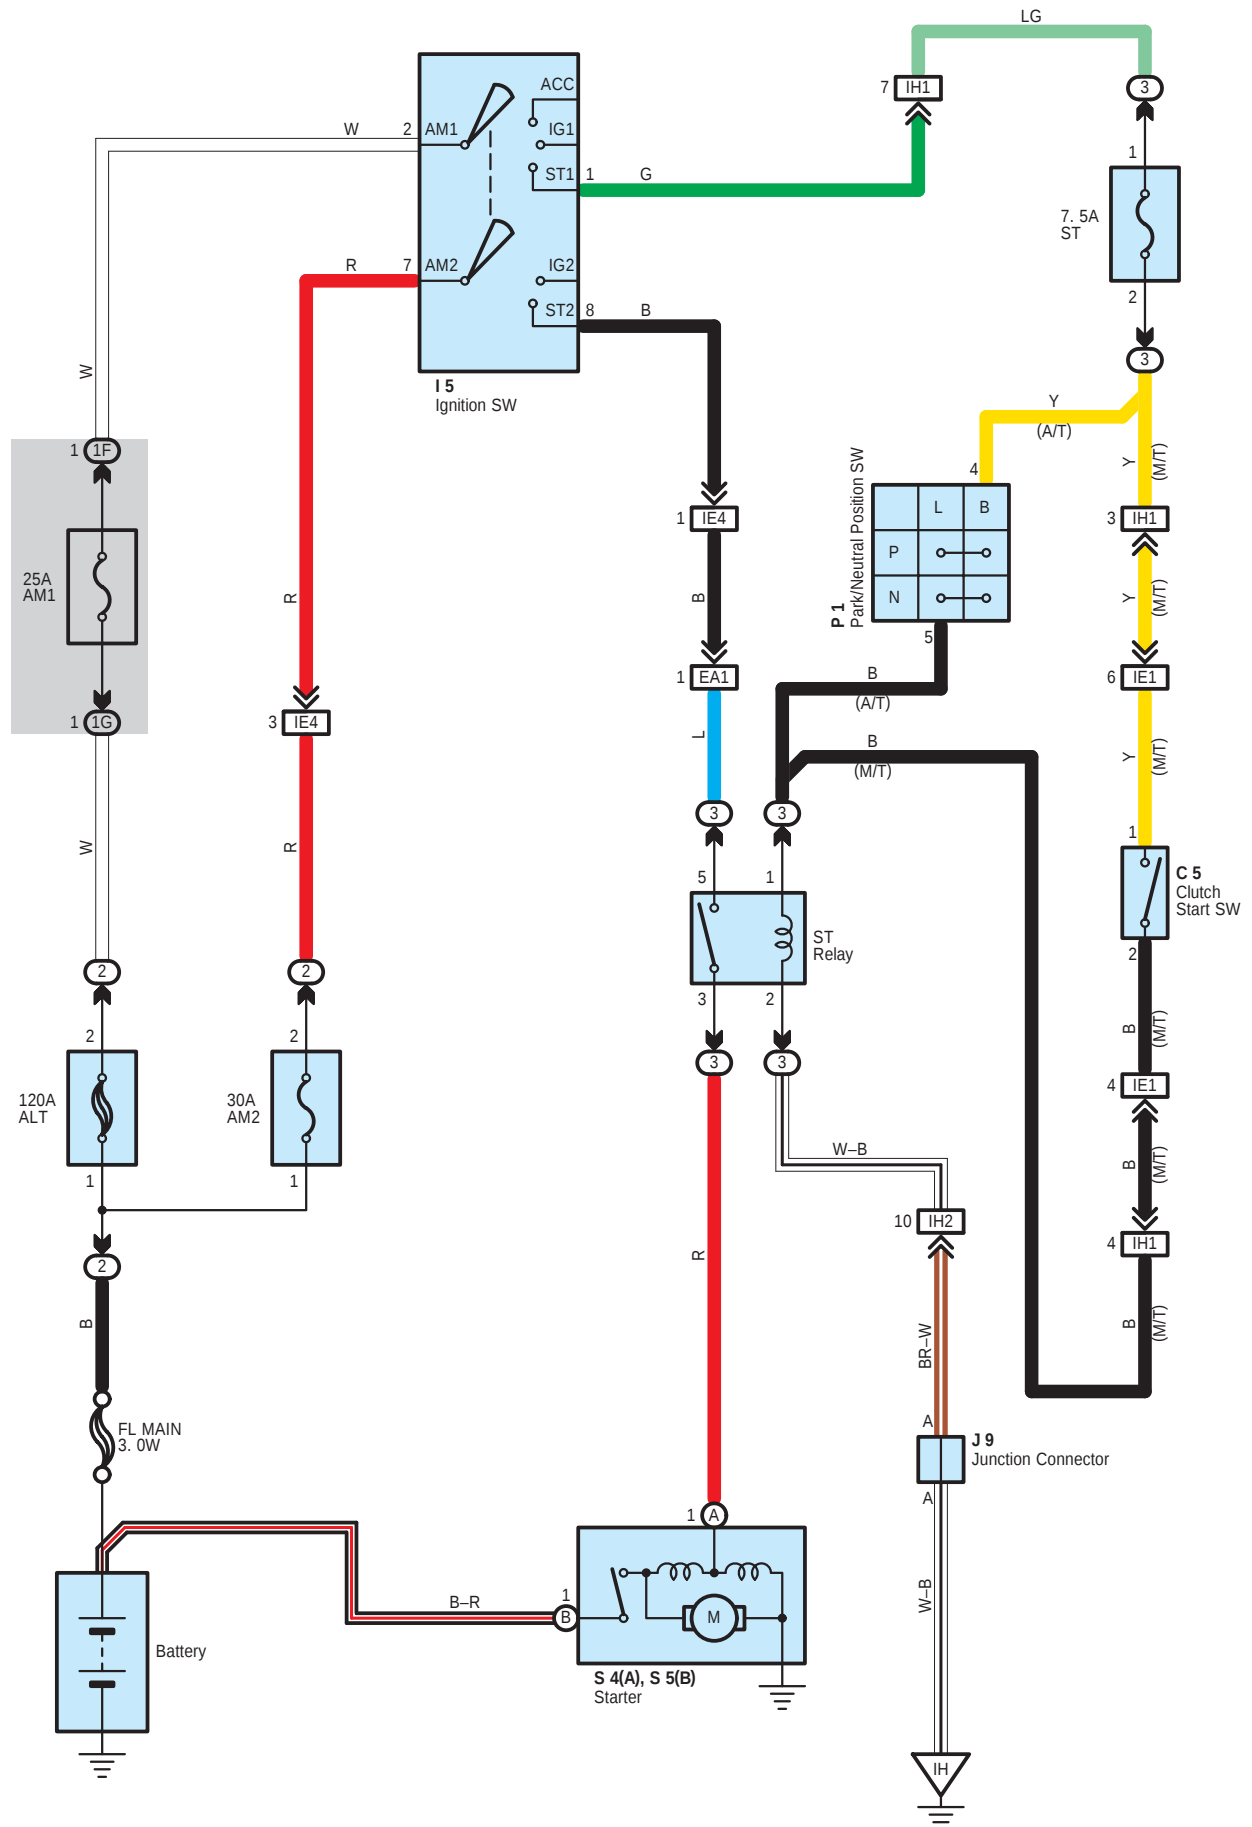

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
C5	36	J9	37	S4	A 35
I5	37	P1	35	S5	B 35

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.2 (Inside of the Engine Room R/B Box)

 : Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1G	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B Box)
IE1	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IE4		
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IH2		

 : Ground Points

Code	See Page	Ground Points Location
IH	42	Cowl Brace RH

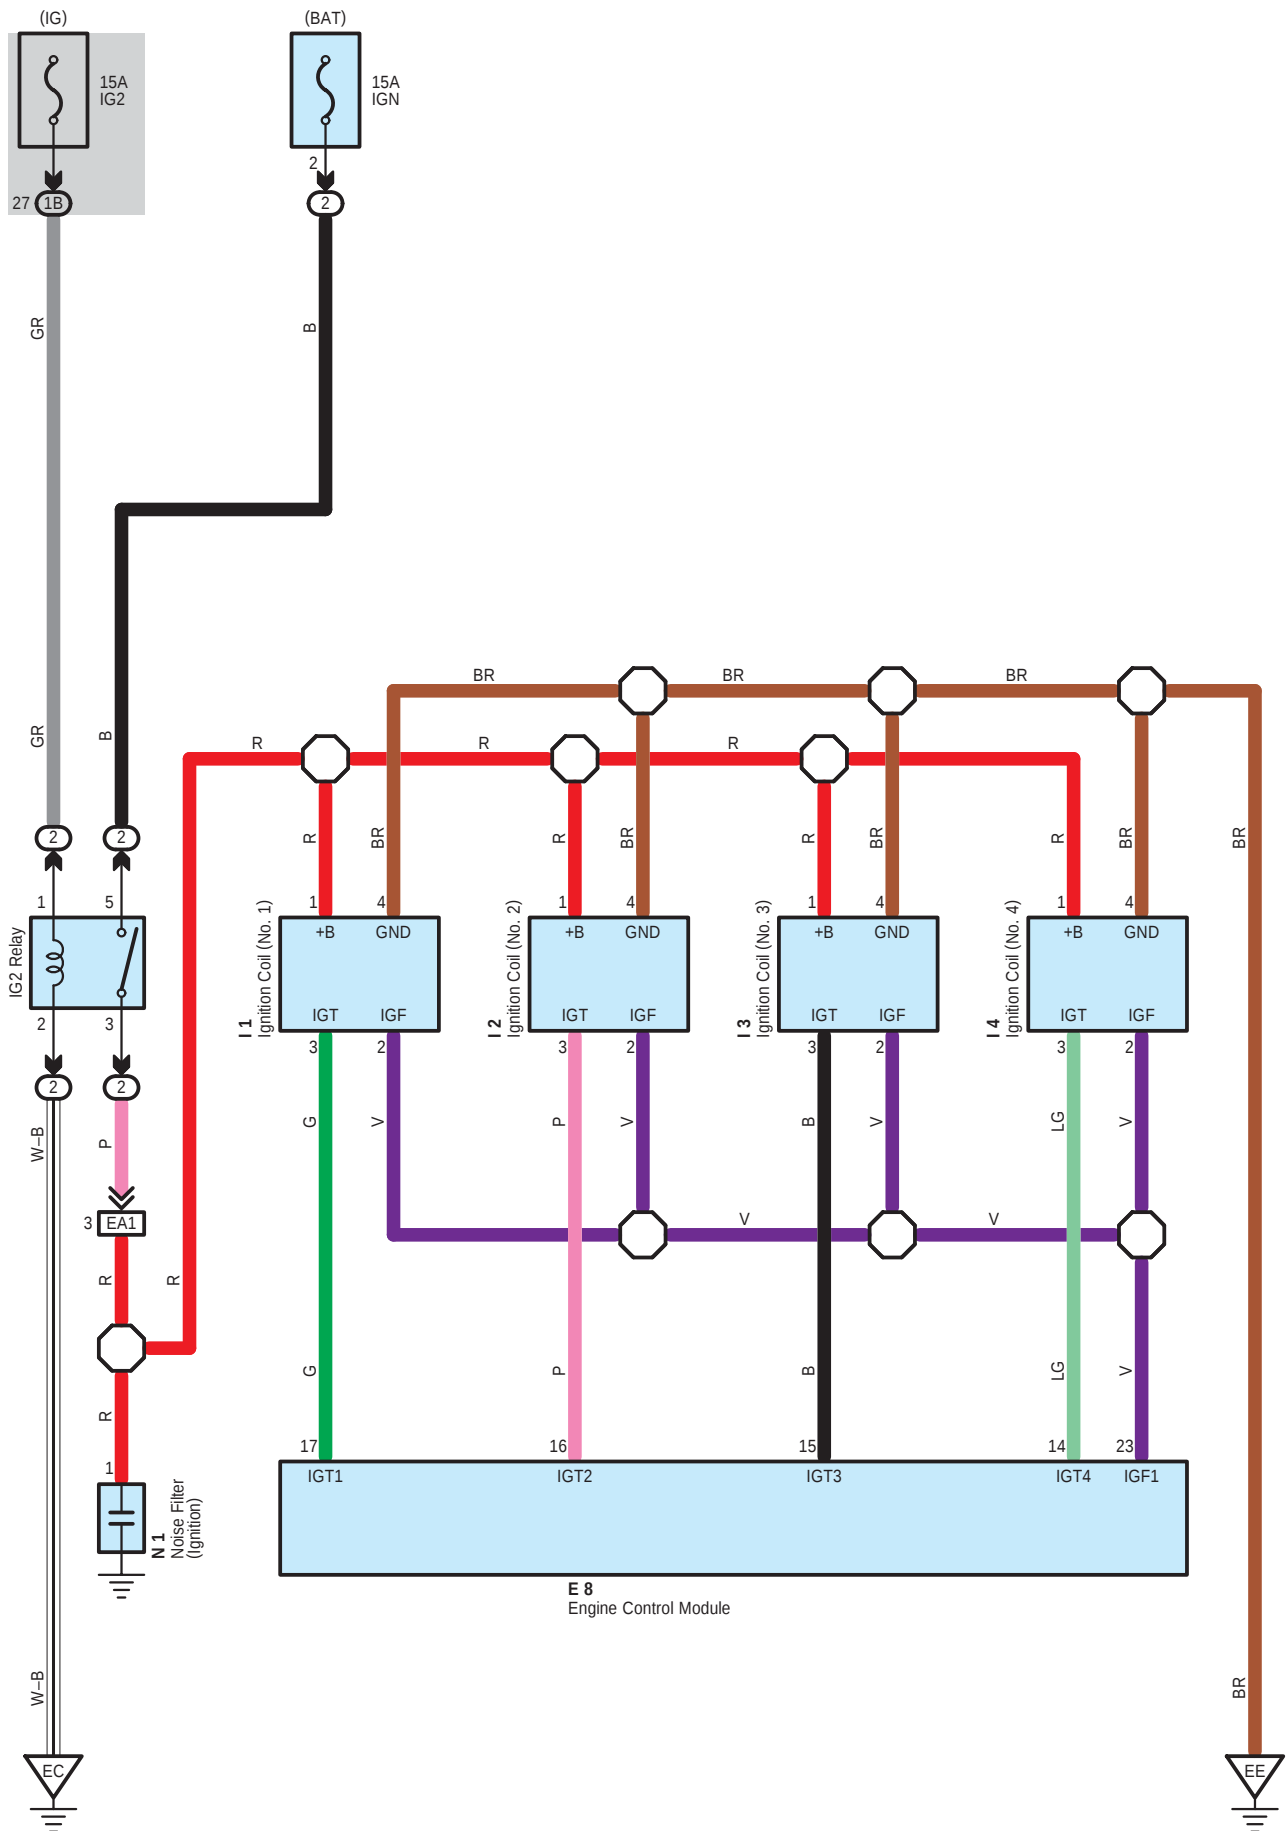

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
E8	36	I2	35	I4	35
I1	35	I3	35	N1	35

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B Box)

 : **Ground Points**

Code	See Page	Ground Points Location
EC	40	Front Left Fender
EE	40	Left Side of the Cylinder Head



☐ : Parts Location

Code	See Page	Code		See Page	Code		See Page
C6	36	G1	A	34	J1	A	37
E8	36	G2	B	34	J2	B	37

☐ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

☐ : Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1M	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1S		
2A	22	Engine Wire and Engine Room J/B (Engine Compartment Left)


☐ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B Box)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IH2		





- * 1 : Shielded
- * 2 : w/ Engine Immobiliser System

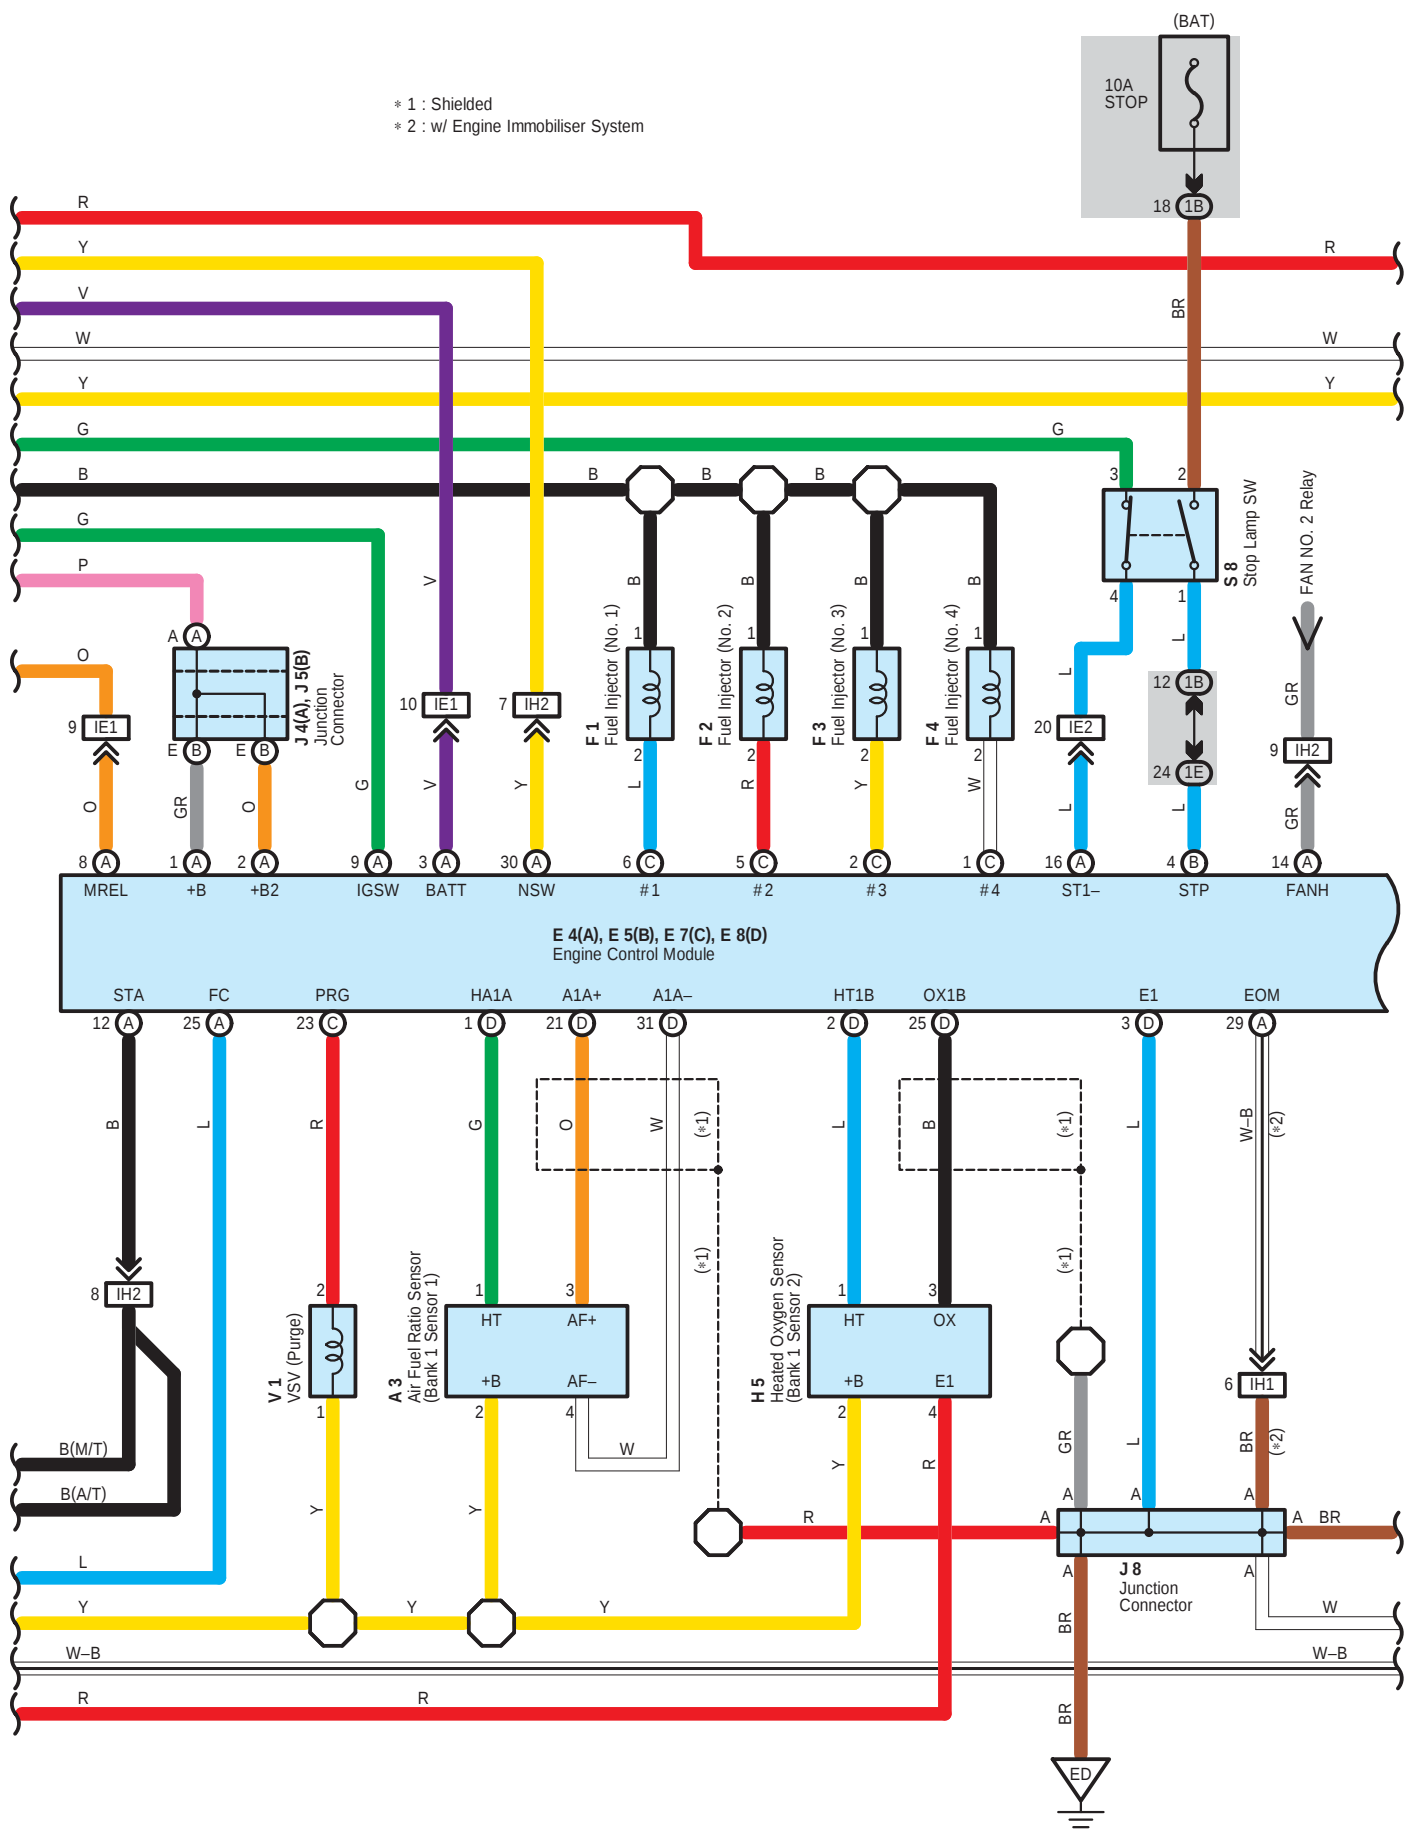


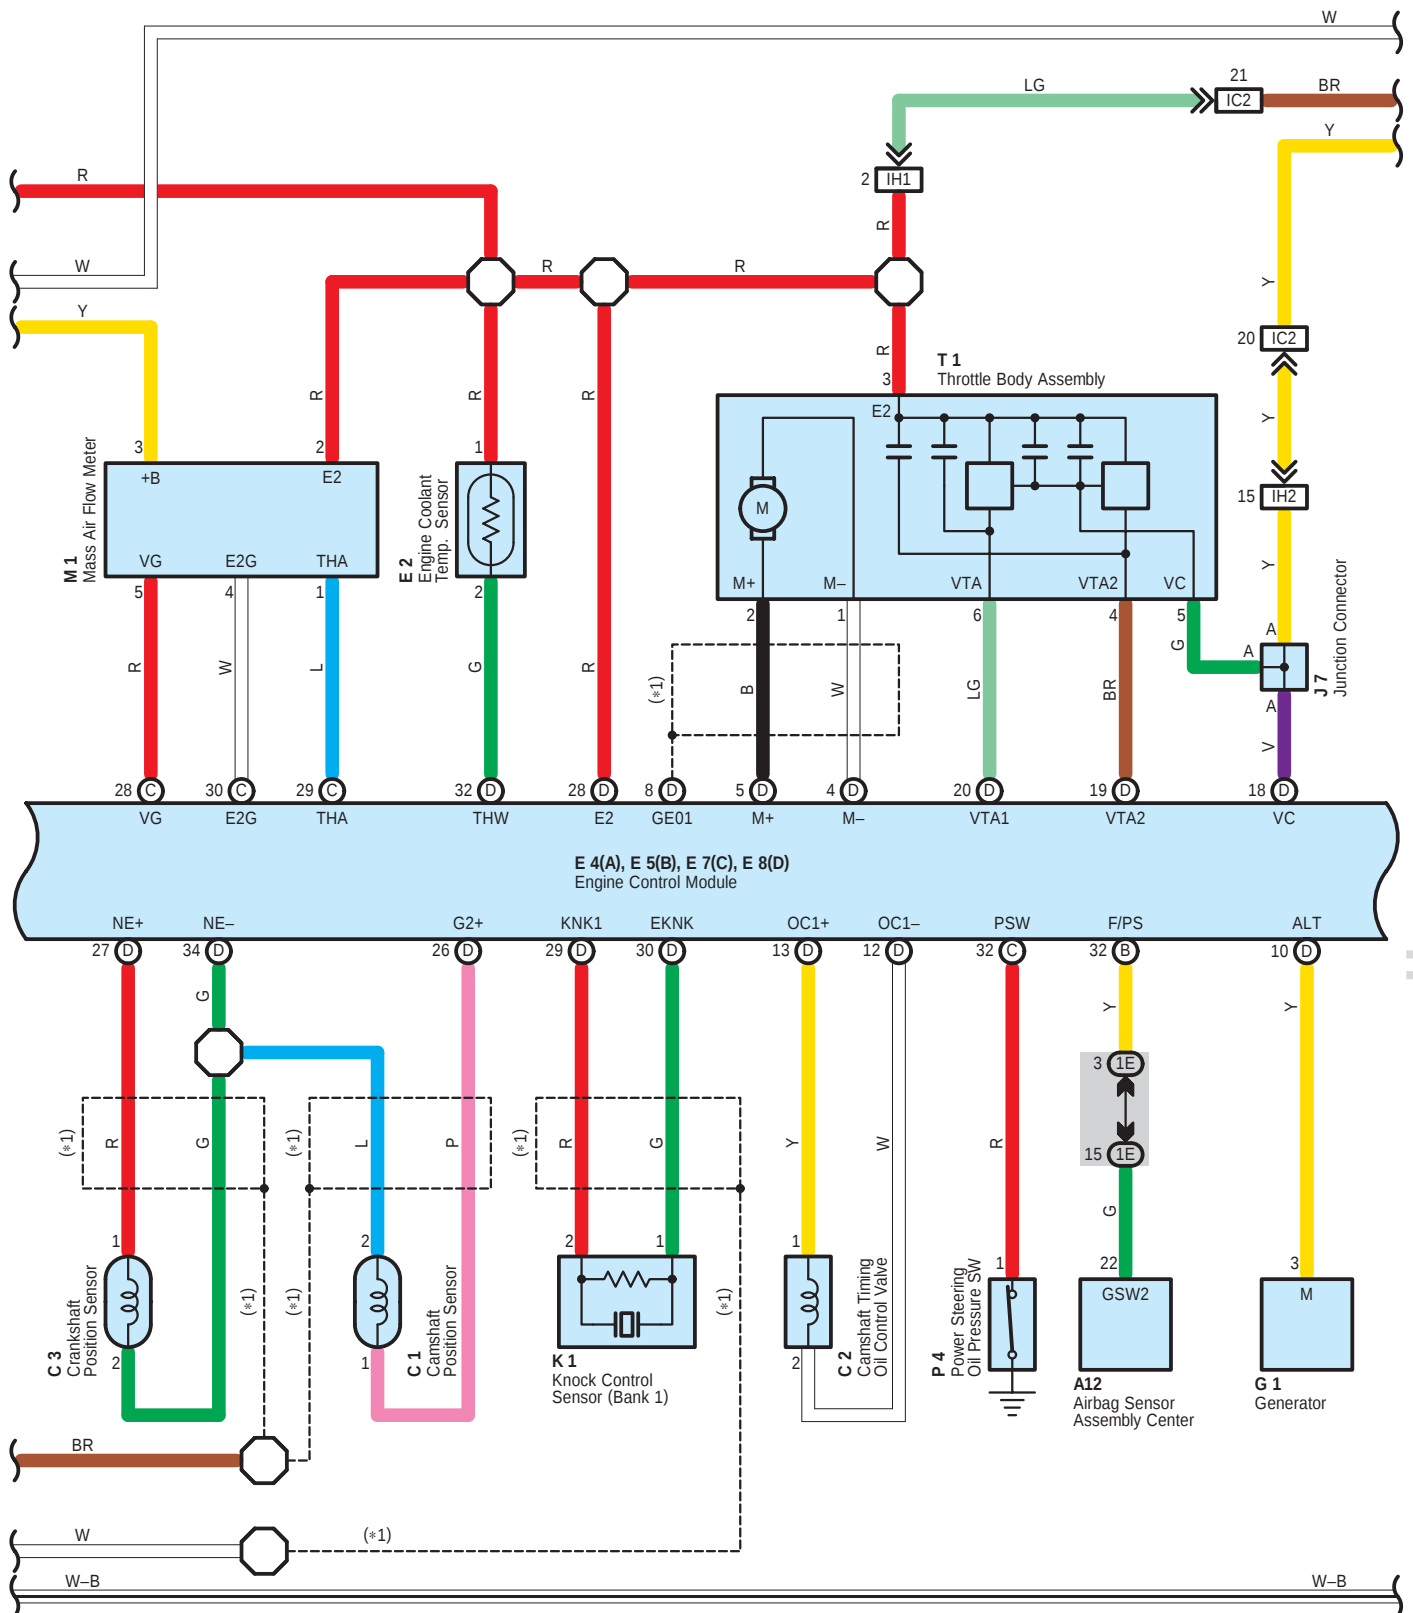

cardiagn.com

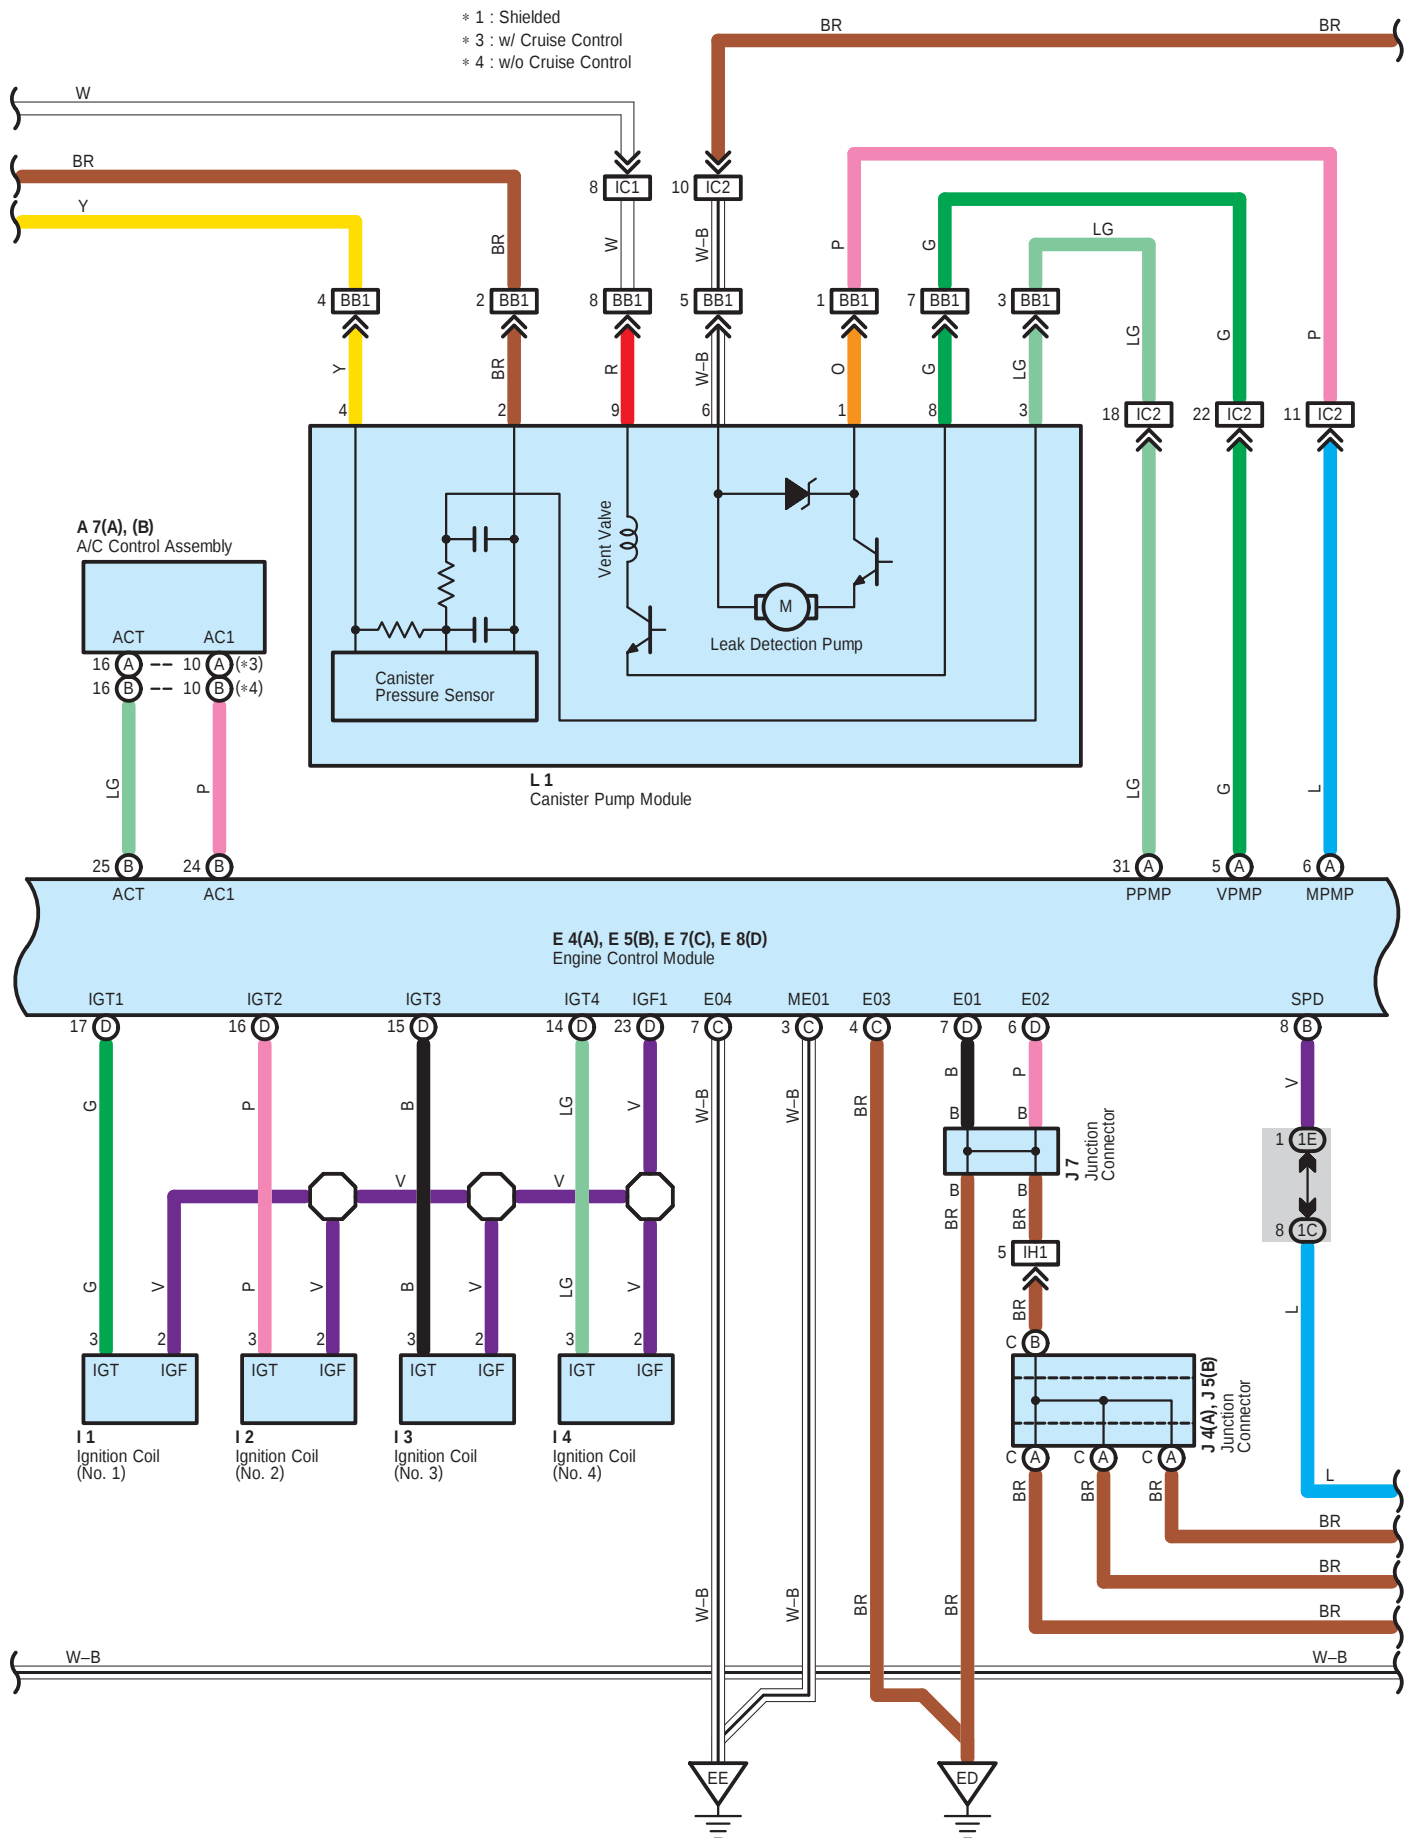

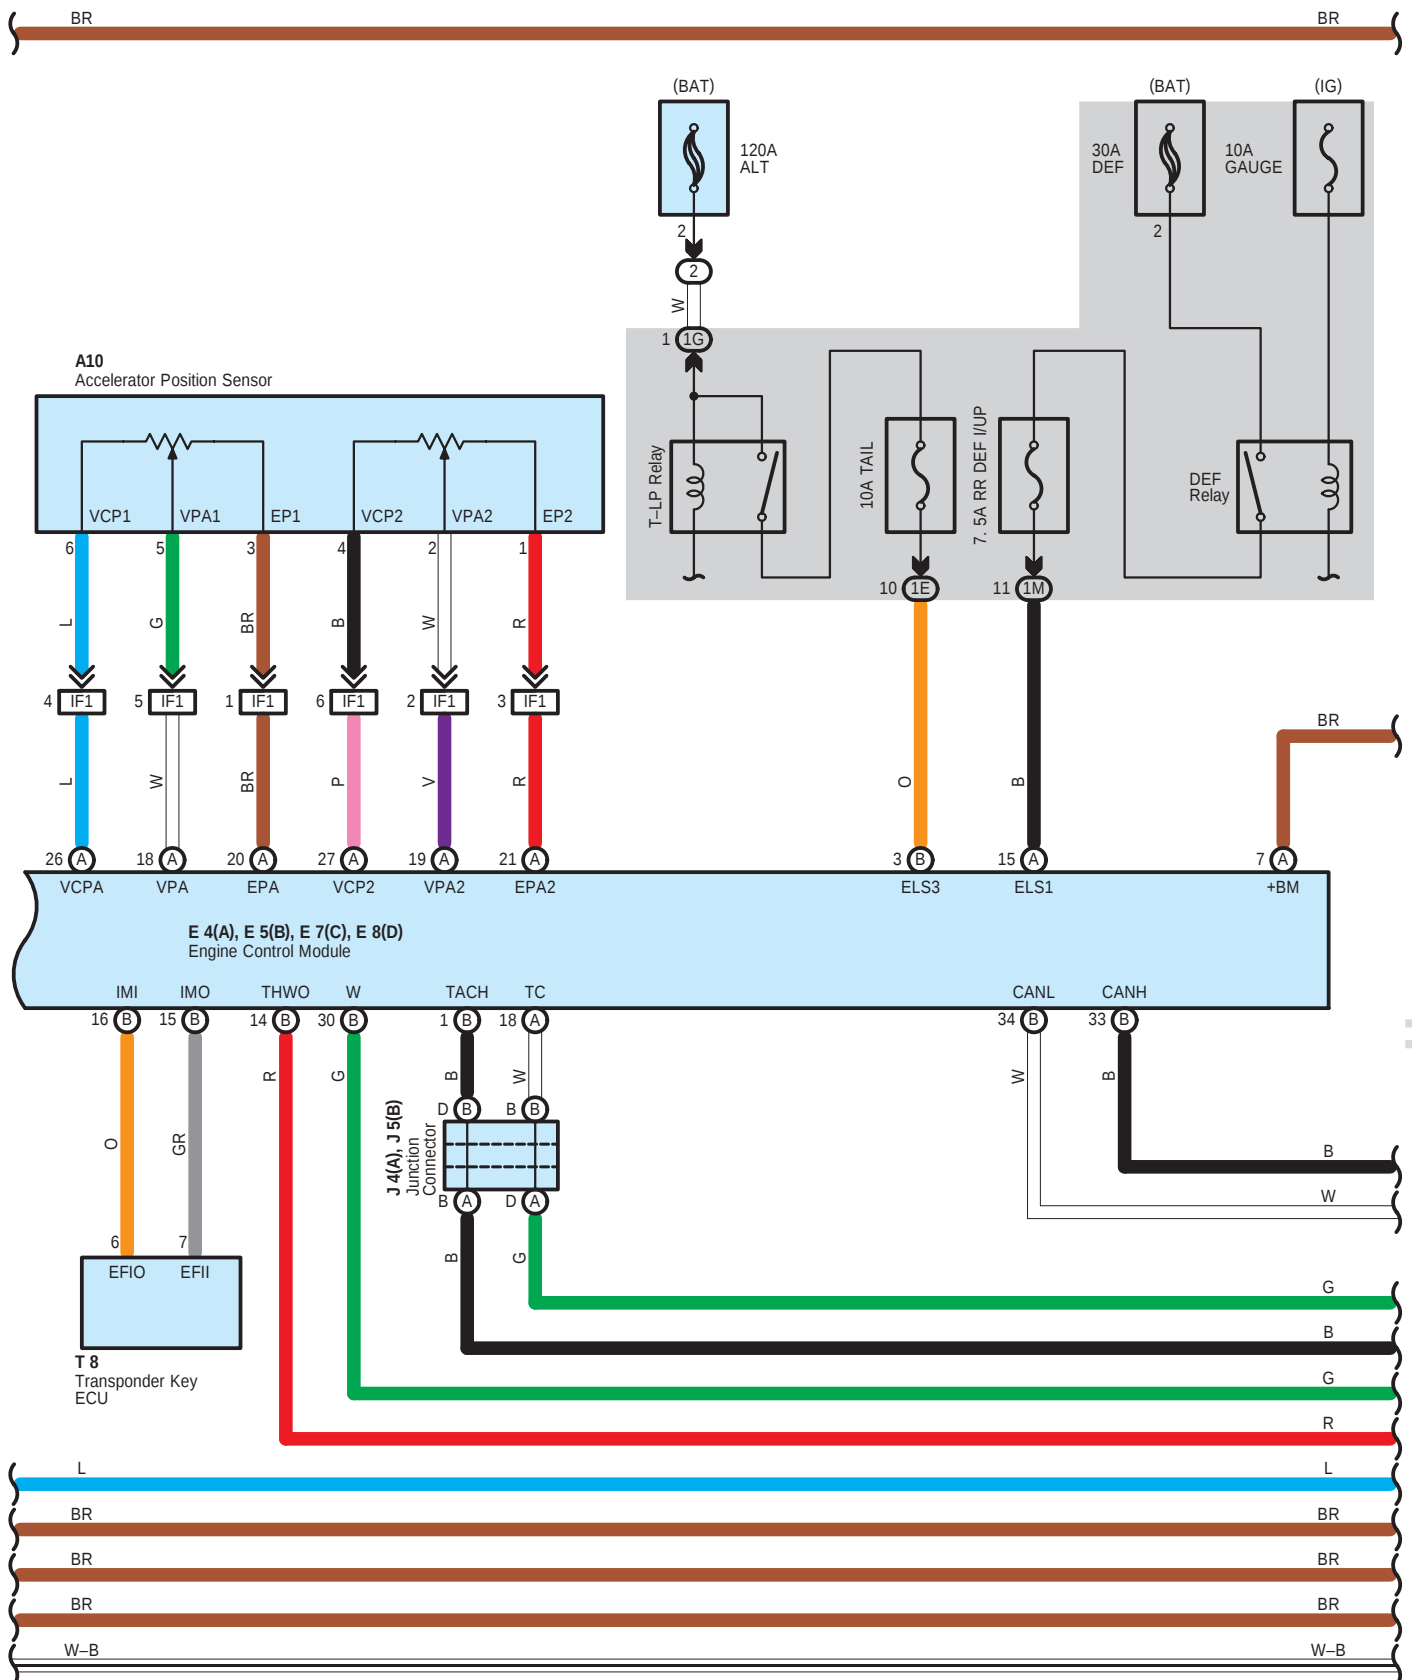

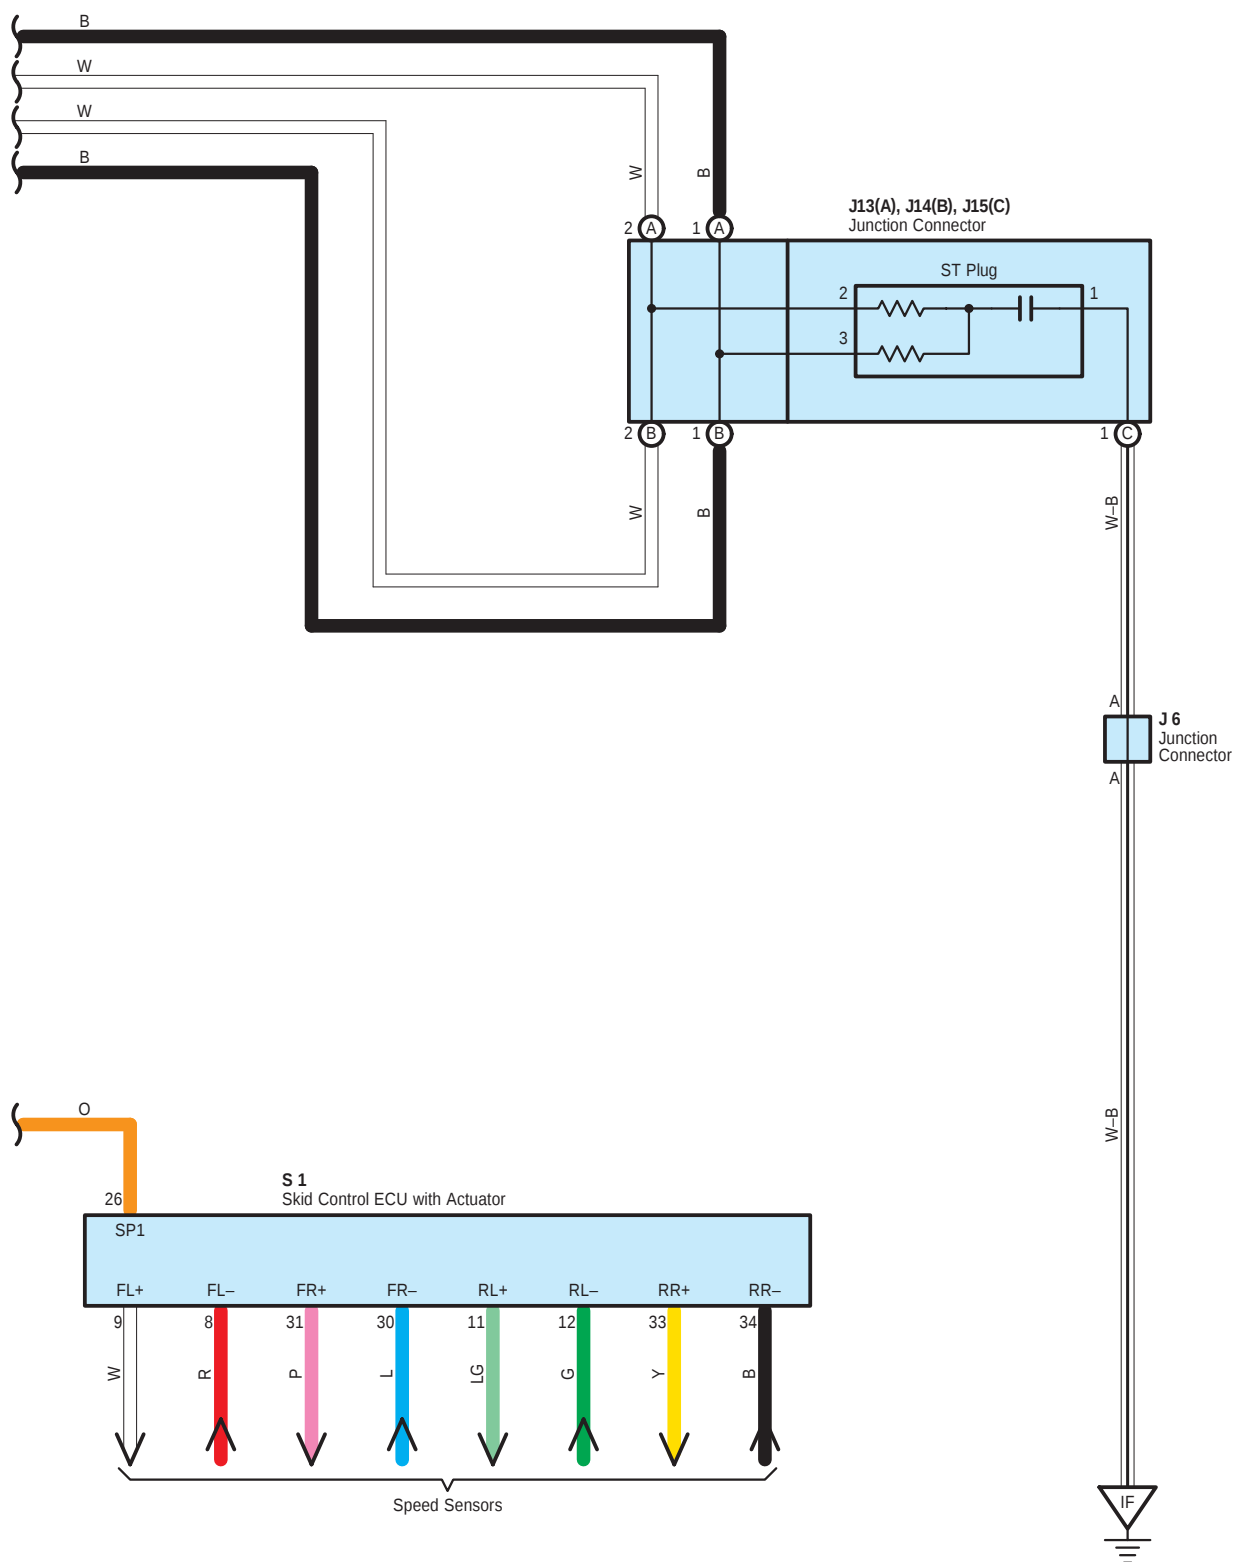

System Outline

The engine control system utilizes a microcomputer and maintains overall control of the engine, transaxle etc. An outline of the engine control is given here.

1. Input Signals

- (1) Engine coolant temp. signal circuit
The engine coolant temp. sensor detects the engine coolant temp. and has a built-in thermistor with a resistance, which varies according to the engine coolant temp.. The engine coolant temp. which is input into TERMINAL THW of the engine control module as a control signal.
- (2) Intake air temp. signal circuit
The intake air temp. sensor is installed in the mass air flow meter and detects the intake air temp. which is input as a control signal to TERMINAL THA of the engine control module.
- (3) Oxygen density signal circuit
The oxygen density in the exhaust emission is detected by the heated oxygen sensor and input as a control signal to TERMINAL OX1B of the engine control module.
- (4) RPM signal circuit
Camshaft position and crankshaft position are detected by the camshaft position sensor and crankshaft position sensor. Camshaft position is input as a control signal to TERMINAL G2+ of the engine control module, and engine RPM is input into TERMINAL NE+.
- (5) Throttle position signal circuit
The throttle body assembly detects the throttle valve opening angle as a control signal, which is input into TERMINALS VTA1 and VTA2 of the engine control module.
- (6) Vehicle speed circuit
The vehicle speed sensor detects the vehicle speed and inputs a control signal to TERMINAL SPD of the engine control module.
- (7) Battery signal circuit
Voltage is constantly applied to TERMINAL BATT of the engine control module. With the ignition SW turned on, the voltage for engine control module start-up power supply is applied to TERMINAL +B of the engine control module via the EFI relay.
- (8) Stop lamp SW signal circuit
The stop lamp SW is used to detect whether the vehicle is braking or not and the signal is input into TERMINAL STP of the engine control module as a control signal.
- (9) Starter signal circuit
To confirm whether the engine is cranking, the voltage is applied to the starter motor during cranking is detected and the signal is input into TERMINAL STA of the engine control module as a control signal.
- (10) Engine knock signal circuit
Engine knocking is detected by knock control sensor and the signal is input into TERMINAL KNC1 as a control signal.
- (11) Air fuel ratio signal system
The air fuel ratio is detected by air fuel ratio sensor and input as a control signal into TERMINAL A1A+ of the engine control module.

2. Control System

* SFI system

The SFI system monitors the engine condition through the signals input from each sensor to the engine control module. And the control signal is output to TERMINALS #1, #2, #3 and #4 of the engine control module to operate the fuel injector (Inject the fuel). The SFI system controls the fuel injection operation by the engine control module in response to the driving conditions.

* ESA system

The ESA system monitors the engine condition through the signals input to the engine control module from each sensor. The best ignition timing is decided according to this data and the memorized data in the engine control module and the control signal is output to TERMINALS IGT1, IGT2, IGT3, IGT4. This signal controls the igniter (Ignition coil) to provide the best ignition timing for the driving conditions.

* Heated oxygen sensor heater control system

The heated oxygen sensor heater control system turns the heater on when the intake air volume is low (Temp. of exhaust emissions is low), and warms up the heated oxygen sensor to improve detection performance of the sensor. The engine control module evaluates the signals from each sensor, and outputs current to TERMINAL HT1B to control the heater.

3. Diagnosis System

With the diagnosis system, when there is a malfunction in the engine control module signal system, the malfunctioning system is recorded in the memory. The malfunctioning system can be found by reading the code displayed by the malfunction indicator lamp.

4. Fail-Safe System

When a malfunction has occurred in any system, if there is a possibility of engine trouble being caused by continued control based on the signals from that system, the fail-safe system either controls the system by using data (Standard values) recorded in the engine control module memory or else stops the engine.

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page	
A3		34	E8	D	36	J7	37	
A7	A	36	F1		34	J8		37
	B	36	F2		34	J13	A	32, 37
A10		36	F3		34	J14	B	32, 37
A12		36	F4		34	J15	C	32, 37
C1		34	F9		38	K1		35
C2		34	G1		34	L1		38
C3		34	H5		34	M1		35
C5		36	I1		35	P1		35
C6		36	I2		35	P4		35
D4		36	I3		35	S1		35
E2		34	I4		35	S8		37
E4	A	36	J4	A	37	T1		35
E5	B	36	J5	B	37	T8		37
E7	C	36	J6		37	V1		35

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.2 (Inside of the Engine Room R/B Box)

**: Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1E		
1G	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1S		


**: Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B Box)
IC1	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
IC2		
IE1	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IE2		
IF1	43	Instrument Panel Wire and Sensor Wire (Instrument Panel Brace LH)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IH2		
BB1	44	Floor Wire and Floor No.3 Wire (Center Floor Pan Center)


**: Ground Points**

Code	See Page	Ground Points Location
EC	40	Front Left Fender
ED	40	Front Left Side of the Cylinder Head
EE	40	Left Side of the Cylinder Head
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH

Engine Immobiliser System

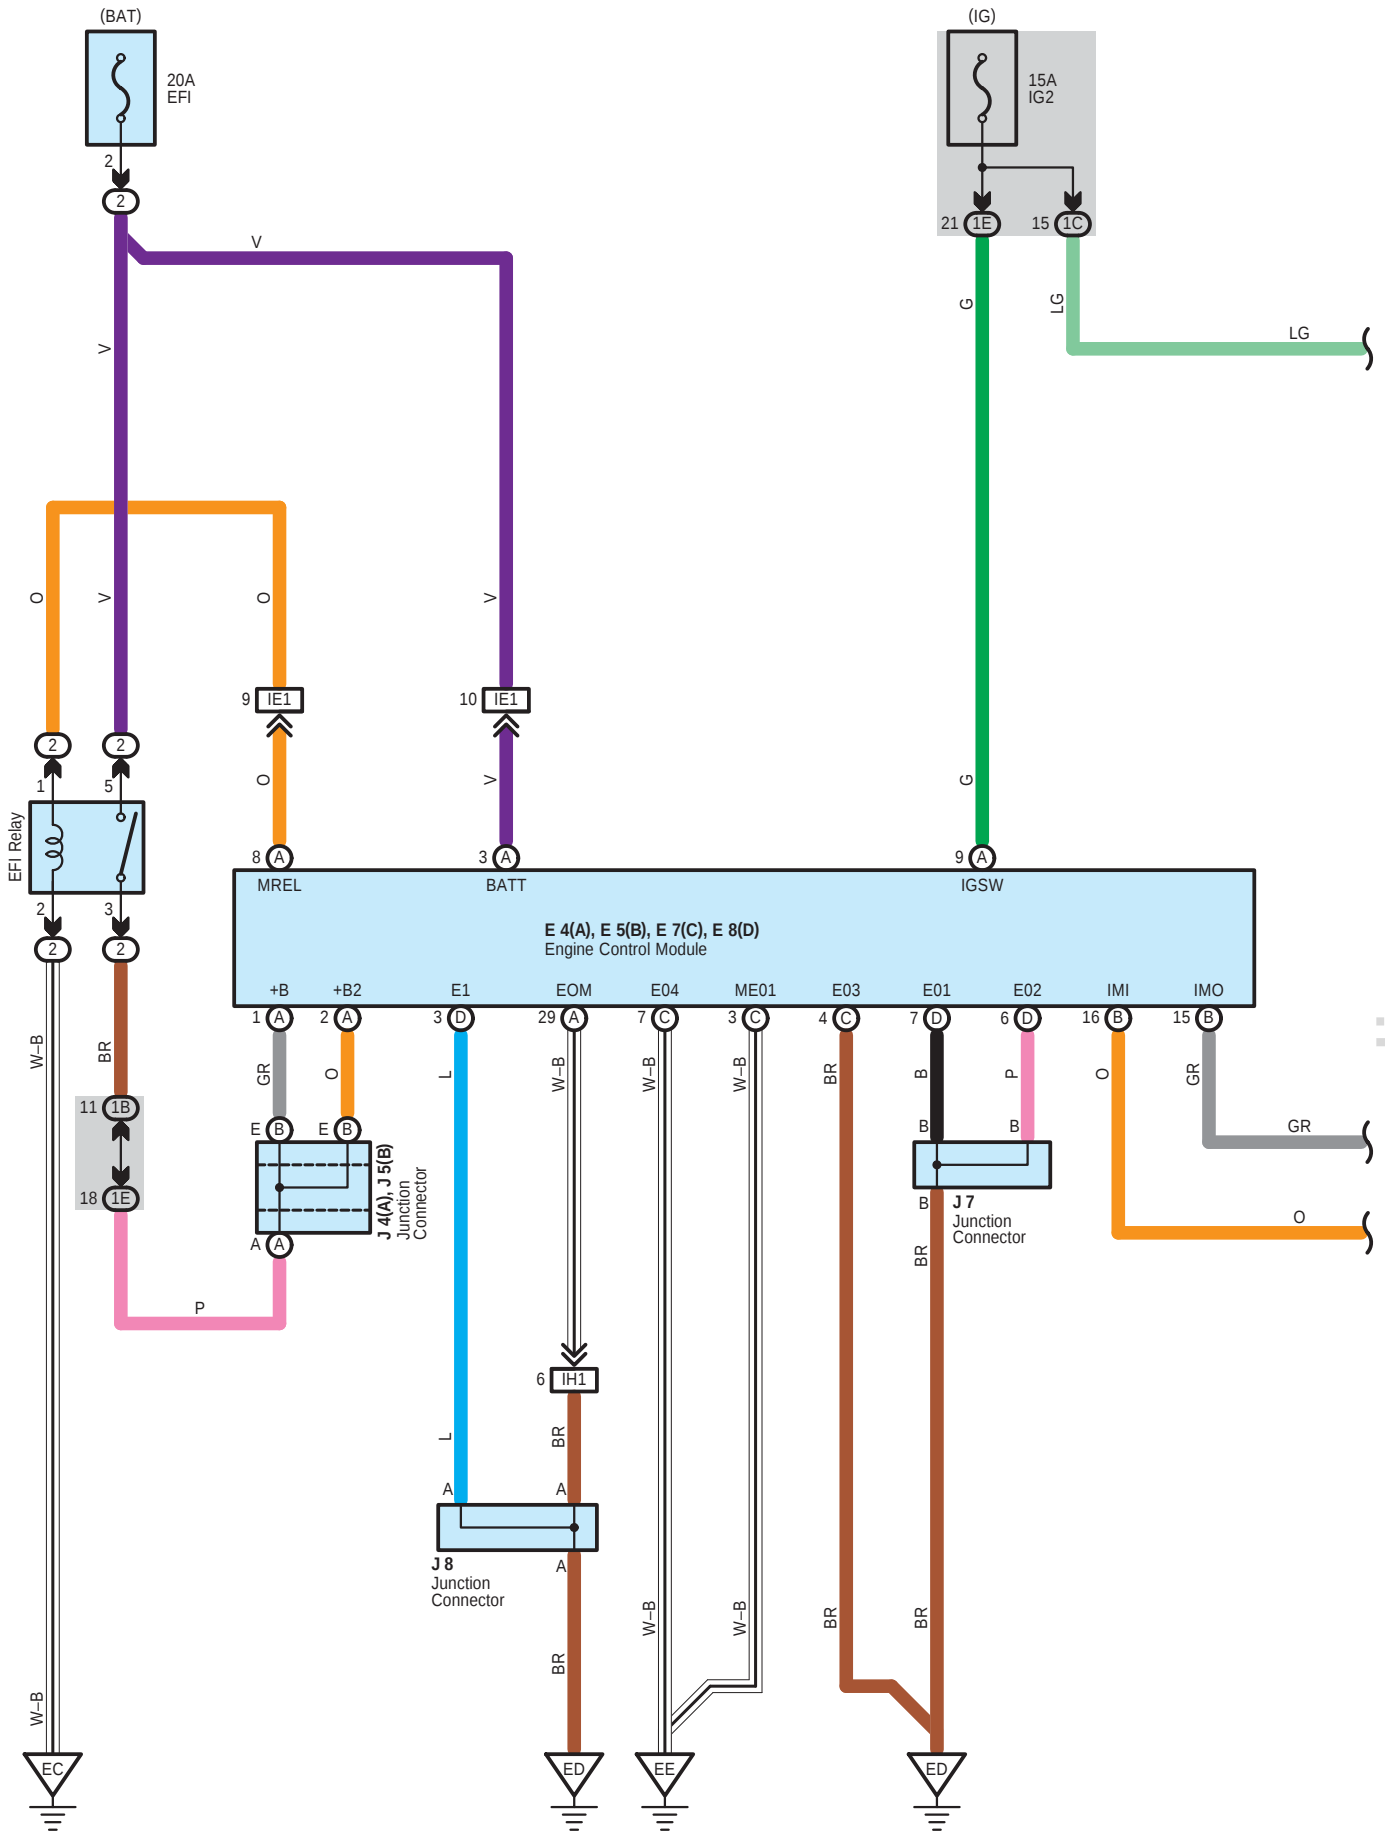

* 1 : w/ Cruise Control
 * 2 : w/o Cruise Control

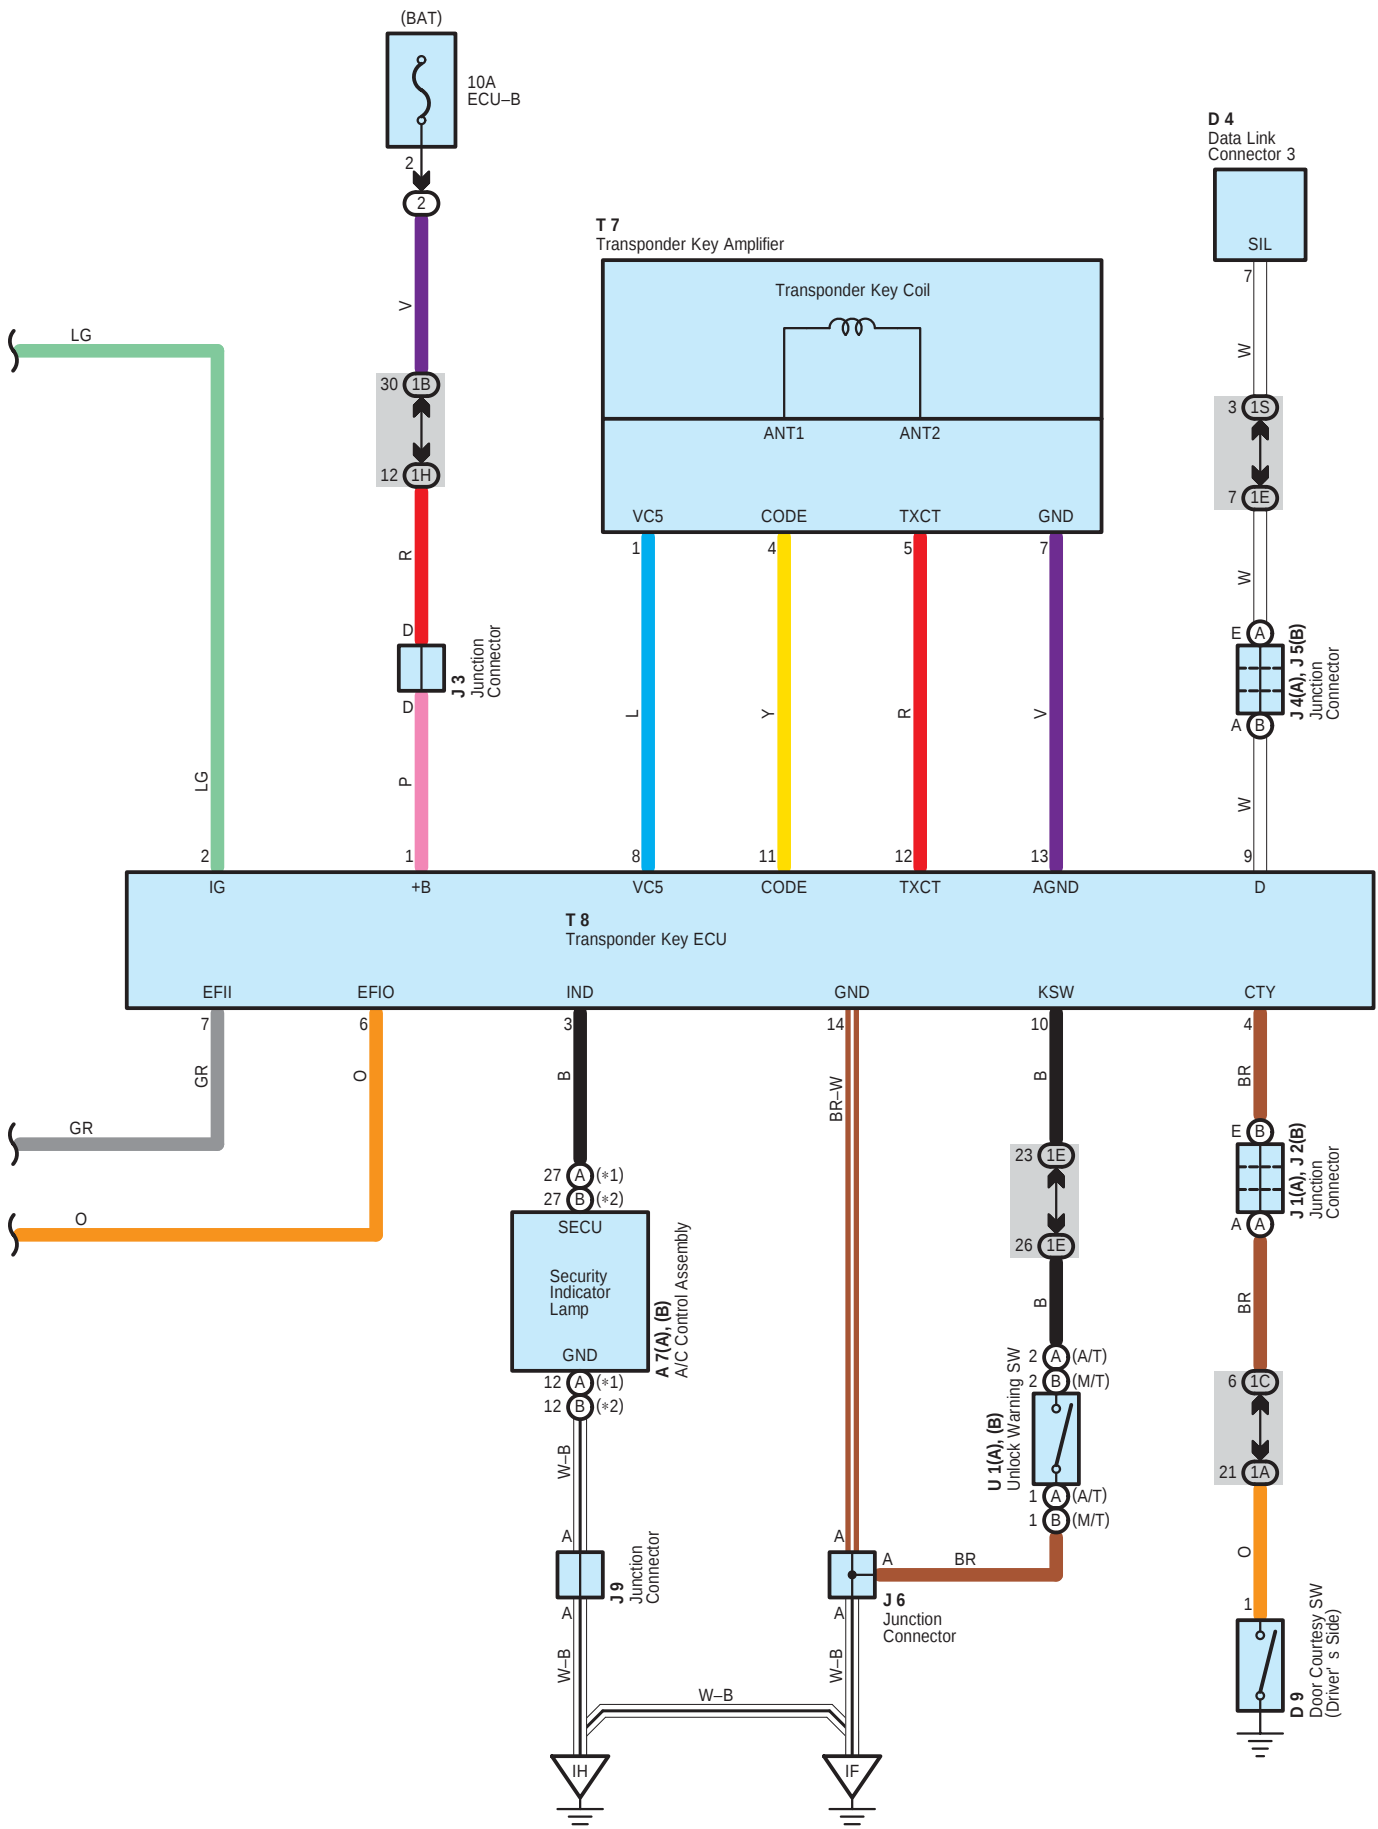

cardiagn.com

Engine Immobiliser System

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A7	A	36	E8	D	36	J7		37
	B	36	J1	A	37	J8		37
D4		36	J2	B	37	J9		37
D9		38	J3		37	T7		37
E4	A	36	J4	A	37	T8		37
E5	B	36	J5	B	37	U1	A	37
E7	C	36	J6		37		B	37

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1H		
1S		
1S	25	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)

: Ground Points

Code	See Page	Ground Points Location
EC	40	Front Left Fender
ED	40	Front Left Side of the Cylinder Head
EE	40	Left Side of the Cylinder Head
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH

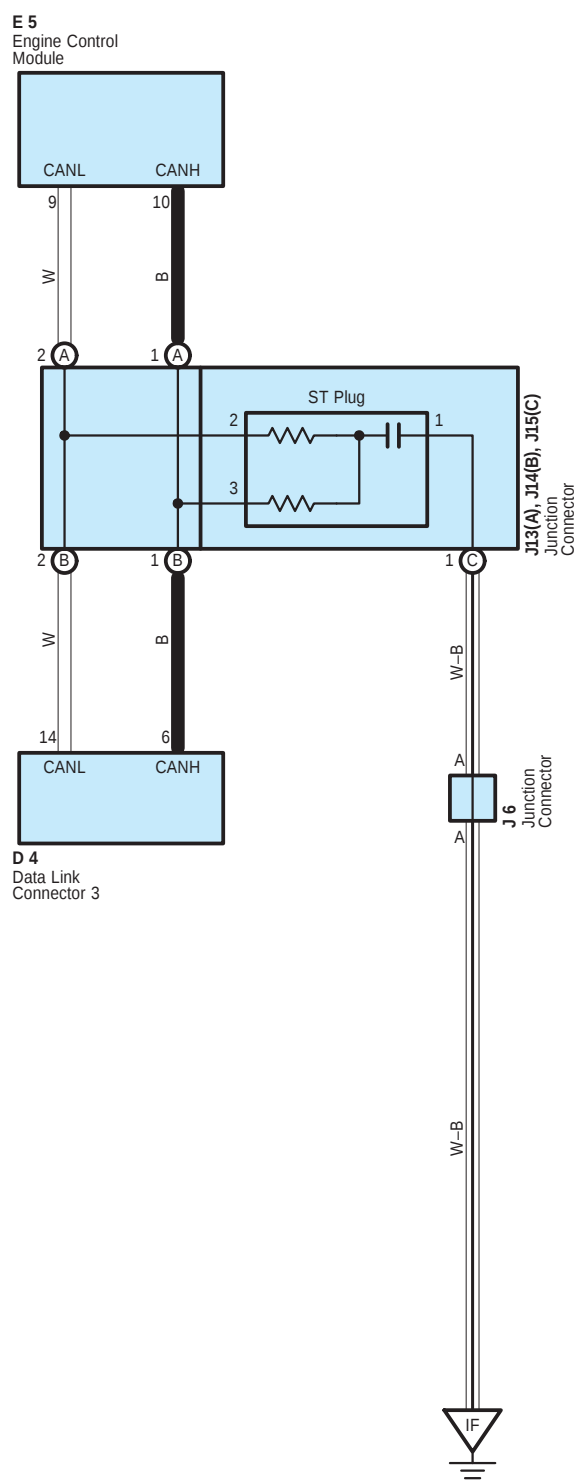

System Outline

Multiplex communication system (CAN) uses a serial communication protocol and communicates with a differential voltage. In this network system, TERMINALS CANH and CANL are used for communication between the ECUs and sensors, and excellent data communication speed and communication error detecting facility are provided.


○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
D4	36	J6	37	J14	B 32, 37
E5	36	J13	A 32, 37	J15	C 32, 37

▽ : Ground Points

Code	See Page	Ground Points Location
IF	42	Cowl Brace LH

Headlight

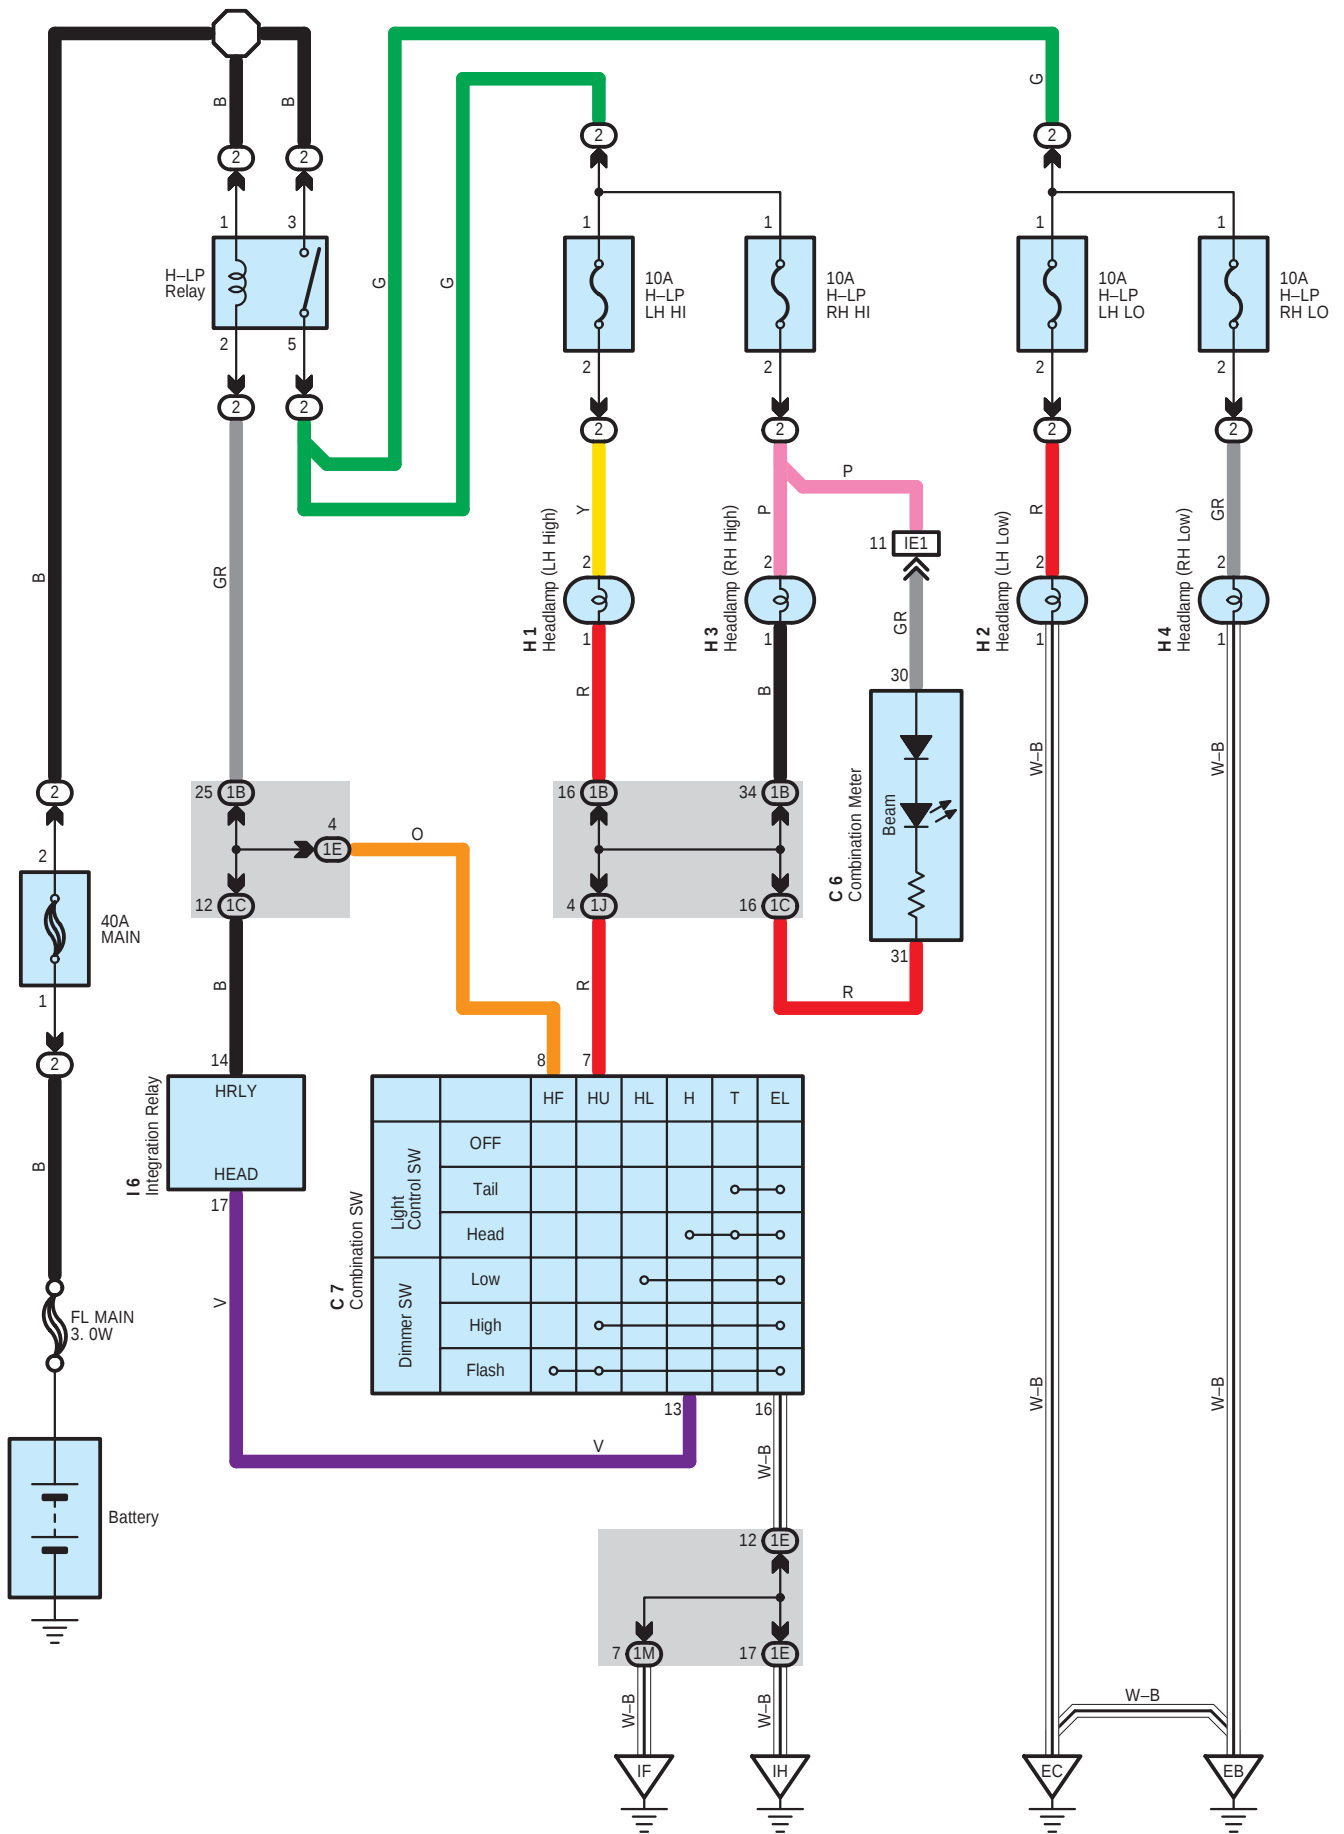

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
C6	36	H2	34	I6	37
C7	36	H3	34		
H1	34	H4	34		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1J		
1M	25	


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)


 : Ground Points

Code	See Page	Ground Points Location
EB	40	Front Right Fender
EC	40	Front Left Fender
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH

Turn Signal and Hazard Warning Light

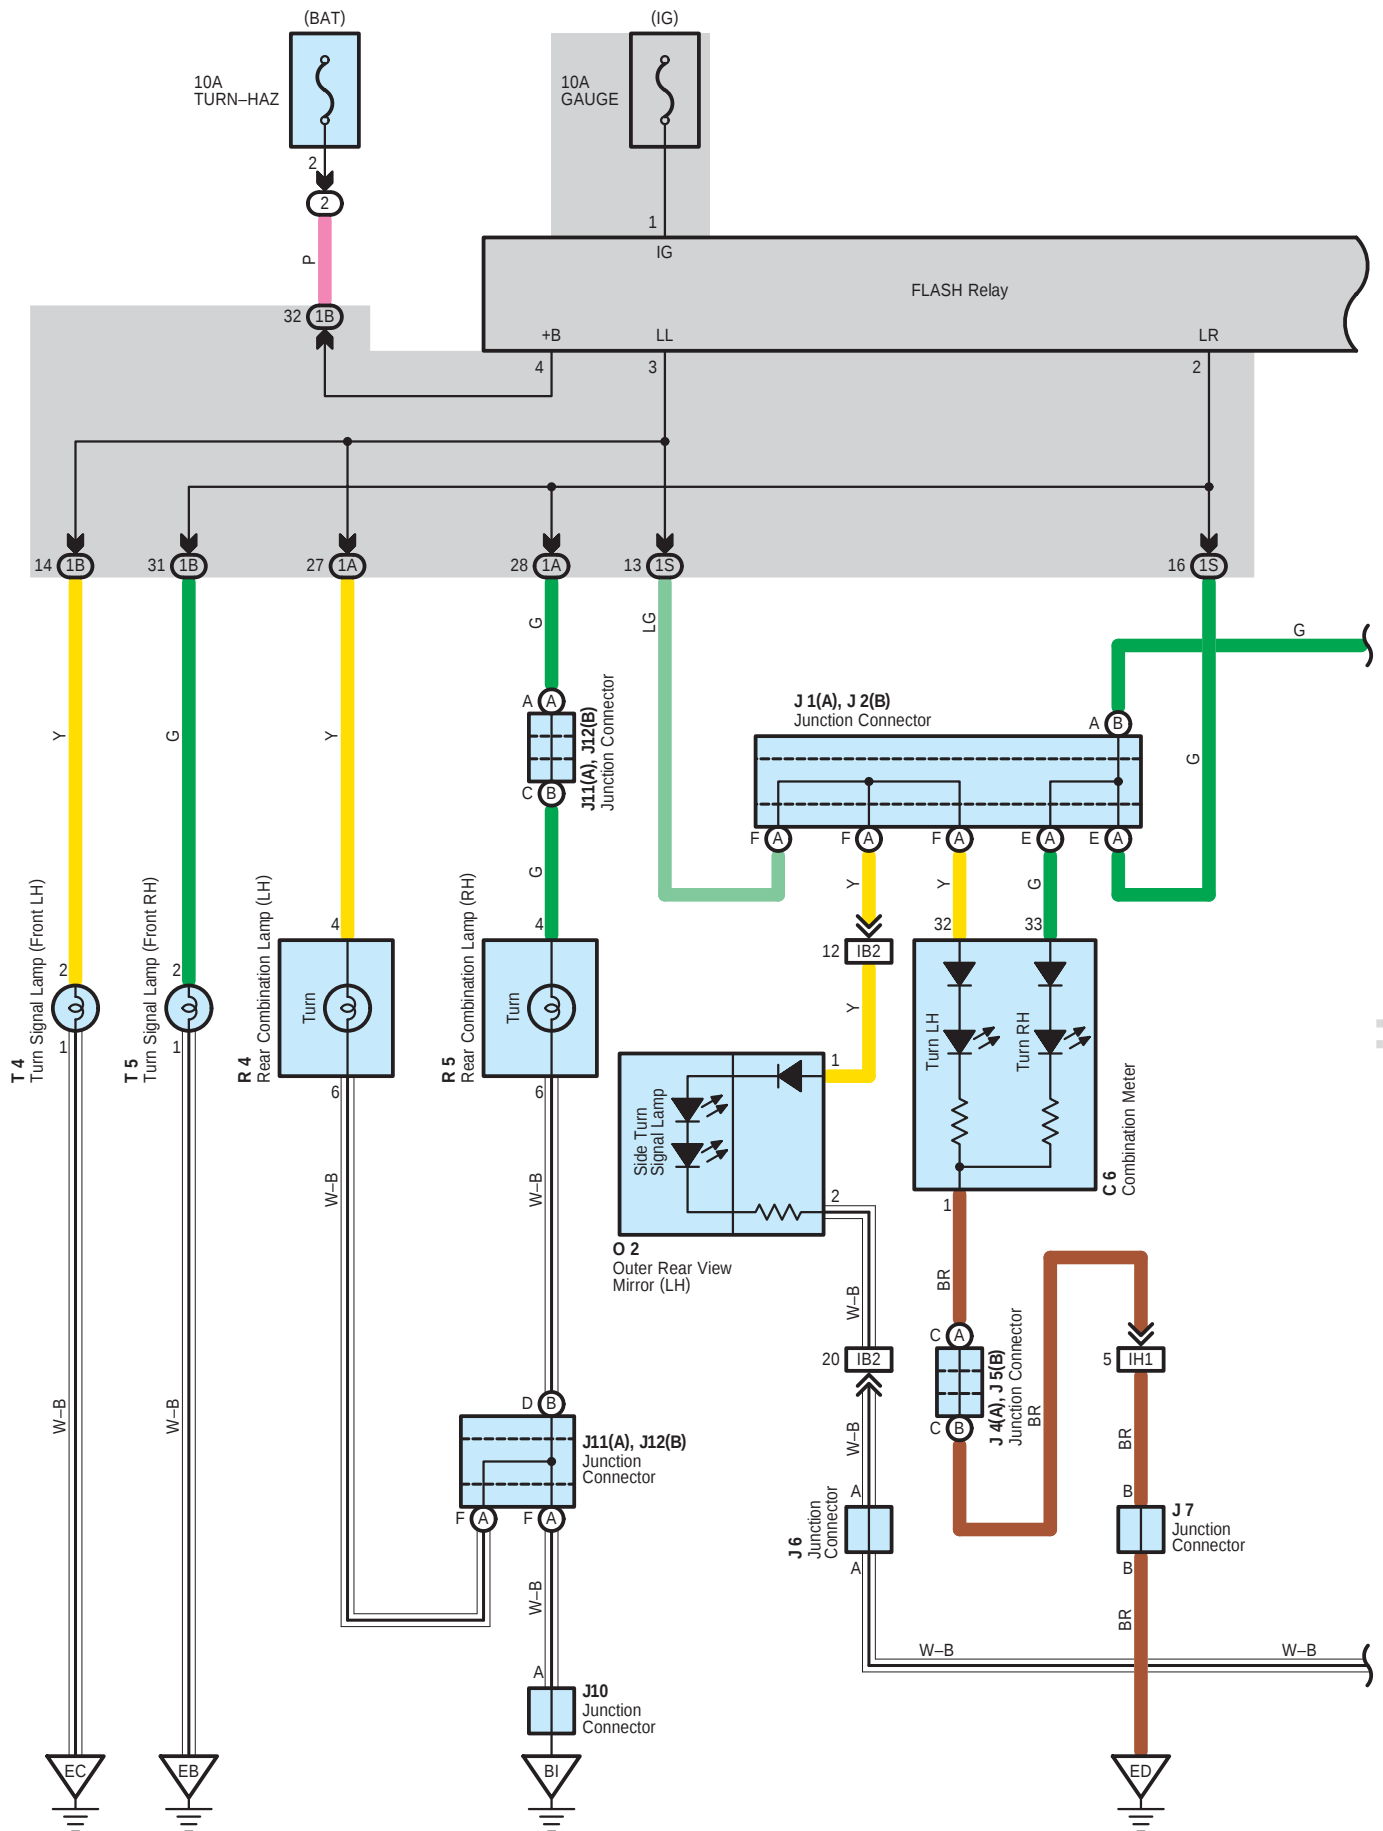

* 1 : w/ Cruise Control
 * 2 : w/o Cruise Control

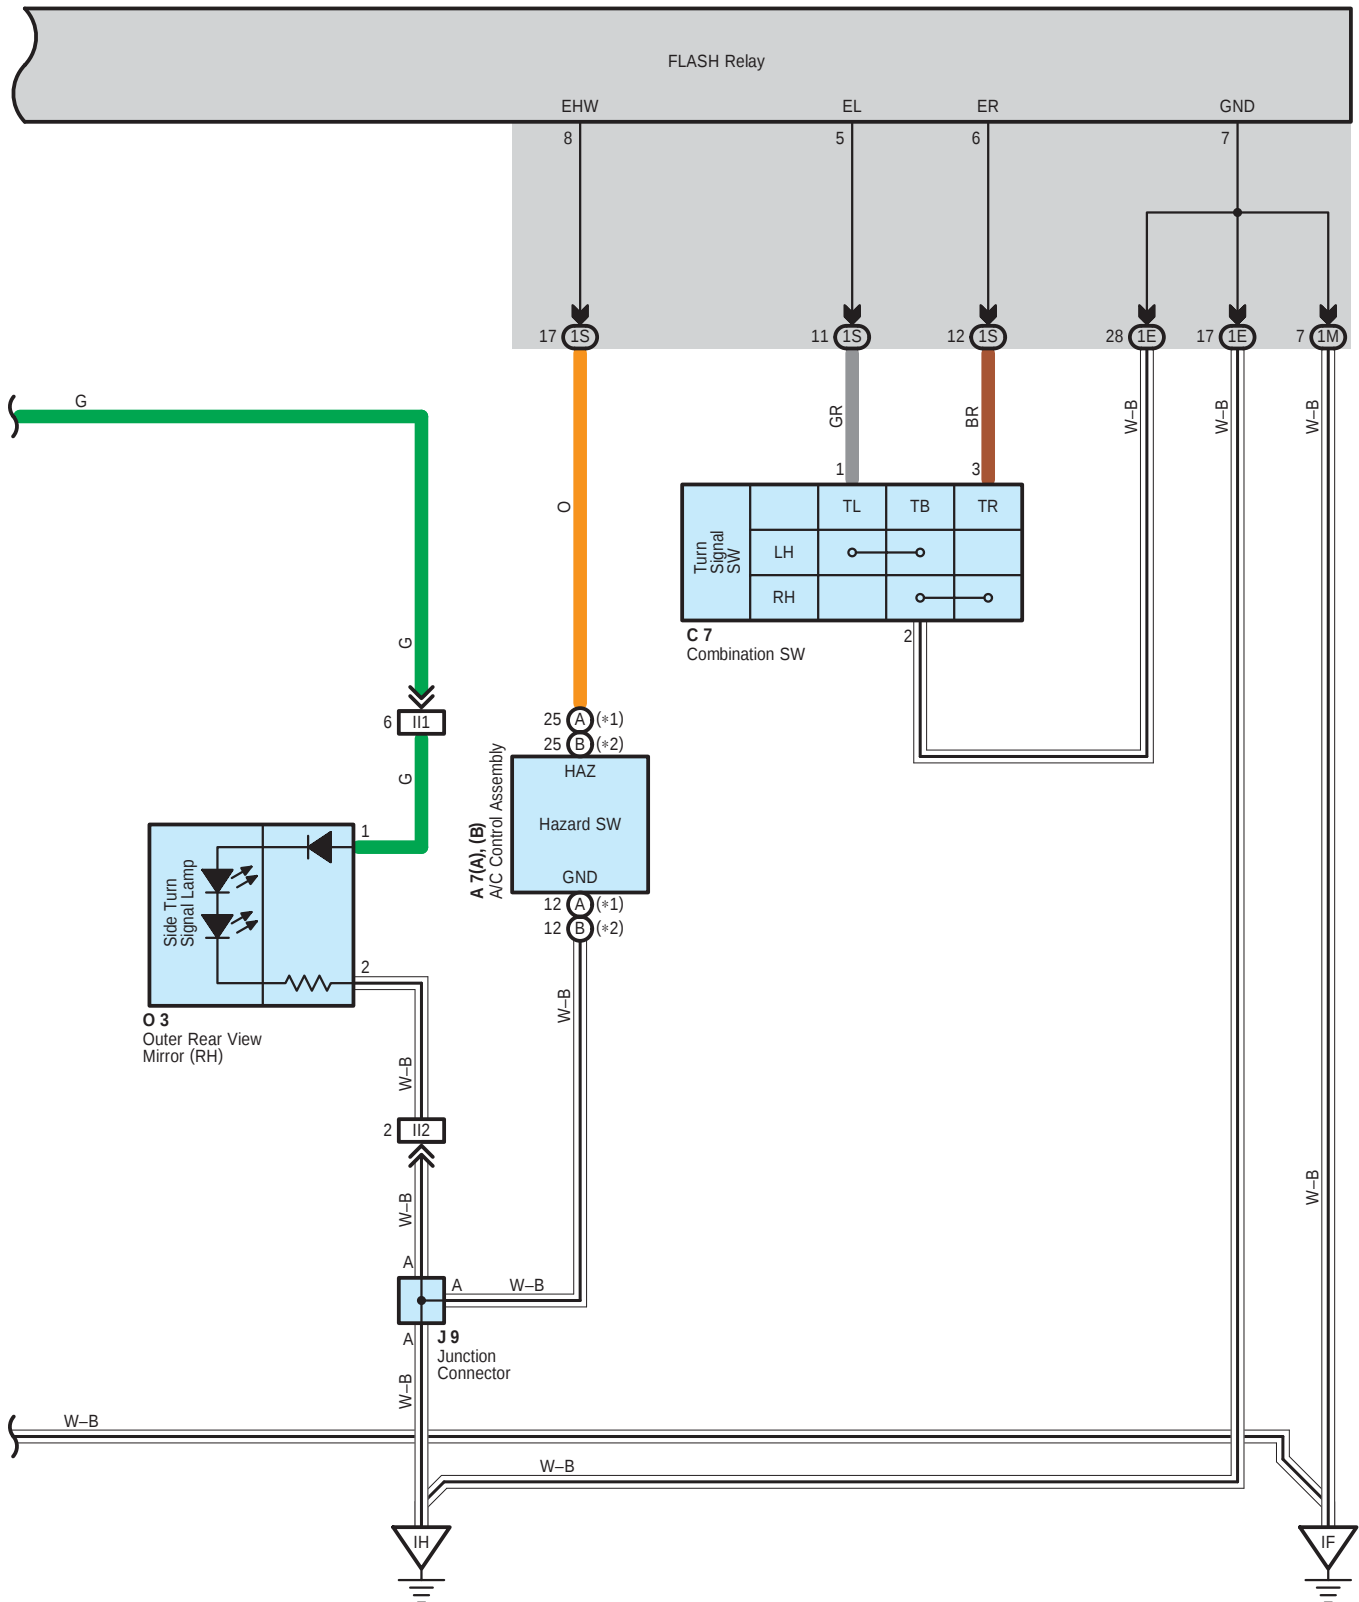

Turn Signal and Hazard Warning Light

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A7	A	36	J5	B	37	O2	39	
	B	36	J6		37	O3	39	
C6		36	J7		37	R4	39	
C7		36	J9		37	R5	39	
J1	A	37	J10		38	T4	35	
J2	B	37	J11	A	38	T5	35	
J4	A	37	J12	B	38			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1E	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	
1S		


: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
II1	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
II2		


: Ground Points


Code	See Page	Ground Points Location
EB	40	Front Right Fender
EC	40	Front Left Fender
ED	40	Front Left Side of the Cylinder Head
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH
BI	44	Quarter Panel LH

Interior Light

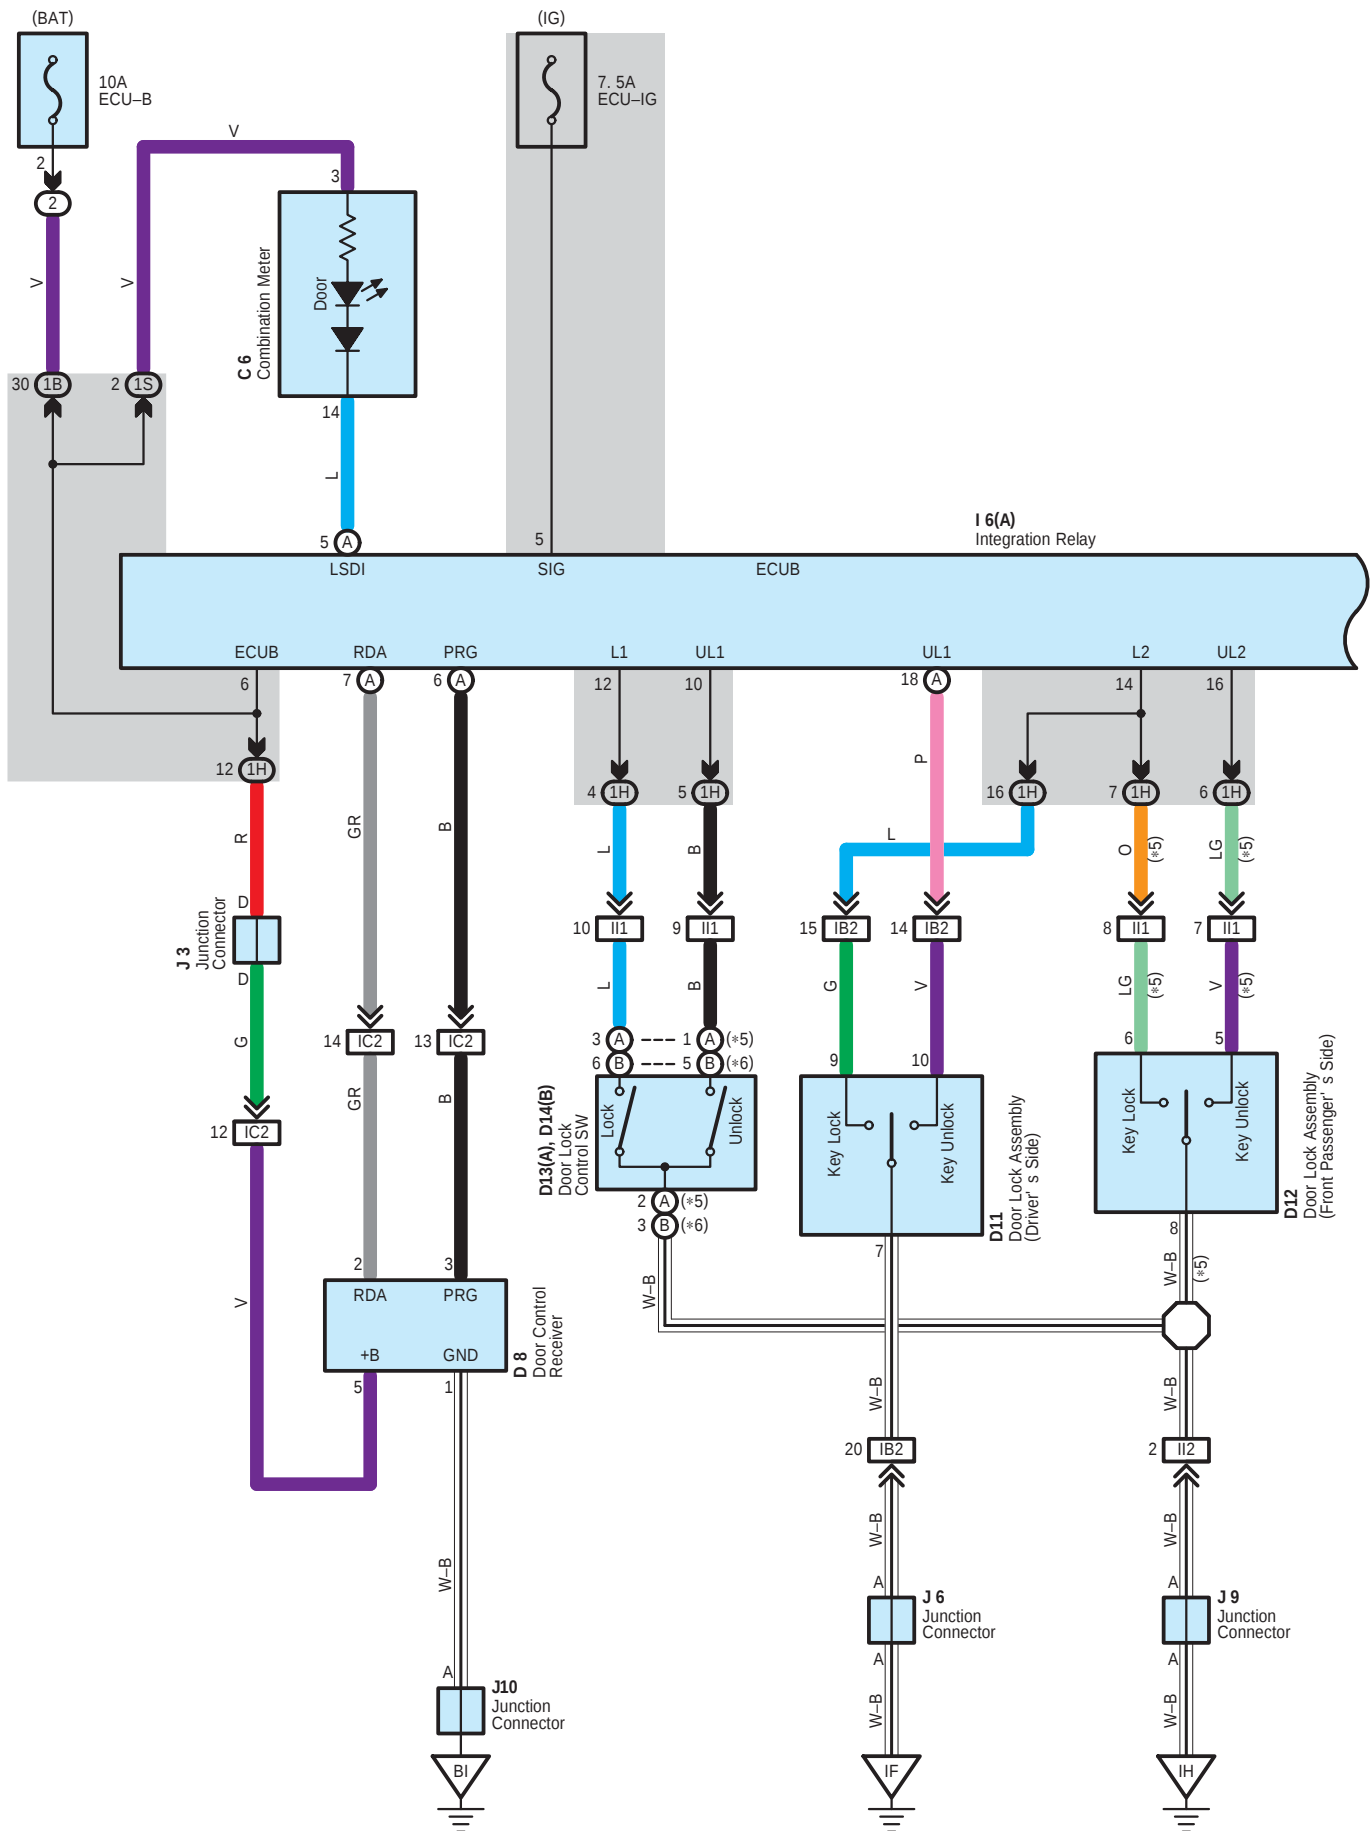

- * 1 : w/ Engine Immobiliser System
- * 2 : w/o Engine Immobiliser System
- * 5 : w/ Jam Protection
- * 6 : w/o Jam Protection

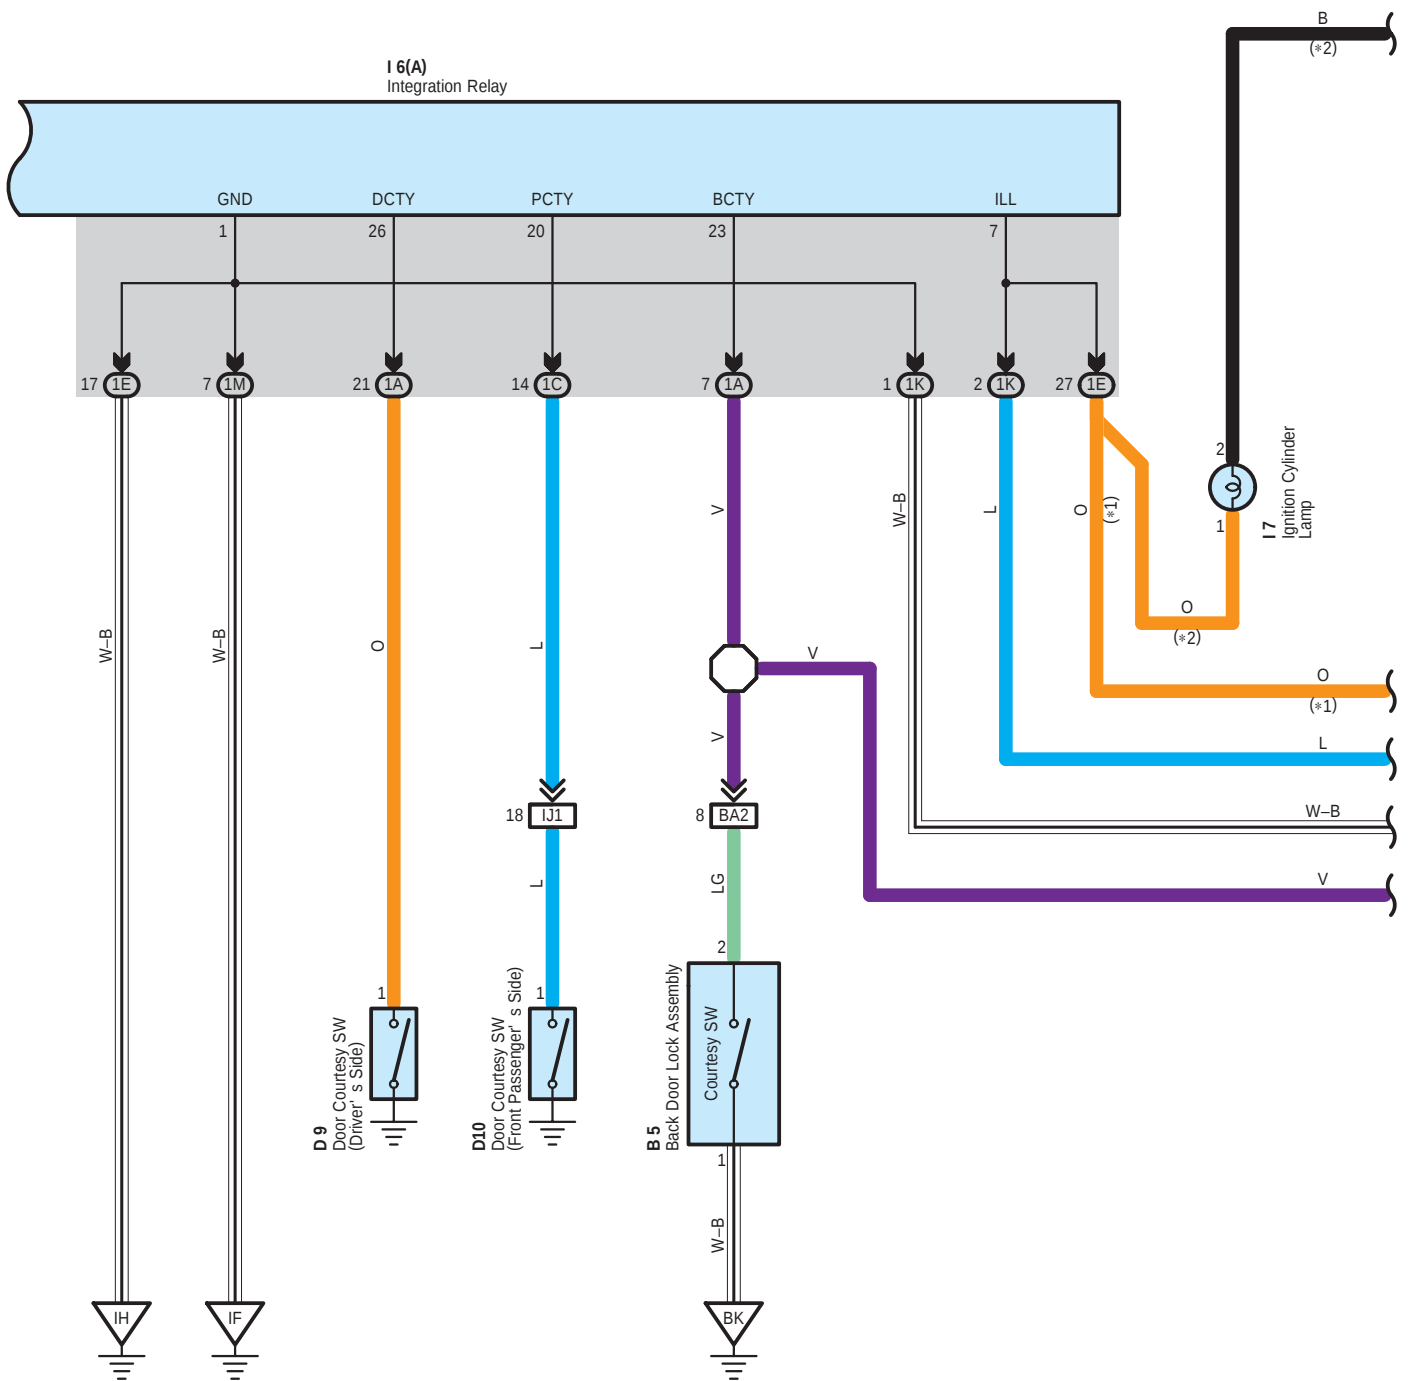

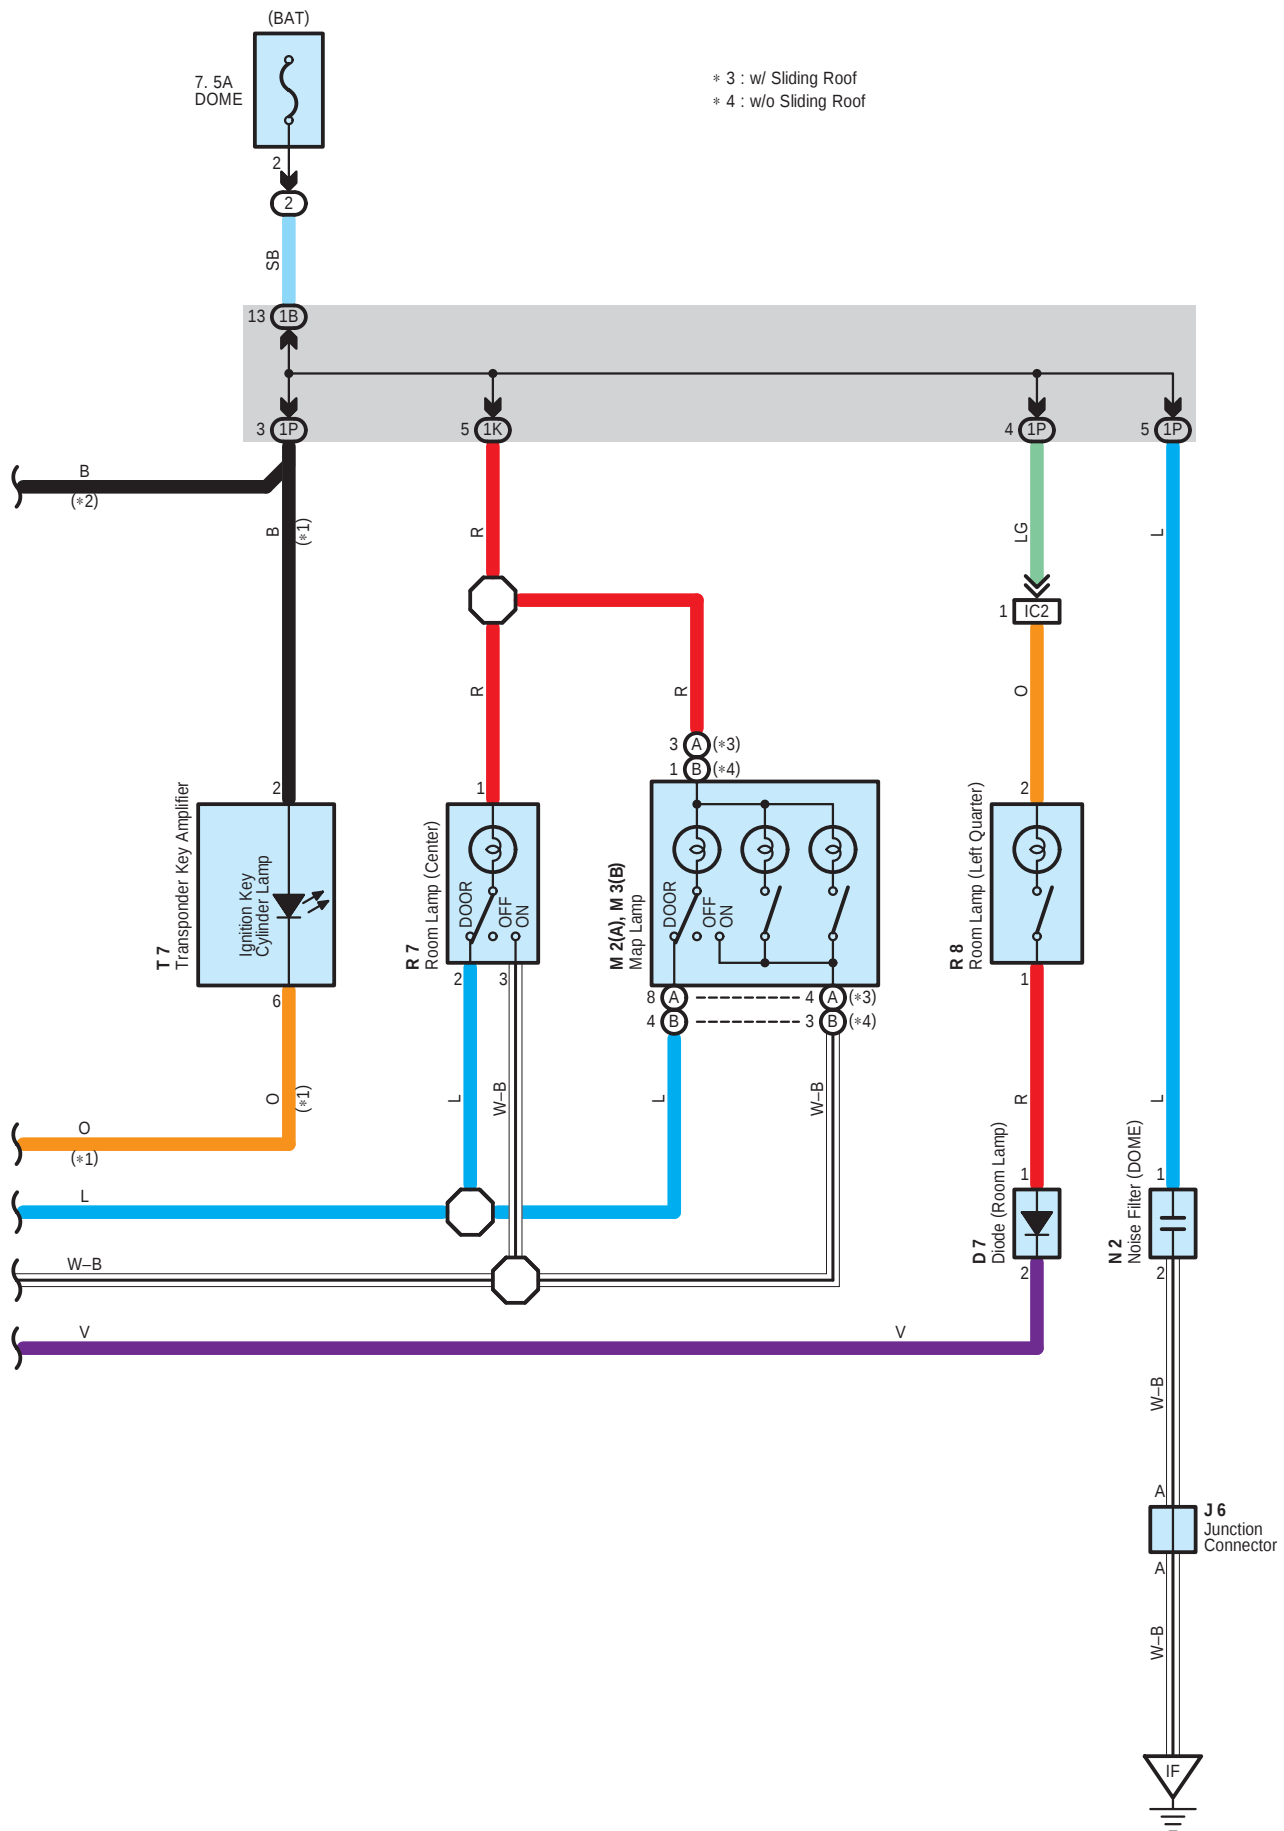

System Outline

The interior light is controlled by the integration relay. This system has following features.

Illuminated Entry System

- * When a door is unlocked through a key operation or transmitter operation, or if a door is opened or closed, the illuminated entry system turns ON the room lamp (Center), map lamp and the ignition key cylinder lamp.
- * If the ignition switch is turned to the ACC or ON position or if all doors are locked during the 15 seconds in which these lights are ON, they will immediately turn OFF.

○ : Parts Location

Code	See Page	Code		See Page	Code		See Page
B5	38	D13	A	38	M2	A	38
C6	36	D14	B	38	M3	B	38
D7	38	I6	A	37	N2		37
D8	38	I7		37	R7		39
D9	38	J3		37	R8		39
D10	38	J6		37	T7		37
D11	38	J9		37			
D12	38	J10		38			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1H		
1K	24	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1P		
1S		


□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC2	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
II1	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
II2		
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
BA2	44	Back Door No.1 Wire and Floor Wire (Back Window Upper Frame LH)

▽ : Ground Points

Code	See Page	Ground Points Location
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH
BI	44	Quarter Panel LH
BK	44	Left Side of the Back Door Panel

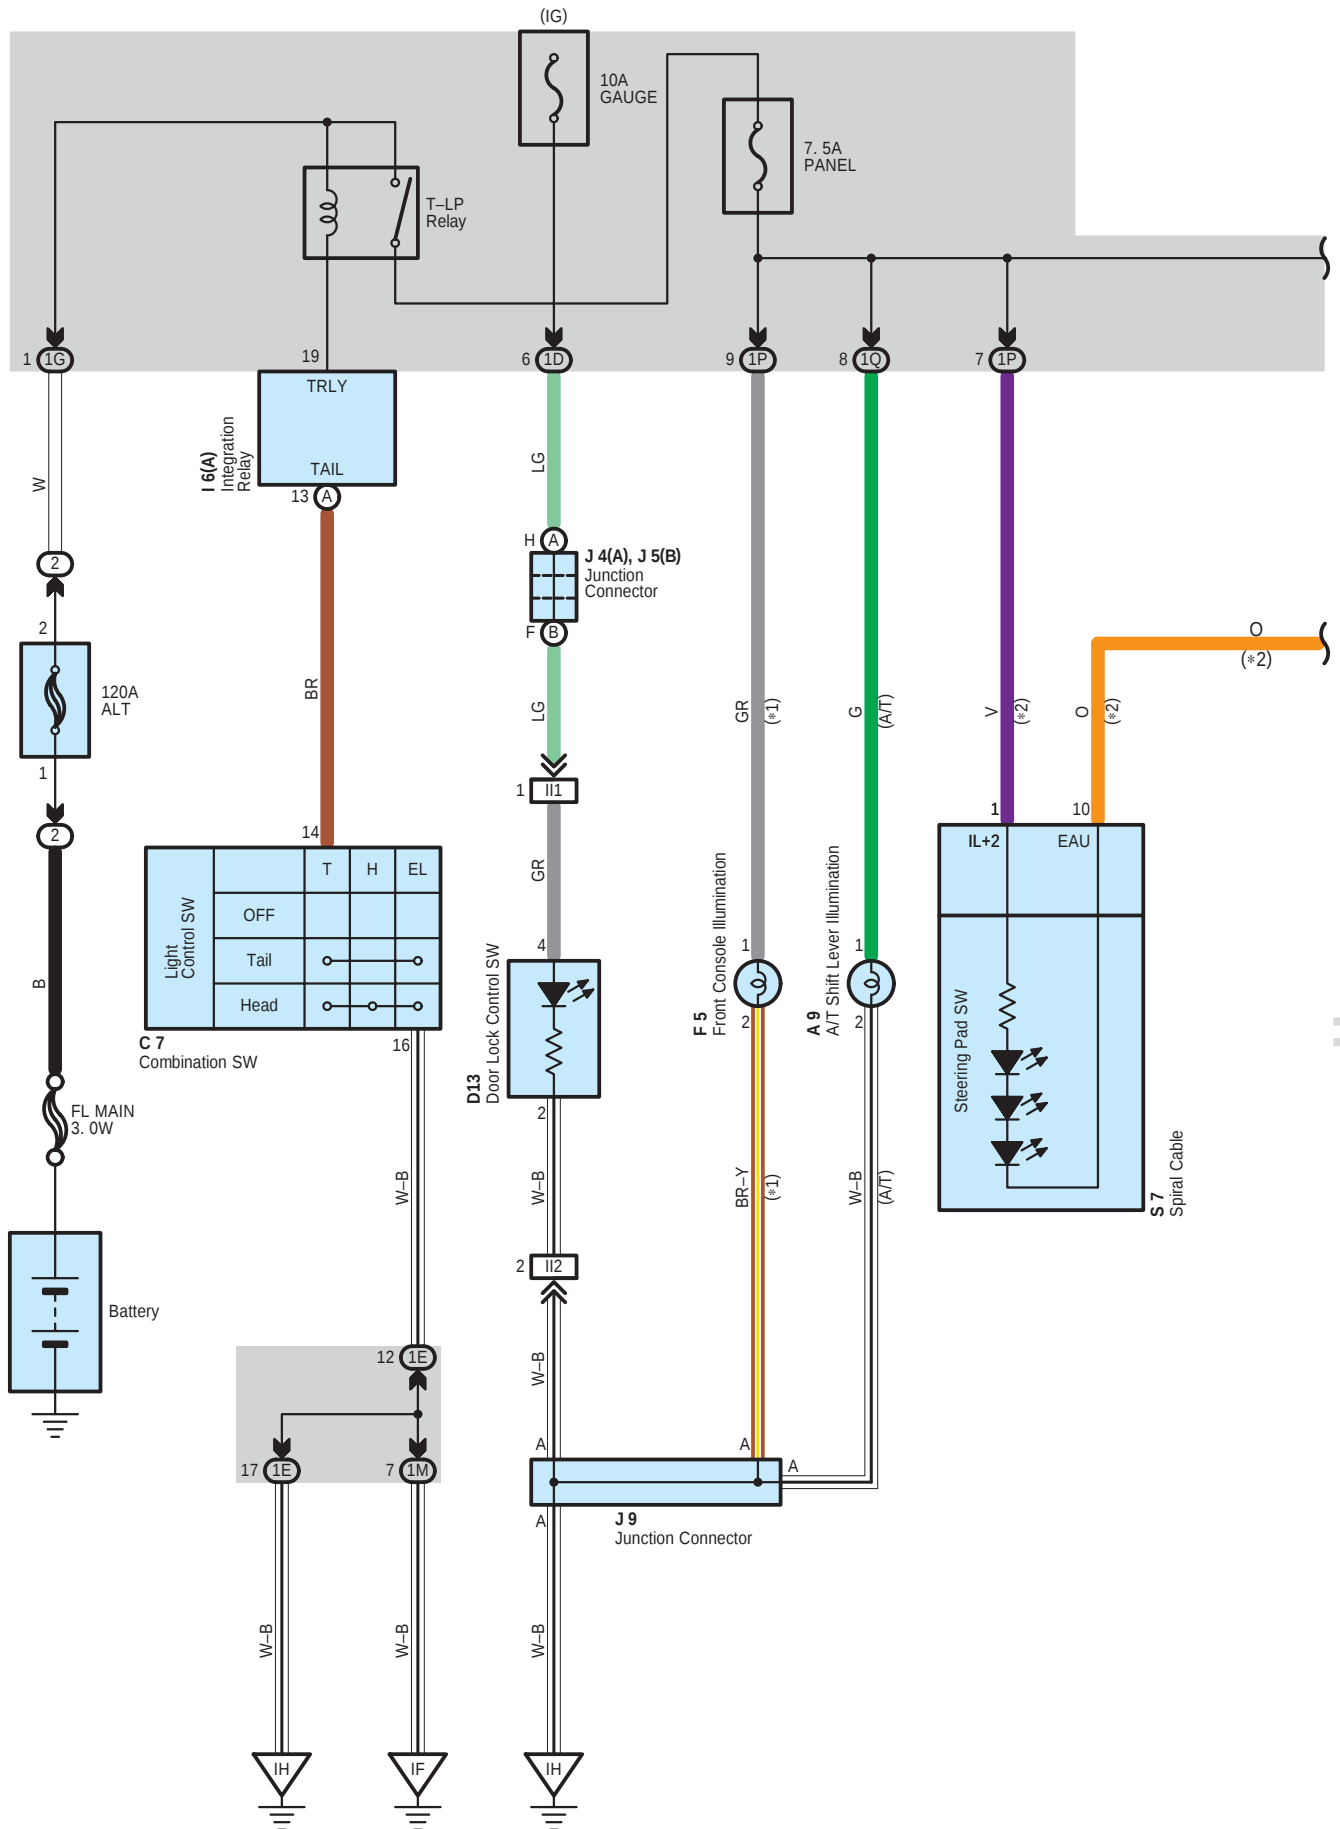

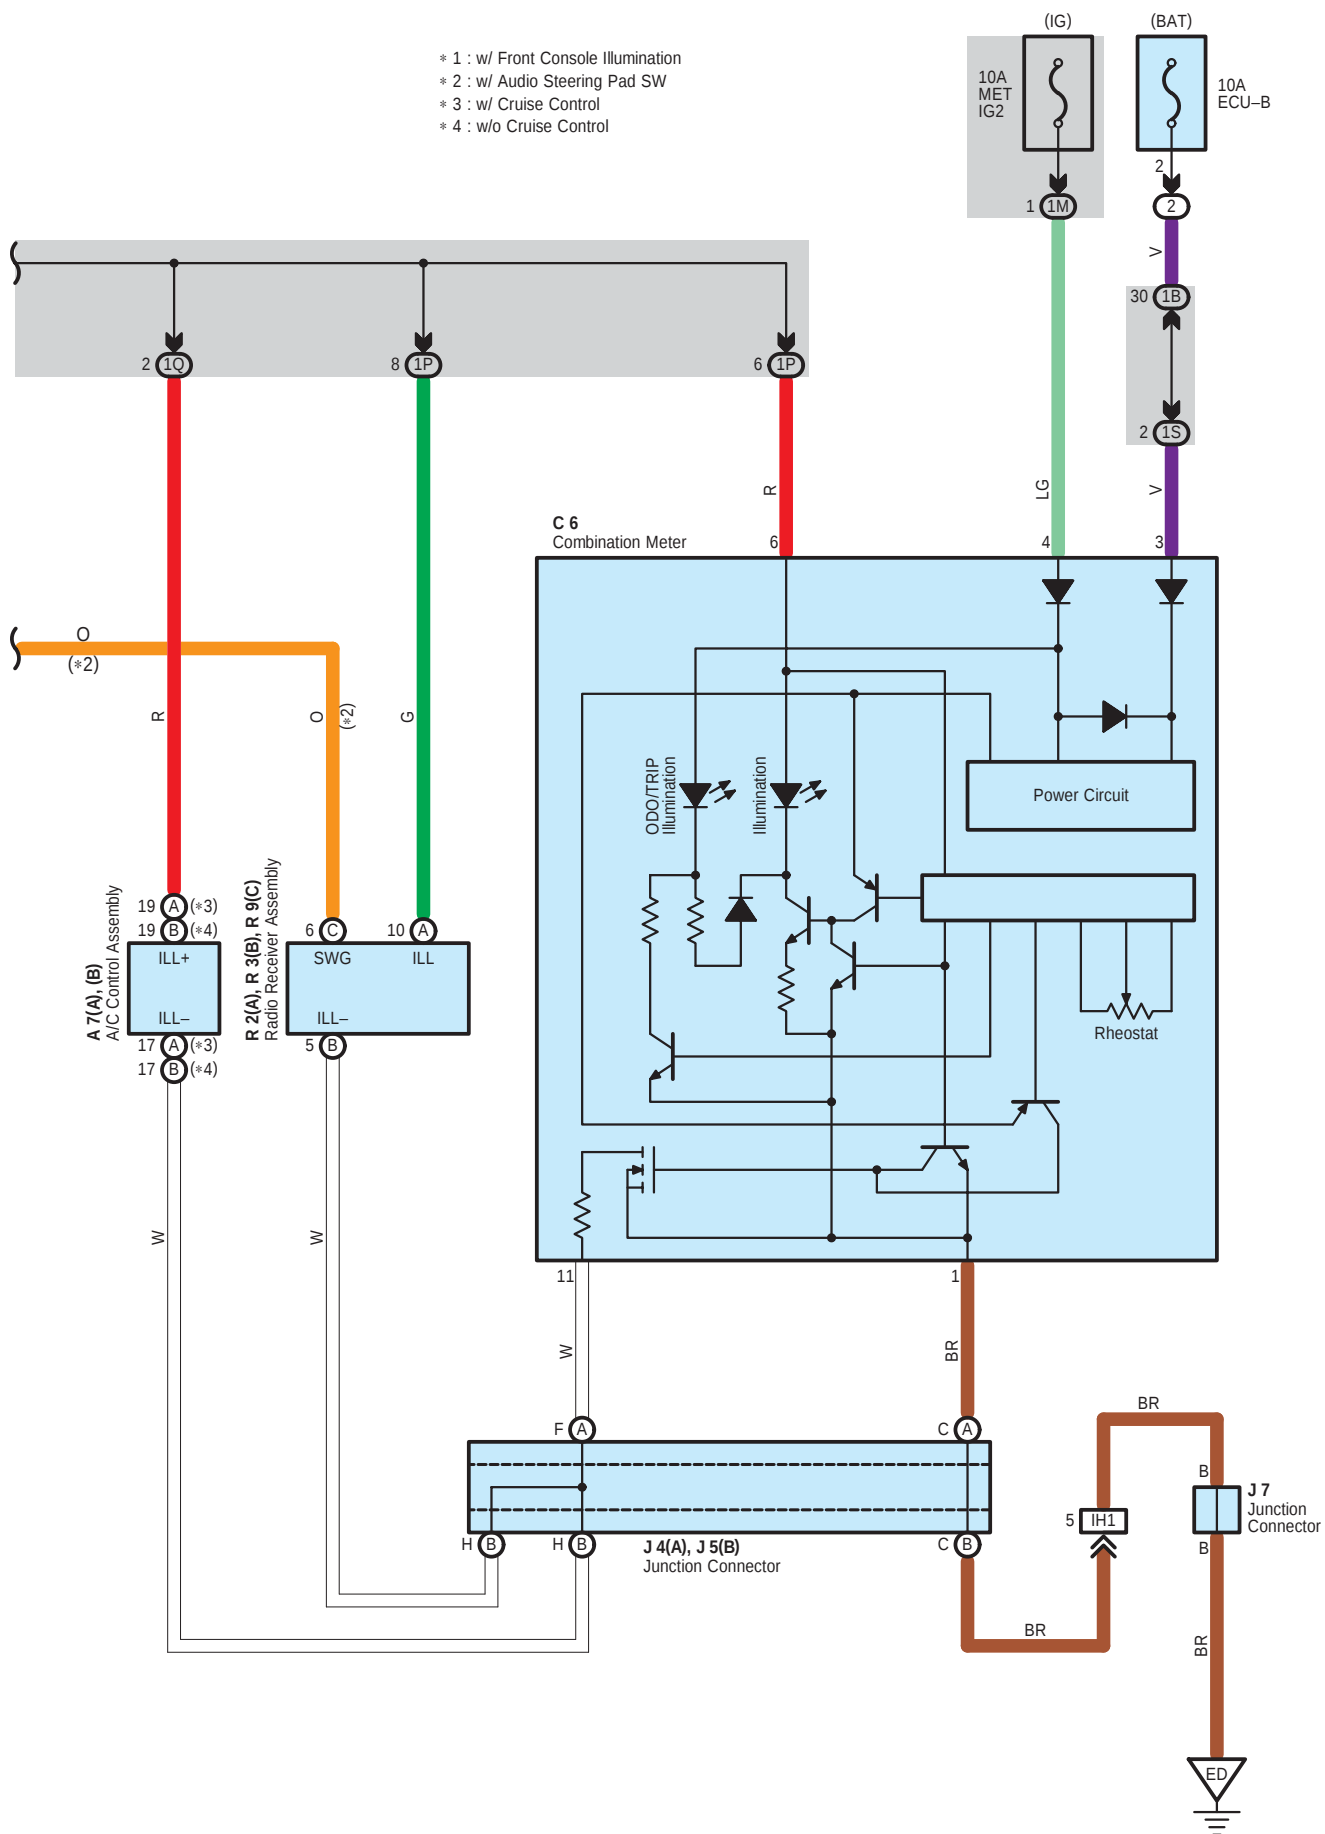

Illumination

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A7	A 36	F5	36	R2	A 37
	B 36	I6	A 37	R3	B 37
A9	36	J4	A 37	R9	C 37
C6	36	J5	B 37	S7	37
C7	36	J7	37		
D13	38	J9	37		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1D	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1G	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1M		
1P	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1Q		
1S		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
II1	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
II2		

: Ground Points

Code	See Page	Ground Points Location
ED	40	Front Left Side of the Cylinder Head
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH



 : Parts Location

Code		See Page		Code		See Page		Code		See Page	
C7		36		J12	B	38		P3		35	
I6	A	37		L2		38		R4		39	
J10		38		L3		38		R5		39	
J11	A	38		P2		35					

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1E	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1G	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BA1	44	Back Door No.1 Wire and Floor Wire (Back Window Upper Frame LH)
BA2		

 : Ground Points

Code	See Page	Ground Points Location
EB	40	Front Right Fender
EC	40	Front Left Fender
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH
BI	44	Quarter Panel LH
BJ		
BK	44	Left Side of the Back Door Panel

Stop Light

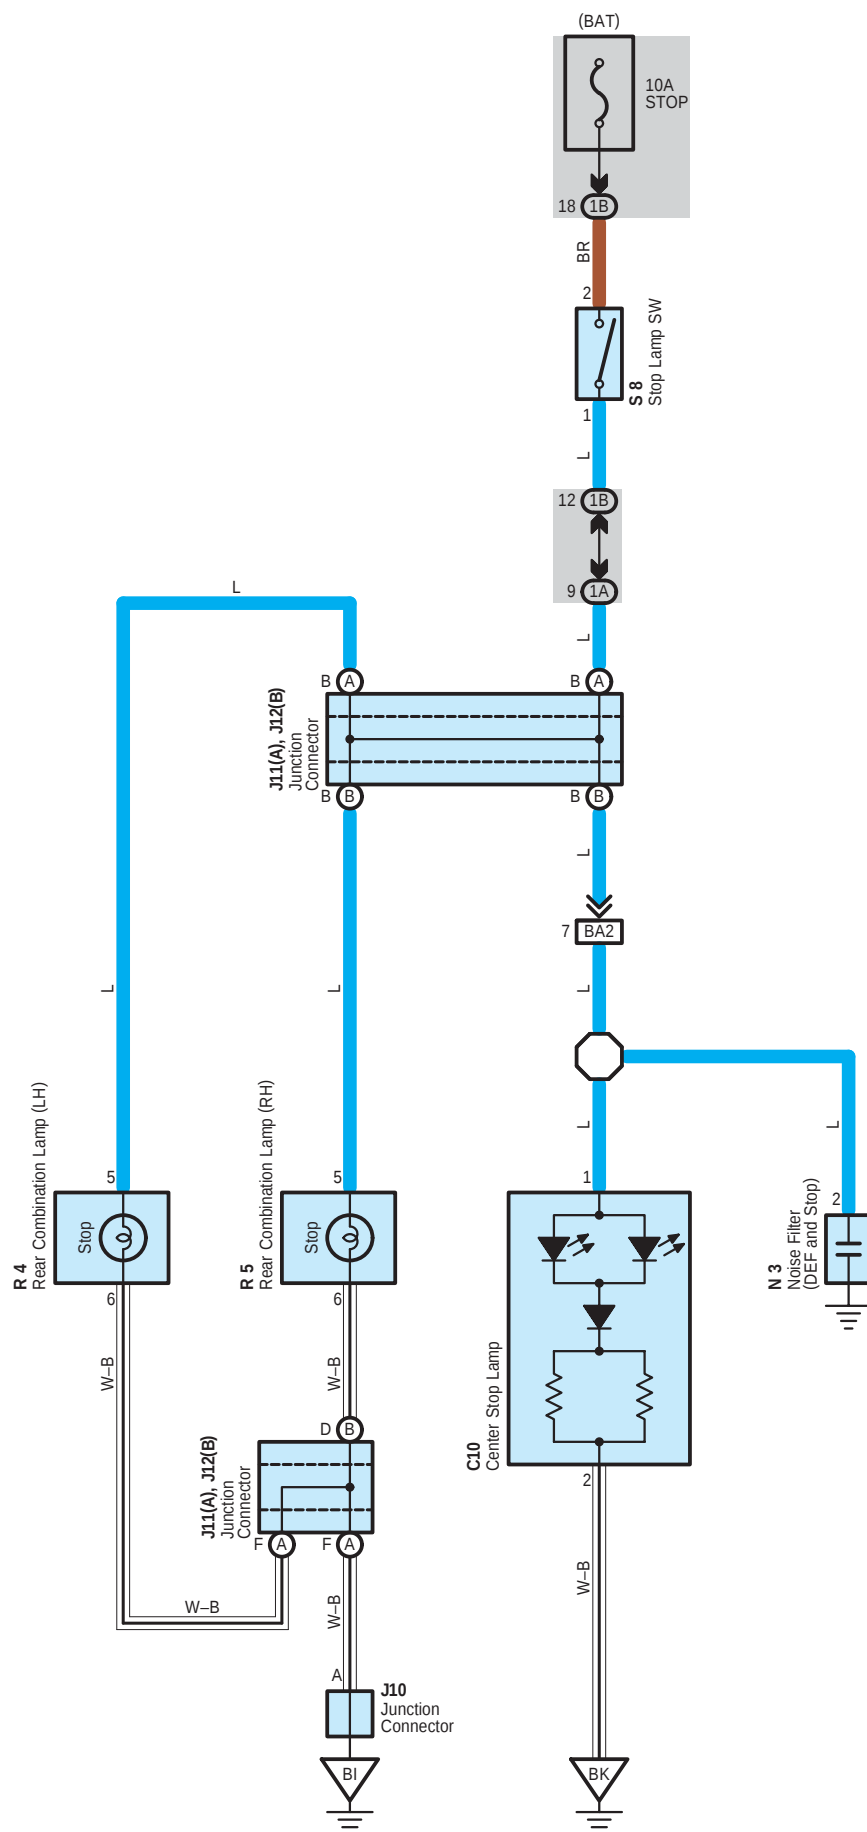

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
C10	38	J12 B	38	R5	39
J10	38	N3	38	S8	37
J11 A	38	R4	39		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BA2	44	Back Door No.1 Wire and Floor Wire (Back Window Upper Frame LH)

 : Ground Points

Code	See Page	Ground Points Location
BI	44	Quarter Panel LH
BK	44	Left Side of the Back Door Panel

Back-Up Light

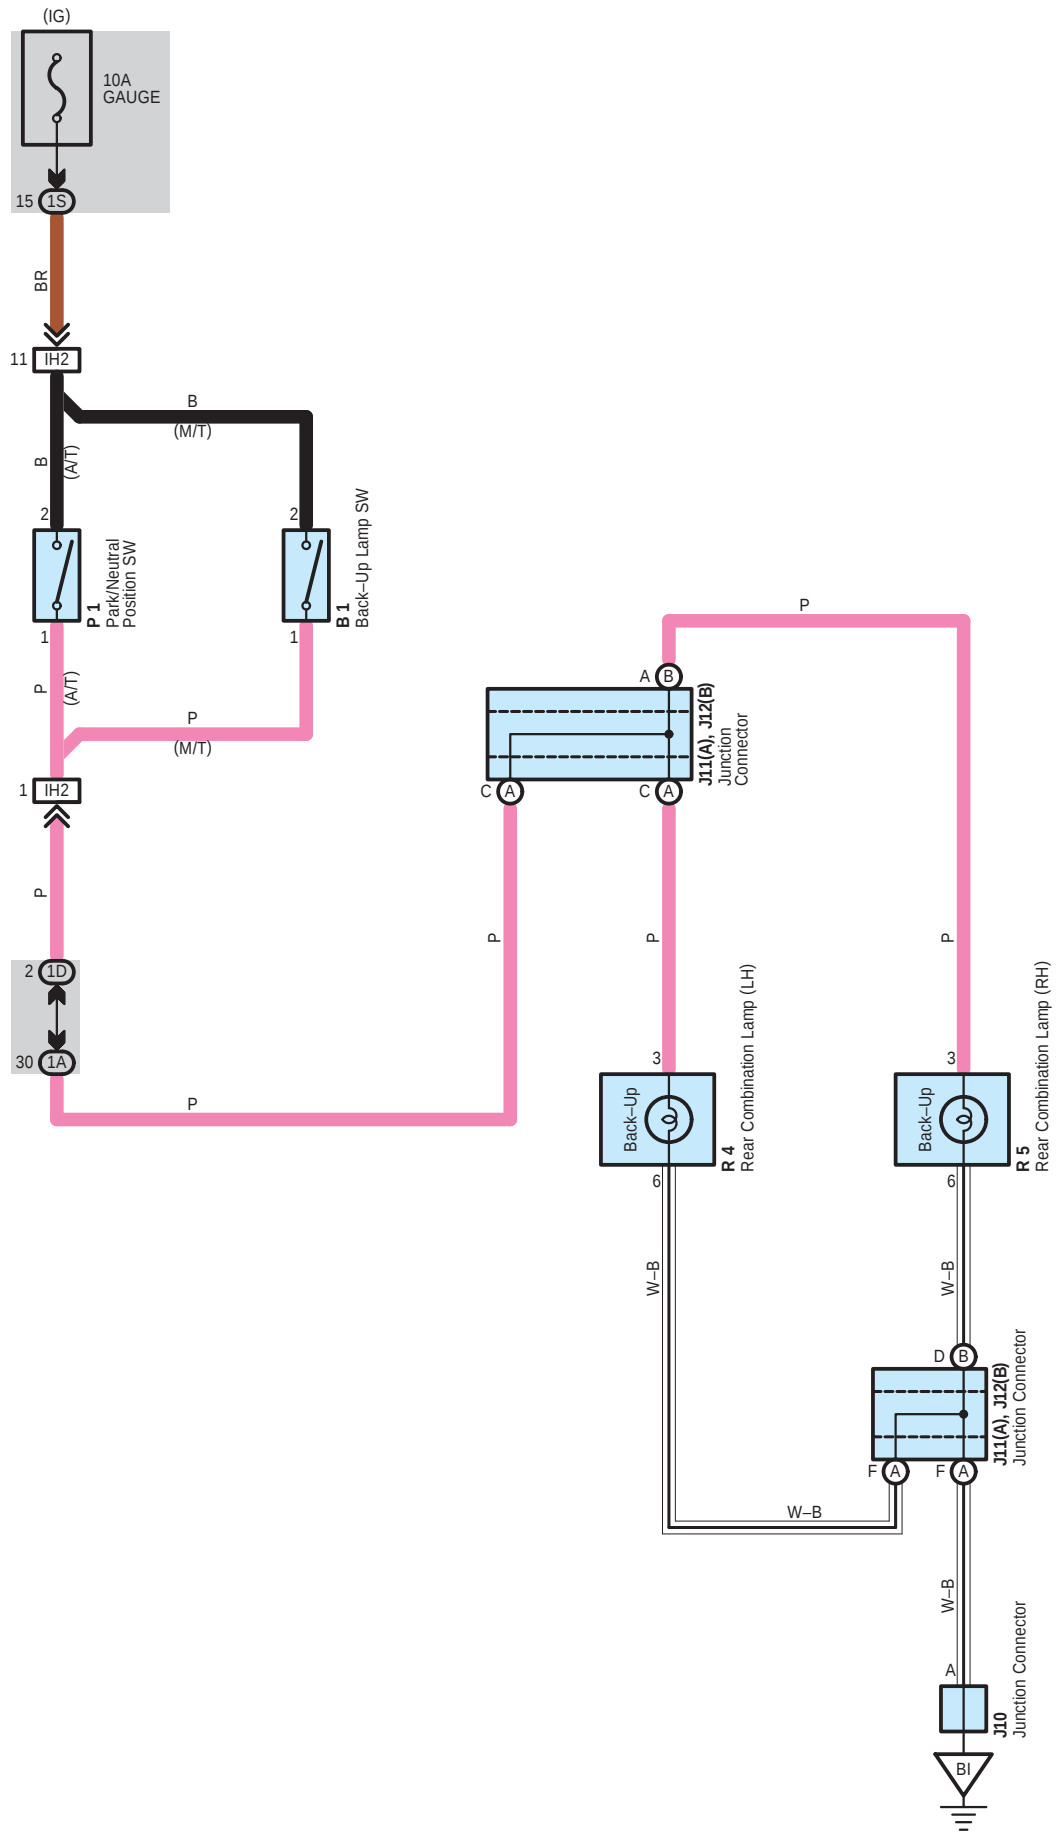

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
B1	34	J12 B	38	R5	39
J10	38	P1	35		
J11 A	38	R4	39		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1D	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1S	25	

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH2	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)

 : **Ground Points**

Code	See Page	Ground Points Location
BI	44	Quarter Panel LH



System Outline

With the ignition SW turned on, the current flows to TERMINAL 17 of the wiper and washer SW and TERMINAL 2 of the windshield wiper motor through the FR WIP fuse. The current flows to TERMINAL 1 of the windshield washer motor through the FR WSH fuse.

1. Low Speed Position

With the wiper and washer SW turned to LO position, the current flows from TERMINAL 17 of the wiper and washer SW to TERMINAL 7 to TERMINAL 1 of the windshield wiper motor to TERMINAL 5 to GROUND and causes the windshield wiper motor to run at low speed.

2. High Speed Position

With the wiper and washer SW turned to HI position, the current flows from TERMINAL 17 of the wiper and washer SW to TERMINAL 8 to TERMINAL 4 of the windshield wiper motor to TERMINAL 5 to GROUND and causes the windshield wiper motor to run at high speed.

3. INT Position

With the wiper and washer SW turned to INT position, the wiper relay operates and current flows from TERMINAL 17 of the wiper and washer SW to TERMINAL 2 to GROUND. This activates the intermittent circuit and the current flows from TERMINAL 17 of the wiper and washer SW to TERMINAL 7 to TERMINAL 1 of the windshield wiper motor to TERMINAL 5 to GROUND and the wiper operates. Intermittent operation is controlled by a condenser charge and discharge function in the relay.

4. Washer Continuous Operation

With the wiper and washer SW pulled to WASHER position (Washer SW ON position), the current flows from the FR WSH fuse to TERMINAL 1 of the windshield washer motor to TERMINAL 2 to TERMINAL 11 of the wiper and washer SW to TERMINAL 2 to GROUND and causes the windshield washer motor to run and the window washer to spray. Simultaneously, current flows from the FR WIP fuse to TERMINAL 17 of the wiper and washer SW to TERMINAL 7 to TERMINAL 1 of the windshield wiper motor to TERMINAL 5 to GROUND, causing the wiper to function.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	36	W1	35	W2	35

○ : Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1E	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1J		
1M	25	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	40	Front Right Fender
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH

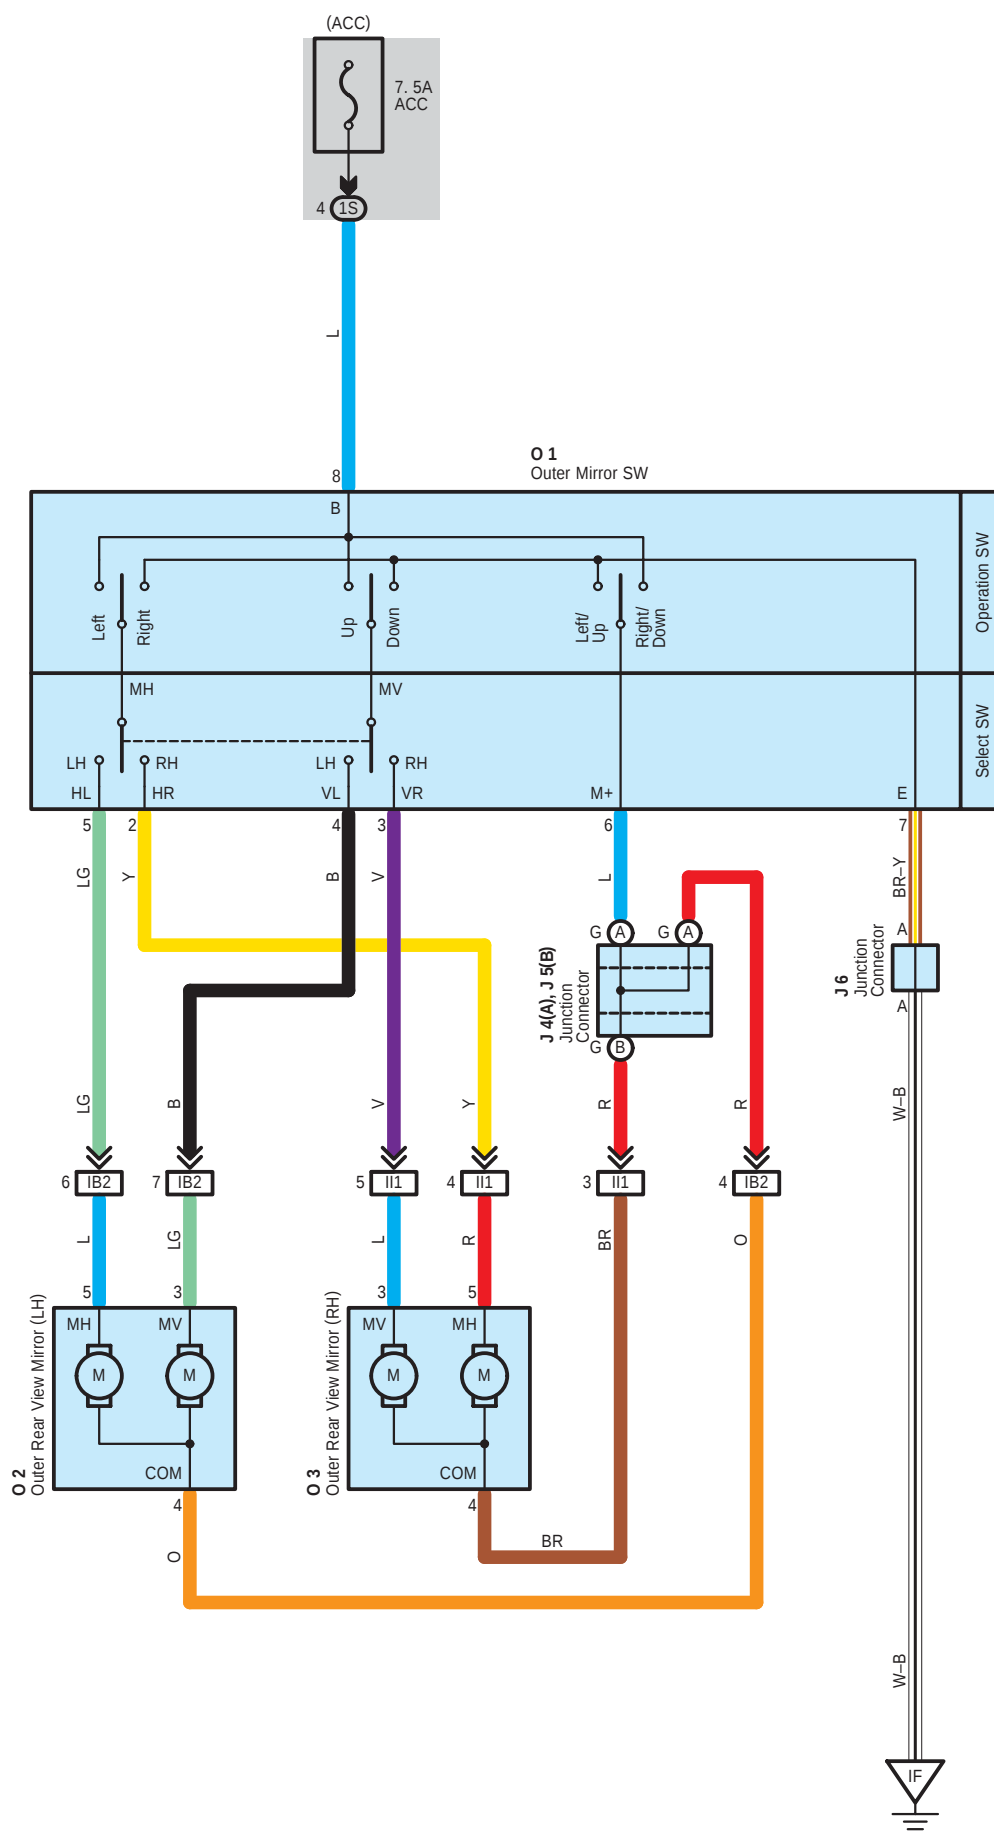

 : Parts Location

Code		See Page	Code	See Page	Code	See Page
J4	A	37	J6	37	O2	39
J5	B	37	O1	37	O3	39

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1S	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
II1	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)


 : Ground Points

Code	See Page	Ground Points Location
IF	42	Cowl Brace LH


Power Window with Jam Protection

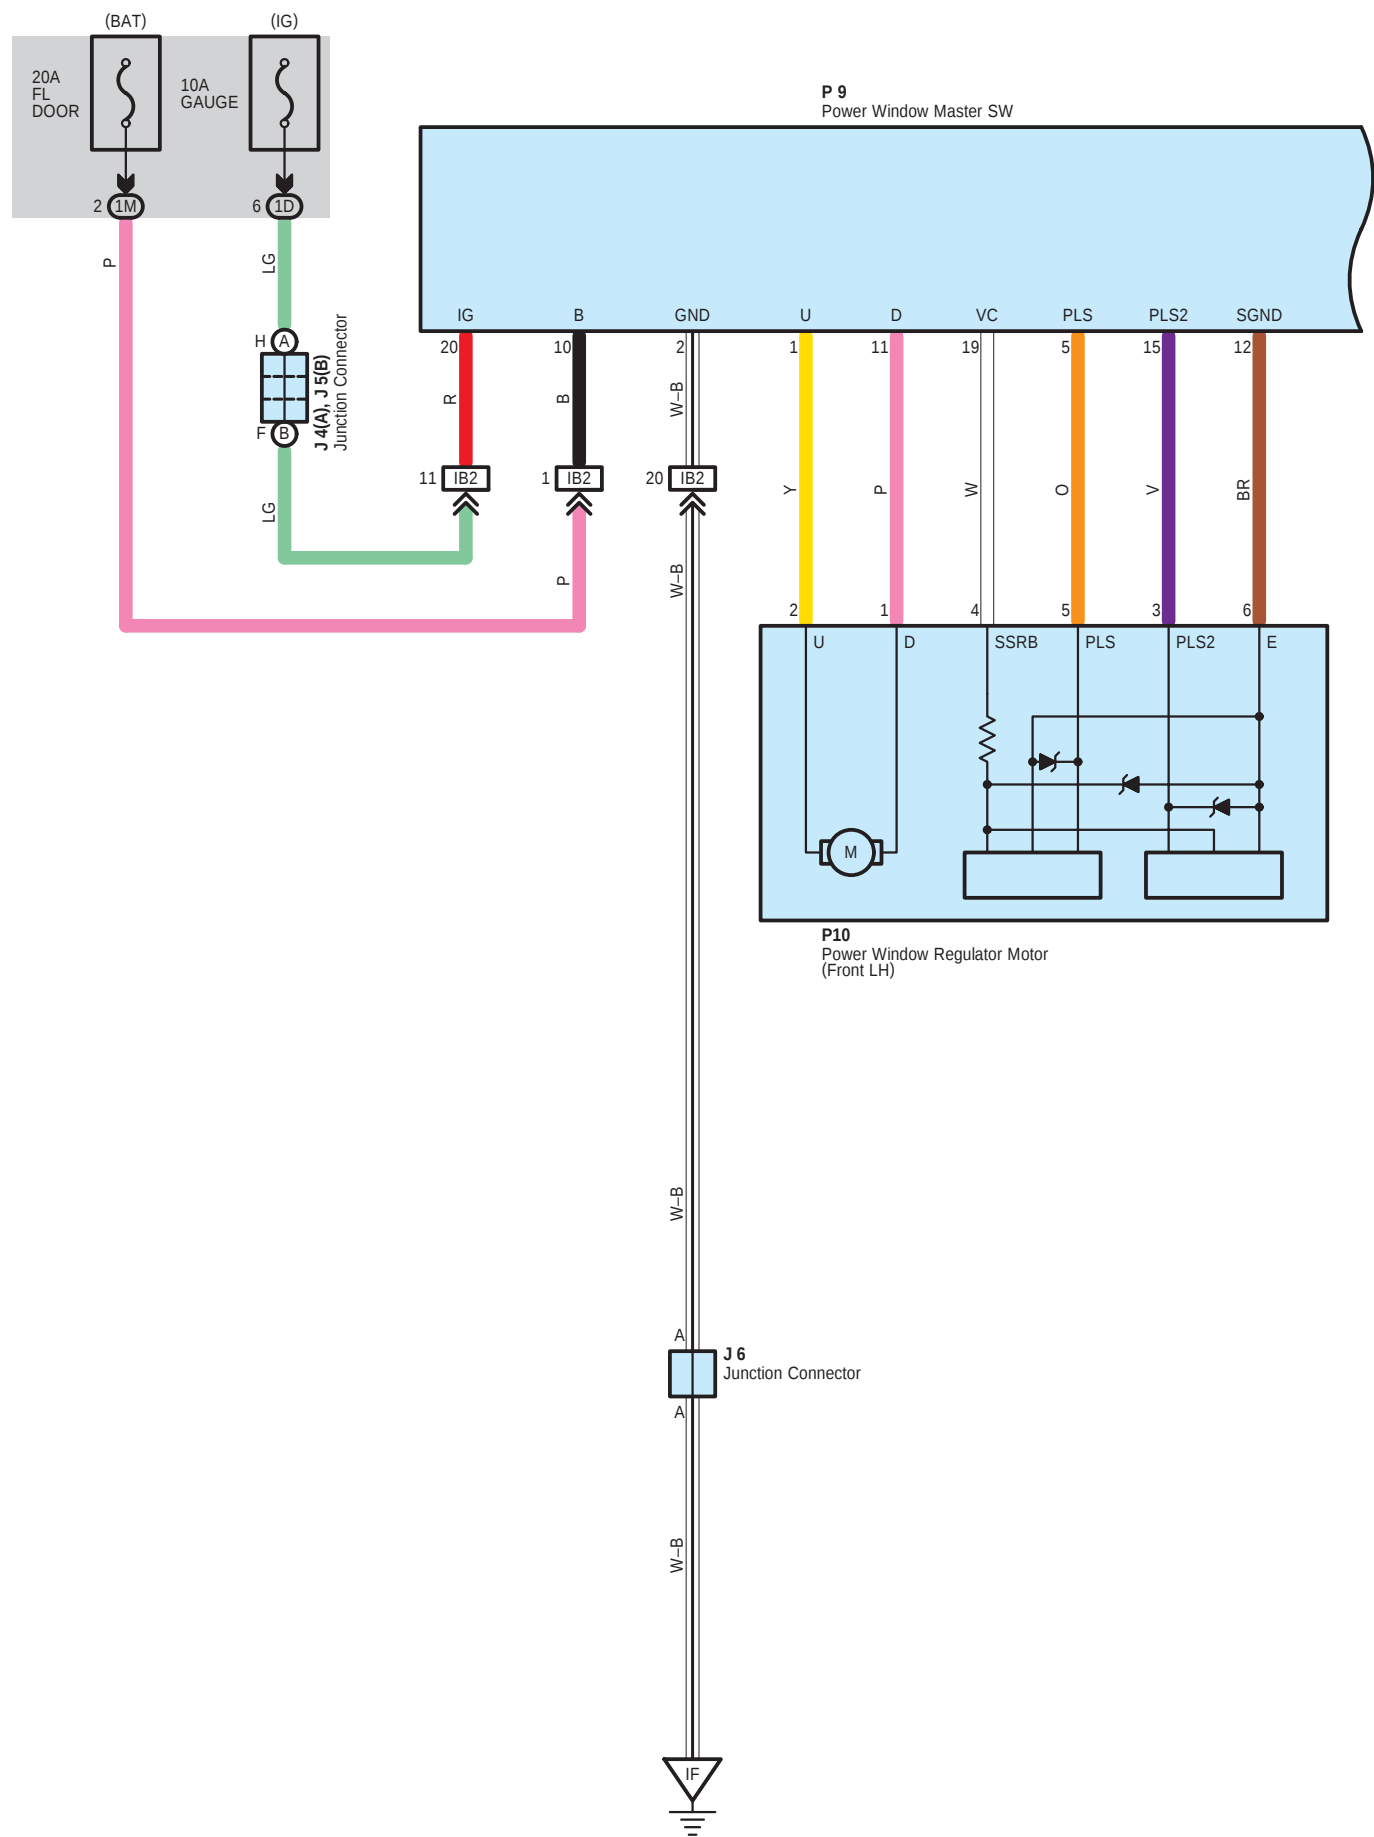

cardiagn.com

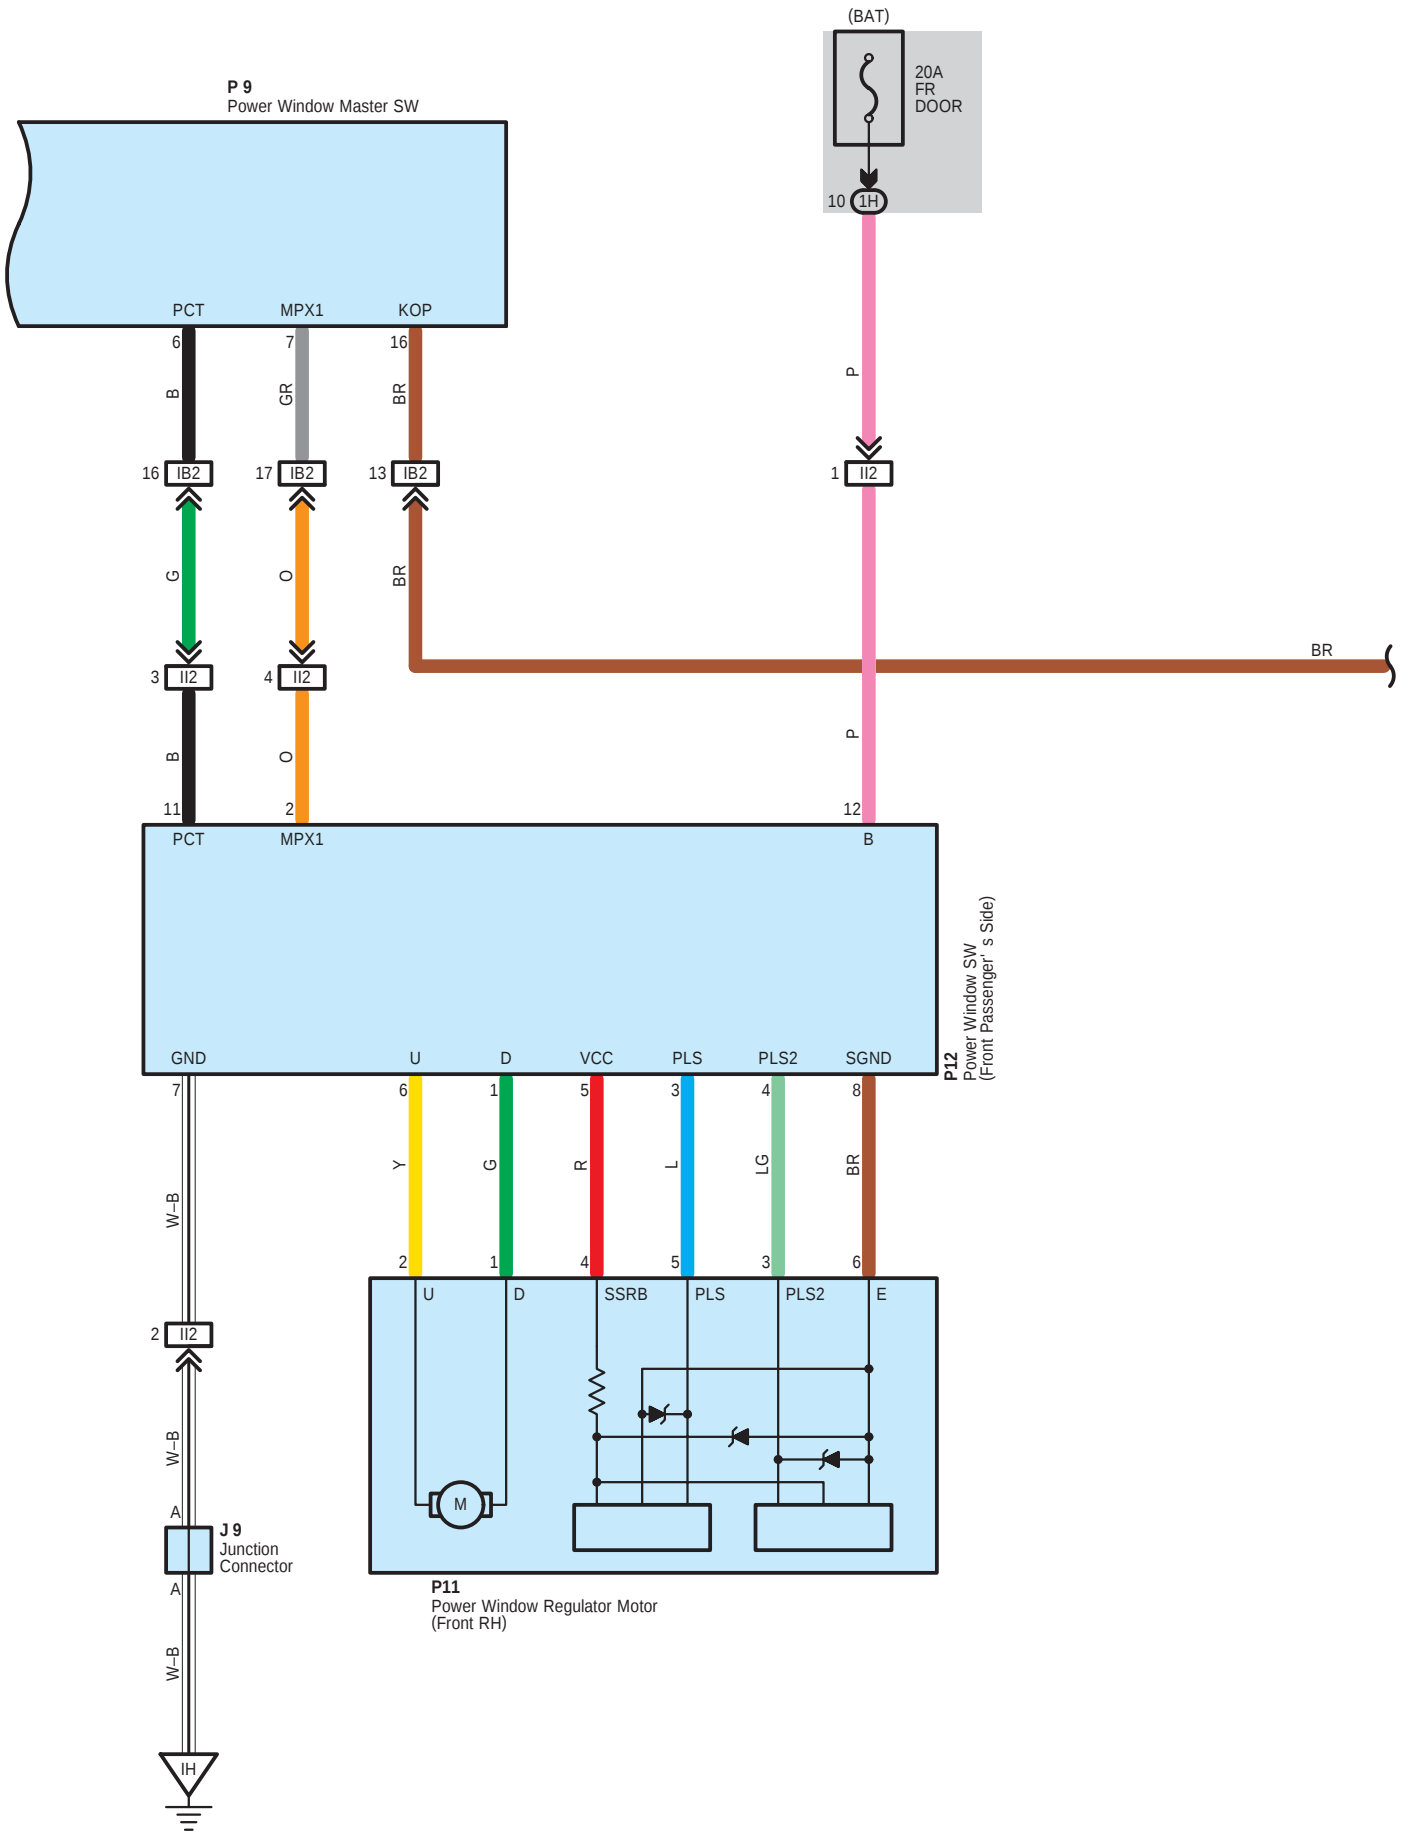

Power Window with Jam Protection

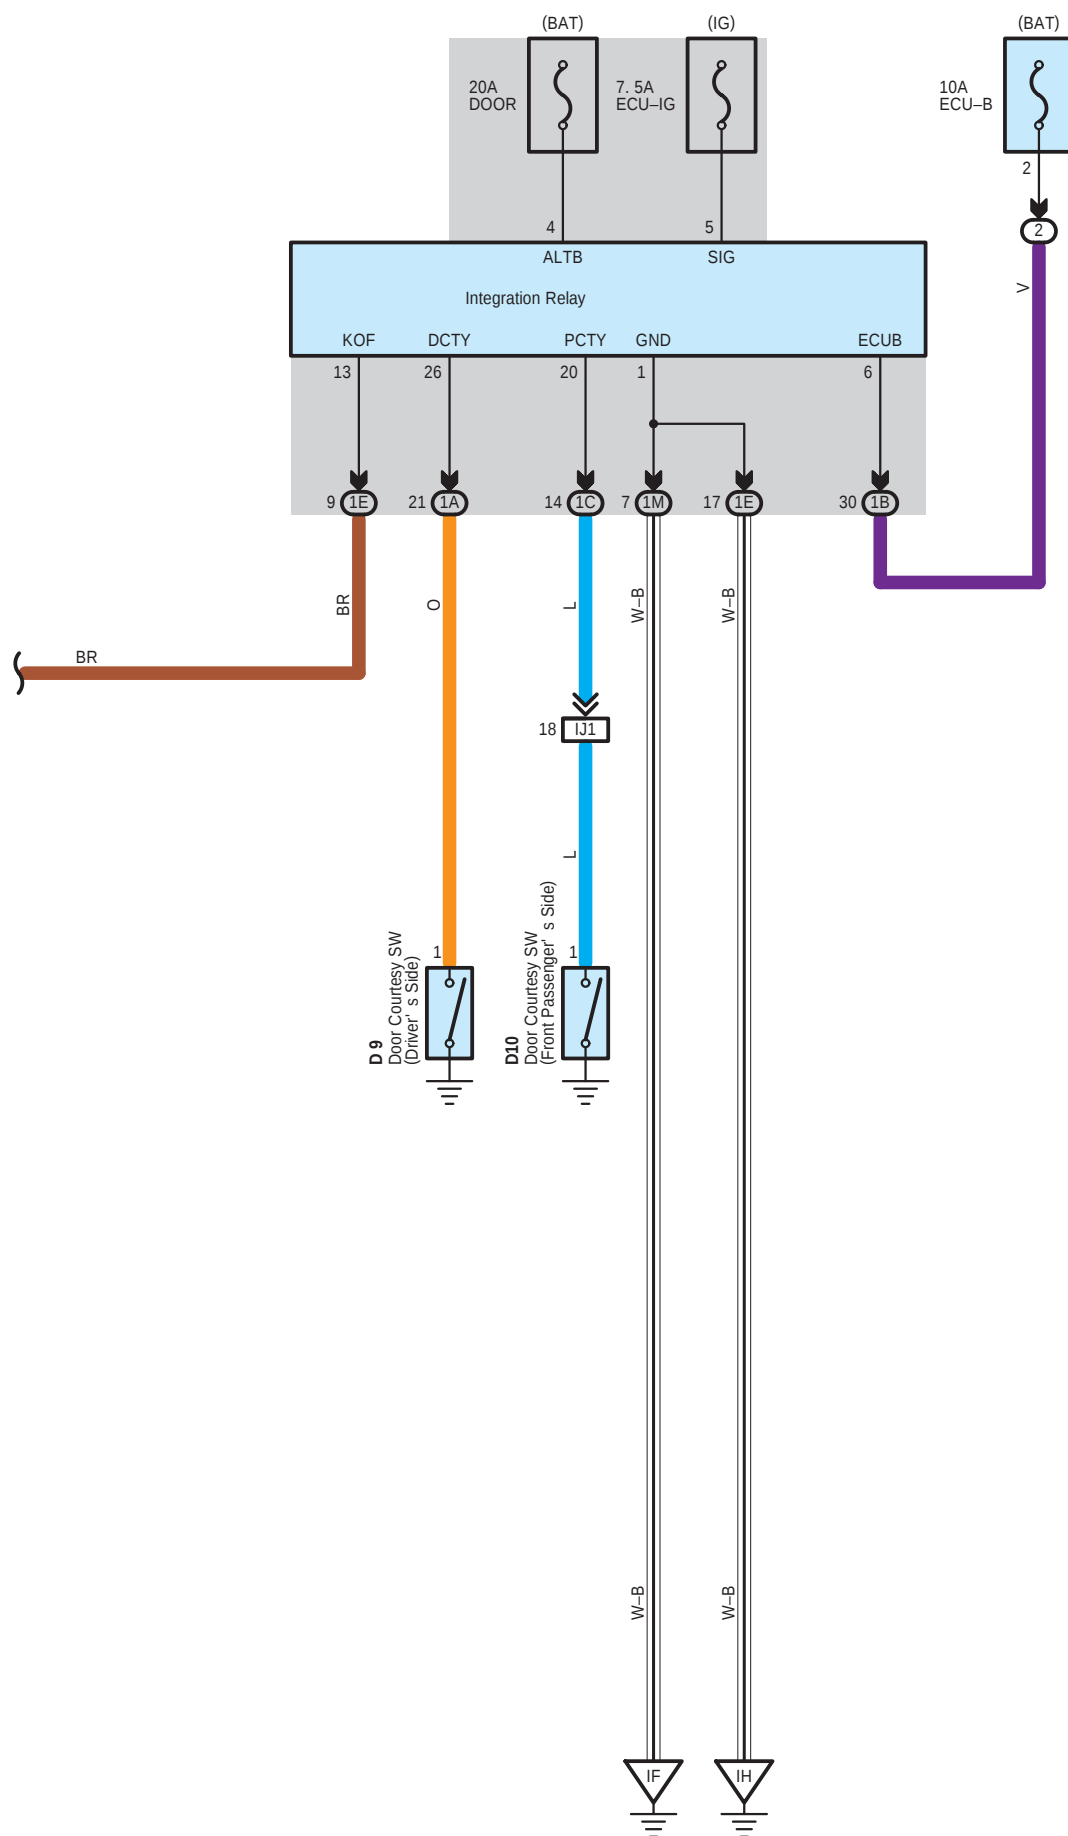

System Outline

1. Manual Up and Down Function

This function operates the window to open or close while the power window switch is being pulled up or pushed down (Should be pulled up and down halfway for manual operation.). The window stops as soon as the switch is released.

2. One-Touch Auto Up and Down Function

"One-touch auto up and down function" enables the window of front doors to be fully opened or closed with a touch of the power window switch.

3. Jam Protection Function

The jam protection function automatically stops the power window and moves it downward if a foreign object gets jammed in the course of the window during one-touch auto-up operation.

4. Remote Control Function

The up and down operation of the front passenger door windows can be controlled by operating the power window master switch.

5. Key-Off Operation Function

Within about 43 seconds when turn OFF the ignition SW or until the driver's or passenger's door is opened, this function enables the door window operation with the power window master switch and/or the manual operation at each passenger's seat door.

* When the battery terminal or fuse is disconnected, the glass position of all door windows have to be reset to the initial positions, one by one, with the power window control switch by following the procedure below:

- A) Reconnect the battery terminal or fuse.
- B) Turn ON the ignition switch.
- C) Lower the window of each door halfway or more with the power window switch.
- D) Then close the window fully with the power window switch.
Do not release the switch for at least 2 seconds after the window is fully closed.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
D9	38	J6	37	P11	39
D10	38	J9	37	P12	39
J4	A	P9	39		
J5	B	P10	39		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1E		
1H		
1M	25	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
II2	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)


Power Window with Jam Protection



: Ground Points

Code	See Page	Ground Points Location
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH

Power Window without Jam Protection

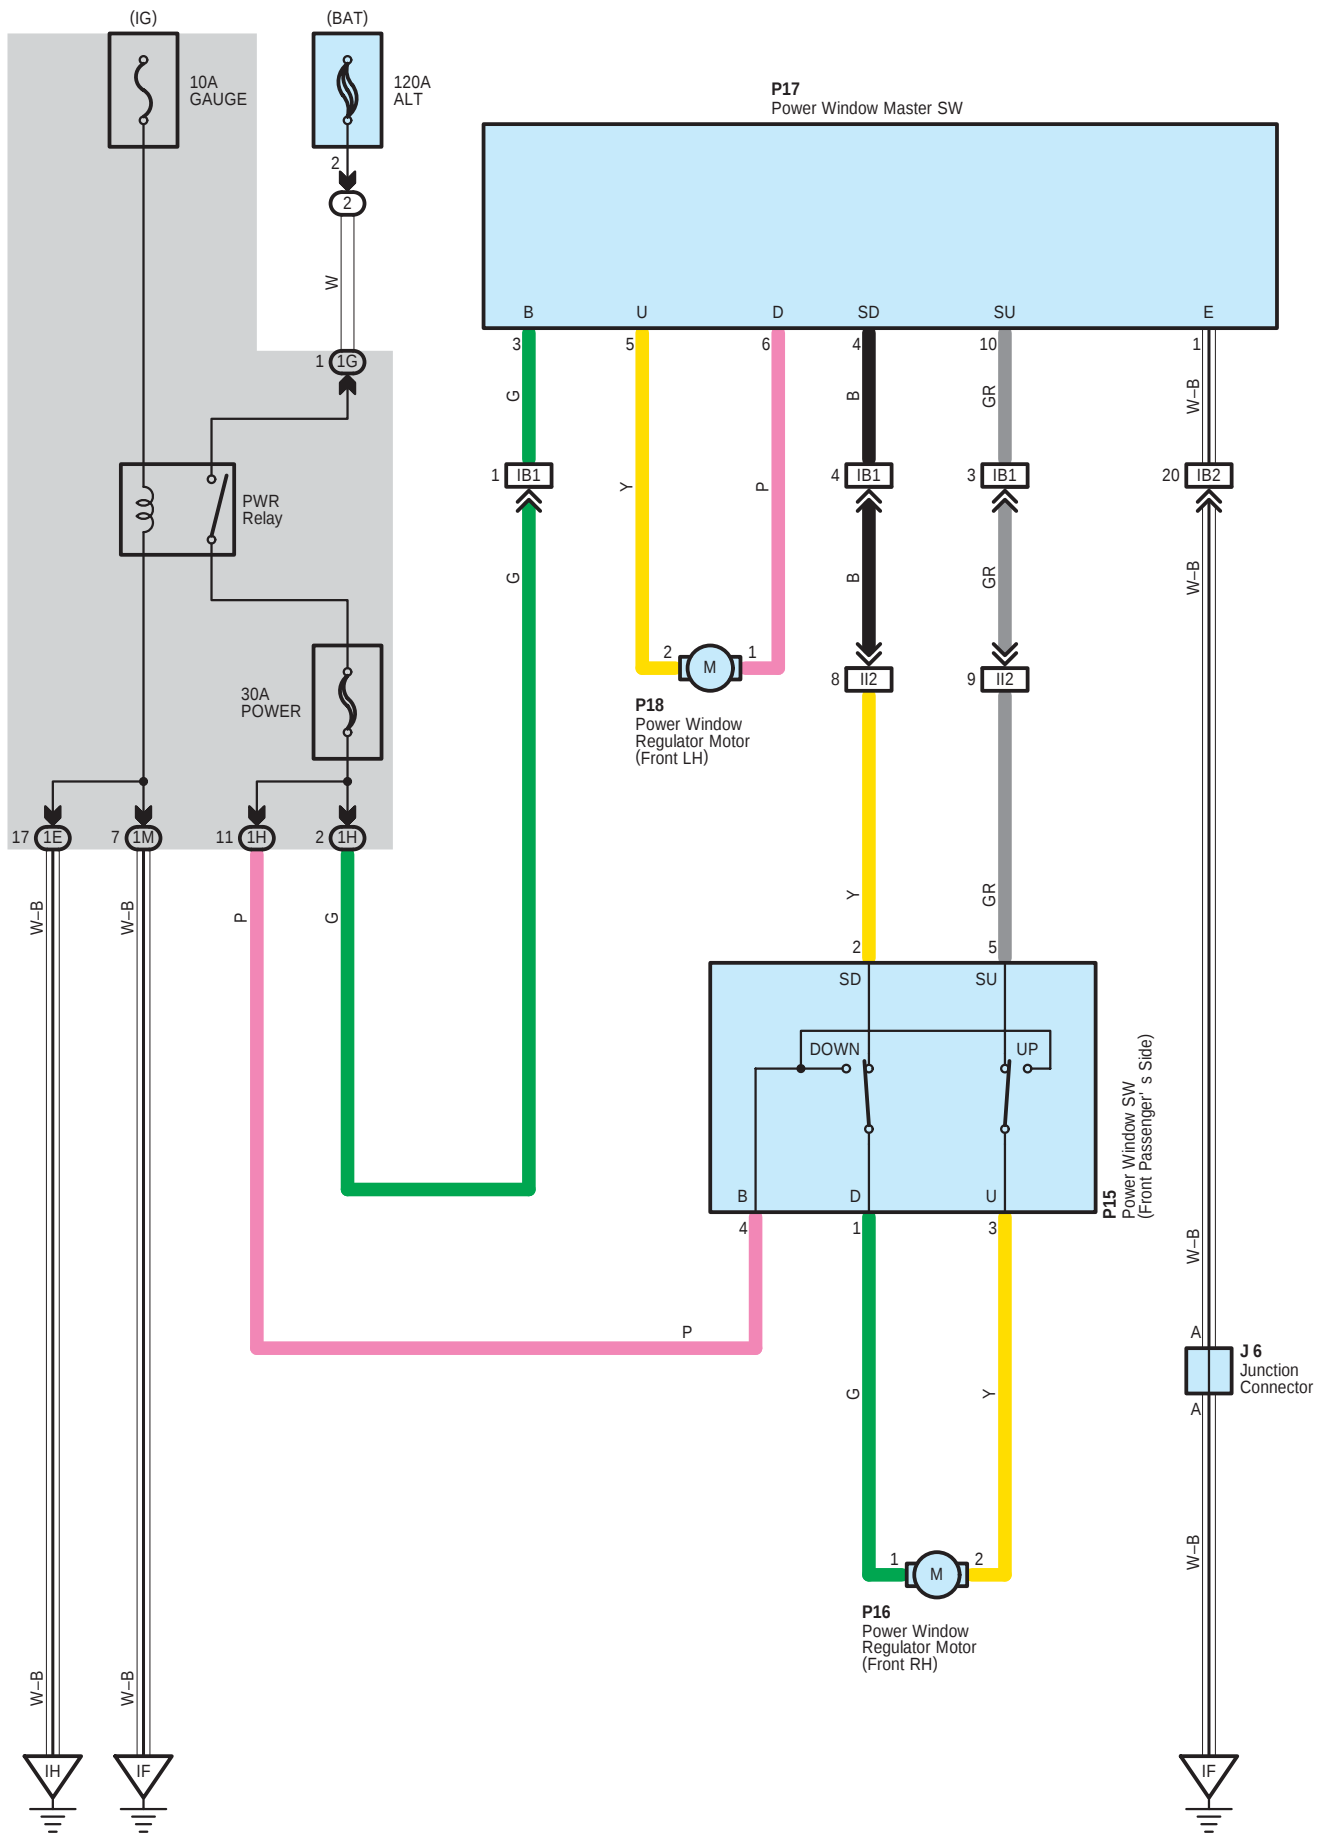

System Outline

1. Manual Down or Up Operation

When the power window master SW is pushed one stop, the motor rotates to open the window.

When the power window master SW is pulled up one step, the motor rotates in the opposite direction, to close the window.

All the other windows can be opened/closed as well, by the operation of the power window master SW or respective power window SW.

When the window lock SW is pushed to the lock side, the ground circuit to the passenger's window becomes open. As a result, even if Open/Close operation of the passenger's window is attempted, the current from TERMINAL E of the power window master SW is not grounded and the motor does not rotate, to the passenger's window can not be operated and window lock occurs.

2. Auto Down Operation (Driver's Window)

When the power window master SW is pushed two steps, the motor rotates to open the window automatically.

3. Stopping of Auto Down Operation (Driver's Window)

Auto operation can be stopped in mid-course with switching power window master SW one step upward during the down operation.

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J6	37	P16	39	P18	39
P15	39	P17	39		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1G	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1H	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	

: Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB2		
II2	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH



- * 1 : w/ Jam Protection
 * 2 : w/o Jam Protection

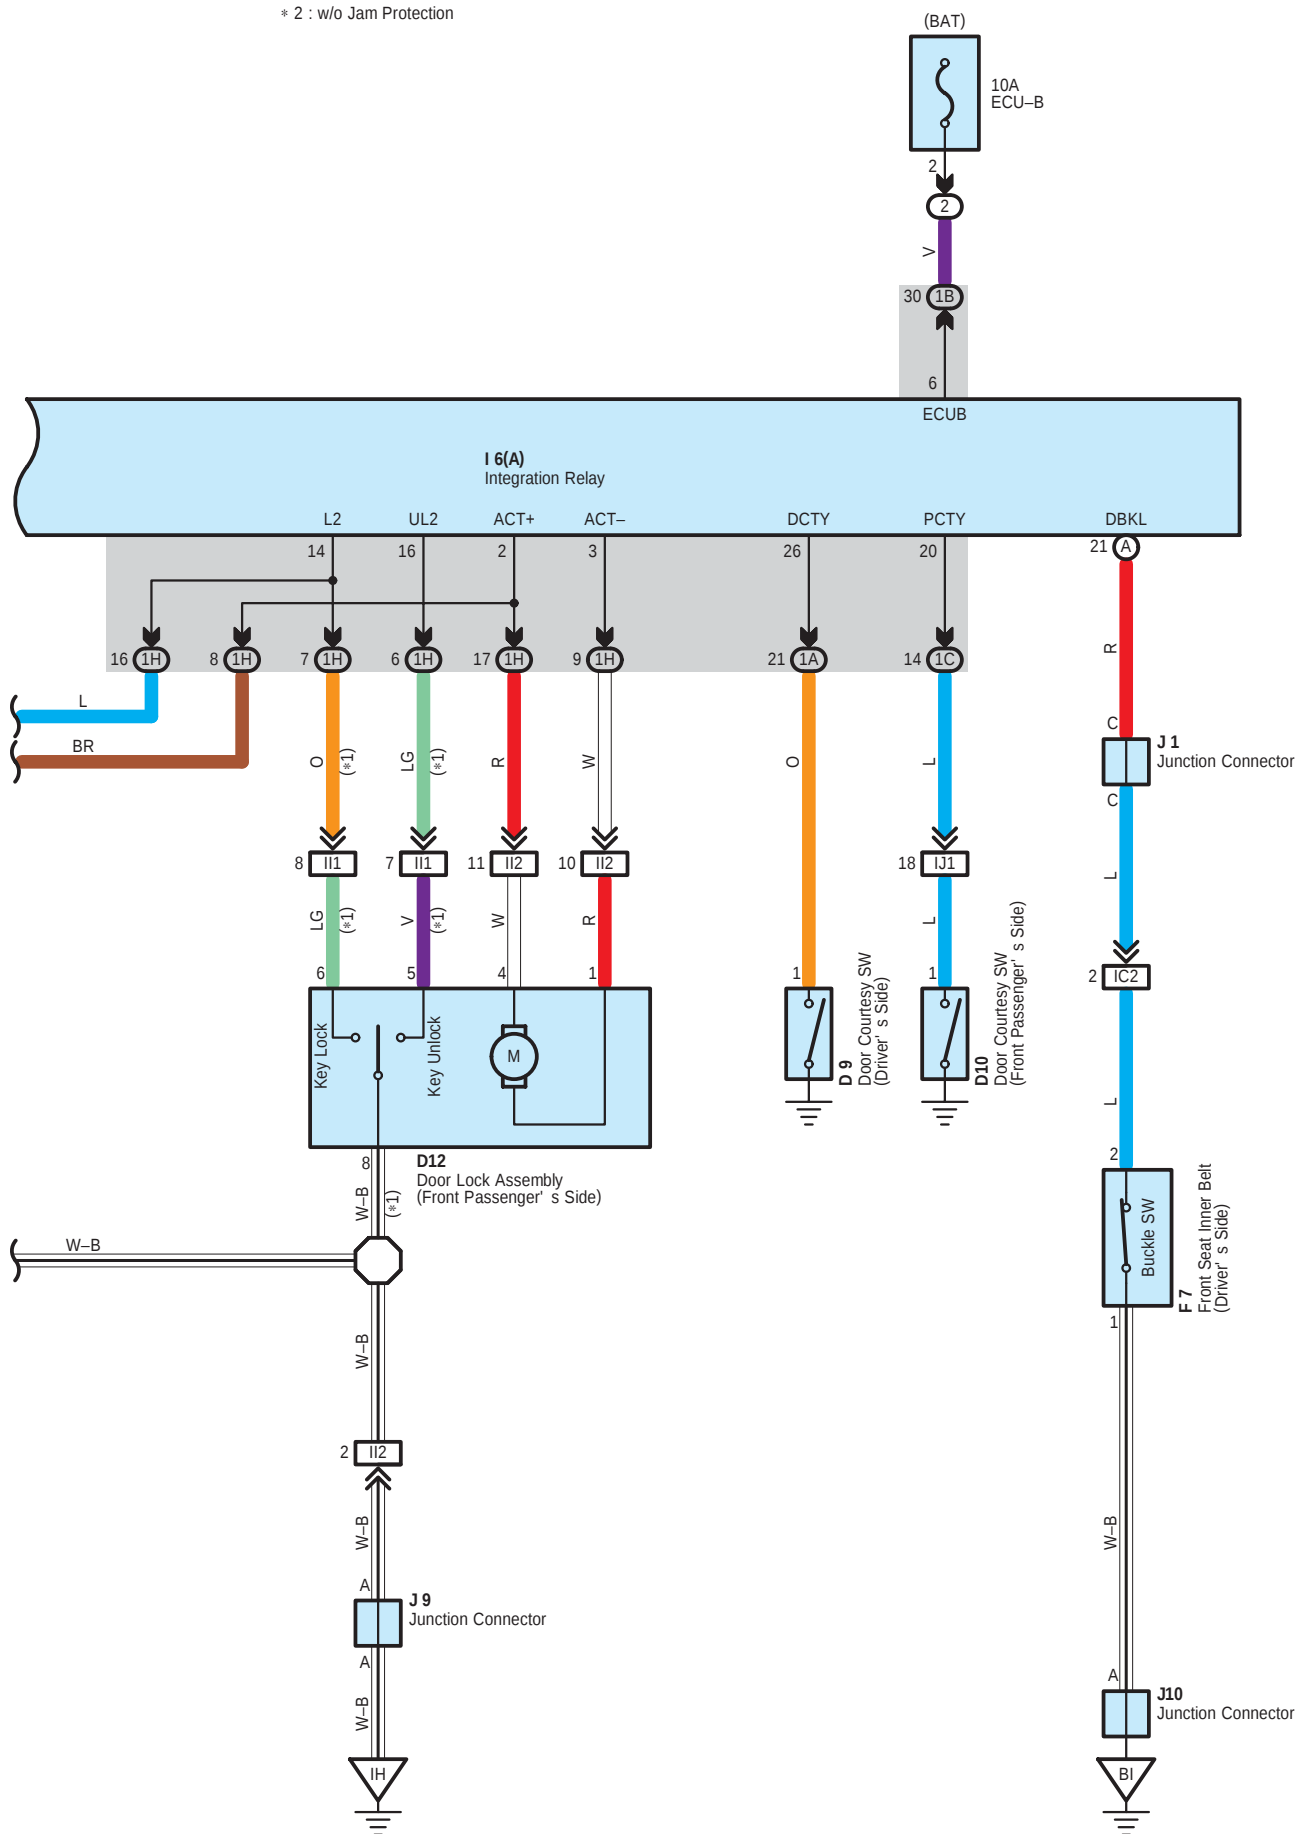

Door Lock Control

System Outline

The door lock control is a system controlled by various signals input into the integration relay.

1. Manual Unlock Operation

When the door lock control SW of the driver's or passenger's side door is pushed to UNLOCK, the door unlocks.

2. Manual Lock Operation

When the door lock control SW of the driver's or passenger's side door is pushed to LOCK, the door locks.

3. Door Key Unlock Operation

* Unlock operation from driver's side door

When the driver's side door is unlocked once using the mechanical key, only the driver's side door unlocks. If this operation is repeated within 3 seconds, all the other doors also unlock.

4. Ignition Key Reminder Operation

Under condition that the ignition key remains inserted in the ignition key cylinder and driver's side door is open, locking operation with door knob of driver's door is not effective but automatically unlocks the door. When the door is locked with the manual door lock SW of driver's door or door key SW of driver's door, the door locks once but right after that, the door unlocks automatically.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
D9	38	F7	38	P9	A 39
D10	38	I6	A 37	P17	B 39
D11	38	J1	37	U1	A 37
D12	38	J6	37		B 37
D13	A 38	J9	37		
D14	B 38	J10	38		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1H		
1M	25	


□ : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB2		
IC2	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
II1	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
II2		
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)

▽ : Ground Points


Code	See Page	Ground Points Location
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH
BI	44	Quarter Panel LH

Wireless Door Lock Control

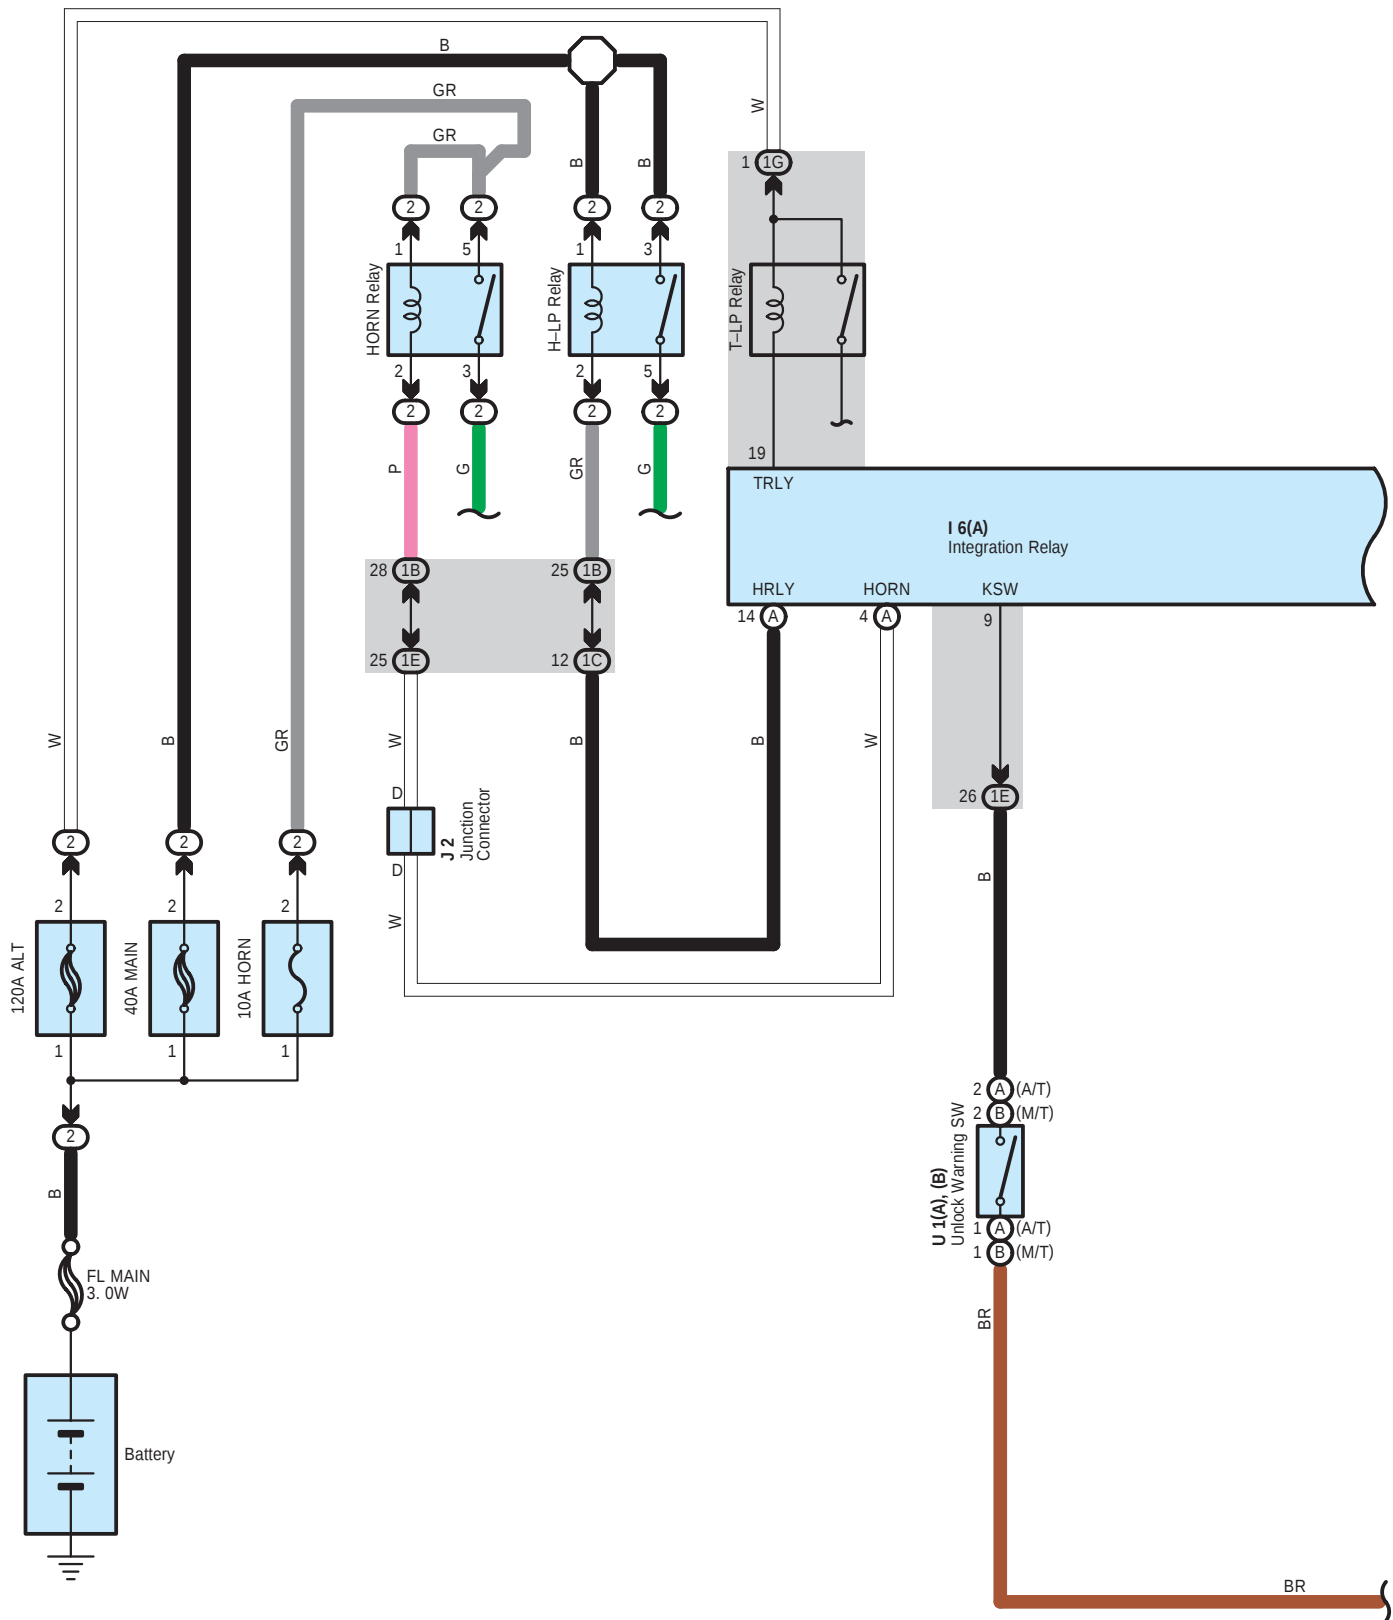

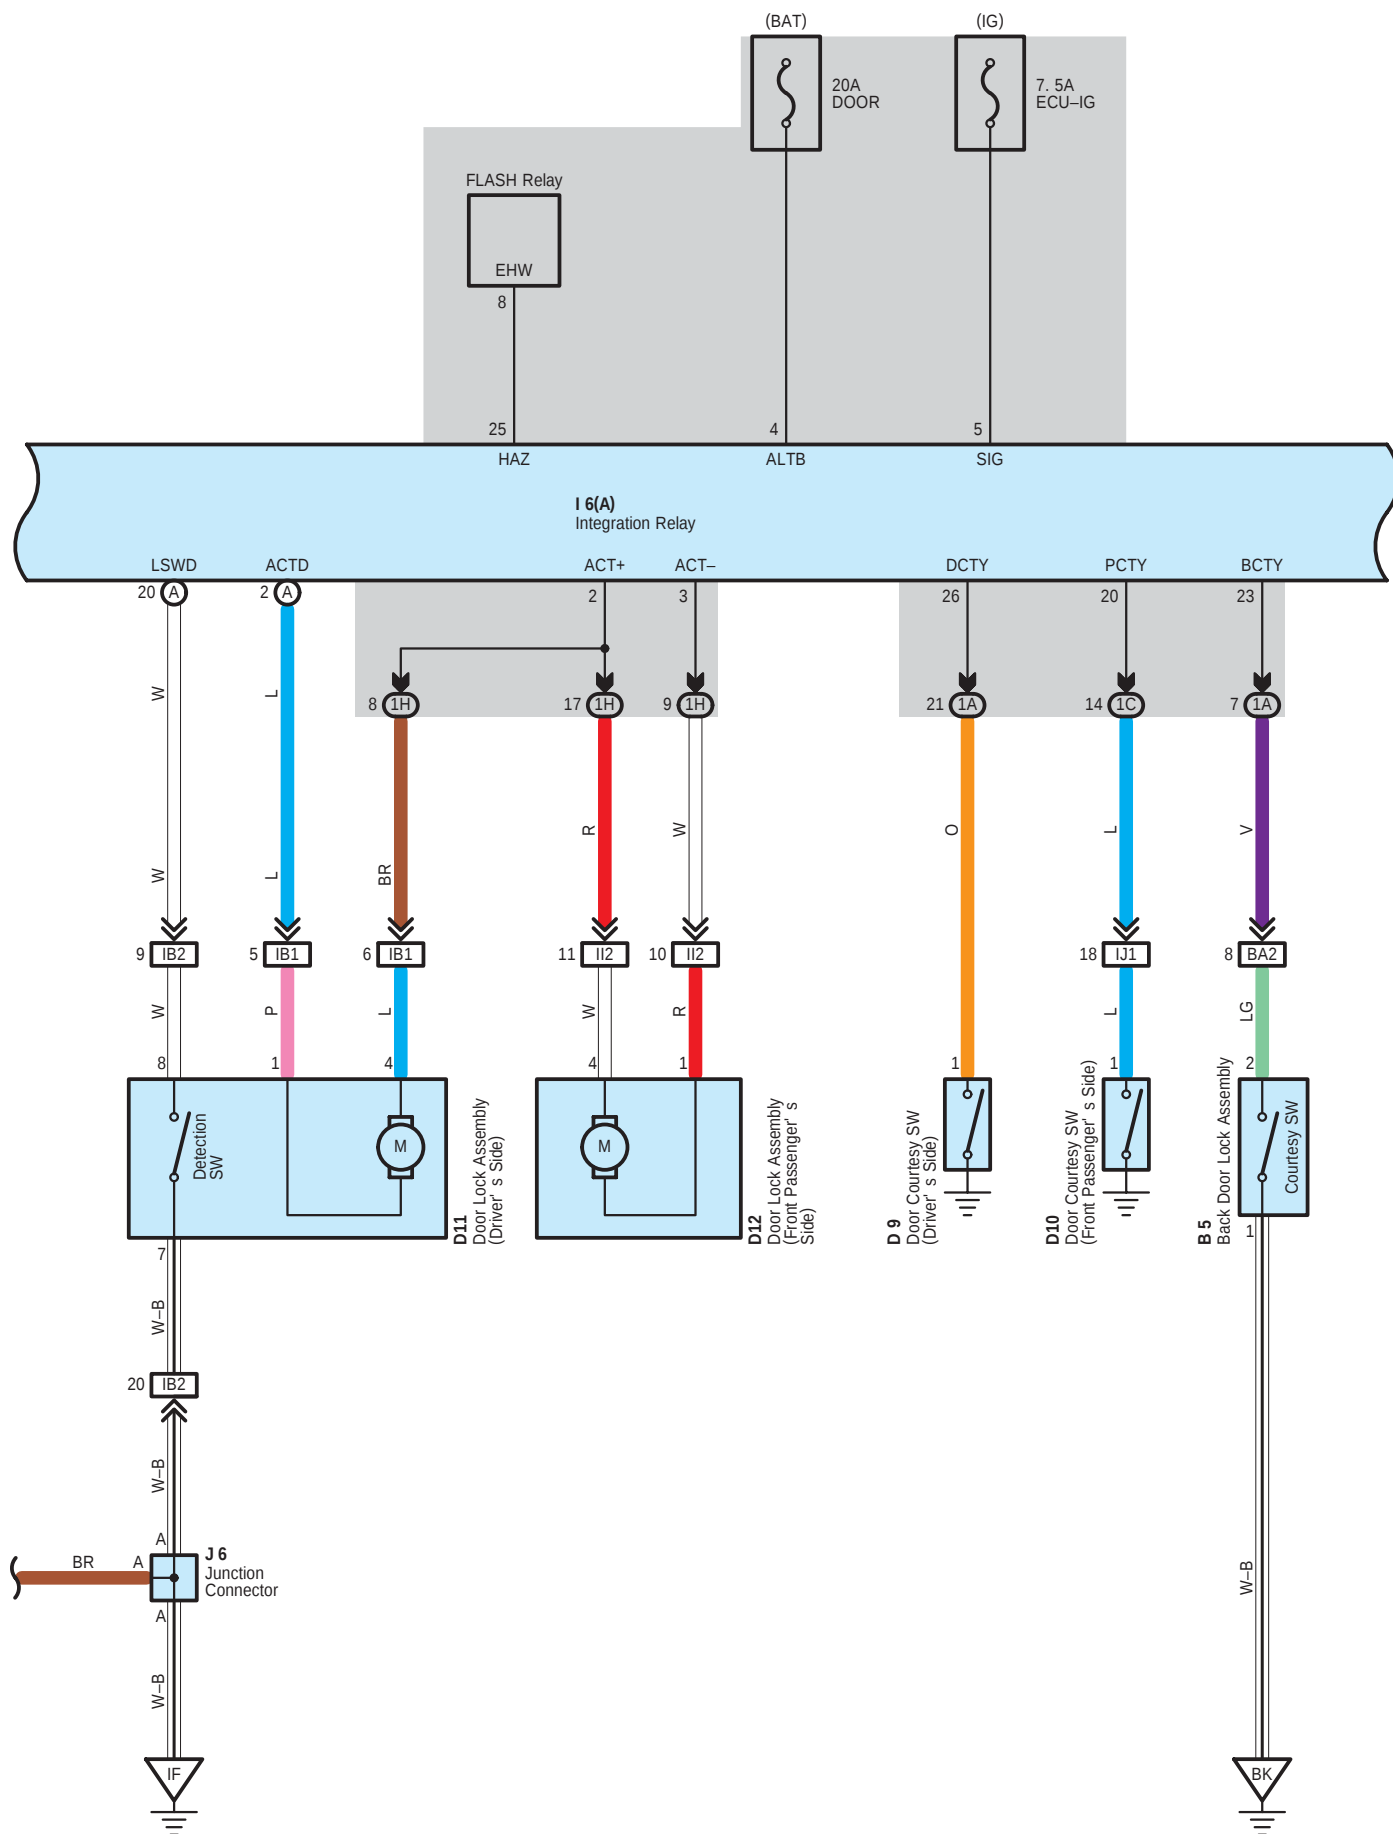

Wireless Door Lock Control

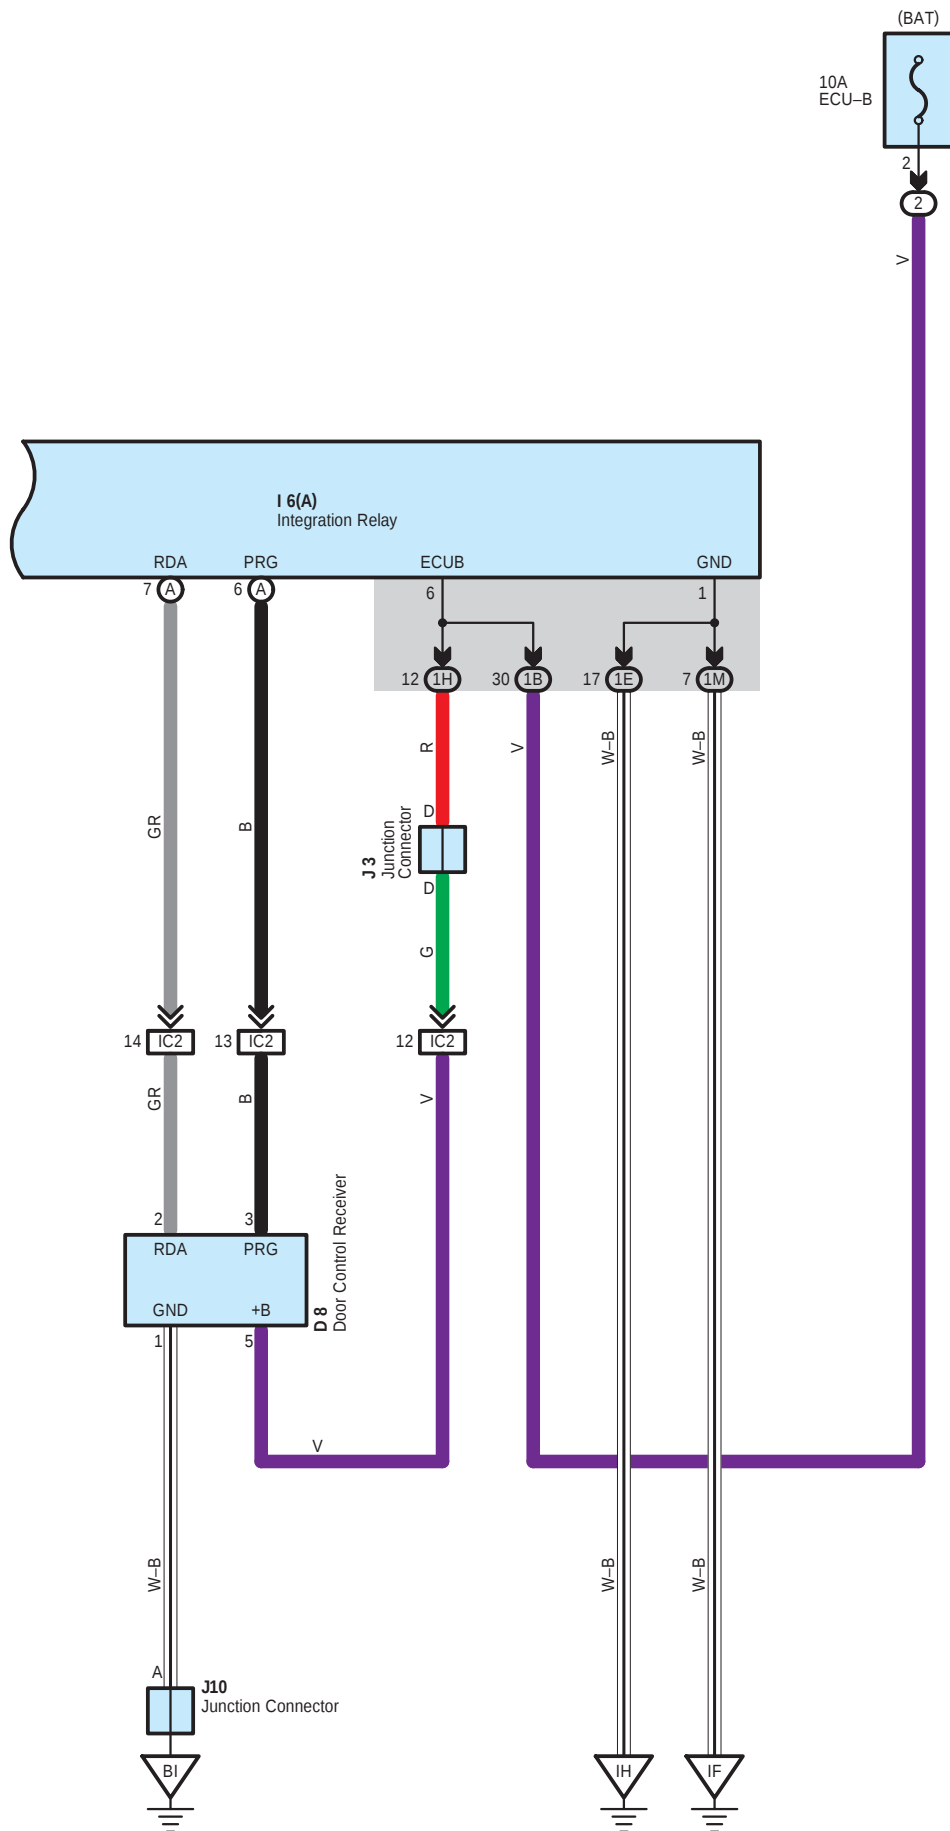

cardiagn.com

System Outline

Door lock control (Lock and unlock) and panic control (Theft alarm and flash) is performed by remote control, without the ignition key inserted in the door key cylinder, using low-power electrical waves emitted by a transmitter.

1. Normal Operation

* Lock operation

When the lock SW on the transmitter is pressed, all the doors are locked.

* Unlock operation

When the unlock SW on the transmitter is pressed once, only the driver door is unlocked. When the unlock SW is pressed again within 3 seconds, all the doors are unlocked.

2. Auto Lock Function

When the door is not actually opened within 30 seconds after the door has been unlocked by the unlock SW on the transmitter, all the doors are automatically locked. If any of the following conditions are detected, the wireless door lock does not function.

* Any door is opened.

* The ignition key is inserted into the ignition SW.

* When the lock detection SW of the door is locked.

3. Wireless Door Lock Stop Function

If any of the following conditions are detected, the wireless door lock does not function.

Lock operation

* When any door is open (Door courtesy SW on)

* The ignition key is inserted into the ignition SW (Unlock warning SW on)

* Ignition SW is on

Unlock operation

* Ignition SW is on

4. Visual Confirmation of Lock or Unlock

During lock operation, when the integration relay receives a lock signal from the door lock detection SW, the turn signal lamp is flashed once. During unlock operation, when the integration relay receives an unlock signal from the door lock detection SW, the turn signal lamp is flashed twice.

5. Remote Panic Operation

Panic will function when doors are locked or unlocked, open or closed. When the panic button (Transmitter) is pushed once, map lamp, room lamp (Center) and ignition key cylinder lamp light up, and theft alarm and horn sounds and turn signal lamp, headlamp and taillamp flash. Then, the panic, the lock or the unlock button (Transmitter) is pushed once more, map lamp, room lamp (Center) and ignition key cylinder lamp are turned off, sounding and flashing will stop. Panic will not function when ignition key is in ignition key cylinder.

6. Repeat Function

If the lock detection signal in response to the output signal is not received after the integration relay has output the lock signal, the lock signal is output again.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B5	38	D12	38	J10	38
D8	38	I6	A	U1	A
D9	38	J2	37		B
D10	38	J3	37		
D11	38	J6	37		

□ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

Wireless Door Lock Control



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1G	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1H	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB2		
IC2	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
II2	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
BA2	44	Back Door No.1 Wire and Floor Wire (Back Window Upper Frame LH)





: Ground Points

Code	See Page	Ground Points Location
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH
BI	44	Quarter Panel LH
BK	44	Left Side of the Back Door Panel

cardiagn.com

Back Door Opener

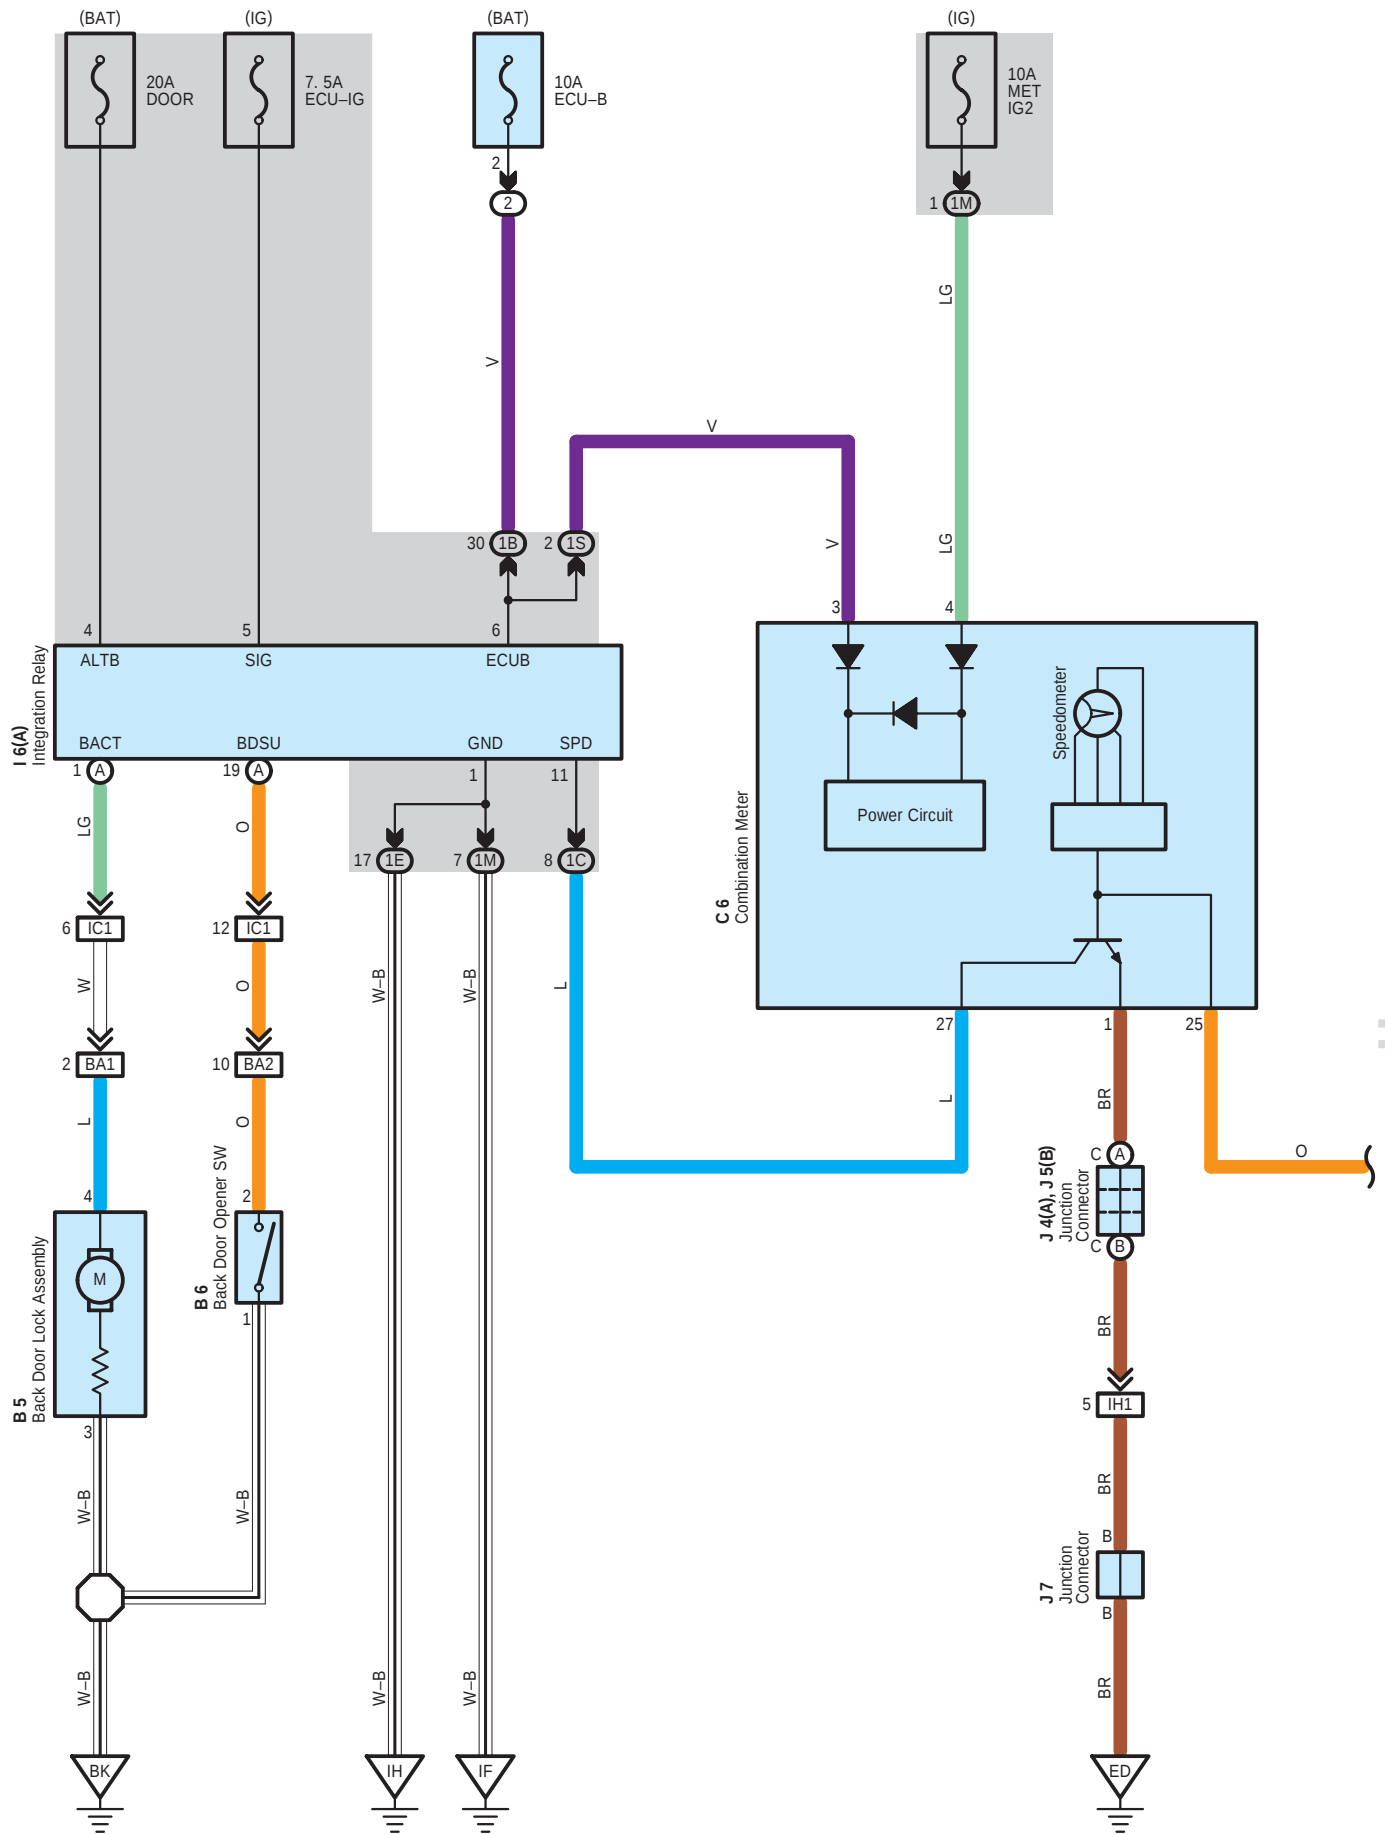

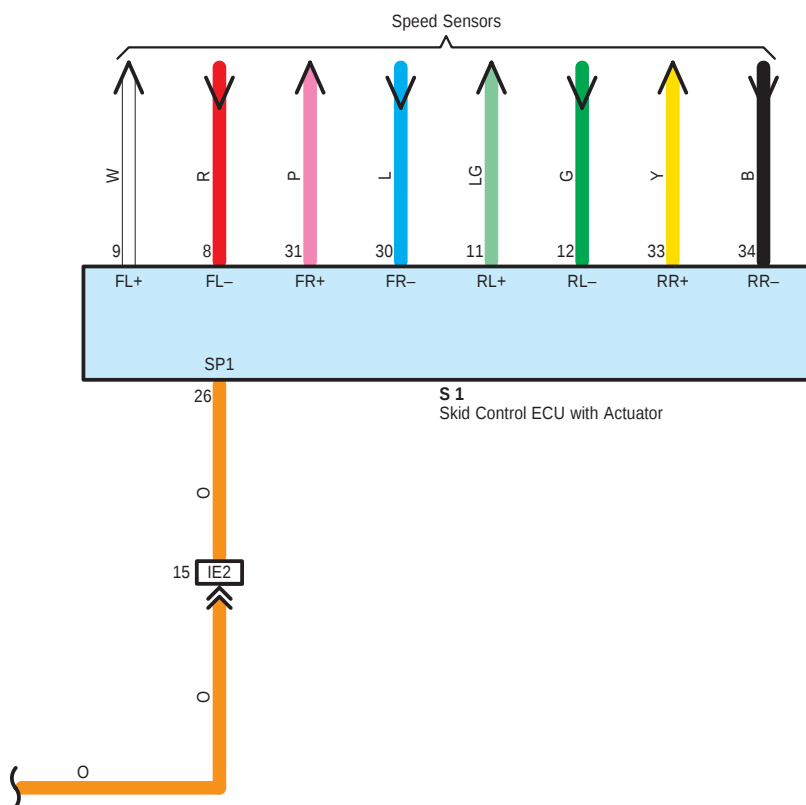

Back Door Opener

System Outline

If the vehicle is stationary (Slower than 5 km/h), the back door opener motor activates with control of integration relay when back door opener SW is pushed. It results in releasing latch of back door to open back door.

○ : Parts Location

Code	See Page	Code		See Page	Code	See Page
B5	38	I6	A	37	J7	37
B6	38	J4	A	37	S1	35
C6	36	J5	B	37		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1M	25	
1S		


□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
IE2	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
BA1	44	Back Door No.1 Wire and Floor Wire (Back Window Upper Frame LH)
BA2		


▽ : Ground Points

Code	See Page	Ground Points Location
ED	40	Front Left Side of the Cylinder Head
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH
BK	44	Left Side of the Back Door Panel

Sliding Roof

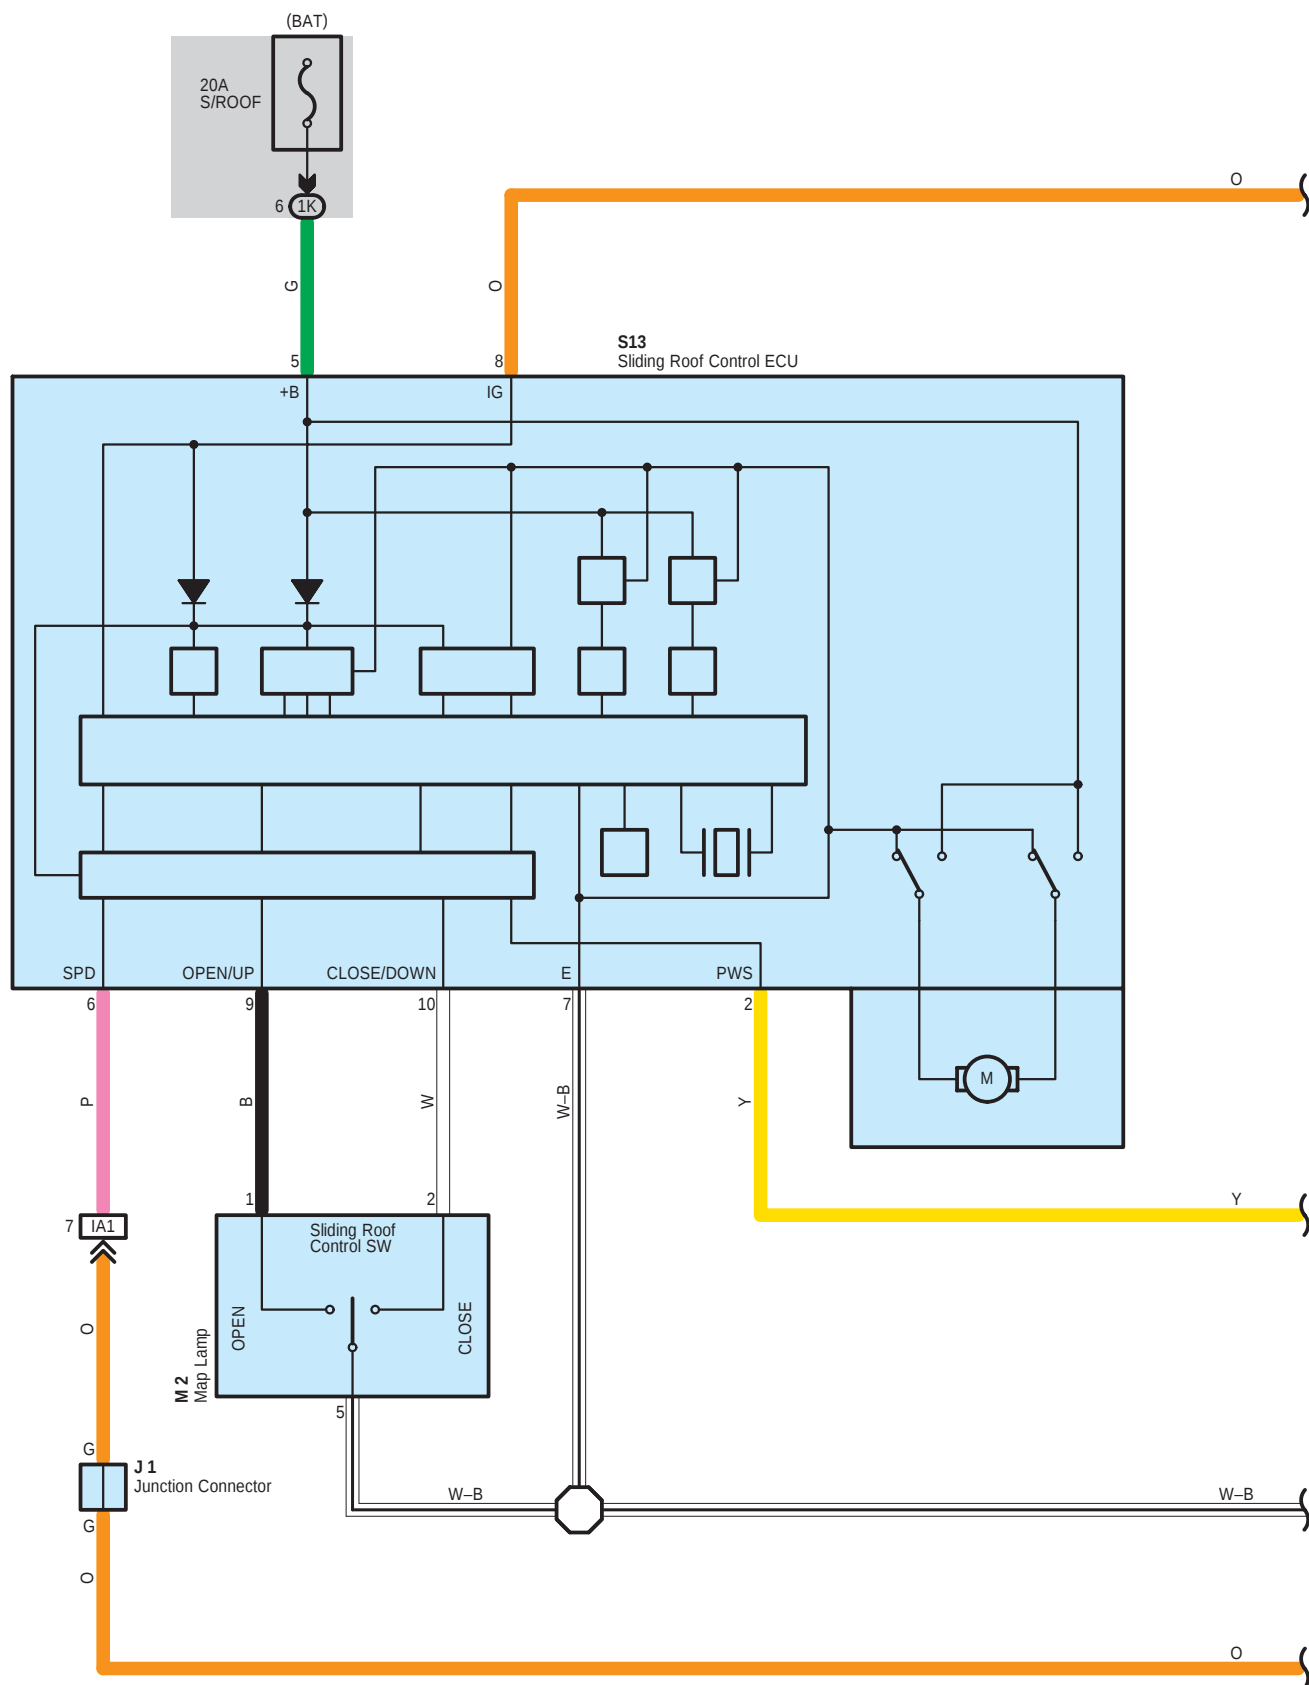

cardiagn.com

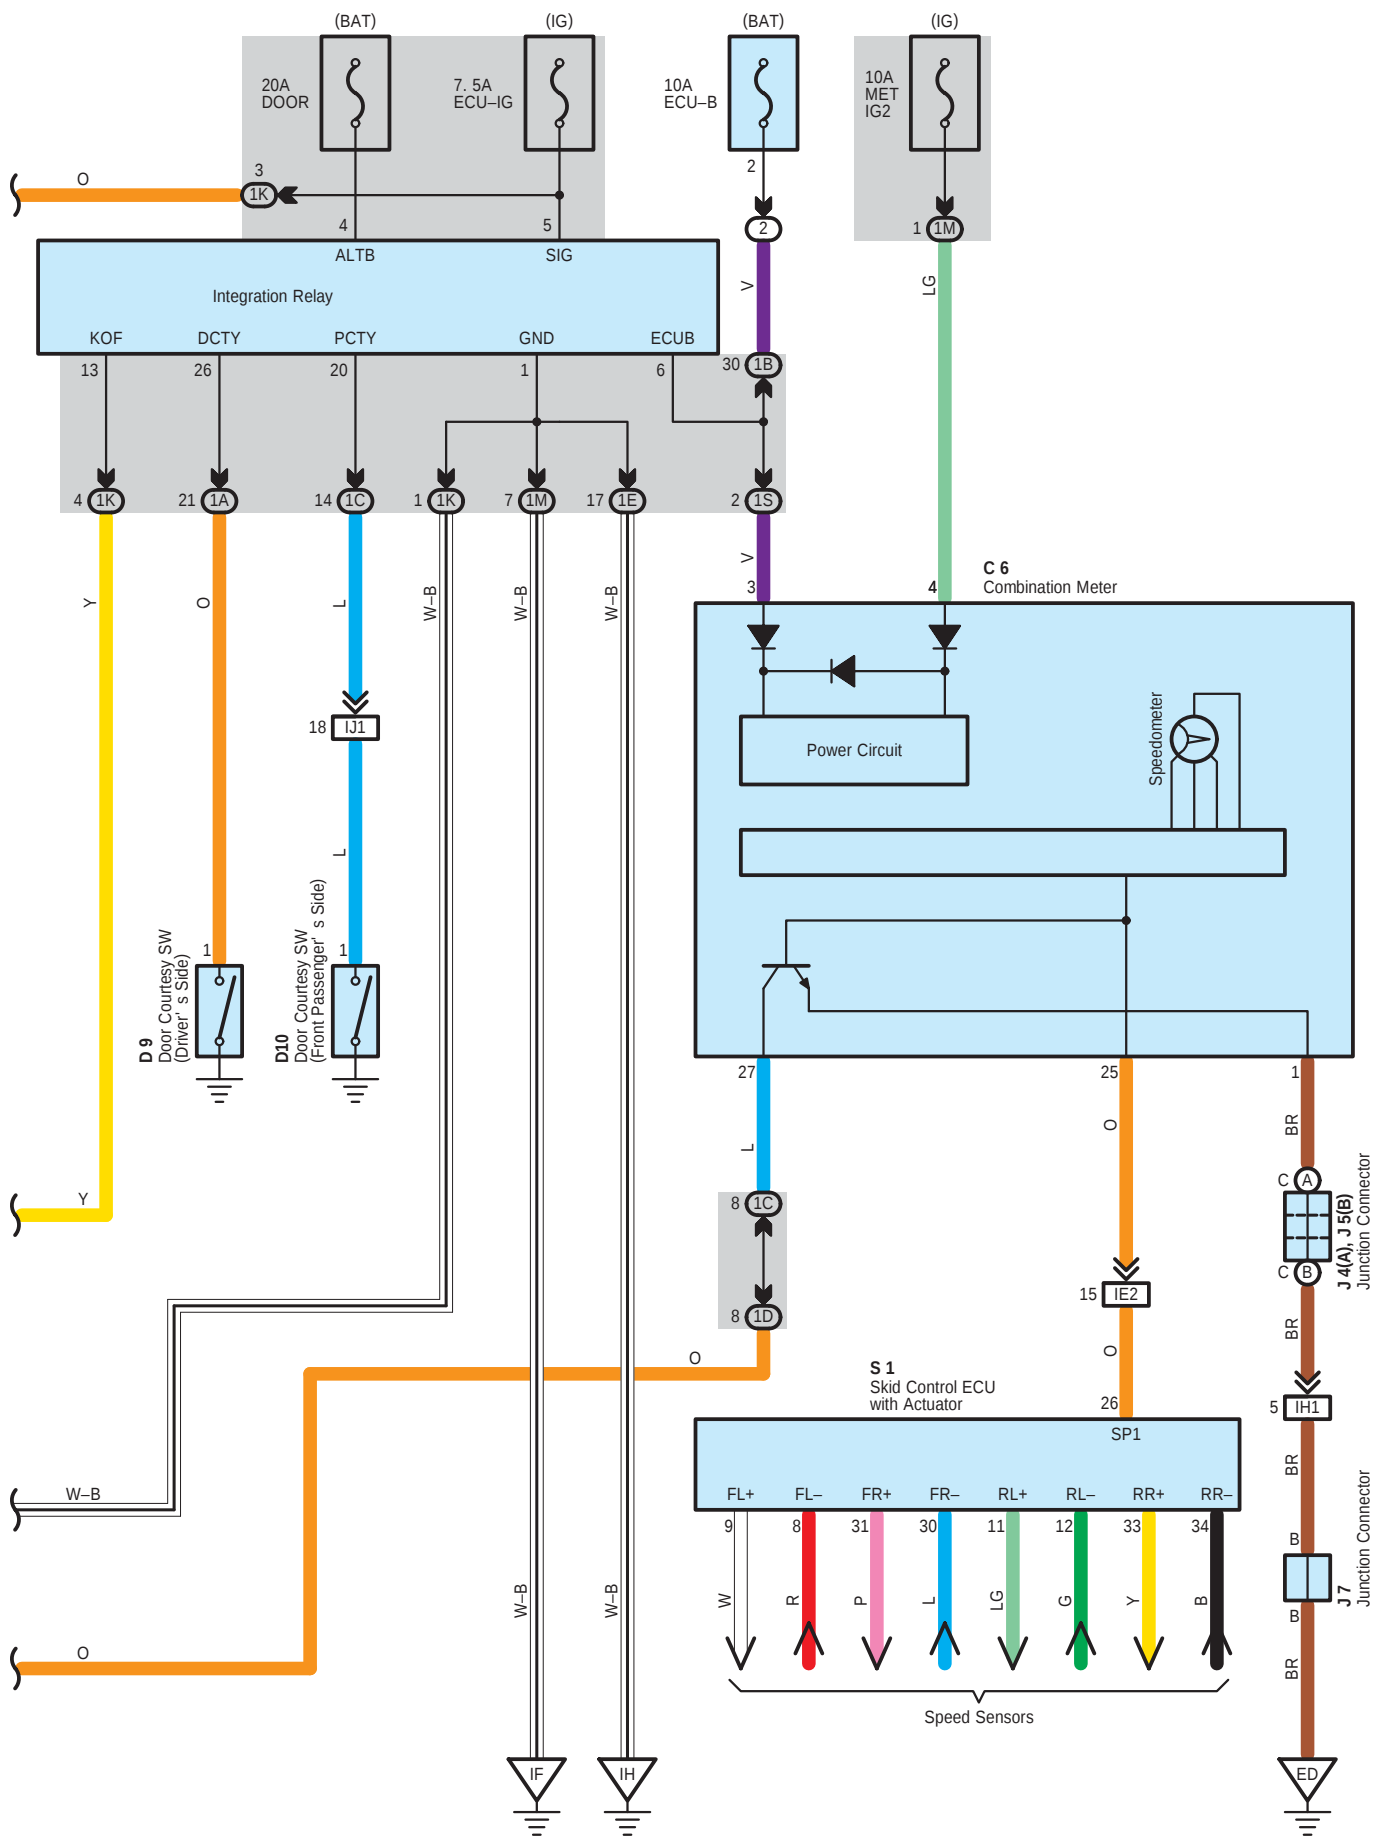

Sliding Roof

System Outline

Current is always applied from the S/ROOF fuse to TERMINAL 5 of the sliding roof control ECU. With the ignition SW turned on, the current from the ECU-IG fuse flows to TERMINAL 8 of the sliding roof control ECU.

1. Sliding Roof Open/Close Operation

For sliding roof operation, there are sliding roof control switches: "Slide open/tilt up"; and "Slide close/tilt down." When a switch is pressed and held down for a certain period of time, one touch automatic operation takes place in accordance with the function of the switch.

2. Key-Off Operation

Roof remains operable – until about 43 seconds elapse after the ignition SW is turned from ON to OFF or until the driver's or passenger's door is opened, whichever first occurs.

However, if an overload reverse operation was going on at that time, the key-off operation continues until it comes to an end.

3. Overload Reverse Operation

The sliding roof control ECU detects jamming of the sliding roof by foreign material, if occurred, from abnormal motor speed signal and reverses the sliding roof operation.

* When the battery terminal or fuse is disconnected, the roof position has to be reset to its initial position by the sliding roof control SW in accordance with the following procedure:

- (1) Reconnect the battery terminal or fuse.
 - (2) Turn ON the ignition switch.
 - (3) Operate the sliding roof control SW to open the roof halfway or more.
 - (4) Then operate the sliding roof control SW to fully close the roof.
- Do not release the switch for at least 2 seconds after the roof is fully closed.

○ : Parts Location

Code	See Page	Code		See Page	Code	See Page
C6	36	J4	A	37	S1	35
D9	38	J5	B	37	S13	39
D10	38	J7		37		
J1	37	M2		38		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1E		
1K	24	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1S		

□ : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	42	Roof Wire and Instrument Panel Wire (Cowl Top Side Panel LH)
IE2	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)



: Ground Points

Code	See Page	Ground Points Location
ED	40	Front Left Side of the Cylinder Head
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH

Shift Lock

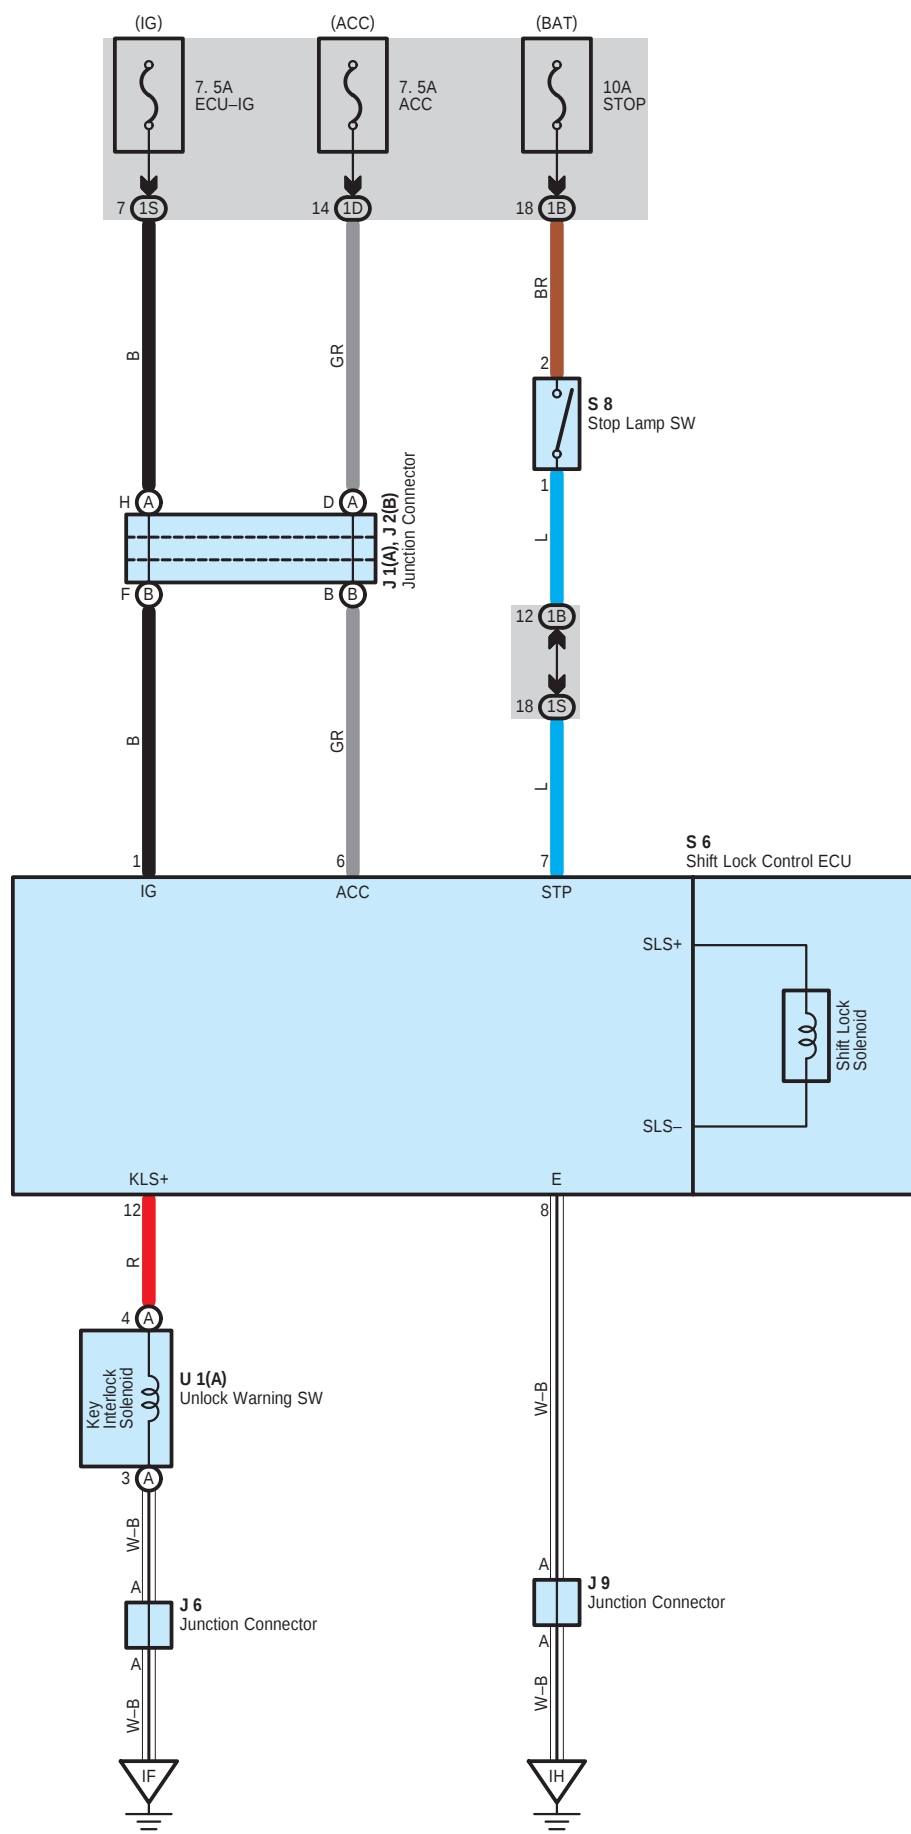

System Outline

When the ignition SW is turned to ACC position the current from the ACC fuse flows to TERMINAL 6 of the shift lock control ECU. When the ignition SW is turned to ON position, the current from the ECU-IG fuse flows to TERMINAL 1 of the shift lock control ECU.

1. Shift Lock Mechanism

If the brake pedal is depressed with the ignition SW set at ON (The stop light SW is on), the shift lock control ECU is activated, allowing the driver to change the shift lever to a position other than the P position.

2. Key Interlock Mechanism

With the ignition SW at ON or ACC position, when the shift lever is put in P position, the current flowing from TERMINAL 12 of the shift lock control ECU to key interlock solenoid is cut off. This causes the key interlock solenoid to turn off (Lock lever disengages from LOCK position) and the ignition key can be turned from ACC to LOCK position.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
J1	A	37	J9	37	U1	A	37	
J2	B	37	S6	37				
J6		37	S8	37				


○ : Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1D	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1S	25	


▽ : Ground Points


Code	See Page	Ground Points Location
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH

ECT and A/T Indicator

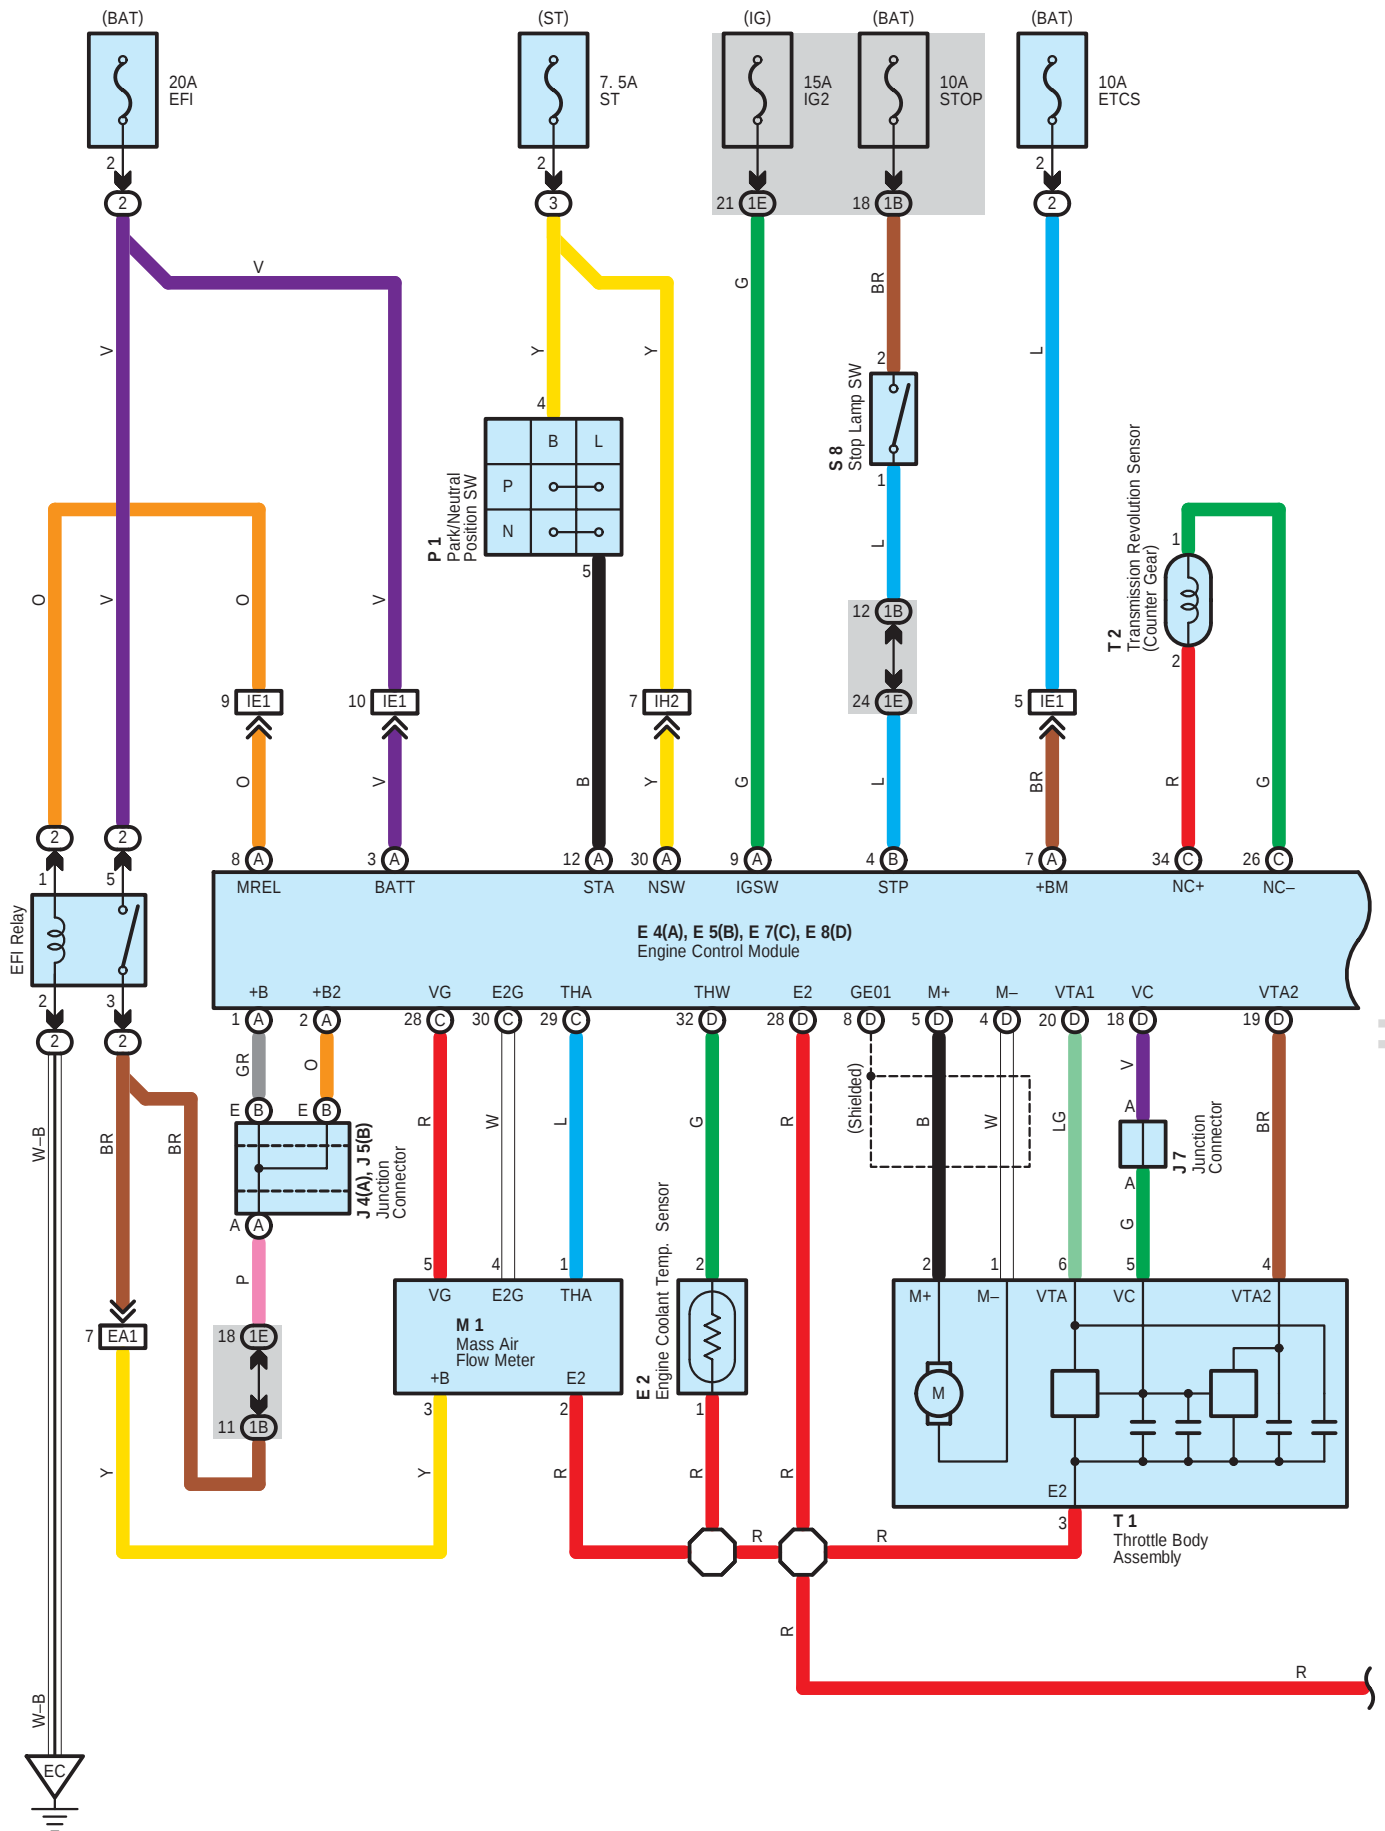

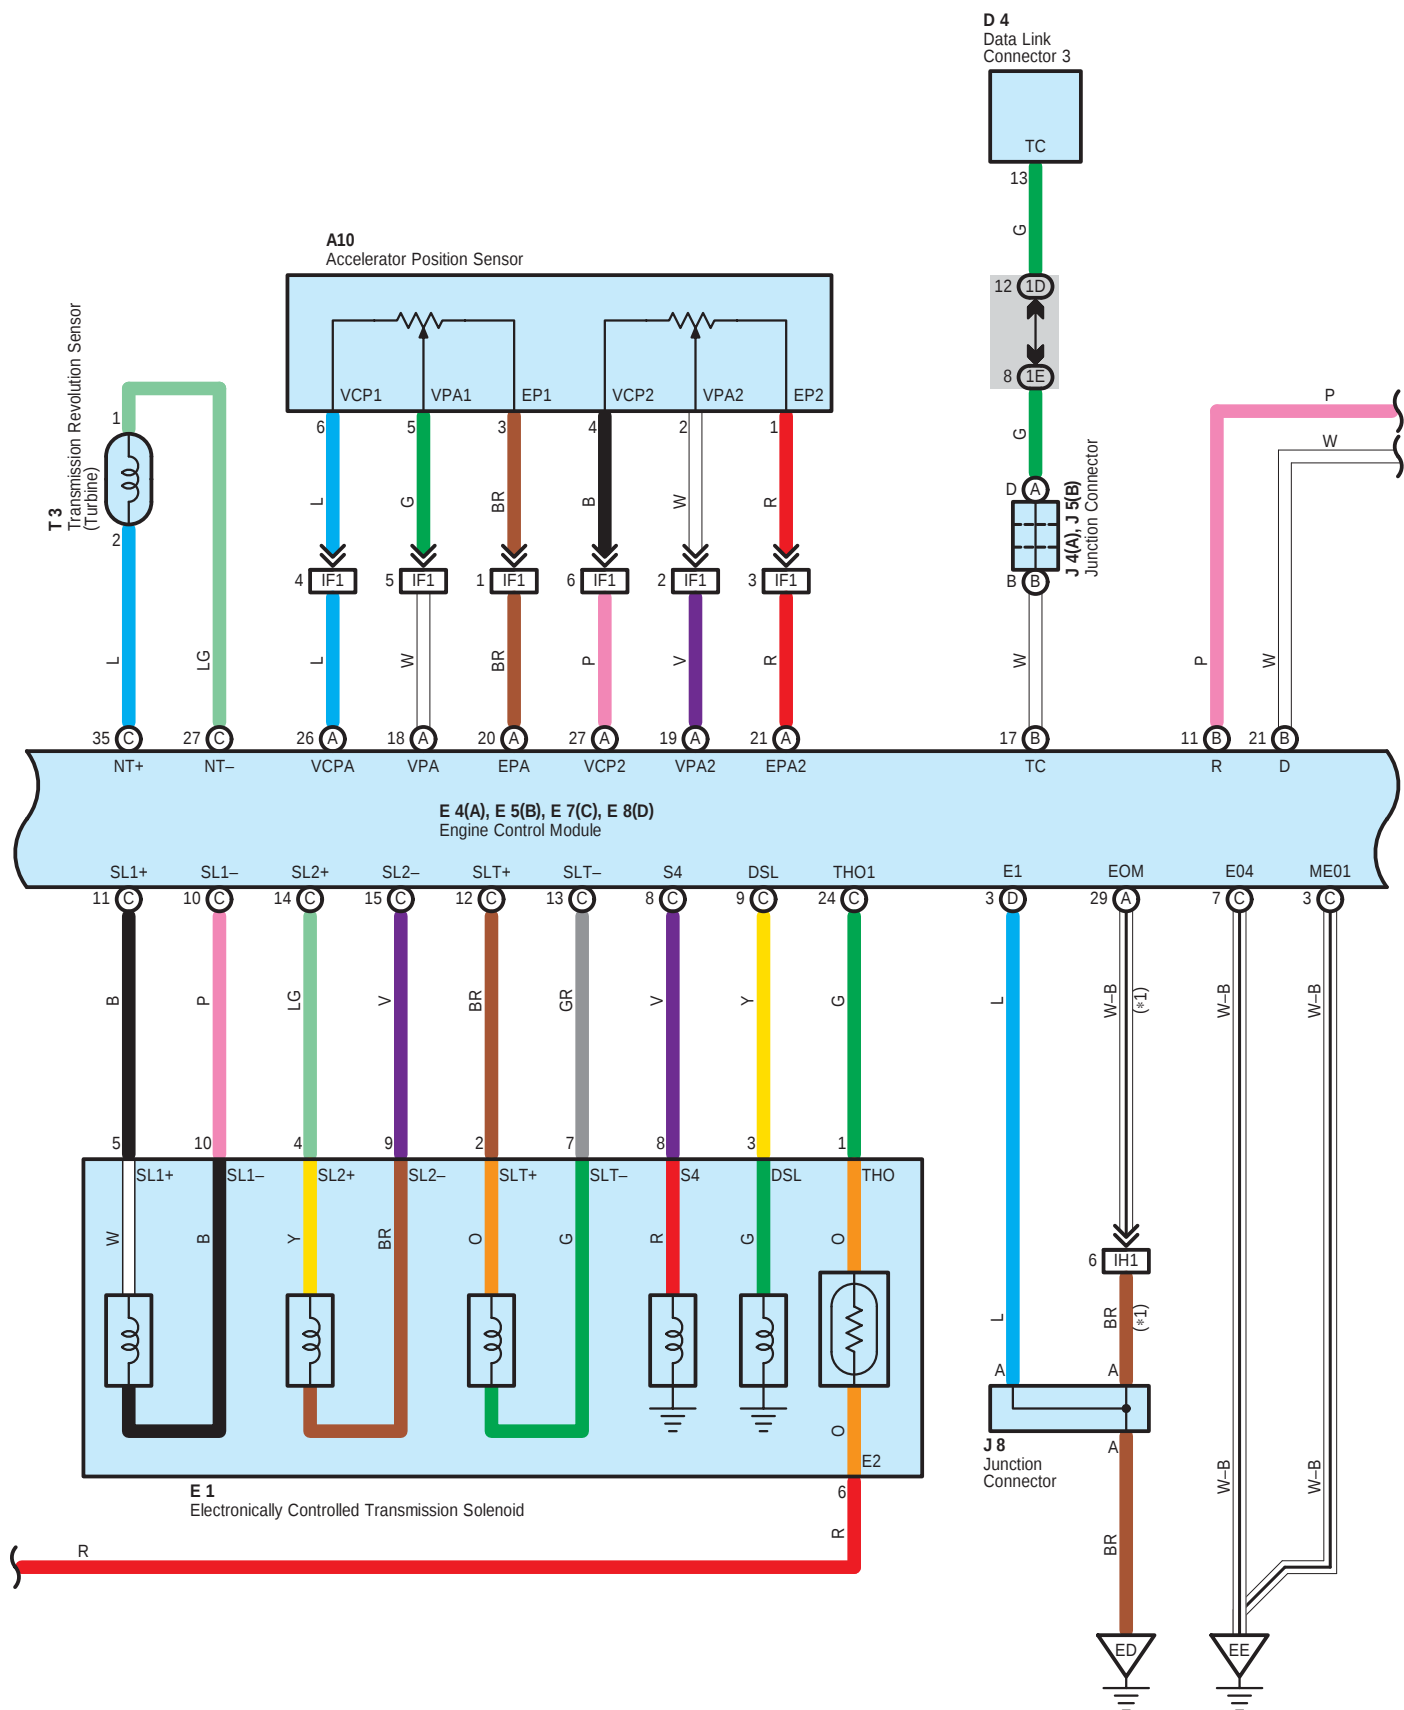

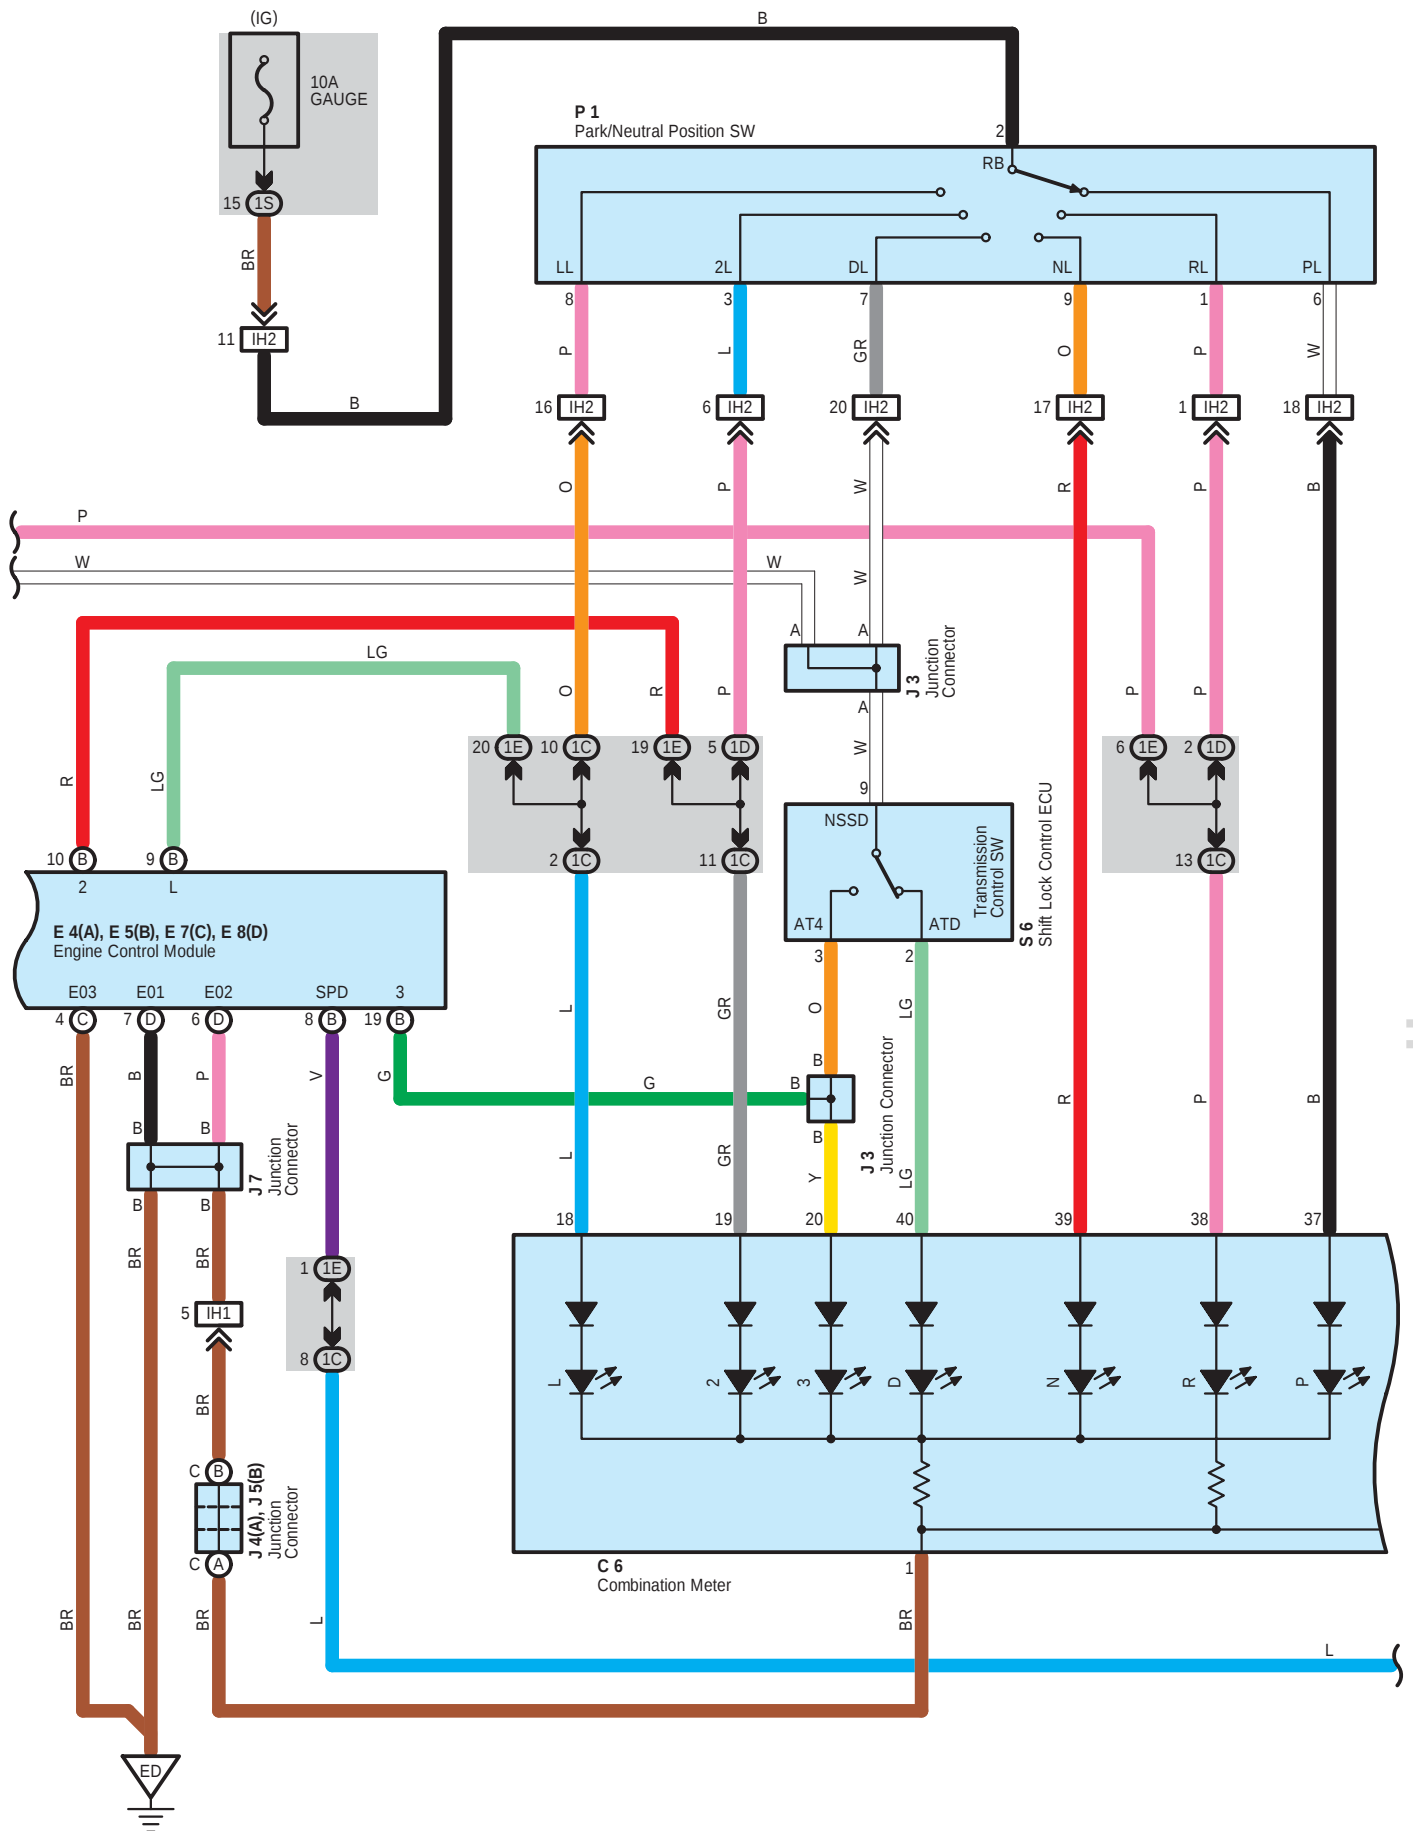

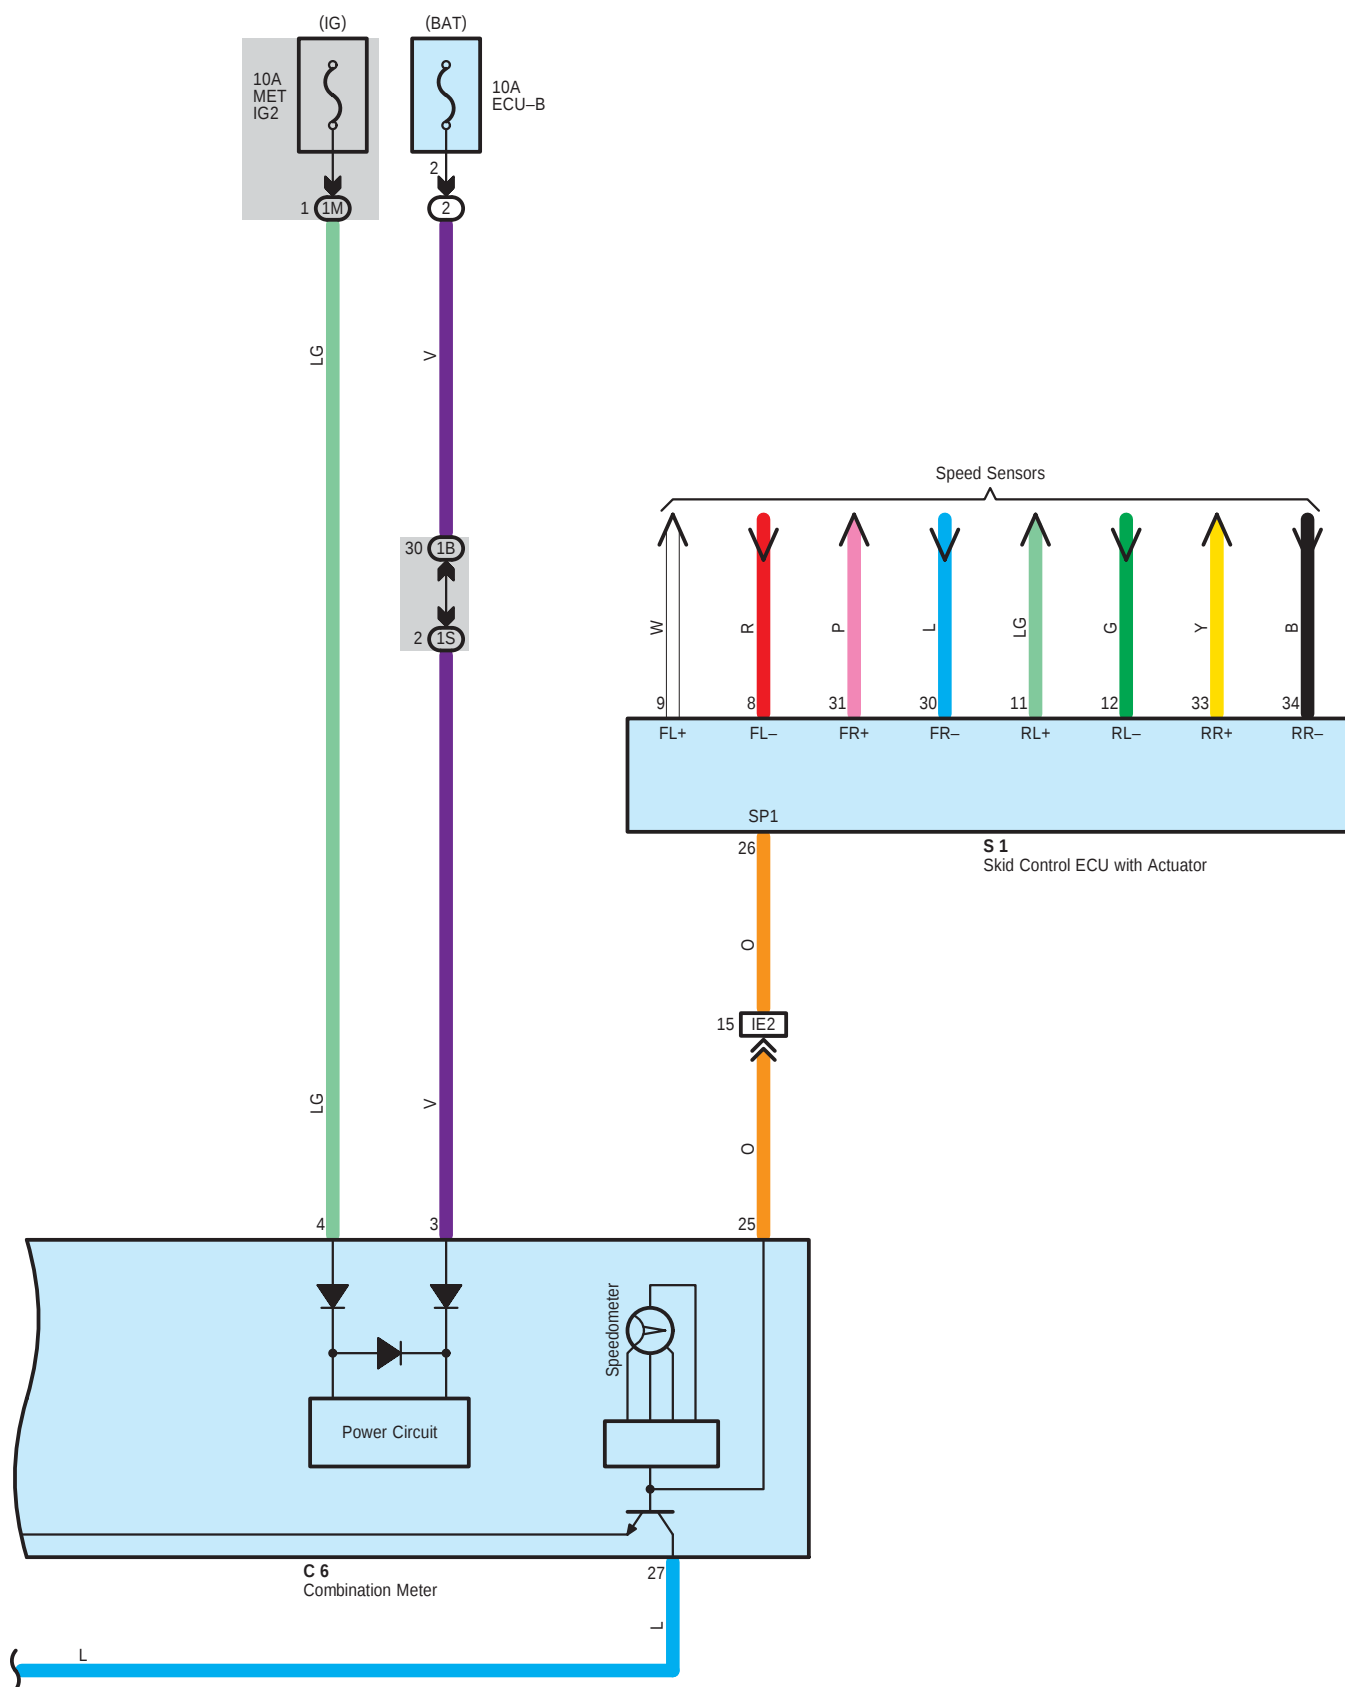

System Outline

Previous automatic transaxle have selected each gear shift using the mechanically controlled throttle hydraulic pressure, governor hydraulic pressure and lock-up hydraulic pressure. The electronically controlled transmission, however, electrically controls the line pressure and lock-up pressure etc., through the solenoid valve. Engine control module controls each solenoid valve based on the input signals from each sensor, which makes smooth driving possible by shift selection for each gear that is most appropriate to the driving conditions at that time.

1. Gear Shift Operation

When driving, the engine warm up condition is input as a signal to TERMINAL THW of the engine control module from the engine coolant temp. sensor and the vehicle speed signal is input to TERMINAL SPD of the engine control module. At the same time, the throttle valve opening signal from throttle body assembly is input to TERMINALS VTA1 and VTA2 of the engine control module as throttle angle signal.

Based on these signals, the engine control module selects the best shift position for the driving conditions and sends current to the electronically controlled transmission solenoid.

2. Lock-Up Operation

When the engine control module judges from each signal that lock-up operation conditions have been met, current flows from TERMINAL S4 of the engine control module to TERMINAL 8 of the electronically controlled transmission solenoid to GROUND, causing continuity to the lock-up solenoid and causing lock-up operation.

3. Clutch Pressure Control

The electronically controlled transmission solenoid is controlled by the current from TERMINAL SLT+ of the engine control module, and controls the accumulator hydraulic pressure.

As a result, the clutch to hydraulic pressure is adjusted precisely, and allows stable shift change.

4. Line Pressure Control

The engine control module adjusts the line hydraulic pressure to the optimal level by controlling TERMINAL SLT+ of the module according to the engine torque data. This realizes the smooth gear shifting.

5. Shifting Control in Uphill/Downhill Traveling

This system determines whether the vehicle is traveling on an incline or decline from the throttle opening angle, vehicle acceleration condition and brake pedal operation, and controls the shift up to O/D to allow smooth driving.

6. Clutch to Clutch Control

When shifting from the 1st gear to the 2nd gear and the 2nd gear to the 3rd gear, the current from the engine control module TERMINALS SL1+ and SL2+ control the electronically controlled transmission solenoid, to control the drain orifice hydraulic pressure (Switch orifice). The electronically controlled transmission solenoid is also controlled by the current from the engine control module TERMINALS SL1+ and SL2+, to adjust the hydraulic pressure precisely, which ensures smooth shifting.

7. Stop Lamp SW Circuit

If the brake pedal is depressed (Stop lamp SW on) when driving in lock-up condition, a signal is input to TERMINAL STP of the engine control module, the engine control module operates and continuity to the lock-up solenoid is cut.

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
A10		36	E8	D	36	S1	35
C6		36	J3		37	S6	37
D4		36	J4	A	37	S8	37
E1		34	J5	B	37	T1	35
E2		34	J7		37	T2	35
E4	A	36	J8		37	T3	35
E5	B	36	M1		35		
E7	C	36	P1		35		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.2 (Inside of the Engine Room R/B Box)



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1E		
1M	25	
1S		



: Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B Box)
IE1	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IE2		
IF1	43	Instrument Panel Wire and Sensor Wire (Instrument Panel Brace LH)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IH2		





: Ground Points

Code	See Page	Ground Points Location
EC	40	Front Left Fender
ED	40	Front Left Side of the Cylinder Head
EE	40	Left Side of the Cylinder Head

Cruise Control

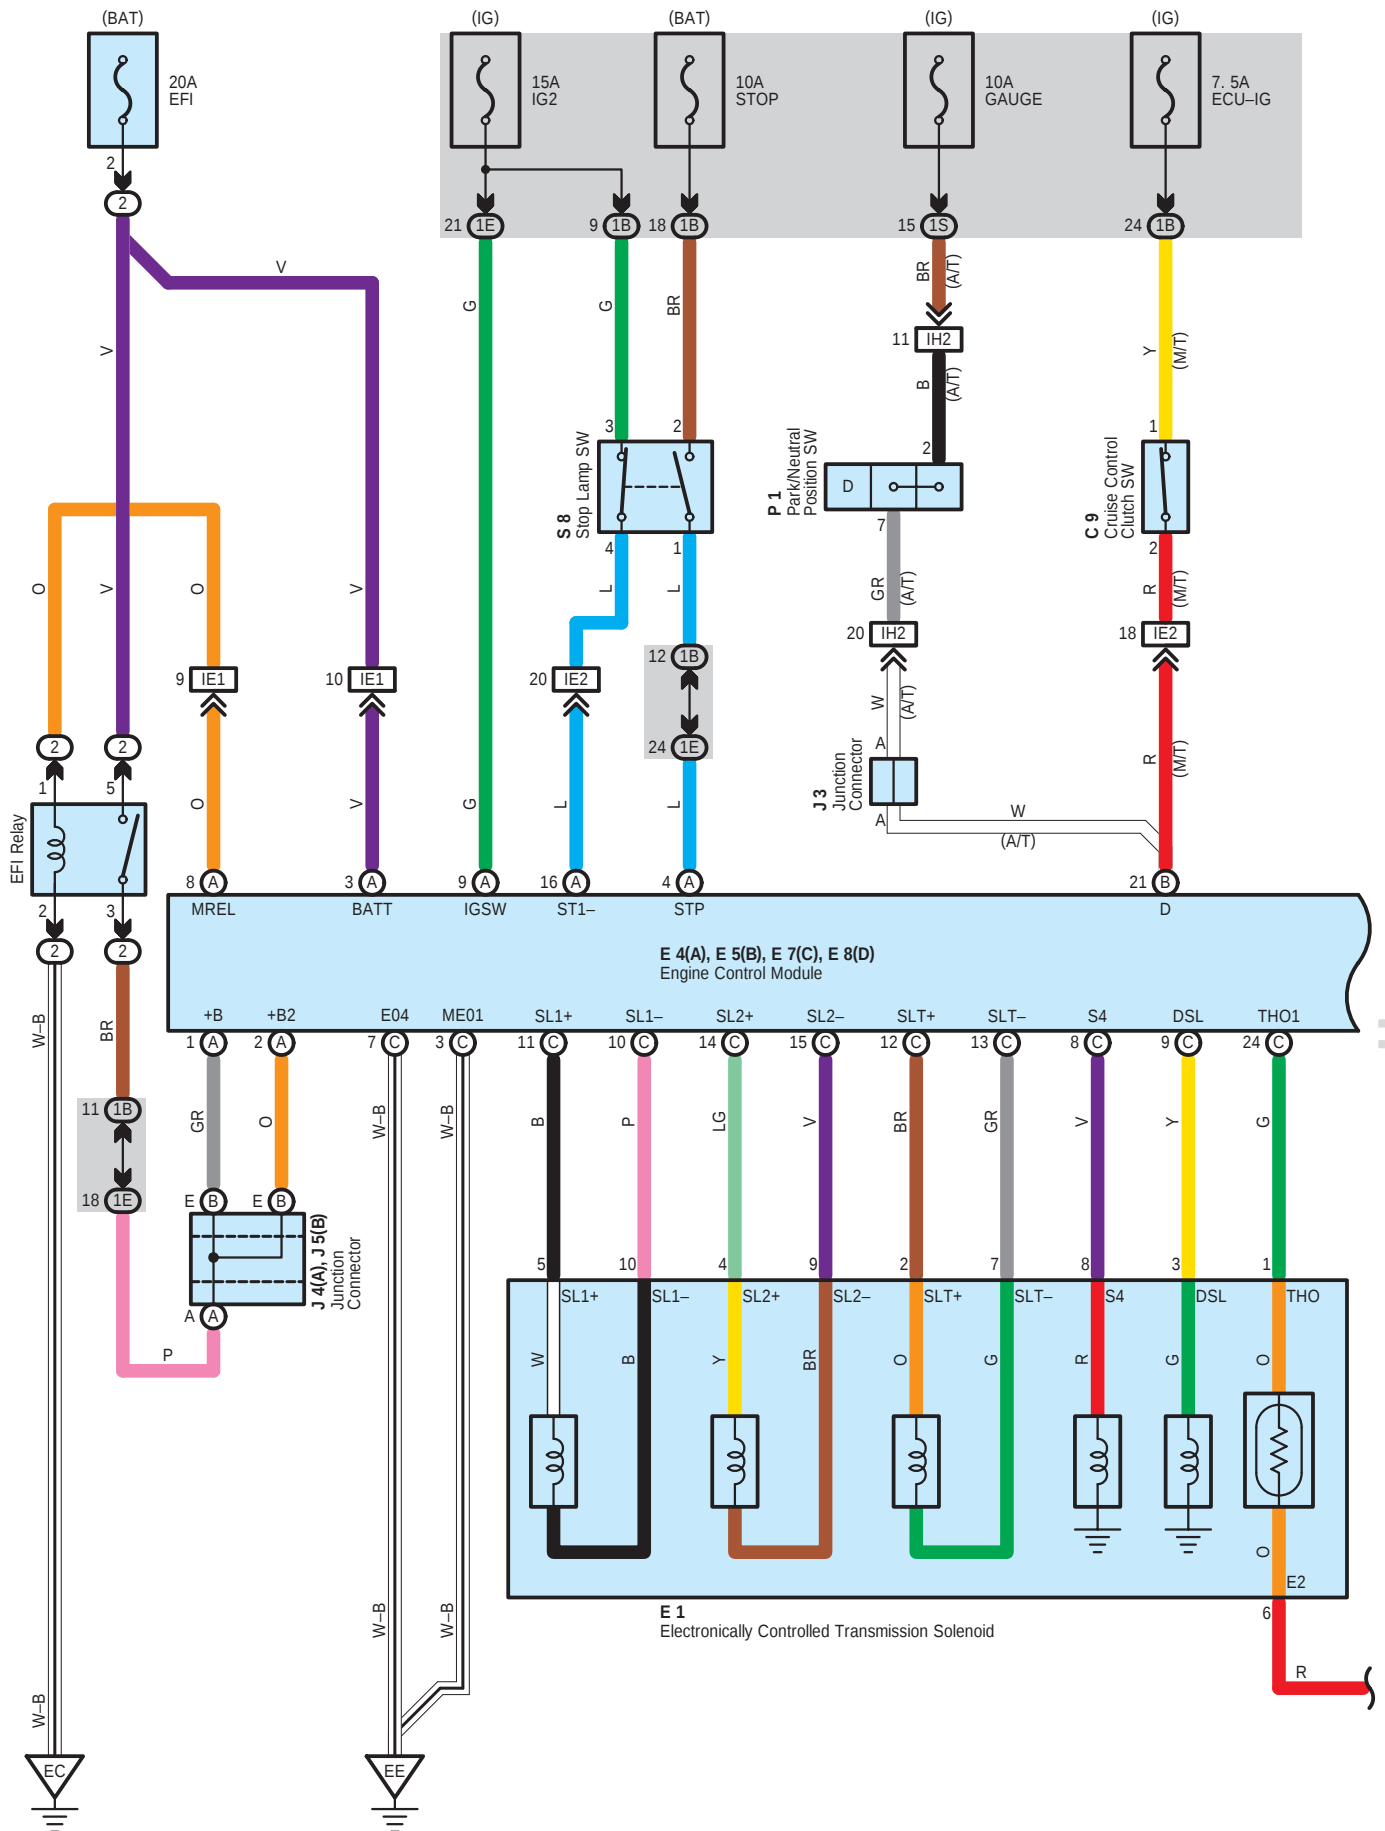

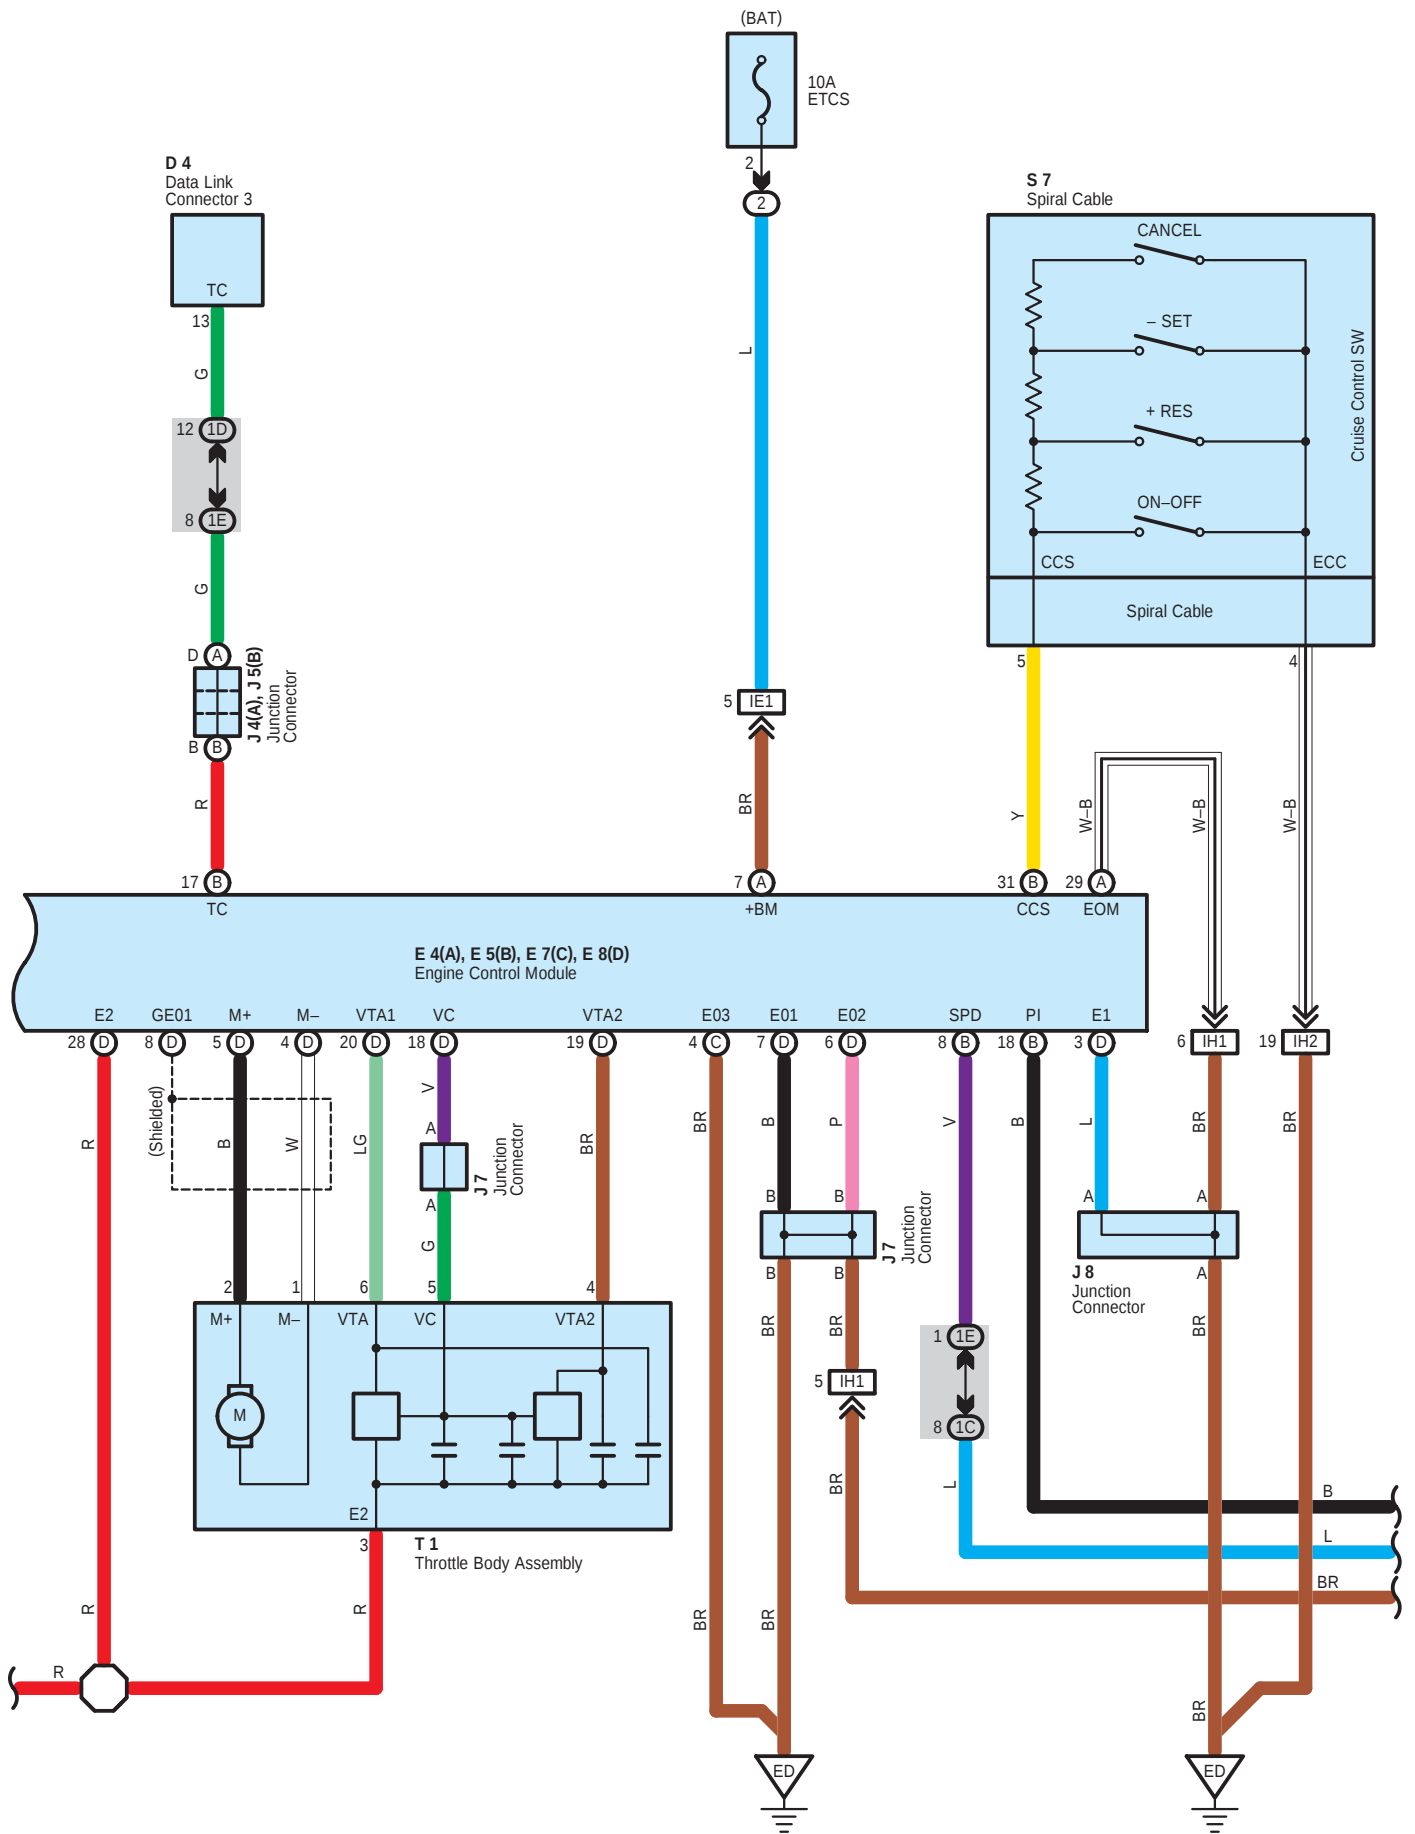

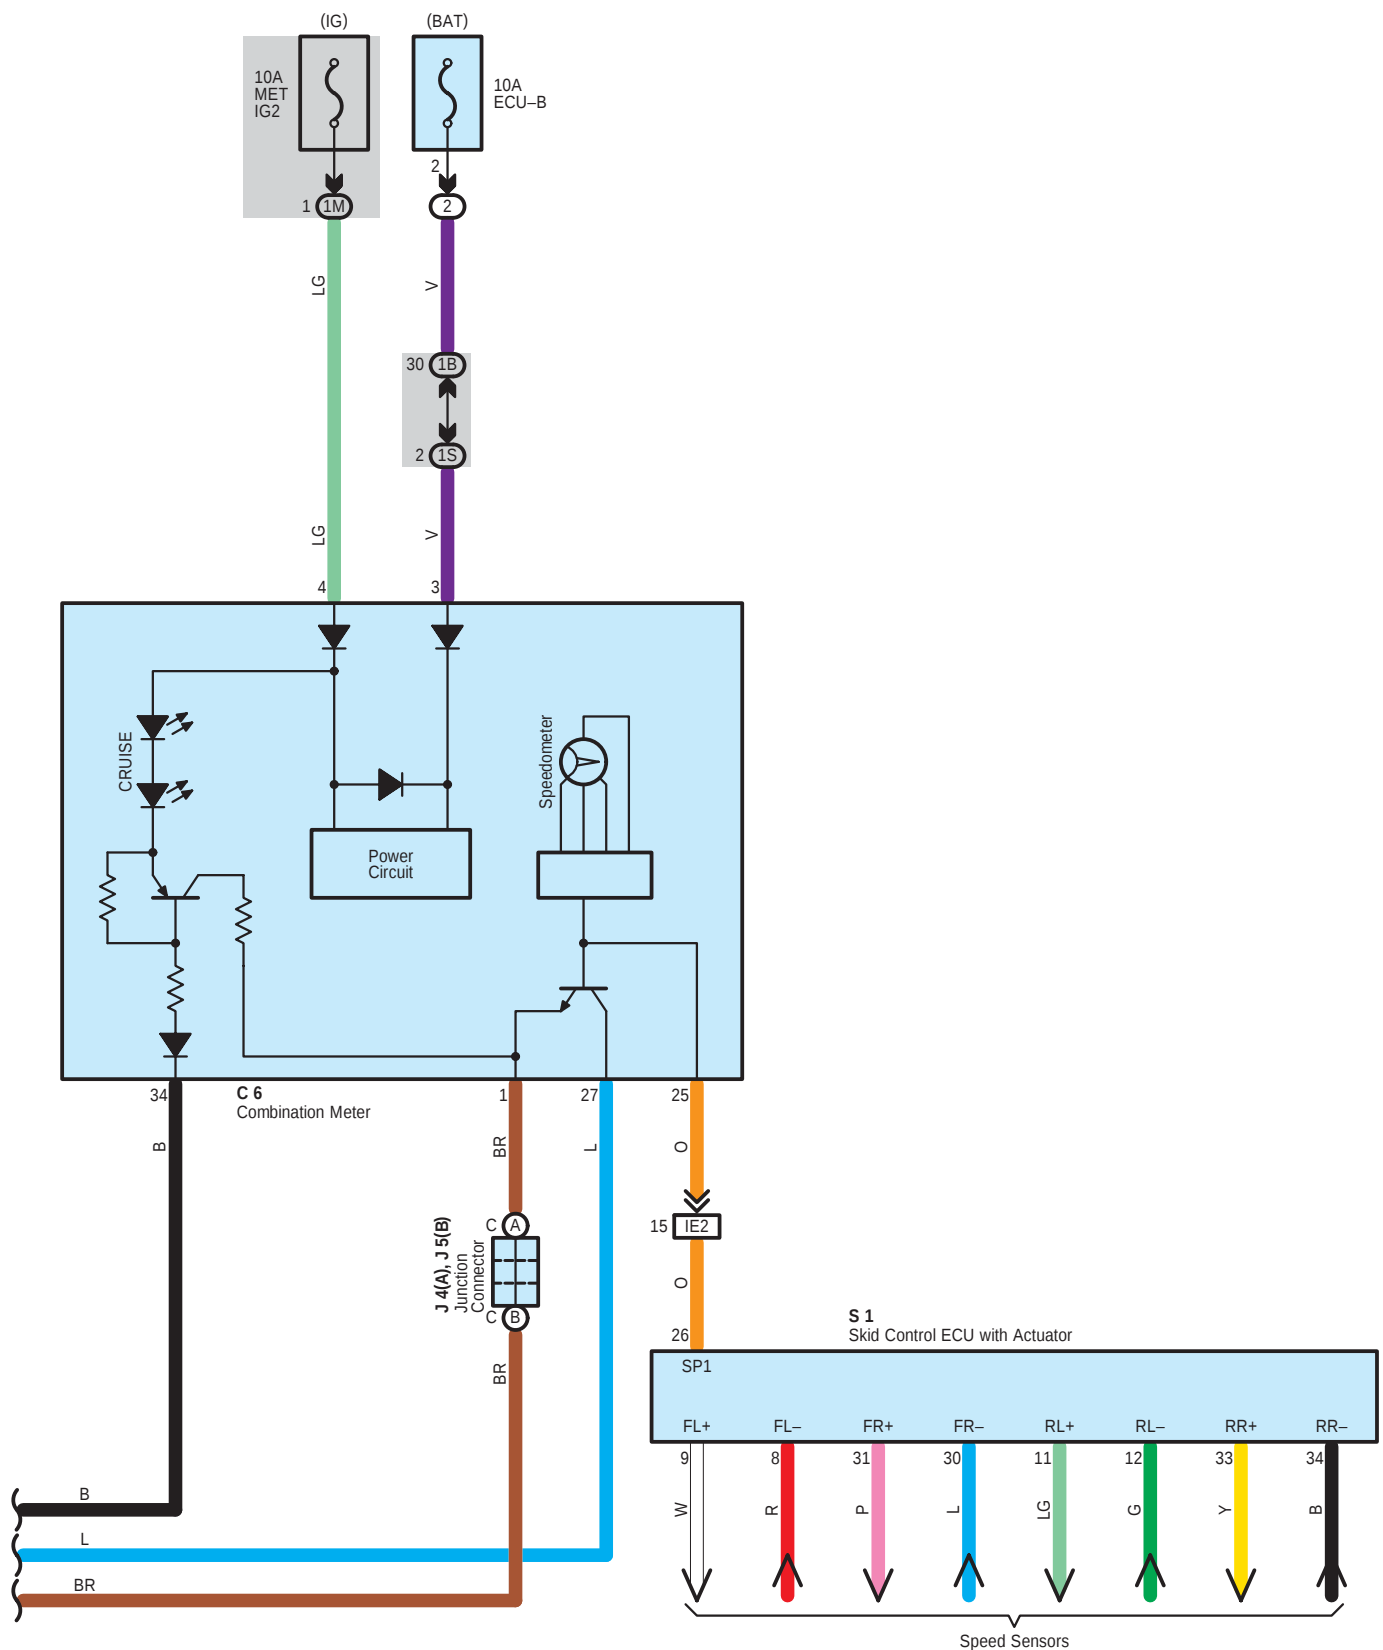

System Outline

The cruise control system is a constant vehicle speed controller in which control of the switch on the steering wheel makes it possible to automatically adjust the opening of the engine throttle valve without depressing of the accel pedal.

1. Set Operation

When the ON-OFF SW is turned on, the system starts preparations necessary for the cruise control and turns on the indicator light in the combination meter.

2. Set Speed Control

When the SET/- SW is operated with the ON-OFF SW turned on during travelling, the constant vehicle speed is controlled.

3. Coast Control

When the SET/- SW is kept turned on during cruise control travelling, the engine control module controls the throttle valve to decelerate the vehicle. Every time the SET/- SW is turned on momentarily, the vehicle speed is decelerated by approximately 1.6 km/h. However, in the case of tap-down operation to make more than a 5 km/h difference between the set speed and the actual vehicle speed, the device memories the speed when the switch was turned off and controls it at that speed constantly.

4. Accel Control

When the RES/+ SW is kept turned on during cruise control travelling, the engine control module controls the throttle valve to accelerate the vehicle. Every time the RES/+ SW is turned on momentarily, the vehicle speed is accelerated by approximately 1.6 km/h. However, in the case of tap-up operation to make more than a 5 km/h difference between the set speed and the actual vehicle speed, the device does not change the set speed. (Tap-up operation is not available.)

5. Resume Control

When the vehicle speed falls below the low speed limit and the cruise control is cancelled, the preset speed is retained in the memory. However, the resume control is available only when the vehicle speed exceeds the low speed limit.

6. Manual Cancel Mechanism

If any of the following signals is input during cruise control travelling, the cruise control is cancelled.

- * The stop lamp SW is turned on. (The brake pedal is depressed)
- * The CANCEL SW is turned on.
- * The ON-OFF SW is turned off.
- * The cruise control clutch SW is turned off. (M/T) (The clutch pedal is depressed)
- * Gear is shifted from position D or 3 to other positions. (A/T)

7. Auto Cancel Function

If any of the following conditions is encountered, the cruise control is automatically cancelled.

- * Disconnection and/or short in the stop light SW
- * Malfunction in the vehicle speed signal
- * Malfunction in the electronic throttle parts
- * Malfunction in the stop lamp SW input circuit
- * Malfunction in the cancel circuit
- * The actual vehicle speed becomes slower than the minimum speed limit
- * The actual vehicle speed becomes 16 km/h slower than the set speed

8. Overdrive Control Function

The overdrive is sometimes cut off on hills during cruise control driving. When the end of a climbing hills is determined by the throttle opening degree information after the overdrive has been canceled, control is reset to the overdrive condition after the overdrive resetting timer operation. Also, when the overdrive is cut off during accelerator control and resuming control, control is reset to the overdrive condition when the accelerator control and resuming control is finished.

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
C6		36		E7	C	36		J8	37		
C9		36		E8	D	36		P1	35		
D4		36		J3		37		S1	35		
E1		34		J4	A	37		S7	37		
E4	A	36		J5	B	37		S8	37		
E5	B	36		J7		37		T1	35		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

Cruise Control



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1E		
1M	25	
1S		




: Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IE2		
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IH2		




: Ground Points

Code	See Page	Ground Points Location
EC	40	Front Left Fender
ED	40	Front Left Side of the Cylinder Head
EE	40	Left Side of the Cylinder Head

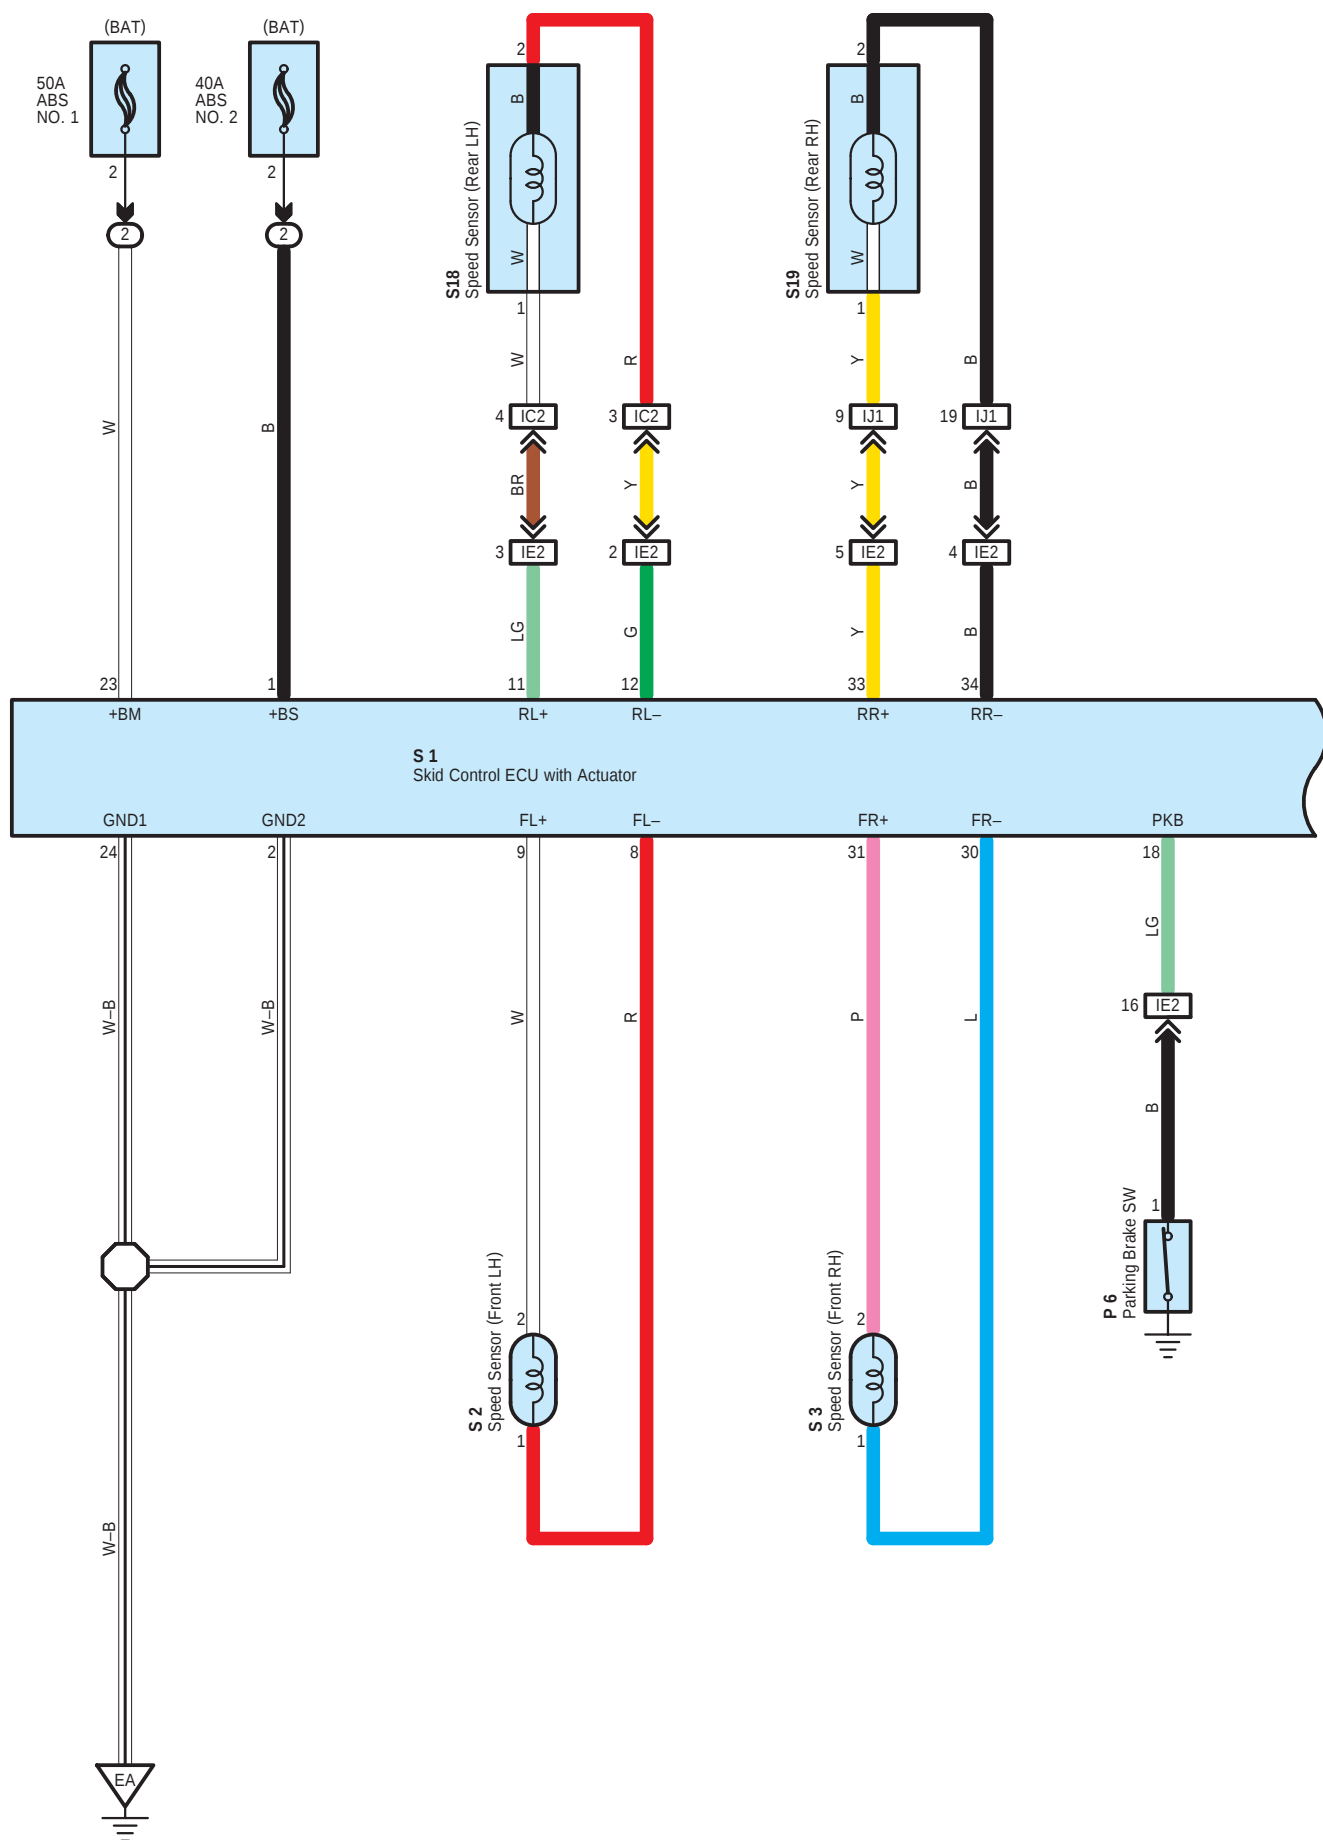

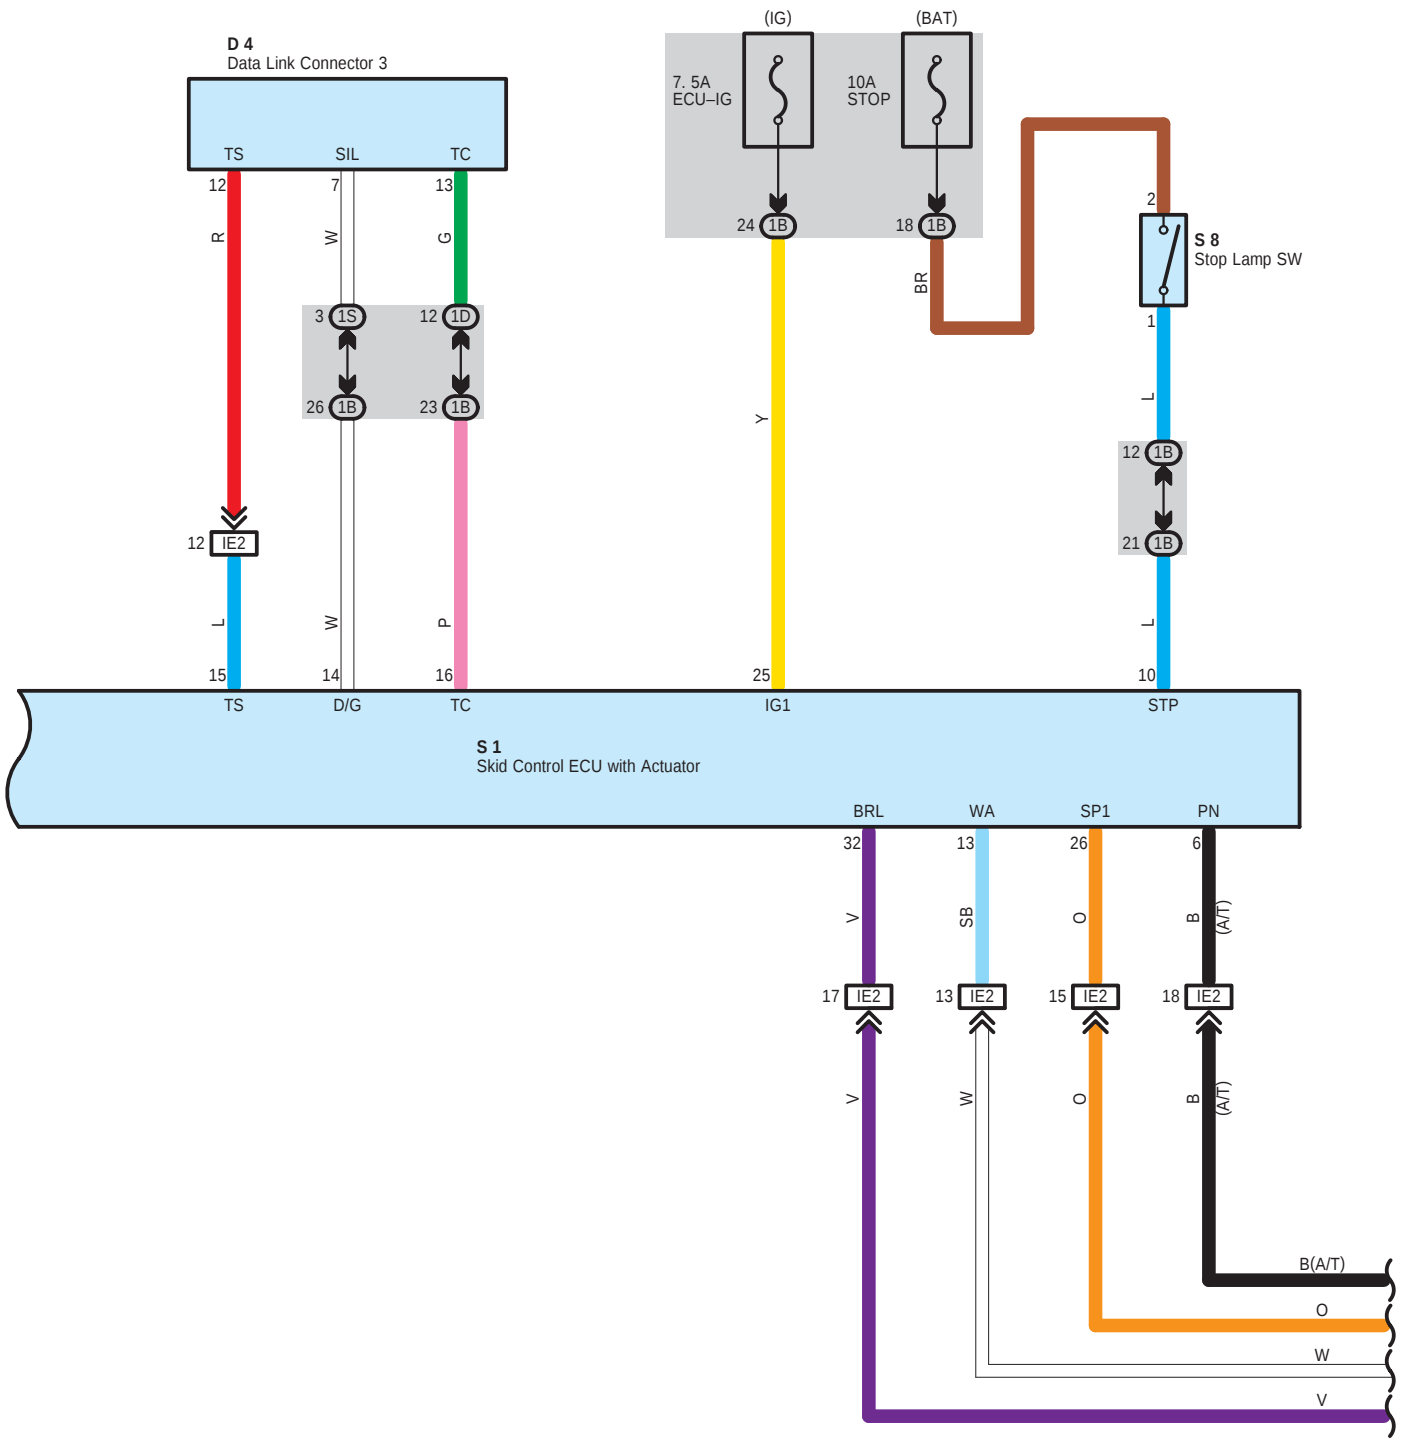

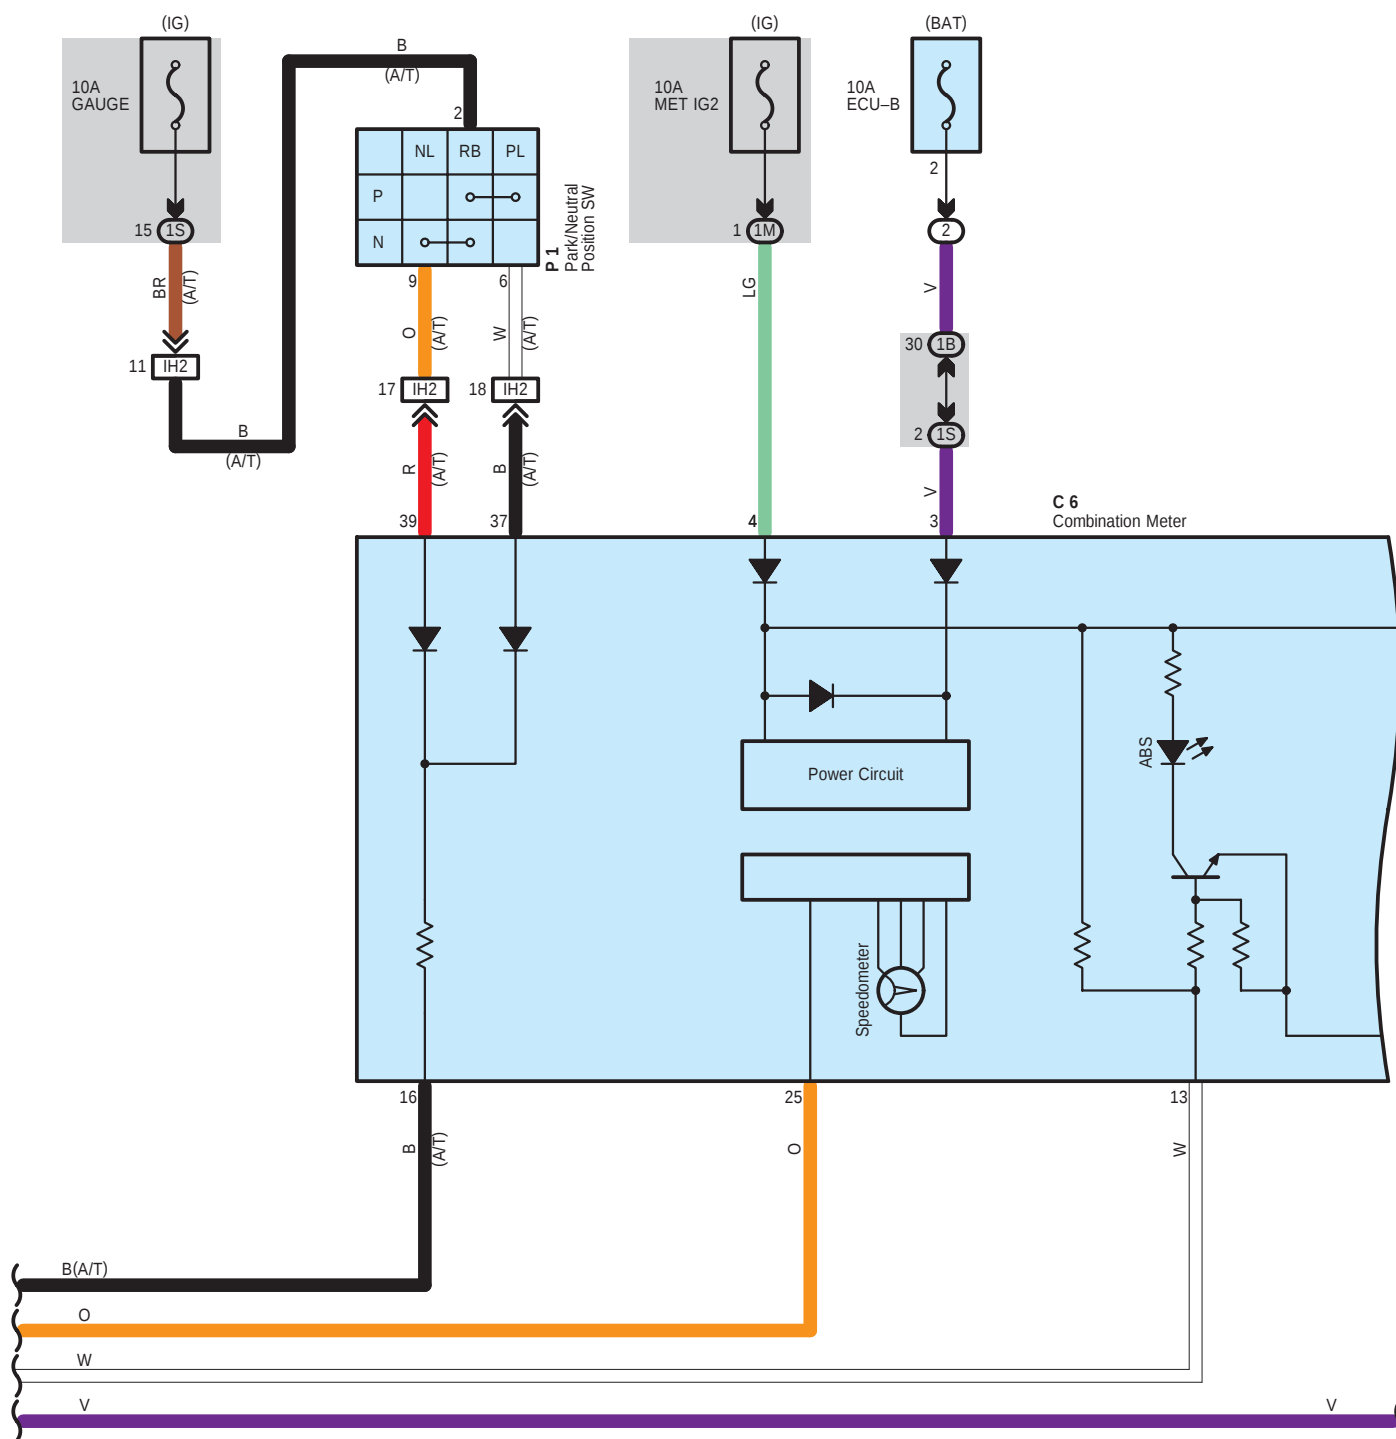

System Outline

* ABS system

This system controls the respective brake fluid pressures acting on the disc brake cylinders of the right front wheel, left front wheel and rear wheels when the brakes are applied in a panic stop so that the wheels do not lock. This results in improved directional stability and steerability during panic braking.

1. Input Signals

(1) Speed sensor signal

The speed of the wheels is detected and input to TERMINALS 9, 11, 31 and 33 of the skid control ECU with actuator.

(2) Stop light SW signal

A signal is input to TERMINAL 10 of the skid control ECU with actuator when the brake pedal is depressed.

2. System Operation

During sudden braking the skid control ECU with actuator has signals input from each sensor, which controls the current to the solenoid inside the actuator and lets the hydraulic pressure acting on each wheel cylinder escape to the reservoir. The pump inside the actuator is also operating at this time and it returns the brake fluid from the reservoir to the master cylinder, thus preventing locking of the vehicle wheels.

If the skid control ECU with actuator judges that the hydraulic pressure acting on the wheel cylinder is insufficient, the current on the solenoid is controlled and the hydraulic pressure is increased. Holding of the hydraulic pressure is also controlled by the skid control ECU with actuator, by the same method as above. Pressure reduction, holding and increase are repeated to maintain vehicle stability and to improve steerability during sudden braking.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B2	34	J7	37	S3	35
C6	36	P1	35	S8	37
D4	36	P6	37	S18	39
J4	A 37	S1	35	S19	39
J5	B 37	S2	35		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1M	25	
1S		


□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
IE2	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IH2		
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)


▽ : Ground Points

Code	See Page	Ground Points Location
EA	40	Front Right Fender
EB		
ED	40	Front Left Side of the Cylinder Head

Tire Pressure Warning System

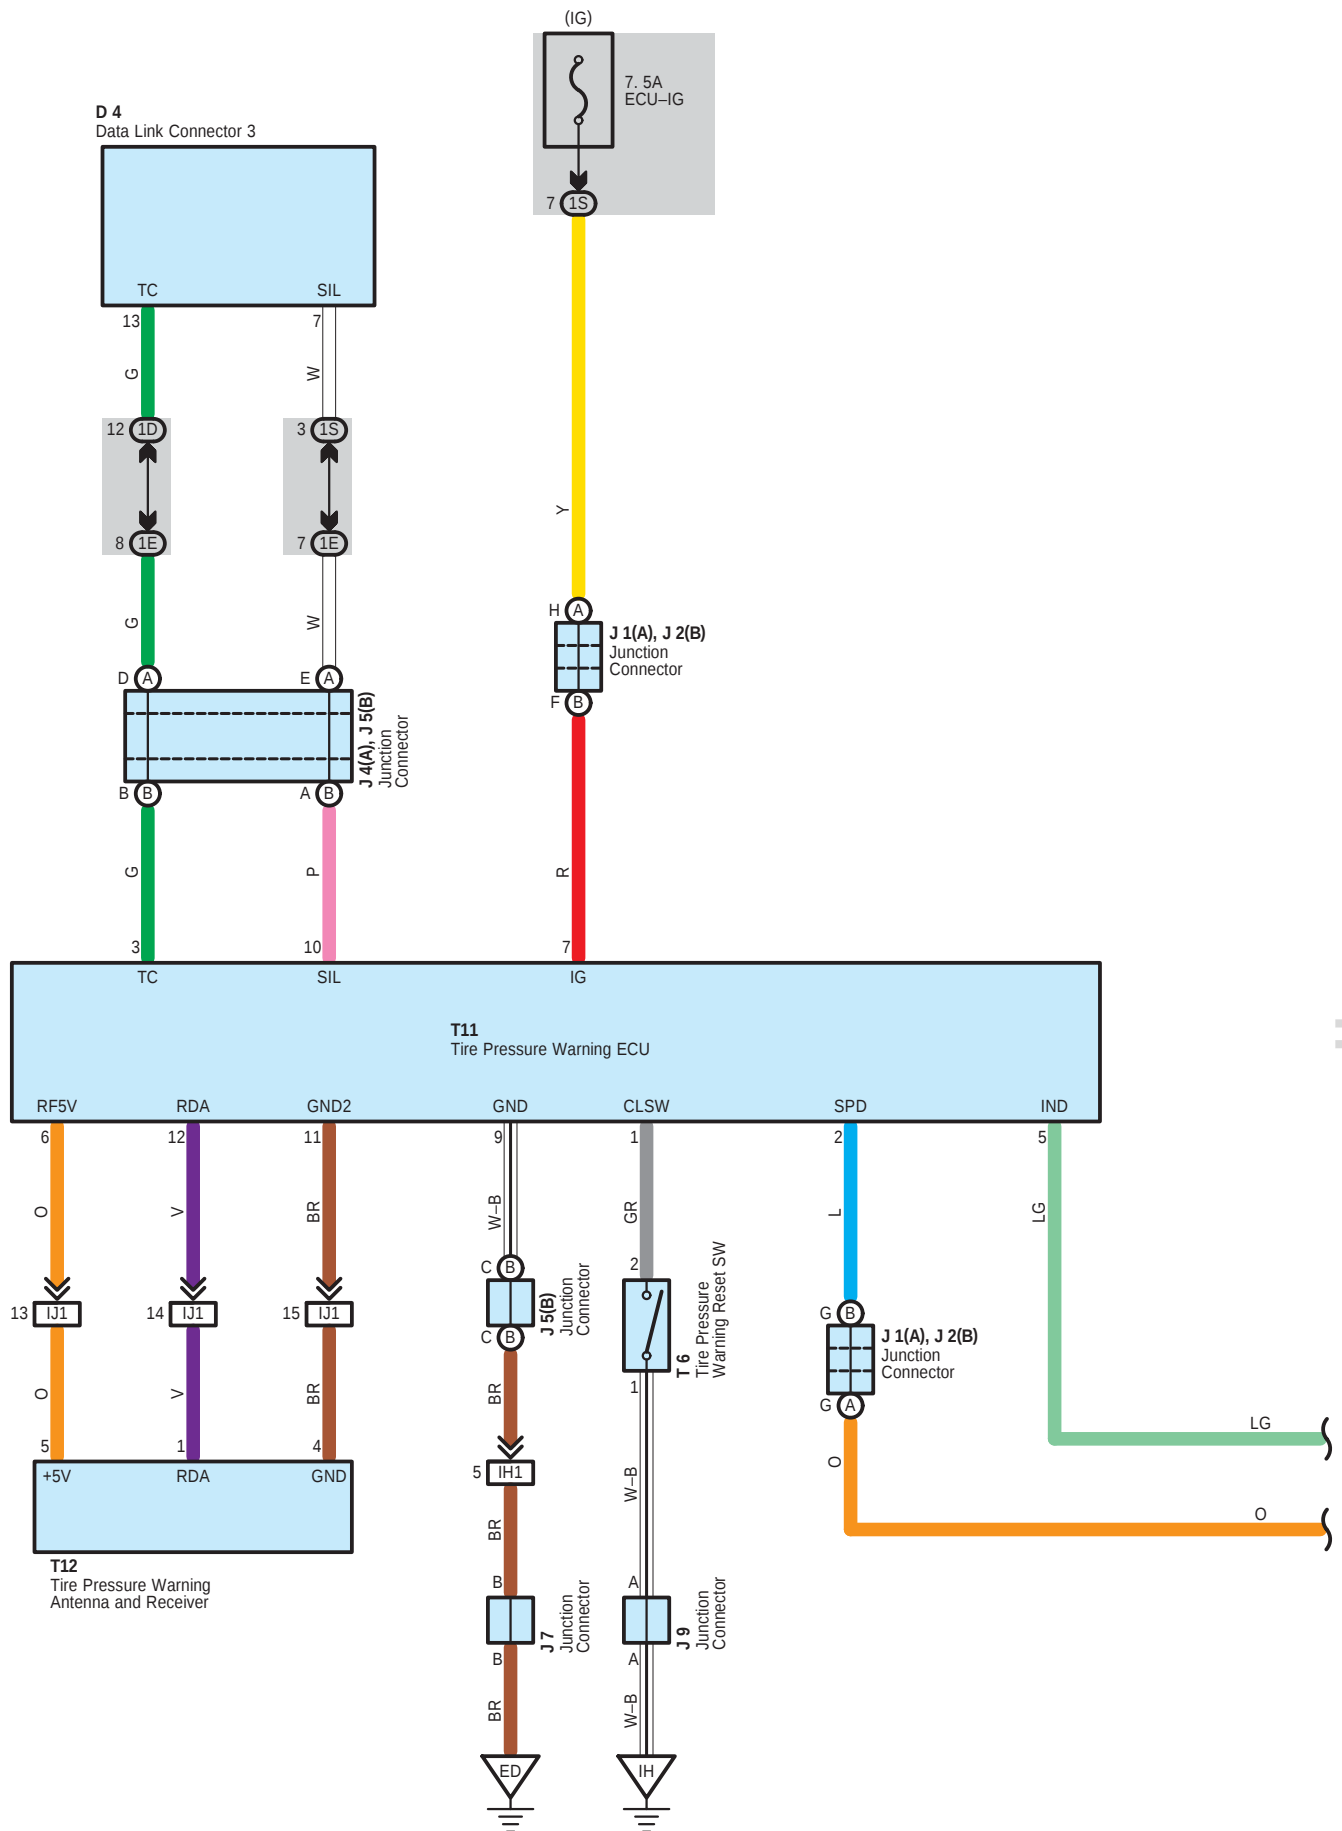

cardiagn.com

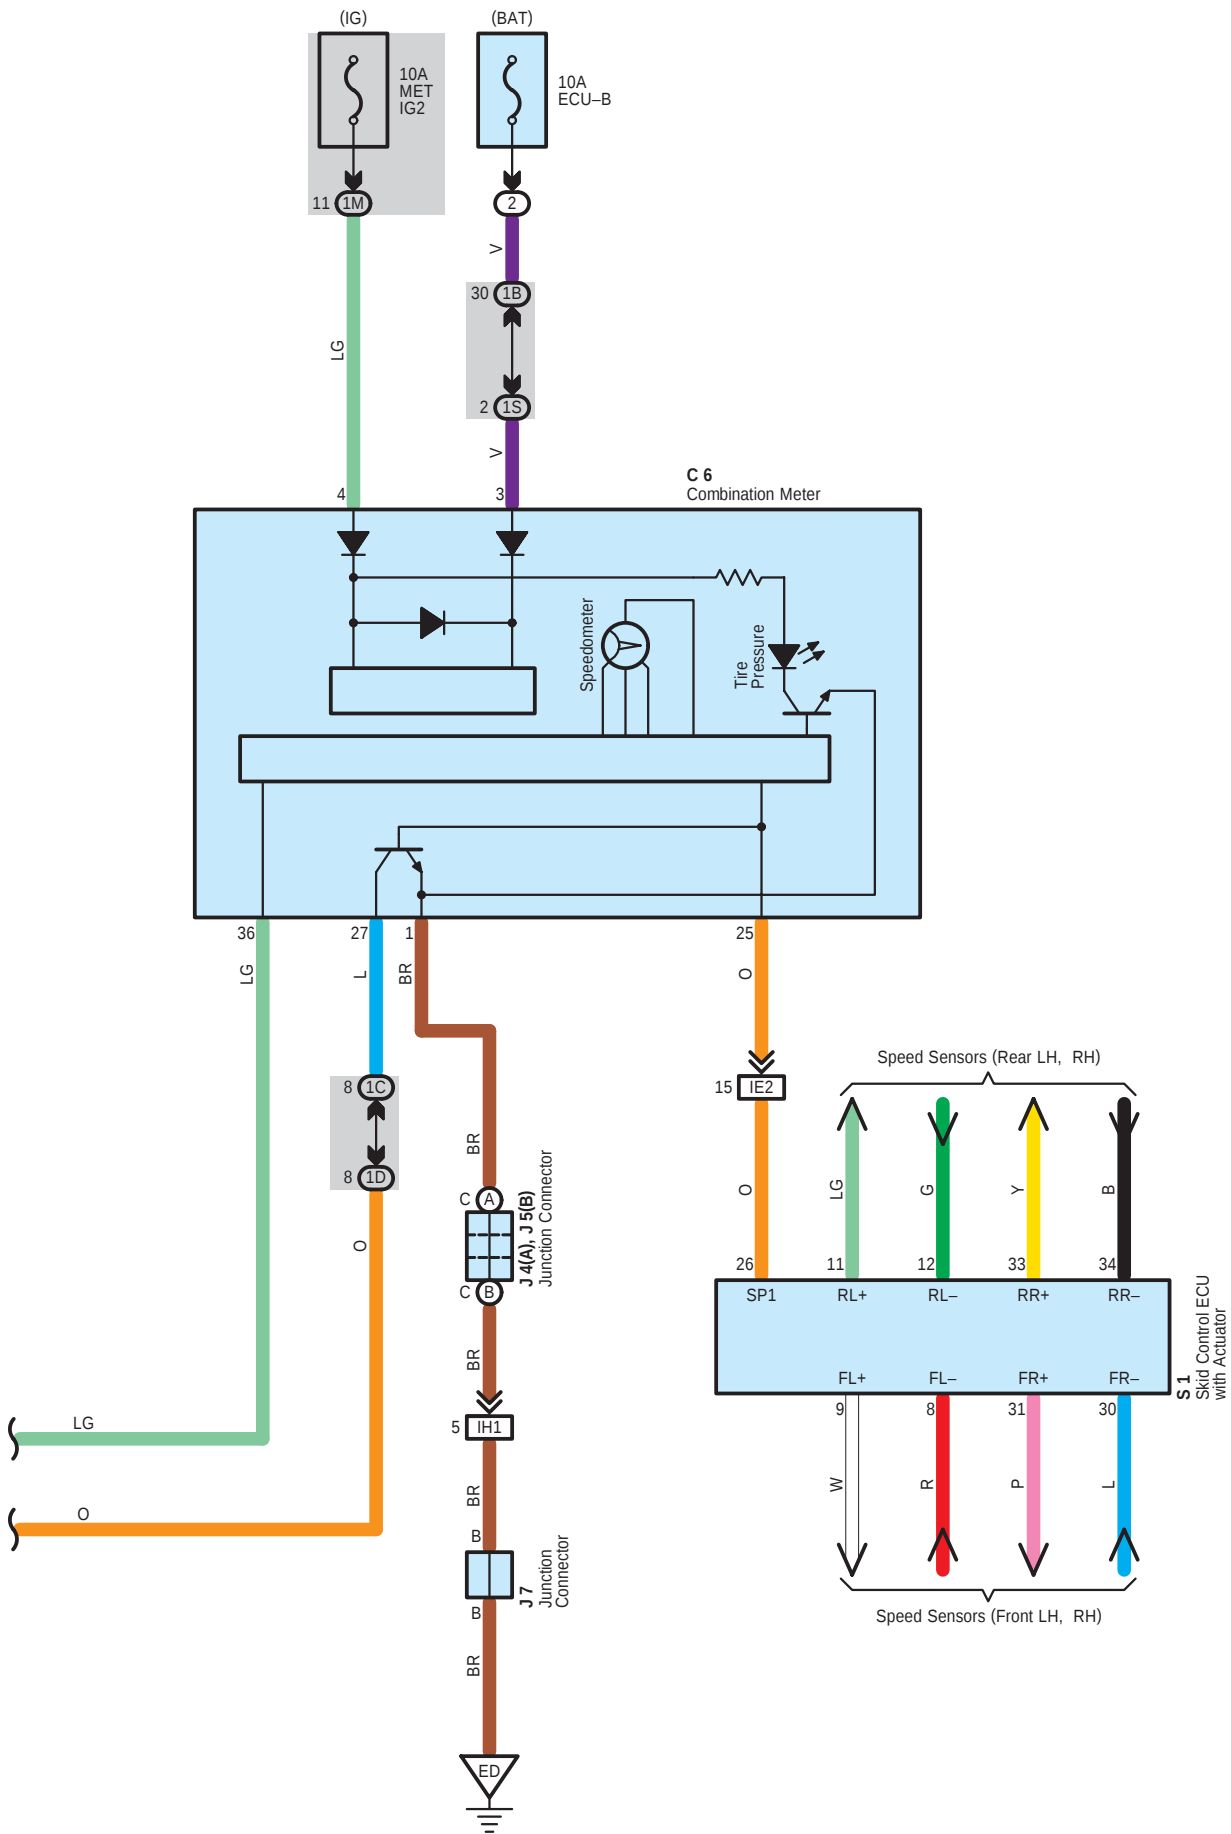

Tire Pressure Warning System

System Outline

The tire pressure warning valve and transmitter installed in the tire wheel detects the tire air pressure and transmits signals to the vehicle side receiver. When the detected tire air pressure is below a specified level, the warning light in the combination meter comes on to inform the driver.

Press the tire pressure warning reset SW for 3 seconds with the ignition SW at ON position after the tire pressure is adjusted to the specified value. It will lead the tire pressure warning ECU to warn the pressure according to the specified value.

Warnings when the tire pressure is low

* When the tire air pressure is below a specified level, the warning light in the combination meter comes on.

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
C6		36		J4	A	37		S1		35	
D4		36		J5	B	37		T6		37	
J1	A	37		J7		37		T11		37	
J2	B	37		J9		37		T12		39	

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1E		
1M	25	
1S		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)


▽ : Ground Points

Code	See Page	Ground Points Location
ED	40	Front Left Side of the Cylinder Head
IH	42	Cowl Brace RH


NOTICE: When inspecting or repairing the SRS, perform service in accordance with the following precautionary instructions and the procedure, and precautions in the Repair Manual applicable for the model year.

- Malfunction symptoms of the SRS are difficult to confirm, so the DTCs become the most important source of information when troubleshooting. When troubleshooting the SRS, always inspect the DTCs before disconnecting the battery.
- **Work must be started more than 90 seconds after the ignition SW is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.**
(The SRS is equipped with a back-up power source so that if work is started within 90 seconds from disconnecting the negative (-) terminal cable of the battery, the SRS may deploy.)
- When the negative (-) terminal cable is disconnected from the battery, the memory of the clock and audio system will be cleared. So before starting work, make a record of the contents in the audio memory system. When work is finished, reset the audio systems as they were before and adjust the clock. Some vehicles have power tilt steering, power telescopic steering, power seat and power outside rear view mirror which are all equipped with memory function. However, it is not possible to make a record of these memory contents. So when the work is finished, it will be necessary to explain it to your customer, and ask the customer to adjust the features and reset the memory. To avoid erasing the memory in each system, never use a back-up power supply from outside the vehicle.
- Before repair, remove the airbag sensor if shocks are likely to be applied to the sensor during repair.
- Do not expose the following parts directly to hot air or flame;
- Even in cases of a minor collision where the SRS does not deploy, the following parts should be inspected;
- Never use SRS parts from another vehicle. When replacing parts, replace with new parts.
- For the purpose of reuse, never disassemble and repair the following parts.
- If the following parts have been dropped, or have cracks, dents and other defects in their case, bracket, and connector, replace with new one.
- Use a volt/ohmmeter with high impedance (10 k Ω /V minimum) for troubleshooting electrical circuits of the system.
- Information labels are attached to the periphery of the SRS components. Follow the instructions of the notice.
- After work on the SRS is completed, check the SRS warning light.
- If the vehicle is equipped with a mobile communication system, refer to the precaution in the IN section of the Repair Manual.

- | |
|--|
| <ul style="list-style-type: none"> * Steering wheel pad * Front passenger airbag assembly * Side airbag assembly * Curtain shield airbag assembly * Knee airbag assembly * Seat belt pretensioner * Center airbag sensor assembly * Front airbag sensor assembly * Side airbag sensor assembly * Rear airbag sensor assembly |
|--|

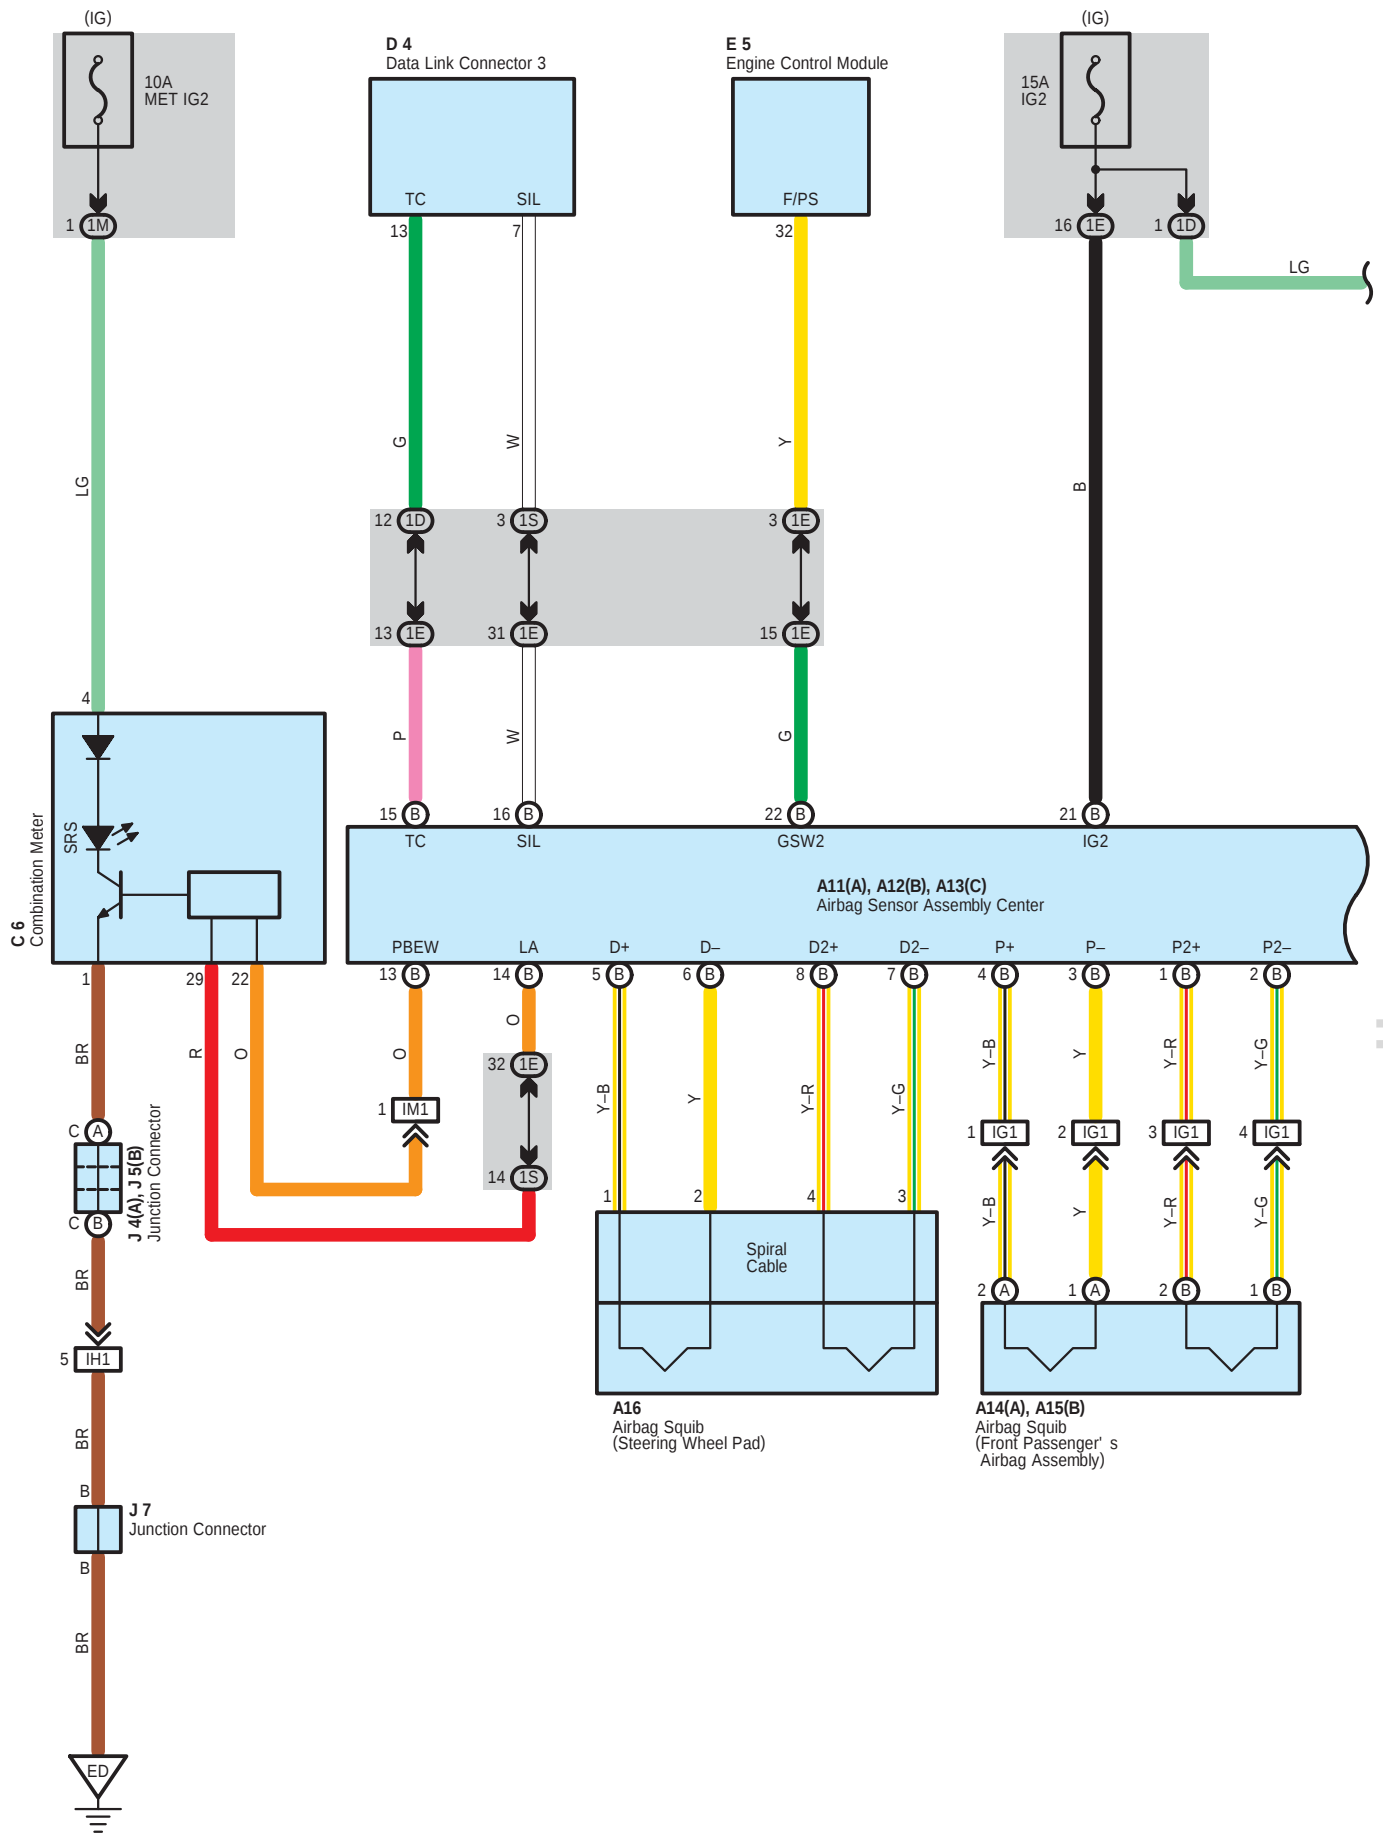


* 1 : w/ Side Airbag

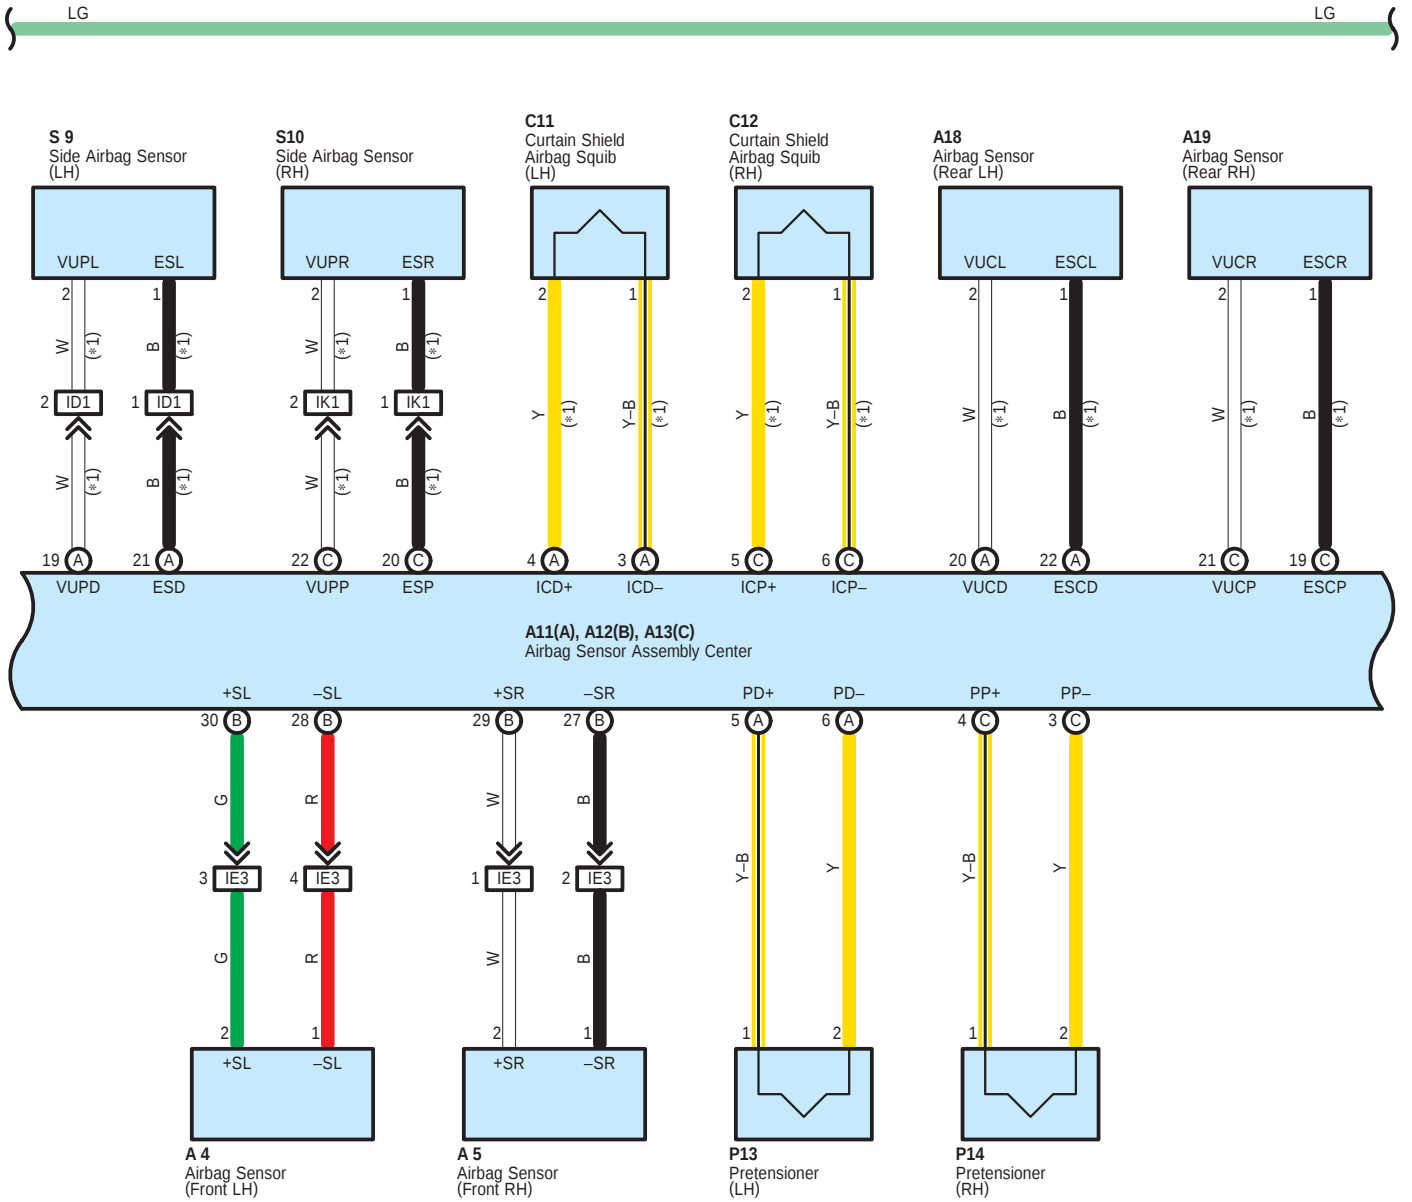

cardiagn.com

- * 1 : w/ Side Airbag
- * 2 : w/ Cruise Control
- * 3 : w/o Cruise Control

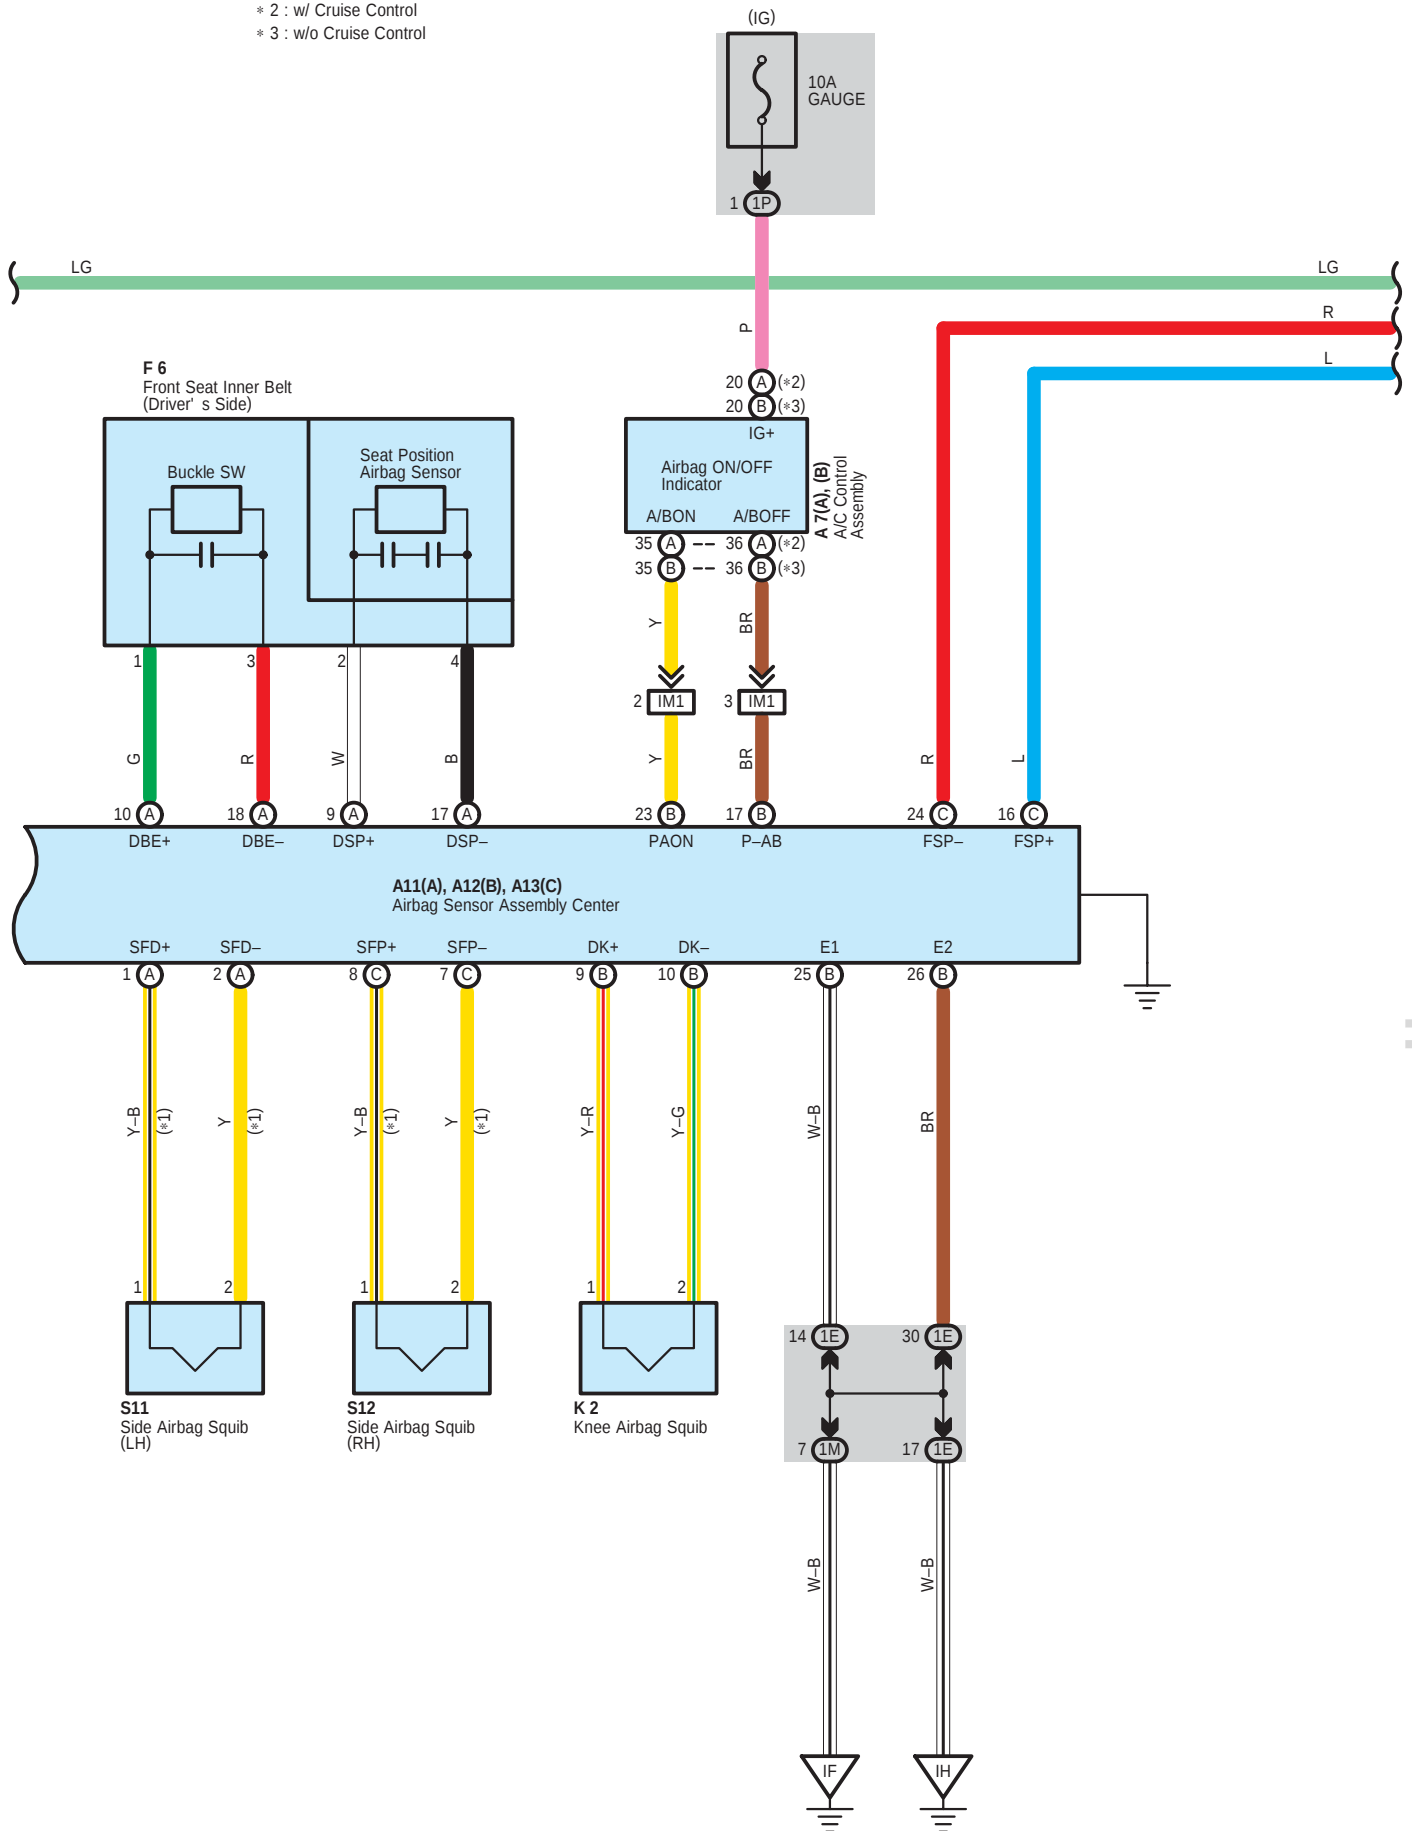

System Outline

- * The system reaches an ignition judgment to deploy the following device based on the signals received from the front airbag sensor and deceleration sensor.
 - Driver Airbag
 - Front Passenger Airbag
 - Knee Airbag
 - Seat Belt Pretensioner
- * The system reaches an ignition judgment to deploy the following device based on the signals received from the side airbag sensors.
 - Side Airbags
 - Curtain Shield Airbags
- * The dual-stage SRS airbag system has been used for the driver and front passenger airbags. This system controls the optimal airbag inflation by judging the extent of impact, seat position (driver seat) and whether or not the seat belt is fastened (driver seat) and information from the Front Passenger Occupant Classification System.
- * The front passenger occupant classification system judges whether the front passenger seat is occupied by an adult or child (with child seat) or is unoccupied, according to the load applied to the front passenger seat and whether the seat belt is buckled. Based on the results, it restricts the deployment of the front passenger airbag, front passenger side airbag, and front passenger seat belt pretensioner. In addition, the system informs the driver of the result of the judgment through the use of the AIRBAG ON/OFF indicator lights.
- * The airbag sensor assembly transmits a signal to the Engine Control Module in order to stop the fuel pump.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A4	34	C11	38	O5	B 39
A5	34	C12	38	O6	39
A7	A 36	D4	36	O7	39
	B 36	E5	36	O8	39
A11	A 36	F6	38	O9	39
A12	B 36	F8	38	P13	39
A13	C 36	J3	37	P14	39
A14	A 36	J4	A 37	S9	39
A15	B 36	J5	B 37	S10	39
A16	36	J7	37	S11	39
A18	38	J9	37	S12	39
A19	38	K2	37		
C6	36	O4	A 39		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1D	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1H		
1M		
1P	25	
1S		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	42	Front Door LH Wire and Floor Wire (Left Kick Panel)
IE3	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IG1	43	Instrument Panel Wire and Instrument Panel Wire Assembly (Behind of the Glove Box)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
IK1	43	Front Door RH Wire and Floor No.2 Wire (Right Kick Panel)
IM1	43	Instrument Panel Wire and Instrument Panel Wire (Left Kick Panel)

 : Ground Points

Code	See Page	Ground Points Location
ED	40	Front Left Side of the Cylinder Head
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH

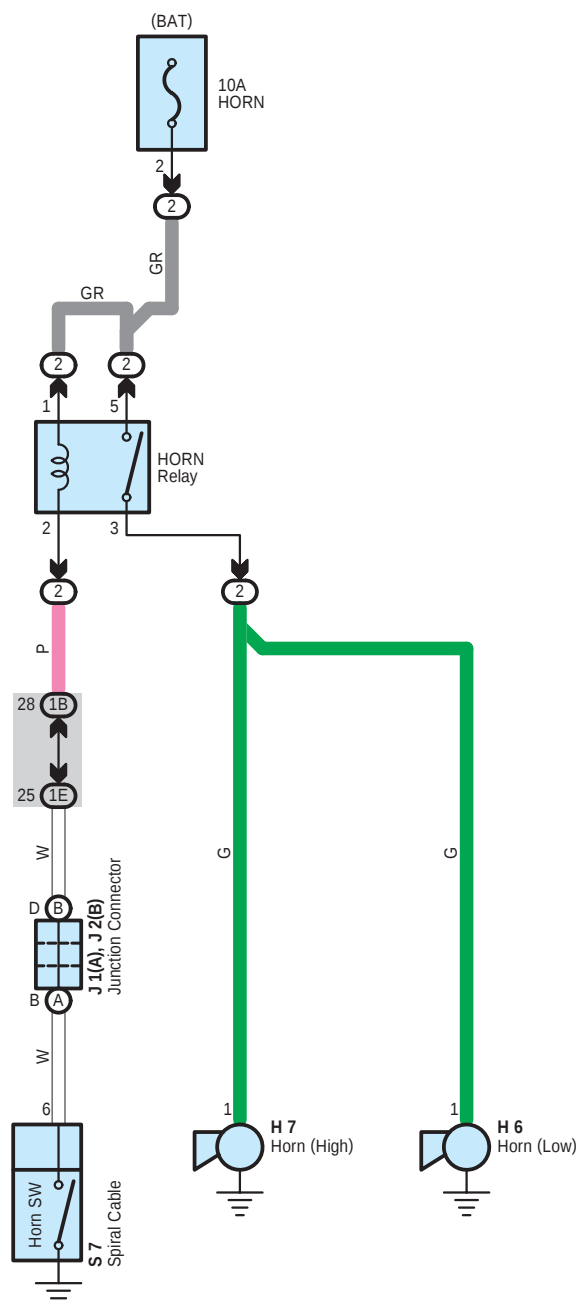

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
H6	34	J1	A	37	S7
H7	34	J2	B	37	37


 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1E	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)

Cigarette Lighter

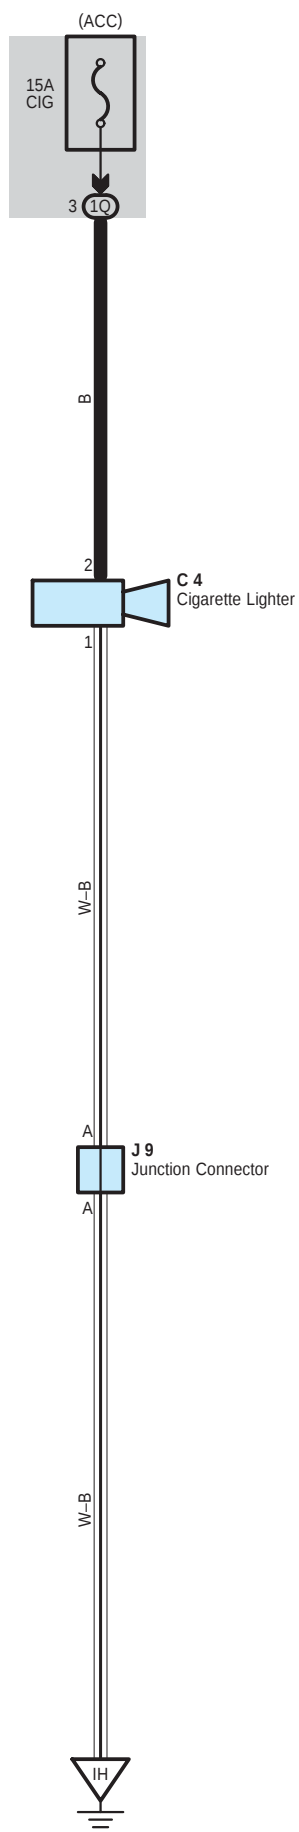

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
C4	36	J9	37		


 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1Q	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)

 : Ground Points

Code	See Page	Ground Points Location
IH	42	Cowl Brace RH

Power Outlet

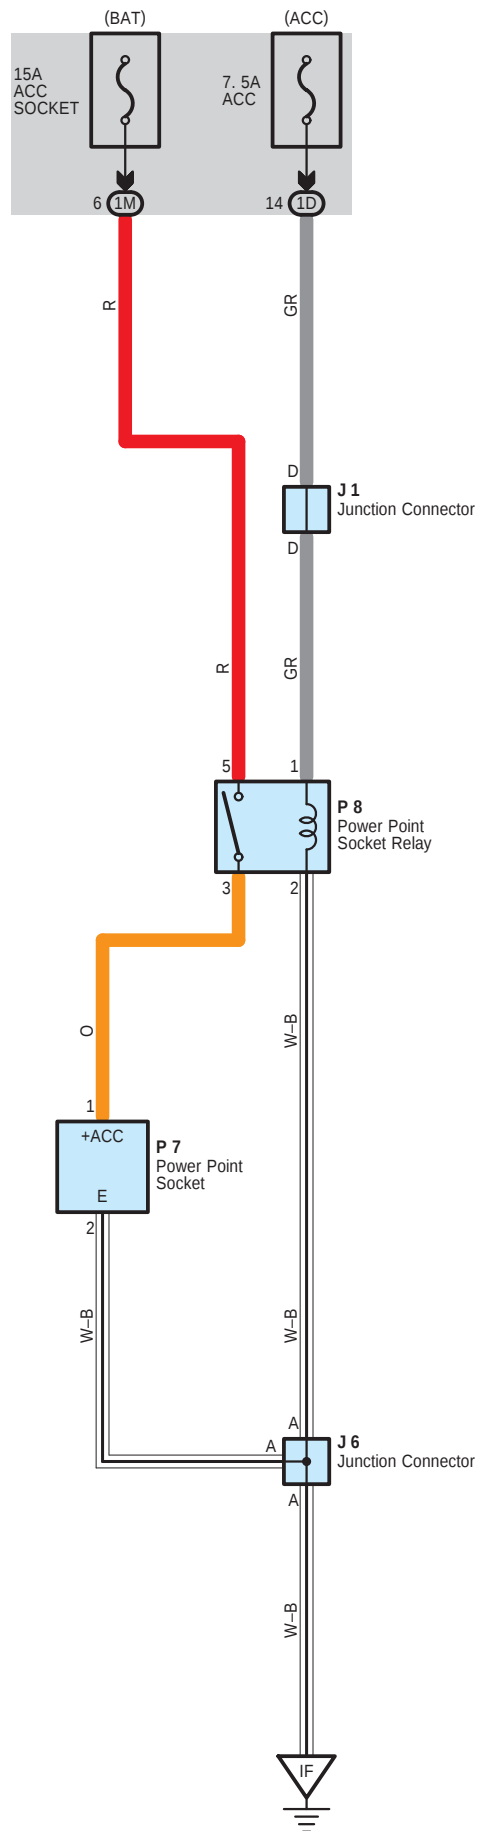

 : Parts Location


Code	See Page	Code	See Page	Code	See Page
J1	37	P7	37		
J6	37	P8	37		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	

 : Ground Points

Code	See Page	Ground Points Location
IF	42	Cowl Brace LH

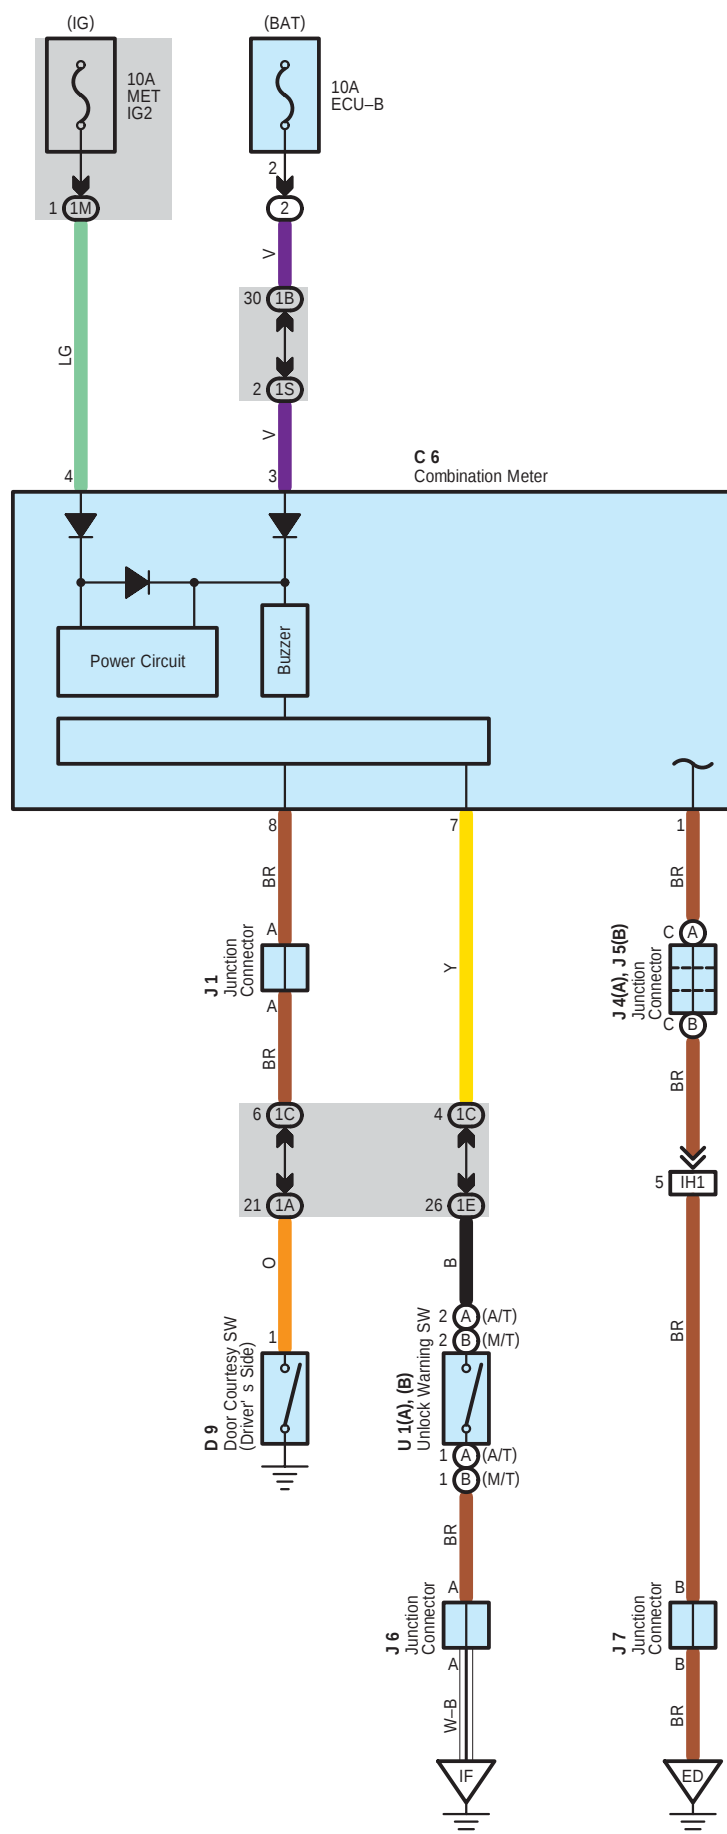

System Outline

Current is always applied from the ECU-B fuse to TERMINAL 3 of the combination meter. When the ignition SW is turned to ON position, the current from the MET IG2 fuse flows to TERMINAL 4 of the combination meter.

Key Reminder System

When the driver door is opened with the ignition SW off and ignition key remaining in the key cylinder (Unlock warning SW on), a signal is input from the unlock warning SW to TERMINAL 7 of the combination meter, and from the door courtesy SW (Driver's side) to TERMINAL 8 of the combination meter. As a result, the buzzer in the combination meter goes on and warns the driver that the key is remaining in the key cylinder.

○ : Parts Location

Code	See Page	Code		See Page	Code		See Page
C6	36	J4	A	37	J7		37
D9	38	J5	B	37	U1	A	37
J1	37	J6		37		B	37

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1M	25	
1S		


□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)

▽ : Ground Points

Code	See Page	Ground Points Location
ED	40	Front Left Side of the Cylinder Head
IF	42	Cowl Brace LH

Light Reminder

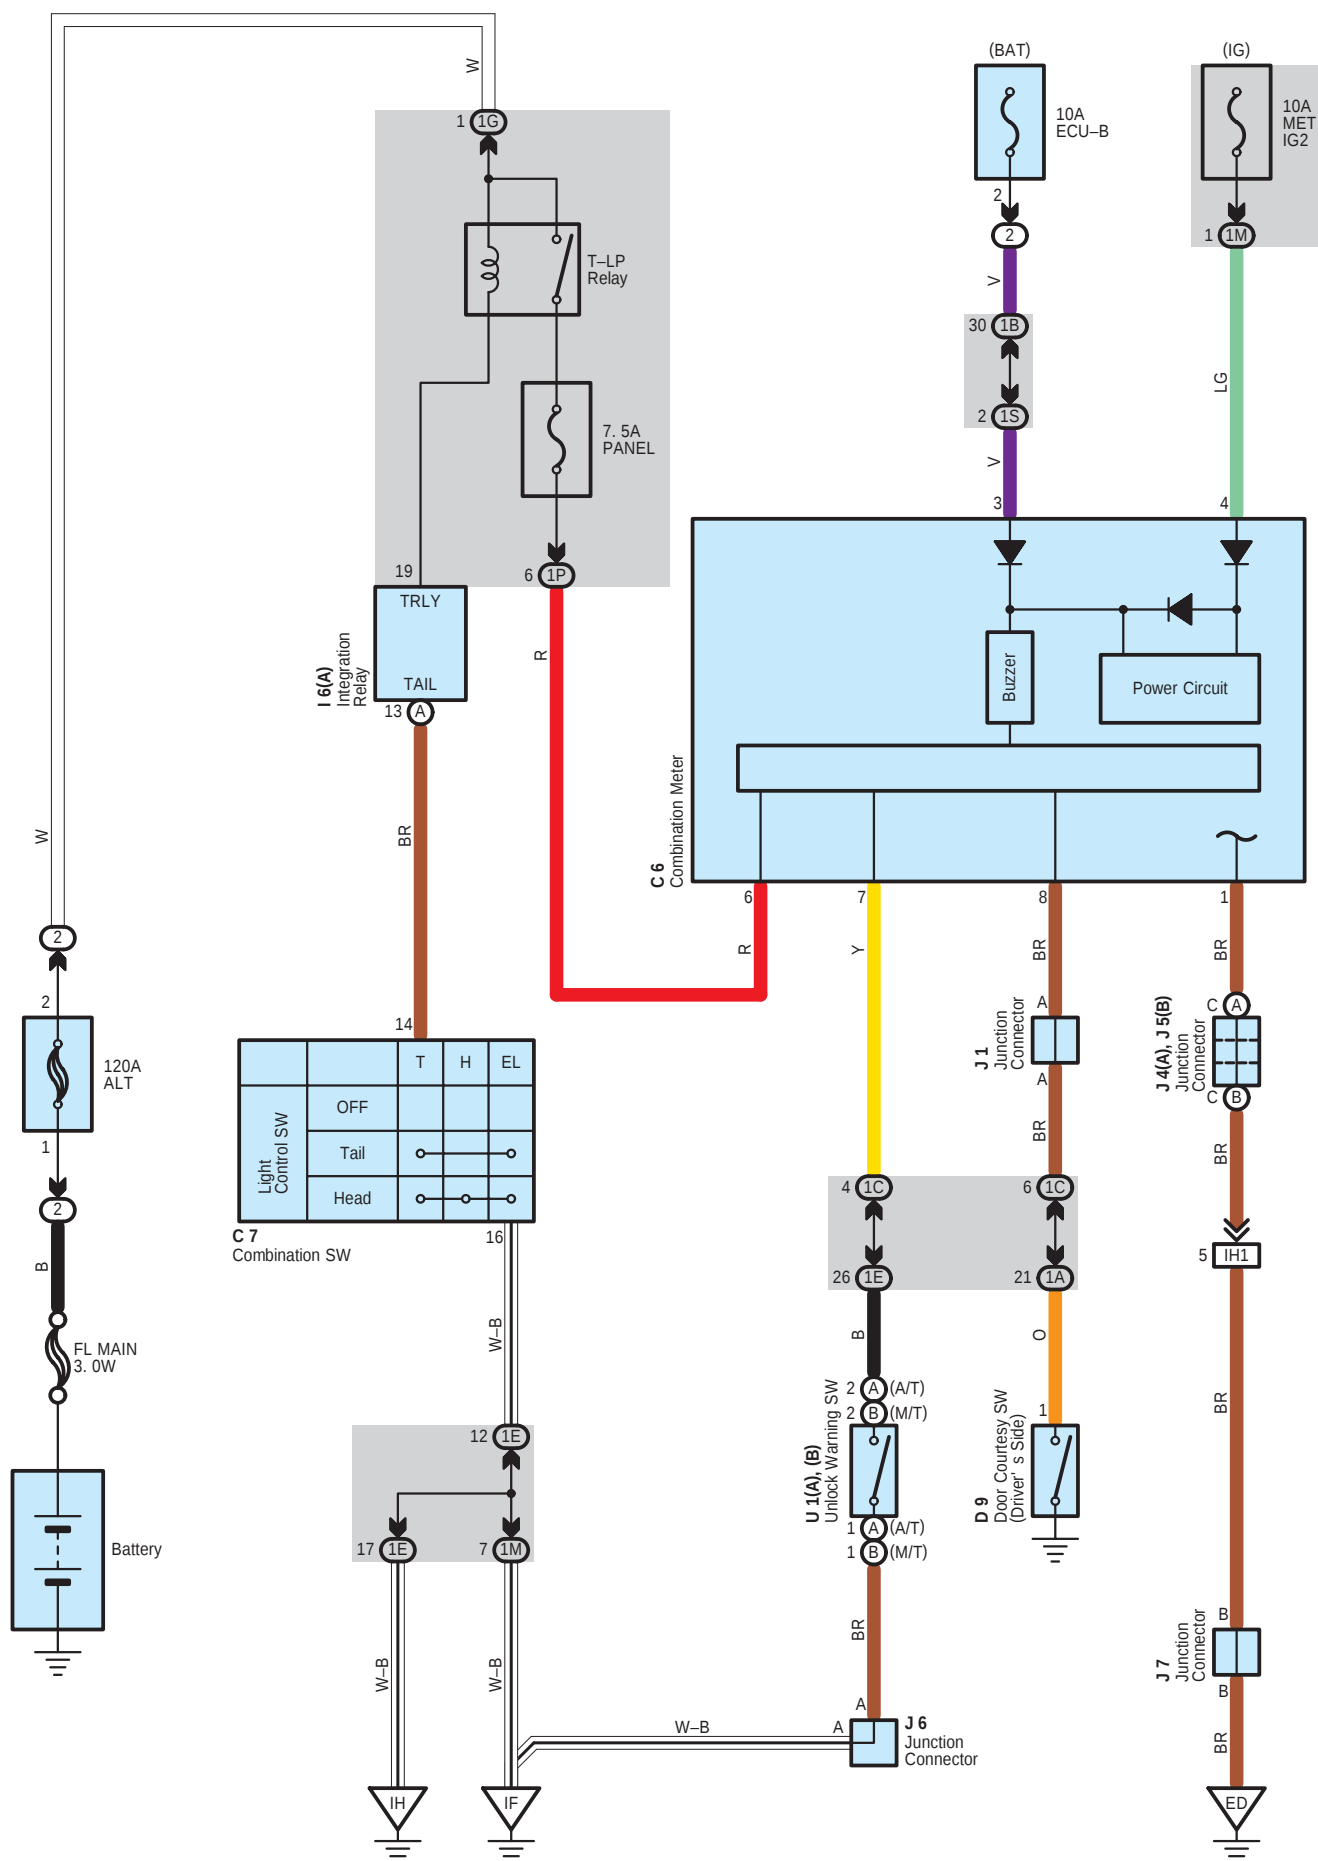

System Outline

The current is applied at all times to TERMINAL 3 of the combination meter through the ECU-B fuse.

When the ignition SW is turned to ON position, the current flows to TERMINAL 4 of the combination meter through the MET IG2 fuse. When the light control SW is turned to TAIL or HEAD position, current is applied to TERMINAL 6 of the combination meter through the PANEL fuse.

Light Reminder System

When the light control SW is in TAIL or HEAD position, the ignition SW turned to OFF from ON position, ignition key is not in the key cylinder and the driver's door opened (Door courtesy SW on), the current flows to TERMINAL 4 of the combination meter stops. As a result, the combination meter is activated and current flows from TERMINAL 3 of the combination meter, the buzzer in the combination meter goes on to remind the light is lighting up.

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C6	36	J1	37	J7	37
C7	36	J4	A	U1	A
D9	38	J5	B		B
I6	A	J6	37		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1G	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1P		
1S		

: Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)

: Ground Points

Code	See Page	Ground Points Location
ED	40	Front Left Side of the Cylinder Head
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH

Seat Belt Warning

* 1 : w/ Cruise Control
* 2 : w/o Cruise Control

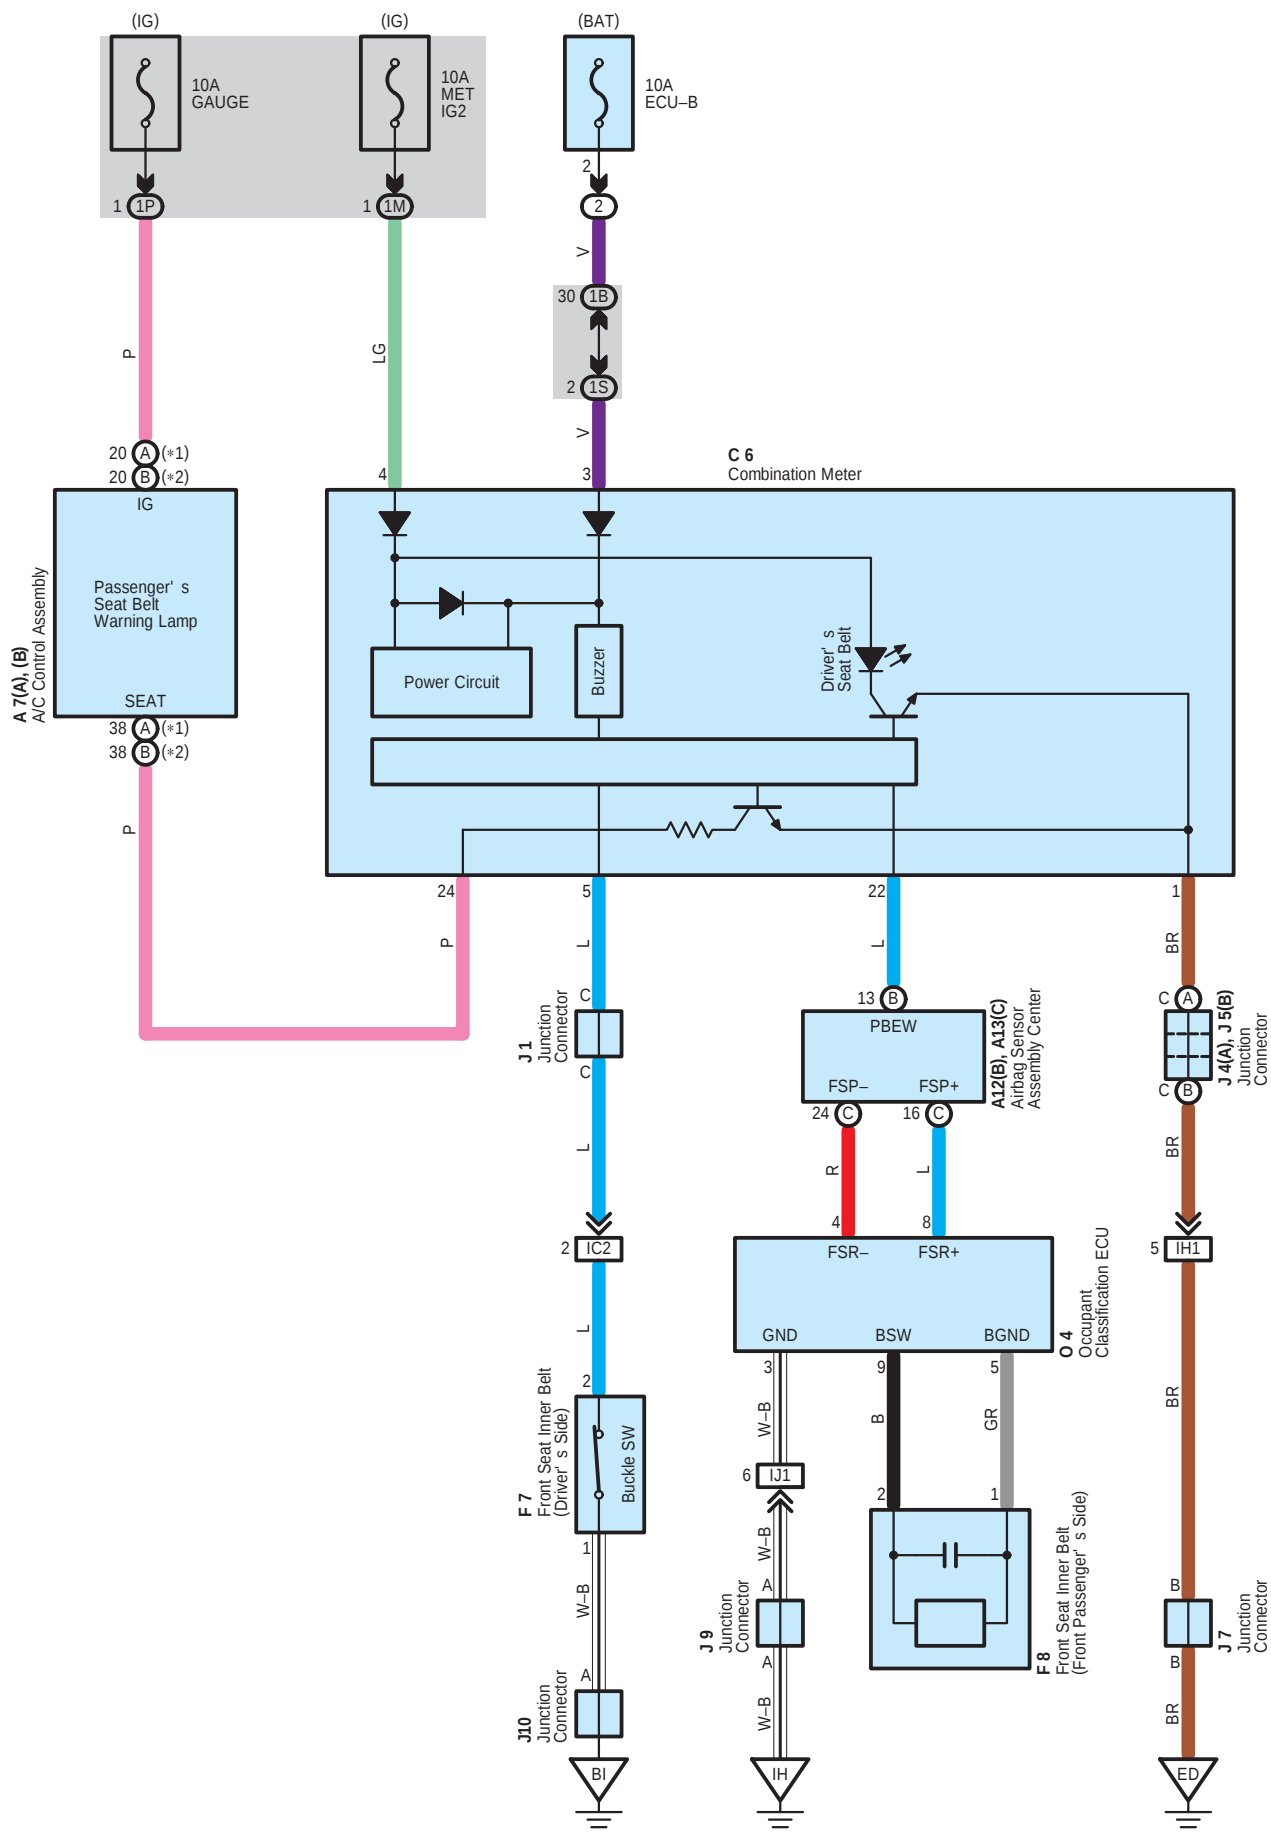

System Outline

Current is always applied from the ECU-B fuse to TERMINAL 3 of the combination meter. When the ignition SW is turned to ON position, the current from the MET IG2 fuse flows to TERMINAL 4 of the combination meter.

Seat Belt Warning System

When the ignition SW turned on, a signal is input to the combination meter. To determine whether the driver has fastened the seat belt, a signal is input from the front seat inner belt (Driver's side) to TERMINAL 5 of the combination meter. When the seat belt is not fastened, the seat belt warning light in the combination meter blinks, and emits a warning sound.

In addition, the front passenger is recognized by a sensor (Occupant detection sensor) is installed in the front passenger seat, and determines whether the seat belt is fastened. When not fastened, the signals from the front seat inner belt (Front passenger's side) is input to TERMINAL 22 of the combination meter, and the passenger's seat belt warning lamp blinks.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A7	A 36	F7	38	J7	37
	B 36	F8	38	J9	37
A12	B 36	J1	37	J10	38
A13	C 36	J4	A 37	O4	39
C6	36	J5	B 37		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1M		
1P	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1S		

□ : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
ED	40	Front Left Side of the Cylinder Head
IH	42	Cowl Brace RH
BI	44	Quarter Panel LH

Rear Window Defogger

* 1 : w/ Cruise Control
* 2 : w/o Cruise Control

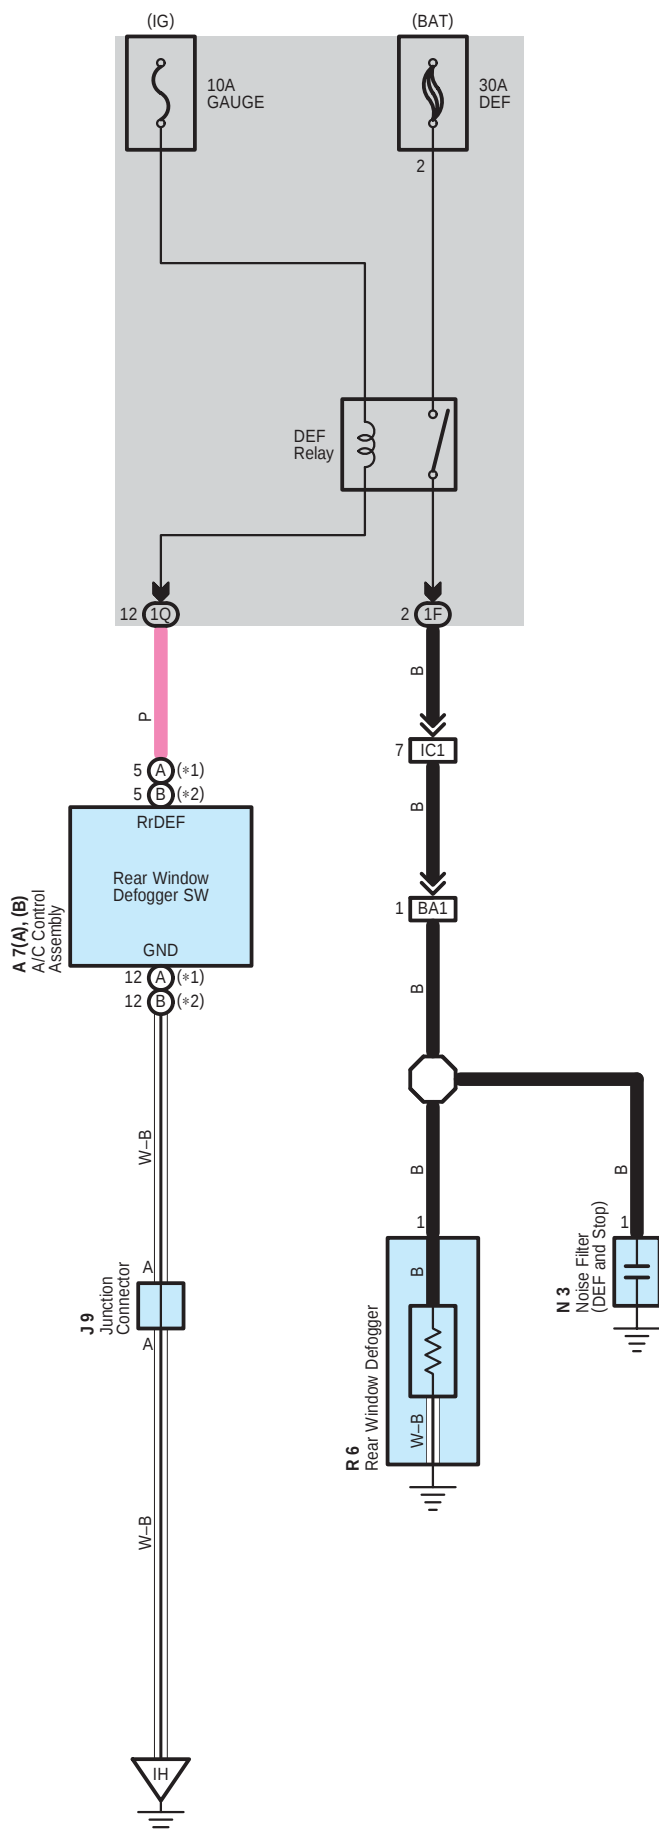

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A7	A	36	J9	37		R6	39	
	B	36	N3	38				

 : Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1Q	25	


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
BA1	44	Back Door No.1 Wire and Floor Wire (Back Window Upper Frame LH)

 : Ground Points

Code	See Page	Ground Points Location
IH	42	Cowl Brace RH

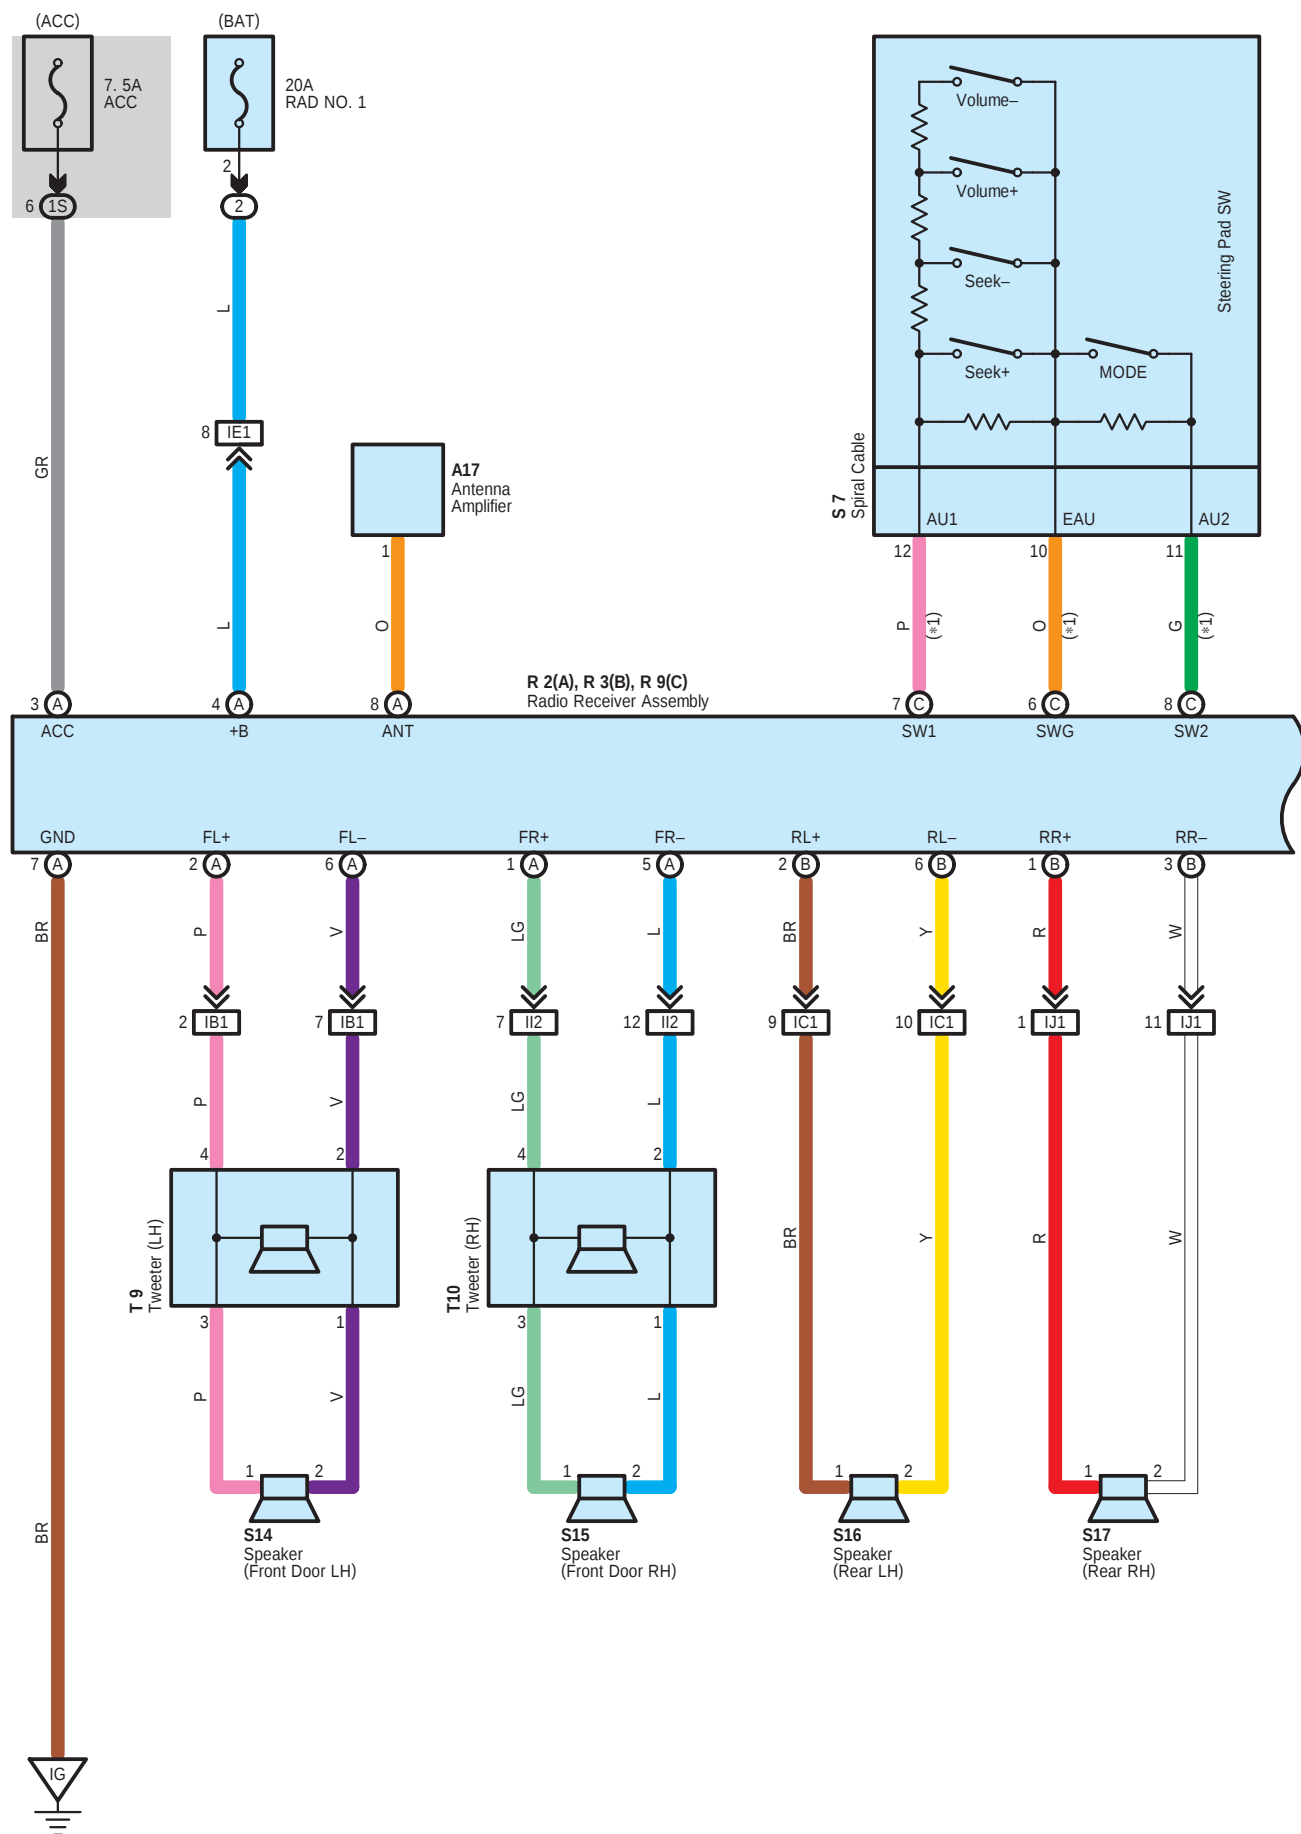

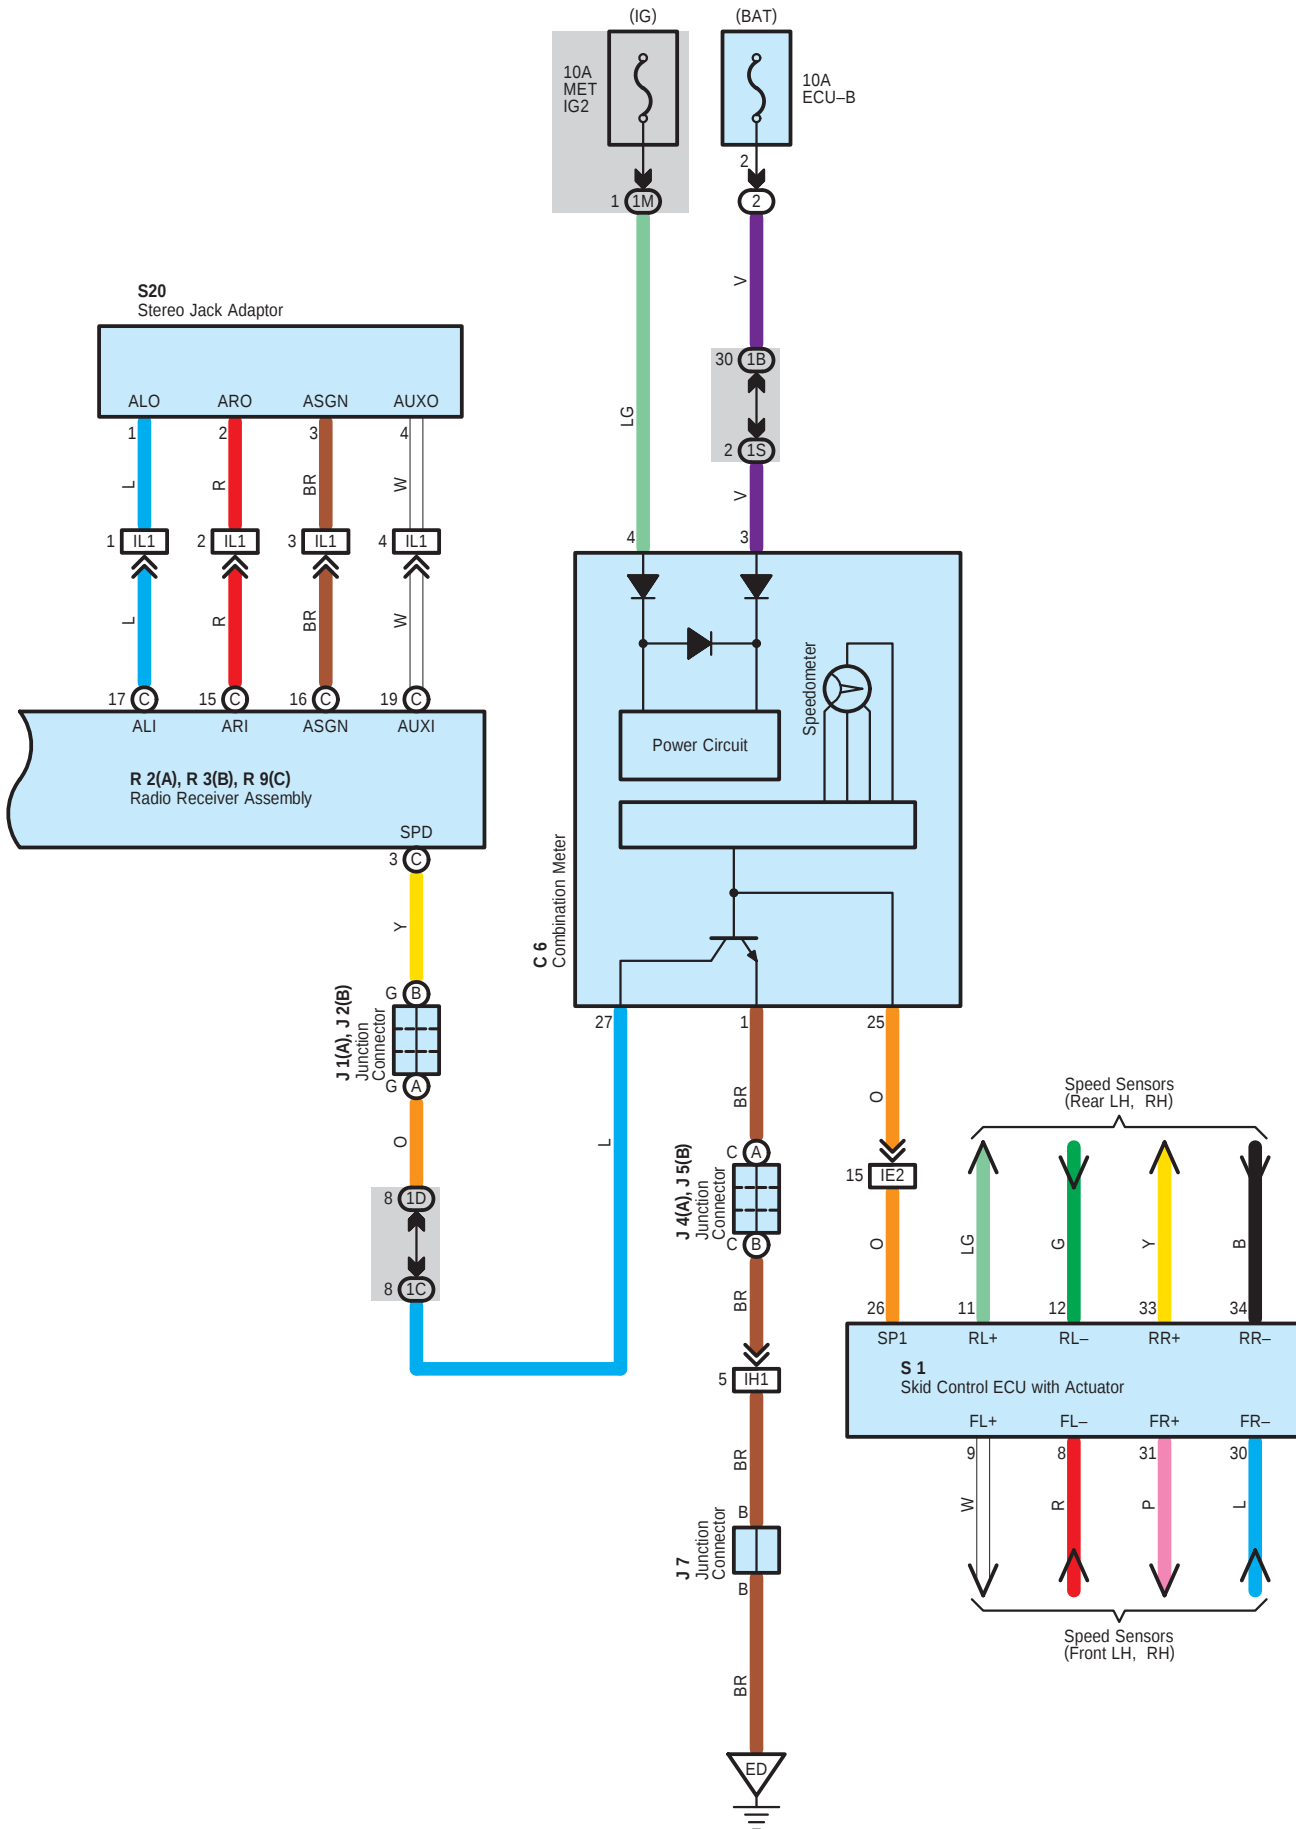

Audio System

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
A17		36		R2	A	37		S16		39	
C6		36		R3	B	37		S17		39	
J1	A	37		R9	C	37		S20		37	
J2	B	37		S1		35		T9		39	
J4	A	37		S7		37		T10		39	
J5	B	37		S14		39					
J7		37		S15		39					

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1M	25	
1S		


: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC1	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
IE1	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IE2		
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
II2	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
IL1	43	Console Box Wire and Instrument Panel Wire (Under the Console Box)

: Ground Points


Code	See Page	Ground Points Location
ED	40	Front Left Side of the Cylinder Head
IG	42	Instrument Panel Brace LH

Combination Meter

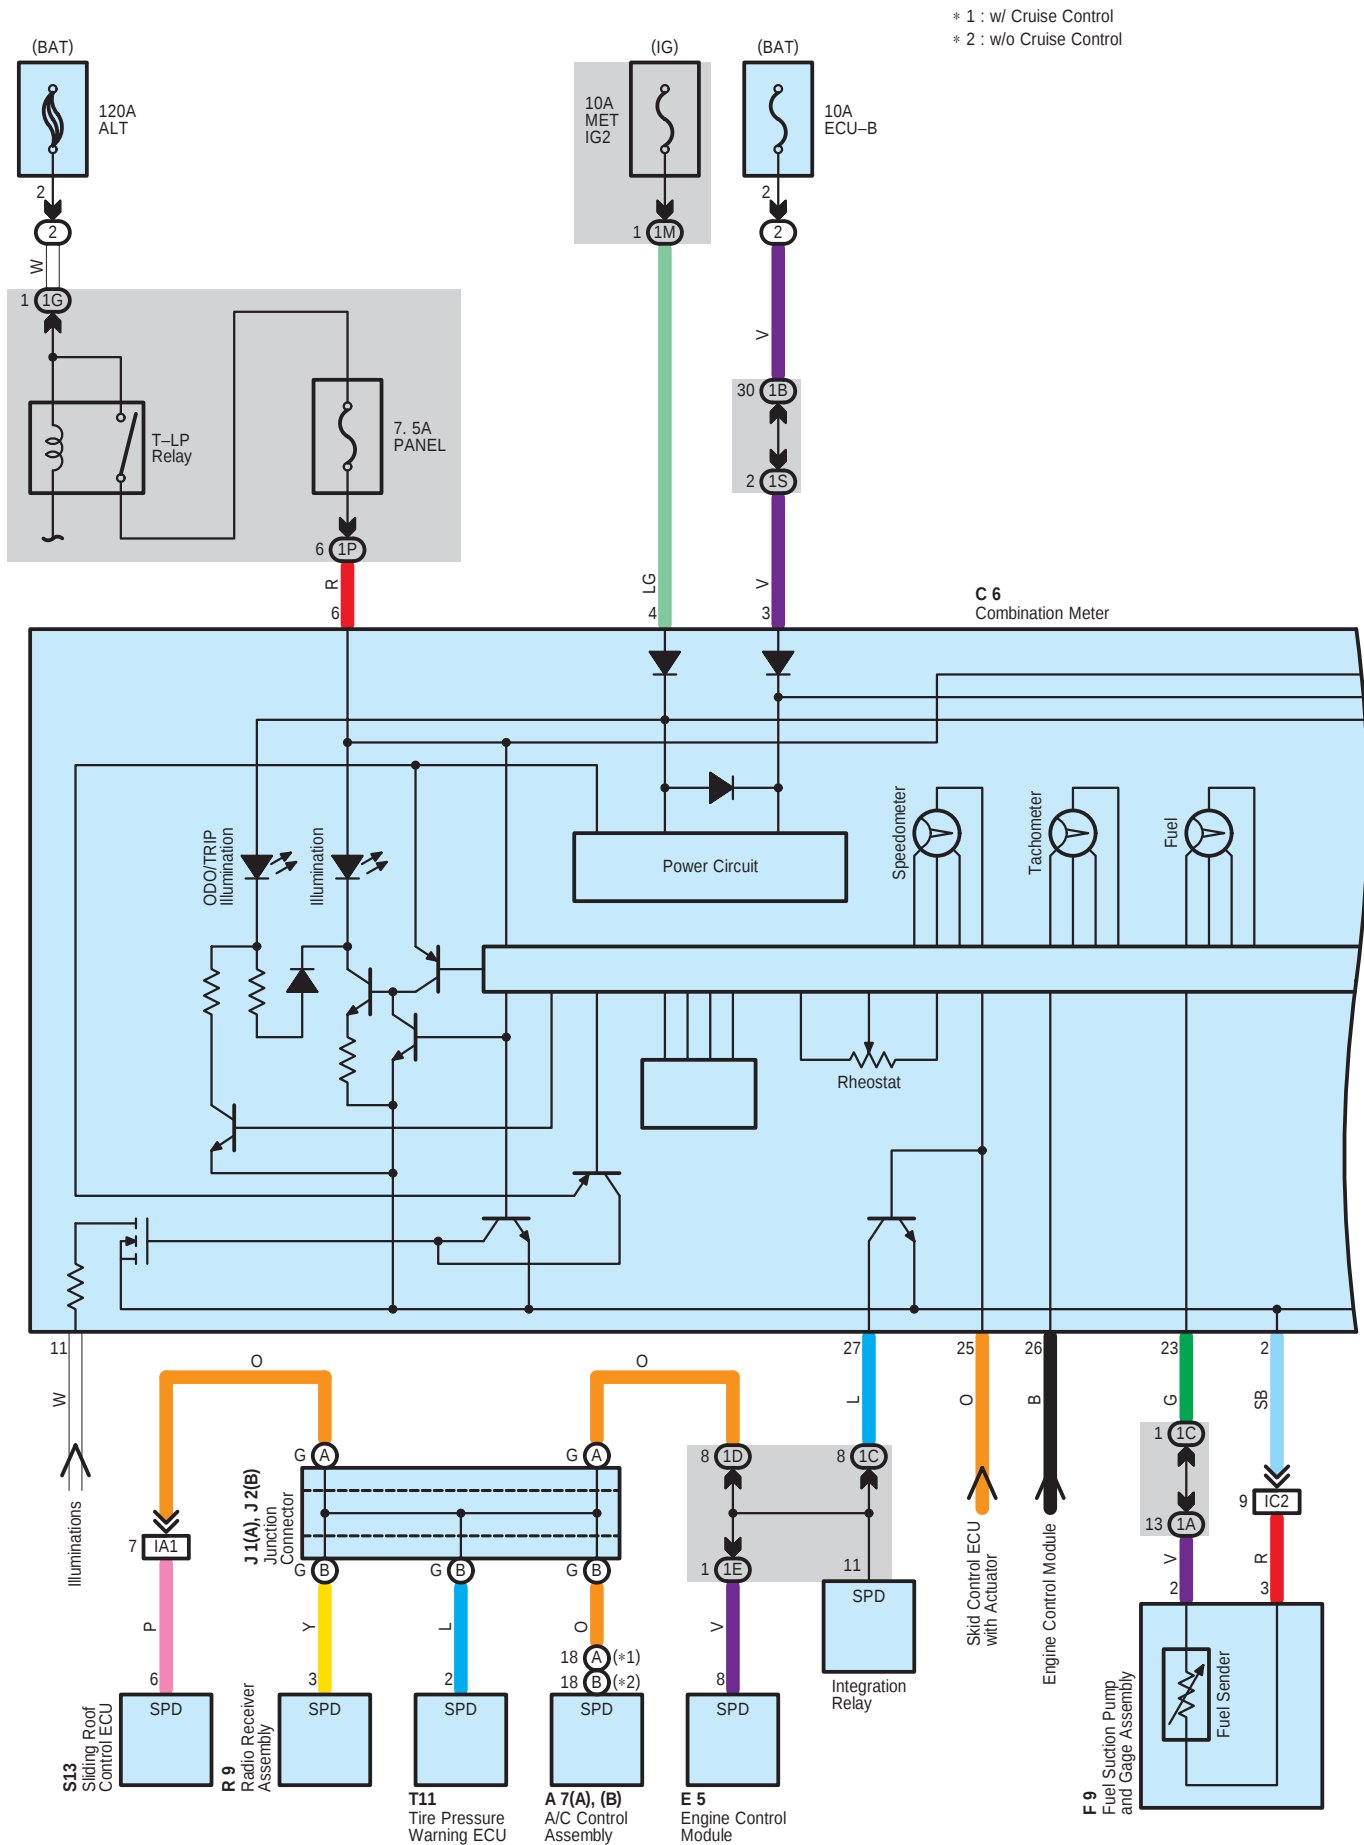


cardiagn.com


C 6
Combination Meter

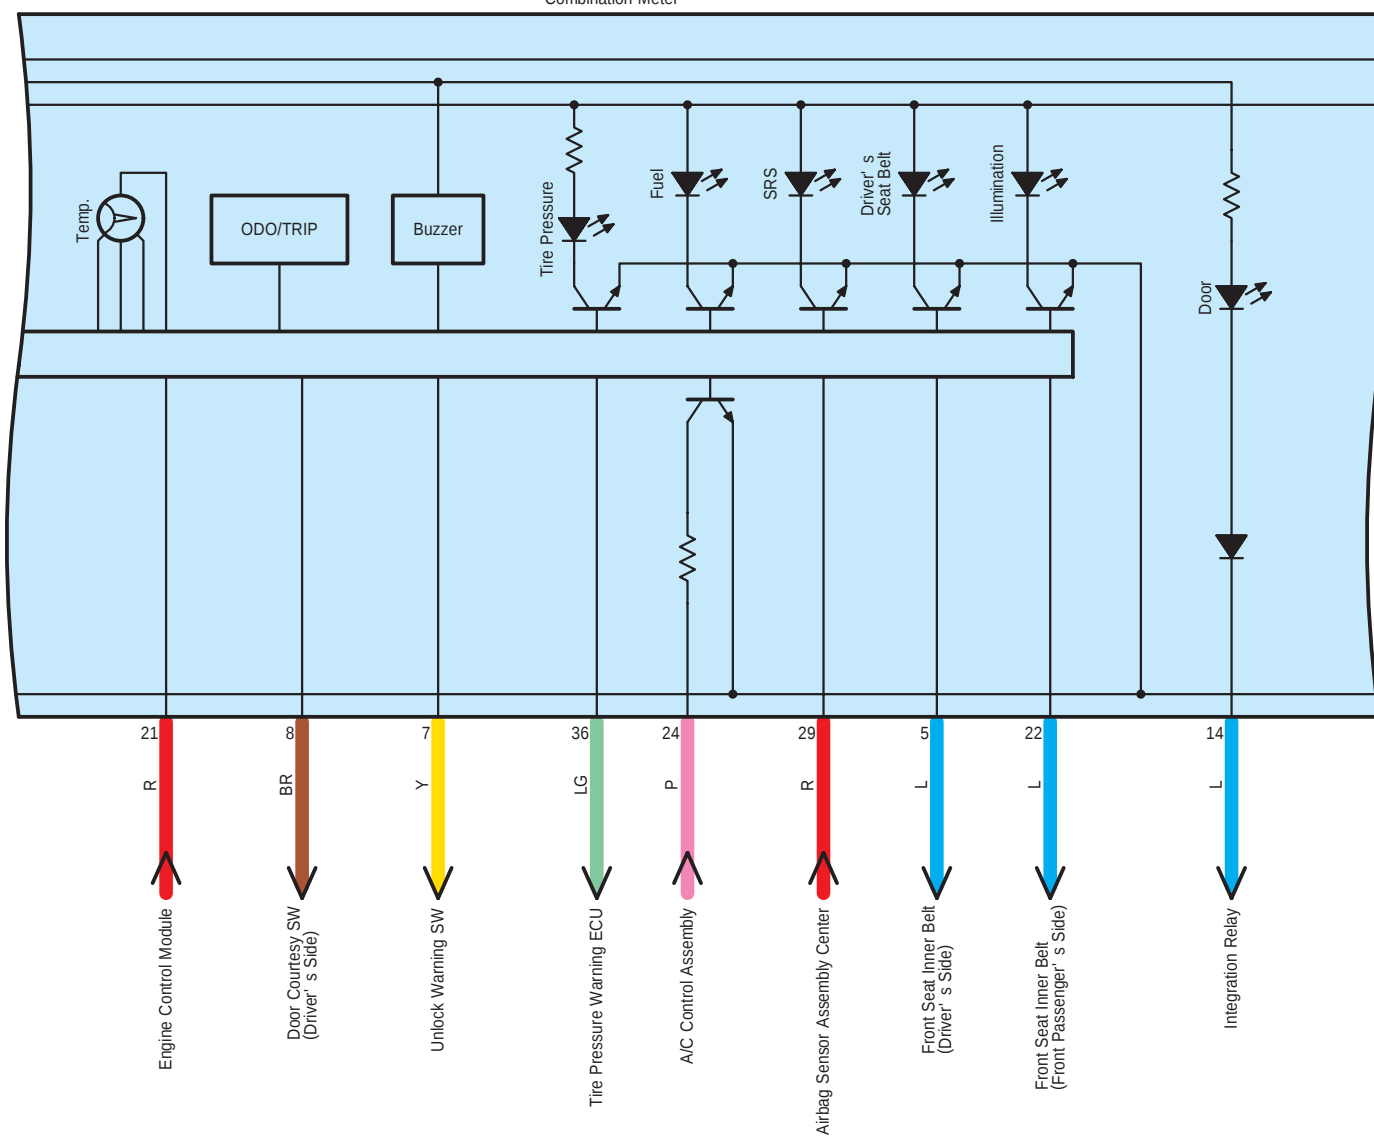


Combination Meter

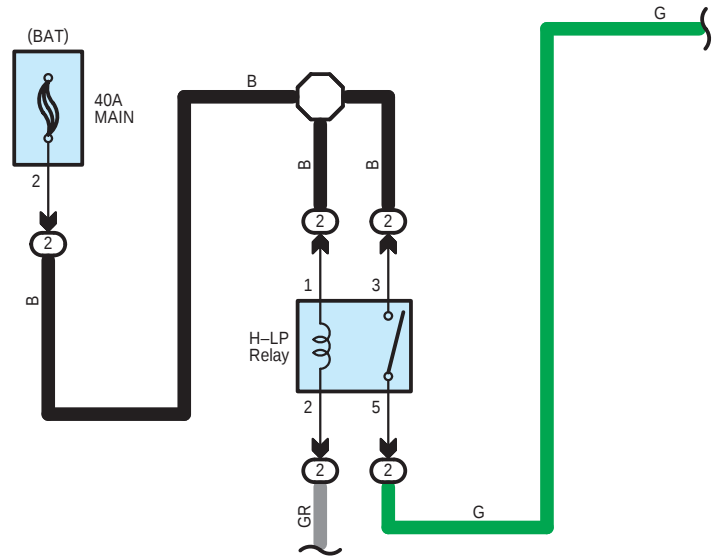

C 6
Combination Meter

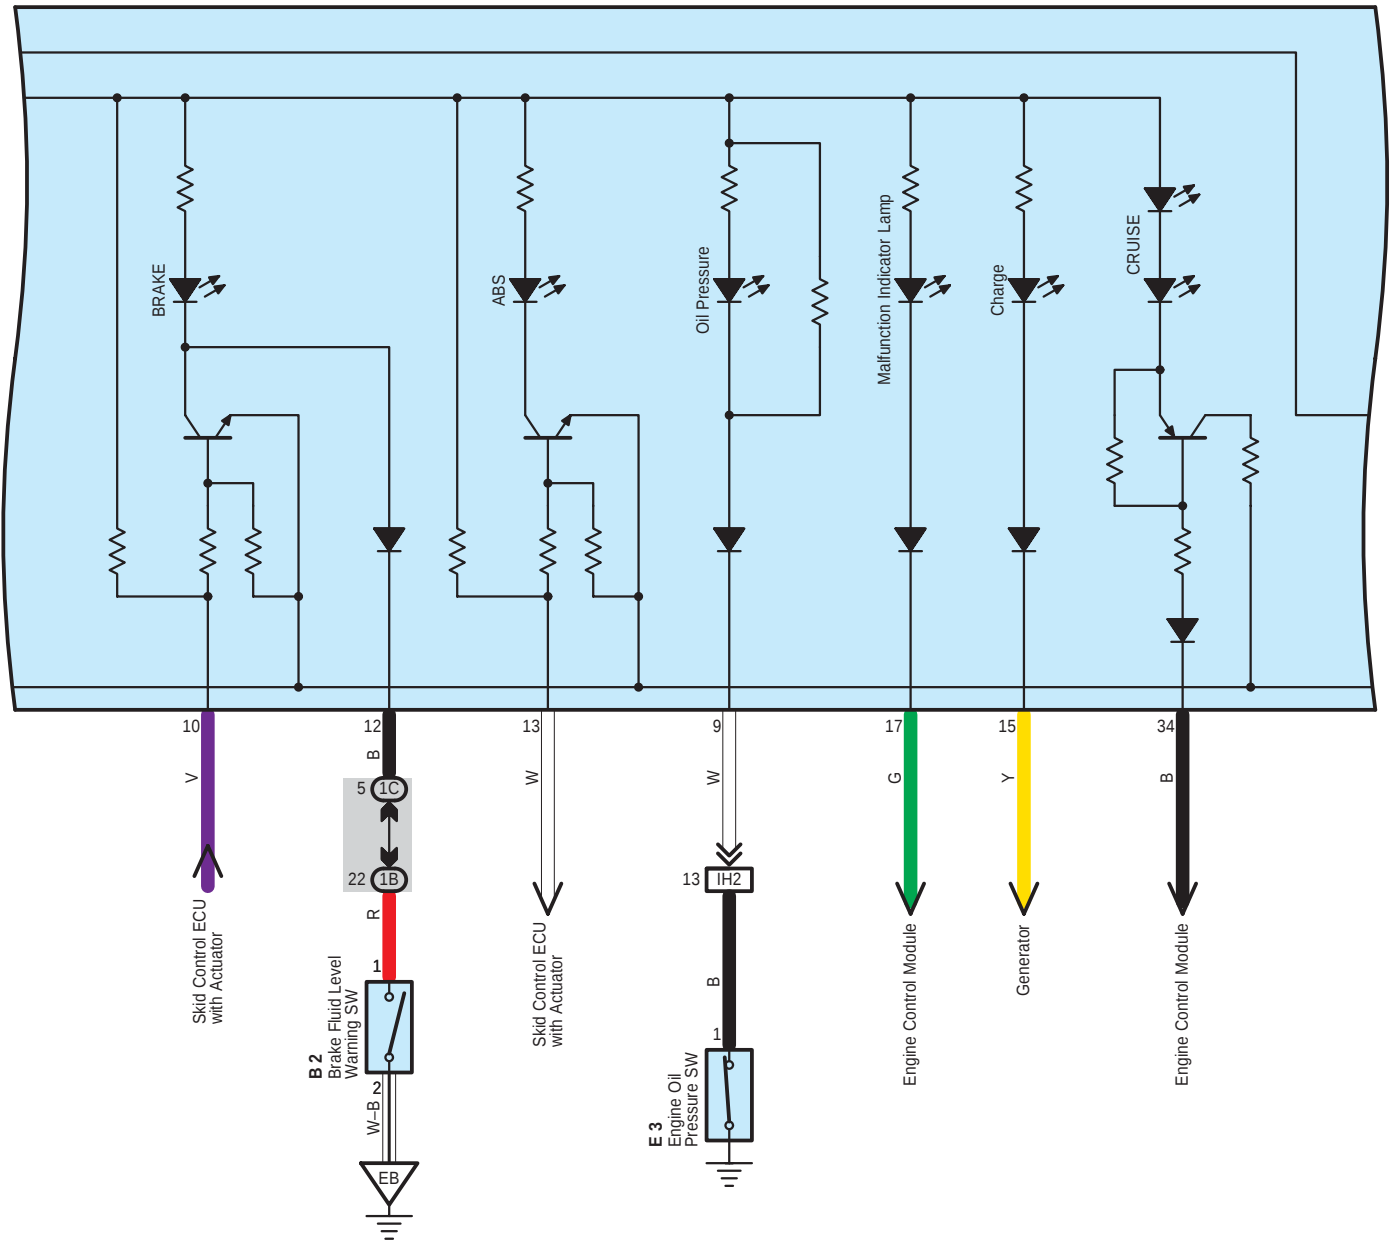

cardiagn.com

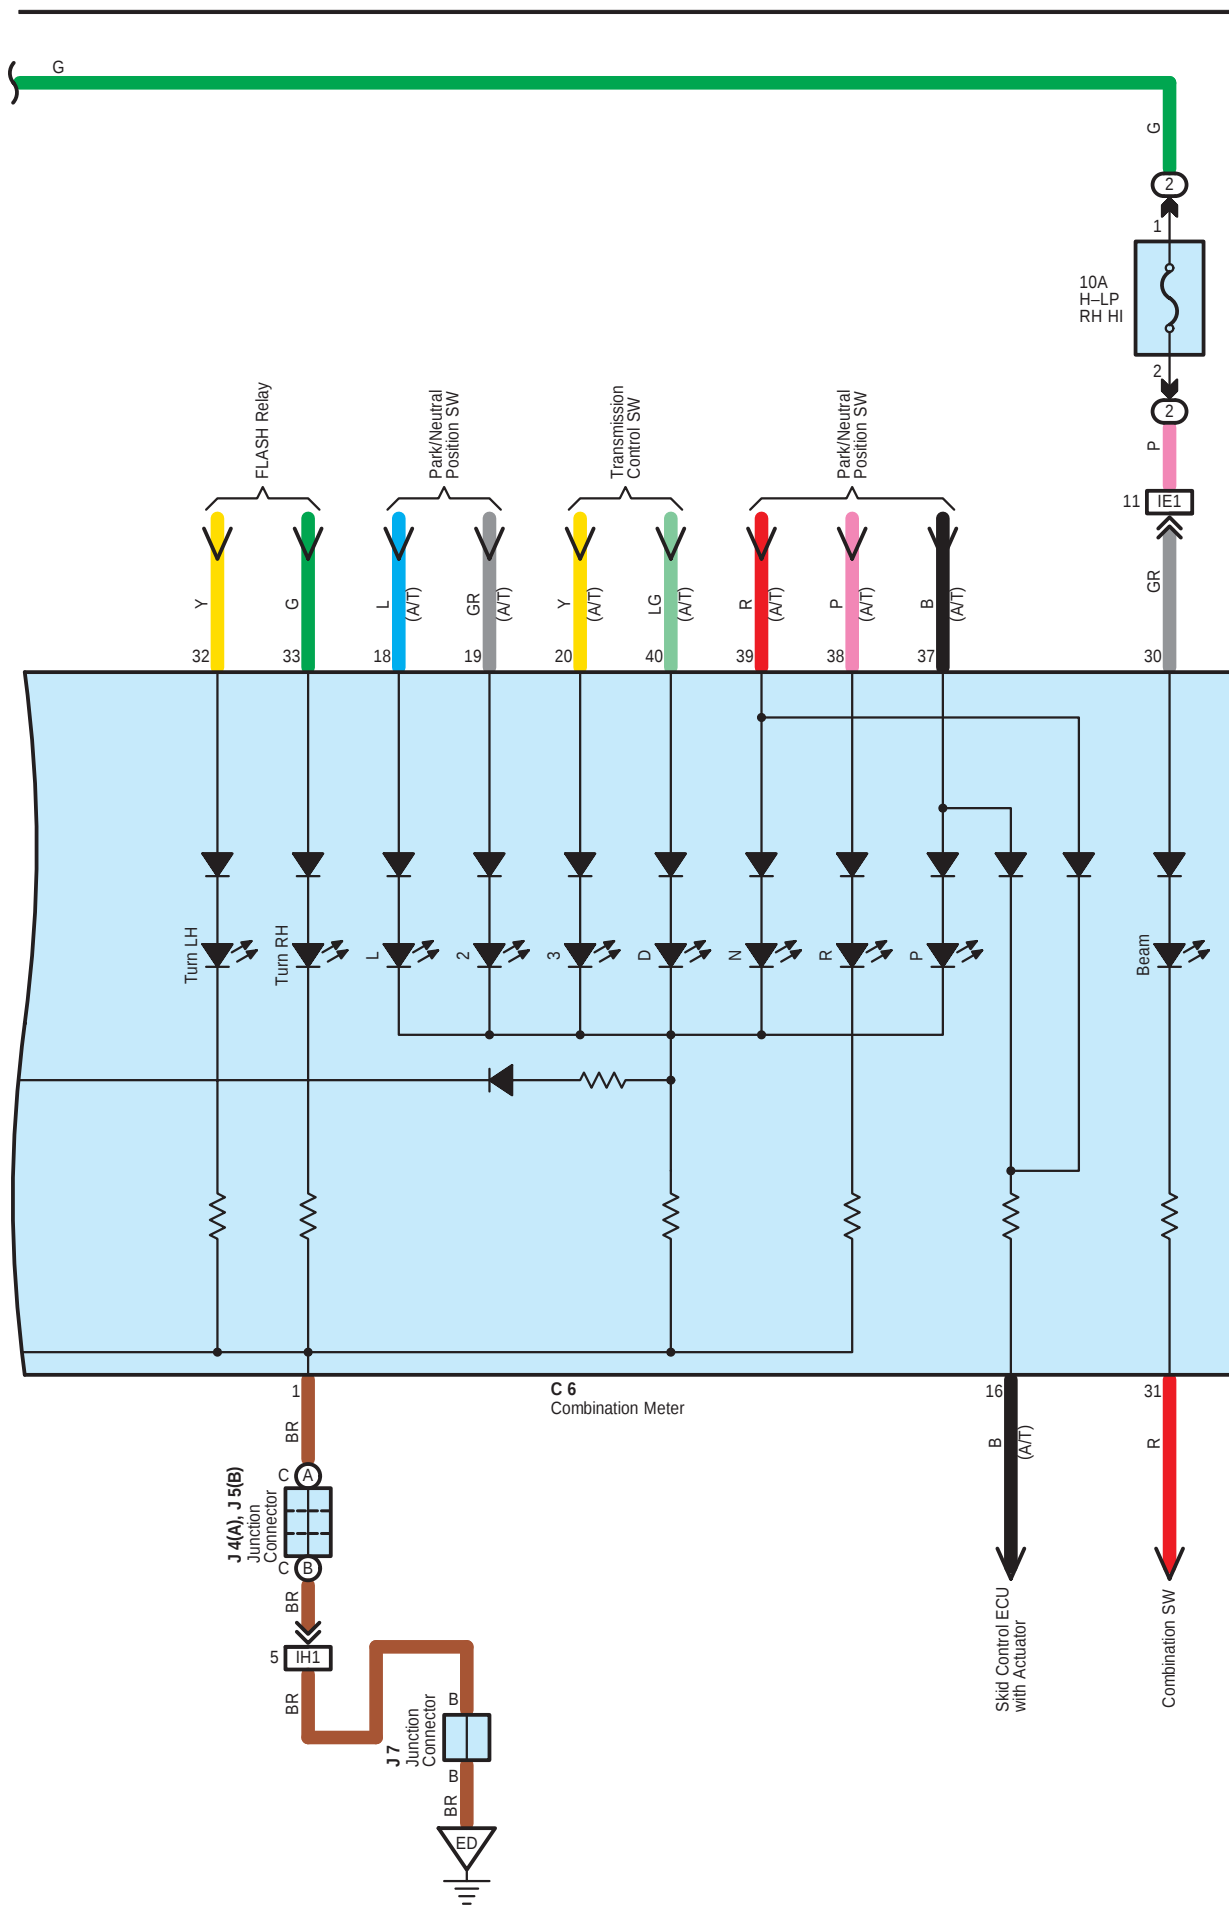

Combination Meter

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A7	A 36	E5	36	J5	B 37
	B 36	F9	38	J7	37
B2	34	J1	A 37	R9	37
C6	36	J2	B 37	S13	39
E3	34	J4	A 37	T11	37

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1E		
1G	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1P		
1S		

: Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	42	Roof Wire and Instrument Panel Wire (Cowl Top Side Panel LH)
IC2	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
IE1	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IH2		

: Ground Points

Code	See Page	Ground Points Location
EB	40	Front Right Fender
ED	40	Front Left Side of the Cylinder Head

Radiator Fan and Condenser Fan

* 1 : w/ Cruise Control
 * 2 : w/o Cruise Control

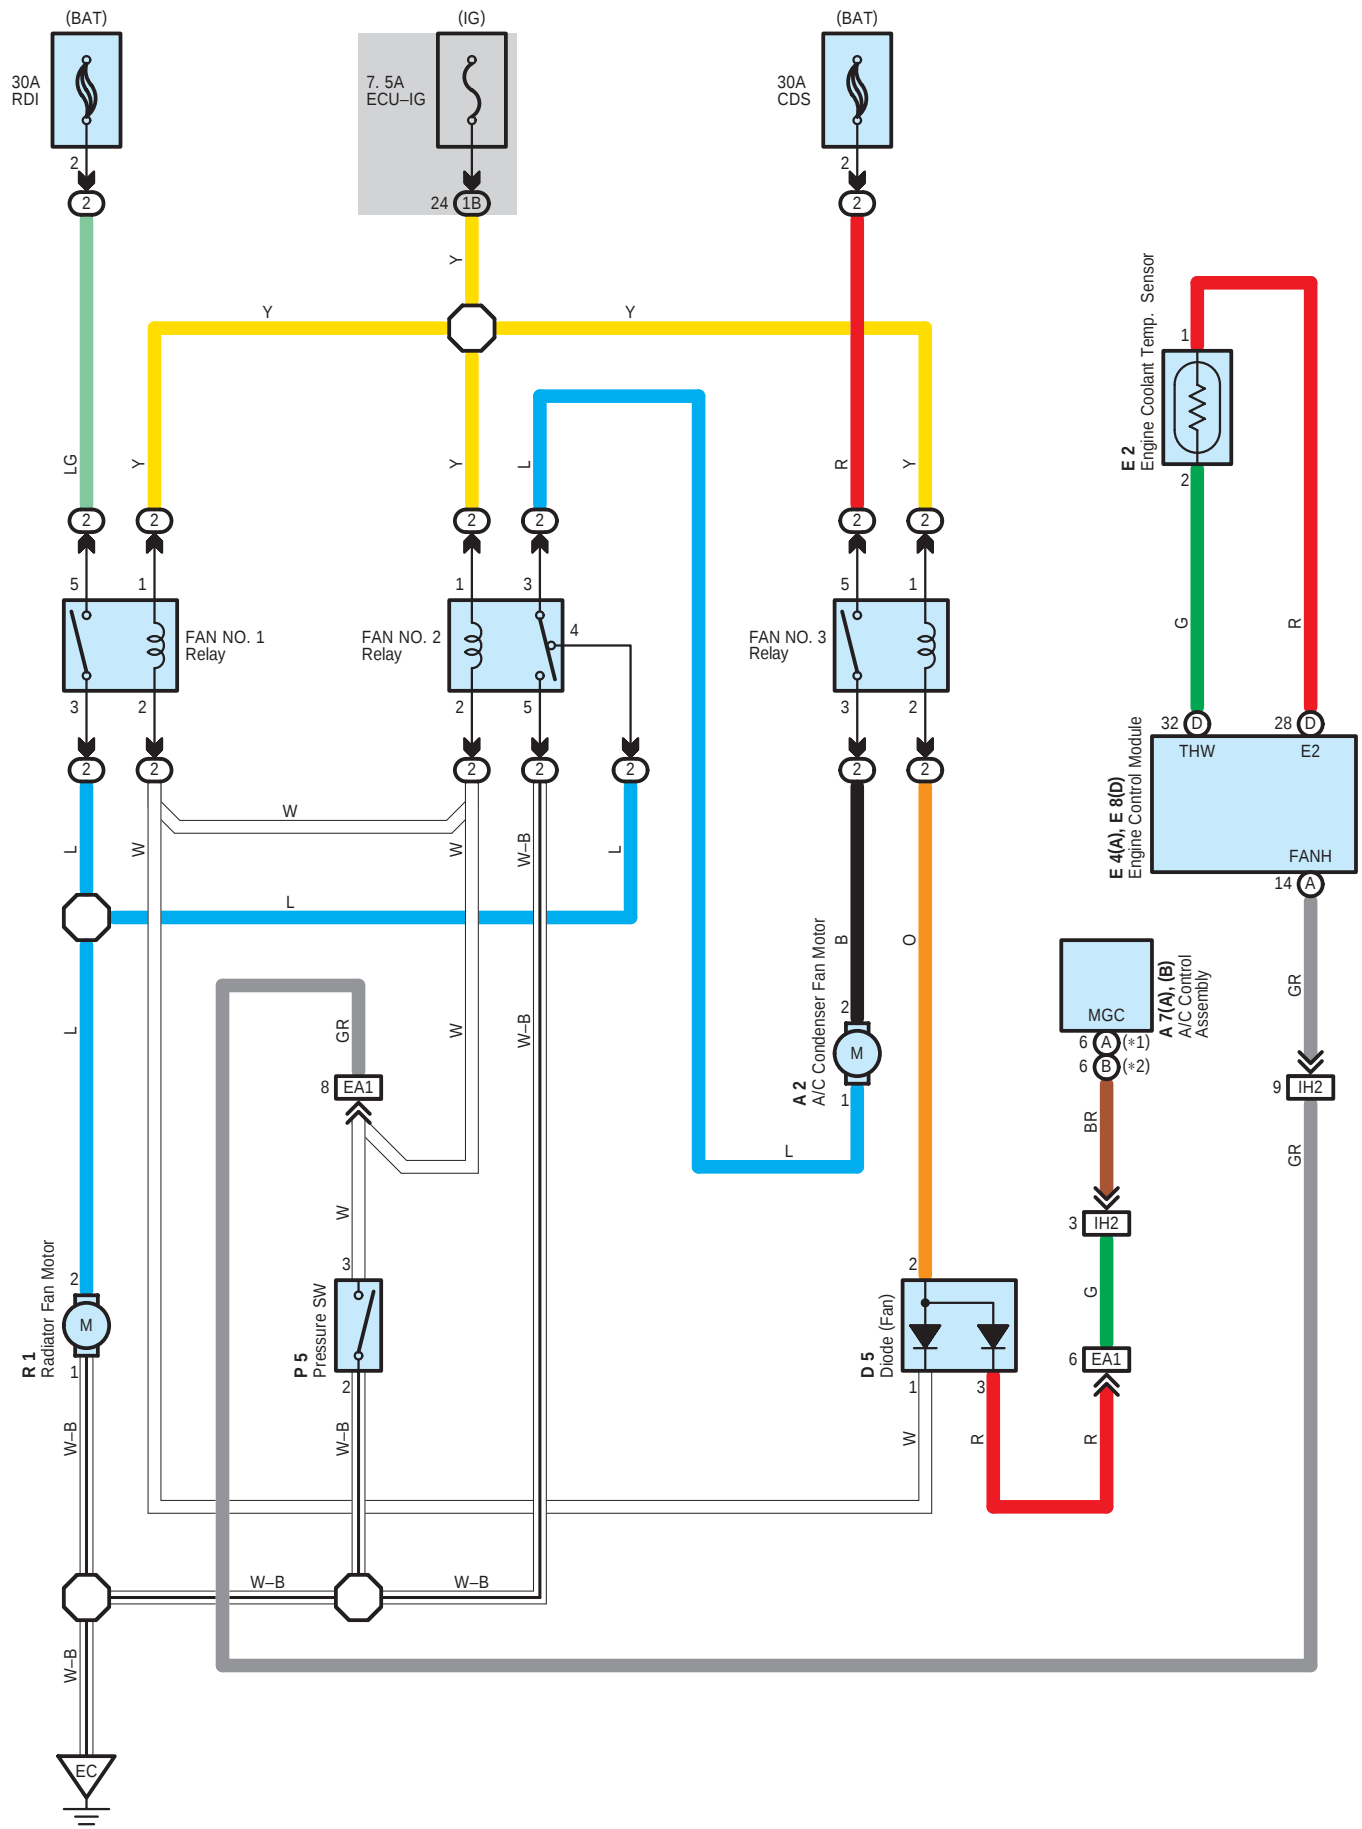

cardiagn.com

System Outline

Fan Motor Operation

With the ignition SW turned on, the current through the ECU-IG fuse flows to the FAN NO.1 relay (Coil side), FAN NO.2 relay (Coil side) and FAN NO.3 relay (Coil side).

1. Low Speed Operation

Only when the A/C system is activated, the A/C condenser fan motor and the radiator fan motor rotates at low speed.

When the A/C system is activated, the current from ECU-IG fuse flows to the FAN NO.3 relay (Coil side) to TERMINAL 2 of the diode (Fan) to TERMINAL 3 to TERMINAL (B) 2 of the engine control module causing the FAN NO.3 relay to turn on. As a result, the current through the CDS fuse flows to TERMINAL 5 of the FAN NO.3 relay to TERMINAL 3 to TERMINAL 2 of the A/C condenser fan motor to TERMINAL 1 to TERMINAL 3 of the FAN NO.2 relay to TERMINAL 4 to TERMINAL 2 of the radiator fan motor to TERMINAL 1 to GROUND. As this flowing in series for the motors, the motors rotate at low speed.

2. High Speed Operation

With the pressure SW is turned on and/or the engine control module activated, the A/C condenser fan motor and the radiator fan motor rotate at high speed.

When the pressure SW is turned on, the current through the ECU-IG fuse flows to the FAN NO.1 and NO.2 relay (Coil side) to TERMINAL 3 of the pressure SW to TERMINAL 2 to GROUND, and the current through the ECU-IG fuse flows to the FAN NO.3 relay (Coil side) to TERMINAL 2 of the diode (Fan) to TERMINAL 1 to TERMINAL 3 of the pressure SW to TERMINAL 2 to GROUND. As a result, FAN NO.1, NO.2. and NO.3 relay is turned on. At the same time, the current from the RDI fuse flows to FAN NO.1 relay (Point side) to TERMINAL 2 of the radiator fan motor to TERMINAL 1 to GROUND, and the current from the CDS fuse flows to FAN NO.3 relay (Point side) to TERMINAL 2 of the A/C condenser fan motor to TERMINAL 1 to TERMINAL 3 of the FAN NO.2 relay to TERMINAL 5 to GROUND.

As the current flowing in parallel for motors as above, the motors rotate at high speed.

When the engine control module activated, the current through the ECU-IG fuse flows to the FAN NO.1 and NO.2 relay (Coil side) to TERMINAL (E) 14 of the engine control module, and the current through the ECU-IG fuse flows to the FAN NO.3 relay (Coil side) to TERMINAL 2 of the diode (Fan) to TERMINAL 1 to TERMINAL (E) 14 of the engine control module. As a result, FAN NO.1, NO.2 and NO.3 relay is turned on. At the same time, the current from the RDI fuse flows to FAN NO.1 relay (Point side) to TERMINAL 2 of the radiator fan motor to TERMINAL 1 to GROUND, and the current from the CDS fuse flows to FAN NO.3 relay (Point side) to TERMINAL 2 of the A/C condenser fan motor to TERMINAL 1 to TERMINAL 3 of the FAN NO.2 relay to TERMINAL 5 to GROUND.

As the current flowing in parallel for motors as above, the motors rotate at high speed.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A2	34	D5	36	E8	D
A7	A	E2	34	P5	35
	B	E4	A	R1	35

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B Box)
IH2	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)


▽ : Ground Points


Code	See Page	Ground Points Location
EC	40	Front Left Fender

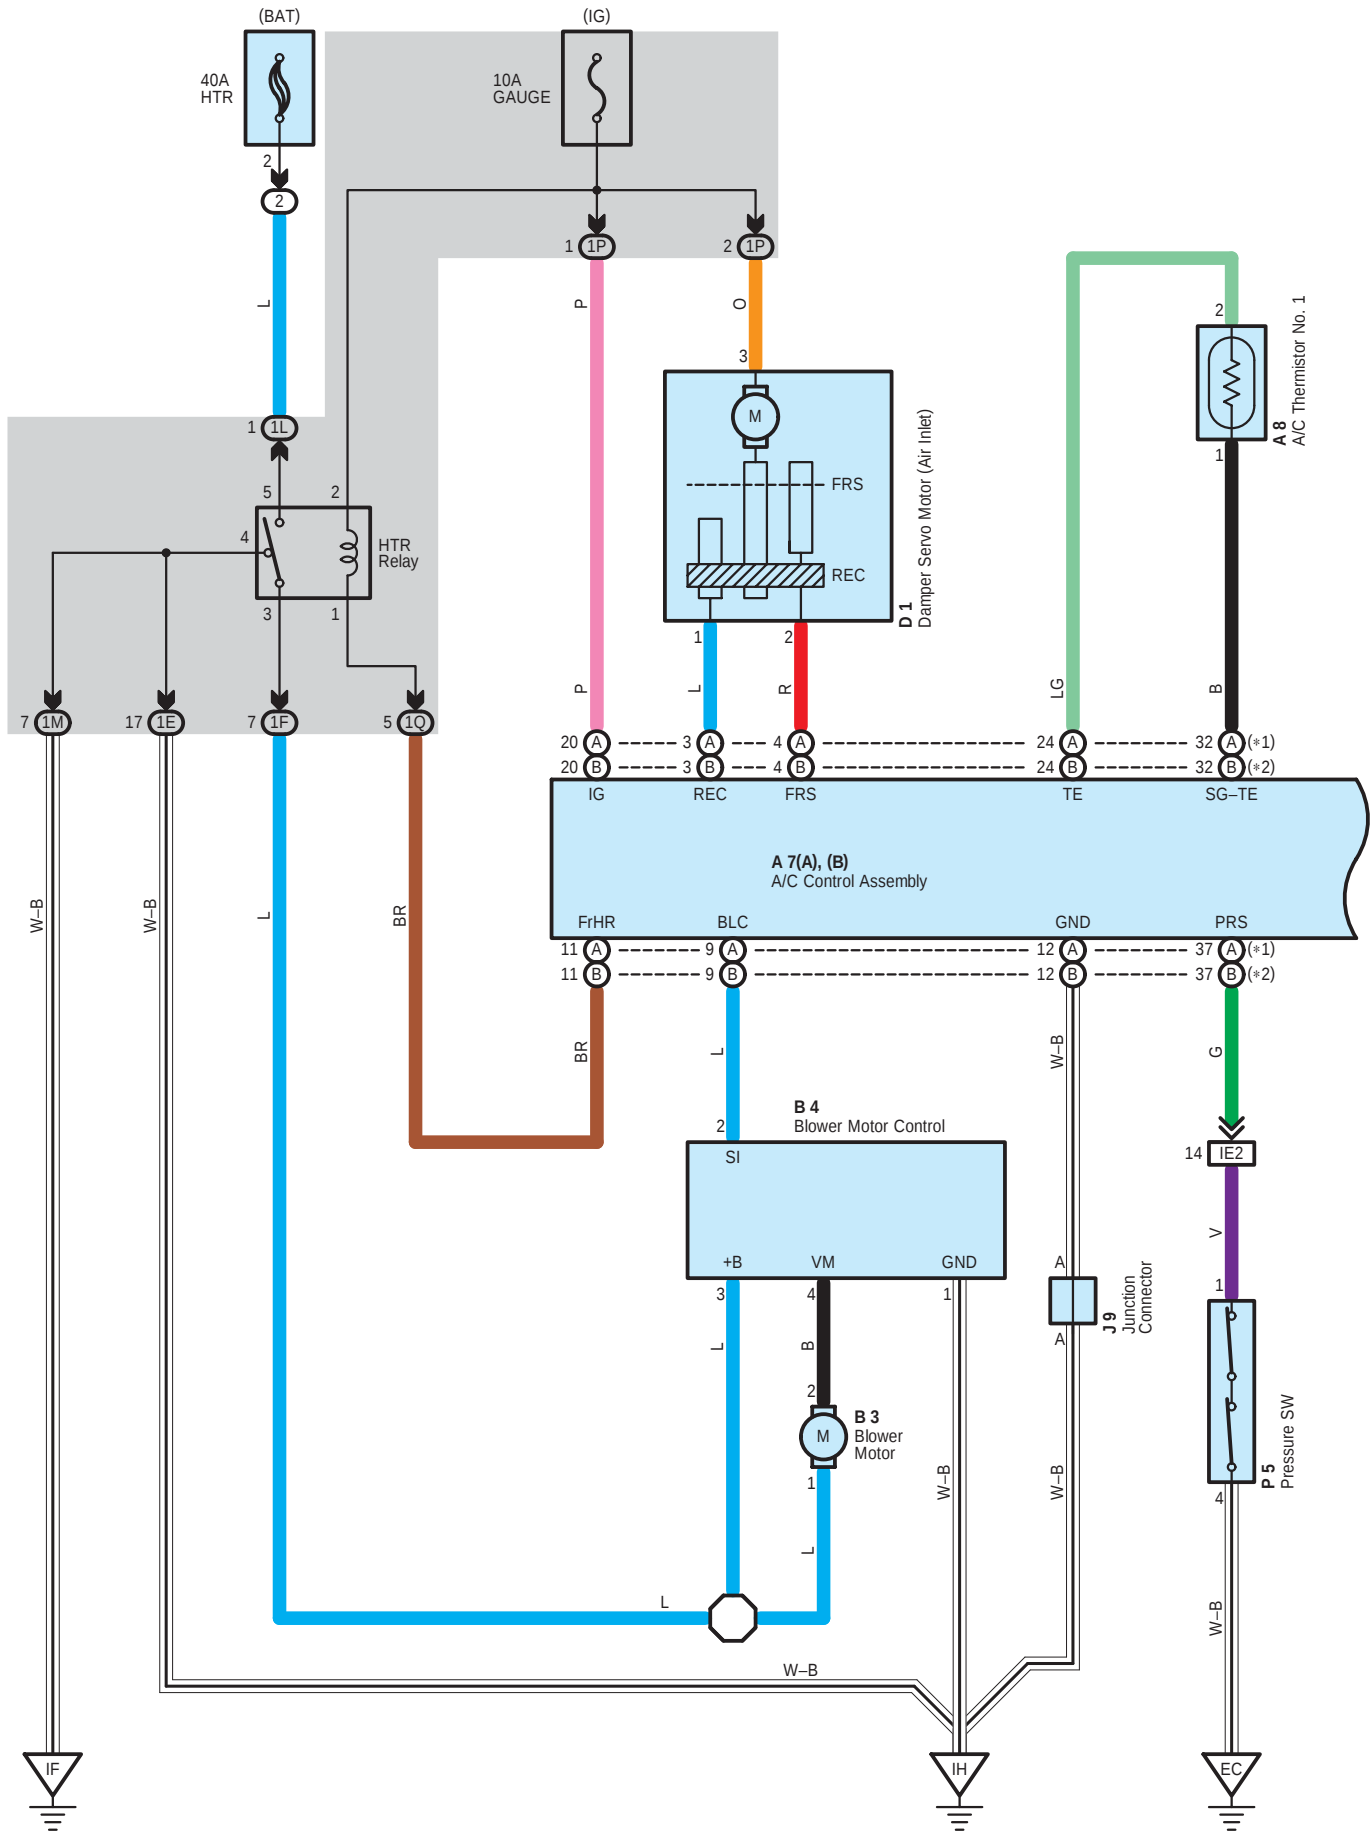

* 1 : w/ Cruise Control
 * 2 : w/o Cruise Control

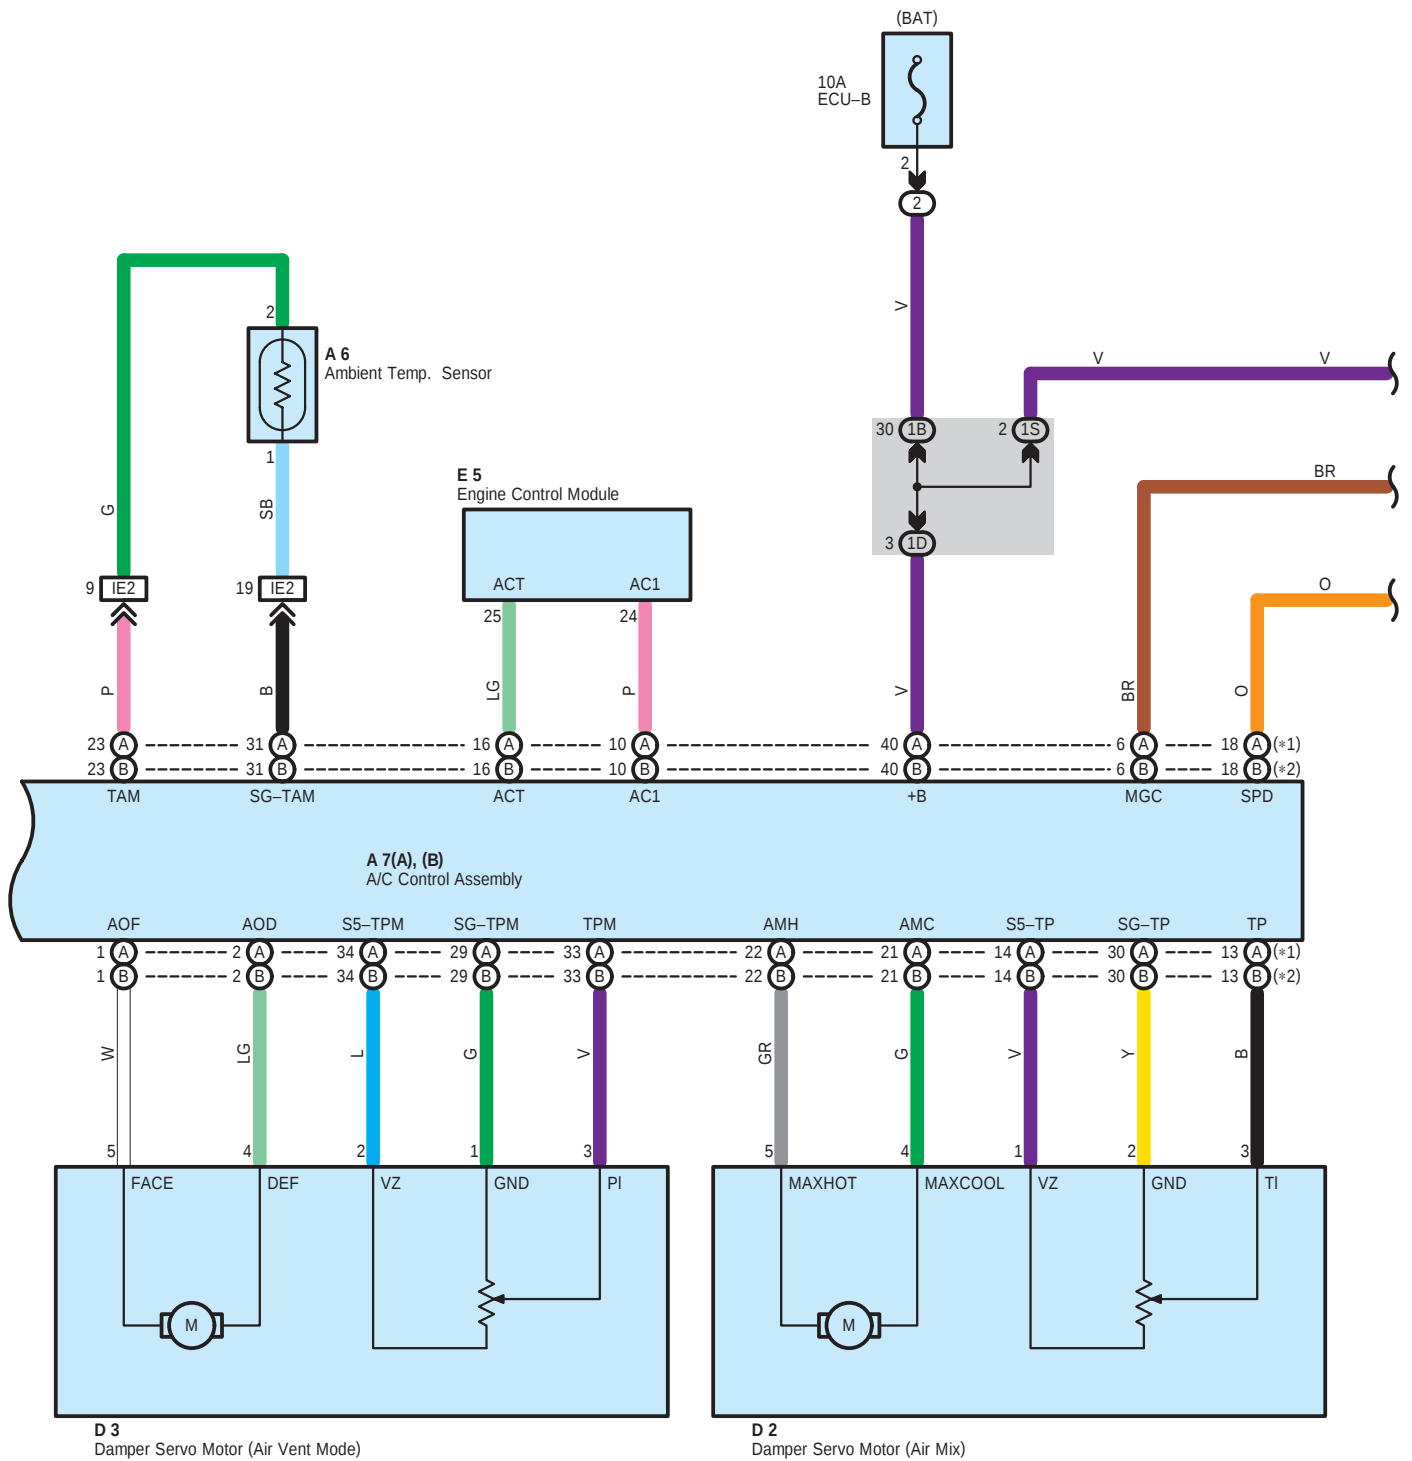

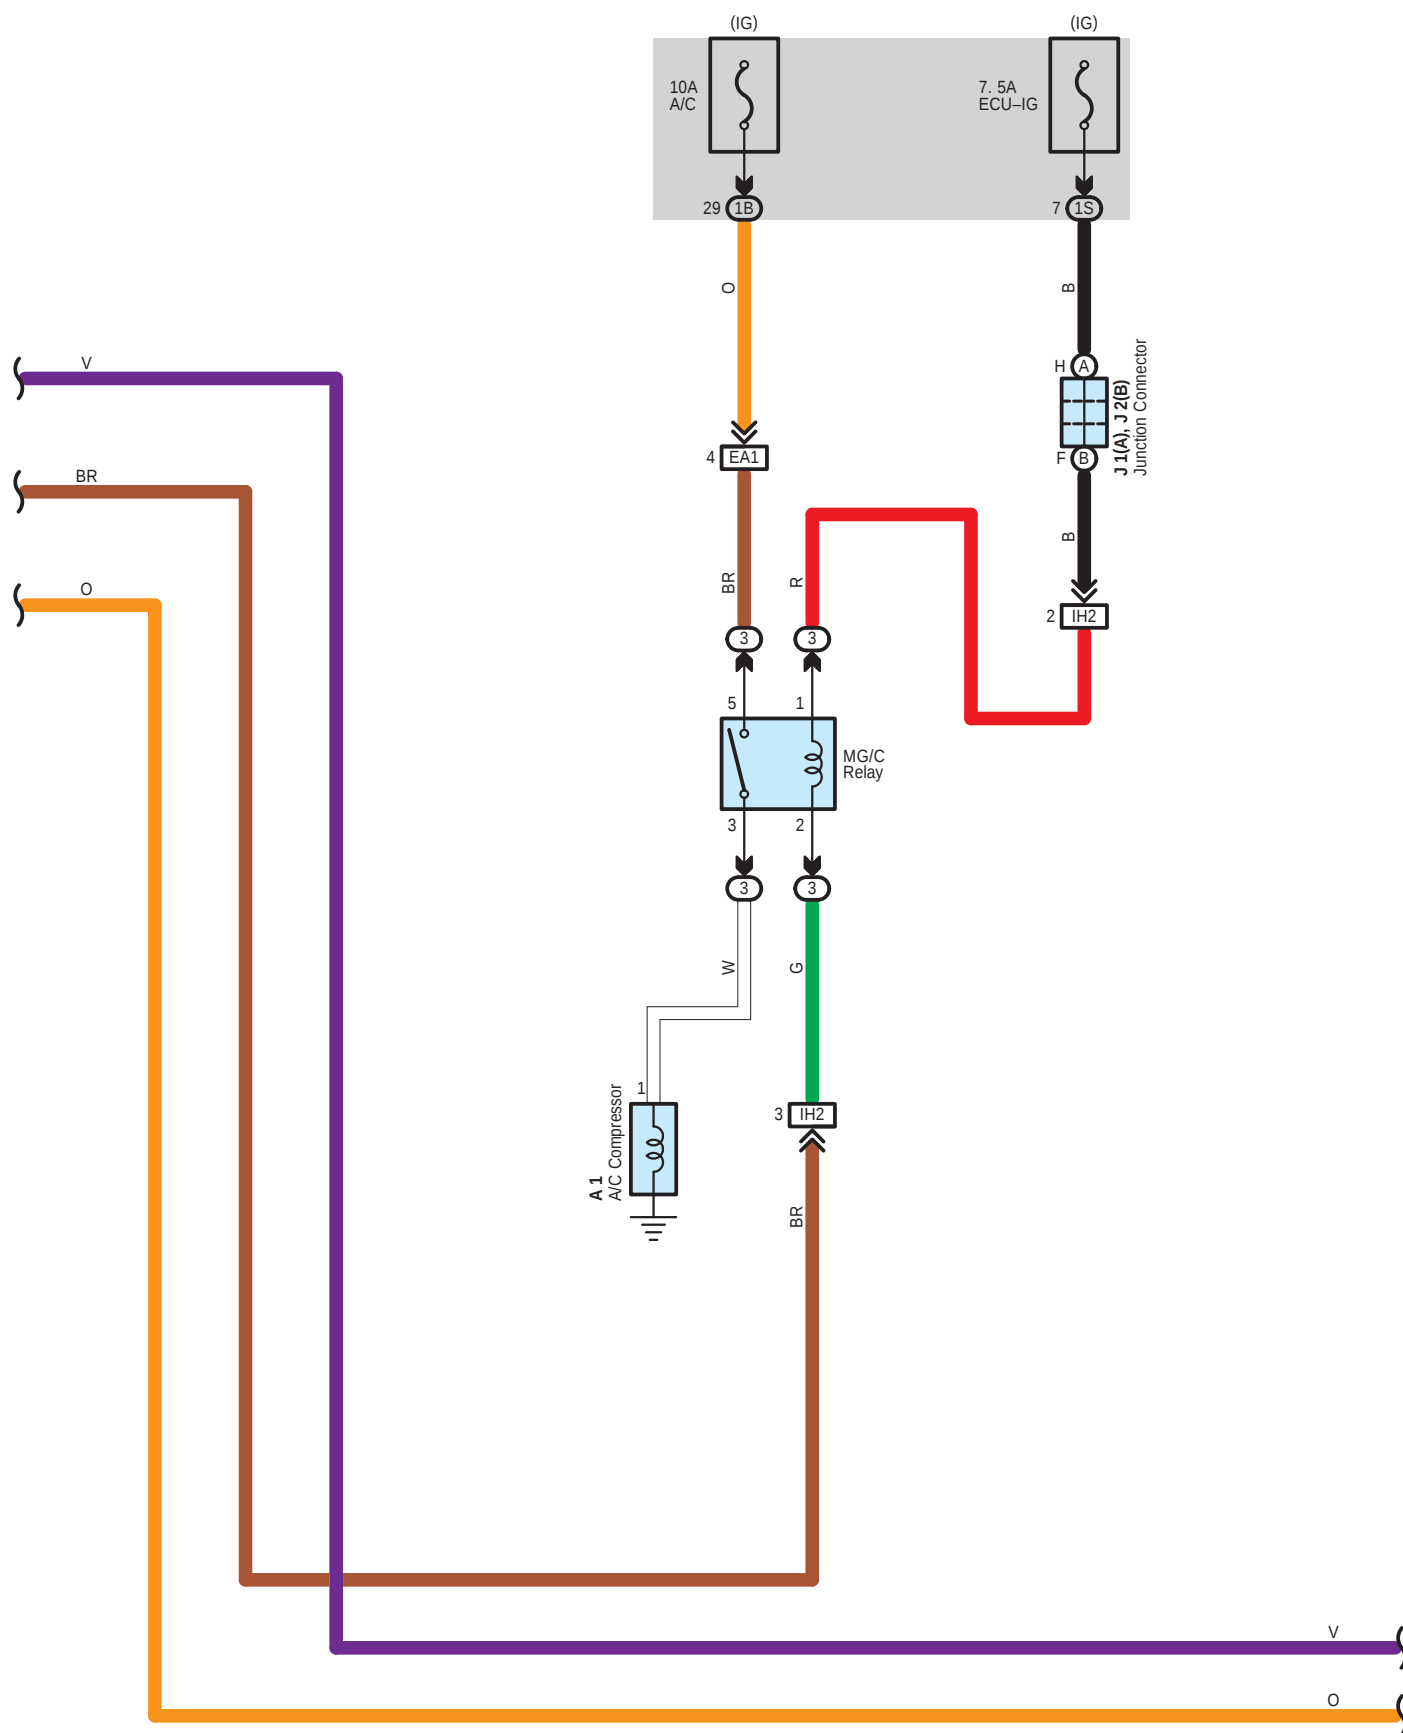

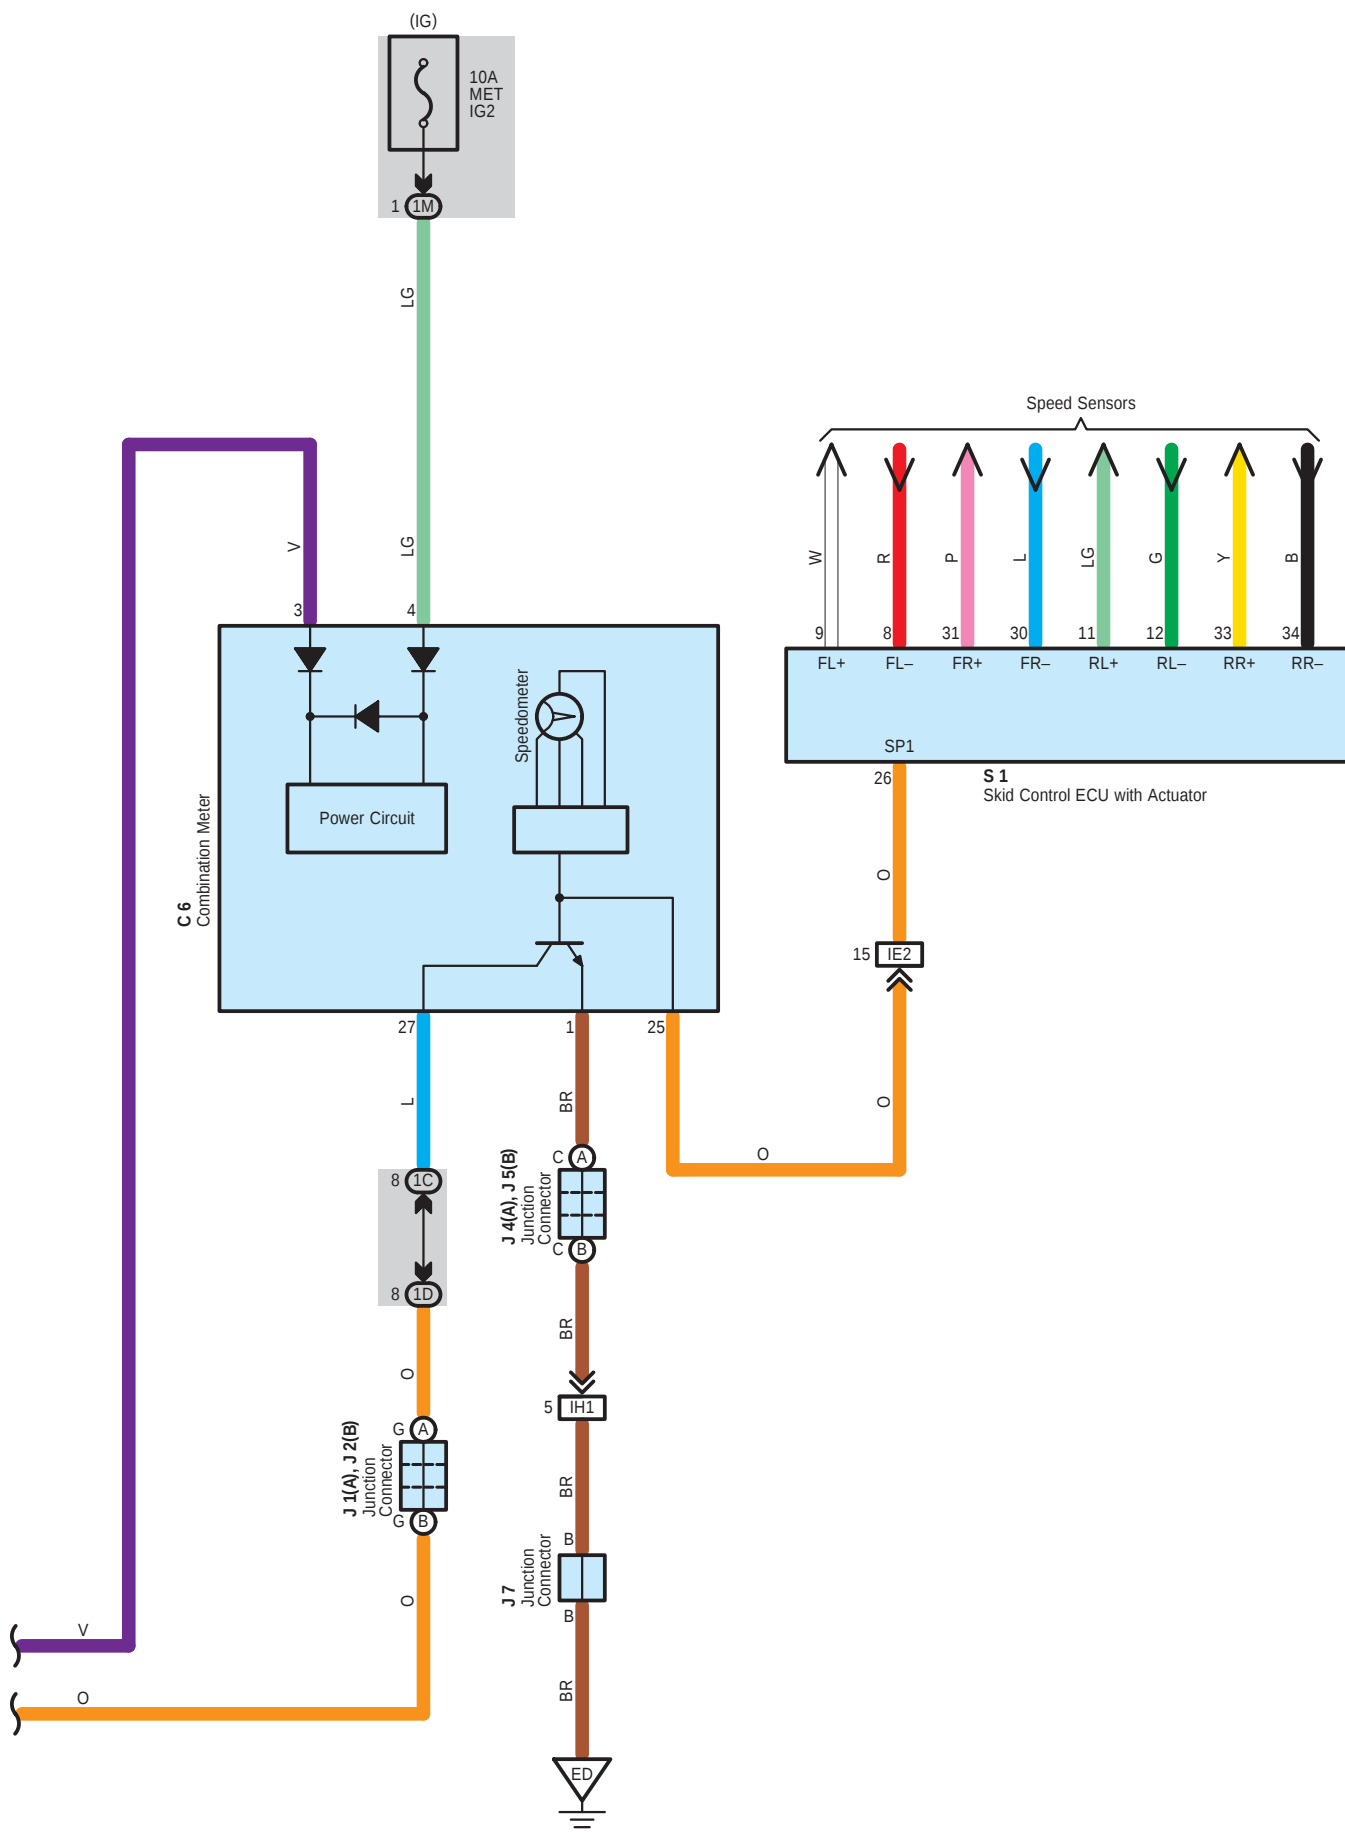

Air Conditioning

System Outline

1. Heater Blower Operation

When the blower speed is set to a certain level using the blower control SW, the A/C control assembly sends the signals to the blower control to control the blower motor speed.

2. Damper Servo Motor (Air Inlet) Control

When the FRESH/RECIRC select SW is set to RECIRC, the motor in the damper servo motor (Air inlet) starts rotating to move the damper toward the RECIRC side. Since the damper position is detected by the TERMINAL REC of the A/C control assembly, the motor is continuously rotated until the damper reaches its stop position. When the FRESH/RECIRC select SW is set to FRESH, the motor in the air inlet control servo motor starts rotating to move the damper toward the FRESH side. Since the damper position is detected by the TERMINAL FRS of the A/C control assembly, the motor is continuously rotated until the damper reaches its stop position.

3. Damper Servo Motor (Air Vent Mode) Control

When the mode select SW is pushed, the ECU in the A/C control assembly activates the damper servo motor (Air vent mode). This causes the servo motor to rotate to the position (FACE, BI-LEVEL, FOOT, FOOT/DEF, DEF) selected using the mode select SW, and moves the damper.

4. Damper Servo Motor (Air Mix) Control

When the temperature control SW is pressed, the ECU in the A/C control assembly sends a signal to the damper servo motor (Air mix). This signal drives the motor to reach the temperature set by the temperature control SW, and moves the damper.

5. Air Conditioning Operation

The A/C control assembly receives various signals, I.E., the engine RPM from the engine control module, outside air temperature signal from the ambient temp. sensor and coolant temperature from the engine control module, etc.

When the engine is started and the A/C SW (A/C control assembly) is on, a signal is input to the engine control module.

As a result, the ground circuit in engine control module is closed and current flows from ECU-IG fuse to TERMINAL 1 of the MG/C relay to TERMINAL 2 to TERMINAL ACMG of the engine control module, turning the MG/C relay on, so that the magnetic clutch is on and the A/C compressor operates.

At the same time, the A/C control assembly detects the magnetic clutch is on and the A/C compressor operates.

If the A/C control assembly detects the following conditions, it stops the air conditioning:

- * Evaporator outlet air is too low.
- * There is a marked difference between the compressor speed and the engine speed.
- * The refrigerant pressure is abnormally high or abnormally low.
- * The engine speed is too low.
- * Rapid acceleration occurs.

6. DEF Synchronized Control Function

When the blower SW is on and the air vent mode control SW turned to DEF or FOOT DEF position, it causes A/C to run whether A/C SW is on or not.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A1	34	C6	36	J4	A 37
A6	34	D1	36	J5	B 37
A7	A 36	D2	36	J7	37
	B 36	D3	36	J9	37
A8	36	E5	36	P5	35
B3	36	J1	A 37	S1	35
B4	36	J2	B 37		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.2 (Inside of the Engine Room R/B Box)

**: Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1E		
1F		
1L	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1P		
1Q		
1S		



**: Connector Joining Wire Harness and Wire Harness**


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B Box)
IE2	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IH2		

**: Ground Points**


Code	See Page	Ground Points Location
EC	40	Front Left Fender
ED	40	Front Left Side of the Cylinder Head
IF	42	Cowl Brace LH
IH	42	Cowl Brace RH

I GROUND POINT

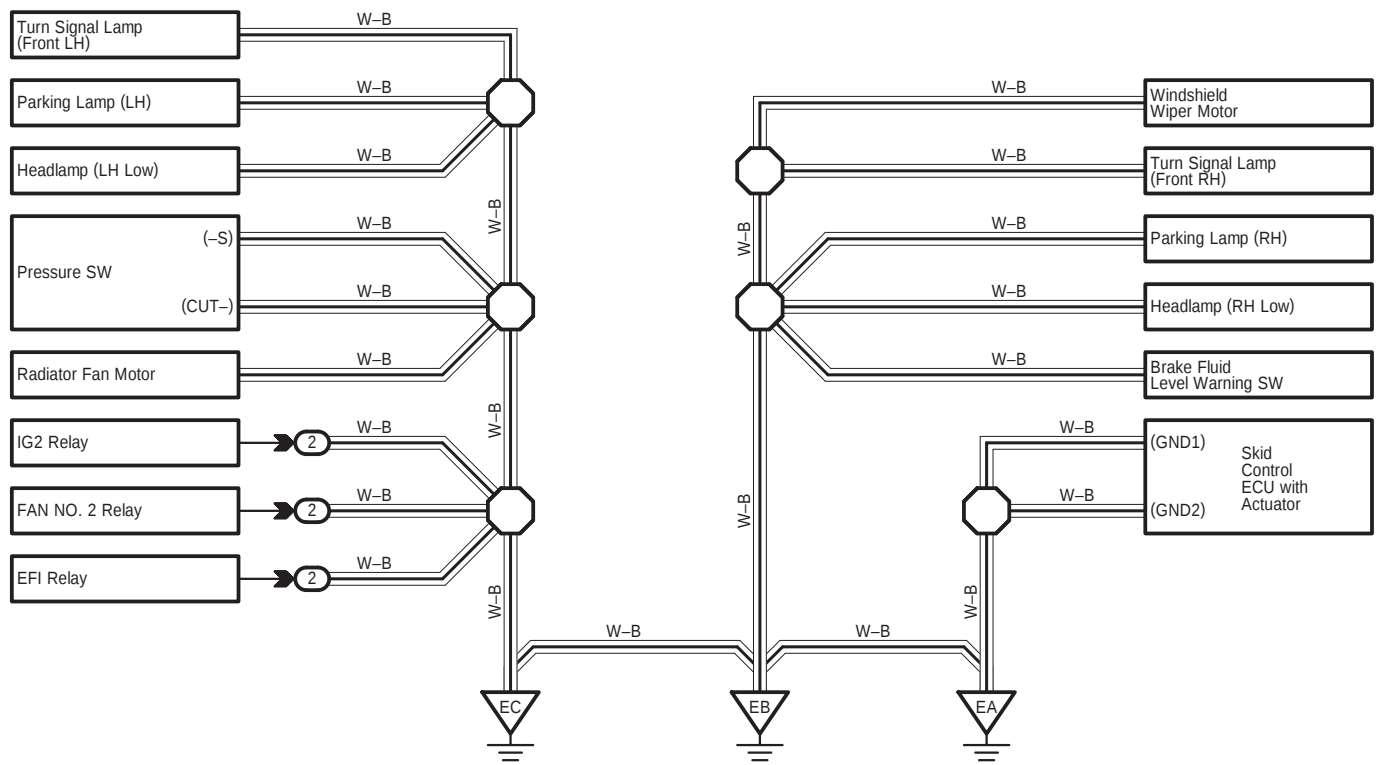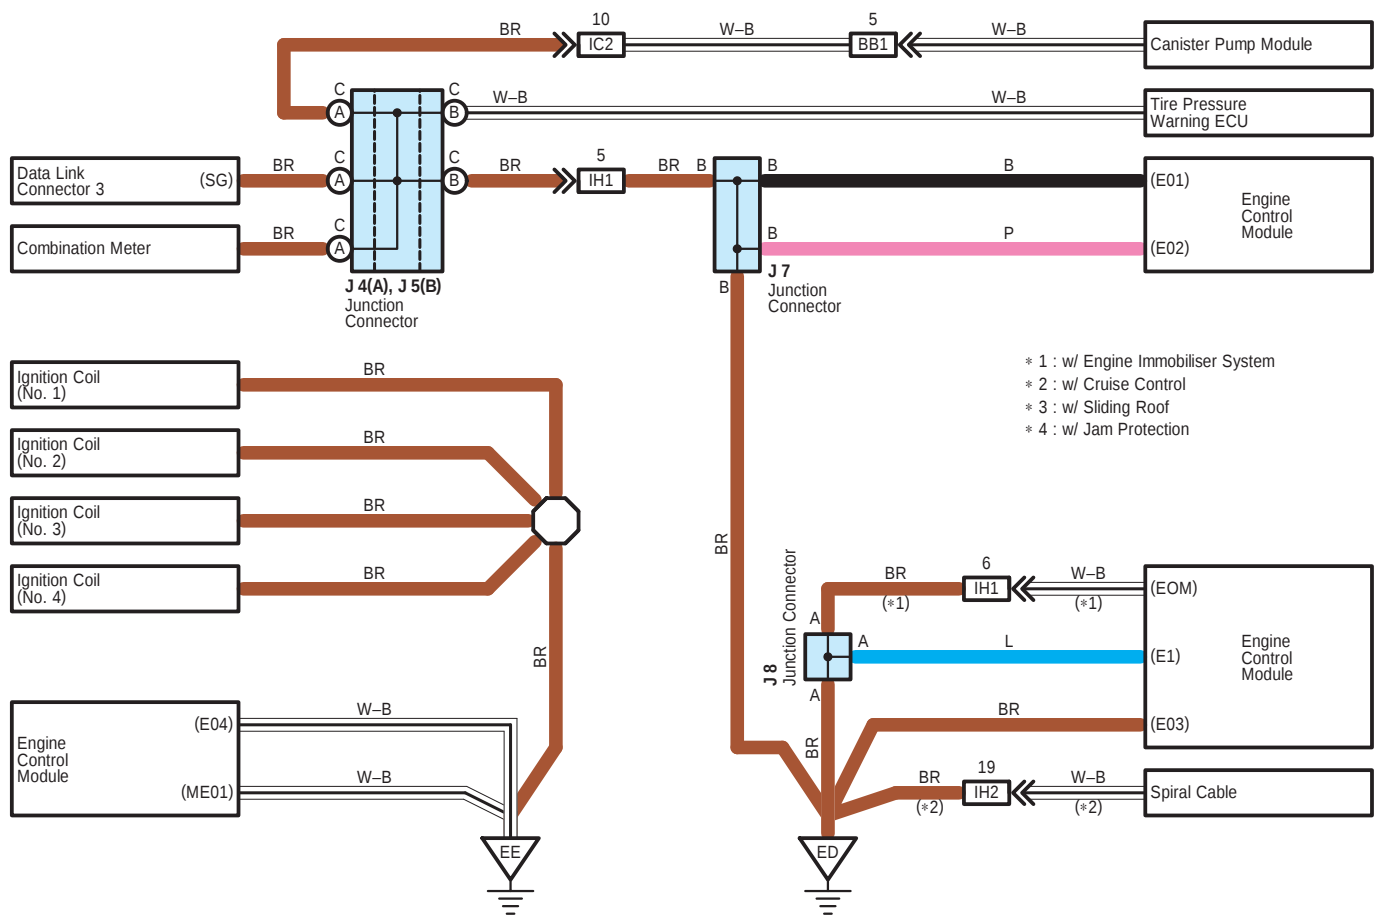

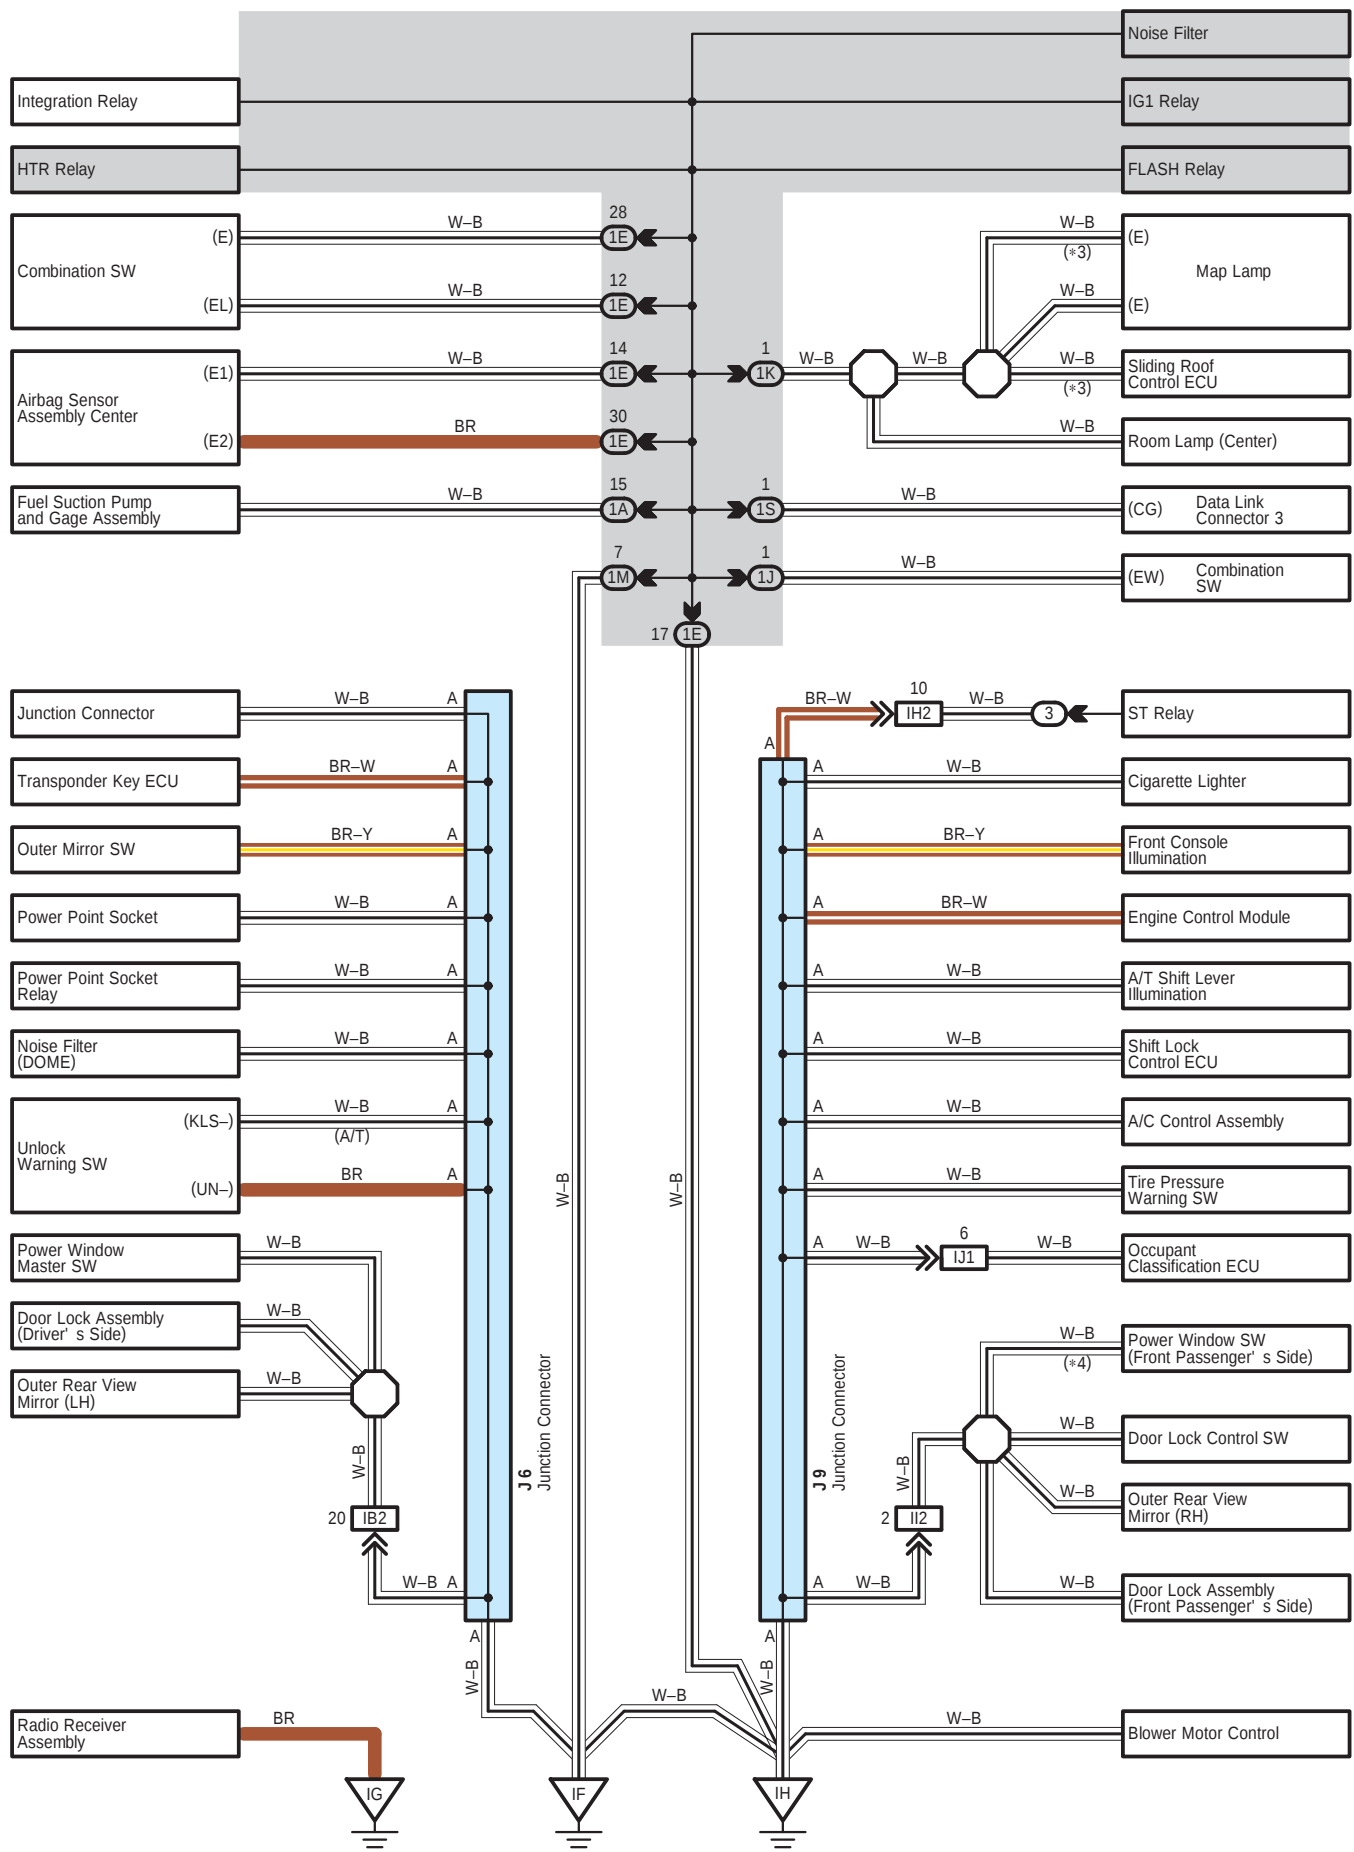

I GROUND POINT

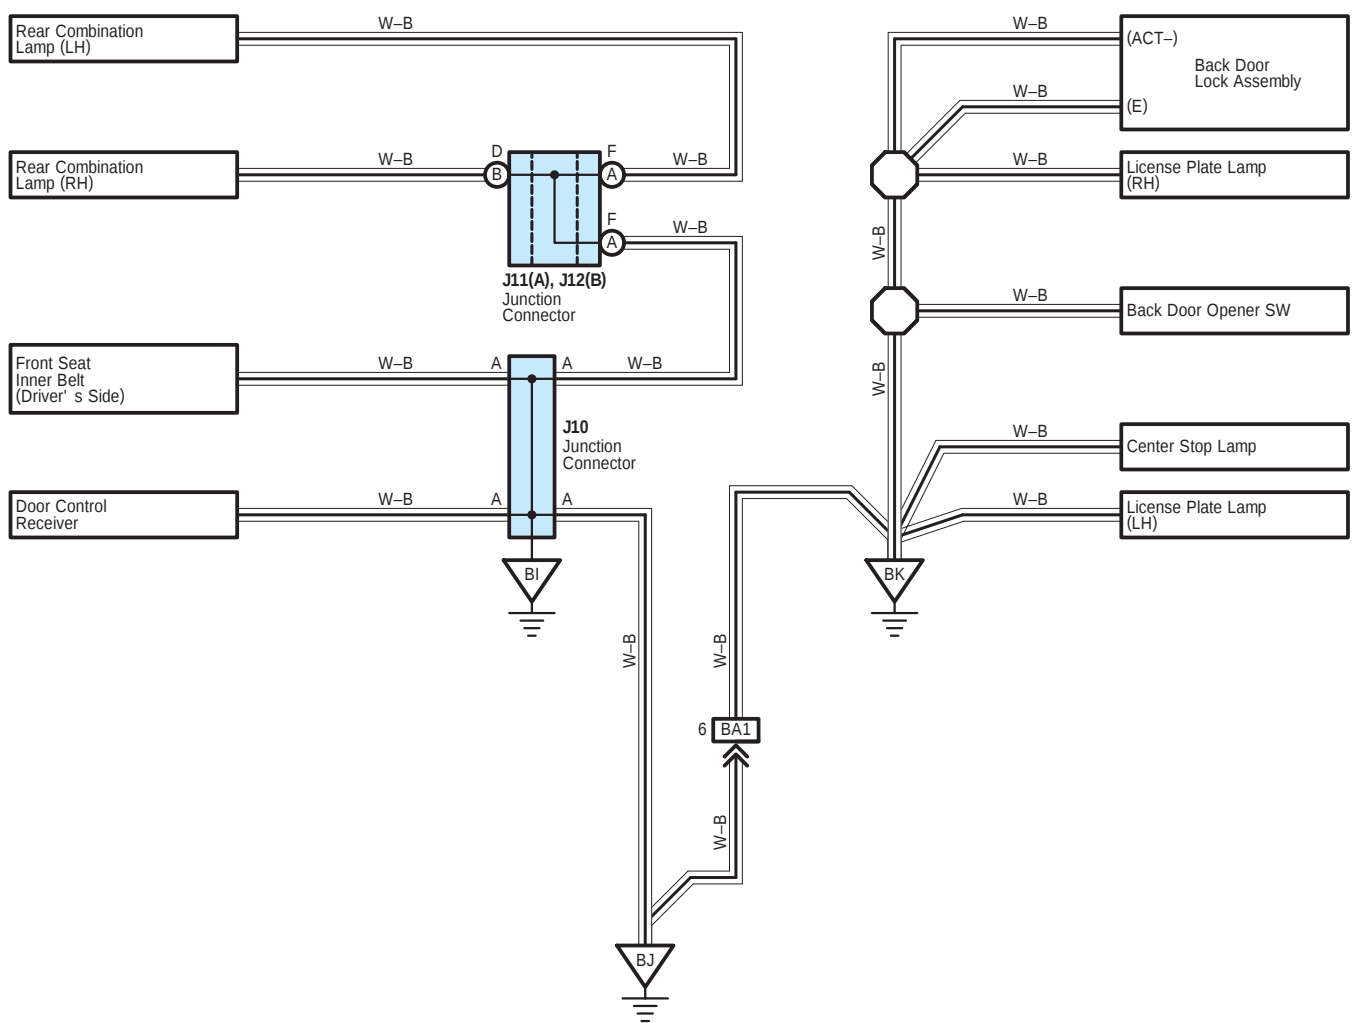

cardiagn.com

 : Parts Location

Code		See Page	Code	See Page	Code	See Page
J4	A	37	J7	37	J10	38
J5	B	37	J8	37	J11	A 38
J6		37	J9	37	J12	B 38

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.2 (Inside of the Engine Room R/B Box)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1E	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1J		
1K	24	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
1M	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1S		

 : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC2	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
IH2		
II2	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
BA1	44	Back Door No.1 Wire and Floor Wire (Back Window Upper Frame LH)
BB1	44	Floor Wire and Floor No.3 Wire (Center Floor Pan Center)

 : Ground Points

Code	See Page	Ground Points Location
EA	40	Front Right Fender
EB		
EC	40	Front Left Fender
ED	40	Front Left Side of the Cylinder Head
EE	40	Left Side of the Cylinder Head
IF	42	Cowl Brace LH
IG	42	Instrument Panel Brace LH
IH	42	Cowl Brace RH
BI	44	Quarter Panel LH
BJ		
BK	44	Left Side of the Back Door Panel

J POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

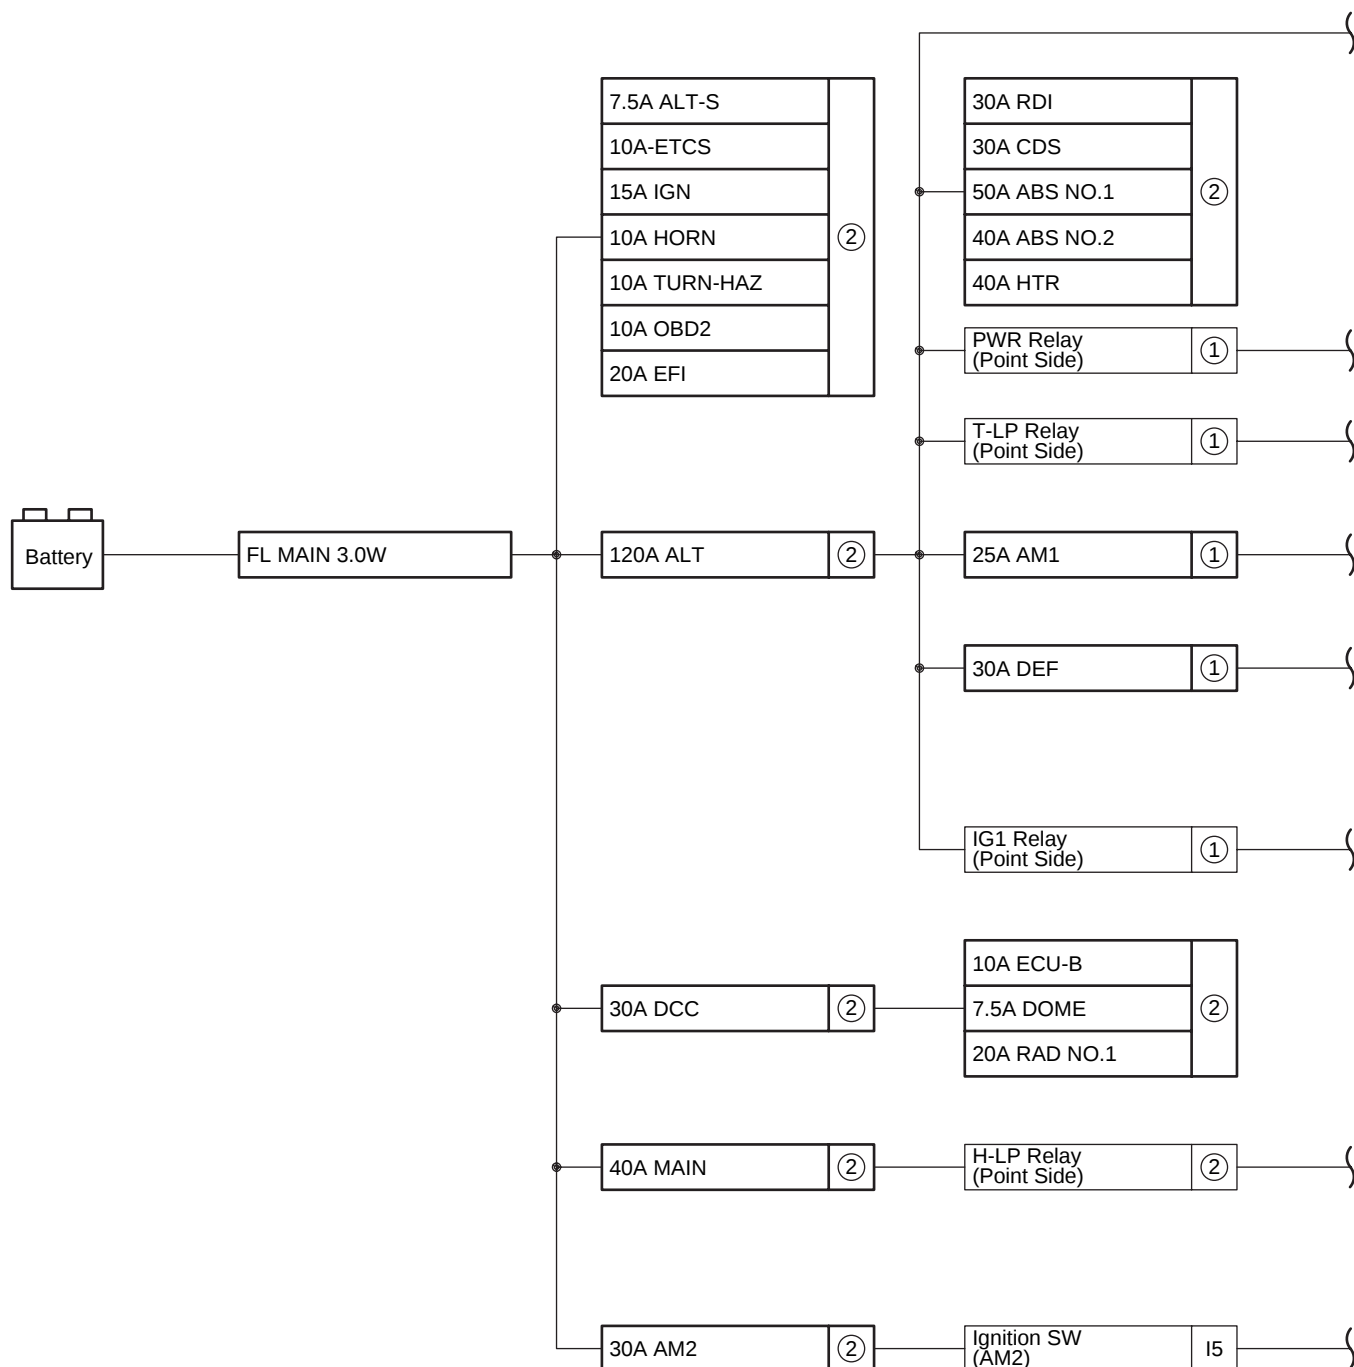

[LOCATION]

- ① : Instrument Panel J/B (See Page 24)
- ② : Engine Room R/B and Engine Room J/B (See Page 22)
- ③ : Engine Room R/B No.2 (See Page 23)

{	20A FL DOOR	①
	20A FR DOOR	
	20A DOOR	
	15A FR FOG	
	20A S/ROOF	
	10A STOP	
	15A ACC SOCKET	

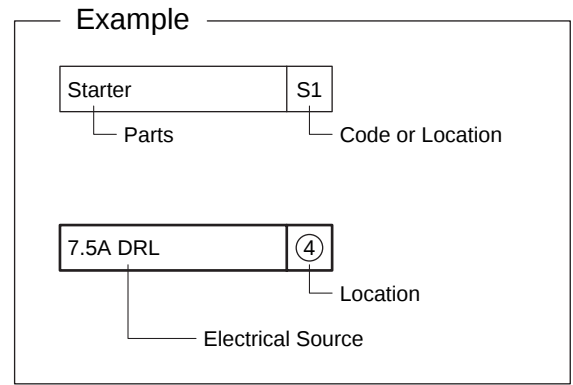

{	30A POWER	①
---	-----------	---

{	10A TAIL	①
	7.5A PANEL	

15A CIG	①
7.5A ACC	

{	Ignition SW (AM1)	I5
---	-------------------	----

7.5A ST	③
---------	---

{	DEF Relay (Point Side)	①
---	------------------------	---

7.5A RR DEF I/UP	①
------------------	---

{	7.5A ECU-IG	①
	30A FR WIP	
	15A FR WSH	
	10A GAUGE	
	10A A/C	

{	10A H-LP LH LO	②
	10A H-LP RH LO	
	10A H-LP LH HI	
	10A H-LP RH HI	

{	15A IG2	①
	10A MET IG2	

J POWER SOURCE (Current Flow Chart)

Instrument Panel J/B (See Page 24)

Fuse		System	Page
7.5A	ACC	Audio System	166
		Power Outlet	156
		Remote Control Mirror	94
		Shift Lock	122
7.5A	ECU-IG	ABS	136
		Air Conditioning	178
		Back Door Opener	114
		Charging	54
		Cruise Control	130
		Door Lock Control	104
		Interior Light	78
		Power Window (w/ Jam Protection)	96
		Radiator Fan and Condenser Fan	176
		Shift Lock	122
		Sliding Roof	118
		Tire Pressure Warning System	142
		Wireless Door Lock Control	108
7.5A	PANEL	Combination Meter	170
		Illumination	82
		Light Reminder	160
7.5A	RR DEF I/UP	Engine Control	56
10A	A/C	Air Conditioning	178
10A	GAUGE	ABS	136
		Air Conditioning	178
		Back-Up Light	90
		Cruise Control	130
		Electronically Controlled Transmission and A/T Indicator	124
		Engine Control	56
		Illumination	82
		Power Window (w/ Jam Protection)	96
		Rear Window Defogger	164
		Seat Belt Warning	162
		SRS	145
10A	MET IG2	Turn Signal and Hazard Warning Light	74
		ABS	136
		Air Conditioning	178
		Audio System	166
		Back Door Opener	114
		Charging	54
		Combination Meter	170
		Cruise Control	130
		Electronically Controlled Transmission and A/T Indicator	124

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	MET IG2	Engine Control	56
		Illumination	82
		Key Reminder	158
		Light Reminder	160
		Seat Belt Warning	162
		Sliding Roof	118
		SRS	145
		Tire Pressure Warning System	142
10A	STOP	ABS	136
		Cruise Control	130
		Electronically Controlled Transmission and A/T Indicator	124
		Engine Control	56
		Shift Lock	122
		Stop Light	88
10A	TAIL	Engine Control	56
		Taillight	86
15A	ACC SOCKET	Power Outlet	156
15A	CIG	Cigarette Lighter	154
15A	FR WSH	Front Wiper and Washer	92
15A	IG2	Cruise Control	130
		Electronically Controlled Transmission and A/T Indicator	124
		Engine Control	56
		Engine Immobiliser System	66
		Ignition	52
		SRS	145
20A	DOOR	Back Door Opener	114
		Door Lock Control	104
		Power Window (w/ Jam Protection)	96
		Sliding Roof	118
		Wireless Door Lock Control	108
20A	FL DOOR	Power Window (w/ Jam Protection)	96
20A	FR DOOR	Power Window (w/ Jam Protection)	96
20A	S/ROOF	Sliding Roof	118
25A	AM1	Starting	50
30A	DEF	Engine Control	56
		Rear Window Defogger	164
30A	FR WIP	Front Wiper and Washer	92
30A	POWER	Power Window (w/o Jam Protection)	102

Engine Room R/B and Engine Room J/B (See Page 22)

Fuse		System	Page
7.5A	ALT-S	Charging	54

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
7.5A	DOME	Interior Light	78
		Wireless Door Lock Control	108
10A	ECU-B	ABS	136
		Air Conditioning	178
		Audio System	166
		Back Door Opener	114
		Combination Meter	170
		Cruise Control	130
		Door Lock Control	104
		Electronically Controlled Transmission and A/T Indicator	124
		Engine Control	56
		Engine Immobiliser System	66
		Illumination	82
		Interior Light	78
		Key Reminder	158
		Light Reminder	160
		Power Window (w/ Jam Protection)	96
		Seat Belt Warning	162
		Sliding Roof	118
		SRS	145
		Tire Pressure Warning System	142
		Wireless Door Lock Control	108
10A	ETCS	Cruise Control	130
		Electronically Controlled Transmission and A/T Indicator	124
		Engine Control	56
10A	H-LP LH HI	Headlight	72
10A	H-LP LH LO	Headlight	72
10A	H-LP RH HI	Combination Meter	170
		Headlight	72
10A	H-LP RH LO	Headlight	72
10A	HORN	Horn	152
		Wireless Door Lock Control	108
10A	OBD2	Engine Control	56
10A	TURN-HAZ	Turn Signal and Hazard Warning Light	74
15A	IGN	Engine Control	56
		Ignition	52
20A	EFI	Cruise Control	130
		Electronically Controlled Transmission and A/T Indicator	124
		Engine Control	56
		Engine Immobiliser System	66
20A	RAD NO.1	Audio System	166
30A	AM2	Starting	50
30A	CDS	Radiator Fan and Condenser Fan	176

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
30A	RDI	Radiator Fan and Condenser Fan	176
40A	ABS NO.2	ABS	136
40A	HTR	Air Conditioning	178
40A	MAIN	Combination Meter	170
		Headlight	72
		Wireless Door Lock Control	108
50A	ABS NO.1	ABS	136
120A	ALT	Charging	54
		Combination Meter	170
		Engine Control	56
		Illumination	82
		Light Reminder	160
		Starting	50
		Taillight	86
		Wireless Door Lock Control	108

Engine Room R/B No.2 (See Page 23)

Fuse		System	Page
7.5A	ST	Electronically Controlled Transmission and A/T Indicator	124
		Engine Control	56
		Starting	50

* These are the page numbers of the first page on which the related system is shown.

K CONNECTOR LIST

*1 : w/ Cruise Control

*2 : w/o Cruise Control

A 1
Gray



A 2
Black



A 3
Dark Gray



A 4
Yellow




A 5
Yellow




A 6
Black



A 7
(*1)

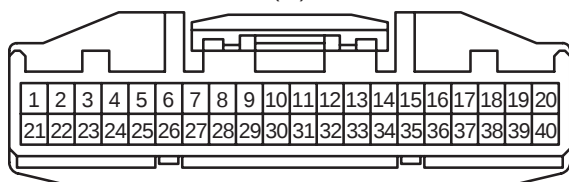

A 7
(*2) Black

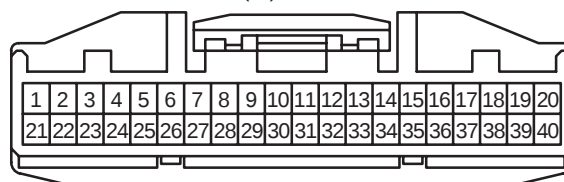

A 8




A 9




A10
Black




A11
Yellow

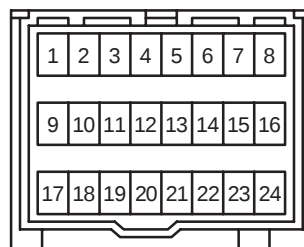


A12
Yellow

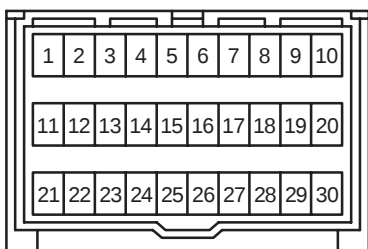


A13
Yellow

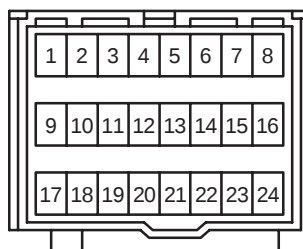


A14
Orange



A15
Black




A16
Yellow

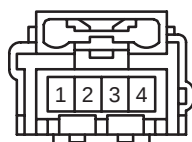


A17




A18
Yellow

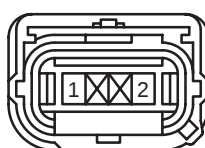

A19
Yellow

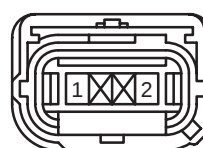

B 1
Gray

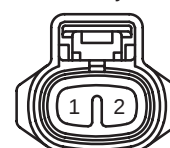


B 2
Gray




B 3




B 4
Black



B 5





















B 6

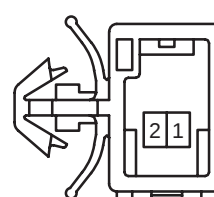


C 1
Black



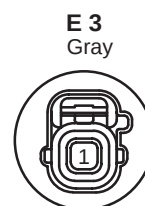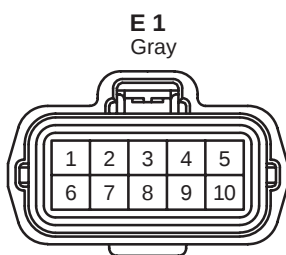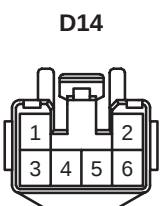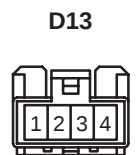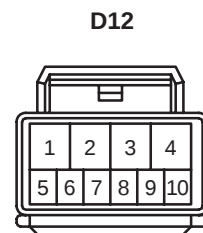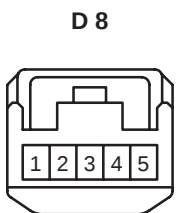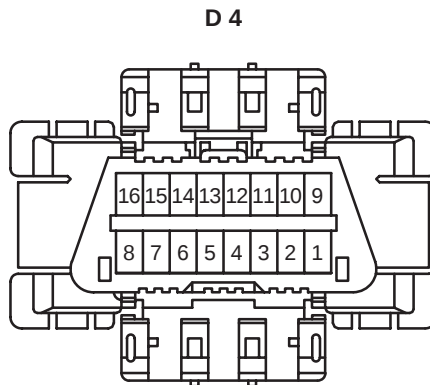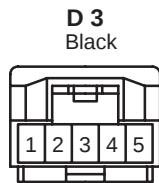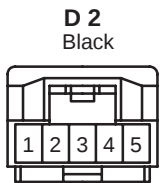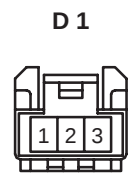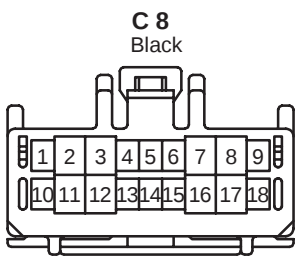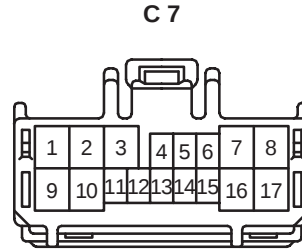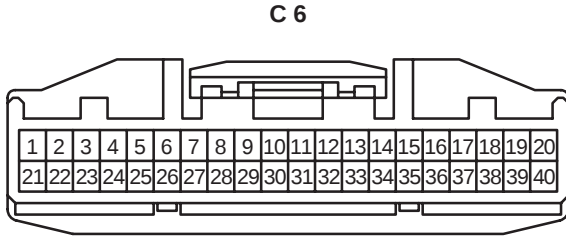


K CONNECTOR LIST

E 4

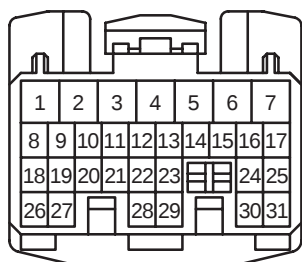


E 5

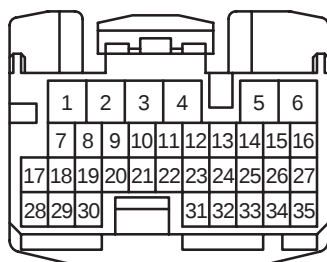


E 7




E 8

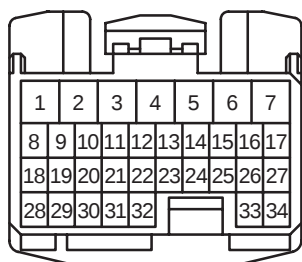


F 1
Brown




F 2
Brown



F 3
Brown



F 4
Brown



F 5




F 6



F 7



F 8

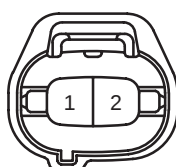

F 9
Gray




G 1
Black



G 2




H 1
Black

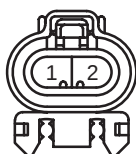

H 2
Brown



H 3
Black

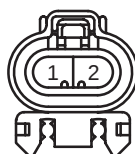

H 4
Brown



H 5
Dark Gray




H 6
Black



H 7
Black




I 1
Black




I 2
Black




I 3
Black




I 4
Black




I 5

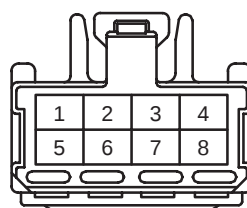


I 6

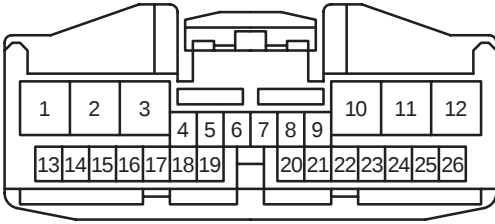I 7
Black


J 1

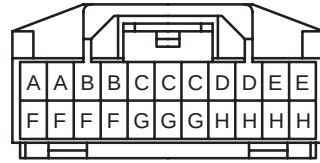


J 2

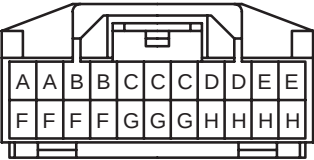



J 3

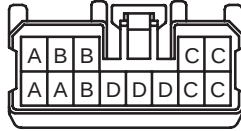




J 4

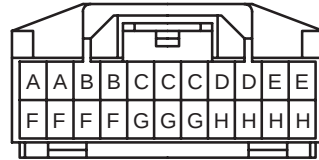


J 5

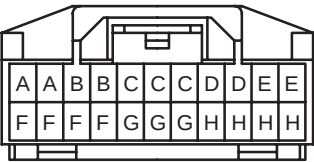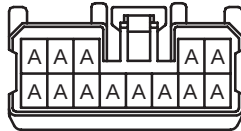J 6
Dark Gray


J 7

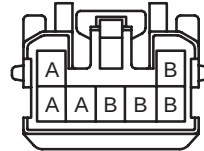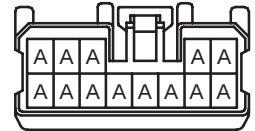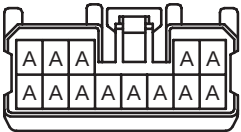J 8
BlackJ 9
Dark Gray


J 10

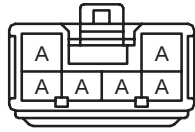


J 11

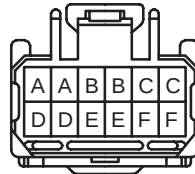

J 12

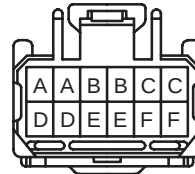




J 13





J 14




J 15

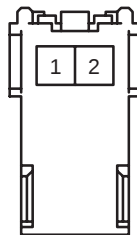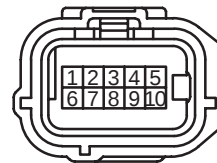K 1
BlackK 2
YellowL 1
BlackL 2
GrayL 3
GrayM 1
Black


M 2

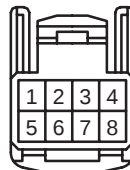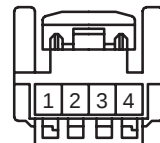
M 3
GrayN 1
Gray

N 2




K CONNECTOR LIST

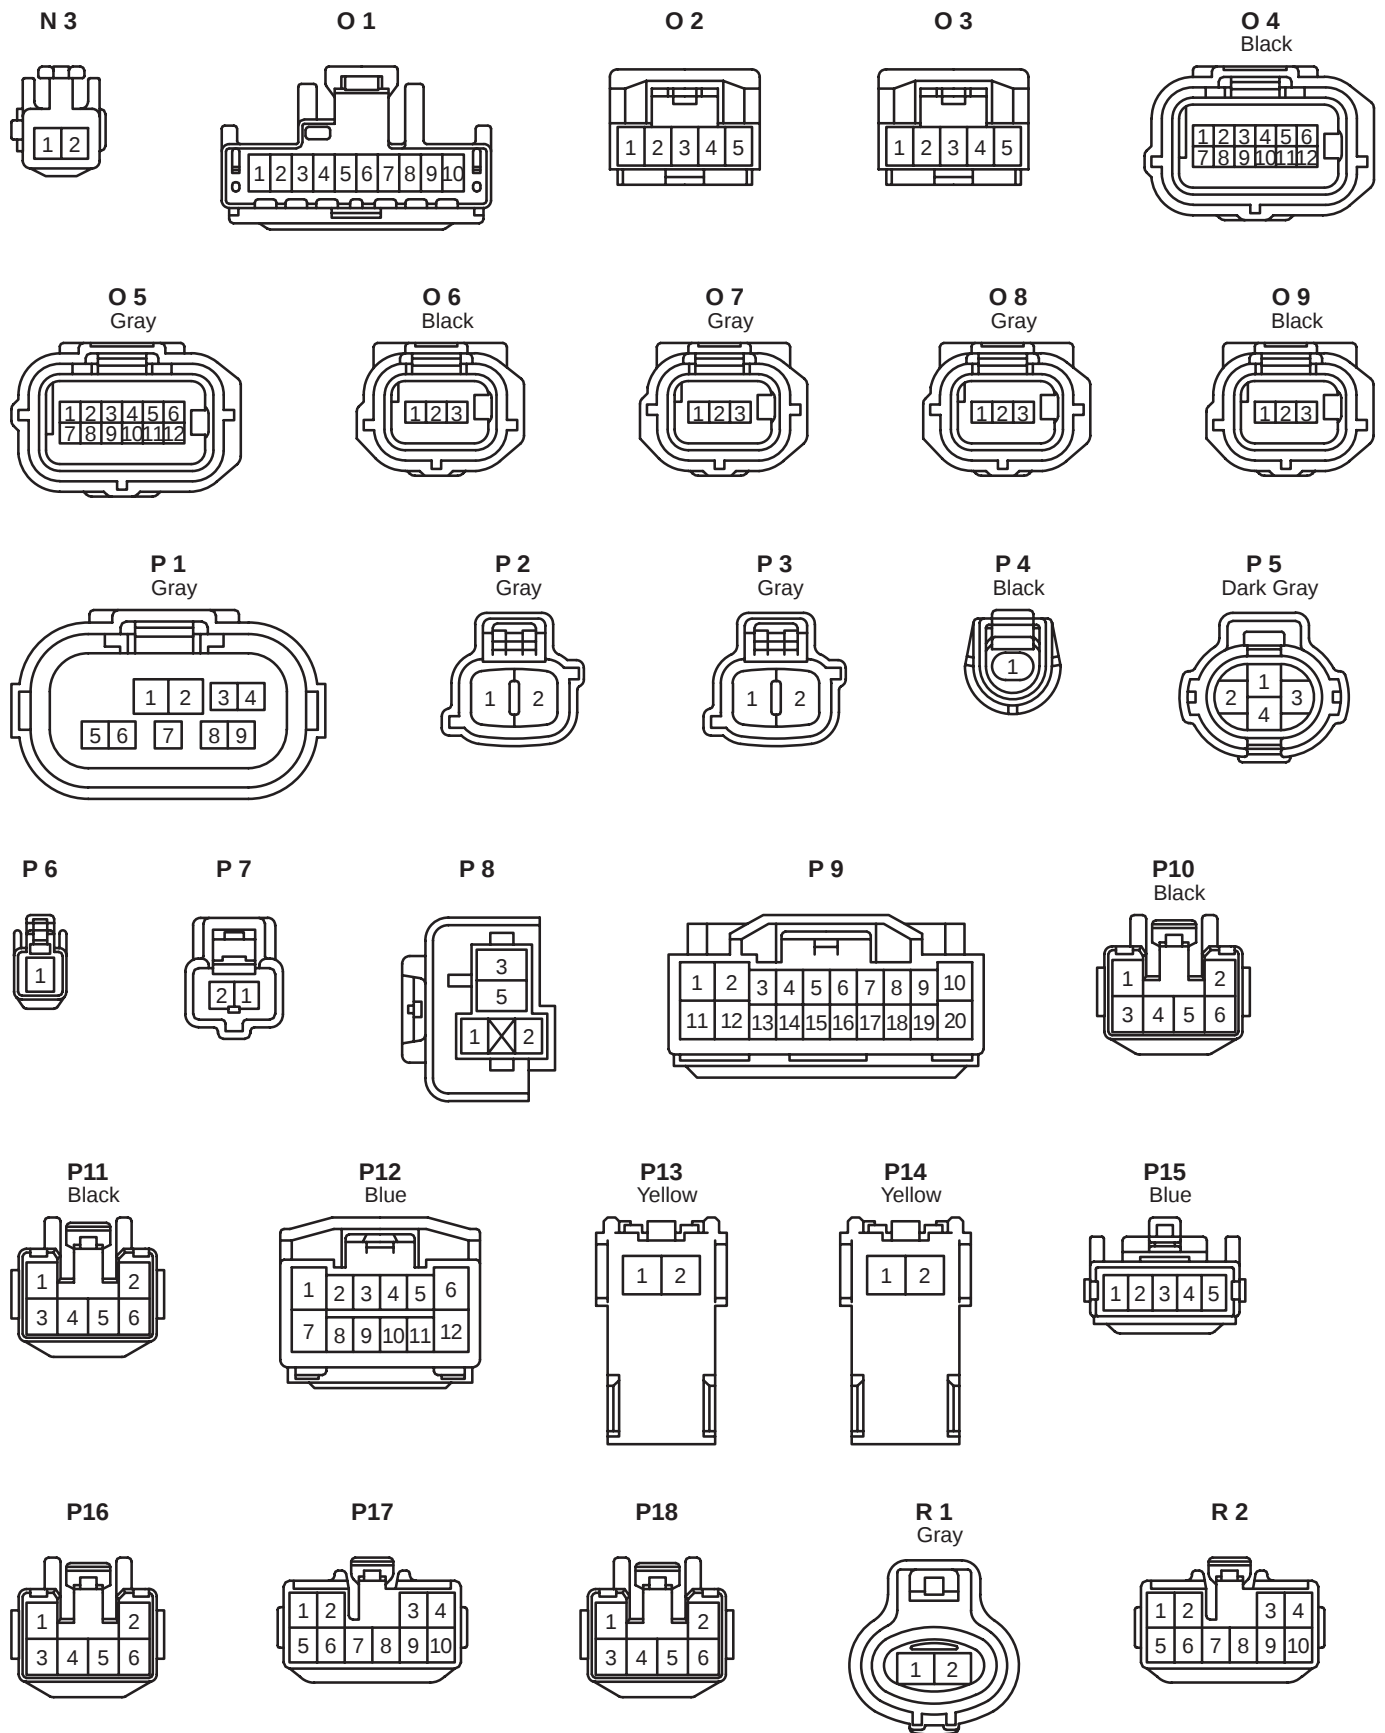


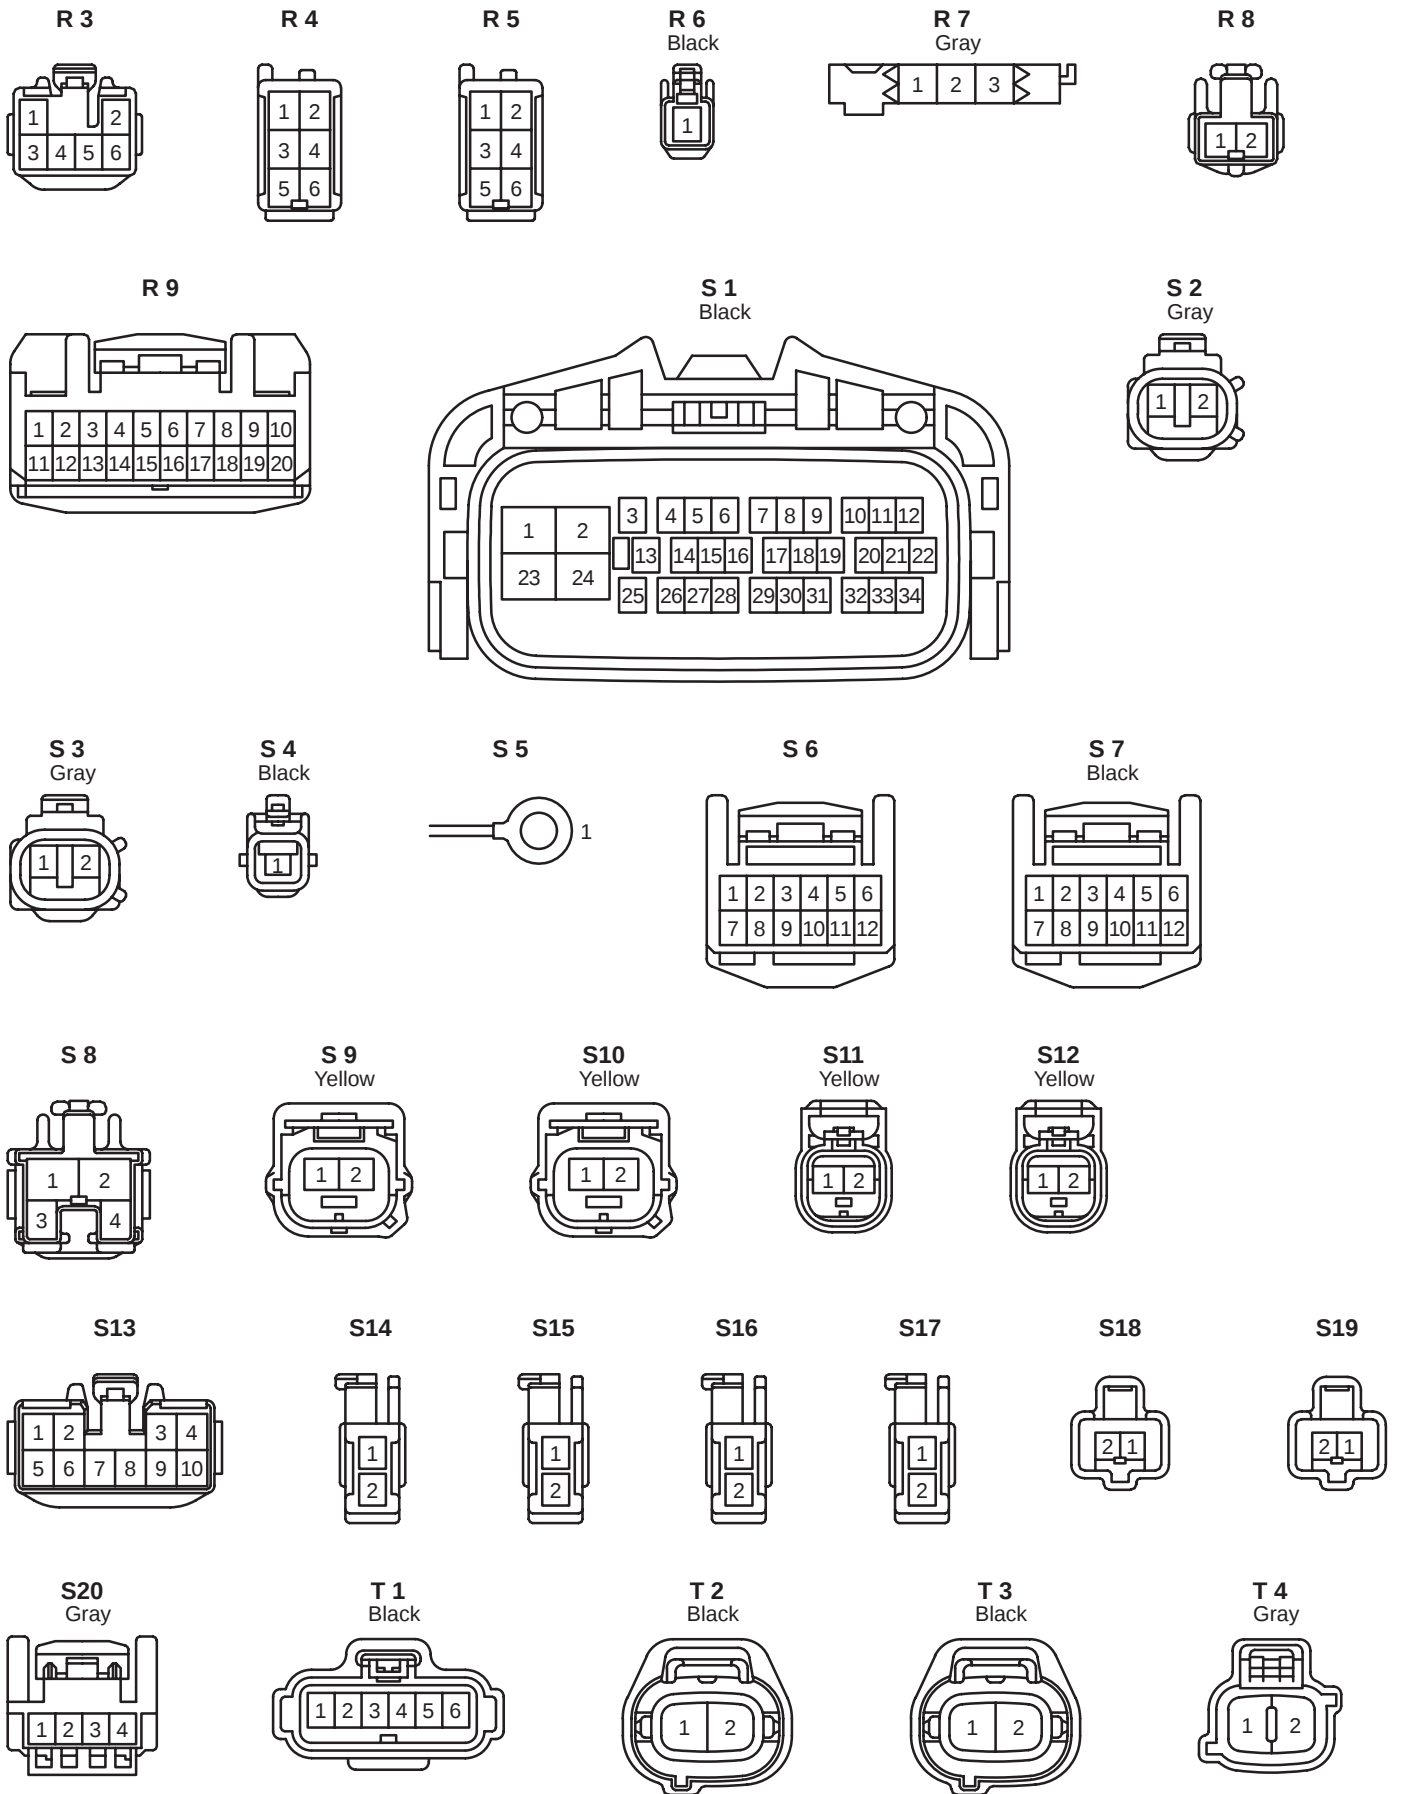


K CONNECTOR LIST

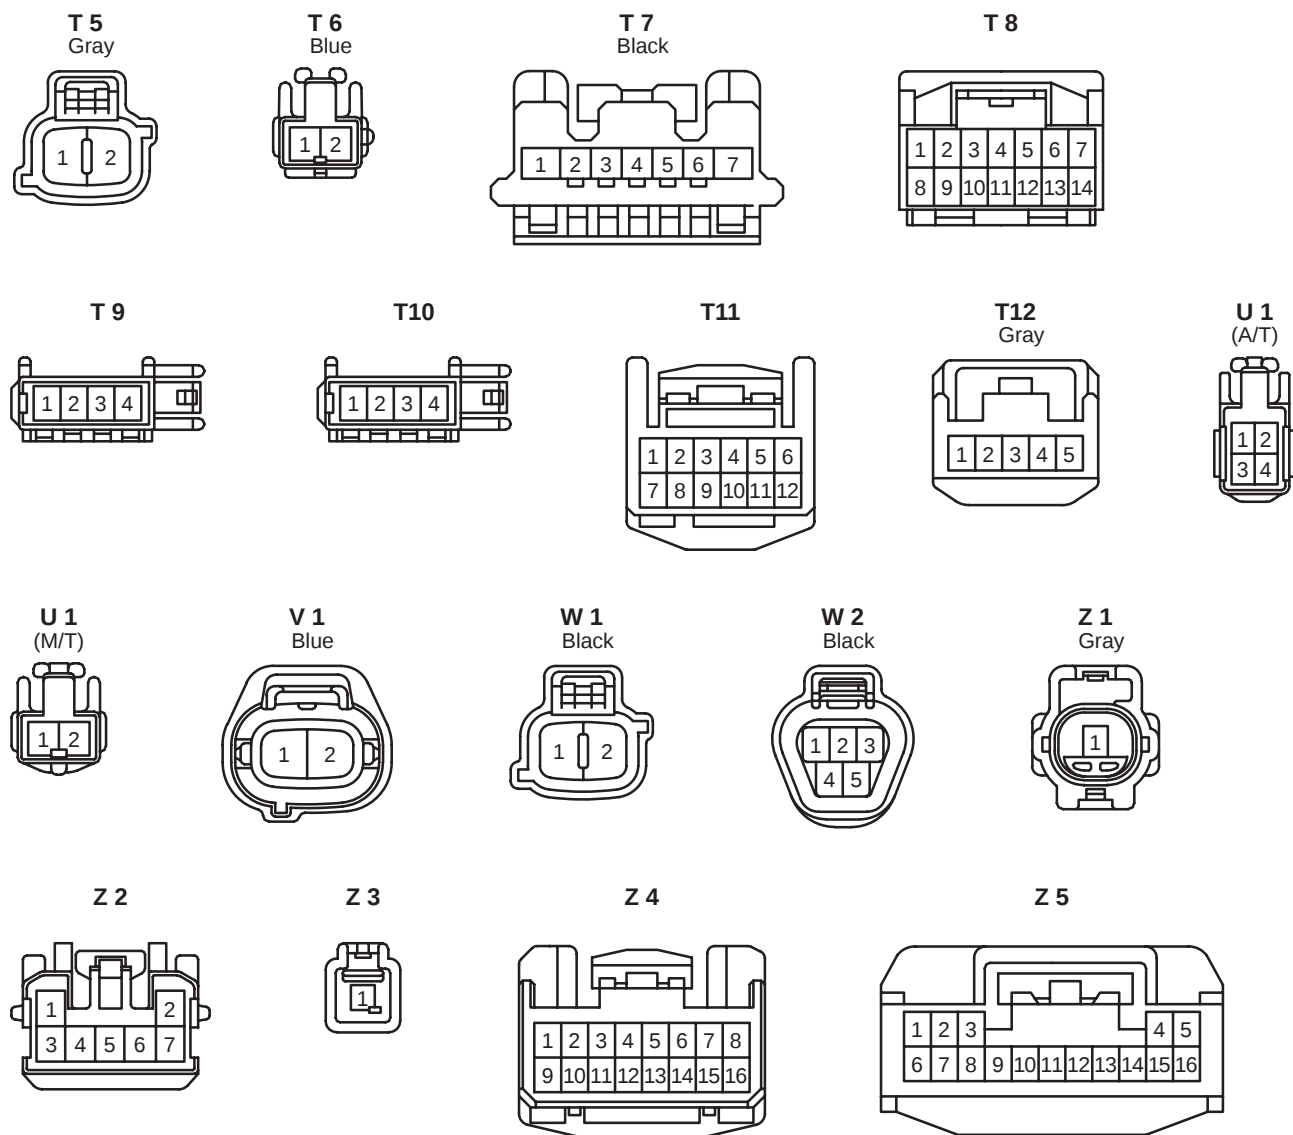


K CONNECTOR LIST

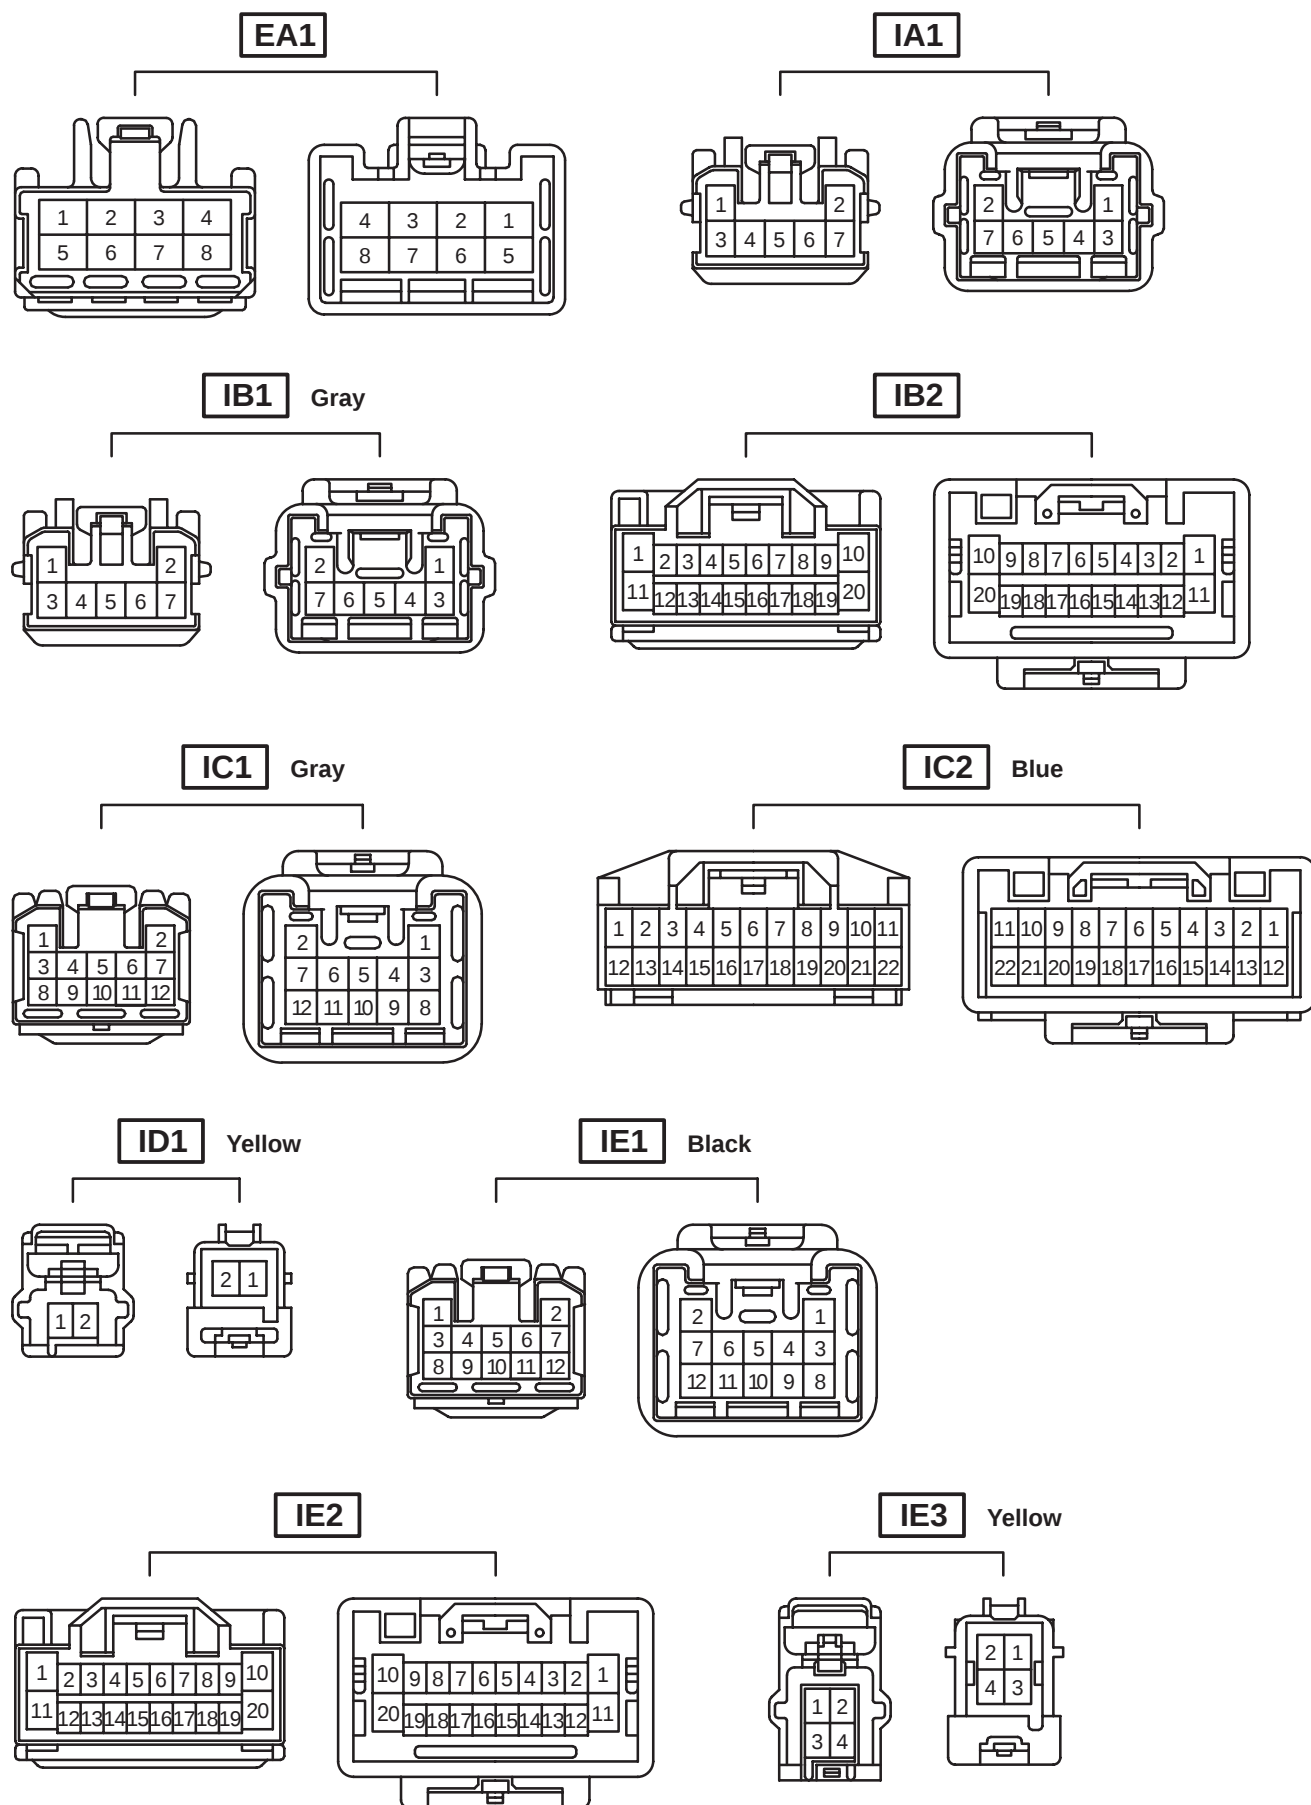

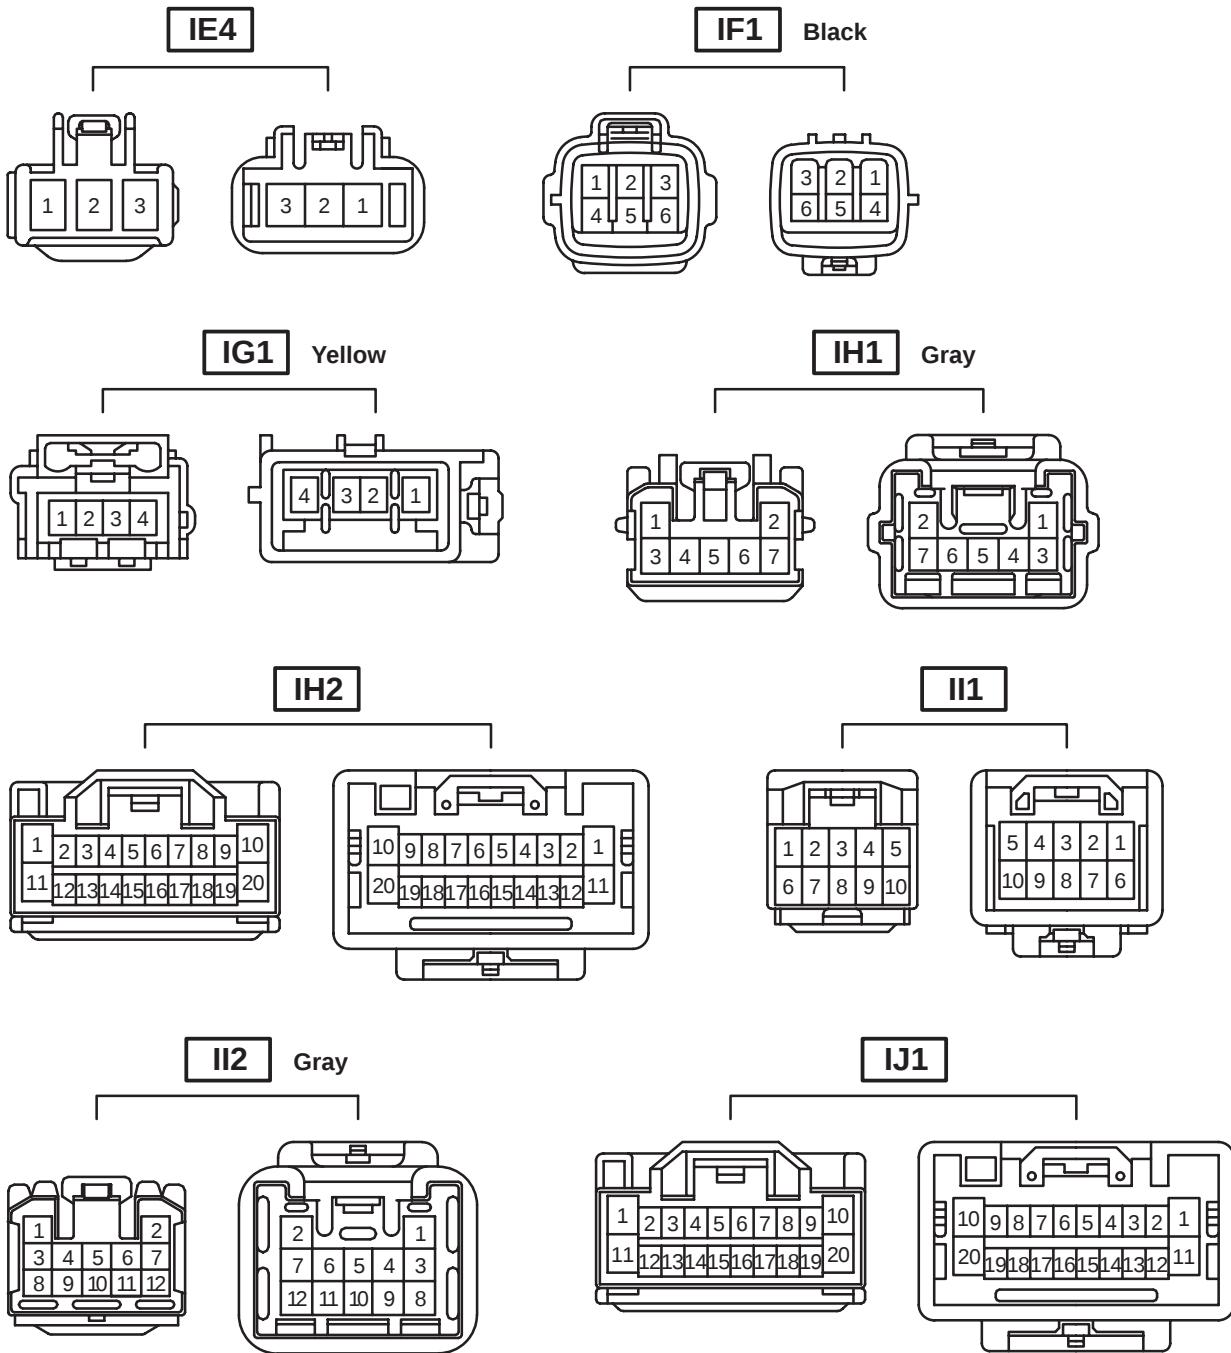

K CONNECTOR LIST

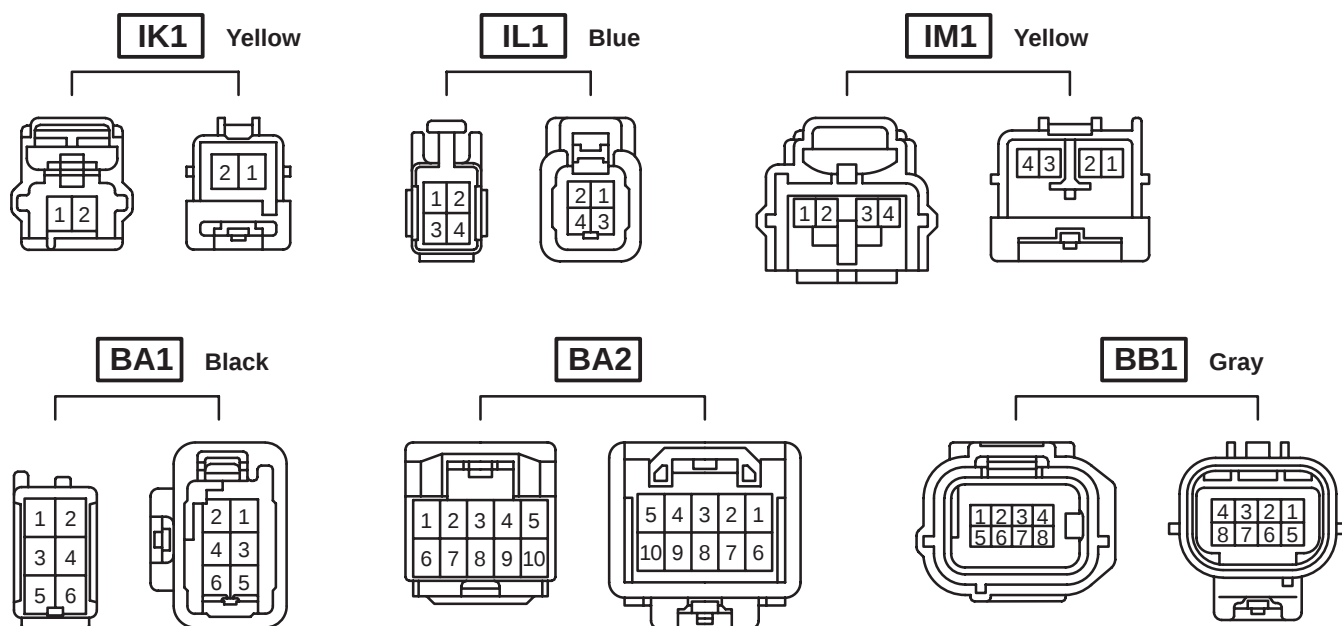

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Compressor	90980-11271	D 9	Door Courtesy SW (Driver's Side)	90980-12340
A 2	A/C Condenser Fan Motor	90980-11410	D10	Door Courtesy SW (Front Passenger's Side)	
A 3	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	D11	Door Lock Assembly (Driver's Side)	90980-12226
A 4	Airbag Sensor (Front LH)	90980-11856	D12	Door Lock Assembly (Front Passenger's Side)	
A 5	Airbag Sensor (Front RH)		D13	Door Lock Control SW	90980-11950
A 6	Ambient Temp. Sensor	90980-11070	D14	Door Lock Control SW	90980-12344
A 7	A/C Control Assembly	90980-12169	E 1	Electronically Controlled Transmission Solenoid	90980-11658
A 8	A/C Thermistor No.1	90980-11918	E 2	Engine Coolant Temp. Sensor	90980-10735
A 9	A/T Shift Lever Illumination	90980-12063	E 3	Engine Oil Pressure SW	90980-11363
A10	Accelerator Position Sensor	90980-11144	E 4	Engine Control Module	90980-12142
A11	Airbag Sensor Assembly Center	90980-12392	E 5	Engine Control Module	90980-12146
A12	Airbag Sensor Assembly Center	90980-12391	E 7	Engine Control Module	90980-12145
A13	Airbag Sensor Assembly Center	90980-12390	E 8	Engine Control Module	90980-12144
A14	Airbag Squib (Front Passenger's Airbag Assembly)	90980-12219	F 1	Fuel Injector (No.1)	90980-11875
A15	Airbag Squib (Front Passenger's Airbag Assembly)		F 2	Fuel Injector (No.2)	
A16	Airbag Squib (Steering Wheel Pad)	90980-12160	F 3	Fuel Injector (No.3)	
A17	Antenna Amplifier	90980-10870	F 4	Fuel Injector (No.4)	
A18	Airbag Sensor (Rear LH)	90980-12241	F 5	Front Console Illumination	90980-10355
A19	Airbag Sensor (Rear RH)		F 6	Front Seat Inner Belt (Driver's Side)	90980-10942
B 1	Back-Up Lamp SW	90980-11250	F 7	Front Seat Inner Belt (Driver's Side)	90980-11918
B 2	Brake Fluid Level Warning SW	90980-11207	F 8	Front Seat Inner Belt (Front Passenger's Side)	90980-11156
B 3	Blower Motor	90980-10214	F 9	Fuel Suction Pump and Gage Assembly	90980-11077
B 4	Blower Motor Control	90980-11676	G 1	Generator	90980-11964
B 5	Back Door Lock Assembly	90980-12334	G 2	Generator	90980-09213
B 6	Back Door Opener SW	90980-11967	H 1	Headlamp (LH High)	90980-11659
C 1	Camshaft Position Sensor	90980-10947	H 2	Headlamp (LH Low)	90980-11096
C 2	Camshaft Timing Oil Control Valve	90980-11162	H 3	Headlamp (RH High)	90980-11659
C 3	Crankshaft Position Sensor	90980-10947	H 4	Headlamp (RH Low)	90980-11096
C 4	Cigarette Lighter	90980-10760	H 5	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11930
C 5	Clutch Start SW	90980-12341	H 6	Horn (Low)	90980-10619
C 6	Combination Meter	90980-12169	H 7	Horn (High)	
C 7	Combination SW	90980-11672	I 1	Ignition Coil (No.1)	90980-11885
C 8	Combination SW	90980-11594	I 2	Ignition Coil (No.2)	
C 9	Cruise Control Clutch SW	90980-12341	I 3	Ignition Coil (No.3)	
C10	Center Stop Lamp	90980-11918	I 4	Ignition Coil (No.4)	
C11	Curtain Shield Airbag Squib (LH)	90980-12219	I 5	Ignition SW	90980-11615
C12	Curtain Shield Airbag Squib (RH)		I 6	Integration Relay	90980-12203
D 1	Damper Servo Motor (Air Inlet)	90980-11987	I 7	Ignition Cylinder Lamp	90980-11148
D 2	Damper Servo Motor (Air Mix)	90980-11909	J 1	Junction Connector	90980-11915
D 3	Damper Servo Motor (Air Vent Mode)		J 2	Junction Connector	
D 4	Data Link Connector 3	90980-11978	J 3	Junction Connector	90980-12346
D 5	Diode (Fan)	90980-11251			
D 7	Diode (Room Lamp)	90980-10962			
D 8	Door Control Receiver	90980-12366			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
J 4	Junction Connector	90980-11915	P13	Pretensioner (LH)	90980-12253
J 5	Junction Connector		P14	Pretensioner (RH)	
J 6	Junction Connector	90980-12346	P15	Power Window SW (Front Passenger's Side)	90980-10789
J 7	Junction Connector	90980-12336	P16	Power Window Regulator Motor (Front RH)	90980-12344
J 8	Junction Connector	90980-12346	P17	Power Window Master SW	90980-12540
J 9	Junction Connector		P18	Power Window Regulator Motor (Front LH)	90980-12344
J10	Junction Connector	90980-10976	R 1	Radiator Fan Motor	90980-10928
J11	Junction Connector	90980-11661	R 2	Radio Receiver Assembly	90980-12540
J12	Junction Connector		R 3	Radio Receiver Assembly	90980-12539
J13	Junction Connector	90980-12355	R 4	Rear Combination Lamp (LH)	90980-11011
J14	Junction Connector		R 5	Rear Combination Lamp (RH)	
J15	Junction Connector	90980-12340	R 6	Rear Window Defogger	90980-12340
K 1	Knock Control Sensor (Bank 1)	90980-11875	R 7	Room Lamp (Center)	81366-68010
K 2	Knee Airbag Squib	90980-12253	R 8	Room Lamp (Left Quarter)	90980-12342
L 1	Canister Pump Module	90980-12380	R 9	Radio Receiver Assembly	90980-12259
L 2	License Plate Lamp (LH)	90980-11148	S 1	Skid Control ECU with Actuator	90980-12020
L 3	License Plate Lamp (RH)		S 2	Speed Sensor (Front LH)	90980-11003
M 1	Mass Air Flow Meter	90980-12292	S 3	Speed Sensor (Front RH)	
M 2	Map Lamp	90980-12221	S 4	Starter	90980-11400
M 3	Map Lamp	82824-21030	S 5	Starter	90980-09506
N 1	Noise Filter (Ignition)	90980-10843	S 6	Shift Lock Control ECU	90980-12183
N 2	Noise Filter (DOME)	90980-12341	S 7	Spiral Cable	
N 3	Noise Filter (DEF and Stop)		S 8	Stop Lamp SW	90980-11118
O 1	Outer Mirror SW	90980-11657	S 9	Side Airbag Sensor (LH)	90980-11856
O 2	Outer Rear View Mirror (LH)	90980-11909	S10	Side Airbag Sensor (RH)	
O 3	Outer Rear View Mirror (RH)		S11	Side Airbag Squib (LH)	90980-11864
O 4	Occupant Classification ECU	90980-12356	S12	Side Airbag Squib (RH)	
O 5	Occupant Classification ECU	90980-12357	S13	Sliding Roof Control ECU	90980-10801
O 6	Occupant Classification Sensor Front LH	90980-12353	S14	Speaker (Front Door LH)	90980-12343
O 7	Occupant Classification Sensor Rear LH	90980-12354	S15	Speaker (Front Door RH)	
O 8	Occupant Classification Sensor Front RH		S16	Speaker (Rear LH)	
O 9	Occupant Classification Sensor Rear RH	90980-12353	S17	Speaker (Rear RH)	
P 1	Park/Neutral Position SW	90980-12362	S18	Speed Sensor (Rear LH)	90980-11060
P 2	Parking Lamp (LH)	90980-11019	S19	Speed Sensor (Rear RH)	
P 3	Parking Lamp (RH)		S20	Stereo Jack Adapter	82824-21030
P 4	Power Steering Oil Pressure SW	90980-11428	T 1	Throttle Body Assembly	90980-11858
P 5	Pressure SW	90980-10943	T 2	Transmission Revolution Sensor (Counter Gear)	90980-12634
P 6	Parking Brake SW	90980-12340	T 3	Transmission Revolution Sensor (Turbine)	
P 7	Power Point Socket	90980-10859	T 4	Turn Signal Lamp (Front LH)	90980-11019
P 8	Power Point Socket Relay	82660-20340	T 5	Turn Signal Lamp (Front RH)	
P 9	Power Window Master SW	90980-12166	T 6	Tire Pressure Warning Reset SW	90980-10906
P10	Power Window Regulator Motor (Front LH)	90980-12344	T 7	Transponder Key Amplifier	90980-12092
P11	Power Window Regulator Motor (Front RH)		T 8	Transponder Key ECU	90980-11911
P12	Power Window SW (Front Passenger's Side)	90980-11947			

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
T 9	Tweeter (LH)	90980-12304	W 1	Windshield Washer Motor	90980-11019
T10	Tweeter (RH)		W 2	Windshield Wiper Motor	90980-11599
T11	Tire Pressure Warning ECU	90980-12183	Z 1	Option Connector (Front Fog Lamp)	90980-11007
T12	Tire Pressure Warning Antenna and Receiver	90980-12366	Z 2	Option Connector (Front Fog Lamp SW)	90980-12336
U 1	Unlock Warning SW (A/T)	90980-12334	Z 3	Option Connector (TVIP)	90980-10870
	Unlock Warning SW (M/T)	90980-12342	Z 4	Option Connector (IPOD Unit)	90980-12155
V 1	VSV (Purge)	90980-12634	Z 5	Option Connector (Radio Receiver Assembly)	90980-12423


Note: Not all of the above part numbers of the connector are established for the supply.

* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

HOW TO READ THIS SECTION

210

SCION tC (EM0300U)

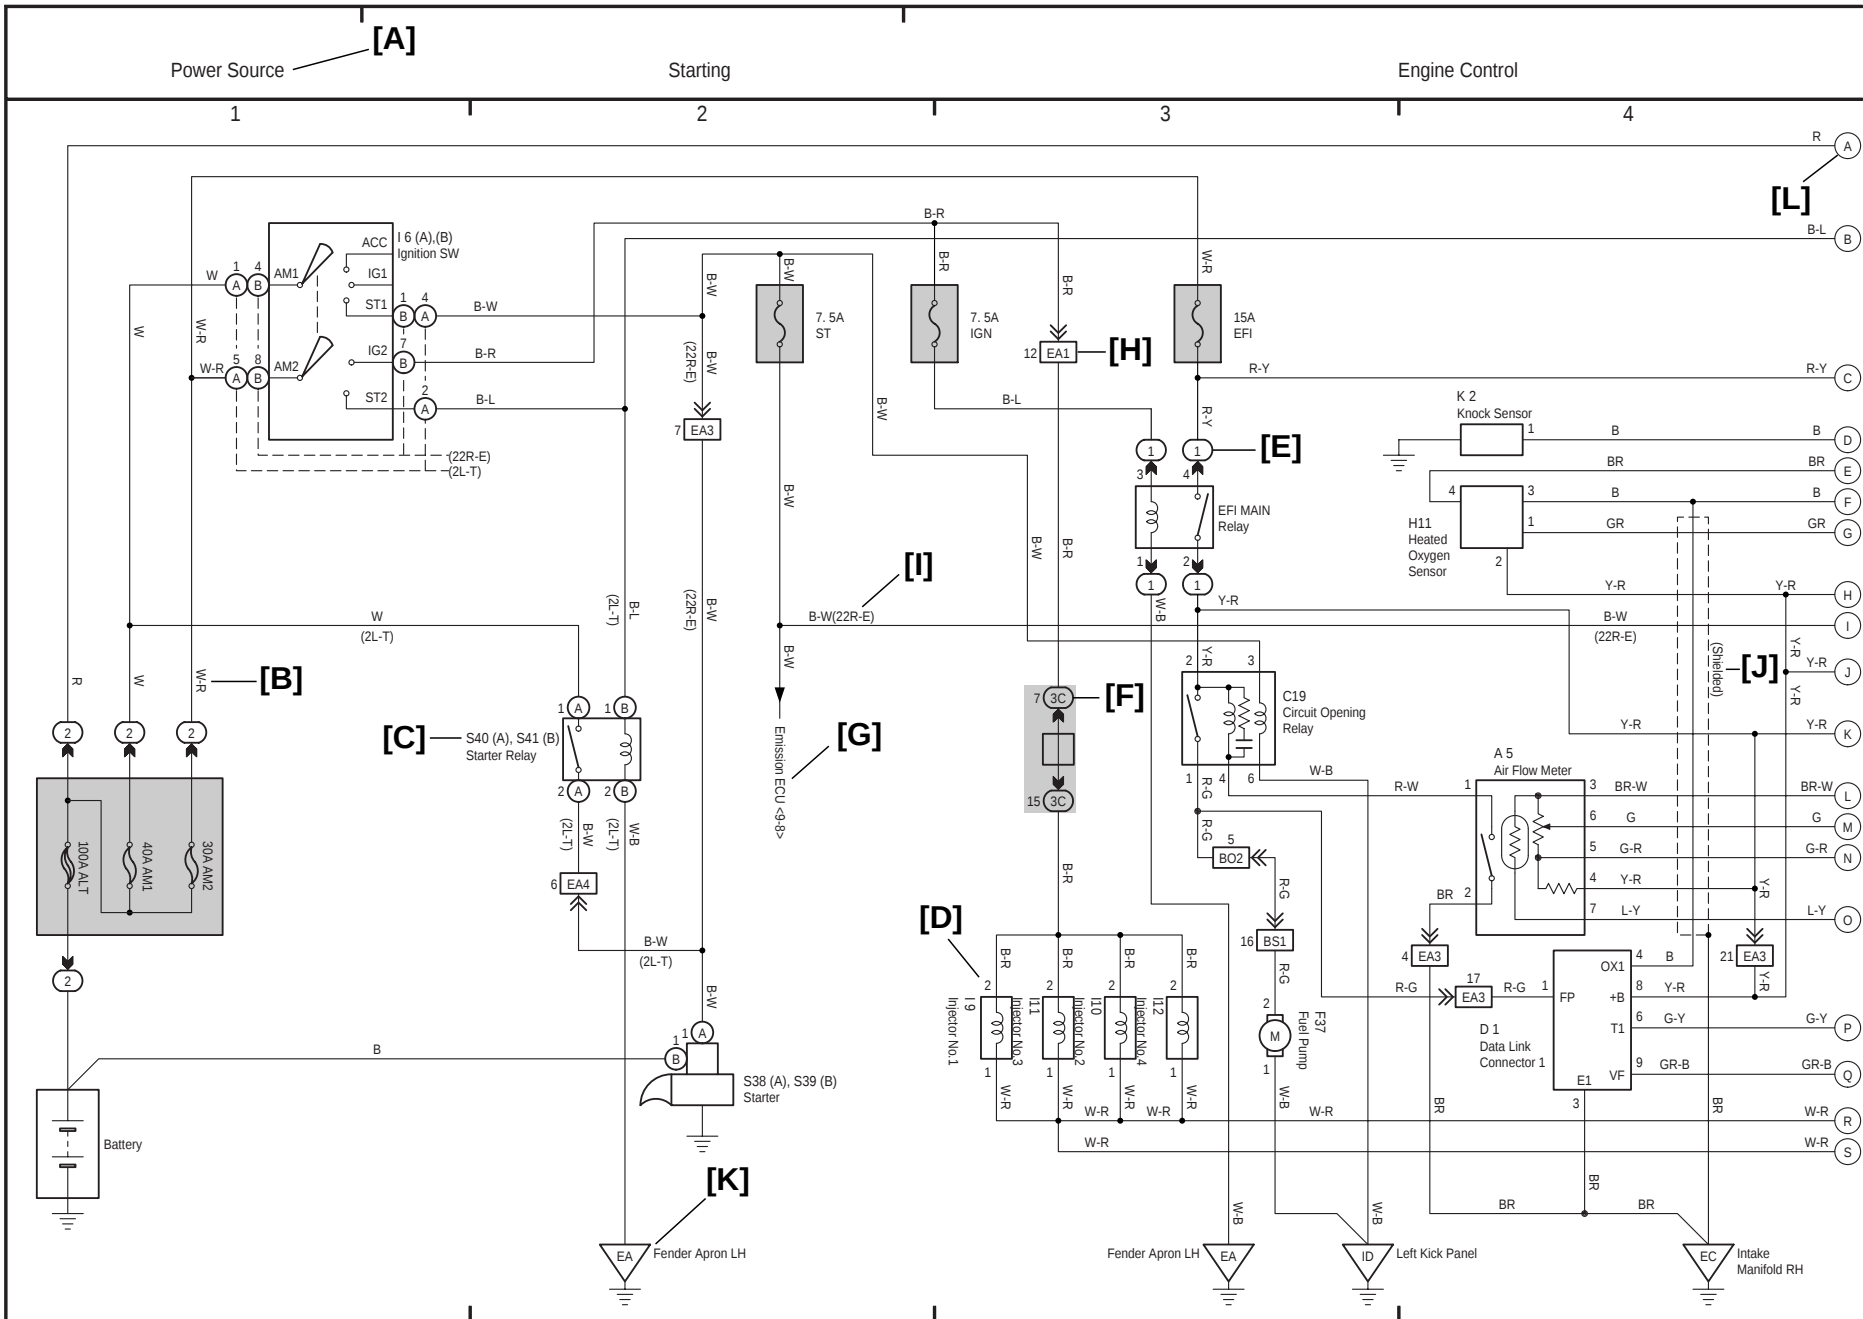

[A] : System Title


[B] : Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

B = Black W = White BR = Brown
 L = Blue V = Violet SB = Sky Blue
 R = Red G = Green LG = Light Green
 P = Pink Y = Yellow GR = Gray
 O = Orange

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

Example: L – Y

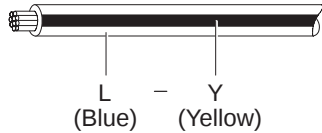


[C] : The position of the parts is the same as shown in the wiring diagram and wire routing.


[D] : Indicates the pin number of the connector. The numbering system is different for female and male connectors.

Example : Numbered in order from upper left to lower right

Numbered in order from upper right to lower left

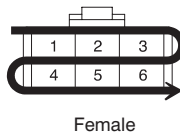

Female

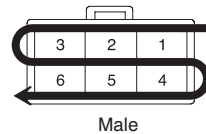

Male


The numbering system for the overall wiring diagram is the same as above

[E] : Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

Example : ① Indicates Relay Block No.1


[F] : Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts.

Example:

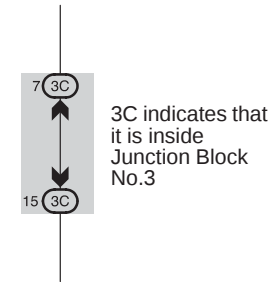

[G] : Indicates related system.

[H] : Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↗). Outside numerals are pin numbers.

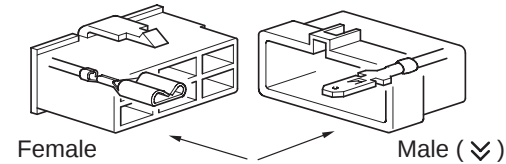

[I] : () is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

[J] : Indicates a shielded cable.



[K] : Indicates and located on ground point.

[L] : The same code occurring on the next page indicates that the wire harness is continuous.

SYSTEM INDEX

SYSTEMS	LOCATION	SYSTEMS	LOCATION
ABS	16-2	Multiplex Communication System (CAN)	3-15
Air Conditioning	25-2	Option Connector (Front Fog Light)	6-4
Audio System	22-3	Option Connector (TVIP)	15-7
Back Door Opener	15-6	Power Outlet	22-2
Back-Up Light	11-3	Power Source	1-25-1
Charging	2-3	Power Window (w/ Jam Protection)	13-2
Cigarette Lighter	21-4	Power Window (w/o Jam Protection)	14-2
Combination Meter	23-2	Radiator Fan and Condenser Fan	24-3
Cruise Control	5-2	Rear Window Defogger	21-2
Door Lock Control	15-2	Remote Control Mirror	21-3
Electronically Controlled Transmission and A/T Indicator	4-2	Seat Belt Warning	19-2
Engine Control	3-5	Shift Lock	20-2
Engine Immobiliser System	3-2	Sliding Roof	20-4
Front Wiper and Washer	12-2	SRS	18-2
Headlight	6-2	Starting	1-2
Horn	2-4	Stop Light	11-4
Ignition	1-3	Taillight	8-2
Illumination	9-2	Tire Pressure Warning System	17-3
Interior Light	10-2	Turn Signal and Hazard Warning Light	7-2
Key Reminder	19-4	Wireless Door Lock Control	15-8
Light Reminder	19-4		






(Cont. next page)


3 tC

216


SCION tC (EM0300U)

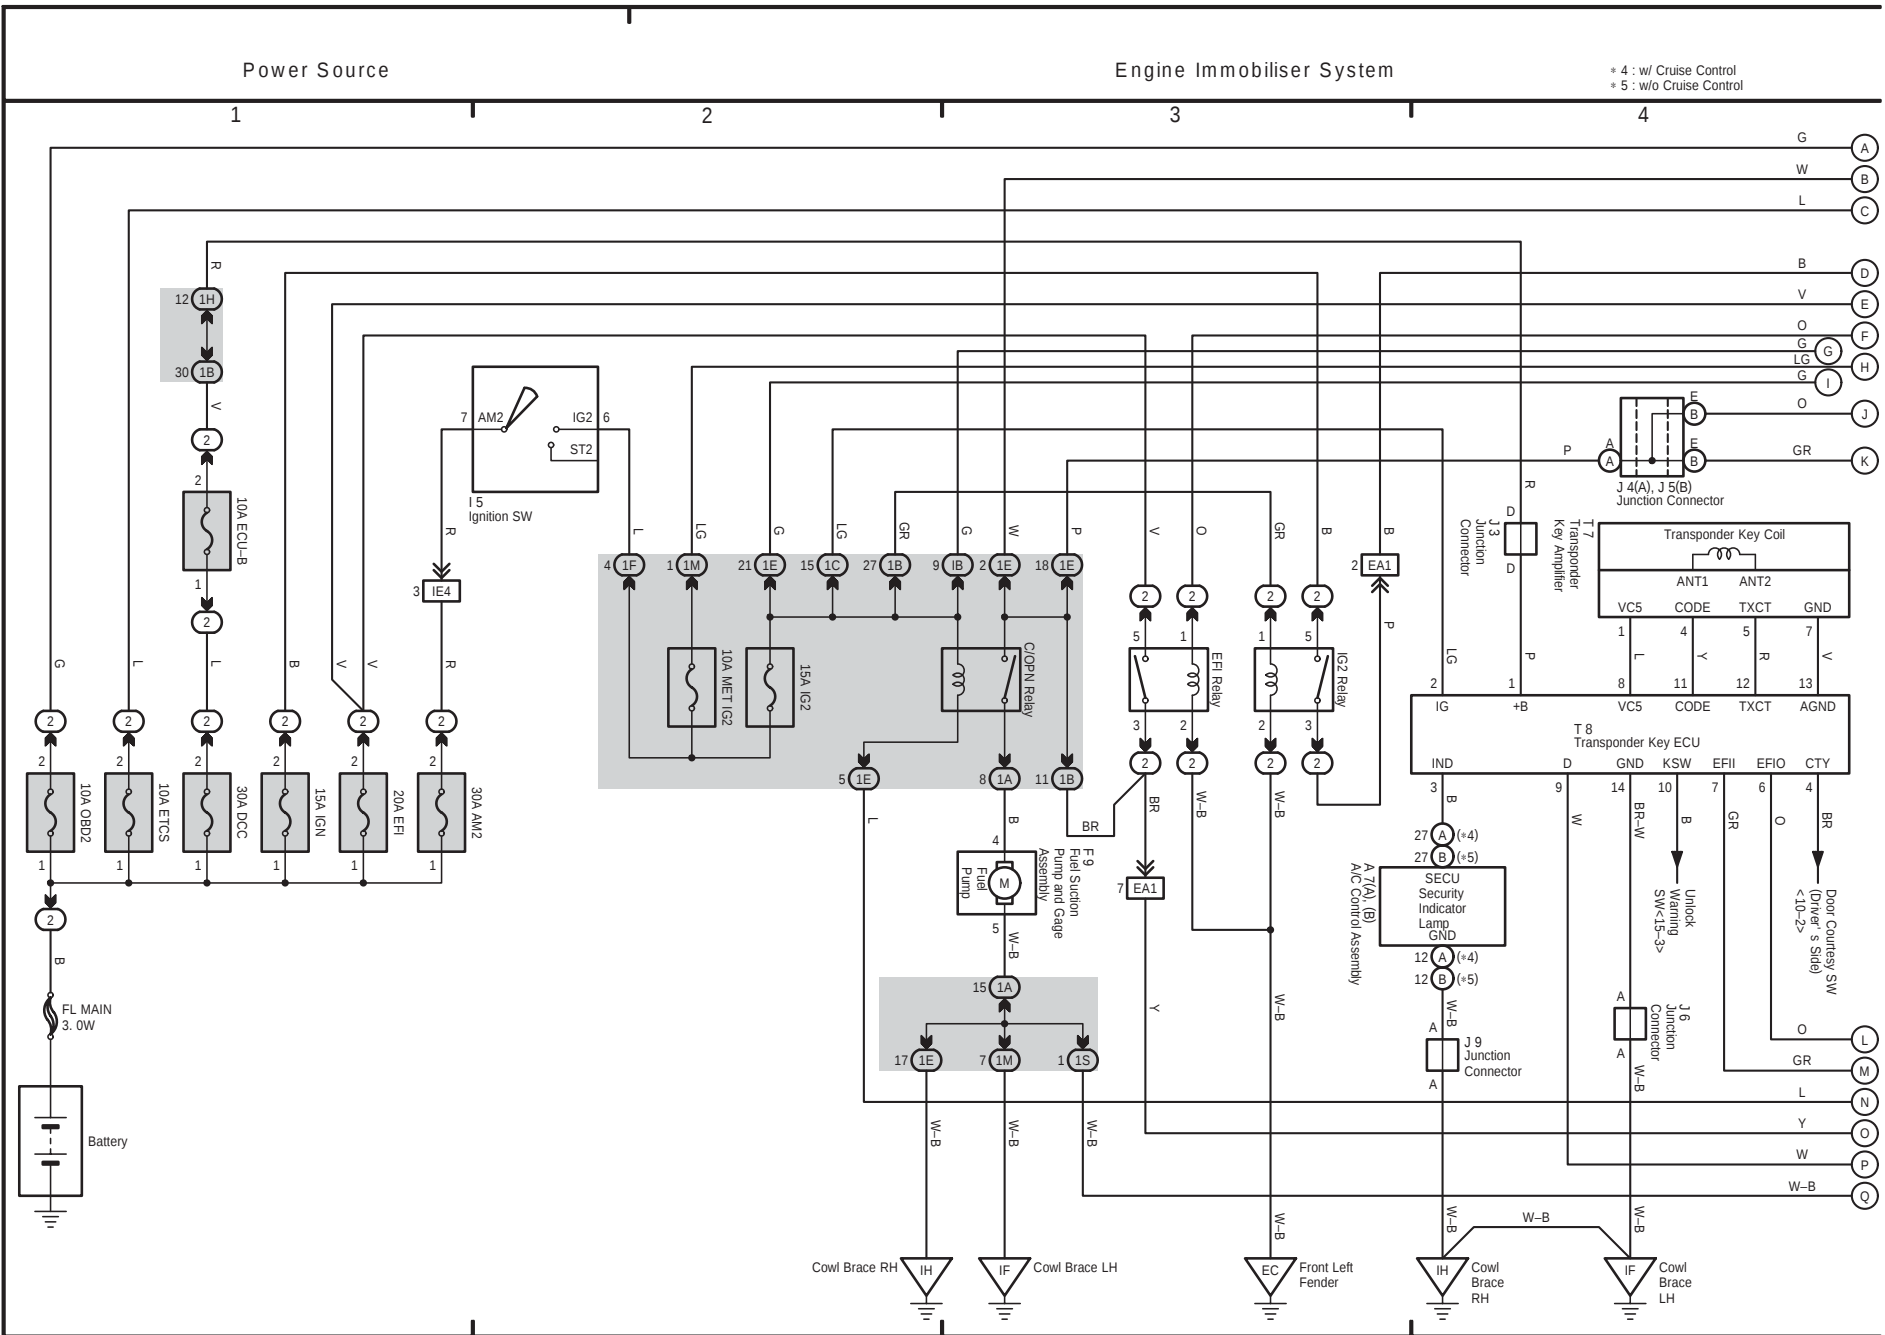



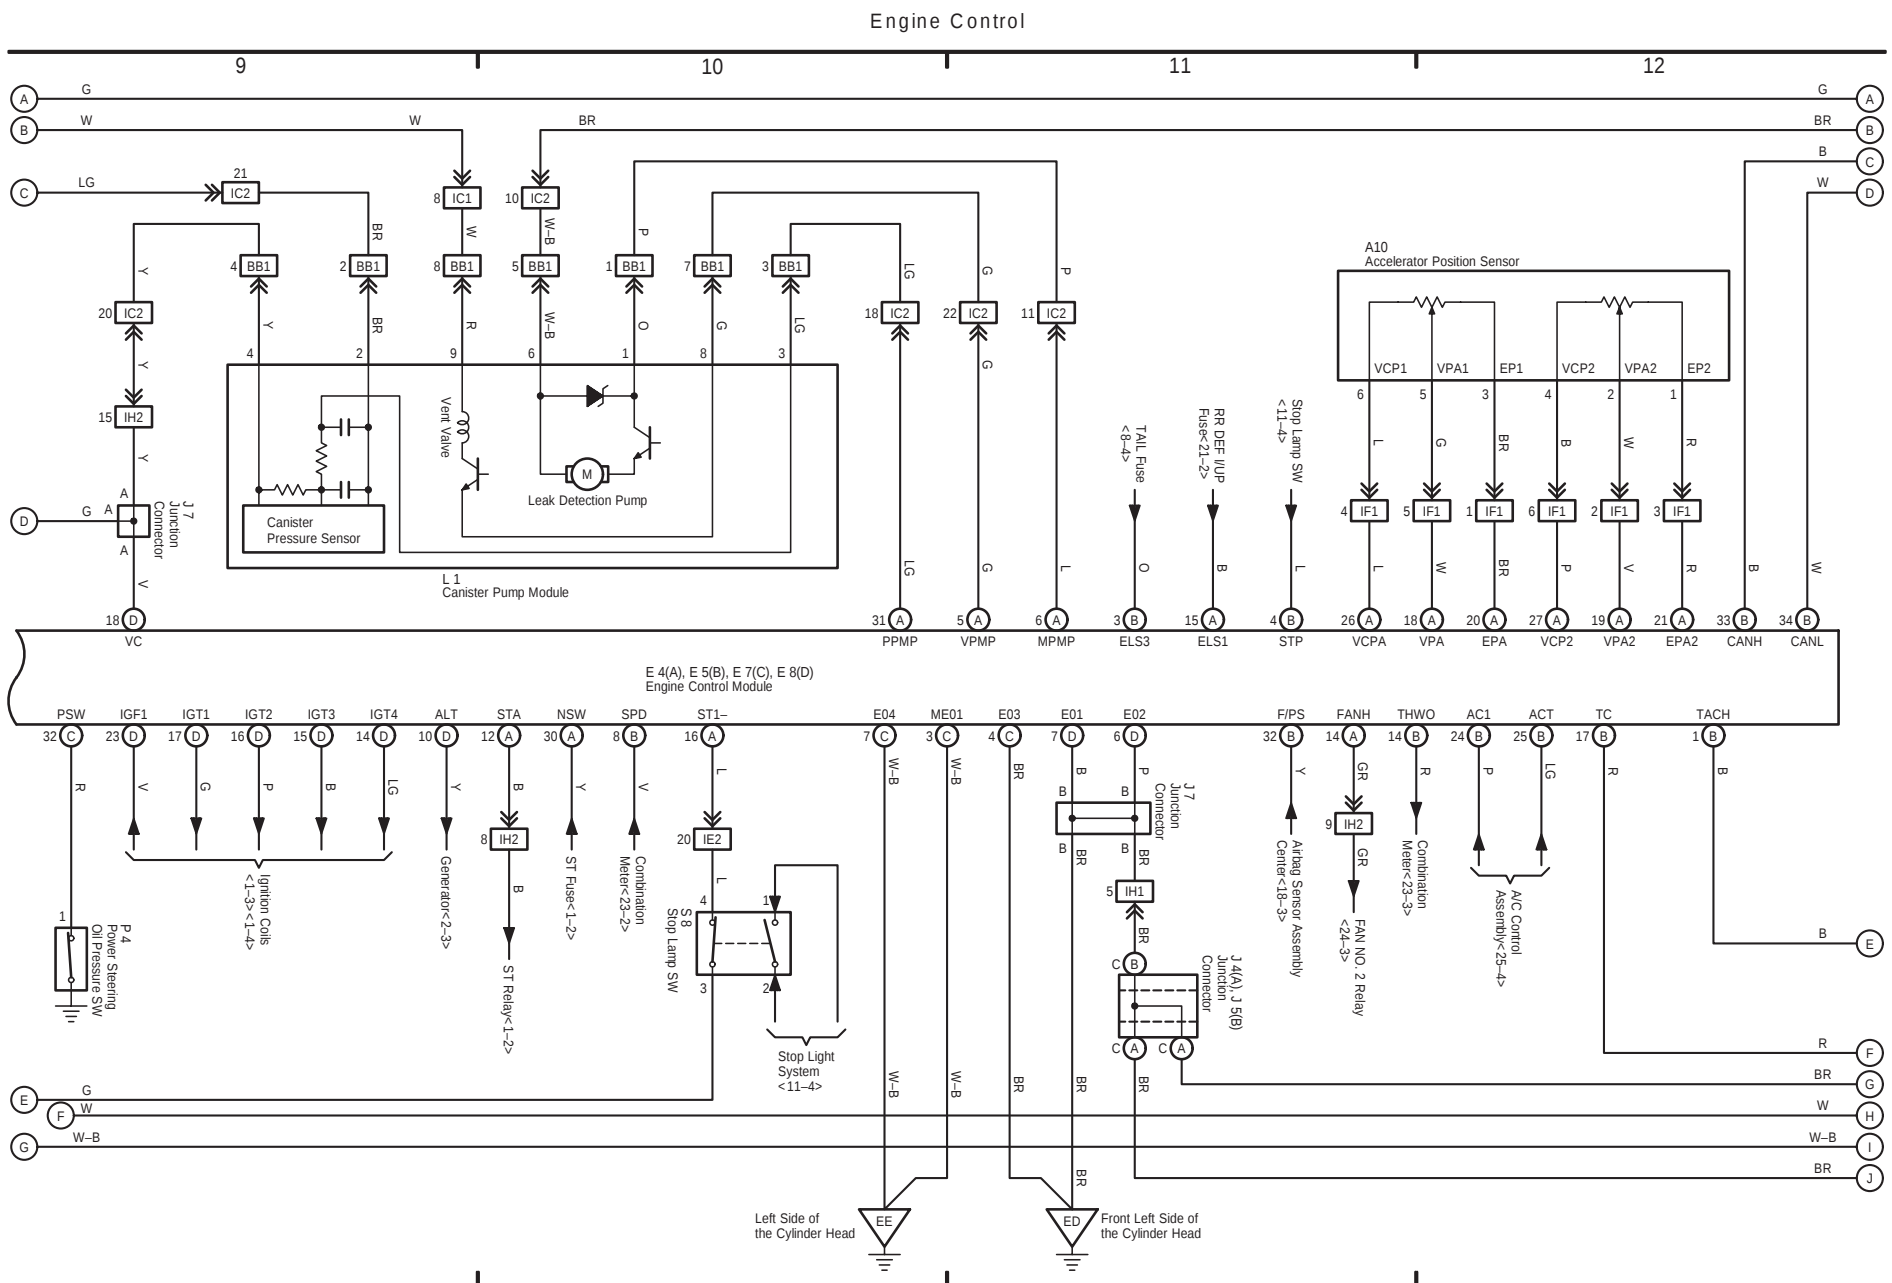

3 tc (Cont' d)

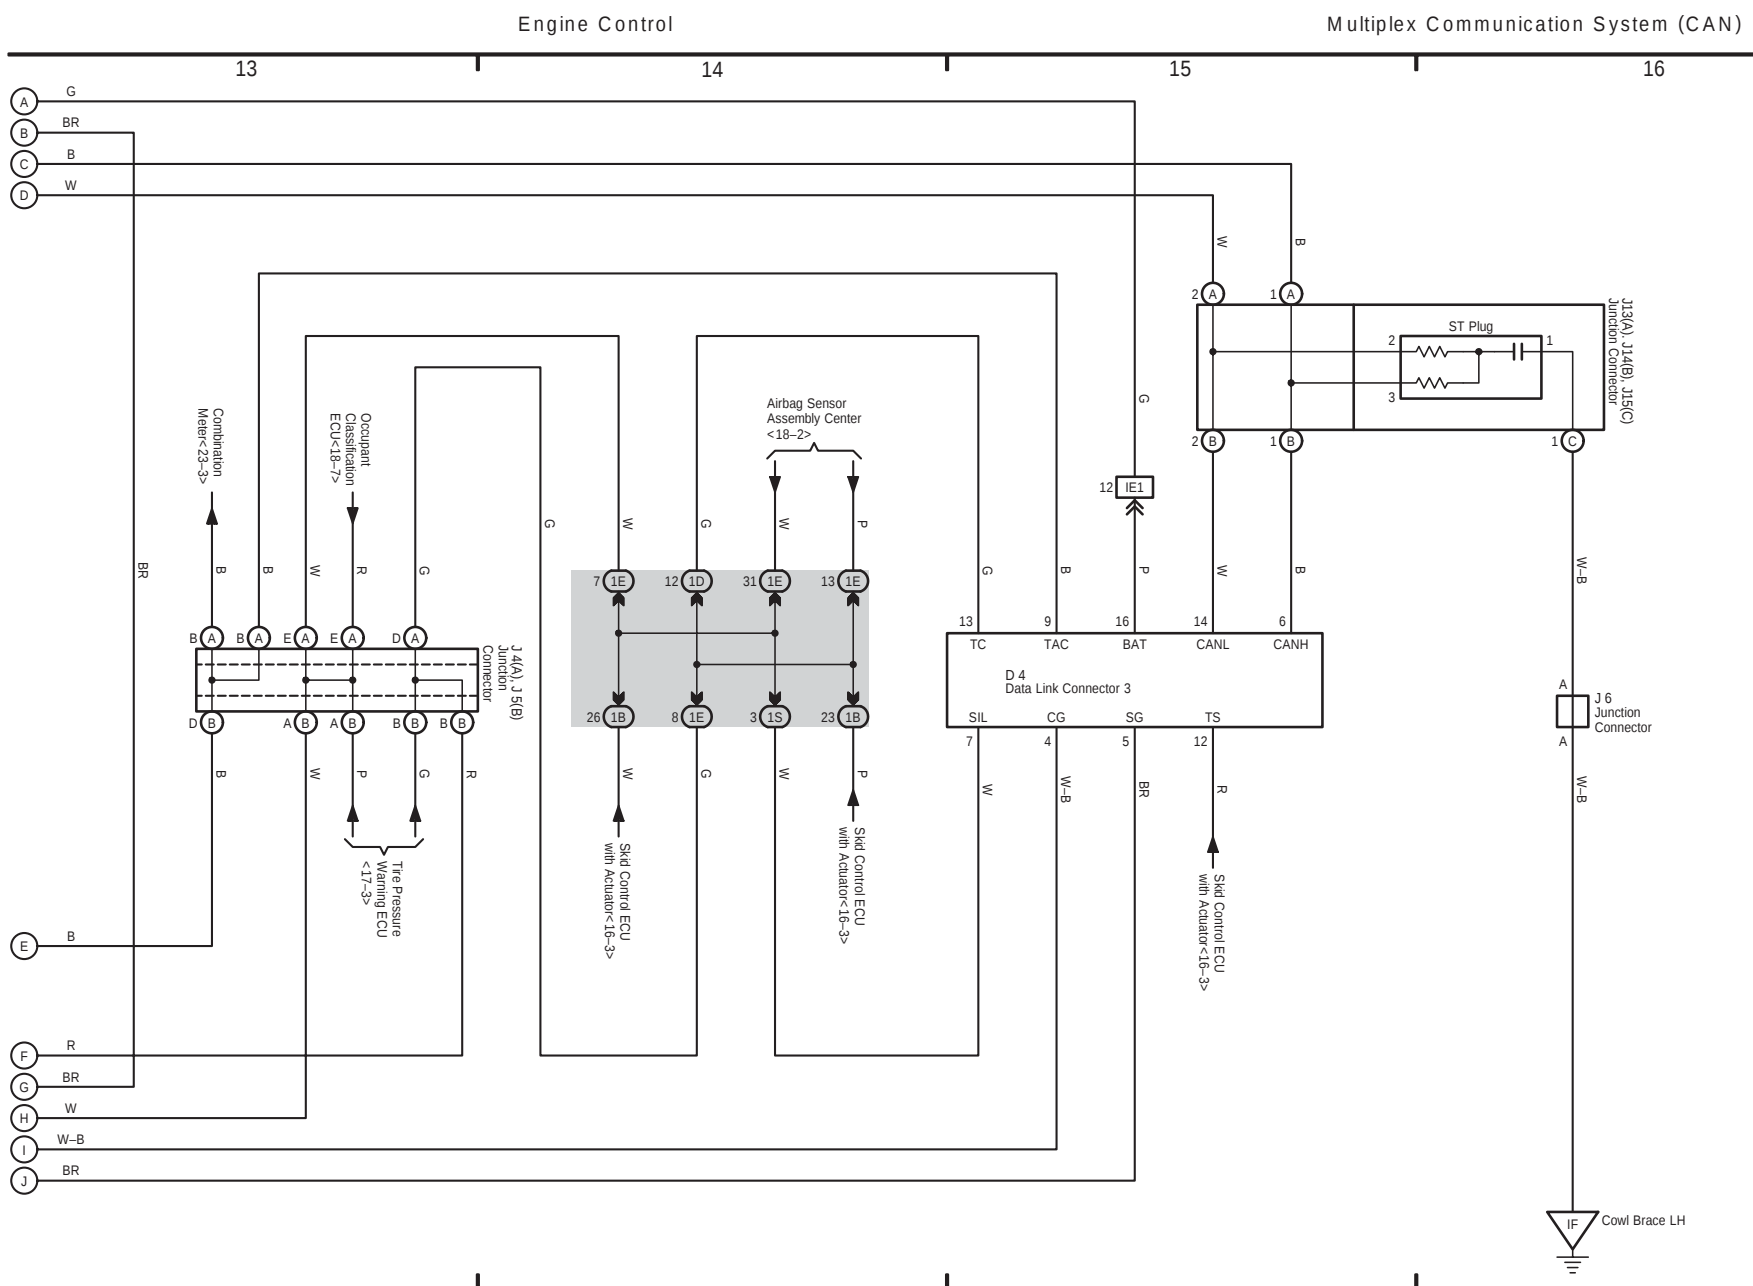


SCION tc (EM0300U)

(Cont. next page)

4 tC

Power Source

Electronically Controlled Transmission and A/T Indicator

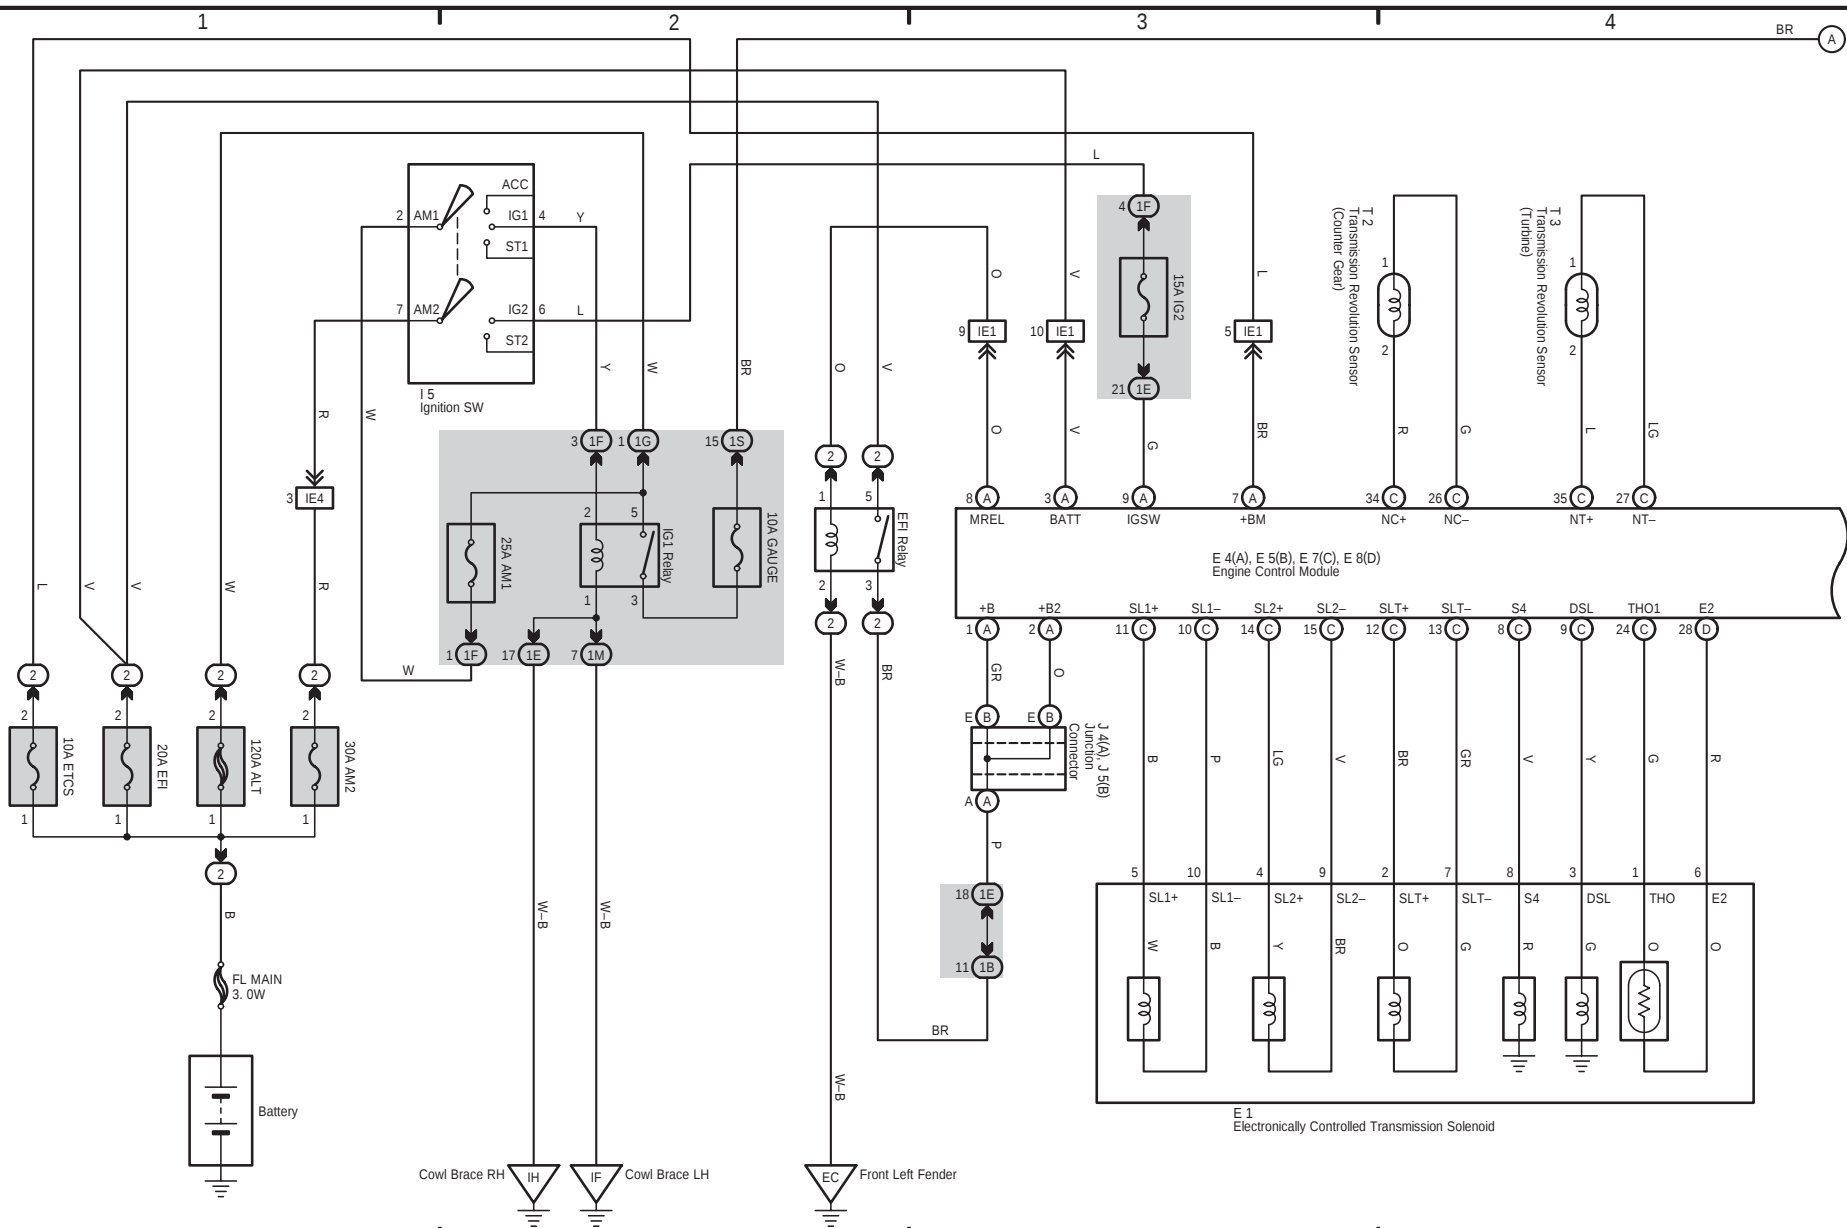

Timeline diagram showing a sequence of events from 5 to 8. At time 5, event A occurs. Between 5 and 6, event BR occurs. At time 6, event A occurs. Between 6 and 7, event BR occurs. At time 7, event A occurs. Between 7 and 8, event BR occurs. At time 8, event A occurs. The timeline ends with event BR.

Engine Control System
<3-7> <3-8> <3-9> <3-10> <3-11> <3-12>

STP 4(B) NSW 30(A) STA 12(A) SPD 8(B) THW 32(D) GE01 8(D) M+ 5(D) M- 4(D) VTA1 20(D) VTA2 19(D) VC 18(D) TC 17(B) VCPA 26(A) VPA 18(B) EPA 20(A) VCP2 27(A) VPA2 19(A) EPA2 21(A)

E 4(A), E 5(B), E 7(C), E 8(D)
Engine Control Module

VG 28(C) E2G 30(C) THA 29(C)

Engine Control System
<3-7>

E04 7(C) ME01 3(C) EOM 29(A) E1 3(D) E03 4(C) E02 6(D) E01 7(D)

R 11(B) D 21(B) 3 19(B) 2 10(B) L 9(B)

W-B W-B

IH1 6

IH1 5

J 7 Junction Connector

J 4(A), J 5(B) Junction Connector

EE Left Side of the Cylinder Head


ED Front Left Side of the Cylinder Head

ED Front Left Side of the Cylinder Head

BR

M OVERALL ELECTRICAL WIRING DIAGRAM

Electronically Controlled Transmission and A/T Indicator

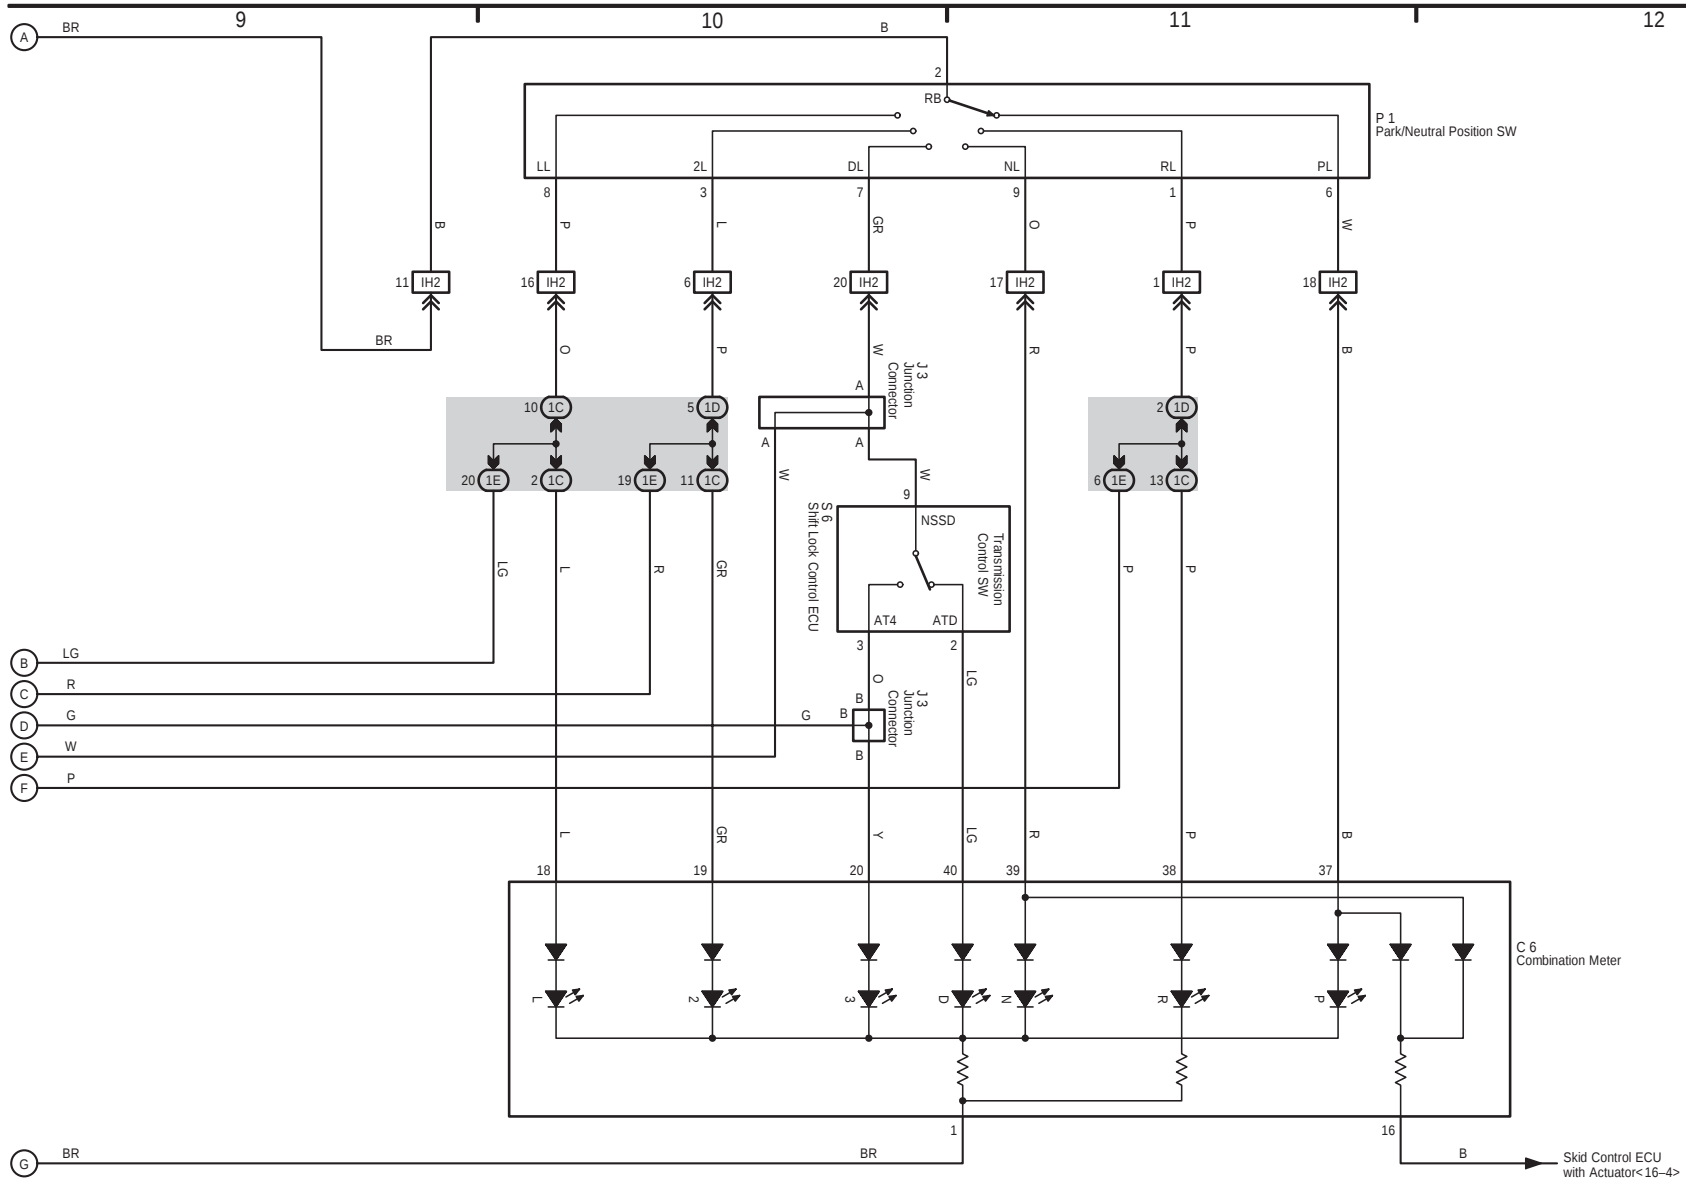


4 tC (Cont' d)

(Cont. next page)


5 tC

224


SCION tC (EM0300U)

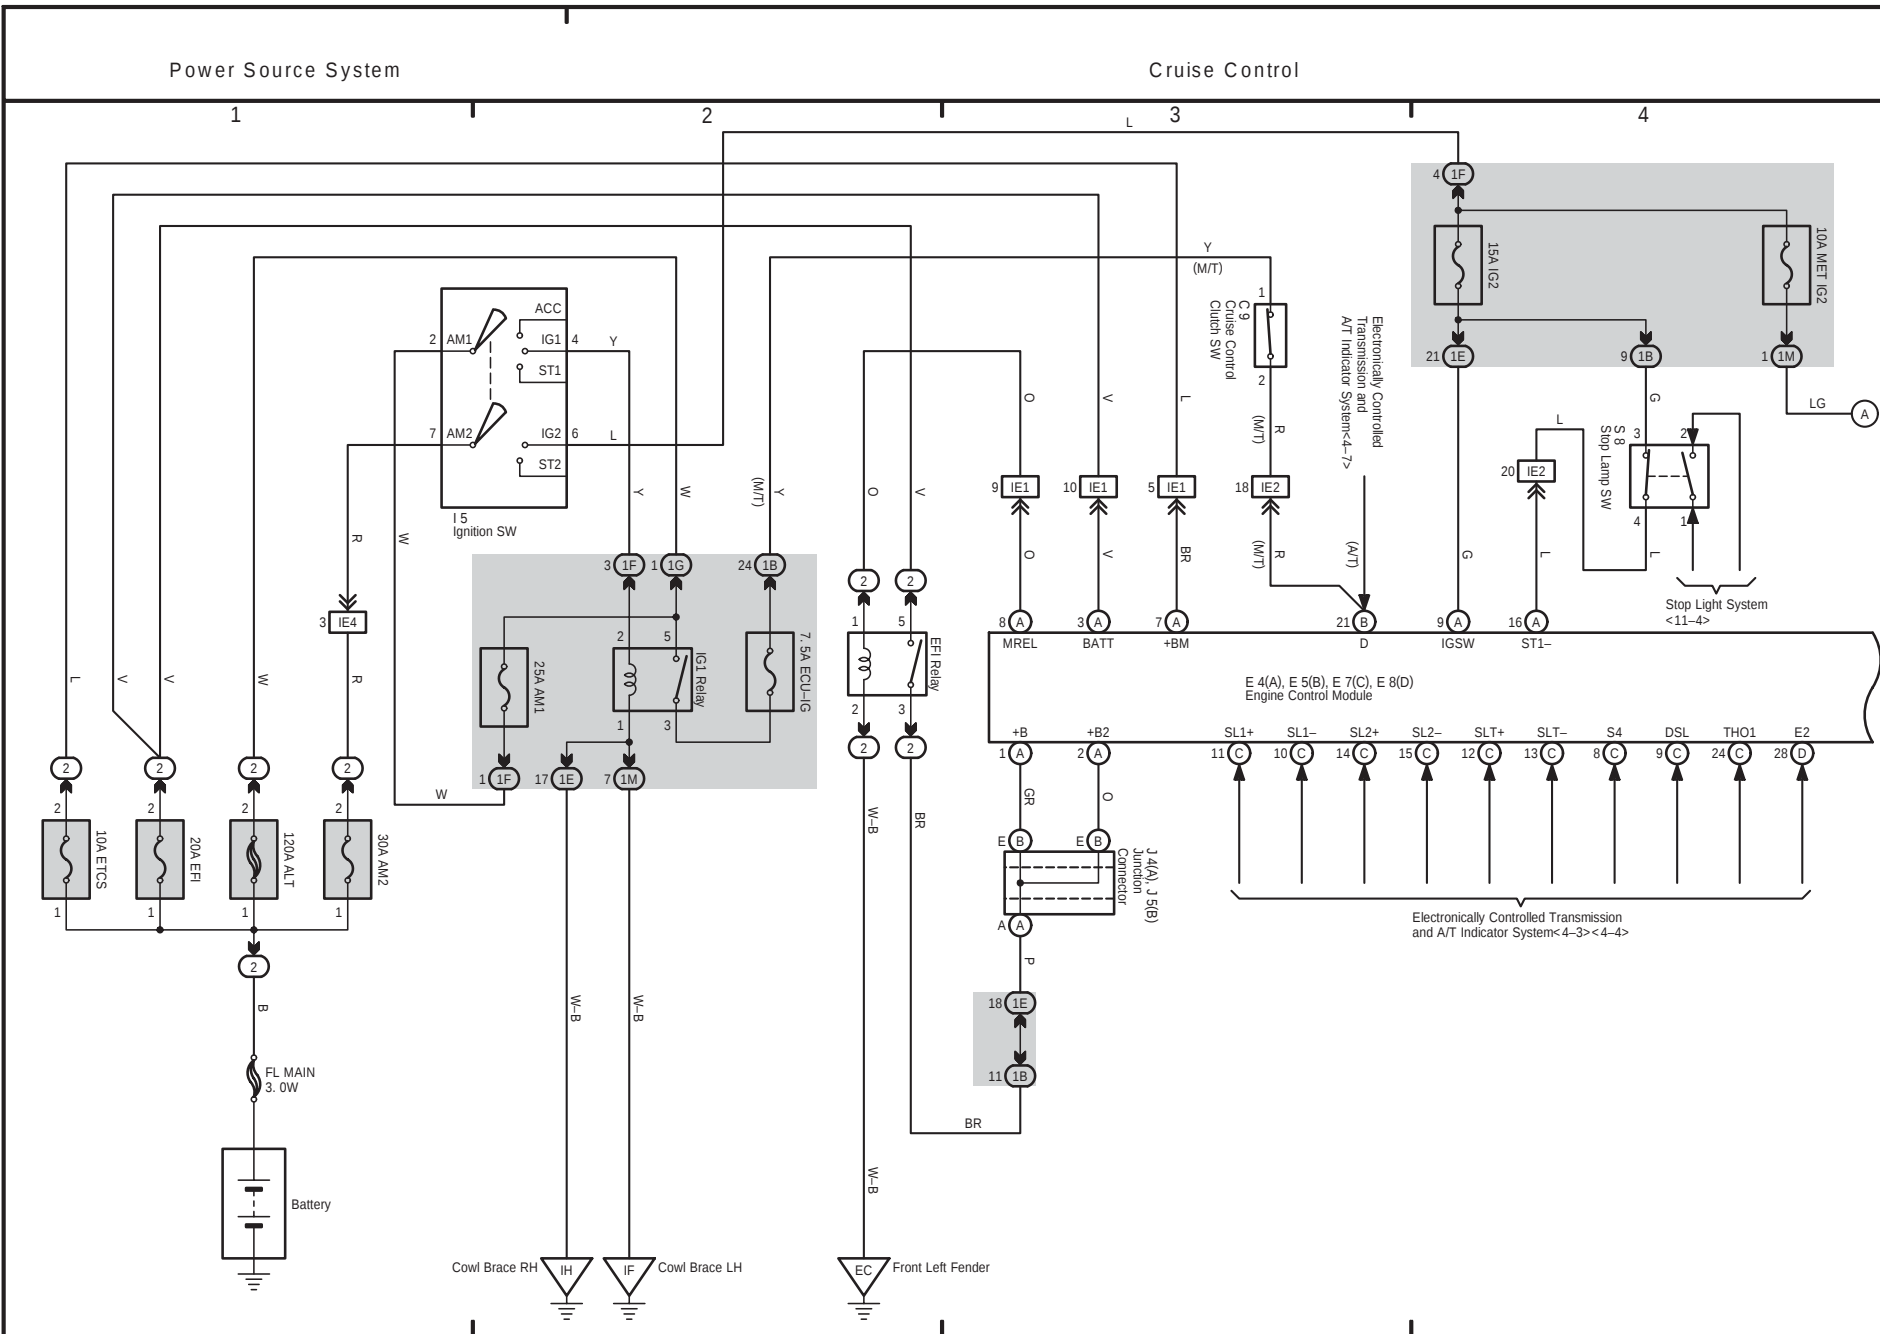


Cruise Control

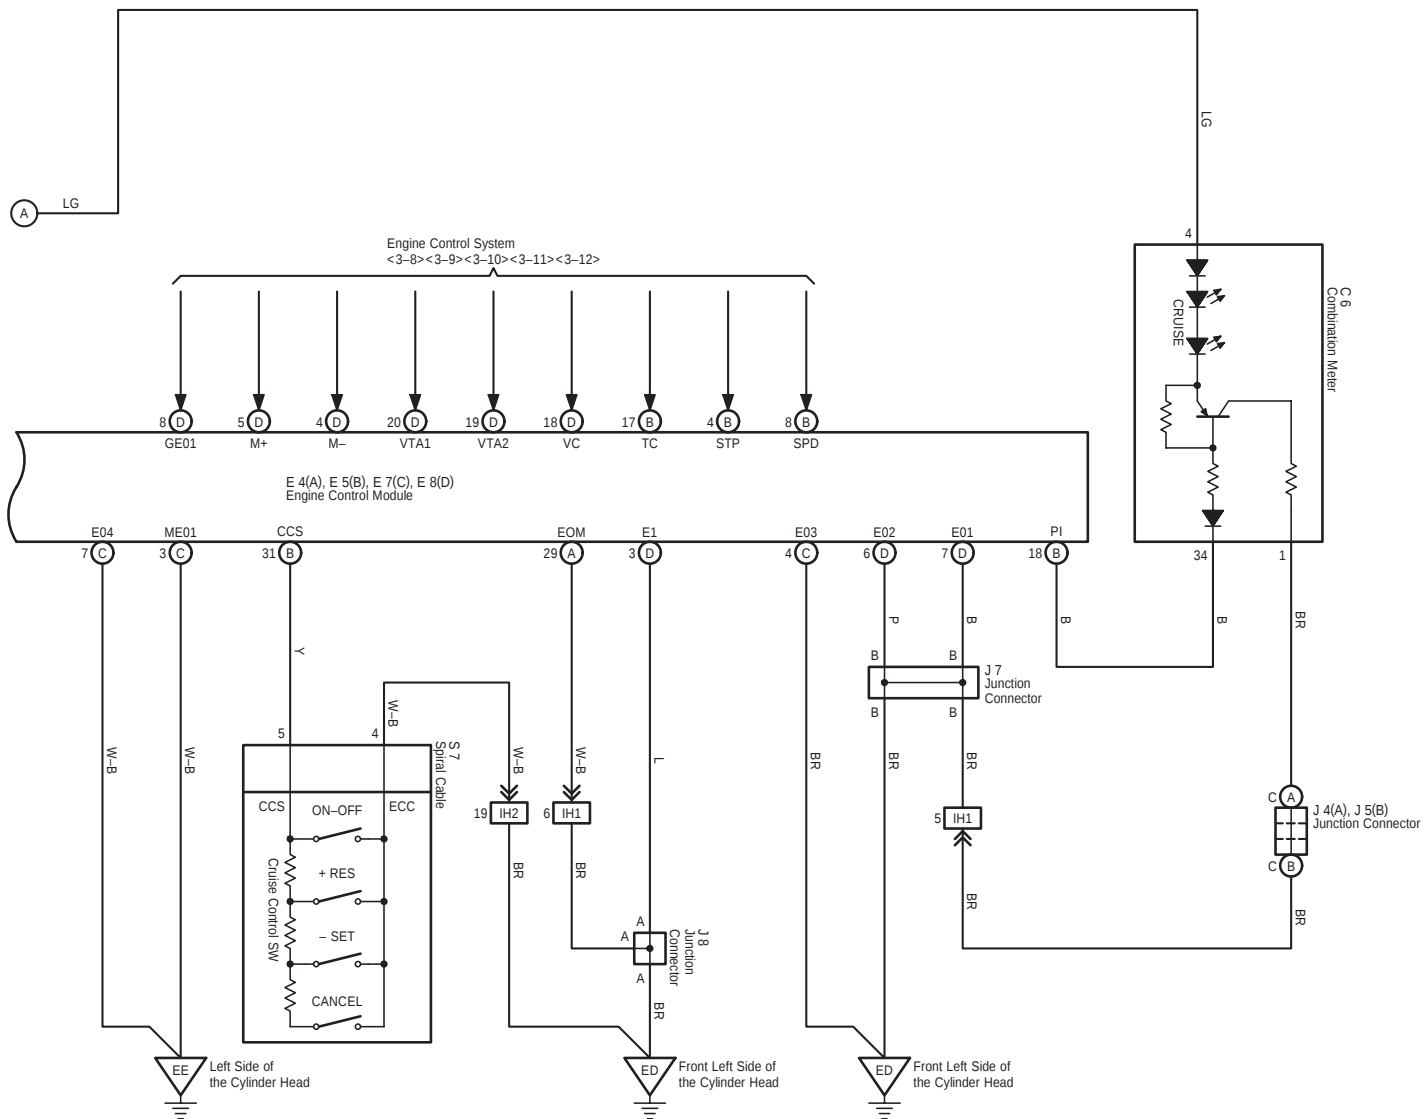


M OVERALL ELECTRICAL WIRING DIAGRAM

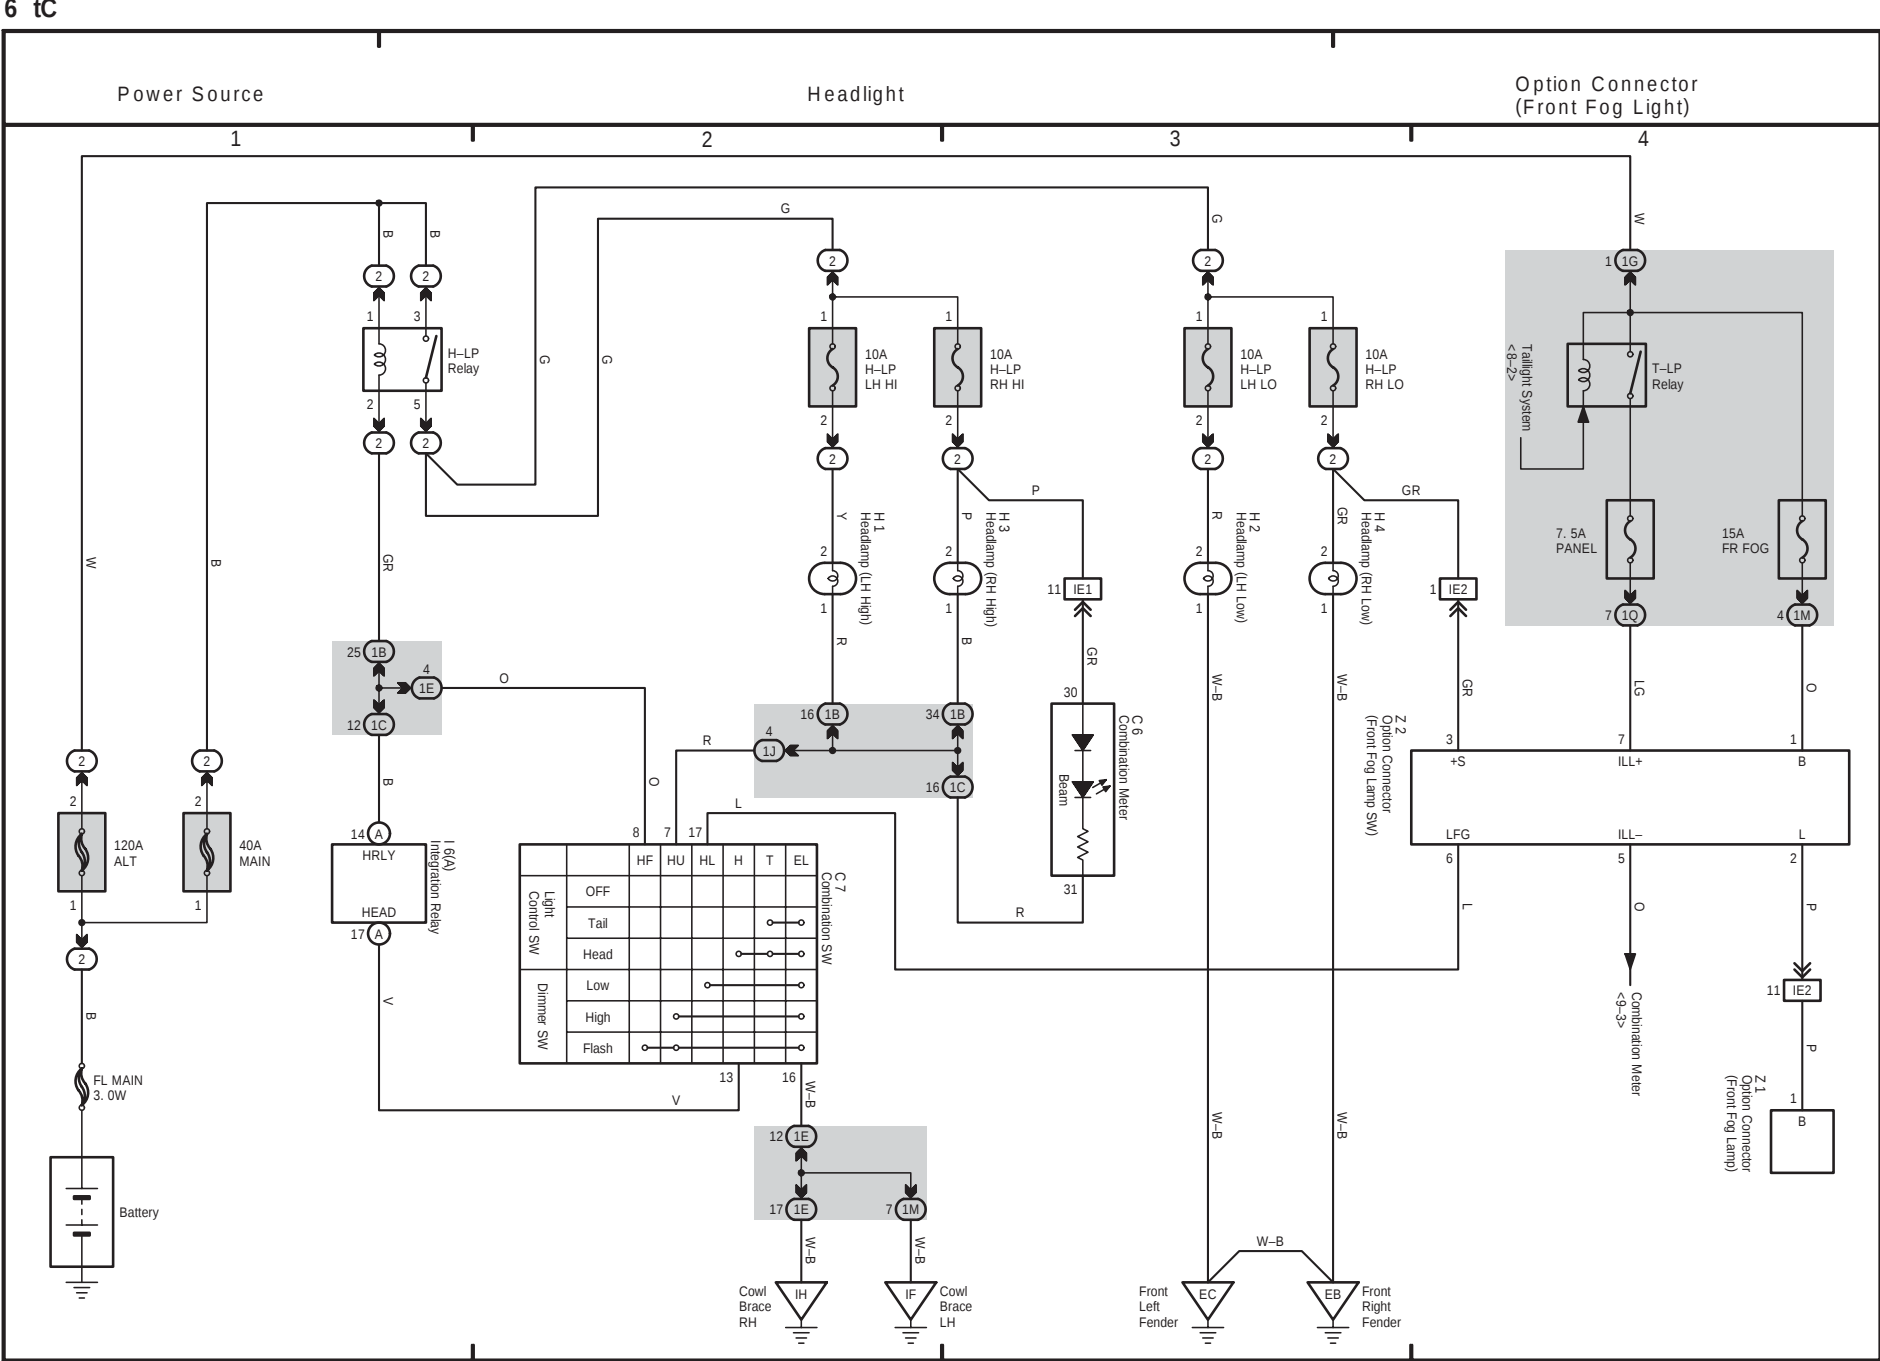


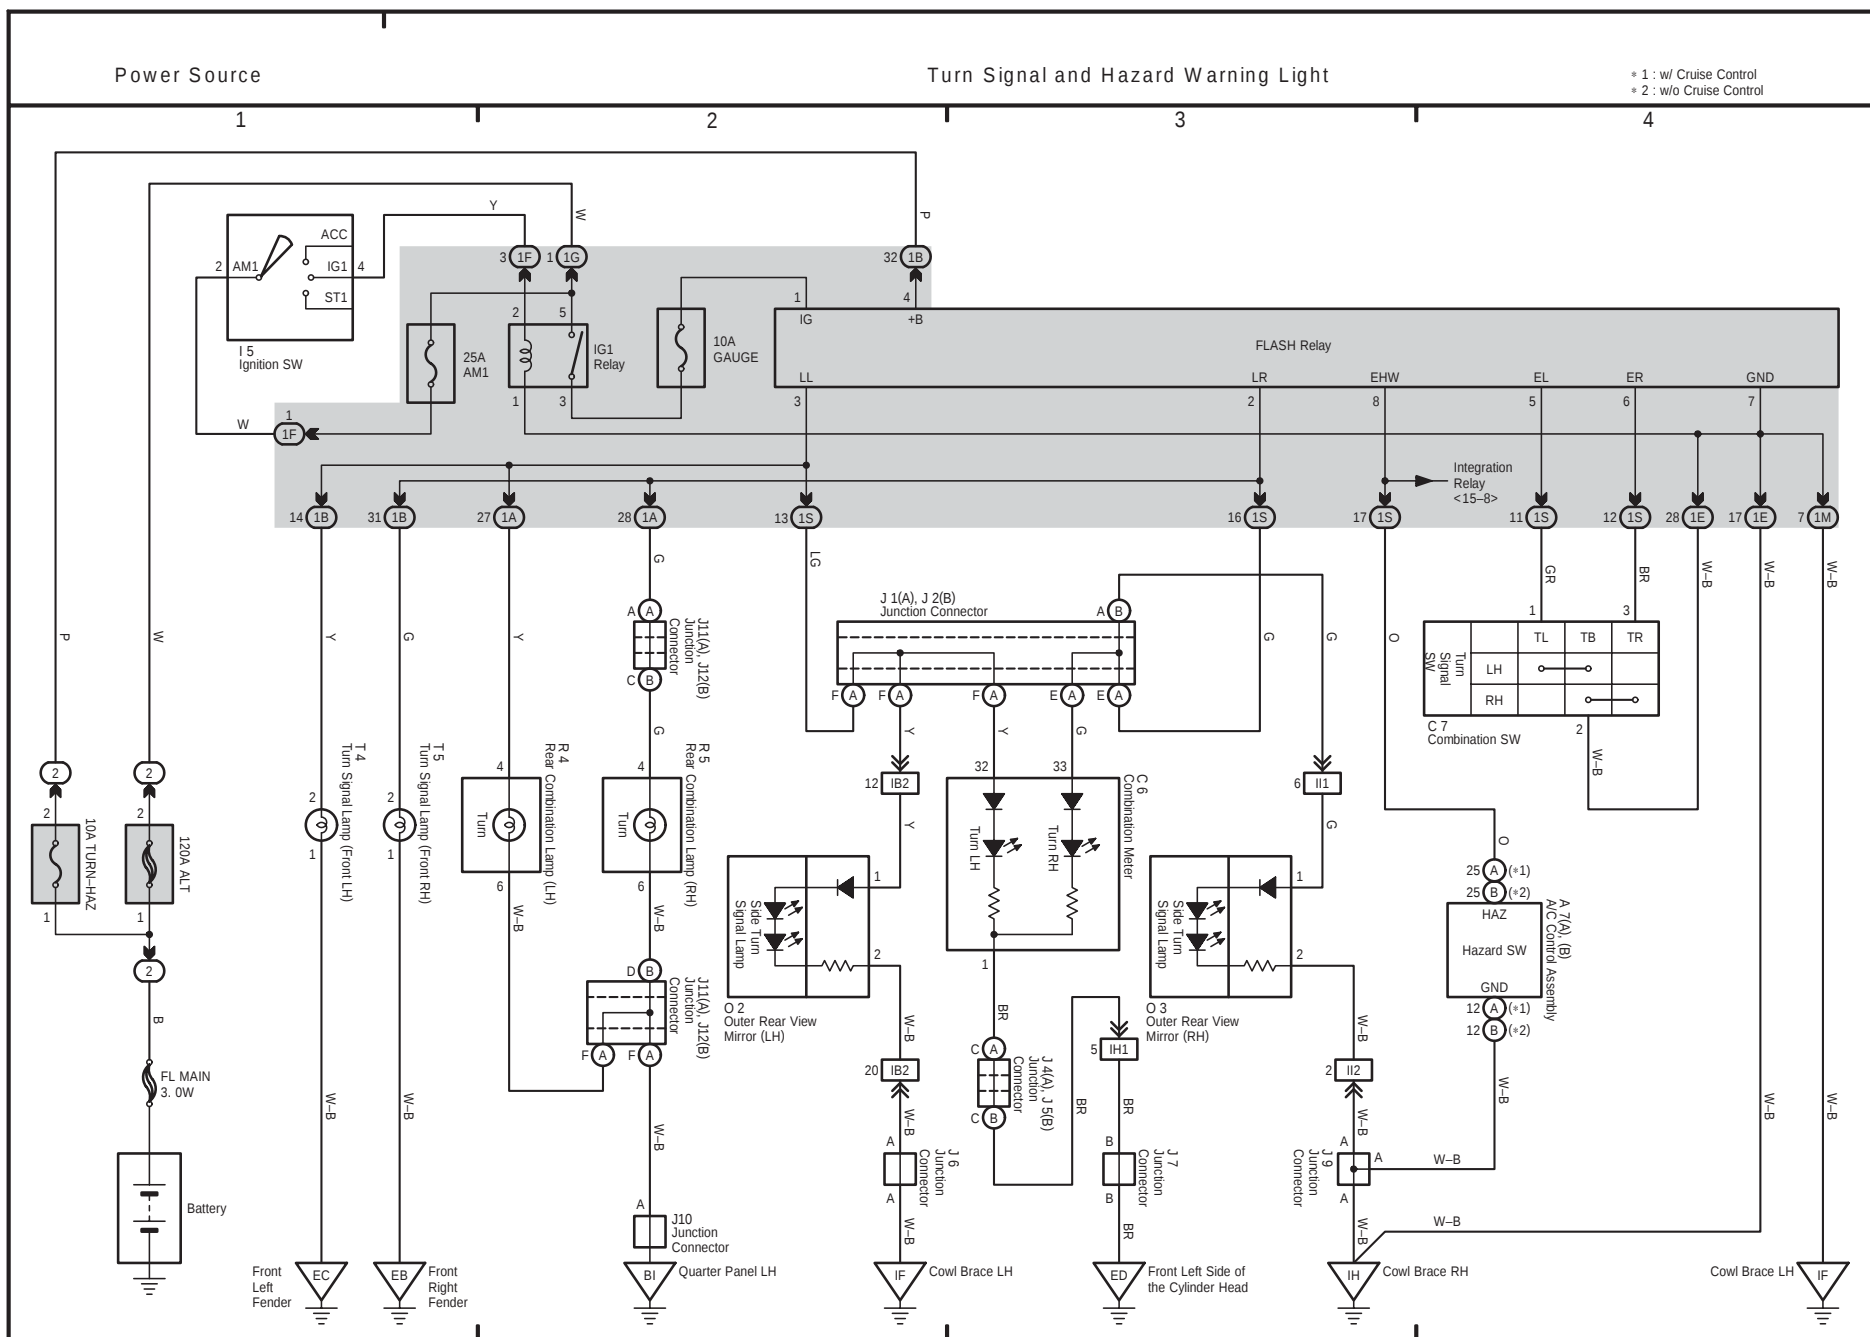


M OVERALL ELECTRICAL WIRING DIAGRAM


8 tC

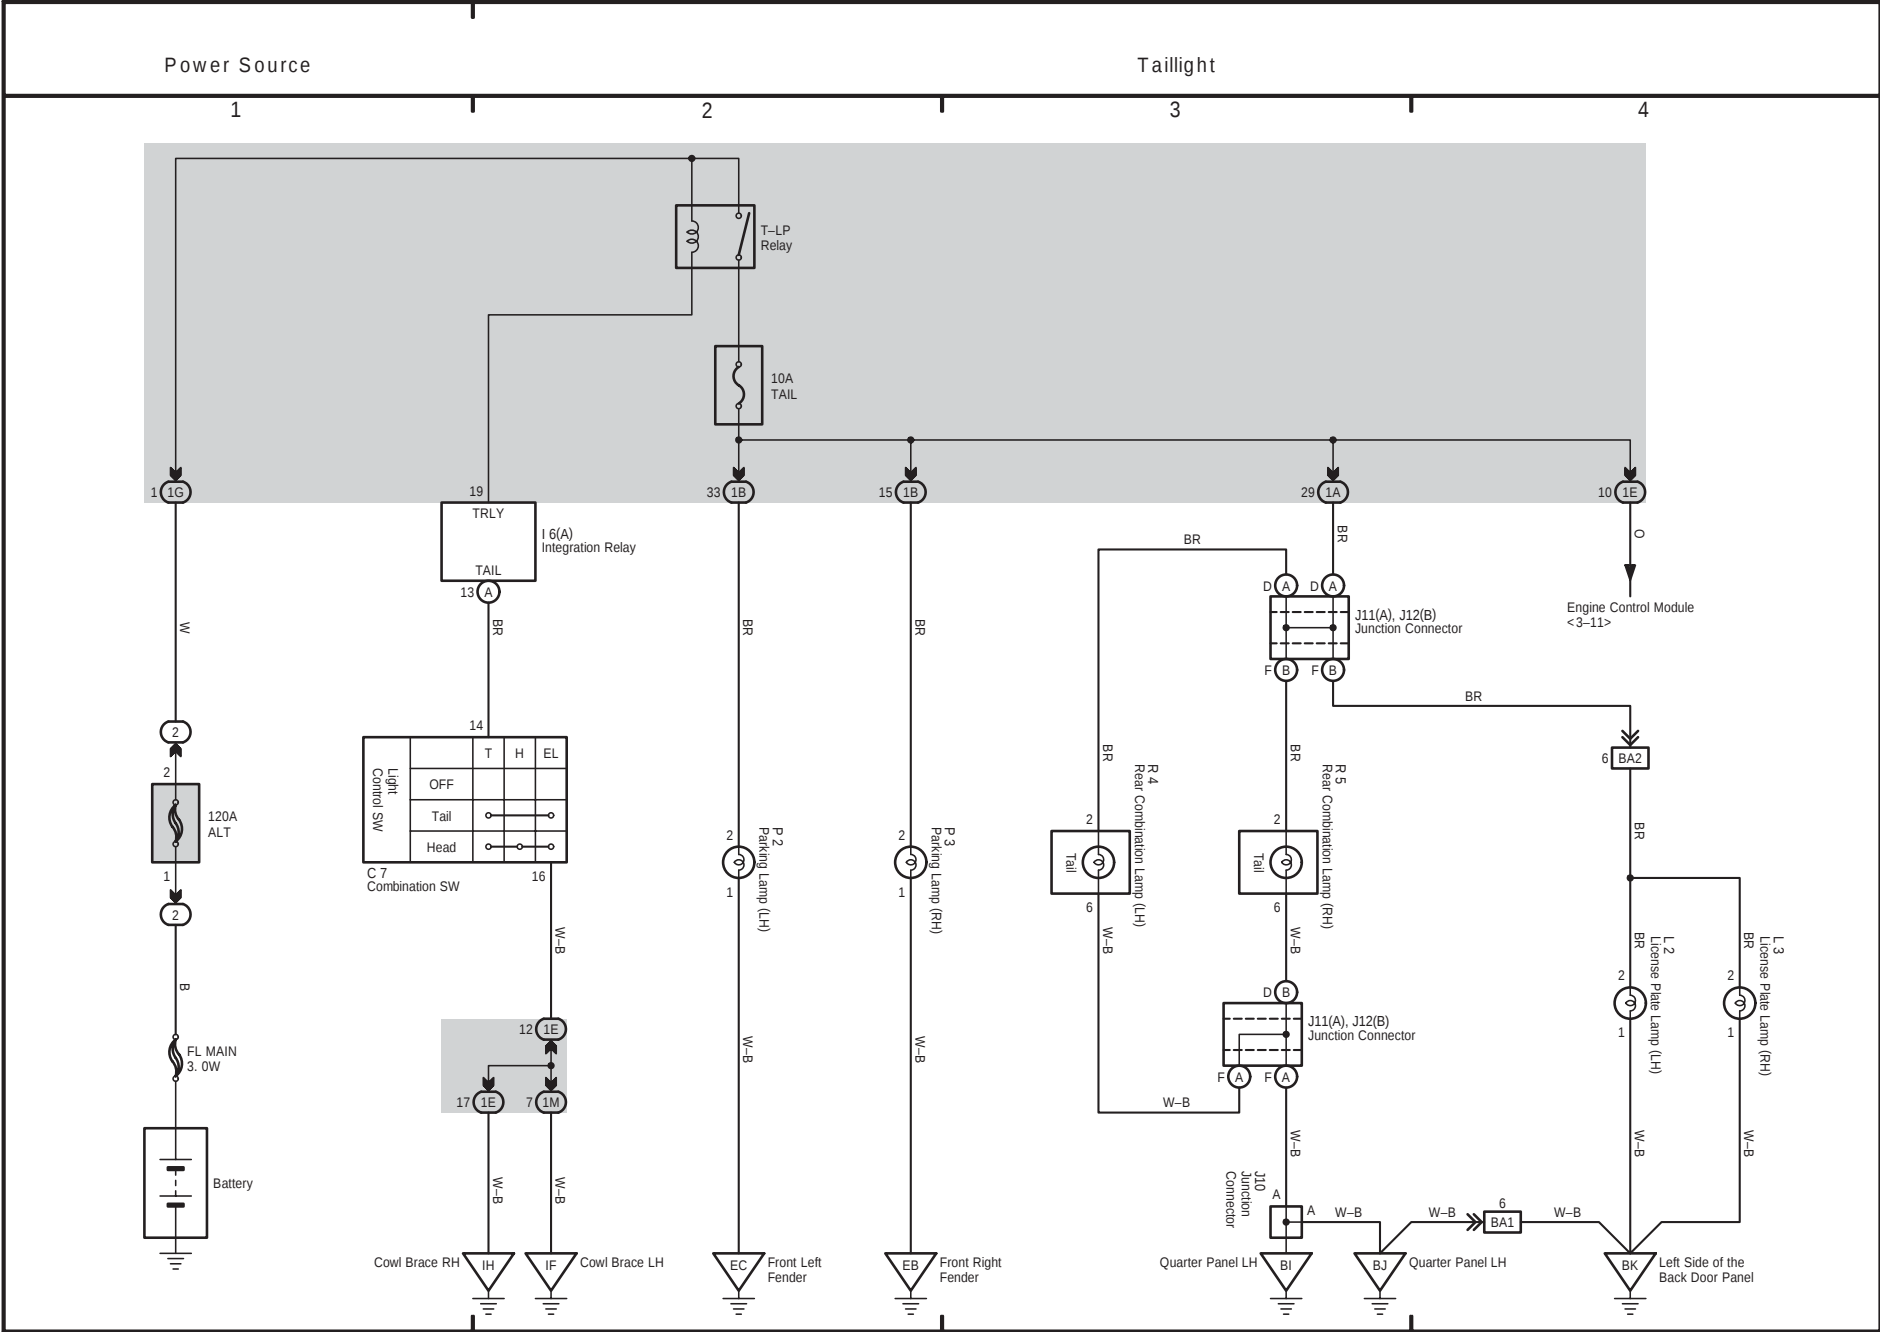

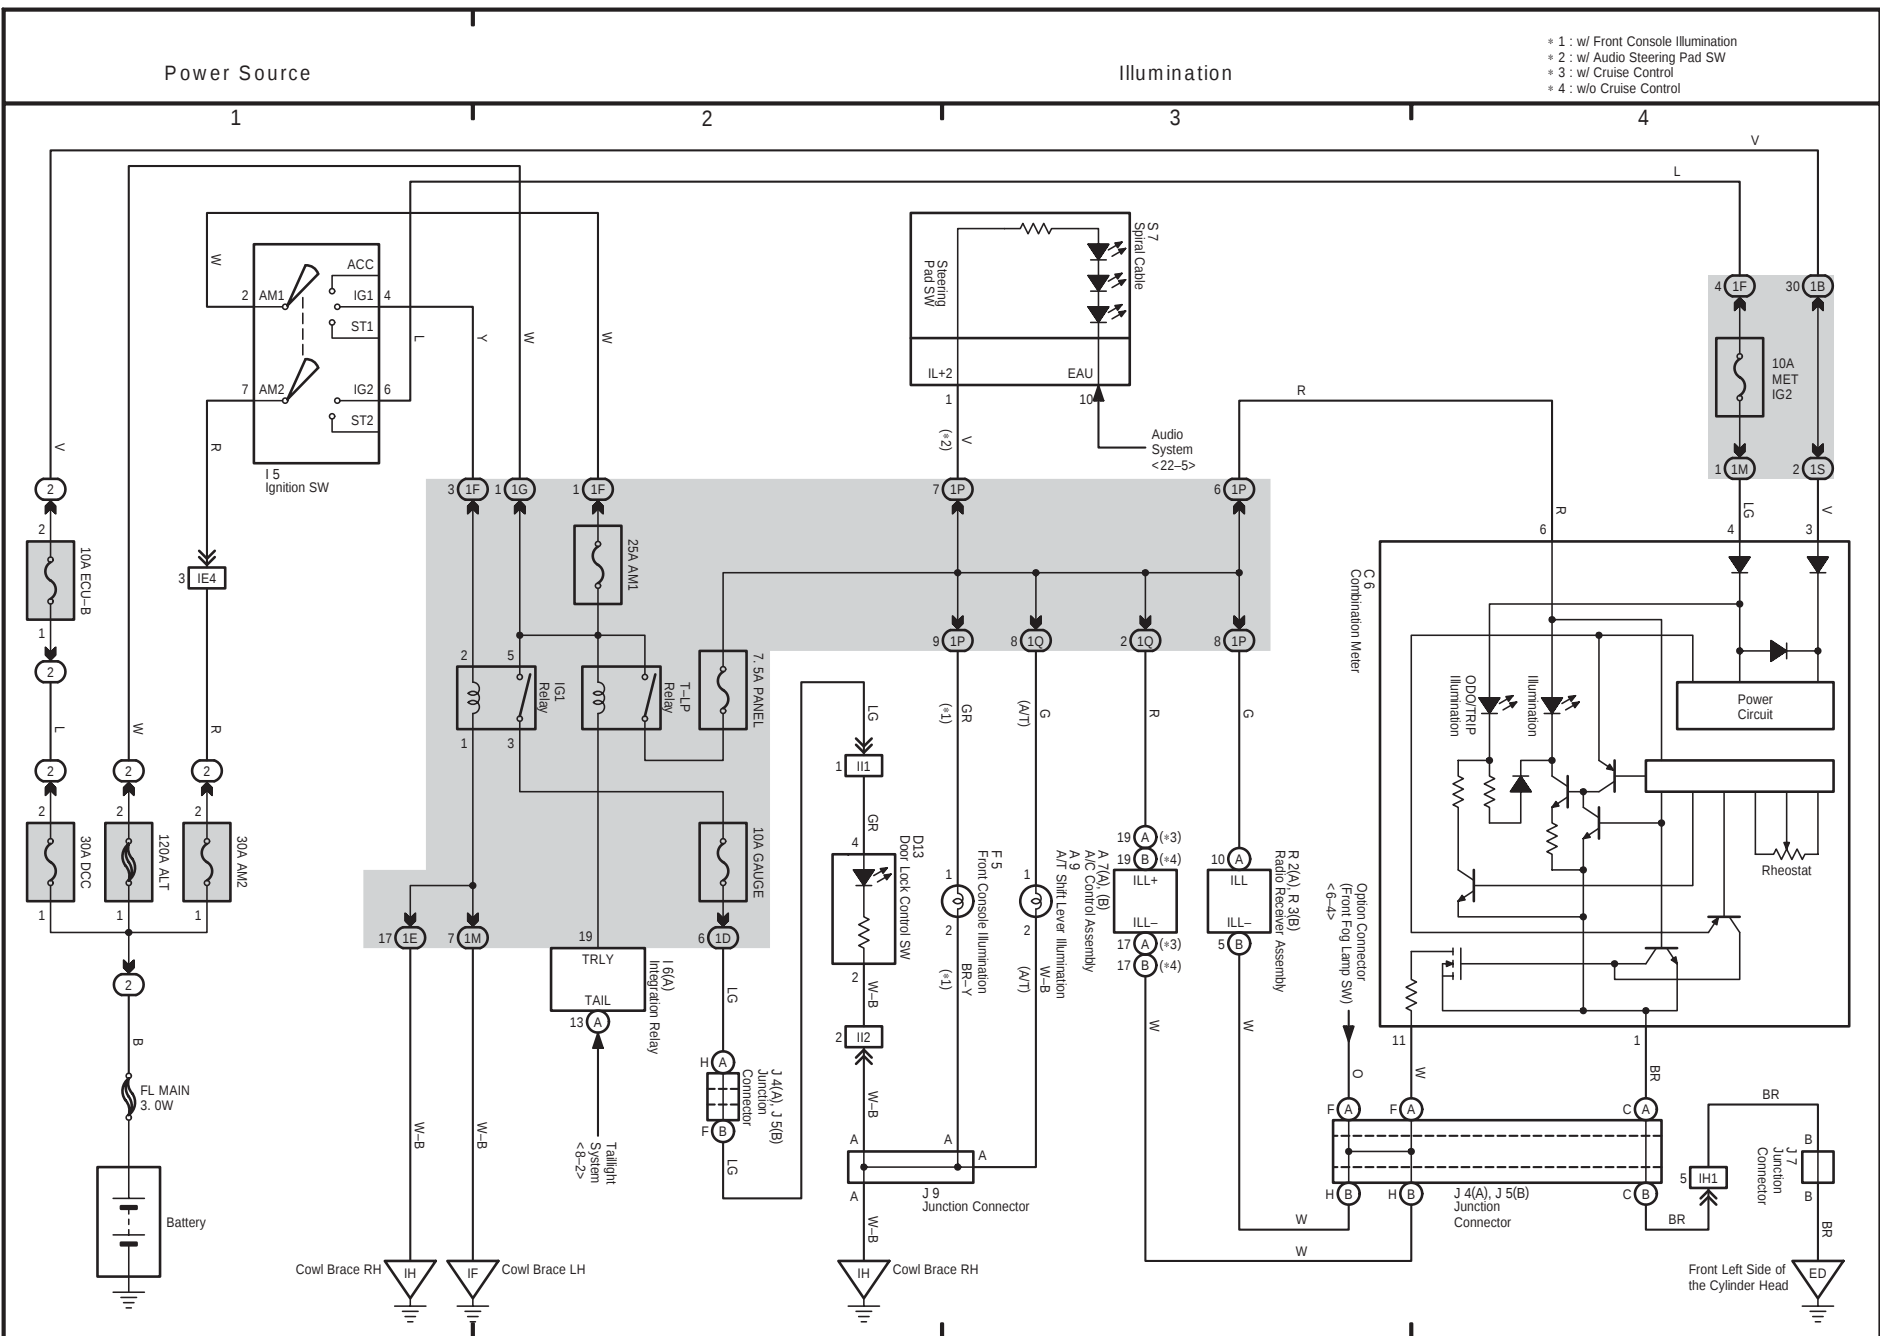

M OVERALL ELECTRICAL WIRING DIAGRAM

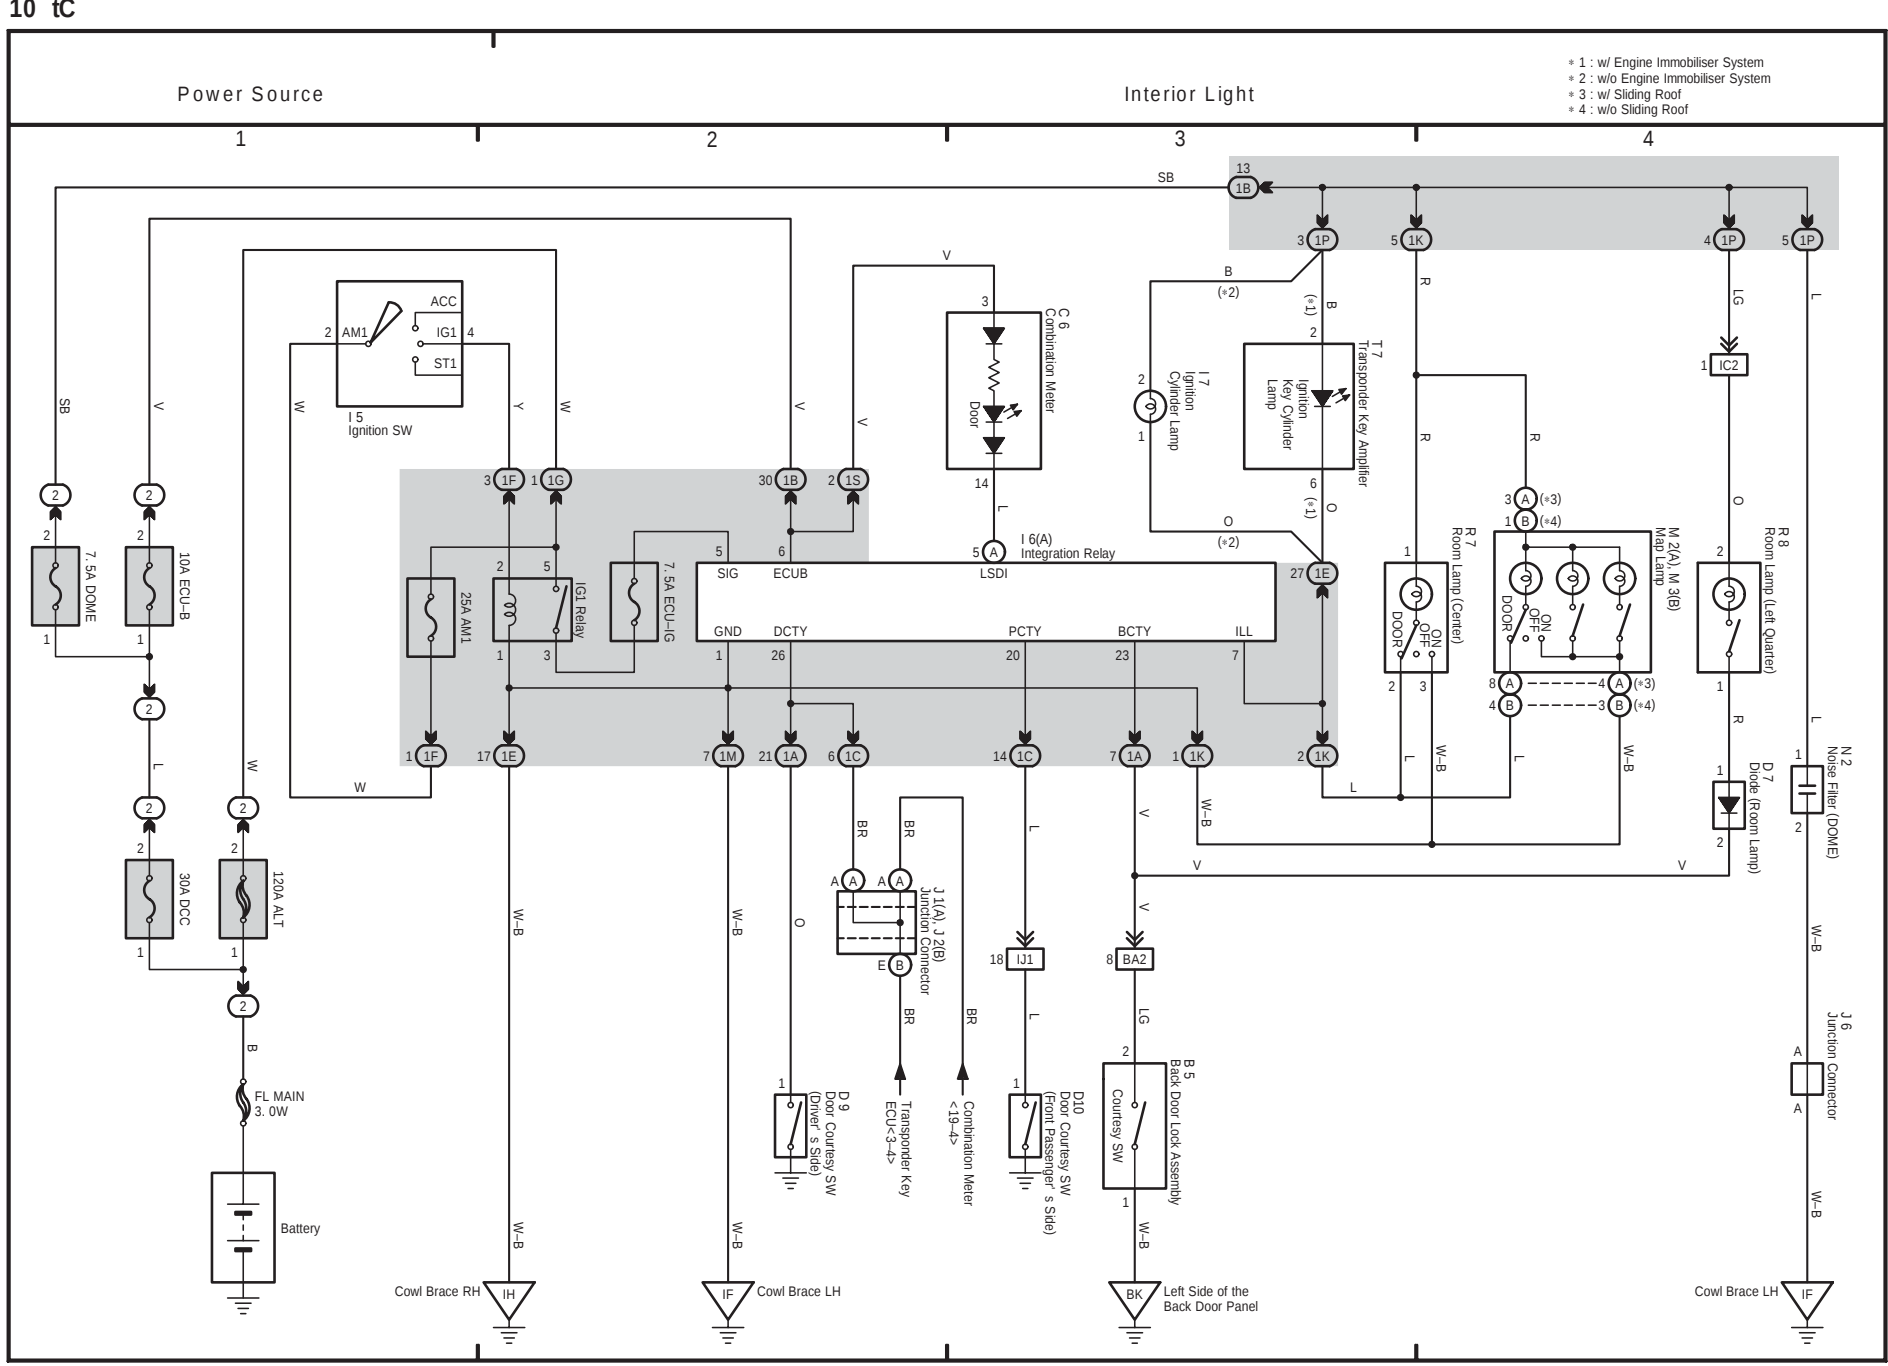

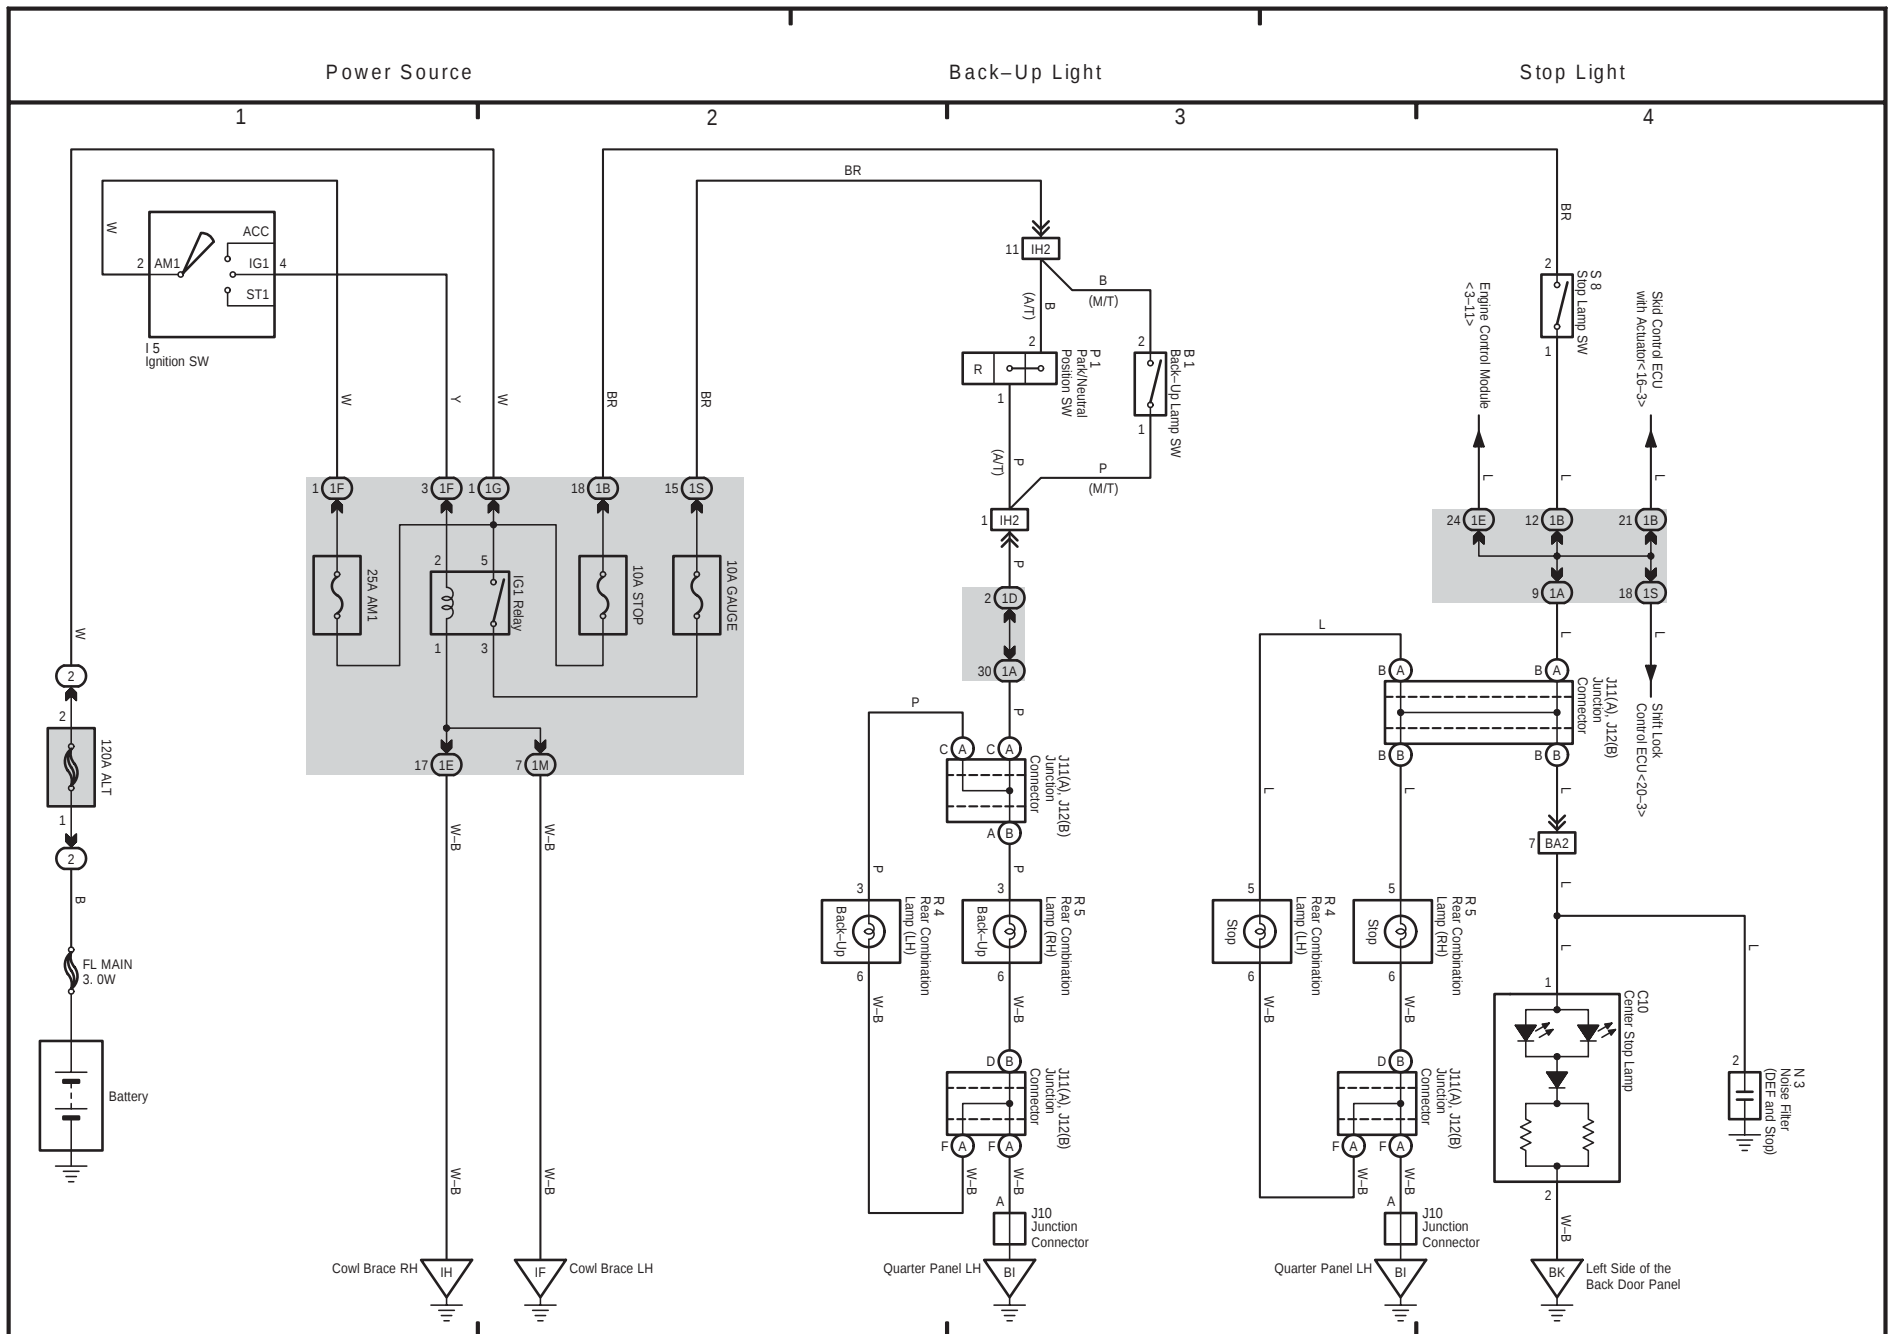



M OVERALL ELECTRICAL WIRING DIAGRAM

12 tC

232


SCION tC (EM0300U)

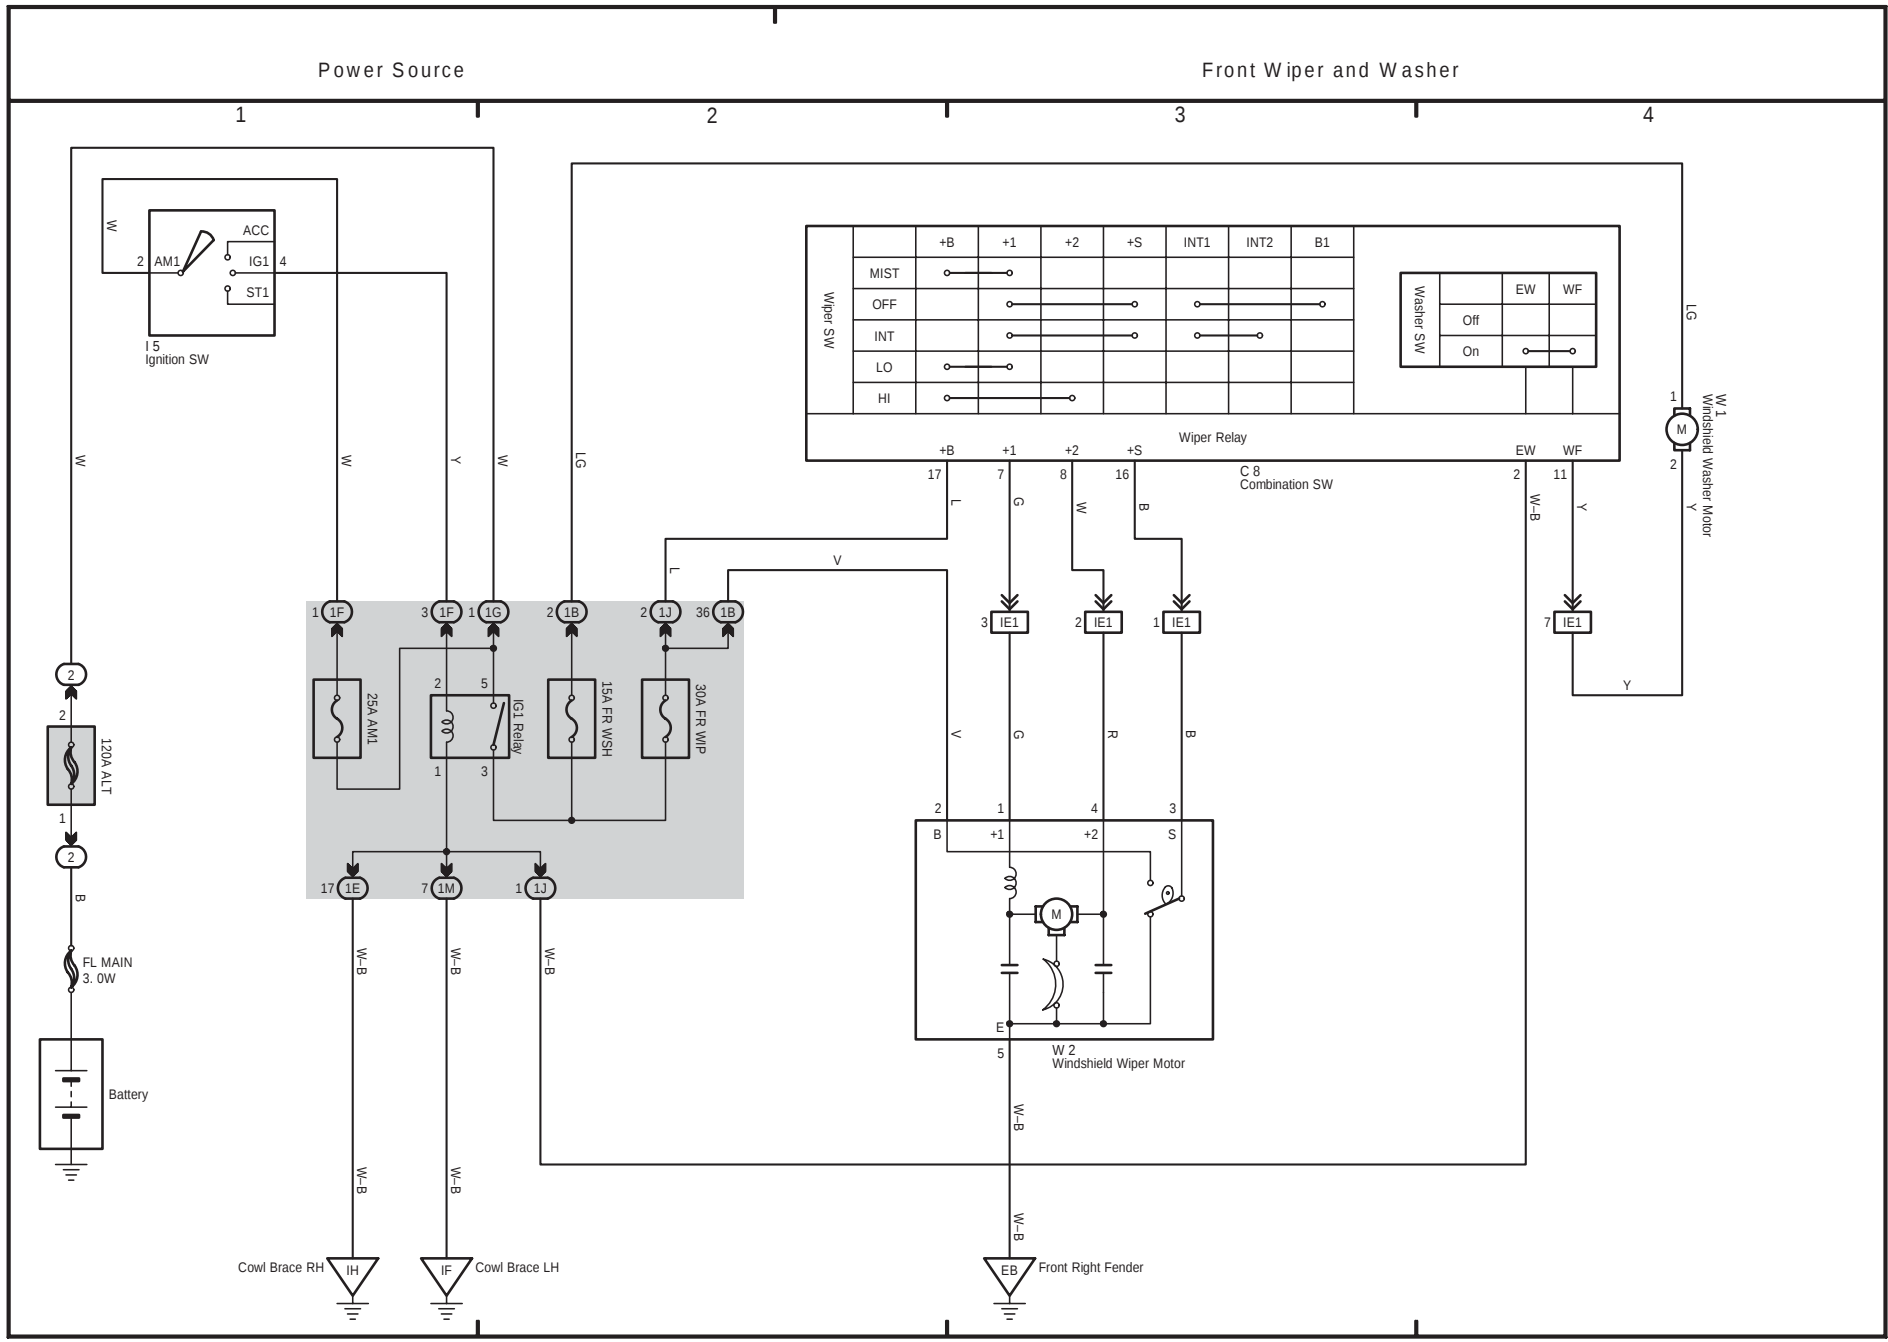

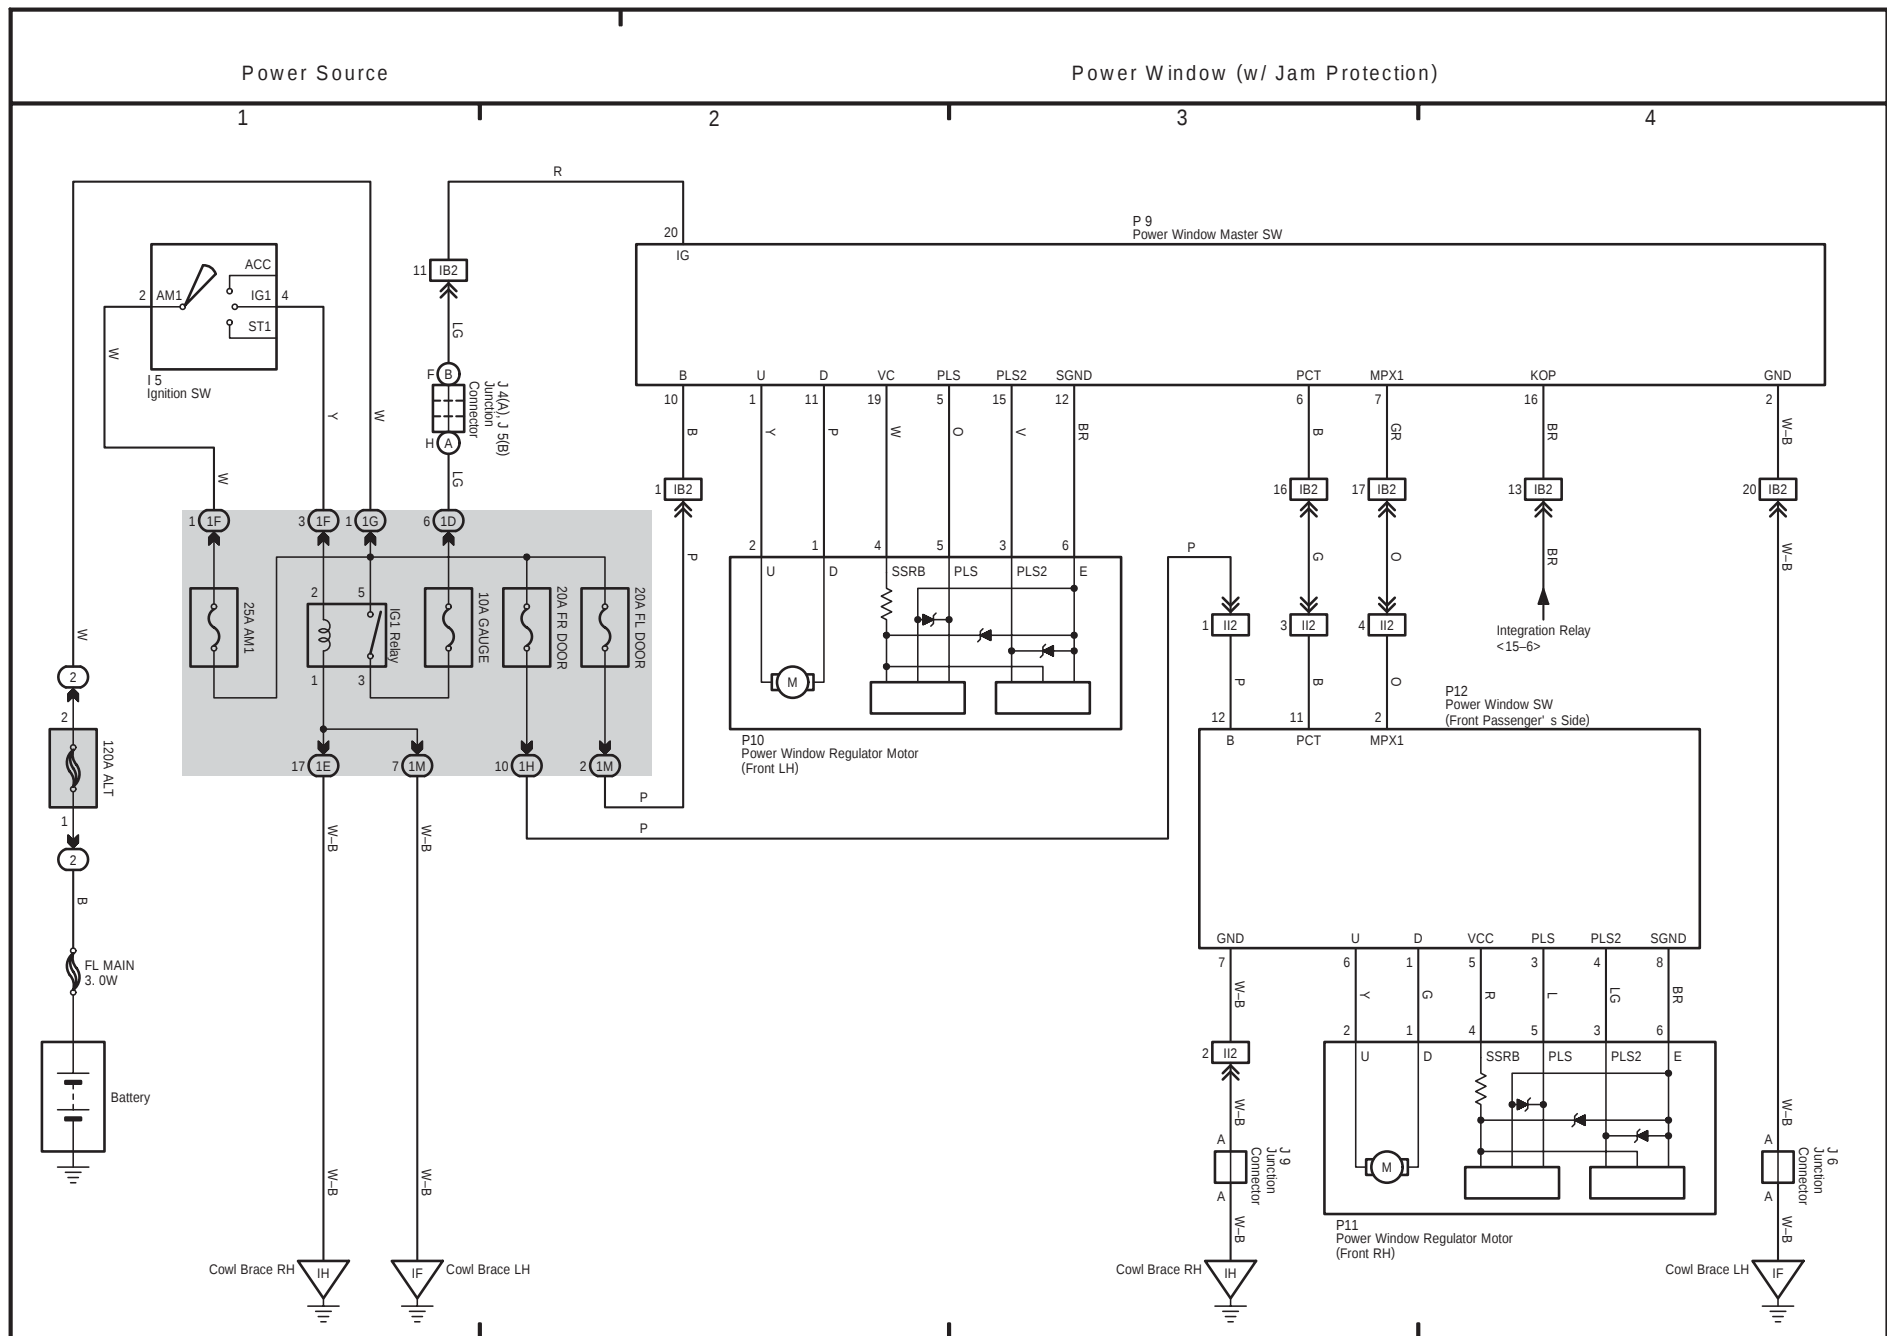

M OVERALL ELECTRICAL WIRING DIAGRAM

14 tC

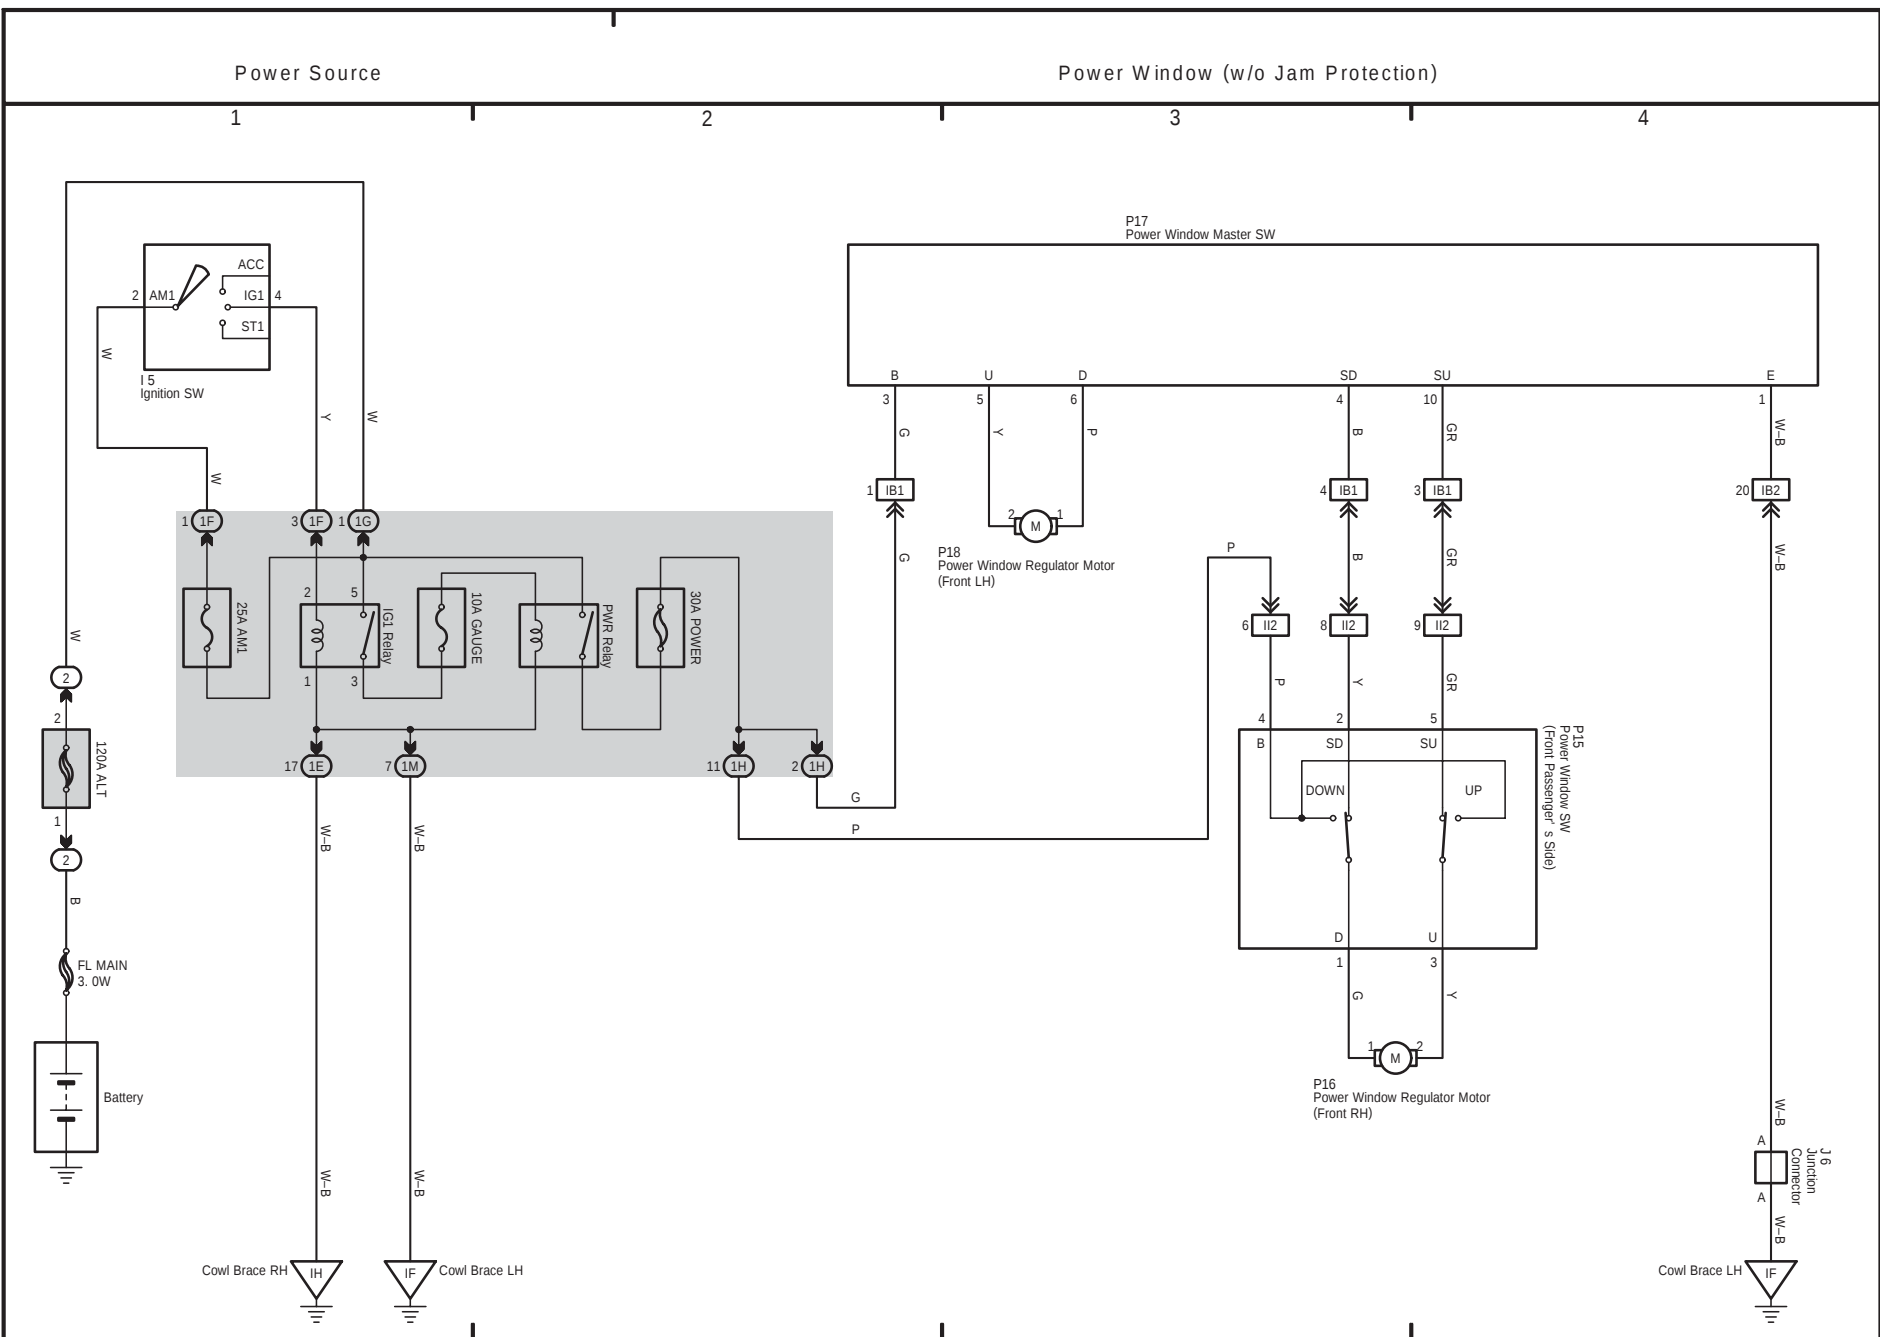


SCION tC (EM0300U)


(Cont. next page)


15 tC


236


SCION tC (EM0300U)

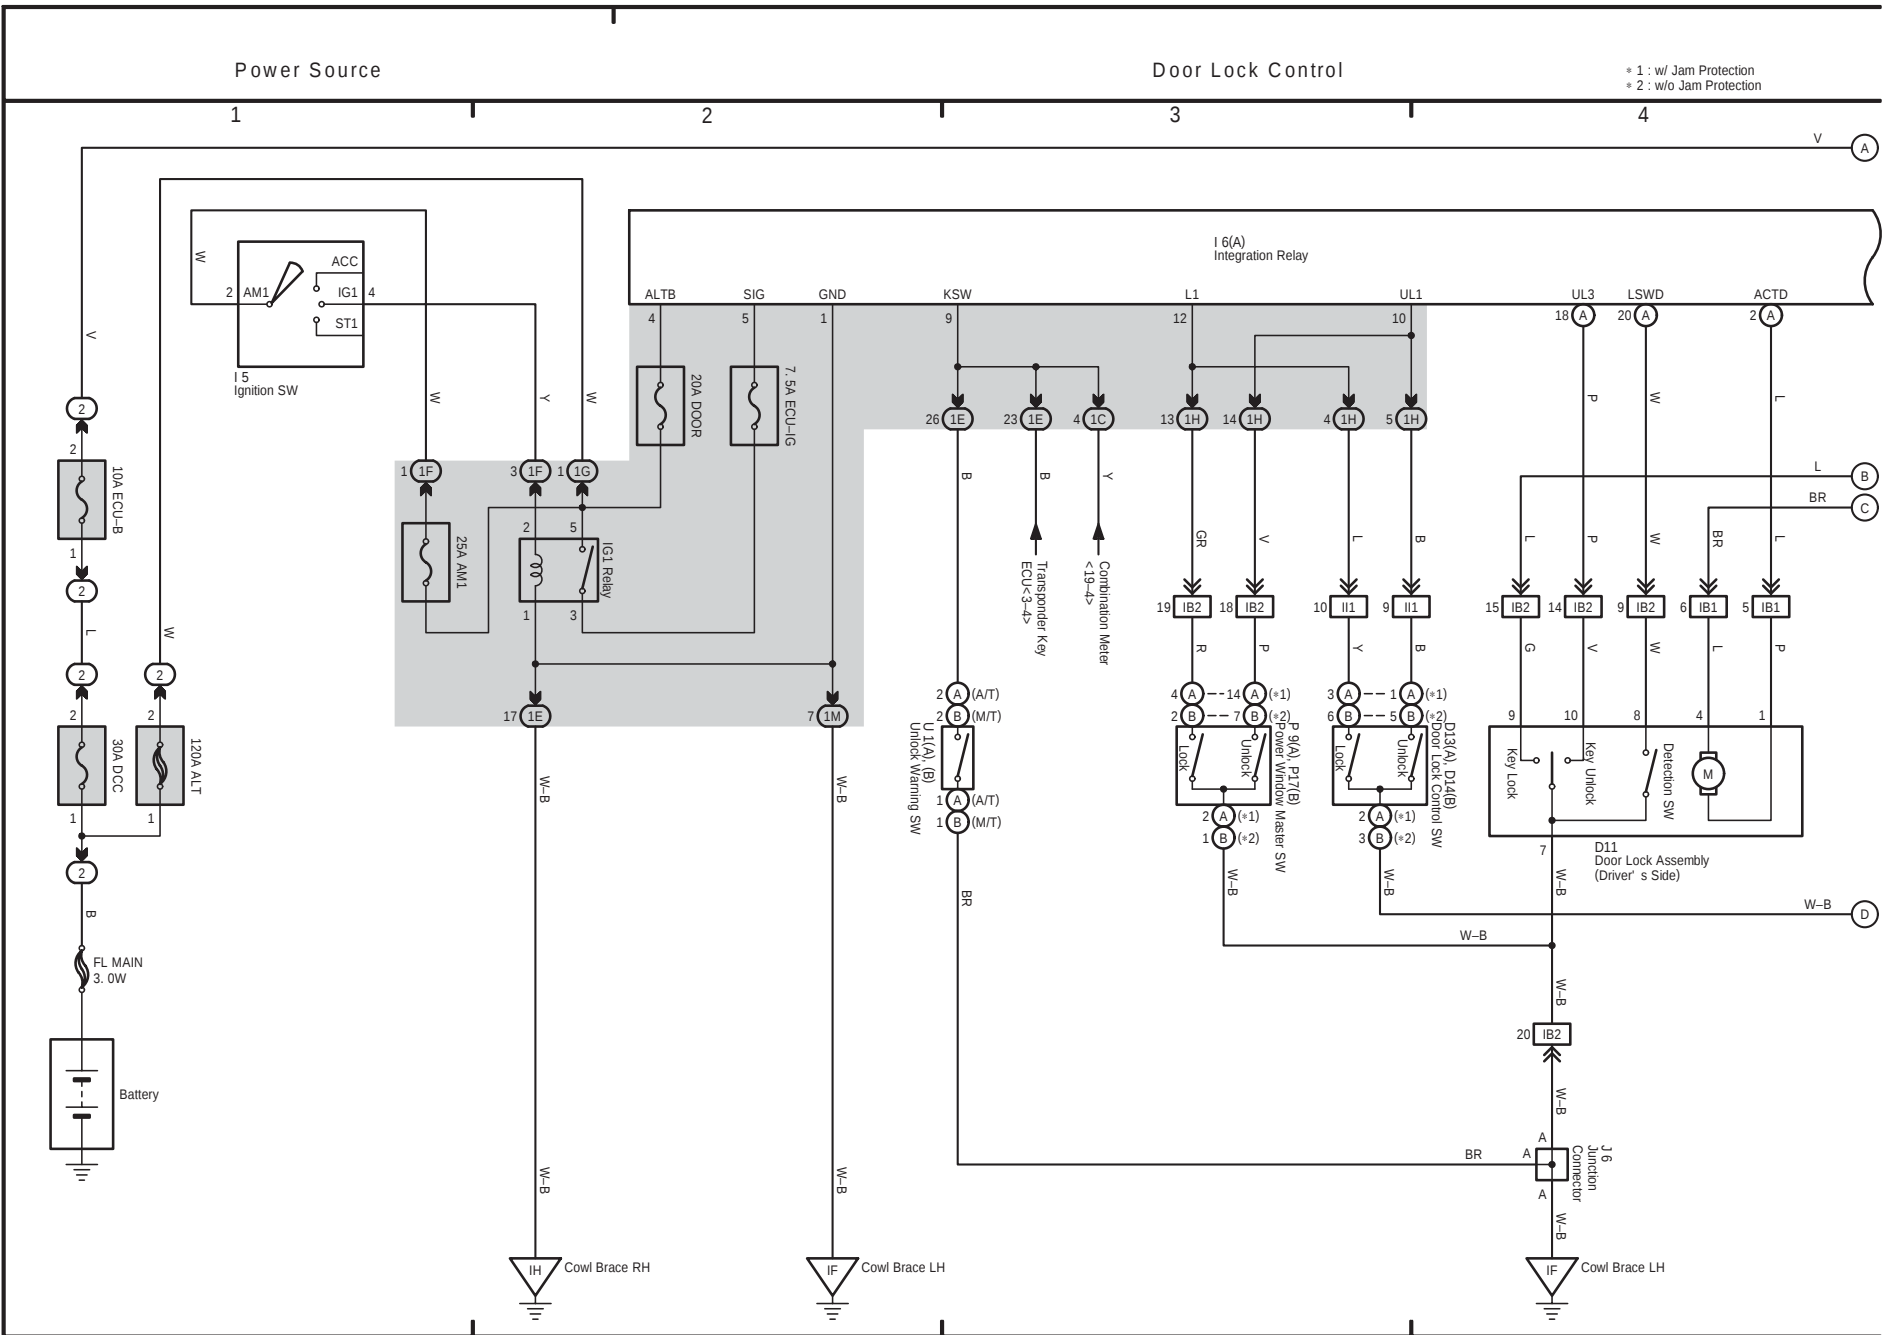

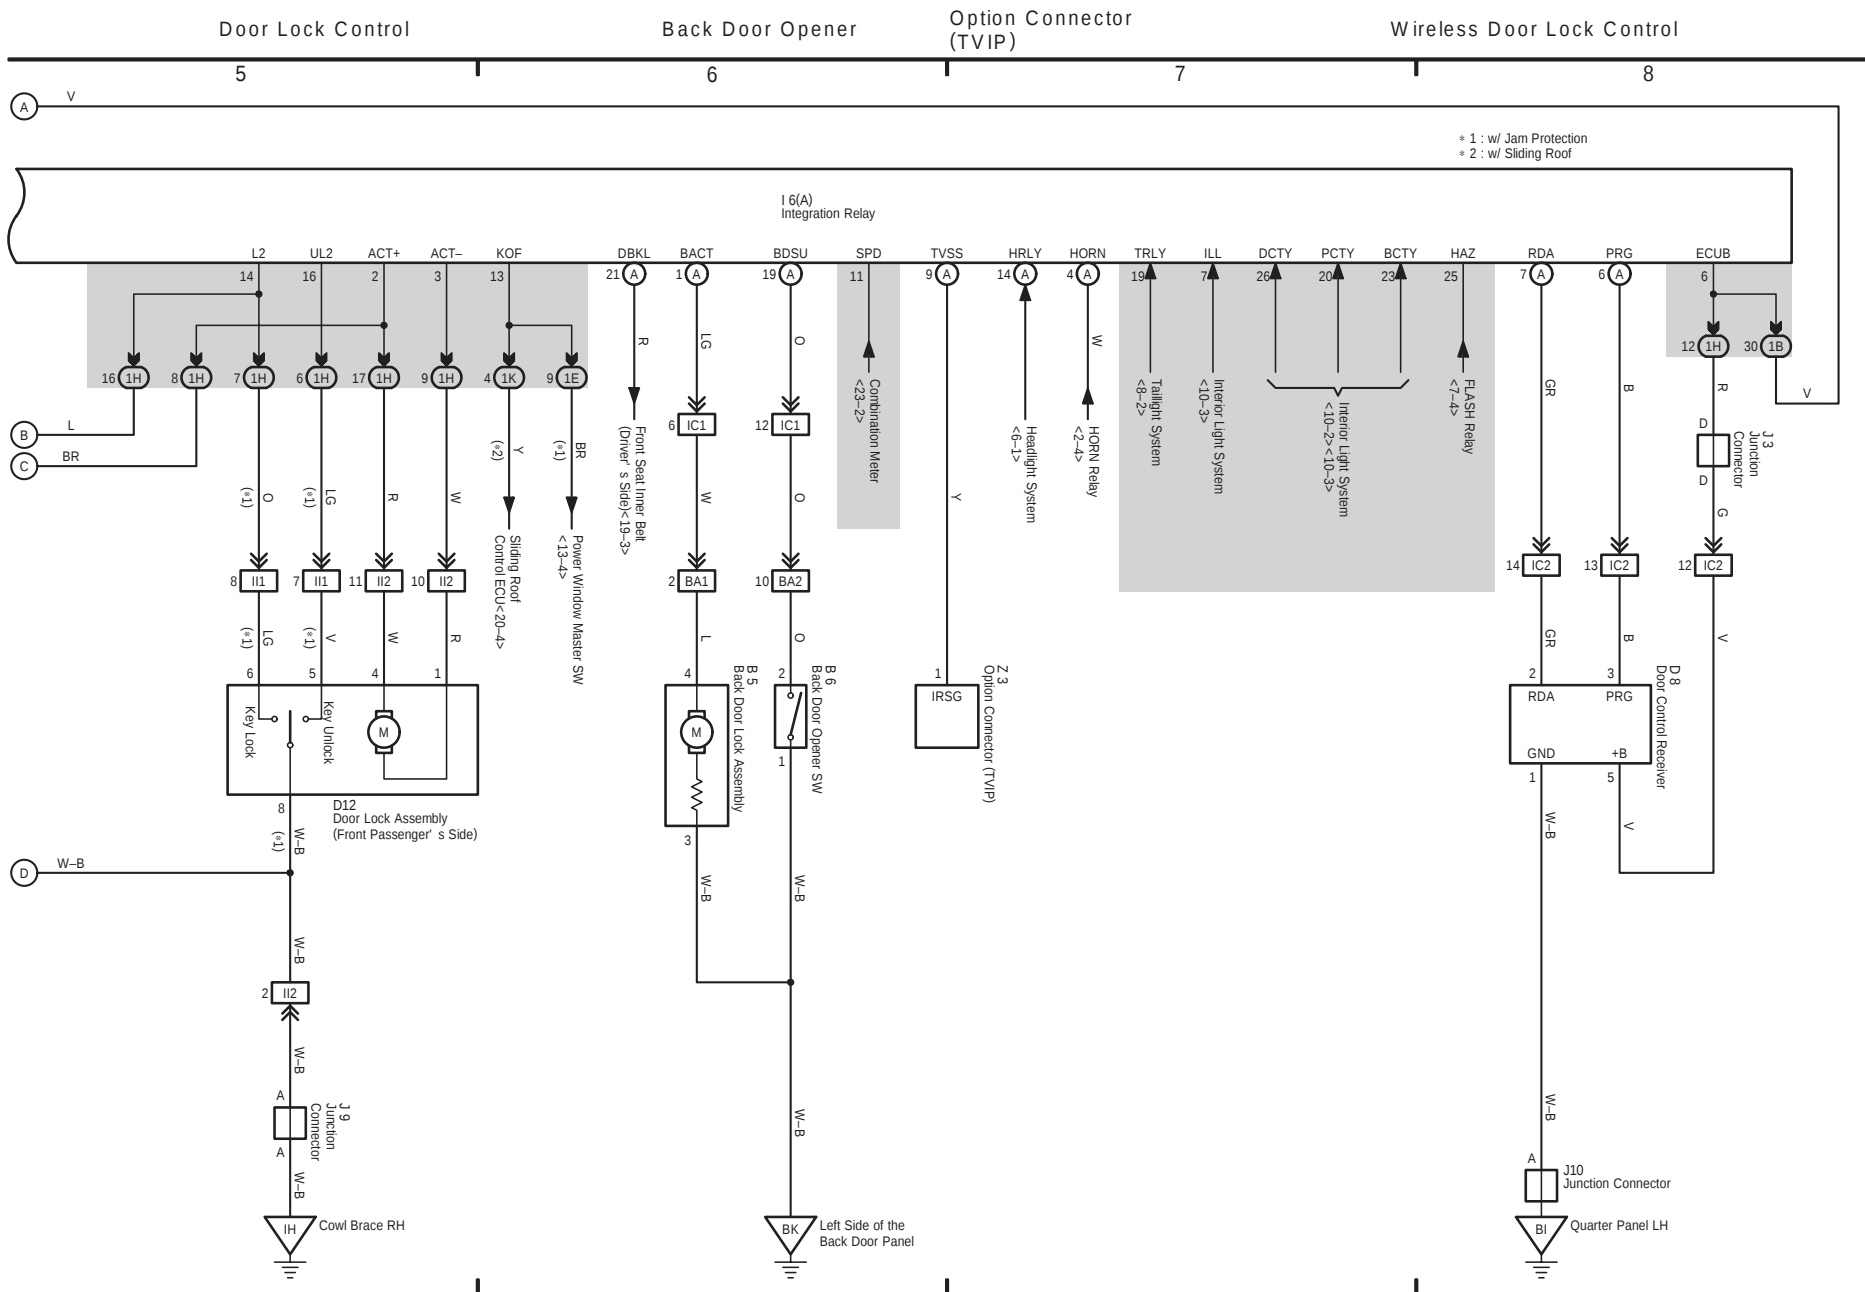

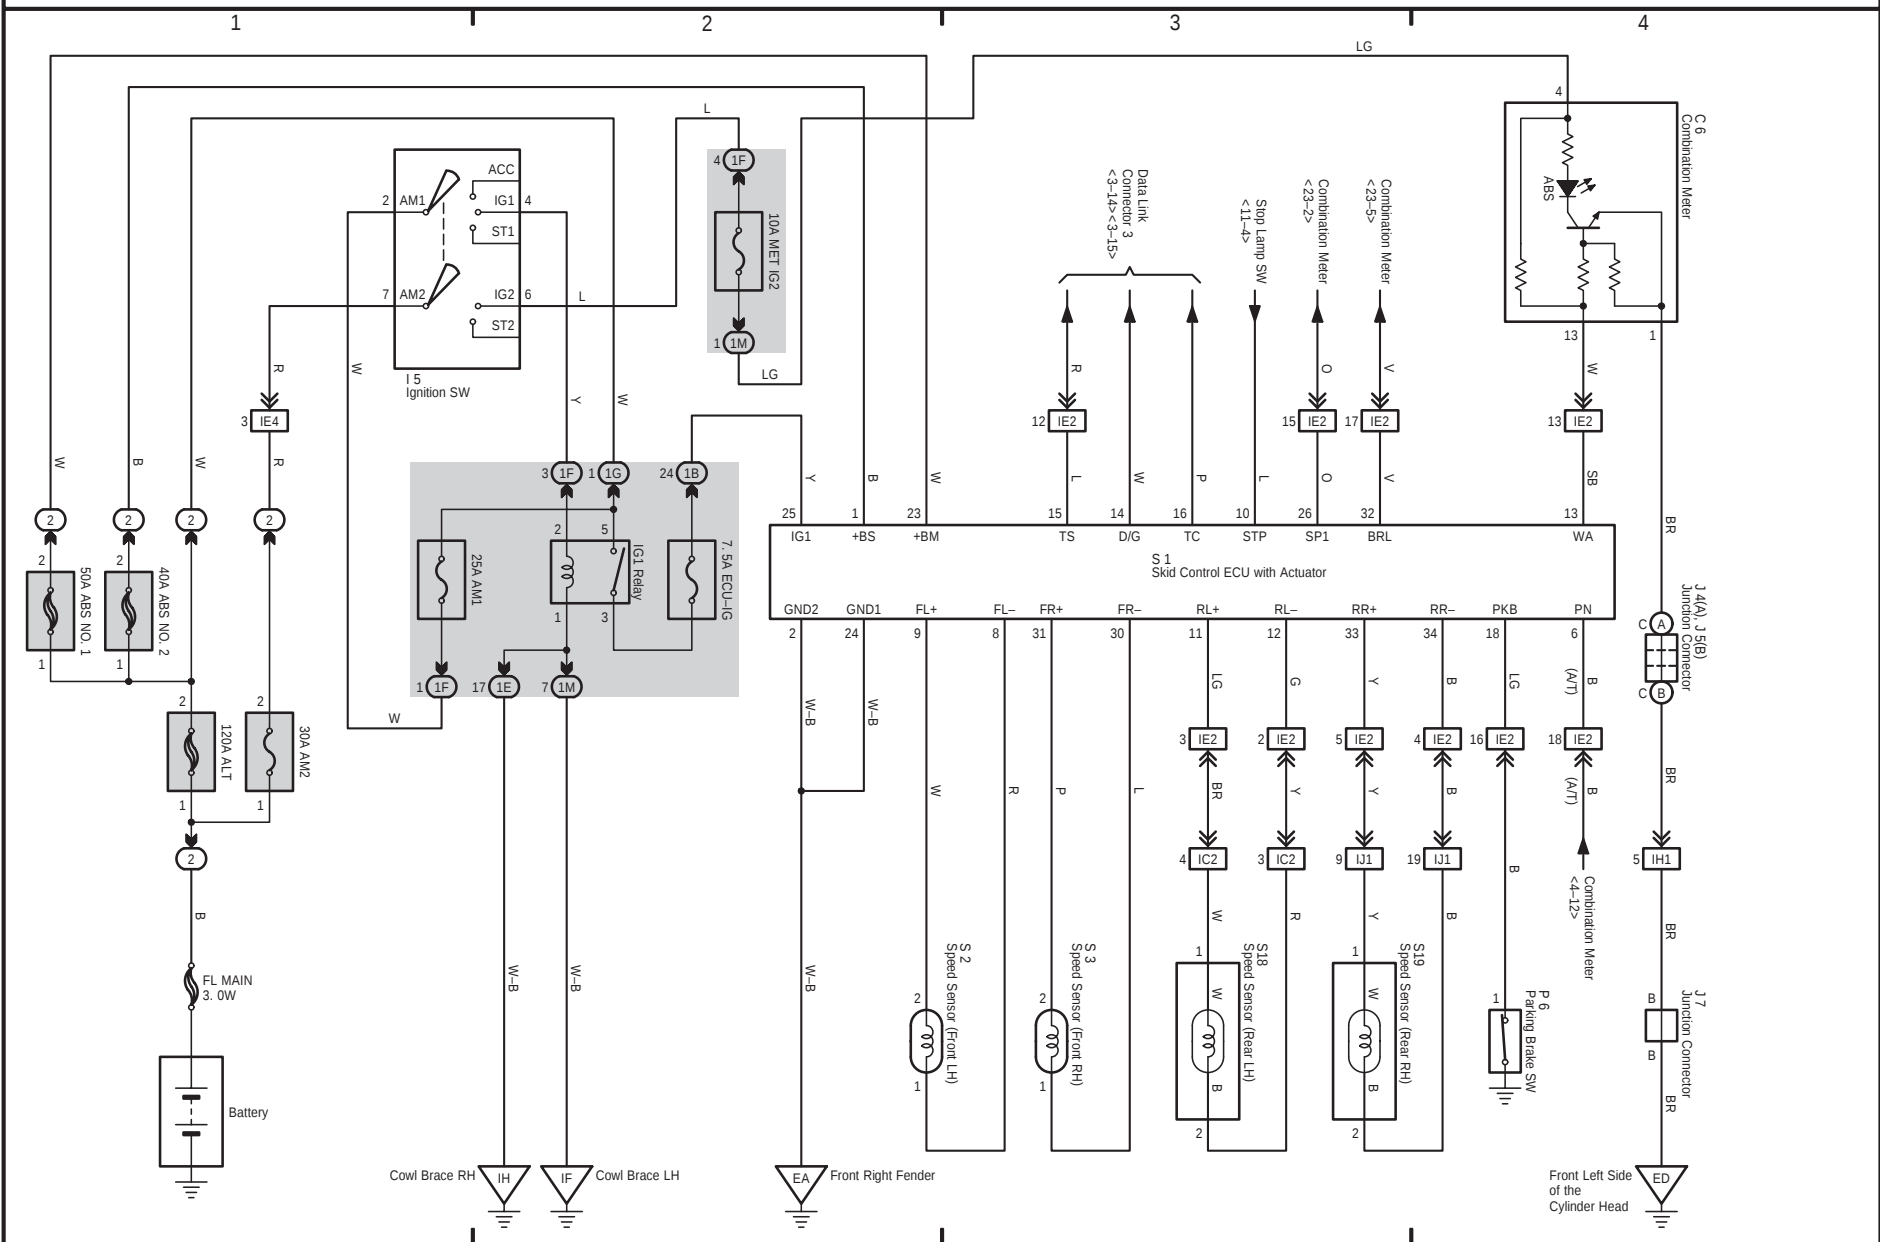


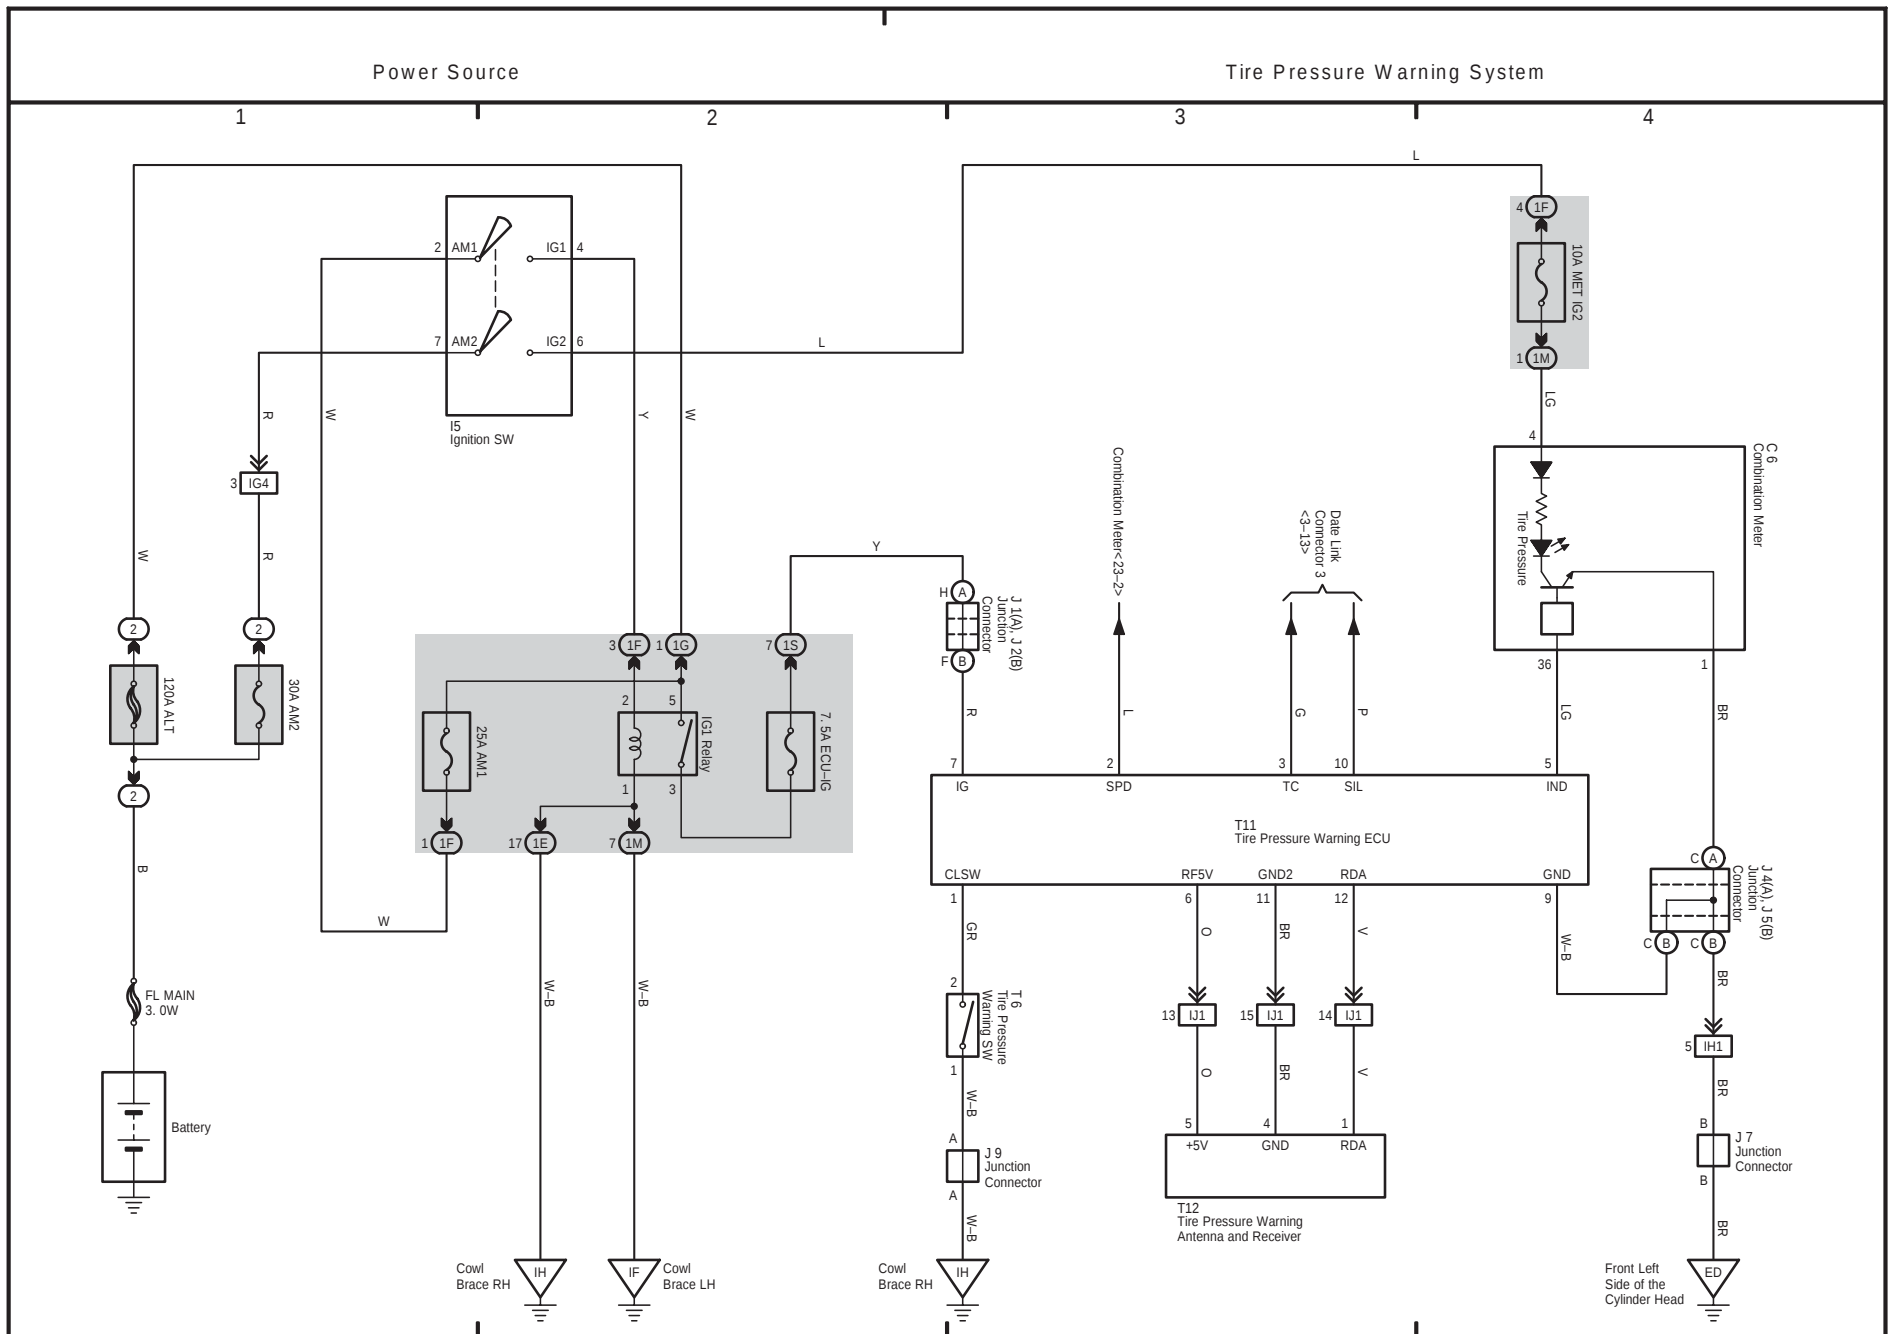

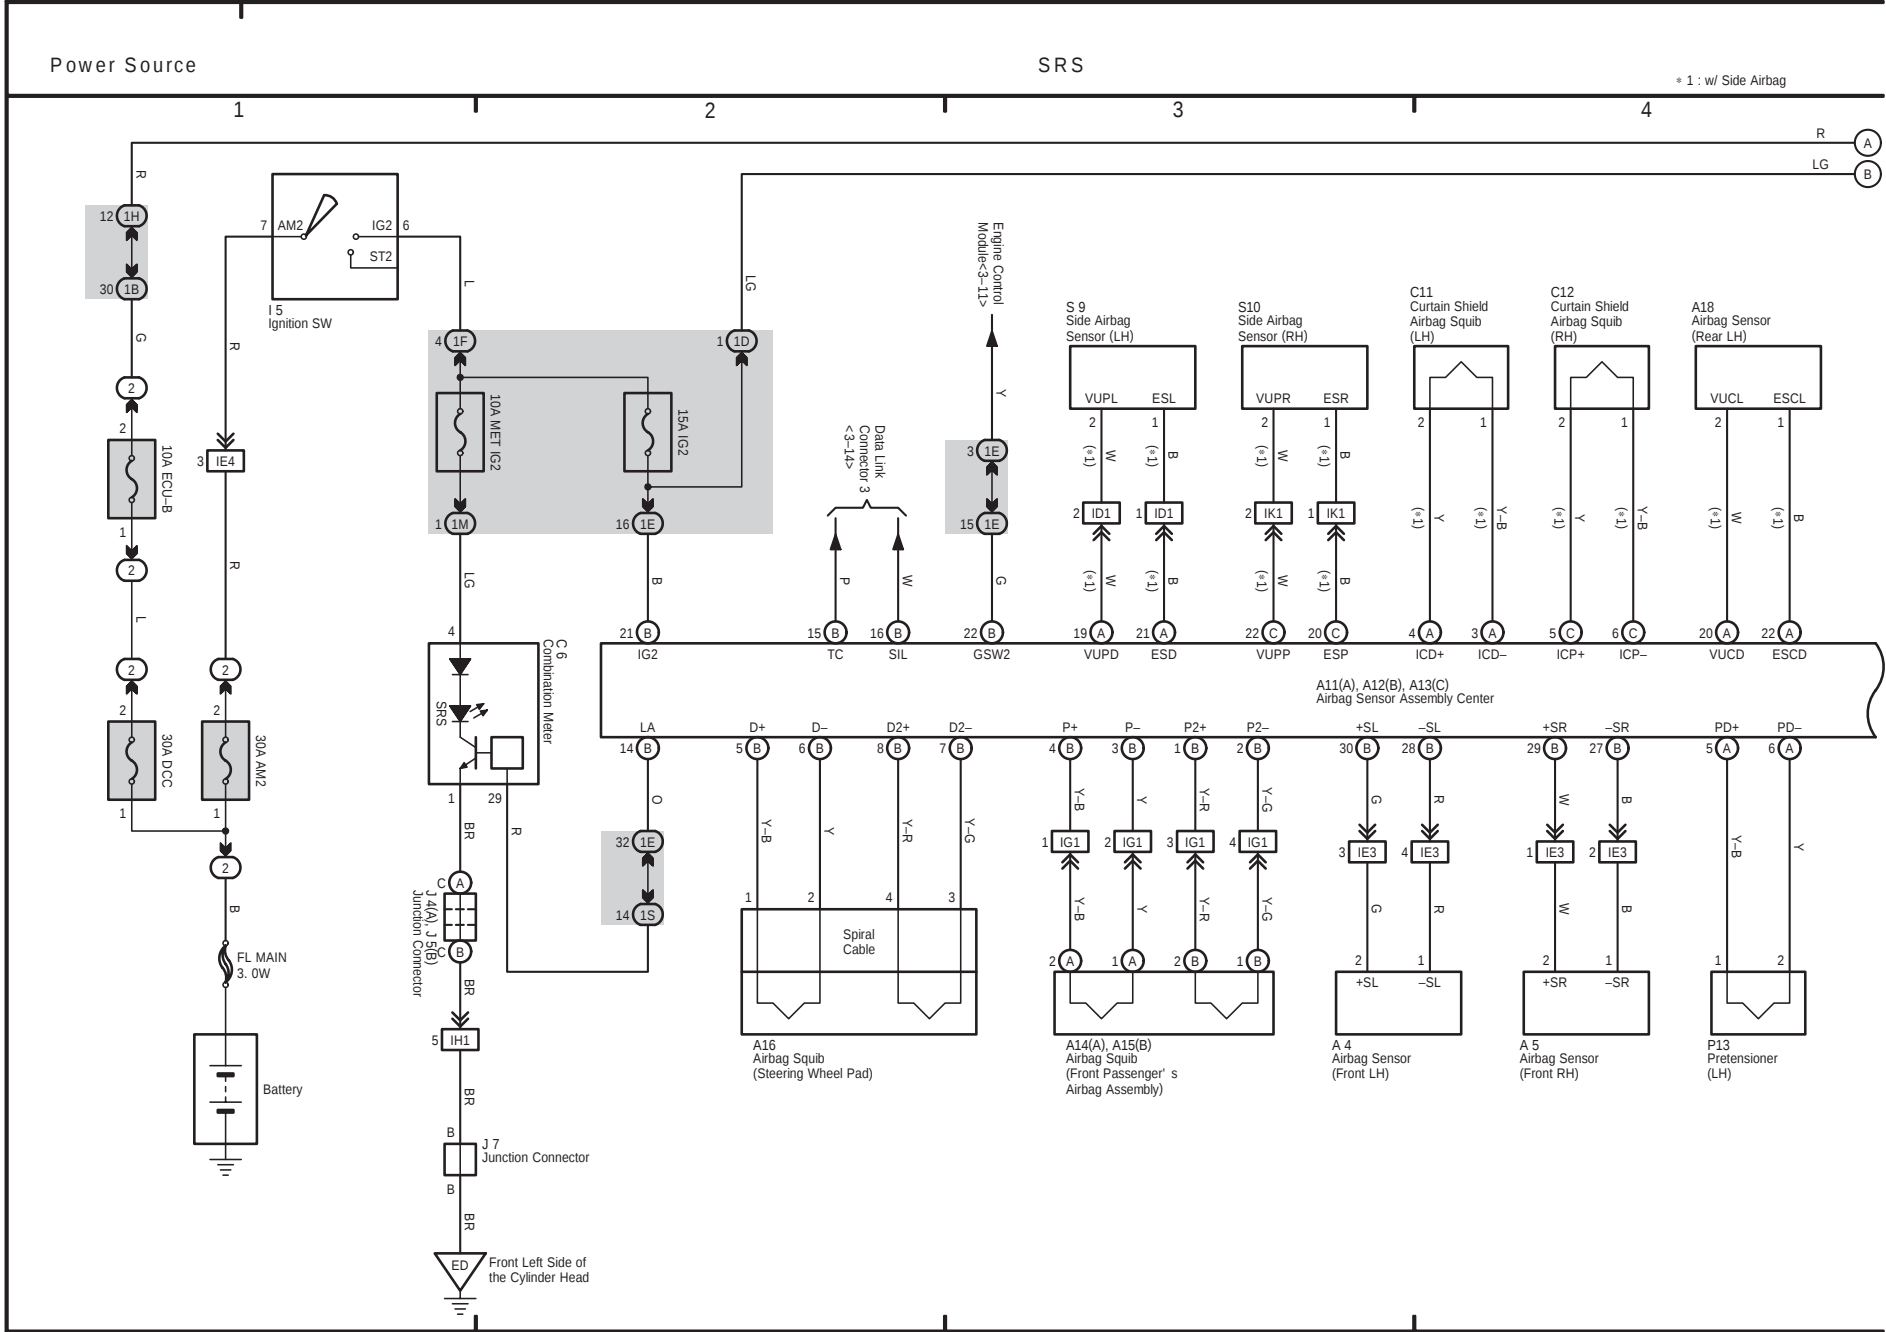

SRS

* 1 : w/ Side Airbag
* 2 : w/ Cruise Control
* 3 : w/o Cruise Control

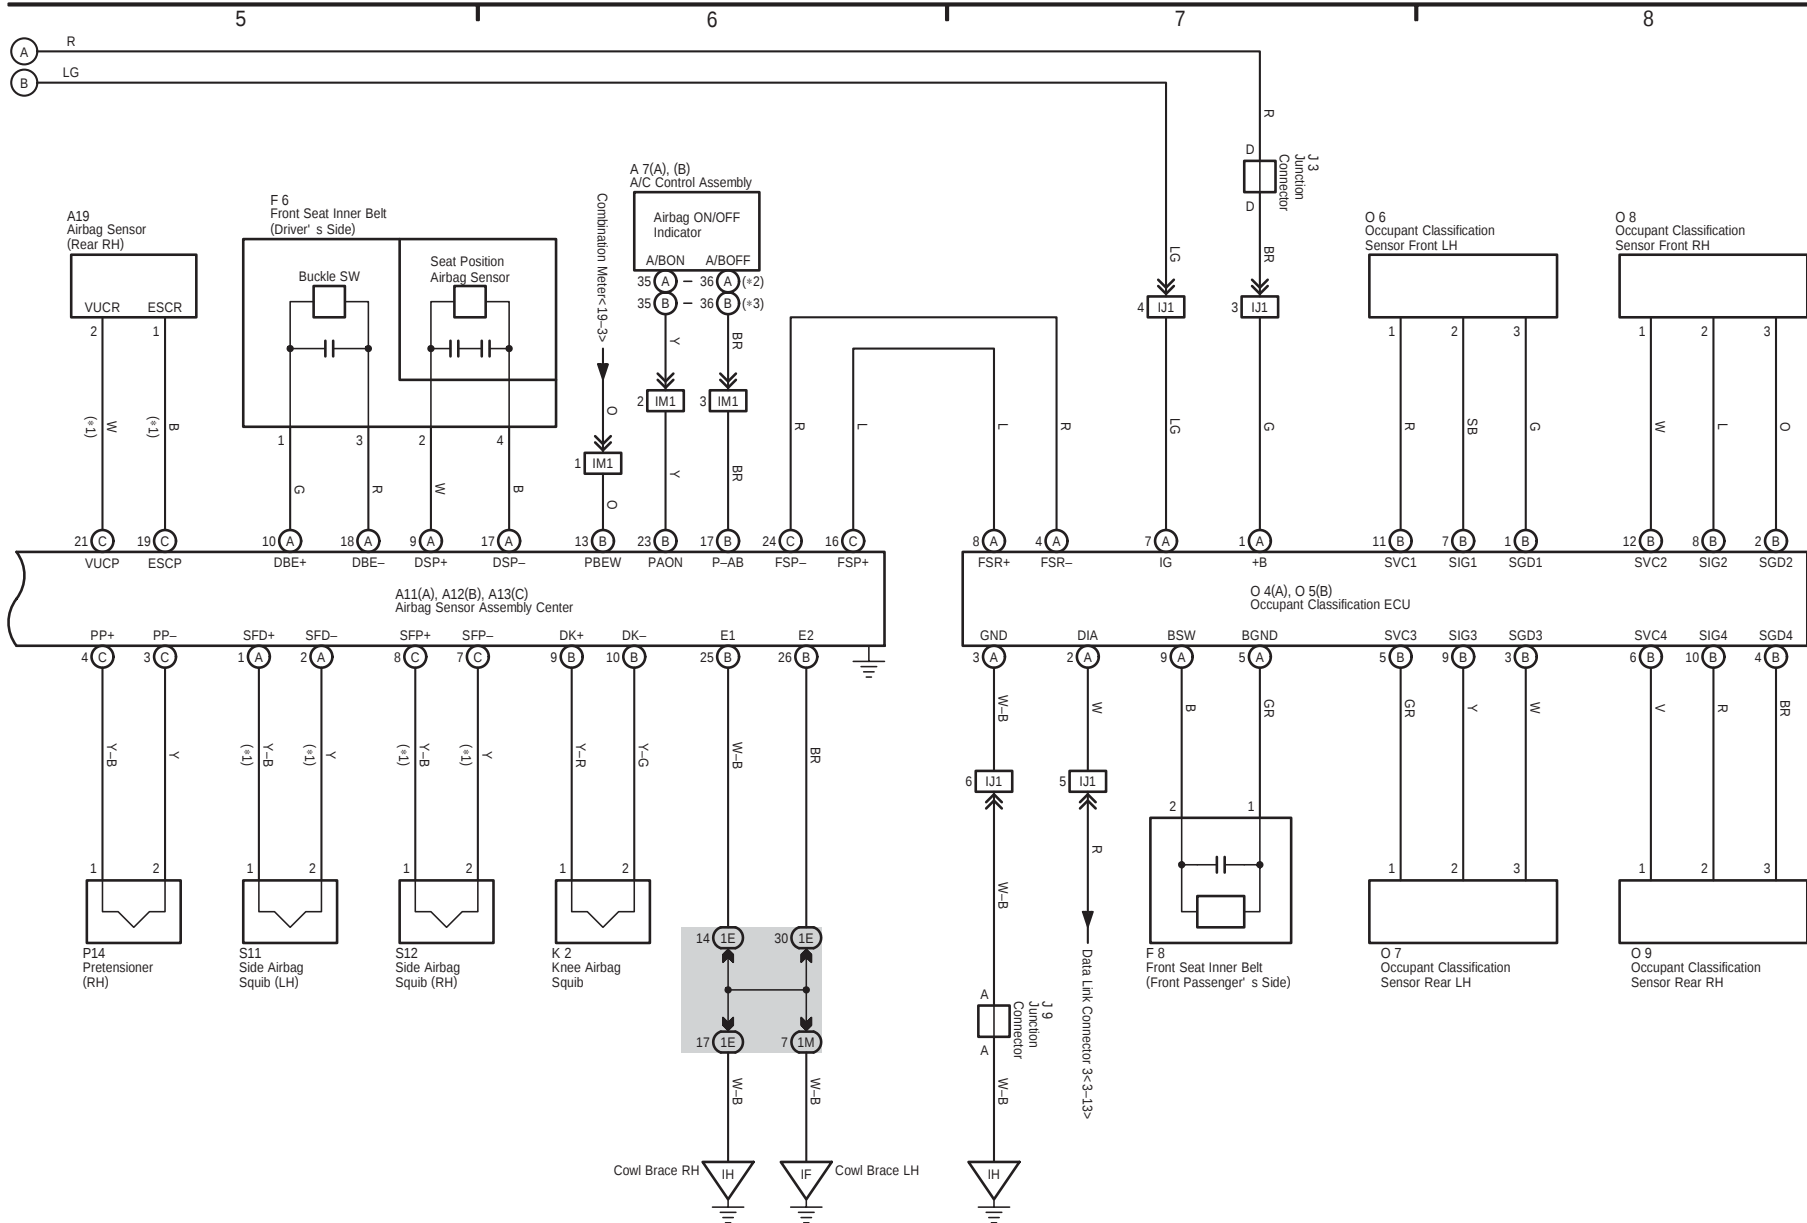


M OVERALL ELECTRICAL WIRING DIAGRAM

19 tC


242

SCION tC (EM0300U)

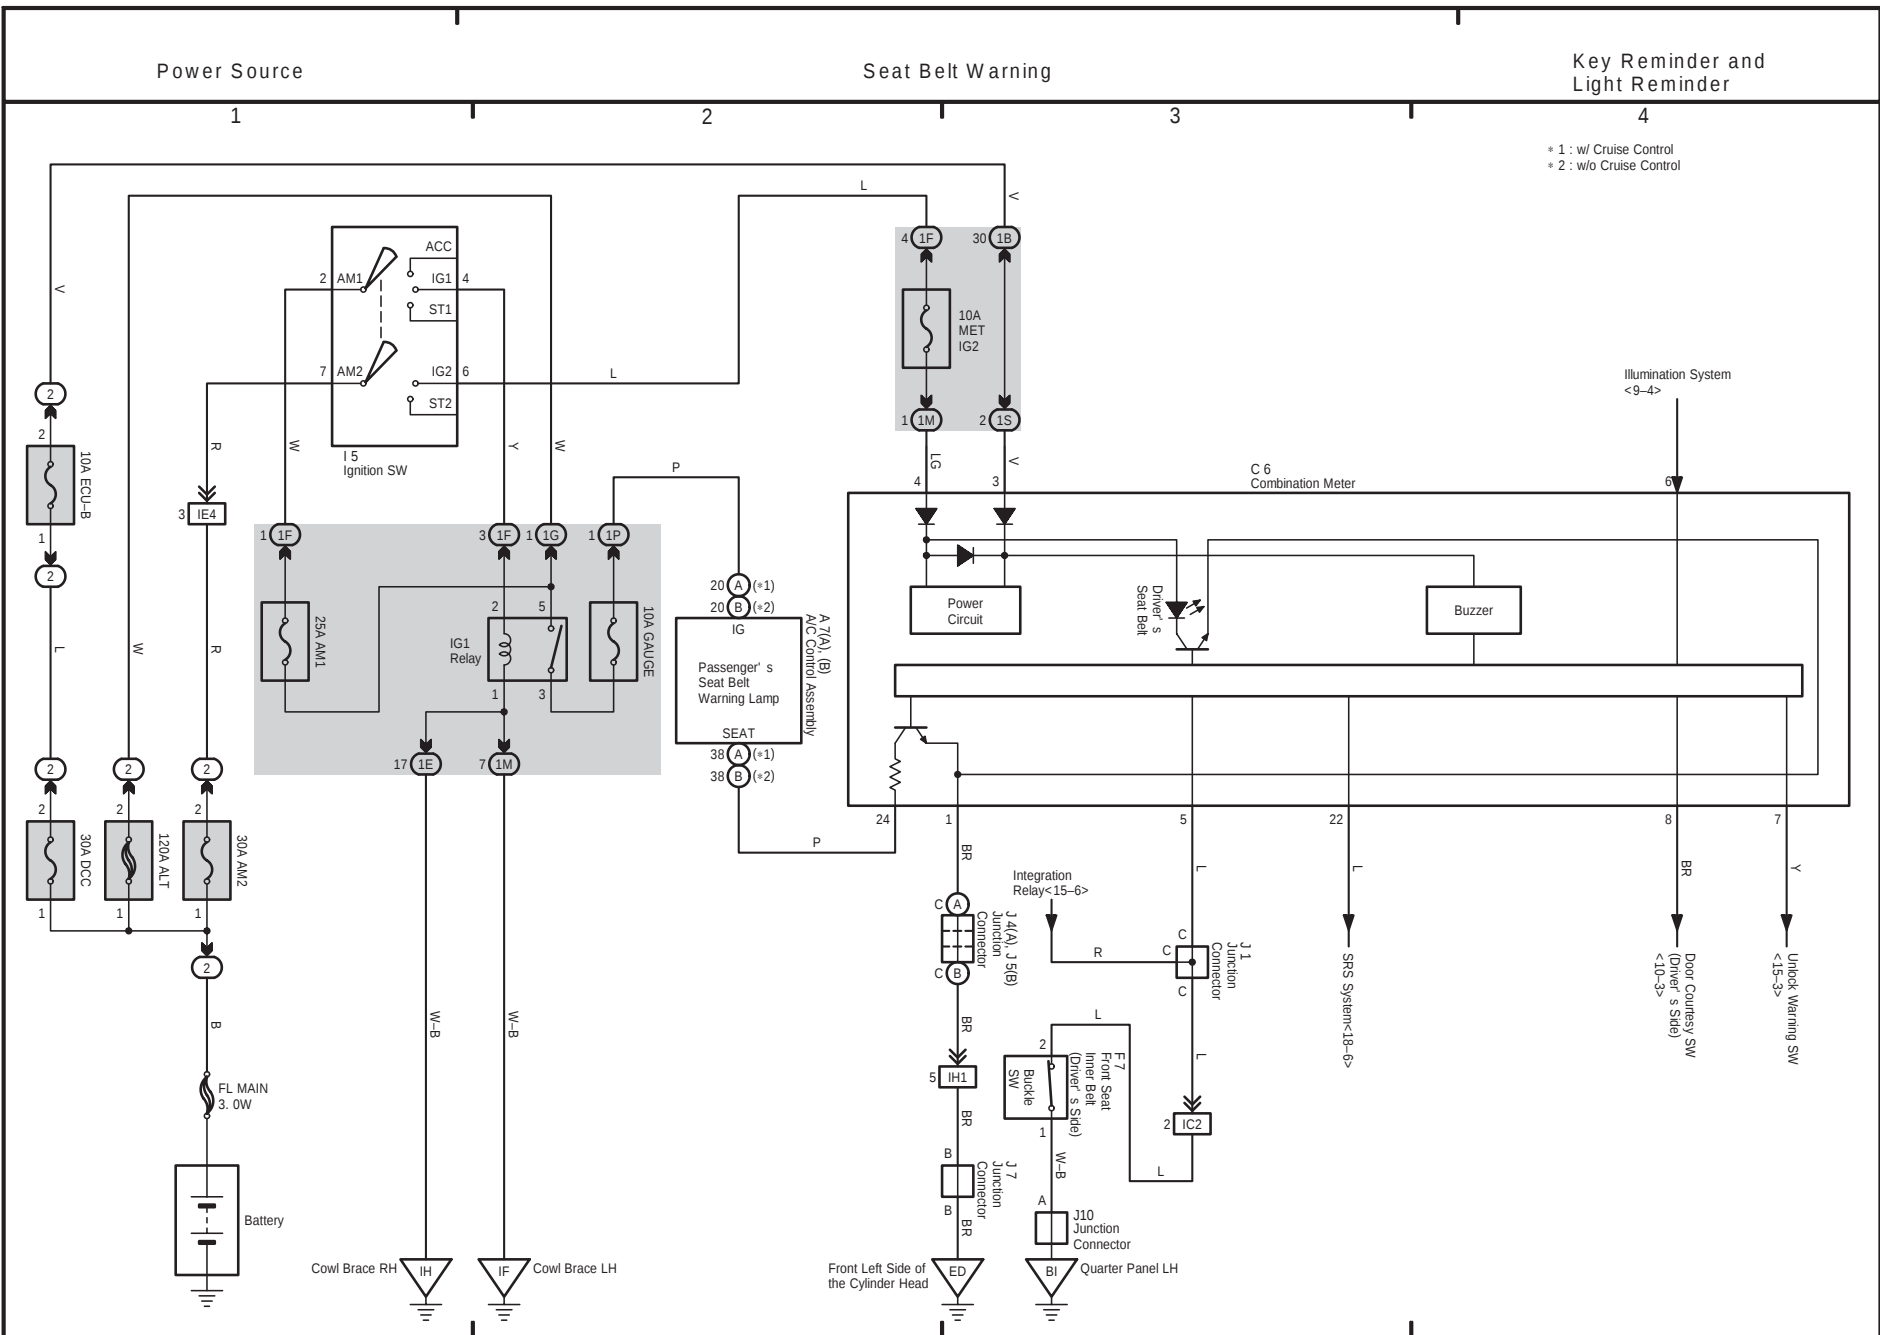

cardiagn.com




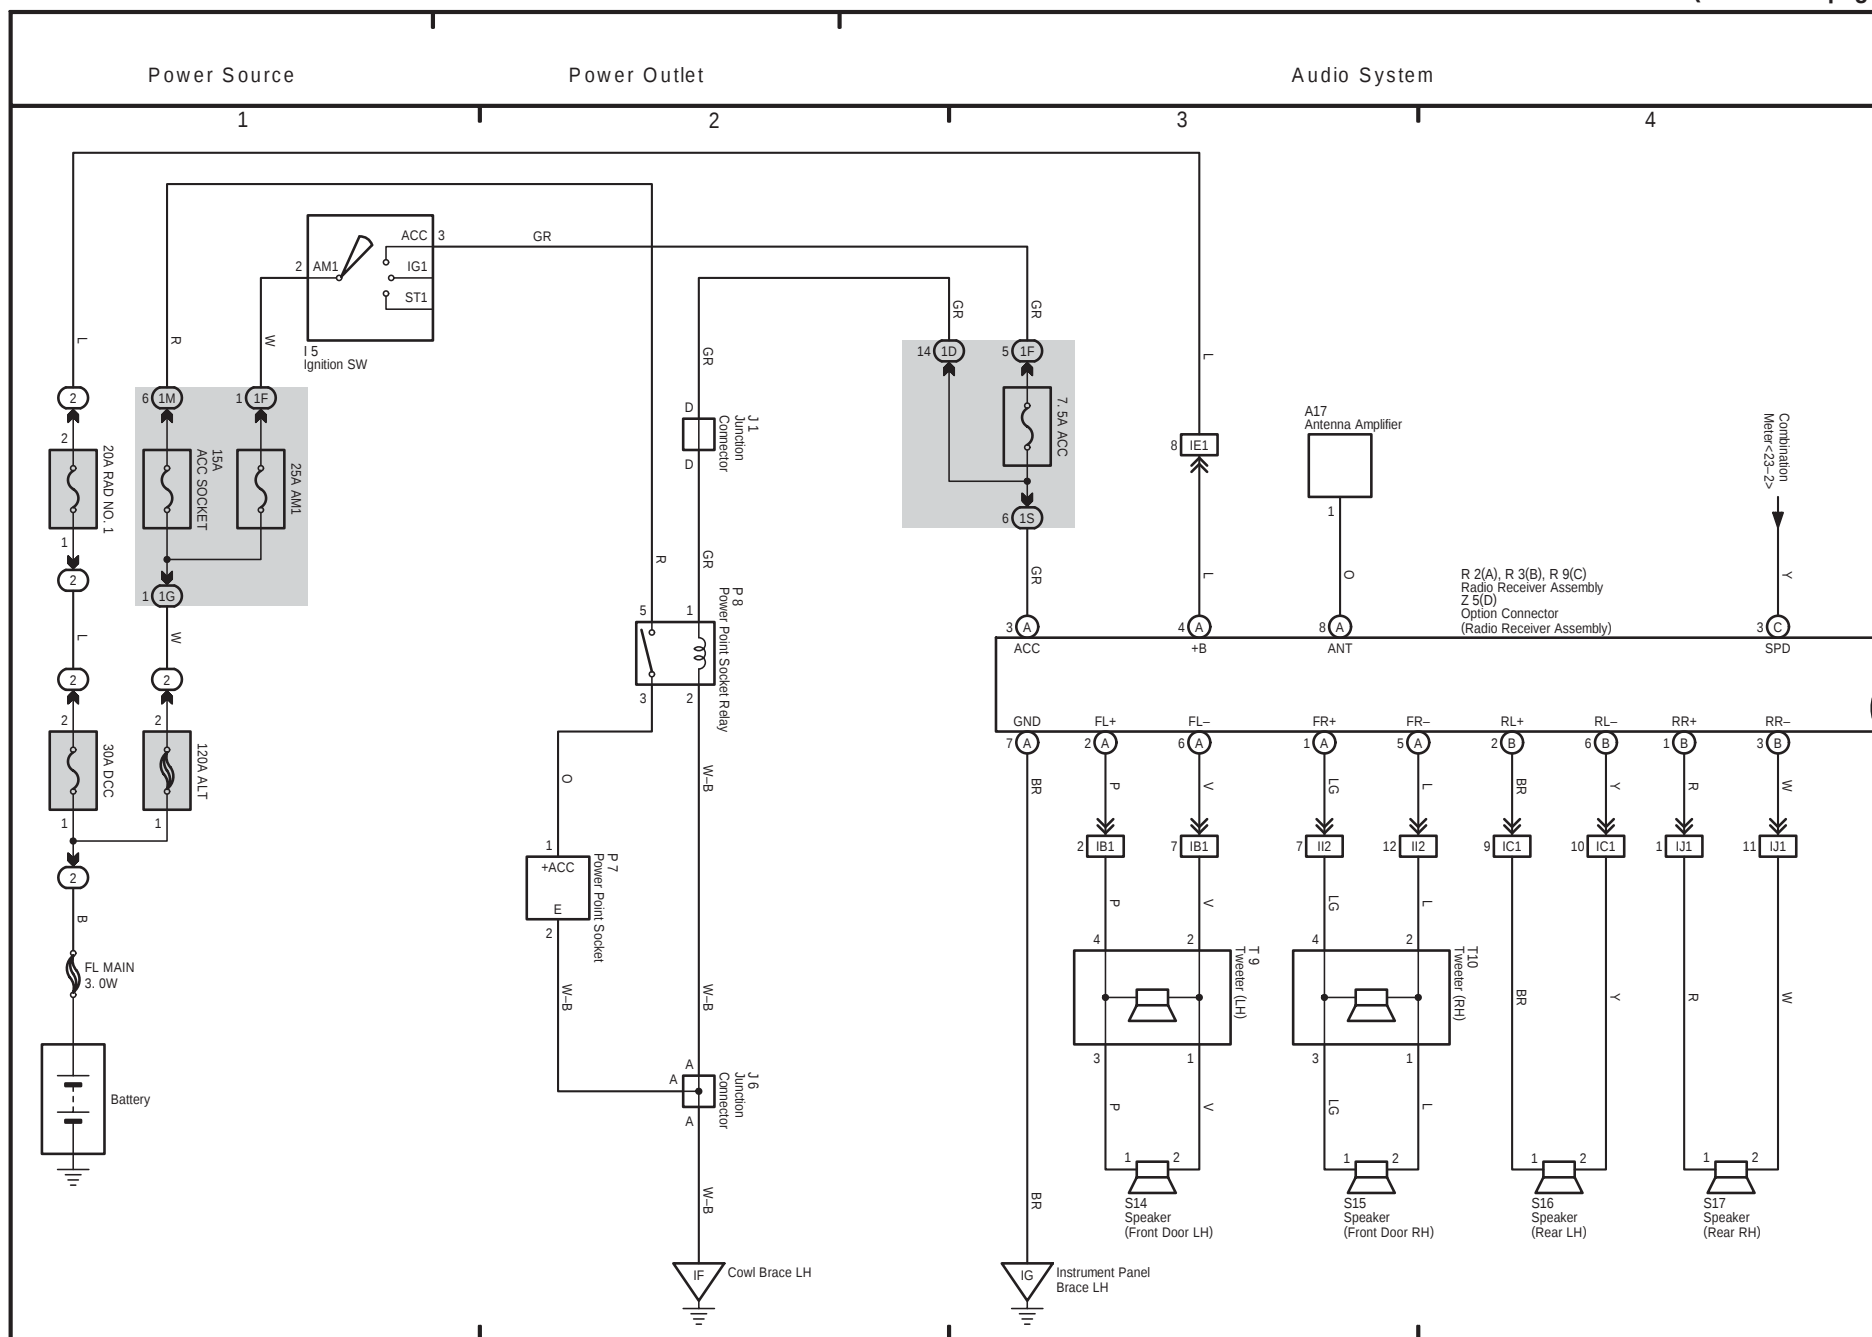

Audio System

* 1 : w/ Audio Steering Pad SW


Z 4
Option Connector (IPOD Unit)

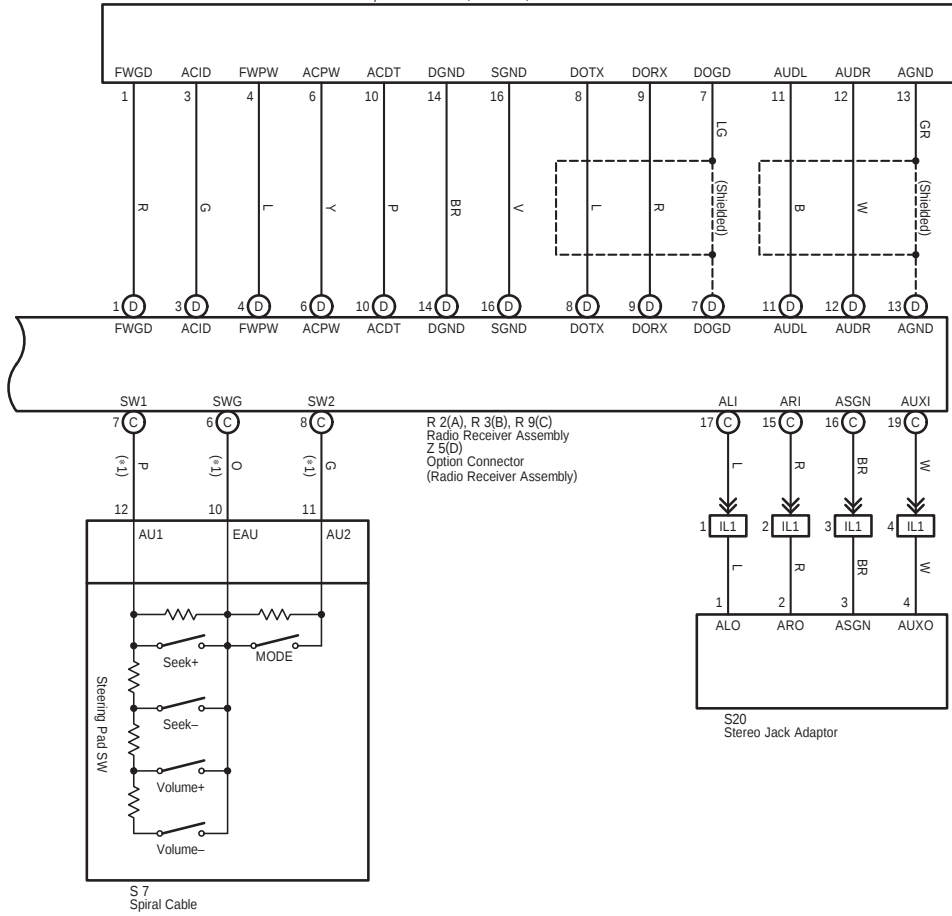


OVERALL ELECTRICAL WIRING DIAGRAM

(Cont. next page)

23 tC

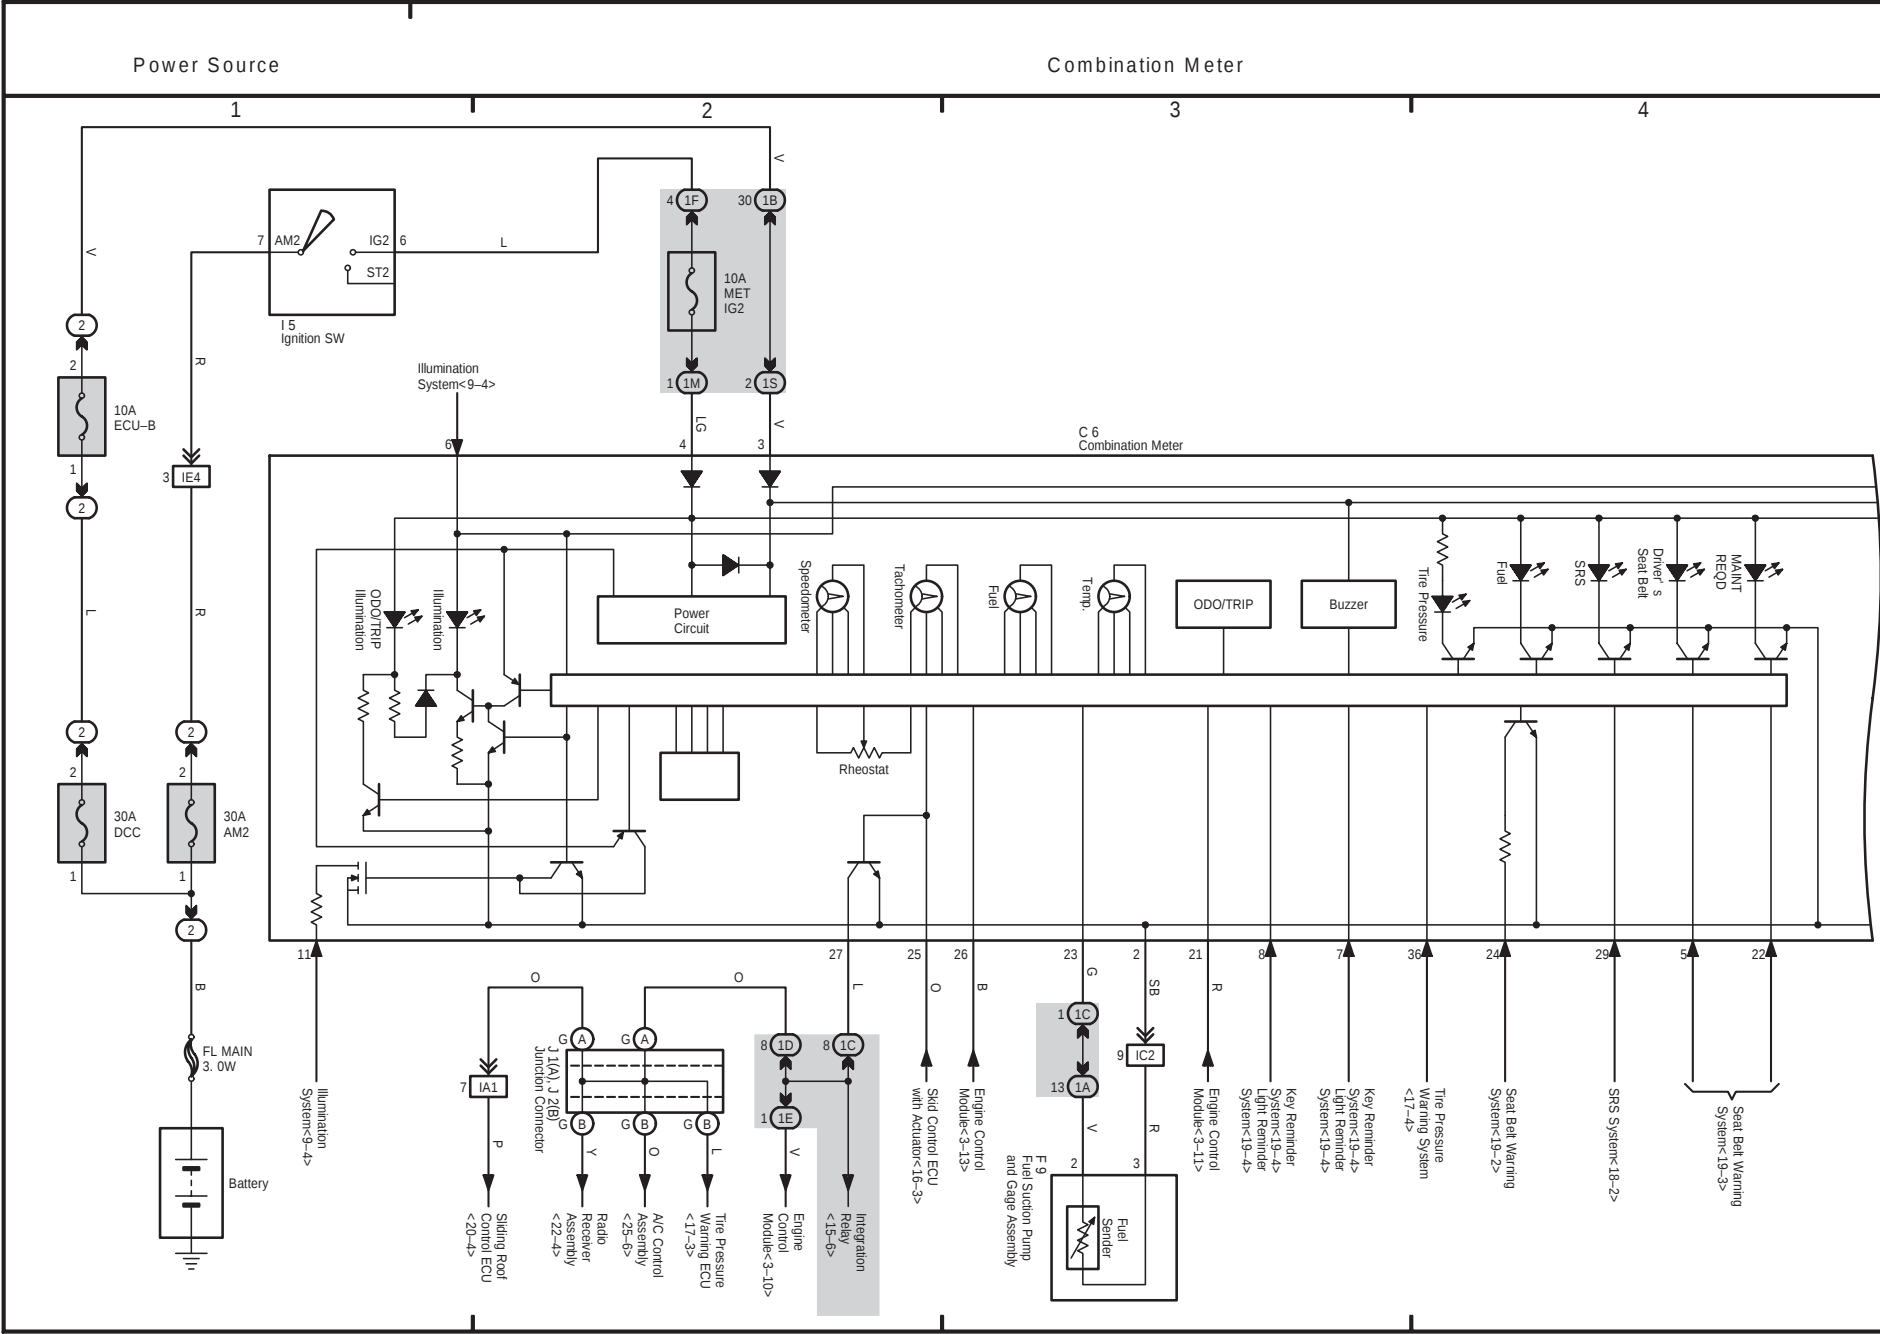


SCION tC (EM0300U)

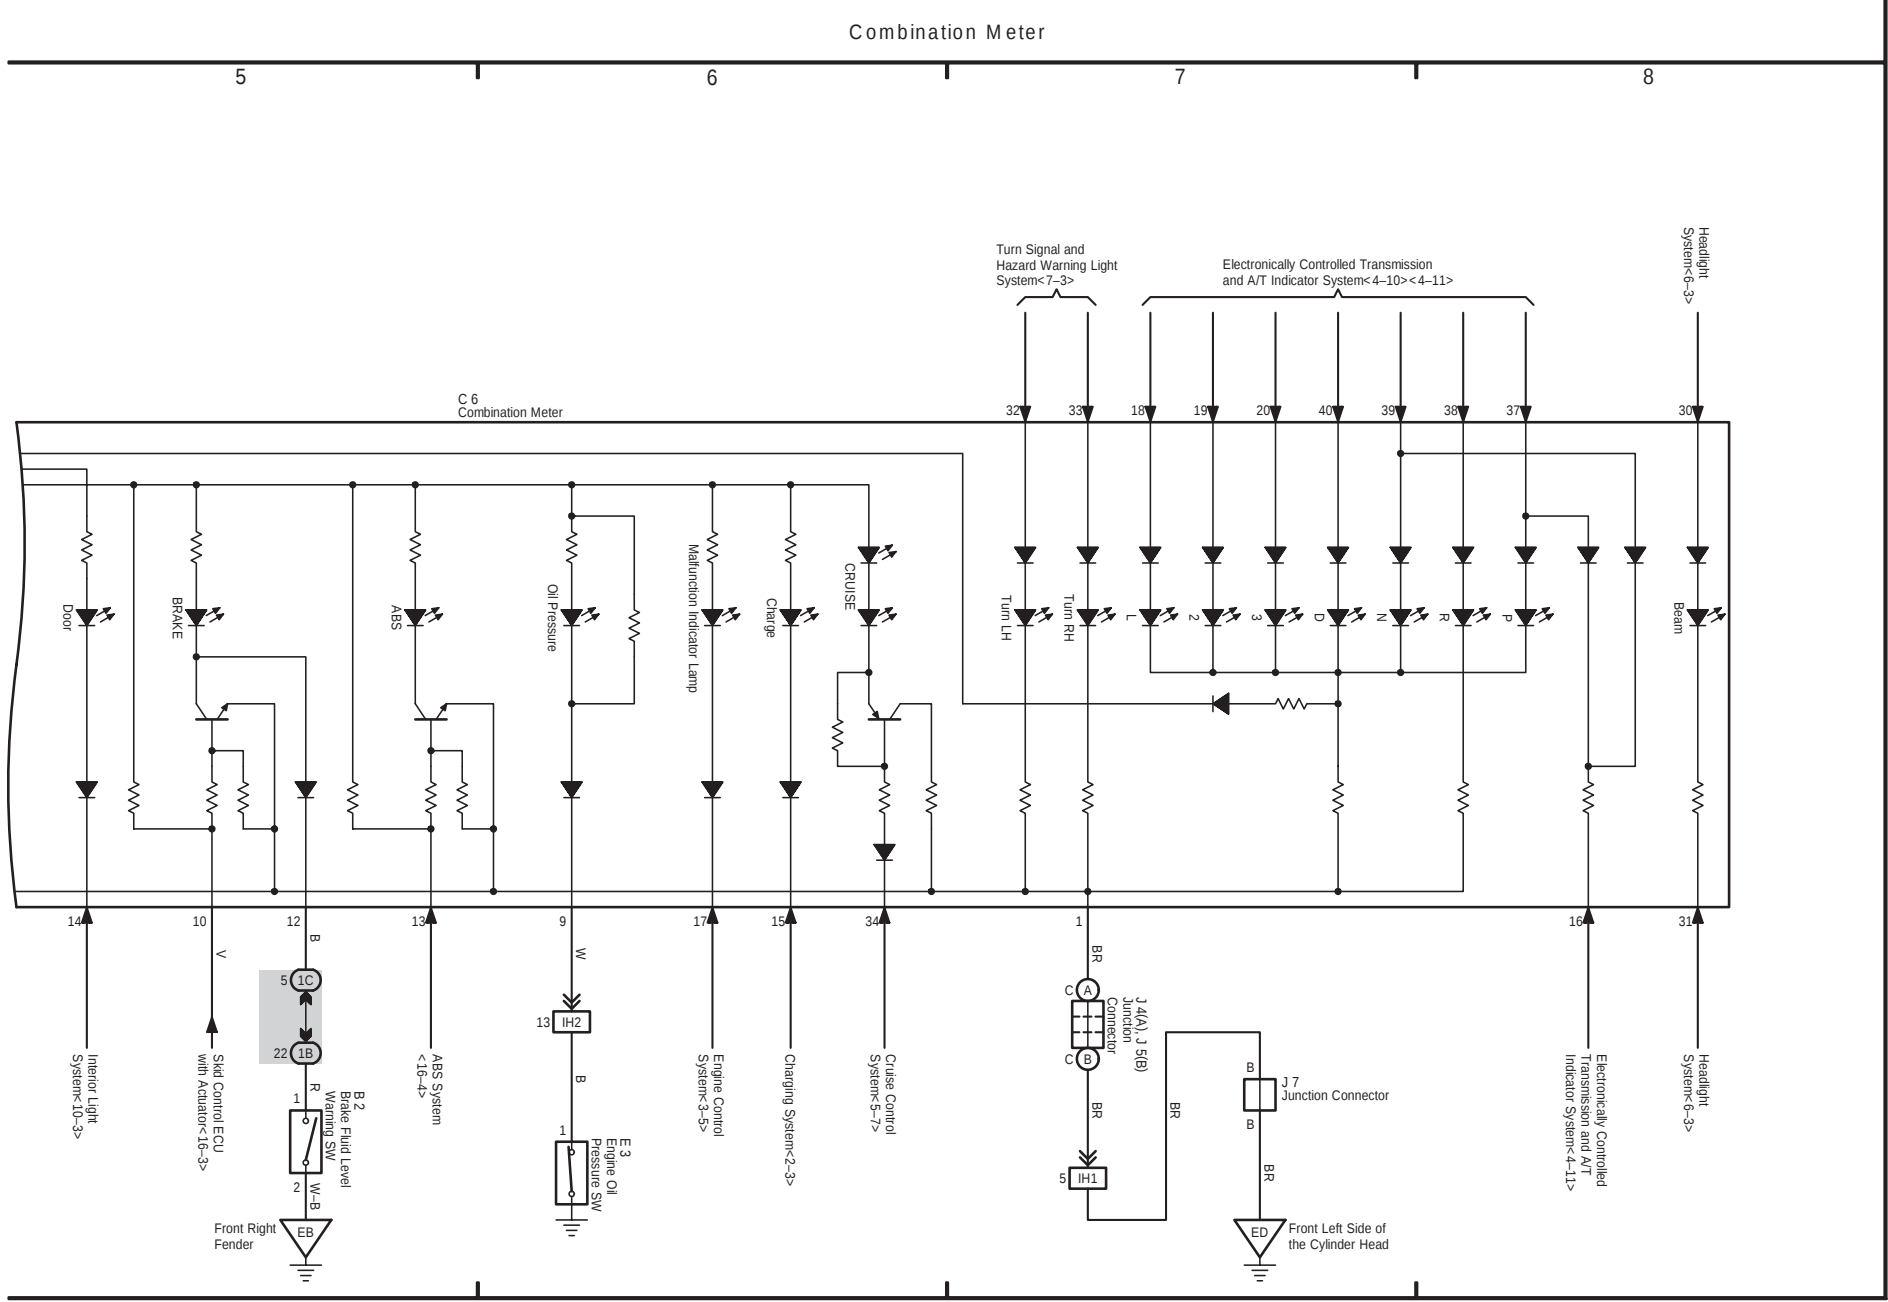

SCION tC (EM0300U)

M OVERALL ELECTRICAL WIRING DIAGRAM

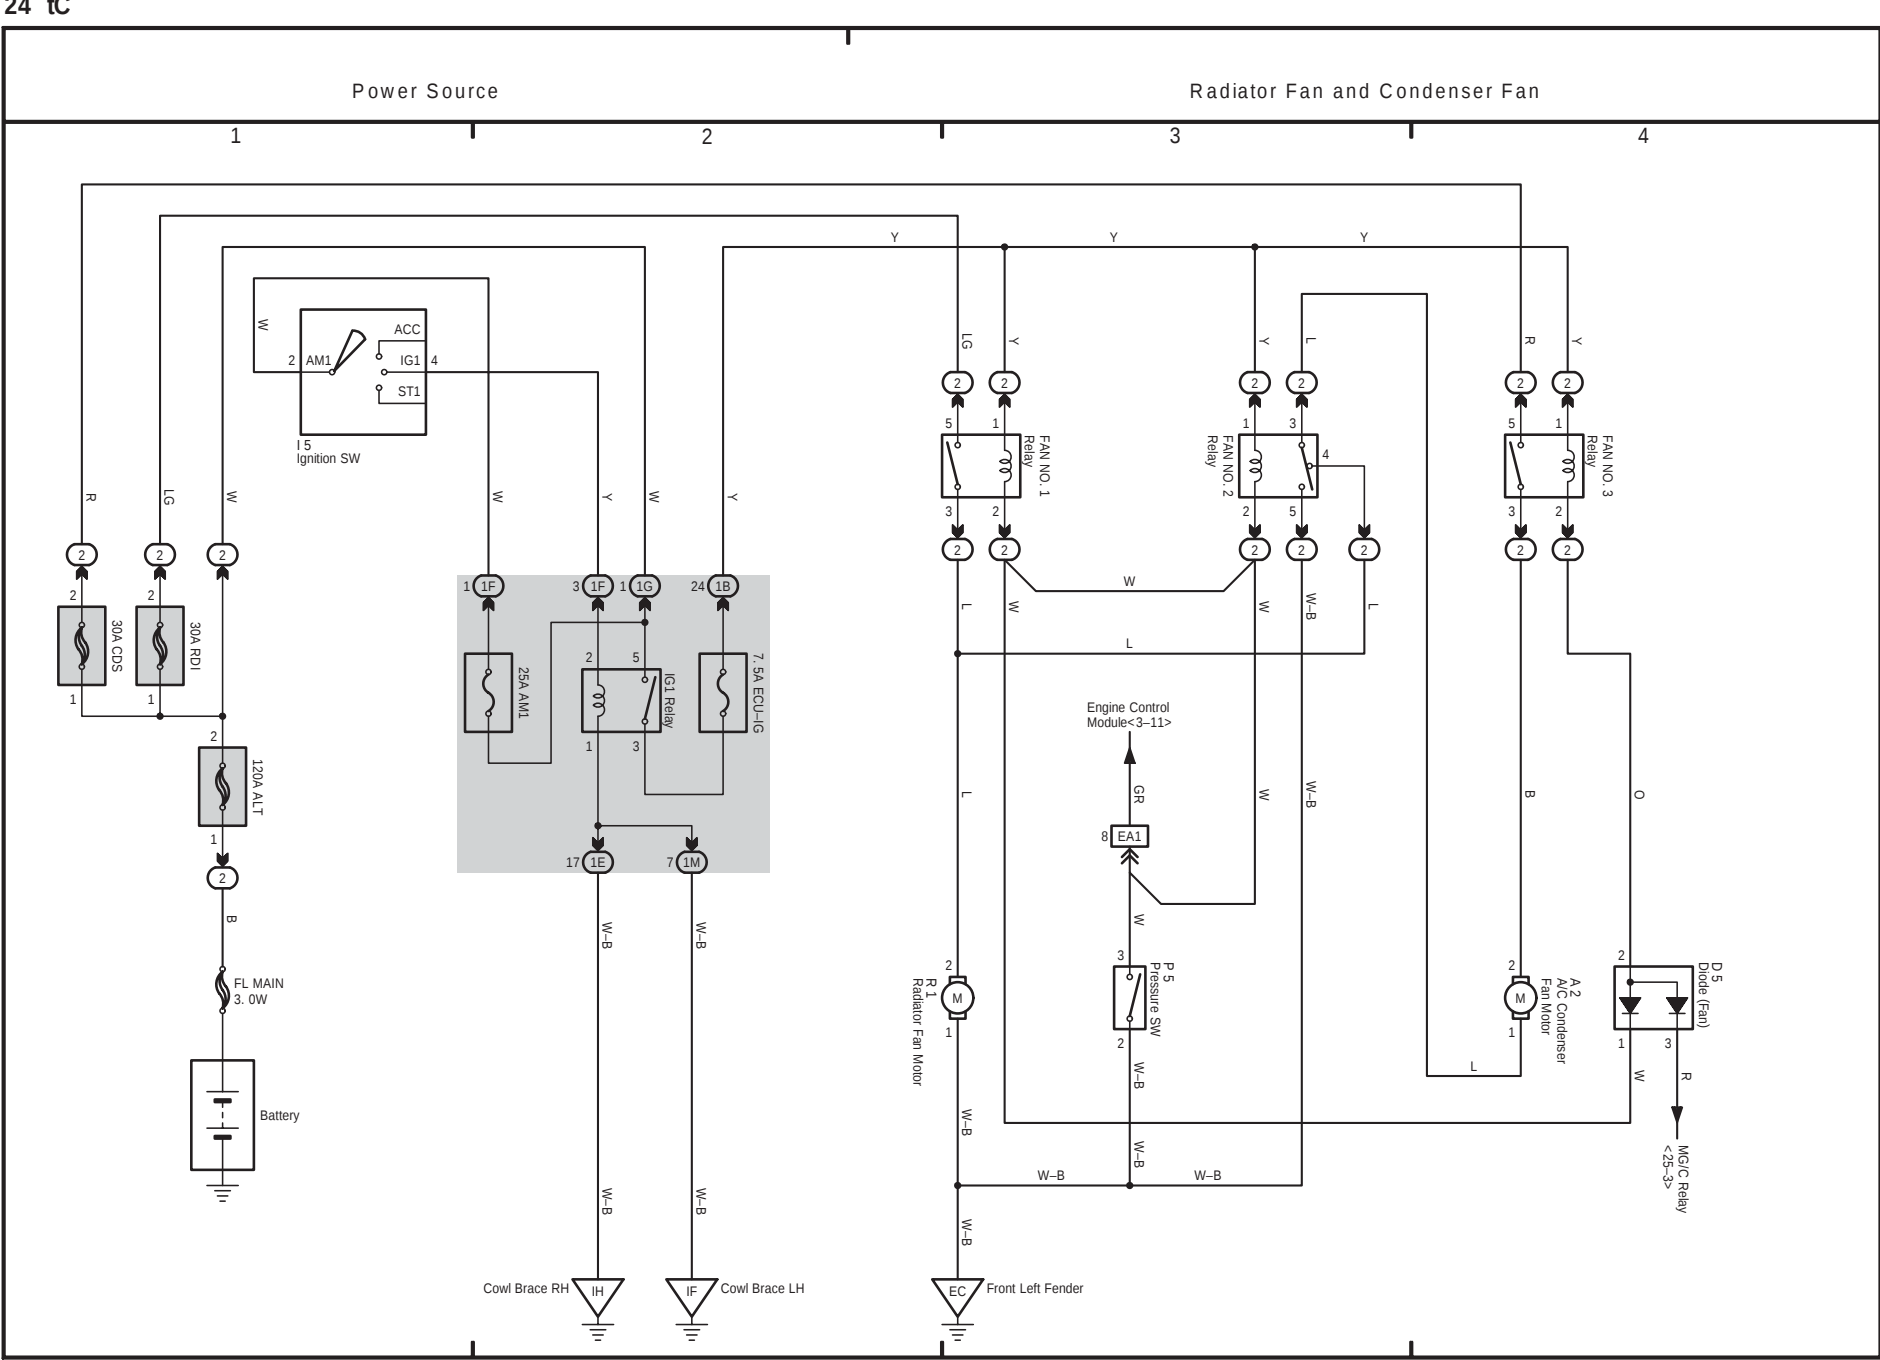


(Cont. next page)

* 1 : w/ Cruise Control
* 2 : w/o Cruise Control

25 tC

252

SCION tC (EM0300U)

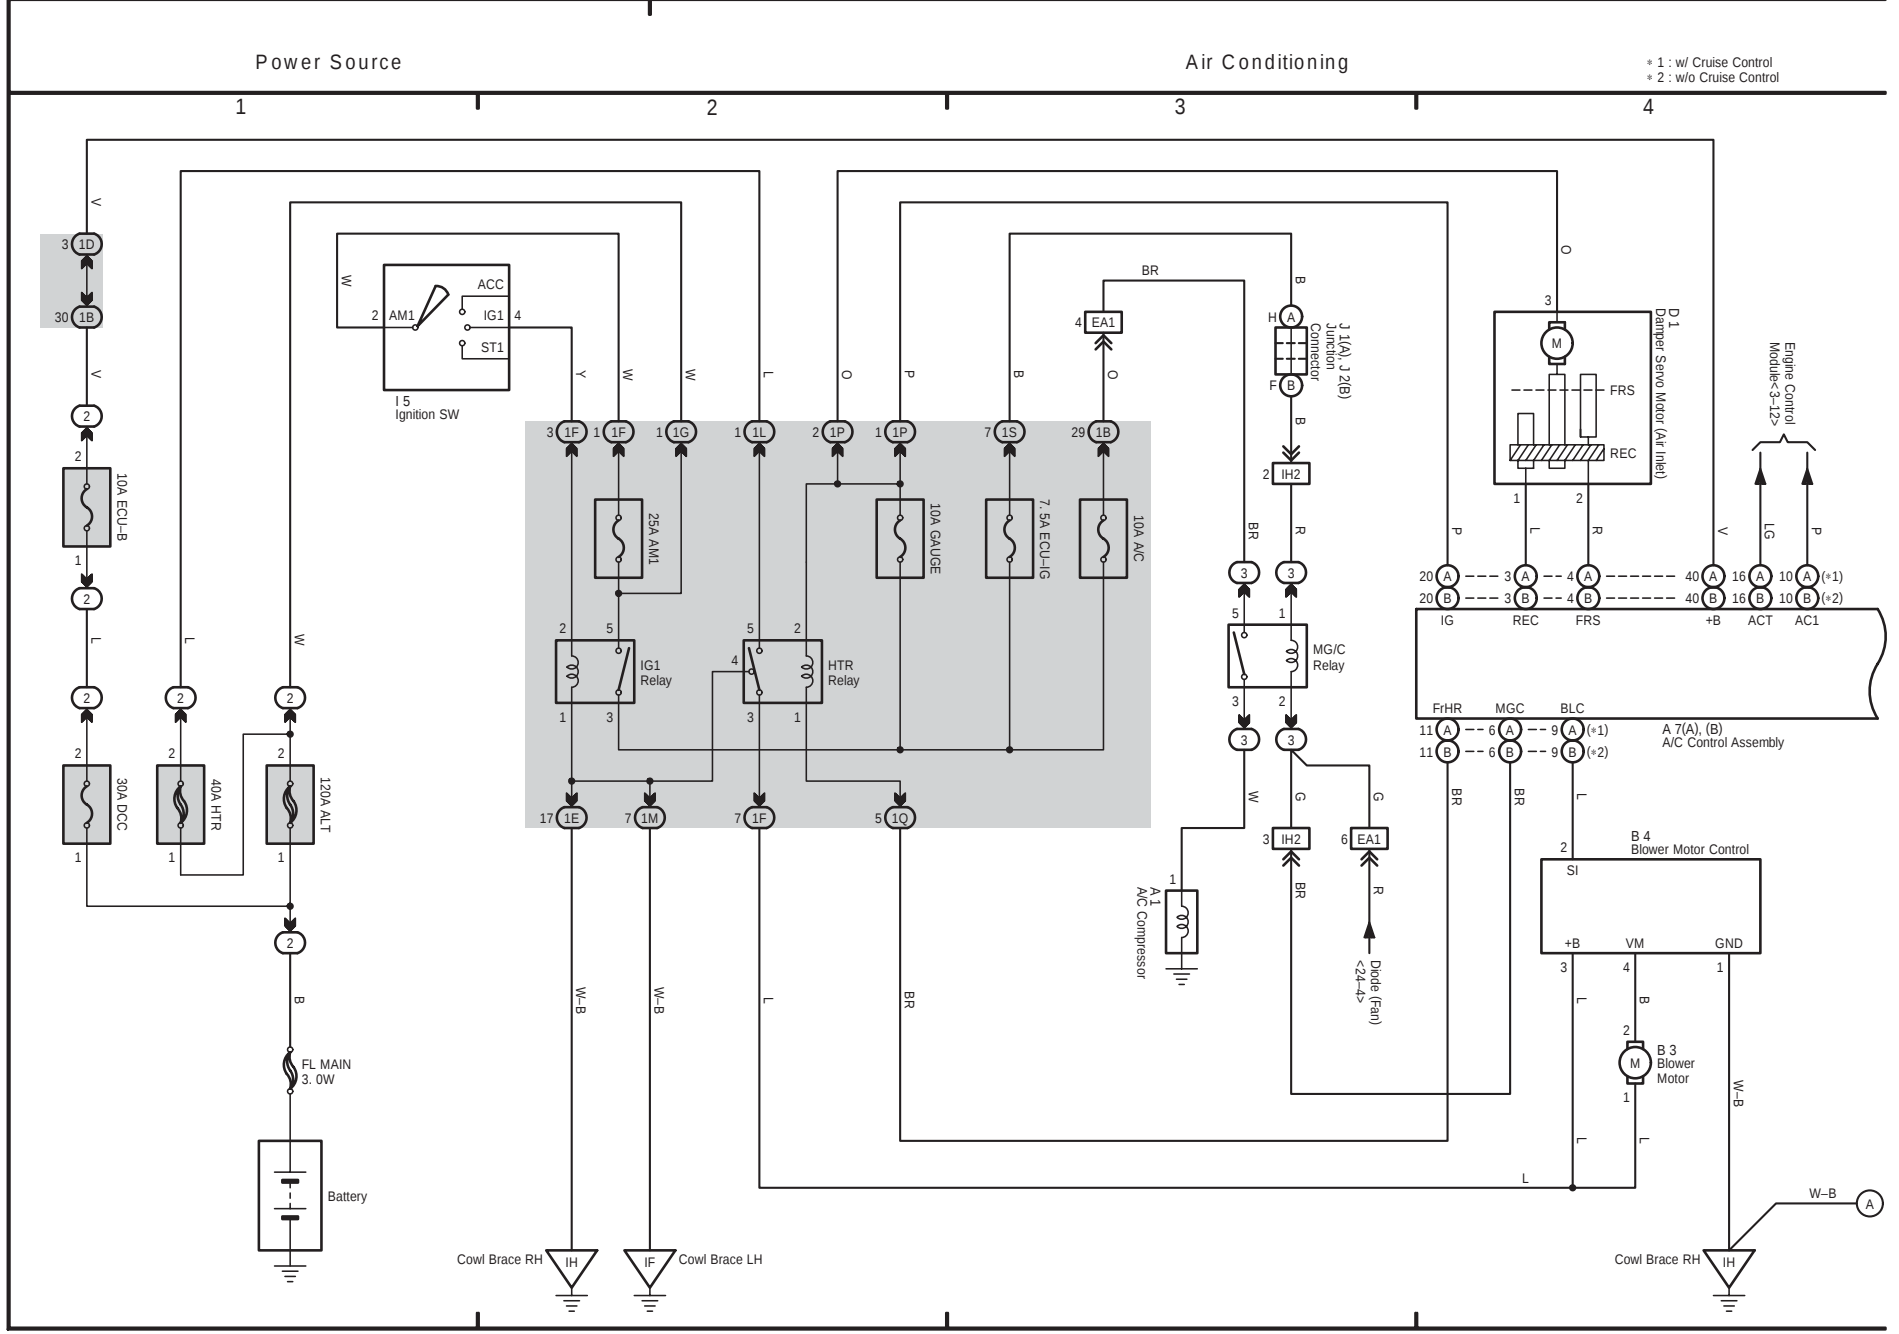

Air Conditioning

* 1 : w/ Cruise Control
* 2 : w/o Cruise Control

