

YFZ450S

SERVICE MANUAL

LIT-11616-17-11 5TG-28197-10

EBS00001

YFZ450S SERVICE MANUAL ©2003 by Yamaha Motor Corporation, U.S.A. First Edition, May 2003 All rights reserved. Any reproduction or unauthorized use without the written permission of Yamaha Motor Corporation, U.S.A. is expressly prohibited. Printed in U.S.A. LIT-11616-17-11

EBS00002

NOTICE

This manual was produced by the Yamaha Motor Company primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual, so it is assumed that anyone who uses this book to perform maintenance and repairs on Yamaha machine has a basic understanding of the mechanical ideas and the procedures of machine repair. Repairs attempted by anyone without this knowledge are likely to render the machine unsafe and unfit for use.

Yamaha Motor Company, Ltd. is continually striving to improve all its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

NOTE:	
Designs and specifications are subject to change without notice.	

EBS00003

IMPORTANT INFORMATION

Particularly important information is distinguished in this manual by the following notations.

The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

Failure to follow WARNING instructions <u>could result in severe injury or death</u> to the machine operator, a bystander or a person checking or repairing the machine.

CAUTION: A CAUTION indicates special precautions that must be taken to avoid damage to the machine.

NOTE: A NOTE provides key information to make procedures easier or clearer.

HOW TO USE THIS MANUAL

MANUAL ORGANIZATION

This manual consists of chapters for the main categories of subjects. (See "symbols")

1st title ①: This is the title of the chapter with its symbol in the upper right corner of each page.


2nd title ②: This title indicates the section of the chapter and only appears on the first page of each section. It is located in the upper left corner of the page.


3rd title ③: This title indicates a sub-section that is followed by step-by-step procedures accompanied by corresponding illustrations.

EXPLODED DIAGRAMS

To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.

- 1. An easy-to-see exploded diagram 4 is provided for removal and disassembly jobs.
- 2. Numbers ⑤ are given in the order of the jobs in the exploded diagram. A number that is enclosed by a circle indicates a disassembly step.
- 3. An explanation of jobs and notes is presented in an easy-to-read way by the use of symbol marks⑥. The meanings of the symbol marks are given on the next page.
- 4. A job instruction chart ⑦ accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- 5. For jobs requiring more information, the step-by-step format supplements ® are given in addition to the exploded diagram and the job instruction chart.

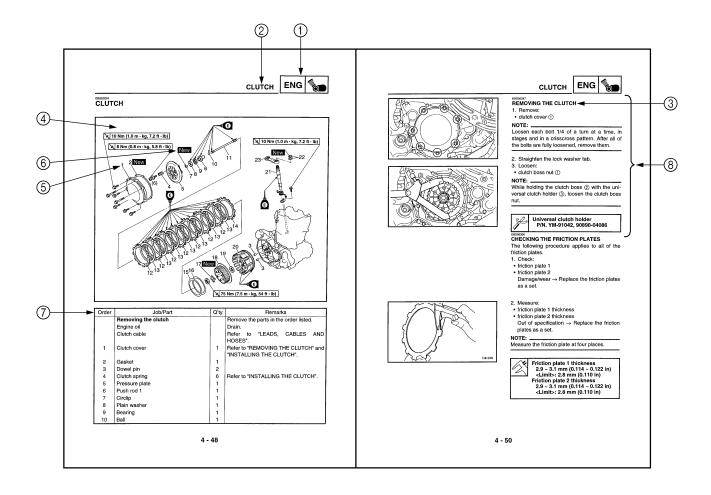

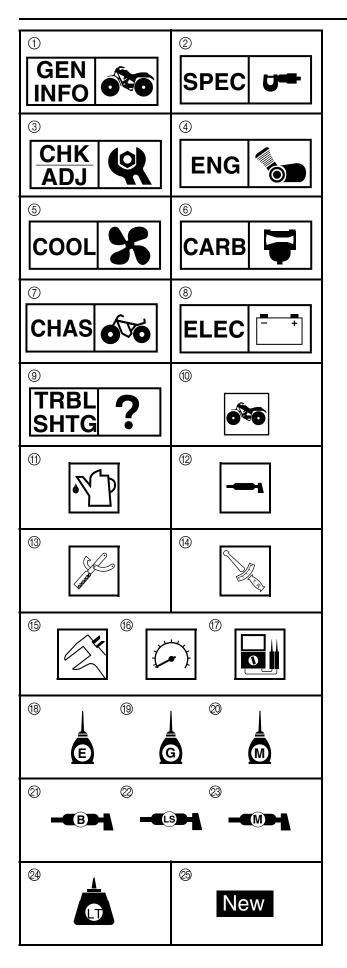

EBS00006

SYMBOLS

The following symbols are not relevant to every machine.

Symbols ① to ③ indicate the subject of each chapter.

- (1) General information
- ② Specifications
- ③ Periodic checks and adjustments
- 4 Engine
- (5) Cooling system
- 6 Carburetor
- (7) Chassis
- ® Electrical
- Troubleshooting

Symbols (1) to (7) indicate the following

- 10 Serviceable with engine mounted
- 1 Filling fluid
- 12 Lubricant
- (3) Special tool
- 14 Torque
- (5) Wear limit, clearance
- (6) Engine speed
- (7) Electrical data (Ω, V, A)

Symbols ® to Ø in the exploded diagrams indicate the types of lubricants and lubrication points.

- (8) Apply engine oil
- Apply gear oil
- Apply molybdenum disulfide oil
- 2) Apply wheel bearing grease
- 22 Apply lithium-soap-based grease
- 23 Apply molybdenum disulfide grease

Symbols ② to ⑤ in the exploded diagrams indicate where to apply a locking agent ② and when to install a new part ⑤.

- ② Apply the locking agent (LOCTITE®)
- 25 Replace

EBS00008

TABLE OF CONTENTS

GENERAL INFORMATION	GEN INFO
SPECIFICATIONS	SPEC 2
PERIODIC CHECKS AND ADJUSTMENTS	CHK ADJ
ENGINE	ENG 4
COOLING SYSTEM	COOL 5
CARBURETOR	CARB 6
CHASSIS	CHAS 7
ELECTRICAL	ELEC 8
TROUBLESHOOTING	TRBL SHTG

CHAPTER 1 GENERAL INFORMATION

MACHINE IDENTIFICATION 1- VEHICLE IDENTIFICATION NUMBER 1- MODEL LABEL 1-	-1
IMPORTANT INFORMATION1-PREPARATION FOR REMOVAL AND DISASSEMBLY1-REPLACEMENT PARTS1-GASKETS, OIL SEALS AND O-RINGS1-LOCK WASHERS/PLATES AND COTTER PINS1-BEARINGS AND OIL SEALS1-CIRCLIPS1-CHECKING THE CONNECTIONS1-	2 2 3 3 3
SPECIAL TOOLS1-	.5
CHAPTER 2 SPECIFICATIONS	
GENERAL SPECIFICATIONS2-	-1
ENGINE SPECIFICATIONS2-	4
CHASSIS SPECIFICATIONS2-1	2
ELECTRICAL SPECIFICATIONS2-1	4
TIGHTENING TORQUES	6
HOW TO USE THE CONVERSION TABLE2-2	1:1
GENERAL TIGHTENING TORQUE SPECIFICATIONS2-2	1:1
LUBRICATION POINTS AND LUBRICANT TYPES	
COOLANT FLOW DIAGRAMS2-2	<u>'</u> 4
OIL FLOW DIAGRAMS2-2	:6
CABLE ROUTING 2-2	8.

CHAPTER 3 PERIODIC CHECKS AND ADJUSTMENTS

INTRODUCTION	3-1
PERIODIC MAINTENANCE/LUBRICATION	3-1
SEAT, FENDERS AND FUEL TANK	3-3
SEAT, FUEL TANK COVER AND SIDE COVERS	
FOOT PROTECTORS AND ENGINE SKID PLATE	3-4
HEADLIGHTS AND FRONT FENDER	3-5
REAR FENDER	3-6
FUEL TANK	3-7
ENGINE	3-8
ADJUSTING THE VALVE CLEARANCE	3-8
ADJUSTING THE ENGINE IDLING SPEED	
ADJUSTING THE THROTTLE LEVER FREE PLAY	3-14
ADJUSTING THE SPEED LIMITER	3-16
CHECKING THE SPARK PLUG	3-17
CHECKING THE IGNITION TIMING	3-18
CHECKING THE ENGINE OIL LEVEL	3-19
CHANGING THE ENGINE OIL	
ADJUSTING THE CLUTCH CABLE	
CLEANING THE AIR FILTER ELEMENT	
CHECKING THE COOLANT LEVEL	
CHANGING THE COOLANT	
CHECKING THE COOLANT TEMPERATURE WARNING LIGHT	
CLEANING THE SPARK ARRESTER	3-33
CHASSIS	
ADJUSTING THE FRONT BRAKE	3-34
ADJUSTING THE BRAKE LEVER	3-34
ADJUSTING THE REAR BRAKE	
ADJUSTING THE PARKING BRAKE	3-35
CHECKING THE BRAKE FLUID LEVEL	
CHECKING THE FRONT BRAKE PADS	
CHECKING THE REAR BRAKE PADS	
ADJUSTING THE REAR BRAKE LIGHT SWITCH	
CHECKING THE BRAKE HOSES	
BLEEDING THE HYDRAULIC BRAKE SYSTEM	
ADJUSTING THE SHIFT PEDAL	
ADJUSTING THE DRIVE CHAIN SLACK	
CHECKING THE STEERING SYSTEM	
ADJUSTING THE TOE-IN	
CHECKING THE FRONT AND REAR SHOCK ABSORBERS	
ADJUSTING THE FRONT SHOCK ABSORBERS	
ADJUSTING THE REAR SHOCK ABSORBER	
CHECKING THE TIRES	3-53

CHECKING THE WHEELS	
CHECKING AND LUBRICATING THE CABLES	
LUBRICATING THE LEVERS AND PEDALS	-56
CHECKING AND CHARGING THE BATTERY3-	
CHECKING AND CHARGING THE BATTERY3- CHECKING THE FUSES3-	
ADJUSTING THE HEADLIGHT BEAM	
REPLACING A HEADLIGHT BULB	
CHARTER 4	
CHAPTER 4	
ENGINE	
ENGINE REMOVAL	4 1
MUFFLER AND EXHAUST PIPE	+- ı 4-1
INSTALLING THE EXHAUST PIPE AND MUFFLER	
LEADS, CABLES AND HOSES	
ENGINE MOUNTING BOLTS	
INSTALLING THE ENGINE	4-8
CAMSHAFTS	4-9
CYLINDER HEAD COVER	_
CAMSHAFTS4-	
REMOVING THE CAMSHAFTS4-	
CHECKING THE CAMSHAFTS4- CHECKING THE CAMSHAFT SPROCKETS4-	
CHECKING THE CAMSHAFT SPROCKETS4- CHECKING THE DECOMPRESSION SYSTEM4-	
CHECKING THE TIMING CHAIN GUIDE4-	
CHECKING THE TIMING CHAIN TENSIONER4-	
INSTALLING THE CAMSHAFTS4-	·15
CYLINDER HEAD4-	-18
REMOVING THE CYLINDER HEAD4-	
CHECKING THE CYLINDER HEAD4-	
CHECKING THE OIL DELIVERY PIPE4-	
CHECKING THE TIMING CHAIN GUIDE4-	
INSTALLING THE CYLINDER HEAD4-	·21
VALVES AND VALVE SPRINGS4-	
REMOVING THE VALVES AND VALVE SPRINGS	
CHECKING THE VALVE AND VALVE SPRINGS	
CHECKING THE VALVE LIFTERS4- INSTALLING THE VALVES AND VALVE SPRINGS4-	
INSTALLING THE VALVES AND VALVE SPRINGS4-	32

CYLINDER AND PISTON	4-34
REMOVING THE PISTON	4-35
CHECKING THE CYLINDER AND PISTON	
CHECKING THE PISTON RINGS	
CHECKING THE PISTON PIN	
INSTALLING THE PISTON	
INSTALLING THE CYLINDER	
INSTALLING THE OTEINDER	
A.C. MAGNETO	
REMOVING THE A.C. MAGNETO ROTOR	
CHECKING THE STATOR COIL AND PICKUP COIL	4-44
CHECKING THE STARTER CLUTCH	4-45
CHECKING THE TORQUE LIMITER	4-46
INSTALLING THE A.C. MAGNETO ROTOR	
	4 40
CLUTCH	
REMOVING THE CLUTCH	
CHECKING THE FRICTION PLATES	
CHECKING THE CLUTCH PLATES	
CHECKING THE CLUTCH SPRINGS	
CHECKING THE CLUTCH HOUSING	
CHECKING THE CLUTCH BOSS	
CHECKING THE PRESSURE PLATE	
CHECKING THE PUSH RODS	
CHECKING THE PUSH LEVER	
CHECKING THE PRIMARY DRIVEN GEAR	4-52
INSTALLING THE CLUTCH	4-53
BALANCER	1-55
REMOVING THE BALANCER DRIVE GEAR	4-55
AND BALANCER DRIVEN GEAR	1 56
CHECKING THE PRIMARY DRIVE GEAR, BALANCER DRIVE GEAR	
AND BALANCER DRIVEN GEAR	
CHECKING THE BALANCER	
	4-56
INSTALLING THE BALANCER DRIVE GEAR	4 57
AND BALANCER DRIVEN GEAR	4-57
OIL PUMP	4-58
CHECKING THE OIL PUMP	4-60
CUIET CUAET	4.04
SHIFT SHAFTCHECKING THE SHIFT SHAFT	
CHECKING THE STOPPER LEVER	
CHECKING THE SHIFT GUIDE AND SHIFT LEVER	
CHECKING THE SHIFT DRUM SEGMENT	
INSTALLING THE SHIFT LEVER	
INSTALLING THE SHIFT SHAFT	4-64

CRANKCASE	
OIL SEAL AND BEARING	4-67
SEPARATING THE CRANKCASE	4-68
CHECKING THE OIL STRAINER AND OIL DELIVERY PIF	PE 24-68
CHECKING THE TIMING CHAIN AND GUIDE	4-69
CHECKING THE BEARINGS AND OIL SEALS	4-69
CHECKING THE CRANKCASE	4-69
ASSEMBLING THE CRANKCASE	
CRANKSHAFT	4-72
REMOVING THE CRANKSHAFT	
CHECKING THE CRANKSHAFT	
INSTALLING THE CRANKSHAFT	
INSTALLING THE GHANNSHALT	4-74
TDANGMICCION	4 75
TRANSMISSION	
MAIN AXLE	=
DRIVE AXLE	
CHECKING THE SHIFT FORKS	
CHECKING THE SHIFT DRUM	
CHECKING THE TRANSMISSION	
ASSEMBLING THE MAIN AXLE AND DRIVE AXLE	
INSTALLING THE TRANSMISSION	4-80
CHAPTER 5	
COOLING SYSTEM	
COOLING SYSTEM	
COOLING SYSTEM RADIATOR	5-1
RADIATOR	5-3
RADIATORCHECKING THE RADIATOR	5-3
RADIATORCHECKING THE RADIATOR	5-3 5-4
RADIATORCHECKING THE RADIATORINSTALLING THE RADIATOR	5-3 5-4
RADIATOR	5-3 5-4
RADIATOR	5-3 5-4
RADIATOR	5-3 5-4
RADIATOR	5-3 5-4
RADIATOR	5-3 5-4
RADIATOR CHECKING THE RADIATOR INSTALLING THE RADIATOR WATER PUMP CHECKING THE WATER PUMP CHAPTER 6 CARBURETOR	5-3 5-4 5-5 5-7
RADIATOR CHECKING THE RADIATOR INSTALLING THE RADIATOR WATER PUMP CHECKING THE WATER PUMP CHAPTER 6 CARBURETOR	5-3 5-4 5-5 5-7
RADIATOR CHECKING THE RADIATOR INSTALLING THE RADIATOR WATER PUMP CHECKING THE WATER PUMP CHAPTER 6 CARBURETOR DISASSEMBLING THE CARBURETOR	5-3 5-4 5-5 5-7
RADIATOR CHECKING THE RADIATOR INSTALLING THE RADIATOR WATER PUMP CHECKING THE WATER PUMP CHAPTER 6 CARBURETOR DISASSEMBLING THE CARBURETOR CHECKING THE CARBURETOR	5-3 5-4 5-5 5-7
RADIATOR CHECKING THE RADIATOR INSTALLING THE RADIATOR WATER PUMP CHECKING THE WATER PUMP CHAPTER 6 CARBURETOR DISASSEMBLING THE CARBURETOR CHECKING THE CARBURETOR ASSEMBLING THE CARBURETOR	5-3 5-4 5-5 5-7
RADIATOR CHECKING THE RADIATOR INSTALLING THE RADIATOR WATER PUMP CHECKING THE WATER PUMP CHAPTER 6 CARBURETOR DISASSEMBLING THE CARBURETOR CHECKING THE CARBURETOR ASSEMBLING THE CARBURETOR ASSEMBLING THE CARBURETOR ADJUSTING THE ACCELERATOR PUMP TIMING	
RADIATOR CHECKING THE RADIATOR INSTALLING THE RADIATOR WATER PUMP CHECKING THE WATER PUMP CHAPTER 6 CARBURETOR DISASSEMBLING THE CARBURETOR CHECKING THE CARBURETOR ASSEMBLING THE CARBURETOR	

CHAPTER 7 CHASSIS

FRONT AND REAR WHEELS	
FRONT WHEELS	
REAR WHEELS	7-3
CHECKING THE WHEELS	7-4
CHECKING THE WHEEL HUBS	7-4
CHECKING THE BRAKE DISCS	
INSTALLING THE FRONT WHEEL HUB BEARINGS	7-6
INSTALLING THE FRONT BRAKE DISCS	7-6
INSTALLING THE FRONT WHEELS	7-6
INSTALLING THE WHEEL HUBS	7-7
REAR AXLE AND REAR AXLE HUB	7-8
REMOVING THE REAR AXLE	7-10
CHECKING THE REAR AXLE	
CHECKING THE DRIVEN SPROCKET	7-11
CHECKING THE BRAKE DISC	7-11
INSTALLING THE DRIVEN SPROCKET	
INSTALLING THE REAR AXLE	7-12
FRONT AND REAR BRAKES	
FRONT BRAKE PADS	
REAR BRAKE PADS	
REPLACING THE FRONT BRAKE PADS	
REPLACING THE REAR BRAKE PADS	
FRONT BRAKE MASTER CYLINDER	
REAR BRAKE MASTER CYLINDER	
CHECKING THE MASTER CYLINDERS	
ASSEMBLING THE FRONT BRAKE MASTER CYLINDER	
ASSEMBLING THE REAR BRAKE MASTER CYLINDER	
INSTALLING THE FRONT BRAKE MASTER CYLINDER	_
INSTALLING THE REAR BRAKE MASTER CYLINDER	
FRONT BRAKE CALIPERS	
REAR BRAKE CALIPER	
REMOVING THE PARKING BRAKE CABLE	
DISASSEMBLING THE FRONT AND REAR BRAKE CALIPERS CHECKING THE FRONT AND REAR BRAKE CALIPERS	
ASSEMBLING THE FRONT BRAKE CALIPERS	
ASSEMBLING THE PRONT BRAKE CALIPERS	
INSTALLING THE FRONT BRAKE CALIPERS	
INSTALLING THE REAR BRAKE CALIPER	
CTEEDING CVCTEM	7 14
STEERING SYSTEM	
HANDLEBAR REMOVING THE FRONT BRAKE LIGHT SWITCH	
AND CLUTCH SWITCH	
REMOVING THE HANDLEBAR GRIPS	
CHECKING THE HANDLEBAR	7-43

INSTALLING THE HANDLEBAR	.7-44
INSTALLING THE HANDLEBAR GRIPS	.7-44
INSTALLING THE CLUTCH LEVER	.7-45
INSTALLING THE BRAKE MASTER CYLINDER	.7-45
STEERING STEM	.7-46
REMOVING THE BEARING RETAINER	.7-48
CHECKING THE STEERING STEM	.7-48
INSTALLING THE BEARING RETAINER	.7-48
INSTALLING THE STEERING STEM	
INSTALLING THE LOCK WASHER	.7-49
INSTALLING THE PITMAN ARM	
TIE-RODS AND STEERING KNUCKLES	.7-50
REMOVING THE STEERING KNUCKLES	.7-51
CHECKING THE TIE-RODS	
CHECKING THE STEERING KNUCKLES	.7-51
INSTALLING THE TIE-RODS	.7-51
FRONT ARMS AND FRONT SHOCK ABSORBER ASSEMBLIES	7-59
REMOVING THE FRONT ARMS	
CHECKING THE FRONT ARMS	
HANDLING THE FRONT SHOCK ABSORBER	. 1 - 5 -
AND GAS CYLINDER	7-54
DISPOSING OF A FRONT SHOCK ABSORBER	. 1 - 5 -
AND GAS CYLINDER	7-55
CHECKING THE FRONT SHOCK ABSORBERS	
CHECKING THE BALL JOINTS	
INSTALLING THE FRONT ARMS	
	•.
REAR SHOCK ABSORBER AND RELAY ARM	. /-58
HANDLING THE REAR SHOCK ABSORBER	7 00
AND GAS CYLINDER	. /-60
DISPOSING OF A REAR SHOCK ABSORBER	7.00
AND GAS CYLINDER	
REMOVING THE REAR SHOCK ABSORBER	
CHECKING THE REAR SHOCK ABSORBER CHECKING THE RELAY ARM AND CONNECTING ARM	
INSTALLING THE RELAY ARM AND CONNECTING ARM INSTALLING THE REAR SHOCK ABSORBER	
INSTALLING THE REAR SHOCK ABSURBER	. /-62
SWINGARM AND DRIVE CHAIN	.7-63
REMOVING THE SWINGARM	.7-65
CHECKING THE SWINGARM	
CHECKING THE DRIVE CHAIN	.7-67
INSTALLING THE SWINGARM	.7-68
INSTALLING THE DRIVE SPROCKET	.7-69

CHAPTER 8 ELECTRICAL

ELECTRICAL COMPONENTS	8-1
CHECKING SWITCH CONTINUITY	8-2
CHECKING THE SWITCHES	8-4
CHECKING THE BULBS AND BULB SOCKETS	
TYPES OF BULBS	
CHECKING THE CONDITION OF THE BULBS CHECKING THE CONDITION OF THE BULB SOCKETS	
IGNITION SYSTEM	
CIRCUIT DIAGRAM	
THROTTLE OVERRIDE SYSTEM (T.O.R.S.) OPERATION TROUBLESHOOTING	
CHECKING THE THROTTLE OVERRIDE SYSTEM	
ELECTRIC STARTING SYSTEM	
CIRCUIT DIAGRAM	
STARTING CIRCUIT CUT-OFF SYSTEM OPERATION TROUBLESHOOTING	
TROUBLESHOOTING	8-18
STARTER MOTOR	
CHECKING THE STARTER MOTOR	
ASSEMBLING THE STARTER MOTOR	8-25
CHARGING SYSTEM	
CIRCUIT DIAGRAM	
TROUBLESHOOTING	8-27
LIGHTING SYSTEM	8-29
CIRCUIT DIAGRAM	
TROUBLESHOOTING	
CHECKING THE LIGHTING SYSTEM	8-31
SIGNAL SYSTEM	
CIRCUIT DIAGRAM	
TROUBLESHOOTING CHECKING THE SIGNALING SYSTEM	
OFFICIALITY OF STATE	0-33
COOLING SYSTEM	
CIRCUIT DIAGRAM	
	X-40


CHAPTER 9 TROUBLESHOOTING

STARTING FAILURE/HARD STARTING	9-1
FUEL SYSTEM	9-1
ELECTRICAL SYSTEM	9-1
COMPRESSION SYSTEM	
POOR IDLE SPEED PERFORMANCE	9-2
POOR IDLE SPEED PERFORMANCE	
POOR MEDIUM AND HIGH-SPEED PERFORMANCE	
POOR MEDIUM AND HIGH-SPEED PERFORMANCE	9-2
	0.0
FAULTY GEAR SHIFTING	
HARD SHIFTING	
SHIFT PEDAL DOES NOT MOVE	
JUMPS OUT GEAR	9-3
CLUTCH SLIPPING/DRAGGING	9-3
CLUTCH SLIPPING	
CLUTCH DRAGGING	
OVERHEATING	
OVERHEATING	9-4
FAULTY BRAKE	0_4
POOR BRAKING EFFECT	
SHOCK ABSORBER MALFUNCTION	
MALFUNCTION	9-4
UNICTARI E HANRI INC	0.5
UNSTABLE HANDLING	
UNSTABLE HANDLING	9-5
LIGHTING SYSTEM	9-5
HEADLIGHT DOES NOT COME ON	
TAIL/BRAKE LIGHT DOES NOT LIGHT	
BULB BURNT OUT	
TAIL/BRAKE LIGHT BULB BURNT OUT	9-5

E1

MACHINE IDENTIFICATION



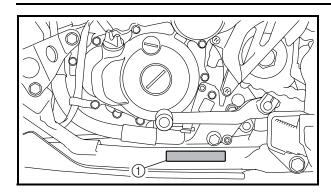


EBS00009

GENERAL INFORMATION MACHINE IDENTIFICATION

EBS00010

VEHICLE IDENTIFICATION NUMBER

The vehicle identification number ① is stamped into the left side of the frame.

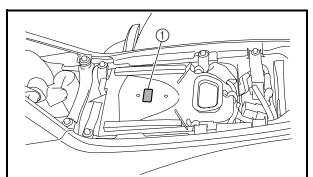

EBS00011

MODEL LABEL

The model label ① is affixed to the air filter case cover. This information will be needed to order spare parts.

IMPORTANT INFORMATION



EBS00013

IMPORTANT INFORMATION PREPARATION FOR REMOVAL AND DISASSEMBLY

- 1. Before removal and disassembly remove all dirt, mud, dust and foreign material.
- 2. Use only the proper tools and cleaning equipment.
 - Refer to "SPECIAL TOOLS".
- 3. When disassembling always keep mated parts together. This includes gears, cylinders, pistons and other parts that have been "mated" through normal wear. Mated parts must always be reused or replaced as an assembly.
- 4. During disassembly, clean all of the parts and place them in trays in the order of disassembly. This will speed up assembly and allow for the correct installation of all parts.
- 5. Keep all parts away from any source of fire.

EBS00014

REPLACEMENT PARTS

 Use only genuine Yamaha parts for all replacements. Use oil and grease recommended by Yamaha for all lubrication jobs. Other brands may be similar in function and appearance, but inferior in quality.


EBS00015

GASKETS, OIL SEALS AND O-RINGS

- When overhauling the engine, replace all gaskets, seals and O-rings. All gasket surfaces, oil seal lips and O-rings must be cleaned.
- 2. During reassembly properly oil all mating parts and bearings, and lubricate the oil seal lips with grease.

IMPORTANT INFORMATION




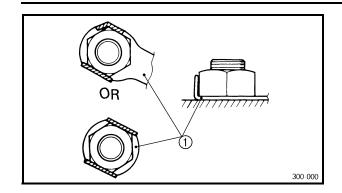

EBS00016

LOCK WASHERS/PLATES AND COTTER PINS

After removal, replace all lock washers/plates ① and cotter pins. After the bolt or nut has been tightened to specification, bend the lock tabs along a flat of the bolt or nut.

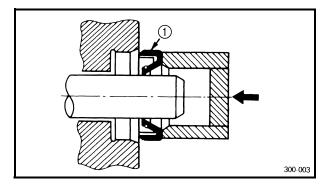


EBS00017

BEARINGS AND OIL SEALS

Install bearings and oil seals so that the manufacturer's marks or numbers are visible. When installing oil seals, lubricate the oil seal lips with a light coat of lithium-soap-based grease. Oil bearings liberally when installing, if appropriate.


1) Oil seal

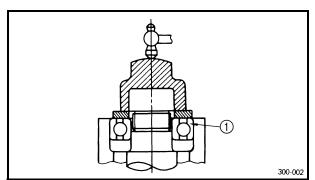

CAUTION:

Do not spin the bearing with compressed air because this will damage the bearing surfaces.

① Bearing

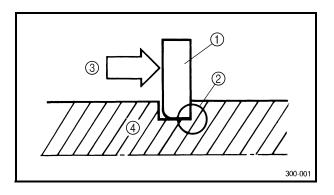

EBS00018


CIRCLIPS


Before reassembly, check all circlips carefully and replace damaged or distorted circlips. Always replace piston pin clips after one use. When installing a circlip ①, make sure the sharp-edged corner ② is positioned opposite the thrust ③ that the circlip receives.

4) Shaft

IMPORTANT INFORMATION



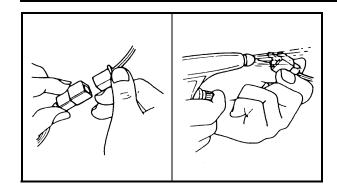

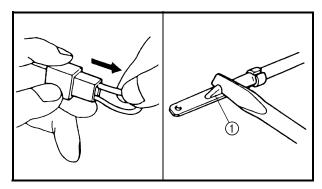

EBS00019

CHECKING THE CONNECTIONS

Check the leads, couplers, and connectors for stains, rust, moisture, etc.

- 1. Disconnect:
- lead
- coupler
- connector
- 2. Check:
- lead
- coupler
- connector

Moisture \rightarrow Dry with an air blower. Rust/stains \rightarrow Connect and disconnect several times.

- 3. Check:
- all connections
 Loose connection → Connect properly.


NOTE:


If the pin 1 on the terminal is flattened, bend it up.

- 4. Connect:
- lead
- coupler
- connector

NOTE:				
	N I	~	_	_

Make sure all connections are tight.

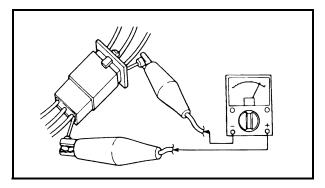

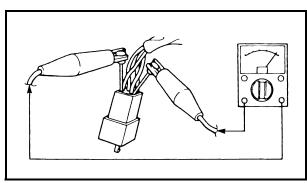

5. Check:

continuity (with the pocket tester)



Pocket tester P/N. YU-03112-C, 90890-03112

NOTE:

- If there is no continuity, clean the terminals.
- When checking the wire harness, perform steps (1) to (3).
- As a quick remedy, use a contact revitalizer available at most part stores.



EBS00021

SPECIAL TOOLS

The following special tools are necessary for complete and accurate tune-up and assembly. Use only the appropriate special tools; this will help prevent damage caused by the use of inappropriate tools or improvised techniques. Special tools may differ by shape and part number from country to country. In such a case, two types are provided.

When placing an order, refer to the list provided below to avoid any mistakes.

For US and CDN

P/N. YM-, YU-, YS-, YK-, ACC-

Except for US and CDN

P/N. 90890-

Tool No.	Tool name/Function	Illustration
90890-01135 YU-01135-A	Crankcase separating tool This tool is used to separate the crankcase.	
Pot 90890-01274 Bolt 90890-01275	Crankshaft installer pot Crankshaft installer bolt These tools are used to install the crankshaft.	
YU-90050	Crankshaft installer set These tools are used to install the crankshaft.	
Adapter 90890-01278 YM-90063 Spacer 90890-04081 YM-91044	Adapter Spacer (crankshaft installer) These tools are used to install the crankshaft.	
90890-01304 YU-01304	Piston pin puller This tool is used to remove the piston pin.	
90890-01325 YU-24460-01	Radiator cap tester This tool is used to check the cooling system.	



Tool No.	Tool name/Function	Illustration	
90890-01352 YU-33984	Radiator cap tester adapter This tool is used to check the cooling system.		
90890-01327 YM-01327	Damper rod holder (30 mm) This tool is needed to loosen and tighten the steering stem bearing retainer.		
90890-01443 YU-33975	Steering nut wrench This tool is needed to loosen and tighten the front shock absorber and rear shock absorber locknuts.	9	
90890-01474 YM-01474	Ball joint remover/installer set These tools are used to removing or installing the ball joints.		
90890-01480 YM-01480	Ball joint remover/installer attachment set These tools are used to removing or installing the ball joints.		
90890-01701 YS-01880-A	Sheave holder This tool is needed to hold the A.C. magneto rotor when loosen or tighten the A.C. magneto rotor nut.	A.	
90890-03112 YU-03112-C	Pocket tester This instrument is needed for checking the electrical system.		
90890-03141 YM-33277-A	Timing light This tool is necessary for checking ignition timing.		



Tool No.	Tool name/Function	Illustration
Compressor 90890-04019 YM-04019 Attachment 90890-04114 YM-04114	Valve spring compressor Valve spring compressor attachment This tool is needed to remove and install the valve assemblies.	
90890-04086 YM-91042	Universal clutch holder This tool is needed to hold the clutch carrier when removing or installing the carrier nut.	
90890-04097 YM-04097 90890-04116 YM-04116	Valve guide remover (Ø 5) Valve guide remover (Ø 4.5) This tool is needed to remove and install the valve guides.	
90890-04098 YM-04098 90890-04117 YM-04117	Valve guide installer (Ø 5) Valve guide installer (Ø 4.5) This tool is needed to install the valve guides.	
90890-04099 YM-04099 90890-04118 YM-04118	Valve guide reamer (ø 5) Valve guide reamer (ø 4.5) This tool is needed to rebore the new valve guides.	
90890-04101	Valve lapper This tool is needed to remove and install the valve lifters.	
90890-04142 YM-04142	Rotor puller These tools are needed to remove the A.C. magneto rotor.	
90890-06588	PTT wrench 46 This tool is needed to loosen or tighten the rear axle nut.	



Tool No.	Tool name/Function	Illustration
YM-37134	Axle nut wrench (46 mm) This tool is needed to loosen or tighten the rear axle nut.	
90890-06754	Ignition checker This instrument is necessary for checking the ignition system components.	
YM-34487	Dynamic spark tester This instrument is necessary for checking the ignition system components.	
Bond 90890-85505 Sealant ACC-11001-05-01	Yamaha bond No. 1215 Sealant (Quick Gasket®) This sealant (bond) is used on crankcase mating surfaces, etc.	



EBS01001

SPECIFICATIONS

GENERAL SPECIFICATIONS

Item	Standard
Model code	5TG1
Dimensions	
Overall length	1,840 mm (72.4 in)
Overall width	1,170 mm (46.1 in)
Overall height	1,090 mm (42.9 in)
Seat height	800 mm (31.5 in)
Wheelbase	1,280 mm (50.4 in)
Minimum ground clearance	255 mm (10.04 in)
Minimum turning radius	3,500 mm (137.8 in)
Basic weight	
With oil and full fuel tank	169 kg (373 lb)
Engine	
Engine type	Liquid-cooled 4-stroke, DOHC
Cylinder arrangement	Forward-inclined single cylinder
Displacement	439 cm ³ (26.79 cu in)
Bore × stroke	95.0 × 62.0 mm (3.74 × 2.44 in)
Compression ratio	11.9:1
Starting system	Electric starter
Lubrication system	Dry sump
Oil type or grade	
Engine oil	
	API service SE, SF, SG type or higher
0° 10° 30° 50° 70° 90° 110° 130°F	
YAMALUBE4 (20W40) or SAE 20W40	
YAMALÜBE4 (10W30) or SAE 10W30	
SAE 5W30	
-20° -10° 0° 10° 20° 30° 40° 50°C	
Oil capacity	
Engine oil	
Periodic oil change	1.75 L (1.54 Imp qt, 1.85 US qt)
With oil filter replacement	1.85 L (1.63 Imp qt, 1.96 US qt)
Total amount	1.95 L (1.72 Imp qt, 2.06 US qt)
Radiator capacity (including all routes)	1.3 L (1.14 Imp qt, 1.37 US qt)
Air filter	Wet type element
Fuel	
Type	Premium unleaded gasoline only
Fuel tank capacity	10.0 L (2.20 Imp gal, 2.64 US gal)
Fuel reserve amount	1.9 L (0.42 lmp gal, 0.50 US gal)

GENERAL SPECIFICATIONS



Item		Standard
Carburetor		
Type/quantity		5TG1 00 × 1
Manufacturer		KEIHIN
Spark plug		
Type/manufacturer		CR8E/NGK
Spark plug gap		0.7 ~ 0.8 mm (0.028 ~ 0.031 in)
Clutch type		Wet, multiple disc
Transmission		
Primary reduction system		Spur gear
Primary reduction ratio		62/22 (2.818)
Secondary reduction system		Chain drive
Secondary reduction ratio		38/14 (2.714)
Transmission type		Constant mesh, 5-speed
Operation		Left foot operation
Gear ratio		
1st gear		29/12 (2.416)
2nd gear		27/14 (1.928)
3rd gear		25/16 (1.562)
4th gear		23/18 (1.277)
5th gear		21/20 (1.050)
Chassis		
Frame type		Steel tube frame
Caster angle		5°
Camber angle		-1.5°
Kingpin angle		15.4°
Kingpin offset		1.0 mm (0.04 in)
Trail		21.0 mm (0.83 in)
Tread (STD)	front	950 mm (37.40 in)
	rear	900 mm (35.43 in)
Toe-in (with tires touching the ground	und)	2 ~ 12 mm (0.08 ~ 0.47 in)
Tire		
Туре		Tubeless
Size	front	AT21 × 7-10
	rear	AT20 × 10-9
Manufacturer	front	DUNLOP
	rear	DUNLOP
Туре	front	KT331A Radial
	rear	KT355 Radial
Tire pressure (cold tire)		
Maximum load*		100 kg (220 lb)
Off-road riding	front	30 kPa (0.30 kg/cm ² , 4.4 psi)
	rear	35 kPa (0.35 kg/cm², 5.0 psi)
*Load in total weight of cargo, ride	r and	
accessories		

GENERAL SPECIFICATIONS



Item		Standard
Brake		
Front brake	type	Dual disc brake
	operation	Right hand operation
Rear brake	type	Single disc brake
	operation	Right foot operation
Suspension	· · · · · · · · · · · · · · · · · · ·	
Front suspension		Double wishbone
Rear suspension		Swingarm (link suspension)
Shock absorber		
Front shock absorber		Coil spring/gas-oil damper
Rear shock absorber		Coil spring/gas-oil damper
Wheel travel		
Front wheel travel		230 mm (9.06 in)
Rear wheel travel		256 mm (10.08 in)
Electrical		
Ignition system		DC-C.D.I.
Generator system		A.C. magneto
Battery type		GT7B-4
Battery capacity		12 V 12 Ah
Headlight type		Krypton bulb
Bulb voltage/wattage × quantit	у	
Headlight		12 V 30 W/30 W × 2
Tail/brake light		12 V 5 W/21 W × 1
Indicator and warning lights		
Neutral		12 V 1.7 W × 1
Coolant temperature		12 V 1.7 W × 1



EBS01002

Item		Standard	Limit
Cylinder head			
Warp limit *			0.05 mm
	*		(0.002 in)
Cylinder			
Bore size		95.00 ~ 95.01 mm (3.7402 ~ 3.7406 in)	
Camshaft			
Drive method		Chain drive (Left)	
Camshaft cap inside diameter		22.000 ~ 22.021 mm (0.8661 ~ 0.8670 in)	
Camshaft journal diameter		21.967 ~ 21.980 mm (0.8648 ~ 0.8654 in)	
Camshaft-journal-to-camshaft-c clearance	сар	0.020 ~ 0.054 mm (0.0008 ~ 0.0021 in)	0.080 mm (0.0032 in)
Camshaft lobe dimensions			
B—B	A		
Intake "A"		31.200 ~ 31.300 mm (1.2283 ~ 1.2323 in)	31.100 mm (1.2244 in)
"B"		22.550 ~ 22.650 mm (0.8878 ~ 0.8917 in)	22.450 mm (0.8839 in)
Exhaust "A"		30.950 ~ 31.050 mm (1.2185 ~ 1.2224 in)	30.850 mm (1.2146 in)
"B"		22.494 ~ 22.594 mm (0.8856 ~ 0.8895 in)	22.394 mm (0.8817 in)
Camshaft runout limit			0.03 mm
			(0.0012 in)
Timing chain			
Timing chain type/No. of links		98XRH2010-118M	
Timing chain adjustment metho	d	Automatic	



Item		Standard	Limit
Valve, valve seat, valve g	uide		
Valve clearance (cold)	IN	0.10 ~ 0.15 mm (0.0039 ~ 0.0059 in)	
	EX	0.20 ~ 0.25 mm (0.0079 ~ 0.0098 in)	
Valve dimensions			
A	E	c c	D D
Head Diameter	Face Width	Seat Width Margin	n Thickness
"A" head diameter	IN	26.9 ~ 27.1 mm (1.0591 ~ 1.0669 in)	
	EX	27.9 ~ 28.1 mm (1.0984 ~ 1.1063 in)	
"B" face width	IN	2.26 mm (0.0890 in)	
	EX	2.26 mm (0.0890 in)	
"C" seat width	IN	0.9 ~ 1.1 mm (0.0354 ~ 0.0433 in)	1.6 mm (0.06 in)
	EX	0.9 ~ 1.1 mm (0.0354 ~ 0.0433 in)	1.6 mm (0.06 in)
"D" margin thickness	IN	1.0 mm (0.0394 in)	0.85 mm (0.033 in)
	EX	1.0 mm (0.0394 in)	0.85 mm (0.033 in)
Stem outside diameter	IN	4.475 ~ 4.490 mm (0.1762 ~ 0.1768 in)	4.445 mm (0.175 in)
	EX	4.965 ~ 4.980 mm (0.1955 ~ 0.1961 in)	4.935 mm (0.194 in)
Guide inside diameter	IN	4.500 ~ 4.512 mm (0.1772 ~ 0.1776 in)	4.550 mm (0.179 in)
	EX	5.000 ~ 5.012 mm (0.1969 ~ 0.1973 in)	5.050 mm (0.199 in)
Stem-to-guide clearance	IN	0.010 ~ 0.037 mm (0.0004 ~ 0.0015 in)	0.080 mm (0.003 in)
	EX	0.020 ~ 0.047 mm (0.0008 ~ 0.0019 in)	0.100 mm (0.004 in)
Valve stem runout			0.01 mm (0.0004 in)
Valve seat width	IN	0.9 ~ 1.1 mm (0.0354 ~ 0.0433 in)	1.6 mm (0.06 in)
_ п	EX	0.9 ~ 1.1 mm (0.0354 ~ 0.0433 in)	1.6 mm (0.06 in)
	⊋ • ? }		(0.00 111)
777777777777777777777777777777777777777	///		



Item		Standard	Limit
Valve spring			
Free length	IN	37.03 mm (1.46 in)	35.17 mm
		,	(1.38 in)
	EX	37.68 mm (1.48 in)	35.79 mm
		, ,	(1.41 in)
Set length (valve closed)	IN	27.87 mm (1.10 in)	
	EX	27.38 mm (1.08 in)	
Compressed pressure			
(installed)	IN	111.3 ~ 127.9 N	
		(11.35 ~ 13.04 kg, 25.02 ~ 28.75 lb)	
	EX	127.4 ~ 146.4 N	
		(12.99 ~ 14.93 kg, 28.64 ~ 32.91 lb)	
Tilt limit *	IN		2.5°/1.61 mm
			(2.5°/0.063 in)
	EX		2.5°/1.65 mm
*			(2.5°/0.065 in)
	7		
Direction of winding			
(top view)	IN	Clockwise	
(top view)	EX	Clockwise	
Piston		Clockwide	
Piston to cylinder clearan	ce	0.040 ~ 0.065 mm (0.0016 ~ 0.0026 in)	0.10 mm
l lotori to symmetri dicaran	00	0.000 11111 (0.0010 0.0020 111)	(0.004 in)
Piston size "D"		94.945 ~ 94.960 mm (3.7380 ~ 3.7386 in)	
	_	(0.1.000 0.1.000 1.1.1)	
	╡н		
) Ï		
	/		
<u> </u>			
Measuring point "H"		10 mm (0.39 in)	
Piston off set		1.0 mm (0.0394 in)	
Offset direction		Intake side	
Piston pin bore inside dia	meter	20.004 ~ 20.015 mm (0.7876 ~ 0.7880 in)	20.045 mm
			(0.789 in)
Piston pin outside diamet	er	19.991 ~ 20.000 mm (0.7870 ~ 0.7874 in)	19.971 mm
			(0.786 in)
Piston-pin-to-piston-pin-bore clear-		0.004 ~ 0.024 mm (0.0002 ~ 0.0009 in)	0.074 mm
ance			(0.0029 in)



Item	Standard	Limit
Piston rings		
Top ring		
Type Dimensions (B × T)	Barrel 1.2 × 3.5 mm (0.047 × 0.138 in)	
End gap (installed)	0.20 ~ 0.30 mm (0.008 ~ 0.012 in)	0.55 mm (0.022 in)
Side clearance	0.030 ~ 0.065 mm (0.0012 ~ 0.0026 in)	0.12 mm (0.0047 in)
2nd ring		(0.000)
Type	Taper	
Dimensions (B × T) End gap (installed)	1.00 × 3.35 mm (0.039 × 0.132 in) 0.35 ~ 0.50 mm (0.014 ~ 0.020 in)	0.85 mm (0.034 in)
Side clearance	0.020 ~ 0.055 mm (0.0008 ~ 0.0022 in)	0.12 mm (0.0047 in)
Oil ring		(0.00)
Dimensions (B × T) End gap (installed)	2.0 × 2.9 mm (0.079 × 0.114 in) 0.20 ~ 0.50 mm (0.008 ~ 0.020 in)	
Crankshaft		
Crank width "A"	61.95 ~ 62.00 mm (2.439 ~ 2.441 in)	
Runout limit C1	0.03 mm (0.0012 in)	0.05 mm (0.002 in)
C2	0.03 mm (0.0012 in)	0.05 mm (0.002 in)
Big end side clearance "D"	0.15 ~ 0.45 mm (0.0059 ~ 0.0177 in)	0.50 mm (0.0197 in)
Big end radial clearance "E"	0.010 ~ 0.025 mm (0.0004 ~ 0.0010 in)	




Item	Standard	Limit
Balancer		
Balancer drive method	Gear	
Clutch		
Friction plate 1 (inside dia.: 120 mm)		
Thickness	2.9 ~ 3.1 mm (0.114 ~ 0.122 in)	2.8 mm
		(0.110 in)
Quantity	7	
Friction plate 2 (inside dia.: 128 mm)		
Thickness	2.9 ~ 3.1 mm (0.114 ~ 0.122 in)	2.8 mm
Out and the		(0.110 in)
Quantity	1	
Clutch plate Thickness	1.5 ~ 1.7 mm (0.059 ~ 0.067 in)	
Quantity	7.5 ~ 1.7 mm (0.059 ~ 0.067 m)	
Max. warpage	/ 	0.2 mm
Wax. Waipage		(0.0079 in)
Clutch spring		(0.0070 111)
Free length	51.8 mm (2.04 in)	50.0 mm
	,	(1.97 in)
Quantity	6	
Clutch housing thrust clearance	0.10 ~ 0.35 mm (0.0039 ~ 0.0138 in)	
Clutch housing radial clearance	0.010 ~ 0.044 mm (0.0004 ~ 0.0017 in)	
Clutch release method	Inner push, cam push	
Push rod 2 bending limit	0.1 mm (0.004 in)	
Transmission		
Main axle deflection limit		0.08 mm
		(0.0031 in)
Drive axle deflection limit		0.08 mm
Shifter		(0.0031 in)
Shifter type	Shift drum and guide bar	
Max. shift fork guide bar bending		0.05 mm
wax. Shift fork galae bar behaling		(0.002 in)
Decompression device		(
Device type	Auto decomp	
Air filter oil grade	Engine oil	




Item		Standard	Limit
Carburetor			
I. D. mark		5TG1 00	
Main jet	(M.J)	#158	
Main air jet	(M.A.J)	ø1.0	
Jet needle/clip position	(J.N)	NDSR/4	
Cutaway	(C.A)	1.5	
Pilot air jet	(P.A.J.1)	#100	
Pilot outlet	(P.O)	ø0.9	
Pilot jet	(P.J)	#42	
Bypass 1	(B.P.1)	ø1.0	
Valve seat size	(V.S)	ø3.8	
Starter jet	(G.S.1)	#90	
Float height	(F.H)	8 mm (0.31 in)	
Engine idle speed	, ,	1,750 ~ 1,850 r/min	
Intake vacuum		34.7 ~ 37.3 kPa	
		(260 ~ 280 mmHg, 10.2 ~ 11.0 inHg)	
Throttle position sensor			
Resistance		4 ~ 6 kΩ at 20 °C	
Oil filter type		Paper	
Oil pump			
Oil pump type		Trochoid	
Inner-rotor-to-outer-rotor-tip clear-		0.07 ~ 0.12 mm (0.0028 ~ 0.0047 in)	0.20 mm
ance			(0.0079 in)
Outer-rotor-to-oil-pump-h	nousing	0.09 ~ 0.17 mm (0.0035 ~ 0.0067 in)	0.24 mm
clearance			(0.0094 in)
Bypass valve setting pre	ssure	40.0 ~ 80.0 kPa	
		(300 ~ 602 mmHg, 11.8 ~ 23.7 inHg)	
Cooling system			
Radiator core			
Width		300 mm (11.8 in)	
Height		188 mm (7.4 in)	
Depth		24 mm (0.94 in)	
Radiator cap opening pre	essure	107.9 ~ 137.3 kPa	
		(1.079 ~ 1.373 kg/cm ² , 15.35 ~ 19.53 psi)	
Radiator capacity		0.58 L (0.51 Imp qt, 0.61 US qt)	
Coolant reservoir			
Capacity		0.29 L (0.26 Imp qt, 0.31 US qt)	
From low to full level		0.16 L (0.14 Imp qt, 0.17 US qt)	
Water pump			
Туре		Single-suction centrifugal pump	



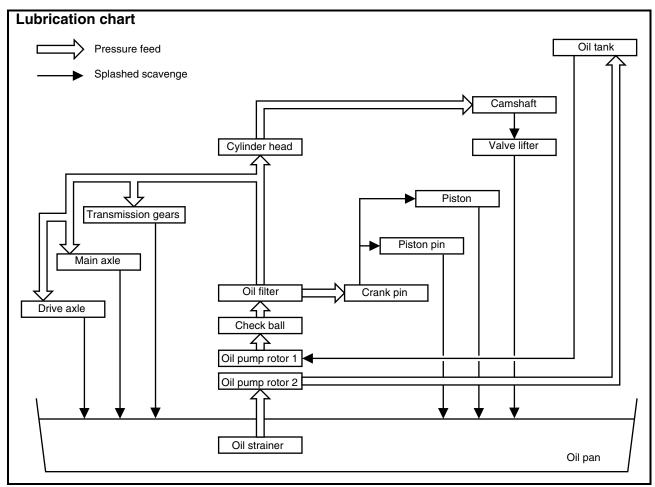

ENGINE SPECIFICATIONS

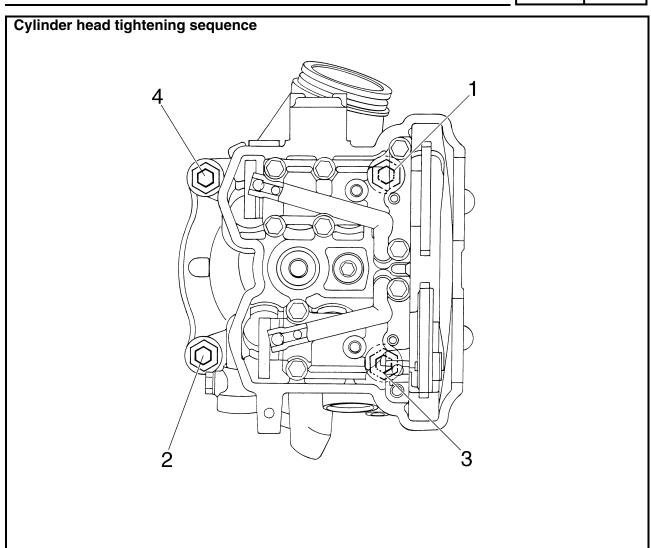

CHASSIS SPECIFICATIONS



EBS01003

CHASSIS SPECIFICATIONS

Item		Standard	Limit
Steering system			
Steering bearing type		Ball and race bearing	
Front suspension			
Shock absorber travel		110 mm (4.33 in)	
Fork spring free length		265 mm (10.43 in)	
Spring fitting length		255 mm (10.04 in)	
Spring rate (K1)		19.6 N/mm (2.00 kg/mm, 112 lb/in)	
Spring rate (K2)		39.2 N/mm (4.00 kg/mm, 224 lb/in)	
Optional spring		No	
Rear suspension			
Shock absorber travel		116.0 (4.57 in)	
Spring free length		259 mm (10.20 in)	
Spring fitting length		244 mm (9.61 in)	
Spring rate (K1)		46.0 N/mm (4.69 kg/mm, 263 lb/in)	
Stroke (K1)		0 ~ 116.0 mm (0 ~ 4.57 in)	
Optional spring		No	
Swingarm			
Free play limit	end		1 mm
			(0.04 in)
	side		1 mm
			(0.04 in)
Front wheel			
Туре		Panel wheel	
Rim size		10 × 5.5 AT	
Rim material		Aluminum	
Rim runout limit	radial		2.0 mm
			(0.08 in)
	lateral		2.0 mm
			(0.08 in)
Rear wheel			
Туре		Panel wheel	
Rim size		9 × 8.5 AT	
Rim material		Aluminum	
Rim runout limit	radial		2.0 mm
			(0.08 in)
	lateral		2.0 mm
<u> </u>			(0.08 in)
Drive chain		FOOM NAVIDATE C	
Type/manufacturer		520MXV/DAIDO	
Link quantity		96	
Drive chain slack		25 ~ 35 mm (0.98 ~ 1.38 in)	

CHASSIS SPECIFICATIONS



	i	1
Item	Standard	Limit
Front disc brake		
Туре	Dual	
Disc outside diameter \times thickness	161.0 × 3.5 mm (6.34 × 0.14 in)	
Pad thickness inner	4.5 mm (0.18 in)	1.0 mm
		(0.04 in)
Pad thickness outer	4.5 mm (0.18 in)	1.0 mm
		(0.04 in)
Master cylinder inside diameter	12.7 mm (0.50 in)	
Caliper cylinder inside diameter	27 mm (1.06 in)	
Brake fluid type	DOT 4	
Rear disc brake		
Туре	Single	
Disc outside diameter \times thickness	200.0 × 3.6 mm (7.87 × 0.14 in)	
Pad thickness inner	4.5 mm (0.18 in)	1.0 mm
		(0.04 in)
Pad thickness outer	4.5 mm (0.18 in)	1.0 mm
		(0.04 in)
Master cylinder inside diameter	12.7 mm (0.50 in)	
Caliper cylinder inside diameter	33.96 mm (1.34 in)	
Brake fluid type	DOT 4	
Brake lever and brake pedal		
Brake pedal position	11.7 mm (0.46 in)	
Parking brake cable end length	56 ~ 60 mm (2.20 ~ 2.36 in)	
Clutch lever free play (lever end)	8 ~ 13 mm (0.31 ~ 0.51 in)	
Throttle lever free play	2 ~ 4 mm (0.08 ~ 0.16 in)	
Speed limiter length	Less than 12 mm (0.47 in)	
Shift pedal height	25 mm (0.98 in)	

ELECTRICAL SPECIFICATIONS



EBS01004

ELECTRICAL SPECIFICATIONS

Item		Standard	Limit
Voltage		12 V	
Ignition system			
Ignition timing (B.T.D.C.)		7.5°/1,800 r/min	
Advancer type		Digital type	
C.D.I.			
C.D.I. unit model/manufacture	r	5TG/MORIC	
Pickup coil resistance/color		248 ~ 372 Ω at 20 °C (68 °F) red–white	
Ignition coil			
Model/manufacturer		J0474/DENSO	
Minimum ignition spark gap		6 mm (0.24 in)	
Primary winding resistance		0.08 ~ 0.10 Ω at 20 °C (68 °F)	
Secondary winding resistance		4.56 ~ 6.84 kΩ at 20 °C (68 °F)	
Charging system		, ,	
Type		A.C. magneto	
Model/manufacturer		F5TG/MORIC	
Nominal output		14 V 120 W at 5,000 r/min	
Lighting coil resistance/color		0.224 ~ 0.336 Ω at 20 °C (68 °F)	
		yellow-ground	
Charging coil resistance/color		0.288 ~ 0.432 Ω at 20 °C (68 °F)	
		white-ground	
Rectifier/regulator			
Type		Semi conductor-short circuit	
Model/manufacturer		SH712AB/SHINDENGEN	
No load regulated voltage	(DC)	14.1 ~ 14.9 V	
	(AC)	13.0 ~ 14.0 V	
Rectifier capacity	(DC)	8.0 A	
	(AC)	12.0 A	
Electric starter system			
Type		Constant mesh type	
Starter motor			
Model/manufacturer		SM-14/MITSUBA	
Output		0.5 kW	
Armature coil resistance		0.004 ~ 0.005 Ω at 20 °C (68 °F)	
Brush overall length		10 mm (0.39 in)	3.5 mm
			(0.14 in)
Spring force		7.16 ~ 9.52 N	
		(730 ~ 971 gf, 25.77 ~ 34.27 oz)	
Commutator diameter		28 mm (1.10 in)	27 mm
			(1.06 in)
Mica undercut		0.7 mm (0.03 in)	

ELECTRICAL SPECIFICATIONS



		<u> </u>
Item	Standard	Limit
Starter relay		
Model/manufacturer	2768079-A/JIDECO	
Amperage rating	180 A	
Coil winding resistance	4.18 ~ 4.62 Ω	
Thermo switch		
Thermo switch 1		
Model/manufacturer	5GH/NIPPON THERMOSTAT	
Opening temperature	95 ~ 101 °C (203.0 ~ 213.8 °F)	
Closing temperature	89 ~ 95 °C (192.2 ~ 203.0 °F)	
Thermo switch 2		
Model/manufacturer	5LP/NIPPON THERMOSTAT	
Opening temperature	117 ~ 123 °C (242.6 ~ 253.4 °F)	
Closing temperature	112 ~ 118 °C (233.6 ~ 244.4 °F)	
Circuit breaker		
Туре	Fuse	
Amperage for individual circuit		
Fuse	15 A × 1	
Reserve	15 A × 1	

TIGHTENING TORQUES

SPEC U

EBS01005

TIGHTENING TORQUES ENGINE TIGHTENING TORQUES

Part to be tightened	Thread		nread Q'ty		ening to	Remarks	
Part to be tightened	Part name	size	Q ty	Nm	m · kg	ft · lb	nemarks
Spark plug	_	M10S	1	13	1.3	9.4	
Cylinder head cover	Bolt	M6	2	10	1.0	7.2	
Camshaft cap	Bolt	M6	10	10	1.0	7.2	
Cylinder head blind plug screw	Screw	M12	1	37	3.7	27	-6
Timing chain tensioner	Bolt	M6	2	10	1.0	7.2	-
Timing chain tensioner cap	Bolt	M6	1	7	0.7	5.1	
Timing chain guide (intake)	Bolt	M6	2	10	1.0	7.2	
Cylinder head (exhaust pipe)	Stud bolt	M8	1	15	1.5	11	
Cylinder head (timing chain side)	Stud bolt	M6	2	7	0.7	5.1	
Cylinder head	Bolt	M10	4	See	NOTE	*-	M
	Nut	M6	2	10	1.0	7.2	_
Parking brake cable and clutch cable	Bolt	M6	1	10	1.0	7.2	
holder							
Cylinder	Bolt	M6	1	10	1.0	7.2	
Engine oil drain bolt (oil tank)	Bolt	M8	1	19	1.9	13	
Engine oil drain bolt (engine)	Bolt	M10	1	20	2.0	14	
Oil pump	Bolt	M6	3	10	1.0	7.2	
Oil pump housing cover	Screw	M4	1	2	0.2	1.4	
Engine oil drain bolt (oil filter)	Bolt	M6	1	10	1.0	7.2	
Oil filter cover	Bolt	M6	2	10	1.0	7.2	
Oil delivery pipe 1	Union bolt	M10	1	20	2.0	14	
	Union bolt	M8	2	18	1.8	13	
Oil delivery pipe 2	Bolt	M6	1	10	1.0	7.2	
Oil pipe 1 and crankcase cover	Bolt	M6	1	8	0.8	8	
Oil pipe 2 and left crankcase	Bolt	M6	1	8	8.0	8	
Oil pipe 2 and oil tank	Bolt	M6	1	10	1.0	7.2	
Oil gallery bolt	Bolt	M6	1	10	1.0	7.2	
Exhaust pipe	Bolt	M8	1	24	2.4	17	
	Nut	M8	1	13	1.3	9.4	
Exhaust pipe protector	Screw	M6	2	7	0.7	5.1	-6
Muffler protector	Screw	M6	2	7	0.7	5.1	-6
Muffler	Bolt	M8	2	34	3.4	24	-
Muffler and exhaust pipe	Bolt	M8	1	20	2.0	14	
Spark arrester	Bolt	M6	1	10	1.0	7.2	
Silencer cap	Bolt	M6	1	10	1.0	7.2	•
Radiator	Bolt	M6	4	7	0.7	5.1	_
Radiator fan	Bolt	M6	3	9	0.9	6.5	
Coolant drain bolt	Bolt	M6	1	10	1.0	7.2	
Impeller	_	M8	1	14	1.4	10	
Water pump inlet pipe	Bolt	M6	1	10	1.0	7.2	

Part to be tightened	Part name	Thread	Q'ty	Tight	ening to	orque	Remarks
r art to be tigriteried	T dit fidific	size	Q ty	Nm	m · kg	ft · lb	riomano
Cylinder head water jacket	Bolt	M6	1	10	1.0	7.2	
Water pump housing cover	Bolt	M6	4	10	1.0	7.2	
Coolant reservoir	Bolt	M6	2	7	0.7	5.1	
Clutch cover	Bolt	M6	7	10	1.0	7.2	
Clutch spring	Bolt	M6	6	8	0.8	8	
Clutch boss	Nut	M20	1	75	7.5	54	Use a lock
							washer.
Push lever shaft plate	Bolt	M6	1	10	1.0	7.2	
Clutch cable holder	Bolt	M6	1	10	1.0	7.2	
Crankcase cover	Bolt	M6	8	10	1.0	7.2	
Parking brake cable holder and	Bolt	M6	2	10	1.0	7.2	
crankcase cover							
Left crankcase	Bolt	M6	11	12	1.2	8.7	
Oil strainer	Bolt	M6	2	10	1.0	7.2	
Crankcase bearing retainer	Screw	M6	3	12	1.2	8.7	-0
	Screw	M6	4	12	1.2	8.7	
	Bolt	M6	7	10	1.0	7.2	-6
Primary drive gear	Nut	M20	1	75	7.5	54	Use a lock
							washer.
Balancer driven gear	Nut	M14	1	50	5.0	36	Use a lock
							washer.
Drive sprocket	Nut	M20	1	75	7.5	54	Use a lock
Drive and ail and retainer	Dalt	NAC	0	10	1.0	7.0	washer.
Drive axle oil seal retainer	Bolt	M6	2	10	1.0	7.2	-0
Torque limiter cover	Bolt	M6	2	10	1.0	7.2	
A.C. magneto cover	Bolt	M6	9	10	1.0	7.2	
A.C. magneto rotor	Nut	M12	1	65 7	6.5	47	
Stator coil	Bolt	M5	2	7	0.7	5.1	
A.C. magneto lead holder	Bolt	M5	2	7	0.7	5.1	
Pickup coil	Bolt	M6	2	10	1.0	7.2	
Starter clutch	Bolt	M6	6	16	1.6	11	-0
Shift drum segment	Bolt	M8	1	30	3.0	22	
Shift guide	Bolt	M6	2	10	1.0	7.2	9
Stopper lever	Bolt	M6	1	10	1.0	7.2	-10
Shift pedal	Bolt	M6	1	12	1.2	8.7	
Throttle cable cover (carburetor)	Bolt	M5	2	4	0.4	2.9	
Carburetor joint clamp screw (carburetor side)	Screw	M5	1	3	0.4	2.9	
Carburetor joint clamp screw (cylinder head side)	Screw	M4	1	3	0.3	2.2	
Carburetor clamp screw (air intake	Screw	M6	1	3	0.3	2.2	
duct side)							
Neutral switch	_	M10	1	20	2.0	14	
Thermo switch 1		M18	1	28	2.8	20	

TIGHTENING TORQUES




Part to be tightened	Part name	Thread	Q'ty	Tightening torque			Remarks
r art to be lightened	ranname	size		Nm	m · kg	ft · lb	Hemains
Thermo switch 2		M18	1	28	2.8	20	
Starter motor	Bolt	M6	2	10	1.0	7.2	
Starter motor lead	Nut	M6	1	7	0.7	5.1	
Bush holder assembly and rear	Nut	M6	1	7	0.7	5.1	
bracket nut							

NOTE:

^{*1:} Tighten the cylinder head bolts to 30 Nm (3.0 m \cdot kg, 22 ft \cdot lb) in the proper tightening sequence, remove and retighten the cylinder head bolts to 20 Nm (2.0 m \cdot kg, 14 ft \cdot lb) in the proper tightening sequence, and then tighten the cylinder head bolts further in two steps of 90° to reach the specified angle of 180° in the proper tightening sequence.

TIGHTENING TORQUES



EBS01006

CHASSIS TIGHTENING TORQUES

Dowt to be tightered	Thursday size	Tight	ening to	Remarks	
Part to be tightened	Thread size	Nm	m · kg	ft · lb	Hemarks
Engine stay and frame	M8	33	3.3	24	
Engine stay and engine upper bracket	M8	26	2.6	19	
Engine upper bracket and engine	M10	40	4.0	29	
Engine lower bracket and engine	M10	66	6.6	48	
Engine and frame	M10	66	6.6	48	
Engine lower bracket and frame	M8	38	3.8	27	
Swingarm pivot shaft, engine, and frame	M16	100	10	72	
Rear shock absorber and frame	M12	80	8.0	58	
Rear shock absorber locknut	M50	45	4.5	32	
Relay arm and swingarm	M12	55	5.5	40	
Connecting arm and frame	M12	55	5.5	40	
Relay arm and rear shock absorber	M12	43	4.3	31	
Relay arm and connecting arm	M12	55	5.5	40	
Hub, brake caliper bracket, and swingarm	M12	85	8.5	61	
Drive chain adjusting bolt and locknut	M8	16	1.6	11	
Front shock absorber and frame	M10	45	4.5	32	
Front shock absorber and lower front arm	M10	45	4.5	32	
Front shock absorber locknut	M50	30	3.0	22	
Upper front arm and frame	M10	38	3.8	27	
Lower front arm and frame	M10	55	5.5	40	
Steering stem, pitman arm, and frame	M14	180	18	130	
Steering stem bushing and frame	M8	23	2.3	17	Use a lock
					washer.
Steering stem and handlebar holder	M8	23	2.3	17	
Tie-rod end and locknut	M10	15	1.5	11	
Steering knuckle and front wheel hub	M14	70	7.0	50	
Steering knuckle and front arm (upper and lower)	M10	25	2.5	18	
Steering knuckle and tie-rod ball joint	M10	25	2.5	18	
Pitman arm and tie-rod ball joint	M10	25	2.5	18	
Frame and bearing retainer	M42	65	6.5	47	
Fuel tank and fuel cock	M6	4	0.4	2.9	
Fuel tank and frame	M6	7	0.7	5.1	
Front wheel and front wheel hub	M10	45	4.5	32	
Steering knuckle and front brake caliper bracket	M8	28	2.8	20	
Front brake disc and front wheel hub	M8	28	2.8	20	-0
Rear axle and rear wheel hub	M14	120	12	85	
Rear brake caliper and brake caliper bracket	M8	31	3.1	22	
Rear wheel and rear wheel hub	M10	45	4.5	32	
Driven sprocket and sprocket bracket	M10	55	5.5	40	
Front brake pipe nut	M10	19	1.9	13	
Front brake master cylinder and handlebar	M6	7	0.7	5.1	
Parking brake lever and clutch lever	M6	7	0.7	5.1	



D 1 1	T	Tightening torque			Damarka
Part to be tightened	Thread size	Nm	m · kg	ft · lb	Remarks
Front brake master cylinder and brake lever	M6	6	0.6	4.3	
Front brake master cylinder and brake hose	M10	27	2.7	19	
Brake hose joint and frame	M6	10	1.0	7.2	
Bleed screw	M8	6	0.6	4.3	
Front brake pad retaining bolt	M10	18	1.8	13	-6
Front brake caliper and brake hose	M10	27	2.7	19	7
Rear brake caliper retaining bolt	M8	23	2.3	17	-6
Parking brake case bracket and parking brake	M8	23	2.3	17	
case					-0
Rear axle ring nut	M36	100	10.0	72	-6
Rear axle ring nut set bolt	M6	7	0.7	5.1	-6
Rear brake pad retaining bolt	M8	18	1.8	13	Use a lock
					washer.
Rear brake caliper and brake hose	M10	30	3.0	22	
Rear brake master cylinder and frame	M8	20	2.0	14	
Rear brake master cylinder and brake hose	M10	30	3.0	22	
Parking brake adjusting bolt and locknut	M8	16	1.6	11	
Rear brake disc and brake disc bracket	M8	28	2.8	20	-6
Rear brake fluid reservoir cover and bracket	M6	11	1.1	8	7
Rear brake fluid reservoir and bracket	M6	4	0.4	2.9	
Front bumper and frame	M8	31	3.1	22	
Front fender and frame	M6	7	0.7	5.1	
Side cover and frame	M6	7	0.7	5.1	
Side cover, rear fender, and frame	M6	7	0.7	5.1	
Rear fender and frame	M6	7	0.7	5.1	
Rear fender stay and rear fender	M6	7	0.7	5.1	
Front fender stay and front fender	M6	7	0.7	5.1	
Rear carrier bar and frame	M8	33	3.3	24	
Footrest and frame	M10	65	6.5	48	
Foot protector and footrest	M6	13	1.3	9.4	
Foot protector and footrest	M8	16	1.6	11	
Foot protector and frame	M8	16	1.6	11	
Battery holding bracket and frame	M6	7	0.7	5.1	
Air filter case and frame	M6	7	0.7	5.1	
Carburetor joint clamp screw	M4	3	0.3	2.2	
Headlight and frame	M6	7	0.7	5.1	
Tail/brake light bracket and frame	M6	7	0.7	5.1	
Tail/brake light bracket and tail/brake light	M6	7	0.7	5.1	
Drive chain guide roller and frame	M8	19	1.9	13	
Engine skid plate and frame	M6	7	0.7	5.1	-6
Main frame and rear frame	M10	54	5.4	39	

HOW TO USE THE CONVERSION TABLE/ GENERAL TIGHTENING TORQUE SPECIFICATIONS



EBS00022

HOW TO USE THE CONVERSION TABLE

All specification data in this manual are listed in SI and METRIC UNITS.

Use this table to convert METRIC unit data to IMPERIAL unit data.

Ex.

METRIC	N	MULTIPLIEF	IMPERIAL	
** mm	×	0.03937	=	** in
2 mm	×	0.03937	=	0.08 in


CONVERSION TABLE

	METRIC TO IMPERIAL							
	Metric unit	Multiplier	Imperial unit					
Torque	m · kg m · kg cm · kg	7.233 86.794 0.0723	ft · lb in · lb ft · lb					
	cm · kg	0.8679	in · lb					
Weight	kg g	2.205 0.03527	lb oz					
Speed	km/hr	0.6214	mph					
Distance	km m m cm mm	0.6214 3.281 1.094 0.3937 0.03937	mi ft yd in in					
Volume/ Capacity	cc (cm ³) cc (cm ³) It (liter) It (liter)	0.03527 0.06102 0.8799 0.2199	oz (IMP liq.) cu · in qt (IMP liq.) gal (IMP liq.)					
Misc.	kg/mm kg/cm ² Centigrade (°C)	55.997 14.2234 9/5+32	lb/in psi (lb/in ²) Fahrenheit (°F)					

EBS00023

GENERAL TIGHTENING TORQUE SPECIFICATIONS

This chart specifies tightening torques for standard fasteners with a standard ISO thread pitch. Tightening torque specifications for special components or assemblies are provided for each chapter of this manual. To avoid warpage, tighten multi-fastener assemblies in a crisscross pattern and progressive stages until the specified tightening torque is reached. Unless otherwise specified, tightening torque specifications require clean, dry threads. Components should be at room temperature.

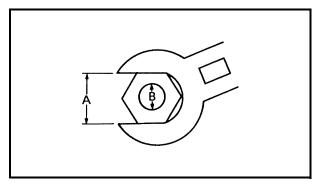

A: Distance between flats

B: Outside thread diameter

A (nut)	B (bolt)	General tightening torques				
(Hut)	(flut) (boit)		m · kg	ft · lb		
10 mm	6 mm	6	0.6	4.3		
12 mm	8 mm	15	1.5	11		
14 mm	10 mm	30	3.0	22		
17 mm	12 mm	55	5.5	40		
19 mm	14 mm	85	8.5	61		
22 mm	16 mm	130	13.0	94		

LUBRICATION POINTS AND LUBRICANT TYPES



EBS00024

LUBRICATION POINTS AND LUBRICANT TYPES ENGINE

Lubrication point	Lubricant
Oil seal lips	
O-rings	
Bearings	⊸ €
Crankshaft pins	⊸ €
Valve stems (intake and exhaust)	— (M
Valve stem ends (intake and exhaust)	— (M)
Valve lifters (intake and exhaust)	— (E)
Camshafts (intake and exhaust)	— (M
Camshaft cap bolt	⊸ €
Cylinder head bolt	
Piston surfaces	⊸ €
Piston pins	— (0
Auto decomp	— (E)
Auto decompression lever	⊸ €
Water pump impeller shaft	⊸ €
Oil pump rotors (inner and outer) and oil pump housing	— (E)
Oil pump drive gear	⊸ €
Connecting rod (bearing)	⊸ €
Torque limiter	— (E)
Starter idle gear inner surface and shaft	⊸ €
Starter clutch inner surface	⊸ €
Primary driven gear	— (E)
Push rod 1, 2 and ball	⊸ €
Push lever shaft	⊸ €
Push rod bearing and plane washer	— (E)
Transmission gears (wheel and pinion)	→(
Shift forks and shift fork guide bars	⊸ (€
Transmission gears (wheel and pinion) splines	— (E)
Shift drum shaft	⊸ €
Shift shaft	⊸ €
Shift shaft assembly	— (E)
Cylinder head cover mating surface	Sealant (Quick Gasket®) Yamaha bond No.1215

LUBRICATION POINTS AND LUBRICANT TYPES




Lubrication point	Lubricant
Crankcase mating surfaces	Sealant (Quick Gasket [®]) Yamaha bond No.1215
Cylinder head and cylinder head cover mating surfaces	Sealant (Quick Gasket®) Yamaha bond No.1215
AC magneto lead grommet (AC magneto cover)	Sealant (Quick Gasket [®]) Yamaha bond No.1215

EBS00025

COOLANT FLOW DIAGRAMS


- ① Radiator inlet hose
- ② Radiator
- ③ Radiator fan
- (4) Radiator outlet hose
- ⑤ Water pump inlet pipe
- Water pump
- 7 Thermo switch 1
- ® Thermo switch 2

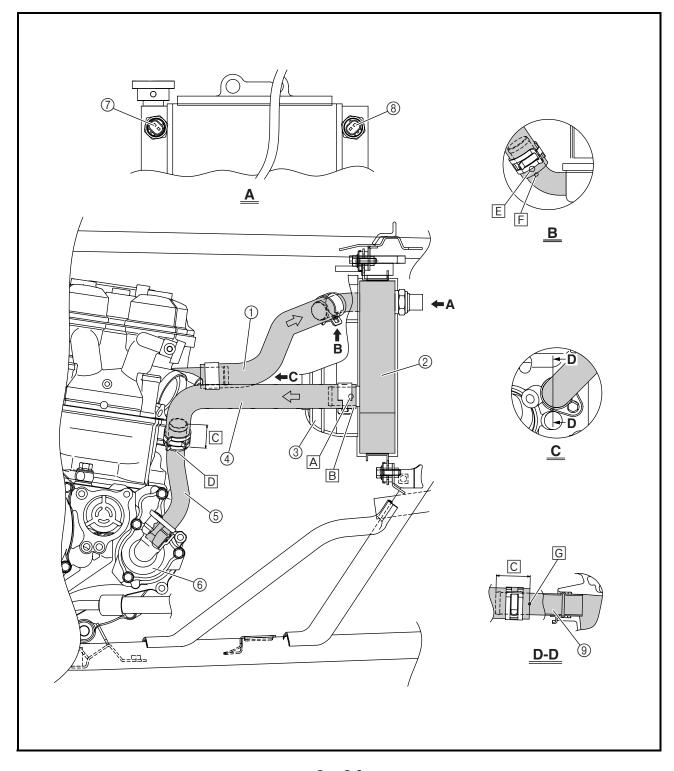

COOLANT FLOW DIAGRAMS



- A Install the radiator outlet hose with the white paint mark parallel to the ground as shown.
- B Install the radiator outlet hose completely on the radiator pipe until the hose contacts the flange of the pipe.
- © 30 mm (1.18 in)
- D Install the radiator outlet hose onto the water pump inlet pipe until the end of the hose reaches the middle of the blue paint mark on the pipe.
- E Align the white paint mark on the radiator inlet hose with the projection on the radiator pipe.
- F Install the radiator inlet hose onto the radiator pipe until the end of the hose contacts the projection of the pipe.
- G Install the radiator inlet hose onto the outlet pipe of the cylinder head water jacket until the end of the hose reaches the middle of the blue paint mark on the pipe.

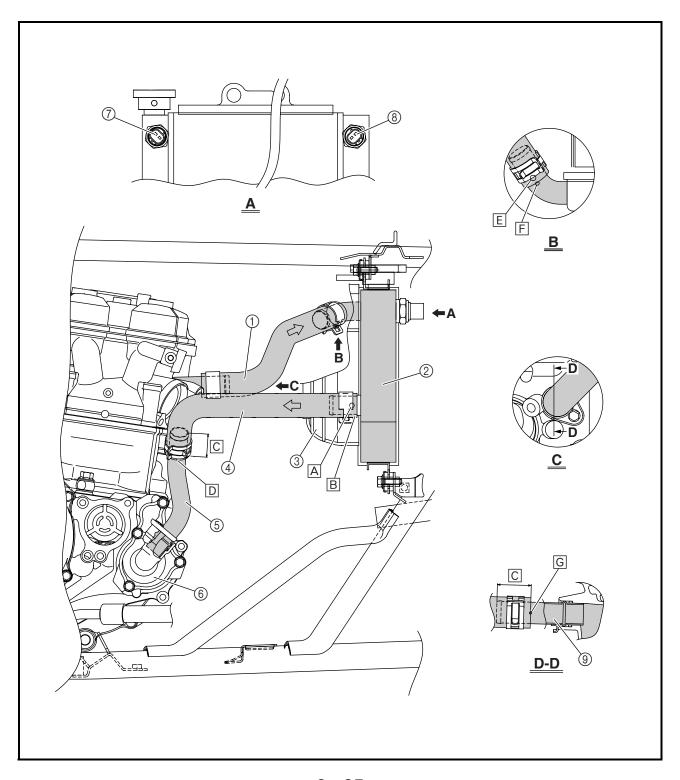


EBS00026


OIL FLOW DIAGRAMS

- ① Intake camshaft
- ② Exhaust camshaft
- ③ Oil filter element
- ④ Oil tank
- ⑤ Oil pipe 1
- 6 Oil pipe 2
- 7 Main axle
- ® Drive axle
- Oil delivery pipe 1

- 1 Oil pump
- ① Oil strainer

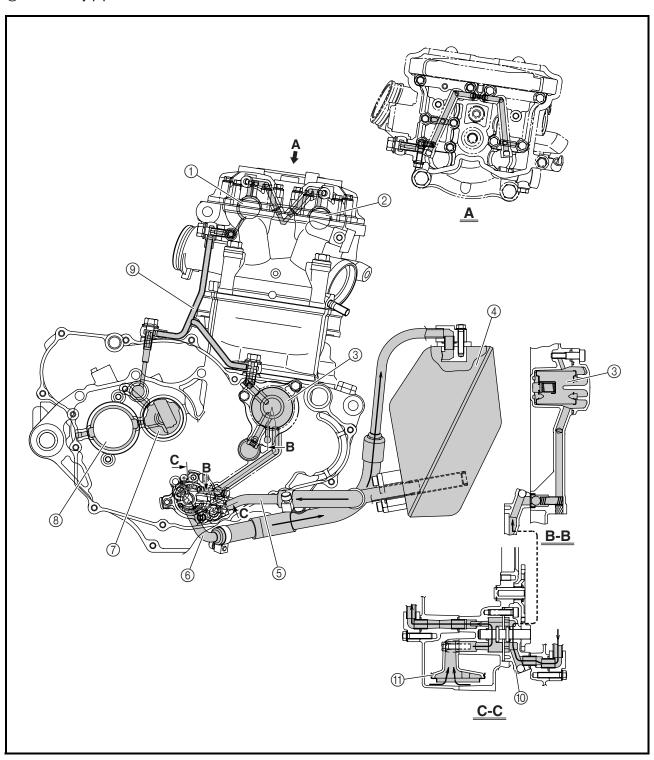


- ① Camshaft
- ② Oil filter element
- ③ Crankshaft
- 4 Main axle
- ⑤ Drive axle
- ⑥ Oil delivery pipe 2⑦ Connecting rod

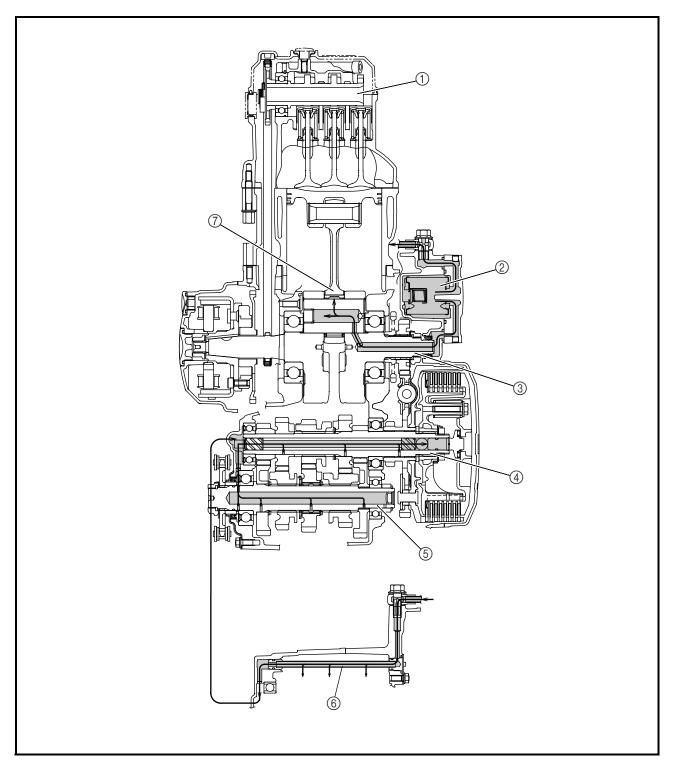


EBS00028

- ① Parking brake cable
- ② Clutch cable
- ③ Clutch switch lead
- 4 Handlebar switch lead
- ⑤ Front brake light switch lead
- 6 Throttle switch lead
- 7 Front brake hose
- Throttle cable

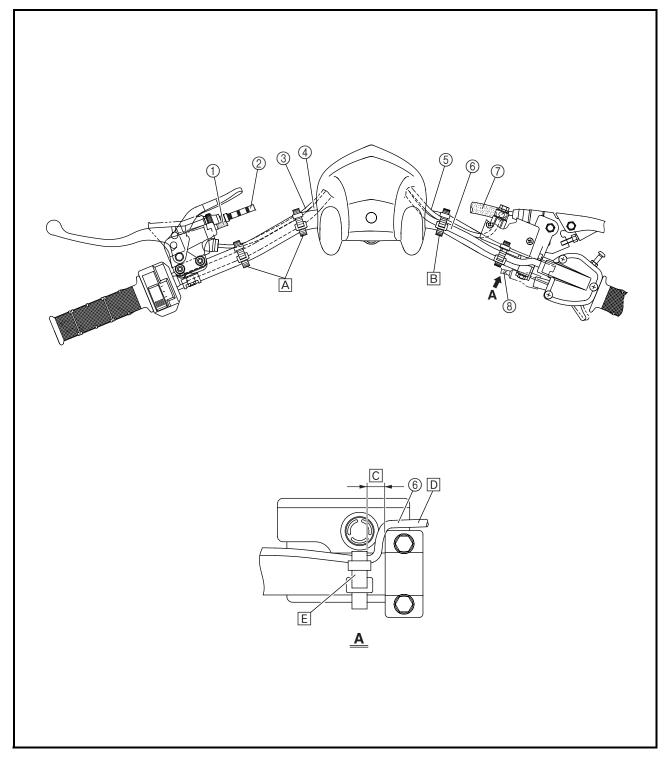




- A Fasten the clutch switch lead and handlebar switch lead to the handlebar with the plastic band.
- B Fasten the front brake light switch lead and throttle switch lead to the handlebar with the plastic band.
- © Less than 10 mm (0.39 in)
- D Make sure that there is no slack in the throttle switch lead.
- **E** Fasten the throttle switch lead to the handlebar with the plastic band.

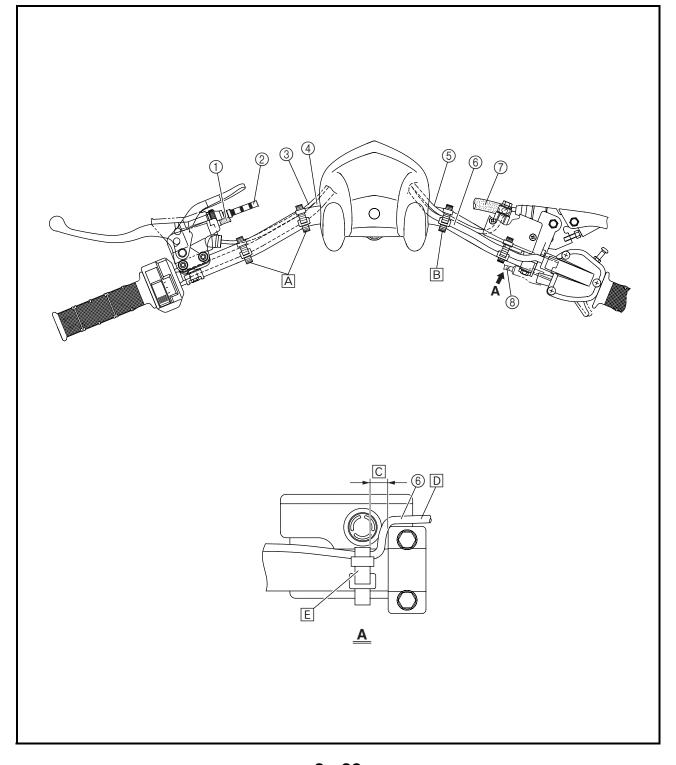



- 1 Throttle cable
- ② Front brake hose
- 3 Front brake light switch lead
- 4 Throttle switch lead
- ⑤ Clutch cable
- ⑥ Parking brake cable
- (7) Clutch switch lead
- Handlebar switch lead
- (9) Radiator fan breather hose
- 1 Thermo switch 2 lead
- 1 Headlight coupler (left)


- 12 C.D.I. unit leads
- Rectifier/regulator coupler
- (4) Brake pipe
- (5) Rectifier/regulator
- 16 C.D.I. unit
- ① Diode 1
- ® Diode 2
- 19 Thermo switch 1 lead
- Headlight coupler (right)
- ② Main switch coupler

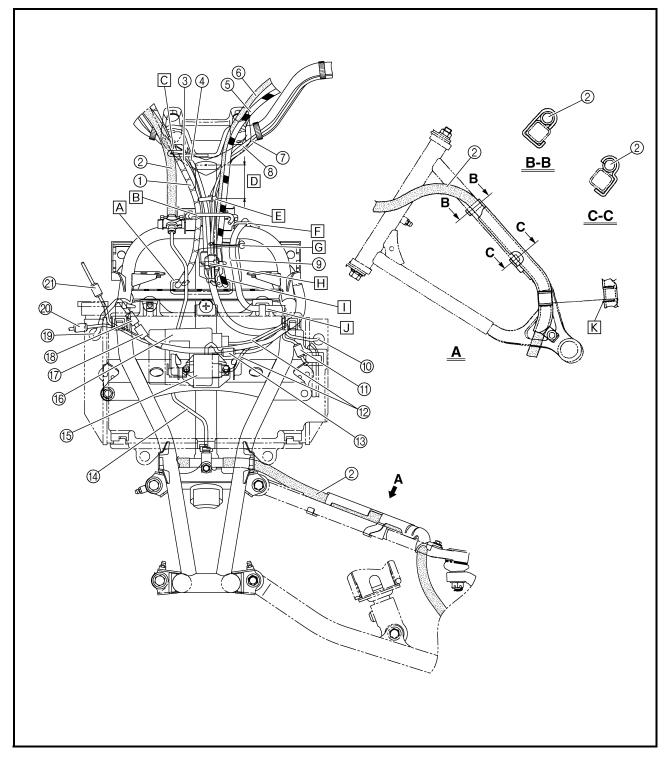




- A Pass the throttle cable through the cable guide.
- B Pass the throttle cable, leads (front brake light switch, throttle switch, clutch switch, and handle-bar switch), parking brake cable, and clutch cable through the cable guide in the order listed.
- © Pass the throttle cable through the steering stem cable guide.
- □ 30 ~ 50 mm (1.18 ~ 1.97 in)

- E Fasten the front brake light switch lead, throttle switch lead, clutch switch lead, and handlebar switch lead with the plastic band and then place the end of the band under the fuel tank cover.
- F Pass the radiator fan breather hose through the hose guide.
- G Fasten the radiator fan breather hose, clutch cable, and parking brake cable with the clamp.

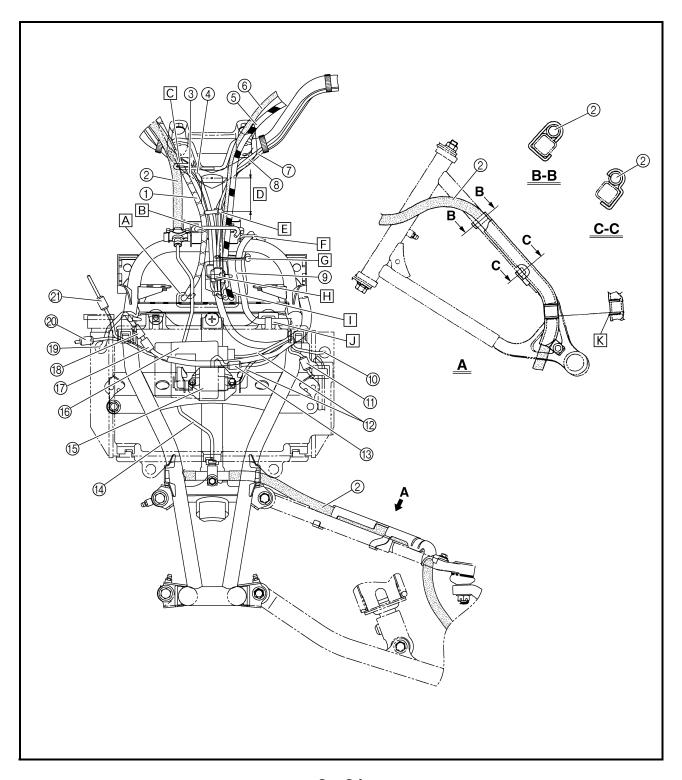

- H Slide the rubber cover over the couplers (front brake light switch, throttle switch, clutch switch, and handlebar switch) and fasten the center of the cover with the plastic band.
- ☐ Pass the clutch cable and parking brake cable through the cable guide in this order.
- ☐ Fasten the radiator fan breather hose with the holder on the radiator grill.
- K Install the brake hose cover so that the slits in the cover fit over the brake hose grommet.

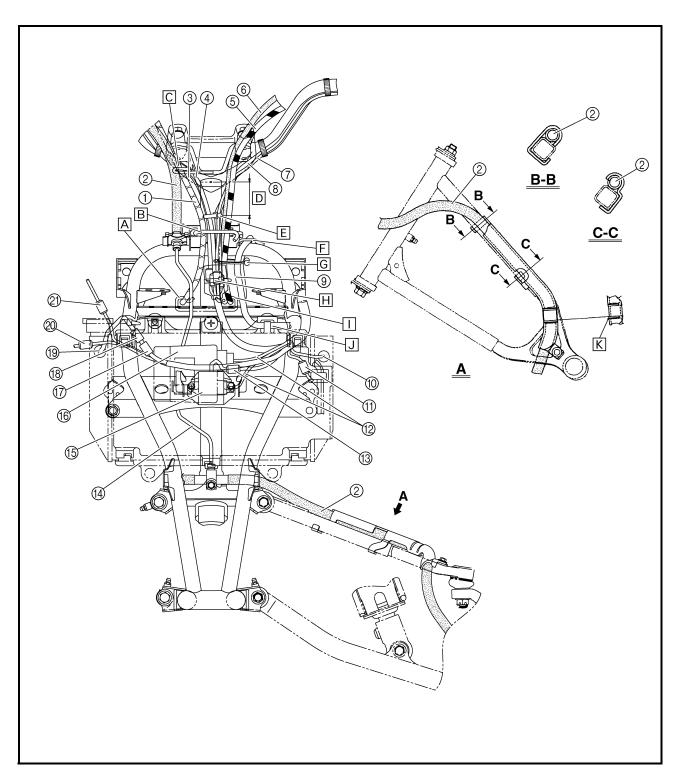




- 1 Indicator coupler
- ② Radiator fan motor coupler
- ③ Thermo switch 2
- 4 Fuel tank breather hose
- ⑤ Radiator fan motor lead
- (6) Radiator fan breather hose
- (7) Wire harness
- Fuel hose
- (9) Throttle position sensor lead
- (1) Carburetor switch lead
- 1) Crankcase breather hose

- ② Battery negative lead
- (3) Starter motor lead
- (4) Neutral switch lead
- (5) A.C. magneto lead
- (6) Oil tank breather hose
- ① Neutral switch coupler
- (8) A.C. magneto coupler
- (9) Front brake hose
- ② Throttle cable
- ② Parking brake cable
- 2 Clutch cable


- ② Indicator leads
- ② Cylinder head breather hose

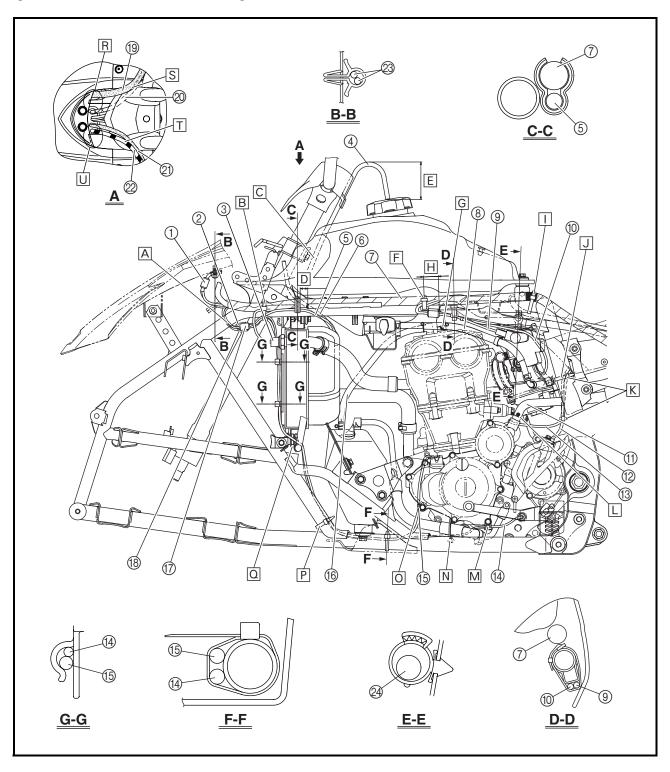



- A Route the neutral switch lead, A.C. magneto lead, and radiator fan motor lead under the frame.
- B Fasten the wire harness, thermo switch 2 lead, A.C. magneto lead, and neutral switch lead with the plastic band and then face the end of the band inward between the frame tubes.
- © Route the fuel tank breather hose behind the steering stem.
- D 7 ~ 21 mm (0.28 ~ 0.83 in)
- E 50 ~ 70 mm (1.97 ~ 2.76 in)


- F Fasten the wire harness, throttle position sensor lead, and carburetor switch lead with the plastic band. Make sure that there is no slack in the throttle position sensor lead and carburetor switch lead along the frame as shown.
- G Install the cylinder head breather hose with the paint mark facing to the left.
- ☐ Fasten the wire harness with the plastic band on the white tape and then face the end of the plastic band inward.

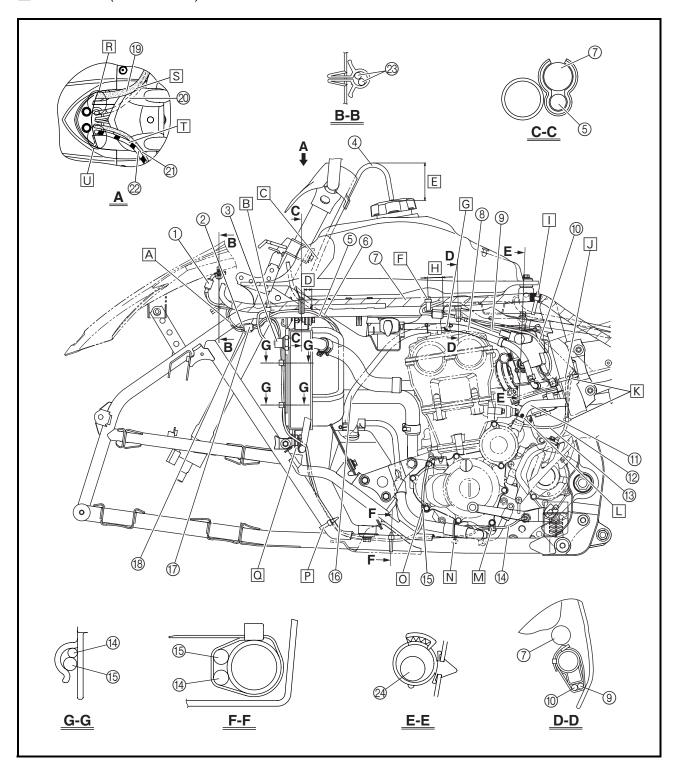




- J Fasten the negative battery lead and starter motor lead with the plastic band and then face the end of the plastic band inward.
- K Fasten the starter motor lead to the negative battery lead at the mark on the battery lead with a plastic band. Then, fasten the starter motor lead and negative battery lead to the frame with a plastic band and face the end of the band inward.
- ☐ Install the crankcase breather hose with the paint mark facing outward.

- M Fasten the neutral switch lead with the lead holder.
- N Fasten the neutral switch lead with the clamp.
- □ Fasten the A.C. magneto lead with the lead holder.
- P Fasten the neutral switch lead and A.C. magneto lead with the plastic band. Face the end of the plastic band inward on top of the frame.
- Pass the neutral switch lead and A.C. magneto lead through the guide on the fender stay.

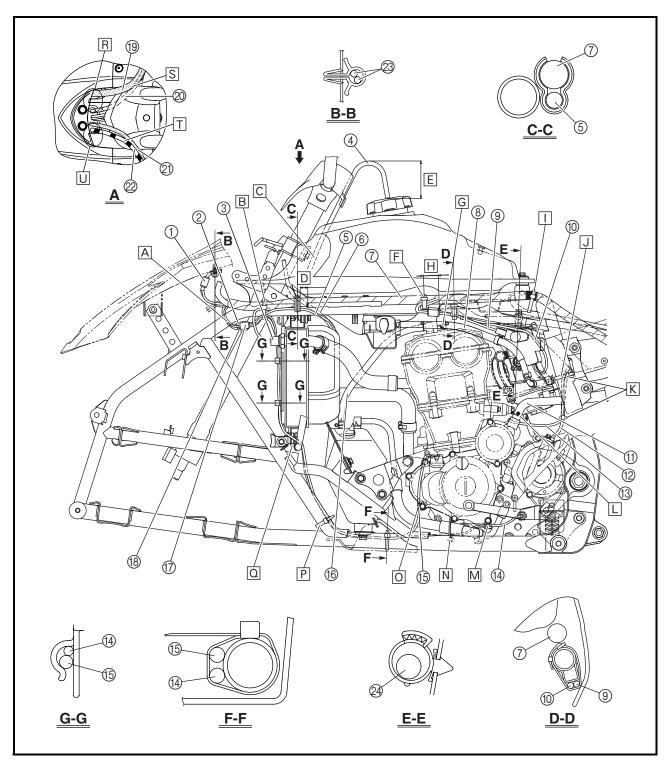


- R When installing the fuel tank cover, do not pinch the front brake hose, throttle cable, front brake light switch lead, or throttle switch lead.
- S Route the front brake hose in front of the handlebar cover.
- ☐ Route the clutch cable and parking brake cable in front of the handlebar cover.
- U When installing the fuel tank cover, do not pinch the clutch cable, parking brake cable, clutch switch lead, or handlebar switch lead.

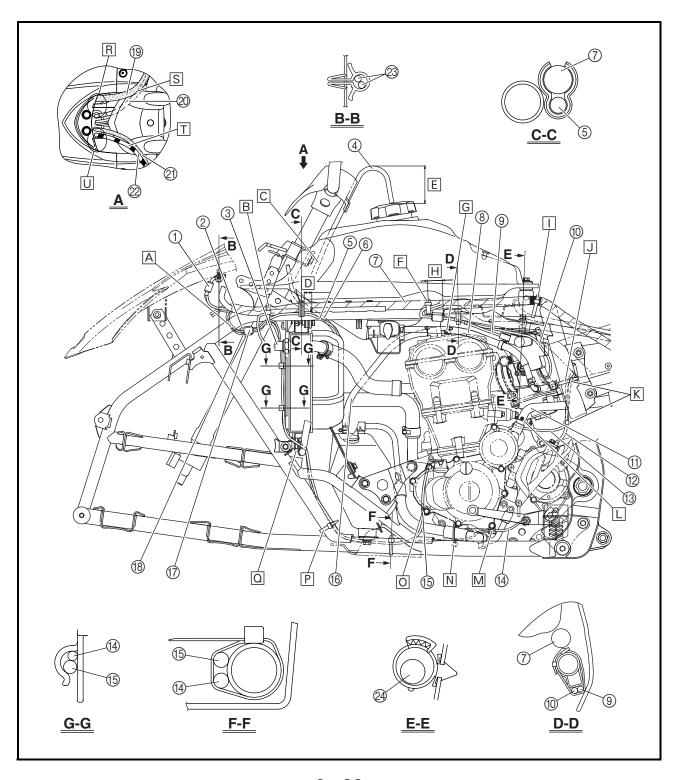




- 1) Wire harness
- ② Air filter case breather hose
- ③ Cylinder head breather hose
- 4 Coolant reservoir breather hose
- (5) Coolant reservoir hose
- ⑥ Tail/brake light
- 7 Tail/brake light lead
- ® Crankcase breather hose
- (9) Carburetor drain hose
- (1) Carburetor air vent hose
- 11) Battery negative lead

- 12) Starter motor lead
- A When installing the rear fender, make sure that the rear fender does not overlap or pinch the cylinder head breather hose, coolant reservoir hose, or wire harness.
- B Install the air filter case breather hose with the paint mark facing outward.
- Install the cylinder head breather hose with the paint mark facing outward.

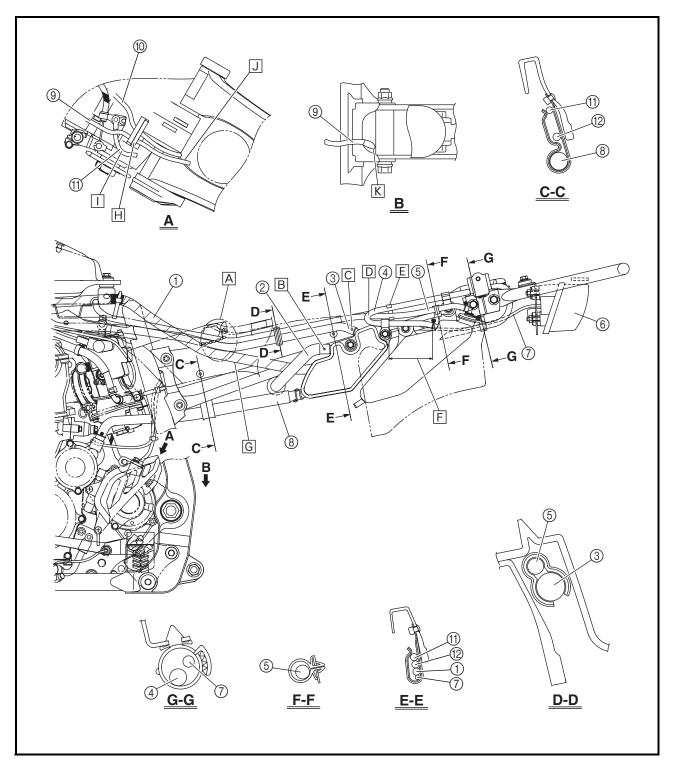




- Install the coolant reservoir breather hose without twisting the hose.
- E Fasten the coolant reservoir hose and the coolant reservoir breather hose with a clamp. Do not pinch the coolant reservoir breather hose.
- F Install the coolant reservoir breather hose as shown so that there is no slack.
- G Install the wire harness so that it does not hang from the rear fender.
- H Pass the carburetor drain hose and carburetor air vent hoses through the hose guide on the engine from the left side of the machine in the order listed. Do not pinch the hoses.
- □ Route the negative battery lead to the outside of the carburetor air vent hose and to the inside of the carburetor drain hose.
- I Route the carburetor drain hose between the rear shock absorber and swingarm, and then under the frame.

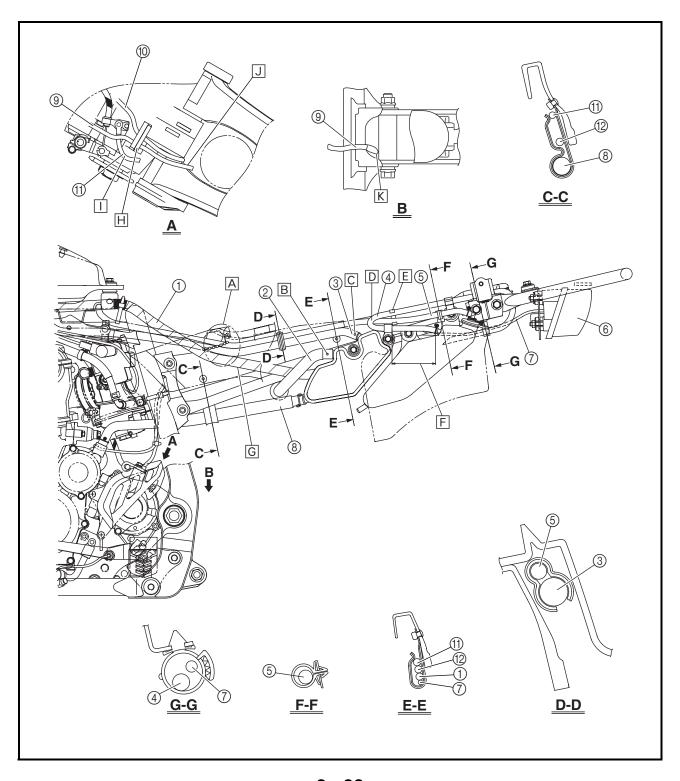


K Route the carburetor drain hose between the frame and connecting arm and let it hang freely under the vehicle.

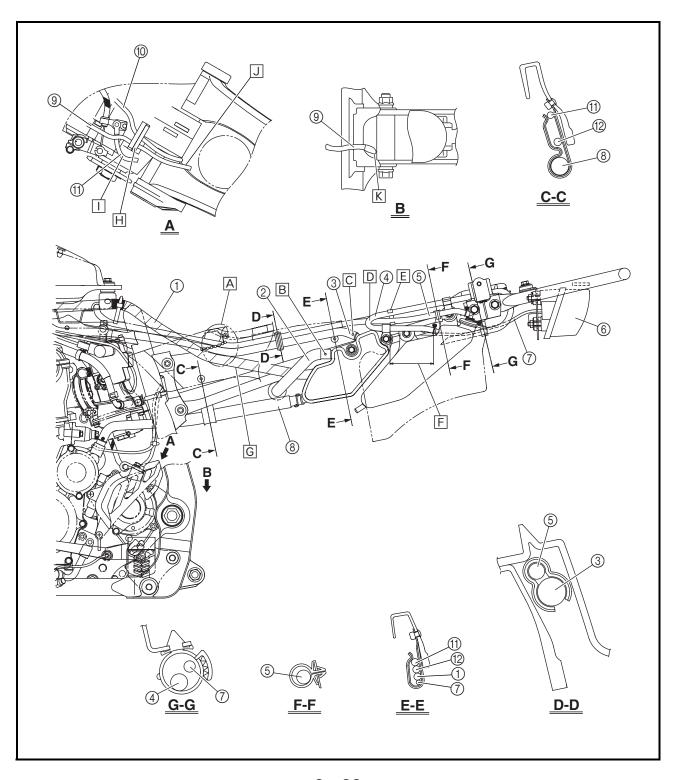



- 1 Rear brake light switch lead
- ② Throttle cable
- ③ Clutch cable
- 4 Coolant reservoir hose
- (5) Oil tank breather hose
- ⑥ Thermo switch 1 lead
- 7 Parking brake cable


- A Fasten the coolant reservoir hose with a clamp so that it is not pinched.
- B Route the thermo switch 1 lead under the frame.
- © Fasten the thermo switch 1 lead with a plastic band between the diode 1 and the diode 2 and then face the end of the band inward.
- D Pass the parking brake cable through the cable guide.

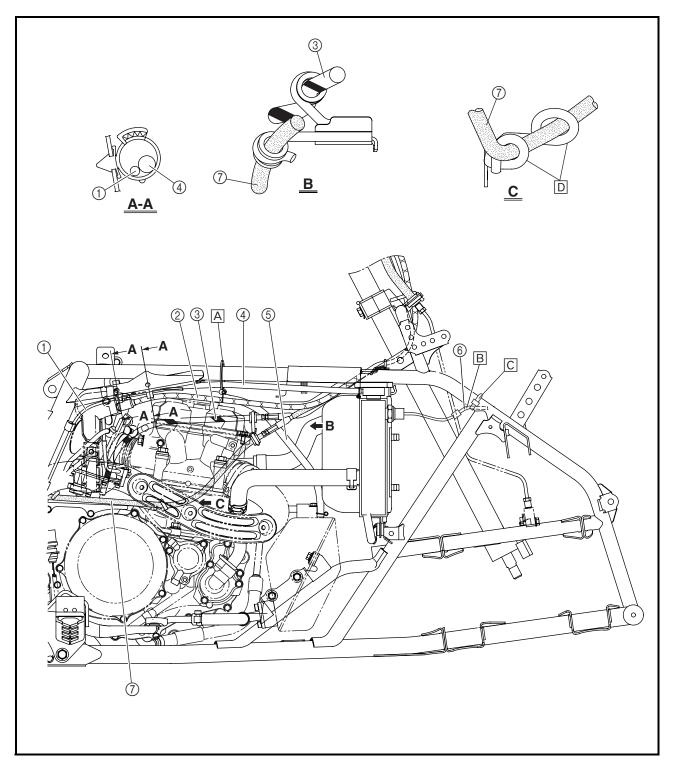



- ① Rear brake hose
- ② Parking brake cable
- ③ Rear brake light switch
- 4 Rear brake light switch lead


- A Install the lead protector of the rear brake light switch lead between the clamps.
- B Face the rear brake light switch lead holder inward and then fasten the lead with the holder.

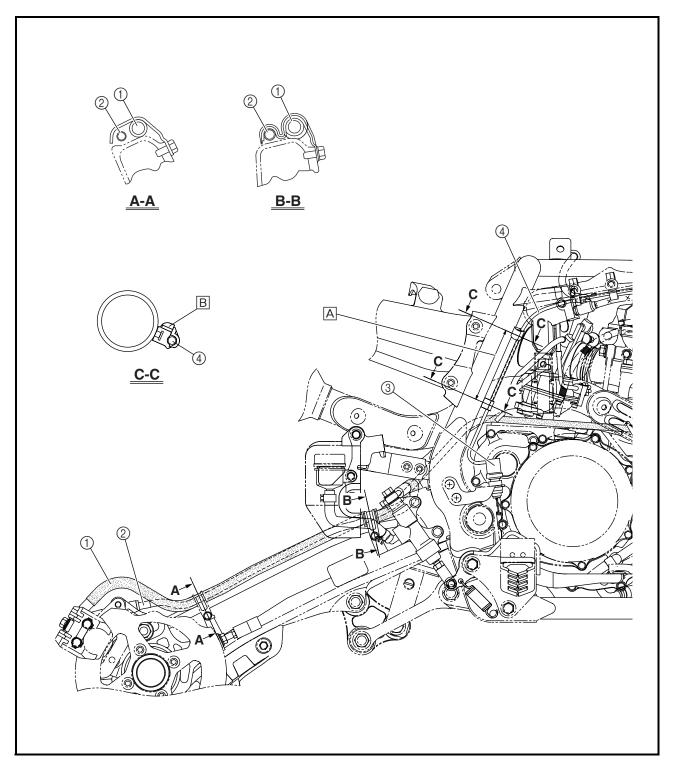




- ① Rectifier/regulator
- ② Headlight lead (right)
- ③ Main switch lead
- 4 Thermo switch 1 lead
- (5) Coolant reservoir hose
- (6) Oil tank breather hose
- 7) Throttle cable
- ® Ignition coil lead
- (1) Cylinder head breather hose
- (f) Carburetor switch lead

- 12 Throttle position sensor lead
- (13) Wire harness
- (4) Headlight lead (left)
- 15 C.D.I. unit
- A Route the wire harness on top of the frame.
- B Route the headlight lead (right) over the frame and connect. After connecting the lead to the headlight, place the headlight coupler behind the headlight toward the center of the vehicle.

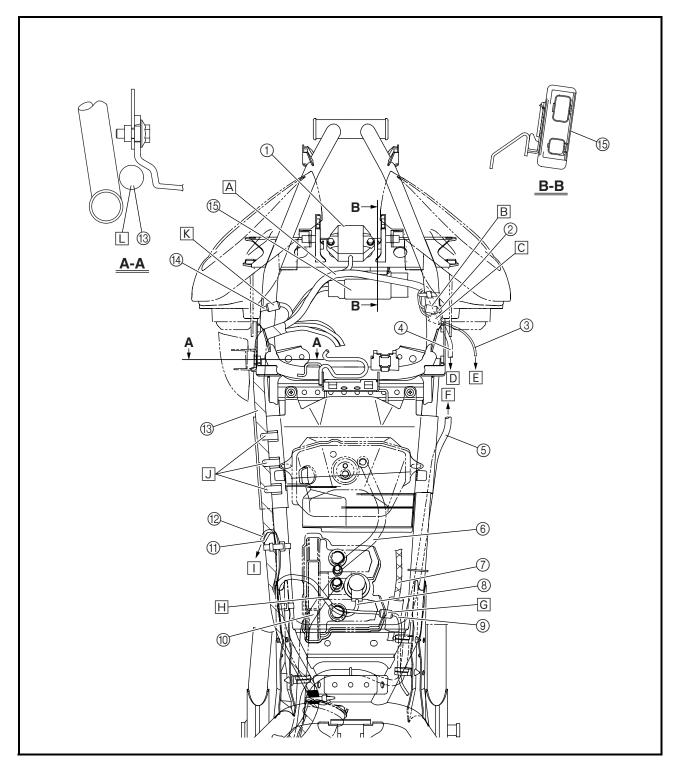




- © Route the main switch lead under the frame and connect.
- D To thermo switch 1
- E To main switch
- F To radiator
- G Route the rear brake light switch lead over the throttle cable.
- H Route the rear brake light switch lead and ignition coil lead over the cylinder head breather hose.
- J Fasten the wire harness with the holder on the shield under the fuel tank.
- K Route the headlight lead (left) over the frame and connect. After connecting the lead to the headlight, place the headlight coupler behind the headlight toward the center of the vehicle.
- When installing the left side cover, do not pinch the wire harness.

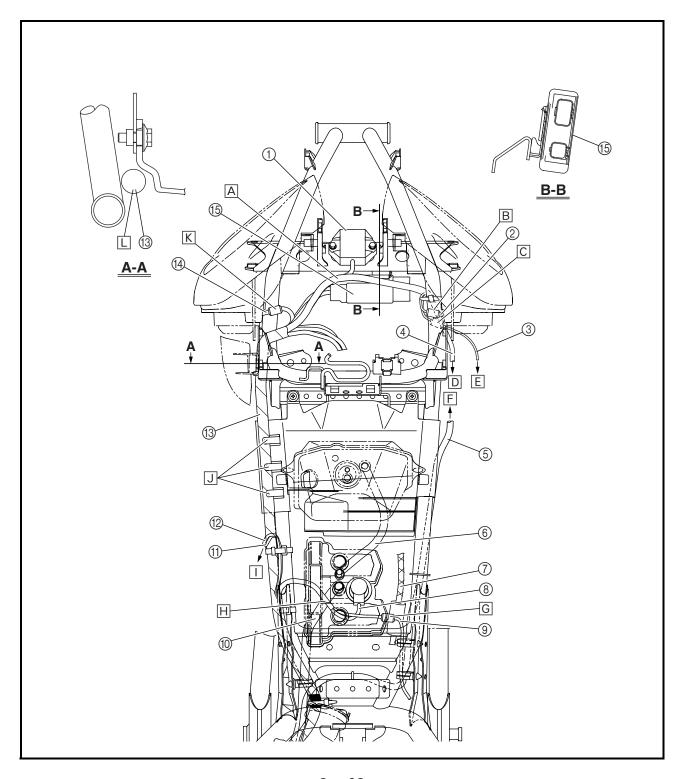




- 1 Starter relay
- ② Battery positive lead
- ③ Tail/brake light lead
- 4 Starter motor lead
- ⑤ Starting circuit cut-off relay
- 6 Earth lead
- Battery negative lead
- ® Coolant reservoir hose
- Oylinder head breather hose
- 10 Wire harness

- A Pass the coolant reservoir hose through the hose guide.
- B Route the earth lead and wire harness under the battery bracket.
- © Connect the tail/brake light lead between the coolant reservoir and the rear fender.
- Department Pass the wire harness through the notch in the rear fender. Be sure that the rear fender and air filter case do not pinch the wire harness.

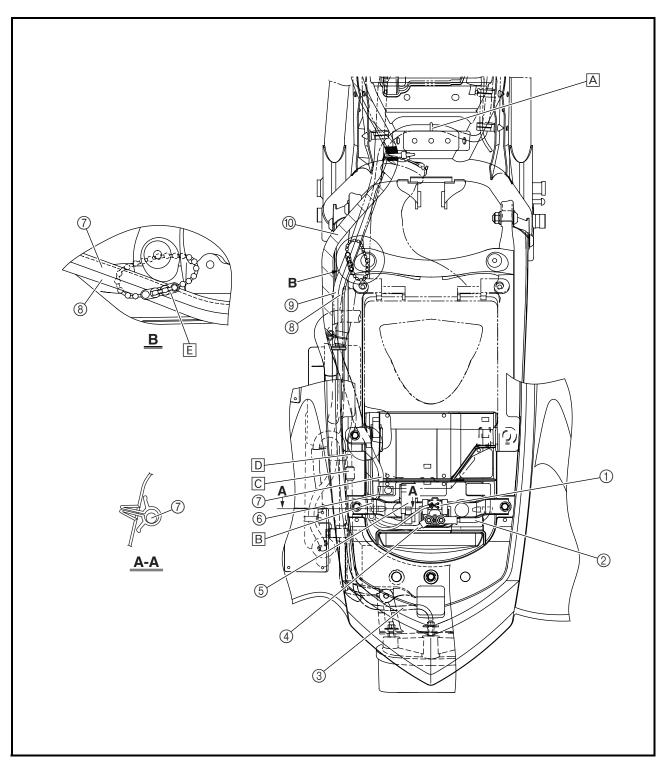

E Fasten the coolant reservoir hose and the cylinder head breather hose to the frame with the plastic beaded tie at its loosest position so that the hoses are not pinched.

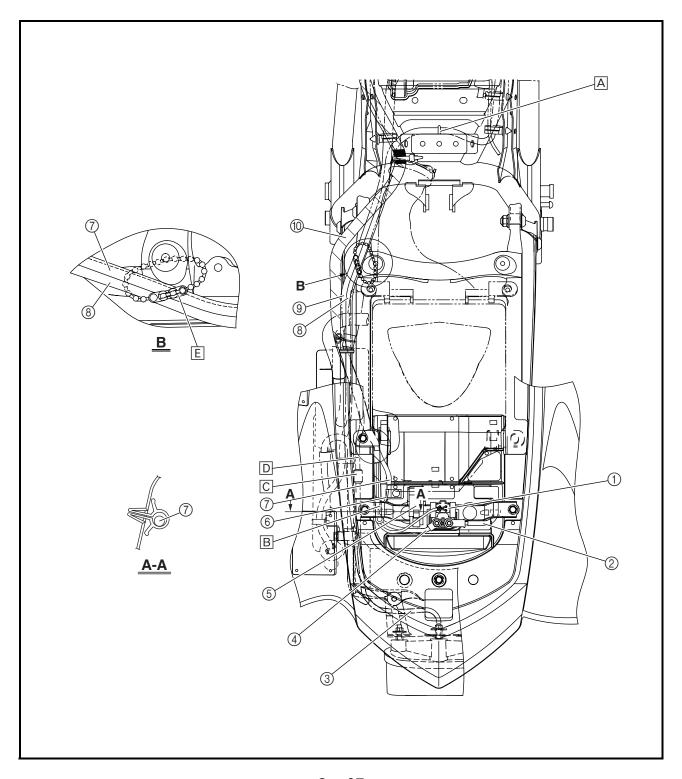

INTRODUCTION/ PERIODIC MAINTENANCE/LUBRICATION



EBS00029

PERIODIC CHECKS AND ADJUSTMENTS

INTRODUCTION

This chapter includes all information necessary to perform recommended checks and adjustments. These preventive maintenance procedures, if followed, will ensure more reliable machine operation and a longer service life. The need for costly overhaul work will be greatly reduced. This information applies to machines already in service as well as to new machines that are being prepared for sale. All service technicians should be familiar with this entire chapter.

PERIODIC MAINTENANCE/LUBRICATION

ITEM	ROUTINE	INITIAL			EVERY			
		1 month	3 months	6 months	6 months	1 year		
Valves*	Check valve clearance. Adjust if necessary.					\circ		
Cooling system	Check for coolant leakage. Repair if necessary. Replace coolant every 24 months.	0	0	0	\circ	\circ		
Spark plug	 Check condition. Adjust gap and clean. Replace if necessary.		0	0	0	0		
Air filter element	Clean. Replace if necessary.	Every 20~40 hours (More often in wet or dusty areas.)						
Carburetor*	Check starter (choke) operation. Adjust engine idling speed.			\circ				
Crankcase breather system*	Check breather hose for cracks or damage. Replace if necessary.			0	0	0		
Exhaust system*	 Check for leakage. Tighten if necessary. Replace gasket if necessary.			0	0	\circ		
Spark arrester	Clean.							
Fuel line*	Check fuel hose for cracks or damage. Replace if necessary.			0	0	\circ		
Engine oil	Replace (Warm engine before draining).							
Engine oil filter ele- ment	• Replace.					\circ		
Drive chain	Check and adjust slack/alignment/clean/lube.							
Front brake*	Check free play/operation/fluid leakage/ See NOTE. Correct if necessary.		0	0	0	\circ		
Rear brake*	Check operation/fluid leakage/See NOTE. Correct if necessary.	0	0	0	0	0		
Clutch*	Check operation. Adjust if necessary.			0	0	\circ		
Wheels*	Check balance/damage/runout. Replace if necessary.			\circ	\circ	\circ		
Wheel bearings*	Check bearing assemblies for looseness/damage. Replace if damaged.			\circ	\circ	\circ		
Steering system*	Check operation.Repair if damaged.Check toe-in.Adjust if necessary.					\circ		
Front and rear suspension*	Check operation. Correct if necessary.			\circ		\circ		
Upper and lower arm pivot and steering shaft*	Lubricate every 6 months with lithium-soap-based grease.			0	0	0		

PERIODIC MAINTENANCE/LUBRICATION



			INITIAL		EVE	RY
ITEM	ROUTINE	1 month	3 months	6 months	6 months	1 year
Rear arm pivot*	Lubricate every 6 months with lithium-soap-based grease.			0	0	0
Fittings and fasten- ers*	Check all chassis fittings and fasteners. Correct if necessary.	0	0	0	0	0
Lights and switches*	Check operation. Adjust headlight beams.	0	0	0	0	0

^{*} Since these items require special tools, data and technical skills, have a Yamaha dealer perform the service.

EBS00031

Ν	O	T	E


- Recommended brake fluid: DOT4
- Brake fluid replacement:
- 1. When disassembling the master cylinder or caliper cylinder, replace the brake fluid. Normally check the brake fluid level and add fluid as required.
- 2. On the inner parts of the master cylinder and caliper cylinder, replace the oil seals every two years.
- 3. Replace the brake hoses every four years, or if cracked or damaged.

Indicates a potential hazard that could result in serious injury or death.



EBS00033

SEAT, FENDERS AND FUEL TANK SEAT, FUEL TANK COVER AND SIDE COVERS

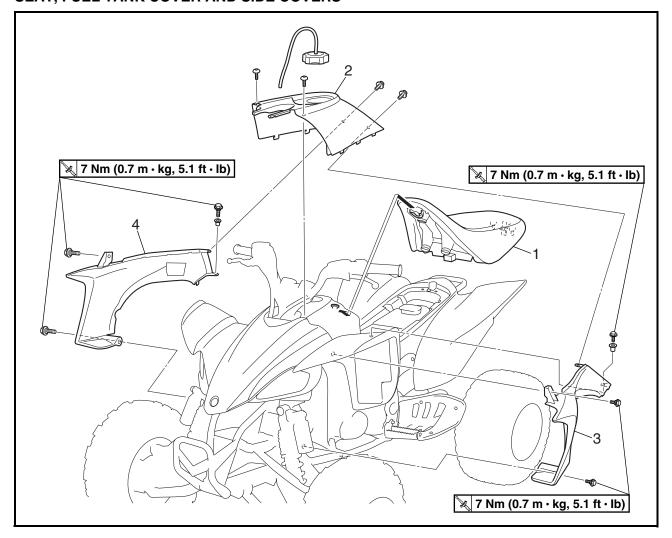


Order	Job/Part	Q'ty	Remarks
	Removing the seat, fuel tank cover		Remove the parts in the order listed.
	and side covers		
1	Seat	1	NOTE:
			Pull back the seat lock lever, than pull up on the rear of the seat.
2	Fuel tank cover	1	
3	Left side cover	1	
4	Right side cover	1	
			For installation, reverse the removal procedure.



EBS00034

FOOT PROTECTORS AND ENGINE SKID PLATE

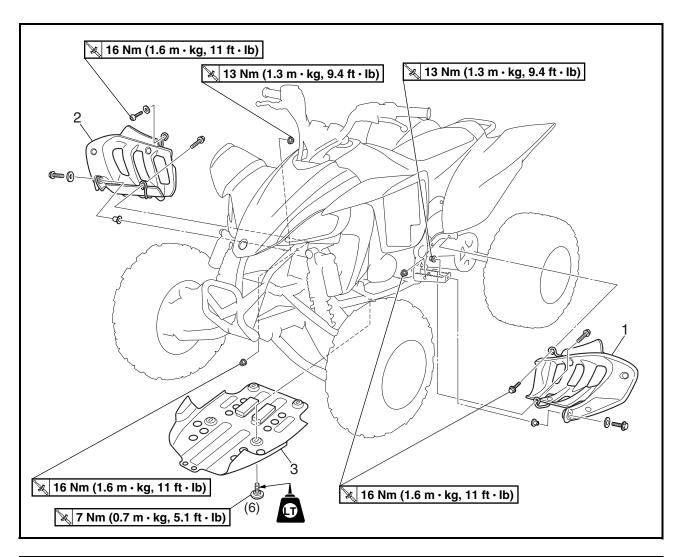


Order	Job/Part	Q'ty	Remarks
	Removing the foot protectors and engine skid plate		Remove the parts in the order listed.
1	Left foot protector	1	
2	Right foot protector	1	
3	Engine skid plate	1	
			For installation, reverse the removal pro-
			cedure.



EBS00036

HEADLIGHTS AND FRONT FENDER

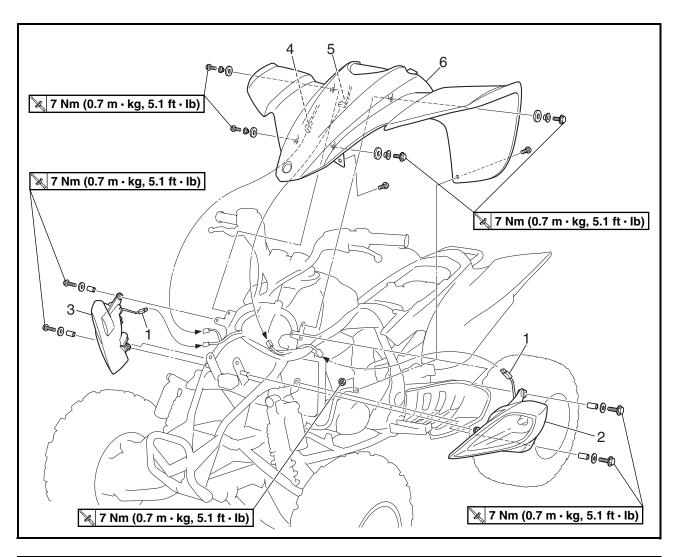


Order	Job/Part	Q'ty	Remarks
	Removing the headlight and front		Remove the parts in the order listed.
	fender		
	Seat/fuel tank cover/side covers (left		Refer to "SEAT, FENDERS AND FUEL
	and right)		TANK".
1	Headlight coupler	2	Disconnect.
2	Left headlight	1	
3	Right headlight	1	
4	Main switch coupler	1	Disconnect.
5	Indicator light coupler	1	Disconnect.
6	Front fender	1	
			For installation, reverse the removal pro-
			cedure.

CHK ADJ


EBS00039

REAR FENDER

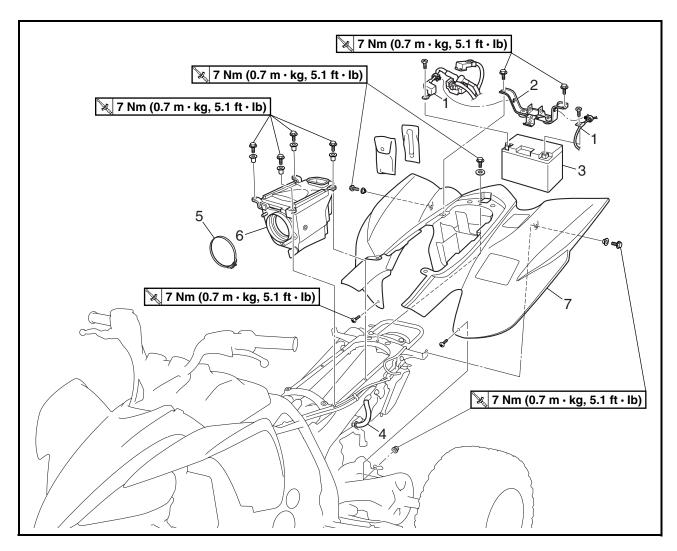

Order	Job/Part	Q'ty	Remarks
	Removing the rear fender Seat/fuel tank cover/side covers (left and right)		Remove the parts in the order listed. Refer to "SEAT, FENDERS AND FUEL TANK".
1	Battery lead	2	CAUTION:
			First disconnect the negative lead, then disconnect the positive lead.
2	Battery holding bracket	1	
3	Battery	1	
4	Air filter case breather hose	1	Disconnect.
5	Clamp	1	Loosen.
6	Air filter case	1	
7	Rear fender	1	
			For installation, reverse the removal procedure.

FUEL TANK

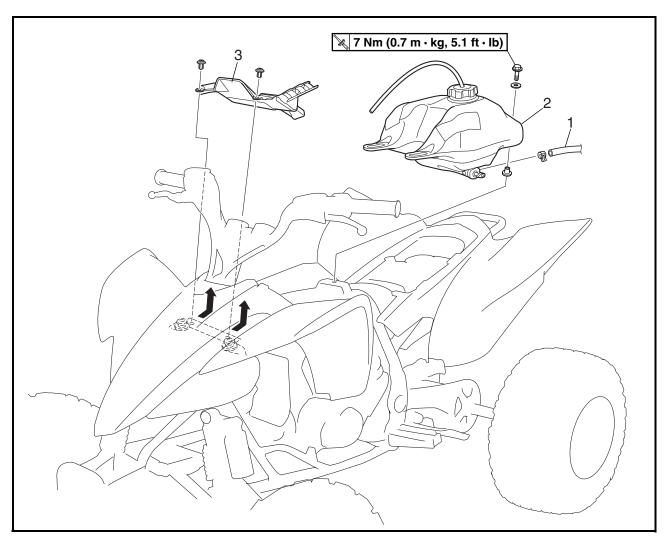

Order	Job/Part	Q'ty	Remarks
	Removing the fuel tank Seat/fuel tank cover/side covers (left and right)		Remove the parts in the order listed. Refer to "SEAT, FENDERS AND FUEL TANK".
1	Fuel hose (fuel cock side)	1	NOTE:
2	Fuel tank	1	When installing the fuel tank, pass the fuel tank breather hose through the hole in the handlebar cover.
3	Fuel tank shield	1	For installation, reverse the removal procedure.



EAS00048

ENGINE

ADJUSTING THE VALVE CLEARANCE


The following procedure applies to all of the valves.


N	\cap	FE:
ıv		

- Valve clearance adjustment should be made on a cold engine, at room temperature.
- When the valve clearance is to be measured or adjusted, the piston must be at the Top Dead Center (TDC) on the compression stroke.
- 1. Remove:
- seat
- fuel tank cover
- side covers (left and right)
- fuel tank
 Refer to "SEAT, FENDERS AND FUEL TANK".



- ignition coil (1)
- oil tank breather hose ②
- cylinder head breather hose ③
- spark plug
- cylinder head cover (4)

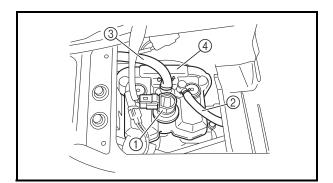

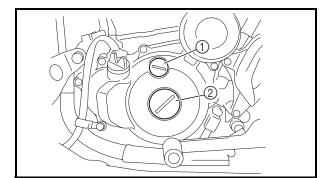



- 3. Remove:
- timing mark accessing screw (1)
- crankshaft end accessing screw ②
- 4. Measure:
- valve clearance
 Out of specification → Adjust.





Valve clearance (cold)
Intake valve
0.10 ~ 0.15 mm
(0.0039 ~ 0.0059 in)
Exhaust valve
0.20 ~ 0.25 mm
(0.0079 ~ 0.0098 in)



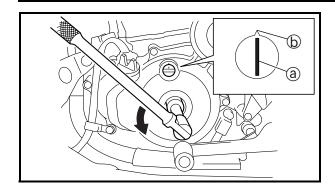

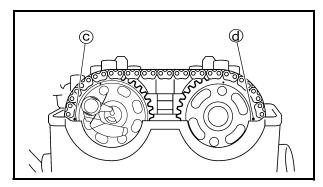

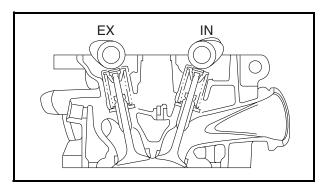

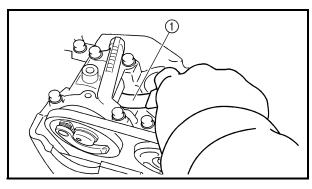

		•	•	•			•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
а	Ti	iır	n	tŀ	ച	\sim	ra	n	k	٩ŀ	าล	ft	•	0	۱ I	n	tے	'n	\sim l	\sim	٦k	Λ۱)	/ic	20

b. When the piston is at the Top Dead Center (TDC) on the compression stroke, align the "I" mark ⓐ on the A.C. magneto rotor with

the stationary pointer **(b)** on the A.C. magneto cover.

NOTE: _

 In order to be sure that the piston is at the Top Dead Center (TDC) the punch mark © on the exhaust camshaft sprocket and the punch mark © on the intake camshaft sprocket must align with the cylinder head mating surface, as shown in the illustration.

 The Top Dead Center (TDC) on the compression stroke can be found when the camshaft lobes are turned away from each other.

c. Measure the valve clearance with a thickness gauge (1).

NOTE: _


If the valve clearance is incorrect, record the measured reading.


- 5. Remove:
- intake camshaft
- exhaust camshaft


NOTE: .

- Refer to "CAMSHAFTS" in chapter 4.
- When removing the timing chain and camshafts, fasten the timing chain with a wire to retrieve it if it falls into the crankcase.



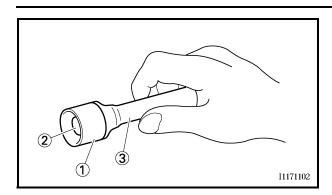

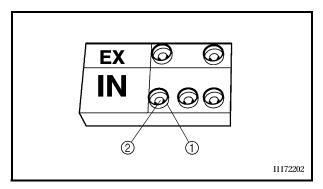

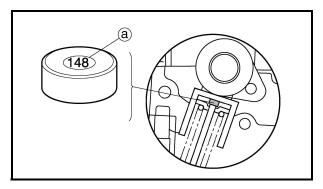

- 6. Adjust:
- valve clearance

a. Remove the valve lifter ① and the valve pad② with a valve lapper ③.



Valve lapper 90890-04101

NOTE:

- Cover the timing chain opening with a rag to prevent the valve pad from falling into the crankcase.
- Make a note of the position of each valve lifter ① and valve pad ② so that they can be installed in the correct place.
- b. Select the proper valve pad from the following table.

Valve pad rar	thickness nge	Available valve pads
Nos. 120 ~ 240	1.20 (0.047) ~ 2.40 mm (0.094 in)	25 thicknesses in 0.05 mm (0.002 in) increments

NOTE:

- The thickness (a) of each valve pad is marked in hundredths of millimeters on the side that touches the valve lifter.
- Since valve pads of various sizes are originally installed, the valve pad number must be rounded in order to reach the closest equivalent to the original.
- c. Round off the original valve pad number according to the following table.

Last digit	Rounded value
0 or 2	0
5	5
8	10




EXAMPLE:

Original valve pad number = 148 {thickness = 1.48 mm (0.058 in)}

Rounded value = 150

d. Locate the rounded number of the original valve pad and the measured valve clearance in the valve pad selection table. The point where the column and row intersect is the new valve pad number.

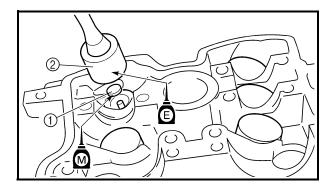

NOTE: .

The new valve pad number is only an approximation. The valve clearance must be measured again and the above steps should be repeated if the measurement is still incorrect.

e. Install the new valve pad ① and the valve lifter ②.

NOTE:

- Lubricate the valve pad with molybdenum disulfide oil.
- Lubricate the valve lifter with engine oil.
- The valve lifter must turn smoothly when rotated by hand.
- Install the valve lifter and the valve pad in the correct place.
- f. Install the exhaust and intake camshafts, timing chain and the camshaft caps.



Camshaft cap bolt 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE:

- Refer to "INSTALLING THE CAMSHAFTS CAMSHAFTS" in chapter 4.
- Lubricate the camshaft bearings, camshaft lobes and camshaft journals.
- First, install the exhaust camshaft.
- Align the camshaft sprocket marks with the edge of the cylinder head.
- Turn the crankshaft counterclockwise several full turns to seat the parts.
- g. Measure the valve clearance again.
- h. If the valve clearance is still out of specification, repeat all of the valve clearance adjustment steps until the specified clearance is obtained.



INTAKE

MEASURED										IN	STA	LLEC	PA) NU	IMBE	R									
CLEARANCE	120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240
0.00 ~ 0.04												165													
0.05 ~ 0.09		120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235
0.10 ~ 0.15										S	TAN	DARI	D CL	EAR	ANC	E									
0.16 ~ 0.20			135																						
0.21 ~ 0.25			140																						
0.26 ~ 0.30			145																			240			
0.31 ~ 0.35			150																						
0.36 ~ 0.40			155																						
0.41 ~ 0.45			160																						
0.46 ~ 0.50			165																						
0.51 ~ 0.55	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240								
0.56 ~ 0.60			175																						
0.61 ~ 0.65			180																						
0.66 ~ 0.70			185																						
0.71 ~ 0.75			190										240												
0.76 ~ 0.80			195												VAL	VE	CLE	EAR	AN	CE (colo	:(k			
0.81 ~ 0.85			200																		•	,	004	59 ir	١)
0.86 ~ 0.90			205																	•			.000) II	'/
0.91 ~ 0.95			210						240							•					75 p				
0.96 ~ 1.00			215																eara	ance	e is ().22	mm	1	
1.01 ~ 1.05			220				240								(0.00)87 i	in)							
1.06 ~ 1.10	215	220	225	230	235	240									Rep	olace	е ра	d 17	75 w	/ith p	oad	185			
1.11 ~ 1.15			230												F	Pad	num	ber	: (e)	kam	ple)				
1.16 ~ 1.20			235	240															•		mm	(0.0	069	in)	
1.21 ~ 1.25		235																			mm	•			
1.26 ~ 1.30	235	240														au	140.	100	, — I	.03		(0.0	,, 0	''' <i>')</i>	
1.31 ~ 1.35	240																								

EXHAUST

MEASURED												LLEC													
CLEARANCE	120	125	130	135																					
0.00 ~ 0.04					120							155													
0.05 ~ 0.09												160													
0.10 ~ 0.14												165													
0.15 ~ 0.19		120	125	130	135	140	145	150	155			170					195	200	205	210	215	220	225	230	235
0.20 ~ 0.25												DARI													
0.26 ~ 0.30			135																					240	
0.31 ~ 0.35			140																						
0.36 ~ 0.40			145																			240			
0.41 ~ 0.45	140	145										195									240				
0.46 ~ 0.50												200								240					
0.51 ~ 0.55	150	155	160																240						
0.56 ~ 0.60												210						240							
0.61 ~ 0.65			170																						
0.66 ~ 0.70			175																						
0.71 ~ 0.75			180												240										
0.76 ~ 0.80												230		240											
0.81 ~ 0.85			190										240												
0.86 ~ 0.90			195									240					_			_					
0.91 ~ 0.95			200								240				VAL	_VE	CLE	EAR	AN	CE ((colc	d):			
0.96 ~ 1.00			205							240					C).20	~ 0	.25 ו	mm	(0.0)	079	~ 0	.009	98 ir	1)
1.01 ~ 1.05			210						240						Exa	mpl	e: Ir	nstal	lled	is 1	75 p	ad			
1.06 ~ 1.10			215					240								•							mm	1	
1.11 ~ 1.15			220				240									0.01			Jui			J.O_		•	
1.16 ~ 1.20			225			240									•			,	,	. ملد:،	اء ۔ ۔	105			
1.21 ~ 1.25	220	225	230	235	240																bac	185	•		
1.26 ~ 1.30			235	240																	ple)				
1.31 ~ 1.35	230	235	240												F	Pad	No.	175	= 1	.75	mm	0.0)	069	in)	
1.36 ~ 1.40	235	240													F	Pad	No.	185	i = 1	.85	mm	(0.0	073	in)	
1.41 ~ 1.45	240		1																			•		•	

ADJUSTING THE VALVE CLEARANCE/ ADJUSTING THE ENGINE IDLING SPEED



7. Install:

_		
• ગ	l removed	narte
٠ aı	HEHHOVEU	บลเเอ

NO	ΓE:				
For	installation,	reverse	the	removal	proce
dure	ž				

EBS00051

ADJUSTING THE ENGINE IDLING SPEED

- 1. Start the engine and let it warm up for several minutes.
- 2. Remove:
- seat
- fuel tank cover
- side covers (left and right)
- fuel tank

NOTE:

Slide the fuel tank.

Refer to "SEAT, FENDERS AND FUEL TANK".


- 3. Attach:
- digital tachometer (onto the ignition coil)
- 4. Install:
- fuel tank
 Refer to "SEAT, FENDERS AND FUEL TANK".
- 5. Measure:
- engine idling speed
 Out of specification → Adjust.



Engine idling speed 1,750 ~ 1,850 r/min

ADJUSTING THE ENGINE IDLING SPEED/ ADJUSTING THE THROTTLE LEVER FREE PLAY



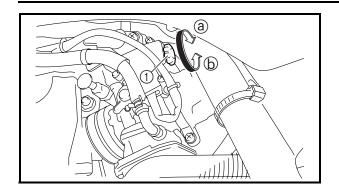

_	-			-
6.	^	A١	us	٠
n	\boldsymbol{A}	(11	115	

engine idling speed

a. Turn the throttle stop screw ① in direction

a or b until the specified idling speed is obtained.

Direction ⓐ	Idling speed becomes higher.
Direction ⓑ	Idling speed becomes lower.

▲.	•	▲.	▲ ▲		A	Δ.	▲.	▲	. 4	V	\	A	•	•	▲.	▲.	Δ	▲	▲	 V	M	•	A	•	▲.	1

- 7. Remove:
- fuel tank

IOTE:	
Slide the fuel tank.	

- 8. Detach:
- engine tachometer
- 9. Install:
- fuel tank
- side covers (left and right)
- · fuel tank cover
- seat Refer to "SEAT, FENDERS AND FUEL TANK".

10.Adjust:

• throttle lever free play Refer to "ADJUSTING THE THROTTLE LEVER FREE PLAY".




Throttle lever free play 2 ~ 4 mm (0.08 ~ 0.16 in)


ADJUSTING THE THROTTLE LEVER FREE **PLAY**

Engine idling speed should be adjusted properly before adjusting the throttle lever free play.

ADJUSTING THE THROTTLE LEVER FREE PLAY



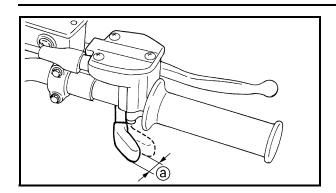

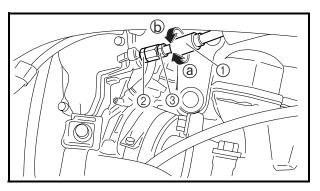



throttle lever free play ⓐ
 Out of specification → Adjust.



Throttle lever free play 2 ~ 4 mm (0.08 ~ 0.16 in)

- 2. Adjust:
- throttle lever free play

First step:

- a. Slide back the rubber cover ①.
- b. Loosen the locknut ② on the carburetor side
- c. Turn the adjusting nut ③ in direction ⓐ or ⓑ until the correct free play is obtained.

Direction ⓐ	Free play is increased.
Direction (b)	Free play is decreased.

- d. Tighten the locknut.
- e. Slide the rubber cover to its original position.

NOTE: _

If the free play cannot be adjusted here, adjust it at the throttle lever side of the cable.

Second step:


- f. Slide back the rubber cover (4).
- g. Loosen the locknut ⑤.
- h. Turn the adjusting bolt (a) in direction (b) or (b) until the correct free play is obtained.

Direction ©	Free play is increased.
Direction (d)	Free play is decreased.

- i. Tighten the locknut.
- j. Slide the rubber cover to its original position.

WARNING

After adjusting the free play, turn the handlebar to the right and left to make sure that the engine idling speed does not increase.

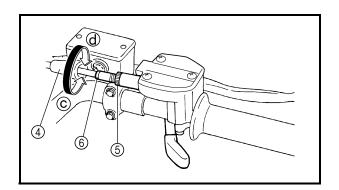


ADJUSTING THE SPEED LIMITER



EBS00053

ADJUSTING THE SPEED LIMITER

The speed limiter keeps the carburetor throttle from becoming fully-opened even when the throttle lever is applied to the maximum position. Screwing in the adjusting screw stops the engine speed from increasing.

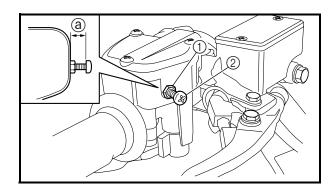

- 1. Measure:
- speed limiter length ⓐ
 Out of specification → Adjust.



Speed limiter length Less than 12 mm (0.47 in)

- 2. Adjust:
- speed limiter length
- a. Loosen the locknut (1).
- b. Turn the adjusting screw ② in or out until the specified speed limiter length is obtained.

Turning in	Speed limiter length is decreased.
Turning out	Speed limiter length is increased.

c. Tighten the locknut.

WARNING

- Particularly for a beginner rider, the speed limiter should be screwed in completely. Screw it out little by little as their riding technique improves. Never remove the speed limiter for a beginning rider.
- For proper throttle lever operation do not turn out the adjusting screw more than 12 mm (0.47 in). Also, always adjust the throttle lever free play to 2 ~ 4 mm (0.08 ~ 0.16 in).

CHECKING THE SPARK PLUG



EBS00057

CHECKING THE SPARK PLUG

- 1. Remove:
- seat
- · fuel tank cover
- side covers (left and right)
- fuel tank

NOTE: .

Slide the fuel tank.

- 2. Remove:
- ignition coil
- 3. Remove:
- spark plug
- 4. Check:
- spark plug type Incorrect → Change.

Standard spark plug CR8E/NGK



- electrode ①
 Wear/damage → Replace.
- insulator ②
 Abnormal color → Replace.

 Normal color is a medium-to-light tan color.
- 6. Clean:
- spark plug (with a spark plug cleaner or wire brush)



spark plug gap ⓐ
 Use a wire gauge or thickness gauge.
 Out of specification → Regap.



Spark plug gap

0.7 ~ 0.8 mm (0.028 ~ 0.031 in)


8. Tighten:


• spark plug

№ 13 Nm (1.3 m · kg, 9.4 ft · lb)

NOTE:

Before installing a spark plug, clean the gasket surface and plug surface.

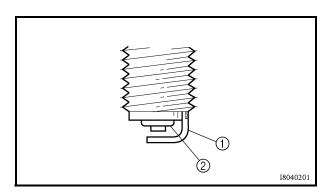

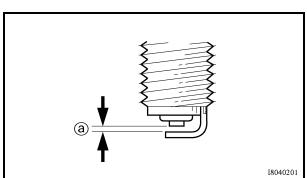

CHECKING THE SPARK PLUG/ CHECKING THE IGNITION TIMING



- 9. Install:
- ignition coil
- fuel tank
- side covers (left and right)
- fuel tank cover
- seat

Refer to "SEAT, FENDERS AND FUEL TANK".

EBS00058

CHECKING THE IGNITION TIMING

NOTE:

Engine idling speed and throttle cable free play should be adjusted properly before checking the ignition timing.

- 1. Remove:
- seat
- fuel tank cover
- side covers (left and right)
- fuel tank

NOTE: .

Slide the fuel tank.

Refer to "SEAT, FENDERS AND FUEL TANK".

- 2. Attach:
- · digital tachometer
- timing light (onto the ignition coil)





Timing light P/N. YM-33277-A, 90890-03141

- 3. Install:
- fuel tank
 Refer to "SEAT, FENDERS AND FUEL TANK".

CHECKING THE IGNITION TIMING/ CHECKING THE ENGINE OIL LEVEL



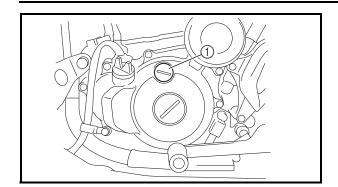

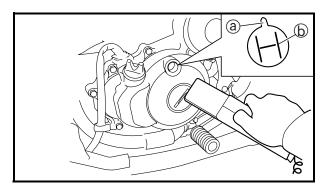

- 4. Check:
- ignition timing

a. Warm up the engine and keep it at the specified speed.



Engine speed 1,750 ~ 1,850 r/min

- b. Remove the timing mark accessing screw ①.
- c. Visually check the stationary pointer ⓐ to verify it is within the required firing range ⓑ indicated on the A.C. magneto rotor. Incorrect firing range → Check the pulser coil assembly.
- d. Install the timing mark accessing screw.

	_	
 		•

- Remove:
- fuel tank

NO	le: _		
Slid	e the	fuel	tank.

- 6. Detach:
- timing light
- engine tachometer
- 7. Install:
- fuel tank
- side covers (left and right)
- fuel tank cover
- seat

Refer to "SEAT, FENDERS AND FUEL TANK".

EBS01101

CHECKING THE ENGINE OIL LEVEL


- 1. Place the machine on a level surface.
- 2. Start the engine, warm it up until the engine oil has reached a normal temperature of 40 °C (104 °F), let it continue to idle for ten seconds, and then turn the engine off.


NOTE: .

To achieve the proper engine oil temperature for an accurate oil level reading, the engine must have first completely cooled down, and then warmed up again for several minutes to normal operating temperature.

CHECKING THE ENGINE OIL LEVEL



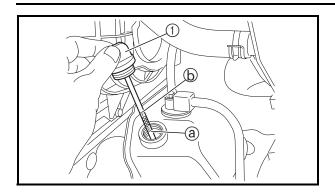

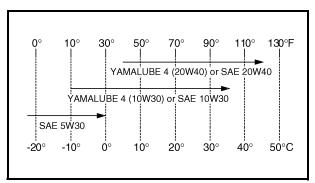

- 3. Check:
- engine oil level

Oil level should be between the minimum level mark ⓐ and the maximum level mark ⓑ.

Low oil level \rightarrow Add oil to the proper level.

NOTE: .

- Wait a few minutes until the oil settles before checking the oil level.
- Do not screw the dipstick ① in when checking the oil level.



Recommended oil Follow the chart on the left.

NOTE: _

Recommended oil classification:

API Service "SE", "SF", "SG" type or equivalent (e.g. "SF—SE—CC", "SF—SE—SD" etc.)

CAUTION:

- Do not add any chemical additives.
 Engine oil also lubricates the clutch and additives could cause clutch slippage.
- Do not allow foreign material to enter the crankcase.
- 4. Start the engine, warm it up for several minutes, and then turn it off.
- 5. Check:
- engine oil level

NOTE

Before checking the engine oil level, wait a few minutes until the oil has settled.

CHANGING THE ENGINE OIL




EBS00067

CHANGING THE ENGINE OIL

- 1. Remove:
- engine skid plate
 Refer to "SEAT, FENDERS AND FUEL TANK".
- 2. Start the engine, warm it up for several minutes, and then turn it off.
- 3. Place a container under the engine oil drain holt




- engine oil filler cap ①
- dipstick ②

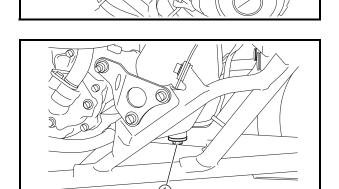


5. Remove:

engine oil drain bolt (oil tank) ①
 (along with the washer)

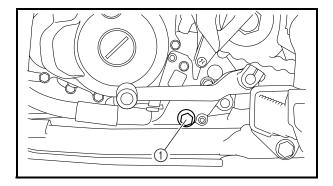

6. Remove:

• engine oil drain bolt (crankcase) ① (along with the gasket)

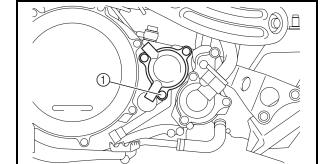


7. Remove:

- oil filter element drain bolt ①
- 8. Drain:
- engine oil (completely from the oil tank and the crankcase)

CHANGING THE ENGINE OIL



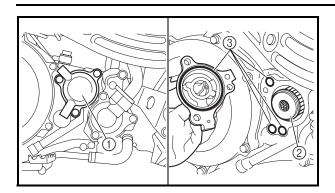

9. If the oil filter element is also to be replaced, perform the following procedure.

- a. Remove the oil filter element cover ① and oil filter element ②.
- b. Check the O-rings ③ and replace them if they are cracked or damaged.
- c. Install the new oil filter element and the oil filter element cover.



Oil filter element cover bolt 10 Nm (1.0 m · kg, 7.2 ft · lb)

10.Check:

 engine oil drain bolt gasket Damage → Replace.

11.Install:

 engine oil drain bolt (crankcase) (along with the gasket)

≥ 20 Nm (2.0 m · kg, 14 ft · lb)

 engine oil drain bolt (oil tank) (along with the washer)

№ 19 Nm (1.9 m · kg, 13 ft · lb)

• oil filter element drain bolt

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

12.Fill:

- oil tank
 (with the specified amount of the recommended engine oil)
- crankcase
 (with the specified amount of the recommended engine oil)

CHANGING THE ENGINE OIL





Overhaul **Total amount** 1.95 L (1.72 Imp qt, 2.06 US qt) Quantity in oil tank 1.55 L (1.36 Imp qt, 1.64 US qt) Quantity in crankcase 0.40 L (0.35 Imp qt, 0.42 US qt) Periodic oil replacement **Total amount** 1.75 L (1.54 Imp qt, 1.85 US qt) Quantity in oil tank 1.55 L (1.36 Imp qt, 1.64 US qt) Quantity in crankcase 0.20 L (0.18 Imp qt, 0.21 US qt) With oil filter element replacement **Total amount** 1.85 L (1.63 Imp qt, 1.96 US qt) Quantity in oil tank 1.55 L (1.36 Imp qt, 1.64 US qt) Quantity in crankcase 0.30 L (0.26 Imp qt, 0.32 US qt)

13.Install:

- dipstick
- engine oil filler cap
- 14. Start the engine, warm it up for several minutes, and then turn it off.

15.Check:


• engine (for engine oil leaks)

16.Check:

• engine oil level Refer to "CHECKING THE ENGINE OIL LEVEL".

CHANGING THE ENGINE OIL/ ADJUSTING THE CLUTCH CABLE



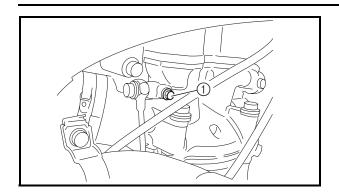

17.Check:

• engine oil pressure

a. Slightly loosen the oil gallery bolt ①.


- b. Start the engine and keep it idling until engine oil starts to seep from the oil gallery bolt. If no engine oil comes out after one minute, turn the engine off so that it will not seize.
- c. Check the engine oil passages, the oil filter element and the oil pump for damage or leakage. Refer to "OIL PUMP" in chapter 4.
- d. Start the engine after solving the problem(s) and check the engine oil pressure again.
- e. Tighten the oil gallery bolt to specification.



Oil gallery bolt 10 Nm (1.0 m · kg, 7.2 ft · lb)

18.Install:

 engine skid plate
 Refer to "SEAT, FENDERS AND FUEL TANK".

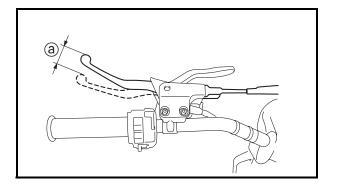

BS00070

ADJUSTING THE CLUTCH CABLE


- 1. Check:
- clutch lever free play ⓐ
 Out of specification → Adjust.



Clutch lever free play (at the clutch lever end) 8 ~ 13 mm (0.31 ~ 0.51 in)

ADJUSTING THE CLUTCH CABLE



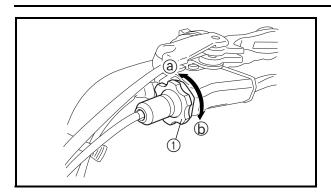

2. Adjust:

• clutch release lever free play


Handlebar side

a. Turn the adjusting nut ① in direction ② or
 ⑤ until the specified clutch cable free play is obtained.

Direction (a)	Clutch cable free play is increased.
Direction (b)	Clutch cable free play is decreased.

NOTE: __

If the specified clutch cable free play cannot be obtained on the handlebar side of the cable, use the adjusting nut on the engine side.

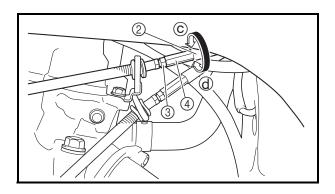

Engine side


- a. Slide back the rubber cover ②.
- b. Loosen the locknut ③.
- c. Turn the adjusting nut ④ in direction ⓒ or ⓓ until the specified clutch cable free play is obtained.

Direction ©	Clutch cable free play is increased.
Direction @	Clutch cable free play is decreased.

- d. Tighten the locknut.
- e. Slide the rubber cover to its original position.

CLEANING THE AIR FILTER ELEMENT



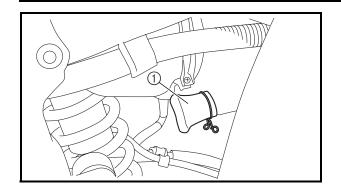


EBS00073

CLEANING THE AIR FILTER ELEMENT


NOTE: _

There is a check hose ① at the bottom of the air filter case. If dust and/or water collects in this hose, clean the air filter element and air filter case.

- 1. Remove:
- seat
 Refer to "SEAT, FENDERS AND FUEL TANK".

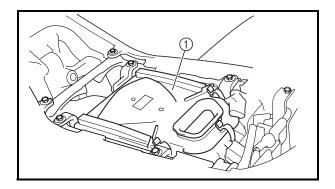

- 2. Remove:
- air filter case cover (1)

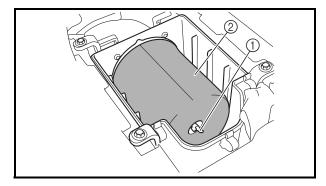


- 3. Remove:
- wing bolt (1)
- air filter element ②
- air filter element frame ③




The engine should never be run without the air filter; excessive piston and/or cylinder wear may result.

- 4. Check:
- air filter element
 Damage → Replace.

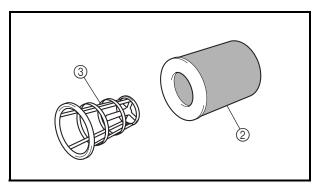

CLEANING THE AIR FILTER ELEMENT



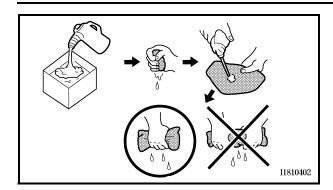

- 5. Clean:
- air filter element

a. Wash the element gently, but thoroughly in solvent.

WARNING

Use a cleaning solvent which is designed to clean parts only. Never use gasoline or low flash point solvents as they may cause a fire or explosion.

b. Squeeze the excess solvent out of the element and let it dry.

CAUTION:


Do not twist or wring out the element. This could damage the foam material.

- c. Apply engine oil to the element.
- d. Squeeze out the excess oil.

NOTE:

The element should be wet but not dripping.

- 6. Install:
- · air filter element frame

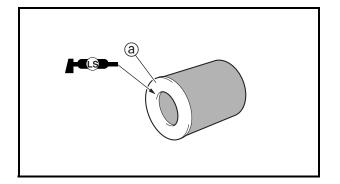

- 7. Apply:
- Lithium-soap-based grease
 On the matching surface @ on air filter element.
- 8. Install:
- air filter element
- wing bolt

NOTE:

Make sure its sealing surface matches the sealing surface of the case so there is no air leak.

- 9. Install:
- air filter case cover


10.Install:

seat

Refer to "SEAT, FENDERS AND FUEL TANK".

CHECKING THE COOLANT LEVEL/ CHANGING THE COOLANT



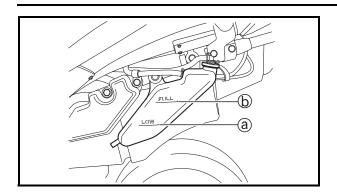

EBS00076

CHECKING THE COOLANT LEVEL

- 1. Place the machine on a level surface.
- 2. Check:
- · coolant level

The coolant level should be between the minimum level mark ⓐ and maximum level mark ⓑ.

Below the minimum level mark \rightarrow Add the recommended coolant to the proper level.

CAUTION:

- Adding water instead of coolant lowers the antifreeze content of the coolant. If water is used instead of coolant, check and if necessary, correct the antifreeze concentration of the coolant.
- Use only distilled water. However, soft water may be used if distilled water is not available.
- 4. Start the engine, warm it up for several minutes, and then turn it off.
- 5. Check:
- · coolant level


N	a	т	F	
ľ	$\mathbf{\mathcal{I}}$		ᆫ	

Before checking the coolant level, wait a few minutes until the coolant has settled.

EBS00075

CHANGING THE COOLANT

- 1. Remove:
- seat
- · fuel tank cover
- right side cover
 Refer to "SEAT, FENDERS AND FUEL TANK".

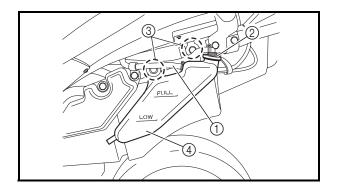

- 2. Disconnect:
- coolant reservoir breather hose (1)
- 3. Remove:
- coolant reservoir cap ②
- coolant reservoir bolts (3)
- coolant reservoir (4)
- 4. Drain:
 - coolant (from the coolant reservoir)


CHANGING THE COOLANT



- 5. Install:
- coolant reservoir
- · coolant reservoir bolts

7 Nm (0.7 m ⋅ kg, 5.1 ft ⋅ lb)

- 6. Connect:
- coolant reservoir breather hose

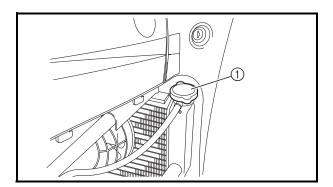


7. Remove:

• radiator cap ①

WARNING


A hot radiator is under pressure. Therefore, do not remove the radiator cap when the engine is hot. Scalding hot fluid and steam may be blown out, which could cause serious injury. When the engine has cooled, open the radiator cap as follows:

Place a thick rag or a towel over the radiator cap and slowly turn the radiator cap counterclockwise toward the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the radiator cap and turn it counterclockwise to remove.

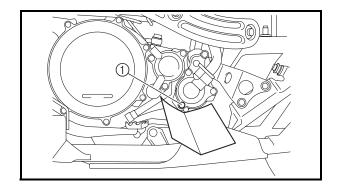

8. Remove:

- coolant drain bolt ①
 (along with the copper washer)
- 9. Drain:
- coolant (from the engine and radiator)

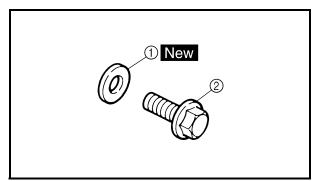


10.Check:

- copper washer ① New coolant drain bolt ②
 Damage → Replace.
- 11.Install:
- coolant drain bolt

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

CHANGING THE COOLANT



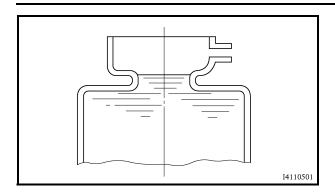

12.Fill:

 cooling system (with the specified amount of the recommended coolant)



Recommended antifreeze
High-quality ethylene glycol
antifreeze containing corrosion
inhibitors for aluminum engines
Mixing ratio
1:1 (antifreeze:water)
Quantity
Total amount
1.3 L (1.14 Imp qt, 1.37 US qt)
Coolant reservoir capacity

0.29 L (0.26 Imp qt, 0.31 US qt)

Handling notes for coolant

Coolant is potentially harmful and should be handled with special care.

⚠ WARNING

- If coolant splashes in your eyes, thoroughly wash them with water and consult a doctor.
- If coolant splashes on your clothes, quickly wash it away with water and then with soap and water.
- If coolant is swallowed, induce vomiting and get immediate medical attention.

CAUTION:


- Adding water instead of coolant lowers the antifreeze content of the coolant. If water is used instead of coolant check, and if necessary, correct the antifreeze concentration of the coolant.
- Use only distilled water. However, if distilled water is not available, soft water may be used.
- If coolant comes into contact with painted surfaces, immediately wash them with water
- Do not mix different types of antifreeze.

13.Install:

radiator cap

CHANGING THE COOLANT



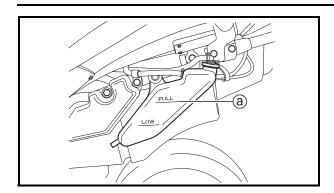

14.Fill:

 coolant reservoir (with the recommended coolant to the maximum level mark (a))

15.Install:

- coolant reservoir cap
- 16. Start the engine, warm it up for several minutes, and then stop it.

17.Check:

 coolant level Refer to "CHECKING THE COOLANT LEVEL".

NOTE: ___


Before checking the coolant level, wait a few minutes until the coolant has settled.

18.Install:

- right side cover
- fuel tank cover
- seat
 Refer to "SEAT, FENDERS AND FUEL
 TANK".

CHECKING THE COOLANT TEMPERATURE WARNING LIGHT




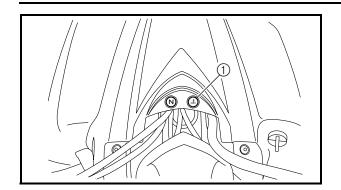

EBS00077 CHECKING THE COOLANT TEMPERATURE


WARNING LIGHT


① Coolant temperature warning light

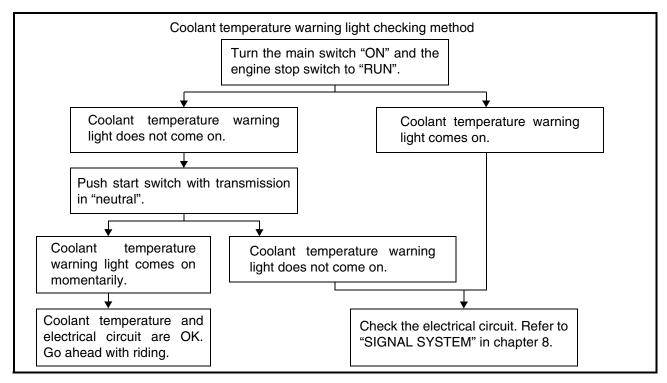


CLEANING THE SPARK ARRESTER



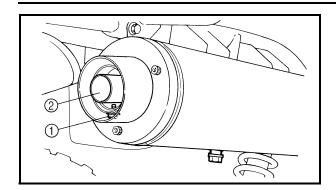

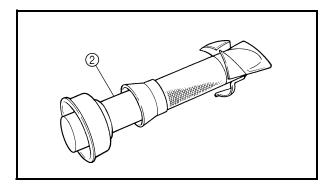

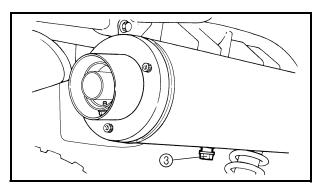

CLEANING THE SPARK ARRESTER

- 1. Clean:
 - Spark arrester


WARNING

- Select a well-ventilated area free of combustible materials.
- Always let the exhaust system cool before performing this operation.
- Do not start the engine when removing the tailpipe from the muffler.
- a. Remove the bolt ①.
- b. Remove the tailpipe ② by pulling it out of the muffler.
- c. Tap the tailpipe lightly with a soft-face hammer or suitable tool, then use a wire brush to remove any carbon deposits from the spark arrester portion of the tailpipe and the inner contact surfaces of the muffler.
- d. Insert the tailpipe into the muffler and align the bolt holes.
- e. Insert the bolt and tighten it.
- f. Remove the purging bolt 3.
- g. Start the engine and rev it up approximately twenty times while momentarily creating exhaust system back pressure by blocking the end of the muffler with a shop towel.
- h. Stop the engine and allow the exhaust pipe to cool.

i. Install the purging bolt ③ and tighten it.

ADJUSTING THE FRONT BRAKE/ADJUSTING THE BRAKE LEVER/ADJUSTING THE REAR BRAKE



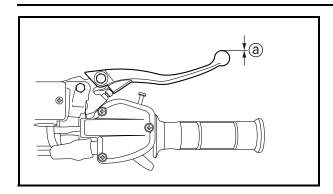

EBS00080

CHASSIS


ADJUSTING THE FRONT BRAKE

- 1. Measure:
- brake lever free play ⓐ
 Out of specification → Bleed the front brake

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM".



Brake lever free play (at the end of the brake lever) 0 mm (0 in)

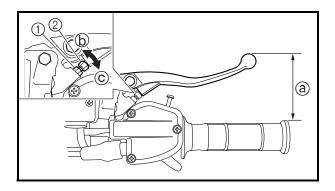


ADJUSTING THE BRAKE LEVER

- 1. Adjust:
- brake lever position ⓐ
- a. While pushing the brake lever forward, loosen the locknut ①.
- b. While pushing the brake lever forward, turn the adjusting bolt ② in direction ⑤ or ⓒ until the brake lever is in the desired position.
- c. Tighten the locknut.

CAUTION:

Be sure to tighten the locknut, as failing to do so will cause poor brake performance.

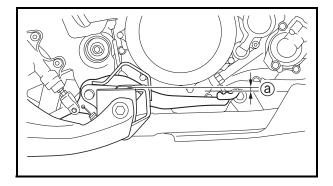

EBS00085

ADJUSTING THE REAR BRAKE


- 1. Measure:
- rear brake pedal height ⓐ
 Out of specification → Adjust.



Rear brake pedal height 11.7 mm (0.46 in)

ADJUSTING THE REAR BRAKE/ ADJUSTING THE PARKING BRAKE



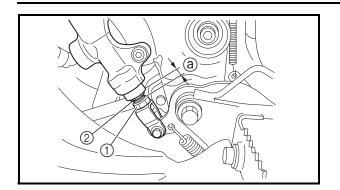

- 2. Adjust:
- rear brake pedal height

a. Loosen the locknut (1).


- b. Turn the adjusting bolt ② until the brake pedal height is within the specified limits.
- c. Tighten the locknut.

NOTE:

When adjusting the brake pedal height make sure the locknut-to-adjusting bolt clearance ⓐ does not exceed 2.2 ~ 3.2 mm (0.09 ~ 0.13 in).

WARNING

After this adjustment is performed, lift the front and rear wheels off the ground by placing a block under the engine, and spin the rear wheels to ensure there is no brake drag. If any brake drag is noticed, perform the above steps again.

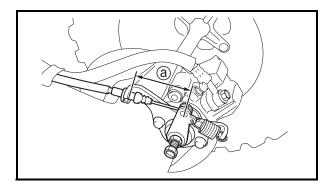

ADJUSTING THE PARKING BRAKE


- 1. Check:
- parking brake cable end length ⓐ
 Out of specification → Adjust.




Parking brake cable end length 56 ~ 60 mm (2.20 ~ 2.36 in)

ADJUSTING THE PARKING BRAKE/ CHECKING THE BRAKE FLUID LEVEL



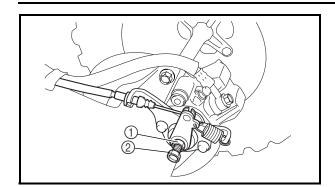

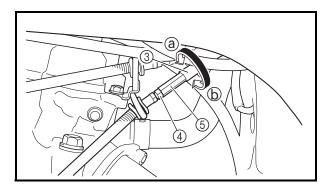

- 2. Adjust:
- parking brake cable end length

- a. Loosen the locknut ① and adjusting bolt ②.
- b. Slide back the rubber cover ③.
- c. Loosen the locknut (4).
- d. Turn the adjusting nut 5 in direction a or (b) until the specified brake cable end length is obtained.
- e. Tighten the locknut.
- f. Slowly turn the adjusting bolt clockwise until resistance is felt.
- g. Turn it 1/8 counterclockwise.
- h. Tighten the locknut (1).



Locknut 16 Nm (1.6 m ⋅ kg, 11 ft ⋅ lb)

i. Slide the rubber cover to its original position.

WARNING

After this adjustment is performed, lift the rear wheels off the ground by placing a block under the engine, and spin the rear wheels to ensure there is no brake drag. If any brake drag is noticed perform the above steps again.

|--|

CHECKING THE BRAKE FLUID LEVEL


1. Place the machine on a level surface.


NOTE: .

When checking the brake fluid level, make sure that the top of the brake fluid reservoir top is horizontal.

CHECKING THE BRAKE FLUID LEVEL/ CHECKING THE FRONT BRAKE PADS



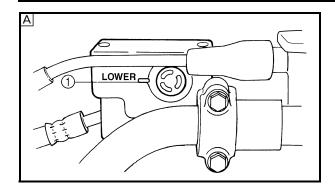

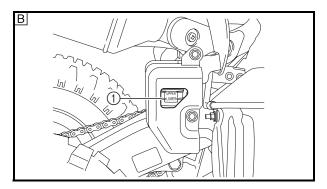

- 2. Check:
- brake fluid level
 Below the minimum level mark ① → Add
 the recommended brake fluid to the proper
 level



Recommended brake fluid DOT 4

- A Front brake
- **B** Rear brake

WARNING

- Use only the designated brake fluid.
 Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

^	T10		
I - /\	 TIC	וחו	-

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

N	\sim	re.
IV	U	

In order to ensure a correct reading of the brake fluid level, make sure that the top of the brake fluid reservoir is horizontal.


EBS00088

CHECKING THE FRONT BRAKE PADS

- 1. Remove:
- front wheels Refer to "FRONT AND REAR WHEELS" in chapter 7.

CHECKING THE FRONT BRAKE PADS/ CHECKING THE REAR BRAKE PADS



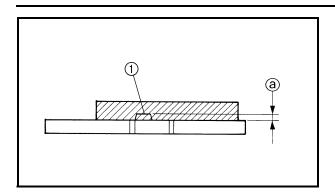


- 2. Check:
- brake pads
 Wear indicators ① almost touch the brake
 disc → Replace the brake pads as a set.
 - Refer to "FRONT AND REAR BRAKES" in chapter 7.



Brake pad wear limit ⓐ 1.0 mm (0.04 in)

- 3. Operate the brake lever.
- 4. Install:
- front wheels Refer to "FRONT AND REAR WHEELS" in chapter 7.

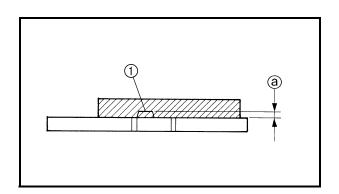

FBS00089

CHECKING THE REAR BRAKE PADS

- 1. Check:
- brake pads

Wear indicator 1 almost touch the brake disc \rightarrow Replace the brake pads as a set. Refer to "FRONT AND REAR BRAKES" in chapter 7.



Brake pad wear limit ⓐ 1.0 mm (0.04 in)

2. Operate the brake pedal.


ADJUSTING THE REAR BRAKE LIGHT SWITCH/ CHECKING THE BRAKE HOSES



ADJUSTING THE REAR BRAKE LIGHT SWITCH

	_	
NI	<i>(</i>)	

- The rear brake light switch is operated by movement of the brake pedal.
- The rear brake light switch is properly adjusted when the brake light comes on just before the braking effect starts.
- 1. Check:
- rear brake light operation timing Incorrect → Adjust.

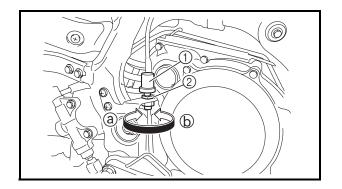

2. Adjust:

• rear brake light operation timing

a. Hold the main body ① of the rear brake light switch so that it does not rotate and turn the adjusting nut ② in direction ② or ⑤ until the rear brake light comes on at the proper time.

Direction (a)	Brake light comes on sooner.		
Direction (b)	Brake light comes on later.		


EBS00092


CHECKING THE BRAKE HOSES

- 1. Remove:
- seat
- fuel tank cover
- side covers (left and right)
- front fender Refer to "SEAT, FENDERS AND FUEL TANK".

CHECKING THE BRAKE HOSES/ BLEEDING THE HYDRAULIC BRAKE SYSTEM



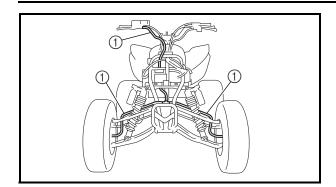

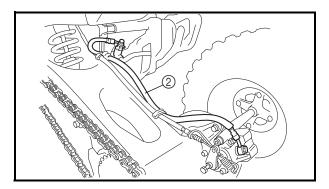

- 2. Check:
- front brake hoses (1)
- rear brake hose ②
 Cracks/wear/damage → Replace.
- 3. Check:
- brake hose clamps
 Loosen → Tighten.
- 4. Hold the machine in an upright position and apply the front or rear brake.
- 5. Check:
- brake hoses

Apply the brake lever or brake pedal several times.

Fluid leakage \rightarrow Replace the hoses. Refer to "FRONT AND REAR BRAKES" in

- 6. Install:
- front fender

chapter 7.

- side covers (left and right)
- fuel tank cover
- seat

Refer to "SEAT, FENDERS AND FUEL TANK".

EBS0009

BLEEDING THE HYDRAULIC BRAKE SYSTEM

WARNING

Bleed the hydraulic brake system whenever:


- the system is disassembled,
- a brake hose is loosened, disconnected or replaced,
- the brake fluid level is very low,
- brake operation is faulty.


BLEEDING THE HYDRAULIC BRAKE SYSTEM



NOTE: _

- Be careful not to spill any brake fluid or allow the brake master cylinder reservoir or brake fluid reservoir to overflow.
- When bleeding the hydraulic brake system, make sure there is always enough brake fluid before applying the brake. Ignoring this precaution could allow air to enter the hydraulic brake system, considerably lengthening the bleeding procedure.
- If bleeding is difficult, it may be necessary to let the brake fluid settle for a few hours.
 Repeat the bleeding procedure when the tiny bubbles in the hose have disappeared.

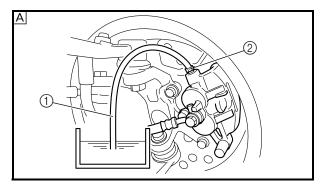

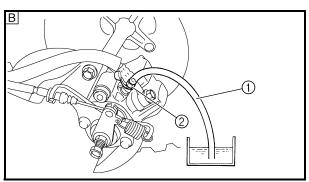

- 1. Bleed:
- hydraulic brake system
- a. Fill the brake fluid reservoir to the proper level with the recommended brake fluid.
- b. Install the diaphragm (brake master cylinder reservoir or brake fluid reservoir).
- c. Connect a clear plastic hose ① tightly to the bleed screw ②.
- A Front
- **B** Rear
- d. Place the other end of the hose into a container.
- e. Slowly apply the brake lever or brake pedal several times.
- f. Fully squeeze the brake lever or fully depress the brake pedal and hold it in position.
- g. Loosen the bleed screw.

NOTE:

Loosening the bleed screw will release the pressure and cause the brake lever to contact the throttle grip or the brake pedal to fully extend.

h. Tighten the bleed screw and then release the brake lever or brake pedal.

BLEEDING THE HYDRAULIC BRAKE SYSTEM/ ADJUSTING THE SHIFT PEDAL



- Repeat steps (e) to (h) until all of the air bubbles have disappeared from the brake fluid in the plastic hose.
- j. Tighten the bleed screw to specification.




Bleed screw 6 Nm (0.6 m · kg, 4.3 ft · lb)

k. Fill the brake fluid reservoir to the proper level with the recommended brake fluid. Refer to "CHECKING THE BRAKE FLUID LEVEL".

WARNING

After bleeding the hydraulic brake system, check the brake operation.

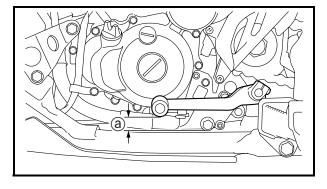


EBC0000

ADJUSTING THE SHIFT PEDAL

- 1. Measure:
- shift pedal height ⓐ
 Out of specification → Adjust.



Shift pedal height 25 mm (0.98 in)

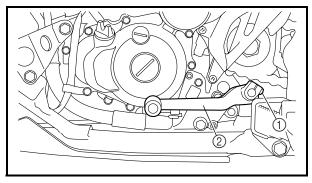

- 2. Adjust:
- shift pedal position
- a. Loosen the bolt 1.
- b. Remove the shift pedal ②.
- c. Install the shift pedal at the correct height.
- d. Tighten the bolt to specification.

| 12 Nm (1.2 m ⋅ kg, 8.7 ft ⋅ lb)

ADJUSTING THE DRIVE CHAIN SLACK

CHK ADJ

ADJUSTING THE DRIVE CHAIN SLACK


	_	
N		. –

Measure the drive chain slack halfway between the drive axle and the rear axle.

CAUTION:

A drive chain that is too tight will overload the engine and other vital parts, and one that is too loose can skip and damage the swingarm or cause an accident. Therefore, keep the drive chain slack within the specified limits.

1. Elevate the rear wheels by placing the suitable stand under the frame.

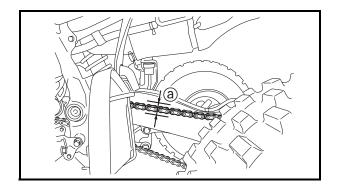


2. Measure:

drive chain slack ⓐ
 Out of specification → Adjust.



Drive chain slack 25 ~ 35 mm (0.98 ~ 1.38 in)

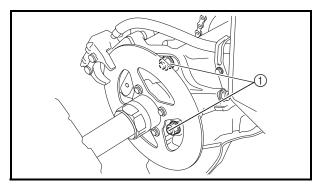


- 3. Adjust:
- drive chain slack

a. Loosen the hub nuts ①.

- b. Loosen the locknuts ②.
- c. Turn both adjusting bolts ③ in direction ⓐ or ⓑ until the specified drive chain slack is obtained.

Direction (a)	Drive chain slack is reduced.
Direction (b)	Drive chain slack is increased.

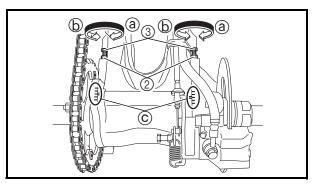

NOTE: .

To maintain the proper axle alignment, adjust both sides evenly. (There are marks © on each side of hub.)

ADJUSTING THE DRIVE CHAIN SLACK/ CHECKING THE STEERING SYSTEM



CAUTION:

Excessive chain slack will overload the engine and other vital parts; keep the slack within the specified limits.


- d. If the chain slack cannot be adjusted, replace the sprockets and drive chain as a set
- e. Tighten the hub nuts and locknuts.



Hub nut 85 Nm (8.5 m · kg, 61 ft · lb) Locknut (chain puller) 16 Nm (1.6 m · kg, 11 ft · lb)

NOTE: _

The chain should be cleaned and lubricated after every use of the machine.

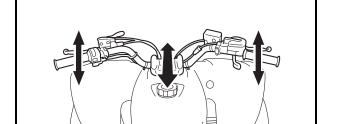


FBS00106

CHECKING THE STEERING SYSTEM

- 1. Place the machine on a level surface.
- 2. Check:
- steering assembly bushings
 Move the handlebar up and down, and/or
 back and forth.


Excessive play \rightarrow Replace the steering stem bushings.

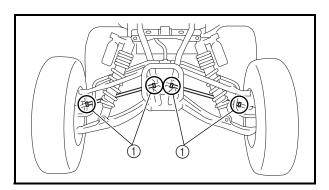

- 3. Check:
- tie-rod ends

Turn the handlebar to the left and right until it stops completely, and then move the handlebar slightly in the opposite direction.


Tie-rod end(s) 1 have vertical play \rightarrow Replace the tie-rod end(s).

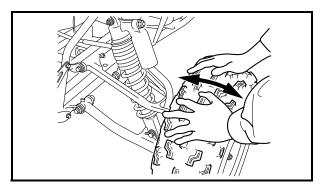


- 4. Raise the front end of the machine so that there is no weight on the front wheels.
- 5. Check:
- ball joints and/or wheel bearings
 Move the wheels laterally back and forth.
 Excessive free play → Replace the front arms (upper and lower) and/or wheel bearings.

ADJUSTING THE TOE-IN



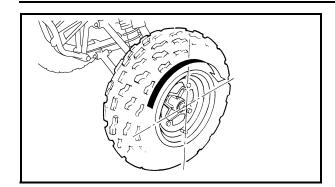

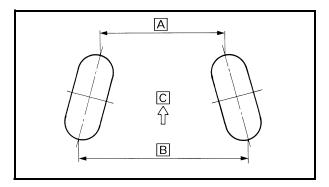

FBS00108

ADJUSTING THE TOE-IN

- 1. Place the machine on a level surface.
- 2. Measure:
- toe-in

Out of specification \rightarrow Adjust.



Toe-in

2 ~ 12 mm (0.08 ~ 0.47 in)

NOTE:

Before measuring the toe-in, make sure that the tire pressure is correct.

- a. Mark both front tire tread centers.
- b. Raise the front end of the machine so that there is no weight on the front tires.
- c. Face the handlebar straight ahead.
- d. Measure the width A between the marks.
- e. Rotate the front tires 180° until the marks are exactly opposite one another.
- f. Measure the width B between the marks.
- g. Calculate the toe-in using the formula given below.

Toe-in = **B** – **A**

h. If the toe-in is incorrect, adjust it.

C Forward


- 3. Adjust:
- toe-in


WARNING


- Be sure that both tie-rods are turned the same amount. If not, the machine will drift right or left even though the handlebar is positioned straight. This may lead to mishandling and an accident.
- After setting the toe-in to specification, run the machine slowly for some distance with both hands lightly holding the handlebar and check that the handlebar responds correctly. If not, turn either the right or left tie-rod within the toe-in specification.


ADJUSTING THE TOE-IN/CHECKING THE FRONT AND REAR SHOCK ABSORBERS



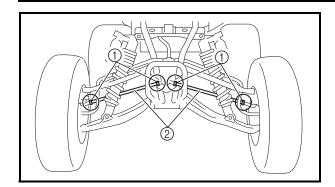

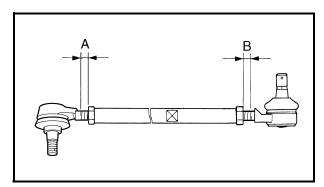

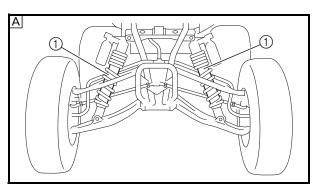

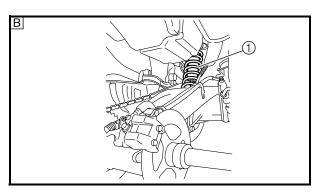

a. Mark both tie-rods ends.

This reference point will be needed during adjustment.

- b. Loosen the locknuts (tie-rod end) ① of both tie-rods.
- c. The same number of turns should be given to both the right and left tie-rods ② until the specified toe-in is obtained. This is to keep the length of the rods the same.
- d. Tighten the rod end locknuts of both tierods.



Locknut (rod end) 15 Nm (1.5 m · kg, 11 ft · lb)

NOTE:

Adjust the rod ends so that A and B are equal.

EBS00109

CHECKING THE FRONT AND REAR SHOCK ABSORBERS

- 1. Place the machine on a level surface.
- 2. Check:
- damper rod ①

Bends/damage \rightarrow Replace the front/rear shock absorber assembly.

oil leakage

Excessive oil leakage \rightarrow Replace the front/rear shock absorber assembly.

- gas cylinder
 - Damage/gas leaks \rightarrow the front/rear shock absorber assembly.
- spring

Fatigue \rightarrow the front/rear shock absorber assembly.

Refer to "FRONT ARMS AND FRONT SHOCK ABSORBER ASSEMBLIES" and "REAR SHOCK ABSORBER AND RELAY ARM" in chapter 7.

- 3. Check:
- operation

Pump the shock absorbers up and down for several times.

Unsmooth operation → Replace the front/rear shock absorber assembly.

Refer to "ADJUSTING THE FRONT SHOCK ABSORBERS" and "ADJUSTING THE REAR SHOCK ABSORBER".

- A Front shock absorber
- B Rear shock absorber

ADJUSTING THE FRONT SHOCK ABSORBERS



EBS00111


ADJUSTING THE FRONT SHOCK ABSORBERS

WARNING

Always adjust the spring preload, rebound damping force and compression damping force of both front shock absorbers to the same setting. Uneven adjustment can result in poor handling and loss of stability.



spring preload



- b. Loosen the locknut (1).
- c. Turn the adjusting ring ② in direction ③ or ⑤.


Direction ⓐ	Spring preload is increased (suspension is harder).
Direction (b)	Spring preload is decreased (suspension is softer).

Adjusting length ©

Standard: 255 mm (10.04 in) Minimum: 245 mm (9.65 in) Maximum: 256.5 mm (10.10 in)

NOTE: _

- Be sure to remove all dirt and mud from around the locknut and adjusting ring before adjustment.
- The length of the spring (installed) changes 1.5 mm (0.06 in) per turn of the adjuster.

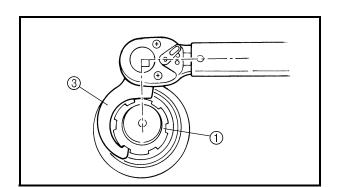

CAUTION:

Never attempt to turn the adjusting ring beyond the maximum or minimum setting.

d. Tighten the locknut ① with a steering nut wrench ③.

N.	re.
IV	

Set the torque wrench at a right angle to the steering nut wrench.

ADJUSTING THE FRONT SHOCK ABSORBERS






Steering nut wrench P/N. YU-33975, 90890-01443



Locknut 30 Nm (3.0 m · kg, 22 ft · lb)

NOTE: .

Always tighten the locknut against the adjusting ring, then torque it to specification.

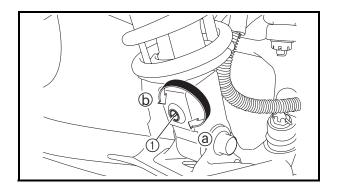

2. Adjust:

• rebound damping force

a. Turn the adjusting screw ① in direction ② or ⑥.

Direction ⓐ	Rebound damping force is increased.			
Direction (b)	Rebound damping force is decreased.			

From the fully turned-in position


Standard: 12 clicks out Minimum: 22 clicks out Maximum: 1 click out

CA	ш	Т	ľ	n	N	н
CA	u	ш	ш	J		

Do not force the adjuster past the minimum or maximum extent of adjustment. The adjuster may be damaged.

ADJUSTING THE FRONT SHOCK ABSORBERS/ ADJUSTING THE REAR SHOCK ABSORBER



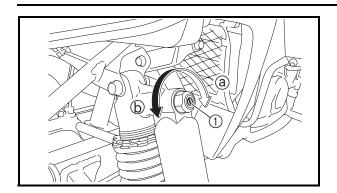

3. Adjust:

• compression damping force

a. Turn the adjusting screw ① in direction ② or ⑤.

Direction (a)	Compression damping force is increased.		
Direction (b)	Compression damping force is decreased.		

From the fully turned-in position

Standard: 11 clicks out Minimum: 22 clicks out Maximum: 1 click out

C	A	п	匤	Ŧ		П	
	/\						ш
v	_	v	,		•	46	


Do not force the adjuster past the minimum or maximum extent of adjustment. The adjuster may be damaged.

EBS0011

ADJUSTING THE REAR SHOCK ABSORBER

- 1. Remove:
- seat


Refer to "SEAT, FENDERS AND FUEL TANK".

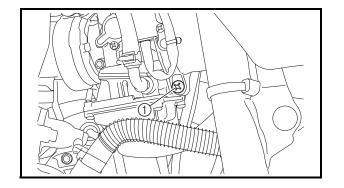


2. Loosen the clamp screw ①, and then disconnect the air intake duct.

ADJUSTING THE REAR SHOCK ABSORBER



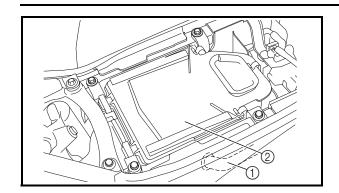


3. Disconnect the air filter case breather hose ①, and then remove the air filter case ② with the air intake duct.

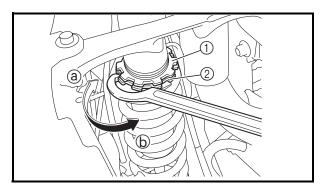


4. Adjust:

spring preload



b. Loosen the locknut 1.

c. Turn the adjusting ring ② in direction ③ or ⑤.

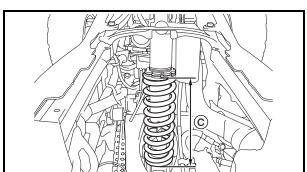

Direction ⓐ	Spring preload is increased (suspension is harder).
Direction (b)	Spring preload is decreased (suspension is softer).

Adjusting length ©

Standard: 244 mm (9.61 in) Minimum: 237 mm (9.33 in) Maximum: 251 mm (9.88 in)

NOTE: _

- Be sure to remove all dirt and mud from around the locknut and adjusting ring before adjustment.
- The length of the spring (installed) changes 1.5 mm (0.06 in) per turn of the adjuster.

3	

CAUTION:

Never attempt to turn the adjusting ring beyond the maximum or minimum setting.

d. Tighten the locknut ① with a steering nut wrench ③.

Ν	O	Т	E:
---	---	---	----

Set the torque wrench at a right angle to the steering nut wrench.

ADJUSTING THE REAR SHOCK ABSORBER






Steering nut wrench P/N. YU-33975, 90890-01443



Locknut 45 Nm (4.5 m · kg, 32 ft · lb)

NOTE:

Always tighten the locknut against the adjusting ring, then torque it to specification.

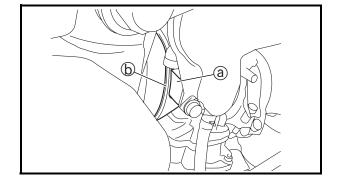


5. Install:

· air filter case with air intake duct

NOTE: _

Align the projection ⓐ on the carburetor with the slot ⓑ in the air intake duct.

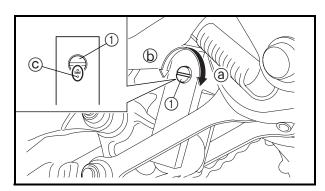

6. Adjust:

rebound damping force

a. Turn the adjusting screw ① in direction ② or ⑤.

Direction (a)	Rebound damping force is increased.
Direction (b)	Rebound damping force is decreased.

Minimum (soft): Adjusting screw fully turned out

Standard: Adjusting screw 1 3/4 turns out from the fully turned in position Maximum (hard): Adjusting screw fully

turned in

Ν	റ	т	F.	
14	v			


Make sure that the position indicator marks © are aligned when the shock absorber is set to the standard setting.

C	ΛI	П	П	<u> </u>	N	
	-	▝		•	11	

Do not force the adjuster past the minimum or maximum extent of adjustment. The adjuster may be damaged.

ADJUSTING THE REAR SHOCK ABSORBER



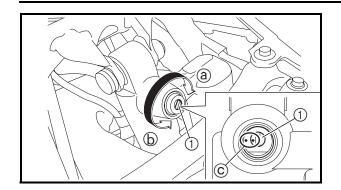

- 7. Adjust:
- compression damping force

a. Turn the adjusting screw ① in direction ② or ⑤.

Direction (a)	Compression damping force is increased.
Direction (b)	Compression damping force is decreased.

Minimum (soft): Adjusting screw fully turned out

Standard: Adjusting screw 1 3/4 turns out from the fully turned in position Maximum (hard): Adjusting screw fully

turned in

N	\cap	ΓΕ:	
	\mathbf{U}		

Make sure that the position indicator marks © are aligned when the shock absorber is set to the standard setting.

CAUTION:

Do not force the adjuster past the minimum or maximum extent of adjustment. The adjuster may be damaged.

- 8. Install:
- seat
 Refer to "SEAT, FENDERS AND FUEL TANK".

CHECKING THE TIRES



EBS00114

CHECKING THE TIRES

WARNING

This model is equipped with low pressure tires. It is important that they be inflated correctly and maintained at the proper pressures.

- TIRE CHARACTERISTICS
- Tire characteristics influence the handling of ATVs. The tires listed below have been approved by Yamaha Motor Co., Ltd. for this model. If other tire combinations are used, they can adversely affect your machine's handling characteristics and are therefore not recommended.

	Manufacturer	Size	Туре
Front	DUNLOP	AT21 × 7-10	KT331A Radial
Rear	DUNLOP	AT20 × 10-9	KT355 Radial

- TIRE PRESSURE
- 1) Recommended tire pressure Front 30 kPa (0.30 kg/cm², 4.4 psi) Rear 35 kPa (0.35 kg/cm², 5.0 psi)
- Tire pressure below the minimum specification could cause the tire to dislodge from the rim under severe riding conditions.

The following are minimums: Front 27 kPa (0.27 kg/cm², 3.9 psi) Rear 32 kPa (0.32 kg/cm², 4.5 psi)


- 3) Use no more than
 Front 250 kPa (2.5 kg/cm², 36 psi)
 Rear 250 kPa (2.5 kg/cm², 36 psi)
 when seating the tire beads. Higher
 pressures may cause the tire to burst.
 Inflate the tires slowly and carefully.
 Fast inflation could cause the tire to
 burst.
- MAXIMUM LOADING LIMIT
- 1) Vehicle load limits: 100 kg (220 lb)

 *Total weight of the cargo, rider, and accessories.

Be extra careful of the machine balance and stability when towing a trailer.

CHECKING THE TIRES



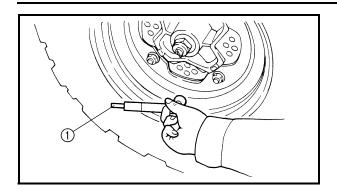

- 1. Measure:
- tire pressure
 Out of specification → Adjust.

NOTF:

- The low-pressure tire gauge ① is included as standard equipment.
- If dust or the like is stuck to this gauge, it will not provide the correct readings. Therefore, take two measurements of the tire's pressure and use the second reading.

Cold tire pressure	Front	Rear
Standard	30 kPa (0.30 kg/cm², 4.4 psi)	35 kPa (0.35 kg/cm², 5.0 psi)
Minimum	27 kPa (0.27 kg/cm², 3.9 psi)	32 kPa (0.32 kg/cm², 4.5 psi)
Maximum	33 kPa (0.33 kg/cm², 4.7 psi)	38 kPa (0.38 kg/cm², 5.4 psi)

WARNING

Uneven or improper tire pressure may adversely affect the handling of this machine and may cause loss of control.

- Maintain proper tire pressures.
- Set tire pressures when the tires are cold.
- Tire pressures must be equal in both front tires and equal in both rear tires.



• tire surfaces $Wear/damage \rightarrow Replace.$




Tire wear limit @

Front and rear: 3.0 mm (0.12 in)


WARNING

It is dangerous to ride with a worn-out tire. When tire wear is out of specification, replace the tire immediately.

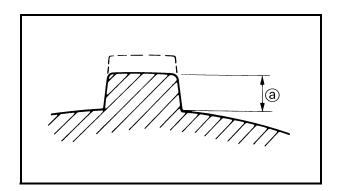

CHECKING THE WHEELS/CHECKING AND LUBRICATING THE CABLES



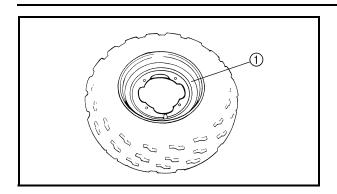

EBS00116

CHECKING THE WHEELS

- 1. Check:
- wheel ①
 Damage/bends → Replace.

NOTF:

Always balance the wheel when a tire or wheel has been changed or replaced.

WARNING

- Never attempt even small repairs to the wheel.
- Ride conservatively after installing a tire to allow it to seat itself properly on the rim.

EBS00117

CHECKING AND LUBRICATING THE CABLES

⚠ WARNING

A damaged cable sheath may cause corrosion and interfere with the cable movement. An unsafe condition may result so replace a damaged cable as soon as possible.

- 1. Check:
- cable sheath
 Damage → Replace.
- 2. Check:
- cable operation
 Unsmooth operation → Lubricate or replace.



Recommended lubricant
Yamaha chain and cable lube or
engine oil

NOTE:

Hold the cable end up and apply several drops of lubricant to the cable.

- 3. Apply:
- Lithium-soap-based grease (onto end of the cable)

LUBRICATING THE LEVERS AND PEDALS



EBS00118


LUBRICATING THE LEVERS AND PEDALS

Lubricate the pivoting point and metal-to-metal moving parts of the levers and pedals.



Recommended lubricant Lithium-soap-based grease



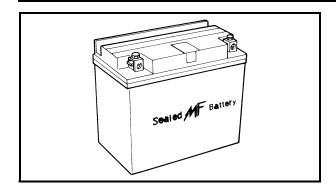

BS00120

ELECTRICAL SYSTEM CHECKING AND CHARGING THE BATTERY

WARNING

Batteries generate explosive hydrogen gas and contain electrolyte which is made of poisonous and highly caustic sulfuric acid. Therefore, always follow these preventive measures:

- Wear protective eye gear when handling or working near batteries.
- Charge batteries in a well-ventilated area.
- Keep batteries away from fire, sparks or open flames (e.g., welding equipment, lighted cigarettes).
- DO NOT SMOKE when charging or handling batteries.
- KEEP BATTERIES AND ELECTROLYTE OUT OF REACH OF CHILDREN.
- Avoid bodily contact with electrolyte as it can cause severe burns or permanent eye injury.

FIRST AID IN CASE OF BODILY CONTACT: EXTERNAL

- Skin Wash with water.
- Eyes Flush with water for 15 minutes and get immediate medical attention.

INTERNAL

 Drink large quantities of water or milk followed with milk of magnesia, beaten egg or vegetable oil. Get immediate medical attention.

CAUTION:


- This is a sealed battery. Never remove the sealing caps because the balance between cells will not be maintained and battery performance will deteriorate.
- Charging time, charging amperage and charging voltage for an MF battery are different from those of conventional batteries. The MF battery should be charged as explained in the charging method illustrations. If the battery is overcharged, the electrolyte level will drop considerably. Therefore, take special care when charging the battery.




NOTE: _

Since MF batteries are sealed, it is not possible to check the charge state of the battery by measuring the specific gravity of the electrolyte. Therefore, the charge of the battery has to be checked by measuring the voltage at the battery terminals.

- 1. Remove:
- seat
 Refer to "SEAT, FENDERS AND FUEL TANK".

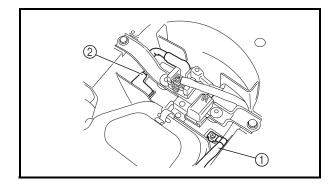

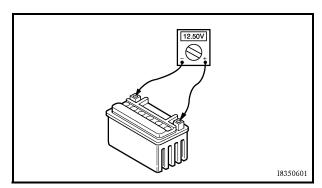

Relationship between the open-circuit voltage and the charging time at 20 °C (68 °F)

12.5

12.5

12.6

5 6.5

Charging time (hours)

These values vary with the temperature, the condition of the battery plates, and the electrolyte level.

- 2. Disconnect:
- battery leads (from the battery terminals)

CAUTION:

First, disconnect the negative battery lead ①, and then the positive battery lead ②.

- 3. Remove:
- battery holding bracket
 Refer to "SEAT, FENDERS AND FUEL TANK".
- 4. Remove:
- battery
- 5. Check:
- battery charge
- a. Connect a pocket tester to the battery terminals.





NOTE: _

- The charge state of an MF battery can be checked by measuring its open-circuit voltage (i.e., the voltage when the positive terminal is disconnected).
- No charging is necessary when the open-circuit voltage equals or exceeds 12.8 V.
- b. Check the charge of the battery, as shown in the charts and the following example.

Example

- c. Open-circuit voltage = 12.0 V
- d. Charging time = 6.5 hours
- e. Charge of the battery = 20 ~ 30%

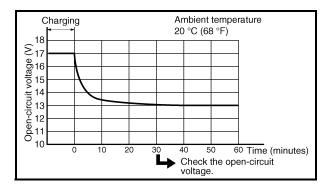

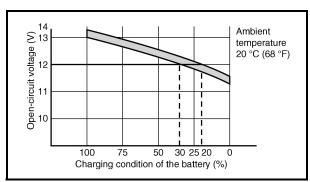

6. Charge:

 battery (refer to the appropriate charging method illustration)

WARNING

Do not quick charge a battery.

CAUTION:


- Never remove the MF battery sealing caps.
- Do not use a high-rate battery charger since it forces a high-amperage current into the battery quickly and can cause battery overheating and battery plate damage.
- If it is impossible to regulate the charging current on the battery charger, be careful not to overcharge the battery.
- When charging a battery, be sure to remove it from the machine. (If charging has to be done with the battery mounted on the machine, disconnect the negative battery lead from the battery terminal.)
- To reduce the chance of sparks, do not plug in the battery charger until the battery charger leads are connected to the battery.



- Before removing the battery charger lead clips from the battery terminals, be sure to turn off the battery charger.
- Make sure the battery charger lead clips are in full contact with the battery terminal and that they are not shorted. A corroded battery charger lead clip may generate heat in the contact area and a weak clip spring may cause sparks.
- If the battery becomes hot to the touch at any time during the charging process, disconnect the battery charger and let the battery cool before reconnecting it. Hot batteries can explode!
- As shown in the following illustration, the open-circuit voltage of an MF battery stabilizes about 30 minutes after charging has been completed. Therefore, wait 30 minutes after charging is completed before measuring the open-circuit voltage.




Charging method using a variable-current (voltage) charger

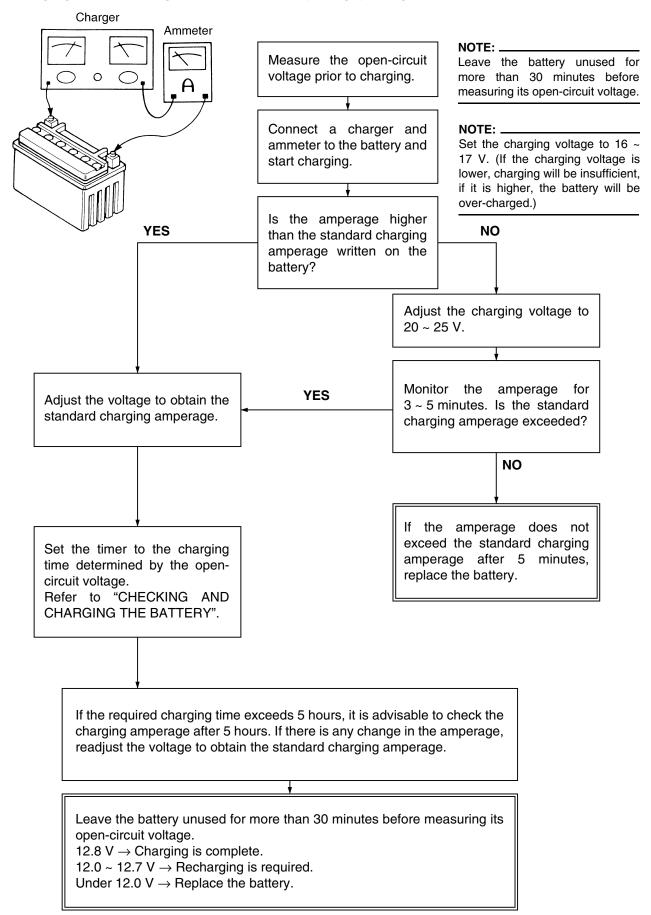




Charging method using a constant voltage charger

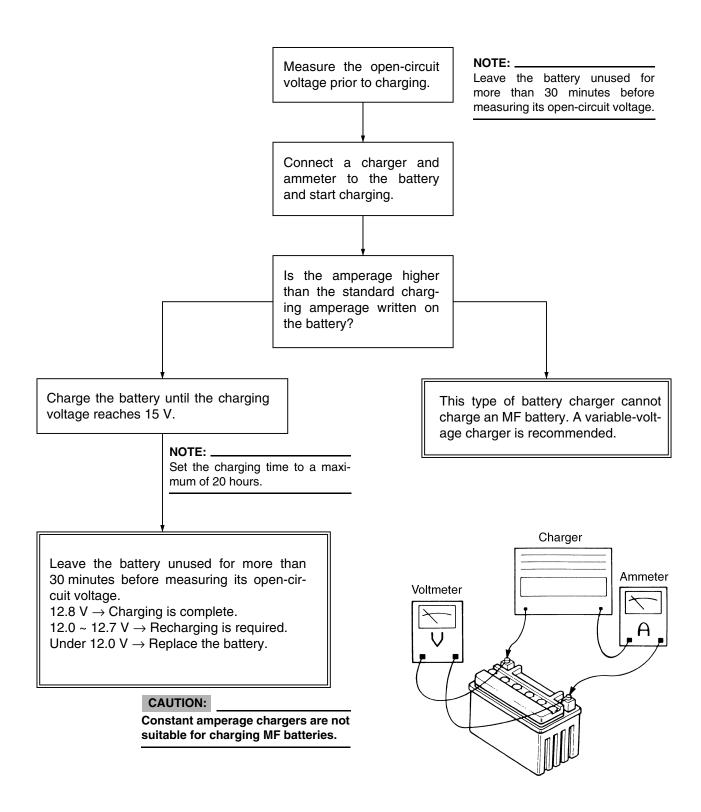



- 7. Install:
- battery
- 8. Install:
- battery holding bracket Refer to "SEAT, FENDERS AND FUEL TANK".

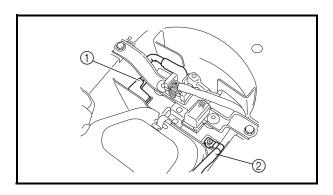

9. Connect:

 battery leads (to the battery terminals)

CAUTION:

First, connect the positive battery lead ①, and then the negative battery lead ②.

10.Check:

battery terminals
 Dirt → Clean with a wire brush.
 Loose connection → Connect properly.

11.Lubricate:

• battery terminals



Recommended lubricant Dielectric grease

12.Install:

 seat
 Refer to "SEAT, FENDERS AND FUEL TANK".

CHECKING THE FUSES



EBS0012

CHECKING THE FUSES


The following procedure applies to all of the fuses.


CAUTION:

To avoid a short circuit, always set the main switch to "OFF" when checking or replacing a fuse.

- 1. Remove:
- seat

Refer to "SEAT, FENDERS AND FUEL TANK".

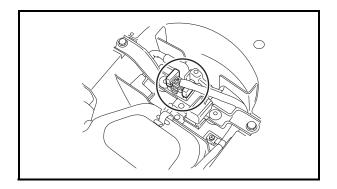

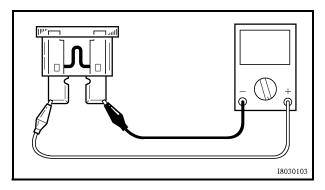

- 2. Check:
- fuse

a. Connect the pocket tester to the fuse and check the continuity.

NOTE:

Set the pocket tester selector to " $\Omega \times 1$ ".



Pocket tester P/N. YU-03112-C, 90890-03112

b. If the pocket tester indicates "∞", replace the fuse.

- 3. Replace:
- blown fuse
- a. Set the main switch to "OFF".
- b. Install a new fuse of the correct amperage.
- c. Set on the switches to verify if the electrical circuit is operational.
- d. If the fuse immediately blows again, check the electrical circuit.

CHECKING THE FUSES/ ADJUSTING THE HEADLIGHT BEAM




Items	Amperage rating	Q'ty
Main	15 A	1
Reserve	15 A	1

WARNING

Never use a fuse with an amperage rating other than that specified. Improvising or using a fuse with the wrong amperage rating may cause extensive damage to the electrical system, cause the lighting and ignition systems to malfunction and could possibly cause a fire.

- 4. Install:
- seat
 Refer to "SEAT, FENDERS AND FUEL TANK".

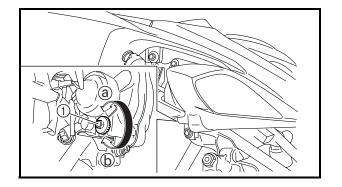

EBS00122

ADJUSTING THE HEADLIGHT BEAM

- 1. Adjust:
- headlight beam (vertically)

a. Turn the adjusting bolt ① in direction ② or ⑤.

Direction (a)	Headlight beam is raised.
Direction (b)	Headlight beam is lowered.


REPLACING A HEADLIGHT BULB




EBS00124

REPLACING A HEADLIGHT BULB

- 1. Remove:
- headlight Refer to "SEAT, FENDERS AND FUEL TANK".

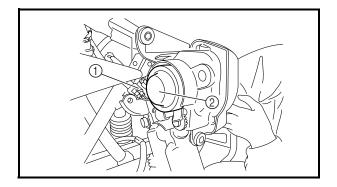

- 2. Disconnect:
- headlight lead coupler ①
- 3. Remove:
- headlight bulb holder cover ②

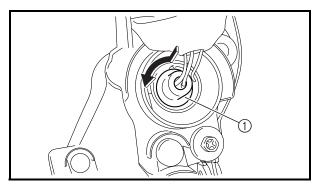

- 4. Remove:
- bulb holder (1)
- bulb

Push the headlight bulb holder inward, turn it counterclockwise and remove the defective bulb.

WARNING

Keep flammable products and your hands away from the bulb while it is on. since it will be hot. Do not touch the bulb until it cools down.

- 5. Install:
- bulb New


Secure the new bulb with the headlight unit.

CAUTION:

Avoid touching the glass part of the bulb. Keep it free from oil; otherwise, the transparency of the glass, life of the bulb, and luminous flux will be adversely affected. If oil gets on the bulb, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.

REPLACING A HEADLIGHT BULB



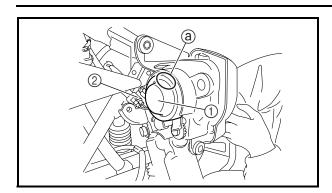

6. Install:

- bulb holder
- headlight bulb holder cover ①

NOTE: _


After installing the bulb holder cover, make sure that the "TOP" mark (a) is in the position shown.

- 7. Connect:
- headlight lead coupler ②
- 8. Install:
- headlight Refer to "SEAT, FENDERS AND FUEL TANK".

ENGINE

ENGINE REMOVAL

MUFFLER AND EXHAUST PIPE

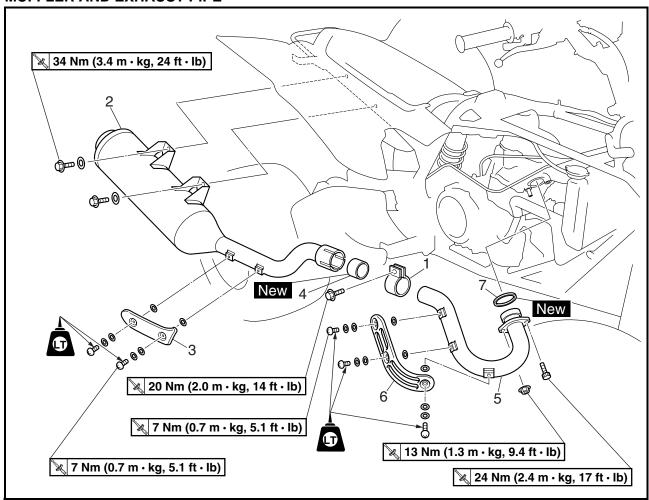


Order	Job/Part	Q'ty	Remarks
	Removing the muffler and exhaust		Remove the parts in the order listed.
	pipe		
	Seat/fuel tank cover/side covers (left		
	and right)		Refer to "SEAT, FENDERS AND FUEL
	Fuel tank		TANK" in chapter 3.
	Right foot protector/engine skid plate		
1	Clamp	1	Loosen.
2	Muffler	1	Defende MINIOTALLING
3	Muffler protector	1	Refer to "INSTALLING THE EXHAUST PIPE
4	Gasket	1	THE EXHAUST PIPE AND MUFFLER".
5	Exhaust pipe	1	AND MOLLETT.
6	Exhaust pipe protector	1	_
7	Gasket	1	
			For installation, reverse the removal pro-
			cedure.

ENGINE REMOVAL





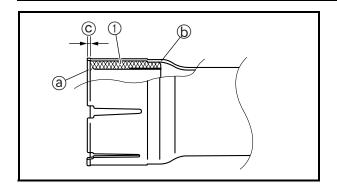

INSTALLING THE EXHAUST PIPE AND MUFFLER


- 1. Install:
- gasket ① New (to muffler)


NOTE: .

Install the gasket with the chamfer (a), located on an inner rim of the gasket, and the chamfer (b), located on an outer rim of the gasket, as shown.



Installed depth of gasket © 1 ~ 1.5 mm (0.04 ~ 0.06 in)

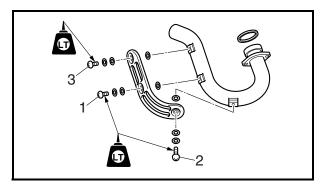

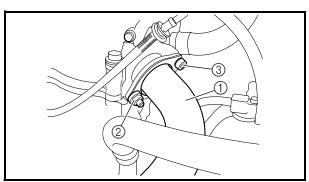

2. Install:

- exhaust pipe protector
- exhaust pipe protector screws



Screw

7 Nm (0.7 m \cdot kg, 5.1 ft \cdot lb) **LOCTITE®**

NOTE: _

Tighten the screws to the specified torque in the proper tightening sequence as shown.

- 3. Install:
- exhaust pipe 1
- nut (exhaust pipe) ②

№ 13 Nm (1.3 m · kg, 9.4 ft · lb)

• bolt (exhaust pipe) ③

≥ 24 Nm (2.4 m · kg, 17 ft · lb)


NOTE: _

First, temporarily tighten the nut (exhaust pipe), then tighten the bolt (exhaust pipe) 20 Nm $(2.0 \text{ m} \cdot \text{kg}, 14 \text{ ft} \cdot \text{lb})$. After that, retighten the nut (exhaust pipe) 13 Nm (1.3 m · kg, 9.4 ft · lb) and then the bolt (exhaust pipe) 24 Nm (2.4 m · kg, 17 ft ⋅ lb).

ENGINE REMOVAL





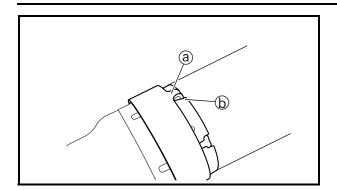

- 4. Install:
- clamp


NOTE: _

Slide the clamp onto the end of the muffler and insert the projection ⓐ of the clamp into a slot ⓑ in the muffler. Tighten the clamp after installing the muffler.




EBS00204

LEADS, CABLES AND HOSES

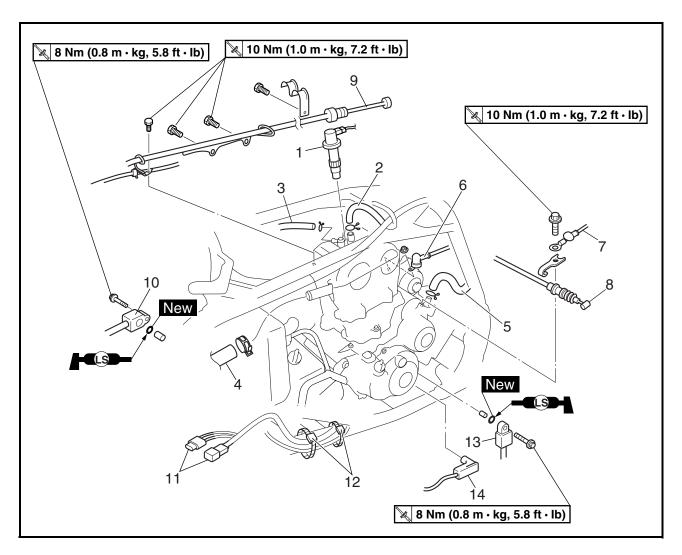

Order	Job/Part	Q'ty	Remarks
	Removing the leads, cables and		Remove the parts in the order listed.
	hoses		
	Engine oil		Drain.
	Coolant		Drain.
	Radiator outlet hose/water pump inlet		Refer to "WATER PUMP" in chapter 5.
	pipe		
	Carburetor		Refer to "CARBURETOR" in chapter 6.
	Drive sprocket/drive chain		Refer to "SWINGARM AND DRIVE
			CHAIN" in chapter 7.
1	Ignition coil	1	
2	Cylinder head breather hose	1	
3	Oil tank breather hose	1	
4	Radiator inlet hose	1	
5	Crankcase breather hose	1	

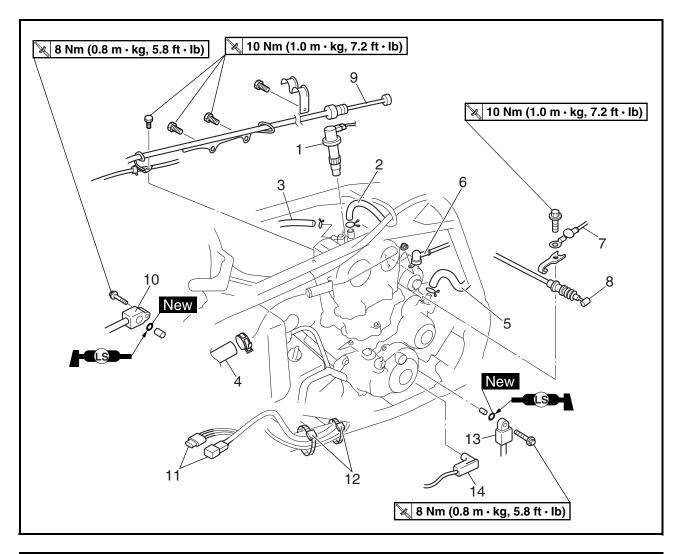


Order	Job/Part	Q'ty	Remarks
6	Starter motor lead	1	Disconnect.
7	Battery negative lead	1	Disconnect.
8	Clutch cable	1	
9	Parking brake cable	1	
10	Oil pipe 1	1	
11	A.C. magneto coupler	2	Disconnect.
12	Plastic band	2	
13	Oil pipe 2	1	
14	Neutral switch lead	1	Disconnect.
			For installation, reverse the removal pro-
			cedure.




EBS00205

ENGINE MOUNTING BOLTS

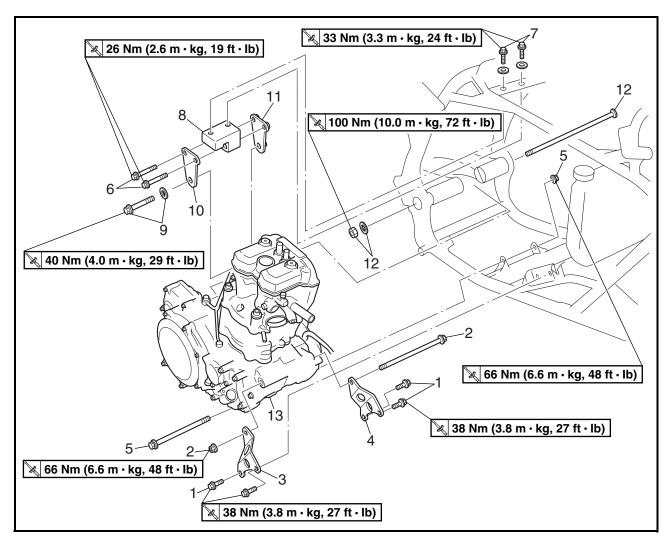


Order	Job/Part	Q'ty	Remarks
	Removing the engine mounting		Remove the parts in the order listed.
	bolts		
1	Engine lower bracket bolt	4	
2	Engine mounting bolt (middle)/nut	1/1	
3	Engine lower bracket (right)	1	CAUTION: Install all of the bolts/nuts and then tighten them to full torque specifications.
4	Engine lower bracket (left)	1	
5	Engine mounting bolt (lower)/nut	1/1	
6	Engine upper bracket bolt	2	
7	Engine stay bolt/washer	2/2	
8	Engine stay	1	
9	Engine mounting bolt (upper)/washer	1/1	
10	Engine upper bracket (right)	1	
11	Engine upper bracket (left)	1	
12	Pivot shaft/nut/washer	1/1/1	<u> </u>

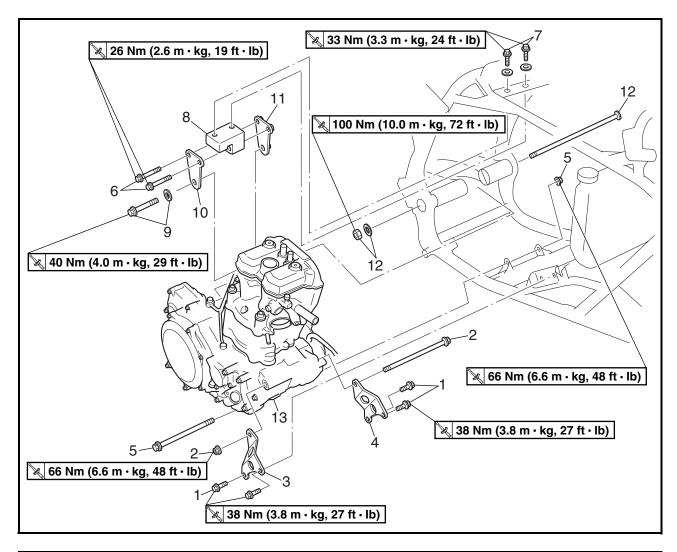

Order	Job/Part	Q'ty	Remarks
13	Engine assembly	1	NOTE:
			For installation, reverse the removal procedure.

ENGINE REMOVAL



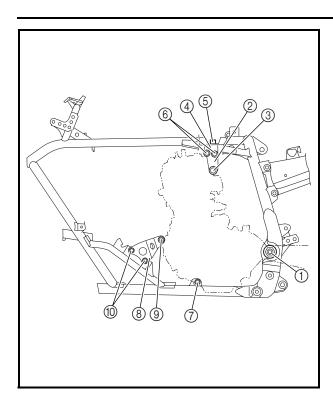

EBS00206

INSTALLING THE ENGINE

- 1. Install:
- pivot shaft/nut/washer ①
- engine upper bracket (left) ②
- engine upper bracket (right)
- engine mounting bolt (upper) ③
- engine stay 4
- engine stay bolts/washers ⑤
- engine upper bracket bolts (6)
- engine mounting bolt (lower)/nut ⑦
- engine lower bracket (left) (8)
- engine lower bracket (right)
- engine mounting bolt (middle)/nut (9)
- engine lower bracket bolts 100

NOTE:

Do not fully tighten the bolts and nuts.

- 2. Tighten:
- pivot shaft/nut (1)

> 100 Nm (10.0 m ⋅ kg, 72 ft ⋅ lb)

• engine mounting bolt (upper) ③

🔌 40 Nm (4.0 m · kg, 29 ft · lb)

• engine stay bolts ⑤

33 Nm (3.3 m ⋅ kg, 24 ft ⋅ lb)

• engine upper bracket bolts (6)

≥ 26 Nm (2.6 m · kg, 19 ft · lb)

• engine mounting bolt (lower)/nut ⑦

№ 66 Nm (6.6 m · kg, 48 ft · lb)

• engine mounting bolt (middle)/nut (9)

№ 66 Nm (6.6 m · kg, 48 ft · lb)

• engine lower bracket bolts 10


38 Nm (3.8 m ⋅ kg, 27 ft ⋅ lb)




EBS00208

CAMSHAFTS

CYLINDER HEAD COVER

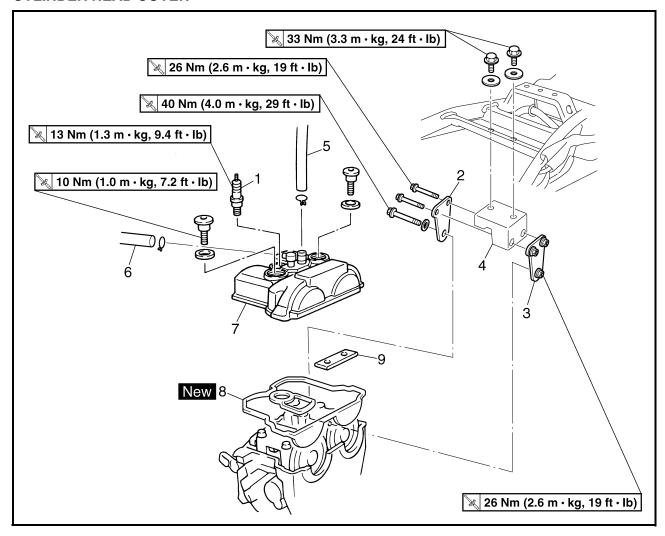



Order	Job/Part	Q'ty	Remarks
	Removing the cylinder head cover		Remove the parts in the order listed.
	Seat/fuel tank cover/side covers (left		Refer to "SEAT, FENDERS AND FUEL
	and right)		TANK" in chapter 3.
1	Spark plug	1	
2	Engine upper bracket (right)	1	
3	Engine upper bracket (left)	1	
4	Engine stay	1	
5	Cylinder head breather hose	1	
6	Oil tank breather hose	1	
7	Cylinder head cover	1	
8	Cylinder head cover gasket	1	
9	Timing chain guide (top side)	1	
			For installation, reverse the removal pro-
			cedure.

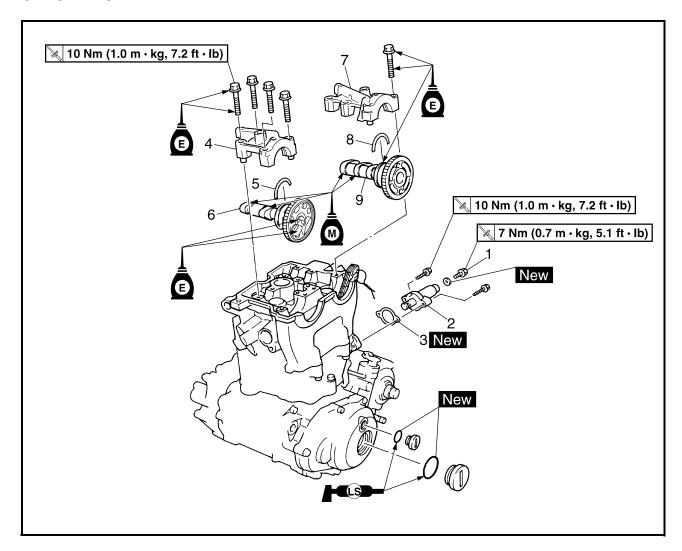



Order	Job/Part	Q'ty	Remarks
	Removing the camshafts		Remove the parts in the order listed.
1	Tensioner cap bolt	1	h
2	Timing chain tensioner	1	
3	Gasket	1	
4	Exhaust camshaft cap	1	Refer to "REMOVING THE CAM-
5	Clip	1	SHAFTS" and "INSTALLING THE CAM-
6	Exhaust camshaft	1	SHAFTS".
7	Intake camshaft cap	1	
8	Clip	1	
9	Intake camshaft	1	<u> </u>
			For installation, reverse the removal pro-
			cedure.




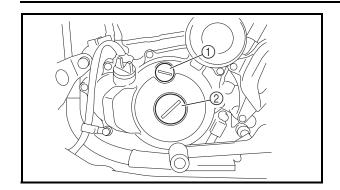

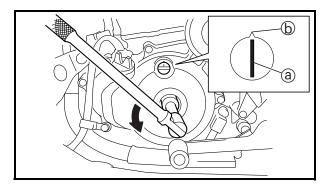

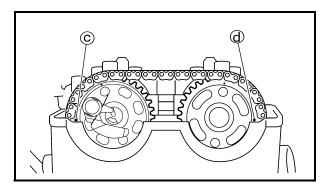

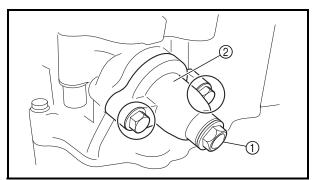

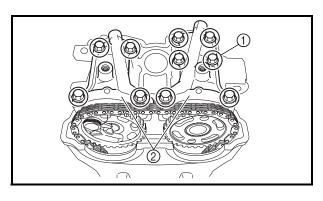

REMOVING THE CAMSHAFTS

- 1. Remove:
- timing mark accessing screw (1)
- crankshaft end accessing screw 2
- 2. Align:
- "I" mark on the A.C. magneto rotor (with stationary pointer on the A.C. magneto cover)

- a. Turn the crankshaft counterclockwise.
- b. When the piston is at the Top Dead Center (TDC) on the compression stroke, align the "I" mark (a) on the A.C. magneto rotor with the stationary pointer (b) on the A.C. magneto cover.

NOTE: .

- In order to be sure that the piston is at the Top Dead Center (TDC), the punch mark © on the exhaust camshaft sprocket and the punch mark @ on the intake camshaft sprocket must align with the cylinder head mating surface, as shown in the illustration.
- The Top Dead Center (TDC) on the compression stroke can be found when the camshaft lobes are turned away from each other.

3. Loosen:

- tensioner cap bolt ①
- 4. Remove:
- timing chain tensioner ②
- 5. Remove:
 - camshaft cap bolts ①
 - camshaft caps ②

NOTE:


Remove the camshaft cap bolts in a crisscross pattern, working from the outside in.

CAUTION:

To prevent damage to the cylinder head, camshafts or camshaft caps, loosen the camshaft cap bolts in stages and in a criss-cross pattern, working from the outside in.





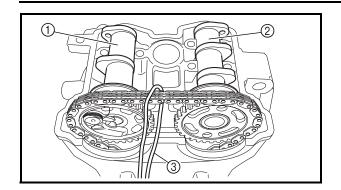


6. Remove:

- exhaust camshaft (1)
- intake camshaft ②
- clips


NOTE: .

To prevent the timing chain from falling into the crankcase, fasten it with a wire ③.

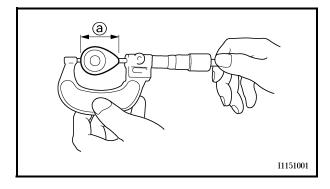

CHECKING THE CAMSHAFTS

- 1. Check:
- camshaft lobes
 Pitting/scratches/blue discoloration →
 Replace the camshaft.
- 2. Measure:
- camshaft lobe dimensions ⓐ and ⓑ
 Out of specification → Replace the camshaft.

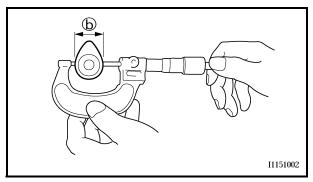




Camshaft lobe dimensions Intake

- (a) 31.200 ~ 31.300 mm (1.2283 ~ 1.2323 in) <Limit>: 31.100 mm (1.2244 in)
- (0.8878 ~ 0.8917 in) <Limit>: 22.450 mm (0.8839 in)

Exhaust

- (a) 30.950 ~ 31.050 mm (1.2185 ~ 1.2224 in) <Limit>: 30.850 mm (1.2146 in)
- (0.8856 ~ 0.8895 in) <Limit>: 22.394 mm (0.8817 in)

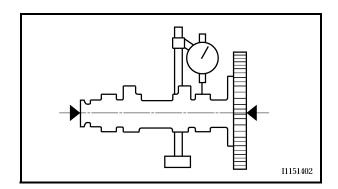

3. Measure:

camshaft runout
 Out of specification → Replace.



Camshaft runout limit 0.03 mm (0.0012 in)




- 4. Measure:
- camshaft-journal-to-camshaft-cap clearance
 Out of specification → Measure the camshaft journal diameter.




Camshaft-journal-to-camshaft-cap clearance

0.020 ~ 0.054 mm (0.0008 ~ 0.0021 in)

<Limit>: 0.080 mm (0.0032 in)

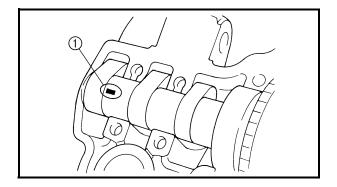




- b. Position a strip of Plastigauge® ① onto the camshaft journal as shown.
- c. Install the circlip and camshaft caps.




- Tighten the camshaft cap bolts in stages and in a crisscross pattern, working from the inner caps out.
- Do not turn the camshaft when measuring the camshaft-journal-to-camshaft-cap clearance with the Plastigauge[®].

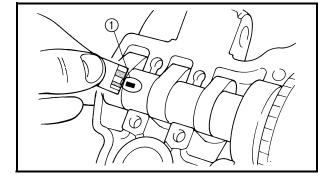



Camshaft cap bolt 10 Nm (1.0 m · kg, 7.2 ft · lb)

d. Remove the camshaft caps and then measure the width of the Plastigauge® (1).

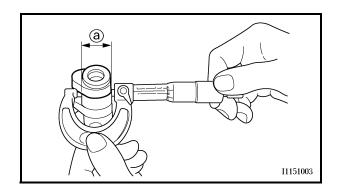


- 5. Measure:
- camshaft journal diameter @


Out of specification \rightarrow Replace the camshaft.

Within specification \rightarrow Replace the cylinder head and camshaft caps as a set.



Camshaft journal diameter 21.967 ~ 21.980 mm (0.8648 ~ 0.8654 in)

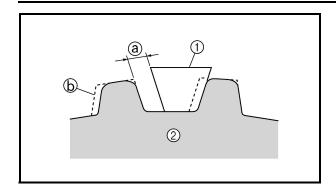

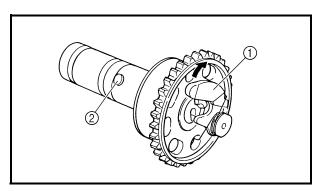

FBS0022

CHECKING THE CAMSHAFT SPROCKETS

- 1. Check:
- camshaft sprockets
 Wear/damage → Replace the camshaft sprockets and timing chain as a set.
- a 1/4 of a tooth
- **(b)** Correct
- 1) Roller
- ② Sprocket

EBS00225


CHECKING THE DECOMPRESSION SYSTEM


- 1. Check:
- decompression system
- a. Check that the decompressor lever pin ① projects from the camshaft.
- b. Check that the decompressor cam ② moves smoothly.


EBS00226


CHECKING THE TIMING CHAIN GUIDE


- 1. Check:
- timing chain guide (top side)
 Wear/damage → Replace.

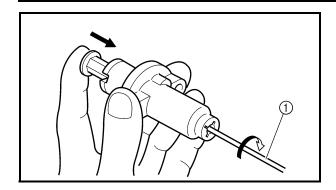

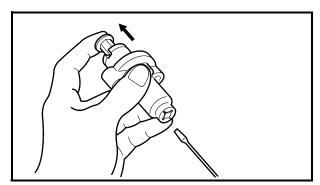

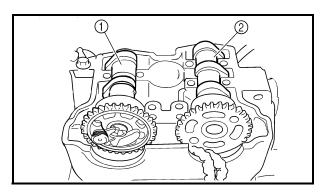

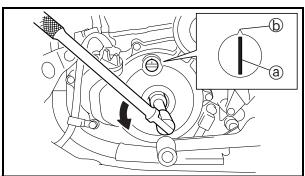

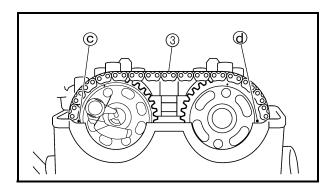

CHECKING THE TIMING CHAIN **TENSIONER**

- 1. Check:
- chain tensioner rod Damage/wear \rightarrow Replace.
- 2. Check:
- timing chain tensioner play

- a. While pressing the tensioner rod lightly with fingers, use a thin screwdriver (1) and wind the tensioner rod up fully clockwise.
- b. When releasing the screwdriver by pressing lightly with fingers, make sure that the tensioner rod will come out smoothly.
- c. If not, replace the tensioner assembly.

INSTALLING THE CAMSHAFTS

- 1. Install:
- exhaust camshaft (1)
- intake camshaft ②

- a. Turn the crankshaft counterclockwise until the "I" mark (a) on the rotor is aligned with the stationary pointer (b) on the A.C. magneto cover.
- b. Fit the timing chain 3 onto both camshaft sprockets and install the camshafts on the cylinder head.

NOTE:


The camshafts should be installed onto the cylinder head so that the exhaust camshaft sprocket punch mark © and the intake camshaft sprocket punch mark @ align with the mating surface of the cylinder head.

CAUTION:

Do not turn the crankshaft during the camshaft installation. Damage or improper valve timing will result.





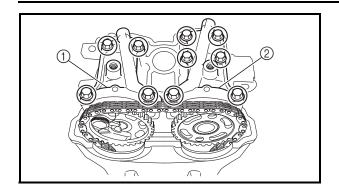

- 2. Install:
- clips
- intake camshaft cap (1)
- exhaust camshaft cap ②
- · camshaft cap bolts


№ 10 Nm (1.0 m · kg, 7.2 ft · lb)


NOTE: _

Tighten the camshaft cap bolts in stages and in a crisscross pattern, working from the inner caps out.

CAUTION:

The camshaft cap bolts must be tightened evenly or damage to the cylinder head, camshaft caps, and camshafts will result.

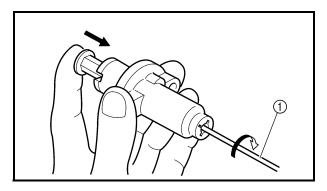

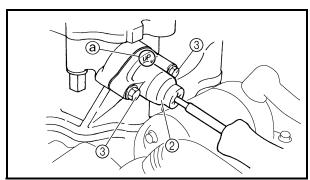

- 3. Install:
- timing chain tensioner
- a. While lightly pressing the timing chain tensioner rod by hand, turn the tensioner rod fully clockwise with a thin screwdriver ①.
- b. With the timing chain tensioner rod turned all the way into the timing chain tensioner housing (with the thin screwdriver still installed), install the gasket and the timing chain tensioner ② onto the cylinder block.

NOTE:

The "UP" mark (a) on the timing chain tensioner should face UP.

M WARNING

Always use a new gasket.

c. Tighten the timing chain tensioner bolts ③ to the specified torque.



Timing chain tensioner bolt 10 Nm (1.0 m · kg, 7.2 ft · lb)




d. Remove the screwdriver, mark sure that the timing chain tensioner rod releases, and then tighten the cap bolt to the specified torque.




Tensioner cap bolt 7 Nm (0.7 m · kg, 5.1 ft · lb)

- 4. Turn:
- crankshaft (counterclockwise several turns)
- 5. Check:
- A.C. magneto rotor "I" mark
 Align with the A.C. magneto cover station-ary pointer.
- camshaft sprocket punch marks
 Align with the cylinder head mating surface.
 Out of alignment → Adjust.

 Refer to "INSTALLING THE CAMSHAFTS".
- 6. Measure:
- valve clearance
 Out of specification → Adjust.
 Refer to "ADJUSTING THE VALVE CLEARANCE" in chapter 3.

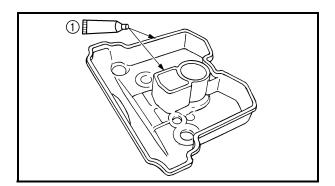

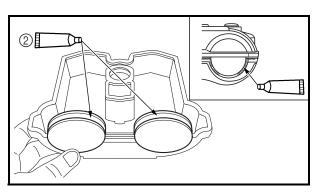


- 7. Install:
- timing chain guide (top side)
- cylinder head cover gasket

 New
- cylinder head cover


№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE:

- Apply Sealant (Quick Gasket®) or Yamaha bond No. 1215 ① onto the mating surfaces of the cylinder head cover and cylinder head cover gasket.
- Apply Sealant (Quick Gasket®) or Yamaha bond No. 1215 ② onto the mating surfaces of the cylinder head cover gasket and cylinder head.

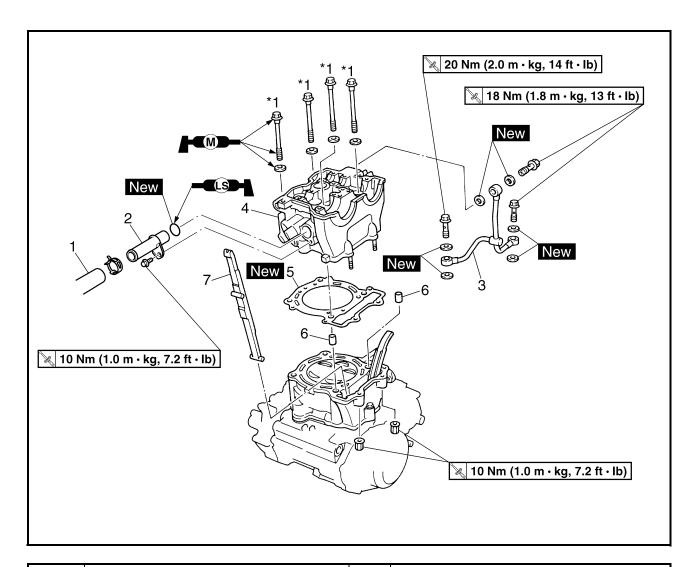

Order	Job/Part	Q'ty	Remarks
	Removing the cylinder head		Remove the parts in the order listed.
	Seat/fuel tank cover/side covers (left		Refer to "SEAT, FENDERS AND FUEL
	and right)/fuel tank		TANK" in chapter 3.
	Muffler and exhaust pipe		Refer to "MUFFLER AND EXHAUST PIPE".
	Radiator inlet hose/parking brake and clutch cable holder Parking brake holder		Refer to "LEADS, CABLES AND HOSES".
	Carburetor		Refer to "CARBURETOR" in chapter 6.
	Camshafts		Refer to "CAMSHAFTS".
1	Radiator inlet hose	1	
2	Cylinder head water jacket	1	
3	Oil delivery pipe 1	1	Refer to "INSTALLING THE CYLINDER HEAD".

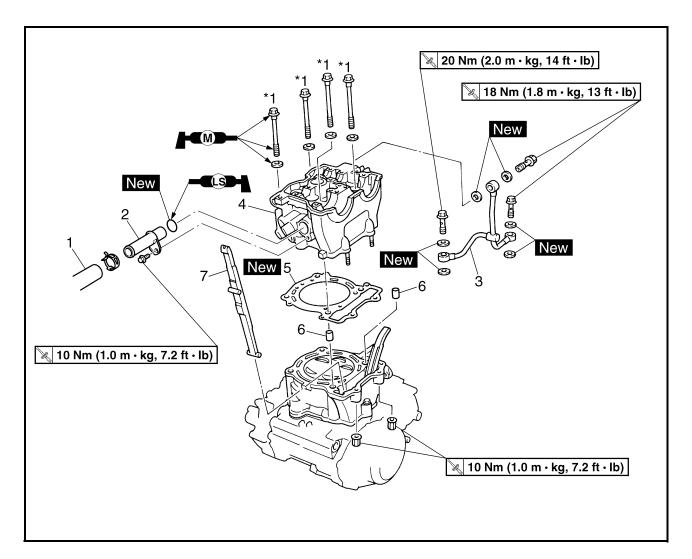



Order	Job/Part	Q'ty	Remarks
4	Cylinder head	1	Refer to "REMOVING THE CYLINDER
			HEAD" and "INSTALLING THE CYLIN-
			DER HEAD".
5	Cylinder head gasket	1	
6	Dowel pin	2	
7	Timing chain guide (exhaust side)	1	
			For installation, reverse the removal pro-
			cedure.

NOTE:

^{*1:} Tighten the cylinder head bolts to 30 Nm (3.0 m \cdot kg, 22 ft \cdot lb) in the proper tightening sequence, remove and retighten the cylinder head bolts to 20 Nm (2.0 m \cdot kg, 14 ft \cdot lb) in the proper tightening sequence, and then tighten the cylinder head bolts further in two steps of 90° to reach the specified angle of 180° in the proper tightening sequence.



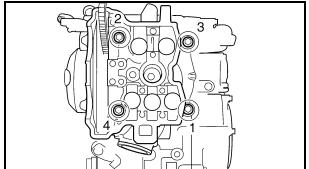

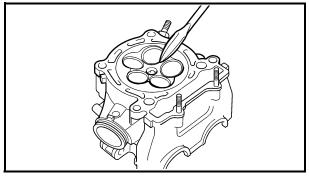

REMOVING THE CYLINDER HEAD

- 1. Remove:
- cylinder head

NOTE: _

- Loosen the bolts in the proper sequence.
- Follow the numerical order shown in the illustration. Loosen each bolt 1/4 of a turn at a time until all of the bolts are loose.

EBS00230

CHECKING THE CYLINDER HEAD


- 1. Eliminate:
- combustion chamber carbon deposits (with a rounded scraper)


Do not use a sharp instrument to avoid damaging or scratching:

- spark plug bore threads
- valve seats

2. Check:

- · cylinder head Damage/scratches \rightarrow Replace.
- cylinder head water jacket Mineral deposits/rust \rightarrow Eliminate.

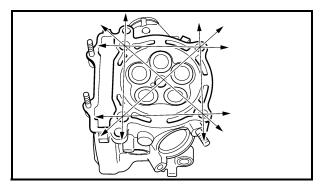

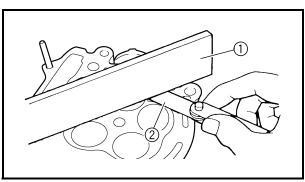

3. Measure:

 cylinder head warpage Out of specification → Resurface the cylinder head.



Maximum cylinder head warpage 0.05 mm (0.002 in)

a. Place a straightedge (1) and a thickness gauge 2 across the cylinder head.

- b. Measure the warpage.
- c. If the limit is exceeded, resurface the cylinder head as follows.
- d. Place a 400 ~ 600 grit wet sandpaper on the surface plate and resurface the cylinder head using a figure-eight sanding pattern.

ENG	
-----	--

NOTE:
To ensure an even surface, rotate the cylinder
head several times.

CHECKING THE OIL DELIVERY PIPE

- 1. Check:
- oil delivery pipe 1
 Cracks/damage → Replace.

 Clogged → Blow out with compressed air.

CHECKING THE TIMING CHAIN GUIDE

- 1. Check:
- timing chain guide (exhaust side)
 Wear/damage → Replace.


INSTALLING THE CYLINDER HEAD

- 1. Install:
- timing chain guide (exhaust side)
- gasket New
- dowel pins
- 2. Install:
- cylinder head

•
NOTE:
Pass the timing chain through the timing chair
cavity.





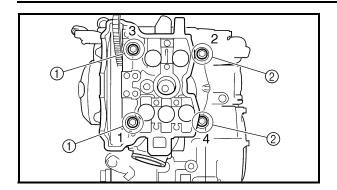

- 3. Install:
- washers
- bolts (1): $\ell = 159 \text{ mm}$ (6.26 in)
- bolts ②: $\ell = 149 \text{ mm} (5.87 \text{ in})$

NOTE:

Tighten the bolts to the specified torque in two or three steps in the proper tightening sequence as shown.

- a. Wash the threads and contact surfaces of the bolts, the contact surfaces of the washers, the contact surface of the cylinder head, and the threads of the crankcase.
- Apply molybdenum disulfide grease on the threads and contact surfaces of the bolts and on both contact surfaces of the washers.
- c. Install the washers and bolts.
- d. Tighten the bolts to the specified torque in two or three steps in the proper tightening sequence as shown.



Cylinder head bolts
1st
30 Nm (3.0 m · kg, 22 ft · lb)


- e. Remove the bolts.
- f. Again apply molybdenum disulfide grease on the threads and contact surfaces of the bolts and on both contact surfaces of the washers.
- g. Retighten the bolts.




Cylinder head bolts 2nd 20 Nm (2.0 m · kg, 14 ft · lb)





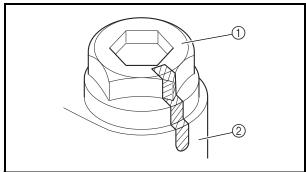

180°



h. Put a mark on the corner ① of the cylinder head bolt and the cylinder head ② as shown.

NOTE: _

Tighten the bolts 90° in each of the two steps to reach the specified angle of 180° in the proper tightening sequence as shown.



Cylinder head bolts Final Specified angle 180°

4. Install:

• cylinder head nuts

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

5. Install:

copper washers New

• oil delivery pipe 1 ①

• union bolts (M8) ②

18 Nm (1.8 m ⋅ kg, 13 ft ⋅ lb)


• union bolt (M10) ③

≥ 20 Nm (2.0 m · kg, 14 ft · lb)




EBS00234

VALVES AND VALVE SPRINGS

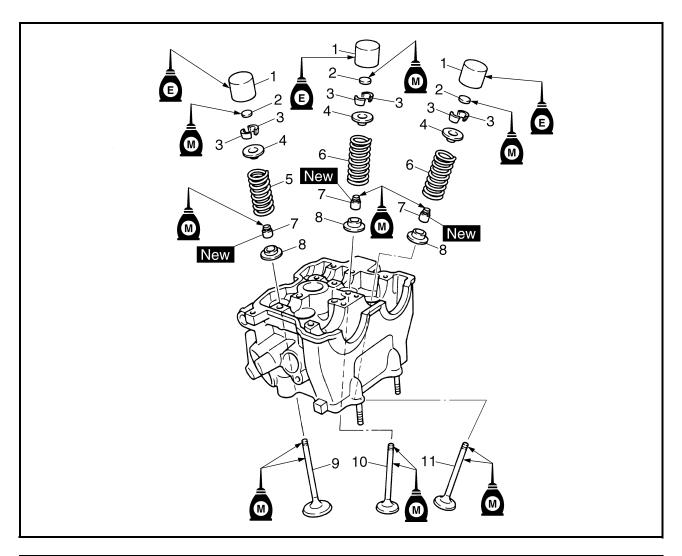

Order	Job/Part	Q'ty		Remarks
	Removing the valves and valve		Remove the p	arts in the order listed.
	springs			
	Cylinder head		Refer to "CYL	INDER HEAD".
1	Valve lifter	5	_	Refer to "REMOVING
2	Adjusting pad	5		THE VALVES AND
3	Valve cotter	10		VALVE SPRINGS" and
4	Upper valve spring seat	5		"INSTALLING THE
5	Exhaust valve spring	2	red	VALVES AND VALVE
6	Intake valve spring	3	blue -	SPRINGS".

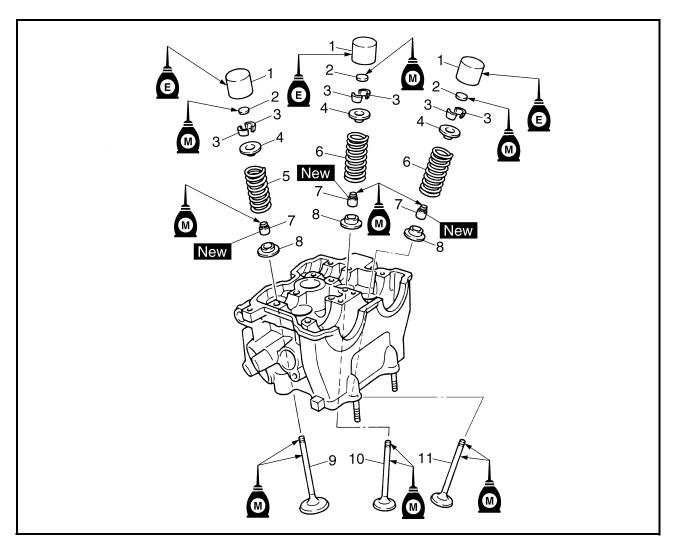

Order	Job/Part	Q'ty	Remarks
7 8 9 10	Stem seal Lower valve spring seat Exhaust valve Intake valve 1 Intake valve 2	5 5 2 1	Refer to "REMOVING THE VALVES AND VALVE SPRINGS" and "INSTALLING THE VALVES AND VALVE SPRINGS". (3.04 in) For installation, reverse the removal procedure.



EBS00238

REMOVING THE VALVES AND VALVE SPRINGS

The following procedure applies to all of the valves and related components.

NOTE:


Before removing the internal parts of the cylinder head (e.g., valves, valve springs, valve seats), make sure the valves properly seal.



- valve lifter (1)
- valve pad ②

NOTE: _

Make a note of the position of each valve lifter and valve pad so that they can be reinstalled in their original place.

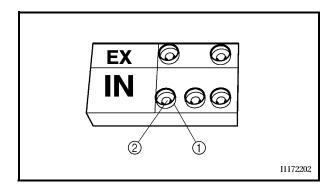

2. Check:


valve sealing
 Leakage at the valve seat → Check the
 valve face, valve seat and valve seat width.
 Refer to "CHECKING THE VALVES AND
 VALVE SPRINGS".




a. Pour a clean solvent ⓐ into the intake and exhaust ports.

b. Check that the valve seals properly.

There should be no leakage at the valve seat ①.

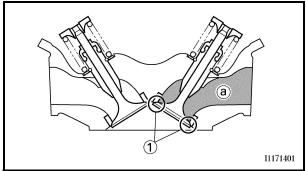

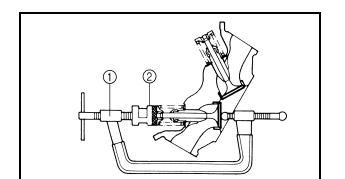

3. Remove:

valve cotters


NOTE: _

Attach a valve spring compressor ① and attachment ② between the valve spring retainer and the cylinder head to remove the valve cotters.





Valve spring compressor P/N. YM-04019, 90890-04019 Valve spring compressor attachment P/N. YM-04114, 90890-04114

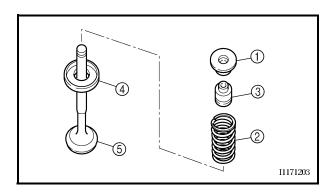



4. Remove:

- upper valve spring seat ①
- valve spring ②
- valve stem seal ③
- lower valve spring seat 4
- valve (5)

NOTE:

Identify the position of each part very carefully so that it can be reinstalled in its original place.

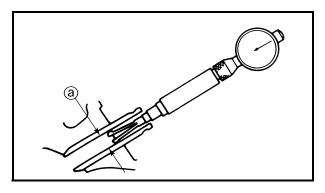

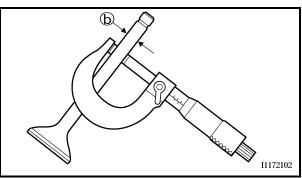

EBS00240

CHECKING THE VALVES AND VALVE SPRINGS

- 1. Measure:
- stem-to-guide clearance

Stem-to-guide clearance = valve guide inside diameter (a) - valve stem diameter (b)

Out of specification \rightarrow Replace the valve guide.



Stem-to-guide clearance Intake

0.010 ~ 0.037 mm (0.0004 ~ 0.0015 in)


<Limit>: 0.080 mm (0.003 in)


Exhaust


0.020 ~ 0.047 mm (0.0008 ~ 0.0019 in)

<Limit>: 0.100 mm (0.004 in)



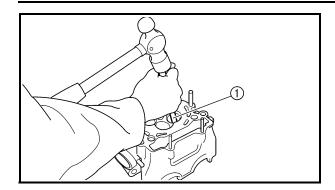

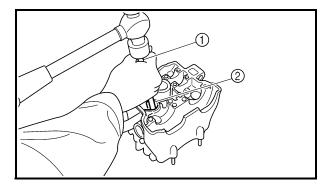

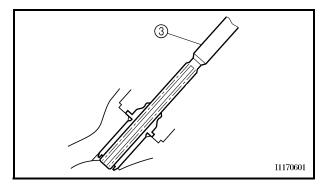

- 2. Replace:
- valve guide

NOTE

To ease guide removal, installation and to maintain correct fit, heat the cylinder head to 100 °C (212 °F) in an oven.

- a. Remove the valve guide using a valve guide remover (1).
- b. Install the new valve guide using a valve guide remover ① and valve guide installer ②.
- c. After installing the valve guide, bore the valve guide using a valve guide reamer ③ to obtain proper stem-to-guide clearance.




Valve guide remover
Intake (Ø 4.5)
P/N. YM-04116/90890-04116
Exhaust (Ø 5)
P/N. YM-04097/90890-04097
Valve guide installer
Intake (Ø 4.5)
P/N. YM-04117/90890-04117
Exhaust (Ø 5)
P/N. YM-04098/90890-04098
Valve guide reamer
Intake (Ø 4.5)
P/N. YM-04118/90890-04118
Exhaust (Ø 5)
P/N. YM-04099/90890-04099


NOTE: _

After replacing the valve guide reface the valve seat.

- 3. Check:
- valve face $\mbox{Pitting/wear} \rightarrow \mbox{Grind the face}.$
- valve stem end Mushroom shape or diameter larger than the body of the stem → Replace.



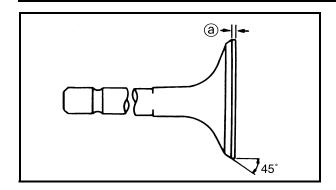

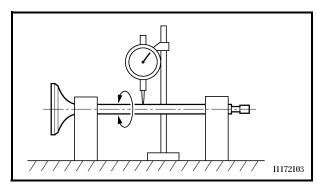



margin thickness ⓐ
 Out of specification → Replace.



Margin thickness
Intake
1.0 mm (0.0394 in)
<Limit>: 0.85 mm (0.033 in)
Exhaust
1.0 mm (0.0394 in)
<Limit>: 0.85 mm (0.033 in)

5. Measure:

valve stem runout
 Out of specification → Replace.



Valve stem runout 0.01 mm (0.0004 in)

NOTE:

• When installing a new valve always replace the guide.

• If the valve is removed or replaced always replace the oil seal.


6. Eliminate:

carbon deposits
 (from the valve face and valve seat)

7. Check:

8. Measure:


valve seat width ⓐ
 Out of specification → Reface the valve seat.

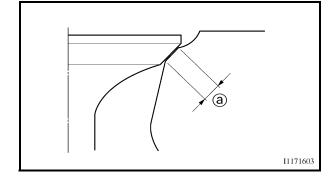



Valve seat width
Intake
0.9 ~ 1.1 mm
(0.0354 ~ 0.0433 in)
<Limit>: 1.6 mm (0.06 in)
Exhaust
0.9 ~ 1.1 mm
(0.0354 ~ 0.0433 in)
<Limit>: 1.6 mm (0.06 in)



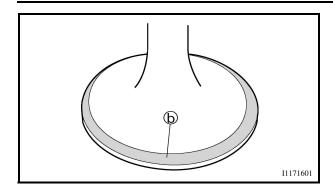


- a. Apply Mechanic's blueing dye (Dykem) **(b)** to the valve face.
- b. Install the valve into the cylinder head.
- c. Press the valve through the valve guide and onto the valve seat to make a clear pattern.
- d. Measure the valve seat width. Where the valve seat and valve face made contact, blueing will have been removed.
- e. If the valve seat is too wide, too narrow, or the seat is not centered, the valve seat must be refaced.

- 9. Lap:
 - valve face
 - valve seat

NOTE: .


After refacing the valve seat or replacing the valve and valve guide, the valve seat and valve face should be lapped.

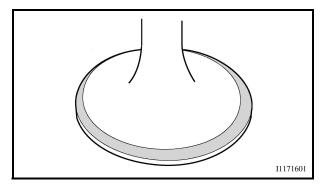

 a. Apply a coarse lapping compound to the valve face.

CAUTION:


Do not let the compound enter the gap between the valve stem and the valve guide.

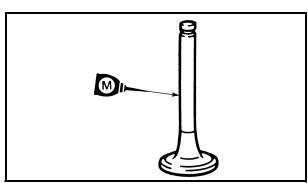

- b. Apply molybdenum disulfide oil to the valve stem.
- c. Install the valve into the cylinder head.
- d. Turn the valve until the valve face and valve seat are evenly polished, then clean off all of the compound.

N	\mathbf{C}	т	F	•
14	$\mathbf{\mathbf{\mathcal{C}}}$		_	

For best lapping results, lightly tap the valve seat while rotating the valve back and forth between your hands.

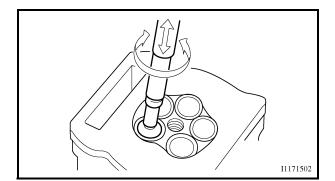

e. Apply a fine lapping compound to the valve face and repeat the above steps.


NOTE

After every lapping operation be sure to clean off all of the compound from the valve face and valve seat.



- f. Apply Mechanic's blueing dye (Dykem) to the valve face.
- g. Install the valve into the cylinder head.
- h. Press the valve through the valve guide and onto the valve seat to make a clear pattern.
- Measure the valve seat width again. If the valve seat width is out of specification, reface and relap the valve seat.



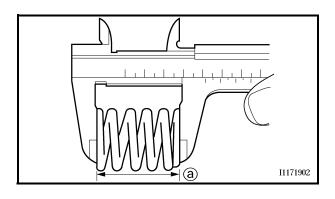

10.Measure:

valve spring free length (a)
 Out of specification → Replace.



Valve spring free length Intake


37.03 mm (1.46 in)

<Limit>: 35.17 mm (1.38 in)

Exhaust

37.68 mm (1.48 in)

<Limit>: 35.79 mm (1.41 in)

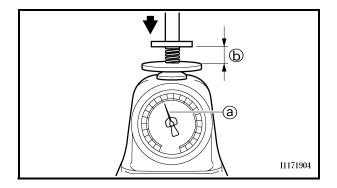

11.Measure:

- compressed valve spring force ⓐ
 Out of specification → Replace.
- (b) Installed length



Compressed valve spring force (installed)

Intake


111.3 ~ 127.9 N at 27.87 mm (11.35 ~ 13.04 kg at 27.87 mm, 25.02 ~ 28.75 lb at 1.10 in)


Exhaust

127.4 ~ 146.4 N at 27.38 mm (12.99 ~ 14.93 kg at 27.38 mm,

28.64 ~ 32.91 lb at 1.08 in)



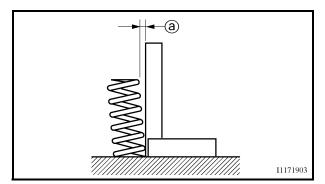

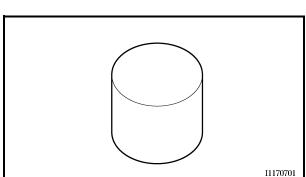

12.Measure:

valve spring tilt ⓐ
 Out of specification → Replace.



Valve spring tilt limit Intake 2.5°/1.61 mm (0.063 in) Exhaust 2.5°/1.65 mm (0.065 in)

EAS00242

CHECKING THE VALVE LIFTERS

The following procedure applies to all of the valve lifters.


- 1. Check:
- valve lifter

 $\label{eq:decomposition} \mbox{Damage/scratches} \rightarrow \mbox{Replace the valve lifters and cylinder head}.$

FRS00241

INSTALLING THE VALVES AND VALVE SPRINGS

- 1. Apply:
- molybdenum disulfide oil (onto the valve stem and valve stem seal)

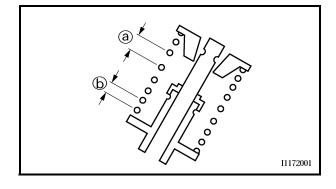


- 2. Install:
- valves
- lower valve spring seats
- valve stem seals
 New
- valve springs
- upper valve spring seats

NOTE:

Install the valve springs with the larger pitch ⓐ facing upwards.

b Smaller pitch



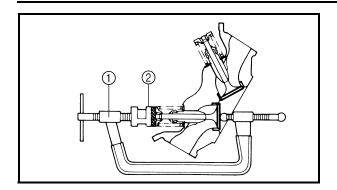

- 3. Install:
- valve cotters

NOTE: .

Install the valve cotters while compressing the valve spring with the valve spring compressor ① and attachment ②.



Valve spring compressor P/N. YM-04019, 90890-04019 Valve spring compressor attachment

P/N. YM-04114, 90890-04114

To secure the valve cotters onto the valve stem, lightly tap the valve tip with a piece of wood.

CAUTION:

Hitting the valve tip with excessive force could damage the valve.

- 5. Install:
- valve pads
- · valve lifters


NOTE: _

- Lubricate the valve lifters with engine oil and valve pads with molybdenum disulfide oil.
- The valve lifters must move smoothly when rotated with a finger.
- Each valve lifter and valve pad must be reinstalled in its original position.





EBS00245


CYLINDER AND PISTON

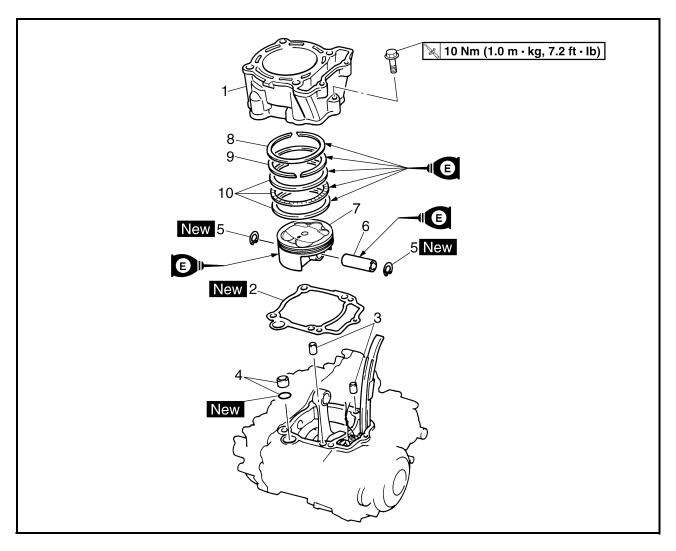

Order	Job/Part	Q'ty	Remarks
	Removing the cylinder and piston		Remove the parts in the order listed.
	Cylinder head		Refer to "CYLINDER HEAD".
1	Cylinder	1	Refer to "INSTALLING THE CYLINDER".
2	Cylinder gasket	1	
3	Dowel pin	2	
4	Dowel pin/O-ring	1/1	
5	Piston pin clip	2	h
6	Piston pin	1	
7	Piston	1	Refer to "REMOVING THE PISTON"
8	Top ring	1	and "INSTALLING THE PISTON".
9	2nd ring	1	
10	Oil ring	1	u
			For installation, reverse the removal procedure.

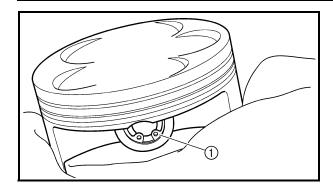

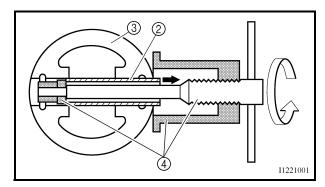

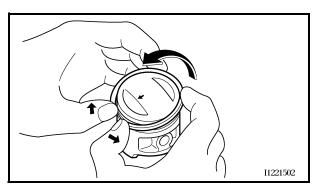

EBS00247

REMOVING THE PISTON

- 1. Remove:
- piston pin clips (1)
- piston pin ②
- piston ③

NOTE: .

Before removing each piston pin, deburr the clip groove and pin hole area. If the piston pin groove is deburred and the piston pin is still difficult to remove, use the piston pin puller 4.



Piston pin puller P/N. YU-01304, 90890-01304

CAUTION:

Do not use a hammer to drive the piston pin out.

- 2. Remove:
- piston rings

NOTE: .

Spread the end gaps apart while at the same time lifting the piston ring over the top of the piston crown, as shown in the illustration.


EBS00248

CHECKING THE CYLINDER AND PISTON

- 1. Check:
- piston wall
- cylinder wall
 Vertical scratches

Vertical scratches \rightarrow Replace the cylinder, and the piston and piston rings as a set.



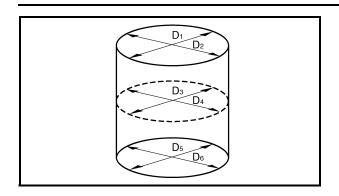

(a)

Ρ

2. Measure:

• piston-to-cylinder clearance


 a. Measure the cylinder bore "C" with a cylinder bore gauge.

NOTE: _

Measure the cylinder bore "C" in parallel to and right angles to the crankshaft. Then, find the average of the measurements.

Cylinder bore "C"	95.00 ~ 95.01 mm (3.7402 ~ 3.7406 in)				
Taper limit "T"	0.05 mm (0.002 in)				
Out of round "R"	0.05 mm (0.002 in)				
"C" = Maximum D					
"T" = (Maximum D_1 or D_2) - (Maximum D_5 or D_6)					
"R" = (Maximum D_1 , D_3 or D_5) – (Minimum D_2 , D_4 or D_6)					

- b. If out of specification, replace the cylinder, and the piston and piston rings as a set.
- c. Measure piston skirt diameter "P" with the micrometer.
- (a) 10 mm (0.39 in) from the bottom edge of the piston



- d. If out of specification, replace the piston and piston rings as a set.
- e. Calculate the piston-to-cylinder clearance with the following formula.


Piston-to-cylinder clearance = Cylinder bore "C" - Piston skirt diameter "P"



Piston-to-cylinder clearance 0.04 ~ 0.065 mm (0.0016 ~ 0.0026 in) <Limit>: 0.10 mm (0.004 in)



f. If out of specification, replace the cylinder, and the piston and piston rings as a set.

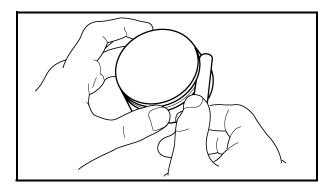

EBS00250

CHECKING THE PISTON RINGS


- 1. Measure:
- piston ring side clearance
 Out of specification → Replace the piston and piston rings as a set.

NOTE:

Before measuring the piston ring side clearance, eliminate any carbon deposits from the piston ring grooves and piston rings.



Piston ring side clearance
Top ring
0.030 ~ 0.065 mm
(0.0012 ~ 0.0026 in)
<Limit>: 0.12 mm (0.0047 in)
2nd ring
0.020 ~ 0.055 mm
(0.0008 ~ 0.0022 in)
<Limit>: 0.12 mm (0.0047 in)

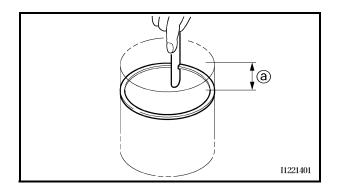

- 2. Install:
- piston ring (into the cylinder)

NOTE:

Level the piston ring into the cylinder with the piston crown.

ⓐ 10 mm (0.39 in)



- 3. Measure:
- piston ring end gap
 Out of specification → Replace the piston
 ring.

NOTE: .

The oil ring expander spacer's end gap cannot be measured. If the oil ring rail's gap is excessive, replace all three piston rings.




Piston ring end gap
Top ring
0.20 ~ 0.30 mm
(0.008 ~ 0.012 in)
<Limit>: 0.55 mm (0.022 in)
2nd ring
0.35 ~ 0.50 mm
(0.014 ~ 0.020 in)
<Limit>: 0.85 mm (0.034 in)
Oil ring
0.20 ~ 0.50 mm
(0.008 ~ 0.020 in)

EBS00251

CHECKING THE PISTON PIN

- 1. Check:
- piston pin Blue discoloration/grooves → Replace the piston pin and then check the lubrication system.



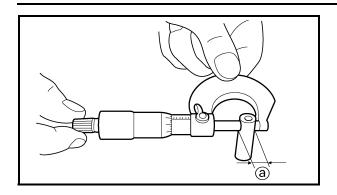

2. Measure:

piston pin outside diameter ⓐ
 Out of specification → Replace the piston pin.




Piston pin outside diameter 19.991 ~ 20.000 mm (0.7870 ~ 0.7874 in) <Limit>: 19.971 mm (0.786 in)

3. Measure:

piston pin bore inside diameter
 Out of specification → Replace the piston.



Piston pin bore inside diameter 20.004 ~ 20.015 mm (0.7876 ~ 0.7880 in) <Limit>: 20.045 mm (0.789 in)

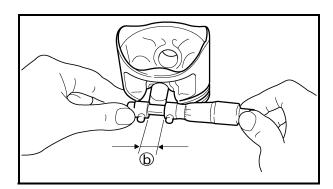

4. Calculate:


piston-pin-to-piston-pin-bore clearance
 Out of specification → Replace the piston pin and piston as a set.

Piston-pin-to-piston-pin-bore clearance =
Piston pin bore diameter (b) Piston pin outside diameter (a)



Piston-pin-to-piston clearance 0.004 ~ 0.024 mm (0.0002 ~ 0.0009 in) <Limit>: 0.074 mm (0.0029 in)



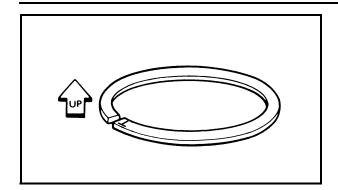


FBS0025

INSTALLING THE PISTON

- 1. Install:
- piston rings (onto the piston)

NOTE:

- Be sure to install the piston rings so that the manufacturer's marks or numbers are located on the upper side of the rings.
- Lubricate the piston and piston rings liberally with engine oil.

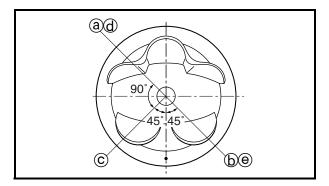

- a 1 3 New
- 3 New

- 2. Position:
- top ring
- 2nd ring
- oil ring

Offset the piston ring end gaps as shown.

- (a) Top ring end
- **b** 2nd ring end
- © Oil ring end (upper)
- d Oil ring
- Oil ring end (lower)
- 3. Install:
- piston (1)
- piston pin ②
- piston pin clips ③ New

NOTE


- Apply engine oil onto the piston pin, piston rings and piston.
- Be sure that the punch mark ⓐ on the piston points to the exhaust side of the engine.
- Before installing the piston pin clips, cover the crankcase with a clean rag to prevent the piston pin clips from falling into the crankcase.
- Install the piston clips with their ends facing downward.



- 4. Lubricate:
- piston
- piston rings
- cylinder

R I	^	T	_	_
IN	U		ᆮ	:

Apply a liberal coating of engine oil.

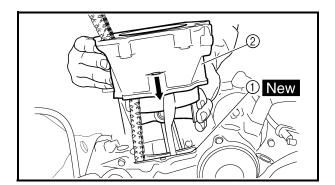

EBS00253

INSTALLING THE CYLINDER

- 1. Install:
- cylinder gasket ① New
- dowel pins
- O-ring
- cylinder ②
- bolts

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: .

Install the cylinder with one hand while compressing the piston rings with the other hand.


CAUTION:

- Be careful not to damage the timing chain damper during installation.
- Pass the timing chain through the timing chain cavity.




EBS00256

A.C. MAGNETO

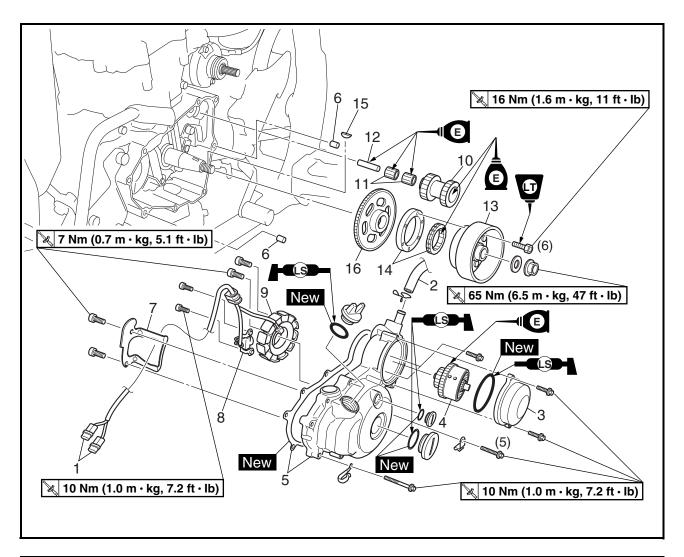


Order	Job/Part	Q'ty	Remarks	
	Removing the A.C. magneto		Remove the parts in the order listed.	
	Engine oil		Drain.	
	Front fender		Refer to "SEAT, FENDERS AND FUEL	
			TANK" in chapter 3.	
1	A.C. magneto coupler	2	Disconnect.	
2	Crankcase breather hose	1		
3	Torque limiter cover	1	¬ Refer to "REMOV-	
4	Torque limiter	1	NOTE:	ING THE A.C. MAG-
			Do not disassem-	NETO ROTOR" and
			ble.	"INSTALLING THE
				A.C. MAGNETO
5	A.C. magneto cover/gasket	1/1		ROTOR".
6	Dowel pin	2		
7	Lead holder	1		
8	Pickup coil	1		

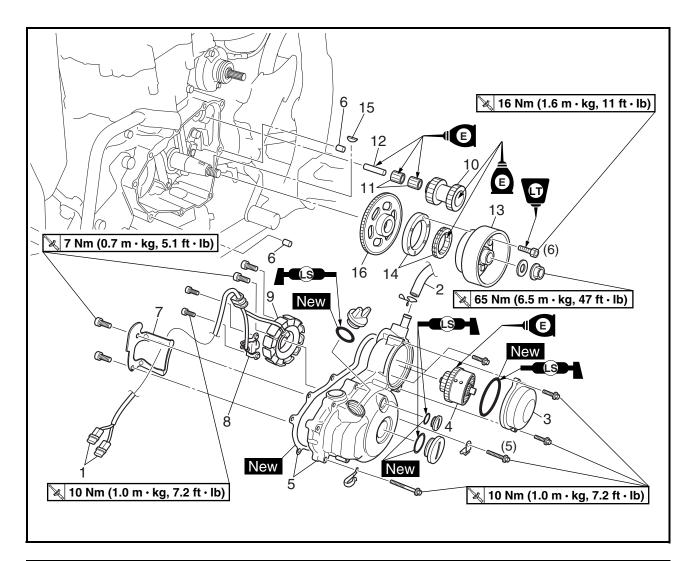

Order	Job/Part	Q'ty	Remarks
9	Stator coil	1	
10	Starter idle gear	1	
11	Bearing	2	
12	Starter idle gear shaft	1	
13	A.C. magneto rotor	1	Refer to "REMOVING THE A.C. MAGNETO ROTOR" and "INSTALLING THE A.C. MAGNETO ROTOR".
14	Starter clutch	1	
15	Woodruff key	1	
16	Starter wheel gear	1	
			For installation, reverse the removal procedure.



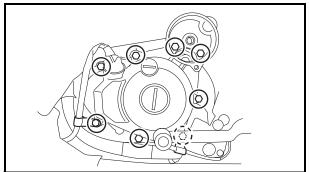

EBS00259

REMOVING THE A.C. MAGNETO ROTOR

- 1. Remove:
- A.C. magneto cover

NOTE: _

Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.


- 2. Remove:
- A.C. magneto rotor nut ①
- washer


NOTE: .

- While holding the A.C. magneto rotor ② with the sheave holder ③, loosen the rotor nut.
- Do not allow the sheave holder to touch the projection (4) on the rotor.



Sheave holder P/N. YS-01880-A, 90890-01701

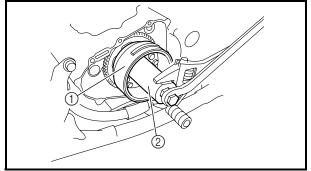

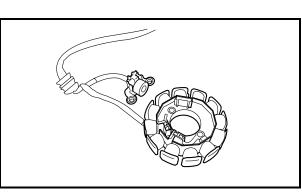

- 3. Remove:
- A.C. magneto rotor ①

NOTE: _

Use the rotor puller 2.




Rotor puller P/N. YM-04142, 90890-04142


EBS00262

CHECKING THE STATOR COIL AND PICKUP COIL

- 1. Check:
- stator coil
- pickup coil
 Damage → Replace the pickup coil/stator assembly.



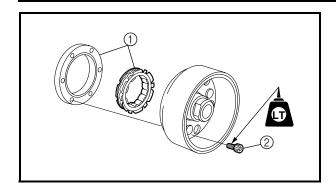

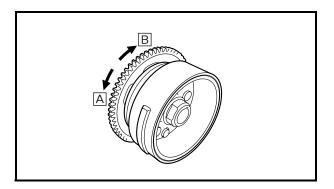

FBS00263

CHECKING THE STARTER CLUTCH

- 1. Check:
- starter one-way clutch ①
 Cracks/damage → Replace.
- bolts ②
 Loose → Replace with a new one, and clinch the end of the bolt.




Starter clutch bolt 16 Nm (1.6 m · kg, 11 ft · lb) LOCTITE®


- a. Install the starter wheel gear to the starter clutch, and hold the starter clutch.
- b. When turning the starter wheel gear counter clockwise A, the starter clutch and the wheel gear should be engaged.

 If not, the starter clutch is faulty. Replace it.
- c. When turning the starter wheel gear clockwise B, the starter wheel gear should turn freely.

If not, the starter clutch is faulty. Replace it.

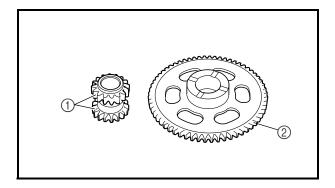


- 2. Check:
- starter idle gear teeth (1)
- starter wheel gear teeth ②
 Burrs/clips/roughness/wear → Replace.

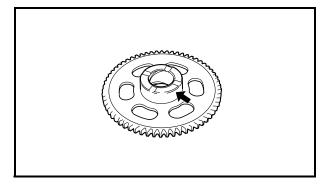


- 3. Check:
- starter wheel gear (contacting surface)
 Damage/pitting/wear → Replace.



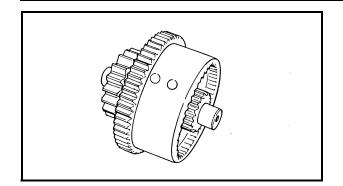

CHECKING THE TORQUE LIMITER

- 1. Check:
- torque limiter
 Damage/wear → Replace.

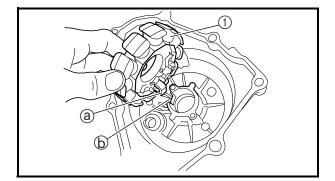


EBS00268

INSTALLING THE A.C. MAGNETO ROTOR

- 1. Install:
- stator coil ①
- pickup coil

NOTE: __

Align the projection ⓐ on the stator coil with the slot ⓑ in the A.C. magneto cover.

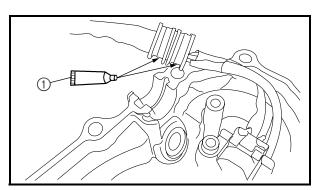

2. Apply:

 sealant (Quick Gasket®) or Yamaha bond No. 1215 ① (into the slit)




Sealant (Quick Gasket®) P/N. ACC-11001-05-01 Yamaha bond No. 1215 P/N. 90890-85505

- 3. Install:
- woodruff key
- A.C. magneto rotor

NOTE: .

- Before installing the rotor, clean the outside of the crankshaft and the inside of the rotor.
- After installing the rotor, check that the rotor rotates smoothly. If not, reinstall the key and rotor.



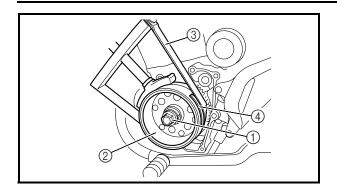

4. Tighten:

• A.C. magneto rotor nut ①

№ 65 Nm (6.5 m · kg, 47 ft · lb)


NOTE: __

• While holding the A.C. magneto rotor ② with the sheave holder ③, tighten the A.C. magneto rotor nut.

• Do not allow the sheave holder to touch the projection ④ on the rotor.



Sheave holder P/N. YS-01880-A, 90890-01701

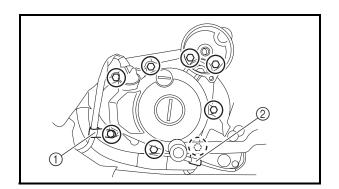

5. Install:

gasket New

• A.C. magneto cover

• A.C. magneto lead holder ①


• neutral switch lead holder ②

• bolts

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: .

Tighten the A.C. magneto cover bolts in stages, using a crisscross pattern.

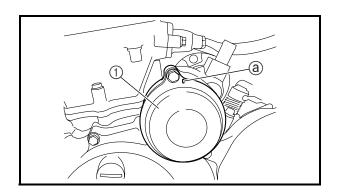

6. Install:

• torque limiter cover ①


№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE:


Install the torque limiter cover with the projection ⓐ facing up.



CLUTCH

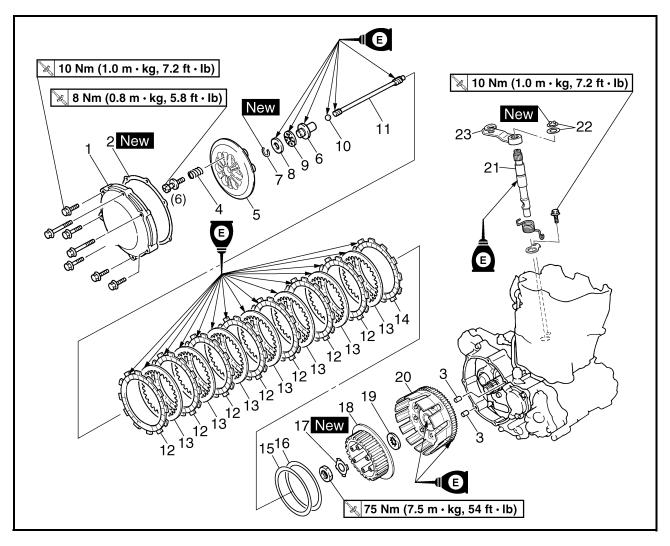



Order	Job/Part	Q'ty	Remarks
	Removing the clutch		Remove the parts in the order listed.
	Engine oil		Drain.
	Clutch cable		Refer to "LEADS, CABLES AND HOSES".
1	Clutch cover	1	Refer to "REMOVING THE CLUTCH" and "INSTALLING THE CLUTCH".
2	Gasket	1	
3	Dowel pin	2	
4	Clutch spring	6	Refer to "INSTALLING THE CLUTCH".
5	Pressure plate	1	
6	Push rod 1	1	
7	Circlip	1	
8	Plain washer	1	
9	Bearing	1	
10	Ball	1	

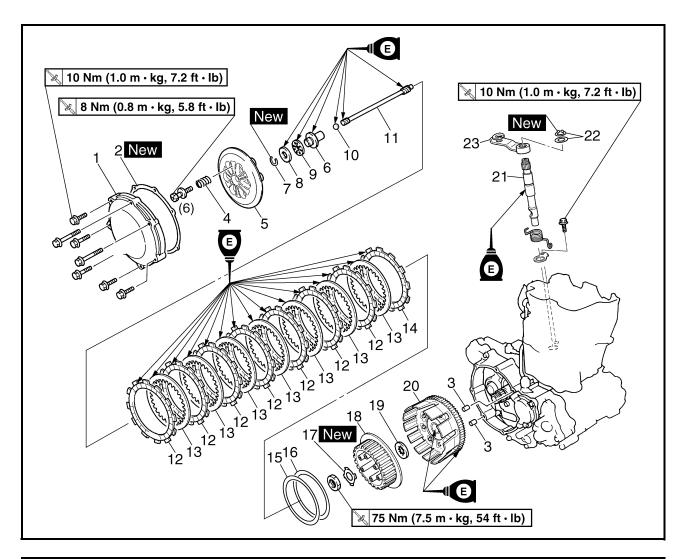

Order	Job/Part	Q'ty	Remarks
11	Push rod 2	1	
12	Friction plate 1	7	h
13	Clutch plate	7	Refer to "INSTALLING THE CLUTCH".
14	Friction plate 2	1	$oldsymbol{\sqcup}$
15	Spring washer	1	
16	Seat plate	1	
17	Lock washer	1	
18	Clutch boss	1	Refer to "REMOVING THE CLUTCH"
19	Thrust washer	1	and "INSTALLING THE CLUTCH".
20	Clutch housing	1	$oldsymbol{\downarrow}$
21	Push lever shaft	1	Refer to "INSTALLING THE CLUTCH".
22	Circlip/washer	1/1	
23	Push lever	1	
			For installation, reverse the removal pro-
			cedure.



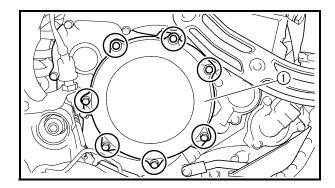

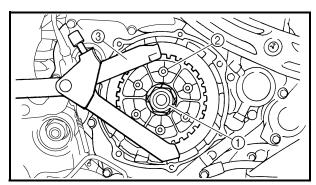

REMOVING THE CLUTCH

- 1. Remove:
- clutch cover 1

NOTE: _

Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.

- 2. Straighten the lock washer tab.
- 3. Loosen:
- clutch boss nut 1

NOTE: .

While holding the clutch boss ② with the universal clutch holder ③, loosen the clutch boss nut.



Universal clutch holder P/N. YM-91042, 90890-04086

-BS00300

CHECKING THE FRICTION PLATES

The following procedure applies to all of the friction plates.

- 1. Check:
- friction plate 1
- friction plate 2
 Damage/wear → Replace the friction plates as a set.



2. Measure:

- friction plate 1 thickness
- friction plate 2 thickness
 Out of specification → Replace the friction plates as a set.


NOTE: .

Measure the friction plate at four places.



Friction plate 1 thickness 2.9 ~ 3.1 mm (0.114 ~ 0.122 in) <Limit>: 2.8 mm (0.110 in) Friction plate 2 thickness 2.9 ~ 3.1 mm (0.114 ~ 0.122 in) <Limit>: 2.8 mm (0.110 in)

I1411101

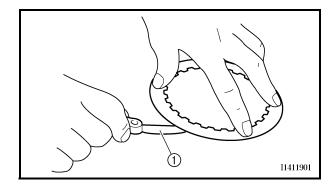

CHECKING THE CLUTCH PLATES

The following procedure applies to all of the clutch plates.

- 1. Check:
- clutch plate
 Damage → Replace the clutch plates as a set.
- 2. Measure:

Out of specification \rightarrow Replace the clutch plates as a set.




Clutch plate warpage 0.2 mm (0.0079 in)

EBS00302

CHECKING THE CLUTCH SPRINGS

The following procedure applies to all of the clutch springs.

- 1. Check:
- clutch spring
 Damage → Replace the clutch springs as a set.

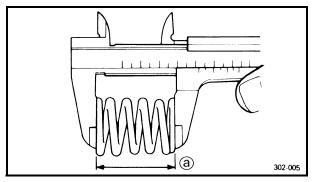

2. Measure:

clutch spring free length ⓐ
 Out of specification → Replace the clutch springs as a set.



Clutch spring free length 51.8 mm (2.04 in) <Limit>: 50.0 mm (1.97 in)


EBS00303


CHECKING THE CLUTCH HOUSING

- 1. Check:
- clutch housing dogs
 Damage/pitting/wear → Deburr the clutch housing dogs or replace the clutch housing.

NOTF:

Pitting on the clutch housing dogs will cause erratic clutch operation.

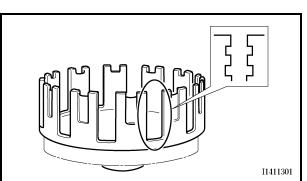

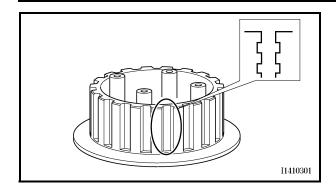


CHECKING THE CLUTCH BOSS

- 1. Check:
- clutch boss splines
 Damage/pitting/wear → Replace the clutch boss.

NOTE: .


Pitting on the clutch boss splines will cause erratic clutch operation.

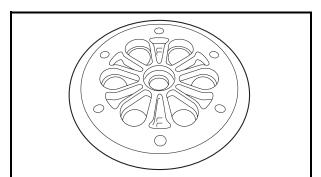

EBS00305

CHECKING THE PRESSURE PLATE


- 1. Check:
- pressure plate ${\sf Cracks/damage} \to {\sf Replace}.$

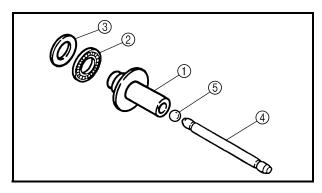

CHECKING THE PUSH RODS


- 1. Check:
- push rod 1 (1)
- bearing ②
- plain washer ③
- push rod 2 (4)
- ball (5)

Wear/damage/cracks/bend \rightarrow Replace the defective part(s).

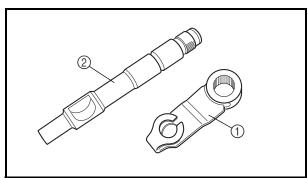

CHECKING THE PUSH LEVER

- 1. Check:
- push lever 1
- push lever shaft ②
 Damage/wear → Replace.

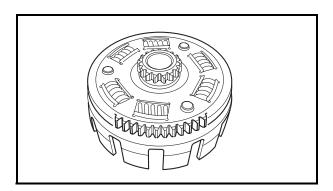


FBS00307

CHECKING THE PRIMARY DRIVEN GEAR

- 1. Check:
- primary driven gear
 Damage/wear → Replace the primary drive gear and clutch housing as a set.

Excessive noise during operation \rightarrow Replace the primary drive gear and clutch housing as a set.

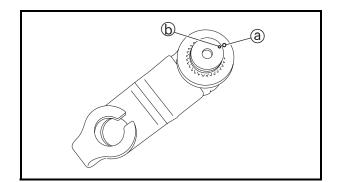

INSTALLING THE CLUTCH

- 1. Install:
- push lever


NOTE: .

Align the punch mark ⓐ on the push lever with the punch mark ⓑ on the push lever shaft.

- 2. Install:
- · clutch housing

NOTE: .

- Make sure that the primary driven gear teeth and primary drive gear teeth mesh correctly.
- Make sure that the oil pump drive gear teeth and oil pump driven gear teeth mesh correctly.

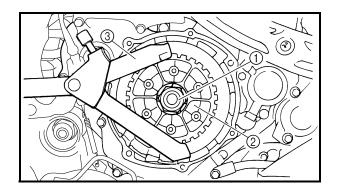

- 3. Tighten:
- thrust washer
- · clutch boss
- lock washer New
- clutch boss nut (1)

> 75 Nm (7.5 m ⋅ kg, 54 ft ⋅ lb)


NOTE:

While holding the clutch boss ② with the universal clutch holder ③, tighten the clutch boss nut.



Universal clutch holder P/N. YM-91042, 90890-04086

4. Bend the lock washer tab along a flat side of the nut.

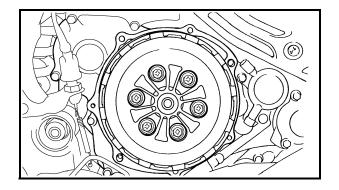


- 5. Install:
- clutch spring 🔌 8 Nm (0.8 m ⋅ kg, 5.8 ft ⋅ lb)


NOTE: _

Tighten the bolts in stages, using a crisscross pattern.

CLUTCH



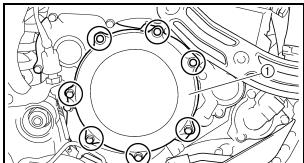

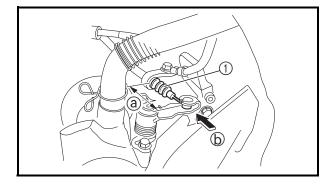

6. Install:

• clutch cover (1)

🗽 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: _

Tighten the bolts in stages, using a crisscross pattern.

7. Install:

• clutch cable (1)

8. Check:

• clutch cable length @ Out of specification \rightarrow Adjust.

Push the push lever in direction (b) and check the cable length @.



Clutch cable length 38.0 ~ 45.2 mm (1.50 ~ 1.78 in)

9. Adjust:

· clutch cable length


a. Remove the circlip and washer.

- b. Remove the push lever.
- c. Install the push lever so that the clutch cable length is within specification.

d. Install the washer and a new circlip.





BALANCER

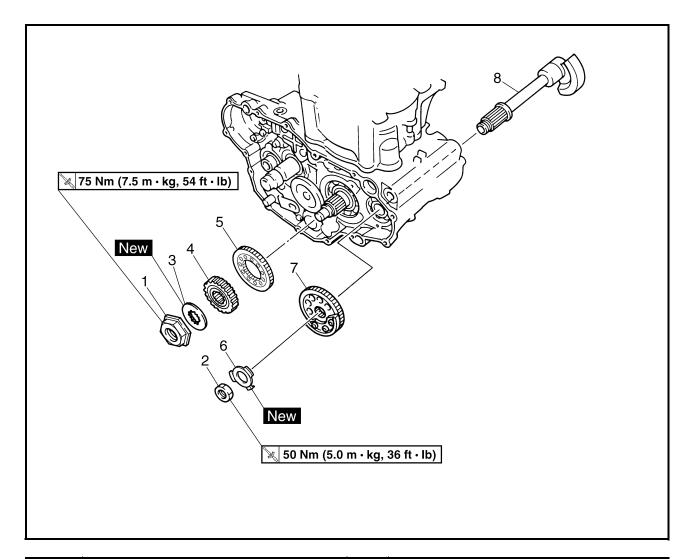

Order	Job/Part	Q'ty	Remarks
	Removing the balancer		Remove the parts in the order listed.
	Clutch housing		Refer to "CLUTCH".
	Right crankcase cover		Refer to "WATER PUMP" in chapter 5.
	A.C. magneto rotor		Refer to "A.C. MAGNETO".
1	Primary drive gear nut	1	Refer to "REMOVING THE BALANCER
2	Balancer driven gear nut	1	DRIVE GEAR AND BALANCER
			DRIVEN GEAR" and "INSTALLING THE
			BALANCER DRIVE GEAR AND BAL-
			ANCER DRIVEN GEAR".
3	Lock washer	1	
4	Primary drive gear	1	
5	Balancer drive gear	1	
6	Lock washer	1	
7	Balancer driven gear	1	
8	Balancer	1	
			For installation, reverse the removal pro-
			cedure.



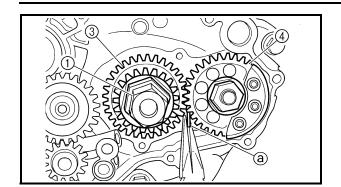

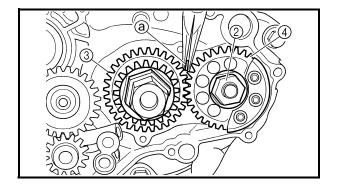




- 1. Straighten the lock washer tab.
- 2. Loosen:
- primary drive gear nut ①
- balancer driven gear nut 2

NOTE: .


Place an aluminum plate ⓐ between the teeth of the balancer drive gear ③ and driven gear ④.

- 3. Remove:
- balancer drive gear
- balancer driven gear

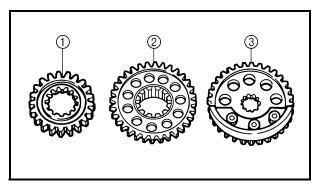

CHECKING THE PRIMARY DRIVE GEAR, BALANCER DRIVE GEAR AND BALANCER DRIVEN GEAR

- 1. Check:
- primary drive gear ①
- balancer drive gear ②
- balancer driven gear ③
 Wear/damage → Replace.

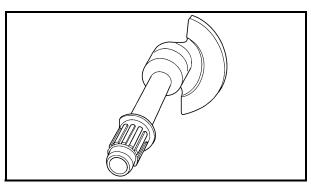



CHECKING THE BALANCER


- 1. Check:
- balancer
 Cracks/damage → Replace.


BALANCER



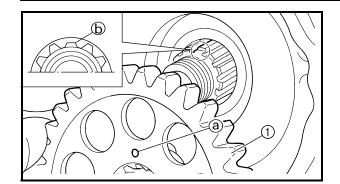

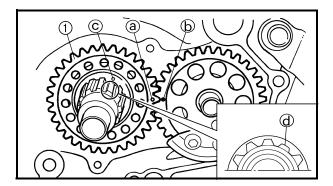

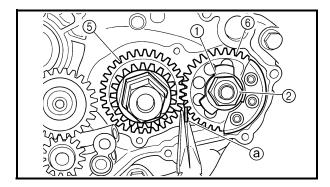

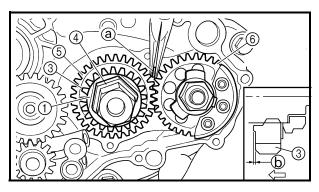

INSTALLING THE BALANCER DRIVE GEAR AND BALANCER DRIVEN GEAR

- 1. Install:
- balancer driven gear 1)

NOTE: .

Install the balancer driven gear onto the balancer while aligning the punch mark ⓐ on the balancer driven gear with the shorter spline ⓑ on the balancer end.

- 2. Install:
- balancer drive gear ①

NOTE: .

- Align the punch mark (a) on the balancer drive gear with the punch mark (b) on the balancer driven gear.
- Align the punch mark © on the balancer drive gear with the shorter spline d on the crankshaft.
- 3. Install:
- lock washer (1) New
- balancer driven gear nut 2

> 50 Nm (5.0 m ⋅ kg, 36 ft ⋅ lb)

- primary drive gear ③
- primary drive gear nut 4


> 75 Nm (7.5 m ⋅ kg, 54 ft ⋅ lb)

NOTE:


- Install the primary drive gear with its stepped side (b) facing the engine.
- Place an aluminum plate ⓐ between the teeth of the balancer drive gear ⑤ and driven gear ⑥.
- 4. Bend the lock washer tab.



OIL PUMP

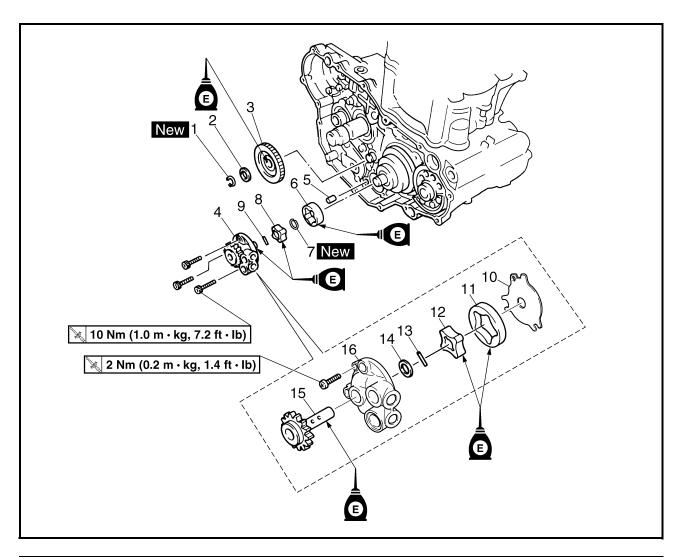

Order	Job/Part	Q'ty	Remarks
	Removing the oil pump		Remove the parts in the order listed.
	Clutch housing		Refer to "CLUTCH".
	Right crankcase cover		Refer to "WATER PUMP" in chapter 5.
1	Circlip	1	
2	Washer	1	
3	Oil pump drive gear	1	
4	Oil pump assembly	1	
5	Dowel pin	1	
6	Outer rotor 2	1	
7	Circlip	1	
8	Inner rotor 2	1	

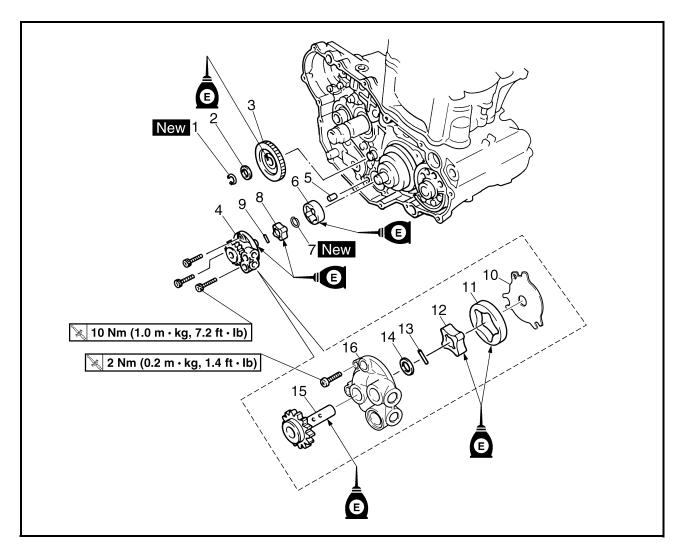


Order	Job/Part	Q'ty	Remarks
9	Pin	1	
10	Oil pump housing cover	1	
11	Outer rotor 1	1	
12	Inner rotor 1	1	
13	Pin	1	
14	Washer	1	
15	Oil pump driven gear	1	
16	Oil pump housing	1	
			For installation, reverse the removal pro-
			cedure.



CHECKING THE OIL PUMP

- 1. Check:
- oil pump drive gear
- oil pump driven gear
- oil pump housing
- oil pump housing cover
 Cracks/wear/damage → Replace.

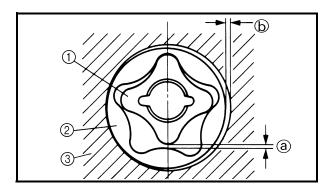

2. Measure:

- inner-rotor-to-outer-rotor-tip clearance ⓐ
- outer-rotor-to-oil-pump-housing clearance

Out of specification \rightarrow Replace the oil pump.

- 1) inner rotor
- ② outer rotor
- ③ oil pump housing




Inner-rotor-to-outer-rotor-tip clearance 0.07 ~ 0.12 mm (0.0028 ~ 0.0047 in)

<Limit>: 0.20 mm (0.0079 in)
Outer-rotor-to-oil-pump-housing clearance

0.09 ~ 0.17 mm (0.0035 ~ 0.0067 in)


<Limit>: 0.24 mm (0.0094 in)

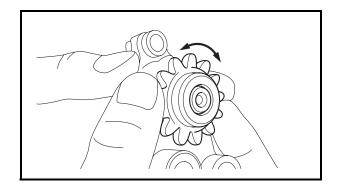


3. Check:

oil pump operation
 Unsmooth → Repeat steps (1) and (2) or replace the defective parts.


SHIFT SHAFT

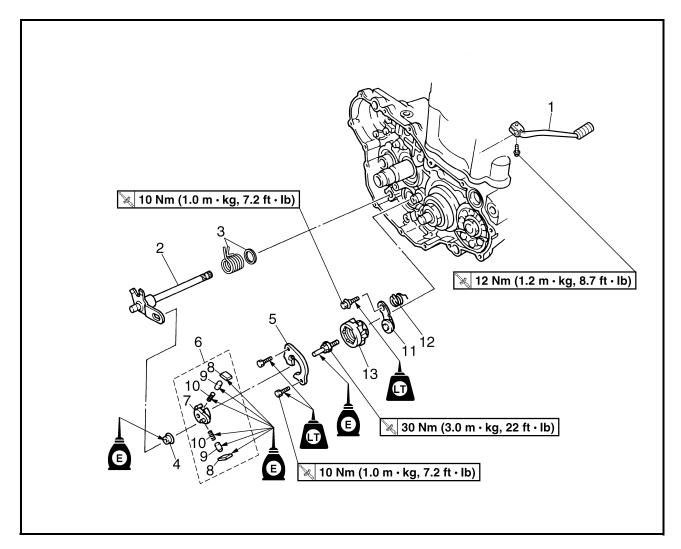

Order	Job/Part	Q'ty	Remarks				
	Removing the shift shaft		Remove the parts in the order listed.				
	Clutch		Refer to "CLUTCH".				
	Oil pump drive gear		Refer to "OIL PUMP".				
1	Shift pedal	1	Defer to "INICTALLING THE CHIET				
2	Shift shaft	1	Refer to "INSTALLING THE SHIFT SHAFT".				
3	Shift shaft spring/washer	1/1	J SHAFT.				
4	Roller	1					
5	Shift guide	1					
6	Shift lever assembly	1	Defer to "INICTALLING THE CHIET				
7	Pawl holder	1	Refer to "INSTALLING THE SHIFT LEVER".				
8	Pawl	2	LEVEN .				
9	Pawl pin	2					
10	Spring	2					

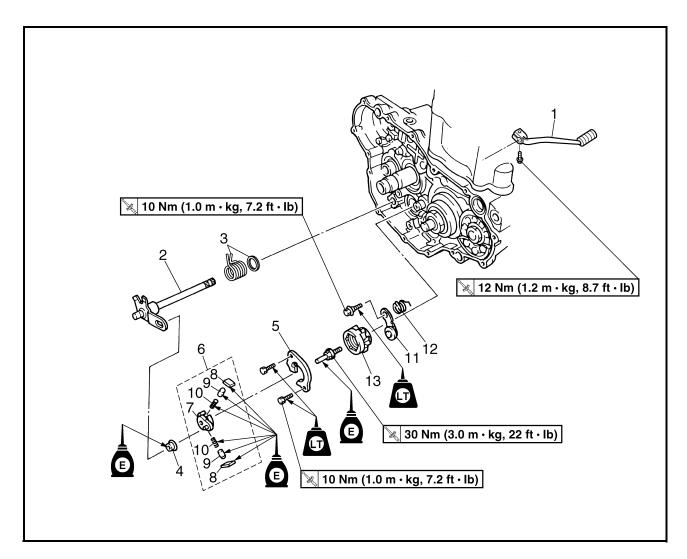


Order	Job/Part	Q'ty	Remarks
11 12 13	Stopper lever Stopper lever spring Shift drum segment	1 1 1	Refer to "INSTALLING THE SHIFT LEVER".
10	Offine draint segment	'	For installation, reverse the removal procedure.

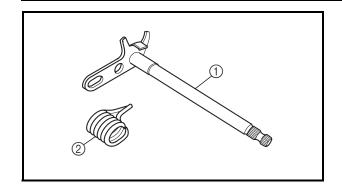

CHECKING THE SHIFT SHAFT


- 1. Check:
- shift shaft 1Bends/damage/wear \rightarrow Replace.
- shift shaft spring ②
 Damage/wear → Replace.

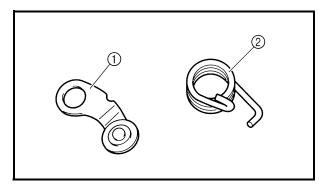

EBS01019

CHECKING THE STOPPER LEVER

- 1. Check:
- stopper lever ①
 Bends/damage → Replace.
 Roller turns roughly → Replace the stopper lever.
- stopper spring ②
 Damage/wear → Replace.

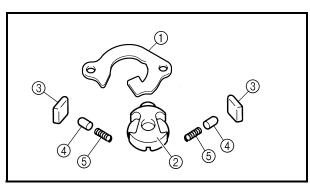


EBS00359

CHECKING THE SHIFT GUIDE AND SHIFT LEVER


- 1. Check:
- shift guide ①
- pawl holder ②
- pawls ③
- pawl pins 4
- springs ⑤

Wear/cracks/damage \rightarrow Replace.

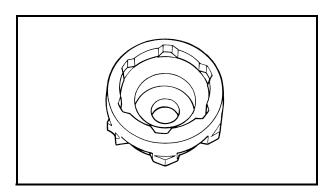

CHECKING THE SHIFT DRUM SEGMENT

- 1. Check:
- shift drum segment
 Damage/wear → Replace.

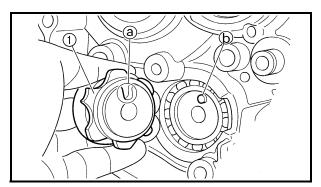

INSTALLING THE SHIFT LEVER

- 1. Install:
- shift drum segment ①
- shift drum segment bolt


30 Nm (3.0 m ⋅ kg, 22 ft ⋅ lb)

NOTE: __

Align the notch ⓐ on the shift drum segment with the pin ⓑ on the shift drum.

SHIFT SHAFT



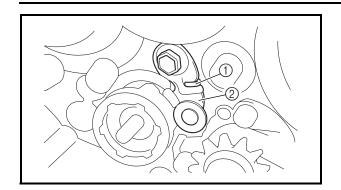

2. Install:


• stopper lever spring ①

• stopper lever ②

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: _

Align the stopper lever roller with a slot on the shift drum segment.

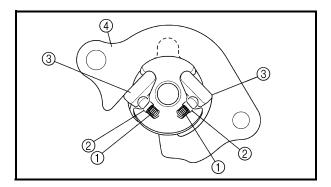


3. Install:

• springs ①

• pawl pins ②

• pawls ③

• shift guide ④ 🗽 10 Nm (1.0 m · kg, 7.2 ft · lb) (to the pawl holder)

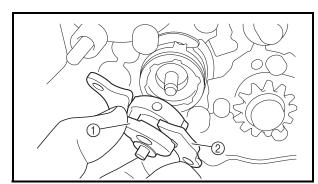


4. Install:

• shift lever assembly (1)

• shift guide ② \sqrt{10 Nm (1.0 m · kg, 7.2 ft · lb)}

NOTE:

The shift lever assembly is installed at the same time as the shift guide.

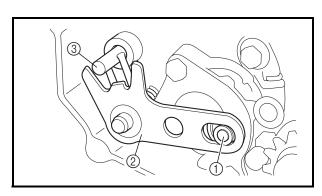

INSTALLING THE SHIFT SHAFT

1. Install:

• roller 1

· shift shaft spring

• shift shaft ②

NOTE: _

• Install the end of the shift shaft spring onto the shift shaft spring stopper ③.

• Install the end of the shift shaft lever onto the roller (1).

2. Install:


shift pedal

 \(\)


3. Adjust:

 shift pedal height Refer to "ADJUSTING THE SHIFT PEDAL" in chapter 3.

CRANKCASE

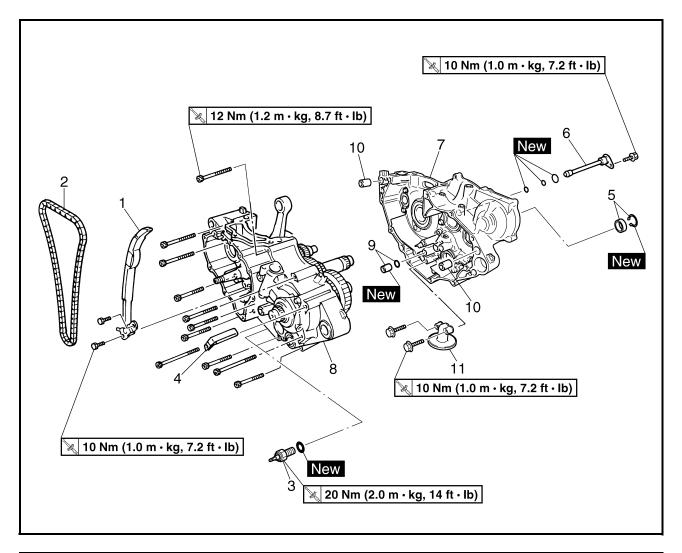


Order	Job/Part	Q'ty	Remarks
	Separating the crankcase		Remove the parts in the order listed.
	Engine assembly		Refer to "ENGINE REMOVAL".
	Camshafts		Refer to "CAMSHAFTS".
	Cylinder head		Refer to "CYLINDER HEAD".
	A.C. magneto		Refer to "A.C. MAGNETO".
	Clutch		Refer to "CLUTCH".
	Balancer		Refer to "BALANCER".
	Oil pump		Refer to "OIL PUMP".
	Shift drum segment		Refer to "SHIFT SHAFT".
	Starter motor		Refer to "STARTER MOTOR" in
			chapter 8.
1	Timing chain guide (intake side)	1	
2	Timing chain	1	
3	Neutral switch	1	
4	Hose guide	1	

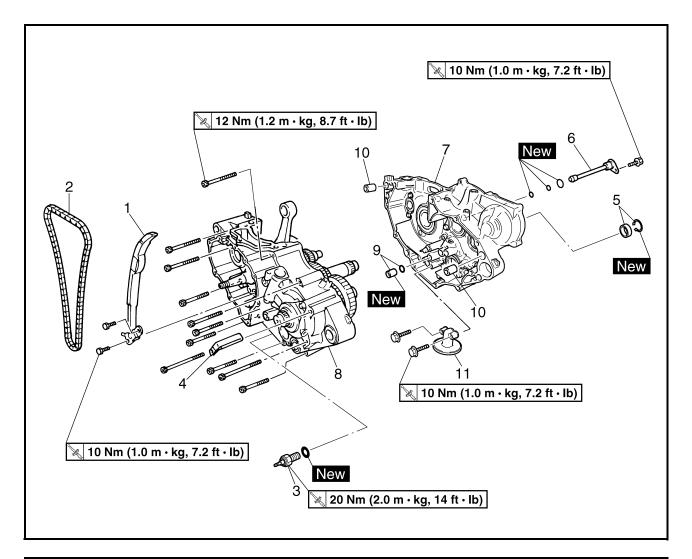


Order	Job/Part	Q'ty	Remarks
5	Circlip/spacer	1/1	
6	Oil delivery pipe 2	1	
7	Right crankcase	1	Refer to "SEPARATING THE CRANK-
8	Left crankcase	1	CASE".
9	Dowel pin/O-ring	1/1	
10	Dowel pin	2	
11	Oil stainer	1	
			For installation, reverse the removal pro-
			cedure.

OIL SEAL AND BEARING

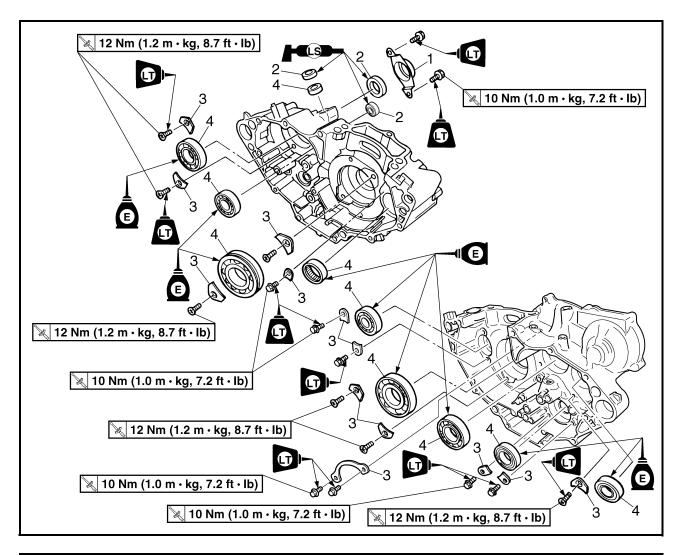

Order	Job/Part	Q'ty	Remarks
	Removing the crankcase bearings		Remove the parts in the order listed.
	Crankshaft		Refer to "CRANKSHAFT".
	Transmission		Refer to "TRANSMISSION".
1	Oil seal holder	1	
2	Oil seal	3	
3	Bearing retainer	13	
4	Bearing	10	
			For installation, reverse the removal pro-
			cedure.

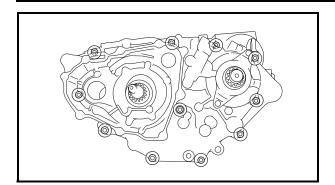

FBS0033

SEPARATING THE CRANKCASE

- 1. Separate:
- right crankcase
- left crankcase

a. Remove the crankcase bolts.

NOTE:

- Loosen each bolt 1/4 of a turn at a time and after all the bolts are loosened, remove them.
- Loosen the bolts in stages, using a crisscross pattern.

Left crankcase

b. Remove the right crankcase.


NOTE: _

Insert a screwdriver or pry bar into the pry points in the crankcase and then carefully pry apart the crankcase halves.

	A	п	ш	П		N	
C	Д	u	,	ш	C.	11	н

Use a soft hammer to tap on one side of the crankcase. Tap only on reinforced portions of the crankcase. Do not tap on the crankcase mating surfaces. Work slowly and carefully. Make sure that the crankcase halves separate evenly.

c. Remove the dowel pins and O-ring.

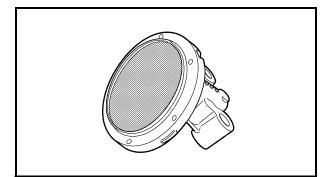

EBS00325

CHECKING THE OIL STRAINER AND OIL DELIVERY PIPE 2


- 1. Check:
- oil strainer

Damage \rightarrow Replace.


Contaminants → Clean with engine oil

CRANKCASE



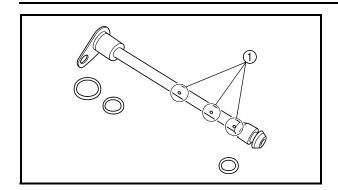


- 2. Check:
- oil delivery pipe 2
 Cracks/damage → Replace.
- oil delivery pipe holes ①
 Clogged → Blow out with compressed air.

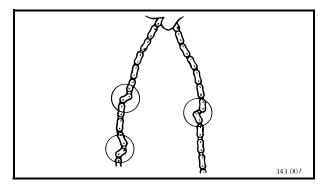

EBS00335

CHECKING THE TIMING CHAIN AND GUIDE

- 1. Check:
- timing chain
 Cracks/stiffness → Replace the timing chain and camshaft as a set.
- 2. Check:
- timing chain guide (intake side)
 Wear/damage → Replace.

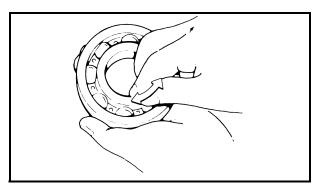

EBS00339

CHECKING THE BEARINGS AND OIL SEALS

- 1. Check:
- bearings

Clean and lubricate, then rotate the inner race with a finger.

Roughness \rightarrow Replace.

- 2. Check:
- oil seals

Damage/wear \rightarrow Replace.

EBS0033

CHECKING THE CRANKCASE


- 1. Thoroughly wash the case halves in a mild solvent.
- 2. Clean all the gasket mating surfaces and crankcase mating surfaces thoroughly.
- 3. Check:
- crankcase


Cracks/damage \rightarrow Replace.

oil delivery passages
 Clogged → Blow out with compressed air.

CRANKCASE



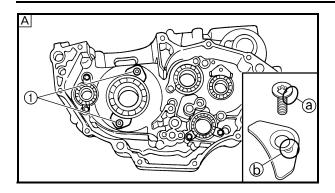

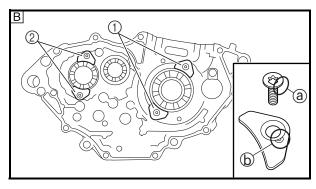

ASSEMBLING THE CRANKCASE

- 1. Install:
- bearing New
- · bearing retainer
- bolt (bearing retainer)

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

• screw [bearing retainer (crankshaft)] (1)


№ 12 Nm (1.2 m · kg, 8.7 ft · lb)

• screw [bearing retainer (drive axle)] (2)

№ 12 Nm (1.2 m · kg, 8.7 ft · lb)

NOTE: _

- Install the bearing by pressing its outer race evenly.
- To prevent the screws [bearing retainer (crankshaft)] from becoming loose, flatten the edge @ of each screw into the depression (b) using a punch, etc. Be careful not to damage the hole for the screwdriver in the screw head.
- A Right crankcase
- B Left crankcase

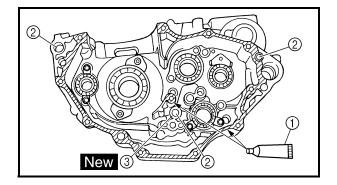

- 2. Apply:
- sealant (Quick Gasket®) or Yamaha bond No. 1215 (1)

(to the mating surfaces of both case halves)



Sealant (Quick Gasket®) ACC-11001-05-01 Yamaha bond No. 1215 90890-85505

- 3. Install:
- dowel pins (2)
- O-ring ③ New


CRANKCASE

ENG

4. Fit the right crankcase onto the left crankcase. Tap lightly on the case with a soft hammer.

C		П	ᄑ	П	_		
	л				()	\mathbf{n}	В
•	_	L W		- 1	u	11.74	

Before installing and torquing the crankcase holding bolts, be sure to check whether the transmission is functioning properly by manually rotating the shift drum in both directions.

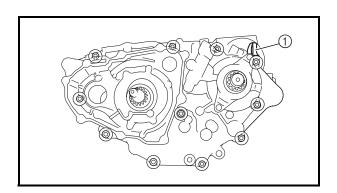

- 5. Install:
- hose guide ①
- crankcase bolts
- 6. Tighten:
- crankcase bolts (follow the proper tightening sequence)

🗽 12 Nm (1.2 m · kg, 8.7 ft · lb)


NOTE: _

Tighten the bolts in stages, using a crisscross pattern.

- 7. Apply:
- 4-stroke engine oil (to the crankshaft pin, bearing and oil delivery hole)
- 8. Check:
- crankshaft and transmission operation Unsmooth operation \rightarrow Repair.




CRANKSHAFT

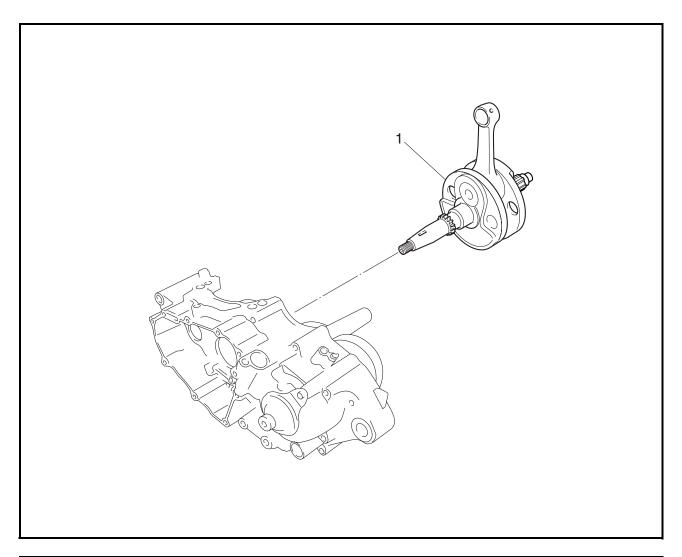

Order	Job/Part	Q'ty	Remarks
	Removing the crankshaft		Remove the parts in the order listed.
	Crankcase		Separate.
			Refer to "CRANKCASE".
1	Crankshaft	1	Refer to "REMOVING THE CRANK-
			SHAFT" and "INSTALLING THE CRANK-
			SHAFT".
			For installation, reverse the removal pro-
			cedure.

CRANKSHAFT



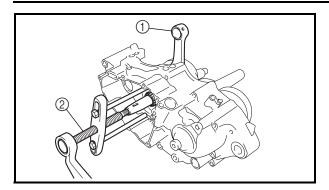


EBS0033

REMOVING THE CRANKSHAFT

- 1. Remove:
- crankshaft ①
 Use a crankcase separating tool ②.



Crankcase separating tool P/N. YU-01135-A, 90890-01135

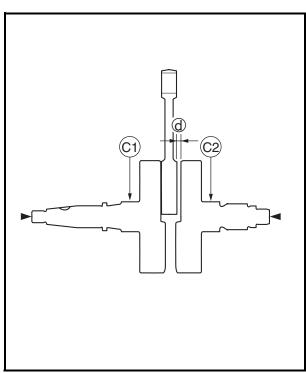

EBS00360

CHECKING THE CRANKSHAFT

- 1. Measure:
- side clearance d
 Out of specification → Replace the crank-shaft.



Big end side clearance 0.15 ~ 0.45 mm (0.0059 ~ 0.0177 in) <Limit>: 0.50 mm (0.0197 in)

2. Measure:


• runout ©

Out of specification \rightarrow Replace the crankshaft.



Runout limit

C1: 0.05 mm (0.002 in) C2: 0.05 mm (0.002 in)

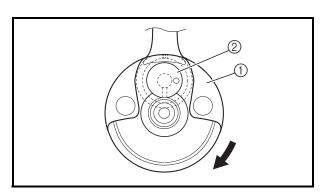


a. The crankshaft ① and the crankshaft pin ② oil passages must be properly interconnected with a tolerance of less than 1 mm (0.04 in).

CRANKSHAFT





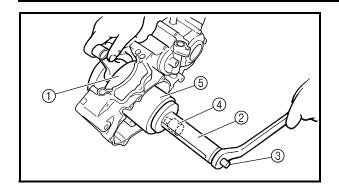

INSTALLING THE CRANKSHAFT

- 1. Install:
- crankshaft (1)



Crankshaft installer pot ②
P/N. 90890-01274
Crankshaft installer bolt ③
P/N. 90890-01275
Crankshaft installer set
P/N. YU-90050
Adapter ④
P/N. YM-90063, 90890-01278
Spacer (crankshaft installer) ⑤
P/N. YM-91044, 90890-04081


NOTE: _

Hold the connecting rod at the Top Dead Center (TDC) with one hand while turning the nut of the installing tool with the other. Operate the installing tool until the crankshaft bottoms against the bearing.

CAUTION:


Apply engine oil to each bearing to protect the crankshaft against scratches and to make installation easier.

EBS00345 TRANSMISSION

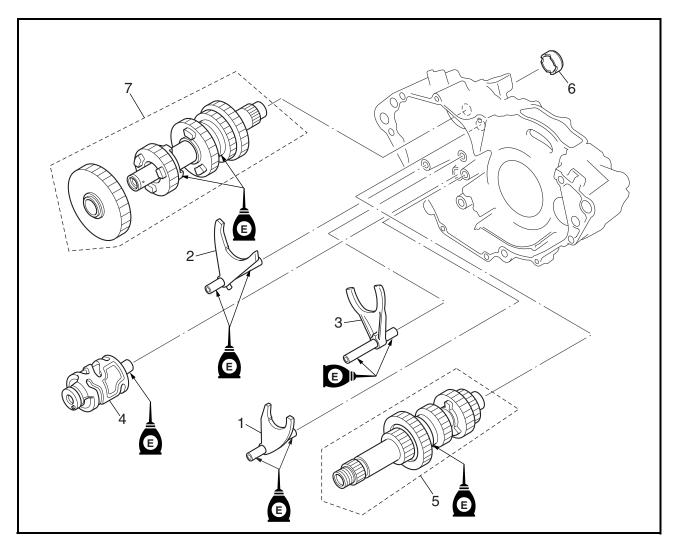


Order	Job/Part	Q'ty	Remarks
	Removing the transmission		Remove the parts in the order listed.
	Crankcase		Separate.
			Refer to "CRANKCASE".
1	Shift fork "C"	1	h
2	Shift fork "R"	1	Refer to "INSTALLING THE TRANSMIS-
3	Shift fork "L"	1	SION".
4	Shift drum	1	$oldsymbol{\sqcup}$
5	Main axle assembly	1	
6	Spacer	1	
7	Drive axle assembly	1	
			For installation, reverse the removal pro-
			cedure.

EBS00347 MAIN AXLE

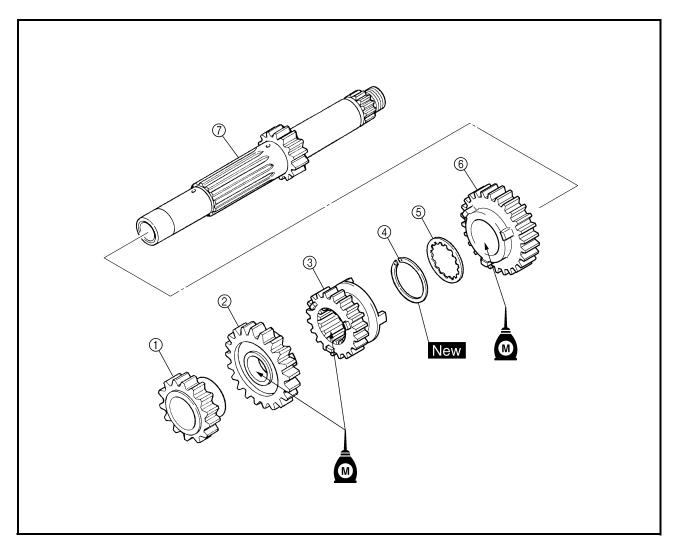

Order	Job/Part	Q'ty	Remarks
	Disassembling the main axle		Remove the parts in the order listed.
1	2nd pinion gear	1	Refer to "ASSEMBLING THE MAIN AXLE AND DRIVE AXLE".
2	4th pinion gear	1	
3	3rd pinion gear	1	
4	Circlip	1	Refer to "ASSEMBLING THE MAIN
(5)	Toothed washer	1	Refer to "ASSEMBLING THE MAIN AXLE AND DRIVE AXLE".
6	5th pinion gear	1	
7	Main axle/1st pinion gear	1	
			For assembly, reverse the disassembly procedure.


DRIVE AXLE

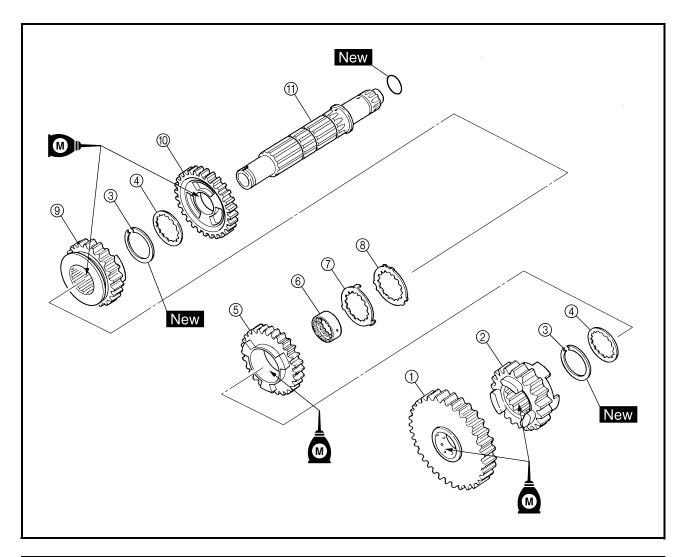


Order	Job/Part	Q'ty	Remarks
	Disassembling the drive axle		Remove the parts in the order listed.
	Crankcase		Refer to "CRANKCASE".
1	1st wheel gear	1	
2	5th wheel gear	1	
3	Circlip	2	Refer to "ASSEMBLING THE MAIN
4	Toothed washer	2	AXLE AND DRIVE AXLE".
(5)	3rd wheel gear	1	
6	Toothed spacer	1	
7	Toothed lock washer	1	
8	Toothed washer retainer	1	
9	4th wheel gear	1	
10	2nd wheel gear	1	
11)	Drive axle	1	
			For assembly, reverse the disassembly
			procedure.

TRANSMISSION



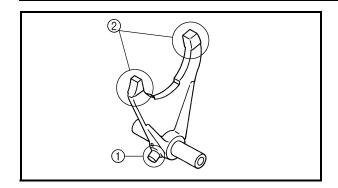

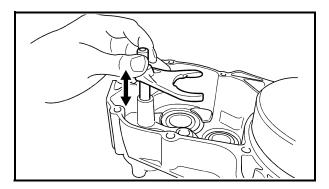




CHECKING THE SHIFT FORKS

The following procedure applies to all of the shift forks.


- 1. Check:
- shift fork cam follower (1)
- shift fork pawl ②
 Bends/damage/scoring/wear → Replace the shift fork.
- 2. Check:
- shift fork movement \rightarrow Replace the shift forks.

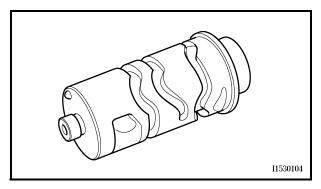

EBS0035

CHECKING THE SHIFT DRUM

- 1. Check:
- shift drum grooves
 Scratches/wear/damage → Replace.

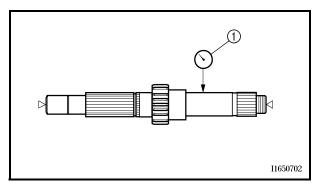



CHECKING THE TRANSMISSION


- 1. Measure:
- main axle runout
 (with a centering device and dial gauge ①)
 Out of specification → Replace the main axle.



Main axle runout limit 0.08 mm (0.0031 in)



- transmission gears
 Blue discoloration/pitting/wear → Replace the defective gear(s).
- transmission gear dogs
 Cracks/damage/rounded edges → Replace the defective gear(s).

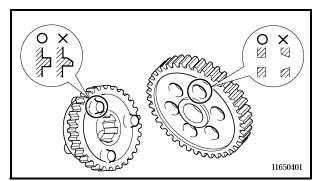


TRANSMISSION



- 3. Check:
- transmission gear engagement (each pinion gear to its respective wheel gear)

Incorrect \rightarrow Reassemble the transmission axle assemblies.

- 4. Check:
- transmission gear movement Rough movement → Replace the defective part(s).
- 5. Check:
- circlips
 Bends/damage/looseness → Replace.

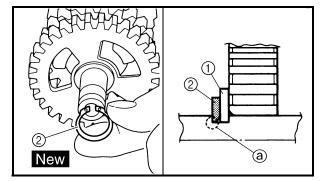

© C


EDCOOSEE

ASSEMBLING THE MAIN AXLE AND DRIVE AXLE

- 1. Install:
- toothed washer ①
- circlip ② New

NOTE: _

- Be sure the circlip shape-edged corner ⓐ is positioned opposite side to the toothed washer and gear.
- Be sure the circlip end **(b)** is positioned at axle spline groove **(C)**.

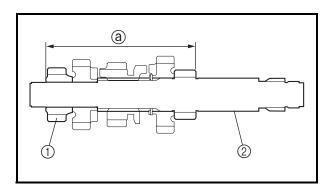

- 2. Install:
- 2nd pinion gear 1


NOTE: _


Press the 2nd pinion gear into the main axle ②, as shown in the illustration.

(a) 112.85 ~ 113.05 mm (4.443 ~ 4.451 in)

TRANSMISSION



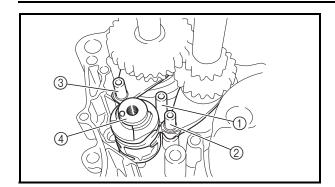

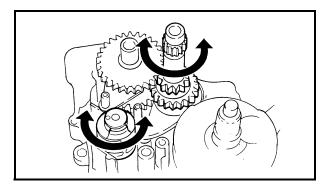

EBS00356

INSTALLING THE TRANSMISSION

- 1. Install:
- shift fork "L" (1) (to drive axle)
- shift fork "C" (2) (to main axle)
- shift fork "R" (3) (to drive axle)
- shift drum ④
- transmission assembly

NOTE:

The embossed marks on the shift forks should face towards the right side of the engine and be in the following sequence: "R", "C", "L". Be sure that the shift fork cam follower is properly seated in the shift drum groove.

2. Check:

shift operation
 Unsmooth operation → Repair.

NOTE: .


- Oil each gear and bearing thoroughly.
- Before assembling the crankcase, be sure that the transmission is in neutral and that the gears turn freely.

COOL **%**

EBS00125


COOLING SYSTEM

RADIATOR

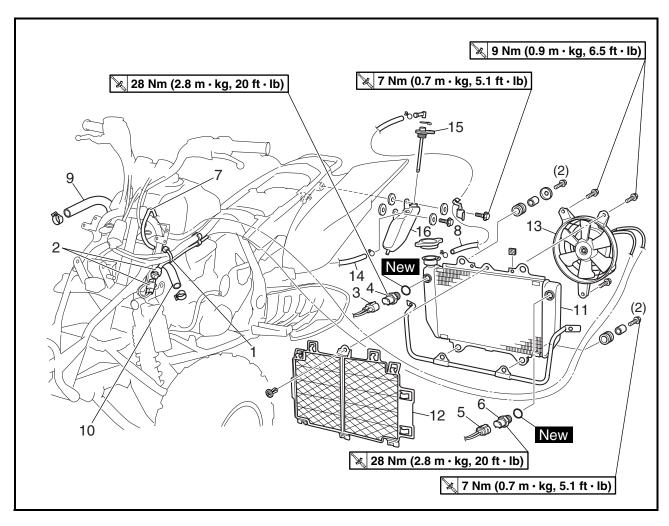


Order	Job/Part	Q'ty	Remarks
	Removing the radiator		Remove the parts in the order listed.
	Seat/fuel tank cover/side covers (left		Refer to "SEAT, FENDERS AND FUEL
	and right)/front fender		TANK" in chapter 3.
	Coolant		Drain.
1	Plastic band	1	
2	Radiator fan coupler	1	Disconnect.
3	Thermo switch 1 coupler	1	Disconnect.
4	Thermo switch 1	1	
5	Thermo switch 2 coupler	1	Disconnect.
6	Thermo switch 2	1	
7	Radiator fan breather hose	1	
8	Coolant reservoir hose	1	
9	Radiator outlet hose	1	
10	Radiator inlet hose	1	



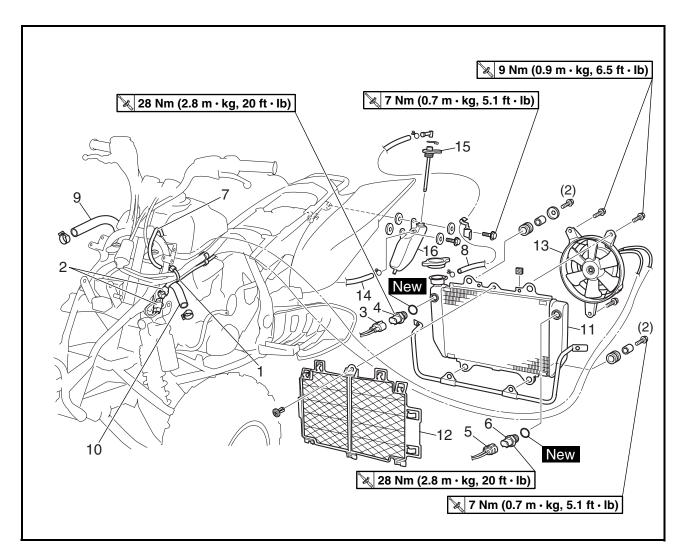

Order	Job/Part	Q'ty	Remarks
11	Radiator	1	
12	Radiator grill	1	
13	Radiator fan	1	
14	Coolant reservoir breather hose	1	
15	Coolant reservoir cap	1	
16	Coolant reservoir	1	
			For installation, reverse the removal pro-
			cedure.



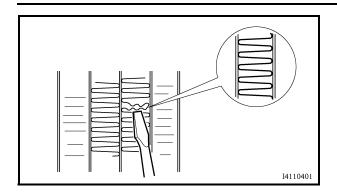

CHECKING THE RADIATOR

- 1. Check:
- radiator fins

Obstruction \rightarrow Clean.


Apply compressed air to the rear of the radiator.

Damage \rightarrow Repair or replace.

NOTE:

Straighten any flattened fins with a thin, flathead screwdriver.

- 2. Check:
- radiator hoses
 Cracks/damage → Replace.

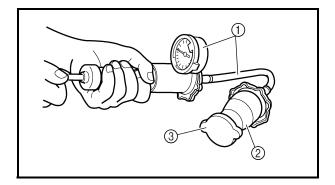

3. Measure:

radiator cap opening pressure
 Below the specified pressure → Replace
 the radiator cap.



Radiator cap opening pressure 107.9 ~ 137.3 kPa (1.079 ~ 1.373 kg/cm², 15.35 ~ 19.53 psi)

 a. Install the radiator cap tester ① and radiator cap tester adapter ② to the radiator cap ③.



Radiator cap tester P/N. YU-24460-01, 90890-01325 Radiator cap tester adapter P/N. YU-33984, 90890-01352


b. Apply the specified pressure for ten seconds and make sure there is no drop in pressure.

- 4. Check:
- radiator fan

Damage \rightarrow Replace.

Malfunction \rightarrow Check and repair.

Refer to "COOLING SYSTEM" in chapter 8.




INSTALLING THE RADIATOR

- 1. Fill:
- cooling system
 (with the specified amount of the recommended coolant)

 Refer to "CHANGING THE COOLANT" in chapter 3.
- 2. Check:
- cooling system
 Leaks → Repair or replace any faulty part.




WATER PUMP

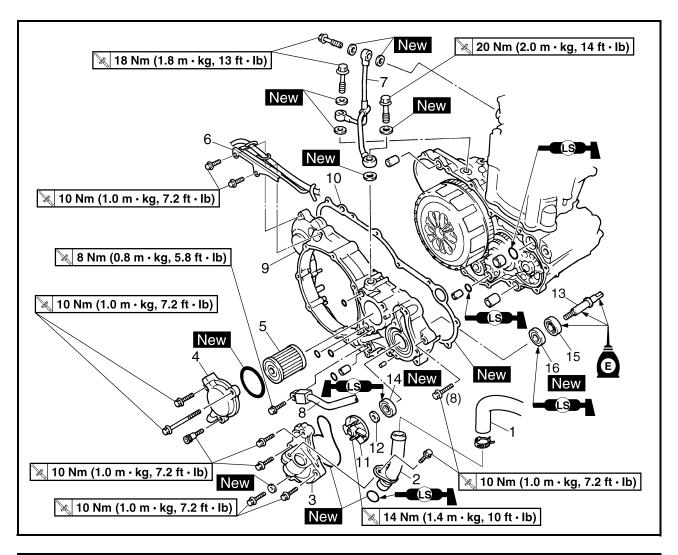

Order	Job/Part	Q'ty	Remarks
	Removing the water pump		Remove the parts in the order listed.
	Engine oil		Drain.
	Coolant		Drain.
	Exhaust pipe		Refer to "ENGINE REMOVAL" in chapter 4.
	Rear brake light switch/footrest (right)		Refer to "FRONT AND REAR BRAKES" in chapter 7.
	Clutch cover		Refer to "CLUTCH" in chapter 4.
1	Radiator outlet hose	1	
2	Water pump inlet pipe	1	
3	Water pump housing	1	
4	Oil filter element cover	1	
5	Oil filter element	1	
6	Parking brake holder	1	
7	Oil delivery pipe 1	1	




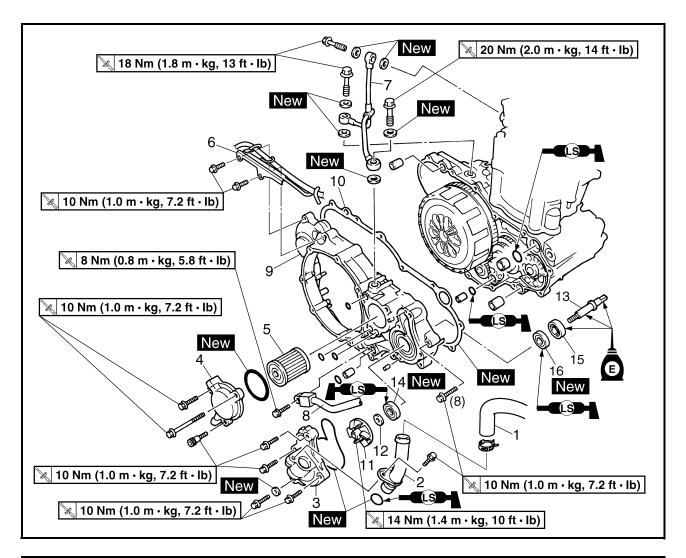

Order	Job/Part	Q'ty	Remarks
8	Oil hose 1	1	
9	Right crankcase cover	1	
10	Gasket	1	
11	Impeller	1	
12	Washer	1	
13	Impeller shaft	1	
14	Oil seal	1	
15	Bearing	1	
16	Oil seal	1	
			For installation, reverse the removal pro-
			cedure.

WATER PUMP




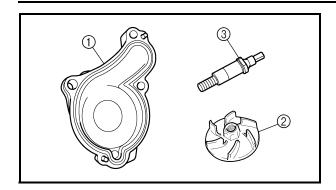

FBS00139


CHECKING THE WATER PUMP

- 1. Check:
- water pump housing ①
- impeller ②
- impeller shaft $\cent{@}$ Cracks/damage/wear $\ensuremath{\rightarrow}$ Replace.
- 2. Check:
- oil seal New
- water pump inlet pipe
 Cracks/damage/wear → Replace.
- bearing $\text{Rough movement} \rightarrow \text{Replace}.$




CARBURETOR


CARBURETOR

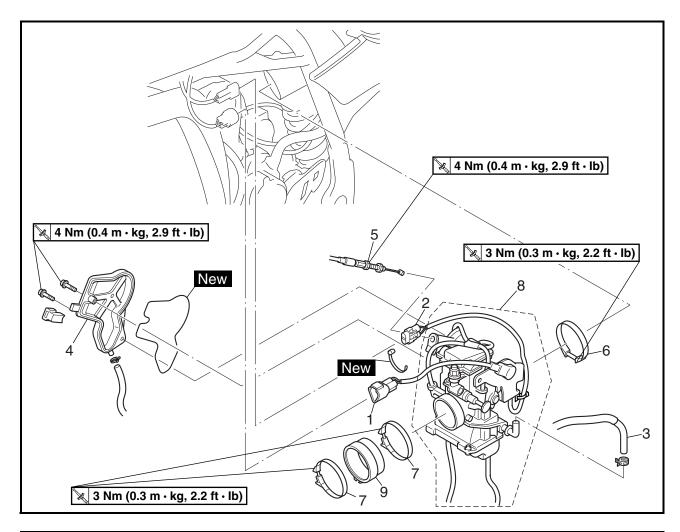


Order	Job/Part	Q'ty	Remarks
	Removing a carburetor		Remove the parts in the order listed.
	Seat/fuel tank cover/side covers (left		Refer to "SEAT, FENDERS AND FUEL
	and right)		TANK" in chapter 3.
1	Throttle position sensor coupler	1	Disconnect.
2	Carburetor switch coupler	1	Disconnect.
3	Fuel hose (carburetor side)	1	
4	Throttle cable cover	1	
5	Throttle cable	1	
6	Clamp	1	Loosen. 7 Refer to "INSTALLING
7	Clamp	2	Loosen. THE CARBURETOR
8	Carburetor	1	JOINT" and "INSTALL-
9	Carburetor joint	1	☐ ING THE CARBURE-
			TOR".
			For installation, reverse the removal pro-
			cedure.

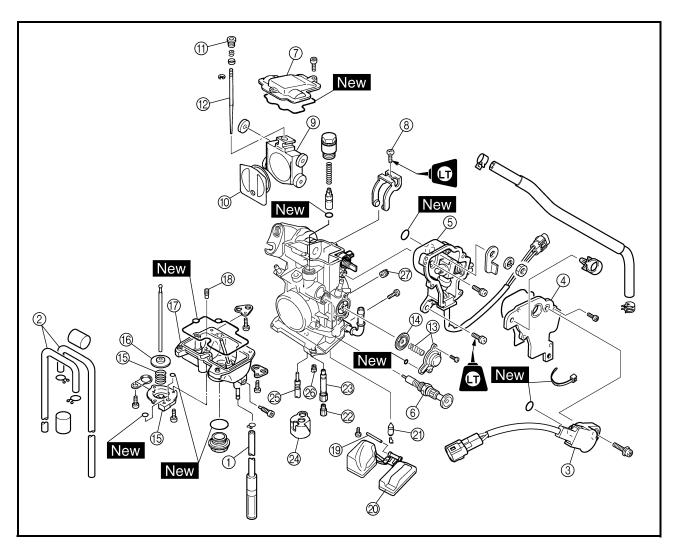

Order	Job/Part	Q'ty	Remarks
	Disassembling the carburetor		Remove the parts in the order listed.
1	Drain hose	1	
2	Air vent hose	2	
3	Throttle position sensor	1	
4	Cover	1	
5	Carburetor switch/throttle stop screw assembly	1	
6	Starter plunger	1	
7	Carburetor top cover	1	
8	Screw (throttle shaft)	1	
9	Throttle valve	1	
10	Throttle valve plate	1	

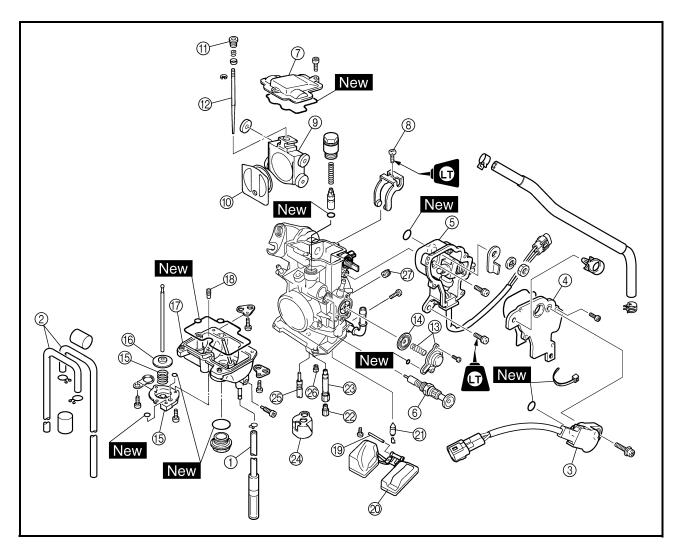

Order	Job/Part	Q'ty	Remarks
11)	Needle holder	1	
12	Jet needle	1	
13	Cover/spring	1/1	
14)	Pilot air diaphragm	1	
15)	Cover/spring	1/1	
16	Accelerator pump diaphragm	1	
17	Float chamber	1	
18)	Accelerator jet	1	
19	Float pin	1	
20	Float	1	

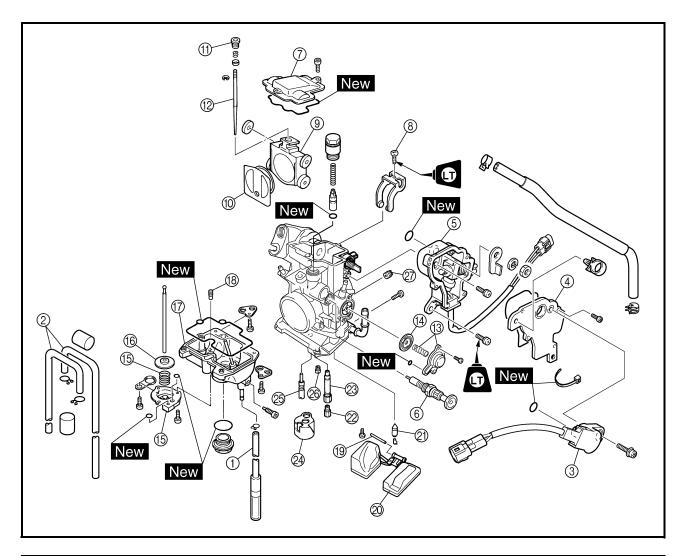


Order	Job/Part	Q'ty	Remarks
21	Needle valve	1	
22	Main jet	1	
23	Needle jet	1	
24	Spacer	1	
25	Pilot jet	1	
26	Starter jet	1	
27	Pilot air jet	1	
			For assembly, reverse the disassembly
			procedure.

DISASSEMBLING THE CARBURETOR

NOTE:

Before disassembling the carburetor, make sure to note the number of times the pilot screw is turned out from the seated position to its set position.

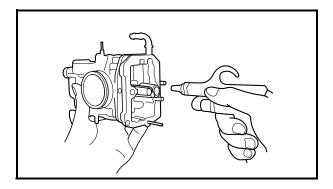


EBS00148


CHECKING THE CARBURETOR

- 1. Check:
- · carburetor body
- float chamber
 Cracks/damage → Replace.
- fuel passage
 Contamination → Clean as indicated.
- fuel chamber body
 Contamination → Clean.

- Wash the carburetor in a petroleum based solvent. Do not use any caustic carburetor cleaning solution.
- b. Blow out all of the passages and jets with compressed air.

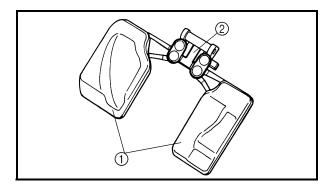


- 2. Check:
 - float (1)
- float tang ②
 Damage → Replace.

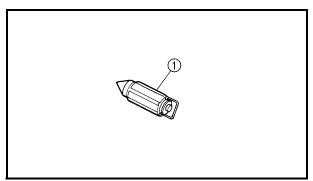


- 3. Check:
- · valve seat
- needle valve ①
 Contamination → Clean.
 Wear/damage → Replace the carburetor assembly.

CARBURETOR




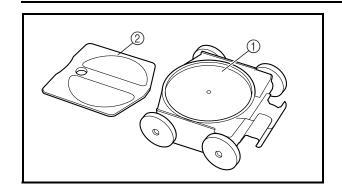

- 4. Check:
- throttle valve (1)
- throttle valve plate ②Scratches/wear/damage \to Replace.

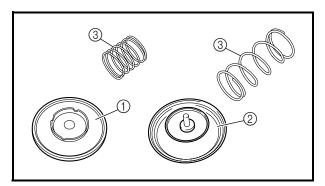


- 5. Check:
- accelerator pump diaphragm ①
- pilot jet diaphragm ②
- spring ③

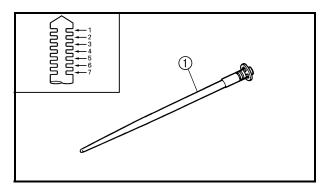

- 6. Check:
- jet needle ①
 Bends/wear/damage → Replace.
- clip groove
 Free play/wear → Replace.
- · clip position



Standard clip position No.4 groove

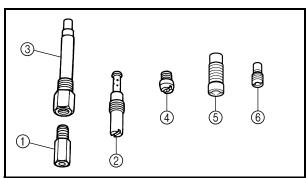



- 7. Check:
- main jet (1)
- pilot jet ②
- needle jet ③
- starter jet ④
- pilot air jet (5)
- accelerator jet ⑥
 - Bends/wear/damage \rightarrow Replace.

Blockage \rightarrow Blow out the jets with compressed air.

- 8. Check:
- throttle valve movement ①
 Sticks → Replace the throttle valve guide and the throttle valve.

Insert the throttle valve into the carburetor body, and check for free movement.

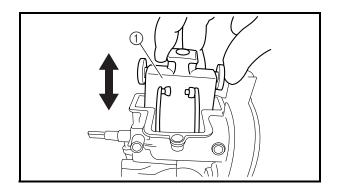

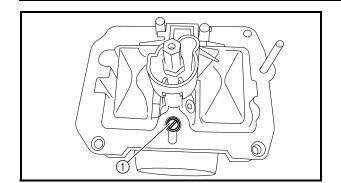

ASSEMBLING THE CARBURETOR


CAUTION:


Before reassembling, wash all of the parts in a clean petroleum based solvent.

- 1. Install:
- pilot screw 1

NOTE: _

Before assembling the carburetor, make sure to turn out the pilot screw the same number of times, as noted before disassembly, from the seated position to the set position.

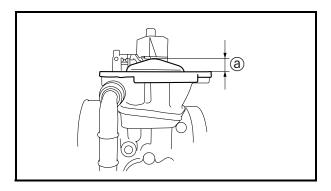

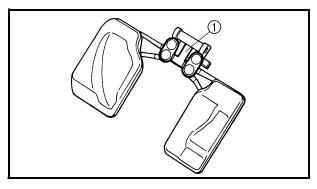

2. Measure:

float height ⓐ
 Out of specification → Adjust.



Float height (F.H) 8.0 mm (0.31 in)


- a. Hold the carburetor in an upside down position.
- b. Measure the distance from the front mating surface of the float chamber (gasket removed) to the top of the float.


NOTE:

The float arm should be resting on the needle valve, but not compressing it.

- c. If the float height is not within the specification, check the valve seat and needle valve.
- d. If either is worn, replace the carburetor assembly.
- e. If both are fine, adjust the float height by bending the float tang ① on the float.
- f. Recheck the float height.



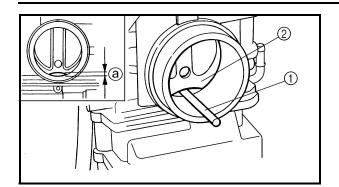

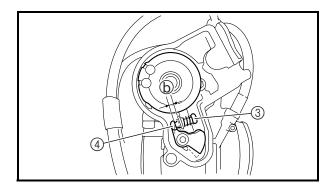

ADJUSTING THE ACCELERATOR PUMP TIMING

- 1. Adjust:
- accelerator pump timing

NOTE:


Insert a rod ① with an outer diameter equal to the specified throttle valve height ② under the throttle valve plate ② to achieve the specified

value.



Throttle valve height 3.40 mm (0.134 in)

- a. Fully turn in the accelerator pump adjusting screw ③.
- b. Check that the link lever 4 has free play by pushing lightly on it.
- Gradually turn out the adjusting screw while moving the link lever until the lever has no free play.

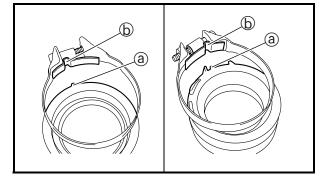

INSTALLING THE CARBURETOR JOINT

- 1. Install:
- clamp

NOTE:


Align the projection ⓐ on the carburetor joint with the slot ⓑ in the clamp.

2. Install:

carburetor joint


NOTE: _

Align the projection ⓐ on the cylinder head with the slot ⓑ in the carburetor joint.

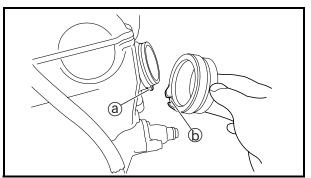

CARBURETOR



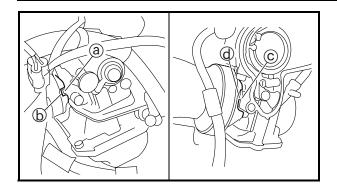

INSTALLING THE CARBURETOR

- 1. Install:
- carburetor

NOTE: ___

Align the projection ⓐ on the carburetor with the slot ⓑ in the carburetor joint, and then align the projection ⓒ on the carburetor with the slot ⓓ in the air intake duct.


- 2. Install:
- · throttle cable
- throttle cable cover
- 3. Adjust:
- throttle lever free play
 Refer to "ADJUSTING THE THROTTLE
 LEVER FREE PLAY" in chapter 3.
- 4. Adjust:
- engine idling speed
 Refer to "ADJUSTING THE ENGINE IDLING SPEED" in chapter 3.

EAS00502

CHECKING AND ADJUSTING THE THROTTLE POSITION SENSOR

NOTE:

Before adjusting the throttle position sensor, the engine idling speed should be properly adjusted.

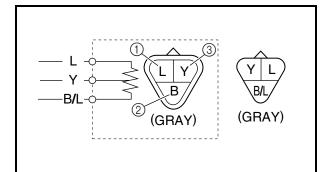

- 1. Check:
- throttle position sensor
- a. Turn the main switch to "ON".
- b. Connect the pocket tester (20 V DC) to the throttle position sensor.

Tester positive lead → blue ①
Tester negative lead → black ②

c. Check the throttle position sensor input voltage.

Out of specification \rightarrow Check the wire harness between battery and C.D.I. unit and throttle position sensor.




Throttle position sensor input voltage

5 V (blue and black)

CARBURETOR



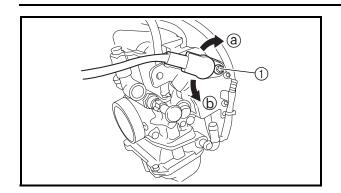

- 2. Adjust:
- throttle position sensor angle

a. Loosen the throttle position sensor screw

- b. Turn the throttle position sensor in direction
 a or b until the specified throttle position sensor output voltage is indicated on the pocket tester.
- c. Connect the pocket tester (20 V DC) to the throttle position sensor.

Tester positive lead \rightarrow yellow ③ Tester negative lead \rightarrow black ②

d. Check the throttle position sensor output voltage.

Out of specification \rightarrow Adjust or replace.



Throttle position sensor output voltage

0.58 ~ 0.78 V (yellow and black)

NOTE: _

When checking the throttle position sensor, it must be connected to the throttle position sensor coupler on the wire harness.


- 3. Tighten:
- throttle position sensor screw



CHASSIS


FRONT AND REAR WHEELS

FRONT WHEELS

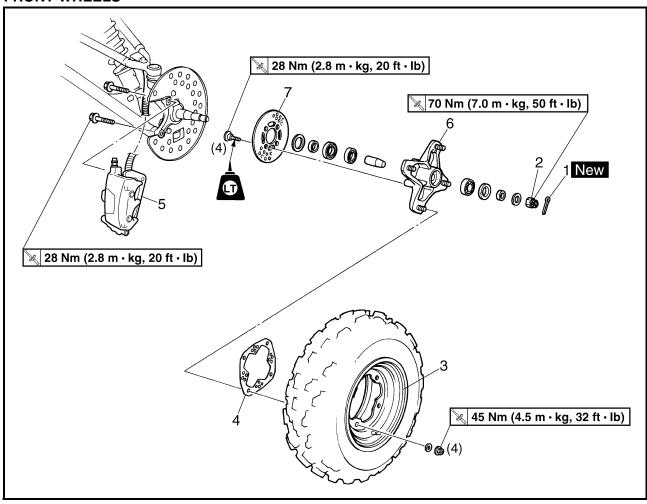

Order	Job/Part	Q'ty	Remarks
	Removing the front wheels		Remove the parts in the order listed. The following procedure applies to both of the front wheels. Place the machine on a level surface. ! WARNING Securely support the machine so there is no danger of it falling over.
1 2 3 4	Cotter pin Axle nut Front wheel Brake disc guard (outer)	1 1 1	Refer to "INSTALLING THE WHEEL HUBS". Refer to "INSTALLING THE FRONT WHEELS".




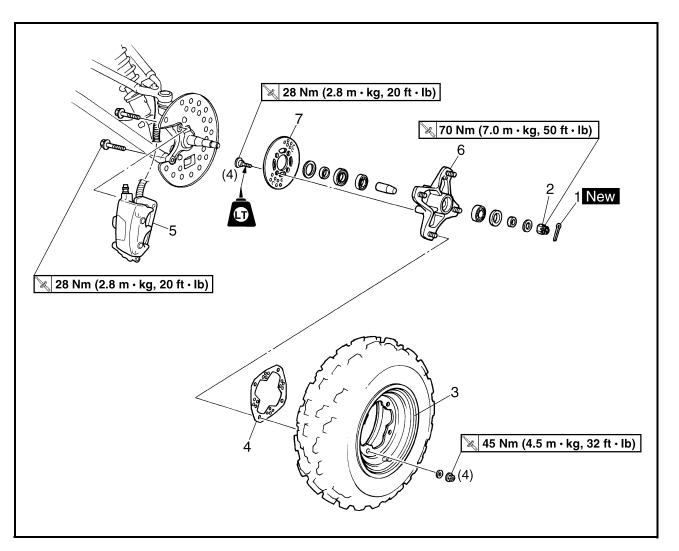

Order	Job/Part	Q'ty	Remarks
5	Brake caliper assembly	1	NOTE:
			Do not squeeze the brake lever when the
			brake caliper is off of the brake discs as
			the brake pads will be forced shut.
6	Wheel hub	1	
7	Brake disc	1	
			For installation, reverse the removal procedure.





REAR WHEELS

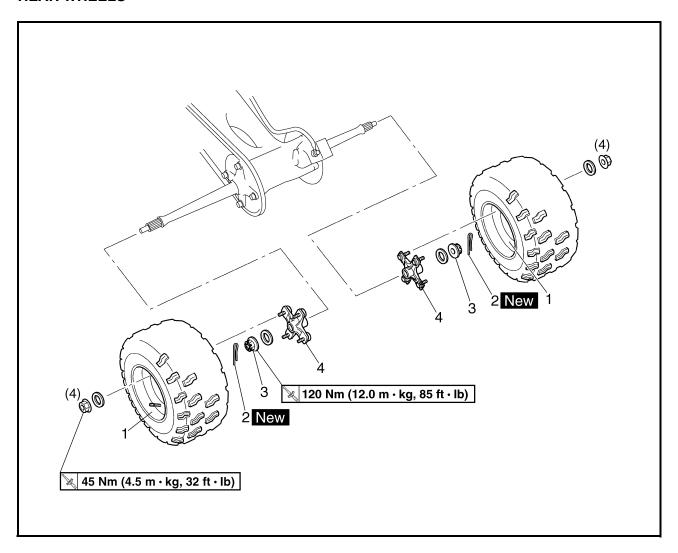



Order	Job/Part	Q'ty	Remarks
	Removing the rear wheels		Remove the parts in the order listed.
			Place the machine on a level surface.
			▲ WARNING
			Securely support the machine so there is no danger of it falling over.
1	Rear wheel	2	
2	Cotter pin	2	Refer to "INSTALLING THE WHEEL
3	Axle nut	2	☐ HUBS".
4	Wheel hub	2	
			For installation, reverse the removal procedure.



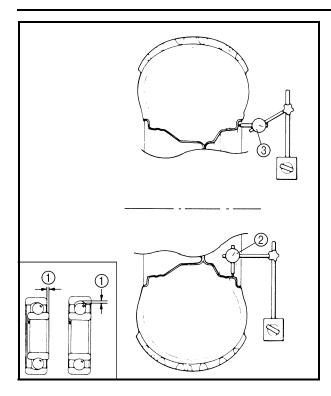

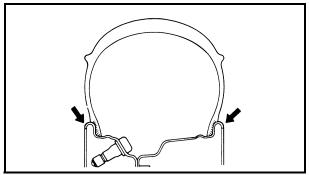

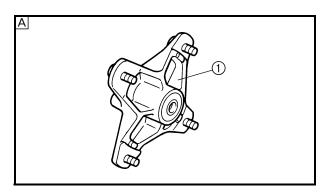

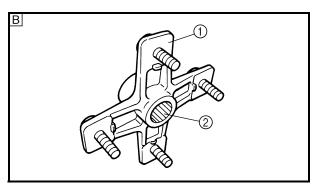

EBS00383

CHECKING THE WHEELS

- 1. Check:
- wheels
- 2. Measure:
- wheel runout
 Over the specified limit → Replace the wheel or check the wheel bearing play ①.



Wheel runout limit

Radial ②: 2.0 mm (0.08 in) Lateral ③: 2.0 mm (0.08 in)

- 3. Check:
- wheel balance
 Out of balance → Adjust.

⚠ WARNING


After replacing the tire, ride conservatively to allow the tire to be properly seated in the rim. Failure to do so may cause an accident resulting in machine damage and possible operator injury.

FBS00385

CHECKING THE WHEEL HUBS

- 1. Check:
- wheel hubs 1 Cracks/damage \rightarrow Replace.
- splines (wheel hub) ②
 Wear/damage → Replace the wheel hub.
- A Front
- **B** Rear



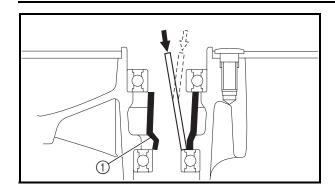

- 2. Check:
- \bullet wheel bearings Wheel hub play/wheel turns roughly \rightarrow Replace.

o Clean wheel hub exterior

- a. Clean wheel hub exterior.
- b. Drive bearing out by pushing spacer aside and tapping around perimeter of bearing inner race. Use soft metal drift punch and hammer. The spacer ① "floats" between bearings. Remove both bearings as described.


WARNING

Eye protection is recommended when using striking tools.

c. To install the wheel bearings, reverse the above sequence. Use a socket that matches outside diameter of bearing outer race to drive in bearing.

CAUTION:

Do not strike the center race or balls of the bearing. Contact should be made only with the outer race.

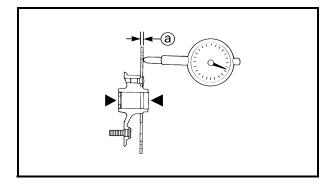

EBS00389

CHECKING THE BRAKE DISCS

- 1. Check:
- brake discs
 Galling/damage → Replace.
- 2. Measure:
- brake disc deflection
 Out of specification → Check the wheel
 runout.




Brake disc maximum deflection Front: 0.10 mm (0.004 in) Rear: 0.10 mm (0.004 in)

brake disc thickness ⓐ
 Out of specification → Replace.



Brake disc minimum thickness 3 mm (0.12 in)



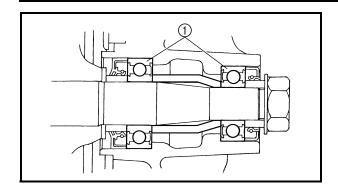


INSTALLING THE FRONT WHEEL HUB BEARINGS

- 1. Install:
- bearings (1)

NOTE: _

Face the oil seal side of the bearing inward.

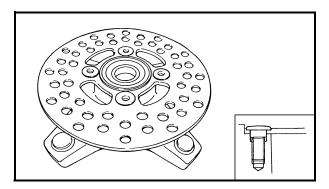


INSTALLING THE FRONT BRAKE DISCS

- 1. Install:
- brake discs

NOTE: _

Install the brake disc with its spot-faced side facing the bolt heads.

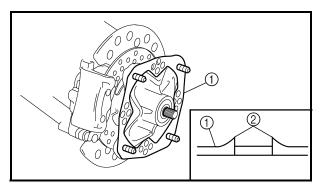


EBS00303

INSTALLING THE FRONT WHEELS

- 1. Install:
- brake disc guards (outer) ①

NOTE: _

Install the brake disc guard (outer) with punched burrs ② on the wheel hub side.

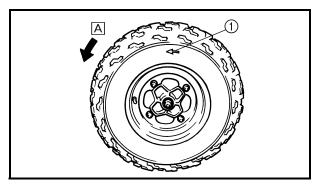


- 2. Install:
- wheels

NOTE:

The arrow mark ① on the must point in the direction of rotation A of the wheel.



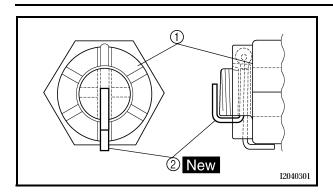

EBS00390

INSTALLING THE WHEEL HUBS

- 1. Install:
- front axle nuts ①

> 70 Nm (7.0 m ⋅ kg, 50 ft ⋅ lb)

• rear axle nuts 1

| 120 Nm (12.0 m ⋅ kg, 85 ft ⋅ lb)

cotter pins ② New


NOTE: .

Do not loosen the axle nut after torquing it. If the axle nut groove is not aligned with the cotter pin hole, align the groove with the hole by tightening the axle nut.




EBS00382

REAR AXLE AND REAR AXLE HUB

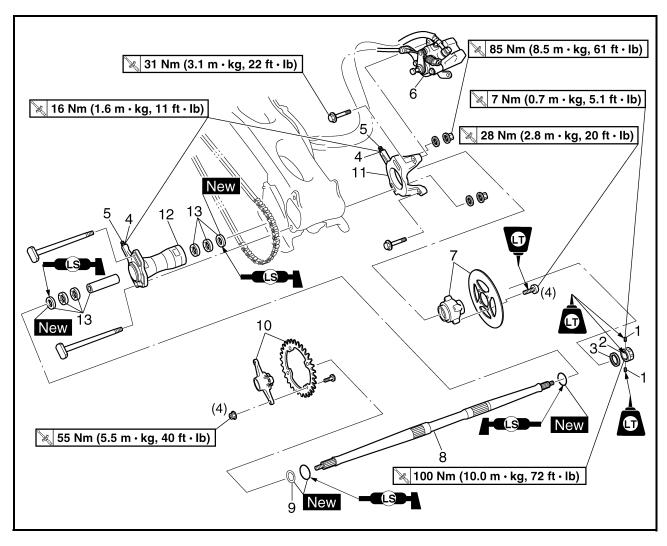


Order	Job/Part	Q'ty	Remarks
	Removing the rear axle and rear axle		Remove the parts in the order listed.
	hub		
	Rear wheels/rear wheel hubs		Refer to "FRONT AND REAR WHEELS".
1	Bolt	2	h
2	Nut	1	Refer to "REMOVING THE REAR
3	Conical spring washer	1	AXLE" and "INSTALLING THE REAR
4	Locknut	2	AXLE".
5	Adjusting bolt	2	
6	Brake caliper	1	NOTE:
			Do not apply the brake pedal and do not
			use the parking brake when the brake
			caliper is off of the brake disc as the
			brake pad will be force shut.




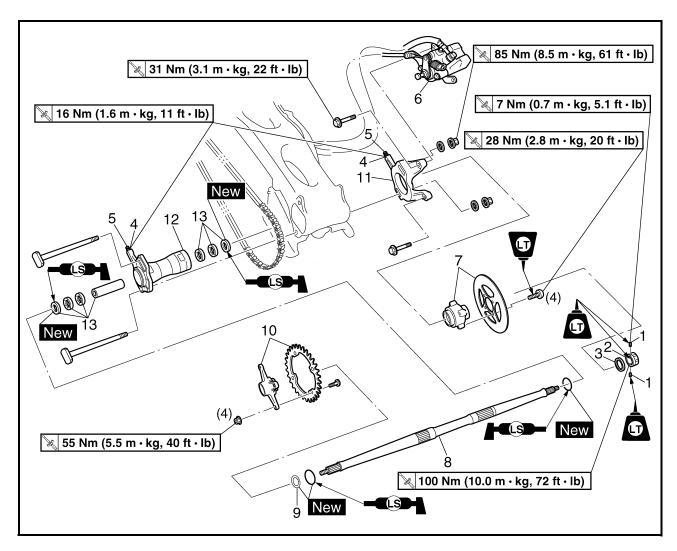

Order	Job/Part	Q'ty	Remarks
7	Brake disc/brake disc bracket	1/1	Refer to "REMOVING THE REAR
8	Rear axle	1	AXLE".
9	Circlip	1	JANEE.
10	Driven sprocket/sprocket bracket	1/1	Refer to "INSTALLING THE DRIVEN SPROCKET".
11	Brake caliper bracket	1	
12	Rear axle hub	1	
13	Spacer/bearing/oil seal	1/2/2	Refer to "INSTALLING THE FRONT
			WHEEL HUB BEARINGS".
			For installation, reverse the removal pro-
			cedure.



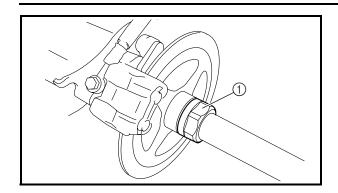

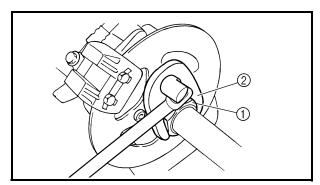

EBS00393

REMOVING THE REAR AXLE

- 1. Place the machine on a level surface.
- 2. Remove:
- bolts
- 3. Loosen:
- nut (1)


NOTE: .

- Apply the brake pedal so that the rear axle does not turn, when loosening the nut.
- Use the PTT wrench 46 or axle nut wrench (46 mm) ②.




PTT wrench 46 P/N. 90890-06588 Axle nut wrench (46 mm) P/N. YM-37134

- 4. Elevate the rear wheels by placing the suitable stand under the frame.
- 5. Remove:
- · rear wheels
- · wheel hubs
- nuts
- washers

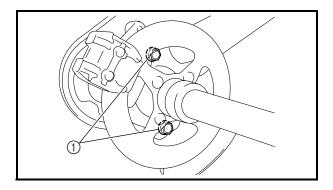



- 6. Loosen:
- rear axle hub nuts (1)

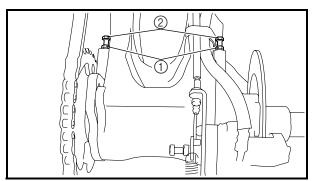


- 7. Loosen:
- locknuts (1)
- adjusting bolts ②



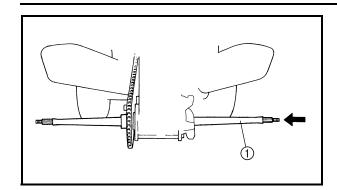

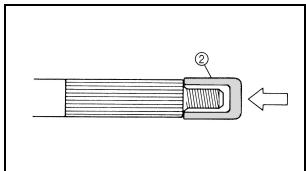

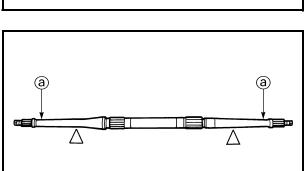

- 8. Remove:
- rear axle ①
 (with driven sprocket)

CAUTION:

- Never directly tap the axle end with a hammer, since this will result in damage to the axle thread and spline.
- Attach a suitable socket ② on the axle end and tap it with a soft hammer, then pull out the rear axle to the right.
- 9. Remove:
- circlip
- driven sprocket bracket

EBS00395

CHECKING THE REAR AXLE

- 1. Check:
- rear axle runout ⓐ
 Out of specification → Replace.

WARNING

Do not attempt to straighten a bent axle.



Rear axle runout limit 1.5 mm (0.06 in)


CHECKING THE DRIVEN SPROCKET

- 1. Check:
- driven sprocket
 Refer to "SWINGARM AND DRIVE
 CHAIN".

CHECKING THE BRAKE DISC

- 1. Check:
- brake disc Refer to "FRONT AND REAR WHEELS".



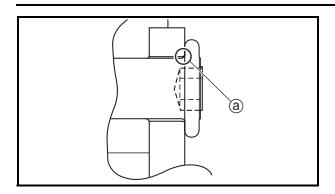


INSTALLING THE DRIVEN SPROCKET

- 1. Install:
 - driven sprocket

NOTE: _

Make sure that the blunt-edged corner ⓐ of the driven sprocket is facing outward.

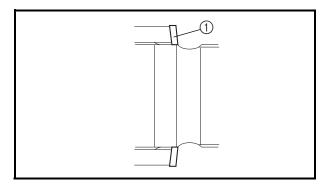


EBS00397

INSTALLING THE REAR AXLE

- 1. Install:
- conical spring washer 1)

NOTE: _

Install the conical spring washer with the convex side of the washer facing outward as shown.

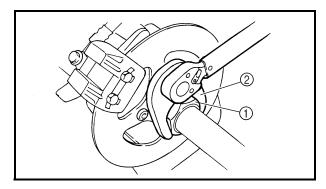

- 2. Tighten:
- nut 1

 a. Tighten the nut with PTT wrench 46 or rear axle nut wrench ② to specification while holding the rear axle.



PTT wrench 46 P/N. 90890-06588 Axle nut wrench (46 mm) P/N. YM-37134



Nut


100 Nm (10.0 m · kg, 72 ft · lb) LOCTITE®

b. Tighten bolts 3.



Bolt


7 Nm (0.7 m \cdot kg, 5.1 ft \cdot lb) LOCTITE®

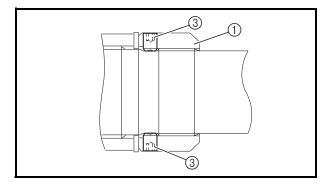



EBS00400

FRONT AND REAR BRAKES

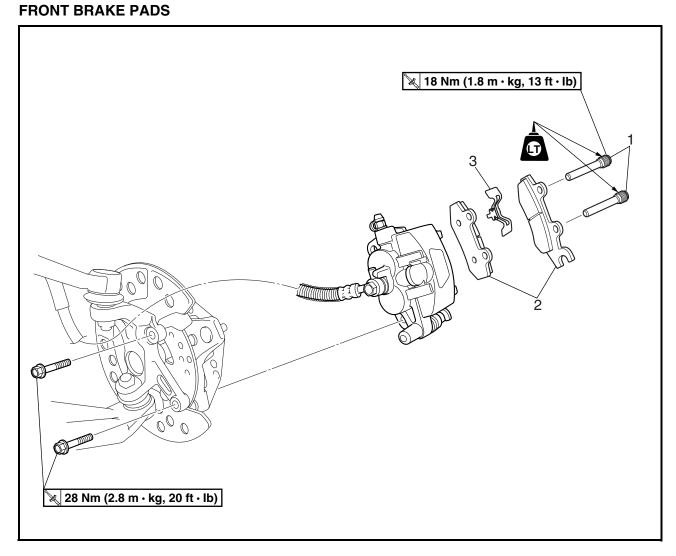


Order	Job/Part	Q'ty	Remarks
	Removing the front brake pads		Remove the parts in the order listed.
1 2 3	Front wheel Brake pad retaining bolt Brake pad Brake pad Brake pad spring	2 2 1	The following procedure applies to both of the front brake calipers. Refer to "FRONT AND REAR WHEELS". Refer to "REPLACING THE FRONT BRAKE PADS". For installation, reverse the removal procedure.



EBS00401

REAR BRAKE PADS

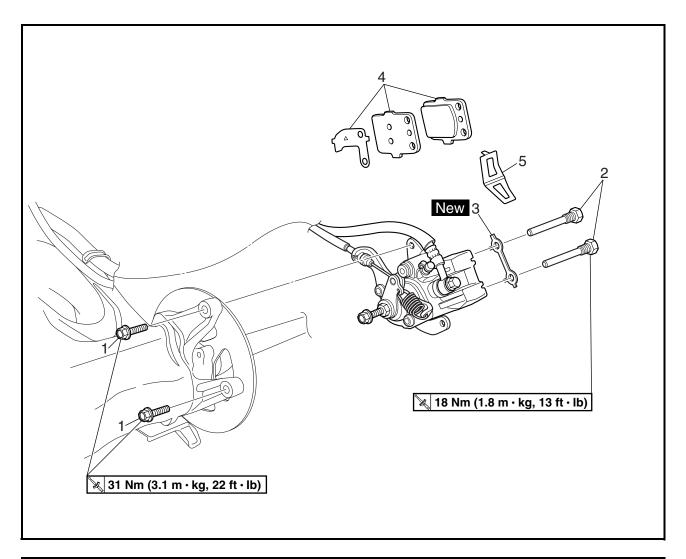

Order	Job/Part	Q'ty	Remarks	
	Removing the rear brake pads		Remove the parts in the order listed.	
1	Brake caliper mounting bolt	2	Refer to "REPLACING THE REAR	
			BRAKE PADS".	
2	Brake pad retaining bolt	2		
3	Lock washer	1		
4	Brake pad/pad shim	2/1		
5	Brake pad spring	1		
			For installation, reverse the removal pro-	
			cedure.	

EBS00402

		_		
CAL		m	NI	п
VAL	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			п

Disc brake components rarely require disassembly.

DO NOT:

- disassemble components unless absolutely necessary;
- use solvents on internal brake components;
- use spent brake fluid for cleaning; (use only clean brake fluid)
- allow brake fluid to come in contact with the eyes, as this may cause eye injury;
- splash brake fluid onto painted surfaces or plastic parts, as this may cause damage;
- disconnect any hydraulic connection, as this would require the entire brake system to be disassembled, drained, cleaned, properly filled and bled after reassembly.


EBS00404

REPLACING THE FRONT BRAKE PADS

The following procedure applies to both of the front brake calipers.

N	\mathbf{C}	т	F٠
1.4	$\mathbf{\circ}$		┗.

It is not necessary to disassemble the brake calipers and brake hoses to replace the brake pads.

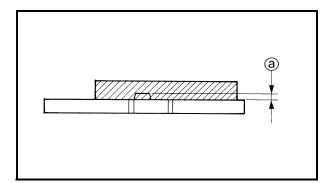


- 1. Remove:
- brake pads
- (a) Wear limit

NOTE:

Replace the brake pads as a set if either is found to be worn to the wear limit.



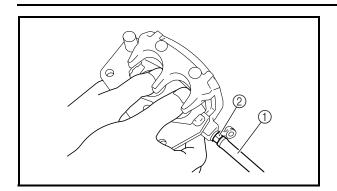

2. Install:

- brake pads
- brake pad spring

NOTE: _

Always install new brake pads and brake pad spring as a set.

- a. Connect a suitable hose ① tightly to the brake caliper bleed screw ②. Put the other end of this hose into an open container.
- b. Loosen the brake caliper bleed screw and, using a finger, push the caliper piston into the brake caliper.
- c. Tighten the brake caliper bleed screw.



Brake caliper bleed screw 6 Nm (0.6 m · kg, 4.3 ft · lb)

- d. Install new brake pads and a new brake pad spring.
- e. Install the retaining bolts and brake caliper.



Brake pad retaining bolt 18 Nm (1.8 m · kg, 13 ft · lb) Brake caliper mounting bolt 28 Nm (2.8 m · kg, 20 ft · lb)

- 3. Check:
- brake fluid level
 Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.
- 4. Check:
- brake lever operation
 Soft or spongy feeling → Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.





EBS00405


REPLACING THE REAR BRAKE PADS

NOTE: _

It is not necessary to disassemble the brake caliper and brake hose to replace the brake pads.

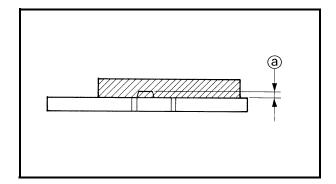

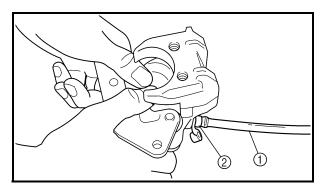

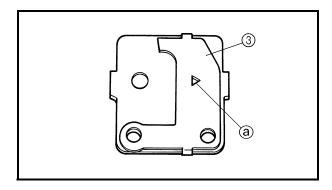

- 1. Remove:
- brake pads
- (a) wear limit

NOTE: .

Replace the brake pads as a set if either is found to be worn to the wear limit.

- 2. Install:
- brake pads
- brake pad spring

NOTE:

Always install new brake pads, brake pad shim and brake pad spring as a set.

- a. Connect a suitable hose ① tightly to the brake caliper bleed screw ②. Put the other end of this hose into an open container.
- b. Loosen the brake caliper bleed screw and, using a finger, push the caliper piston into the brake caliper.
- c. Tighten the brake caliper bleed screw.



Brake caliper bleed screw 6 Nm (0.6 m · kg, 4.3 ft · lb)

d. Install a new brake pad spring, new pad shim ③ and new brake pads.

NOTE:

- The pad shim must be installed toward the piston.
- The arrow mark ⓐ on the pad shim must point in the direction of the disc rotation.
- e. Install the retaining bolts and brake caliper.



Brake pad retaining bolt 18 Nm (1.8 m · kg, 13 ft · lb) Brake caliper mounting bolt 31 Nm (3.1 m · kg, 22 ft · lb)



f. Bend the lock washer tabs along a flat side of the bolts.


- 3. Check:
- brake fluid level
 Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.
- 4. Check:
- brake lever or brake pedal operation
 Soft or spongy feeling → Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.




EBS00407

FRONT BRAKE MASTER CYLINDER

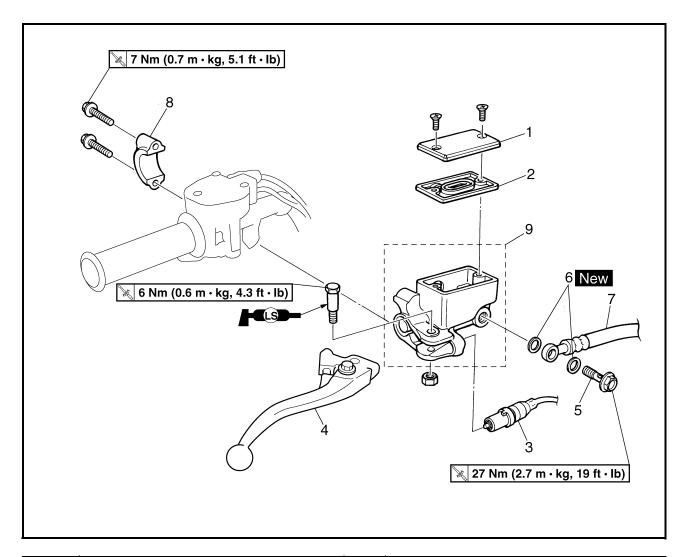

Order	Job/Part	Q'ty	Remarks			
	Removing the front brake master		Remove the parts in the order listed.			
	cylinder					
	Brake fluid		Drain.			
1	Brake fluid reservoir cap	1				
2	Brake fluid reservoir diaphragm	1				
3	Front brake light switch	1				
4	Brake lever	1				
5	Union bolt	1	٦			
6	Copper washer	2	Refer to "INSTALLING			
7	Brake hose	1	Disconnect. THE FRONT BRAKE			
8	Brake master cylinder bracket	1	MASTER CYLINDER".			
9	Brake master cylinder	1	_			
			For installation, reverse the removal pro-			
			cedure.			



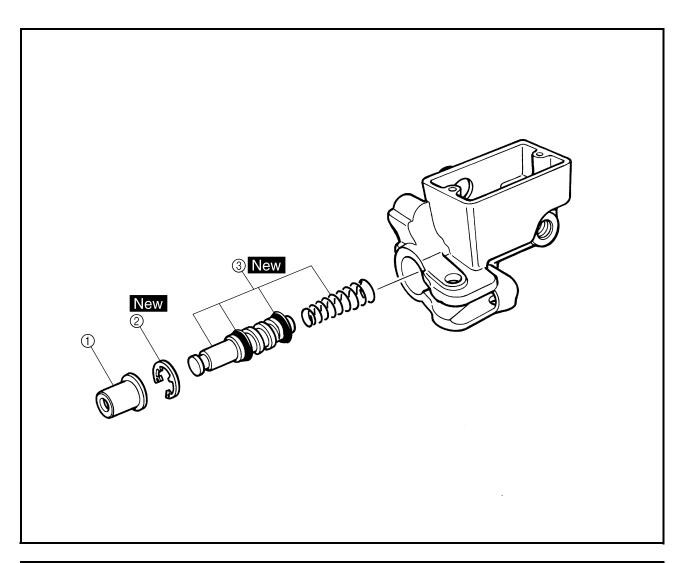


Order	Job/Part	Q'ty	Remarks
	Disassembling the front brake master cylinder		Remove the parts in the order listed.
① ② ③	Dust boot Circlip Brake master cylinder kit	1 1 1	Refer to "ASSEMBLING THE FRONT BRAKE MASTER CYLINDER". For assembly, reverse the disassembly
			procedure.




EBS00410

REAR BRAKE MASTER CYLINDER

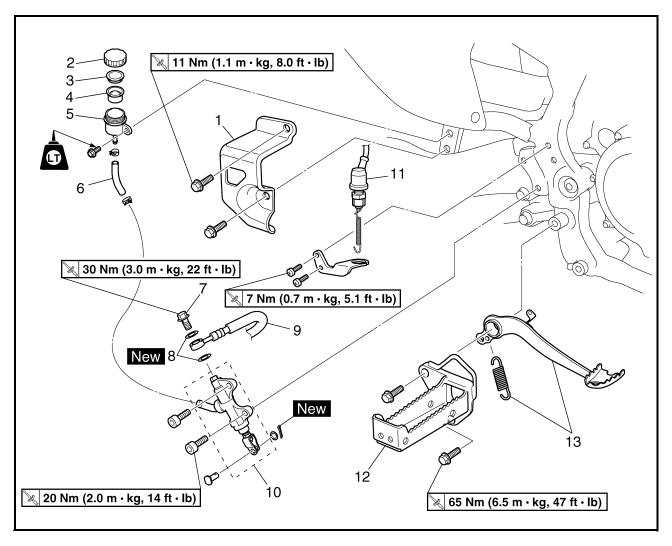


Order	Job/Part	Q'ty	Remarks
	Removing the rear brake master cyl-		Remove the parts in the order listed.
	inder		
	Right foot protector		Refer to "SEAT, FENDERS AND FUEL
			TANK" in chapter 3.
	Brake fluid		Drain.
1	Brake fluid reservoir cover	1	
2	Brake fluid reservoir cap	1	
3	Brake fluid reservoir diaphragm holder	1	
4	Brake fluid reservoir diaphragm	1	
5	Brake fluid reservoir	1	
6	Brake fluid reservoir hose	1	



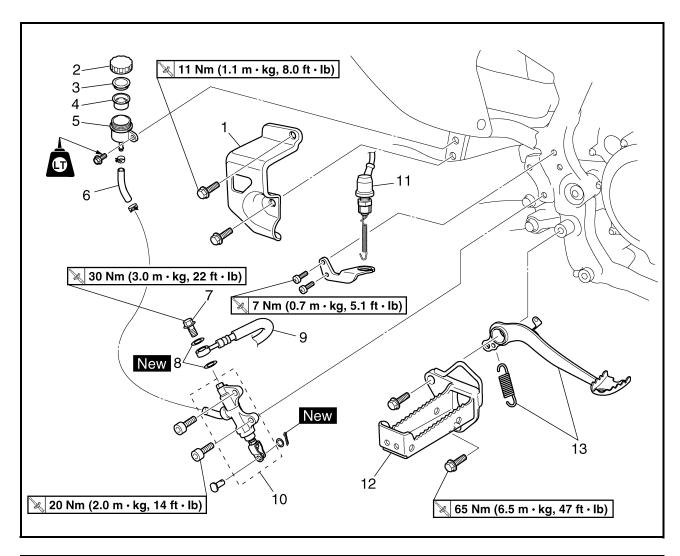


Order	Job/Part	Q'ty	Remarks
7	Union bolt	1	Defer to "INCTALLING
8	Copper washer	2	Refer to "INSTALLING" THE REAR BRAKE MAS-
9	Brake hose	1	Disconnect. TER CYLINDER".
10	Brake master cylinder	1	J TEN OTEINBEN.
11	Rear brake light switch	1	
12	Right footrest	1	
13	Brake pedal/spring	1/1	
			For installation, reverse the removal pro-
			cedure.




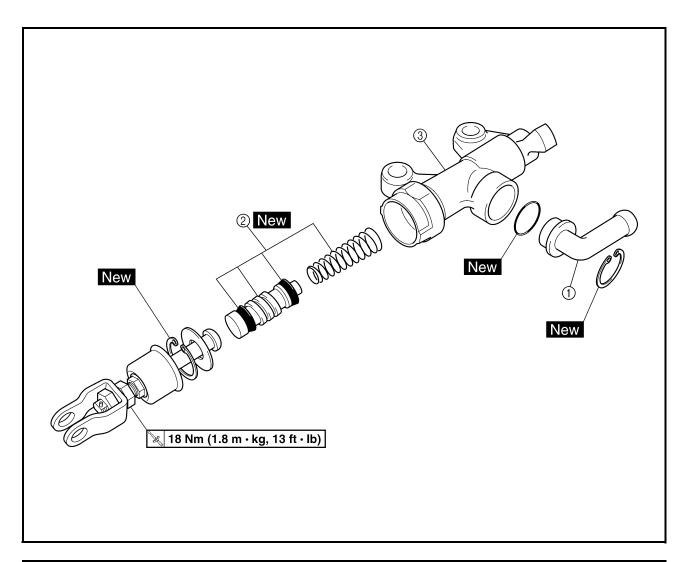

Order	Job/Part	Q'ty	Remarks
	Disassembling the rear brake master cylinder		Remove the parts in the order listed.
1	Hose joint	1	
2	Brake master cylinder kit	1	Refer to "ASSEMBLING THE REAR
3	Brake master cylinder	1	BRAKE MASTER CYLINDER".
			For assembly, reverse the disassembly
			procedure.



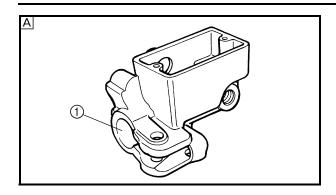


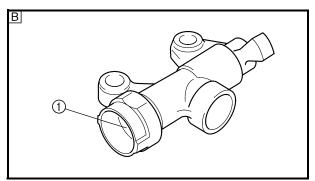




CHECKING THE MASTER CYLINDERS

- 1. Check:
- brake master cylinder ①
 Wear/scratches → Replace the brake master cylinder assembly.
- brake master cylinder body Cracks/damage → Replace.
- brake fluid delivery passage (brake master cylinder body)
 Blockage → Blow out with compressed air.
- A Front
- **B** Rear

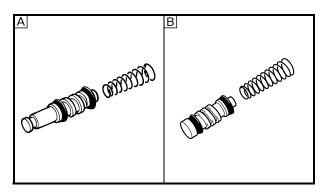

2. Check:


- brake master cylinder kit Scratches/wear/damage → Replace as a set.
- A Front
- **B** Rear

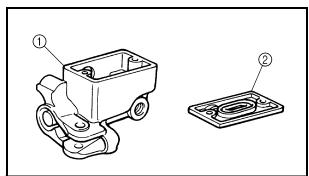

3. Check:

- front brake master cylinder reservoir (1)
- \bullet front brake master cylinder reservoir diaphragm $\ensuremath{\textcircled{2}}$

Cracks/damage \rightarrow Replace.

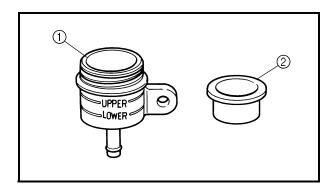

4. Check:

- rear brake fluid reservoir (1)
- rear brake fluid reservoir diaphragm ②
 Cracks/damage → Replace.



EBS00415

ASSEMBLING THE FRONT BRAKE MASTER CYLINDER

WARNING

 All internal brake components should be cleaned and lubricated with new brake fluid only before installation.



Recommended brake fluid DOT 4

 Whenever a master cylinder is disassembled, replace the piston seals and dust seals.

EBS00416

ASSEMBLING THE REAR BRAKE MASTER CYLINDER

WARNING

 All internal brake components should be cleaned and lubricated with new brake fluid only before installation.



Recommended brake fluid DOT 4

- Whenever a master cylinder is disassembled, replace the piston seals and dust seals.
- 1. Install:
- brake master cylinder kit
- nut (1)
- joint ②

NOTE:

Turn the adjusting bolt ③ until the clearance ⓐ is within the specified limits when install the joint ②.




Clearance

2.2 ~ 3.2 mm (0.09 ~ 0.13 in)

- 2. Tighten:
- nut (1)

№ 18 Nm (1.8 m · kg, 13 ft · lb)



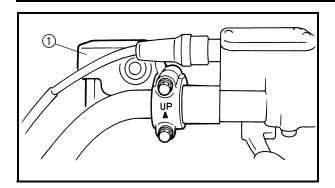

EBS00418


INSTALLING THE FRONT BRAKE MASTER CYLINDER

- 1. Install:
- brake master cylinder (1)

№ 7 Nm (0.7 m · kg, 5.1 ft · lb)

NOTE: .

- The "UP" mark on the brake master cylinder bracket should face up.
- Install the brake master cylinder so that the gaps between the brake master cylinder and the brake master cylinder bracket are equal.

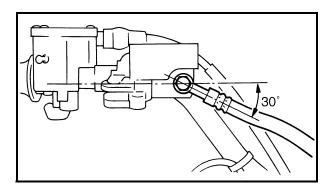

2. Install:

- copper washers New
- brake hose
- union bolt

27 Nm (2.7 m · kg, 19 ft · lb)

NOTE: .

- Tighten the union bolt while holding the brake hose as shown.
- Turn the handlebar to the left and to the right to check that the brake hose does not touch other parts (throttle cable, wire harness, leads, etc.). Correct if necessary.

WARNING

Proper brake hose routing is essential to insure safe machine operation. Refer to "CABLE ROUTING" in chapter 2.

3. Fill:

brake fluid reservoir



Recommended brake fluid DOT 4

CAUTION:

Brake fluid may damage painted surfaces or plastic parts. Always clean up spilled brake fluid immediately.




WARNING

- Use only the designated quality brake fluid: other brake fluids may deteriorate the rubber seals, causing leakage and poor brake performance.
- Refill with the same type of brake fluid: mixing brake fluids may result in a harmful reaction and lead to poor brake performance.
- Be careful that water does not enter the brake master cylinder when refilling.
 Water will significantly lower the boiling point of the brake fluid and may result in vapor lock.
- 4. Air bleed:
- brake system
 Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.
- 5. Check:
- brake fluid level

Brake fluid level is under the "LOWER" level line \rightarrow Add the recommended brake fluid to the proper level.

Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.

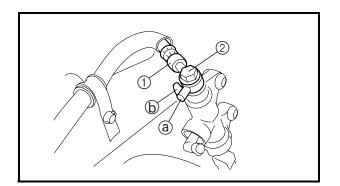

EBS00419

INSTALLING THE REAR BRAKE MASTER CYLINDER

- 1. Install:
- copper washers New
- brake hose 1
- union bolt ② 🗽 30 Nm (3.0 m ⋅ kg, 2.2 ft ⋅ lb)


CAUTION:

When installing the brake hose onto the brake master cylinder, make sure the brake pipe ⓐ touches the projection ⓑ as shown.

⚠ WARNING

Proper brake hose routing is essential to insure safe machine operation. Refer to "CABLE ROUTING" in chapter 2.



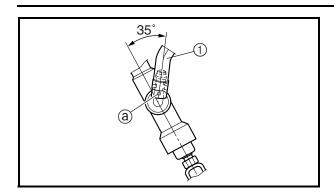

- 2. Install:
- brake fluid reservoir hose (1)

NOTE:

Install the brake fluid reservoir hose with the white paint mark ⓐ facing up as shown.

- 3. Fill:
- brake fluid reservoir



Recommended brake fluid DOT 4

CAUTION:

Brake fluid may damage painted surfaces or plastic parts. Always clean up spilled brake fluid immediately.

WARNING

- Use only the designated quality brake fluid: other brake fluids may deteriorate the rubber seals, causing leakage and poor brake performance.
- Refill with the same type of brake fluid: mixing brake fluids may result in a harmful chemical reaction and lead to poor brake performance.
- Be careful that water does not enter the brake master cylinder when refilling.
 Water will significantly lower the boiling point of the brake fluid and may result in vapor lock.
- 4. Air bleed:
- brake system
 Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.
- 5. Check:
- brake fluid level


Brake fluid level is under the "LOWER" level line \rightarrow Add the recommended brake fluid to the proper level.

Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.




EBS00421

FRONT BRAKE CALIPERS

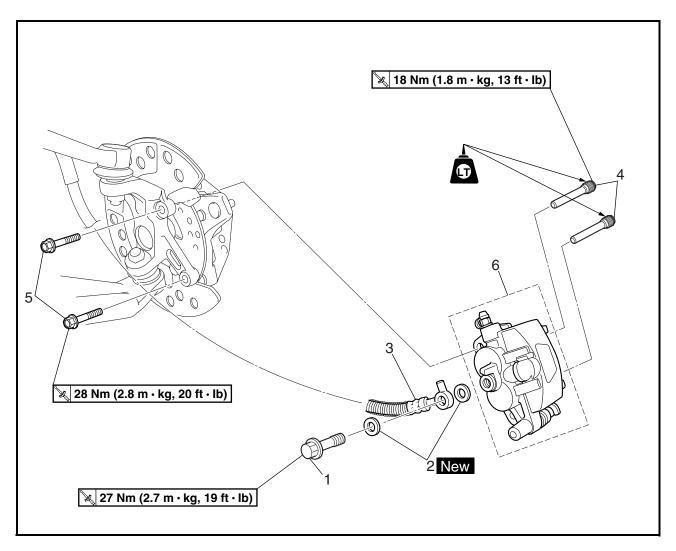

Order	Job/Part	Q'ty	Remarks			
	Removing the front brake calipers		Remove the parts in the order listed.			
			The following procedure applies to both of the front brake calipers.			
	Brake caliper		Drain.			
	Front wheel		Refer to "FRONT AND REAR WHEELS".			
1	Union bolt	1	٦			
2	Copper washer	2	D ("INICTALLING			
3	Brake hose	1	Disconnect. Refer to "INSTALLING THE FRONT BRAKE			
4	Brake pad retaining bolt	2	Loosen. THE FRONT BRAKE CALIPERS".			
5	Brake caliper mounting bolt	2	CALIFERS.			
6	Brake caliper assembly	1				
			For installation, reverse the removal pro-			
			cedure.			



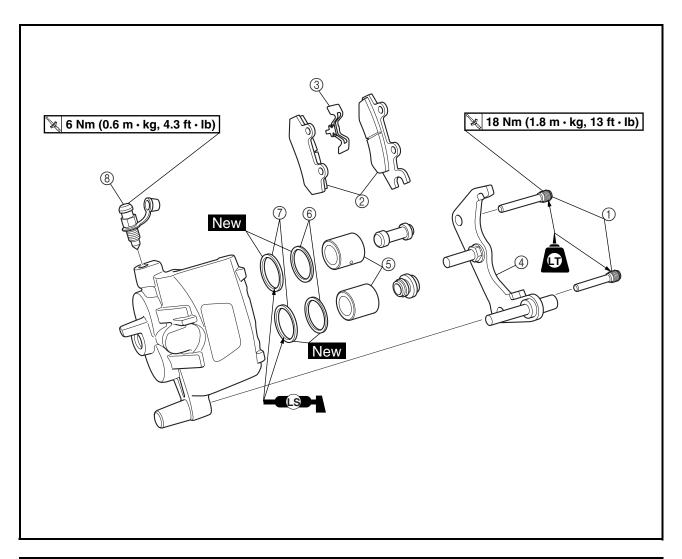


Order	Job/Part	Q'ty	Remarks
	Disassembling the front brake cali-		Remove the parts in the order listed.
	pers		
			The following procedure applies to both
			of the front brake calipers.
1	Brake pad retaining bolt	2	
2	Brake pad	2	
3	Brake pad spring	1	
4	Caliper bracket	1	
(5)	Caliper piston	2	Refer to "DISASSEMBLING THE
6	Dust seal	2	FRONT AND REAR BRAKE CALI-
7	Caliper piston seal	2	PERS" and "ASSEMBLING THE
			FRONT BRAKE CALIPERS".
8	Bleed screw	1	
			For assembly, reverse the disassembly
			procedure.




EBS00424

REAR BRAKE CALIPER

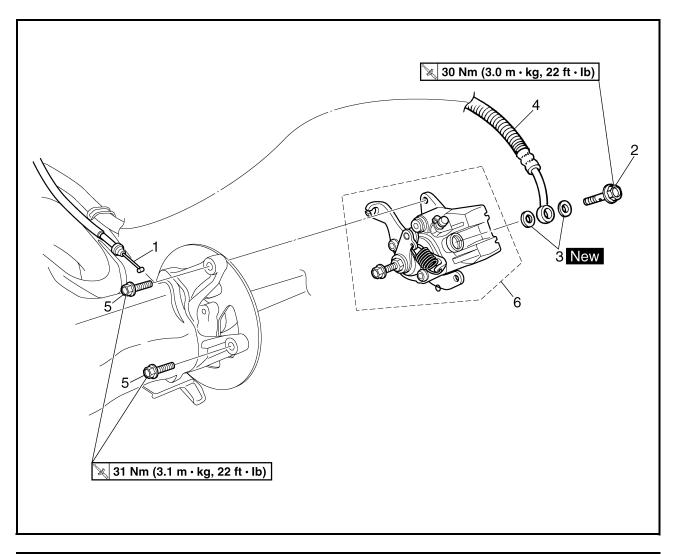


Order	Job/Part	Q'ty	Remarks		
	Removing the rear brake caliper		Remove the parts in the order listed.		
	Brake fluid		Drain.		
1	Parking brake cable	1	Disconnect.		
			Refer to "RE	EMOVING THE PARKING	
			BRAKE CABLE".		
2	Union bolt	2	٦		
3	Copper washer	2		Refer to "INSTALLING	
4	Brake hose	1	Disconnect.	THE REAR BRAKE CALI-	
5	Brake caliper mounting bolt	2	PER".		
6	Brake caliper assembly	1]		
			For installation, reverse the removal pro		
			cedure.		



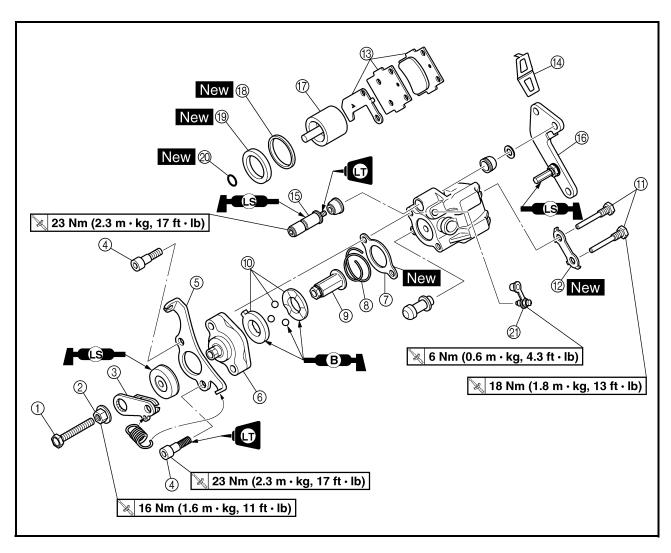

Order	Job/Part	Q'ty	Remarks
	Disassembling the rear brake cali-		Remove the parts in the order listed.
	per		
1	Adjusting bolt	1	
2	Locknut	1	
3	Parking brake arm	1	
4	Parking brake case mounting bolt	2	
(5)	Parking brake case bracket	1	
6	Parking brake case	1	
7	Gasket	1	
8	Spring	1	
9	Nut	1	
10	Bearing	1	



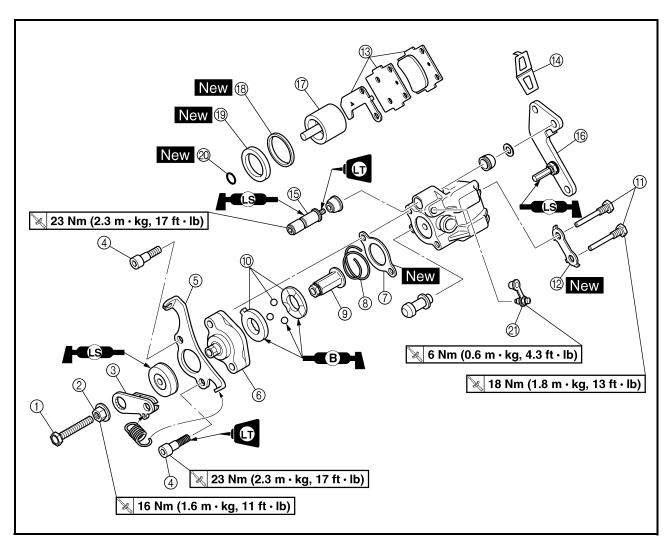

Order	Job/Part	Q'ty	Remarks
(1)	Brake pad holding bolt	2	
12	Lock washer	1	
13	Brake pad/pad shim	2/1	
14)	Brake pad spring	1	
15)	Retaining bolt	1	
16	Caliper bracket	1	
17)	Brake caliper piston	1	Refer to "DISASSEMBLING THE
18)	Dust seal	1	FRONT AND REAR BRAKE CALI-
19	Caliper piston seal	1	PERS" and "ASSEMBLING THE REAR
20	O-ring	1	BRAKE CALIPER".
21	Bleed screw	1	
			For assembly, reverse the disassembly
			procedure.




REMOVING THE PARKING BRAKE CABLE

- 1. Loosen:
- nut
- · adjusting bolt
- 2. Disconnect:
- parking brake cable (from parking brake lever)
- 3. Disconnect:
- parking brake cable (from rear brake)

EBS00/27

DISASSEMBLING THE FRONT AND REAR BRAKE CALIPERS


- 1. Remove:
- brake caliper pistons
- dust seals (1)
- caliper piston seals 2
- A Front
- **B** Rear





WARNING

- Never try to pry out the caliper piston.
- Cover the caliper piston with a rag. Be careful not to get injured when the piston is expelled from the caliper cylinder.

b. Remove the caliper piston seals.

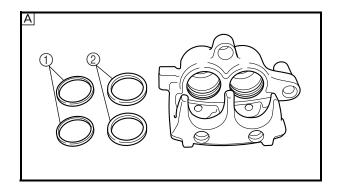

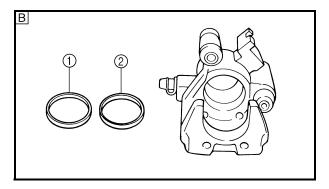

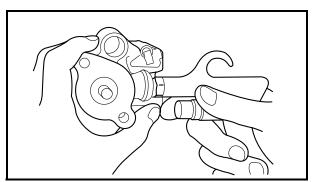




EBS00429


CHECKING THE FRONT AND REAR BRAKE CALIPERS

Recommended brake component replacement schedule				
Brake pads As required				
Piston seals, dust seals	Every two years			
Brake hoses Every four year				
Brake fluid	Replace when brakes are disassembled.			

WARNING

All internal brake components should be cleaned in new brake fluid only. Do not use solvents as they will cause seals to swell and distort.

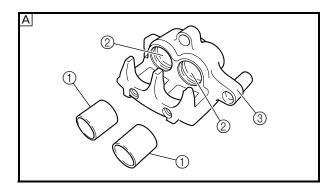

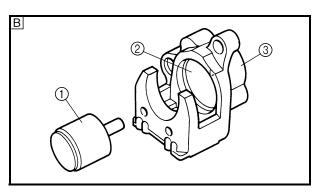

- 1. Check:
- brake caliper pistons ①
 Scratches/rust/wear → Replace the brake caliper assembly.
- brake caliper cylinders ②
 Wear/scratches → Replace the brake caliper assembly.
- brake caliper body ③
 Cracks/damage → Replace.
- brake fluid delivery passage (brake caliper body)
 Blockage → Blow out with compressed air.

⚠ WARNING

Replace the caliper piston seals and dust seals whenever the brake caliper is disassembled.

- A Front
- B Rear



ASSEMBLING THE FRONT BRAKE **CALIPERS**

The following procedure applies to both of the front brake calipers.

WARNING

• All internal brake components should be cleaned and lubricated with new brake fluid only before installation.



Recommended brake fluid DOT 4

 Replace the caliper piston seal whenever a brake caliper is disassembled.



- caliper piston seals ① New
- dust seals ② New



• brake caliper pistons (1)



New

ASSEMBLING THE REAR BRAKE CALIPER

WARNING


• All internal brake components should be cleaned and lubricated with new brake fluid only before installation.




Recommended brake fluid DOT 4

 Replace the caliper piston seal whenever a brake caliper is disassembled.


- 1. Install:
- O-ring (1) New
- caliper piston seal ② New

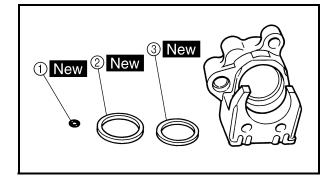



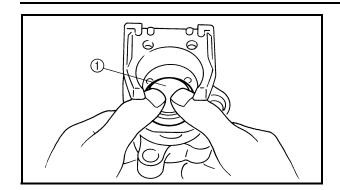


- 2. Install:
- brake caliper piston ①

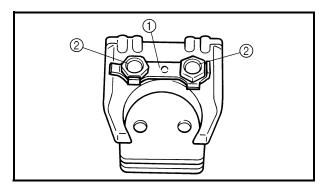


- 3. Install:
- lock washer (1)
 New
- brake pad holding bolts (2)

18 Nm (1.8 m ⋅ kg, 13 ft ⋅ lb)

4. Bend the lock washer tabs along a flat side of the bolts.

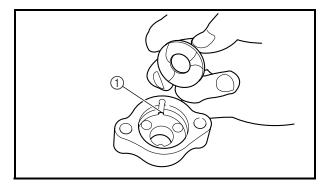

5. Mesh the bearing race tab ① with parking brake case slit.

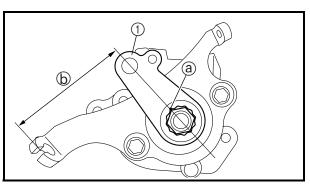

- 6. Install:
- parking brake arm ①

NOTE: _


Align the center of the parking brake arm with a adjuster nut corner ⓐ and position the parking brake arm as shown.

- 7. Measure:



Parking-brake-arm-to-parkingbrake-bracket distance 58 mm (2.28 in)



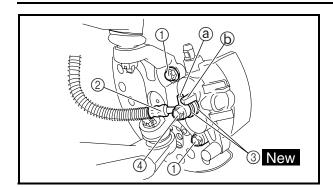

EBS00434

INSTALLING THE FRONT BRAKE CALIPERS

The following procedure applies to both of the front brake calipers.

- 1. Install:
- brake caliper assembly
- brake caliper mounting bolts (1)

№ 28 Nm (2.8 m · kg, 20 ft · lb)

- brake hose ②
- copper washers (3) New
- union bolt ④ 🔀 27 Nm (2.7 m ⋅ kg, 19 ft ⋅ lb)

CAUTION:

When installing the brake hose on the brake caliper, make sure that the brake pipe ⓐ touches the projection ⓑ on the brake caliper.

WARNING

Proper brake hose routing is essential to insure safe machine operation. Refer to "CABLE ROUTING" in chapter 2.

- 2. Fill:
- brake reservoir



Recommended brake fluid DOT 4

CAUTION:

Brake fluid may damage painted surfaces or plastic parts. Always clean up spilled brake fluid immediately.

WARNING


- Use only the designated quality brake fluid: other brake fluids may deteriorate the rubber seals, causing leakage and poor brake performance.
- Refill with the same type of brake fluid: mixing brake fluids may result in a harmful chemical reaction and lead to poor brake performance.
- Be careful that water does not enter the master cylinder when refilling. Water will significantly lower the boiling point of the brake fluid and may result in vapor lock.



- 3. Air bleed:
- brake system
 Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.
- 4. Check:
- brake fluid level

Brake fluid level is below the "LOWER" level line \rightarrow Add the recommended brake fluid to the proper level.

Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.

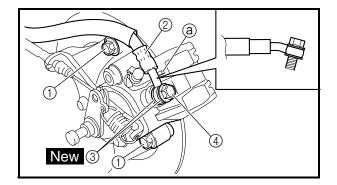

EBS00436

INSTALLING THE REAR BRAKE CALIPER

- 1. Install:
- brake caliper assembly
- brake caliper mounting bolts ①

№ 31 Nm (3.1 m · kg, 22 ft · lb)

- brake hose ②
- copper washers ③ New
- union bolt 4 30 Nm (3.0 m · kg, 22 ft · lb)

CAUTION:

When installing the brake hose on the brake caliper, make sure that the brake pipe touches the projection ⓐ on the brake caliper.

⚠ WARNING

Proper brake hose routing is essential to insure safe machine operation. Refer to "CABLE ROUTING" in chapter 2.

- 2. Fill:
- brake reservoir



Recommended brake fluid DOT 4



\sim	_	п		-	_		
	Л					N	ш
•		T a	,		•	4 K	п

Brake fluid may damage painted surfaces or plastic parts. Always clean up spilled brake fluid immediately.

WARNING

- Use only the designated quality brake fluid: other brake fluids may deteriorate the rubber seals, causing leakage and poor brake performance.
- Refill with the same type of brake fluid: mixing brake fluids may result in a harmful chemical reaction and lead to poor brake performance.
- Be careful that water does not enter the master cylinder when refilling. Water will significantly lower the boiling point of the brake fluid and may result in vapor lock.
- 3. Air bleed:
- brake system
 Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.
- 4. Check:
- brake fluid level

Brake fluid level is below the "LOWER" level line \rightarrow Add the recommended brake fluid to the proper level.


Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.

- 5. Adjust:
- parking brake cable end length Refer to "ADJUSTING THE PARKING BRAKE" in chapter 3.




STEERING SYSTEM

HANDLEBAR

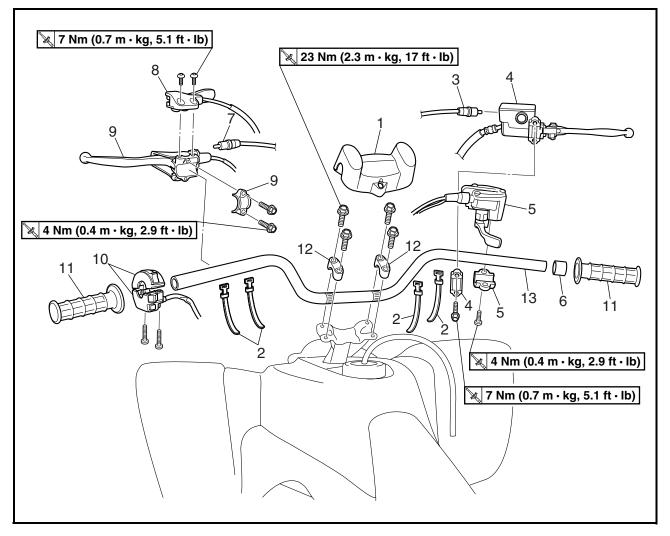


Order	Job/Part	Q'ty	Remarks
	Removing the handlebar		Remove the parts in the order listed.
1	Handlebar cover	1	
2	Plastic band	4	
3	Front brake light switch	1	Refer to "REMOVING THE FRONT BRAKE LIGHT SWITCH AND CLUTCH SWITCH".
4	Brake master cylinder/bracket	1/1	Refer to "INSTALLING THE BRAKE
5	Throttle lever assembly/bracket	1/1	MASTER CYLINDER".
6	Spacer	1	INACTER OTERNIDER:
7	Clutch switch	1	Refer to "REMOVING THE FRONT BRAKE LIGHT SWITCH AND CLUTCH SWITCH".
8	Parking brake lever	1	
9	Clutch lever/bracket	1/1	Refer to "INSTALLING THE CLUTCH
10	Handlebar switch	1	LEVER".

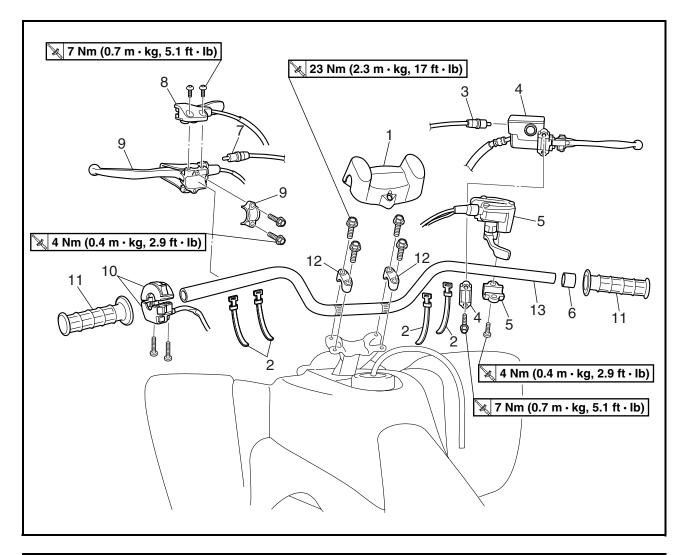

Order	Job/Part	Q'ty	Remarks
11	Handlebar grip	2	Refer to "REMOVING THE HANDLEBAR GRIPS" and "INSTALLING THE HANDLEBAR GRIPS".
12 13	Handlebar holder Handlebar		Refer to "INSTALLING THE HANDLE-BAR".
			For installation, reverse the removal procedure.



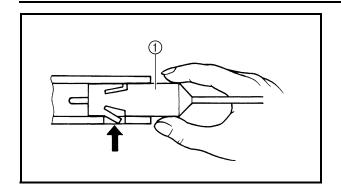


FBS0044

REMOVING THE FRONT BRAKE LIGHT SWITCH AND CLUTCH SWITCH

- 1. Remove:
- front brake light switch ①
- clutch switch

NOTE: _

- Push the fastener when removing the front brake light switch out of the brake master cylinder.
- Push the fastener when removing the clutch switch out of the clutch lever holder.

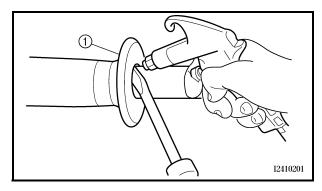

EDC0044

REMOVING THE HANDLEBAR GRIPS

- 1. Remove:
- handlebar grips ①

NOTE: _

Blow compressed air between the handlebar and handlebar grip, and gradually push the grip off the handlebar.

EBS00448


CHECKING THE HANDLEBAR


- 1. Check:
- handlebar ①
 Bends/cracks/damage → Replace.


WARNING

Do not attempt to straighten a bent handlebar as this may dangerously weaken the handlebar.



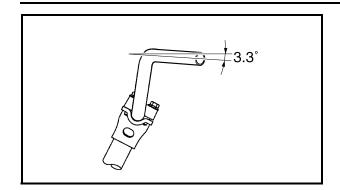

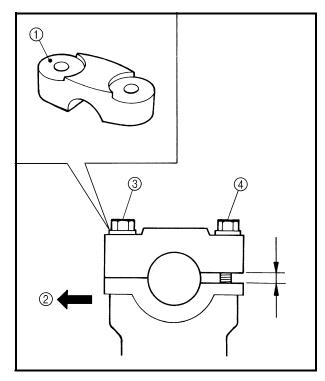

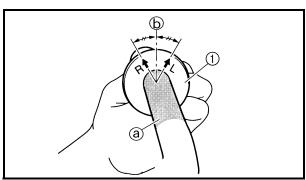

FBS0044

INSTALLING THE HANDLEBAR

- 1. Install:
- handlebar
- · handlebar holders

≥ 23 Nm (2.3 m · kg, 17 ft · lb)

NOTE: .

- Install the handlebar within 3.3° from the horizontal line shown in the illustration.
- The upper handlebar holder should be installed with the punched mark ① forward ②.

CAUTION:

First tighten the bolt 3 on the front side of the handlebar holder, and then tighten the bolt 4 on the rear side.

EBS00450


INSTALLING THE HANDLEBAR GRIPS

- 1. Install:
- handlebar grips (1)

NOTE: _

- Before applying the adhesive, wipe off grease or oil on the handlebar surface ⓐ with a lacquer thinner.



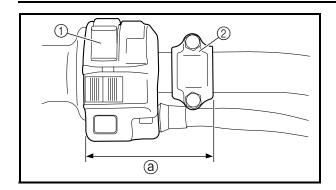

EBS0045


INSTALLING THE CLUTCH LEVER

- 1. Install:
- handlebar switch (1)
- clutch lever
- clutch lever bracket ②

NOTE: _

Install the clutch lever bracket as shown.

(a) 68 ~ 69 mm (2.68 ~ 2.72 in)

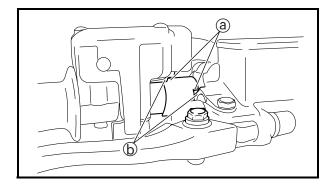

ED000450

INSTALLING THE BRAKE MASTER CYLINDER

- 1. Install:
- throttle lever assembly
- spacer
- brake master cylinder


7 Nm (0.7 m ⋅ kg, 5.1 ft ⋅ lb)

NOTE: _


- Engage the indentations (a) in the spacer with the lobes (b) on the throttle lever assembly and brake master cylinder.
- The "UP" mark on the brake master cylinder bracket should face up.



STEERING STEM

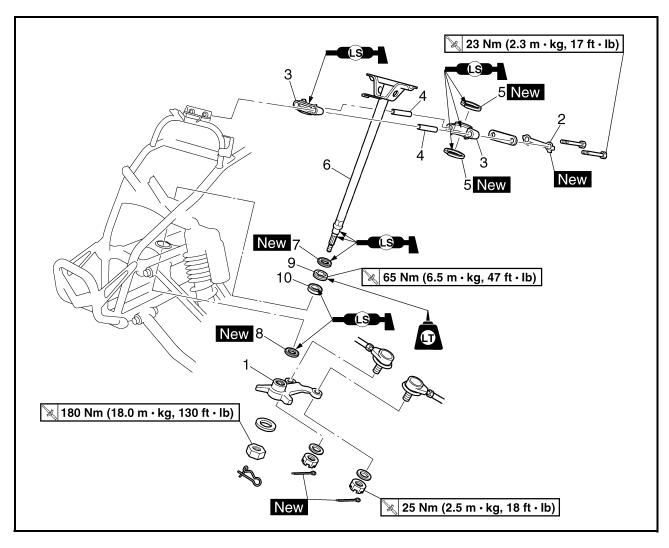

Order	Job/Part	Q'ty	Remarks
	Removing the steering stem		Remove the parts in the order listed.
	Fuel tank cover/side covers (left and		Refer to "SEAT, FENDERS AND FUEL
	right)/fuel tank/front fender		TANK" in chapter 3.
1	Pitman arm	1	Refer to "INSTALLING THE PITMAN
			ARM".
2	Lock washer	1	Refer to "INSTALLING THE LOCK
			WASHER".
3	Steering stem bushing	2	
4	Spacer	2	
5	Oil seal	2	
6	Steering stem	1	
7	Oil seal	1	
8	Oil seal	1	

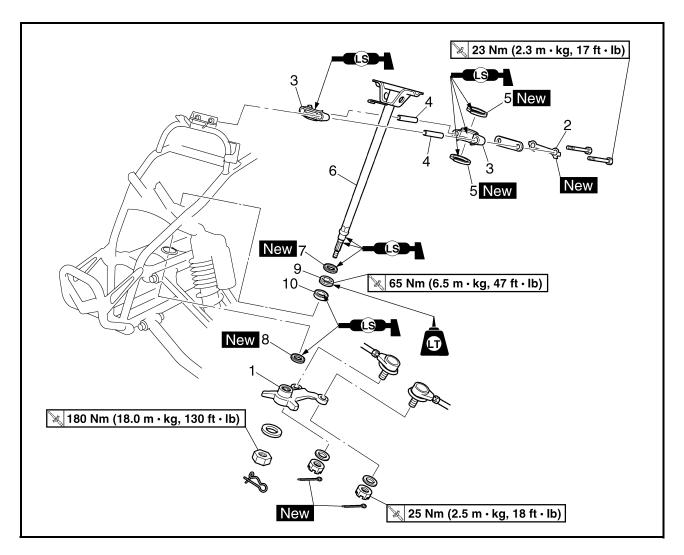

Order	Job/Part	Q'ty	Remarks
9	Bearing retainer	1	Refer to "REMOVING THE BEARING
			RETAINER" and "INSTALLING THE
			BEARING RETAINER".
10	Bearing	1	
			For installation, reverse the removal pro-
			cedure.




EBS00455


REMOVING THE BEARING RETAINER

- 1. Remove:
- · bearing retainer



Damper rod holder (30 mm) P/N. YM-01327, 90890-01327

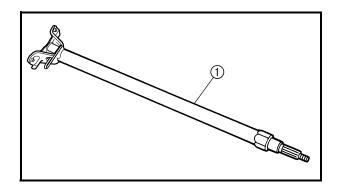

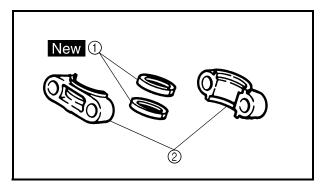

EBS00456

CHECKING THE STEERING STEM

- 1. Check:
- steering stem
 Bends → Replace.

WARNING

Do not attempt to straighten a bent stem; this may dangerously weaken the stem.

- 2. Check:
- oil seals (1) New
- steering stem bushings ②
 Wear/damage → Replace.

EBS00457

INSTALLING THE BEARING RETAINER

- 1. Install:
- · bearing retainer

65 Nm (6.5 m ⋅ kg, 47 ft ⋅ lb)



Damper rod holder (30 mm) P/N. YM-01327, 90890-01327


INSTALLING THE STEERING STEM

- 1. Install:
- · steering stem

NOTE: .

Pass the throttle cable through the cable guide. Refer to "CABLE ROUTING" in chapter 2.



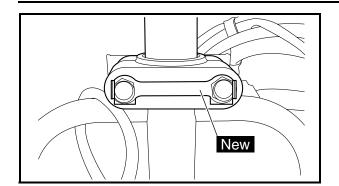

EBS00459

INSTALLING THE LOCK WASHER

- 1. Install:
- lock washer New
- bolts

≥ 23 Nm (2.3 m ⋅ kg, 17 ft ⋅ lb)

2. Bend the lock washer tab along a flat side of the bolt.

INSTALLING THE PITMAN ARM


- 1. Install:
- washer
- nut
- pitman arm

NOTE:

Make sure that the threads of the steering stem, washers, nuts, and the installation surfaces of the pitman arm are free of grease and oil.




TIE-RODS AND STEERING KNUCKLES

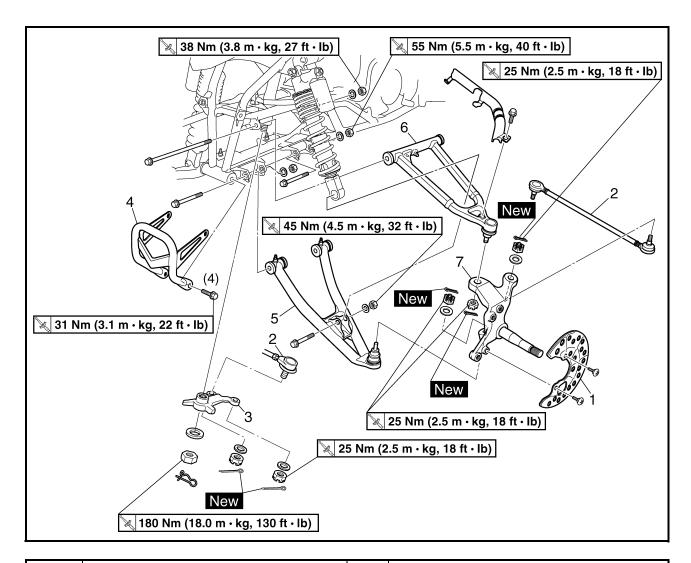

Order	Job/Part	Q'ty	Remarks
	Removing the tie-rods and steering knuckles		Remove the parts in the order listed.
			The following procedure applies to both of the tie-rods and steering knuckles.
	Front wheel/brake disc		Refer to "FRONT AND REAR WHEELS".
	Front brake caliper		Refer to "FRONT AND REAR BRAKES".
1	Brake disc guard (inner)	1	
2	Tie-rod	2	Refer to "INSTALLING THE TIE-RODS".
3	Pitman arm	1	
4	Front bumper	1	
5	Lower front arm	1	
6	Upper front arm	1	
7	Steering knuckle	1	Refer to "REMOVING THE STEERING KNUCKLES".
			For installation, reverse the removal procedure.



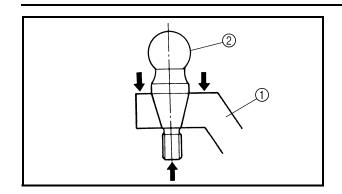


EBS0046

REMOVING THE STEERING KNUCKLES

- 1. Remove:
- steering knuckles ①

NOTE: _


Use a general puller to separate the ball joint ② and steering knuckle.

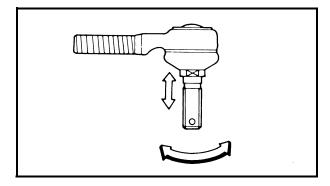

EBS00462

CHECKING THE TIE-RODS


- 1. Check:
- tie-rod free play and movement
 Free play → Replace the tie-rod end.
 Turns roughly → Replace the tie-rod end.
- 2. Check:
- tie-rods ${\sf Bends/damage} \to {\sf Replace}.$

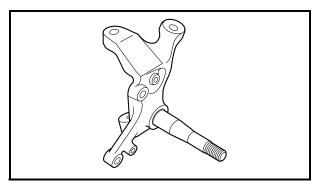

EBS00464

CHECKING THE STEERING KNUCKLES

- 1. Check:
- steering knuckles $\mathsf{Damage/pitting} \to \mathsf{Replace}.$

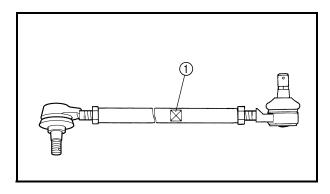

FRS00465

INSTALLING THE TIE-RODS

- 1. Install:
- tie-rods (left and right)

25 Nm (2.5 m · kg, 18 ft · lb)

NOTE: _

The tie-rod side which must be installed on the outside has grooves ①.

- 2. Adjust:
- toe-in


Refer to "ADJUSTING THE TOE-IN" in chapter 3.

FRONT ARMS AND FRONT SHOCK ABSORBER ASSEMBLIES



EBS00468


FRONT ARMS AND FRONT SHOCK ABSORBER ASSEMBLIES

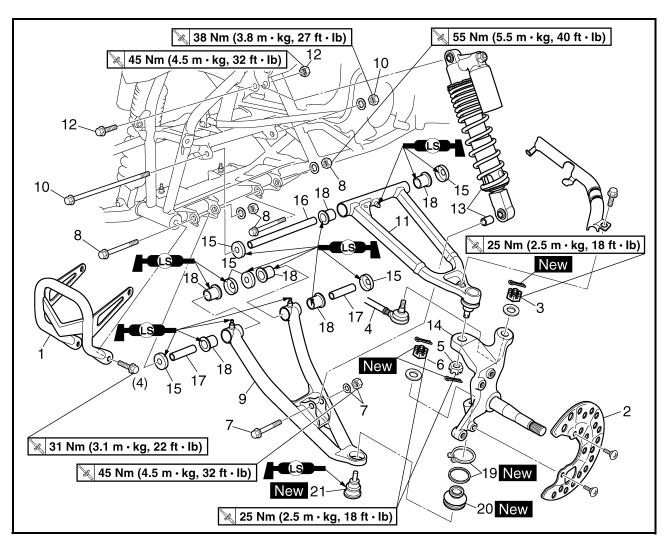

Order	Job/Part	Q'ty	Remarks
	Removing the front arms and front shock absorber assemblies		Remove the parts in the order listed.
			The following procedure applies to both of the front arms and front shock absorber assemblies.
	Front wheel/brake disc		Refer to "FRONT AND REAR WHEELS".
	Front brake caliper		Refer to "FRONT AND REAR BRAKES".
1	Front bumper	1	
2	Brake disc guard (inner)	1	
3	Nut	1	
4	Tie-rod	1	Disconnect.
5	Nut	1	
6	Nut	1	
7	Nut/washer/bolt	1/1/1	


FRONT ARMS AND FRONT SHOCK ABSORBER ASSEMBLIES




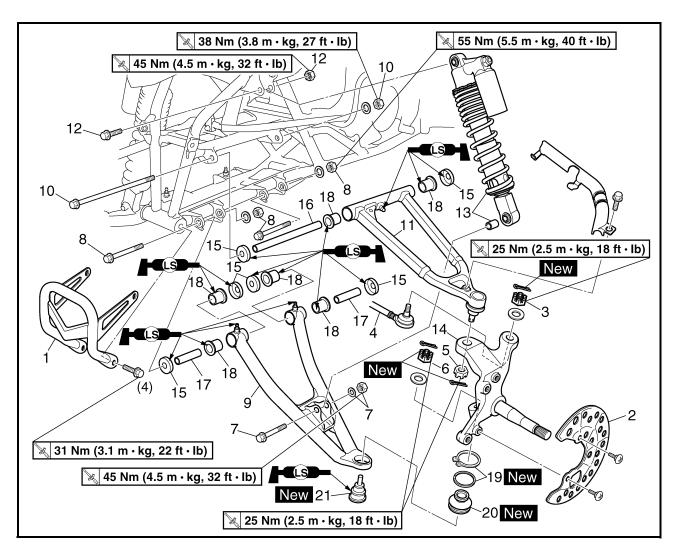


Order	Job/Part	Q'ty	Remarks
8	Nut/bolt	2/2	Defer to "DEMOVING THE EDONT
9	Lower front arm	1	Refer to "REMOVING THE FRONT ARMS" and "INSTALLING THE FRONT
10	Nut/bolt	1/1	ARMS".
11	Upper front arm	1	
12	Nut/bolt	1/1	
13	Front shock absorber/bushing	1/1	
14	Steering knuckle	1	
15	Dust cover	6	
16	Spacer	1	
17	Spacer	2	
18	Bushing	6	
19	Circlip	1	
20	Rubber boot/boot retaining ring	1/1	
21	Ball joint	1	
			For installation, reverse the removal pro-
			cedure.



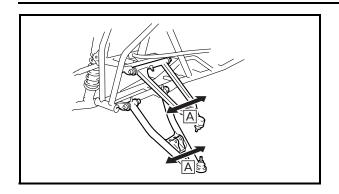

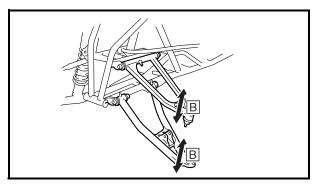

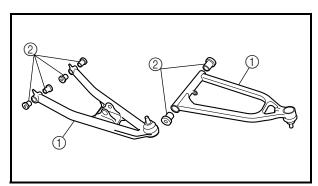

REMOVING THE FRONT ARMS

- 1. Check:
- · front arm free play

a. Check the front arm side play A by moving

- it from side to side.
 - If side play is noticeable, check the bushings.
- b. Check the front arm vertical movement B by moving it up and down.
 - If the vertical movement is tight or rough, or if there is binding, check the bushings.

- 2. Remove:
- front arm

CHECKING THE FRONT ARMS

- 1. Check:
- front arms (1) Bends/damage \rightarrow Replace.
- 2. Check:
- bushings ② Wear/damage \rightarrow Replace.

HANDLING THE FRONT SHOCK ABSORBER AND GAS CYLINDER


WARNING

This front shock absorber and gas cylinder contain highly compressed nitrogen gas. Before handling the front shock absorber or gas cylinder, read and make sure you understand the following information. The manufacturer cannot be held responsible for property damage or personal injury that may result from improper handling of the front shock absorber and gas cylinder.

- Do not tamper or attempt to open the front shock absorber or gas cylinder.
- Do not subject the front shock absorber or gas cylinder to an open flame or any other source of high heat. High heat can cause an explosion due to excessive gas pressure.



 Do not deform or damage the front shock absorber or gas cylinder in any way. If the front shock absorber, gas cylinder or both are damaged, damping performance will suffer.

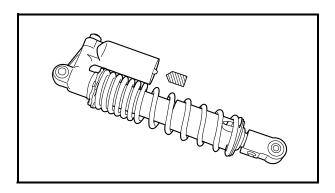


EBS00486

DISPOSING OF A FRONT SHOCK ABSORBER AND GAS CYLINDER

Gas pressure must be released before disposing of a front shock absorber and gas cylinder. To release the gas pressure, press on the gas valve needle with a suitable tool as shown, until all of the gas is released (the hissing has stopped).

WARNING

Wear eye protection to prevent eye damage from released gas or metal chips.

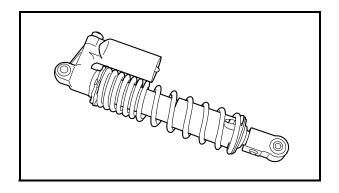


FRS00488


CHECKING THE FRONT SHOCK ABSORBERS


The following procedure applies to both of the front shock absorber assemblies.


- 1. Check:
- shock absorber
 - Oil leaks \rightarrow Replace the front shock absorber assembly.
- shock absorber rod
 Bends/damage → Replace the front shock
 absorber assembly.
- spring
 - Fatigue \rightarrow Replace the front shock absorber assembly.
 - Move the spring up and down.
- gas cylinder
 - Damage/gas leaks \rightarrow Replace the front shock absorber assembly.




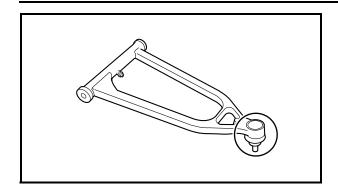

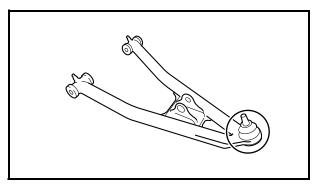

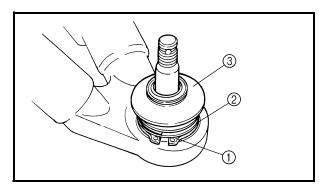

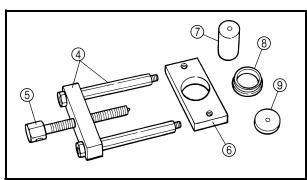

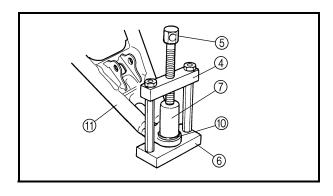

EBS00472

CHECKING THE BALL JOINTS

The following procedure applies to both of the front arm ball joints.

- 1. Check:
- ball joint (upper front arm)
 Damage/pitting → Replace the upper front arm.

Free play \to Replace the front arm. Turns roughly \to Replace the upper front arm.

- 2. Check:
- ball joint (lower front arm)
 Damage/pitting → Replace the ball joint.
 Free play → Replace the ball joint.
 Turns roughly → Replace the ball joint.

a. Clean the outside of the lower front arm.


- a. Clean the outside of the lower front arm.
- b. Remove the circlip ①, boot retaining ring ② and rubber boot ③.


Use the ball joint remover and installer set.


_	Ball joint remover/installer set P/N. YM-01474, 90890-01474 Ball joint remover/installer attachment set P/N. YM-01480, 90890-01480					
	4	Body	YM-01474			
	(5)	Long bolt	90890-01474			
	6	Base				
	7	Remover attachment	YM-01480 90890-01480			
ĺ	8	Installer spacer	30030-01400			
	9	Installer washer				


- c. Install the body ④, long bolt ⑤, base ⑥ and attachment ⑦ onto ball joint.
- d. Hold the body ④ in place while turning in the long bolt ⑤ to remove the ball joint ⑩ from the lower front arm ⑪.
- e. Remove the ball joint remover/installer.



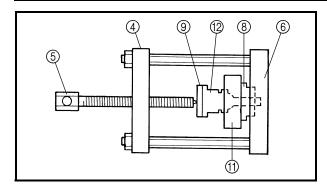

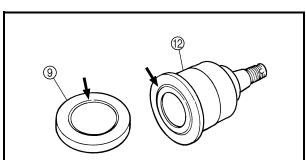

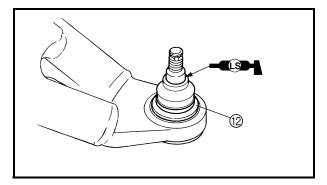

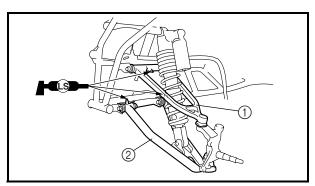

f. Attach the assembled ball joint remover/ installer, new ball joint (with rubber boot and retaining ring) 12, installer spacer 8 and installer washer (9) to the lower front arm (11).

- Do not tap or damage the top of the ball joint.
- Installer spacer (8) must be aligned with the projection on the head of the ball joint (2).

- g. Remove the ball joint remover/installer.
- h. Install a new circlip.

NOTE: .

Always use a new ball joint set.

INSTALLING THE FRONT ARMS

The following procedure applies to both of the front arms.

- 1. Install:
- upper front arm ①

38 Nm (3.8 m ⋅ kg, 27 ft ⋅ lb)

• lower front arm ②

№ 55 Nm (5.5 m · kg, 40 ft · lb)


NOTE: _

- Be sure to position the bolts (upper and lower) so that the bolt head faces forward.
- Apply lithium-soap-based grease to the grease nipple.




EBS00484

REAR SHOCK ABSORBER AND RELAY ARM

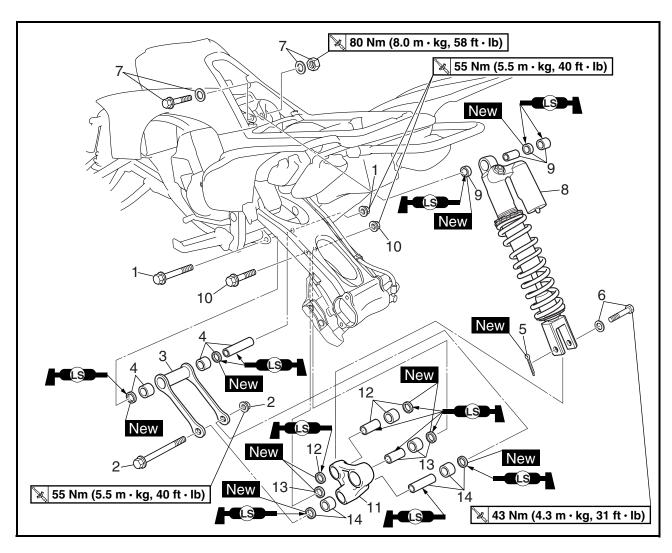

Order	Job/Part		Remarks		
	Removing the rear shock absorber		Remove the parts in the order listed.		
	and relay arm				
	Seat/left foot protector		Refer to "SEAT, FENDERS AND FUEL		
			TANK" in chapter 3.		
	Muffler/exhaust pipe		Refer to "ENGINE REMOVAL" in		
			chapter 4.		
	Rear axle hub		Refer to "REAR AXLE AND REAR AXLE		
			HUB".		
1	Self-locking nut/bolt	1/1			
2	Self-locking nut/bolt	1/1			
3	Connecting arm	1			
4	Bearing/oil seal/spacer	2/2/1	Refer to "INSTALLING THE RELAY ARM		
			AND CONNECTING ARM".		
5	Cotter pin	1			



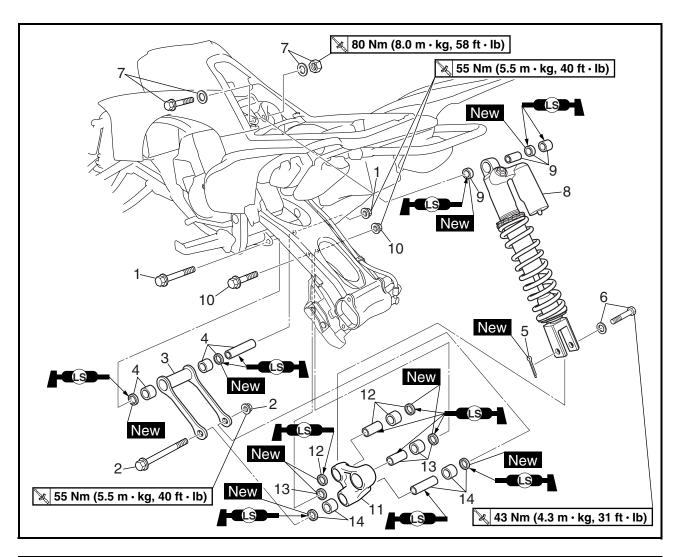

Order	Job/Part		Remarks			
6	Bolt/washer	1/1	Refer to "REMOVING THE REAR			
7	Self-locking nut/bolt/washer	1/1/2	SHOCK ABSORBER" and "INSTALL-			
8	Rear shock absorber	1	ert ING THE REAR SHOCK ABSORBER". ert			
9	Dust seal/bearing/spacer	2/1/1				
10	Self-locking nut/bolt	1/1				
11	Relay arm	1				
12	Spacer/bearing/oil seal		Defer to "INCTALLING THE DELAY			
13	Spacer/bearing/oil seal	1/1/2	Refer to "INSTALLING THE RELAY ARM AND CONNECTING ARM".			
14	Spacer/bearing/oil seal	1/2/2	AND CONNECTING AND .			
			For installation, reverse the removal pro-			
			cedure.			




EBS00485

HANDLING THE REAR SHOCK ABSORBER AND GAS CYLINDER

⚠ WARNING

This rear shock absorber and gas cylinder contain highly compressed nitrogen gas. Before handling the rear shock absorber or gas cylinder, read and make sure you understand the following information. The manufacturer cannot be held responsible for property damage or personal injury that may result from improper handling of the rear shock absorber and gas cylinder.

- Do not tamper or attempt to open the rear shock absorber or gas cylinder.
- Do not subject the rear shock absorber or gas cylinder to an open flame or any other source of high heat. High heat can cause an explosion due to excessive gas pressure.
- Do not deform or damage the rear shock absorber or gas cylinder in any way. If the rear shock absorber, gas cylinder or both are damaged, damping performance will suffer.

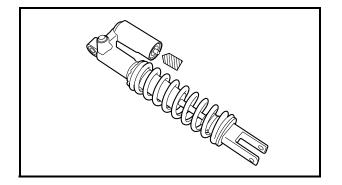

FRS00486

DISPOSING OF A REAR SHOCK ABSORBER AND GAS CYLINDER

Gas pressure must be released before disposing of a rear shock absorber and gas cylinder. To release the gas pressure, press on the gas valve needle with a suitable tool as shown, until all of the gas is released (the hissing has stopped).

WARNING

Wear eye protection to prevent eye damage from released gas or metal chips.




EBS00487

REMOVING THE REAR SHOCK ABSORBER

- 1. Remove:
- relay arm-to-rear shock absorber lower bolt
- rear shock absorber upper bolt



While removing the relay arm-to-rear shock absorber lower bolt, hold the swingarm so that it does not drop down.

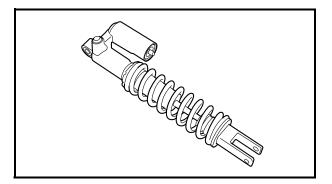

EBS00488

CHECKING THE REAR SHOCK ABSORBER

- 1. Check:
- shock absorber


Oil leaks \rightarrow Replace the rear shock absorber assembly.

- shock absorber rod
 Bends/damage → Replace the rear shock
 absorber assembly.
- spring

Fatigue \rightarrow Replace the rear shock absorber assembly.

Move the spring up and down.

gas cylinder
 Damage/gas leaks → Replace the rear shock absorber assembly.

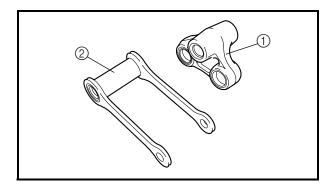


FRS00489


CHECKING THE RELAY ARM AND CONNECTING ARM


- 1. Check:
- relay arm (1)
- connecting arm ②
 Damage/wear → Replace.
- bushings
- spacers
- · oil seals


Damage/pitting/scratches \rightarrow Replace.



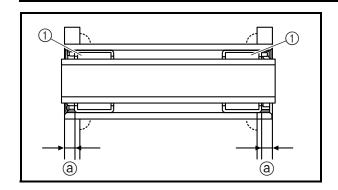

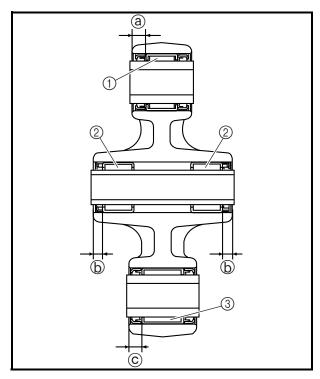

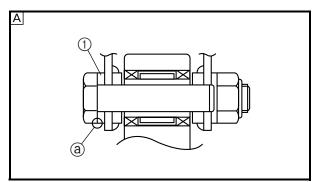

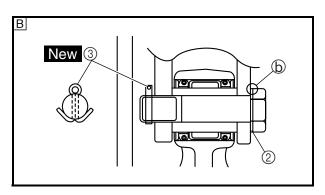

EBS00490

INSTALLING THE RELAY ARM AND CONNECTING ARM

- 1. Install:
- bearing ①
 (to connecting arm)



Installed depth of bearing ⓐ 4 mm (0.16 in)

- 2. Install:
- bearings ① to ③
 (to relay arm)



Installed depth of bearing ⓐ 6.5 mm (0.26 in)
Installed depth of bearing ⓑ 5.0 mm (0.20 in)
Installed depth of bearing ⓒ 6.0 mm (0.24 in)

EBS0049

INSTALLING THE REAR SHOCK ABSORBER

- 1. Install:
- relay arm
- · rear shock absorber
- bolts
- washer (1)
- washer ②
- cotter pin ③ New


NOTE:

- When installing the rear shock absorber, lift up the swingarm.
- Make sure that the blunt-edged corner @ of the washer is facing outward.
- Install the cotter pin and bend the ends as shown.
- A Rear shock absorber upper side
- a Rear shock absorber lower side




EBS00492

SWINGARM AND DRIVE CHAIN

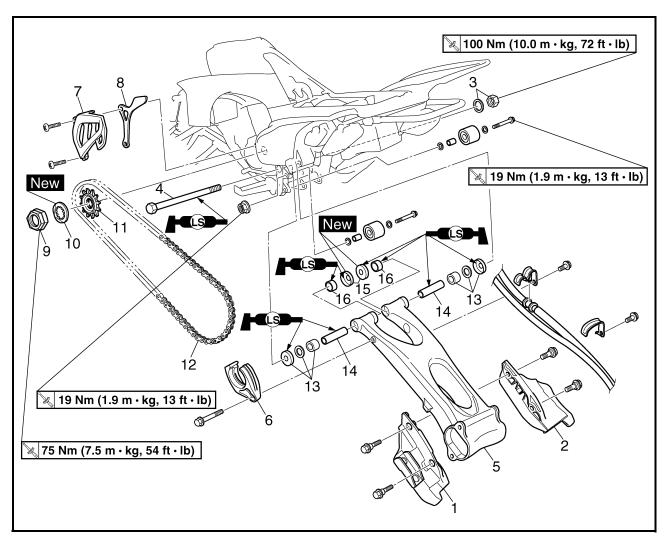

Order	Job/Part	Q'ty	Remarks
	Removing the swingarm and drive		Remove the parts in the order listed.
	chain		
	Rear axle hub		Refer to "REAR AXLE AND REAR AXLE HUB".
	Rear shock absorber		Refer to "REAR SHOCK ABSORBER AND RELAY ARM".
1	Drive chain guard	1	
2	Rear brake disc guard	1	
3	Pivot shaft nut/washer	1/1	
4	Pivot shaft	1	
5	Swingarm	1	
6	Drive chain guide 1	1	
7	Drive sprocket cover	1	



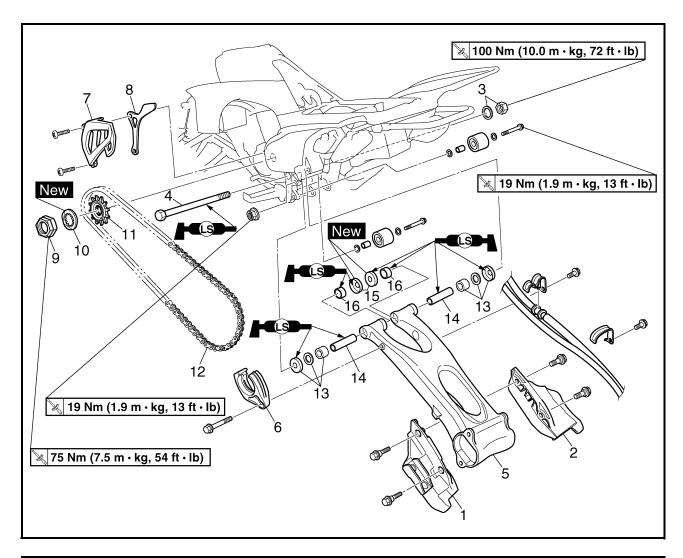


Order	Job/Part	Q'ty	Remarks
8	Drive chain guide 2	1	Refer to "INSTALLING THE DRIVE
9	Nut	1	SPROCKET".
10	Lock washer	1	SPHOORET.
11	Drive sprocket	1	
12	Drive chain	1	
13	Dust cover/washer/bearing	2/2/2	Defer to "INICTALLING THE CVAINIC
14	Spacer	2	Refer to "INSTALLING THE SWING- ARM".
15	Oil seal	2	Anivi .
16	Bushing	2	<u> </u>
			For installation, reverse the removal pro-
			cedure.



EBS00493

NOTE: _

Before removing the drive chain and the sprockets, measure the drive chain slack and a 15-link section of the drive chain.

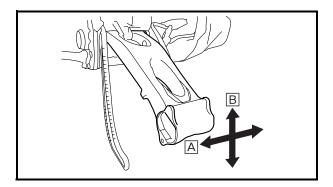

EBS00494

REMOVING THE SWINGARM

- 1. Check:
- swingarm free play


 a. Check the tightening torque of the pivot shaft nut.



Pivot shaft nut 100 Nm (10.0 m · kg, 72 ft · lb)

- b. Check the swingarm side play A by moving it from side to side.
 - If side play is noticeable, check the spacers, bearings, bushings and frame pivot.
- c. Check the swingarm vertical movement $\ensuremath{\mathbb{B}}$ by moving it up and down.
 - If vertical movement is tight or rough, or if there is binding, check the spacers, bearings, bushings and frame pivot.

- 2. Remove:
- pivot shaft nut
- washer
- pivot shaft
- swingarm

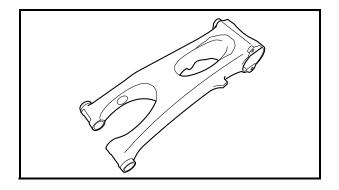


EBS00495

CHECKING THE SWINGARM

- 1. Check:



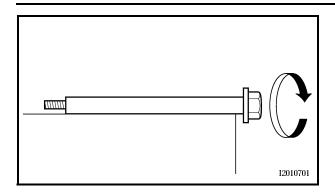

2. Check:

pivot shaft
 Roll the axle on a flat surface.

 Bends → Replace.

WARNING

Do not attempt to straighten a bent pivot shaft.


- 3. Clean:
- pivot shaft
- spacer
- bearings
- bushings



Recommended cleaning solvent Kerosene

- 4. Check:
- oil seals
 Damage/wear → Replace.
- bearings



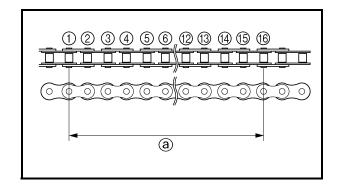

FBS00496

CHECKING THE DRIVE CHAIN

- 1. Measure:
- 15-link section ⓐ of the drive chain
 Out of specification → Replace the drive chain.



15-link drive chain section limit (maximum) 240.5 mm (9.47 in)

NOTE: _

- While measuring the 15-link section, push down on the drive chain to increase its tension.
- Measure the length between drive chain roller ① and ⑩ as shown.
- Perform this measurement at two or three different places.




- drive chain $\mbox{Stiffness} \rightarrow \mbox{Clean and lubricate or replace}.$
- 3. Clean:
- drive chain





- b. Put the drive chain in kerosene and remove
- any remaining dirt.
- c. Remove the drive chain from the kerosene and completely dry it.

CAUTION:


This machine has a drive chain with small rubber O-rings ① between the drive chain side plates. Never use high-pressure water or air, steam, gasoline, certain solvents (e.g., benzine), or a coarse brush to clean the drive chain. High-pressure methods could force dirt or water into the drive chain's internal parts, and solvents will deteriorate the O-rings. A coarse brush can also damage the O-rings. Therefore, use only kerosene to clean the drive chain. Don't soak the drive chain in kerosene for more than ten minutes. Kerosene will damage the O-rings.

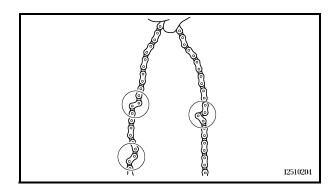

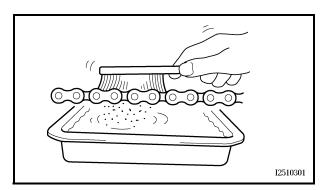

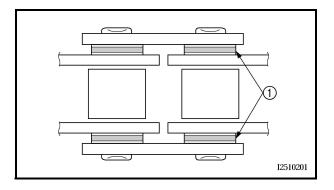



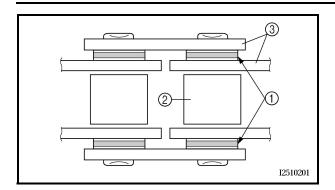



• O-rings (1)

Damage \rightarrow Replace the drive chain.

• drive chain rollers ②

Damage/wear → Replace the drive chain.

- drive chain side plates ③
 Cracks/damage/wear → Replace the drive chain.
- 5. Lubricate:
- · drive chain



Recommended lubricant Engine oil or chain lubricant suitable for O-ring chains


6. Check:


- · drive sprocket
- driven sprocket

More than 1/4 tooth ⓐ wear \rightarrow Replace the drive chain sprockets as a set.

Bent teeth \rightarrow Replace the drive chain sprockets as a set.

- (b) Correct
- 1) Drive chain roller
- ② Drive chain sprocket

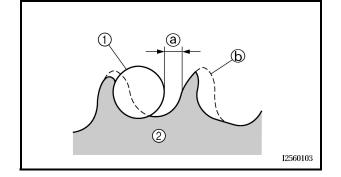

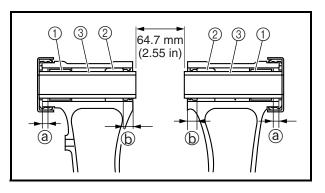

EBS00497

INSTALLING THE SWINGARM

- 1. Install:
- bearings (1)
- bushings ② (to swingarm)
- spacer ③


NOTE: .

Apply the lithium-soap-based grease on the bushing when installing.



Installed depth of bearing ⓐ 5 mm (0.20 in)
Installed depth of bushing ⓑ 8 mm (0.31 in)



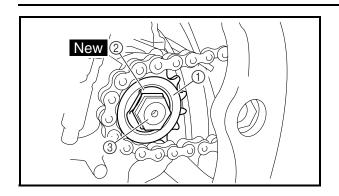

EBS00498

INSTALLING THE DRIVE SPROCKET

- 1. Install:
- drive sprocket ①
- lock washer ② New
- nut ③

№ 75 Nm (7.5 m · kg, 54 ft · lb)

2. Bend the lock washer tab along a flat side of the nut.



EBS00500


ELECTRICAL

ELECTRICAL COMPONENTS

- 1) Main switch
- ② Throttle switch
- ③ Front brake light switch ⑩ Tail/brake light
- (4) Indicator light
- (5) Clutch switch
- (6) Handlebar switch
- 7 Fuse


- Starting circuit cut-off Thermo switch 2 relay
- 11) Battery
- 12 Ignition coil
- (3) Spark plug
- (4) Throttle position sensor (2) Circuit breaker


- 17) Pickup coil/stator assembly
- ® Neutral switch
- Rear brake light switch
- Radiator fan
- ② Rectifier/regulator
- 3 C.D.I. unit
- ② Headlight
- ② Diode 2
- ® Diode 1
- 7 Thermo switch 1

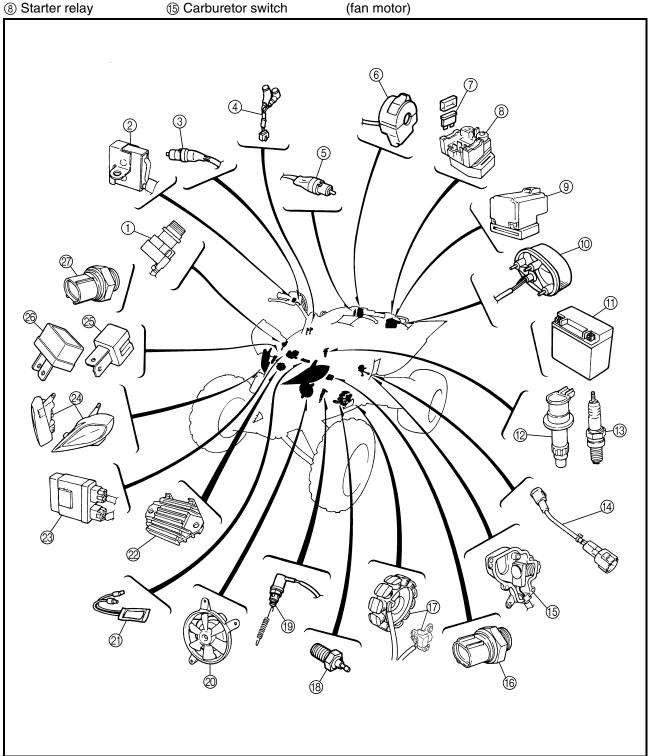

CHECKING SWITCH CONTINUITY



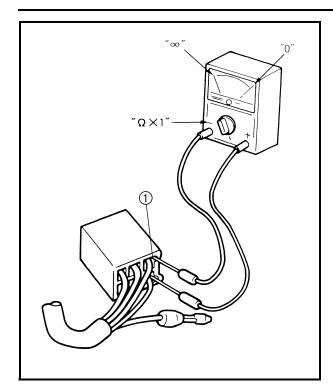

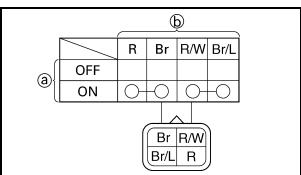

EBS01028

CHECKING SWITCH CONTINUITY

Check each switch for continuity with the pocket tester. If the continuity reading is incorrect, check the wiring connections and if necessary, replace the switch.

CAUTION:

Never insert the tester probes into the coupler terminal slots ①. Always insert the probes from the opposite end of the coupler, taking care not to loosen or damage the leads.



Pocket tester P/N. YU-03112-C, 90890-03112

NOTE: _

- Before checking for continuity, set the pocket tester to "0" and to the " $\Omega \times 1$ " range.
- When checking for continuity, switch back and forth between the switch positions a few times.

The terminal connections for switches (e.g., main switch, engine stop switch) are shown in an illustration similar to the one on the left.

The switch positions (a) are shown in the far left column and the switch lead colors (b) are shown in the top row in the switch illustration.

NOTE:

"O—O" indicates a continuity of electricity between switch terminals (i.e., a closed circuit at the respective switch position).


The example illustration on the left shows that:

There is continuity between the switch terminals for the red and brown switch leads and between the switch terminals for the red/white and brown/blue switch leads when the switch is set to "ON".

CHECKING SWITCH CONTINUITY

ELEC -

CHECKING THE SWITCHES



EBS01029


CHECKING THE SWITCHES

Check each switch for damage or wear, proper connections, and also for continuity between the terminals. Refer to "CHECKING SWITCH CONTINUITY".

Damage/wear \rightarrow Repair or replace.

Improperly connected \rightarrow Properly connect.

Incorrect continuity reading \rightarrow Replace the switch.

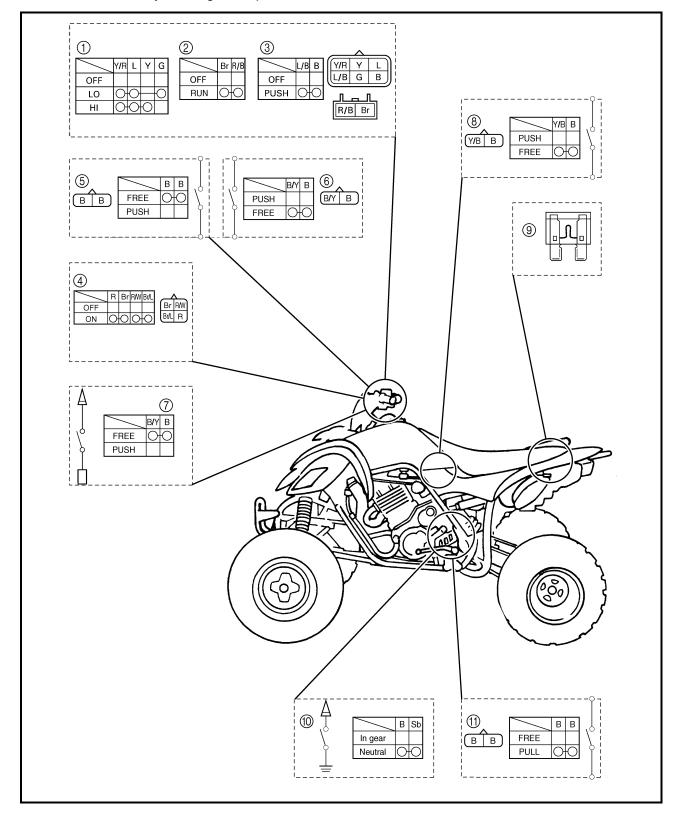

CHECKING THE SWITCHES



- ① Light switch
- ② Engine stop switch
- 3 Start switch
- 4 Main switch
- ⑤ Front brake light switch⑥ Throttle switch
- 7 Clutch switch
- ® Carburetor switch
- 9 Fuse
- Neutral switch
- (1) Rear brake light switch

CHECKING THE BULBS AND BULB SOCKETS




EBS01030


CHECKING THE BULBS AND BULB SOCKETS

Check each bulb and bulb socket for damage or wear, proper connections, and also for continuity between the terminals.

Damage/wear \rightarrow Repair or replace the bulb, bulb socket or both.

Improperly connected \rightarrow Properly connect. No continuity \rightarrow Repair or replace the bulb, bulb socket or both.

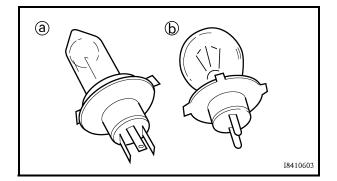

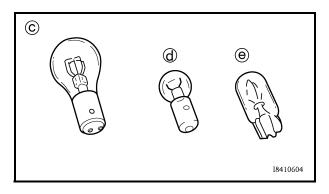

TYPES OF BULBS

The bulbs used on this machine are shown in the illustration on the left.


- Bulbs (a) and (b) are used for the headlights and usually use a bulb holder that must be detached before removing the bulb. The majority of these types of bulbs can be removed from their respective socket by turning them counterclockwise.
- Bulbs © is used for turn signal and tail/ brake lights and can be removed from the socket by pushing and turning the bulb counterclockwise.
- Bulbs (a) and (e) are used for meter and indicator lights and can be removed from their respective socket by carefully pulling them out.

CHECKING THE CONDITION OF THE BULBS

The following procedure applies to all of the bulbs.

- 1. Remove:
- bulb

CHECKING THE BULBS AND BULB SOCKETS



WARNING

Since the headlight bulb gets extremely hot, keep flammable products and your hands away from the bulb until it has cooled down.

CAUTION:

- Be sure to hold the socket firmly when removing the bulb. Never pull the lead, otherwise it may be pulled out of the terminal in the coupler.
- Avoid touching the glass part of the headlight bulb to keep it free from oil, otherwise the transparency of the glass, the life of the bulb, and the luminous flux will be adversely affected. If the headlight bulb gets soiled, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.



bulb (for continuity)
 (with the pocket tester)
 No continuity → Replace.




Pocket tester P/N. YU-03112-C, 90890-03112

NOTE: .

Before checking for continuity, set the pocket tester to "0" and to the " $\Omega \times$ 1" range.

a. Connect the positive tester probe to terminal ① and the negative tester probe to terminal ②, and check the continuity.

- b. Connect the positive tester probe to terminal ① and the negative tester probe to terminal ③, and check the continuity.
- c. If either of the readings indicate no continuity, replace the bulb.

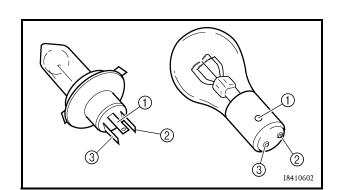

CHECKING THE BULBS AND BULB SOCKETS



CHECKING THE CONDITION OF THE BULB SOCKETS

The following procedure applies to all of the bulb sockets.

- 1. Check:
- bulb socket (for continuity) (with the pocket tester) No continuity \rightarrow Replace.




Pocket tester P/N. YU-03112-C, 90890-03112

NOTE: .


Check each bulb socket for continuity in the same manner as described in the bulb section; however, note the following.


- a. Install a good bulb into the bulb socket.
- b. Connect the pocket tester probes to the respective leads of the bulb socket.
- c. Check the bulb socket for continuity. If any of the readings indicate no continuity, replace the bulb socket.




EBS00503

IGNITION SYSTEM CIRCUIT DIAGRAM

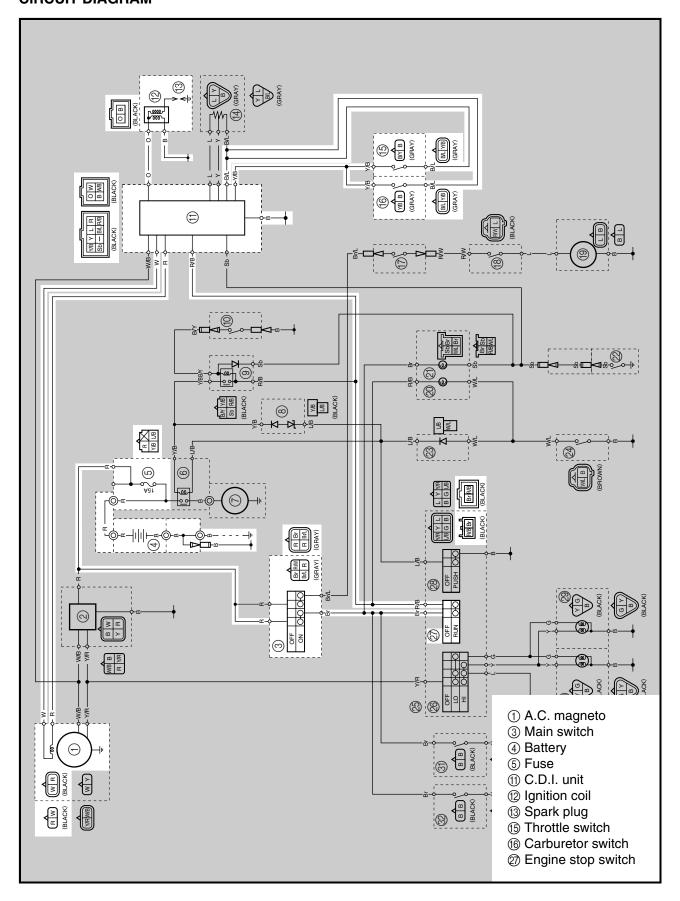



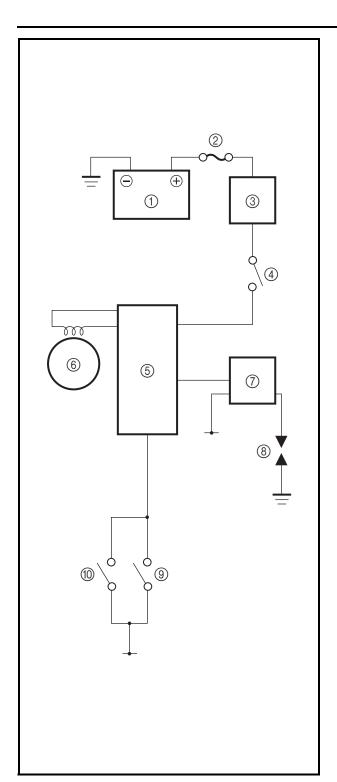

THROTTLE OVERRIDE SYSTEM (T.O.R.S.) OPERATION

This model is equipped with a throttle override system as a safety device that operates according to the positions of the throttle switch and carburetor switch and stops the flow of electricity from the C.D.I. unit to the ignition coil to stop the engine if the carburetor or throttle cable malfunctions during operation.

- A Normally, both the throttle switch and carburetor switch are open when the throttle lever is free and closed when the throttle lever is pushed.
- B If either the throttle switch or the carburetor switch is closed due to a malfunction, the throttle override system operates to stop the engine.
- 1) Battery
- ② Fuse
- 3 Main switch
- 4 Engine stop switch
- (5) C.D.I. unit
- ⑥ A.C. magneto
- ⑦ Ignition coil
- Spark plug
- Throttle switch
- 10 Carburetor switch



EBS01045

TROUBLESHOOTING

The ignition system fails to operate (no spark or intermittent spark).

Check:

- 1. fuse
- 2. battery
- 3. spark plug
- 4. ignition spark gap
- 5. ignition coil resistance
- 6. main switch
- 7. engine stop switch
- 8. throttle switch
- 9. carburetor switch
- 10.pickup coil resistance
- 11.wiring connections (of the entire ignition system)

NOTE:

- Before troubleshooting, remove the following part(s):
- 1. seat
- 2. fuel tank cover
- 3. side covers (left and light)
- 4. fuel tank
- 5. front fender
- Troubleshoot with the following special tool(s).



Dynamic spark tester P/N. YM-34487 Ignition checker 90890-06754 Pocket tester P/N. YU-03112-C, 90890-03112

EBS01043

1. Fuse

- Check the fuse for continuity.
 Refer to "CHECKING THE SWITCHES".
- . Is the fuse OK?





Replace the fuse.

EBS01044

2. Battery

 Check the condition of the battery.
 Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Minimum open-circuit voltage 12.8 V or more at 20 °C (68 °F)

• Is the battery OK?





- Clean the battery terminals.
- Recharge or replace the battery.

EBS01032

3. Spark plug

- Check the condition of the spark plug.
- Check the spark plug type.
- Measure the spark plug gap.
 Refer to "CHECKING THE SPARK PLUG" in chapter 3.




Standard spark plug CR8E (NGK) Spark plug gap 0.7 ~ 0.8 mm (0.028 ~ 0.031 in)

 Is the spark plug in good condition, is it of the correct type, and is its gap within specification?






Re-gap or replace the spark plug.



EBS01034

4. Ignition spark gap

- Disconnect the ignition coil from the spark plug.
- Connect the dynamic spark tester ① as shown.
- ② Ignition coil
- Set the main switch to "ON".
- Measure the ignition spark gap (a).
- Crank the engine by pushing the start switch and gradually increase the spark gap until a misfire occurs.

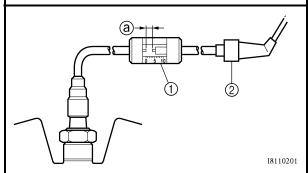



Minimum ignition spark gap 6 mm (0.24 in)

 Is there a spark and is the spark gap within specification?





The ignition system is OK.

EBS01038

5. Ignition coil resistance


- Disconnect the ignition coil coupler from the ignition coil.
- Connect the pocket tester ($\Omega \times 1$) to the ignition coil as shown.

Positive tester probe \rightarrow

orange lead terminal (1)

Negative tester probe \rightarrow

black lead terminal ②

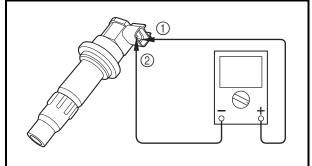

Measure the primary coil resistance.



Primary coil resistance $0.08 \sim 0.10 \Omega$ at 20 °C (68 °F)


• Connect the pocket tester ($\Omega \times 1k$) to the ignition coil as shown.

Negative tester probe →

black lead terminal (1)

Positive tester probe →

ignition coil terminal ②

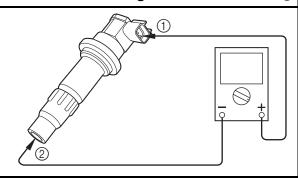

Measure the secondary coil resistance.




Secondary coil resistance 4.56 ~ 6.84 kΩ at 20 °C (68 °F)

Is the ignition coil OK?





Replace the ignition coil.



EBS01041

6. Main switch

- Check the main switch for continuity.
 Refer to "CHECKING THE SWITCHES".
- Is the main switch OK?



Replace the main switch.

NO


EBS01042

7. Engine stop switch

Check the engine stop switch for continuity.

Refer to "CHECKING THE SWITCHES".


Is the engine stop switch OK?



Replace the handle-bar switch.

8. Throttle switch


- Check the throttle switch for continuity.
 Refer to "CHECKING THE SWITCHES".
- . Is the throttle switch OK?



Replace the throttle switch.

9. Carburetor switch

- Check the carburetor switch for continuity.
 Refer to "CHECKING THE SWITCHES".
- Is the carburetor switch OK?




Replace the carburetor switch.

EBS01040

10.Pickup coil resistance

- Disconnect the pickup coil coupler from the wire harness.
- Connect the pocket tester ($\Omega \times 100$) to the pickup coil terminal as shown.

Positive tester probe \rightarrow white terminal ① Negative tester probe \rightarrow red terminal ②

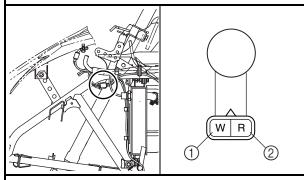

Measure the pickup coil resistance.



Pickup coil resistance 248 ~ 372 Ω at 20 °C (68 °F)

• Is the pickup coil OK?



NO

Replace the pickup coil/stator assembly.

EBS01047

11.Wiring

- Check the entire ignition system's wiring. Refer to "CIRCUIT DIAGRAM".
- Is the ignition system's wiring properly connected and without defects?





Replace the C.D.I. unit.

Properly connect or repair the ignition system's wiring.



CHECKING THE THROTTLE OVERRIDE SYSTEM

|--|


- Make sure that the parking brake is applied.
- Make sure that the transmission is in neutral.

NOTE:							
			the	throttle	lever	moves	
smoothly.							

- 1. Remove:
- throttle lever cover
- throttle position sensor
- carburetor switch/throttle stop screw assembly cover Refer to "CARBURETOR" in chapter 6.



- 3. Check:
- throttle switch (1)



 Release the throttle lever and check that the throttle switch operates and the engine stops.


Engine stops \rightarrow Throttle switch is O.K. Engine does not stop \rightarrow Check the electrical circuit. Refer to "IGNITION SYSTEM".


- 4. Check:
- carburetor switch (1)

 a. Push the throttle lever and hold it so that the throttle shaft arm ② does not contact the carburetor switch.

b. Push the carburetor switch in and check that the carburetor switch operates and the engine stops.

Engine stops \to Carburetor switch is O.K. Engine does not stop \to Check the electrical circuit. Refer to "IGNITION SYSTEM".

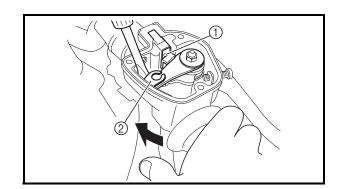

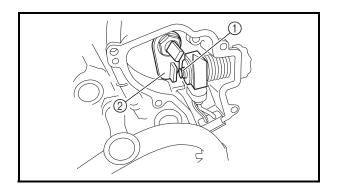




- 5. Install:
- throttle lever cover
- carburetor switch/throttle stop screw assembly cover
- throttle position sensor
 Refer to "CHECKING AND ADJUSTING
 THE THROTTLE POSITION SENSOR" in chapter 6.




EBS00506

ELECTRIC STARTING SYSTEM

CIRCUIT DIAGRAM

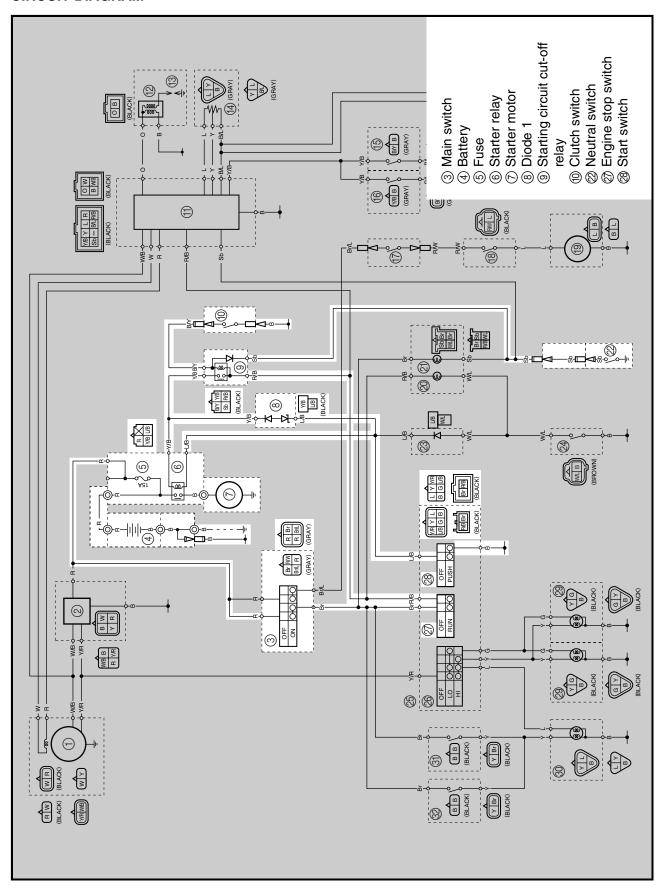



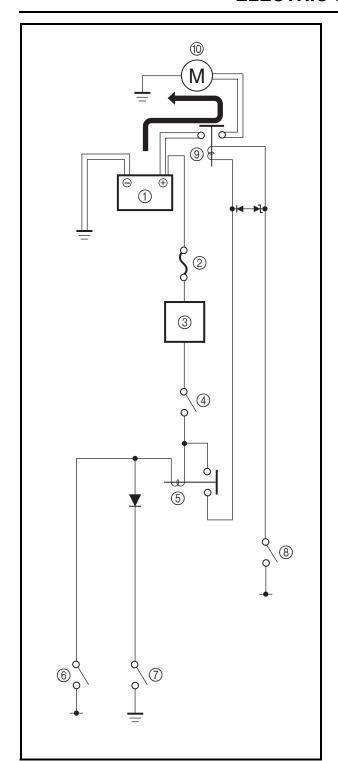

BS00508


STARTING CIRCUIT CUT-OFF SYSTEM OPERATION

The starting circuit on this model consists of the starter motor, starter relay, clutch switch, and neutral switch. If the main switch is on and the engine stop switch is in the RUN position, the starter motor can be operated only if:

 The transmission is in neutral (the neutral switch is closed)

or

- You pull in the clutch lever (the clutch switch is closed).
- 1) Battery
- ② Fuse
- 3 Main switch
- 4 Engine stop switch
- (5) Starting circuit cutoff relay
- (6) Clutch switch
- ⑦ Neutral switch
- (8) Start switch
- Starter relay
- Starter motor



EBS01050

TROUBLESHOOTING

The starter motor fails to turn.

Check:

- 1. fuse
- 2. battery
- 3. starter motor
- 4. starting circuit cut-off relay
- 5. starting circuit cut-off relay (diode)
- 6. starter relay
- 7. main switch
- 8. engine stop switch
- 9. neutral switch
- 10.clutch switch
- 11.start switch
- 12.wiring connections (of the entire starting system)

NOTE:

- Before troubleshooting, remove the following part(s):
- 1. seat
- 2. fuel tank cover
- 3. side covers (left and right)
- 4. front fender
- Troubleshoot with the following special tool(s).



Pocket tester P/N. YU-03112-C, 90890-03112

EBS01043

- 1. Fuse
- Check the fuse for continuity.
 Refer to "CHECKING THE SWITCHES".
- Is the fuse OK?





Replace the fuse.

EBS01044

2. Battery

 Check the condition of the battery.
 Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Minimum open-circuit voltage 12.8 V or more at 20 °C (68 °F)

• Is the battery OK?






- Clean the battery terminals.
- Recharge or replace the battery.

EBS01051

3. Starter motor

 Connect the positive battery terminal ① and starter motor lead ② with a jumper lead ③.

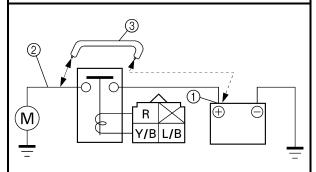

WARNING

- A wire that is used as a jumper lead must have at least the same capacity or more as that of the battery lead, otherwise the jumper lead may burn.
- This check is likely to produce sparks, therefore make sure nothing flammable is in the vicinity.
- Does the starter motor turn?





Repair or replace the starter motor.




EBS01052

- 4. Starting circuit cut-off relay
- Remove the starting circuit cut-off relay from the wire harness.
- Connect the pocket tester ($\Omega \times 1$) and battery (12 V) to the starting circuit cut-off relay as shown.

Positive battery terminal \rightarrow red/black ① Negative battery terminal \rightarrow

sky blue ② or black/yellow ③

Positive tester probe → red/black ①
Negative tester probe → yellow/black ④

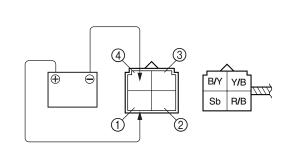


 Does the starting circuit cut-off relay have continuity between red/black and yellow/ black?



Replace the starting circuit cut-off relay.

EBS01053

- 5. Starting circuit cut-off relay (diode)
- Remove the starting circuit cut-off relay from the wire harness.
- Connect the pocket tester ($\Omega \times 1$) to the starting circuit cut-off relay as shown.
- Measure the starting circuit cut-off relay for continuity as follows.



NOTE: .

When you switch the tester's positive and negative probes, the readings in the above chart will be reversed.

Are the testing readings correct?



Replace the starting circuit cut-off relay.



EBS01054


6. Starter relay

- Disconnect the starter relay coupler from the wire harness.
- Connect the pocket tester (Ω × 1) and battery (12 V) to the starter relay as shown.


Positive battery terminal → blue/black ①
Negative battery terminal →

yellow/black 2

Positive tester probe → red ③ Negative tester probe → black ④

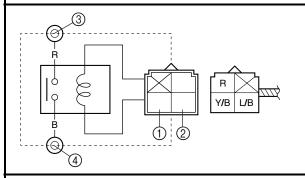

 Does the starter relay have continuity between red and black?



Replace the starter relay.

EBS01041

7. Main switch

- Check the main switch for continuity.
 Refer to "CHECKING THE SWITCHES".
- Is the main switch OK?



switch.


EBS01042

8. Engine stop switch

Check the engine stop switch for continuity.

Refer to "CHECKING THE SWITCHES".

Is the engine stop switch OK?



Replace the handlebar switch.

EBS01046

9. Neutral switch

- Check the neutral switch for continuity.
 Refer to "CHECKING THE SWITCHES".
- Is the neutral switch OK?




Replace the neutral switch.

EBS01056

10.Clutch switch

- Check the clutch switch for continuity.
 Refer to "CHECKING THE SWITCHES".
- Is the clutch switch OK?



EBS01057

11.Start switch

- Check the start switch for continuity.
 Refer to "CHECKING THE SWITCHES".
- Is the start switch OK?



Replace the handlebar switch.

ELECTRIC STARTING SYSTEM



EBS01059

12.Wiring

- Check the entire starting system's wiring. Refer to "CIRCUIT DIAGRAM".
- Is the starting system's wiring properly connected and without defects?






The starting system circuit is OK.


Properly connect or repair the starting system's wiring.




STARTER MOTOR

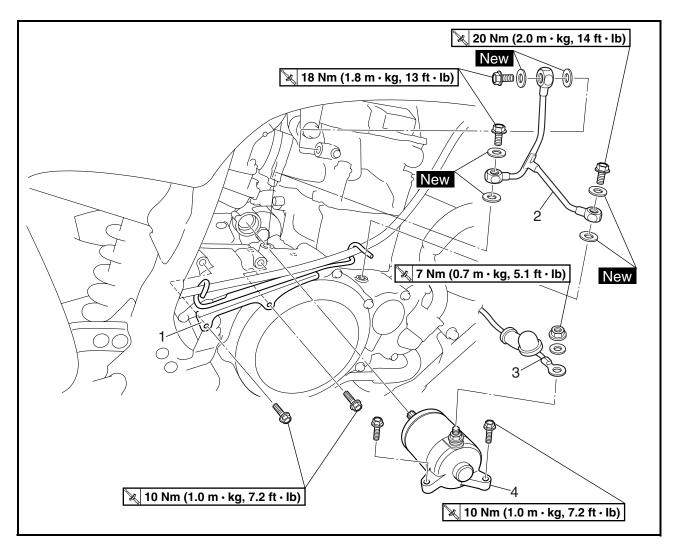

Order	Job/Part	Q'ty	Remarks
	Removing the starter motor		Remove the parts in the order listed.
	Exhaust pipe		Refer to "ENGINE REMOVAL" in chapter 4.
1	Parking brake cable holder	1	
2	Oil delivery pipe 1	1	
3	Starter motor lead	1	Disconnect.
4	Starter motor	1	
			For installation, reverse the removal procedure.




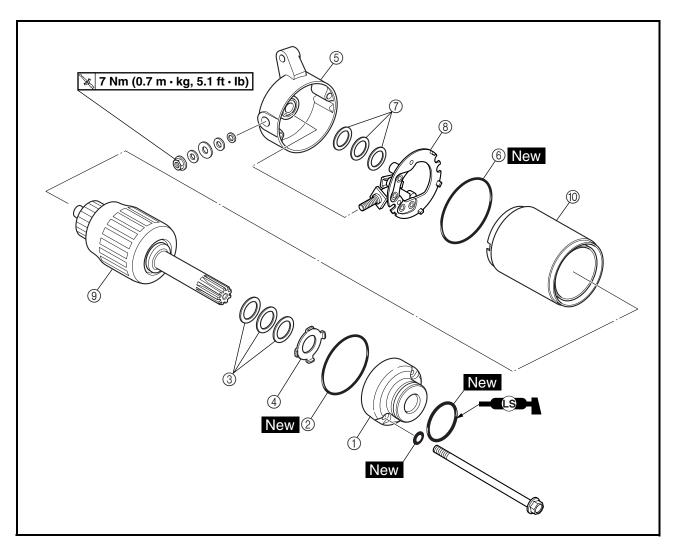


Order	Job/Part	Q'ty	Remarks
	Disassembling the starter motor		Remove the parts in the order listed.
1	Front bracket	1	\vdash
2	O-ring	1	
3	Shim	1	
4	Lock washer	1	
(5)	Rear bracket	1	Refer to "ASSEMBLING THE STARTER
6	O-ring	1	MOTOR".
7	Shim	1	
8	Brush holder assembly	1	
9	Armature assembly	1	
10	Starter motor yoke	1	eta
			For assembly, reverse the disassembly
			procedure.

STARTER MOTOR



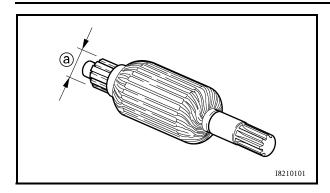

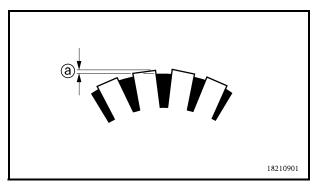

EBS01064

CHECKING THE STARTER MOTOR

- 1. Check:
- commutator
 Dirt → Clean with 600-grit sandpaper.
- 2. Measure:
- commutator diameter ⓐ
 Out of specification → Replace the starter motor.



Commutator wear limit 27 mm (1.06 in)

- 3. Measure:
- mica undercut ⓐ
 Out of specification → Scrape the mica to


the proper measurement with a hacksaw blade that has been grounded to fit the commutator.



Mica undercut 0.7 mm (0.03 in)

NOTE: _

The mica of the commutator must be undercut to ensure proper operation of the commutator.

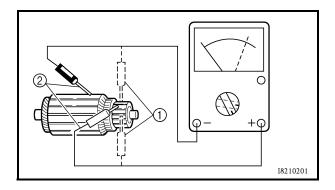

- 4. Measure:
- armature assembly resistances (commutator and insulation)
 Out of specification → Replace the starter motor.
- a. Measure the armature assembly resistances with the pocket tester.



Pocket tester P/N. YU-03112-C, 90890-03112



Armature coil


Commutator resistance ① $0.004 \sim 0.005 \Omega$ at 20 °C (68 °F) Insulation resistance ② Above 1 MO at 20 °C (68 °F)


Above 1 M Ω at 20 °C (68 °F)

b. If any resistance is out of specification, replace the starter motor.

STARTER MOTOR



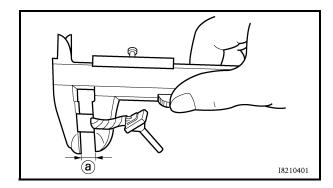

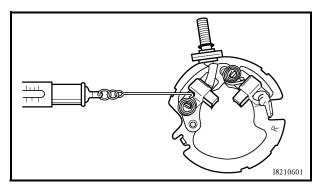

- 5. Measure:
- brush length ⓐ
 Out of specification → Replace the brushes
 as a set.




Brush length wear limit 3.5 mm (0.14 in)


- 6. Measure:
- brush spring force
 Out of specification → Replace the brush springs as a set.



Brush spring force 7.16 ~ 9.52 N (730 ~ 971 gf, 25.77 ~ 34.27 oz)

- 7. Check:
- gear teeth
 Damage/wear → Replace the gear.
- 8. Check:
- bushing
- bearing
- oil seal
 Damage/wear → Replace the defective part(s).

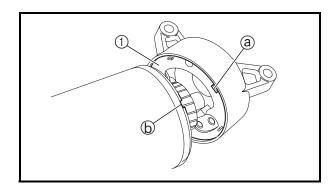

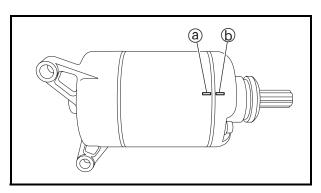

EBS00515

ASSEMBLING THE STARTER MOTOR

- 1. Install:
- brush seat ①


NOTE: _

Align the projection ⓐ on the rear bracket with the slot ⓑ in the yoke.


- 2. Install:
- yoke
- bracket

NOTE: _

Align the match mark ⓐ on the yoke with the match mark ⓑ on the front bracket.



CHARGING SYSTEM

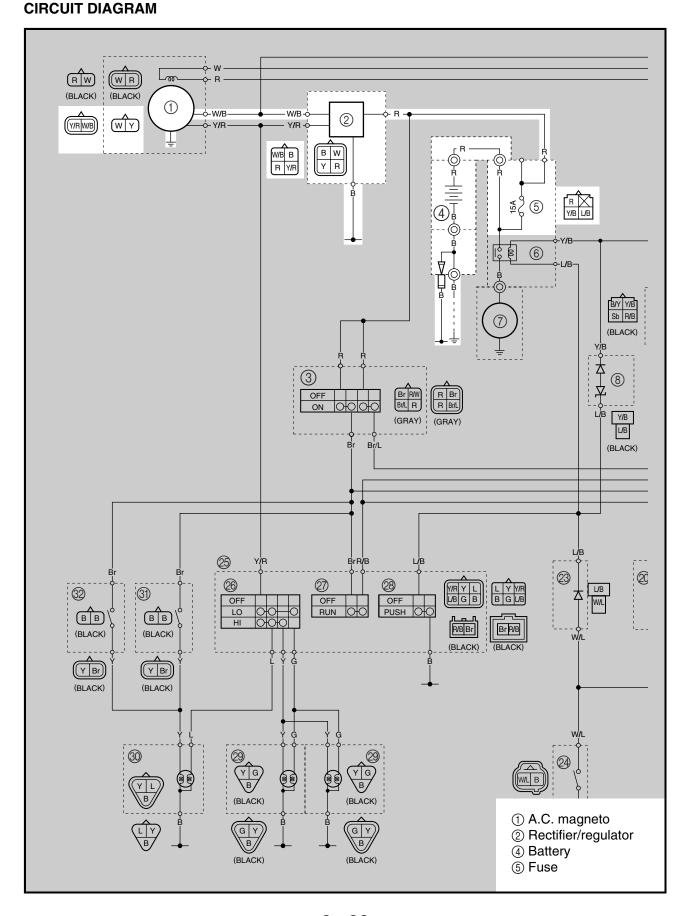

CHARGING SYSTEM



EBS01065

TROUBLESHOOTING

The battery is not being charged.

Check:

- 1. fuse
- 2. battery
- 3. charging voltage
- 4. charging coil resistance
- 5. wiring connections (of the entire charging system)

NOTE:

- Before troubleshooting, remove the following part(s):
- 1. seat
- 2. front tank cover
- 3. side covers (left and right)
- 4. front fender
- Troubleshoot with the following special tool(s).



Pocket tester P/N. YU-03112-C, 90890-03112

EBS01043

- 1. Fuse
- Check the fuse for continuity.
 Refer to "CHECKING THE SWITCHES".
- . Is the fuse OK?





Replace the fuse.

EBS01044

2. Battery

 Check the condition of the battery.
 Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Minimum open-circuit voltage 12.8 V or more at 20 °C (68 °F)


• Is the battery OK?





- Clean the battery terminals.
- Recharge or replace the battery.

CHARGING SYSTEM



EBS01066

3. Charging voltage


- Connect the engine tachometer to on to the ignition coil.
- Connect the pocket tester (DC 20 V) to the battery as shown.

Positive tester probe \rightarrow

positive battery terminal (1)

Negative tester probe →

negative battery terminal ②

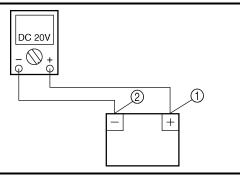

- Start the engine and let it run at approximately 5,000 r/min.
- Measure the charging voltage.



Charging voltage 14 V at 5,000 r/min

NOTE:

Make sure the battery is fully charged.

 Is the charging voltage within specification?






The charging circuit is OK.

EBS01100

4. Charging coil resistance

- Disconnect the A.C. magneto coupler from the wire harness.
- Connect the pocket tester ($\Omega \times 1$) to the charging coils.

Positive tester probe → white ①
Negative tester probe → ground ②

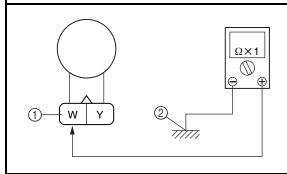

Measure the charging coil resistance.



Charging coil resistance 0.288 ~ 0.432 Ω at 20 °C (68 °F)





Replace the pickup coil/stator assembly.

5. Wiring


- Check the entire charging system's wiring.
 Refer to "CIRCUIT DIAGRAM".
- Is the charging system's wiring properly connected and without defects?






Replace the rectifier/regulator.

Replace the diode and properly connect or repair the charging system's wiring.



LIGHTING SYSTEM

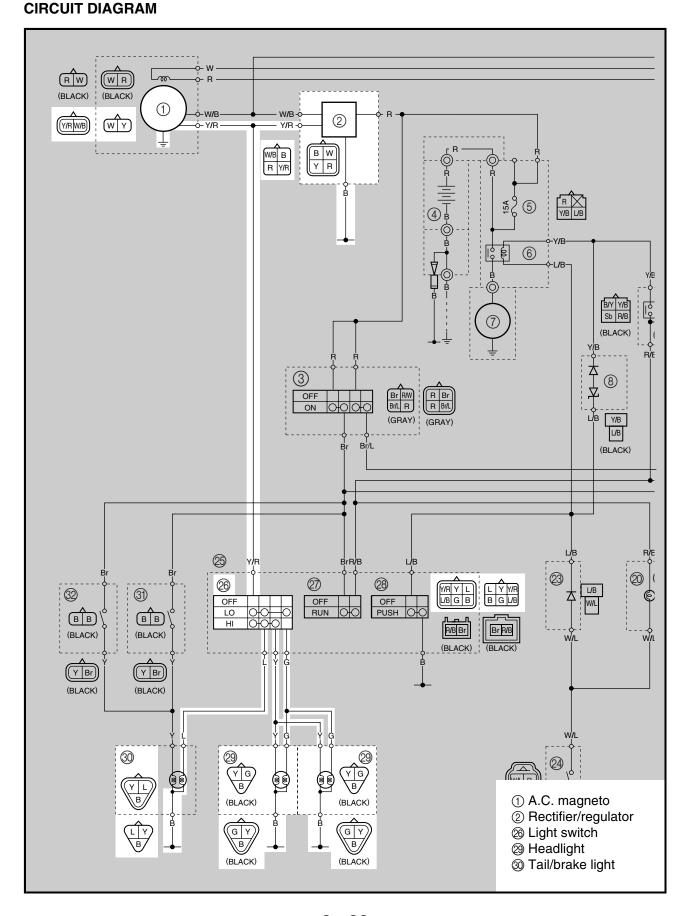

LIGHTING SYSTEM



EBS01067

TROUBLESHOOTING

Any of the following fail to light: headlight, tail/brake light.

Check:

- 1. light switch
- 2. lighting coil resistance
- wiring connections (of the entire lighting system)

NOTE:

- Before troubleshooting, remove the following part(s):
- 1. seat
- 2. fuel tank cover
- 3. side covers (left and right)
- 4. front fender
- Troubleshoot with the following special tool(s).



Pocket tester P/N. YU-03112-C, 90890-03112

EAS00783

- 1. Light switch
- Check the light switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the light switch OK?






Replace the handle-bar switch.

EAS00776

- 2. Lighting coil resistance
- Disconnect the A.C. magneto coupler from the wire harness.
- Connect the pocket tester ($\Omega \times 1$) to the lighting coil terminals as shown.

Positive tester probe → yellow ①
Negative tester probe → ground ②

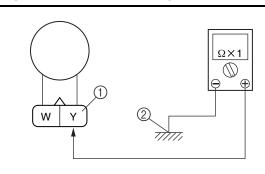

• Measure the lighting coil resistance.



Lighting coil resistance 0.224 ~ 0.336 Ω at 20 °C (68 °F)


• Is the lighting coil OK?





Replace the pickup coil/stator assembly.

LIGHTING SYSTEM



EBS01069

3. Wiring

- Check the entire lighting system's wiring. Refer to "CIRCUIT DIAGRAM".
- Is the lighting system's wiring properly connected and without defects?





Check the condition of each of the lighting system's circuits.

Refer to "CHECK-ING THE LIGHTING SYSTEM".

Properly connect or repair the lighting system's wiring.

EBS01070

CHECKING THE LIGHTING SYSTEM

- 1. The headlights fail to come on.
- 1. Headlight bulb and socket
- Check the headlight bulb and socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS".

• Are the headlight bulb and socket OK?





Replace the headlight bulb, socket or both.

2. Voltage

- Connect the pocket tester (AC 20 V) to the headlight couplers as shown.
- A When the light switch is set to "LO"
- B When the light switch is set to "HI"


Headlight coupler (wire harness side)

Headlight

Positive tester probe \rightarrow

yellow (1) or green (2)

Negative tester probe → black ③

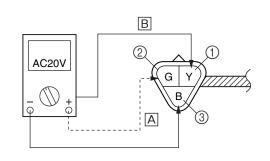

- Set the main switch to "ON".
- · Start the engine.
- Set the light switch to "LO" or "HI".
- Measure the voltage (AC 12 V) of yellow
 ① or green ② on the headlight coupler (wire harness side).
- Is the voltage within specification?





This circuit is OK.

Replace the rectifier/ regulator.

- 2. The tail/brake light fails to come on.
- 1. Tail/brake light bulb and socket
- Check the tail/brake light bulb and socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS".

 Are the tail/brake light bulb and socket OK?



Replace the tail/ brake light bulb, socket or both.


2. Voltage

• Connect the pocket tester (AC 20 V) to the tail/brake light coupler as shown.


Tail/brake light coupler (wire harness side)

Tail/brake light

Positive tester probe → blue ①
Negative tester probe → black ②



- Set the main switch to "ON".
- · Start the engine.
- Measure the voltage (AC 12 V) of blue ①
 on the tail/brake light coupler (wire harness side).
- Is the voltage within specification?




This circuit is OK.

Replace the rectifier/ regulator.



SIGNAL SYSTEM CIRCUIT DIAGRAM

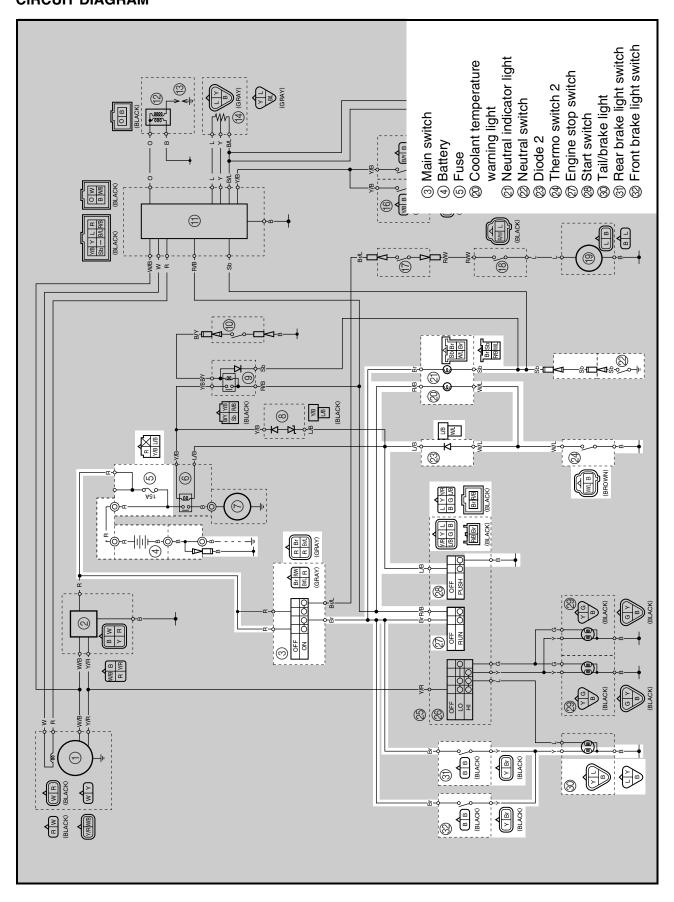



EBS01073

TROUBLESHOOTING

Any of the following fail to light: brake light or an indicator light.

Check:

- 1. fuse
- 2. battery
- 3. main switch
- 4. wiring connections (of the entire signaling system)

NOTE:

- Before troubleshooting, remove the following part(s):
- 1. seat
- 2. fuel tank cover
- 3. side covers (left and light)
- 4. front fender
- Troubleshoot with the following special tool(s).



Pocket tester P/N. YU-03112-C, 90890-03112

EBS01043

- 1. Fuse
- Check the fuse for continuity.
 Refer to "CHECKING THE SWITCHES".
- · Is the fuse OK?





Replace the fuse.

EBS01044

2. Battery

 Check the condition of the battery.
 Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Minimum open-circuit voltage 12.8 V or more at 20 °C (68 °F)

• Is the battery OK?





- Clean the battery terminals.
- Recharge or replace the battery.

EBS01041

3. Main switch

- Check the main switch for continuity.
 Refer to "CHECKING THE SWITCHES".
- Is the main switch OK?





Replace the main switch.

EBS01074

4. Wiring

- Check the entire signal system's wiring.
 Refer to "CIRCUIT DIAGRAM".
- Is the signaling system's wiring properly connected and without defects?





Check the condition of each of the signaling system's circuits. Refer to "CHECK-ING THE SIGNAL-ING SYSTEM".

Properly connect or repair the signaling system's wiring.



EBS01075

CHECKING THE SIGNALING SYSTEM

EBS01076

- 1. The tail/brake light fails to come on.
- 1. Tail/brake light bulb and bulb socket
- Check the tail/brake light bulb and bulb socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS".

 Are the tail/brake light bulb and bulb socket OK?





Replace the tail/ brake light bulb, bulb socket or both.

- 2. Brake light switches
- Check the brake light switches for continuity.

Refer to "CHECKING THE SWITCHES".

Is the brake light switch OK?






Replace the brake light switch.

3. Voltage

 Connect the pocket tester (DC 20 V) to the tail/brake light coupler (wire harness side) as shown.

Positive tester probe \rightarrow yellow ① Negative tester probe \rightarrow black ②

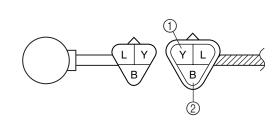

- Set the main switch to "ON".
- Pull in the brake lever or push down on the brake pedal.
- Measure the voltage (DC 12 V) of yellow

 on the tail/brake light coupler (wire harness side).
- Is the voltage within specification?





This circuit is OK.

The wiring circuit from the main switch to the tail/brake light coupler is faulty and must be repaired.

EBS01077

- 2. The neutral indicator light fails to come on.
- 1. Neutral indicator light bulb and socket
- Check the neutral indicator light bulb and socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS".

 Are the neutral indicator light bulb and socket OK?






Replace the neutral indicator light bulb, socket or both.



2. Neutral switch

- Check the neutral switch for continuity.
 Refer to "CHECKING THE SWITCHES".
- Is the neutral switch OK?




Replace the neutral switch.


Voltage

 Connect the pocket tester (DC 20 V) to the indicator light coupler (wire harness side) as shown.

Positive tester probe \rightarrow brown ① Negative tester probe \rightarrow sky blue ②

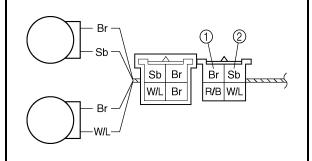

- Set the main switch to "ON".
- Measure the voltage (DC 12 V).
- Is the voltage within specification?



This circuit is OK.

The wiring circuit from the main switch to the indicator light coupler is faulty and must be repaired.

NO

EBS01083

- The coolant temperature warning light does not come on when the start switch is pushed on, or if the coolant temperature warning light does not come on when the temperature is high (more than 117 ~ 123 °C (242.6 ~ 253.4 °F)).
- 1. Coolant temperature warning light bulb and socket
- Check the coolant temperature warning light bulb and socket for continuity.
 Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the coolant temperature warning light bulb and socket OK?



Replace the coolant temperature warning light bulb, socket or both.




2. Thermo switch 2


- Remove the thermo switch 2 from the radiator.
- Connect the pocket tester ($\Omega \times 1$) to the thermo switch 2 (1) as shown.
- Immerse the thermo switch 2 in a container filled with coolant ②.
- Place a thermometer ③ in the coolant.
- Slowly heat the coolant, then let it cool down to the specified temperature.
- Check the thermo switch 2 for continuity at the temperatures indicated below.

Test step	Coolant temperature	Continu- ity	
rest step	Thermo switch		
1	Less than 120 ± 3 °C (248 ± 5.4 °F)	NO	
2	More than 120 ± 3 °C (248 ± 5.4 °F)	YES	
3*	More than 115 ± 3 °C (239 ± 5.4 °F)	YES	
4*	Less than 115 ± 3 °C (239 ± 5.4 °F)	NO	

Steps 1 & 2: Heating phase Steps 3* & 4*: Cooling phase

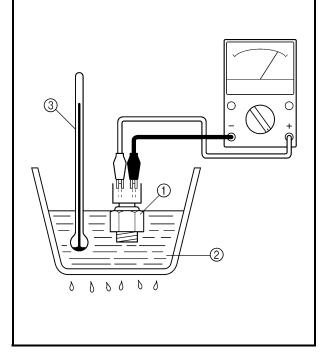

- A The thermo switch circuit is open and the coolant temperature warning light is off.
- B The thermo switch circuit is closed and the coolant temperature warning light is on.

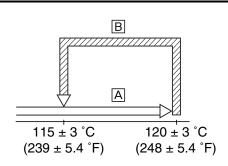

WARNING

- Handle the thermo switch with special care.
- Never subject the thermo switch to strong shocks. If the thermo switch is dropped, replace it.



Thermo switch 28 Nm (2.8 m · kg, 20 ft · lb)

 Does the thermo switch 2 operate properly as described above?






Replace the thermo switch 2.



3. Voltage

 Connect the pocket tester (DC 20 V) to the indicator light connector (wire harness side) as shown.

Positive tester probe \rightarrow red/black ① Negative tester probe \rightarrow white/blue ②

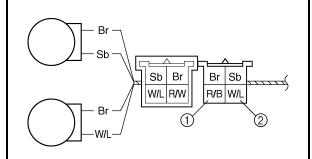

- Set the main switch to "ON".
- Measure the voltage (12 V) of red/black ①
 and brown ② at the indicator light coupler.
- Is the voltage within specification?






The wiring circuit from the main switch to the indicator light connector is faulty, repair it.

4. Diode

- Remove the diode from the coupler.
- Connect the pocket tester ($\Omega \times 1$) to the diode terminals as shown.
- Check the diode for continuity as follows.

l .	
Positive tester probe $ ightarrow$	
blue/black ①	Continuity
Negative tester probe $ ightarrow$	Continuity
white/blue ②	
Positive tester probe →	
white/blue ②	No
Negative tester probe $ ightarrow$	continuity
blue/black ①	

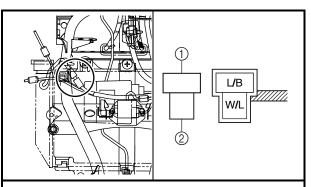

NOTE:

When you switch the tester's positive and negative probes, the readings in the above chart will be reversed.

• Is the diode OK?





Replace the diode.

5. Start switch

- Check the start switch for continuity.
 Refer to "CHECKING THE SWITCHES".
- Is the start switch OK?






The circuit is not faulty.

Replace the handlebar switch.



COOLING SYSTEM CIRCUIT DIAGRAM

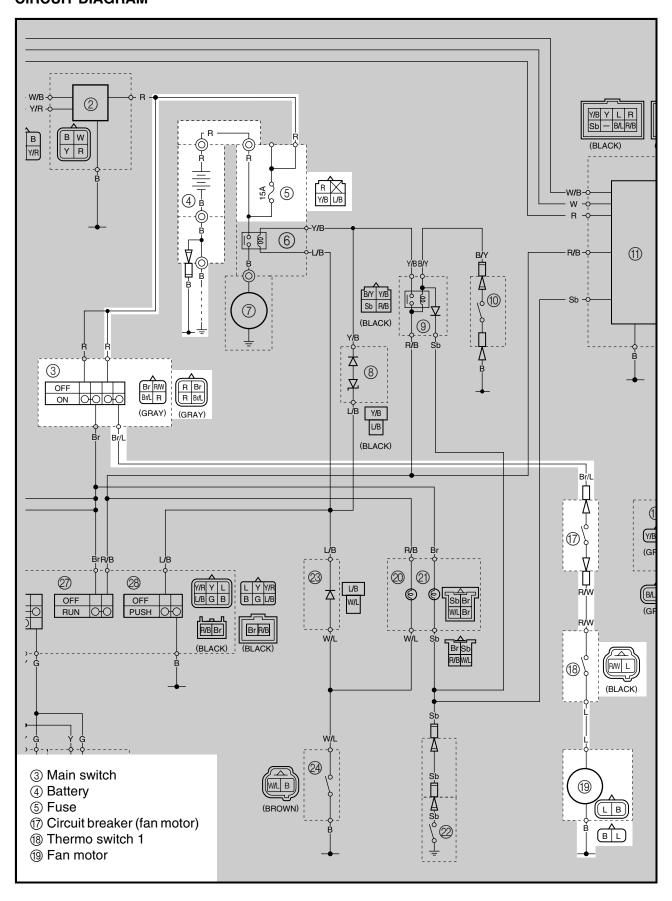

COOLING SYSTEM



EBS01085

TROUBLESHOOTING

The radiator fan motor fails to turn.

Check:

- 1. fuse
- 2. battery
- 3. main switch
- 4. radiator fan motor
- 5. circuit breaker (fan motor)
- 6. thermo switch 1
- 7. wiring connections (the entire cooling system)

NOTE:

- Before troubleshooting, remove the following part(s):
- 1. seat
- 2. fuel tank cover
- 3. side covers (left and right)
- 4. front fender
- Troubleshoot with the following special tool(s).



Pocket tester P/N. YU-03112-C, 90890-03112

EBS01043

- 1. Fuse
- Check the fuse for continuity.
 Refer to "CHECKING THE SWITCHES".
- Are the fuse OK?





Replace the fuse.

EBS01044

2. Battery

 Check the condition of the battery.
 Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Minimum open-circuit voltage 12.8 V or more at 20 °C (68 °F)

• Is the battery OK?





- Clean the battery terminals.
- Recharge or replace the battery.

EBS01041

3. Main switch

- Check the main switch for continuity.
 Refer to "CHECKING THE SWITCHES".
- Is the main switch OK?





Replace the main switch.


ELEC -

EBS01086

4. Radiator fan motor

- Disconnect the radiator fan motor coupler from the wire harness.
- Connect the battery (DC 12 V) as shown.

Positive battery lead \rightarrow blue ① Negative battery lead \rightarrow black ②

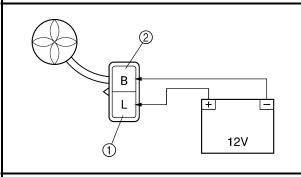

Does the radiator fan motor turn?






The radiator fan motor is faulty and must be replaced.

5. Circuit breaker (fan motor)

- Remove the circuit breaker from the wire harness.
- Connect the pocket tester ($\Omega \times 1$) to the circuit breaker.

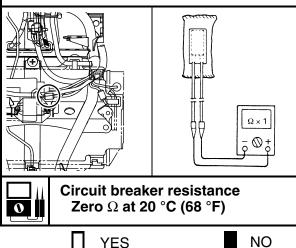



Replace the circuit breaker.


EBS01088

6. Thermo switch 1

- Remove the thermo switch 1 from the radiator.
- Connect the pocket tester ($\Omega \times 1$) to the thermo switch 1 ① as shown.
- Immerse the thermo switch 1 in a container filled with coolant ②.
- Place a thermometer (3) in the coolant.
- Slowly heat the coolant, then let it cool down to the specified temperature.
- Check the thermo switch 1 for continuity at the temperatures indicated below.

Test step	Coolant temperature	Continu- ity	
rest step	Thermo switch		
1	Less than 98 ± 3°C (208.4 ± 5.4 °F)	NO	
2	More than 98 ± 3 °C (208.4 ± 5.4 °F)	YES	
3*	More than 92 ± 3 °C (197.6 ± 5.4 °F)	YES	
4*	Less than 92 ± 3 °C. (197.6 ± 5.4 °F)	NO	

Steps 1 & 2: Heating phase Steps 3* & 4*: Cooling phase

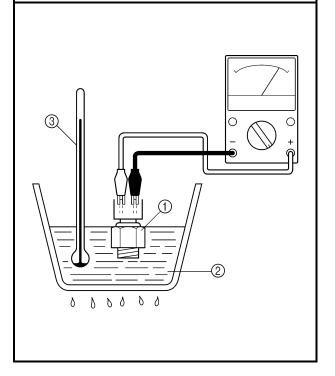


WARNING

- Handle the thermo switch with special care.
- Never subject the thermo switch to strong shocks. If the thermo switch is dropped, replace it.



Thermo switch 28 Nm (2.8 m · kg, 20 ft · lb)

- A The thermo switch circuit is open and the radiator fan is off.
- B The thermo switch circuit is closed and the radiator fan is on.

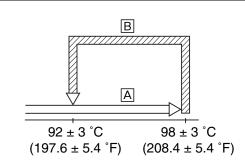

 Does the thermo switch 1 operate properly as described above?





Replace the thermo switch 1.

EBS01090

7. Wiring

- Check the entire cooling system's wiring. Refer to "CIRCUIT DIAGRAM".
- Is the cooling system's wiring properly connected and without defects?





This circuit is OK.

Properly connect or repair the cooling system's wiring.

STARTING FAILURE/HARD STARTING

TRBL ?

EBS00537

TROUBLESHOOTING

	\sim	_	_	
N		١.	_	-

The following troubleshooting does not cover all the possible causes of trouble. It should be helpful, however, as a guide to troubleshooting. Refer to the relative procedure in this manual for check, adjustment and replacement of parts.

STARTING FAILURE/HARD STARTING

FUEL SYSTEM

Fuel tank

- Empty
- · Clogged fuel strainer
- · Clogged fuel tank breather hose
- Deteriorated or contaminated fuel

Fuel cock

· Clogged fuel hose

Carburetor

- · Deteriorated or contaminated fuel
- Clogged pilot jet
- Clogged pilot air passage
- · Sucked-in air
- Deformed float
- Worn needle valve
- · Improperly sealed valve seat
- Improperly adjusted fuel level
- · Improperly set pilot jet
- · Clogged starter jet
- Choke valve malfunction

Air filter

Clogged air filter element

ELECTRICAL SYSTEM

Spark plug

- Improper plug gap
- Worn electrodes
- Wire between terminals broken
- Improper heat range

Ignition coil

- Broken or shorted primary/secondary
- · Faulty ignition coil lead
- Broken body

C.D.I. system

- Faulty C.D.I. unit
- Faulty pickup coil
- Faulty lighting coil
- · Faulty charging coil
- Broken woodruff key

Switches and wiring

- · Faulty main switch
- Faulty engine stop switch
- · Broken or shorted wiring
- · Faulty neutral switch
- · Faulty start switch
- · Faulty clutch switch
- Faulty throttle switch
- · Faulty carburetor switch
- Loose connections

Starter motor

- · Faulty starter motor
- Faulty starter relay
- Faulty starting circuit cut-off relay
- · Faulty starter clutch
- · Faulty torque limiter

Battery

- Faulty battery
- · Discharged battery

9

STARTING FAILURE/HARD STARTING/POOR IDLE SPEED PERFORMANCE/POOR MEDIUM AND HIGH-SPEED PERFORMANCE



COMPRESSION SYSTEM

Cylinder and cylinder head

- · Loose spark plug
- Loose cylinder head or cylinder
- Broken cylinder head gasket
- Broken cylinder gasket
- Worn, damaged or seized cylinder

Valve and camshaft

- · Improperly sealed valve
- Improperly contacted valve and valve seat
- Improper valve timing
- Broken valve spring
- · Seized camshaft

Piston and piston rings

- · Improperly installed piston ring
- · Worn, fatigued or broken piston ring
- Seized piston ring
- Seized or damaged piston

Crankcase and crankshaft

- · Improperly seated crankcase
- Seized crankshaft

Valve train

- Improperly adjusted valve clearance
- · Improperly adjusted valve timing

EBS00538

POOR IDLE SPEED PERFORMANCE

POOR IDLE SPEED PERFORMANCE

Carburetor

- Improperly returned choke
- · Loose or clogged pilot jet
- Loose or clogged pilot air jet
- Improperly adjusted idle speed (throttle stop screw)
- Improper throttle cable play
- Flooded carburetor

Intake manifold

Loosen carburetor joint

Electrical system

- Faulty battery
- Faulty C.D.I. unit
- Faulty pickup coil
- Faulty ignition coil

Valve train

Improperly adjusted valve clearance

Air filter

- · Clogged air filter element
- Loosen air filter joint

EBS00539

POOR MEDIUM AND HIGH-SPEED PERFORMANCE

POOR MEDIUM AND HIGH-SPEED PERFORMANCE

Refer to "STARTING FAILURE/HARD STARTING" and "POOR IDLE SPEED PERFORMANCE—Valve train".

Carburetor

- Improper jet needle clip position
- Improperly adjusted fuel level
- · Clogged or loose main jet
- Deteriorated or contaminated fuel

Air filter

Clogged air filter element

FAULTY GEAR SHIFTING/ CLUTCH SLIPPING/DRAGGING

TRBL ?

EBS00541

FAULTY GEAR SHIFTING

HARD SHIFTING

Refer to "CLUTCH DRAGGING".

SHIFT PEDAL DOES NOT MOVE Shift shaft

· Bent shift shaft

Shift drum and shift forks

- Groove jammed with impurities
- · Seized shift fork
- Bent shift fork guide bar

JUMPS OUT GEAR

Shift shaft

- Improperly adjusted shift lever position
- Improperly returned stopper lever

Shift forks

· Worn shift fork

EBS00545

CLUTCH SLIPPING/DRAGGING

Clutch

· Loose clutch spring

CLUTCH SLIPPING

- · Fatigued clutch spring
- · Worn friction plate
- · Worn clutch plate
- · Incorrectly assembled clutch

CLUTCH DRAGGING

Clutch

- Warped pressure plate
- Unevenly tensioned clutch springs
- · Loose clutch boss nut
- · Burnt primary driven gear bushing
- · Bent clutch plate
- Swollen friction plate
- Broken clutch boss

Transmission

- · Seized transmission gear
- · Jammed impurities
- · Incorrectly assembled transmission

Shift guide

· Broken shift guide

Shift drum

- Improper thrust play
- Worn shift drum groove

Transmission

Worn gear dog

Engine oil

- · Low oil level
- Improper quality (low viscosity)
- Deterioration

Engine oil

- High oil level
- Improper quality (high viscosity)
- Deterioration

OVERHEATING/FAULTY BRAKE/ SHOCK ABSORBER MALFUNCTION

EBS00547

OVERHEATING

OVERHEATING

Ignition system

- Improper spark plug gap
- Improper spark plug heat range
- Faulty C.D.I. unit

Fuel system

- Improper carburetor main jet (improper setting)
- Improper fuel level
- Clogged air filter element

Compression system

• Heavy carbon deposit

EBS00550

FAULTY BRAKE

POOR BRAKING EFFECT

Disc brake

- · Worn brake pads
- Worn disc
- · Air in brake fluid
- · Leaking brake fluid
- Faulty master cylinder kit cup
- · Faulty caliper kit seal
- Loose union bolt
- Broken brake hose and pipe
- Oily or greasy disc/brake pads
- Improper brake fluid level

EBS0055

SHOCK ABSORBER MALFUNCTION

MALFUNCTION

- Bent or damaged damper rod
- Damaged oil seal lip
- Fatigued shock absorber spring
- · Leaking oil or gas

Engine oil

- Improper oil level
- · Improper oil viscosity
- · Inferior oil quality

Brake

· Brake drag

Cooling system

- · Low coolant level
- · Clogged or damaged radiator
- Damaged or faulty water pump
- · Faulty fan motor
- Faulty thermo switch

UNSTABLE HANDLING/ LIGHTING SYSTEM



EBS00552

UNSTABLE HANDLING

UNSTABLE HANDLING

Handlebar

Improperly installed or bent

Steering

- Incorrect toe-in
- · Bent steering stem
- Improperly installed steering stem
- Damaged bearing or bearing race
- Bent tie-rods
- Deformed steering knuckles

Tires

- Uneven tire pressures on both sides
- · Incorrect tire pressure
- Uneven tire wear

Wheels

- Deformed wheel
- Loose bearing
- · Bent or loose wheel axle
- Excessive wheel runout

Frame

- Bent
- · Damaged frame

Swingarm

- · Worn bearing or bushing
- Bent or damaged

EBS00553

LIGHTING SYSTEM

HEADLIGHT DOES NOT COME ON

- Improper bulb
- Too many electric accessories
- Hard charging (broken stator coil and/or faulty rectifier/regulator)
- Incorrect connection
- · Improperly grounded
- Poor contacts (main or light switch)
- · Bulb life expired

BULB BURNT OUT

- Improper bulb
- · Faulty battery
- Faulty rectifier/regulator
- · Improperly grounded
- Faulty main and/or light switch
- · Bulb life expired

TAIL/BRAKE LIGHT DOES NOT LIGHT


- · Wrong tail/brake light bulb
- Too many electrical accessories
- Hard charging (broken stator coil and/or faulty rectifier/regulator)
- Incorrect connection
- Improperly grounded
- Poor contacts (main or light switch)
- Burnt-out tail/brake light bulb

TAIL/BRAKE LIGHT BULB BURNT OUT

- Wrong tail/brake light bulb
- · Faulty battery
- Faulty rectifier/regulator
- · Improperly grounded
- Faulty main and/or light switch
- Incorrectly adjusted rear brake light switch
- Tail/brake light bulb life expired



YFZ450S WIRING DIAGRAM

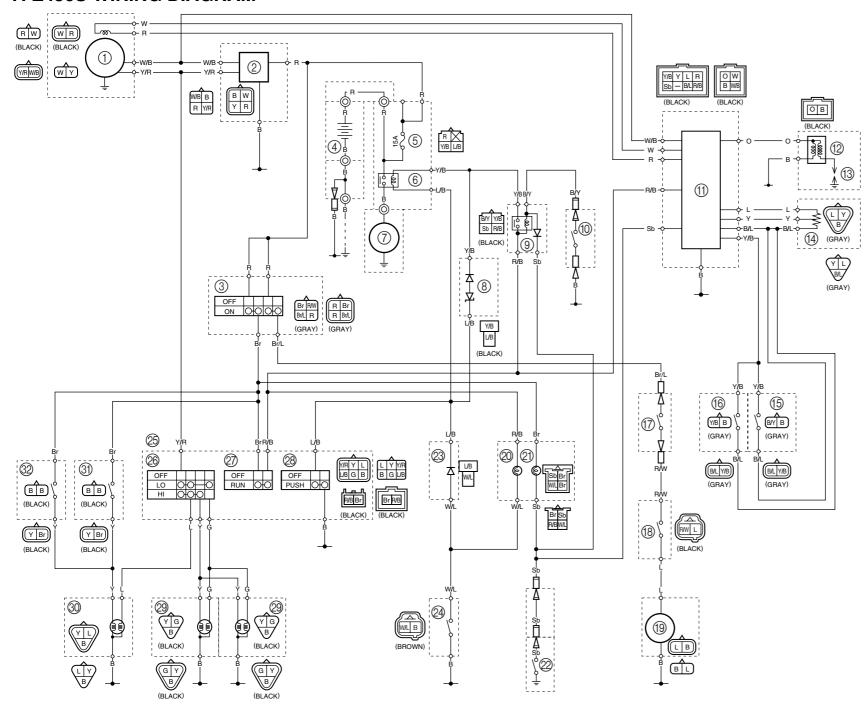

- A.C. magneto
 Rectifier/regulator
 Main switch
- 4 Battery
 5 Fuse
- Starter relayStarter motor
- Diode 1
- Starting circuit cut-off relay
 Clutch switch
 C.D.I. unit

- 12 Ignition coil
- ⑤ Spark plug⑥ Throttle position sensor
- (5) Throttle switch
- (6) Carburetor switch (7) Circuit breaker (fan motor) (8) Thermo switch 1
-) Fan motor
- ⑤ Fan motor
 ⑥ Coolant temperature warning light
 ② Neutral indicator light
 ② Neutral switch
 ② Diode 2
 ④ Thermo switch 2
 ⑥ Handlebar switch
 ⑥ Light switch
 ② Engine stop switch
 ② Start switch
 ② Headlight
 ③ Tail/brake light

- 3 Tail/brake light
- Rear brake light switchFront brake light switch

W/LWhite/Blue

Y/R.....Yellow/Red

Y/B.....Yellow/Black

COLOR CODE BBlack

Br.....Brown G.....Green L.....Blue O.....Orange R.....Red SbSky blue WWhite

Y..... Yellow B/L..... Black/Blue B/Y Black/Yellow Br/L.... Brown/Blue

L/B..... Blue/Black R/B Red/Black R/W Red/White W/B White/Black