1998 Lexus Owner's Manual

LX 470





LX470 (U)

FOREWORD

Welcome to the growing group of value–conscious people who drive Lexus vehicles. We are proud of the advanced engineering and quality construction of each vehicle we build.

This Owner's Manual explains the features of your new Lexus. Please read it and follow the instructions carefully so that you can enjoy many years of safe motoring.

When it comes to service, remember that your Lexus dealer knows your vehicle best and is interested in your complete satisfaction. Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, or you need emergency assistance for any reason, please call the following number:

U.S. OWNERS

- When traveling in the U.S. mainland or Canada: Lexus Roadside Assistance 1–800–25–LEXUS (Toll–Free) (1–800–255–3987)
- HAWAII: Lexus Customer Service Assistance

1-800-25-LEXUS (Toll-Free) (1-800-255-3987)

CANADIAN OWNERS

• Please refer to the separate "Owner's Guide" or "Owner's Manual Supplement".

Please leave this Owner's Manual in this vehicle at the time of resale. The next owner will need this information also.

All information and specifications in this manual are current at the time of printing. However, because of the Lexus policy of continual product improvement, we reserve the right to make changes at any time without notice.

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

TOYOTA MOTOR CORPORATION

i

INTRODUCTION

New vehicle warranty

Your new vehicle is covered by the following Lexus limited warranties:

- New vehicle warranty
- Emission control systems warranty
- Others

For further information, please refer to the separate "Owner's Guide", "Owner's Manual Supplement" or "Warranty Booklet".

Your responsibility for maintenance

It is the owner's responsibility to make sure the specified maintenance is performed. Section 5 of this Owner's Manual gives details of these maintenance requirements. Included in Section 6 is general maintenance. For scheduled maintenance information, please refer to the separate "Owner's Manual Supplement/Maintenance Schedule".

Accessories, spare parts and modification of your Lexus

A wide variety of non-genuine spare parts and accessories for Lexus vehicles are currently available in the market. You should know that Toyota does not warrant these products and is not responsible either for their performance, repair or replacement, or for any damage they may cause to, or adverse effect they may have on, your Lexus vehicle. This vehicle should not be modified with non-genuine Lexus products. Modification with non-genuine Lexus products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

If you install any Genuine Accessories such as a bull-bar, winch, etc., consult your Lexus dealer.

Spark ignition system of your Lexus

The spark ignition system in your Lexus meets all requirements of the Canadian Interference–Causing Equipment Standard.

Installation of a mobile two-way radio system

As the installation of a mobile two–way radio system in your vehicle could affect electronic systems such as the multiport fuel injection system/sequential multiport fuel injection system, cruise control system, anti–lock brake system and Supplemental Restraint System (SRS), be sure to check with your Lexus dealer for precautionary measures or special instructions regarding installation.

INTRODUCTION

Scrapping of your Lexus

The Supplemental Restraint System (SRS) in your Lexus consists of driver and front passenger airbags and seat belt pretensioners. The SRS device contains explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, it may cause an accident such as a fire. Be sure to have the SRS removed and disposed of by a qualified service shop or by your Lexus dealer before you scrap your vehicle.

On-pavement and off-road driving tips

This vehicle will handle and maneuver differently from an ordinary passenger car because it is also designed for off-road use. As with other vehicles of this type, failure to operate this vehicle correctly may result in loss of control or an accident. Be sure to read "Off-road vehicle precautions" on page 204 and "Off-road driving precautions" on page 207.

HOW TO USE THIS MANUAL

HOW TO USE THIS MANUAL

The contents of this manual are explained briefly on this page to help you make the best use of the manual. Please read this page and the rest of the Owner's Manual carefully to make sure you fully understand the operation of your vehicle.

This will help you enjoy safe and comfortable driving.

TABLE OF CONTENTS

The table of contents and the pictorial index provide easy reference to the appropriate pages.

BASIC OPERATION – QUICK REFERENCE

Operation of basic equipment is briefly explained in an easily understandable way for quick reference.

SECTION 1 - INSTRUMENTS AND CONTROLS

The vehicle's equipment is divided into the 7 groups listed below. Use of the equipment is explained, including any points you should pay particular attention to.

- 1. Keys and doors
- 2. Switches
- 3. Gauges, meters and service reminder indicators
- 4. Interior equipment
- 5. Exterior equipment
- 6. Comfort adjustment
- 7. Theft deterrent

SECTION 2 – AIR CONDITIONING AND AUDIO

The features of the vehicle's air conditioning and audio are explained in detail. Be sure to read this section so that you can make full use of them.

SECTION 3 – STARTING AND DRIVING

Starting the engine, driving, stopping, operation of features affecting vehicle handling, hints on vehicle safety and safe driving techniques are all explained. Please read everything in this section, and remember – drive safely!

SECTION 4 - IN CASE OF AN EMERGENCY

This section explains what to do in the event of an urgent situation such as the engine not starting or getting a flat tire, etc. If such a problem occurs, check the contents of this Owner's Manual and follow the instructions given.

SECTION 5 – MAINTENANCE

This section explains the importance of regular maintenance. Regular and periodic inspection and maintenance of your Lexus will help to keep your vehicle in its best condition.

SECTION 6 – SERVICE PROCEDURES AND SPECIFICATIONS

Simple maintenance procedure and service data are provided here for your reference should you wish to perform inspection and maintenance yourself.

HOW TO USE THIS MANUAL

INDEX

The page number is listed for each item in the Owner's Manual so that you can rapidly find the item and page you are searching for.


GAS STATION INFORMATION

The information you need to know for appropriate servicing at the gas station is provided here.

QUICK INDEX

This is designed so that you can quickly find the needed information when an urgent situation arises.

Safety symbol

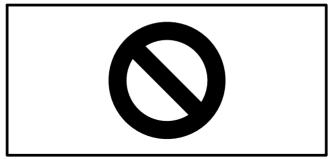

In this manual, you will also see a circle with a slash through it. This means "Do not", "Do not do this", or "Do not let this happen".

Safety and vehicle damage warnings

In this manual you will see CAUTION and NOTICE warnings. These are used in the following ways:

CAUTION

This is a warning against something which may cause injury to people if the warning is ignored. You are informed what you must or must not do in order to avoid or reduce the risk to yourself and other people.

NOTICE

This is a warning against something which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed what you must or must not do in order to avoid or reduce the risk of damage to your Lexus and its equipment.

Your Lexus Owner's Manual provides you with a considerable amount of information. To use this information most effectively, please take the time to familiarize yourself with the contents and use of the manual.

TABLE OF CONTENTS

DACIC ODEDATION OLICY DEEED		
BASIC OPERATION – QUICK REFER SECTION 1 INSTRUMENTS AND	ENCE 1 [1] Keys and doors 7	BASIC OPERATION
CONTROLS	2 Switches 21	
001111022	3 Gauges, meters and service	SECTION 1
	reminder indicators 34	
	4 Interior equipment 46	
	5 Exterior equipment 63	SECTION 2
	6 Comfort adjustment	
	7 Theft deterrent 129	SECTION 3
SECTION 2 AIR CONDITIONING AN	ND AUDIO 133	SECTION 5
SECTION 3 STARTING AND	1 Starting and driving 167	
DRIVING	2 Driving tips	SECTION 4
SECTION 4 IN CASE OF AN EMERG	ENCY 219	
SECTION 5 MAINTENANCE		
SECTION 6 SERVICE PROCEDURES	1 Introduction	SECTION 5
AND SPECIFICATIONS	2 Engine 255	
	3 Chassis 267	SECTION 6
	4 Electrical components 281	SECTION
	5 Body 299	
SECTION 7 REPORTING SAFETY D	EFECTS FOR U.S. OWNERS 307	SECTION 7
INDEX		
GAS STATION INFORMATION	Inside back cover	NIDEV
QUICK INDEX	Back cover	INDEX

INSTRUMENT PANEL



Page

	Page		Page
1	Door lock switch and power window	17	Center differential lock switch
	switches 17, 29	18	Automatic air conditioning controls
2	Driving position memory switch	19	Rear window defogger switch
3	Power quarter window switches	20	Rear air conditioning on-off switch
4	Power rear view mirror control switch	21	Outside rear view mirror defogger switch
5	Rear differential lock switch	22	Ashtray
6	Fuel filler door opener 65	23	<i>Power outlet</i>
7	Hood lock release lever	24	Damping mode select switch
8	Headlight and turn signal switch	25	Active height control switch
9	Wiper and washer switch	26	Driving pattern selector switch
10	Cruise control switch	27	Second start mode selector switch
11	Car audio146	28	Automatic transmission selector lever
12	Power antenna switch	29	Four-wheel drive control lever
13	Outside temperature display 51	30	Seat heater switches
14	<i>Clock</i>	31	<i>Glovebox</i>
15	Front passenger's seat belt reminder light		
16	Emergency flasher switch		

For detailed information, refer to the description given in each section.

х

INSTRUMENT CLUSTER (Vehicles sold in U.S.A.)



	Page		Page
1	Voltmeter	16	Low fuel level warning light
2	Fuel gauge	17	Anti-lock brake system warning light
3	Odometer and trip meter	18	Driver's seat belt reminder light
4	<i>Odo/Trip knob</i>	19	Malfunction indicator lamp
5	Turn signal indicator light 23	20	Automatic transmission fluid temperature warning light 42
6	Headlight high beam indicator light	21	Unengaged "Park" warning light
7	Automatic transmission indicator lights	22	Cruise control indicator light
8	Automatic transmission second start indicator light 180	23	Headlight indicator light
9	Overdrive–off indicator light	24	Center differential lock indicator light
10	"PWR" mode indicator light	25	Rear differential lock indicator light
11	<i>Tachometer</i>	26 27	Low washer fluid warning light43SRS warning light41
12	Active height control indicator lights	28	Open door warning light
13	Oil pressure gauge	28	Brake system warning light
14 15	Engine coolant temperature gauge 35 Discharge warning light 43	30	Instrument panel light control dial

For detailed information, refer to the description given in each section.

INSTRUMENT CLUSTER (Vehicles sold in Canada)




xii

	Page		Page
1	Voltmeter	16	Low fuel level warning light
2	Fuel gauge	17	Anti-lock brake system warning light
3	Odometer and trip meter	18	Driver's seat belt reminder light
4	<i>Odo/Trip knob</i>	19	Malfunction indicator lamp 41
5	Turn signal indicator light 23	20	Automatic transmission fluid temperature warning light 42
6	Headlight high beam indicator light	21	Unengaged "Park" warning light
7	Automatic transmission indicator lights	22	Cruise control indicator light
8	Automatic transmission second start indicator light 180	23	Tail light indicator light 22
9	Overdrive–off indicator light	24	Center differential lock indicator light
10	"PWR" mode indicator light	25	Rear differential lock indicator light
11	<i>Tachometer</i>	26 27	Low washer fluid warning light43SRS warning light41
12	Active height control indicator lights	28	Open door warning light
13	Oil pressure gauge	28	Brake system warning light
14 15	Engine coolant temperature gauge 35 Discharge warning light 43	30	Instrument panel light control dial

For detailed information, refer to the description given in each section.

SEAT AND STEERING WHEEL

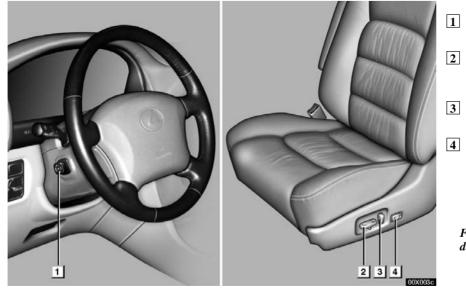


	_
1	Tilt and telescopic steering adjustmentswitch86
2	Seat position, seat cushion angle and height control switch
3	Seatback angle control switch
4	Lumbar support control switch 74

Page

For detailed information, refer to the description given in each section.

EXTERIOR VIEW

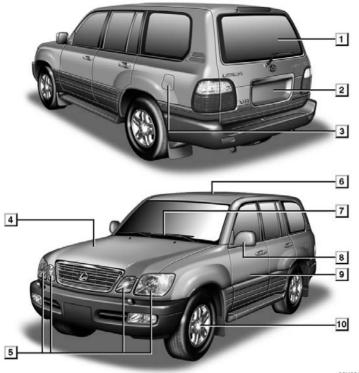

	Page
1	Rear window defogger
2	Back door
3	Fuel filler door
4	<i>Hood</i>
5	Headlights 22, 295
6	<i>Moon roof</i>
7	Windshield wiper and washer 25, 294
8	Outside rear view mirror
9	Side door
10	<i>Tire and wheel</i>

For detailed information, refer to the description given in each section.

00X004b


BASIC OPERATION

QUICK REFERENCE

Driver's seat	2
Steering wheel	2
Automatic transmission	3
Headlight and turn signal switch	4
Wiper switch	5

BASIC OPERATION – QUICK REFERENCE

1. DRIVER'S SEAT

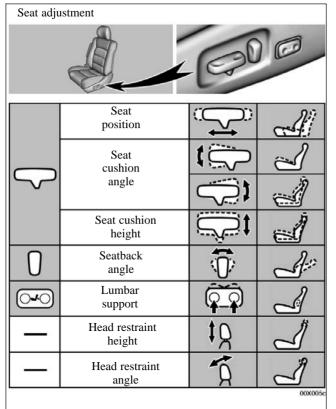

2. STEERING WHEEL

• TILT STEERING WHEEL



To tilt the steering wheel up or down to the desired angle, push the control switch in the required direction and release the button when the steering wheel reaches the desired angle.


• TELESCOPIC STEERING WHEEL



To move the steering wheel to the desired position, push the control switch away from you or pull it toward you until the steering wheel reaches the desired position.

BASIC OPERATION – QUICK REFERENCE


3. AUTOMATIC TRANSMISSION

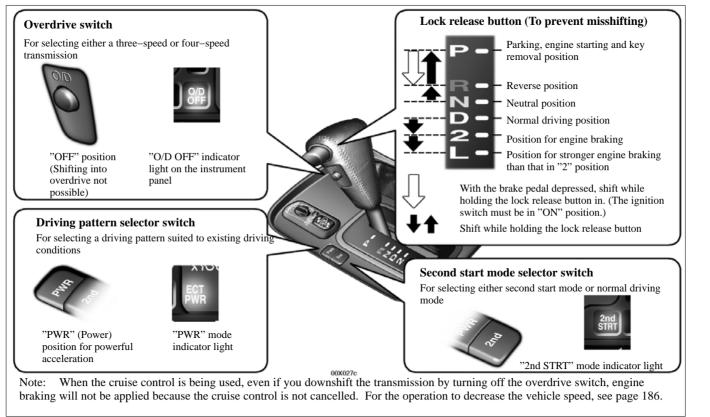


BASIC OPERATION – QUICK REFERENCE

4. HEADLIGHT AND TURN SIGNAL SW

ITCH

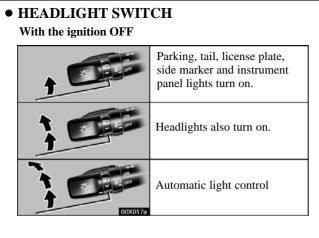


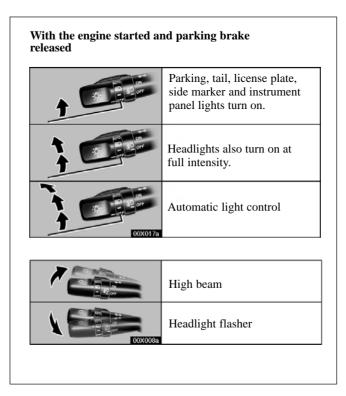

• TURN SIGNAL SWITCH Right or left turn Lane change (Right or left)

BASIC OPERATION – QUICK REFERENCE

5. WIPER SWITCH

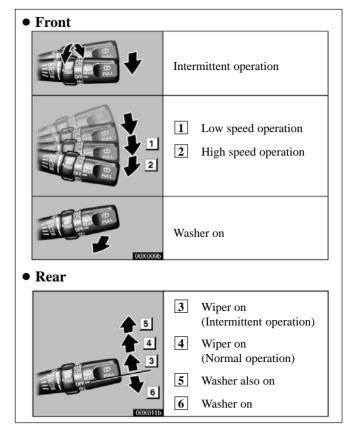

Β

SECTION 1 – 1


INSTRUMENTS AND CONTROLS

Keys and doors

Keys	8
Engine immobiliser system 1	0
Wireless remote control	11
Side doors 1	6
Back door 1	8

1

KEYS

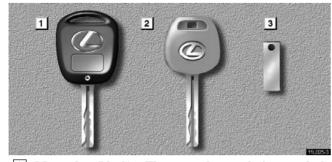

- 1 Master key (black) The master key works in every lock. For your Lexus dealer to make you a new key with built–in transponder chip, your dealer will need it.
- 2 Subkey (gray) The subkey will not open the glovebox.
- **3** Key number plate Keep the plate in a safe place such as your wallet, not in the vehicle.

The master key and subkey each have a transponder chip in their key head which is very important for the immobiliser system function, so be careful not to lose these keys. If you make your own duplicate key, you will not be able to cancel the system or start the engine.

To protect things locked in the glovebox when you have your vehicle parked, leave the subkey with the attendant. Since the side doors and back door can be locked without a key, you should always carry a spare master key in case you accidentally lock your keys inside the vehicle.

If you should lose your keys or if you need additional keys, duplicates can be made by a Lexus dealer using the key number.

You should also put a copy of the key number with your important papers.




Since a transponder chip is not built in this flat key, you cannot start the engine with this key. Use this key to release the lock in case you accidentally lock your keys inside the vehicle.

Insert your flat key in its key case as shown. We recommend that you always carry this with you for emergency use. Do not leave it in your vehicle.

NOTICE

- Do not let the key case become bent as the key may fall out or become bent also.
- The flat key is designed for emergency use only.

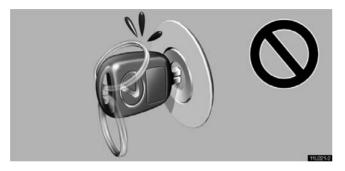

When using a key containing a transponder chip, observe the following precautions:

• When starting the engine, do not use the key with a key ring resting on the key grip and do not press the key ring against the key grip. Otherwise the engine may not start, or may stop soon after it starts.



• When starting the engine, do not use the key with other transponder keys around (including keys of other vehicles) and do not press other key plates against the key grip. Otherwise the engine may not start, or may stop soon after it starts. If this happens, remove the key once and then insert it again after taking off other transponder keys (including keys of other vehicles) from the ring or while gripping or covering them with your hand to start the engine.



- Do not bend the key grip.
- Do not cover the key grip with any material that cuts off electromagnetic waves.
- Do not knock the key hard against other objects.
- Do not leave the key exposed to high temperatures for a long period, such as on the dashboard and hood under the direct sunlight.
- Do not put the key in water or wash it in an ultrasonic washer.
- Do not use the key with electromagnetic materials.

ENGINE IMMOBILISER SYSTEM



The engine immobiliser system is a theft prevention system. When you insert the key in the ignition switch, the transponder chip in the key's head transmits an electronic code to the vehicle. The engine will start, only when the electronic code in the chip corresponds to the registered ID code for the vehicle.

The system is automatically set when the key is removed from the ignition switch. At this time, the security indicator light at the center cluster flashes. When you insert the key in the ignition switch, the security indicator light goes out and the system is canceled automatically, which enables the engine to start.

For your Lexus dealer to make you a new key with built–in transponder chip, your dealer will need your key number and master key. However, there is a limit to the number of additional keys your Lexus dealer can make for you.

If you make your own duplicate key, you will not be able to cancel the system or start the engine.

For vehicles sold in U.S.A.

FCC ID: MOZ RI-7ATY MADE IN JAPAN

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For vehicles sold in Canada

This device complies with RSS–210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

WIRELESS REMOTE CONTROL

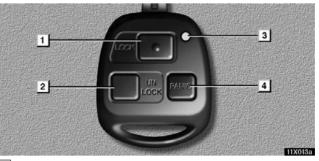

- 1 Locking the doors
- 2 Unlocking the doors
- **3** Indicator light
- 4 Sounding an alarm

When you operate any button on the key, push it slowly and surely.

The operational range of the wireless remote control is approximately 1 meter (3 feet). The effective range may vary with different conditions. To activate the wireless remote control without fail, do it approximately 1 meter (3 feet) from your Lexus.

In the following cases, the battery in the key may be discharged. If this is a case, replace it using a special screwdriver.

- The remote control does not work.
- The operational range of wireless remote control becomes extremely short.
- The indicator light on the key is dimmed or does not come on.

For the replacement of the battery, see "Replacing the battery" on page 14. You can also have the battery of the key replaced by your Lexus dealer.

If you lose the wireless key, contact your Lexus dealer as soon as possible to avoid the possibility of theft, or an accident.

You can use up to 4 wireless remote control keys for the same vehicle. Contact your Lexus dealer for detailed information.

The wireless remote control key is an electronic component. Observe the following instructions in order not to cause damage on the key.

- Do not leave the wireless remote control key on the places where the temperature becomes high such as on the dashboard.
- Do not disassemble it.
- Avoid knocking it hard against other objects or dropping it.
- Avoid putting it in water.

Locking/Unlocking the doors

When you push the "LOCK" button on the key, all the doors can be locked from outside the vehicle.

At this time, you can hear one beep and tail lights flash. However, when you push the "LOCK" button with any door not closed securely, the buzzer sounds for 10 seconds. To stop the buzzer, close all the doors securely or push the "UNLOCK" button. If the key is in the ignition switch, locking cannot be done.

When you push the "UNLOCK" button, the driver's door is unlocked. Pushing that button once again within 3 seconds from the first push, all other doors are also unlocked.

At this time, two beeps sound and tail lights flash.

You have 30 seconds to open a door after using the wireless remote unlock feature. If a door is not opened by then, all the doors will be automatically locked again. This function does not work when the ignition key is inserted.

Even if the "LOCK" or "UNLOCK" switch is kept pressed in, the locking or unlocking operation is not repeated. Release the button and then push again.

Sounding an alarm



When you push the "PANIC" button for about 1 second, an alarm sounds to deter any person trying to break into or damage your vehicle.

If you want to stop the alarm, push "PANIC" button for about 1 second or "UNLOCK" button.

This function does not work when the ignition key is in the "ON" position.

For vehicles sold in U.S.A.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio / TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For vehicles sold in Canada

This device complies with RSS–210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Replacing the battery

When you replace the battery, prepare a lithium battery CR1616 and a special screwdriver.

A CAUTION

Special care should be taken that small children do not swallow the removed battery or components.

NOTICE


When replacing the battery, be careful not to lose the components, screws and O-ring.



1. Remove the screw, and then the cover while pushing it in the arrow direction.



2. Remove the module from the key frame.

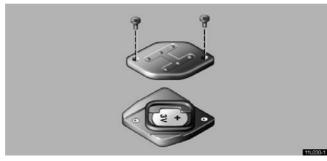

3. Remove the 2 screws to take out the lid of the module.

4. Take out the discharged battery and put a new battery with the positive side up.

NOTICE

- Make sure the positive side and negative side of the battery should be faced correctly.
- Be careful not to bend the electrode of the battery insertion and that dust or oils do not adhere to the inside of the module.
- Take care not to lose the screws and O-ring.

5. Install the lid with the 2 screws.

NOTICE

Take care not to damage or bend the O-ring when installing.

6. Install the module into the key frame and secure the cover with the screw.

7. When pushing any switch on the wireless key, make sure the indicator light comes on.

SIDE DOORS


Locking with key





Turn the key towards the front of the vehicle to lock and towards the back to unlock.

All the side doors and back door lock and unlock simultaneously with either front door. In the driver's door lock, turning the key once will unlock the driver's door and twice in succession will unlock all the side doors and back door simultaneously. In the passenger's door lock, turning the key once will unlock all the side doors and back door simultaneously. Locking with inside lock button

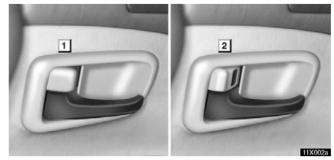

▶ 1 Lock 2 Unlock

Push the knob forward to lock and pull the knob backward to unlock the door.

When locked, the door cannot be opened with either the outside or inside door handle.

Closing the door with the lock button pushed in will also lock the door. Be careful not to lock your keys in the vehicle. With the key in the ignition switch and the door open, the lock knob cannot be moved in the lock position.

A CAUTION

Before driving, make sure the doors are closed and locked, especially when small children are in the vehicle. Along with the proper use of seat belts, locking the doors helps prevent the driver and passengers from being thrown out from the vehicle during an accident. It also helps prevent the doors from being opened unintentionally.

Locking with power door lock switch



▶ 1 Lock 2 Unlock

To lock all the side doors and back door simultaneously, push the power door lock switch on the front side. Pushing on the rear side will unlock them.

The same switch is also equipped on the front passenger's side.

When the front doors are locked from the outside, the switch will not work until either front door is unlocked with the key or lock button.


Locking with rear door child-protector




Whenever small children are in the vehicle, lock the rear door so that it does not open from the inside. To do this, move the lever to the "LOCK" position as shown on the label.

BACK DOOR

Opening and closing

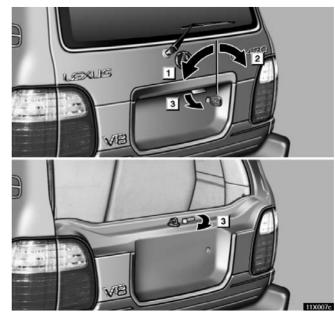

► Opening from outside 1 Unlock 2 Lock 3 Open All the doors lock and unlock simultaneously with the back door.

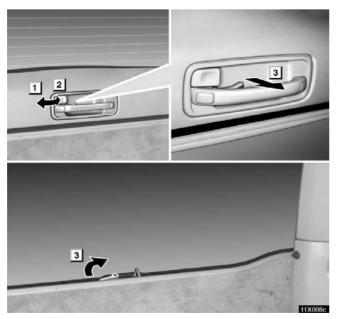

► Opening from inside 1 Unlock 2 Lock 3 Open The back door can be opened as shown.

See "Luggage stowage precautions" on page 61 for precautions to observe in loading luggage.

After closing the back door, try pulling it up to make sure it is securely closed.

Closing the back door with the lock button pushed in will also lock the back door. Be careful not to lock your keys in the vehicle.


The back door lock will be controlled with the power door lock switch. (For instructions, see "Side doors" on page 16.)

CAUTION

Keep the back door closed while driving. This not only keeps the luggage from being thrown out but also prevents exhaust gases from entering the vehicle. 1

KEYS AND DOORS

Locking with back door child-protector

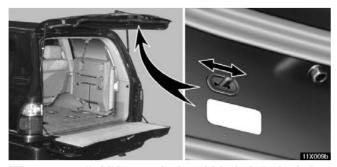

Whenever small children are in the vehicle, lock the back door so that it does not open from the inside. To do this, move the lever to the "LOCK" position as shown and then close the back door.

<u>SECTION</u> **1** – 2


INSTRUMENTS AND CONTROLS

Switches

Headlight switch 22
Headlight dimmer and turn signal switch
Fog light switch
Wiper and washer switch
Rear window wiper and washer switch
Headlight cleaner switch
Rear window defogger switch
Outside rear view mirror defogger switch
Power window switches
Power quarter window switch 31
Emergency flasher switch
Seat heater switches

1

HEADLIGHT SWITCH

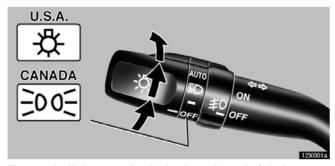

To turn the lights on, twist the knob on the end of the lever.

FIRST CLICKSTOP: Only the parking, tail, license plate, side marker and instrument panel lights turn on.

SECOND CLICKSTOP: Headlights also turn on.

THIRD CLICKSTOP ("AUTO"): The headlights and all other lights automatically turn on depending on the darkness of the surroundings.

Vehicles sold in U.S.A.: When the headlights are on, the headlight indicator lights up in the instrument cluster.

Vehicles sold in Canada: When the tail lights are on, the tail light indicator lights up in the instrument cluster.

Manually twist the knob to the second clickstop to turn on the headlights if they are needed immediately when entering a dark tunnel, parking structure, etc.

When the headlight switch is turned to the first or second clickstop,

the brightness of the instrument cluster will be reduced slightly unless the instrument panel light control dial is turned fully on.



The automatic light control sensor is on top of the passenger's side instrument panel.

Do not place anything on the instrument panel, and/or do not affix anything on the windshield to block this sensor.

The lights automatically turn off when the driver's door is opened with the ignition key turned to the "ACC" or "LOCK" position. To turn them on again, turn the ignition key to the "ON" position, or turn the headlight switch off and then twist the knob until the first or second clickstop. If you are going to park for over one week, make sure the headlight switch is off.

22

Daytime Running Light System

The headlights turn on when the parking brake is released with the engine started, even with the light switch in the "OFF" position. They will not go off until the ignition switch is turned off.

To turn on the other exterior lights and instrument panel lights, twist the knob to the first clickstop.

Under the daytime running light system, the headlights turn on at reduced intensity. Twist the knob to the second clickstop to turn to full intensity for driving at night.

When setting the knob to the third clickstop ("AUTO"), the headlights will automatically adjust to full intensity and/or turn on the other lights depending on the darkness of the surroundings. Likewise, as the surroundings become brighter, the headlights will turn to reduced intensity, ultimately turning off the other lights.

NOTICE

To prevent the battery from being discharged, do not leave the lights on longer than necessary when the engine is not running.


HEADLIGHT DIMMER AND TURN SIGNAL SWITCH



For high beam, push the lever forward. Pull it back for low beam. For the headlight flasher, pull it further back.

A blue light in the instrument cluster indicates high beam or headlight flasher is on.

The headlight flasher works even when the headlight switch is off.

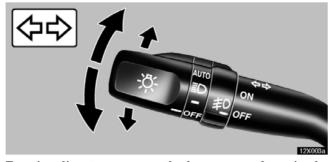


For signaling turns, move the lever up or down in the conventional manner.

The ignition key must be in the "ON" position.

The turn signal is self-cancelling after a turn, but after a lane change, you may have to cancel it by hand. You can also signal a lane change by moving the turn signal lever partway and holding it there.


If the green light in the instrument cluster flashes faster than normal, it indicates that the front or rear turn signal bulb has burned out. If this indicator light does not come on, the fuse or the indicator light itself has probably failed.

FOG LIGHT SWITCH

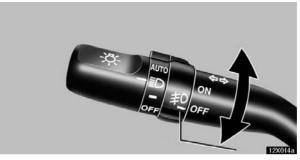

To turn on the fog lights, turn the switch to the "ON" position. The fog lights come on only when the headlights are on low beam.

WIPER AND WASHER SWITCH

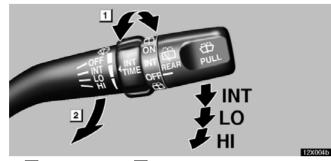

▶ 1 Interval adjuster 2 Washer on

To turn the wipers on, move the lever down until you reach the desired speed setting.

The ignition key must be in the "ON" position.

There are 3 settings:

- "INT" position: Intermittent operation
- "LO" position: Low speed operation
- "HI" position: High speed operation

Twist the interval adjuster upward to increase the wiping time interval between sweeps, and downward to decrease it.

The wiper lever must be in the "INT" position.

To make the washer squirt, pull the lever toward you and release it.

Even if the wiper lever is in the "OFF" position, the wipers will automatically operate a couple of times.


The low washer fluid warning light in the instrument cluster comes on when the fluid level in the tank becomes nearly empty. For information on adding washer fluid, see "Adding washer fluid" on page 294.

In cold weather, warm the windshield with the defroster before using the washer. This will help prevent icing, which could block your vision.

NOTICE

Do not operate the wipers if the windshield is dry. It may scratch the glass.

REAR WINDOW WIPER AND WASHER SWITCH

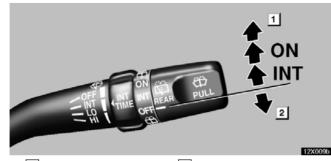

▶ 1 Washer on during wiping 2 Washer on

To turn the wipers on, twist the knob at the end of the lever.

The ignition key must be in the "ON" position.

There are 2 settings:

"INT" position: Intermittent operation "ON" position: Low speed operation

To make the washer squirt, twist the knob downward to position 2.

To make the washer squirt while operating in "ON" position, twist the knob upward to position 1.

The knob automatically returns from these positions after you release it.

The low washer fluid warning light in the instrument cluster comes on when the fluid level in the tank becomes nearly empty. For information on adding washer fluid, see "Adding washer fluid" on page 294.

NOTICE

Do not operate the rear window wiper if the rear window is dry. It may scratch the glass.

HEADLIGHT CLEANER SWITCH (CANADA ONLY)



To spray fluid on the headlights, push the switch with the headlights on.

The ignition key must be in the "ON" position.

The low washer fluid warning light in the instrument cluster comes on when the fluid level in the tank becomes nearly empty. For information on adding washer fluid, see "Adding washer fluid" on page 294.

NOTICE

Do not turn the headlight cleaner on with the tank empty. It may cause the cleaner motor to overheat.

REAR WINDOW DEFOGGER SWITCH



To turn the electric rear window defogger on, push the switch.

The ignition key must be in the "ON" position.

The thin heater wires on the inside of the back window will quickly clear the surface. An indicator light will illuminate to indicate the defogger is operating.


The system will automatically shut off when the defogger has operated about 15 minutes.

If further defrosting or defogging is desired, simply actuate the switch again. When the surface has cleared, push the switch once again to turn the defogger off. Continuous use may cause the battery to discharge, especially during stop–and–go driving. The defogger is not designed to dry rain water or to melt snow.

NOTICE

- When cleaning the inside of the rear window, be careful not to scratch or damage the heater wires.
- To prevent the battery from being discharged, do not operate the defogger continuously longer than necessary.

OUTSIDE REAR VIEW MIRROR DEFOGGER SWITCH

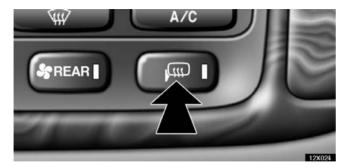

To turn the electric outside rear view mirror defogger on, push the switch.

The ignition key must be in the "ON" position.

The thin heater wires on the heater panels in the outside rear view mirrors will quickly clear the surface. Keep your hands off the mirror faces when the switch is on. An indicator light is on when the defogger is operating.

The system will automatically shut off when the defogger has operated about 15 minutes.

A CAUTION

Since the mirror surfaces can get hot, keep your hands off them when the switch is on.

If further defrosting or defogging is desired, simply actuate the switch again. When the surface has cleared, push the switch once again to turn the defogger off. Continuous use may cause the battery to discharge, especially during stop–and–go driving. The defogger is not designed to dry rain water or to melt snow.

If the outside rear view mirrors are heavily coated with ice, use a spray de-icer before operating the switch.

NOTICE

To prevent the battery from being discharged, do not operate the defogger continuously longer than necessary.

POWER WINDOW SWITCHES




For driver's window
 For front passenger's window
 For left rear window
 For right rear window

To raise or lower the windows, use the switch on each door. The passengers' windows can also be controlled by the switches on the driver's door.

The power windows work when the ignition key is in the "ON" position.

Key off operation: Even if the ignition key is turned to the "ACC" or "LOCK" position with all the doors closed, the window can be operated until any of the doors is opened (or for about 45 seconds).

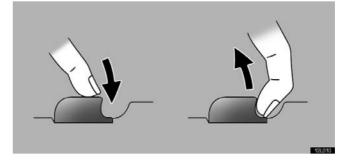

Operating the switches

To raise or lower the window, pull the switch halfway up or push it halfway down.

Automatic operation: To fully raise or lower the window automatically, pull the switch fully up or push it fully down.

To stop the window partway, lightly push or pull the switch in the opposite direction and then release it.

Operating the window lock switch



►Indicator light

With the window lock switch pressed in, only the driver's window can be raised or lowered.

The indicator lights on the switch tell you which of the switches can be operated.

Jam protection function

During automatic raising operation or key off raising operation, the window stops and is lowered if something gets caught between the window and window frame.

If an impact is given to the window, this function may work without anything caught.

1

A CAUTION


- Never try jamming any part of your body to make the jam protection function work intentionally.
- The jam protection function may not work when something gets caught just before the window fully closed.

\Lambda CAUTION

To avoid serious personal injury, you must do the following.

- Always make sure the head, hands and other parts of the body of all occupants are kept completely inside the vehicle before you close the power windows. If someone's neck, head or hands gets caught in a closing window, it could result in a serious injury. When anyone closes the power windows, be sure that they operate the windows safely.
- When small children are in the vehicle, never let them use the power window switches without supervision. Use the window lock switch to prevent them from making unexpected use of the switches.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the power window switches and get trapped in a window. Unattended children can become involved in serious accidents.

POWER QUARTER WINDOW SWITCH

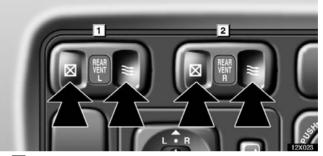

► 1 For the left quarter window 2 For the right quarter window

The quarter windows can be operated with the "REAR VENT" switch on the instrument panel.

To open: Push the right side of the switch. To close: Push the left side of the switch.

The power quarter windows work when the ignition switch is in the "ON" position. However, if both front doors are closed, they work for 45 seconds even after the ignition switch is turned off. They stop working when either front door is opened.


Both the left and the right quarter windows move as long as you hold the switch.

A CAUTION

To avoid serious personal injury, you must do the following.

- Always make sure the hands and other parts of the body of all occupants are kept completely inside the vehicle before you close the power quarter windows. If someone's hands get caught in a closing window, it could result in a serious injury. When anyone closes the power quarter windows, make sure that he/she operates the windows safely.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the power quarter window switch and get trapped in a window. Unattended children can be involved in serious accidents.

EMERGENCY FLASHER SWITCH

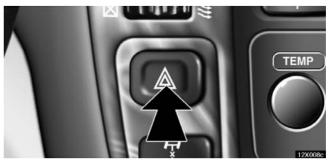

To turn on the emergency flashers, push the switch. To turn them off, push the switch again.

All the turn signal lights will flash. The emergency flashers will work with the engine running or off and with or without the ignition key.

Turn on the emergency flashers to warn other drivers if you must stop your vehicle where it might be a traffic hazard.


Always pull your vehicle as far off the road as possible.

The turn signal light switch will not work when the emergency flashers are in operation.

NOTICE

To prevent the battery from being discharged, do not leave the switch on longer than necessary when the engine is not running.

SEAT HEATER SWITCHES

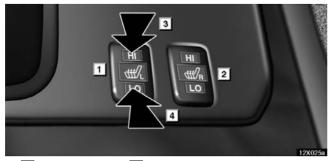

For driver's seat 2 For passenger's seat
 High heating temperature
 Low heating temperature

The seat heater has two switches one marked "L" (for the left seat) and the other marked "R" (for the right seat). To turn on the seat heater, push the switch to "HI" (high temperature) or "LO" (low heating temperature). Pushing lightly on the opposite side will turn it off.

The ignition key must be in the "ON" position.

A CAUTION

Occupants must use caution when operating the seat heater because it may make them feel too hot or cause burns at low temperatures (erythema, varicella). Use extra caution for;

- Baby, small child, elderly person, sick person or handicapped person
- Persons who have delicate skin
- Persons who are exhausted
- Persons who have taken alcohol or drugs which induce sleep (sleeping drug, cold remedy, etc.)

To prevent the seat overheating, do not use the seat heater with a blanket, cushion, or other insulating objects which cover the seat.

NOTICE

- Do not put unevenly weighted objects on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.
- When cleaning the seats, do not use organic substances (paint thinner, benzine, alcohol, gasoline, etc.). They may damage the heater and seat surface.
- To prevent the battery from being discharging, turn the switches on when the engine is running.

SECTION 1 – 3

INSTRUMENTS AND CONTROLS

Gauges, meters and service reminder indicators

Fuel gauge
Engine coolant temperature gauge 35
Oil pressure gauge 36
Voltmeter
Tachometer
Odometer and trip meter
Service reminder indicators and warning buzzers
Instrument panel light control

FUEL GAUGE

selection.



►Low fuel level warning light

The gauge works when the ignition switch is on and indicates the approximate quantity of fuel remaining in the tank.

It is a good idea to keep the tank over 1/4 full.

If the fuel level approaches "E" or the low fuel level warning light comes on, fill the fuel tank as soon as possible.

On inclines or curves, due to the movement of fuel in the tank, the fuel gauge needle may fluctuate or the low fuel level warning light may come on earlier than usual.

If the fuel tank is completely empty, the malfunction indicator lamp comes on. Fill the fuel tank immediately.

The indicator lamp goes off after driving several times. If the indicator lamp does not go off, contact your Lexus dealer as soon as possible.

See the inner back cover for fuel capacity and recommended fuel

ENGINE COOLANT TEMPERATURE GAUGE



►Normal range

The gauge indicates the engine coolant temperature when the ignition switch is on. The engine operating temperature will vary with changes in weather and engine load.

If the needle points to the red zone or higher, stop your vehicle and allow the engine to cool.

Your vehicle may overheat during severe operating conditions, such as:

- Driving up a long hill on a hot day.
- Reducing speed or stopping after high speed driving.

- Idling for a long period with the air conditioning on in stop-and-go traffic.
- Towing a trailer.

NOTICE

- Do not remove the thermostat in the engine cooling system as this may cause the engine to overheat. The thermostat is designed to control the flow of coolant to keep the temperature of the engine within the specified operating range.
- Do not continue driving with an overheated engine. See "If your vehicle overheats" on page 224.

OIL PRESSURE GAUGE



▶ 1 When the engine is warm 2 When the engine is cool

The oil pressure gauge indicates engine oil pressure when the ignition is on. Check it while driving to make sure the needle is in the proper range.


If the oil pressure should stay below the normal range, pull off the road to a safe place and stop the engine immediately. Call a Lexus dealer or qualified repair shop for assistance.

Oil pressure may not build up when the oil level is too low. The oil pressure gauge is not designed to indicate oil level, and the oil level must be checked using the level dipstick.

NOTICE

Do not drive the vehicle with the oil pressure below the normal range until the cause is fixed – it may ruin the engine.

VOLTMETER

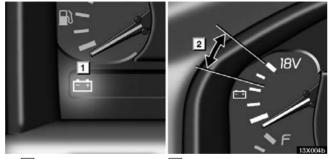

▶ 1 Discharge warning light 2 Normal range

The voltmeter tells whether the battery is charged or discharged. Check it while the engine is running – the needle should always indicate as shown above.

If the needle reads below or above the normal range while the engine is running, it indicates the charging system needs immediate repair.

However, it is normal for the needle to drop below the normal range during engine starting.

TACHOMETER



The tachometer indicates engine speed in thousands of rpm (revolutions per minute). Use it while driving to prevent engine overrevving.

Driving with the engine running too fast causes excessive engine wear and poor fuel economy. Remember, in most cases the slower the engine speed, the greater the fuel economy.

NOTICE

Do not let the indicator needle get into the red zone. This may cause severe engine damage.

ODOMETER AND TRIP METER



▶"ODO/TRIP" knob

This meter displays the odometer and two trip meters. To change the mode indication, push the "ODO/TRIP" knob briefly. Each time you push the knob, the mode changes in order from the odometer to trip meter A to trip meter B, then back to the odometer, etc.


The odometer records the total distance the vehicle has been driven. The twin trip meter records two different distances independently.

For example, you can use one meter to calculate the fuel economy and the other to measure the distance on each trip.

To set the A trip meter to zero, display the A meter reading, push the knob and hold it. The same applies for the B trip meter.

The data of trip meters will be cancelled if the electrical power source is disconnected.

SERVICE REMINDER INDICATORS AND WARNING BUZZERS

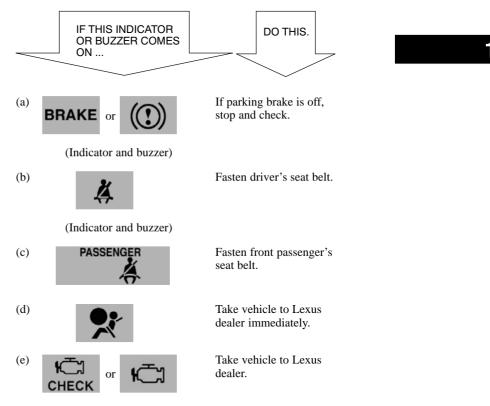

Take vehicle to Lexus (a) Brake System Warning Light and Buzzer dealer. ABS This light has the following 3 functions: • Parking brake reminder Close all side doors and If this light is on, make sure the parking brake is fully released. The back door. light should go off. • Low brake fluid level warning Shift four-wheel drive control out of "N". If this light comes on and stays on while you are driving, slow down and pull off the road. Then stop the vehicle carefully. Remember that stopping distance and pedal effort may be increased. There may Stop and check. be a problem somewhere in the brake system. Check the fluid level A/T OIL of the see-through reservoir. TEMP To make sure the parking brake has not caused the warning light to come on, check to see that the parking brake is fully released. Stop and check. At a safe place, test your brakes by starting and stopping. • If you judge that the brakes still work adequately, drive cautiously Fill up tank. to your nearest dealer or shop for repairs. • If the brakes are not working, have the vehicle towed in for repairs. (For towing information, see page 232.) Add washer fluid. CAUTION It is dangerous to continue driving normally when the brake Key reminder buzzer Remove key. fluid level is low.

(f)

(g)

(h)

(i)

(j)

(k)

(l)

(m)

GAUGES, METERS AND SERVICE REMINDER INDICATORS

• Brake system failure warning

The light may stay on for about 60 seconds after the engine is started. It is normal if it goes out after a while.

If the brake system warning light stays on even with the parking brake being released, the brake system may fail. Contact your Lexus dealer.

If the hydraulic boost pressure is lowered, the warning light comes on and buzzer sounds continuously. Immediately stop your vehicle at a safe place and contact your Lexus dealer. If this is a case the brakes may not work properly. If they do not work well, depress the brake pedal firmly.

Depressing the brake pedal repeatedly may turn on the warning light and buzzer. It is normal if the light goes out and the buzzer stops sounding after a few seconds.

CAUTION

Continued driving with an inoperative brake booster is dangerous.

(b) Driver's Seat Belt Reminder Light and Buzzer

Once the ignition key is turned to "ON" or "START", the reminder light flashes and buzzer sounds if the driver's seat belt is not fastened. Unless the driver fastens the belt, the light stays flashing and the buzzer stops after about 4 to 8 seconds.

1

(c) Front Passenger's Seat Belt Reminder Light

Once the ignition key is turned to "ON" or "START", the reminder light flashes if a passenger sits in the front passenger seat and does not fasten the seat belt. Unless the front passenger fastens the belt, the light stays flashing.

If luggage load is placed on the front passenger seat, depending on its weight and how it is placed on the seat, built—in sensors in the seat cushion may detect the pressure, causing the reminder light to come on.

(d) SRS Warning Light

The indicator comes on when the ignition key is turned to the "ACC" or "ON" position. It goes off after about 6 seconds. This means the SRS is operating properly.

The SRS warning light system monitors the airbag sensor assemblies, inflators, seat belt pretensioners, warning light, interconnecting wiring and power sources.

If any of the following conditions occurs, this indicates a malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come on as described above.
- The light stays on or flashes.
- The light comes on or starts flashing while driving.

If the light stays on, it indicates that the driver and passenger airbags fail. If the light flashes, the seat belt pretensioners fail.

(e) Malfunction Indicator Lamp

This lamp comes on in the following cases.

a. The fuel tank is completely empty. (See "Fuel gauge" on page 35 for instructions.)

b. The fuel tank cap is not tightened securely. (See "Fuel tank cap" on page 65 for instructions.)

c. There is a problem somewhere in your engine electrical system, automatic transmission electrical system or electronic throttle control system.

If it comes on while you are driving in case "c.", have your vehicle checked/repaired by your Lexus dealer as soon as possible.

(f) "ABS" Warning Light

This light warns that there is a problem somewhere in your anti-lock brake system.

If the light comes on while you are driving, have your vehicle checked by your Lexus dealer as soon as possible. However, it is normal if the light goes out.

The light will come on when the ignition key is turned to "ON", and will go off after about a few seconds.

The light may stay on for about 60 seconds after the engine is started. It is normal if it goes out after a while.

Depressing the brake pedal repeatedly may turn on the light. It is normal if it goes off after about a few seconds.

When the "ABS" warning light is on (and the brake system warning light is off), the brake system operates conventionally but anti–lock brake system is not assisting brake performance so that the wheels could lock up during a sudden brake or braking on slippery road surfaces.

However, the anti-lock brake system does not operate when the rear differential is locked. It is normal operation for the "ABS" warning light to be on at this time.

(g) Open Door Warning Light

This light remains on until all the side doors and back door are completely closed.

(h) Unengaged "Park" Warning Light

This light warns that the transmission "Park" mechanism is not engaged. If the four-wheel drive control is in the "N" position while the selector lever is in the "P" position, the transmission will disengage and the wheels will not lock.

CAUTION

To restore the park function, shift the four-wheel drive control out of "N".

(i) Automatic Transmission Fluid Temperature Warning Light

This light warns that the automatic transmission fluid temperature is too high.

If this light comes on while you are driving, slow down and pull off the road. Stop the vehicle at a safe place and put the selector lever in "P" and leave the engine idling until the light goes off. If the light goes off, you can start the vehicle again. If the light does not go off, call a Lexus dealer or qualified repair shop for assistance.

NOTICE

Continued driving with the warning light on may damage the automatic transmission.

(j) Discharge Warning Light

This light warns that the battery is being discharged.

If it comes on while you are driving, stop the vehicle, turn off the engine, and check for the cause. Look first at the engine drive belt.

- If it is loose or broken, the generator will not charge the battery properly.
- If the belt is O.K., there is a problem somewhere in the charging system.

The engine ignition will continue to operate, however, until the battery is discharged. Turn off the air conditioning, blower, radio, etc., and drive directly to the nearest Lexus dealer or repair shop.

NOTICE

Do not continue driving if the engine drive belt is broken or loose.

(k) Low Fuel Level Warning Light

This light comes on when the fuel level in the tank becomes nearly empty. Fill the tank as soon as possible.

On inclines or curves, due to the movement of fuel in the tank, the low fuel level warning light may come on earlier than usual.

(l) Low Washer Fluid Warning Light

This light comes on when the fluid level in the tank becomes nearly empty. Fill the tank as soon as possible.

(m) Key Reminder Buzzer

This buzzer reminds you to remove the key when you open the driver's door with the ignition key in the "ACC" or "LOCK" position.

How to check all the service reminder indicators

(except the low fuel level warning light):

1. Apply the parking brake.

2. Open the door.

The following service reminder indicator should come on. It goes off when you close the door completely.



3. Place the four–wheel drive control lever in "N" position and the selector lever in "P" position.


4. Turn the ignition key to "ACC".

The following service reminder indicator should come on. It goes off after 6 seconds.



5. Turn the ignition key to "ON".

The following service reminder indicators should come on.

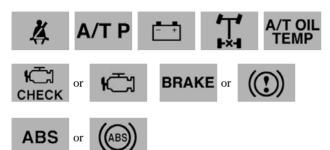

The following service reminder indicator goes off after a few seconds.



The anti-lock brake system warning light may come on for about 60 seconds after the engine is started. It is normal if they go out after a while.

If any service reminder indicator or warning buzzer does not function, either the bulb is burned out or circuit is in need of repair. Have it checked by your Lexus dealer as soon as possible.

INSTRUMENT PANEL LIGHT CONTROL

1



To adjust the brightness of the instrument panel lights, turn the dial.

45

-

SECTION 1 – 4

INSTRUMENTS AND CONTROLS

Interior equipment

Vanity mirrors	47
Interior lights	48
Personal light	49
Ignition switch light	50
Clock	50
Outside temperature display	51
Cigarette lighter and ashtray	51
Power outlets	53
Glovebox	54
Garage door opener	55
Cup holders	56
Auxiliary boxes	58
Floor mat	59
Tie–down hooks	60
Luggage stowage precautions	61


VANITY MIRRORS



To use the vanity mirrors, swing the sun visor down and open the cover.

The vanity light comes on when you open the cover.

Sun visors

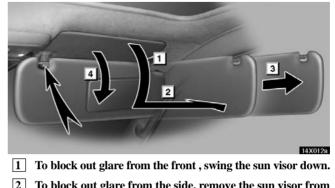

2 To block out glare from the side, remove the sun visor from


the hook and swing it to the side. **3** To block out glare coming obliquely from behind you, slide the visor backwards.

At this position, the vanity light does not come on.

4 To block out glare from the front with the sun visor in the position 2 or 3 , swing the other sun visor down.

INTERIOR LIGHTS

Front

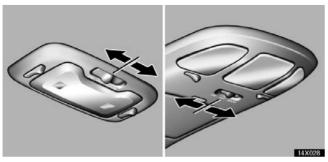

► Vehicles with moon roof

Vehicles without moon roof

Rear

To turn on the interior light, slide the switch.

With the switch in the "DOOR" position, the light comes on when any of the doors are opened. After all the doors are closed, the light remains on for about 15 seconds and then goes out.

However, in the following cases, the light goes out immediately:

1. All the doors are closed when the ignition key is in "ACC" or "ON" position.

1


2. The ignition key is turned to "ACC" or "ON" when the light is still on.

3. All the doors are locked when the light is still on.

4. One door is closed with the lock button pushed in while the other doors are locked.



48

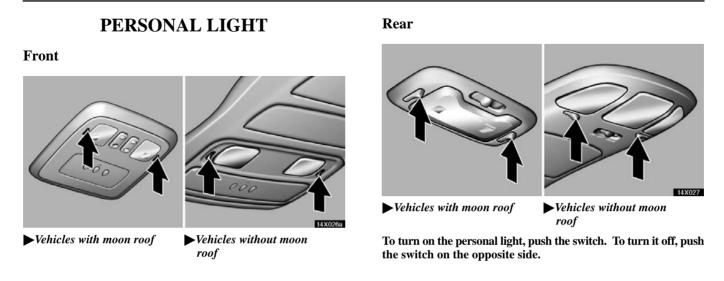

IGNITION SWITCH LIGHT



For easy access to the ignition switch, the ignition switch light comes on when any of the doors are opened.

The light remains on for about 15 seconds and goes out after all the doors are closed. However, the light goes out immediately when all the doors are locked or the ignition key is in the "ACC" or "ON" position.

CLOCK



1

The digital clock indicates the time when the ignition key is inserted in the ignition switch. To reset the hour, press the "H" button. To reset the minutes, press the "M" button. To adjust the time to the nearest hour, press the ":00" button.

For example, if the ":00" button is pressed when the time is between 9:30 - 9:59 or between 10:01 - 10:29, the time will change to 10:00.

Once the electrical power source has been disconnected from the clock, the time is automatically set to 1:00.

When the headlight switch is turned on, the digital clock indication grows faintly.

OUTSIDE TEMPERATURE DISPLAY



This display shows the outside temperature when the ignition switch is on.

The displayed temperature ranges from -30° C (-22° F) up to 50° C (122° F). If the temperature does not appear on the display or it shows "--", take your vehicle to your Lexus dealer.

CIGARETTE LIGHTER AND ASHTRAY

Front



To use the cigarette lighter, press in the cigarette lighter. When it becomes heated, it automatically pops out ready for use.

Do not hold the cigarette lighter pressed in.

If the engine is not running, the ignition key must be in the "ACC" position.

When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, push it back in completely.


To remove the ashtray, press down on the lock spring plate and pull out.

Use a Lexus genuine cigarette lighter or equivalent for replacement.

CAUTION

To reduce the chance of injury in case of an accident or sudden stop while driving, always push the ashtray back in completely after using.

Rear

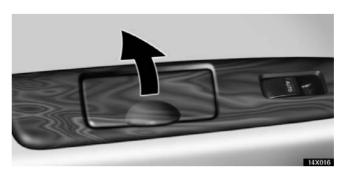

1


To use the ashtray, pull on the lid.

When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, close the lid completely.

To remove the ashtray, just pull it up.

A CAUTION

To reduce the chance of injury in case of an accident or sudden stop while driving, always close the ashtray completely after using.

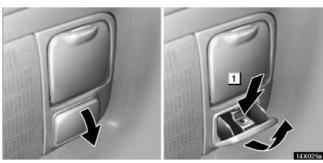

1 Snuffer bridge

To use the ashtray, pull on the lid.

When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, close the lid completely.


To remove the ashtray, pull it out while pressing on the snuffer bridge to release the catch.

CAUTION

To reduce the chance of injury in case of an accident or sudden stop while driving, always close the ashtray completely after using.

POWER OUTLETS

Front

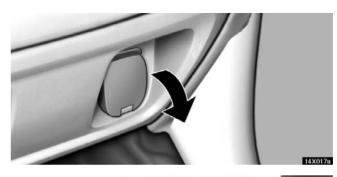



Rear



The power outlets are designed for power supply for car accessories.


The ignition key must be in the "ACC" or "ON" position for the power outlets to be used.

NOTICE

- To prevent the fuse from being blown, do not use the electricity over the total vehicle capacity of 12V/120W (front and rear outlets together).
- To prevent the battery from being discharged, do not use the power outlets longer than necessary when the engine is not running.

• Close the power outlet lids when the power outlets are not in use. Inserting a foreign object other than the appropriate plug that fits the outlet, or allowing any liquid into the outlet may cause electrical failure or short circuits.

GLOVEBOX

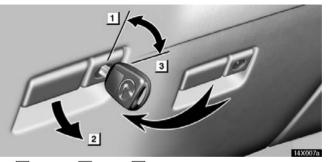

▶ 1 Unlock 2 Open 3 Lock

To open the glovebox door, pull the lever. To lock the glovebox door, insert the master key and turn it clockwise.

With the tail lights on, the glovebox light will come on when the glovebox door is open.


CAUTION


To reduce the chance of injury in case of an accident or a sudden stop, always keep the glovebox door closed while driving.

GARAGE DOOR OPENER

The garage door opener is manufactured under license from HomeLink[®] and can be programmed to operate garage doors, estate gates, security lighting, etc.

(a) Programming the garage door opener

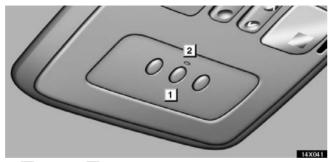



The garage door opener has 3 buttons and can be programmed to operate 3 separate devices.

1. Decide which one of the 3 buttons you want to program. Push and hold down the button until the indicator light begins to flash. While holding this button, follow steps "2" and "3".

2. Bring the hand held garage door opener within about 25mm (1 in.) of the button being programmed and push the button on the hand held garage door opener. The signal from the hand held garage door opener is sent to the vehicle's opener.

3. When the frequency and code is registered, the indicator light flashes rapidly. At this point, you can release both buttons.

4. To program the remaining buttons, repeat steps "1" through "3".

If you want to write a new program over the program set already, select a button you want to program and repeat the procedure from step "1". The previous program is erased and a new program will be set.

If the transmitter has a "rolling code" feature, it is necessary to program the in-garage receiver, after programming the garage door opener in the vehicle. For setting the in-garage receiver, refer to the instruction manual for the receiver.

After setting the in–garage receiver, push the programmed button on the vehicle for about 1 to 2 seconds within the operational range.

Garage door openers manufactured before 1982 cannot be programmed.

CAUTION

When programming or operating the garage door opener, make sure there is no one around the moving door. It is dangerous if someone is caught.

(b) Operating the garage door opener

Push the appropriate button to activate the garage door opener. The indicator light comes on. The garage door opener continues to send the signal for up to 20 seconds as long as the button is pushed.

55

(c) Erasing the garage door opener memory


Push and hold down the 2 outside buttons until the indicator light flashes. All memorized data will be erased.

CUP HOLDERS

Front

FCC ID: CB2V94800 CANADA: 1763 102 264

This device complies with FCC Rules part 15. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference that may be received, including interference that may cause undesired operation. WARNING: This transmitter has been tested and complies with FCC and DOC/MDC rules. Changes or modifications not expressly approved by the partly responsible for compliance could void the user's authority to operate the device.

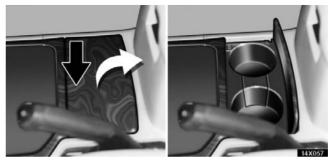


To use the cup holder, push the cup holder lid. You can use it as an accessory box by removing the separator inside.



To use the cup holder, open the console box lid.

By removing the separator, you can put many things in the console box.



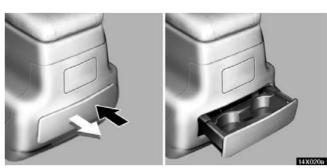

Rear end of the center console



Left side body panel near the third seatTo use the cup holder, push or pull out the cup holder lid.



CAUTION

- Do not place anything else on the cup holder, as such item may be thrown about in the compartment and possibly injure people in the vehicle during sudden braking or an accident.
- To reduce the chance of injury in case of an accident or sudden stop while driving, keep the cup holder shut when not in use.

AUXILIARY BOXES

Your vehicle has several types of auxiliary box. To use them, open as shown in the following illustrations.

A CAUTION

To reduce the chance of injury in case of an accident or a sudden stop, always keep the auxiliary box closed while driving.

NOTICE

In hot weather, inside of the vehicle becomes very hot. Do not leave anything flammable or deformable such as a lighter, the glasses, etc. inside.



► Overhead console on the vehicle not equipped with moon roof




Rear right side



►Rear right side


FLOOR MAT

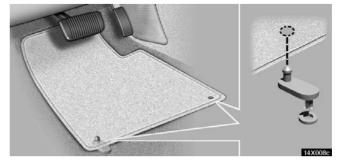

Use a floor mat of the correct size.

If the floor mat has a hole, then it is designed for use with a locking clip. Fix the floor mat and locking clip into the hole in the floor carpet.




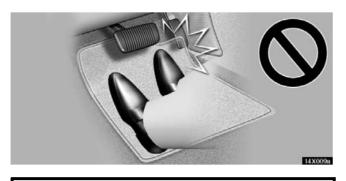

A CAUTION

Make sure the floor mat is properly placed on the floor carpet. If the floor mat slips and interferes with the movement of the pedals during driving, it may cause an accident.

TIE-DOWN HOOKS

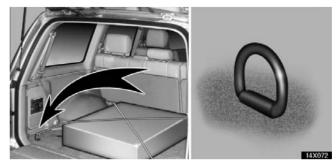

To secure your luggage, use the tie-down hooks as shown above.

See "Luggage stowage precautions" for precautions to observe in loading luggage.

LUGGAGE STOWAGE PRECAUTIONS

When stowing luggage or cargo in or on the vehicle, observe the following:

- Put luggage or cargo in the luggage compartment when at all possible. Be sure all items are secured in place.
- Be careful to keep the vehicle level. Placing the weight as far forward as possible helps maintain vehicle balance.
- For better fuel economy, do not carry unnecessary weight.

A CAUTION

- To prevent luggage or packages from sliding forward during braking, do not stack anything in the luggage compartment higher than the seatbacks. Keep luggage or packages low, as close to the floor as possible.
- Never allow anyone to ride in the luggage compartment. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened. Otherwise, they are much more likely to suffer serious bodily injury, in the event of sudden braking or a collision.
- Do not drive with objects left on top of the instrument panel. They may interfere with the driver's field of view. Or they may move during sharp vehicle acceleration or turning, and impair the driver's control of the vehicle. In an accident they may injure the vehicle occupants.

NOTICE

Do not load the vehicle beyond the vehicle capacity weight specified on the tire pressure label.

SECTION 1 – 5

INSTRUMENTS AND CONTROLS

Exterior equipment

Hood	64
Fuel tank cap	65
Fuel pump shut–off system	66
Moon roof	67
Rear step bumper	69

HOOD



To open the hood, pull the hood lock release lever under the instrument panel. The hood will spring up slightly.




Insert your fingers under the hood, push up the auxiliary catch lever and lift the hood.

Before closing the hood, check to see that you have not forgotten any tools, rags, etc. Then lower the hood and make sure it locks.

A CAUTION

Before driving, be sure that the hood is closed and securely locked. Otherwise, the hood may open unexpectedly while driving and an accident may occur.

FUEL TANK CAP

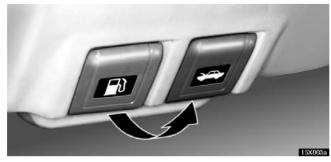

1. To open the fuel filler door, pull the lever under the instrument panel.

When refueling, turn off the engine.

CAUTION

- Do not smoke, cause sparks or allow open flames when refuelling. The fumes are flammable.
- When opening the cap, do not remove the cap quickly. In hot weather, fuel under pressure could cause injury by spraying out of the filler neck if the cap is suddenly removed.



2. To remove the fuel tank cap, turn the cap slowly counterclockwise, then pause slightly before removing it. The removed cap can be stored on the back side of the fuel filler door.

It is not unusual to hear a slight swoosh when the cap is opened. When installing the cap, turn the cap clockwise until you hear a click.

If the cap is not tightened securely, the malfunction indicator lamp comes on. Make sure the cap is tightened securely.


The indicator lamp goes off after driving several times. If the indicator lamp does not go off, contact your Lexus dealer as soon as possible.

CAUTION

- Make sure the cap is tightened securely to prevent fuel spillage in case of an accident.
- Use only a genuine Lexus fuel tank cap for replacement. It has a built-in check valve to reduce fuel tank vacuum.

FUEL PUMP SHUT-OFF SYSTEM

In response to a severe impact which may cause a large amount of vehicle deformation, the fuel pump shut-off system stops supplying fuel to the engine to minimize the risk of fuel leakage.

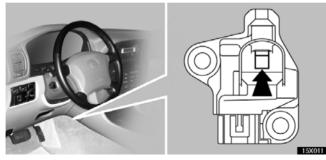

The fuel pump shut–off system activates when the impact detection sensor located in the footwell of the driver's seat detects an impact larger than specified.


If the fuel pump shut-off system has activated, you can turn on the fuel pump shut-off system with the reset switch on the impact detection sensor. To turn on the fuel pump and reset the shut-off switch, push the reset switch for longer than 1 second with the vehicle parked on a level surface.

CAUTION

- Inspect the ground under the vehicle before resetting the fuel pump shut-off system. If you find liquid leakage on the ground, it is probable that the fuel system has been damaged and is in need of repair. In this case, do not reset the fuel pump shut-off system.
- Do not strike or kick the impact detection sensor. The fuel pump shut–off system may activate, shutting off the motor and placing the vehicle in a position to be involved in an unexpected accident.

The fuel pump shut–off system is designed to activate in a collision which may cause a large amount of vehicle deformation. It does not operate in a small impact.

MOON ROOF

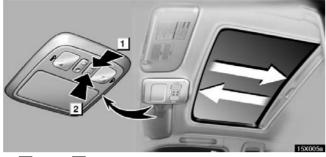

▶ 1 Open 2 Close

To slide open the moon roof, push the switch on the rear side. The moon roof will fully open. To stop partway, push the same switch or push the "TILT" switch.

To operate the moon roof, the ignition key must be in the "ON" position.

The sun shade can be opened or closed manually. However, if you open the moon roof, the sun shade will be opened with the moon roof.

To close the moon roof, push the switch on the front side. The moon roof will fully close. To stop partway, push the same switch or "TILT" switch.



▶ 1 Tilt up 2 Lower

To tilt up the rear end of the moon roof, push the switch on the rear side. The rear end of the moon roof will tilt up fully. To stop partway, push the same switch or "SLIDE" switch.

To lower it, push the switch on the front side. The rear end of the moon roof will fully close. To stop partway, push the same switch or "SLIDE" switch.

Key off operation: Even if the ignition key is turned to the "ACC" or "LOCK" position with all the doors closed, the moon roof can be operated until any of the doors is opened (or for about 45 seconds).

Jam protection function

During closing operation, the moon roof stops and is open if something gets caught into the roof opening.

If an impact is given to the moon roof, this function may work without anything caught.

CAUTION

- Never try jamming any part of your body to make the jam protection function work intentionally.
- The jam protection function may not work when something gets caught just before the moon roof fully closed.

A CAUTION

To avoid serious personal injury, you must do the following.

- While the vehicle is moving, always keep the head, hands and other parts of the body of all occupants away from the roof opening. Otherwise, you could be seriously injured if the vehicle stops suddenly or if the vehicle is involved in an accident.
- Always make sure nobody places his/her head, hands and other parts of the body in the roof opening before you close the roof. If someone's neck, head or hands gets caught in the closing roof, it could result in a serious injury. When anyone closes the roof, first make sure it is safe to do so.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the moon roof switches and get trapped in the roof opening. Unattended children can become involved in serious accidents.
- Never sit on top of the vehicle around the roof opening.

REAR STEP BUMPER



The rear step bumper is for rear end protection and easier step-up loading.

CAUTION

- Do not allow more than one person to get on the rear step bumper at a time. It is designed for only one person.
- Never drive the vehicle with anyone on the rear step bumper.

SECTION 1 – 6

INSTRUMENTS AND CONTROLS

Comfort adjustment

Front seats
Rear seats
Head restraints
Armrest
Tilt and telescopic steering wheel 86
Outside rear view mirrors
Inside rear view mirror
Seat belts
Supplemental restraint system (SRS)
Child restraint 107
Driving position memory system 127

FRONT SEATS

Seat adjustment precautions

Adjust the driver's seat so that the foot pedals, steering wheel and instrument panel controls are within easy reach of the driver.

CAUTION

- Do not adjust the seat while the vehicle is moving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.
- Be careful not to hit the seat against a passenger, luggage or the rear seat.

NOTICE


Do not operate the control switch in more than one dimension at a time. It may cause electrical overload.

Adjusting front seats



- Seat position control switch, seat cushion angle and height control switch
 Seatback angle control switch
 - **3** Lumbar support control switch


Adjusting seat position

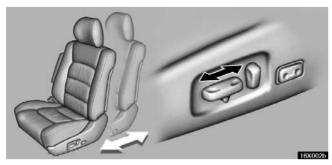

Move the control switch in the desired direction.

Releasing the switch will stop the seat in that position. Do not place anything under the seat. It might interfere with the seat movement.

Adjusting seatback angle

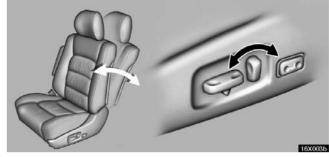

Move the control switch in the desired direction.

Releasing the switch will stop the seatback in that position.

A CAUTION

To reduce the risk of sliding under the lap belt during a collision, avoid reclining the seatback any more than needed. The seat belts provide maximum protection in a frontal or rear collision when the driver and the passenger are sitting up straight and well back in the seats. If you are reclined, the lap belt may slide past your hips and apply restraint forces directly to the abdomen. Therefore, in the event of a frontal collision, the risk of personal injury may increase with increasing recline of the seatback.


Adjusting seat cushion angle and height



Move the control switch in the desired direction.

Releasing the switch will stop the seat cushion in that position.

Adjusting lumbar support (Driver's seat only)

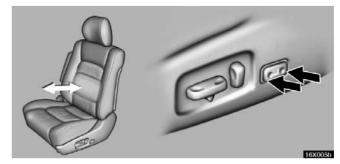

Push the control switch on either side.

The amount of lumbar support will change as long as the switch is pushed.

REAR SEATS

Rear seat precautions

CAUTION

- Any operations should not be made while the vehicle is moving.
- When folding the seat, secure the seat by adjusting the length of the anchorage strap to prevent the seat from falling down.
- When returning the seat to its original position, make sure of the following:

There is no person or luggage around the seat and operate slowly by supporting the seat with your hands.

The seat belts are not twisted or caught under the seat and are arranged in their proper position for ready use.

The seat is securely locked by pushing forward and rearward on the top of the seatback or by trying to pull up the edge of the bottom cushion. Failure to do so will prevent seat belt from proper operation.

• When using the seat, make sure the seat is securely locked.

NOTICE


Avoid putting heavy loads on the removed seat. The metallic tips of the seat legs may be damaged and the seat cannot be reinstalled.

Folding up or removing the seats will enlarge the luggage compartment. See "Luggage stowage precautions" on page 61 for precautions to observe in loading luggage.

Adjusting rear seats



Second seat

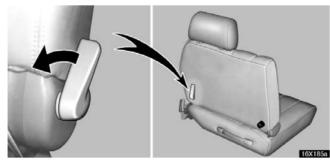


►Third seat

Lean forward and pull the lock release lever. Then lean back to the desired angle and release the lever.

CAUTION

To reduce the risk of sliding under the lap belt during a collision, avoid reclining the seatback any more than needed. The seat belts provide maximum protection when the passengers are sitting up straight and well back in the seats. If you are reclined, the lap belt may slide past your hips and apply restraint forces directly to the abdomen. Therefore, in the event of a frontal collision, the risk of personal injury may increase with increasing recline of the seatback.

Folding up second seat for third seat entry

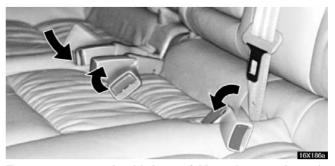

For easy access to the third seat, fold up the second seat in accordance with the following procedure.

Before folding up the second seat, stow the second seat belts as shown in the illustration.


This prevents the belts from falling out when you fold up the second seat.

NOTICE

The seat belts must be stowed before you fold up the second seat.




1. Lower the head restraints to the lowest position, unlock the seatback by pulling the lever on the side of the seatback and fold it down.

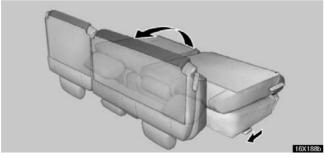

2. Pull the lever under the seat cushion and swing the whole seat forward.

3. To return it to the original position, reverse the steps above.

Folding up second seat

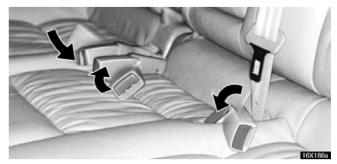


Before folding up the second seat, stow the second seat belts as shown in the illustration.


This prevents the belts from falling out when you fold up the second seat.

NOTICE


The seat belts must be stowed before you fold up the second seat.

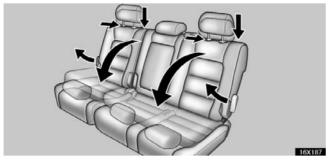

1. Lower the head restraints to the lowest position, unlock the seatback by pulling the lever on the side of the seatback and fold it down.

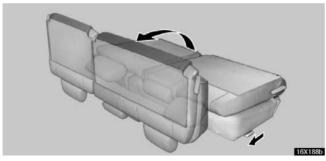

2. Pull the lever under the seat cushion and swing the whole seat forward.

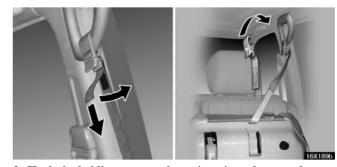

3. Hook the holding strap to the assist grip and secure the seat by pulling its free end.

When returning the second seat to its original position, put the holding strap into the pocket.


4. To return it to the original position, reverse the steps above.

Folding up third seat



Before folding up the third seats, stow the third seat belts as shown in the illustration.

This prevents the belts from falling out when you fold up the third seat.

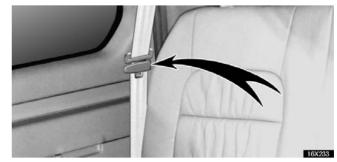

Seat belt hanger


For the outer seat belts, use the seat belt hangers to prevent the belts from being tangled.

NOTICE

• The seat belts must be stowed before you fold up the third seat.




• Make sure to stow the third center seat belt in order not to cause damage on the seat belt by pinching it between the third seat inner leg and seat striker.

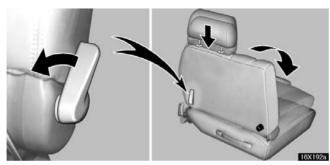


1. Lower the head restraint to the lowest position. Pull the reclining lever up and fold down the seatback.



2. Pull the inner-lock lever and lift the whole seat.

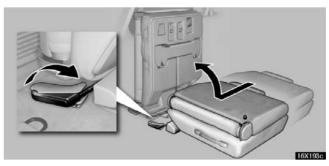


3. Slide the seat backward by pulling the lever and swing the whole seat sideways.

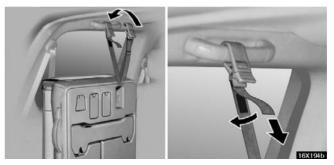

4. Hook the holding strap to the assist grip and secure the seat by pulling its free end.



5. Remove the seat hook covers from the back of the seat cushion and install them onto the seat anchor brackets.

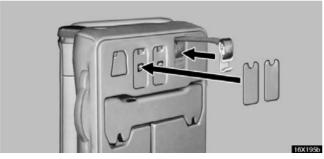

When returning the third seat to its original position, stow the holding strap and the seat hook covers into the holder facing the direction shown in the illustration.

6. To return it to the original position, reverse the steps above.

A CAUTION


Make sure the seat is securely locked by pushing forward and rearward on the top of the seatback or by trying to pull up the edge of the bottom cushion. Failure to do so will prevent seat belt from proper operation.

Removing third seats



Before removing the third seats, stow the third seat belts as shown in the illustration.

This prevents the belts from falling out when you fold up the third seat.

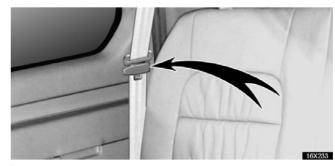

Seat belt hanger


For the outer seat belts, use the seat belt hangers to prevent the belts from being tangled.

NOTICE

• The seat belts must be stowed before you fold up the third seat.



• Make sure to stow the third center seat belt in order not to cause damage on the seat belt by pinching it between the third seat inner leg and seat striker.

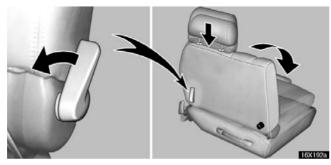

1. Lower the head restraint to the lowest position. Pull the reclining lever up and fold down the seatback.



3. Slide the seat backward by pulling the lever and swing the whole seat sideways.



2. Pull the inner-lock lever and lift the whole seat.



4. Remove the lever cover and pull the lock release lever. Lift up the rear side of the seat and pull the whole seat backward.



5. Remove the seat hook covers from the back of the seat cushion and install them onto the seat anchor brackets.

A CAUTION

When removing or reinstalling the seat, observe the following to prevent personal injury:

- Be careful not to get your hands or feet pinched in the seat.
- Be careful not to hit the removed seat against a person or drop it on yourself.

6. To reinstall it, reverse the steps above.

CAUTION

To prevent personal injury in a collision or sudden stop;

- You must install the removed seat back in its original position. The right and the left are not interchangeable. If it is installed in the wrong position, the proper seat belts tongue and buckle will not attach.
- Do not fold the seatback down whenever the third seat is folded up. The third seat may move forward and cause personal injury to occupants.


Make sure the seat is securely locked by pushing forward and rearward on the top of the seatback or by trying to pull up the edge of the bottom cushion. Failure to do so will prevent seat belt from proper operation.

NOTICE

Avoid putting heavy loads on the removed seat. The metallic tips of the seat legs may be damaged and the seat cannot be reinstalled.

HEAD RESTRAINTS

Front seat

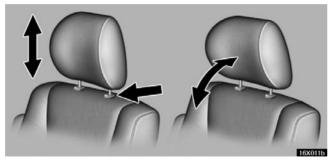


To raise the head restraint, pull it up. To lower it, press the lock release button and push the head restraint down. To move the head restraint forward or rearward, pull or push on the top.

The head restraint is most effective when it is close to your head. Therefore, using a cushion on the seatback is not recommended.

CAUTION

- Adjust the top of the head restraint so that it is closest to the top of your ears.
- After adjusting the head restraint, make sure it is locked in position.
- Do not drive with the head restraints removed.

Second and third seats

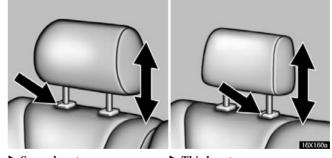

Second seat

►Third seat

To raise the head restraint, pull it up. To lower it, press the lock release button and push the head restraint down.

The head restraint is most effective when it is close to your head. Therefore, using a cushion on the seatback is not recommended.

A CAUTION

- Adjust the top of the head restraint so that it is closest to the top of your ears.
- After adjusting the head restraint, make sure it is locked in position.
- Do not drive with the head restraints removed.

ARMREST



To use the armrest, pull it down as shown above.

NOTICE

To prevent damage to the armrest, avoid putting heavy loads on it.

TILT AND TELESCOPIC STEERING WHEEL

Adjustment of steering wheel tilt




To adjust the tilt of the steering wheel, push the control switch upward or downward to set it to the desired position.

A CAUTION

Do not adjust the steering wheel while the vehicle is moving.

Adjustment of telescopic steering column

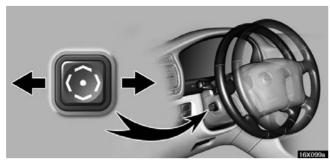

To adjust the steering column length, push the control switch forward or backward to set the steering wheel to the desired position.

CAUTION

Do not adjust the steering column while the vehicle is moving.

Auto tilt away



When the ignition key is removed, the steering column moves forward away from the driver and also tilts up for easy exit and entry.

When the key is inserted in the ignition switch, the steering column returns to the previously set position.

OUTSIDE REAR VIEW MIRRORS



Adjust the mirror so you can just see the side of your vehicle in the mirror.

Be careful when judging the size or distance of any object seen in the outside rear view mirror on the passenger's side. It is a convex mirror with a curved surface. Any object seen in a convex mirror will look smaller and farther away than if seen in a normal flat mirror.

CAUTION

- Do not adjust the mirror while the vehicle is moving. It may cause the driver to mishandle the vehicle and an accident may occur, resulting in personal injuries.
- Since the mirror surfaces can get hot, keep your hands off them when the outside rear view mirror defogger switch is on.

Power rear view mirror control



► 1 Control switch 2 Master switch

To adjust the power rear view mirror, first place the master switch at "L" (left) or "R" (right), and push the control switch on the desired side.

If the engine is not running, the key must be in the "ACC" position for operation of the power rear view mirror.

When you are backing up, you can adjust the mirror on the passenger's side down quickly in the following procedure.

1. Put the selector lever in the "R" position.

2. Place the master switch at "L" (left).

The mirror returns to the previous position by any of the following operations.

- Put the selector lever in a position other than "R".
- Place the master switch in a position other than the present setting.
- Turn the ignition key to the "ACC" position.

However, the passenger's side mirror remains down when shifting between "R" and "D"repeatedly (i.e., when putting your vehicle into the garage) within 2 minutes after the mirror is adjusted down.

NOTICE

If ice should jam the mirror, do not operate the control or scrape the mirror face. Use a spray de-icer to free the mirror.

Folding rear view mirrors



To fold the rear view mirrors, push the switch. To return to their original position, push the switch again.

The rear view mirrors can be folded backward for parking in restricted areas.

CAUTION

Do not drive with the mirrors folded backward. Both the driver and passenger side rear view mirrors must be extended and properly adjusted before driving.

INSIDE REAR VIEW MIRROR



Adjust the mirror so you can just see the rear of your vehicle in the mirror.

Pushing the switch changes the mode between "AUTO" and "DAY".

The indicator comes on when the "AUTO" mode is selected.

"DAY" mode: The mirror surface is normal.

"AUTO" mode: If the mirror detects light from the headlights of the vehicle behind you, the mirror surface darkens slightly to reduce the reflected light.

When the inside rear view mirror surface changes, the outside rear view mirror surfaces will also become darker.

When the ignition key is inserted and turned on, the inside rear view mirror always turns on in the "AUTO" mode.

Adjust it before driving so that the rear view is the best.

When the outside air temperature is low, it may take a little longer for the mirror to darken in response to the detection of headlights.

CAUTION

Do not adjust the mirror while the vehicle is moving. It may cause the driver to mishandle the vehicle and an accident may occur resulting in personal injuries.

SEAT BELTS

Seat belt precautions

Lexus strongly urges that the driver and passengers in the vehicle be properly restrained at all times with the seat belts provided. Failure to do so could increase the chance of injury and/or the severity of injury in accidents.

Child. Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belts. See "Child restraint" for details.

If a child is too large for a child restraint system, the child should sit in the rear seat and must be restrained using the vehicle's seat belt. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

If a child must sit in the front seat, the seat belts should be worn properly. Do not let the child sit on your lap. It does not provide sufficient restraint. If an accident occurs and the seat belts are not worn properly, the force of the rapid inflation of the airbag may cause severe injury to the child.

Do not allow the child to stand up or kneel on either rear or front seats. An unrestrained child could suffer serious injury during emergency braking or a collision.

Pregnant woman. Lexus recommends the use of a seat belt. Ask your doctor for specific recommendations. The lap belt should be worn securely and as low as possible over the hips and not on the waist.

Injured person. Lexus recommends the use of a seat belt. Depending on the injury, first check with your doctor for specific recommendations.

CAUTION

Persons should ride in their seats properly wearing their seat belts whenever the vehicle is moving. Otherwise, they are much more likely to suffer serious bodily injury in the event of sudden braking or a collision.

When using the seat belts, observe the following:

- Use the belt for only one person at a time. Do not use a single belt for two or more people even children.
- Avoid reclining the seatbacks too much. The seat belts provide maximum protection when the seatbacks are in the upright position. (See "Adjusting seatback angle".)
- Be careful not to damage the belt webbing or hardware. Take care that they do not get caught or pinched in the seat or doors.
- Inspect the belt system periodically. Check for cuts, fraying, and loose parts. Damaged parts should be replaced. Do not disassemble or modify the system.
- Keep the belts clean and dry. If they need cleaning, use a mild soap solution or lukewarm water. Never use bleach, dye, or abrasive cleaners they may severely weaken the belts.

• Replace the belt assembly (including bolts) if it has been used in a severe impact. The entire assembly should be replaced even if damage is not obvious.

Fastening front, second and third (outside seats) seat belts



Adjust the seat as needed and sit up straight and well back in the seat. To fasten your belt, pull it out of the retractor and insert the tab into the buckle.

You will hear a click when the tab locks into the buckle.


The seat belt length automatically adjusts to your size and the seat position.

The retractor will lock the belt during a sudden stop or on impact. It also may lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend, and you can move around freely. When a passenger's shoulder belt is completely extended and is then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system securely. (For details, see "Child restraint" on page 107.) To free the belt again, fully retract the belt and then pull the belt out once more.

If the seat belt cannot be pulled out of the retractor, firmly pull the belt and release it. You will then be able to smoothly pull the belt out of the retractor.

A CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the belt is not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect an adult occupant or your child from injury.

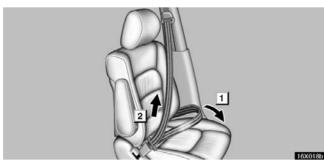


Adjust the position of the lap and shoulder belts.

- Position the lap belt as low as possible on your hips not on your waist.
- **2** Adjust it to a snug fit by pulling the shoulder portion upward through the latch plate.

CAUTION

- High-positioned lap belts and loose-fitting belts both could cause severe injuries due to sliding under the lap belt during a collision or other unintended result. Keep the lap belt positioned as low on hip as possible.
- For your safety, do not place the shoulder belt under your arm.

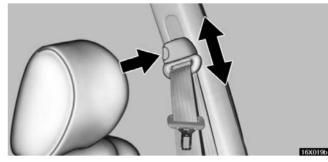


Adjust the shoulder anchor position to your size.

To raise the anchor position, push the anchor up. To lower the anchor position, support the anchor while you push the lock release button then slide the anchor down. After the adjustment, make sure the anchor is locked in position.


CAUTION

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause severe injuries in a collision.

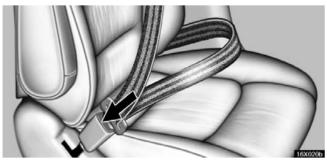

To release the belt, press the buckle release button and allow the belt to retract.

If the belt does not retract smoothly, pull it out and check for kinks or twists. Then make sure it remains untwisted as it retracts. Third (center seat) seat belt

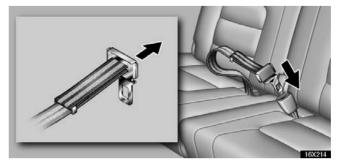


Sit up straight and well back in the seat. To fasten your belt, insert the tab into the buckle.

You will hear a click when the tab locks into the buckle.

If the belt is not long enough for you, hold the tab at a right angle to the belt and pull on the tab.

CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the belt is not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect an adult occupant or your child from injury.

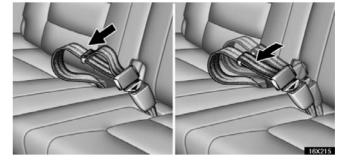

Remove excess length of the belt and adjust the belt position.

To shorten the belt, pull the free end of the belt.

Position the lap belt as low as possible on your hips – not on your waist, then adjust it to a snug fit.

CAUTION

High-positioned and loose-fitting lap belt could cause severe injuries due to sliding under the lap belt during a collision or other unintended result. Keep the lap belt positioned as low on hip as possible.



To release the belt, press the buckle release button.

Seat belt extender

If your seat belts cannot be fastened securely because it is not long enough, a personalized seat belt extender is available from your Lexus dealer free of charge.

Please contact your local Lexus dealer so that the dealer can order the proper required length for the extender. Bring the heaviest coat you expect to wear for proper measurement and selection of length. Additional ordering information is available at your Lexus dealer.

A CAUTION

When using the seat belt extender, observe the following. Failure to follow these instructions could result in less effectiveness of the seat belt restraint system in case of vehicle accident, increasing the chance of personal injury.

- Never use the seat belt extender if you can fasten the seat belt without it.
- Remember that the extender provided for you may not be safe when used on a different vehicle, or for another person or at a different seating position than the one originally intended for.



To connect the extender to the seat belt, insert the tab into the seat belt buckle so that the "PRESS" signs on the buckle release buttons of the extender and the seat belt are both facing outward as shown.

You will hear a click when the tab locks into the buckle.

When releasing the seat belt, press on the buckle release button on the extender, not on the seat belt. This helps prevent damage to the vehicle interior and extender itself.


When not in use, remove the extender and store in the vehicle for future use.

CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the belt is not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect an adult occupant or your child from injury.

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

The Supplemental Restraint System (SRS) consists of driver and front passenger airbags and seat belt pretensioners. The combination of these 2 systems is designed to provide further protection for the driver and front passenger when added to the primary protection provided by the seat belts.

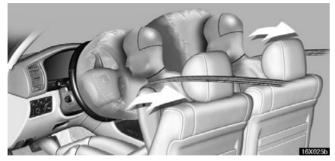

Driver and front passenger airbags, and seat belt pretensioners

Driver and front passenger airbags:

In response to a severe frontal impact, the driver and front passenger airbags work together with the seat belts to help preventing or reduce injury by inflating, in order to decrease the likelihood of the driver's or front passenger's heads or chests from directly hitting the steering wheel or dashboard.

Seat belt pretensioners:

In response to a severe frontal impact, the seat belts are quickly drawn back in by the retractors so that the belts snugly restrain the driver and front passenger.

The front passenger airbag is activated even with no passenger in the front seat.

Be sure to wear your seat belt.

A CAUTION


The driver or front passenger too close to the steering wheel or dashboard during airbag deployment can be killed or seriously injured. Lexus strongly recommends that:

- The driver sit as far back as possible from the steering wheel while still maintaining control of the vehicle.
- The front passenger sit as far back as possible from the dashboard.
- All vehicle occupants be properly restrained using the available seat belts.



The indicator comes on when the ignition key is turned to the "ACC" or "ON" position. It goes off after about 6 seconds. This means the SRS is operating properly.

The SRS warning light system monitors the airbag sensor assemblies, inflators, seat belt pretensioners, warning light, interconnecting wiring and power sources.

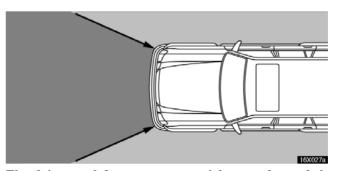

The driver and front passenger airbags and seat belt pretensioners are designed to activate in response to a severe frontal impact within the shaded area between the arrows in the illustration.

There may be the case that the driver and front passenger airbags and seat belt pretensioners will not activate with such an impact in which the occupant wearing the seat belt correctly would not get serious injury.

The driver and front passenger airbags will work if the severity of the impact is above the designed threshold level, comparable to an approximate 25 km/h (15 mph) collision in the U.S.A. and 30 km (18 mph) collision in Canada when impacting straight into a fixed barrier that does not move or deform.


If the severity of the impact is below the above threshold level, the driver and front passenger airbags and seat belt pretensioners may not work.

99


However, this threshold velocity will be considerably higher if the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact, or if it is involved in an underride collision (e.g. a collision in which the nose of the vehicle "underrides", or goes under, the bed of a truck).

It is possible with collision severity at the marginal level of airbag sensor detection and activation that only one of your vehicle's driver and front passenger airbags and seat belt pretensioners will work.

For the safety of all occupants, be sure to always wear seat belts.

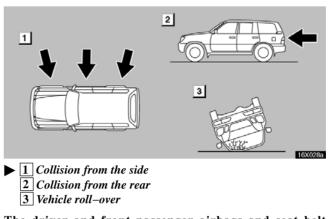

The driver and front passenger airbags and seat belt pretensioners are not designed to inflate or activate if the vehicle is subjected to a rear impact, if it rolls over, or if it is involved in a low-speed frontal collision.

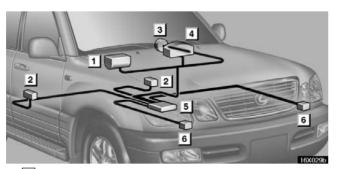

- Front passenger airbag module (airbag and inflator)
 Seat belt pretensioner
 Driver airbag module (airbag and inflator)
 SRS warning light
 - 5 Airbag sensor assembly
 - 6 Front airbag sensor

The SRS airbag sensor assemblies consist of a safing sensor and driver and front passenger airbag sensors.

In a severe frontal impact, the airbag sensors detect deceleration and the system triggers the front airbag inflators and seat belt pretensioners. Then a chemical reaction in the inflators momentarily fills the airbags with non-toxic gas to help restrain the forward or lateral motion of the occupants. Then the inflators fill the airbags and the seat belts are quickly drawn back in by the retractors to help restrain forward motion of the occupants. When the SRS operates, it produces a fairly loud noise and release some smoke along with non-toxic gas. This does not indicate a fire. Be sure to wash off any residue as soon as possible to prevent minor skin irritation.


Deployment of the airbags happen in a fraction of a second, so the airbags must inflate with considerable force. While the system is designed to reduce serious injuries, it may also cause minor burns or abrasions and swellings.

Parts of the airbag module (steering wheel hub, dashboard) may be hot for several minutes, but the airbags themselves will not be hot. The airbags are designed to inflate only once.

A crash severe enough to inflate the driver and front passenger airbags may break the windshield as the vehicle buckles. In vehicles with a front passenger airbag, the windshield may also be damaged by absorbing some of the force of the inflating airbag.

CAUTION

- The SRS is designed only as a supplement to the primary protection of the driver side and front passenger side seat belt systems. The front seat occupants can be killed or seriously injured by an inflating airbag if they do not wear the available seat belts. During sudden braking just before a collision, an unrestrained driver or front passenger can move forward into direct contact with or close proximity to the airbag which may then deploy during the collision. To obtain maximum protection in an accident, the driver and all passengers in the vehicle must wear their seat belts. Wearing a seat belt during an accident reduces the chances of death or serious injuries or being thrown out of the vehicle. For instructions and precautions concerning the seat belt system, see "Seat belts" on page 91.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Lexus strongly recommends that all infants and children be placed in the rear seat of the vehicle and properly restrained. The rear seat is the safest for infants and children. For instructions concerning the installation of a child restraint system, see "Child restraint" on page 107.

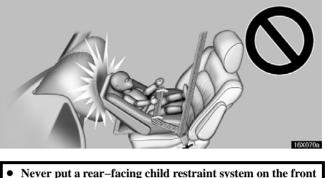


 Never put a rear-facing child restraint system on the front seat because the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.




► Move seat fully back


• A forward-facing child restraint system should be allowed to put on the front seat only when it is unavoidable. Always move the seat as far back as possible, because the force of a deploying airbag could cause death or serious injury to the child. For instructions concerning the installation of a child restraint system, see "Child restraint" on page 107.

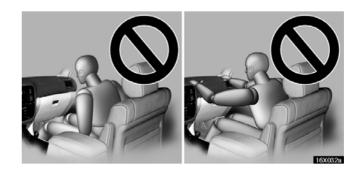

• Do not sit on the edge of the seat or lean over the dashboard when the vehicle is in use. The airbags inflate with considerable speed and force; you may be killed or seriously injured. Sit up straight and well back in the seat, and always use your seat belt.

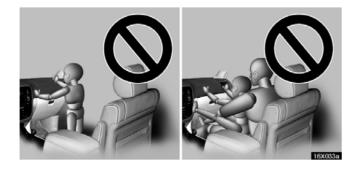

- Do not allow a child to stand up, or to kneel on the front passenger seat. The airbag inflates with considerable speed and force; the child may be killed or seriously injured.
- Do not hold a child on your lap or in your arms. Use a child restraint system in the rear seat. For instructions concerning the installation of a child restraint system, see "Child restraint" on page 107.

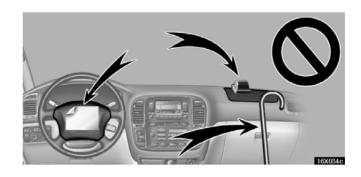

- Do not put objects or your pets on or in front of the dashboard or steering wheel pad that houses the driver and front passenger airbag system. They might restrict inflation or cause death or serious injury as they are projected rearward by the force of the deploying airbags. Likewise, the driver and front passenger should not hold things in their arms or on their knees.
- Do not modify or remove any wiring. Do not modify, remove, strike or open any components, such as the steering wheel column cover, front passenger airbag cover, airbag sensor assembly or seat belt assemblies. Doing any of these may cause sudden SRS operation or disable the system, which could result in death or serious injury.

Failure to follow these instructions can result in death or serious injuries.

NOTICE

Do not perform any of the following changes without consulting your Lexus dealer. Such changes can interfere with proper operation of the SRS in some cases.


- Installation of electronic items such as a mobile two-way radio, cassette tape player or compact disc player.
- Modification of the suspension system.
- Modification of the front end structure.
- Attachment of a grille guard (bull bar, kangaroo bar, etc.), snow plow, winches or any other equipment to the front end.
- Repairs made on or near the front fenders, front end structure, console, steering column, steering wheel, dashboard near the front passenger airbag or seat belt assembly.



This SRS has an indicator to inform the driver of operating problems. If either of the following conditions occurs, this indicates a malfunction of the airbags and/or seat belt pretensioners. Even if the seat belt pretensioners should fail, the seat belts will operate conventionally. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come on as described above.
- The light stays on or flashes.
- The light comes on or starts flashing while driving.

If the light stays on, it indicates that the driver and front passenger airbags fail. If the light flashes, the seat belt pretensioners fail.

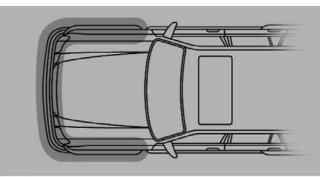



In the following cases, contact your Lexus dealer as soon as possible:

- Any of the SRS airbags have been inflated.
- If either front seat belt does not retract or cannot be pulled out due to a malfunction or activation of the pretensioner.

- The front seat belt retractor assembly or surrounding area has been damaged.
- The front part of the vehicle and portion of the doors (shaded in the illustration) were involved in an accident that did not cause the SRS to work.
- The pad section of the steering wheel or front passenger airbag cover (shaded in the illustration) is scratched, cracked, or otherwise damaged.

NOTICE

Do not disconnect the battery cables before contacting your Lexus dealer.

CHILD RESTRAINT

Child restraint precautions

Lexus strongly urges the use of child restraint systems for children small enough to use them.

The laws of all fifty states in the U.S.A. and Canada now require the use of a child restraint system.

Your vehicle conforms to SAE J1819.

If a child is too large for a child restraint system, the child should sit in the rear seat and must be restrained using the vehicle's seat belt. See "Seat belts" on page 91 for details.

A CAUTION

- For effective protection in automobile accidents and sudden stops, children must be properly restrained using a seat belt or child restraint depending on age and size. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior if you are unrestrained.
- Lexus strongly urges use of a proper child restraint which conforms to the size of the child and is put on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

- Never put a rear-facing child restraint system on the front seat. In the event of an accident, the force of the rapid inflation of the airbag can cause death or serious injury if a rear-facing child restraint system is put on the front seat.
- Unless it is unavoidable, do not put a forward-facing child restraint system on the front seat.
- A forward-facing child restraint system should be put on the front seat only when it is unavoidable. Always move the seat as far back as possible, because the force of a deploying airbag could cause death or serious injury to the child. Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured.

Child restraint system

A child restraint system for a small child or baby must itself be properly restrained on the seat with the lap portion of the lap/shoulder belt. You must carefully consult the manufacturer's instructions which accompany by your child restraint system.

To provide proper restraint, use a child restraint system following the manufacturer's instructions about the appropriate age and size of the child for the restraint system.

Install the child restraint system correctly following the instructions provided by its manufacturer of the system. General directions are also provided under the following illustrations.

The child restraint system should be installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

A CAUTION

- Never put a rear-facing child restraint system on the front seat. In the event of an accident, the force of the rapid inflation of the airbag can cause death or serious injury if a rear-facing child restraint system is put on the front seat.
- Unless it is unavoidable, do not put a forward-facing child restraint system on the front seat.
- A forward-facing child restraint system should be put on the front seat only when it is unavoidable. Always move the seat as far back as possible, because the force of a deploying airbag could cause death or serious injury to the child.
- After installing the child restraint system, make sure it is secured in place according to the manufacturer's instructions. If it is not restrained securely, it may cause death or serious injury to the child in the event of a sudden stop or accident.

When not using the child restraint system, keep it secured with the seat belt or place it somewhere other than in the passenger compartment. This will prevent it from injuring passengers in the event of a sudden stop or accident.

For vehicles sold in Canada:

Your vehicle has anchors for securing the top strap of a child restraint system. The anchor nuts are welded beneath the sheet metal to permit installation of an anchor bracket for a child restraint system.

To install an anchor bracket, use an 8 mm X 30 mm X 1.25 mm coarse thread metric bolt and a 15 mm (0.6 in.) spacer for the outer anchors or a 10 mm (0.4 in.) spacer for the center anchor. Note that the bolts accompanying many child restraint systems are not metric. You can damage the anchor nuts on your vehicle if you force bolts with different thread into the anchor nuts.

For instructions about how to install the anchor bracket, see "Top strap anchors and locations".

If your child restraint system does not provide any of the necessary parts, you can purchase the following items from your Lexus dealer.

- CRS installation kit (Part No. 04731–22012) – contains 1 bolt, 3 types of spacer and 1 locking clip.
- Bolt (Part No. 91511–60830)


Types of child restraint system

Child restraint systems are classified into the following 3 types depending on the child's age and size.

- (A) Infant seat
- (B) Convertible seat
- (C) Booster seat

Install the child restraint system following the instructions provided by its manufacturer.

(A) Infant seat

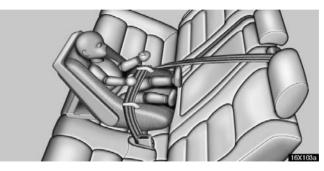

(B) Convertible seat




(C) Booster seat




INSTALLATION WITH 2-POINT TYPE SEAT BELT

(A) Infant seat installation

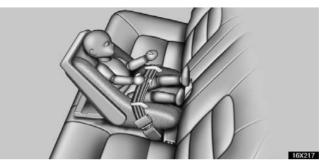


An infant seat is used in rear-facing position only.

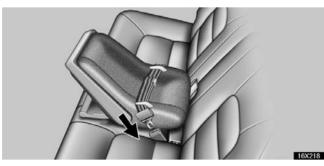


1. Run the center lap belt through or around the infant seat following the instructions provided by its manufacturer and insert the tab into the buckle taking care not to twist the lap belt.

CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the lap belt is not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect your child from injury.

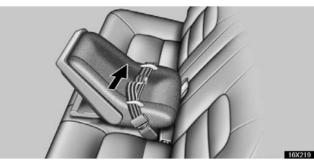


2. When pressing the infant seat firmly against the seat cushion and seatback, tighten the lap belt by pulling its free end to hold the infant seat securely.

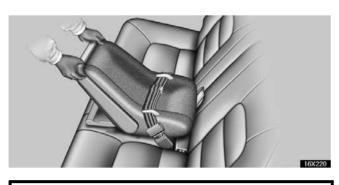

CAUTION

Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.

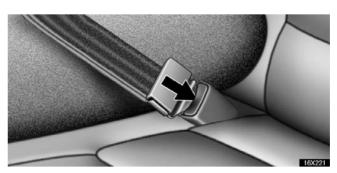

3. To remove the infant seat, press the buckle–release button.

(B) Convertible seat installation



A convertible seat is used in forward-facing and rear-facing positions depending on the age and size of the child. When installing, follow the manufacturer's instructions about the appropriate age and size of the child as well as direction for installing of a child restraint system.



1. Run the center lap belt through or around the convertible seat following the instructions provided by its manufacturer and insert the tab into the buckle taking care not to twist the lap belt.

CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the lap belt is not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect your child from injury.




2. While pressing the convertible seat firmly against the seat cushion and seatback, tighten the lap belt by pulling its free end to hold the convertible seat securely.



A CAUTION


Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.

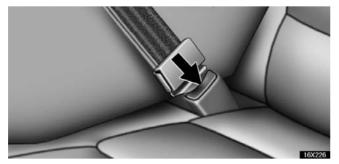

3. To remove the convertible seat, press the buckle–release button.

INSTALLATION WITH 3-POINT TYPE SEAT BELT

(A) Infant seat installation

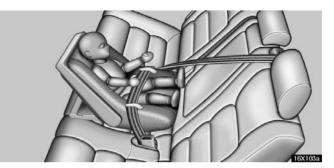


An infant seat is used in rear-facing position only.



CAUTION


Never put a rear-facing child restraint system in the front seat because the force of the rapid inflation of the passenger airbag can cause death or serious injury to the child.

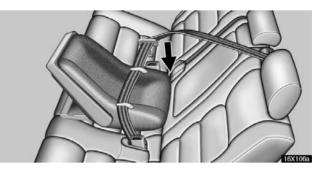

1. Run the lap and shoulder belt through or around the infant seat following the instructions provided by its manufacturer and inserting the tab into the buckle taking care not to twist the belt. Keep the lap portion of the belt tight.


CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect your child from injury.

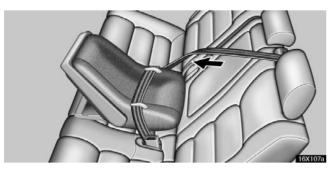


2. Fully extend the shoulder belt to put it in the lock mode. When the belt is then retracted even slightly, it cannot be extended.

To hold the infant seat securely, make sure the belt is in the lock mode before letting the belt to retract.

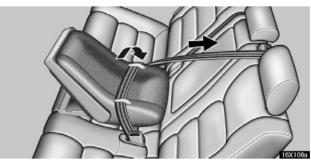

3. While pressing the infant seat firmly against the seat cushion and seatback, let the shoulder belt retract as far as it will go to hold the infant seat securely.

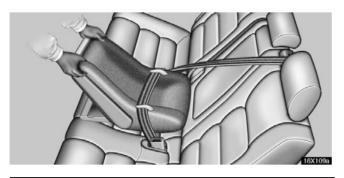

CAUTION

Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.




4. To remove the infant seat, press the buckle–release button and allow the belt to retract completely. The belt will move freely again and be ready to work for an adult or older child passenger.

(B) Convertible seat installation



A convertible seat is used in forward-facing and rear-facing positions depending on the age and size of the child. When installing, follow the manufacturer's instructions about the appropriate age and size of the child as well as direction for installing of a child restraint system.

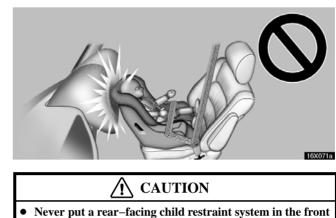


Never put a rear-facing child restraint system in the front seat because the force of the rapid inflation of the passenger airbag can cause death or serious injury to the child.



► Move seat fully back


• A forward-facing child restraint system should be put on the front seat only when it is unavoidable. Always move the seat as far back as possible, because the force of a deploying airbag could cause death or serious injury to the child.

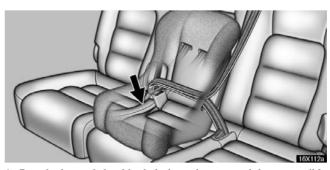

1. Run the lap and shoulder belt through or around the convertible seat following the instructions provided by its manufacturer and inserting the tab into the buckle taking care not to twist the belt. Keep the lap portion of the belt tight.

CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect your child from injury.

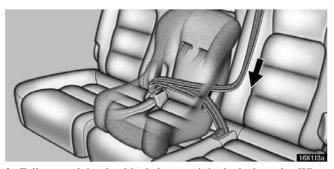


2. Fully extend the shoulder belt to put it in the lock mode. When the belt is then retracted slightly, it cannot be extended.

To hold the convertible seat securely, make sure the belt is in the lock mode before letting the belt to retract.



3. While pressing the convertible seat firmly against the seat cushion and seatback, let the shoulder belt retract as far as it will go to hold the convertible seat securely.

121

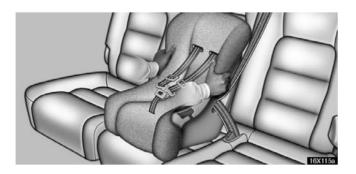

CAUTION

Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.



4. To remove the convertible seat, press the buckle–release button and allow the belt to retract completely. The belt will move freely again and be ready to work for an adult or older child passenger.

(C) Booster seat installation




A booster seat is used in forward-facing position only.



►Move seat fully back

CAUTION

A forward-facing child restraint system should be put on the front seat only when it is unavoidable. Always move the seat as far back as possible, because the force of a deploying airbag could cause death or serious injury to the child.

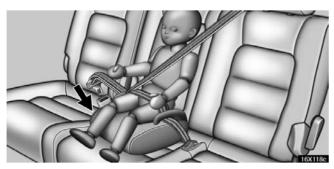

1. Sit the child on a booster seat. Run the lap and shoulder belt through or around the booster seat and child following the instructions provided by its manufacturer and insert the tab into the buckle.

Make sure the shoulder belt is correctly across the child's shoulder and that the lap belt is positioned as low as possible on child's hips. See "Seat belts" on page 91 for details.

CAUTION


• Always make sure the shoulder belt is positioned across the center of child's shoulder. The belt should be kept away from child's neck, but not falling off child's shoulder. Failure to do so could reduce the amount of protection in an accident and cause serious injuries in a collision.

- High-positioned lap belts and loose-fitting belts both could cause serious injuries due to sliding under the lap belt during a collision or other unintended result. Keep the lap belt positioned as low on hip as possible.
- For child's safety, do not place the shoulder belt under child's arm.
- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect your child from injury.




2. To remove the child restraint system, press the buckle–release button and allow the belt to retract.

Top strap anchors and locations (For vehicles sold in Canada)

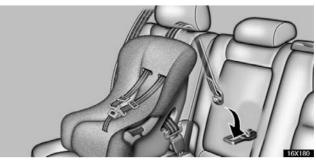


If your child restraint system requires the use of a top strap, latch the hook onto the anchor bracket and tighten the top strap.

See the following instructions to install the anchor bracket.

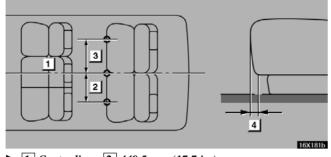

- 1 Center line 2 449.5 mm (17.7 in.)
 3 449.5 mm (17.7 in.) 4 6.5 mm (0.26 in.)
- 1. Remove the machine-sewed part of the floor carpet.
- 2. Remove the plastic clip securing the floor panel with a coin.

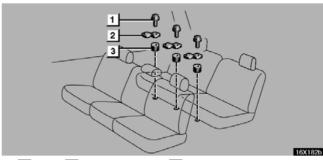

▶ 1 Bolt 2 Anchor bracket 3 Spacer

3. Insert a 15 mm (0.6 in.) spacer, and tighten down the anchor bracket for your child restraint system with a bolt. Torque the bolt to $16.5 - 24.7 \text{ N} \cdot \text{m} (1.68 - 2.52 \text{ kgf} \cdot \text{m}, 12.2 - 18.2 \text{ ft·lbf.}).$

To comply with Canada Motor Vehicle Safety Standards, vehicles sold in Canada are provided with a bracket set in the glovebox, designed for use with any of three anchor locations shown in the illustration.

DRIVING POSITION MEMORY SYSTEM

The micro computer can memorize the position of the driver's seat, and the positions of the tilt and telescopic steering, and outside rear view mirrors. Two different driving position profiles can be entered into the computer's memory.

Recording a driving position in the computer's memory can only be done when the ignition key is in the "ON" position and the shift lever is in the "P" position.

Setting a driving position



1. Adjust the driver's seat , tilt and telescopic steering and outside rear view mirrors to the desired position.

2. While pushing the "SET" button, push button "1" or "2" until the signal beeps.

The beep sound means that the positions are recorded in the computer's memory.

By repeating these two steps and pressing the remaining button, the driving position for another driver can be recorded.

To set a new memorized position, select the desired position and perform step 2. The previous memory will be erased and the new position will be set.

To make only slight changes to an already memorized position, the easiest way is to first activate the memorized position, then make the desired changes and perform step 2 above.

Activating a memorized position



When you push button "1" or "2", the driving position will be automatically adjusted to the position recorded for that button.

COMFORT ADJUSTMENT

Conditions for memorized position activation

- Ignition key "ON" and shift lever in "P" position. All parts of the memorized positions can be activated. However, if the brake pedal is being depressed, the seat position will not change.
- Key not in ignition switch and within 30 seconds of opening driver's door.

The memorized position can be activated, except for the tilt and telescopic steering.

If any driving position memory switch is pushed while one of the memorized driving position profiles is being activated, the operation will stop.

To activate the system, push the desired button ("1" or "2") again.

The driving position memory control system cannot be operated while the vehicle is moving.

If the vehicle's battery is disconnected, the computer's memory will be erased and the memorized positions will have to be set again.

CAUTION

- Do not start the vehicle while the adjustments are being made.
- Take care not to select the wrong button, or the seat could strike the rear passenger or hit your body against the steering wheel. If this happens, you can stop the movement by pressing another driving position memory switch, or depressing the brake pedal.

<u>SECTION</u> **1** – 7

INSTRUMENTS AND CONTROLS

Theft deterrent

Theft deterrent system	30
Theft prevention labels 1	32

1

THEFT DETERRENT

THEFT DETERRENT SYSTEM

To deter theft of the vehicle, this system is designed to give an alarm if any of the doors or hood is forcibly unlocked or the battery terminal is disconnected and then reconnected while the vehicle is locked.

The alarm blows the horn intermittently and flashes the headlights, tail lights and other exterior lights.



Setting the system

1. Turn the ignition key to the "LOCK" position and remove it.

The indicator light flashes by means of the engine immobiliser system.

2. Close and lock all the doors and hood using an ignition key or wireless remote control.

If you lock them with wireless remote control, the turn signals flash once.

The flashing indicator light will change to stay on when all the doors and hood are closed and locked.

3. After 30 seconds, the indicator starts flashing and the system is set.

Cancelling the system

When you unlock any door using an ignition key or wireless remote control, the system is cancelled.

If you unlock any door with wireless remote control, the turn signals flash twice.

Activating the system

The alarm sounds for 60 seconds if any of the following are operated:

- Unlocking any door without using an ignition key or wireless remote control.
- Opening the hood and any doors forcibly.
- Reconnecting the battery.

If any door is unlocked and the ignition key is not in the ignition switch during the alarm sounding, its door is automatically locked.

THEFT DETERRENT

To stop the alarm: Use either of the following methods.

- Unlock the door using an ignition key or wireless remote control.
- Turn the ignition switch on.

Testing the system

1. Open all the windows.

2. Set the system as described above.

The front doors should be locked with the ignition key or wireless remote control. Be sure to wait until the indicator light starts flashing.

3. Unlock one of the doors from the inside.

The system should activate the alarm.

4. Unlock any of the doors with a key or the wireless remote control to cancel the system.

5. Repeat this operation for the other doors and hood.

When testing the hood, also check that the system is activated when the battery terminal is disconnected and then reconnected.


If the system does not work properly, have it checked by your Lexus dealer.

NOTICE

Disconnecting the battery may result in the erasure of information you have set in the computer memory. After reconnecting the battery, check that the memorized data has been retained. If it has been erased, input it into the computer once more.

THEFT DETERRENT

THEFT PREVENTION LABELS (U.S.A.ONLY)

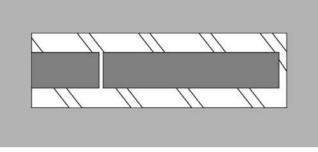

Your new vehicle carries theft prevention labels which are approximately 56 mm (2.20 in.) by 16 mm (0.63 in.).

The purpose of these labels is to reduce the incidence of vehicle thefts by facilitating the tracing and recovery of parts from stolen vehicles. The label is designed so that once it is applied to a surface, any attempt to remove it will result in destroying the integrity of the label. Transferring these labels intact from one part to another will be impossible.


NOTICE

You should not attempt to remove the theft prevention labels as it may violate certain state or federal laws.

SECTION 2

AIR CONDITIONING AND AUDIO

Automatic air conditioning controls	134
Rear air conditioning controls	143
Audio system	146

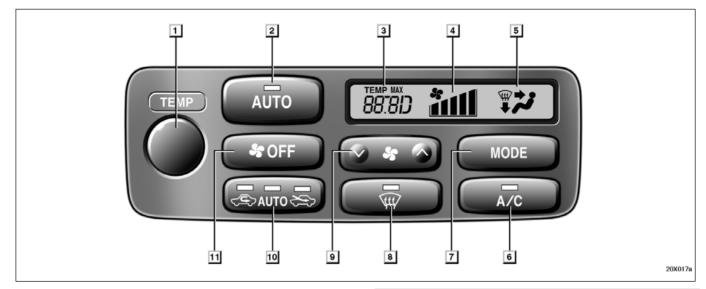

AUTOMATIC AIR CONDITIONING CONTROLS

The automatic air conditioning automatically maintains the set temperature.


This air conditioning features automatic fan speed and air flow control which automatically selects the most suitable fan speed and air flow to control the temperature. The ignition key must be in the "ON" position.

NOTICE

To prevent the battery from being discharged, do not leave the air conditioning on longer than necessary when the engine is not running.

- **1** Temperature control knob
- **2** Automatic control button
- **3** Temperature display (in degrees Fahrenheit or Centigrade)
- **4** Fan speed display
- 5 Air flow display
- 6 Air conditioning on-off button
- 7 Air flow control button
- 8 Front windshield button
- 9 Fan speed control button
- 10 Air intake control button
- 11 OFF button

2

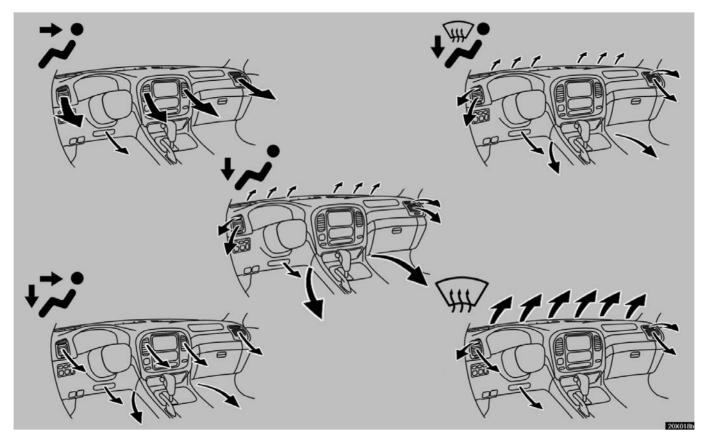

► Air flow selection

(a) Climate control

SETTING OPERATION – automatic control



1. Push the "AUTO" button.

Air flow quantity, switching of the diffusers, on-off of the air conditioning, and switching of the air intake between RECIRCULATED AIR and OUTSIDE AIR are automatically adjusted. The operation status is shown by each indicator.

When one of the manual control buttons is depressed while operating in automatic mode, the operation corresponding to the button depressed is set. Other conditions continue to be adjusted automatically.

Push the "OFF" button to turn the air conditioning off.

AIR CONDITIONING AND AUDIO




2. Turn the "TEMP" knob until the desired temperature is

The "TEMP" knob is used to set the desired passenger compartment temperature. The temperature of air delivered to the passenger compartment will be controlled automatically according to the setting. The figures on the panel indicate degrees Fahrenheit or Centigrade.

displayed.

2

SETTING OPERATION – manual control If manual air flow selection is desired –

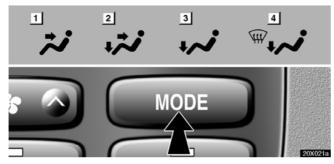

The outlets from which air is delivered can be selected manually by pressing the button. The function of each mode is as follows:

- **1 Panel** Air flows mainly from the instrument panel vents.
- **2 Bi–level** Air flows from both the floor vents and the instrument panel vents.
- **3** Floor Air flows mainly from the floor vents.
- **Floor/Windshield** Air flows mainly from the floor vents and windshield vents.

If quick heating or cooling is desired -

Turn the "TEMP" knob until "MAX. HOT" or "MAX. COLD" appears on the display.

If manual fan speed control is desired -




▶ 1 Fan speed at low 2 Fan speed at high

The fan speed can be set to your desired speed by pushing the appropriate side of fan speed control button. The higher the fan speed is, the more air is delivered. Pushing the "OFF" button turns off the fan.

To remove exterior windshield frost, use the high speed setting.

If manual switching of air intake is desired –

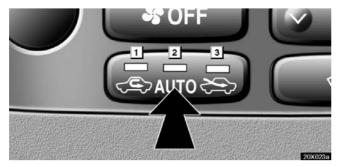

Each time you push the air intake control button, the mode changes in order from the RECIRCULATED AIR mode to AUTOMATIC mode to OUTSIDE AIR mode, then back to the RECIRCULATED AIR mode. Each indicator light shows which mode is now selected.

- **RECIRCULATED mode** If quick circulation of cooled air is desired, select this mode.
- **2 AUTOMATIC mode** When driving where the outside air is dirty (i.e., when the vehicle running just in front of your vehicle accelerates rapidly), the system changes automatically from the OUTSIDE AIR mode to the RECIRCULATED mode.
- **OUTSIDE AIR mode** The system will take fresh outside air into the vehicle.

AIR CONDITIONING AND AUDIO

For normal use, it is best to keep the air intake control button set to OUTSIDE AIR mode. If recirculated air is used during heating, the windows will fog up more easily.

To change the sensitivity of the sensor switching between the RECIRCULATED and OUTSIDE AIR in the AUTOMATIC mode, push the air intake control button until the "AUTO" indicator light flashes. The display changes as illustrated below.



When you turn the "TEMP" knob, the sensitivity changes from "+3" down to "-3". If you do not operate any button for a few seconds or if you push the button other than the air intake control button and temperature control knob, the previous display returns.

If manual on-off of the air conditioning is desired -

Push the "A/C" button to turn the air conditioning on and push it again to turn the air conditioning off.

The air conditioning does not work if the outside temperature is lowered down to around $0^{\circ}C$ (32°F).

If the system is used for ventilation, heating in dry weather or removing frost or exterior fog on the windshield, turn the air conditioning off once it is no longer required. This will improve fuel economy. The air conditioning can be used for year-round automatic temperature control including cooling and dehumidifying operation.

If the air conditioning compressor does not operate, the indicator of the "A/C" button will blink. If the indicator of the "A/C" button blinks even when the "A/C" button is pushed again, have the compressor checked by your nearest Lexus dealer.

(b) Windshield defogging and defrosting



To remove interior fog on the windshield -

Push the"FRONT WINDSHIELD" button.

To remove frost or exterior fog on the windshield -

- 1. Place the temperature control lever at the maximum temperature.
- 2. Push the "FRONT WINDSHIELD" button.

3. Push the "HI" button of the fan speed control button to obtain a maximum air flow.

4. Leave the air conditioning on-off button off.

When the "FRONT WINDSHIELD" button is pushed while operating in automatic mode, the air conditioning is set to operate and the OUTSIDE AIR mode is set.

If you push the "FRONT WINDSHIELD" button once again while in the FRONT WINDSHIELD mode, the mode then returns to the last mode used.

🔨 CAUTION

Do not use the "FRONT WINDSHIELD" button during cooled air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield could cause the outer surface of the windshield to fog up blocking your vision.

(c) Rear air conditioning switch



To turn on the rear air conditioning when you sit on the front seat, push this switch. The rear air conditioning operates in the automatic mode. To adjust the air flow and setting temperature, follow the steps in accordance with "Rear air conditioning controls" on page 143.

(d) Operating tips

- Make sure the air inlet grilles in front of the windshield are not blocked by leaves or other obstructions.
- If air flow control is not satisfactory, check the dashboard vents. (See "Center vents", "Side vents" and "Lower vent".)
- To help cool down the interior after parking in the hot sun, drive for the first few minutes with the windows open. After the excess heat has blown away, close the windows.
- When driving on dusty roads, close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake control button be left to the OUTSIDE AIR mode and the fan speed control button be pressed to anywhere except the "OFF" button.
- If following another vehicle on a dusty road, or driving in windy and dusty conditions, it is recommended that the air intake control button be temporarily pressed in to the RECIRCULATED AIR mode, which will close off the outside passage and prevent outside air and dust from entering the vehicle interior.

Center vents




The center vents may be opened or closed as shown.

Side vents




The side vents may be opened or closed as shown.

Lower vent

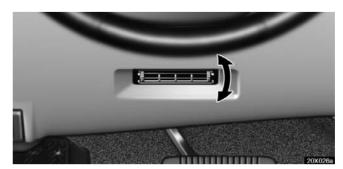

The lower vent may be opened or closed as shown.

REAR AIR CONDITIONING CONTROLS

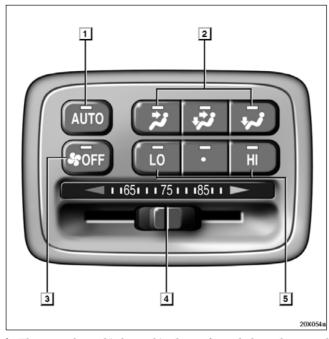

The control panel is located in the roof panel above the second seat.

- **1** Automatic control button
- **2** Air flow control buttons
- **3** OFF button
- 4 Temperature control lever
- **5** Fan speed control buttons

The automatic air conditioning automatically maintains the set temperature.

This air conditioning features automatic fan speed and air flow control which automatically selects the most suitable fan speed and air flow to control the temperature. The ignition key must be in the "ON" position.

NOTICE

To prevent the battery from being discharged, do not leave the air conditioning on longer than necessary when the engine is not running.

SETTING OPERATION – automatic control




1. Push the "AUTO" button.

Air flow quantity and switching of the diffusers are automatically adjusted. The operation status is shown by each indicator.

When one of the manual control buttons is depressed while operating in automatic mode, the operation corresponding to the button depressed is set. Other conditions continue to be adjusted automatically.

Push the "OFF" button to turn the rear air conditioning off.

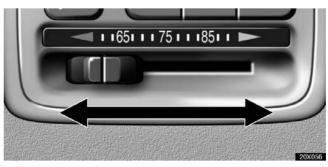

2. Use the temperature control lever to set the desired temperature.

Slide the lever to the right for higher temperature and to the left for lower temperature.

In the vehicles sold in U.S.A., the figures above the temperature control lever are the temperature in degrees Fahrenheit, while in the vehicles sold in Canada, the temperature is indicated in degrees Centigrade.

SETTING OPERATION – manual control

If manual air flow selection is desired -



The outlets from which air is delivered can be selected manually by pressing in the appropriate air flow control button. The function of each button is as follows:

- **1 Panel** Air flows mainly from the roof panel vents.
- **Bi–level** Air flows from both the floor vents and the roof panel vents.
- **3** Floor Air flows mainly from the floor vents.

If manual fan speed control is desired –



▶ 1 Low speed 2 Middle speed 3 High speed

The fan speed can be set to your desired speed by pushing the appropriate fan speed control button. The higher the fan speed is, the more air is delivered. Pushing the "OFF" button turns off the fan.

AUDIO SYSTEM

Quick reference for your audio system



Audio system made in Nakamichi has a "NAKAMICHI" logo on the panel.

146

 Turning the system on and adjusting volume (See page 148 for details.) Radio mode: Frequency tuning (See page 151 or 153 for details.) TAPE or CD Direct access to a desired program mode: (See page 156 or 160 for details.) Stopping and ejecting a cassette tape (See page 154 for details.) Cassette tape slot (See page 154 for details.) Function buttons 1 - 6: Station selector buttons (See page 152 for details.) Display of functions in TAPE mode 	 6 Display of functions in CD mode ∨ ∧: Disc selection (See page 159 for details.) ◄<: Reversing or Fast forwarding ▶: (See page 160 for details.) RPT: Automatic repeat (See page 161 for details.) RAND: Random access (See page 161 for details.) 7 Radio mode: Scan tuning or Preset scan tuning (See page 152 for details.) CD mode: Scan selection (See page 159 for details.)
 Side change (See page 155 for details.) DOLBY NR (See page 154 for details.) Rewinding or Fast forwarding (See page 155 for details.) RPT: Automatic repeat (See page 155 for details.) SKIP: Automatic skip of blank portions of tape (See page 155 for details.) 	 8 Audio control knob (See page 149 for details.) 9 Compact disc slot (See page 157 for details.) 10 Load button (See page 157 for details.) 11 Mode selectors (See page 148 for details.) 12 Stopping and ejecting a compact disc (See page 157 for details.)

Using your audio system: some basics

This section describes some of the basic features of the Lexus audio system. Some information may not pertain to your system.

Your audio system works when the ignition key is in the "ACC" or "ON" position.

NOTICE

To prevent the battery from being discharged, do not leave the car audio on longer than necessary when the engine is not running.

(a) Turning the system on and off



Push this knob to turn the audio system on and off. Turn this knob to adjust the volume.

The system turns on in the last mode used.



Push "AM", "FM1/2", "TAPE" or "CD" to turn on that mode. The selected mode turns on directly.

Push these buttons if you want to switch from one mode to another.

If the tape is not set, the cassette player does not turn on.

You can turn off the cassette player or compact disc player by ejecting the cassette tape or compact disc. If the audio system was previously off, then the entire audio system will be turned off when you eject the cassette tape or compact disc. If another function was previously playing, it will come on again.

TRPE * PLRY PRT SKIP nn -----DISC TRACK C D ! ! DISC ---PRT RAND ** ~ 2120045

In the "TAPE" or "CD" mode, the applicable functions are shown in the lowest part of the display. Push the switch just below to turn on each function.

(b) Tone and balance

How good an audio program sounds to you is largely determined by the mix of the treble, mid–range, and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid–range, and bass.

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that if you are listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of one group of sounds while decreasing the volume of another.

AIR CONDITIONING AND AUDIO



Each time you push the "AUDIO CONTROL" knob, the display changes as in the following. To adjust the tone and balance, turn the knob.

BAS: Adjusts low–pitched tones.

MID: Adjusts mid–pitched tones.


TRE: Adjusts high-pitched tones.

FAD: Adjusts the sound balance between the front and rear speakers.

BAL: Adjusts the sound balance between the right and left speakers.

(c) Your power antenna

The antenna automatically extends when the radio mode is on and retracts when the radio mode is off.

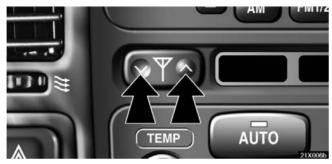

To adjust the height of the antenna manually, push the switch.

Clean the antenna mast periodically with a clean dry cloth.

CAUTION

Before extending the antenna, confirm that no one is close enough to get injured.

NOTICE

To prevent damage to the antenna, make sure it is retracted before driving your vehicle through an automatic car wash.

(d) Your cassette player

When you insert a cassette, the exposed tape should be to the right.

NOTICE

Do not oil any part of the cassette player, and do not insert anything except a cassette tape into the slot.

(e) Your automatic changer



Your automatic changer can store up to 6 discs and play selected discs or continuously play all the discs set in the player.

When you set discs into the player, make sure their labels face up. If not, the player will display "ERR" and the disc number.

NOTICE

Never try to disassemble or oil any part of the compact disc player. Do not insert anything except a compact disc into the slot.

The player is intended for use with 12 cm (4.7 in.) discs only.

AIR CONDITIONING AND AUDIO

Radio operation

(a) Listening to the radio



Push these buttons to choose either an AM or FM station.

"AM", "FM1" or "FM2" appears on the display.

2



Push this button on the upper side to step up the station band or on the lower side to step down.

Your radio automatically changes to stereo reception when a stereo broadcast is received. "ST" appears on the display. If the signal becomes weak, the radio reduces the amount of channel separation to prevent the weak signal from creating noise. If the signal becomes extremely weak, the radio switches from stereo to mono reception. In this case, "ST" disappears from the display. (b) Presetting a station



1. Tune in the desired station.

2. Push one of the station selector buttons (1-6) and hold it until a beep is heard. This sets the station to the button and the button number (1-6) appears on the display.

Each button can store one AM station and two FM stations. To change the preset station to a different one, follow the same procedure.

The preset station memory is cancelled when the power source is interrupted by battery disconnection or a blown fuse.

(c) Selecting a station


Your Lexus has an electronic tuning radio (ETR). Tune in the desired station using one of the following methods.



Preset tuning: Push the button (1-6) for the station you want. The button number (1-6) and station frequency appear on the display.

Manual tuning: Push the "TUNE SEEK" button briefly. Each time you push the button, the radio will step up or down to another frequency.

Seek tuning: Push the "TUNE SEEK" button and hold it until you hear a beep. The radio will begin seeking up or down for a station of the nearest frequency and will stop on reception. Each time you push the button, the stations will be searched out one after another.

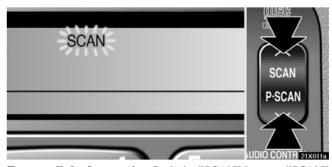

To scan all the frequencies: Push the "SCAN" button. "SCAN" appears on the display. The radio will find the next station up the band, stay there for a few seconds, and then scan again. To select a station, push the "SCAN" button a second time.

To scan the preset stations: Push the "P·SCAN" button. "SCAN" appears on the display. The radio will tune in the next preset station up the band, stay there for a few seconds with the preset button number shown on the display, and then move to the next preset station. To select a station, push the "P·SCAN" button a second time.

Cassette tape player operation

(a) Playing a cassette tape




When you insert a cassette tape, the exposed tape should be to the right.

The player will automatically start when you insert a cassette tape. At this time, "TAPE" appears on the display.

If a metal or chrome equivalent cassette tape is put in the cassette player, the player will automatically adapt to it and "MTL" appears on the display.

To stop or eject the cassette tape, push the "EJECT" button.

Auto–reverse feature: After the cassette player reaches the end of a tape, it automatically reverses and begins to play the other side, regardless of whether the cassette was playing or fast forwarding.

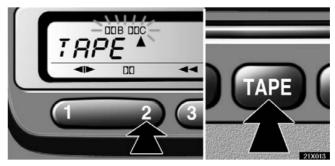

If a cassette is already in the slot, push the "TAPE" button.

Dolby Noise Reduction* feature: If you are listening to a tape that was recorded with Dolby* B or C Noise Reduction, push the button by the double–D symbol until the appropriate symbol appears on the display.

The Dolby B NR mode reduces tape noise by about 10 dB. The Dolby C NR mode reduces tape noise by another 10 dB or about 20 dB total. For best sound reproduction, select the same NR mode that was used to record the tape.

To play a tape recorded without Dolby NR, push the button until the symbol disappears from the display.

* Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. "DOLBY" and the double–D symbol are trademarks of Dolby Laboratories Licensing Corporation.

(b) Manual program selection



"Program" button: Push the " $\triangleleft i \triangleright$ " button to select the other side of a cassette tape. The display indicates which side is currently selected (\blacktriangle indicates top side, \blacktriangledown indicates bottom side).


"Rewind" button: Push the "

To stop rewinding, push the same button or "TAPE" button.

"Fast forward" button: Push the "▶▶" button to fast forward a cassette tape. "FF" appears on the display.

To stop fast forwarding, push the same button or "TAPE" button.

AIR CONDITIONING AND AUDIO

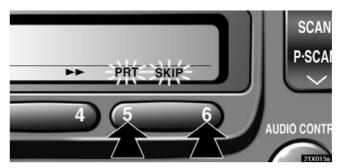

(c) Automatic program selection


"**RPT**" button: The repeat feature automatically replays the current program.

Push the "RPT" button while the program is playing. When the program ends, it will automatically be rewound and replayed. Push the button again to turn off the repeat feature.

There must be at least 5 seconds of blank space between programs for the repeat feature to work correctly.

"SKIP" button: The skip feature allows you to fast forward past long stretches of blank tape. This is especially useful at the end of cassettes.

Push the "SKIP" button. The player will automatically skip any blank portions of 15 seconds or more and play the next program. To cancel it, push the button once again.

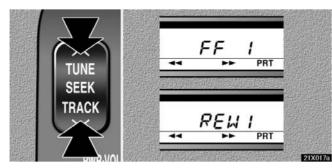

"Automatic program selection" button: The automatic program selection feature allows you to program your cassette player to skip forward or backward to locate the song you want to hear. You can skip up to nine programs at a time.

Push this button on the upper side to skip forward. "FF" and the number will appear on the display. Push the button until the number you want to skip appears on the display. After that, the player will automatically skip forward.

When the end of the tape is reached, the player automatically reverses sides and resumes normal play.

Push this button on the lower side to skip backward. Push the button until "REW" and the number you want to skip appear on the display.

- If you set "REW 1", the player will rewind to the beginning of the current program.
- When counting the number of programs you want to rewind, remember to count the current program as well. For example, if you want to rewind to a song that is two before the song you are listening to, push this button until "REW 3" appears on the display.

When the beginning of the tape is reached, the player automatically resumes normal play.

There must be at least 5 seconds of blank space between programs for this feature to work correctly.


"RPT", "SKIP" or "Automatic program selection" features: These features may not work well with some spoken word, live or classical recordings.

Compact disc player operation

(a) Inserting or ejecting compact discs

The ignition switch must be in the "ACC" or "ON" position.

Your automatic changer can store up to 6 discs.

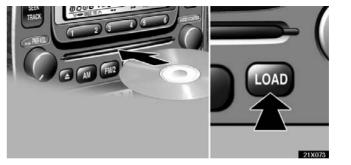

- Setting one compact disc alone:
- 1. Push the "LOAD" button briefly.

You can set a disc at the lowest empty disc number.

2. Insert the disc into the slot.

After insertion, the set disc is automatically loaded.


If the label faces down, the disc cannot be played. In this case, "ERR1" and disc number appear on the display.

- Setting all the discs:
- 1. Push the "LOAD" button until you hear a beep.

2

2. Insert the discs one by one into the slot.

After inserting the first disc, you can insert the second disc when the indicators at both ends of the disc slot blink.

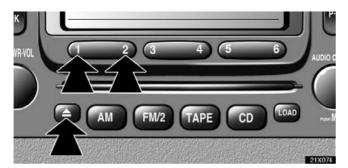

• Ejecting one disc alone:

1. Push the "DISC" button to display the disc number you want to eject.

- 2. Push the "EJECT" button for the compact disc briefly.
- Ejecting all the discs:

Push the "EJECT" button for the compact disc until you hear a beep.

(b) Playing a compact disc



Push the "CD" button if the discs are already loaded in the player.


"CD" appears on the display.

The discs set in the player are played continuously, starting with disc number 1. The disc number of the disc currently being played, the track number and the time from the beginning of the program appear on the display.

When play of one disc ends, the first track of the following disc starts. When play of the final disc ends, play of the first disc starts again.

The player will skip any empty disc number.

(c) Selecting a desired disc

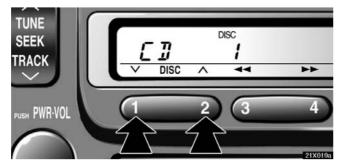

Push the "DISC" button to select the disc number.

Push the button several times until the desired disc number appears on the display. When you release the button, the player will start playing the selected disc from the first track.

(d) Searching for a desired track



AIR CONDITIONING AND AUDIO

Push the "SCAN" button briefly.

"SCAN" will appear on the display. The compact disc player will play the next track for 10 seconds, then scan again. To select a track, push the "SCAN" button a second time. If the player reaches the end of the disc, it will continue scanning at track 1.

After all the tracks are scanned in one pass, normal play resumes.

(e) Searching for a desired disc




Push the "SCAN" button until you hear a beep.

With "D.SCAN" on the display, the program at the beginning of each disc will be played for 10 seconds. To continue listening to the program of your choice, push the "SCAN" button a second time.

After all the discs in the magazine are scanned in one pass, the scan function is cancelled.

(f) Selecting a desired track

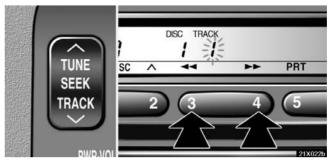

"TRACK" button: Use for direct access to a desired track.

Push either side of the "TRACK" button several times until the desired track number appears on the display. As you release the button, the player will start playing the selected track from the beginning.


"Fast forward" button.

Push the " \triangleright " button and hold it to fast forward the disc. When you release the button, the compact disc player will resume playing from that position.

"Reverse" button.

Push the "◀◀" button and hold it to reverse the disc. When you release the button, the compact disc player will resume playing.

(g) Repeating a track or a disc

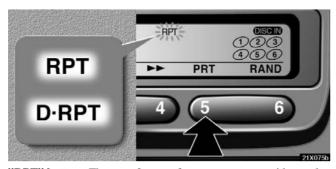


"RPT" button: There are 2 repeat features — you can either replay a disc track or a whole compact disc.

Repeating a track: Push the "RPT" button briefly while the tack is playing. "RPT" will appear on the display. When the track ends, it will automatically be replayed. This process will be continued until you push the button again to turn off the repeat feature.

Repeating a disc: Push the "RPT" button until you hear a beep. "D·RPT" will appear on the display. The player will repeat all the tracks on the disc you are listening to. When the disc ends, the player will automatically go back to the top track of the disc and replay. This process will be continued until you push the button again to turn off the repeat feature.

(h) Random plaving

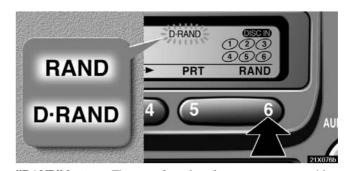

AIR CONDITIONING AND AUDIO

"RAND" button: There are 2 random features — you can either listen to the tracks on all the compact discs in the player in random order, or only listen to the tracks on a specific compact disc in random order.

Random playing for the tracks on a disc: Push the "RAND" button briefly. "RAND" will appear on the display and play the disc you are listening to in random order.

Random playing for all the tacks in the magazine: Push the "RAND" button until you hear a beep. "D'RAND" will appear on the display and the player will perform all the tracks on all the discs in the magazine in random order. To turn off the random feature, push "RAND" a second time.

When a track is skipped or the system is inoperative, push the button to reset.

(i) If the player malfunctions

If "WAIT" appears on the display, audio signals of the disc cannot be read or the system has trouble. Push the "CD" button once again.

If the player does not operate, check that the disc surface is not soiled or damaged. If the disc is O.K., the following two causes are possible.

- Condensation may have occurred on the internal mechanism of the automatic changer. Open the cover to let the air circulate.
- The temperature of the player's internal mechanism is raised because of high external temperature. Remove the magazine from the player to cool it.

If the player still does not operate, take it to your Lexus dealer.

Car audio system operating hints

NOTICE

To ensure the correct audio system operation:

- Be careful not to spill beverages over the audio system.
- Do not put anything other than a cassette tape or compact discs into the cassette tape slot or compact disc slot.

Radio reception

Usually, the problem with radio reception does not mean there is a problem with your radio – it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or telephone wires can interfere with AM signals. And of course, radio signals have a limited range, and the farther you are from a station, the weaker its signal will be. In addition, reception conditions change constantly as your vehicle moves.

Here are some common reception problems that probably do not indicate a problem with your radio:

FM

Fading and drifting stations – Generally, the effective range of FM is about 40 km (25 miles). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path – FM signals are reflective, making it possible for two signals to reach your antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering – These occur when signals are blocked by buildings, trees, or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping – If the FM signal you are listening to is interrupted or weakened, and there is another strong station nearby on the FM band, your radio may tune in the second station until the original signal can be picked up again.

AM

Fading – AM broadcasts are reflected by the upper atmosphere – especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference – When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static - AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening, or electrical motors. This results in static.

Caring for your cassette player and tapes

For high performance from your cassette player and tapes:

Clean the tape head and other parts regularly.

• A dirty tape head or tape path can decrease sound quality and tangle your cassette tapes. The easiest way to clean them is by using a cleaning tape. (A wet type is recommended.)

Use high-quality cassettes:


- Low-quality cassette tapes can cause many problems, including poor sound, inconsistent playing speed, and constant auto-reversing. They can also get stuck or tangled in the cassette player.
- Do not use a cassette if it has been damaged or tangled or if its label is peeling off.
- Do not leave a cassette in the player if you are not listening to it, especially if it is hot outside.
- Store cassettes in their cases and out of direct sunlight.
- Avoid using cassettes with a total playing time longer than 100 minutes (50 minutes per side). The tape used in these cassette is thin and could get stuck or tangled in the cassette player.

AIR CONDITIONING AND AUDIO

Caring for your compact disc player and discs



- Use only compact discs labeled as shown. The player is intended for use with 12 cm (4.7 in.) discs only.
- Extremely high temperature can keep your compact disc player from working. On hot days, use air conditioning to cool the vehicle interior before you listen to a disc.
- Bumpy roads or other vibrations may make your compact disc player skip.
- If moisture gets into your compact disc player, you may not hear any sound even though your compact disc player appears to be working. Remove the disc from the player and wait until it dries.

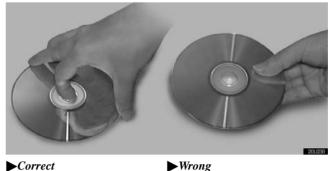


- Handle compact discs carefully, especially when you set them into the magazine. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scrapes, warping, pin holes, or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)



AIR CONDITIONING AND AUDIO

To clean a compact disc: Wipe it with a soft, lint–free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in a circle). Do not use a conventional record cleaner or anti–static device.

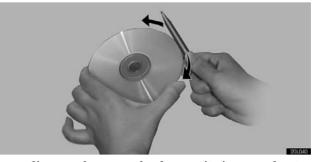

A new disc may have rough edges on its inner and outer perimeter. Remove the rough edges by pressing the side of a ball-point pen or pencil against the inner and outer edges of the disc as shown.

If you continue to play a disc with rough edges, flakes will fall on to the signal side of the disc and cause sound skipping or other problems.

CAUTION

Compact disc players use invisible laser beams which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the player correctly as instructed.

SECTION 3 – 1

STARTING AND DRIVING

Starting and driving

Three-way catalytic converter 168
Engine exhaust caution 169
Before starting the engine 170
Ignition switch with steering lock 170
Parking brake
How to start the engine 172
Automatic transmission 173
Four-wheel drive system 181
Rear differential lock system 182
Cruise control
Active height control suspension (AHC) 187
Adaptive variable suspension (AVS) 195
Brake system
Brake pad wear limit indicators 200
Types of tires

THREE-WAY CATALYTIC CONVERTER



Three–way catalytic converters are emission control devices installed in the exhaust system.

It looks somewhat like a muffler, but its purpose is to reduce pollutants in the exhaust gas.

CAUTION

- Keep people and combustible materials away from the exhaust pipe while the engine is running. The exhaust gas is very hot.
- Do not drive, idle or park your vehicle over anything that might burn easily such as grass, leaves, paper or rags.

NOTICE

A large amount of unburned gases flowing into the three-way catalytic converter may cause it to overheat and create a fire hazard. To prevent this and other damage, observe the following precautions:

- Use only unleaded gasoline.
- Do not drive with an extremely low fuel level; running out of fuel could cause the engine to misfire, creating an excessive load on the three-way catalytic converter.
- Do not allow the engine to run at idle speed for more than 20 minutes.
- Avoid racing the engine.
- Do not push-start or pull-start your vehicle.
- Do not turn off the ignition while the vehicle is moving.
- Keep your engine in good running order. Malfunctions in the engine electrical system, electric ignition system or fuel system could cause an extremely high three-way catalytic converter temperature.
- If the engine becomes difficult to start or stalls frequently, take your vehicle in for a check-up as soon as possible. Remember, your Lexus dealer knows your vehicle and its three-way catalytic converter system best.
- To ensure that the three-way catalytic converter and the entire emission control system operate properly, your vehicle must receive the periodic inspections required by the Lexus Maintenance Schedule. For scheduled maintenance information, refer to the separate "Owner's Manual Supplement/ Maintenance Schedule".

ENGINE EXHAUST CAUTION

A CAUTION

- Avoid inhaling the engine exhaust. It contains carbon monoxide, which is a colorless and odorless gas. It can cause unconsciousness or even death.
- Make sure the exhaust system has no holes or loose connections. The system should be checked from time to time. If you hit something, or notice a change in the sound of the exhaust, have the system checked immediately.
- Do not run the engine in a garage or enclosed area except for the time needed to drive the vehicle in or out. The exhaust gases cannot escape, making this a particularly dangerous situation.
- Do not remain for a long time in a parked vehicle with the engine running. If it is unavoidable, however, do so only in an unconfined area and adjust the heating or cooling system to force outside air into the vehicle.

- Keep the back door closed while driving. An open or unsealed back door may cause exhaust gases to be drawn into the vehicle.
- To allow proper operation of your vehicle's ventilation system, keep the inlet grilles in front of the windshield clear of snow, leaves, or other obstructions.
- If you smell exhaust fumes in the vehicle, drive with the windows open and the back door closed. Have the cause immediately located and corrected.

BEFORE STARTING THE ENGINE


1. Check the area around the vehicle before entering it.

2. Adjust seat position, seatback angle, head restraint height and steering wheel angle.

- 3. Adjust inside and outside rear view mirrors.
- 4. Lock all doors.
- 5. Fasten seat belts.

Remember to check that the service reminder indicators function when turning the key to "ON", and check the fuel gauge to see that you have sufficient fuel.

IGNITION SWITCH WITH STEERING LOCK

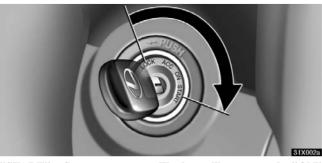

"START" – Starter motor on. The key will return to the "ON" position when released.

For starting tips, see page 172.

"ON" – Engine on and all accessories on.

This is the normal driving position.

NOTICE

Do not leave the key in the "ON" position if the engine is not running. The battery will discharge and the electronic ignition system could be damaged.

"ACC" - Accessories such as the radio operate, but the engine is off.

If you leave the key in the "ACC" or "LOCK" position and open the driver's door, a buzzer will remind you to remove the key.



"LOCK" – Engine is off and the steering wheel is locked. The ignition key can be removed only at this position.

To turn the key from "ACC" to the "LOCK" position, you must put the transmission selector lever in the "P" position.

Once you remove the key, the engine immobiliser system is automatically set. See "Engine immobiliser system" on page 10.

When starting the engine, the key may seem stuck at the "LOCK" position. To free it, first be sure the key is pushed all the way in, and then rock the steering wheel slightly while turning the key gently.

If, in an emergency, you must turn the engine off while the vehicle is moving, turn the key only to "ACC".

PARKING BRAKE



1 To set: Pull up the lever.

2 To release: Pull up the lever slightly, press the thumb button, then lower the lever.

Before leaving your vehicle, firmly apply the parking brake. For better holding power, first depress the brake pedal and hold it while setting the parking brake.

CAUTION

Before driving, make sure the parking brake is fully released and that the parking brake reminder light is off.

HOW TO START THE ENGINE

Before cranking

1. Apply the parking brake firmly.

2. Turn off unnecessary lights and accessories.

3. Put the selector lever in "P". If you need to restart the engine while the vehicle is moving, put the selector lever in "N". A starter safety device will prevent the starter from operating if the selector lever is in any drive position.

4. Depress the brake pedal and hold it to the floor until you are ready to drive off.

Starting the engine

Before starting the engine, be sure to follow the instructions in "Before cranking".

Normal starting procedure

The multiport fuel injection system/sequential multiport fuel injection system in your engine automatically controls the proper air-fuel mixture for starting. You can start a cold or hot engine as follows:

1. With your foot off the accelerator pedal, crank the engine by turning the key to "START". Release it when the engine starts.

2. After the engine runs for about 10 seconds, you are ready to drive.

If the weather is below freezing, let the engine warm up for a few minutes before driving. Do not leave the vehicle while the engine is warming up.

If the engine stalls ...

Simply restart it , using the correct procedure given in normal starting.

If the engine will not start


See "If your vehicle will not start" on page 220.

NOTICE

- Do not crank for more than 30 seconds at a time. This may overheat the starter and wiring systems.
- Do not race a cold engine.
- If the engine becomes difficult to start or stalls frequently, have the engine checked immediately.

AUTOMATIC TRANSMISSION

Your automatic transmission has a shift lock system to minimize the possibility of incorrect operation. This means you can only shift out of "P" position when the brake pedal is depressed (with the ignition switch in "ON" position and the lock release button pressed in.) (\star)

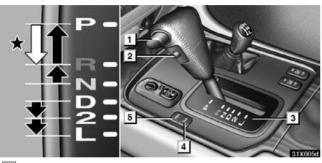

1 Lock release button

With the brake pedal depressed, shift while holding the lock release button in. (The ignition switch must be in the "ON" position)



Shift while holding the lock release button in.

2 Overdrive switch

For selecting either a three-speed or four-speed transmission.

When the cruise control is being used even if you downshift the transmission by turning off the overdrive switch, engine braking will not be applied because the cruise control is not cancelled. For ways to decrease the vehicle speed, see "Cruise control" on page 184.

3 Shift position indicator

The shift position is also displayed on the instrument cluster.

P: Parking, engine starting and key removal position

R: Reverse position

N: Neutral position

- **D**: Normal driving position (Shifting into overdrive possible)
- **2:** Position for engine braking
- L: Position for stronger engine braking than that in "2" position
- **4** Second start mode selector switch

For selecting either second start mode or normal driving mode.

5 Driving pattern selector switch

For selecting a driving pattern suited to existing driving condition.

Correct use of the automatic transmission is explained in the following parts.

- (a) Normal driving
- (b) Using engine braking
- (c) Using the "2" and "L" positions
- (d) Backing up
- (e) Parking
- (f) Good driving practice
- (g) Rocking your vehicle if stuck
- (h) If you cannot shift the selector lever
- (i) If the "O/D OFF" indicator light flashes
- (j) Driving in "2nd STRT" (second start) mode


(a) Normal driving



▶ 1 "P" (Park) position 2 "N" (Neutral) position

1. Start the engine as instructed in "How to start the engine" on page 172.

The transmission must be in "P" or "N". The engine will not start in any drive position even if the ignition key is turned to "START".

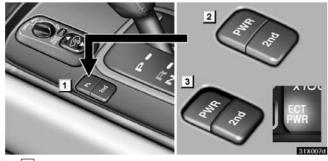


Driving pattern selector switch
 Normal position 3 Power position

2. Set the driving pattern selector switch to the "Normal" position.

Your transmission has a driving pattern selector switch which allows you to select either "Normal" or "Power" to suit your driving condition. For ordinary driving, Lexus recommends that you use the "Normal" position to improve fuel economy.

3. For more powerful acceleration and sporty driving, use the "Power" position.

In the "Power" position, the "ECT PWR" light in the instrument cluster is on and the transmission is shifted up at higher vehicle speeds and shifted down more responsively than in the "Normal" position.

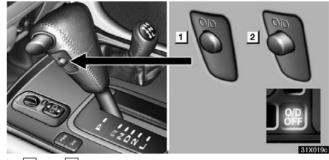

▶ 1 On 2 Off

4. Set the overdrive switch to the ON position.

Always set the overdrive switch to the ON position to improve fuel economy and quiet driving. (See "(b) Using engine braking" and "(f) Good driving practice" for exceptions.)



► 1 Brake pedal 2 "D" (Drive) position

5. With your foot holding down the brake pedal, shift the selector lever to "D".

Always use the "D" position to improve fuel economy and quiet driving. Only in this position, shifting into the overdrive gear is possible. However, while the engine coolant temperature is low, the transmission will not shift into the overdrive gear even in the "D" position. (See "(b) Using engine braking" and "(f) Good driving practice" for exceptions.)

CAUTION

Never put your foot on the accelerator pedal while shifting.

6. Release the parking brake and brake pedal. Depress the accelerator pedal slowly for smooth starting.


In normal cruising, the vehicle will start in the first gear and automatically shift to the most suitable gear for the running conditions.

In "D" position, the automatic transmission system will select the most suitable gear for the running conditions such as hill climbing, hard towing, etc.

If you need to accelerate rapidly while driving, depress the accelerator pedal to the full throttle position. This provides more acceleration by automatically downshifting the transmission to the next lower gear or beyond, depending on the vehicle speed.

If engine braking is needed, such as in descending a long hill, see "(b) Using engine braking".

(b) Using engine braking

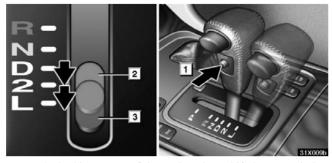

To use the braking power of the engine, downshift the transmission in the way described below:

1 Turn off the overdrive switch. The "O/D OFF" indicator light will come on and the transmission will downshift to the third gear.

When the cruise control is being used, even if you downshift the transmission by turning off the overdrive switch, engine braking will not be applied because the cruise control is not cancelled. For ways to decrease the vehicle speed, see "Cruise control" on page 184.

2 Shift into the "2" position. The transmission will downshift to the second gear when the vehicle speed is or becomes lower than the speed listed below and more powerful engine braking will be obtained.

Transfer	"H"	112 km/h	(69 mph)
	"L"	39 km/h	(25 mph)

3 Shift into the "L" position. The transmission will downshift to the first gear when the vehicle speed is or becomes lower than the speed listed below and maximum engine braking will be applied.

Transfer "H" 54 km/h (34 mph) "L" 11 km/h (7 mph)

CAUTION

Be careful when downshifting on a slippery surface. The abrupt change in engine speed could cause the vehicle to spin or skid.

3


(c) Using the "2" and "L" positions

The "2" and "L" positions are used for strong engine braking as described previously.


With the selector lever in "2" or "L", you can start the vehicle in motion as with the lever in "D".

With the selector lever in "2", the vehicle will start in the first gear and automatically shift to the second gear.

With the selector lever in "L", the transmission is engaged in the first gear.

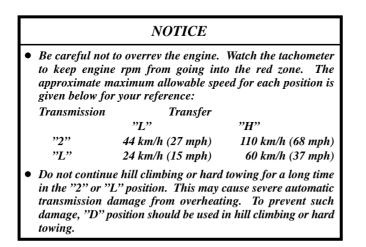

(d) Backing up

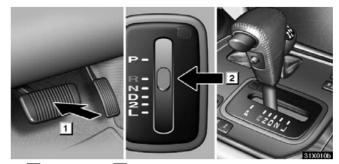

▶ 1 Brake pedal 2 "R" (Reverse) position

1. Bring the vehicle to a complete stop.


2. With the brake pedal held down with your foot, shift the selector lever to the "R" position.

NOTICE

Never shift into reverse while the vehicle is moving.

When you are backing up, you can adjust the outside rear view mirror on the passenger's side down quickly. For details, see page 89.

(e) Parking

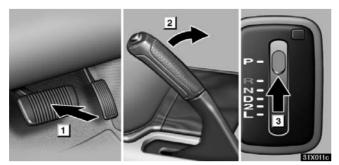

- ▶ 1 Brake pedal 2 Parking brake lever 3 "P" (Park) position
- 1. Bring the vehicle to a complete stop.
- 2. Apply the parking brake lever fully.

3. With the brake pedal held down with your foot, shift the selector lever to the "P" position.

CAUTION

While the vehicle is moving, never attempt to move the selector lever into "P" under any circumstances. Serious mechanical damage and loss of vehicle control may result.

(f) Good driving practice

- If the transmission repeatedly upshifts and downshifts between the third and overdrive gears when climbing a gentle slope, turn off the overdrive switch. Be sure to turn the switch on immediately after climbing the slope.
- When towing a trailer, in order to maintain efficient engine braking and electrical charging performance, do not use overdrive.

CAUTION

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

3

NOTICE

Do not hold the vehicle on an upgrade with the accelerator pedal. This can cause the transmission to overheat. Always use the brake pedal or parking brake.

(g) Rocking your vehicle if stuck

CAUTION

If your vehicle becomes stuck in snow, mud, sand, etc., then you may attempt to rock the vehicle free by moving it forward and backward. Do not attempt this procedure if people or objects are anywhere near the vehicle. During the rocking operation the vehicle may suddenly move forward or back as it becomes un-stuck, causing injury or damage to nearby people or objects.

NOTICE

If you rock your vehicle, observe the following precautions to prevent damage to the transmission and other parts.

- Do not depress the accelerator pedal while shifting the selector lever or before the transmission is completely shifted to forward or reverse gear.
- Do not race the engine and avoid spinning the wheels.
- If your vehicle remains stuck after rocking the vehicle several times, consider other ways such as towing.

(h) If you cannot shift the selector lever

If you cannot shift the selector lever even though the brake pedal is depressed, use the shift lock override button. For instructions, see "If you cannot shift automatic transmission selector lever" on page 238.

(i) If the "O/D OFF" indicator light flashes

If the "O/D OFF" indicator light flashes, contact your Lexus dealer as soon as possible. There may be trouble in the transmission system.

(j) Driving in "2nd STRT" (second start) mode



In the "2nd STRT" (second start) mode, the transmission system shifts up from second gear. Use this mode when starting your vehicle in sand, mud, ice or snow.

To set the "2nd STRT" mode, push the "2nd" switch. In the "2nd STRT" mode, the "2nd STRT" indicator light comes on. To cancel the "2nd STRT" mode, push the "2nd" switch again.

The "PWR" mode is automatically cancelled when you push the "2nd" switch.

FOUR-WHEEL DRIVE SYSTEM

(a) Four-wheel drive control



Use the four-wheel drive control lever and center differential lock button to select the following transfer and center differential modes.

The "H" position of the four–wheel drive control lever provides either lock or unlock mode of the center differential depending on the center differential lock button position. **"H"** (high speed position, center differential unlocked): Lever at "H", center differential lock button left out

Use this for normal driving on all types of roads, from dry hard–surfaced roads to wet, icy or snow–covered roads. This position gives greater economy, quietest ride, least wear and better vehicle control.

"H" (high speed position, center differential locked): Lever at "H", center differential lock button pushed in

Use this for greater traction when you experience a loss of power, such as wheel slipping, in the center differential unlock mode.

"N" (neutral position): Lever at "N"

No power is delivered to the wheels. The vehicle must be stopped.

"L" (low speed position, center differential locked): Lever at "L"

Use this for maximum power and traction. Use "L" for hard pulling in situations the vehicle cannot negotiate even in the "H" (lock) mode.

The indicator light tells when the differential lock is engaged. Note that the differential is not still locked as long as the indicator light remains off.

If the indicator light does not come on when the lever is in the "L" position, have your vehicle checked by your Lexus dealer as soon as possible.

See "(b) Shifting procedure" for further instructions.

In this position, the anti-lock brake system does not operate. See "Brake system" on page 196.

(b) Shifting procedure

To shift between unlock and lock modes in "H", push the center differential lock button.

To shift between "H" and "L", stop the vehicle, put the transmission into "N" and move the four–wheel drive control lever.

CAUTION

Never move the four–wheel drive control lever if wheels are slipping. Stop the slipping or spinning before shifting.

NOTICE

For normal driving on dry and hard surface roads, unlock the center differential. To prevent damage to the center differential lock system, do not push the center differential lock button when the vehicle is cornering or when its wheels are spinning freely off the ground. If the indicator light does not go off when unlocking the center differential, drive straight ahead while accelerating or decelerating, or drive in reverse.

REAR DIFFERENTIAL LOCK SYSTEM



The rear differential lock system is provided for use only when wheel spinning occurs in a ditch or on a slippery or ragged surface.

This differential lock system is effective in case one of the rear wheels is spinning.

Before using the rear differential lock system, first shift the four–wheel drive control into "L". If this has no effect, additionally use the rear differential lock system also.

CAUTION

Do not use the rear differential lock in the conditions other than above. Large steering effort and careful cornering control will be required.



►Lock rear differential

To lock the rear differential, push and turn the switch clockwise until it clicks.

Be sure to stop the wheels before locking the differential.

For easy locking, turn the lock switch and gently depress the accelerator pedal.

The indicator light will blink when the switch is turned on. Wait a few seconds for the system to complete operation. After the differential is locked, the light will stop blinking and remain on.

The anti-lock brake system does not operate when the rear differential is locked. It is normal operation for the "ABS" warning light to be on at this time.

CAUTION

- Do not lock the differential until the wheels have stopped spinning. Otherwise, the vehicle may move in an unexpected direction when the differential lock is engaged, resulting in an accident. This may also lead to possible damage to differential lock component parts.
- Do not drive over 8 km/h (5 mph) when the differential is locked.

To unlock the differential, turn the switch fully counterclockwise.

Unlock the differential as soon as the vehicle moves out.

For easy unlocking, slightly turn the steering wheel in either direction while the vehicle is moving.

When the differential lock is disengaged, the indicator light will go out.

The differential will also unlock if you shift the four–wheel drive control lever to "H". Never forget to turn off the switch after using this feature.

To check the indicator bulb, turn the ignition key to the "ON" position, but do not start the engine.

CAUTION

Do not keep driving with the differential lock switch on.

Limited-slip differential

Some Lexus vehicles are equipped with a limited–slip differential. If one rear wheel begins to spin, the limited–slip differential is designed to aid traction by automatically transmitting driving force to the other rear wheel. If you are not sure whether your vehicle is equipped with one, you can ask you Lexus dealer.

CAUTION

Do not start or run the engine while your vehicle is supported by a jack. The vehicle could be driven off the jack and could pose a danger or result in serious injury.

NOTICE

Use only a spare tire of the same size, construction and load capacity as the original tires on your Lexus because damage to the limited-slip differential could possibly occur with another tire type.

CRUISE CONTROL

The cruise control allows you to cruise the vehicle at a desired speed over 40 km/h (25 mph) with your foot off the accelerator pedal.

Your cruising speed can be maintained although a slight speed change may occur when driving up or down a gradient, within the limits of engine performance. On steeper hills, a great speed change will occur so it is better to drive without the cruise control.

When the cruise control is on, the driving pattern of the automatic transmission is fixed in the normal position, regardless of the position of the selector switch.

CAUTION

- To help maintain maximum control of your vehicle, do not use the cruise control when driving in heavy or varying traffic, or on slippery (rainy, icy or snow-covered) or winding roads.
- Avoid vehicle speed increases when driving downhill. If the vehicle speed is too fast in relation to the cruise control set speed, cancel the cruise control then downshift the transmission to use engine braking to slow down.

Turning on the system



To operate the cruise control, push the main switch. This turns the system on. The indicator light in the instrument cluster shows that you can now set your desired cruising speed. Another push on the switch will turn the system completely off.

When the ignition key is turned off, the main switch is also automatically turned off. To use the cruise control again, push the main switch again to turn it on.

CAUTION

To avoid accidental cruise control engagement, keep the main switch off when not using the cruise control.

Setting at a desired speed



3

The transmission must be in "D" before you set the cruise control speed.

Bring the vehicle to the desired speed, press the control lever downward in the "SET/COAST" direction and release it. This sets the vehicle at that speed. Now you may take your foot off the accelerator pedal. If you need acceleration – for example, when passing – depress the accelerator pedal enough for the vehicle to exceed the set speed. When you release the accelerator pedal, the vehicle will return to the speed set prior to the acceleration.

Cancelling the preset speed

You can cancel the preset speed by either of the following:

- a. Pulling the control lever in the "CANCEL" direction.
- b. Depressing the brake pedal.

If the vehicle speed falls below about 40 km/h (25 mph), the preset speed will be automatically cancelled.

If the vehicle speed drops 16 km/h (10 mph) below the preset speed, the preset speed will also automatically be cancelled.

If the preset speed automatically cancels out for other than these reasons, have your vehicle checked by your Lexus dealer at the earliest opportunity.

Resetting to a faster speed

Press the control lever upward in the "RES/ACC" direction and hold it. Release the lever when the desired speed is attained. While the lever is held upward, the vehicle will gradually gain speed.

When the difference between the actual vehicle speed and the set speed is less than 5 km/h (3 mph), the set speed can be increased 1.6 km/h (1 mph) each time by pressing the control lever upward in the "RES/ACC" direction quickly within 0.6 seconds.

However, a quicker way to reset is to accelerate the vehicle and then press the control lever downward in the "SET/COAST" direction.

Resetting to a slower speed

Press the control lever downward in the "SET/COAST" direction and hold it. Release the lever when the desired speed is attained. While the lever is held downward, the vehicle speed will gradually decrease.

When the difference between the actual vehicle speed and the set speed is less than 5 km/h (3 mph), the set speed can be lowered 1.6 km/h (1 mph) each time by pressing the control lever downward in the "SET/COAST" direction quickly within 0.6 seconds.

However, a quicker way to reset is to depress the brake pedal and then press the control lever downward in the "SET/COAST" direction.

Even if you turn off the overdrive switch with the cruise control on, engine braking will not be applied because the cruise control is not cancelled. To decrease the vehicle speed, reset to a slower speed with the cruise control lever or depress the brake pedal. If you use the brake pedal, cruise control is cancelled.

Resuming the preset speed

If the preset speed is cancelled by pulling the control lever or by depressing the brake pedal, pushing the lever up in the "RES/ACC" direction will restore the speed set prior to cancellation. However, once the vehicle speed falls below about 40 km/h (25 mph), the preset speed will not be resumed.

Cruise control failure warning

If the "CRUISE" indicator light in the instrument cluster flashes when using the cruise control, push the main switch to turn the system off and then push it again to turn it on.

If any of the following conditions then occurs, there is some trouble in the cruise control system.

- The indicator light does not come on.
- The indicator light flashes again.
- The indicator light goes out after it comes on.

If this is the case, contact your Lexus dealer and have your Lexus inspected.

ACTIVE HEIGHT CONTROL SUSPENSION (AHC)

This active height control suspension controls the vehicle height depending on the vehicle driving condition. Select your desired height among the "HI" (high), "N" (normal) and "LO" (low) modes with the height select switch.



(a) Vehicle height modes

• "HI" (high) mode

The vehicle height is about 40 mm (1.6 in.) higher at front and about 50 mm (2.0 in.) higher at rear than the normal mode height.

This mode is suitable when driving on bumpy roads and through water.

This mode is available when the vehicle speed is under about 30 km/h (19 mph).

A CAUTION

The "HI" (high) or "Extra high" mode should be used for severe off-road driving condition only. Because the vehicle's center of gravity is higher in this setting, the vehicle may become unstable when turning abruptly, resulting in an unexpected accident.

When the four–wheel drive control lever is put at "L", this mode may change to the extra high mode automatically in accordance with the driving condition.

When the vehicle exceeds the specified vehicle speed, the vehicle height changes to the following:

With the four-wheel drive control lever at "H" and at the vehicle speed of 30 km/h (19 mph) or over, the normal mode is automatically selected.

With the four-wheel drive control lever at "L" and at the vehicle speed of 50 km/h (30 mph) or over, the vehicle height becomes automatically about 25 mm (1.0 in.) higher than the normal mode height. If the vehicle speed is lowered about 20 km/h (12 mph) or less after that, the high mode automatically resumes.

Extra high mode

This mode is automatically selected from the high mode with the four–wheel drive control lever placed in "L" position depending on the vehicle driving condition.

If the vehicle becomes stuck, the vehicle height rises automatically to the extra high mode (slightly higher or at about 70 mm (2.8 in.) higher than normal mode height). In the following cases, the extra high mode changes to the high mode automatically:

- When your vehicle is no longer stuck.
- When the four–wheel drive control lever is put in a position other than "L".

When you push the height select switch on the " $\mathbf{\nabla}$ " side in the extra high mode, the normal mode is selected.

Since the extra high mode is automatically selected, you cannot select this mode on purpose with the height select switch.

• "N" (normal) mode

The vehicle height in this mode is standard.

This mode is suitable for ordinary driving.

• "LO" (low) mode

The vehicle height is about 50 mm (2.0 in.) lower at front and about 40 mm (1.6 in.) lower at rear than the normal mode height.

This mode allows you easy access to the vehicle (getting in and out) and easy loading and unloading operation.

This mode is available when the vehicle is stopped. When you start the vehicle, the normal mode is automatically selected.

NOTICE

The normal mode is automatically selected when the vehicle begins to move in the low mode. So be careful when you drive in any place where the overhead height is limited.

(b) Automatic leveling function

Regardless of the number of occupants or the luggage loading condition, the vehicle height is always automatically adjusted to a fixed height in any mode.

However, the vehicle height cannot be raised if the vehicle load exceeds the limits. (See page 190.)

(c) Vehicle height mode changing condition

To change the vehicle height, it is necessary to meet the following 3 conditions.

- The engine should be running.
- All the side doors and back door should be closed.
- The height control "OFF" indicator light should go off.

When selecting a mode with the four-wheel drive control lever at "H", there is a vehicle speed limit. Refer to the following table.


\bigcirc = The mode can be	selected.
\Box = The mode cannot be	selected.

	Low mode	Normal mode	High mode
At vehicle stoppage	0	0	0
Under about 30 km/h (19 mph)		0	0
About 30 km/h (19 mph) or over		0	

In the following cases the active height control suspension does not operate even if the above conditions are all met.

- The brake pedal has been depressed for longer than about 5 seconds with the vehicle stopped.
- The suspension fluid temperature is lower than -30°C (-22°F). If the engine is warmed up, the suspension fluid temperature will be raised as the inside of the engine compartment becomes warmer. Then the active height control suspension becomes operable.
- Driving on bumpy roads, which may cause the suspension to fully elongate.
- The steering wheel is operated abruptly more than 3/4 turns with center differential lock system activated.

(d) Vehicle height adjustment

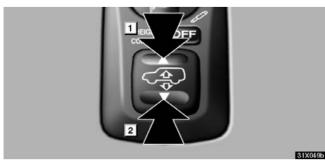

▶ 1 Higher 2 Lower

To change the mode, push the height select switch on either side of " \blacktriangle " and " \blacktriangledown ".

The height control indicator light indicates which mode is selected. (See page 192.)

NOTICE

• If you change the vehicle height frequently, the pump may overheat. To prevent this, the active height control suspension should be stopped temporarily for a minute between selections. Operate it again.

- Before you lower the vehicle height with the height select switch, check under the vehicle to make sure that nothing to damage the vehicle or no one to be injured is there and the underbody of the vehicle does not touch the ground.
- After unloading, the height of a vehicle equipped with the active height control suspension becomes slightly higher than the normal vehicle height. Take sufficient care where the overhead height is restricted.

The vehicle height cannot be raised if the vehicle load exceeds the following limits:

- Up to 4 occupants* plus about 300 kg (661 lb.) in the normal mode
- Up to 4 occupants* plus about 170 kg (375 lb.) in the high mode

*About 68 kg (150 lb.) for a person

If the above load capacity is exceeded, the desired vehicle height may not be obtained even if the height select switch is pushed. (If the vehicle height cannot be raised in the normal mode and the height control indicator indicates "LO", this is because the vehicle is loaded too heavily. Under these conditions, drive your vehicle with due care.)

If the vehicle height cannot be raised even after unloading, push the height select switch on the " ∇ " side and then on the " \triangle " side. If this does not work, turn off the ignition once and then turn on. Operate the select switch again.

• Selecting the high mode:

Push the height select switch on the " \blacktriangle " side when the vehicle speed is under about 30 km/h (19 mph).

To change the normal mode to high, push the switch once.

To change the low mode to high, push the switch twice. It takes about 30 seconds until the low mode changes to the high mode.

• Selecting the normal mode:

To change the high mode to normal, push the height select switch on the " $\mathbf{\nabla}$ " side once.

To change the low mode to normal, push the height select switch on the " \blacktriangle " side once.

• Selecting the low mode:

Push the height select switch on the " $\mathbf{\nabla}$ " side while the vehicle is stopped.

To change the high mode to low, push the switch twice.

To change the normal mode to low, push the switch once.

NOTICE

Do not select the low mode on bumpy roads. If the underbody of the vehicle touches the rugged road surface, the vehicle may be damaged.

Even if the engine is stopped while the vehicle height is being lowered, the operation continues for up to 12 seconds.

(e) Turning off the active height control suspension



3

To turn off the active height control suspension with the vehicle stopped, push the height control switch. The height control "OFF" indicator light comes on and the vehicle height is fixed in the same mode as the height control switch is pushed.

This status is memorized in the system even after the engine is stopped.

If you push the switch again, the height control "OFF" indicator light goes out and the active height control suspension is turned on.

NOTICE

- When jacking up or installing tire chains, be sure to turn off the active height control suspension and stop the engine. Otherwise, the vehicle height may change because of the automatic leveling function, resulting in an unexpected accident.
- If your vehicle must be towed, put the vehicle height in the normal mode and turn off the active height control suspension. Otherwise, the vehicle height may change because of the automatic leveling function, resulting in an unexpected accident.
- If your vehicle gets ditched, turn off the active height control suspension with the height control switch. Otherwise, the vehicle height may change because of the automatic leveling function, resulting in an unexpected accident.

Even after the active height control suspension is turned off with the height control switch, if the vehicle speed exceeds 30 km (18 mph), the active height control automatically selects the normal mode.


(f) Height control indicator lights



2 Height control "OFF" indicator light

When the ignition switch is turned on, all the indicator lights come on. The indicator light showing the present mode only remains on and all other lights go off after a few seconds. This means the system operates correctly.

If you change the vehicle height mode, the indicator lights change as follows:

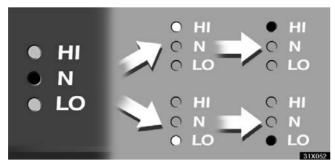

► : Blinking •: Illuminating

When changing the vehicle height from the normal mode to high:

1. The "N" (normal) mode indicator light goes off and the "HI" (high) mode indicator light blinks.

2. After the vehicle height control reaches the high mode, the high mode indicator light remains on.

With the active height control suspension turned off, if you operate the height select switch or the vehicle height is changing depending on the vehicle speed, the vehicle height control enters the ready mode. In this case, the height control indicator lights change as follows:

1. The present mode indicator light comes on and at the same time the ready mode indicator light blinks.

2. When the active height control suspension is turned on, the present mode indicator light goes off and the ready mode indicator light blinks. (The vehicle height changes.)

3. After the vehicle height has changed completely, the changed

STARTING AND DRIVING

mode indicator light stays on.

If the vehicle is loaded heavily, the vehicle height cannot be raised even if the height select switch is operated. If the underbody of the vehicle has touched the surface on bumpy roads, the vehicle height cannot be lowered with the height select switch. The height control indicator lights change as follows:

1. The present mode indicator light goes off and the selected mode indicator light blinks.

2. The selected mode indicator light goes off. (The vehicle height does not change.) The present mode indicator light comes on again.

Height control "OFF" indicator light: When the ignition switch is turned on, this light comes on. If it goes out after a few seconds, the active height control suspension operates correctly. If you push the height control switch, the active height control is turned off. The height control "OFF" indicator light comes on.

In the following cases, there is a problem somewhere in your active height control suspension. Although there is no problem to continue normal driving, have the active height control suspension checked by your Lexus dealer as soon as possible.

- The height control "OFF" indicator light does not come on when the ignition switch is turned on.
- The height control "OFF" indicator light blinks.

Operation in cold weather

The active height control suspension does not operate in cold weather when the suspension fluid temperature drops below $-30^{\circ}C$ ($-22^{\circ}F$).

In this case, operating the height select switch does not change the vehicle height. The vehicle height control enters the ready mode and the selected height control indicator light blinks. The active height control becomes operable if the engine is warmed up with the suspension fluid temperature being raised within normal operating limits. The vehicle changes to the selected height when the vehicle height control is in the ready mode.

When the suspension fluid temperature is around -30° C (-22° F), the vehicle height cannot be raised even within the available load capacity. After warming up the engine, push the control switch on the " \checkmark " side once and then on the " \checkmark " side to select the desired vehicle height.

It takes longer to change the vehicle height when the suspension fluid temperature drops below $-15^{\circ}C$ (5°F).

(g) Parking and stopping tips

If you immediately stop the engine to park the vehicle after off-road driving, the vehicle height is lowered slightly as the vehicle becomes cool. When parking, make sure there is nothing that will be in contact with the underbody of the vehicle. When you start the engine, the vehicle returns to the previous height.

If you park the vehicle for a long time, the vehicle height may gradually lower. When parking for a long time, make sure there is nothing that will come in contact with the underbody of the vehicle. When you start the engine, the vehicle returns to the previous height.

If you stop the engine, the vehicle height may change in accordance with the change in the temperature. When you start the engine, the vehicle returns to the previous height.

(h) Installing or removing heavy equipment

If you install or remove heavy equipment exceeding 15 kg (33 lb.), the front torsion bar and rear coil spring should be adjusted. Consult your Lexus dealer.


(i) Active height control failure warning

If there is a problem somewhere in the active height control suspension, the normal mode is automatically selected. If this occurs, the height control "OFF" indicator light blinks and the vehicle height control cannot be activated until the malfunction is corrected.

Stop the engine and start it again. If the height control "OFF" indicator light goes out, the active height control suspension returns to normal. If the height control "OFF" indicator blinks again, bring your vehicle to your Lexus dealer as soon as possible and have it checked.

ADAPTIVE VARIABLE SUSPENSION (AVS)

This adaptive variable suspension adjusts the damping effect on the shock absorbers with the damping mode select switch. Select one of the 4 modes which is suited to the driving conditions with the damping mode select switch to provide good riding comfort and stability.

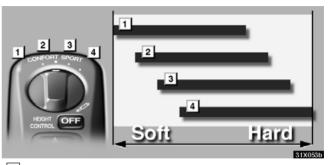

1 For driving on a bumpy road

2 For ordinary driving such as in the city traffic

3 For moderate high speed driving

4 For sporty type driving such as on winding mountain roads and high speed driving

We recommend you to select the mode $\boxed{2}$ for ordinary driving. The damping effect will be changed automatically to provide good riding comfort.

When your vehicle is loaded heavily or you are driving in an unpaved road, the mode 3 or 4 will be recommended. To provide good vehicle stability, the damping effect will be harder than for ordinary driving mode.

With the four–wheel drive control lever at "L", the damping effect suitable for off–road driving will be provided.

BRAKE SYSTEM

This brake system has 2 independent hydraulic circuits. If either circuit should fail, the other will still work. However, the pedal will be harder to press, and your stopping distance will be longer. Also, the brake system warning light may come on.

CAUTION

Do not drive your vehicle with only a single brake system. Have your brakes fixed immediately.

Brake booster

The brake booster uses brake fluid pressurized by the pump to power–assist the brakes. If the brake booster fails during driving, the brake system warning light comes on and buzzer sounds continuously. In this case, the brakes may not work properly. If they do not work well, depress the brake pedal firmly. If the brake system warning light comes on, immediately stop your vehicle and contact your Lexus dealer.

The brake system warning light may come on for about 60 seconds after the engine is started. It is normal if the light goes out after a while.

Depressing the brake pedal repeatedly may turn on the brake system warning light and buzzer. It is normal if the light goes out and the buzzer stops sounding after a few seconds.

You may hear a small sound in the engine compartment after the engine is started or the brake pedal is depressed repeatedly. This is a pump pulsating sound of the brake system, and it is not a malfunction.

CAUTION

- Do not pump the brake pedal if the engine stalls. Each push on the pedal uses up your brake fluid pressure reserve.
- Even if the power assist is completely lost, the brakes will still work. But you will have to push the pedal hard – much harder than normal. And your braking distance will be longer.

Anti-lock brake system

The anti-lock brake system is designed to automatically help prevent lock-up of the wheels during a sudden brake or braking on slippery road surfaces. This assists in providing directional stability and steering performance of the vehicle under these circumstances.

The anti–lock brake system becomes operative after the vehicle has accelerated to a speed in excess of approximately 10 km/h (6 mph). It stops operating when the vehicle decelerates to a speed below approximately 5 km/h (3 mph).

You may hear a sound in the engine compartment for a few seconds when the engine is started or just after the vehicle is started. This means that the anti–lock brake system is in the self–check mode, and does not indicate a malfunction.

Effective way to press the ABS brake pedal: When the anti-lock brake system function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake. This will result in reduced braking performance.

The brake pedal pulsation caused by the anti–lock brake system may indicate hazardous road surface conditions. Although the anti–lock brake system assists in providing vehicle control, it is still important to drive with all due care, because the anti–lock brake system cannot overcome the laws of physics that act on your vehicle:

• Braking capability is dependent on tire friction with the road surface.

- Even though the anti-lock brake system is operating, a driver cannot maintain full control on certain slippery road surfaces, when cornering at high speeds, or in violent maneuvers.
- Avoid high speeds on wet roads. The anti-lock brake system cannot eliminate the risk of hydroplaning and loss of tire friction.

Always maintain a safe distance from the vehicle in front of you. Compared with vehicles not fitted with an anti–lock brake system, your vehicle may require a longer stopping distance in the following cases:

- Driving on rough, gravel or snow-covered roads.
- Driving with tire chains installed.
- Driving on roads where the road surface is pitted or has other differences in surface height.

CAUTION

Do not use tires other than the manufacturer's designated tires, and do not mix tires or wheels of different sizes. You may prevent the anti-lock brake system from operating at full effectiveness.

"ABS" warning light



This light comes on when the ignition key is turned to the "ON" position. After about a few seconds, the light will go off.

When the light is on with the rear differential locked, it indicates the anti–lock brake system will not operate.

The light may stay on for about 60 seconds after the engine is started. It is normal if it goes out after a while.

Depressing the brake pedal repeatedly may turn on the "ABS" warning light. It is normal if the light goes out after a few seconds.

If either of the following conditions occurs, this indicates a malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come on as described above, or remains on.
- The light comes on while driving with the rear differential unlocked.
- The light does not come on with the rear differential locked.
- The system comes into operation with the rear differential locked.

Even if the anti-lock brake system should fail, the brake system will still operate conventionally. But when the "ABS" warning light is on (and the brake system warning light is off), anti-lock brake system is not assisting brake performance so that the wheels could lock up during a sudden brake or braking on slippery road surfaces. Have your vehicle checked by your Lexus dealer as soon as possible.

CAUTION

While the "ABS" warning light is on, if either of the following conditions occurs, immediately stop your vehicle at a safe place and contact your Lexus dealer.

- The brake system warning light stays on even with the parking brake being released.
- The brake system warning light and buzzer come on.

In either case, the brakes may not work properly. If they do not work well, depress the brake pedal firmly.


Drum-in-disc type parking brake system

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drums are replaced.

Have your Lexus dealer perform the bedding-down.

STARTING AND DRIVING

BRAKE PAD WEAR LIMIT INDICATORS

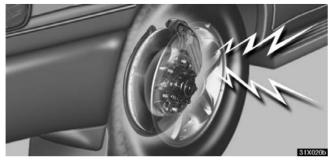

The brake pad wear limit indicators on your disc brakes give a warning noise when the brake pads are worn to the extent that replacement is required.

If you hear a squealing or scraping noise while driving, have the brake pads checked and replaced by your Lexus dealer as soon as possible. Expensive rotor damage can result if the pads are not replaced when needed.

TYPES OF TIRES

Determine what kind of tires your vehicle is originally equipped with.

1. Summer tires

Summer tires are high–speed capability tires best suited to highway driving under dry conditions.

Since summer tires do not have the same traction performance as snow tires, summer tires are inadequate for driving on snow-covered or icy roads. For driving on snow-covered or icy roads, we recommend using snow tires. If installing snow tires, be sure to replace all four tires.

2. All season tires

All season tires are designed to provide better traction in snow and to be adequate for driving in most winter conditions, as well as for use all year round.

All season tires, however, do not have adequate traction performance compared with snow tires in heavy or loose snow. Also, all season tires fall short in acceleration and handling performance compared with summer tires in highway driving.

STARTING AND DRIVING

A CAUTION

- Do not mix summer and all season tires on your vehicle as this can cause dangerous handling characteristics, resulting in loss of control.
- Do not use tires other than the manufacturer's designated tires, and never mix tires or wheels of the sizes different from the originals.

SECTION 3 – 2

STARTING AND DRIVING

Driving tips

Off-road vehicle precautions	204
Break-in period	205
Operation in foreign countries	205
Tips for driving in various conditions	205
Off-road driving precautions	207
Winter driving tips	208
Trailer towing	209
How to save fuel and make your vehicle	
last longer	217

OFF-ROAD VEHICLE PRECAUTIONS



This vehicle is one of the class of vehicles which have higher ground clearance and narrower tread in relation to the height of their center of gravity to make them capable of performing in a wide variety of off-road applications. Specific design characteristics give it a higher center of gravity than ordinary cars. An advantage of the higher ground clearance is a better view of the road allowing you to anticipate problems. It is not designed for cornering at the same speeds as conventional two-wheel drive vehicles any more than low-slung sports cars are designed to perform satisfactorily under off-road conditions.

A CAUTION

Always observe the following precautions to minimize the risk of serious personal injury or damage to your vehicle:

- Avoid sharp turns or abrupt maneuvers, if at all possible. As with other vehicles of this type, failure to operate this vehicle correctly may result in loss of control or vehicle rollover.
- Avoid loading any items on the roof that will make the center of gravity even higher.
- Always slow down in gusty crosswinds. Because of its high center of gravity, your vehicle is more sensitive to side winds than an ordinary passenger car. Slowing down will allow you to have much better control.
- Do not drive horizontally across steep slopes. Driving straight up or straight down is preferred. Your vehicle (or any similar off-road vehicle) can tip over sideways much more easily than forward or backward.
- When driving off-road or in rugged terrain, do not drive at excessive speeds, jump the vehicle, or strike objects, etc. This may cause loss of control or vehicle rollover. You are also risking expensive damage to your vehicle's suspension and chassis.

BREAK-IN PERIOD

Drive gently and avoid high speeds.

You need not follow a break-in schedule with your new Lexus. But following a few simple tips for the first 1600 km (1000 miles) can add to the future economy and long life of your vehicle:

- Do not drive over 88 km/h (55 mph).
- Avoid overrevving. Maintain engine speed between 2000 and 4000 rpm.
- Avoid full-throttle starts.
- Try to avoid hard stops during the first 300 km (200 miles).
- Do not drive for a long time at any single speed, either fast or slow.
- Do not tow a trailer during the first 800 km (500 miles).

OPERATION IN FOREIGN COUNTRIES

If you plan to drive your Lexus in another country ...

First, comply with the vehicle registration laws.

Second, confirm the availability of the correct fuel (unleaded and minimum octane rating).

TIPS FOR DRIVING IN VARIOUS CONDITIONS

- Always slow down in gusty crosswinds. This will allow you much better control.
- Drive slowly onto curbs and, if possible, at a right angle. Avoid driving onto high, sharp–edged objects and other road hazards. Failure to do so can lead to severe tire damage resulting in tire bursts.
- When parking on a hill, turn the front wheels until they touch the curb so that the vehicle will not roll. Apply the parking brake, and place the transmission in "P". If necessary, block the wheels.
- Washing your vehicle or driving through deep water may get the brakes wet. To see whether they are wet, check that there is no traffic near you and then press the pedal lightly. If you do not feel a normal braking force, the brakes are probably wet. To dry them, drive the vehicle cautiously while lightly pressing the brake pedal with the parking brake applied. If they still do not work safely, pull to the side of the road and call a Lexus dealer for assistance.

🔨 CAUTION

- Before driving off, make sure the parking brake is fully released and that the parking brake reminder light is off.
- Do not leave your vehicle unattended while the engine is running.
- Do not rest your foot on the brake pedal while driving. It can cause dangerous overheating, needless wear, and poor fuel economy.
- To drive down a long or steep hill, reduce your speed and downshift. Remember, if you ride the brakes excessively, they may overheat and not work properly. See page 177.
- Be careful when accelerating, upshifting, downshifting or braking on a slippery surface. The abrupt change in engine speed, such as sudden acceleration or engine braking, could cause the vehicle to spin or skid.
- Do not drive in excess of the speed limit. Even if the legal speed limit permits it, do not drive over 140 km/h (85 mph) unless your vehicle has high-speed capability tires. Driving over 140 km/h (85 mph) may result in tire failure, loss of control and possible injury. Be sure to consult a tire dealer to determine whether the tires on your vehicle are high-speed capability tires or not before driving at such speeds.

- Do not continue normal driving when the brakes are wet. If they are wet, your vehicle will require a longer stopping distance, and it may pull to one side when the brakes are applied. Also, the parking brake will not hold the vehicle securely.
- If you drive through deep water over about 500 mm (20 in.) in depth, put the vehicle height in the HI (High) mode with the active height select switch and then turn off the active height control suspension by pushing the height control switch. Drive your vehicle at 30 km/h (19 mph) or lower speed.

OFF-ROAD DRIVING PRECAUTIONS

When driving your vehicle off-road, please observe the following precautions to ensure your driving enjoyment and to help prevent the closure of areas to off-road vehicles.

a. Drive your vehicle only in areas where off-road vehicles are permitted to travel.

b. Respect private property. Get owner's permission before entering private property.

c. Do not enter areas that are closed. Honor gates, barriers and signs that restrict travel.

d. Stay on established roads. When conditions are wet, driving techniques should be changed or travel delayed to prevent damage to roads.

For owners in U.S. mainland, Hawaii and Puerto Rico:

To obtain additional information pertaining to driving your vehicle off–road, consult the following organizations.

- State and Local Parks and Recreation Departments
- State Motor Vehicle Bureau
- Recreational Vehicle Clubs
- U.S. Forest Service and Bureau of Land Management

A CAUTION

Always observe the following precautions to minimize the risk of serious personal injury or damage to your vehicle:

- Drive carefully when off the road. Do not take unnecessary risks by driving in dangerous places.
- Do not grip the steering wheel spokes when driving off-road. A bad bump could jerk the wheel and injure your hands. Keep both hands and especially your thumbs on the outside of the rim.
- Always check your brakes for effectiveness immediately after driving in sand, mud, water or snow.
- After driving through tall grass, mud, rock, sand, rivers, etc., check that there is no grass, bush, paper, rags, stone, sand, etc. adhering or trapped on the underbody. Clear off any such matter from the underbody. If the vehicle is used with these materials trapped or adhering to the underbody, a breakdown or fire could occur.
- The driver and all passengers should fasten their seat belts whenever the vehicle is moving.

NOTICE

- If driving through water, such as when crossing shallow streams, first check the depth of the water and the bottom of the river bed for firmness. Drive slowly and avoid deep water.
- Take all necessary safety measures to ensure that damage to the engine or other components does not occur.

Water entering the engine air intake will cause severe engine damage.

Water can wash the grease from wheel bearings, causing rusting and premature failure, and may also enter the differentials, transmission and transfer case, reducing the gear oil's lubricating qualities.

- Sand and mud that has accumulated in brake drums and around brake discs may affect braking efficiency and may damage brake system components.
- Always perform a maintenance inspection after each day of off-road driving that has taken you through rough terrain, sand, mud, or water. For scheduled maintenance information, refer to the separate "Owner's Manual Supplement/Maintenance Schedule".

WINTER DRIVING TIPS

Make sure you have ethylene-glycol antifreeze in the radiator.

NOTICE

Do not use alcohol type antifreeze.

Check the condition of the battery and cables.

Cold temperatures reduce the capacity of any battery, so it must be in top shape to provide enough power for winter starting. Page 286 tells you how to visually inspect the battery. Your Lexus dealer and most service stations will be pleased to check the battery charge level.

Make sure the engine oil viscosity is suitable for the cold weather.

See page 263 for recommended viscosity. Leaving a heavy summer oil in your vehicle during winter months may cause harder starting. If you are not sure about which oil to use, call your Lexus dealer – they will be pleased to help.

Check the electronic ignition system for loose connections or obvious damage.

Keep the door locks from freezing.

Squirt lock de-icer or glycerine into the locks to keep them from freezing.

Use a washer fluid containing an antifreeze solution.

This product is available at your Lexus dealer and most auto parts stores. Follow the manufacturer's directions for how much to mix with water.

NOTICE

Do not use engine antifreeze or any other substitute because it may damage your vehicle's paint.

Do not use your parking brake when there is a possibility it could freeze.

When parking, put the transmission into "P" and block the front wheels. Do not use the parking brake, or snow or water accumulated in and around the parking brake mechanism may freeze the parking brake, making it hard to release.

Keep ice and snow from accumulating under the fenders.

Ice and snow built up under your fenders can make steering difficult. During bad winter driving, stop and check under the fenders occasionally.

Depending on where you are driving, we recommend you carry some emergency equipment.

Some of the things you might put in the vehicle are tire chains, window scraper, bag of sand or salt, flares, small shovel, jumper cables, etc.

TRAILER TOWING

Your vehicle is designed primarily as a passenger–and–load carrying vehicle. Towing a trailer will have an adverse effect on handling, performance, braking, durability and driving economy (fuel consumption, etc.). Your safety and satisfaction depend on the proper use of correct equipment and cautious driving habits. For your safety and the safety of others, you must not overload your vehicle or trailer. Lexus warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes. Ask your local Lexus dealer for further details before towing.

CAUTION

When disconnecting a trailer, put the vehicle height in the "LO" (Low) mode and push the active height control switch to turn off the active height control suspension. Otherwise, the vehicle height may be changed because of the automatic leveling function, resulting in an unexpected accident. For details, see "Active height control suspension (AHC)" on page 187.

Weight limits

Before towing, make sure the total trailer weight, gross vehicle weight, gross axle weight and trailer tongue load are all within the limits.

The total trailer weight and tongue load can be measured with platform scales found at a highway weighing station, building supply company, trucking company, junk yard, etc.




► Certification label

CAUTION

- The gross trailer weight (trailer weight plus its cargo load) must not exceed 2948 kg (6500 lb.). Exceeding this weight is dangerous. If towing a trailer over 907 kg (2000 lb.), it may be necessary to use a sway control device with a sufficient capacity.
- The gross combination weight (sum of your vehicle weight plus its load and the total trailer weight) must not exceed 5625 kg (12400 lb.).

- The gross vehicle weight must not exceed the Gross Vehicle Weight Rating (GVWR) indicated on the Certification Label. The gross vehicle weight is the sum weight of the unloaded vehicle, driver, passengers, luggage, hitch and trailer tongue load. It also includes the weight of any special equipment installed on your vehicle.
- The load on either the front or rear axle resulting from distribution of the gross vehicle weight on both axles must not exceed the Gross Axle Weight Rating (GAWR) listed on the Certification Label.
- Maximum tongue weight for a weight carrying hitch is 295 kg (650 lb.)

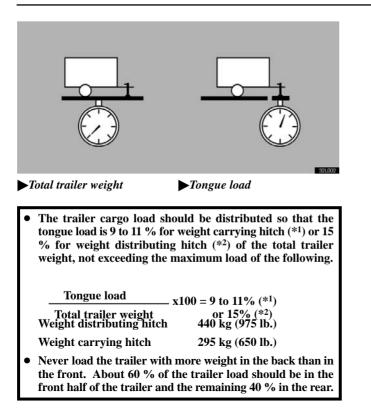

Hitches

- If you wish to install a trailer hitch, please consult your Lexus dealer regarding the weight distribution capabilities of the hitch.
- Use only a hitch which is recommended by the hitch manufacturer and conforms to the total trailer weight requirement.
- The hitch must be bolted securely to the vehicle frame and installed according to the hitch manufacturer's instructions.
- The hitch ball and king pin should have a light coat of grease.


Trailer ball

Follow these easy steps to properly determine the correct trailer ball for your application:

1. Determine the correct trailer ball size for the trailer coupler. Most couplers are stamped with the required trailer ball size. The sizes you'll most likely find stamped on the coupler are:

Trailer Class	Typical Trailer Ball Size		
III	2-5/16	in.	
II	2	in.	
Ι	1-7/8	in.	

2. Select the appropriate trailer ball to match or exceed the gross trailer weight rating of the trailer. The trailer ball load rating should be printed on the top of the ball.

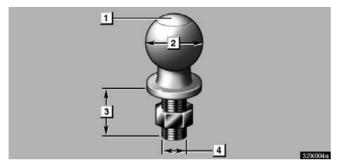


▶ 1 Trailer ball load rating 2 Ball diameter 3 Shank length 4 Shank diameter

3. When mounted in the ball mount, the threaded ball shank must protrude beyond the bottom of the lock washer and nut at least 2 threads. The trailer ball shank must be matched to the ball mount hole diameter size.

Matching trailer ball height to trailer coupler height

No matter which class of tow hitch applies, for a safe trailer hookup, the trailer ball setup on must be the proper height for the coupler on the trailer.

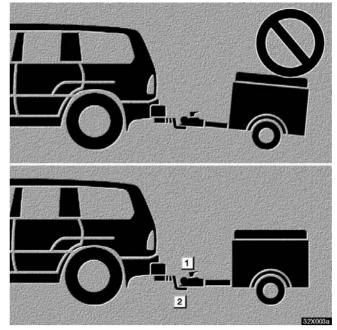

▶ 1 Coupler 2 Trailer ball

Brakes and safety chains

- Lexus recommends trailers with brakes that conform to any applicable federal and state/provincial regulations.
- A safety chain must always be used between the towing vehicle and the trailer. Leave sufficient slack in the chain for turns. The chain should cross under the trailer tongue to prevent the tongue from dropping to the ground in case it becomes damaged or separated. For correct safety chain procedures, consult your Lexus dealer.

CAUTION

- If the total trailer weight exceeds 453 kg (1000 lb.), trailer brakes are required.
- Never tap into your vehicle's hydraulic system as it will lower its braking effectiveness.
- Never tow a trailer without using a safety chain securely attached to both the trailer and the vehicle. If damage occurs to the coupling unit or hitch ball, there is possible danger of the trailer wandering over into another lane.

Tires

• Ensure that your vehicle's tires are properly inflated. Adjust the tire pressure to the recommended cold tire pressure indicated below:

 Tire pressure, kPa (kgf/cm² or bar, psi)

 Front
 220 (2.2, 32)

 Rear
 240 (2.4, 35)

• The trailer tires should be inflated to the pressure recommended by the trailer manufacturer in respect to the total trailer weight.

Trailer lights

• Trailer lights must comply with federal, state/provincial and local regulations. The LX470 tow hitch comes with 4-pin wiring. For towing a recreational vehicle, a 6 or 7-pin connector is required. See your local recreational vehicle dealer or rental agency for the correct type of wiring and relays for your trailer. Check for correct operation of the turn signals and stop lights each time you hitch up. Direct splicing may damage your vehicle's electrical system and cause a malfunction of your lights.

Break-in schedule

• Lexus recommends that you do not tow a trailer with a new vehicle or a vehicle with any new power train component (engine, transmission, differential, wheel bearing, etc.) for the first 800 km (500 miles) of driving.

Maintenance

- If you tow a trailer, your vehicle will require more frequent maintenance due to the additional load. For this information, please refer to the scheduled maintenance information in the "Owner's Manual Supplement/ Maintenance Schedule".
- Retighten all fixing bolts of the towing ball and bracket after approximately 1000 km (600 miles) of trailer driving.

Connecting a trailer

Stop your vehicle and a trailer in line and perform the following:

1. Put the active height control suspension in the "LO" (low) mode. Turn the ignition switch off or push the height control switch to turn off the active height control suspension.

2. Connect a trailer.

3. Turn the ignition switch on or push the height control switch to turn on the active height control suspension. Select the "N" (normal) mode with the height select switch.

When a vehicle loaded with 4 occupants tows a trailer of about 1800 kg (4000 lb.) with more than about 180 kg (400 lb.) tongue load, the normal mode may not be selected with the height control indicator "LO". However, there is no problem to continue normal driving. Drive with sufficient care because of large load.

Disconnecting a trailer

Stop your vehicle and a trailer in line and perform the following:

1. Put the active height control suspension in the "LO" mode. (Make sure the vehicle height is in the "LO" mode by pushing the height select switch on the " $\mathbf{\nabla}$ "side.)

2. Turn the ignition switch off or push the height control switch to turn off the active height control suspension.

3. Set the supporting leg of a trailer on the ground and raise the hitch by 100 mm (4 in.)

4. Turn the ignition switch on or push the height control switch to turn on the active height control suspension.

5. Wait for about 20 seconds until the rear vehicle height is lowered by the automatic leveling function.

6. Make sure the hitch is disconnected. If not, raise the hitch higher and repeat steps 2 through 5.

7. Move the vehicle forward in the "LO" mode where the hitch does not touch anything in the "N" mode.

8. Put the active height control suspension in the "N" mode.

Pre-towing safety check

- Check that your vehicle remains level when a loaded or unloaded trailer is hitched. Do not drive if the vehicle has an abnormal nose–up or nose–down condition, and check for improper tongue load, overload, worn suspension or other possible causes.
- Make sure the trailer cargo is securely loaded so that it cannot shift.
- Check that your rear view mirrors conform to any federal, state/provincial or local regulation. If they do not, install required rear view mirrors appropriate for towing purposes.

Trailer towing tips

When towing a trailer, your vehicle will handle differently than when not towing. The three main causes of vehicle-trailer accidents are driver error, excessive speed and improper trailer loading. Keep these in mind when towing:

- Before starting out, check the operation of the lights and all vehicle-trailer connections. After driving a short distance, stop and recheck the lights and connections. Practice turning, stopping and backing with a trailer in an area away from traffic until you learn the feel.
- Backing with a trailer is difficult and requires practice. Grip the bottom of the steering wheel and move your hand to the left to move the trailer to the left. Move your hand to the right to move the trailer to the right. (This procedure is generally opposite to that when backing without a trailer.) Also, just turn the steering wheel a little at a time, avoiding sharp or prolonged turning. Have someone guide you when backing to reduce the risk of an accident.
- Because stopping distance may be increased, vehicle–to–vehicle distance should be increased when towing a trailer. For each 16 km/h (10 mph) of speed, allow at least one vehicle and trailer length between you and the vehicle ahead. Avoid sudden braking as you may skid, resulting in jackknifing and loss of control. This is especially true on wet or slippery surfaces.
- Avoid jerky starts or sudden acceleration.

- Avoid jerky steering and sharp turns. The trailer could hit your vehicle in a tight turn. Slow down before making a turn to avoid the need of sudden braking.
- Remember that when making a turn, the trailer wheels will be closer than the vehicle wheels to the inside of the turn. Therefore, compensate for this by making a larger than normal turning radius with your vehicle.
- Crosswinds and rough roads will adversely affect handling of your vehicle and trailer, causing sway. Pay attention to the rear from time to time to prepare yourself for being passed by large trucks or buses, which may cause your vehicle and trailer to sway. If swaying happens, firmly grip the steering wheel and reduce speed immediately but gradually. Never increase speed. If it is necessary to reduce speed, brake slowly. Steer straight ahead. If you make no extreme correction with the steering or brakes, your vehicle and trailer will stabilize.
- Be careful when passing other vehicles. Passing requires considerable distance. After passing a vehicle, do not forget the length of your trailer and be sure you have plenty of room before changing lanes.
- In order to maintain efficient engine braking and electrical charging performance, do not use overdrive.
- Because of the added load of the trailer, your vehicle's engine may overheat on hot days (at temperatures over 30°C [85°F]) when going up a long or steep grade with a trailer. If the engine coolant temperature gauge indicates overheating, immediately turn off the air conditioning (if in use), pull your vehicle off the road and stop in a safe spot. See "If your vehicle overheats" on page 224 of this manual.
- Always place wheel blocks under both the vehicle and trailer

wheels when parking. Apply the parking brake firmly. Put the transmission in "P". Avoid parking on a slope with a trailer, but if it cannot be avoided, do so only after performing the following:

1. Apply the brakes and keep them applied.

2. Have someone place wheel blocks under both the vehicle and trailer wheels.

3. When the wheel blocks are in place, release your brakes slowly until the blocks absorb the load.

4. Apply the parking brake firmly.

5. Shift into "P" and turn off the engine.

When restarting out after parking on a slope:

1. With the transmission in "P" position, start the engine. Be sure to keep the brake pedal depressed.

2. Shift into the "2", "L" or "R" position.

3. Release the parking brake and brake pedal and slowly pull or back away from the wheel blocks. Stop and apply your brakes.

4. Have someone retrieve the blocks.

\Lambda CAUTION

- Do not exceed 72 km/h (45 mph) or the posted towing speed limit, whichever is lower. Because instability (swaying) of a towing vehicle-trailer combination usually increases as the speed increases, exceeding 72 km/h (45 mph) may cause loss of control.
- Slow down and downshift before descending steep or long downhill grades. Do not make sudden downshifts.
- Avoid holding the brake pedal down too long or too frequently. This could cause the brakes to overheat and result in reduced braking efficiency.

HOW TO SAVE FUEL AND MAKE YOUR VEHICLE LAST LONGER

Getting more kilometer/mileage from a liter/gallon of fuel is easy – just take it easy. It will help make your vehicle last longer, too. Here are some specific tips on how to save money on both fuel and repairs:

- Keep your tires inflated at the correct pressure. Check the pressure every two weeks, or at least once a month. Underinflation causes tire wear and wastes fuel.
- **Do not carry unneeded weight in your vehicle.** Excess weight puts a heavier load on the engine, causing greater fuel consumption.
- Avoid lengthy warm-up idling. Once the engine is running smoothly, begin driving but gently. Remember, however, that on cold winter days this may take a little longer.
- Accelerate slowly and smoothly. Avoid jackrabbit starts.
- Avoid long engine idling. If you have a long wait and you are not in traffic, it is better to turn off the engine and start again later.
- Avoid engine overrevving. Use a gear position suitable for the road on which you are traveling.
- Avoid continuous speeding up and slowing down. Stop-and-go driving wastes fuel.

- Avoid unnecessary stopping and braking. Maintain a steady pace. Try to time the traffic signals so you only need to stop as little as possible or take advantage of through streets to avoid traffic lights. Keep a proper distance from other vehicles to avoid sudden braking. This will also reduce wear on your brakes.
- Avoid heavy traffic or traffic jams whenever possible.
- **Do not rest your foot on the brake pedal.** This causes needless wear, overheating and poor fuel economy.
- Maintain a moderate speed on highways. The faster you drive, the greater the fuel consumption. By reducing your speed, you will cut down on fuel consumption.
- Keep the front wheels in proper alignment. Avoid hitting the curb and slow down on rough roads. Improper alignment not only causes faster tire wear but also puts an extra load on the engine, which, in turn, wastes fuel.
- Keep the bottom of your vehicle free from mud, etc. This not only lessens weight but also helps prevent corrosion.
- Keep your vehicle tuned-up and in top shape. A dirty air cleaner, improper valve clearance, dirty plugs, dirty oil and grease, brakes not adjusted, etc. all lower engine performance and contribute to poor fuel economy. For longer life of all parts and lower operating costs, keep all maintenance work on schedule, and if you often drive under severe conditions, see that your vehicle receives more frequent maintenance. (For scheduled maintenance information, please refer to the separate "Owner's Manual Supplement/Maintenance Schedule".)

CAUTION

Never turn off the engine to coast down hills. Your power steering and brake booster will not function without the engine running. Also, the emission control system operates properly only when the engine is running.

SECTION 4

IN CASE OF AN EMERGENCY

If your engine stalls while driving	220
If your vehicle will not start	220
If your vehicle overheats	224
If you have a flat tire	225
If your vehicle needs to be towed	232
If you cannot shift automatic transmission	
selector lever	238
If you lose your keys or lock yourself out	239

4

IF YOUR ENGINE STALLS WHILE DRIVING

If your engine stalls while driving

1. Reduce your speed gradually, keeping a straight line. Move cautiously off the road to a safe place.

2. Turn on your emergency flashers.

3. Try starting the engine again.

If the engine will not start, see "If your vehicle will not start".

CAUTION

If the engine is not running, the power assist for the brakes and steering will not work, so steering and braking will be much harder than usual.

IF YOUR VEHICLE WILL NOT START

(a) Simple checks

Before making these checks, make sure you have followed the correct starting procedure instructions in "How to start the engine" on page 172 and that you have sufficient fuel. Since your vehicle is equipped with the engine immobiliser system, also check whether the other keys will start the engine. If they work, your key may be broken. Have the key checked at your Lexus dealer. If none of your keys work, the system is possibly broken. Call your Lexus dealer. See "Keys" on page 8.

If the engine is not turning over or is turning over too slowly -

1. Check that the battery terminals are tight and clean.

2. If the battery terminals are O.K., switch on the interior light.

3. If the light is out, dim or goes out when the starter is cranked, the battery is discharged. You may try jump starting. See "(c) Jump starting" for further instruction.

If the light is O.K., but the engine still will not start, it needs adjustment or repair. Call a Lexus dealer, Roadside Assistance or Customer Service Assistance. (See "Foreword".)

NOTICE

Do not pull- or push-start the vehicle. It may damage the vehicle or cause a collision when the engine starts. Also the three-way catalytic converter may overheat and become a fire hazard.

If the engine turns over at its normal speed but will not start -

1. The engine may be flooded because of repeated cranking. See "(b) Starting a flooded engine" for further instructions.

2. If the engine still will not start, it needs adjustment or repair. Call a Lexus dealer, Roadside Assistance or Customer Service Assistance. (See "Foreword".)

(b) Starting a flooded engine

If the engine will not start, your engine may be flooded because of repeated cranking.

If this happens, turn the key to "START" with the accelerator pedal held down. Continue this operation for 30 seconds and then stop cranking. Then try starting the engine with your foot off the accelerator pedal.

If the engine does not start after 30 seconds of cranking, release the key, wait a few minutes and try again.

If the engine still will not start, it needs adjustment or repair. Call a Lexus dealer. Roadside Assistance or Customer Service Assistance. (See "Foreword".)

NOTICE

Do not crank for more than 30 seconds at a time. This may overheat the starter and wiring systems.

(c) Jump starting

To avoid serious personal injury and damage to your vehicle which might result from battery explosion, acid burns, electrical burns, or damaged electronic components, these instructions must be followed precisely.


If you are unsure about how to follow this procedure, we strongly recommend that you seek help from your Lexus dealer, Roadside Assistance or Customer Service Assistance. (See "Foreword".).

A CAUTION

- Batteries contain sulfuric acid which is poisonous and corrosive. Wear protective safety glasses when jump starting, and avoid spilling acid on your skin, clothing, or vehicle.
- If you should accidentally get acid on yourself or in your eyes, remove any contaminated clothing and flush the affected area with water immediately. Then get immediate medical attention. If possible, continue to apply water with a sponge or cloth while en route to the medical office.
- The gas normally produced by a battery will explode if a flame or spark is brought near. Use only standardized jumper cables and do not smoke or light a match while jump starting.

NOTICE

The battery used for boosting must be 12 V. Do not jump start unless you are sure that the booster battery is correct.

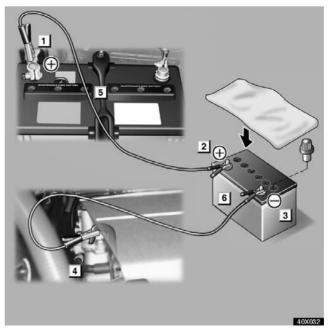

► 5 Discharged battery 6 Booster battery JUMP STARTING PROCEDURE

1. If the booster battery is installed in another vehicle, make sure the vehicles are not touching. Turn off all unnecessary lights and accessories.

2. If required, remove all the vent plugs from the booster battery. Lay a cloth over the open vents on the booster battery. (This helps reduce the explosion hazard, personal injuries and burns.)

If the booster battery is an extended maintenance interval battery, it is not necessary to remove the vent plugs.

3. If the engine in the vehicle with the booster battery is not running, start it and let it run for about 5 minutes. During jump starting, run the engine at about 2000 rpm with the accelerator pedal lightly depressed.

4. Locate positive (+) and negative (-) terminals of each battery. Connect the jumper cables in the exact order (1 2 3 4) shown in the illustration.

- Connect a positive (red) jumper cable clamp to the positive (+) terminal of the discharged battery.
- **2** Connect the clamp at the other end of the positive (red) cable to the positive (+) terminal of the booster battery.
- **3** Connect a negative (black) cable clamp to the negative (-) terminal of the booster battery.
- 4 Connect the clamp at the other end of the negative (black) cable to a solid, stationary, unpainted metallic point (e.g. engine hanger) away from the battery. Do not connect it to or near any part that moves when the engine is cranked.

A CAUTION

When making the connections, to avoid serious injury, do not lean over the battery or accidentally let the jumper cables or clamps touch anything except the correct battery terminals or the ground.

5. Start your engine in the normal way. After starting, run it at about 2000 rpm for several minutes with the accelerator pedal lightly depressed.

6. Carefully disconnect the cables in the exact reverse order: the negative cable and then the positive cable.

7. Carefully dispose of the battery cover cloths which may now contain sulfuric acid.

8. If removed, replace all the battery vent plugs.

If the cause of your battery discharging is not apparent (for example, lights left on), you should have it checked.

IF YOUR VEHICLE OVERHEATS

If your engine coolant temperature gauge indicates overheating, if you experience a loss of power, or if you hear a loud knocking or pinging noise, the engine has probably overheated.

When the engine overheats

Pull safely off the road, stop the vehicle and turn on your emergency flashers. Put the transmission in "P" and apply the parking brake.

A: If steam is coming from your engine:

Turn off the engine. Leave the hood closed until there is no sign of steam or coolant. Your engine could have been seriously damaged already. Call your Lexus dealer for assistance.

CAUTION

To help avoid personal injury, keep the hood closed until there is no steam. Escaping steam or coolant is sign of very high pressure.

B: If no steam is coming from your engine:

Leave the engine running and turn off the air conditioning. Check the following.

- Is the cooling fan operating?
- Is the coolant in the acceptable range?
- Is the engine drive belt O.K.?

CAUTION

- When the engine is running, keep hands and clothing away from the moving fan and engine drive belt.
- Do not attempt to remove the radiator cap when the engine and radiator are hot. Serious injury could result from scalding hot fluid and steam blown out under pressure.

If the cooling fan is not operating or the coolant is not in the acceptable range, turn off the engine and call your Lexus dealer.

If both conditions are O.K., after the engine coolant temperature has cooled to normal, continue driving your vehicle.

If the engine coolant temperature does not cool down, or your vehicle overheats again, have it checked as soon as possible by your Lexus dealer.

IF YOU HAVE A FLAT TIRE

1. Reduce your speed gradually, keeping a straight line. Move cautiously off the road to a safe place – well away from the traffic. Avoid stopping on the center divider of a highway. Park on a level spot with firm ground.

2. Stop the engine and turn on your emergency flashers.

3. Firmly set the parking brake and put the transmission in "P".

4. Have everyone get out of the vehicle on the side away from traffic.

5. Read the following instructions thoroughly.

CAUTION

When jacking, be sure to observe the following to reduce the possibility of personal injury:


- Turn off the active height control suspension by pushing the active height control switch.
- Follow jacking instructions.
- Do not start or run the engine while your vehicle is supported by the jack.
- Stop the vehicle on a level firm ground, firmly set the parking brake and put the transmission in "P". Block the wheel diagonally opposite to the one being changed if necessary.

- Make sure to set the jack properly in the jack point. Raising the vehicle with jack improperly positioned will damage the vehicle or may allow the vehicle to fall off the jack and cause personal injury.
- Never get under the vehicle when the vehicle is supported by the jack alone.
- Use the jack only for lifting your vehicle during wheel changing.
- Do not raise the vehicle with someone in the vehicle.
- When raising the vehicle, do not put an object on or under the jack.
- Raise the vehicle only high enough to remove and change the tire.

NOTICE

Do not continue driving with a deflated tire. Driving even a short distance can damage a tire beyond repair.






1. Get the tool, jack and spare tire.

To prepare yourself for an emergency, you should familiarize yourself with the use of the jack and each tool, and their storage locations.

When storing the jack, put it into place and secure to prevent it from flying forward during a collision or sudden braking.

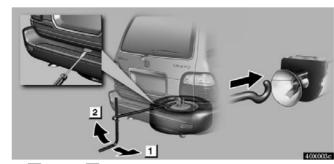

▶ 1 Lower 2 Raise


To remove the spare tire:

1. Remove the spare tire carrier lid using a slotted screwdriver.

2. Insert the end of the jack handle extension into the lowering screw and turn it counterclockwise with the handle, making sure the handle remains firmly fitted onto the jack handle extension.

3. After the tire is lowered completely to the ground, remove the holding bracket.

When storing the spare tire, put it in place with the outer side of the wheel facing up. Then secure the tire, taking care that the tire goes straight up without catching on any other part, to prevent it from flying forward during a collision or sudden braking.

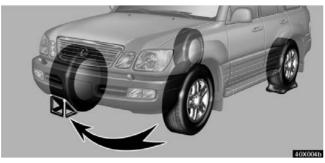

2. Block the wheel diagonally opposite the flat tire to keep the vehicle from rolling when it is jacked up.

When blocking a wheel, place a wheel block in front of the front wheels or behind the rear wheels.



- ► Paper for protecting surface
- 3. Remove the wheel ornament.

Pry off the wheel ornament, using the beveled end of the wheel ornament remover as shown.

CAUTION

Do not try to pull off the ornament by hand. Take due care in handling the ornament to avoid unexpected personal injury.




4. Loosen all the wheel nuts.

Always loosen the wheel nuts before raising the vehicle.

Turn the nuts counterclockwise to loosen them. To get maximum leverage, fit the wrench to the nut so that the handle is on the right side, as shown above. Grab the wrench near the end of the handle and pull up on the handle. Be careful that the wrench does not slip off the nut.

Do not remove the nuts yet – just unscrew them about one-half turn.

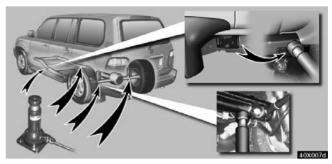

5. Position the jack at the jack points as shown.

Make sure the jack is positioned on a level and solid surface.

JACK POINTS:

Front – Under the chassis frame side rail at the No.2 body mount bracket

Rear – Under the rear axle housing



6. After making sure no one is in the vehicle, raise it high enough so that the spare tire can be installed.

Allow for the fact that you need more ground clearance when putting on the spare tire than when removing the flat tire.

To raise the vehicle, insert the jack handle extension into the jack (it is a loose fit) and turn it clockwise with the handle, making sure the handle remains firmly fitted onto the jack handle extension. As the jack touches the vehicle and begins to lift, double–check that it is properly positioned.

CAUTION

Never get under the vehicle when the vehicle is supported by the jack alone.



7. Remove the wheel nuts and remove the flat tire.

Lift the flat tire straight off and put it aside.

Roll the spare wheel into position and align the holes in the wheel with the bolts. Then lift up the wheel and get at least the top bolt started through its hole. Wiggle the tire and press it back over the other bolts.



Before putting on the wheel, remove any corrosion on the mounting surfaces with a wire brush or such. Installation of wheels without good metal-to-metal contact at the mounting surface can cause wheel nuts to loosen and eventually cause a wheel to come off while driving. Therefore after the first 1600 km (1000 miles), check to see that the wheel nuts are tight.



8. Reinstall all the wheel nuts finger tight.

Reinstall the wheel nuts and tighten them as much as you can by hand. Press the tire back and see if you can tighten them more.



9. Lower the vehicle completely and tighten the wheel nuts.

To lower the vehicle, turn the jack handle extension counterclockwise with the handle, making sure the handle remains firmly fitted onto the jack handle extension.

Use only the wheel nut wrench to tighten the nuts. Do not use other tools or any additional leverage other than your hands, such as a hammer, pipe or your foot. Make sure the wrench is securely engaged over the nut.

Tighten each nut a little at a time in the order shown. Repeat the process until all the nuts are tight.

CAUTION

- When lowering the vehicle, make sure all portions of your body and all other persons around will not be injured as the vehicle is lowered to the ground.
- As soon as possible after changing wheels, have the wheel nuts tightened by torque wrench at 131 N·m (13.4 kgf·m, 97 ft·lbf.).



10. Reinstall the wheel ornament.

Put the wheel ornament into position and then tap it firmly with the side or heel of your hand to snap it into place.

CAUTION

Take due care in handling the ornament to avoid unexpected personal injury.

11. After changing the wheel, check the air pressure of the replaced tire. Stow all the tools, jack and flat tire securely.

If the pressure of the replaced tire is low, drive slowly to the nearest service station and fill to the correct pressure.

Do not forget to reinstall the tire valve cap as dirt and moisture could get into the valve core and possible cause air leakage. If the cap is missing, put a new one on as soon as possible.

This is the same procedure for changing or rotating your tires.

CAUTION

Before driving, make sure all the tools, jack and flat tire are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

IF YOUR VEHICLE NEEDS TO BE TOWED

If towing is necessary, we recommend you to have it done by your Lexus dealer or a commercial tow truck service. In consultation with them, have your vehicle towed using either (a) or (b).

- (a) Towing with a wheel lift type truck
- (b) Using a flat bed truck
- (c) Never tow with a sling type truck

Only when you cannot receive a towing service from a Lexus dealer or commercial tow truck service, tow your vehicle carefully in accordance with the instructions given in "(d) Emergency towing" on page 236.

Proper equipment will help ensure that your vehicle is not damaged while being towed. Commercial operators are generally aware of the state/provincial and local laws pertaining to towing. Your vehicle can be damaged if it is towed incorrectly. Although most operators know the correct procedure, it is possible to make a mistake. To avoid damage to your vehicle, make sure the following few precautions are observed. If necessary, show this page to the tow truck driver.


TOWING PRECAUTIONS:

Use a safety chain system for all towing, and abide by the state/provincial and local laws. The wheels and axle on the ground must be in good condition. If they are damaged, use a towing dolly.

CAUTION

When your vehicle is towed, put the vehicle height in the "N" (Normal) mode and push the active height control switch to turn off the active height control suspension. Otherwise, the vehicle height may be changed because of the automatic leveling function, resulting in an unexpected accident. For details, see "Active height control suspension (AHC)" on page 187.


- (a) Towing with a wheel lift type truck
- From front

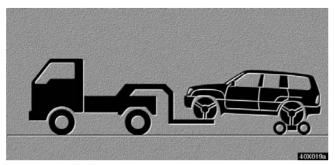

Use a towing dolly under the rear wheels.

NOTICE

Never tow a vehicle with an automatic transmission from the front with rear wheels on the ground, as this may cause serious damage to the transmission. • From rear

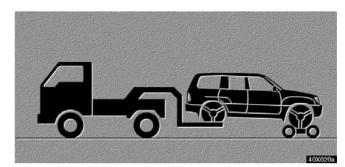


Use a towing dolly under the front wheels.


NOTICE


Never tow a vehicle with an automatic transmission from the rear with front wheels on the ground, as this may cause serious damage to the transmission.

(b) Using a flat bed truck

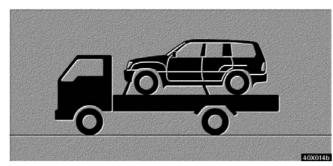

• Tie down points

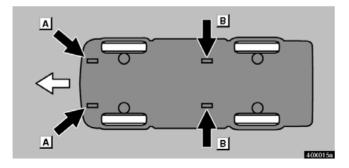

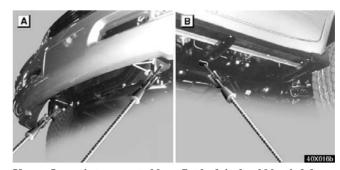

If your Lexus is transported by a flat bed, it should be tied down at locations A and B as shown above.




Rear emergency towing hook

NOTICE


Do not use the rear emergency towing hook.

• Tie down angle

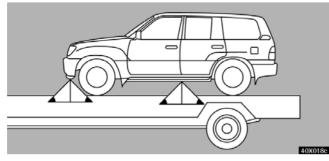

If you use chains or wires to tie down your vehicle, the angles shaded black must be at 45° .

(c) Towing with a sling type truck

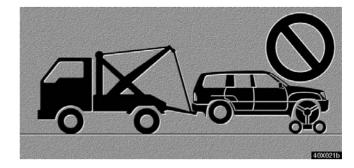


NOTICE

Do not tow with a sling type truck, either from the front or rear. This may cause body damage.

4

(d) Emergency towing

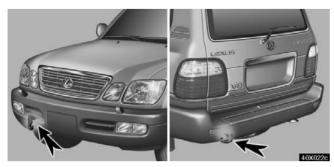

If towing is necessary, we recommend you to have it done by your Lexus dealer or a commercial tow truck service.

If towing service is not available in an emergency, your vehicle may be temporarily towed by a cable or chain secured to the emergency towing hook. Use extreme caution when towing the vehicle.

A driver must be in the vehicle to steer it and operate the brakes.

Towing in this manner may be done only on hard–surfaced roads for a short distance and at low speeds. Also, the wheels, axles, drive train, steering and brakes must all be in good condition.

A CAUTION

Use extreme caution when towing the vehicle. Avoid sudden starts or erratic driving maneuvers which would place excessive stress on the emergency towing hook and towing cable or chain. The hook and towing cable or chain may break and cause serious injury or damage.

NOTICE

Use only a cable or chain specifically intended for use in towing vehicles. Securely fasten the cable or chain to the towing hook provided.

Before towing, check that the center differential is unlocked. (The indicator light must be off with the ignition on.) Release the parking brake and put the transmission in "N". The ignition key must be in "ACC" (engine off) or "ON" (engine running).

CAUTION

If the engine is not running, the power assist for the brakes and steering will not work so steering and braking will be much harder than usual.

Emergency towing hook precautions:

- Before emergency towing, check that the hook is not broken or damaged and that the installation bolts are not loose.
- Fasten the towing cable or chain securely to the hook.
- Do not jerk the hook. Apply steady and even force.
- To avoid damaging the hook, do not pull from the side or at a vertical angle. Always pull straight ahead.

A CAUTION

If the emergency towing hook is used to get out when your vehicle becomes stuck in the mud, sand or other condition from which the vehicle cannot be driven out under its own power, make sure to observe the precautions mentioned below. Otherwise, excessive stress will be put on the hook and the towing cable or chain may break, causing serious injury or damage.

- If the towing vehicle can hardly move, do not forcibly continue the towing. Contact your Lexus dealer or a commercial tow truck service for assistance.
- Tow the vehicle as straight ahead as possible.
- Keep away from the vehicle during towing.

Tips for towing a stuck vehicle:

The following methods are effective to use when your vehicle is stuck in the mud, sand or other condition from which the vehicle cannot be driven out under its own power. Use extreme caution when towing the vehicle. In addition, keep away from the vehicles and towing cable or chain when towing.


- Remove the sand and soil in the front and the back of the tires.
- Place stones or wood under the tires.

IF YOU CANNOT SHIFT AUTOMATIC TRANSMISSION SELECTOR LEVER



If you cannot shift the selector lever, use the shift lock override button as follows:

1 Turn the ignition key to "LOCK" or "ACC". Make sure the parking brake is applied. Pry up the cover with a flat-bladed screwdriver or equivalent.

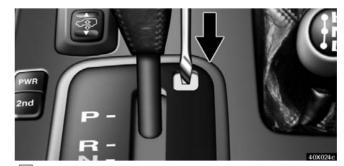

2 Insert your finger, the screwdriver or equivalent into the hole to push down the shift lock override button. You can shift the selector lever while pushing the button.

For your safety, keep the brake pedal depressed.

Be sure to have the system checked by your Lexus dealer as soon as possible.

IF YOU LOSE YOUR KEYS OR LOCK YOURSELF OUT

Many Lexus dealers can make a new key if you can give them the key number. Since your vehicle is equipped with the engine immobiliser system, the dealer will also need your master key.

See the suggestion given in "Keys" on page 8.

If your keys are locked in the vehicle and you cannot get a duplicate, many Lexus dealers can still open the door for you, using their special tools. If you must break a window to get in, we suggest breaking the smallest side window because it is the least expensive to replace. Be extremely cautious to avoid cuts from the glass.

Even if you lose only one key, contact your Lexus dealer to make a new key. If you lose all your master keys, you cannot make new keys; the whole system must be replaced.

Z

SECTION 5

MAINTENANCE

Maintenance requirements	242
General maintenance	243
Does your vehicle need repairing?	246

For scheduled maintenance information, please refer to the separate "Owner's Manual Supplement/ Maintenance Schedule".

5

MAINTENANCE REQUIREMENTS

Your Lexus vehicle has been designed to have fewer maintenance requirements with longer service intervals to save both your time and money. However, each regular maintenance as well as day-to-day care is more important than ever before to ensure smooth, trouble-free, safe, and economical driving.

It is the owner's responsibility to make sure the specified maintenance, including general maintenance services, is performed. Note that both the new vehicle and emission control system warranties specify that proper maintenance and care must be performed. See the Owner's Guide, Owner's Manual Supplement or Warranty Booklet for complete warranty information.

General maintenance

General maintenance items are those day-to-day care practices that are important to your vehicle for proper operation. It is the owner's responsibility to ensure that the general maintenance items are performed regularly.

These checks or inspections can be done either by yourself or your Lexus dealer.

Scheduled maintenance

The scheduled maintenance items listed in the "Owner's Manual Supplement/Maintenance Schedule" are those required to be serviced at regular intervals.

For details of your maintenance schedule, read the separate "Owner's Manual Supplement/Maintenance Schedule".

It is recommended that any replacement parts used for maintenance or for the repair of the emission control system be Lexus supplied.

The owner may elect to use non-Lexus supplied parts for replacement purposes without invalidating the emission control system warranty. However, use of replacement parts which are not of equivalent quality may impair the effectiveness of the emission control systems.

You may also elect to have maintenance, replacement, or repair of the emission control devices and system performed by any automotive repair establishment or individual without invalidating this warranty. See Owner's Guide, Owner's Manual Supplement or Warranty Booklet for complete warranty information.

Where to go for service?

Lexus technicians are well-trained specialists and are kept up to date with the latest service information through technical bulletins, service tips, and in-dealership training programs. They are well informed about the operation of all the systems on your vehicle.

You can be confident that your Lexus dealer's service department performs the best job to meet the maintenance requirements of your vehicle – reliably and economically.

Your copy of the repair order is proof that all required maintenance has been performed for warranty coverage. And if any problems should arise with your vehicle while under warranty, your Lexus dealer will promptly take care of it. Again, be sure to keep a copy of the repair order for any service performed on your Lexus.

What about do-it-yourself maintenance?

Many of the maintenance items are easy to do yourself, if you have a little mechanical ability and a few basic automotive tools. Simple instructions for how to perform them are presented in Section 6.

If you are a skilled do-it-yourself mechanic, the Lexus service manuals are recommended. Please be aware that do-it-yourself maintenance can affect your warranty coverage. See your Owner's Guide, Owner's Manual Supplement or Warranty Booklet for the details.

GENERAL MAINTENANCE

Listed below are the general maintenance items that should be performed at the intervals specified. It is recommended that any problem you notice be brought to the attention of your Lexus dealer or qualified service shop for their advice.

CAUTION

Make these checks only where adequate ventilation can be obtained if you run the engine.

Vehicle exterior

Items listed below should be performed from time to time, unless otherwise specified.

Tire pressure

Check the pressure with a gauge every two weeks, or at least once a month and adjust as shown on the tire pressure label. See page 274 for additional information.

Tire surface

Check the tires carefully for cuts, damage or excessive wear. See page 275 for additional information.

Wheel nuts

When checking the tires, make sure to check the nuts for looseness. Tighten them if necessary.

Tire rotation

Rotate the tires every 12000 km (7500 miles). See page 275 for additional information.

Fluid leaks

Check underneath for leaking fuel, oil, water or other fluid after the vehicle has been parked for a while. If you smell fuel fumes or notice any leak, have the cause found and corrected immediately.

Doors and engine hood

Check that all doors and back door, operate smoothly and all latches lock securely. Make sure the engine hood secondary latch secures the hood when the primary latch is released.

Vehicle interior

Items listed below should be checked regularly, e.g. while performing periodic services, cleaning the vehicle, etc.

Lights

Make sure the headlights, stop lights, tail lights, turn signal lights, and other lights are working. Check headlight aim.

Service reminder indicators and warning buzzers

Check that all service reminder indicators and warning buzzers function properly.

Steering wheel

Check that it has the specified freeplay. Be alert for changes in steering condition, such as hard steering, excessive freeplay or strange noise.

Seats

Check that all front seat controls such as seat adjusters, seatback recliner, etc. operate smoothly. Check that the head restraints move up and down smoothly and that the locks hold securely in any latched position. For folding-down rear seatbacks, swing-up rear seat cushions and detachable third seats, check that the latches lock securely.

Seat belts

Check that the seat belt system such as buckles, retractors and anchors operate properly and smoothly. Make sure the belt webbing is not cut, frayed, worn or damaged.

Accelerator pedal

Check the pedal for smooth operation and uneven pedal effort or catching.

Brake pedal

Check the pedal for smooth operation and the proper clearance and freeplay. Check the brake booster function.

Brakes

At a safe place, check that the brakes do not pull to one side when applied.

Parking brake

Check that the pedal has the proper travel and that, on a safe incline, your vehicle is held securely with only the parking brake applied.

Automatic transmission "Park" mechanism

Check the lock release button of the selector lever for proper and smooth operation. On a safe incline, check that your vehicle is held securely with the selector lever in "P" position and all brakes released.

Engine compartment

Items listed below should be checked from time to time, e.g. each time when refueling.

Washer fluid

Make sure there is sufficient fluid in the tank. See page 294 for additional information.

Engine coolant level

Make sure the coolant level is between the Upper and Lower lines on the see-through reservoir when the engine is cold. See page 264 for additional information.

Battery

Your Lexus has a maintenance free battery. You do not have to add distilled water. For longer life of the battery, however, see page 286 for additional information.

Brake fluid level

Make sure the brake fluid level is correct. See page 271 for additional information.

Engine oil level

Check the level on the dipstick with the engine turned off and the vehicle parked on a level spot. See page 261 for additional information.

Suspension fluid level

Make sure the suspension fluid level is correct. See page 273 for additional information.

Power steering fluid level

Check the level through the reservoir. The level should be in the "HOT" or "COLD" range depending on the fluid temperature. See page 272 for additional information.

Exhaust system

If you notice any change in the sound of the exhaust or smell exhaust fumes, have the cause located and corrected immediately. (See engine exhaust cautions in Section 3-1.)

DOES YOUR VEHICLE NEED REPAIRING?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling, or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat–looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driving straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches floors, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal
- Engine continually runs hot; oil pressure gauge stays low.

If you notice any of these clues, take your vehicle to your Lexus dealer as soon as possible. It probably needs adjustment or repair.

CAUTION

Do not continue driving with the vehicle unchecked. It could result in serious vehicle damage and possibly personal injury.

SECTION **6** – 1

SERVICE PROCEDURES AND SPECIFICATIONS

Introduction

Vehicle identification	248
Engine compartment overview	249
Do-it-yourself service precautions	250
Parts and tools	251

VEHICLE IDENTIFICATION



The vehicle identification number (VIN) is the legal identifier for your vehicle. This number is on the left top of the instrument panel and can be seen through the windshield from outside.

This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.



The vehicle identification number (VIN) is also on the Certification Label.



The engine number is stamped on the engine block as shown.

ENGINE COMPARTMENT OVERVIEW 1 Engine oil filler cap 2 1 2 3 Engine oil level dipstick 3 Brake fluid reservoir 4 Fuse box 5 Battery 10 6 Washer fluid tank VE 7 Fuse box 0 9 8 Engine coolant reservoir - 4 9 Power steering fluid reservoir Suspension fluid 10 reservoir 6 7 5 8 61X004c

DO-IT-YOURSELF SERVICE PRECAUTIONS

If you perform maintenance yourself, be sure to follow the correct procedure given in this Section.

You should be aware that improper or incomplete servicing may result in operating problems.

Performing do-it-yourself maintenance during the warranty period may affect your warranty coverage. Read the separate Lexus Warranty statement for details and suggestions.

This Section gives instructions only for those items that are relatively easy for an owner to perform. As explained in Section 5, there are still a number of items that must be performed by a qualified technician with special tools.

For information on tools and parts for do-it-yourself maintenance, see "Parts and tools".

Utmost care should be taken when working on your vehicle to prevent accidental injury. Here are a few precautions that you should be especially careful to observe:

CAUTION

- When the engine is running, keep hands, clothing, and tools away from the moving fan and engine drive belt. (Removing rings, watches, and ties is advisable.)
- Right after driving, the engine compartment the engine, radiator, exhaust manifold and power steering fluid reservoir and spark plug boots, etc. – will be hot. So be careful not to touch them. Oil, other fluids and spark plugs may also be hot.
- If the engine is hot, do not remove the radiator cap or loosen the drain plugs to prevent burning yourself.
- Do not smoke, cause sparks or allow open flames around fuel or the battery. Their fumes are flammable.
- Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.
- Do not get under your vehicle with just the body jack supporting it. Always use automotive jack stands or other solid supports.
- Use eye protection whenever you work on or under your vehicle where you may be exposed to flying or falling material, fluid spray, etc.

NOTICE

- Remember that battery and ignition cables carry high currents or voltages. Be careful of accidentally causing a short circuit.
- Before closing the engine hood, check to see that you have not forgotten any tools, rags, etc.
- Do not drive with the air cleaner removed, or excessive engine wear could result. Also backfiring could cause a fire in the engine compartment.
- Do not overfill automatic transmission fluid, transfer oil and power steering fluid, or the transmission, transfer and power steering could be damaged.
- Be careful not to scratch the glass surface with the wiper frame.

PARTS AND TOOLS

Here is a list of parts and tools you will need to perform do-it-yourself maintenance. Remember all Lexus parts are designed in metric sizes, so your tools must be metric.

Checking the engine oil level

Parts (if level is low):

• Use API grade SH, "Energy-Conserving II" or SJ, "Energy-Conserving" multigrade engine oil or ILSAC multigrade engine oil. For recommended oil viscosity, see page 263.

Tools:

- Rag or paper towel
- Funnel (only for adding oil)

Checking the engine coolant level

Parts (if level is low):

- Ethylene–glycol coolant
- Demineralized or distilled water

Tools:

• Funnel (only for adding coolant)

Checking brake fluid

Parts (if level is low):

• FMVSS No. 116 DOT 3 or SAE J1703 brake fluid

Tools:

- Rag or paper towel
- Funnel (only for adding fluid)

Checking power steering fluid

Parts (if level is low):

• Automatic transmission fluid DEXRON[®]II or III

Tools:

- Rag or paper towel
- Funnel (only for adding fluid)

Checking suspension fluid AHC

Parts (if level is low):

• Suspension fluid AHC

Tools:

- Rag or paper towel
- Funnel (only for adding fluid)

Checking battery condition

Non-maintenance batteries

Tools:

- Warm water
- Baking soda
- Grease
- Conventional wrench (for terminal clamp bolts)

Maintenance type batteries

Parts (if level is low):

• Distilled water

Tools:

- Warm water
- Baking soda
- Grease
- Conventional wrench (for terminal clamp bolts)
- Coin (for vent plugs)
- Funnel (only for adding distilled water)

Checking and replacing the blade type fuses

Parts (if replacement is necessary):

• Fuse with same amperage rating as original

Checking the cartridge type fuses

Parts (if replacement is necessary):

• Genuine Lexus fuse or equivalent with same amperage rating as original

Adding washer fluid

Parts:

- Water
- Washer fluid containing antifreeze (for winter use)

Tools:

• Funnel

SECTION 6 – 2

SERVICE PROCEDURES AND SPECIFICATIONS

Engine

Specifications 250
Fuel
Facts about engine oil consumption 260
Used engine oil
Checking the engine oil level
Checking the engine coolant level 264
Spark plugs 26

SPECIFICATIONS

- GENERAL

Model	2UZ-FE
Туре	8 cylinder V Type, 4 cycle, gasoline
Bore and stroke	94.0 X 84.0 mm (3.70 X 3.30 in.)
Displacement	4664 cm ³ (284.5 cu.in.)
Valve clearance (engine cold)	
Intake	0.20 mm (0.008 in.)
Exhaust	0.30 mm (0.012 in.)
Drive belt tension	Automatic adjustment

- LUBRICATION SYSTEM

Oil capacity Drain and refill with filter without filter Oil grade	 6.8 L (7.2 qt., 6.0 lmp.qt.) 6.4 L (6.8 qt., 5.6 lmp.qt.) API SH, "Energy–Conserving II" or SJ, "Energy–Conserving" multigrade engine oil or ILSAC multigrade engine oil
Recommended oil viscosity (SAE):	
	5W-30 Preferred
	10W-30
	*F -20 0 20 40 60 80 100
	°C -29 -18 -7 4 16 27 38
	Temperature range anticipated before next oil change

- COOLING SYSTEM

Cap	pacity	15.3 L (16.2 qt., 13.5 lmp.qt.)
Co	olant type	Ethylene – glycol antifreeze (Do not use alcohol type.)

– FUEL

[Fuel type	Only UNLEADED
	Octane rating	91 (Research octane number 96) or higher

- IGNITION SYSTEM

Spark plug	– Make	DENSO	SK20R11
		NGK	IFR6A11
	– Gap		1.1 mm (0.043 in.)

- ELECTRICAL SYSTEM

Battery – Maintenance type battery Specific gravity reading at 20°C (68°F	1.250 – 1.290 Fully charged 1.160 – 1.200 Half charged 1.060 – 1.100 Discharged
Charging rates Quick charge Slow charge	15A max. 5A max.
 Non-maintenance battery Open voltage at 20°C (68°F): 	12.6 - 12.8 VFully charged12.2 - 12.4 VHalf charged11.8 - 12.0 VDischarged[Voltage that is checked 20 minutes after the key is removed withall the lights turned off]
Charging rates	5A max.

6

257

FUEL

Fuel type

Your vehicle must use only unleaded gasoline.

To help prevent gas station mixups, your Lexus has a smaller fuel tank opening. The special nozzle on pumps with unleaded fuel will fit it, but the larger nozzle on pumps with leaded gas will not.

At a minimum, the gasoline you use should meet the specifications of ASTM D4814 in the U.S.A. and CGSB 3.5–M93 in Canada.

NOTICE

Do not use leaded gasoline. Use of leaded gasoline will cause the three-way catalytic converter to lose its effectiveness and the emission control system to function improperly. Also, this can increase maintenance costs.

Octane rating

Select premium unleaded gasoline with an Octane Rating of 91 (Research Octane Number 96) or higher for optimum engine performance. However, if such premium type cannot be obtained, you may temporarily use unleaded gasoline with an Octane Rating as low as 87 (Research Octane Number 91).

Use of unleaded fuel with an octane number or rating lower than stated above will cause persistent heavy knocking. If severe, this will lead to engine damage.

If your engine knocks ...

If you detect heavy knocking even when using the recommended fuel, or if you hear steady knocking while holding a steady speed on level roads, consult your Lexus dealer.

However, now and then, you may notice light knocking for a short time while accelerating or driving up hills. This is no cause for concern.

Gasolines containing detergent additives

Lexus recommends use of gasolines that contain detergent additives to avoid build-up of engine deposits.

For further details, ask your Lexus dealer or a local gasoline retailer.

Improved gasolines

The American Automobile Manufacturers Association (AAMA) has developed a specification of improved gasolines. The AAMA specification offers optimal fuel information for better vehicle performance and better protection of your engine.

Lexus recommends the use of gasolines that meet the AAMA specification, if available, for improved drivability and emission control system.

Gasolines containing MTBE

Gasolines that contain MTBE (Methyl Tertiary–Butyl Ether) are available in the market. If you use a gasoline mixed with MTBE, make certain that it does not contain more than 15% of MTBE.

If the use of gasolines containing MTBE causes poor drivability and/or poor fuel economy, you should stop using them.

Gasolines containing MMT

Some gasolines contain an octane–enhancing additive called MMT (methylcyclopentadienyl manganese tricarbonyl).

Lexus does not recommend the use of gasolines that contain MMT. If fuels containing MMT are used, your emission control system may be adversely affected. The Malfunction Indicator Lamp on the instrument cluster may come on. If this happens, contact your Lexus dealer for service.

Gasolines containing alcohol

Gasohol is a mixture of gasoline and ethanol. If you use gasohol in your Lexus, be sure that it is unleaded, has an octane rating no lower than 87 and does not contain more than 10% ethanol. Lexus does not recommend the use of gasolines containing methanol.

If you use gasoline containing methanol, use only gasoline meeting the requirements above and also containing less than 5% methanol with cosolvents and corrosion inhibitors for methanol.

NOTICE

- Do not use gasohol other than stated above. It will cause fuel system damage or vehicle performance problems.
- If drivability problems are encountered (poor hot starting, vaporizing, engine knock, etc.), discontinue its use.
- Take care not to spill gasohol during refueling. Gasohol may cause paint damage.

Fuel tank capacity

96 L (25.4 gal., 21.1 lmp.gal.)

FACTS ABOUT ENGINE OIL CONSUMPTION

Functions of engine oil

Engine oil has the primary function of lubricating and cooling the inside of the engine, and plays a major role in maintaining the engine in proper working order.

Engine oil consumption

It is normal that an engine should consume some engine oil during normal engine operation. The causes of oil consumption in a normal engine are as follows.

- Oil is used to lubricate pistons, piston rings and cylinders. A thin film of oil is left on the cylinder wall when a piston moves downwards in the cylinder. High negative pressure generated when the vehicle is decelerating sucks some of this oil into the combustion chamber. This oil as well as some part of the oil film left on the cylinder wall is burned by the high temperature combustion gases during the combustion process.
- Oil is also used to lubricate the stems of the intake valves. Some of this oil is sucked into the combustion chamber together with the intake air and is burned along with the fuel. High temperature exhaust gases also burn the oil used to lubricate the exhaust valve stems.

The amount of engine oil consumed depends on the viscosity of the oil, the quality of the oil and the way the vehicle is driven.

More oil is consumed by high-speed driving and frequent acceleration and deceleration.

A new engine consumes more oil, since its pistons, piston rings and cylinder walls have not become conditioned.

When judging the amount of oil consumption, keep in mind that the oil may have become diluted, making it difficult to judge the true level accurately.

For example, if a vehicle is used for repeated short trips and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km (600 miles) or more. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed.

The diluting ingredients evaporate out when the vehicle is then driven at high speeds, as on an expressway, making it appear that oil is excessively consumed after driving at high speeds.

Importance of engine oil level check

One of the most important points in proper vehicle maintenance is to keep the engine oil at the optimum level so that oil function will not be impaired. Therefore, it is essential that the oil level be checked regularly. Lexus recommends that the oil level be checked every time you refuel the vehicle.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

For detailed information on oil level check, see "Checking the engine oil level" on page 261.

USED ENGINE OIL

A CAUTION

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation or skin cancer, so care should be taken to avoid prolonged and repeated contact with it. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Do not leave used oil within the reach of children.
- Dispose of used oil and used oil filters only in a safe and acceptable manner. Do not dispose of used oil and used oil filters in household trash, in sewers or onto the ground. Call your Lexus dealer or a service station for information concerning recycling or disposal.

CHECKING THE ENGINE OIL LEVEL




With the engine at operating temperature and turned off, check the oil level on the dipstick.

1. To get a true reading, the vehicle should be on a level spot. After turning off the engine, wait a few minutes for the oil to drain back into the bottom of the engine.

2. Pull out the dipstick, and wipe it clean with a rag.

3. Standing up on the left side of the vehicle, reinsert the dipstick in the direction so that the "ENGINE OIL" on top should be read correctly and push it in as far as it will go, or the reading will not be correct.

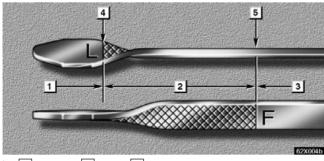

▶ 1 Add oil 2 O.K. 3 Too full

4. Pull the dipstick out and look at the oil level on the end. If it is between the full line (5) and the low line (4), it is O.K.



If the oil level is below or only slightly above the low line, add engine oil of the same type as already in the engine.

Remove the oil filler cap and add engine oil a little at a time, checking the dipstick. The approximate quantity of oil needed to fill between the low line and the full line on the dipstick is indicated below for reference.

When the level reaches within the correct range, return the filler cap and turn the cap clockwise until you hear a click.

Oil quantity. L (qt., lmp. qt.) 1.5 (1.6, 1.3)


NOTICE

Avoid overfilling, or the engine could be damaged. Check the oil level on the dipstick once again after adding the oil.

Engine oil selection

Use API SH, "Energy–Conserving II" or SJ, "Energy–Conserving" multigrade engine oil or ILSAC multigrade engine oil.


Recommended viscosity (SAE):

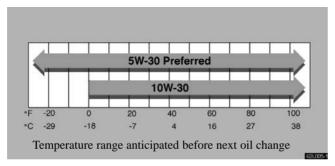

SAE 5W-30 is the best choice for your vehicle, for good fuel economy, and good starting in cold weather.

If you use SAE 10W-30 engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 5W-30 engine oil is recommended.

Oil identification marks

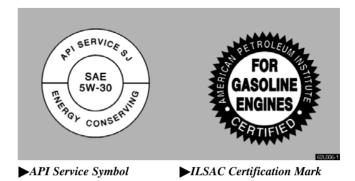


Either or both API registered marks are added to some oil containers to help you select the oil you should use.

• The API Service Symbol is located anywhere on the outside of the container.

The top portion of the label shows the oil quality by API (American Petroleum Institute) designation such as SJ. The center portion of the label shows the SAE viscosity grade such as SAE 5W–30. "Energy–Conserving", shown in the lower portion, indicates that the oil has fuel–saving capabilities.

• The ILSAC (International Lubricant Standardization and Approval Committee) Certification Mark is displayed on the front of the container.

CHECKING THE ENGINE COOLANT LEVEL

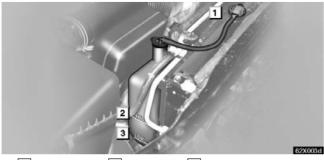



Park the vehicle at a level spot and look at the see-through coolant reservoir when the engine is cool. The coolant level is satisfactory if it is between the upper and lower lines on the tank. If the level is low, add ethylene–glycol type coolant.

The coolant level in the reservoir will vary with engine coolant temperature. However, if the level is on or below the lower line, add coolant to bring the level up to the upper line.

Use only ethylene–glycol type coolant. It will prevent freezing and corrosion. Neither supplemental inhibitors nor additives are needed nor recommended. (For information on ethylene–glycol coolant, see also "Engine coolant selection" described below.)

If the coolant level drops within a short time after replenishing, there may be a leak in the system. Visually check the radiator, hoses, radiator cap, drain cock and water pump.

If you can find no leak, have your Lexus dealer test the radiator cap pressure and check for leaks in the cooling system.

CAUTION

To prevent burning yourself, do not remove the radiator cap when the engine is hot.

Engine coolant selection

Your coolant must contain ethylene–glycol antifreeze. In addition to preventing freezing and subsequent damage to the engine, this will also prevent corrosion. Further supplemental inhibitors or additives are neither needed nor recommended.

Read the antifreeze container for information on freeze protection. Follow the manufacturer's directions for how much to mix with water. The total capacity of the cooling system is given on page 257. We recommend 50% solution be used for your Lexus, or a sufficient quantity to provide protection to about -35° C (-31° F).

NOTICE

Do not use alcohol type antifreeze or plain water alone.

SPARK PLUGS



Your engine is fitted with iridium-tipped spark plugs.

NOTICE

Use only iridium-tipped spark plugs for your engine performance and smooth drivability.

SECTION 6 – 3

SERVICE PROCEDURES AND SPECIFICATIONS

Chassis

Specifications 268
Checking brake fluid 271
Checking power steering fluid 272
Checking suspension fluid AHC 273
Checking tire pressure 274
Rotating tires
Checking and replacing tires 275
Installing snow tires and chains 278
Replacing wheels 279
Aluminum wheel precautions 280
Suspension and chassis 280

6

SPECIFICATIONS

- TRANSFER

Oil capacity	1.3 L (1.4 qt., 1.1 lmp.qt.)
Oil type	Multipurpose gear oil API GL-4 or GL-5
Recommended oil viscosity	SAE 75W–90

- AUTOMATIC TRANSMISSION

Fluid capacity Drain and refill	Up to 1.9 L (2.0 qt., 1.7 lmp.qt.)
Fluid type	Automatic transmission fluid D–II or DEXRON [®] III (DEXRON [®] II)

- DIFFERENTIAL

Oil capacity Front Rear With rear differential lock Without rear differential lock	1.7 L (1.8 qt., 1.4 lmp.qt.) 3.2 L (3.4 qt., 2.8 lmp.qt.) 3.3 L (3.5 qt., 2.9 lmp.qt.)
Oil type	Hypoid gear oil API GL–5
Standard differential	Hypoid gear oil API GL–5 for limited slip differential
Limited slip differential	Above –18°C (0°F): SAE 90
Oil viscosity	Below –18°C (0°F): SAE 80W or SAE 80W–90

- BRAKES

Pedal clearance	116 mm (4.57 in.) Min. *1
Pedal freeplay	1 – 6 mm (0.04 – 0.24 in.)
Brake pad wear limit	1.0 mm (0.04 in.)
Parking brake lining wear limit	1.0 mm (0.04 in.)
Parking brake adjustment	4 – 6 clicks *2
Fluid type	SAE J1703 or FMVSS No. 116 DOT 3

*1: Minimum pedal clearance when depressed with the pressure of 490 N (50 kgf, 110 lbf.) with the engine running

*2: Parking brake adjustment when pulled with the force of 196 N (20 kgf, 44 lbf.)

- CHASSIS LUBRICATION

Wheel bearings	Lithium base wheel bearing grease, NLGI No.2
Steering knuckles	Molybdenum-disulfide lithium base chassis grease, NLGI No.2
Propeller shafts	Lithium base wheel bearing grease, NLGI No.2

- STEERING

Freeplay	Less than 40 mm (1.6 in.)	
Power steering fluid	Automatic transmission fluid DEXRON [®] II or III	

- SUSPENSION

Fluid type	Suspension fluid AHC
------------	----------------------

6

- TIRES AND WHEELS

Tire size	P275/70R16 114S
Tire inflation pressure	
Recommended cold tire inflation pressure Vehicle load up to four occupants	Front220 kPa (2.2 kgf/cm² or bar, 32 psi)Rear220 kPa (2.2 kgf/cm² or bar, 32 psi)
Vehicle loaded up to vehicle capacity weight	Front 220 kPa (2.2 kgf/cm² or bar, 32 psi) Rear 220 kPa (2.2 kgf/cm² or bar, 32 psi)
	For sustained high speeds above 160 km/h (100 mph), in countries where such speeds are permitted by law, add 80 kPa (0.9 kgf/cm ² , 0.8 bar, 12 psi) to the front tires and rear tires, but never exceed the maximum cold tire pressure molded on the tire sidewall.
Wheel size	16 x 8 JJ
Wheel nut torque	131 N·m (13.4 kgf·m, 97 ft·lbf.)

CHECKING BRAKE FLUID



To check the fluid level, simply look at the see-through reservoir. The level should be between the "MAX" and "MIN" lines on the tank.

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.

If the reservoir needs frequent refilling, it may indicate a serious mechanical problem.

If the level is low, add FMVSS No.116 DOT 3 or SAE J1703 brake fluid to the brake reservoir.

Refilling brake fluid:

1. Turn the ignition switch off.

2. Depress the brake pedal more than 40 times.

3. Remove the reservoir cover by hand. Add brake fluid up to the "MAX" line.

If you do not follow the procedure above, the reservoir may overflow.

Use only newly opened brake fluid. Once opened, brake fluid absorbs moisture from the air, and excess moisture can cause a dangerous loss of braking efficiency.

CAUTION

Take care when filling the reservoir because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets in your hands or eyes, flush them with clean water.

NOTICE


If you spill some of the fluid, be sure to wipe it off to prevent it from damaging the parts or paintwork.

CHECKING POWER STEERING FLUID



Check the fluid level on the dipstick. If necessary, add automatic transmission fluid DEXRON $^{\textcircled{B}}$ II or III.

If the vehicle has been driven around 80 km/h (50 mph) for 20 minutes (a little more in frigid temperatures), the fluid is hot ($60^{\circ}C - 80^{\circ}C$ or $140^{\circ}F - 175^{\circ}F$). You may also check the level when the fluid is cold (about room temperature, $10^{\circ}C - 30^{\circ}C$ or $50^{\circ}F - 85^{\circ}F$) if the engine has not been run for about five hours.

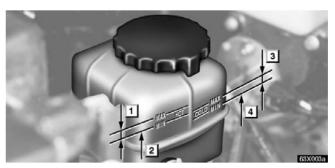

▶ 1 If hot O.K. 2 If hot add 3 If cold O.K. 4 If cold add

Clean all dirt off the reservoir and look at the fluid level. If the fluid is cold, the level should be in the "COLD" range. Similarly, if it is hot, the fluid level should be in the "HOT" range. If the level is at the low side of the appropriate range, add automatic transmission fluid DEXRON[®]II or III to bring the level within the range.

To remove the filler cap, turn it counterclockwise and lift up. To reinstall it, turn it clockwise. After replacing the filler cap, visually check the steering box case, vane pump and hose connections for leaks or damage.

CAUTION

The reservoir may be hot so be careful not to burn yourself.

NOTICE

- Avoid overfilling, or the power steering could be damaged.
- When adding the power steering fluid, avoid spilling it. The generator under the power steering reservoir could be damaged if fluid is spilled on it.

CHECKING SUSPENSION FLUID AHC



▶ 1 "MAX" line 2 "MIN" line

Under the unloaded condition, check the suspension fluid AHC in the following way.

1. Start the engine and put the vehicle height in the "LO" (Low) mode and then "N" (Normal) mode.

2. Turn off the ignition switch about 30 seconds after the "N" (Normal) mode indicator light comes on.

3. Make sure the fluid level is between "MAX" and "MIN".

If the fluid level is lower than "MIN", have suspension fluid AHC filled by your Lexus dealer.

CHECKING TIRE PRESSURE



The recommended cold tire pressures, tire size and the vehicle capacity weight are given on the label.


You should check the tire pressures every two weeks, or at least once a month. And don't forget the spare! The pressure for the spare tire should be 220 kPa (2.2 kgf/cm^2 or bar, 32 psi). Incorrect tire pressure can reduce tire life and make your vehicle less safe to drive.

Low tire pressure results in excessive wear, poor handling, reduced fuel economy, and the possibility of blowouts from overheated tires. Also, low tire pressure can cause poor sealing of the tire bead. If the tire pressure is excessively low, there is the possibility of wheel deformation and/or tire separation. So keep your tire pressures at the proper level. If a tire needs frequent refilling, have it checked by your Lexus dealer. High tire pressure produces a harsh ride, handling problems, excessive wear at the center of the tire tread, and a greater possibility of tire damage from road hazards.

The following instructions for checking tire pressure should be observed:

- The pressure should be checked only when the tires are cold. If your vehicle has been parked for at least 3 hours and has not been driven for more than 1.5 km or 1 mile since, you will get an accurate cold tire pressure reading.
- Always use a tire pressure gauge. The appearance of the tire can be misleading. Besides, tire pressures that are even just a few pounds off can degrade handling and ride.
- **Do not bleed or reduce tire pressure after driving.** It is normal for the tire pressure to be higher after driving.
- Never exceed the vehicle capacity weight. The passengers and luggage weight should be located so that the vehicle is balanced.
- Be sure to reinstall the tire valve caps. Without the valve caps, dirt or moisture could get into the valve core and cause air leakage. If the caps have been lost, have new ones put on as soon as possible.

ROTATING TIRES

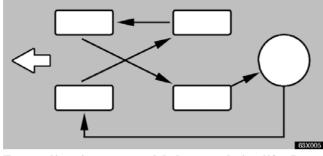

To equalize tire wear and help extend tire life, Lexus recommends that you rotate your tires approximately every 12000 km (7500 miles). However, the most appropriate timing for tire rotation may vary according to your driving habits and road surface conditions.


The wheel assemblies must be rotated as illustrated above.

When rotating tires, check for uneven wear and damage. Abnormal wear is usually caused by incorrect tire pressure, improper wheel alignment, out–of balance wheels, or severe braking.

Before storing radial, snow or studded tires, mark the direction of rotation and be sure to install them in the same direction when using them again. Tires should be stored in a cool dry place.

CHECKING AND REPLACING TIRES

When to replace your tires

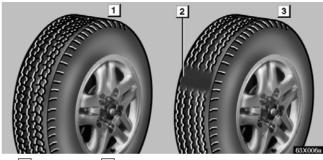

New tread 2 Tread wear indicator
 Worn tread

Replace the tires when the tread wear indicators show. The location of the tread wear indicators is shown by the marks molded on the sidewall of each tire.

The tires on your Lexus have built—in tread wear indicators to help you know when the tires need replacement. When the tread depth wears to 1.6 mm (0.06 in.) or less, the indicators will appear. If you can see the indicators in two or more adjacent grooves, the tire should be replaced.

The effectiveness of snow tires is lost if the tread wears down below 4 mm (0.16 in.).

If you have tire damage such as cuts, splits, cracks deep enough to expose the fabric, or bulges indicating internal damage, the tire should be replaced.

If a tire often goes flat or cannot be properly repaired due to the size or location of a cut or other damage, it should be replaced. If you are not sure, consult with your Lexus dealer.

If an air loss occurs while driving, do not continue driving with a deflated tire. Driving even a short distance can damage a tire beyond repair.

Any tires which are over 6 years old must be checked by a qualified technician even if damage is not obvious.

Tires deteriorate with age even if they have never or seldom been used.

This also applies to the spare tire and tires stored for future use.

Uniform tire quality grading

This information has been prepared in accordance with regulations issued by the National Highway Traffic Safety Administration of the U.S. Department of Transportation. It provides the purchasers and/or prospective purchasers of Lexus vehicles with information on uniform tire quality grading.

Your Lexus dealer will help answer any questions you may have as you read this information.

DOT quality grades – All passenger vehicle tires must conform to Federal Safety Requirements in addition to these grades. These quality grades are molded on the sidewall.

Treadwear – The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and a half (1 - 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction A, B, C – The traction grades, from highest to lowest, are A, B and C, and they represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

Warning: The traction grade assigned to this tire is based on braking (straight ahead) traction tests and does not include cornering (turning) traction.

Temperature A, B, C – The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

Warning: The temperature grades for this tire are established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Tire selection

When replacing a tire, use only the same size and construction as originally installed and with the same or greater load capacity.

Using any other size or type of tire may seriously affect handling, ride, speedometer/odometer calibration, ground clearance, and clearance between the body and tires or snow chains.

Do not mix radial, belted, or conventional tires on your vehicle.

Do not use tires or wheels other than the manufacturer's recommended size.

It can cause dangerous handling characteristics, resulting in loss of control. If you need to change from conventional tires to radial tires or vice versa, replace them as a set.

INSTALLING SNOW TIRES AND CHAINS

When to use snow tires or chains

Snow tires or chains are recommended when driving on snow or ice.

On wet or dry roads, conventional or radial tires provide better traction than snow or studded tires.

Snow tire selection

If you need snow tires, select the same size, construction and load capacity as the original tires on your Lexus.

Do not use tires other than stated above. Since your vehicle has radial tires as original equipment, make sure your snow tires also have radial construction. Do not install studded tires without first checking local regulations for possible restrictions.

Snow tire installation

Snow tires should be installed on all wheels.


Installing snow tires on the rear wheels only can lead to an excessive difference in road grip capability between the front and rear tires which could cause loss of vehicle control.

A CAUTION

• Do not drive with the snow tires incorrectly inflated.

• Never drive over 105 km/h (65 mph) with any type of snow tires.

Tire chain selection

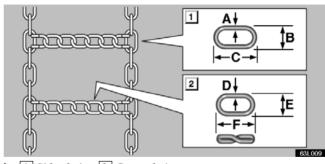

▶ 1 Side chain 2 Cross chain

Use the tire chains of correct size.

For 275/70R16 tires, use the following type chains.

		mm	(in.)
A:	Diameter of side chain	5.0	(0.20)
B:	Width of side chain	18.0	(0.71)
C:	Length of side chain	46.1	(1.81)
D:	Diameter of cross chain	6.0	(0.24)
E:	Width of cross chain	22.0	(0.87)
F:	Length of cross chain	37.5	(1.48)

Regulations regarding the use of tire chains vary according to location or type of road. Always check the local regulations before installing chains.

Chain installation

Install the chains on the rear tires as tightly as possible. Do not use tire chains on the front tires. Retighten chains after driving 0.5 - 1.0 km (1/4 - 1/2 mile).

When installing chains on your tires, carefully follow the instructions of the chain manufacturer.

If wheel covers are used, they will be scratched by the chain band, so remove the covers before putting on the chains.

CAUTION

- Do not exceed 50 km/h (30 mph) or the chain manufacturer's recommended speed limit, whichever is lower.
- Drive carefully avoiding bumps, holes, and sharp turns, which may cause the vehicle to bounce.
- Avoid sharp turns or locked-wheel braking, as use of chains may adversely affect vehicle handling.

REPLACING WHEELS

When to replace your wheels

If you have wheel damage such as bending, cracks or heavy corrosion, the wheel should be replaced.

If you fail to replace damaged wheels, a tire may slip off a wheel or they may cause loss of handling control.

Replacement with used wheels is not recommended as they may have been subjected to rough treatment or high mileage and could fail without warning. Also, bent wheels which have been straightened may have hidden structural damage and therefore should not be used. Never use an inner tube in a leaking wheel which is designed for a tubeless tire.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width, and offset.

Correct replacement wheels are available at your Lexus dealer.

A wheel of a different size or type may adversely affect handling, wheel and bearing life, brake cooling, speedometer/odometer calibration, stopping ability, headlight aim, bumper height, vehicle ground clearance, and tire or snow chain clearance to the body and chassis.

ALUMINUM WHEEL PRECAUTIONS

- After driving your vehicle the first 1600 km (1000 miles), check that the wheel nuts are tight.
- If you have rotated, repaired, or changed your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- When using tire chains, be careful not to damage the aluminum wheels.
- Use only the Lexus wheel nuts and wrench designed for your aluminum wheels.
- When balancing your wheels, use only Lexus balance weights or equivalent and a plastic or rubber hammer.
- As with any wheel, periodically check your aluminum wheels for damage. If damaged, replace immediately.

SUSPENSION AND CHASSIS

CAUTION

Do not modify the suspension/chassis with lift kits, spacers, springs, etc. It can cause dangerous handling characteristics, resulting in loss of control.

<u>SECTION</u> **6** – 4

SERVICE PROCEDURES AND SPECIFICATIONS

Electrical components

Specifications	282
Checking battery condition	286
Battery recharging precautions	290
Checking and replacing the blade type fuses	291
Checking the cartridge type fuses	293
Adding washer fluid	294
Replacing light bulbs	295


SPECIFICATIONS

- FUSE LOCATIONS




1 2 Engine compartment
 3 Driver's side kick panel


- FUSES

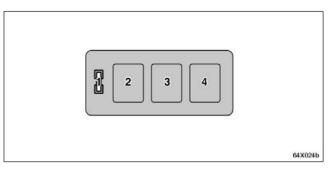

Engine compartment

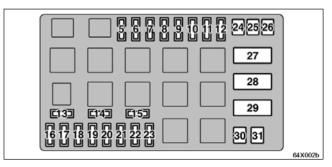

Engine compartment

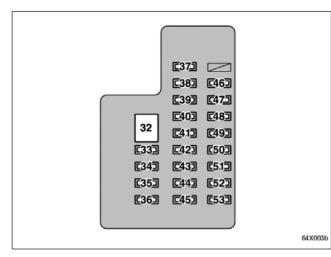

Driver's side kick panel

No.	Fuse	AMPER E	CIRCUIT
1	ALT-S	7.5	Charging system
2	MAIN	100	All components in "AM2", "STARTER", "EFI or ECD", "HORN", "HAZ-TRN", "ABS NO.2", "HEAD (LH-UPR)", "HEAD (RH-UPR)", "HEAD (LH-LWR)", "HEAD (RH-LWR)", "GLOW", "THROTTLE" and "RADIO" fuses
3	ALT	140	All components in "J/B NO.2", "MIR-HTR", "SEAT HTR", "FUEL HTR", "A.C", "AM1 NO.1", "AM1 NO.2", "ACC", "CDS FAN", "HTR", "AHC", "ABS NO.1" and "HEAD CLNER" fuses
4	J/B NO.2	100	All components in "ECU–B", "FR FOG", "TAIL", "STOP", "DOME", "POWER", "RR A.C", "DEFOG", "OBD", "AHC–B" and "RR HTR" fuses
5	AM1 NO.2	20	Starting system, Turn signal lights, Emergency flashers, All components in "CIGAR", "ECU–IG", "MIRR" and "SRS" fuses
6	A.C	20	Air conditioning system
7	POWER HTR	10	Air conditioning system

6

No.	Fuse	AMPER E	CIRCUIT
8	SEAT HTR	15	Seat heaters
9	FUEL HTR	20	Fuel heater
10	MIR HTR	15	Outside rear view mirror defogger
11	HEAD CLNER	20	Headlight cleaner
12	ODS FAN	20	Electric cooling fan
13	EFI or ECD	20	Multiport fuel injection system/Sequential multiport fuel injection, Emission control system, Fuel pump
14	HORN	10	Horns
15	THROTTL E	15	Electronic throttle control system
16	RADIO	20	Audio system
17	HAZ-TRN	15	Emergency flashers, Turn signal lights
18	AM2	30	Starting system, Multiport fuel injection system/Sequential multiport fuel injection, All components in "IGN" fuse
19	TEL	10	No circuit
20	HEAD (LH-UPR)	20	Left-hand headlight (high beam)

1				
No.	Fuse	AMPER E	CIRCUIT	
21	HEAD (RH-UPR)	20	Right–hand headlight (high beam), Daytime running light system	
22	HEAD (LH-LWR)	10	Left-hand headlight (low beam), Fog light	
23	HEAD (RH-LWR)	10	Right-hand headlight (low beam)	
24	ABS NO.1	40	Anti-lock brake system	
25	АНС	50	Active height control suspension (AHC)	
26	ACC	50 All components in "MIRR", "CIGAR" and "SRS" fuses		
27	AM1 NO.1	80	Charging system, Outside rear view mirror defogger, All components in "AM1 NO.2", "GAUGE", "WIPER", "AHC–IG", "DIFF", "A.C", "POWER HTR", "FUEL HTR" and "SEAT HTR" fuses	
28	HTR	60	Air conditioning system	
29	GLOW	80	No circuit	
30	ABS NO.2	40	Anti-lock brake system	
31	STARTER	30	Stating system	
32	POWER	30	Power window, Electronic moon roof, Power seat system, Power door lock control system	

No.	Fuse	AMPER E	CIRCUIT
33	IGN	10	SRS, Seat belt pretensioners, Multiport fuel injection system/Sequential multiport fuel injection system, Anti–lock brake system, Discharge warning light, Engine immobiliser system, Cruise control system cancel device
34	CIGAR	15	Cigarette lighter
35	SRS	15	SRS, Seat belt pretensioners
36	MIRR	10	Power rear view mirrors
37	RR A.C	30	Rear air conditioning system
38	STOP	15	Stop lights, High mounted stoplight
39	FR FOG	15	Fog lights
40	I/UP	7.5	Engine idle up system
41	WIPER	20	Window shield wipers and washer, Rear window wiper and washer
42	GAUGE	15	Gauge and meters, Service reminder indicators and warning buzzers (except discharge, open door and SRS warning lights), Back–up lights
43	DIFF	20	Rear differential lock system
44	AHC-IG	20	Active height control suspension (AHC)

No.	Fuse	AMPER E	CIRCUIT
45	DOME	10	Ignition switch lights, Garage door opener, Door courtesy lights, Interior lights, Personal lights
46	PWR OUTLET	15	Power outlets
47	ECU–IG	15	Power seat system, Automatic transmission shift lock system, Anti–lock brake system
48	RR HTR	10	Rear air conditioning
49	OBD	10	On-board diagnosis system
50	АНС-В	15	Active height control suspension (AHC)
51	TAIL	15	Daytime running light system, Tail lights, License plate lights, Parking lights, Instrument panel lights
52	ECU–B	10	Power door lock control system, Power window, Rear window wiper, Illuminated entry system
53	DEFOG	20	Rear window defogger

CHECKING BATTERY CONDITION

Precautions

CAUTION

BATTERY PRECAUTIONS

The battery produces flammable and explosive hydrogen gas.

- Do not cause a spark by contacting the battery terminals with tools.
- Do not smoke or light a match near the battery.

The electrolyte contains poisonous and corrosive sulfuric acid.

- Avoid contact with eyes, skin or clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the battery.
- Keep children away from the battery.

EMERGENCY MEASURES

• If electrolyte gets in your eyes, flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the medical office.

- If electrolyte gets on your skin, thoroughly wash the contacted area. If you feel a pain or burn, get medical attention immediately.
- If electrolyte gets on your clothes, there is a possibility of its soaking through to your skin, so immediately take off the exposed clothing and follow the procedure above, if necessary.
- If you happen to swallow electrolyte, drink a large quantity of water or milk. Follow with milk of magnesia, beaten raw egg or vegetable oil. Then go immediately for emergency help.

Checking battery exterior



▶ 1 Terminals 2 Hold-down clamp

Check the battery for corroded or loose connections, cracks, or loose hold-down clamps.

1. If the battery is corroded, wash it off with a solution of warm water and baking soda. Coat the terminals with grease to prevent further corrosion.

2. If the connections are loose, tighten the clamp bolts – but do not overtighten.

3. Tighten the hold–down clamp only enough to keep the battery firmly in place. Overtightening may damage the battery case.

NOTICE

- Make sure the engine and all accessories are turned off before performing maintenance.
- When checking the battery, remove the ground cable first and reinstall it last.
- Be careful not to cause a short circuit with tools.
- Take care no solution gets into the battery when washing it.

6

Checking battery fluid

There are 2 types of batteries: maintenance type and non-maintenance type.

A non-maintenance battery has "MAINTENANCE FREE BATTERY" on its top. A maintenance type battery does not have such indication.

Maintenance type battery


Check the fluid condition by the fluid level lines on the side of the battery. Or if the battery has a hydrometer on its top, you can also check the hydrometer.

Non-maintenance battery

Check the battery condition by the hydrometer on the top of the battery.

(a) Checking by the fluid level lines (Maintenance type battery only)





The fluid (electrolyte) level must be between the upper and lower lines.

When checking the fluid level, look at all six cells, not just one or two.

If the level is lower than the lower line, add distilled water. (See "Adding distilled water" on page 290.)

(b) Checking by the hydrometer





Maintenance type battery

- **1** BLUE Good condition.
- 2 WHITE Charging necessary. Have the battery checked by your Lexus dealer.
- **3** RED Add distilled water. (See "Adding distilled water" on page 290.)

Non-maintenance type battery


- **1** BLUE Good condition.
- 2 WHITE Charging necessary. Have the battery checked by your Lexus dealer.
- **3** RED Have the battery checked by your Lexus dealer.

NOTICE

(For non-maintenance type battery):

Do not refill the battery with water.

Adding distilled water (Maintenance type battery only)

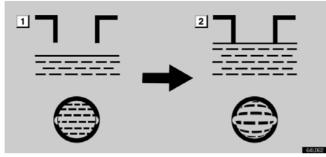

- ▶ 1 Low 2 O.K.
- 1. Remove the vent plugs.
- 2. Add distilled water to cells needing fluid.

If the side of your battery is covered, check the water level by looking down directly above the cell as illustrated above.

3. Retighten the vent plugs securely.

NOTICE

- Do not overfill the cells. Excess electrolyte could squirt out of the battery during heavy charging, causing corrosion or damage.
- Use a cover on the battery for longer life.

BATTERY RECHARGING PRECAUTIONS

During recharging, the battery is producing hydrogen gas.

Therefore, before recharging:

1. Maintenance type batteries - Remove the vent plugs.

2. If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.

3. Make sure the power switch on the recharger is off when connecting the charger cables to the battery and when disconnecting them.

A CAUTION


- Always charge the battery in an unconfined area. Do not charge the battery in a garage or closed room where there is not sufficient ventilation.
- Non-maintenance batteries: Only do a slow charge (5 A or less). Charging at a quicker rate is dangerous. The battery may explode causing personal injuries.

Maintenance type batteries: Be sure to remove the vent plugs before recharging.

NOTICE

Never recharge the battery while the engine is running. Also, make sure all accessories are turned off.

CHECKING AND REPLACING THE BLADE TYPE FUSES

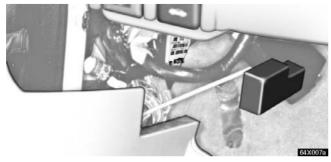


Driver's side kick panel



•Engine compartment


1. Turn the ignition switch off and open the fuse box lid.

Determine which fuse may be causing the problem. The lid of the fuse box shows the name of the circuit for each fuse.

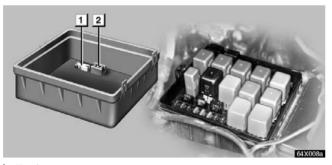


Engine compartment
 1 Pull-out tool
 2 Spare fuses

6

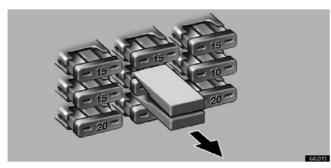

2. Make sure the inoperative component is turned off. Pull the suspected fuse straight out with the pull-out tool and check it. If it has blown, push a new fuse into the clips.

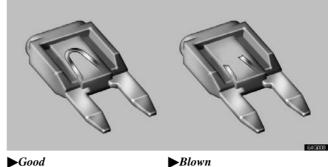

a. Look carefully at the fuse. If the thin wire is broken, the fuse has blown. If you are not sure or if it is too dark to see, try replacing the suspected fuse with one of the same value that you know is good.

b. Only install a fuse with the amperage rating designated on the fuse box lid.

If you do not have a spare fuse, in an emergency you can pull out the "CIGAR", "DOME" or "A·C" fuse, which may be dispensable for normal driving, and use it if its amperage rating is the same.

If you cannot use one of the same amperage, use one lower than, but as close as possible to, the amperage. If the amperage is lower than that specified, the fuse might blow out again but this does not indicate anything wrong. Be sure to get the correct fuse as soon as possible and return the substitute to its original clips.


It is a good idea to purchase a set of spare fuses and keep them in your vehicle for emergencies.

If the new fuse immediately blows out, there is a problem with the electrical system. Have your Lexus dealer correct it as soon as possible.

CAUTION

Never use a fuse with a higher amperage rating, or any other object, in place of a fuse. This may cause extensive damage and possibly a fire.

CHECKING THE CARTRIDGE TYPE FUSES

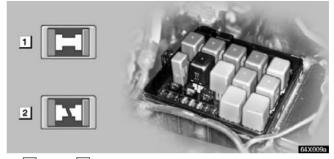

▶ 1 Good 2 Melted

If the headlights or other electrical components do not work and the blade type fuses are O.K., check the cartridge type fuses. If any of the cartridge type fuses are blown, they must be replaced.

If there is an overload in the circuits from the battery, the fuses are designed to blow before the entire wiring harness is damaged.


NOTICE

Before replacing the fuses, have the cause of electrical overload determined and repaired by your Lexus dealer.

CAUTION

Always use a genuine Lexus fuse or equivalent for replacement. Never install an ordinary wire – even for a temporary fix. This may cause extensive damage and possibly a fire.

ADDING WASHER FLUID

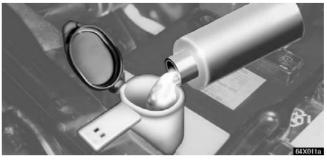

If the washer tank becomes nearly empty, add washer fluid.

You may use plain water as washer fluid. However, in cold areas where temperatures range below the freezing point, use washer fluid containing antifreeze. This product is available at your Lexus dealer and most auto parts stores. Follow the manufacturer's directions for how much to mix with water.

NOTICE

- Do not use engine antifreeze or any other substitute because it may damage your vehicle's paint.
- Do not fill washer fluid over the "NORMAL" level.

REPLACING LIGHT BULBS

The illustration on the following pages show the locations of light bulbs. If it is necessary to replace a bulb, take your vehicle to your Lexus dealer as soon as possible. Use bulbs with the bulb numbers and wattage ratings given in the table.


CAUTION

Halogen bulbs have pressurized gas inside and require special handling. They can burst or shatter if scratched or dropped. Hold a bulb only by its plastic or metal case. Do not touch the glass part of a bulb with bare hands.


NOTICE

Only use a bulb of the listed type.

LIGHT LOCATION

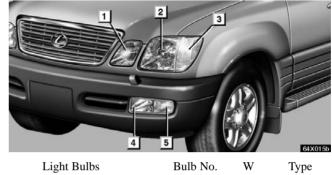

	Light Bulbs	Bulb No.	W	Туре
1	Headlights (High beam)	9005	60	А
2	Headlights (Low beam)	9006	55	В
3	Parking and front side marker lights	-	5	D
4	Fog light	-	55	С
5	Front turn signal lights	_	21	F

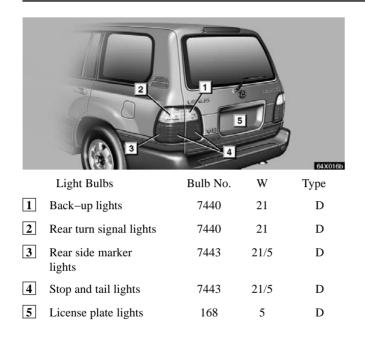

J.				
	Light Bulbs	Bulb No.	W	Туре
1	Vanity light	-	3	Е
2	Personal light	_	5	F
3	Personal light Vehicles with moon roof Vehicles without moon roof Interior light		8 5 8	E F E
4	Interior light	_	8	Е
5	Door courtesy light	_	3	D
6	Glovebox light	-	1.4	D

- A: HB3 halogen bulbs
- B: H1 halogen bulbs
- C: H3 halogen bulbs
- D: Wedge base bulbs
- E: Double end bulbs
- F: Single end bulbs

SECTION 6 – 5

SERVICE PROCEDURES AND SPECIFICATIONS

Body

Specifications	300
Protecting your vehicle from corrosion	301
Washing and waxing	302
Cleaning the interior	304

SPECIFICATIONS

- DIMENSIONS AND WEIGHT

Overall length	4890 mm (192.5 in.)
Overall width	1940 mm (76.4 in.)
Overall height	1875 mm (73.8 in.)*
Wheelbase	2850 mm (112.2 in.)
Tread – Front	1620 mm (63.8 in.)
– Rear	1615 mm (63.6 in.)
Vehicle capacity weight (occupants + luggage)	562 kg (1240 lb.)

*: Unladen vehicle

– FUEL TANK

Capacity	96 L (25.3 gal., 21.1 lmp.gal.)
----------	---------------------------------

PROTECTING YOUR VEHICLE FROM CORROSION

Proper care of your Lexus can help ensure long-term corrosion prevention.

The most common causes of corrosion to your vehicle are:

- The accumulation of road salt, dirt and moisture in hard-to-reach areas under the vehicle.
- Chipping of paint or undercoating caused by minor accidents or by stones and gravel.

The following conditions will cause or accelerate corrosion of your vehicle, so it is important to keep your vehicle, particularly the underside, as clean as possible and to repair any damage to paint or protective coatings as soon as possible.

- The presence of road salt or dust control chemicals, salt in the air near the sea coast, industrial air pollution.
- High humidity, especially at temperatures just above freezing point.
- Certain parts of your vehicle are wet or damp for an extended period of time, even though other parts of the vehicle are dry.
- Components of the vehicle which are prevented from quick-drying due to lack of proper ventilation are exposed to high temperature.

To help prevent corrosion on your Lexus, follow these guidelines:

Keep your vehicle clean by regular washing. In addition, observe the following points.

- If you drive on salted roads in the winter or if you live near the ocean, you should hose off the undercarriage at least once a month to minimize corrosion.
- High pressure water or steam is effective for cleaning the vehicle's underside and wheel housings. Pay particular attention to these areas as it is difficult to see all the mud and dirt. It will do more harm than good to simply wet the mud and debris without removing them. The lower edge of doors, rocker panels and frame members have drain holes which should not be allowed to clog with dirt as trapped water in these areas can cause corrosion.
- Wash the underside of the vehicle thoroughly when winter is over.

See "Washing and waxing" for more tips.

Check the condition of your vehicle's paint and trim. If you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through the bare metal, have a qualified body shop make the repair.

BODY

if the ventilation is poor.

Check the interior of your vehicle. Water and dirt can accumulate under the floor mats and could cause corrosion. Occasionally check under the mats to make sure the area is dry. Be particularly careful when transporting chemicals, cleansers, fertilizers, salt, etc. These should be transported in proper containers. If a spill or leak should occur, immediately clean and dry the area.

Use mud shields on your wheels. If you drive on salted or gravel roads, mud shields help protect your vehicle. Full–size shields, which come as near to the ground as possible, are the best. We recommend that the fittings and the area where the shields are installed be treated to resist corrosion. Your Lexus dealer will be happy to assist in supplying and installing the shields if they are recommended for your area.

Keep your vehicle in a well ventilated garage or a roofed place. Do not park your vehicle in a damp, poorly ventilated garage. If you wash your vehicle in the garage, or if you drive it in covered with water or snow, your garage may be so damp it will cause corrosion. Even if your garage is heated, a wet vehicle can corrode

WASHING AND WAXING

Washing your Lexus

Keep your vehicle clean by regular washing.

The following cases may cause weakness to the paint or corrosion to the body and parts. Wash your vehicle as soon as possible.

- When driving in a coastal area
- When driving on a road sprinkled with antifreeze
- When having stuck of coal tar, tree sap, bird droppings and carcass of an insect.
- When driving in the areas where there are a lot of smoke, soot, dust, iron dust and chemical substance
- When the vehicle becomes remarkably dirty with dust and mud

Hand-washing your Lexus

Work in the shade and wait until the vehicle body is not hot to the touch.

1. Rinse off loose dirt with a hose. Remove any mud or road salt from the underside of the vehicle or in the wheel wells.

2. Wash with a mild car–wash soap, mixed according to the manufacturer's instructions. Use a soft cotton mitt and keep it wet by dipping it frequently into the wash water. Do not rub hard – let the soap and water remove the dirt.

Aluminum wheels: Use only a mild soap or neutral detergent.

Urethane bumpers and side moldings: Wash carefully. Do not scrub with abrasive cleaners. The bumper and side molding faces are soft.

Road tar: Remove with turpentine or cleaners that are marked safe for painted surfaces.

NOTICE

Do not use gasoline or strong solvents, which may be toxic or cause damage.

3. Rinse thoroughly – dried soap can cause streaking. In hot weather you may need to rinse each section right after you wash it.

4. To prevent water spots, dry the vehicle using a clean soft cotton towel. Do not rub or press hard – you might scratch the paint.

Automatic car wash

NOTICE

To prevent damage to the antenna, make sure it is retracted before driving your vehicle through an automatic car wash.

Your vehicle may be washed in an automatic car wash, but remember that the paint can be scratched by some type of brushes, unfiltered washing water, or the washing process itself. Scratching reduces paint durability and gloss, especially on darker colors. The manager of the car wash should be able to advise you whether the process is safe for the paint on your vehicle.

Waxing your Lexus

Polishing and waxing is recommended to maintain the original beauty of your Lexus' finish.

Once a month or if the vehicle does not repel water well, apply wax.

1. Always wash and dry the vehicle before you begin waxing, even if you are using a combined cleaner and wax.

2. Use a good quality polish and wax. If the finish has become extremely weathered, use a car–cleaning polish, followed by a separate wax. Carefully follow the manufacturer's instructions and precautions. Be sure to polish and wax the chrome trim as well as the paint.

6

3. Wax the vehicle again when water does not bead but remains on the surface in large patches.

CLEANING THE INTERIOR

A CAUTION

Do not wash the vehicle floor with water, or allow water to get onto the floor when cleaning the vehicle interior or exterior. Water may get into audio components or other electrical components above or under the floor carpet (or mat) and cause a malfunction; and it may cause body corrosion.

Leather Interior

Remove dirt using a soft cloth dampened with 5 % solution of neutral detergent for wool. Then thoroughly wipe off all traces of detergent with a clean damp cloth.

After cleaning or whenever any part of the leather gets wet, dry with a soft clean cloth. Allow the leather to dry in a ventilated shaded area.

NOTICE

- If a stain should fail to come out with a neutral detergent, apply a cleaner that does not contain an organic solvent.
- Never use organic substances such as benzine, alcohol or gasoline, or alkaline or acid solutions for cleaning the leather as these could cause discoloring.
- Use of a nylon brush or synthetic fiber cloth, etc. may scratch the fine grained surface of the leather.
- Mildew may develop on soiled leather upholstery. Be especially careful to avoid oil spots. Try to keep your upholstery always clean.
- Long exposure to direct sunlight may cause the leather surface to harden and shrink. Keep your vehicle in a shaded area, especially in the summer.
- The interior of your vehicle is apt to heat up on hot summer days, so avoid placing on the upholstery items made of vinyl or plastic or containing wax as these tend to stick to leather when warm.
- Improper cleaning of the leather upholstery could result in discoloration or staining.

Synthetic Leather Areas (Part of door panels)

The synthetic leather areas may be easily cleaned with a mild soap or detergent and water.

First vacuum over the upholstery to remove loose dirt. Then, using a sponge or soft cloth, apply the soap solution to the synthetic leather. After allowing it to soak in for a few minutes to loosen the dirt, remove the dirt and wipe off the soap with a clean damp cloth. If all the dirt does not come off, repeat the procedure. Commercial foaming–type cleaners are also available which work well. Follow the manufacturer's instructions.

NOTICE

Do not use solvent, thinner, gasoline or window cleaner on the interior.

Carpets, Windows and Seat Belts

Begin by vacuuming thoroughly to remove as much dirt as possible. Several types of foam cleaners are available; some are in aerosol cans and others are powders or liquids which you mix with water to produce a foam. To shampoo the carpets, use a sponge or brush to apply the foam. Rub in overlapping circles. Do not apply water – the best results are obtained by keeping the carpet as dry as possible. Read the shampoo instructions and follow them closely.

The seat belts may be cleaned with mild soap and water or with lukewarm water.

Use a cloth or sponge. As you are cleaning, check the belts for excessive wear, fraying or cuts.

NOTICE

- Use a good foam-type shampoo to clean the carpets.
- Do not use dye or bleach on the belts it may weaken them.
- The windows may be cleaned with any household window cleaner.
- When cleaning the inside of the rear window, be careful not to scratch or damage the heater wires.

6

BODY

Air Conditioning Control Panel, Car Audio, Instrument Panel, Console Panel, and Switches

Use a soft damp cloth for cleaning.

Soak a clean soft cloth in water or lukewarm water then lightly wipe off any dirt.

NOTICE

- Do not use organic substances (solvents, kerosene, alcohol, gasoline, etc.) or alkaline or acidic solutions. These chemicals can cause discoloring, staining or peeling of the surface.
- If you use cleaners or polishing agents, make sure their ingredients do not include the substances mentioned above.
- If you use a liquid car freshener, do not spill the liquid onto the vehicle's interior surfaces. It may contain the ingredients mentioned above. Immediately clean any spill using the method mentioned above.

If you have any questions about the cleaning of your Lexus, your local Lexus dealer will be pleased to answer them.

SECTION 7

REPORTING SAFETY DEFECTS FOR U.S. OWNERS

REPORTING SAFETY DEFECTS FOR U.S. OWNERS

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Toyota Motor Sales, U.S.A., Inc. (Toll-free: 1–800–25–LEXUS).

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Toyota Motor Sales, U.S.A., Inc.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in Washington.D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington. D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.

INDEX

INDEX (A – C)

Α	Shift p Shiftin
"ABS" warning light 41	Auxiliar
Active height control suspension	Auxiliar
Adaptive variable suspension 195	
Adding washer fluid	
Adjustment	
Driver's seat lumbar support	Back do
Front seat cushion angle and height 74	Back do
Front seat position	Battery
Front seatback angle 73	Checki
Seat belts	Rechai
Airbags (SRS) 98	Winter
Aluminum wheel precautions	Before s
Antenna switch, Power 150	Belts
Antifreeze	Seat be
Anti–lock brake system 197	Brake sy
Anti-theft steering column lock 170	and buz
Appearance care	Brake pa
Cleaning the interior 304	Brakes
Protecting your Lexus from corrosion 301	Anti-l
Washing and waxing 302	Booste
Armrest	Brakin
Audio system 146	Fluid l
Automatic air conditioning controls 134	Pad we
Automatic transmission	Parkin
Driving with an automatic	Parkin
transmission 173	
Fluid temperature warning	
light 42	

Auxiliary boxes Auxiliary catch, Engine hood	
В	
Back door	18
Back door child–protector	20
Battery	
Checking battery condition 2	86
Recharging precautions 2	90
Winter driving tips 2	08
	70
Belts	
Seat belts	91
Brake system warning light	
and buzzer	39
Brake pad wear limit indicators 2	00
Brakes	
Anti-lock brake system 1	97
Booster 1	96
Braking tips 1	96
Fluid level 2	71
Pad wear limit indicators 2	00
Parking 1	71
Parking brake reminder light	39

Break-in period		205
Brightness control		. 44

С

(Carbon monoxide caution
(Cassette tape player 15
(Car audio operating tips 16
(Checking and replacing the blade type fuses
(Checking brake fluid
	Checking suspension fluid AHC 27
(Checking the cartridge type fuses 29
(Checking the engine oil level 26
(Child restraint 10
(Child restraint precautions 10
(Child–protector, Rear door 2
(Cigarette lighter and ashtray 5
(Cleaning the interior 30
(Clock
(Cold weather, Operation 20
(Compact disc player 15
(Converter, Three–way catalytic 16
(Consumer information
	Uniform tire quality grading 27
(Controls, Instrument panel Pictorial inde

INDEX (C – E)

Cooling system	
Coolant level	264
Engine overheating	224
Radiator and reservoir	264
Radiator cap	224
Winter driving tips	208
Corrosion prevention	301
Cruise control	184
Cup holders	56

D
Defogger, Rear window 27
Differential lock system 182
Dimmer switch, Headlight 4, 23
Directional signals 4, 23
Discharge warning light 43
Does your vehicle need repairing? 246
Do-it-yourself maintenance 250
Driver's seat
Driver's seat belt reminder light and
buzzer 40
Driving
Automatic transmission 173
Driving tips 203
Driving position memory system 127
Driving tips
Driving tips in various conditions 205
Driving with an automatic
transmission 173
Economical driving 217
Good braking practice 196
Good driving practice 179
Winter driving tips 208
During break-in

Economical driving	
Saving money on both fuel and	
repairs	217
Electrical system	
Battery 286.	290
Fuse locations	
Fuses 282, 291,	293
Spark plugs	257
Emergency flasher switch	
Emergency, in case of	
Blown fuse	292
Emergency flasher switch	32
Flat tire	225
If you lose your keys	239
	232
If your vehicle will not start	220
Jump starting	221
	224
Towing	232
0	

Е

INDEX (E – G)

Engine
Antifreeze 264
Before starting the engine 170
Checking the coolant level 264
Coolant temperature gauge 35
Emission control device 168
Engine compartment 249
Exhaust gas caution 169
Hood release 64
Oil consumption 260
Oil level 261
Overheating 224
Spark plugs 257
Starting procedure 172
Three–way catalytic converter
Engine coolant, Winter driving tips 208
Engine oil, Winter driving tips 208
Engine coolant temperature gauge 35
Exhaust gas caution 169

F	
Facts about engine oil consumption	260
Flasher, Headlight	4, 23
Flat tire	
After changing wheels	231
Changing tires	229
If you have a flat tire	225
Jack point	228
Jacking precautions	225
Jacking up	228
Loosening wheel nuts	228
Lowering vehicle	230
Reinstalling wheel ornament	231
Removing wheel ornament	227
Wheel block	227
Wheel nuts	228
Floor mat	. 59
Fluid level	
Brake	271
Engine coolant	264
Power steering	272
Washer fluid	294
Fog light switch	. 24
Foreign countries, Operation in	205
Four-wheel drive system	181
Front passenger's seat belt reminder	
light	. 40
Front seats	
Lumbar support	. 74

Position 73
Seat cushion angle and height 74
Seatback angle 73
Fuel
Filler door opener 65
Fuel economy 217
Fuel pump shut-off system 66
Fuel information 258
Gauge 35
MTBE 259
Operation in foreign countries 205
Tank cap 65
Fuse
Blade type fuses 291
Cartridge type fuses 293
Fuse locations 282
Fuse box

G

Garage door opener 55
Gas station information Inside back cover
Gauge
Engine coolant temperature 35
Fuel 35
Glovebox 54
Good driving practice 179

INDEX (H – L)

K

Н Headlight cleaner switch 27 Headlight switch 4, 22 High speed operation During break-in 205 Hood release, Engine 64 How to start the engine 172

Identification	Keys
Engine 248	Key reminder buzzer 43
Vehicle	
Ignition switch 170	L
Ignition switch light 50	L
Instrument panel	Light bulbs, Replacing 295
Brightness control 44	Lock
Cigarette lighter and ashtray 51	Side doors 16
Clock 50	Steering column
Fuel gauge 35	Low fuel level warning light
Odometer 38	Low washer fluid warning light
Tachometer 37	Lower vent
Trip meter 38	Luggage stowage precautions
Twin trip meter 38	Luggage stowage precautions 01
Inside rear view mirror	
Instrument panel light control 44	
Instrument panel overview Pictorial index	
Interior lights	

Ι

J	
Jack, location	226
Jump starting	221

INDEX (M – Q)

М	0	Р
Maintenance250Do-it-yourself maintenance246Does your vehicle need repairing?246General maintenance243Maintenance requirements242Parts and tools251Where to go for service?242	Odometer38Off-road driving precautions207Off-road vehicle precautions204Oil261Checking the engine oil260Power steering272	Parking brakeOperation171Reminder light39Parts251Personal lights49Polishing302Power door locks17
Malfunction indicator lamp 41 Maximum allowable speed 178 Mirrors 90 Anti-glare inside rear view 90 Folding rear view 89 Outside rear view 88 Demonstration 88	Pressure gauge 36 Viscosity and grade 263 Open door warning light 42 Opener 65 Fuel filler door 65 Operation in foreign countries 205 Octained accountries 88	Power outlets53Power quarter window switch31Power rear view mirror control88Power steering fluid level272Power window switches29Protecting your Lexus from corrosion301
Power rear view 88 Vanity 47 Moon roof 67 MTBE 259 N 1	Outside rear view mirrors 88 Outside rear view mirror defogger 28 switch 28 Outside temperature display 51 Overheating, Engine 224 Overview Engine compartment 249	Quick index Back cover

INDEX (R – S)

S
Safety
Reporting safety defects
for U.S. owners
Scrapping of your vehicle Introduction
Seats, Seat adjustments 72
Seat belt extender
Seat belts
Cleaning 305
Fastening 92
Seat belt precautions 91
Seat heater switches 33
Service and maintenance 242
Service reminder indicators 38
Side door locks 16
Side vents 142
Spare tire
Spark plugs 265
Specifications
Body 300
Chassis
Electrical component 282, 282
Engine 256, 257
SRS airbags 98
SRS warning light 41
Starting
Cold weather 208
Engine 172
Jump starting 221

Steering
Column lock 170
Telescopic steering column
Tilt steering wheel 86
Suspension and chassis 280
Switch
Emergency flasher 32
Headlight 4, 22
Headlight dimmer and turn signal 23
Ignition 170
Rear window defogger 27
Wiper and washer 25, 26

INDEX (T - W)

Т	
Tachometer	37 Unengaged
Theft deterrent system	30
Theft prevention labels 1	32
Tie–down hooks	60
Tilt and telescopic and steering wheel	86 Vanity mirro
Tires	Voltmeter .
Chains	278
Changing 2	229
Flat tire	225
Inflation	274
Rotation	275 Warning buz
Snow	Washer fluid
Spare	226 Washing and
Tire information	Wheels, Alu
Types	200 Wiper and w
Uniform tire quality grading	Winter drivi
Tools	251 Wireless ren
Towing	
Emergency towing 2	236
If your vehicle needs to be towed 2	232
Trailer	209
Trailer towing	209
Transporting your Lexus by flat bed 2	234
Trip meter	38
Turn signals	23
Twin trip meter	38
Types of tires	200

Unengaged "Park" warning light	42
V	
Vanity mirrors	47
Voltmeter	37

W

U

Warning buzzers
Washer fluid, Adding 294
Washing and waxing 302
Wheels, Aluminum 280
Wiper and washer switch 25, 26
Winter driving tips 208
Wireless remote control

WE REALLY CARE ABOUT YOU – PLEASE BUCKLE UP

Lexus has made a special effort to encourage use of seat belts.

Lexus belts are:

- Comfortable
- Easy to use
- Convenient

We encourage you to use your belts every time you drive.



You should know as much about the quality and importance of proper maintenance of your new vehicle as the people who built it.

The Lexus authorized Repair Manual tells you how to maintain your vehicle and enables you to correctly perform your own maintenance.

> The best way to keep your new vehicle in top running order is to maintain it properly from the moment you drive it off the showroom floor.

> The Lexus authorized Repair Manual is packed with literally everything you need to know to perform your own maintenance in virtually every area of your new vehicle.

Maintenance procedures for the engine, chassis, body, electrical system, and more, are clearly explained and illustrated.

Periodic maintenance and tune-up

Periodic maintenance and tune–up helps to prevent small problems from growing into larger ones later on. The repair manual outlines exactly what maintenance is required, provides a schedule for its performance, and clearly explains how to do the work yourself step–by–step.

Areas covered include such things as spark plug replacement, valve clearance adjustment and engine oil and filter replacement.

Where to obtain the Repair Manual

The repair manual for LX470, written in English, may bepurchased as applicable from any Lexus dealer.Pub. Name:1998 LX470 Repair ManualPub. No.:Vol. 1 RM620U1Vol. 2 RM620U2

GAS STATION INFORMATION

• Fuel selection:

Select premium unleaded gasoline with an Octane Rating of 91 (Research Octane Number 96) or higher for optimum engine performance. However, if such premium type cannot be obtained, you may temporarily use unleaded gasoline with an Octane Rating as low as 87 (Research Octane Number 91).

• Fuel tank capacity:

96 L (25.3 gal., 21.1 lmp.gal.)

• Engine oil:

API SH, "Energy–Conserving II" or SJ, "Energy–Conserving" multigrade engine oil or ILSAC multigrade engine oil.

Recommended oil viscosity – SAE 5W–30 if normal temperatures are below 38°C (100°F)

Oil capacity: L (qt., lmp.qt.) Drain and refill with filter 6.8 (7.2, 6.0) without filter 6.4 (6.8, 5.6) See page 261 for detailed information.

• Engine coolant:

Capacity: L (qt., lmp.qt.) 15.3 (16.2, 13.5)

Coolant type – Ethylene – glycol coolant (Do not use alcohol coolant.)

• Automatic transmission:

Fluid type – Automatic transmission fluid D–II or DEXRON[®]III (DEXRON[®]II)

- **Tire information:** See page 274 through 280 for detailed information.
- Tire pressure: Tire size: P275/70R16 114S

		cold tires
		kPa (kgf/cm ² or bar, psi)
		Vehicle loaded up
	Vehicle load up	to vehicle capacity
	to 4 occupants	weight
Front tires .	220 (2.2, 32) .	220 (2.2, 32)
Rear tires	220 (2.2, 32)	220 (2.2, 32)

For sustained high speeds above 160 km/h (100 mph), in countries where such speeds are permitted by law, add 80 kPa (0.9 kgf/cm², 0.8 bar, 12 psi) to the front tires and rear tires, but never exceed the maximum cold tire pressure molded on the tire sidewall.

LX470 (U)

Quick index

• If a service reminder indicator or warning buzzer comes on	38
• If your vehicle will not start 2	20
• If your vehicle overheats 2	24
• If you have a flat tire	25
• If your vehicle needs to be towed 2	32
Tips for driving during break-in period 2	05
• How to start the engine 1	72
General maintenance	43
Complete index	08

© 1998 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.

 Publication No. OM60759U

 Part No. 01999–60759

 Printed in Japan 01–9801–00 [C]

 LX470 (北米U)

3U-1



LX470 (U)